
# RADIATOR UPPER SUPPORT (ASSY)

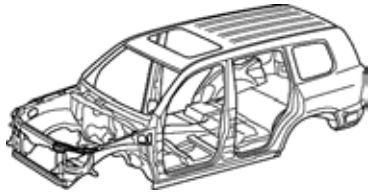


F29651A

Symbol meaning

| | |
|---|---|
| REMOVAL | ▲ : Remove Weld Points |
| INSTALLATION | ● : Plug Weld |

F29201B

**REMOVAL·INSTALLATION**

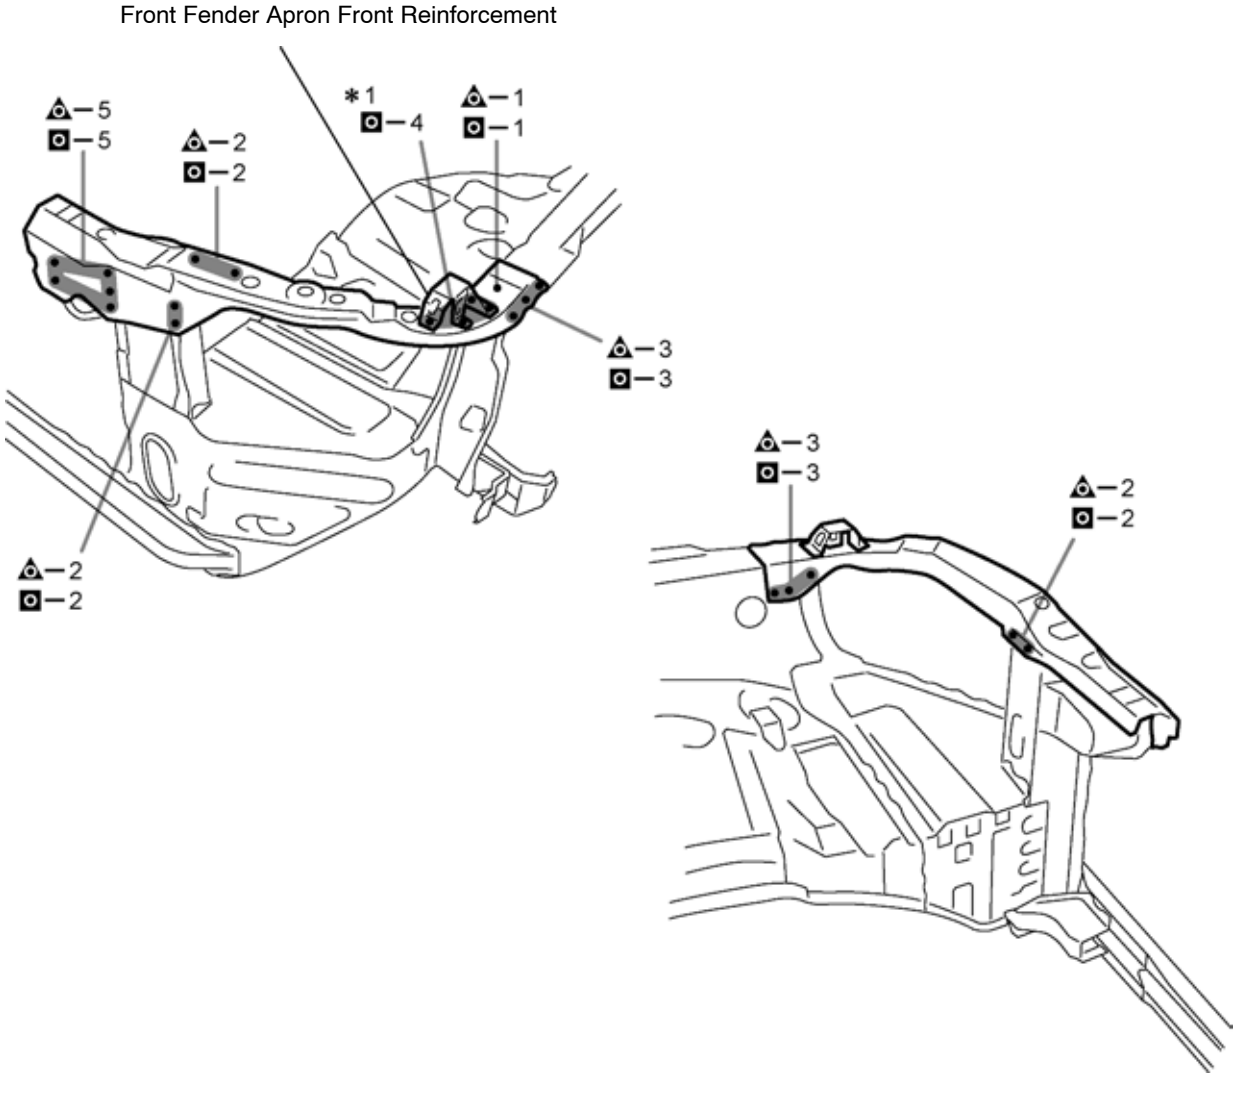



F29651

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# RADIATOR SIDE SUPPORT (ASSY)

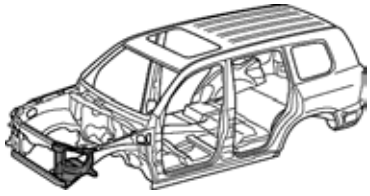


F29652A

Symbol meaning

| | |
|---|---|
| REMOVAL | : Remove Weld Points |
| INSTALLATION | : Plug Weld |

F29202B

**REMOVAL·INSTALLATION**

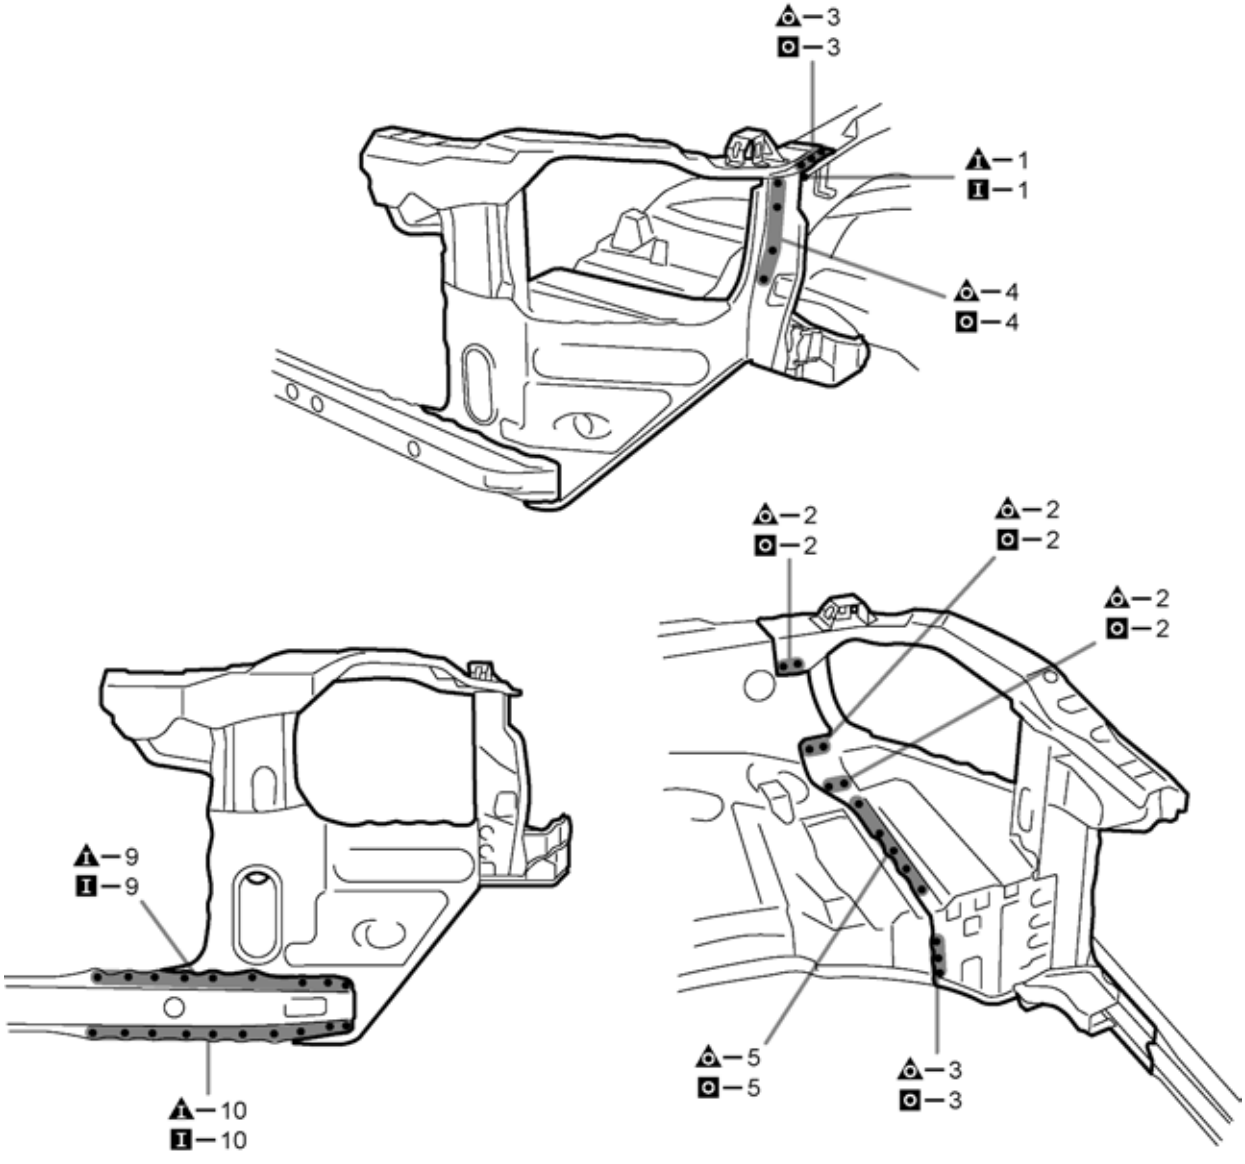



F29652

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# FRONT CROSSMEMBER (ASSY)

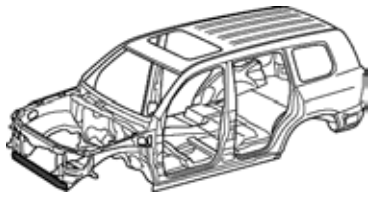


F29653A

Symbol meaning

| | |
|---|---|
| REMOVAL | : Remove Weld Points |
| INSTALLATION | : Plug Weld |

F29203B

**REMOVAL·INSTALLATION**

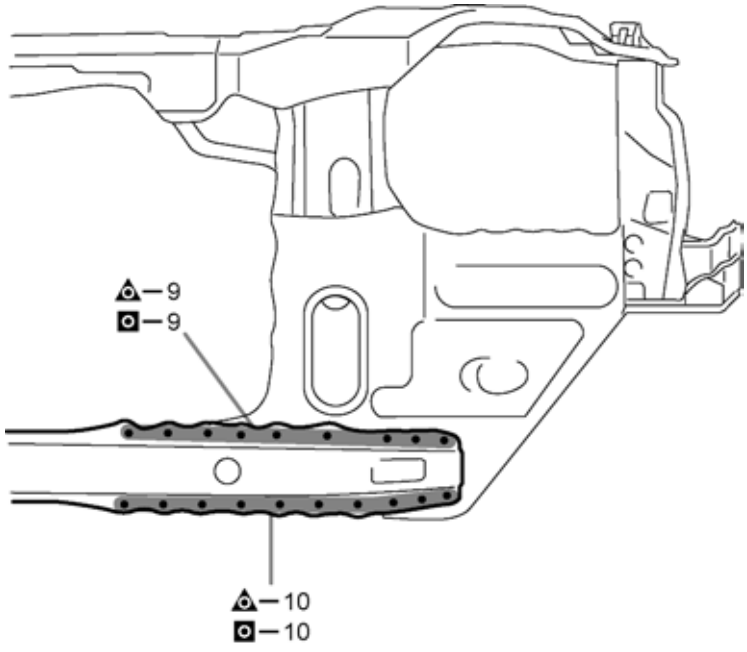



F29653

**INSTALLATION POINT**

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# RADIATOR SUPPORT (ASSY)

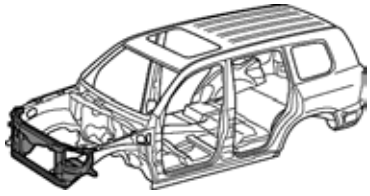


F29654A

Symbol meaning

| | |
|---|---|
| REMOVAL | : Remove Weld Points |
| INSTALLATION | : Plug Weld |

F29204B

**REMOVAL·INSTALLATION**

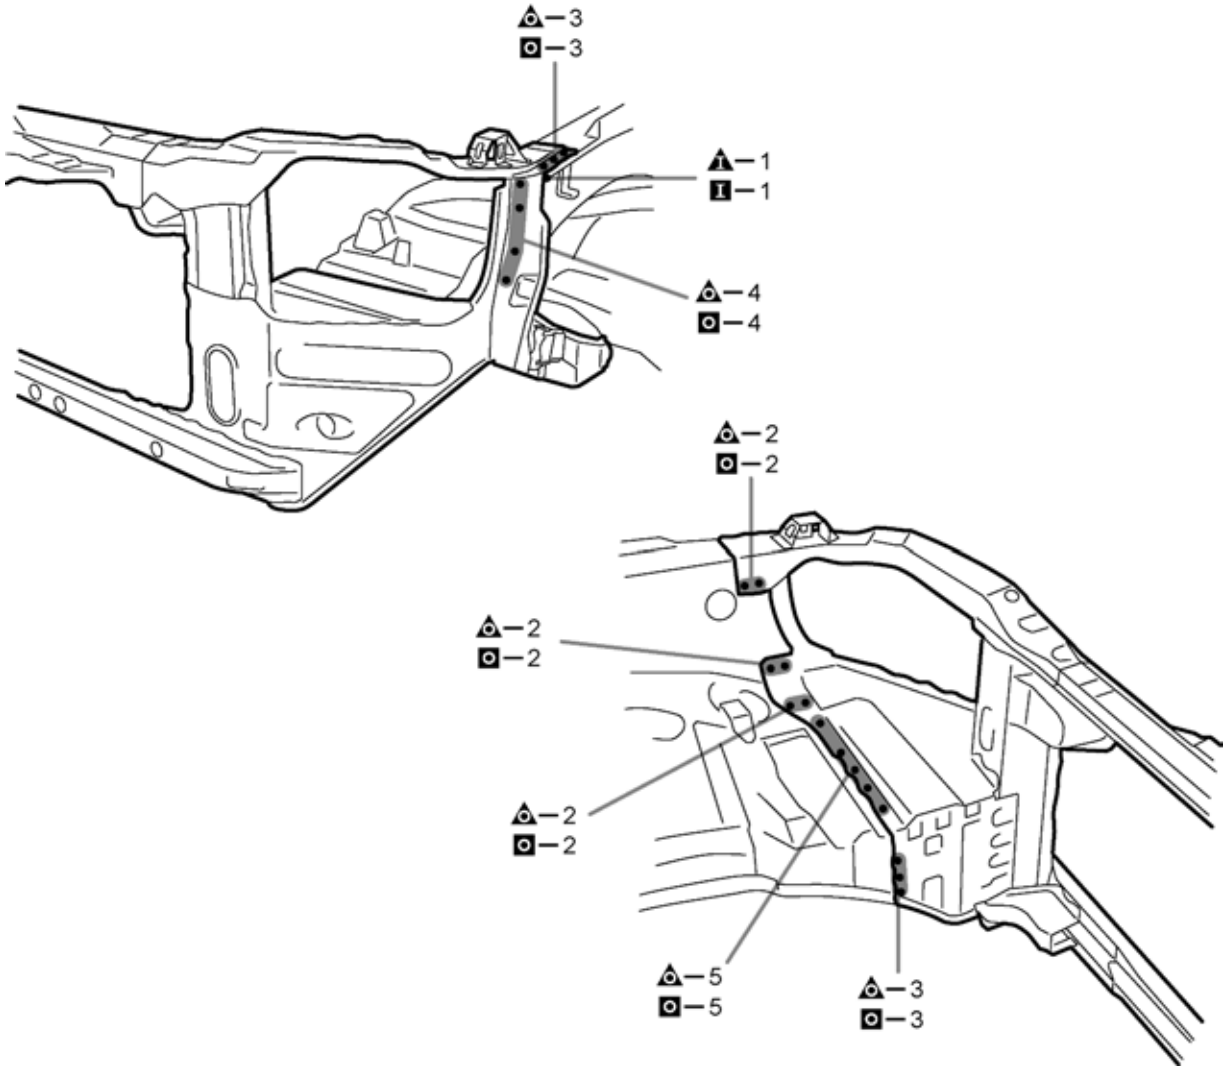



F29654

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

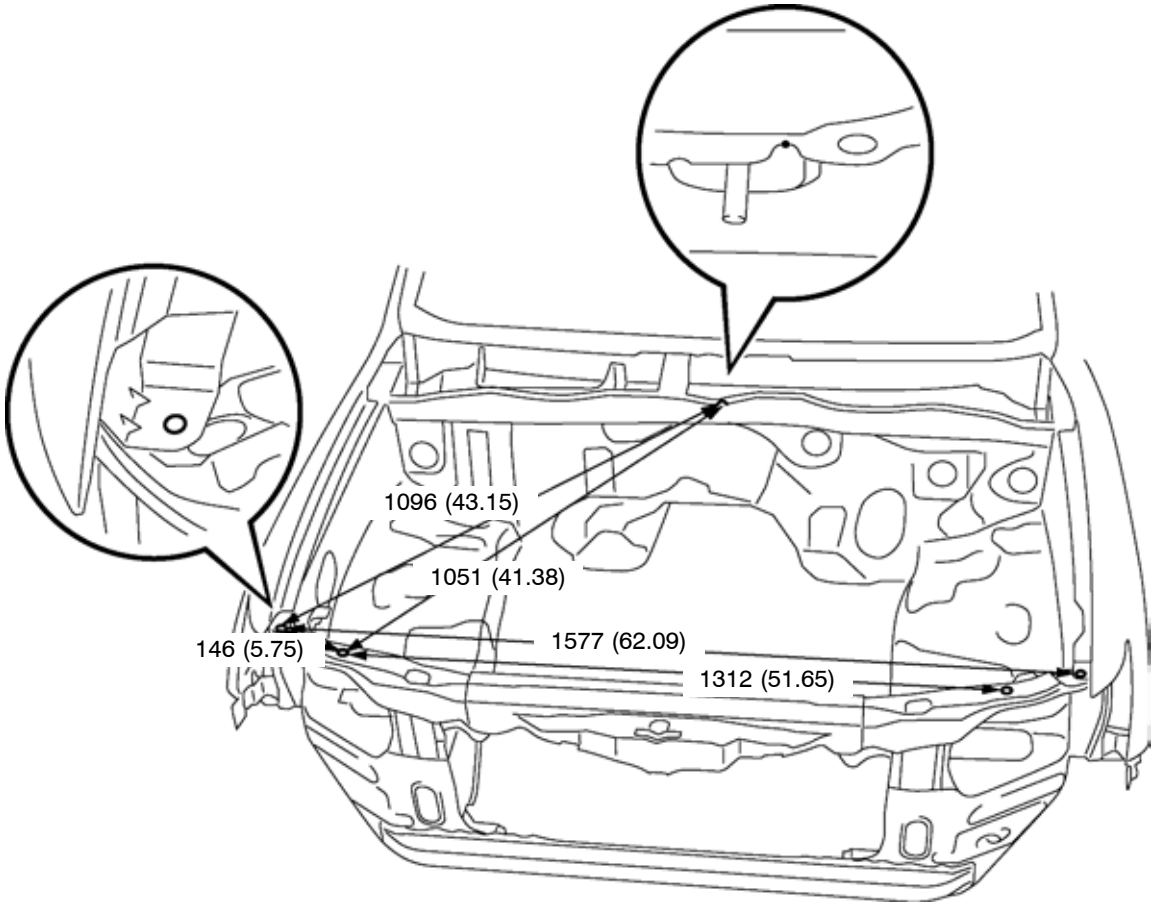



mm (in.)

F29655

**INSTALLATION POINT**

1 Measure the dimensions before installing the headlights.
2 These values are reference values.

# FRONT FENDER APRON (ASSY)

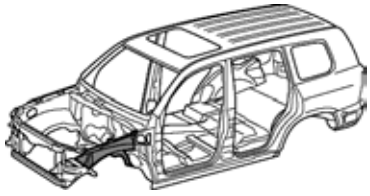

F29655A


With the radiator side support and cowl top side panel removed.

Symbol meaning

| | |
|---|---|
| REMOVAL | : Remove Weld Points |
| INSTALLATION | : Plug Weld |

F29206B

**REMOVAL·INSTALLATION**

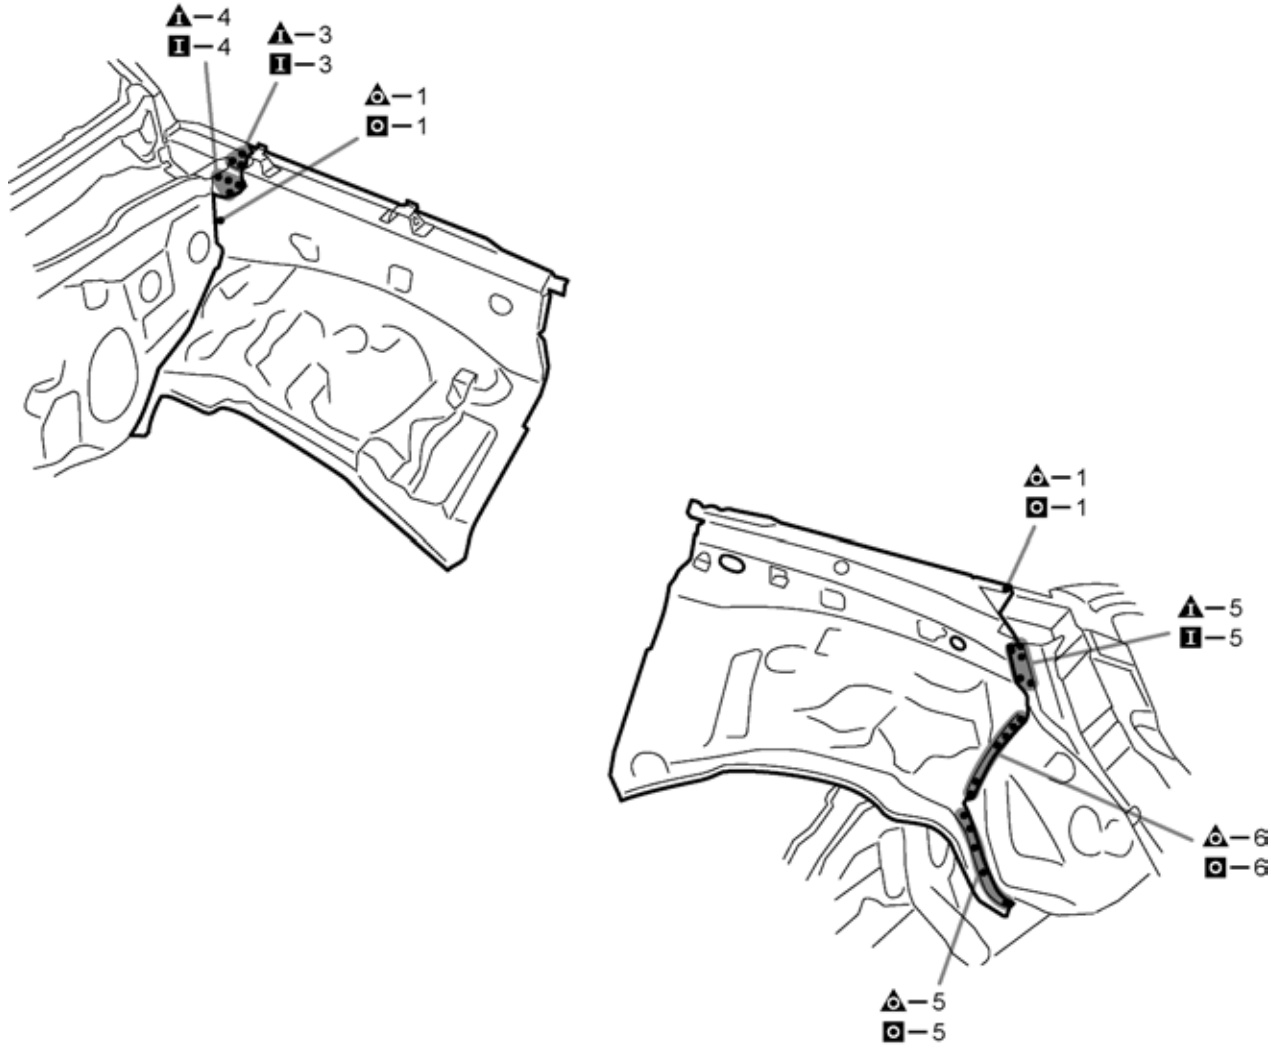



F29656

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# COWL TOP SIDE PANEL (ASSY)

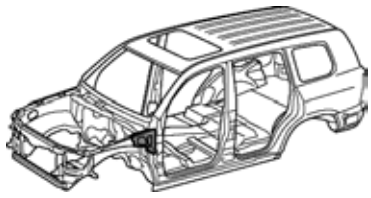


F29656A

Symbol meaning

| | |
|---|---|
| REMOVAL | : Remove Weld Points |
| INSTALLATION | : Plug Weld |

F29207B

**REMOVAL·INSTALLATION**

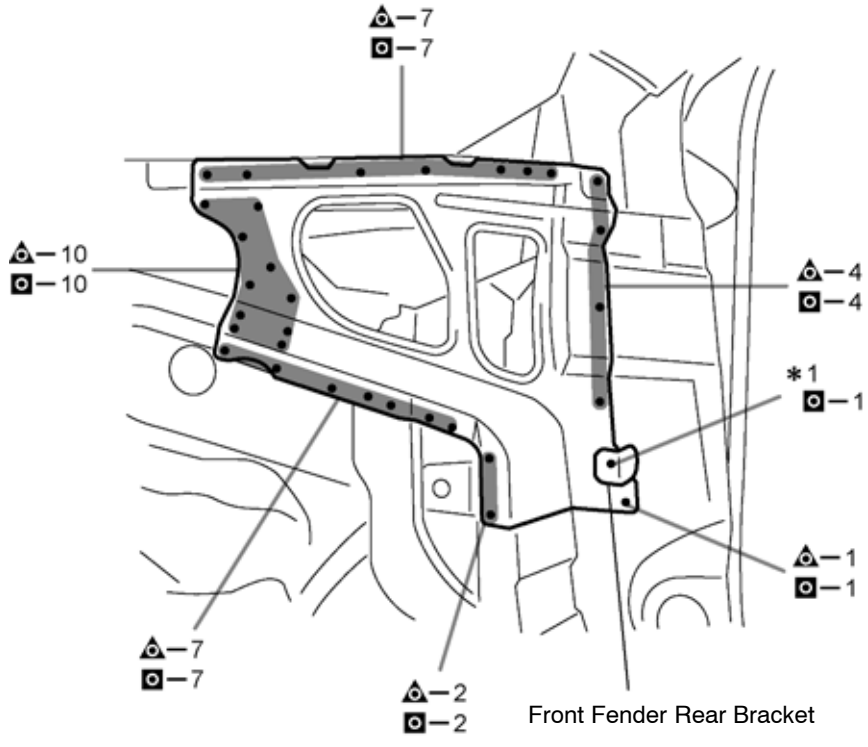



F29207

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 *1 is only for installation.
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# FRONT BODY PILLAR (CUT)

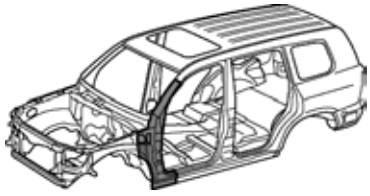

F29657A

With the cowl top side panel removed.


Symbol meaning

: Remove Weld Points : Cut and Join Location

: Cut Location for Supply Parts

F29208B

**REMOVAL**

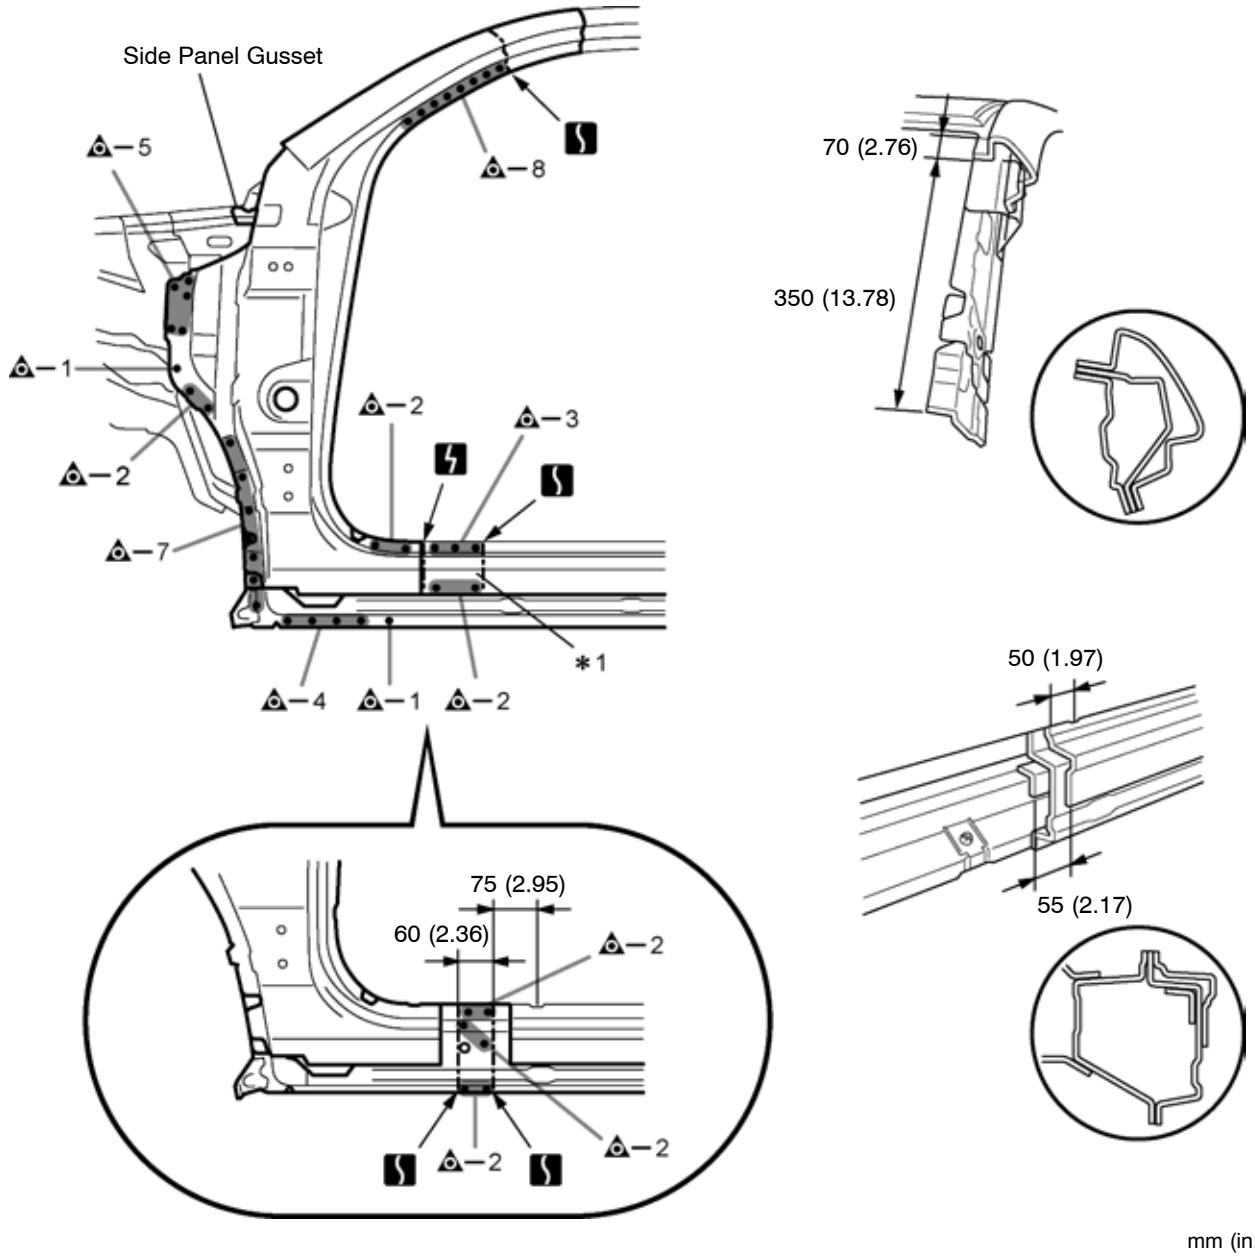



mm (in.)

F29208

**REMOVAL POINT**

1 Reuse *1, as the area of the outer panel that is cut and joined is to the rear of the supplied part cut position.

2 Remove the side panel gusset at the same time.

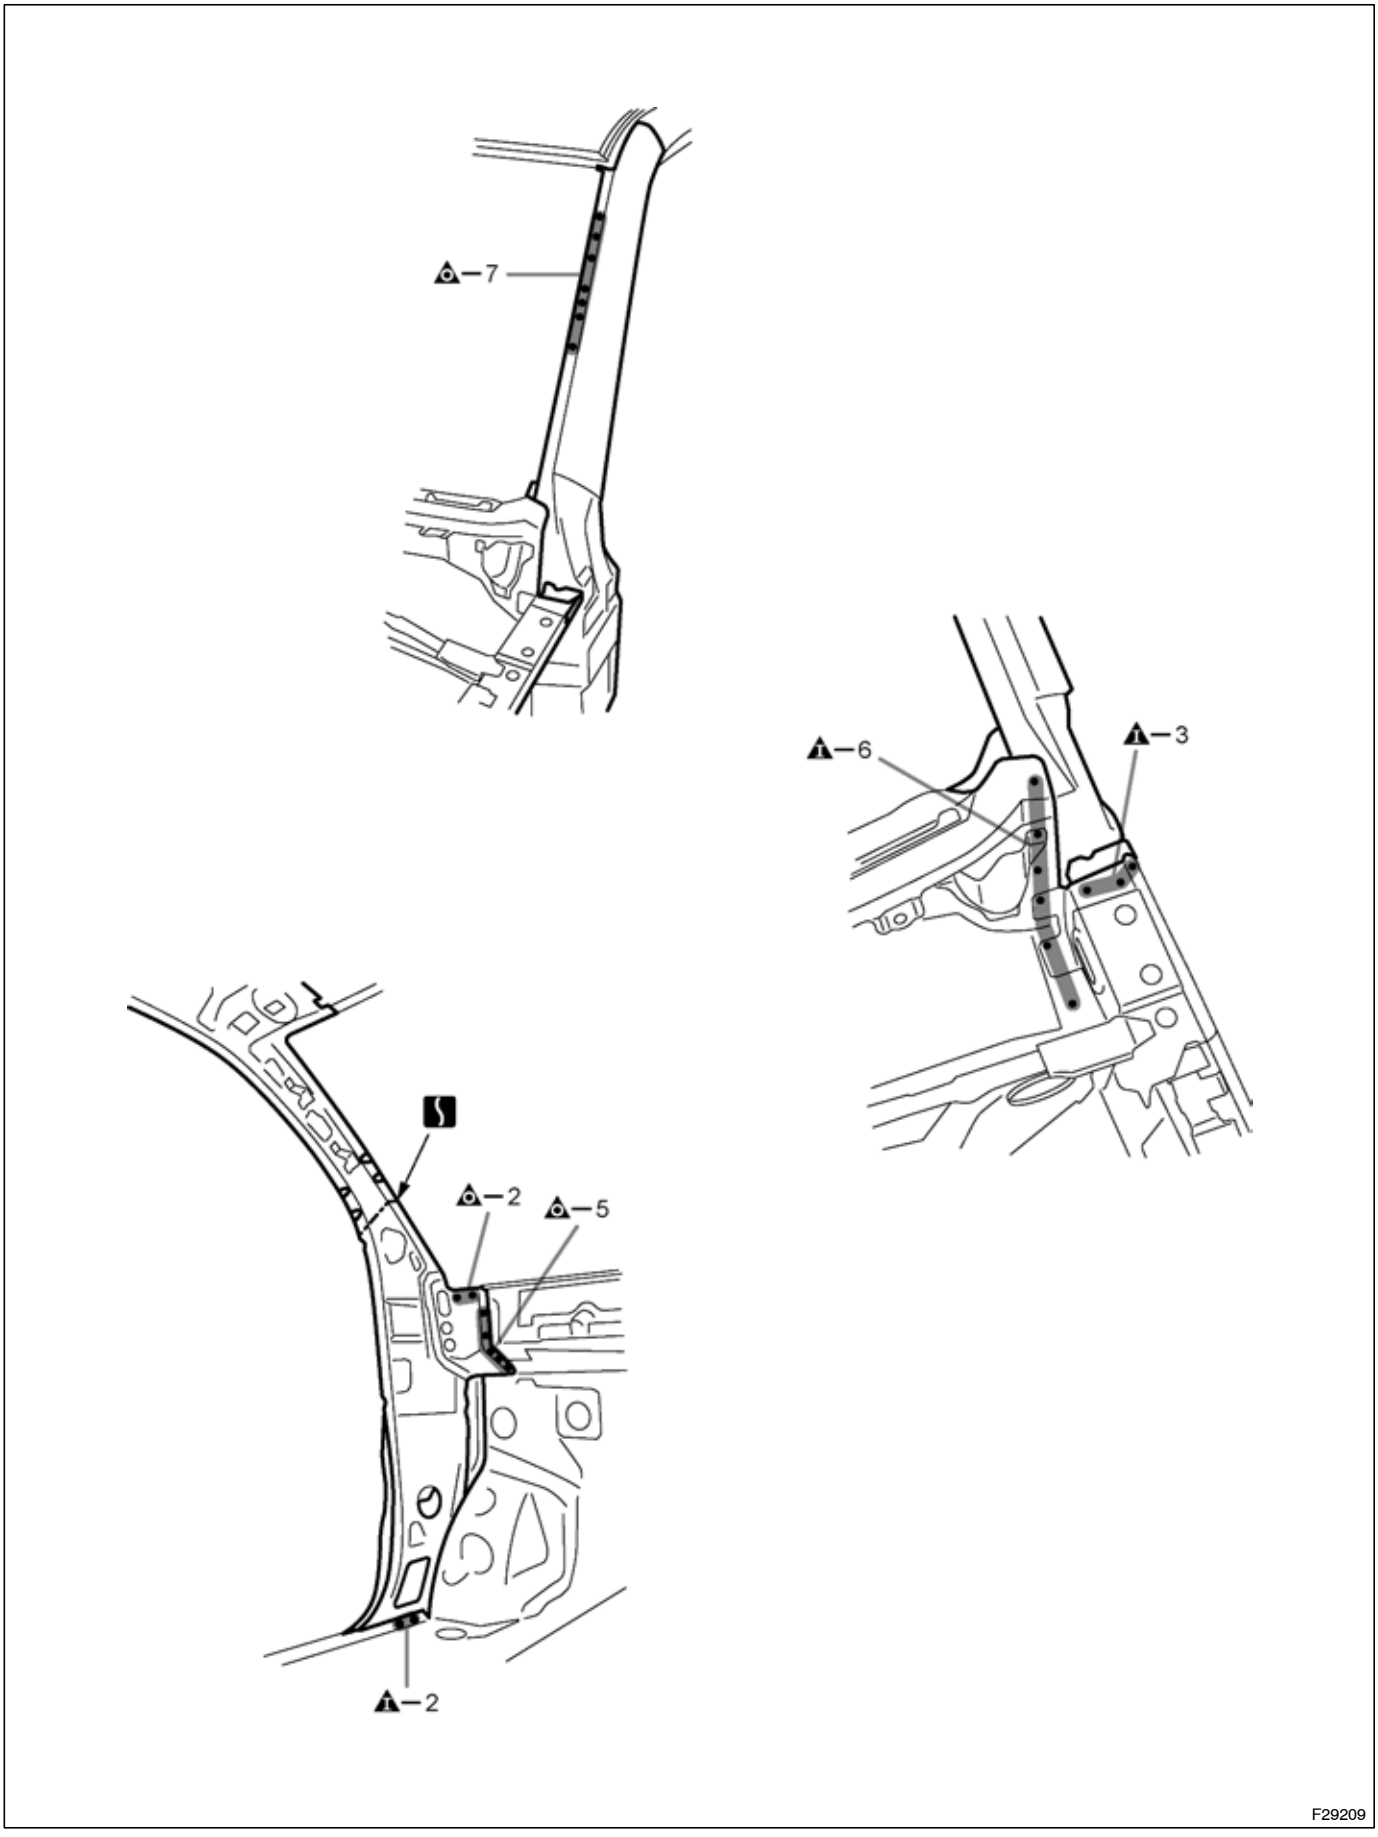
7
6
3
2
5
2
F29209


Symbol meaning


: Remove Weld Points : Spot Weld : Plug Weld : Cut and Join Location


: Butt Weld : Body Sealer

F29210B

## INSTALLATION

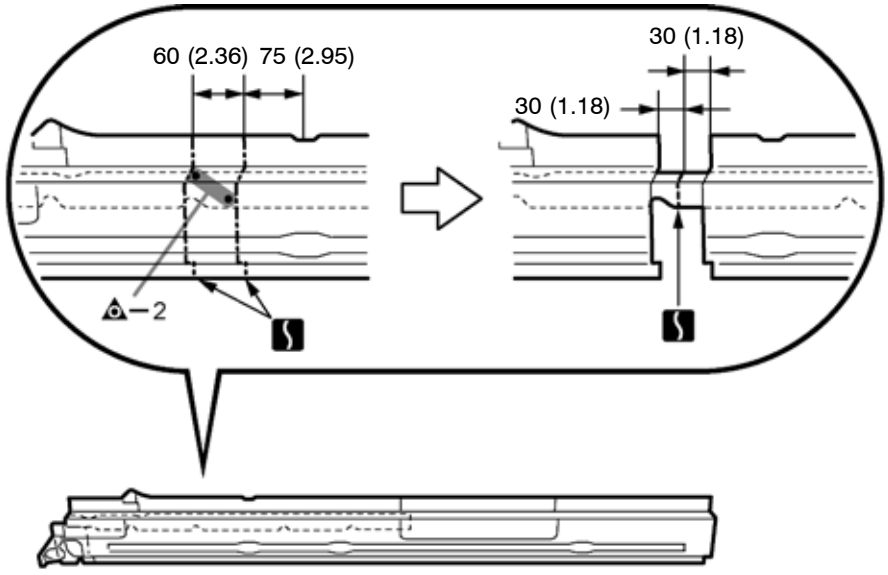


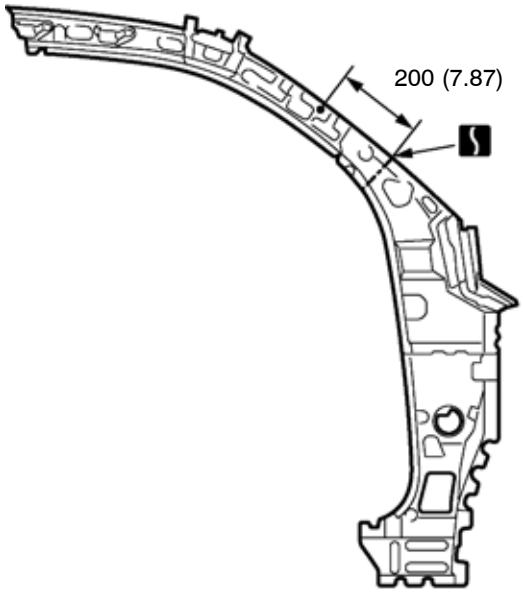
mm (in.)

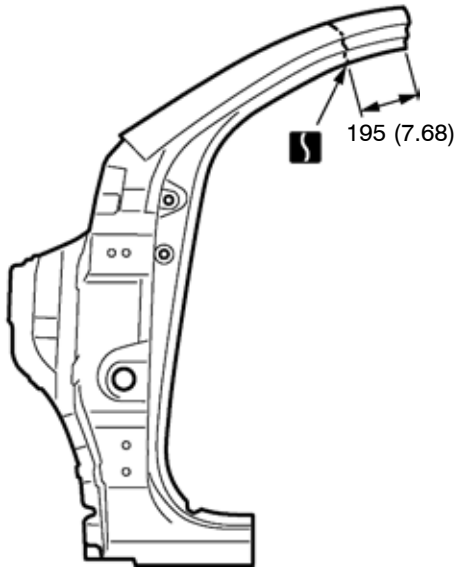F29210




F29211

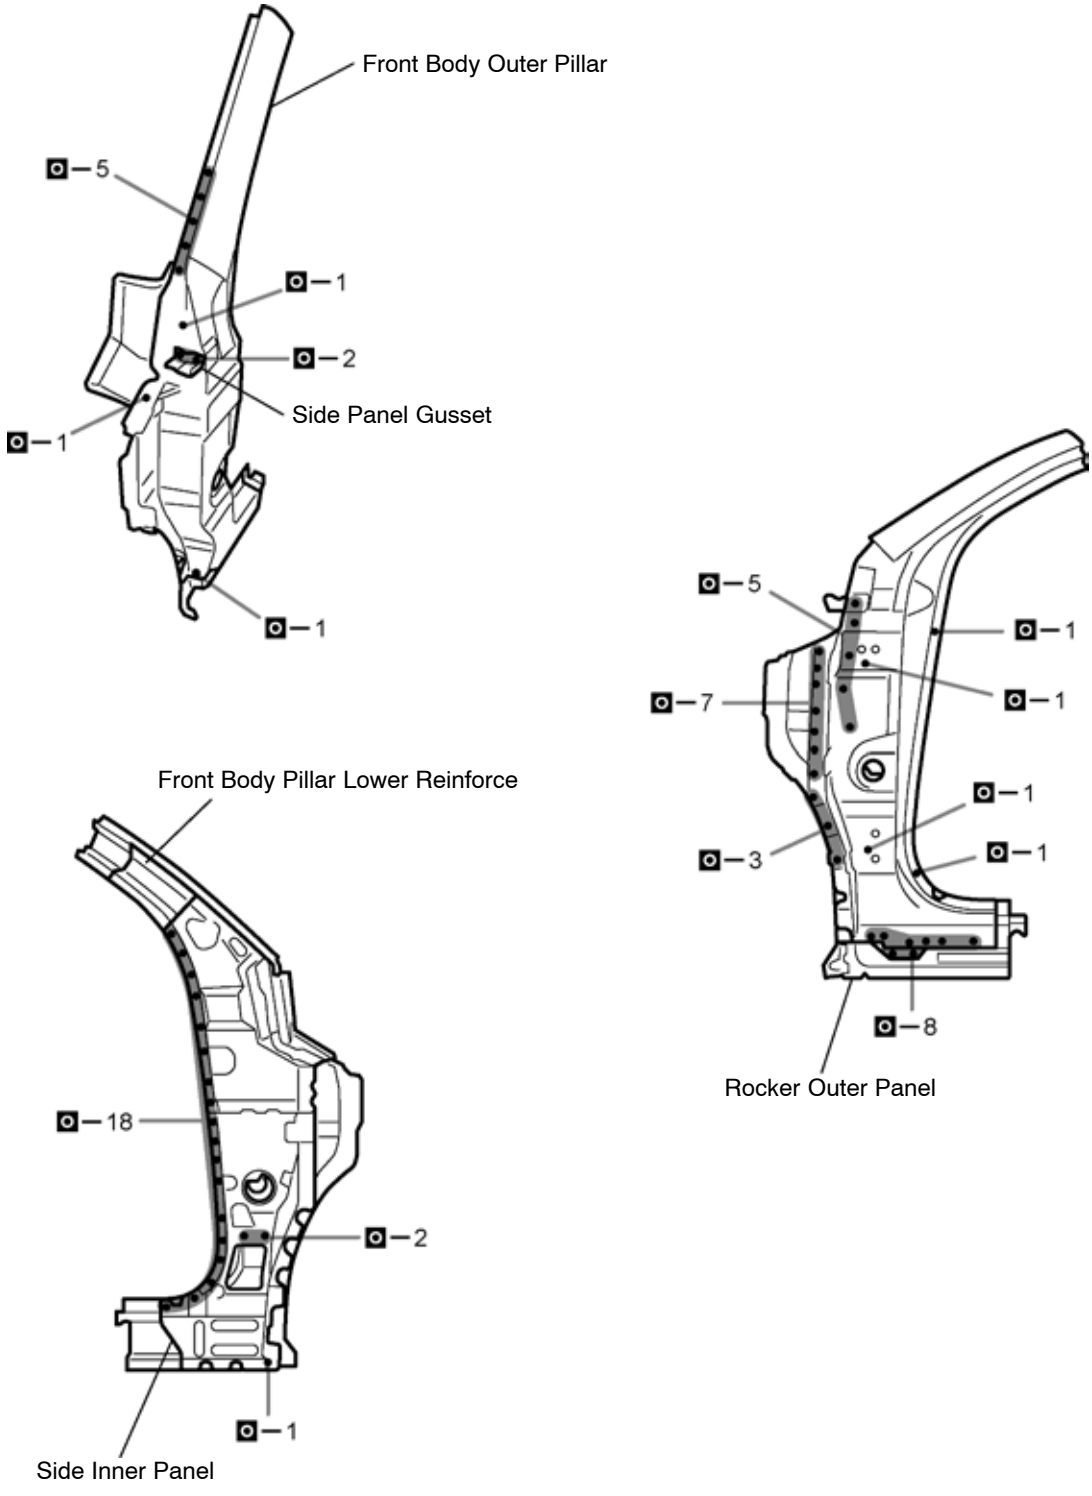**INSTALLATION POINT**


1 Before temporarily installing the new parts, weld the rocker outer panel, front body pillar lower reinforce, side inner panel, front body outer pillar and side panel gusset with the standard number of welding points.

Symbol meaning

: Remove Weld Points : Spot Weld : Plug Weld : Cut and Join Location

: Butt Weld : Body Sealer

F29210B

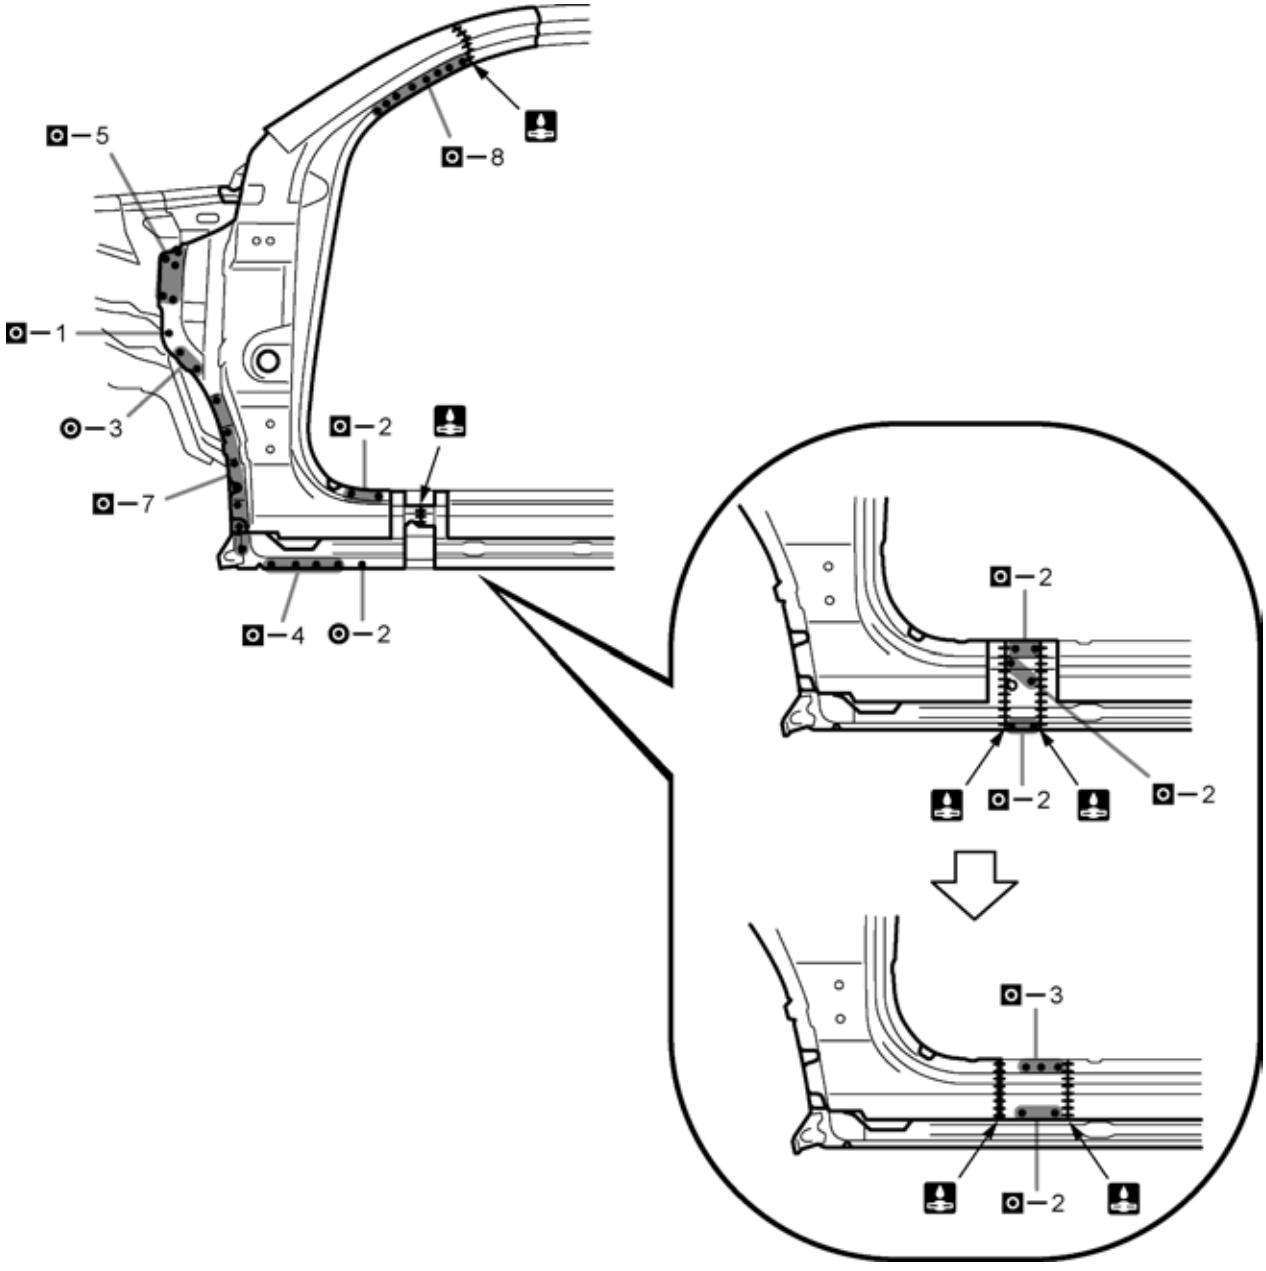



F29212

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.


2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

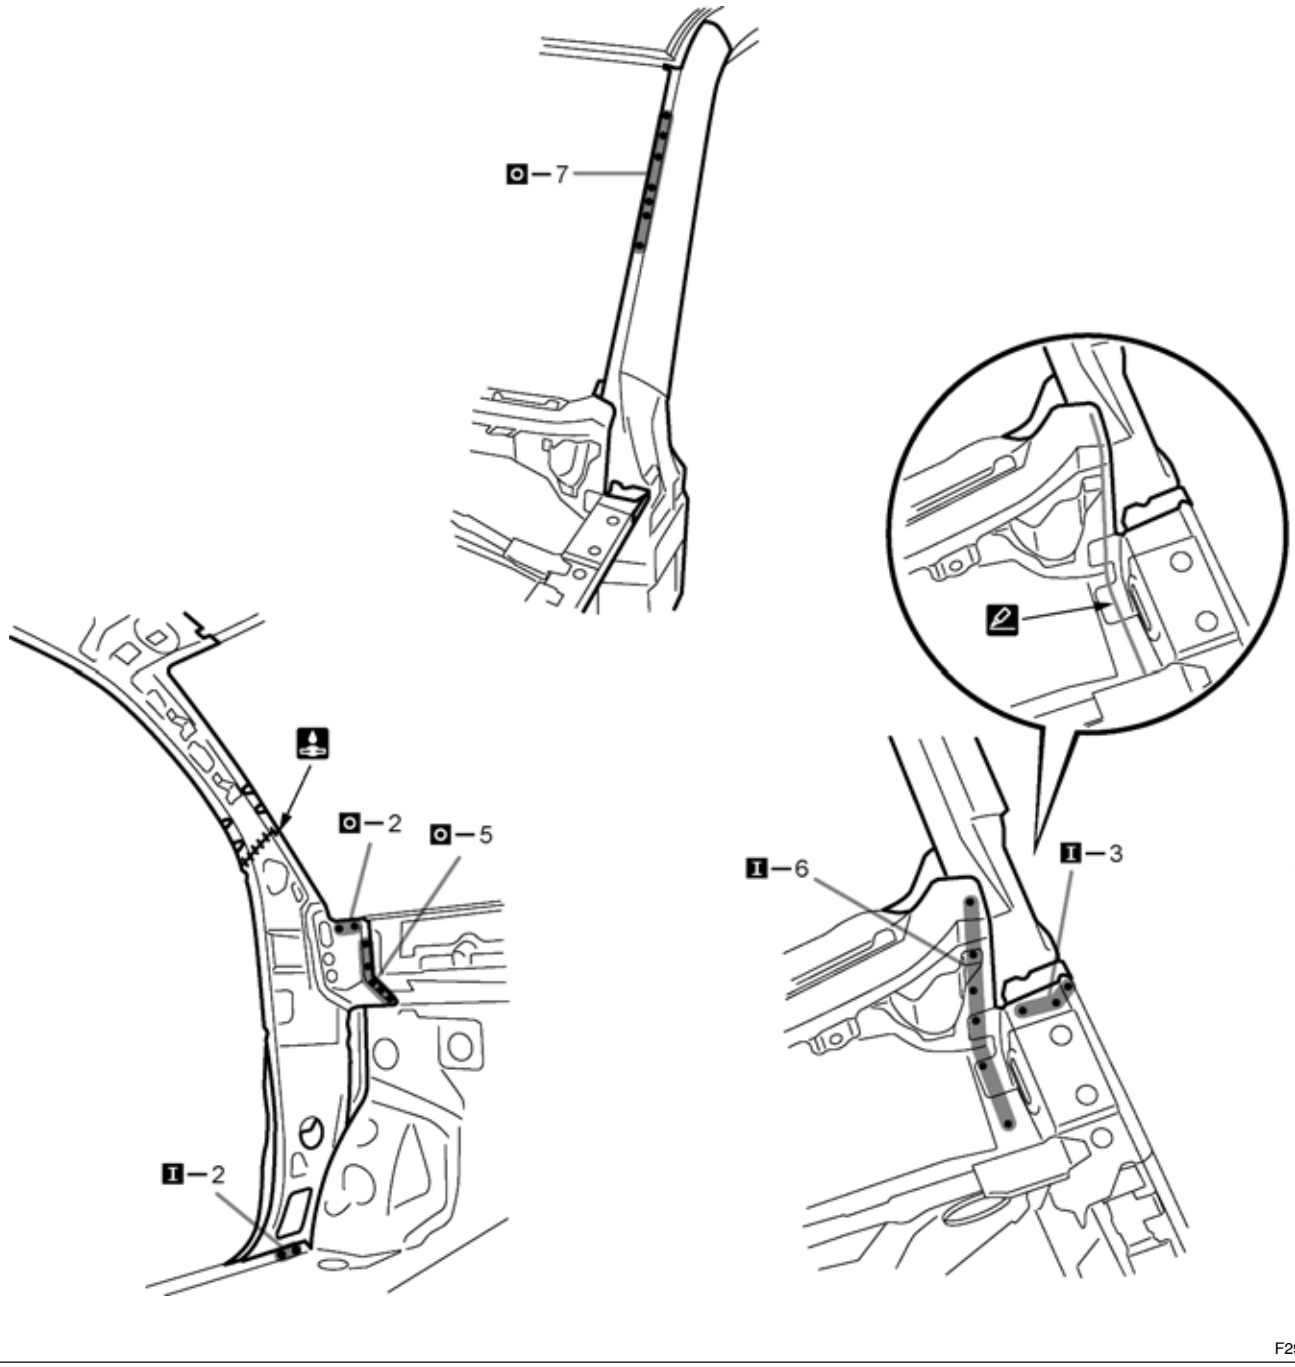


**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 Before installing a new part, apply body sealer.
*HINT:*
*Apply sealer in an even, continuous bead.*
4 After welding, apply the foamed sealing material to the corresponding parts. (See the paint·coating)
5 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
6 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# CENTER BODY PILLAR (CUT)

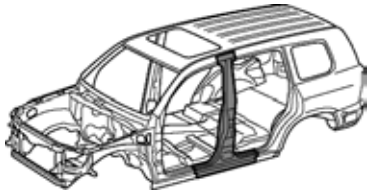

F29658A


Symbol meaning


: Remove Weld Points : Cut and Join Location

: Cut Location for Supply Parts

F29214B

**REMOVAL**

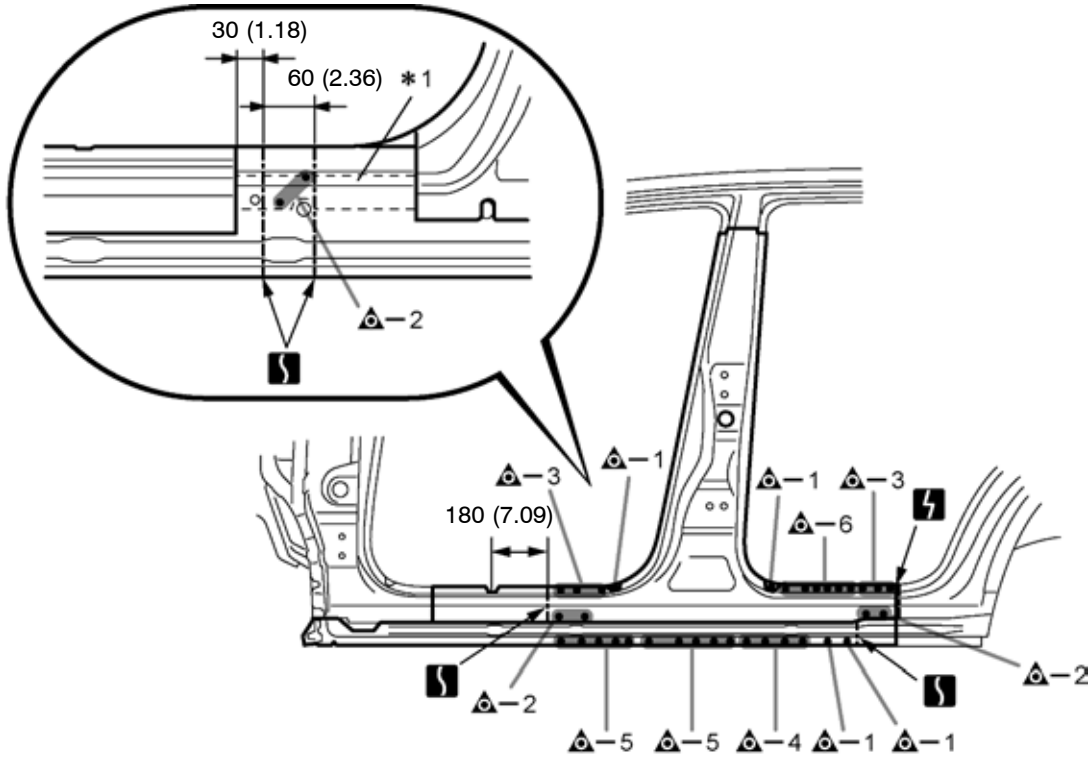

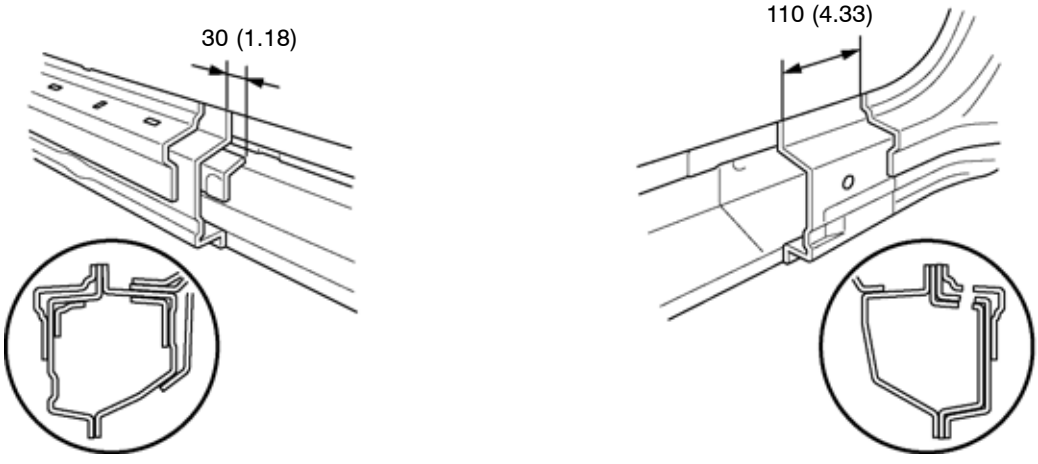



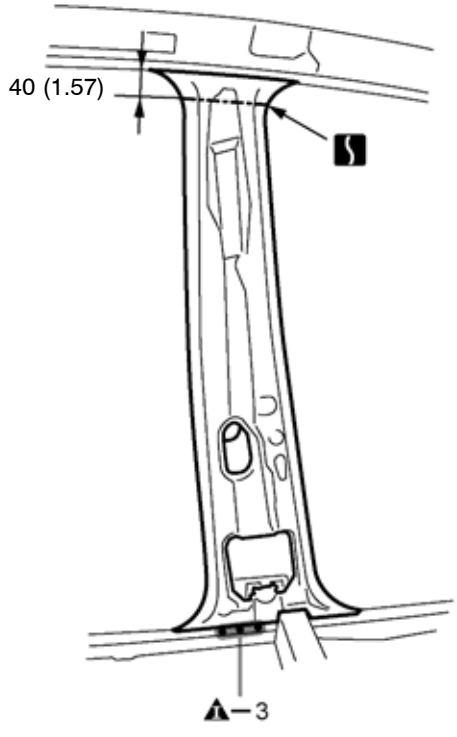

mm (in.)

F29214

**REMOVAL POINT**

1 Carefully cut the rocker outer panel so not to damage *1.

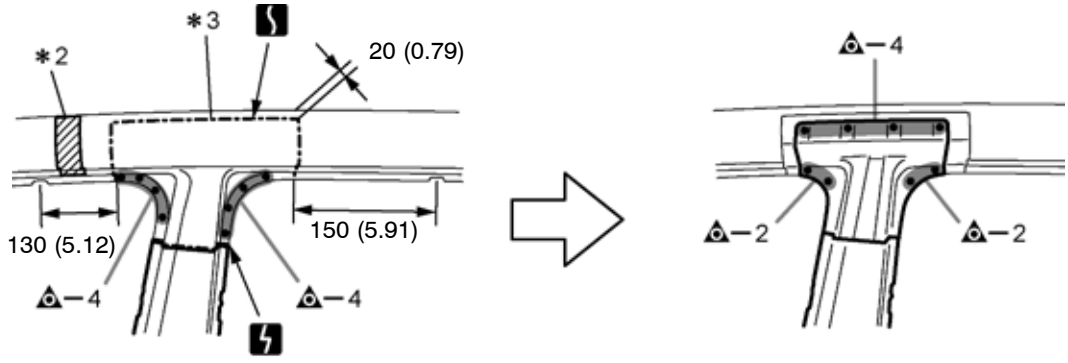


mm (in.)

F29215

**REMOVAL POINT**

1 *2 indicates the location of the foamed sealing material. Be careful when cutting as the foamed sealing material is located near the cutting position.

2 *3 is reused.


Symbol meaning

: Remove Weld Points : Spot Weld : Plug Weld : Cut and Join Location

: Butt Weld

F29216B


## INSTALLATION

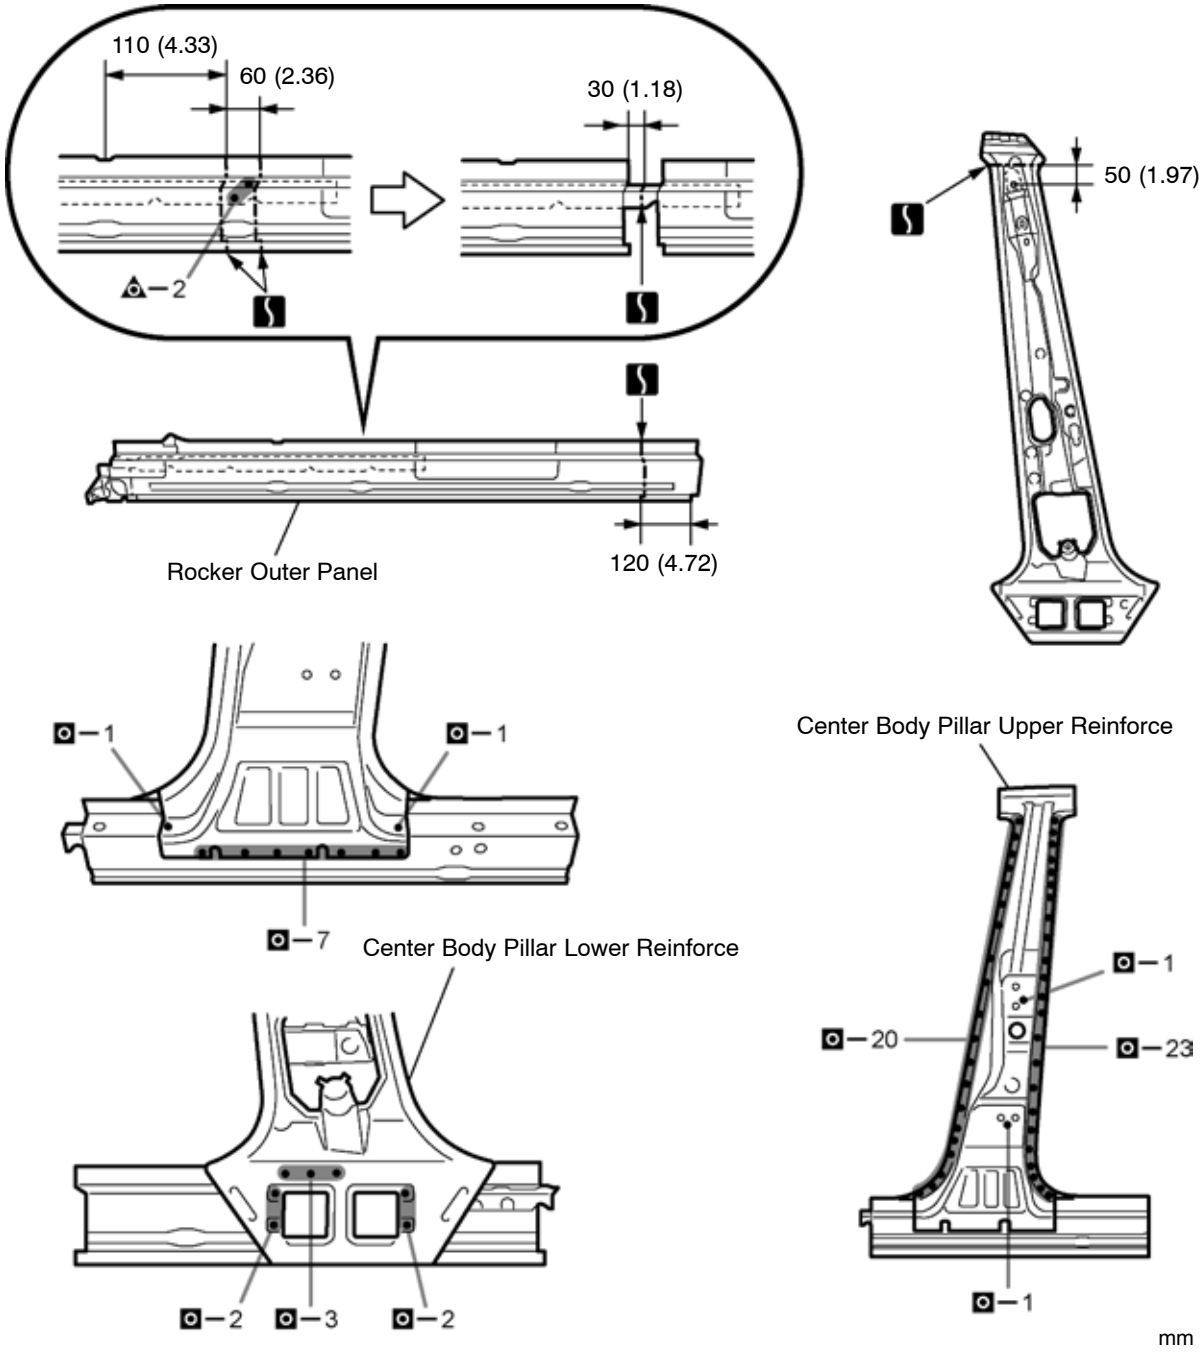


F29216

### INSTALLATION POINT

1 Before temporarily installing the new parts, weld the rocker outer panel, center body pillar upper reinforce and center body pillar lower reinforce with the standard number of welding points.

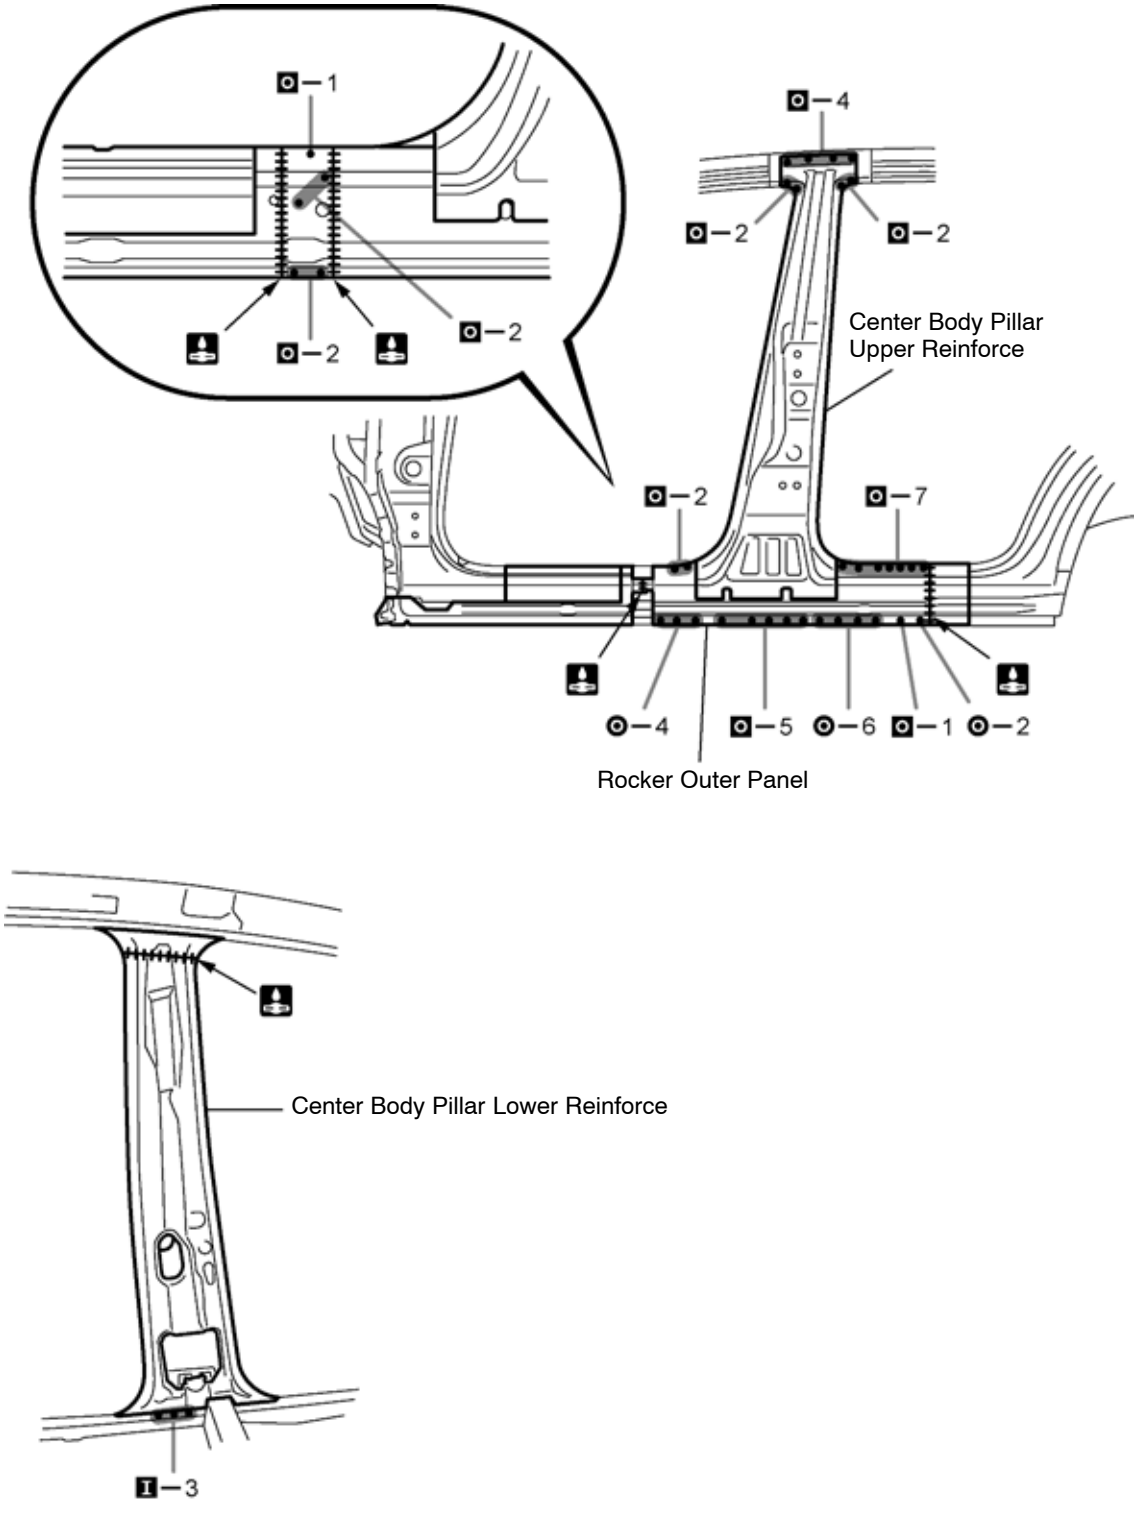


F29217

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)


3 After welding the rocker outer panel, center body pillar upper reinforce and center body pillar lower reinforce to the vehicle side, install the center body outer pillar.


Symbol meaning

: Remove Weld Points : Spot Weld : Plug Weld : Cut and Join Location

: Butt Weld

F29216B

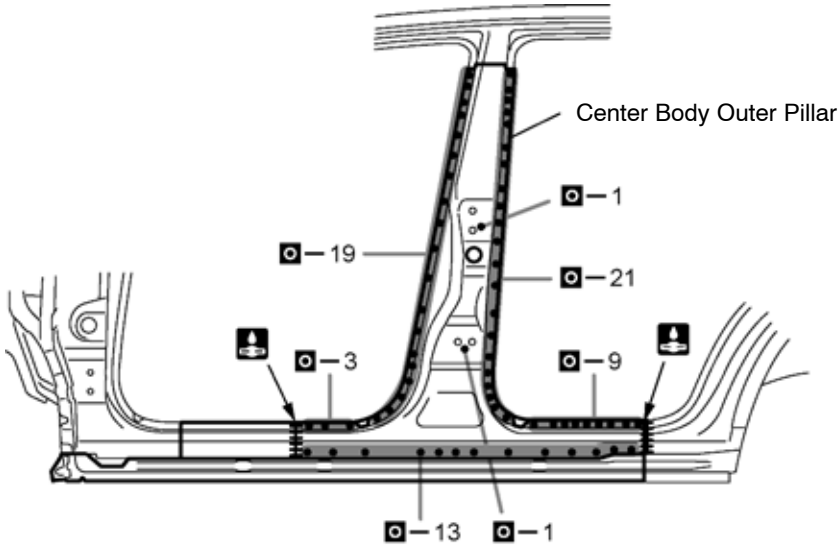

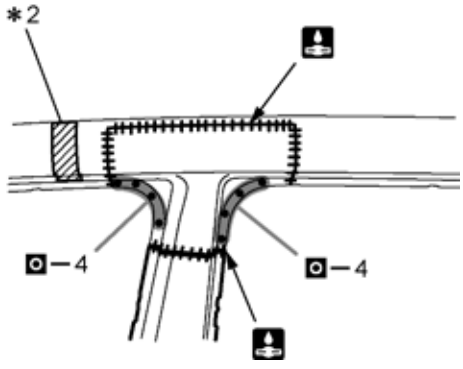




F29218

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding the rocker outer panel, center body pillar upper reinforce and center body pillar lower reinforce to the vehicle side, install the center body outer pillar.
4 *2 indicates the location of the foamed sealing material. Be careful when welding as the foamed sealing material is located near the area that is cut and joined together.
5 After welding, apply the foamed sealing material to the corresponding parts. (See the paint·coating)
6 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
7 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.
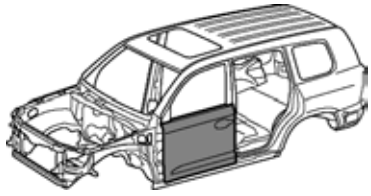
# FRONT DOOR OUTER PANEL (ASSY)




F29659A


Symbol meaning

: Remove Weld Points

F29219B

**REMOVAL**

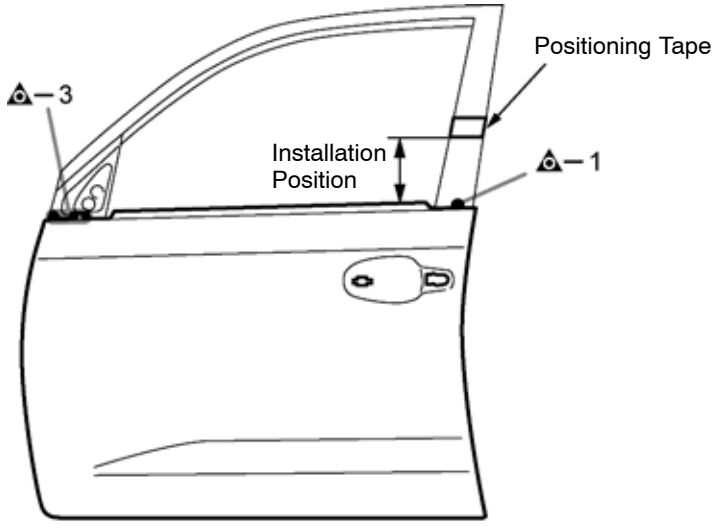

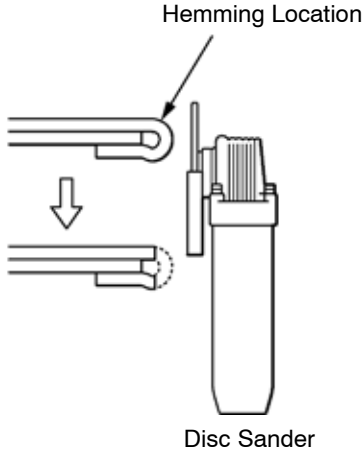
F29219

**REMOVAL POINT**


1 Before removing the outer panel, mark the installation position with tape.
2 Before removing the outer panel, establish its exact position in relation to the window frame using a reference marker, etc.
3 After grinding off the hemming location, remove the outer panel.

Symbol meaning

: Plug Weld : Spot MIG Weld : Body Sealer

F29220B

**INSTALLATION**

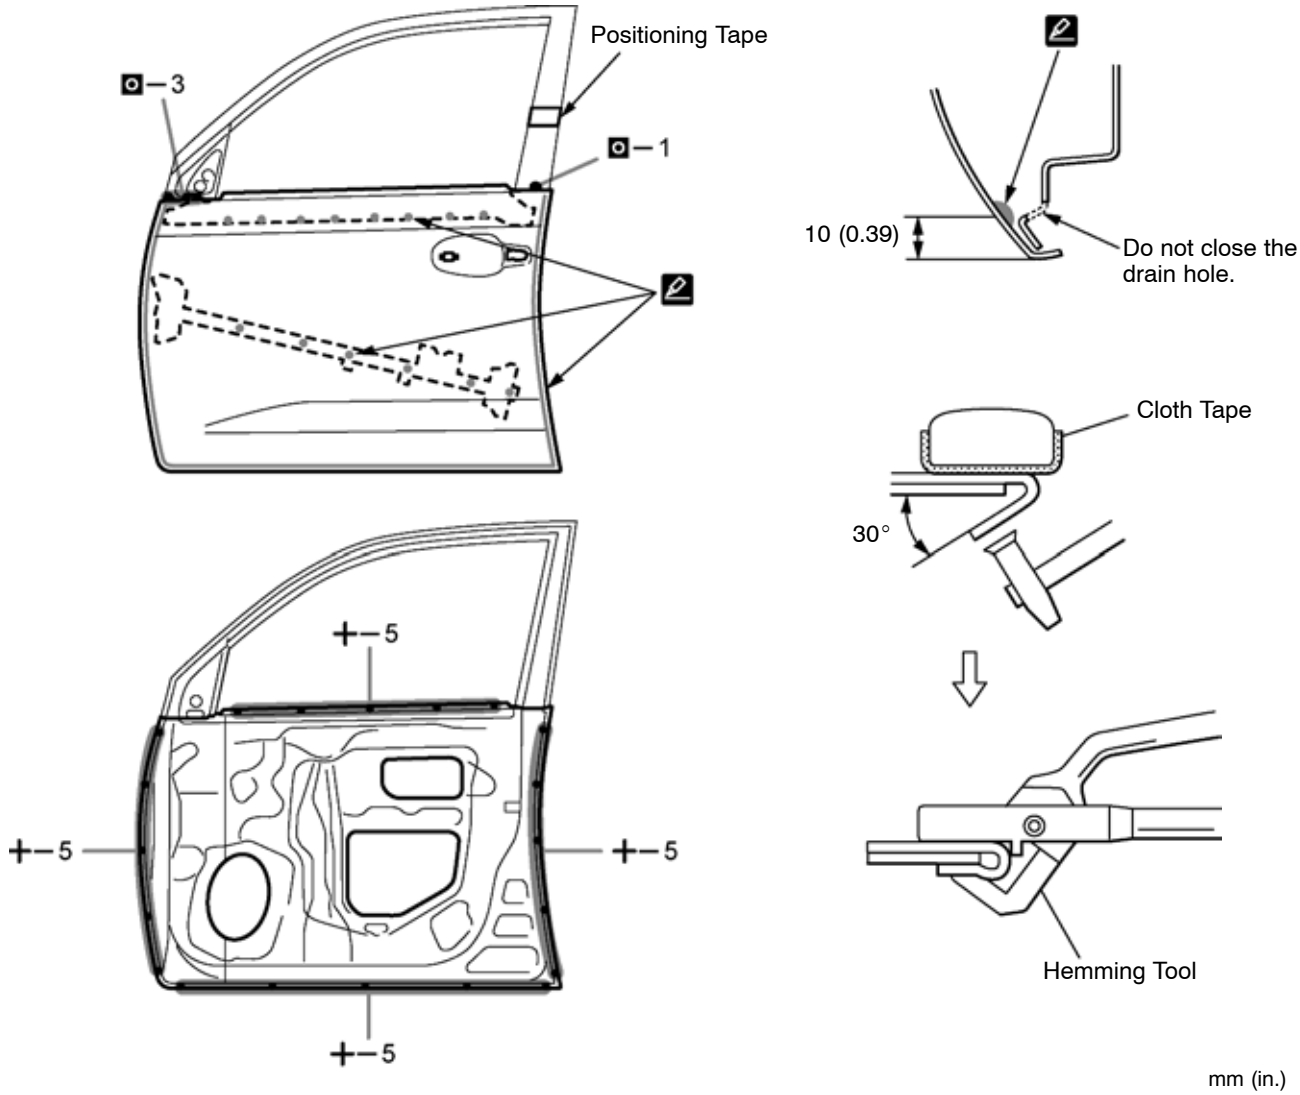


F29220


**INSTALLATION POINT**

1 Before temporarily installing the new parts, apply body sealer to the reinforcement, side impact protection beam and backside of the new parts.
*HINT:*
*Apply sealer evenly about 10 mm (0.39 in.) from the flange and 3 mm (0.12 in.) in diameter on the outer panel and apply just enough sealer for the reinforcement and side impact protection beam to make contact.*

2 Bend the flange hem about 30° with a hammer and dolly. Then, fasten tightly with a hemming tool.
*HINT:*
- *Perform hemming in three steps, being careful not to warp the panel.*
- *If a hemming tool cannot be used, hem with a hammer and dolly.*

3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# REAR DOOR OUTER PANEL (ASSY)

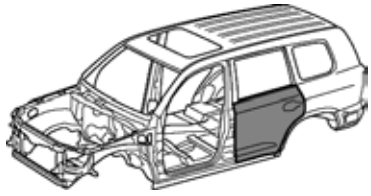


F29660A


Symbol meaning

: Remove Weld Points : Braze

F29221B

**REMOVAL**

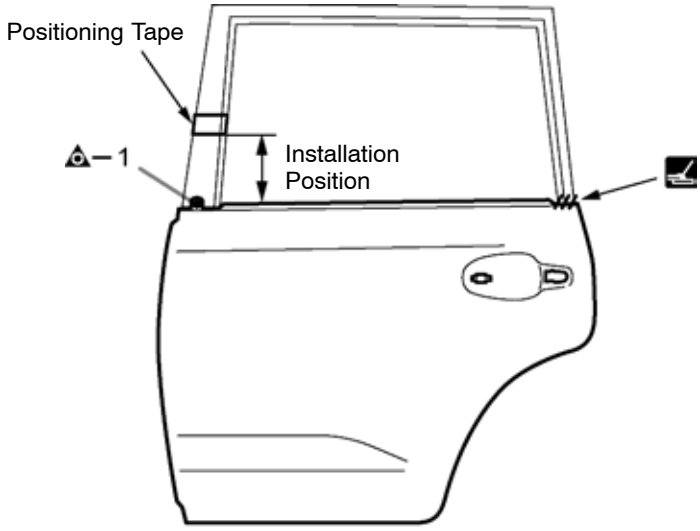

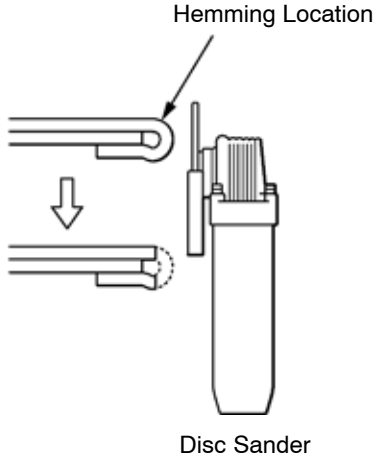
F29221

**REMOVAL POINT**


1 Before removing the outer panel, mark the installation position with tape.
2 Before removing the outer panel, establish its exact position in relation to the window frame using a reference marker, etc.
3 After grinding off the hemming location, remove the outer panel.

Symbol meaning

: Plug Weld : Braze : Spot MIG Weld : Body Sealer

F29222B

**INSTALLATION**

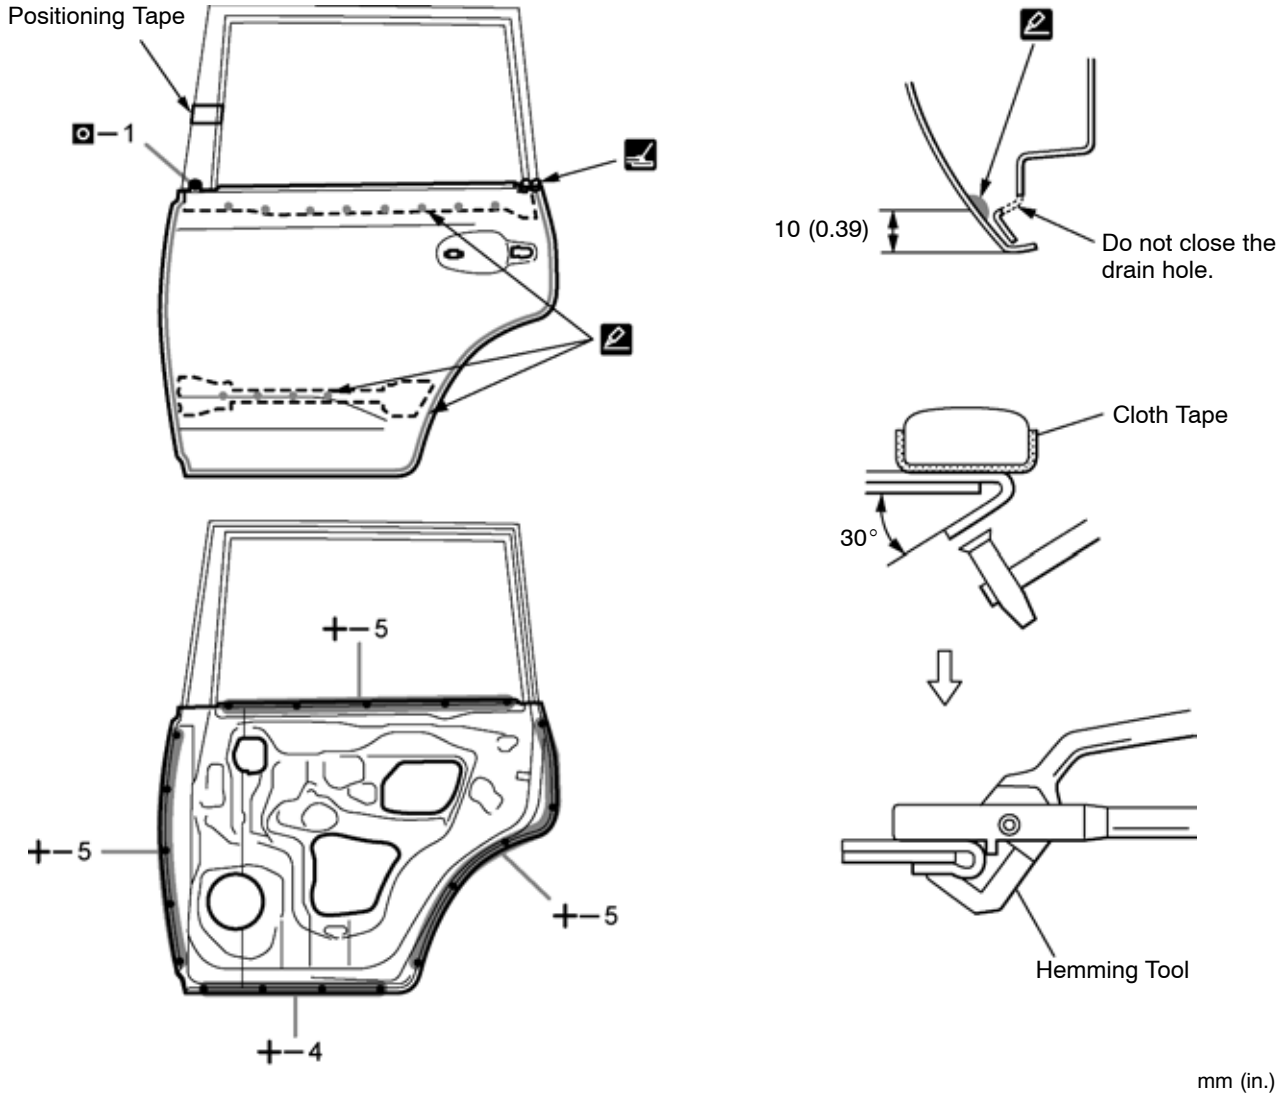


F29222


**INSTALLATION POINT**

1 Before temporarily installing the new parts, apply body sealer to the reinforcement, side impact protection beam and backside of the new parts.
*HINT:*
*Apply sealer evenly about 10 mm (0.39 in.) from the flange and 3 mm (0.12 in.) in diameter on the outer panel and apply just enough sealer for the reinforcement and side impact protection beam to make contact.*

2 Bend the flange hem about 30° with a hammer and dolly. Then, fasten tightly with a hemming tool.
*HINT:*
- *Perform hemming in three steps, being careful not to warp the panel.*
- *If a hemming tool cannot be used, hem with a hammer and dolly.*

3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# ROCKER OUTER PANEL (CUT-P)

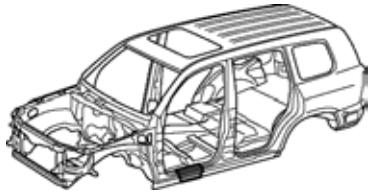

F29661A


Symbol meaning

: Remove Weld Points : Cut and Join Location

: Cut Location for Supply Parts

F29223B

**REMOVAL**

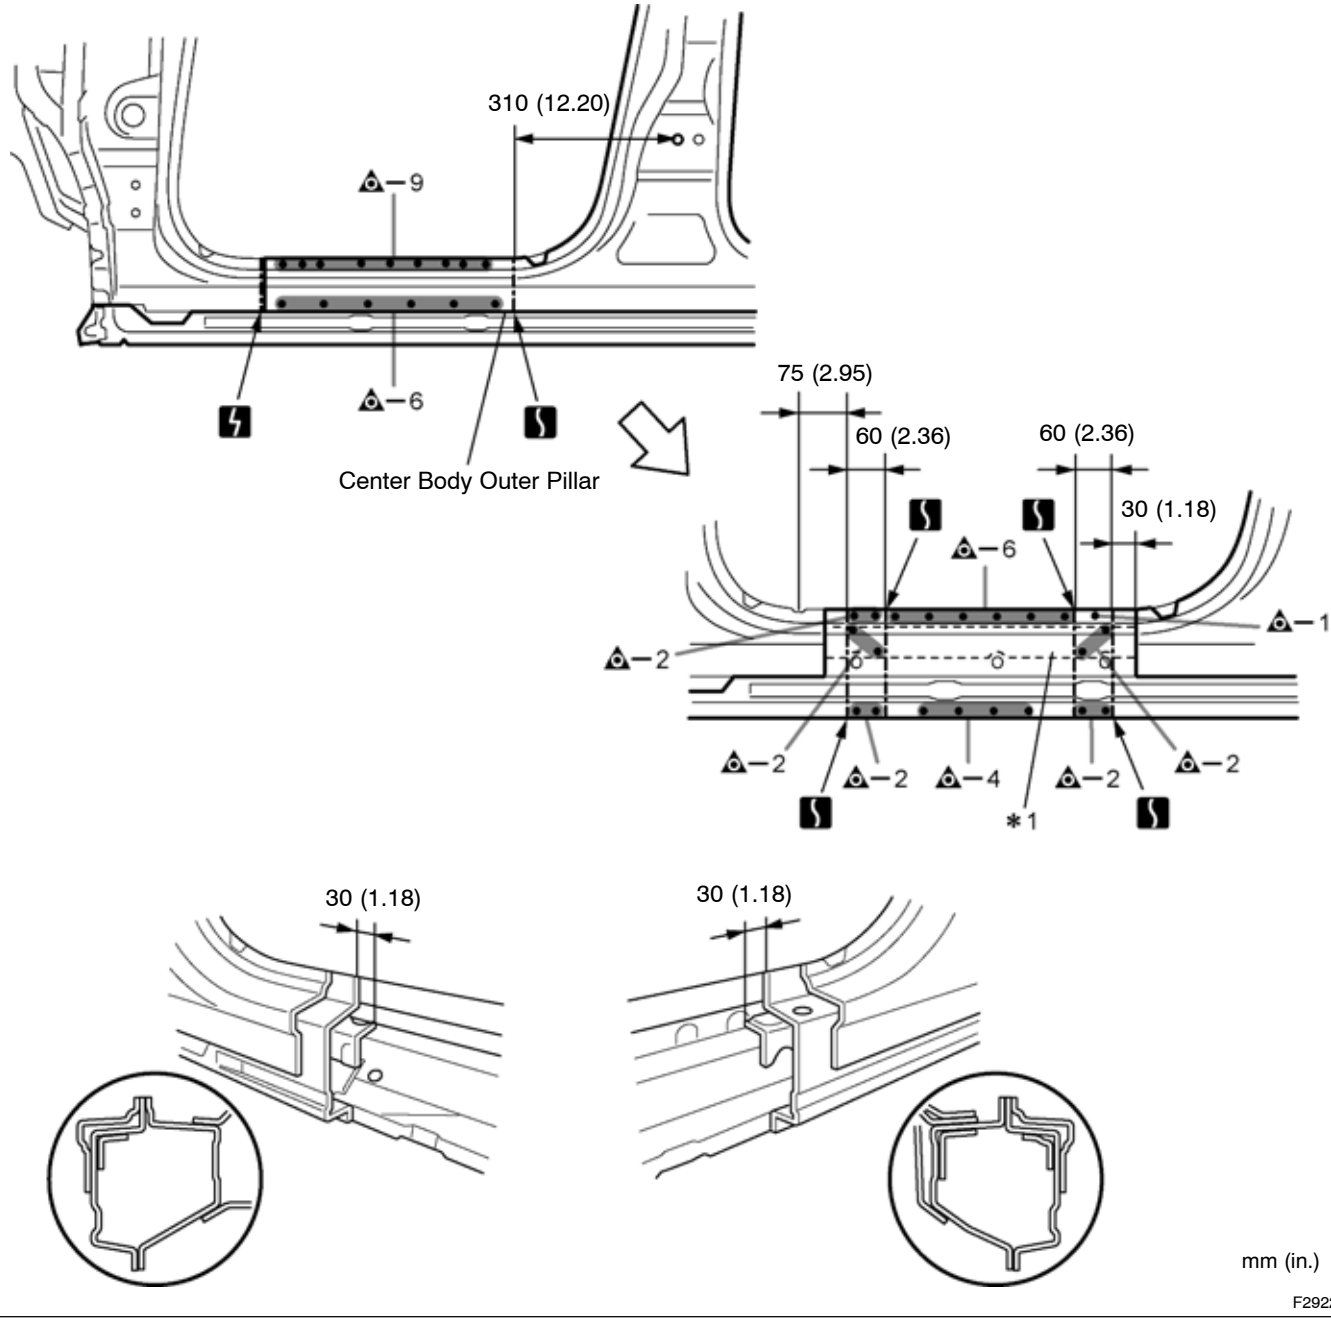


F29223

**REMOVAL POINT**

1 After removing the center body outer pillar, remove the rocker outer panel.


2 Carefully cut the rocker outer panel so not to damage *1

Symbol meaning

: Spot Weld : Plug Weld : Butt Weld

F29224B

**INSTALLATION**

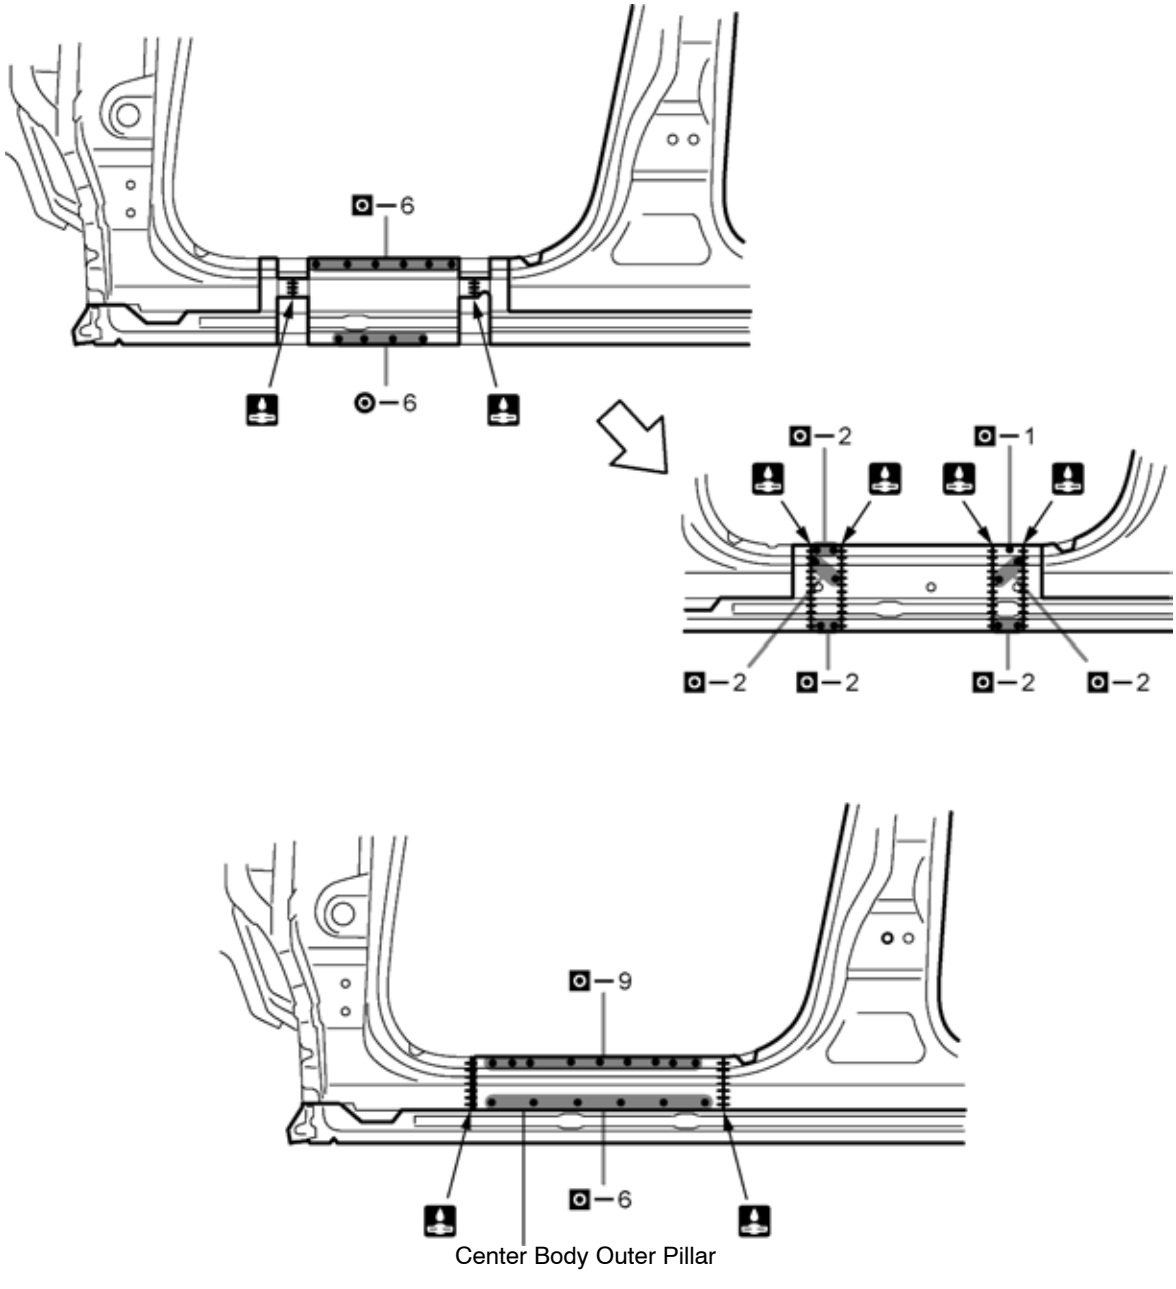



F29224

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 After welding the rocker outer panel to the vehicle side, install the center body outer pillar.
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# ROCKER OUTER PANEL (CUT)

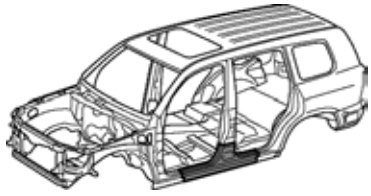

F29662A


Symbol meaning

: Remove Weld Points : Cut and Join Location

: Cut Location for Supply Parts

F29225B

**REMOVAL**

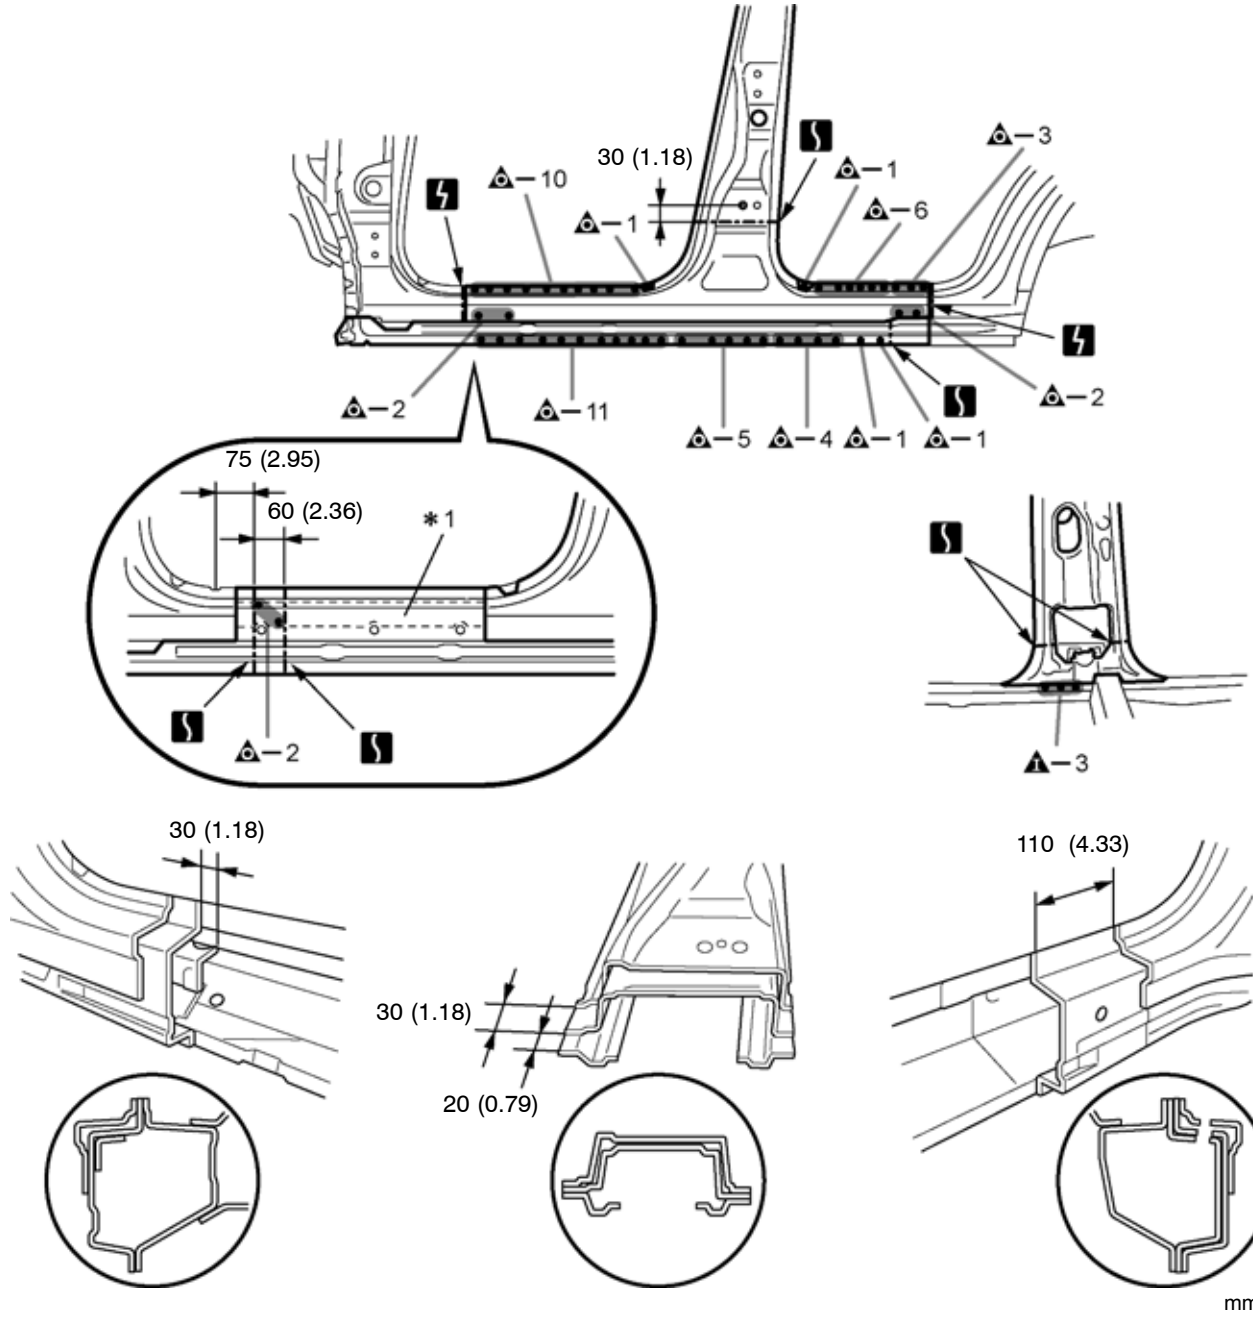


mm (in.)

F29225

**REMOVAL POINT**


1 Carefully cut the rocker outer panel so not to damage *1.


Symbol meaning

: Remove Weld Points : Spot Weld : Plug Weld : Cut and Join Location : Butt Weld

F29226B

**INSTALLATION**

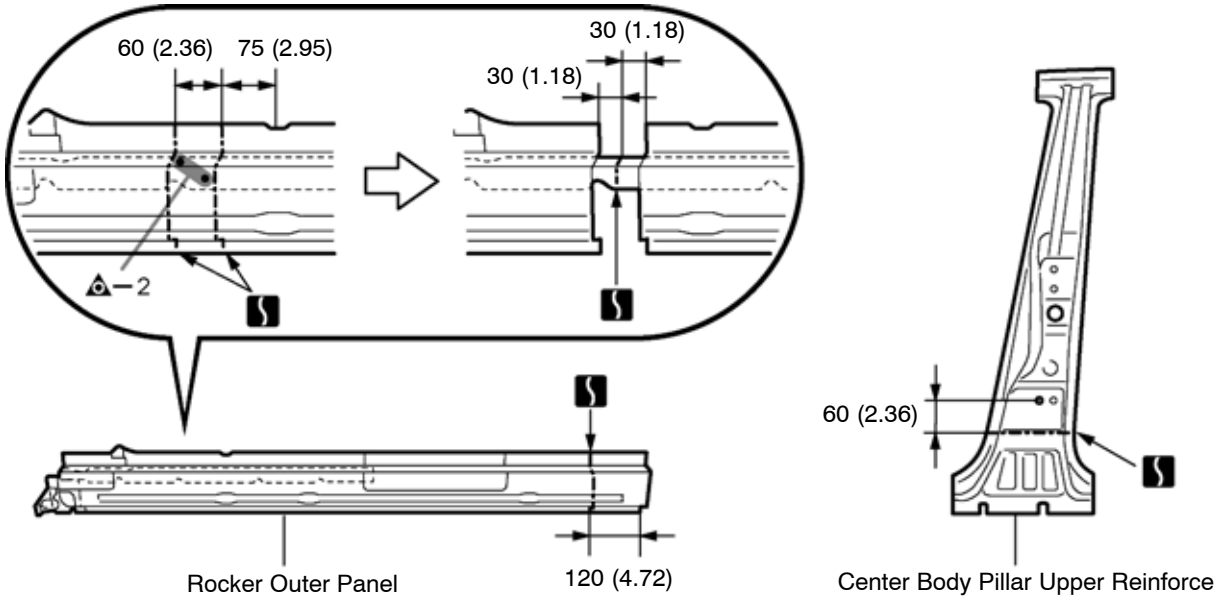

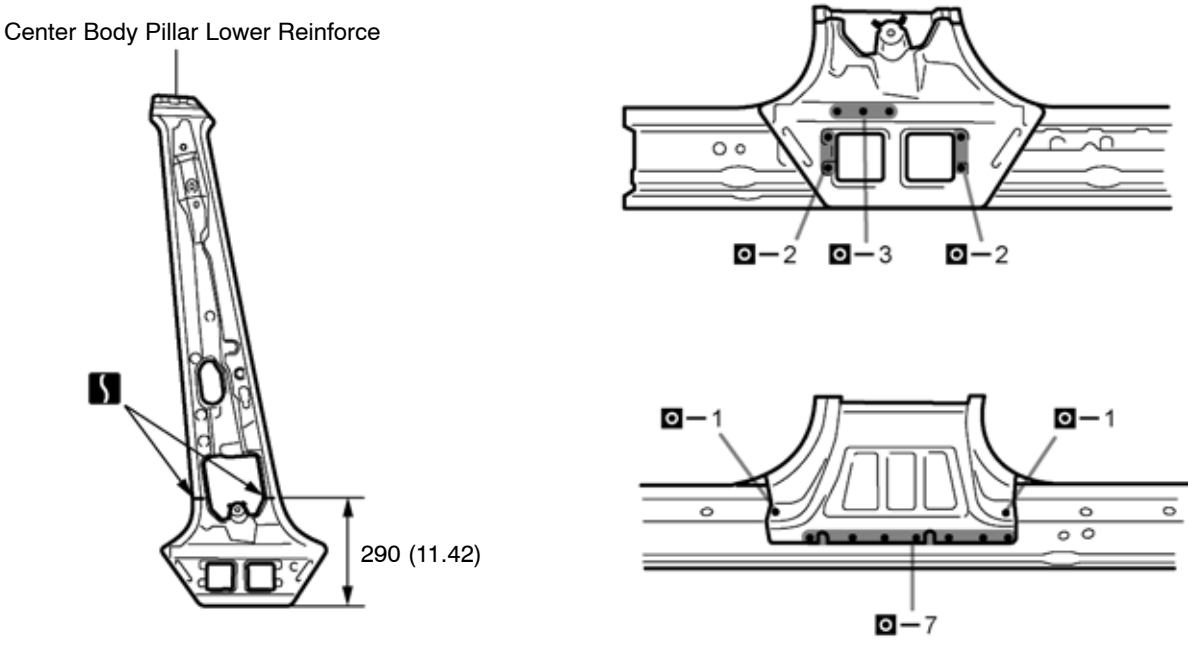




mm (in.)

F29226

**INSTALLATION POINT**

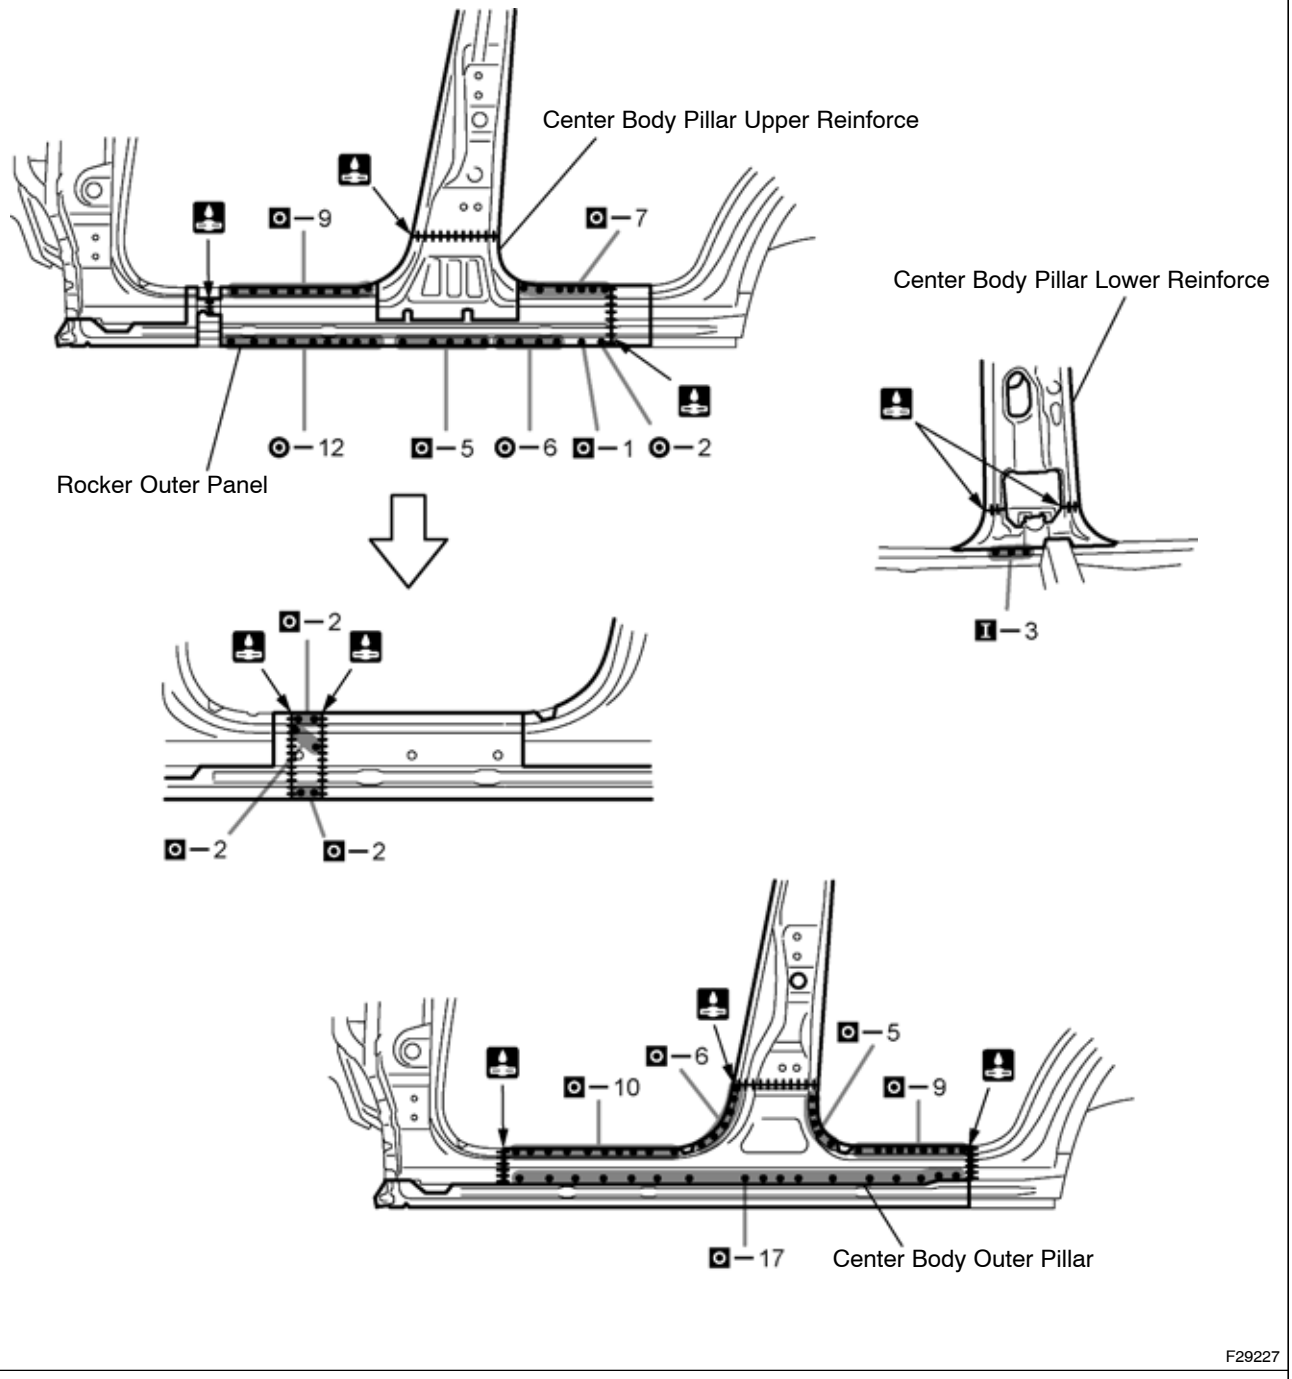1 Before temporarily installing the new parts, weld the rocker outer panel, center body pillar upper reinforce and center body pillar lower reinforce with the standard number of welding points.




**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding the rocker outer panel, center body pillar upper reinforce and center body pillar lower reinforce to the vehicle side, install the center body outer pillar.
4 After welding, apply the foamed sealing material to the corresponding parts. (See the paint·coating)
5 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
6 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# ROCKER PANEL NO. 3 REINFORCEMENT (CUT)



F29663A


Symbol meaning

: Remove Weld Points : Cut and Join Location

: Cut Location for Supply Parts

F29228B

**REMOVAL**

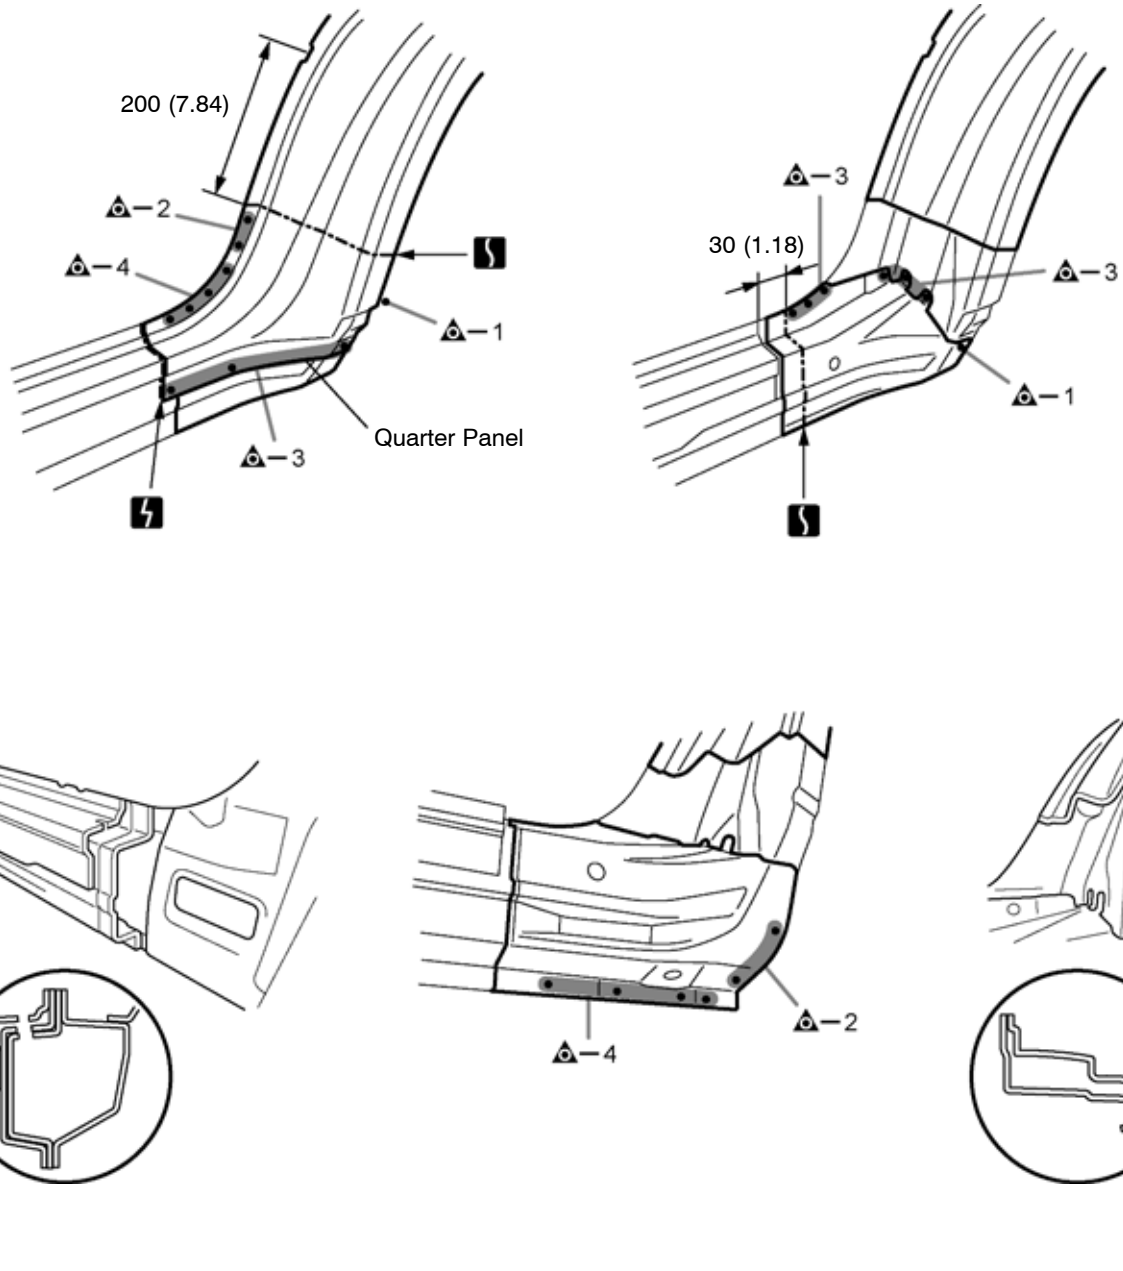


mm (in.)

F29228

**REMOVAL POINT**


1 After removing the quarter panel, remove the rocker panel No. 3 reinforcement.

Symbol meaning

: Spot Weld : Plug Weld : Butt Weld : Body Sealer

F29229B

## INSTALLATION

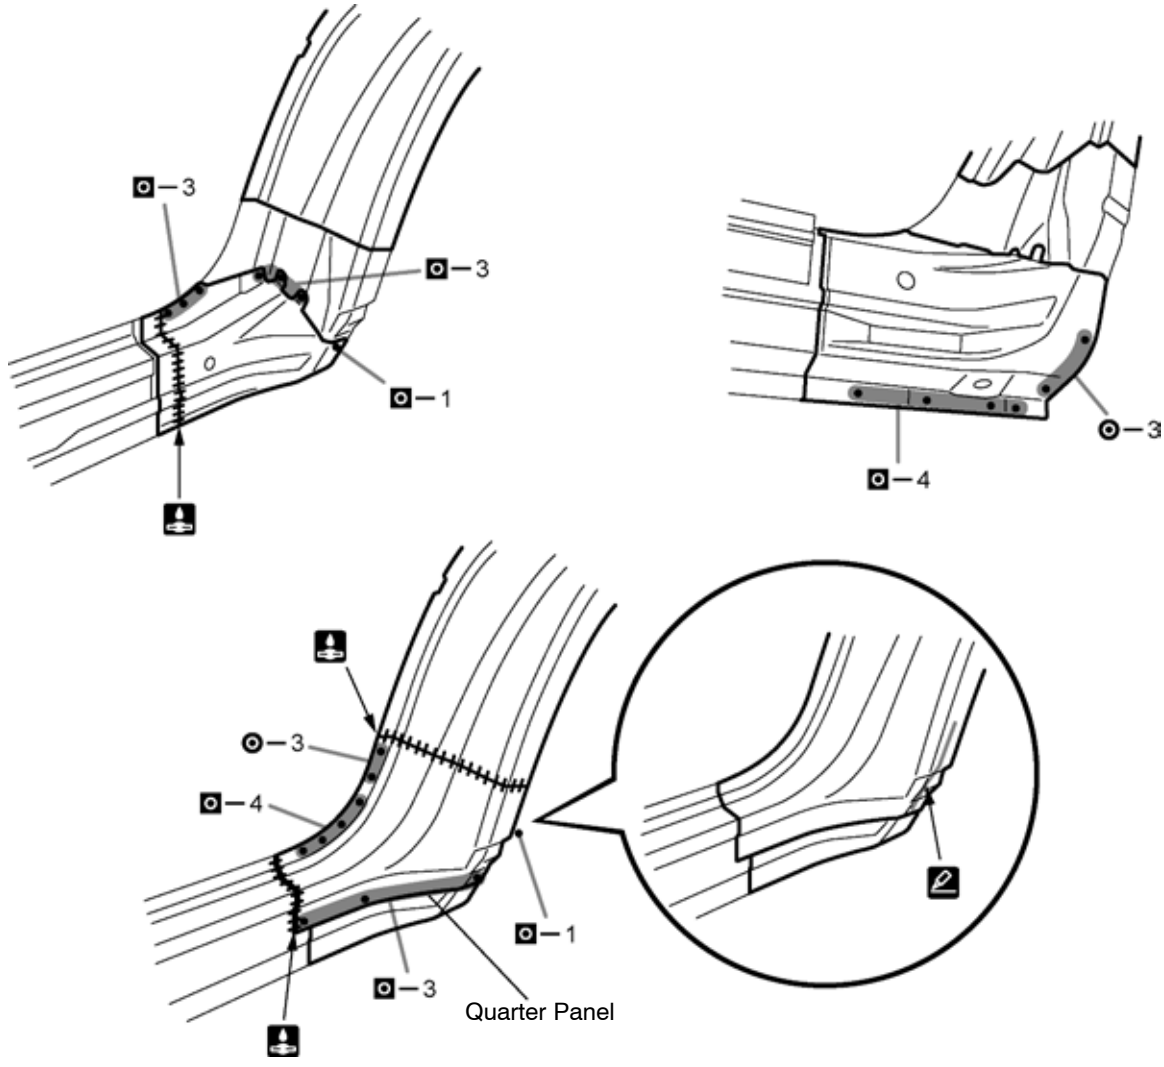



F29229

### INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 Before installing a new part, apply body sealer.
*HINT:*
*Apply sealer in an even, continuous bead.*
4 After welding the rocker panel No. 3 reinforcement to the vehicle side, install the quarter panel.
5 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
6 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# QUARTER PANEL (ASSY)

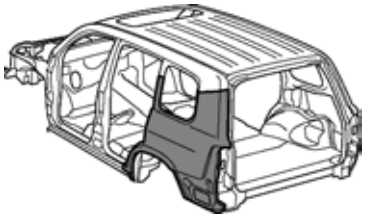

F29664A


Symbol meaning

: Remove Weld Points : Cut with Disc Sander etc.


: Cut Location for Supply Parts

F29230B


**REMOVAL**

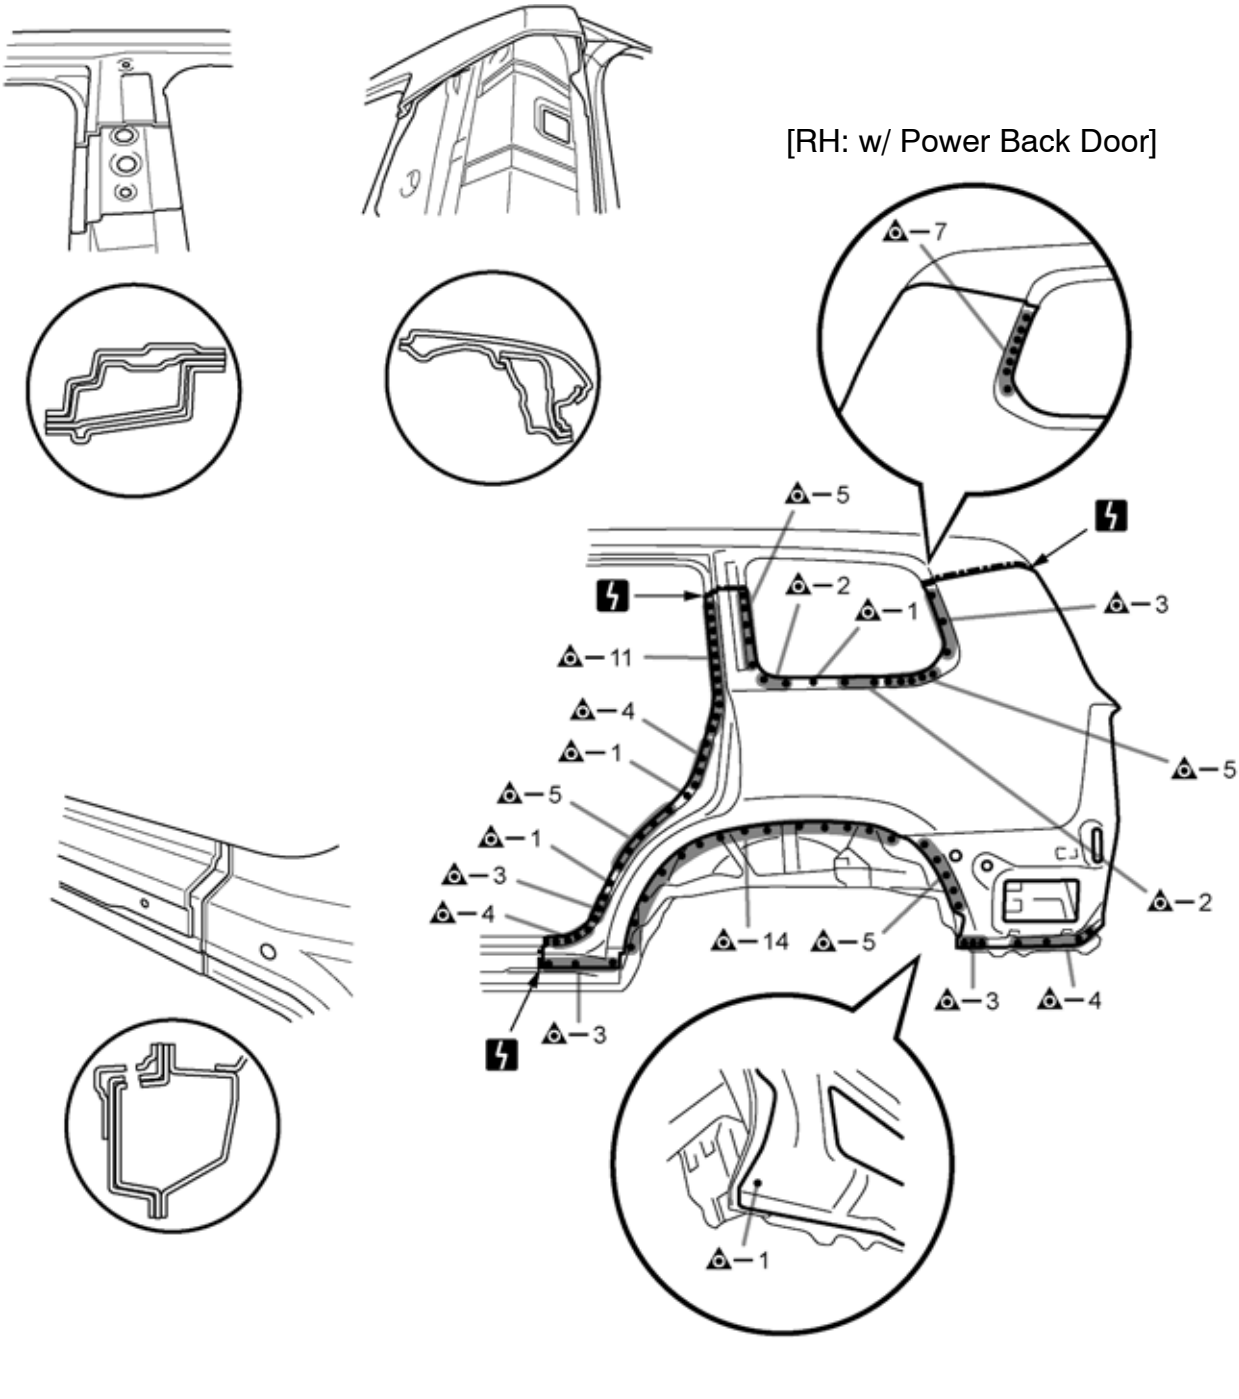



F29657

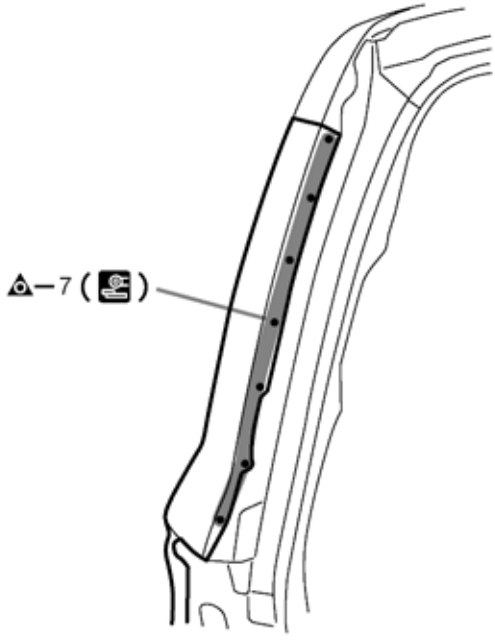


[LH]

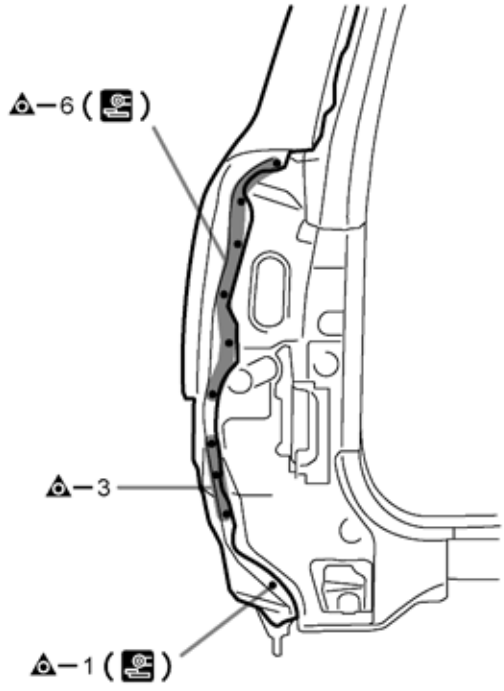


[RH]

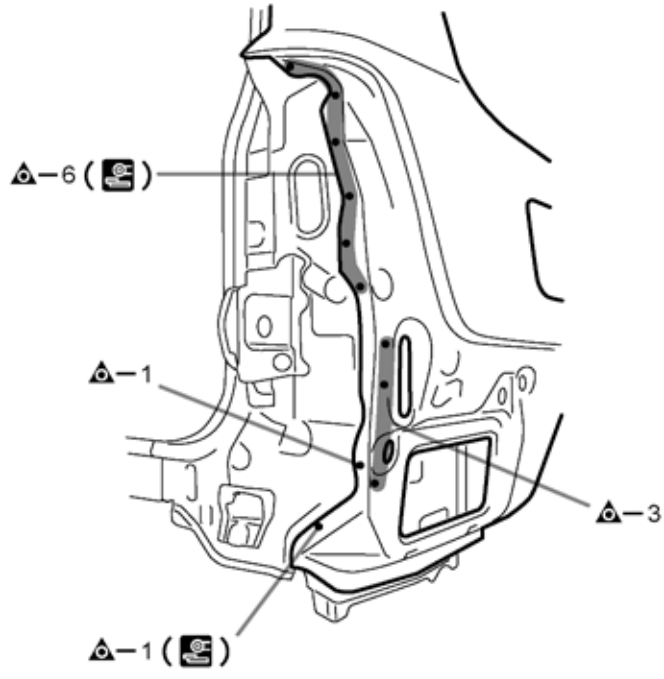



F29690

Symbol meaning

: Spot Weld : Plug Weld : Butt Weld : Body Sealer

F29232B

**INSTALLATION**

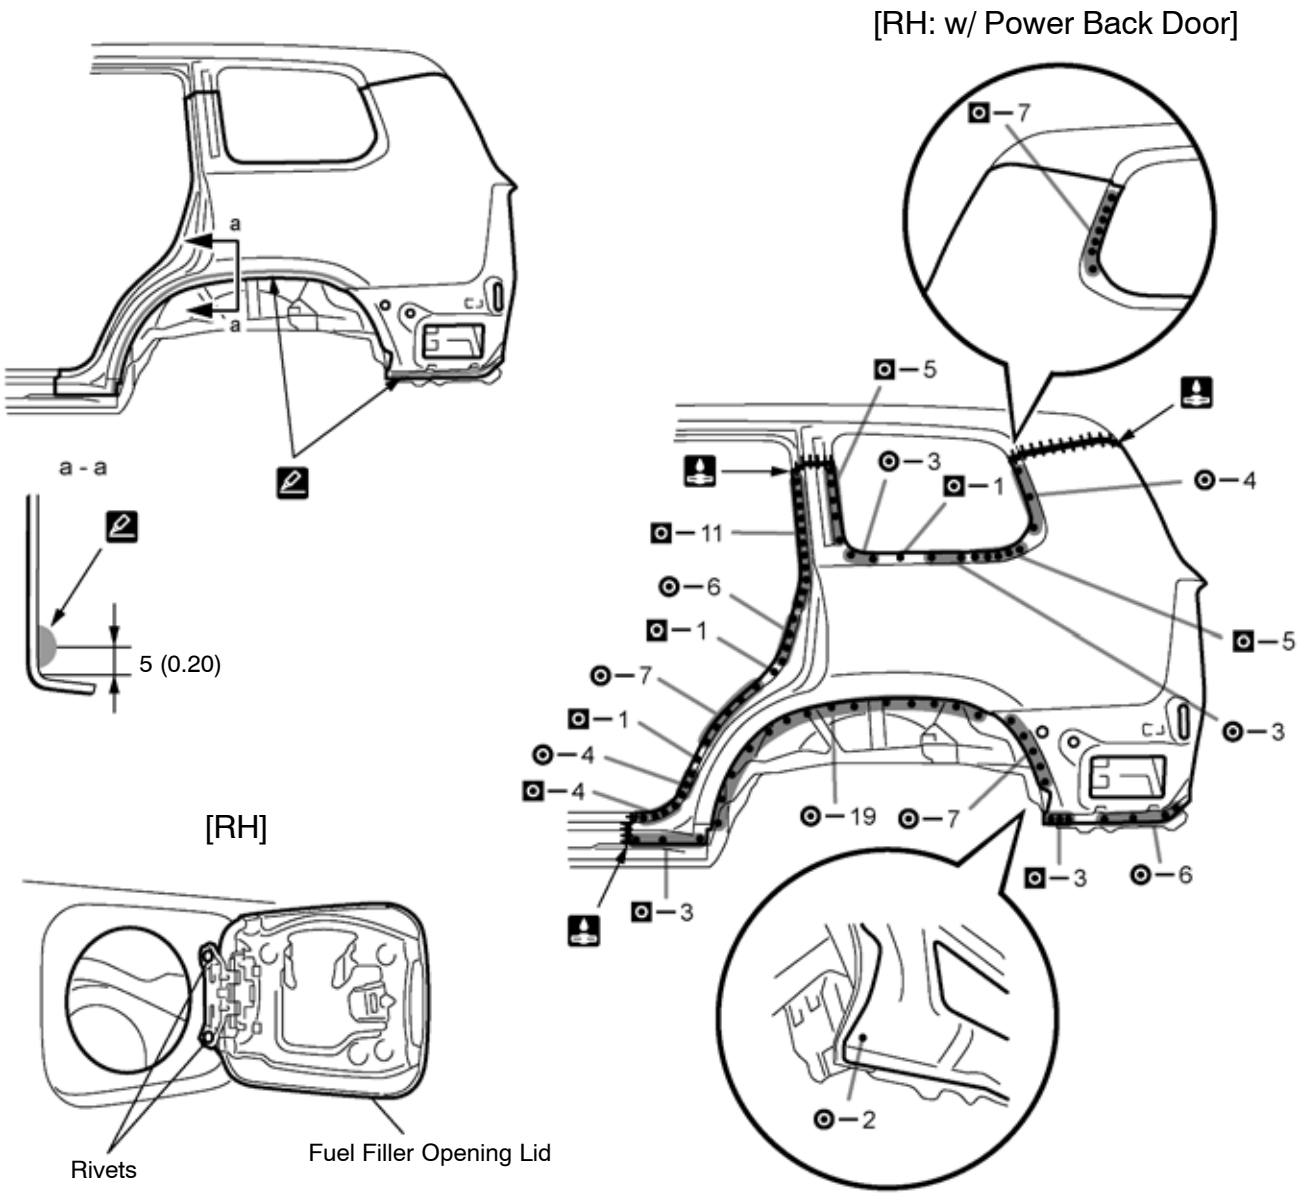



F29658

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)


3 Before installing a new part, apply body sealer.
*HINT:*
- *Apply body sealer evenly about 5 mm (0.20 in.) from the flange, avoiding any oozing.*
- *Apply sealer evenly, about 3 – 4 mm (0.12 – 0.16 in.) in diameter.*

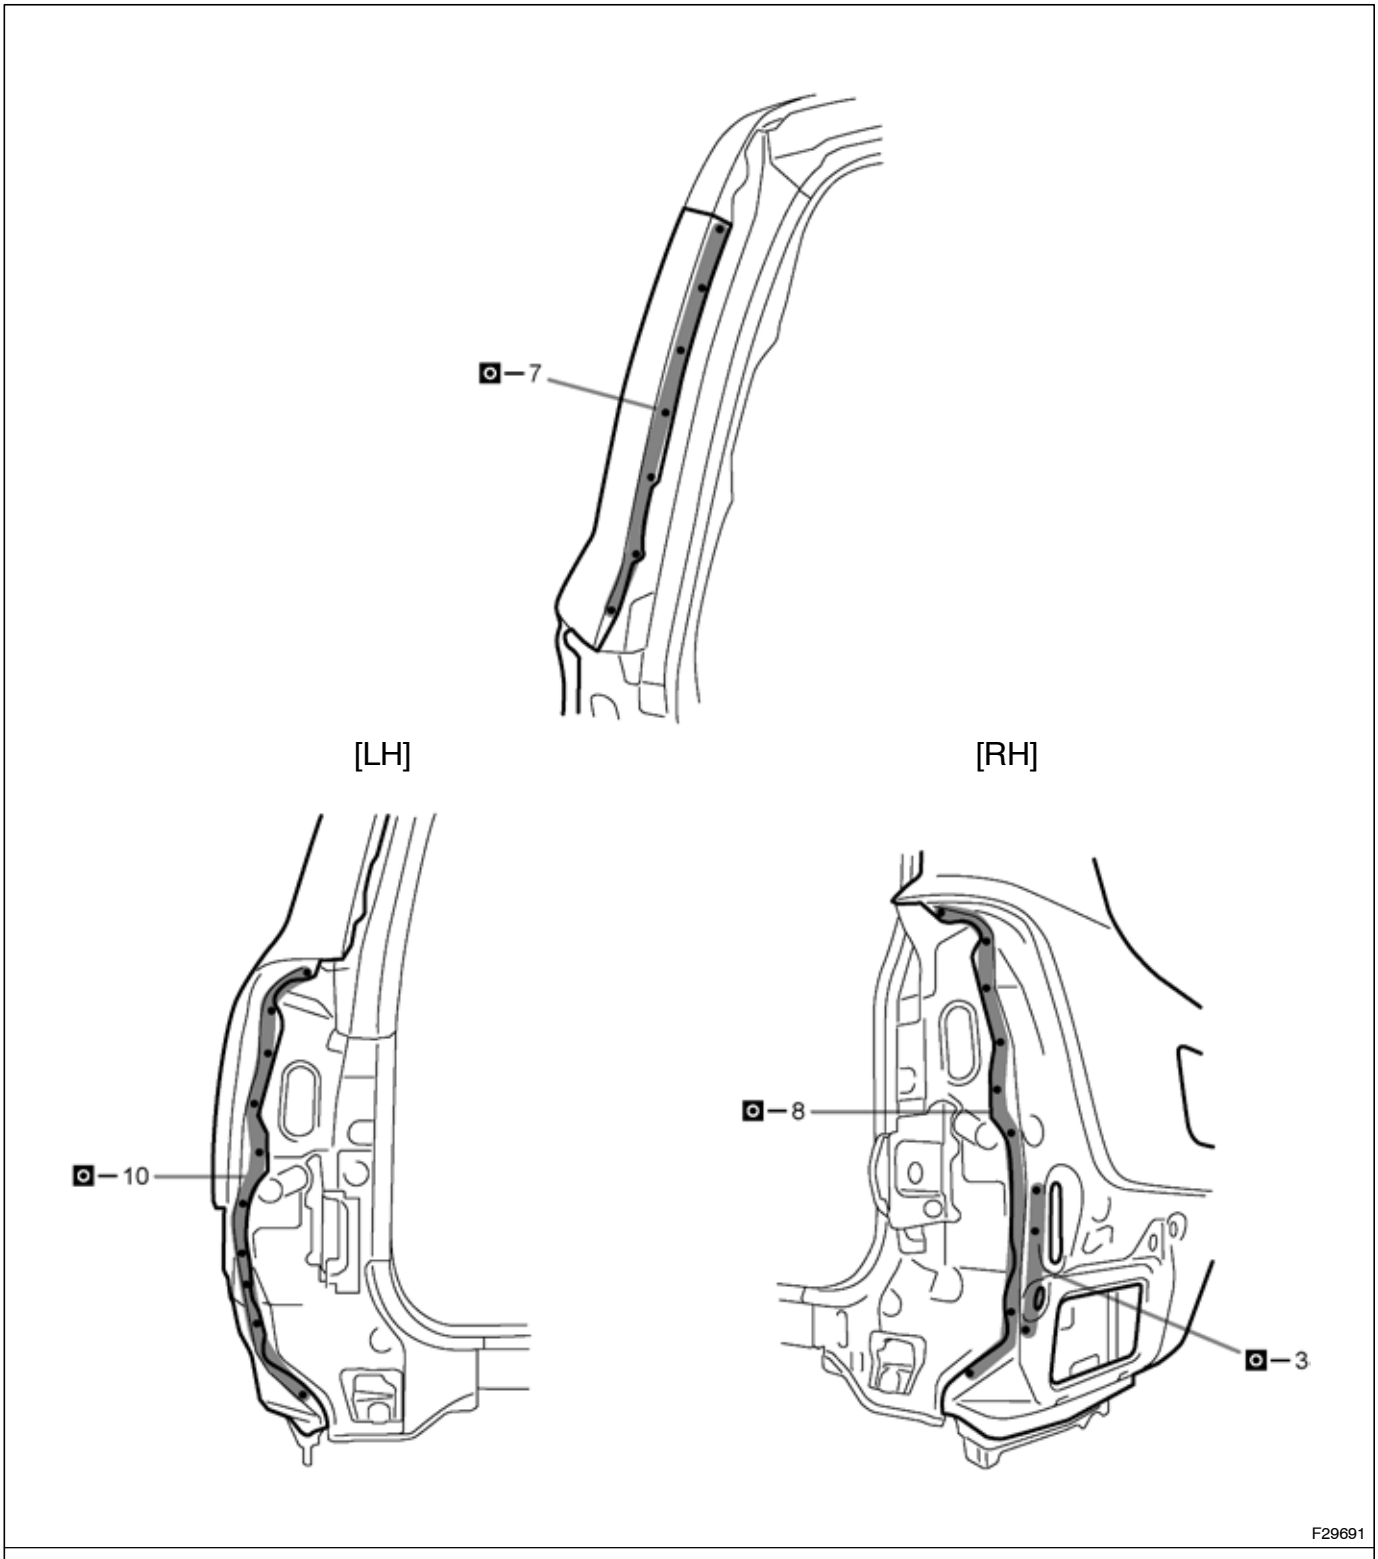


**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply foamed sealing material to the corresponding parts. (See the paint·coating)
4 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# QUARTER WHEEL HOUSING OUTER PANEL (ASSY)

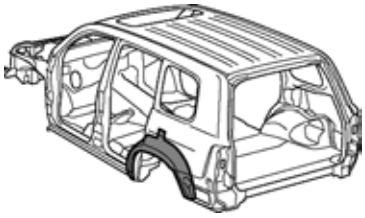

F29665A

With the rocker panel No. 3 reinforcement and quarter panel removed.


Symbol meaning

| | | |
|---|---|---|
| REMOVAL | ▲ : Remove Weld Points | |
| INSTALLATION | ● : Spot Weld | ■ : Plug Weld |

F29234B

**REMOVAL·INSTALLATION**

[LH]

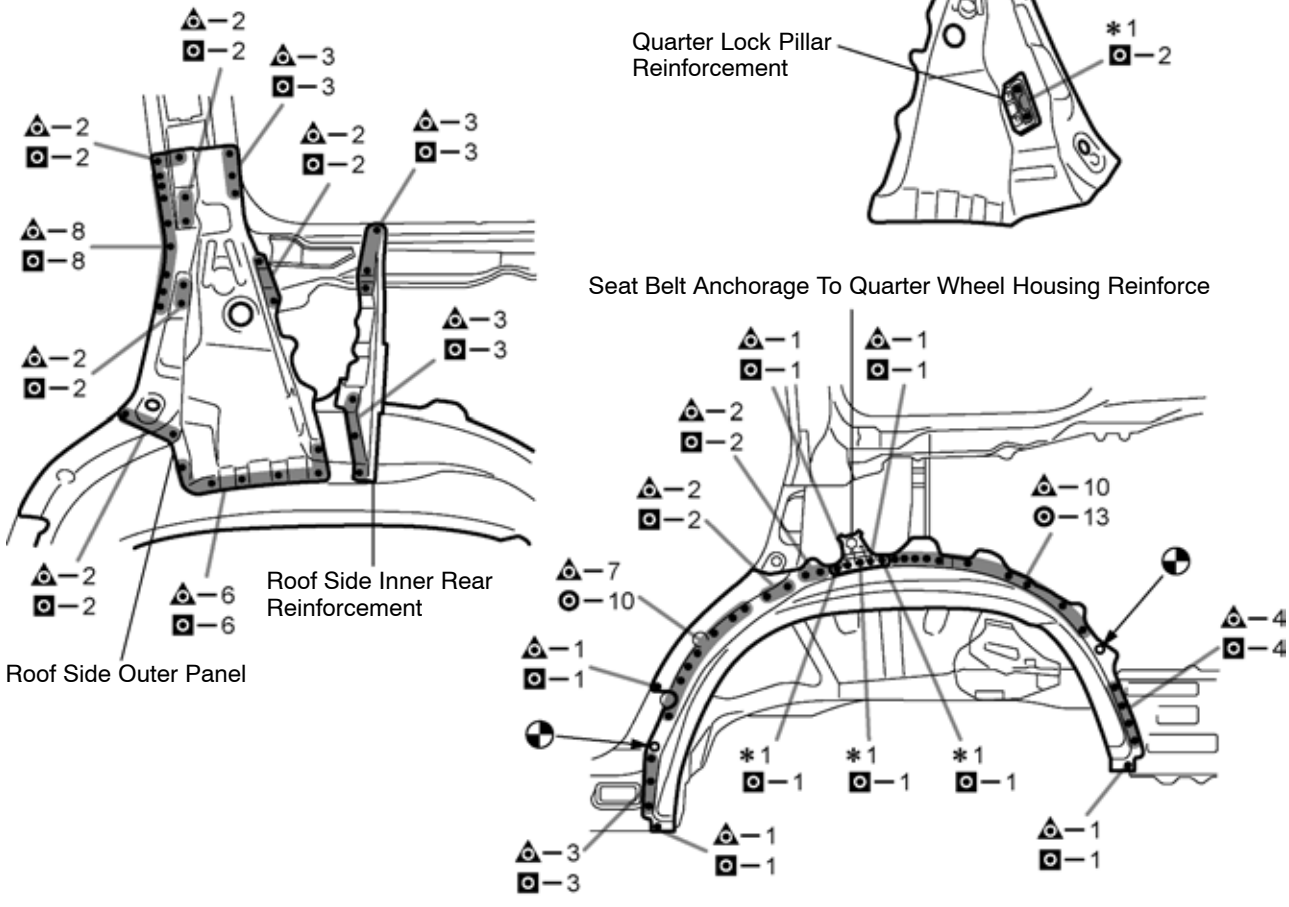


F29234


**REMOVAL POINT**

1 After removing the roof side outer panel and roof side inner rear reinforcement, remove the quarter wheel housing outer panel.
2 Remove the seat belt anchorage to quarter wheel housing reinforce at the same time.

**INSTALLATION POINT**

1 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.
2 *1 is only for installation.
3 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side outer panel and roof side inner rear reinforcement.
4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[RH]

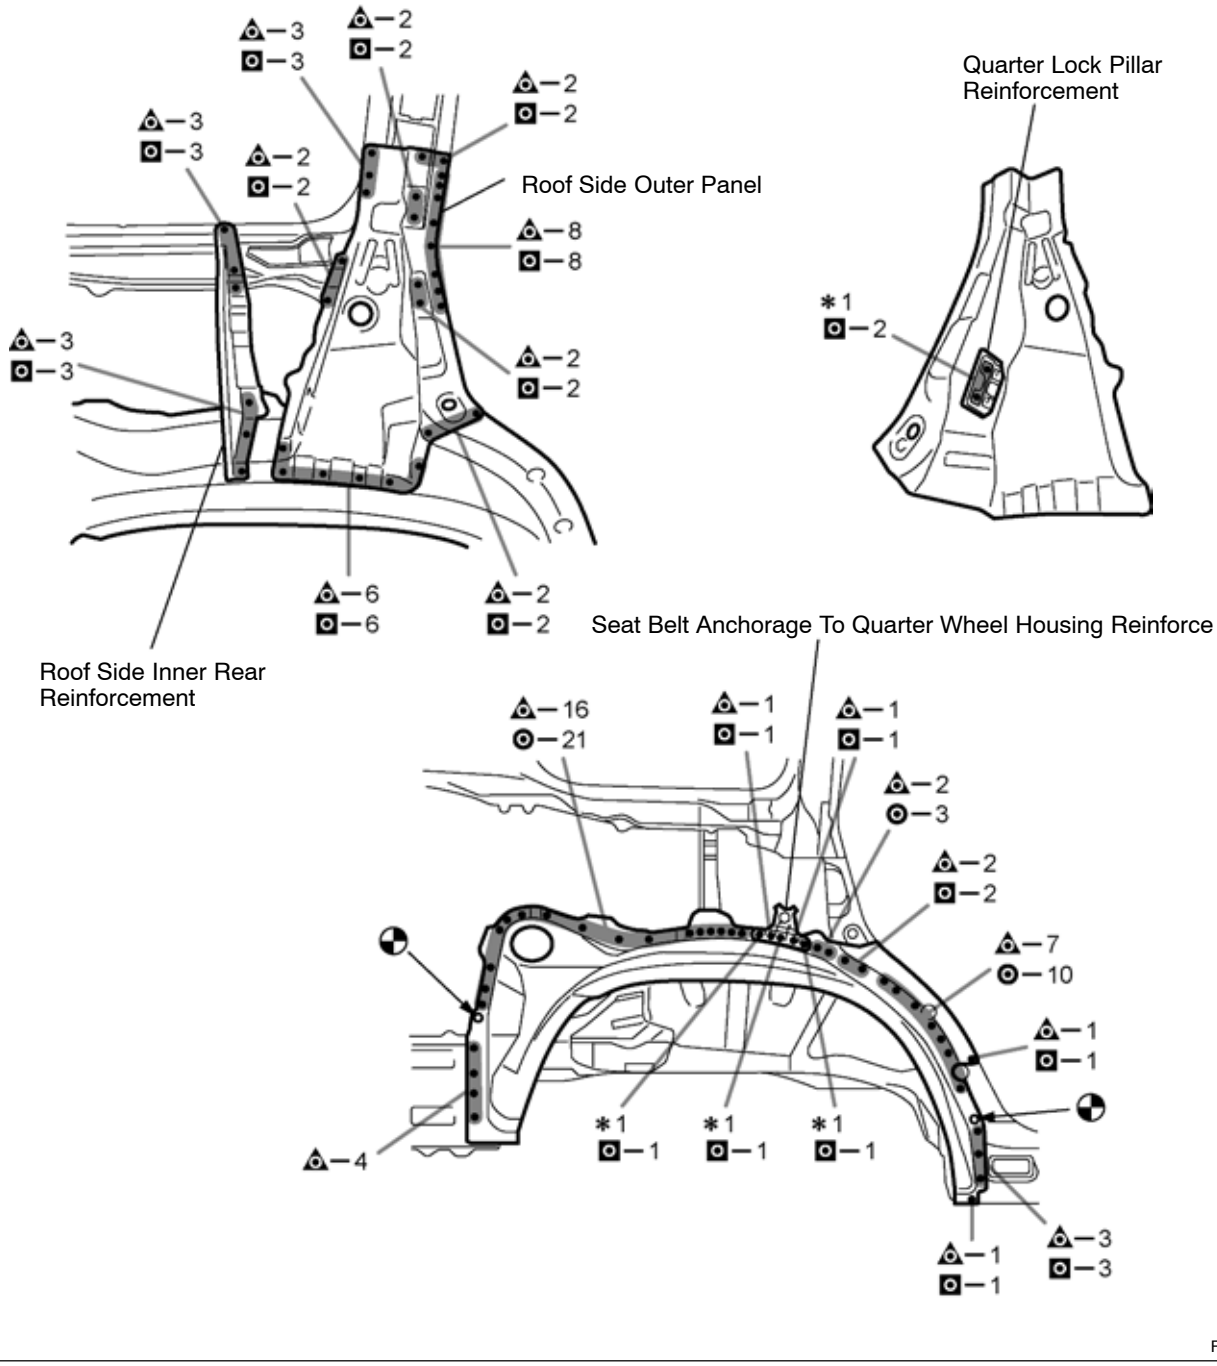


**REMOVAL POINT**

1 After removing the roof side outer panel and roof side inner rear reinforcement, remove the quarter wheel housing outer panel.
2 Remove the seat belt anchorage to quarter wheel housing reinforce at the same time.

**INSTALLATION POINT**

1 For positioning of the new parts, align the installation standard holes of the outer panel and the inner panel.
2 *1 is only for installation.
3 After welding the quarter wheel housing outer panel to the vehicle side, install the roof side outer panel and roof side inner rear reinforcement.
4 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
5 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# QUARTER PANEL FRONT EXTENSION (ASSY)



F29666A


With the quarter panel removed.

Symbol meaning

| | |
|---|---|
| REMOVAL | : Remove Weld Points |
| INSTALLATION | : Plug Weld |

F29236B

**REMOVAL·INSTALLATION**

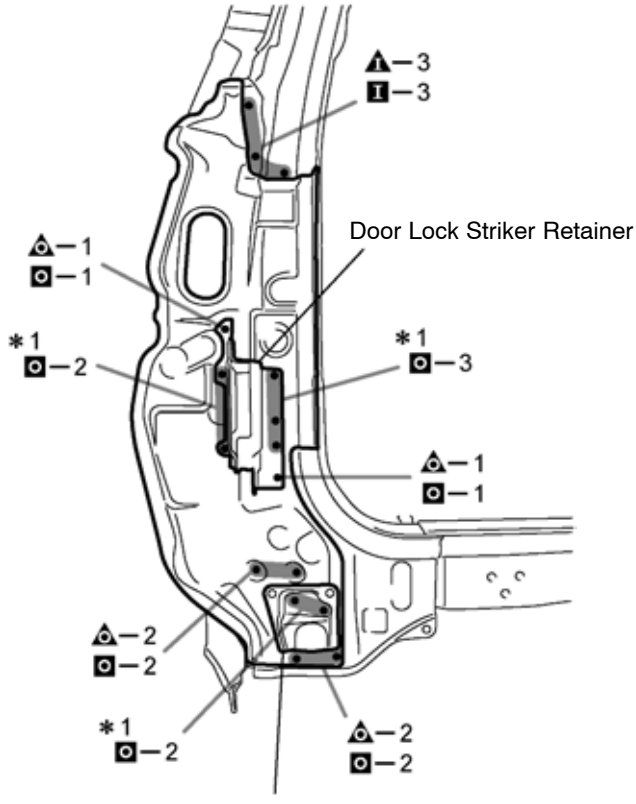


Back Door Opening Lower Reinforcement


F29659

**REMOVAL POINT**

1 Remove the door lock striker retainer at the same time.

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.

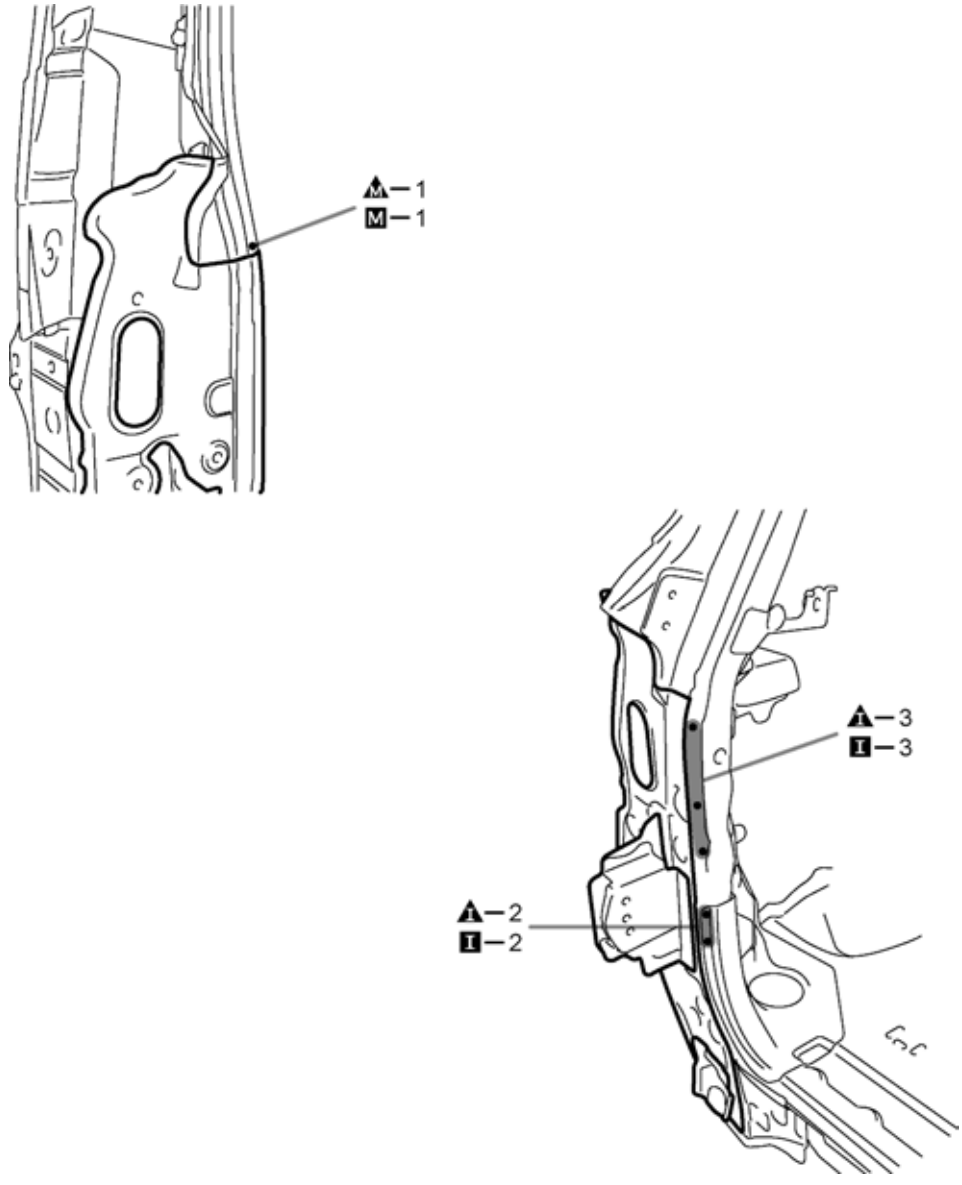



F29237

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# BACK DOOR OPENING UPPER REINFORCEMENT (CUT)

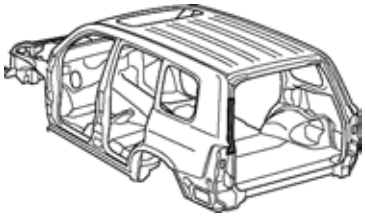

F29667A


With the quarter panel front extension removed.

Symbol meaning

| | | |
|---|---|---|
| REMOVAL | ▲ : Remove Weld Points | : Cut and Join Location |
| INSTALLATION | ○ I : Plug Weld | : Butt Weld |

F29238B

**REMOVAL·INSTALLATION**

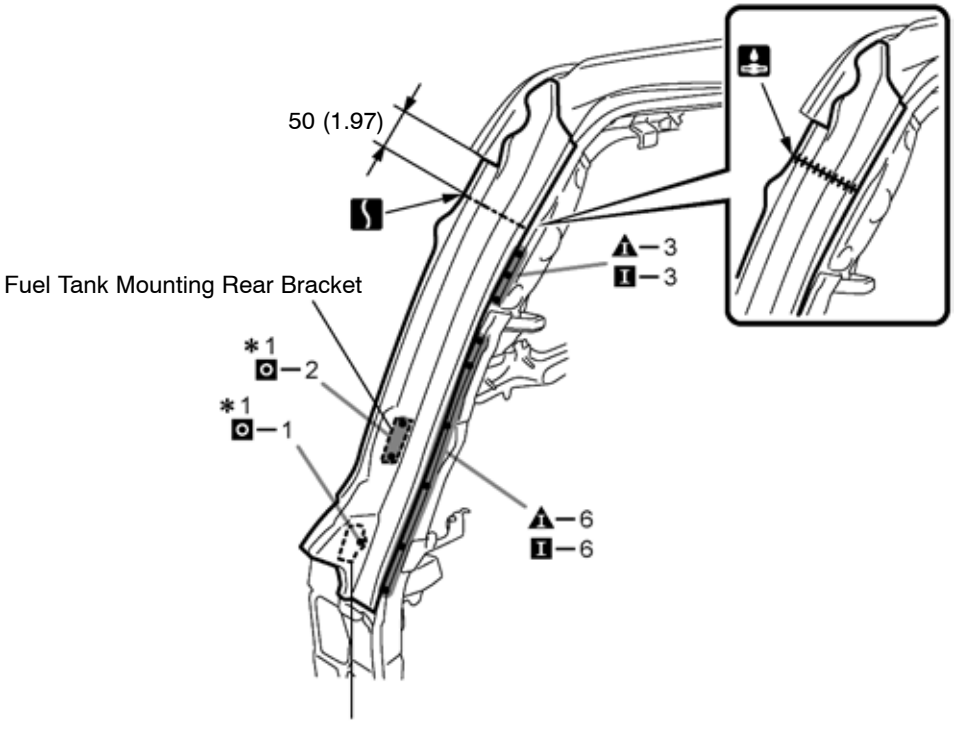



mm (in.)

F29660

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 *1 is only for installation.
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# QUARTER PANEL REINFORCEMENT (CUT)

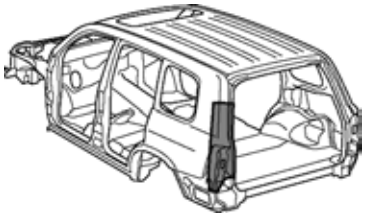

F29668A


With the back door opening upper reinforcement removed.

Symbol meaning

| | | |
|---|---|---|
| REMOVAL | : Remove Weld Points | : Cut and Join Location |
| INSTALLATION | : Spot Weld : Plug Weld | : Butt Weld |

F29239B

**REMOVAL·INSTALLATION**

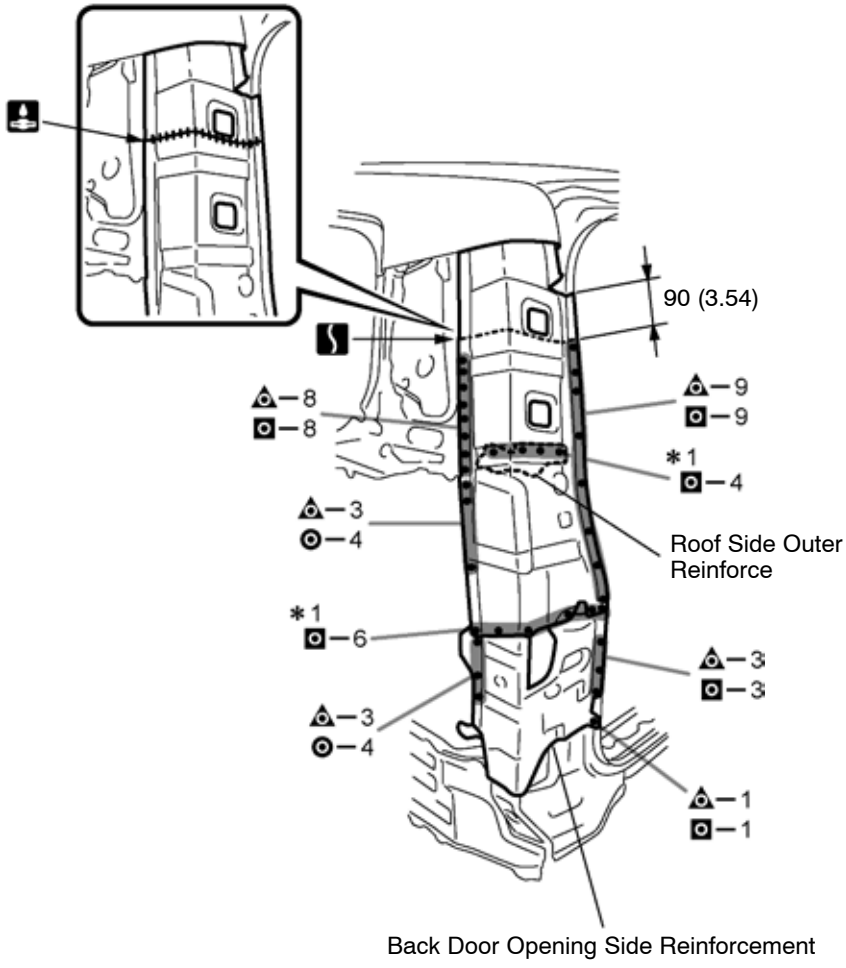


mm (in.)

F29661

**REMOVAL POINT**

1 Remove the roof side outer reinforce and back door opening side reinforcement at the same time.


**INSTALLATION POINT**


1 *1 is only for installation.

Symbol meaning

| | | |
|---|---|---|
| REMOVAL | ▲ ▲ : Remove Weld Points | : Cut and Join Location |
| INSTALLATION | ● : Spot Weld ■ ■ : Plug Weld | : Butt Weld |

F29239B

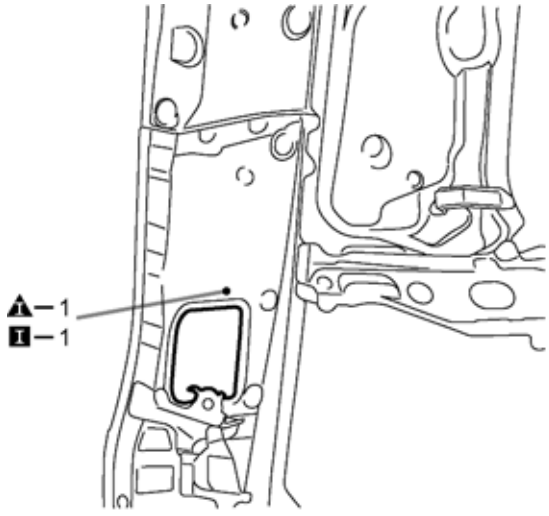

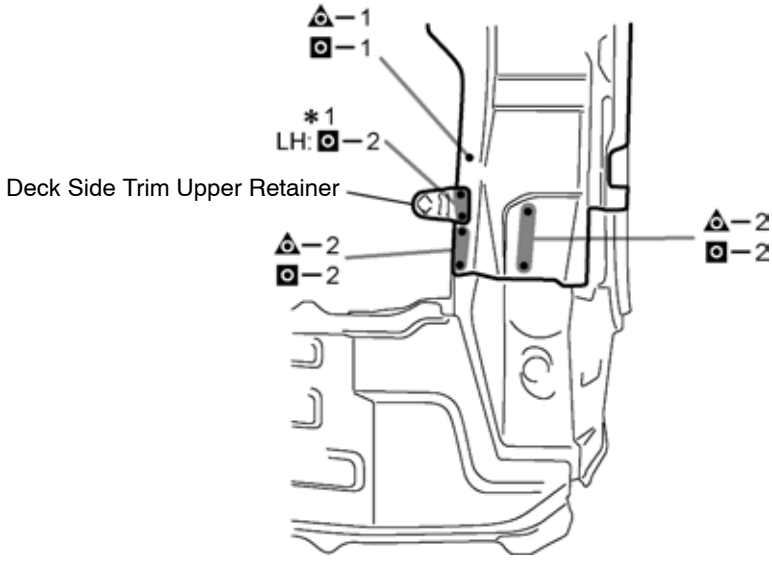

F29240

**INSTALLATION POINT**

1 *1 is only for installation.

2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# ROOF SIDE INNER REAR PANEL (ASSY)

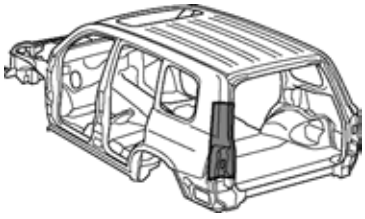

F29669A


With the quarter panel reinforcement removed.

Symbol meaning

| | |
|---|---|
| REMOVAL | ▲ ▲ : Remove Weld Points |
| INSTALLATION | ■ ■ : Plug Weld |

F29241B

**REMOVAL·INSTALLATION**

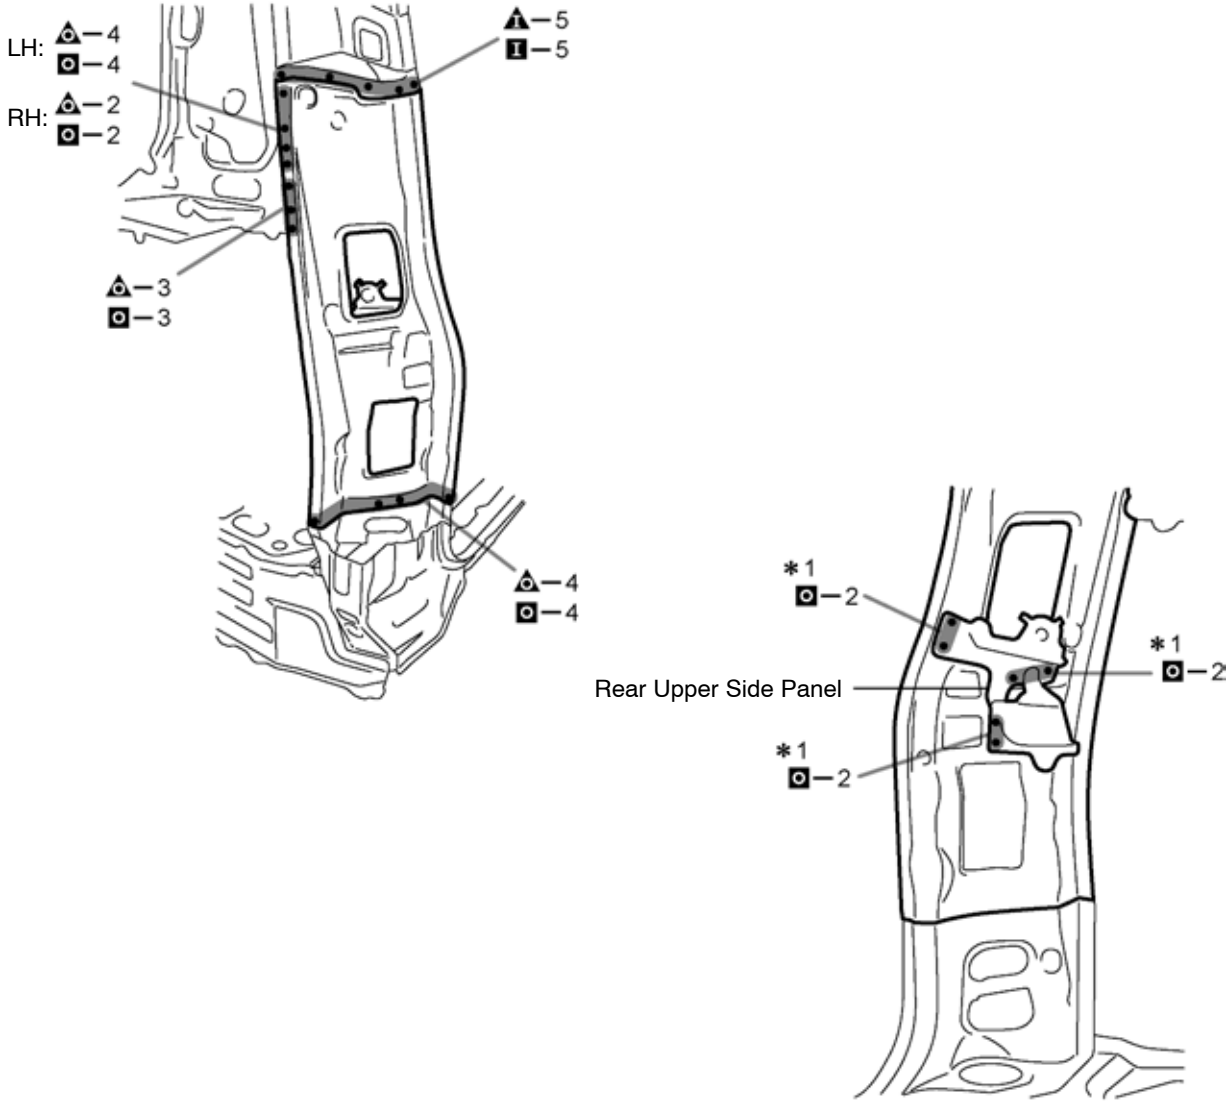


F29662

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 *1 is only for installation.
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# BODY LOWER BACK PANEL (CUT)




F29670A

Symbol meaning

| | | |
|---|---|---|
| REMOVAL | : Remove Weld Points | : Cut and Join Location |
| INSTALLATION | : Spot Weld : Plug Weld | : Butt Weld |

F29242B

**REMOVAL·INSTALLATION**

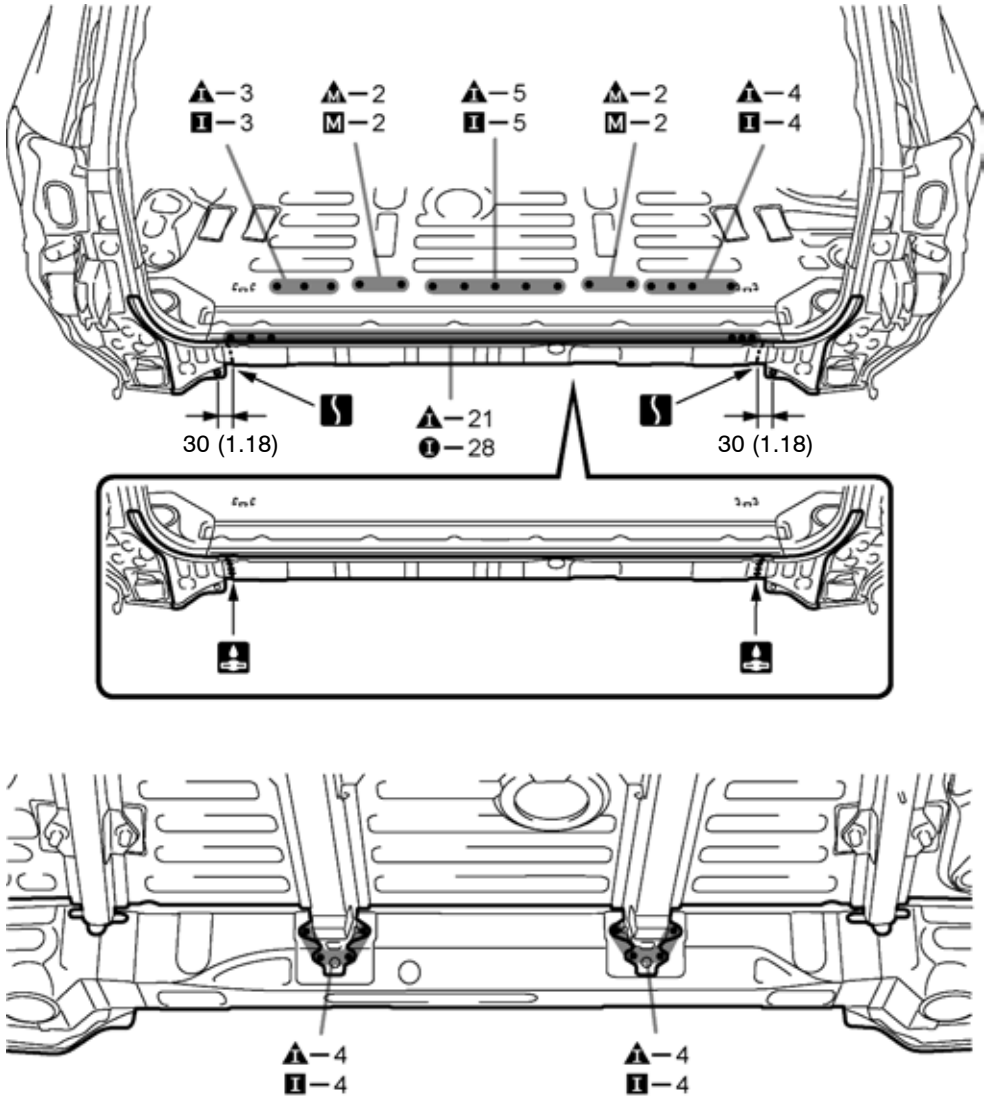


mm (in.)

F29242

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# BODY LOWER BACK PANEL (ASSY)



F29671A

With the quarter panel front extension removed.


Symbol meaning

REMOVAL : Remove Weld Points : Cut and Join Location

INSTALLATION : Spot Weld : Plug Weld : Butt Weld

F29243B

**REMOVAL·INSTALLATION**

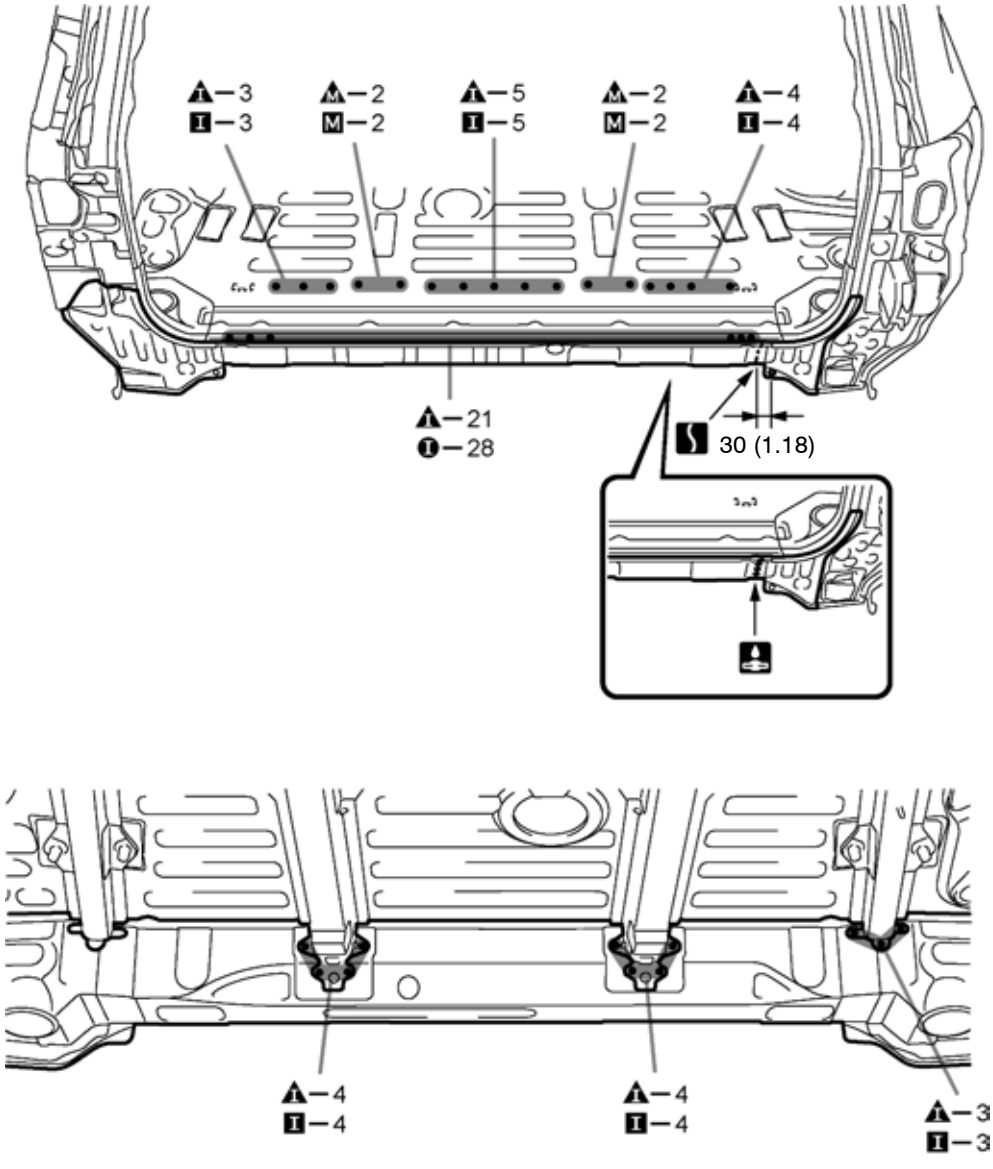


mm (in.)

F29243


**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

Symbol meaning

| | | |
|---|---|---|
| REMOVAL | : Remove Weld Points | : Cut and Join Location |
| INSTALLATION | : Spot Weld : Plug Weld | : Butt Weld |

F29243B

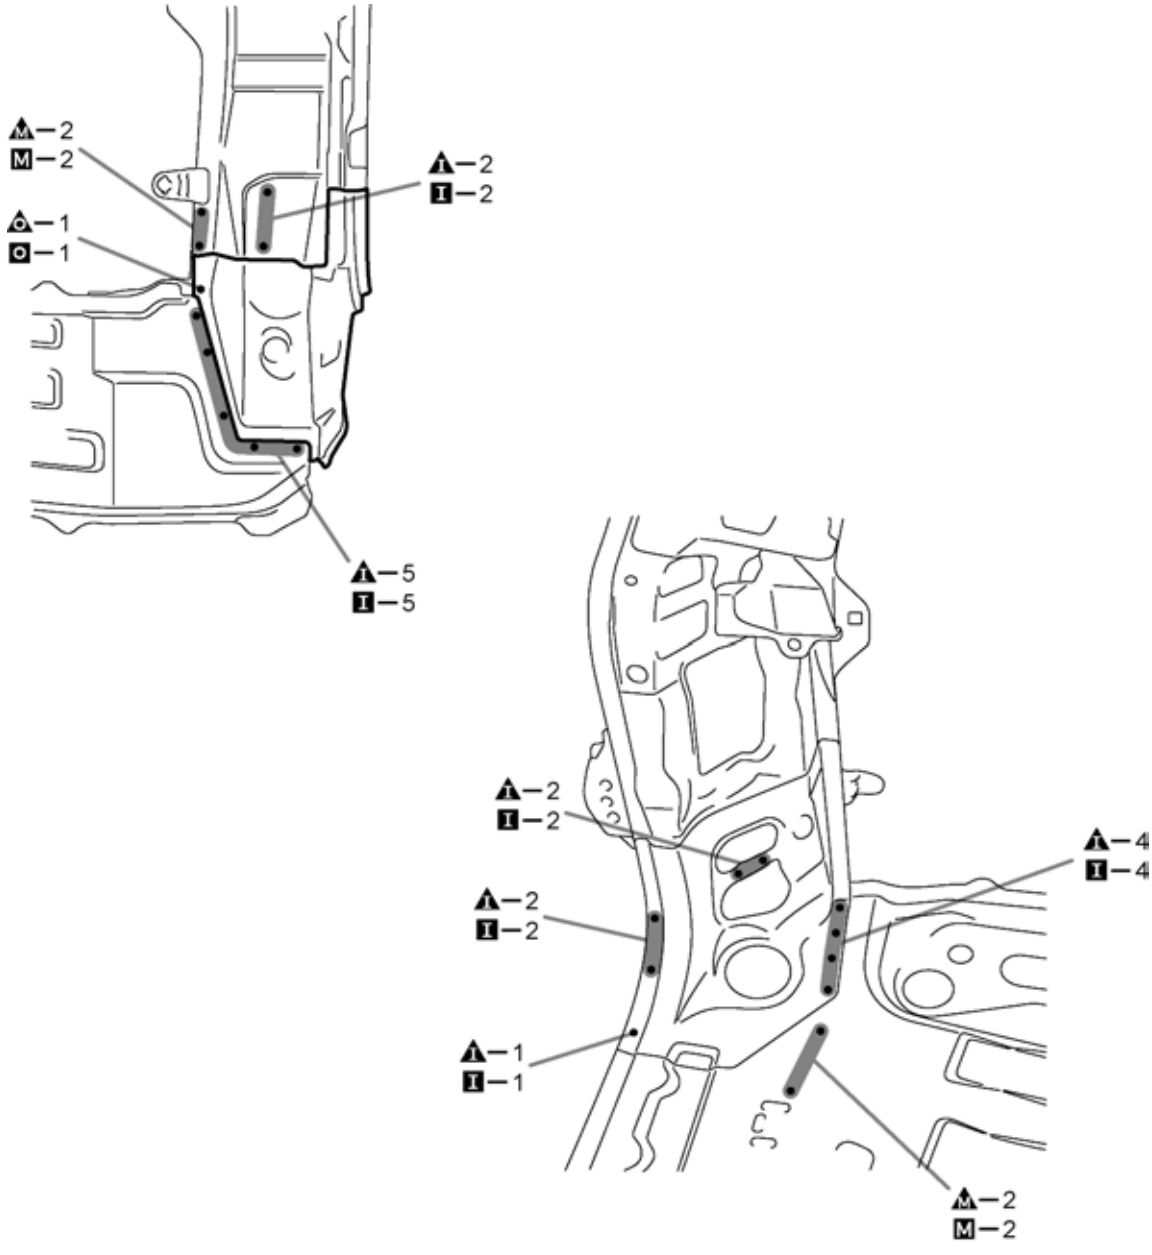


F29244

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# REAR FLOOR SIDE PANEL (ASSY)




F29627A

Symbol meaning

| | |
|---|---|
| REMOVAL | ▲ : Remove Weld Points |
| INSTALLATION | ● : Plug Weld |

F29245B

**REMOVAL·INSTALLATION**

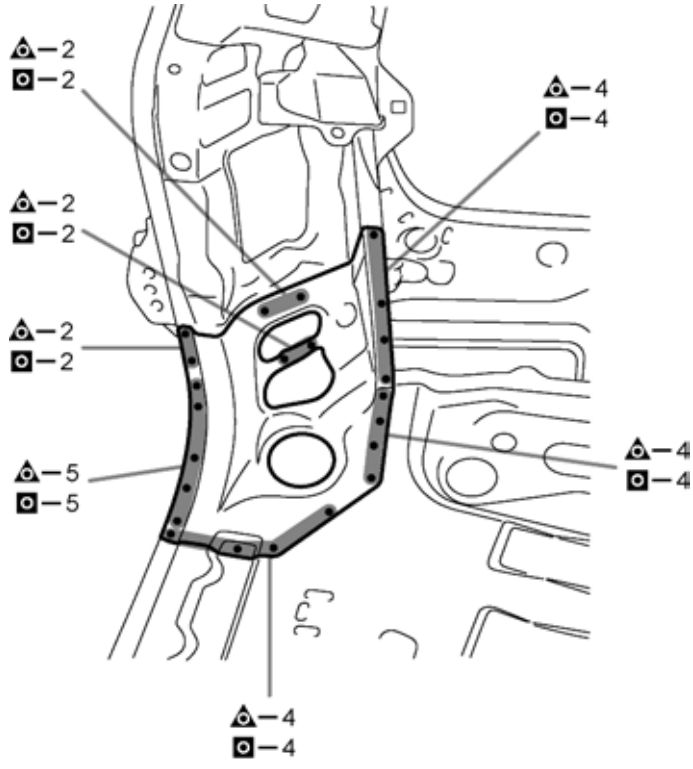



F29245

**INSTALLATION POINT**

1 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# REAR FLOOR PAN (CUT)

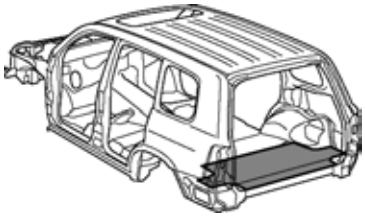

F29673A


With the body lower back panel and rear foor side panel removed.


Symbol meaning


: Remove Weld Points : Cut Location

F29246B

**REMOVAL**

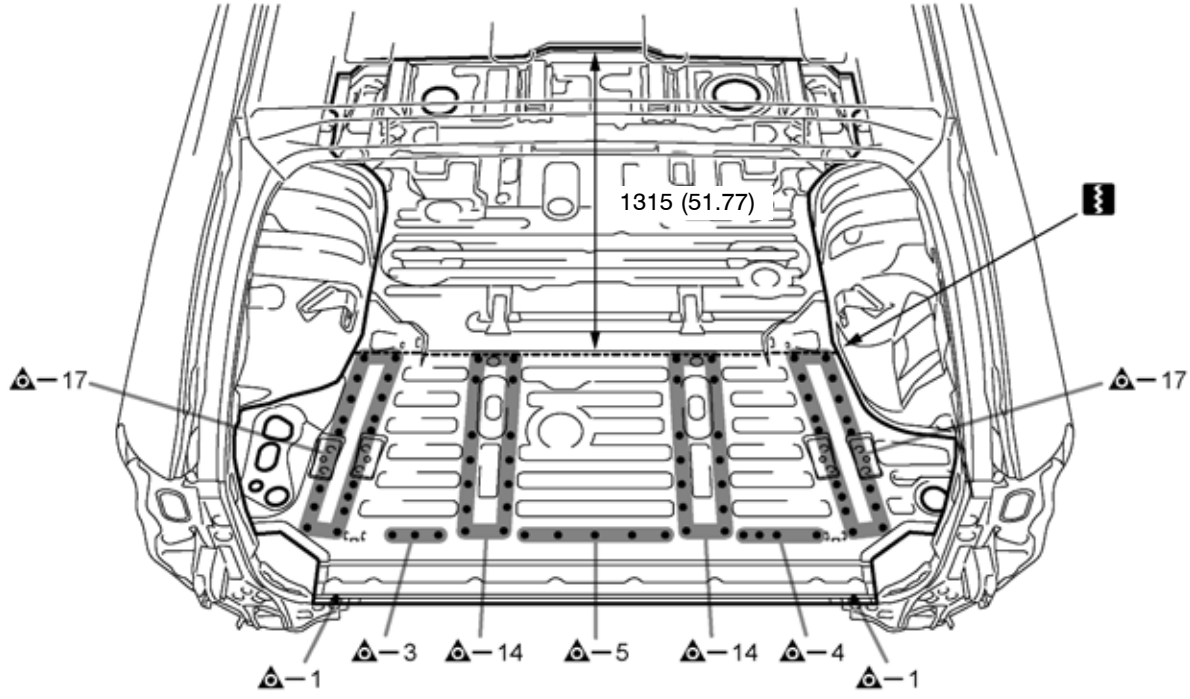

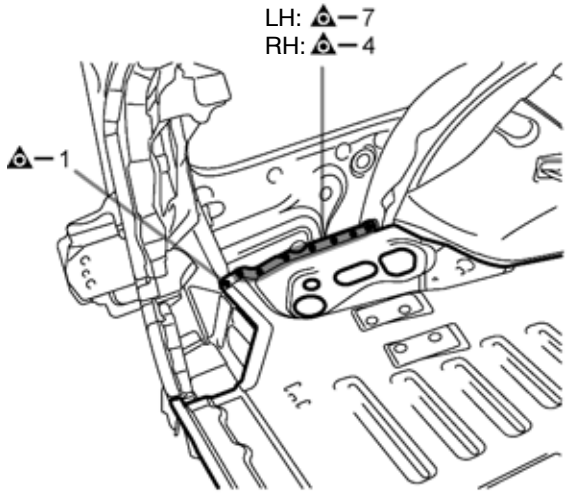
mm (in.)

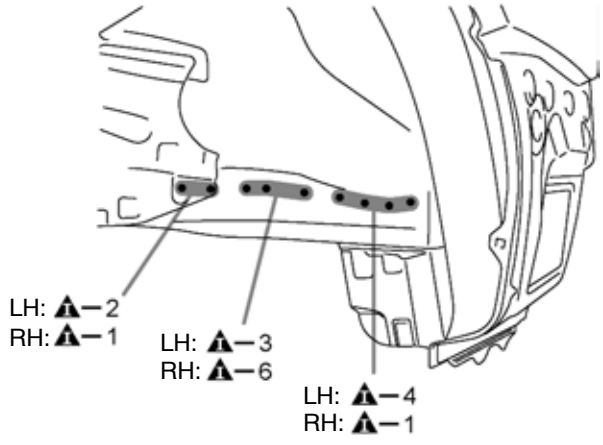
F29246

Symbol meaning

: Plug Weld : Cut Location : Body Sealer

F29247B

**INSTALLATION**

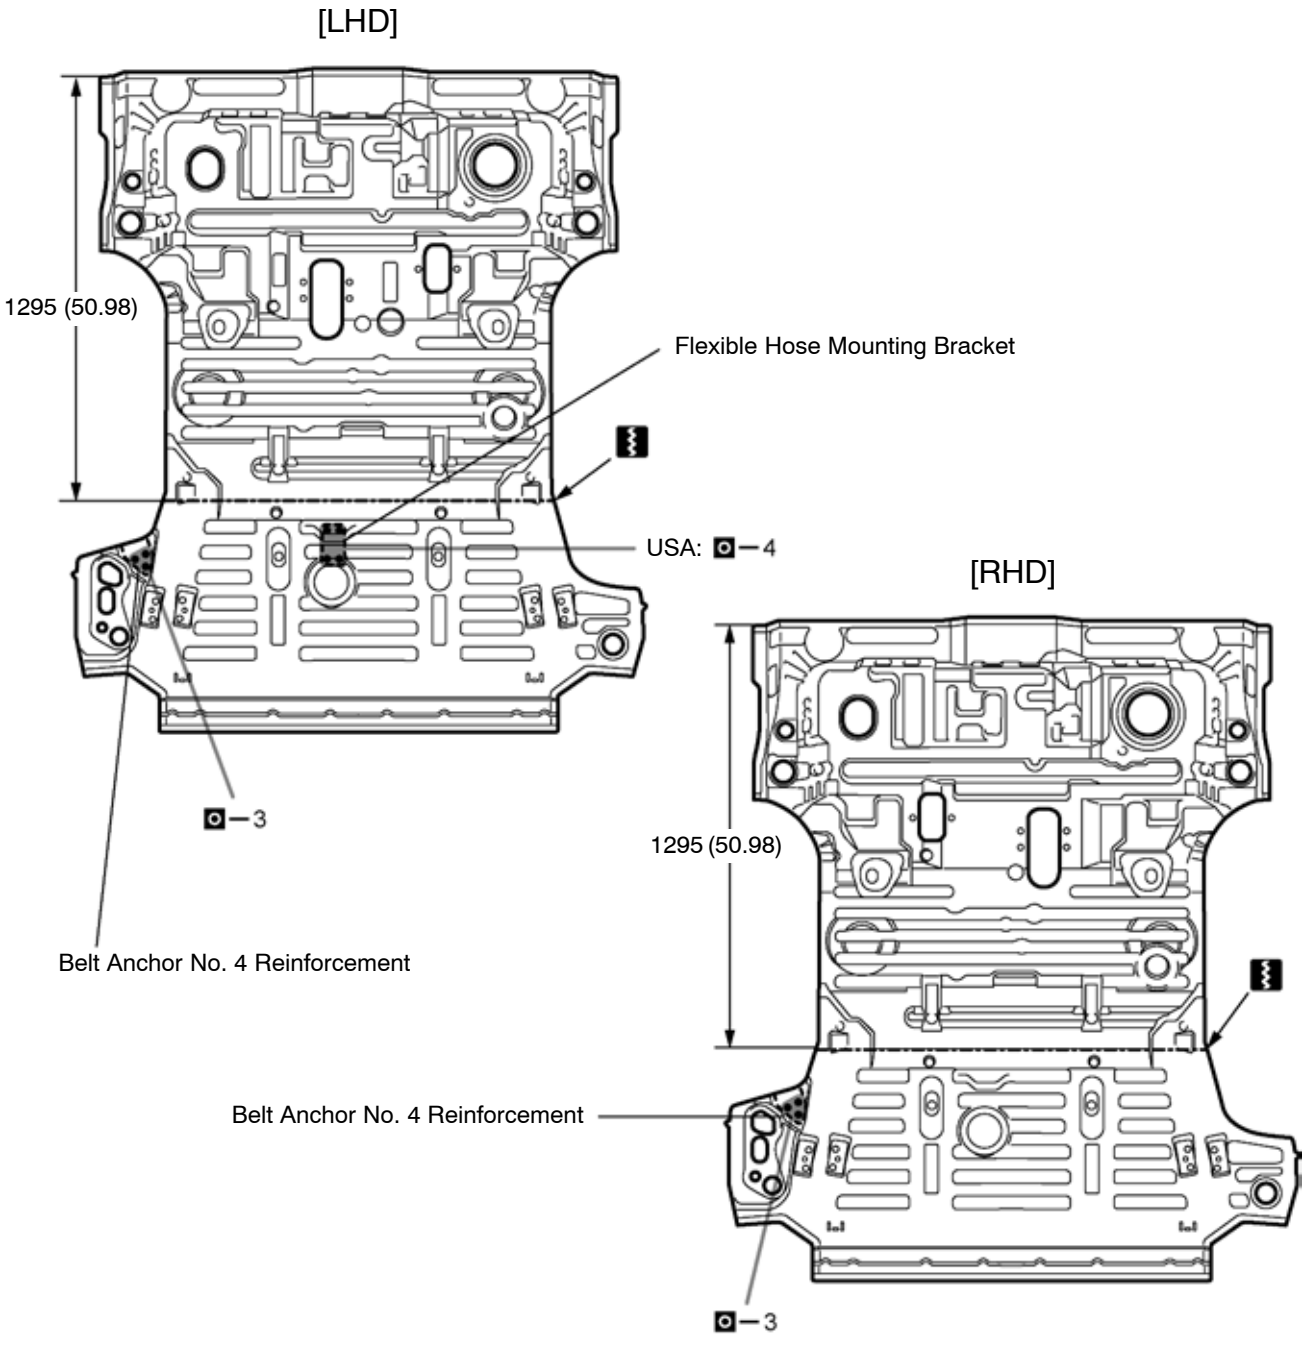


F29663


**INSTALLATION POINT**

1 Cut the new part so that it overlaps the previous cut location by approximately 20 mm (0.79 in).
2 Before temporarily installing the new parts, weld the belt anchor No. 4 reinforcement and flexible hose mounting bracket with the standard number of welding points.

Symbol meaning

: Plug Weld : Cut Location : Body Sealer

F29247B

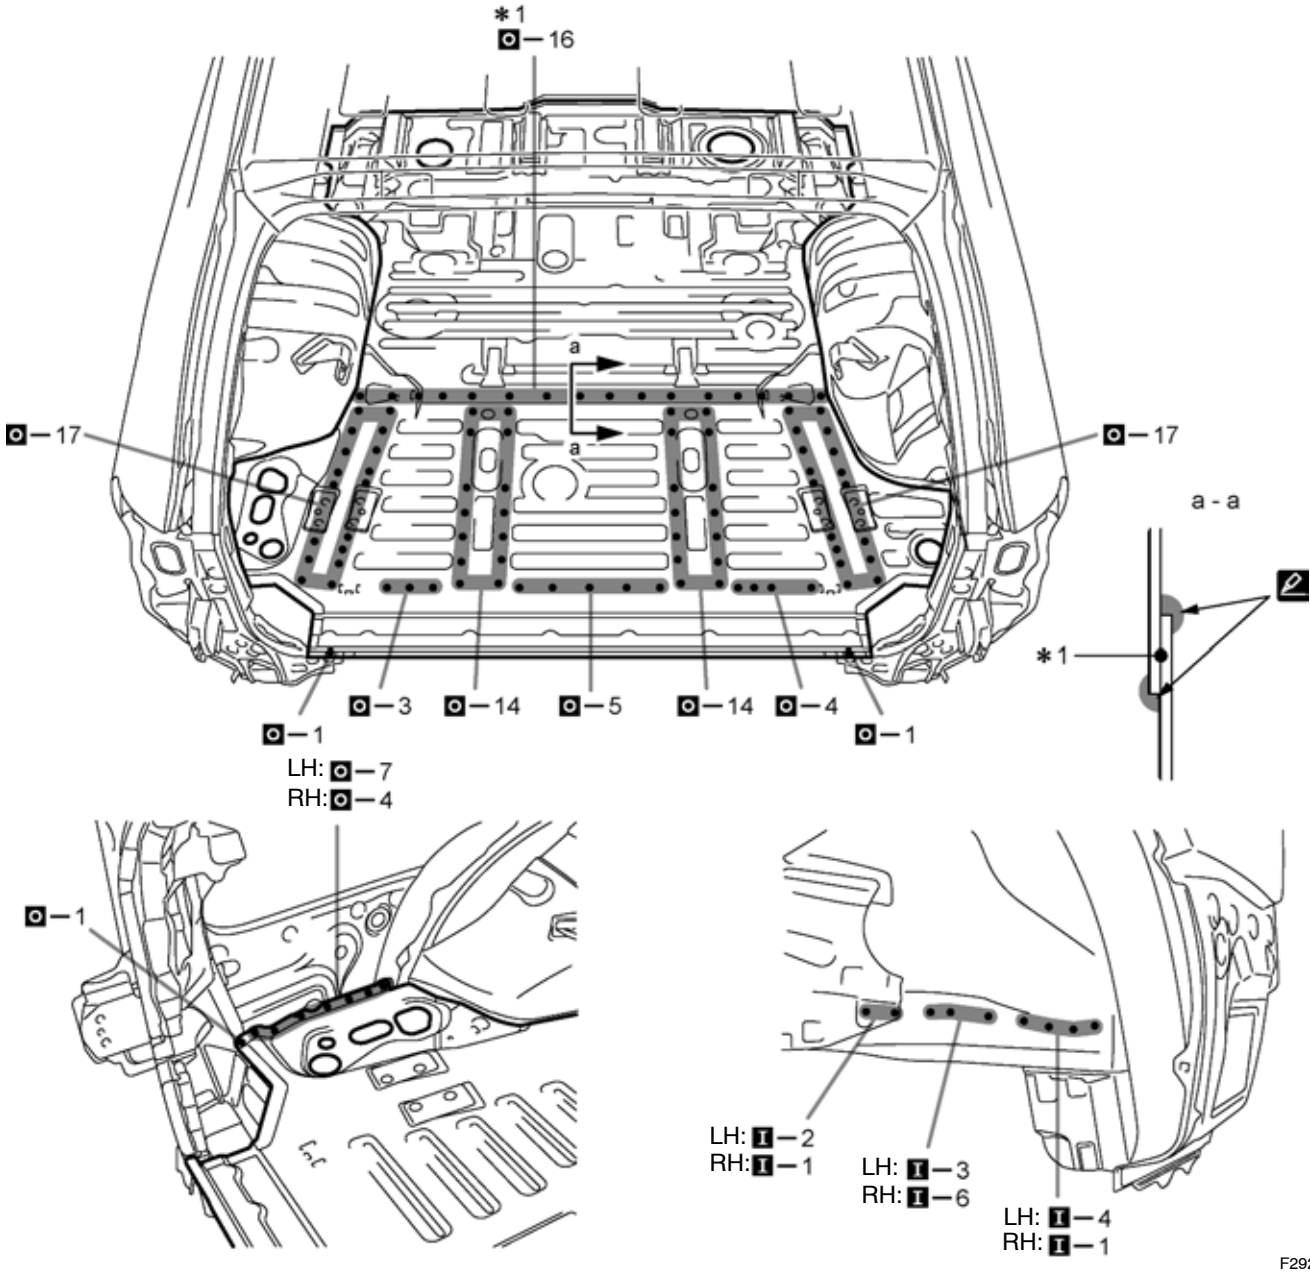


F29248

**INSTALLATION POINT**

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

2 *1: Perform plug-welding in the area where the panel are overlapped. Apply body sealer to both sides of each panel.

*HINT:*

- *Confirm that the panels are securely welded together.*
- *Apply sealer in an even, continuous bead.*

2 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)

3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# REAR FLOOR SIDE PANEL REAR EXTENSION (ASSY)



F29674A

With the quarter panel removed.


Symbol meaning


| | |
|---|---|
| REMOVAL | ▲ ▲ : Remove Weld Points |
| INSTALLATION | ● ❶ : Spot Weld ■ ❶ : Plug Weld |

F29249B

**REMOVAL·INSTALLATION**

[LH]

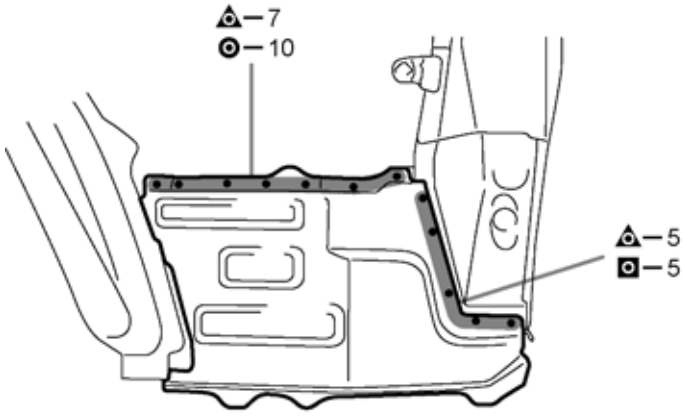

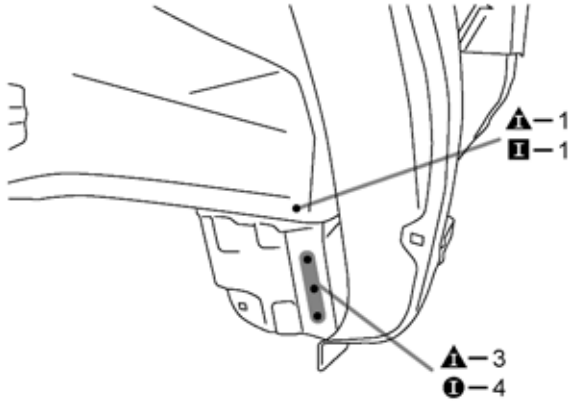
F29249

**INSTALLATION POINT**


1 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.


Symbol meaning

| | |
|---|---|
| REMOVAL | : Remove Weld Points |
| INSTALLATION | : Spot Weld : Plug Weld |

F29249B

[RH]

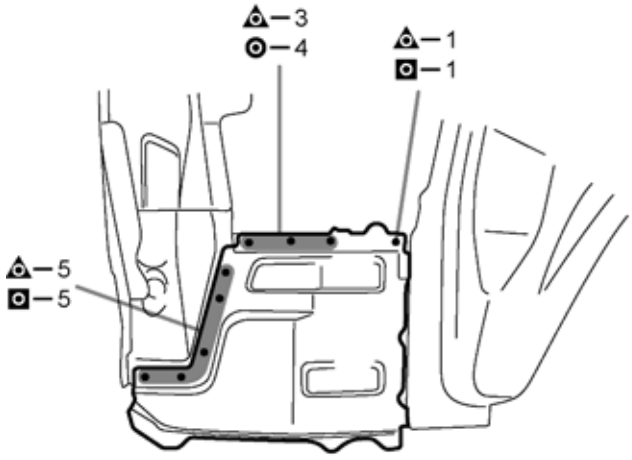

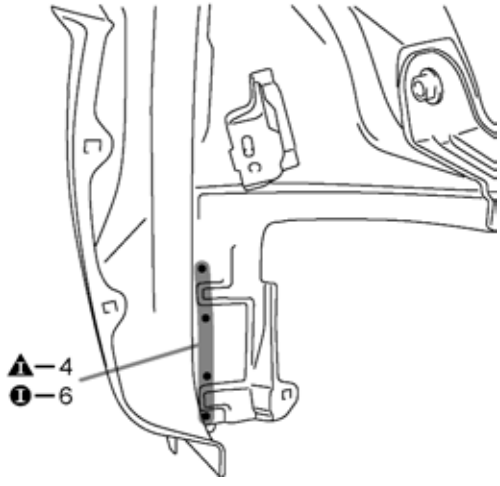
F29250

**INSTALLATION POINT**

1 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# REAR FLOOR SIDE MEMBER (ASSY)



F29675A


With the rear floor pan removed.

Symbol meaning

| | |
|---|---|
| REMOVAL | : Remove Weld Points |
| INSTALLATION | : Plug Weld |

F29251B

**REMOVAL·INSTALLATION**

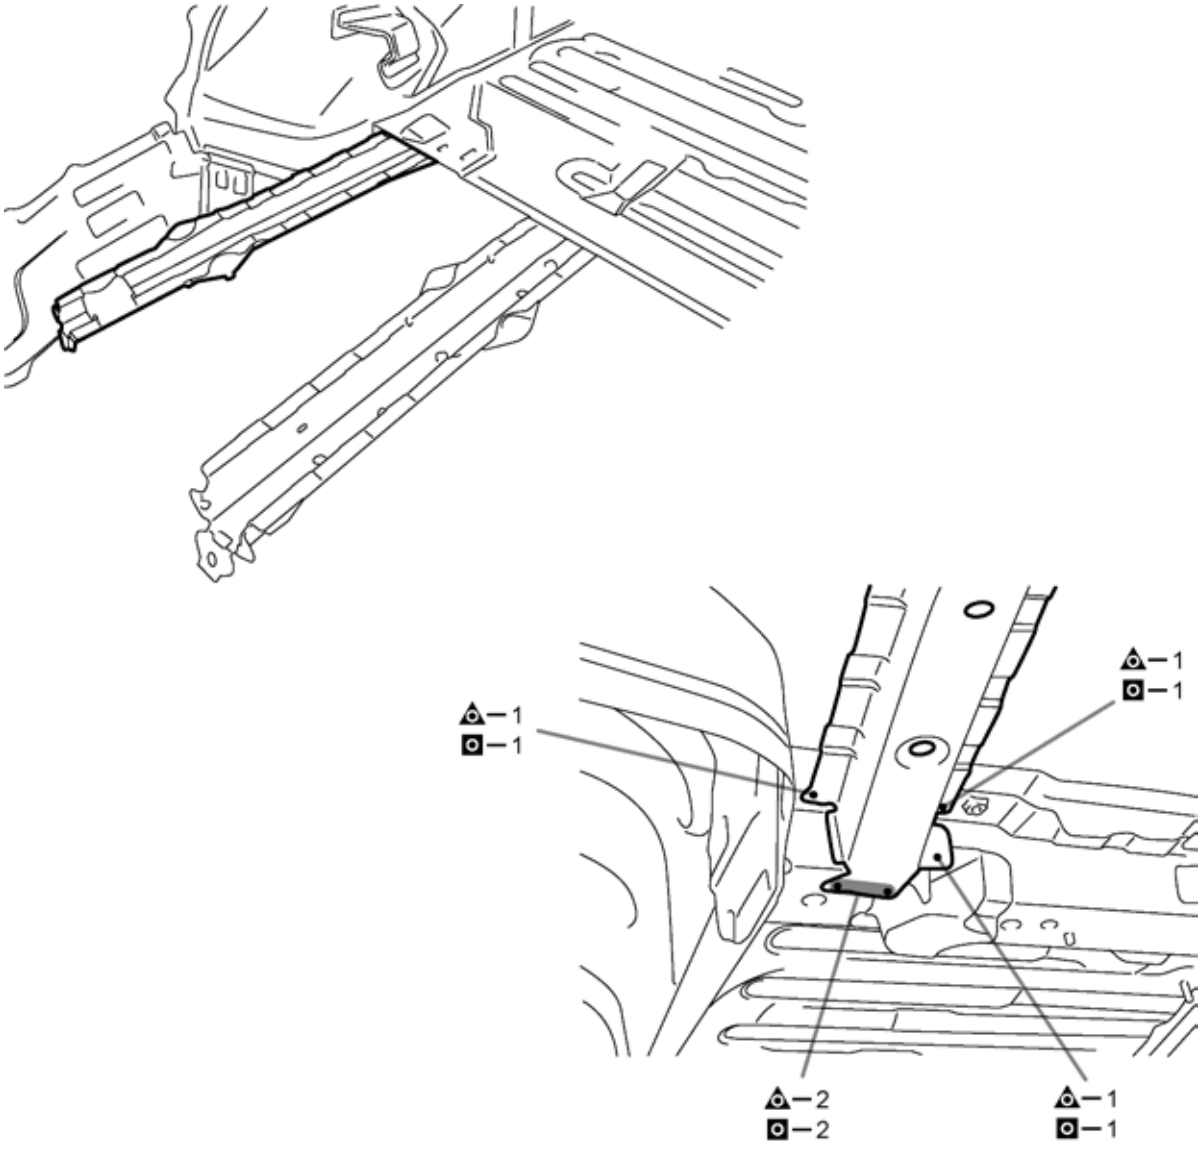


F29251

**INSTALLATION POINT**

1 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# REAR FLOOR NO. 5 CROSSMEMBER (ASSY)



F29676A


With the rear floor pan removed.

Symbol meaning

| | |
|---|---|
| REMOVAL | ▲ : Remove Weld Points |
| INSTALLATION | ■ : Plug Weld |

F29252B

**REMOVAL·INSTALLATION**

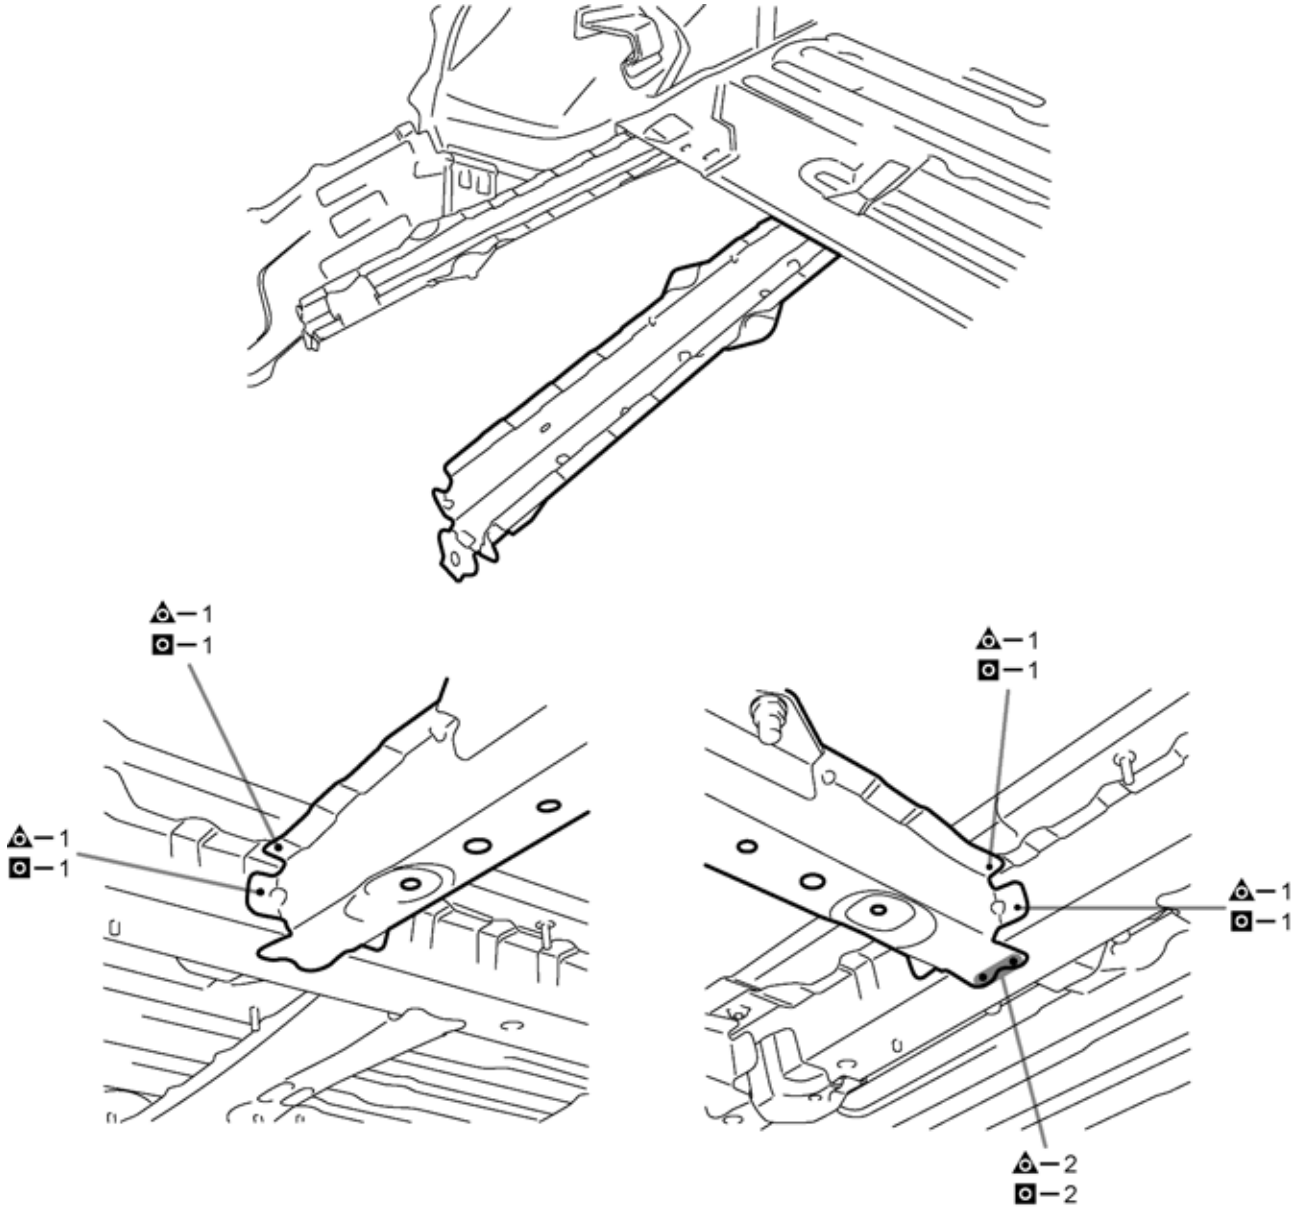



F29252

**INSTALLATION POINT**

1 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# ROOF PANEL (ASSY)

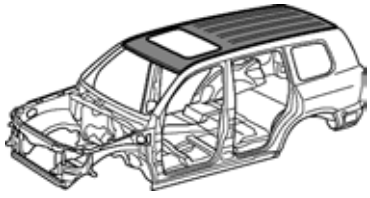


F29255A

Symbol meaning

: Remove Weld Points

F29255B

**REMOVAL**

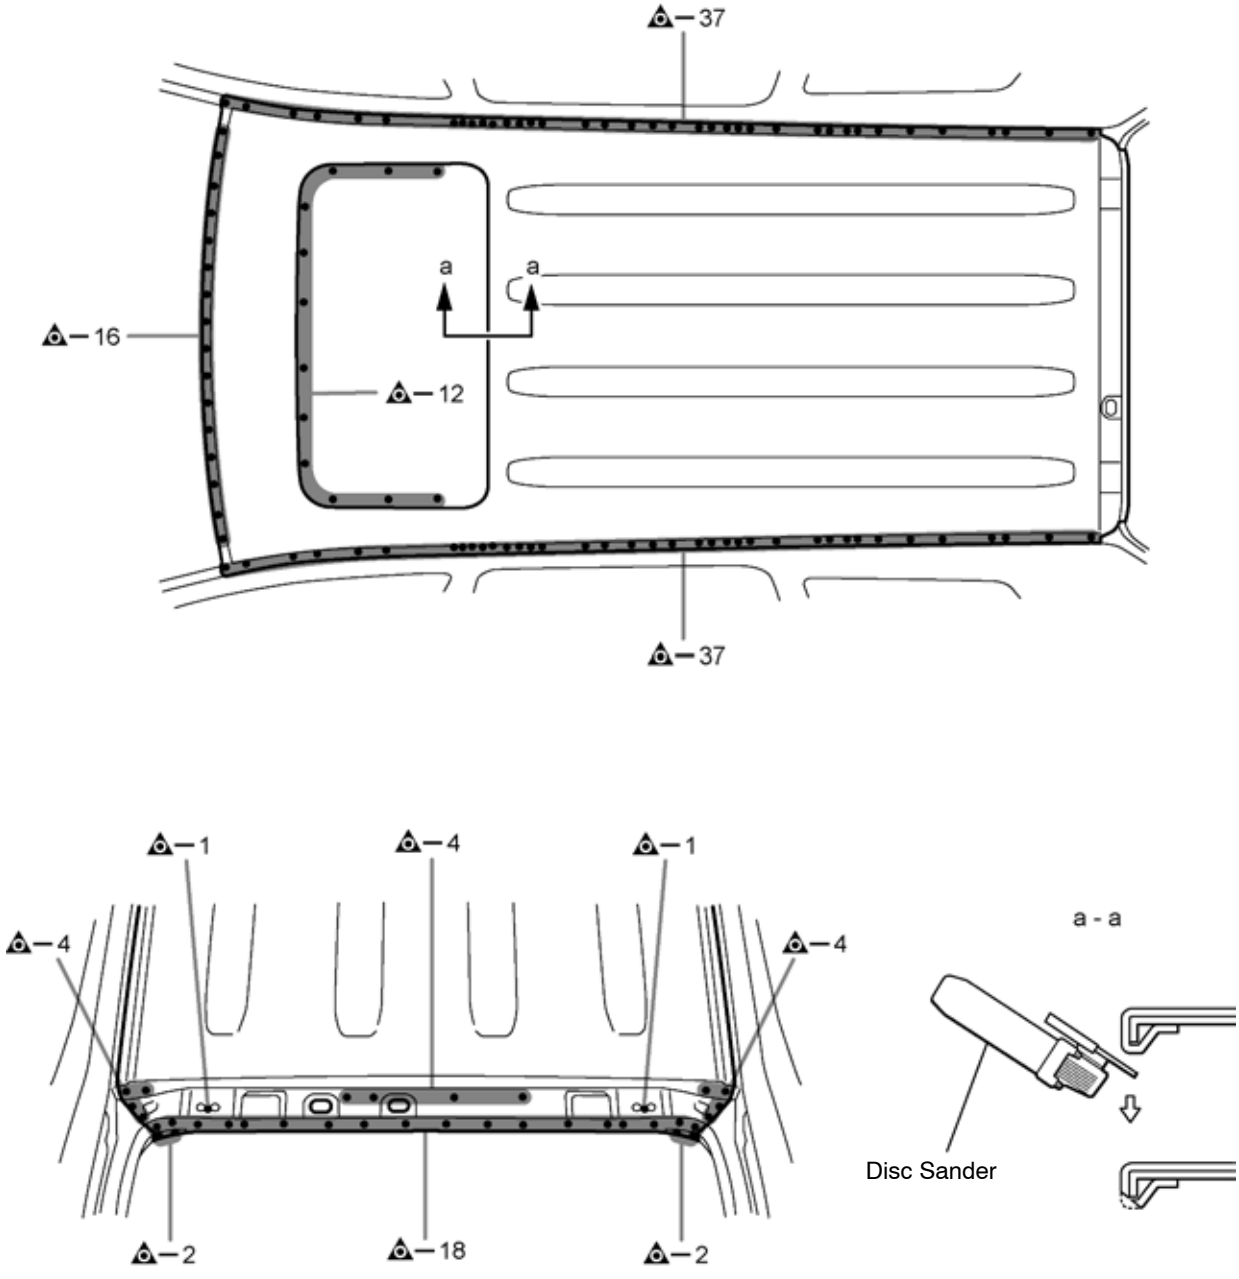


F29255

**REMOVAL POINT**


1 If reusing the roof panel reinforcement, trim the hemming location using a disc sander, etc.

Symbol meaning

: Plug Weld : Body Sealer

F29256B

**INSTALLATION**

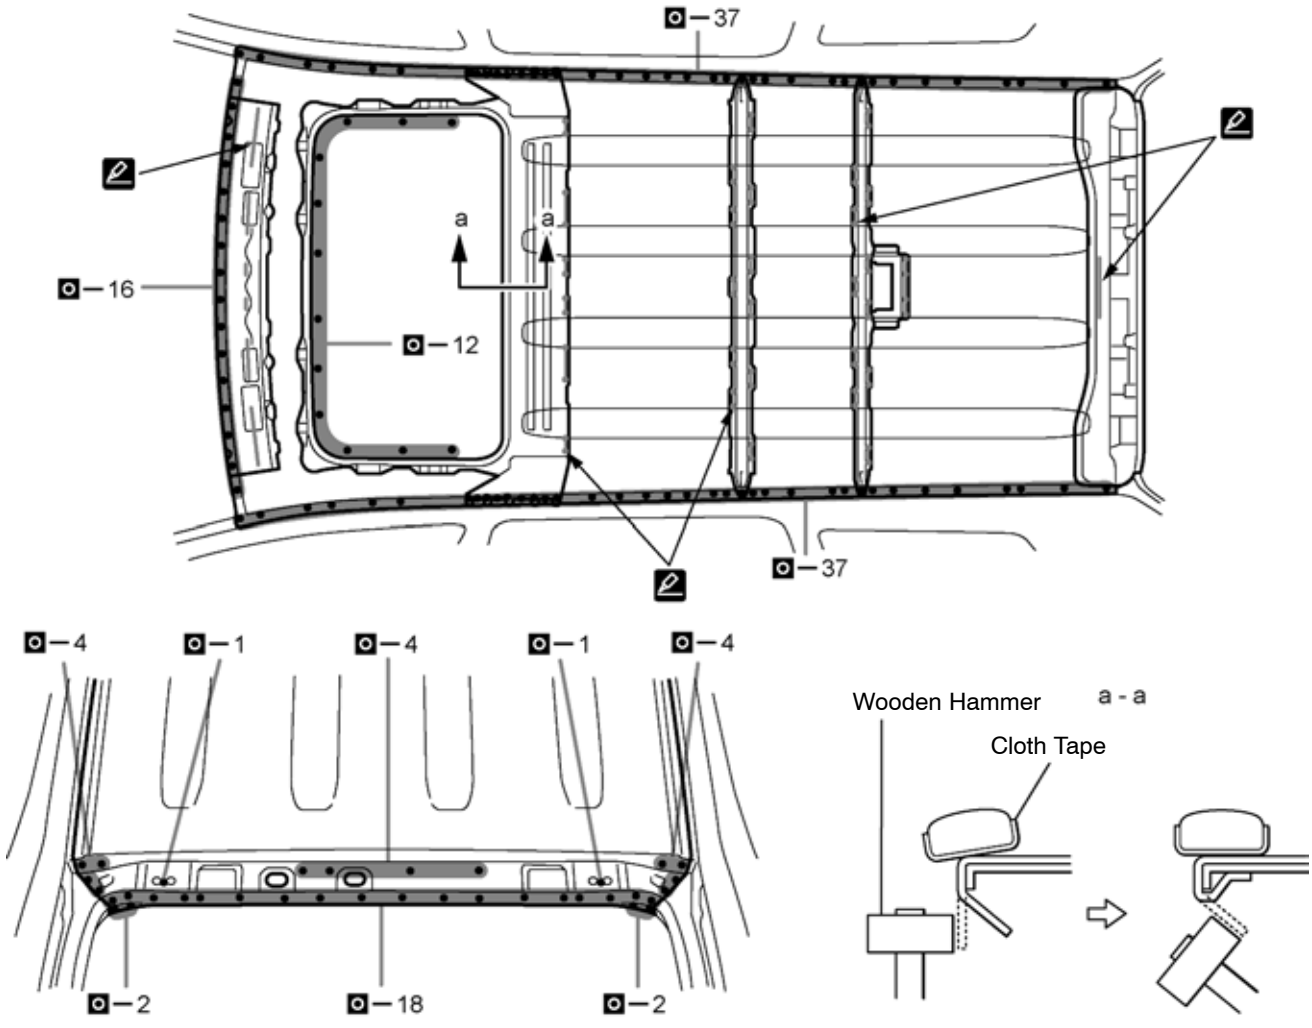



F29256

**INSTALLATION POINT**

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After the roof panel reinforcement is welded to the new parts, install the roof panel to the vehicle side.
4 Before temporarily installing the new parts, apply body sealer to the windshield header panel, roof panel reinforcement and back door opening frame.
*HINT:*
*Apply just enough sealer for the new parts to make contact.*
5 After welding, apply body sealer to the corresponding parts. (See the paint·coating)
6 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# FRAME SIDE RAIL PLATE (ASSY)

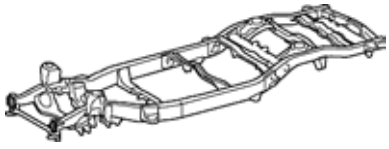


F29257A


Symbol meaning


: Cut with Disc Sander etc.

F29257B

**REMOVAL**

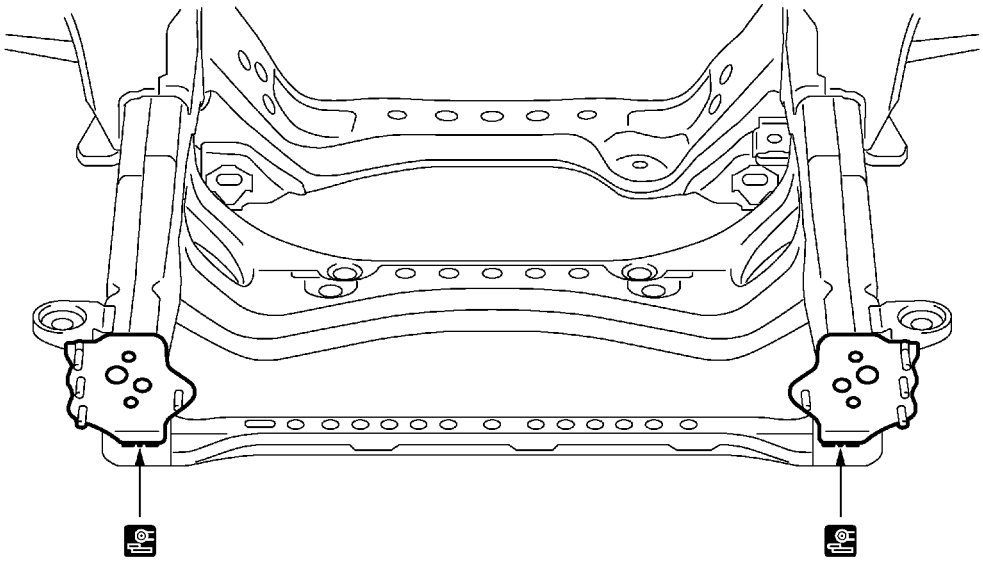

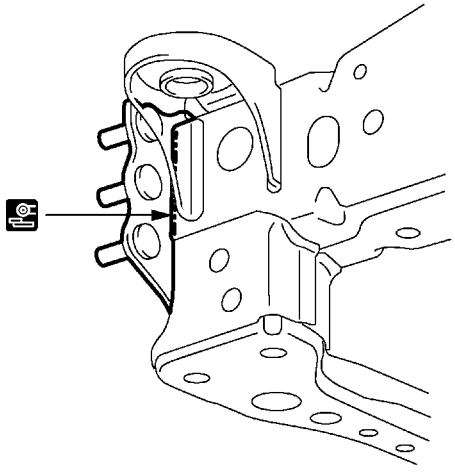

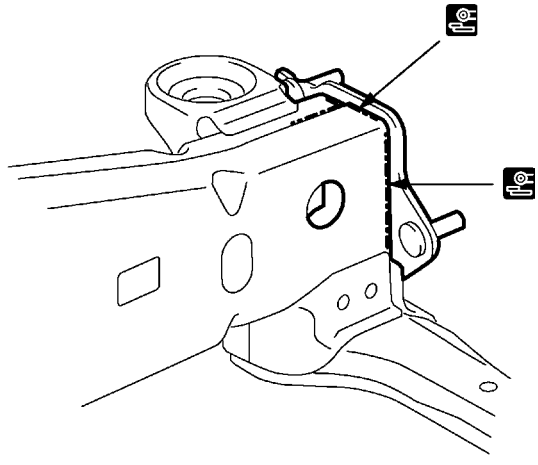


F29257

Symbol meaning

: Fillet Weld

F29258B

**INSTALLATION**

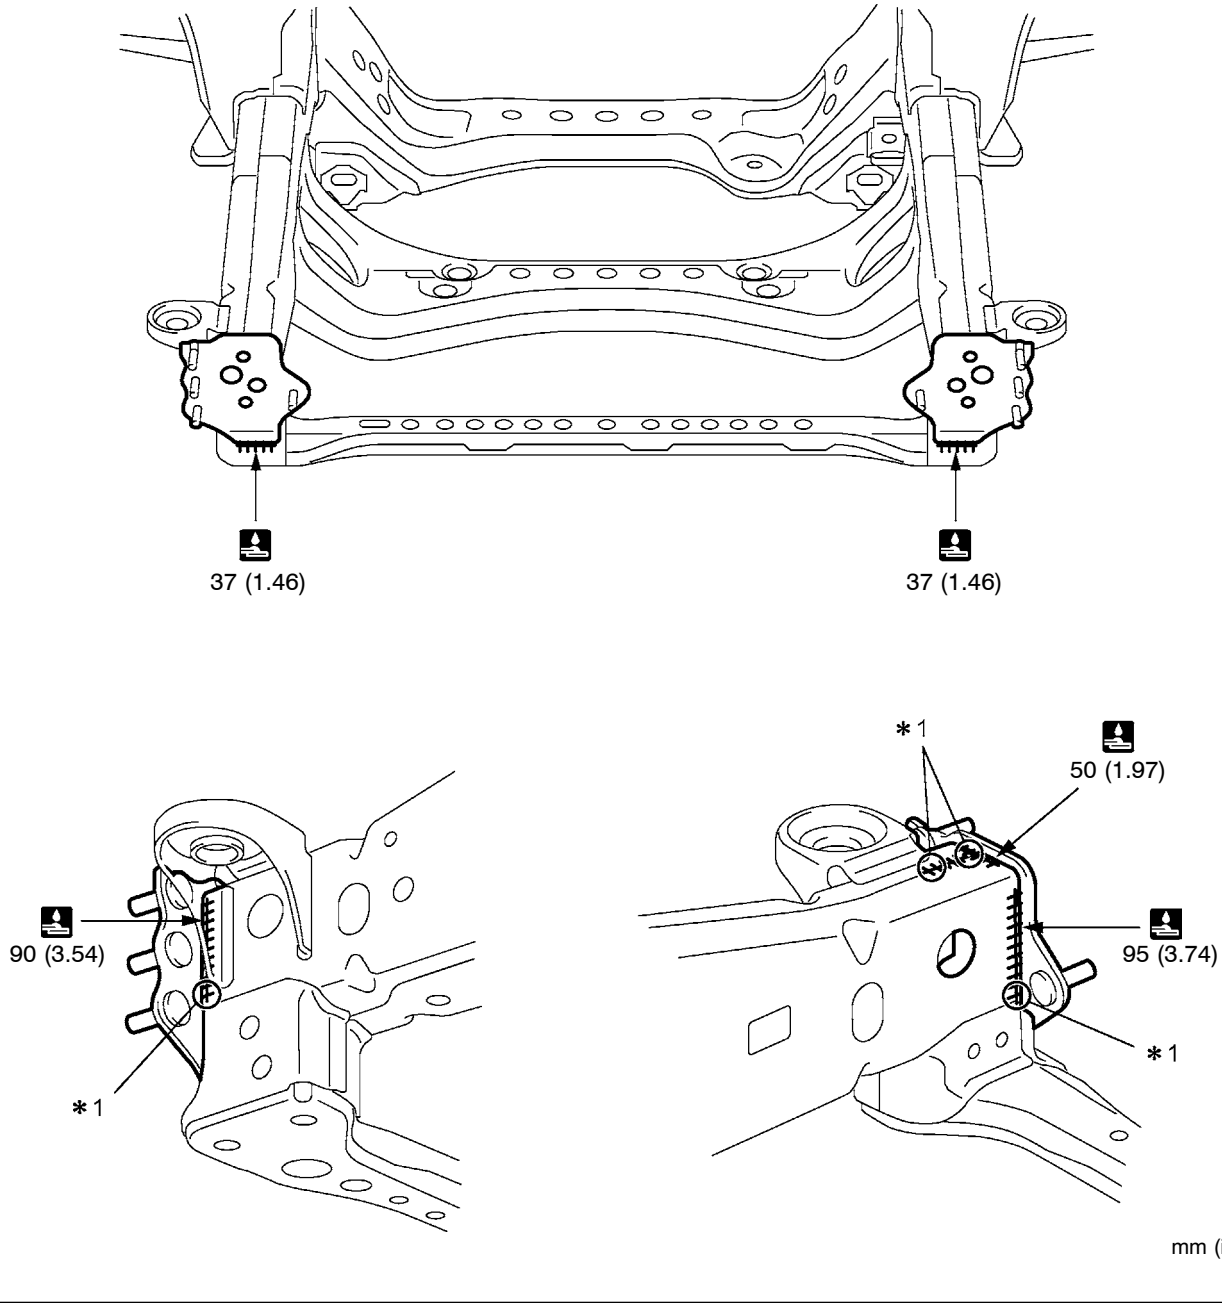



F29258

**INSTALLATION POINT**

1 Make sure that proper welding can be performed by setting up the welding conditions as necessary before performing work.
2 Make sure that the welding bead at *1 is overlapped.
3 To prevent heat deformation, weld the right and left side of each part before continuing to the next part.
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# FRAME AUXILIARY CROSSMEMBER (ASSY)

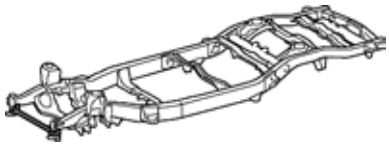

F29259A


With the frame side rail plate removed.


Symbol meaning


: Cut with Disc Sander etc.

F29259B

**REMOVAL**

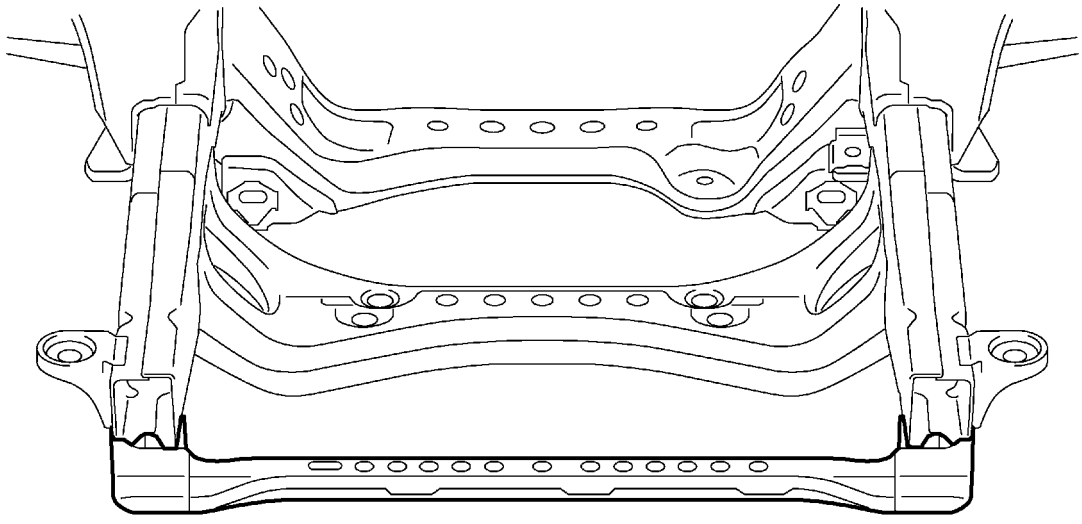

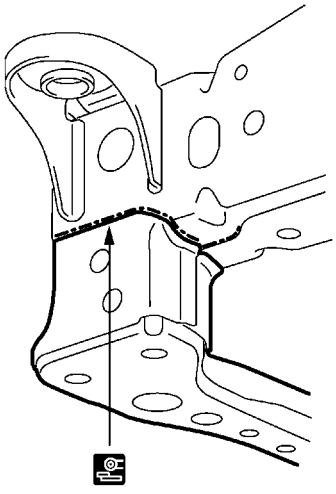

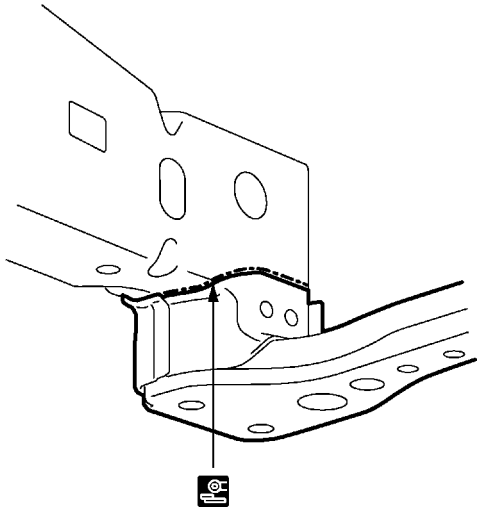


F29259


Symbol meaning

: Fillet Weld

F29260B

**INSTALLATION**

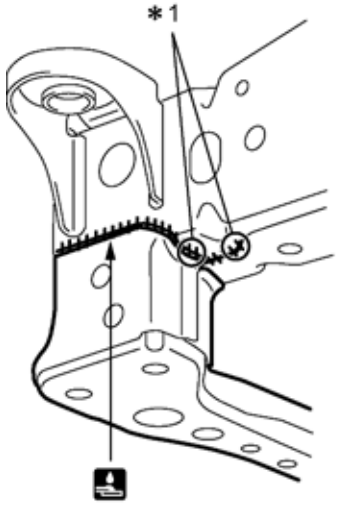

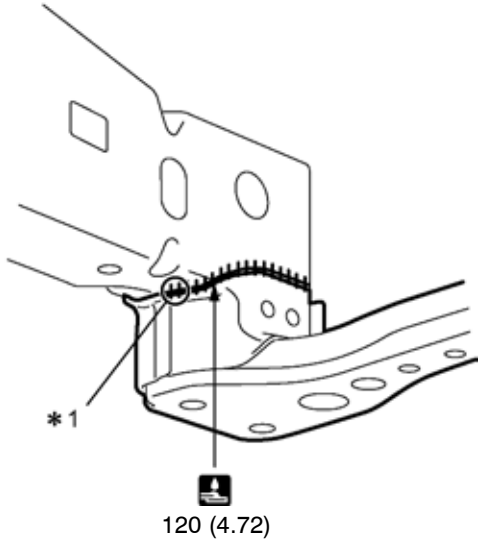




mm (in.)

F29260

**INSTALLATION POINT**

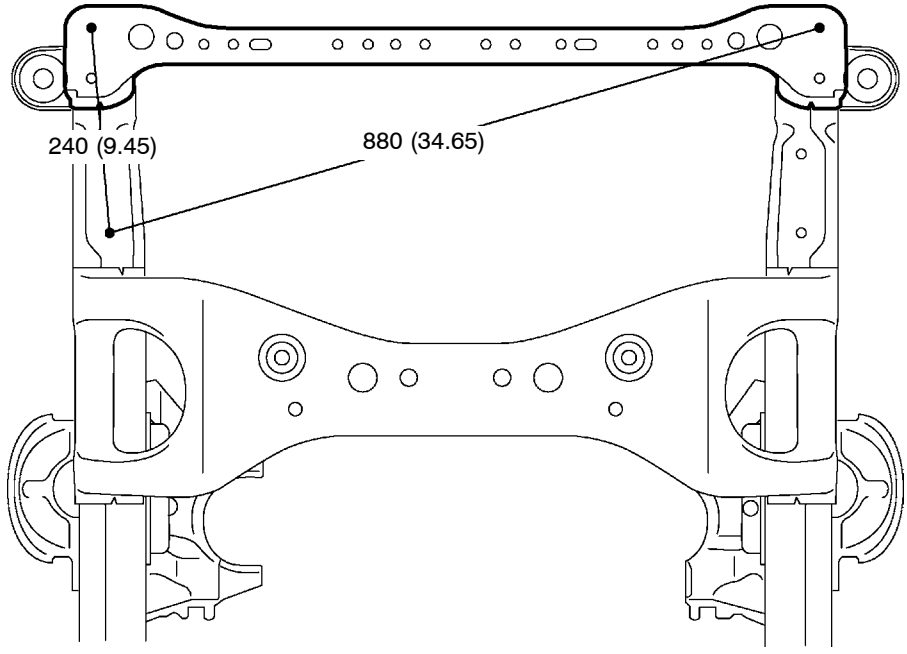1 Make sure that proper welding can be performed by setting up the welding conditions as necessary before performing work.
2 Make sure that the welding bead at *1 is overlapped.
3 To prevent heat deformation, weld the right and left side of each part before continuing to the next part.
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.





mm (in.)

F29261

**INSTALLATION POINT**

1 These values are reference values.

# CAB MOUNTING NO. 1 BRACKET (ASSY)

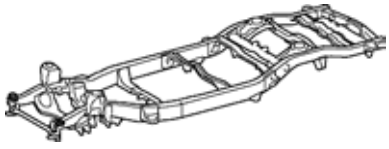

F29265A


With the frame side rail plate removed.

Symbol meaning

: Cut with Disc Sander etc.

F29265B

**REMOVAL**

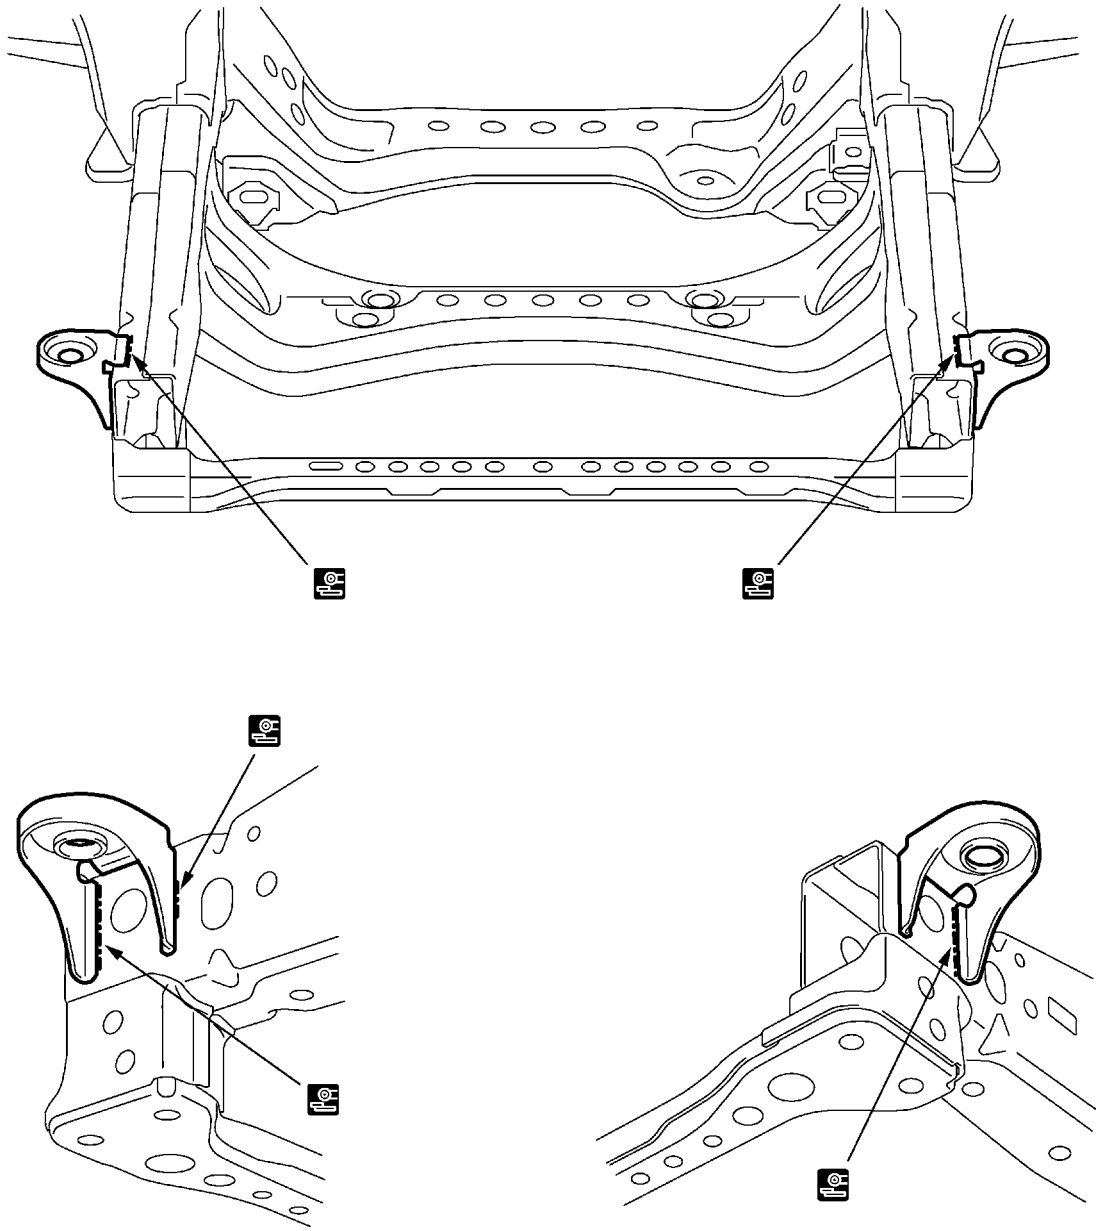


F29265

Symbol meaning

: Fillet Weld

F29266B

## INSTALLATION

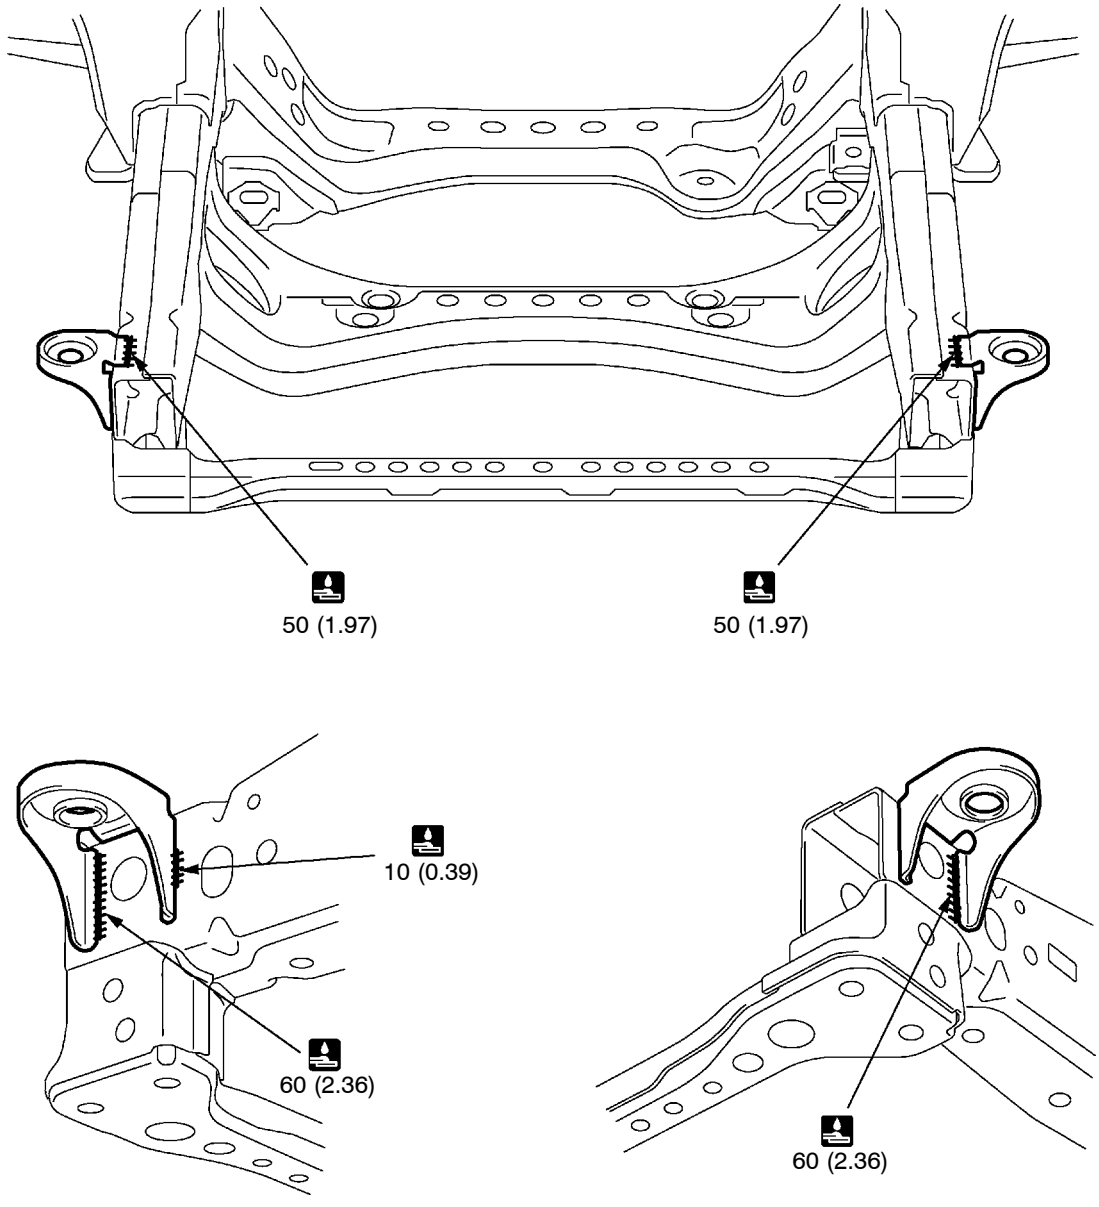



mm (in.)

F29266

### INSTALLATION POINT

1 Make sure that proper welding can be performed by setting up the welding conditions as necessary before performing work.
2 Before installing the cab mounting No. 1 brackets, set the cab (upper body) on the vehicle frame and confirm the cab mounting No. 1 brackets' installation positions.
3 To prevent heat deformation, weld the right and left side of each part before continuing to the next part.
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

# FRAME REAR BUMPER REINFORCEMENT (ASSY)

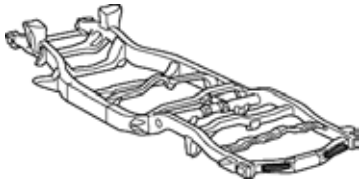


F29267A


Symbol meaning


: Cut with Disc Sander etc.

F29267B

**REMOVAL**

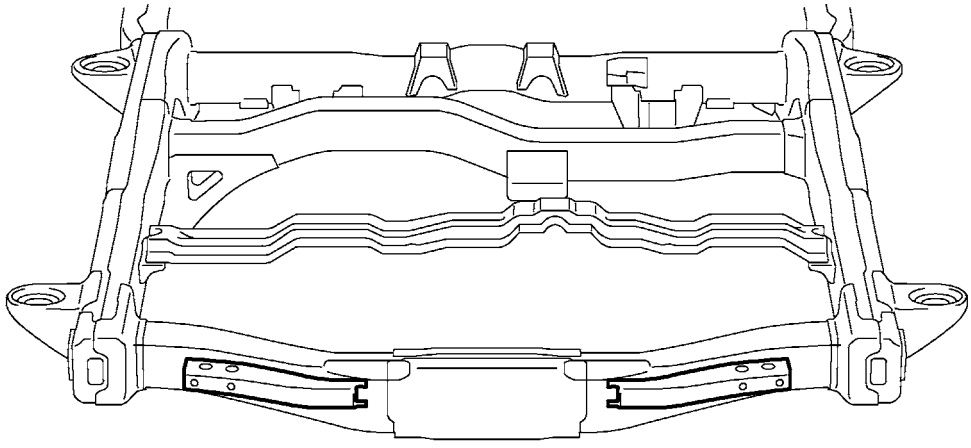

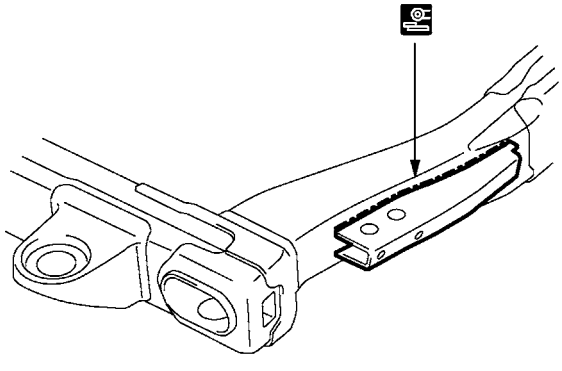

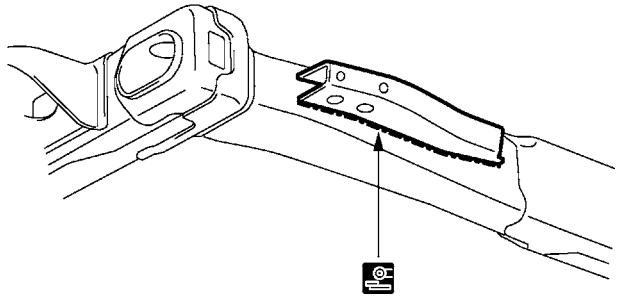


F29267

Symbol meaning

: Fillet Weld

F29268B

**INSTALLATION**

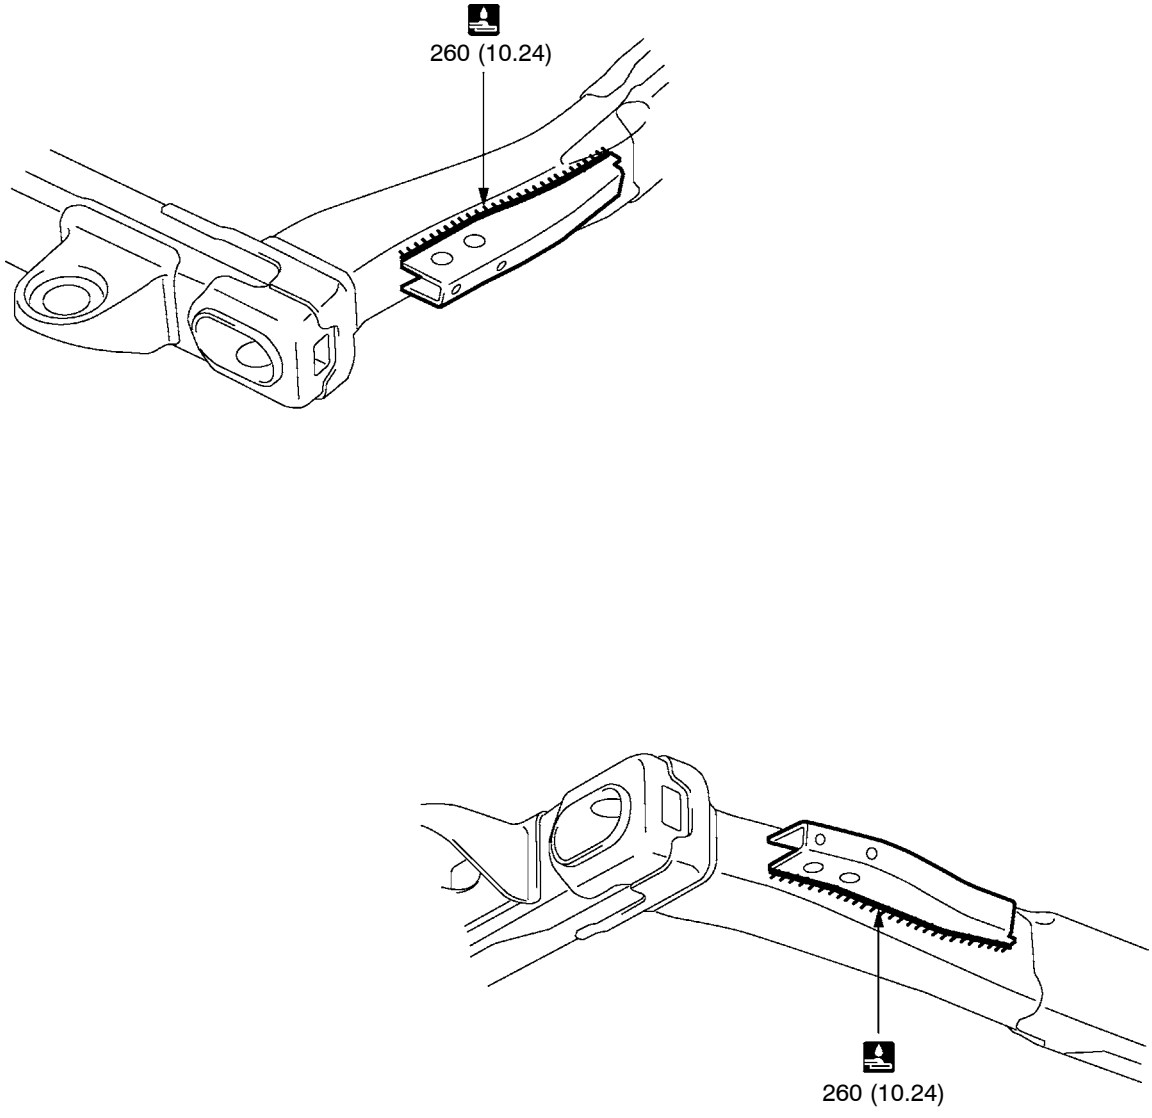



mm (in.)

F29268

**INSTALLATION POINT**


1 Make sure that proper welding can be performed by setting up the welding conditions as necessary before performing work.
2 To prevent heat deformation, weld the right and left side of each part before continuing to the next part.
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.


# OUTER PANEL INSTALLATION TORQUE

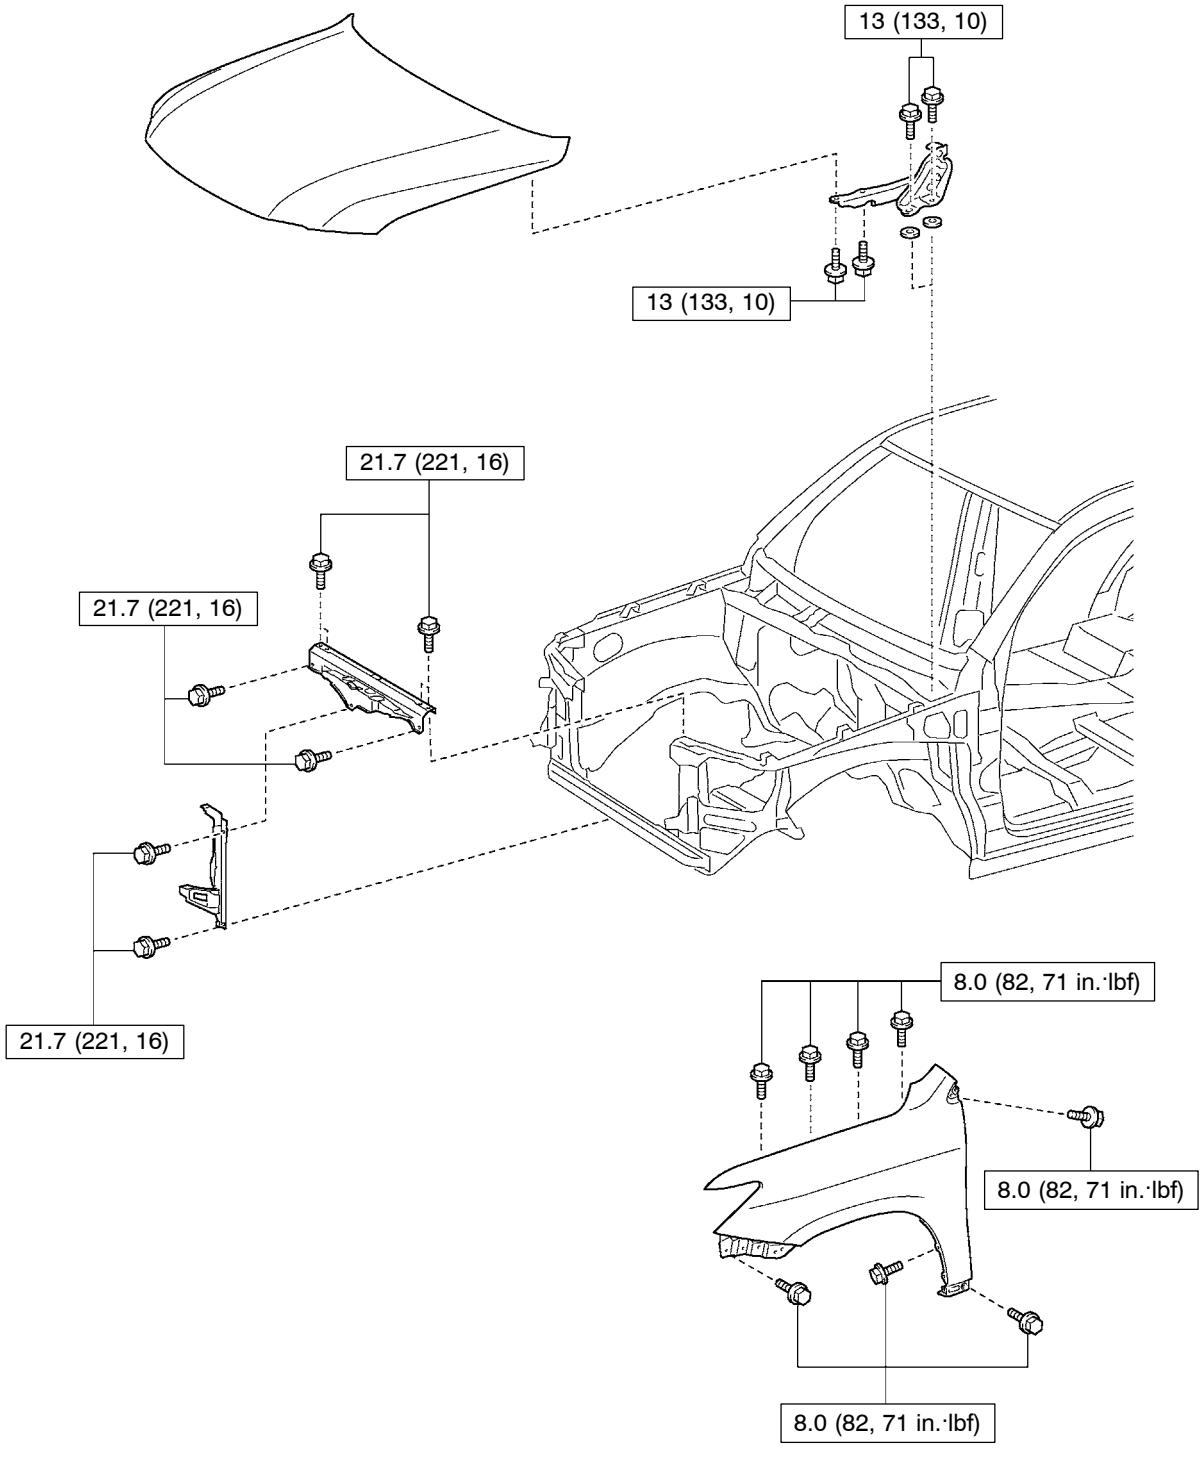



N·m (kgf·cm, ft.·lbf) : Specified torque

F29664

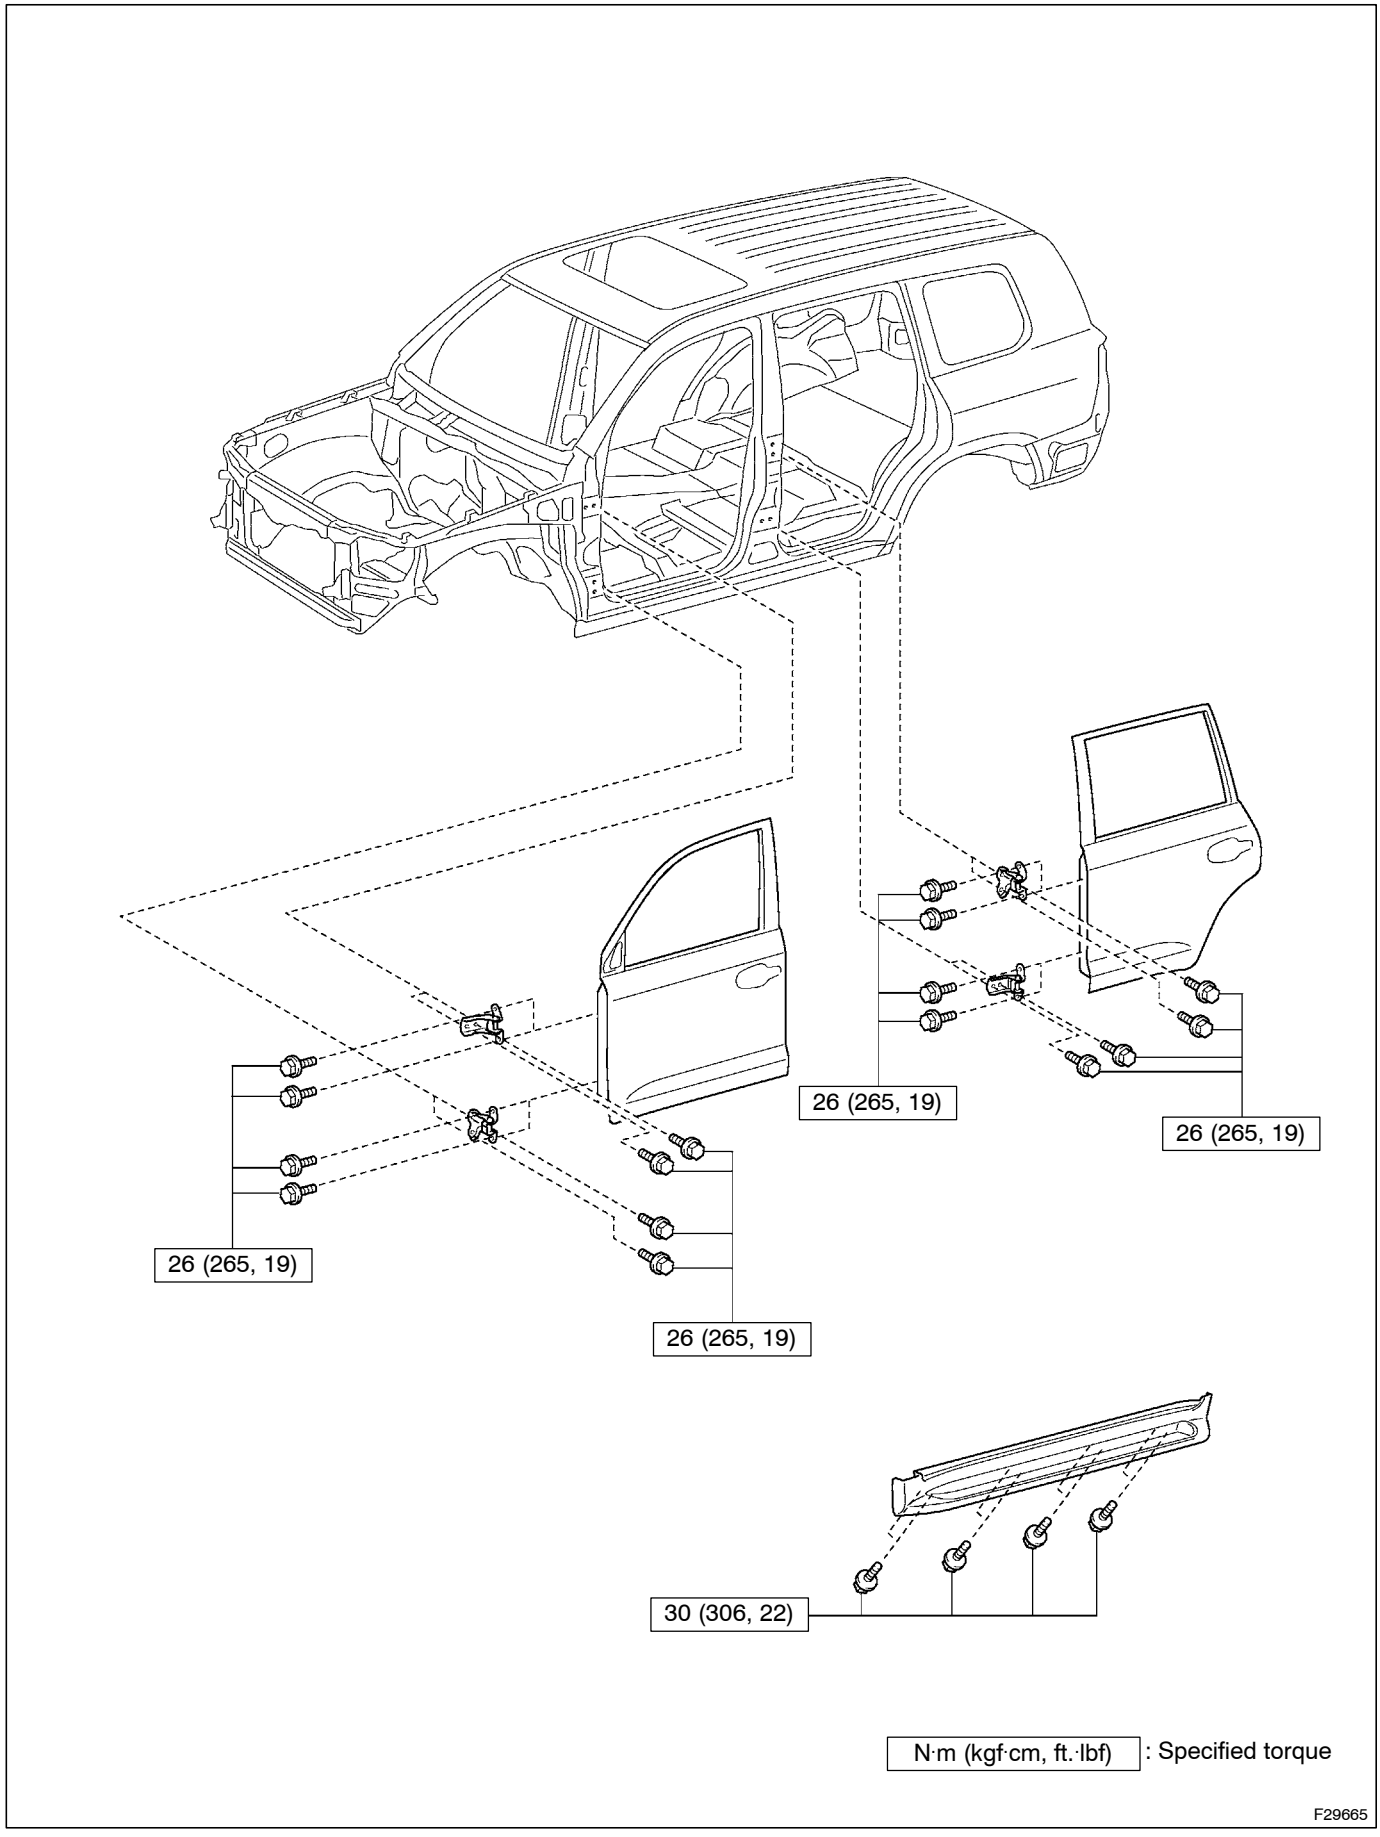

26 (265, 19)
26 (265, 19)
26 (265, 19)
26 (265, 19)
30 (306, 22)
N·m (kgf·cm, ft.·lbf) : Specified torque
F29665

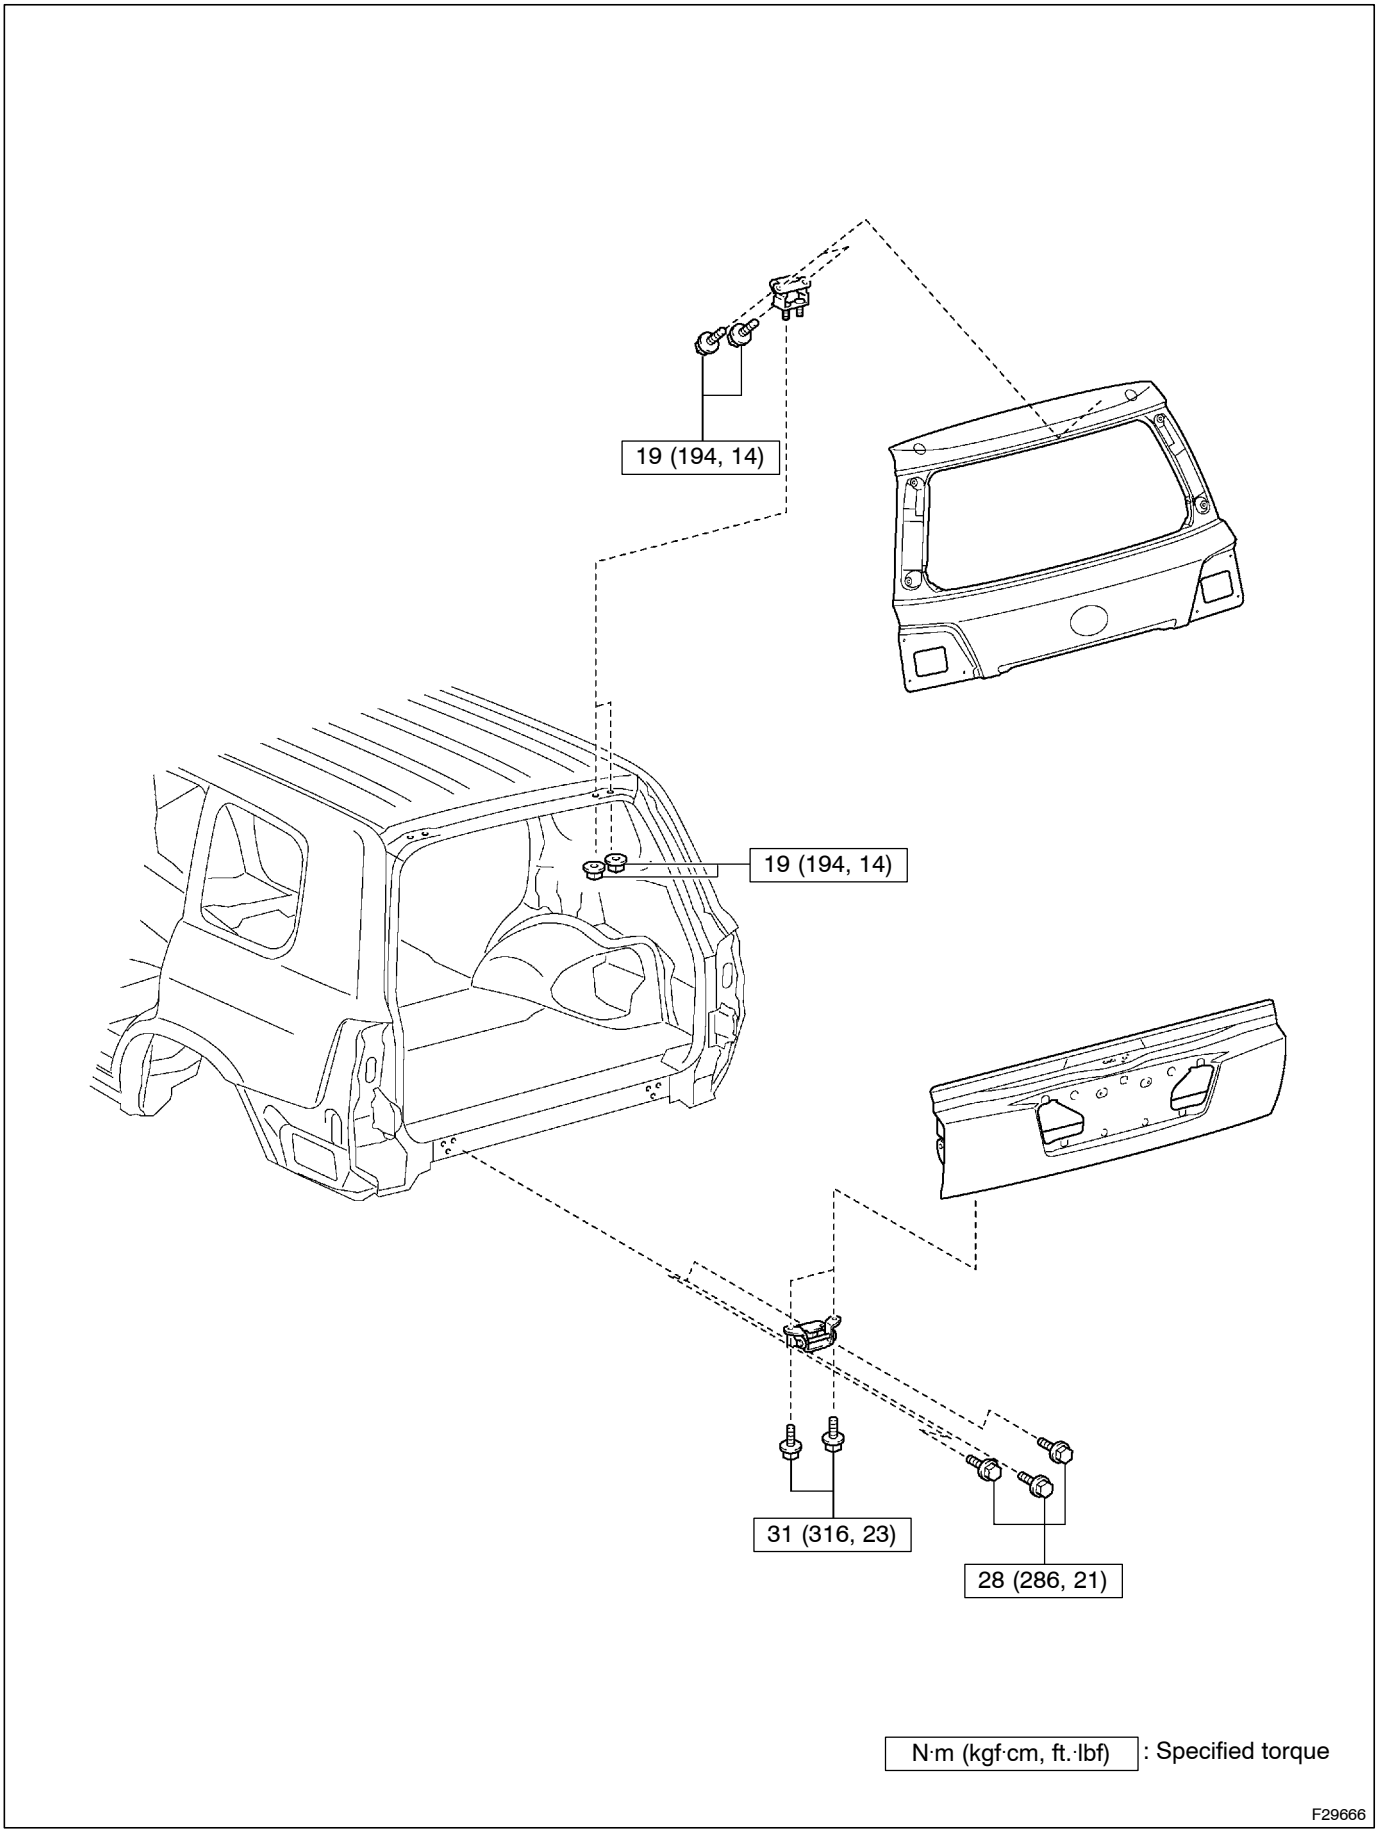
19 (194, 14)
19 (194, 14)
31 (316, 23)
28 (286, 21)
N·m (kgf·cm, ft.·lbf) : Specified torque
F29666

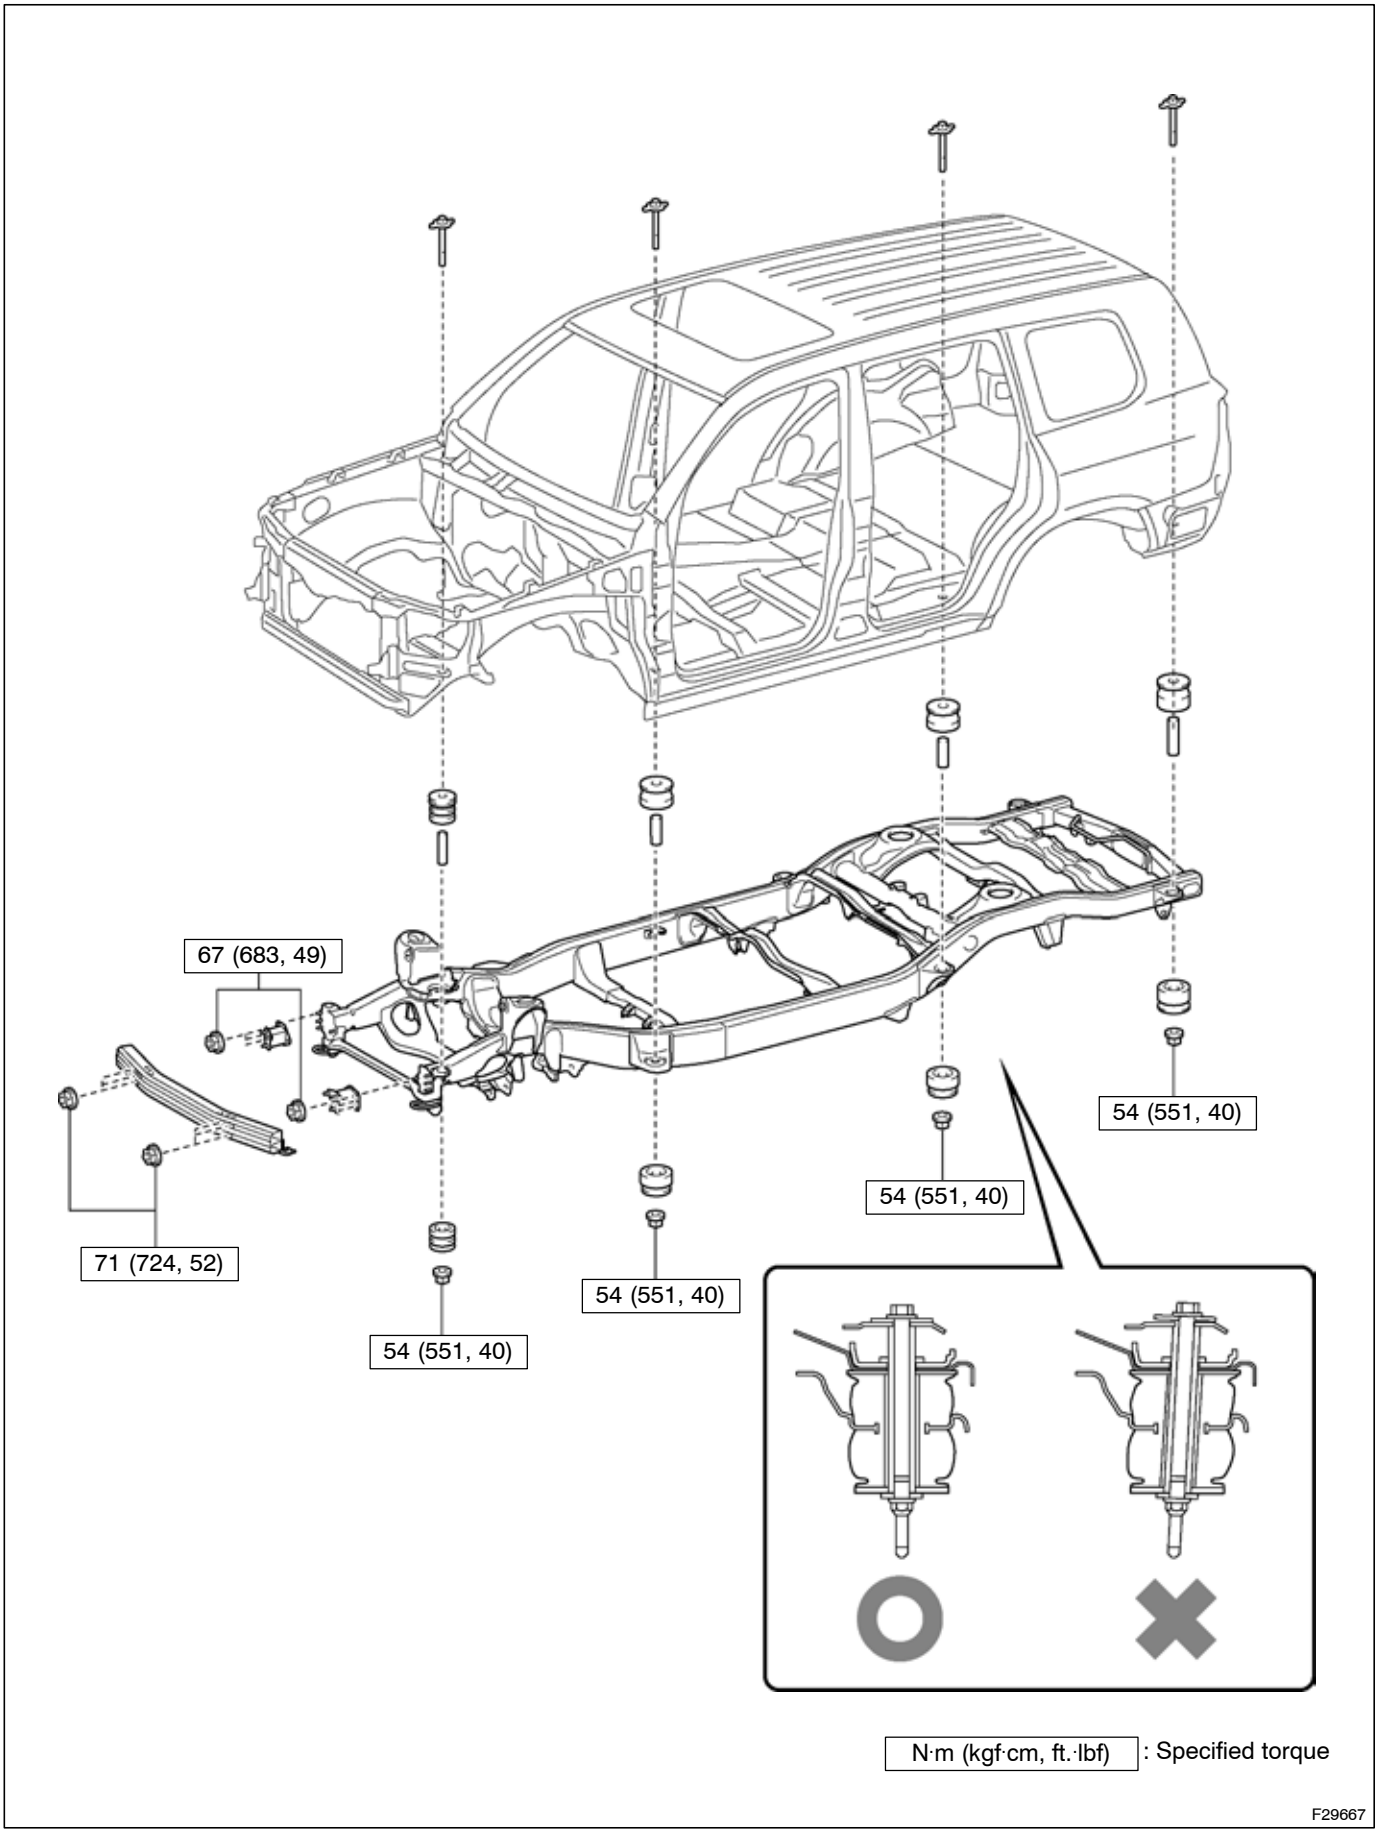
67 (683, 49)
71 (724, 52)
54 (551, 40)
54 (551, 40)
54 (551, 40)
54 (551, 40)
N·m (kgf·cm, ft.·lbf) : Specified torque
F29667


# FIT STANDARD/ADJUSTMENT METHOD/TORQUE SPECIFICATION

## 1. HOOD SUB-ASSEMBLY

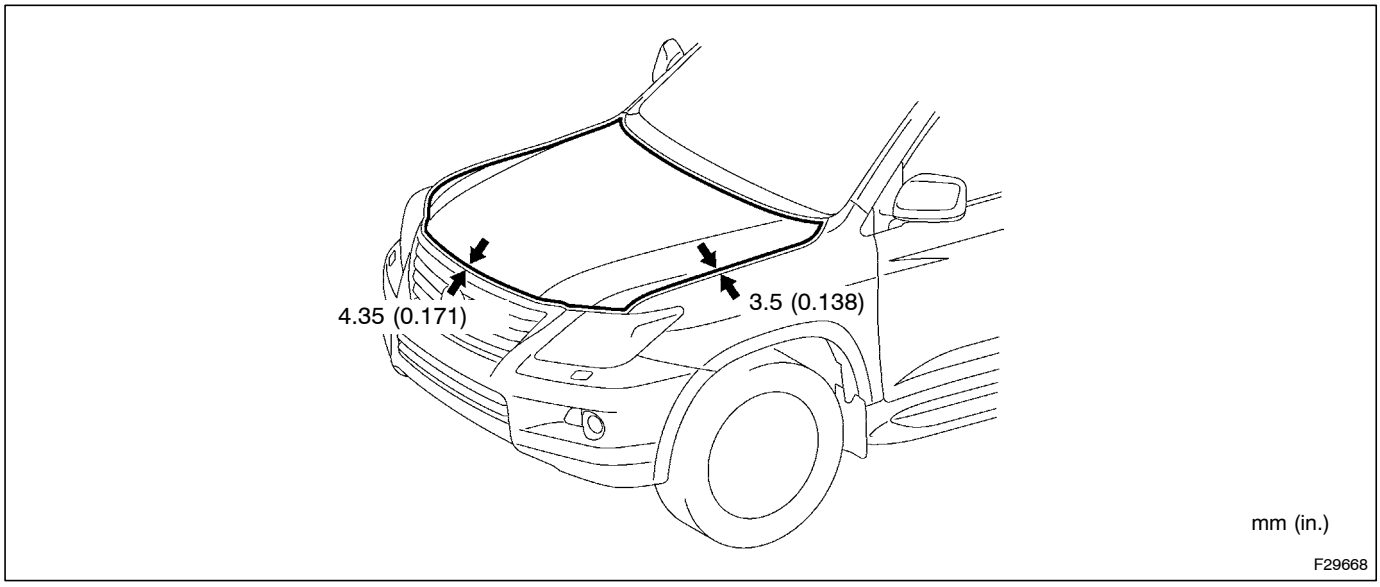


*HINT:*

*Centering bolts are used to mount the hood hinge and hood lock. The hood and hood lock cannot be adjusted with the centering bolts on. Substitute the centering bolts with standard bolts (with washers) when making adjustments.*

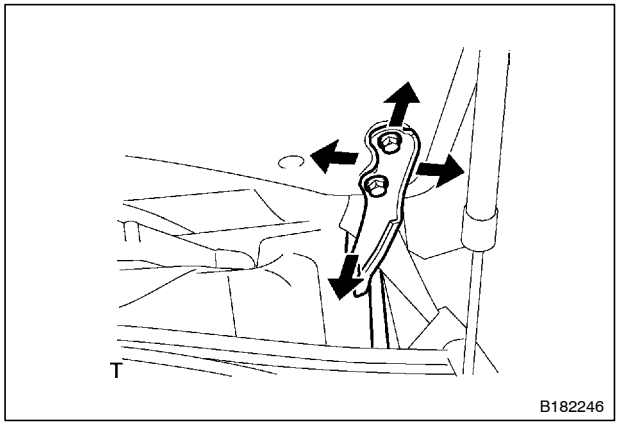



(a) Adjust the hood position.

(1) Loosen the 4 hinge bolts of the hood.

(2) Move the hood and adjust the clearance between the hood and front fender.


(3) Tighten the 4 hinge bolts of the hood after the adjustment.

**Torque:**
**13 N·m (133 kgf·cm, 10 ft.·lbf)**

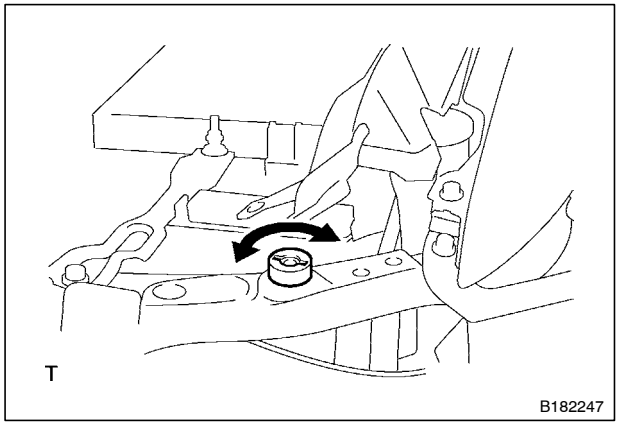


(4) Adjust the cushion rubber so that the height of the hood and fender are aligned.


*HINT:*
*Raise or lower the front end of the hood by turning the cushion rubber.*

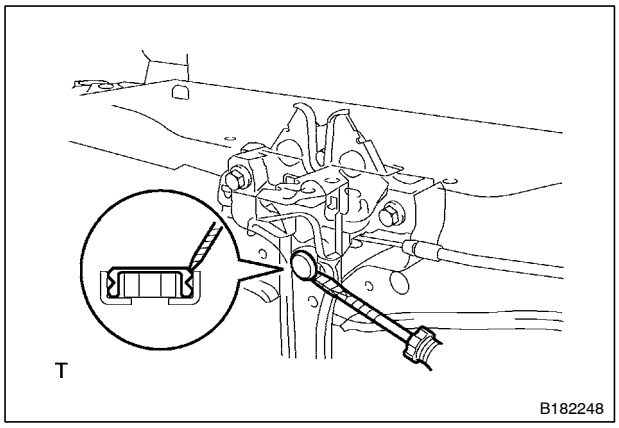


(b) Adjust the hood lock.

(1) Using a screwdriver, remove the hood lock nut cap as shown in the illustration.

*HINT:*
*Tape the screwdriver tip before use.*

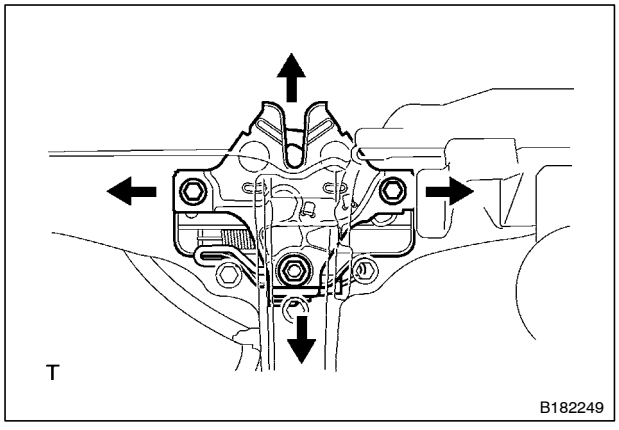


(2) Loosen the 2 bolts and hood lock nut.


(3) Adjust the hood lock position so that the striker can enter it smoothly.

(4) Tighten the bolts and nut after the adjustment.

**Torque:**
**5.5 N·m (56 kgf·cm, 49 in.·lbf)**

(5) Install a new cap.

## 2. FRONT DOOR (for USA, Canada)

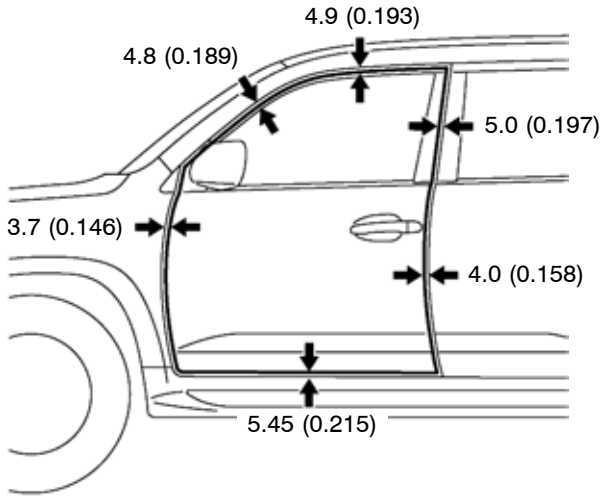


*HINT:*


- *Before adjusting the door position for vehicles equipped with side airbags and curtain shield airbags, be sure to disconnect the cable from the negative (–) battery terminal.*
- *Use the same procedures for the RH side and LH side.*
- *The procedures listed below are for the LH side.*
- *Centering bolts are used to mount the door hinge to the vehicle body and door. The door cannot be adjusted with the centering bolts installed on. Substitute the centering bolts with standard bolts (with washers) when making adjustments.*

(a) Disconnect the cable from the negative (–) battery terminal.

**CAUTION:**
**Wait at least 90 seconds after disconnecting the cable from the negative (–) battery terminal to disable the SRS system.**

**NOTICE:**

- **w/ Navigation System:**
  **After the engine switch is turned off, the HDD navigation system requires approximately 6 minutes to record various types of memory and settings.**
  **As a result, after turning the engine switch off, wait 6 minutes or more before disconnecting the cable from the negative (–) battery terminal.**
- **When disconnecting the cable, some systems need to be initialized after the cable is reconnected.**

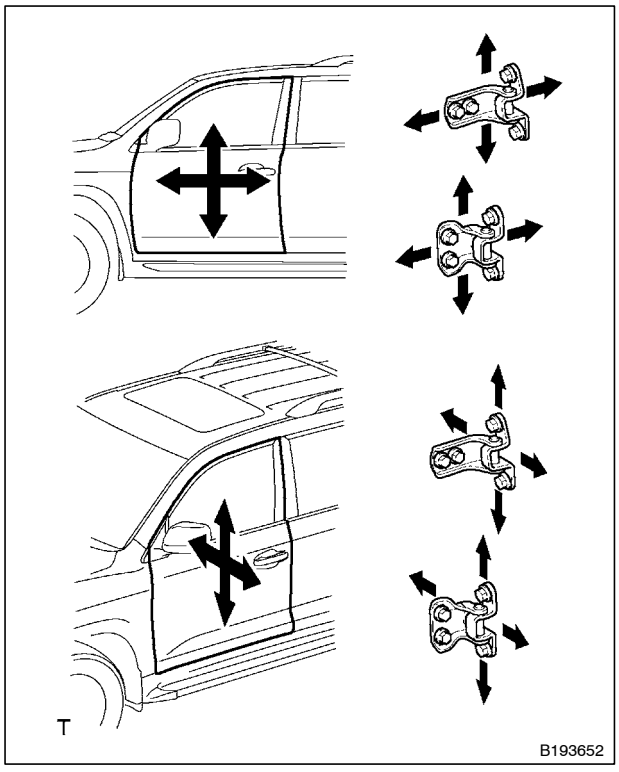


(b) Using SST, loosen the body hinge bolts and adjust the door position.

**SST**
**09812-00010**


(c) Using SST, tighten the body hinge bolts after the adjustment.

**Torque:**
**26 N·m (265 kgf·cm, 19 ft.·lbf)**

(d) Loosen the door hinge bolts and adjust the door position.


(e) Tighten the door hinge bolts after the adjustment.

**Torque:**
**26 N·m (265 kgf·cm, 19 ft.·lbf)**

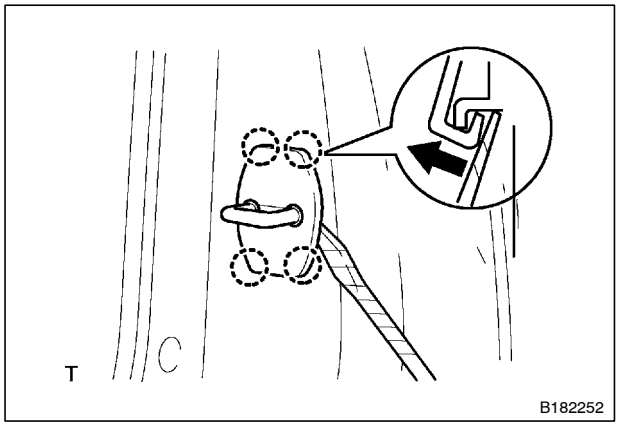


(f) Using a screwdriver, detach the 4 claws and remove the cover.

*HINT:*
*Tape the screwdriver tip before use.*

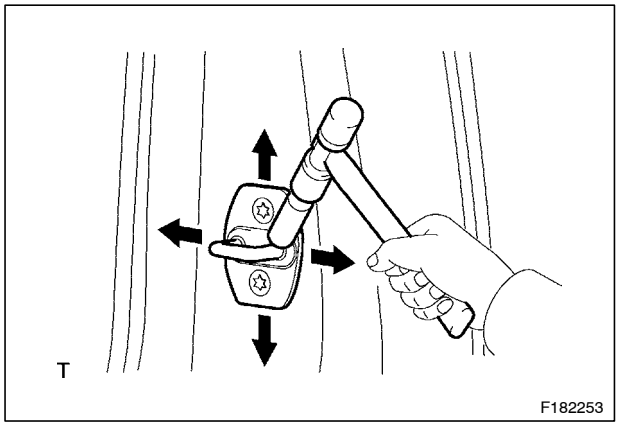


(g) Using a T40 “TORX” socket, adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic-faced hammer.

(h) Using a T40 “TORX” socket, tighten the striker mounting screws after the adjustment.

**Torque:**
**23 N·m (235 kgf·cm, 17 ft.·lbf)**


(i) Attach the 4 claws to install the cover.

(j) Connect the cable to the negative (–) battery terminal.

**NOTICE:**
**When disconnecting the cable, some systems need to be initialized after the cable is reconnected.**

(k) Check the SRS warning light.

## 3. FRONT DOOR (for Except USA, Canada)

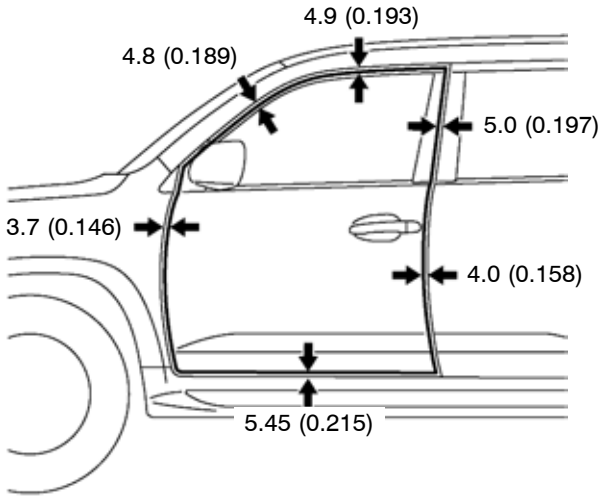



*HINT:*

- *Before adjusting the door position for vehicles equipped with side airbags and curtain shield airbags, be sure to disconnect the cable from the negative (–) battery terminal.*
- *Use the same procedures for the RH side and LH side.*
- *The procedures listed below are for the LH side.*
- *Centering bolts are used to mount the door hinge to the vehicle body and door. The door cannot be adjusted with the centering bolts installed on. Substitute the centering bolts with standard bolts (with washers) when making adjustments.*

(a) Disconnect the cable from the negative (–) battery terminal.

**CAUTION:**
**Wait at least 90 seconds after disconnecting the cable from the negative (–) battery terminal to disable the SRS system.**

**NOTICE:**
**When disconnecting the cable, somesystems need to be initialized after the cable is reconnected.**

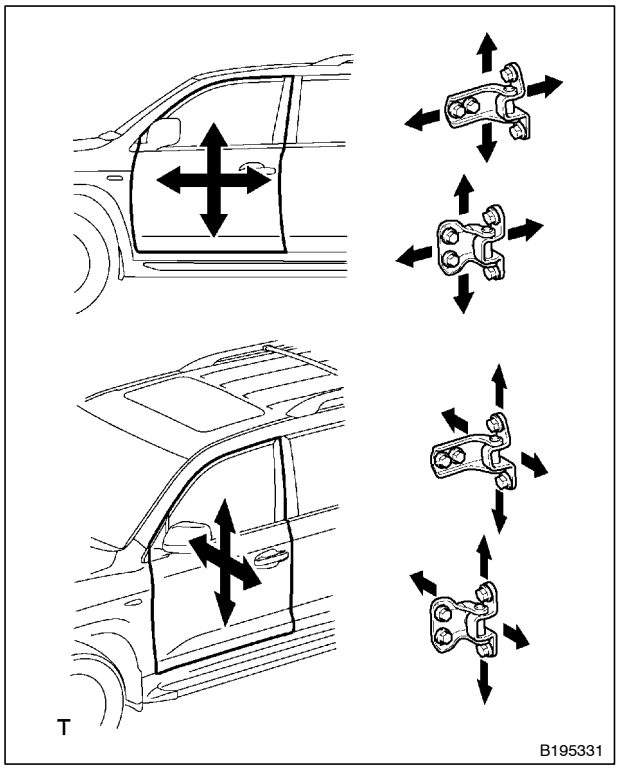


(b) Using SST, loosen the body hinge bolts and adjust the door position.

**SST**
**09812-00010**


(c) Using SST, tighten the body hinge bolts after the adjustment.

**Torque:**
**26 N·m (265 kgf·cm, 19 ft.·lbf)**

(d) Loosen the door hinge bolts and adjust the door position.


(e) Tighten the door hinge bolts after the adjustment.

**Torque:**
**26 N·m (265 kgf·cm, 19 ft.·lbf)**

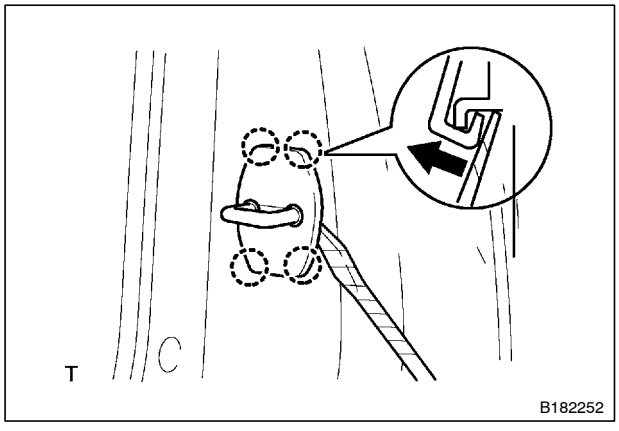


(f) Using a screwdriver, detach the 4 claws and remove the cover.

*HINT:*
*Tape the screwdriver tip before use.*

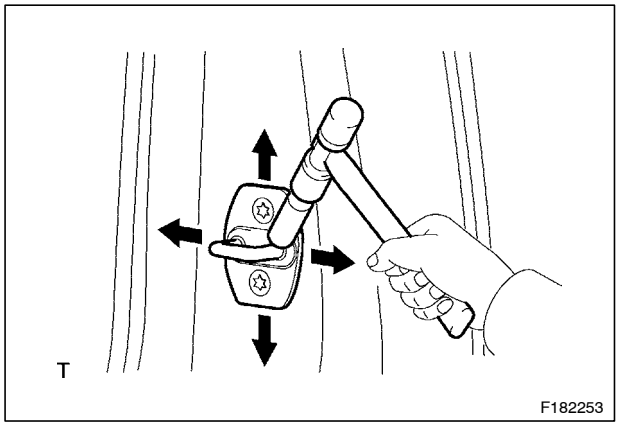


(g) Using a T40 “TORX” socket, adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic-faced hammer.

(h) Using a T40 “TORX” socket, tighten the striker mounting screws after the adjustment.

**Torque:**
**23 N·m (235 kgf·cm, 17 ft.·lbf)**


(i) Attach the 4 claws to install the cover.

(j) Connect the cable to the negative (–) battery terminal.

**NOTICE:**
**When disconnecting the cable, some systems need to be initialized after the cable is reconnected.**


(k) Check the SRS warning light.

## 4. REAR DOOR

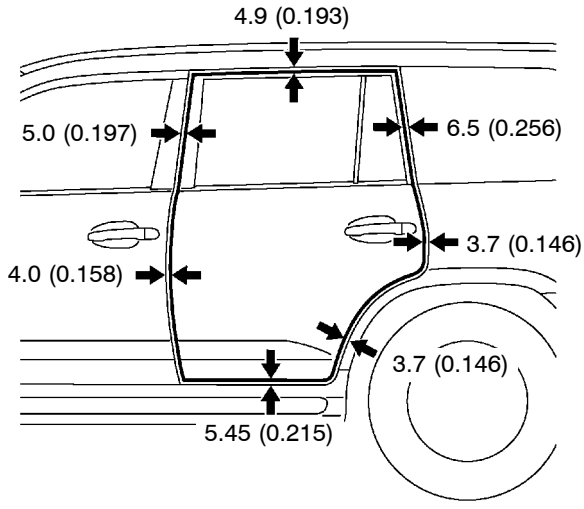


*HINT:*

- *Before adjusting the door position for vehicles equipped with side airbags and curtain shield airbags, be sure to disconnect the cable from the negative (–) battery terminal.*
- *Use the same procedures for the RH side and LH side.*
- *The procedures listed below are for the LH side.*
- *Centering bolts are used to mount the door hinge to the vehicle body and door. The door cannot be adjusted with the centering bolts on. Substitute the centering bolts with standard bolts (with washers) when making adjustments.*

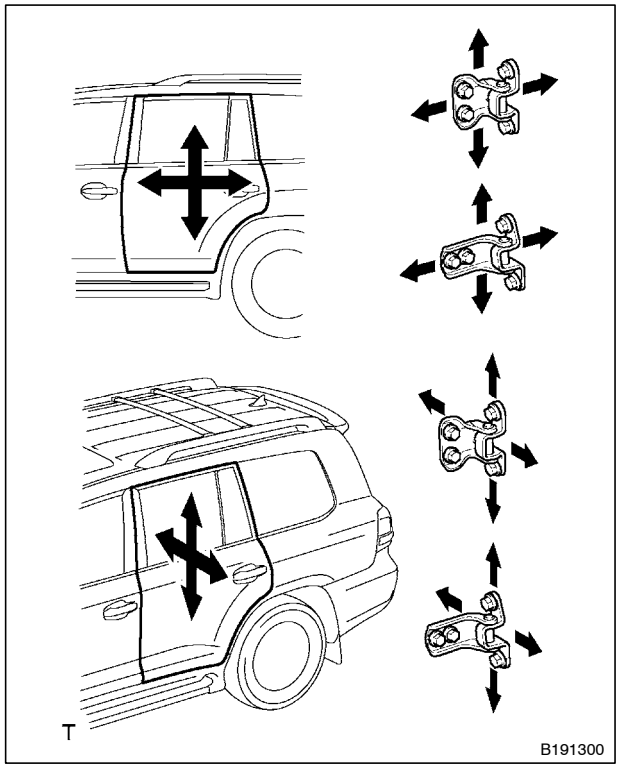


(a) Loosen the body hinge bolts and adjust the door position.

**SST**
**09812-00010**


(b) Tighten the body hinge bolts after the adjustment.

**Torque:**
**26 N·m (265 kgf·cm, 19 ft.·lbf)**

(c) Loosen the door hinge bolts and adjust the door position.


(d) Tighten the door hinge bolts after the adjustment.

**Torque:**
**26 N·m (265 kgf·cm, 19 ft.·lbf)**

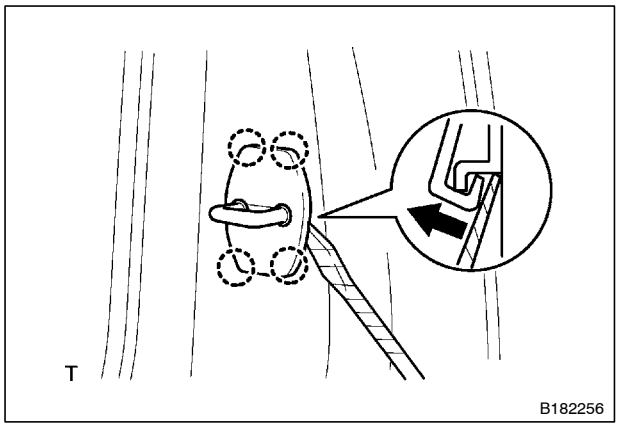


(e) Using a screwdriver, detach the 4 claws and remove the cover.

*HINT:*
*Tape the screwdriver tip before use.*

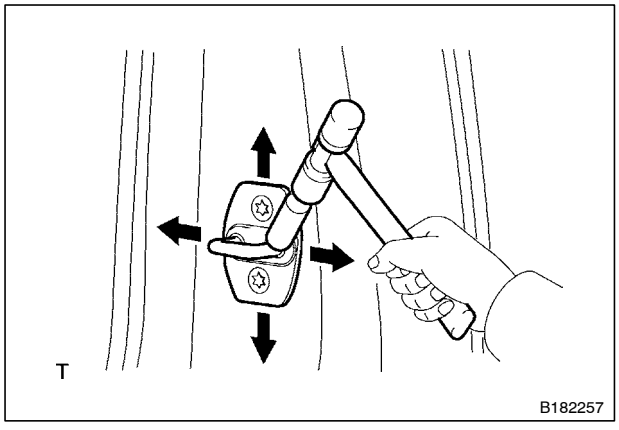



(f) Using a T40 “TORX” socket, adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic-faced hammer.

(g) Using a T40 “TORX” socket, tighten the striker mounting screws after the adjustment.

**Torque:**
**23 N·m (235 kgf·cm, 17 ft.·lbf)**


(h) Attach the 4 claws to install the cover.

## 5. TAIL GATE PANEL SUB-ASSEMBLY (for USA, Canada)

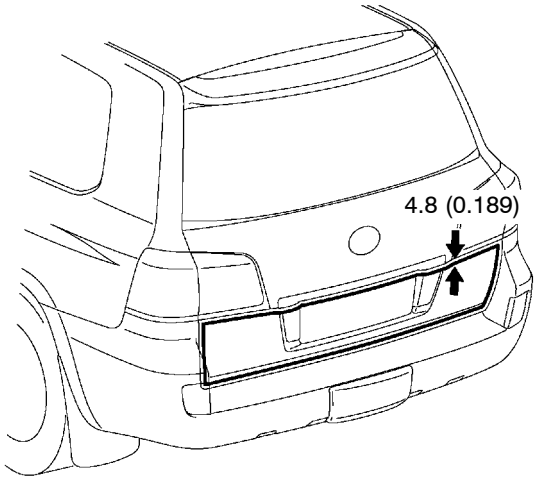


mm (in.)

F29671

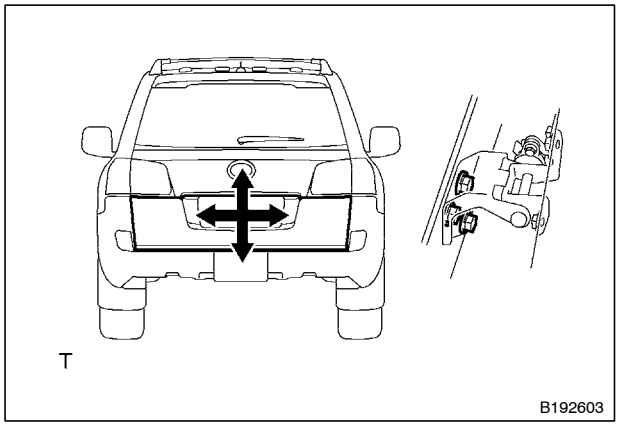



B192603

(a) Loosen the hinge bolts.

(b) Adjust the tail gate by moving it up and down and left and right so that the dimensions are within the specified range.

(c) Tighten the hinge bolts.

**Torque:**
**28 N·m (286 kgf·cm, 21 ft.·lbf)**

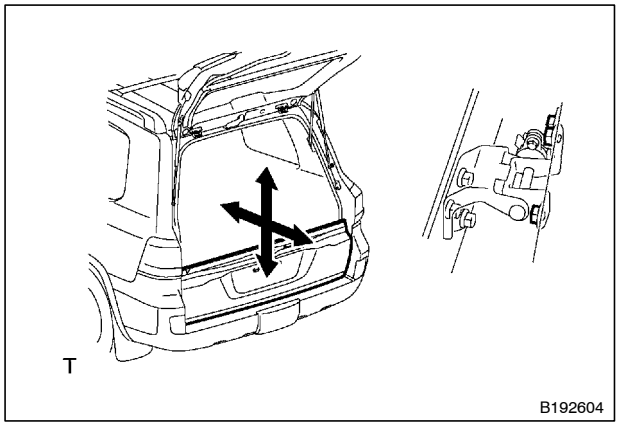



B192604

(d) Loosen the hinge bolts.

(e) Adjust the tail gate by moving it up and down and forward and backward so that the dimensions are within the specified range.

(f) Tighten the hinge bolts.


**Torque:**
**31 N·m (316 kgf·cm, 23 ft.·lbf)**

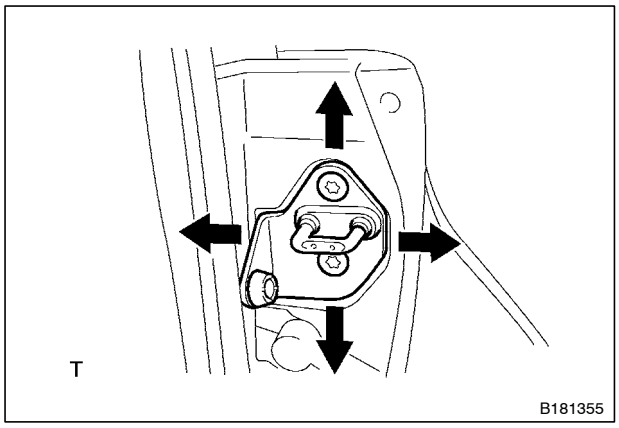


(g) Using a T40 “TORX” socket, adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic-faced hammer.

(h) Using a T40 “TORX” socket, tighten the striker mounting screws after the adjustment.

**Torque:**
**12 N·m (122 kgf·cm, 9 ft.·lbf)**

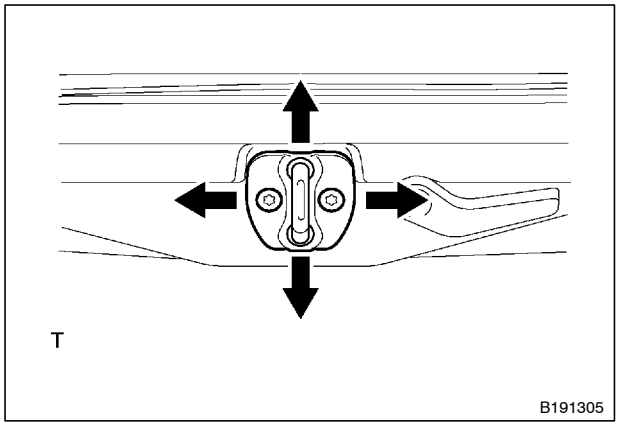



(i) Check that the door fit and door linkages are adjusted correctly.

(j) Using a T40 “TORX” socket, adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic-faced hammer.

(k) Using a T40 “TORX” socket, tighten the striker mounting screws after the adjustment.


**Torque:**
**12 N·m (122 kgf·cm, 9 ft.·lbf)**

## 6. TAIL GATE PANEL SUB-ASSEMBLY (for Except USA, Canada)

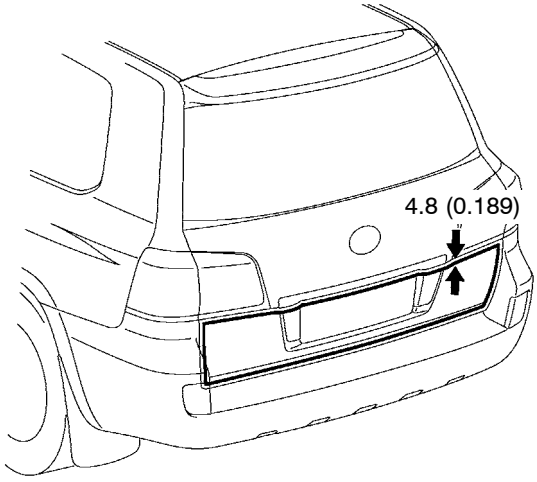


mm (in.)

F29697

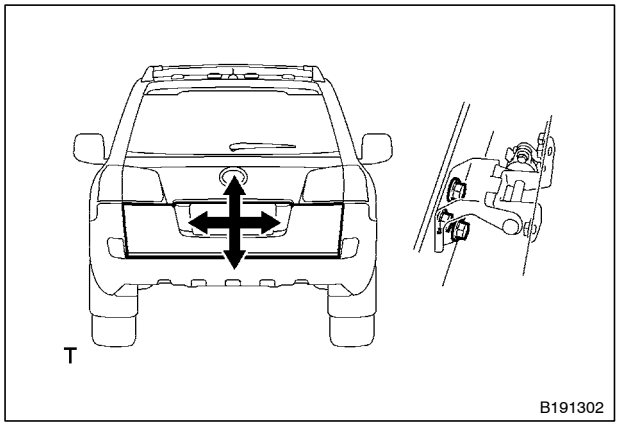



B191302

(a) Loosen the hinge bolts.

(b) Adjust the tail gate by moving it up and down and left and right so that the dimensions are within the specified range.

(c) Tighten the hinge bolts.

**Torque:**
**28 N·m (286 kgf·cm, 21 ft.·lbf)**

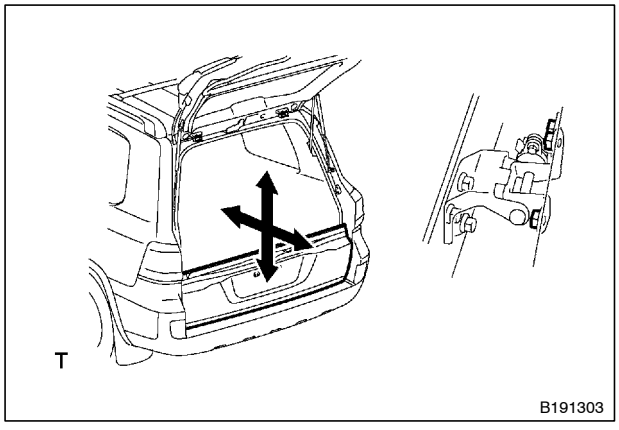



B191303

(d) Loosen the hinge bolts.

(e) Adjust the tail gate by moving it up and down and forward and backward so that the dimensions are within the specified range.

(f) Tighten the hinge bolts.


**Torque:**
**31 N·m (316 kgf·cm, 23 ft.·lbf)**

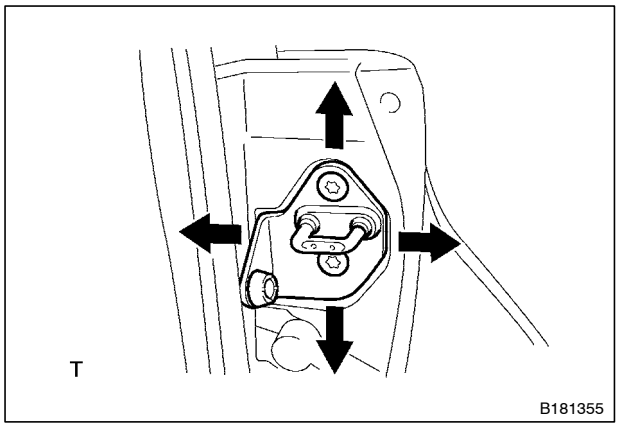


(g) Using a T40 “TORX” socket, adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic-faced hammer.

(h) Using a T40 “TORX” socket, tighten the striker mounting screws after the adjustment.

**Torque:**
**12 N·m (122 kgf·cm, 9 ft.·lbf)**

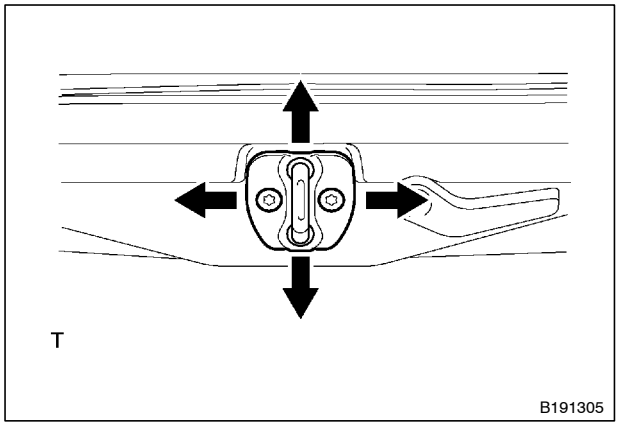



(i) Check that the door fit and door linkages are adjusted correctly.

(j) Using a T40 “TORX” socket, adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic-faced hammer.

(k) Using a T40 “TORX” socket, tighten the striker mounting screws after the adjustment.


**Torque:**
**12 N·m (122 kgf·cm, 9 ft.·lbf)**

## 7. BACK DOOR PANEL SUB-ASSEMBLY (for USA, Canada)

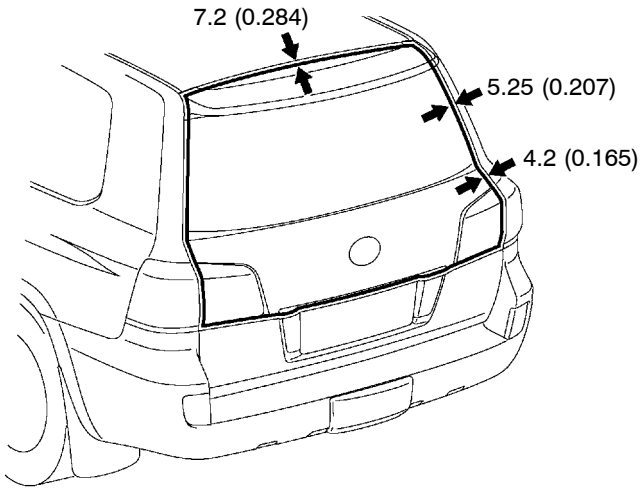


mm (in.)

F29672

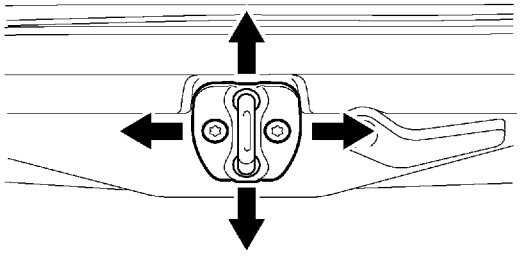



B191305

(a) Check that the door fit and door linkages are adjusted correctly.

(b) Using a T40 “TORX” socket, adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic-faced hammer.

(c) Using a T40 “TORX” socket, tighten the striker mounting screws after the adjustment.

**Torque:**
**12 N·m (122 kgf·cm, 9 ft.·lbf)**

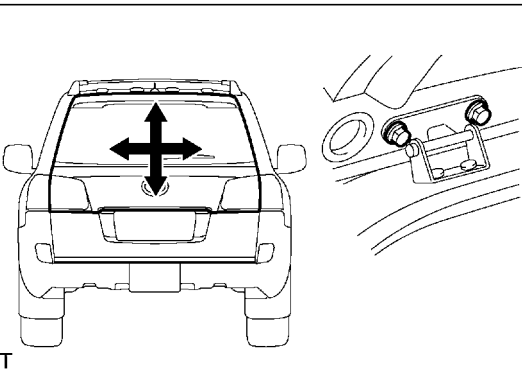


B192606


(d) Loosen the hinge bolts.

(e) Adjust the back door by moving it up and down and left and right so that the dimensions are within the specified range.

(f) Tighten the hinge bolts.

**Torque:**
**19 N·m (194 kgf·cm, 14 ft.·lbf)**

(g) Detach the rear seat belt anchor cover.

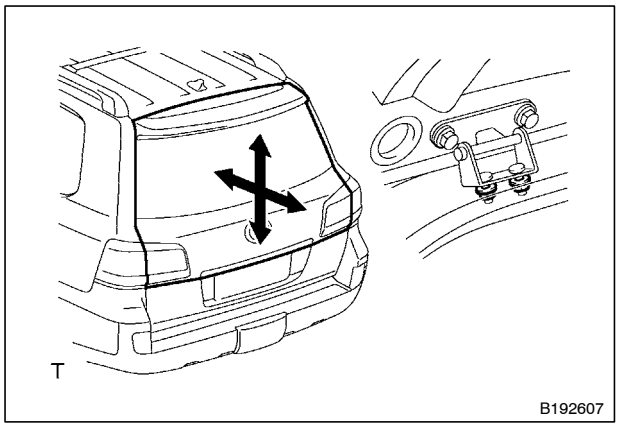


(h) Loosen the hinge nuts.


(i) Adjust the back door by moving it up and down and forward and backward so that the dimensions are within the specified range.

(j) Tighten the hinge nuts.

**Torque:**
**19 N·m (194 kgf·cm, 14 ft.·lbf)**


(k) Attach the rear seat belt anchor cover.

## 8. BACK DOOR PANEL SUB-ASSEMBLY (for Except USA, Canada)

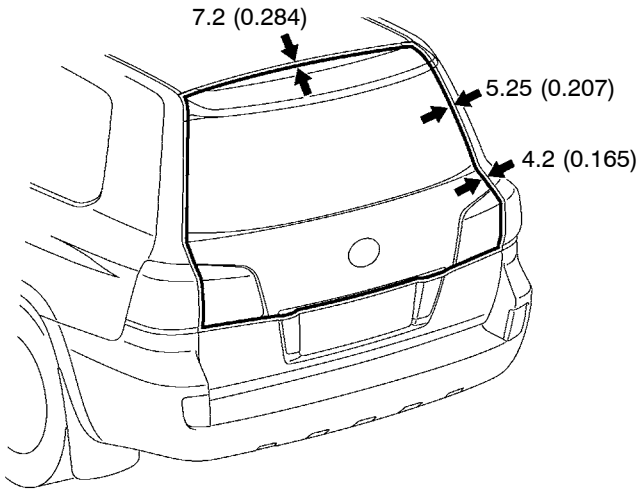


mm (in.)

F29698

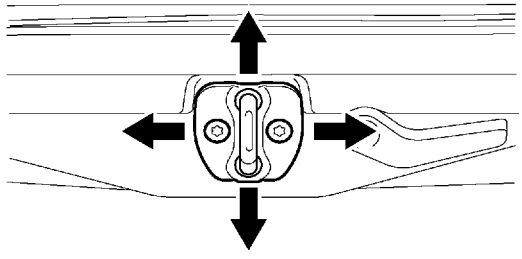



B191305

(a) Check that the door fit and door linkages are adjusted correctly.

(b) Using a T40 “TORX” socket, adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic-faced hammer.

(c) Using a T40 “TORX” socket, tighten the striker mounting screws after the adjustment.

**Torque:**
**12 N·m (122 kgf·cm, 9 ft.·lbf)**

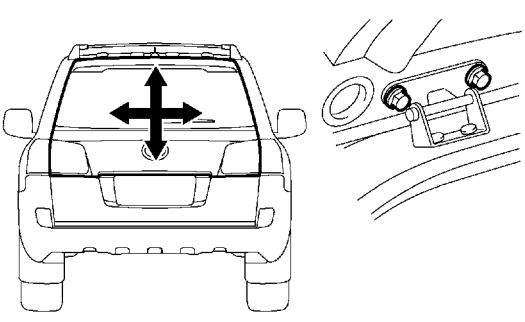


B191306


(d) Loosen the hinge bolts.

(e) Adjust the back door by moving it up and down and left and right so that the dimensions are within the specified range.

(f) Tighten the hinge bolts.

**Torque:**
**19 N·m (194 kgf·cm, 14 ft.·lbf)**

(g) Detach the rear seat belt anchor cover.

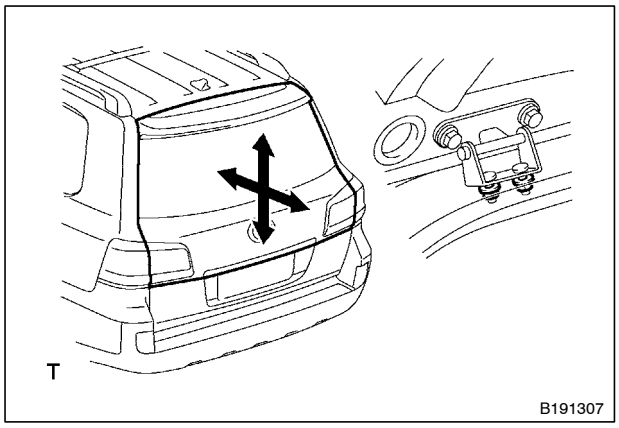


(h) Loosen the hinge nuts.

(i) Adjust the back door by moving it up and down and forward and backward so that the dimensions are within the specified range.

(j) Tighten the hinge nuts.

**Torque:**
**19 N·m (194 kgf·cm, 14 ft.·lbf)**

(k) Attach the rear seat belt anchor cover.


# NAME PLATE APPLICATION PROCEDURE

1 Heat the double-sided tape remaining on the body with an infrared lamp or equivalent.
*HINT:*
*Heat the tape to 40 to 60°C for approximately 1 to 2 minutes.*

2 Wipe off the remaining double-sided tape using a clean cloth or equivalent.
*HINT:*
*If a name plate is installed without thoroughly removing the remaining double-sided tape from the body, the name plate will not adhere properly. Make sure to thoroughly wipe off the double-sided tape.*


3 After cleaning the installation area of the body with degreasing agent, attach the name plate to the position shown in the illustration.
*HINT:*
*The working environment should be 20°C when installing the name plate. If the working environment is below 20°C, heat the installation area of the body to 20 to 30°C and then install the name plate.*

[USA, Canada]

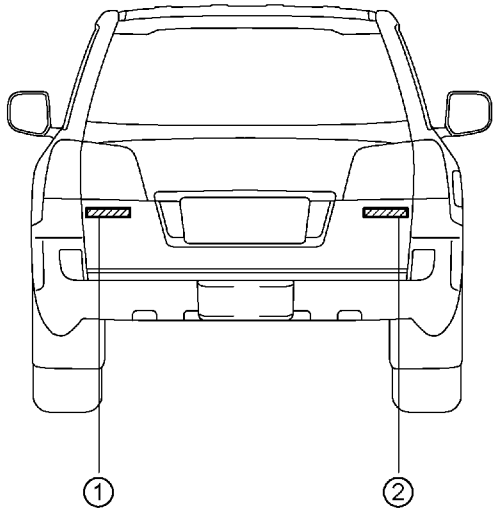


① BACK DOOR NAME PLATE


② REAR NO. 3 BODY NAME PLATE

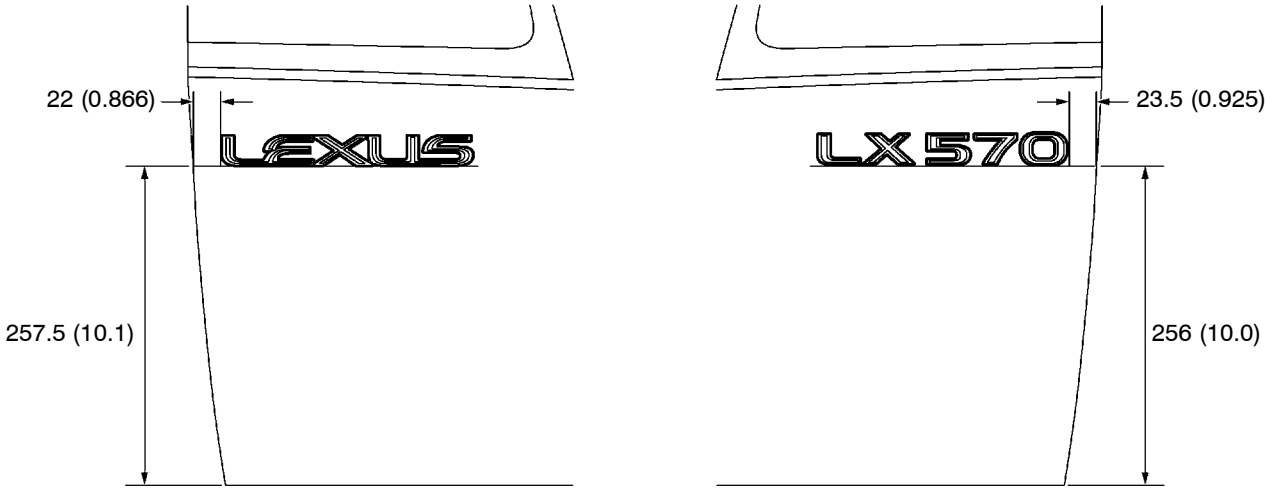


mm (in.)


F29685

[for Except USA, Canada]

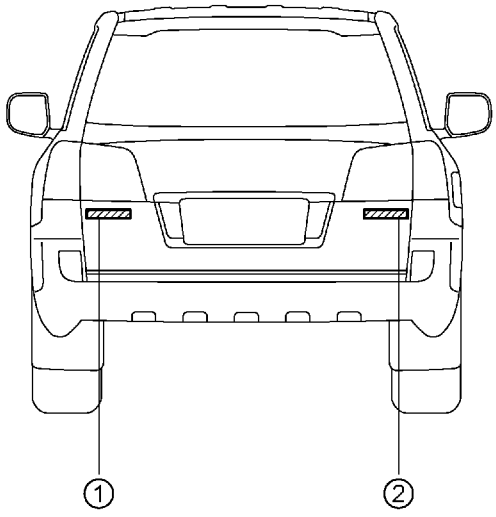


① BACK DOOR NAME PLATE

② REAR NO. 3 BODY NAME PLATE

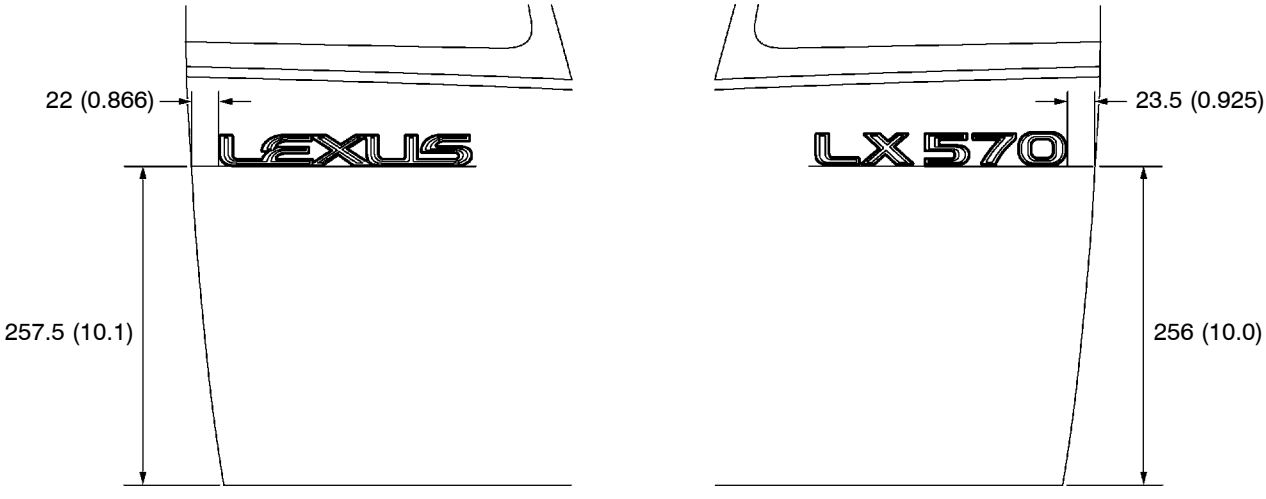




mm (in.)

F29686


# CAUTION LABEL ATTACHMENT POSITION

1 After using a degreasing agent to clean the surfaces of the body where the caution labels will be attached, attach the caution labels to the positions shown in the illustration.
*HINT:*
- *Attach each caution label with its orientation the same as the numbers shown in the illustration.*
- *Make sure the caution label is not attached over a spot weld.*
- *When attaching the caution label, make sure not to touch the label's adhesive surface.*
- *To prevent the edges of the caution label from peeling, apply extra pressure to the label's periphery.*
- *If the work area's temperature is 5°C or less, the caution label's adhesive will deteriorate. It is recommended that you heat the label to 20 to 40°C.*

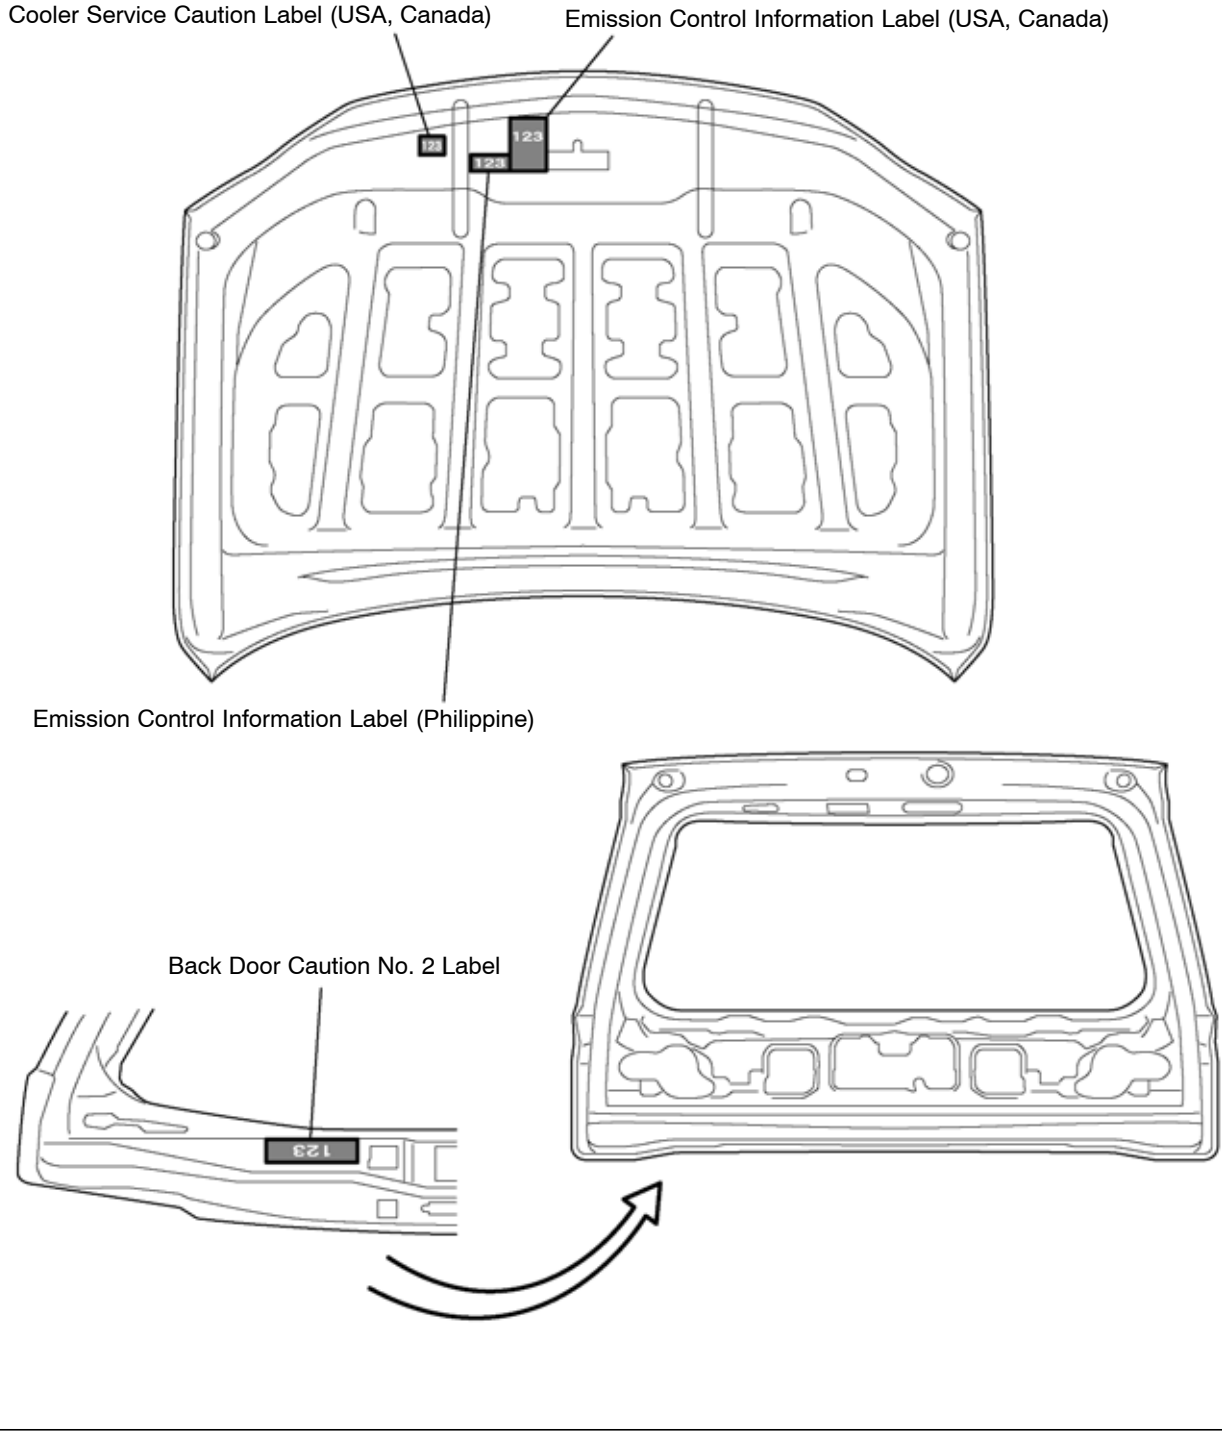


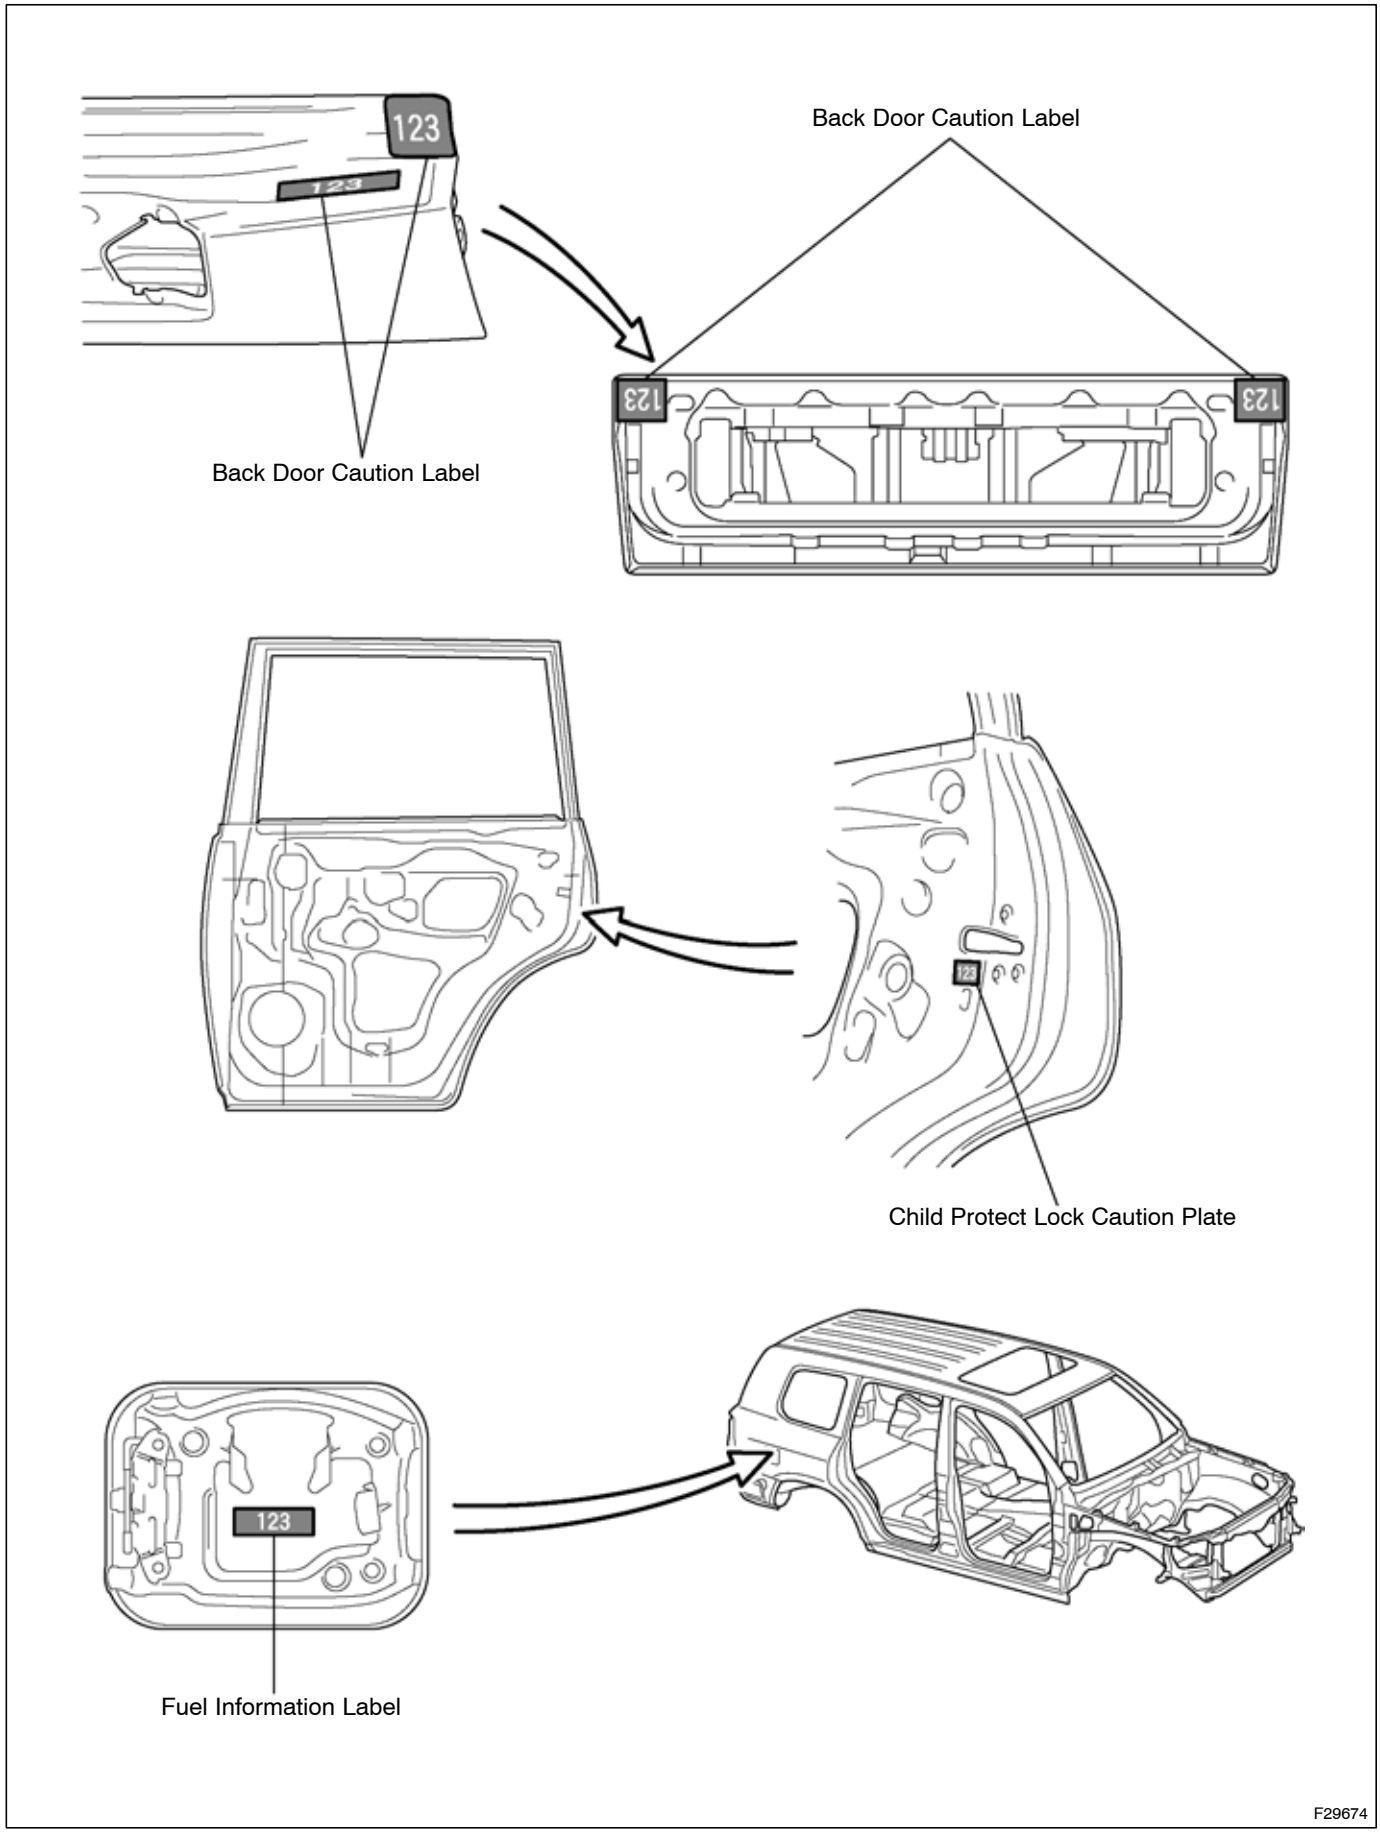

123
123
Back Door Caution Label
Back Door Caution Label
123
123
123
Child Protect Lock Caution Plate
123
Fuel Information Label
F29674

[LHD]

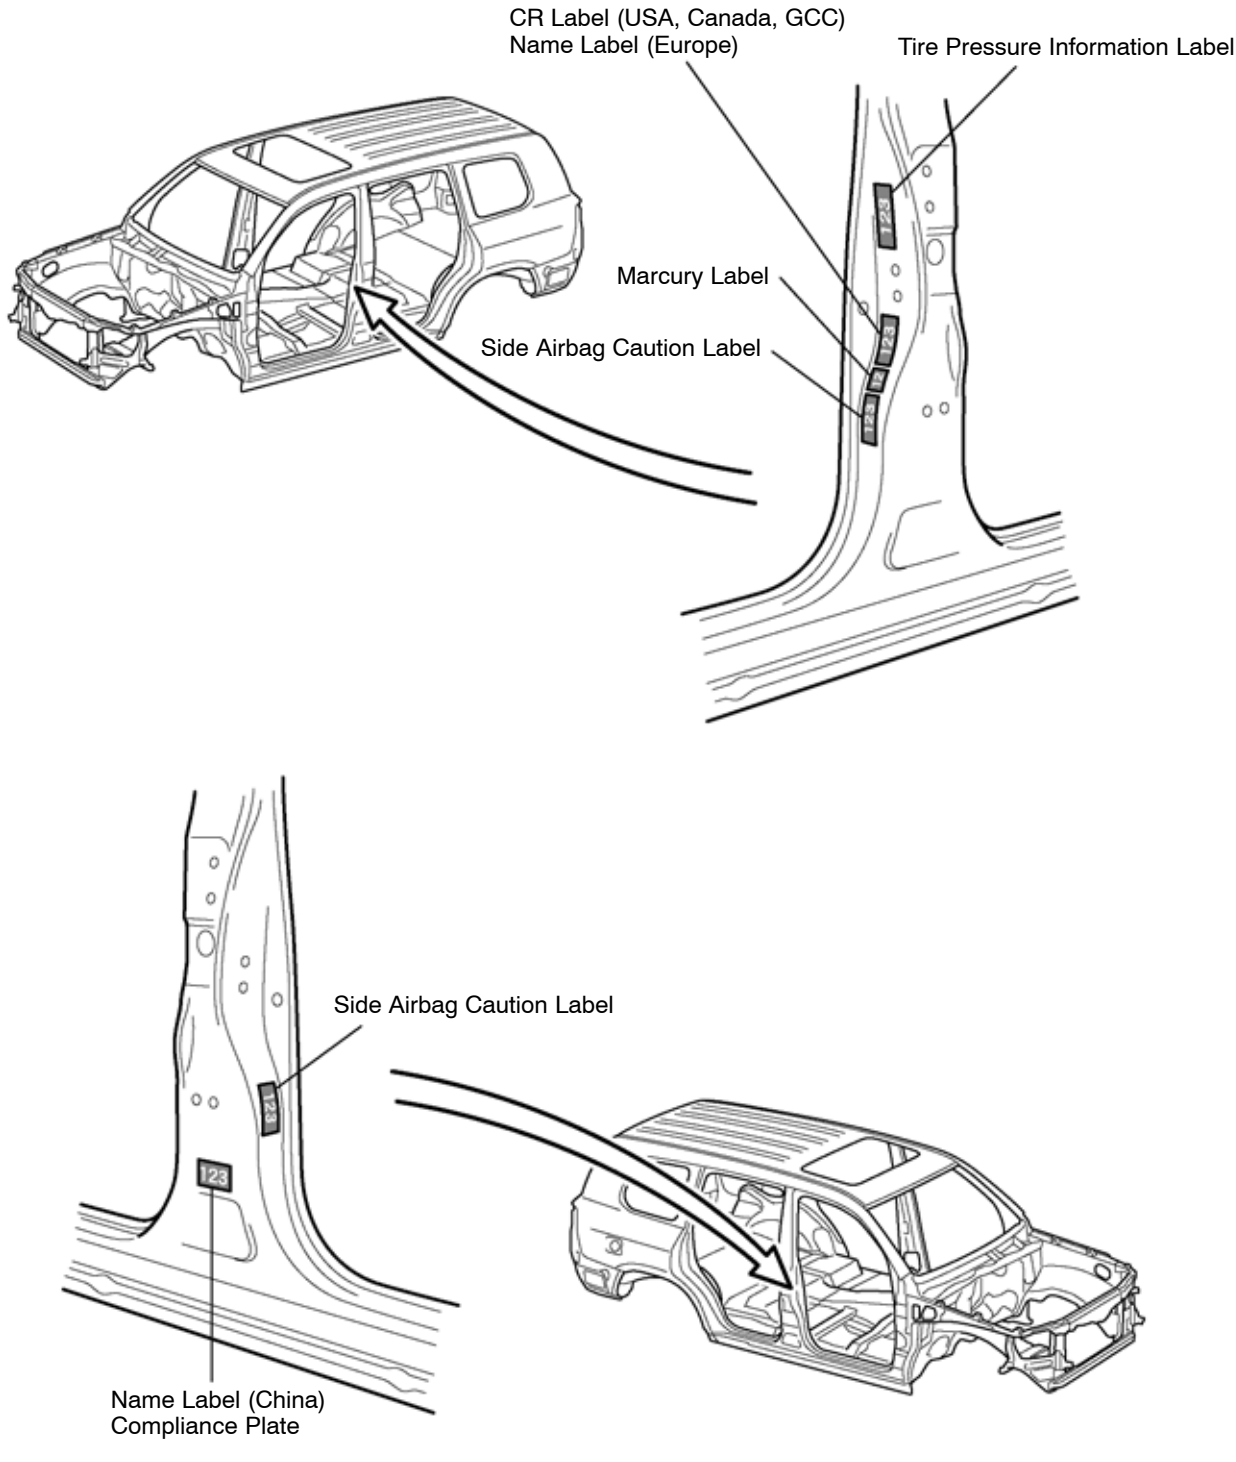
CR Label (USA, Canada, GCC)
Name Label (Europe)
Tire Pressure Information Label
Marcury Label
Side Airbag Caution Label
Side Airbag Caution Label
123
Name Label (China)
Compliance Plate
F29675


[LHD]

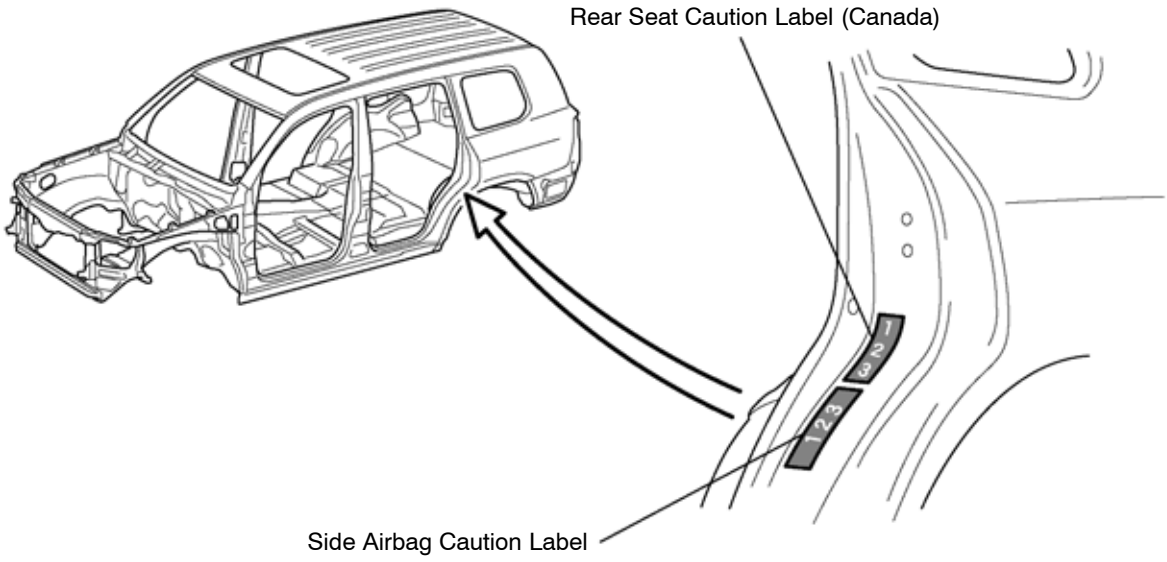
Rear Seat Caution Label (Canada)
Side Airbag Caution Label

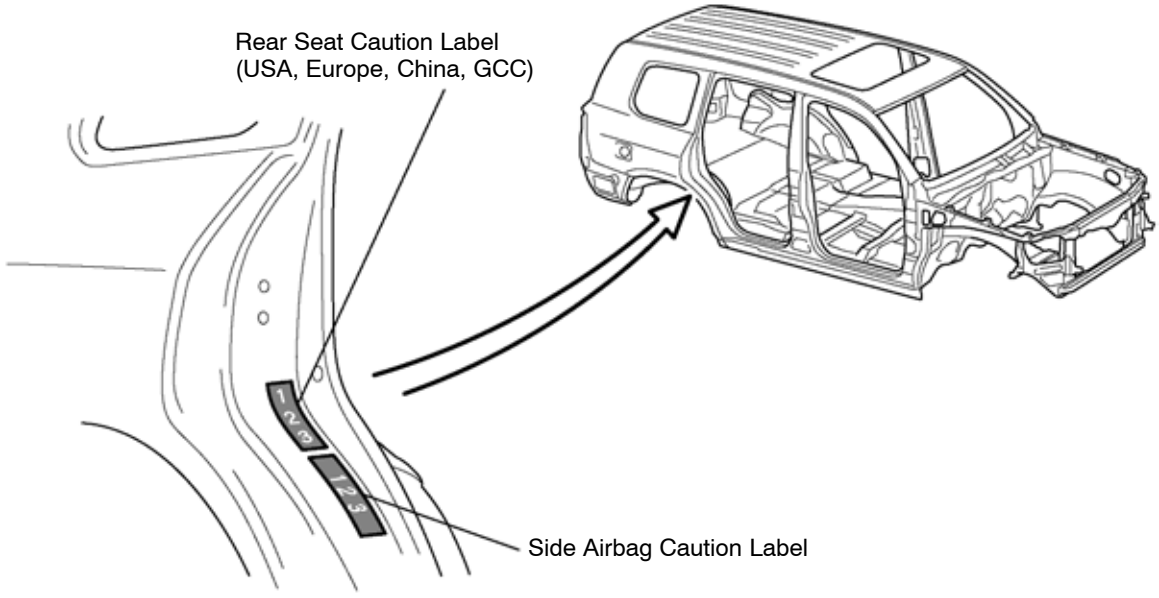

Rear Seat Caution Label
(USA, Europe, China, GCC)
Side Airbag Caution Label


F29692

[RHD]

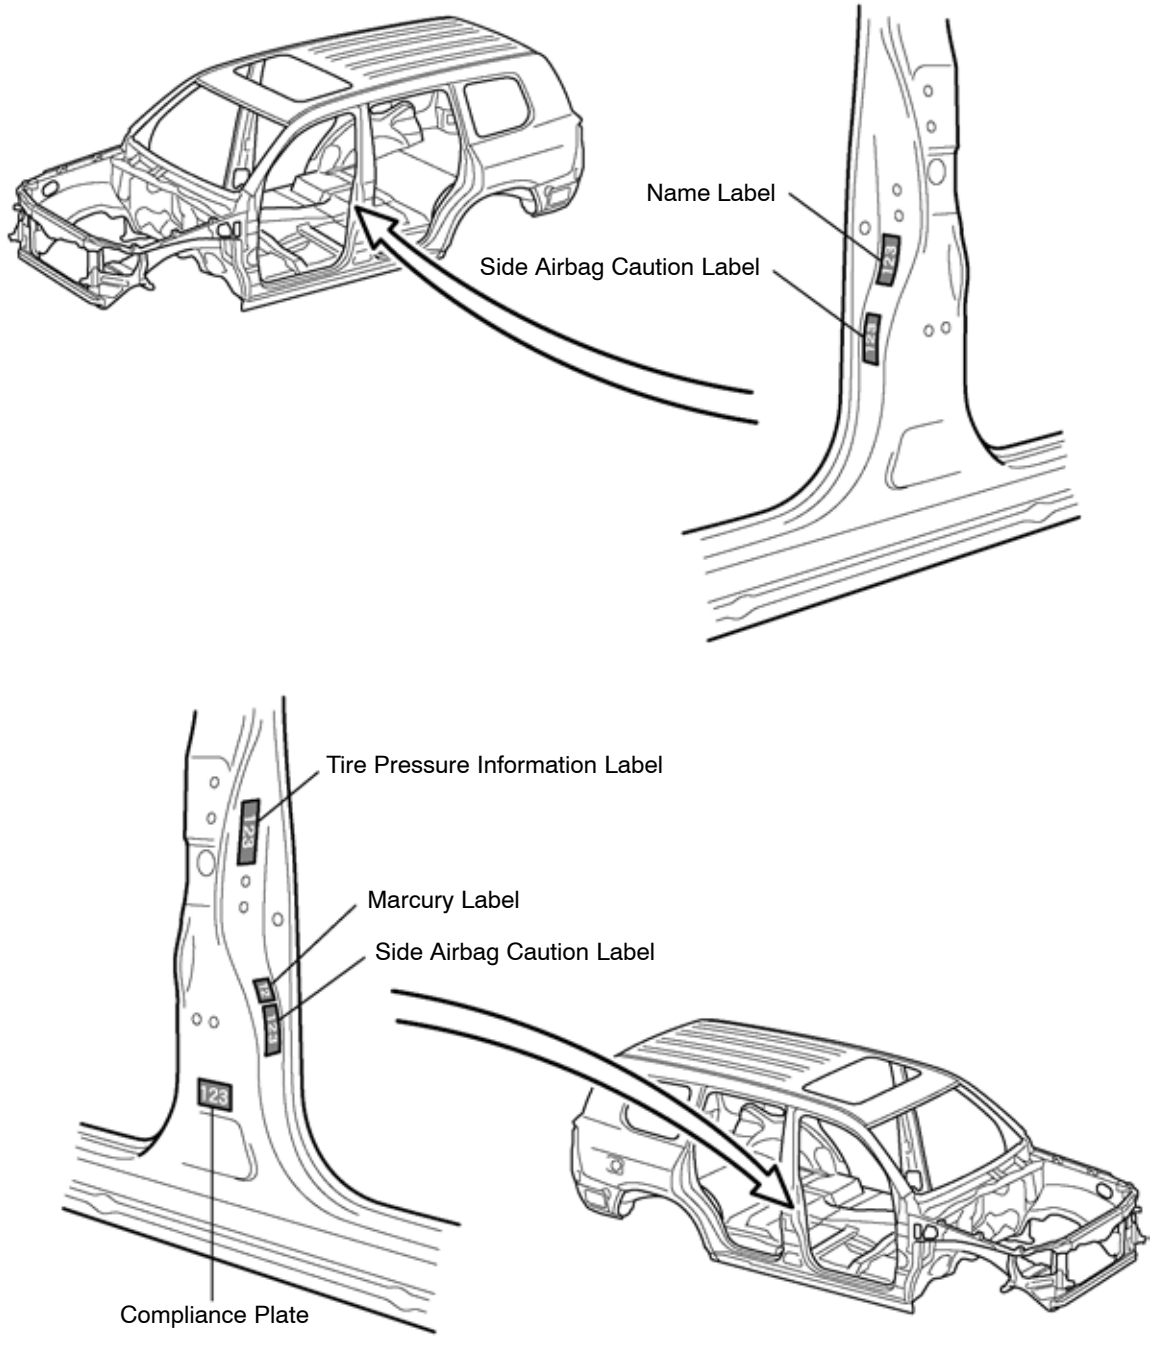
Name Label
Side Airbag Caution Label
Tire Pressure Information Label
Marcury Label
Side Airbag Caution Label
Compliance Plate
F29693

[RHD]

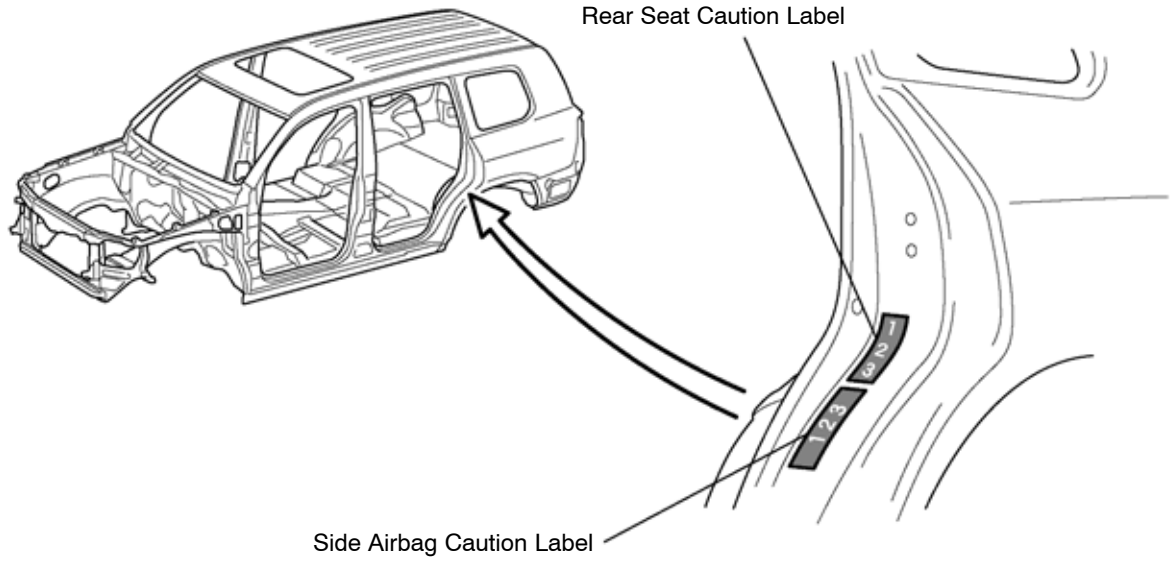
Rear Seat Caution Label
1
2
1
2
3
Side Airbag Caution Label

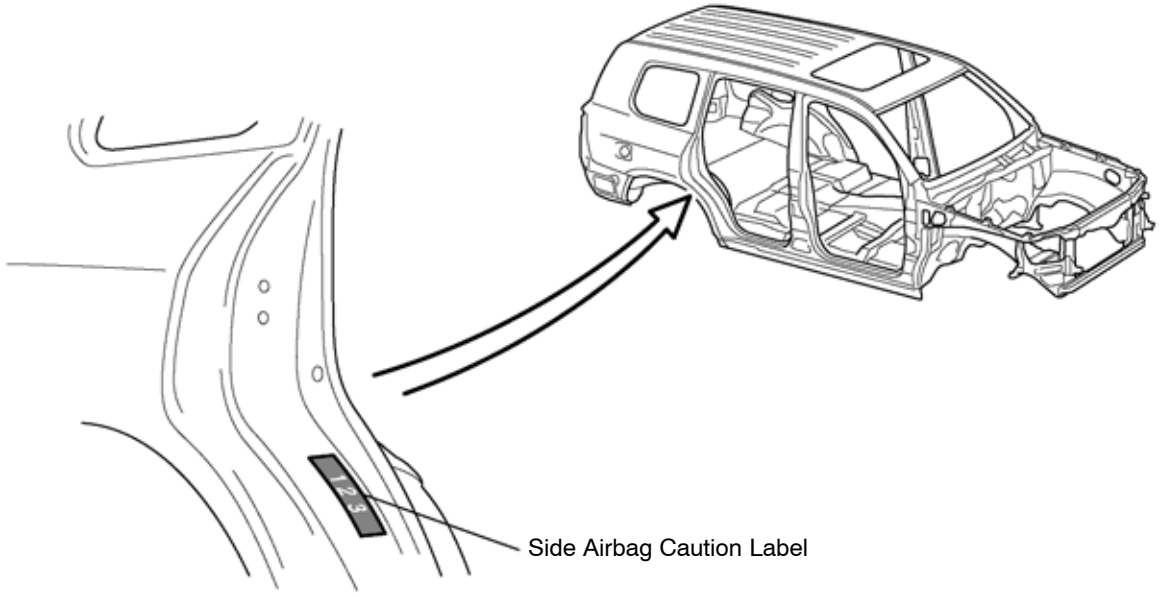
1
2
3
Side Airbag Caution Label

F29694