

F RELAY LOCATIONS

[Seat]
(Rear No.2 Seat)

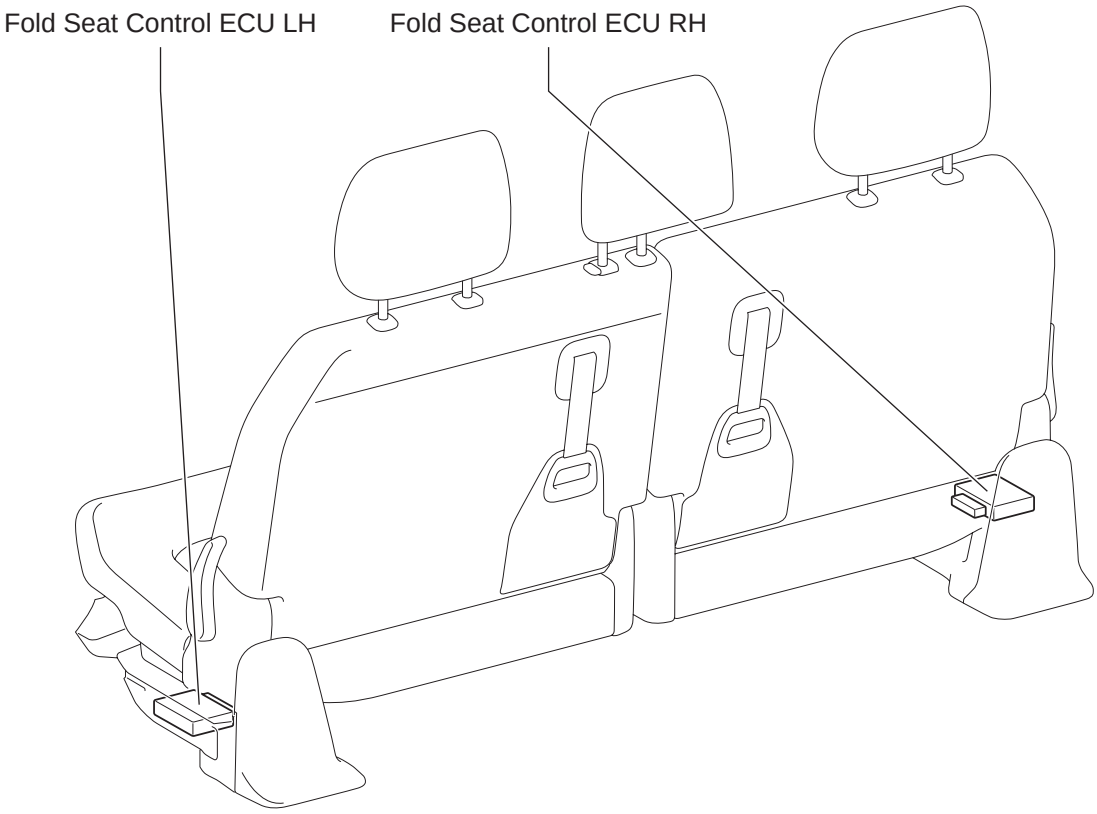


F RELAY LOCATIONS

[Body]
(LHD)

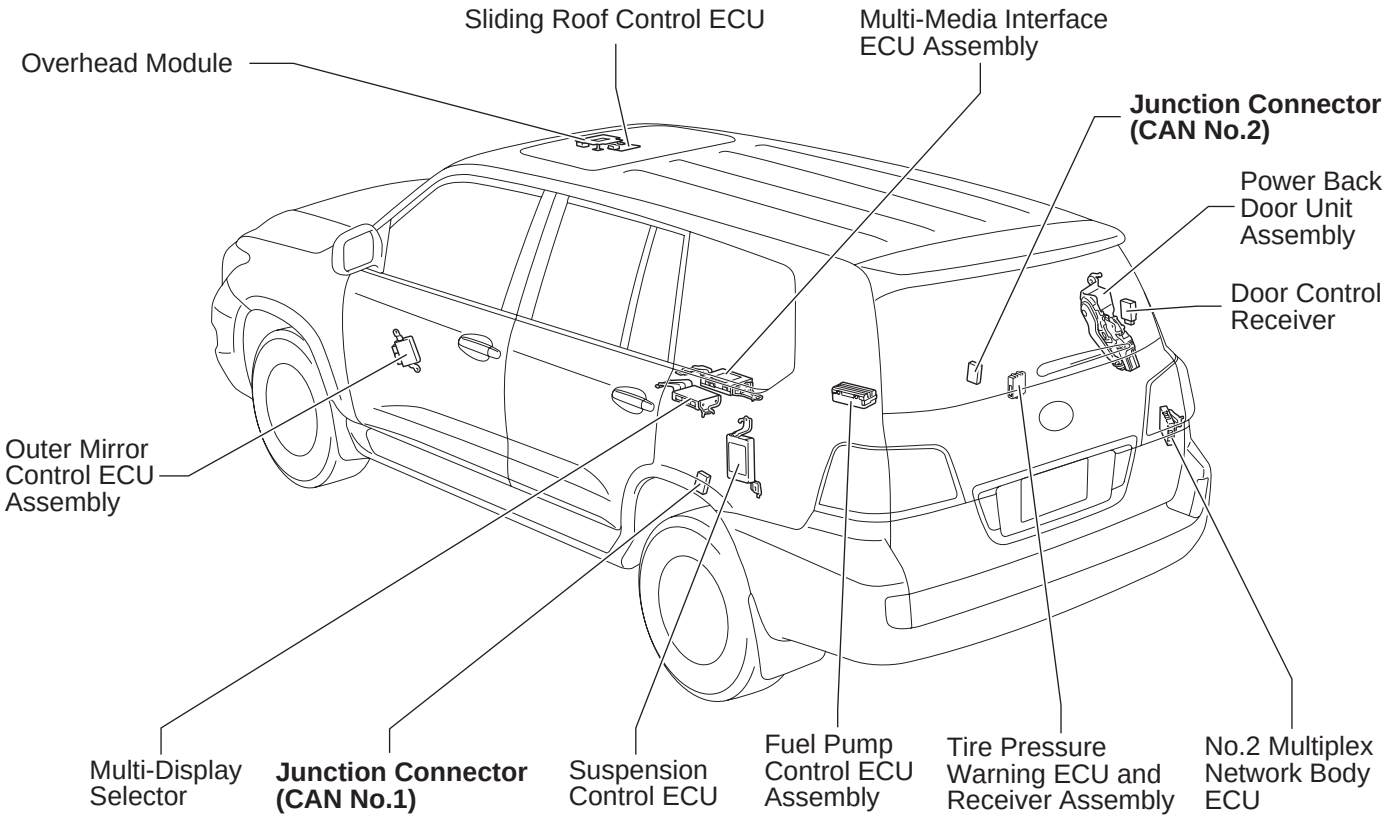


(RHD)

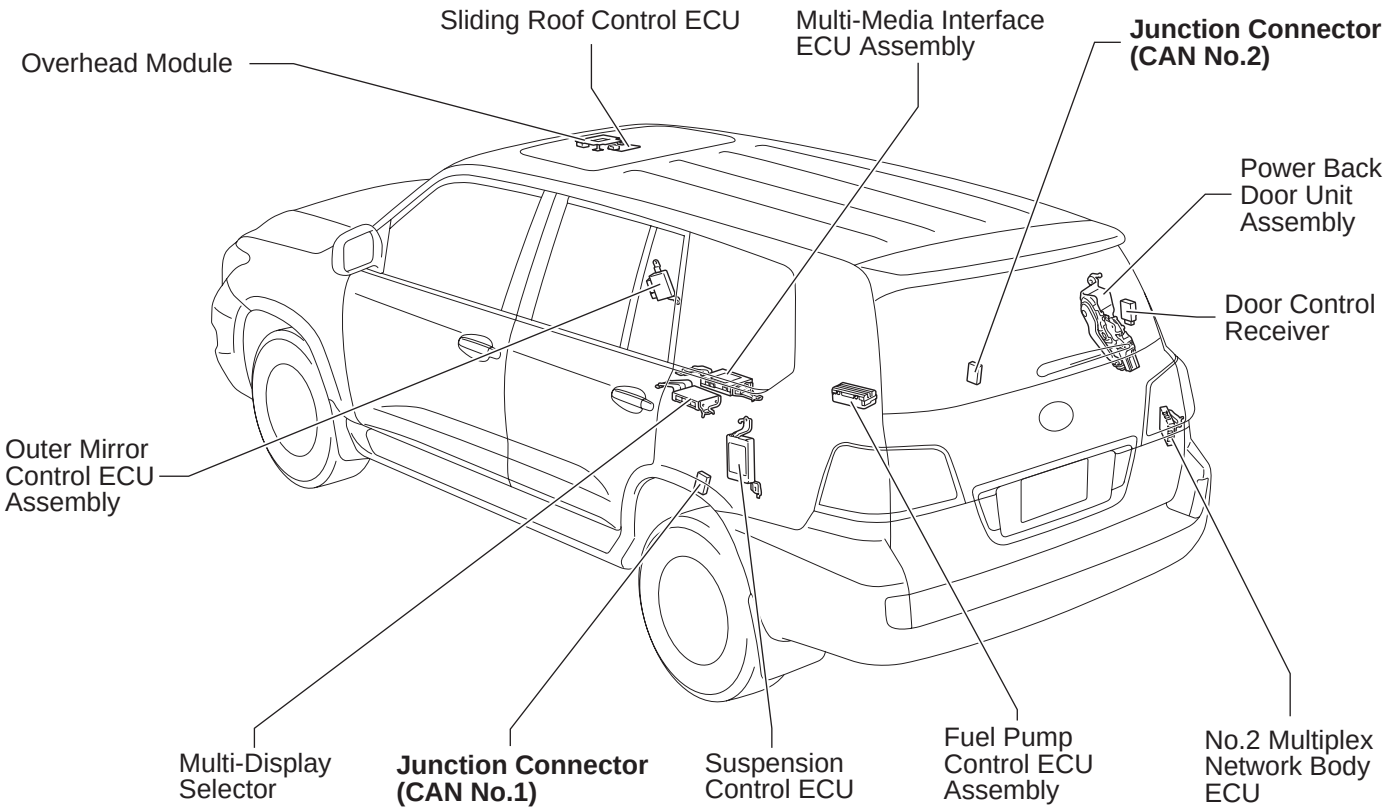


F RELAY LOCATIONS


[Body]
(LHD)

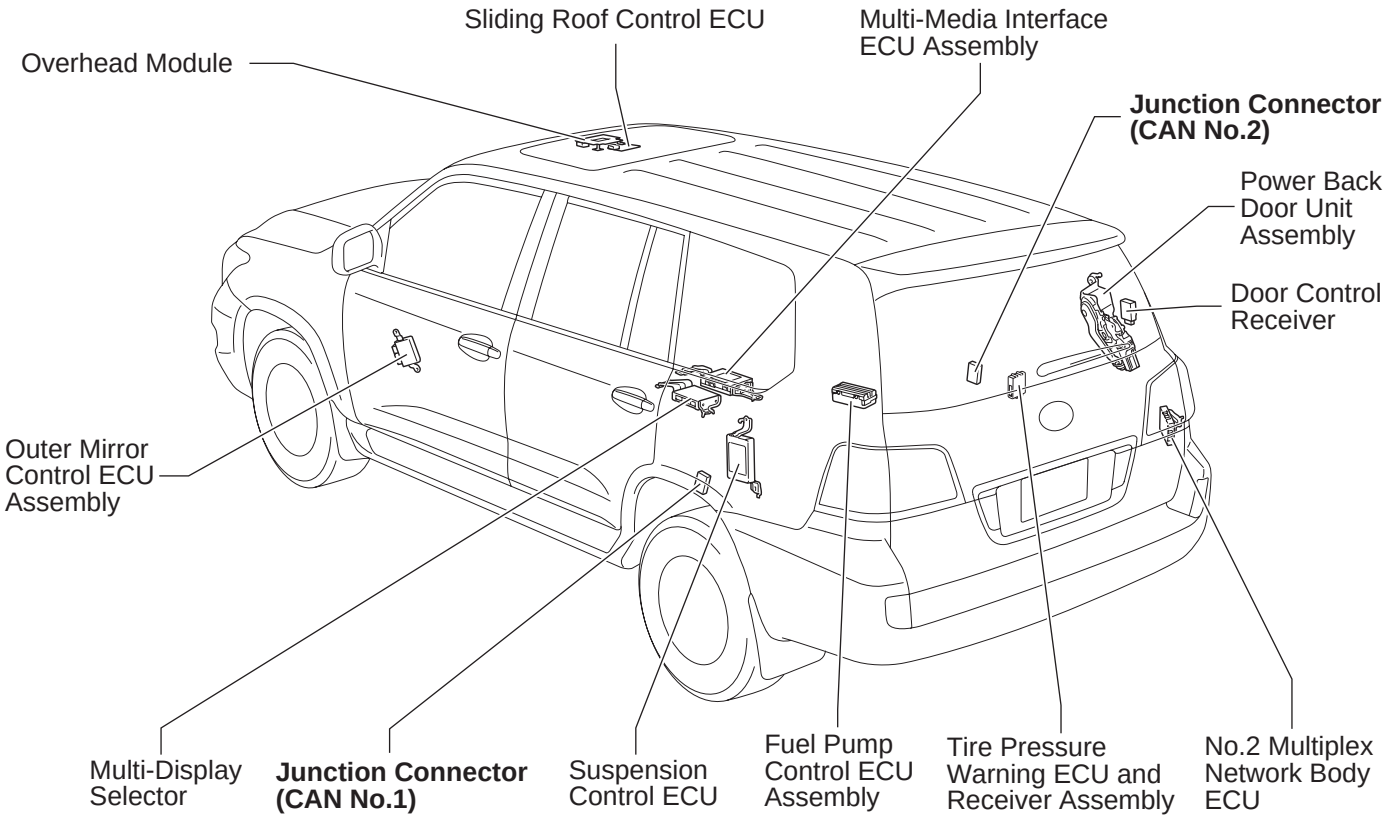

(RHD)

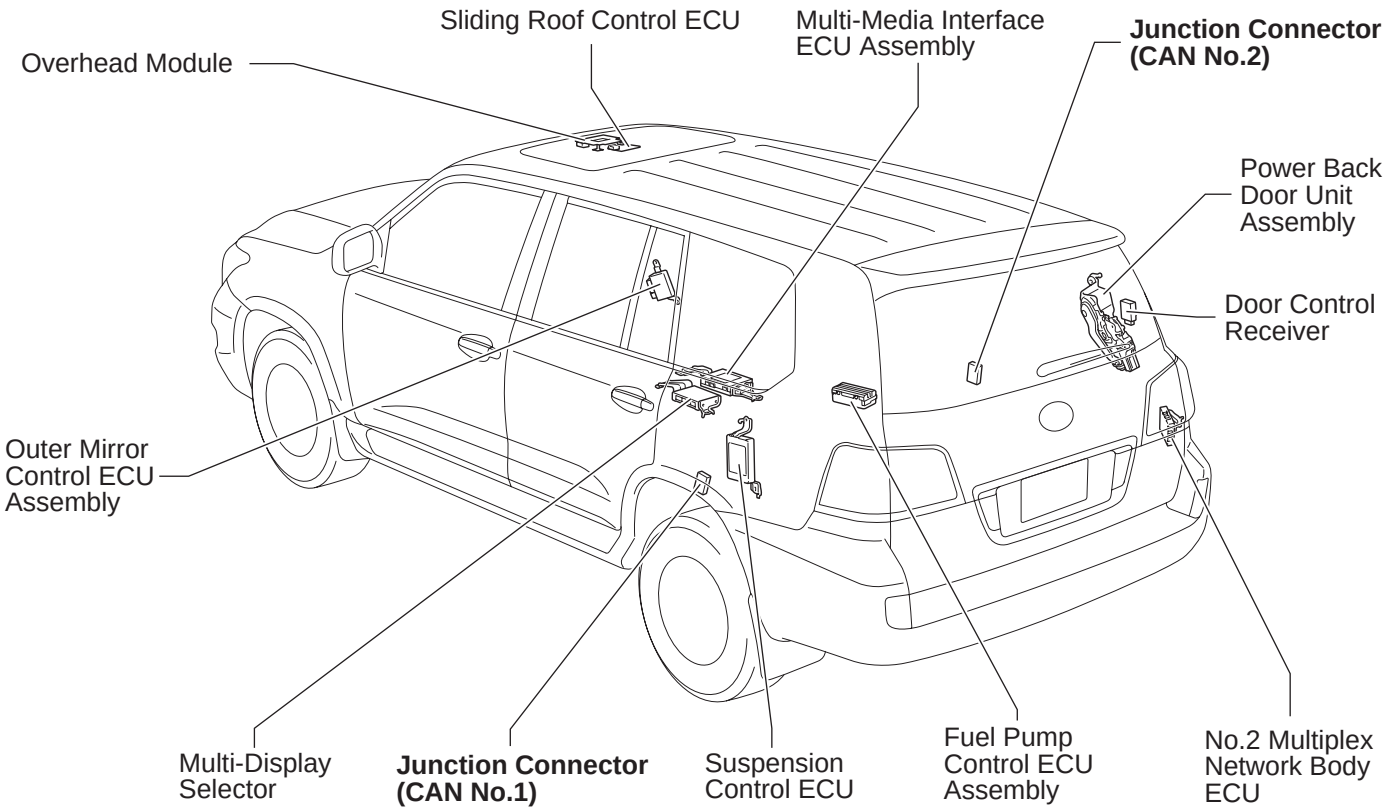


[Cowl Side J/B LH Assembly Inner Circuit]

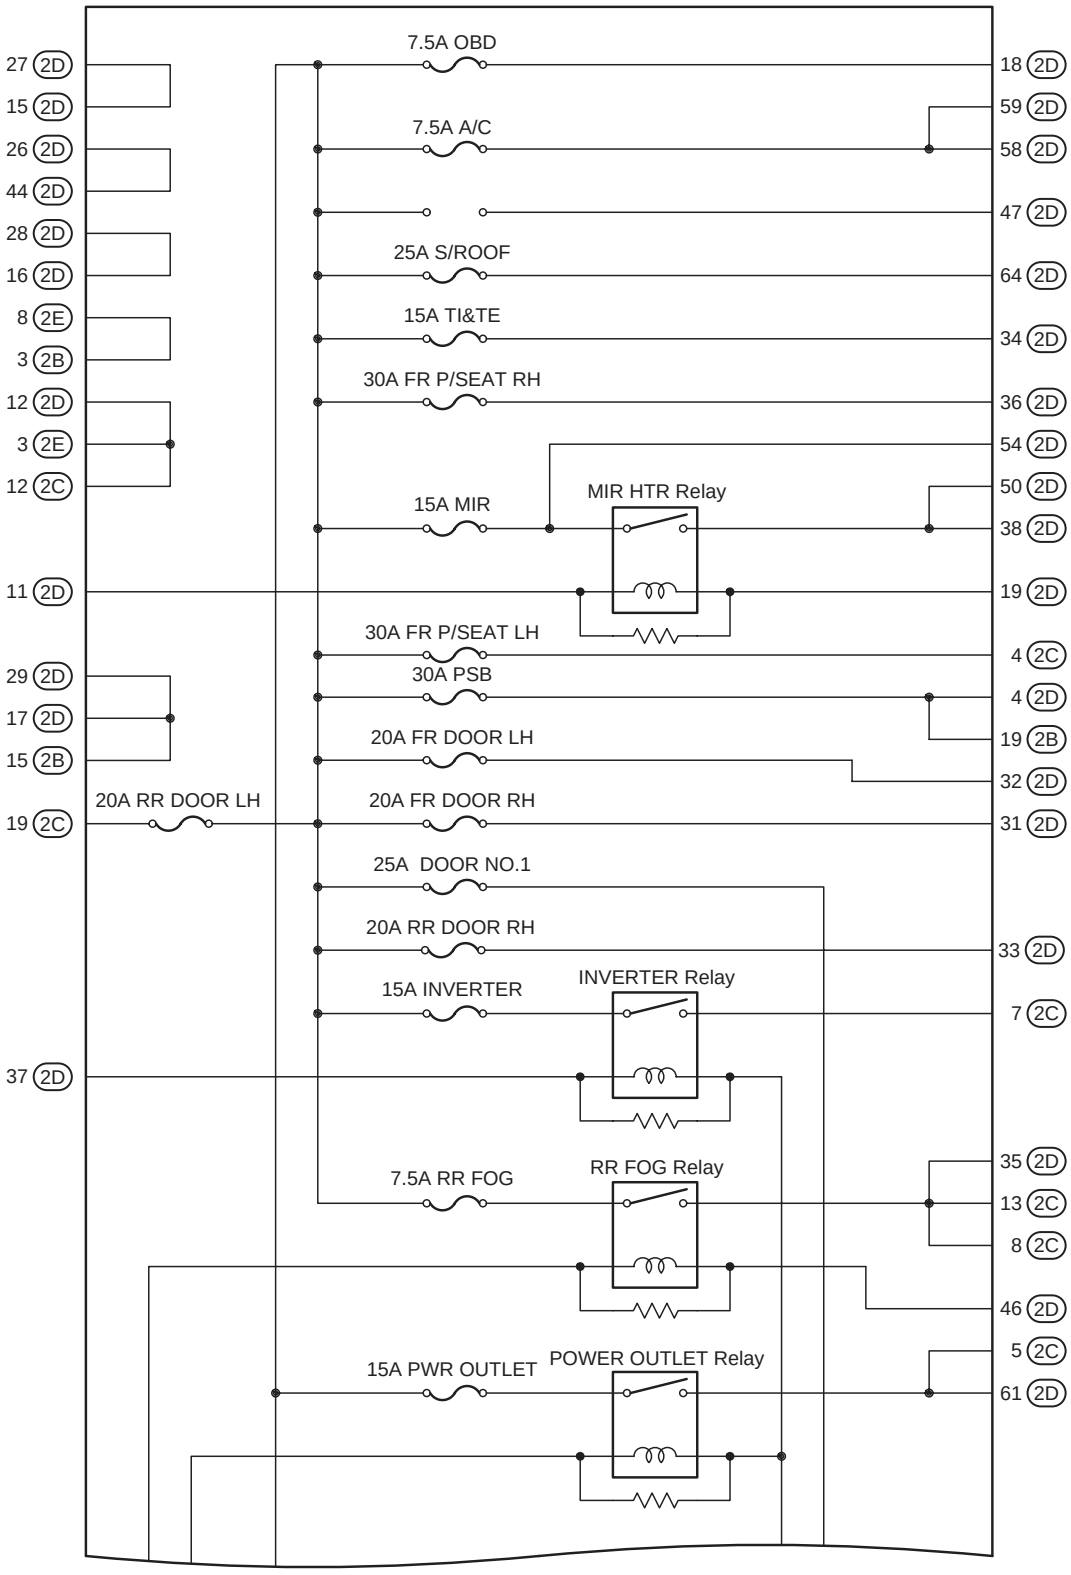

(Cont. Next Page)


(Cont'd)

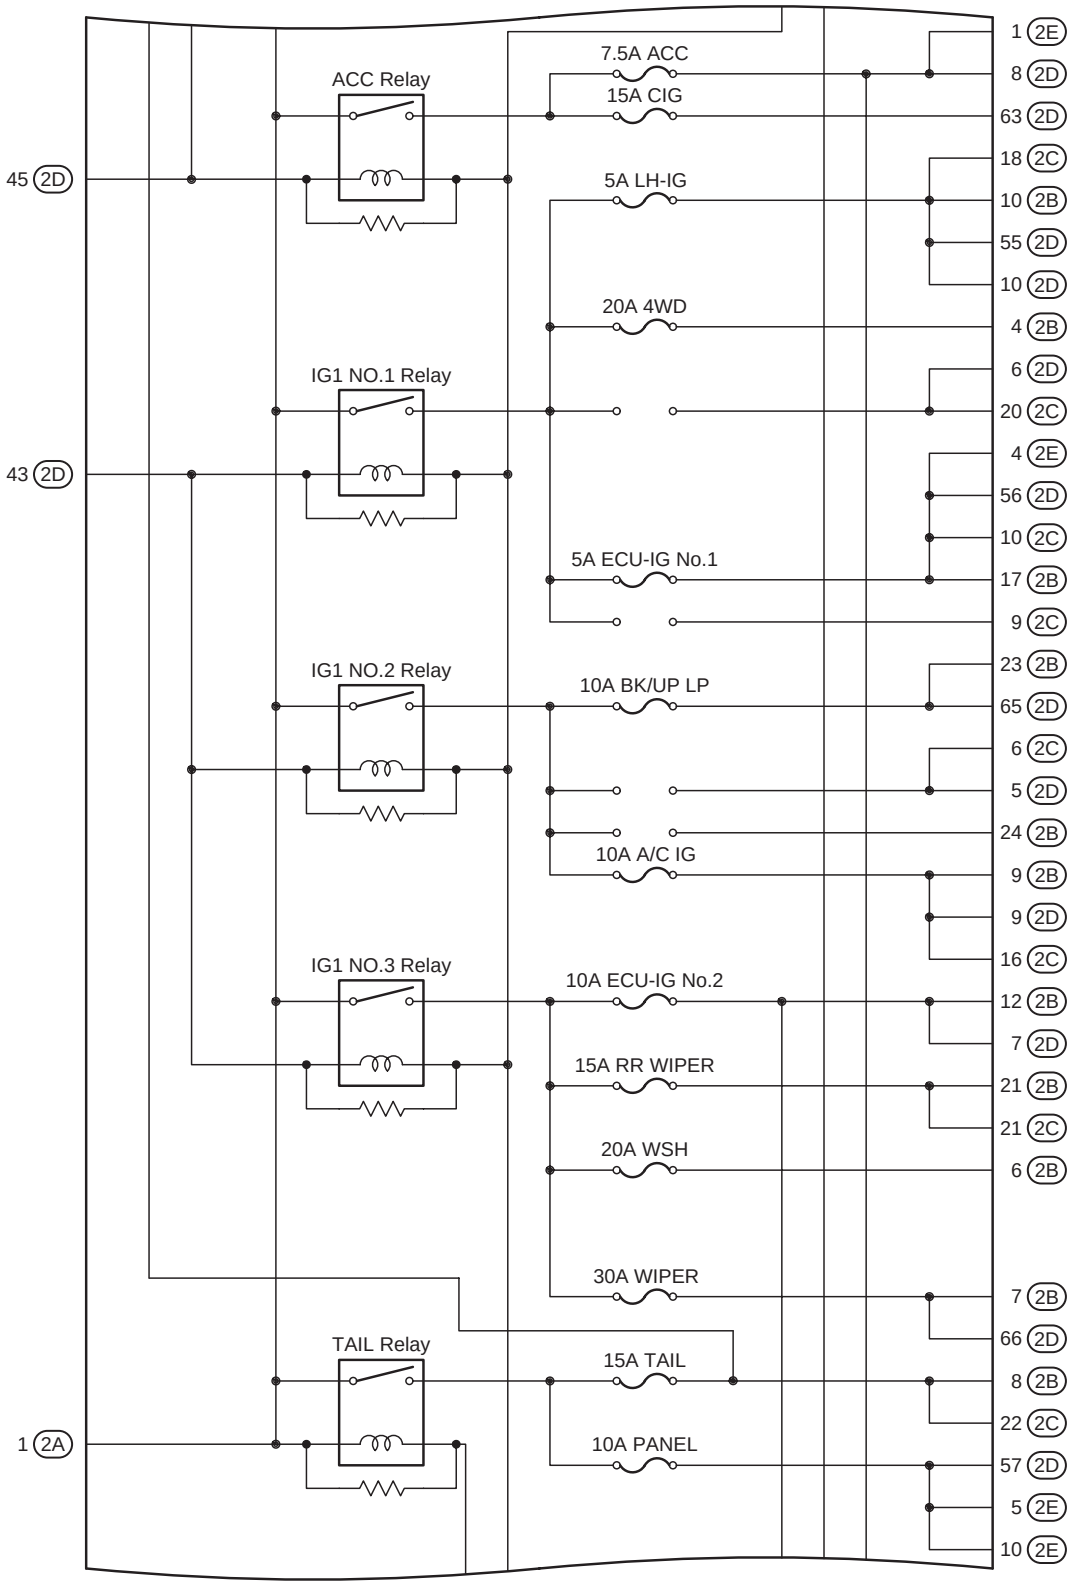

(Cont. Next Page)


[Cowl Side J/B LH Assembly Inner Circuit]

* 1:Before Jan. 2012 Production
* 2:From Jan. 2012 Production until Aug. 2014 Production

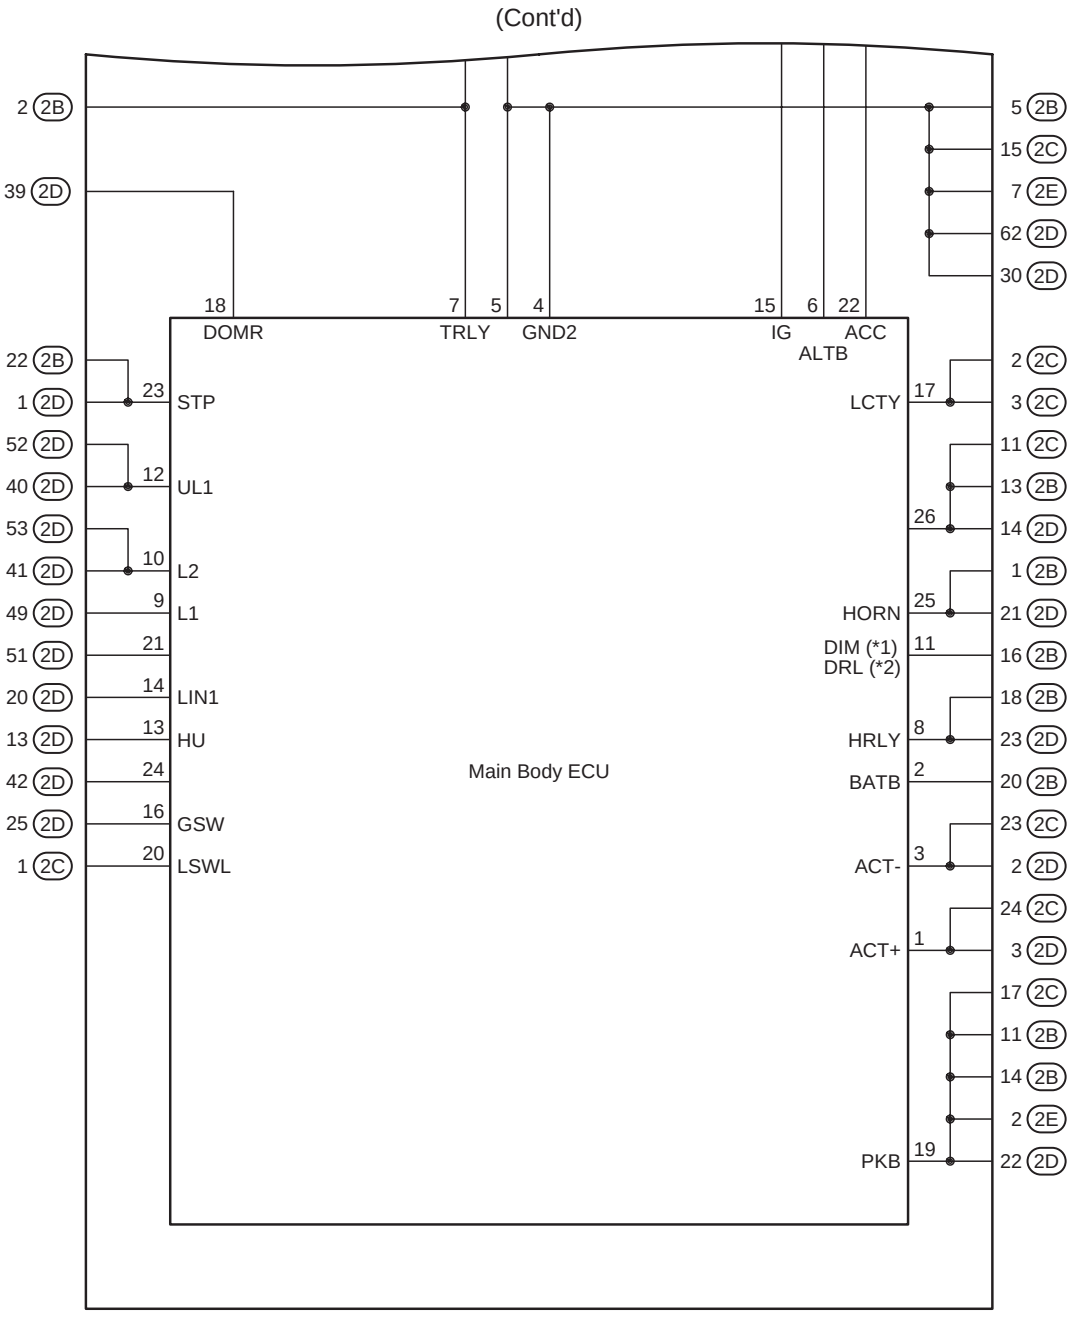


F RELAY LOCATIONS

: Cowl Side J/B LH Assembly	**Cowl Side Left (See Page 21)**

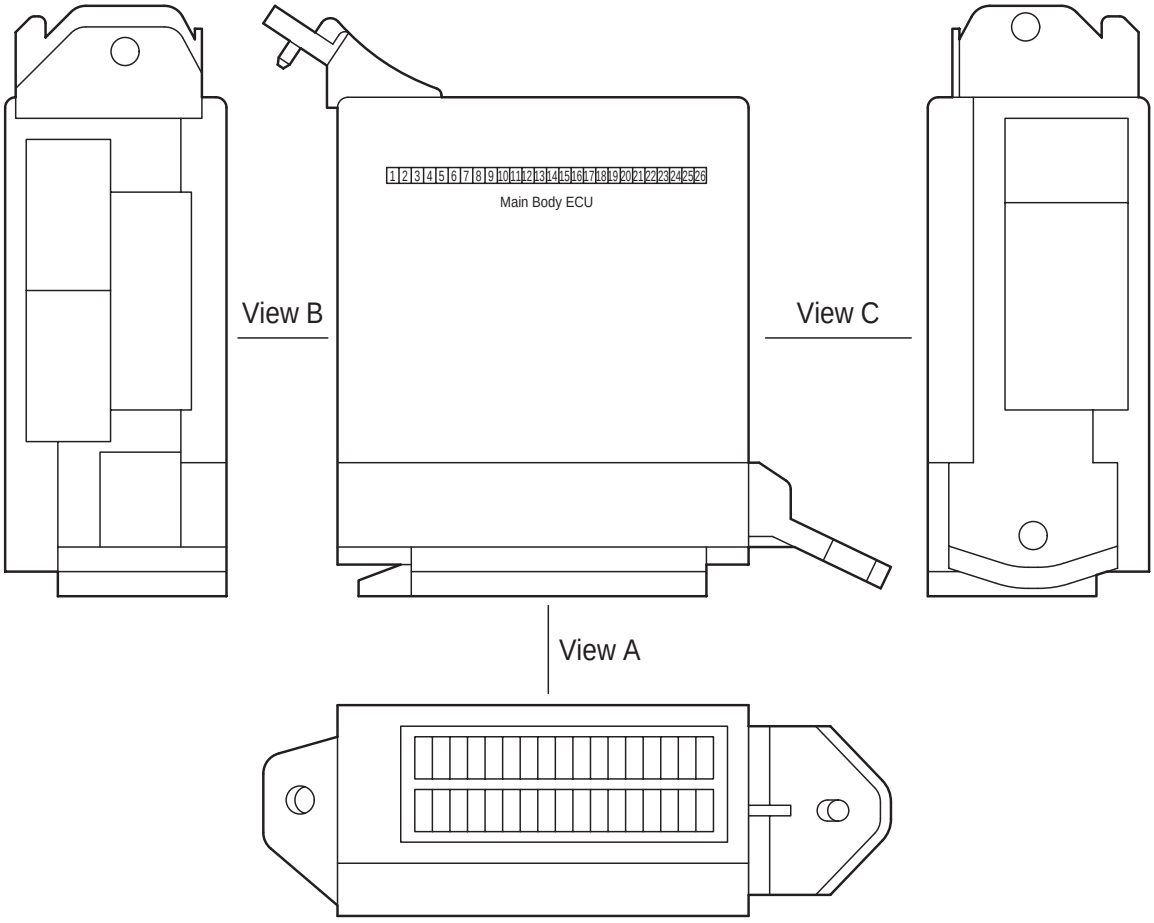


View A

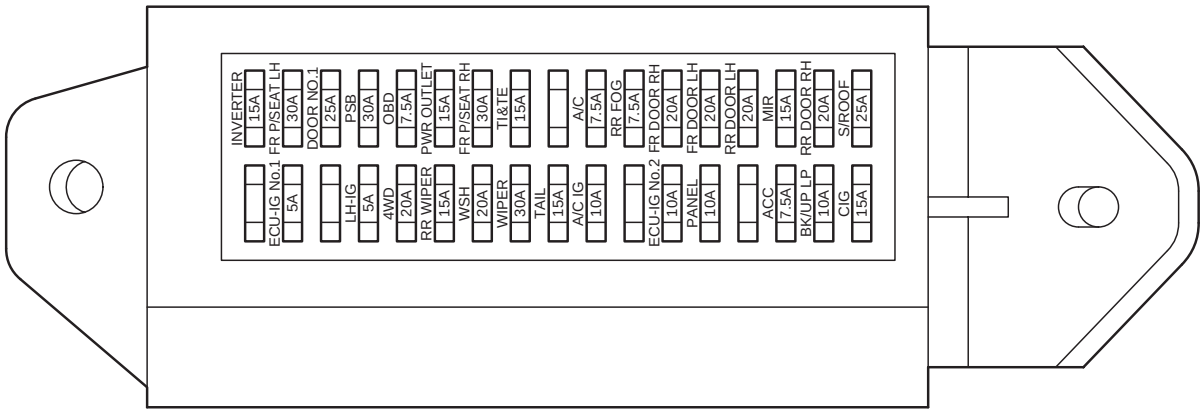

INVERTER 15A
FR P/SEAT LH 30A
DOOR NO.1 25A
PSB 30A
OBD 7.5A
PWR OUTLET 15A
FR P/SEAT RH 30A
TI&TE 15A
A/C 7.5A
RR FOG 7.5A
FR DOOR RH 20A
FR DOOR LH 20A
RR DOOR LH 20A
MIR 15A
RR DOOR RH 20A
S/ROOF 25A
ECU-IG No.1 5A
LH-IG 5A
4WD 20A
RR WIPER 15A
WSH 20A
WIPER 30A
TAIL 15A
A/C IG 10A
ECU-IG No.2 10A
PANEL 10A
ACC 7.5A
BK/UP LP 10A
CIG 15A

F RELAY LOCATIONS

: Cowl Side J/B LH Assembly	Cowl Side Left (See Page 21)

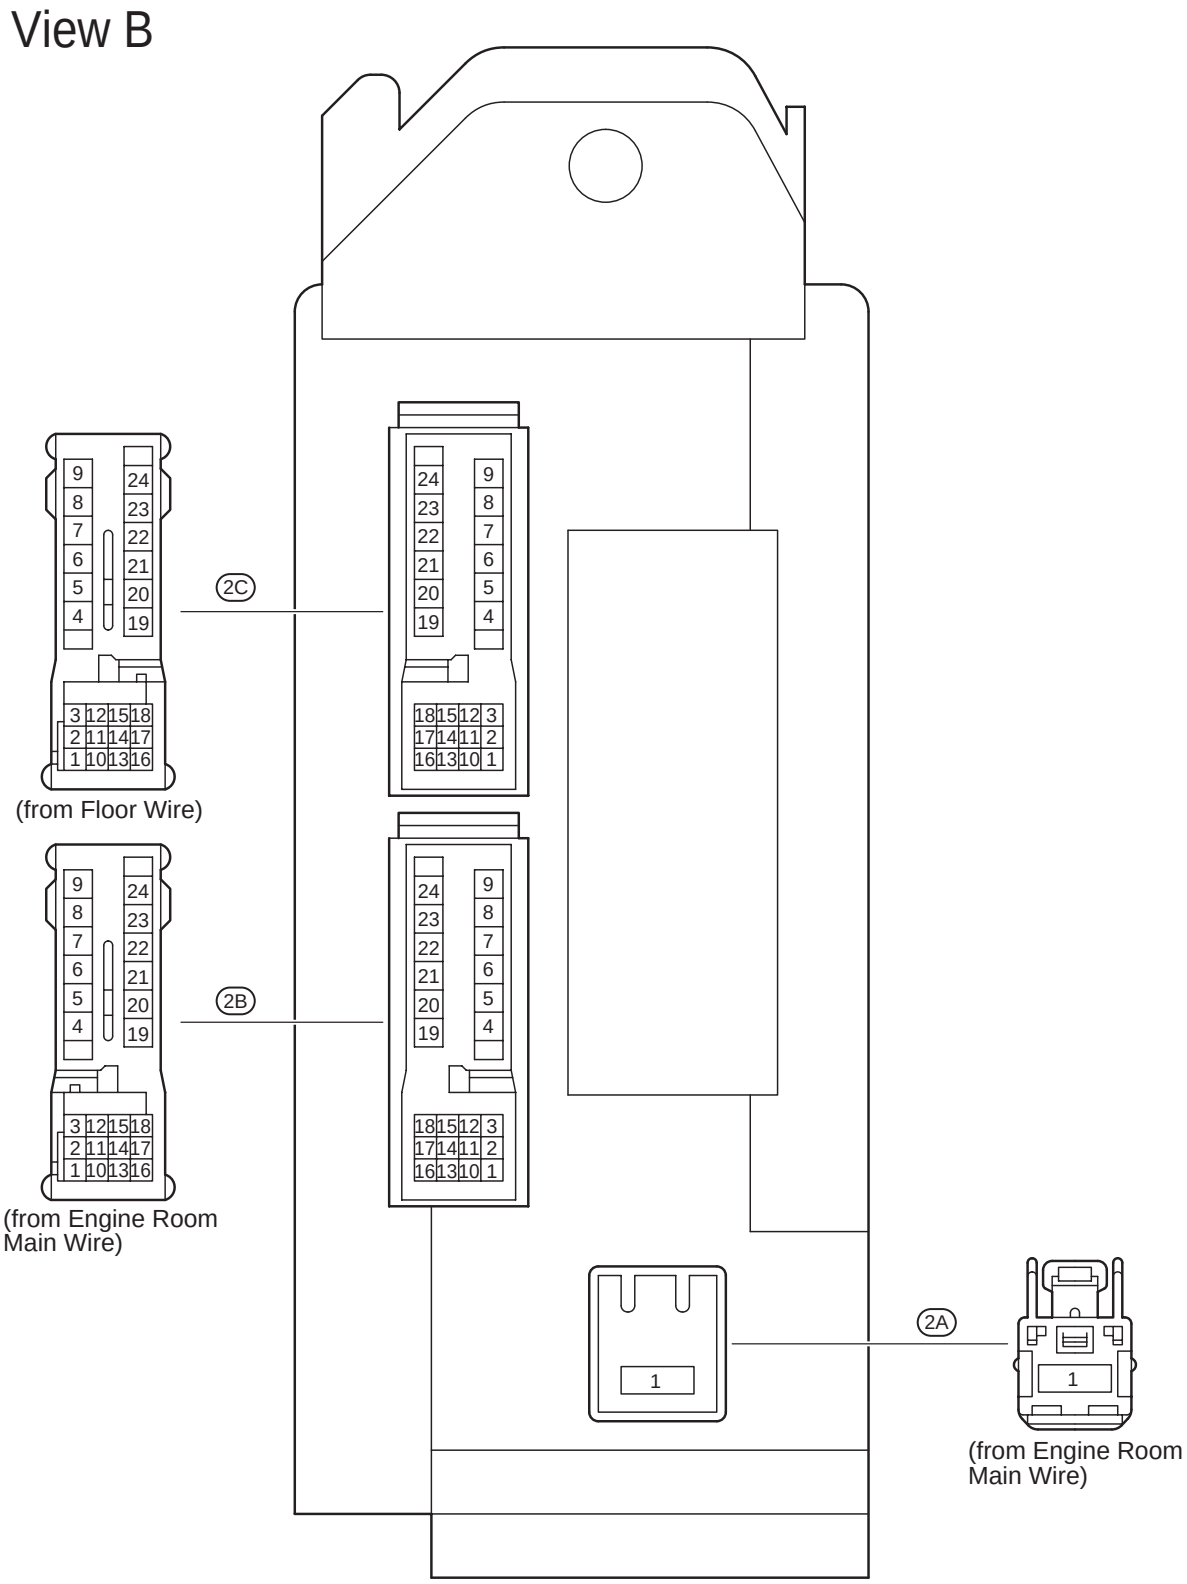


View C

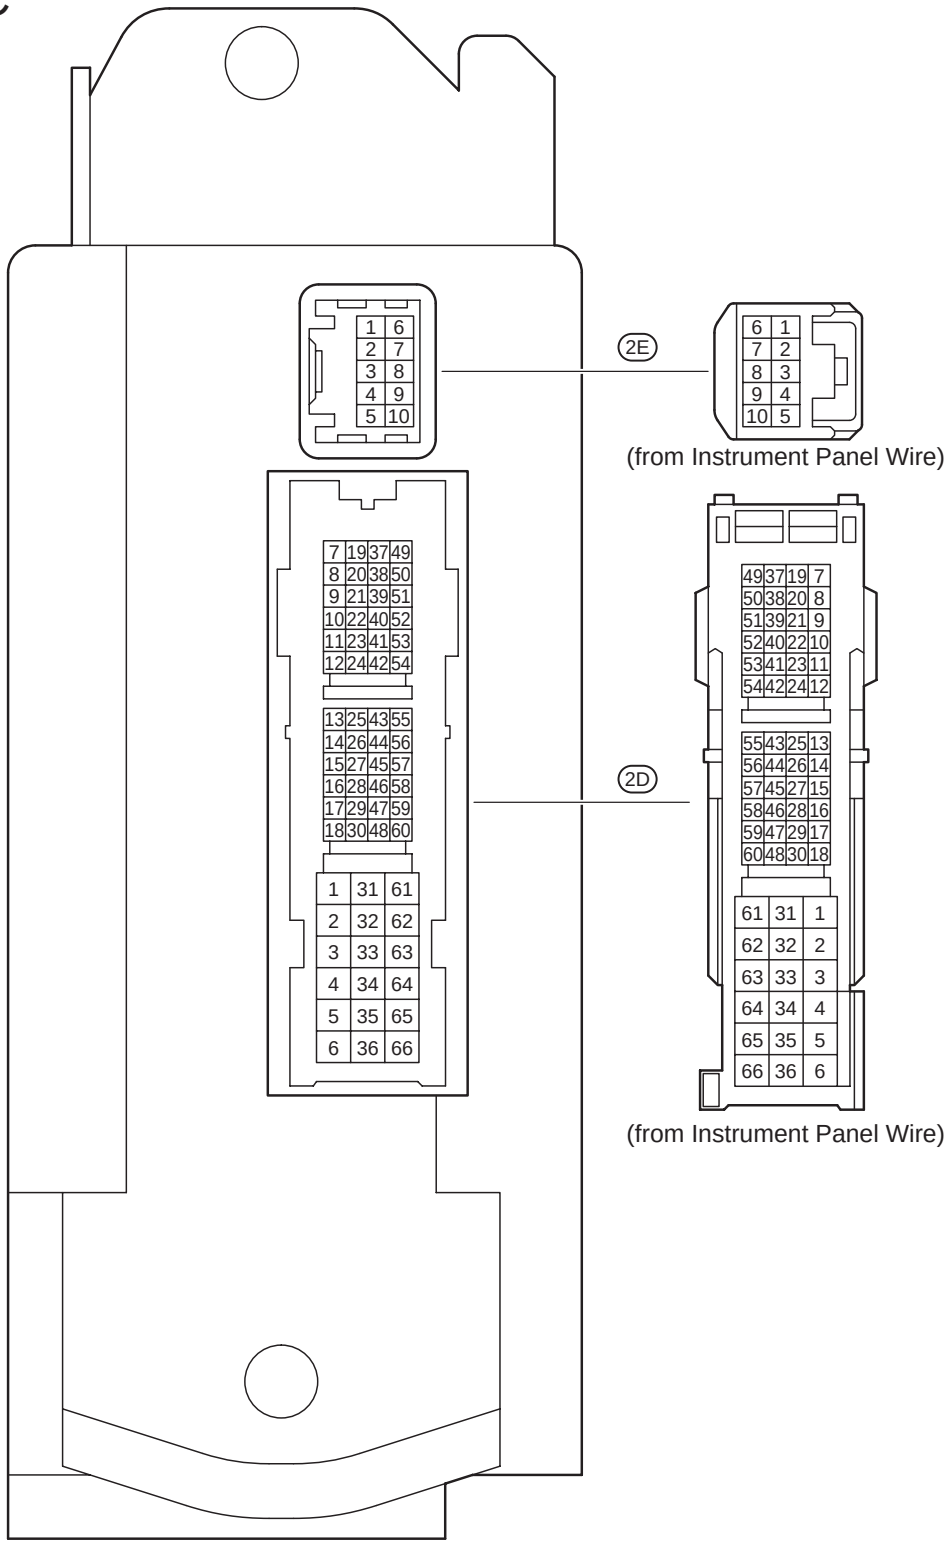
1 6
2 7
3 8
4 9
5 10
2E
6 1
7 2
8 3
9 4
10 5
(from Instrument Panel Wire)
7 19 37 49
8 20 38 50
9 21 39 51
10 22 40 52
11 23 41 53
12 24 42 54
13 25 43 55
14 26 44 56
15 27 45 57
16 28 46 58
17 29 47 59
18 30 48 60
1 31 61
2 32 62
3 33 63
4 34 64
5 35 65
6 36 66
2D
49 37 19 7
50 38 20 8
51 39 21 9
52 40 22 10
53 41 23 11
54 42 24 12
55 43 25 13
56 44 26 14
57 45 27 15
58 46 28 16
59 47 29 17
60 48 30 18
61 31 1
62 32 2
63 33 3
64 34 4
65 35 5
66 36 6
(from Instrument Panel Wire)

F RELAY LOCATIONS


[Cowl Side J/B RH Assembly Inner Circuit]

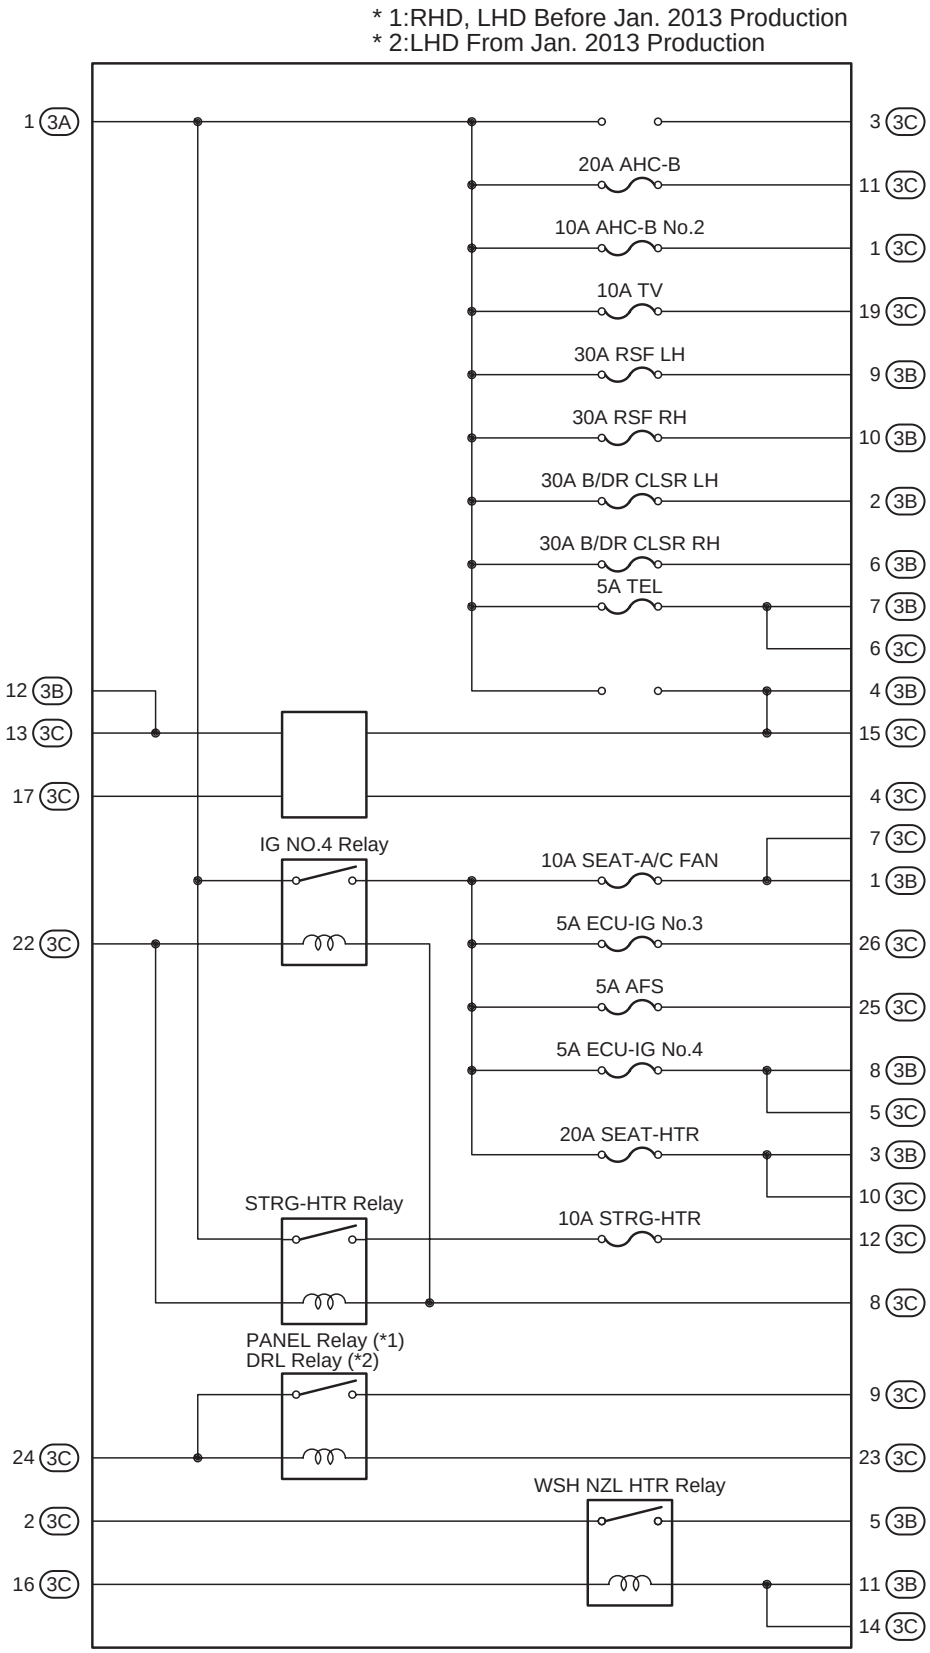


F RELAY LOCATIONS

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)

(LHD) **(Inner Circuit : See Page 54)**

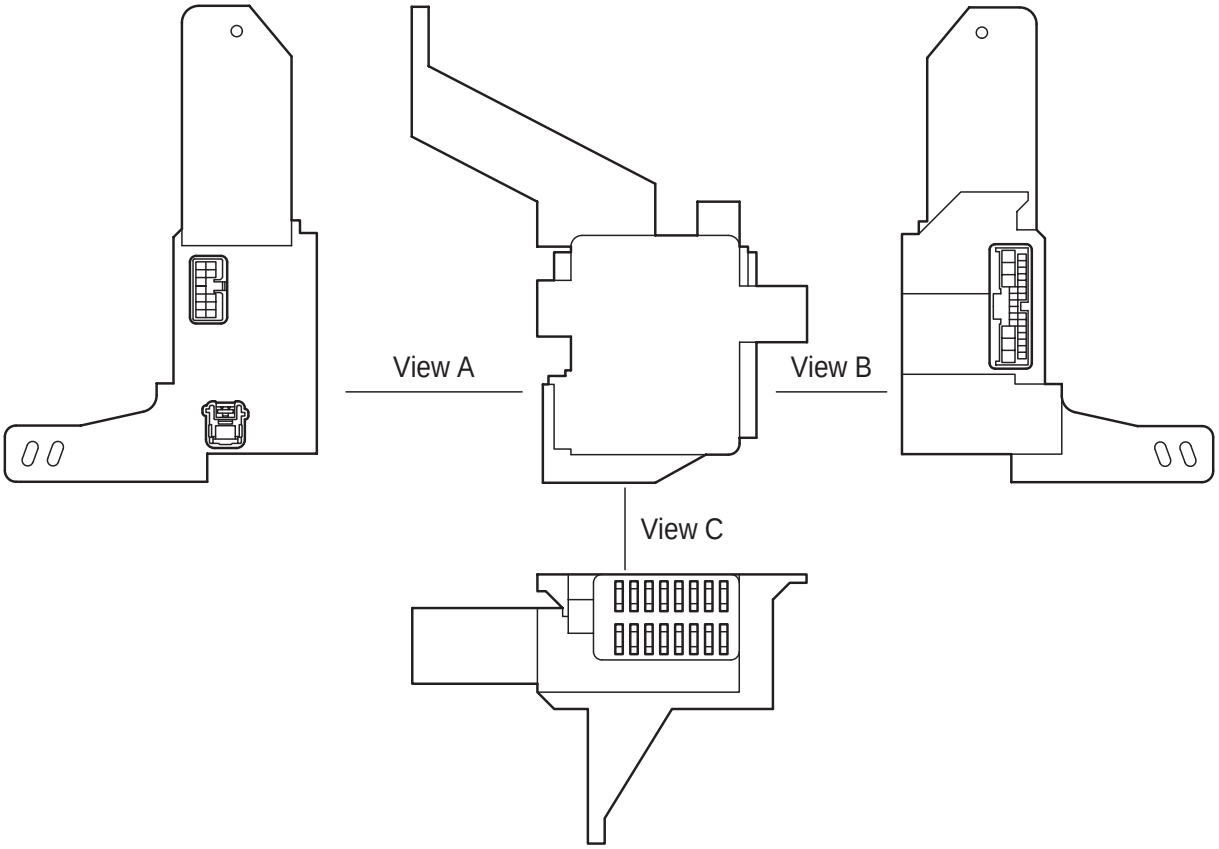

View A

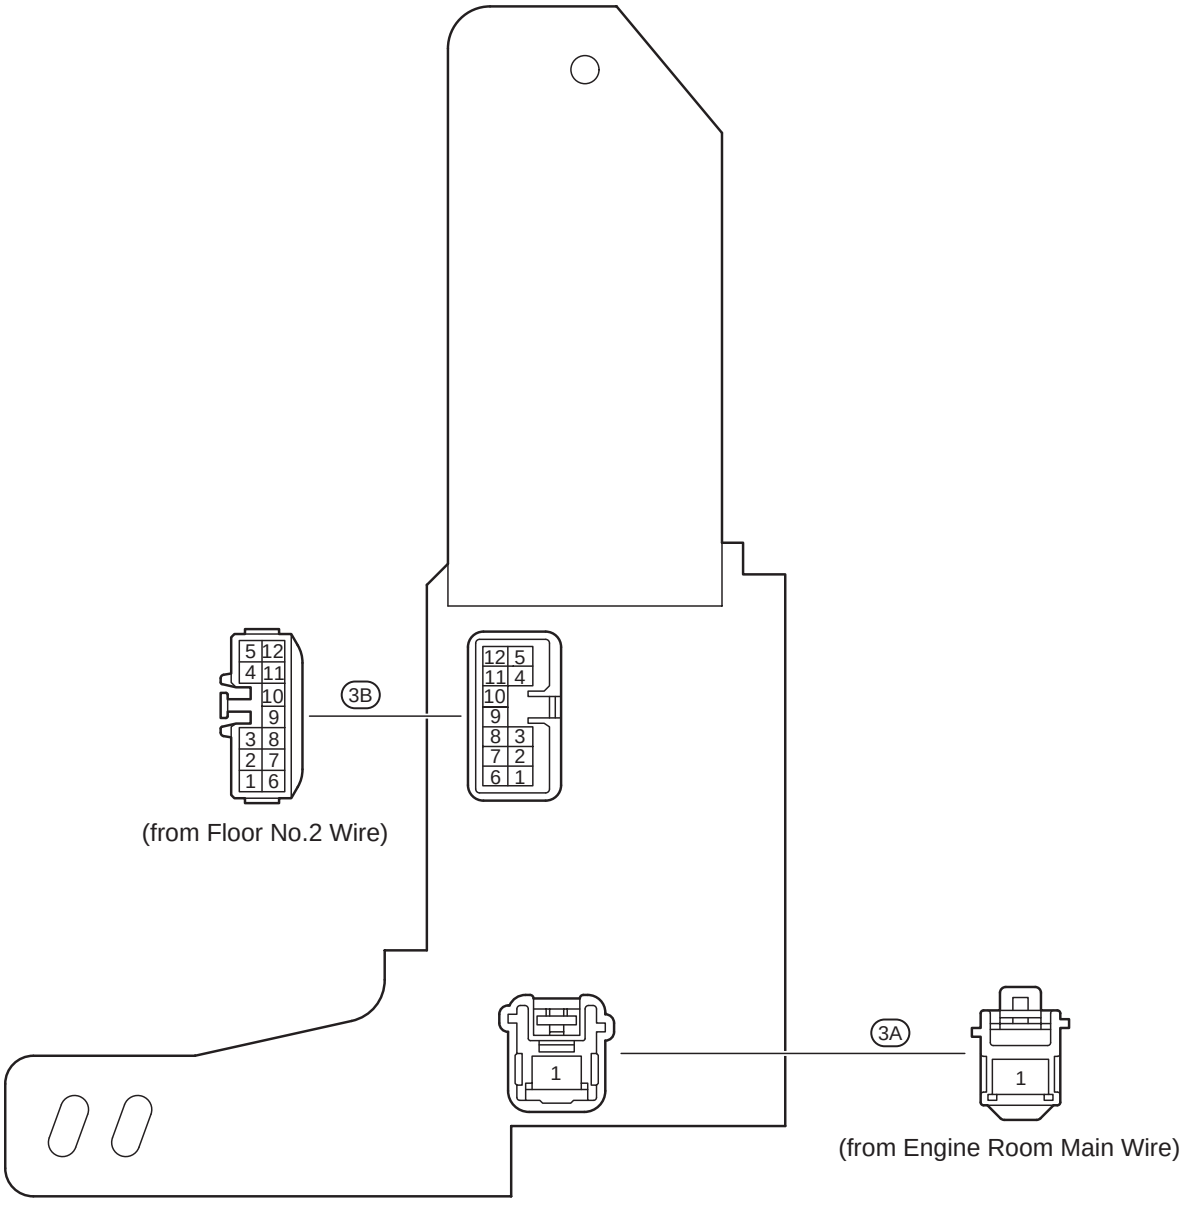

5 12
4 11
10
9
3 8
2 7
1 6
3B
12 5
11 4
10
9
8 3
7 2
6 1
(from Floor No.2 Wire)
1
3A
1
(from Engine Room Main Wire)

F RELAY LOCATIONS


: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)

(LHD) **(Inner Circuit : See Page 54)**

View B

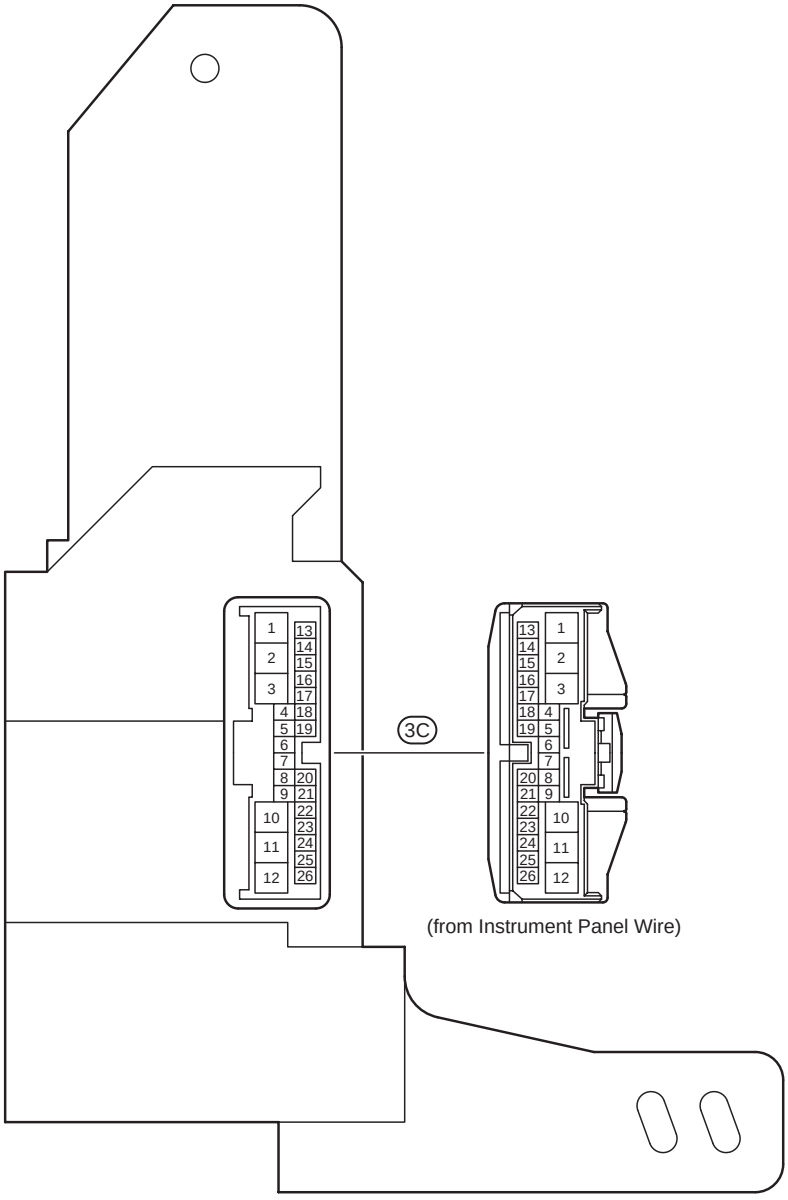


View C

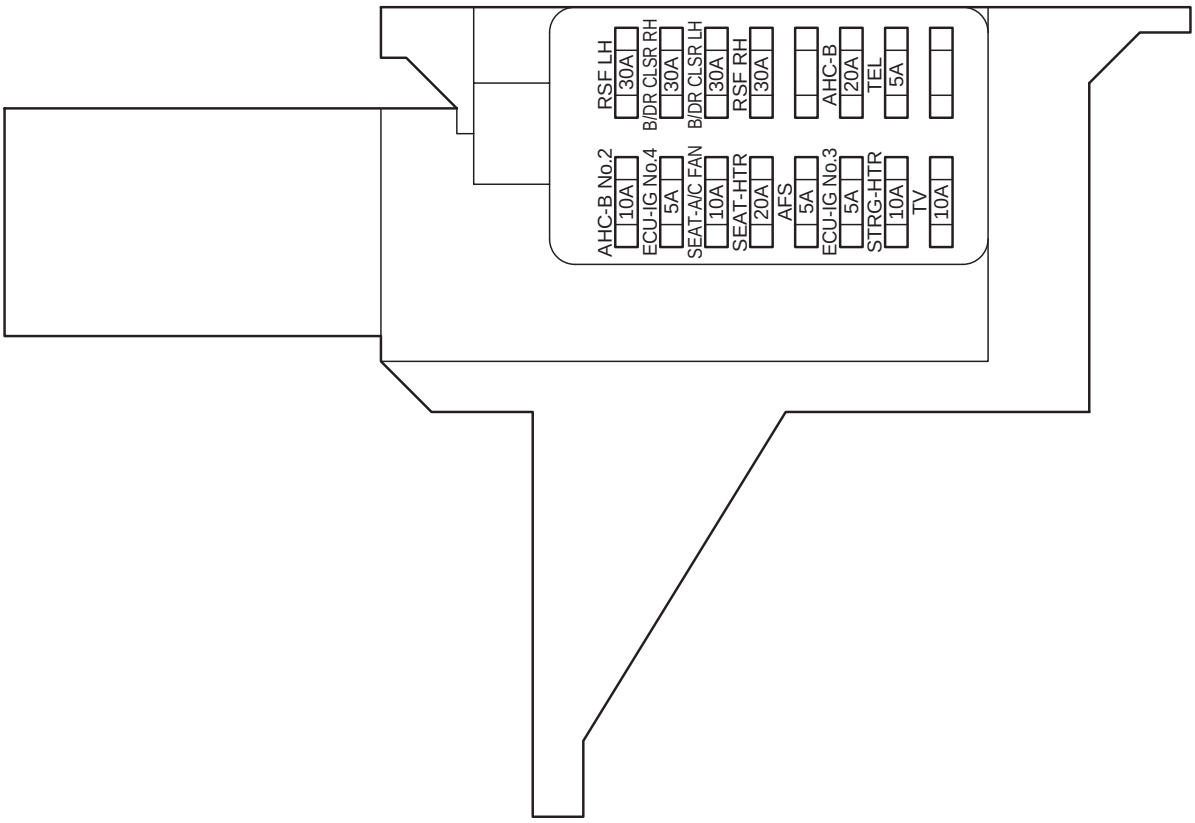
RSF LH
30A
B/DR CLSR RH
30A
B/DR CLSR LH
30A
RSF RH
30A
AHC-B
20A
TEL
5A
AHC-B No.2
10A
ECU-IG No.4
5A
SEAT-A/C FAN
10A
SEAT-HTR
20A
AFS
5A
ECU-IG No.3
5A
STRG-HTR
10A
TV
10A


F RELAY LOCATIONS

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)

(RHD) **(Inner Circuit : See Page 54)**

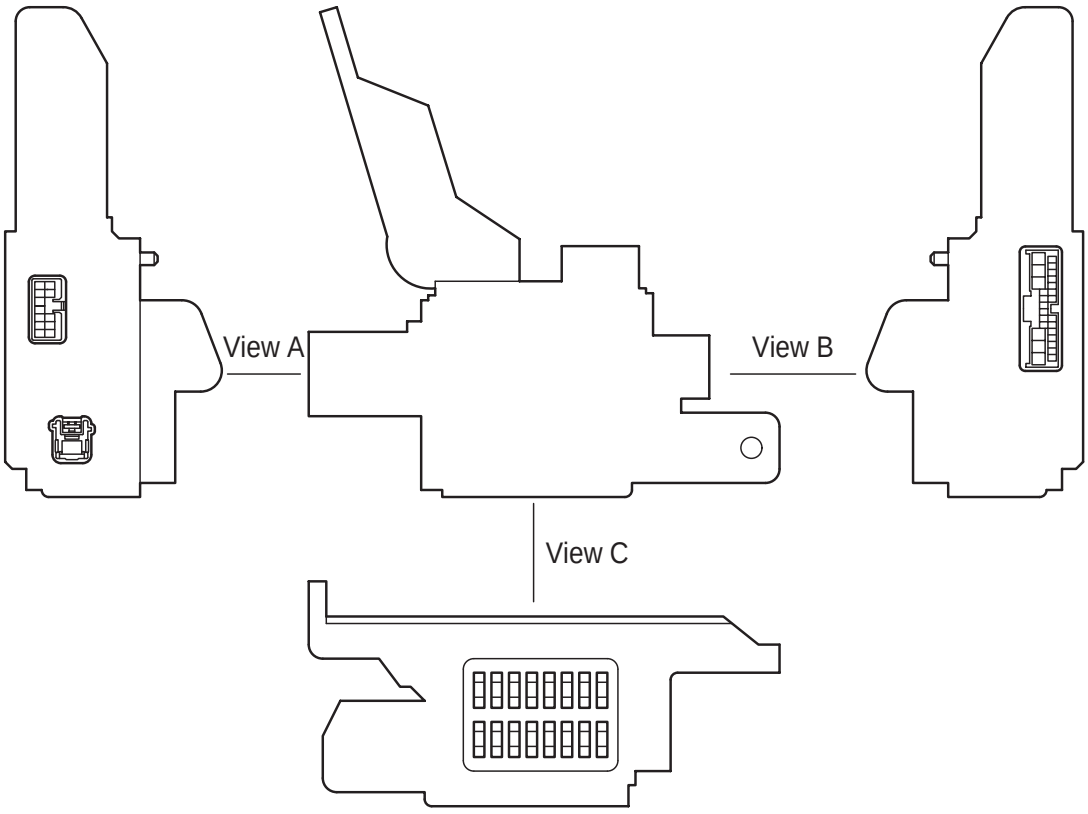

View A

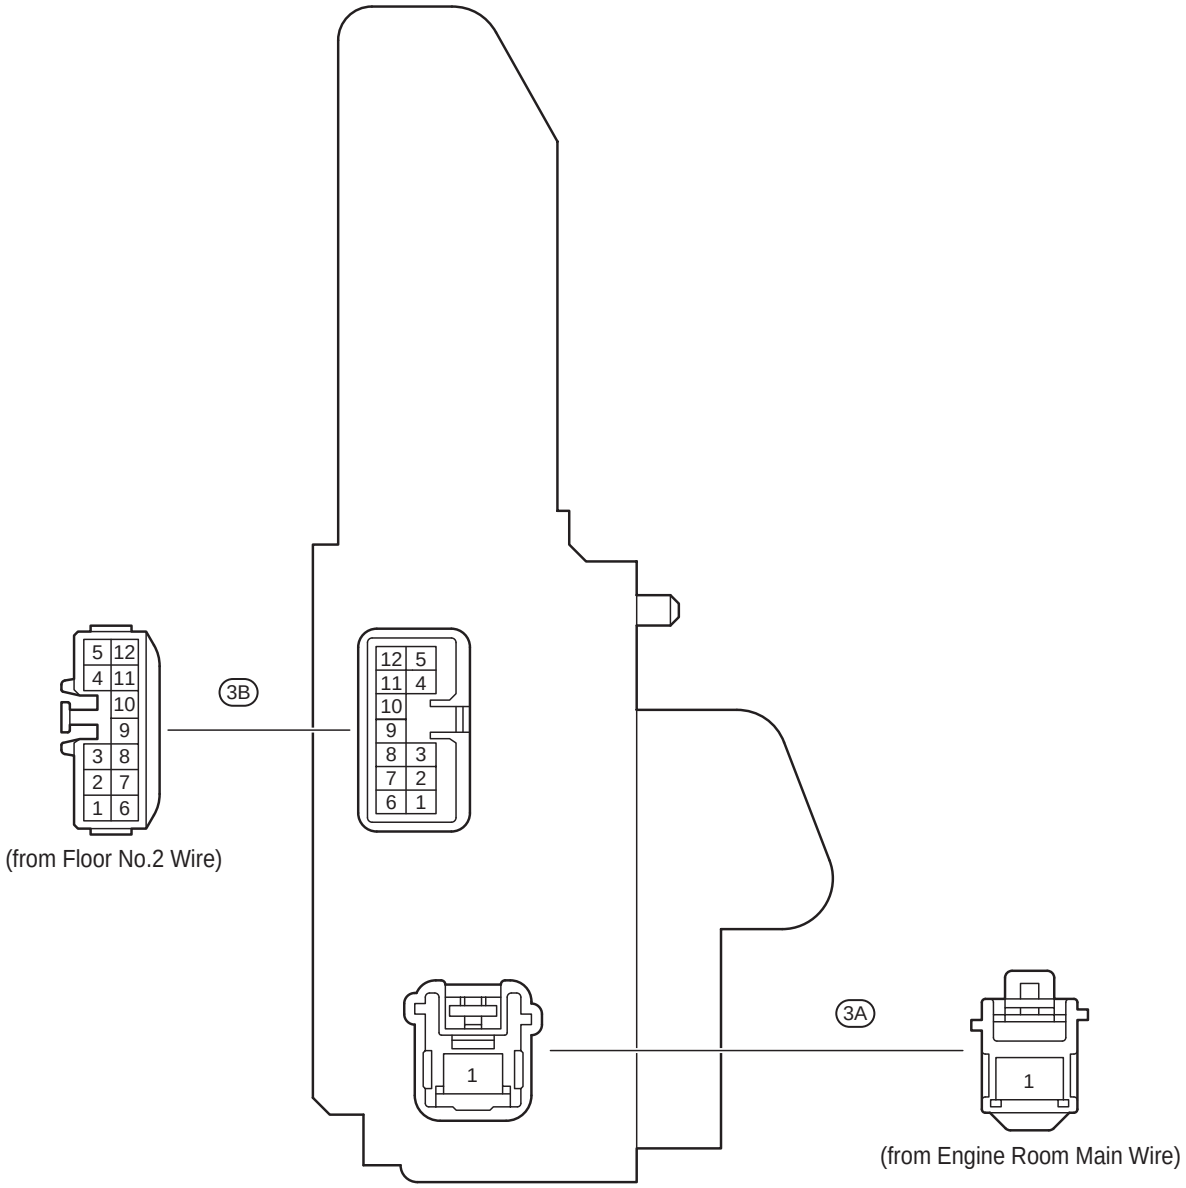

5 12
4 11
10
9
3 8
2 7
1 6
(from Floor No.2 Wire)
3B
12 5
11 4
10
9
8 3
7 2
6 1
1
3A
1
(from Engine Room Main Wire)

F RELAY LOCATIONS


: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)

(RHD) **(Inner Circuit : See Page 54)**

View B

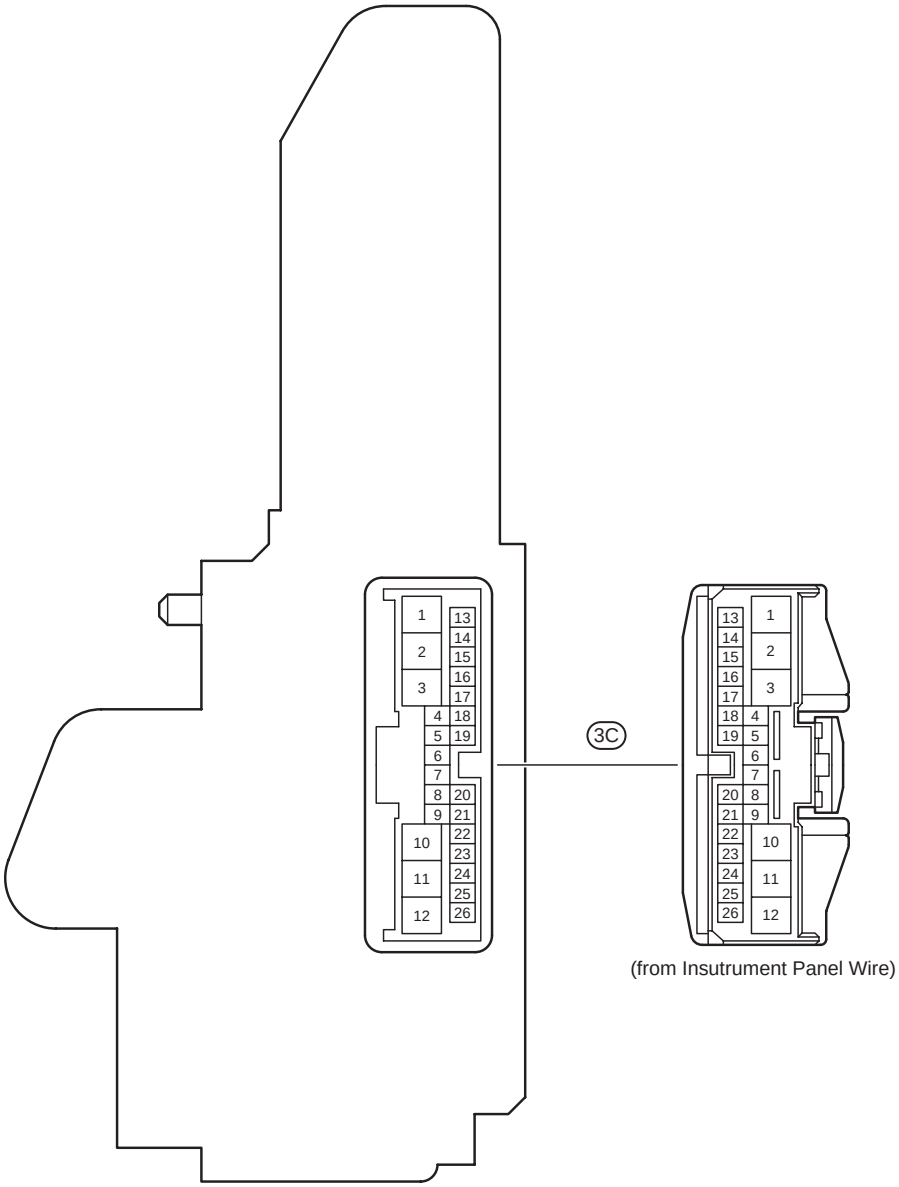


View C

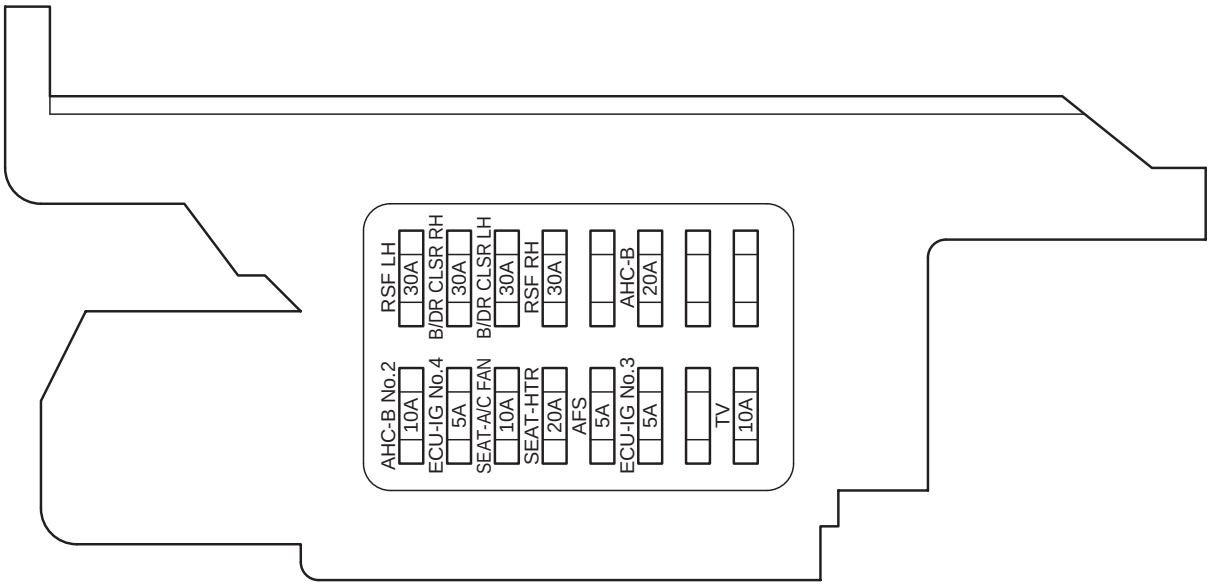

RSF LH
30A
B/DR CLSR RH
30A
B/DR CLSR LH
30A
RSF RH
30A
AHC-B
20A
AHC-B No.2
10A
ECU-IG No.4
5A
SEAT-A/C FAN
10A
SEAT-HTR
20A
AFS
5A
ECU-IG No.3
5A
TV
10A

F RELAY LOCATIONS

[Engine Compartment]
(LHD)

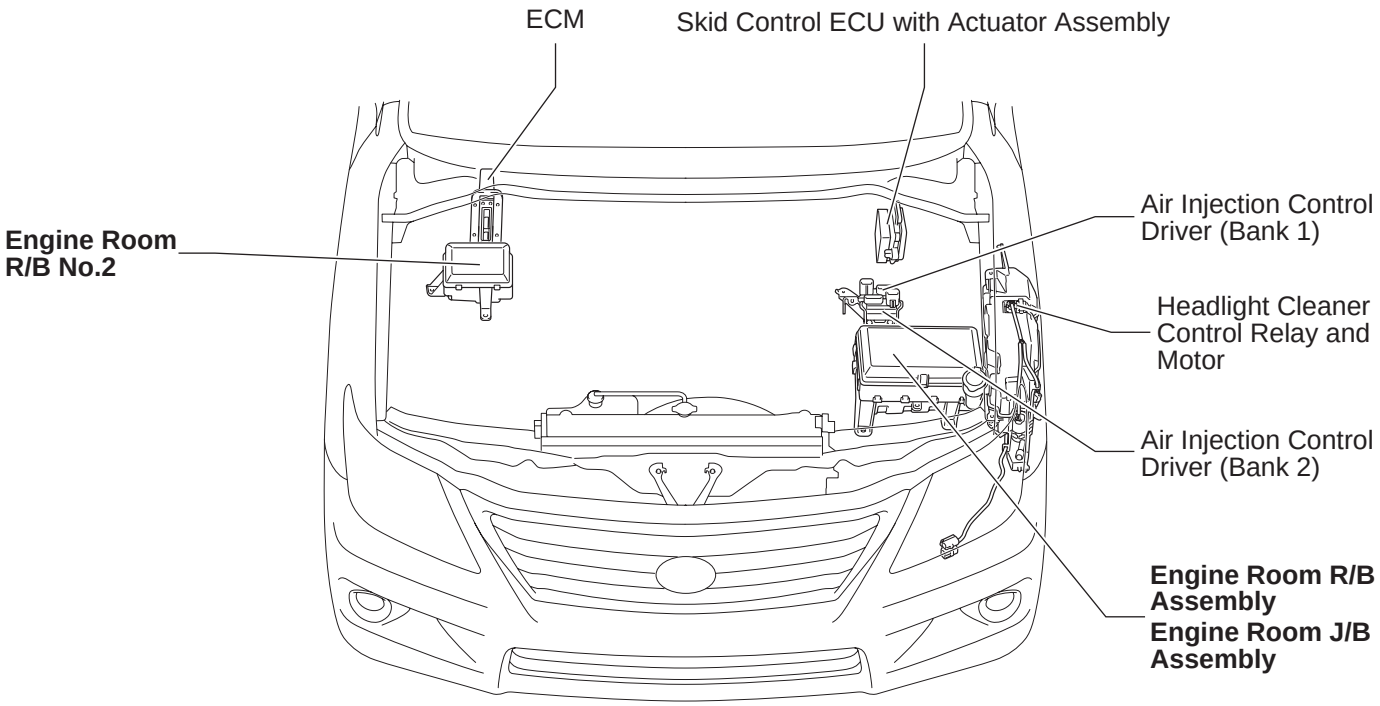


(RHD)

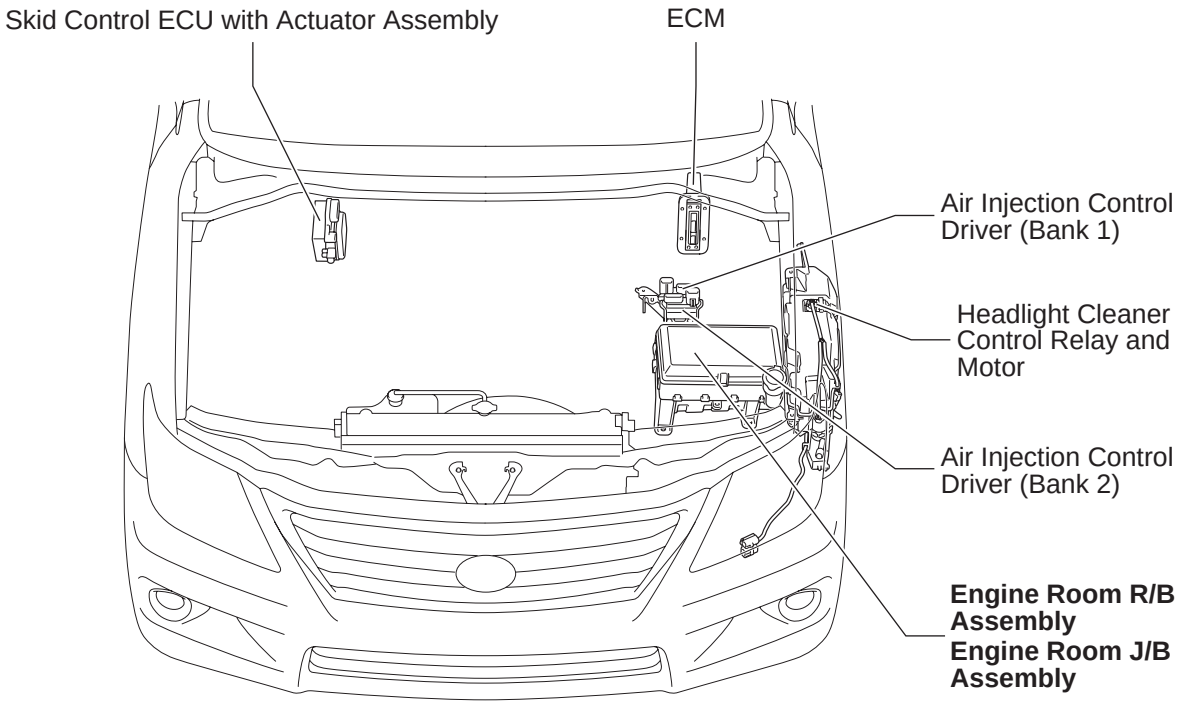


F RELAY LOCATIONS

[Engine Compartment]
(LHD)

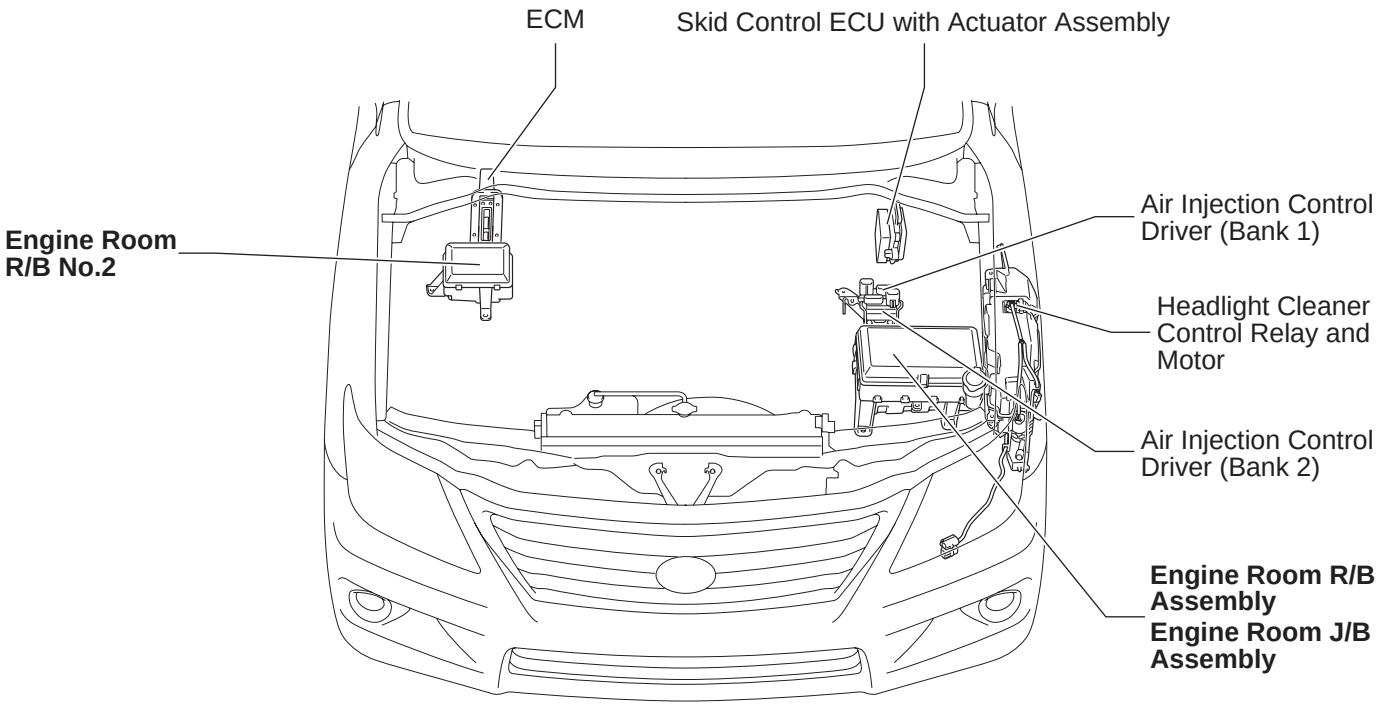


(RHD)

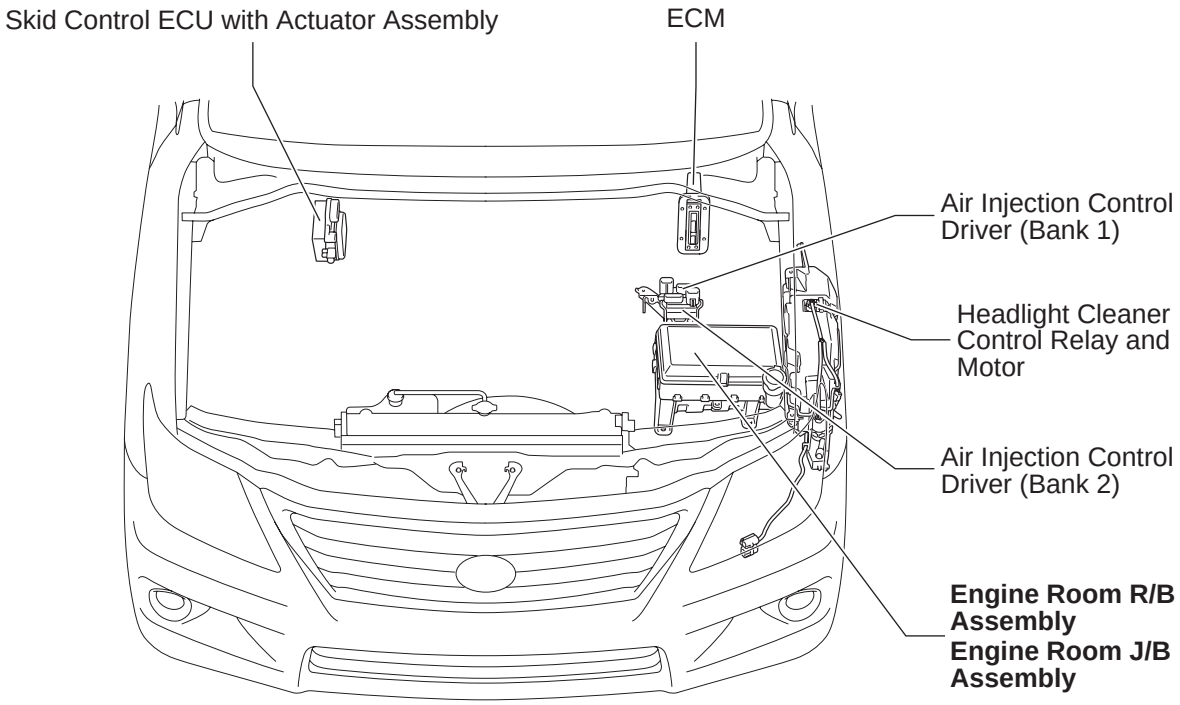


F RELAY LOCATIONS


④ : Engine Room R/B No.2	Engine Compartment Right (See Page 20)

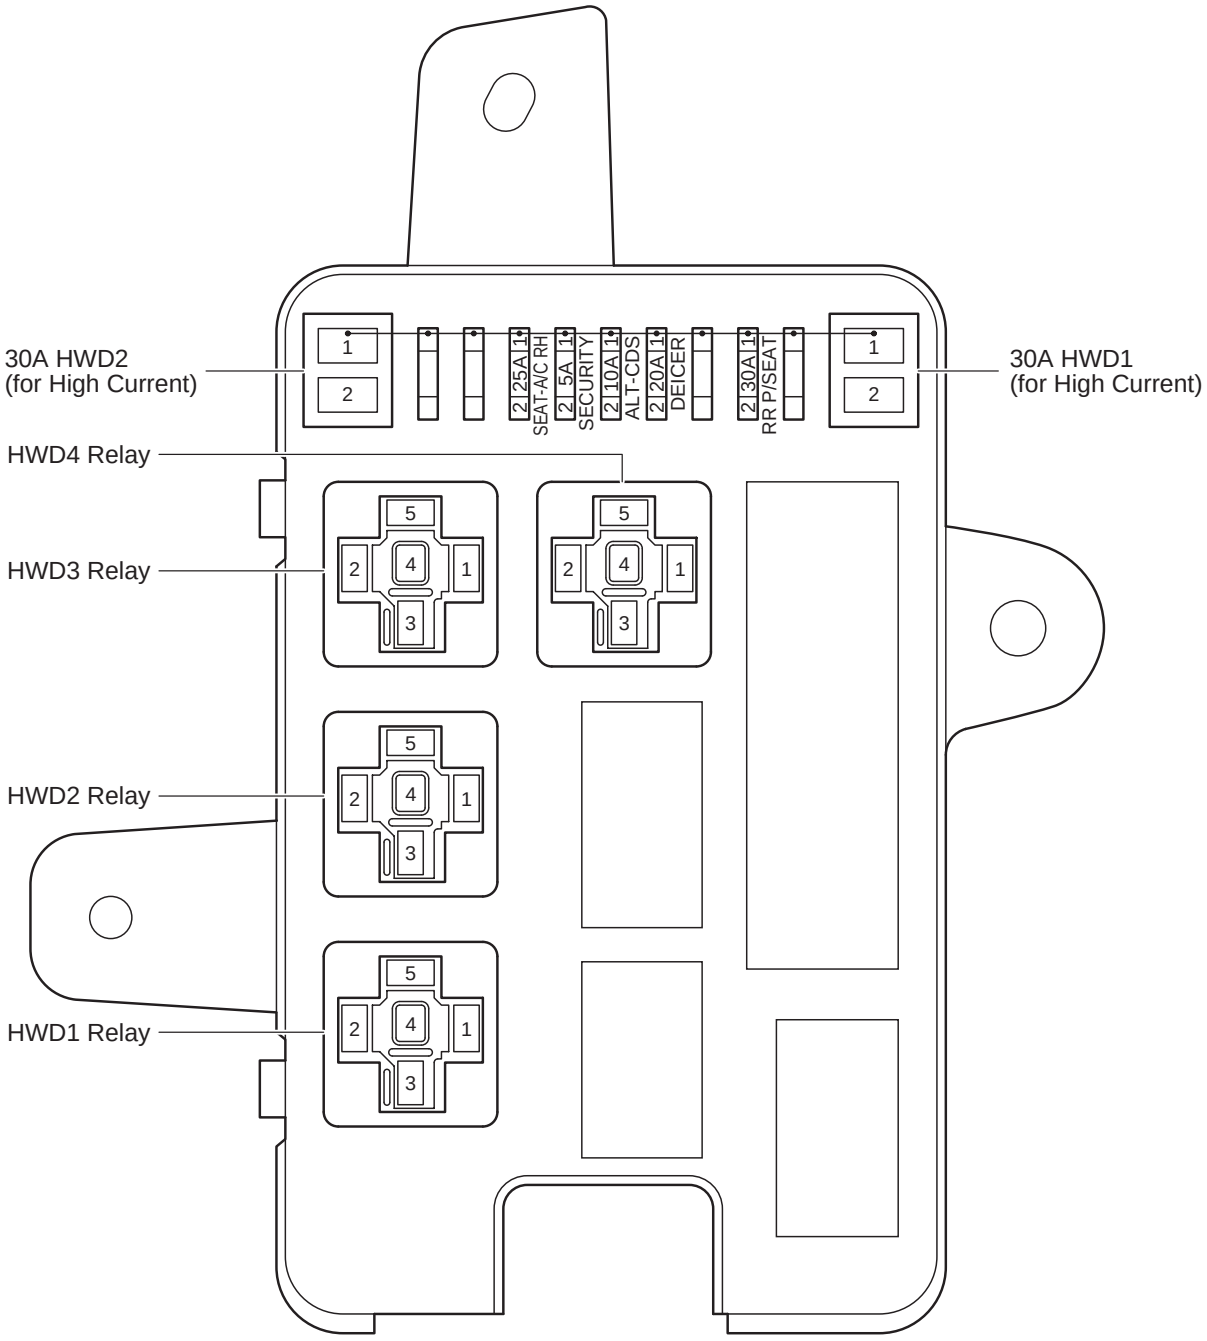

F RELAY LOCATIONS

[Engine Room R/B Assembly and Engine Room J/B Assembly Inner Circuit]

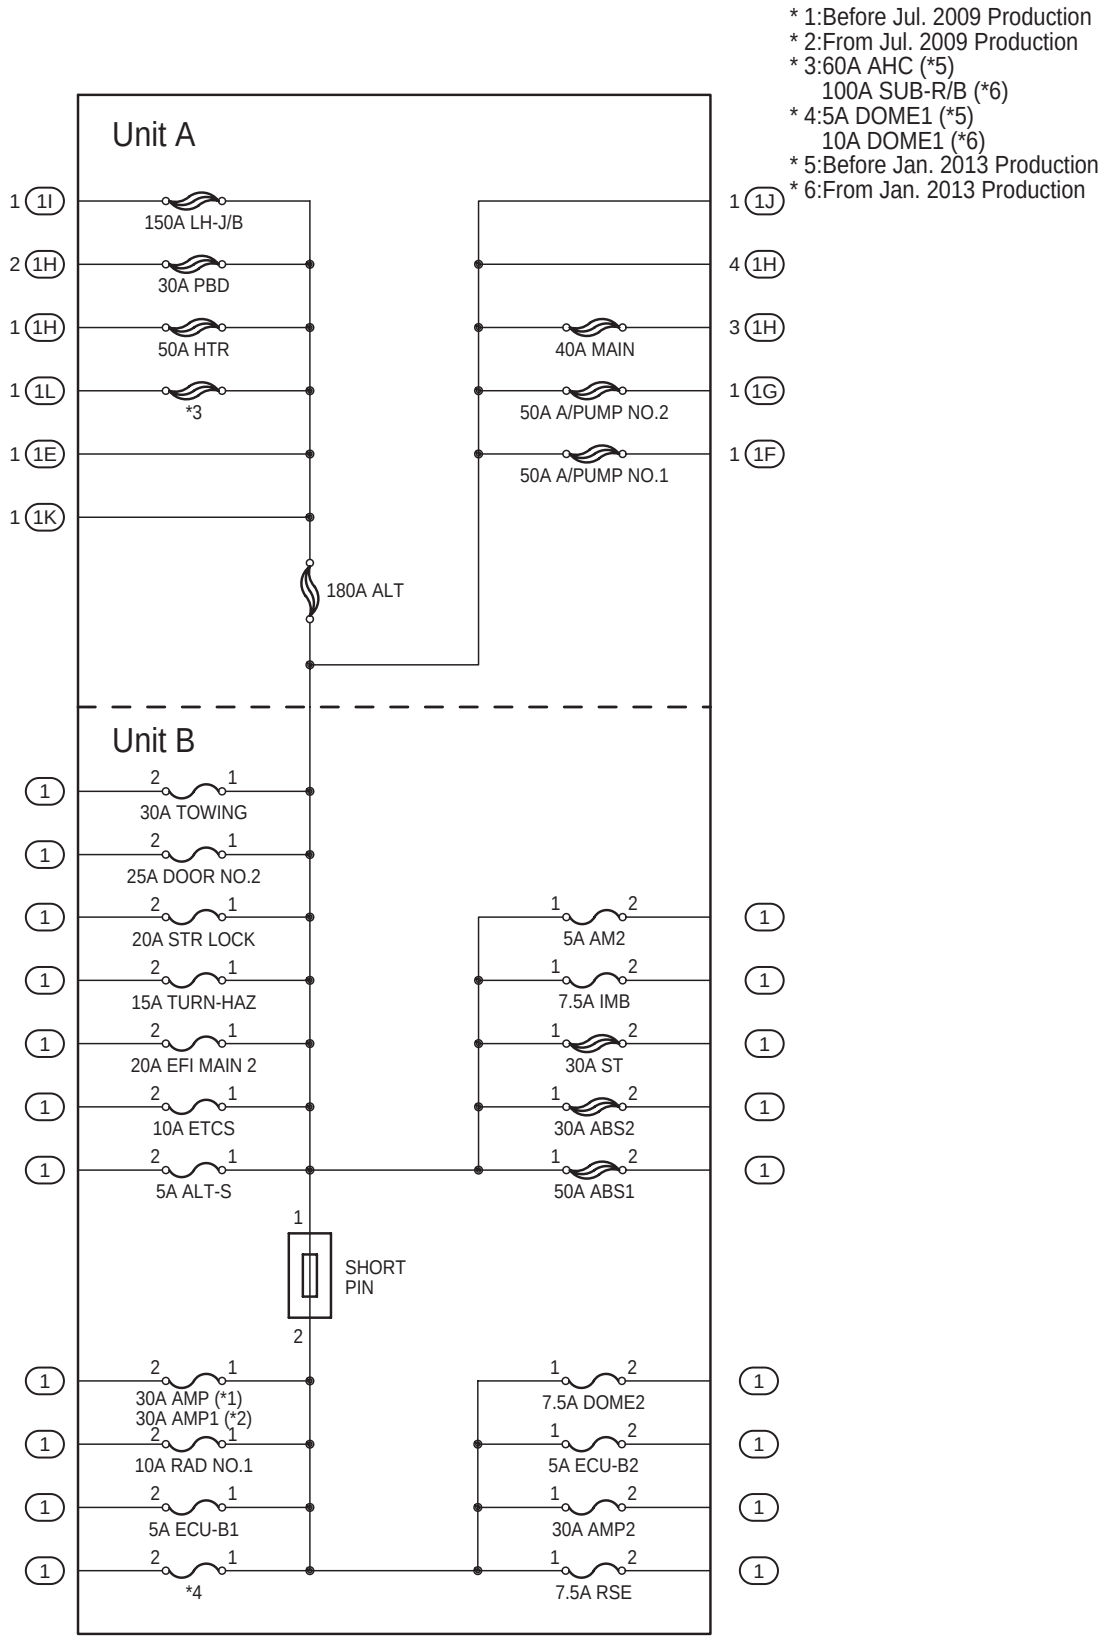


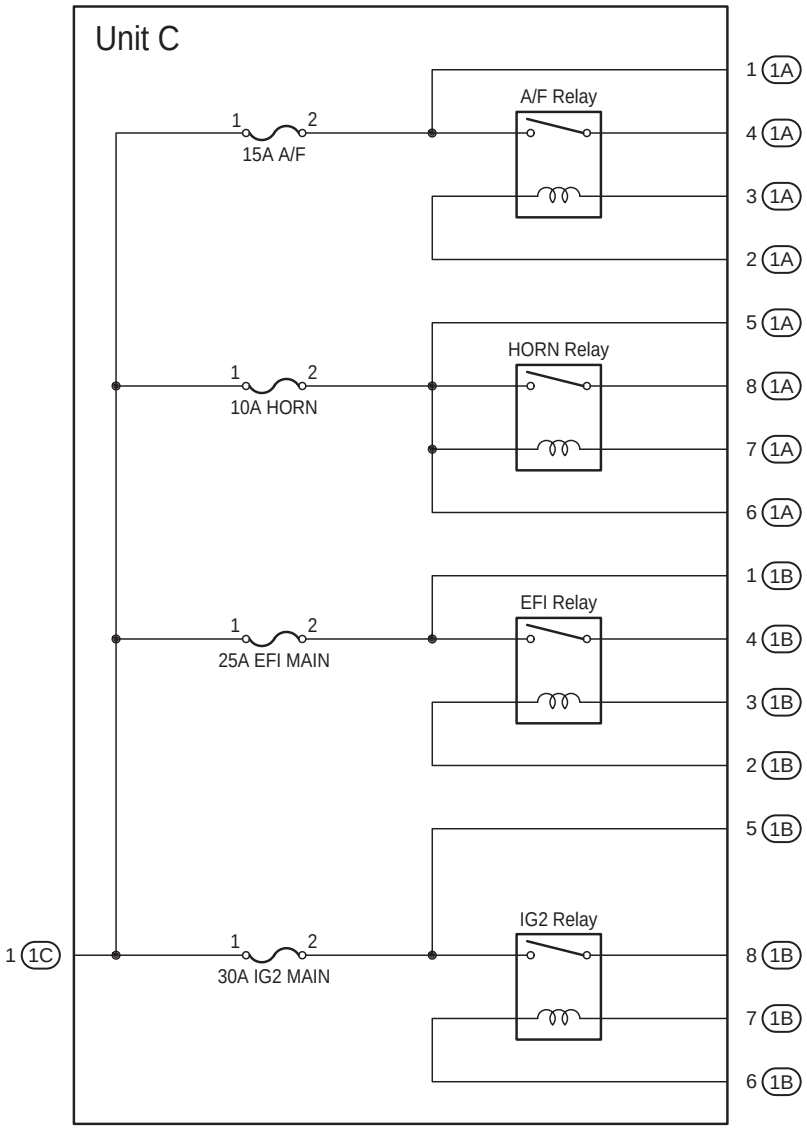
Unit C
A/F Relay
15A A/F
HORN Relay
10A HORN
EFI Relay
25A EFI MAIN
IG2 Relay
30A IG2 MAIN
1 2
1 1C
1 1A
4 1A
3 1A
2 1A
5 1A
8 1A
7 1A
6 1A
1 1B
4 1B
3 1B
2 1B
5 1B
8 1B
7 1B
6 1B


F RELAY LOCATIONS

① : Engine Room R/B Assembly ⬭ : Engine Room J/B Assembly	Engine Compartment Left (See Page 20)

* 1:DEFOG Relay
* 2:IG1 NO.5 Relay
* 3:EFI NO.2 Relay
* 4:ST Relay (*32)
  DOME CUT Relay (*33)
* 5:C/OPN Relay (*27)
  AI-PMP HTR Relay (*28)
* 6:SECURITY
  HORN Relay
* 7:FR FOG Relay
* 8:PTC HTR1 Relay
* 9:ST CUT Relay
* 10:CDS FAN Relay
* 11:PTC HTR2 Relay
* 12:BRK LP Relay (*27)
* 13:MG CLT Relay
* 14:DEICER Relay
* 15:PTC HTR3 Relay
* 16:HEAD HI Relay (*34)
* 17:HEAD LO Relay
* 18:50A HTR
  (for High Current)
* 19:150A LH-J/B
  (for High Current)
* 20:180A ALT
  (for High Current)
* 21:50A A/PUMP NO.1
  (for High Current)
* 22:50A A/PUMP NO.2
  (for High Current)
* 23:40A MAIN
  (for High Current)
* 24:60A AHC (*32)
  (for High Current)
  100A SUB-R/B (*33)
  (for High Current)
* 25:30A PBD
  (for High Current)
* 26:AHC Relay
* 27:Before Jan. 2012 Production
* 28:From Jan. 2012 Production
* 29:AI VSV Relay
* 31:ST Relay (*33)
* 32:Before Jan. 2013 Production
* 33:From Jan. 2013 Production
* 34:Before Jan. 2012 Production,
  From Aug. 2014 Production

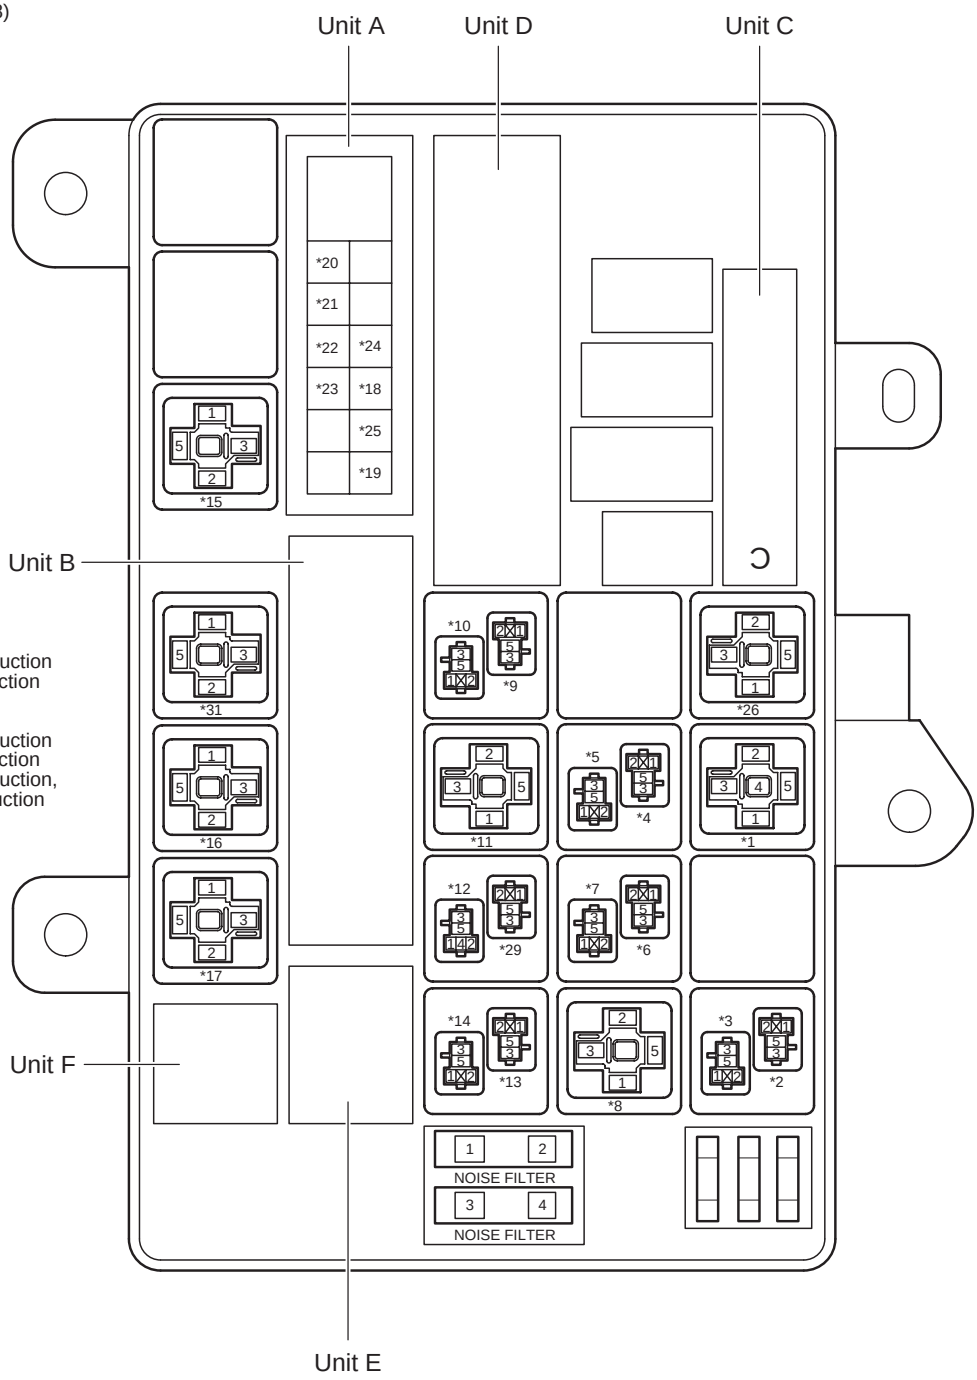

Unit A

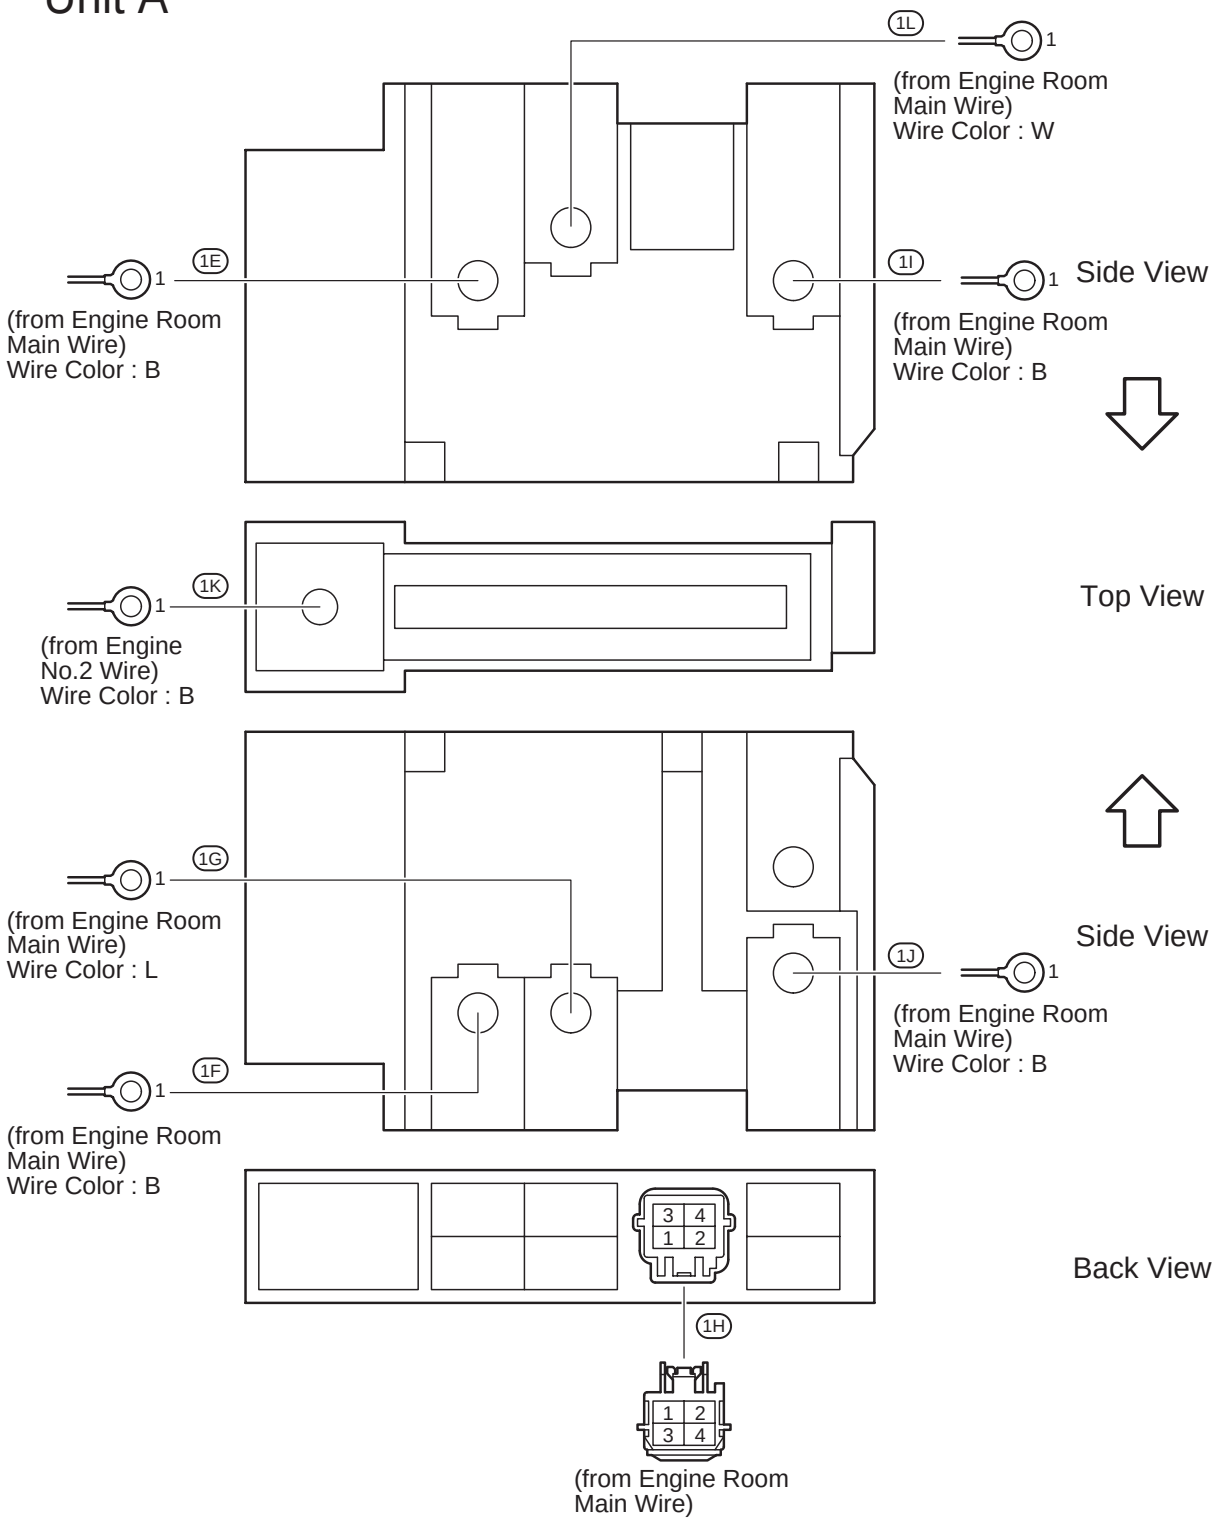

1L
1
(from Engine Room
Main Wire)
Wire Color : W
1E
1
(from Engine Room
Main Wire)
Wire Color : B
1I
1
(from Engine Room
Main Wire)
Wire Color : B
Side View
1K
1
(from Engine
No.2 Wire)
Wire Color : B
Top View
1G
1
(from Engine Room
Main Wire)
Wire Color : L
1F
1
(from Engine Room
Main Wire)
Wire Color : B
1J
1
(from Engine Room
Main Wire)
Wire Color : B
Side View
3 4
1 2
Back View
1H
1 2
3 4
(from Engine Room
Main Wire)

F RELAY LOCATIONS


(1) : Engine Room R/B Assembly : Engine Room J/B Assembly	**Engine Compartment Left (See Page 20)**

Unit B

* 1:AMP (Before Jul. 2009 Production)
  AMP1 (From Jul. 2009 Production)
* 2:5A DOME1 (Before Jan. 2013 Production)
  10A DOME1 (From Jan. 2013 Production)

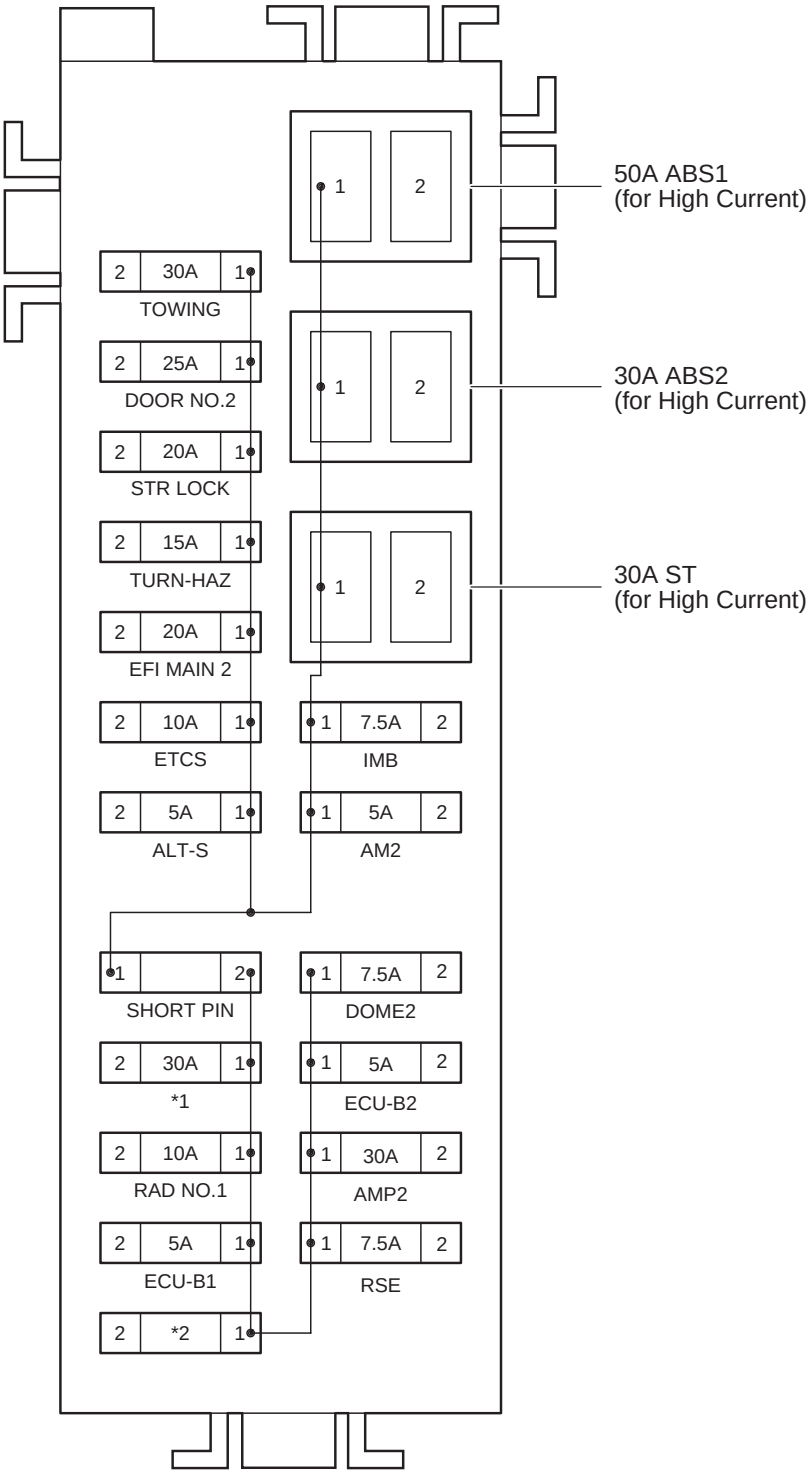


Unit C

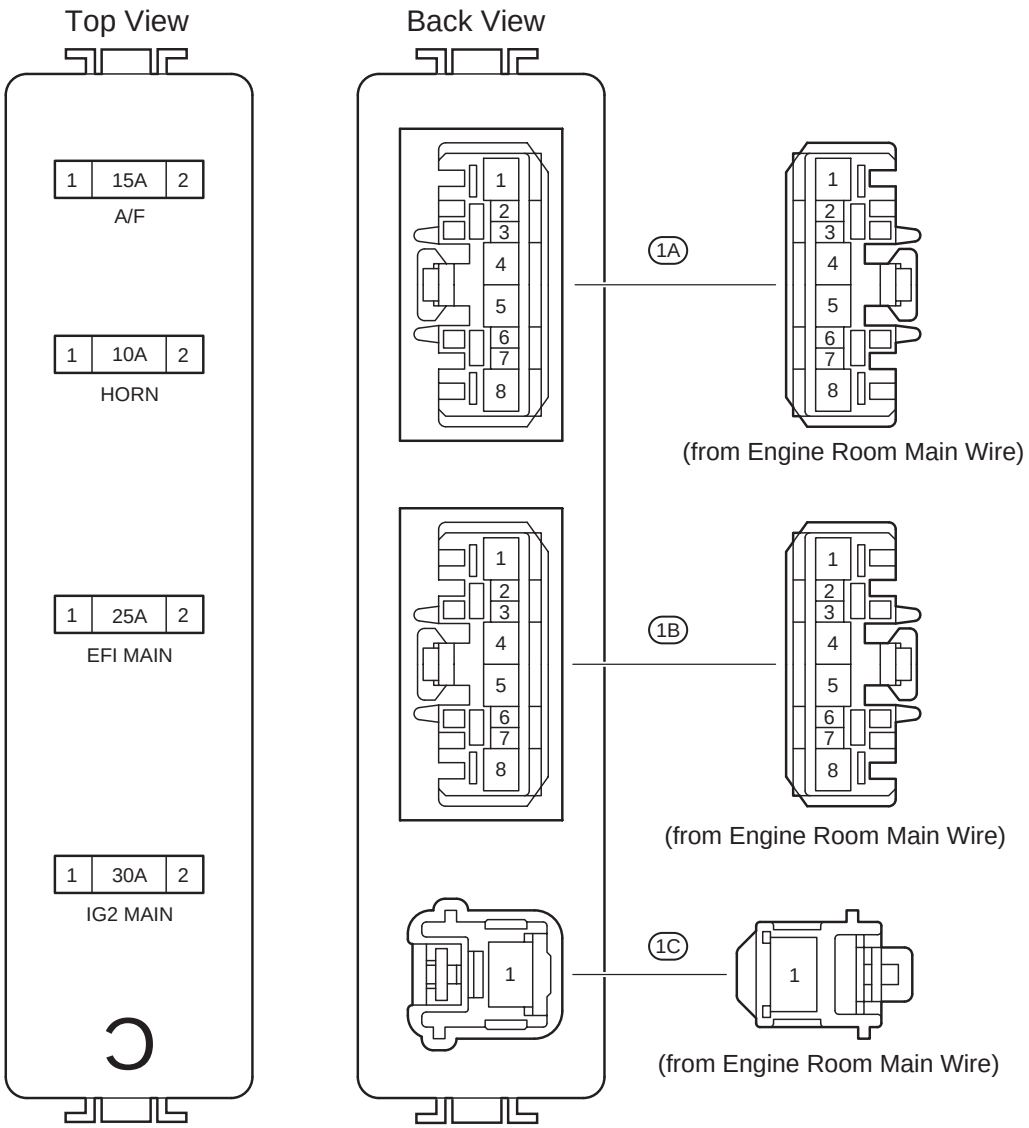
Top View
Back View
1
15A
2
A/F
1
10A
2
HORN
1
25A
2
EFI MAIN
1
30A
2
IG2 MAIN
1A
(from Engine Room Main Wire)
1B
(from Engine Room Main Wire)
1C
(from Engine Room Main Wire)

F RELAY LOCATIONS


(1) : Engine Room R/B Assembly ⬭ : Engine Room J/B Assembly	**Engine Compartment Left (See Page 20)**

Unit D

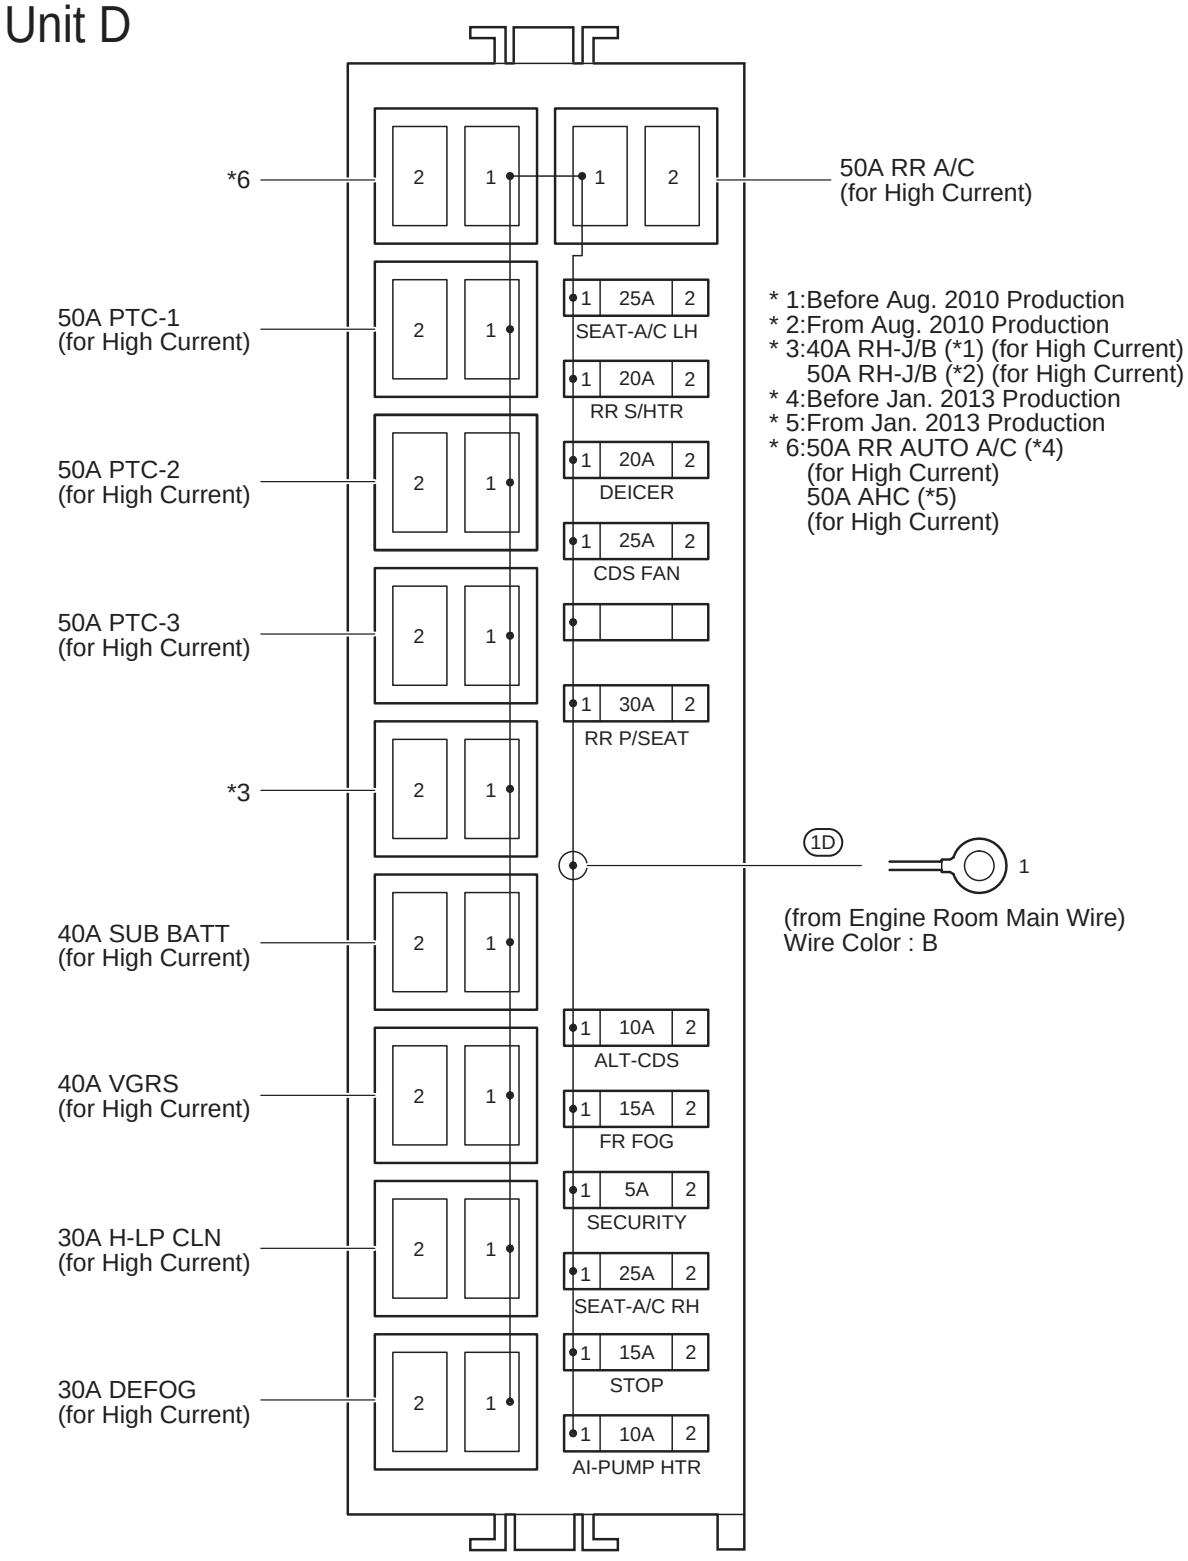

(w/o Heated Windshield Defroster)

Unit D

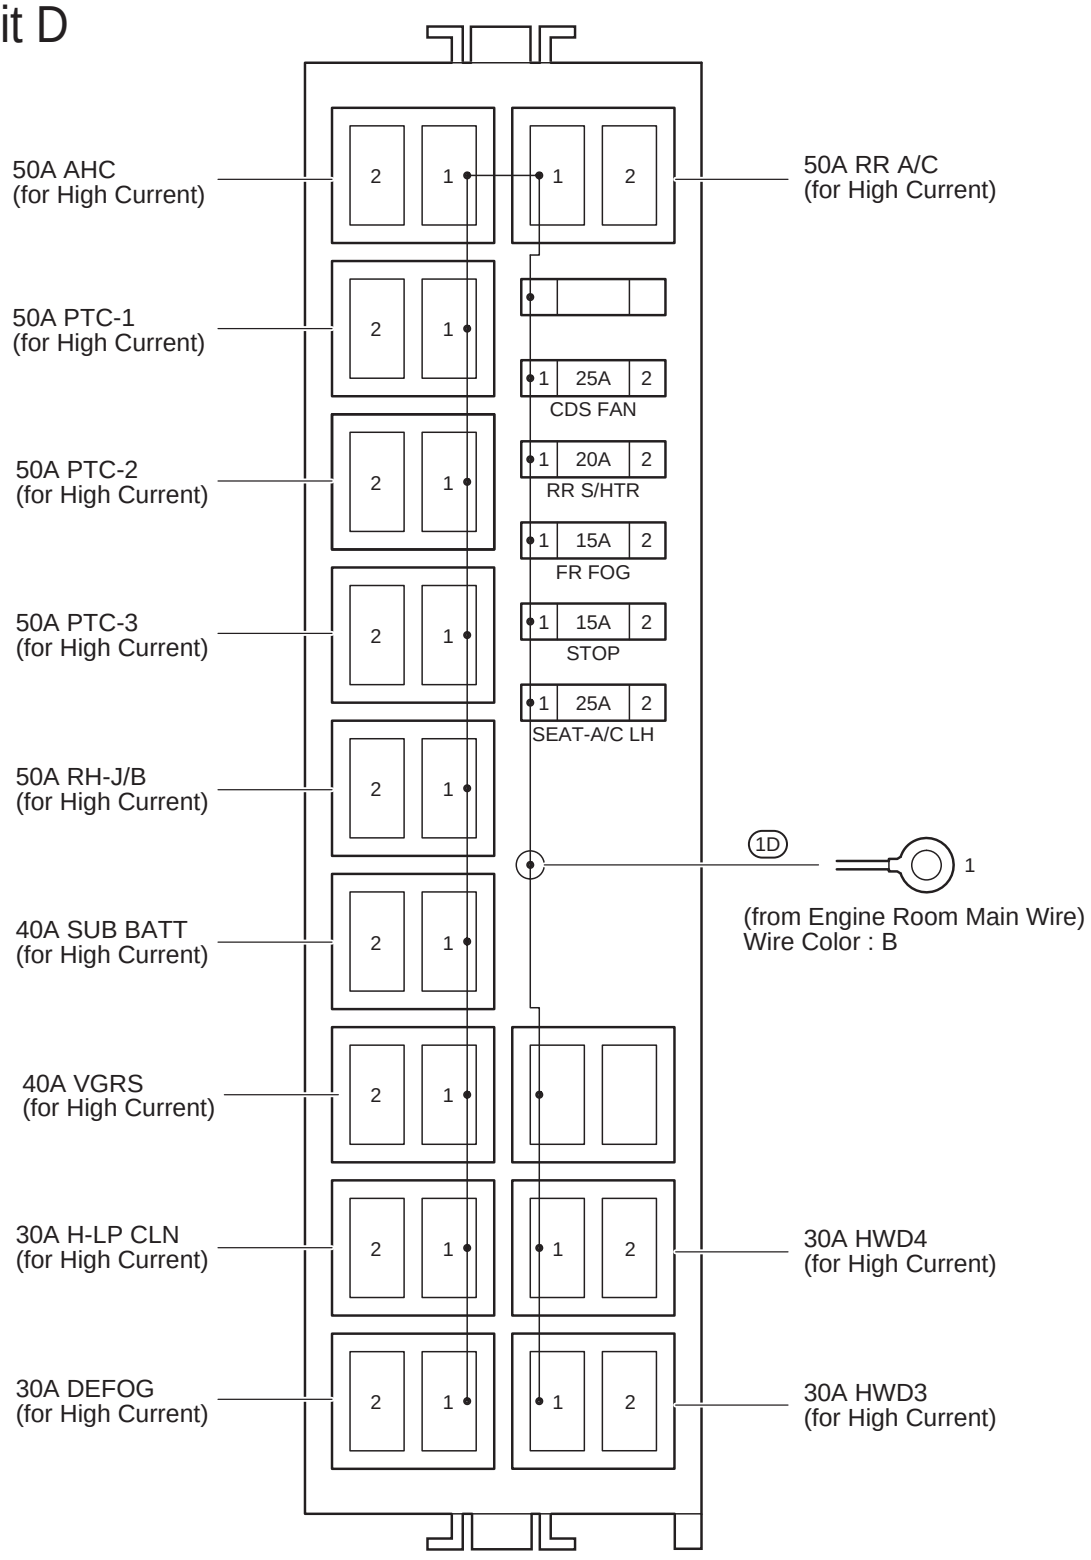


(w/ Heated Windshield Defroster)

F RELAY LOCATIONS


① : Engine Room R/B Assembly ⬭ : Engine Room J/B Assembly	**Engine Compartment Left (See Page 20)**

Unit E

* 1:From Jan. 2012 Production

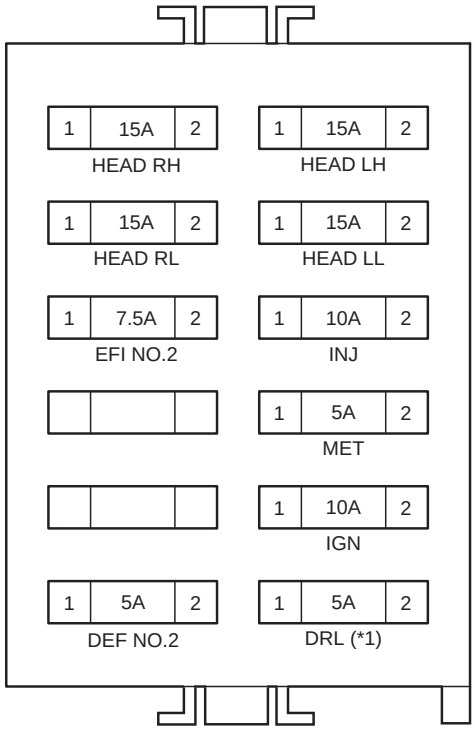


Unit F

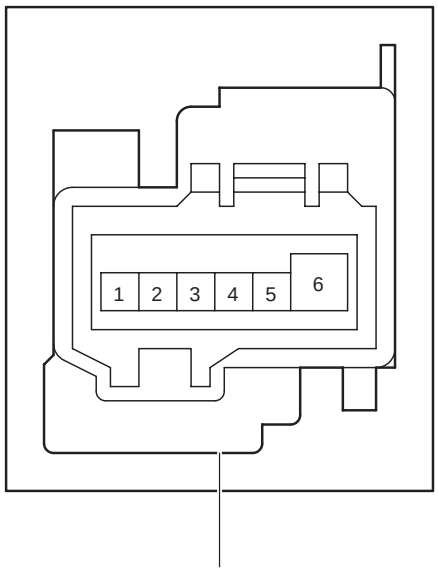


DRL MOD Relay

[Seat]
(Front Seat)

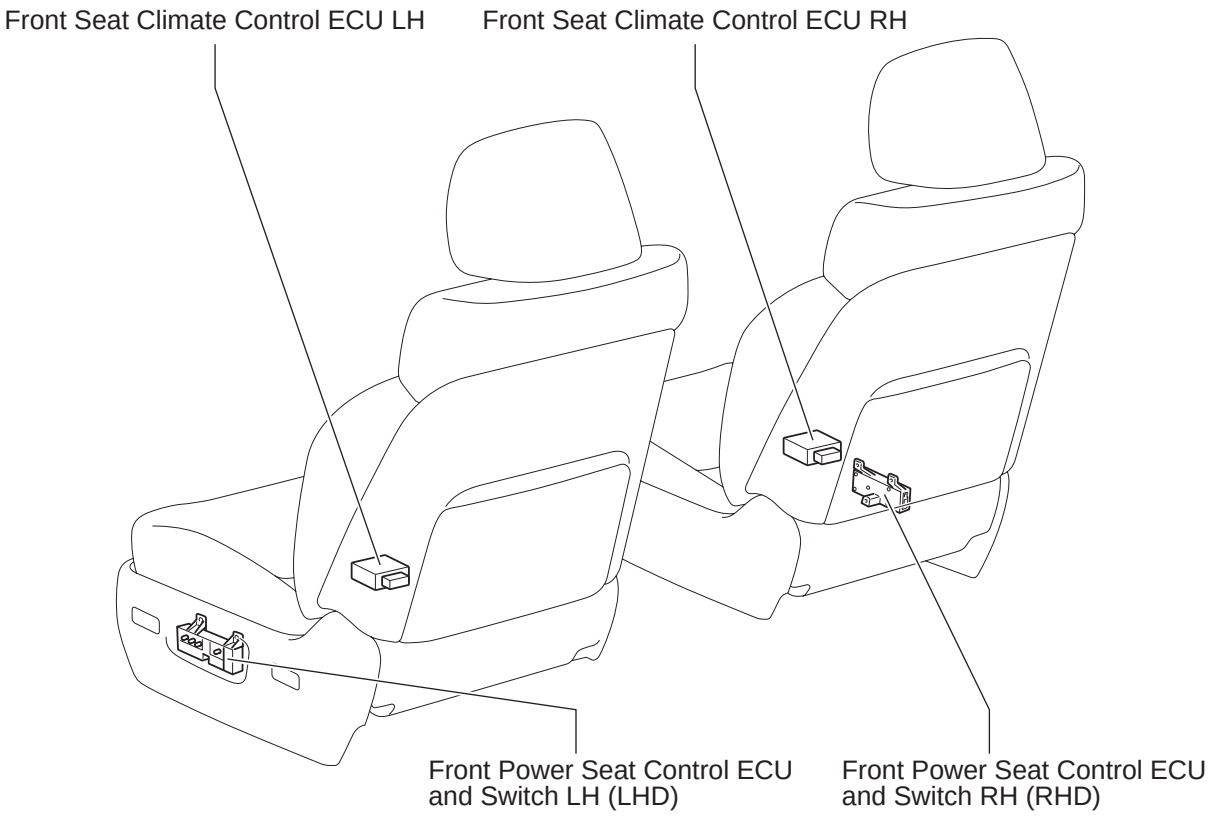


[Instrument Panel]

(LHD)

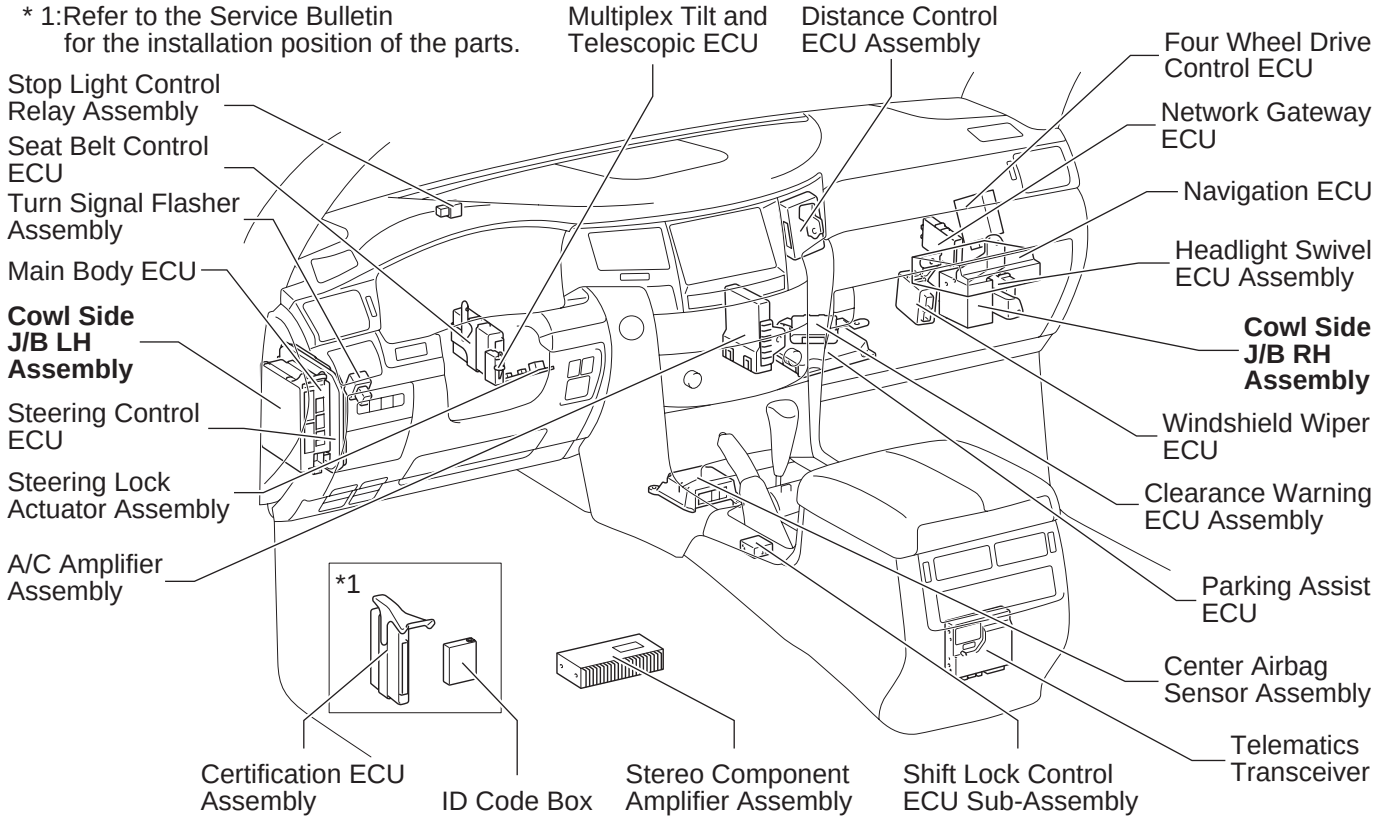


(RHD)

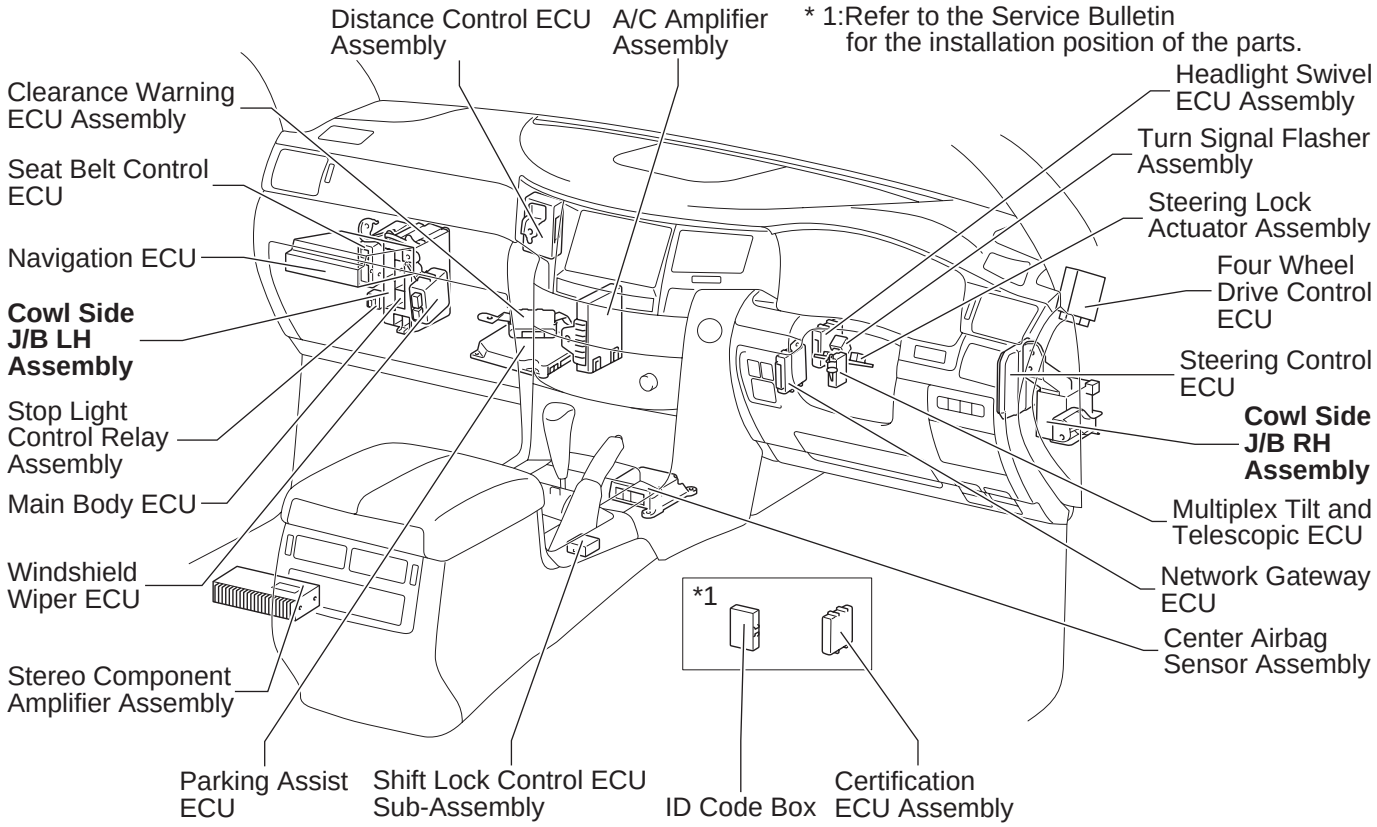


[Instrument Panel]


(LHD)

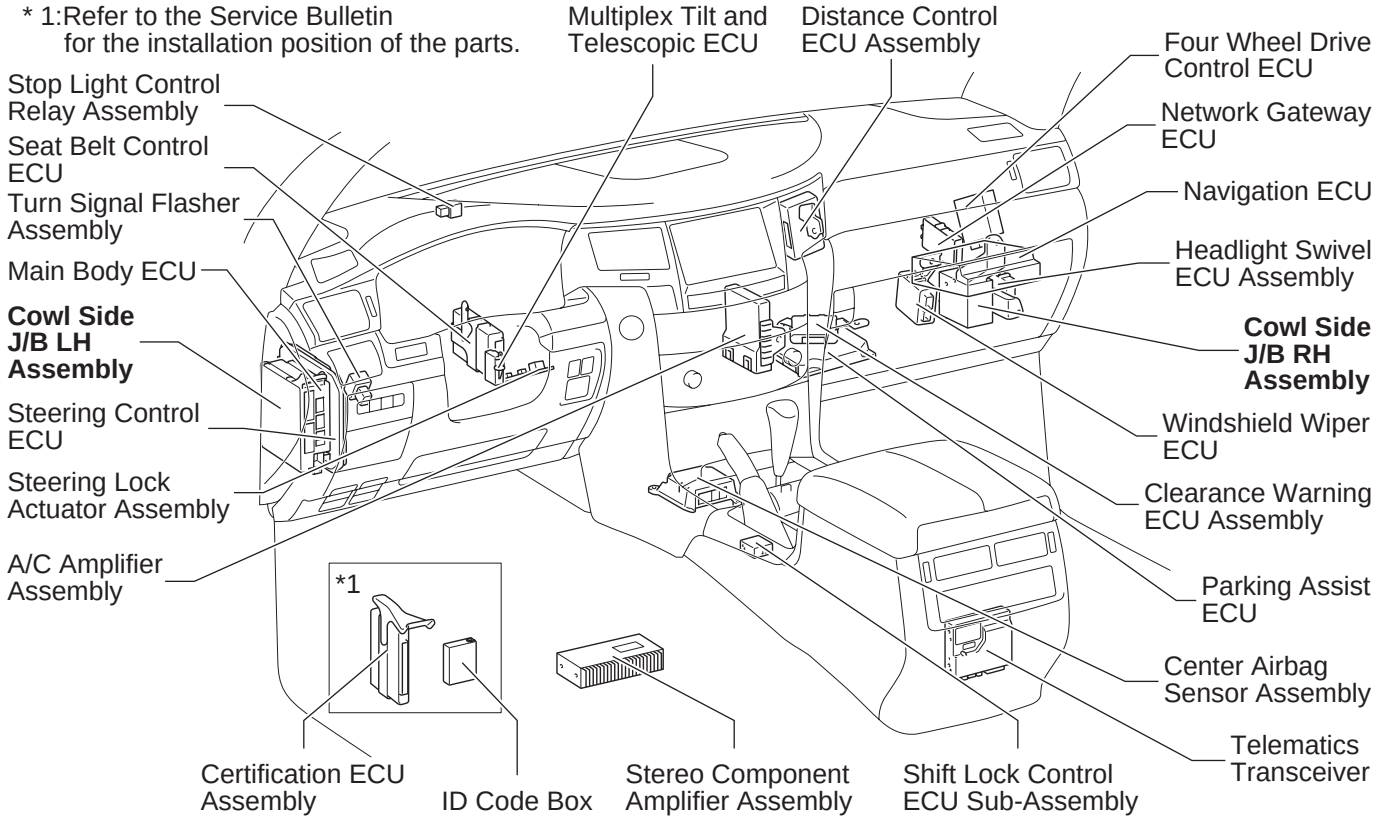

(RHD)

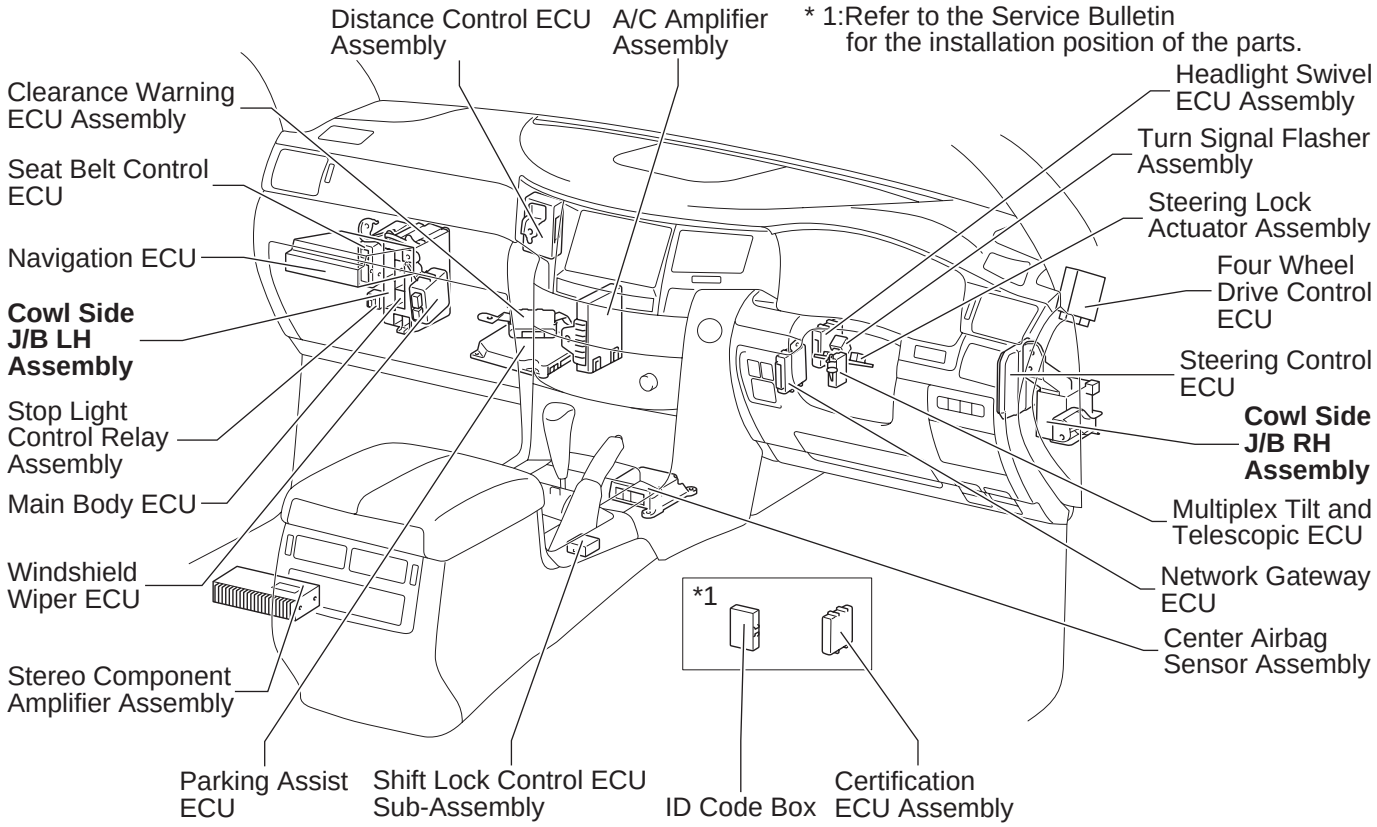


[Junction Connector (CAN No.1) Inner Circuit]

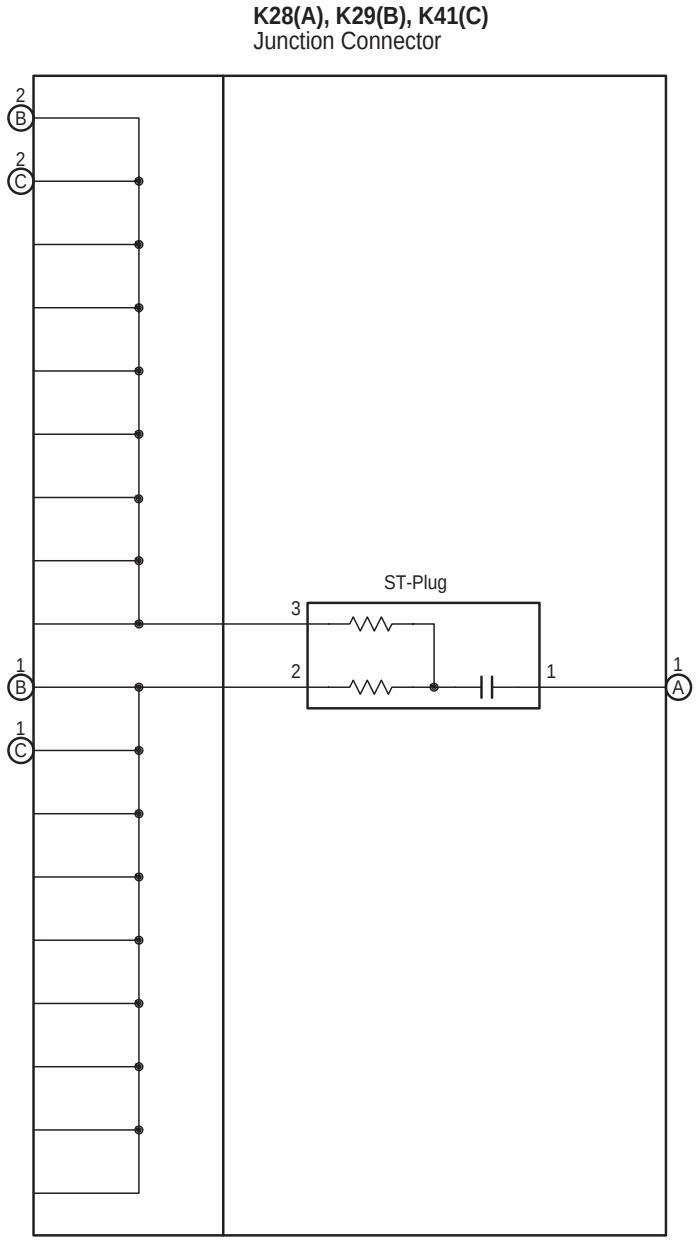


F RELAY LOCATIONS

Junction Connector (CAN No.1)	Luggage Compartment Left (See Page 22)

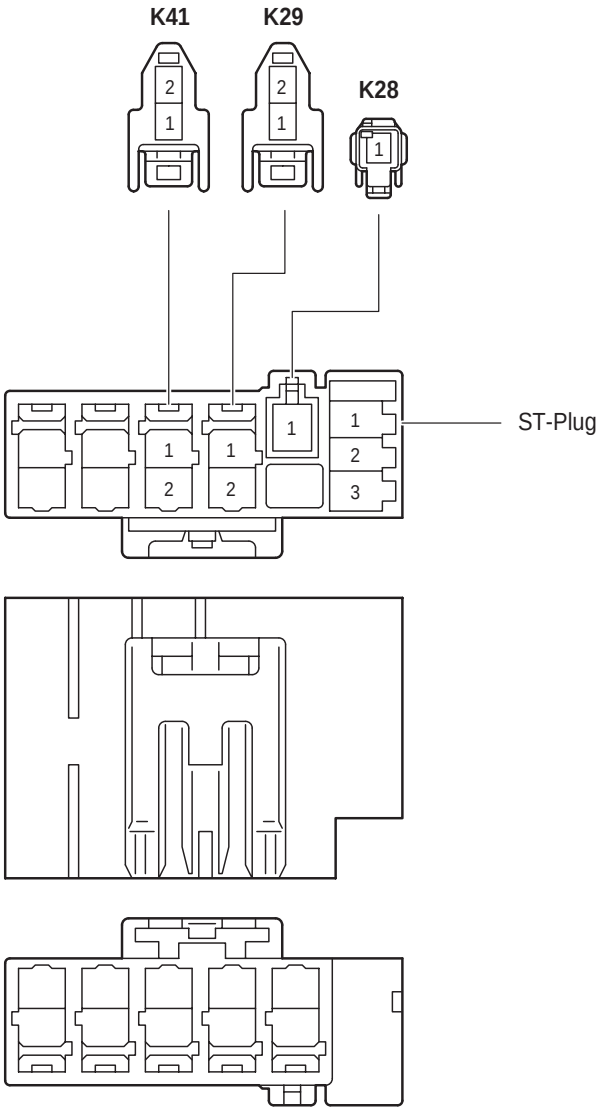

[Junction Connector (CAN No.2) Inner Circuit]

L29(A), L30(B), L45(C), L46(D), L64(E)
Junction Connector

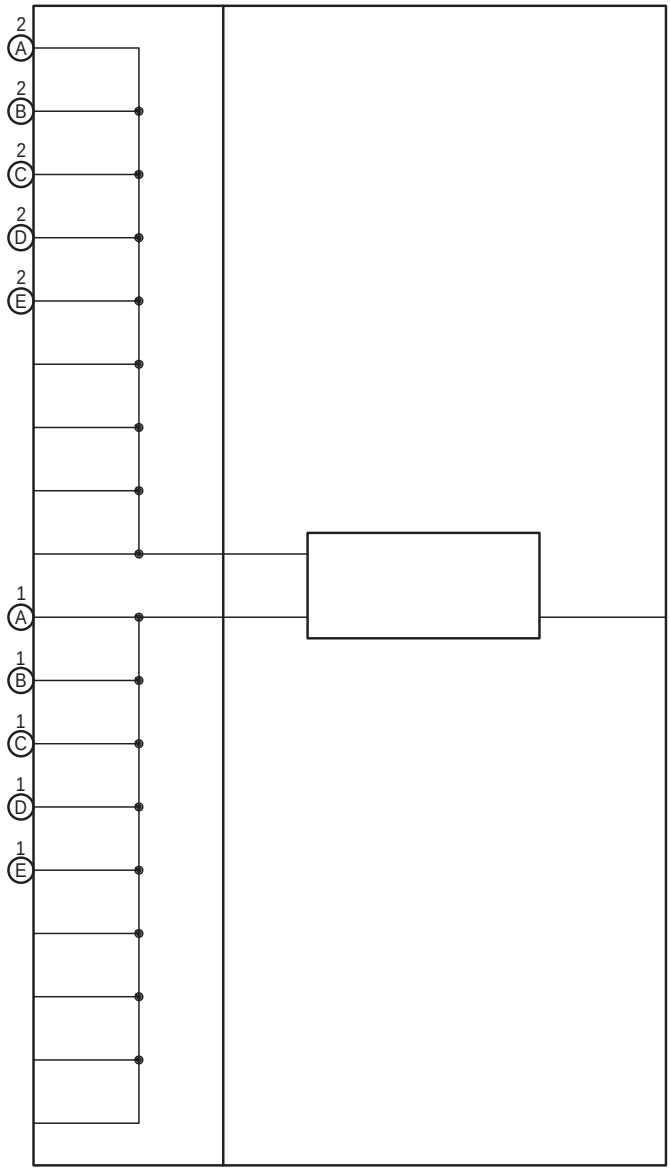

F RELAY LOCATIONS

Junction Connector (CAN No.2)	Luggage Compartment Right (See Page 22)

