


for Preparation Click here

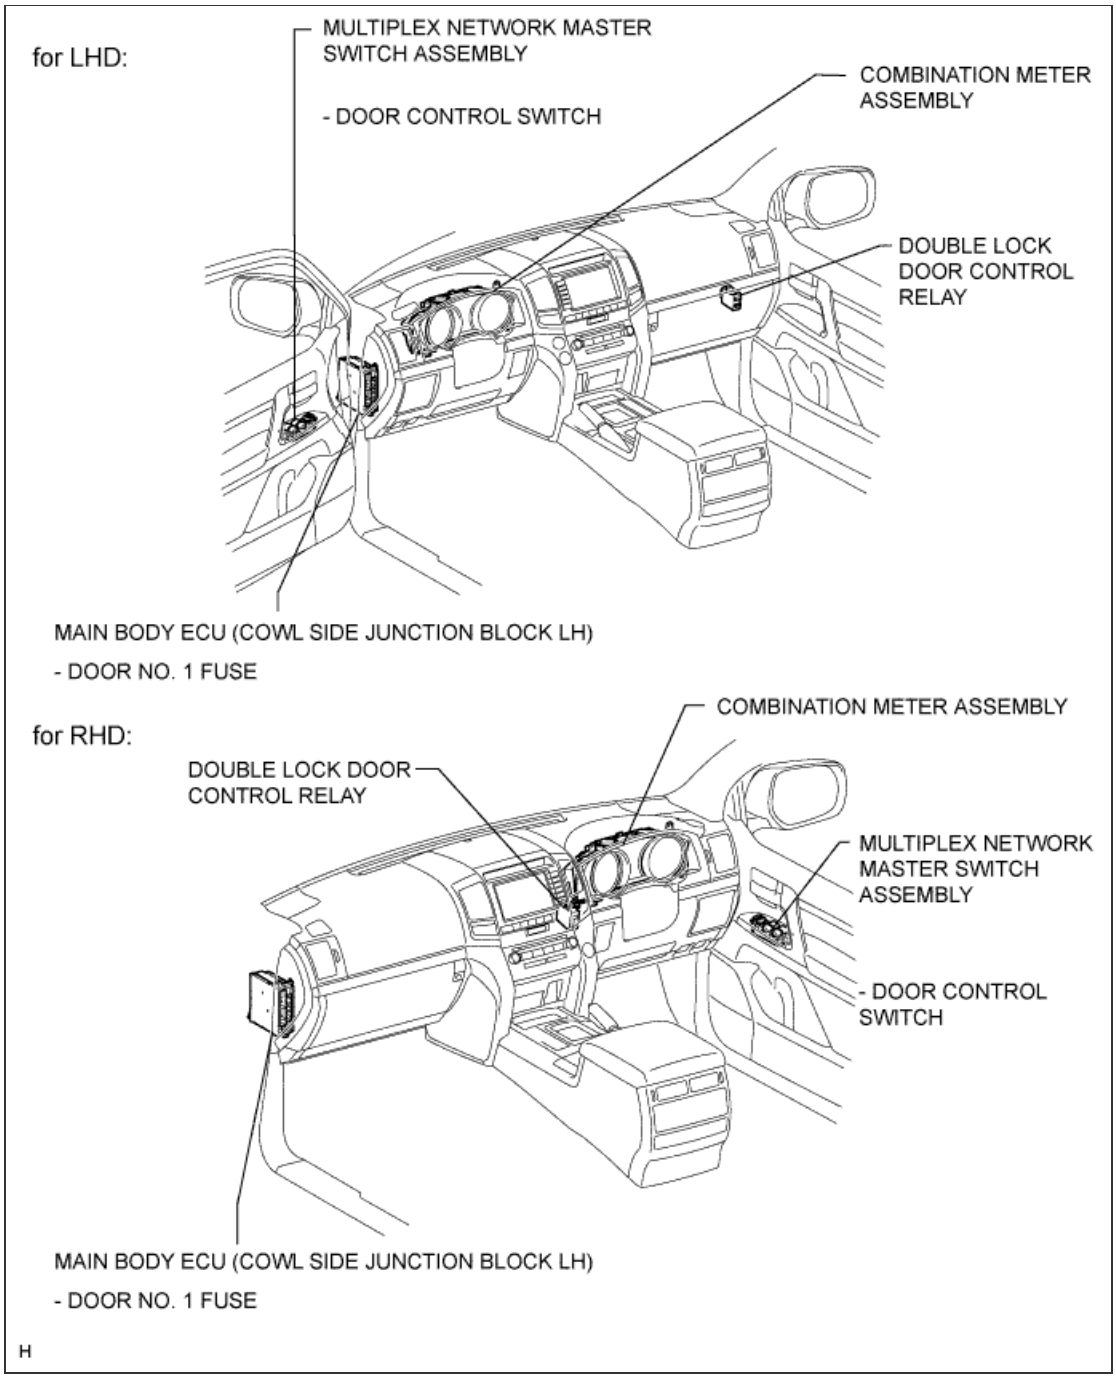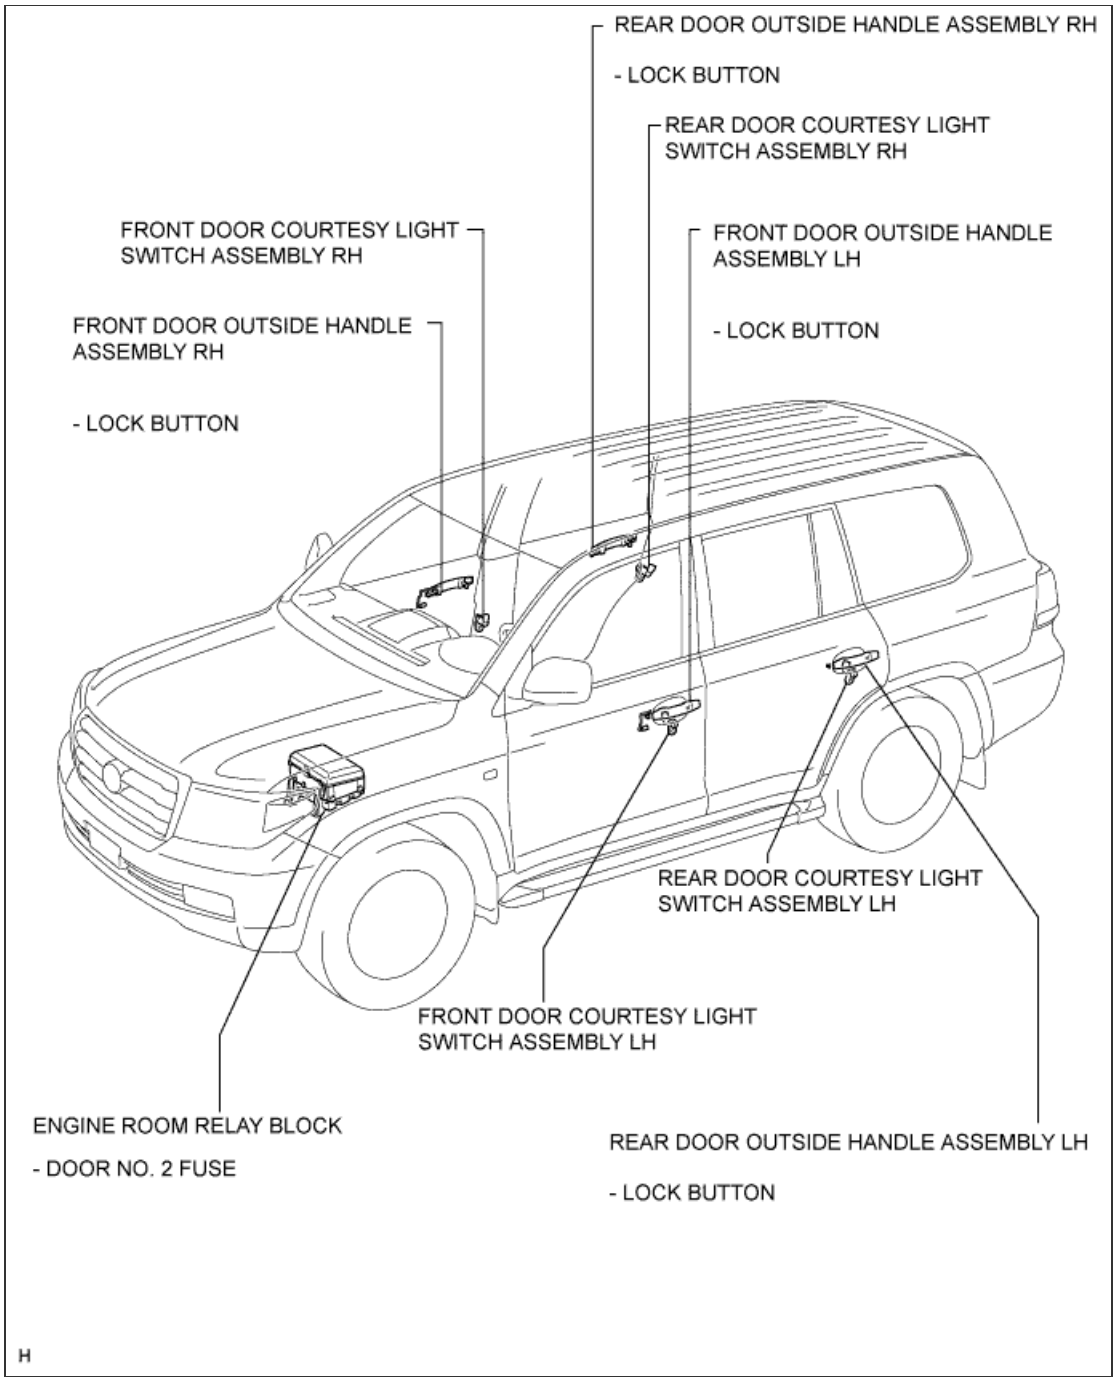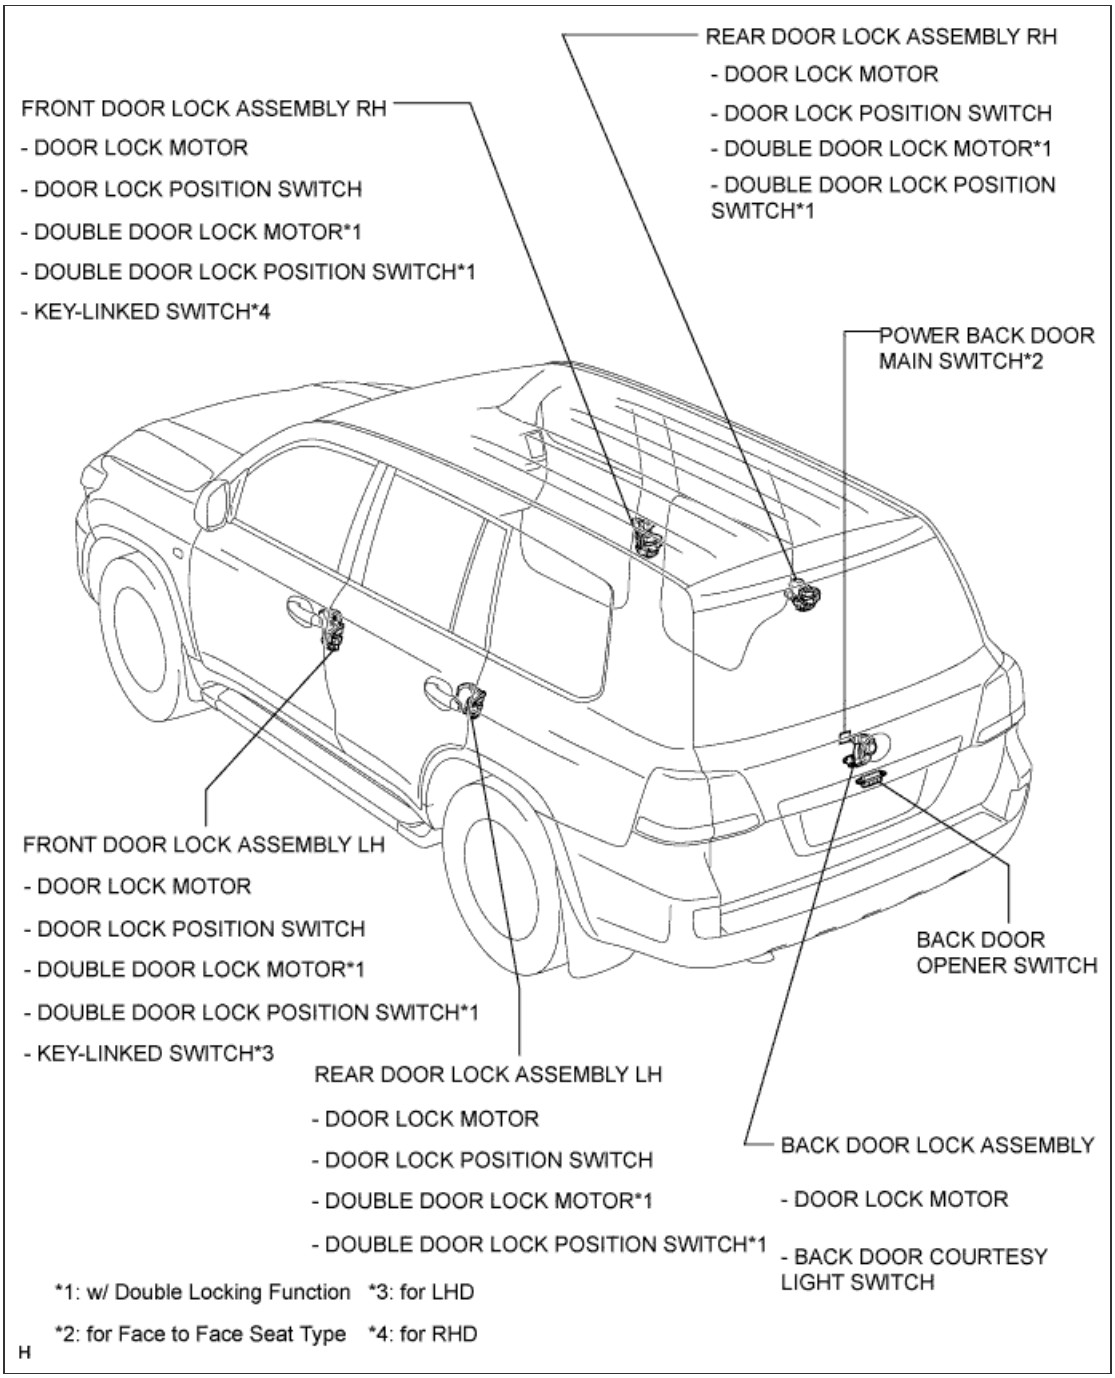



REAR DOOR OUTSIDE HANDLE ASSEMBLY RH
- LOCK BUTTON
REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY RH
FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY RH
FRONT DOOR OUTSIDE HANDLE ASSEMBLY LH
- LOCK BUTTON
FRONT DOOR OUTSIDE HANDLE ASSEMBLY RH
- LOCK BUTTON
REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY LH
FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY LH
ENGINE ROOM RELAY BLOCK
- DOOR NO. 2 FUSE
REAR DOOR OUTSIDE HANDLE ASSEMBLY LH
- LOCK BUTTON
H


REAR DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
- DOUBLE DOOR LOCK MOTOR*1
- DOUBLE DOOR LOCK POSITION SWITCH*1
FRONT DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
- DOUBLE DOOR LOCK MOTOR*1
- DOUBLE DOOR LOCK POSITION SWITCH*1
- KEY-LINKED SWITCH*4
POWER BACK DOOR MAIN SWITCH*2
FRONT DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
- DOUBLE DOOR LOCK MOTOR*1
- DOUBLE DOOR LOCK POSITION SWITCH*1
- KEY-LINKED SWITCH*3
BACK DOOR OPENER SWITCH
REAR DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
- DOUBLE DOOR LOCK MOTOR*1
- DOUBLE DOOR LOCK POSITION SWITCH*1
BACK DOOR LOCK ASSEMBLY
- DOOR LOCK MOTOR
- BACK DOOR COURTESY LIGHT SWITCH
*1: w/ Double Locking Function *3: for LHD
*2: for Face to Face Seat Type *4: for RHD

H

for Preparation Click here

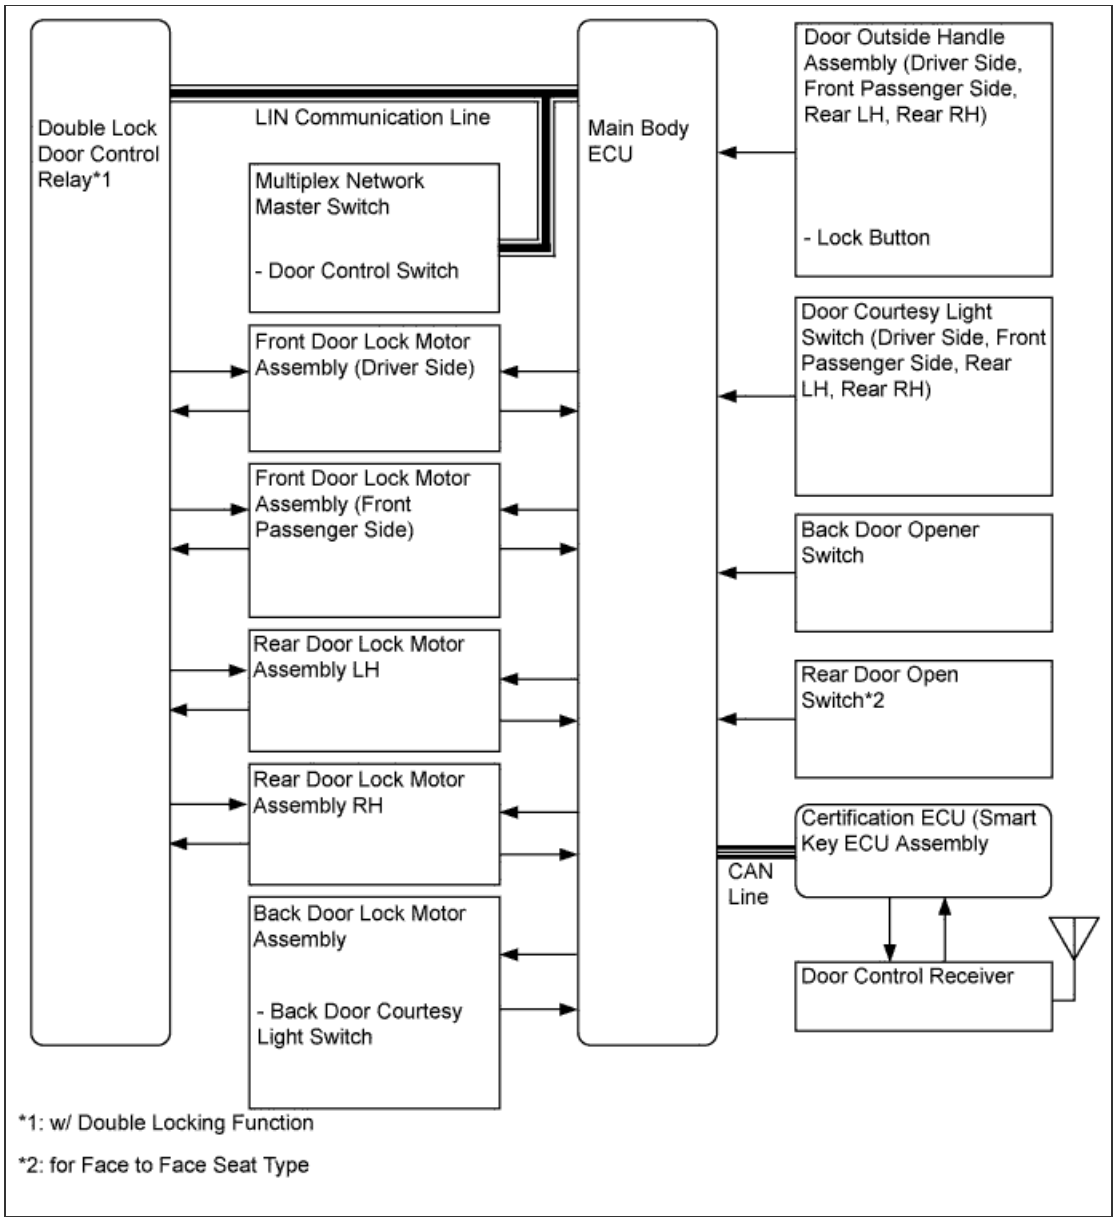

Communication Table

Sender	Receiver	Signal	Line
Multiplex Network Master Switch	Main Body ECU	Driver side door manual lock switch signal	LIN
Double Lock Door Control Relay	Main Body ECU	Double lock/unlock position switch signal	LIN
Certification ECU	Main Body ECU	-Door lock/unlock signal -Double lock/unlock signal	CAN
Main Body ECU	Certification ECU	-Door lock/unlock signal -Double lock/unlock signal	CAN

for Preparation Click here

FUNCTION OF MAIN COMPONENT

Components	Function
Multiplex network master switch	The door control switch on the master switch locks/unlocks all doors.
Door courtesy light switch	Turns on when the door is open and off when the door is closed. Outputs the door status (open or closed) to the main body ECU.
Driver side door lock	• The built-in motor locks/unlocks the door. • The built-in door control switch position (key-linked) detects the door key cylinder status (lock or unlock) and outputs the data to the main body ECU. • The built-in position switch detects the door status (locked or unlocked) and outputs the data to the main body ECU. This switch turns off when the door is locked and on when the door is unlocked.
Front passenger side door lock Rear door lock LH Rear door lock RH Back door lock	• The built-in motor locks/unlocks the door. • The built-in position switch detects the door status (locked or unlocked) and outputs the data to the main body ECU. This switch turns off when the door is locked and on when the door is unlocked.

SYSTEM DESCRIPTION

a. The power door lock system locks/unlocks all doors.

- The door control switch of the master switch uses the LIN line to send lock/unlock request signals to the main body ECU.
- The driver door key cylinder lock/unlock request signals are sent to the main body ECU from the driver side door lock.
- The main body ECU receives the request signals and locks/unlocks each door.

The door control system has the following functions:

Function	Outline
Manual lock and unlock function	Locks/unlocks all doors by the door control switch lock operation (manual operation).
Key-linked lock and unlock function	Linked with the door key cylinder. Locks/unlocks all doors when the lock/unlock operation is possible.
Key lock-in prevention function	When the door control transmitter is in the vehicle, performing the door lock operation with the lock switch on the outer handle will not lock the door and will sound a buzzer.
Manual unlock prohibition function	When the doors are locked using the transmitter or key with the engine switch on (IG) and the driver side seat belt fastened, unlock operations using the door control switches are prohibited.
2-step unlock function	Unlocks only the driver side door by turning the key cylinder once and unlocks the other doors by turning it twice. **HINT:** This function is OFF by default.
Double locking function	Prevents the doors from being unlocked through the operation of the inside door knobs and also from the outside of the vehicle.

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the power door lock control system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK COMMUNICATION FUNCTION OF LIN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the LIN communication system is functioning normally.

Result

Result	Proceed to
LIN DTC is not output	A
LIN DTC is output	B

B. → **Go to LIN COMMUNICATION SYSTEM (Click here)**

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to problem symptoms table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → **Go to step 7**

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Operation Check (Click here)

b. Terminals of ECU (Click here)

c. Data List / Active Test (Click here)

NEXT

6.ADJUST, REPAIR OR REPLACE

NEXT

7.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the power door lock control system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK COMMUNICATION FUNCTION OF LIN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the LIN communication system is functioning normally.

Result

Result	Proceed to
LIN DTC is not output	A
LIN DTC is output	B

B. → **Go to LIN COMMUNICATION SYSTEM (Click here)**

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to problem symptoms table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → **Go to step 7**

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Operation Check (Click here)

b. Terminals of ECU (Click here)

c. Data List / Active Test (Click here)

NEXT

6.ADJUST, REPAIR OR REPLACE

NEXT

7.CONFIRMATION TEST

NEXT

END

for Preparation Click here

CHECK POWER DOOR LOCK OPERATION

a. Check the basic function.

i. Check that all doors lock when the door lock control switch (for manual operation) is turned to lock and all doors unlock when turned to unlock.

ii. Check that all doors lock when the driver side door lock key cylinder is turned to lock using the key.

iii. When the engine switch is on (IG) and the driver seat belt is fastened, check that the manual unlock prohibition function operates when the doors are locked using the transmitter or key.

iv. Check that only the driver side door unlocks when turned to unlock once again within 3 seconds using the key (2-step unlocking function).

b. Check the key lock-in prevention function.

NOTICE:

In order to prevent the key from being locked in, the inspection should be made with the driver side door glass open.

i. Turn the engine switch on (IG) or on (ACC).

ii. With the driver side door open, check that all doors unlock immediately after the door lock knob for the driver side door is locked.

iii. With the driver side door open, check that all doors unlock immediately after the door control switch (for manual operation) is turned to lock.

iv. With the driver side door open, lock the driver side door lock knob and hold it for 2 seconds or more, and then close the driver side door then check that all doors unlock.

c. Check the security function.

i. Close all doors with the driver side door glass open so that the door control switch can be operated from outside the vehicle.

ii. Remove the key from the inside of the vehicle, open the driver side door and then close and lock the door without using the key. Then, check that all doors do not unlock when the door control switch (for manual operation) is turned to unlock from outside the vehicle.

iii. Remove the key from the inside of the vehicle, then close and lock the driver side door with the key operation. Under this condition, check that all doors do not unlock when the door control switch (for manual operation) is turned to unlock from outside the vehicle.

iv. Remove the key from the inside of the vehicle, close the driver side door and lock the door with the wireless door lock operation. Then, check that all doors do not unlock when the door control switch (for manual operation) is turned to unlock from outside the vehicle.

HINT:

Check that the security function is canceled under the following conditions:

- The engine switch is turned on (IG).
- The driver side door is unlocked using the key.
- The door control switch (for manual operation) is turned to unlock after the door lock knob is unlocked manually.
- The doors are unlocked by wireless operation.

d. Check the illumination function.

i. Set the map light switch to the DOOR position.

ii. With all the doors locked, check that all doors unlock when the driver side door lock cylinder is turned to unlock using the key and that the map light turns on.

iii. Check that the map light turns off in approximately 15 seconds after the doors have not been opened.

CHECK DOUBLE LOCKING FUNCTION

CAUTION:

Do not activate the double locking function when there are people in the vehicle because the doors cannot be opened from the inside of the vehicle.

Under emergency conditions, such as if the power has been cut, this function can be cancelled by inserting the key (mechanical key) into the driver door key cylinder and turning it to the unlock side.

a. Check that the double locking function is set.

   i. Open all the windows.

   ii. Turn the engine switch off.

   iii. Open and close the driver side door, and make sure that all doors, including the back door, are closed securely.

   iv. Press the transmitter lock switch twice within 5 seconds, and check that the hazard warning lights flash once at this time to indicate that the double locking function has been set.

   HINT:

   The double locking function can be turned on by pressing the lock switch on the outside handle 2 times within 3 seconds.

   v. Try to unlock each door using the inside handle, and check that none of the doors unlock.

   NOTICE:

   The double locking function does not affect the back door.

b. Check that the double locking function is canceled.

   i. Press the transmitter unlock switch while the double locking function is set, and check that the hazard warning lights flash twice at this time to indicate that the system is canceled.

   ii. Check that the doors can be opened by using both the inside and outside handles.

   NOTICE:

   If the battery of the transmitter is depleted, only the driver side door can be opened using the key. However, the theft deterrent system still remains on. The theft alarm will sound when the door is opened without using the transmitter.

for Preparation Click here

CUSTOMIZING FUNCTION WITH INTELLIGENT TESTER

HINT:

The following items can be customized.

NOTICE:

- **When the customer requests a change in a function, first make sure that the function can be customized.**
- **Be sure to make a note of the current settings before customizing.**
- **When troubleshooting a function, first make sure that the function is set to the default setting.**

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the tester on.

d. Enter the following menus: Select: Body / Door Lock / Utility / Customize /

e. Select the setting by referring to the table below.

Door Lock

Display	Default	Contents	Setting
Unlock Key Twice	OFF	Function that unlocks only the driver side door when the driver side door key cylinder is turned to unlock once, and unlock all doors when it is turned to unlock twice. For the OFF setting, turning it once unlocks all doors.	ON/OFF

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Power Door Lock Control System

Symptom	Suspected Area	See page
All Doors cannot be Locked / Unlocked Simultaneously	DOOR NO. 1 fuse	Click here
	DOOR NO. 2 fuse	Click here
	Front door lock LH*3	Click here
	Front door lock RH*4	Click here
	Harness or connector	Click here
	Master switch	Click here
	Main body ECU	Click here
Only Driver Door LOCK/UNLOCK Functions do not Operate	Front door lock LH*3	Click here
	Front door lock RH*4	Click here
	Harness or connector	-
	Main body ECU	-
Only Passenger Door LOCK/UNLOCK Functions do not Operate	Front door lock RH*3	Click here
	Front door lock LH*4	Click here
	Harness or connector	-
	Main body ECU	-
Only Rear Door LH LOCK/UNLOCK Functions do not Operate	Rear door lock LH	Click here
	Harness or connector	-
	Main body ECU	-
Only Rear Door RH LOCK/UNLOCK Functions do not Operate	Rear door lock RH	Click here
	Harness or connector	-
	Main body ECU	-
Only Back Door LOCK/UNLOCK Functions do not Operate	Back door opener switch	Click here
	Power back door main switch*2	Click here
	Back door lock	Click here
	Harness or connector	-
	Main body ECU	-
Double Locking Function does not Operate Properly*1	B1249	Click here
	B2325	Click here
	Front door lock RH	Click here
	Front door lock LH	Click here
	Rear door lock LH	Click here
	Rear door lock RH	Click here
	Harness or connector	-
	Double lock door control relay (for LHD)	Click here
	Double lock door control relay (for RHD)	Click here

HINT:

*1: w/ Double Locking Function


*2: for Face to Face Seat Type

*3: for LHD

*4: for RHD

for Preparation Click here

CHECK MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY

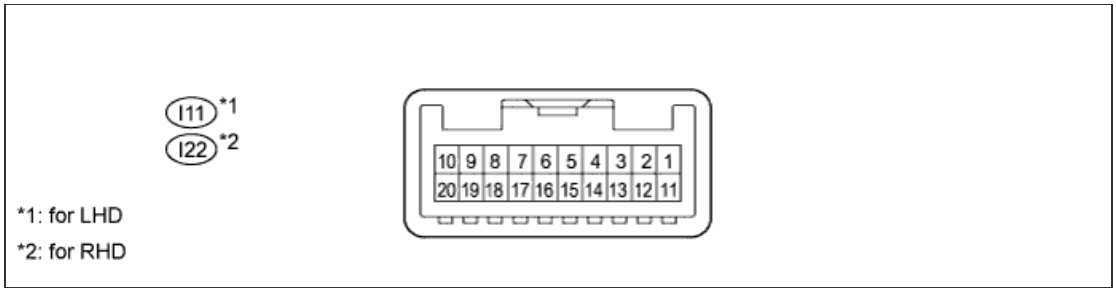

a. Disconnect the I11 switch connector.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
I11-12 (GND) - Body ground*1	W-B - Body ground	Ground	Always	Below 1 Ω
I11-11 (B) - I11-12 (GND)*1	L - W-B	Battery power supply	Always	11 to 14 V
I22-12 (GND) - Body ground*2	W-B - Body ground	Ground	Always	Below 1 Ω
I22-11 (B) - I22-12 (GND)*2	L - W-B	Battery power supply	Always	11 to 14 V


HINT:

*1: for LHD

*2: for RHD

If the result is not as specified, there may be a malfunction on the wire harness side.

CHECK MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

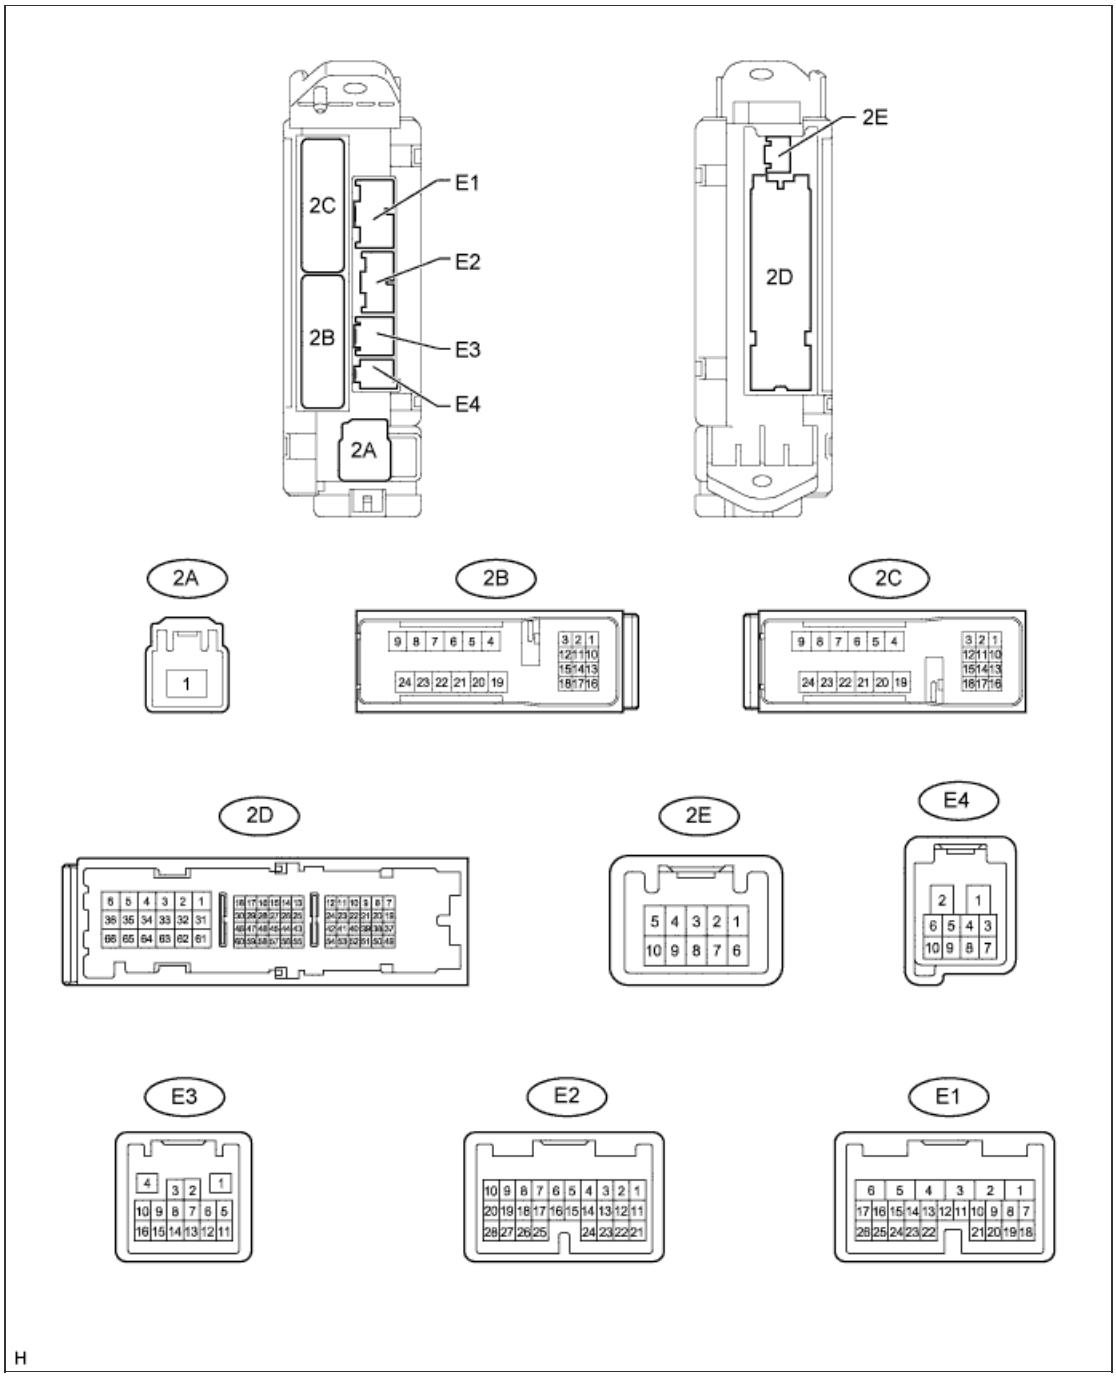

a. Disconnect the 2A, 2B, 2D and E3 ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
2B-20 (BATB) - Body ground	L - Body ground	Battery power supply	Always	11 to 14 V
2A-1 (ACC) - Body ground	B - Body ground	ACC power supply	Engine switch on (ACC)	11 to 14 V
2A-1 (ACC) - Body ground	B - Body ground	ACC power supply	Engine switch off	Below 1 Ω
2D-62 (GND2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction in the wire harness.

c. Reconnect the 2A, 2B, 2D and E3 ECU connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E1-24 (DCTY) - Body ground	L*1 - Body ground Y*2 - Body ground	Driver side door courtesy switch input	Driver side door open	Below 1 V
			Engine switch off, and	

E1-24 (DCTY) - Body ground	L*1 - Body ground Y*2 - Body ground	Driver side door courtesy switch input	driver side door courtesy switch off	Pulse generation (see waveform 1 or 2)
E2-21 (PCTY) - Body ground	Y*1 - Body ground L*2 - Body ground	Front passenger side door courtesy switch input	Front passenger side door open	Below 1 V
E2-21 (PCTY) - Body ground	Y*1 - Body ground L*2 - Body ground	Front passenger side door courtesy switch input	Engine switch off, and passenger side door courtesy switch off	Pulse generation (see waveform 3 or 4)
2C-2 (LCTY) - Body ground	W - Body ground	Rear door LH courtesy light switch input	Rear door LH open	Below 1 V
2C-2 (LCTY) - Body ground	W - Body ground	Rear door LH courtesy light switch input	Engine switch off, and rear LH side door courtesy switch off	Pulse generation (see waveform 5 or 6)
E2-7 (RCTY) - Body ground	G - Body ground	Rear door RH courtesy light switch input	Rear door RH open	Below 1 V
E2-7 (RCTY) - Body ground	G - Body ground	Rear door RH courtesy light switch input	Engine switch off, and rear RH side door courtesy switch off	Pulse generation (see waveform 7 or 8)
E2-25 (BCTY) - Body ground	W - Body ground	Back door courtesy light switch input	Back door open	Below 1 V
E2-25 (BCTY) - Body ground	W - Body ground	Back door courtesy light switch input	Engine switch off, and back door closed	Pulse generation (see waveform 9 or 10)
2D-3 (ACT+) - Body ground	L - Body ground	Door lock motor LOCK drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
2D-3 (ACT+) - Body ground	L - Body ground	Door lock motor LOCK drive output	Master switch (door control switch) or driver side door key cylinder lock	11 to 14 V
2C-24 (ACT+) - Body ground	L - Body ground	Door lock motor LOCK drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
2C-24 (ACT+) - Body ground	L - Body ground	Door lock motor LOCK drive output	Master switch (door control switch) or driver side door key cylinder lock	11 to 14 V
E1-5 (ACTD) - Body ground	B - Body ground	Driver side door lock motor UNLOCK drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
E1-5 (ACTD) - Body ground	B - Body ground	Driver side door lock motor UNLOCK drive output	Master switch (door control switch) or driver side door key cylinder unlock	11 to 14 V
2D-2 (ACT-) - Body ground	B - Body ground	Front passenger side and rear door LH and RH door lock motor UNLOCK drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
2D-2 (ACT-) - Body ground	B - Body ground	Front passenger side and rear door LH and RH door lock motor UNLOCK drive output	Master switch (door control switch) or driver side door key cylinder unlock	11 to 14 V
2D-23 (ACT-) - Body ground	B - Body ground	Front passenger side and rear door LH and RH door lock motor UNLOCK drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
2D-23 (ACT-) - Body ground	B - Body ground	Front passenger side and rear door LH and RH door lock motor UNLOCK drive output	Master switch (door control switch) or driver side door key cylinder unlock	11 to 14 V
E1-10 (UL3) - Body ground	Y*1 - Body ground L*2 - Body ground	Driver side door lock key switch input	Driver side door key cylinder unlock	Below 1 V
E1-10 (UL3) - Body ground	Y*1 - Body ground L*2 - Body ground	Driver side door lock key switch input	Engine switch off, all doors closed and driver side door key cylinder neutral position	Pulse generation (see waveform 11 or 12)
2D-53 (L2) - Body ground	LG - Body ground	Driver side door lock key switch input	Driver side door key cylinder lock	Below 1 V
2D-53 (L2) - Body		Driver side door lock key	Engine switch off, all doors closed and driver	Pulse generation

ground	LG - Body ground	switch input	side door key cylinder neutral position	(see waveform 13 or 14)
E1-1 (TR+) - Body ground	L - Body ground	Back door lock motor UNLOCK drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
E1-1 (TR+) - Body ground	L - Body ground	Back door lock motor UNLOCK drive output	Master switch (door control switch) or driver side door key cylinder unlock	11 to 14 V
E1-9 (LSWD) - Body ground	BR - Body ground	Driver side door lock position switch input	Driver side door unlock	Below 1 V
E1-9 (LSWD) - Body ground	BR - Body ground	Driver side door lock position switch input	Engine switch off, all doors closed and driver side door lock	Pulse generation (see waveform 15 or 16)
E2-27 (LSWP) - Body ground	Y*1 - Body ground BR*2 - Body ground	Front passenger side door lock position switch input	Front passenger side door unlock	Below 1 V
E2-27 (LSWP) - Body ground	Y*1 - Body ground BR*2 - Body ground	Front passenger side door lock position switch input	Engine switch off, all doors closed and passenger side door lock	Pulse generation (see waveform 17 or 18)
2C-1 (LSWL) - Body ground	BR - Body ground	Rear door LH lock position switch input	Rear door LH unlock	Below 1 V
2C-1 (LSWL) - Body ground	BR - Body ground	Rear door LH lock position switch input	Engine switch off, all doors closed and rear door LH lock	Pulse generation (see waveform 19 or 20)
E2-5 (LSWR) - Body ground	BR - Body ground	Rear door RH lock position switch input	Rear door RH unlock	Below 1 V
E2-5 (LSWR) - Body ground	BR - Body ground	Rear door RH lock position switch input	Engine switch off, all doors closed and rear door RH lock	Pulse generation (see waveform 21 or 22)
E1-26 (BDSU) - Body ground	L - Body ground	Back door opener switch input	Back door lock opener switch off	Below 1 V
E1-26 (BDSU) - Body ground	L - Body ground	Back door opener switch input	Back door lock opener switch on	Pulse generation (see waveform 23 or 24)

HINT:

*1: for LHD


*2: for RHD

If the result is not as specified, the ECU may have a malfunction.

e. Using an oscilloscope, check waveform 1.

Waveform 1 (Reference)


Item	Content
Terminal No. (Symbol)	E1-24 (DCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and driver side door courtesy switch off

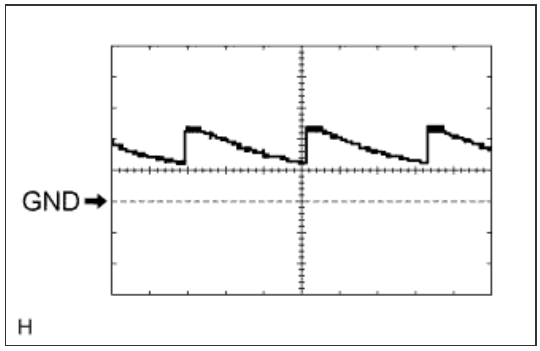

f. Using an oscilloscope, check waveform 2.

Waveform 2 (Reference)


Item	Content
Terminal No. (Symbol)	E1-24 (DCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and driver side door courtesy switch off

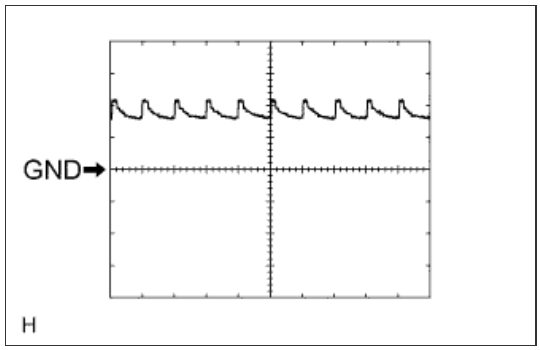

g. Using an oscilloscope, check waveform 3.

Waveform 3 (Reference)


Item	Content
Terminal No. (Symbol)	E2-21 (PCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and passenger side door courtesy switch off

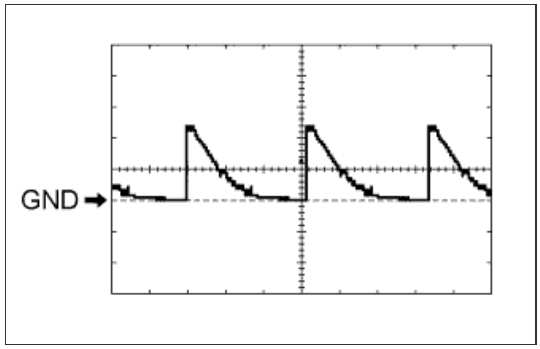

h. Using an oscilloscope, check waveform 4.

Waveform 4 (Reference)


Item	Content
Terminal No. (Symbol)	E2-21 (PCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and passenger side door courtesy switch off

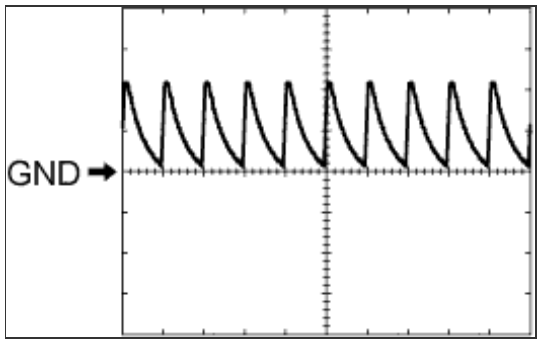

i. Using an oscilloscope, check waveform 5.

Waveform 5 (Reference)


Item	Content
Terminal No. (Symbol)	2C-2 (LCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear LH side door courtesy switch off

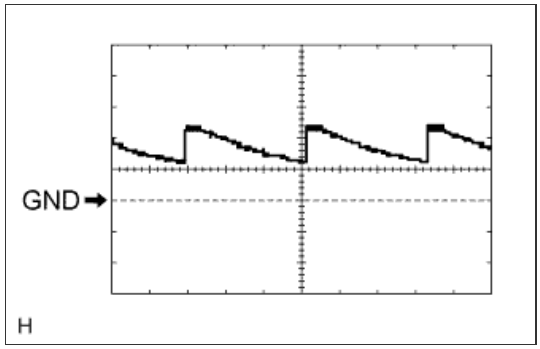

j. Using an oscilloscope, check waveform 6.

Waveform 6 (Reference)


Item	Content
Terminal No. (Symbol)	2C-2 (LCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear LH side door courtesy switch off

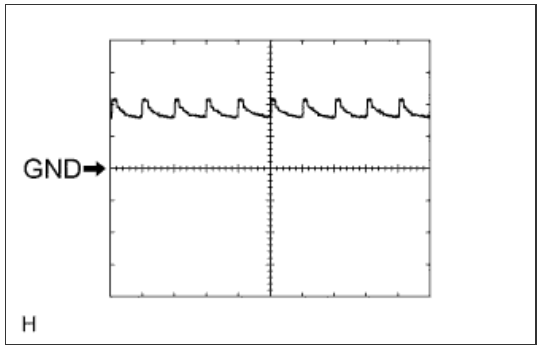

k. Using an oscilloscope, check waveform 7.

Waveform 7 (Reference)


Item	Content
Terminal No. (Symbol)	E2-7 (RCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear RH side door courtesy switch off

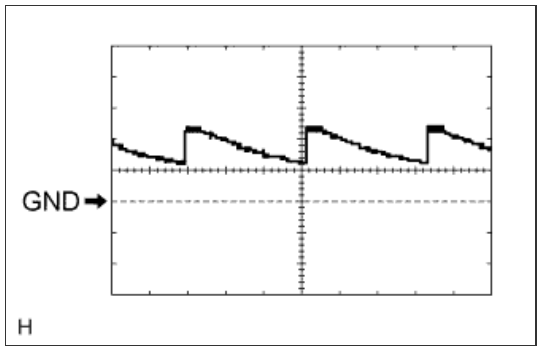

l. Using an oscilloscope, check waveform 8.

Waveform 8 (Reference)


Item	Content
Terminal No. (Symbol)	E2-7 (RCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear RH side door courtesy switch off

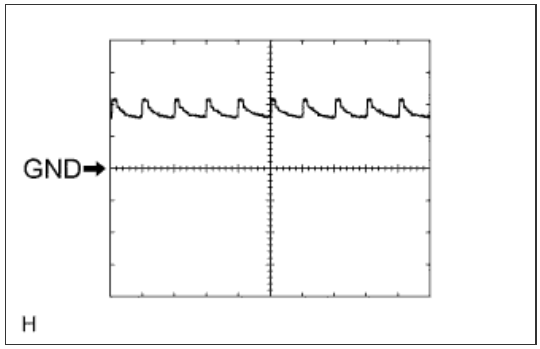

m. Using an oscilloscope, check waveform 9.

Waveform 9 (Reference)


Item	Content
Terminal No. (Symbol)	E2-25 (BCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and back door closed

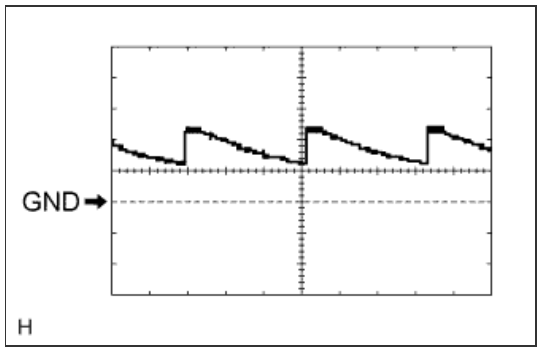

n. Using an oscilloscope, check waveform 10.

Waveform 10 (Reference)


Item	Content
Terminal No. (Symbol)	E2-25 (BCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and back door closed

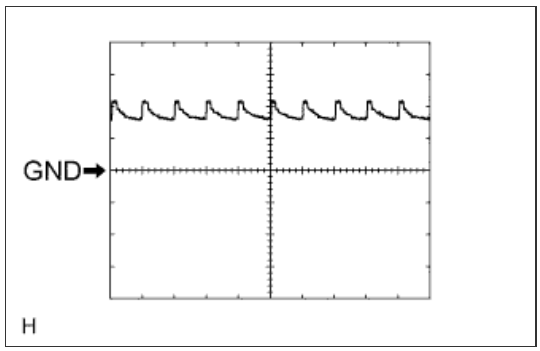

o. Using an oscilloscope, check waveform 11.

Waveform 11 (Reference)


Item	Content
Terminal No. (Symbol)	E1-10 (UL3) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door key cylinder neutral position

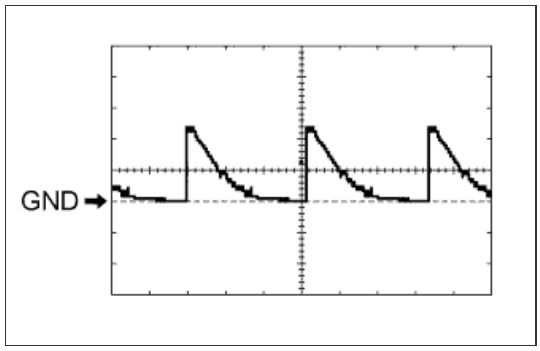

p. Using an oscilloscope, check waveform 12.

Waveform 12 (Reference)


Item	Content
Terminal No. (Symbol)	E1-10 (UL3) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door key cylinder neutral position

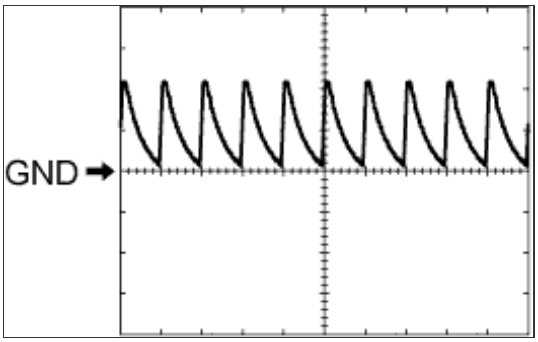

q. Using an oscilloscope, check waveform 13.

Waveform 13 (Reference)


Item	Content
Terminal No. (Symbol)	2D-53 (L2) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door key cylinder neutral position

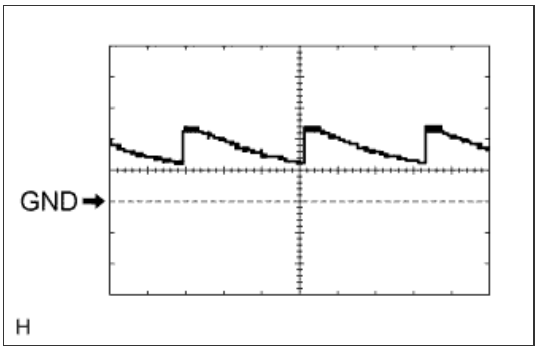

r. Using an oscilloscope, check waveform 14.

Waveform 14 (Reference)


Item	Content
Terminal No. (Symbol)	2D-53 (L2) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door key cylinder neutral position

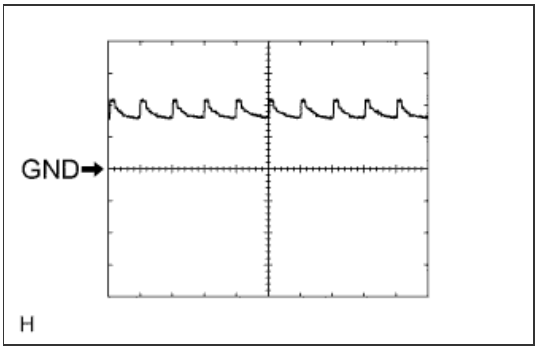

s. Using an oscilloscope, check waveform 15.

Waveform 15 (Reference)


Item	Content
Terminal No. (Symbol)	E1-9 (LSWD) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door lock

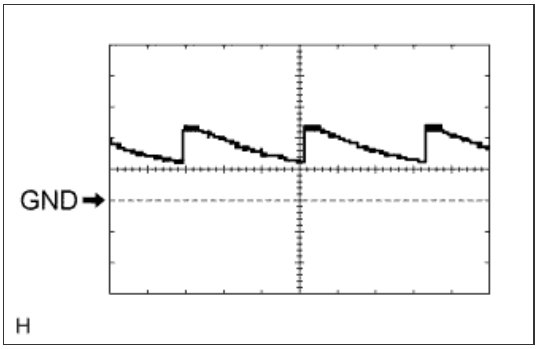

t. Using an oscilloscope, check waveform 16.

Waveform 16 (Reference)


Item	Content
Terminal No. (Symbol)	E1-9 (LSWD) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door lock

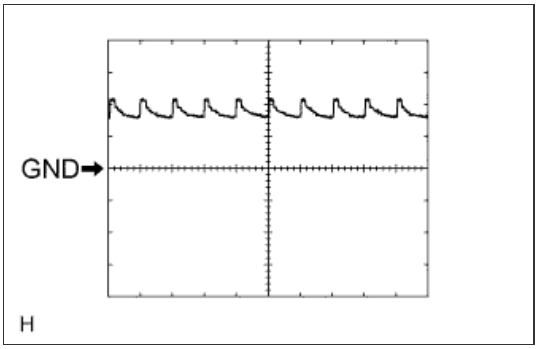

u. Using an oscilloscope, check waveform 17.

Waveform 17 (Reference)


Item	Content
Terminal No. (Symbol)	E2-27 (LSWP) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and passenger side door lock

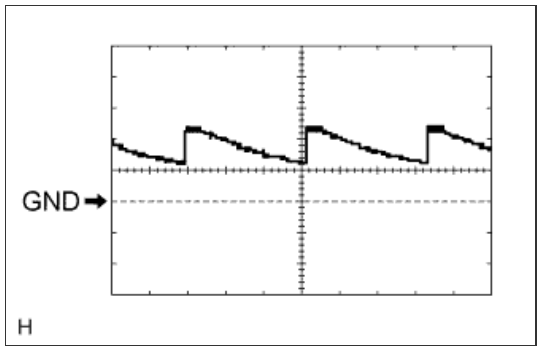

v. Using an oscilloscope, check waveform 18.

Waveform 18 (Reference)


Item	Content
Terminal No. (Symbol)	E2-27 (LSWP) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and passenger side door lock

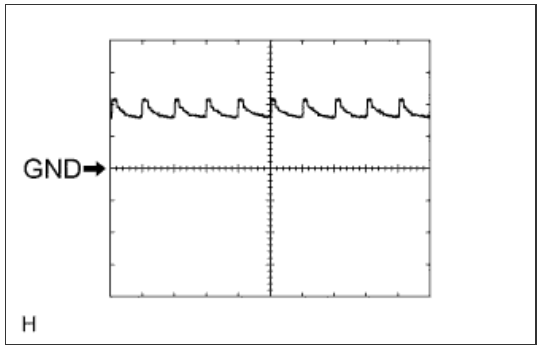

w. Using an oscilloscope, check waveform 19.

Waveform 19 (Reference)


Item	Content
Terminal No. (Symbol)	2C-1 (LSWL) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and rear door LH lock

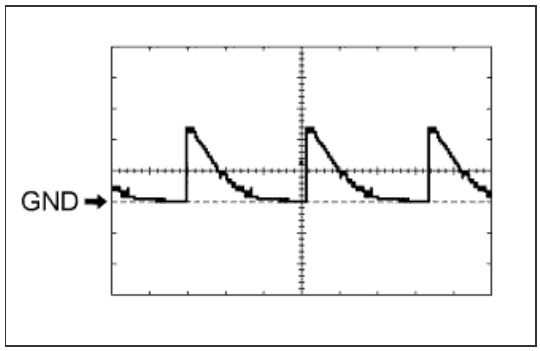

x. Using an oscilloscope, check waveform 20.

Waveform 20 (Reference)


Item	Content
Terminal No. (Symbol)	2C-1 (LSWL) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and rear door LH lock

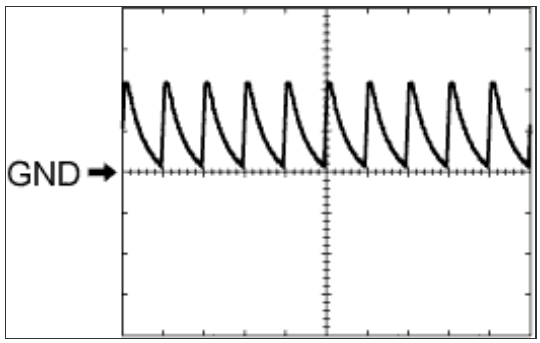

y. Using an oscilloscope, check waveform 21.

Waveform 21 (Reference)


Item	Content
Terminal No. (Symbol)	E2-5 (LSWR) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and rear door RH lock

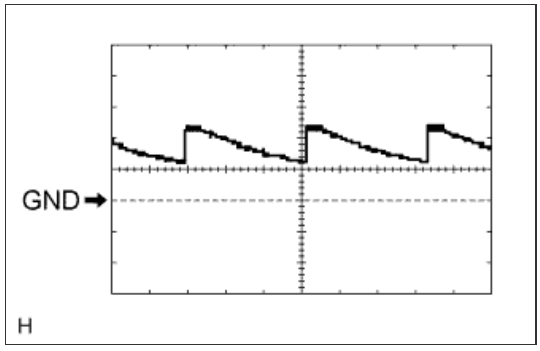

z. Using an oscilloscope, check waveform 22.

Waveform 22 (Reference)


Item	Content
Terminal No. (Symbol)	E2-5 (LSWR) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and rear door RH lock

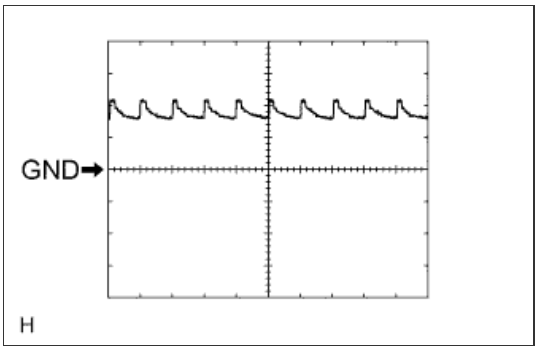

aa. Using an oscilloscope, check waveform 23.

Waveform 23 (Reference)


Item	Content
Terminal No. (Symbol)	E1-26 (BDSU) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and Back door lock opener switch on

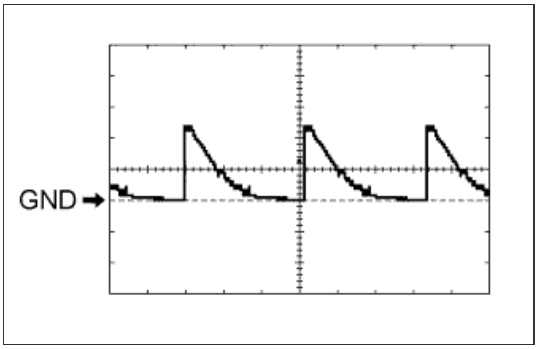


ab. Using an oscilloscope, check waveform 24.

Waveform 24 (Reference)

Item	Content
Terminal No. (Symbol)	E1-26 (BDSU) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and Back door lock opener switch on

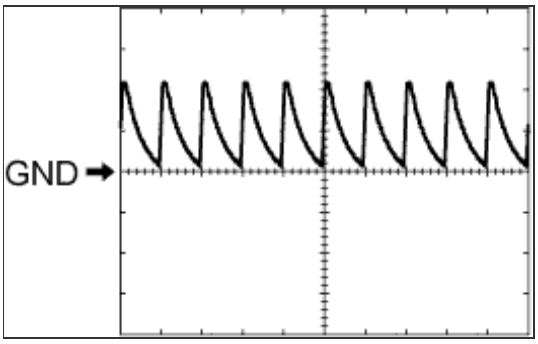

CHECK DOUBLE LOCK DOOR CONTROL RELAY

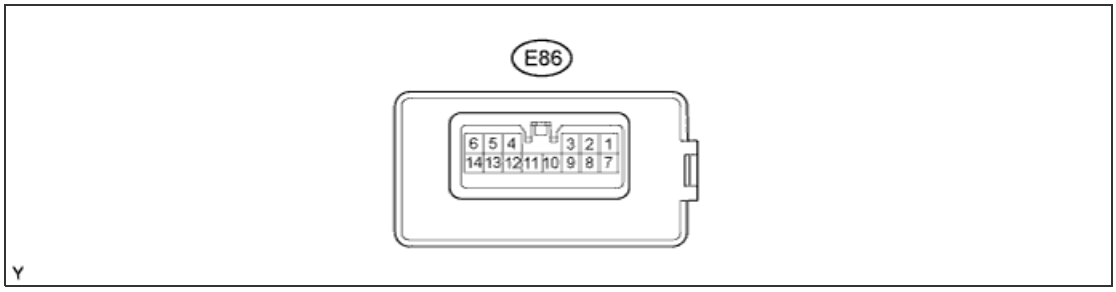

a. Disconnect the E86 double lock door control relay connector.

b. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E86-1 (+B) - E86-14 (GND)	B - W-B	Battery power supply	Always	11 to 14 V
E86-7 (CPUB) - E86-14 (GND)	R - W-B	ECU power supply	Always	11 to 14 V
E86-14 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 V

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E86 double lock door control relay connector.

d. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition

E86-4 (ACTR) - E86-14 (GND)	P - W-B	All door double lock motor set off output	Door lock set → unset	Below 1 V → 11 to 14 V → Below 1 V
E86-3 (ACTS) - E86-14 (GND)	G - W-B	All door double lock motor set on output	Door lock unset → set	Below 1 V → 11 to 14 V → Below 1 V
E86-5 (DLPD) - E86-14 (GND)	BR - W-B	Double lock position switch signal	Double lock set	Below 1 Ω
E86-5 (DLPD) - E86-14 (GND)	BR - W-B	Double lock position switch signal	Double lock unset	10 kΩ or higher
E86-6 (DLPP) - E86-14 (GND)	GR - W-B	Double lock position switch signal	Double lock set	Below 1 Ω
E86-6 (DLPP) - E86-14 (GND)	GR - W-B	Double lock position switch signal	Double lock unset	10 kΩ or higher
E86-11 (DLPR) - E86-14 (GND)	Y - W-B	Double lock position switch signal	Double lock set	Below 1 Ω
E86-11 (DLPR) - E86-14 (GND)	Y - W-B	Double lock position switch signal	Double lock unset	10 kΩ or higher
E86-12 (DLPL) - E86-14 (GND)	LG - W-B	Double lock position switch signal	Double lock set	Below 1 Ω
E86-12 (DLPL) - E86-14 (GND)	LG - W-B	Double lock position switch signal	Double lock unset	10 kΩ or higher

If the result is not as specified, the ECU may have a malfunction.

for Preparation Click here

DATA LIST

HINT:

Using the intelligent tester to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the tester on.

d. Enter the following menus:
Body / (desired system) / Data List.

e. According to the display on the tester, read the Data List.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D Door Courtesy SW	Driver side door courtesy light switch signal / ON or OFF	ON: Driver side door opened OFF: Driver side door closed	-
D Door Lock Pos SW	Driver side door lock position switch signal / ON or OFF	ON: Driver side door unlocked OFF: Driver side door locked	-
Door Key SW-Lock	Door key linked lock switch signal / ON or OFF	ON: Driver side door key cylinder turned to lock position OFF: Driver side door key cylinder not turned	-
D-Door Key SW-UL	Door key linked unlock switch signal / ON or OFF	ON: Driver side door key cylinder turned to unlock position OFF: Driver side door key cylinder not turned	-
P-Door Courtesy SW	Front passenger side door courtesy light switch signal / ON or OFF	ON: Front passenger side door opened OFF: Front passenger side door closed	-
P-Door Lock Pos SW	Front passenger side door lock position switch signal / ON or OFF	ON: Front passenger side door unlocked OFF: Front passenger side door locked	-
RL Door Courtesy SW	Rear LH side door courtesy light switch signal / ON or OFF	ON: Rear LH side door opened OFF: Rear LH side door closed	-
RL-Door Lock Pos SW	Rear LH side door lock position switch signal / ON or OFF	ON: Rear LH side door unlocked OFF: Rear LH side door locked	-
RR Door Courtesy SW	Rear RH side door courtesy light switch signal / ON or OFF	ON: Rear RH side door opened OFF: Rear RH side door closed	-
RR-Door Lock Pos SW	Rear RH side door lock position switch signal / ON or OFF	ON: Rear RH side door unlocked OFF: Rear RH side door locked	-
Back Door Courtesy SW	Back door courtesy light switch signal / ON or OFF	ON: Back door open OFF: Back door closed	-
Back Door Open Handle SW	Back door opener handle switch signal / ON or OFF	ON: Back door opener switch pushed OFF: Back door opener switch not pushed	-
Back Door Open	Back door open status / Permit or Prohibit	Permit: Back door unlocked Prohibit: Back door locked	-
IG SW	Engine switch status / ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-

ACC SW	Engine switch status / ON or OFF	ON: Engine switch on (ACC) OFF: Engine switch off	-
Communication Double Locking	Connection status between double door lock ECU and main body ECU / OK or STOP	OK: Connection STOP: No connection	-
Communication Master SW	Connection status between master switch and main body ECU / OK or STOP	OK: Connection STOP: No connection	-

Ma ter S itch

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Door Lock Switch Status	Door manual lock switch signal / ON or OFF	ON: Door control switch ON (LOCK) OFF: Door control switch OFF	-
Door Unlock Switch Status	Door manual unlock switch signal / ON or OFF	ON: Door control switch ON (UNLOCK) OFF: Door control switch OFF	-

ACTIVE TEST

HINT:

Using the intelligent tester to perform Active Tests allows relays, VSVs, actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. Performing Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the tester on.

d. Enter the following menus:
Body / Main Body / Active Test.

e. According to the display on the tester, perform the Active Test.

Main Body


Tester Display	Test Part	Control Range	Diagnostic Note
Door Lock	Operate door lock motor	Lock or Unlock	-
D-Door Unlock	Operate door lock motor	ON or OFF	-
Trunk and Back-Door Open	Operate back door opener	ON or OFF	-

for Preparation Click here

DESCRIPTION

The main body ECU receives switch signals from the multiplex network master switch, and driver side door key cylinder switch signals from the front door lock. The main body ECU activates the door lock motor on each door according to these signals.

WIRING DIAGRAM

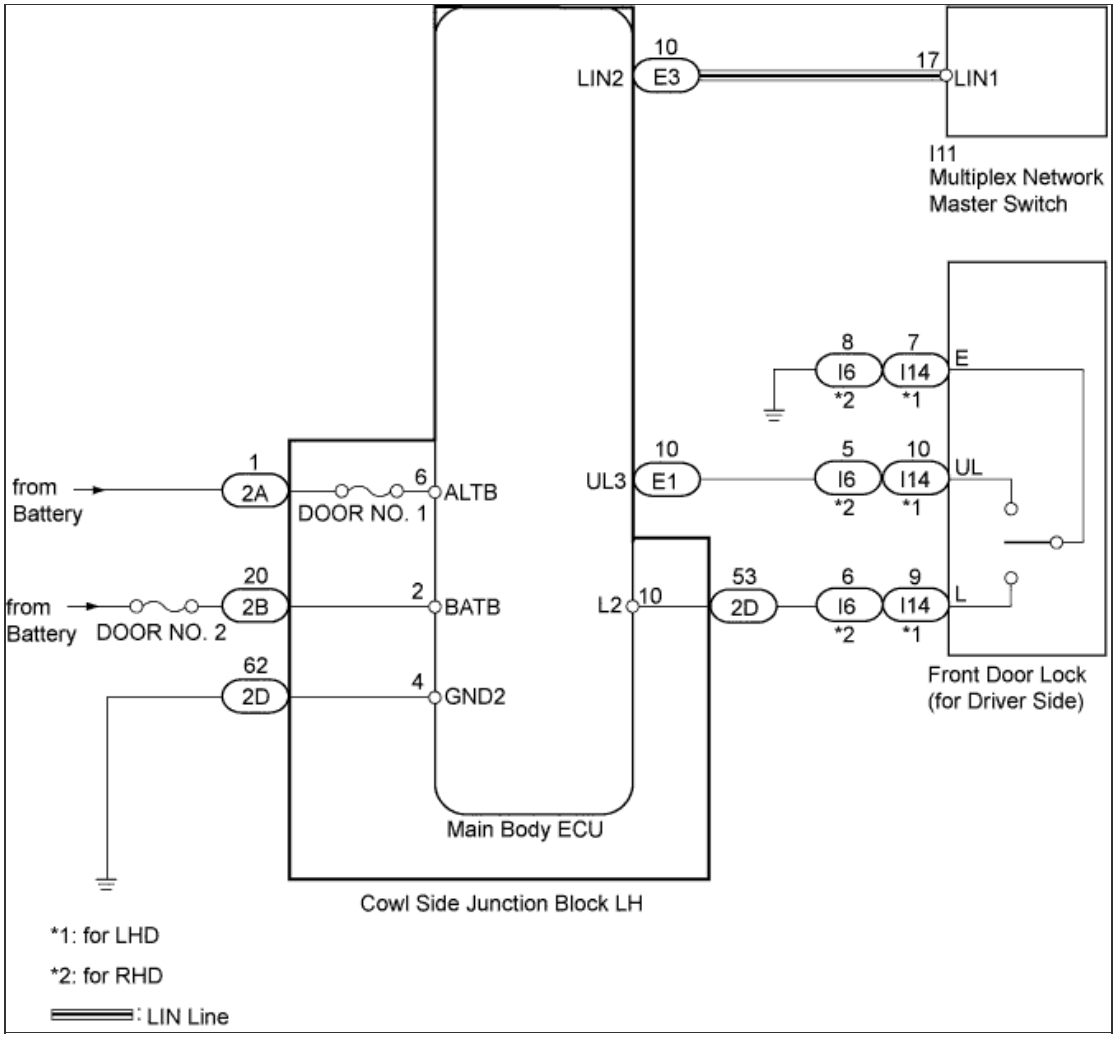

INSPECTION PROCEDURE

1.CHECK DOOR LOCK OPERATION

Result

Result	Proceed to
All doors cannot be locked through multiplex network master switch and driver side door key cylinder	A
All doors cannot be locked through multiplex network master switch	B
All doors cannot be locked through driver side door key cylinder	C

B → Go to step 4

C → Go to step 5

A

2.INSPECT FUSE (DOOR NO. 1, DOOR NO. 2)

a. Remove the DOOR NO. 1 fuse from the cowl side junction block LH.

b. Remove the DOOR NO. 2 fuse from the engine room No. 1 relay block.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
DOOR NO. 1 fuse	Always	Below 1 Ω
DOOR NO. 2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

3.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

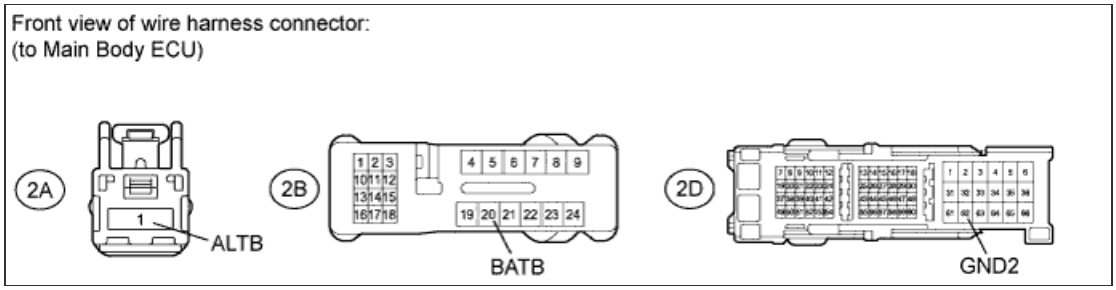

a. Disconnect the 2A, 2B and 2D ECU connectors.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage :

Tester Connection	Condition	Specified Condition
2A-1 (ALTB) - Body ground	Always	11 to 14 V
2B-20 (BATB) - Body ground	Always	11 to 14 V

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
2D-62 (GND2) - Body ground	Always	Below 1 Ω

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

4.CHECK MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY (OPERATION)

a. Replace the multiplex network master switch with a normally functioning one (Click here).

b. Check that all doors can be locked and unlocked by using the multiplex network master switch.

OK:

All doors can be locked and unlocked with multiplex network master switch.

REPLACE MAIN BODY ECU (COWL SIDE JUNCTION BLOCK

NG → LH)

OK

END (MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY IS DEFECTIVE)

5.READ VALUE USING INTELLIGENT TESTER (DOOR KEY LINKED LOCK AND UNLOCK SWITCH)

a. Use the Data List to check if the door key linked lock and unlock switches are functioning properly.

Main Body ECU

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Door Key Linked Lock SW	Door key linked lock switch signal / ON or OFF	ON: Driver side door key cylinder turned to lock position OFF: Driver side door key cylinder not turned	-
Door Key Linked Unlock SW	Door key linked unlock switch signal / ON or OFF	ON: Driver side door key cylinder turned to unlock position OFF: Driver side door key cylinder not turned	-

OK:

On tester screen, each item changes between ON and OFF according to above chart.


NG → Go to step 6

OK

REPLACE MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

6.CHECK HARNESS AND CONNECTOR (FRONT DOOR LOCK - MAIN BODY ECU AND BODY GROUND)

a. for LHD:

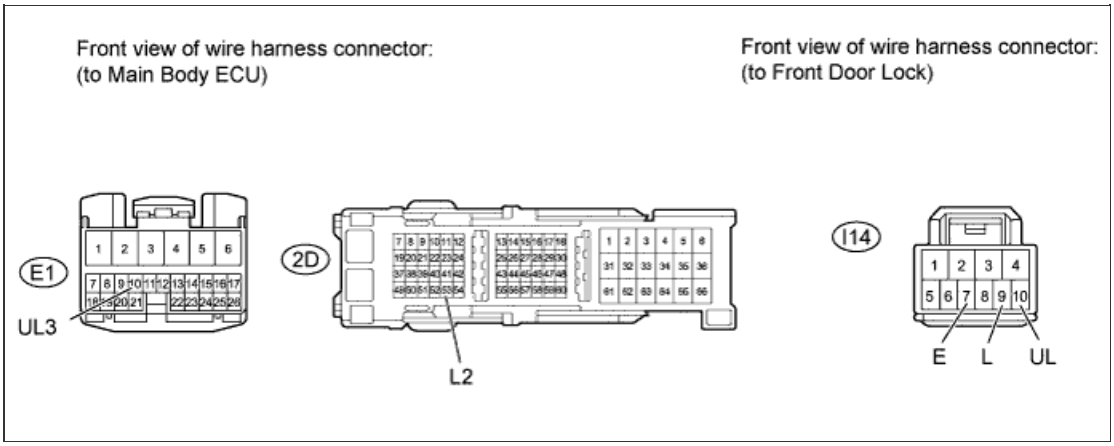

i. Disconnect the I14 door lock connector.

ii. Disconnect the E1 and 2D ECU connectors.


iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I14-10 (UL) - E1-10 (UL3)	Always	Below 1 Ω
I14-9 (L) - 2D-53 (L2)	Always	Below 1 Ω
I14-7 (E) - Body ground	Always	Below 1 Ω
I14-10 (UL) -	Always	10 kΩ or higher

Body ground I14-9 (L) - Body ground	Always	10 kΩ or higher

b. for RHD:

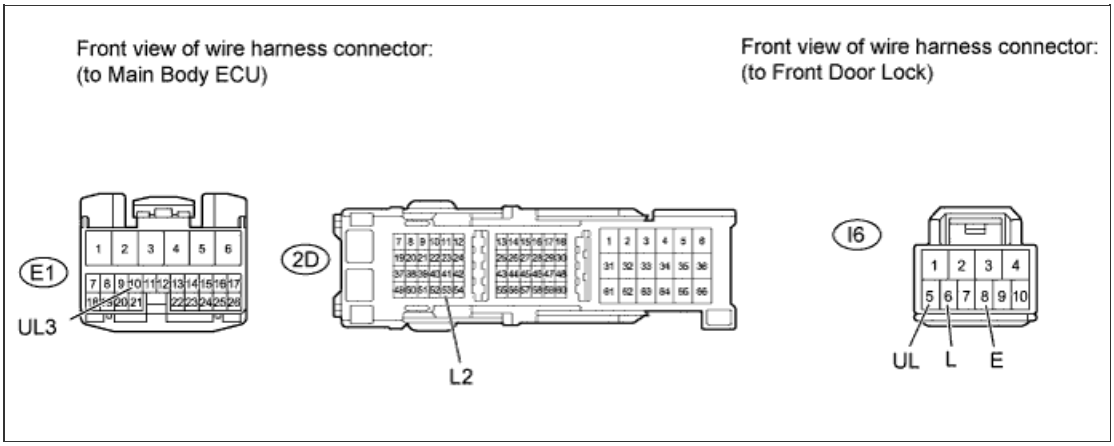

i. Disconnect the I6 door lock connector.

ii. Disconnect the E1 and 2D ECU connectors.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
I6-5 (UL) - E1-10 (UL3)	Always	Below 1 Ω
I6-6 (L) - 2D-53 (L2)	Always	Below 1 Ω
I6-8 (E) - Body ground	Always	Below 1 Ω
I6-5 (UL) - Body ground	Always	10 kΩ or higher
I6-6 (L) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.INSPECT FRONT DOOR LOCK ASSEMBLY (DOOR KEY LINKED LOCK AND UNLOCK SWITCH)

a. for LHD (w/o Double Locking Function):

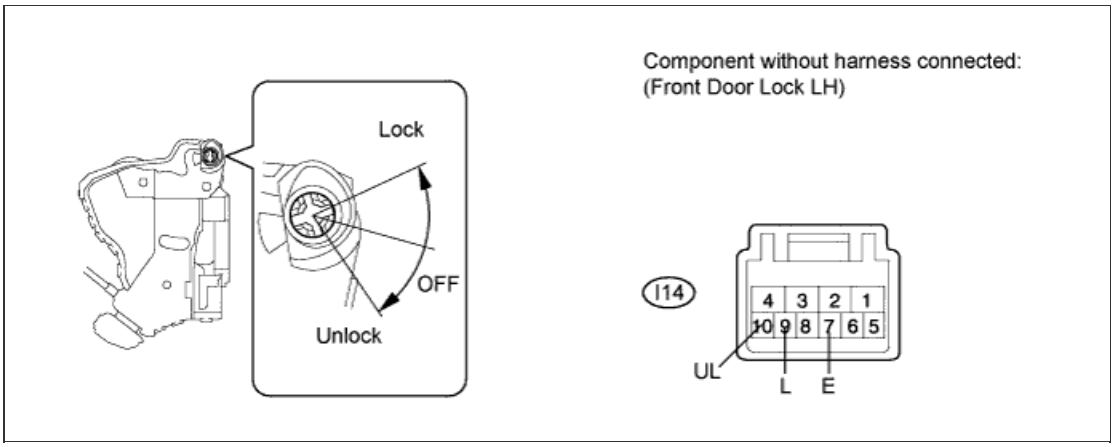


i. Remove the front door lock LH (Click here).

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
9 (L) - 7 (E)	Lock	Below 1 Ω
9 (L) - 7 (E)	Off	10 kΩ or higher
10 (UL) - 7 (E)	Unlock	Below 1 Ω
10 (UL) - 7 (E)	Off	10 kΩ or higher

b. for LHD (w/ Double Locking Function):

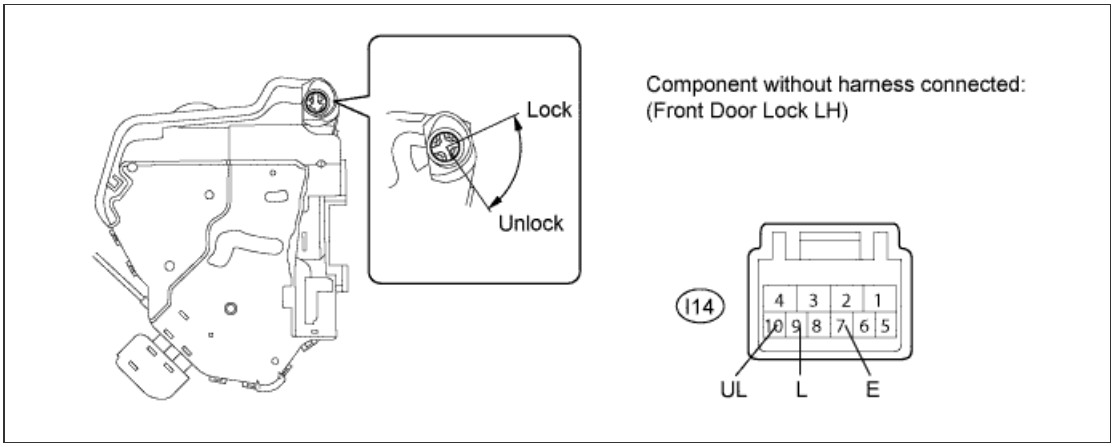


i. Remove the front door lock LH (Click here).

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
9 (L) - 7 (E)	Lock	Below 1 Ω
9 (L) - 7 (E)	Off	10 kΩ or higher
10 (UL) - 7 (E)	Unlock	Below 1 Ω
10 (UL) - 7 (E)	Off	10 kΩ or higher

c. for RHD (w/o Double Locking Function):

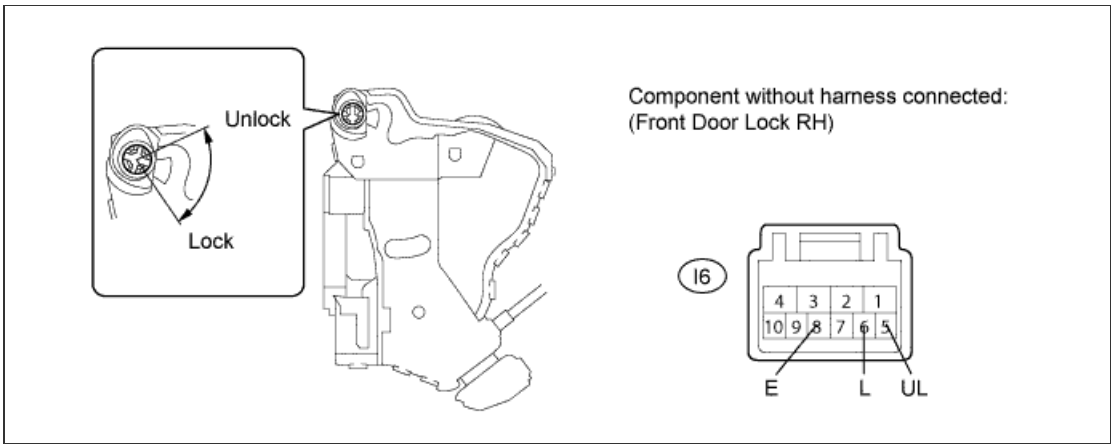


i. Remove the front door lock RH (Click here).

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
5 (UL) - 8 (E)	Unlock	Below 1 Ω
5 (UL) - 8 (E)	Off	10 kΩ or higher
6 (L) - 8 (E)	Lock	Below 1 Ω
6 (L) - 8 (E)	Off	10 kΩ or higher

d. for RHD (w/ Double Locking Function):

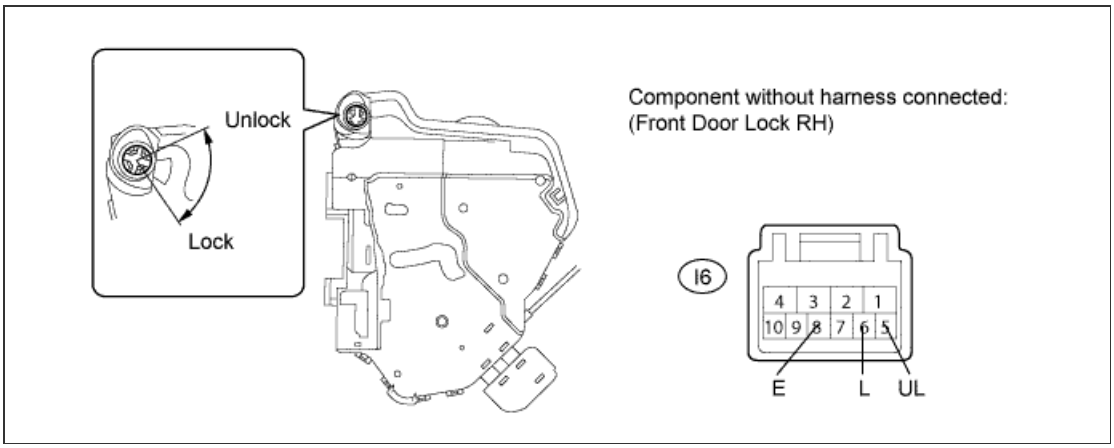

i. Remove the front door lock LH (Click here).

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
5 (UL) - 8 (E)	Unlock	Below 1 Ω
5 (UL) - 8 (E)	Off	10 kΩ or higher
6 (L) - 8 (E)	Lock	Below 1 Ω
6 (L) - 8 (E)	Off	10 kΩ or higher

NG → REPLACE FRONT DOOR LOCK ASSEMBLY (Click here)

OK → REPLACE MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

for Preparation Click here

1.PRECAUTIONS FOR EACH FUNCTION

a. Precautions for the key:

The key is a precision instrument. Be sure to observe the following:

i. Do not drop or strike the key.

ii. Do not keep the key in a high temperature area for a long time.

iii. Do not use an ultrasonic washing machine to clean the key.

iv. Keep the key away from magnets or magnetized items during use.

v. Do not attach any stickers to the key.


b. Precautions for the battery built into the key and the vehicle battery:

i. When the door is being locked, the vehicle battery is used to transmit a radio wave. The battery may be fully depleted if the vehicle remains stopped for a long time. If the vehicle is not used for a long time, replace the transmitter battery (Click here) or cancel the smart key system (for Entry Function) (Click here).


ii. When the door is being locked with the key in the detection area of the door oscillator, the battery is used to regulate communication between the key and vehicle. If the vehicle is not used, keep the key away from the vehicle (more than 2 m (6.56 ft.)).

for Preparation Click here


for LHD:

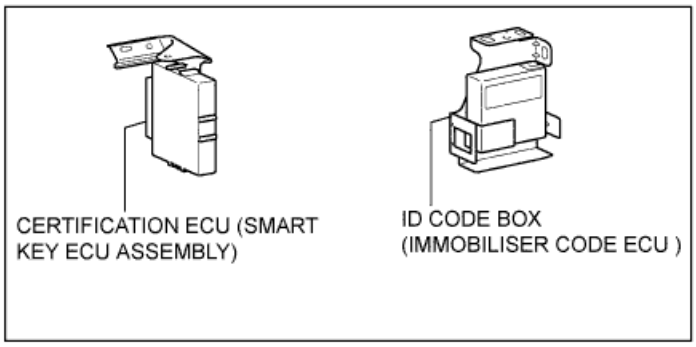


Refer to Service Bulletin for installation position

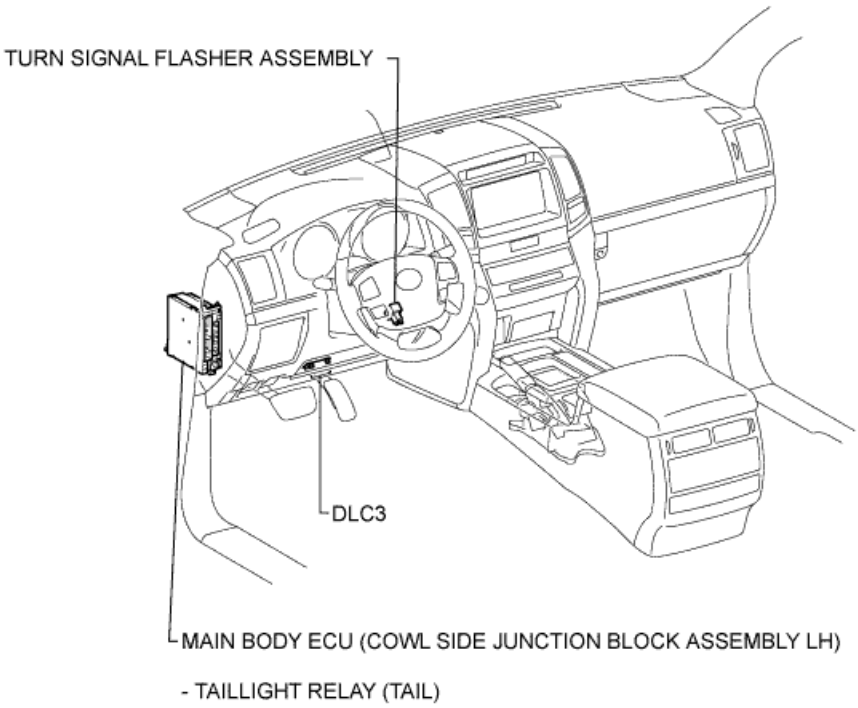



for RHD:

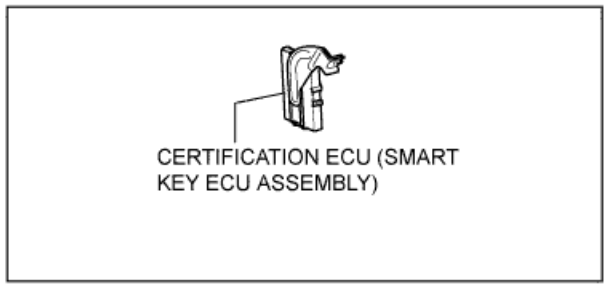



Refer to Service Bulletin for installation position

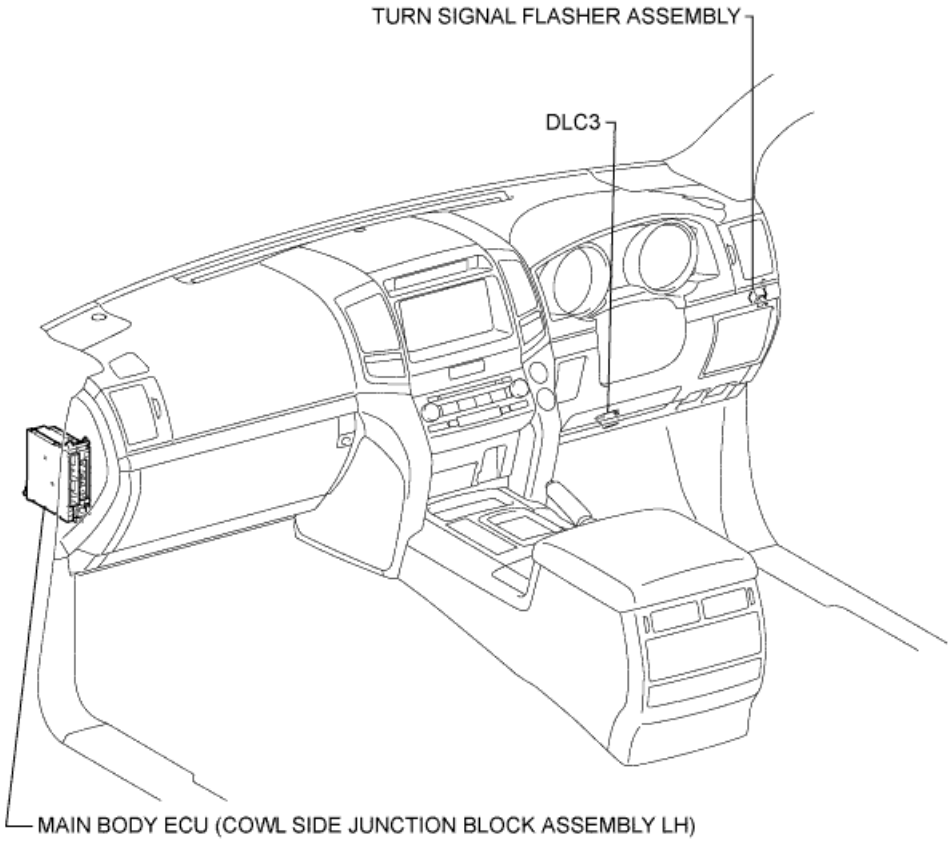

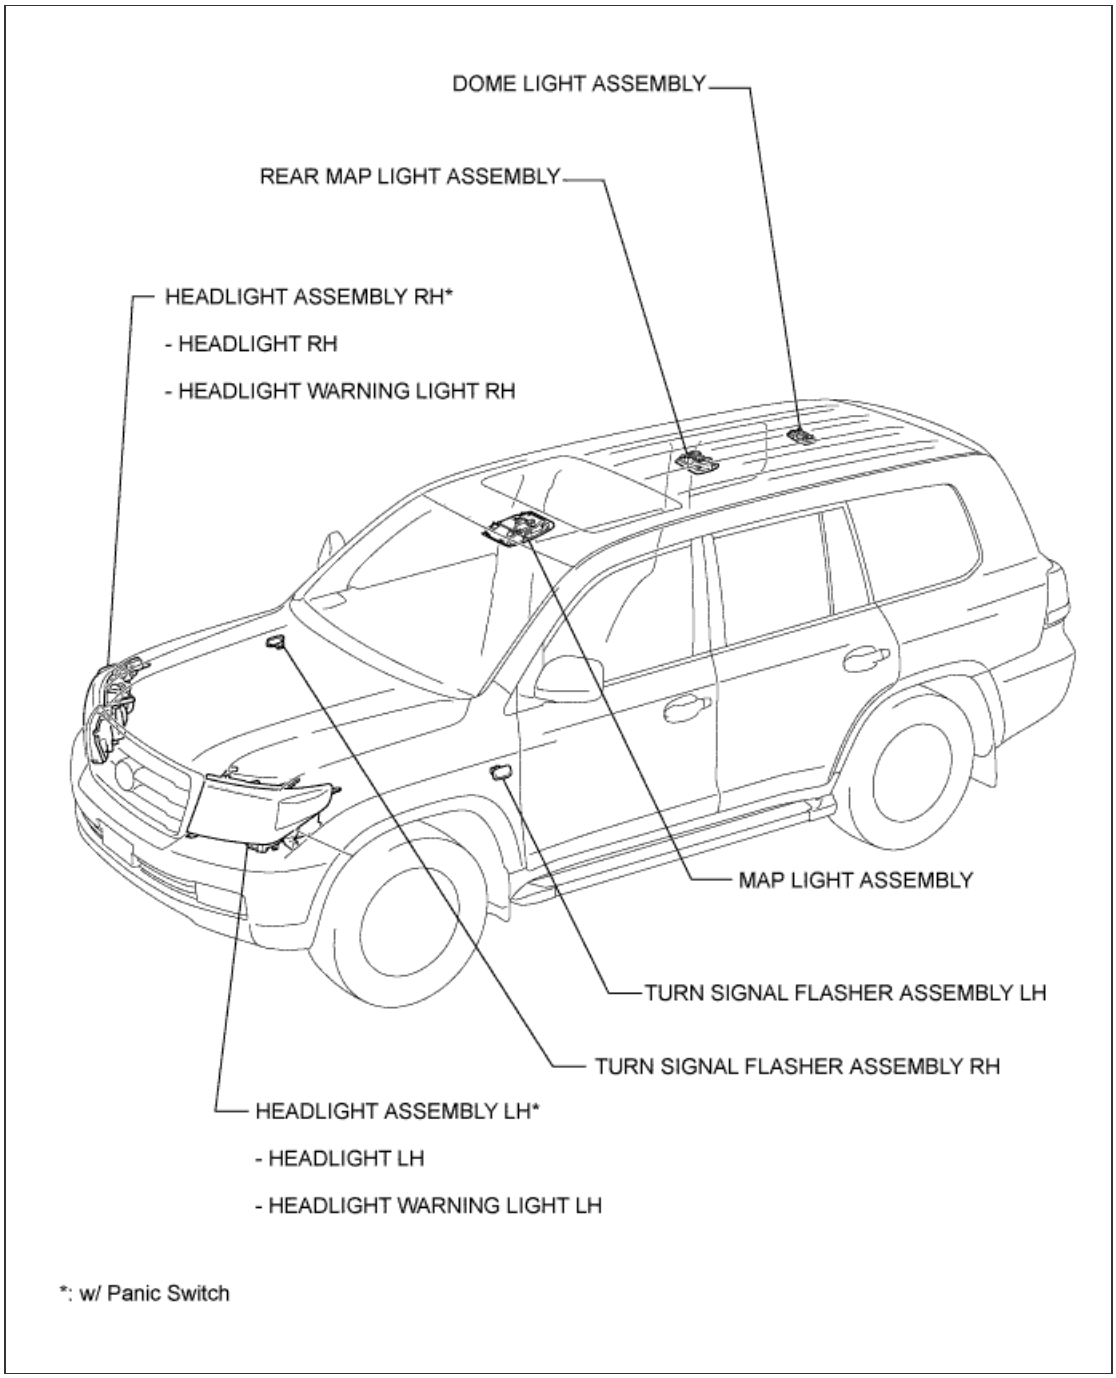
DOME LIGHT ASSEMBLY
REAR MAP LIGHT ASSEMBLY
HEADLIGHT ASSEMBLY RH*
- HEADLIGHT RH
- HEADLIGHT WARNING LIGHT RH
MAP LIGHT ASSEMBLY
TURN SIGNAL FLASHER ASSEMBLY LH
TURN SIGNAL FLASHER ASSEMBLY RH
HEADLIGHT ASSEMBLY LH*
- HEADLIGHT LH
- HEADLIGHT WARNING LIGHT LH
*: w/ Panic Switch

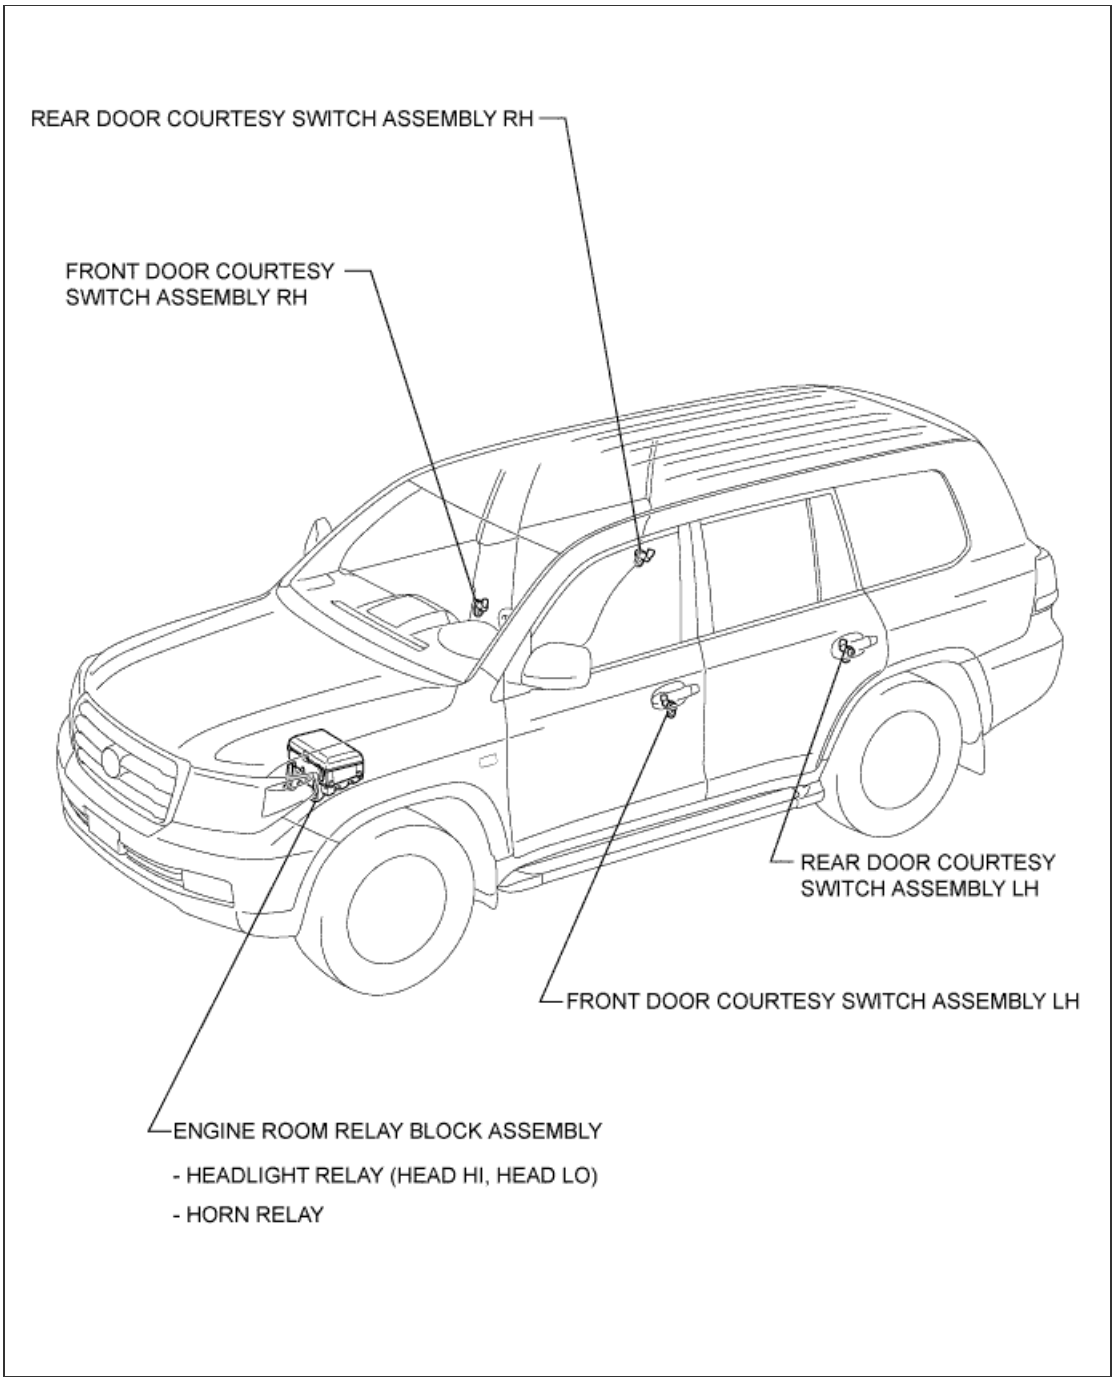

REAR DOOR COURTESY SWITCH ASSEMBLY RH
FRONT DOOR COURTESY SWITCH ASSEMBLY RH
REAR DOOR COURTESY SWITCH ASSEMBLY LH
FRONT DOOR COURTESY SWITCH ASSEMBLY LH
ENGINE ROOM RELAY BLOCK ASSEMBLY
- HEADLIGHT RELAY (HEAD HI, HEAD LO)
- HORN RELAY

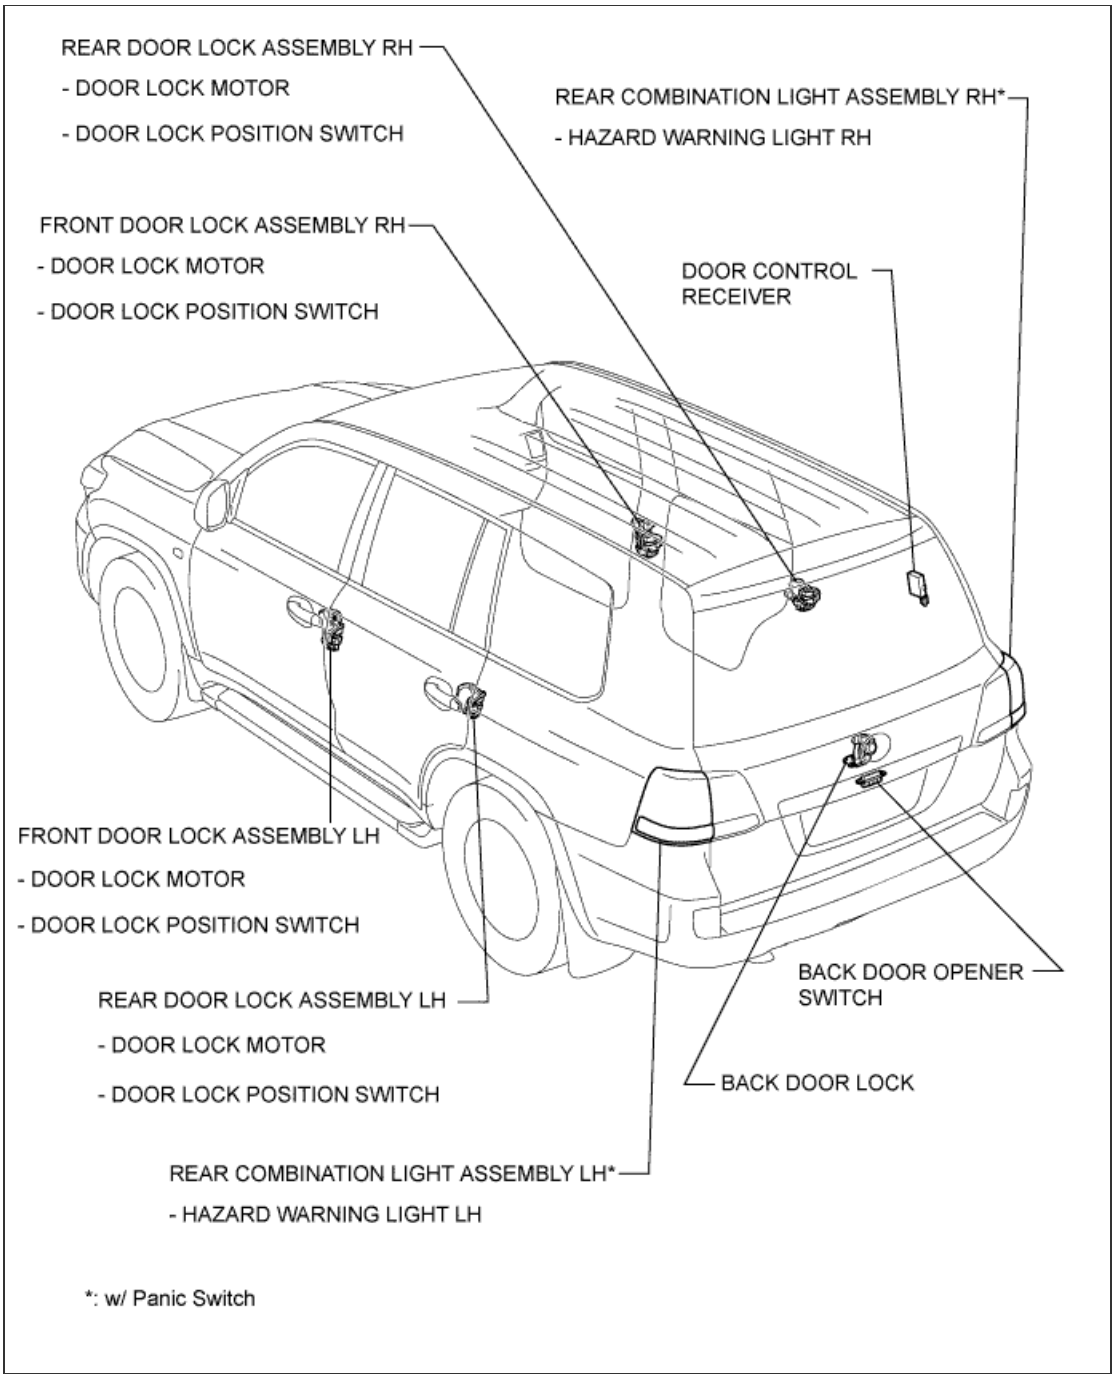
REAR DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
REAR COMBINATION LIGHT ASSEMBLY RH*
- HAZARD WARNING LIGHT RH
FRONT DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
DOOR CONTROL RECEIVER
FRONT DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
BACK DOOR OPENER SWITCH
REAR DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
BACK DOOR LOCK
REAR COMBINATION LIGHT ASSEMBLY LH*
- HAZARD WARNING LIGHT LH
*: w/ Panic Switch

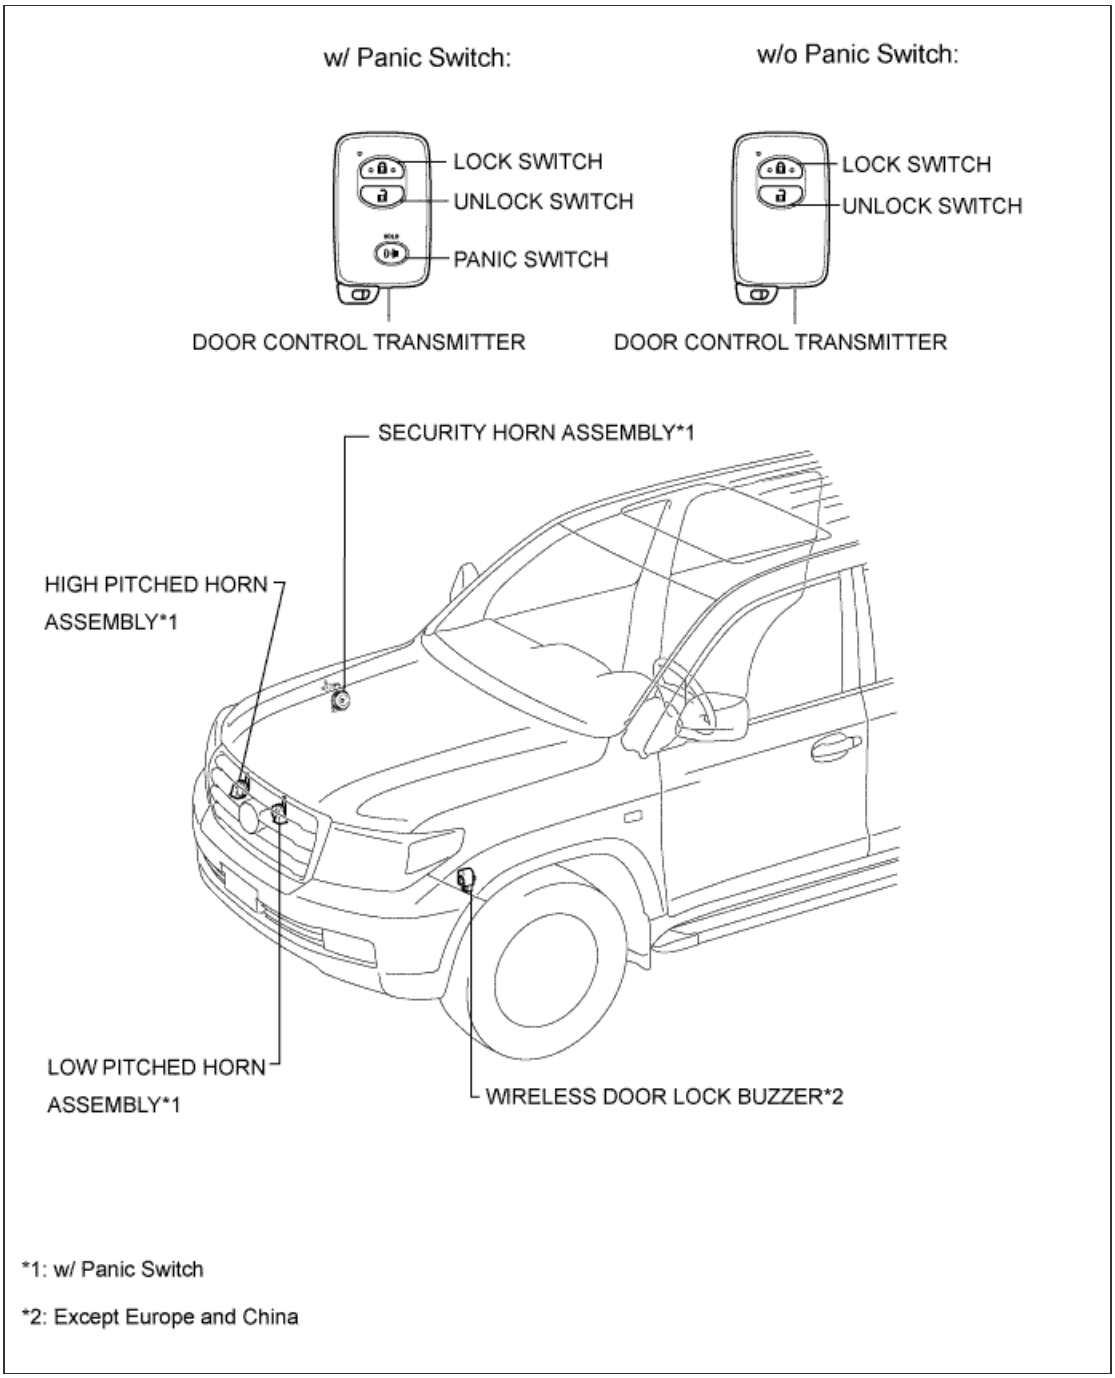


*1: w/ Panic Switch


*2: Except Europe and China

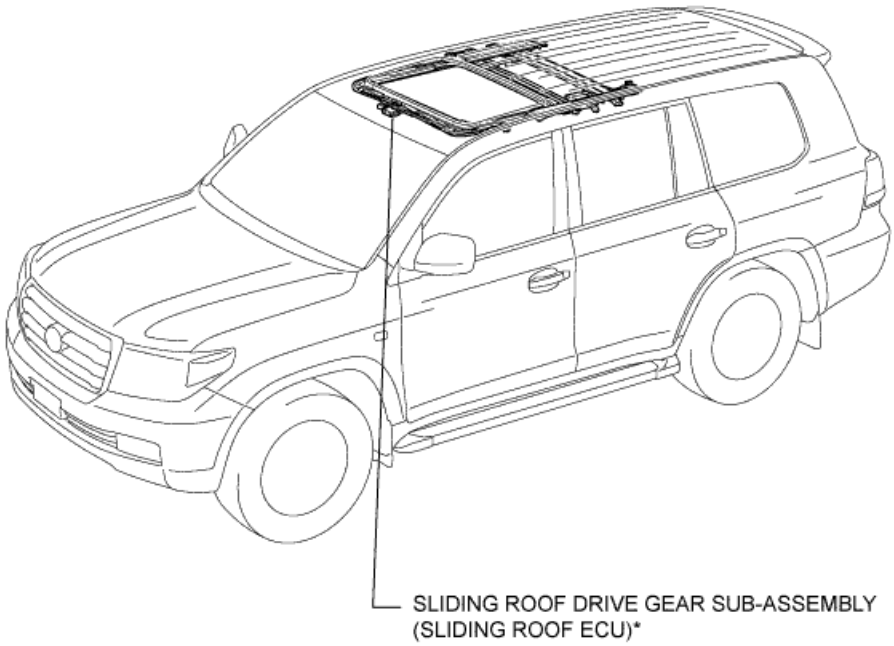

*: w/ Sliding Roof System

for Preparation Click here

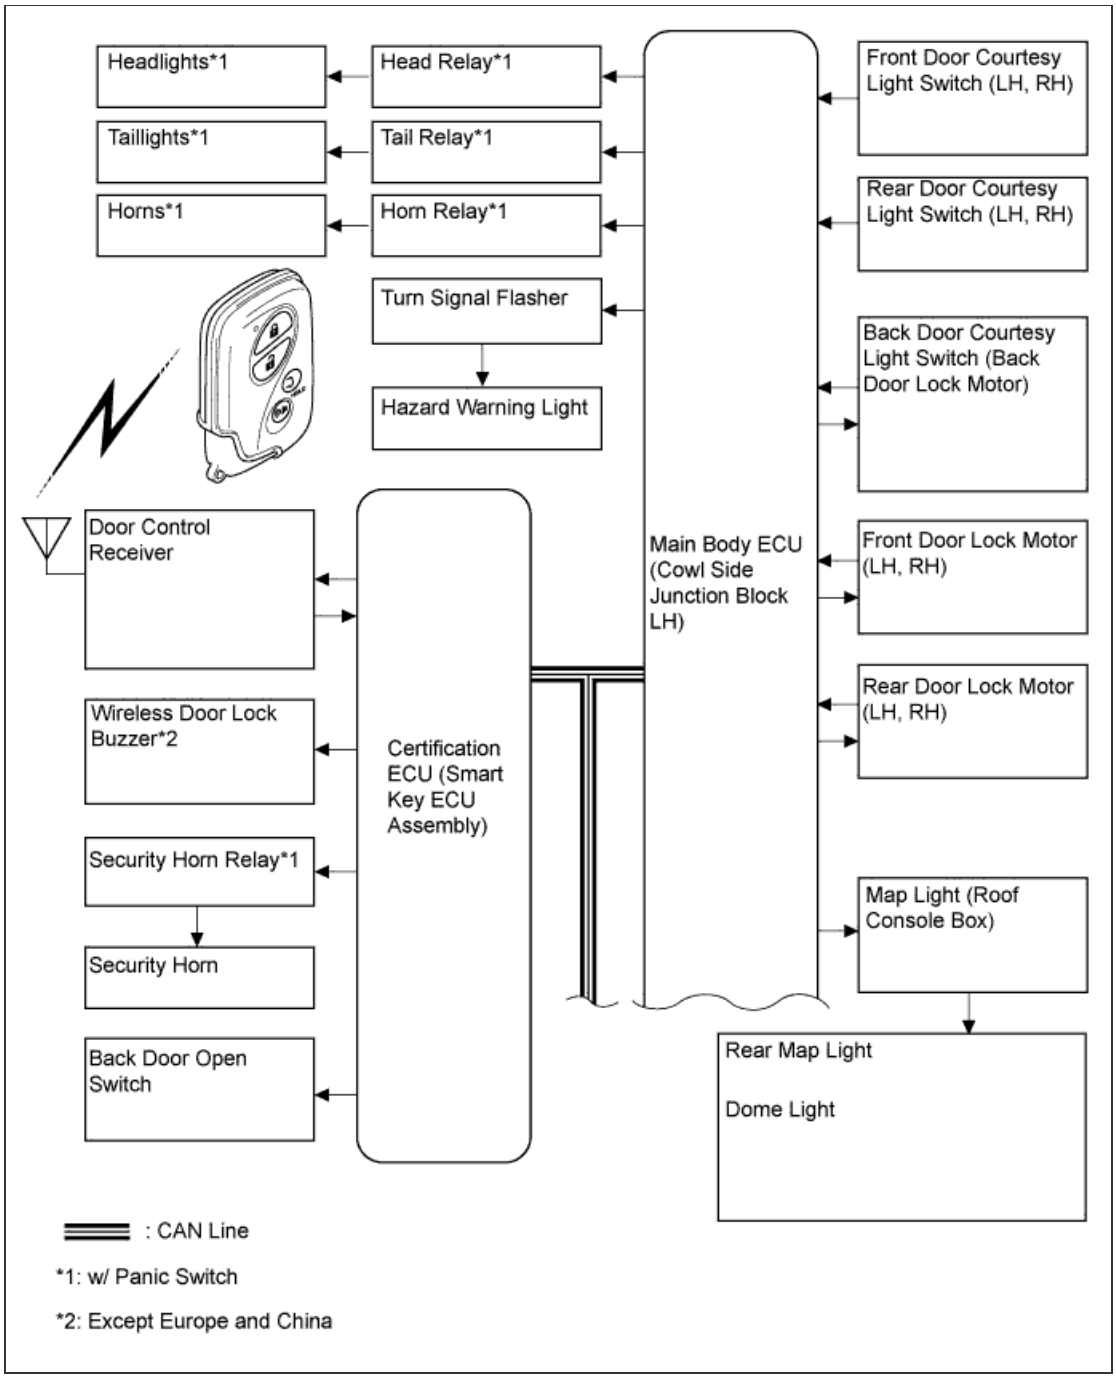

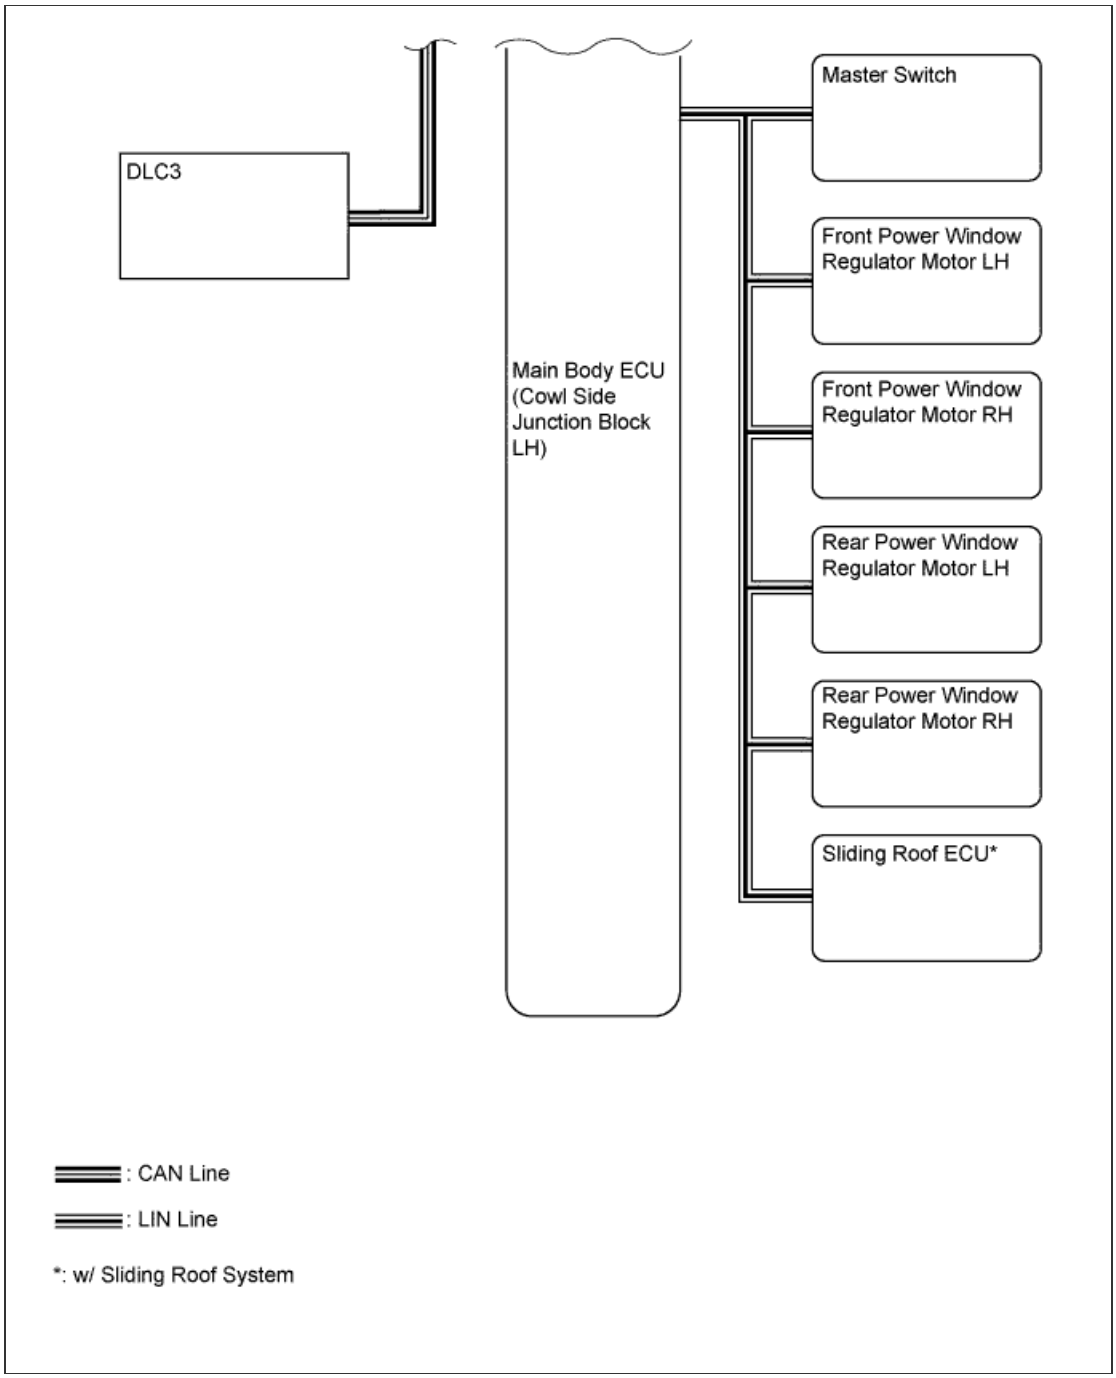

Communication table:

Sender	Receiver	Signal	Line
Certification ECU (smart key ECU assembly)	Main body ECU (Cowl side junction block LH)	• Door unlock standby control signal • Hazard answer back signal • Map light answer back signal	CAN
Main body ECU (Cowl side junction block LH)	Certification ECU (smart key ECU assembly)	• Door lock/unlock output request signal • Wireless door lock buzzer sound request signal • Door lock position signal	
Main body ECU (Cowl side junction block LH)	• Master switch • Front power window regulator motor LH • Front power window regulator motor RH • Rear power window regulator motor LH • Rear power window regulator motor RH	Wireless power window up signal	LIN
Main body ECU (Cowl side junction block LH)	Sliding roof ECU*	Wireless sliding roof open signal*	LIN

HINT:

*: w/ Sliding Roof System

for Preparation Click here

This system lock/unlocks the doors remotely. The wireless door lock control system has the following features:

- The certification ECU (smart key ECU assembly) performs the code identification process and the main body ECU (cowl side junction block LH) controls the door lock. A serial data link is provided for communication between the certification ECU (smart key ECU assembly) and main body ECU (cowl side junction block LH).
- A key-integrated type transmitter is used and it contains the following 3 switches: lock switch, unlock switch and panic switch*.

  HINT:

  *: w/ Panic Switch

- An LED is mounted on the transmitter to show if the battery is depleted.

FUNCTION OF MAIN COMPONENTS

Component	Function
Door control transmitter	• Contains lock, unlock, and panic switches*1. • Transmits weak electric waves (recognition codes and function codes) to door control receiver. • Illuminates indicator light (LED) during transmission.
Door control receiver	Receives weak electric waves (recognition codes and function codes) from door control transmitter via electrical key antenna and changes waves to code data.
Front door courtesy light switch Rear door courtesy light switch Back door courtesy light switch	Turns on when door is open and off when door is closed. Outputs door status (open or closed) to main body ECU (cowl side junction block LH).
Door lock position switch	Transmits door lock positions of each door to main body ECU (cowl side junction block LH).
Wireless door lock buzzer*2	Emits beep (answer-back) when doors are locked or unlocked by wireless operation
Certification ECU (smart key ECU assembly)	Matches code data with registered code and outputs code data to main body ECU (cowl side junction block LH).

HINT:

*1: w/ Panic Switch

*2: Except Europe and China

SYSTEM FUNCTION

a. The wireless door lock control system has the following functions:

Function	Outline
All door lock function	Pressing the lock switch locks all the doors and retracts the outer mirrors.
All door unlock function	Pressing unlock switch unlocks all the doors and returns the outer mirrors.
2-step unlock function*1	Pressing the unlock switch once unlocks only the driver side door and returns the outer mirrors. Pressing the unlock switch twice within 3 seconds unlocks all the doors.
Power window (and sliding roof*2) open function*7	After locking all the doors with the door control transmitter operation, pressing the unlock switch for 3 seconds or more opens all the power windows (and the sliding roof*2).
Power window (and sliding roof*2) close function*7	After locking all the doors with the door control transmitter operation, pressing the unlock switch for 3 seconds or more closes all the power windows (and the sliding roof*2).
Chattering prevention function	If a switch is pressed, the corresponding switch operation is performed once. If a switch is held down, the corresponding switch operation occurs only once and does not repeatedly activate. Lastly, when pressing a switch at 1 second intervals, the corresponding operation activates once for every press of

	the switch.
Answer-back function - Buzzer answer-back*3 - Hazard answer-back	• When the doors are locked, the turn signal lights flash once. When the doors are unlocked, the turn signal lights flash twice and the wireless warning buzzer sounds twice. • When the transmitter is used for opening the power windows and sliding roof, this function causes the buzzer to sound to indicate that the operation begins.
Automatic lock function	If no doors are opened within 30 seconds after they are unlocked by the door control transmitter, all the doors will lock again automatically.
Panic alarm function*4	Holding down the panic switch for more than 1 second sets off the theft deterrent alarm (the horn and security horn sounds, the hazard warning lights, headlights, and taillights flash, and the map light and spot light illuminate).
Fail-safe function	When the key is in the vehicle, the doors cannot be locked by the lock switch.
Illuminated entry function	• Pressing the unlock switch causes dome light (map light and rear map light), illumination and all the door unlock operation to occur simultaneously. • If the doors have not been opened, the dome light (map light and rear map light) turns off in approximately 15 seconds.
Door ajar warning function*5	If any door is open or ajar, pressing the lock switch will cause the wireless door lock buzzer to sound for about 10 seconds.
Memory call function*6	If the unlock switch of a memory call registered transmitter is pressed and the driver door is opened, the following parts move to the memory call position: front seat, front seat belt anchor, steering wheel and outer mirrors.
Transmitter recognition code registration function	Enables 7 modes for registering (writing and storing) transmitter recognition codes in the EEPROM.

HINT:

*1: This function can be enabled by changing the customize parameter.

*2: w/ Sliding Roof System

*3: Except Europe and China

*4: w/ Panic Switch

*5: Except China

*6: w/ Memory Call Function

*7: w/ Remote Function

for Preparation Click here

HINT:

- **The wireless door lock control system troubleshooting procedures are based on the premise that the following systems are operating normally. Check these systems first before troubleshooting the wireless door lock control system.**
  - **Power door lock control system**
  - **Power window control system**
  - **Sliding roof system**
- **Use these procedures to troubleshoot the wireless door lock control system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK FOR DTC*

a. Check for DTCs and note any codes that are output (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs (Click here). Based on the DTCs output above, try to force output of the same CAN communication system DTC, LIN communication system DTC or wireless door lock control system DTC by simulating the symptoms indicated by the DTC.

Result

Result	Proceed to
DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C
LIN communication system DTC is output	D
Wireless door lock control system DTC is output	E

B. Go to CAN COMMUNICATION SYSTEM (**Click here**)

C. Go to CAN COMMUNICATION SYSTEM (**Click here**)

D. Go to LIN COMMUNICATION SYSTEM (**Click here**)

E. Go to DIAGNOSTIC TROUBLE CODE CHART (**Click here**)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → Go to step 6

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Operation Check (Click here)

b. Terminals of ECU (Click here)

c. Data List / Active Test (Click here)

NEXT

6.REPAIR OR REPLACE

NEXT

7.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **The wireless door lock control system troubleshooting procedures are based on the premise that the following systems are operating normally. Check these systems first before troubleshooting the wireless door lock control system.**
  - **Power door lock control system**
  - **Power window control system**
  - **Sliding roof system**
- **Use these procedures to troubleshoot the wireless door lock control system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK FOR DTC*

a. Check for DTCs and note any codes that are output (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs (Click here). Based on the DTCs output above, try to force output of the same CAN communication system DTC, LIN communication system DTC or wireless door lock control system DTC by simulating the symptoms indicated by the DTC.

Result

Result	Proceed to
DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C
LIN communication system DTC is output	D
Wireless door lock control system DTC is output	E

B. Go to CAN COMMUNICATION SYSTEM (**Click here**)

C. Go to CAN COMMUNICATION SYSTEM (**Click here**)

D. Go to LIN COMMUNICATION SYSTEM (**Click here**)

E. Go to DIAGNOSTIC TROUBLE CODE CHART (**Click here**)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → Go to step 6

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Operation Check (Click here)

b. Terminals of ECU (Click here)

c. Data List / Active Test (Click here)

NEXT

6.REPAIR OR REPLACE

NEXT

7.CONFIRMATION TEST

NEXT

END

for Preparation Click here

NOTICES WHEN CHECKING

a. Wireless door lock/unlock function:
The wireless door lock control function operates only when the following 5 conditions are met:

- The engine switch is off.
- All the doors are closed.

HINT:

The unlock function operates even when one of the doors is open.

- There is no door control transmitter in the cabin.
- The power door lock system is functioning normally.
- The function is not disabled by customization.

b. The wireless transmitter operational area differs depending on the situation.

- The operational area differs depending on the user, the way the transmitter is held and the location.
- In certain areas, the operational area will be reduced due to the vehicle body shape and the influence of the surrounding environment.
- The transmitter's weak electric waves may be affected if the area has strong electric waves or noise. The transmitter operational area may be shortened or the transmitter may not function.
- When the battery weakens, the operational area is reduced or the transmitter may not function.

HINT:

The battery may weaken or other problems may occur if one of the following occurs: 1) it has had prolonged exposure to direct sunlight, such as on the instrument panel; or 2) it is placed within 1 m (3.28 ft) of electrical products, such as TVs, computers, cordless phones, cell phone recharger stands (with the cell phone recharging), etc.

CHECK WIRELESS DOOR LOCK CONTROL SYSTEM

HINT:

- **The switches described below transmit signals and are built into the door control transmitter.**
- **The transmitter operational area must be taken into account while checks are being made.**

a. Make sure the vehicle is in a condition in which the wireless door lock control functions can be operated (see previous step).

b. Check the basic functions:

- Check that the transmitter LED lights up 3 times when each switch is pressed 3 times.

HINT:

If the LED does not illuminate when the switch has been pressed 3 times or more, the battery may be depleted.

- Check that when the lock switch is pressed, all the doors lock and the outer mirrors retract.
- Check that when the unlock switch is pressed, all doors unlock and the outer mirrors return.
- When the transmitter is within 1 m (3.28 ft) of the driver seat, check that when the unlock switch is held down for 3 seconds or more, all the power windows and the sliding roof* open. Also check that the open operation stops when the switch is released.

HINT:

*: w/ Sliding Roof System

c. Check the chattering prevention function:

- If a switch is pressed, check that the corresponding operation is performed only once. If the switch is held down, check that the corresponding operation occurs only once and does not repeatedly activate. Lastly, if a switch is pressed at 1 second intervals, check that the corresponding operation activates once for every press of the switch.

d. Check the answer-back function:

- When the lock switch is pressed, check that the turn signal lights flash once, the wireless door lock buzzer sounds* once and all the doors lock.
- When the unlock switch is pressed, check that the turn signal lights flash twice, the wireless door lock buzzer sounds* twice and all the doors unlock.

HINT:

*: Except Europe and China

e. Check the automatic lock function:

- When all of the doors are unlocked with the unlock switch and none of the doors are opened or locked within 30 seconds*, check that the doors lock again.

HINT:

*: The automatic lock function time (30 seconds) applies only if the setting of this function is the default.

f. Check the panic alarm function (w/ Panic Switch):

- When the panic switch is held down for 1 second or more, check that the security horn and vehicle horn sound, the headlights, taillights, and turn signal lights flash, and the map light and spot light illuminate.

g. Check the switch operation fail-safe function:

- If the key is in the vehicle, check that the doors cannot be locked by the lock switch. However, this does not apply when the system is in the recognition code registration mode.

h. Check the illuminated entry function:

- When the map light DOOR switch is on and all the doors are locked, pressing the unlock switch causes the dome light (map light, rear map light) to illuminate and all doors to unlock simultaneously.
- If the doors have not been opened, the map light and dome light turn off in approximately 15 seconds.

i. Check the door ajar warning function (Except China):

- If a door is open or not completely closed, check that the doors cannot be locked by the lock switch and the buzzer sounds for 10 seconds.

HINT:

The buzzer stops sounding if either of the following conditions is met:

- **The buzzer has sounded for 10 seconds.**
- **The engine switch is on (ACC or IG).**
- **All the doors are closed.**

j. Check the memory call function (Click here).

for Preparation Click here

NOTICES WHEN CHECKING

a. Wireless door lock/unlock function:
The wireless door lock control function operates only when the following 5 conditions are met:

- The engine switch is off.
- All the doors are closed.

HINT:

The unlock function operates even when one of the doors is open.

- There is no door control transmitter in the cabin.
- The power door lock system is functioning normally.
- The function is not disabled by customization.

b. The wireless transmitter operational area differs depending on the situation.

- The operational area differs depending on the user, the way the transmitter is held and the location.
- In certain areas, the operational area will be reduced due to the vehicle body shape and the influence of the surrounding environment.
- The transmitter's weak electric waves may be affected if the area has strong electric waves or noise. The transmitter operational area may be shortened or the transmitter may not function.
- When the battery weakens, the operational area is reduced or the transmitter may not function.

HINT:

The battery may weaken or other problems may occur if one of the following occurs: 1) it has had prolonged exposure to direct sunlight, such as on the instrument panel; or 2) it is placed within 1 m (3.28 ft) of electrical products, such as TVs, computers, cordless phones, cell phone recharger stands (with the cell phone recharging), etc.

CHECK WIRELESS DOOR LOCK CONTROL SYSTEM

HINT:

- **The switches described below transmit signals and are built into the door control transmitter.**
- **The transmitter operational area must be taken into account while checks are being made.**

a. Make sure the vehicle is in a condition in which the wireless door lock control functions can be operated (see previous step).

b. Check the basic functions:

- Check that the transmitter LED lights up 3 times when each switch is pressed 3 times.

HINT:

If the LED does not illuminate when the switch has been pressed 3 times or more, the battery may be depleted.

- Check that when the lock switch is pressed, all the doors lock and the outer mirrors retract.
- Check that when the unlock switch is pressed, all doors unlock and the outer mirrors return.
- When the transmitter is within 1 m (3.28 ft) of the driver seat, check that when the unlock switch is held down for 3 seconds or more, all the power windows and the sliding roof* open. Also check that the open operation stops when the switch is released.

HINT:

*: w/ Sliding Roof System

c. Check the chattering prevention function:

- If a switch is pressed, check that the corresponding operation is performed only once. If the switch is held down, check that the corresponding operation occurs only once and does not repeatedly activate. Lastly, if a switch is pressed at 1 second intervals, check that the corresponding operation activates once for every press of the switch.

d. Check the answer-back function:

- When the lock switch is pressed, check that the turn signal lights flash once, the wireless door lock buzzer sounds* once and all the doors lock.
- When the unlock switch is pressed, check that the turn signal lights flash twice, the wireless door lock buzzer sounds* twice and all the doors unlock.

HINT:

*: Except Europe and China

e. Check the automatic lock function:

- When all of the doors are unlocked with the unlock switch and none of the doors are opened or locked within 30 seconds*, check that the doors lock again.

HINT:

*: The automatic lock function time (30 seconds) applies only if the setting of this function is the default.

f. Check the panic alarm function (w/ Panic Switch):

- When the panic switch is held down for 1 second or more, check that the security horn and vehicle horn sound, the headlights, taillights, and turn signal lights flash, and the map light and spot light illuminate.

g. Check the switch operation fail-safe function:

- If the key is in the vehicle, check that the doors cannot be locked by the lock switch. However, this does not apply when the system is in the recognition code registration mode.

h. Check the illuminated entry function:

- When the map light DOOR switch is on and all the doors are locked, pressing the unlock switch causes the dome light (map light, rear map light) to illuminate and all doors to unlock simultaneously.
- If the doors have not been opened, the map light and dome light turn off in approximately 15 seconds.

i. Check the door ajar warning function (Except China):

- If a door is open or not completely closed, check that the doors cannot be locked by the lock switch and the buzzer sounds for 10 seconds.

HINT:

The buzzer stops sounding if either of the following conditions is met:

- **The buzzer has sounded for 10 seconds.**
- **The engine switch is on (ACC or IG).**
- **All the doors are closed.**

j. Check the memory call function (Click here).

for Preparation Click here

CUSTOMIZING FUNCTION WITH INTELLIGENT TESTER (REFERENCE)

NOTICE:

- **When the customer requests a change in a function, first make sure that the function can be customized.**
- **Be sure to make a note of the current settings before customizing.**
- **When troubleshooting a function, first make sure that the function is set to the default setting.**

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Customize Setting.

e. Select the setting by referring to the table below.

Wireless Door Lock

Display	Default	Contents	Setting
Hazard Answer Back	ON	When the lock switch on the transmitter is pressed, this function illuminates the hazard warning lights once. When the unlock switch is pressed, the hazard warning lights illuminate twice.	ON/OFF
Wireless Control	ON	Function that turns the wireless door lock function ON or OFF.	ON/OFF
Open Door Warning*1	ON	If a door is not completely closed and the transmitter lock switch is pressed, this function makes the buzzer sound for 10 seconds.	ON/OFF
Panic Alarm Function*2	ON	Function to operate the theft deterrent system by continuously pressing the panic switch on transmitter for 2.5 seconds.	ON/OFF
Unlock 2 Operation	OFF	Function that unlocks the driver side door when the unlock switch on the transmitter is pressed once, and unlocks all doors when the switch is pressed twice. If the setting is OFF, pressing the unlock switch once makes all the doors unlock.	ON/OFF
Auto Lock Time	30 s	Function to change the time until relocking after unlocking with the wireless door lock function.	30 s/60 s/120 s
Wireless Auto Lock	ON	Function to control the automatic relocking of doors after unlocking with the wireless door lock function.	ON/OFF
Wireless Buzzer Resp	ON*3	Wireless buzzer response function.	ON/OFF
Wireless Buzzer Volume	Level 7	This function changes the wireless buzzer volume.	Level 0/Level 1/Level 2/Level 3/Level 4/Level 5/Level6/Level 7

HINT:

*1: Except China

*2: w/ Panic Switch

*3: Except Europe and China

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Wireless Door Lock Control System:

Symptom	Suspected Area	See page
Wireless control function and entry function do not operate	Proceed to "All Door Entry Lock / Unlock Functions and Wireless Functions do not Operate"	Click here
Wireless control function does not operate but entry function operates	Replace electrical key transmitter	-
Answer-back function does not operate	Proceed to "No Answer-Back"	Click here
Automatic lock function only does not operate	Perform operation check	Click here
	Lighting system (door courtesy light switch)	Click here
Illuminated entry function only does not operate	Perform operation check	Click here
	Lighting system (door courtesy light switch)	Click here
Door ajar warning function only does not operate*1	Perform operation check	Click here
	Lighting system (door courtesy light switch)	Click here
	Meter/gauge system	Click here
Panic alarm function only does not operate*2	Perform operation check	Click here
	Theft deterrent system	Click here
Memory call function only does not operate*3	Perform operation check	Click here
	Front power seat control system	Click here
	Power tilt and power telescopic steering column system	Click here
	Power mirror control system	Click here
Power window open/close function only does not operate	Perform operation check	Click here
	Power window control system	Click here
Sliding roof open/close function only does not operate*4	Perform operation check	Click here
	Sliding roof system	Click here

HINT:

*1: Except China

*2: w/ Panic Switch

*3: w/ Memory Call Function

*4: w/ Sliding Roof System

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Wireless Door Lock Control System:

Symptom	Suspected Area	See page
Wireless control function and entry function do not operate	Proceed to "All Door Entry Lock / Unlock Functions and Wireless Functions do not Operate"	Click here
Wireless control function does not operate but entry function operates	Replace electrical key transmitter	-
Answer-back function does not operate	Proceed to "No Answer-Back"	Click here
Automatic lock function only does not operate	Perform operation check	Click here
	Lighting system (door courtesy light switch)	Click here
Illuminated entry function only does not operate	Perform operation check	Click here
	Lighting system (door courtesy light switch)	Click here
Door ajar warning function only does not operate*1	Perform operation check	Click here
	Lighting system (door courtesy light switch)	Click here
	Meter/gauge system	Click here
Panic alarm function only does not operate*2	Perform operation check	Click here
	Theft deterrent system	Click here
Memory call function only does not operate*3	Perform operation check	Click here
	Front power seat control system	Click here
	Power tilt and power telescopic steering column system	Click here
	Power mirror control system	Click here
Power window open/close function only does not operate	Perform operation check	Click here
	Power window control system	Click here
Sliding roof open/close function only does not operate*4	Perform operation check	Click here
	Sliding roof system	Click here

HINT:

*1: Except China


*2: w/ Panic Switch

*3: w/ Memory Call Function

*4: w/ Sliding Roof System

for Preparation Click here

CHECK MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

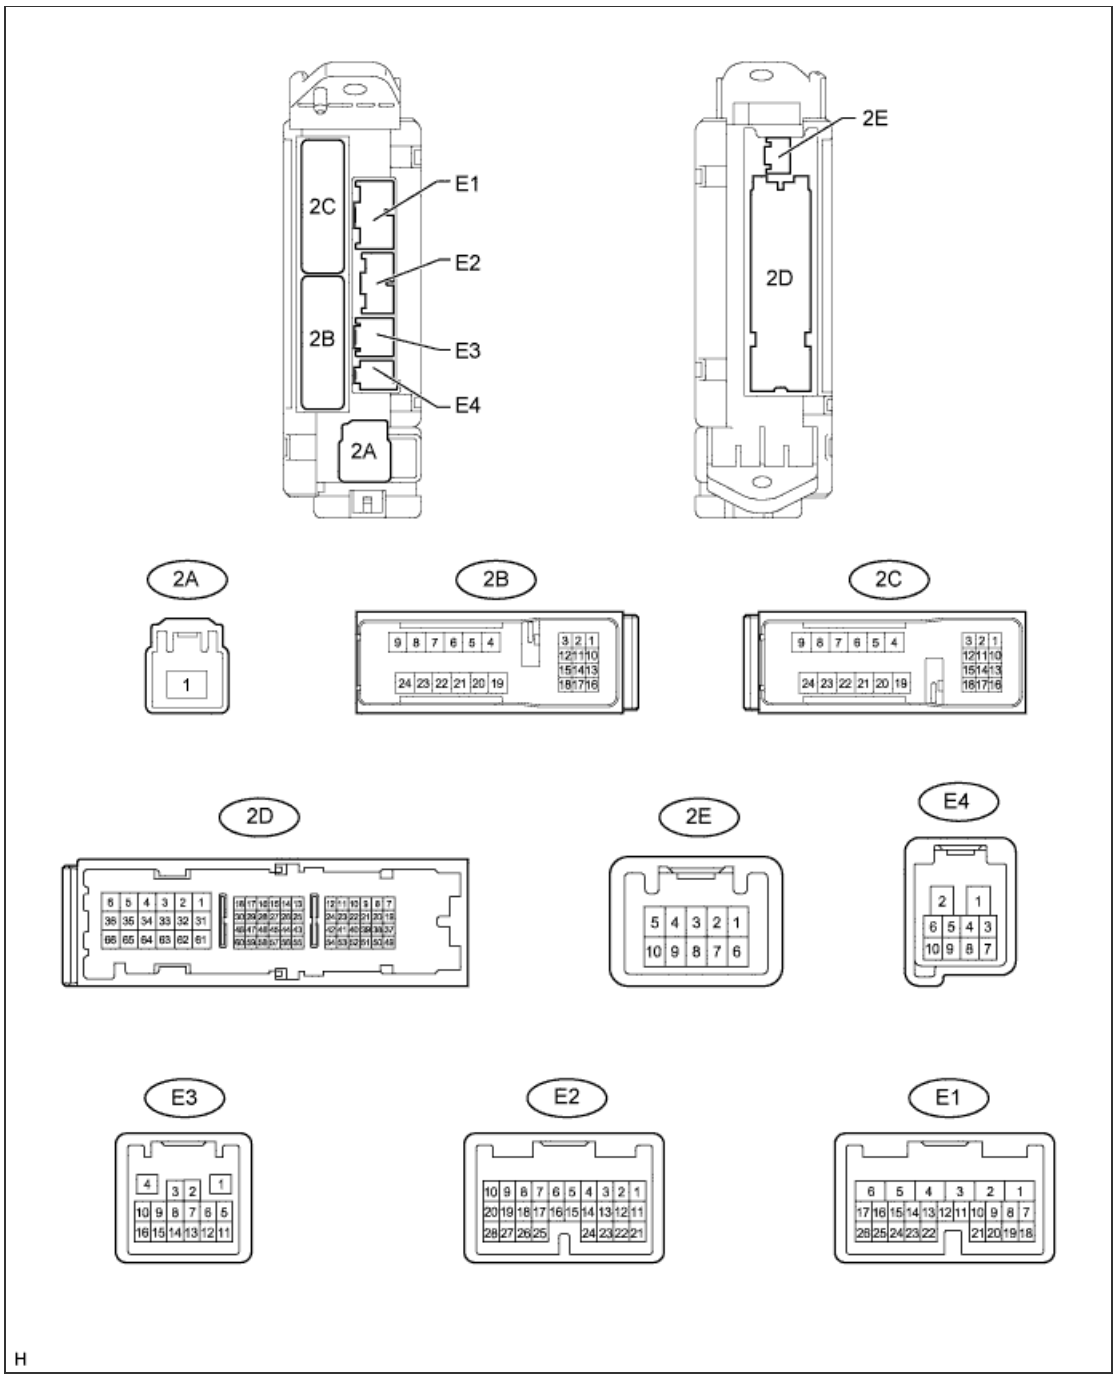

a. Disconnect the 2A, 2D and E3 ECU connectors.

b. Measure the resistance and voltage according to value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
2D-62 (GND2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E3-1 (GND3) - Body ground	BR - Body ground	Ground	Always	Below 1 Ω
2A-1 (ACC) - 2D-62 (GND2)	GR - W-B	ACC power supply	Engine switch on (ACC)	11 to 14 V
2A-1 (IG) - 2D-62 (GND2)	B - W-B	IG power supply	Engine switch on (IG)	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the 2A, 2D and E3 ECU connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E1-24 (DCTY) - Body ground	L - Body ground	Driver side door courtesy light switch input	Driver side door open	Below 1 Ω
			Driver side door closed	10 kΩ or higher
E2-21 (PCTY) - Body ground	Y - Body ground	Passenger side door courtesy light switch input	Passenger side door open	Below 1 Ω
			Passenger side door closed	10 kΩ or higher
2C-2 (LCTY) - Body ground	W - Body ground	Rear side door LH courtesy light switch input	Rear side door LH open	Below 1 Ω
			Rear side door LH closed	10 kΩ or higher
E2-7 (RCTY) - Body ground	G - Body ground	Rear side door RH courtesy light switch input	Rear side door RH open	Below 1 Ω
			Rear side door RH closed	10 kΩ or higher
E2-25 (BCTY) - Body ground	w - Body ground	Back door courtesy light switch input	Back door open	Below 1 Ω
			Back door closed	10 kΩ or higher
E3-4 (HAZ) - Body ground	O - Body ground	Turn signal light drive	Hazard warning signal switch on	Pulse generation
			Hazard warning signal switch off	Below 1 V
2B-16 (DIM) - 2D-62 (GND2)*	R-G - W-B	Headlight low drive	Headlight dimmer switch low	11 to 14 V
2B-18 (HRLY) - 2D-62 (GND2)*	L - W-B	Headlight (high) drive	Headlight dimmer switch high	11 to 14 V
2A-1 (TRLY) - 2D-62 (GND2)*	B - W-B	Taillight drive	Headlight dimmer switch tail	11 to 14 V

HINT:


*: w/ Panic Switch

If the result is not as specified, the ECU may have a malfunction.

e. Using an oscilloscope, check waveform 1.

Waveform 1 (Reference)


Item	Content
Terminal No. (Symbol)	E1-24 (DCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and driver side door courtesy switch off

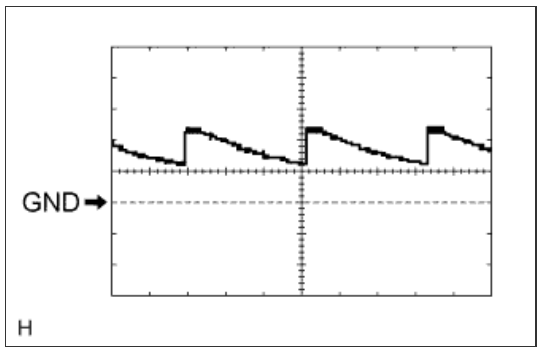

f. Using an oscilloscope, check waveform 2.

Waveform 2 (Reference)


Item	Content
Terminal No. (Symbol)	E1-24 (DCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and driver side door courtesy switch off

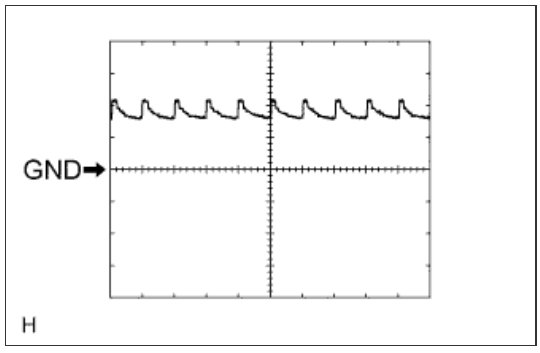

g. Using an oscilloscope, check waveform 3.

Waveform 3 (Reference)


Item	Content
Terminal No. (Symbol)	E2-21 (PCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and passenger side door courtesy switch off

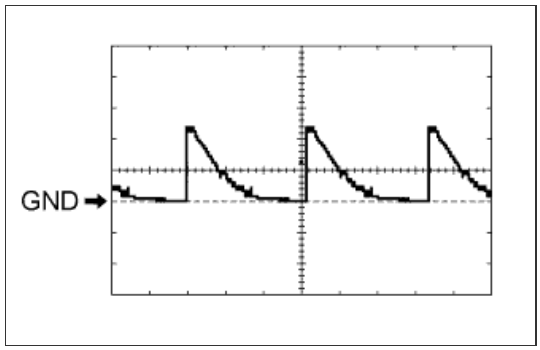

h. Using an oscilloscope, check waveform 4.

Waveform 4 (Reference)


Item	Content
Terminal No. (Symbol)	E2-21 (PCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and passenger side door courtesy switch off

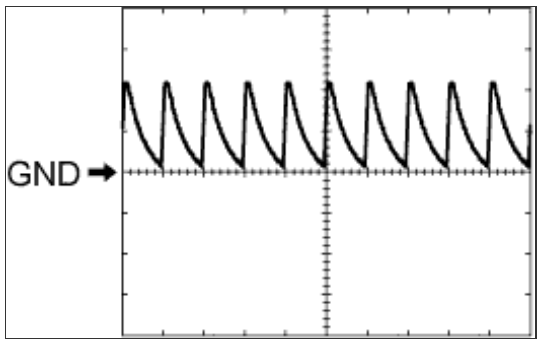

i. Using an oscilloscope, check waveform 5.

Waveform 5 (Reference)


Item	Content
Terminal No. (Symbol)	2C-2 (LCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear LH side door courtesy switch off

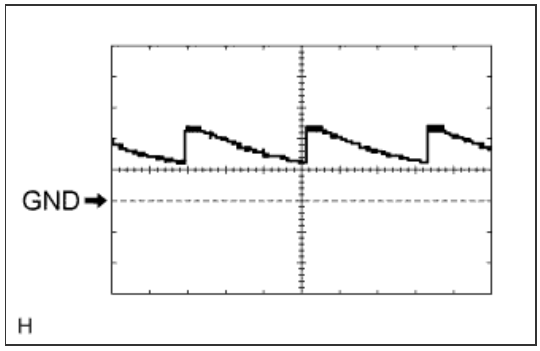

j. Using an oscilloscope, check waveform 6.

Waveform 6 (Reference)


Item	Content
Terminal No. (Symbol)	2C-2 (LCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear LH side door courtesy switch off

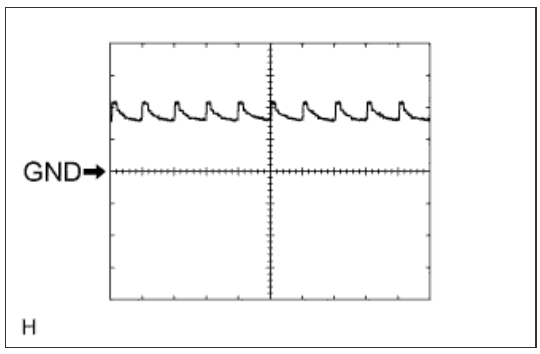

k. Using an oscilloscope, check waveform 7.

Waveform 7 (Reference)


Item	Content
Terminal No. (Symbol)	E2-7 (RCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear RH side door courtesy switch off

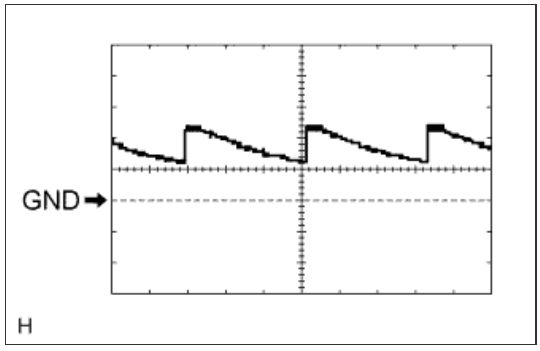

l. Using an oscilloscope, check waveform 8.

Waveform 8 (Reference)


Item	Content
Terminal No. (Symbol)	E2-7 (RCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear RH side door courtesy switch off

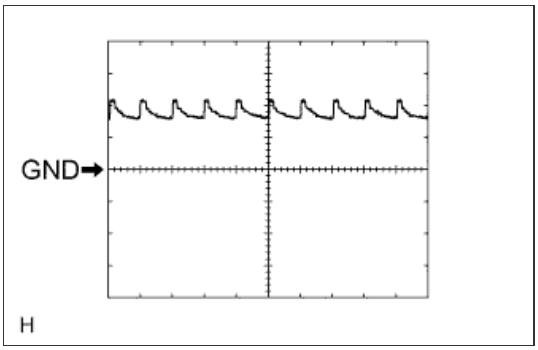

m. Using an oscilloscope, check waveform 9.

Waveform 9 (Reference)


Item	Content
Terminal No. (Symbol)	E2-25 (BCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and Back door closed

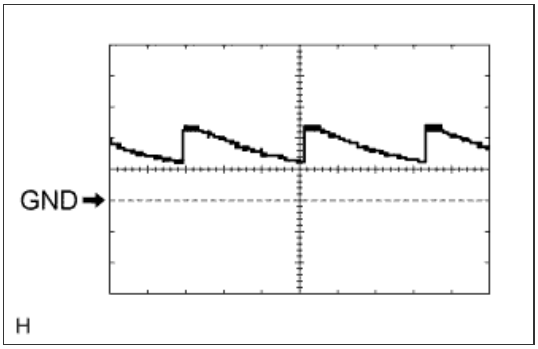


n. Using an oscilloscope, check waveform 10.

Waveform 10 (Reference)

Item	Content
Terminal No. (Symbol)	E2-25 (BCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and Back door closed

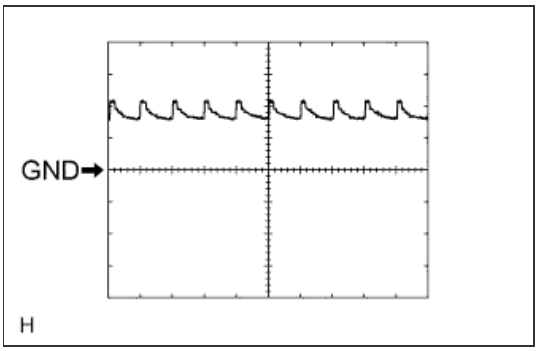

CHECK CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

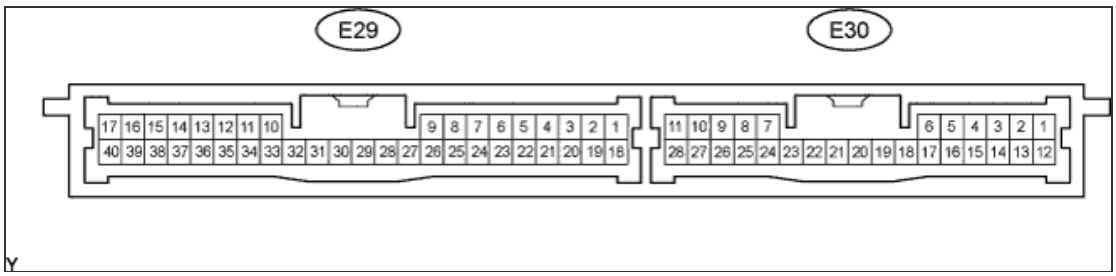

a. Disconnect the E29 and E30 ECU connectors.

b. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29-17 (E) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E29-1 (+B1) - L15-17 (E)	B - W-B	Battery power supply	Always	11 to 14 V
E29-18 (IG) - L15-17 (E)	B - W-B	IG power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E29 and E30 ECU connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition


E29-39 (RSSI) - L29-17 (E)	L - W-B	Door control receiver electric wave existence signal	Engine switch off, all doors closed and transmitter switch not pressed → pressed	11 to 14 V → Below 1 V
E29-38 (RDA) - L15-17 (E)	LG - W-B	Door control receiver data input signal	Engine switch off, all doors closed and transmitter switch not pressed → pressed	Below 1 V → 11 to 14 V → Below 1 V
E29-29 (RCO) - L15-17 (E)	B - W-B	Door control receiver power source	Engine switch off, all doors closed and transmitter switch not pressed → pressed	Below 1 V → 4.6 to 5.4 V → Below 1 V
E29-21 (BZR) - Body ground*	LG - Body ground	Wireless door lock buzzer output	Wireless door lock buzzer ON	11 to 14 V
E29-21 (BZR) - Body ground*	LG - Body ground	Wireless door lock buzzer output	Wireless door lock buzzer OFF	Below 1 V

HINT:

*: Except Europe and China

If the result is not as specified, the ECU may have a malfunction.

CHECK DOOR CONTROL RECEIVER

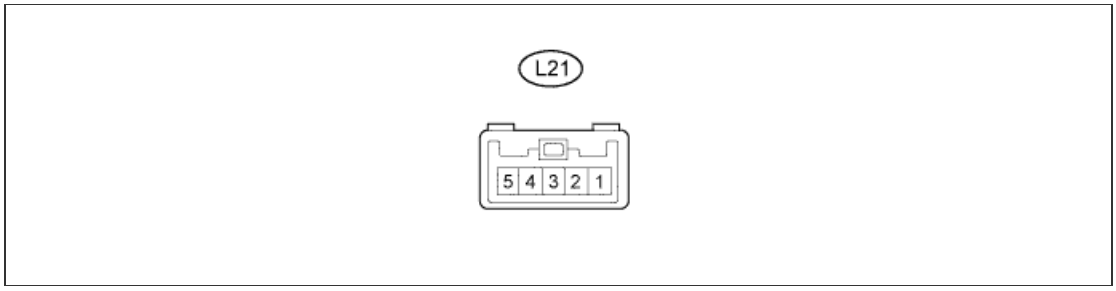

a. Disconnect the L21 receiver connector.

b. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
L21-1 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
L21-4 (+5) - Body ground	B - Body ground	Battery power supply	Always	4.6 to 5.4 V

If the result is not as specified, there may be a malfunction on the wire harness side.

for Preparation Click here

CHECK DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / Trouble Codes.

e. Read the DTCs.

CLEAR DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / Trouble Codes.

e. Clear the DTCs.

for Preparation Click here

READ DATA LIST

HINT:

Using the intelligent tester to read the Data List allows values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. According to the display on the intelligent tester, read the Data List.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D Door Courtesy SW	Driver side door courtesy switch signal / ON or OFF	ON: Driver side door is open OFF: Driver side door is closed	-
P Door Courtesy SW	Passenger side door courtesy switch signal / ON or OFF	ON: Passenger side door is open OFF: Passenger side door is closed	-
RL Door Courtesy SW	Rear door courtesy switch LH signal / ON or OFF	ON: Rear side door LH is open OFF: Rear side door LH is closed	-
RR Door Courtesy SW	Rear door courtesy switch RH signal / ON or OFF	ON: Rear side door RH is open OFF: Rear side door RH is closed	-
Back Door Courtesy SW	Back door courtesy switch signal / ON or OFF	ON: Back door is open OFF: Back door is closed	-
D Lock Pos switch	Driver side door lock position switch signal / ON or OFF	ON: Driver side door lock is unlocked OFF: Driver side door lock is locked	-
P Lock Pos switch	Passenger side door lock position switch signal / ON or OFF	ON: Passenger side door is unlocked OFF: Passenger side door is locked	-
RL Lock Pos switch	Rear door LH lock position switch signal / ON or OFF	ON: Rear side door LH is unlocked OFF: Rear side door LH is locked	-
RR Lock Pos switch	Rear door RH lock position switch signal / ON or OFF	ON: Rear side door RH is unlocked OFF: Rear side door RH is locked	-
Back Lock Pos switch	Back door lock position switch signal / ON or OFF	ON: Back door is unlocked OFF: Back door is locked	-

ACTIVE TEST

HINT:

Using the intelligent tester to perform Active Tests allows relays, VSVs, actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. Performing Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Active Test.

e. According to the display on the intelligent tester, perform the Active Test.

Main Body

Tester Display	Test Part	Control Range	Diagnostic Note
Hazard	Turn signal flasher relay	ON or OFF	-
Door Lock	All door lock motors	OFF or LOCK	-
D-Door Unlock	Driver side door unlock motor	OFF or UNLOCK	-

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Wireless Door Lock Control System

DTC Code	Detection Item	Trouble Area	See page
B1242	Wireless Door Lock Tuner Circuit Malfunction	- Harness or connector - Door control receiver - Certification ECU (smart key ECU assembly)	Click here

DTC B1242 Wireless Door Lock Tuner Circuit Malfunction

for Preparation Click here

DESCRIPTION


The door lock receiver is used to receive electrical waves relating to the entry functions of the entry and start system (for Entry Function). The certification ECU (smart key ECU assembly) decodes the requested smart key system (for Entry Function) operation by identifying a key code based on the electric waves received via the door control receiver. The door control receiver receives a signal from the door control transmitter and sends signals to the main body ECU through the certification ECU (smart key ECU assembly). The certification ECU (smart key ECU assembly) then sends a command, according to the requested operation, to each ECU (ex. if door lock operation is requested, the certification ECU (smart key ECU assembly) sends a door lock command to the main body ECU).
This DTC is output when one of the following occurs: 1) a short in RDA or RSSI to ground between the certification ECU and the door control receiver, or 2) a short in RDA or RSSI to ground when RCO (5 V) output from the ECU is off.

NOTICE:

- **When replacing or inspecting the door control receiver and wire harness, do not change the position or length of the wire harness. If the wire harness is too close to the door control receiver, entry and wireless function performance may be affected.**
- **Before performing the inspection, check that there are no problems related to the CAN communication system and LIN communication system.**
- **When using the intelligent tester with the engine switch off to troubleshoot: Connect the intelligent tester to the vehicle, and turn the front door courtesy light switch LH on and off at 1.5 second intervals until communication between the intelligent tester and vehicle begins.**

DTC Code	DTC Detection Condition	Trouble Area
B1242	One of following conditions is met: • Short in RDA or RSSI to ground between the certification ECU (smart key ECU assembly) and the door control receiver. • Short in RDA or RSSI to ground when RCO (5 V) output from the ECU is off.	• Harness or connector • Door control receiver • Certification ECU (smart key ECU assembly)

WIRING DIAGRAM

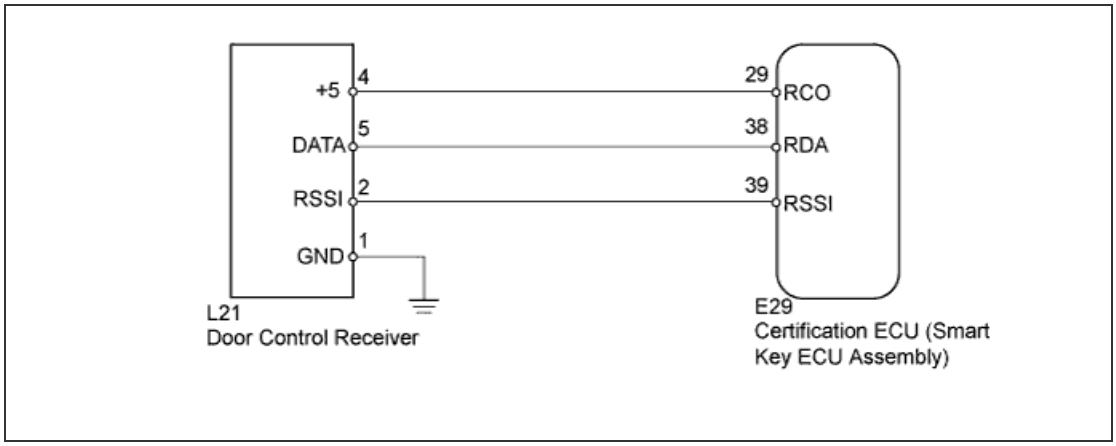

INSPECTION PROCEDURE

1.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU - DOOR CONTROL RECEIVER)

a. Disconnect the E29 ECU connector.

b. Disconnect the L21 receiver connector.


c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition

E29-39 (RSSI) - L21-2 (RSSI)	Always	Below 1 Ω
E29-38 (RDA) - L21-5 (DATA)		
E29-29 (RCO) - L21-4 (+5)		
E29-17 (E) - Body ground		
L21-1 (GND) - Body ground		
E29-39 (RSSI) or L21-2 (RSSI) - Body ground	Always	10 kΩ or higher
E29-38 (RDA) or L21-5 (DATA) - Body ground		
E29-29 (RCO) or L21-4 (+5) - Body ground		

Front view of harness side connector:
(to Door Control Receiver)

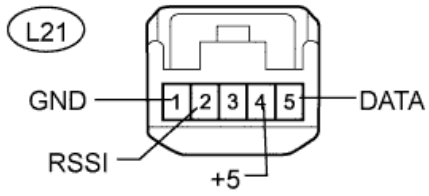

Front view of harness side connector:
(to Certification ECU)

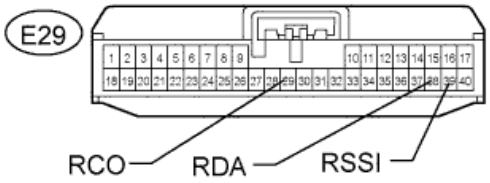

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2.CHECK CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

a. Disconnect the L21 receiver connector.


b. Reconnect the E29 ECU connector.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
L21-4 (+5) - Body ground	Always	4.5 to 5.4 V

Front view of harness side connector:
(to Door Control Receiver)

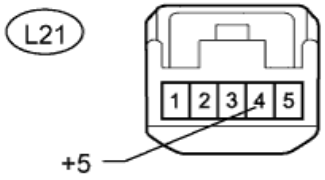

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

3.REPLACE DOOR CONTROL RECEIVER

a. Temporarily replace the door control receiver with a new one (Click here).

NEXT

4.CHECK FOR DTC

a. Clear the DTC (Click here).

b. Recheck for DTC (Click here).

OK:

DTC B1242 is not output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (DOOR CONTROL RECEIVER IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

In some cases, wireless door lock control functions are normal but the turn signal lights and wireless door lock buzzer are not. Malfunctions may be present in the main body ECU, certification ECU (smart key ECU assembly), turn signal lights, and/or wireless door lock buzzer signal outputs.*


NOTICE:

- **Before performing the inspection, check that there are no problems related to the CAN communication system and LIN communication system.**
- **When troubleshooting a function, first make sure that the answer-back function is set to the default setting.**
- **Check that DTC B1242 is not output.**
- **When troubleshooting a function, first make sure that the open door warning function is set to the default setting.**

HINT:

*: For Europe and China, there is no buzzer sound answer-back function.

WIRING DIAGRAM

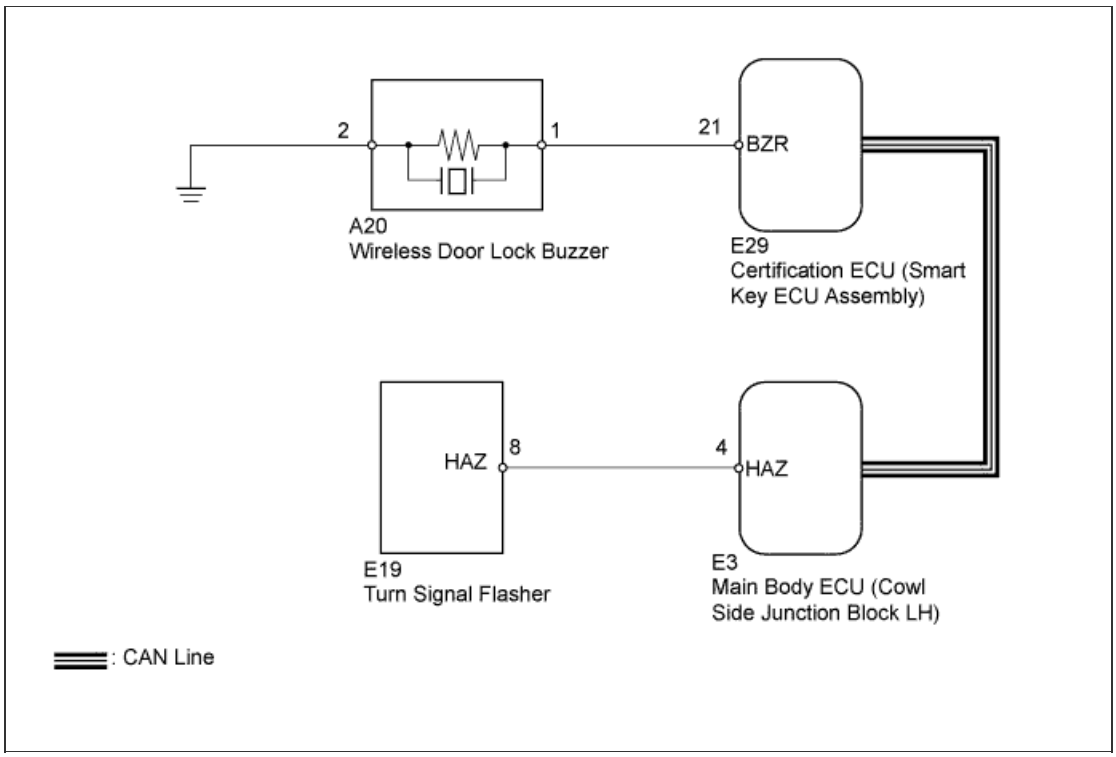

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item / Range	Normal Condition	Diagnostic Note
D Lock Pos switch	Driver side door lock position switch signal / ON or OFF	ON: Driver side door lock is unlocked OFF: Driver side door lock is locked	-

P Lock Pos switch	Passenger side door lock position switch signal / ON or OFF	ON: Passenger side door is unlocked OFF: Passenger side door is locked	-
RL Lock Pos switch	Rear door LH lock position switch signal / ON or OFF	ON: Rear side door LH is unlocked OFF: Rear side door LH is locked	-
RR Lock Pos switch	Rear door RH lock position switch signal / ON or OFF	ON: Rear side door RH is unlocked OFF: Rear side door RH is locked	-
Back Lock Pos switch	Back door lock position switch signal / ON or OFF	ON: Back door is unlocked OFF: Back door is locked	-

OK:

On the intelligent tester screen, the display changes between LOCK and UNLOCK as shown in the chart above.

HINT:

- **Go to POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Driver Door LOCK/UNLOCK Functions do not Operate) (Click here).**
- **Go to POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Passenger Door LOCK/UNLOCK Functions do not Operate) (Click here).**
- **Go to POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door LH LOCK/UNLOCK Functions do not Operate) (Click here).**
- **Go to POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door RH LOCK/UNLOCK Functions do not Operate) (Click here).**
- **Go to POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Back Door LOCK/UNLOCK Functions do not Operate) (Click here).**

NG → **Go to POWER DOOR LOCK CONTROL SYSTEM**

OK

2.CHECK WIRELESS DOOR LOCK FUNCTION

a. Check that the wireless door lock control functions operate with a transmitter (Click here).

Result

Result	Proceed to
Wireless door lock control functions operate normally but turn signal light answer-back does not occur	A
Wireless door lock control functions operate normally but wireless door lock buzzer answer-back does not occur	B

B → **Go to step 4**

A

3.CHECK HAZARD WARNING LIGHT

a. Check that the turn signal lights flash continuously when the hazard warning signal switch is pressed (Click here).

OK:

Hazard warning lights flash continuously.

NG → **Go to PROBLEM SYMPTOMS TABLE (LIGHTING SYSTEM) (Click here)**

OK

REPLACE MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

4.CHECK HARNESS AND CONNECTOR (WIRELESS DOOR LOCK BUZZER - CERTIFICATION ECU AND BODY GROUND)

a. Disconnect the E29 ECU connector.


b. Disconnect the A20 buzzer connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
A20-1 - E29-21 (BZR)	Always	Below 1 Ω
A20-2 - Body ground		
A20-1 - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Wireless Door Lock Buzzer)

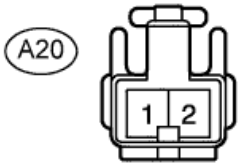

Front view of wire harness connector:
(to Certification ECU)

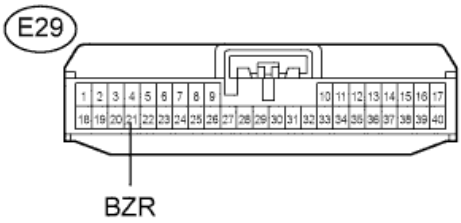

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

5.CHECK WIRELESS DOOR LOCK BUZZER (OPERATION)

a. Temporarily replace the wireless door lock buzzer with a new one (Click here).

b. Check that the wireless door lock buzzer sounds by using the transmitter lock/unlock switch.

OK:
Wireless door lock buzzer sounds.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (WIRELESS DOOR LOCK BUZZER IS DEFECTIVE)

for Preparation Click here

1. REMOVE TRANSMITTER BATTERY


NOTICE:

Take extra care when handling these precision electronic components.

HINT:

- **Type A: for Australia.**
- **Type B: except Australia.**


a. Push the release hook knob and extract the emergency key.

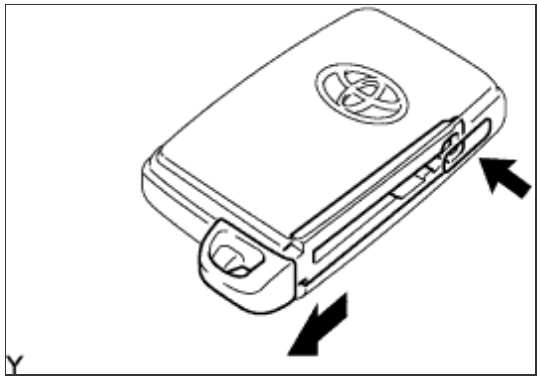

b. Insert a precision screwdriver into the gap, and turn the screwdriver to detach the transmitter housing cover.

HINT:


Tape the screwdriver tip before use.

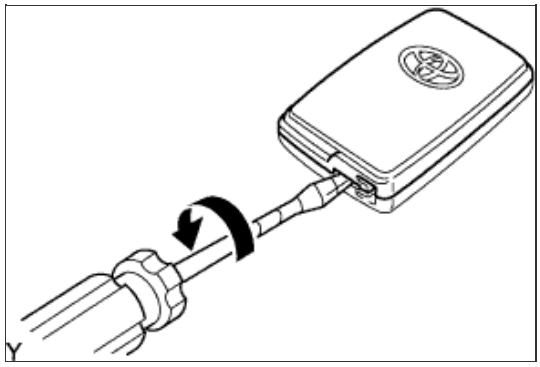

c. Remove the battery (lithium battery: CR1632).

NOTICE:

- **Do not push the terminals with your finger.**
- **Do not forcibly pry up the battery. The terminals may be damaged.**
- **Do not touch the battery with wet hands. Water may cause rust.**
- **Do not touch or move any components inside the transmitter. It may interfere with proper operation.**

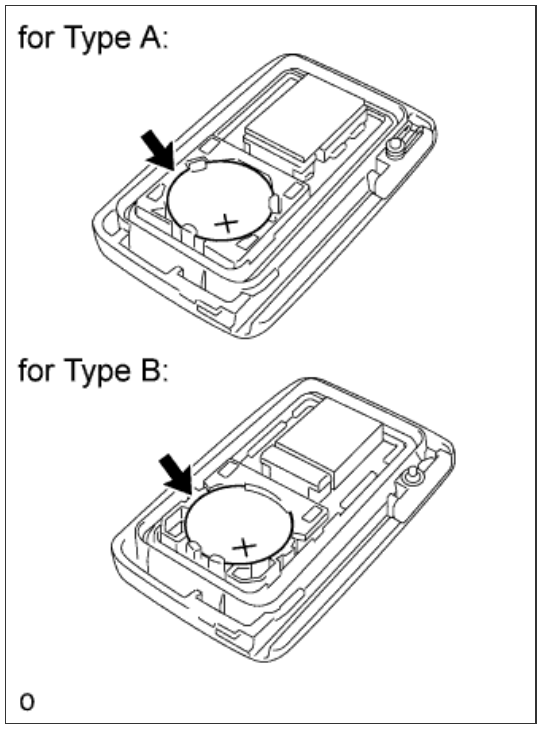


2. INSTALL TRANSMITTER BATTERY


a. Install a new battery (lithium battery: CR1632) with the positive (+) side facing upward, as shown in the illustration.

NOTICE:

- **Do not bend the transmitter battery electrode during insertion.**
- **Keep the transmitter cover interior free of dust and oil.**

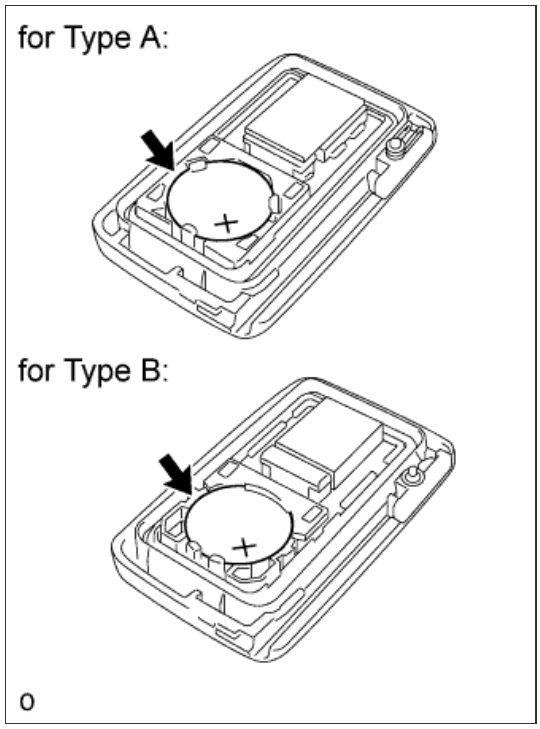


b. Install the transmitter housing cover by pressing down on it as shown in the illustration.

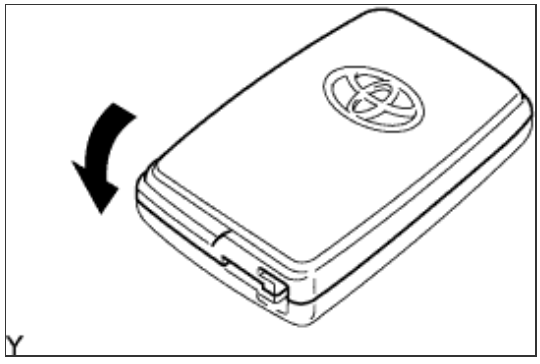


c. Insert the mechanical key into the transmitter.

d. Press one of the transmitter switches and check that the LED illuminates.

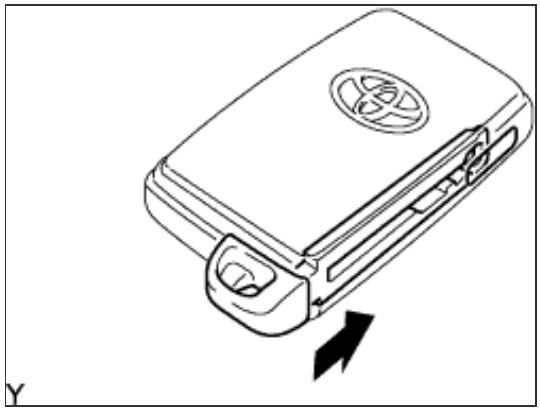

for Preparation Click here

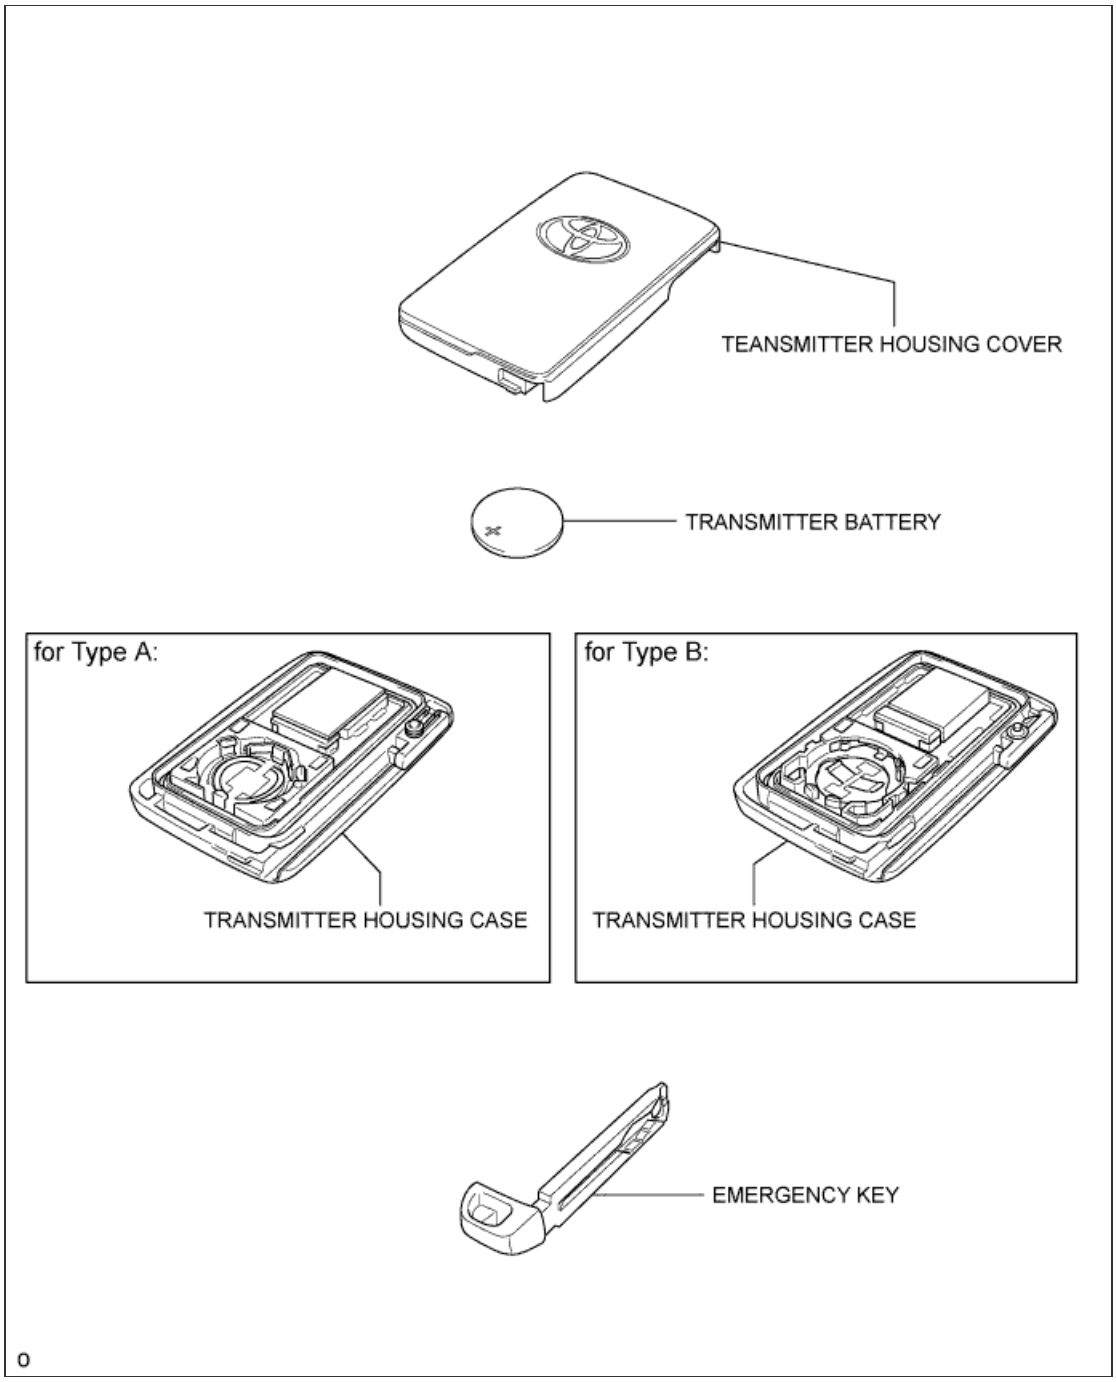

for Preparation Click here

1. REMOVE TRANSMITTER BATTERY


NOTICE:

Take extra care when handling these precision electronic components.

HINT:

- **Type A: for Australia.**
- **Type B: except Australia.**


a. Push the release hook knob and extract the emergency key.

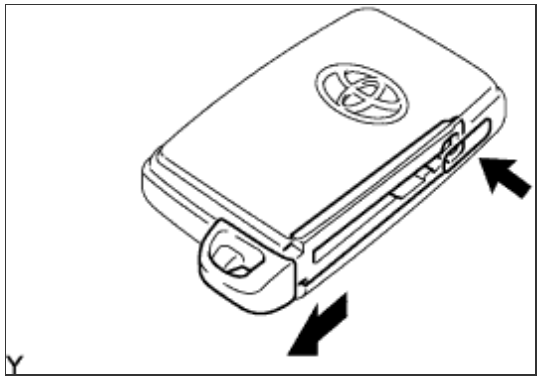

b. Insert a precision screwdriver into the gap, and turn the screwdriver to detach the transmitter housing cover.

HINT:

Tape the screwdriver tip before use.

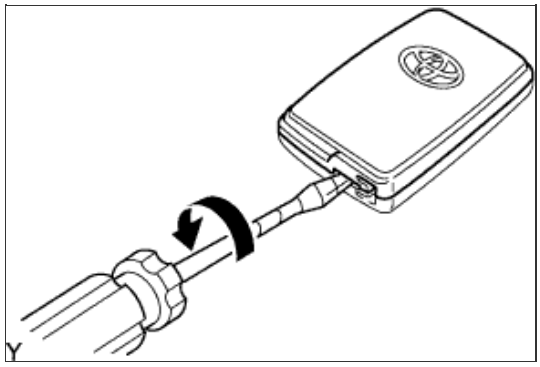


c. Remove the battery (lithium battery: CR1632).


NOTICE:

- **Do not push the terminals with your finger.**
- **Do not forcibly pry up the battery. The terminals may be damaged.**
- **Do not touch the battery with wet hands. Water may cause rust.**
- **Do not touch or move any components inside the transmitter. It may interfere with proper operation.**

for Type A:

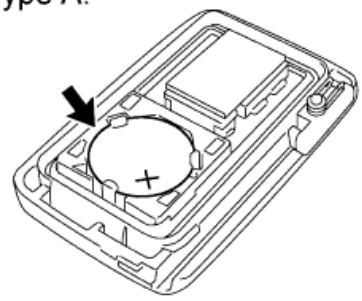

for Type B:

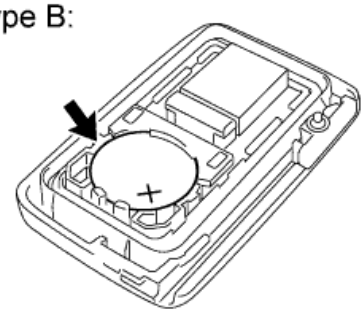

o

for Preparation Click here

1. INSPECT TRANSMITTER BATTERY

HINT:

- **Type A: for Australia.**
- **Type B: except Australia.**

a. Inspect the operation of the transmitter.

i. Remove the battery (lithium battery) from the transmitter (Click here).

ii. Install a new or normal battery (lithium battery).

HINT:


If a new or normal battery is not available, first connect 2 new 1.5 V batteries in series. Then connect leads to the batteries and apply 3 V to the transmitter, as shown in the illustration.

iii. From outside the vehicle, approximately 1 m (3.28 ft) away from the driver side outside door handle, test the transmitter by pointing its key plate at the vehicle and pressing a transmitter switch, or while carrying the transmitter touch the inside of the handle and pull it.

OK:
The door lock can be operated via the transmitter.
The LED comes on more than once.

HINT:

- **The operational area differs depending on the user, the way the transmitter is held, and the location.**
- **The weak electric waves from the transmitter may be affected if the area has strong electric waves or noise. The transmitter operational area may be shortened or the transmitter may not function.**

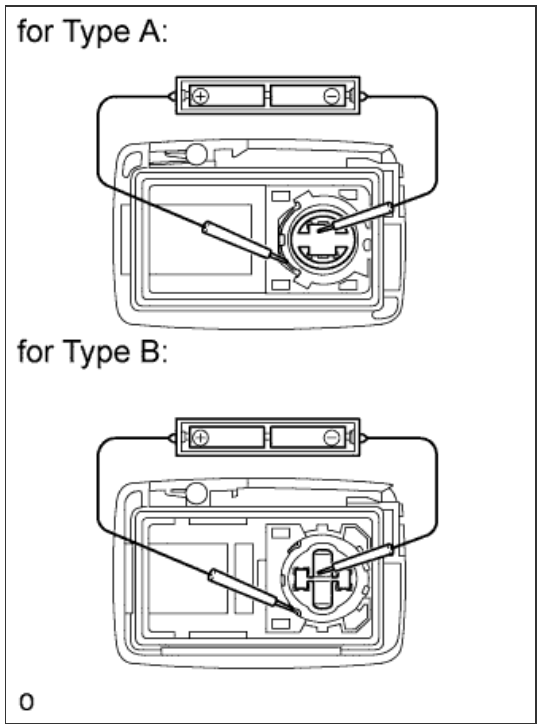


b. Inspect the battery capacity.

i. Remove the battery from the electrical key transmitter that does not operate. Attach a lead wire (0.6 mm (0.0236 in.) in diameter or less including wire sheath) with tape or equivalent to the negative terminal (Click here).


NOTICE:

Do not wrap the lead wire around a terminal, wedge it between terminals, or solder it. A terminal may be deformed or damaged, and the battery will not be able to be installed correctly.

ii. Carefully extend the lead wire from the position shown in the illustration and install the previously removed transmitter battery.

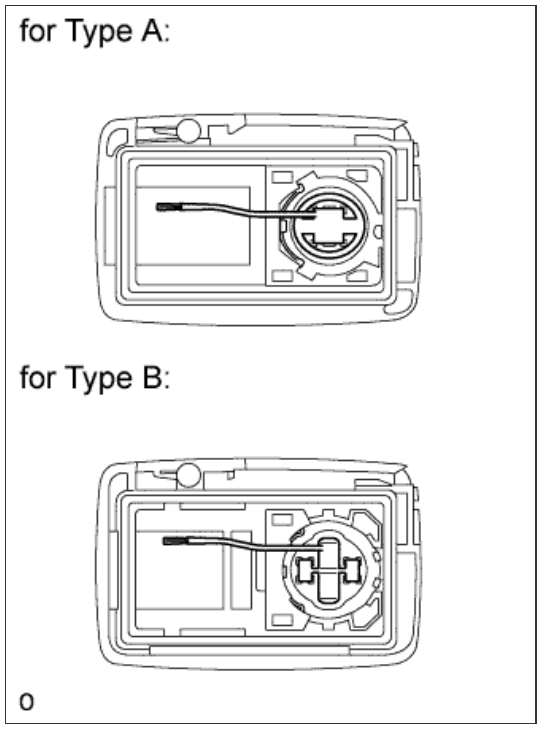

iii. Using an oscilloscope, check the transmitter battery voltage waveform.

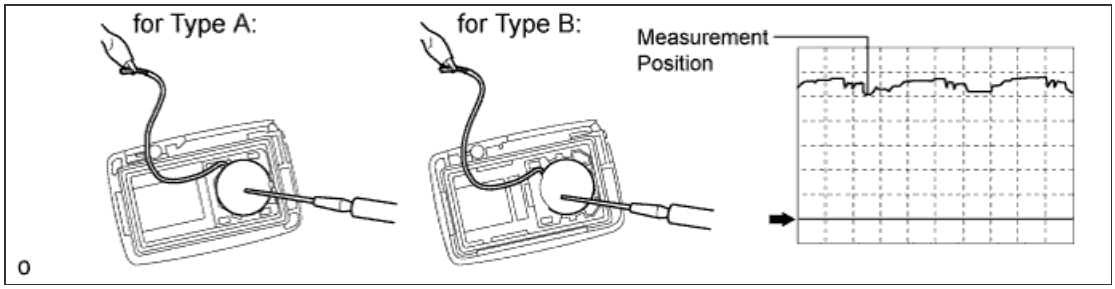

HINT:

When measuring the battery voltage, bring the electrical key transmitter within the smart access system operating range and operating the lock switch of a door handle to perform the measurement. For the smart access system operating range, refer to System Description (Click here).

Standard Voltage:

Tester Condition	Tool Setting	Condition	Specified Condition
Battery positive (+) - Battery negative (-)	0.5 V/DIV, 100 ms/DIV.	Engine switch off, all doors closed and lock switch pushed	2.2 to 3.2 V (Refer to waveform)

If the result is not as specified, replace the transmitter battery.

for Preparation Click here

1. INSTALL TRANSMITTER BATTERY


HINT:

- **Type A: for Australia.**
- **Type B: except Australia.**


a. Install the battery (lithium battery: CR1632) with the positive (+) side facing upward, as shown in the illustration.

NOTICE:

- **Do not bend the transmitter battery electrode during insertion.**
- **Keep the transmitter cover interior free of dust and oil.**

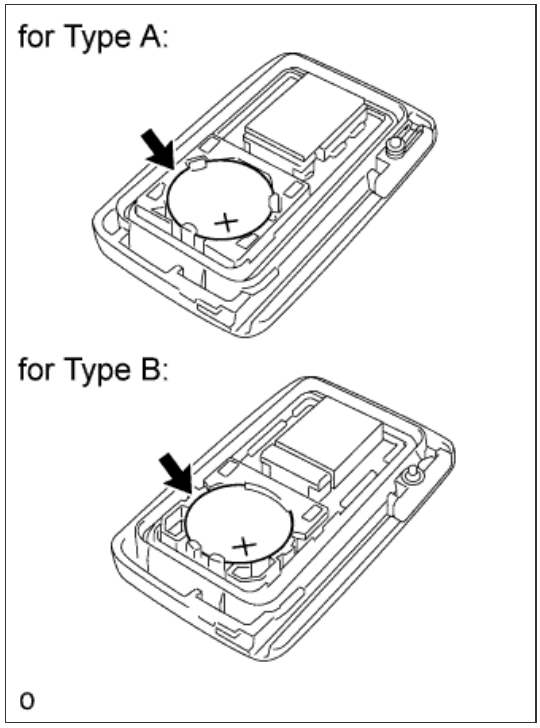


b. Install the transmitter housing cover by pressing down on it as shown in the illustration.

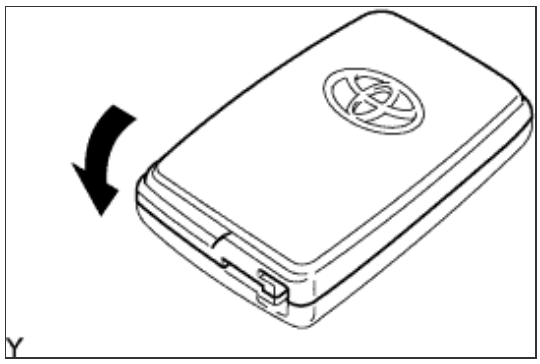



c. Insert the Emergency key into the transmitter.

d. Press one of the transmitter switches and check that the LED illuminates.

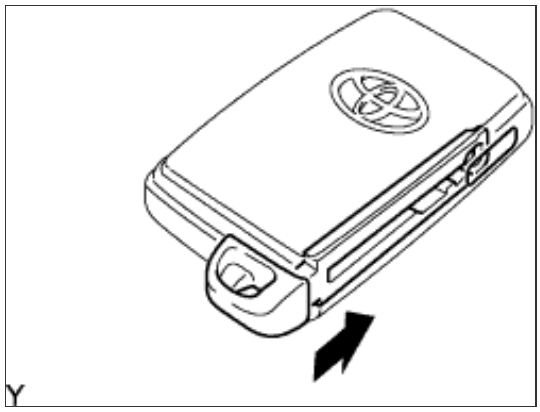
Y

for Preparation Click here

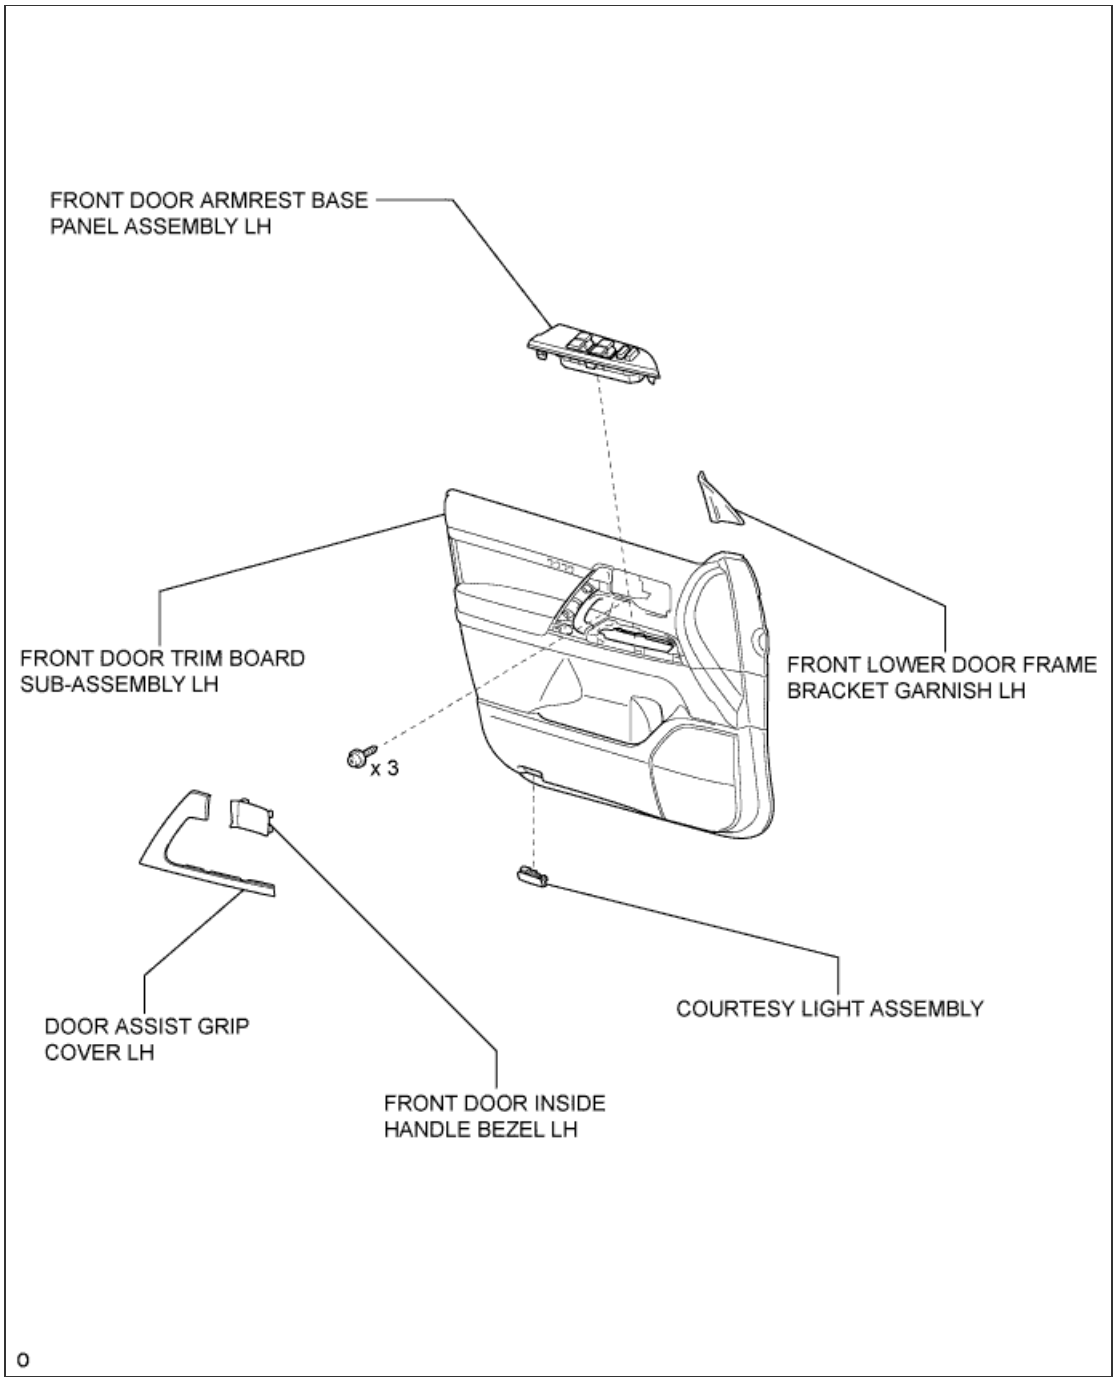

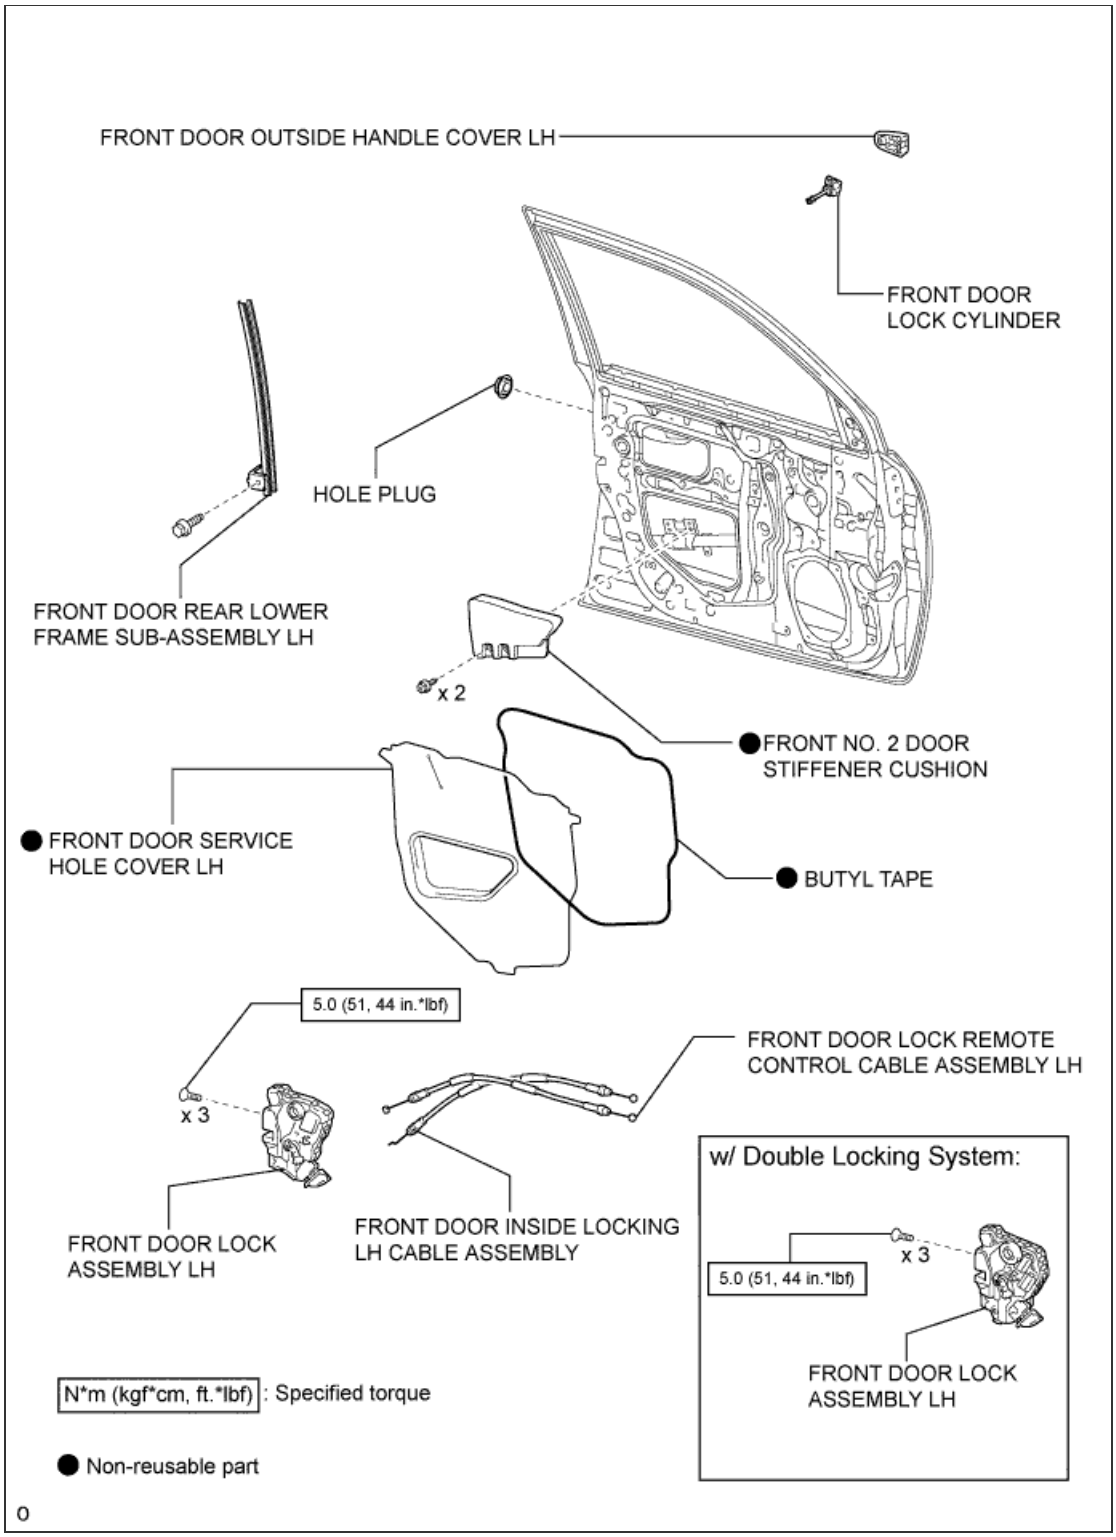
FRONT DOOR OUTSIDE HANDLE COVER LH
FRONT DOOR
LOCK CYLINDER
HOLE PLUG
FRONT DOOR REAR LOWER
FRAME SUB-ASSEMBLY LH
x 2
FRONT NO. 2 DOOR
STIFFENER CUSHION
FRONT DOOR SERVICE
HOLE COVER LH
BUTYL TAPE
5.0 (51, 44 in.*lbf)
FRONT DOOR LOCK REMOTE
CONTROL CABLE ASSEMBLY LH
x 3
FRONT DOOR LOCK
ASSEMBLY LH
FRONT DOOR INSIDE LOCKING
LH CABLE ASSEMBLY
w/ Double Locking System:
x 3
5.0 (51, 44 in.*lbf)
FRONT DOOR LOCK
ASSEMBLY LH
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
o

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Detach the clip and claw, remove the front lower door frame bracket garnish.

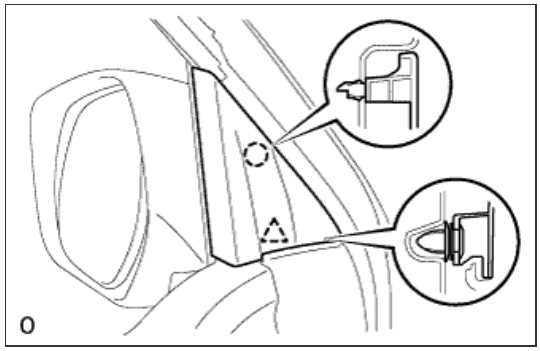


3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle bezel.

HINT:


Tape the screwdriver tip before use.

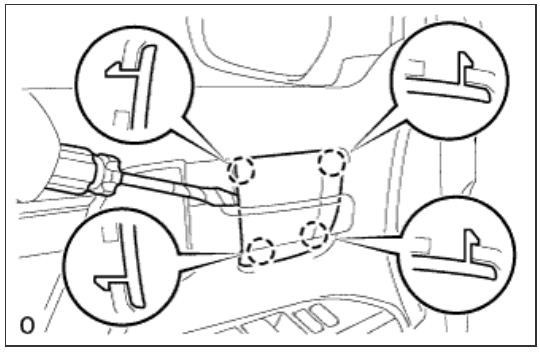

4. REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Using a moulding remover, detach the 5 claws.

b. Disconnect the connector and remove the front door armrest base panel and multiplex network master switch.

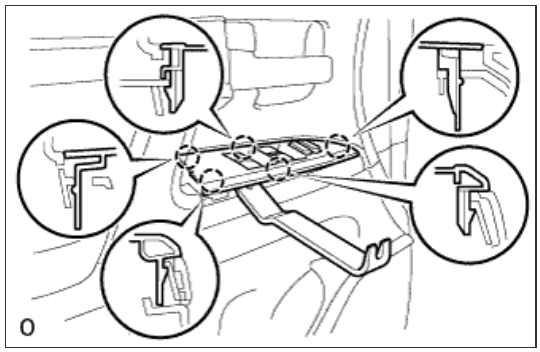

5. REMOVE DOOR ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

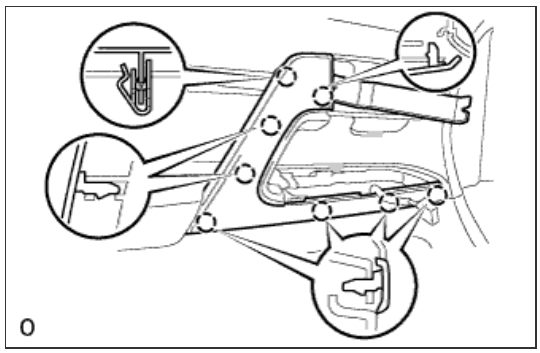

6. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

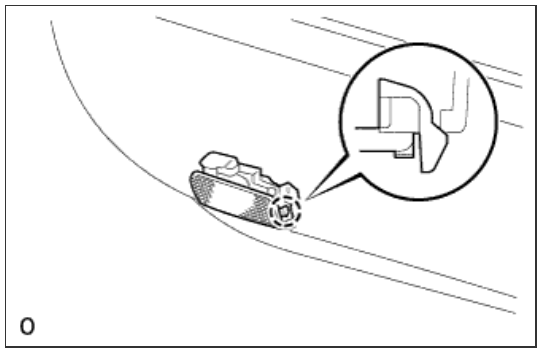


7. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 13 clips, 4 claws and trim board.

c. Disconnect the connector.

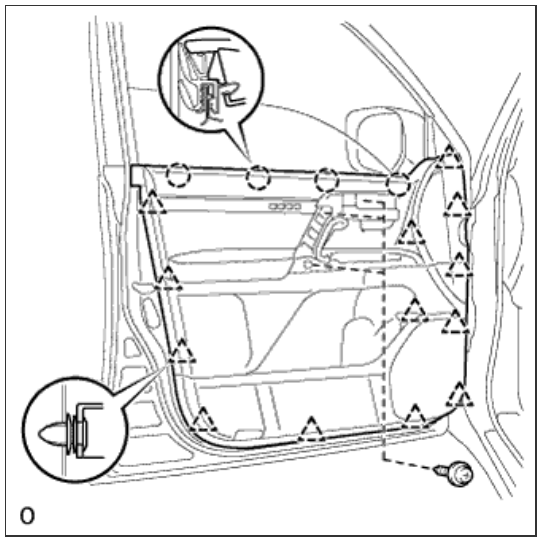

d. Disconnect the 2 cables from the inside handle.

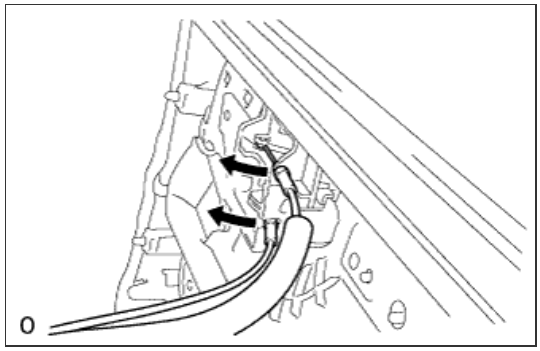

8. REMOVE FRONT DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 9 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:


Remove the remaining tape on the door.

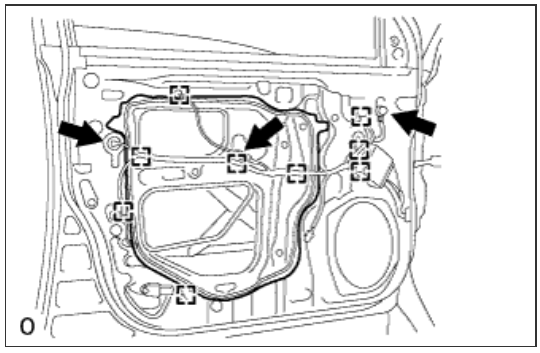

9. REMOVE FRONT NO. 2 DOOR STIFFENER CUSHION


a. Remove the 2 bolts.

b. Detach the 2 clamps and door stiffener cushion.

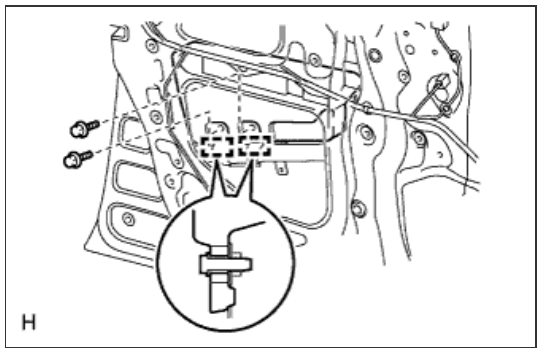

10. REMOVE FRONT DOOR REAR LOWER FRAME SUB-ASSEMBLY LH


a. Remove the bolt and rear lower frame.

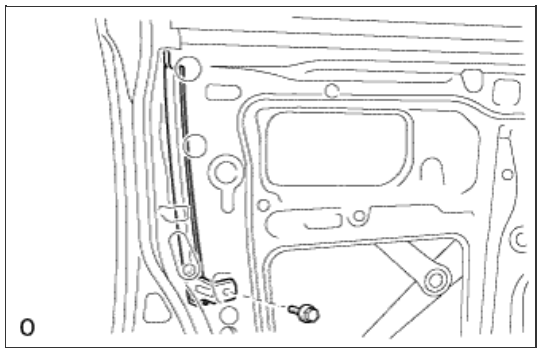


11. REMOVE FRONT DOOR OUTSIDE HANDLE COVER LH

a. Remove the hole plug.

b. Using a T30 "TORX" wrench, loosen the screw and remove the cover with the door lock cylinder installed.

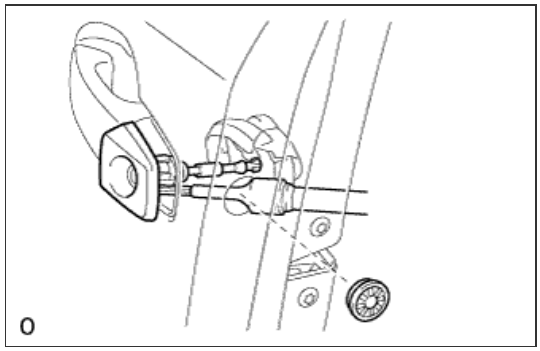

c. Detach the 2 claws and remove the front door outside handle cover.

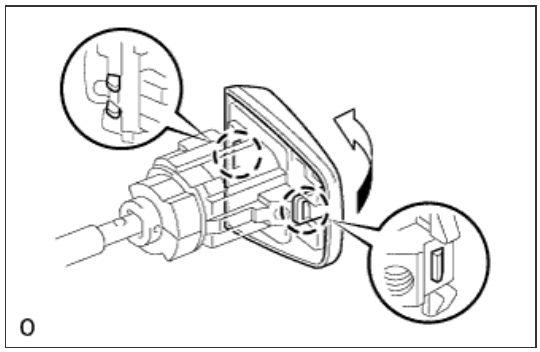

12. REMOVE FRONT DOOR LOCK ASSEMBLY LH


a. Using a T30 "TORX" wrench, remove the 3 screws.

HINT:

Remove the door lock through the service hole.


NOTICE:

Be careful when removing the screws as the door lock may fall and become damaged.

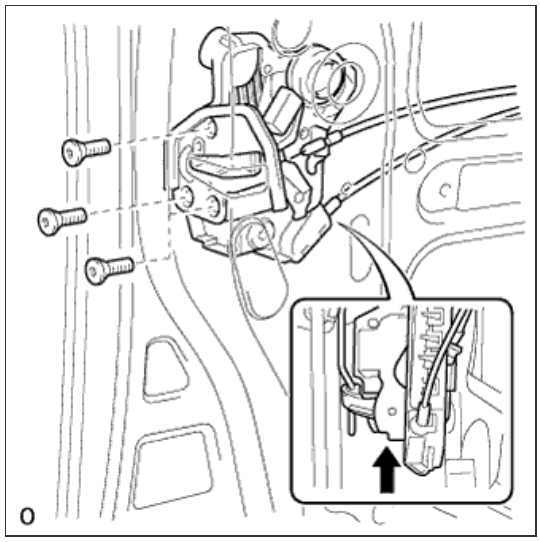

13. REMOVE FRONT DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH

a. Remove the front door lock remote control cable assembly.

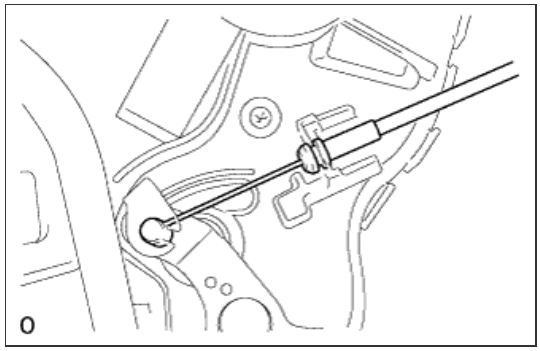


14. REMOVE FRONT DOOR INSIDE LOCKING LH CABLE ASSEMBLY


a. Using a screwdriver, detach the 3 claws.

HINT:

Tape the screwdriver tip before use.

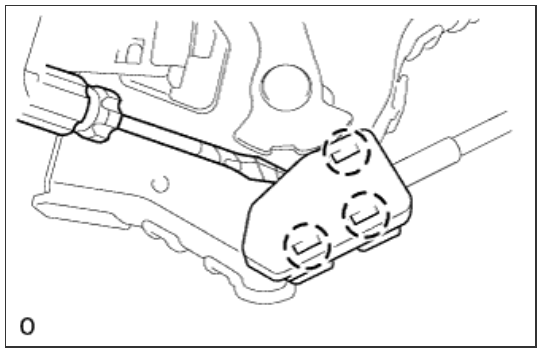

b. Remove the front door inside locking cable assembly.

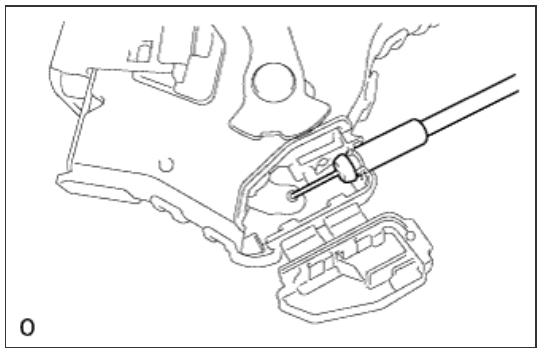

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Detach the clip and claw, remove the front lower door frame bracket garnish.

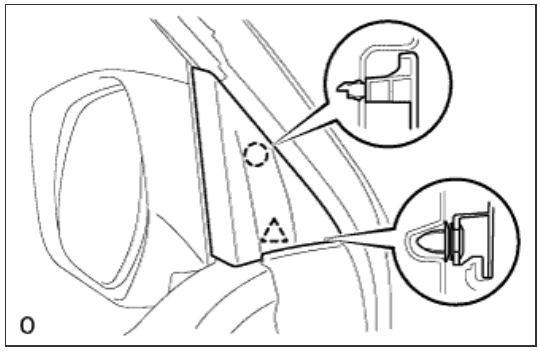


3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle bezel.

HINT:


Tape the screwdriver tip before use.

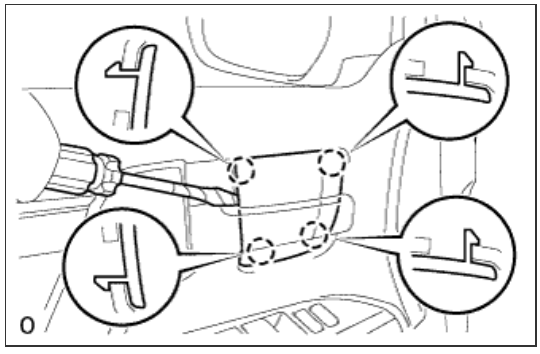

4. REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Using a moulding remover, detach the 5 claws.

b. Disconnect the connector and remove the armrest base panel.

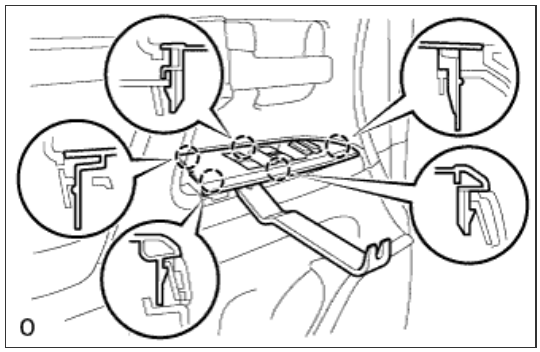

5. REMOVE DOOR ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

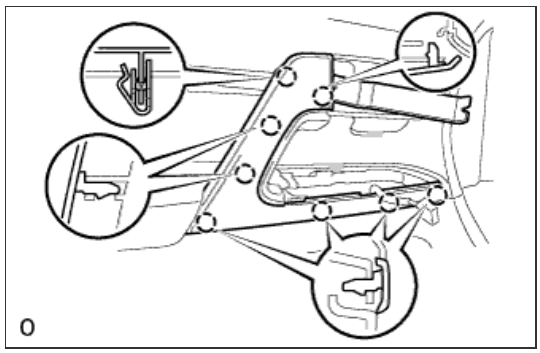

6. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

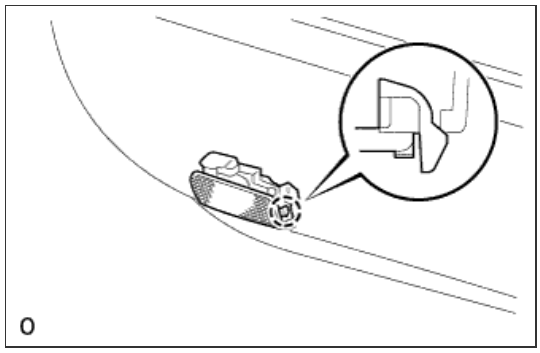


7. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 13 clips, 4 claws and trim board.

c. Disconnect the connector.

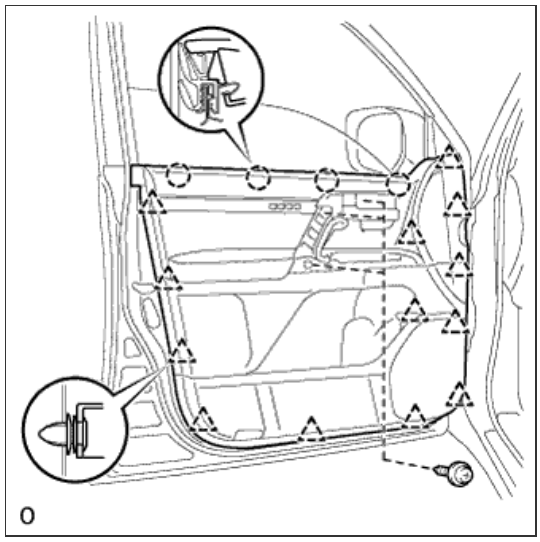

d. Disconnect the 2 cables from the inside handle.

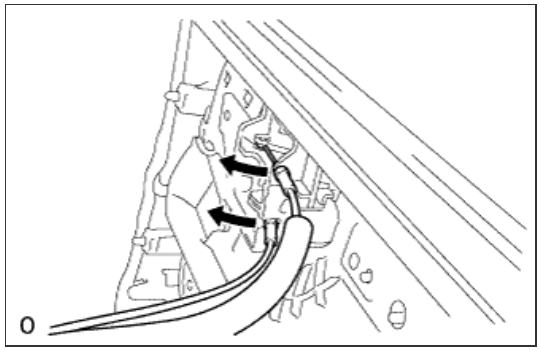

8. REMOVE FRONT DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 9 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:


Remove the remaining tape on the door.

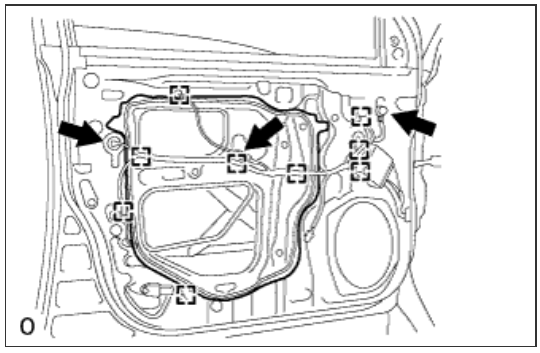

9. REMOVE FRONT NO. 2 DOOR STIFFENER CUSHION


a. Remove the 2 bolts.

b. Detach the 2 clamps and door stiffener cushion.

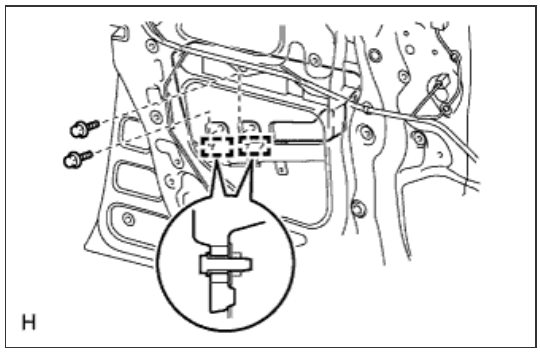

10. REMOVE FRONT DOOR REAR LOWER FRAME SUB-ASSEMBLY LH


a. Remove the bolt and rear lower frame.

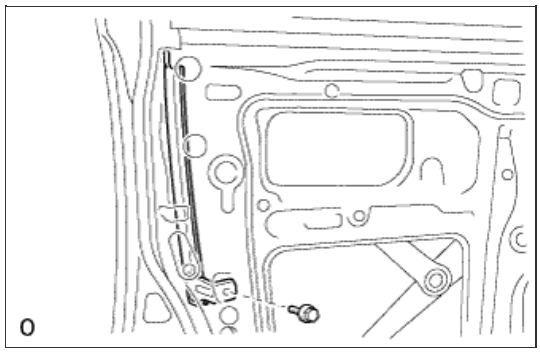


11. REMOVE FRONT DOOR OUTSIDE HANDLE COVER LH

a. Remove the hole plug.

b. Using a T30 "TORX" wrench, loosen the screw and remove the cover with the door lock cylinder installed.

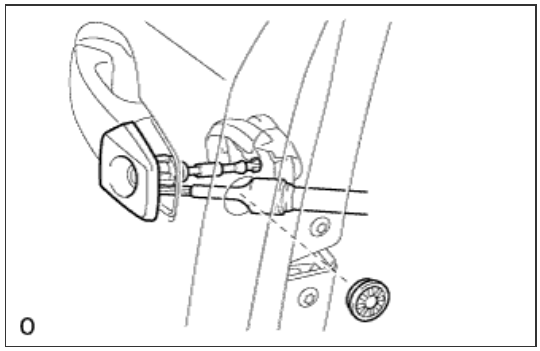

c. Detach the 2 claws and remove the front door outside handle cover.

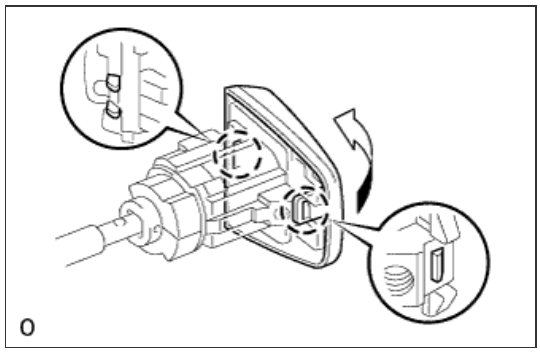

12. REMOVE FRONT DOOR LOCK ASSEMBLY LH


a. Using a T30 "TORX" wrench, remove the 3 screws.

HINT:

Remove the door lock through the service hole.


NOTICE:

Be careful when removing the screws as the door lock may fall and become damaged.

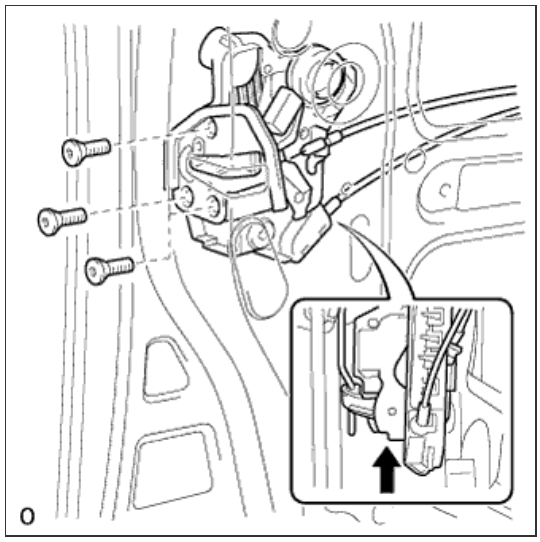

13. REMOVE FRONT DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH

a. Remove the front door lock remote control cable assembly.

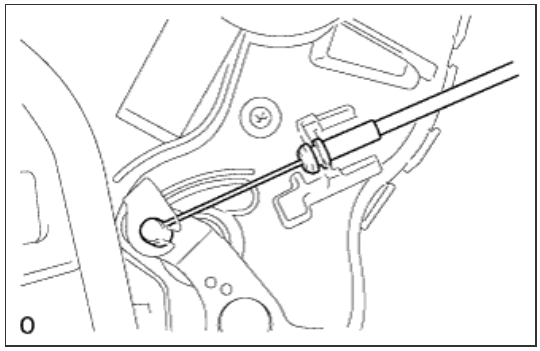


14. REMOVE FRONT DOOR INSIDE LOCKING LH CABLE ASSEMBLY


a. Using a screwdriver, detach the 3 claws.

HINT:

Tape the screwdriver tip before use.

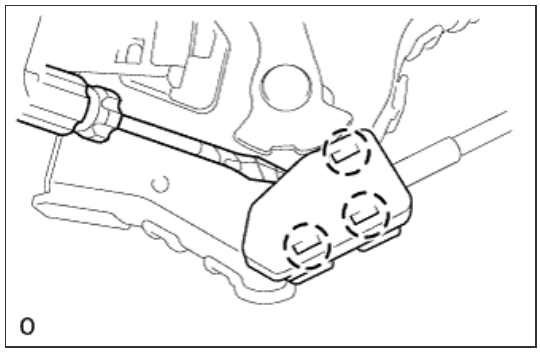

b. Remove the front door inside locking cable assembly.

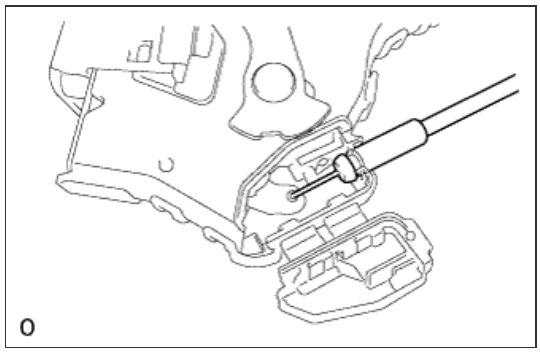

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Detach the clip and claw, remove the front lower door frame bracket garnish.

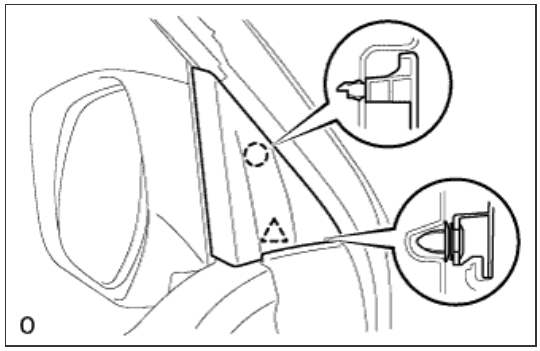


3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle bezel.

HINT:


Tape the screwdriver tip before use.

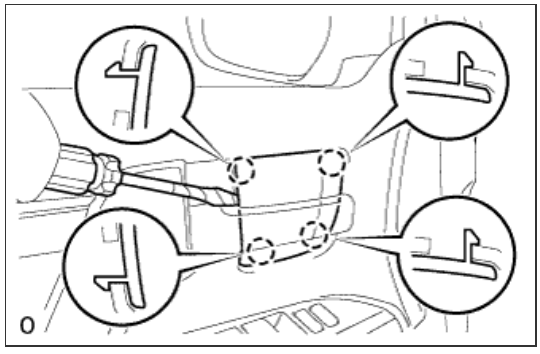

4. REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Using a moulding remover, detach the 5 claws.

b. Disconnect the connector and remove the armrest base panel.

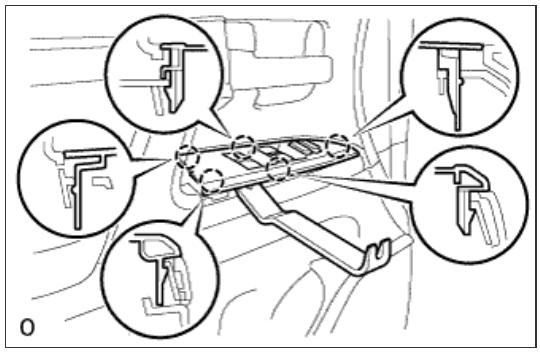

5. REMOVE DOOR ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

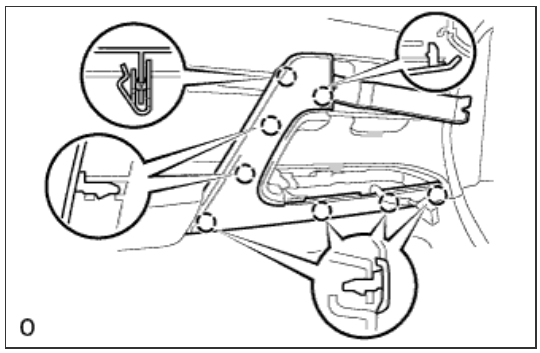

6. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

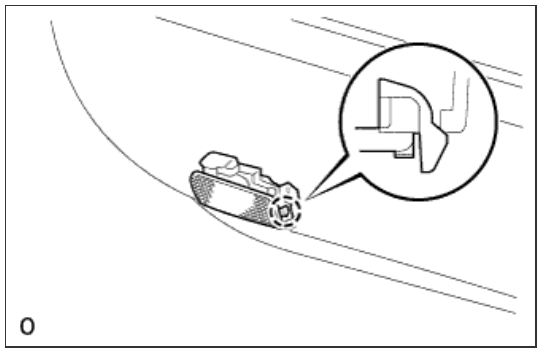


7. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 13 clips, 4 claws and trim board.

c. Disconnect the connector.

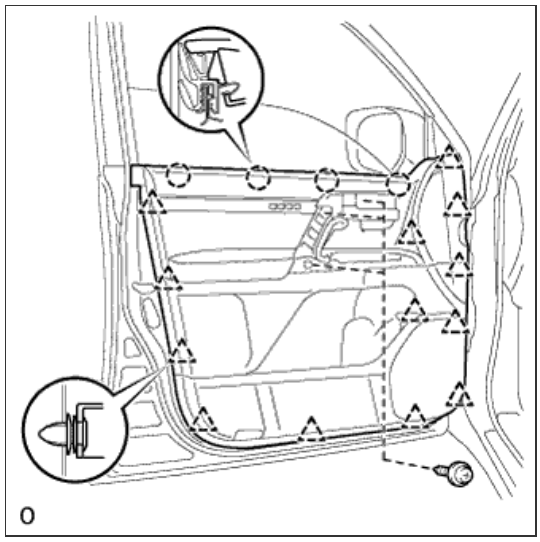

d. Disconnect the 2 cables from the inside handle.

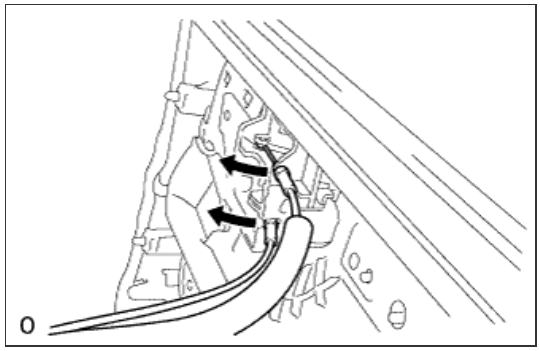

8. REMOVE FRONT DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 9 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:


Remove the remaining tape on the door.

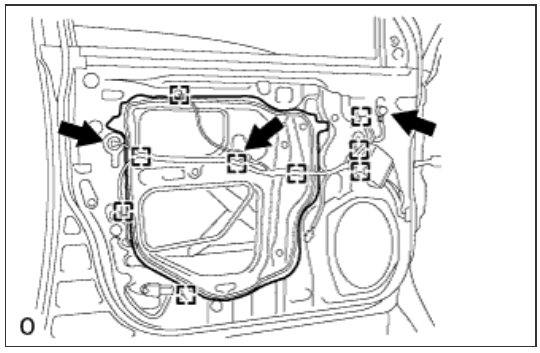

9. REMOVE FRONT NO. 2 DOOR STIFFENER CUSHION


a. Remove the 2 bolts.

b. Detach the 2 clamps and door stiffener cushion.

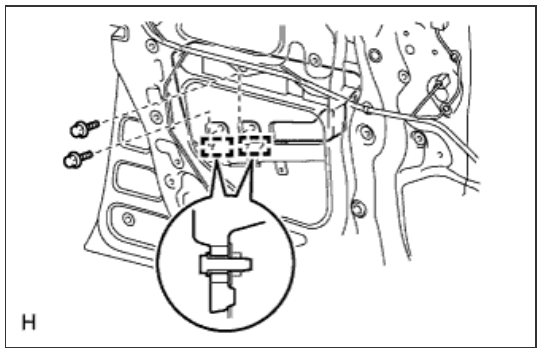

10. REMOVE FRONT DOOR REAR LOWER FRAME SUB-ASSEMBLY LH


a. Remove the bolt and rear lower frame.

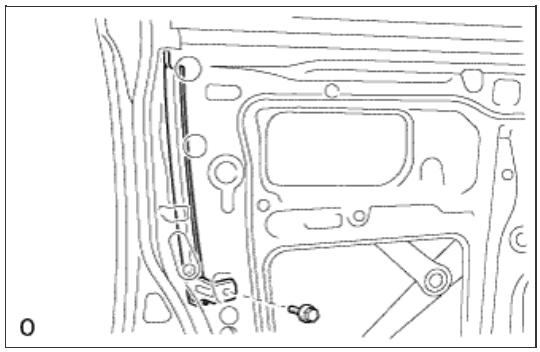


11. REMOVE FRONT DOOR OUTSIDE HANDLE COVER LH

a. Remove the hole plug.

b. Using a T30 "TORX" wrench, loosen the screw and remove the cover with the door lock cylinder installed.

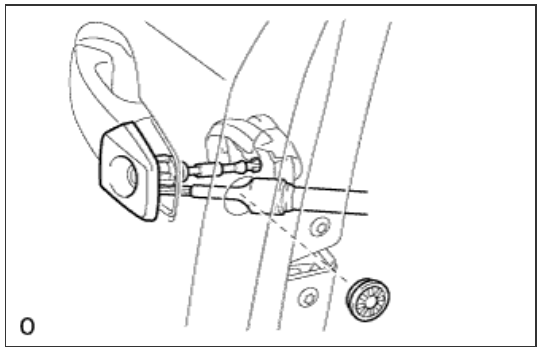

c. Detach the 2 claws and remove the front door outside handle cover.

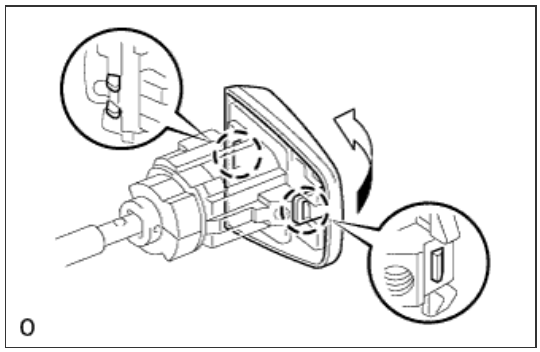

12. REMOVE FRONT DOOR LOCK ASSEMBLY LH


a. Using a T30 "TORX" wrench, remove the 3 screws.

HINT:

Remove the door lock through the service hole.


NOTICE:

Be careful when removing the screws as the door lock may fall and become damaged.

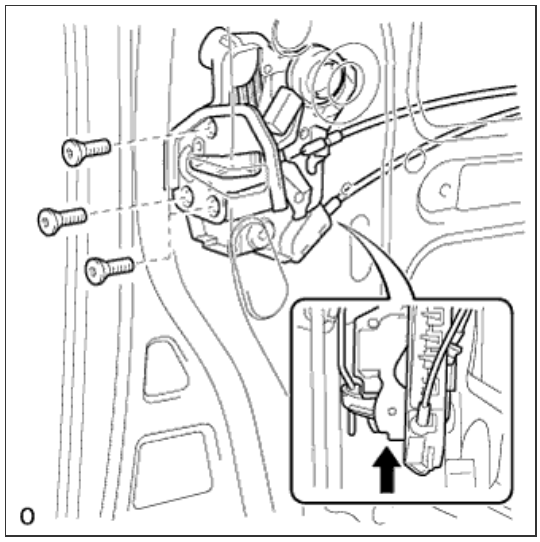

13. REMOVE FRONT DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH

a. Remove the front door lock remote control cable assembly.

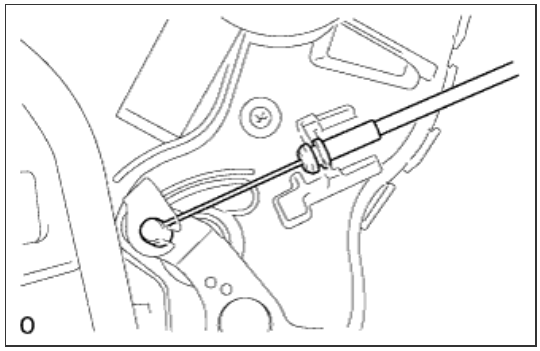


14. REMOVE FRONT DOOR INSIDE LOCKING LH CABLE ASSEMBLY


a. Using a screwdriver, detach the 3 claws.

HINT:

Tape the screwdriver tip before use.

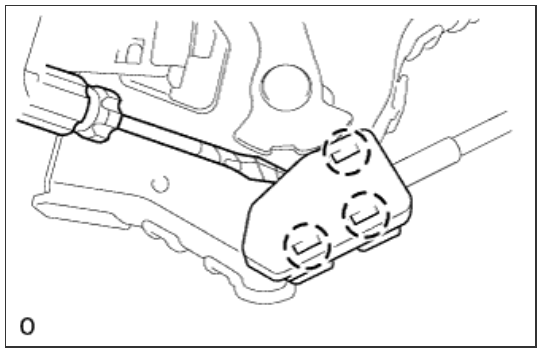


b. Remove the front door inside locking cable assembly.

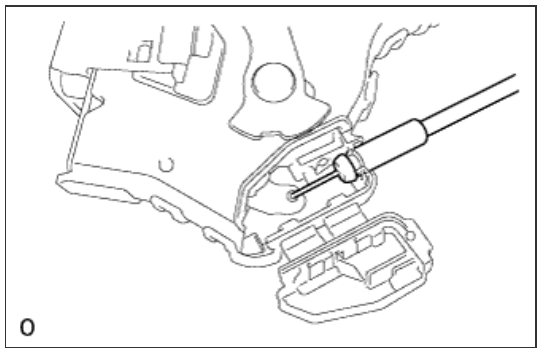

for Preparation Click here

1. INSPECT FRONT DOOR LOCK ASSEMBLY LH (w/o Double Locking System)

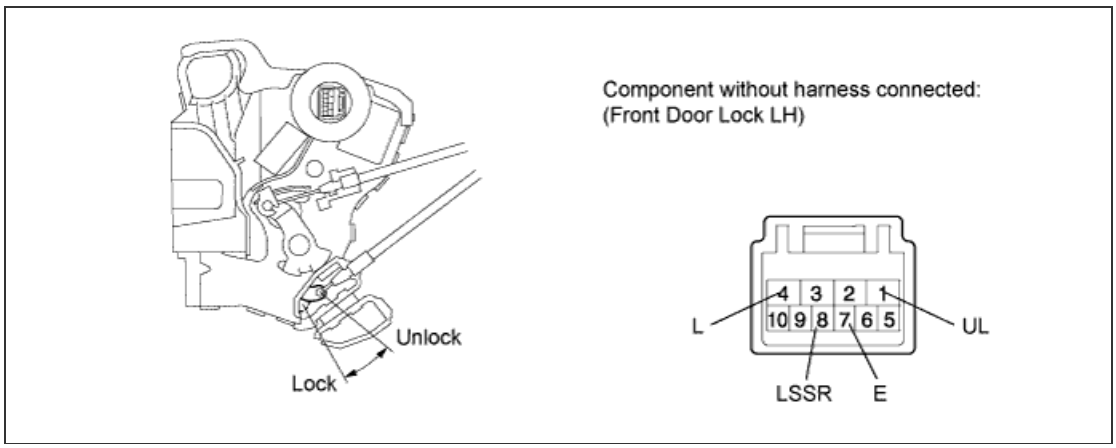

a. Check the door lock motor operation.

i. Apply battery voltage to the motor connector and check the operation of the door lock motor.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 4 (L) Battery negative (-) → 1 (UL)	Lock
Battery positive (+) → 1 (UL) Battery negative (-) → 4 (L)	Unlock

If the result is not as specified, replace the door lock assembly.

b. Check the detection switch.


i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
8 (LSSR) - 7 (E)	Lock	10 kΩ or higher
8 (LSSR) - 7 (E)	Unlock	Below 1 Ω

If the result is not as specified, replace the door lock assembly.

c. for LHD:

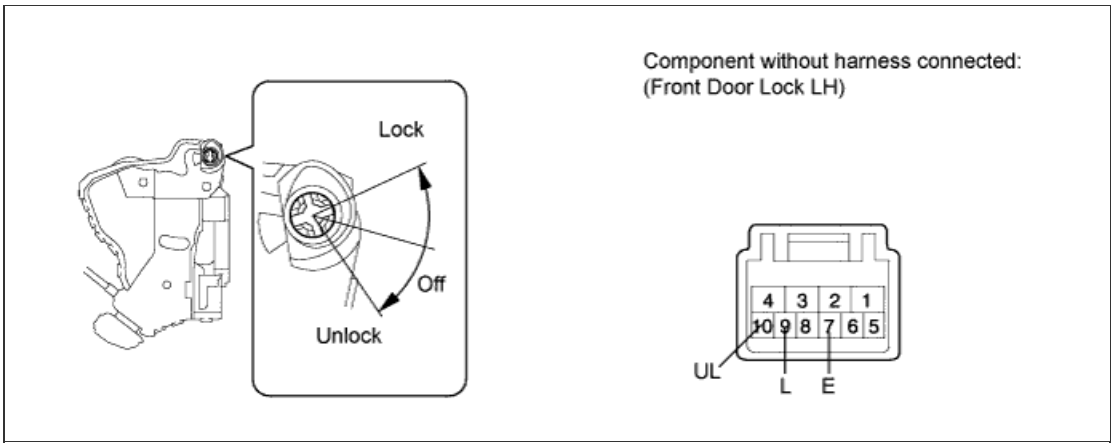

i. Check the door lock and unlock switch.


1. Measure the resistance according to the value(s) in the table below.

Stan a Resistance:

Tester Connection	Switch Condition	Specified Condition
9 (L) - 7 (E)	Lock	Below 1 Ω
9 (L) - 7 (E) 10 (UL) - 7 (E)	OFF	10 kΩ or higher
10 (UL) - 7 (E)	Unlock	Below 1 Ω

If the result is not as specified, replace the door lock assembly.

2. INSPECT FRONT DOOR LOCK ASSEMBLY LH (w/ Double Locking System)

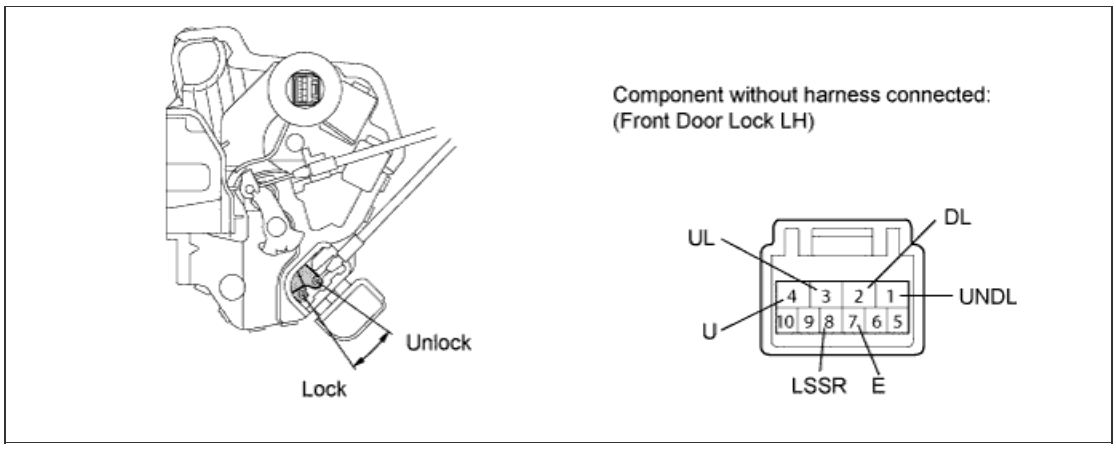

a. Check the door lock motor operation.

i. Apply battery voltage to the motor connector and check the operation of the door lock motor.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 4 (L) Battery negative (-) → 3 (UL)	Lock
Battery positive (+) → 3 (UL) Battery negative (-) → 4 (L)	Unlock
Battery positive (+) → 2	

(DL) Battery negative (-) → 1 (UNDL)	Set
Battery positive (+) → 1 (UNDL) Battery negative (-) → 2 (DL)	Unset

If the result is not as specified, replace the door lock assembly.

b. Check the detection switch.


i. Measure the resistance according to the value(s) in the table below.

Stan a Resistance:

Tester Connection	Switch Condition	Specified Condition
8 (LSSR) - 7 (E)	Lock	10 kΩ or higher
8 (LSSR) - 7 (E)	Unlock	Below 1 Ω

If the result is not as specified, replace the door lock assembly.

c. for LHD:

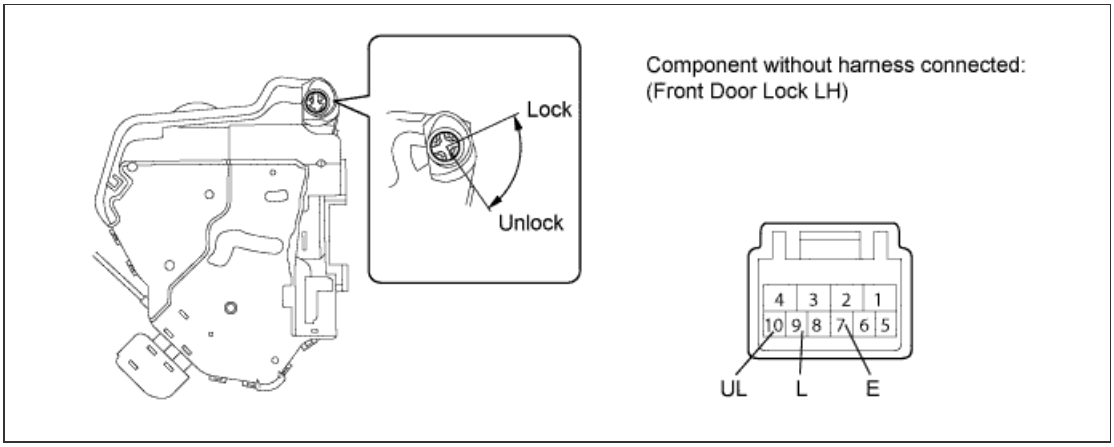

i. Check the door lock and unlock switch.


1. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
9 (L) - 7 (E)	Lock	Below 1 Ω
9 (L) - 7 (E) 10 (UL) - 7 (E)	OFF	10 kΩ or higher
10 (UL) - 7 (E)	Unlock	Below 1 Ω

If the result is not as specified, replace the door lock assembly.

3. INSPECT FRONT DOOR LOCK ASSEMBLY RH (w/o Double Locking System)

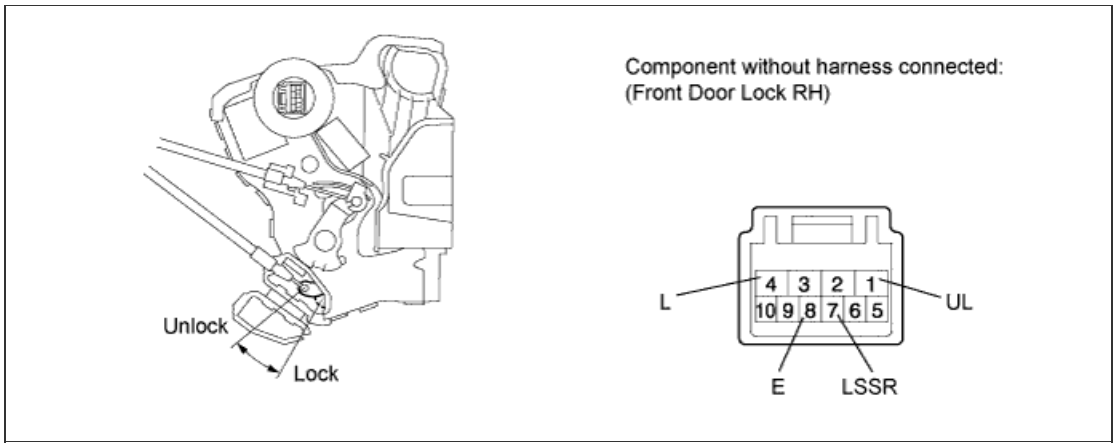

a. Check the door lock motor operation.

i. Apply battery voltage to the door lock motor connector and check the operation of the door lock motor.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 4 (L) Battery negative (-) → 1 (UL)	Lock
Battery positive (+) → 1 (UL) Battery negative (-) → 4 (L)	Unlock

If the result is not as specified, replace the door lock assembly.

b. Check the detection switch.


i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
7 (LSSR) - 8 (E)	Lock	10 kΩ or higher
7 (LSSR) - 8 (E)	Unlock	Below 1 Ω

If the result is not as specified, replace the door lock assembly.

c. for RHD:

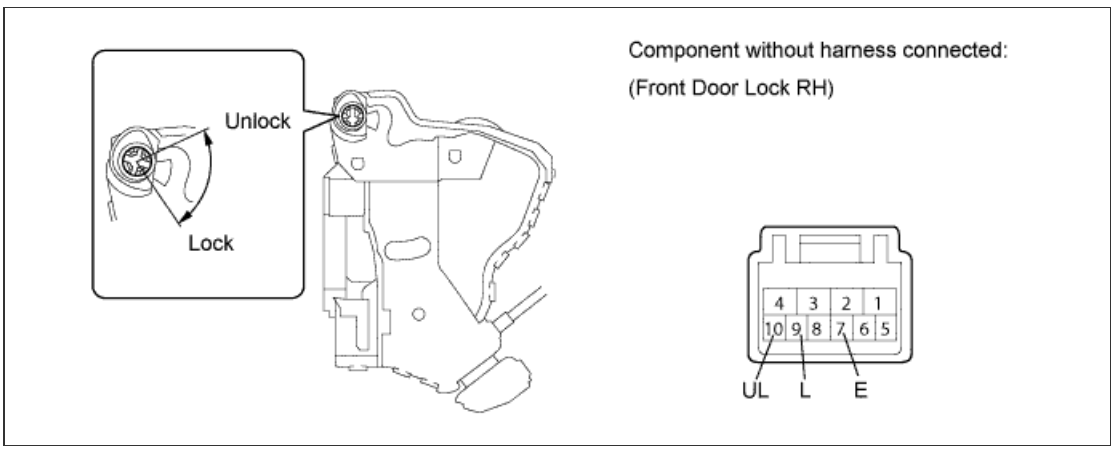

i. Check the door lock and unlock switch.


1. Measure the resistance according to the value(s) in the table below.

Stan a Resistance:

Tester Connection	Switch Condition	Specified Condition
9 (L) - 7 (E)	Lock	Below 1 Ω
9 (L) - 7 (E) 10 (UL) - 7 (E)	OFF	10 kΩ or higher
10 (UL) - 7 (E)	Unlock	Below 1 Ω

If the result is not as specified, replace the door lock assembly.

4. INSPECT FRONT DOOR LOCK ASSEMBLY RH (w/ Double Locking System)

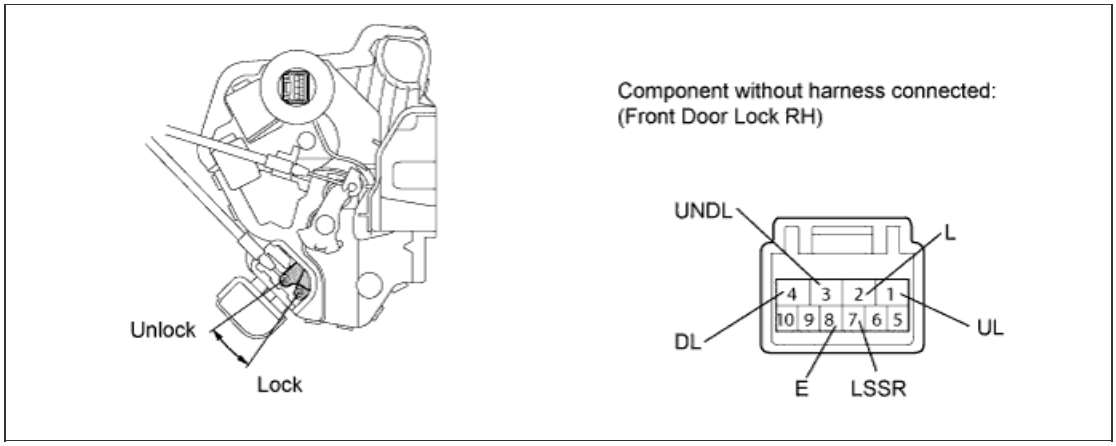

a. Check the door lock motor operation.

i. Apply battery voltage to the door lock motor connector and check the operation of the door lock motor.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 2 (L) Battery negative (-) → 1 (UL)	Lock
Battery positive (+) → 1 (UL) Battery negative (-) → 2 (L)	Unlock
Battery positive (+) → 4 (DL) Battery negative (-) → 3 (UNDL)	Set
Battery positive (+) → 3 (UNDL) Battery negative (-) → 4 (DL)	Unset

If the result is not as specified, replace the door lock assembly.

b. Check the detection switch.

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
7 (LSSR) - 8 (E)	Lock	10 kΩ or higher

7 (LSSR) - 8 (E)	Unlock	Below 1 Ω

If the result is not as specified, replace the door lock assembly.

c. for RHD:

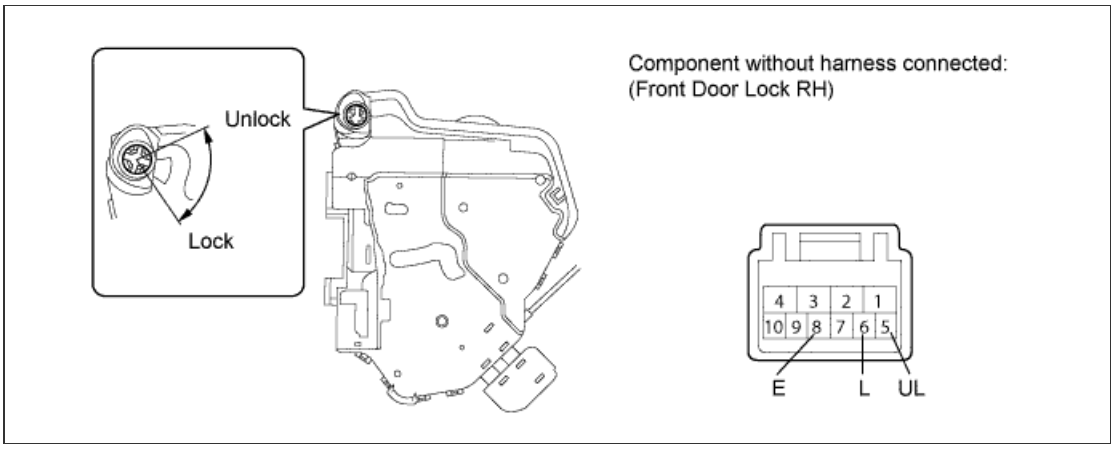

i. Check the door lock and unlock switch.

1. Measure the resistance according to the value(s) in the table below.

Stan a Resistance:

Tester Connection	Switch Condition	Specified Condition
6 (L) - 8 (E)	Lock	Below 1 Ω
6 (L) - 8 (E) 5 (UL) - 8 (E)	OFF	10 kΩ or higher
5 (UL) - 8 (E)	Unlock	Below 1 Ω

If the result is not as specified, replace the door lock assembly.

for Preparation Click here


HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL FRONT DOOR INSIDE LOCKING LH CABLE ASSEMBLY

a. Install the front door inside locking cable.


b. Attach the 3 claws.

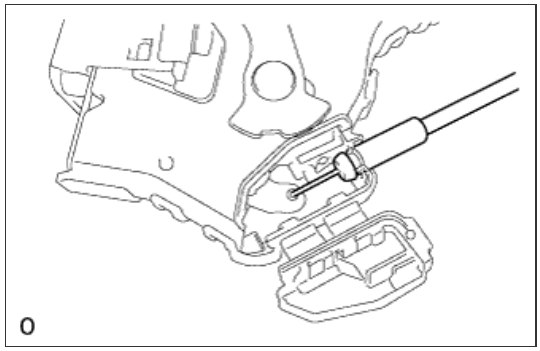

2. INSTALL FRONT DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH

a. Install the front door inside locking cable.

b. Attach the 3 claws.

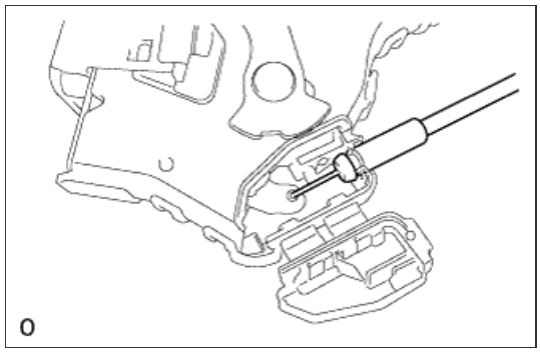

3. INSTALL FRONT DOOR LOCK ASSEMBLY LH


a. Apply MP grease to the sliding parts of the front door lock assembly.

b. Insert the front door lock open rod to the front door lock assembly.

c. Make sure that the front door lock open rod is securely connected to the front door lock assembly.


d. Using a T30 "TORX" wrench, install the door lock with the 3 screws.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

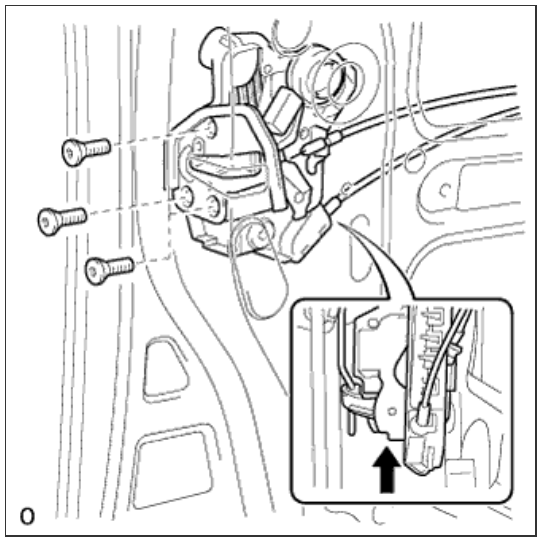

4. INSTALL FRONT DOOR OUTSIDE HANDLE COVER LH


a. Attach the 2 claws to install the front door outside handle cover to the front door lock cylinder.

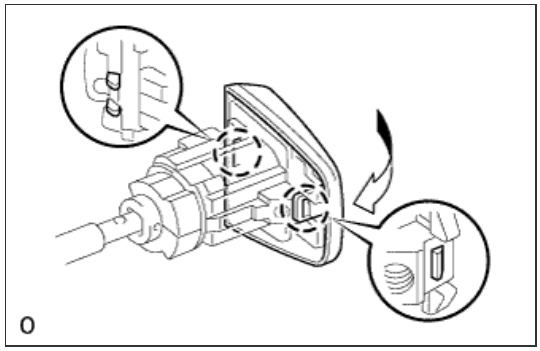

b. Using a T30 "TORX" socket, install the cover (with the door lock cylinder) with the screw.


Torque:
4.0 N*m{ 41 kgf*cm , 35 in.*lbf }

c. Install the hole plug.

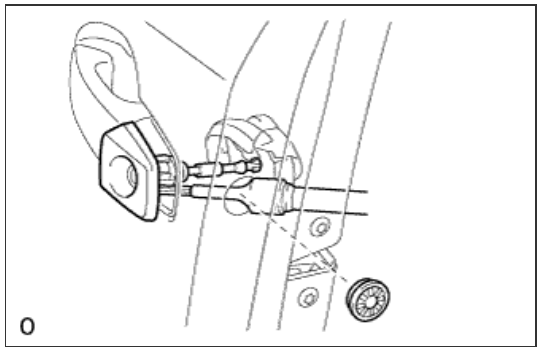

5. INSTALL FRONT DOOR REAR LOWER FRAME SUB-ASSEMBLY LH

a. Install the frame with the bolt.

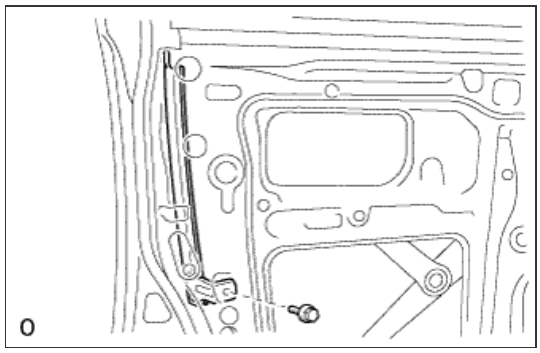

6. INSTALL FRONT NO. 2 DOOR STIFFENER CUSHION

a. Clean the installation surface.

i. Using a heat light, heat the installation surface.

HINT:

When installing the door stiffener cushion, heat the vehicle body and door stiffener cushion using a heat light.

Standard Heating Temperature:

Item	Temperature
Door Stiffener Cushion	20 to 30°C (68 to 86°F)
Vehicle Body	40 to 60°C (104 to 140°F)

NOTICE:

Do not heat the back door garnish and vehicle body excessively.

ii. Remove the double-sided tape from the installation surface.

iii. Wipe off any tape adhesive residue with cleaner.

b. Install a new door stiffener cushion.

i. Using a heat light, heat a new door stiffener cushion and the installation surface.

HINT:

When installing the door stiffener cushion, heat the vehicle body and door stiffener cushion using a heat light.

Standard Heating Temperature:

Item	Temperature
Door Stiffener Cushion	20 to 30°C (68 to 86°F)
Vehicle Body	40 to 60°C (104 to 140°F)

NOTICE:

Do not heat the back door garnish and vehicle body excessively.

ii. Remove the peeling paper from the face of the door stiffener cushion.

HINT:


After removing the peeling paper, keep the exposed adhesive free from foreign matter.

iii. Attach the 2 clamps and double-sided tape to install the door stiffener cushion.

HINT:

Press the door stiffener firmly to install it.

iv. Install the 2 bolts.

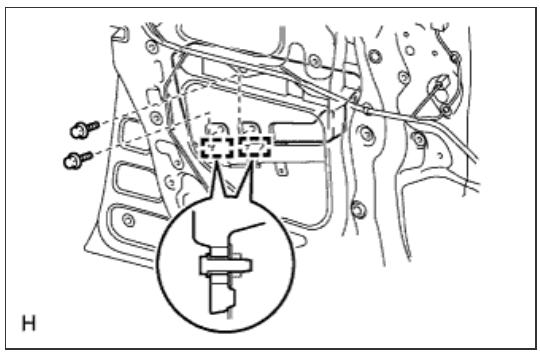


7. INSTALL FRONT DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the front door lock remote control cable and front door inside locking cable through a new front door service hole cover.

NOTICE:

- **When installing the service hole cover, pull the links and connectors through the service hole cover.**
- **There should be no wrinkles or folds after attaching the service hole cover.**
- **After attaching the service hole cover, check the sealing quality.**

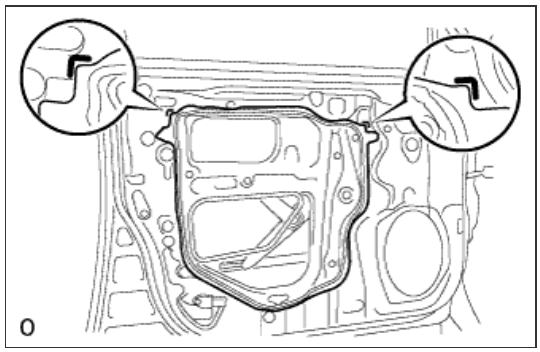


c. Connect the 2 connectors.

d. Attach the 9 clamps.

e. Install the bolt as shown in the illustration.


Torque:
8.4 N*m{ 86 kgf*cm , 74 in.*lbf }

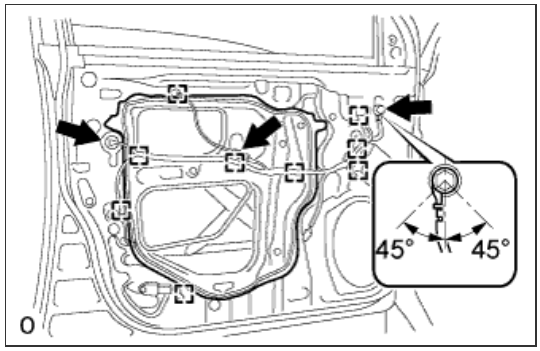

8. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

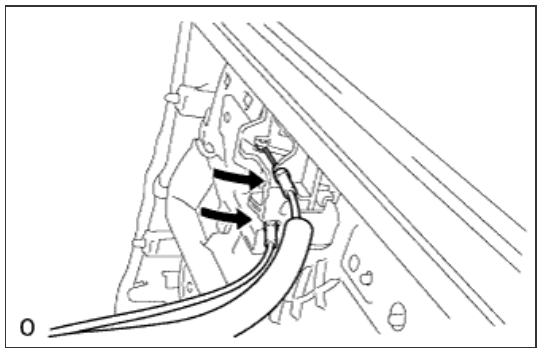

c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.


d. Install the 3 screws.

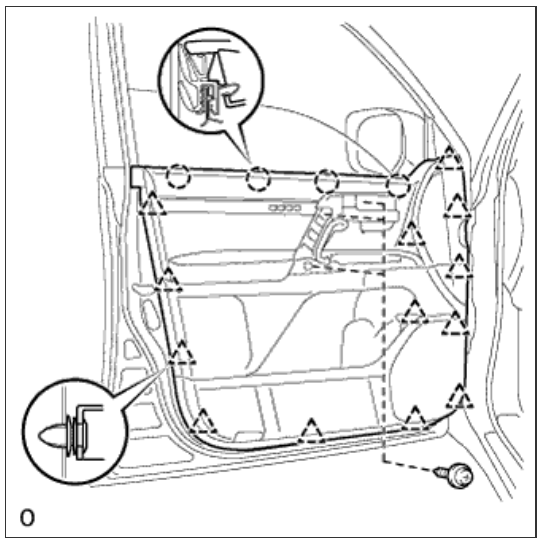

9. INSTALL COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)


a. Connect the connector.

b. Attach the claw of the courtesy light to the front door trim.

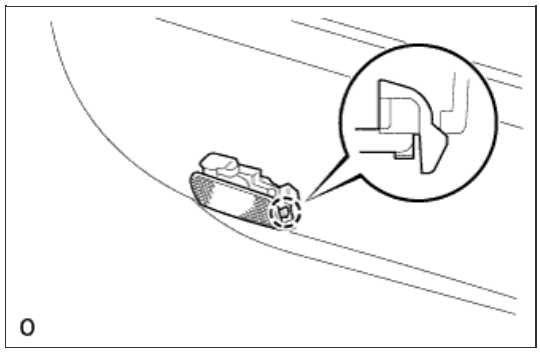


10. INSTALL DOOR ASSIST GRIP COVER LH

a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

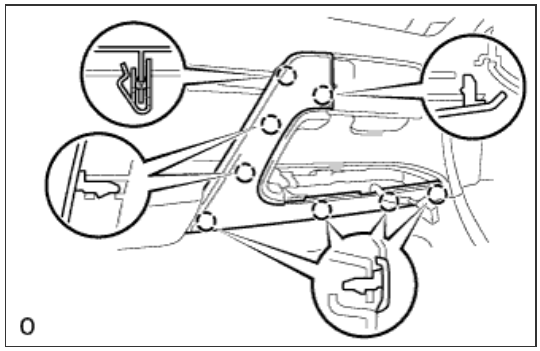

11. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH


a. Attach the 4 claws to install the bezel.

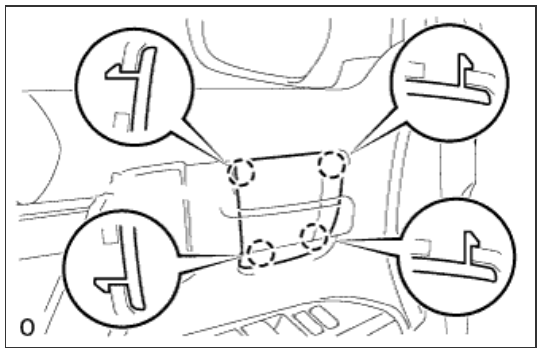

12. INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Connect the connector.

b. Attach the 5 claws and install the front door armrest base panel.

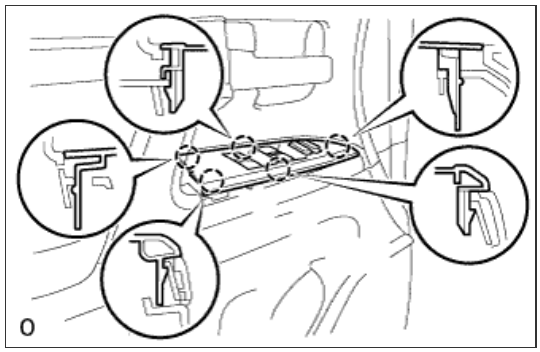

13. INSTALL FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

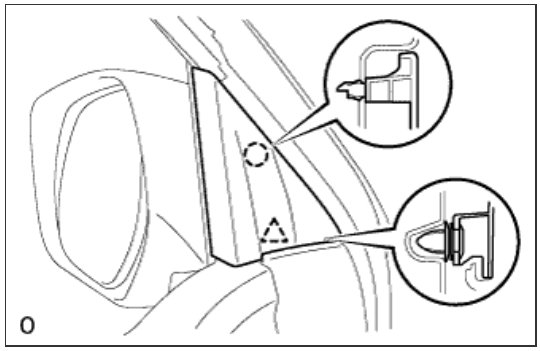

14. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

15. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).


for Preparation Click here

HINT:


- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL FRONT DOOR INSIDE LOCKING LH CABLE ASSEMBLY

a. Install the front door inside locking cable.

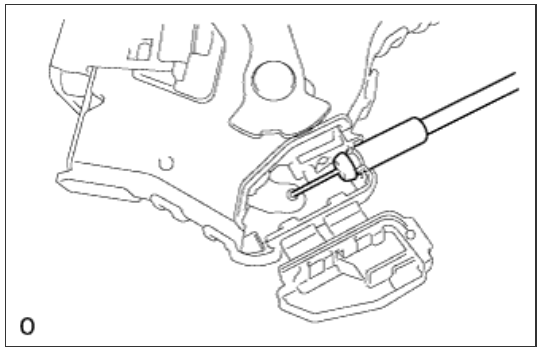


b. Attach the 3 claws.

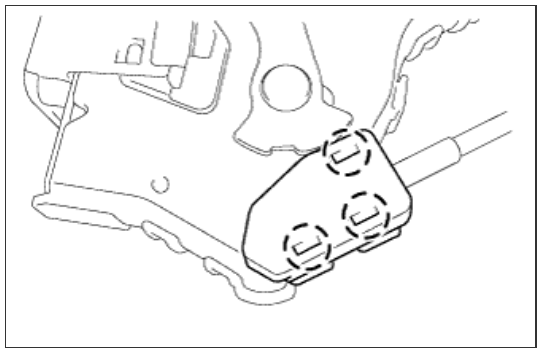

2. INSTALL FRONT DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH

a. Install the front door lock remote control cable.

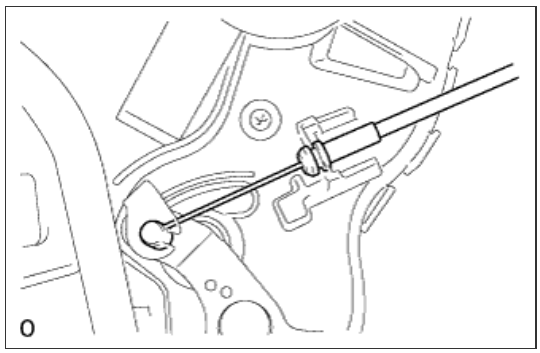

3. INSTALL FRONT DOOR LOCK ASSEMBLY LH


a. Apply MP grease to the sliding parts of the front door lock assembly.

b. Insert the front door lock open rod to the front door lock assembly.

c. Make sure that the front door lock open rod is securely connected to the front door lock assembly.


d. Using a T30 "TORX" wrench, install the door lock with the 3 screws.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

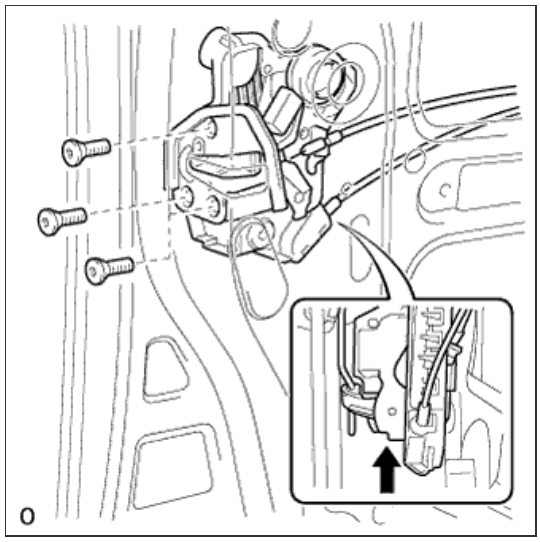

4. INSTALL FRONT DOOR OUTSIDE HANDLE COVER LH


a. Attach the 2 claws to install the front door outside handle cover to the front door lock cylinder.

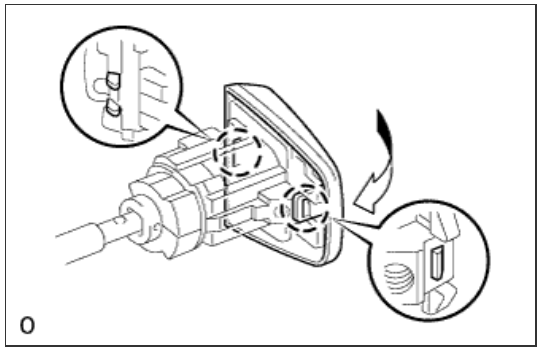

b. Using a T30 "TORX" socket, install the cover (with the door lock cylinder) with the screw.


Torque:
4.0 N*m{ 41 kgf*cm , 35 in.*lbf }

c. Install the hole plug.

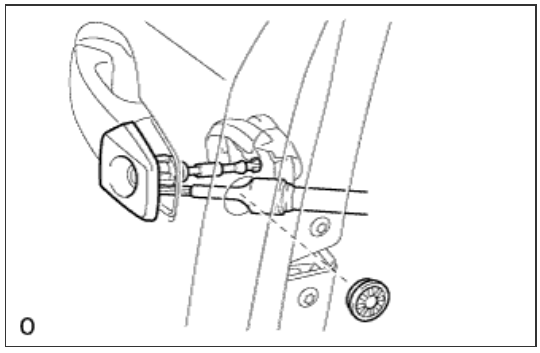

5. INSTALL FRONT DOOR REAR LOWER FRAME SUB-ASSEMBLY LH

a. Install the frame with the bolt.

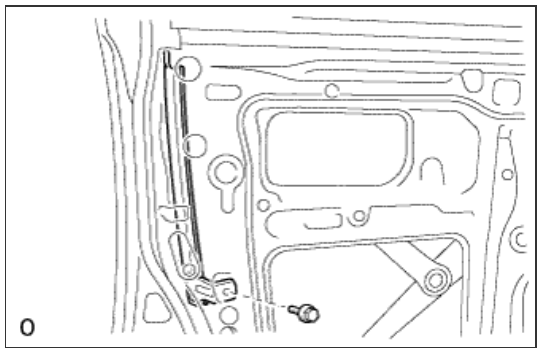

6. INSTALL FRONT NO. 2 DOOR STIFFENER CUSHION

a. Clean the installation surface.

i. Using a heat light, heat the installation surface.

HINT:

When installing the door stiffener cushion, heat the vehicle body and door stiffener cushion using a heat light.

Standard Heating Temperature:

Item	Temperature
Door Stiffener Cushion	20 to 30°C (68 to 86°F)
Vehicle Body	40 to 60°C (104 to 140°F)

NOTICE:

Do not heat the back door garnish and vehicle body excessively.

ii. Remove the double-sided tape from the installation surface.

iii. Wipe off any tape adhesive residue with cleaner.

b. Install a new door stiffener cushion.

i. Using a heat light, heat a new door stiffener cushion and the installation surface.

HINT:

When installing the door stiffener cushion, heat the vehicle body and door stiffener cushion using a heat light.

Standard Heating Temperature:

Item	Temperature
Door Stiffener Cushion	20 to 30°C (68 to 86°F)
Vehicle Body	40 to 60°C (104 to 140°F)

NOTICE:

Do not heat the back door garnish and vehicle body excessively.

ii. Remove the peeling paper from the face of the door stiffener cushion.

HINT:


After removing the peeling paper, keep the exposed adhesive free from foreign matter.

iii. Attach the 2 clamps and double-sided tape to install the door stiffener cushion.

HINT:

Press the door stiffener firmly to install it.

iv. Install the 2 bolts.

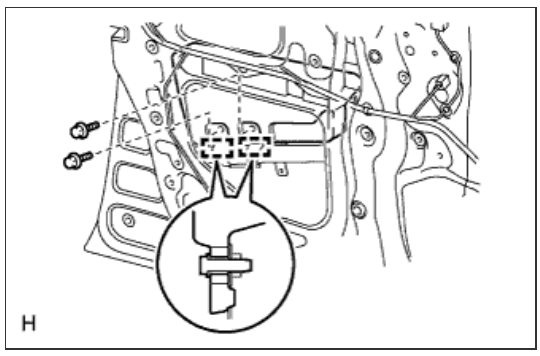


7. INSTALL FRONT DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the front door lock remote control cable and front door inside locking cable through a new front door service hole cover.

NOTICE:

- **When installing the service hole cover, pull the links and connectors through the service hole cover.**
- **There should be no wrinkles or folds after attaching the service hole cover.**
- **After attaching the service hole cover, check the sealing quality.**

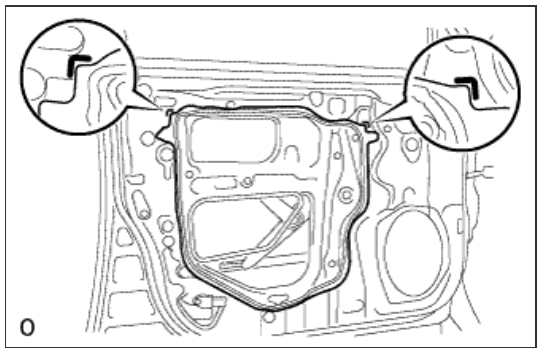


c. Connect the 2 connectors.

d. Attach the 9 clamps.

e. Install the bolt as shown in the illustration.


Torque:
8.4 N*m{ 86 kgf*cm , 74 in.*lbf }

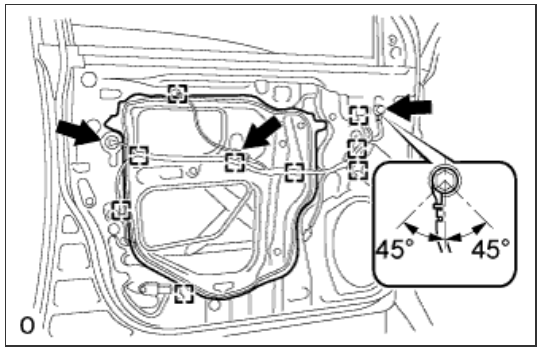

8. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

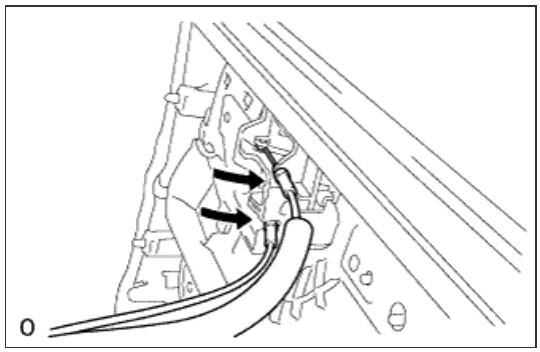

c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.


d. Install the 3 screws.

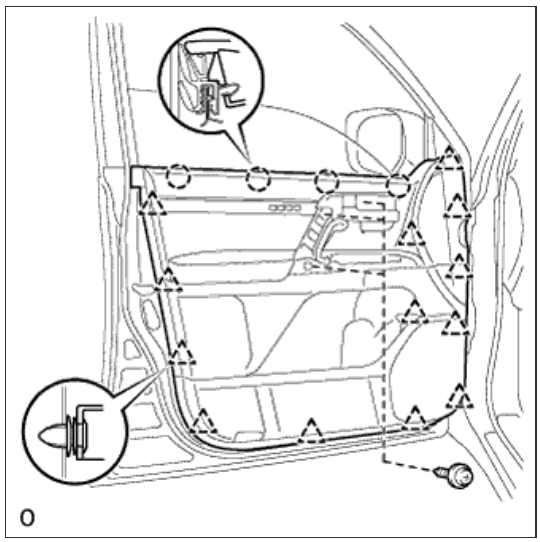

9. INSTALL COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)


a. Connect the connector.

b. Attach the claw of the courtesy light to the front door trim.

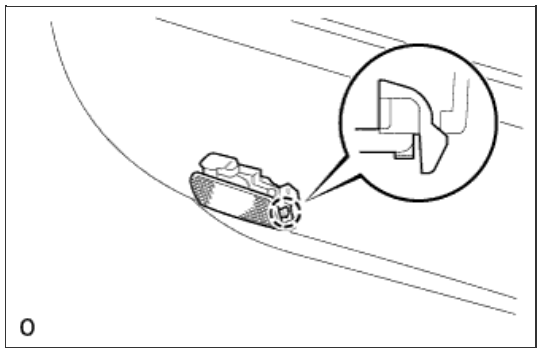


10. INSTALL DOOR ASSIST GRIP COVER LH

a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

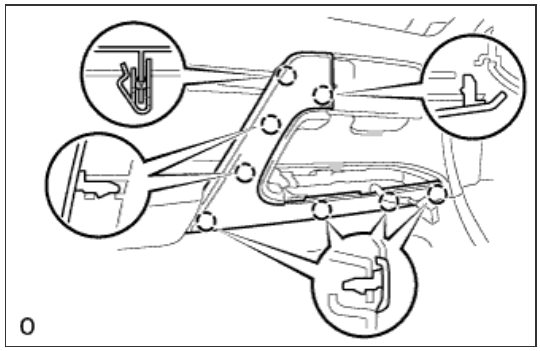

11. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH


a. Attach the 4 claws to install the bezel.

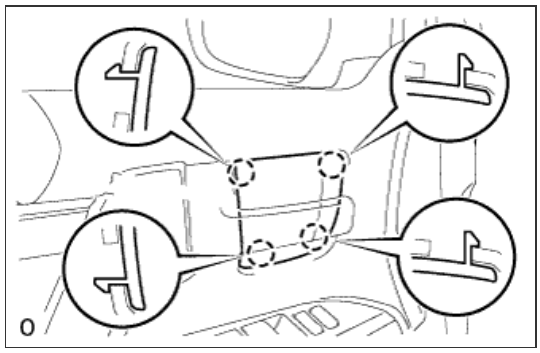

12. INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Connect the connector.

b. Attach the 5 claws to install the armrest base panel.

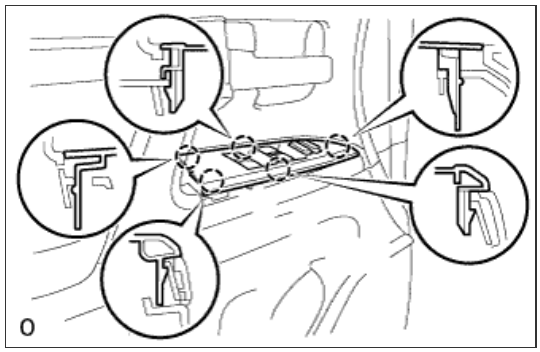

13. INSTALL FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

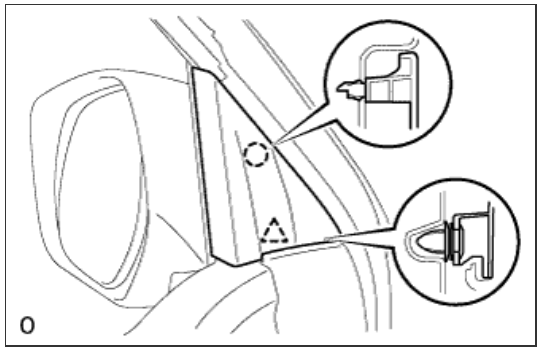

14. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

15. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).


for Preparation Click here

HINT:


- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL FRONT DOOR INSIDE LOCKING LH CABLE ASSEMBLY

a. Install the front door inside locking cable.

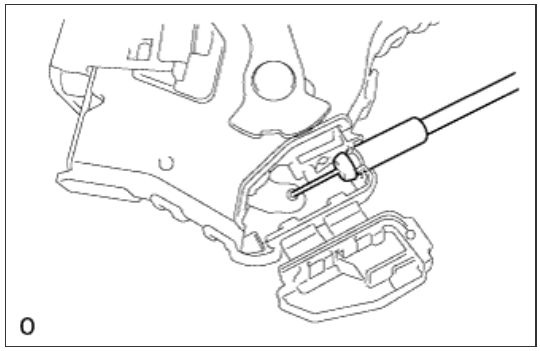


b. Attach the 3 claws.

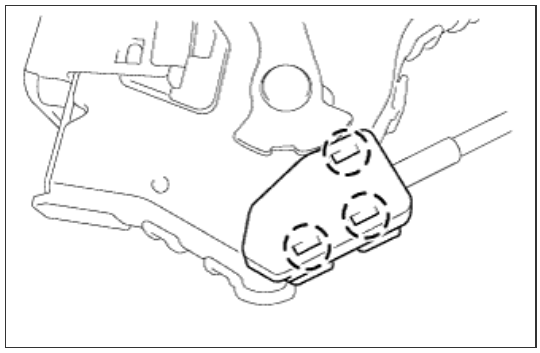

2. INSTALL FRONT DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH

a. Install the front door lock remote control cable.

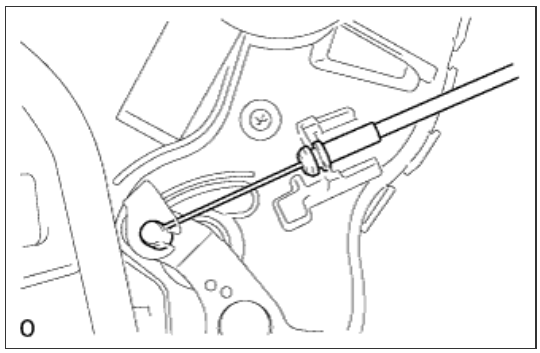

3. INSTALL FRONT DOOR LOCK ASSEMBLY LH


a. Apply MP grease to the sliding parts of the front door lock assembly.

b. Insert the front door lock open rod to the front door lock assembly.

c. Make sure that the front door lock open rod is securely connected to the front door lock assembly.


d. Using a T30 "TORX" wrench, install the door lock with the 3 screws.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

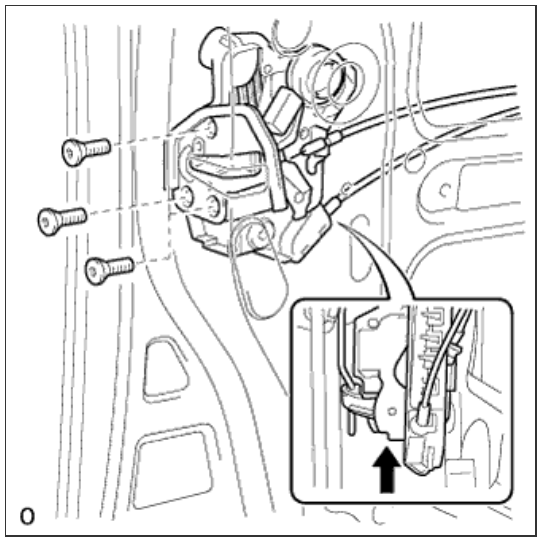

4. INSTALL FRONT DOOR OUTSIDE HANDLE COVER LH


a. Attach the 2 claws to install the front door outside handle cover to the front door lock cylinder.

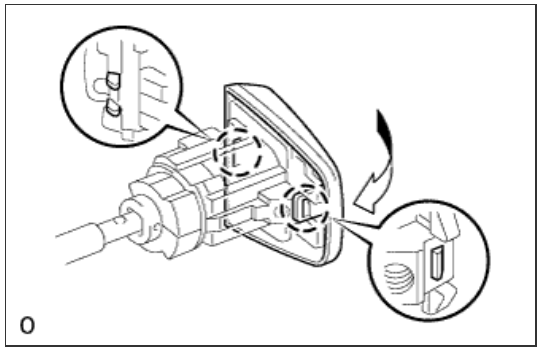

b. Using a T30 "TORX" socket, install the cover (with the door lock cylinder) with the screw.


Torque:
4.0 N*m{ 41 kgf*cm , 35 in.*lbf }

c. Install the hole plug.

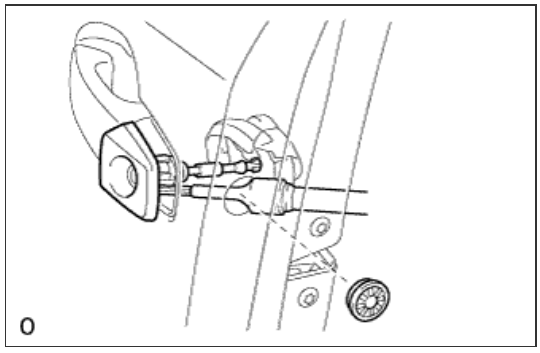

5. INSTALL FRONT DOOR REAR LOWER FRAME SUB-ASSEMBLY LH

a. Install the frame with the bolt.

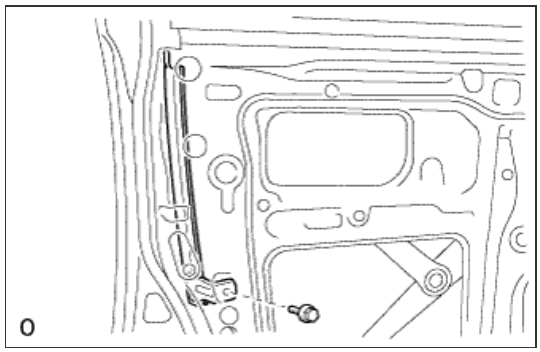

6. INSTALL FRONT NO. 2 DOOR STIFFENER CUSHION

a. Clean the installation surface.

i. Using a heat light, heat the installation surface.

HINT:

When installing the door stiffener cushion, heat the vehicle body and door stiffener cushion using a heat light.

Standard Heating Temperature:

Item	Temperature
Door Stiffener Cushion	20 to 30°C (68 to 86°F)
Vehicle Body	40 to 60°C (104 to 140°F)

NOTICE:

Do not heat the back door garnish and vehicle body excessively.

ii. Remove the double-sided tape from the installation surface.

iii. Wipe off any tape adhesive residue with cleaner.

b. Install a new door stiffener cushion.

i. Using a heat light, heat a new door stiffener cushion and the installation surface.

HINT:

When installing the door stiffener cushion, heat the vehicle body and door stiffener cushion using a heat light.

Standard Heating Temperature:

Item	Temperature
Door Stiffener Cushion	20 to 30°C (68 to 86°F)
Vehicle Body	40 to 60°C (104 to 140°F)

NOTICE:

Do not heat the back door garnish and vehicle body excessively.

ii. Remove the peeling paper from the face of the door stiffener cushion.

HINT:


After removing the peeling paper, keep the exposed adhesive free from foreign matter.

iii. Attach the 2 clamps and double-sided tape to install the door stiffener cushion.

HINT:

Press the door stiffener firmly to install it.

iv. Install the 2 bolts.

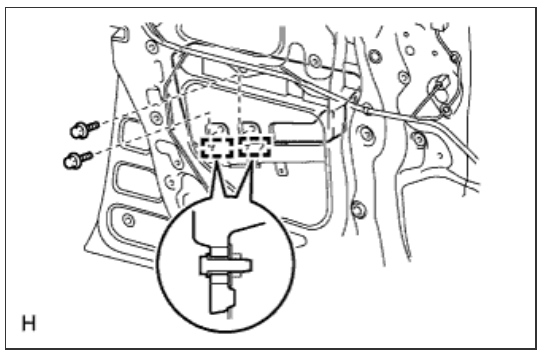


7. INSTALL FRONT DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the front door lock remote control cable and front door inside locking cable through a new front door service hole cover.

NOTICE:

- **When installing the service hole cover, pull the links and connectors through the service hole cover.**
- **There should be no wrinkles or folds after attaching the service hole cover.**
- **After attaching the service hole cover, check the sealing quality.**

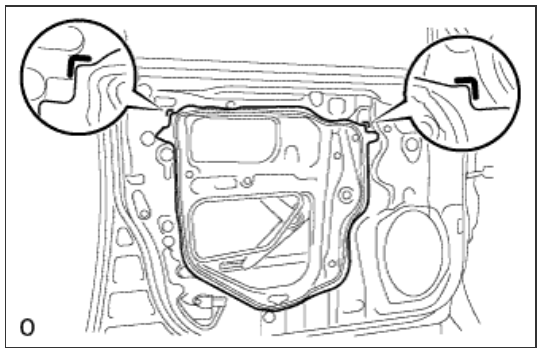


c. Connect the 2 connectors.

d. Attach the 9 clamps.

e. Install the bolt as shown in the illustration.


Torque:
8.4 N*m{ 86 kgf*cm , 74 in.*lbf }

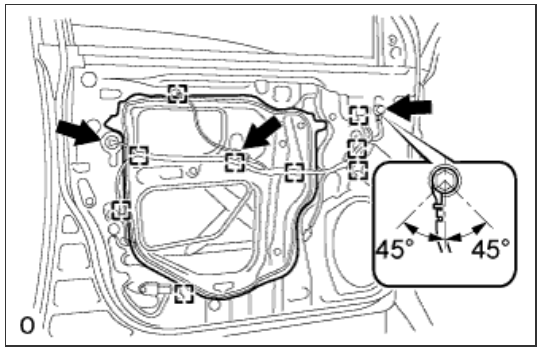

8. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

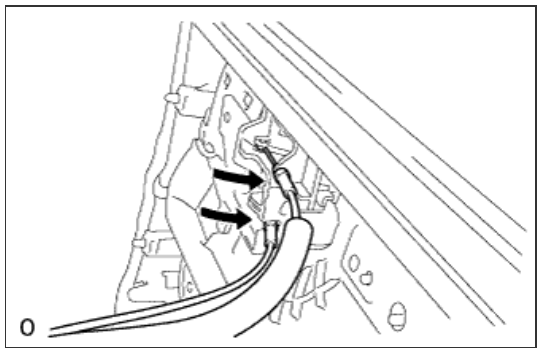

c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.


d. Install the 3 screws.

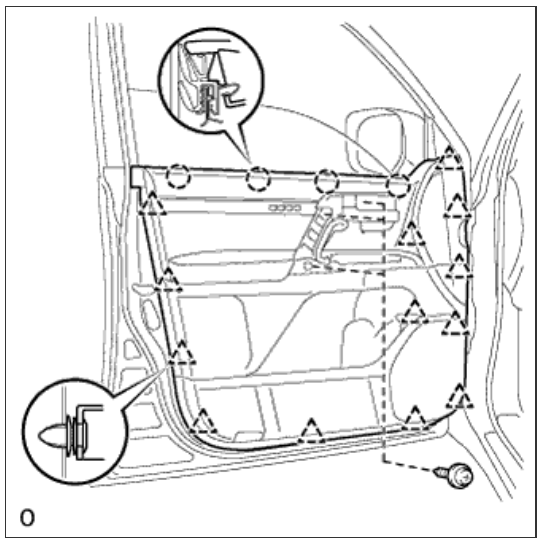

9. INSTALL COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)


a. Connect the connector.

b. Attach the claw of the courtesy light to the front door trim.

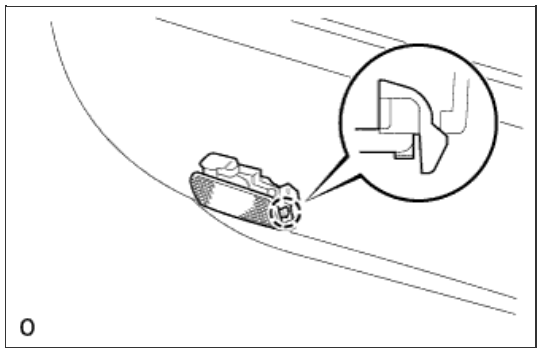


10. INSTALL DOOR ASSIST GRIP COVER LH

a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

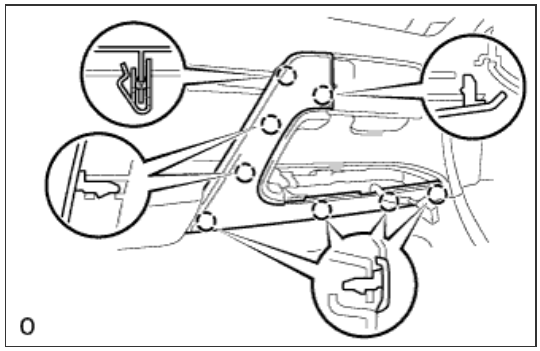

11. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH


a. Attach the 4 claws to install the bezel.

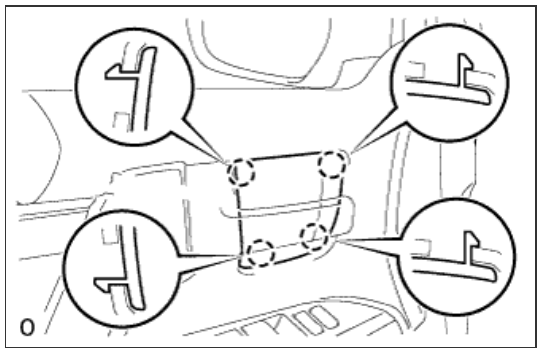

12. INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Connect the connector.

b. Attach the 5 claws to install the armrest base panel.

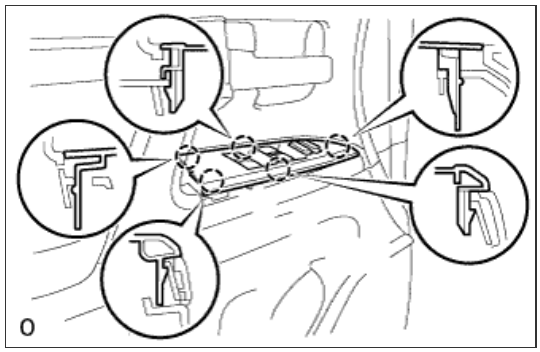

13. INSTALL FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

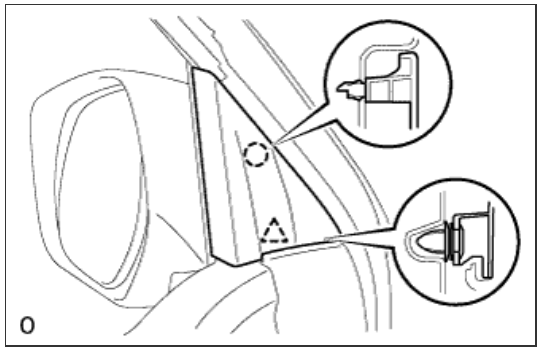

14. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

15. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

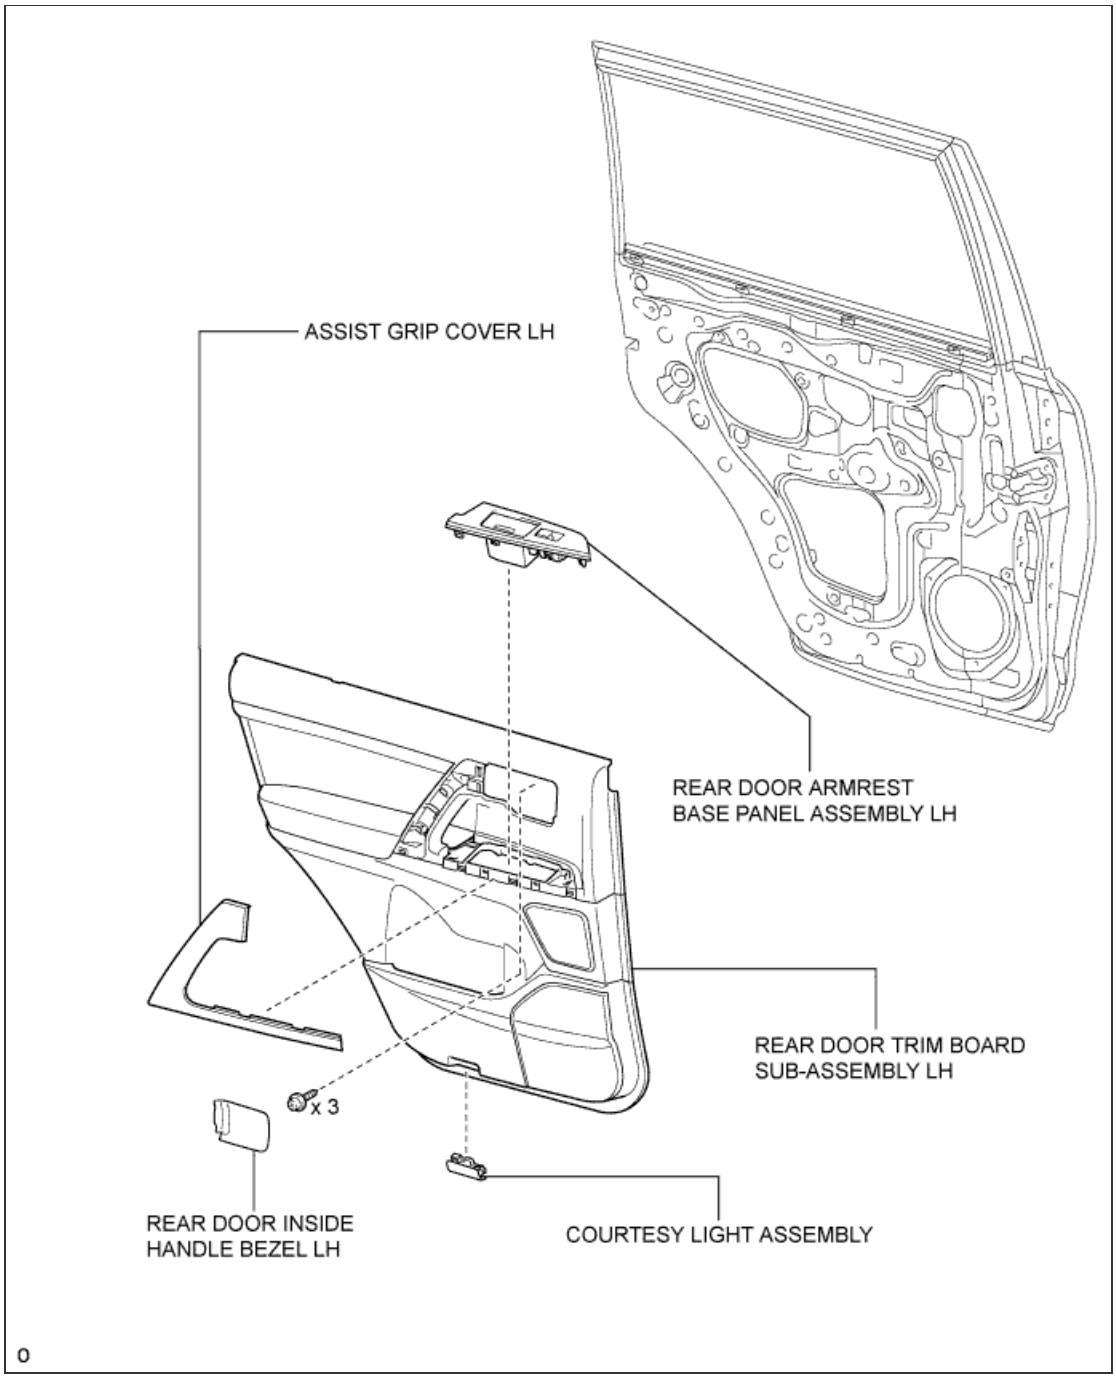

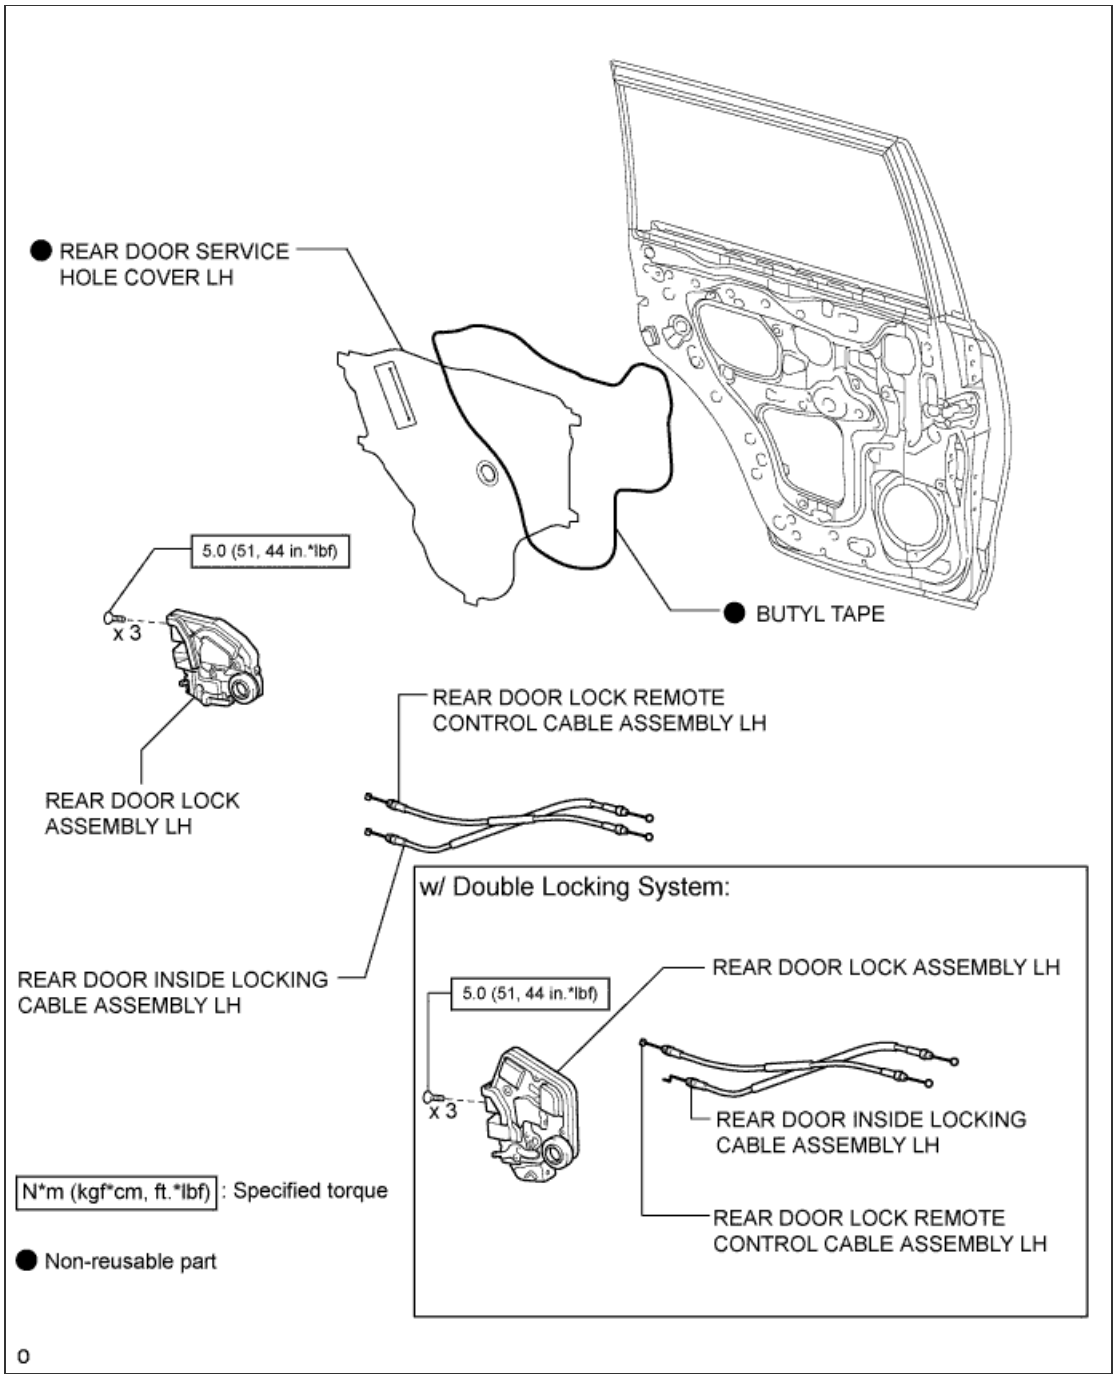
● REAR DOOR SERVICE HOLE COVER LH
● BUTYL TAPE
5.0 (51, 44 in.*lbf)
x 3
REAR DOOR LOCK ASSEMBLY LH
REAR DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH
REAR DOOR INSIDE LOCKING CABLE ASSEMBLY LH
w/ Double Locking System:
5.0 (51, 44 in.*lbf)
x 3
REAR DOOR LOCK ASSEMBLY LH
REAR DOOR INSIDE LOCKING CABLE ASSEMBLY LH
REAR DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
o

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Using a moulding remover, detach the 7 claws.

b. Disconnect the connector and remove the rear door armrest base panel and rear power window regulator switch assembly.

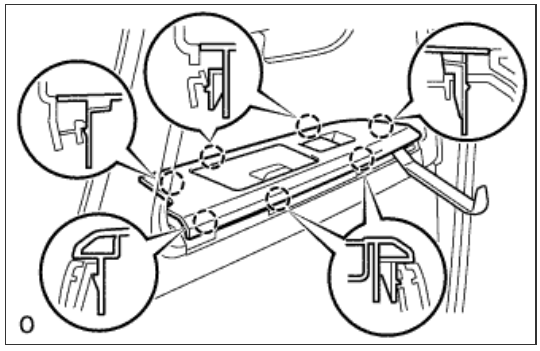


3. REMOVE REAR DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the bezel.


HINT:

Tape the screwdriver tip before use.

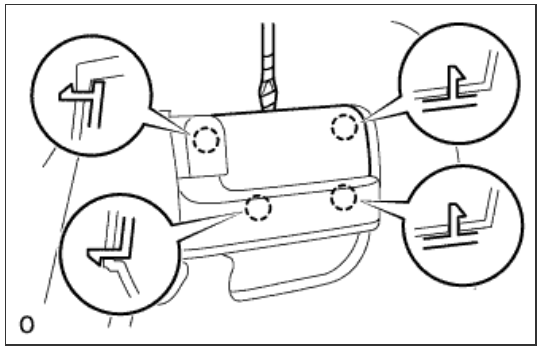

4. REMOVE ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 9 claws and remove the door assist grip cover.

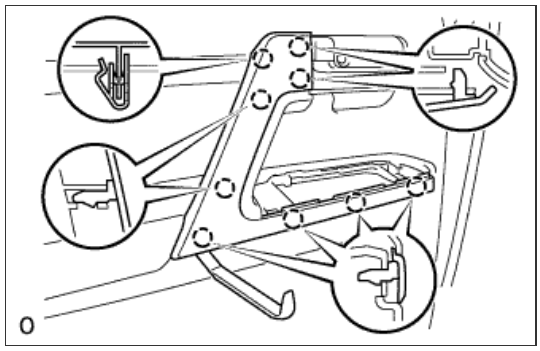

5. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

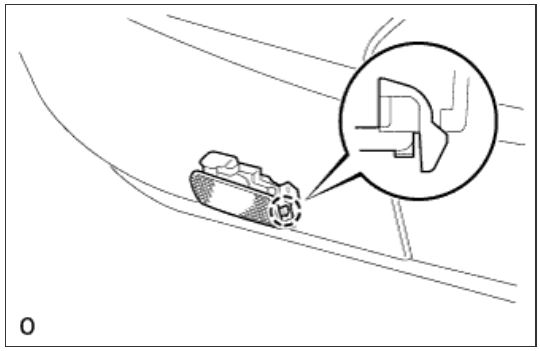


6. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 9 clips, 4 claws and trim board.

c. Disconnect the connector and remove the trim board.

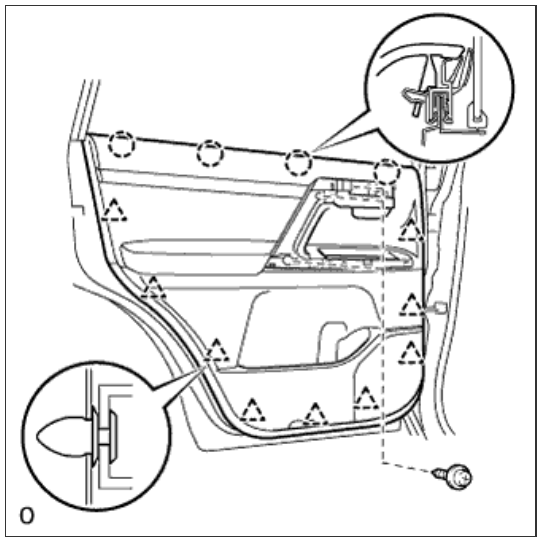

d. Disconnect the 2 cables from the inside handle.

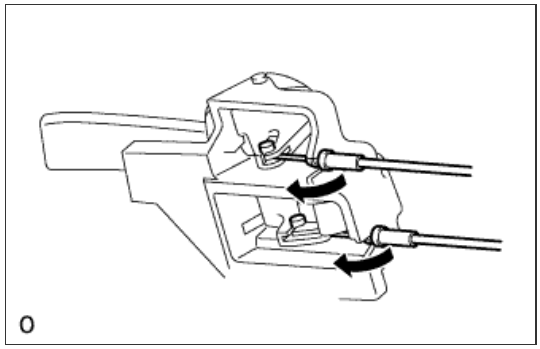

7. REMOVE REAR DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 6 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:

Remove the remaining tape on the door.

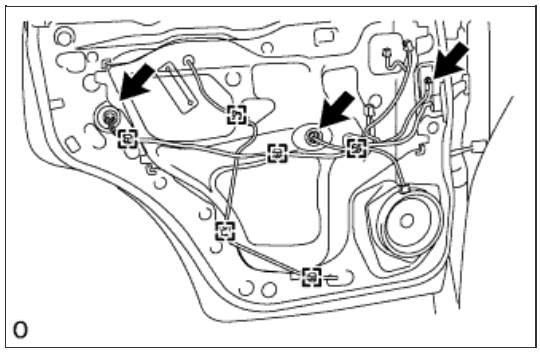


8. REMOVE REAR DOOR LOCK ASSEMBLY LH

a. Using a T30 "TORX" socket, remove the 3 screws and door lock.

NOTICE:

Be careful when removing the screws as the door lock may fall and become damaged.

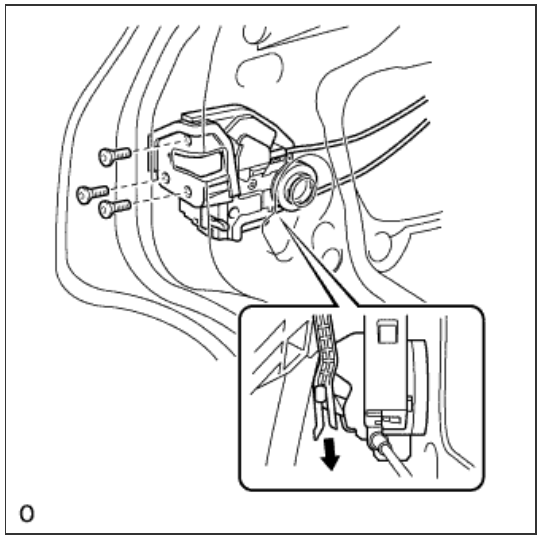


9. REMOVE REAR DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH


a. Using a screwdriver, detach the claw.

HINT:

Tape the screwdriver tip before use.

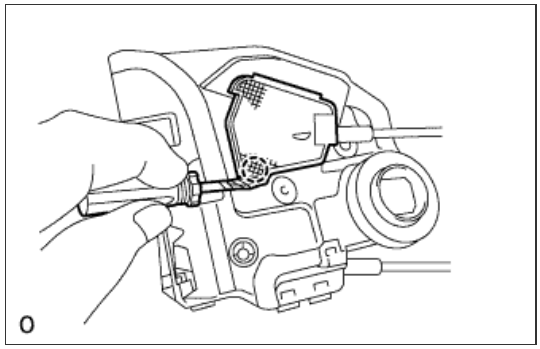

b. Remove the rear door lock remote control cable.

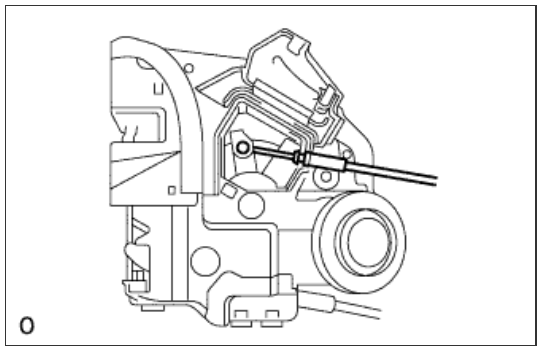


10. REMOVE REAR DOOR INSIDE LOCKING CABLE ASSEMBLY LH


a. Using a screwdriver, detach the 3 claws.

HINT:

Tape the screwdriver tip before use.

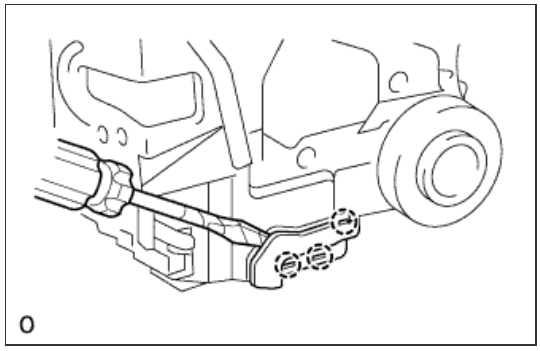

b. Remove the rear door inside locking cable.

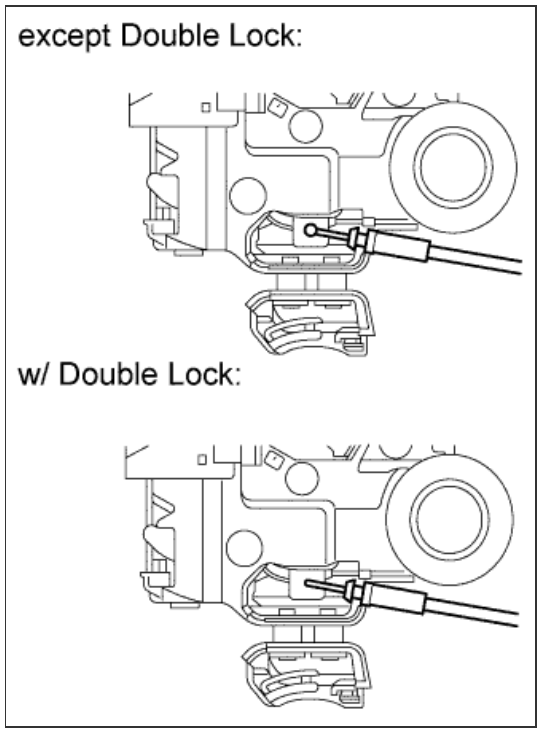

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Using a moulding remover, detach the 7 claws.

b. Disconnect the connector and remove the armrest base panel.

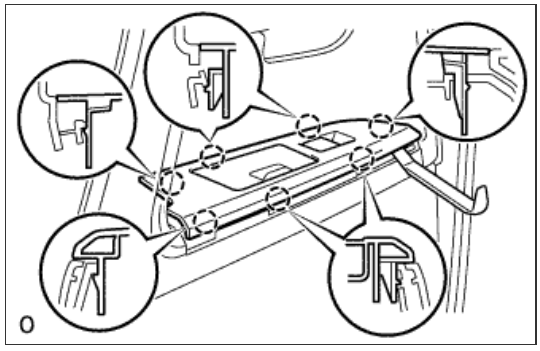

3. REMOVE REAR DOOR INSIDE HANDLE BEZEL LH


a. Using a screwdriver, detach the 4 claws and remove the bezel.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

*1	Protective tape

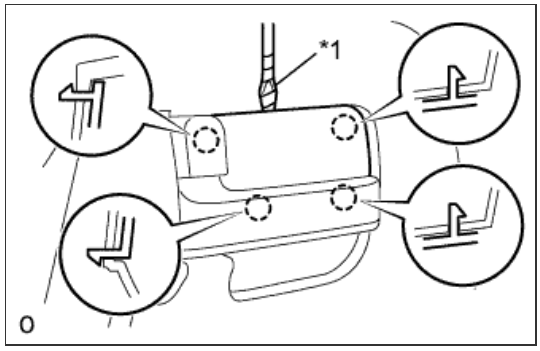

4. REMOVE ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 9 claws and remove the door assist grip cover.

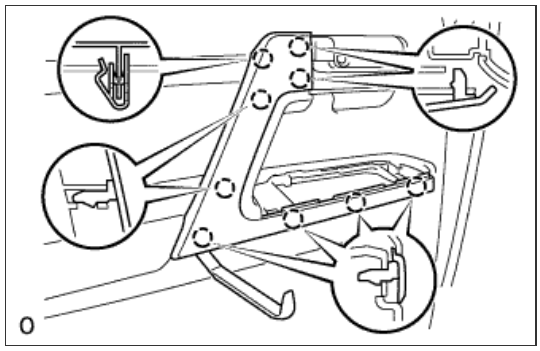

5. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

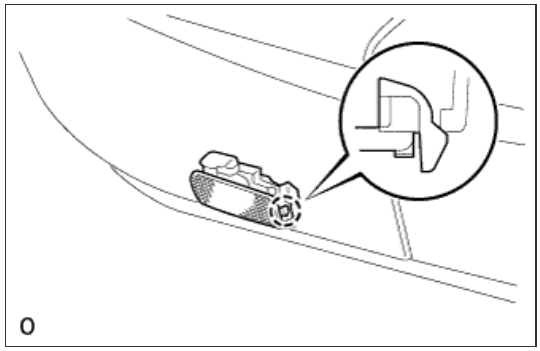


6. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 9 clips, 4 claws and trim board.

c. Disconnect the connector and remove the trim board.

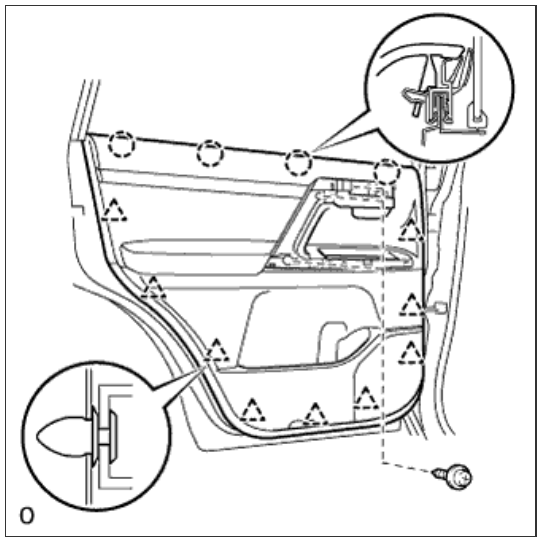

d. Disconnect the 2 cables from the inside handle.

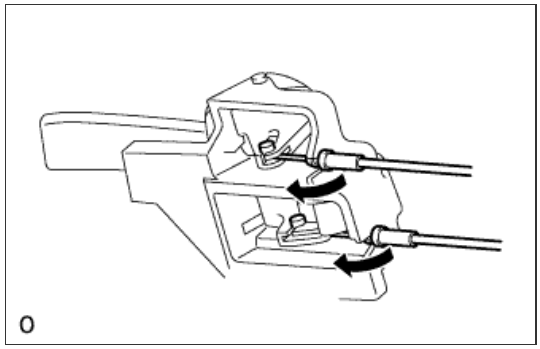

7. REMOVE REAR DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 6 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:

Remove the remaining tape on the door.

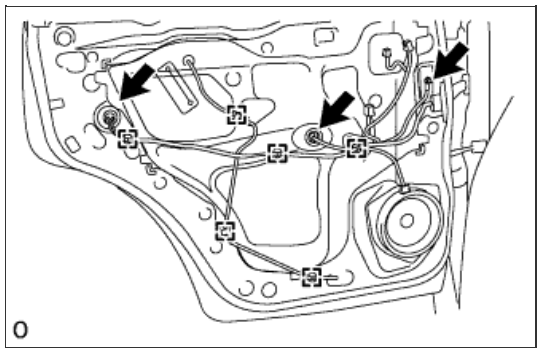


8. REMOVE REAR DOOR LOCK ASSEMBLY LH

a. Using a T30 "TORX" socket, remove the 3 screws and door lock.

NOTICE:

Be careful when removing the screws as the door lock may fall and become damaged.

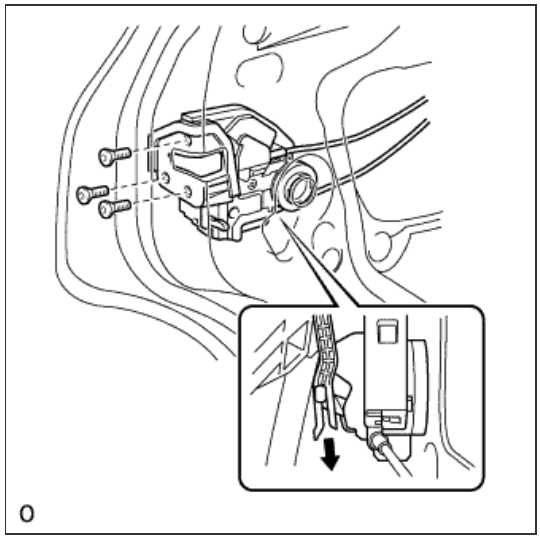

9. REMOVE REAR DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH


a. Using a screwdriver, detach the claw.

HINT:


Tape the screwdriver tip before use.

Text in Illustration

*1	Protective tape

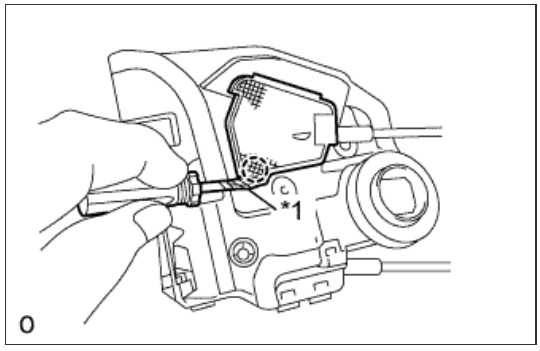

b. Remove the rear door lock remote control cable.

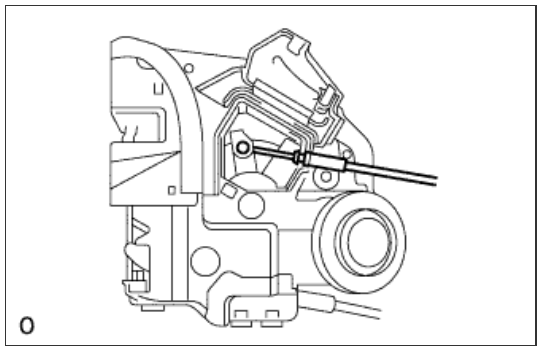

10. REMOVE REAR DOOR INSIDE LOCKING CABLE ASSEMBLY LH


a. Using a screwdriver, detach the 3 claws.

HINT:

Tape the screwdriver tip before use.

Text in Illustration


*1	Protective tape

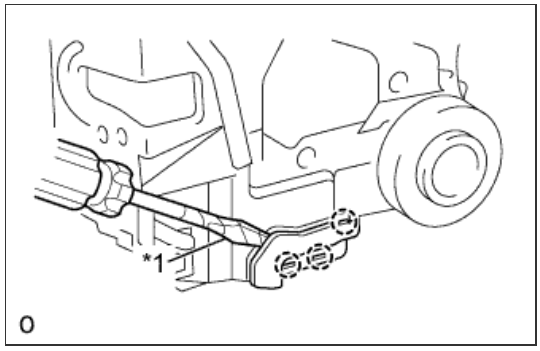

b. Remove the rear door inside locking cable.

Text in Illustration

*A	except Double Lock
*B	w/ Double Lock

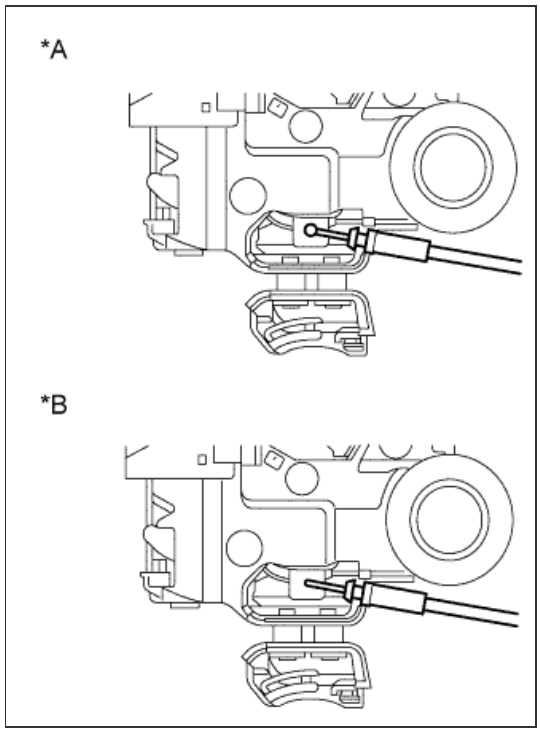

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Using a moulding remover, detach the 7 claws.

b. Disconnect the connector and remove the armrest base panel.

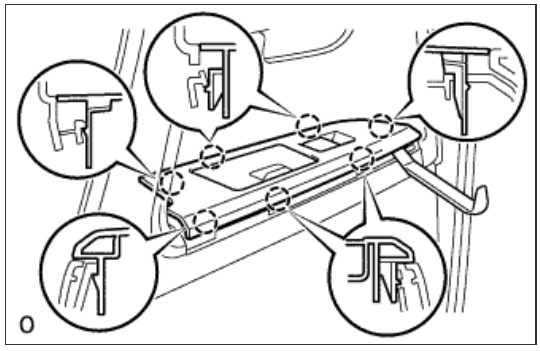

3. REMOVE REAR DOOR INSIDE HANDLE BEZEL LH


a. Using a screwdriver, detach the 4 claws and remove the bezel.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

*1	Protective tape

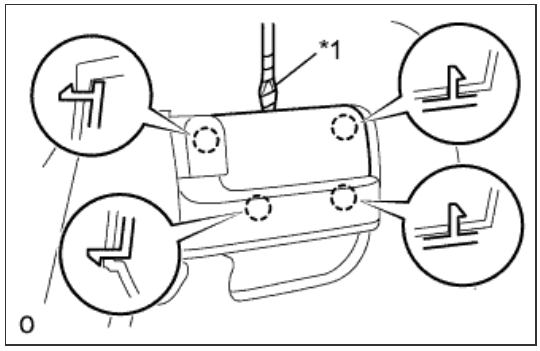

4. REMOVE ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 9 claws and remove the door assist grip cover.

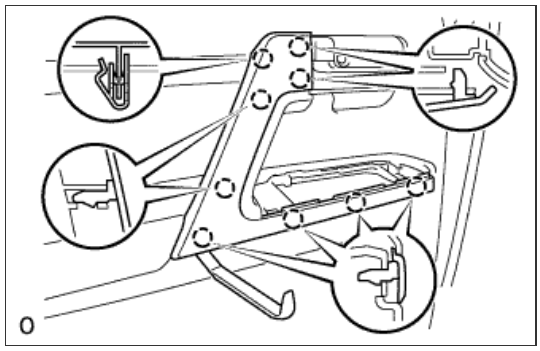

5. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

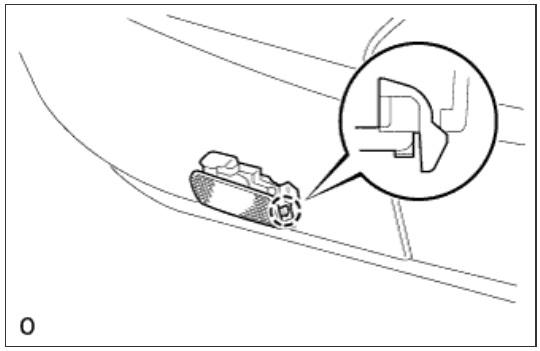


6. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 9 clips, 4 claws and trim board.

c. Disconnect the connector and remove the trim board.

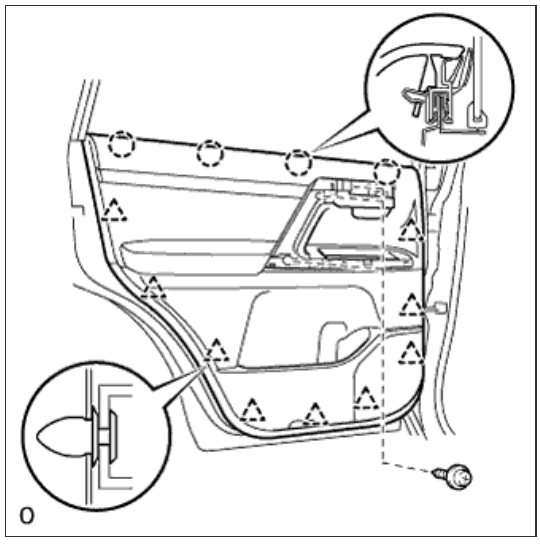

d. Disconnect the 2 cables from the inside handle.

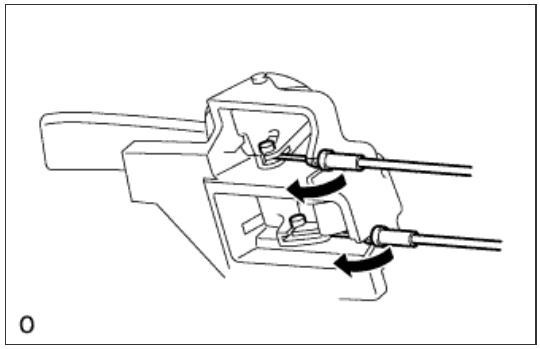

7. REMOVE REAR DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 6 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:

Remove the remaining tape on the door.

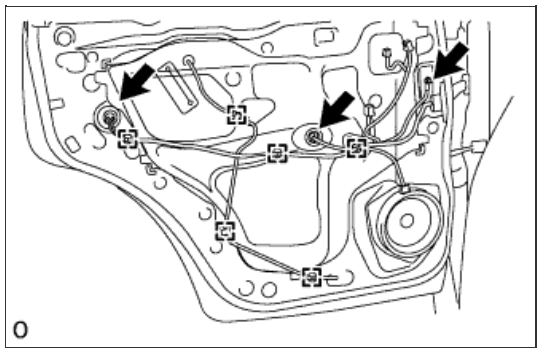


8. REMOVE REAR DOOR LOCK ASSEMBLY LH

a. Using a T30 "TORX" socket, remove the 3 screws and door lock.

NOTICE:

Be careful when removing the screws as the door lock may fall and become damaged.

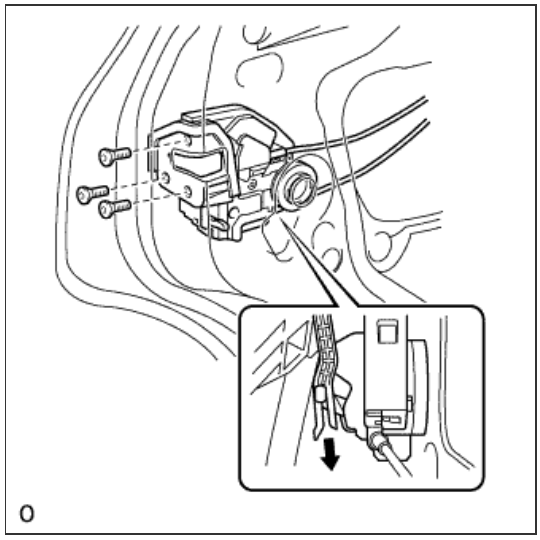

9. REMOVE REAR DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH


a. Using a screwdriver, detach the claw.

HINT:


Tape the screwdriver tip before use.

Text in Illustration

*1	Protective tape

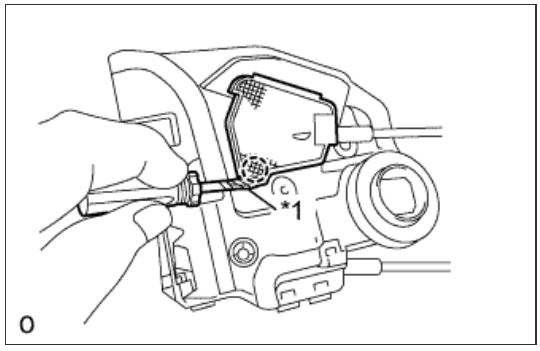

b. Remove the rear door lock remote control cable.

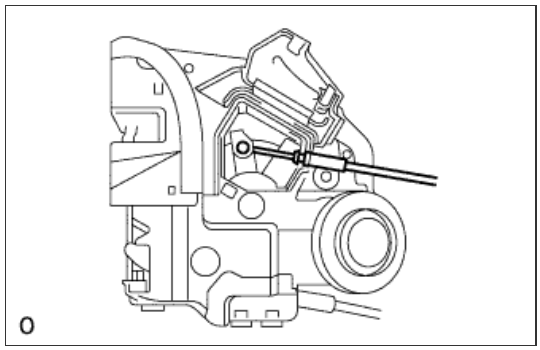

10. REMOVE REAR DOOR INSIDE LOCKING CABLE ASSEMBLY LH


a. Using a screwdriver, detach the 3 claws.

HINT:

Tape the screwdriver tip before use.

Text in Illustration


*1	Protective tape

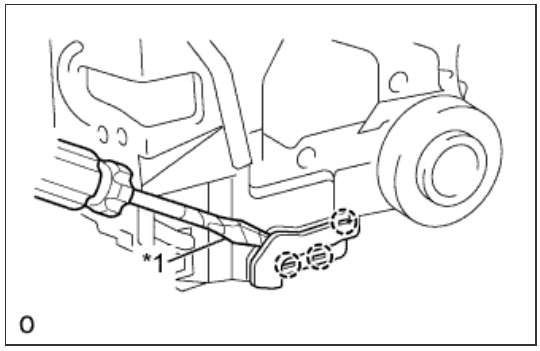

b. Remove the rear door inside locking cable.


Text in Illustration

*A	except Double Lock
*B	w/ Double Lock

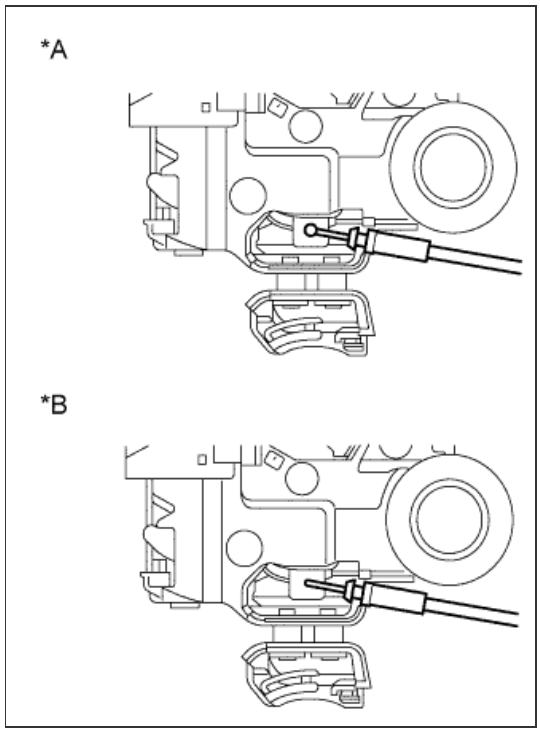

for Preparation Click here

1. INSPECT REAR DOOR LOCK ASSEMBLY LH (w/o Double Locking System)

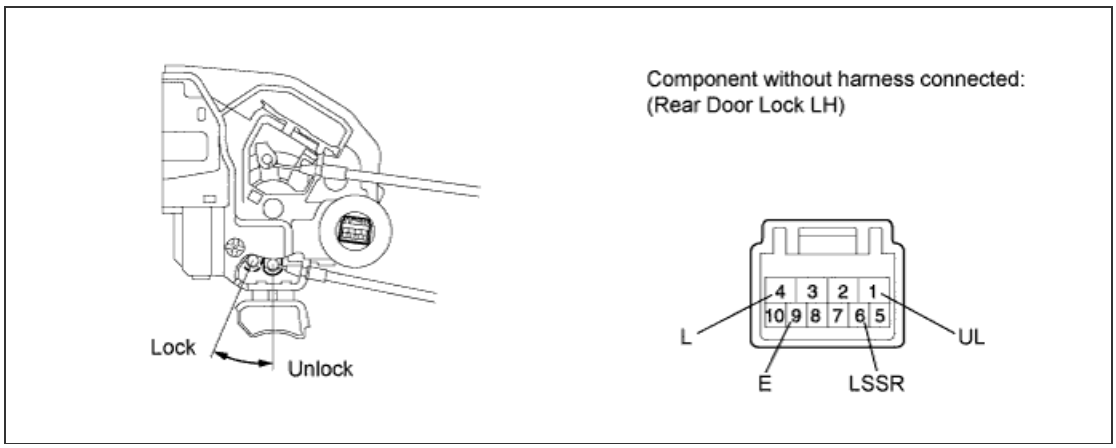

a. Check the door lock motor operation.

i. Apply battery voltage to the door lock motor connector and check the operation of the door lock motor.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 4 (L) Battery negative (-) → 1 (UL)	Lock
Battery positive (+) → 1 (UL) Battery negative (-) → 4 (L)	Unlock

If the result is not as specified, replace the door lock assembly.

b. Check the detection switch.


i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
6 (LSSR) - 9 (E)	Unlock	Below 1 Ω
6 (LSSR) - 9 (E)	Lock	10 kΩ or higher

If the result is not as specified, replace the door lock assembly.

2. INSPECT REAR DOOR LOCK ASSEMBLY LH (w/ Double Locking System)

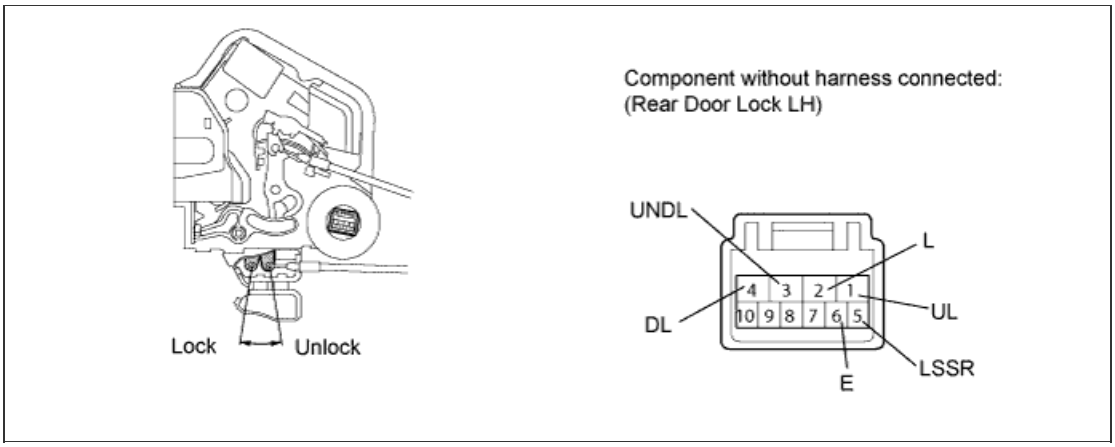

a. Check the door lock motor operation.

i. Apply battery voltage to the door lock motor connector and check the operation of the door lock motor.

OK

Measurement Condition	Specified Condition
Battery positive (+) → 2 (L) Battery negative (-) → 1 (UL)	Lock
Battery positive (+) → 1 (UL) Battery negative (-) → 2 (L)	Unlock
Battery positive (+) → 4 (DL) Battery negative (-) → 3 (UNDL)	Set
Battery positive (+) → 3 (UNDL) Battery negative (-) → 4 (DL)	Unset

If the result is not as specified, replace the door lock assembly.

b. Check the detection switch.


i. Measure the resistance according to the value(s) in the table below.

Stan ■ Resistance:

Tester Connection	Switch Condition	Specified Condition
5 (LSSR) - 6 (E)	Unlock	Below 1 Ω
5 (LSSR) - 6 (E)	Lock	10 kΩ or higher

If the result is not as specified, replace the door lock assembly.

3. INSPECT REAR DOOR LOCK ASSEMBLY RH (w/o Double Locking System)

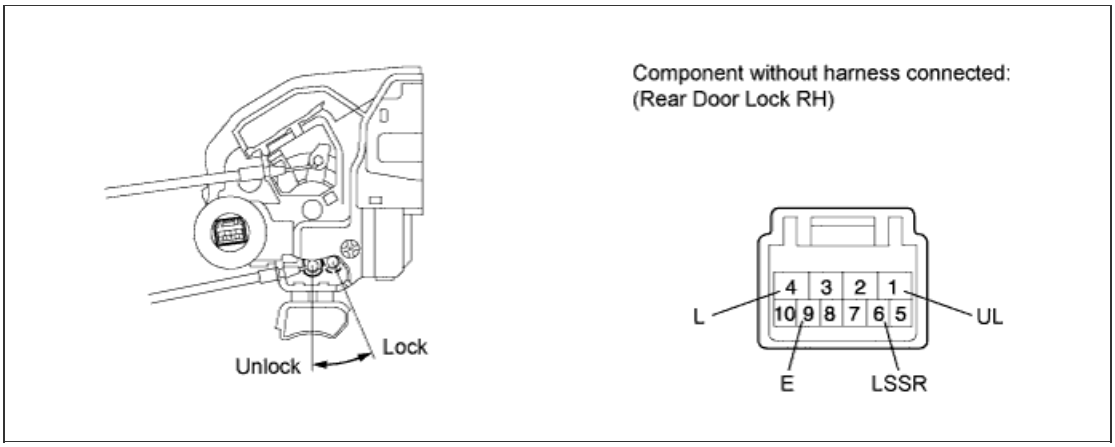

a. Check the door lock motor operation.

i. Apply battery voltage to the door lock motor connector and check the operation of the door lock motor.

OK

Measurement Condition	Specified Condition
Battery positive (+) → 4 (L) Battery negative (-) → 1 (UL)	Lock
Battery positive (+) → 1 (UL) Battery negative (-) → 4 (L)	Unlock

If the result is not as specified, replace the door lock assembly.

b. Check the detection switch.


i. Measure the resistance according to the value(s) in the table below.

Stan a Resistance:

Tester Connection	Switch Condition	Specified Condition
6 (LSSR) - 9 (E)	Unlock	Below 1 Ω
6 (LSSR) - 9 (E)	Lock	10 kΩ or higher

If the result is not as specified, replace the door lock assembly.

4. INSPECT REAR DOOR LOCK ASSEMBLY RH (w/ Double Locking System)

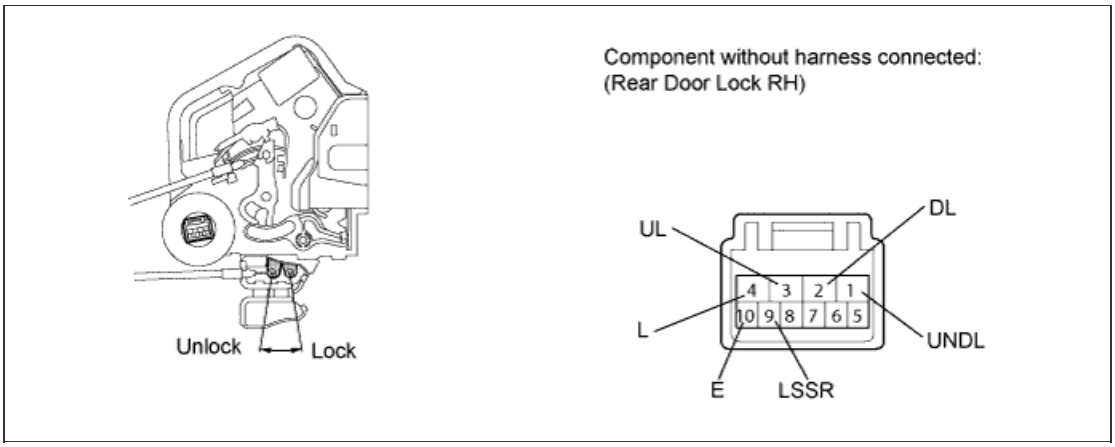

a. Check the door lock motor operation.

i. Apply battery voltage to the door lock motor connector and check the operation of the door lock motor.

OK

Measurement Condition	Specified Condition
Battery positive (+) → 4 (L) Battery negative (-) → 3 (UL)	Lock
Battery positive (+) → 3 (UL) Battery negative (-) → 4 (L)	Unlock
Battery positive (+) → 2 (DL) Battery negative (-) → 1 (UNDL)	Set
Battery positive (+) → 1 (UNDL) Battery negative (-) → 2 (DL)	Unset

If the result is not as specified, replace the door lock assembly.

b. Check the detection switch.

i. Measure the resistance according to the value(s) in the table below.

Stan a Resistance:

Tester Connection	Switch Condition	Specified Condition
6 (LSSR) - 9 (E)	Unlock	Below 1 Ω
6 (LSSR) - 9 (E)	Lock	10 kΩ or higher

If the result is not as specified, replace the door lock assembly.


for Preparation Click here

HINT:


- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL REAR DOOR INSIDE LOCKING CABLE ASSEMBLY LH

a. Install the rear door inside locking cable assembly.

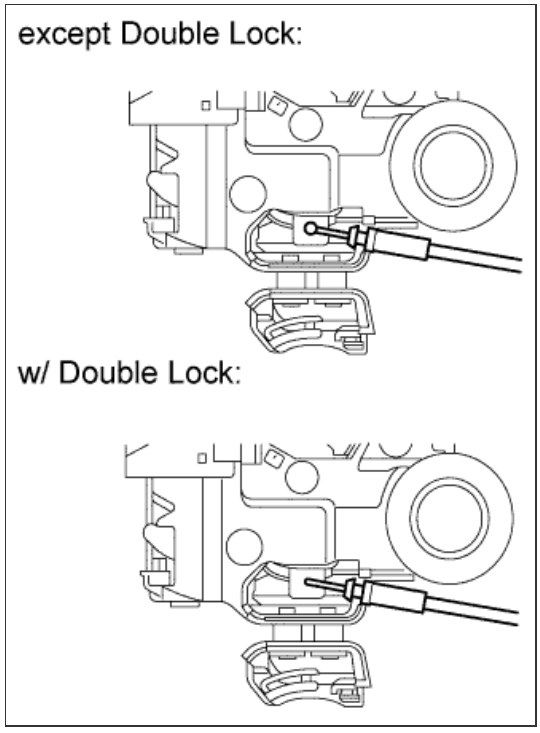


b. Attach the 3 claws.

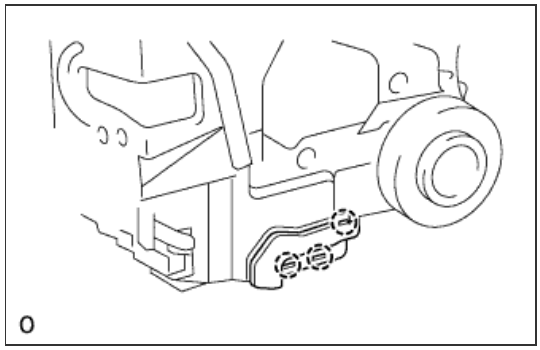


2. INSTALL REAR DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH

a. Install the rear door lock remote control cable assembly.

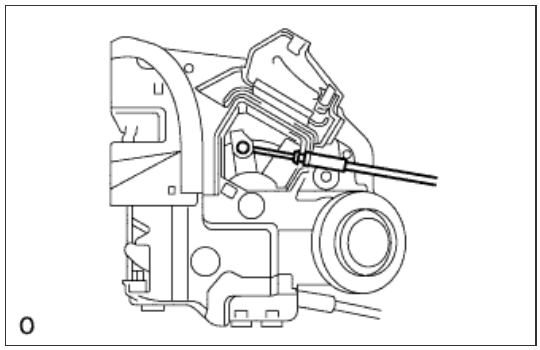

b. Attach the claw.

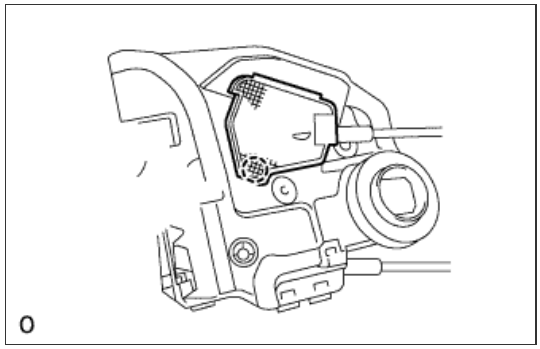

3. INSTALL REAR DOOR LOCK ASSEMBLY LH


a. Apply MP grease to the sliding parts of the rear door lock assembly.

b. Insert the rear door lock assembly to the rear door outside handle release plate, and set it to the rear door panel.

c. Make sure that the rear door outside handle frame release plate is securely connected to the rear door lock assembly.

d. Using a T30 "TORX" wrench, the 3 screws.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

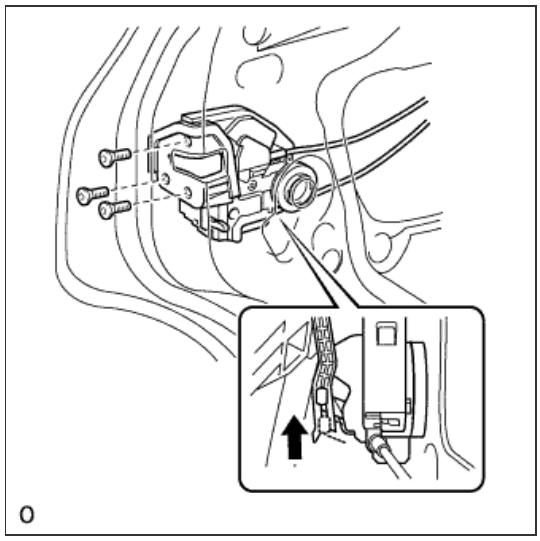


4. INSTALL REAR DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the rear door lock remote control cable and rear door inside locking cable through a new rear door service hole cover.


NOTICE:

- **When installing the service hole cover, pull the links and connectors through the service hole cover.**
- **There should be no wrinkles or folds after attaching the service hole cover.**
- **After attaching the service hole cover, check the sealing quality.**

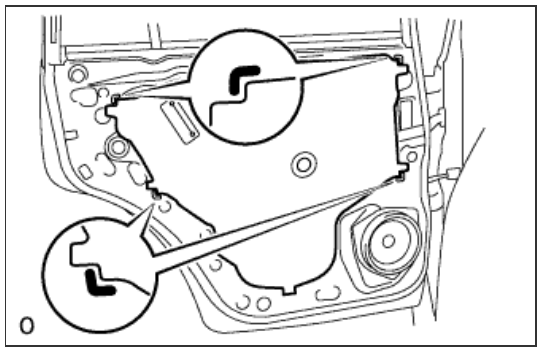


c. Connect the 2 connectors.

d. Attach the 6 clamps.

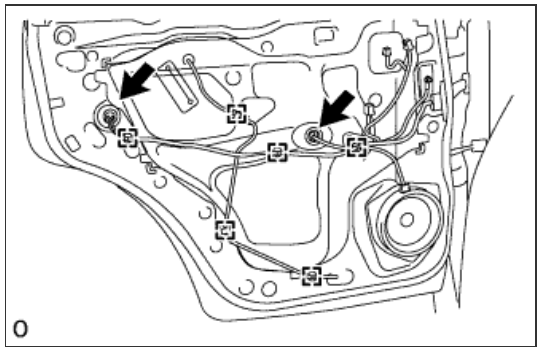

e. Install the bolt as shown in the illustration.


Torque:
8.4 N*m{ 86 kgf*cm , 74 in.*lbf }

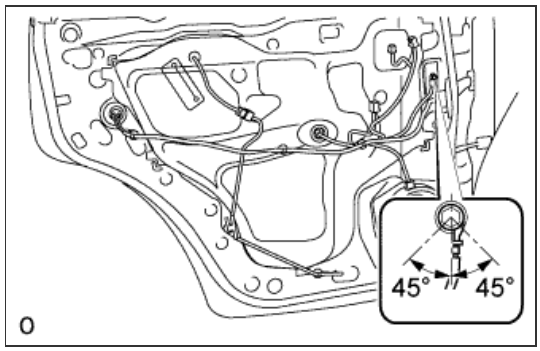

5. INSTALL COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Connect the connector.


b. Attach the claw of the courtesy light to the rear door trim.

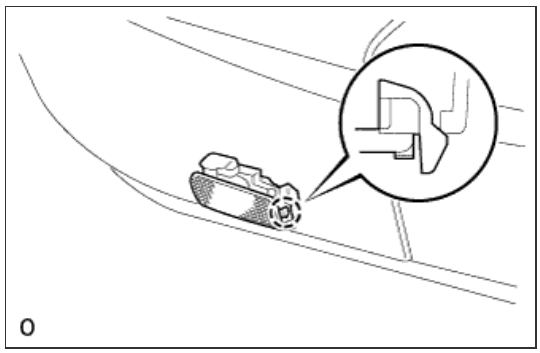

6. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the rear door lock remote control cable and rear door inside locking cable to the rear door inside handle sub-assembly.

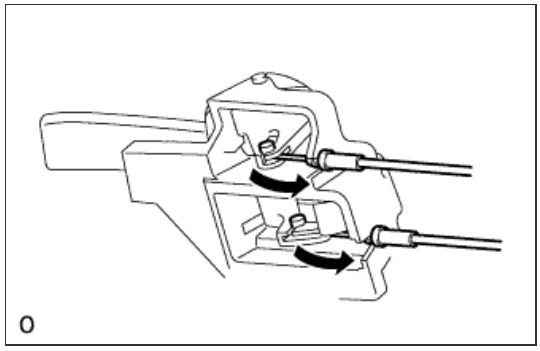


c. Attach the 4 claws and 9 clips to install the rear door trim board sub-assembly.

d. Install the 3 screws.

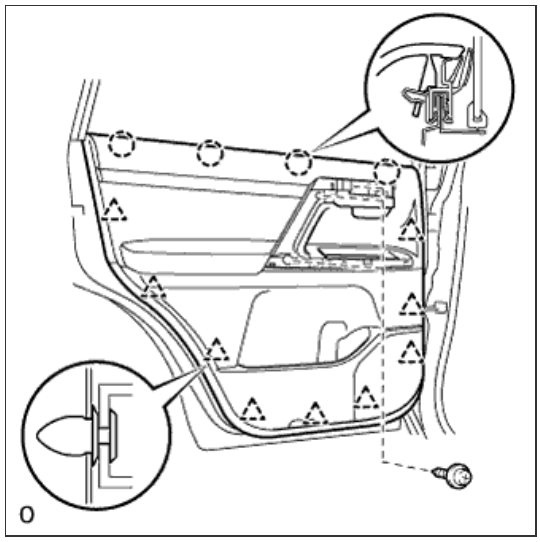


7. INSTALL ASSIST GRIP COVER LH

a. Attach the 9 claws to install the door assist grip cover to the door trim panel.

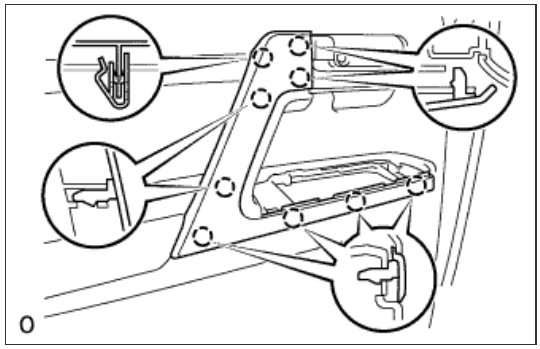

8. INSTALL REAR DOOR INSIDE HANDLE BEZEL LH


a. Attach the 4 claws to install the bezel.

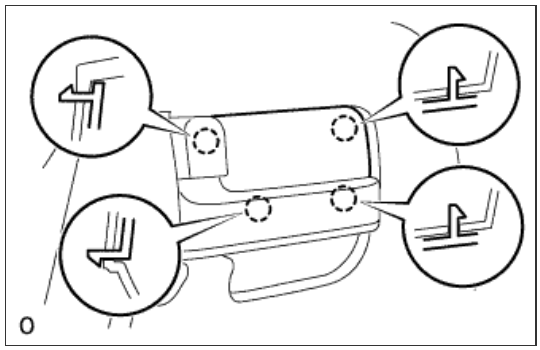

9. INSTALL REAR DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Connect the connector.

b. Attach the 7 claws to install the rear door armrest base panel.

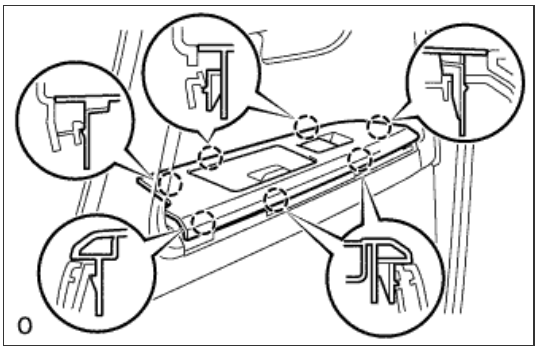

10. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

HINT:


- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL REAR DOOR INSIDE LOCKING CABLE ASSEMBLY LH


a. Install the rear door inside locking cable assembly.

Text in Illustration

*A	except Double Lock
*B	w/ Double Lock

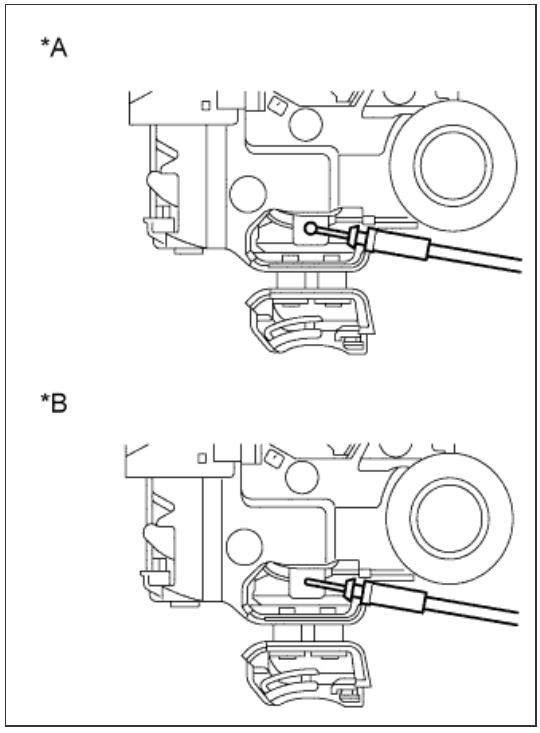


b. Attach the 3 claws.

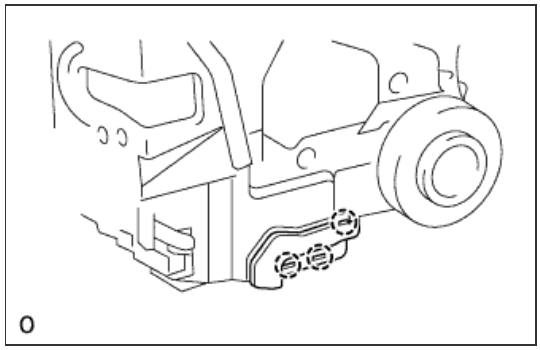


2. INSTALL REAR DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH

a. Install the rear door lock remote control cable assembly.

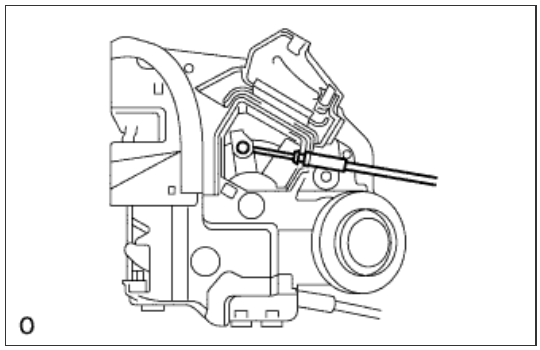

b. Attach the claw.

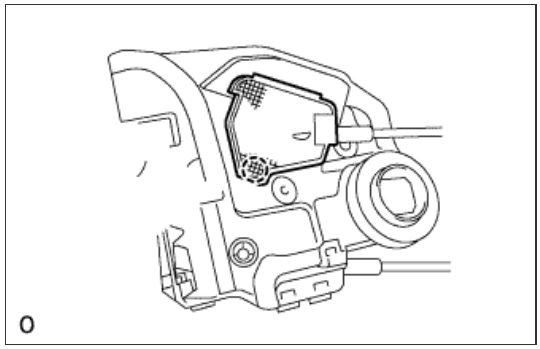

3. INSTALL REAR DOOR LOCK ASSEMBLY LH


a. Apply MP grease to the sliding parts of the rear door lock assembly.

b. Insert the rear door lock assembly to the rear door outside handle release plate, and set it to the rear door panel.

c. Make sure that the rear door outside handle frame release plate is securely connected to the rear door lock assembly.

d. Using a T30 "TORX" wrench, the 3 screws.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

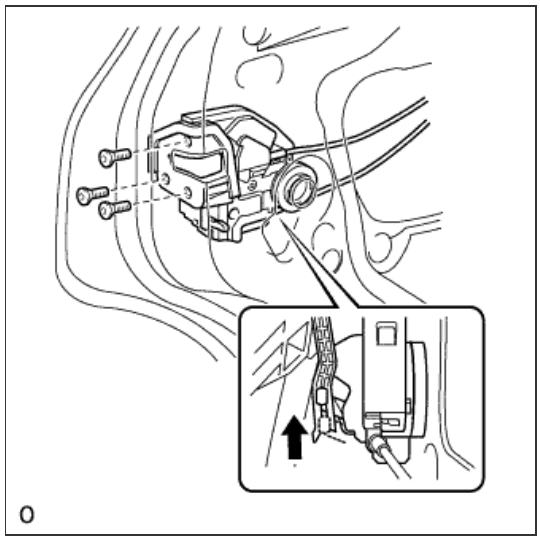


4. INSTALL REAR DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the rear door lock remote control cable and rear door inside locking cable through a new rear door service hole cover.


NOTICE:

- **When installing the service hole cover, pull the links and connectors through the service hole cover.**
- **There should be no wrinkles or folds after attaching the service hole cover.**
- **After attaching the service hole cover, check the sealing quality.**

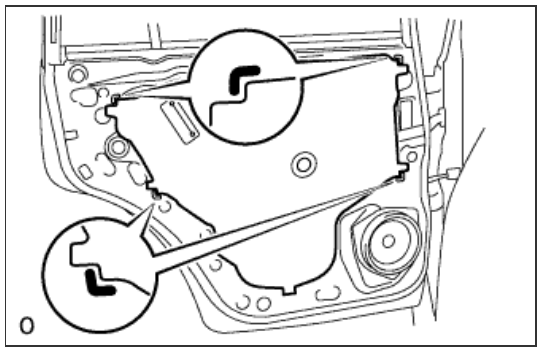


c. Connect the 2 connectors.

d. Attach the 6 clamps.

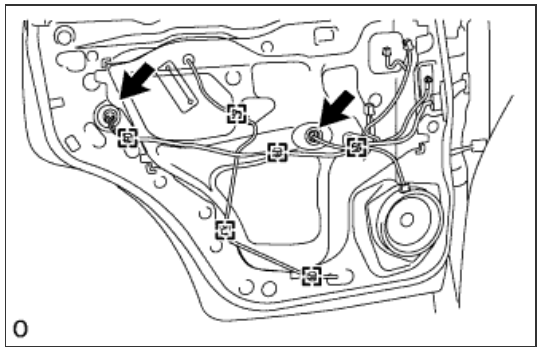

e. Install the bolt as shown in the illustration.


Torque:
8.4 N*m{ 86 kgf*cm , 74 in.*lbf }

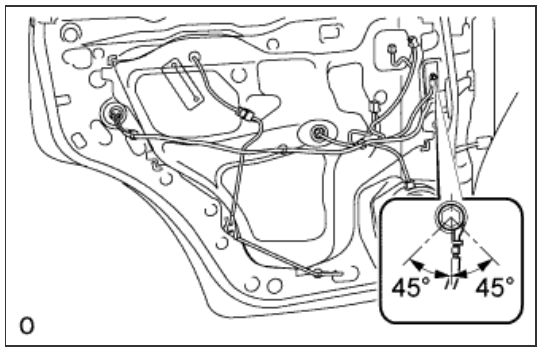

5. INSTALL COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Connect the connector.


b. Attach the claw of the courtesy light to the rear door trim.

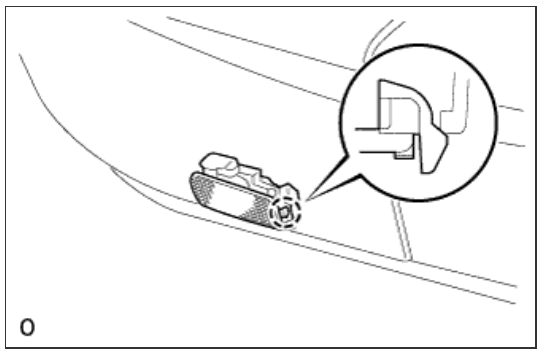

6. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the rear door lock remote control cable and rear door inside locking cable to the rear door inside handle sub-assembly.

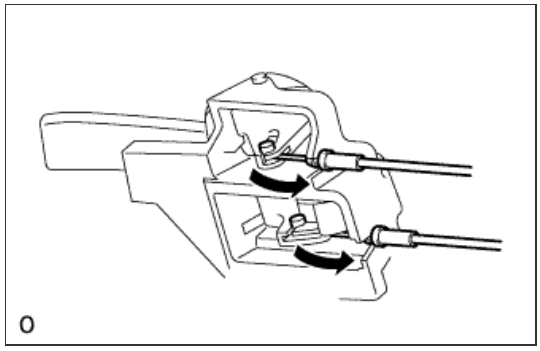


c. Attach the 4 claws and 9 clips to install the rear door trim board sub-assembly.

d. Install the 3 screws.

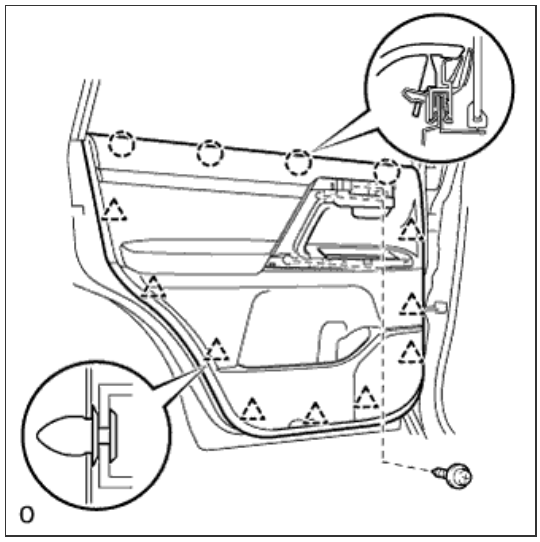


7. INSTALL ASSIST GRIP COVER LH

a. Attach the 9 claws to install the door assist grip cover to the door trim panel.

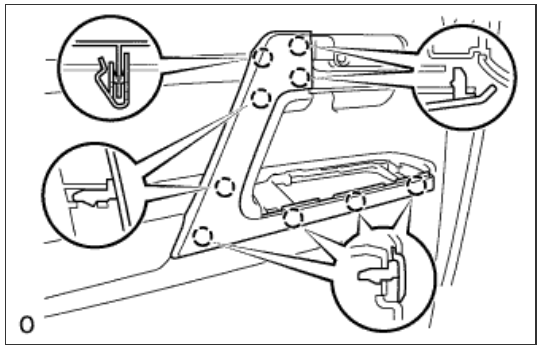

8. INSTALL REAR DOOR INSIDE HANDLE BEZEL LH


a. Attach the 4 claws to install the bezel.

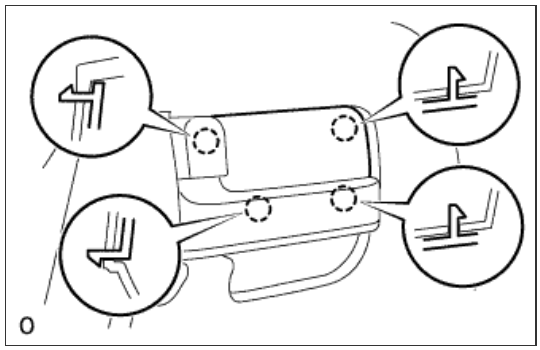

9. INSTALL REAR DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Connect the connector.

b. Attach the 7 claws to install the armrest base panel.

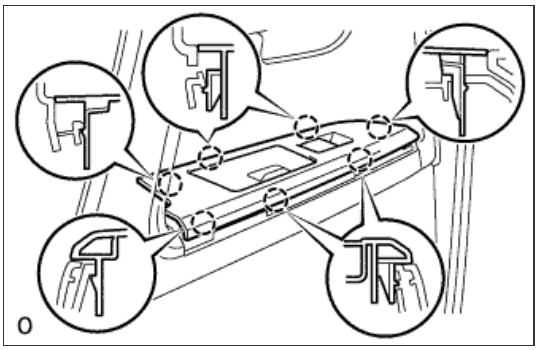

10. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

HINT:


- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL REAR DOOR INSIDE LOCKING CABLE ASSEMBLY LH


a. Install the rear door inside locking cable assembly.

Text in Illustration

*A	except Double Lock
*B	w/ Double Lock

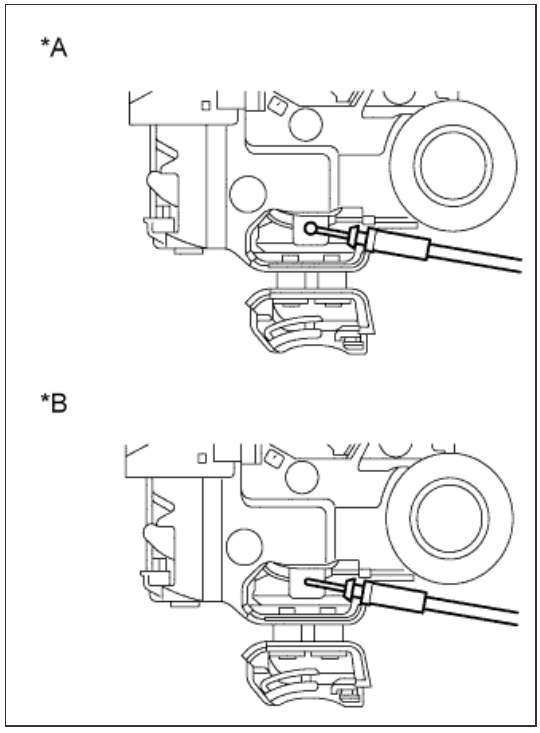


b. Attach the 3 claws.

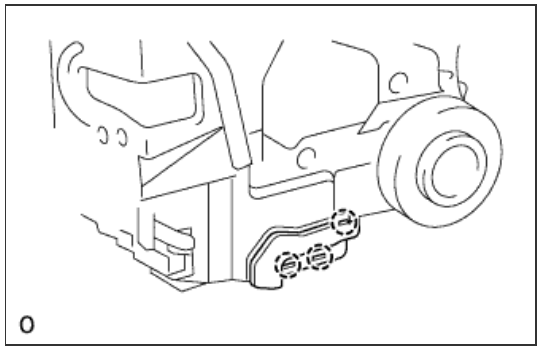


2. INSTALL REAR DOOR LOCK REMOTE CONTROL CABLE ASSEMBLY LH

a. Install the rear door lock remote control cable assembly.

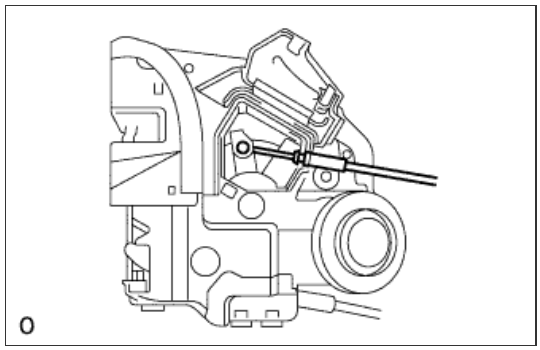

b. Attach the claw.

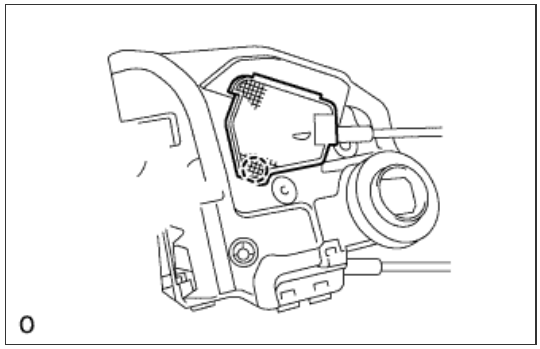

3. INSTALL REAR DOOR LOCK ASSEMBLY LH


a. Apply MP grease to the sliding parts of the rear door lock assembly.

b. Insert the rear door lock assembly to the rear door outside handle release plate, and set it to the rear door panel.

c. Make sure that the rear door outside handle frame release plate is securely connected to the rear door lock assembly.

d. Using a T30 "TORX" wrench, the 3 screws.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

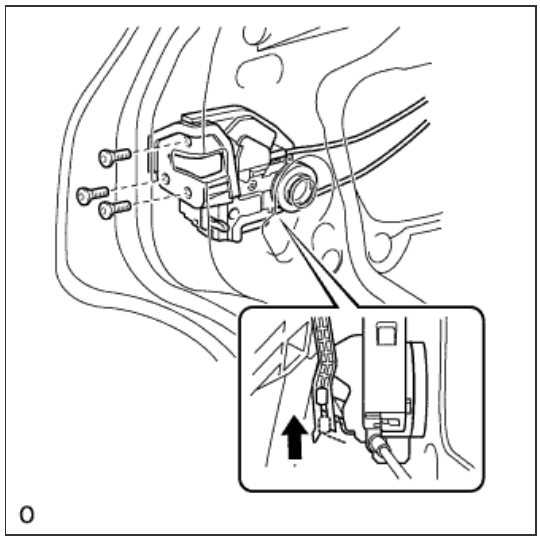


4. INSTALL REAR DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the rear door lock remote control cable and rear door inside locking cable through a new rear door service hole cover.


NOTICE:

- **When installing the service hole cover, pull the links and connectors through the service hole cover.**
- **There should be no wrinkles or folds after attaching the service hole cover.**
- **After attaching the service hole cover, check the sealing quality.**

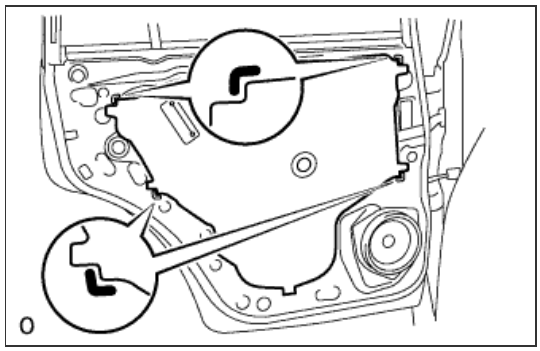


c. Connect the 2 connectors.

d. Attach the 6 clamps.

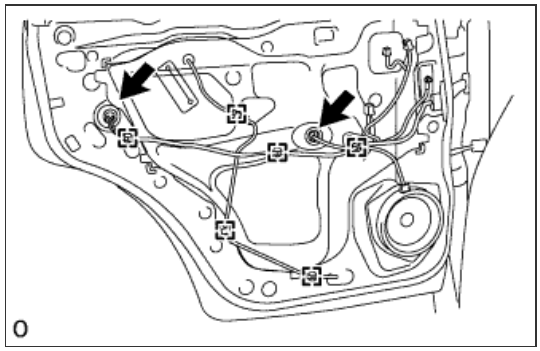

e. Install the bolt as shown in the illustration.


Torque:
8.4 N*m{ 86 kgf*cm , 74 in.*lbf }

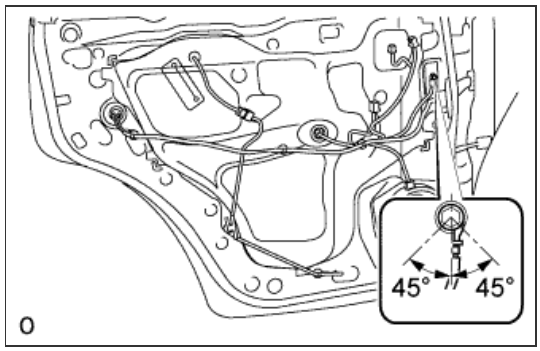

5. INSTALL COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Connect the connector.


b. Attach the claw of the courtesy light to the rear door trim.

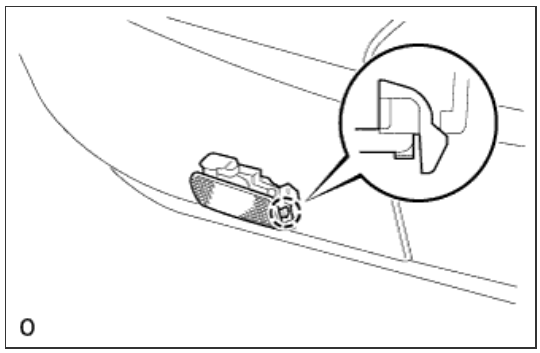

6. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the rear door lock remote control cable and rear door inside locking cable to the rear door inside handle sub-assembly.

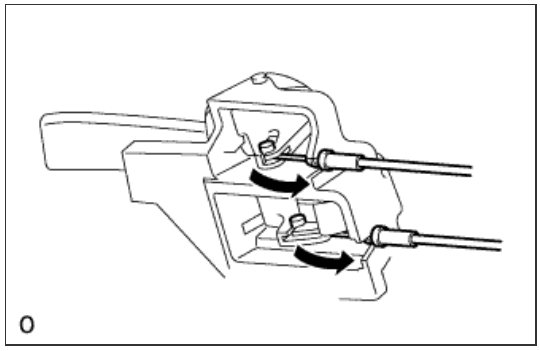


c. Attach the 4 claws and 9 clips to install the rear door trim board sub-assembly.

d. Install the 3 screws.

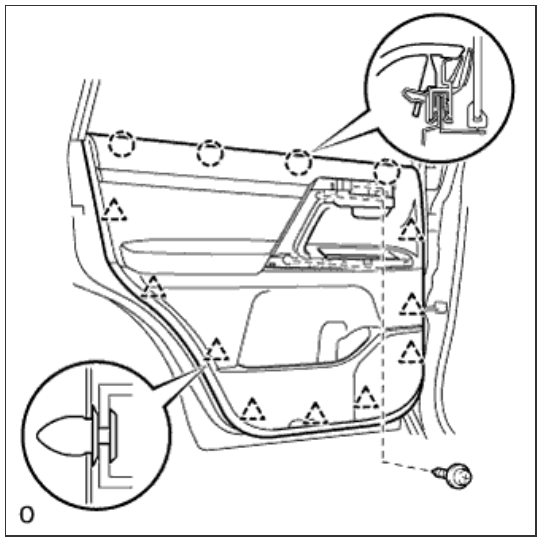


7. INSTALL ASSIST GRIP COVER LH

a. Attach the 9 claws to install the door assist grip cover to the door trim panel.

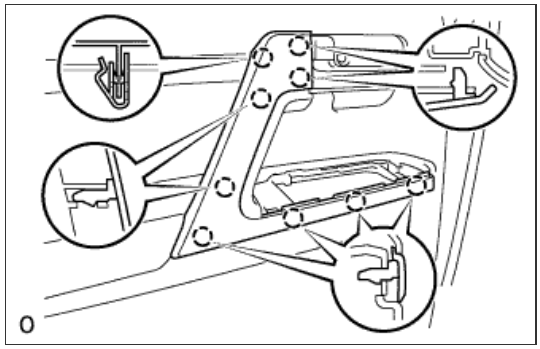

8. INSTALL REAR DOOR INSIDE HANDLE BEZEL LH


a. Install the rear door inside handle bezel to the trim board with the 6 screws.

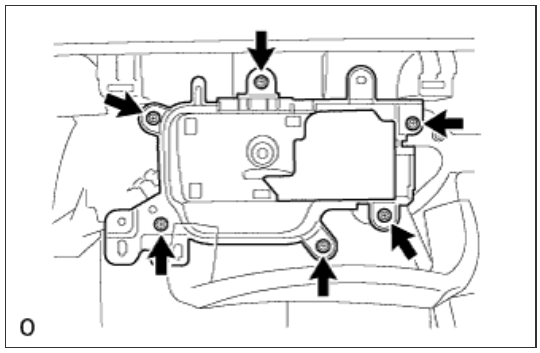

9. INSTALL REAR DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Connect the connector.

b. Attach the 7 claws to install the armrest base panel.

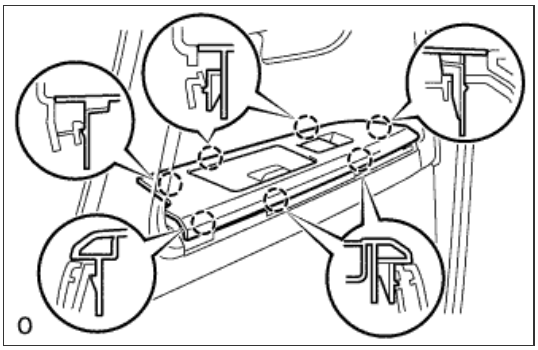


10. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


for Preparation Click here

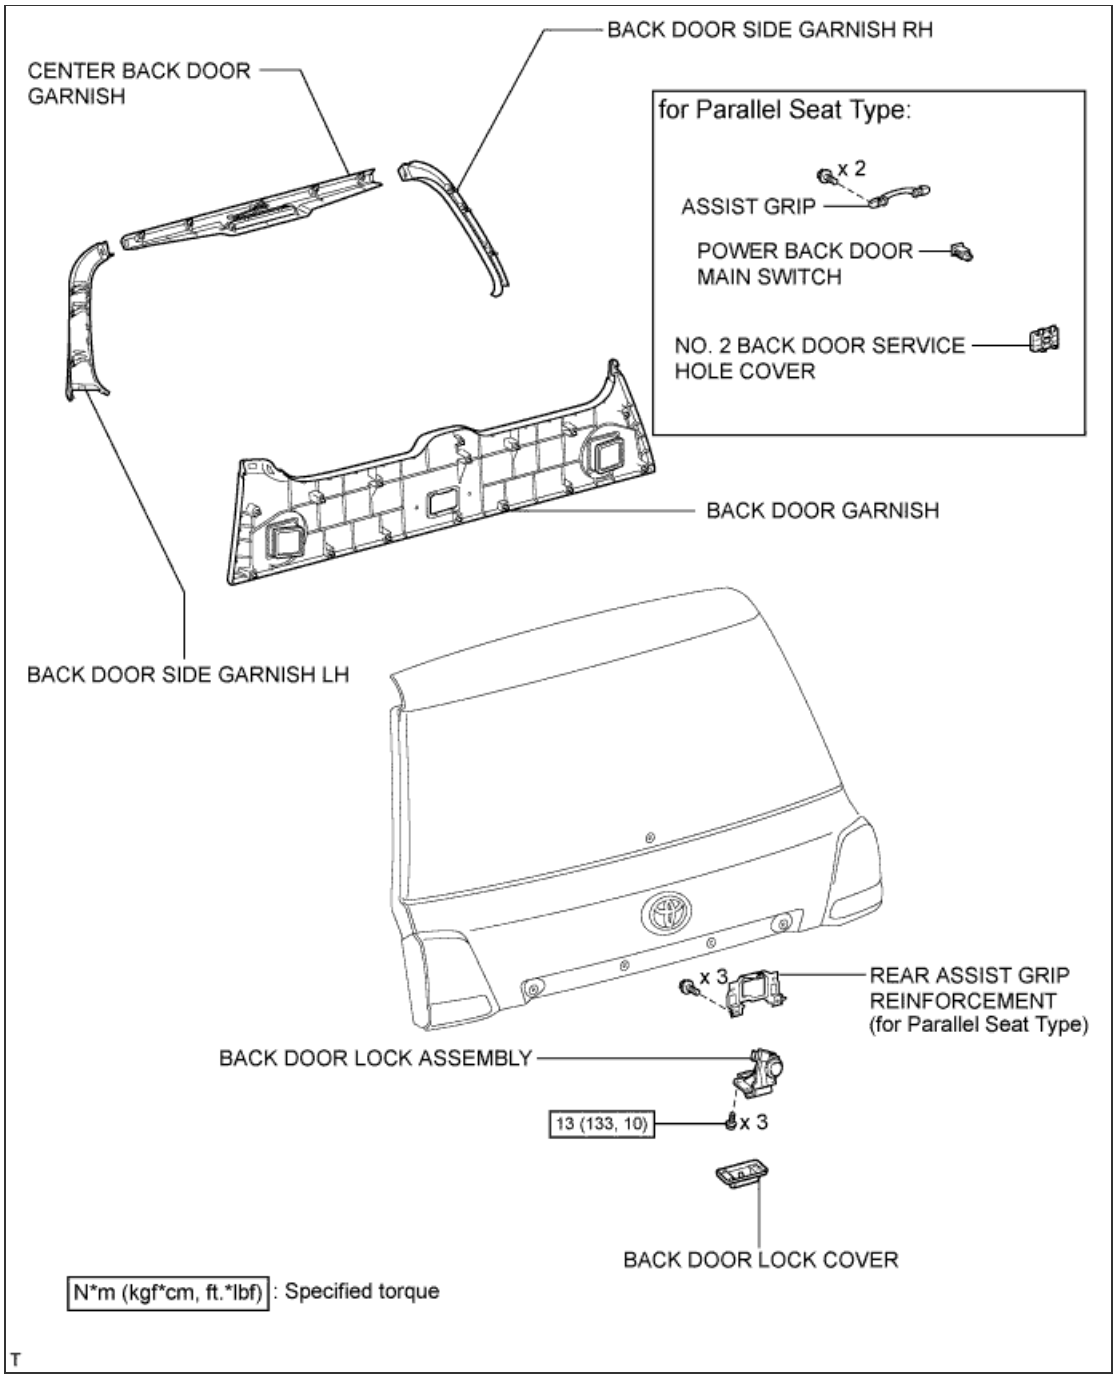

for Preparation Click here


1. REMOVE CENTER BACK DOOR GARNISH

a. Detach the 5 clips and 2 claws, and remove the back door garnish.

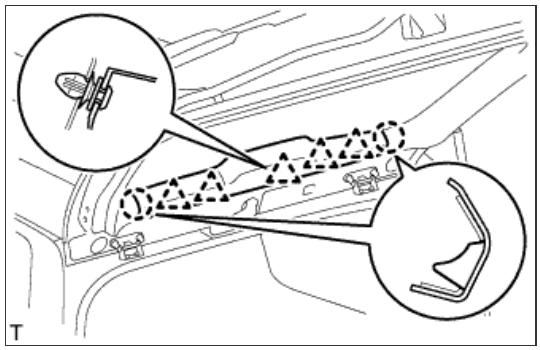

2. REMOVE BACK DOOR SIDE GARNISH LH

a. Detach the 3 clips and remove the back door side garnish.

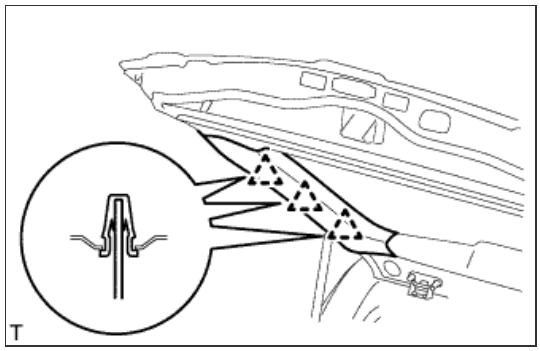


3. REMOVE BACK DOOR SIDE GARNISH RH

HINT:

Use the same procedures described for the LH side.

4. REMOVE ASSIST GRIP (for Parallel Seat Type)


a. Remove the 2 screws and assist grip.

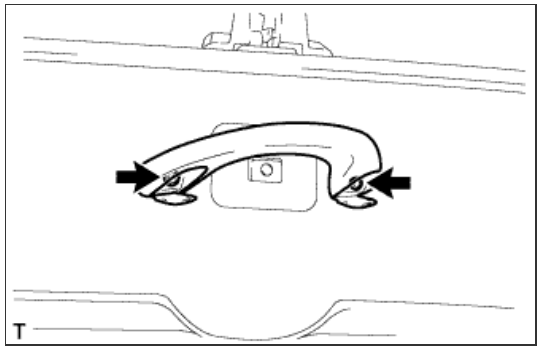

5. REMOVE NO. 2 BACK DOOR SERVICE HOLE COVER (for Parallel Seat Type)


a. Using a screwdriver, detach the 4 claws and remove the back door service hole cover.

b. Disconnect connector.

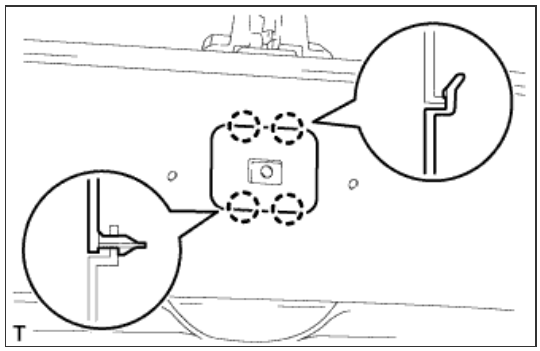

6. REMOVE POWER BACK DOOR MAIN SWITCH (for Parallel Seat Type)

a. Detach the 2 claws and remove the power back door main switch.

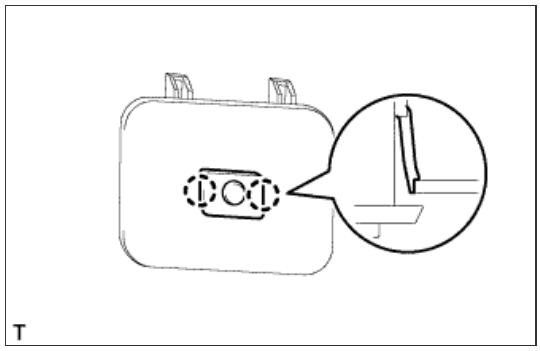


7. REMOVE BACK DOOR GARNISH

a. Using a screwdriver, detach the 14 clips and remove the back door garnish.

HINT:


Tape the screwdriver tip before use.

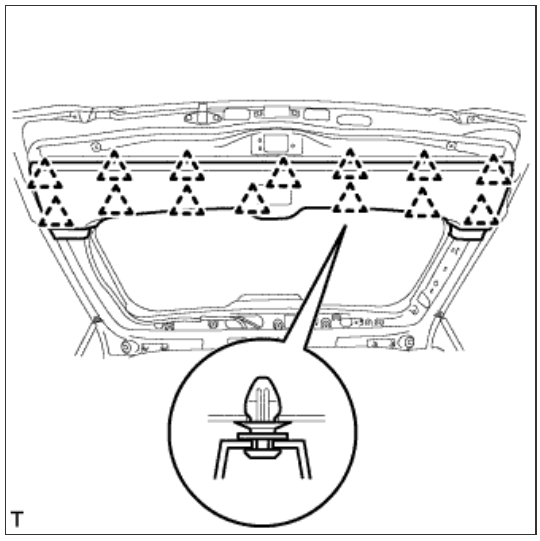

8. REMOVE REAR ASSIST GRIP REINFORCEMENT (for Parallel Seat Type)


a. Remove the 3 bolts.

b. Detach the 2 claws and remove the rear assist grip reinforcement.

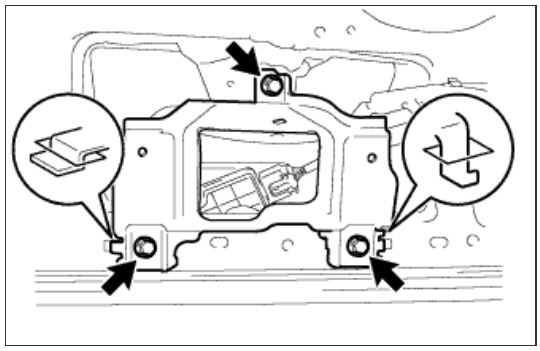

9. REMOVE BACK DOOR LOCK COVER


a. Detach the 4 claws and remove the cover.

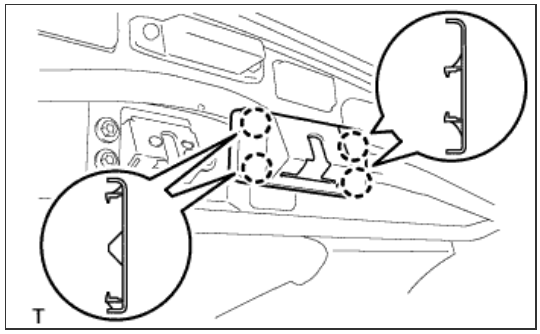

10. REMOVE BACK DOOR LOCK ASSEMBLY

a. Disconnect the connector.


b. Remove the 3 bolts and door lock.

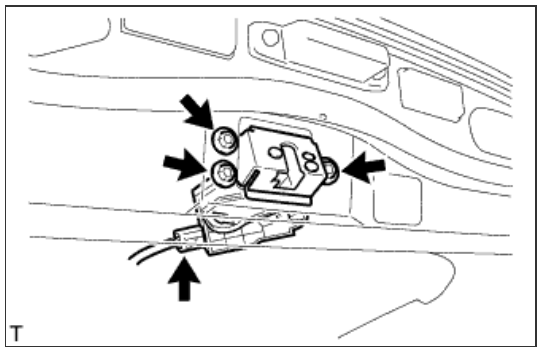

for Preparation Click here


1. REMOVE CENTER BACK DOOR GARNISH

a. Detach the 5 clips and 2 claws, and remove the back door garnish.

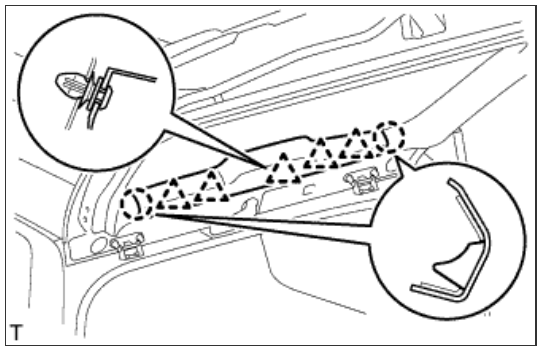

2. REMOVE BACK DOOR SIDE GARNISH LH

a. Detach the 3 clips and remove the back door side garnish.

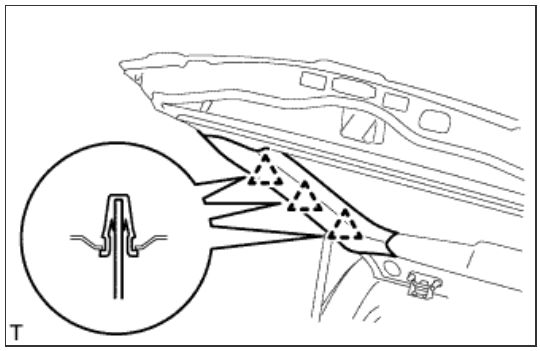


3. REMOVE BACK DOOR SIDE GARNISH RH

HINT:

Use the same procedures described for the LH side.

4. REMOVE ASSIST GRIP (for Parallel Seat Type)


a. Remove the 2 screws and assist grip.

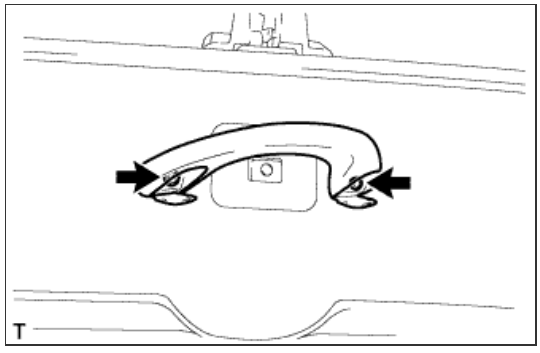

5. REMOVE NO. 2 BACK DOOR SERVICE HOLE COVER (for Parallel Seat Type)


a. Using a screwdriver, detach the 4 claws and remove the back door service hole cover.

b. Disconnect connector.

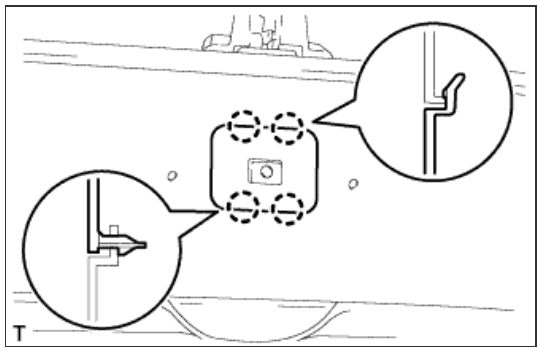

6. REMOVE POWER BACK DOOR MAIN SWITCH (for Parallel Seat Type)

a. Detach the 2 claws and remove the power back door main switch.

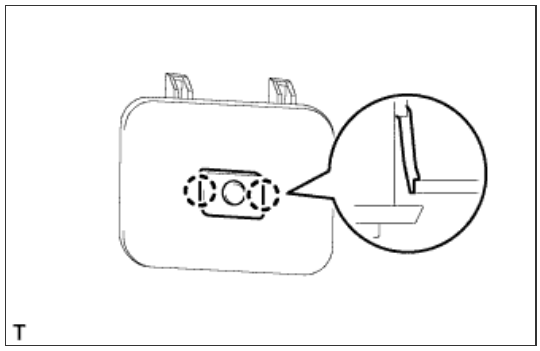


7. REMOVE BACK DOOR GARNISH

a. Using a screwdriver, detach the 14 clips and remove the back door garnish.

HINT:


Tape the screwdriver tip before use.

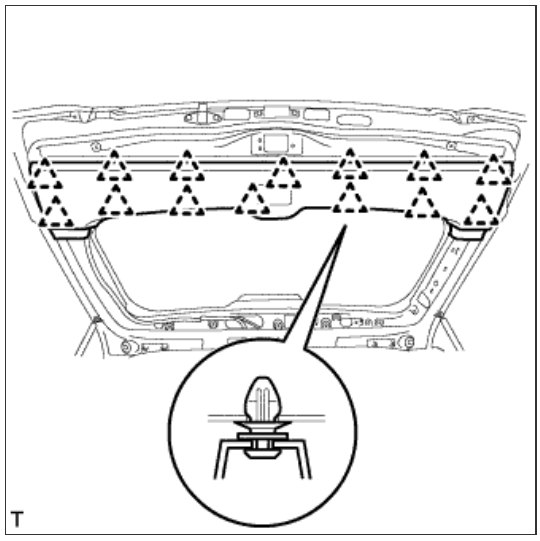

8. REMOVE REAR ASSIST GRIP REINFORCEMENT (for Parallel Seat Type)


a. Remove the 3 bolts.

b. Detach the 2 claws and remove the rear assist grip reinforcement.

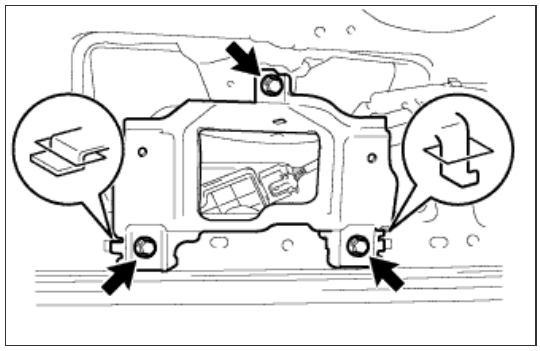

9. REMOVE BACK DOOR LOCK COVER


a. Detach the 4 claws and remove the cover.

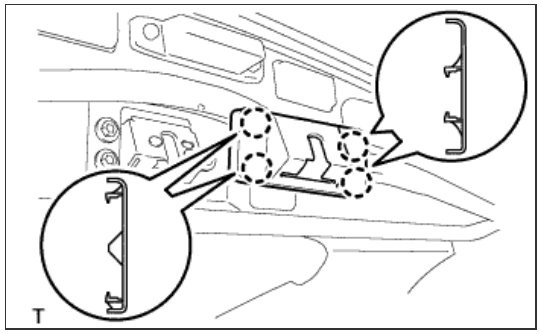

10. REMOVE BACK DOOR LOCK ASSEMBLY

a. Disconnect the connector.

b. Remove the 3 bolts and door lock.

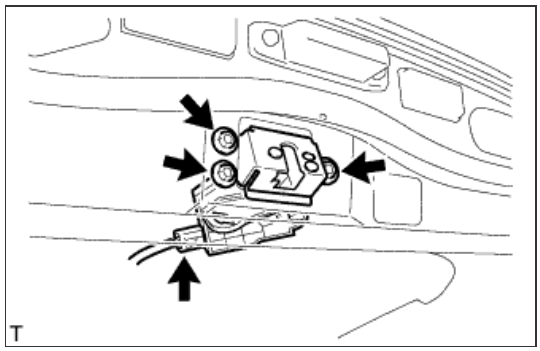


for Preparation Click here

1. INSPECT BACK DOOR LOCK ASSEMBLY

a. Set the back door lock to the full-latch position.

b. Apply battery voltage to the door motor terminals and check the operation of the door lock motor.

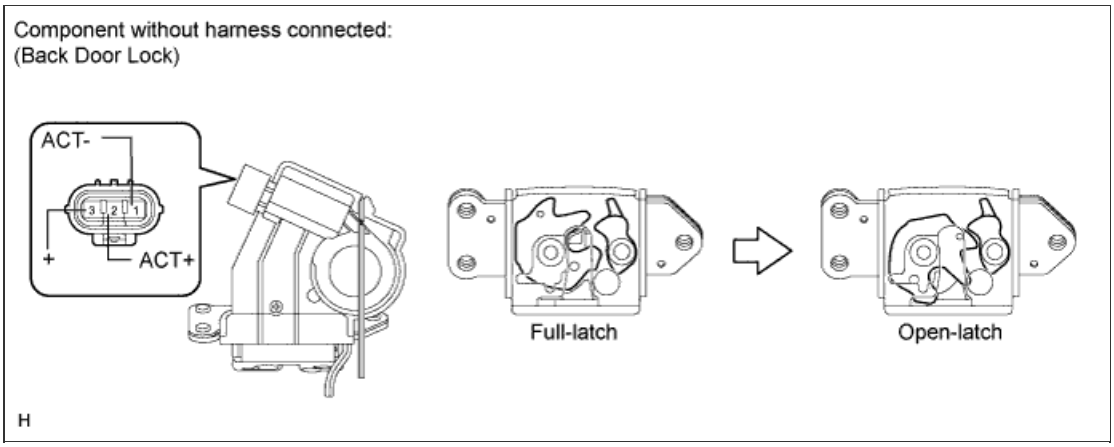

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 2 (ACT+) Battery negative (-) → 1 (ACT-)	Moves to open-latch position

If the result is not as specified, replace the back door lock assembly.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (ACT-) - 3 (+)	Open-latch	Below 1 Ω
1 (ACT-) - 3 (+)	Full-latch	10 kΩ or higher

If the result is not as specified, replace the back door lock assembly.


for Preparation Click here

1. INSTALL BACK DOOR LOCK ASSEMBLY

a. Install the door lock with the 3 bolts.


Torque:
13 N*m{ 133 kgf*cm , 10 ft.*lbf }

b. Connect the connector.

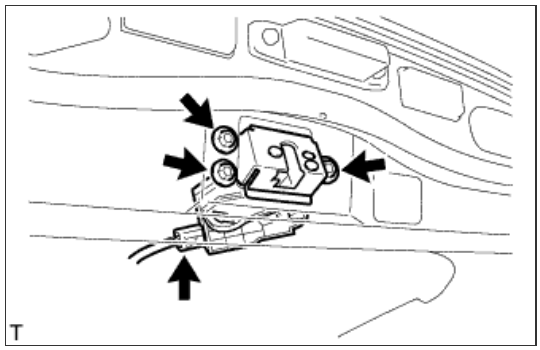

2. INSTALL BACK DOOR LOCK COVER


a. Attach the 4 claws to install the cover.

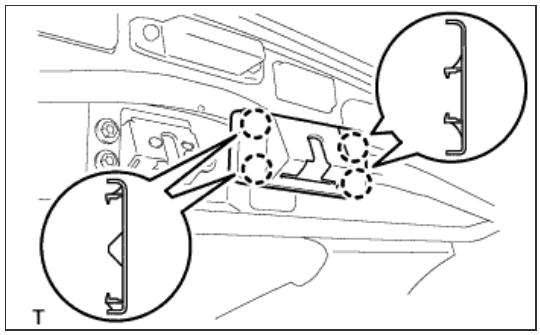

3. INSTALL REAR ASSIST GRIP REINFORCEMENT (for Parallel Seat Type)


a. Attach the 2 claws to install the rear assist grip reinforcement.

b. Install the 3 bolts.

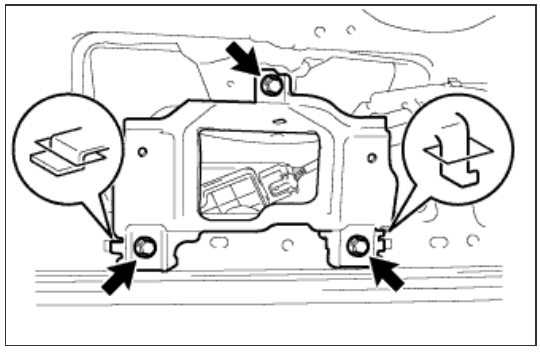


4. INSTALL BACK DOOR GARNISH

a. Attach the 14 clips to install the back door garnish.

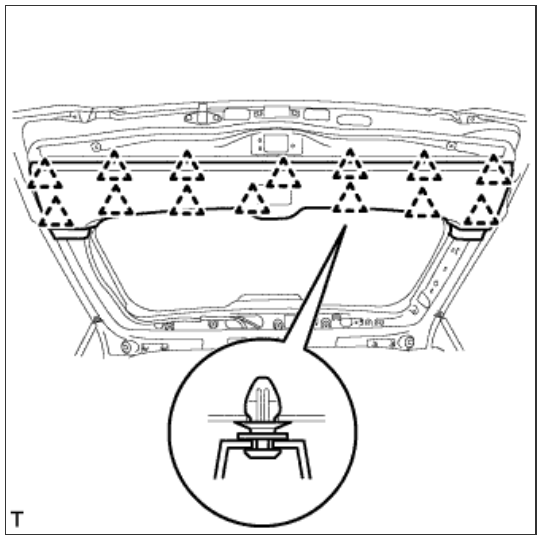

5. INSTALL POWER BACK DOOR MAIN SWITCH (for Parallel Seat Type)


a. Attach the 2 claws to install the power back door main switch.

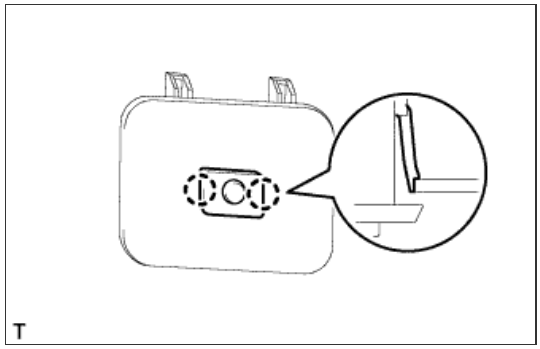

6. INSTALL NO. 2 BACK DOOR SERVICE HOLE COVER (for Parallel Seat Type)


a. Connect the connector.

b. Attach the 4 claws to install service hole cover.

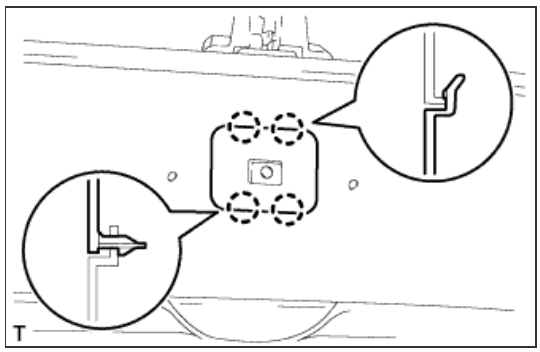

7. INSTALL ASSIST GRIP (for Parallel Seat Type)

a. Install the assist grip with the 2 screws.

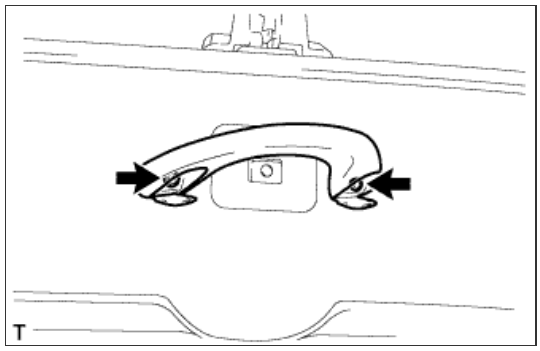


8. INSTALL BACK DOOR SIDE GARNISH RH

HINT:

Use the same procedures described for the LH side.


9. INSTALL BACK DOOR SIDE GARNISH LH

a. Attach the 3 clips to install the back door side garnish.

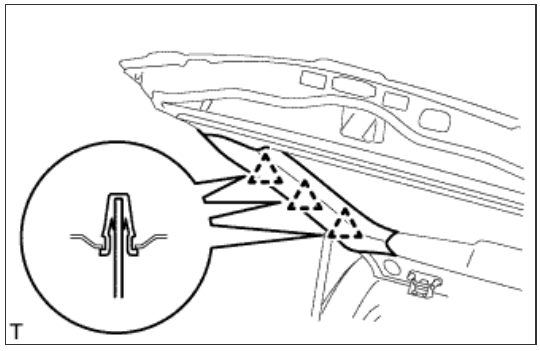

10. INSTALL CENTER BACK DOOR GARNISH

a. Attach the 5 clips and 2 claws to install the back door garnish.

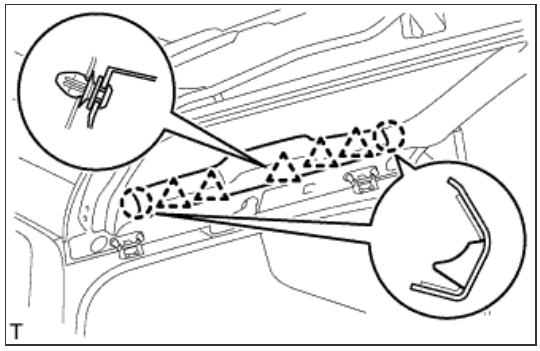


for Preparation Click here

1. INSTALL BACK DOOR LOCK ASSEMBLY

a. Install the door lock with the 3 bolts.


Torque:
13 N*m{ 133 kgf*cm , 10 ft.*lbf }

b. Connect the connector.

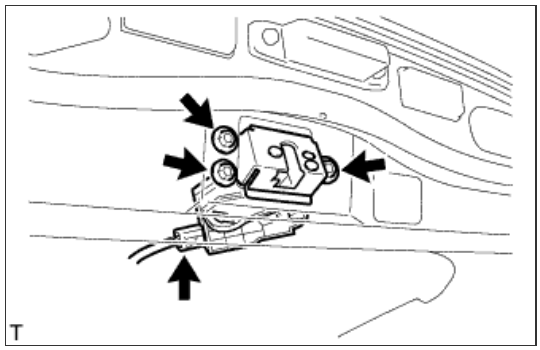

2. INSTALL BACK DOOR LOCK COVER


a. Attach the 4 claws to install the cover.

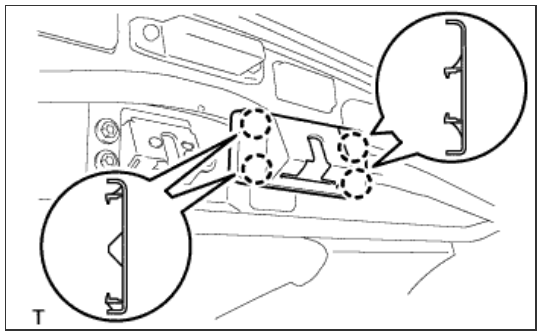

3. INSTALL REAR ASSIST GRIP REINFORCEMENT (for Parallel Seat Type)


a. Attach the 2 claws to install the rear assist grip reinforcement.

b. Install the 3 bolts.

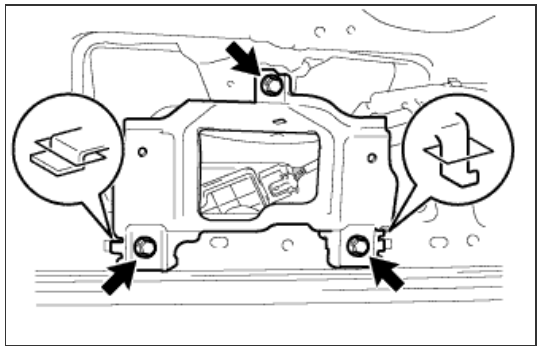


4. INSTALL BACK DOOR GARNISH

a. Attach the 14 clips to install the back door garnish.

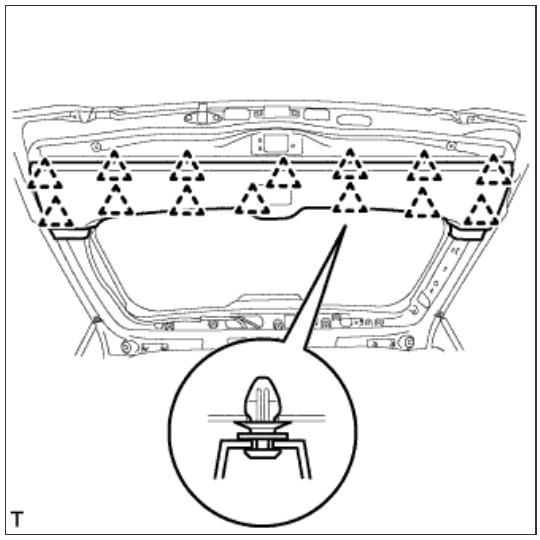

5. INSTALL POWER BACK DOOR MAIN SWITCH (for Parallel Seat Type)


a. Attach the 2 claws to install the power back door main switch.

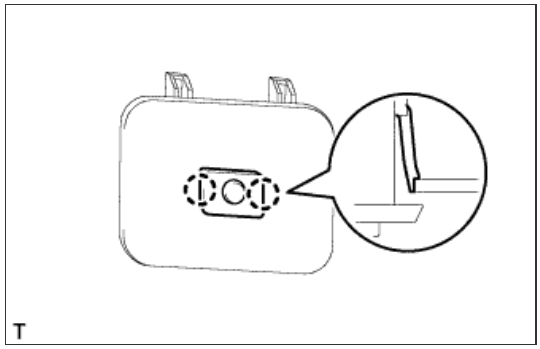

6. INSTALL NO. 2 BACK DOOR SERVICE HOLE COVER (for Parallel Seat Type)


a. Connect the connector.

b. Attach the 4 claws to install service hole cover.

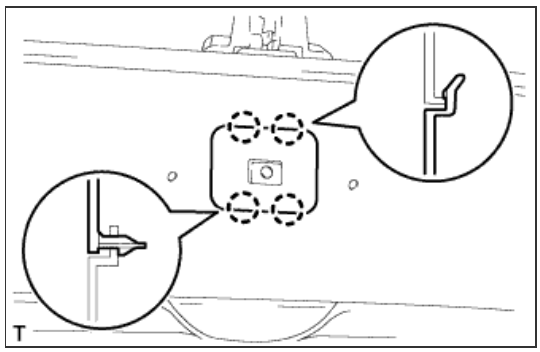

7. INSTALL ASSIST GRIP (for Parallel Seat Type)

a. Install the assist grip with the 2 screws.

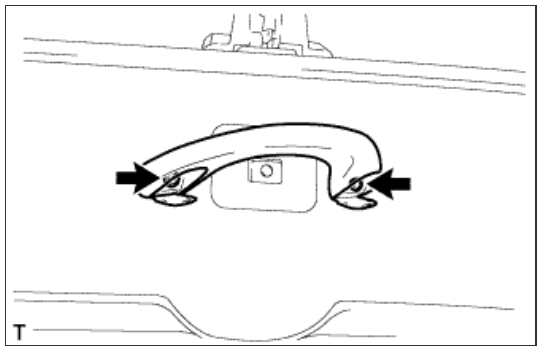


8. INSTALL BACK DOOR SIDE GARNISH RH

HINT:

Use the same procedures described for the LH side.


9. INSTALL BACK DOOR SIDE GARNISH LH

a. Attach the 3 clips to install the back door side garnish.

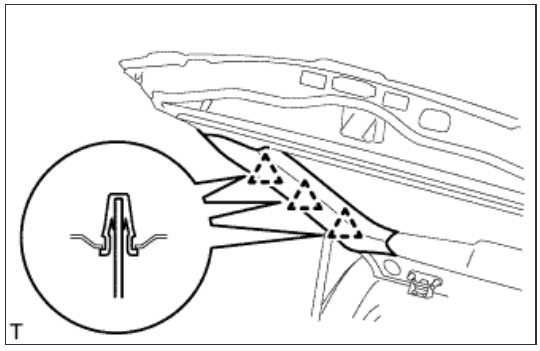


10. INSTALL CENTER BACK DOOR GARNISH

a. Attach the 5 clips and 2 claws to install the back door garnish.

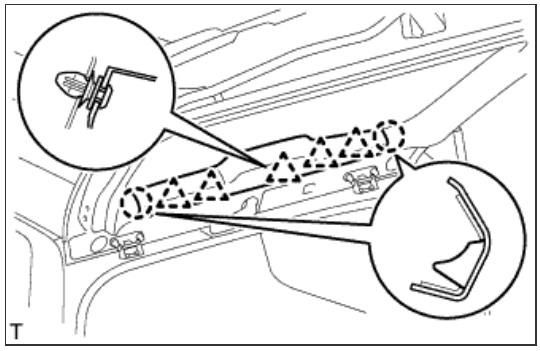


for Preparation Click here

w/ Rear No. 2 Seat, except Face to Face Seat Type:

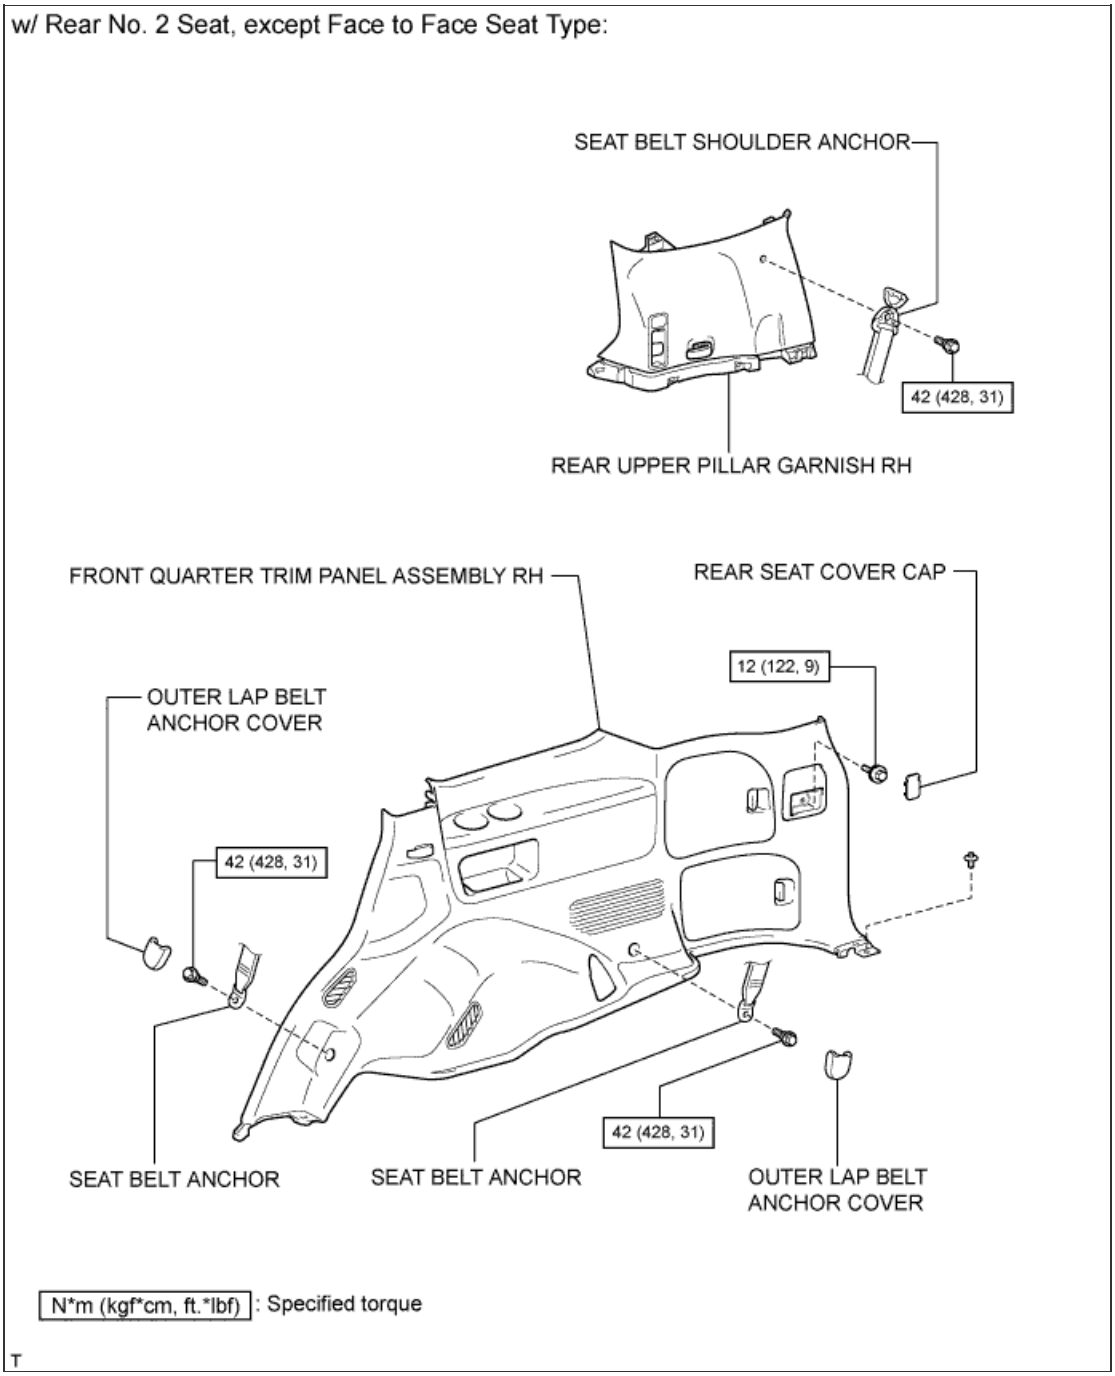


w/ Rear No. 2 Seat, for Face to Face Seat Type:

w/o Rear No. 2 Seat:

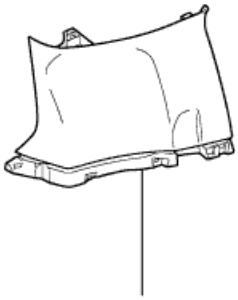


REAR UPPER PILLAR GARNISH RH

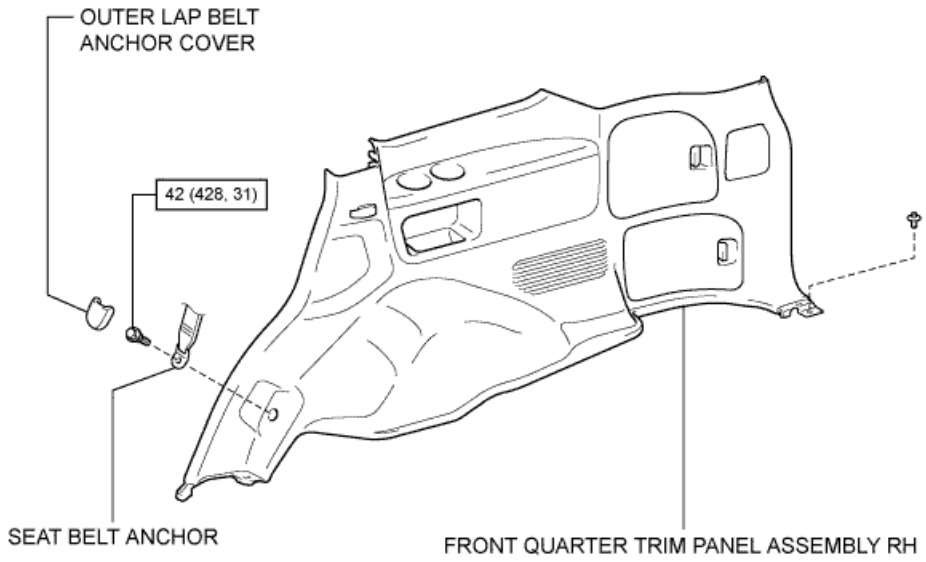

N*m (kgf*cm, ft.*lbf) : Specified torque

T

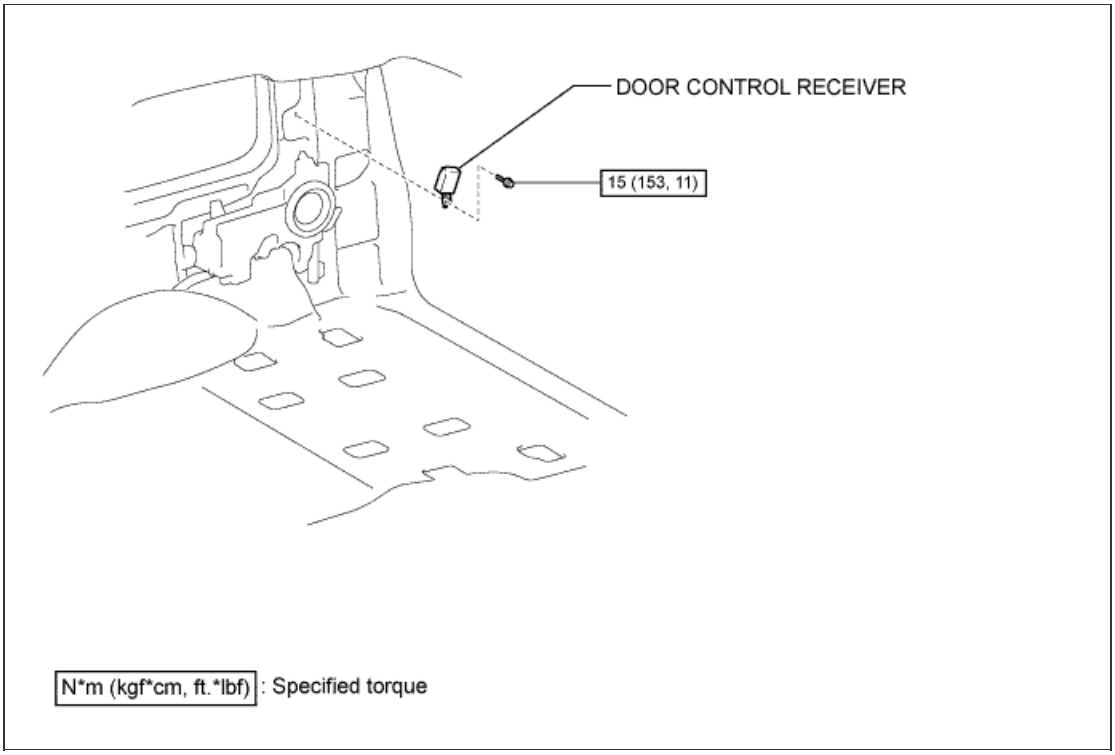

N*m (kgf*cm, ft.*lbf) : Specified torque

for Preparation Click here

1. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)


a. Remove the rear No. 2 seat assembly RH (Click here).

3. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.

a. Detach the 2 claws and remove the step cover.

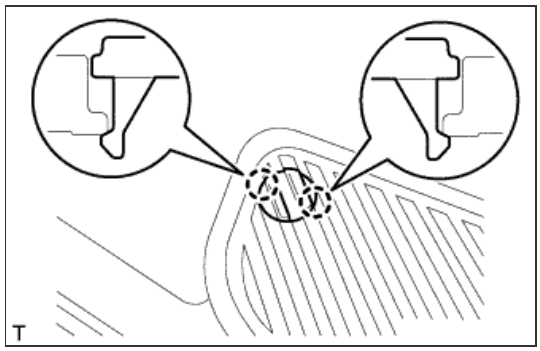


4. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

5. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

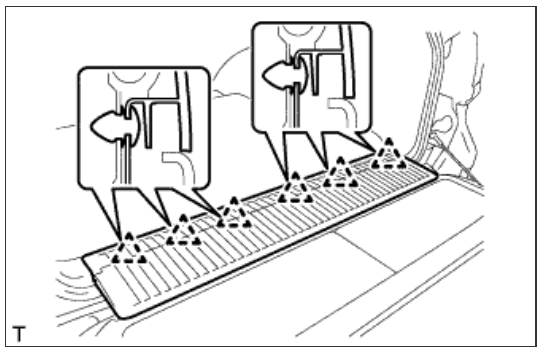


6. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

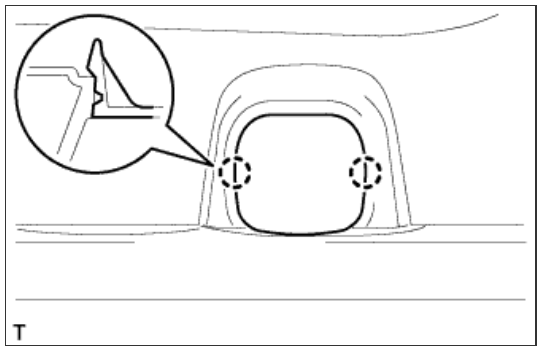

7. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


Tape the screwdriver tip before use.

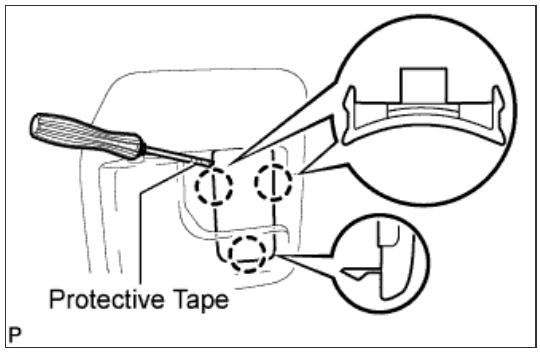


8. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:


When removing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

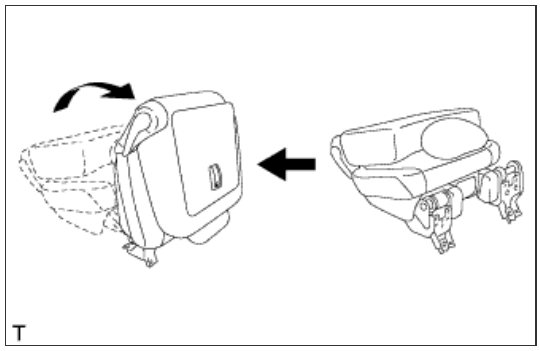

a. Detach the 3 claws and remove the cover.

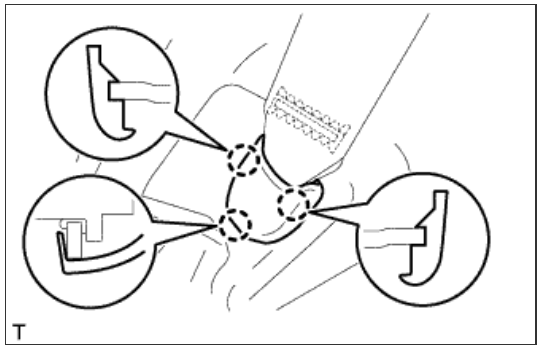


b. Remove the bolt and rear No. 1 seat belt anchor.

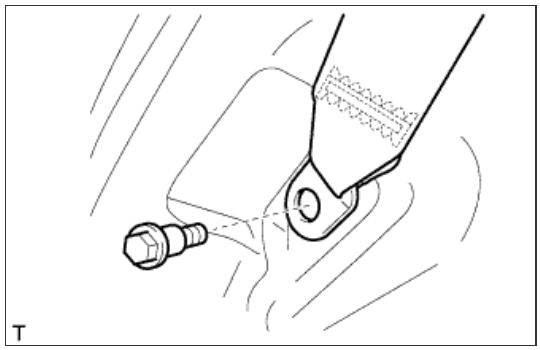


c. w/ Rear No. 2 Seat, except Face to Face Seat Type:

i. Detach the 3 claws and remove the cover.

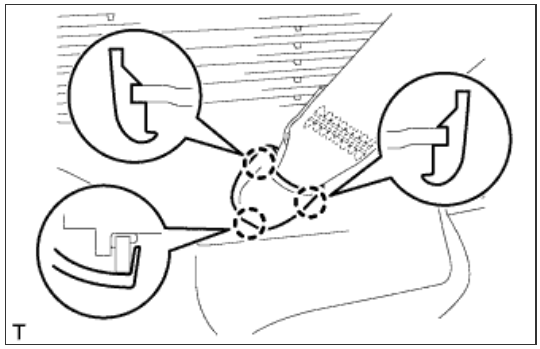

ii. Remove the bolt and rear No. 2 seat belt anchor.

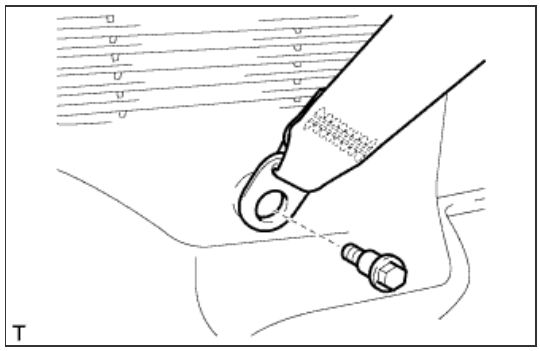


d. w/ Rear No. 2 Seat, except Face to Face Seat Type:

i. Remove the clip and bolt.

ii. Detach the 16 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

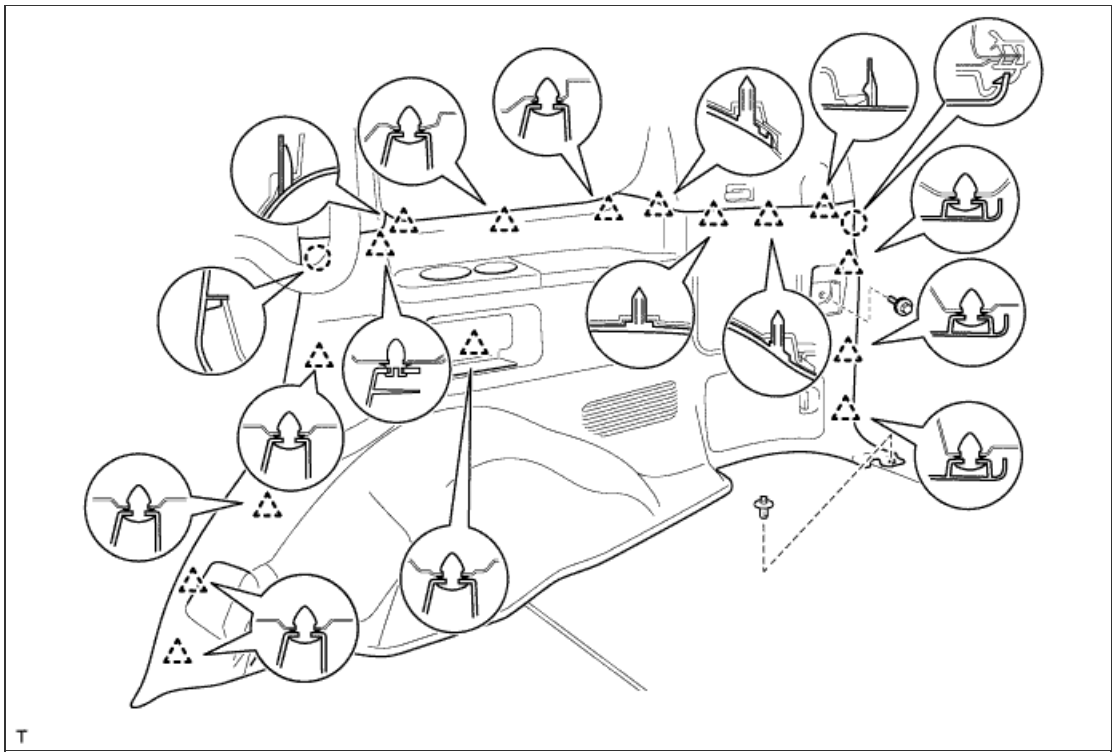

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Remove the clip.

ii. Detach the 16 clips and 2 claws, and remove the quarter trim panel.

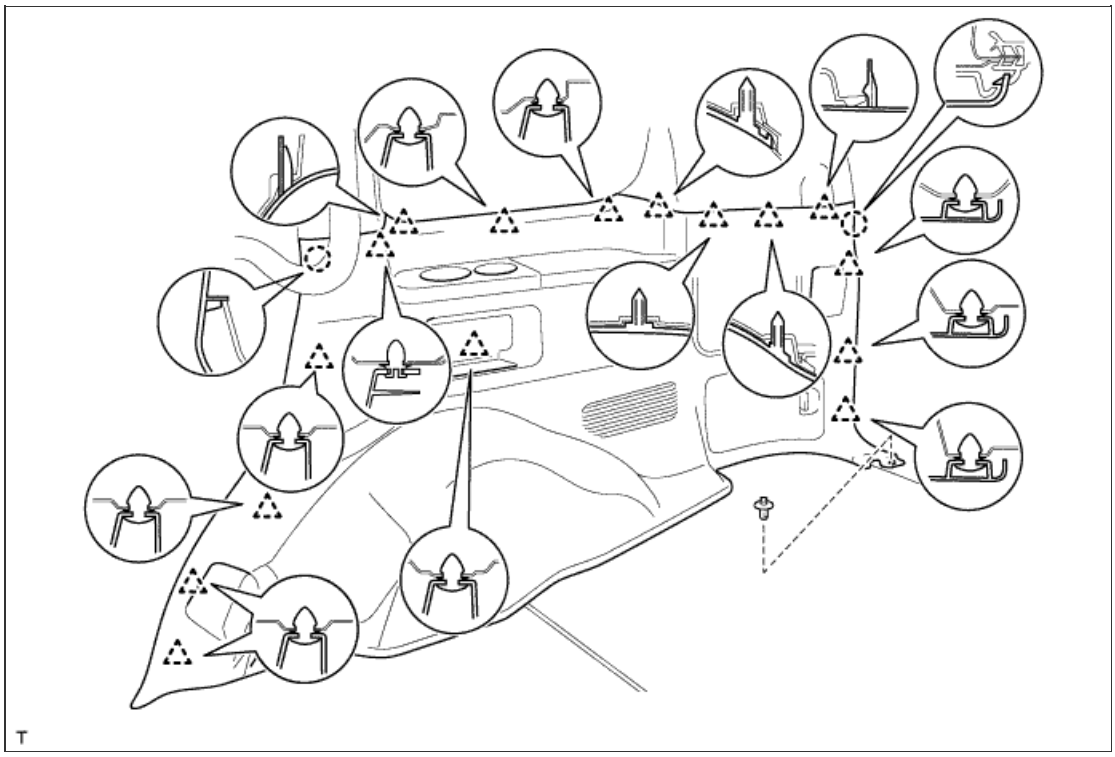

9. REMOVE REAR UPPER PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

10. REMOVE DOOR CONTROL RECEIVER

a. Disconnect the connector.

b. Remove the bolt and receiver.

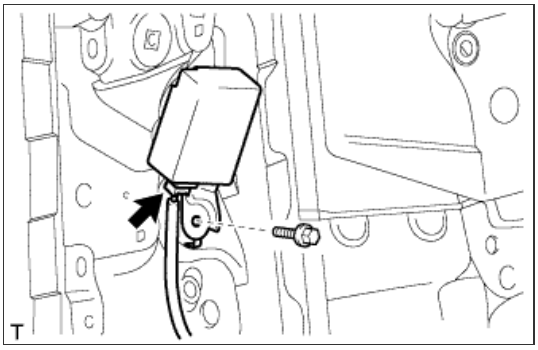

for Preparation Click here

1. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)


a. Remove the rear No. 2 seat assembly RH (Click here).

3. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.

a. Detach the 2 claws and remove the step cover.

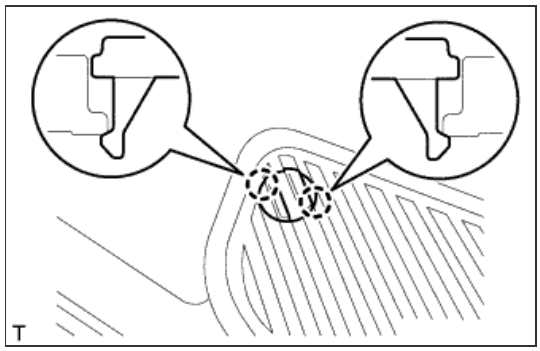


4. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

5. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

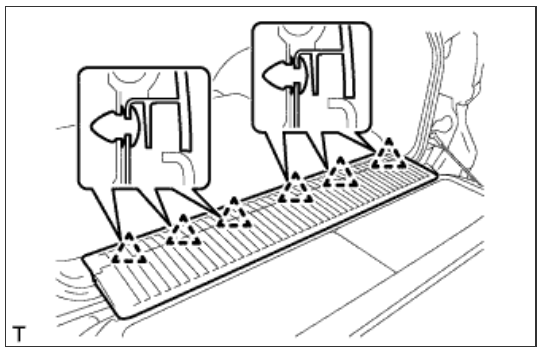


6. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

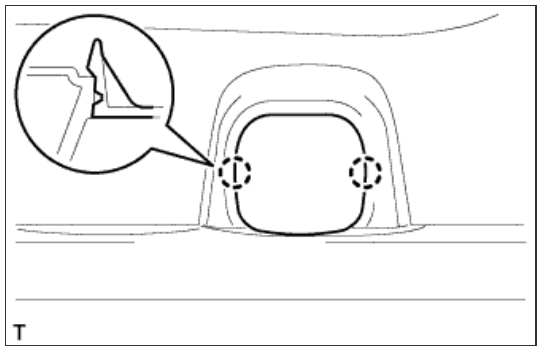

7. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


Tape the screwdriver tip before use.

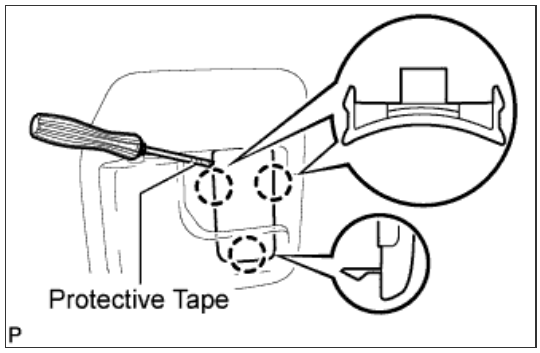


8. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:


When removing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

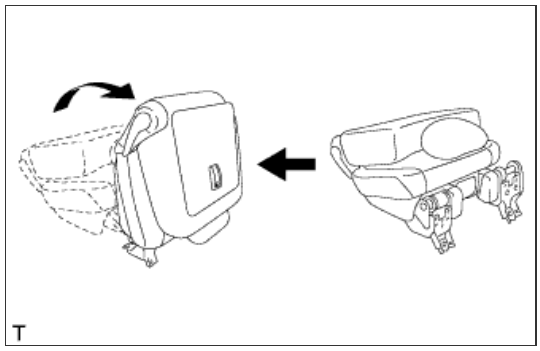

a. Detach the 3 claws and remove the cover.

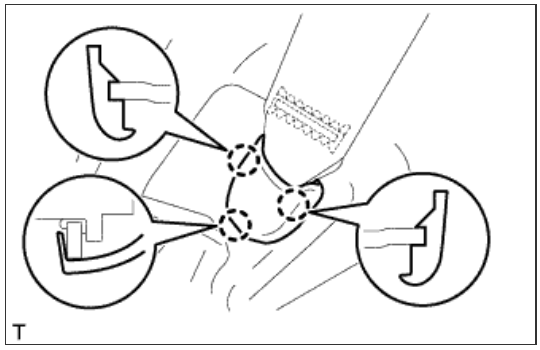


b. Remove the bolt and rear No. 1 seat belt anchor.

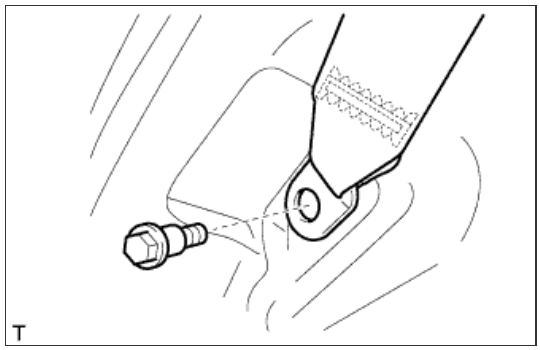


c. w/ Rear No. 2 Seat, except Face to Face Seat Type:

i. Detach the 3 claws and remove the cover.

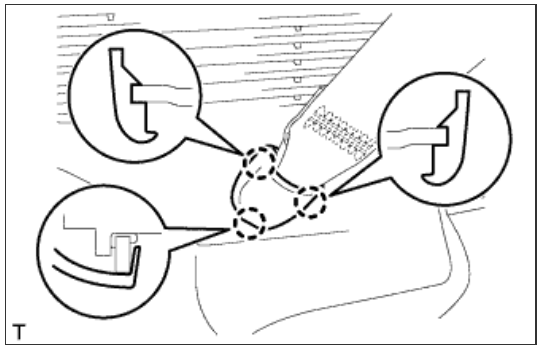

ii. Remove the bolt and rear No. 2 seat belt anchor.

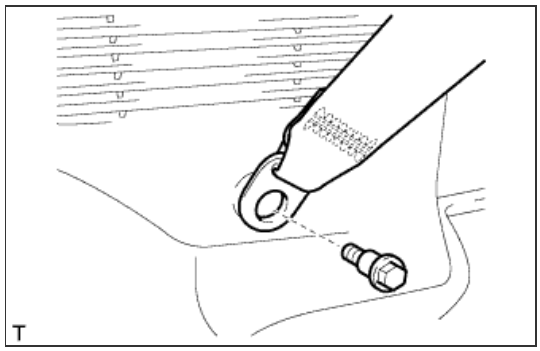


d. w/ Rear No. 2 Seat, except Face to Face Seat Type:

i. Remove the clip and bolt.

ii. Detach the 16 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

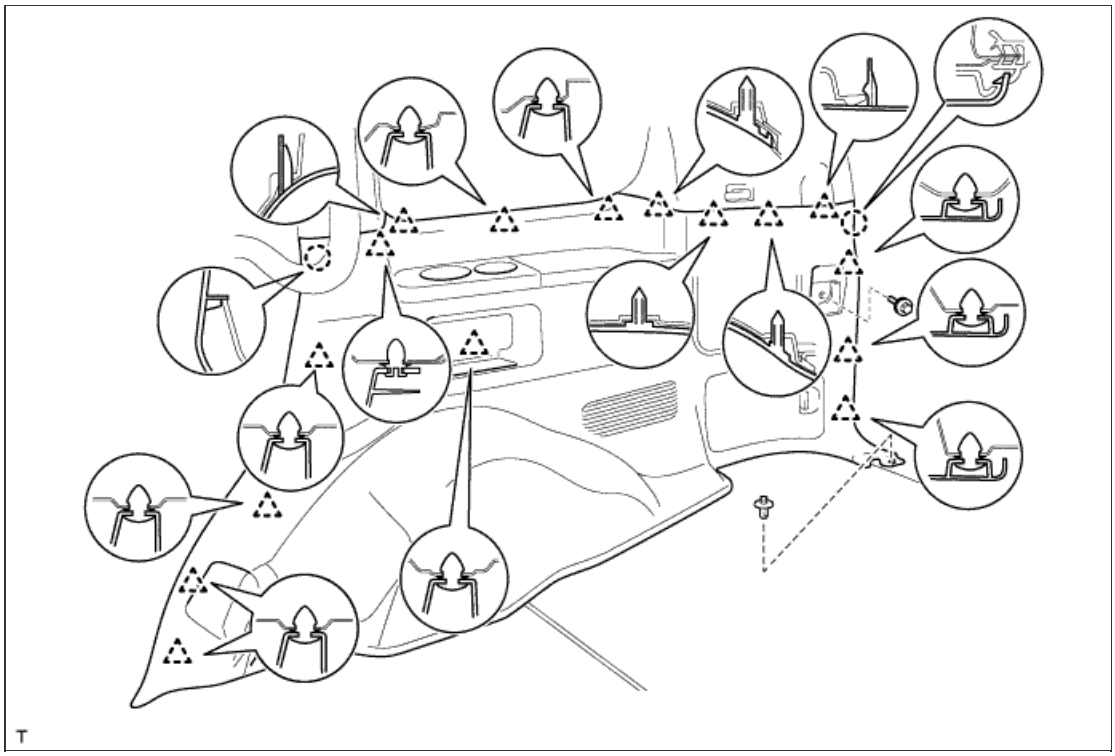

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Remove the clip.

ii. Detach the 16 clips and 2 claws, and remove the quarter trim panel.

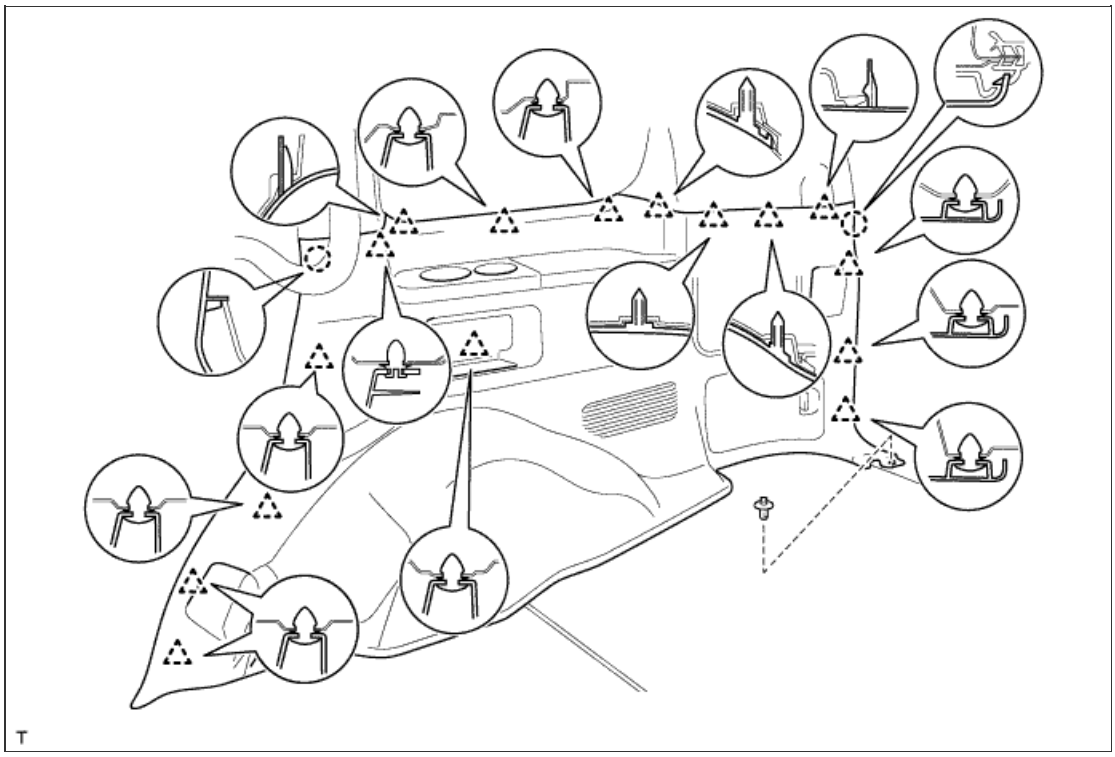

9. REMOVE REAR UPPER PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

10. REMOVE DOOR CONTROL RECEIVER

a. Disconnect the connector.

b. Remove the bolt and receiver.

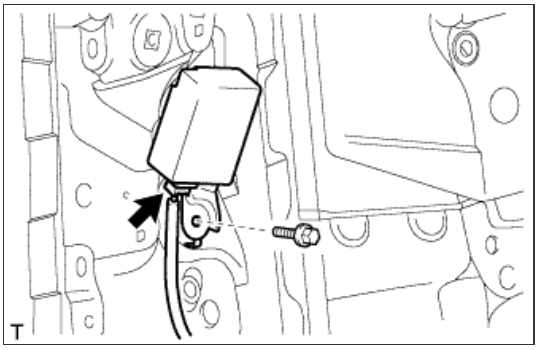


for Preparation Click here

1. INSTALL DOOR CONTROL RECEIVER

a. Install the receiver with the bolt.

Torque:
15 N*m{ 153 kgf*cm , 11 ft.*lbf }

b. Connect the connector.

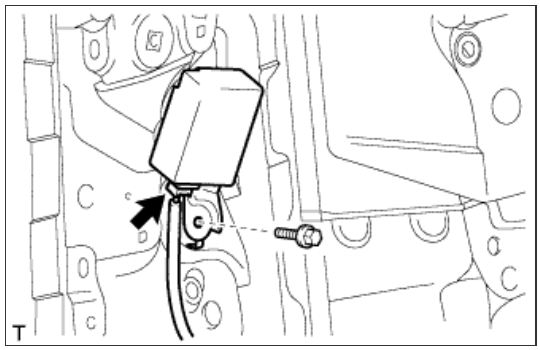

2. INSTALL REAR UPPER PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

3. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

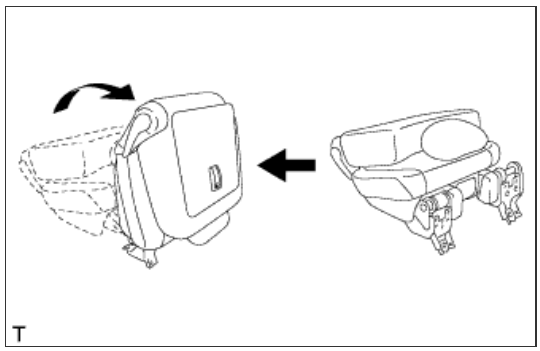

a. w/ Rear No. 2 Seat, except Face to Face Seat Type:


i. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 16 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

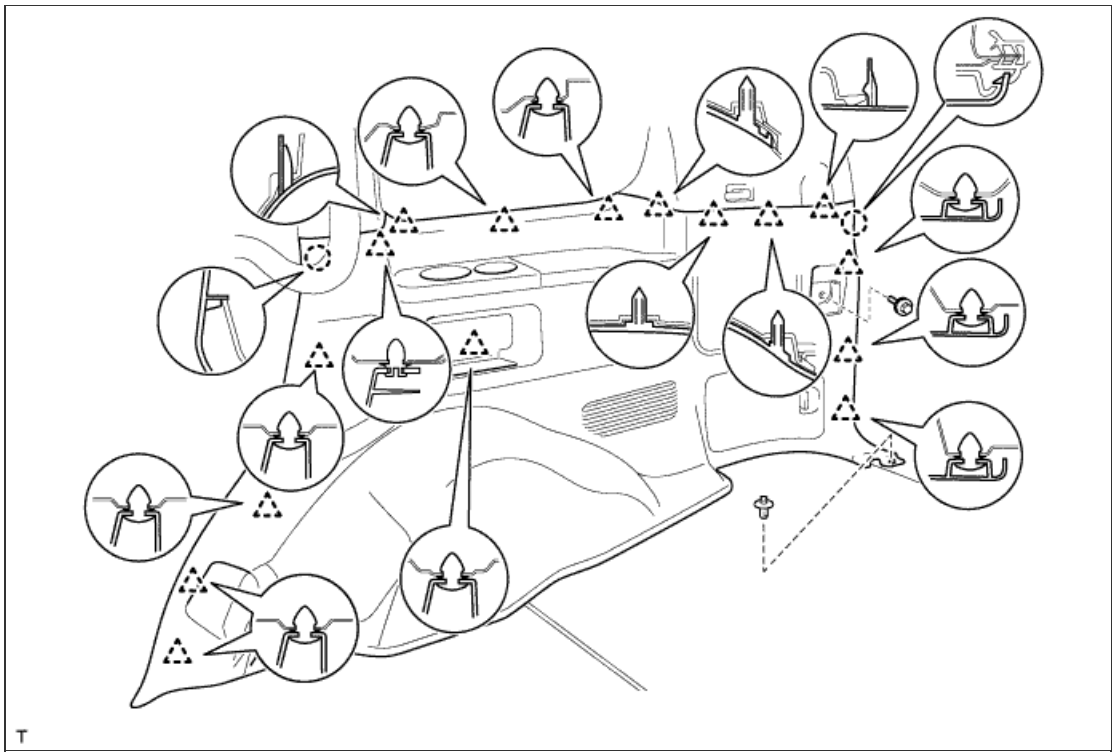

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Attach the 16 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

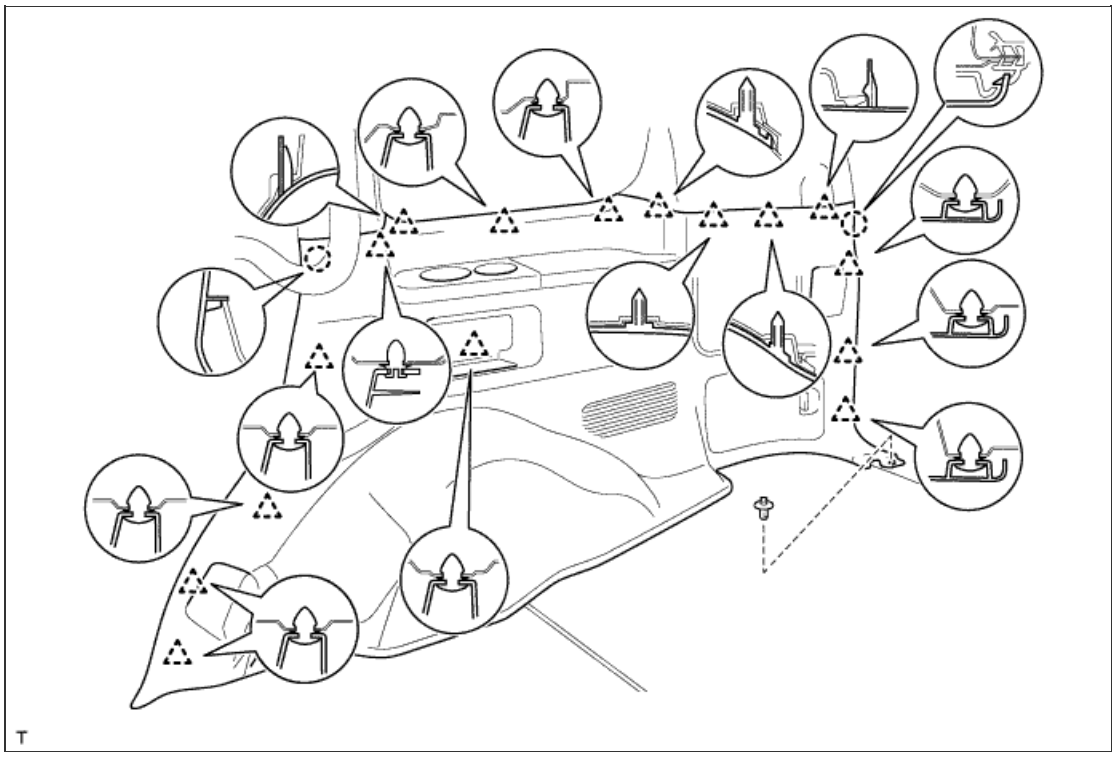


c. w/ Rear No. 2 Seat, except Face to Face Seat Type:

i. Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

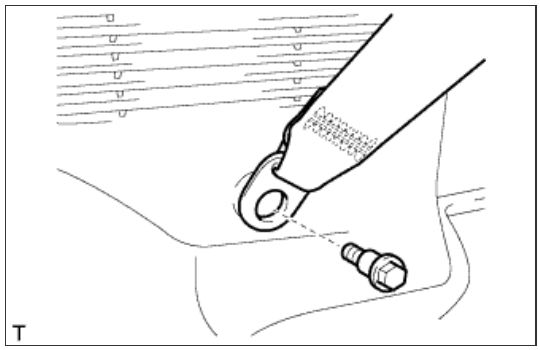


ii. Attach the 3 claws to install the cover.

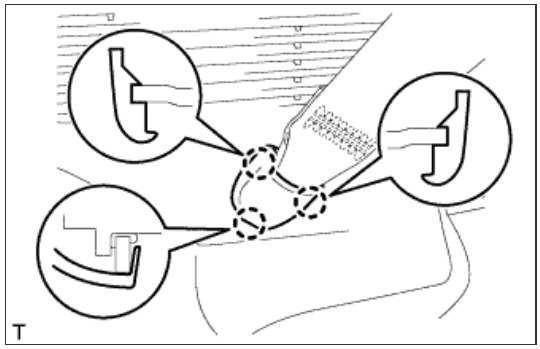


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

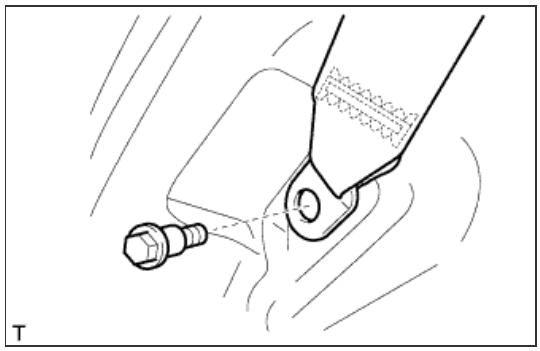

e. Attach the 3 claws to install the cover.

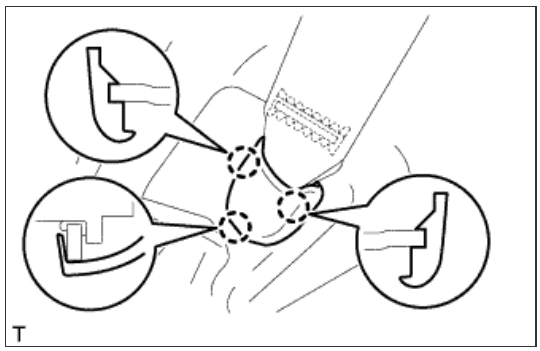


4. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

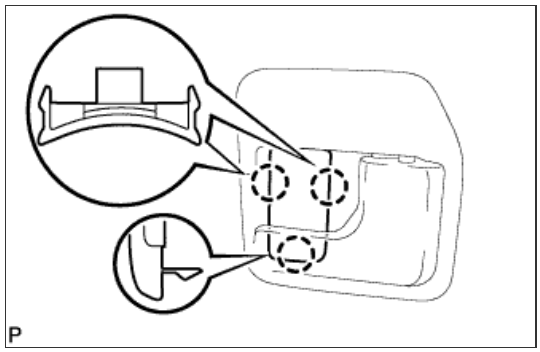


5. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:


Use the same procedure to install the tonneau cover holder cap on the other side.

a. Attach the 2 claws to install the tonneau cover holder cap.

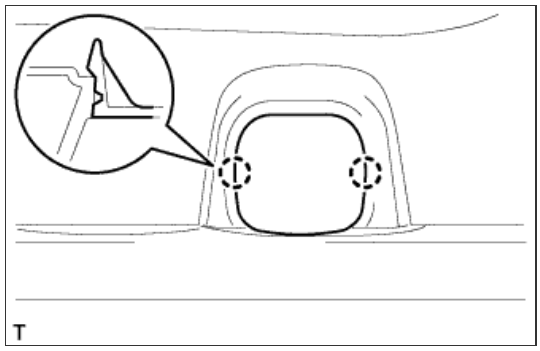

6. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the 6 clips to install the support plate.

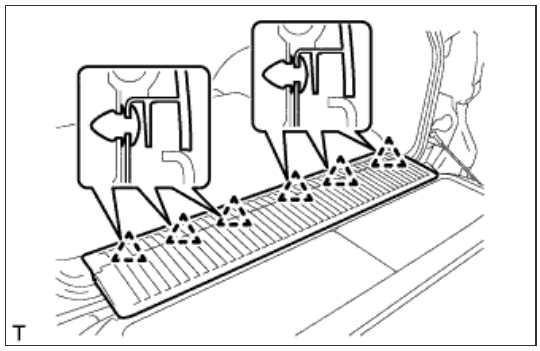

7. INSTALL REAR DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

8. INSTALL REAR STEP COVER

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

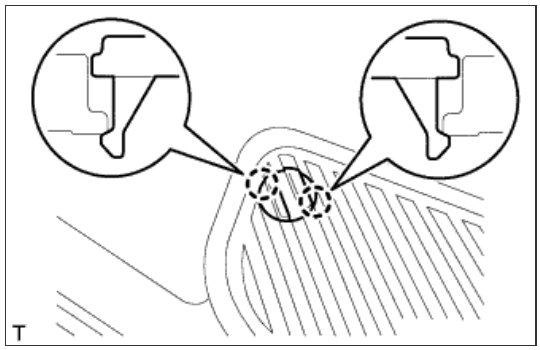

9. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

10. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).


for Preparation Click here

1. INSTALL DOOR CONTROL RECEIVER

a. Install the receiver with the bolt.

Torque:
15 N*m{ 153 kgf*cm , 11 ft.*lbf }

b. Connect the connector.

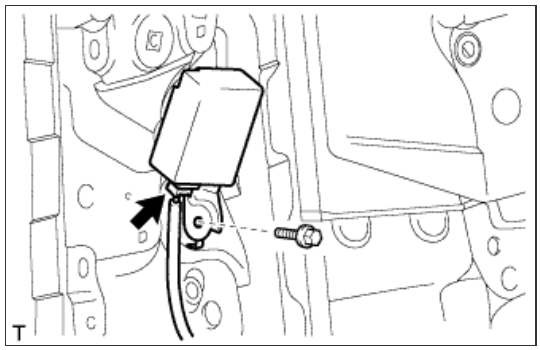

2. INSTALL REAR UPPER PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

3. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

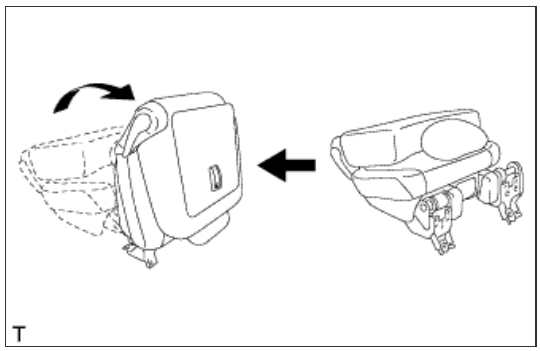

a. w/ Rear No. 2 Seat, except Face to Face Seat Type:


i. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 16 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

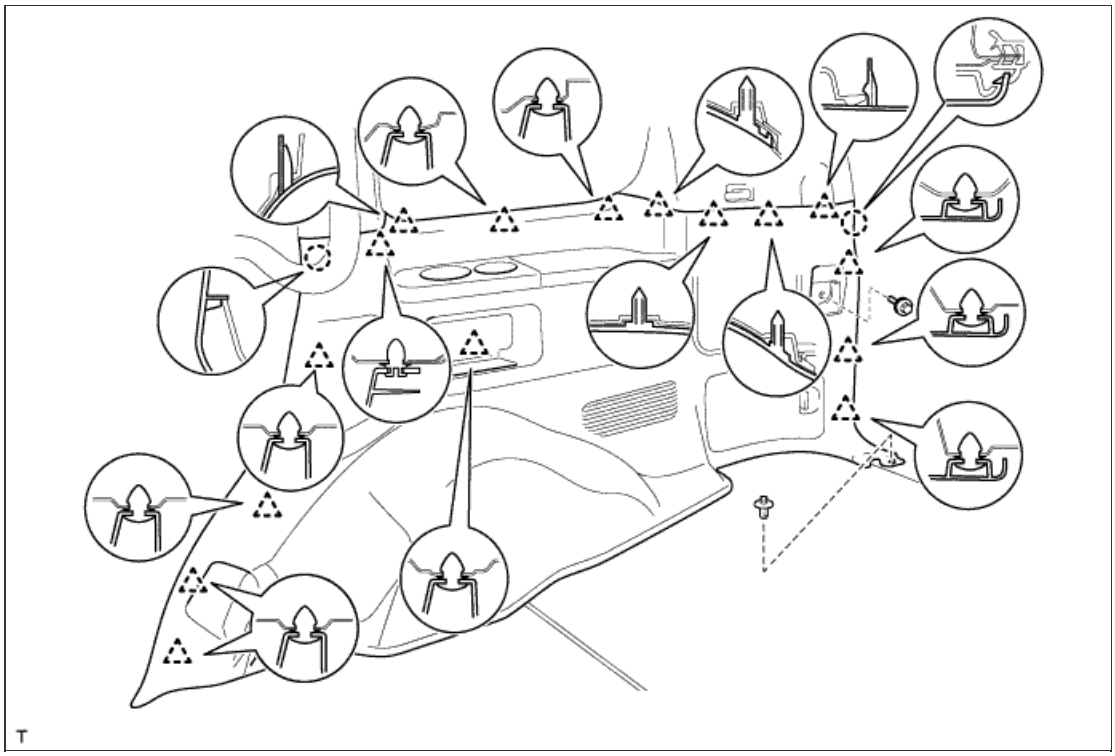

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Attach the 16 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

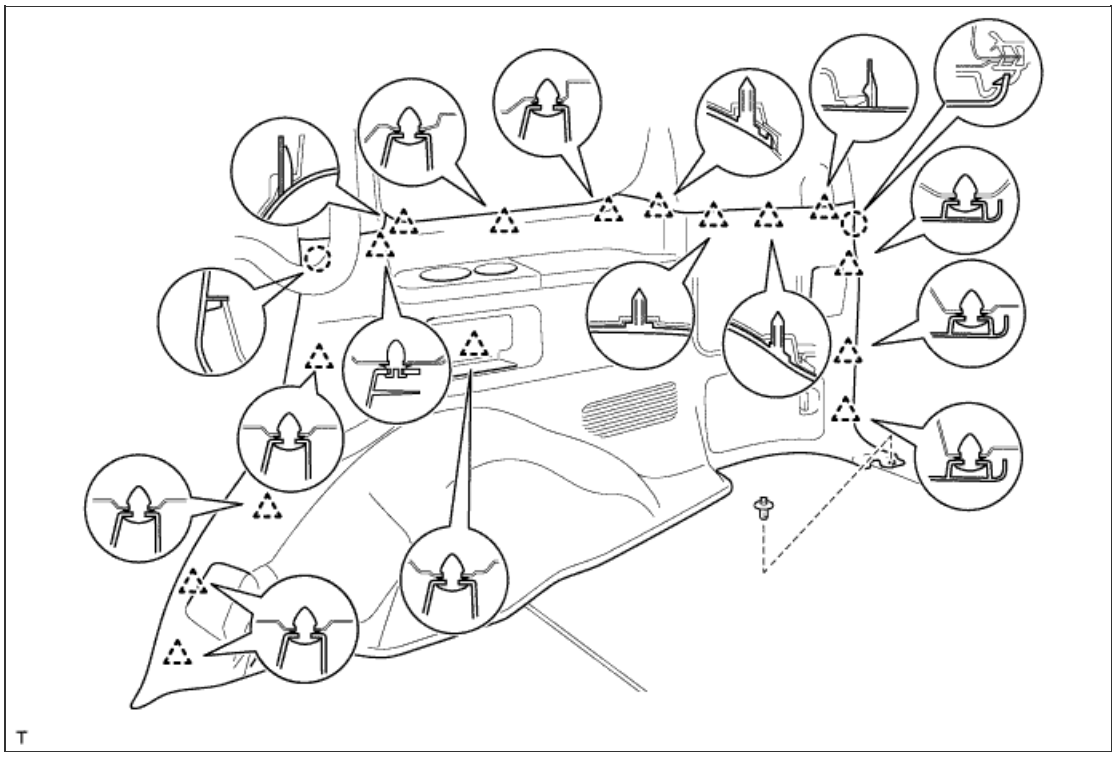


c. w/ Rear No. 2 Seat, except Face to Face Seat Type:

i. Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

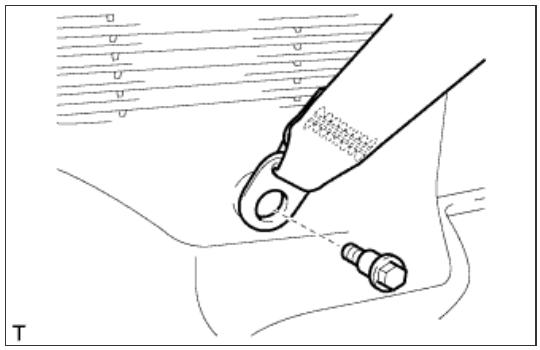


ii. Attach the 3 claws to install the cover.

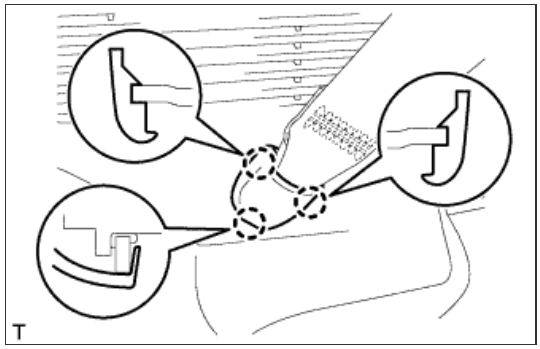


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

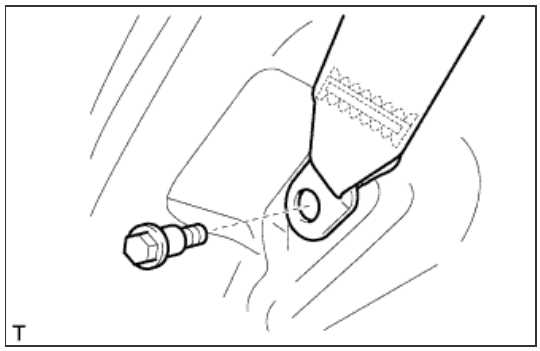

e. Attach the 3 claws to install the cover.

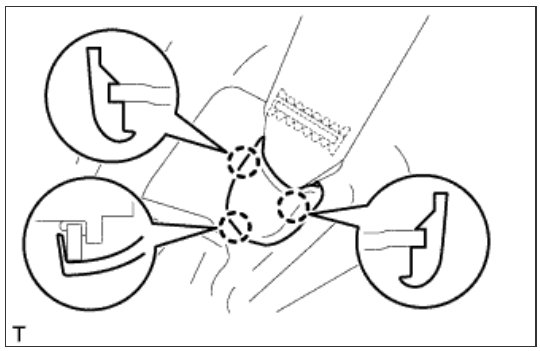


4. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

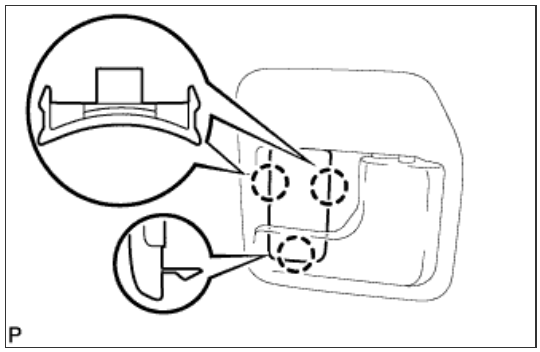


5. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:


Use the same procedure to install the tonneau cover holder cap on the other side.

a. Attach the 2 claws to install the tonneau cover holder cap.

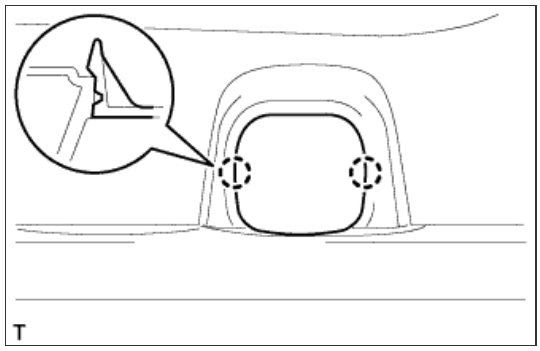

6. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the 6 clips to install the support plate.

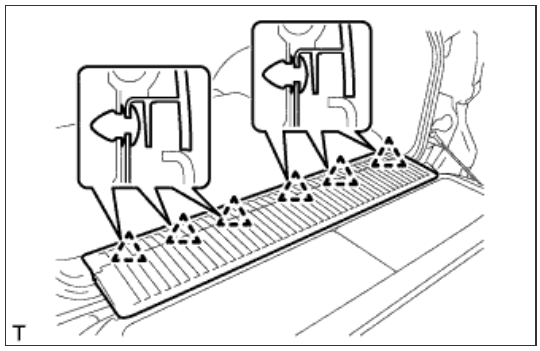

7. INSTALL REAR DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

8. INSTALL REAR STEP COVER

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

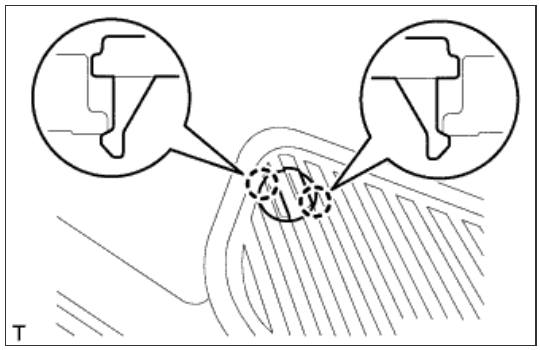


9. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

10. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

for Preparation Click here

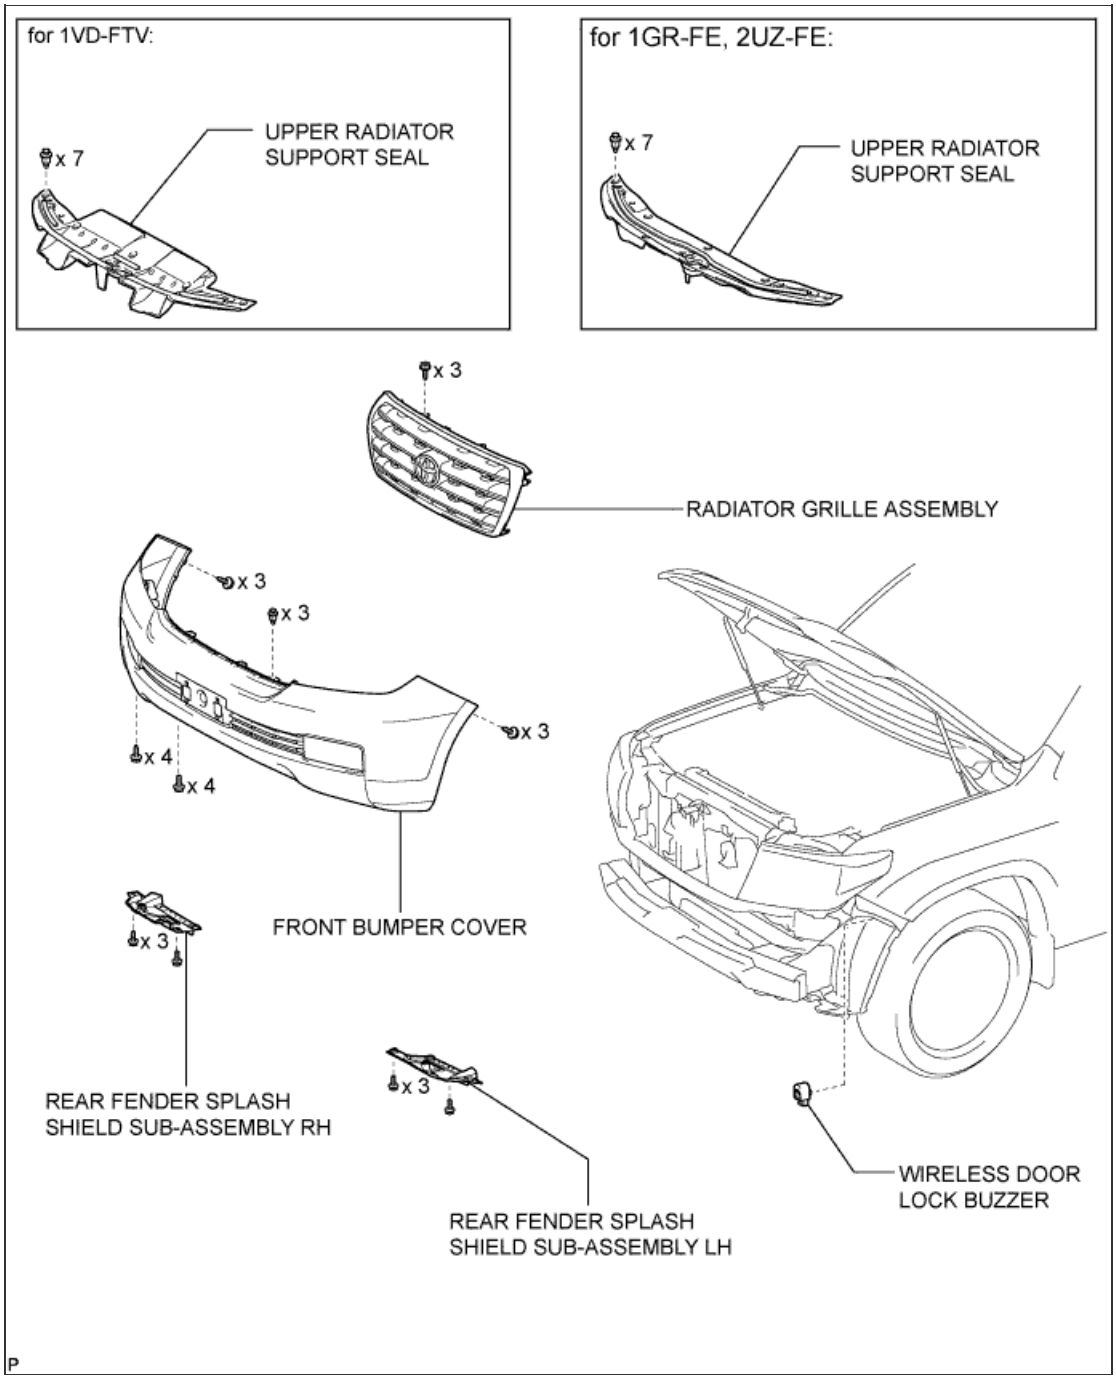

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. Remove the 3 bolts and screw.

b. Turn the clip indicated by the arrow in the illustration to remove the fender splash shield.

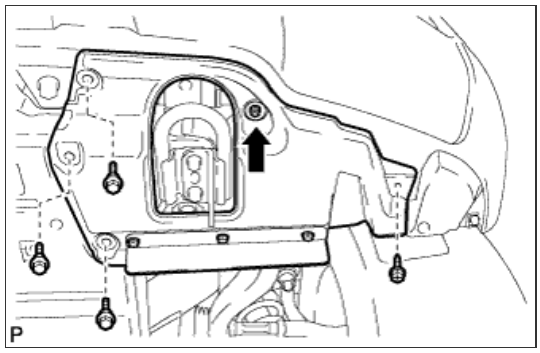


2. REMOVE REAR FENDER SPLASH SHIELD SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

3. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

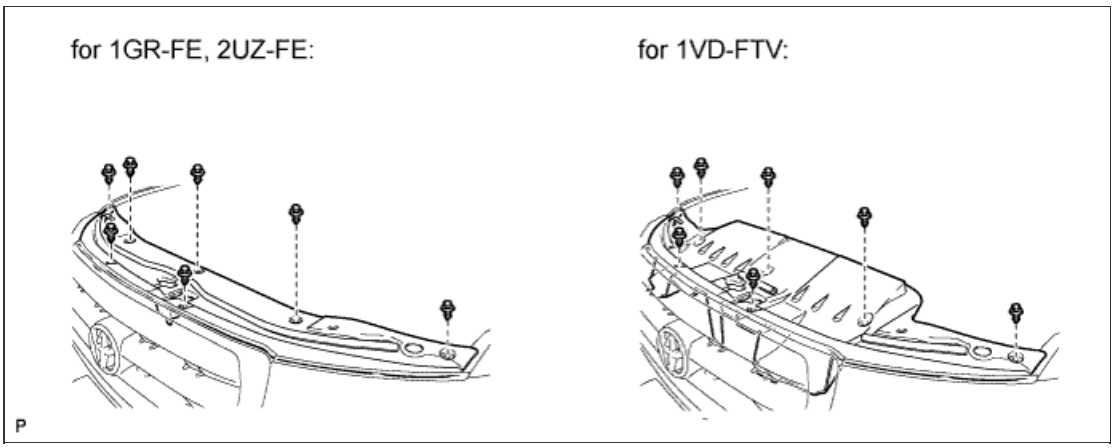


4. REMOVE RADIATOR GRILLE ASSEMBLY

a. Put protective tape around the radiator grille.

b. Remove the 3 screws.

c. Detach the 2 clips and 8 claws, and remove the radiator grille.

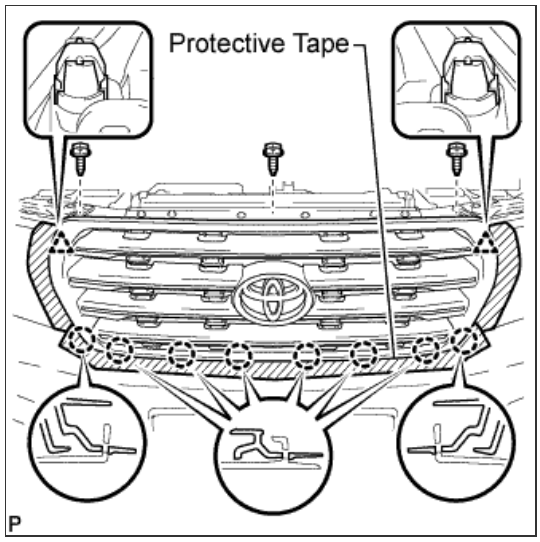


5. REMOVE FRONT BUMPER COVER


HINT:

For the front bumper cover with garnish, use the procedures described below.

a. Put protective tape around the bumper cover.

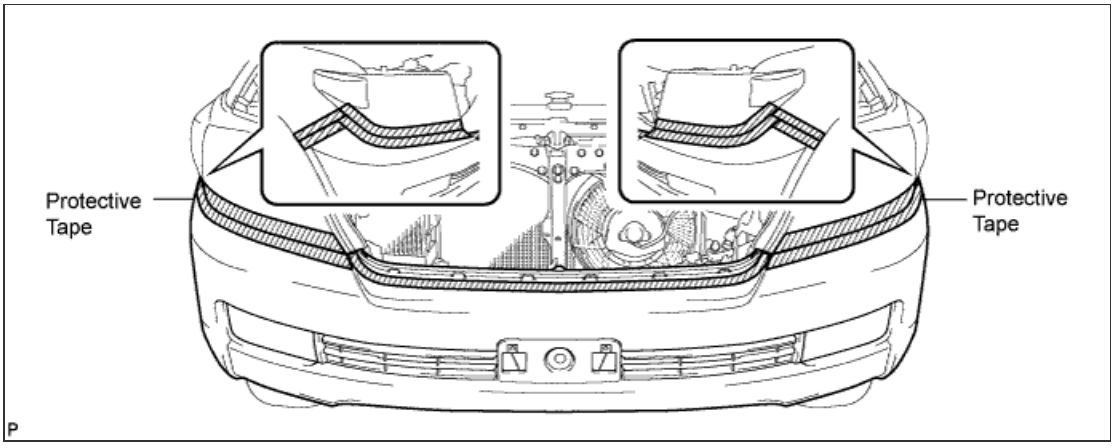


b. Using a T30 "TORX" socket, remove the 6 screws.

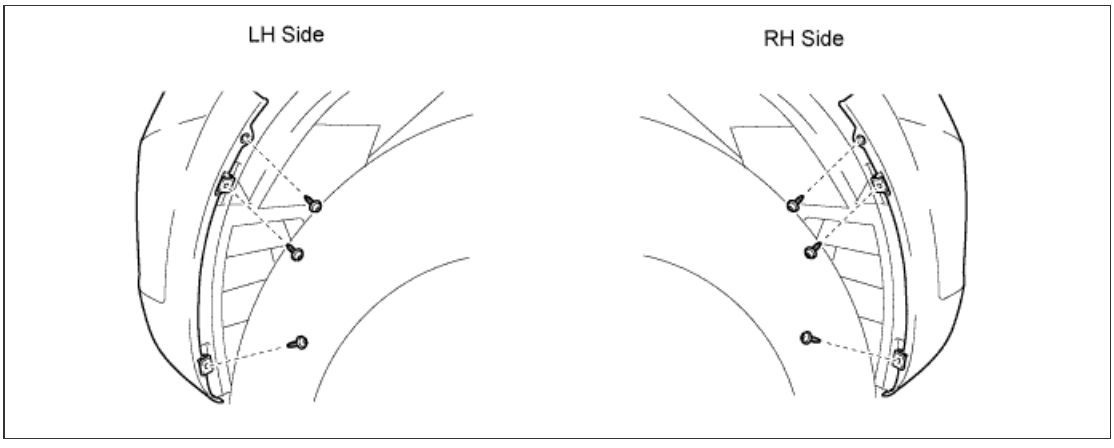


c. Remove the 3 clips, 4 screws and 4 bolts.

d. w/o TOYOTA Parking Assist-sensor System, w/o Fog Light:
Detach the 10 claws and remove the bumper cover.

e. w/ TOYOTA Parking Assist-sensor System or w/ Fog Light:
Detach the 10 claws, disconnect the No. 4 engine room wire connector and remove the bumper cover.

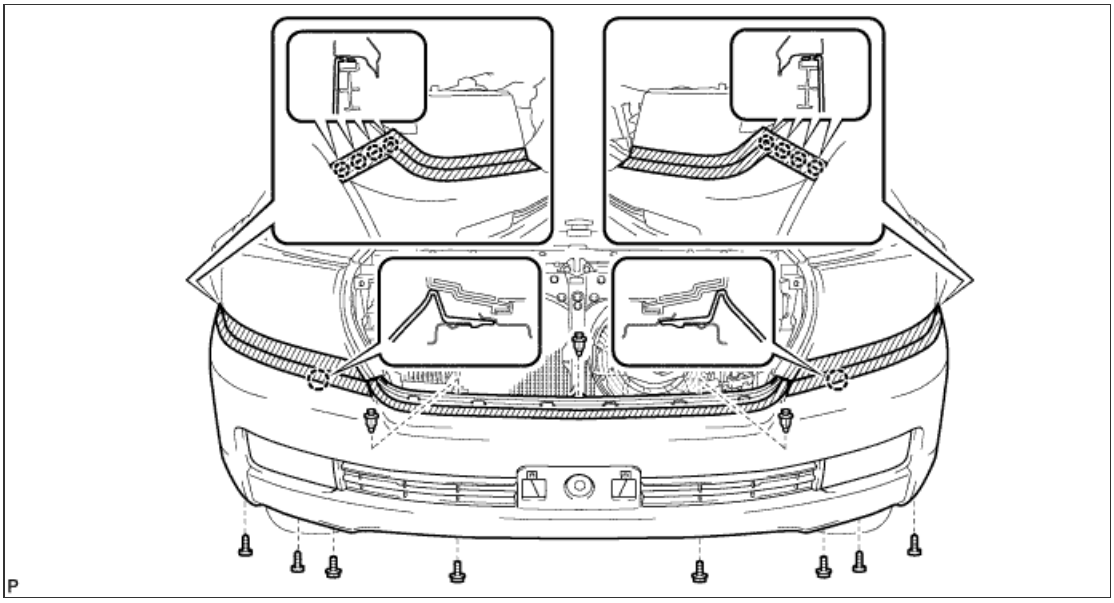


f. w/ Headlight Cleaner System:
Disconnect the headlight cleaner hose and remove the bumper cover.

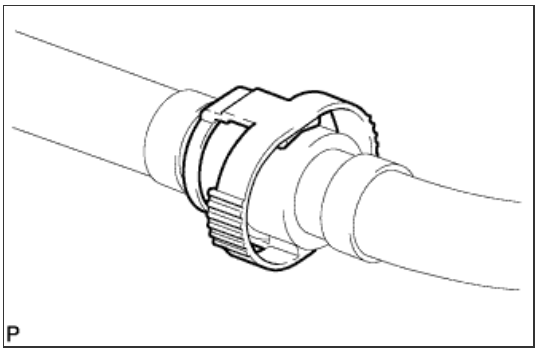

6. REMOVE WIRELESS DOOR LOCK BUZZER

a. Disconnect the connector.

b. Detach the clamp and remove the buzzer.

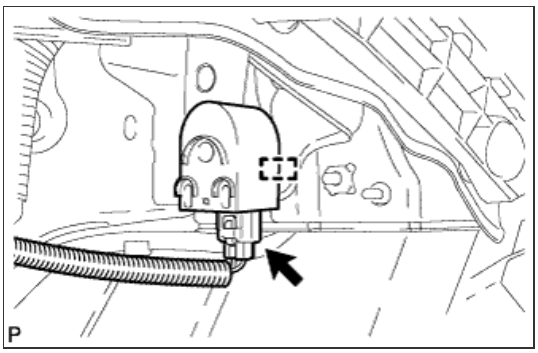

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. Remove the 3 bolts and screw.

b. Turn the clip indicated by the arrow in the illustration to remove the fender splash shield.

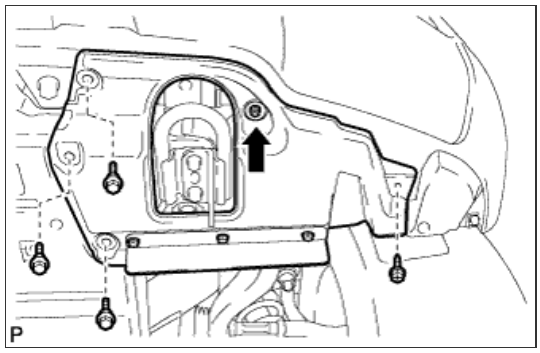


2. REMOVE REAR FENDER SPLASH SHIELD SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

3. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

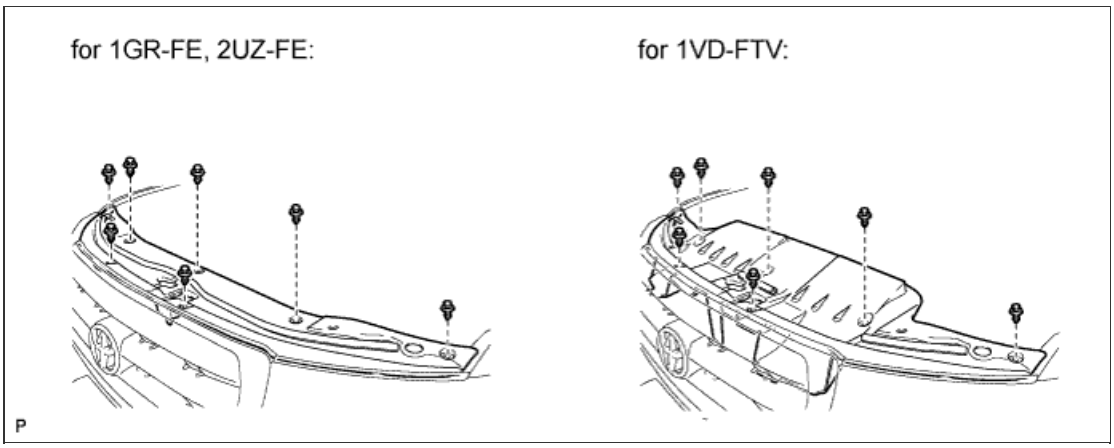


4. REMOVE RADIATOR GRILLE ASSEMBLY

a. Put protective tape around the radiator grille.

b. Remove the 3 screws.

c. Detach the 2 clips and 8 claws, and remove the radiator grille.

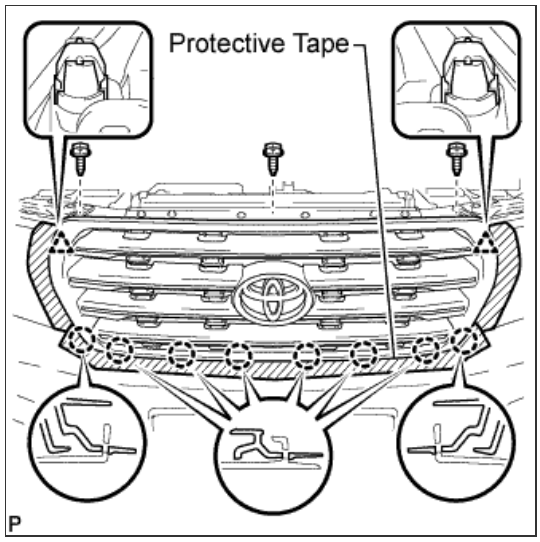


5. REMOVE FRONT BUMPER COVER


HINT:

For the front bumper cover with garnish, use the procedures described below.

a. Put protective tape around the bumper cover.

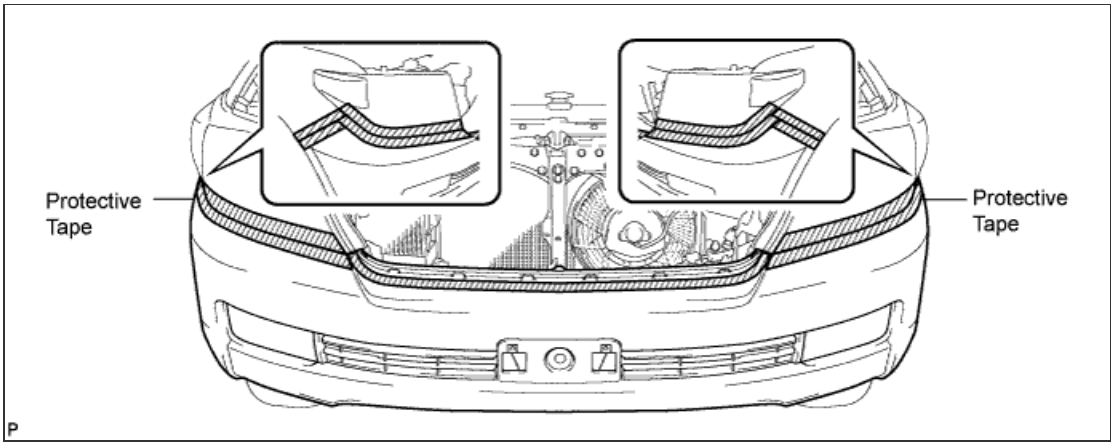


b. Using a T30 "TORX" socket, remove the 6 screws.

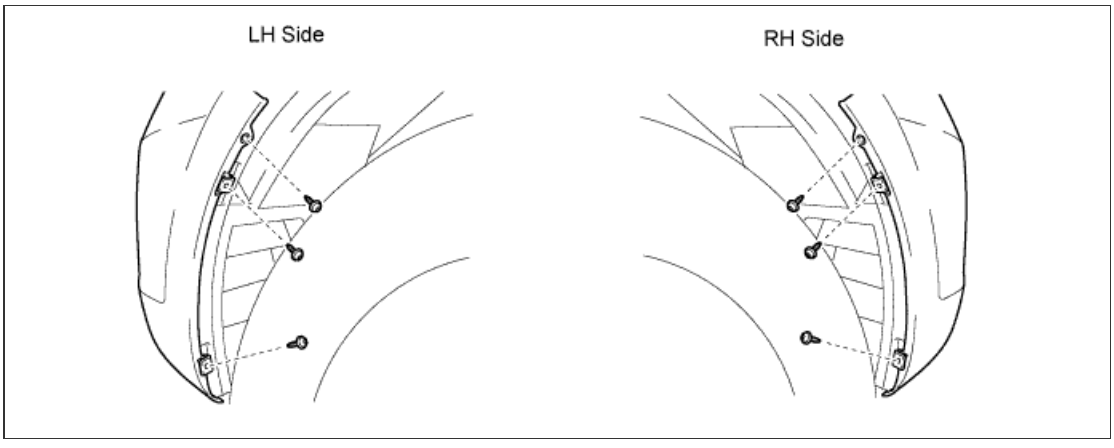


c. Remove the 3 clips, 4 screws and 4 bolts.

d. w/o TOYOTA Parking Assist-sensor System, w/o Fog Light:
Detach the 10 claws and remove the bumper cover.

e. w/ TOYOTA Parking Assist-sensor System or w/ Fog Light:
Detach the 10 claws, disconnect the No. 4 engine room wire connector and remove the bumper cover.

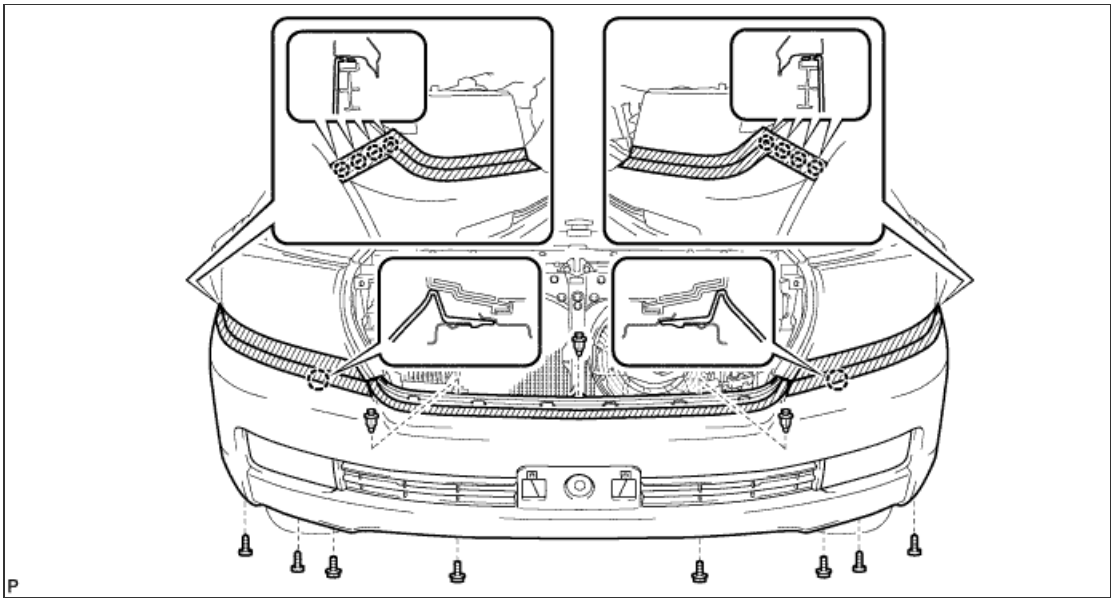


f. w/ Headlight Cleaner System:
Disconnect the headlight cleaner hose and remove the bumper cover.

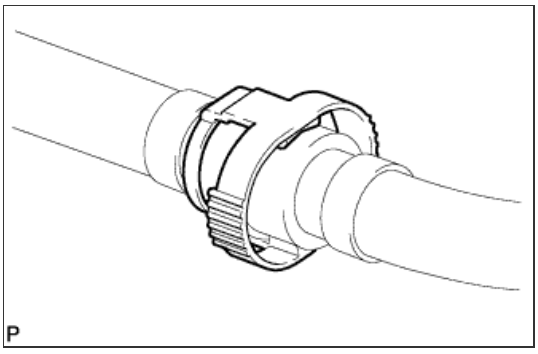

6. REMOVE WIRELESS DOOR LOCK BUZZER

a. Disconnect the connector.

b. Detach the clamp and remove the buzzer.

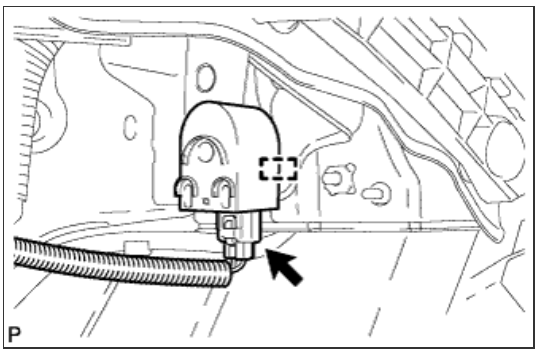

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL WIRELESS DOOR LOCK BUZZER

a. Connect the connector.

b. Attach the clamp to install the buzzer.

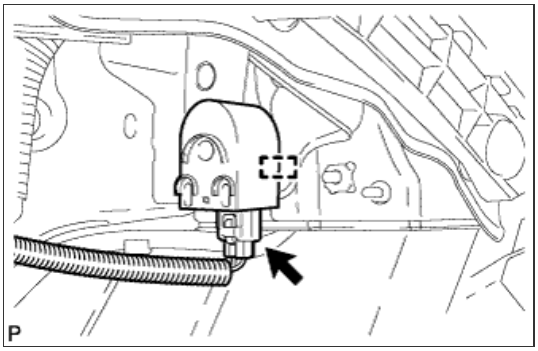

2. INSTALL FRONT BUMPER COVER


HINT:

For the front bumper cover with garnish, use the procedures described below.


a. w/ Headlight Cleaner System:
Connect the headlight cleaner hose.

b. w/o TOYOTA Parking Assist-sensor System, w/o Fog Light:
Attach the 10 claws to install the bumper cover.


c. w/ TOYOTA Parking Assist-sensor System or w/ Fog Light:
Connect the No. 4 engine room wire connector and attach the 10 claws to install the bumper cover.

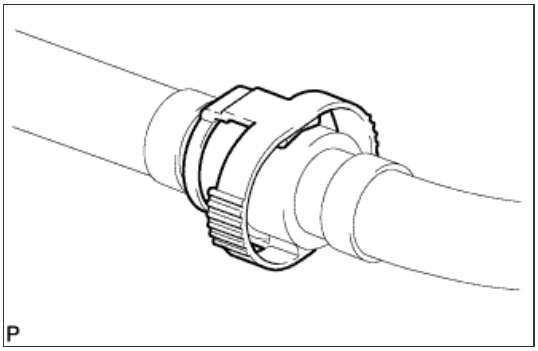

d. Install the 3 clips, 4 screws and 4 bolts.

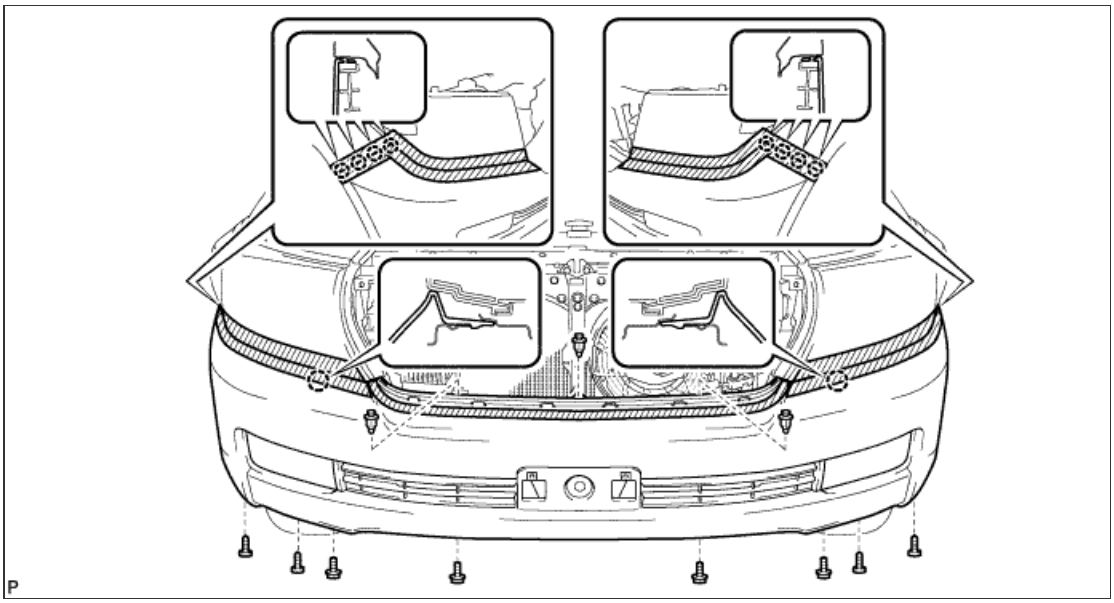


e. Using a T30 "TORX" socket, install the 6 screws.

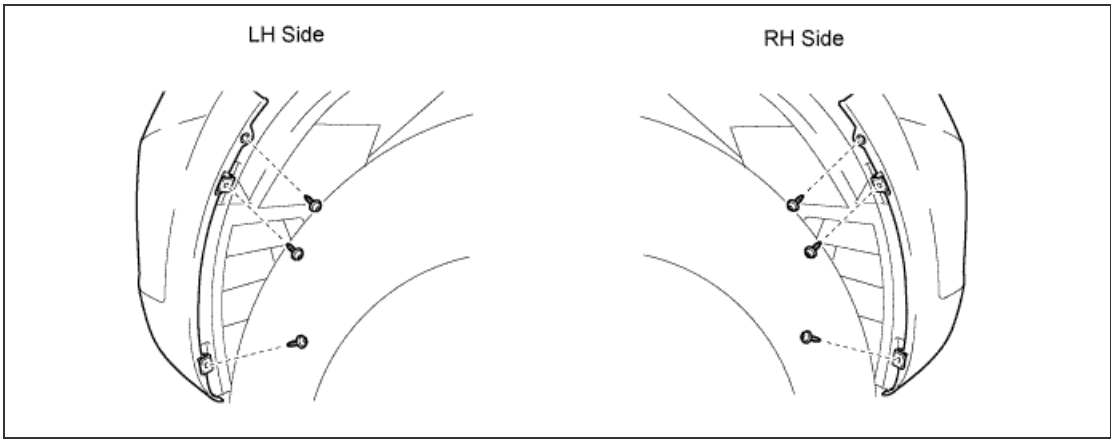

3. INSTALL RADIATOR GRILLE ASSEMBLY


a. Attach the 2 clips and 8 claws to install the radiator grille.

b. Install the 3 screws.

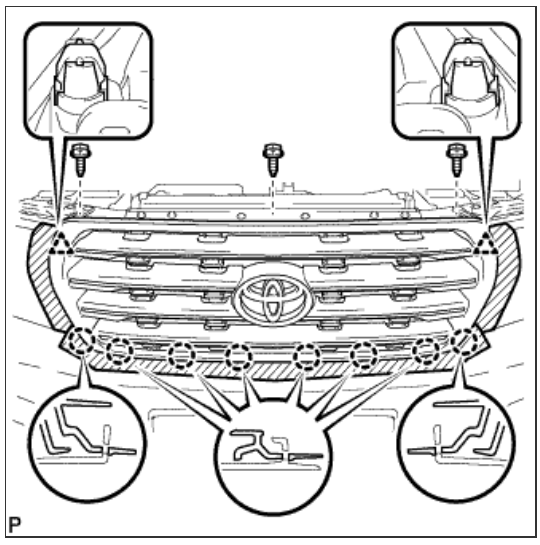

4. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Install the radiator support seal with the 7 clips.

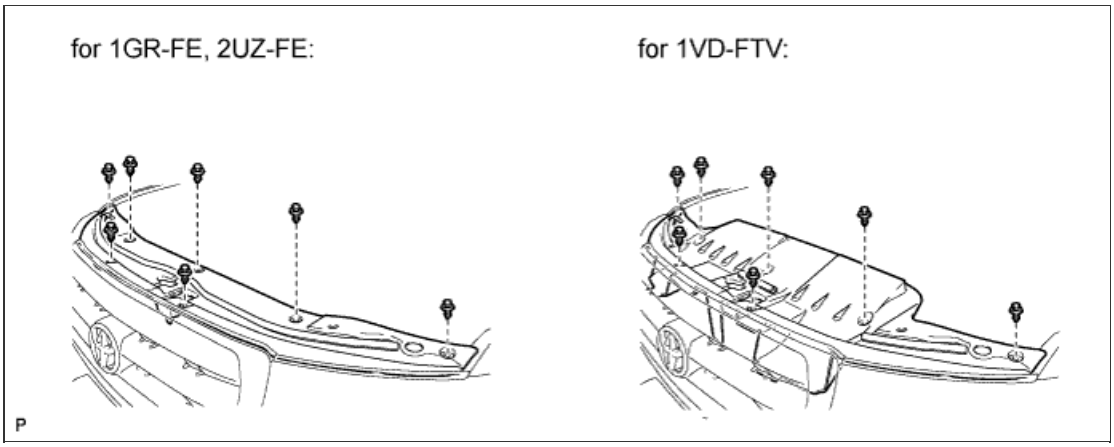

5. INSTALL REAR FENDER SPLASH SHIELD SUB-ASSEMBLY RH


HINT:

Use the same procedures described for the LH side.

6. INSTALL REAR FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. Push in the clip indicated by the arrow in the illustration to install the fender splash shield.

b. Install the 3 bolts and screw.

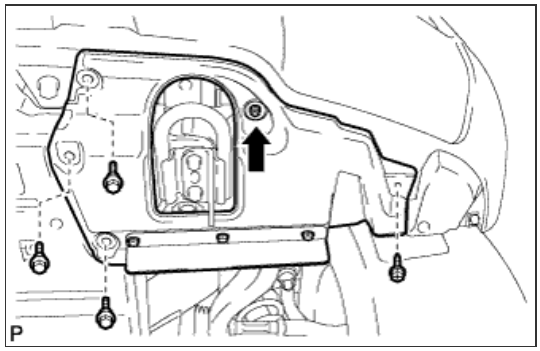

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL WIRELESS DOOR LOCK BUZZER

a. Connect the connector.

b. Attach the clamp to install the buzzer.

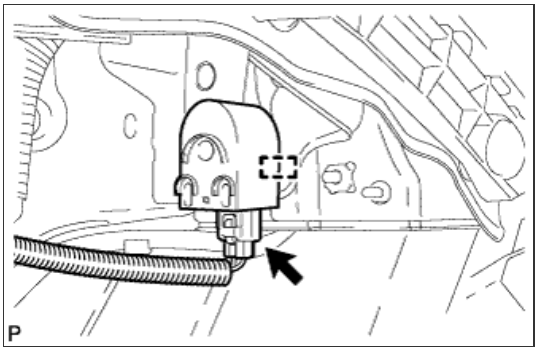

2. INSTALL FRONT BUMPER COVER


HINT:

For the front bumper cover with garnish, use the procedures described below.


a. w/ Headlight Cleaner System:
Connect the headlight cleaner hose.

b. w/o TOYOTA Parking Assist-sensor System, w/o Fog Light:
Attach the 10 claws to install the bumper cover.


c. w/ TOYOTA Parking Assist-sensor System or w/ Fog Light:
Connect the No. 4 engine room wire connector and attach the 10 claws to install the bumper cover.

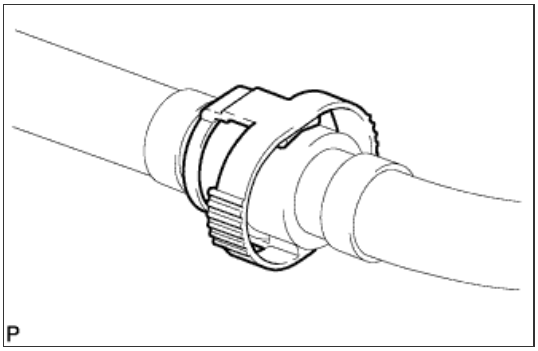

d. Install the 3 clips, 4 screws and 4 bolts.

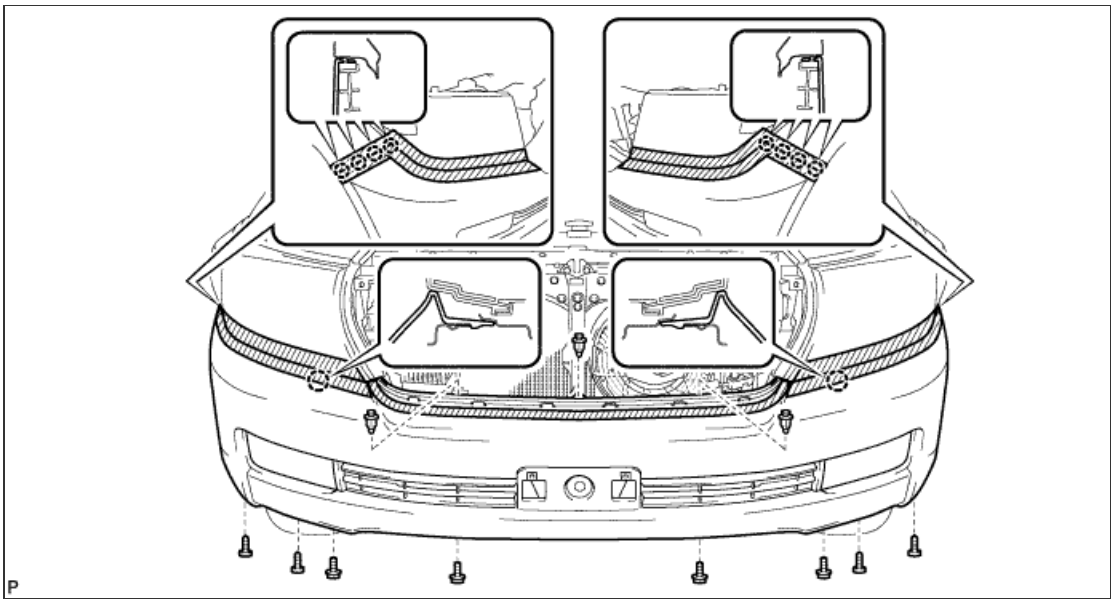


e. Using a T30 "TORX" socket, install the 6 screws.

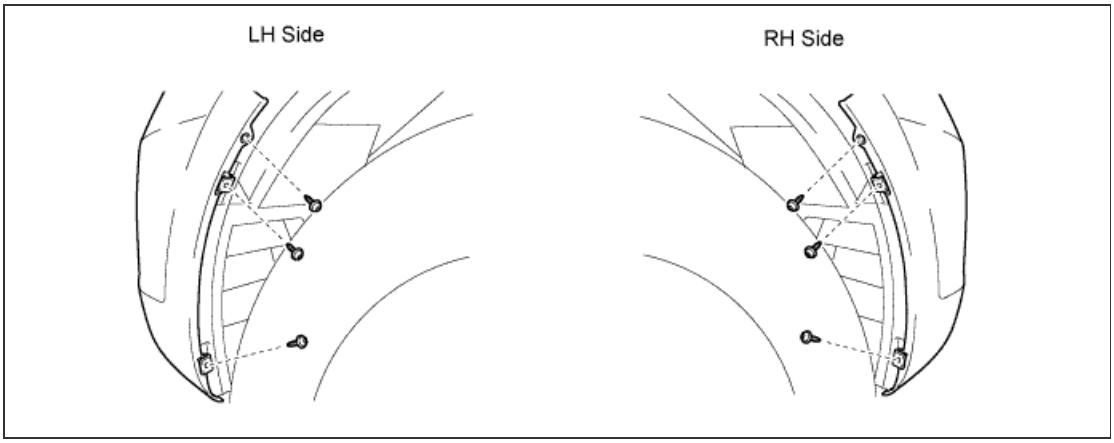

3. INSTALL RADIATOR GRILLE ASSEMBLY


a. Attach the 2 clips and 8 claws to install the radiator grille.

b. Install the 3 screws.

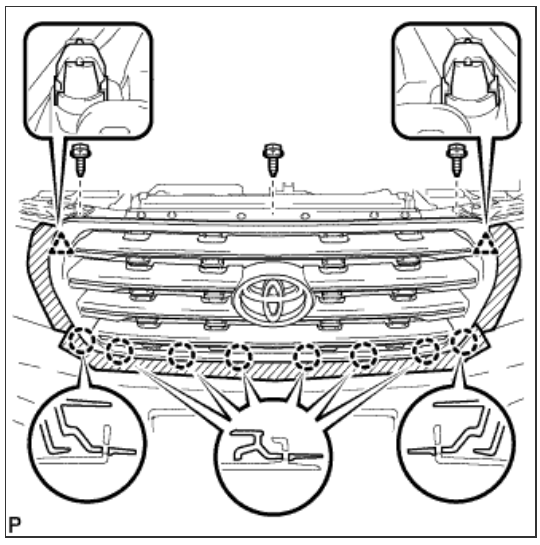

4. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Install the radiator support seal with the 7 clips.

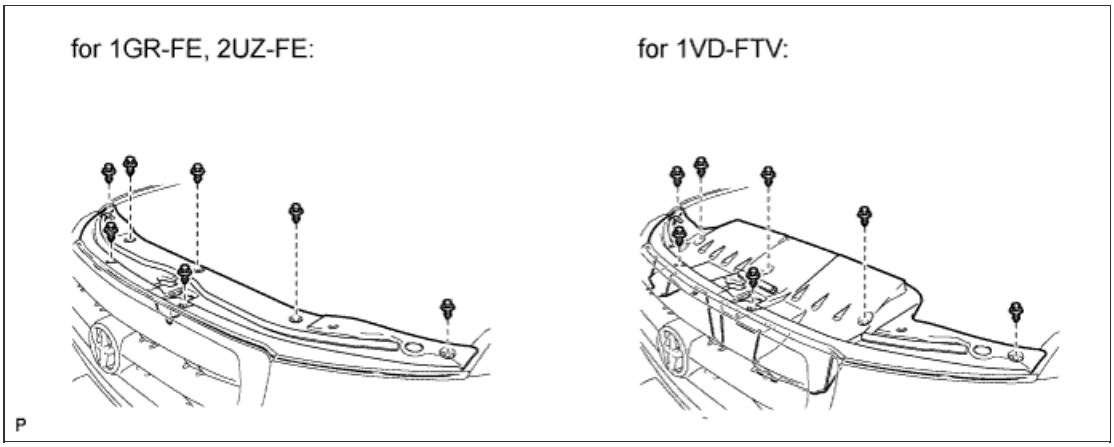

5. INSTALL REAR FENDER SPLASH SHIELD SUB-ASSEMBLY RH


HINT:

Use the same procedures described for the LH side.


6. INSTALL REAR FENDER SPLASH SHIELD SUB-ASSEMBLY LH


a. Push in the clip indicated by the arrow in the illustration to install the fender splash shield.

b. Install the 3 bolts and screw.

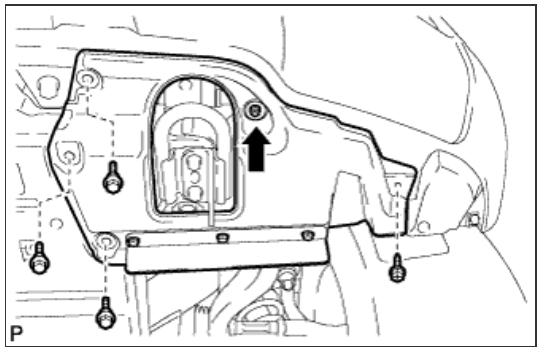

for Preparation Click here

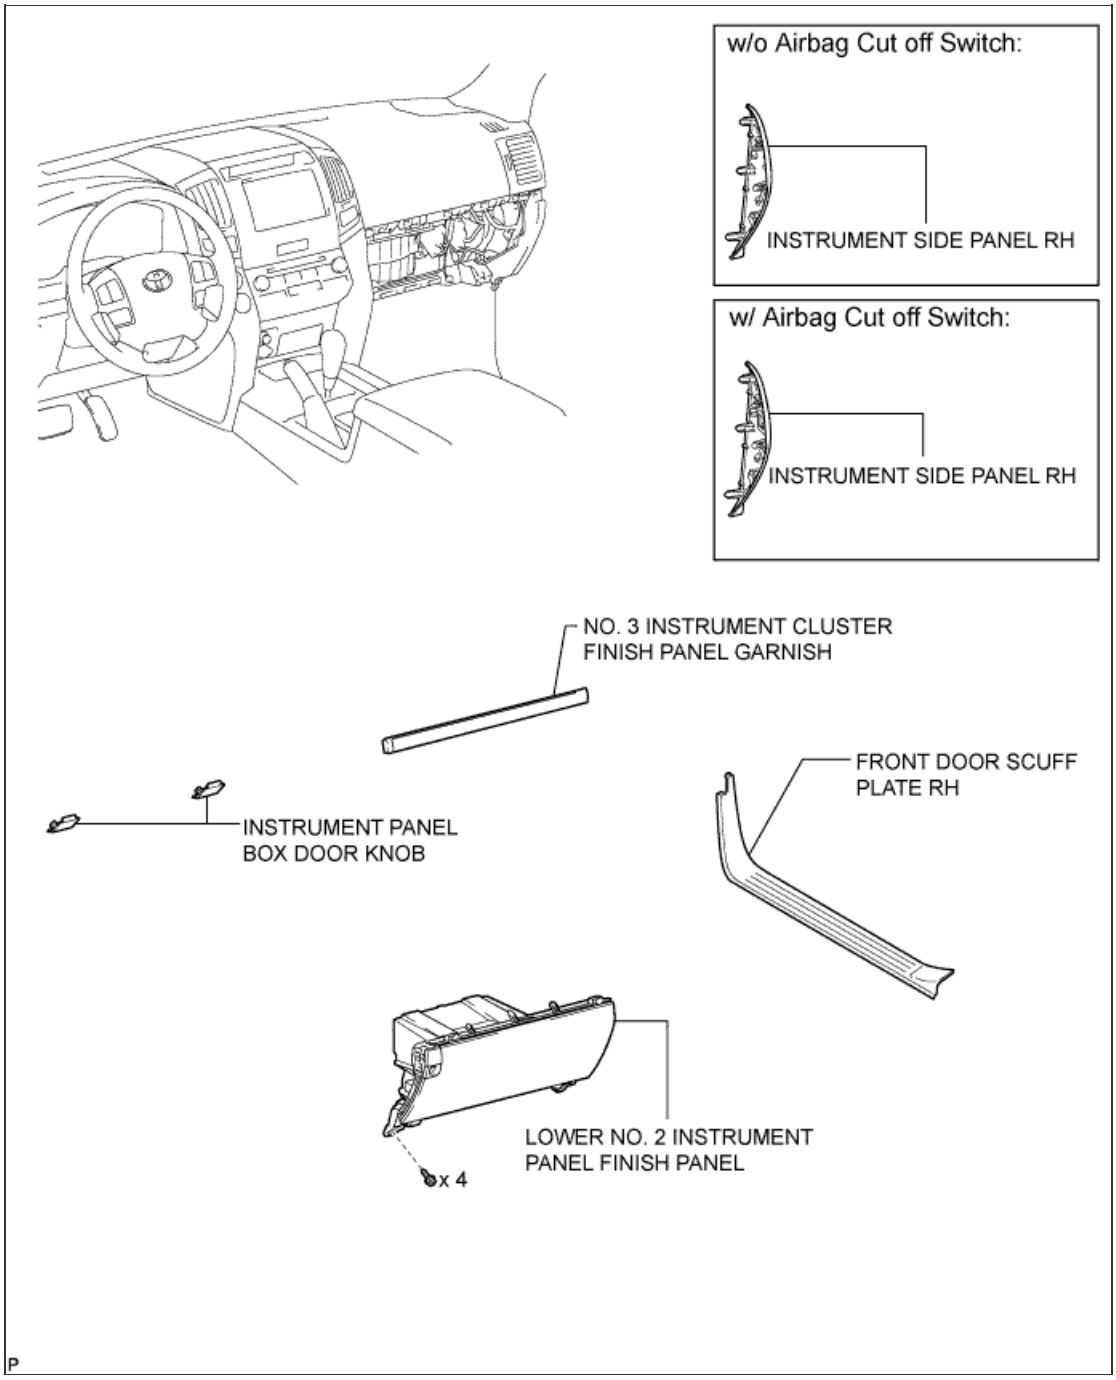

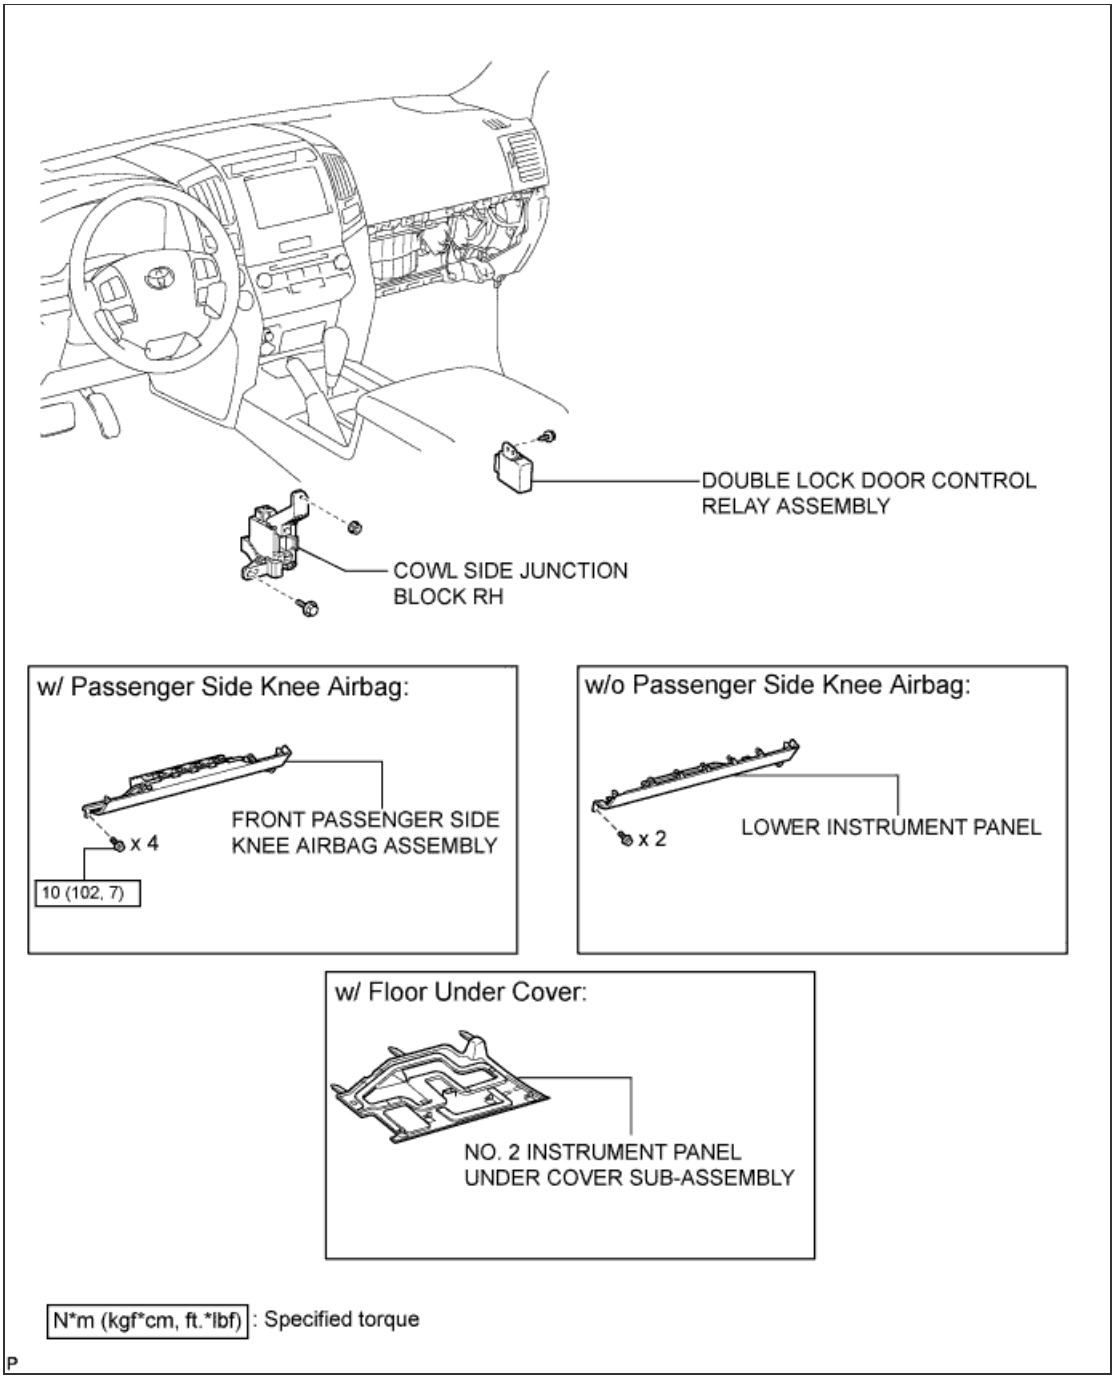
DOUBLE LOCK DOOR CONTROL
RELAY ASSEMBLY
COWL SIDE JUNCTION
BLOCK RH
w/ Passenger Side Knee Airbag:
x 4
FRONT PASSENGER SIDE
KNEE AIRBAG ASSEMBLY
10 (102, 7)
w/o Passenger Side Knee Airbag:
x 2
LOWER INSTRUMENT PANEL
w/ Floor Under Cover:
NO. 2 INSTRUMENT PANEL
UNDER COVER SUB-ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque

P

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE INSTRUMENT SIDE PANEL RH (w/o Airbag Cut Off Switch)

a. Place protective tape as shown in the ill stration.

b. sing a mo ding remover, detach the claws and remove the side panel.

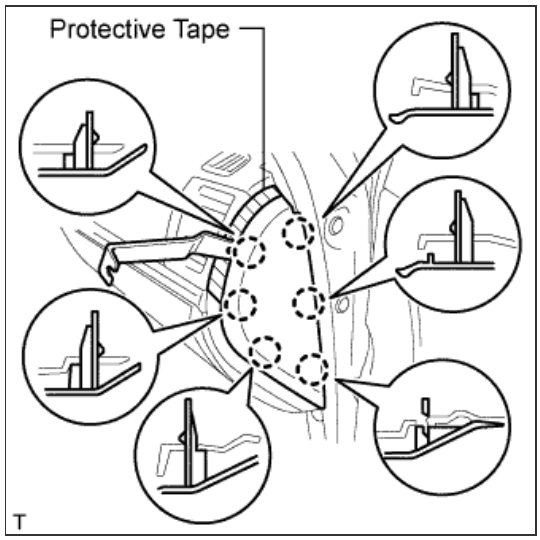


3. REMOVE INSTRUMENT SIDE PANEL RH (w/ Airbag Cut Off Switch)

a. Place protective tape as shown in the ill stration.


b. sing a mo ding remover, detach the claws.

c. Remove the side panel and disconnect the connector.

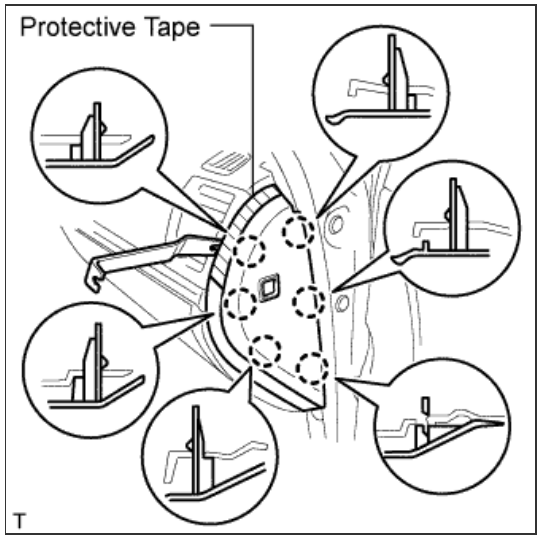

4. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. etach the claws and remove the nder cover.

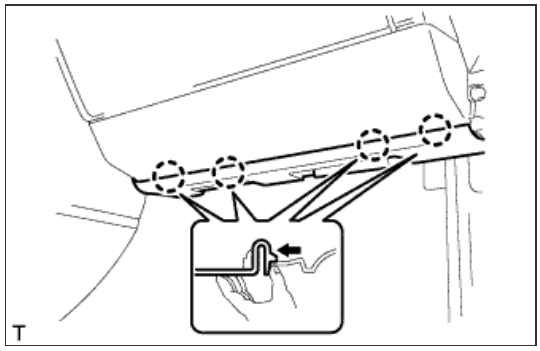

5. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

se the same proced res described for the L side.

6. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)


a. Remove the bolts.

b. etach the claws and remove the front passenger side knee airbag.

c. isconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

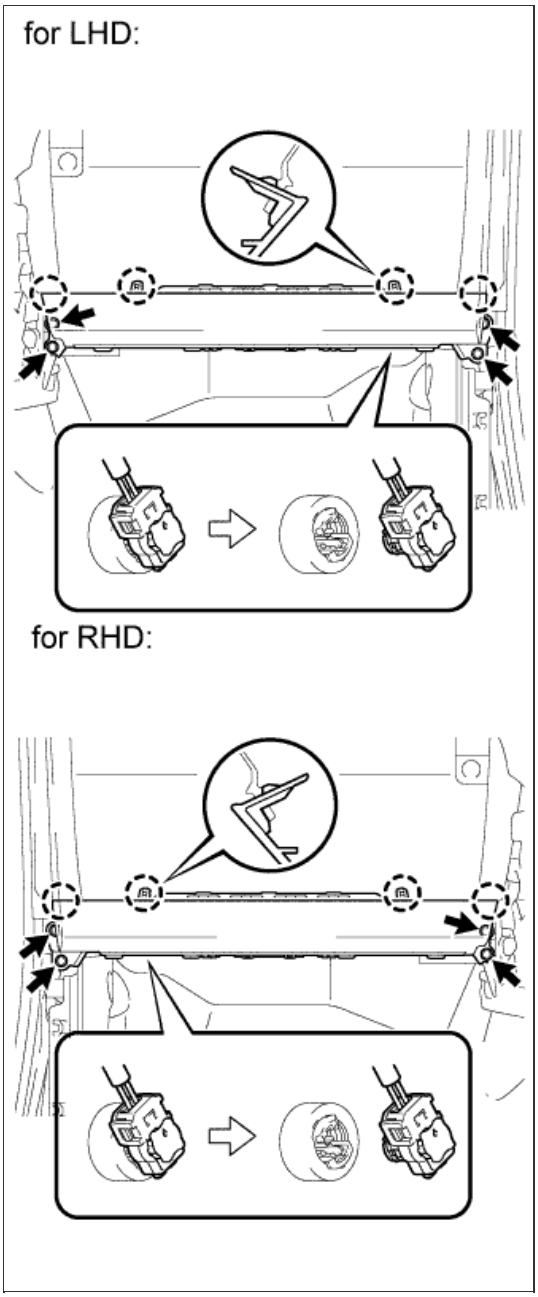

7. REMOVE LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Remove the bolts.


b. etach the claws and remove the instr ment panel.

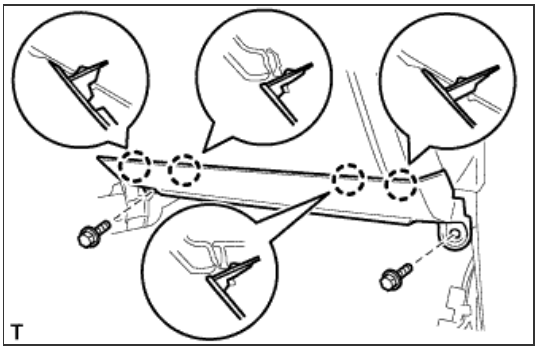

8. REMOVE NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Place protective tape as shown in the ill stration.

b. sing a mo ding remover, detach the claws and remove the panel garnish.

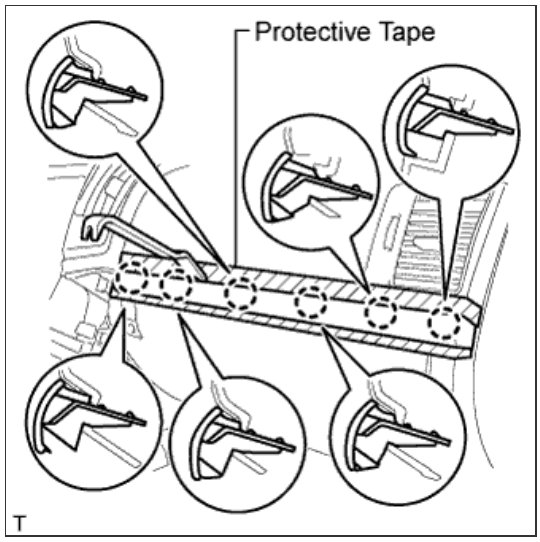

9. REMOVE INSTRUMENT PANEL BOX DOOR KNOB

a. sing a mo ding remover, detach the claws and remove the knob.

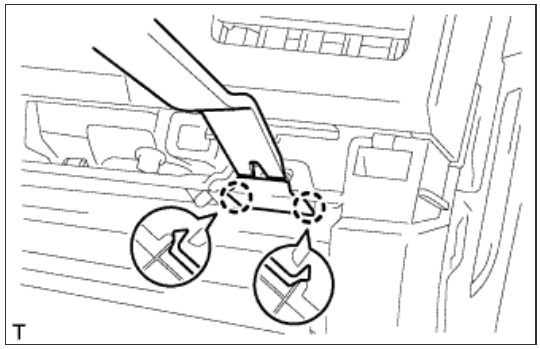


10. REMOVE LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Remove the bolts.

b. etach the claws.


c. Remove the finish panel and then disconnect the connector.

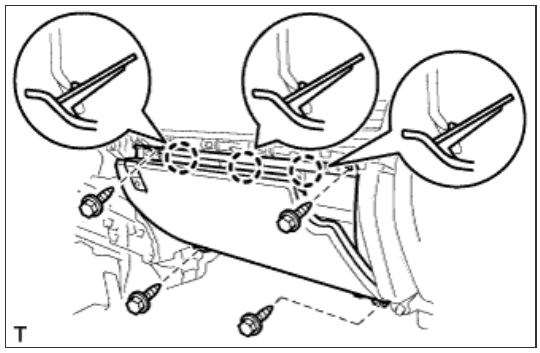

11. REMOVE COWL SIDE JUNCTION BLOCK RH


a. Remove the bolt and n .t

b. isconnect the connector and remove the cowl side j nction block R .

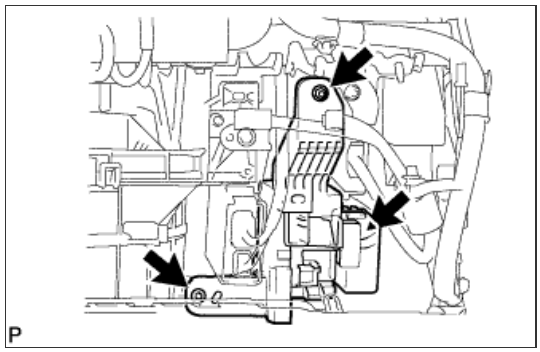

12. REMOVE DOUBLE LOCK DOOR CONTROL RELAY ASSEMBLY

a. Remove the screw and do ble lock door control relay assembly.

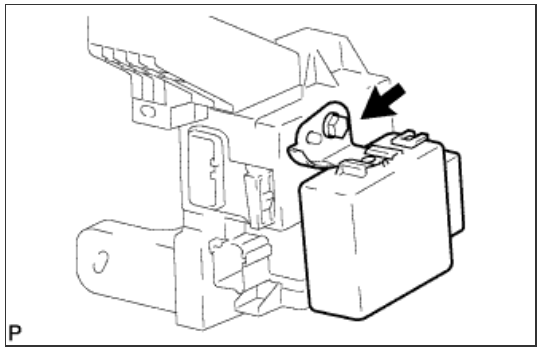

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE INSTRUMENT SIDE PANEL RH (w/o Airbag Cut Off Switch)

a. Place protective tape as shown in the ill stration.

b. sing a mo ding remover, detach the claws and remove the side panel.

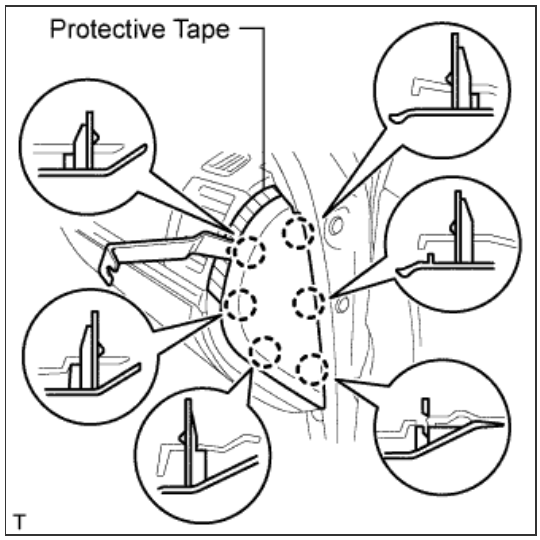


3. REMOVE INSTRUMENT SIDE PANEL RH (w/ Airbag Cut Off Switch)

a. Place protective tape as shown in the ill stration.


b. sing a mo ding remover, detach the claws.

c. Remove the side panel and disconnect the connector.

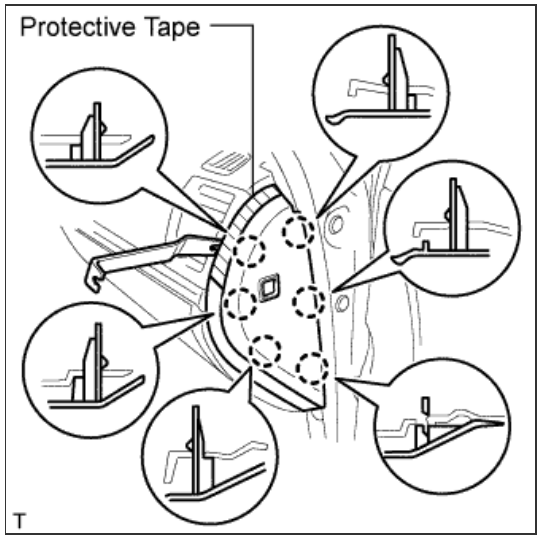

4. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. etach the claws and remove the nder cover.

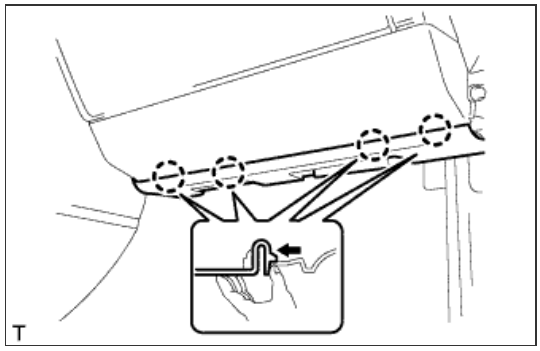

5. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

se the same proced res described for the L side.

6. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)


a. Remove the bolts.

b. etach the claws and remove the front passenger side knee airbag.

c. isconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

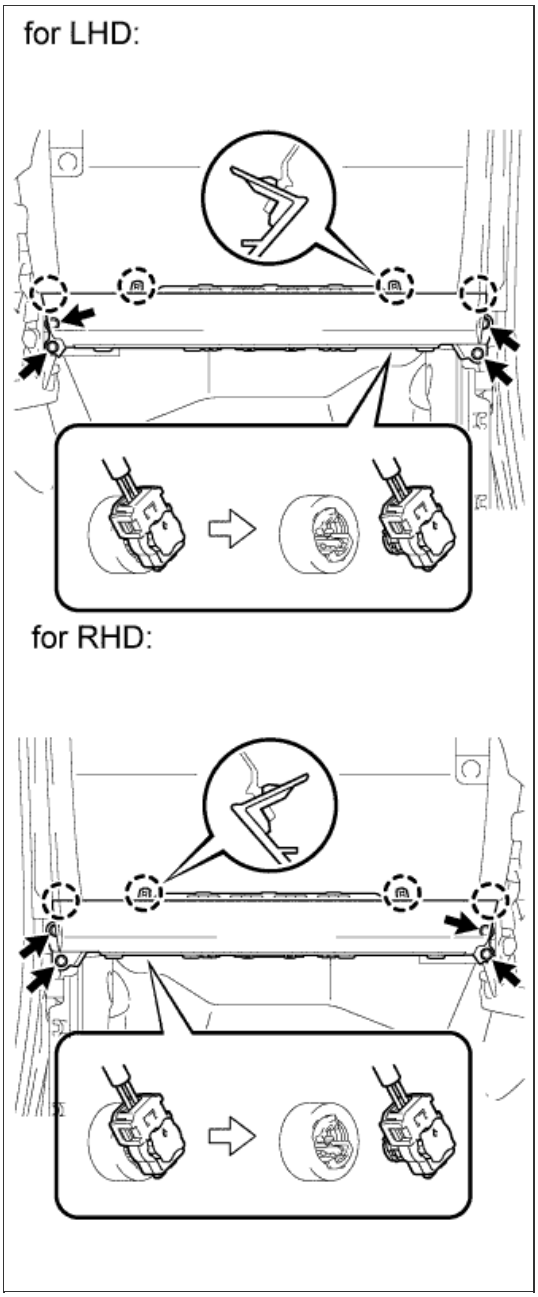

7. REMOVE LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Remove the bolts.


b. etach the claws and remove the instr ment panel.

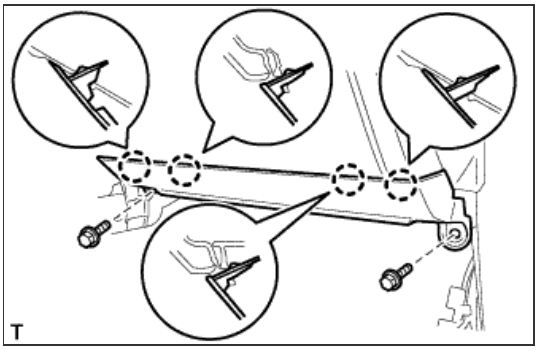

8. REMOVE NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Place protective tape as shown in the ill stration.

b. sing a mo ding remover, detach the claws and remove the panel garnish.

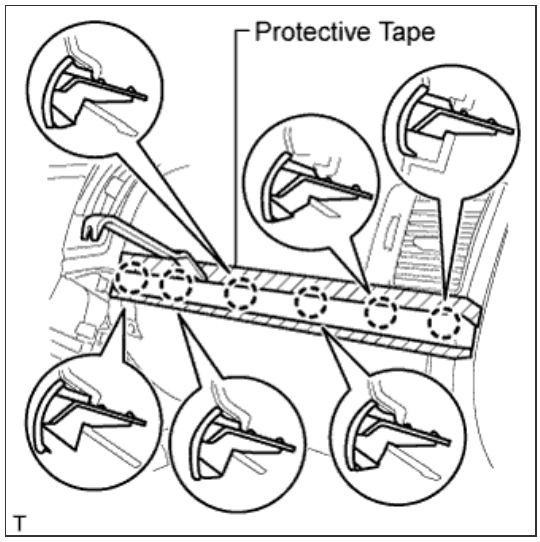

9. REMOVE INSTRUMENT PANEL BOX DOOR KNOB

a. sing a mo ding remover, detach the claws and remove the knob.

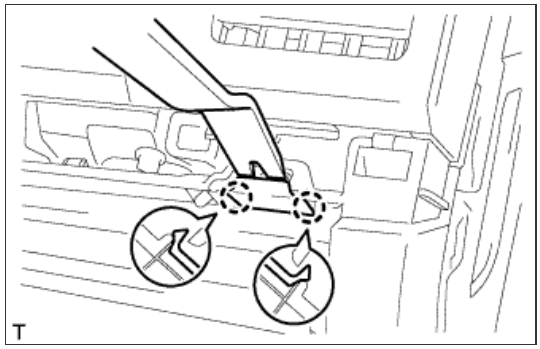


10. REMOVE LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Remove the bolts.

b. etach the claws.


c. Remove the finish panel and then disconnect the connector.

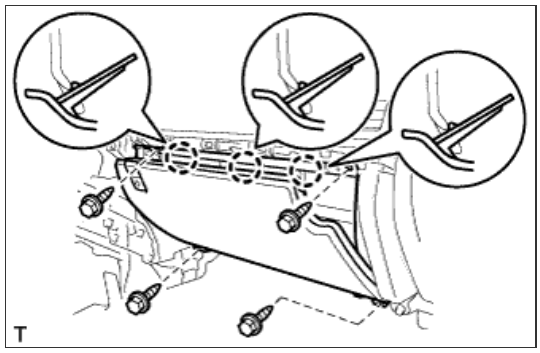

11. REMOVE COWL SIDE JUNCTION BLOCK RH


a. Remove the bolt and n .t

b. isconnect the connector and remove the cowl side j nction block R .

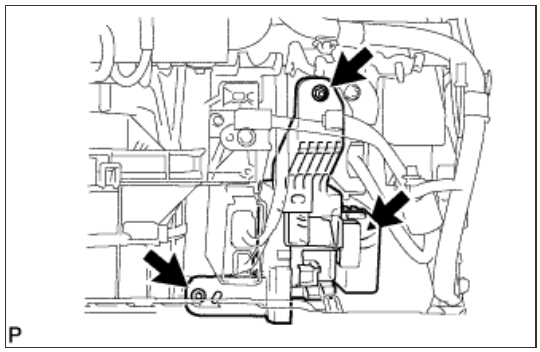

12. REMOVE DOUBLE LOCK DOOR CONTROL RELAY ASSEMBLY


a. Remove the screw and do ble lock door control relay assembly.

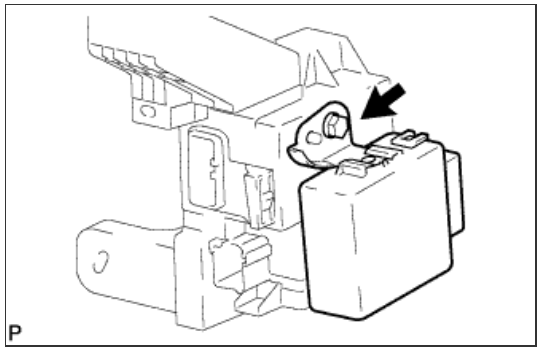

for Preparation Click here

1. INSTALL DOUBLE LOCK DOOR CONTROL RELAY ASSEMBLY


a. Install the double door lock control relay assembly with the screw.

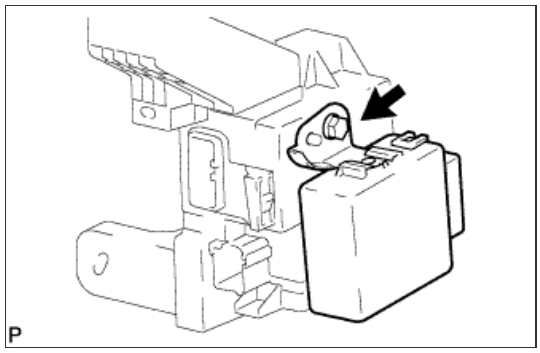

2. INSTALL COWL SIDE JUNCTION BLOCK RH

a. Install the cowl side junction block RH with the bolt and nut.

b. Connect the connector.

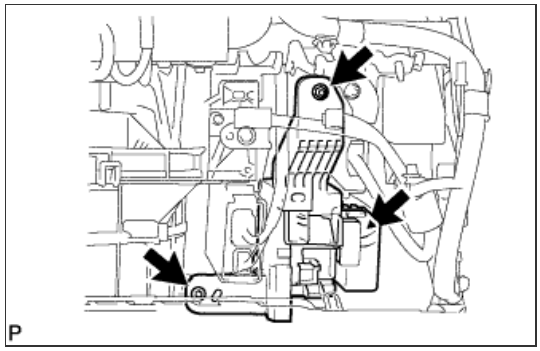


3. INSTALL LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Connect the connector.


b. Attach the 3 claws to install the finish panel.

c. Install the 4 bolts.

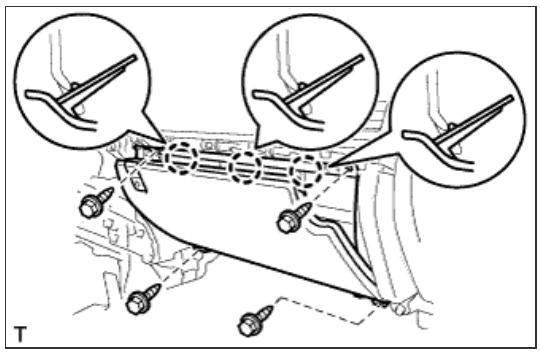


4. INSTALL INSTRUMENT PANEL BOX DOOR KNOB

a. Attach the 2 claws to install the knob.

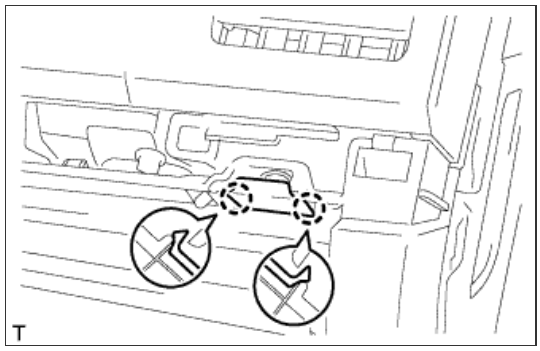

5. INSTALL NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Attach the 6 claws to install the panel garnish.

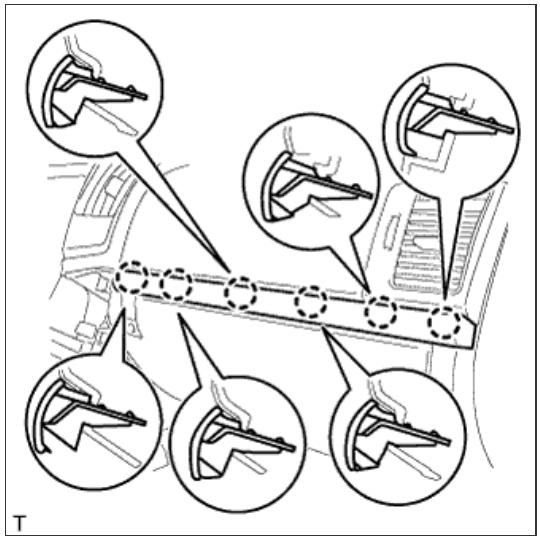

6. INSTALL LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Attach the 4 claws to install the instrument panel.

b. Install the 2 bolts.

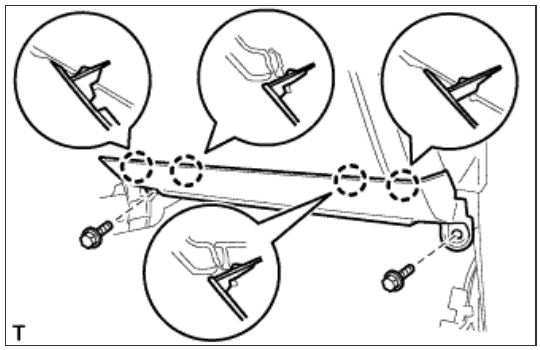

7. INSTALL FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)

a. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Attach the 4 claws to install the front passenger side knee airbag.


c. Install the 4 bolts.

Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

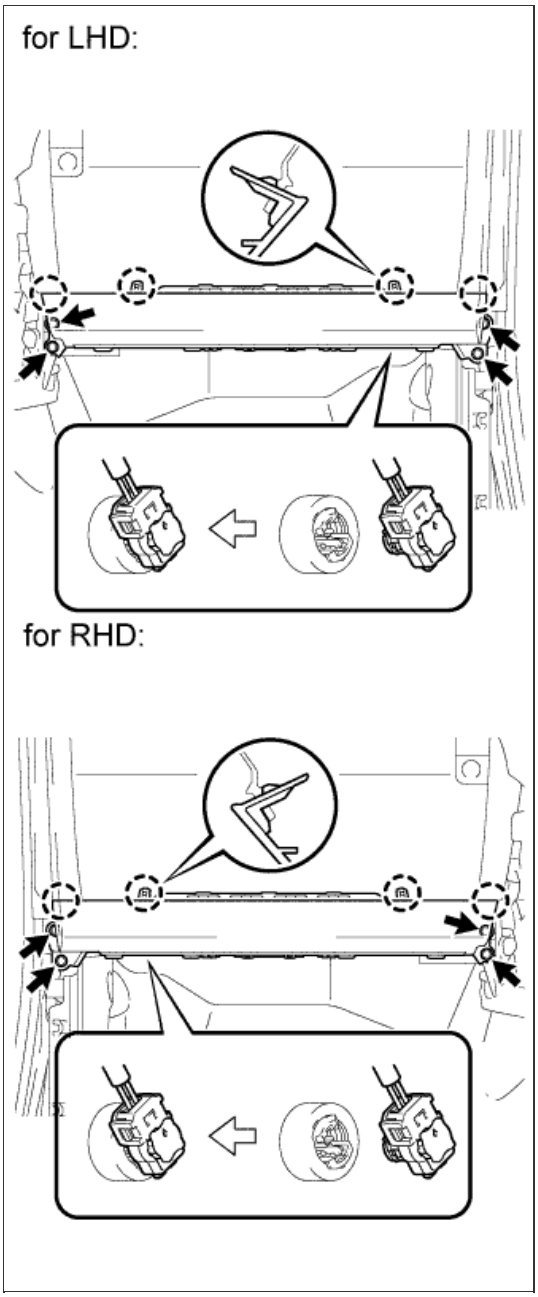

8. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Attach the 4 claws to install the under cover.

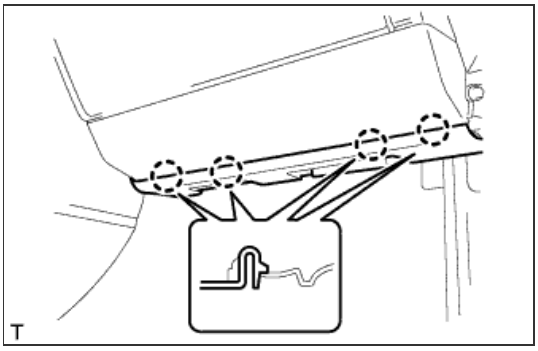

9. INSTALL FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

10. INSTALL INSTRUMENT SIDE PANEL RH (w/ Airbag Cut Off Switch)


a. Connect the connector.

b. Attach the 6 claws to install the side panel.

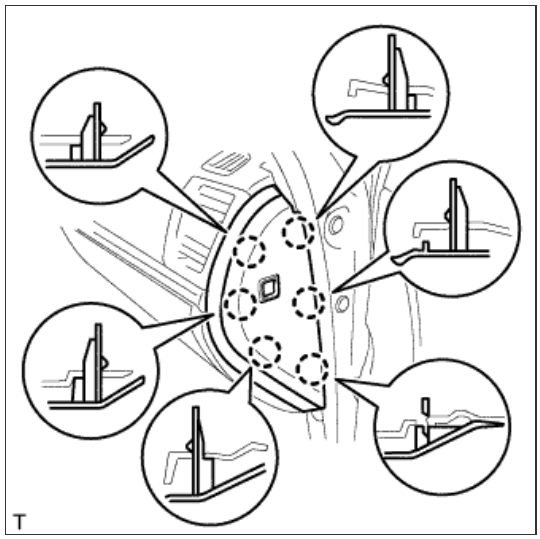

11. INSTALL INSTRUMENT SIDE PANEL RH (w/o Airbag Cut Off Switch)

a. Attach the 6 claws to install the side panel.

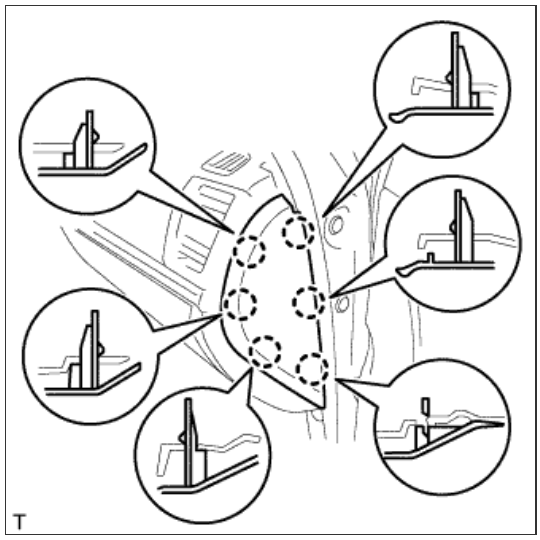

12. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


13. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

1. INSTALL DOUBLE LOCK DOOR CONTROL RELAY ASSEMBLY


a. Install the double door lock control relay assembly with the screw.

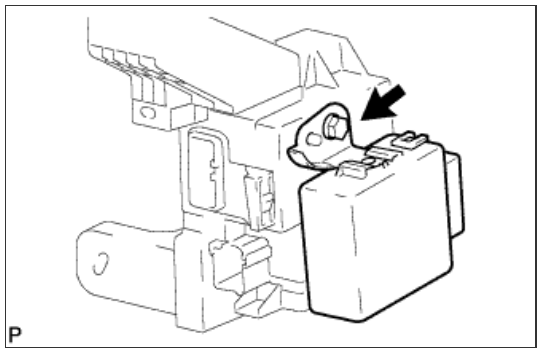

2. INSTALL COWL SIDE JUNCTION BLOCK RH

a. Install the cowl side junction block RH with the bolt and nut.

b. Connect the connector.

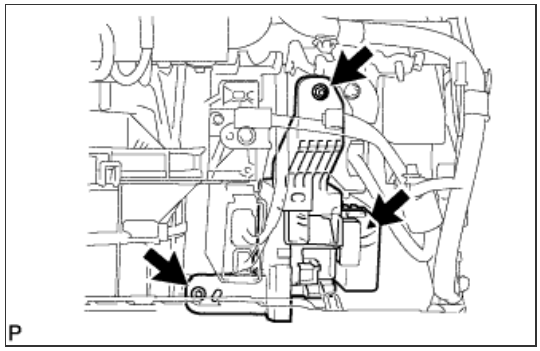


3. INSTALL LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Connect the connector.


b. Attach the 3 claws to install the finish panel.

c. Install the 4 bolts.

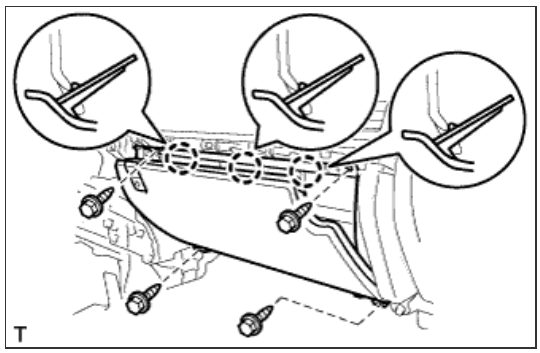


4. INSTALL INSTRUMENT PANEL BOX DOOR KNOB

a. Attach the 2 claws to install the knob.

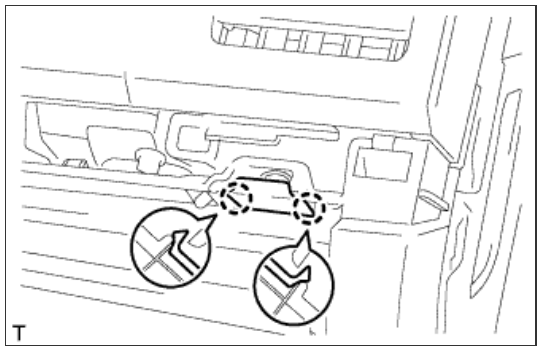

5. INSTALL NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Attach the 6 claws to install the panel garnish.

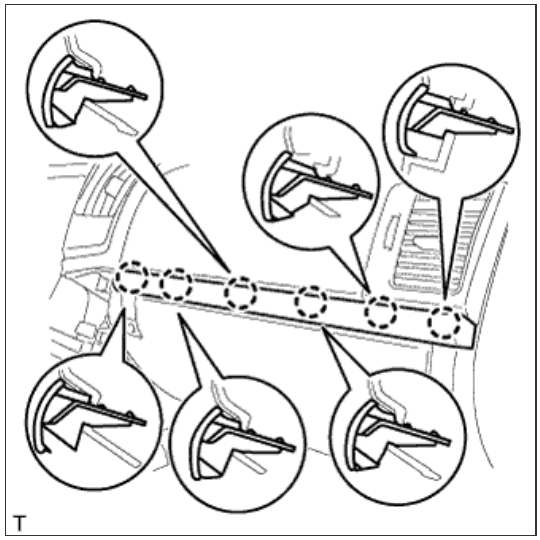

6. INSTALL LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Attach the 4 claws to install the instrument panel.

b. Install the 2 bolts.

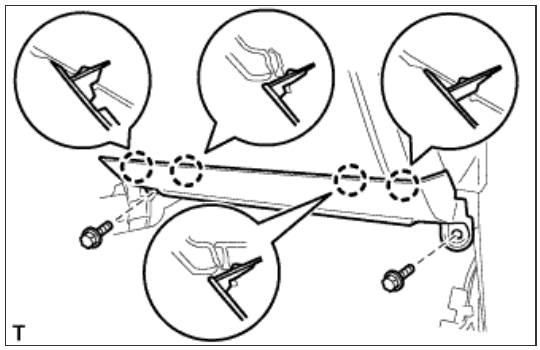

7. INSTALL FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)

a. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Attach the 4 claws to install the front passenger side knee airbag.


c. Install the 4 bolts.

Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

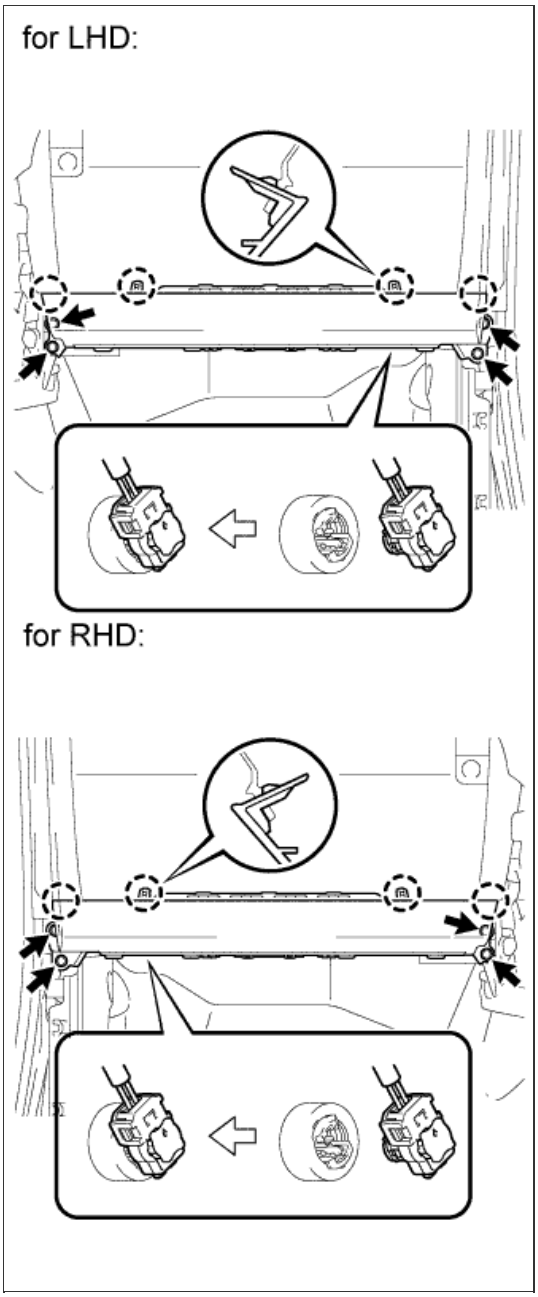

8. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Attach the 4 claws to install the under cover.

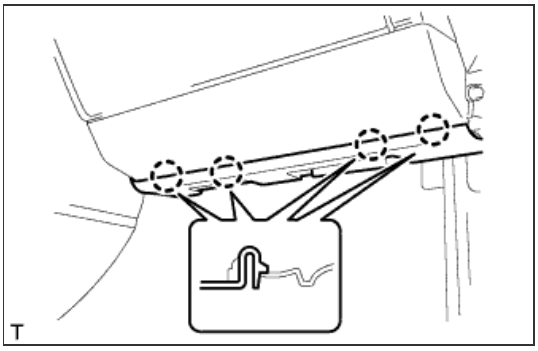

9. INSTALL FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

10. INSTALL INSTRUMENT SIDE PANEL RH (w/ Airbag Cut Off Switch)


a. Connect the connector.

b. Attach the 6 claws to install the side panel.

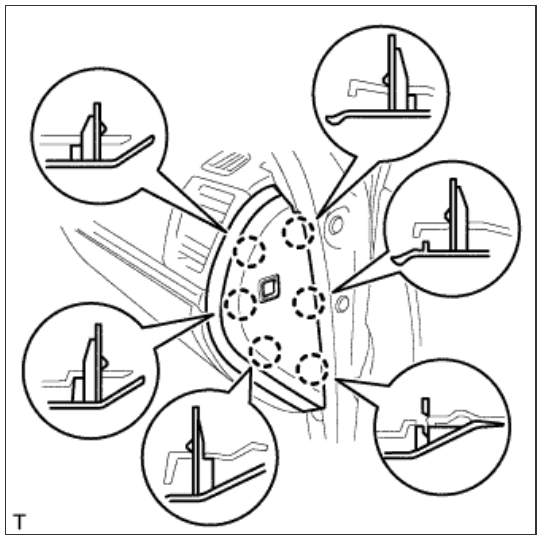

11. INSTALL INSTRUMENT SIDE PANEL RH (w/o Airbag Cut Off Switch)

a. Attach the 6 claws to install the side panel.

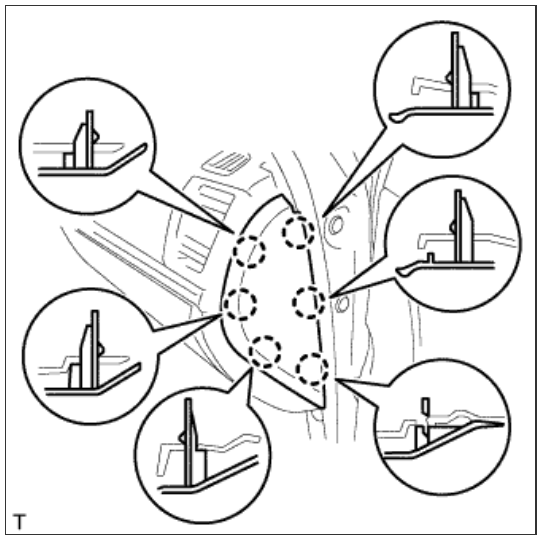

12. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

13. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

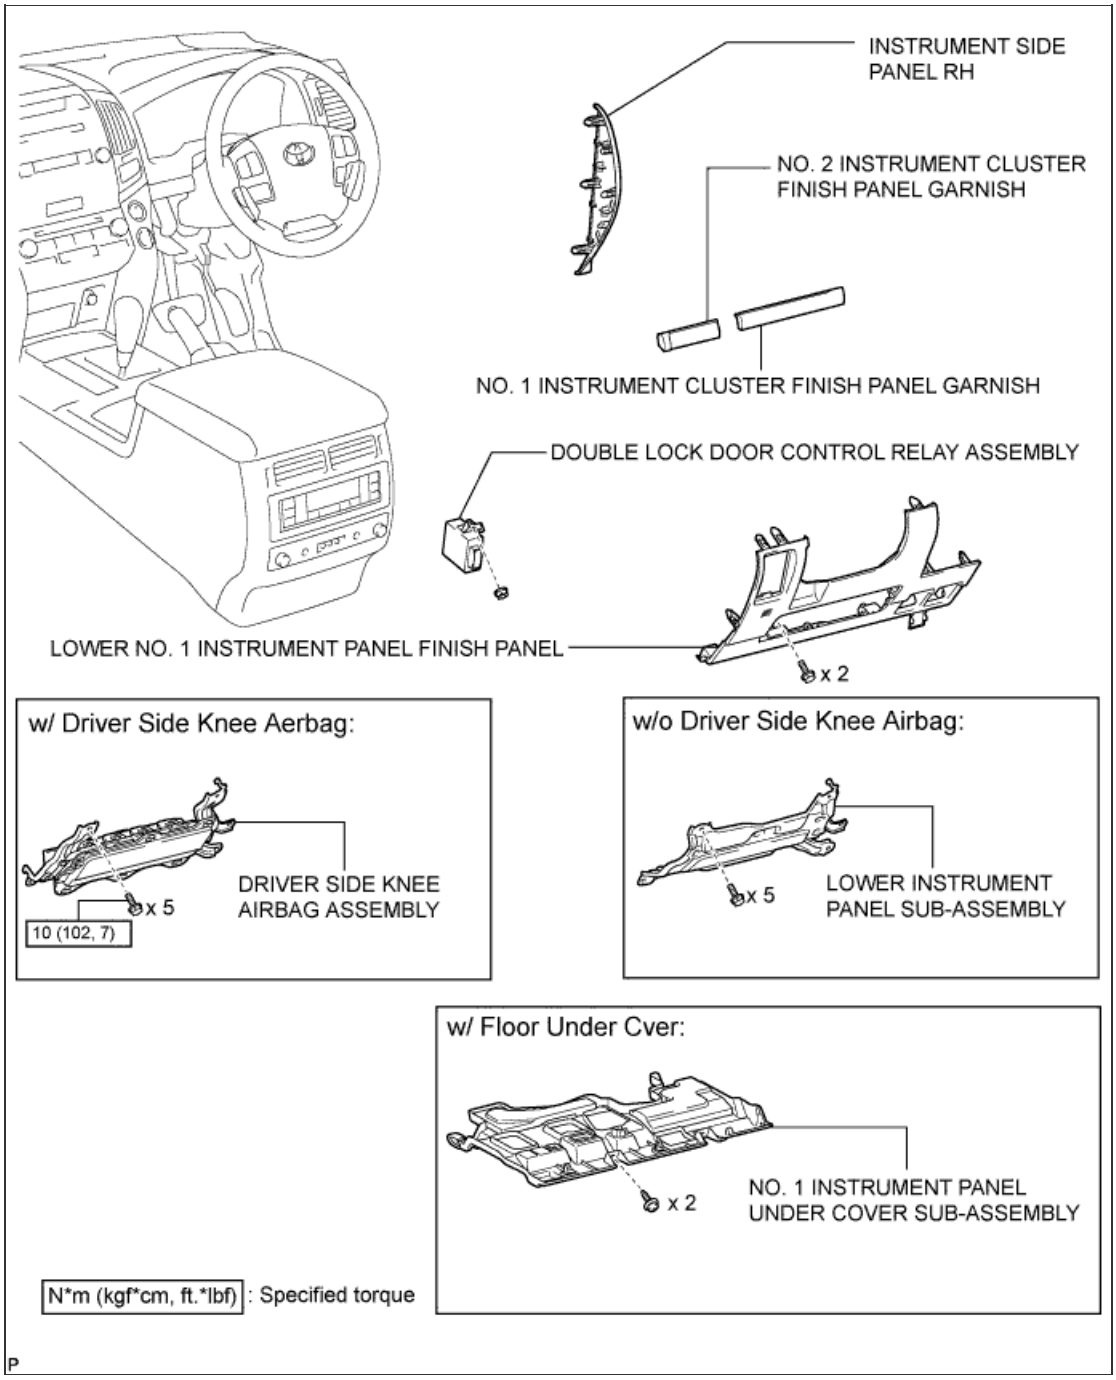

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE INSTRUMENT SIDE PANEL RH

a. Place protective tape as shown in the ill stration.


b. Using a mo ding remover, detach the claws and remove the side panel.

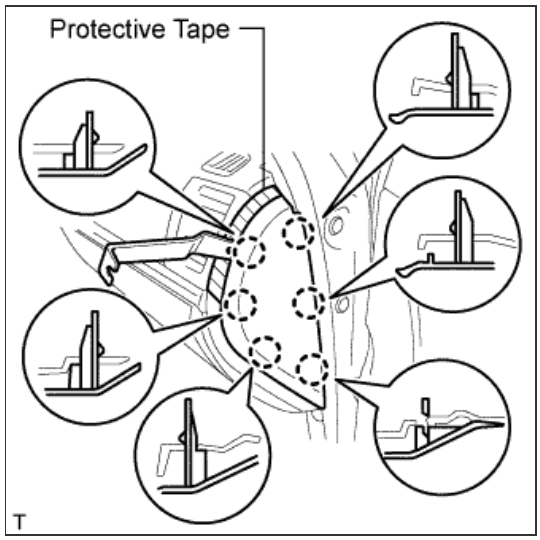

3. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the ill stration.


b. Using a mo ding remover, detach the 3 claws and remove the panel garnish.

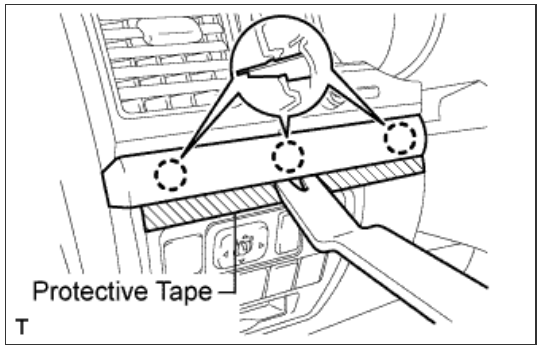

4. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the ill stration.

b. Using a mo ding remover, detach the 2 claws and remove the panel garnish.

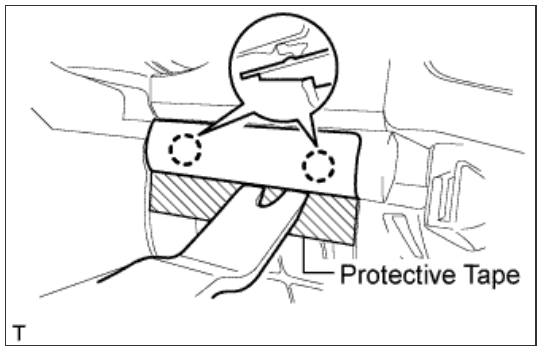


5. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.

c. Remove the nder cover and disconnect the connectors.

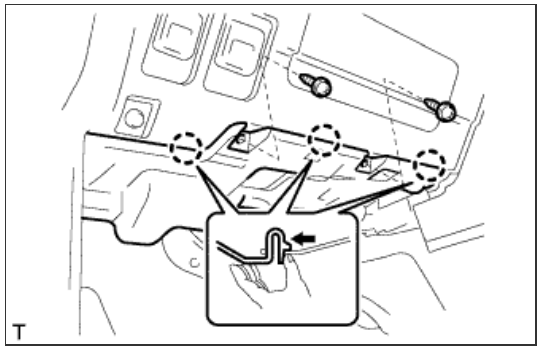


6. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


ape the screwdriver tip before se.

b. Open the hole cover.

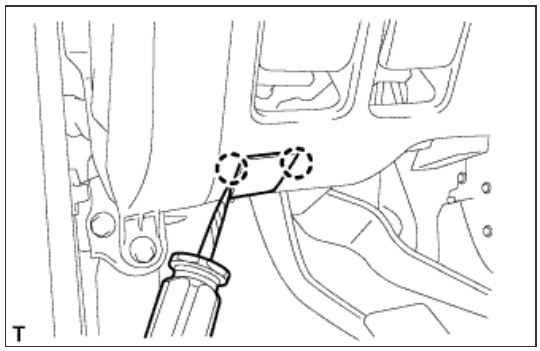


c. Remove the 2 bolts.

d. Detach the 14 claws.

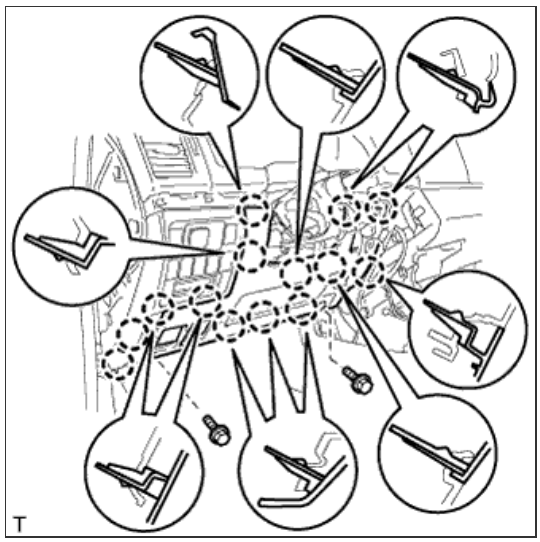


e. Detach the 2 claws and remove the sensor.

e. Detach the 2 claws and remove the sensor.

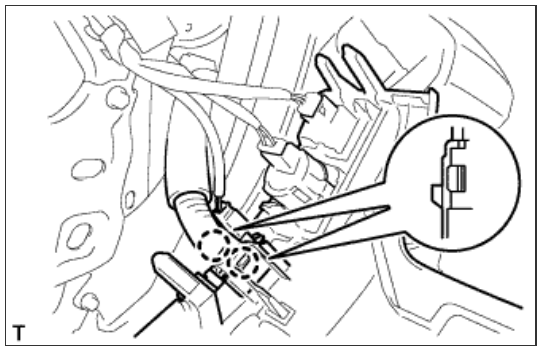

f. Detach the 2 claws and disconnect the 2 control cables.


g. Remove the finish panel and then disconnect the connectors.

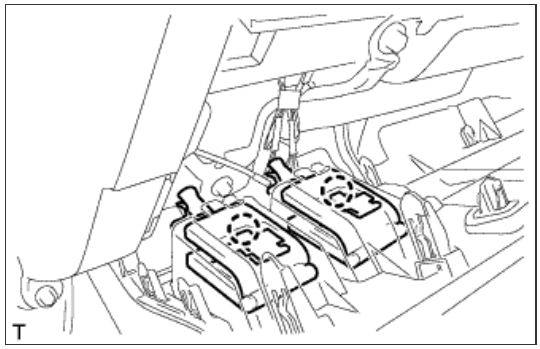

7. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)

a. Detach the 2 claws and disconnect the DLC3.

b. Remove the bolts and instr ment panel.

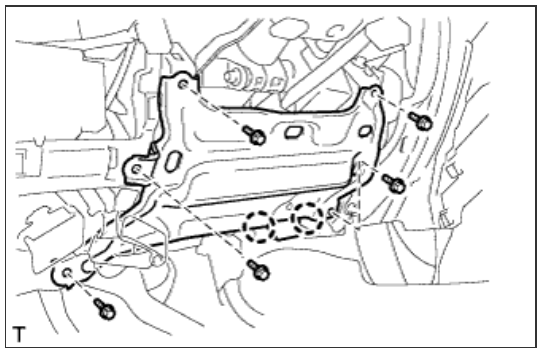


8. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)

a. Remove the bolts and driver side knee airbag.

b. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

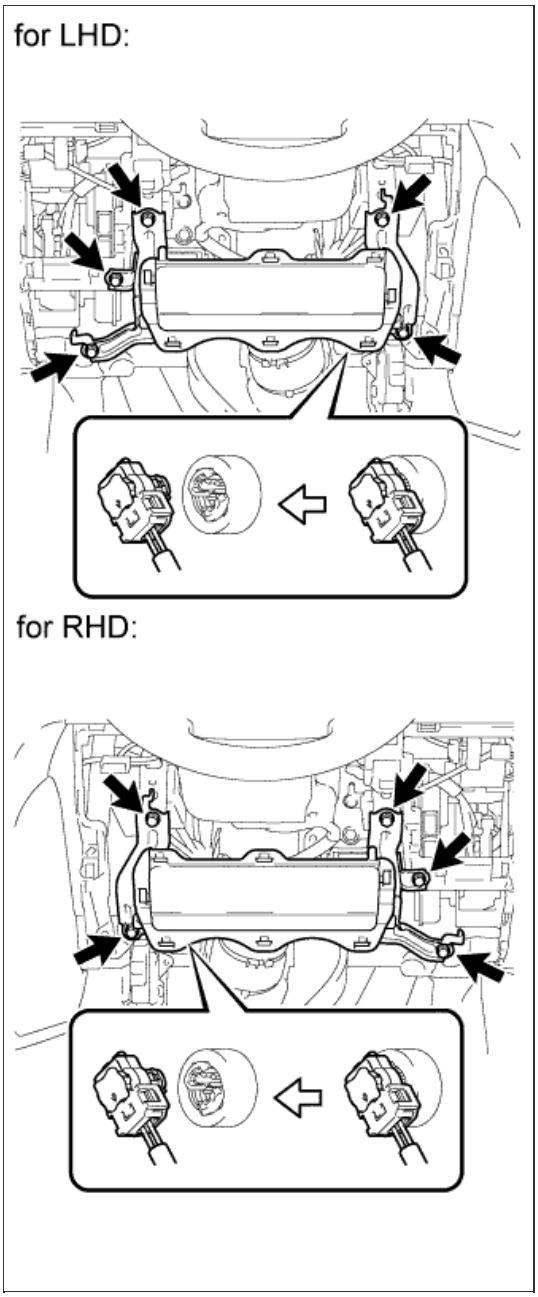

9. REMOVE DOUBLE LOCK DOOR CONTROL RELAY ASSEMBLY

a. Disconnect the connector.

b. Remove the n and do ble lock door control relay assembly.

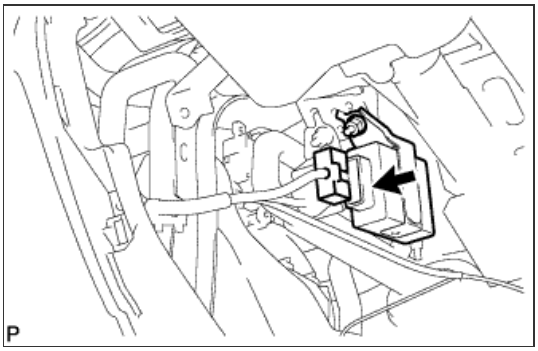

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE INSTRUMENT SIDE PANEL RH

a. Place protective tape as shown in the ill stration.


b. Using a mo ding remover, detach the claws and remove the side panel.

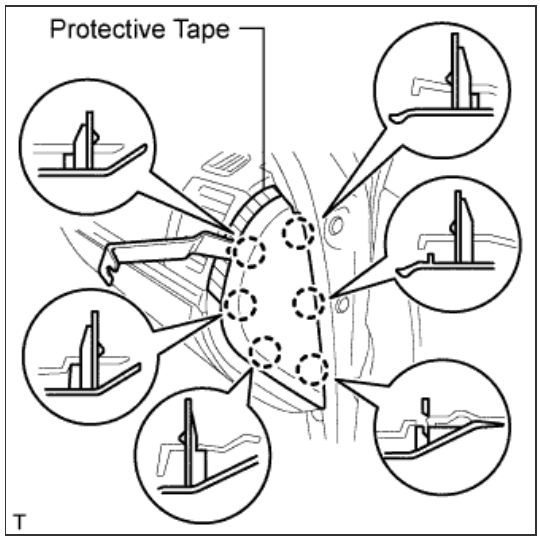

3. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the ill stration.


b. Using a mo ding remover, detach the 3 claws and remove the panel garnish.

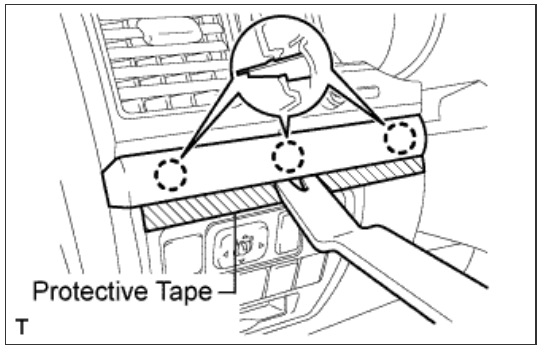

4. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the ill stration.

b. Using a mo ding remover, detach the 2 claws and remove the panel garnish.

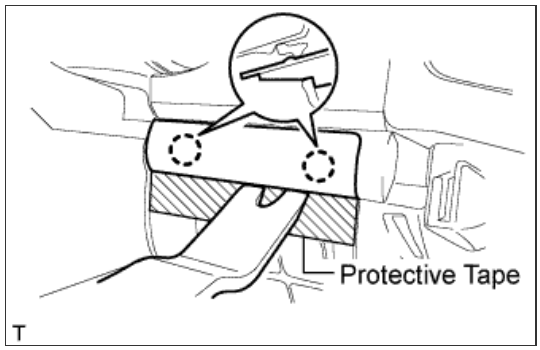


5. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.

c. Remove the nder cover and disconnect the connectors.

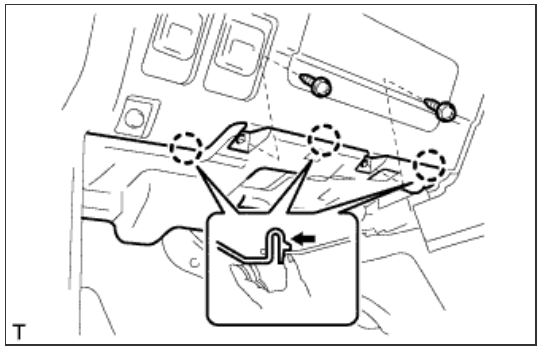


6. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


ape the screwdriver tip before se.

b. Open the hole cover.

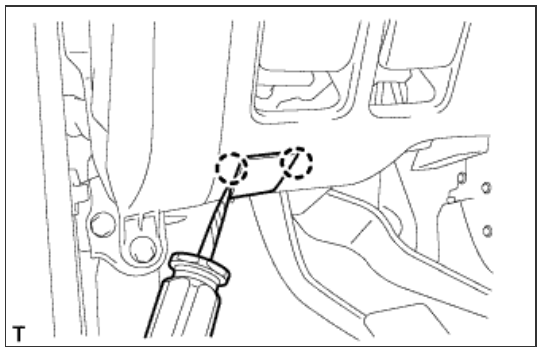


c. Remove the 2 bolts.

d. Detach the 14 claws.

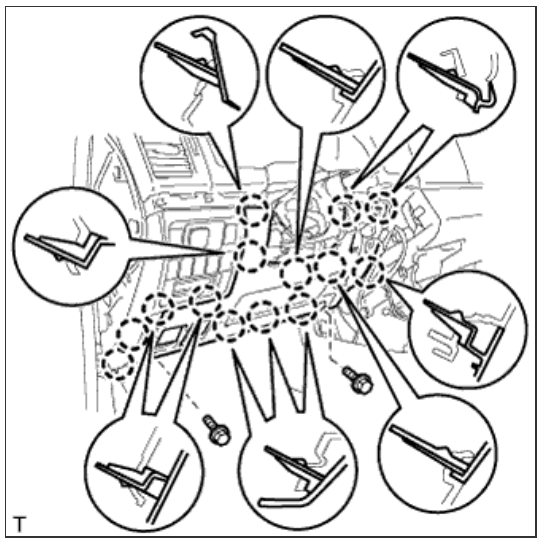


e. Detach the 2 claws and remove the sensor.

e. Detach the 2 claws and remove the sensor.

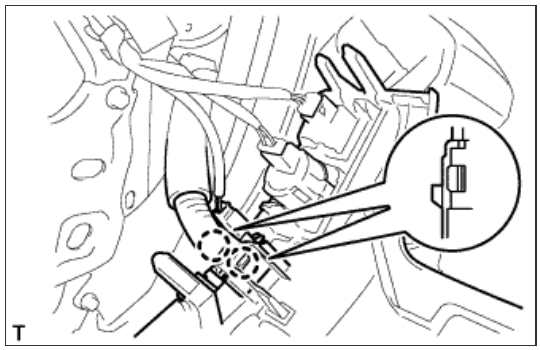

f. Detach the 2 claws and disconnect the 2 control cables.


g. Remove the finish panel and then disconnect the connectors.

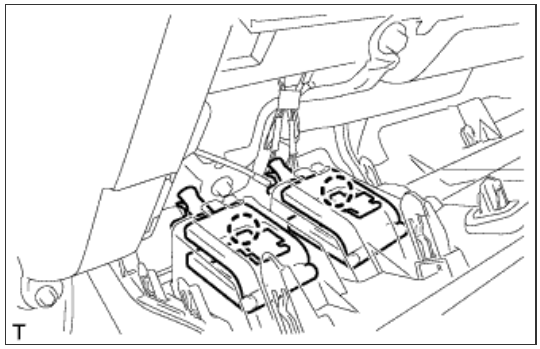

7. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)

a. Detach the 2 claws and disconnect the DLC3.

b. Remove the bolts and instr ment panel.

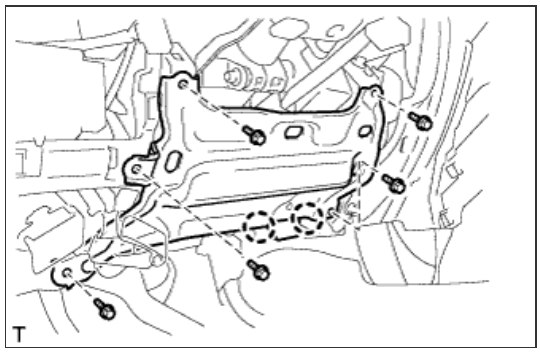


8. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)

a. Remove the bolts and driver side knee airbag.

b. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

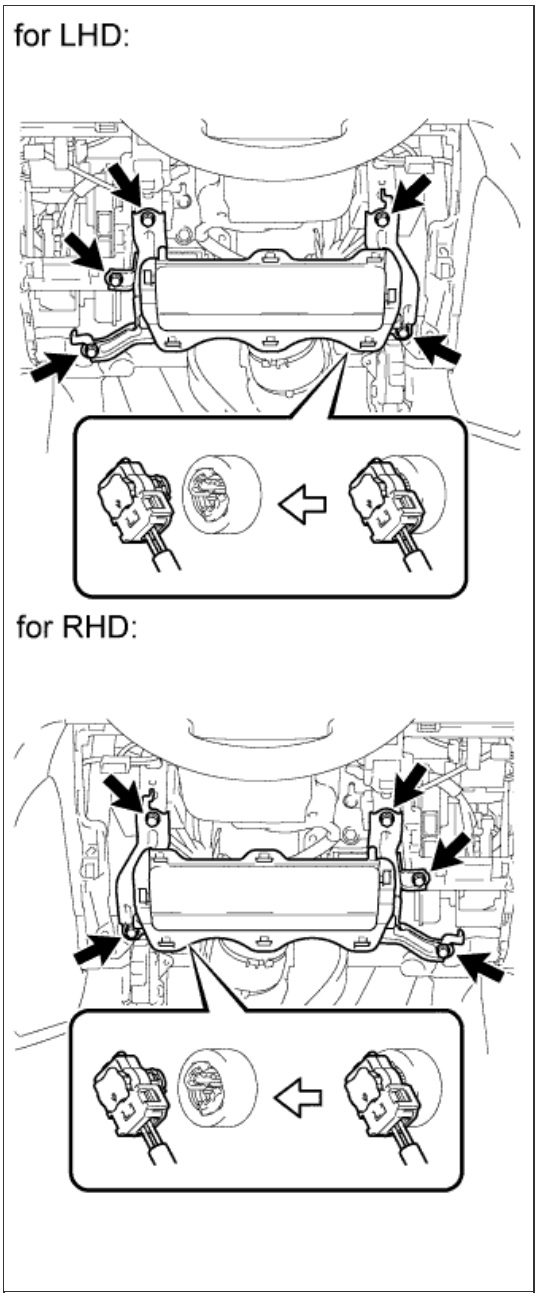

9. REMOVE DOUBLE LOCK DOOR CONTROL RELAY ASSEMBLY

a. Disconnect the connector.

b. Remove the n and do ble lock door control relay assembly.

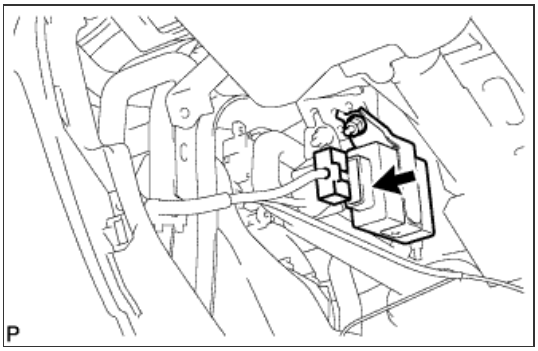


for Preparation Click here

1. INSTALL DOUBLE LOCK DOOR CONTROL RELAY ASSEMBLY

a. Install the double lock door control relay assembly with the nut.

b. Connect the connector.

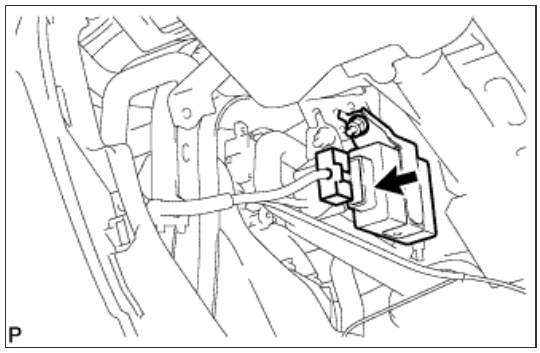

2. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)


a. Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Install the driver side knee airbag with the 5 bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

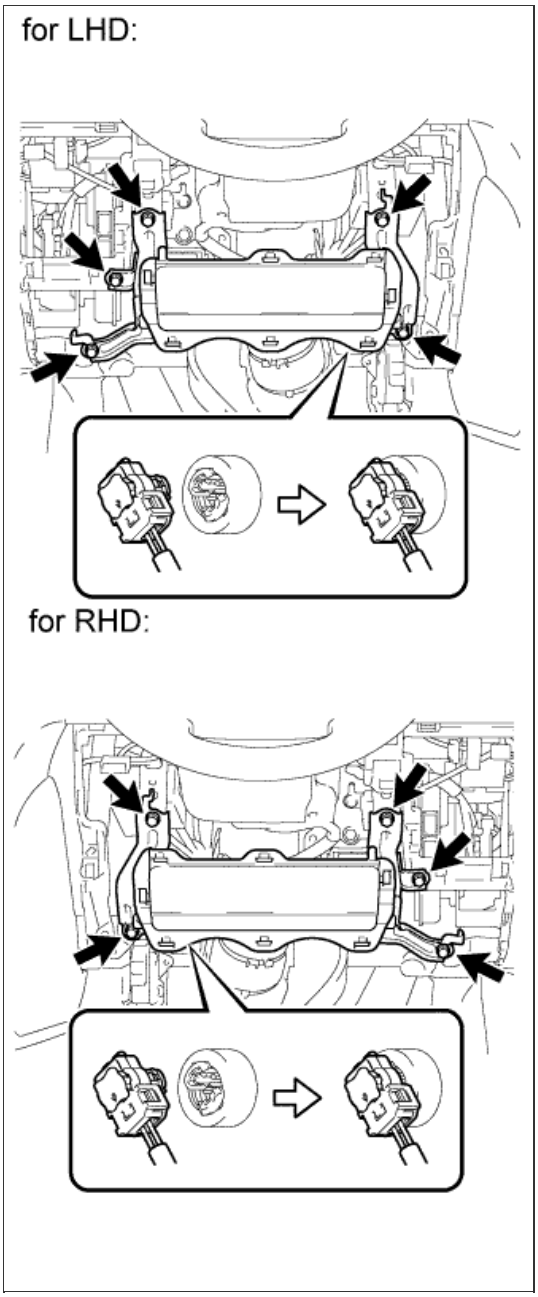

3. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)

a. Attach the 4 claws and connect the DLC3.


b. Install the instrument panel with the 5 bolts.

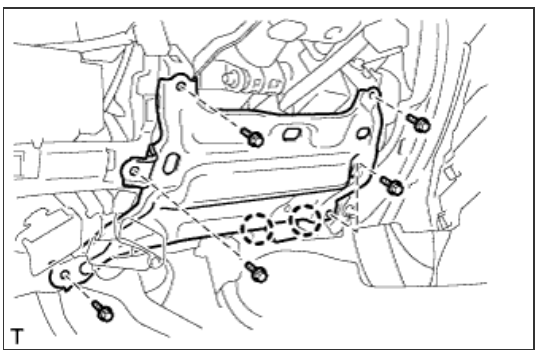


4. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

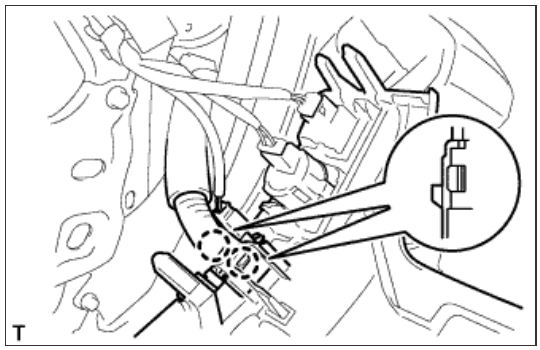


c. Attach the 2 claws to connect the 2 control cables.

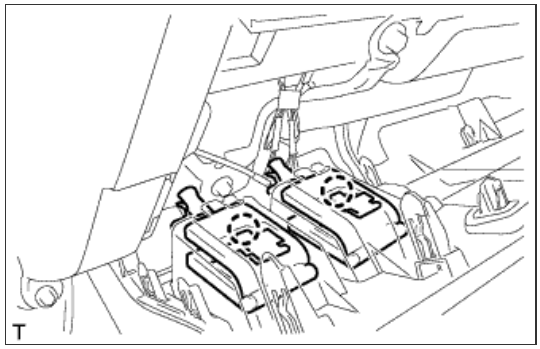


d. Attach the 14 claws to install the finish panel.

e. Install the 2 bolts.

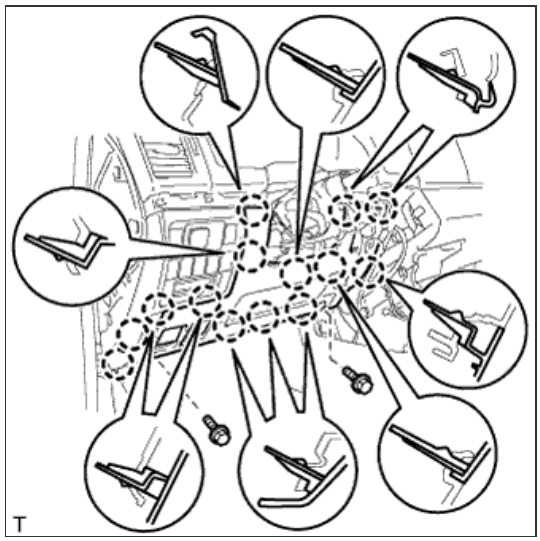

f. Attach the 2 claws to close the hole cover.

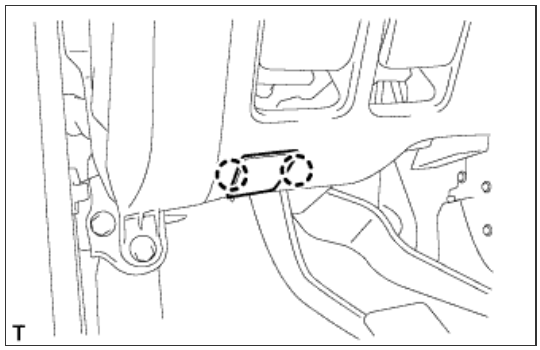


5. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.


b. Attach the 3 claws to install the under cover.

c. Install the 2 screws.

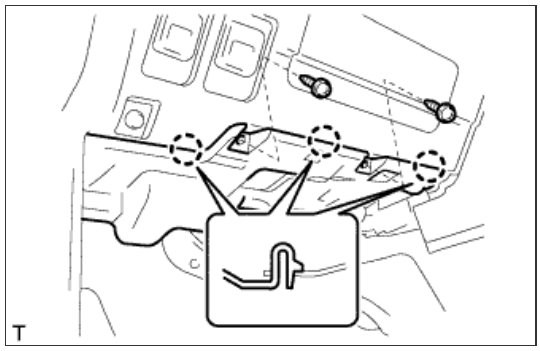


6. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

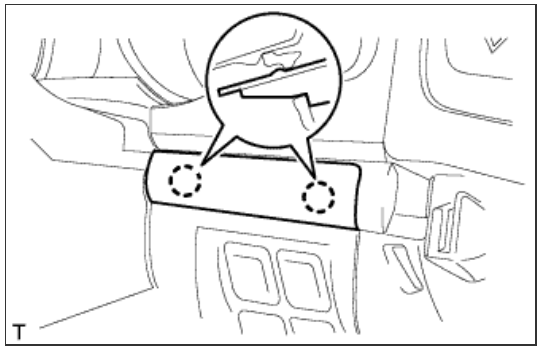


7. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

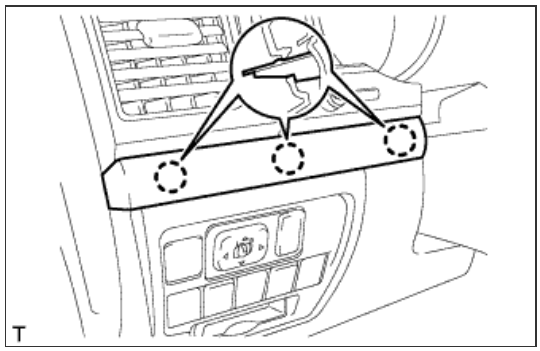

8. INSTALL INSTRUMENT SIDE PANEL RH

a. Attach the 6 claws to install the side panel.

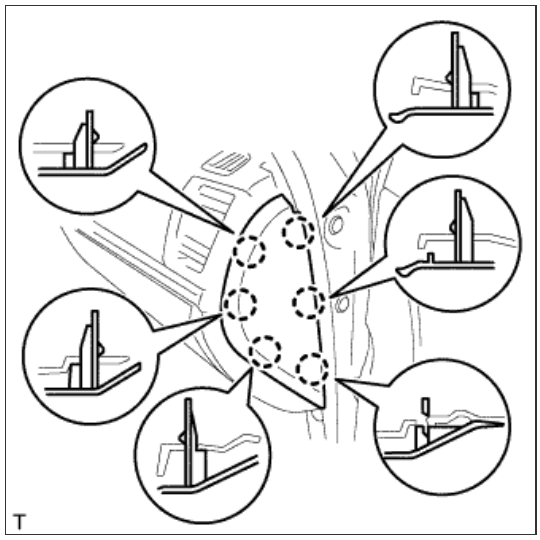

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. CHECK SRS WARNING LIGHT


a. Check the SRS warning light (Click here).

for Preparation Click here

1. INSTALL DOUBLE LOCK DOOR CONTROL RELAY ASSEMBLY

a. Install the double lock door control relay assembly with the nut.

b. Connect the connector.

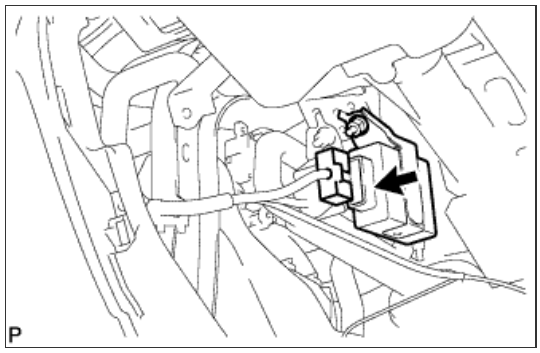

2. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)


a. Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Install the driver side knee airbag with the 5 bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

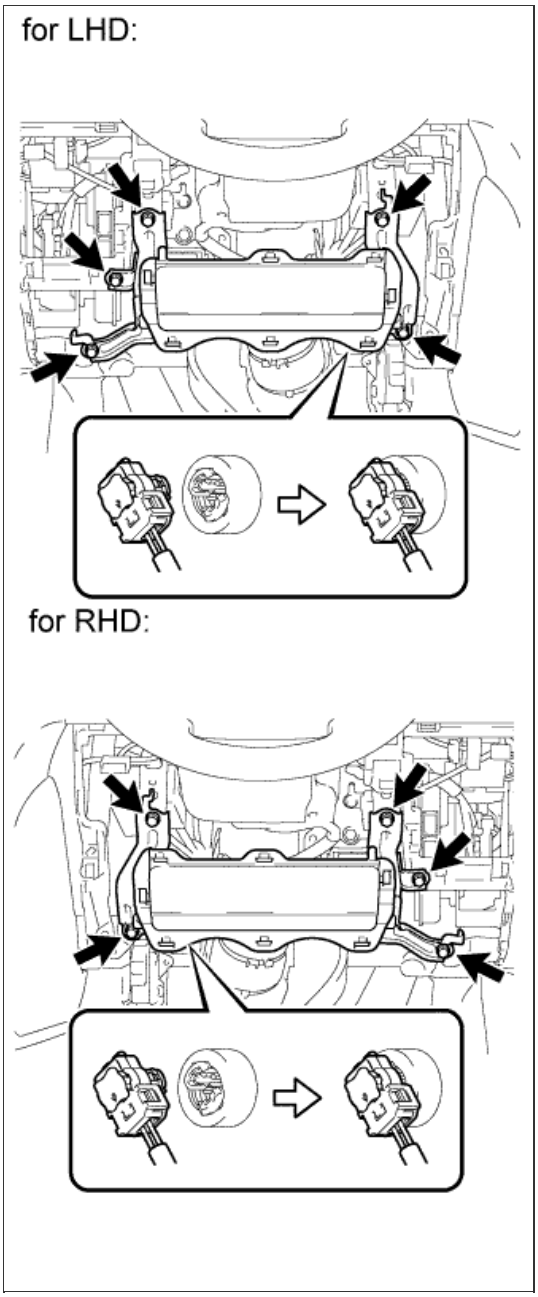

3. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)

a. Attach the 4 claws and connect the DLC3.


b. Install the instrument panel with the 5 bolts.

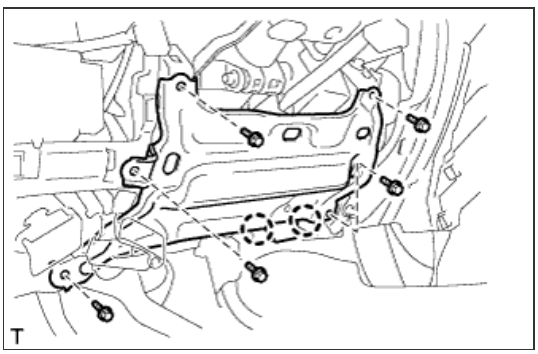


4. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

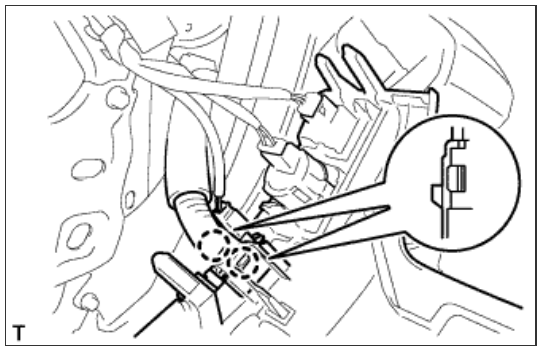


c. Attach the 2 claws to connect the 2 control cables.

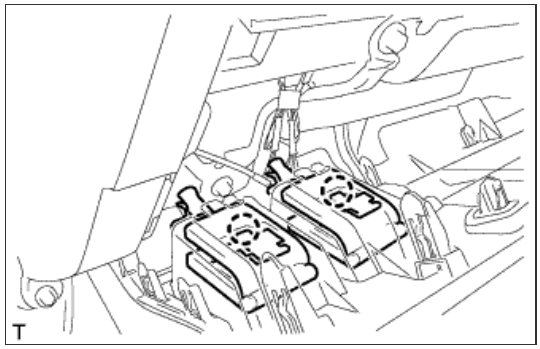


d. Attach the 14 claws to install the finish panel.

e. Install the 2 bolts.

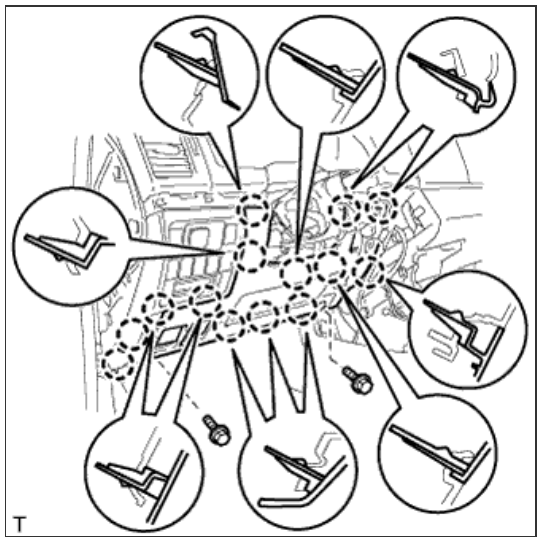

f. Attach the 2 claws to close the hole cover.

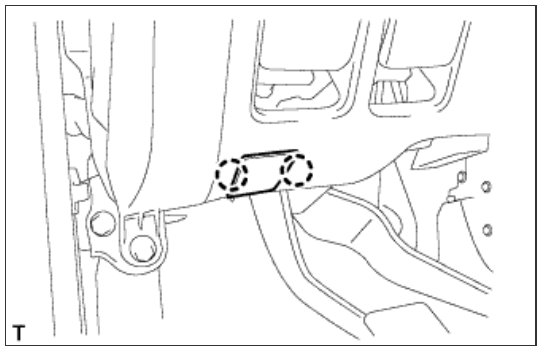


5. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.


b. Attach the 3 claws to install the under cover.

c. Install the 2 screws.

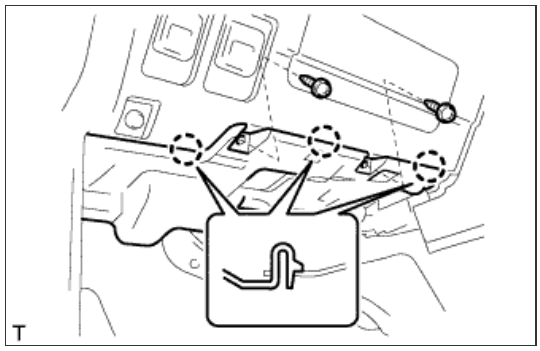


6. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

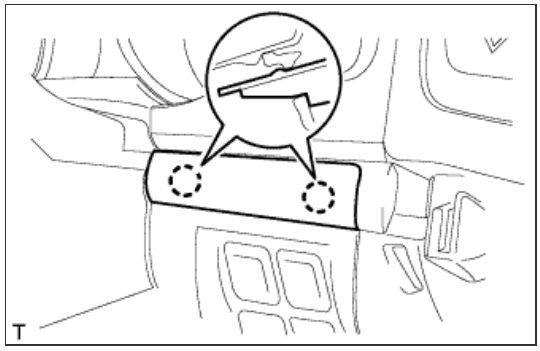


7. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

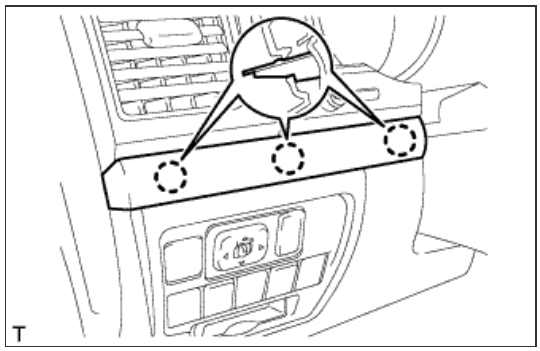

8. INSTALL INSTRUMENT SIDE PANEL RH

a. Attach the 6 claws to install the side panel.

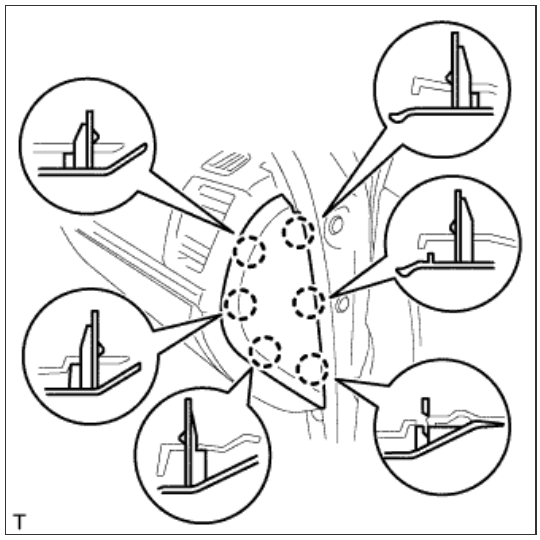

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. CHECK SRS WARNING LIGHT


a. Check the SRS warning light (Click here).

for Preparation Click here

1.PRECAUTIONS FOR USERS WITH PACEMAKERS

a. Weak electric waves are emitted from the key. If a pacemaker is being used, read the pacemaker instruction manual before using the entry and start system.

- If implanted pacemakers or cardioverter defibrillators are being used, make sure they are not brought near the electrical key antenna and electrical key oscillator. The electric waves may affect them.
- If electric devices (for medical purposes) other than an implantable pacemaker or implantable cardioverter defibrillator are used, confirm with the manufacturer if electric waves affect their operation. Electric waves may affect the electric devices.
- The entry and start system can be set so that it does not operate. Refer to Key Cancel for more information (Click here).

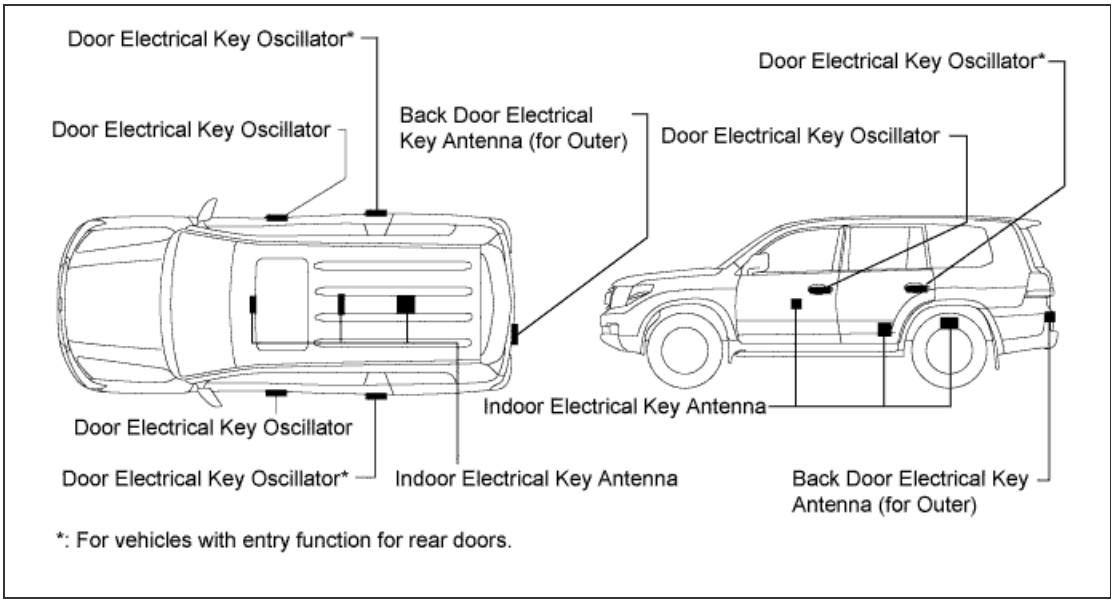

2.PRECAUTIONS FOR ENTRY AND START SYSTEM AND KEY

a. The entry and start system does not operate in the following situations. If it does not operate at all, check that the following is not the cause.

i. The key cancel operation has been performed.

ii. There is no key battery.
(Key indicator does not blink when key switches are pressed).

b. The key must be in the possession of the user.
(A requirement of the entry and start system. This is to make sure the user maintains a habit of carrying the key).

c. As the key only emits weak electric waves, if any of the following conditions are met, the detection area of the key may become smaller or the key may become undetectable.

i. The battery is depleted.

ii. There are TV towers, electric power plants, broadcasting stations, gas stations or other areas of strong electric wave output nearby.

iii. Wireless products such as cell phones, etc. are carried with the key.

iv. The key is covered by or in contact with metal.

v. Electric wave type keyless entry systems are being operated nearby.

vi. The key is placed near high-voltage, electric noise emitting equipment.

vii. Film with some metallic content is stuck to the back glass.

HINT:

In this case, remove the cause or unlock the door using the mechanical key.

d. Even if the key is in the vehicle exterior key detection area, the key may not operate properly due to the vehicle body design.

e. Even if the key is in the vehicle exterior key detection area, the key may not be properly detected if the key is near a window, a door handle or the center of a bumper.

f. Even if the key is in the vehicle interior key detection area, the key may not be properly detected if the key is on the instrument panel, on the rear tray, in the glove box or on the floor.

g. Depending on the way the key is held, the key may not operate properly.

3.PRECAUTIONS WHEN USING INTELLIGENT TESTER

a. When troubleshooting the entry and start system using the intelligent tester with the engine switch off, connect the intelligent tester to the vehicle and turn any of the courtesy light switches on and off until communication between the intelligent tester and the vehicle begins (the interval between on and off should be less than 1.5 seconds).
(The reason the above procedure is necessary is that when the engine switch is off, the main body ECU may be in sleep mode. When the main body ECU is in sleep mode, communication with the intelligent tester is not possible).

b. After DTCs are all cleared, check if the trouble occurs again 6 seconds after the engine switch is turned on (IG).

4.PRECAUTIONS FOR EACH FUNCTION

a. Precautions for the key:
The key is a precision instrument. Be sure to observe the following:

i. Do not drop or strike the key.

ii. Do not keep the key in a high temperature area for a long time.

iii. Do not use an ultrasonic washing machine to clean the key.

iv. Keep the key away from magnets or magnetized items during use.

v. Do not attach any stickers to the key.

vi. If a key is lost, clear all registered key ID codes and then reregister the remaining keys.

b. Precautions for the entry unlock function:

i. As the sensor is built into the backside of the outside door handle, the user must touch the backside part of the handle when performing the unlock function.

ii. If the sensor is touched with gloved hands, the response of the door may be delayed.

iii. During the entry unlock operation, if the door handle is pulled before the door unlocks, the unlock function cannot be completed. Confirm that the door has been unlocked before pulling the door handle to open the door.

iv. Make sure that the doors are unlocked when touching the touch sensor on the outside door handle while the key is being carried. If the doors cannot be unlocked, the certification ECU (smart key ECU assembly) orders the main body ECU to perform the door unlock operation 4 times at intervals of 0.75 seconds.
At this time, the door may not be unlocked because the handle is being pulled due to some mechanical reasons.
Be sure to return the door handle to its original position.
If the door cannot be opened by pulling the handle, perform the entry unlock operation again.

v. If the key is too close to the oscillator on the outside of the vehicle, the door may not be unlocked because the key cannot react to the strong wave output from the transmitter.

vi. If the key is within the vehicle exterior detection area, the door can be unlocked even when a person other than the person carrying the key holds the door handle.
However, the doors other than the door that the codes match will not be unlocked.
(If the key is within the detection area of the driver side door outside the vehicle, the doors will be unlocked when the person carrying the key holds the driver side door handle. However, if any door handle other than that of the driver side door is held, the doors will not be unlocked).

vii. If a door is not opened after the door unlock operation, the doors automatically lock after approximately 30 seconds.

viii. If a large amount of water is applied to the door handle due to a car wash or heavy rain, the key being within the vehicle exterior detection area may cause the doors to be unlocked.
However, the doors will be locked again after approximately 30 seconds if a door is not opened.

ix. If the key of the entry and start system is used while it is being carried with the key of another entry and start system, the time before the entry unlock operation will become more than usual. This is not a malfunction.

c. Precautions for the entry lock function:

i. When performing the entry lock operation, firmly press the lock switch on the outside door handle.
If pressed too quickly or lightly, the entry lock may not operate.

ii. It is possible that signals output from the indoor electrical key antenna may leak through the window. Also, if the key is too close to a door oscillator, the oscillator output signals are too strong and the key cannot respond. As a result, when the key is near the vehicle interior (window, door handle), the entry lock function may not operate. Also, the key reminder warning buzzer may sound and the entry unlock operation may stop functioning. In this situation, move the key away from the vehicle interior (window, door handle), perform the entry lock operation and then perform the entry unlock operation.

iii. Do not touch the lock switch while opening or closing the door.
If the lock switch is pressed when opening or closing the door while the key is being carried, the door ajar warning buzzer sounds (beeps outside the vehicle for 10 seconds).

iv. If the key is on the instrument panel, rear package tray or floor, or in the glove box, the key reminder function may not operate and the key may be locked in the vehicle. Always carry the key.

v. If the key is outside the vehicle but is very close to a window or door handle (the ECU determines that the key is inside the vehicle) and the transmitter or mechanical key is used to lock the doors (entry lock is not used), entry unlock will not operate. To unlock the doors, perform a wireless door unlock operation. The entry lock function operates in this way to prevent the doors from being unlocked by the door oscillator (vehicle exterior) without the knowledge of the user. For example, when a user operates the wireless door lock operation from inside the vehicle, radio waves from a door oscillator may leak into the vehicle interior and the doors may unlock.

vi. To allow the user enough time to check if the doors are locked after performing a door lock operation (entry lock function or wireless door lock operation), the entry unlock function will not be permitted for 3 seconds after the door lock operation.

d. Precautions for the entry ignition function:

i. To start the engine system, first depress the brake pedal firmly until the engine switch indicator illuminates green, and then press the engine switch.
Also, after performing the engine start operation, continue depressing the brake pedal until the engine has completely started.

ii. When operating the engine switch, firmly press the switch. If the switch is pressed too quickly, power source control and engine system starting may not operate.

iii. While driving the vehicle, continuously pressing the engine switch for 3 seconds or more will turn off the engine system. Do not touch the engine switch while driving, except in an emergency.

iv. Do not touch the engine switch with oily hands.

v. If the vehicle has been in a hot location for an extended period of time, be careful when touching the engine switch. It may be very hot and lead to burns.

vi. Take care to avoid spilling beverages on the engine switch. Keep all liquids away from the engine switch.

vii. Do not use the engine switch if it seems to be sticking or feels abnormal.

viii. The vehicle continually records the power source mode (off, on (ACC), on (IG), start). When the battery cable is disconnected and reconnected, the power source mode will return to the mode it was in before disconnecting the battery cable. Always turn the engine switch off before disconnecting the battery cable. When the vehicle battery is fully depleted, power is cut, and the power source mode before the power was cut is unknown, so be extremely careful.

ix. Do not connect any electronic products to the ACC, IG1 or IG2 coil side wiring, as the vehicle power supply may be unable to be turned on, or other problems may occur.

x. When the key battery is depleted and the key is held up to the engine switch to start the engine system, the following warning alarms will sound.

- Driver side door is opened and closed:
  - Shift lever in P power source cut reminder exit warning
  - Shift lever not in P power source cut reminder exit warning
- Door other than driver side door is opened and closed:
  Occupant leaves with key warning

The warning alarms do not indicate an actual malfunction. The alarms sound because the key battery is depleted and the system cannot determine if the key is inside the vehicle or not.

xi. With the engine switch on (ACC), the engine can be started by pressing the engine switch for 15 seconds without depressing the brake pedal.

e. Precautions for back door entry unlock function:
Even if the key is within the back electrical key antenna (for outer) detection area, the back door cannot be opened if the key is in the following areas:

- Near the center of the bumper
- Too close to the ground or in a high place

f. Precautions for the battery built into the key and the vehicle battery:

i. The key is constantly checking for signals from the vehicle, which requires power from the built-in battery. The life of the battery is approximately 1 to 2 years depending on the usage conditions. Also, if the key is in contact with a cell phone while the user walks

around (by putting them together into a pocket, etc.), the battery may significantly deplete. Be sure to replace the battery when its power is low. When replacing the battery, do not touch the inner circuit board or other inner parts.

ii. The key is constantly checking for signals from the vehicle and using battery power, whether the key is being used or not. Even if the user is carrying 2 keys and only 1 key is used, both keys will consume battery power.

iii. In order to communicate with the vehicle, the key is constantly checking for signals. Therefore if the key is in contact with a cell phone while the user walks around (by putting them together into a pocket, etc.), the battery may significantly deplete.

iv. The key receives radio waves at approximately 134 kHz. If the key continuously receives strong, identical frequency waves, this may drain the key battery. Store the key at least 1 m (3.28 ft.) from TVs, personal computers, chargers for cell phone, etc. or other electrical products.

v. When the door is being locked, the vehicle battery is used to transmit radio waves. The battery may be fully depleted if the vehicle remains stopped for a long time. If the vehicle is not used for a long time, remove the battery from the vehicle or cancel the entry and start system.

vi. When the door is being locked with the key in the detection area of a door oscillator, the battery is used for regular communication between the key and vehicle. If the vehicle is not used, keep the key away from the vehicle (more than 2 m (6.56 ft.)).

vii. After disconnecting and reconnecting the battery cable, the entry unlock function may not operate. If this occurs, perform a wireless door unlock and lock operation.

viii. When the battery is fully depleted and the engine does not start even after recharging, perform the following: 1) move the shift lever to P; 2) turn the engine switch off, and 3) open and close the driver door. Then start the engine.

ix. When starting the engine system after the removal and installation of the vehicle battery, first perform the following: 1) open and close the driver door; and 2) wait 10 seconds or more. When an engine system start is attempted after the above procedures, the engine system will not start. However, this is not a malfunction. The engine system will start normally starting from the second attempt.

g. Precautions when using the remote start function:

i. When using the remote start, the entry unlock function can be operated. However, depending on the amount of engine noise and other factors, the door oscillator detection area may become smaller.


ii. If the remote start is used, a door is unlocked, and the user enters the vehicle, the engine system will automatically turn off. After the engine system turns off, the engine system cannot be started for approximately 5 seconds.

h. Precautions for the entry unlock mode switching function:


i. Perform the entry unlock mode switching function within a 1 m (3.28 ft.) area around the vehicle or from inside the vehicle.


ii. After changing modes, holding down the switch for 5 seconds or more will not change the mode. The switch must be released and then pressed again to change modes.


for Preparation Click here

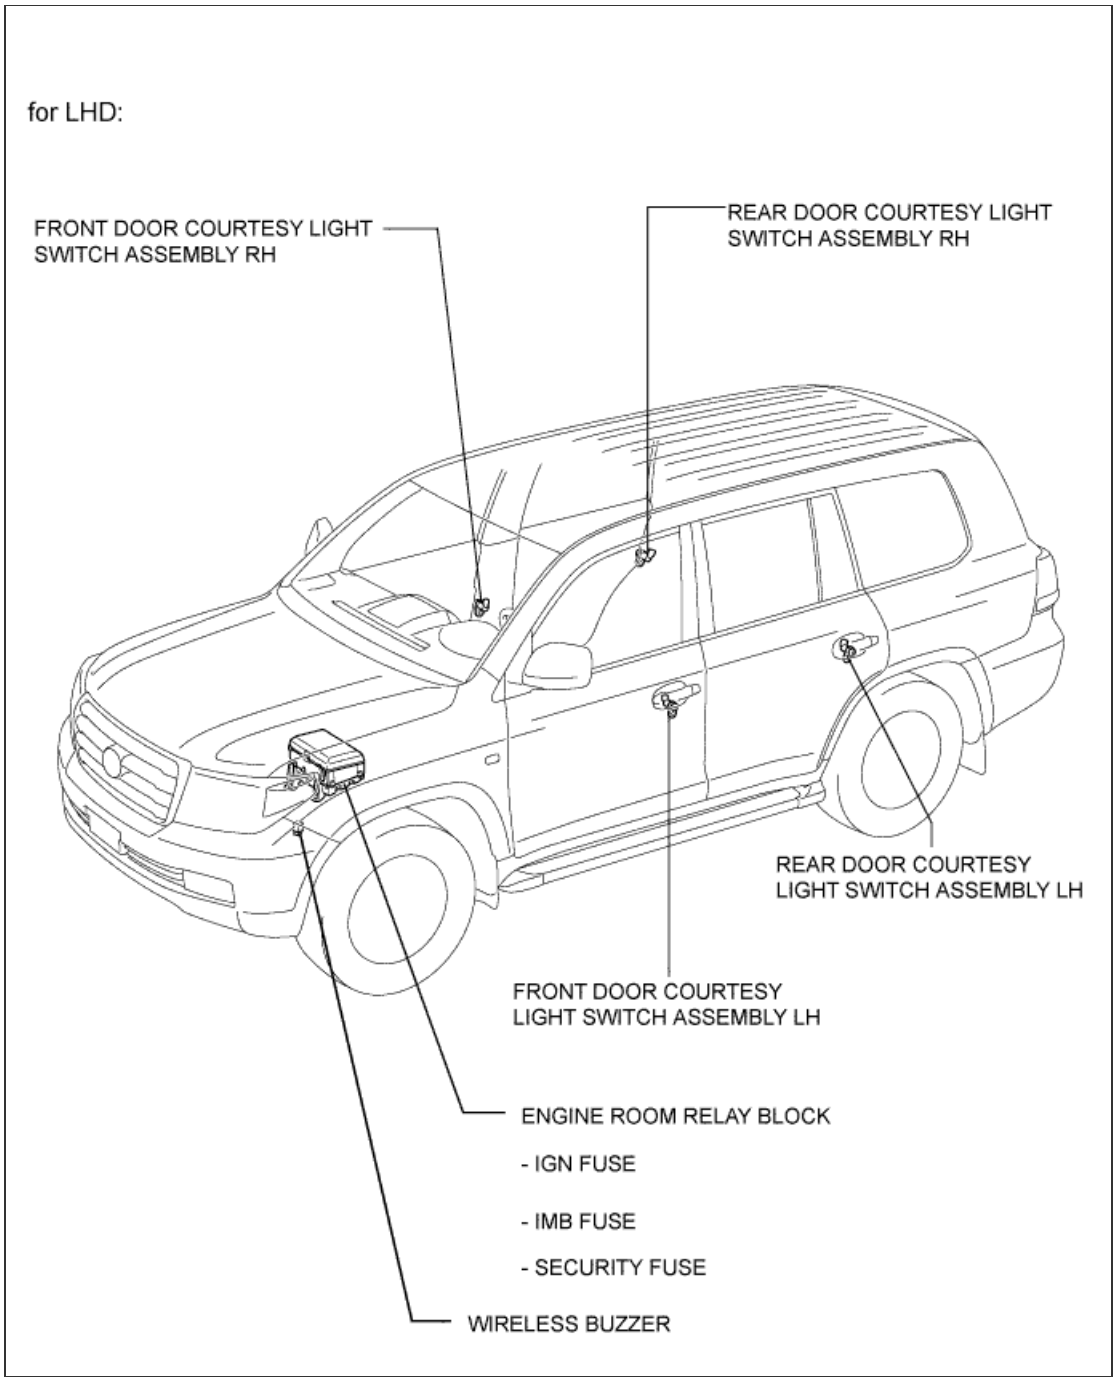


for RHD:

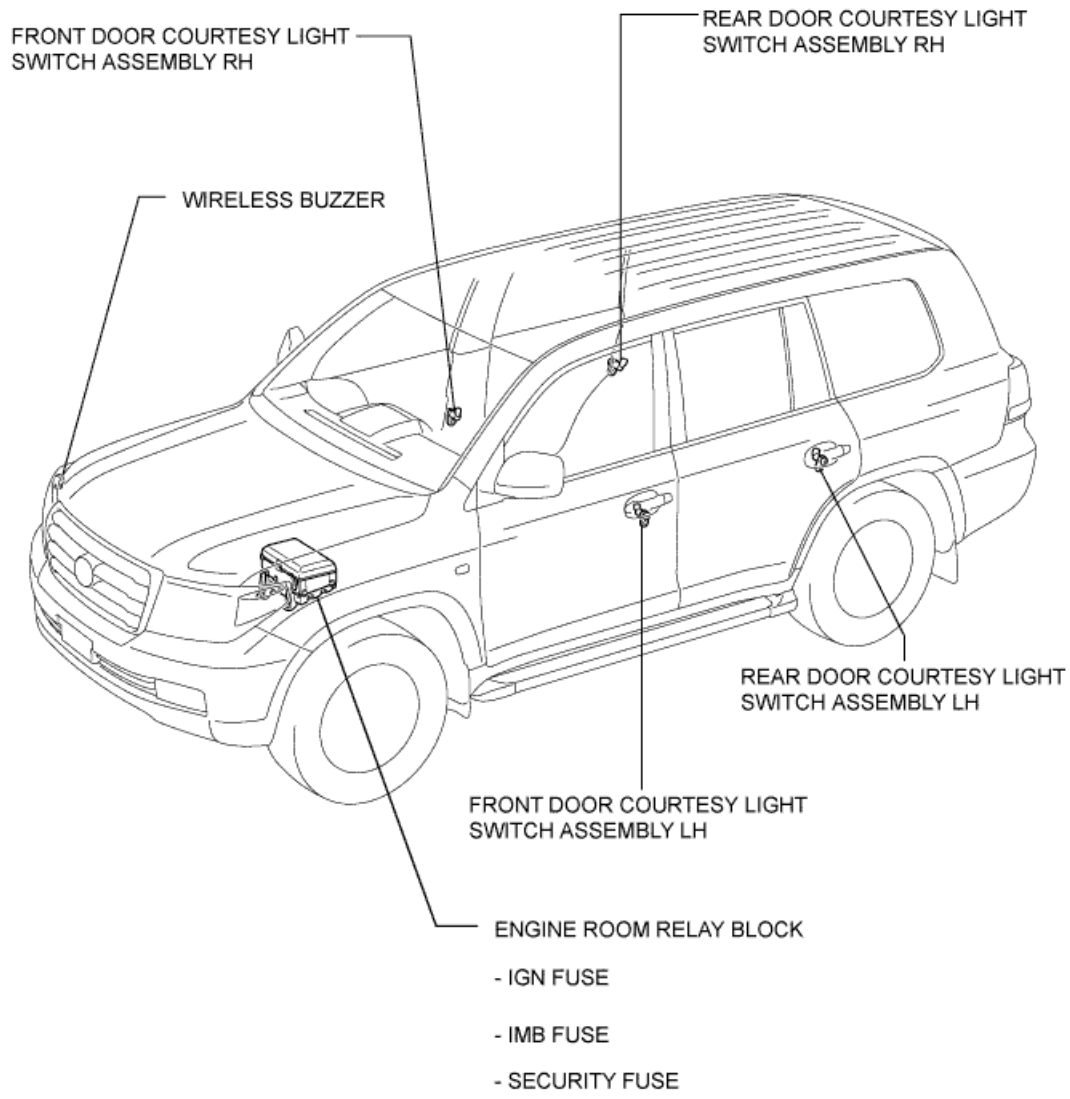

FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY RH
REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY RH
WIRELESS BUZZER
REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY LH
FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY LH
ENGINE ROOM RELAY BLOCK
- IGN FUSE
- IMB FUSE
- SECURITY FUSE

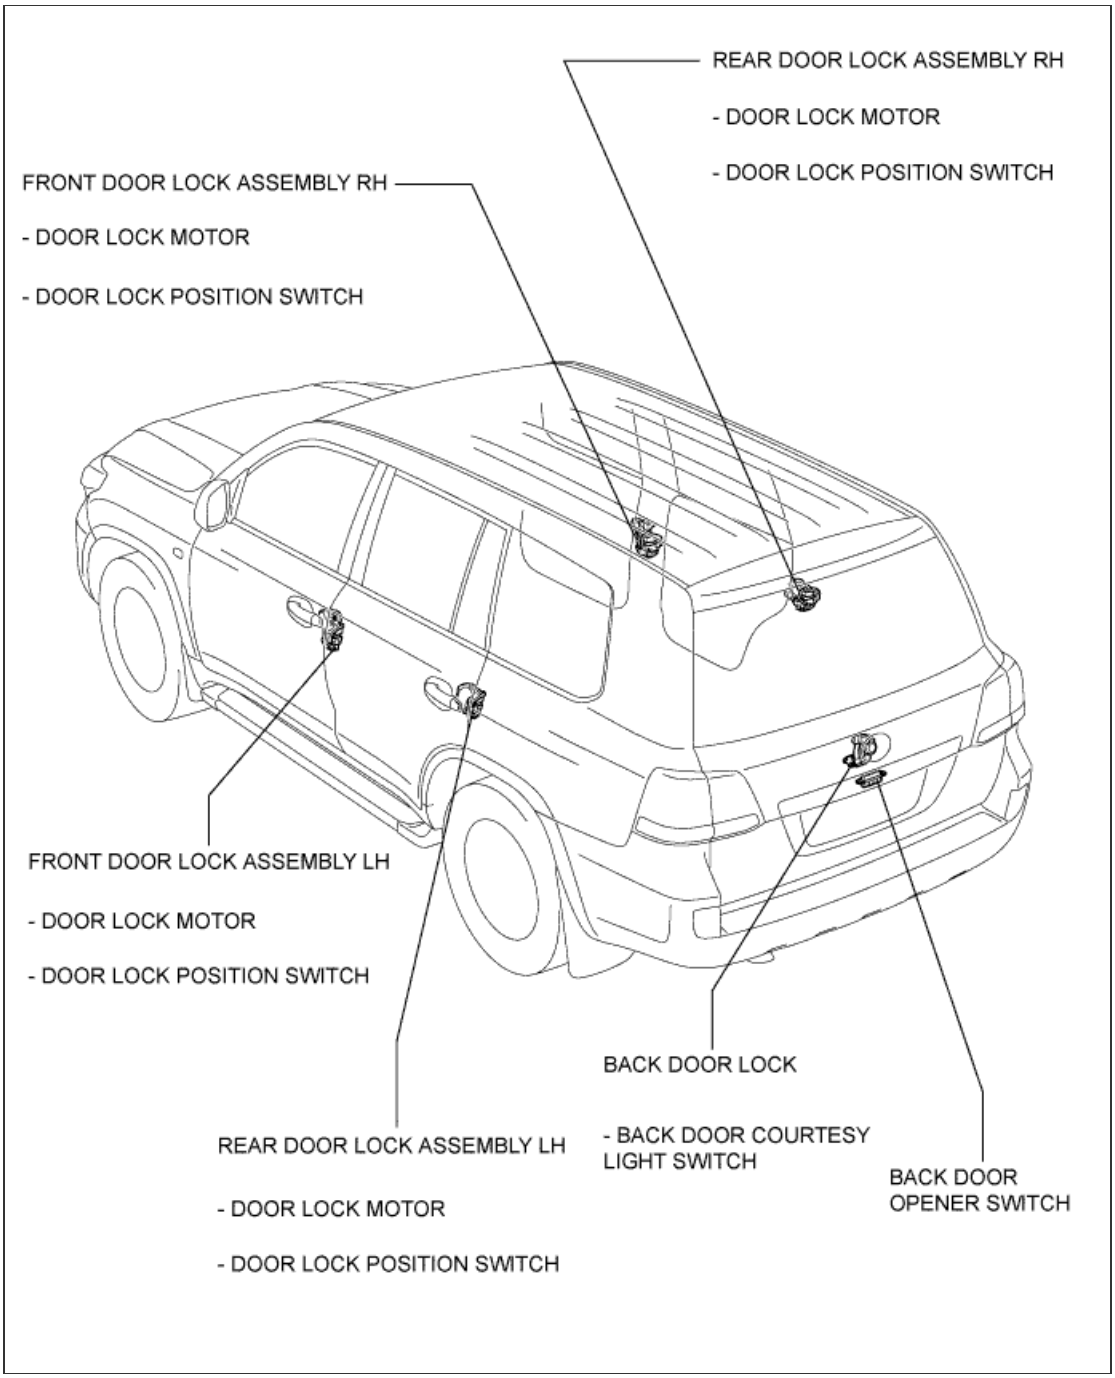

REAR DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
FRONT DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
FRONT DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
REAR DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
BACK DOOR LOCK
- BACK DOOR COURTESY LIGHT SWITCH
BACK DOOR OPENER SWITCH

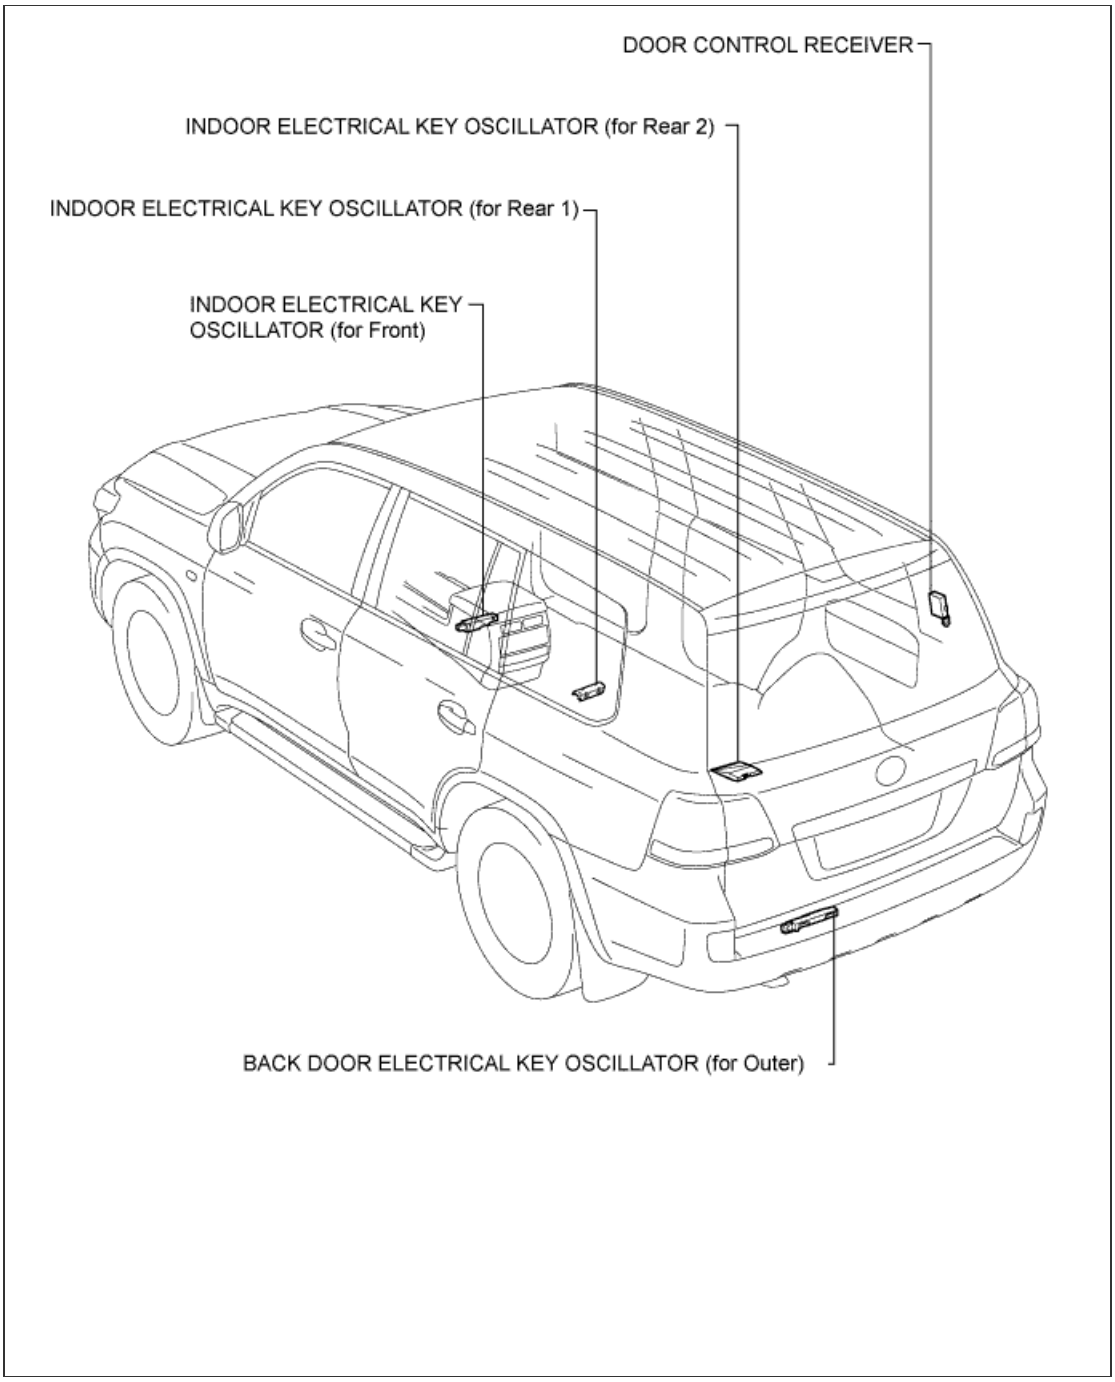
DOOR CONTROL RECEIVER
INDOOR ELECTRICAL KEY OSCILLATOR (for Rear 2)
INDOOR ELECTRICAL KEY OSCILLATOR (for Rear 1)
INDOOR ELECTRICAL KEY OSCILLATOR (for Front)
BACK DOOR ELECTRICAL KEY OSCILLATOR (for Outer)

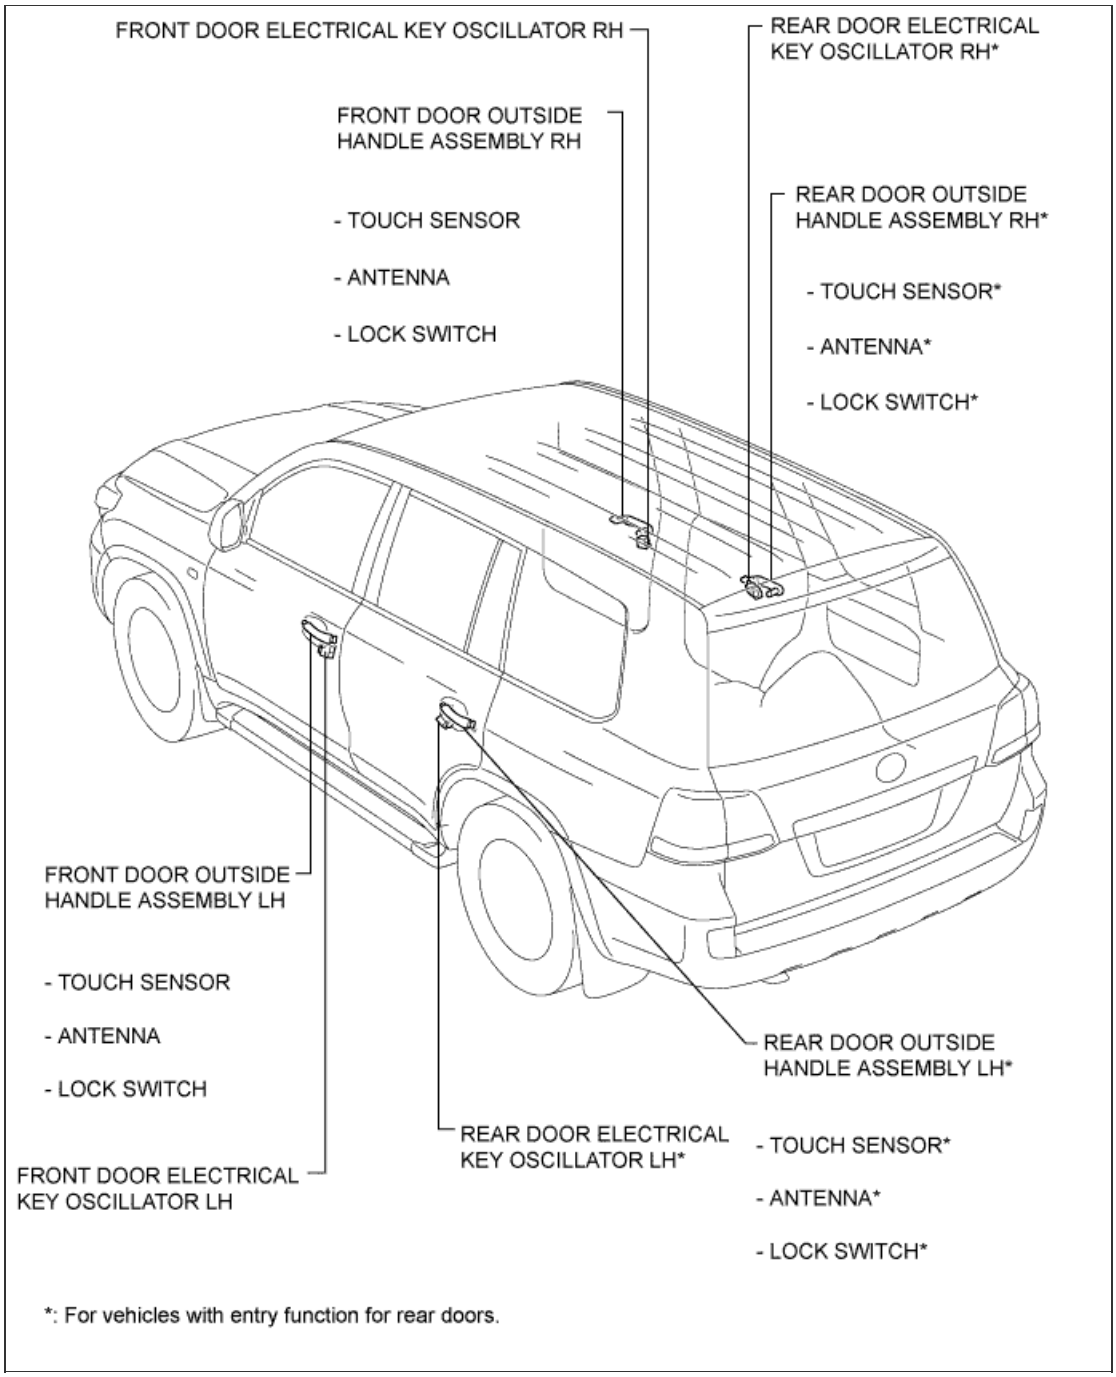

FRONT DOOR ELECTRICAL KEY OSCILLATOR RH
REAR DOOR ELECTRICAL KEY OSCILLATOR RH*
FRONT DOOR OUTSIDE HANDLE ASSEMBLY RH
- TOUCH SENSOR
- ANTENNA
- LOCK SWITCH
REAR DOOR OUTSIDE HANDLE ASSEMBLY RH*
- TOUCH SENSOR*
- ANTENNA*
- LOCK SWITCH*
FRONT DOOR OUTSIDE HANDLE ASSEMBLY LH
- TOUCH SENSOR
- ANTENNA
- LOCK SWITCH
FRONT DOOR ELECTRICAL KEY OSCILLATOR LH
REAR DOOR ELECTRICAL KEY OSCILLATOR LH*
REAR DOOR OUTSIDE HANDLE ASSEMBLY LH*
- TOUCH SENSOR*
- ANTENNA*
- LOCK SWITCH*
*: For vehicles with entry function for rear doors.

for LHD:

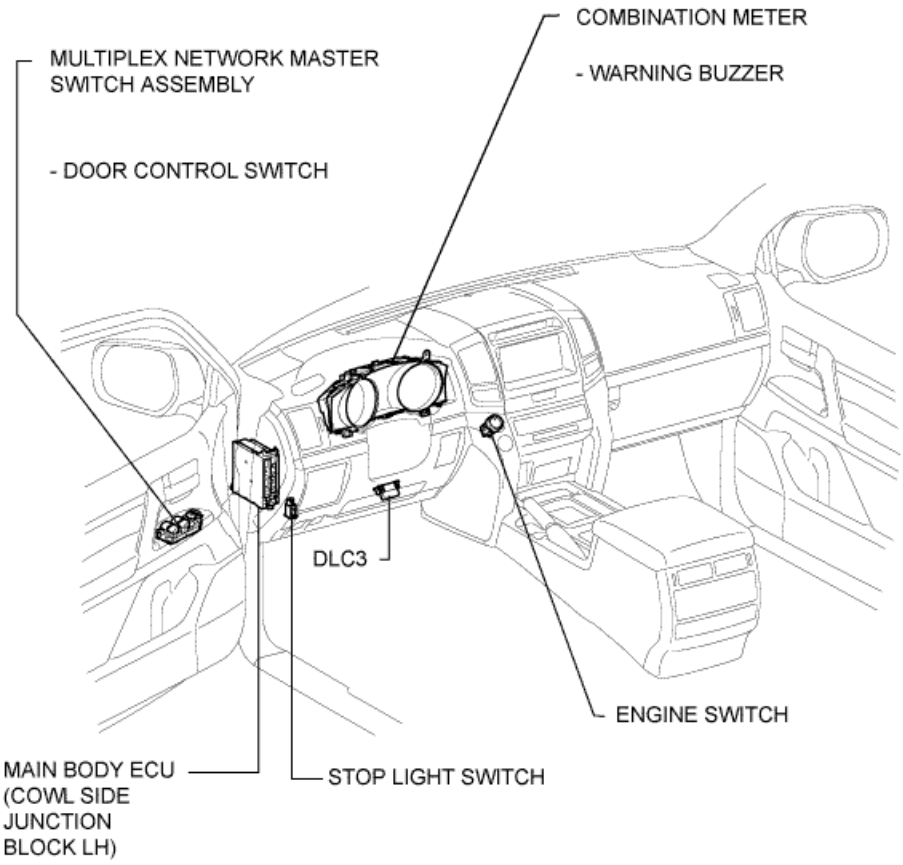


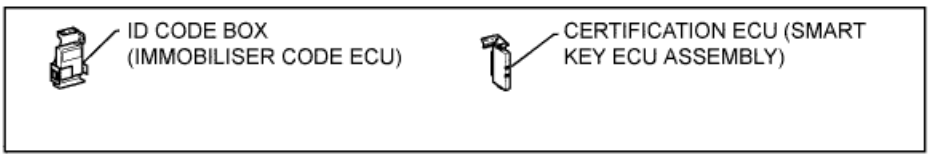


Refer to Service Bulletin for installation position.

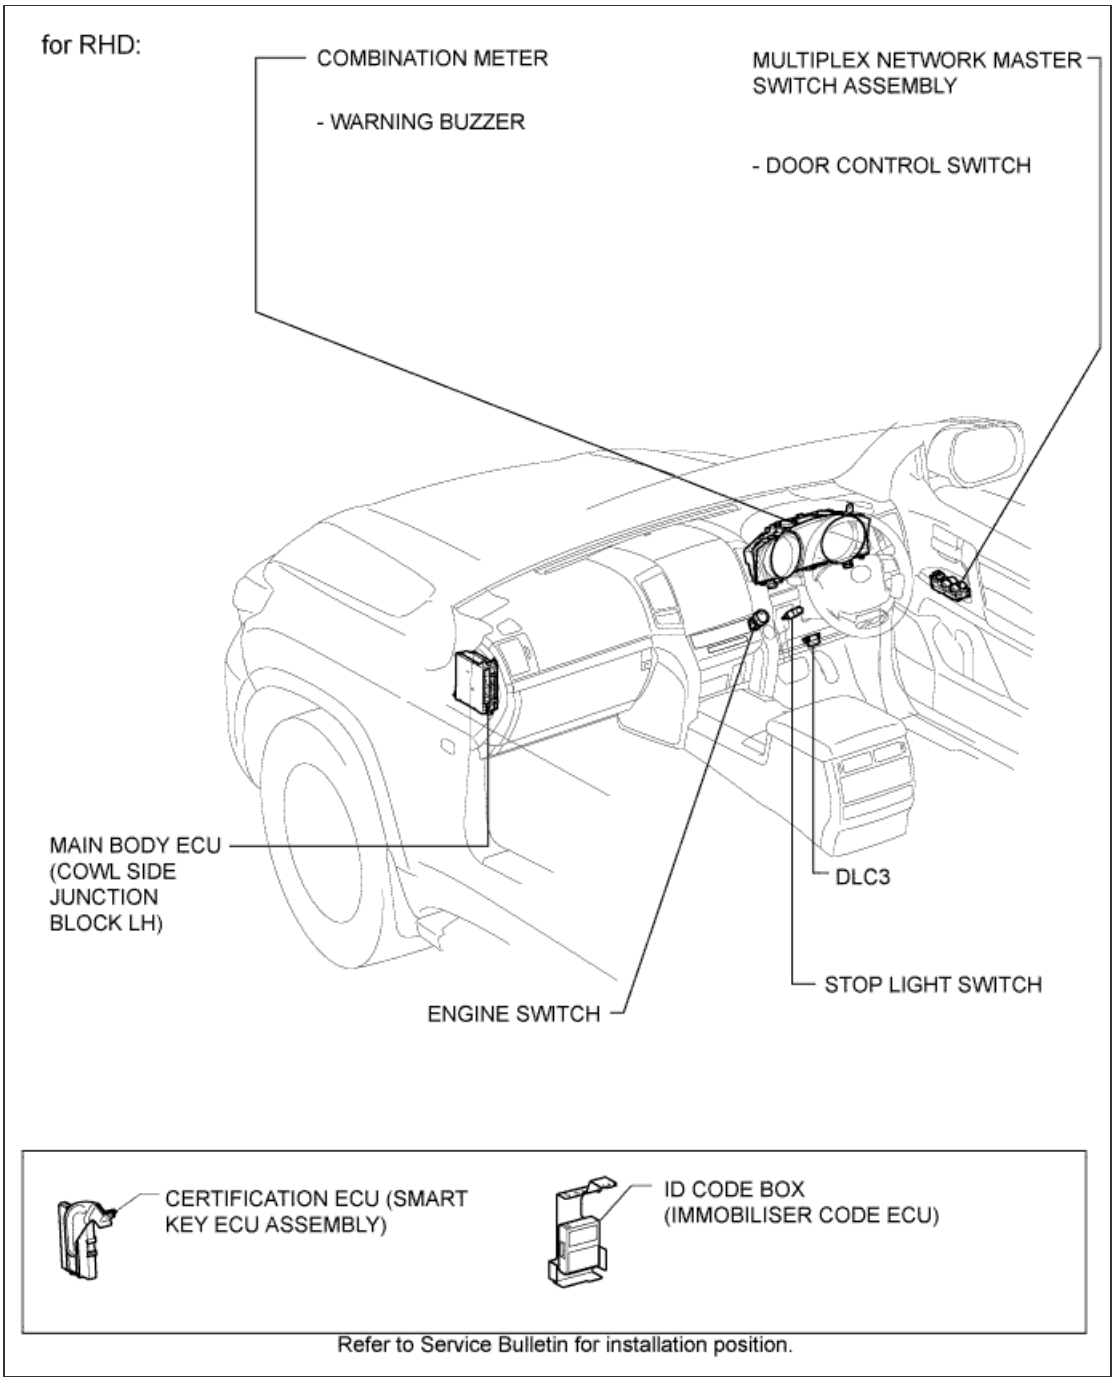

for RHD:
COMBINATION METER
- WARNING BUZZER
MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY
- DOOR CONTROL SWITCH
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
DLC3
STOP LIGHT SWITCH
ENGINE SWITCH
CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)
ID CODE BOX (IMMOBILISER CODE ECU)
Refer to Service Bulletin for installation position.


for Preparation Click here

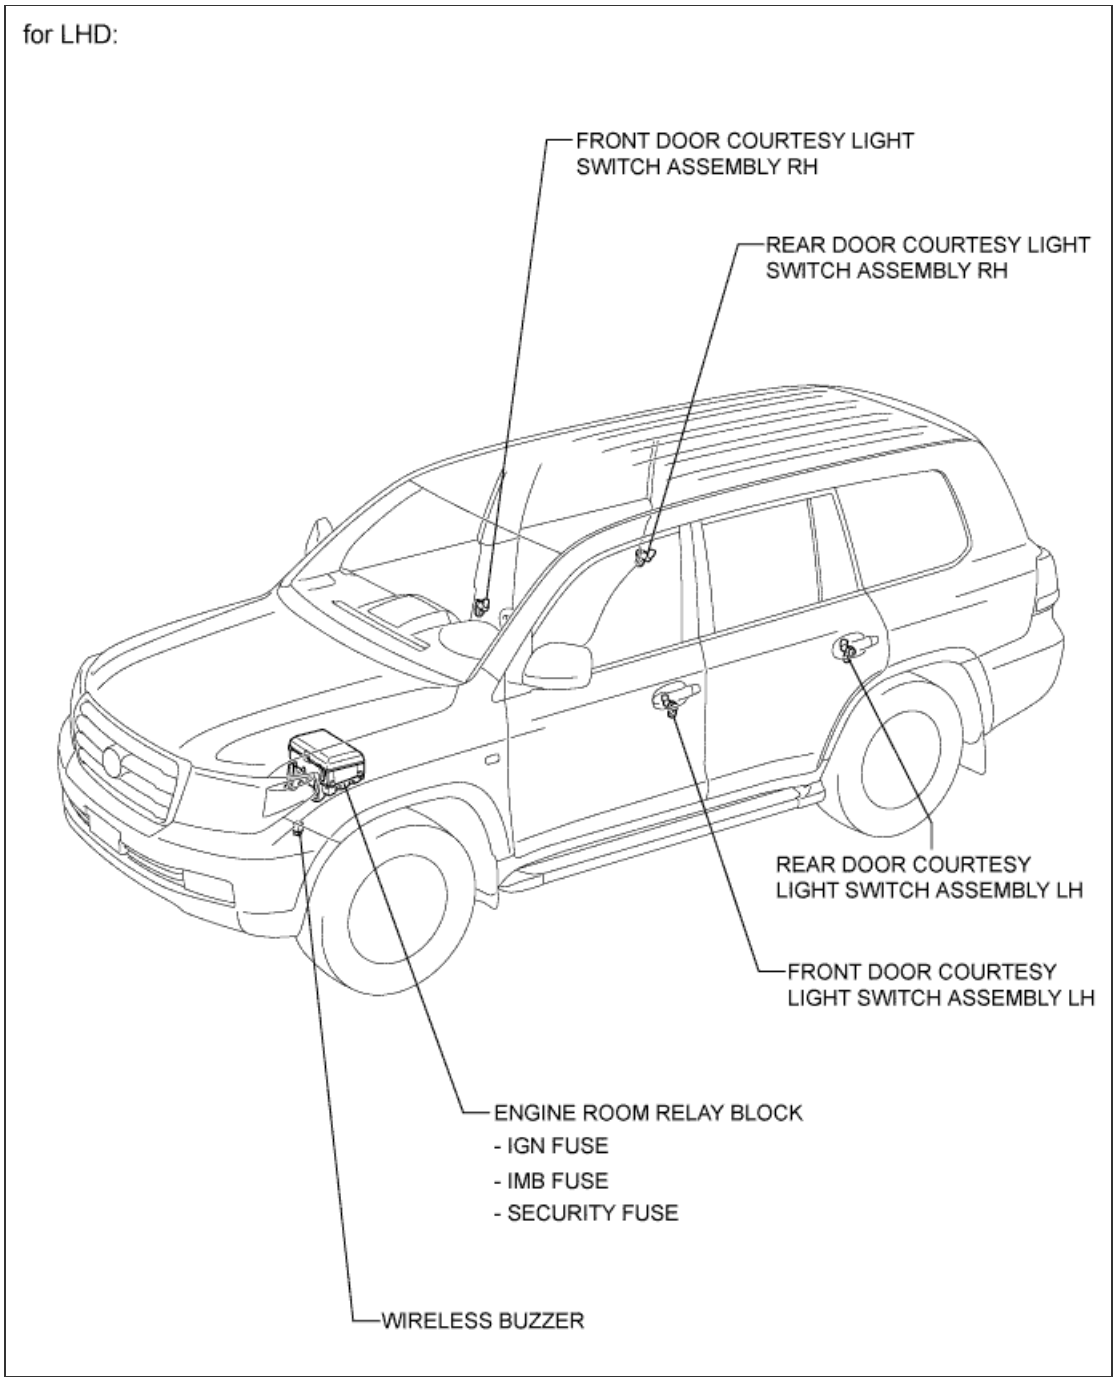


for RHD:

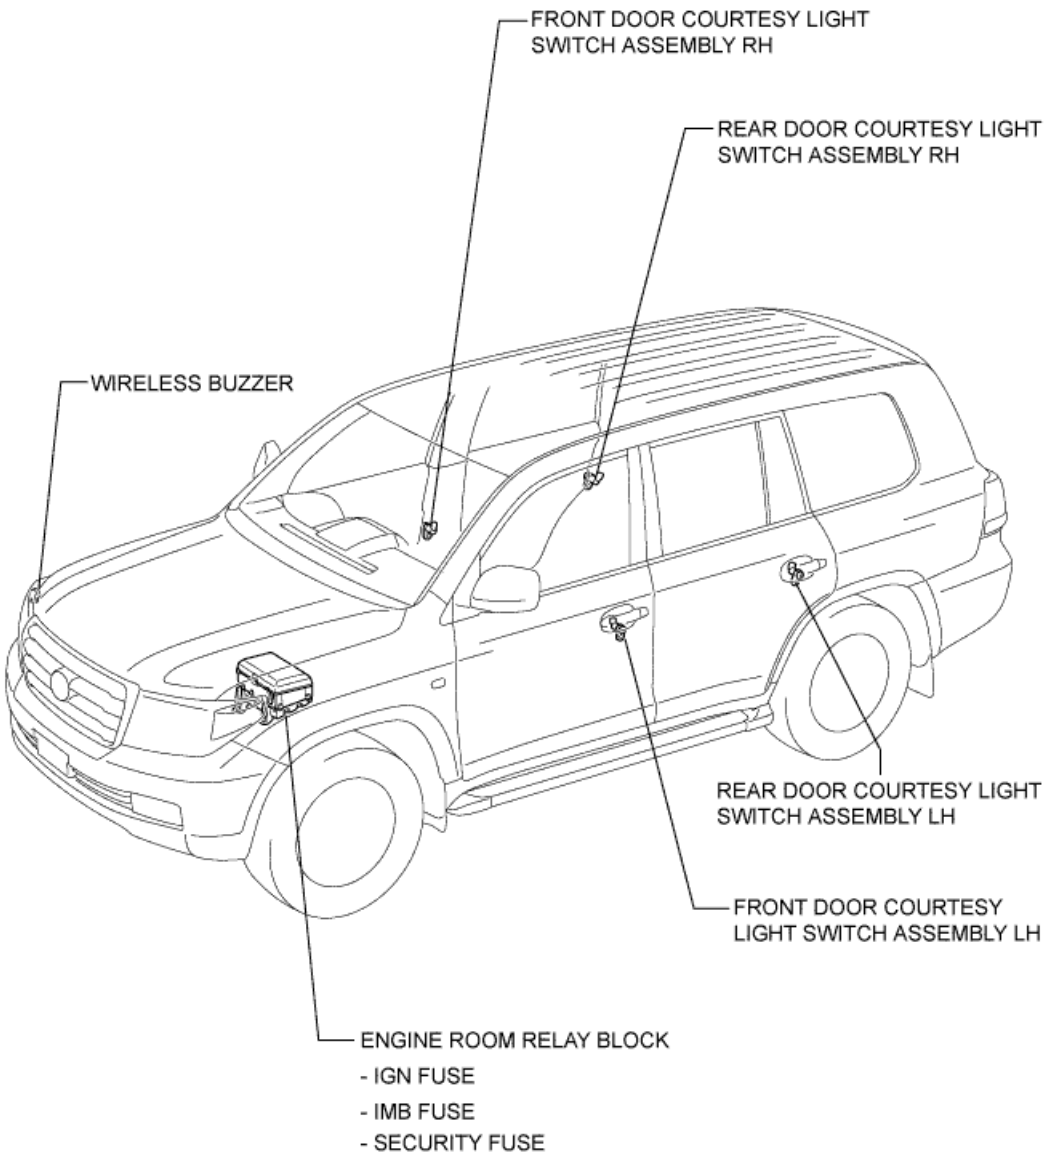
FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY RH
REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY RH
WIRELESS BUZZER
REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY LH
FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY LH
ENGINE ROOM RELAY BLOCK
- IGN FUSE
- IMB FUSE
- SECURITY FUSE

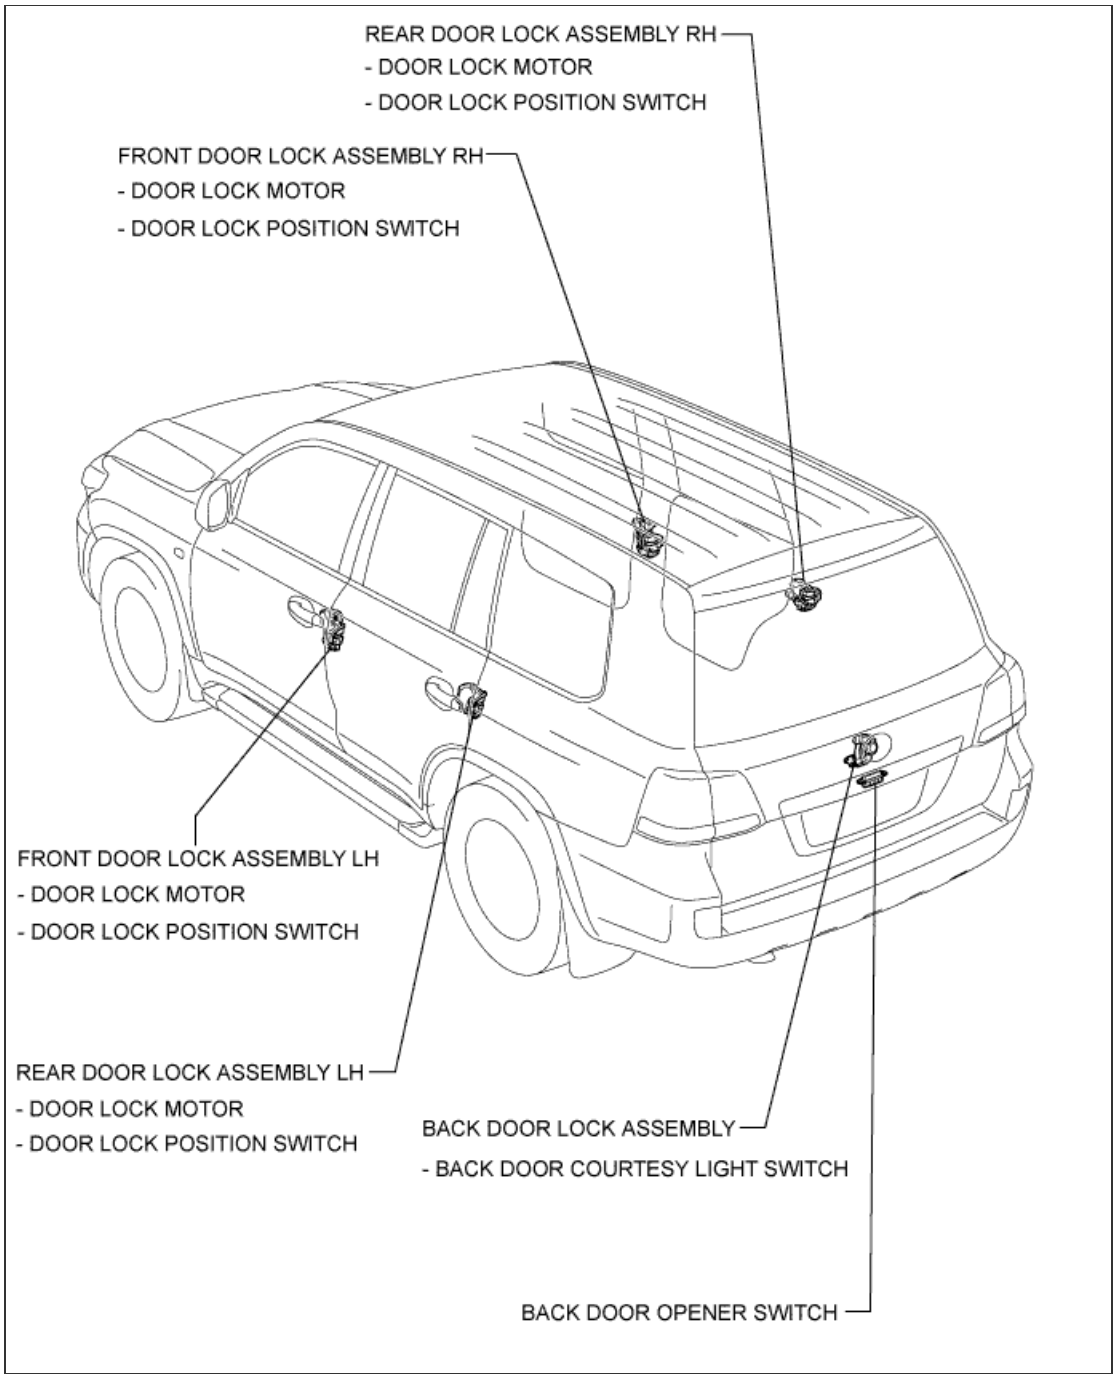

REAR DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
FRONT DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
FRONT DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
REAR DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
BACK DOOR LOCK ASSEMBLY
- BACK DOOR COURTESY LIGHT SWITCH
BACK DOOR OPENER SWITCH

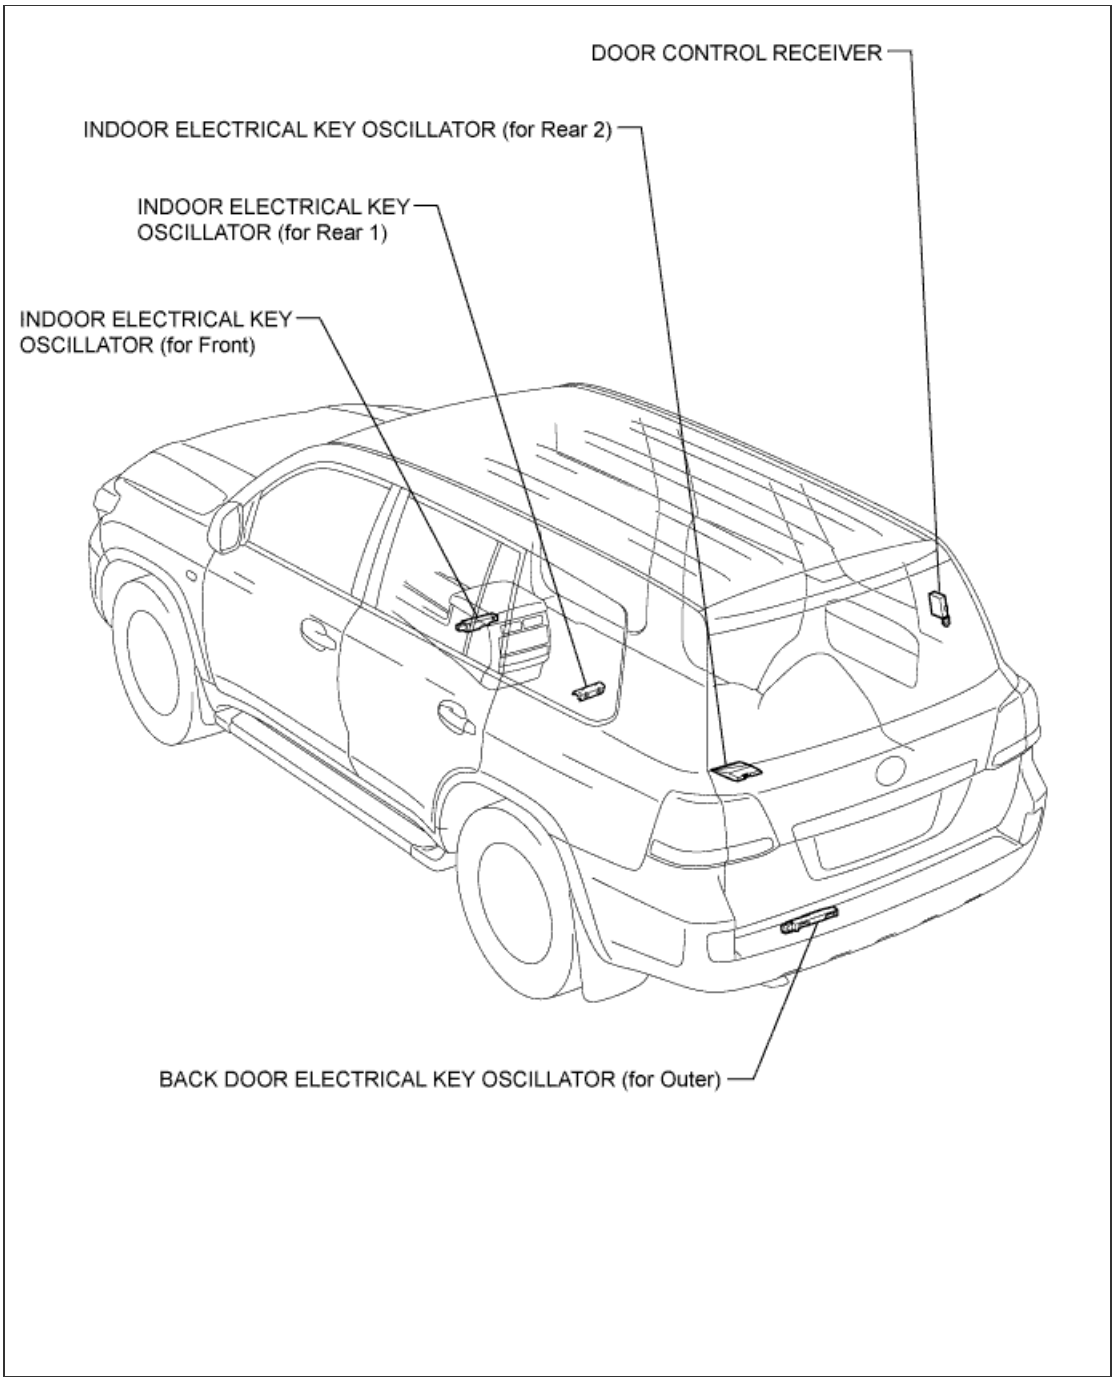

DOOR CONTROL RECEIVER
INDOOR ELECTRICAL KEY OSCILLATOR (for Rear 2)
INDOOR ELECTRICAL KEY OSCILLATOR (for Rear 1)
INDOOR ELECTRICAL KEY OSCILLATOR (for Front)
BACK DOOR ELECTRICAL KEY OSCILLATOR (for Outer)

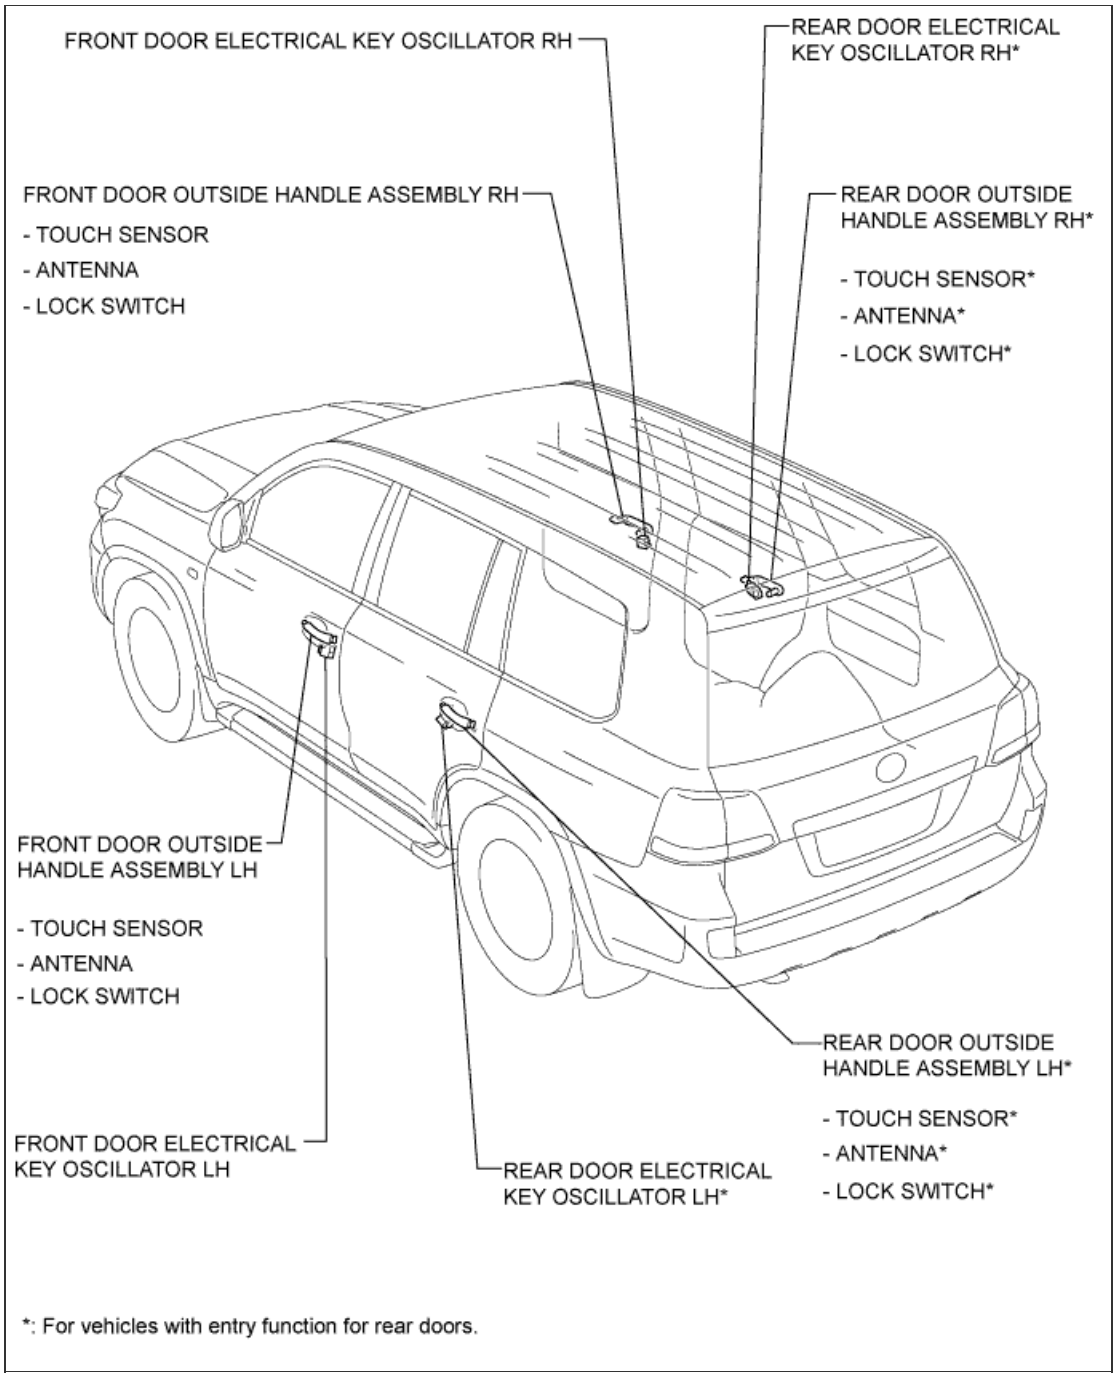

*: For vehicles with entry function for rear doors.


for LHD:

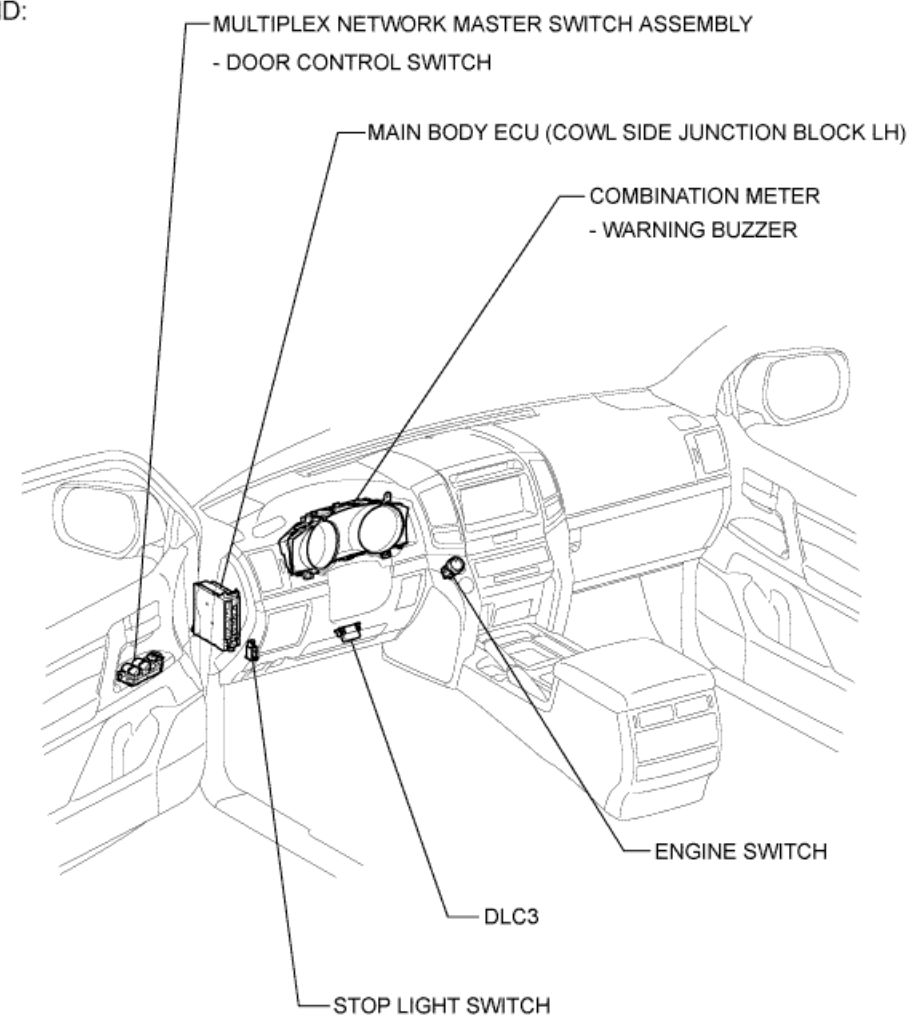


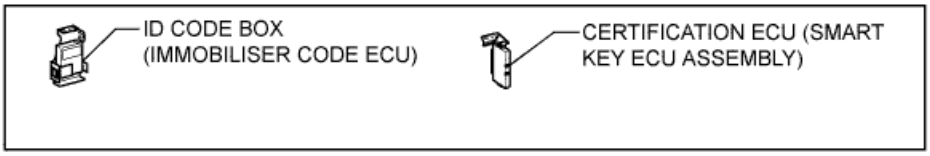

Refer to Service Bulletin for installation position.


for RHD:

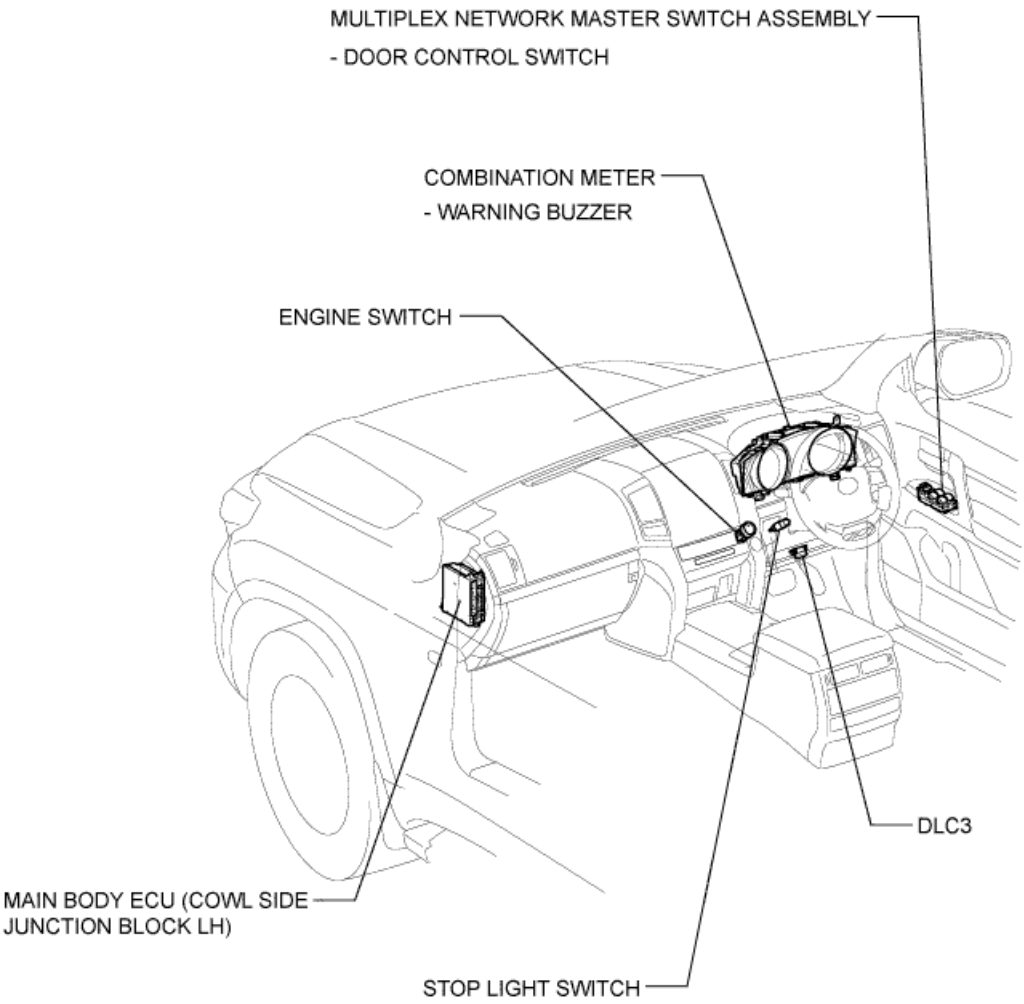

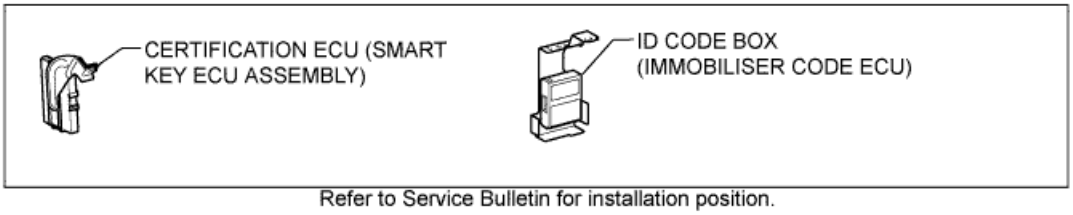

Refer to Service Bulletin for installation position.

for Preparation Click here

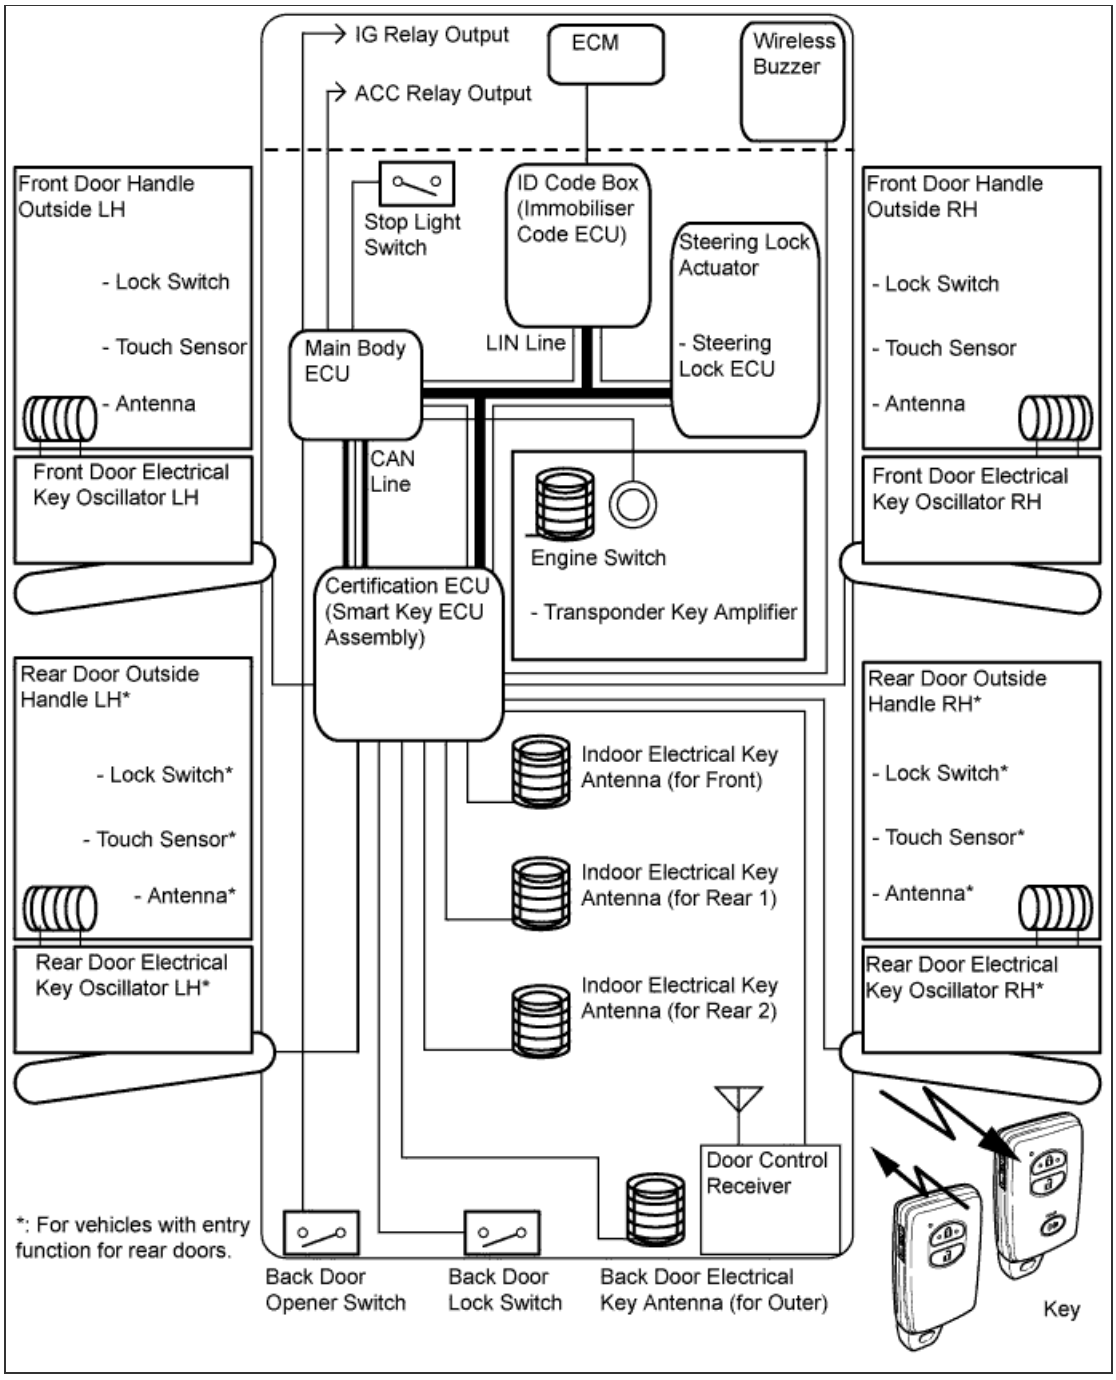

Communication table:

Sender	Receiver	Signal	Line
Main Body ECU	Certification ECU (Smart key ECU assembly)	• IG signal • ACC signal • Engine switch signal • Driver side door courtesy light switch signal • Passenger side door courtesy light switch signal • Rear LH side door courtesy light switch signal • Rear RH side door courtesy light switch signal • Vehicle type handle signal • Back door courtesy light switch signal • Back door opener switch signal • Wireless door lock buzzer sound signal • Door lock position signal	CAN

Meter ECU	• Certification ECU (Smart key ECU assembly) • Main Body ECU	Vehicle speed signal	CAN
Steering Lock ECU	Certification ECU (Smart key ECU assembly)	• Encryption code signal • Encryption code finish signal • Encryption calculate fixed number memory requirement signal • During entry control signal	LIN
ID Code Box (Immobiliser code ECU)	Certification ECU (Smart key ECU assembly)	Matching request random number signal	LIN
Certification ECU (Smart key ECU assembly)	Meter ECU	• Inside key existence warning signal • Low key battery warning signal • Shift position warning signal • Meter buzzer request signal • Door open indicate signal • Steering lock warning signal	CAN
Certification ECU (Smart key ECU assembly)	Main Body ECU	• Entry door lock signal • Entry door unlock signal • Entry lock switch signal • Door lock/unlock standby control signal	CAN
Certification ECU (Smart key ECU assembly)	Main Body ECU	• Immobiliser ID entry required signal • Key code check signal	LIN
Certification ECU (Smart key ECU assembly)	ID Code Box (Immobiliser code ECU)	Replay code signal	LIN

for Preparation Click here

CAUTION:


If using a pacemaker, be sure to read the manual of the pacemaker before using the key, as the radio waves of the key may affect the pacemaker.

ENTRY AND START SYSTEM DESCRIPTION

a. In addition to conventional mechanical key and wireless door lock control functions, the entry and start system enables door locking/unlocking, steering lock releasing, engine control system starting and back door opening without operating the key. The only requirement is that the key is in the possession of the user.

- This system is controlled by the certification ECU (smart key ECU assembly). When the certification ECU (smart key ECU assembly) detects the presence of the key in one of the detection areas, it identifies and checks the ID code, and outputs operation signals to the related ECU in accordance with their functions.
- For vehicle with rear entry function:
  The detection areas are formed by 4 oscillators and 4 antenna (4 door oscillators, back door antenna and 3 indoor antennas).
- For vehicle without rear entry function:
  The detection areas are formed by 2 oscillators and 4 antenna (2 door oscillators, back door antenna and 3 indoor antennas).

DETECTION AREA

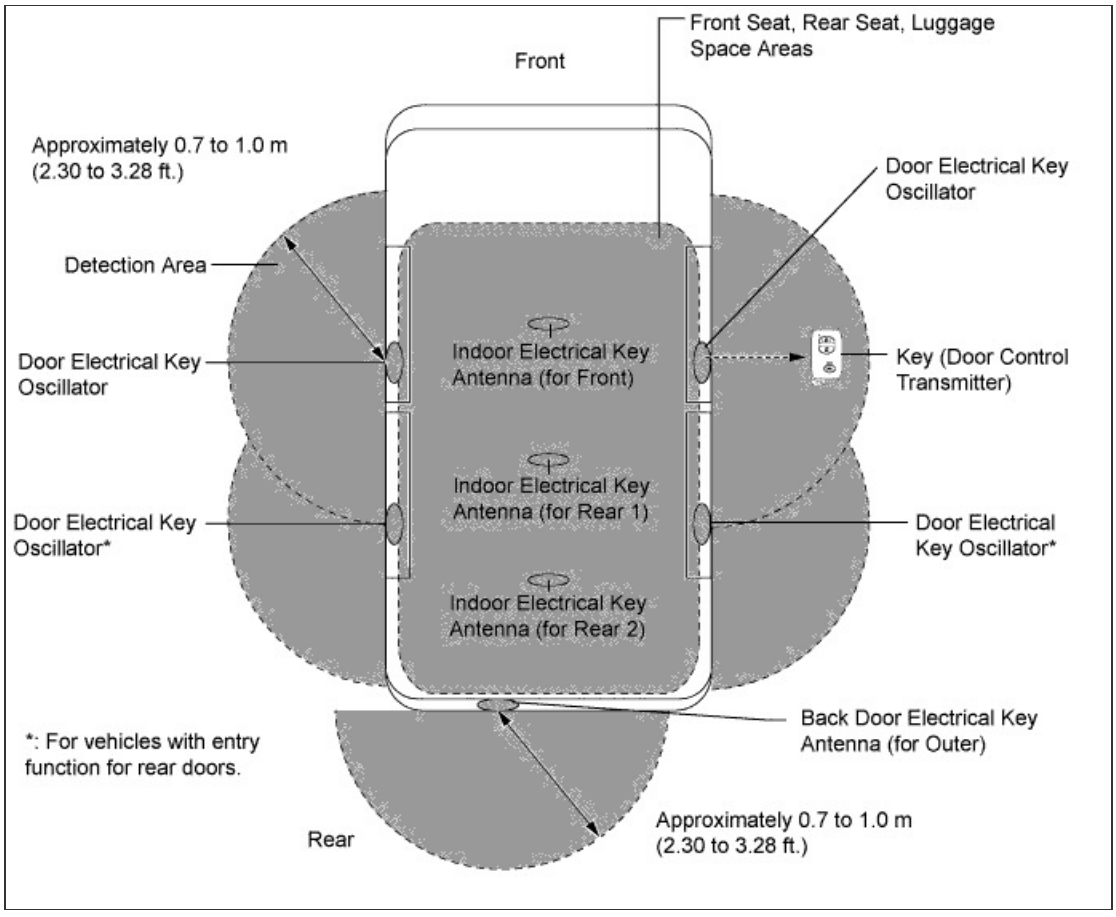

a. Precautions for the entire system:

- Be sure to carry the key during inspection of the entry and start system.
- As weak radio waves are used to detect the key, the key detection area may decrease, or the key may not be detected correctly in the following situations.
  1. The key battery is depleted.
  2. Any facilities that generate strong radio waves, such as a TV tower, power plant, a broadcast station or gas station, are located near the inspection site.
  3. A wireless device, such as a cell phone, is carried with the key.
  4. The key is in contact with or covered with metal.
  5. Electric wave type keyless entry systems are being operated nearby.
  6. The key is located near a device that generates high voltage or noise.

7. Film with some metallic content is stuck to the back glass.

HINT:

In this case, remove the cause or unlock the door using the mechanical key.

- Even if the key is in the vehicle exterior key detection area, the key may not operate properly due to the vehicle body design.
- The key may not be detected correctly if it is around the vehicle's windows, the door handle or center of the bumper, even when it is in the detection area outside the vehicle.
- The key may not be detected correctly if it is on the instrument panel, rear package tray or floor, or in the glove box, even when it is in the detection area inside the vehicle.
- The key may not operate if the key is not held properly.
- The entry and start system does not operate in the following conditions:
    1. The entry and start system is canceled.
    2. The key battery is completely depleted (the indicator does not blink when pushing any of the switches on the key).

FUNCTION OF MAIN COMPONENTS

Component	Function
Certification ECU (Smart key ECU assembly)	Controls the entry and start system in accordance with signals from each oscillator, various switches, ECUs and the key. • Performs key verification. • Performs vehicle interior/exterior transmission. • Performs occupant sensor control. • Sends lock/unlock commands during entry function. • Sends steering lock/unlock commands. • Sends immobiliser set/unset commands. • Records verification codes.
Main body ECU	Controls the power source mode function in accordance with signals from various switches, ECUs and the combination meter. • Controls the ACC/IG power source by turning it on/off. • Sends an engine start command to the ECM. • Controls the indicator and word illumination of the engine switch. • Activates starter relay.
ID code box (Immobiliser code ECU)	• Receives a command from the certification ECU (smart key ECU assembly), and sends an immobiliser set/unset command to the ECM. • Records verification codes.
Indoor electrical key antenna (for front, rear 1 and rear 2)	Receives a request signal from certification ECU (smart key ECU assembly), and forms the detection area in the vehicle interior.
Door control receiver	Receives the ID code from the key in the actuation area and transmits it to the certification ECU (smart key ECU assembly).
Back door electrical key antenna (for outer)	Receives a request signal from the certification ECU (smart key ECU assembly), and forms the actuation area around the back door.
Back door opener switch	Transmits a back door open request signal to the main body ECU.
Back door lock switch	Transmits a back door lock request signal to the certification ECU (smart key ECU assembly).
Door electrical key oscillator (for driver, front passenger, rear LH*3, rear RH*3 side doors)	Receives a request signal from the certification ECU (smart key ECU assembly), and forms the detection area around each door.
Outside door handle (for driver, front passenger, rear LH*3, rear RH*3 side doors) (antenna)	Transmits request signals.
Outside door handle (for driver, front passenger, rear LH*3, rear RH*3 side doors) (touch sensor)	Detects when a person touches the inside of the outside handle.
Outside door handle (for driver, front passenger, rear LH*3, rear RH*3 side doors) (lock switch)	Transmits door lock request signals to the certification ECU (smart key ECU assembly).
Key	• When an LF wave*1 that is output from the vehicle interior/exterior antenna is received, RF wave*2 format conversion is performed on the key ID, vehicle ID and other information, and an RF wave*2 is then output. • When the lock/unlock switch on the key is pressed, the signal is converted to an RF wave*2 and is then output. • When the wave output from the engine switch immobiliser amplifier is received, the key ID, vehicle ID and other information is output through immobiliser communication. • The key is equipped with a mechanical key for unlocking doors when the battery is fully depleted.

Wireless door lock buzzer Combination meter • Multi-information Display • Buzzer	When the certification ECU (smart key ECU assembly) detects human errors such as those below, it warns the driver by sounding the wireless door lock buzzer*, displays information and sounds the buzzer in accordance with the request signal from the ECU. **HINT:** *: Except China Example: • Key is taken outside the vehicle. • Driver leaves the vehicle while the engine is still running. • Driver leaves the vehicle while the shift lever is in a position other than P.

HINT:


- ***1: LF waves (134 KHz) check if the key is in the vehicle interior or not.**
- ***2: RF waves (314.35 MHz for Australia, 433.92 MHz for Europe and the Middle and Near East, and 315.12 MHz for China) are emitted from the key in response to the LF waves, and are sent to the door control receiver.**
- ***3: For vehicles with entry function for rear doors.**


CONSTRUCTION AND OPERATION

a. Key:
A total of 7 keys can be registered.

i. Electrical key transmitter:
The electrical key transmitter consists of a mechanical key, a transmitter function for the wireless door lock control and a transceiver for the entry and start system.

- The transceiver function for the entry and start system receives the signals from the oscillators and sends the ID code to the door control receiver.
- The transmitter function for the wireless door lock control has a lock switch, unlock switch and panic switch.
- This mechanical key can lock/unlock all the doors. To lock or unlock the doors, remove the cap from the driver door outside handle, insert the key into the door key cylinder, and then turn it to the lock or unlock position.

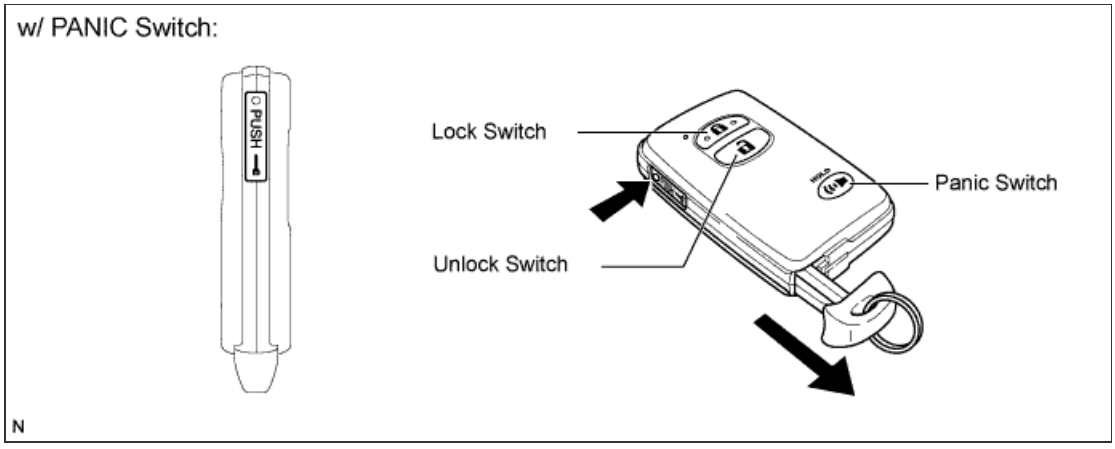

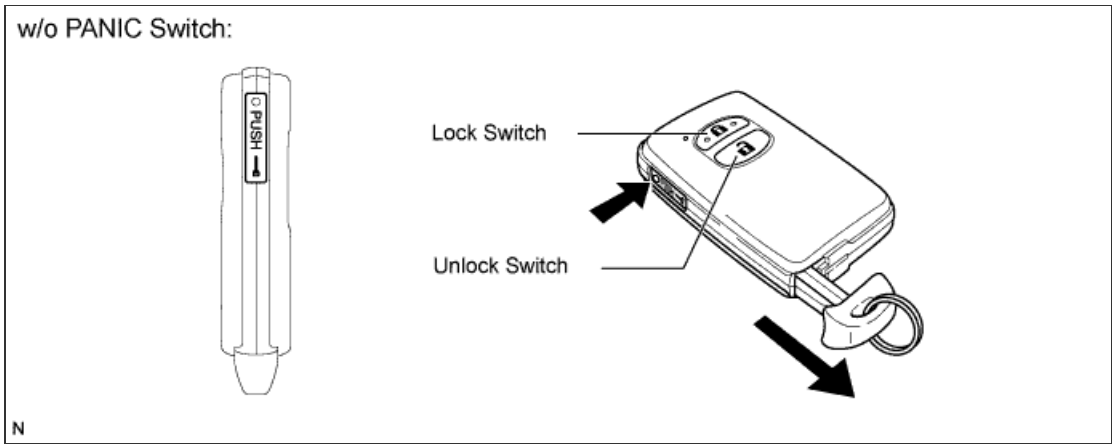

b. Oscillator (each door oscillator, front, rear 1 and rear 2 indoor antenna, and back door antenna)
Each oscillator transmits the request signal received from the certification ECU (smart key ECU assembly), and forms a key detection area to detect the presence of a key. The detection area formed by each door oscillator and back door outer antenna is approximately 0.7 to 1.0 m (2.30 to 3.28 ft.) from the outside handle of each door or the center of the rear bumper.

- The detection area of each door oscillator is formed by transmitting a request signal every 0.25 seconds while the engine switch is off and each door is locked. In this way, it detects the proximity of a key. During entry lock, the detection area is formed with the lock switch on.
- The detection area of the back door antenna is formed when the back door opener switch is on.
- The detection area of the indoor antenna (for front, rear 1 and rear 2) is formed when the driver door is opened or closed, during starting, when a warning is activated, or when the lock switch is on.

ENTRY FUNCTION OPERATION

a. The entry and start system has the following functions.

Function	Outline
Mechanical Key	Operation is the same as a conventional mechanical key.
Wireless Door Lock Control	This function remotely locks and unlocks all doors and the back door. Operation is the same as the wireless door lock control system. However, receiver in the certification ECU (smart key ECU assembly) uses the entry door control receiver to control locking and unlocking.
Entry Illumination	When a person carrying the key enters the detection area, the door will enter unlock standby mode and room light will illuminate.
Entry Unlock	When the key is located in the detection area of the door oscillator, the door will unlock by touching the inside of the outside door handle.
Entry Unlock Mode Switching (Click here)	Changes the doors that can be unlocked with the entry unlock function between 2 modes. • Driver door unlock mode • All door unlock mode
Entry Lock	When the key is located in the detection area of the door oscillator and the engine switch is off, the door can be locked by pressing the lock switch on the outside door handle.
Entry Back Door Open	When the key is in the detection area of the back door antenna (outer), the back door opens by pressing the back door opener switch.
Memory Call	This function operates the driving position memory system in accordance with the key ID code.
• Power Window Close Function*1 • Sliding Roof Close Function*1	Pressing the door handle entry lock switch for approximately 3 seconds or more causes all power windows and the sliding roof to close while sounding the wireless buzzer*2.
Key Lock-in Prevention	Prevents lock-in of the key if the door is locked using the outside door handle while the key is still inside the vehicle.
Warning	When any of the situations below occur, the entry and start system causes the certification ECU (smart key ECU assembly) to sound the buzzer in the combination meter and the wireless door lock buzzer*2, and display information in order to alert the driver. • Shift lever not in P (power source cut reminder) vehicle exit warning • Key reminder warning

	• Shift lever in P (power source cut reminder) vehicle exit warning • Entry door ajar warning • Passenger has brought key out of vehicle warning • Key is not within detection area warning • Key lock-in prevention function buzzer • Key battery low warning
Battery Saving	If the key is constantly located within the actuation area of the door oscillator, the system maintains periodic communication with the key. Therefore, if the vehicle remains parked in that state for a long time, key battery and vehicle battery could be drained. For this reason, the vehicle has controls for saving battery power.
Key Cancel (Click here)	The following key functions can be canceled: • Entry Unlock/Lock • Entry Ignition • Memory Call • Entry Back Door Open • Key Lock-in Prevention • Warning

HINT:

*1: w/ Remote Function

*2: except China

WIRELESS DOOR LOCK AND UNLOCK AND PANIC* FUNCTION

Push the lock/unlock/panic switch on the key to operate each function.

HINT:

*: w/ PANIC Switch

ENTRY UNLOCK FUNCTION

a. The detection area is formed by communication between a door oscillator and the certification ECU (smart key ECU assembly) when the door is locked in order to detect the person carrying the key.

b. When the person carrying the key enters the detection area around the vehicle, the matching of the ID codes for a door oscillator and key will automatically be performed. After the matching is completed, the door will enter unlock standby mode.

c. In unlock standby mode, the antenna built into the outside handle starts sensing. If the outside handle is held (the back side of the handle is touched), the door unlock operation will be performed. At this time, the hazard warning light blinks twice and the wireless door lock buzzer sounds twice*.

HINT:

*: except Europe and China

d. If any of the doors are not opened after a door unlock operation, all doors will automatically lock after 30 seconds.

ENTRY LOCK FUNCTION

a. After leaving the vehicle carrying the key, push the lock switch on the outside handle when all the doors are closed.

b. The certification ECU (smart key ECU assembly) determines whether the key is located inside or outside of the cabin based on the information from a door oscillator and indoor antenna. Then matching of the ID codes is performed.

c. When the matching result shows that the ID codes of the key and indoor antenna do not match and the ID codes of the key and door oscillator match, the door lock function will operate. At this time, the hazard warning lights blink once and the wireless door lock buzzer sounds once*.

HINT:

*: except Europe and China

d. If the key is located inside of the cabin, the door lock function will not operate and the alarm buzzer (beep sound) will sound for 2 seconds*.

HINT:

*: except China

ENTRY BACK DOOR OPEN FUNCTION

Stand in front of the back door with the key and push the back door opener switch to start the matching of the ID codes for the back door antenna. If the ID codes match, the back door open operation will be performed.

PREVENTION OF KEY LOCK-IN FUNCTION

a. If you attempt to lock the door through keyless operation (move the lock knob to the lock position and then close the door) with the key in the cabin, the system determines that the key is located in the cabin and unlocks the door.

b. If the back door is closed with the key in it, the alarm will sound and the back door can be opened only when all the doors are locked in order to prevent key lock-in in the vehicle.

ENTRY ILLUMINATION FUNCTION

In order to improve ease of entering and exiting the vehicle at night, the vehicle lights illuminate when the key is brought near the vehicle.

ENTRY POWER WINDOW FUNCTION* [REMOTE FUNCTION] (DOOR WINDOW AND SLIDING ROOF CLOSE OPERATION ONLY)

a. Pressing the door handle lock switch for 3 seconds or more operates the door window close operation of all of the windows and the sliding roof close operation.

b. If the entry power window function is operating and the door handle lock switch is released, the entry power window operation will stop.

HINT:

- **For more information about the entry power window function, refer to the Power Window Control System (Click here).**
- ***: w/ Remote Function**

MEMORY CALL FUNCTION (w/ Seat Position Memory System)

a. After unlocking the driver door using the key ID and opening the driver door, the seat automatically moves to the position associated with the key ID.

HINT:

For more information about the memory call function, refer to the Front Power Seat Control System (Click here).

WARNING FUNCTION

a. General:
When any of the situations below occur, the entry and start system responds to alert the driver.

Warning Function Operation Condition	Situation
Shift lever not in P (power source cut reminder) vehicle exit warning	A
Key reminder warning	B
Shift lever in P (power source cut reminder) vehicle exit warning	C
Entry door ajar warning	D
Passenger has brought key out of vehicle warning	E
Key is not within detection area warning	F
Key lock-in prevention function buzzer	G
Key battery low warning	H

b. Situation A:
Shift lever not in P (power source cut reminder) vehicle exit warning

i. With shift lever not in P, door is opened and vehicle exit (while holding key) is attempted

<table>
<tr><td colspan="4">Reason for warning: Sudden vehicle start prevention, vehicle theft prevention, vehicle roll-away prevention</td></tr>
<tr><td colspan="4">Warning start condition: Shift lever is not in P, engine switch is on (ACC) or on (IG), driver side door is opened and vehicle speed is 0 km/h (0 mph)</td></tr>
<tr><td colspan="4">Warning stop condition: Engine switch is off, shift lever is in P, vehicle speed is above 0 km/h (0 mph), or driver side door is closed</td></tr>
<tr><td rowspan="4">Warning description</td><td>Combination meter buzzer</td><td>Multi-buzzer</td><td>Sounds continuously (beep)</td></tr>
<tr><td rowspan="2">Combination meter display</td><td>Combination meter information</td><td>"Shift to P Range"</td></tr>
<tr><td>Telltale</td><td>None</td></tr>
<tr><td></td><td colspan="2">Sounds continuously (beep)*</td></tr>
</table>

	Wireless buzzer	**HINT:** *: except China
Recommended user action		Move shift lever to P

ii. With shift lever not in P, door is opened, key is brought out of vehicle, door is closed, and movement away from vehicle is attempted

Reason for warning: Sudden vehicle start prevention, vehicle theft prevention, vehicle roll-away prevention			
Warning start condition: Shift lever is not in P, engine switch is on (ACC) or on (IG), opened driver side door is closed, vehicle speed is 0 km/h (0 mph) and key is not in detected in vehicle interior and luggage interior			
Warning stop condition: • Key is detected in vehicle interior and luggage interior: Buzzer stops and "Shift to P Range" is displayed on combination meter • Vehicle speed is more than 0 km/h (0 mph): Buzzer stops, "Key is not detected" - "Check key position" is displayed on combination meter • Engine switch off: All warnings are turned off			
Warning description	Combination meter buzzer	Multi-buzzer	Sounds continuously (beep)
	Combination meter display	Combination meter information	Information below is displayed alternately on combination meter "Shift to P Range" "Key is not detected" - "Check key position"
		Telltale	None
	Wireless buzzer	Sounds continuously (beep)* **HINT:** *: except China	
Recommended user action		Move shift lever to P	

c. Situation B:
Key reminder warning

i. Steering lock/unlock set, driver door is opened and movement away from vehicle is attempted

Reason for warning: Vehicle theft prevention, required by law			
Precondition: Remote start is not operating			
Warning start condition: One of following conditions is met 1. Engine switch on (ACC) or off, and driver door opened 2. Engine switch off, steering lock/unlock set and driver door opened			
Warning stop condition: One of following conditions is met 1. Engine switch is on (IG) or driver door is closed 2. Engine switch on (ACC) or off, and steering lock/unlock is set			
Warning description	Combination meter buzzer	Multi-buzzer	Sounds intermittently (several "pon" sounds)
	Combination meter display	Combination meter information	None
		Telltale	None
	Wireless buzzer	None	
Recommended user action		If engine switch is on (ACC) or on (IG), turn engine switch off and close driver door	

d. Situation C:
Shift lever in P (power source cut reminder) vehicle exit warning

i. With shift lever in P, driver door is opened, key is brought out of vehicle, driver door is closed, and movement away from vehicle is attempted

Reason for warning: Vehicle theft prevention, "Engine control system cannot be restarted" prevention, battery depletion prevention
Warning start condition: Shift lever is in P, engine switch is on (ACC) or on (IG), opened driver side door is closed and key is not in detected in vehicle interior and luggage interior
Warning stop condition: Engine switch on (ACC) or off, or key is detected in vehicle interior and luggage interior

Warning description	Combination meter buzzer	Multi-buzzer	Sounds once (1 "pon" sound) (when key is not detected continuously, sounds again when vehicle is first driven)
	Combination meter display	Combination meter information	"Key is not detected" - "Check key position"
		Telltale	None
	Wireless buzzer	Sounds 3 times (short beeps)* **HINT:** *: except China	
Recommended user action		Turn engine switch off and exit vehicle while holding key	

ii. With shift lever in P and either engine switch on (ACC) or steering lock/unlock set, driver door is opened, user moves away from vehicle, and door handle lock switch is pressed in an attempt to perform entry lock operation

Reason for warning: Vehicle theft prevention, battery depletion prevention			
Precondition: Change door control lock switch from off to on			
Warning start condition: Shift lever is in P, engine switch is on (ACC) or on (IG), all doors closed and key is detected in vehicle exterior, key is not detected in vehicle interior, vehicle speed is 0km/h.			
Warning stop condition: One of following conditions is met 1. Engine switch off. 2. Key is detected in vehicle interior and luggage interior. 3. Vehicle speed is more than 0km/h. 4. Shift lever is not in P.			
Warning description	Combination meter buzzer	Multi-buzzer	None
	Combination meter display	Combination meter information	None
		Telltale	None
	Wireless buzzer	Sounds for 60 seconds (long beep)* **HINT:** *: except China	
Recommended user action		Turn engine switch off and perform entry lock operation	

e. Situation D:
Entry door ajar warning

i. With one vehicle door open, entry lock operation is attempted

Reason for warning: Vehicle theft prevention			
Precondition: Engine switch on (ACC) or off, and one door open			
Warning start condition: After preconditions are met, entry lock operation is performed			
Warning stop condition: Engine switch is on (ACC) or on (IG), all doors are closed, wireless unlock is performed, entry unlock operation is performed or 10 seconds have passed after warning start			
Warning description	Combination meter buzzer	Multi-buzzer	None
	Combination meter display	Combination meter information	None
		Telltale	None
	Wireless buzzer	Sounds continuously (beep)* **HINT:** *: except China	
Recommended user action		Close all doors and perform entry lock operation	

f. Situation E:
Passenger has brought key out of vehicle warning

i. With engine switch in condition other than off, key is brought out of vehicle by passenger

Reason for warning: "Engine control system cannot be started" prevention
Warning start condition: Engine switch is on (ACC) or on (IG), opened door other than driver side door is closed,

<table>
<tr><td colspan="4">vehicle speed is 0 km/h (0 mph) and key is not in detected in vehicle interior and luggage interior</td></tr>
<tr><td colspan="4">Warning stop condition: Engine switch on (ACC) or off, or key is detected in vehicle interior and luggage interior or vehicle speed is more than 0 km/h (0 mph)</td></tr>
<tr><td rowspan="4">Warning description</td><td>Combination meter buzzer</td><td>Multi-buzzer</td><td>Sounds once (1 "pon" sound) (when key is not detected continuously, sounds again when vehicle is first driven)</td></tr>
<tr><td rowspan="2">Combination meter display</td><td>Combination meter information</td><td>"Key is not detected" - "Check key position"</td></tr>
<tr><td>Telltale</td><td>Illuminates</td></tr>
<tr><td>Wireless buzzer</td><td colspan="2">Sounds 3 times (short beeps)*

HINT:

*: except China</td></tr>
<tr><td colspan="2">Recommended user action</td><td colspan="2">Check if the passenger who exited the vehicle has the key or not</td></tr>
</table>

g. Situation F:
Key is not within detection area warning

i. With key not in vehicle cabin or key battery depleted, engine switch on (ACC) or on (IG) operation is attempted

<table>
<tr><td colspan="4">Reason for warning: User confusion prevention</td></tr>
<tr><td colspan="4">Warning condition: Engine switch is not off and key is not detected in vehicle interior</td></tr>
<tr><td rowspan="3">Warning description</td><td>Combination meter buzzer</td><td>Multi-buzzer</td><td>Sounds once (1 "pon" sound)</td></tr>
<tr><td rowspan="2">Combination meter display</td><td>Combination meter information</td><td>"Key is not detected" - "Check key position" is displayed for 10 seconds, then display ends</td></tr>
<tr><td>Telltale</td><td>None</td></tr>
<tr><td>Wireless buzzer</td><td colspan="2">None</td></tr>
<tr><td colspan="2">Recommended user action</td><td colspan="2">Check if the key is within the detection area of the vehicle cabin
If key is within the vehicle interior, built-in battery may be depleted
If wireless door lock switch on key is pressed, check if indicator on key illuminates
If indicator does not illuminate, replace the built-in battery
It is recommended that battery be bought at dealer, but battery can be replaced according to user preference</td></tr>
</table>

h. Situation G:
Key lock-in prevention function buzzer (for cabin)

i. With key in vehicle cabin, vehicle is exited and door handle lock switch is pressed in an attempt to perform entry lock operation

<table>
<tr><td colspan="4">Reason for warning: Key reminder vehicle theft warning prevention</td></tr>
<tr><td colspan="4">Warning condition: Engine switch off, all doors closed, door handle lock switch on and key is detected in vehicle interior</td></tr>
<tr><td rowspan="4">Warning description</td><td>Combination meter buzzer</td><td>Multi-buzzer</td><td>None</td></tr>
<tr><td rowspan="2">Combination meter display</td><td>Combination meter information</td><td>None</td></tr>
<tr><td>Telltale</td><td>None</td></tr>
<tr><td>Wireless buzzer</td><td colspan="2">Sounds for 2 seconds (long beep)*

HINT:

*: except China</td></tr>
<tr><td colspan="2">Recommended user action</td><td colspan="2">Pick up key that is in vehicle interior and perform entry lock operation again</td></tr>
</table>

i. Situation H:
Key battery low warning

i. Key with almost depleted battery is used to drive vehicle

Reason for warning: Helpful function			
Warning condition: After engine switch not off condition continues for 20 minutes or more, engine switch is changed from not off to off, key battery is low and key is detected in vehicle interior			
Warning description	Combination meter buzzer	Multi-buzzer	Sound once (1 "pon" sound)
	Combination meter display	Combination meter information	"Low Key Battery" - "Have your vehicle checked by a dealer"
		Telltale	None
	Wireless buzzer	None	
Recommended user action		Replace key built-in battery with new one It is recommended that battery be bought at dealer, but battery can be replaced according to user preference	

BATTERY SAVING

a. Vehicle battery saving function:
In the entry and start system, signals are emitted outside of the vehicle at a prescribed interval (0.25 seconds) when the doors are locked. Therefore, the vehicle battery could be drained if the vehicle remains parked for a long time. For this reason, the controls listed below exist.

Condition	Control
Both conditions below are met for 10 days: • Key is not in detection area • Touch sensor or lock switch operation is not performed	Signal transmission interval is extended from 0.25 to 0.75 seconds
Both conditions below are met for 15 days: • Key is not in detection area • Touch sensor or lock switch operation is not performed	Signal transmission interval is extended from 0.75 to 2.25 seconds
Both conditions below are met for 30 days: • Key is not in detection area • Touch sensor or lock switch operation is not performed	Automatically deactivates the entry and start system

Reinstatement Conditions:

- A wireless door lock control signal (lock, unlock) is input and the ID matches.
- A user carries the key and pushes a lock switch on an outside door handle.
- The driver door is locked or unlocked by the mechanical key.

b. Key battery and vehicle battery saving function:
In the entry and start system, if the key is constantly located within the vehicle exterior detection area of the doors, the system maintains periodic communication with the key. Therefore, if the vehicle remains parked in that state for a long time, the key battery and the vehicle battery could be drained. For this reason, if this state continues for more than 10 minutes, the entry and start system automatically becomes deactivated.
Reinstatement Conditions:

- A wireless door lock control signal (lock, unlock) is input and the ID code matches.
- A user carries the key and pushes a lock switch on an outside handle.
- The driver door is locked or unlocked by the mechanical key.

KEY DIAGNOSTIC MODE (Using the intelligent tester)

HINT:

Key diagnostic mode checks if the electrical key transmitter within a selected oscillator/antenna detection area is operating normally. The results are output through the wireless door lock buzzer (in the right front fender).

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Entry & Start / Key Communication Check.

e. Check the values by referring to the table below.

Entry & Start

Tester Display	Inspection Range

Overhead + Driver Side [*1]	Door electrical key oscillator (for Driver Side)
Overhead + Passenger Side [*2]	Door electrical key oscillator (for Front Passenger Side)
Overhead + Driver Side Rear [*3]*	Door electrical key oscillator (for Driver Side Rear)
Overhead + Passenger Side Rear [*4]*	Door electrical key oscillator (for Passenger Side Rear)
Overhead + Front Room [*5]	Indoor electrical key antenna (for Front Floor)
Overhead + Rear 1 Room [*6]	Indoor electrical key antenna (for Rear 1 Floor)
Overhead + Back Door (inside) [*7]	Indoor electrical key antenna (for Rear 2 Floor)
Overhead + Back Door (outside) [*8]	Back door electrical key antenna (for Outer)

HINT:

*: For vehicles with entry function for rear doors.

f. When the electrical key transmitter is brought near the selected oscillator/antenna, check that the wireless door lock buzzer sounds.

i. *1: Door electrical key oscillator (for Driver Side)

HINT:

- **Hold the key at the same height as the door outside handle (0.7 to 1.0 m (2.30 to 3.28 ft.)). Pay attention to the direction of the key in the illustration.**
- ***2: Perform the same inspection above for the door electrical key oscillator (front passenger seat outside transmitter).**
- ***3: Perform the same inspection above for the door electrical key oscillator (driver side rear seat outside transmitter).**
- ***4: Perform the same inspection above for the door electrical key oscillator (passenger side rear seat outside transmitter).**

ii. *5: Indoor electrical key antenna (front inside transmitter)

HINT:

Place the electrical key transmitter on the driver or front passenger seat cushion.

iii. *6: Indoor electrical key antenna (rear 1 inside transmitter)


HINT:

Place the electrical key transmitter on the rear 1 seat cushion.

iv. *7: Indoor electrical key antenna (for rear 2 inside transmitter)

HINT:


Place the electrical key transmitter on the rear 2 seat cushion.

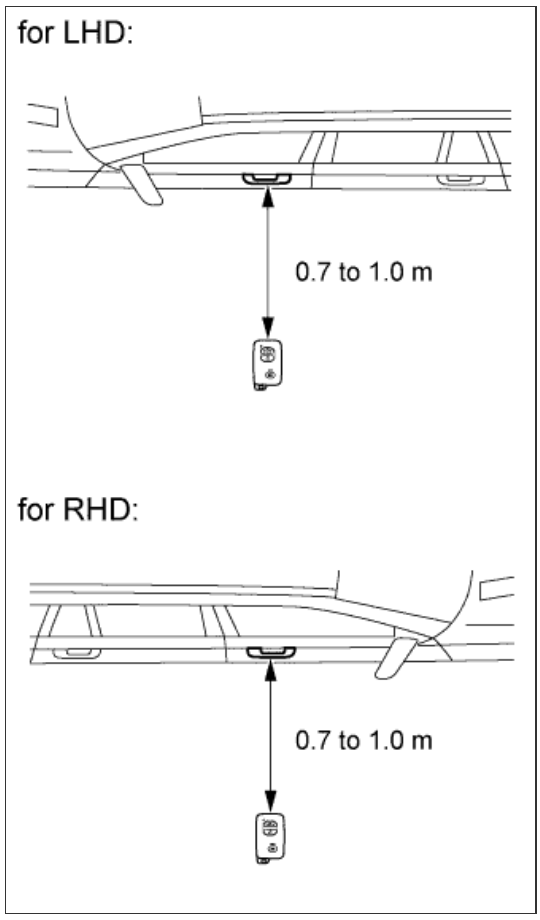

v. *8: Back door electrical key antenna (for Outer)

HINT:

Hold the electrical key transmitter at the same height as the rear bumper upper surface and aligned with the center of the rear of the vehicle, as shown in the illustration.

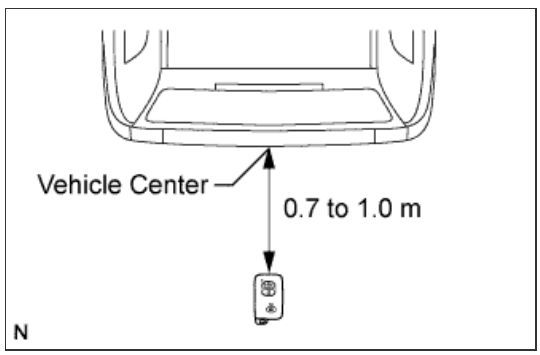

for Preparation Click here

CAUTION:


If using a pacemaker, be sure to read the manual of the pacemaker before using the key, as the radio waves of the key may affect the pacemaker.

ENTRY AND START SYSTEM DESCRIPTION

a. In addition to conventional mechanical key and wireless door lock control functions, the entry and start system enables door locking/unlocking, steering lock releasing, engine control system starting and back door opening without operating the key. The only requirement is that the key is in the possession of the user.

- This system is controlled by the certification ECU (smart key ECU assembly). When the certification ECU (smart key ECU assembly) detects the presence of the key in one of the detection areas, it identifies and checks the ID code, and outputs operation signals to the related ECU in accordance with their functions.
- For vehicle with rear entry function:
  The detection areas are formed by 4 oscillators and 4 antenna (4 door oscillators, back door antenna and 3 indoor antennas).
- For vehicle without rear entry function:
  The detection areas are formed by 2 oscillators and 4 antenna (2 door oscillators, back door antenna and 3 indoor antennas).

DETECTION AREA

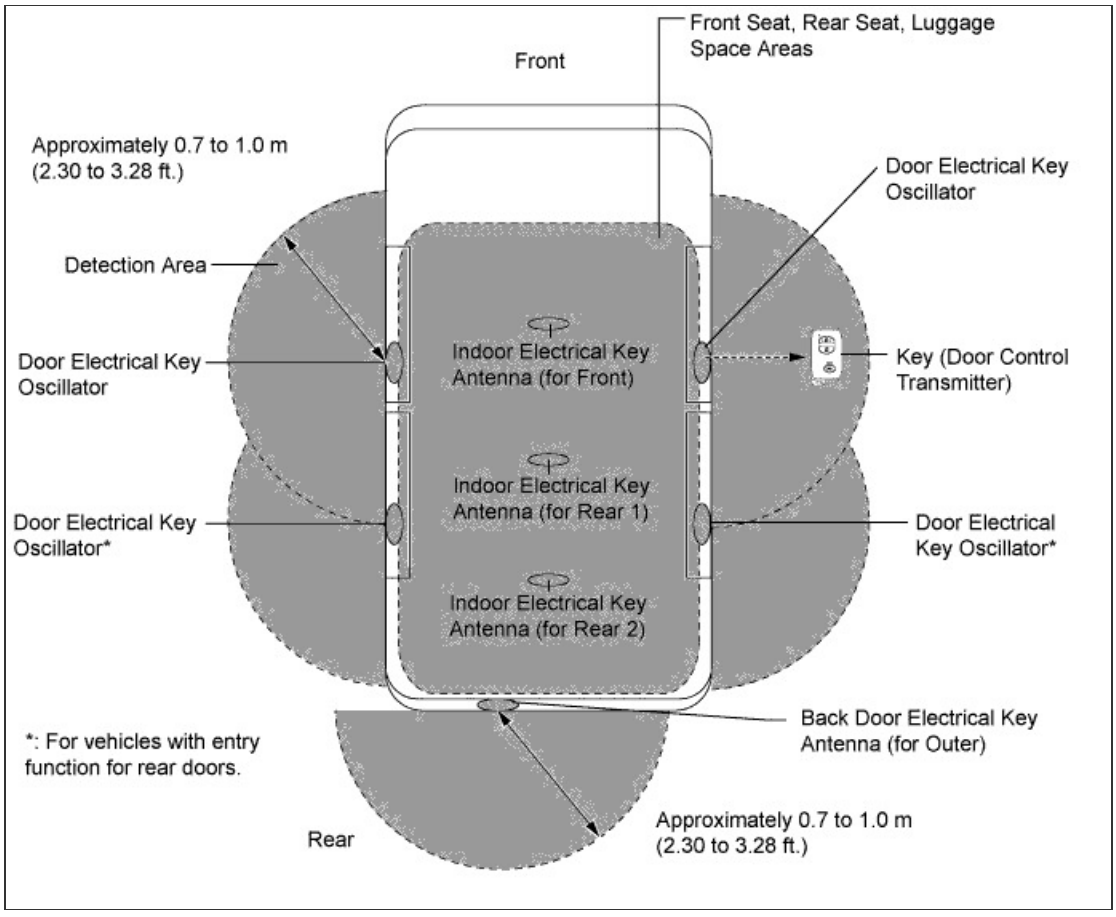

a. Precautions for the entire system:

- Be sure to carry the key during inspection of the entry and start system.
- As weak radio waves are used to detect the key, the key detection area may decrease, or the key may not be detected correctly in the following situations.
  1. The key battery is depleted.
  2. Any facilities that generate strong radio waves, such as a TV tower, power plant, a broadcast station or gas station, are located near the inspection site.
  3. A wireless device, such as a cell phone, is carried with the key.
  4. The key is in contact with or covered with metal.
  5. Electric wave type keyless entry systems are being operated nearby.
  6. The key is located near a device that generates high voltage or noise.

7. Film with some metallic content is stuck to the back glass.

HINT:

In this case, remove the cause or unlock the door using the mechanical key.

- Even if the key is in the vehicle exterior key detection area, the key may not operate properly due to the vehicle body design.
- The key may not be detected correctly if it is around the vehicle's windows, the door handle or center of the bumper, even when it is in the detection area outside the vehicle.
- The key may not be detected correctly if it is on the instrument panel, rear package tray or floor, or in the glove box, even when it is in the detection area inside the vehicle.
- The key may not operate if the key is not held properly.
- The entry and start system does not operate in the following conditions:
    1. The entry and start system is canceled.
    2. The key battery is completely depleted (the indicator does not blink when pushing any of the switches on the key).

FUNCTION OF MAIN COMPONENTS

Component	Function
Certification ECU (Smart key ECU assembly)	Controls the entry and start system in accordance with signals from each oscillator, various switches, ECUs and the key. • Performs key verification. • Performs vehicle interior/exterior transmission. • Performs occupant sensor control. • Sends lock/unlock commands during entry function. • Sends steering lock/unlock commands. • Sends immobiliser set/unset commands. • Records verification codes.
Main body ECU	Controls the power source mode function in accordance with signals from various switches, ECUs and the combination meter. • Controls the ACC/IG power source by turning it on/off. • Sends an engine start command to the ECM. • Controls the indicator and word illumination of the engine switch. • Activates starter relay.
ID code box (Immobiliser code ECU)	• Receives a command from the certification ECU (smart key ECU assembly), and sends an immobiliser set/unset command to the ECM. • Records verification codes.
Indoor electrical key antenna (for front, rear 1 and rear 2)	Receives a request signal from certification ECU (smart key ECU assembly), and forms the detection area in the vehicle interior.
Door control receiver	Receives the ID code from the key in the actuation area and transmits it to the certification ECU (smart key ECU assembly).
Back door electrical key antenna (for outer)	Receives a request signal from the certification ECU (smart key ECU assembly), and forms the actuation area around the back door.
Back door opener switch	Transmits a back door open request signal to the main body ECU.
Back door lock switch	Transmits a back door lock request signal to the certification ECU (smart key ECU assembly).
Door electrical key oscillator (for driver, front passenger, rear LH*3, rear RH*3 side doors)	Receives a request signal from the certification ECU (smart key ECU assembly), and forms the detection area around each door.
Outside door handle (for driver, front passenger, rear LH*3, rear RH*3 side doors) (antenna)	Transmits request signals.
Outside door handle (for driver, front passenger, rear LH*3, rear RH*3 side doors) (touch sensor)	Detects when a person touches the inside of the outside handle.
Outside door handle (for driver, front passenger, rear LH*3, rear RH*3 side doors) (lock switch)	Transmits door lock request signals to the certification ECU (smart key ECU assembly).
Key	• When an LF wave*1 that is output from the vehicle interior/exterior antenna is received, RF wave*2 format conversion is performed on the key ID, vehicle ID and other information, and an RF wave*2 is then output. • When the lock/unlock switch on the key is pressed, the signal is converted to an RF wave*2 and is then output. • When the wave output from the engine switch immobiliser amplifier is received, the key ID, vehicle ID and other information is output through immobiliser communication. • The key is equipped with a mechanical key for unlocking doors when the battery is fully depleted.

Wireless door lock buzzer Combination meter • Multi-information Display • Buzzer	When the certification ECU (smart key ECU assembly) detects human errors such as those below, it warns the driver by sounding the wireless door lock buzzer*, displays information and sounds the buzzer in accordance with the request signal from the ECU. **HINT:** *: Except China Example: • Key is taken outside the vehicle. • Driver leaves the vehicle while the engine is still running. • Driver leaves the vehicle while the shift lever is in a position other than P.

HINT:


- ***1: LF waves (134 KHz) check if the key is in the vehicle interior or not.**
- ***2: RF waves (314.35 MHz for Australia, 433.92 MHz for Europe and the Middle and Near East, and 315.12 MHz for China) are emitted from the key in response to the LF waves, and are sent to the door control receiver.**
- ***3: For vehicles with entry function for rear doors.**


CONSTRUCTION AND OPERATION

a. Key:
A total of 7 keys can be registered.

i. Electrical key transmitter:
The electrical key transmitter consists of a mechanical key, a transmitter function for the wireless door lock control and a transceiver for the entry and start system.

- The transceiver function for the entry and start system receives the signals from the oscillators and sends the ID code to the door control receiver.
- The transmitter function for the wireless door lock control has a lock switch, unlock switch and panic switch.
- This mechanical key can lock/unlock all the doors. To lock or unlock the doors, remove the cap from the driver door outside handle, insert the key into the door key cylinder, and then turn it to the lock or unlock position.

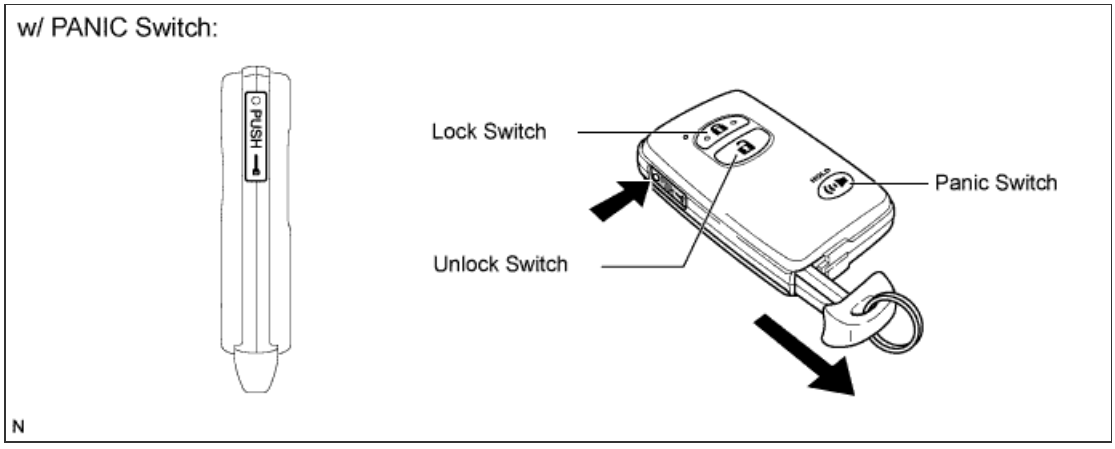

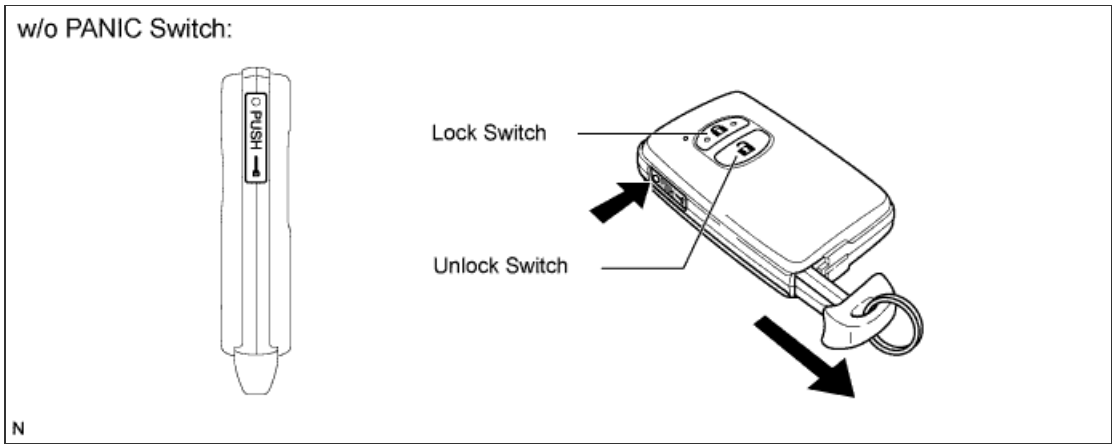

b. Oscillator (each door oscillator, front, rear 1 and rear 2 indoor antenna, and back door antenna)
Each oscillator transmits the request signal received from the certification ECU (smart key ECU assembly), and forms a key detection area to detect the presence of a key. The detection area formed by each door oscillator and back door outer antenna is approximately 0.7 to 1.0 m (2.30 to 3.28 ft.) from the outside handle of each door or the center of the rear bumper.

- The detection area of each door oscillator is formed by transmitting a request signal every 0.25 seconds while the engine switch is off and each door is locked. In this way, it detects the proximity of a key. During entry lock, the detection area is formed with the lock switch on.
- The detection area of the back door antenna is formed when the back door opener switch is on.
- The detection area of the indoor antenna (for front, rear 1 and rear 2) is formed when the driver door is opened or closed, during starting, when a warning is activated, or when the lock switch is on.

ENTRY FUNCTION OPERATION

a. The entry and start system has the following functions.

Function	Outline
Mechanical Key	Operation is the same as a conventional mechanical key.
Wireless Door Lock Control	This function remotely locks and unlocks all doors and the back door. Operation is the same as the wireless door lock control system. However, receiver in the certification ECU (smart key ECU assembly) uses the entry door control receiver to control locking and unlocking.
Entry Illumination	When a person carrying the key enters the detection area, the door will enter unlock standby mode and room light will illuminate.
Entry Unlock	When the key is located in the detection area of the door oscillator, the door will unlock by touching the inside of the outside door handle.
Entry Unlock Mode Switching (Click here)	Changes the doors that can be unlocked with the entry unlock function between 2 modes. • Driver door unlock mode • All door unlock mode
Entry Lock	When the key is located in the detection area of the door oscillator and the engine switch is off, the door can be locked by pressing the lock switch on the outside door handle.
Entry Back Door Open	When the key is in the detection area of the back door antenna (outer), the back door opens by pressing the back door opener switch.
Memory Call	This function operates the driving position memory system in accordance with the key ID code.
• Power Window Close Function*1 • Sliding Roof Close Function*1	Pressing the door handle entry lock switch for approximately 3 seconds or more causes all power windows and the sliding roof to close while sounding the wireless buzzer*2.
Key Lock-in Prevention	Prevents lock-in of the key if the door is locked using the outside door handle while the key is still inside the vehicle.
Warning	When any of the situations below occur, the entry and start system causes the certification ECU (smart key ECU assembly) to sound the buzzer in the combination meter and the wireless door lock buzzer*2, and display information in order to alert the driver. • Shift lever not in P (power source cut reminder) vehicle exit warning • Key reminder warning

	• Shift lever in P (power source cut reminder) vehicle exit warning • Entry door ajar warning • Passenger has brought key out of vehicle warning • Key is not within detection area warning • Key lock-in prevention function buzzer • Key battery low warning
Battery Saving	If the key is constantly located within the actuation area of the door oscillator, the system maintains periodic communication with the key. Therefore, if the vehicle remains parked in that state for a long time, key battery and vehicle battery could be drained. For this reason, the vehicle has controls for saving battery power.
Key Cancel (Click here)	The following key functions can be canceled: • Entry Unlock/Lock • Entry Ignition • Memory Call • Entry Back Door Open • Key Lock-in Prevention • Warning

HINT:

*1: w/ Remote Function

*2: except China

WIRELESS DOOR LOCK AND UNLOCK AND PANIC* FUNCTION

Push the lock/unlock/panic switch on the key to operate each function.

HINT:

*: w/ PANIC Switch

ENTRY UNLOCK FUNCTION

a. The detection area is formed by communication between a door oscillator and the certification ECU (smart key ECU assembly) when the door is locked in order to detect the person carrying the key.

b. When the person carrying the key enters the detection area around the vehicle, the matching of the ID codes for a door oscillator and key will automatically be performed. After the matching is completed, the door will enter unlock standby mode.

c. In unlock standby mode, the antenna built into the outside handle starts sensing. If the outside handle is held (the back side of the handle is touched), the door unlock operation will be performed. At this time, the hazard warning light blinks twice and the wireless door lock buzzer sounds twice*.

HINT:

*: except Europe and China

d. If any of the doors are not opened after a door unlock operation, all doors will automatically lock after 30 seconds.

ENTRY LOCK FUNCTION

a. After leaving the vehicle carrying the key, push the lock switch on the outside handle when all the doors are closed.

b. The certification ECU (smart key ECU assembly) determines whether the key is located inside or outside of the cabin based on the information from a door oscillator and indoor antenna. Then matching of the ID codes is performed.

c. When the matching result shows that the ID codes of the key and indoor antenna do not match and the ID codes of the key and door oscillator match, the door lock function will operate. At this time, the hazard warning lights blink once and the wireless door lock buzzer sounds once*.

HINT:

*: except Europe and China

d. If the key is located inside of the cabin, the door lock function will not operate and the alarm buzzer (beep sound) will sound for 2 seconds*.

HINT:

*: except China

ENTRY BACK DOOR OPEN FUNCTION

Stand in front of the back door with the key and push the back door opener switch to start the matching of the ID codes for the back door antenna. If the ID codes match, the back door open operation will be performed.

PREVENTION OF KEY LOCK-IN FUNCTION

a. If you attempt to lock the door through keyless operation (move the lock knob to the lock position and then close the door) with the key in the cabin, the system determines that the key is located in the cabin and unlocks the door.

b. If the back door is closed with the key in it, the alarm will sound and the back door can be opened only when all the doors are locked in order to prevent key lock-in in the vehicle.

ENTRY ILLUMINATION FUNCTION

In order to improve ease of entering and exiting the vehicle at night, the vehicle lights illuminate when the key is brought near the vehicle.

ENTRY POWER WINDOW FUNCTION* [REMOTE FUNCTION] (DOOR WINDOW AND SLIDING ROOF CLOSE OPERATION ONLY)

a. Pressing the door handle lock switch for 3 seconds or more operates the door window close operation of all of the windows and the sliding roof close operation.

b. If the entry power window function is operating and the door handle lock switch is released, the entry power window operation will stop.

HINT:

- **For more information about the entry power window function, refer to the Power Window Control System (Click here).**
- ***: w/ Remote Function**

MEMORY CALL FUNCTION (w/ Seat Position Memory System)

a. After unlocking the driver door using the key ID and opening the driver door, the seat automatically moves to the position associated with the key ID.

HINT:

For more information about the memory call function, refer to the Front Power Seat Control System (Click here).

WARNING FUNCTION

a. General:
When any of the situations below occur, the entry and start system responds to alert the driver.

Warning Function Operation Condition	Situation
Shift lever not in P (power source cut reminder) vehicle exit warning	A
Key reminder warning	B
Shift lever in P (power source cut reminder) vehicle exit warning	C
Entry door ajar warning	D
Passenger has brought key out of vehicle warning	E
Key is not within detection area warning	F
Key lock-in prevention function buzzer	G
Key battery low warning	H

b. Situation A:
Shift lever not in P (power source cut reminder) vehicle exit warning

i. With shift lever not in P, door is opened and vehicle exit (while holding key) is attempted

<table>
<tr><td colspan="4">Reason for warning: Sudden vehicle start prevention, vehicle theft prevention, vehicle roll-away prevention</td></tr>
<tr><td colspan="4">Warning start condition: Shift lever is not in P, engine switch is on (ACC) or on (IG), driver side door is opened and vehicle speed is 0 km/h (0 mph)</td></tr>
<tr><td colspan="4">Warning stop condition: Engine switch is off, shift lever is in P, vehicle speed is above 0 km/h (0 mph), or driver side door is closed</td></tr>
<tr><td rowspan="4">Warning description</td><td>Combination meter buzzer</td><td>Multi-buzzer</td><td>Sounds continuously (beep)</td></tr>
<tr><td rowspan="2">Combination meter display</td><td>Combination meter information</td><td>"Shift to P Range"</td></tr>
<tr><td>Telltale</td><td>None</td></tr>
<tr><td></td><td colspan="2">Sounds continuously (beep)*</td></tr>
</table>

	Wireless buzzer	**HINT:** *: except China
Recommended user action		Move shift lever to P

ii. With shift lever not in P, door is opened, key is brought out of vehicle, door is closed, and movement away from vehicle is attempted

Reason for warning: Sudden vehicle start prevention, vehicle theft prevention, vehicle roll-away prevention			
Warning start condition: Shift lever is not in P, engine switch is on (ACC) or on (IG), opened driver side door is closed, vehicle speed is 0 km/h (0 mph) and key is not in detected in vehicle interior and luggage interior			
Warning stop condition: • Key is detected in vehicle interior and luggage interior: Buzzer stops and "Shift to P Range" is displayed on combination meter • Vehicle speed is more than 0 km/h (0 mph): Buzzer stops, "Key is not detected" - "Check key position" is displayed on combination meter • Engine switch off: All warnings are turned off			
Warning description	Combination meter buzzer	Multi-buzzer	Sounds continuously (beep)
	Combination meter display	Combination meter information	Information below is displayed alternately on combination meter "Shift to P Range" "Key is not detected" - "Check key position"
		Telltale	None
	Wireless buzzer	Sounds continuously (beep)* **HINT:** *: except China	
Recommended user action		Move shift lever to P	

c. Situation B:
Key reminder warning

i. Steering lock/unlock set, driver door is opened and movement away from vehicle is attempted

Reason for warning: Vehicle theft prevention, required by law			
Precondition: Remote start is not operating			
Warning start condition: One of following conditions is met 1. Engine switch on (ACC) or off, and driver door opened 2. Engine switch off, steering lock/unlock set and driver door opened			
Warning stop condition: One of following conditions is met 1. Engine switch is on (IG) or driver door is closed 2. Engine switch on (ACC) or off, and steering lock/unlock is set			
Warning description	Combination meter buzzer	Multi-buzzer	Sounds intermittently (several "pon" sounds)
	Combination meter display	Combination meter information	None
		Telltale	None
	Wireless buzzer	None	
Recommended user action		If engine switch is on (ACC) or on (IG), turn engine switch off and close driver door	

d. Situation C:
Shift lever in P (power source cut reminder) vehicle exit warning

i. With shift lever in P, driver door is opened, key is brought out of vehicle, driver door is closed, and movement away from vehicle is attempted

Reason for warning: Vehicle theft prevention, "Engine control system cannot be restarted" prevention, battery depletion prevention
Warning start condition: Shift lever is in P, engine switch is on (ACC) or on (IG), opened driver side door is closed and key is not in detected in vehicle interior and luggage interior
Warning stop condition: Engine switch on (ACC) or off, or key is detected in vehicle interior and luggage interior

Warning description	Combination meter buzzer	Multi-buzzer	Sounds once (1 "pon" sound) (when key is not detected continuously, sounds again when vehicle is first driven)
	Combination meter display	Combination meter information	"Key is not detected" - "Check key position"
		Telltale	None
	Wireless buzzer	Sounds 3 times (short beeps)* **HINT:** *: except China	
Recommended user action		Turn engine switch off and exit vehicle while holding key	

ii. With shift lever in P and either engine switch on (ACC) or steering lock/unlock set, driver door is opened, user moves away from vehicle, and door handle lock switch is pressed in an attempt to perform entry lock operation

Reason for warning: Vehicle theft prevention, battery depletion prevention			
Precondition: Change door control lock switch from off to on			
Warning start condition: Shift lever is in P, engine switch is on (ACC) or on (IG), all doors closed and key is detected in vehicle exterior, key is not detected in vehicle interior, vehicle speed is 0km/h.			
Warning stop condition: One of following conditions is met 1. Engine switch off. 2. Key is detected in vehicle interior and luggage interior. 3. Vehicle speed is more than 0km/h. 4. Shift lever is not in P.			
Warning description	Combination meter buzzer	Multi-buzzer	None
	Combination meter display	Combination meter information	None
		Telltale	None
	Wireless buzzer	Sounds for 60 seconds (long beep)* **HINT:** *: except China	
Recommended user action		Turn engine switch off and perform entry lock operation	

e. Situation D:
Entry door ajar warning

i. With one vehicle door open, entry lock operation is attempted

Reason for warning: Vehicle theft prevention			
Precondition: Engine switch on (ACC) or off, and one door open			
Warning start condition: After preconditions are met, entry lock operation is performed			
Warning stop condition: Engine switch is on (ACC) or on (IG), all doors are closed, wireless unlock is performed, entry unlock operation is performed or 10 seconds have passed after warning start			
Warning description	Combination meter buzzer	Multi-buzzer	None
	Combination meter display	Combination meter information	None
		Telltale	None
	Wireless buzzer	Sounds continuously (beep)* **HINT:** *: except China	
Recommended user action		Close all doors and perform entry lock operation	

f. Situation E:
Passenger has brought key out of vehicle warning

i. With engine switch in condition other than off, key is brought out of vehicle by passenger

Reason for warning: "Engine control system cannot be started" prevention
Warning start condition: Engine switch is on (ACC) or on (IG), opened door other than driver side door is closed,

<table>
<tr><td colspan="4">vehicle speed is 0 km/h (0 mph) and key is not in detected in vehicle interior and luggage interior</td></tr>
<tr><td colspan="4">Warning stop condition: Engine switch on (ACC) or off, or key is detected in vehicle interior and luggage interior or vehicle speed is more than 0 km/h (0 mph)</td></tr>
<tr><td rowspan="4">Warning description</td><td>Combination meter buzzer</td><td>Multi-buzzer</td><td>Sounds once (1 "pon" sound) (when key is not detected continuously, sounds again when vehicle is first driven)</td></tr>
<tr><td rowspan="2">Combination meter display</td><td>Combination meter information</td><td>"Key is not detected" - "Check key position"</td></tr>
<tr><td>Telltale</td><td>Illuminates</td></tr>
<tr><td>Wireless buzzer</td><td colspan="2">Sounds 3 times (short beeps)*

HINT:

*: except China</td></tr>
<tr><td colspan="2">Recommended user action</td><td colspan="2">Check if the passenger who exited the vehicle has the key or not</td></tr>
</table>

g. Situation F:
Key is not within detection area warning

i. With key not in vehicle cabin or key battery depleted, engine switch on (ACC) or on (IG) operation is attempted

<table>
<tr><td colspan="4">Reason for warning: User confusion prevention</td></tr>
<tr><td colspan="4">Warning condition: Engine switch is not off and key is not detected in vehicle interior</td></tr>
<tr><td rowspan="3">Warning description</td><td>Combination meter buzzer</td><td>Multi-buzzer</td><td>Sounds once (1 "pon" sound)</td></tr>
<tr><td rowspan="2">Combination meter display</td><td>Combination meter information</td><td>"Key is not detected" - "Check key position" is displayed for 10 seconds, then display ends</td></tr>
<tr><td>Telltale</td><td>None</td></tr>
<tr><td>Wireless buzzer</td><td colspan="2">None</td></tr>
<tr><td colspan="2">Recommended user action</td><td colspan="2">Check if the key is within the detection area of the vehicle cabin
If key is within the vehicle interior, built-in battery may be depleted
If wireless door lock switch on key is pressed, check if indicator on key illuminates
If indicator does not illuminate, replace the built-in battery
It is recommended that battery be bought at dealer, but battery can be replaced according to user preference</td></tr>
</table>

h. Situation G:
Key lock-in prevention function buzzer (for cabin)

i. With key in vehicle cabin, vehicle is exited and door handle lock switch is pressed in an attempt to perform entry lock operation

<table>
<tr><td colspan="4">Reason for warning: Key reminder vehicle theft warning prevention</td></tr>
<tr><td colspan="4">Warning condition: Engine switch off, all doors closed, door handle lock switch on and key is detected in vehicle interior</td></tr>
<tr><td rowspan="4">Warning description</td><td>Combination meter buzzer</td><td>Multi-buzzer</td><td>None</td></tr>
<tr><td rowspan="2">Combination meter display</td><td>Combination meter information</td><td>None</td></tr>
<tr><td>Telltale</td><td>None</td></tr>
<tr><td>Wireless buzzer</td><td colspan="2">Sounds for 2 seconds (long beep)*

HINT:

*: except China</td></tr>
<tr><td colspan="2">Recommended user action</td><td colspan="2">Pick up key that is in vehicle interior and perform entry lock operation again</td></tr>
</table>

i. Situation H:
Key battery low warning

i. Key with almost depleted battery is used to drive vehicle

Reason for warning: Helpful function			
Warning condition: After engine switch not off condition continues for 20 minutes or more, engine switch is changed from not off to off, key battery is low and key is detected in vehicle interior			
Warning description	Combination meter buzzer	Multi-buzzer	Sound once (1 "pon" sound)
	Combination meter display	Combination meter information	"Low Key Battery" - "Have your vehicle checked by a dealer"
		Telltale	None
	Wireless buzzer	None	
Recommended user action		Replace key built-in battery with new one It is recommended that battery be bought at dealer, but battery can be replaced according to user preference	

BATTERY SAVING

a. Vehicle battery saving function:
In the entry and start system, signals are emitted outside of the vehicle at a prescribed interval (0.25 seconds) when the doors are locked. Therefore, the vehicle battery could be drained if the vehicle remains parked for a long time. For this reason, the controls listed below exist.

Condition	Control
Both conditions below are met for 10 days: • Key is not in detection area • Touch sensor or lock switch operation is not performed	Signal transmission interval is extended from 0.25 to 0.75 seconds
Both conditions below are met for 15 days: • Key is not in detection area • Touch sensor or lock switch operation is not performed	Signal transmission interval is extended from 0.75 to 2.25 seconds
Both conditions below are met for 30 days: • Key is not in detection area • Touch sensor or lock switch operation is not performed	Automatically deactivates the entry and start system

Reinstatement Conditions:

- A wireless door lock control signal (lock, unlock) is input and the ID matches.
- A user carries the key and pushes a lock switch on an outside door handle.
- The driver door is locked or unlocked by the mechanical key.

b. Key battery and vehicle battery saving function:
In the entry and start system, if the key is constantly located within the vehicle exterior detection area of the doors, the system maintains periodic communication with the key. Therefore, if the vehicle remains parked in that state for a long time, the key battery and the vehicle battery could be drained. For this reason, if this state continues for more than 10 minutes, the entry and start system automatically becomes deactivated.
Reinstatement Conditions:

- A wireless door lock control signal (lock, unlock) is input and the ID code matches.
- A user carries the key and pushes a lock switch on an outside handle.
- The driver door is locked or unlocked by the mechanical key.

KEY DIAGNOSTIC MODE (Using the intelligent tester)

HINT:

Key diagnostic mode checks if the electrical key transmitter within a selected oscillator/antenna detection area is operating normally. The results are output through the wireless door lock buzzer (in the right front fender).

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Entry & Start / Key Communication Check.

e. Check the values by referring to the table below.

Entry & Start

Tester Display	Inspection Range

Overhead + Driver Side [*1]	Door electrical key oscillator (for Driver Side)
Overhead + Passenger Side [*2]	Door electrical key oscillator (for Front Passenger Side)
Overhead + Driver Side Rear [*3]*	Door electrical key oscillator (for Driver Side Rear)
Overhead + Passenger Side Rear [*4]*	Door electrical key oscillator (for Passenger Side Rear)
Overhead + Front Room [*5]	Indoor electrical key antenna (for Front Floor)
Overhead + Rear 1 Room [*6]	Indoor electrical key antenna (for Rear 1 Floor)
Overhead + Back Door (inside) [*7]	Indoor electrical key antenna (for Rear 2 Floor)
Overhead + Back Door (outside) [*8]	Back door electrical key antenna (for Outer)

HINT:

*: For vehicles with entry function for rear doors.

f. When the electrical key transmitter is brought near the selected oscillator/antenna, check that the wireless door lock buzzer sounds.

i. *1: Door electrical key oscillator (for Driver Side)

HINT:

- **Hold the key at the same height as the door outside handle (0.7 to 1.0 m (2.30 to 3.28 ft.)). Pay attention to the direction of the key in the illustration.**
- ***2: Perform the same inspection above for the door electrical key oscillator (front passenger seat outside transmitter).**
- ***3: Perform the same inspection above for the door electrical key oscillator (driver side rear seat outside transmitter).**
- ***4: Perform the same inspection above for the door electrical key oscillator (passenger side rear seat outside transmitter).**

ii. *5: Indoor electrical key antenna (front inside transmitter)

HINT:

Place the electrical key transmitter on the driver or front passenger seat cushion.

iii. *6: Indoor electrical key antenna (rear 1 inside transmitter)


HINT:

Place the electrical key transmitter on the rear 1 seat cushion.

iv. *7: Indoor electrical key antenna (for rear 2 inside transmitter)

HINT:


Place the electrical key transmitter on the rear 2 seat cushion.

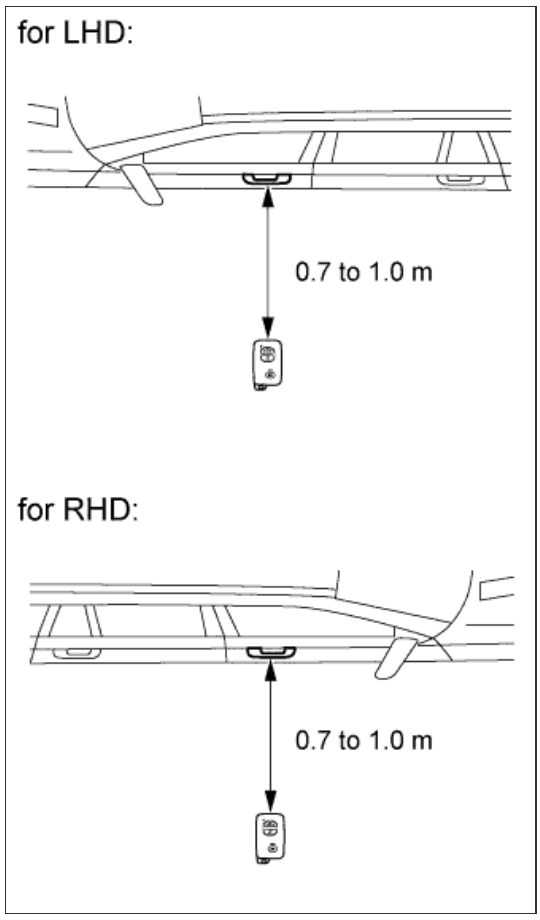

v. *8: Back door electrical key antenna (for Outer)

HINT:

Hold the electrical key transmitter at the same height as the rear bumper upper surface and aligned with the center of the rear of the vehicle, as shown in the illustration.

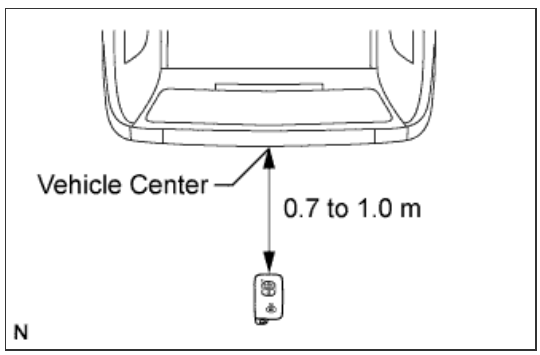

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the entry and start system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.INSPECT COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B. Go to CAN COMMUNICATION SYSTEM (Click here)

C. Go to CAN COMMUNICATION SYSTEM (Click here)

A

4.INSPECT COMMUNICATION FUNCTION OF LIN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the LIN communication system is functioning normally.

Result

Result	Proceed to
LIN DTC is not output	A
LIN DTC is output	B

B. Go to LIN COMMUNICATION SYSTEM (Click here)

A

5.CHECK FOR DTC*

a. Check for DTCs. Based on the DTCs output, try to cause the output of the same steering lock system DTC or engine immobiliser system DTC by simulating the symptoms indicated by the DTC.

Result

Result	Proceed to
DTC is not output	A
Steering lock system DTC is output	B
Engine immobiliser system DTC is output	C

B. Go to STEERING LOCK SYSTEM (Click here)

C. Go to ENGINE IMMOBILISER SYSTEM (Click here)

A

6.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. Go to step 8

A

7.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Operation Check (Click here)

b. Data List / Active Test (Click here)

c. Terminals of ECU (Click here)

NEXT

8.REPAIR OR REPLACEMENT

NEXT

9.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the entry and start system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.INSPECT COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B. Go to CAN COMMUNICATION SYSTEM (Click here)

C. Go to CAN COMMUNICATION SYSTEM (Click here)

A

4.INSPECT COMMUNICATION FUNCTION OF LIN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the LIN communication system is functioning normally.

Result

Result	Proceed to
LIN DTC is not output	A
LIN DTC is output	B

B. Go to LIN COMMUNICATION SYSTEM (Click here)

A

5.CHECK FOR DTC*

a. Check for DTCs. Based on the DTCs output, try to cause the output of the same steering lock system DTC or engine immobiliser system DTC by simulating the symptoms indicated by the DTC.

Result

Result	Proceed to
DTC is not output	A
Steering lock system DTC is output	B
Engine immobiliser system DTC is output	C

B. Go to STEERING LOCK SYSTEM (Click here)

C. Go to ENGINE IMMOBILISER SYSTEM (Click here)

A

6.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. Go to step 8

A

7.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Operation Check (Click here)

b. Data List / Active Test (Click here)

c. Terminals of ECU (Click here)

NEXT

8.REPAIR OR REPLACEMENT

NEXT

9.CONFIRMATION TEST

NEXT

END

for Preparation Click here

ENTRY AND START SYSTEM OPERATION INSPECTION

a. Check the entry unlock function.

i. Use the wireless lock operation to lock the doors. With the key in your possession, touch a door outside handle (touch sensor) and check that the door unlocks.


b. Check the entry unlock operation detection area.

i. Step 1: Hold the key at the same height as the door outside handle (approximately 0.8 m (2.62 ft.)). Pay attention to the direction of the key in the illustration.

ii. Step 2: Check that when the key is brought within 0.7 to 1.0 m (2.30 to 3.28 ft.) of the vehicle, the system enters unlock standby mode.

HINT:

Unlock standby mode is signified by the red LED of the key illuminating.

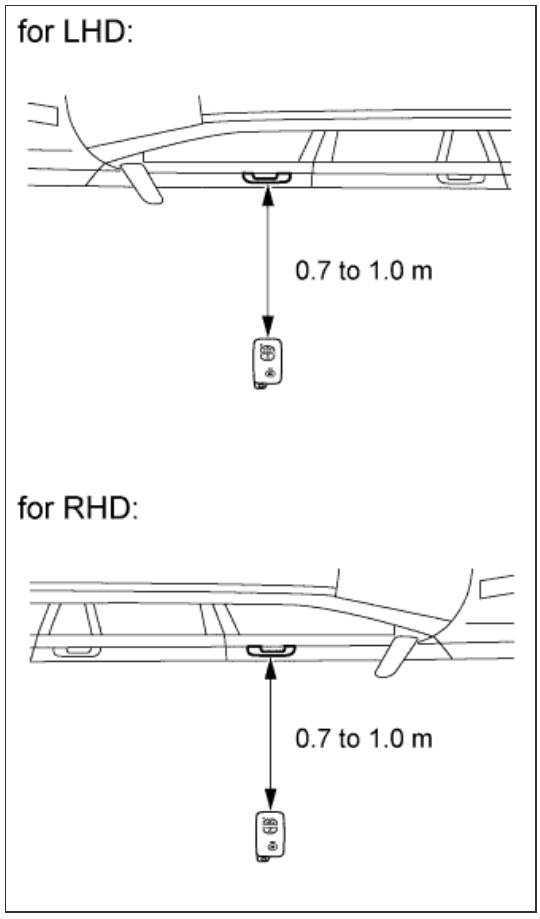


iii. Step 3: After the system enters unlock standby mode, touch the sensor on the outside handle within 3 seconds. Check that the door unlocks.

NOTICE:

The key may not be able to communicate with the system within a 0.2 m (0.656 ft.) radius of each outside handle.

iv. Step 4: Repeat step 2 and step 3 for the remaining doors.

v. Step 5: Inspect the door electrical key oscillator response sensitivity. Wear protective gloves, set the system to unlock standby mode, and check that touching the inner side of the outside handle (the

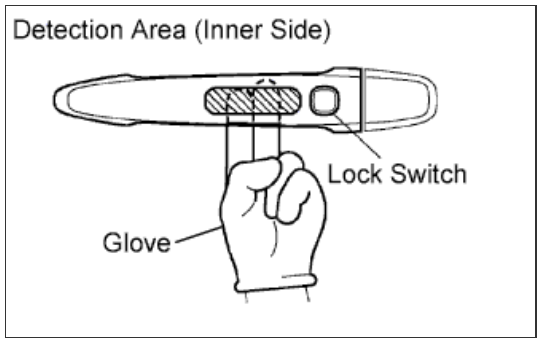

highlighted area in the illustration) with your finger causes the door to unlock.

NOTICE:

When touching the highlighted area, tapping too quickly or having extended contact may not trigger the sensor. In such a case, the door will not unlock.

vi. Step 6: Repeat step 5 for the remaining doors*.

HINT:

*: For vehicles with entry function for rear doors.

c. Check the entry lock function.


i. Step 1: Close all of the vehicle doors. With the key in your possession outside of the vehicle, check that pressing the lock switch locks the doors.

HINT:

- **When pressing the lock switch, hold the electrical key transmitter about 1 m (3.28 ft.) above the ground and about 0.3 m (0.984 ft.) away from the vehicle as shown in the illustration.**
- **Due to the key being unable to communicate with the system within a 0.2 m (0.656 ft.) distance from the outside handle, do not press the lock switch with the same hand that is holding the key. The doors may not lock.**
- **If the key lock-in prevention function buzzer sounds*, radio waves from the indoor electrical key antenna may be leaking from the vehicle.**

HINT:

*: except China

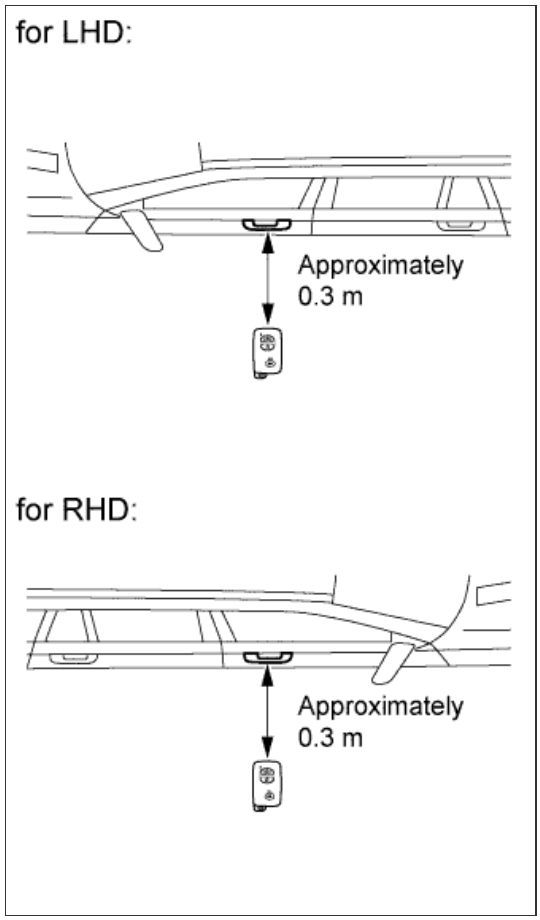


ii. Step 2: Repeat step 1 for the remaining doors.

d. Check the entry back door unlatch function.


i. Close all the doors and the back door. With the key in your possession, check that pressing the back door opener switch unlocks all the doors and unlatches the back door.

ii. Inspect the detection area of the entry back door open operation. Hold the key at the same height as the back door opener switch (approximately 0.8 m (2.62 ft.)) and aligned with the center of the rear of the vehicle. Pay attention to the direction of the key shown in the illustration. Check that the when the key is brought within 0.7 to 1.0 m (2.30 to 3.28 ft.) of the vehicle, pressing the back door opener switch unlocks all the doors and unlatches the back door.

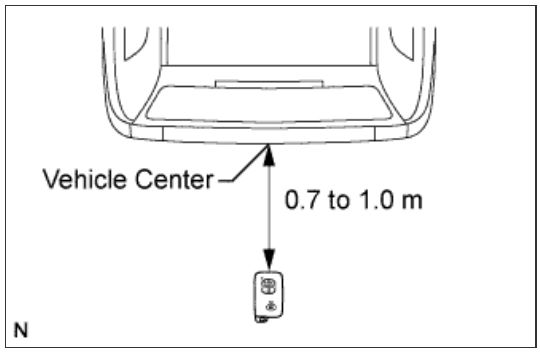

e. Check the entry back door lock function.

i. Step 1: Close all of the vehicle doors. With the key in your possession outside of the vehicle, check that pressing the back door lock switch locks all the doors.

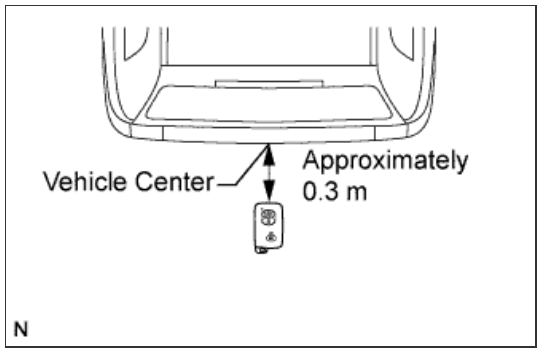

HINT:

- **When pressing the lock switch, hold the electrical key transmitter about 1 m (3.28 ft.) above the ground and about 0.3 m (0.984 ft.) away from the vehicle as shown in the illustration.**
- **Due to the key being unable to communicate with the system within a 0.2 m (0.656 ft.) distance from the center of the rear of the vehicle, do not press the lock switch with the same hand that is holding the key. The doors may not lock.**
- **If the key lock-in prevention function buzzer sounds, radio waves from the indoor electrical key antenna may be leaking from the vehicle.**

f. Check the entry ignition function.

i. When the engine control system is off: With the key in your possession and the brake pedal depressed, check that pressing the engine switch releases the steering wheel lock and starts the engine control system.

HINT:


- **The engine control system can be started only when the engine switch indicator illumination in green.**
- **Even when not depressing the brake pedal, continually pressing the engine switch for 15 seconds when the engine switch is on (ACC) can start the engine control system.**

ii. When the engine control system is running: With the key in your possession, check that pressing the engine switch stops the engine control system and activates the steering wheel lock.

HINT:

The shift lever must be in P to be able to stop the engine control system.


iii. Inspect the detection area of the entry ignition operation (front seat). Pay attention to the direction of the key in the illustration. When the key is in either of the 2 locations in the illustration, check that the engine control system can start.

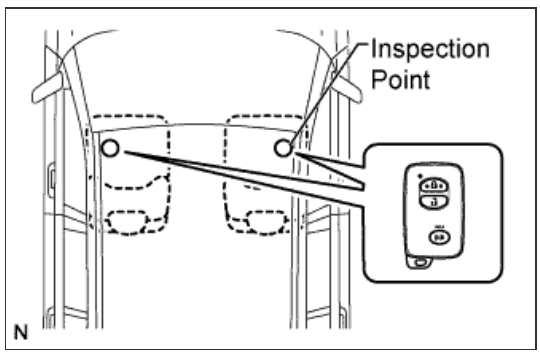

NOTICE:

The engine control system cannot be started when the key is on the instrument panel or rear package tray, or in the glove box.


iv. Inspect the detection area of the entry ignition operation (rear 1 seat). Pay attention to the direction of the key in the illustration. When the key is in either of the 2 locations in the illustration, check that the engine control system can start.

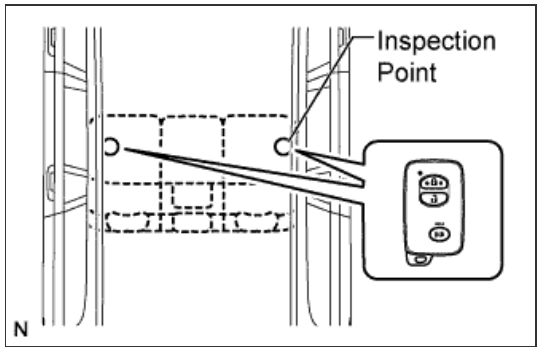

NOTICE:

The engine control system cannot be started when the key is on the instrument panel or rear package tray, or in the glove box.

v. Inspect the detection area of the entry ignition operation (rear 2 seat). Pay attention to the direction of the key in the illustration. When the key is in either of the 2 locations in the illustration, check that the engine control system can start.

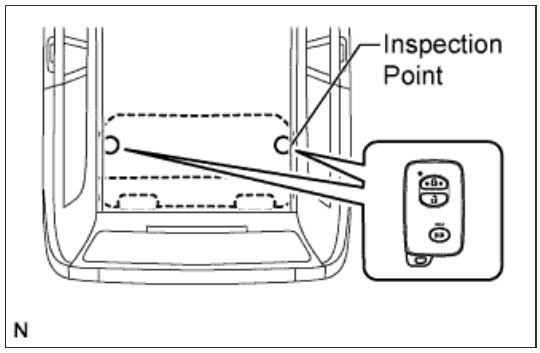

NOTICE:

The engine control system cannot be started when the key is on the instrument panel or rear package tray, or in the glove box.

g. Check the key lock-in prevention function.

NOTICE:

To prevent key lock-in, perform the inspection with one of the door windows open.

i. Place the key in the vehicle with all doors locked. Check that, when all the doors are locked through keyless operation (move the lock knob to the lock position and then close the door), the wireless buzzer sounds* for seconds and all the doors are unlocked.

HINT:

*: except China

NOTICE:

If the key in inside a metal storage item, such as a metal briefcase or metal box, the key will not be able to be detected by the system.

h. Check the key cancel function.

i. While the engine switch is on (IG), check that the back door opener switch is the only switch in the entry and start system that can be operated.

ii. While the key cancel function (entry and start system cancel function) is on, check that all functions in the entry and start system cannot be operated.

i. Check the answer-back function (hazard warning light flashing and buzzer sounding).

Entry Operation	Hazard Warning Light	Buzzer*
Entry Door Lock	Flashes once	Sounds once
Entry Door Unlock	Flashes twice	Sounds twice
Entry Back Door Open	Flashes twice	Sounds twice

HINT:

*: except Europe and China

j. Check that the key reminder warning buzzer sounds.

i. Carry the key in the vehicle and close the driver side door. Then turn the engine switch off or on (ACC).

ii. Open the driver side door and check that the buzzer sounds intermittently.

k. Check that the key reminder warning buzzer stops.

i. When the buzzer is sounding, check that the buzzer stops sounding if either of the following are performed:

- Close the driver side door (front door courtesy light switch is off).
- Turn the engine switch on (IG).

for Preparation Click here

CUSTOMIZING FUNCTION WITH INTELLIGENT TESTER

HINT:

The following items can be customized.

NOTICE:

- **When the customer requests a change in a function, first make sure that the function can be customized.**
- **Be sure to make a note of the current setting before customizing.**
- **When troubleshooting a function, first make sure that the function is set to the default setting.**

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Customize Setting.

e. Select the setting by referring to the table below.

Entry & Start

Display	Default	Contents	Setting
Ignition Area (Entry ignition available area)	ALL	Function to choose the available area for the key to start the engine and cancel the steering lock.	FRONT/ALL*
Park Wait Time (Waiting time to permit unlocking door after locking)	2.5s	Function that sets the waiting time to permit unlocking the door after the door is locked with the entry lock function.	0.5s/1.5s/2.5s/5s
Back Door Opening Operation (Back door open mode when vehicle is locked)	LONG	Back door opening the operation.	LONG/TWICE/OFF

Warning

Display	Default	Contents	Setting
Passenger Take Key	ON	Warn a key is taken out by fellow passengers	ON/OFF
Key Low Battery Warning (Warn when key battery becomes weak)	ON	Function that warns the driver that the key battery power is low.	ON/OFF
Key Out Range Warning	ON	Warn Starting E/G when the key is out of range	ON/OFF

HINT:

*: "FRONT" means front, and "ALL" means front, rear 1 and rear 2.

ENTRY UNLOCK MODE SWITCHING FUNCTION

a. To use the entry unlock mode switching function, make sure the engine switch is off and simultaneously press and hold the lock switch on the key and another key switch for 5 seconds.

When the switches are pressed and held for 5 seconds, the entry door unlock mode changes in the following order: all door unlock mode, driver door unlock mode.

NOTICE:

After pressing and holding the switches for 5 seconds, wait 5 seconds before performing the same procedure again.

- All door unlock mode (default):
  When a touch sensor is touched, all doors unlock.
- Driver door unlock mode:
  When the driver door touch sensor is touched, only the driver door unlocks. When another touch sensor is touched, all doors unlock.


b. The certification ECU (smart key ECU assembly) receives this signal from the door control receiver and changes the entry and start system to the entry unlock mode.

c. The certification ECU (smart key ECU assembly) sounds the wireless door lock

buzzer and combination meter buzzer to inform the user that the mode has been switched.

HINT:

The function only changes the entry unlock mode of the entry and start system. It does not switch the unlocking of the wireless door lock control.

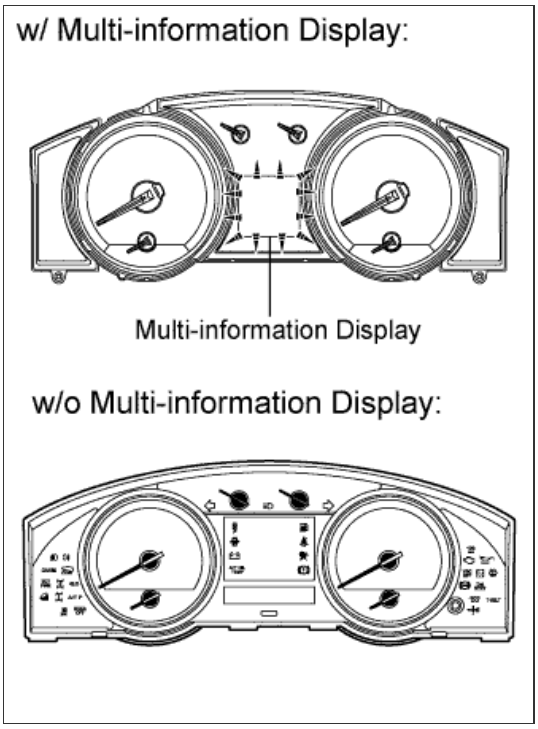


- All door unlock mode:

Mode		All Doors (Default)
Wireless Door Lock Buzzer*1		ON / OFF — Sounds 2 times
Combination Meter	Multi-information Display*2	Displayed for 4 seconds
	Buzzer	Sounds once

HINT:

- ***1: except China.**
- ***2: For vehicles with the multi-information display.**

- Driver door unlock mode:

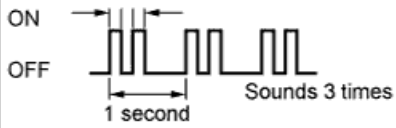Mode		Driver Door (Customized)
Wireless Door Lock Buzzer*1		Each interval approximately 0.13 seconds 
Combination Meter	Multi-information Display*2	 Displayed for 4 seconds
	Buzzer	Sounds once

HINT:

- ***1: except China.**
- ***2: For vehicles with the multi-information display.**
- **The above illustration is for LHD vehicles. For RHD vehicles, the left side and right side are reversed.**

KEY CANCEL

The key cancel operation disables the following functions:

- Entry Unlock/Lock
- Key Lock-in Prevention
- Memory Call
- Entry Back Door Open
- Warning
- Entry Ignition

a. The operation procedures are as follows:
Precondition:
Engine switch off, driver side door closed and unlocked.

i. Unlock the driver side door once with the unlock switch of the key.

ii. Open the driver door within 5 seconds.

iii. Unlock the driver side door twice with the unlock switch of the key within 5 seconds.

iv. Perform close → open twice for the driver door within 30 seconds.
(Driver door: Open condition → Close → Open → Close → Open)

v. Unlock the driver side door twice with the unlock switch of the key within 5 seconds.

vi. Perform close → open once for the driver door within 30 seconds.
(Driver door: Open condition → Close → Open)

vii. Close the driver door within 5 seconds.
When key cancel is activated, the wireless door lock buzzer sounds twice.
To return to the original condition, perform the procedures again. When the original condition is returned, the wireless door lock buzzer sounds once.

WIRELESS BUZZER VOLUME ADJUSTMENT (Click here).

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to this system before inspecting the suspected areas below.**

Entry and Start System

Symptom	Suspected Area	See page
Entry Answer-back Buzzer does not Sound	Wireless door lock control system	Click here
	Certification ECU (Smart key ECU assembly)	-
All Door Entry Lock/Unlock Functions and Wireless Functions do not Operate	Power door lock control system	Click here
	Door control transmitter	-
	Transmitter battery	-
	Fuse (IMB)	-
	Harness or connector	-
	Door control receiver	-
	Certification ECU (Smart key ECU assembly)	-
All Door Entry Lock/Unlock Functions do not Operate, but Wireless Functions Operate	Door control transmitter	Click here
	Certification ECU (Smart key ECU assembly)	-
Driver Side Door Entry Unlock Function does not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Driver side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Front Passenger Side Door Entry Unlock Function does not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Front passenger side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Rear Door LH Entry Unlock Function does not Operate*	Power door lock control system	Click here
	Door electrical key oscillator	-
	Rear door outside handle assembly LH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Rear Door RH Entry Unlock Function does not Operate*	Power door lock control system	Click here
	Door electrical key oscillator	-
	Rear door outside handle assembly RH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Driver Side Door Entry Lock and Unlock Functions do not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Driver side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Front Passenger Side Door Entry Lock and Unlock Functions do not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Front passenger side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
	Power door lock control system	Click here

Rear Door LH Entry Lock and Unlock Functions do not Operate*	Door electrical key oscillator	-
	Rear door outside handle assembly LH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Rear Door RH Entry Lock and Unlock Functions do not Operate*	Power door lock control system	Click here
	Door electrical key oscillator	-
	Rear door outside handle assembly RH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Driver Side Door Entry Lock Function does not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Driver side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Front Passenger Side Door Entry Lock Function does not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Front passenger side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Rear Door LH Entry Lock Function does not Operate*	Power door lock control system	Click here
	Door electrical key oscillator	-
	Rear door outside handle assembly LH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Rear Door RH Entry Lock Function does not Operate*	Power door lock control system	Click here
	Door electrical key oscillator	-
	Rear door outside handle assembly RH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Room Oscillator does not Recognize Key	Indoor electrical key antenna (for front floor)	Click here
	Indoor electrical key antenna (for rear 1 floor)	-
	Indoor electrical key antenna (for rear 2 floor)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
	Door control transmitter	-
Entry Interior Alarm does not Sound	Combination meter	Click here
	Certification ECU (Smart key ECU assembly)	-
Back Door Entry Unlock Function does not Operate	Power door lock control system	Click here
	Back door opener switch	-
	Back door electrical key antenna (for outer)	-
	Main body ECU	-
	Harness or connector	-
	Certification ECU (Smart key ECU assembly)	-
Back Door Entry Lock and Unlock Functions do not Operate	Power door lock control system	Click here
	Back door opener switch	-
	Back door electrical key antenna (for outer)	-
	Main body ECU	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Back Door Entry Lock Function does not Operate	Power door lock control system	Click here
	Back door electrical key antenna (for outer)	-
	Certification ECU (Smart key ECU assembly)	-
	Main body ECU	-
	Harness or connector	-

HINT:

For vehicles with entry function for rear doors.

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to this system before inspecting the suspected areas below.**

Entry and Start System

Symptom	Suspected Area	See page
Entry Answer-back Buzzer does not Sound	Wireless door lock control system	Click here
	Certification ECU (Smart key ECU assembly)	-
All Door Entry Lock/Unlock Functions and Wireless Functions do not Operate	Power door lock control system	Click here
	Door control transmitter	-
	Transmitter battery	-
	Fuse (IMB)	-
	Harness or connector	-
	Door control receiver	-
	Certification ECU (Smart key ECU assembly)	-
All Door Entry Lock/Unlock Functions do not Operate, but Wireless Functions Operate	Door control transmitter	Click here
	Certification ECU (Smart key ECU assembly)	-
Driver Side Door Entry Unlock Function does not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Driver side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Front Passenger Side Door Entry Unlock Function does not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Front passenger side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Rear Door LH Entry Unlock Function does not Operate*	Power door lock control system	Click here
	Door electrical key oscillator	-
	Rear door outside handle assembly LH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Rear Door RH Entry Unlock Function does not Operate*	Power door lock control system	Click here
	Door electrical key oscillator	-
	Rear door outside handle assembly RH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Driver Side Door Entry Lock and Unlock Functions do not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Driver side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Front Passenger Side Door Entry Lock and Unlock Functions do not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Front passenger side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
	Power door lock control system	Click here


Rear Door LH Entry Lock and Unlock Functions do not Operate*	Door electrical key oscillator	-
	Rear door outside handle assembly LH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Rear Door RH Entry Lock and Unlock Functions do not Operate*	Power door lock control system	Click here
	Door electrical key oscillator	-
	Rear door outside handle assembly RH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Driver Side Door Entry Lock Function does not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Driver side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Front Passenger Side Door Entry Lock Function does not Operate	Power door lock control system	Click here
	Door electrical key oscillator	-
	Door outside handle assembly (for Front passenger side)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Rear Door LH Entry Lock Function does not Operate*	Power door lock control system	Click here
	Door electrical key oscillator	-
	Rear door outside handle assembly LH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Rear Door RH Entry Lock Function does not Operate*	Power door lock control system	Click here
	Door electrical key oscillator	-
	Rear door outside handle assembly RH	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Room Oscillator does not Recognize Key	Indoor electrical key antenna (for front floor)	Click here
	Indoor electrical key antenna (for rear 1 floor)	-
	Indoor electrical key antenna (for rear 2 floor)	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
	Door control transmitter	-
Entry Interior Alarm does not Sound	Combination meter	Click here
	Certification ECU (Smart key ECU assembly)	-
Back Door Entry Unlock Function does not Operate	Power door lock control system	Click here
	Back door opener switch	-
	Back door electrical key antenna (for outer)	-
	Main body ECU	-
	Harness or connector	-
	Certification ECU (Smart key ECU assembly)	-
Back Door Entry Lock and Unlock Functions do not Operate	Power door lock control system	Click here
	Back door opener switch	-
	Back door electrical key antenna (for outer)	-
	Main body ECU	-
	Certification ECU (Smart key ECU assembly)	-
	Harness or connector	-
Back Door Entry Lock Function does not Operate	Power door lock control system	Click here
	Back door electrical key antenna (for outer)	-
	Certification ECU (Smart key ECU assembly)	-
	Main body ECU	-
	Harness or connector	-

HINT:

For vehicles with entry function for rear doors.

for Preparation Click here

CHECK CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

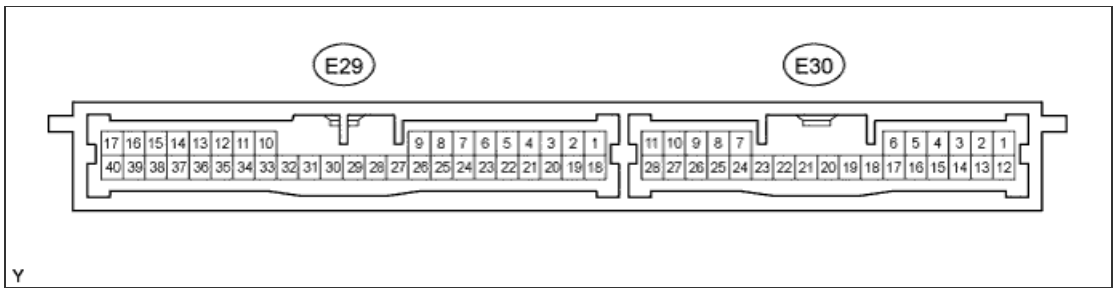

a. Disconnect the E29 ECU connector.

b. Measure the resistance and voltage of the wire harness side connector.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29-17 (E) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E29-1 (+B) - Body ground	B - Body ground	+B power supply	Always	11 to 14 V
E29-18 (IG) - Body ground	B - Body ground	Ignition power supply	Engine switch off	Below 1 V
			Engine switch on (IG)	11 to 14 V
E29-3 (TSW1) - E29-17 (E)	G - W-B	Door outside handle (driver side) lock switch signal	Switch released	10 kΩ or higher
			Switch pressed in	Below 1 Ω
E29-4 (TSW2) - E29-17 (E)	BR - W-B	Door outside handle (front passenger side) lock switch signal	Switch released	10 kΩ or higher
			Switch pressed in	Below 1 Ω
E30-25 (TSW3) - E29-17 (E)*3	G - W-B	• Door outside handle (rear LH) lock switch signal*1 • Door outside handle (rear RH) lock switch signal*2	Switch released	10 kΩ or higher
			Switch pressed in	Below 1 Ω
E30-26 (TSW4) - E29-17 (E)*3	G - W-B	• Door outside handle (rear RH) lock switch signal*1 • Door outside handle (rear LH) lock switch signal*2	Switch released	10 kΩ or higher
			Switch pressed in	Below 1 Ω
E29-7 (TSW5) - E29-17 (E)	L - W-B	Back door lock switch signal	Switch released	10 kΩ or higher
			Switch pressed in	Below 1 Ω
E29-10 (LIN) - E29-17 (E)	GR - W-B	LIN line	Always	10 kΩ or higher
E29-27 (CANH) - E29-17 (E)	LG - W-B	CAN line	Always	10 kΩ or higher
E29-28 (CANL) - E29-17 (E)	R - W-B	CAN line	Always	10 kΩ or higher

HINT:

- ***1: for LHD**
- ***2: for RHD**

- ***3: For vehicles with entry function for rear doors.**

  If the result is not as specified, the wire harness side may have a malfunction.

c. Reconnect the E29 ECU connector.

d. Measure the voltage of the connector.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29-33 (CLG1) - E29-34 (CG1B)	L - W	Door electrical key oscillator (driver side) sensor signal	All doors closed, all doors locked and engine switch off	Alternating between 5 V and below 1 V
			Door unlocked or door open	Below 1 V
E29-22 (SEN1) - E29-17 (E)	R - W-B	Touch sensor detection signal	Door outside handle touched	11 to 14 V
			Door outside handle not touched	Below 1 V
E29-5 (SEL1) - E29-17 (E)	Y - W-B	Touch sensor activation control signal	Key at least 5 m (16.4 ft.) away from door	11 to 14 V
			Key moved near outside door handle	Below 1 V
E29-35 (CLG2) - E29-36 (CG2B)	L - R	Door electrical key oscillator (front passenger side) sensor signal	All doors closed, all doors locked and engine switch off	Alternating between 5 V and below 1 V
			Door unlocked or door open	Below 1 V
E29-23 (SEN2) - E29-17 (E)	R - W-B	Touch sensor detection signal	Door outside handle touched	11 to 14 V
			Door outside handle not touched	Below 1 V
E29-6 (SEL2) - E29-17 (E)	Y - W-B	Touch sensor activation control signal	Key at least 5 m (16.4 ft.) away from door	11 to 14 V
			Key moved near outside door handle	Below 1 V
E30-8 (CLG3) - E30-9 (CG3B)*3	L - W	• Door electrical key oscillator (rear LH) sensor signal*1 • Door electrical key oscillator (rear RH) sensor signal*2	All doors closed, all doors locked and engine switch off	Alternating between 5 V and below 1 V
			Door unlocked or door open	Below 1 V
E30-28 (SEN3) - E29-17 (E)*3	R - W-B	Touch sensor detection signal	Door outside handle touched	11 to 14 V
			Door outside handle not touched	Below 1 V
E30-1 (SEL3) - E29-17 (E)*3	Y - W-B	Touch sensor activation control signal	Key at least 5 m (16.4 ft.) away from door	11 to 14 V
			Key moved near outside door handle	Below 1 V
E30-10 (CLG4) - E30-11 (CG4B)*3	L - W	• Door electrical key oscillator (rear RH) sensor signal*1 • Door electrical key oscillator (rear LH) sensor signal*2	All doors closed, all doors locked and engine switch off	Alternating between 5 V and below 1 V
			Door unlocked or door open	Below 1 V


E30-27 (SEN4) - E29-17 (E)*3	R - W-B	Touch sensor detection signal	Door outside handle touched	11 to 14 V
			Door outside handle not touched	Below 1 V
E30-2 (SEL4) - E29-17 (E)*3	Y - W-B	Touch sensor activation control signal	Key at least 5 m (16.4 ft.) away from door	11 to 14 V
			Key moved near outside door handle	Below 1 V
E29-11 (CLG5) - E29-12 (CG5B)	SB - V	Indoor electrical key antenna (for front) sensor signal	30 seconds after driver side door opened and closed, engine switch off	Alternating between 5 V and below 1 V
			Within 30 seconds after driver side door opened and closed, engine switch off	Below 1 V
E29-13 (CLG6) - E29-14 (CG6B)	R - SB	Indoor electrical key antenna (for rear 1) sensor signal	30 seconds after driver side door opened and closed, engine switch off	Alternating between 5 V and below 1 V
			Within 30 seconds after driver side door opened and closed, engine switch off	Below 1 V
E29-15 (CLG7) - E29-16 (CG7B)	GR - W	Indoor electrical key antenna (for rear 2) sensor signal	30 seconds after driver side door opened and closed, engine switch off	Alternating between 5 V and below 1 V
			Within 30 seconds after driver side door opened and closed, engine switch off	Below 1 V
E29-31 (CLG8) - E29-32 (CG8B)	G - GR	Back door electrical key antenna (for outer) sensor signal	Back door opener switch off	Alternating between 5 V and below 1 V
			Back door opener switch on	Below 1 V
E29-29 (RCO) - E29-17 (E)	B - W-B	Door control receiver power source	Engine switch off, all doors closed and transmitter switch not pressed → pressed	Below 1 V → 4.6 to 5.4 V → Below 1 V
E29-39 (RSSI) - E29-17 (E)	L - W-B	Door control receiver electric wave existence signal	Engine switch off, all doors closed and transmitter switch not pressed → pressed	11 to 14 V → Below 1 V
E29-38 (RDA) - E29-17 (E)	LG - W-B	Door control receiver data input signal	Engine switch off, all doors closed and transmitter switch not pressed → pressed	Below 1 V → 11 to 14 V → Below 1 V
E29-21 (BZR) - E29-17 (E)	LG - W-B	Wireless door lock buzzer signal	Answer-back on	Pulse generation
			Answer-back off	Below 1 V

HINT:

- ***1: for LHD**
- ***2: for RHD**
- ***3: For vehicles with entry function for rear doors.**

If the result is not as specified, the ECU may have a malfunction.

CHECK MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

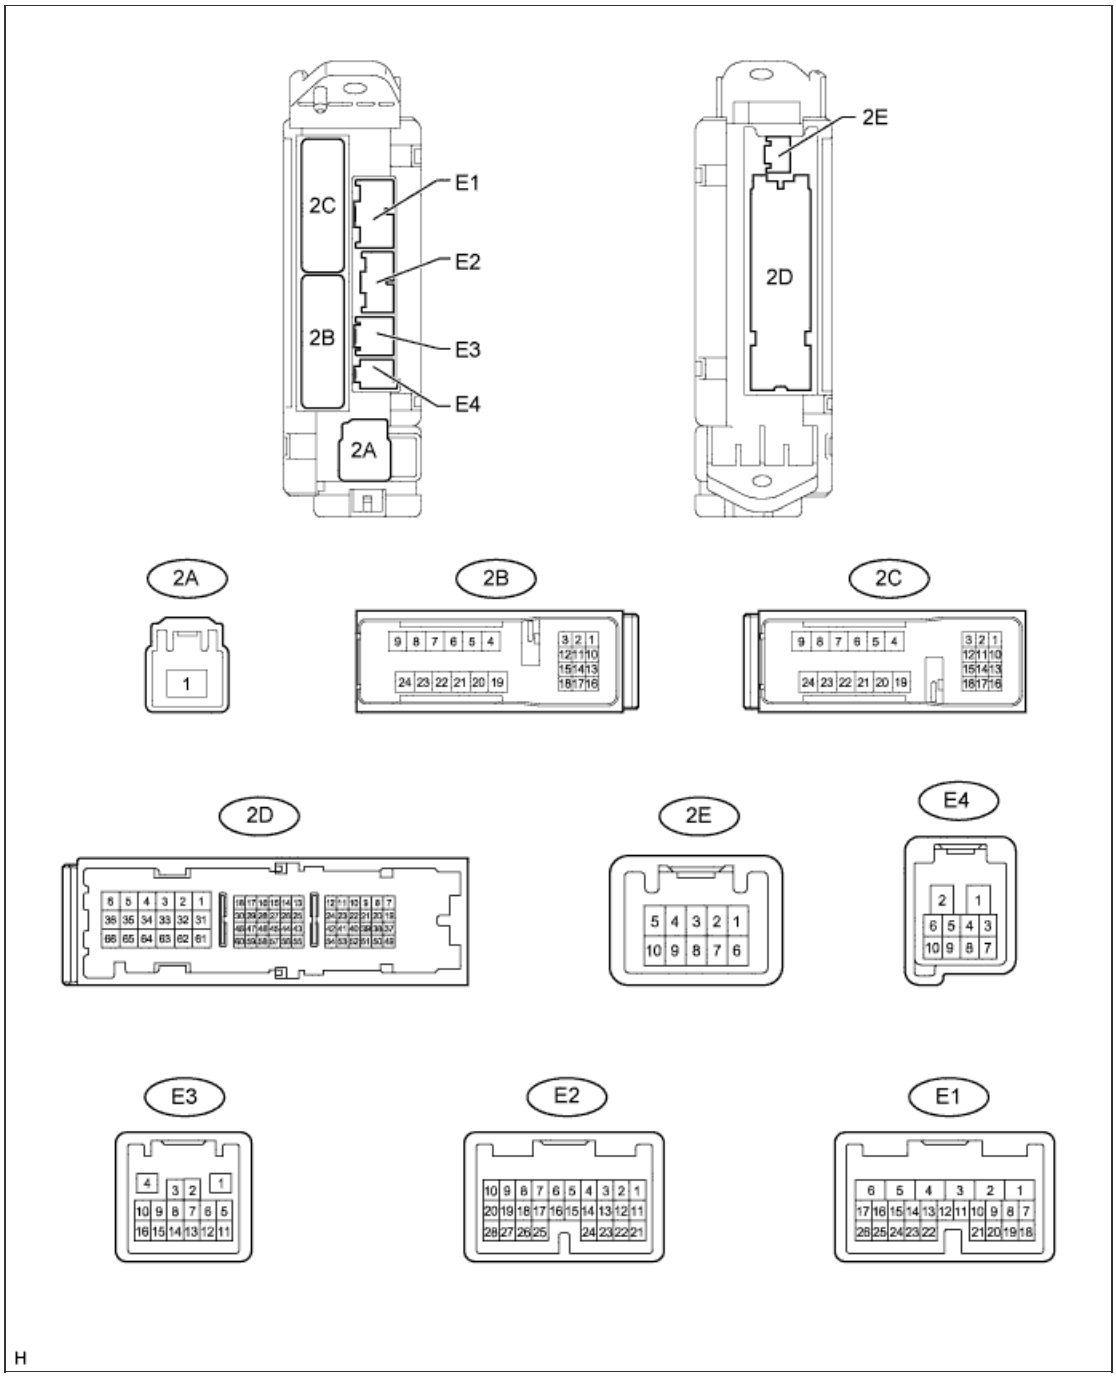

a. Disconnect the E1, E2, E3, 2A, 2B and 2D ECU connectors.

b. Measure the resistance and voltage of the wire harness side connectors.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
2D-62 (GND2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E3-1 (GND3) - Body ground	BR - Body ground	Ground	Always	Below 1 Ω
2A-1 (ALTB) - Body ground	B - Body ground	ALTB power supply	Always	11 to 14 V
2B-20 (BATB) - Body ground	L - Body ground	BATB power supply	Always	11 to 14 V
E1-6 (AM1) - Body ground	W - Body ground	AM1 power supply	Always	11 to 14 V
E2-1 (AM2) - Body ground	W - Body ground	AM2 power supply	Always	11 to 14 V
2D-7 (IG) - Body ground	G - Body ground	IG1 signal	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V
2D-8 (ACC) - Body ground	GR - Body ground	ACC signal	Engine switch on (ACC)	11 to 14 V
			Engine switch off	Below 1 V

E3-5 (CANH) - Body ground	SB - Body ground	CAN communication line	Always	10 kΩ or higher
E3-6 (CANL) - Body ground	B - Body ground	CAN communication line	Always	10 kΩ or higher
E3-15 (CANN) - Body ground	R - Body ground	CAN communication line	Always	10 kΩ or higher
E3-16 (CANP) - Body ground	GR - Body ground	CAN communication line	Always	10 kΩ or higher
2B-20 (LIN1) - Body ground	GR - Body ground	LIN communication line	Always	10 kΩ or higher
E3-10 (LIN2) - Body ground	G - Body ground	LIN communication line	Always	10 kΩ or higher

If the result is not as specified, the wire harness side may have a malfunction.

c. Reconnect the E1, E2, E3, 2A, 2B and 2D ECU connectors.

d. Measure the voltage of the connectors.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E1-24 (DCTY) - Body ground	L - Body ground*1 Y - Body ground*2	Driver side door courtesy switch input	Driver side door open	Below 1 V
			Engine switch off, and driver side door courtesy switch off	Pulse generation (see waveform 1 or 2)
E2-21 (PCTY) - Body ground	Y - Body ground*1 L - Body ground*2	Front passenger side door courtesy switch input	Front passenger side door open	Below 1 V
			Engine switch off, and passenger side door courtesy switch off	Pulse generation (see waveform 3 or 4)
2C-2 (LCTY) - Body ground	W - Body ground	Rear door LH courtesy light switch input	Rear door LH open	Below 1 V
			Engine switch off, and rear LH side door courtesy switch off	Pulse generation (see waveform 5 or 6)
E2-7 (RCTY) - Body ground	G - Body ground	Rear door RH courtesy light switch input	Rear door RH open	Below 1 V
			Engine switch off, and rear RH side door courtesy switch off	Pulse generation (see waveform 7 or 8)
E2-25 (BCTY) - Body ground	W - Body ground	Back door courtesy light switch input	Back door open	Below 1 V
			Engine switch off, and back door closed	Pulse generation (see waveform 9 or 10)
E3-4 (HAZ) - Body ground	O - Body ground	Hazard warning light signal	Answer-back on	Below 1 V
			Answer-back off	11 to 14 V
E1-26 (BDSU) - Body ground	L - Body ground	Back door opener switch input	Back door lock opener switch off	Below 1 V
			Back door lock opener switch on	Pulse generation (see waveform 11 or 12)

HINT:


- ***1: for LHD**
- ***2: for RHD**

If the result is not as specified, the ECU may have a malfunction.

e. Using an oscilloscope, check waveform 1.

Waveform 1 (Reference)


Item	Content
Terminal No. (Symbol)	E1-24 (DCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and driver side door courtesy switch off

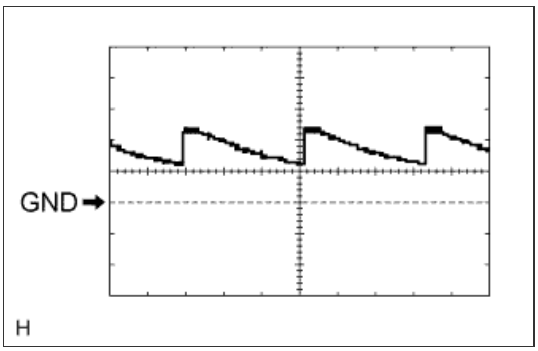

f. Using an oscilloscope, check waveform 2.

Waveform 2 (Reference)


Item	Content
Terminal No. (Symbol)	E1-24 (DCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and driver side door courtesy switch off

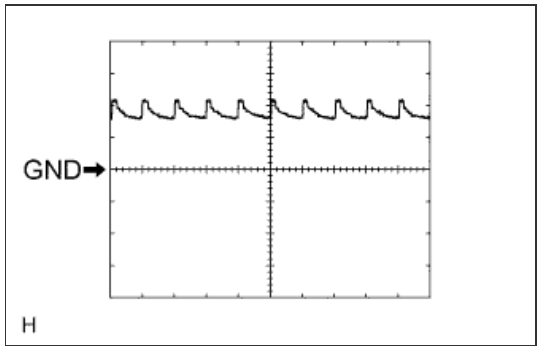

g. Using an oscilloscope, check waveform 3.

Waveform 3 (Reference)


Item	Content
Terminal No. (Symbol)	E2-21 (PCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and passenger side door courtesy switch off

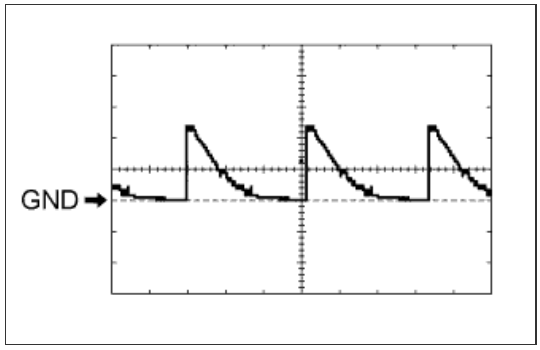

h. Using an oscilloscope, check waveform 4.

Waveform 4 (Reference)


Item	Content
Terminal No. (Symbol)	E2-21 (PCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and passenger side door courtesy switch off

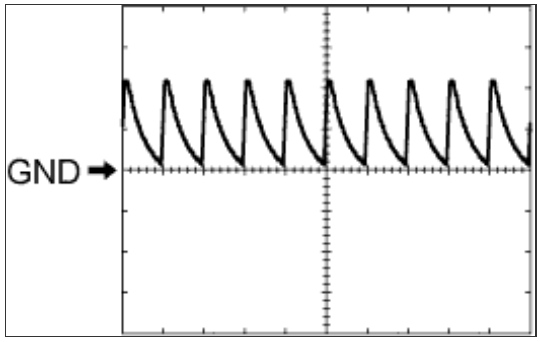

i. Using an oscilloscope, check waveform 5.

Waveform 5 (Reference)


Item	Content
Terminal No. (Symbol)	2C-2 (LCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear LH side door courtesy switch off

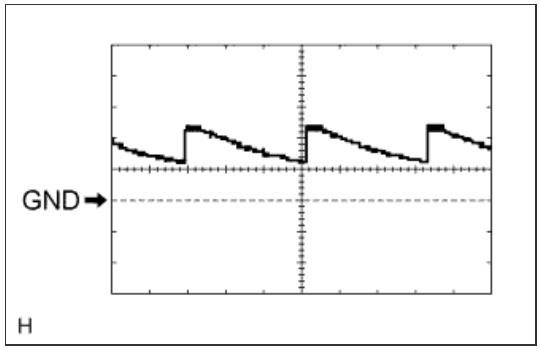

j. Using an oscilloscope, check waveform 6.

Waveform 6 (Reference)


Item	Content
Terminal No. (Symbol)	2C-2 (LCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear LH side door courtesy switch off

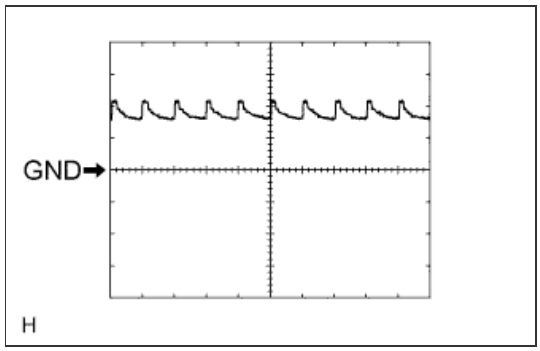

k. Using an oscilloscope, check waveform 7.

Waveform 7 (Reference)


Item	Content
Terminal No. (Symbol)	E2-7 (RCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear RH side door courtesy switch off

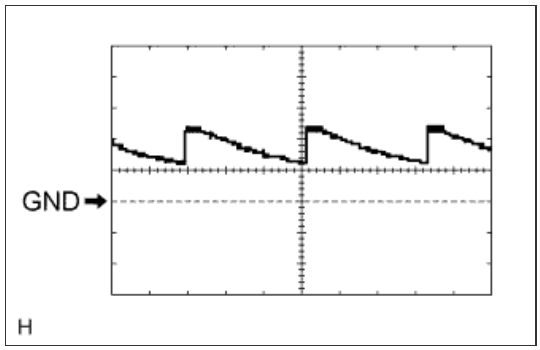

l. Using an oscilloscope, check waveform 8.

Waveform 8 (Reference)


Item	Content
Terminal No. (Symbol)	E2-7 (RCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear RH side door courtesy switch off

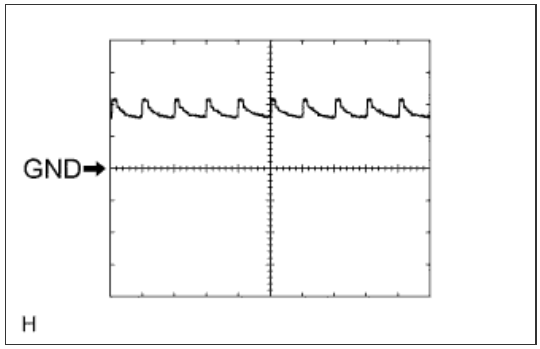

m. Using an oscilloscope, check waveform 9.

Waveform 9 (Reference)


Item	Content
Terminal No. (Symbol)	E2-25 (BCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and back door closed

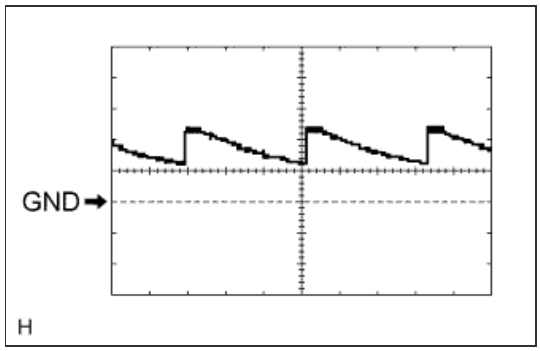

n. Using an oscilloscope, check waveform 10.

Waveform 10 (Reference)


Item	Content
Terminal No. (Symbol)	E2-25 (BCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and back door closed

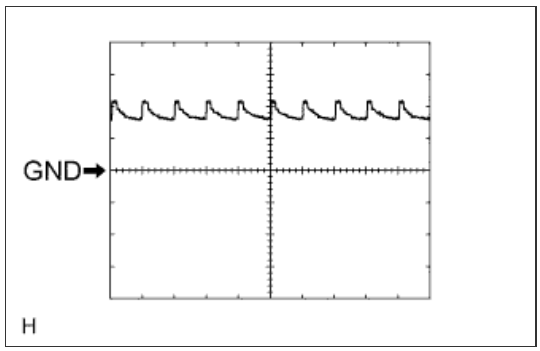

o. Using an oscilloscope, check waveform 11.

Waveform 11 (Reference)


Item	Content
Terminal No. (Symbol)	E1-26 (BDSU) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and Back door lock opener switch on

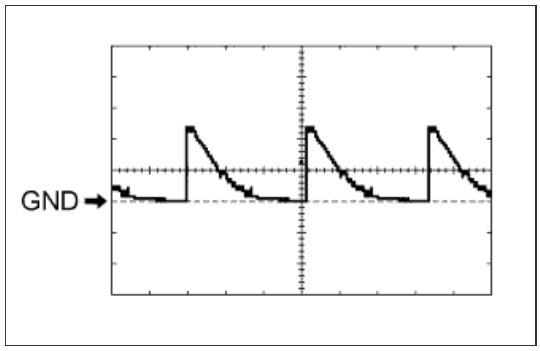

p. Using an oscilloscope, check waveform 12.

Waveform 12 (Reference)

Item	Content
Terminal No. (Symbol)	E1-26 (BDSU) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and Back door lock opener switch on

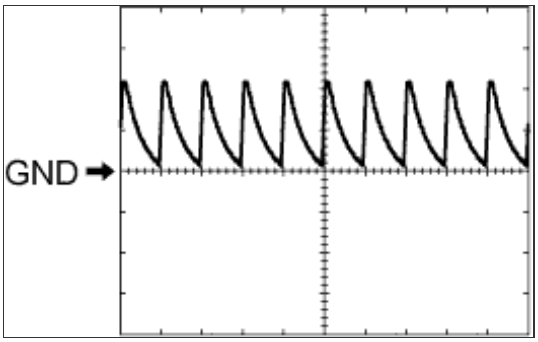

for Preparation Click here

READ DATA LIST

HINT:

Using the intelligent tester to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / Data List.

e. According to the display on the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Power Save Cnt 10 Min.	Power save counter - 10 minutes / Min: 0, Max: 225	Within range from 0 to 225	-
Power Save Cnt 9 Days	Power save counter - 9 days / Min: 0, Max: 225	Within range from 0 to 225	-
Power Save Cnt 14 Days	Power save counter - 14 days / Min: 0, Max: 225	Within range from 0 to 225	-
Power Save Cnt 30 Days	Power save counter - 30 days / Min: 0, Max: 225	Within range from 0 to 225	-
Unmatched Vehicle-ID	No communication condition between vehicle and electrical key transmitter (vehicle-ID) / Yes or No	Yes: Key ID code not matched to vehicle No: Key ID code matched to vehicle	-
No Response	No communication condition between vehicle and electrical key transmitter (response) / Yes or No	Yes: Key ID code not matched to vehicle No: Key ID code matched to vehicle	-
Unmatch Code or Form	No communication condition between vehicle and electrical key transmitter (response code and format) / Yes or No	Yes: Key ID code not matched to vehicle No: Key ID code matched to vehicle	-
Key Low Battery	Key low battery / Yes or No	Yes: Key battery voltage low No: Key battery voltage normal	-
ID Code Difference(Resp)	No communication condition between vehicle and electrical key transmitter (ID code) / Yes or No	Yes: Key ID code not matched to vehicle No: Key ID code matched to vehicle	-
C Code Difference	No communication condition between vehicle and electrical key transmitter (challenge code) / Yes or No	Yes: Key ID code not matched to vehicle No: Key ID code matched to vehicle	-
Door Unlock Mode	Door unlock mode / All, Each, D_Door, Side	Mode status displayed	-
Auto Entry Cancel SW	Entry door lock function cancel / ON or OFF	Mode status displayed	-
Trunk Open Mode	Luggage compartment door open mode with vehicle locked / ON or OFF	Customization status displayed	-
Ignition Available Area	Ignition available area / Front or All	Customization status displayed	-
D-Door Touch Sensor	Driver side door touch sensor / ON or OFF	ON: Driver side door sensor touched OFF: Driver side door sensor not touched	-
D-Door Trigger	Driver side door outside handle lock switch / ON or OFF	ON: Driver side door outside handle lock switch pushed	-

Switch		OFF: Driver side door outside handle lock switch not pushed	
P-Door Touch Sensor	Front passenger side door touch sensor / ON or OFF	ON: Front passenger side door sensor touched OFF: Front passenger side door sensor not touched	-
P-Door Trigger Switch	Front passenger side door outside handle lock switch / ON or OFF	ON: Front passenger side door outside handle lock switch pushed OFF: Front passenger side door outside handle lock switch not pushed	-
Dr-Door Touch Sensor*	Driver side rear door touch sensor / ON or OFF	ON: Driver side rear door sensor touched OFF: Driver side rear door sensor not touched	-
Dr-Door Trigger Switch*	Driver side rear door outside handle lock switch / ON or OFF	ON: Driver side rear door outside handle lock switch pushed OFF: Driver side rear door outside handle lock switch not pushed	-
Pr-Door Touch Sensor*	Passenger side rear door touch sensor / ON or OFF	ON: Passenger side rear door sensor touched OFF: Passenger side rear door sensor not touched	-
Pr-Door Trigger Switch*	Passenger side rear door outside handle lock switch / ON or OFF	ON: Passenger side rear door outside handle lock switch pushed OFF: Passenger side rear door outside handle lock switch not pushed	-
Tr/B-Door Lock SW	Back door lock switch / ON or OFF	ON: Back door lock switch pushed OFF: Back door lock switch not pushed	-

HINT:

*: For vehicles with entry function for rear doors.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
IG SW	Engine switch on (IG) / ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-
ACC SW	Engine switch on (ACC) / ON or OFF	ON: Engine switch on (ACC) OFF: Engine switch off	-
D Door Courtesy SW	Driver side door courtesy light switch signal / ON or OFF	ON: Driver side door opened OFF: Driver side door closed	-
P Door Courtesy SW	Front passenger side door courtesy light switch signal / ON or OFF	ON: Front passenger side door opened OFF: Front passenger side door closed	-
RL Door Courtesy SW	Rear LH side door courtesy light switch signal / ON or OFF	ON: Rear side door LH opened OFF: Rear side door LH closed	-
RR Door Courtesy SW	Rear RH side door courtesy light switch signal / ON or OFF	ON: Rear side door RH opened OFF: Rear side door RH closed	-
D Door Lock Position SW	Driver side door lock position switch signal / ON or OFF	ON: Driver side door unlocked OFF: Driver side door locked	-
P Door Lock Position SW	Front passenger side door lock position switch signal / ON or OFF	ON: Front passenger side door unlocked OFF: Front passenger side door locked	-
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-
Back Door Handle SW	Back door opener switch / ON or OFF	ON: Back door opener switch pushed OFF: Back door opener switch not pushed	-

Back Door Courtesy SW	Back door courtesy light switch signal / ON or OFF	ON: Back door opened OFF: Back door closed	-

PERFORM ACTIVE TEST

HINT:

Using the intelligent tester to perform Active Tests allows relays, VSVs, actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. Performing Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Entry & Start / Active Test.

e. According to the display on the intelligent tester, perform the Active Test.

Entry & Start

Tester Display	Test Part	Control Range	Diagnostic Note
Overhead Tuner Power Supply ON	Door control receiver	ON or OFF	-
D-Seat Outside Transmitter	Door electrical key oscillator (for Driver Side)	ON or OFF	-
P-Seat Outside Transmitter	Door electrical key oscillator (for Front Passenger Side)	ON or OFF	-
DR-Seat Outside Transmitter*	Door electrical key oscillator (for Driver Side Rear)	ON or OFF	-
PR-Seat Outside Transmitter*	Door electrical key oscillator (for Passenger Side Rear)	ON or OFF	-
Fr-Seat Inside Transmitter	Indoor electrical key antenna (for Front Floor)	ON or OFF	-
Rr-Seat Inside Transmitter	Indoor electrical key antenna (for Rear 1 Floor)	ON or OFF	-
Inside Trunk/Backdoor Transmitter	Indoor electrical key antenna (for Rear 2 Floor)	ON or OFF	-
Outside Trunk/Backdoor Transmitter	Back door electrical key antenna (for Outer)	ON or OFF	-
D-Seat Select	Driver side select	ON or OFF	-
P-Seat Select	Front passenger side select	ON or OFF	-
Dr-Seat Select*	Driver side rear select	ON or OFF	-
Pr-Seat Select*	Passenger side rear select	ON or OFF	-
Wireless Buzzer Operation	Wireless buzzer	ON or OFF	-

HINT:

*: For vehicles with entry function for rear doors.

for Preparation Click here

DESCRIPTION

The entry and start system uses the wireless door lock buzzer to perform various vehicle exterior warnings. When the conditions of each warning are met, the certification ECU (smart key ECU assembly) sends a buzzer signal to the wireless buzzer, and the wireless door lock buzzer sounds*.

HINT:

*: For Europe and China, the wireless door lock buzzer does not sound.

INSPECTION PROCEDURE

NOTICE:

Before performing the inspection, check that there are no problems related to the "CAN Communication System" and "LIN Communication System".

1.CHECK WIRELESS DOOR LOCK BUZZER OPERATION

a. When the wireless operation is used to lock and unlock the doors, check that the wireless door lock buzzer sounds normally (Click here).

NG → GO TO WIRELESS DOOR LOCK CONTROL SYSTEM (Click here)

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

for Preparation Click here

DESCRIPTION

When the entry operation and wireless operation door lock function does not operate, a malfunction or wave interference may be occurring in either of the following: 1) the signal communication line between the door control receiver and certification ECU (smart key ECU assembly) (line is used by entry and wireless); or 2) the door control transmitter.

WIRING DIAGRAM

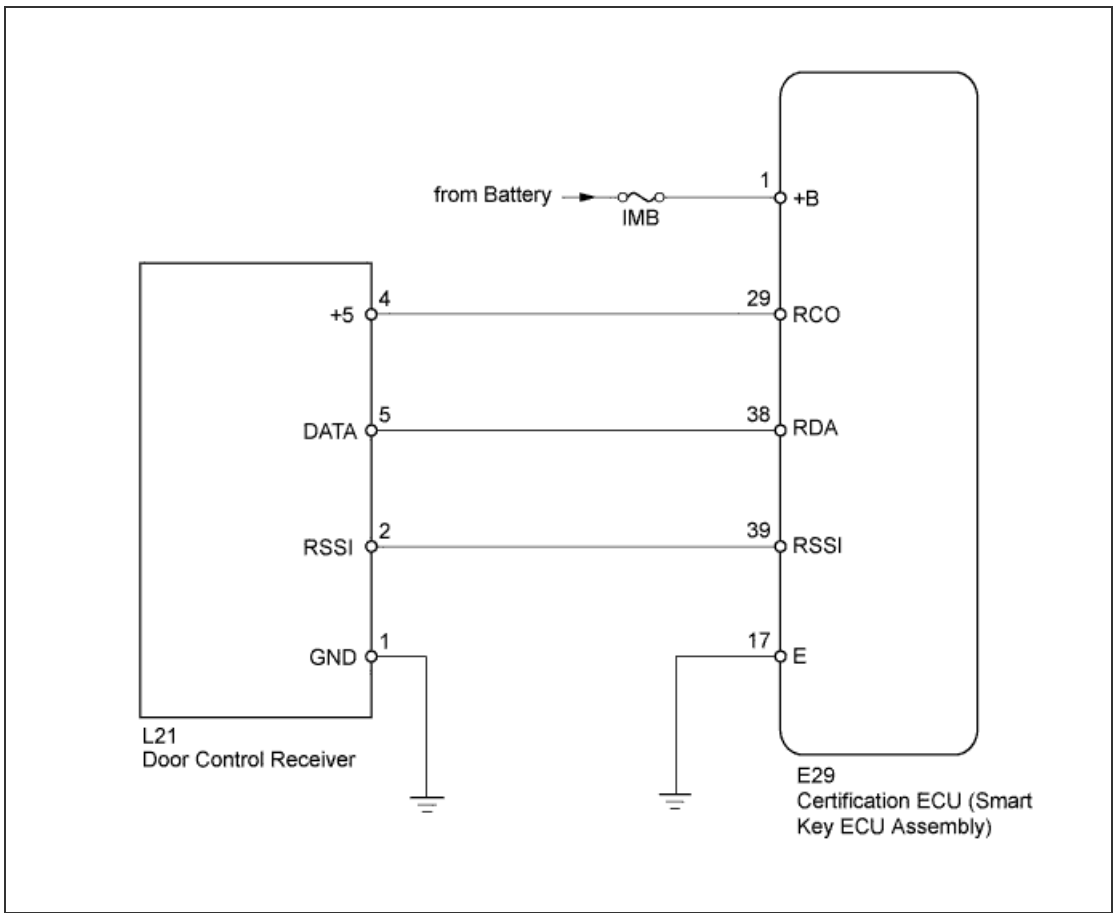

INSPECTION PROCEDURE

NOTICE:

- **Before performing the inspection, check that there are no problems related to the "CAN Communication System" and "LIN Communication System".**
- **Check that there are no door control transmitters in the vehicle.**
- **Before performing the inspection, check that DTC B1242 is not output (Click here).**

1.CHECK POWER DOOR LOCK CONTROL SYSTEM

a. When the master switch door control switch is operated, check that the locked doors unlock (Click here).

OK:
Locked doors unlock.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.CHECK DOOR CONTROL TRANSMITTER

a. When another registered door control transmitter is used, check that the wireless and entry function operates normally (Click here).

Result

Result	Proceed to
Entry function operates and door control transmitter that did not operate is electrical key transmitter	A
Entry function does not operate	B

B → Go to step 5

A

3.CHECK DOOR CONTROL TRANSMITTER (LED)

a. Check that the transmitter LED illuminates 3 times when a switch is pressed 3 times.

Result

Result	Proceed to
Transmitter LED does not illuminate 3 times when switch is pressed 3 times	A
Transmitter LED illuminates 3 times when switch is pressed 3 times	B
Transmitter LED does not illuminate second or third time	C

HINT:

If the transmitter LED does not illuminate the second or third time, replace the transmitter battery as it is depleted.

B → REPLACE DOOR CONTROL TRANSMITTER

C → REPLACE TRANSMITTER BATTERY (Click here)

A

4.INSPECT TRANSMITTER BATTERY (VOLTAGE)

a. Electrical key transmitter

HINT:


- **Type A: for Australia**
- **Type B: except Australia**

i. Remove the battery from the electrical key transmitter that does not operate. Attach a lead wire (0.6 mm (0.0236 in.) or less in diameter including wire sheath) with tape or equivalent to the negative terminal (Click here).

NOTICE:

Do not wrap the lead wire around a terminal, wedge it between terminals, or solder it. A terminal may be deformed or damaged, and the battery will not be able to be installed correctly.


ii. Carefully pull the lead wire out from the position shown in the illustration and install the previously removed transmitter battery.

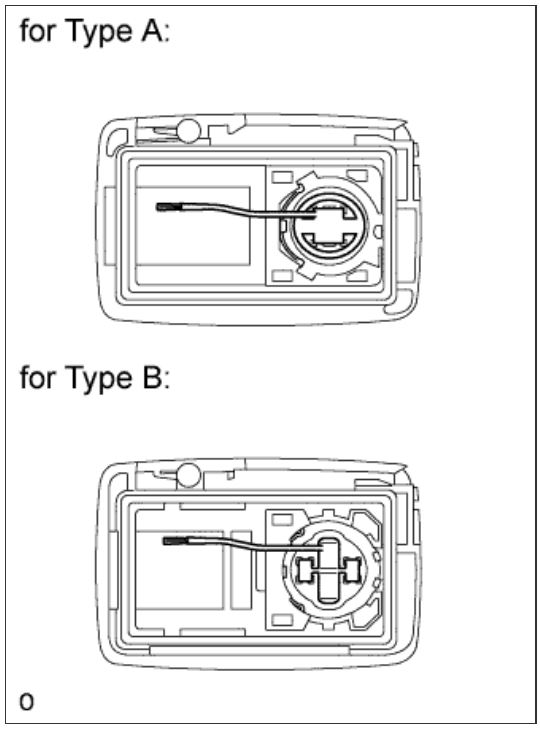

iii. Using an oscilloscope, check the transmitter battery voltage waveform.

HINT:

When measuring the battery voltage, while operating the lock switch of a door handle, bring the electrical key transmitter within the entry operating range to perform the measurement. For the entry operating range, refer to System Description (Click here).

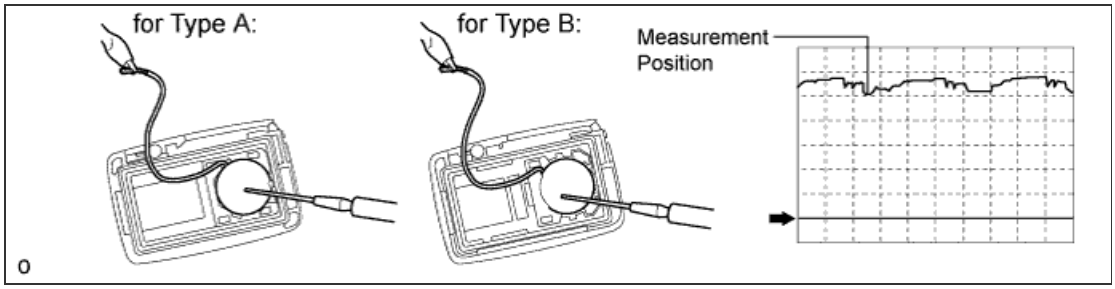

OK:

Tester Connection	Tool Setting	Condition	Specified Condition
Battery positive (+) - Battery negative (-)	0.5 V/DIV., 100 ms/DIV.	Engine switch off, all doors closed and lock switch pushed	2.5 to 3.2 V (Refer to the waveform)

NG → REPLACE TRANSMITTER BATTERY (Click here)

OK

REPLACE DOOR CONTROL TRANSMITTER

5.CHECK WAVE ENVIRONMENT

a. Bring the door control transmitter near the door control receiver, and perform a wireless and entry function operation check.

HINT:

- **When the door control transmitter is brought near the door control receiver, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **If the inspection result is that the problem only occurs in certain locations or times of day, the possibility of wave**

interference is high. Also, added vehicle components may cause wave interference. If installed, remove them and perform the operation check.

OK:
Wireless and entry functions operate normally.

NG → Go to step 6

OK →

AFFECTED BY WAVE INTERFERENCE

6.INSPECT FUSE (IMB)

a. Remove the IMB fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IMB fuse	Always	Below 1 Ω

NG → **REPLACE FUSE**

OK →

7.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - BATTERY)


a. Disconnect the E29 ECU connector.

b. Measure the voltage according to the value(s) in the tables below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E29-1 (+B) - Body ground	Always	11 to 14 V


Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

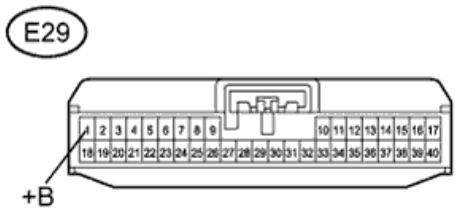

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK →

8.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR CONTROL RECEIVER AND BODY GROUND)

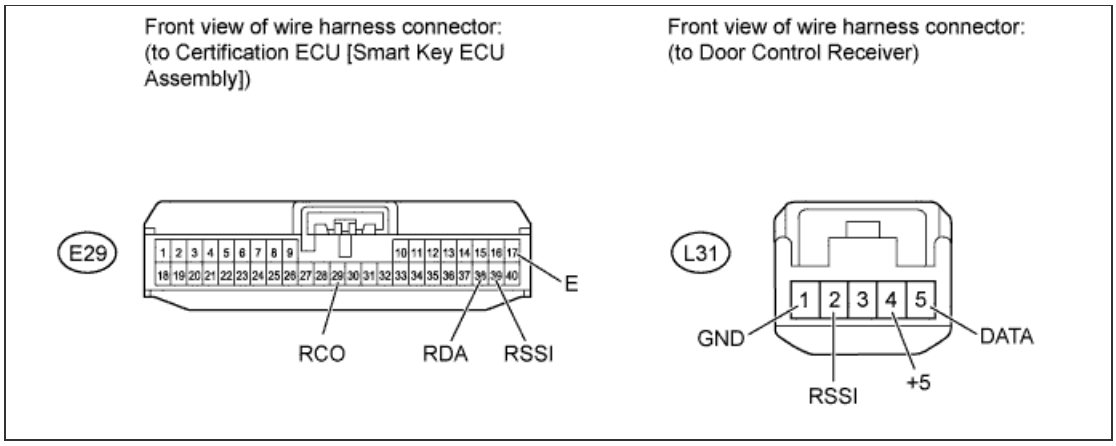

a. Disconnect the L31 receiver connector.

b. Disconnect the E29 ECU connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E29-29 (RCO) - L31-4 (+5)	Always	Below 1 Ω
E29-38 (RDA) - L31-5 (DATA)	Always	Below 1 Ω
E29-39 (RSSI) - L31-2 (RSSI)	Always	Below 1 Ω
E29-17(E) - Body ground	Always	Below 1 Ω
L31-1 (GND) - Body ground	Always	Below 1 Ω
E29-29 (RCO) or L31-4 (+5) - Body ground	Always	10 kΩ or higher
E29-38 (RDA) or L31-5 (DATA) - Body ground	Always	10 kΩ or higher
E29-39 (RSSI) or L31-2 (RSSI) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.CHECK DOOR CONTROL RECEIVER (OPERATION)

a. Temporarily replace the door control receiver with a new one (Click here).

b. Check that the wireless and entry functions operate normally.

OK:
Wireless and entry functions operate normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (DOOR CONTROL RECEIVER IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

When the wireless operation can be used to lock and unlock the doors, the communication line between the door control receiver and certification ECU (smart key ECU assembly) is normal. When the entry operation does not operate, one of the following may be the cause: 1) entry cancel function is set through customization; 2) malfunction in entry and start system communication line (electrical key transmitter and vehicle); or 3) wave interference.

INSPECTION PROCEDURE

NOTICE:

Before performing the inspection, check that there are no problems related to the "Can Communication System" and "LIN Communication System"

1.READ VALUE USING INTELLIGENT TESTER (KEY CANCEL SWITCH)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Auto Entry Cancel SW	Entry function cancel/ON or OFF	Mode status displayed	-

Result

Result	Proceed to
Entry function cancel is OFF	A
Entry function cancel is ON	B

B → PERFORM CANCELLATION OF ENTRY KEY CANCEL FUNCTION (Click here)

A

2.CHECK WAVE ENVIRONMENT

a. Move the electrical key transmitter as described below and perform the operation inspection (Click here).


HINT:

- **When the electrical key transmitter is brought near the door outside handle or electrical key antenna, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **The transmitting wave of the wireless function and entry function are the same, but the wave logic is different. As a result, it is possible that only the wireless function or only the entry function is affected by wave interference.**

i. Bring the electrical key transmitter near the door outside handle (for driver side), and perform a driver door entry lock and unlock operation check.

NOTICE:


If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication may not possible.

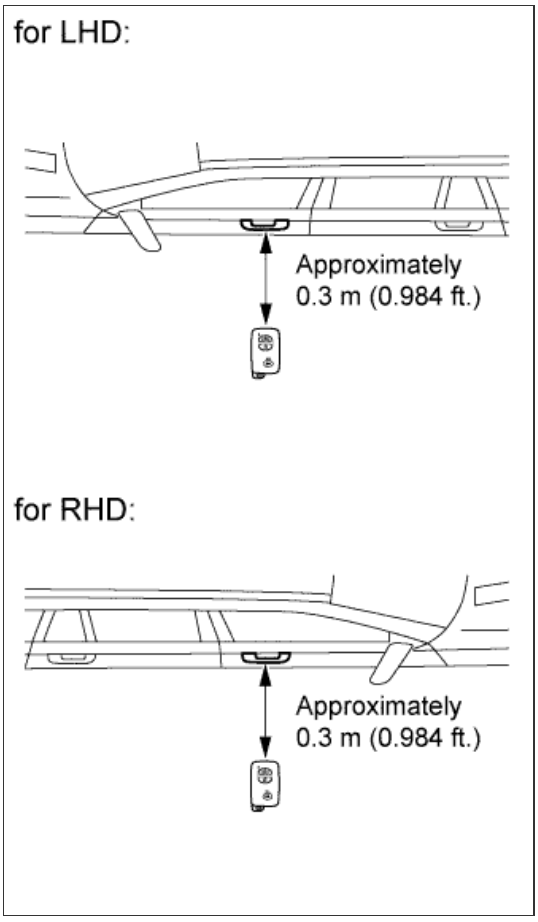

ii. Bring the electrical key transmitter near the door outside handle (for front passenger side), and perform a front passenger door entry lock and unlock operation check.

NOTICE:


If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication may not possible.

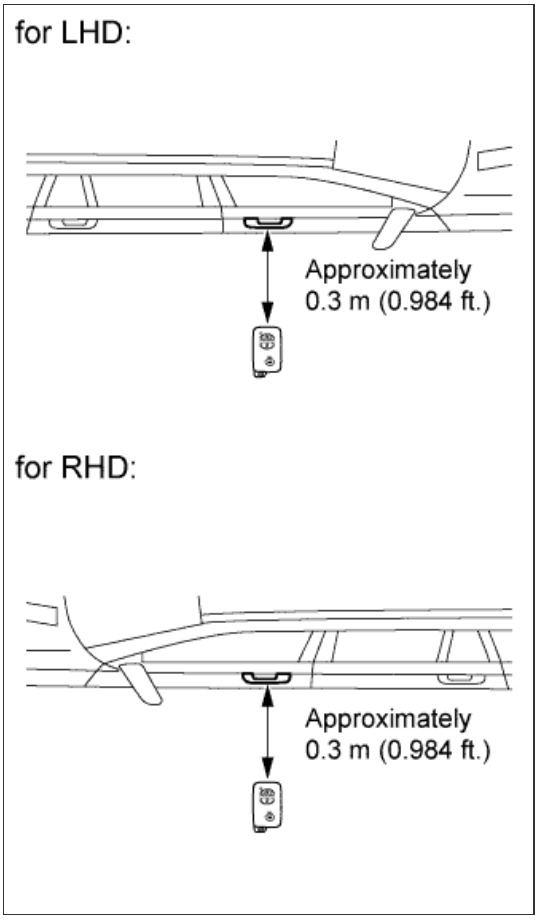

iii. Bring the electrical key transmitter near the rear door outside handle LH, and perform a rear left door entry lock and unlock operation check.

NOTICE:


If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication may not possible.

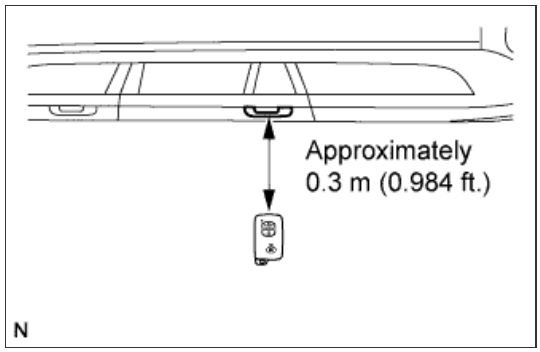

iv. Bring the electrical key transmitter near the rear door outside handle RH, and perform a rear right door entry lock and unlock operation check.

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication may not possible.

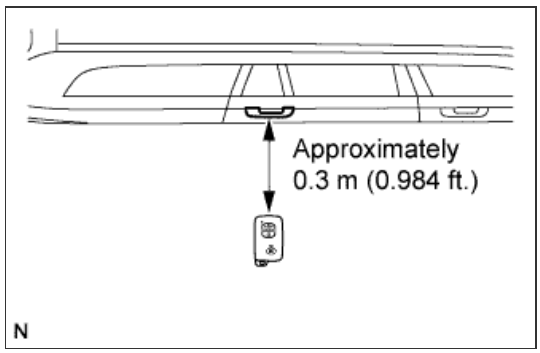

v. Bring the electrical key transmitter near the indoor electrical key antenna (in center console), and perform an engine start check.

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the center console, communication may not possible.

vi. Bring the electrical key transmitter near the indoor electrical key antenna (in rear No. 1 seat cushion), and perform an engine start check.

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the rear No. 1 seat cushion, communication may not possible.

vii. Bring the electrical key transmitter near the indoor electrical key antenna (in rear No. 2 seat cushion), and perform an engine start check.

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the rear No. 2 seat cushion, communication may not possible.


viii. Bring the electrical key transmitter near the electrical key antenna (in rear bumper), and perform an entry back door open function check.

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the rear bumper, communication may not possible.

HINT:

If the inspection result is that the problem only occurs in certain locations or times of day, the possibility of wave interference is high. Also, added vehicle components may cause wave interference. If installed, remove them and perform the operation check.

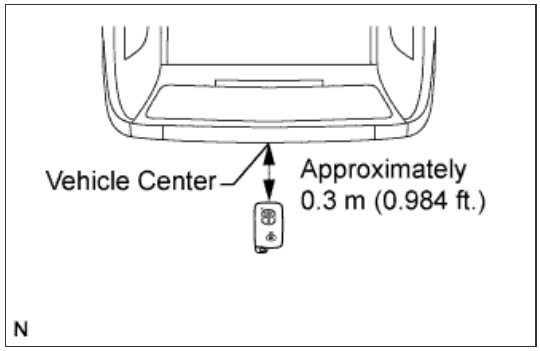

Result

Result	Proceed to
All operation checks fail	A
Some operation checks are normal	B

B → AFFECTED BY WAVE INTERFERENCE

A → 3.KEY DIAGNOSTIC MODE

a. Diagnostic mode inspection (door electrical key oscillator).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Driver Side.

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

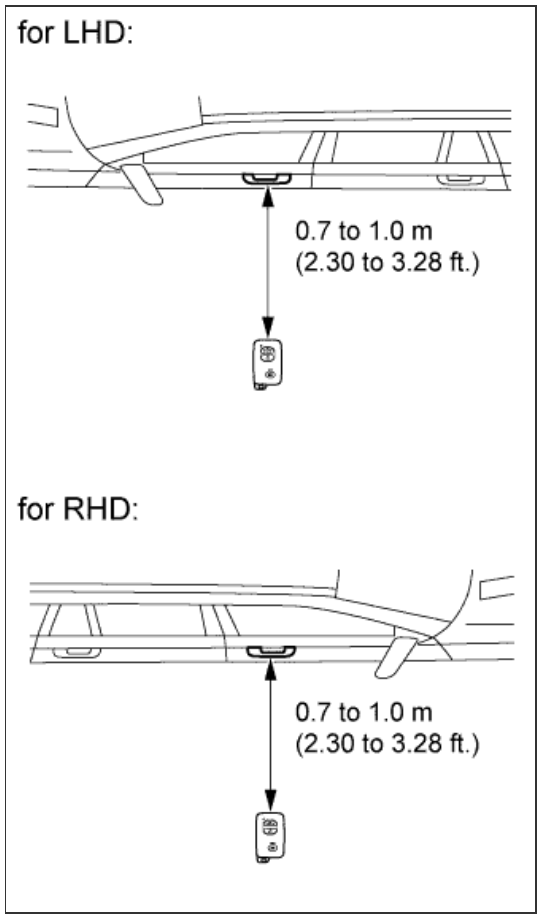

b. Diagnostic mode inspection (door electrical key oscillator).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Passenger Side.

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

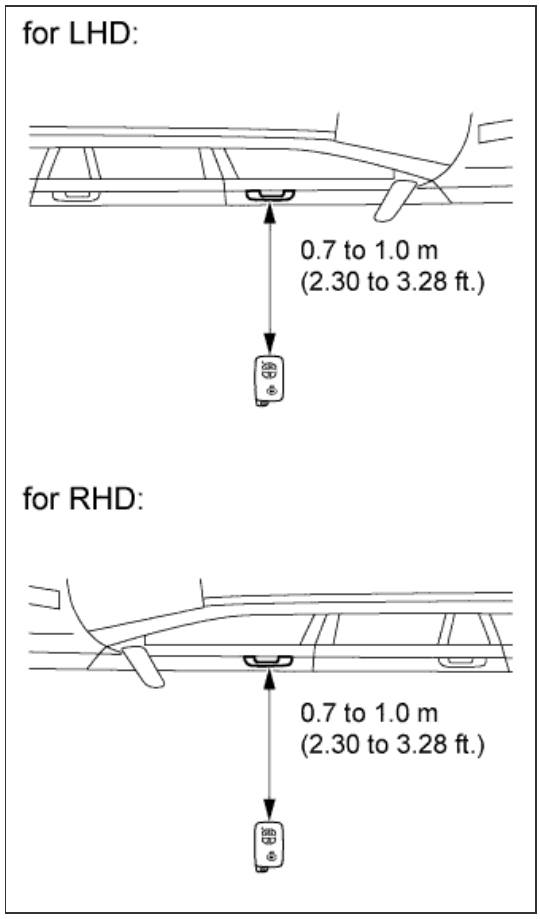

c. Diagnostic mode inspection (door electrical key oscillator).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Driver Side Rear.

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

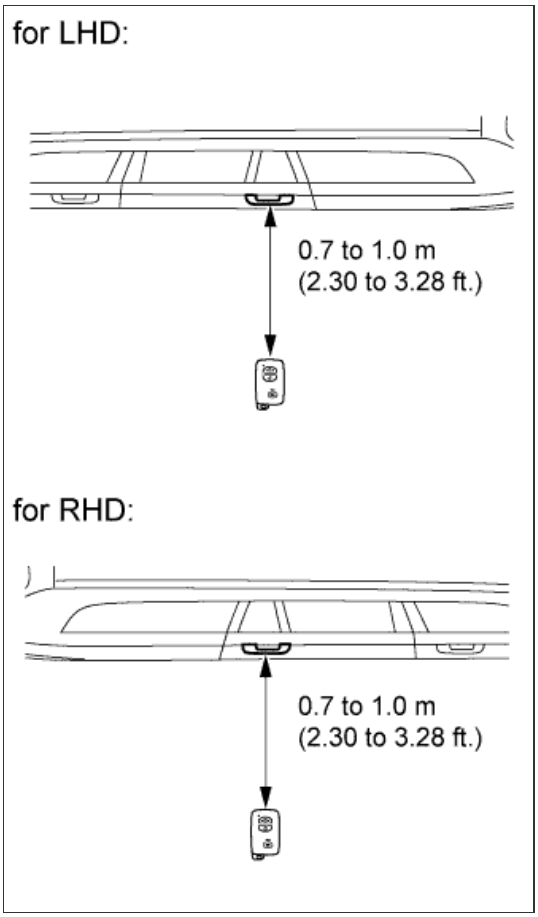

d. Diagnostic mode inspection (door electrical key oscillator).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Passenger Side Rear.

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

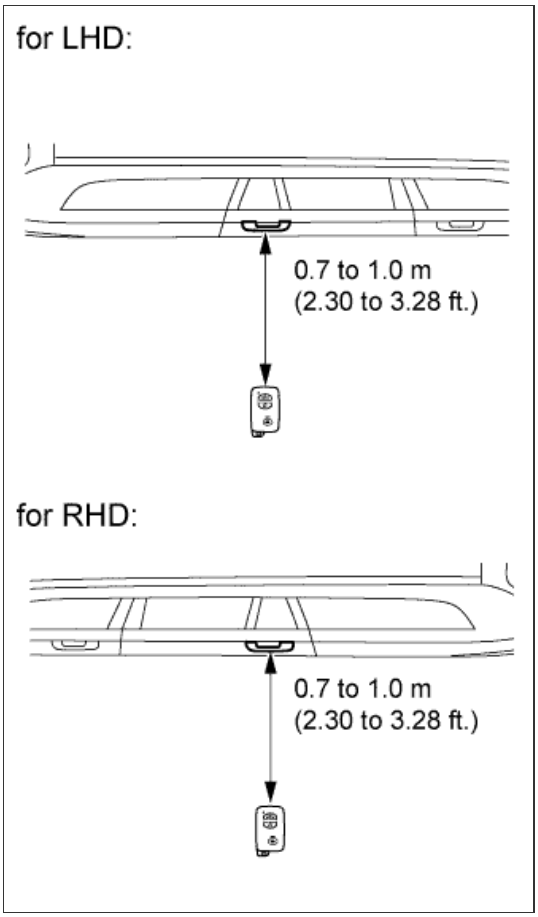

e. Diagnostic mode inspection (indoor electrical key antenna (for Front Floor)).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Front Room.

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

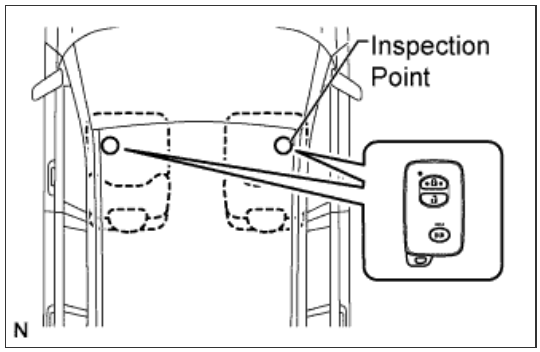

f. Diagnostic mode inspection (indoor electrical key antenna (for Rear 1 Floor)).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Rear Room.

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

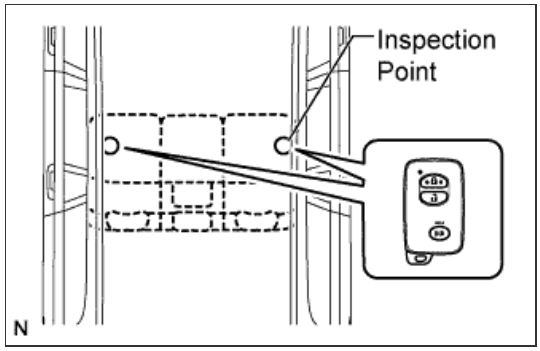

g. Diagnostic mode inspection (indoor electrical key antenna (for Rear 2 Floor)).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Back Door (inside).

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

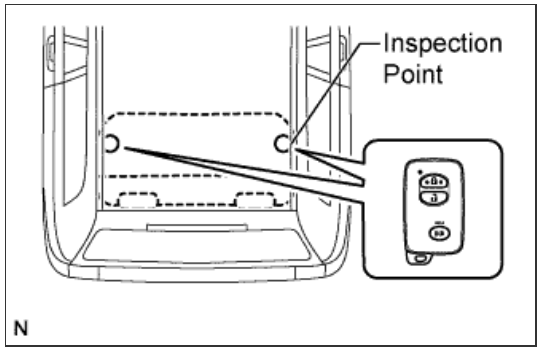

h. Diagnostic mode inspection (electrical key antenna).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Back Door (outside).

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

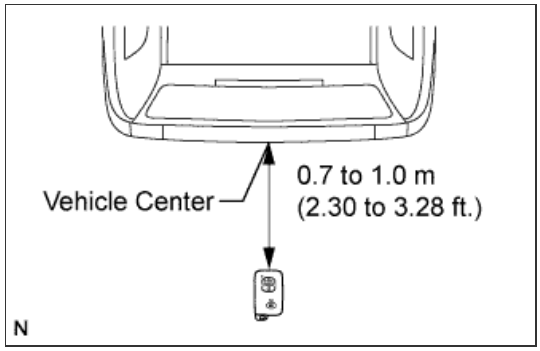

Result

Result	Proceed to
All diagnostic mode inspections fail	A
Some diagnostic mode inspections fail (door)	B
Some diagnostic mode inspections fail (interior)	C
Some diagnostic mode inspections fail (back door)	D
All diagnostic mode inspections are normal	E

GO TO DTC OF OTHER COMPONENTS (PROCEED TO PROBLEM SYMPTOM FLOWCHART FOR EACH DOOR) (Click

B → here)

C → GO TO OTHER FLOWCHART (Click here)

D → GO TO OTHER FLOWCHART (Click here)

E → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

A

4.REPLACE ELECTRICAL KEY TRANSMITTER

a. Replace the electrical key transmitter with a new one.

b. Perform the registration procedure (Refer to Service Bulletin for registration).

NEXT

5.CHECK OPERATION

a. Check the operation of the entry lock function (Click here).

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (ELECTRICAL KEY TRANSMITTER IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

If the driver side door entry unlock function does not operate but the entry lock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be a touch sensor circuit (certification ECU (smart key ECU assembly) → driver side door outside handle → driver side door electrical key oscillator).

WIRING DIAGRAM

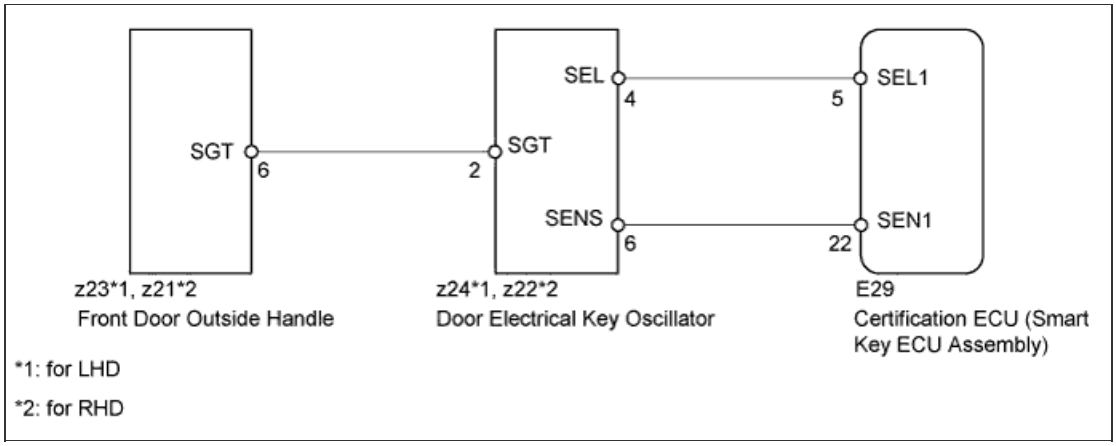

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D Door Lock Position SW	Driver side door lock position switch signal / ON or OFF	ON: Driver side door unlocked OFF: Driver side door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Driver Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D-Door Touch Sensor	Driver side door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

NG → Go to step 4

OK →


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E29 ECU connector.

b. Disconnect the z24 or z22 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

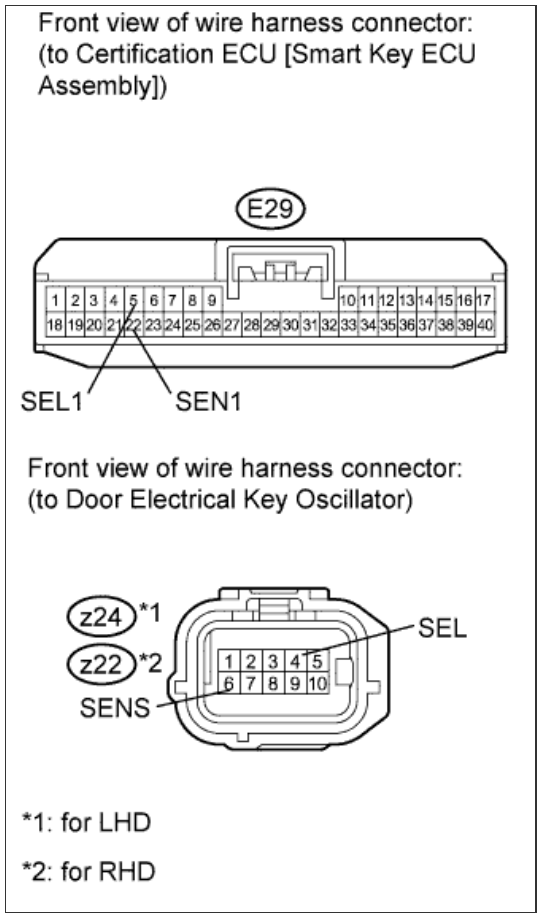

Standard Resistance:
for LHD:

Tester Connection	Condition	Specified Condition
E29-5 (SEL1) - z24-4 (SEL)	Always	Below 1 Ω
E29-22 (SEN1) - z24-6 (SENS)	Always	Below 1 Ω
E29-5 (SEL1) - Body ground	Always	10 kΩ or higher
E29-22 (SEN1) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E29-5 (SEL1) - z22-4 (SEL)	Always	Below 1 Ω
E29-22 (SEN1) - z22-6 (SENS)	Always	Below 1 Ω
E29-5 (SEL1) - Body ground	Always	10 kΩ or higher
E29-22 (SEN1) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

5.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the z23 or z21 handle connector.

b. Disconnect the z24 or z22 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

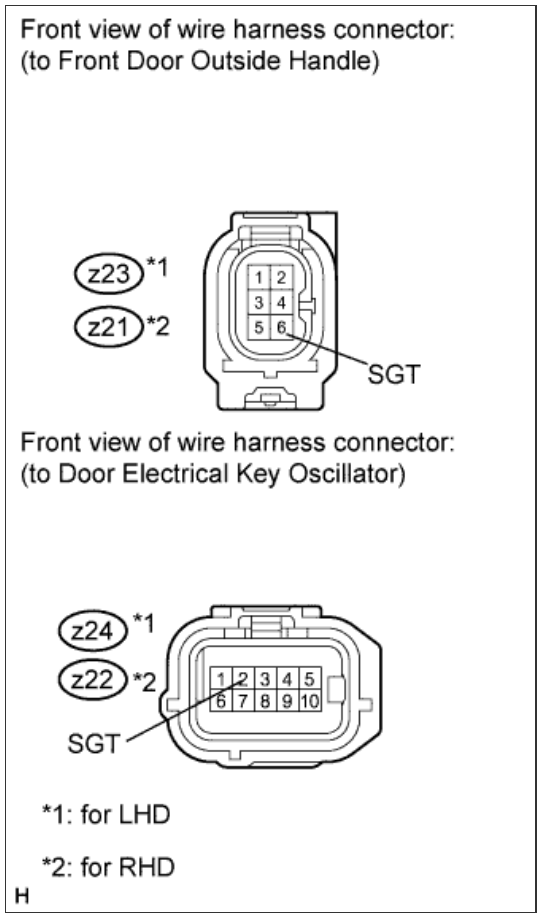

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
z23-6 (SGT) - z24-2 (SGT)	Always	Below 1 Ω
z23-6 (SGT) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
z21-6 (SGT) - z22-2 (SGT)	Always	Below 1 Ω
z21-6 (SGT) - Body		

ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

7.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → Go to step 8

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

8.REPLACE FRONT DOOR OUTSIDE HANDLE

a. Replace the front door outside handle (Click here).

NEXT

9.CHECK FRONT DOOR OUTSIDE HANDLE (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (FRONT DOOR OUTSIDE HANDLE IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

If the driver side door entry unlock function does not operate but the entry lock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be a touch sensor circuit (certification ECU (smart key ECU assembly) → driver side door outside handle → driver side door electrical key oscillator).

WIRING DIAGRAM

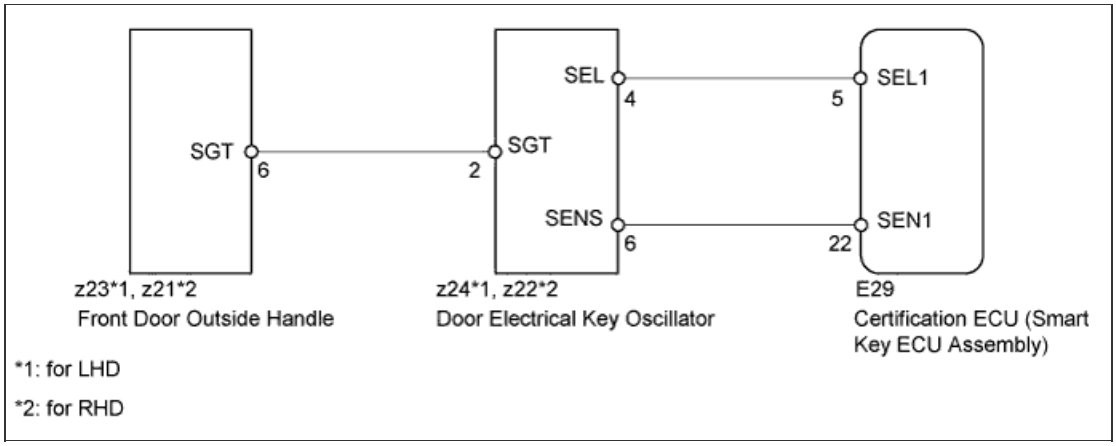

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D Door Lock Position SW	Driver side door lock position switch signal / ON or OFF	ON: Driver side door unlocked OFF: Driver side door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Driver Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D-Door Touch Sensor	Driver side door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

NG → Go to step 4

OK →


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E29 ECU connector.

b. Disconnect the z24 or z22 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

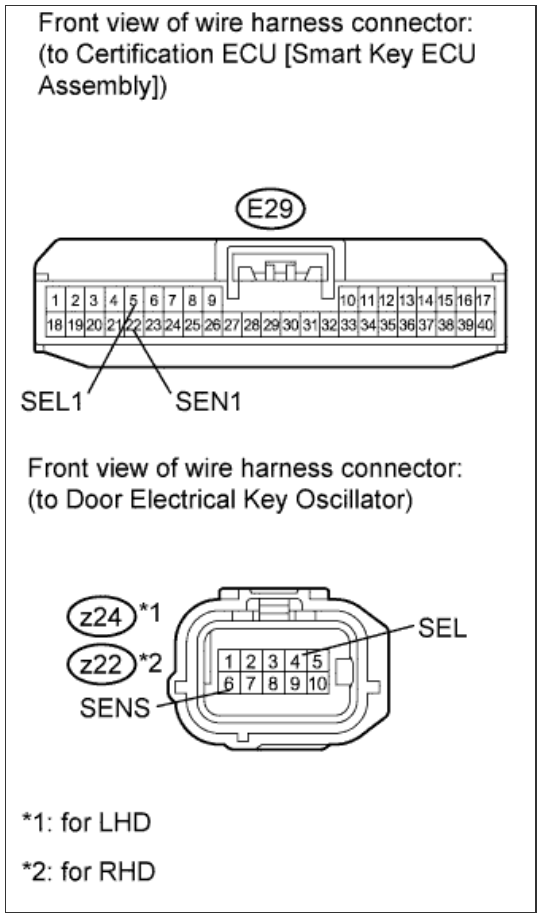

Standard Resistance:
for LHD:

Tester Connection	Condition	Specified Condition
E29-5 (SEL1) - z24-4 (SEL)	Always	Below 1 Ω
E29-22 (SEN1) - z24-6 (SENS)	Always	Below 1 Ω
E29-5 (SEL1) - Body ground	Always	10 kΩ or higher
E29-22 (SEN1) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E29-5 (SEL1) - z22-4 (SEL)	Always	Below 1 Ω
E29-22 (SEN1) - z22-6 (SENS)	Always	Below 1 Ω
E29-5 (SEL1) - Body ground	Always	10 kΩ or higher
E29-22 (SEN1) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

5.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the z23 or z21 handle connector.

b. Disconnect the z24 or z22 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

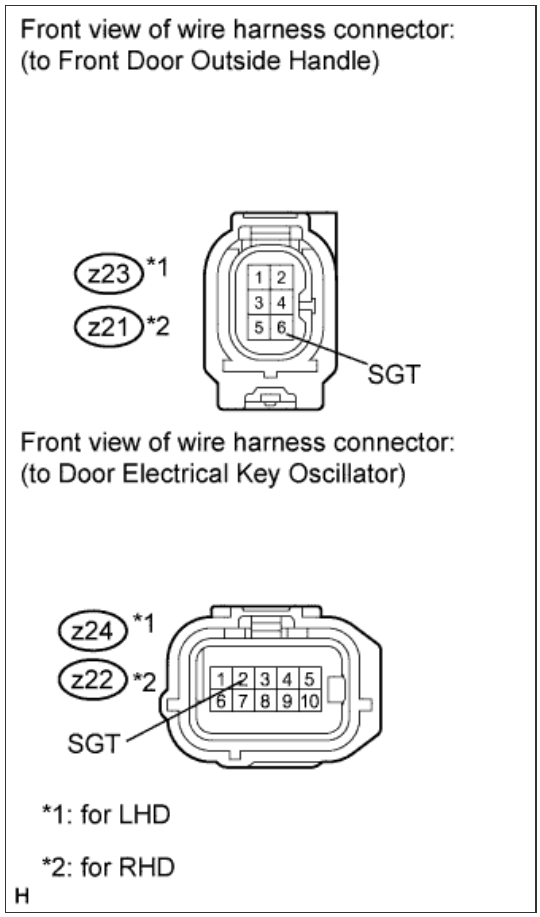

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
z23-6 (SGT) - z24-2 (SGT)	Always	Below 1 Ω
z23-6 (SGT) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
z21-6 (SGT) - z22-2 (SGT)	Always	Below 1 Ω
z21-6 (SGT) - Body		

ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

7.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → Go to step 8

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

8.REPLACE FRONT DOOR OUTSIDE HANDLE

a. Replace the front door outside handle (Click here).

NEXT

9.CHECK FRONT DOOR OUTSIDE HANDLE (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (FRONT DOOR OUTSIDE HANDLE IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

If the front passenger side door entry unlock function does not operate but the entry lock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be a touch sensor circuit (certification ECU (smart key ECU assembly) → front passenger side door outside handle → front passenger side door electrical key oscillator).

WIRING DIAGRAM

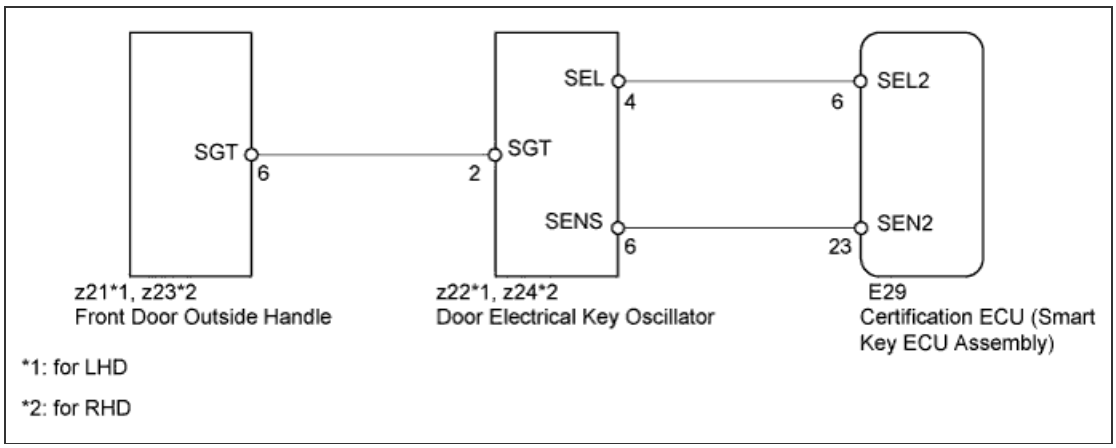

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P Door Lock Position SW	Front passenger side door lock position switch signal / ON or OFF	ON: Front passenger side door unlocked OFF: Front passenger side door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Passenger Door LOCK/UNLOCK Functions do not

Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P-Door Touch Sensor	Front passenger side door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

NG → Go to step 4

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


4.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E29 ECU connector.


b. Disconnect the z22 or z24 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

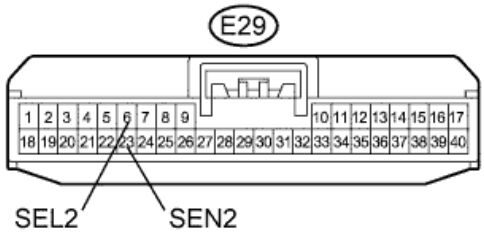

Front view of wire harness connector:
(to Door Electrical Key Oscillator)

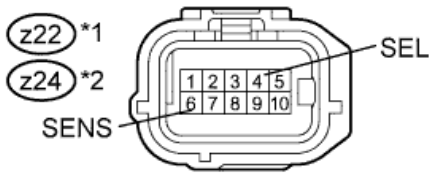

*1: for LHD

*2: for RHD

Standard Resistance:
for LHD:

Tester Connection	Condition	Specified Condition
E29-6 (SEL2) - z22-4 (SEL)	Always	Below 1 Ω
E29-23 (SEN2) - z22-6 (SENS)	Always	Below 1 Ω

E29-6 (SEL2) - Body ground	Always	10 kΩ or higher
E29-23 (SEN2) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E29-6 (SEL2) - z24-4 (SEL)	Always	Below 1 Ω
E29-23 (SEN2) - z24-6 (SENS)	Always	Below 1 Ω
E29-6 (SEL2) - Body ground	Always	10 kΩ or higher
E29-23 (SEN2) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

5.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the z21 or z23 handle connector.

b. Disconnect the z22 or z24 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

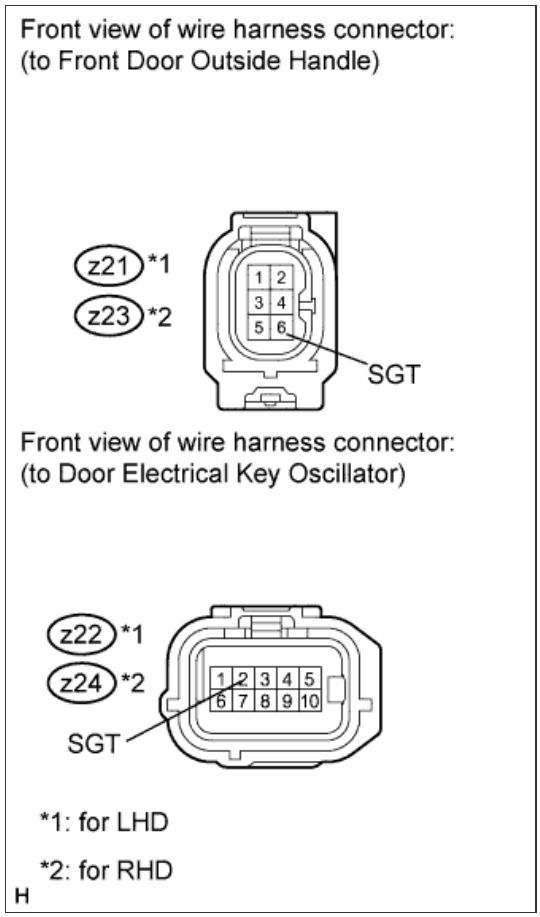

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
z21-6 (SGT) - z22-2 (SGT)	Always	Below 1 Ω
z21-6 (SGT) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified

		Condition
z23-6 (SGT) - z24-2 (SGT)	Always	Below 1 Ω
z23-6 (SGT) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

7.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → Go to step 8

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

8.REPLACE FRONT DOOR OUTSIDE HANDLE

a. Replace the front door outside handle (Click here).

NEXT

9.CHECK FRONT DOOR OUTSIDE HANDLE (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (FRONT DOOR OUTSIDE HANDLE IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

If the front passenger side door entry unlock function does not operate but the entry lock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be a touch sensor circuit (certification ECU (smart key ECU assembly) → front passenger side door outside handle → front passenger side door electrical key oscillator).

WIRING DIAGRAM

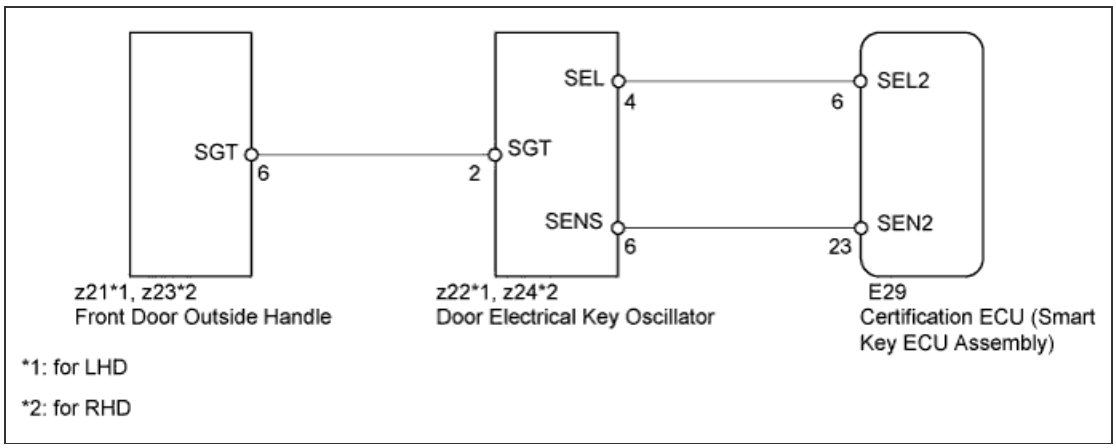

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P Door Lock Position SW	Front passenger side door lock position switch signal / ON or OFF	ON: Front passenger side door unlocked OFF: Front passenger side door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Passenger Door LOCK/UNLOCK Functions do not

Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P-Door Touch Sensor	Front passenger side door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

NG → Go to step 4

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


4.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E29 ECU connector.


b. Disconnect the z22 or z24 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

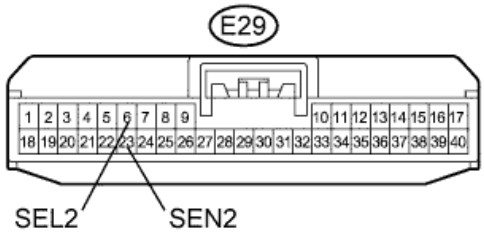

Front view of wire harness connector:
(to Door Electrical Key Oscillator)

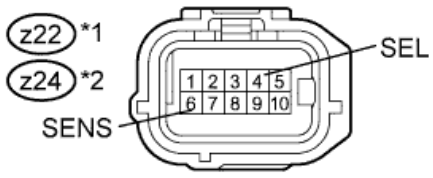

*1: for LHD

*2: for RHD

Standard Resistance:
for LHD:

Tester Connection	Condition	Specified Condition
E29-6 (SEL2) - z22-4 (SEL)	Always	Below 1 Ω
E29-23 (SEN2) - z22-6 (SENS)	Always	Below 1 Ω

E29-6 (SEL2) - Body ground	Always	10 kΩ or higher
E29-23 (SEN2) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E29-6 (SEL2) - z24-4 (SEL)	Always	Below 1 Ω
E29-23 (SEN2) - z24-6 (SENS)	Always	Below 1 Ω
E29-6 (SEL2) - Body ground	Always	10 kΩ or higher
E29-23 (SEN2) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

5.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the z21 or z23 handle connector.

b. Disconnect the z22 or z24 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

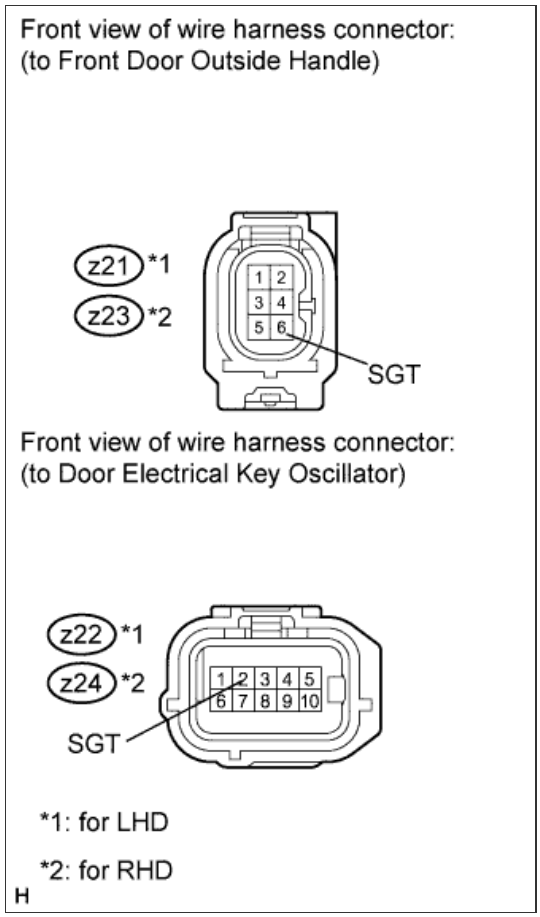

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
z21-6 (SGT) - z22-2 (SGT)	Always	Below 1 Ω
z21-6 (SGT) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified

		Condition
z23-6 (SGT) - z24-2 (SGT)	Always	Below 1 Ω
z23-6 (SGT) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

7.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → Go to step 8

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

8.REPLACE FRONT DOOR OUTSIDE HANDLE

a. Replace the front door outside handle (Click here).

NEXT

9.CHECK FRONT DOOR OUTSIDE HANDLE (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (FRONT DOOR OUTSIDE HANDLE IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

If the rear door LH entry unlock function does not operate but the entry lock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be a touch sensor circuit (certification ECU (smart key ECU assembly) → rear door outside handle LH → rear door electrical key oscillator LH).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

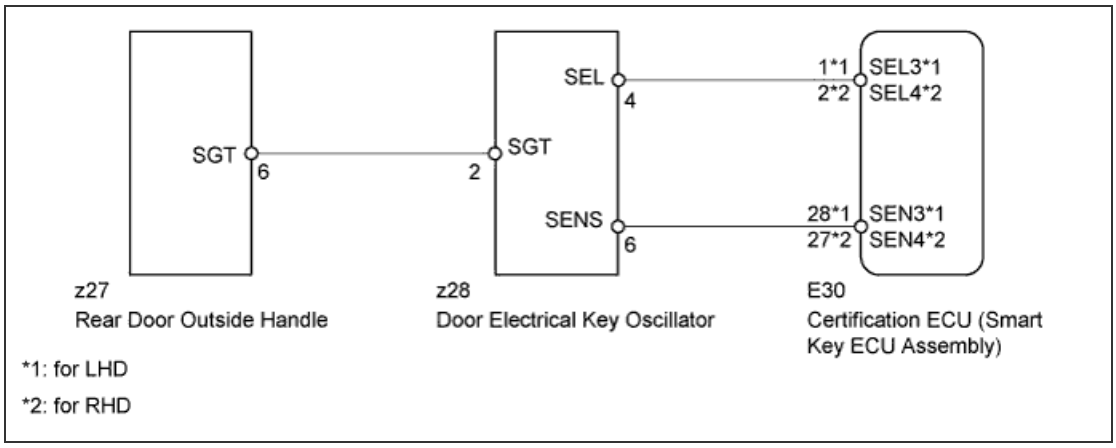

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door LH LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Touch Sensor	Driver side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Touch Sensor	Passenger side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

NG → Go to step 4

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E30 ECU connector.

b. Disconnect the z28 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

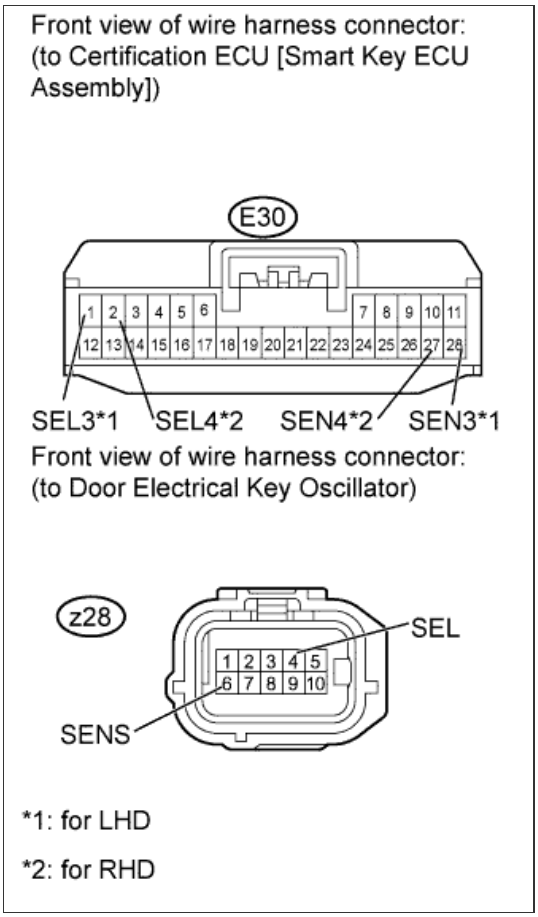

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E30-1 (SEL3) - z28-4 (SEL)	Always	Below 1 Ω
E30-28 (SEN3) - z28-6 (SENS)	Always	Below 1 Ω
E30-1 (SEL3) - Body ground	Always	10 kΩ or higher
E30-28 (SEN3) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E30-2 (SEL4) - z28-4 (SEL)	Always	Below 1 Ω
E30-27 (SEN4) - z28-6 (SENS)	Always	Below 1 Ω
E30-2 (SEL4) - Body ground	Always	10 kΩ or higher
E30-27 (SEN4) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

5.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - REAR DOOR OUTSIDE HANDLE)


a. Disconnect the z27 handle connector.

b. Disconnect the z28 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z27-6 (SGT) - z28-2 (SGT)	Always	Below 1 Ω
z27-6 (SGT) - Body ground	Always	10 kΩ or higher

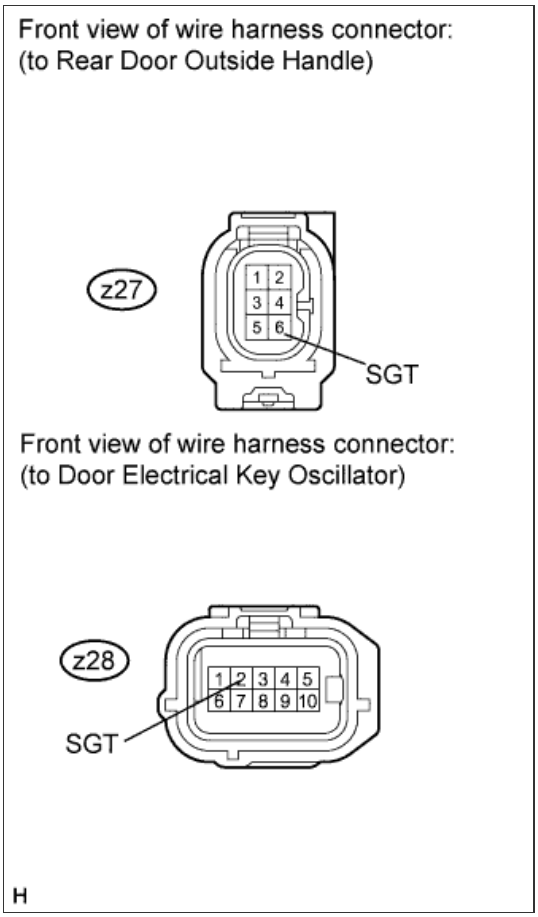

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

7.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → Go to step 8

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

8.REPLACE REAR DOOR OUTSIDE HANDLE

a. Replace the rear door outside handle (Click here).

NEXT

9.CHECK REAR DOOR OUTSIDE HANDLE (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (REAR DOOR OUTSIDE HANDLE IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

If the rear door LH entry unlock function does not operate but the entry lock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be a touch sensor circuit (certification ECU (smart key ECU assembly) → rear door outside handle LH → rear door electrical key oscillator LH).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

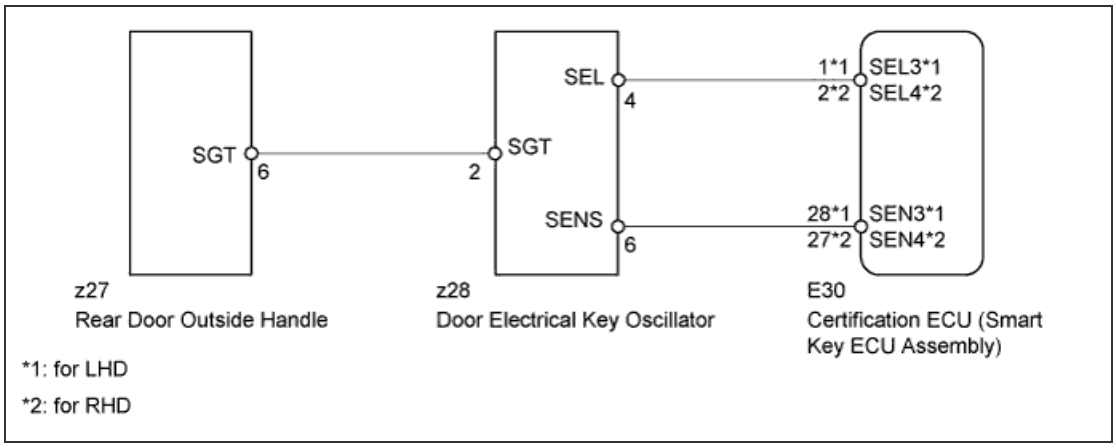

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door LH LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Touch Sensor	Driver side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Touch Sensor	Passenger side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

NG → Go to step 4

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E30 ECU connector.

b. Disconnect the z28 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

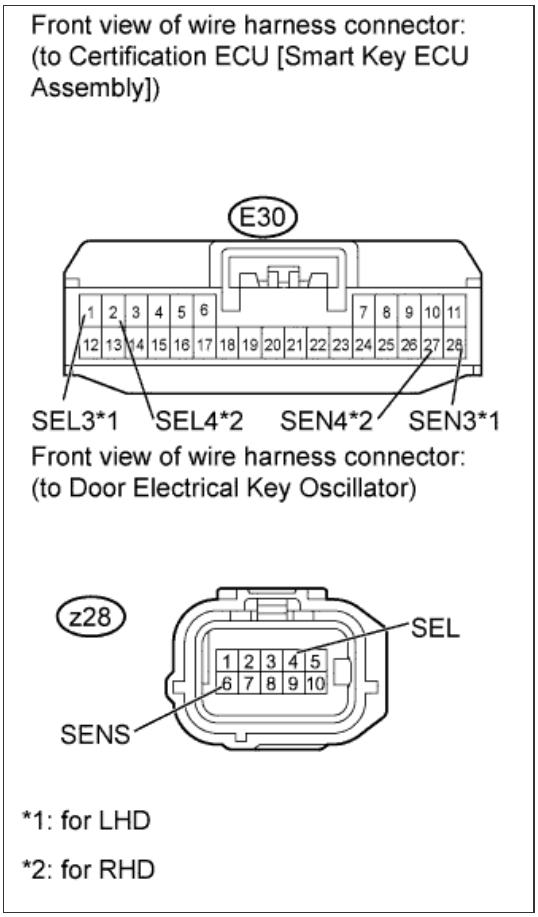

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E30-1 (SEL3) - z28-4 (SEL)	Always	Below 1 Ω
E30-28 (SEN3) - z28-6 (SENS)	Always	Below 1 Ω
E30-1 (SEL3) - Body ground	Always	10 kΩ or higher
E30-28 (SEN3) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E30-2 (SEL4) - z28-4 (SEL)	Always	Below 1 Ω
E30-27 (SEN4) - z28-6 (SENS)	Always	Below 1 Ω
E30-2 (SEL4) - Body ground	Always	10 kΩ or higher
E30-27 (SEN4) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

5.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - REAR DOOR OUTSIDE HANDLE)


a. Disconnect the z27 handle connector.

b. Disconnect the z28 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z27-6 (SGT) - z28-2 (SGT)	Always	Below 1 Ω
z27-6 (SGT) - Body ground	Always	10 kΩ or higher

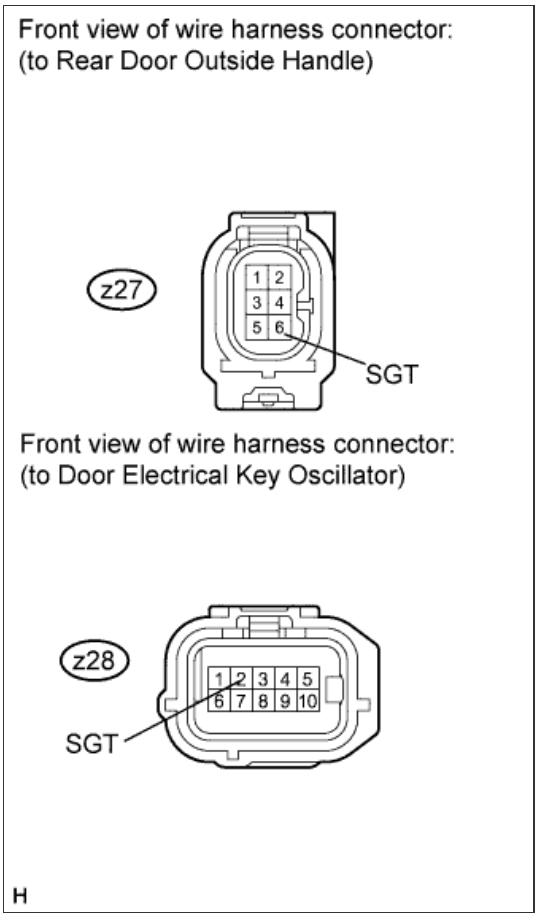

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

7.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → Go to step 8

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

8.REPLACE REAR DOOR OUTSIDE HANDLE

a. Replace the rear door outside handle (Click here).

NEXT

9.CHECK REAR DOOR OUTSIDE HANDLE (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (REAR DOOR OUTSIDE HANDLE IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

If the rear door RH entry unlock function does not operate but the entry lock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be a touch sensor circuit (certification ECU (smart key ECU assembly) → rear door outside handle RH → rear door electrical key oscillator RH).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

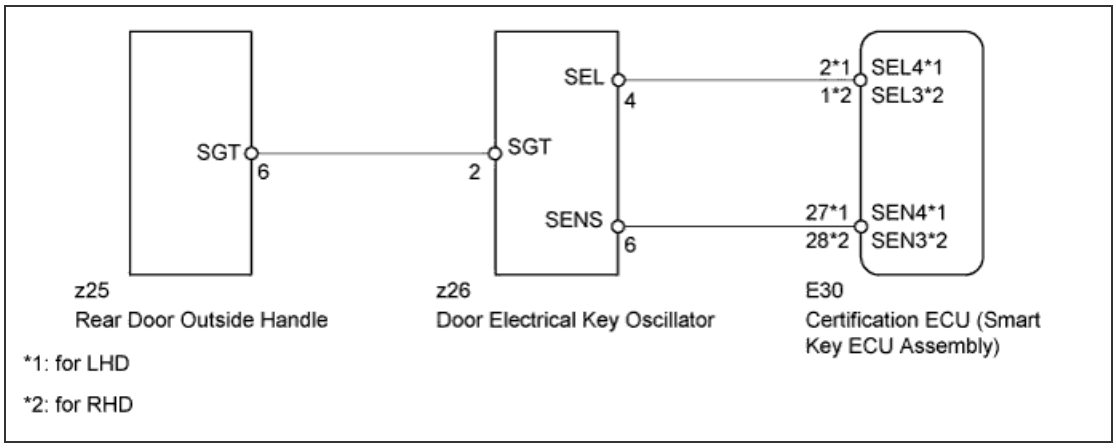

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → **GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door RH LOCK/UNLOCK Functions do not Operate) (Click here)**

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Touch Sensor	Passenger side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Touch Sensor	Driver side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

NG → **Go to step 4**

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E30 ECU connector.

b. Disconnect the z26 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

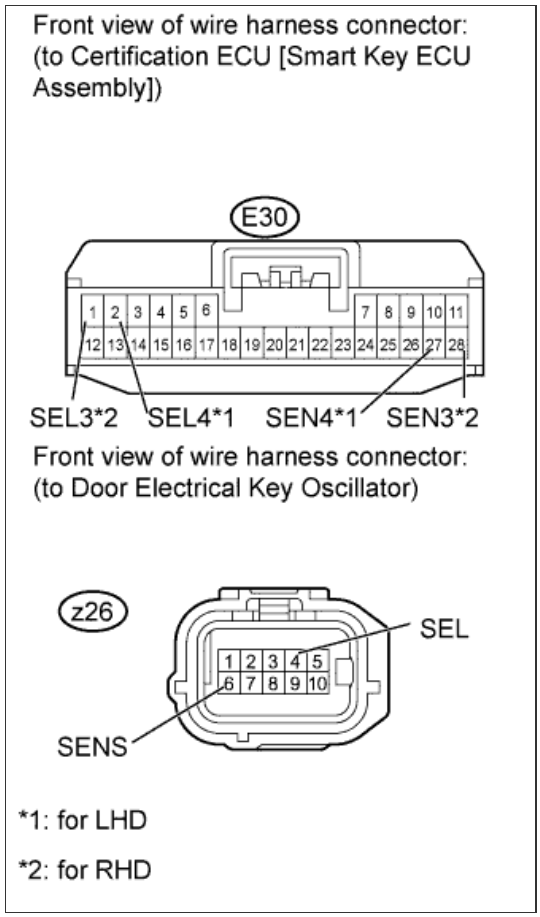

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E30-2 (SEL4) - z26-4 (SEL)	Always	Below 1 Ω
E30-27 (SEN4) - z26-6 (SENS)	Always	Below 1 Ω
E30-2 (SEL4) - Body ground	Always	10 kΩ or higher
E30-27 (SEN4) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E30-1 (SEL3) - z26-4 (SEL)	Always	Below 1 Ω
E30-28 (SEN3) - z26-6 (SENS)	Always	Below 1 Ω
E30-1 (SEL3) - Body ground	Always	10 kΩ or higher
E30-28 (SEN3) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

5.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - REAR DOOR OUTSIDE HANDLE)


a. Disconnect the z25 handle connector.

b. Disconnect the z26 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z25-6 (SGT) - z26-2 (SGT)	Always	Below 1 Ω
z25-6 (SGT) - Body ground	Always	10 kΩ or higher

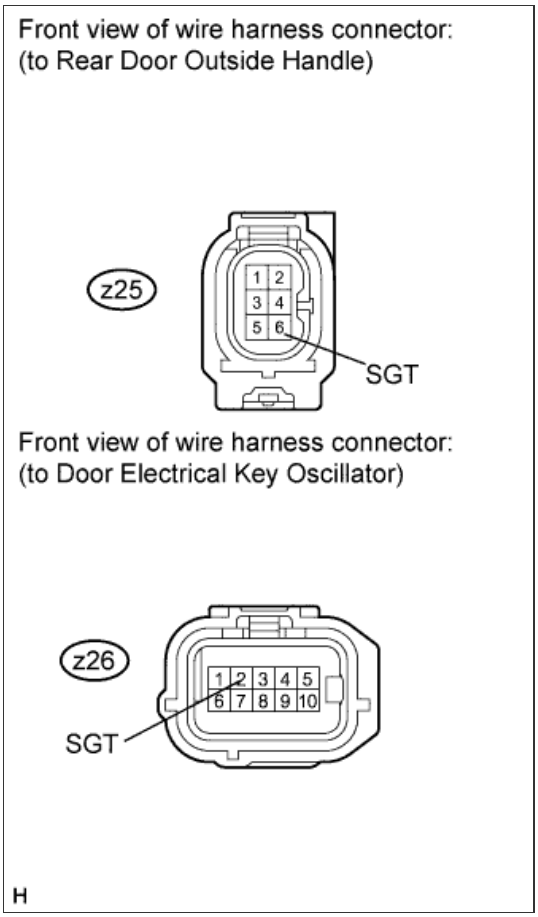

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

7.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → Go to step 8

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

8.REPLACE REAR DOOR OUTSIDE HANDLE

a. Replace the rear door outside handle (Click here).

NEXT

9.CHECK REAR DOOR OUTSIDE HANDLE (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (REAR DOOR OUTSIDE HANDLE IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

If the rear door RH entry unlock function does not operate but the entry lock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be a touch sensor circuit (certification ECU (smart key ECU assembly) → rear door outside handle RH → rear door electrical key oscillator RH).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

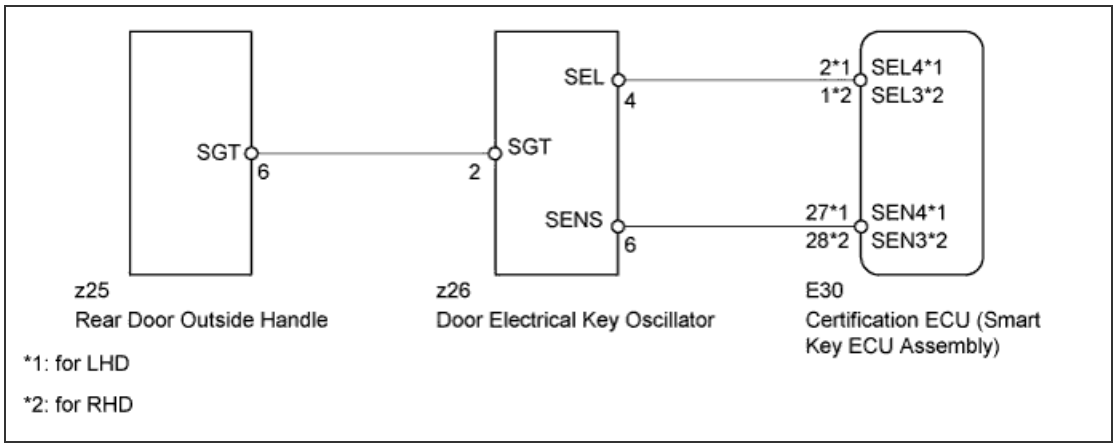

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → **GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door RH LOCK/UNLOCK Functions do not Operate) (Click here)**

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Touch Sensor	Passenger side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Touch Sensor	Driver side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-

OK:
"ON" (sensor is touched) and "OFF" (sensor is not touched) appears on the screen.

NG → **Go to step 4**

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E30 ECU connector.

b. Disconnect the z26 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

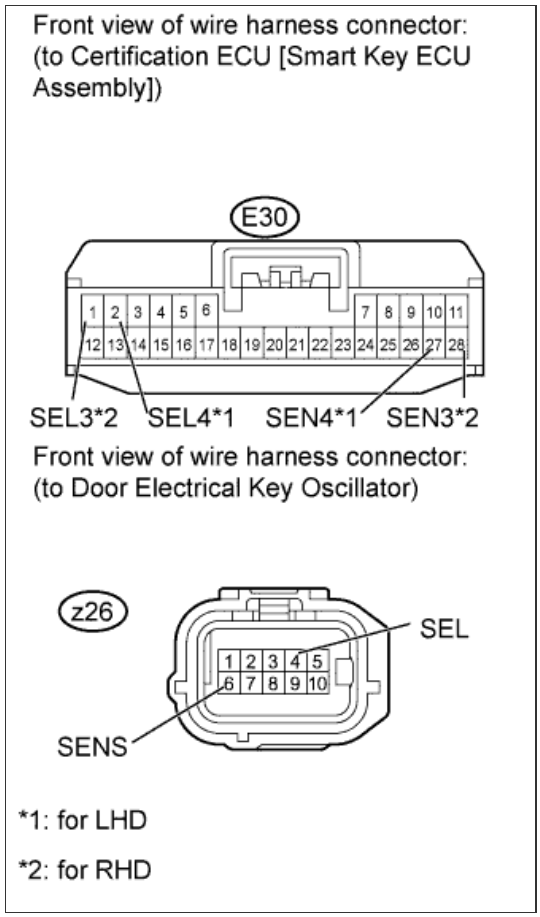

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E30-2 (SEL4) - z26-4 (SEL)	Always	Below 1 Ω
E30-27 (SEN4) - z26-6 (SENS)	Always	Below 1 Ω
E30-2 (SEL4) - Body ground	Always	10 kΩ or higher
E30-27 (SEN4) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E30-1 (SEL3) - z26-4 (SEL)	Always	Below 1 Ω
E30-28 (SEN3) - z26-6 (SENS)	Always	Below 1 Ω
E30-1 (SEL3) - Body ground	Always	10 kΩ or higher
E30-28 (SEN3) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

5.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - REAR DOOR OUTSIDE HANDLE)


a. Disconnect the z25 handle connector.

b. Disconnect the z26 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z25-6 (SGT) - z26-2 (SGT)	Always	Below 1 Ω
z25-6 (SGT) - Body ground	Always	10 kΩ or higher

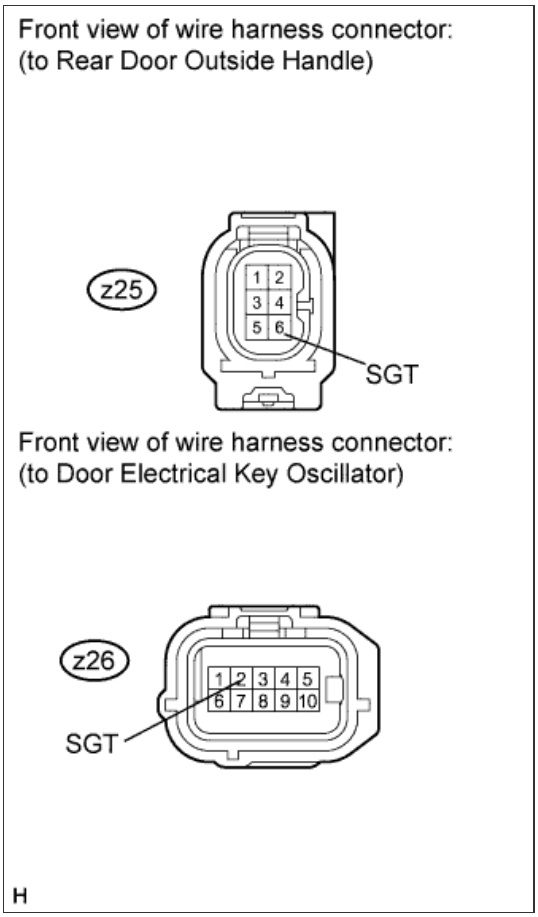

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

7.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → Go to step 8

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

8.REPLACE REAR DOOR OUTSIDE HANDLE

a. Replace the rear door outside handle (Click here).

NEXT

9.CHECK REAR DOOR OUTSIDE HANDLE (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (REAR DOOR OUTSIDE HANDLE IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

When the driver side door entry lock and unlock functions do not operate, one of the following may be malfunctioning: 1) power door lock system, 2) driver side door electrical key oscillator, or 3) certification ECU (smart key ECU assembly).

WIRING DIAGRAM

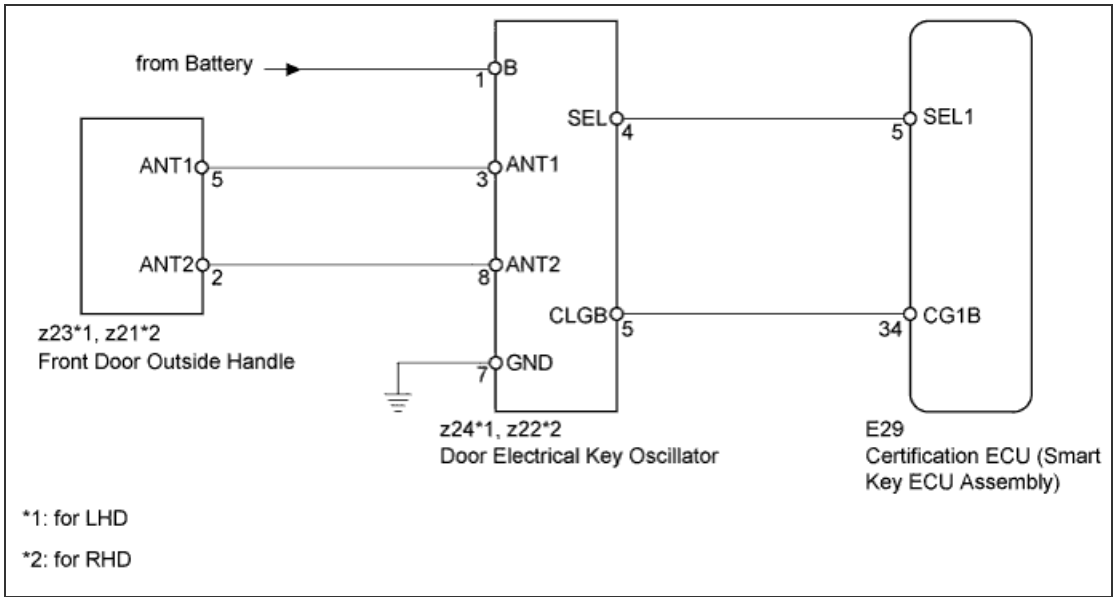

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D Door Lock Position SW	Driver side door lock position switch signal / ON or OFF	ON: Driver side door unlocked OFF: Driver side door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to

NG → Only Driver Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D-Door Touch Sensor	Driver side door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
D-Door Trigger Switch	Driver side door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

Result

Result	Proceed to
Display changes according to manual operation	A
Display does not change according to manual operation	B

B → REPLACE FRONT DOOR OUTSIDE HANDLE (Click here)

A

4.CHECK WAVE ENVIRONMENT


a. Bring the electrical key transmitter near the driver side door outside handle, and perform a driver side door entry lock and unlock operation check.

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication is not possible.

HINT:

- **When the electrical key transmitter is brought near the driver side door outside handle, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **If the operation check is normal, the possibility of wave interference is high. Also, added vehicle components may cause wave interference. If installed, remove them and perform the operation check.**

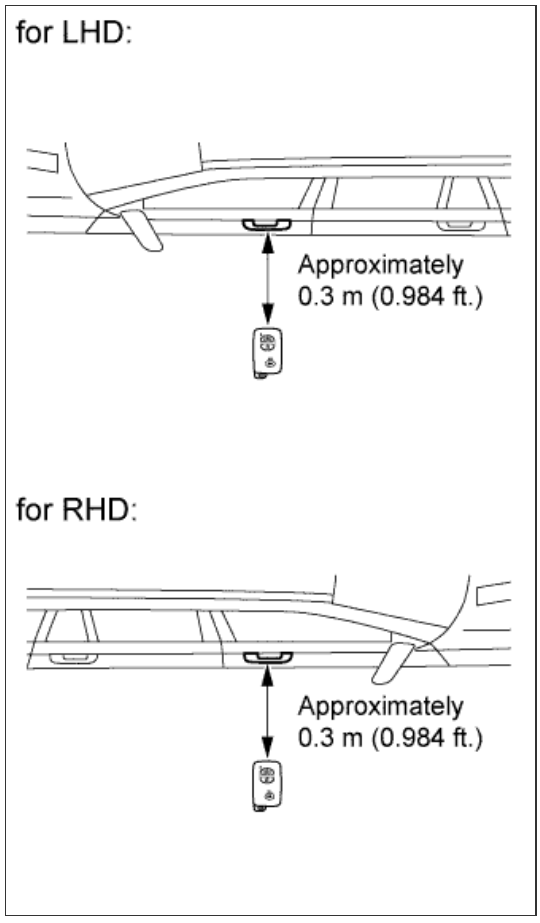

Result

Result	Proceed to
Operation check fails	A
Operation check is normal	B

B → AFFECTED BY WAVE INTERFERENCE

A

5.PERFORM KEY DIAGNOSTIC MODE INSPECTION

a. Diagnostic mode inspection (driver side door electrical key oscillator).

i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Driver Side.


v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

HINT:

If the buzzer sounds, it can be determined that the driver seat outside transmitter is operating normally.

OK:

Wireless door lock buzzer sounds.

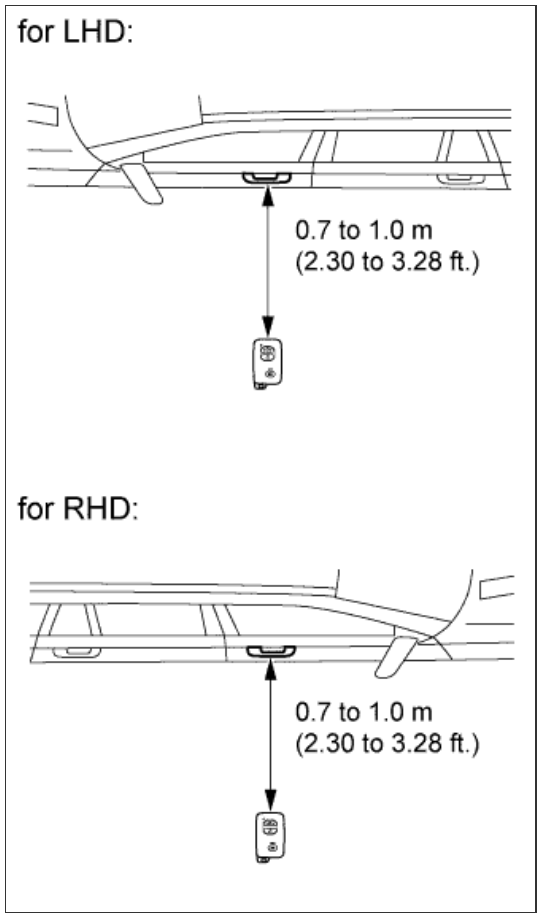

NG → Go to step 6

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


6.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E29 ECU connector.


b. Disconnect the z24 or z22 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

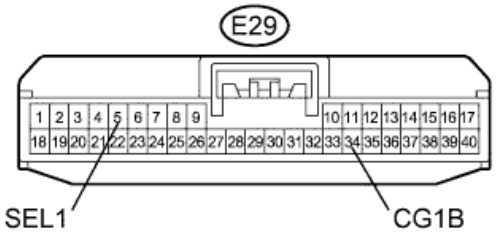

Front view of wire harness connector:
(to Door Electrical Key Oscillator)

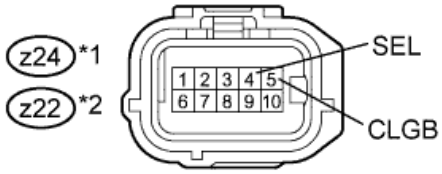

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E29-5 (SEL1) - z24-4 (SEL)	Always	Below 1 Ω
E29-34 (CG1B) - z24-5 (CLGB)	Always	Below 1 Ω
E29-5 (SEL1) - Body ground	Always	10 kΩ or higher
E29-34 (CG1B) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E29-5 (SEL1) - z22-4 (SEL)	Always	Below 1 Ω
E29-34 (CG1B) - z22-5 (CLGB)	Always	Below 1 Ω
E29-5 (SEL1) - Body ground	Always	10 kΩ or higher
E29-34 (CG1B) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


7.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the z23 or z21 handle connector.


b. Disconnect the z24 or z22 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Front Door Outside Handle)

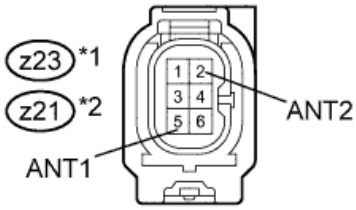

Front view of wire harness connector:
(to Door Electrical Key Oscillator)

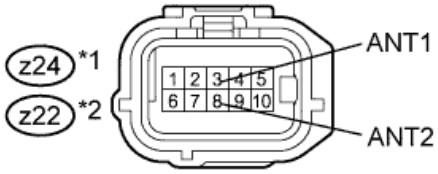

*1: for LHD

*2: for RHD

H

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
z23-2 (ANT2) - z24-8 (ANT2)	Always	Below 1 Ω
z23-5 (ANT1) - z24-3 (ANT1)	Always	Below 1 Ω
z23-2 (ANT2) - Body ground	Always	10 kΩ or higher
z23-5 (ANT1) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
z21-2 (ANT2) - z22-8 (ANT2)	Always	Below 1 Ω
z21-5 (ANT1) - z22-3 (ANT1)	Always	Below 1 Ω
z21-2 (ANT2) - Body ground	Always	10 kΩ or higher
z21-5 (ANT1) - Body ground	Always	10 kΩ or higher


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - BATTERY AND BODY GROUND)

a. Disconnect the z24 or z22 oscillator connector.

b. Measure the voltage according to the value(s) in the table below.

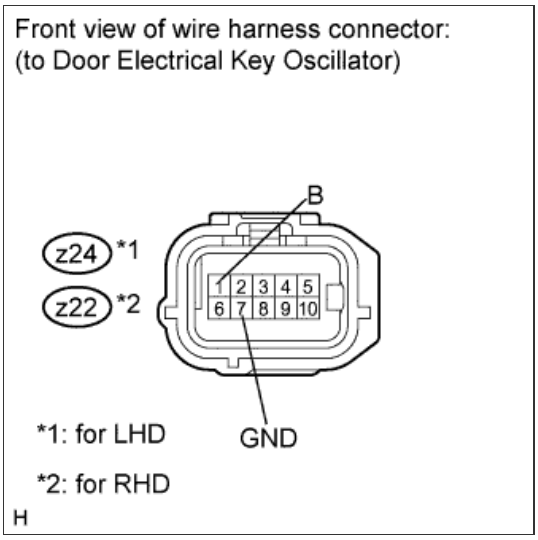

Standard Voltage:

for LHD:

Tester Connection	Condition	Specified Condition
z24-1 (B) - z24-7 (GND)	Always	11 to 14 V

for RHD:

Tester Connection	Condition	Specified Condition
z22-1 (B) - z22-7 (GND)	Always	11 to 14 V

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

10.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:

Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

When the driver side door entry lock and unlock functions do not operate, one of the following may be malfunctioning: 1) power door lock system, 2) driver side door electrical key oscillator, or 3) certification ECU (smart key ECU assembly).

WIRING DIAGRAM

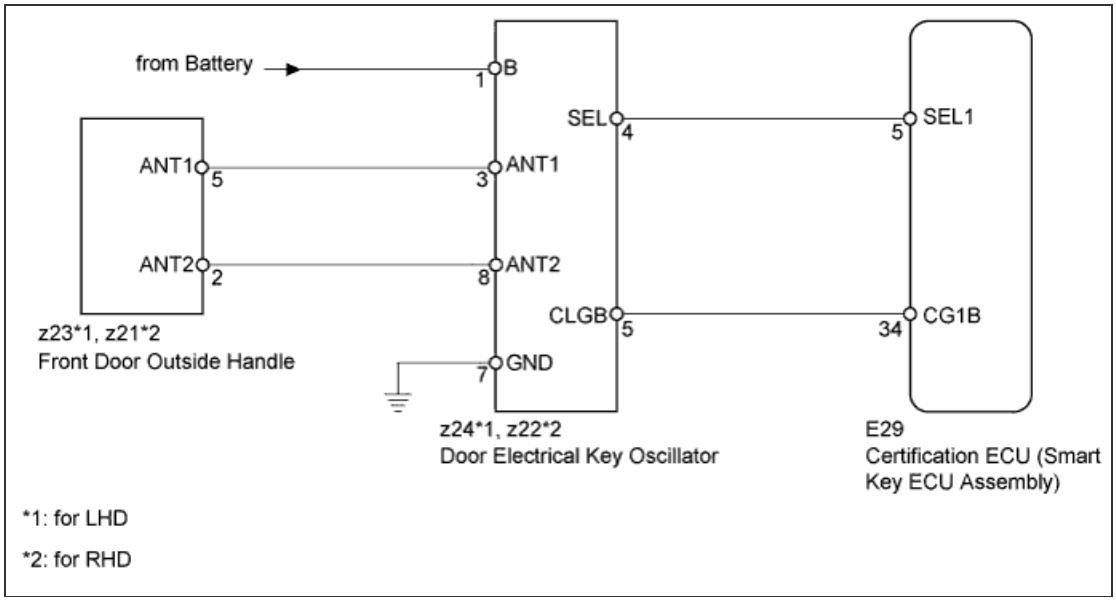

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D Door Lock Position SW	Driver side door lock position switch signal / ON or OFF	ON: Driver side door unlocked OFF: Driver side door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to

NG → Only Driver Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D-Door Touch Sensor	Driver side door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
D-Door Trigger Switch	Driver side door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

Result

Result	Proceed to
Display changes according to manual operation	A
Display does not change according to manual operation	B

B → REPLACE FRONT DOOR OUTSIDE HANDLE (Click here)

A

4.CHECK WAVE ENVIRONMENT


a. Bring the electrical key transmitter near the driver side door outside handle, and perform a driver side door entry lock and unlock operation check.

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication is not possible.

HINT:

- **When the electrical key transmitter is brought near the driver side door outside handle, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **If the operation check is normal, the possibility of wave interference is high. Also, added vehicle components may cause wave interference. If installed, remove them and perform the operation check.**

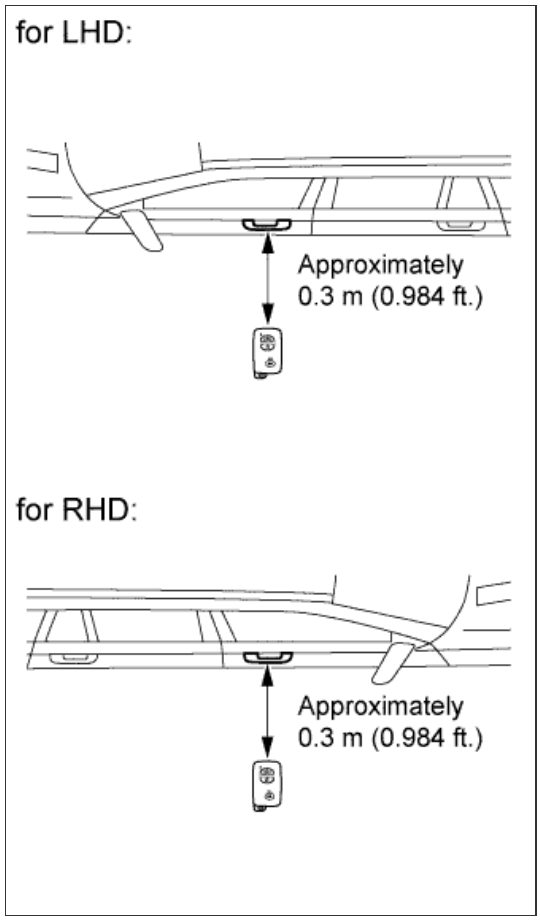

Result

Result	Proceed to
Operation check fails	A
Operation check is normal	B

B → AFFECTED BY WAVE INTERFERENCE

A

5.PERFORM KEY DIAGNOSTIC MODE INSPECTION

a. Diagnostic mode inspection (driver side door electrical key oscillator).

i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Driver Side.


v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

HINT:

If the buzzer sounds, it can be determined that the driver seat outside transmitter is operating normally.

OK:

Wireless door lock buzzer sounds.

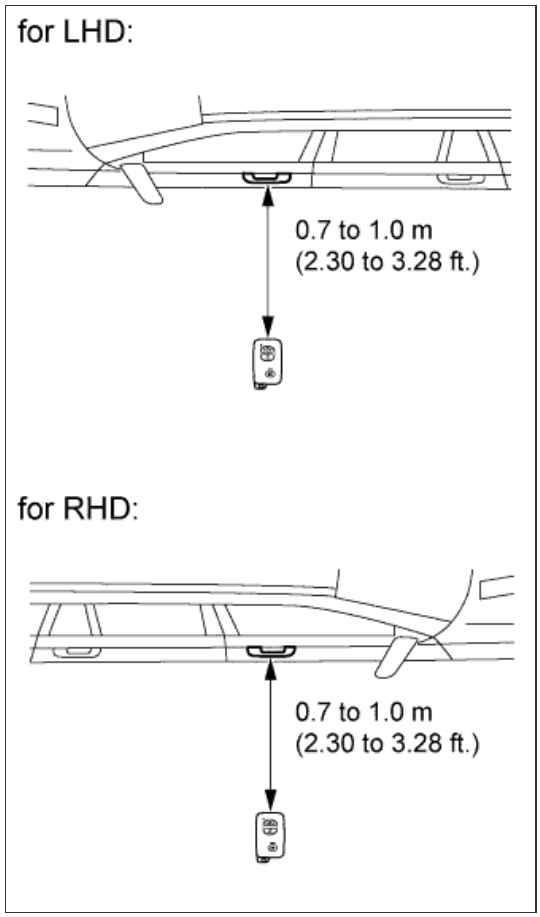

NG → Go to step 6

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


6.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E29 ECU connector.


b. Disconnect the z24 or z22 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

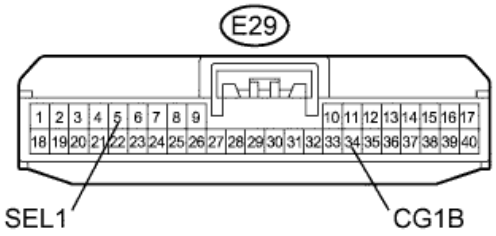

Front view of wire harness connector:
(to Door Electrical Key Oscillator)

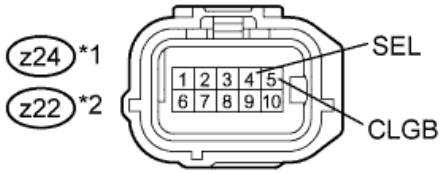

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E29-5 (SEL1) - z24-4 (SEL)	Always	Below 1 Ω
E29-34 (CG1B) - z24-5 (CLGB)	Always	Below 1 Ω
E29-5 (SEL1) - Body ground	Always	10 kΩ or higher
E29-34 (CG1B) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E29-5 (SEL1) - z22-4 (SEL)	Always	Below 1 Ω
E29-34 (CG1B) - z22-5 (CLGB)	Always	Below 1 Ω
E29-5 (SEL1) - Body ground	Always	10 kΩ or higher
E29-34 (CG1B) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


7.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the z23 or z21 handle connector.


b. Disconnect the z24 or z22 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Front Door Outside Handle)

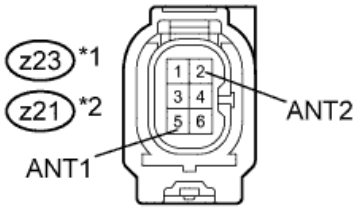

Front view of wire harness connector:
(to Door Electrical Key Oscillator)

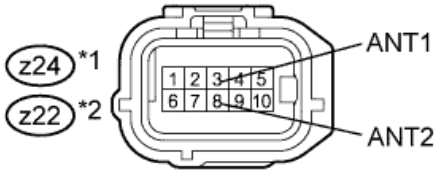

*1: for LHD

*2: for RHD

H

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
z23-2 (ANT2) - z24-8 (ANT2)	Always	Below 1 Ω
z23-5 (ANT1) - z24-3 (ANT1)	Always	Below 1 Ω
z23-2 (ANT2) - Body ground	Always	10 kΩ or higher
z23-5 (ANT1) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
z21-2 (ANT2) - z22-8 (ANT2)	Always	Below 1 Ω
z21-5 (ANT1) - z22-3 (ANT1)	Always	Below 1 Ω
z21-2 (ANT2) - Body ground	Always	10 kΩ or higher
z21-5 (ANT1) - Body ground	Always	10 kΩ or higher


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - BATTERY AND BODY GROUND)

a. Disconnect the z24 or z22 oscillator connector.

b. Measure the voltage according to the value(s) in the table below.

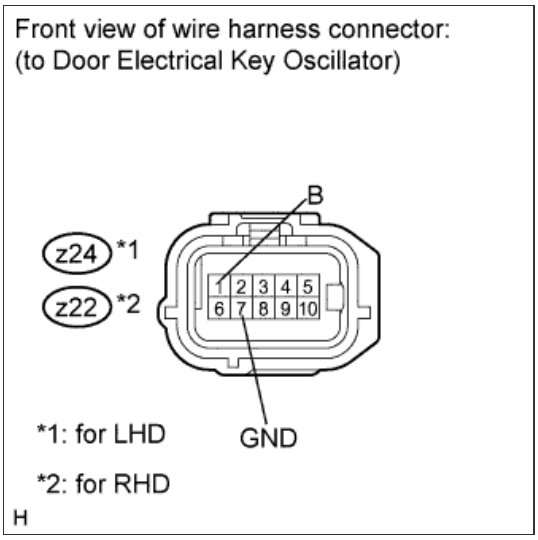

Standard Voltage:

for LHD:

Tester Connection	Condition	Specified Condition
z24-1 (B) - z24-7 (GND)	Always	11 to 14 V

for RHD:

Tester Connection	Condition	Specified Condition
z22-1 (B) - z22-7 (GND)	Always	11 to 14 V

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

10.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:

Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

When the front passenger side door entry lock and unlock functions do not operate, one of the following may be malfunctioning: 1) power door lock system, 2) front passenger side door electrical key oscillator, or 3) certification ECU (smart key ECU assembly).

WIRING DIAGRAM

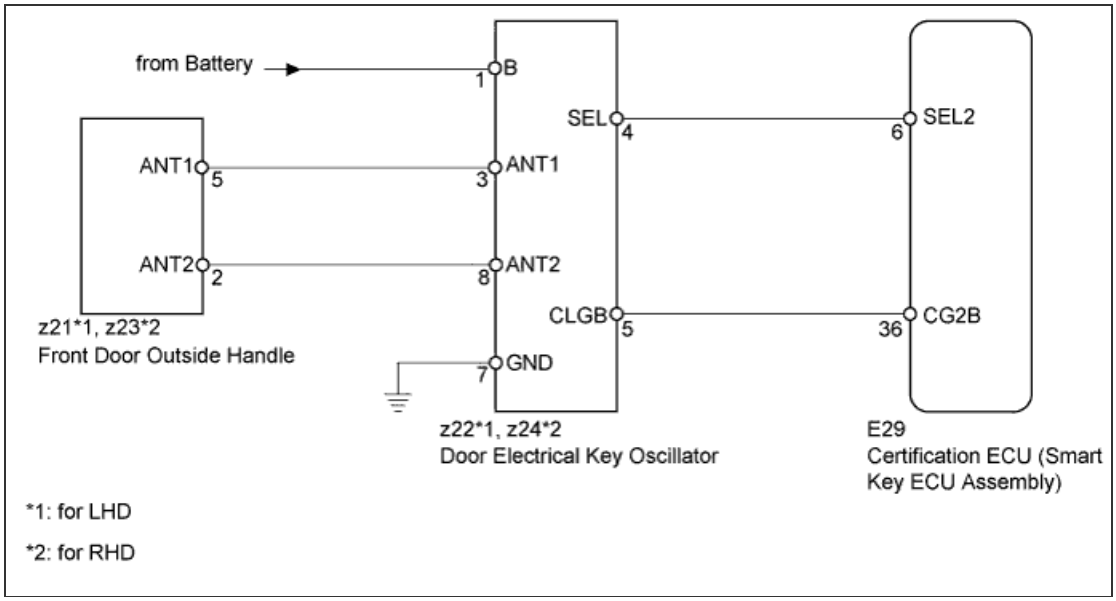

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:

Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P Door Lock Position SW	Front passenger side door lock position switch signal / ON or OFF	ON: Front passenger side door unlocked OFF: Front passenger side door locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Passenger Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P-Door Touch Sensor	Front passenger side door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
P-Door Trigger Switch	Front passenger side door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

Result

Result	Proceed to
Display changes according to manual operation	A
Display does not change according to manual operation	B

B → REPLACE FRONT DOOR OUTSIDE HANDLE (Click here)

A

4.CHECK WAVE ENVIRONMENT

a. Bring the electrical key transmitter near the front passenger side door outside handle, and perform a front passenger side door entry lock and unlock operation check.

NOTICE:


If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication is not possible.

HINT:

- **When the electrical key transmitter is brought near the front passenger side door outside handle, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **If the operation check is normal, the possibility of wave interference is high. Also, added vehicle components may cause wave interference. If installed, remove them and perform the operation check.**

Result

Result	Proceed to
Operation check fails	A
Operation check is normal	B

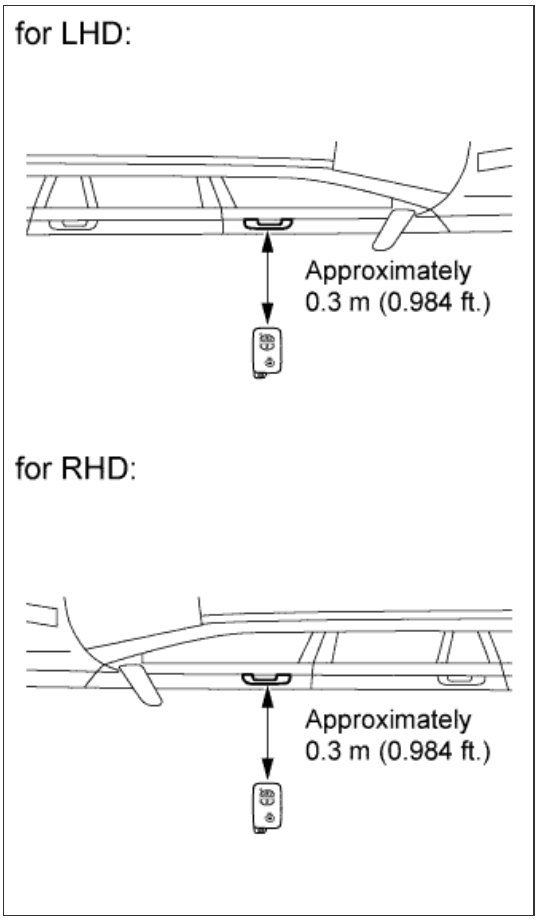

B → AFFECTED BY WAVE INTERFERENCE

A

5.PERFORM KEY DIAGNOSTIC MODE INSPECTION

a. Diagnostic mode inspection (front passenger side door electrical key oscillator).

i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Passenger Side.


v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

HINT:

If the buzzer sounds, it can be determined that the front passenger seat outside transmitter is operating normally.

OK:

Wireless door lock buzzer sounds.

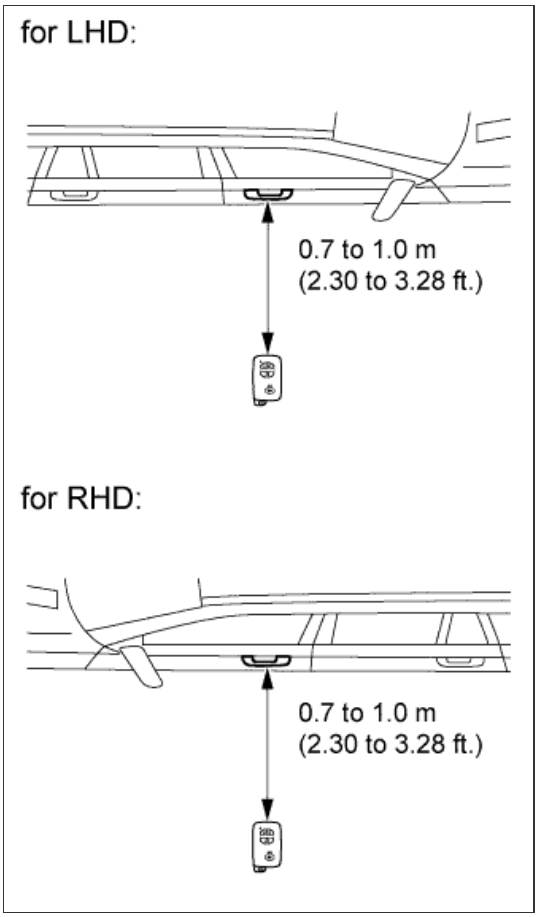

NG → Go to step 6

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


6.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E29 ECU connector.


b. Disconnect the z22 or z24 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

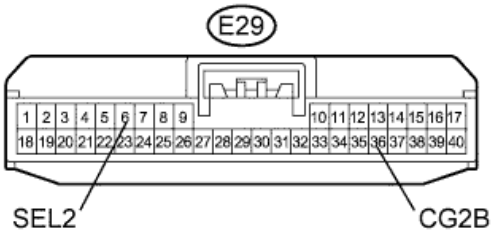

Front view of wire harness connector:
(to Door Electrical Key Oscillator)

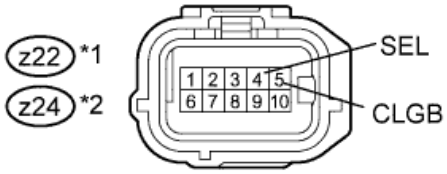

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E29-6 (SEL2) - z22-4 (SEL)	Always	Below 1 Ω
E29-36 (CG2B) - z22-5 (CLGB)	Always	Below 1 Ω
E29-6 (SEL2) - Body ground	Always	10 kΩ or higher
E29-36 (CG2B) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E29-6 (SEL2) - z24-4 (SEL)	Always	Below 1 Ω
E29-36 (CG2B) - z24-5 (CLGB)	Always	Below 1 Ω
E29-6 (SEL2) - Body ground	Always	10 kΩ or higher
E29-36 (CG2B) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

7.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the z21 or z23 handle connector.

b. Disconnect the z22 or z24 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

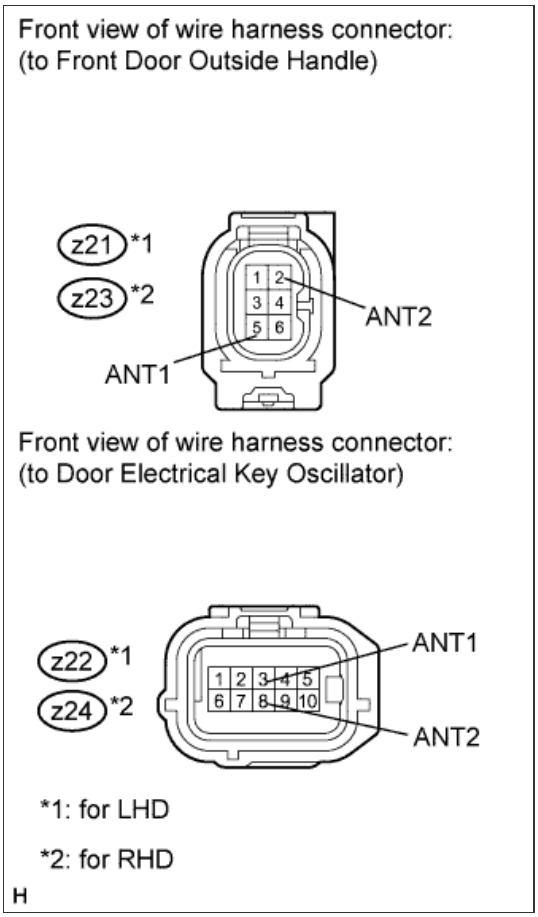

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
z21-2 (ANT2) - z22-8 (ANT2)	Always	Below 1 Ω
z21-5 (ANT1) - z22-3 (ANT1)	Always	Below 1 Ω
z21-2 (ANT2) - Body ground	Always	10 kΩ or higher
z21-5 (ANT1) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
z23-2 (ANT2) - z24-8 (ANT2)	Always	Below 1 Ω
z23-5 (ANT1) - z24-3 (ANT1)	Always	Below 1 Ω
z23-2 (ANT2) - Body ground	Always	10 kΩ or higher
z23-5 (ANT1) - Body ground	Always	10 kΩ or higher


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - BATTERY AND BODY GROUND)

a. Disconnect the z22 or z24 oscillator connector.

b. Measure the voltage according to the value(s) in the table below.

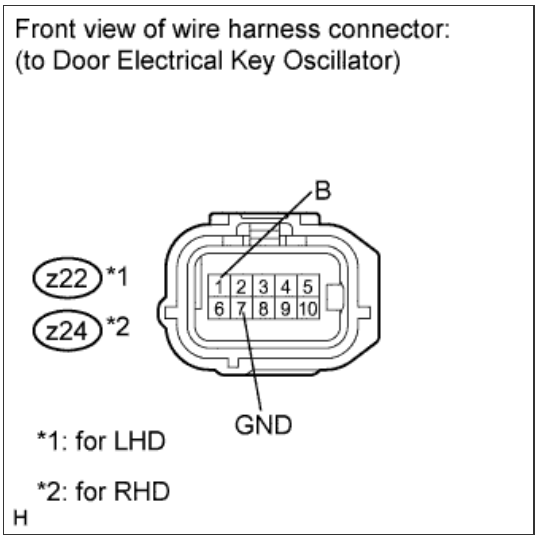

Standard Voltage:

for LHD:

Tester Connection	Condition	Specified Condition
z22-1 (B) - z22-7 (GND)	Always	11 to 14 V

for RHD:

Tester Connection	Condition	Specified Condition
z24-1 (B) - z24-7 (GND)	Always	11 to 14 V

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

10.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:

Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

When the front passenger side door entry lock and unlock functions do not operate, one of the following may be malfunctioning: 1) power door lock system, 2) front passenger side door electrical key oscillator, or 3) certification ECU (smart key ECU assembly).

WIRING DIAGRAM

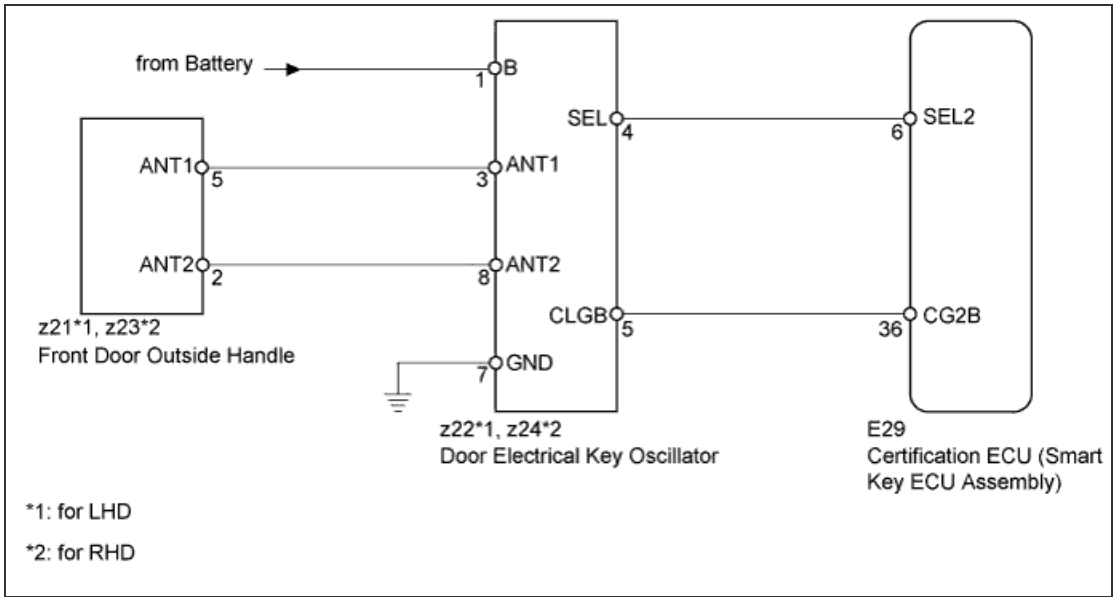

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:

Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P Door Lock Position SW	Front passenger side door lock position switch signal / ON or OFF	ON: Front passenger side door unlocked OFF: Front passenger side door locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Passenger Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P-Door Touch Sensor	Front passenger side door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
P-Door Trigger Switch	Front passenger side door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

Result

Result	Proceed to
Display changes according to manual operation	A
Display does not change according to manual operation	B

B → REPLACE FRONT DOOR OUTSIDE HANDLE (Click here)

A

4.CHECK WAVE ENVIRONMENT

a. Bring the electrical key transmitter near the front passenger side door outside handle, and perform a front passenger side door entry lock and unlock operation check.

NOTICE:


If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication is not possible.

HINT:

- **When the electrical key transmitter is brought near the front passenger side door outside handle, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **If the operation check is normal, the possibility of wave interference is high. Also, added vehicle components may cause wave interference. If installed, remove them and perform the operation check.**

Result

Result	Proceed to
Operation check fails	A
Operation check is normal	B

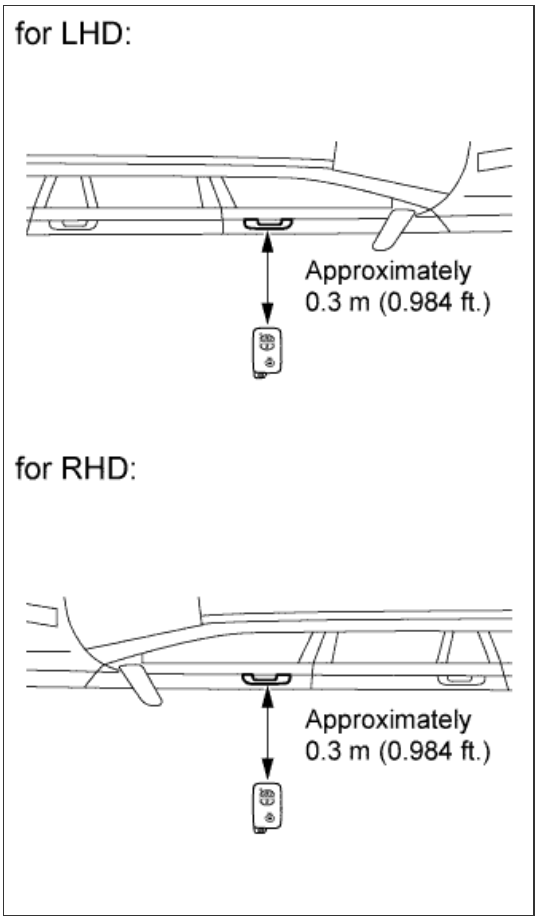

B → AFFECTED BY WAVE INTERFERENCE

A

5.PERFORM KEY DIAGNOSTIC MODE INSPECTION

a. Diagnostic mode inspection (front passenger side door electrical key oscillator).

i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Passenger Side.


v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

HINT:

If the buzzer sounds, it can be determined that the front passenger seat outside transmitter is operating normally.

OK:

Wireless door lock buzzer sounds.

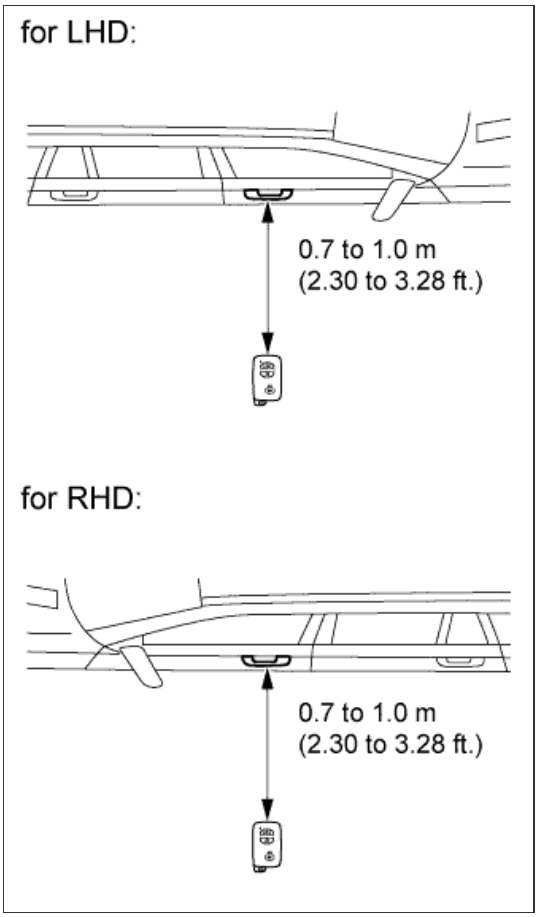

NG → Go to step 6

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


6.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E29 ECU connector.


b. Disconnect the z22 or z24 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

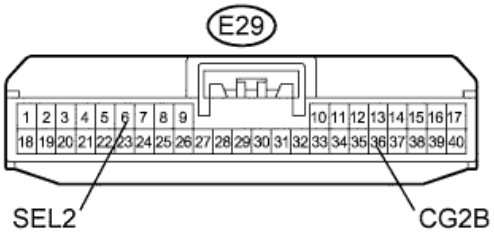

Front view of wire harness connector:
(to Door Electrical Key Oscillator)

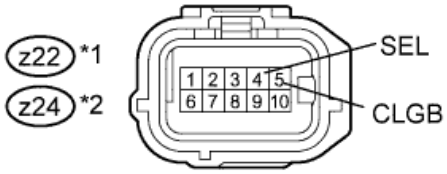

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E29-6 (SEL2) - z22-4 (SEL)	Always	Below 1 Ω
E29-36 (CG2B) - z22-5 (CLGB)	Always	Below 1 Ω
E29-6 (SEL2) - Body ground	Always	10 kΩ or higher
E29-36 (CG2B) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E29-6 (SEL2) - z24-4 (SEL)	Always	Below 1 Ω
E29-36 (CG2B) - z24-5 (CLGB)	Always	Below 1 Ω
E29-6 (SEL2) - Body ground	Always	10 kΩ or higher
E29-36 (CG2B) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

7.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the z21 or z23 handle connector.

b. Disconnect the z22 or z24 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

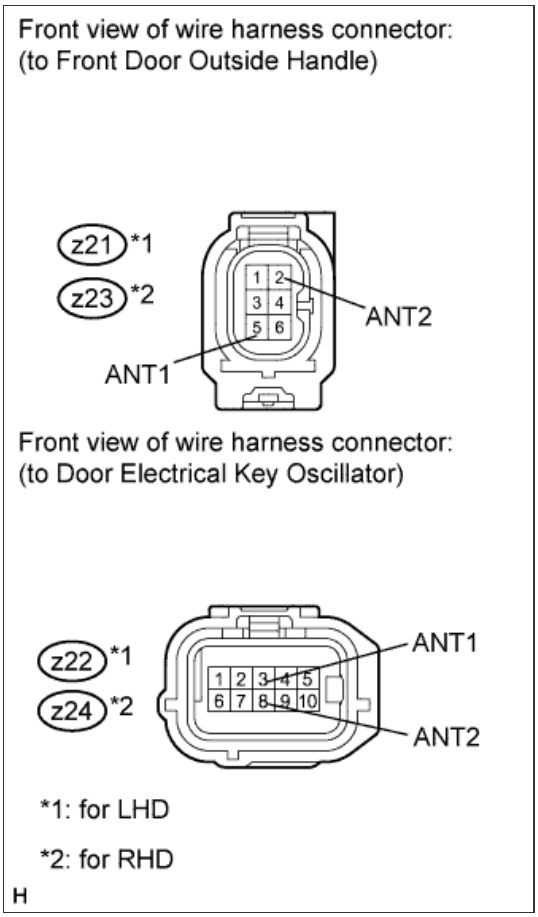

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
z21-2 (ANT2) - z22-8 (ANT2)	Always	Below 1 Ω
z21-5 (ANT1) - z22-3 (ANT1)	Always	Below 1 Ω
z21-2 (ANT2) - Body ground	Always	10 kΩ or higher
z21-5 (ANT1) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
z23-2 (ANT2) - z24-8 (ANT2)	Always	Below 1 Ω
z23-5 (ANT1) - z24-3 (ANT1)	Always	Below 1 Ω
z23-2 (ANT2) - Body ground	Always	10 kΩ or higher
z23-5 (ANT1) - Body ground	Always	10 kΩ or higher


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - BATTERY AND BODY GROUND)

a. Disconnect the z22 or z24 oscillator connector.

b. Measure the voltage according to the value(s) in the table below.

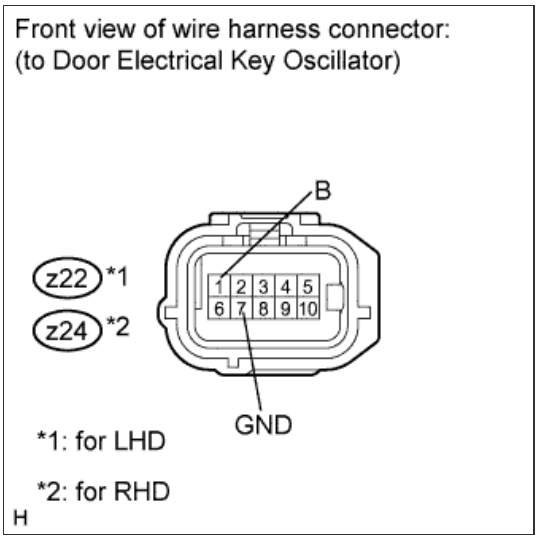

Standard Voltage:

for LHD:

Tester Connection	Condition	Specified Condition
z22-1 (B) - z22-7 (GND)	Always	11 to 14 V

for RHD:

Tester Connection	Condition	Specified Condition
z24-1 (B) - z24-7 (GND)	Always	11 to 14 V

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

10.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:

Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

When the rear door LH entry lock and unlock functions do not operate, one of the following may be malfunctioning: 1) power door lock system, 2) rear door electrical key oscillator LH, or 3) certification ECU (smart key ECU assembly).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

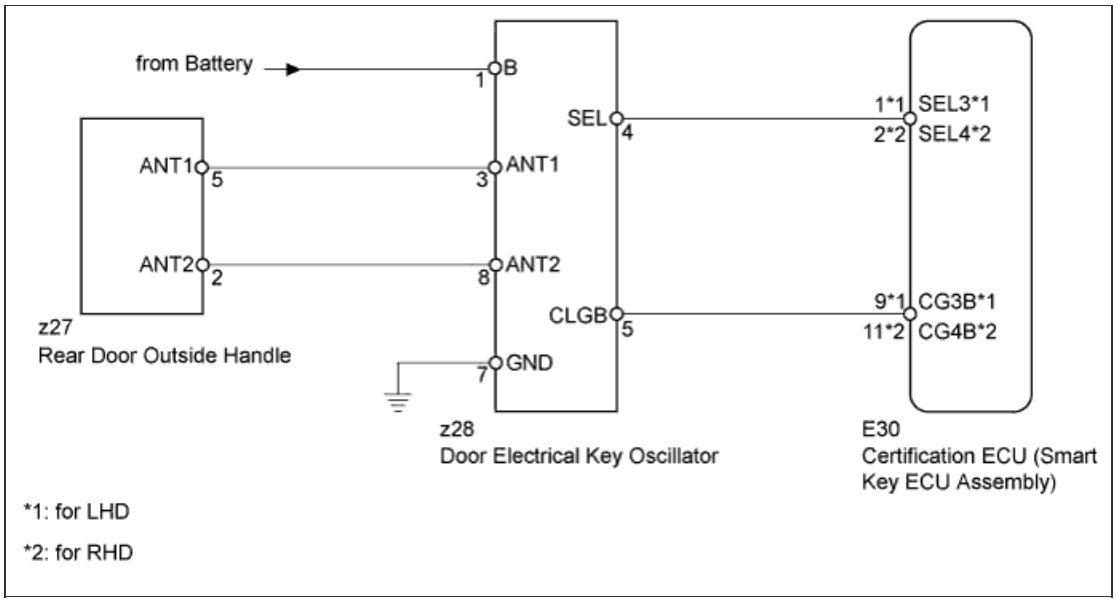

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
		ON: Driver side rear door	

DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	unlocked OFF: Driver side rear door locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → **GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door LH LOCK/UNLOCK Functions do not Operate) (Click here)**

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Touch Sensor	Driver side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
Dr-Door Trigger Switch	Driver side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Touch Sensor	Passenger side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
Pr-Door Trigger Switch	Passenger side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

Result


Result	Proceed to
Display changes according to manual operation	A
Display does not change according to manual operation	B

B → **REPLACE REAR DOOR OUTSIDE HANDLE (Click here)**

A

4.CHECK WAVE ENVIRONMENT

a. Bring the electrical key transmitter near the rear door outside handle LH, and perform a rear door LH entry lock and unlock operation check.

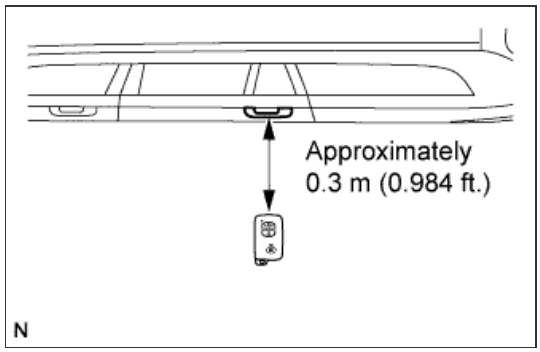

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication is not possible.

HINT:

- **When the electrical key transmitter is brought near the rear door outside handle LH, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **If the operation check is normal, the possibility of wave interference is high. Also, added vehicle components may cause wave interference. If installed, remove them and perform the operation check.**

Result


Result	Proceed to
Operation check fails	A
Operation check is normal	B

B → AFFECTED BY WAVE INTERFERENCE

A

5.PERFORM KEY DIAGNOSTIC MODE INSPECTION

a. Diagnostic mode inspection (rear door electrical key oscillator LH).

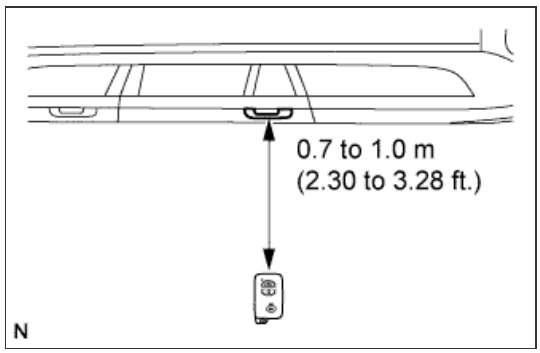

i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus:
for LHD
Select: Body / Entry & Start / Key Communication Check / Overhead + Driver Side Rear.
for RHD
Select: Body / Entry & Start / Key Communication Check / Overhead + Passenger Side Rear.

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

HINT:

If the buzzer sounds, it can be determined that the rear LH seat outside transmitter is operating normally.

OK:
Wireless door lock buzzer sounds.

NG → Go to step 6

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

6.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E30 ECU connector.

b. Disconnect the z28 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

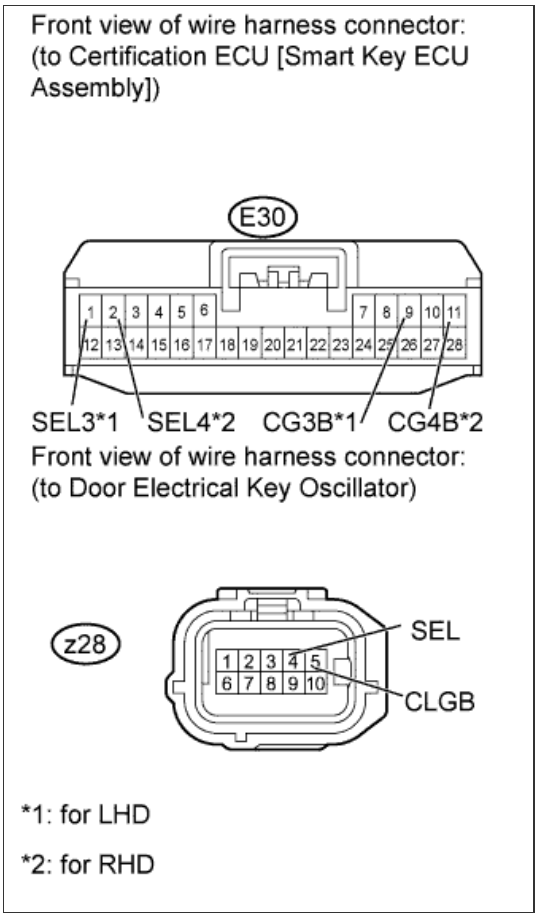

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E30-1 (SEL3) - z28-4 (SEL)	Always	Below 1 Ω
E30-9 (CG3B) - z28-5 (CLGB)	Always	Below 1 Ω
E30-1 (SEL3) - Body ground	Always	10 kΩ or higher
E30-9 (CG3B) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E30-2 (SEL4) - z28-4 (SEL)	Always	Below 1 Ω
E30-11 (CG4B) - z28-5 (CLGB)	Always	Below 1 Ω
E30-2 (SEL4) - Body ground	Always	10 kΩ or higher
E30-11 (CG4B) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - REAR DOOR OUTSIDE HANDLE)


a. Disconnect the z27 handle connector.

b. Disconnect the z28 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z27-2 (ANT2) - z28-8 (ANT2)	Always	Below 1 Ω
z27-5 (ANT1) - z28-3 (ANT1)	Always	Below 1 Ω
z27-2 (ANT2) - Body ground	Always	10 kΩ or higher
z27-5 (ANT1) - Body ground	Always	10 kΩ or higher

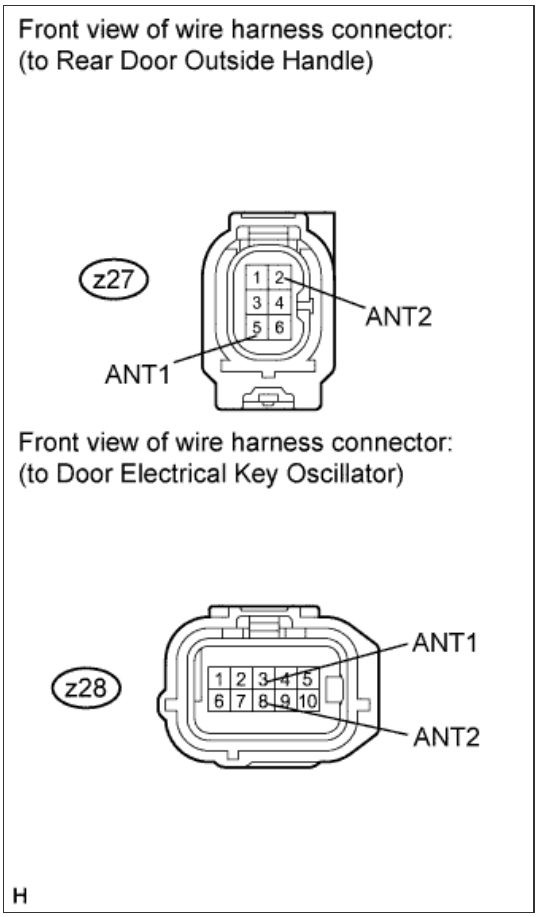

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


8.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - BATTERY AND BODY GROUND)

a. Disconnect the z28 oscillator connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
z28-1 (B) - z28-7 (GND)	Always	11 to 14 V

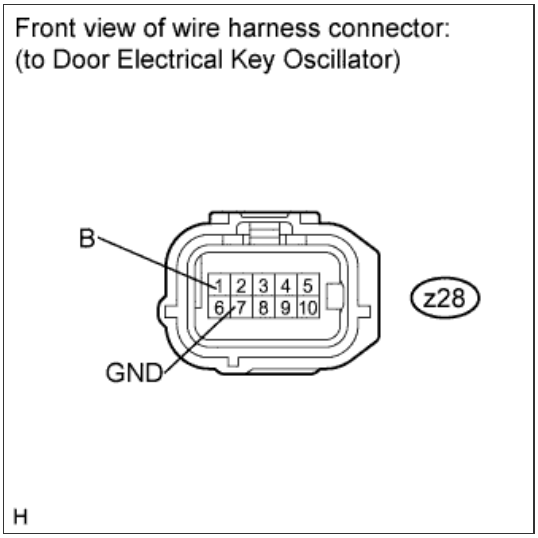

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

1 .CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

When the rear door LH entry lock and unlock functions do not operate, one of the following may be malfunctioning: 1) power door lock system, 2) rear door electrical key oscillator LH, or 3) certification ECU (smart key ECU assembly).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

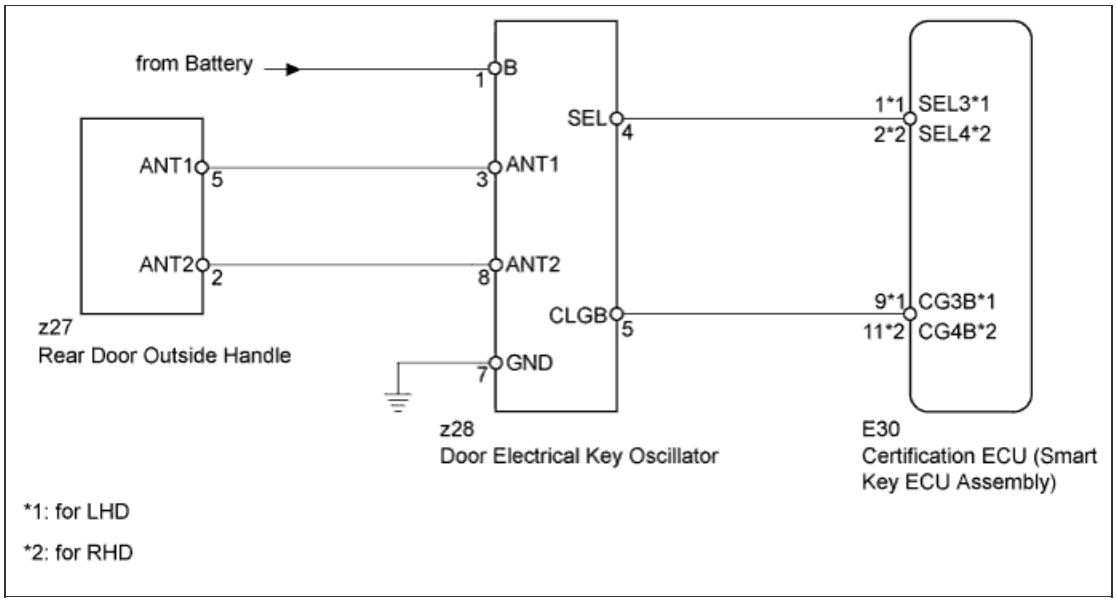

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
		ON: Driver side rear door	

DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	unlocked OFF: Driver side rear door locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → **GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door LH LOCK/UNLOCK Functions do not Operate) (Click here)**

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Touch Sensor	Driver side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
Dr-Door Trigger Switch	Driver side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Touch Sensor	Passenger side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
Pr-Door Trigger Switch	Passenger side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

Result


Result	Proceed to
Display changes according to manual operation	A
Display does not change according to manual operation	B

B → **REPLACE REAR DOOR OUTSIDE HANDLE (Click here)**

A

4.CHECK WAVE ENVIRONMENT

a. Bring the electrical key transmitter near the rear door outside handle LH, and perform a rear door LH entry lock and unlock operation check.

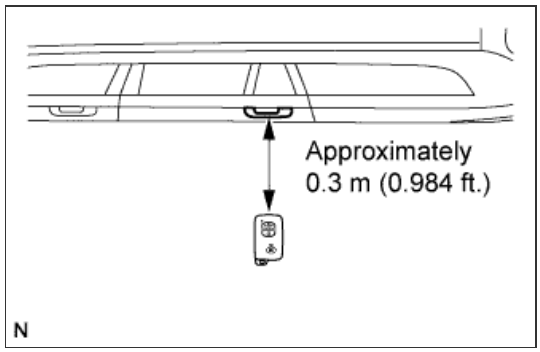

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication is not possible.

HINT:

- **When the electrical key transmitter is brought near the rear door outside handle LH, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **If the operation check is normal, the possibility of wave interference is high. Also, added vehicle components may cause wave interference. If installed, remove them and perform the operation check.**

Result


Result	Proceed to
Operation check fails	A
Operation check is normal	B

B → AFFECTED BY WAVE INTERFERENCE

A

5.PERFORM KEY DIAGNOSTIC MODE INSPECTION

a. Diagnostic mode inspection (rear door electrical key oscillator LH).

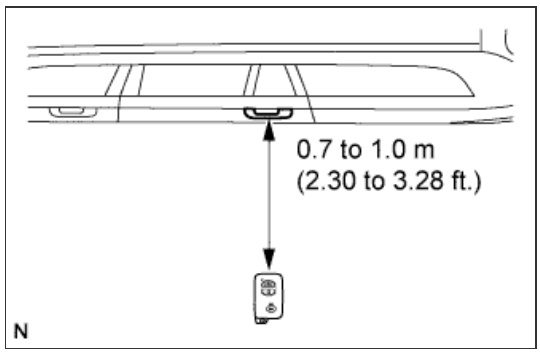

i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus:
for LHD
Select: Body / Entry & Start / Key Communication Check / Overhead + Driver Side Rear.
for RHD
Select: Body / Entry & Start / Key Communication Check / Overhead + Passenger Side Rear.

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

HINT:

If the buzzer sounds, it can be determined that the rear LH seat outside transmitter is operating normally.

OK:
Wireless door lock buzzer sounds.

NG → Go to step 6

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

6.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E30 ECU connector.

b. Disconnect the z28 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

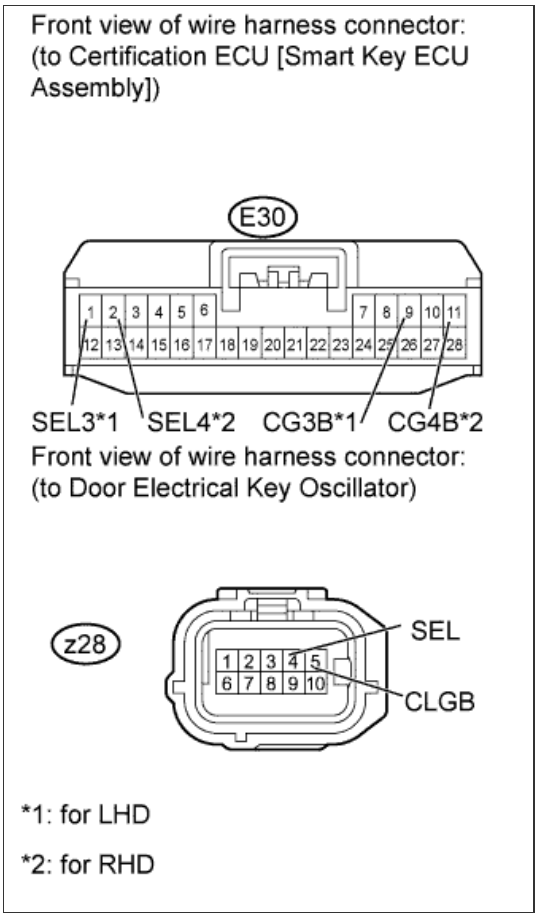

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E30-1 (SEL3) - z28-4 (SEL)	Always	Below 1 Ω
E30-9 (CG3B) - z28-5 (CLGB)	Always	Below 1 Ω
E30-1 (SEL3) - Body ground	Always	10 kΩ or higher
E30-9 (CG3B) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E30-2 (SEL4) - z28-4 (SEL)	Always	Below 1 Ω
E30-11 (CG4B) - z28-5 (CLGB)	Always	Below 1 Ω
E30-2 (SEL4) - Body ground	Always	10 kΩ or higher
E30-11 (CG4B) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - REAR DOOR OUTSIDE HANDLE)


a. Disconnect the z27 handle connector.

b. Disconnect the z28 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z27-2 (ANT2) - z28-8 (ANT2)	Always	Below 1 Ω
z27-5 (ANT1) - z28-3 (ANT1)	Always	Below 1 Ω
z27-2 (ANT2) - Body ground	Always	10 kΩ or higher
z27-5 (ANT1) - Body ground	Always	10 kΩ or higher

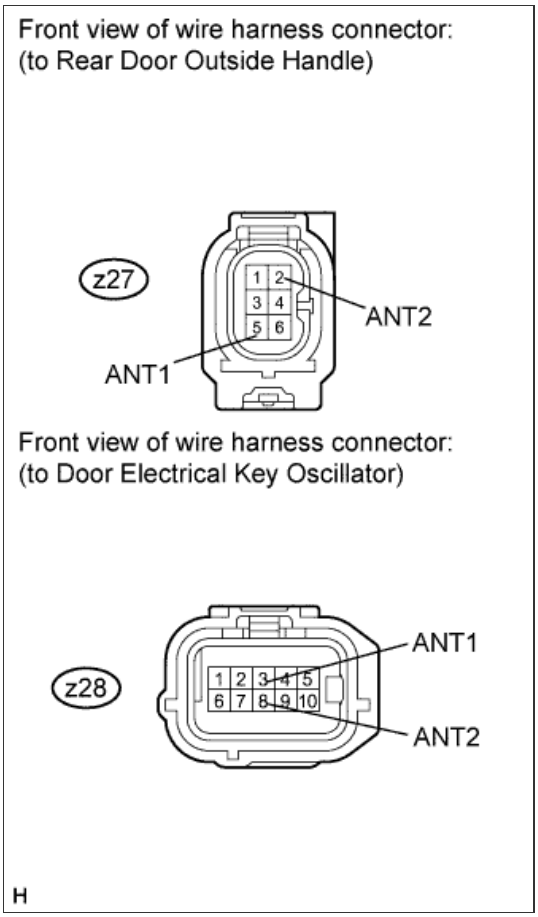

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


8.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - BATTERY AND BODY GROUND)

a. Disconnect the z28 oscillator connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
z28-1 (B) - z28-7 (GND)	Always	11 to 14 V

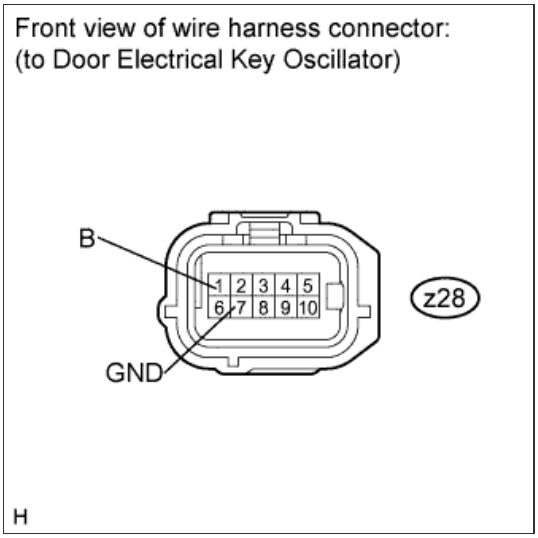

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

1 .CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

When the rear door RH entry lock and unlock functions do not operate, one of the following may be malfunctioning: 1) power door lock system, 2) rear door electrical key oscillator RH, or 3) certification ECU (smart key ECU assembly).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

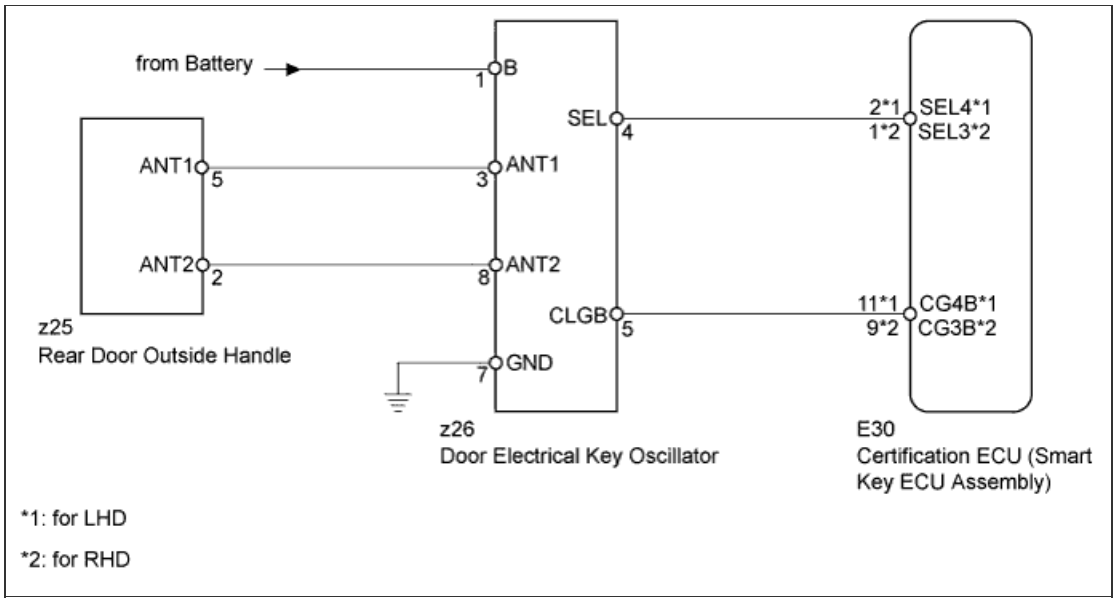

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:

Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
		ON: Passenger side rear door	

PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	unlocked OFF: Passenger side rear door locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → **GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door RH LOCK/UNLOCK Functions do not Operate) (Click here)**

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Touch Sensor	Passenger side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
Pr-Door Trigger Switch	Passenger side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Touch Sensor	Driver side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
Dr-Door Trigger Switch	Driver side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

Result


Result	Proceed to
Display changes according to manual operation	A
Display does not change according to manual operation	B

B → **REPLACE REAR DOOR OUTSIDE HANDLE (Click here)**

A

4.CHECK WAVE ENVIRONMENT

a. Bring the electrical key transmitter near the rear door outside handle RH, and perform a rear door RH entry lock and unlock operation check.

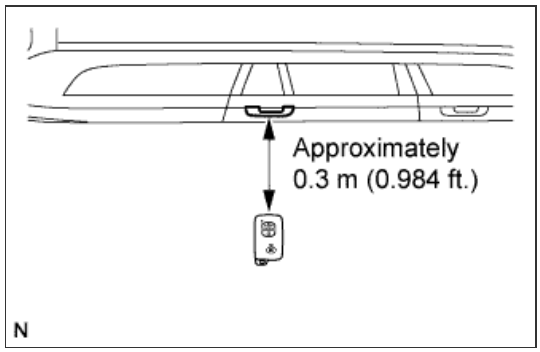

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication is not possible.

HINT:

- **When the electrical key transmitter is brought near the rear door outside handle RH, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **If the operation check is normal, the possibility of wave interference is high. Also, added vehicle components may cause wave interference. If installed, remove them and perform the operation check.**

Result


Result	Proceed to
Operation check fails	A
Operation check is normal	B

B → AFFECTED BY WAVE INTERFERENCE

A

5.PERFORM KEY DIAGNOSTIC MODE INSPECTION

a. Diagnostic mode inspection (rear door electrical key oscillator RH).

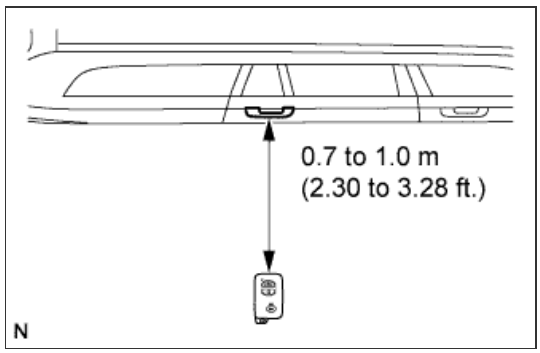

i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus:
for LHD
Select: Body / Entry & Start / Key Communication Check / Overhead + Passenger Side Rear.
for RHD
Select: Body / Entry & Start / Key Communication Check / Overhead + Driver Side Rear.

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

HINT:

If the buzzer sounds, it can be determined that the rear RH seat outside transmitter is operating normally.

OK:
Wireless door lock buzzer sounds.

NG → Go to step 6

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

6.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E30 ECU connector.

b. Disconnect the z26 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

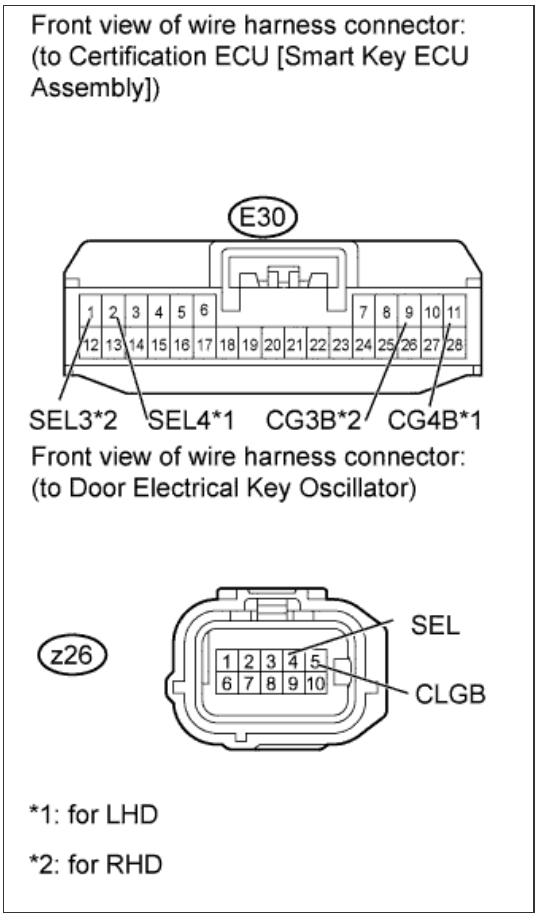

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E30-2 (SEL4) - z26-4 (SEL)	Always	Below 1 Ω
E30-11 (CG4B) - z26-5 (CLGB)	Always	Below 1 Ω
E30-2 (SEL4) - Body ground	Always	10 kΩ or higher
E30-11 (CG4B) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E30-1 (SEL3) - z26-4 (SEL)	Always	Below 1 Ω
E30-9 (CG3B) - z26-5 (CLGB)	Always	Below 1 Ω
E30-1 (SEL3) - Body ground	Always	10 kΩ or higher
E30-9 (CG3B) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - REAR DOOR OUTSIDE HANDLE)


a. Disconnect the z25 handle connector.

b. Disconnect the z26 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z25-2 (ANT2) - z26-8 (ANT2)	Always	Below 1 Ω
z25-5 (ANT1) - z26-3 (ANT1)	Always	Below 1 Ω
z25-2 (ANT2) - Body ground	Always	10 kΩ or higher
z25-5 (ANT1) - Body ground	Always	10 kΩ or higher

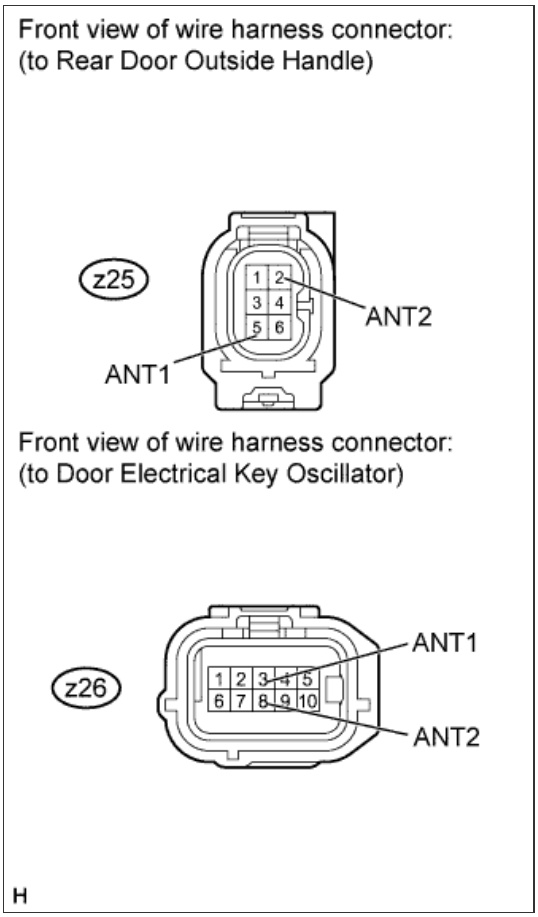

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


8.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - BATTERY AND BODY GROUND)

a. Disconnect the z26 oscillator connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
z26-1 (B) - z26-7 (GND)	Always	11 to 14 V

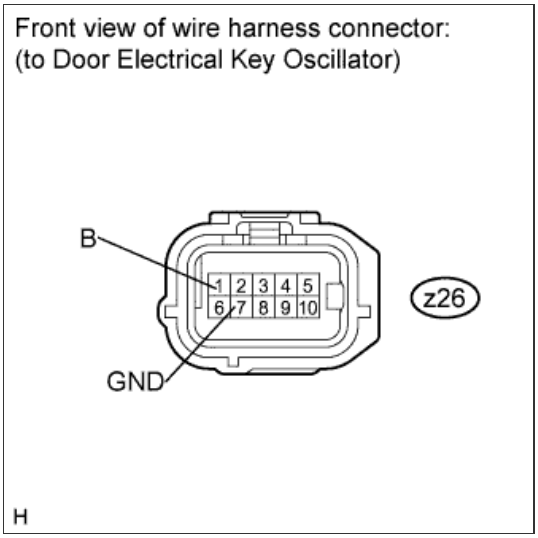

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

1 .CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

When the rear door RH entry lock and unlock functions do not operate, one of the following may be malfunctioning: 1) power door lock system, 2) rear door electrical key oscillator RH, or 3) certification ECU (smart key ECU assembly).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

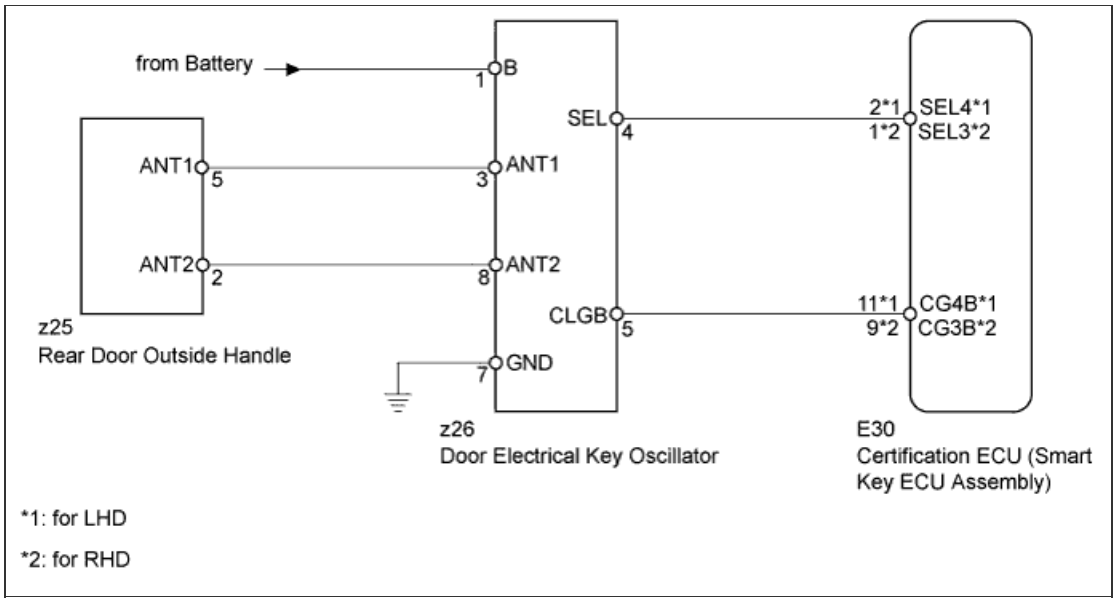

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:

Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
		ON: Passenger side rear door	

PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	unlocked OFF: Passenger side rear door locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → **GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door RH LOCK/UNLOCK Functions do not Operate) (Click here)**

OK

3.READ VALUE USING INTELLIGENT TESTER (TOUCH SENSOR)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Touch Sensor	Passenger side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
Pr-Door Trigger Switch	Passenger side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Touch Sensor	Driver side rear door touch sensor / ON or OFF	ON: Touch sensor touched OFF: Touch sensor not touched	-
Dr-Door Trigger Switch	Driver side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

Result


Result	Proceed to
Display changes according to manual operation	A
Display does not change according to manual operation	B

B → **REPLACE REAR DOOR OUTSIDE HANDLE (Click here)**

A

4.CHECK WAVE ENVIRONMENT

a. Bring the electrical key transmitter near the rear door outside handle RH, and perform a rear door RH entry lock and unlock operation check.

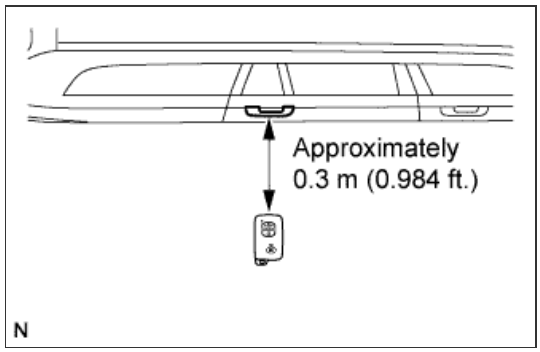

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the door handle, communication is not possible.

HINT:

- **When the electrical key transmitter is brought near the rear door outside handle RH, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **If the operation check is normal, the possibility of wave interference is high. Also, added vehicle components may cause wave interference. If installed, remove them and perform the operation check.**

Result


Result	Proceed to
Operation check fails	A
Operation check is normal	B

B → AFFECTED BY WAVE INTERFERENCE

A

5.PERFORM KEY DIAGNOSTIC MODE INSPECTION

a. Diagnostic mode inspection (rear door electrical key oscillator RH).

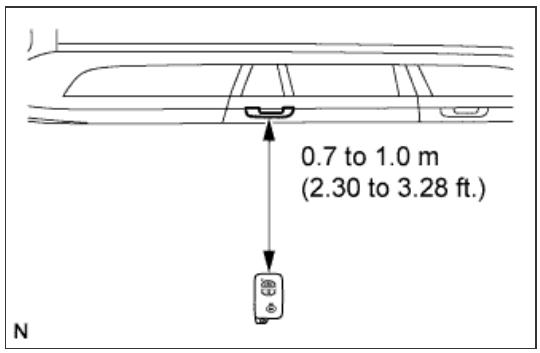

i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus:
for LHD
Select: Body / Entry & Start / Key Communication Check / Overhead + Passenger Side Rear.
for RHD
Select: Body / Entry & Start / Key Communication Check / Overhead + Driver Side Rear.

v. When the electrical key transmitter is in the position shown in the illustration, check that the wireless door lock buzzer sounds.

HINT:

If the buzzer sounds, it can be determined that the rear RH seat outside transmitter is operating normally.

OK:
Wireless door lock buzzer sounds.

NG → Go to step 6

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

6.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the E30 ECU connector.

b. Disconnect the z26 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

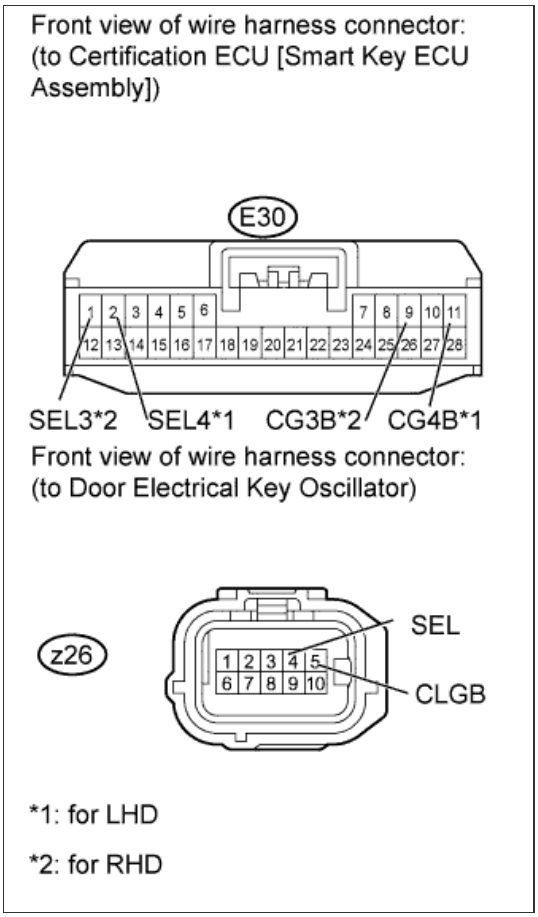

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E30-2 (SEL4) - z26-4 (SEL)	Always	Below 1 Ω
E30-11 (CG4B) - z26-5 (CLGB)	Always	Below 1 Ω
E30-2 (SEL4) - Body ground	Always	10 kΩ or higher
E30-11 (CG4B) - Body ground	Always	10 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E30-1 (SEL3) - z26-4 (SEL)	Always	Below 1 Ω
E30-9 (CG3B) - z26-5 (CLGB)	Always	Below 1 Ω
E30-1 (SEL3) - Body ground	Always	10 kΩ or higher
E30-9 (CG3B) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - REAR DOOR OUTSIDE HANDLE)


a. Disconnect the z25 handle connector.

b. Disconnect the z26 oscillator connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z25-2 (ANT2) - z26-8 (ANT2)	Always	Below 1 Ω
z25-5 (ANT1) - z26-3 (ANT1)	Always	Below 1 Ω
z25-2 (ANT2) - Body ground	Always	10 kΩ or higher
z25-5 (ANT1) - Body ground	Always	10 kΩ or higher

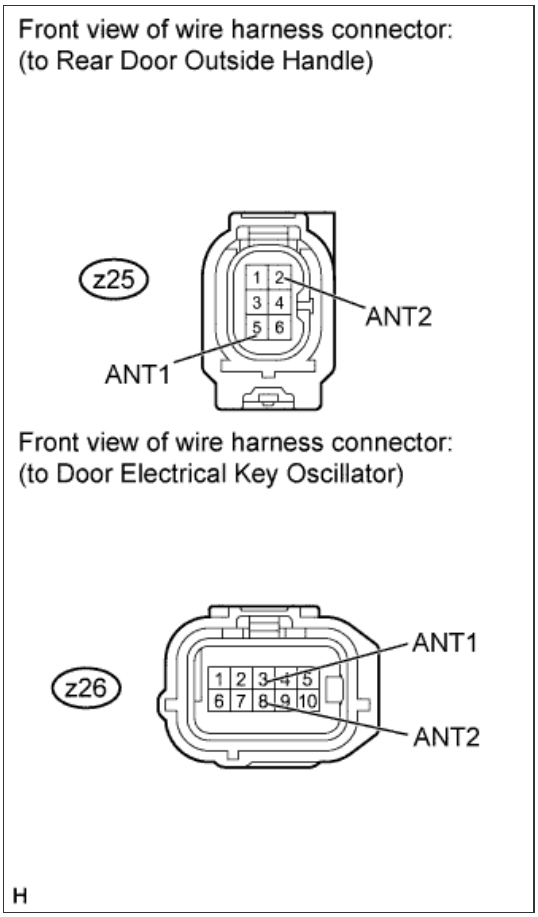

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


8.CHECK HARNESS AND CONNECTOR (DOOR ELECTRICAL KEY OSCILLATOR - BATTERY AND BODY GROUND)

a. Disconnect the z26 oscillator connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
z26-1 (B) - z26-7 (GND)	Always	11 to 14 V

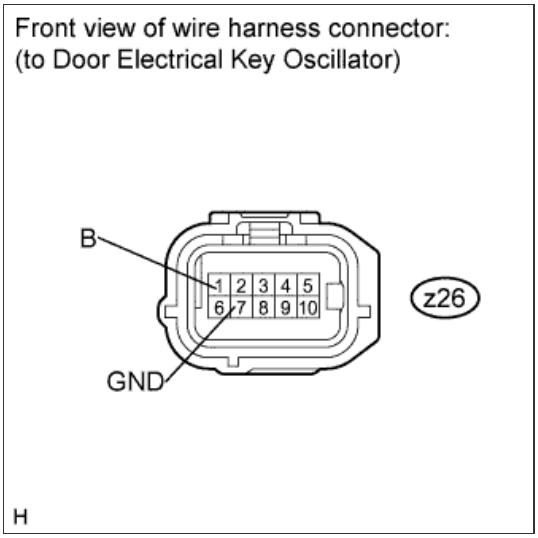

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

1 .CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (DOOR ELECTRICAL KEY OSCILLATOR IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

If the driver side door entry lock function does not operate but the entry unlock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be an entry lock switch circuit (certification ECU (smart key ECU assembly) → driver side door outside handle (entry lock switch) → driver side door electrical key oscillator).

WIRING DIAGRAM

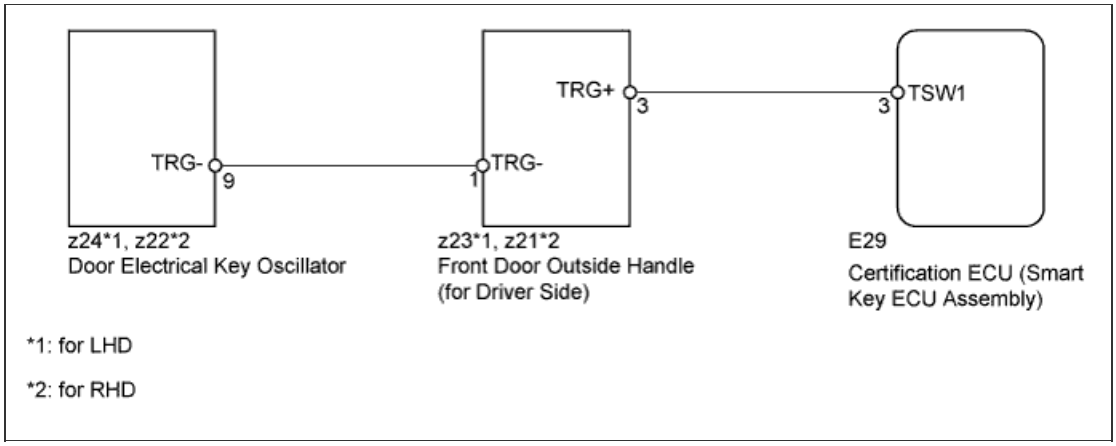

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D Door Lock Position SW	Driver side door lock position switch signal / ON or O	N: Driver side door unlocked O : Driver side door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Driver Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (LOCK SWITCH)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D-Door Trigger Switch	Driver side door outside handle lock switch / ON or O	N: Entry lock switch pushed O : Entry lock switch not pushed	-

OK:

On tester screen, item changes between ON and OFF according to above chart.

NG → Go to step 4

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


4.CHECK HARNESS AND CONNECTOR (FRONT DOOR OUTSIDE HANDLE - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the or oscillator connector.

b. Disconnect the 3 or handle connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Front Door Outside Handle)

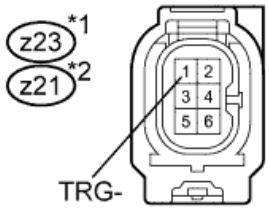

Front view of wire harness connector:
(to Door Electrical Key Oscillator)



*1: for LHD

*2: for RHD

H

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
-9 (TRG-) - 3-(TRG-)	Always	Below Ω
-9 (TRG-) - Body ground	Always	kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition

-9 (TRG-) - - (TRG-)	Always	Below Ω
-9 (TRG-) - Body ground	Always	kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

5.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the E29 ECU connector.

b. Disconnect the 3 or handle connector.

c. Measure the resistance according to the value(s) in the table below.

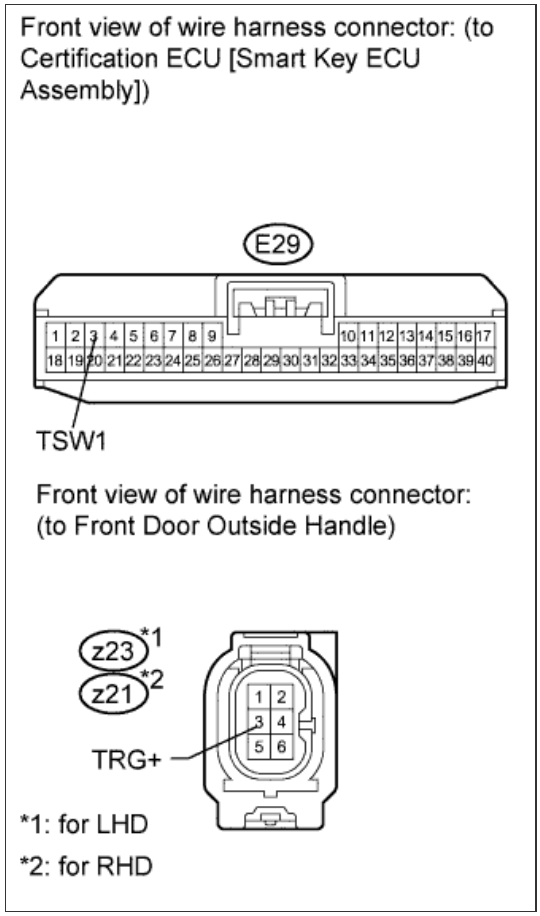

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E29-3 (TSW) 3-3 (TRG)	lways	Below Ω
E29-3 (TSW) Body ground	Always	kΩ or higher

for RHD:


Tester Connection	Condition	Specified Condition
E29-3 (TSW) -3 (TRG)	lways	Below Ω
E29-3 (TSW) Body ground	Always	kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

.INSPECT FRONT DOOR OUTSIDE HANDLE (for Driver Side)

a. Measure the resistance according to the value(s) in the table below.

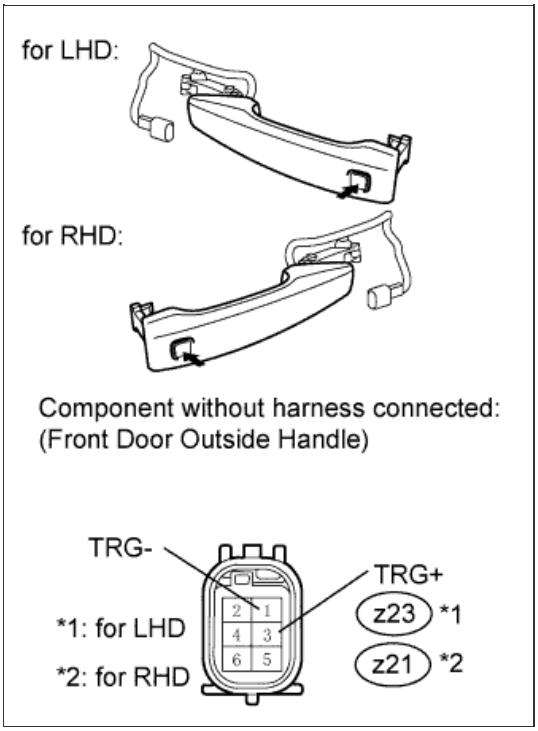

Standard Resistance:

for LHD:

Tester Connection	Switch Condition	Specified Condition
3- (TRG-) - 3-3 (TRG)	Lock switch not pushed	kΩ or higher
	Lock switch pushed	Below Ω

for RHD:

Tester Connection	Switch Condition	Specified Condition
- (TRG-) - -3 (TRG)	Lock switch not pushed	kΩ or higher
	Lock switch pushed	Below Ω

NG → REPLACE FRONT DOOR OUTSIDE HANDLE (Click here)

OK

7.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

8.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:

Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (DOOR ELECTRICAL OSCILLATOR IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

If the driver side door entry lock function does not operate but the entry unlock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be an entry lock switch circuit (certification ECU (smart key ECU assembly) → driver side door outside handle (entry lock switch) → driver side door electrical key oscillator).

WIRING DIAGRAM

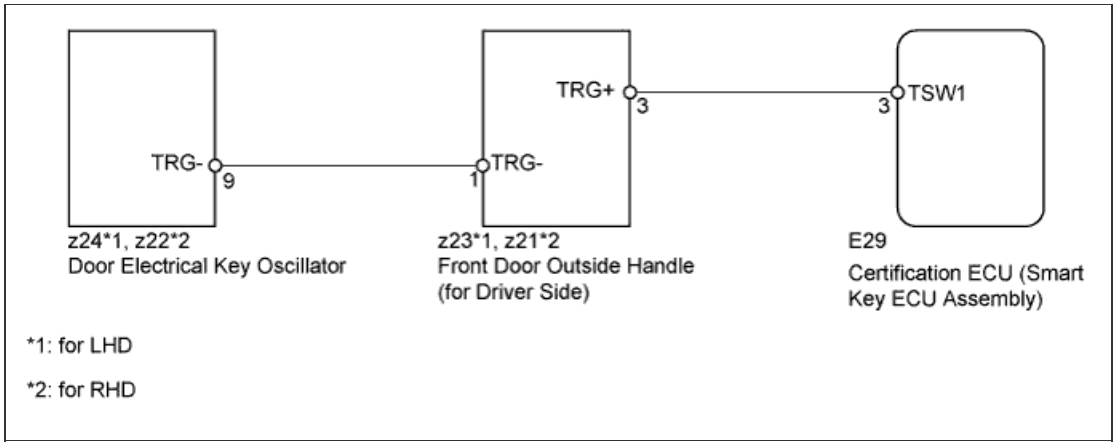

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D Door Lock Position SW	Driver side door lock position switch signal / ON or O	N: Driver side door unlocked O : Driver side door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Driver Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (LOCK SWITCH)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D-Door Trigger Switch	Driver side door outside handle lock switch / ON or O	N: Entry lock switch pushed O : Entry lock switch not pushed	-

OK:

On tester screen, item changes between ON and OFF according to above chart.

NG → Go to step 4

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


4.CHECK HARNESS AND CONNECTOR (FRONT DOOR OUTSIDE HANDLE - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the or oscillator connector.

b. Disconnect the 3 or handle connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Front Door Outside Handle)

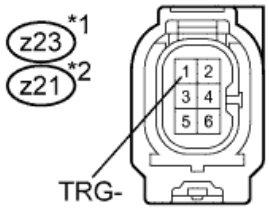

Front view of wire harness connector:
(to Door Electrical Key Oscillator)



*1: for LHD

*2: for RHD

H

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
-9 (TRG-) - 3-(TRG-)	Always	Below Ω
-9 (TRG-) - Body ground	Always	kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition

-9 (TRG-) - - (TRG-)	Always	Below Ω
-9 (TRG-) - Body ground	Always	kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

5.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the E29 ECU connector.

b. Disconnect the 3 or handle connector.

c. Measure the resistance according to the value(s) in the table below.

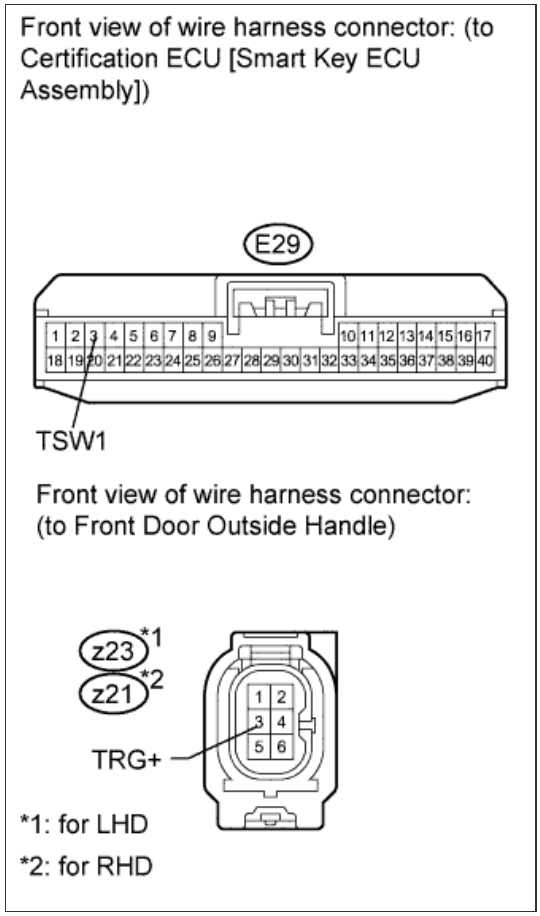

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E29-3 (TSW) 3-3 (TRG)	lways	Below Ω
E29-3 (TSW) Body ground	Always	kΩ or higher

for RHD:


Tester Connection	Condition	Specified Condition
E29-3 (TSW) -3 (TRG)	lways	Below Ω
E29-3 (TSW) Body ground	Always	kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

.INSPECT FRONT DOOR OUTSIDE HANDLE (for Driver Side)

a. Measure the resistance according to the value(s) in the table below.

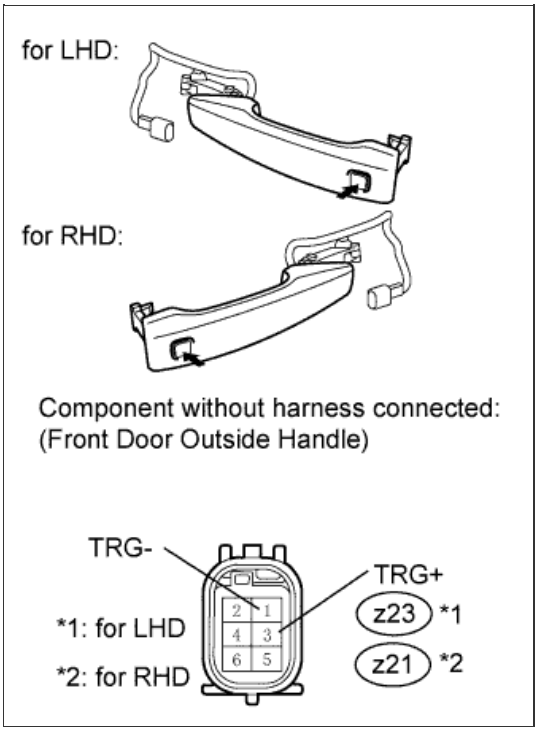

Standard Resistance:

for LHD:

Tester Connection	Switch Condition	Specified Condition
3- (TRG-) - 3-3 (TRG)	Lock switch not pushed	kΩ or higher
	Lock switch pushed	Below Ω

for RHD:

Tester Connection	Switch Condition	Specified Condition
- (TRG-) - -3 (TRG)	Lock switch not pushed	kΩ or higher
	Lock switch pushed	Below Ω

NG → REPLACE FRONT DOOR OUTSIDE HANDLE (Click here)

OK

7.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

8.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:

Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (DOOR ELECTRICAL OSCILLATOR IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

If the front passenger side door entry lock function does not operate but the entry unlock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be an entry lock switch circuit (certification ECU (smart key ECU assembly) → front passenger side door outside handle (entry lock switch) → front passenger side door electrical key oscillator).

WIRING DIAGRAM

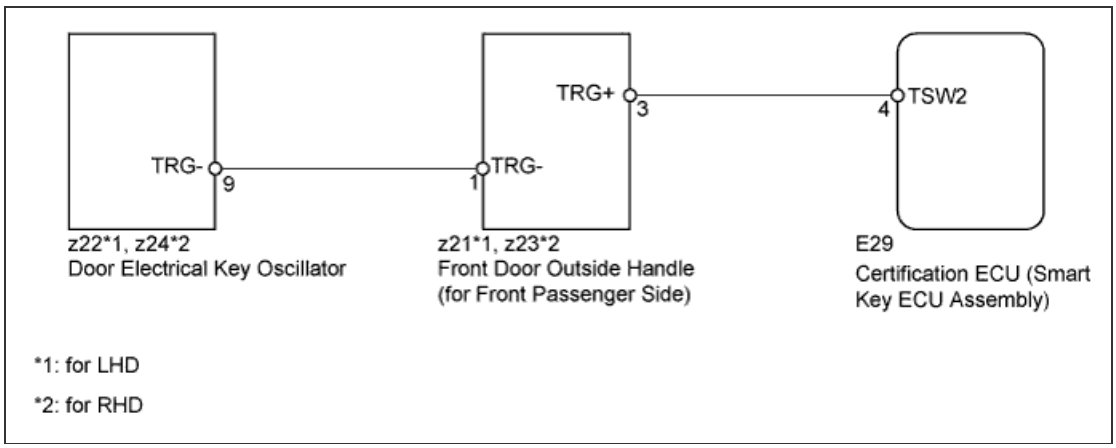

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P Door Lock Position SW	Front passenger side door lock position switch signal / ON or OFF	ON: Front passenger side door unlocked OFF: Front passenger side door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Passenger Door LOCK/UNLOCK Functions do not

Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (LOCK SWITCH)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P-Door Trigger Switch	Front passenger side door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

OK:

On tester screen, item changes between ON and OFF according to above chart.

NG → Go to step 4

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


4.CHECK HARNESS AND CONNECTOR (FRONT DOOR OUTSIDE HANDLE - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the or oscillator connector.

b. Disconnect the or 3 handle connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Front Door Outside Handle)

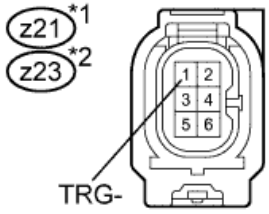

Front view of wire harness connector:
(to Door Electrical Key Oscillator)



*1: for LHD

*2: for RHD

H

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
-9 (TRG-) - - (TRG-)	Always	Below Ω
-9 (TRG-) - Body	Always	kΩ or higher

ground		

for RHD:

Tester Connection	Condition	Specified Condition
-9 (TRG-) - 3-(TRG-)	Always	Below Ω
-9 (TRG-) - Body ground	Always	kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


5.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the E29 ECU connector.


b. Disconnect the or 3 handle connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector: (to Certification ECU [Smart Key ECU Assembly])

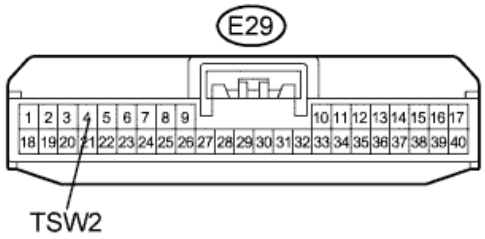

Front view of wire harness connector: (to Front Door Outside Handle)

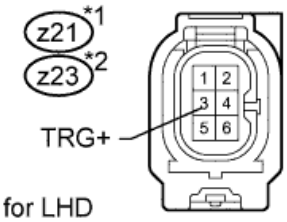

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E29- (TSW2) - -3 (TRG)	Always	Below Ω
E29- (TSW2) - Body ground	Always	kΩ or higher

for RHD:


Tester Connection	Condition	Specified Condition
E29- (TSW2) - 3-3 (TRG)	Always	Below Ω
E29- (TSW2) - Body ground	Always	kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

.INSPECT FRONT DOOR OUTSIDE HANDLE (for Front Passenger Side)

a. Measure the resistance according to the value(s) in the table below.

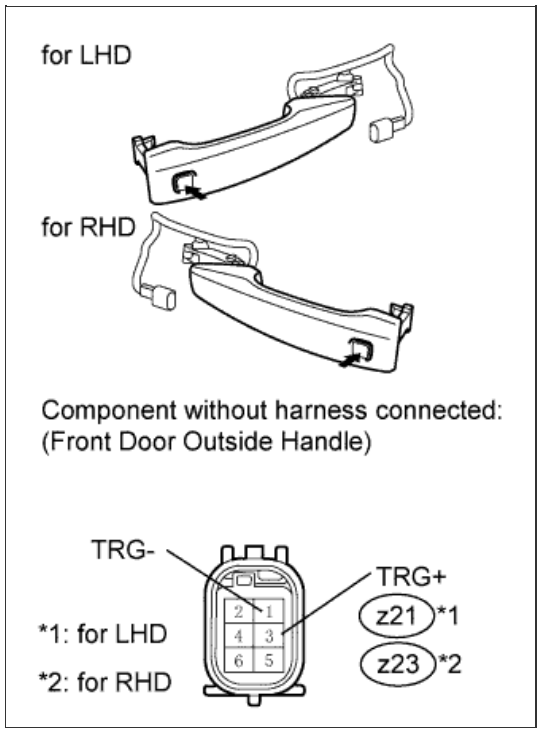

Standard Resistance:

for LHD:

Tester Connection	Switch Condition	Specified Condition
- (TRG-) - -3 (TRG)	Lock switch not pushed	kΩ or higher
	Lock switch pushed	Below Ω

for RHD:

Tester Connection	Switch Condition	Specified Condition
3- (TRG-) - 3-3 (TRG)	Lock switch not pushed	kΩ or higher
	Lock switch pushed	Below Ω

NG → REPLACE FRONT DOOR OUTSIDE HANDLE (Click here)

OK

.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

8.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (DOOR ELECTRICAL OSCILLATOR IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

If the front passenger side door entry lock function does not operate but the entry unlock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be an entry lock switch circuit (certification ECU (smart key ECU assembly) → front passenger side door outside handle (entry lock switch) → front passenger side door electrical key oscillator).

WIRING DIAGRAM

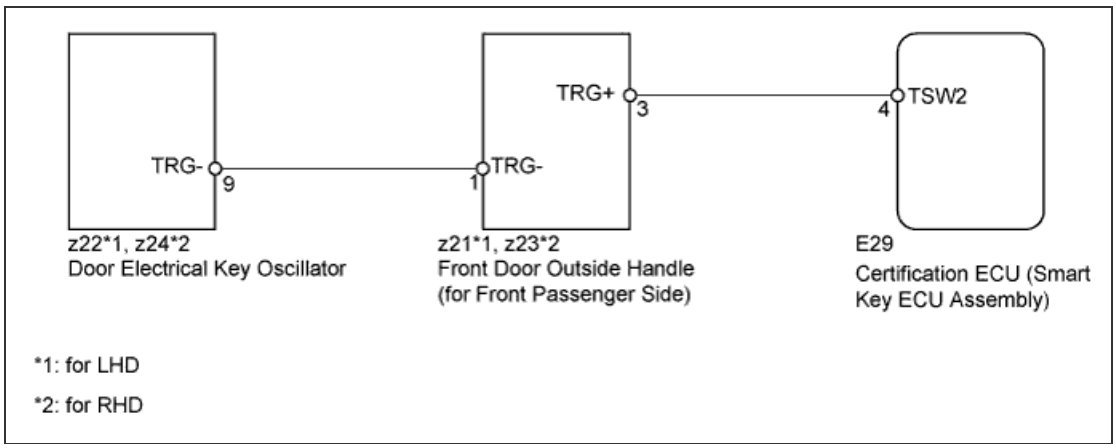

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P Door Lock Position SW	Front passenger side door lock position switch signal / ON or OFF	ON: Front passenger side door unlocked OFF: Front passenger side door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Passenger Door LOCK/UNLOCK Functions do not

Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (LOCK SWITCH)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P-Door Trigger Switch	Front passenger side door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

OK:

On tester screen, item changes between ON and OFF according to above chart.

NG → Go to step 4

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


4.CHECK HARNESS AND CONNECTOR (FRONT DOOR OUTSIDE HANDLE - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the or oscillator connector.

b. Disconnect the or 3 handle connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Front Door Outside Handle)

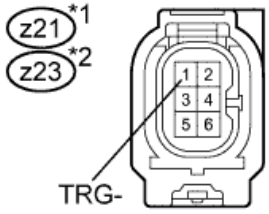

Front view of wire harness connector:
(to Door Electrical Key Oscillator)



*1: for LHD

*2: for RHD

H

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
-9 (TRG-) - - (TRG-)	Always	Below Ω
-9 (TRG-) - Body	Always	kΩ or higher

ground		

for RHD:

Tester Connection	Condition	Specified Condition
-9 (TRG-) - 3-(TRG-)	Always	Below Ω
-9 (TRG-) - Body ground	Always	kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


5.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY - FRONT DOOR OUTSIDE HANDLE)

a. Disconnect the E29 ECU connector.


b. Disconnect the or 3 handle connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector: (to Certification ECU [Smart Key ECU Assembly])

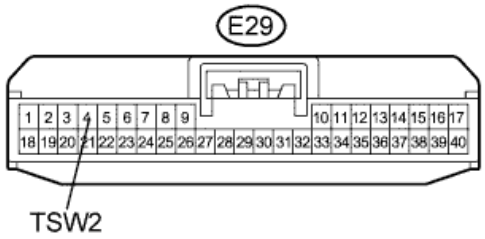

Front view of wire harness connector: (to Front Door Outside Handle)

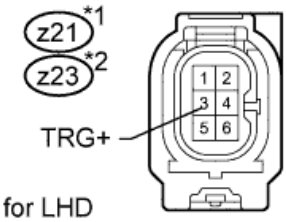

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E29- (TSW2) - -3 (TRG)	Always	Below Ω
E29- (TSW2) - Body ground	Always	kΩ or higher

for RHD:


Tester Connection	Condition	Specified Condition
E29- (TSW2) - 3-3 (TRG)	Always	Below Ω
E29- (TSW2) - Body ground	Always	kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

.INSPECT FRONT DOOR OUTSIDE HANDLE (for Front Passenger Side)

a. Measure the resistance according to the value(s) in the table below.

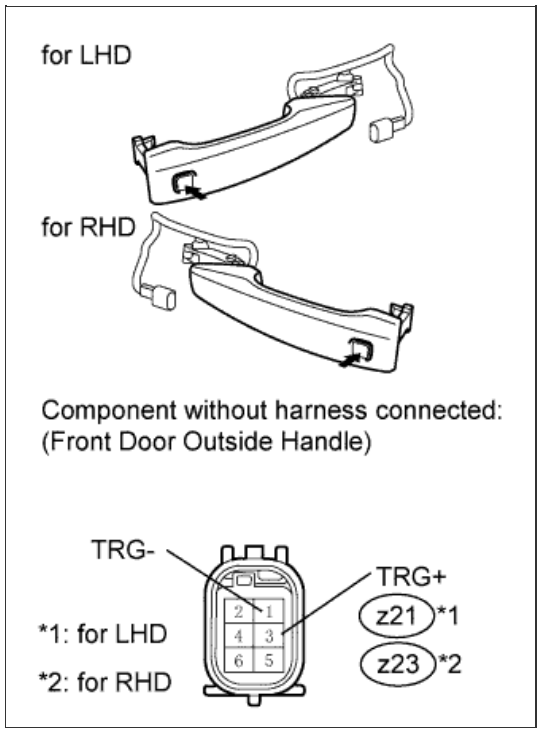

Standard Resistance:

for LHD:

Tester Connection	Switch Condition	Specified Condition
- (TRG-) - -3 (TRG)	Lock switch not pushed	kΩ or higher
	Lock switch pushed	Below Ω

for RHD:

Tester Connection	Switch Condition	Specified Condition
3- (TRG-) - 3-3 (TRG)	Lock switch not pushed	kΩ or higher
	Lock switch pushed	Below Ω

NG → REPLACE FRONT DOOR OUTSIDE HANDLE (Click here)

OK

.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

8.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (DOOR ELECTRICAL OSCILLATOR IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

If the rear door LH entry lock function does not operate but the entry unlock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be an entry lock switch circuit (certification ECU (smart key ECU assembly) → rear door outside handle LH (entry lock switch) → rear door electrical key oscillator LH).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

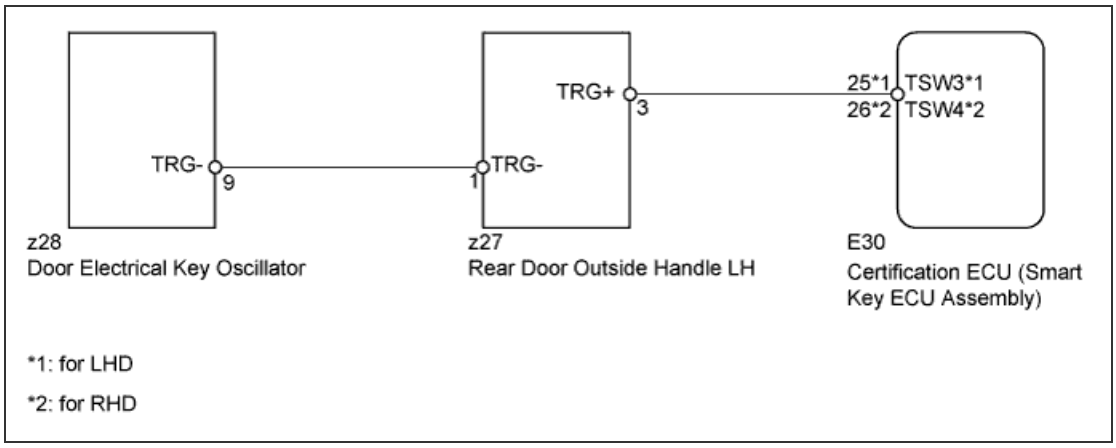

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door LH LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (LOCK SWITCH)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Trigger Switch	Driver side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

OK:
On tester screen, item changes between ON and OFF according to above chart.

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Trigger Switch	Passenger side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

OK:
On tester screen, item changes between ON and OFF according to above chart.

NG → Go to step 4

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK HARNESS AND CONNECTOR (REAR DOOR OUTSIDE HANDLE - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the z28 oscillator connector.

b. Disconnect the z27 handle connector.


c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition

z28- (TRG-) - z27-1 (TRG-)	Always	Below 1 Ω
z28- (TRG-) - Body ground	Always	1 kΩ or higher

Front view of wire harness connector:
(to Rear Door Outside Handle)

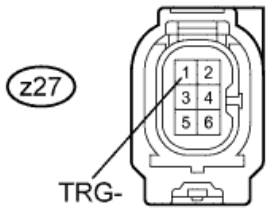

Front view of wire harness connector:
(to Door Electrical Key Oscillator)



H

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


5.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - REAR DOOR OUTSIDE HANDLE)

a. Disconnect the E3 ECU connector.


b. Disconnect the z27 handle connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector: (to Certification ECU [Smart Key ECU Assembly])

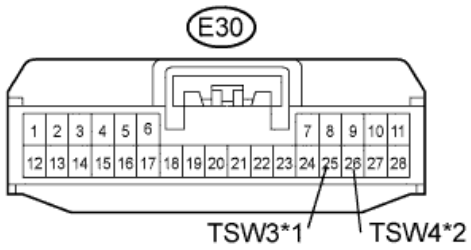

Front view of wire harness connector: (to Rear Door Outside Handle)

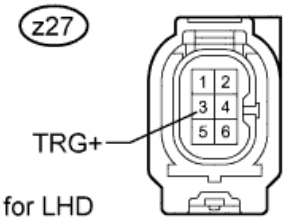

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E3 (TSW3) - z27-3 (TRG)	Always	Below 1 Ω
E3 (TSW3) - Body ground	Always	1 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E3 (TSW) - z27-3 (TRG)	Always	Below 1 Ω
E3 (TSW) - Body ground	Always	1 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

6.INSPECT REAR DOOR OUTSIDE HANDLE LH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
z27-1 (TRG-) - z27-3 (TRG)	Lock switch not pushed	1 kΩ or higher
	Lock switch pushed	Below 1 Ω

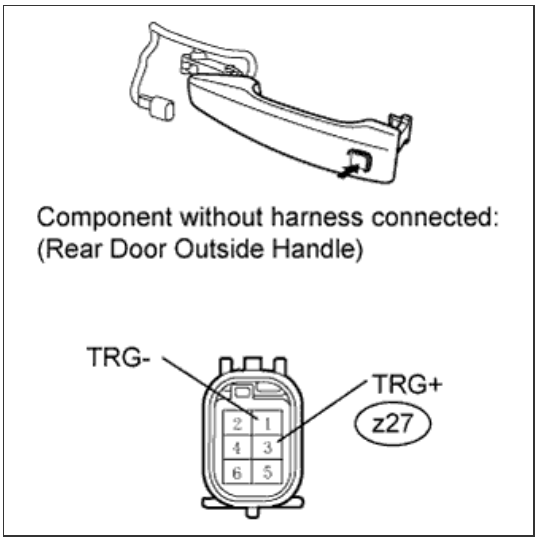

NG → REPLACE REAR DOOR OUTSIDE HANDLE (Click here)

OK

7.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

8.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (DOOR ELECTRICAL OSCILLATOR IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

If the rear door LH entry lock function does not operate but the entry unlock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be an entry lock switch circuit (certification ECU (smart key ECU assembly) → rear door outside handle LH (entry lock switch) → rear door electrical key oscillator LH).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

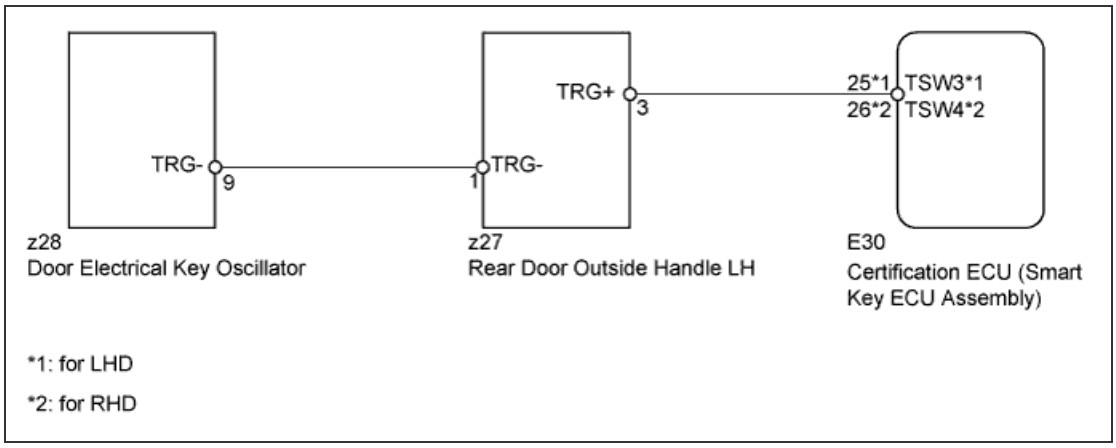

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door LH LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (LOCK SWITCH)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Trigger Switch	Driver side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

OK:
On tester screen, item changes between ON and OFF according to above chart.

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Trigger Switch	Passenger side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

OK:
On tester screen, item changes between ON and OFF according to above chart.

NG → Go to step 4

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK HARNESS AND CONNECTOR (REAR DOOR OUTSIDE HANDLE - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the z28 oscillator connector.

b. Disconnect the z27 handle connector.


c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition

z28- (TRG-) - z27-1 (TRG-)	Always	Below 1 Ω
z28- (TRG-) - Body ground	Always	1 kΩ or higher

Front view of wire harness connector:
(to Rear Door Outside Handle)

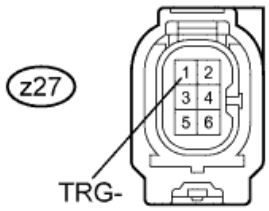

Front view of wire harness connector:
(to Door Electrical Key Oscillator)



H

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


5.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - REAR DOOR OUTSIDE HANDLE)

a. Disconnect the E3 ECU connector.


b. Disconnect the z27 handle connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector: (to Certification ECU [Smart Key ECU Assembly])

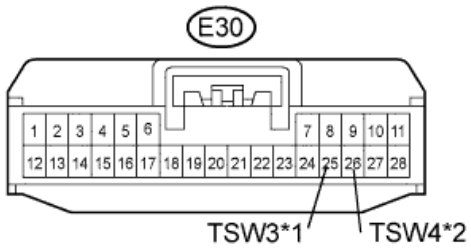

Front view of wire harness connector: (to Rear Door Outside Handle)

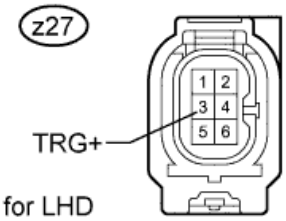

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E3 (TSW3) - z27-3 (TRG)	Always	Below 1 Ω
E3 (TSW3) - Body ground	Always	1 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E3 (TSW) - z27-3 (TRG)	Always	Below 1 Ω
E3 (TSW) - Body ground	Always	1 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

6.INSPECT REAR DOOR OUTSIDE HANDLE LH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
z27-1 (TRG-) - z27-3 (TRG)	Lock switch not pushed	1 kΩ or higher
	Lock switch pushed	Below 1 Ω

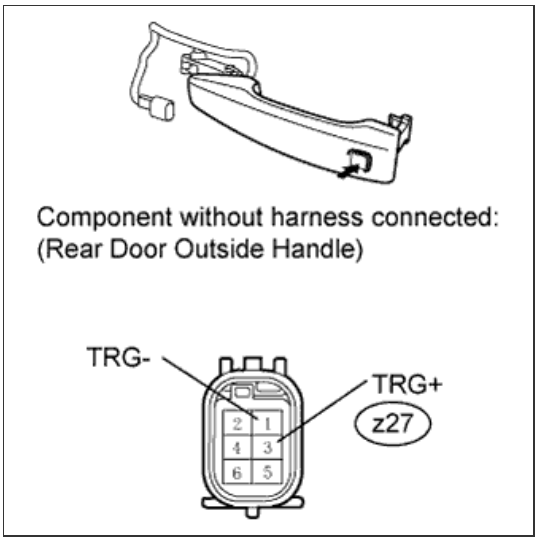

NG → REPLACE REAR DOOR OUTSIDE HANDLE (Click here)

OK

7.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

8.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (DOOR ELECTRICAL OSCILLATOR IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

If the rear door RH entry lock function does not operate but the entry unlock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be an entry lock switch circuit (certification ECU (smart key ECU assembly) → rear door outside handle RH (entry lock switch) → rear door electrical key oscillator RH).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

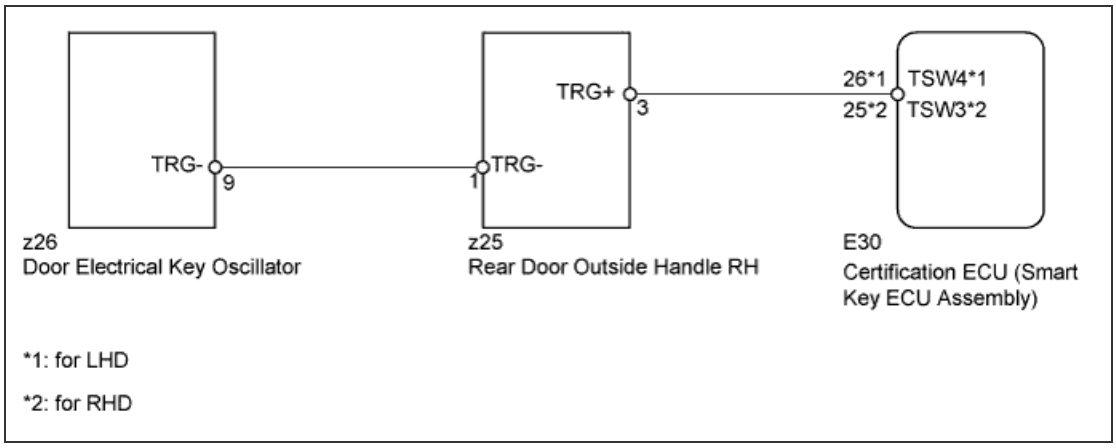

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door RH LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (LOCK SWITCH)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Trigger Switch	Passenger side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

OK:
On tester screen, item changes between ON and OFF according to above chart.

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Trigger Switch	Driver side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

OK:
On tester screen, item changes between ON and OFF according to above chart.

NG → Go to step 4

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK HARNESS AND CONNECTOR (REAR DOOR OUTSIDE HANDLE - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the z2 oscillator connector.


b. Disconnect the z2 handle connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition

z2	(TRG-) - z2 (TRG-)	Always	Below 1 Ω
z2	(TRG-) - Body ground	Always	1 kΩ or higher

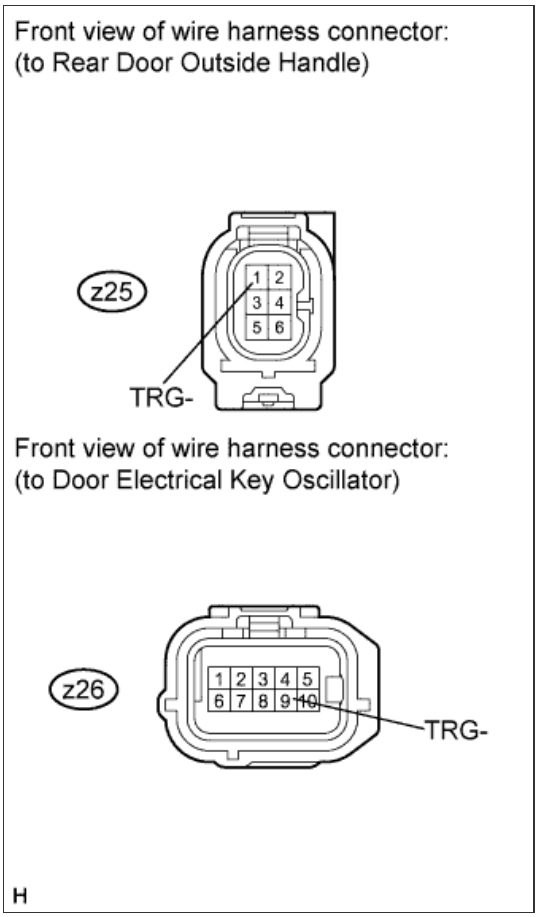

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


5.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - REAR DOOR OUTSIDE HANDLE)

a. Disconnect the E3 ECU connector.


b. Disconnect the z2 handle connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector: (to Certification ECU [Smart Key ECU Assembly])

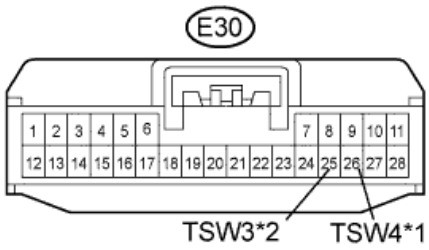

Front view of wire harness connector: (to Rear Door Outside Handle)

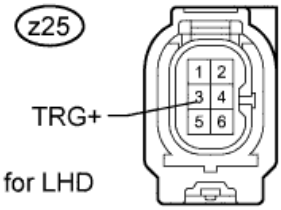

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E3 (TSW) - z2 3 (TRG)	Always	Below 1 Ω
E3 (TSW) - Body ground	Always	1 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E3 (TSW3) - z2 3 (TRG)	Always	Below 1 Ω
E3 (TSW3) - Body ground	Always	1 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

6.INSPECT REAR DOOR OUTSIDE HANDLE RH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
z2 (TRG-) - z2 3 (TRG)	Lock switch not pushed	1 kΩ or higher
	Lock switch pushed	Below 1 Ω

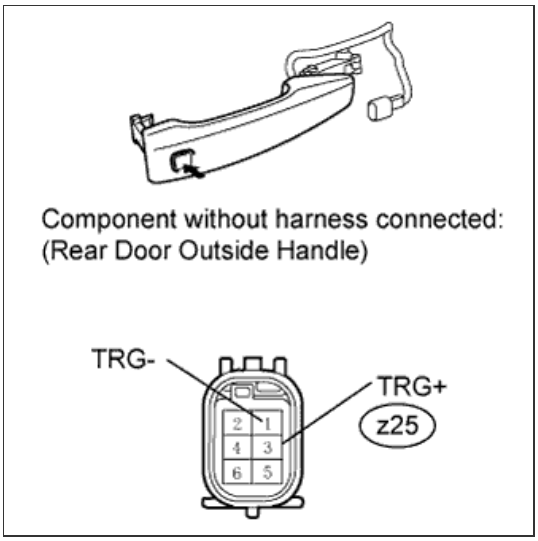

NG → REPLACE REAR DOOR OUTSIDE HANDLE (Click here)

OK

7.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

8.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (DOOR ELECTRICAL OSCILLATOR IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

If the rear door RH entry lock function does not operate but the entry unlock function operates, the communication line between the vehicle and electrical key transmitter is normal. The part at fault may be an entry lock switch circuit (certification ECU (smart key ECU assembly) → rear door outside handle RH (entry lock switch) → rear door electrical key oscillator RH).

HINT:

For vehicles with entry function for rear doors.

WIRING DIAGRAM

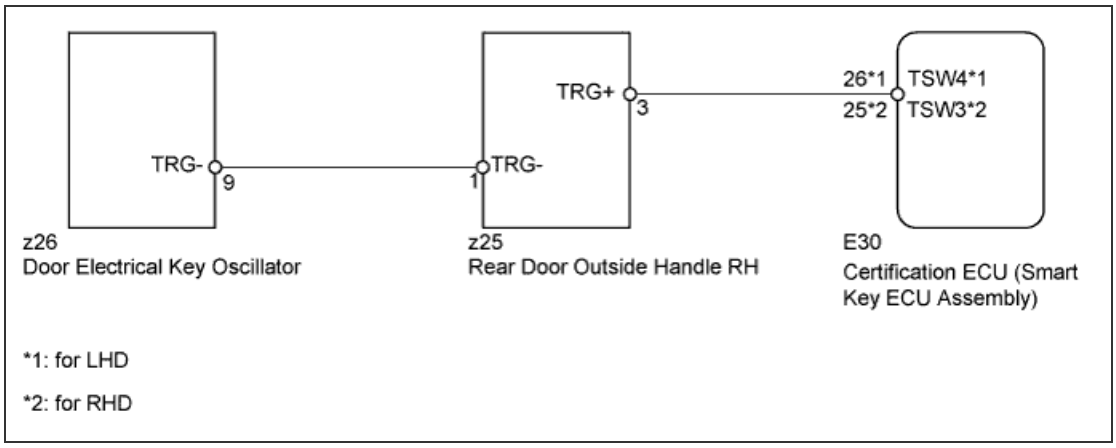

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the master switch assembly door control switch is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

i. for LHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
PR Door Lock Position SW	Passenger side rear door lock position switch signal / ON or OFF	ON: Passenger side rear door unlocked OFF: Passenger side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

ii. for RHD

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DR Door Lock Position SW	Driver side rear door lock position switch signal / ON or OFF	ON: Driver side rear door unlocked OFF: Driver side rear door locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Rear Door RH LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (LOCK SWITCH)

a. Using the intelligent tester, read the Data List.

i. for LHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Pr-Door Trigger Switch	Passenger side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

OK:
On tester screen, item changes between ON and OFF according to above chart.

ii. for RHD

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Dr-Door Trigger Switch	Driver side rear door outside handle lock switch / ON or OFF	ON: Entry lock switch pushed OFF: Entry lock switch not pushed	-

OK:
On tester screen, item changes between ON and OFF according to above chart.

NG → Go to step 4

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK HARNESS AND CONNECTOR (REAR DOOR OUTSIDE HANDLE - DOOR ELECTRICAL KEY OSCILLATOR)

a. Disconnect the z2 oscillator connector.


b. Disconnect the z2 handle connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition

z2	(TRG-) - z2 (TRG-)	Always	Below 1 Ω
z2	(TRG-) - Body ground	Always	1 kΩ or higher

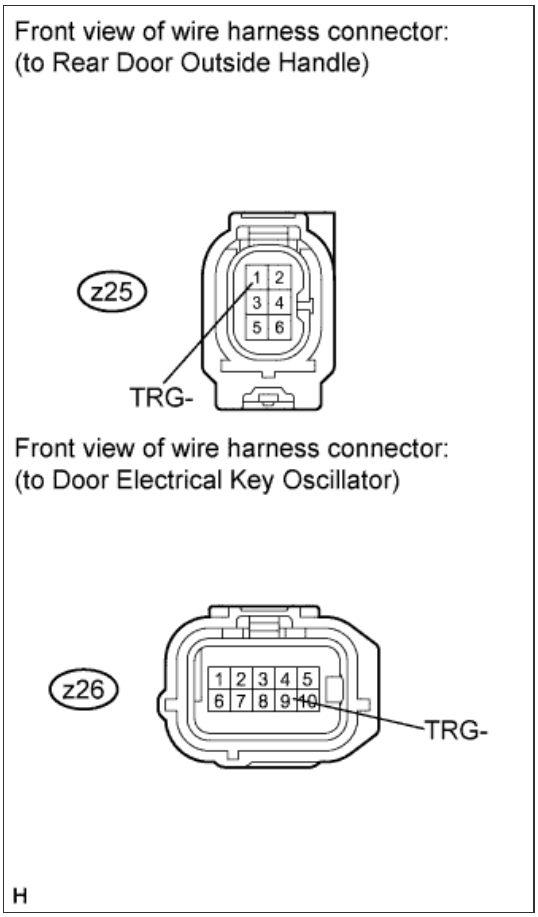

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


5.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - REAR DOOR OUTSIDE HANDLE)

a. Disconnect the E3 ECU connector.


b. Disconnect the z2 handle connector.

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector: (to Certification ECU [Smart Key ECU Assembly])

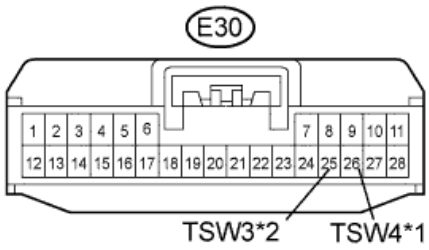

Front view of wire harness connector: (to Rear Door Outside Handle)

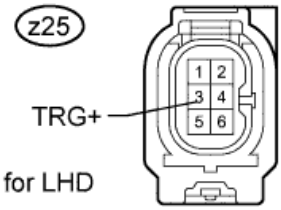

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD:

Tester Connection	Condition	Specified Condition
E3 (TSW) - z2 3 (TRG)	Always	Below 1 Ω
E3 (TSW) - Body ground	Always	1 kΩ or higher

for RHD:

Tester Connection	Condition	Specified Condition
E3 (TSW3) - z2 3 (TRG)	Always	Below 1 Ω
E3 (TSW3) - Body ground	Always	1 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

6.INSPECT REAR DOOR OUTSIDE HANDLE RH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
z2 (TRG-) - z2 3 (TRG)	Lock switch not pushed	1 kΩ or higher
	Lock switch pushed	Below 1 Ω

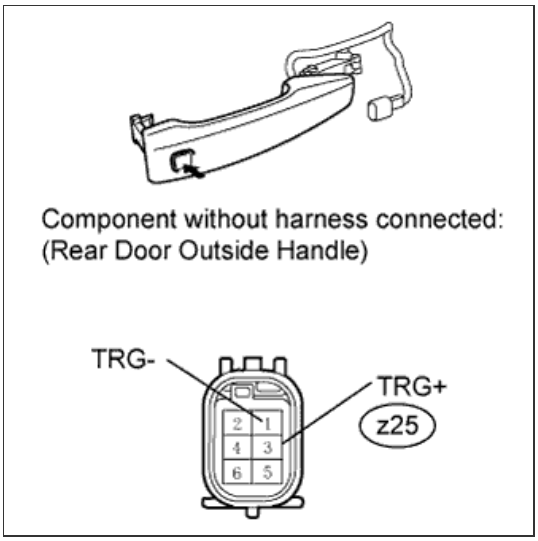

NG → REPLACE REAR DOOR OUTSIDE HANDLE (Click here)

OK

7.REPLACE DOOR ELECTRICAL KEY OSCILLATOR

a. Replace the door electrical key oscillator (Click here).

NEXT

8.CHECK DOOR ELECTRICAL KEY OSCILLATOR (OPERATION)

a. Check that the entry function operates normally.

OK:
Operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (DOOR ELECTRICAL OSCILLATOR IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

If the room oscillator does not recognize the key, one of the following may be the cause: 1) communication between the indoor electrical key antenna (for Front) and electrical key transmitter cannot be performed; or 2) communication between the indoor electrical key antenna (for Rear 1) and electrical key transmitter cannot be performed; or 3) communication between the indoor electrical key antenna (for Rear 2) and electrical key transmitter cannot be performed.

WIRING DIAGRAM

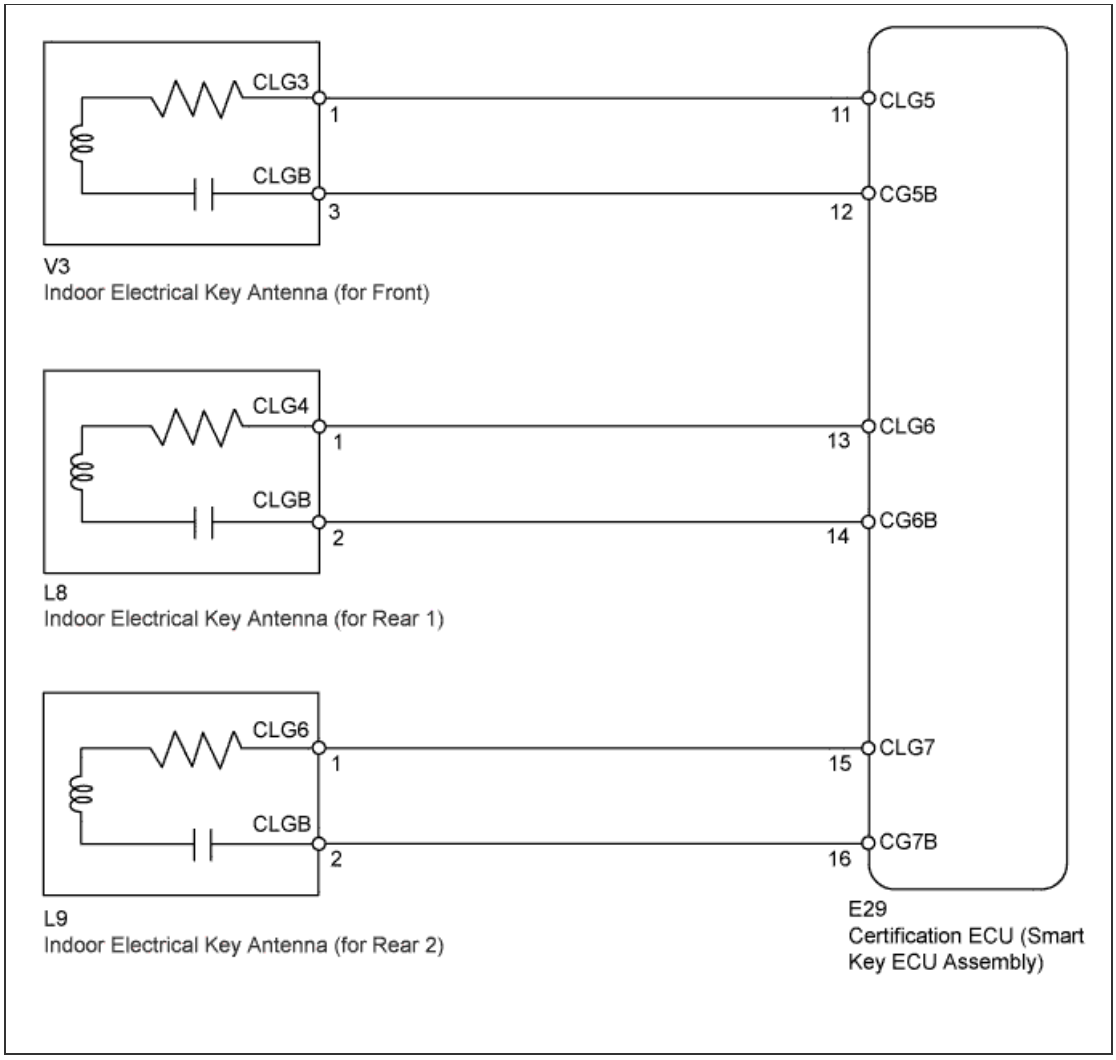

INSPECTION PROCEDURE

NOTICE:

- **Before performing the inspection, check that there are no problems related to the "CAN Communication System" and "LIN Communication System".**
- **When using the intelligent tester with the engine switch off to troubleshoot: Connect the intelligent tester to the vehicle, and turn a courtesy light switch on and off at 1.5 second intervals until communication between the tester and vehicle begins.**

1.CHECK ENTRY AND START SYSTEM (ENTRY FUNCTION)

a. Check that the entry lock and unlock function can be operated at each door (Click here).

NG → Go to DTC OF OTHER COMPONENTS (PROCEED TO PROBLEM SYMPTOM FLOWCHART FOR EACH DOOR) (Click here)

OK

2.CHECK ENTRY AND START SYSTEM (START FUNCTION)

a. Remove the battery of the electrical key transmitter (Click here).


b. With the brake pedal depressed, touch the TOYOTA mark of the key to the engine switch.

c. When operating the engine switch, check whether the power source mode changes.

OK:
Power source mode changes.

HINT:

- **When the electrical key transmitter cannot be verified even though it is in the operating range of the start function, the engine start check can be performed by removing the transmitter battery from the electrical key transmitter and holding the transmitter against the engine switch.**
- **When performing the check, if the power source mode changes, there is a problem with key certification inside the cabin.**

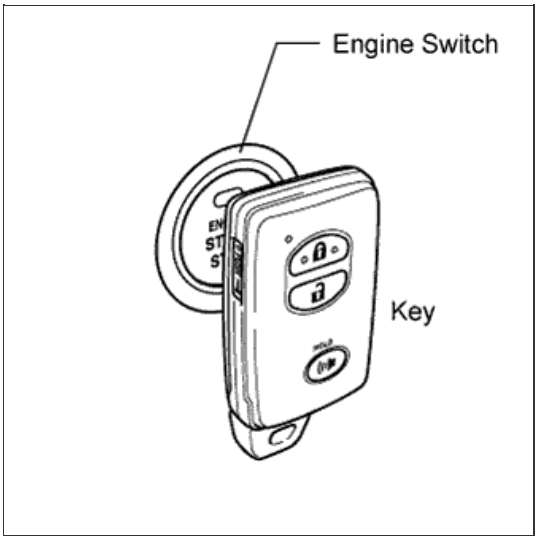

NG → **Go to ENTRY AND START SYSTEM (Power Source Mode does not Change) (Click here)**

OK

3.CHECK WAVE ENVIRONMENT

a. Install the battery to the electrical key transmitter (Click here).

b. Bring the electrical key transmitter near the indoor electrical key antenna (in center console), and perform an engine control system start check.

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the center console, communication is not possible.

OK:
Engine starts.

c. Bring the electrical key transmitter near the indoor electrical key antenna (in rear No. 1 seat cushion), and perform an engine control system start check.

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the rear No. 1 seat cushion, communication is not possible.

OK:
Engine starts.

d. Bring the electrical key transmitter near the indoor electrical key antenna (in rear No. 2 seat cushion), and perform an engine control system start check.

NOTICE:

If the key is brought within 0.2 m (0.656 ft.) of the rear No. 2 seat cushion, communication is not possible.

HINT:

- **When the electrical key transmitter is brought near the indoor electrical key antenna, the possibility of wave interference decreases, and it can be determined if wave interference is causing the problem symptom.**
- **If the inspection result is that the operation check is normal, the possibility of wave interference is high. Also, added vehicle components may cause wave interference, If installed, remove them and perform the operation check.**

OK:
Engine starts.

NG → **Go to step 4**

OK

AFFECTED BY WAVE INTERFERENCE

4.KEY DIAGNOSTIC MODE

a. Diagnostic mode inspection (indoor electrical key antenna (for Front)).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Front Room.

v. When the electrical key transmitter is placed on the driver seat or front passenger seat cushion, check that the wireless door lock buzzer sounds.

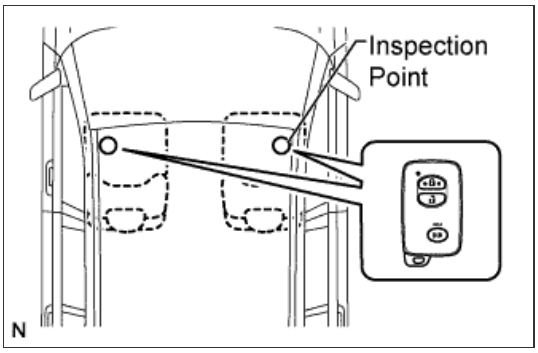

b. Diagnostic mode inspection (indoor electrical key antenna (for Rear 1)).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Rear Room.

v. When the electrical key transmitter is placed on the rear seat cushion, check that the wireless door lock buzzer sounds.

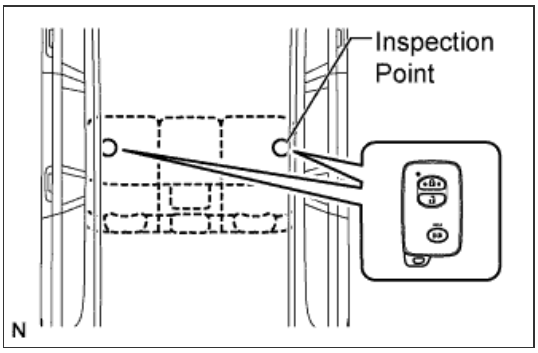

c. Diagnostic mode inspection (indoor electrical key antenna (for Rear 2)).


i. Connect the intelligent tester to the DLC3.

ii. Turn the engine switch on (IG).

iii. Turn the intelligent tester on.

iv. Enter the following menus: Body / Entry & Start / Key Communication Check / Overhead + Back Door (inside) Room.

v. When the electrical key transmitter is placed on the rear seat cushion, check that the wireless door lock buzzer sounds.

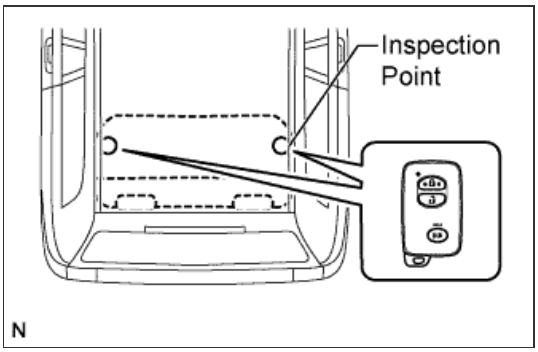

HINT:

- **If the buzzer sounds, it can be determined that the vehicle interior transmitters are operating normally.**
- **It is possible to check which indoor electrical key antenna (front, rear 1 or rear 2) is operating by sounding the buzzer.**
- **If the buzzer does not sound for any indoor electrical key antennas, the certification ECU (smart key ECU assembly) circuit may have a malfunction.**

Result

Result	Proceed to
Front operation check fails	A
Rear 1 operation check fails	B
Rear 2 operation check fails	C
Front, rear 1 and rear 2 operation checks are normal or fail	D


B → Go to step 7

C → Go to step 9

D → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

A

5.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - INDOOR ELECTRICAL KEY ANTENNA)

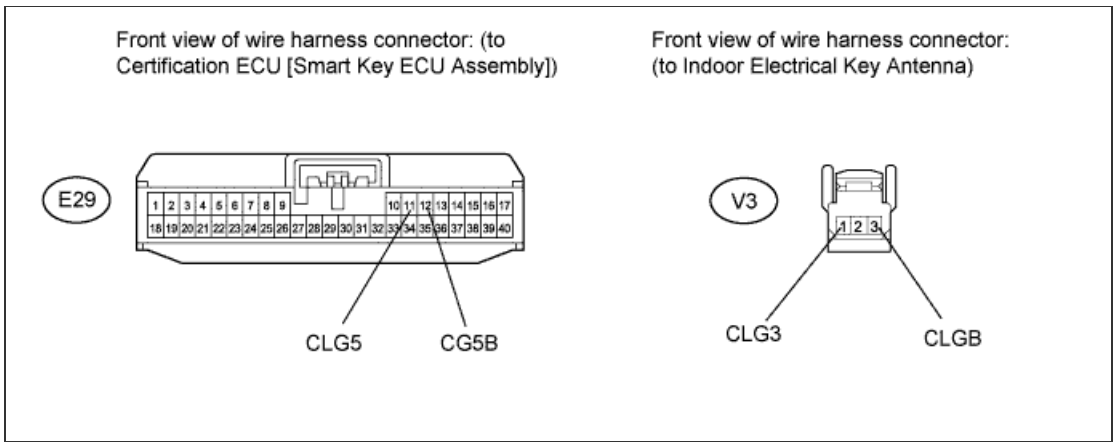

a. Disconnect the E29 ECU connector.

b. Disconnect the V3 antenna connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
V3-1 (CLG3) - E29-11 (CLG5)	Always	Below 1 Ω
V3-3 (CLGB) - E29-12 (CG5B)	Always	Below 1 Ω
V3-1 (CLG3) - Body ground	Always	10 kΩ or higher
V3-3 (CLGB) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.CHECK INDOOR ELECTRICAL KEY ANTENNA (for Front Floor)

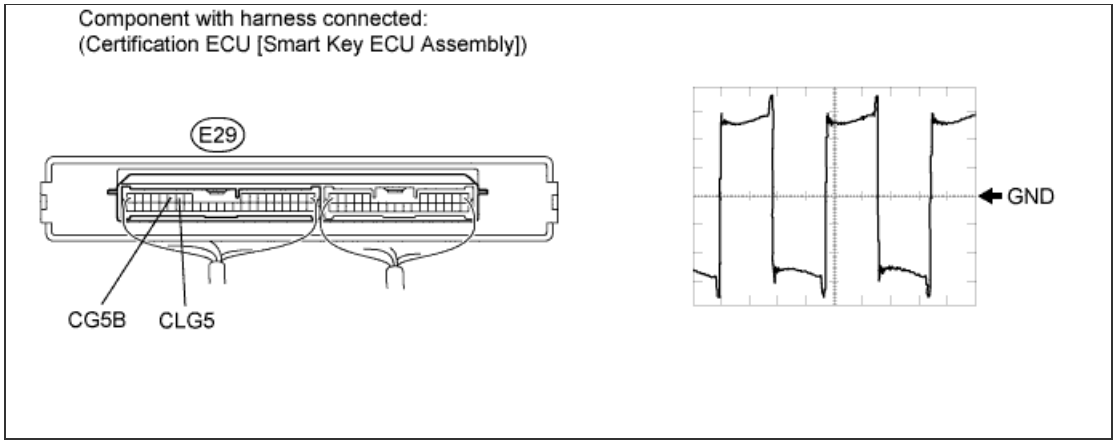

a. Measure the voltage according to the value(s) in the table below.

OK:

Tester		Switch	Specified


Connection	Tool Setting	Condition	Condition
E29-11 (CLG5) - E29-12 (CG5B)	2 V/DIV, 2 µsec./DIV. (Reference)	Engine switch on (IG)	Pulse generation

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

REPLACE INDOOR ELECTRICAL KEY ANTENNA (for Front Floor) (Click here)

7.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - INDOOR ELECTRICAL KEY ANTENNA)

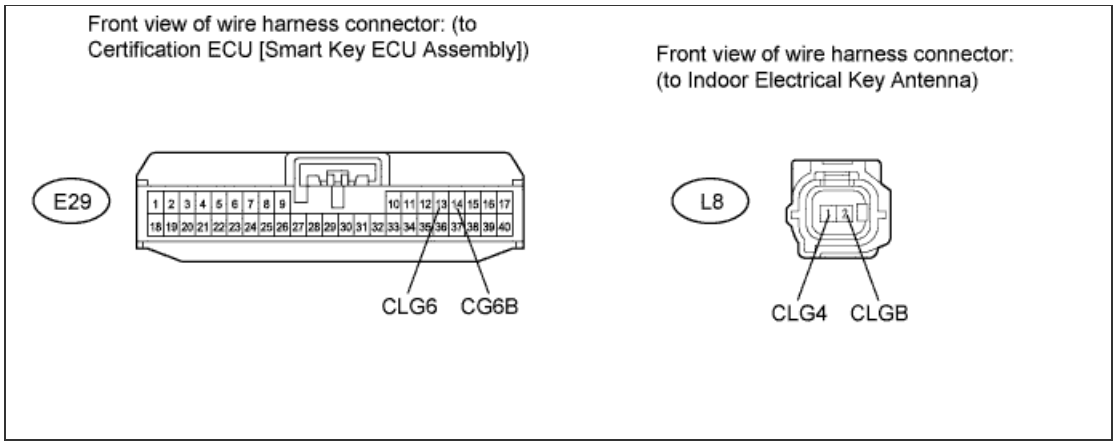

a. Disconnect the E29 ECU connector.

b. Disconnect the L8 antenna connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
L8-1 (CLG4) - E29-13 (CLG6)	Always	Below 1 Ω
L8-2 (CLGB) - E29-14 (CG6B)	Always	Below 1 Ω
L8-1 (CLG4) - Body ground	Always	10 kΩ or higher
L8-2 (CLGB) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.CHECK INDOOR ELECTRICAL KEY ANTENNA (for Rear 1 Floor)

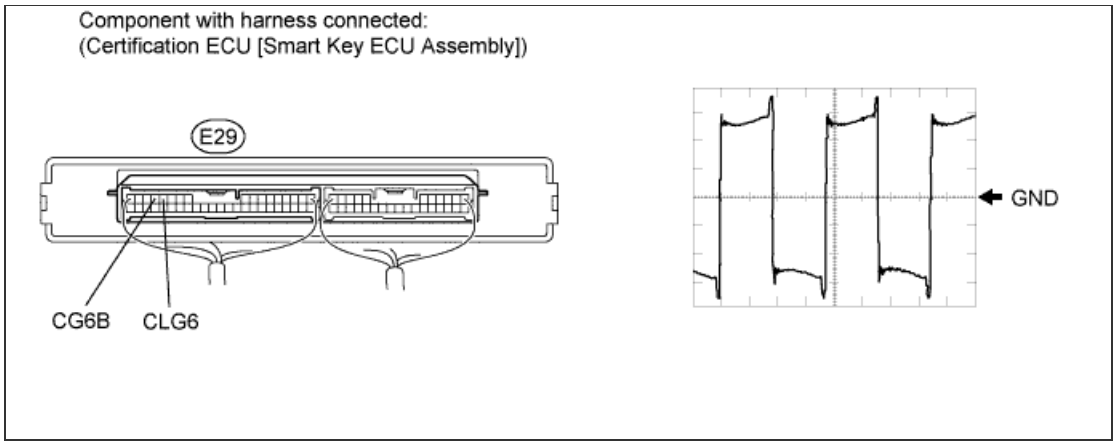

a. Measure the voltage according to the value(s) in the table below.

OK:


Tester Connection	Tool Setting	Switch Condition	Specified Condition
E29-13 (CLG6) - E29-14 (CG6B)	2 V/DIV., 2 µsec./DIV. (Reference)	Engine switch on (IG)	Pulse generation

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

REPLACE INDOOR ELECTRICAL KEY ANTENNA (for Rear 1 Floor) (Click here)

9.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - INDOOR ELECTRICAL KEY ANTENNA)

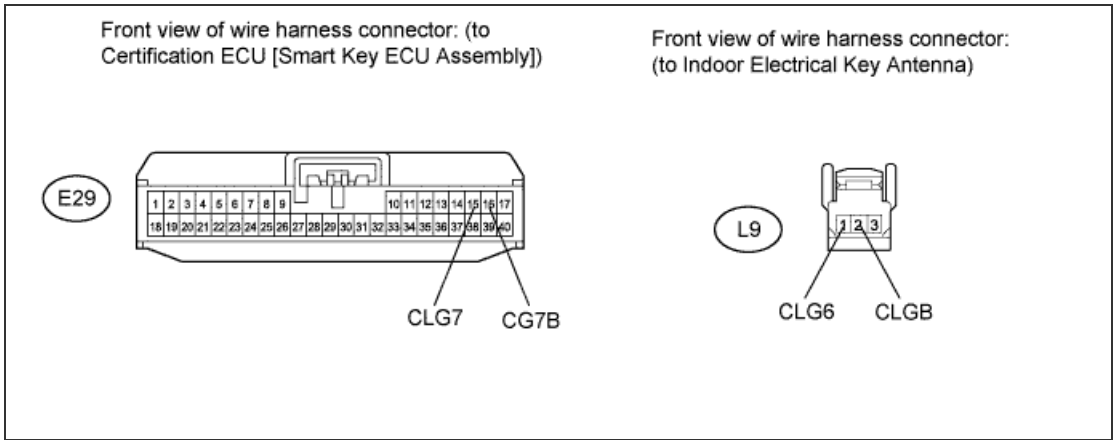

a. Disconnect the E29 ECU connector.

b. Disconnect the L9 antenna connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
L9-1 (CLG6) - E29-15 (CLG)	Always	Below 1 Ω
L9-2 (CLGB) - E29-16 (CG7B)	Always	Below 1 Ω
L9-1 (CLG6) - Body ground	Always	10 kΩ or higher
L9-2 (CLGB) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

10.CHECK INDOOR ELECTRICAL KEY ANTENNA (for Rear 2 Floor)

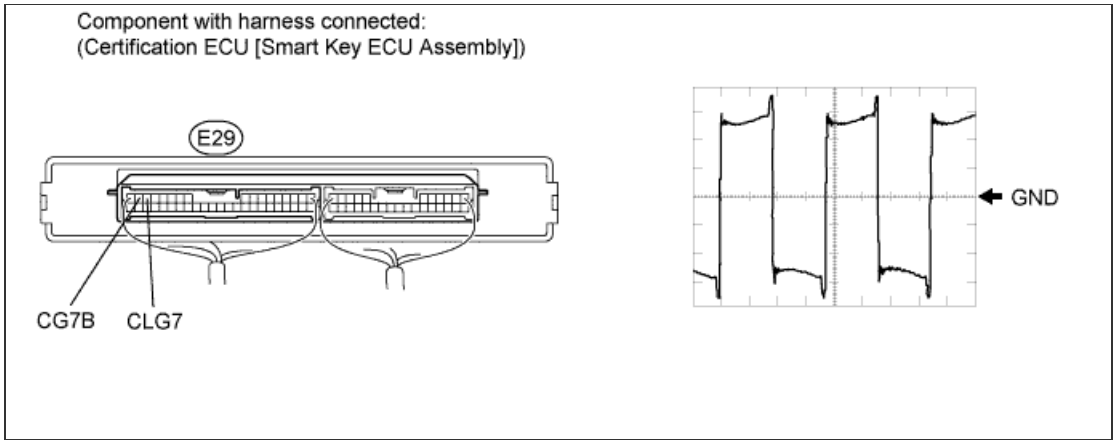

a. Measure the voltage according to the value(s) in the table below.

OK:

Tester Connection	Tool Setting	Switch Condition	Specified Condition
E29-15 (CLG7) - E29-16 (CG7B)	2 V/DIV., 2 µsec./DIV. (Reference)	Engine switch on (IG)	Pulse generation

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

REPLACE INDOOR ELECTRICAL KEY ANTENNA (for Rear 2 Floor) (Click here)

for Preparation Click here

DESCRIPTION

The entry and start system uses the combination meter buzzer to perform various vehicle interior warnings. When the conditions of each warning are met, the certification ECU (smart key ECU assembly) sends a buzzer signal to the meter ECU, and the combination meter buzzer sounds.

INSPECTION PROCEDURE

1.CHECK COMBINATION METER ASSEMBLY (OPERATION)

a. Turn the engine switch on (IG). Place luggage on the passenger seat to cause the passenger seat belt warning light to blink.

b. When driving the vehicle at 15 km/h (9.3 mph) or more, check that the seat belt warning buzzer sounds to inform that the passenger seat belt is not fastened.

HINT:

The entry and start system sounds the buzzer built into the combination meter for indoor warnings. This buzzer is also used for the seat belt warning system. Therefore, check the operation of the combination meter buzzer by checking if the buzzer sounds to inform that the seat belt is not fastened.

OK:

Combination meter buzzer sounds.

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK ↓


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

for Preparation Click here

DESCRIPTION

When the back door opener switch is turned on, the certification ECU (smart key ECU assembly) uses the back door electrical key antenna (for outer) and antenna to output a request signal to the outside of the vehicle for a distance of approximately 1.0 m (3.28 ft.) from the back door. A key near the back door detects this request and transmits its ID code. The door control receiver receives the ID code and sends this ID code to the certification ECU (smart key ECU assembly). The certification ECU (smart key ECU assembly) checks if the ID code is valid. When the ID code is valid, the certification ECU (smart key ECU assembly) sends a back door open signal to the main body ECU using the CAN communication line and stops outputting request signals. The main body ECU then unlocks the back door.

WIRING DIAGRAM

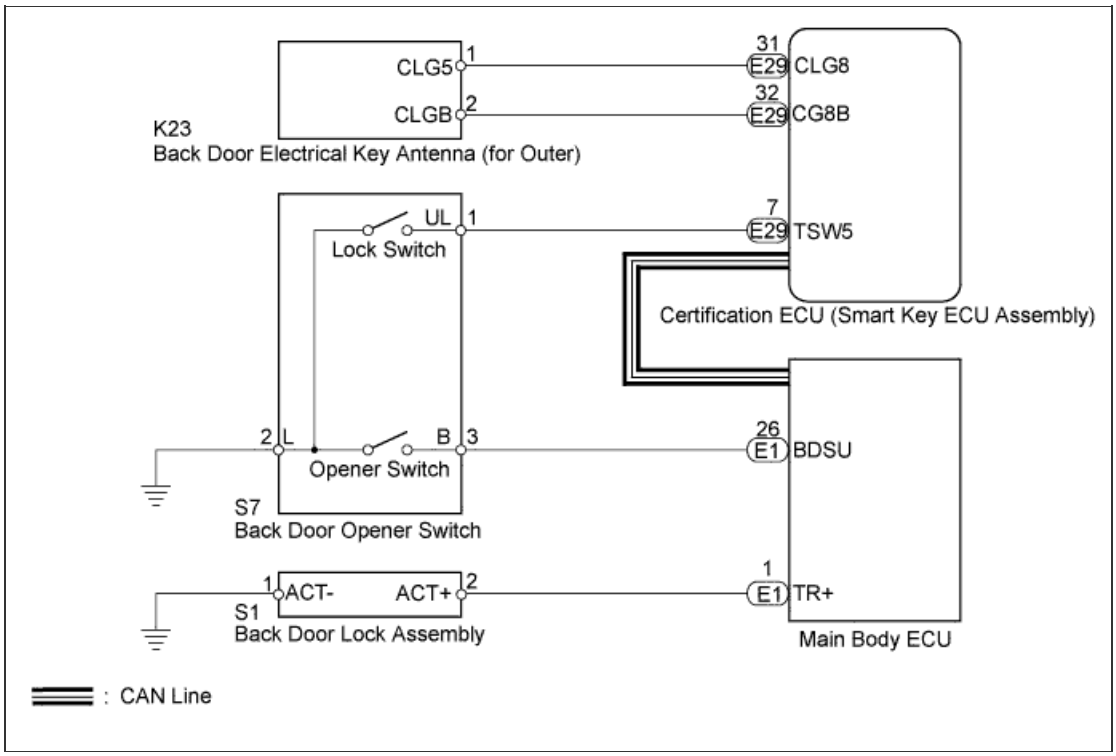

INSPECTION PROCEDURE

1.CHECK POWER DOOR LOCK OPERATION

a. When the door control switch of the master switch assembly is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note

Back Lock Pos switch	Back door lock position switch signal / ON or OFF	ON: Back door is unlocked OFF: Back door is locked	-

OK:
On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Back Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (BACK DOOR HANDLE SW)

a. Using the intelligent tester, read the Data List.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Back Door Handle SW	Back door opener switch / ON or OFF	ON: Back door opener switch is pushed OFF: Back door opener switch is not pushed	-

OK:
"ON" (switch is pushed) or "OFF" (switch is not pushed) appears on the screen.

NG → Go to step 4

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK BACK DOOR OPENER SWITCH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
1 (UL) - 2 (L) 3 (B) - 2 (L)	Not pushed	10 kΩ or higher
1 (UL) - 2 (L)	Lock switch pushed	Below 1 Ω
3 (B) - 2 (L)	Open switch pushed	Below 1 Ω

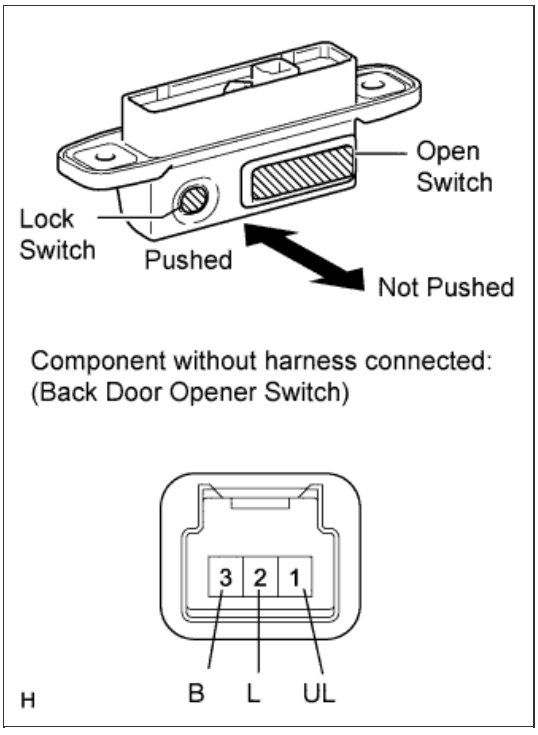

NG → REPLACE BACK DOOR OPENER SWITCH (Click here)

OK

5.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BACK DOOR OPENER SWITCH)


a. Disconnect the E1 ECU connector.

b. Disconnect the S7 switch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-26 (BDSU) - S7-3 (B)	Always	Below 1 Ω
E1-26 (BDSU) or S7-3 (B) - Body ground	Always	10 kΩ or higher

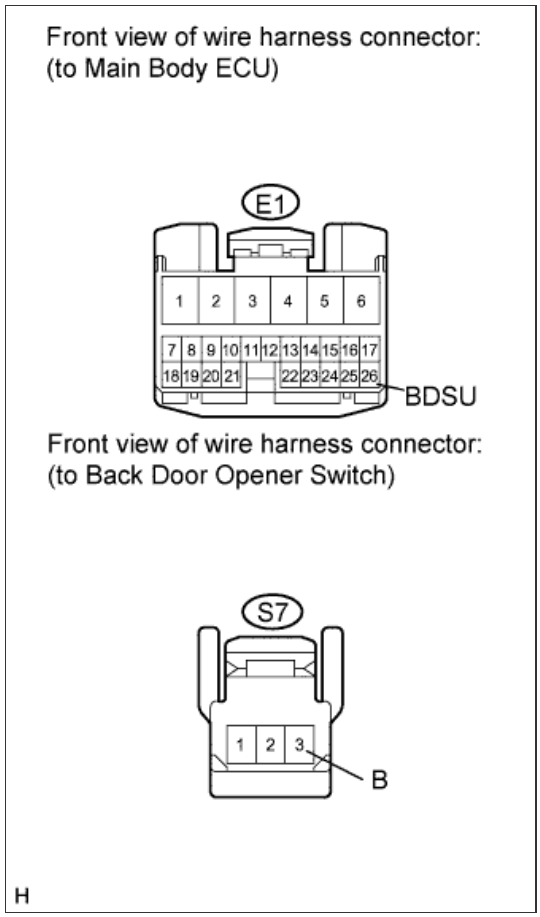

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

for Preparation Click here

DESCRIPTION

When the back door entry lock and unlock functions do not operate, one of the following may be malfunctioning: 1) power door lock control system, or 2) back door electrical key antenna (for outer), or 3) main body ECU (cowl side junction block LH), or 4) certification ECU (smart key ECU assembly).

WIRING DIAGRAM

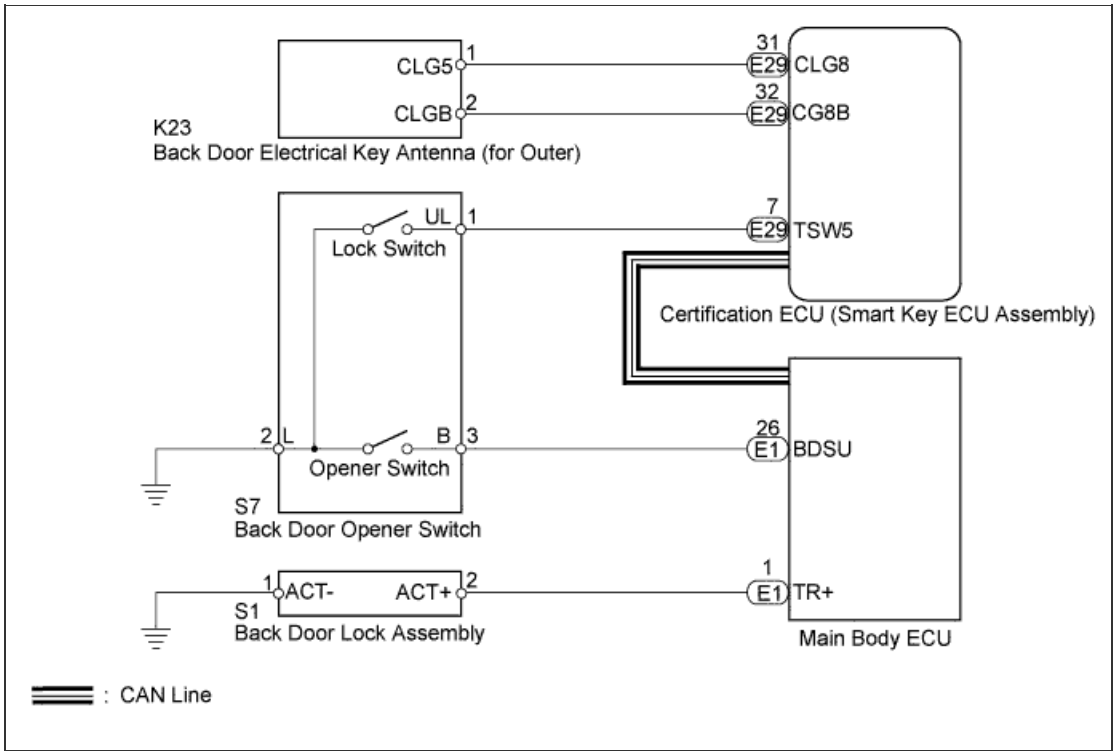

INSPECTION PROCEDURE

NOTICE:

Before performing the inspection, check that there are no problems related to "CAN COMMUNICATION SYSTEM" and "LIN COMMUNICATION SYSTEM".

1.CHECK POWER DOOR LOCK OPERATION

a. When the door control switch of the master switch assembly is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

ster Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Back Lock Pos switch	Back door lock position switch signal / ON or OFF	ON: Back door is unlocked OFF: Back door is locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Back Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK ↓

3.READ VALUE USING INTELLIGENT TESTER (BACK DOOR LOCK SWITCH, BACK DOOR OPENER SWITCH)

a. Using the intelligent tester, read the Data List.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Back Door Handle SW	Back door opener switch / ON or OFF	ON: Back door opener switch is pushed OFF: Back door opener switch is not pushed	-

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Tr/B-Door Lock SW	Back door lock switch / ON or OFF	ON: Back door lock switch is pushed OFF: Back door lock switch is not pushed	-

OK:

"ON" (switch is pushed) or "OFF" (switch is not pushed) appears on the screen.

NG → Go to step 7

OK ↓

4.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - BACK DOOR ELECTRICAL KEY ANTENNA [for Outer])

a. Disconnect the E29 ECU connector.


b. Disconnect the K23 antenna connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E29-31 (CLG8) - K23-1 (CLG5)	Always	Below 1 Ω
E29-32 (CG8B) - K23-2 (CLGB)	Always	Below 1 Ω
E29-31 (CLG8) - Body ground	Always	10 kΩ or higher
E29-32 (CG8B) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

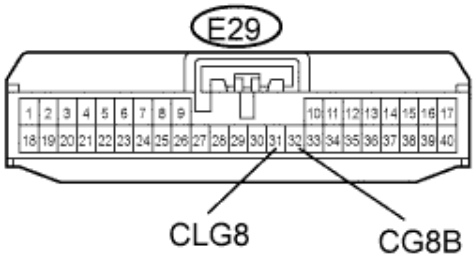

Front view of wire harness connector:
(to Electrical Key Antenna [for Outside Luggage Compartment])

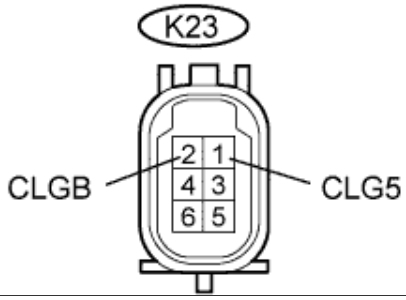

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

5.REPLACE BACK DOOR ELECTRICAL KEY ANTENNA (for Outer)

a. eplace the back door electrical key antenna (Click here).

NEXT

6.CHECK BACK DOOR ELECTRICAL KEY ANTENNA [for Outer] (OPERATION)

a. Check that the entry functions operate normally.

OK:
Entry functions operate normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (BACK DOOR ELECTRICAL KEY ANTENNA IS DEFECTIVE)

7.CHECK HARNESS AND CONNECTOR (BACK DOOR OPENER SWITCH - BODY GROUND)


a. Disconnect the S7 switch connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
S7-2 (L) - Body ground	Always	Below 1 Ω

Front view of wire harness connector:
(to Back Door Opener Switch)

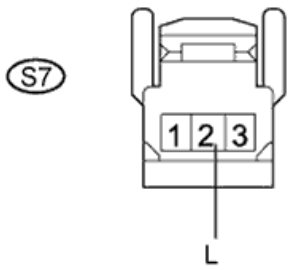

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK → REPLACE BACK DOOR OPENER SWITCH (Click here)

for Preparation Click here

DESCRIPTION

If the back door entry lock function does not operate but the back door open function operates, the communication line between the vehicle and electrical key transmitter is normal. As a faulty part, the entry lock switch circuit (certification ECU (smart key ECU assembly) → back door opener switch) can be considered.

WIRING DIAGRAM

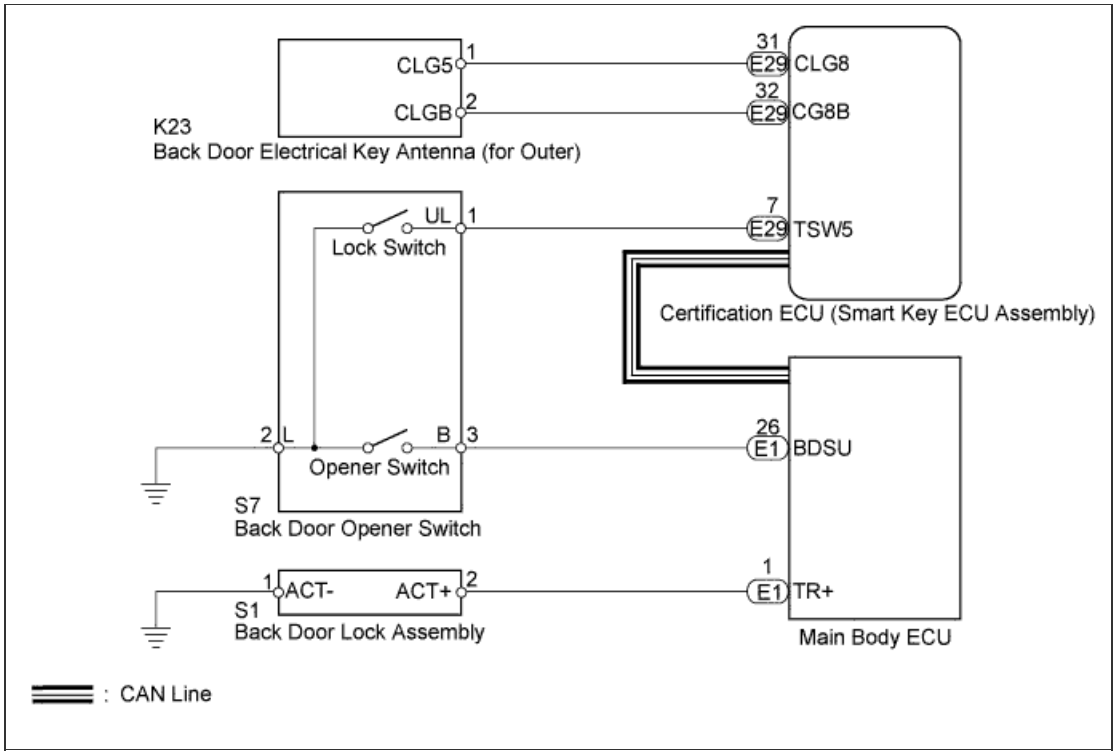

INSPECTION PROCEDURE

NOTICE:

Before performing the inspection, check that there are no problems related to "CAN COMMUNICATION SYSTEM" and "LIN COMMUNICATION SYSTEM".

1.CHECK POWER DOOR LOCK OPERATION

a. When the door control switch of the master switch assembly is operated, check that the locked doors unlock.

OK:
Door locks operate normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.READ VALUE USING INTELLIGENT TESTER (DOOR LOCK POSITION SWITCH)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / Data List.

e. Read the Data List according to the display on the intelligent tester.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Back Lock Pos switch	Back door lock position switch signal / ON or OFF	ON: Back door is unlocked OFF: Back door is locked	-

OK:

On the intelligent tester screen, the display changes between ON and OFF as shown in the chart above.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Proceed to Only Back Door LOCK/UNLOCK Functions do not Operate) (Click here)

OK

3.READ VALUE USING INTELLIGENT TESTER (BACK DOOR LOCK SWITCH)

a. Using the intelligent tester, read the Data List.

Entry & Start

Tester Display	Measurement Item/Display	Normal Condition	Diagnostic Note
Tr/B-Door Lock SW	Back door lock switch / ON or OFF	ON: Back door lock switch is pushed OFF: Back door lock switch is not pushed	-

OK:

"ON" (switch is pushed) or "OFF" (switch is not pushed) appears on the screen.

NG → Go to step 4

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

4.CHECK BACK DOOR OPENER SWITCH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
1 (UL) - 2 (L)	Lock switch pushed	Below 1 Ω
1 (UL) - 2 (L)	Lock switch not pushed	10 kΩ or higher

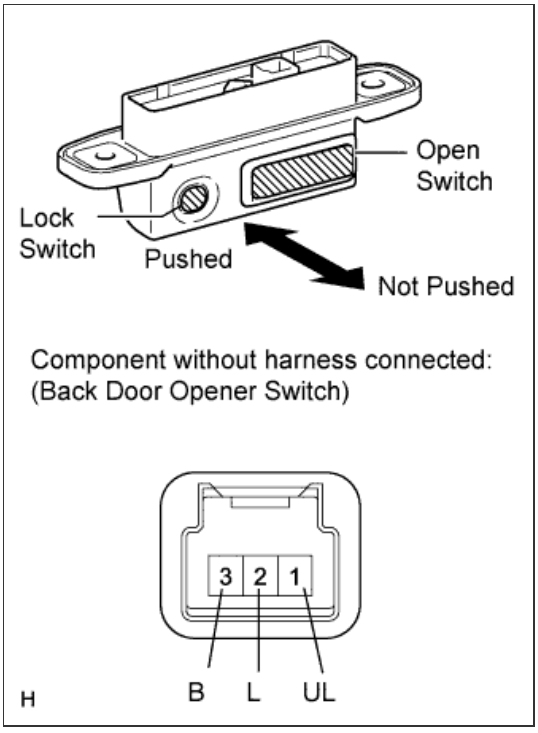

NG → REPLACE BACK DOOR OPENER SWITCH (Click here)

OK

5.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - BACK DOOR OPENER SWITCH)

a. Disconnect the E29 ECU connector.


b. Disconnect the S7 switch connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E29-7 (TSW5) - S7-1 (UL)	Always	Below 1 Ω
E29-7 (TSW5) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

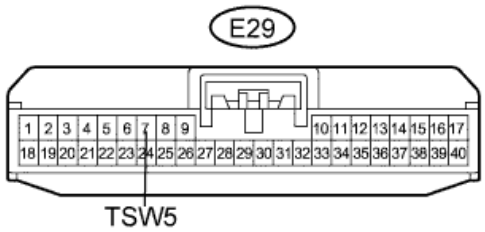

Front view of wire harness connector:
(to Back Door Opener Switch)

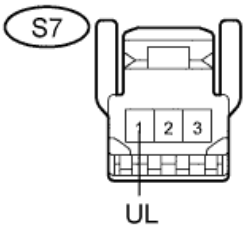

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

for Preparation Click here

1.PRECAUTIONS FOR PUSH-BUTTON START FUNCTION:

a. Before starting the engine, firmly depress the brake pedal (for A/T) or clutch pedal (for M/T) until the indicator in the engine switch turns green.

b. The power source mode (off, on (ACC), on (IG)) is always retained in memory by the vehicle. If the battery is disconnected, the power source mode that was present before the disconnection will be restored after the battery is reconnected. Be sure to turn the engine switch off before disconnecting the cable from the negative battery terminal. Be careful if the power source mode of a vehicle with a discharged battery is not known.

c. After the battery is reconnected, be sure to wait 10 seconds or more before attempting to start the engine. The engine may not start immediately after the battery is reconnected.

d. If the TOYOTA mark of the key is touched to the engine switch to start the engine when the key battery is depleted or affected by wave noise, etc., the following warnings will sound:

i. for A/T:
Driver door open → closed


- An exit warning will sound if the shift lever is in a position other than P and the power source is in a mode other than off.
- An exit warning will sound if the shift lever is in P and the power source is in a mode other than off.

ii. Doors other than the driver door open → closed


- A warning will sound to indicate that the key has been taken out of the vehicle.

These warnings will sound because it is not possible for the vehicle to determine if the key is present in the vehicle due to the depleted key battery. These warnings do not indicate system malfunctions.

for Preparation Click here

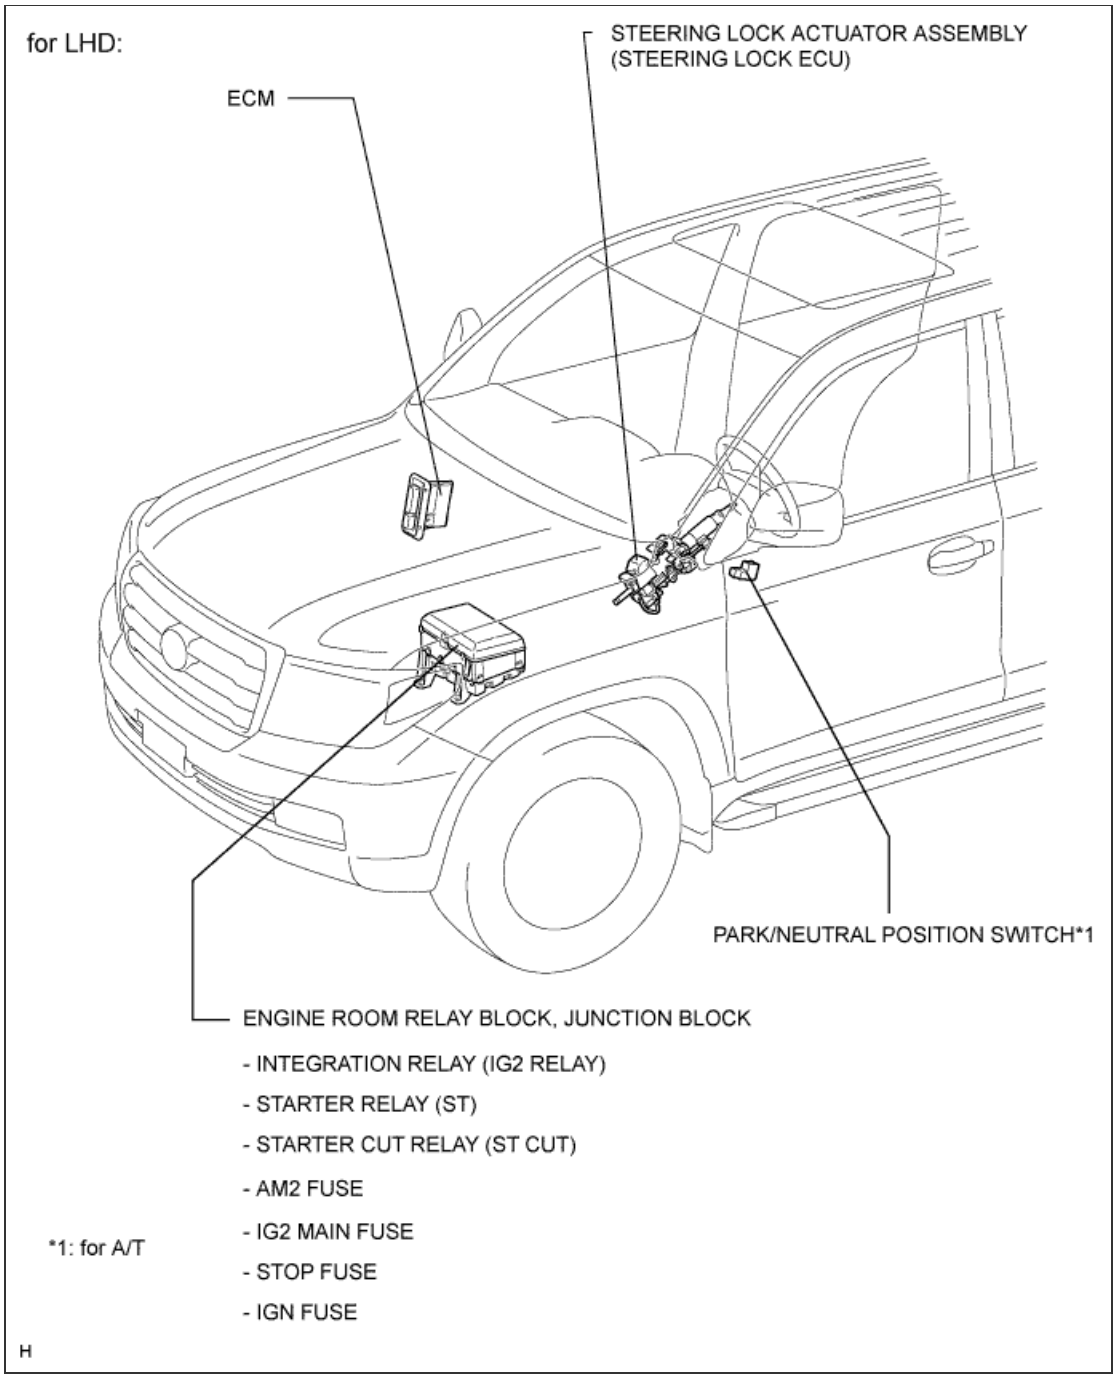


for RHD:

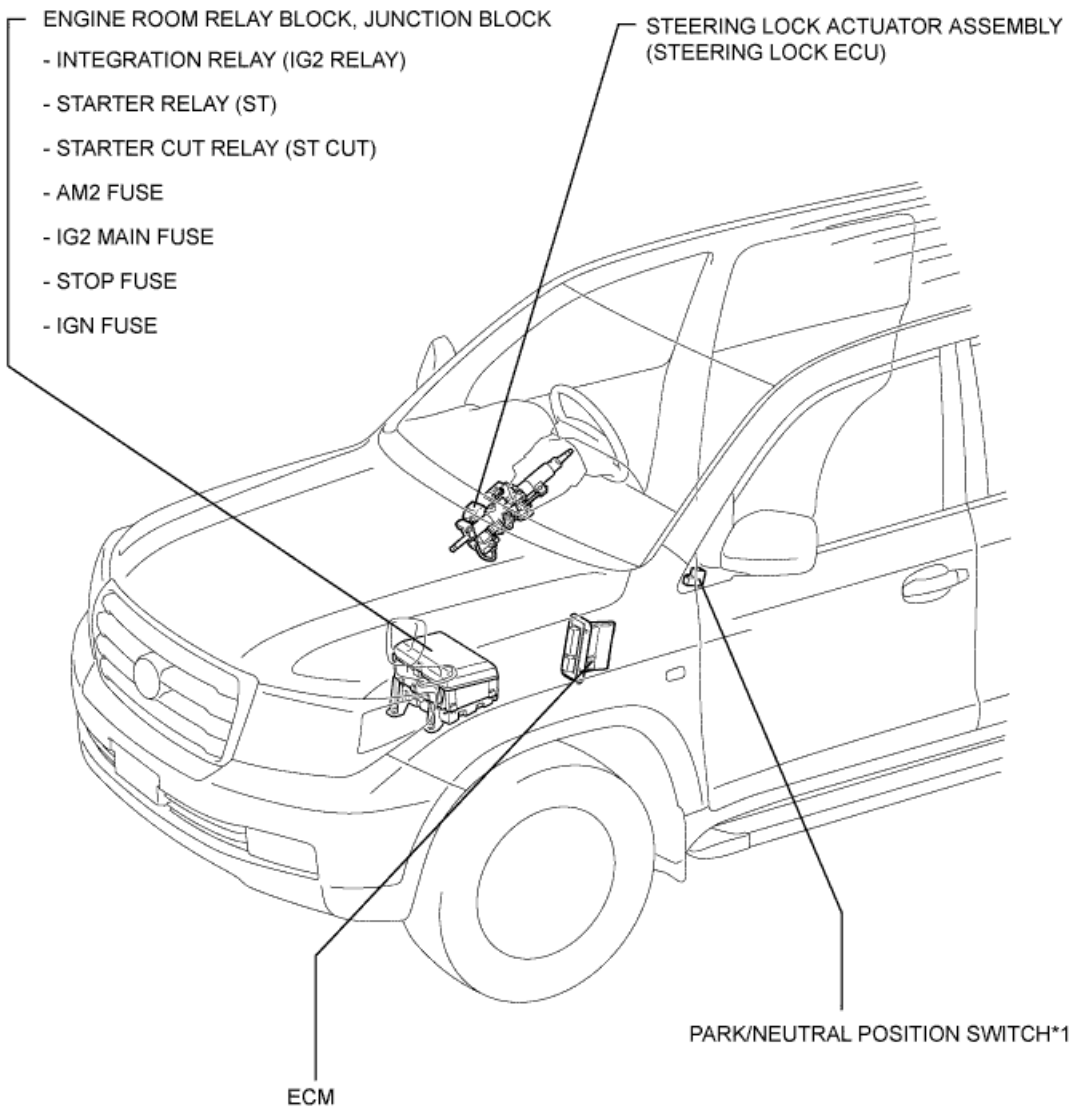

*1: for A/T

H

for LHD:

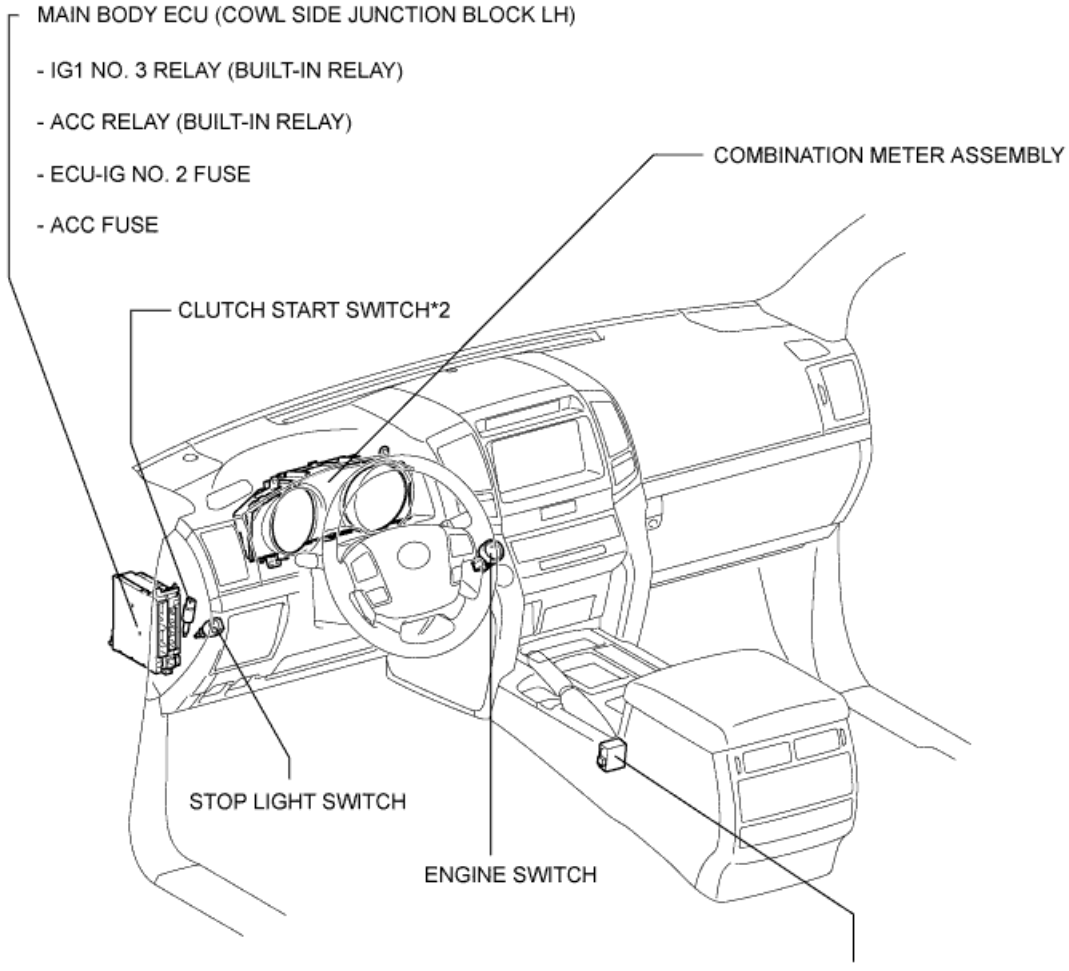

*1: for A/T

*2: for M/T


Refer to Service Bulletin for Installation Position

ID CODE BOX
(IMMOBILISER CODE ECU)

CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

H

for RHD:

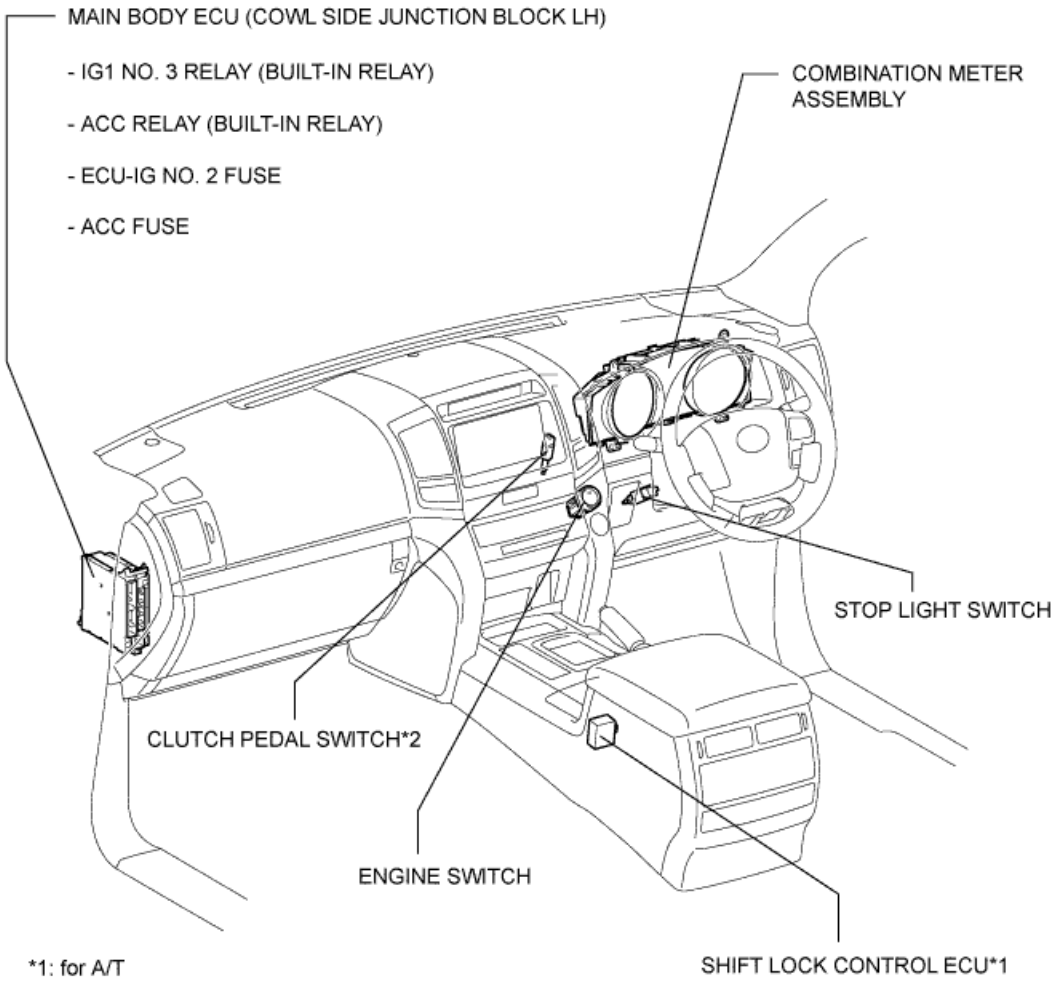

*1: for A/T

*2: for M/T


Refer to Service Bulletin for Installation Position

ID CODE BOX (IMMOBILISER CODE ECU)


CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

H

for Preparation Click here

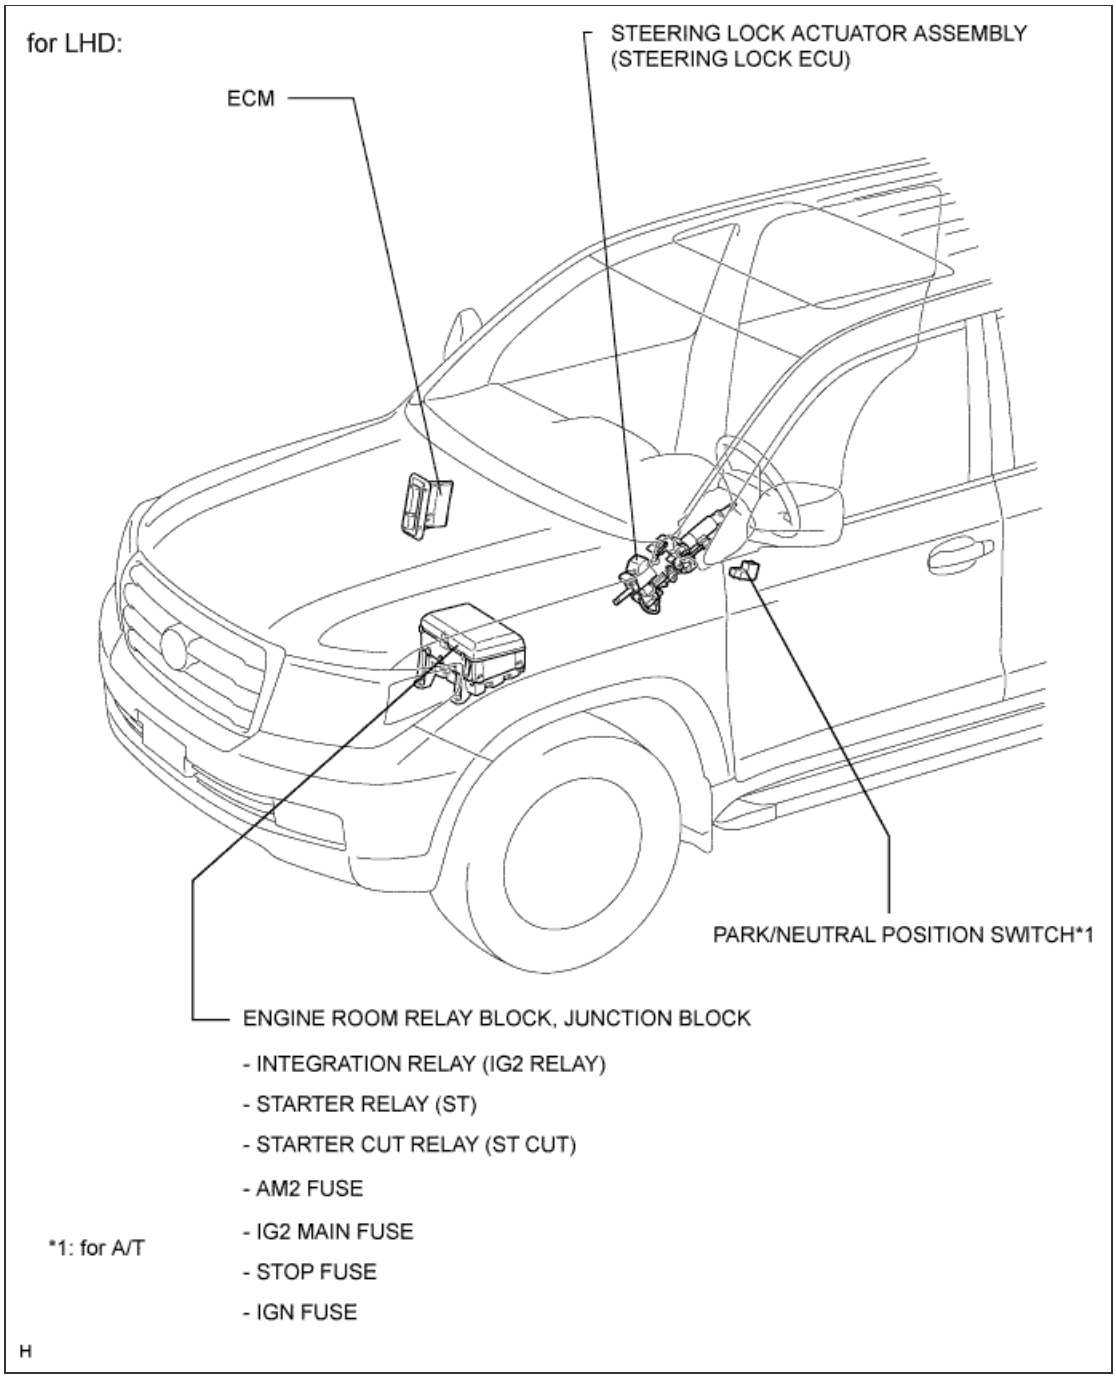


for RHD:

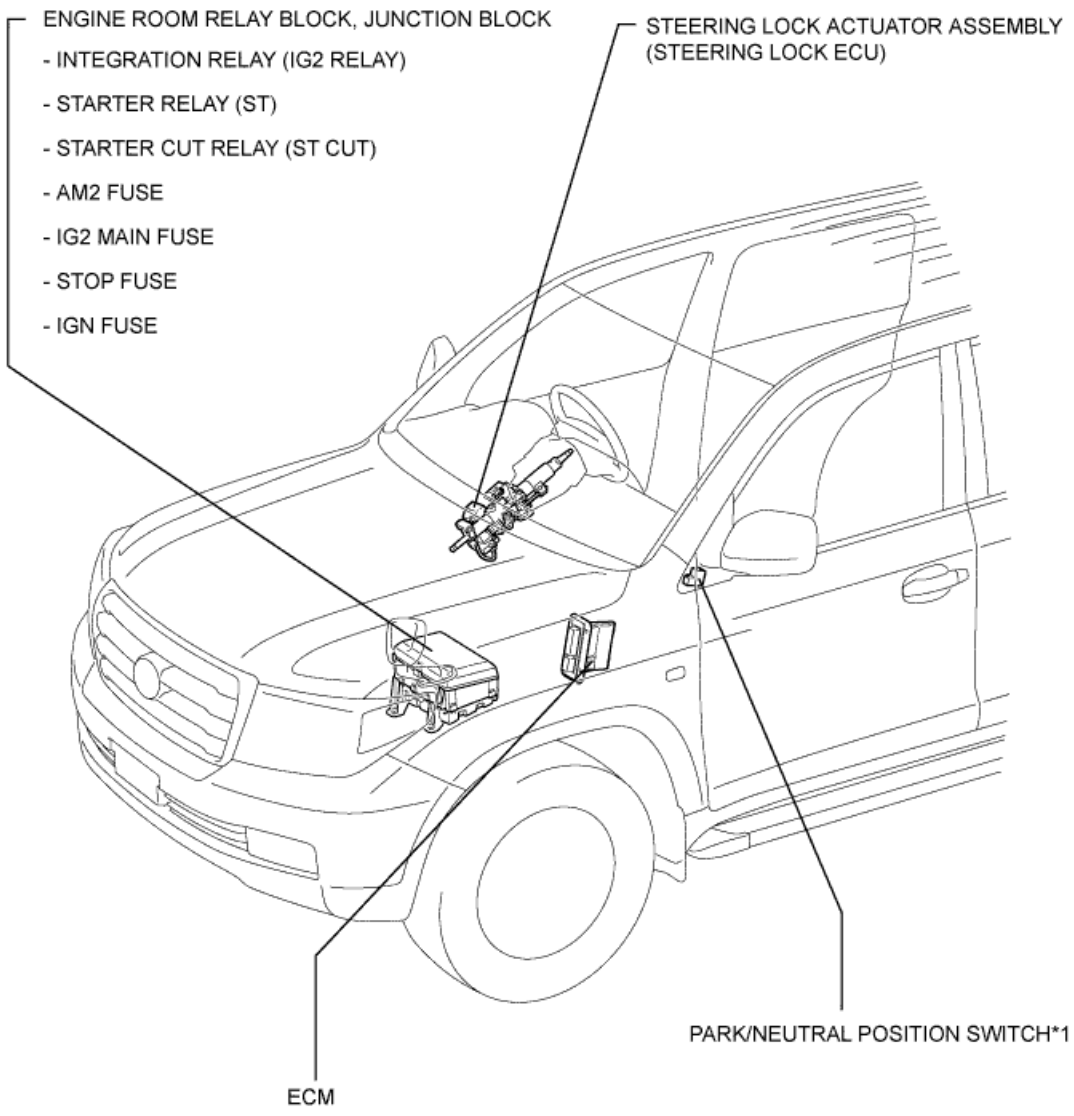

*1: for A/T

H

for LHD:

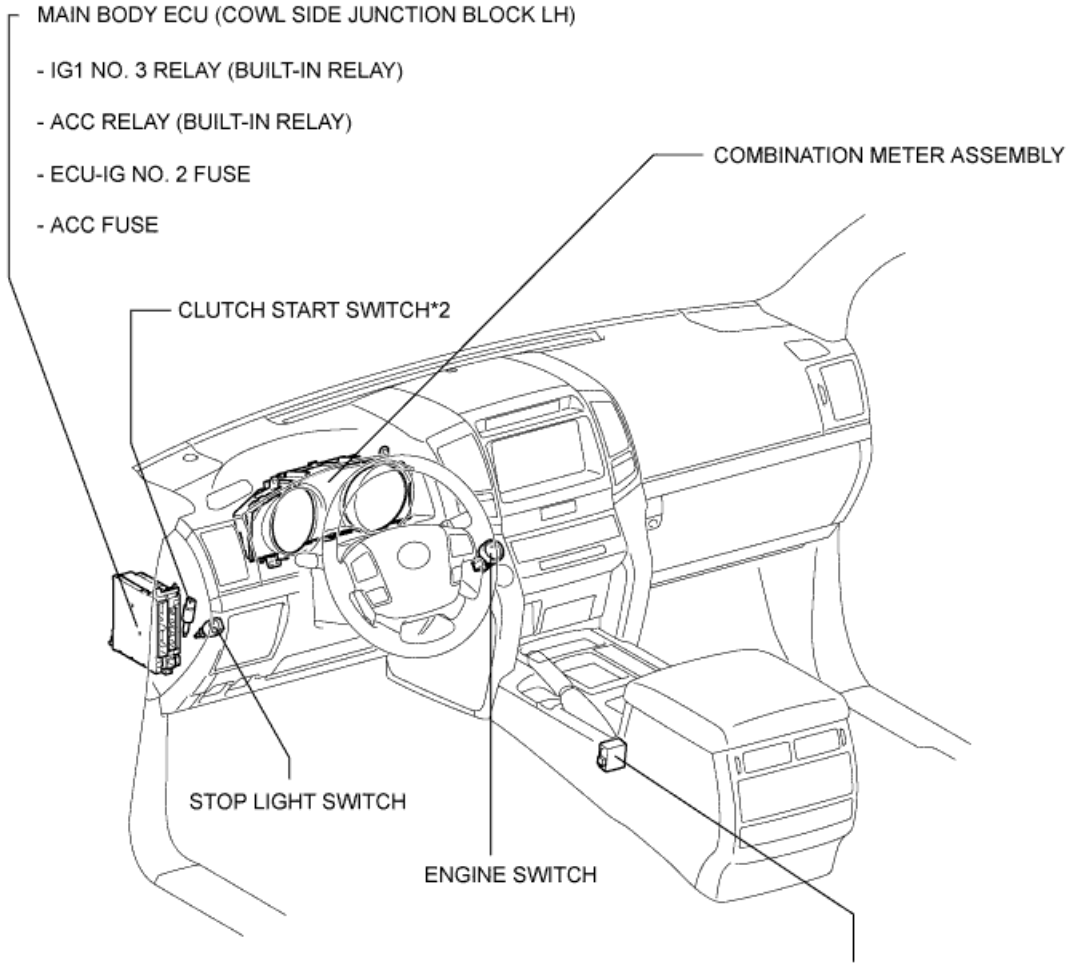

*1: for A/T

*2: for M/T


Refer to Service Bulletin for Installation Position

ID CODE BOX
(IMMOBILISER CODE ECU)

CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

H

for RHD:

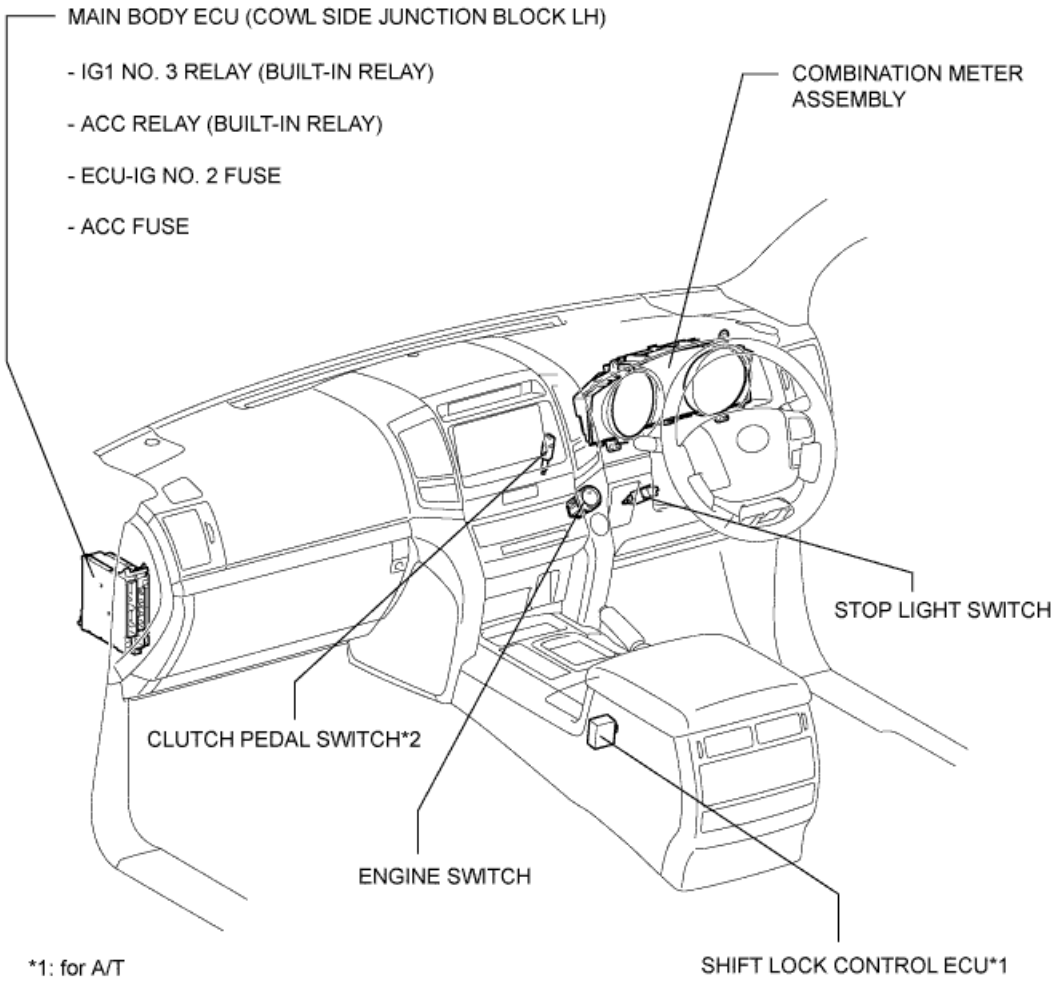

*1: for A/T

*2: for M/T


Refer to Service Bulletin for Installation Position

ID CODE BOX (IMMOBILISER CODE ECU)


CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


H

for Preparation Click here

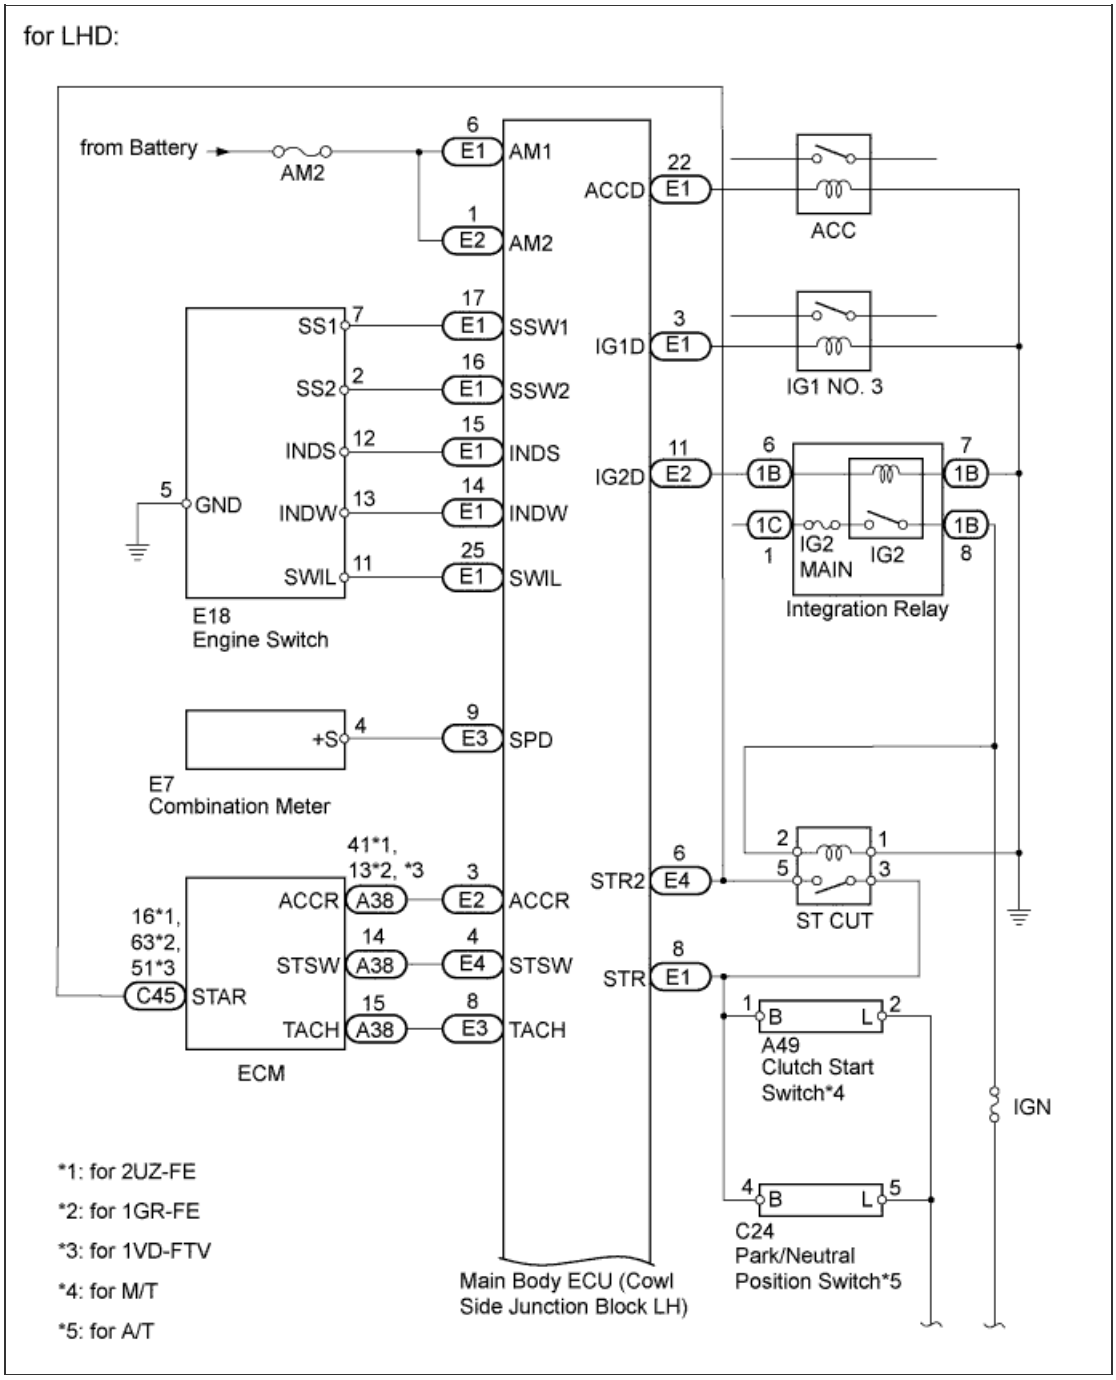

for RHD:

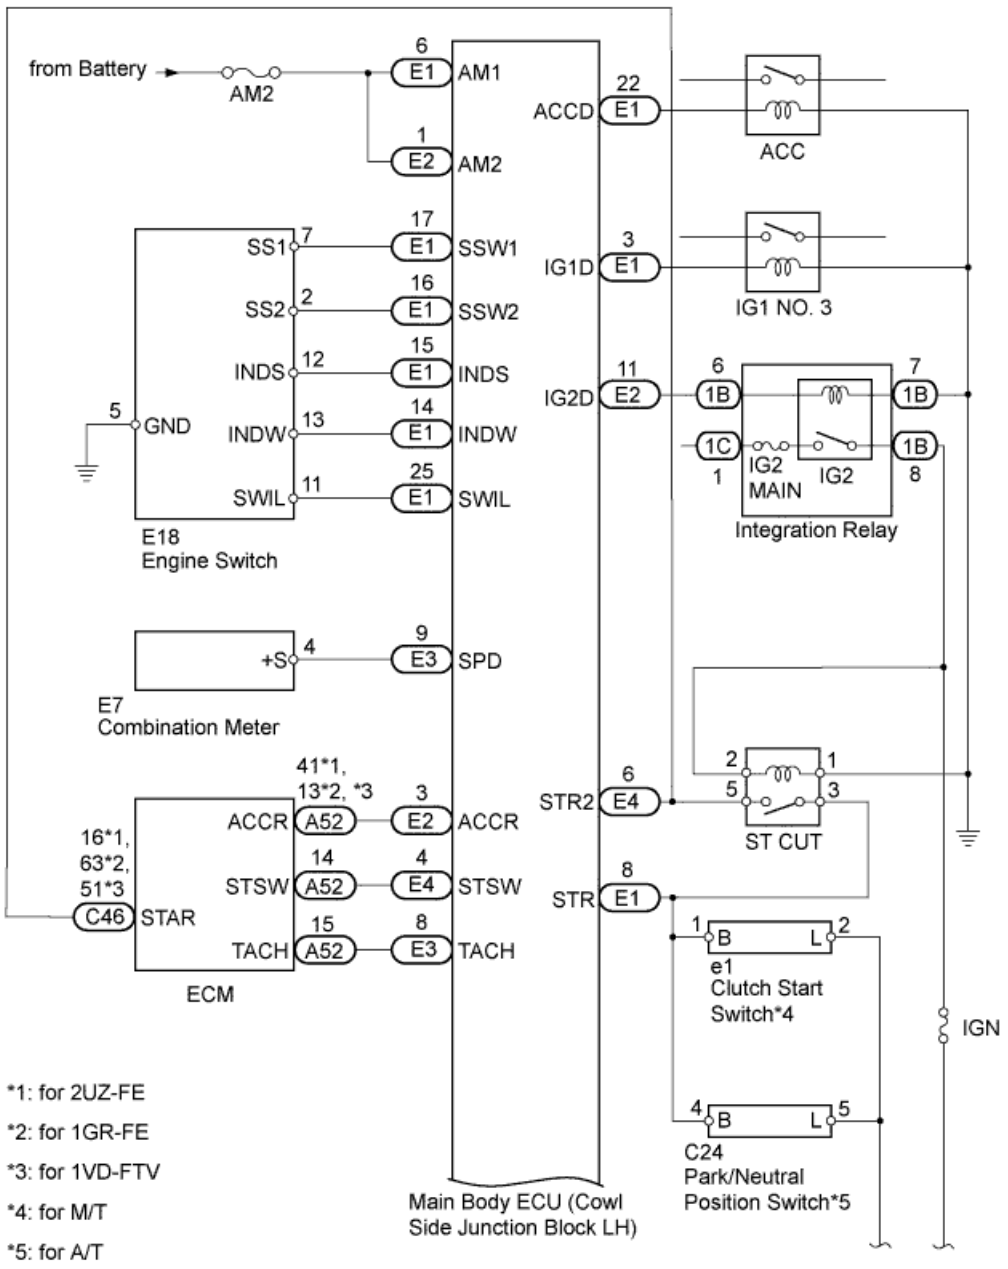

from Battery
AM2
6
E1
AM1
1
E2
AM2
22
ACCD
E1
ACC
17
SSW1
16
SSW2
15
INDS
14
INDW
25
SWIL
SS1
7
SS2
2
INDS
12
INDW
13
SWIL
11
5
GND
E18
Engine Switch
3
IG1D
E1
IG1 NO. 3
11
IG2D
E2
6
1B
7
1B
1C
1
IG2
MAIN
IG2
1B
8
Integration Relay
9
SPD
+S
4
E7
Combination Meter
41*1,
13*2, *3
3
ACCR
A52
E2
ACCR
14
4
STSW
A52
E4
STSW
15
8
TACH
A52
E3
TACH
16*1,
63*2,
51*3
C46
STAR
ECM
6
STR2
E4
2
1
5
3
ST CUT
8
STR
E1
1
B
L
2
e1
Clutch Start
Switch*4
IGN
4
B
L
5
C24
Park/Neutral
Position Switch*5
Main Body ECU (Cowl
Side Junction Block LH)
*1: for 2UZ-FE
*2: for 1GR-FE
*3: for 1VD-FTV
*4: for M/T
*5: for A/T

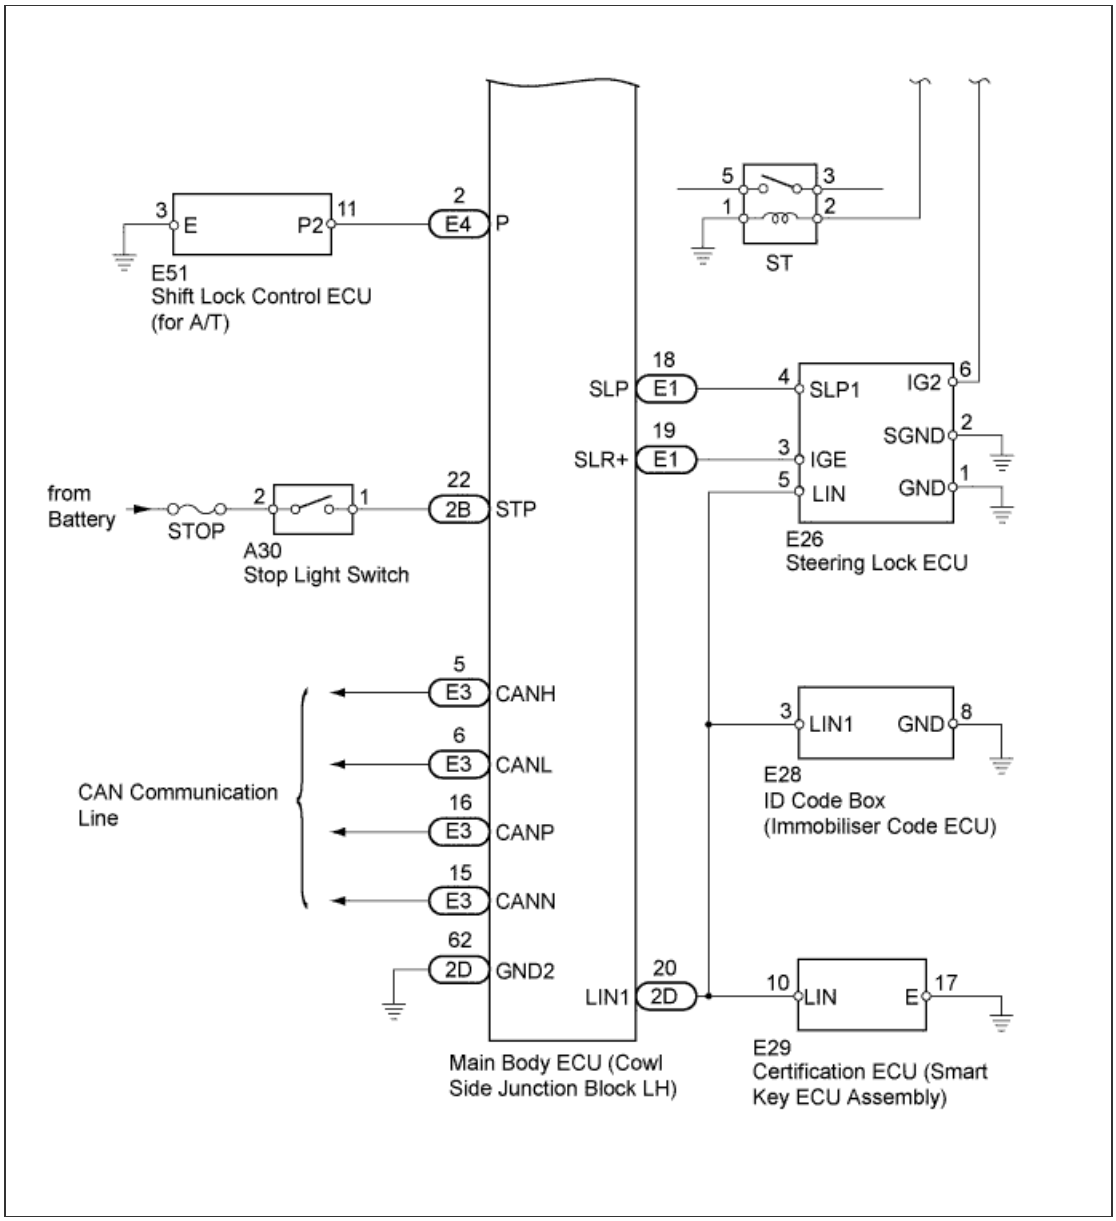


Communication Table


Sender	Receiver	Signal	Line
ECM	Main body ECU	Engine speed signal	CAN
Combination meter	Main body ECU	Vehicle speed signal	CAN
Steering lock ECU	Main body ECU	Steering lock/unlock signal	LIN
Certification ECU (smart key ECU assembly)	Main body ECU	LIN master signal	LIN
Main body ECU	ID code box (immobiliser code ECU)	ID required signal	LIN
Main body ECU	Certification ECU (smart key ECU assembly)	Key existence condition signal	LIN

for Preparation Click here

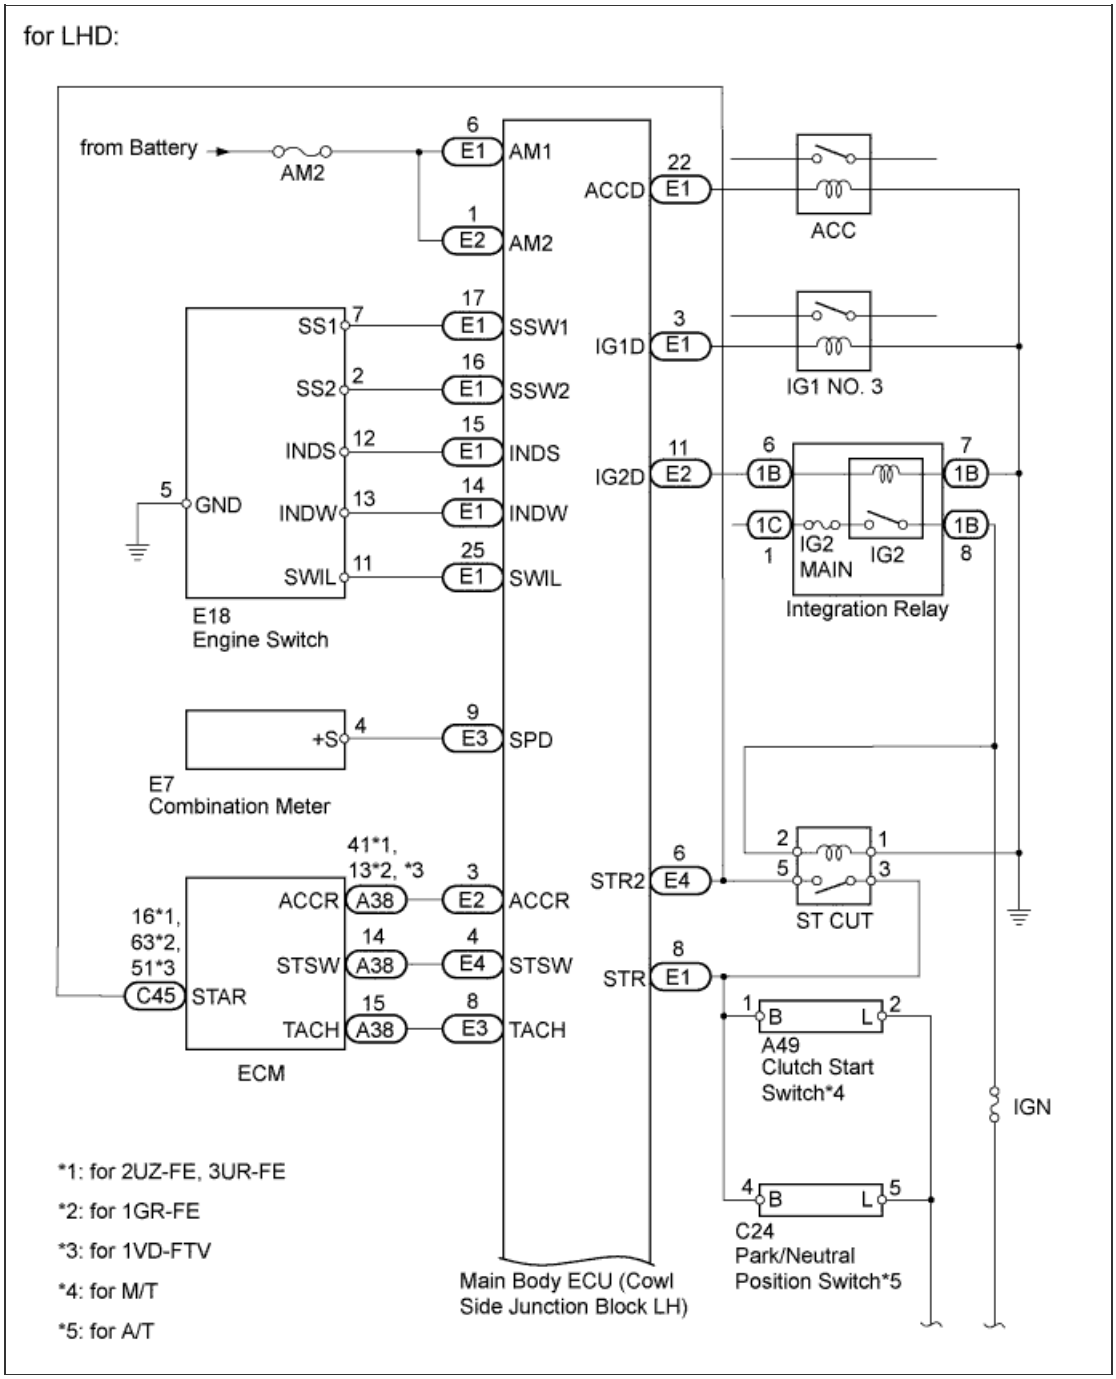

for RHD:

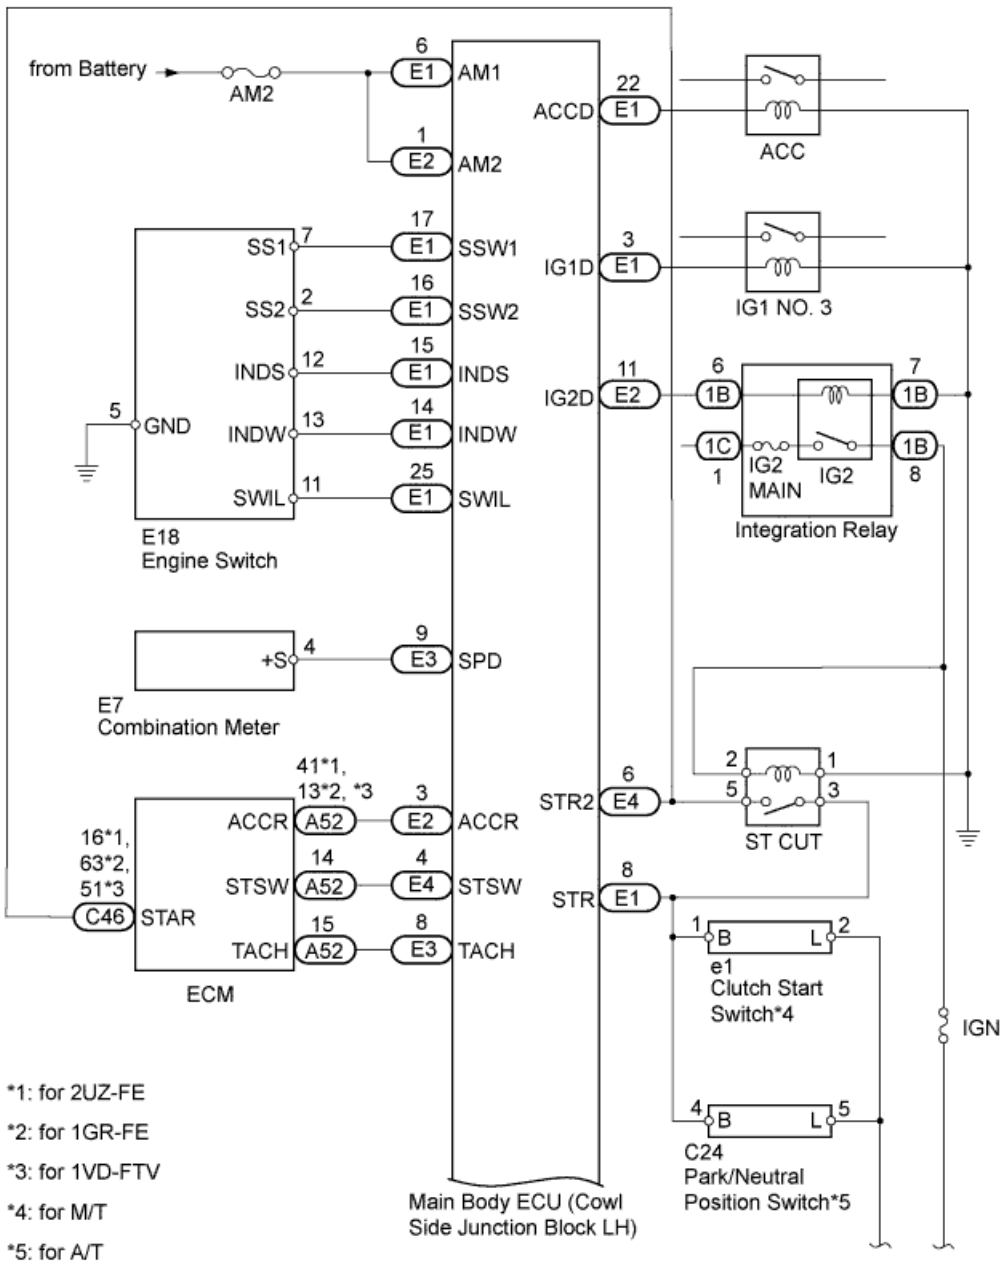
from Battery
AM2
6
E1
AM1
1
E2
AM2
22
ACCD
E1
ACC
17
SSW1
16
SSW2
15
INDS
14
INDW
25
SWIL
SS1
7
SS2
2
INDS
12
INDW
13
SWIL
11
5
GND
E18
Engine Switch
3
IG1D
E1
IG1 NO. 3
11
IG2D
E2
6
1B
7
1B
1C
1
IG2
MAIN
IG2
1B
8
Integration Relay
9
SPD
+S
4
E7
Combination Meter
41*1,
13*2, *3
3
ACCR
A52
E2
ACCR
14
4
STSW
A52
E4
STSW
15
8
TACH
A52
E3
TACH
16*1,
63*2,
51*3
C46
STAR
ECM
6
STR2
E4
2
1
5
3
ST CUT
8
STR
E1
1
B
L
2
e1
Clutch Start
Switch*4
IGN
4
B
L
5
C24
Park/Neutral
Position Switch*5
Main Body ECU (Cowl
Side Junction Block LH)
*1: for 2UZ-FE
*2: for 1GR-FE
*3: for 1VD-FTV
*4: for M/T
*5: for A/T

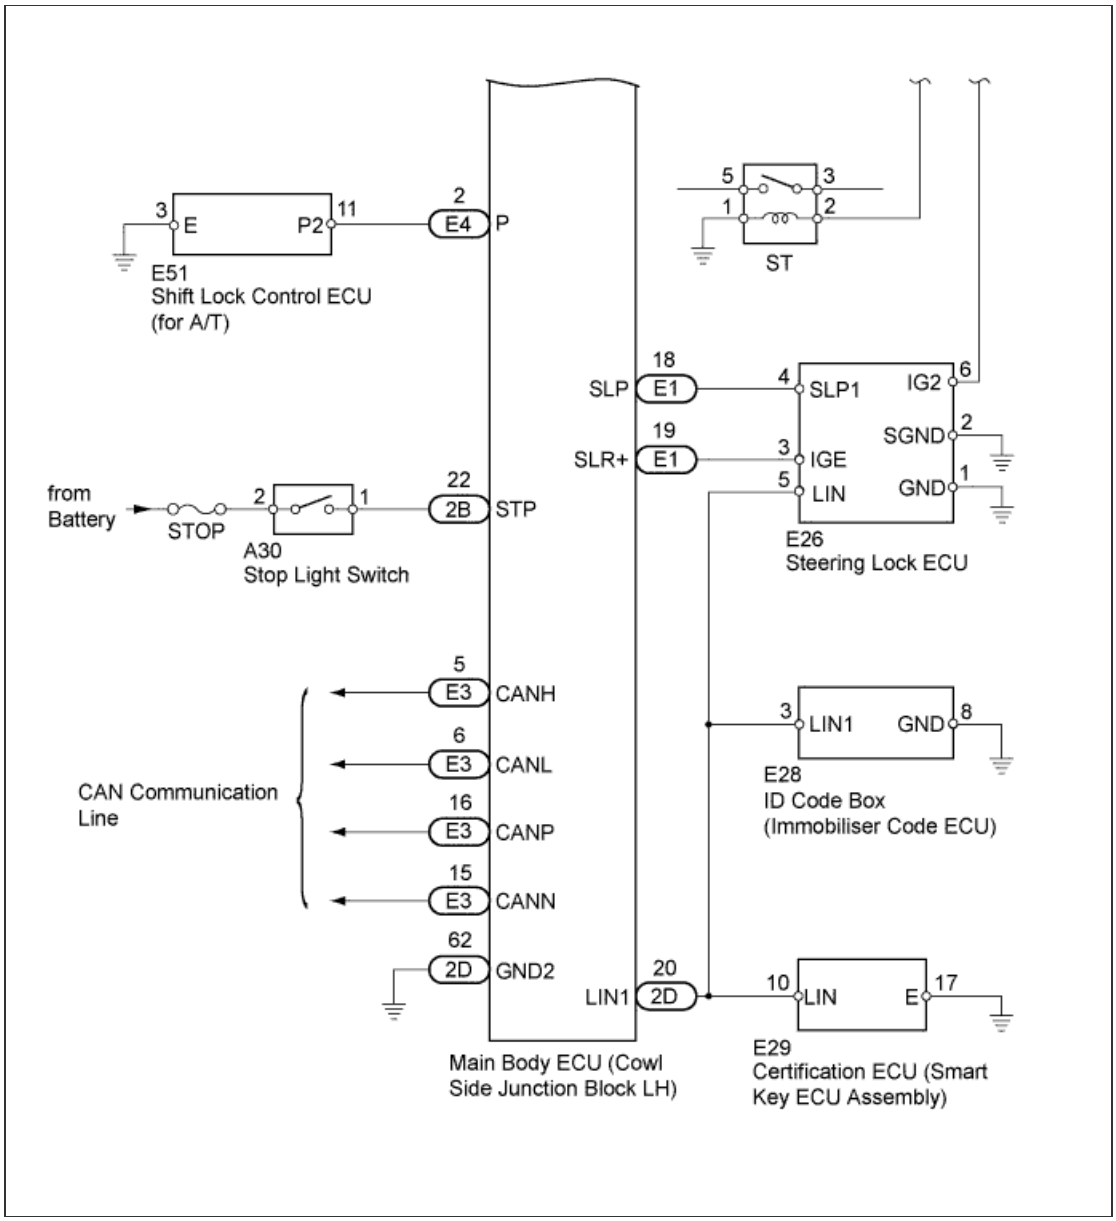

Communication Table

Sender	Receiver	Signal	Line
ECM	Main body ECU	Engine speed signal	CAN
Combination meter	Main body ECU	Vehicle speed signal	CAN
Steering lock ECU	Main body ECU	Steering lock/unlock signal	LIN
Certification ECU (smart key ECU assembly)	Main body ECU	LIN master signal	LIN
Main body ECU	ID code box (immobiliser code ECU)	ID required signal	LIN
Main body ECU	Certification ECU (smart key ECU assembly)	Key existence condition signal	LIN

for Preparation Click here

PUSH-BUTTON START DESCRIPTION

a. The push-button start uses a push-type engine switch, which the driver can operate by merely carrying the key. This system consists primarily of the main body ECU, engine switch, ID code box (immobiliser code ECU), steering lock ECU, key, ACC relay, IG1 No. 3 relay, integration relay (IG2 relay) and certification ECU (smart key ECU assembly). The main body ECU controls the system. This function operates in cooperation with the entry and start system. The table below shows the transition of the engine switch, which depends on whether the brake pedal (for A/T) or clutch pedal (for M/T) is depressed or released.

PUSH-BUTTON START FUNCTION OPERATION

a. for A/T:
This system has different power source mode patterns depending on the brake pedal condition and shift lever position.

Brake Pedal	Shift Lever	Power Source Mode Pattern
Depressed	P or N position	When the engine switch is pushed once. • off → engine start • on (ACC) → engine start • on (IG) → engine start
Not depressed	P position	Each time the engine switch is pushed. • off → on (ACC) → on (IG) → off
	Except P position	Each time the engine switch is pushed. • off → on (ACC) → on (IG) → on (ACC)
-	P position	When the engine switch is pushed in the on (IG) condition (engine running). • on (IG) → off
-	Except P position	When the engine switch is pushed in the on (IG) condition (engine running). • on (IG) → on (ACC)

When the battery of the key is low, the push-button start function can be operated by touching the key to the engine switch.

b. for M/T:
The start function has different power source patterns depending onthe clutch pedal condition.

Clutch Pedal	Power Source Mode Pattern
Depressed	When the engine switch is pushed once. • off → engine start • on (ACC) → engine start • on (IG) → engine start
Not depressed	Each time the engine switch is pushed. • off → on (ACC) → on (IG) → off
-	When the engine switch is pushed in the on (IG) condition (engine running). • on (IG) → off

When the battery of the key is low, the push-button start function can be operated by touching the key to the engine switch.

FUNCTION OF COMPONENT

Component	Function
Engine Switch (Transponder Key Amplifier)	• Transmits engine switch signal to main body ECU. • Informs driver of power source mode or system abnormality with indicator light illumination. • Receives ID code and transmits it to certification ECU (smart key ECU assembly) when key battery is low or affected by wave noise, etc.
Key	Receives signals from oscillators and returns ID code to entry door control receiver.
Indoor Key Oscillator	Receives request signal from certification ECU (smart key ECU assembly) and forms detection area in vehicle interior.
Door Control Receiver	Receives ID code from key and transmits it to certification ECU (smart key ECU assembly).
	• Changes power source mode in 4 stages (off, on (ACC), on (IG), start) in accordance with state of park/neutral position switch.

Main Body ECU	• Controls push-button start function in accordance with signals received from switches and each ECU.
Certification ECU (Smart Key ECU Assembly)	Certifies ID code received from entry door control receiver and transmits certification results to ID code box (immobiliser code ECU) and steering lock ECU.
Shift Lock Control ECU*1	Outputs state of shift position to main body ECU.
Stop Light Switch	Outputs state of brake pedal to main body ECU.
Clutch Start Switch*2	Outputs state of clutch pedal to main body ECU.
ID Code Box (Immobiliser Code ECU)	Receives steering unlock or engine immobiliser unset signals from certification ECU (smart key ECU assembly), certifies them, and transmits each unset signal to steering lock ECU or ECM.
ECM	• Receives engine start request signal from main body ECU, turns on ST relay, and starts engine. • Receives signal from ID code box (immobiliser code ECU) and performs engine ignition and fuel injection.

HINT:

*1: for A/T

*2: for M/T

SYSTEM FUNCTION


The electric controls of the push-button start function are described below:

Control	Outline
Engine Switch Control	• When the driver operates the engine switch with a key in driver possession, the certification ECU (smart key ECU assembly) starts the indoor key oscillator, which transmits a request signal to the key. Upon receiving this signal, the key transmits an ID code signal to the door control receiver. • The ID code box (immobiliser code ECU) verifies the check results received from the certification ECU (smart key ECU assembly) via the LIN line and sends them to the main body ECU. Based on these results, the main body ECU authorizes operation of the engine switch.
Diagnosis	When the main body ECU detects a malfunction, the main body ECU diagnoses and memorizes which section failed.

CONSTRUCTION AND OPERATION

a. Engine switch:
The engine switch consists of a momentary type switch, 3 color (amber, green, greenish white) LEDs, and the transponder key amplifier.

- The greenish white LED is for illumination.
- The amber and green LEDs are for the indicator light. The driver can check the present power source mode and whether the engine can start or not in accordance with the illumination state of the indicator light.
- When the main body ECU detects an abnormality in the entry and start system, it makes the amber indicator light flash. If the engine is stopped in this state, it might not be possible to restart it.

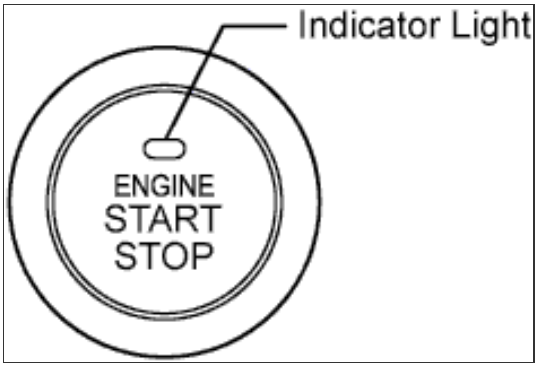

b. Indicator Light Condition


Engine Switch Indicator Light Condition

Power Source Mode/Condition	Indicator Light Condition		
	Brake pedal released (for A/T) Clutch pedal released (for M/T)	Brake pedal depressed, shift lever in P or N (for A/T)	Clutch pedal depressed (for M/T)
Off	Off	Illuminates (Green)	Illuminates (Green)
On (ACC, IG)	Illuminates (Amber)	Illuminates (Green)	Illuminates (Green)
Engine running	Off	Off	Off
Steering lock not unlocked	Flashes (Green) for 30 sec.	Flashes (Green) for 30 sec.	Flashes (Green) for 30 sec.
System malfunction	Flashes (Amber) for 15 sec.	Flashes (Amber) for 15 sec.	Flashes (Amber) for 15 sec.

Clutch start switch malfunction (for M/T)	Flashes (Green) for 15 sec.	Flashes (Green) for 15 sec.	Flashes (Green) for 15 sec.

c. Main body ECU:
The main body ECU consists of the IG1 No. 3 relay and ACC relay actuation circuits and CPU.

SYSTEM NOT OPERATING NORMALLY (DUE TO KEY BATTERY DEPLETION, ELECTRICAL NOISE, ETC.)

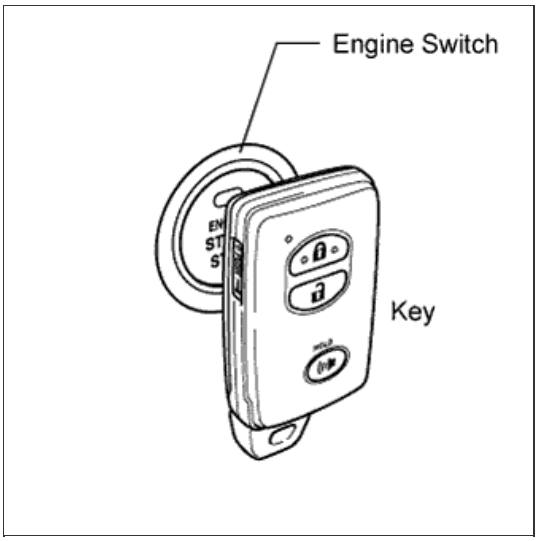

a. To operate the push-button start function when the key battery is low or affected by wave noise, etc., touch the TOYOTA mark of the key to the engine switch while depressing the brake pedal with the shift lever in P (for A/T), or depressing the clutch pedal (for M/T).

b. The main body ECU transmits a key verification request signal from the stop light switch to the certification ECU (smart key ECU assembly).

c. The certification ECU (smart key ECU assembly) does not receive an ID code response from the door control receiver, so it activates the transponder key amplifier built into the engine switch.

d. The transponder key amplifier outputs an engine immobiliser radio wave to the key.

e. The key receives the radio wave, and returns a radio wave response to the transponder key amplifier.

f. The transponder key amplifier combines the key ID codes with the radio wave response, and transmits it to the certification ECU (smart key ECU assembly).

g. The certification ECU (smart key ECU assembly) judges and verifies the ID code, and transmits a key verification OK signal to the main body ECU. The buzzer in the combination meter sounds at the same time.

h. After the buzzer sounds, with the shift lever in P (for A/T), if the engine switch is pressed within 10 seconds with the brake pedal (for A/T) or clutch pedal (for M/T) not depressed, the power source mode changes to on (ACC) or on (IG), as in the normal condition.

DIAGNOSIS

The main body ECU can detect malfunctions in the push-button start function when the power source mode is on (IG).
When the ECU detects a malfunction, the amber indicator light of the engine switch flashes to warn the driver. At the same time, the ECU stores the 5-digit DTC (Diagnostic Trouble Code) in memory.

- The indicator light warning continues for 15 seconds even after the power source mode is changed to off.
- The DTC can be read by connecting the intelligent tester to the DLC3.
- The push-button start function cannot be operated if a malfunction occurs.

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the push-button start function.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.INSPECT COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Using the intelligent tester, check if the CAN communication system is functioning normally.

- For LHD vehicles, use the following procedures (Click here).
- For RHD vehicles, use the following procedures (Click here).

Result

Result	Proceed to
DTC is not output	A
DTC is output (for LHD)	B
DTC is output (for RHD)	C

B. → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (**Click here**)

C. → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (**Click here**)

A

4.CHECK FOR DTC*

a. Check for DTCs and note any stored DTCs (Click here).

b. Clear the DTCs.

c. Check whether the same DTC(s) relevant to the SFI system, EDU system or entry and start system recurs by reproducing the symptoms indicated by the noted DTC(s) in the first step above.

Result

Result	Proceed to
DTC output does not reoccur	A
SFI system DTC output reoccurs (for 1GR-FE)	B
SFI system DTC output reoccurs (for 2UZ-FE)	C
EDU system DTC output reoccurs (for 1VD-FTV)	D
Entry and start system DTC output reoccurs	E

B. GO TO SFI SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (Click here)

C. GO TO SFI SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (Click here)

D. GO TO EDU SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (Click here)

E. GO TO STEP 7

A

5.PROBLEM SYMPTOMS TABLE

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. GO TO STEP 7

A

6.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of ECU (Click here)

b. Data List / Active Test (Click here)

NEXT

7.ADJUST, REPAIR OR REPLACE

NEXT

8.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the push-button start function.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.INSPECT COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Using the intelligent tester, check if the CAN communication system is functioning normally.

- For LHD vehicles, use the following procedures (Click here).
- For RHD vehicles, use the following procedures (Click here).

Result

Result	Proceed to
DTC is not output	A
DTC is output (for LHD)	B
DTC is output (for RHD)	C

B. → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (**Click here**)

C. → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (**Click here**)

A

4.CHECK FOR DTC*

a. Check for DTCs and note any stored DTCs (Click here).

b. Clear the DTCs.

c. Check whether the same DTC(s) relevant to the SFI system, EDU system or entry and start system recurs by reproducing the symptoms indicated by the noted DTC(s) in the first step above.

Result

Result	Proceed to
DTC output does not reoccur	A
SFI system DTC output reoccurs (for 1GR-FE)	B
SFI system DTC output reoccurs (for 2UZ-FE)	C
EDU system DTC output reoccurs (for 1VD-FTV)	D
Entry and start system DTC output reoccurs	E

B. GO TO SFI SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (Click here)

C. GO TO SFI SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (Click here)

D. GO TO EDU SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (Click here)

E. GO TO STEP 7

A

5.PROBLEM SYMPTOMS TABLE

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. GO TO STEP 7

A

6.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of ECU (Click here)

b. Data List / Active Test (Click here)

NEXT

7.ADJUST, REPAIR OR REPLACE

NEXT

8.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the push-button start function.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.INSPECT COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Using the intelligent tester, check if the CAN communication system is functioning normally.

- For LHD vehicles, use the following procedures (Click here).
- For RHD vehicles, use the following procedures (Click here).

Result

Result	Proceed to
DTC is not output	A
DTC is output (for LHD)	B
DTC is output (for RHD)	C

B. → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (**Click here**)

C. → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (**Click here**)

A

4.CHECK FOR DTC*

a. Check for DTCs and note any stored DTCs (Click here).

b. Clear the DTCs.

c. Check whether the same DTC(s) relevant to the SFI system, EDU system or entry and start system recurs by reproducing the symptoms indicated by the noted DTC(s) in the first step above.

Result

Result	Proceed to
DTC output does not reoccur	A
SFI system DTC output reoccurs (for 1GR-FE)	B
SFI system DTC output reoccurs (for 2UZ-FE)	C
SFI system DTC output reoccurs (for UR-FE)	D
EDU system DTC output reoccurs (for 1VD-FTV)	E

Entry and start system DTC output reoccurs	F

B. GO TO SFI SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (Click here)

C. GO TO SFI SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (Click here)

D. GO TO SFI SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (Click here)

E. GO TO EDU SYSTEM (DIAGNOSTIC TROUBLE CODE CHART) (Click here)

F. GO TO STEP 7

A

5.PROBLEM SYMPTOMS TABLE

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. GO TO STEP 7

A

6.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of ECU (Click here)

b. Data List Active Test (Click here)

NEXT

7.ADJUST, REPAIR OR REPLACE

NEXT

8.CONFIRMATION TEST

NEXT

END

for Preparation Click here

CUSTOMIZING FUNCTION WITH INTELLIGENT TESTER (REFERENCE)

NOTICE:

- **When the customer requests a change in a function, first make sure that the function can be customized.**
- **Be sure to make a note of the current settings before customizing.**
- **When troubleshooting a function, first make sure that the function is set to the default setting.**

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Utility / Customize.

e. Select the setting by referring to the table below.

Entry & Start

Display	Default	Content	Setting
Ignition Available Area	All	Function to choose the available area for the key to start the engine and cancel the steering lock.	Front/All

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Entry and Start System (for Start Function)

Symptom	Suspected Area	See page
Power source mode does not change	AM2 fuse	Click here
	IGN fuse	Click here
	IG2 MAIN fuse	Click here
	Integration relay (IG2 relay) (for R-FE)	Click here
	Integration relay (IG2 relay) (for 2U -FE)	Click here
	Integration relay (IG2 relay) (for	Click here
	Engine switch (for R-FE)	Click here
	Engine switch (for 2U -FE)	Click here
	Engine switch (for	Click here
	Main body ECU	Click here
	Room oscillator does not recogni e key	Click here
	arness or connector	Click here
Engine does not start	S P fuse	Click here
	Stop light switch	Click here
	S relay (for R-FE)	Click here
	S relay (for 2U -FE)	Click here
	S relay (for	Click here
	Park neutral position switch (for R-FE, 2U -FE)	Click here
	Park neutral position switch (for	Click here
	Shift lock control ECU (for R-FE, 2U -FE)	Click here
	Shift lock control ECU (for	Click here
	Steering lock actuator assembly (Steering lock control ECU)	Click here
	I code bo (Immobiliser code ECU)	-
	Certification ECU (Smart key ECU assembly)	-
	Main body ECU	Click here
	Steering lock system	Click here
	ECM (for R-FE)	Click here
	ECM (for 2U -FE)	Click here
	ECM (for	Click here
	Power source mode does not change	Click here
	arness or connector	Click here
Engine switch indicator circuit	Engine switch (for R-FE)	Click here
	Engine switch (for 2U -FE)	Click here
	Engine switch (for	Click here
	Main body ECU	Click here
	arness or connector	Click here

for Preparation Click here

HINT:


Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Entry and Start System (for Start Function)

Symptom	Suspected Area	See page
Power source mode does not change	AM2 fuse	Click here
	IGN fuse	Click here
	IG2 MAIN fuse	Click here
	Integration relay (IG2 relay) (for R-FE)	Click here
	Integration relay (IG2 relay) (for 2U -FE)	Click here
	Integration relay (IG2 relay) (for 3UR-FE)	Click here
	Integration relay (IG2 relay) (for	Click here
	Engine switch (for R-FE)	Click here
	Engine switch (for 2U -FE)	Click here
	Engine switch (for 3UR-FE)	Click here
	Engine switch (for	Click here
	Main body ECU	Click here
	Room oscillator does not recogni e key	Click here
	Harness or connector	Click here
Engine does not start	ST P fuse	Click here
	Stop light switch	Click here
	ST relay (for R-FE)	Click here
	ST relay (for 2U -FE)	Click here
	ST relay (for 3UR-FE)	Click here
	ST relay (for	Click here
	Park neutral position switch (for R-FE, 2U -FE)	Click here
	Park neutral position switch (for , 3UR-FE)	Click here
	Shift lock control ECU (for R-FE, 2U -FE)	Click here
	Shift lock control ECU (for , 3UR-FE)	Click here
	Steering lock actuator assembly (Steering lock control ECU)	Click here
	I code bo (Immobiliser code ECU)	-
	Certification ECU (Smart key ECU assembly)	-
	Main body ECU	Click here
	Steering lock system	Click here
	ECM (for R-FE)	Click here
	ECM (for 2U -FE)	Click here
	ECM (for 3UR-FE)	Click here
	ECM (for	Click here
	Power source mode does not change	Click here
	Harness or connector	Click here
Engine switch indicator circuit	Engine switch (for R-FE)	Click here
	Engine switch (for 2U -FE)	Click here
	Engine switch (for 3UR-FE)	Click here
	Engine switch (for	Click here
	Main body ECU	Click here
	Harness or connector	Click here

for Preparation Click here

CHECK MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

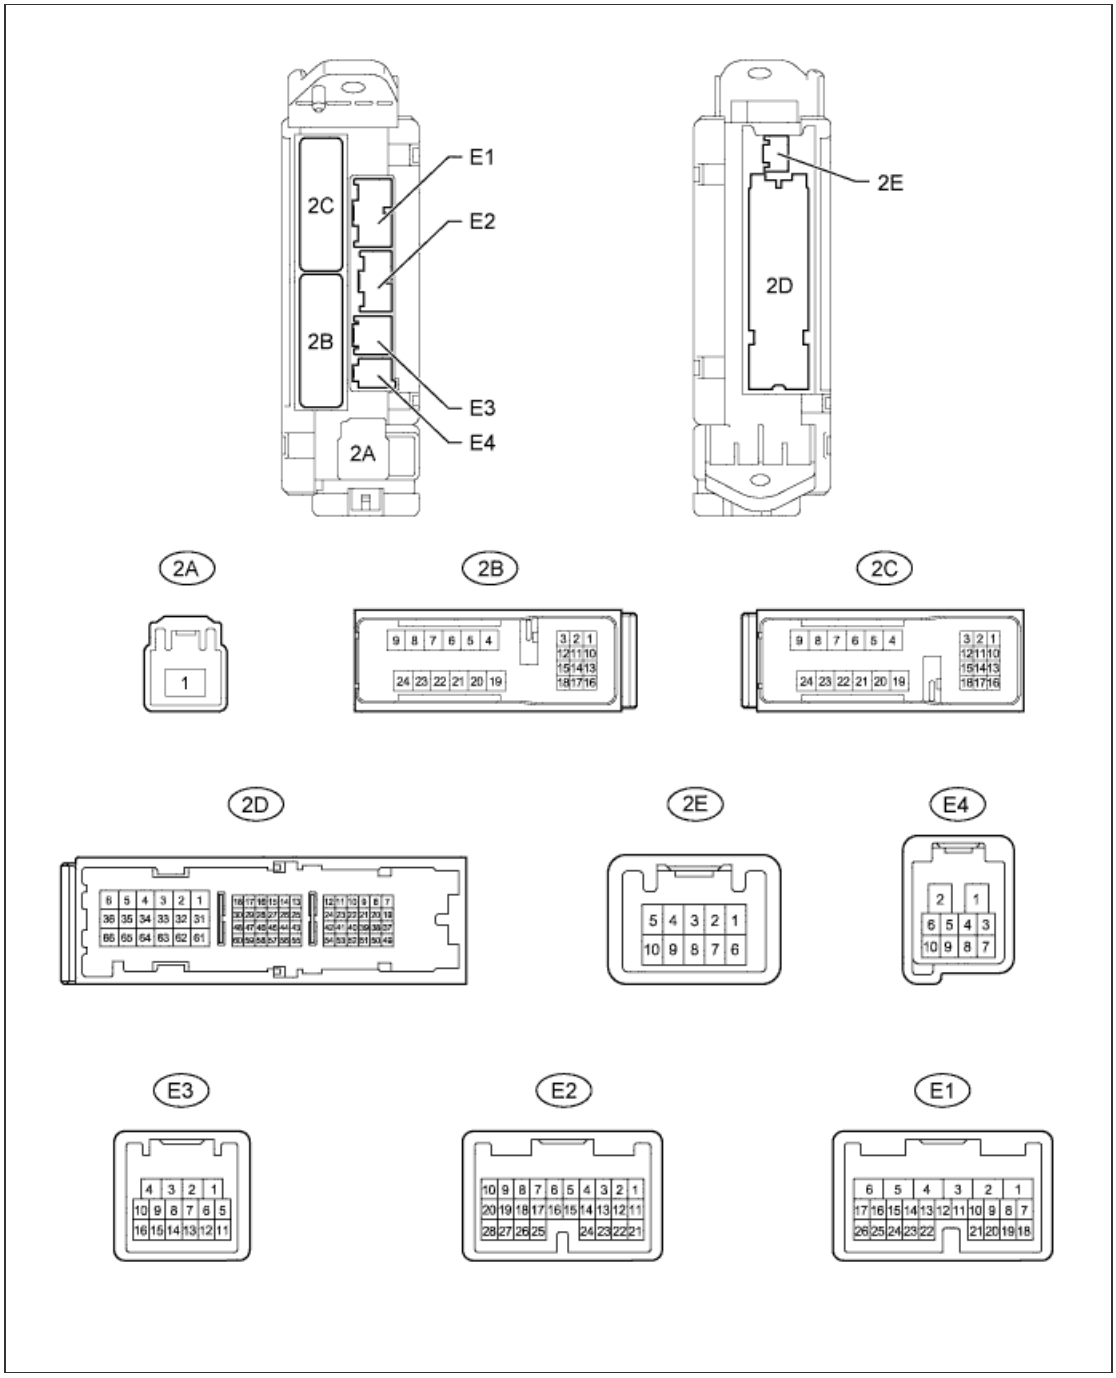

a. Disconnect the E1, E2 and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E1-6 (AM1) - Body ground	W - Body ground	+B power supply	Always	11 to 14 V
E2-1 (AM2) - Body ground	W - Body ground	+B power supply	Always	11 to 14 V
E1-17 (SSW1) - Body ground	B - Body ground	Engine switch 1 input	Engine switch pushed	Below 1 Ω
E1-17 (SSW1) - Body ground	B - Body ground	Engine switch 1 input	Engine switch not pushed	10 kΩ or higher

E1-16 (SSW2) - Body ground	B - Body ground	Engine switch 2 input	Engine switch pushed	Below 1 Ω
E1-16 (SSW2) - Body ground	B - Body ground	Engine switch 2 input	Engine switch not pushed	10 kΩ or higher
2D-62 (GND2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
2D-20 (LIN) - Body ground	GR - Body ground	LIN line	Always	10 kΩ or higher

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E1, E2 and 2D main body ECU connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E1-22 (ACCD) - 2D-62 (GND2)	P - W-B	ACC relay drive signal	Engine switch on (ACC)	11 to 14 V
E1-22 (ACCD) - 2D-62 (GND2)	P - W-B	ACC relay drive signal	Engine switch off	Below 1 V
E1-3 (IG1D) - 2D-62 (GND2)	G - W-B	IG1 No. 3 relay drive signal	Engine switch on (IG)	11 to 14 V
E1-3 (IG1D) - 2D-62 (GND2)	G - W-B	IG1 No. 3 relay drive signal	Engine switch on (ACC)	Below 1 V
E2-11 (IG2D) - 2D-62 (GND2)	B - W-B	Integration relay (IG2 relay) drive signal	Engine switch on (IG)	11 to 14 V
E2-11 (IG2D) - 2D-62 (GND2)	B - W-B	Integration relay (IG2 relay) drive signal	Engine switch on (ACC)	Below 1 V
E1-19 (SLR+) - 2D-62 (GND2)	G - W-B	Steering lock power supply	Steering lock motor operating	Below 1 V
E1-19 (SLR+) - 2D-62 (GND2)	G - W-B	Steering lock power supply	Steering lock motor not operating	11 to 14 V
E1-8 (STR) - 2D-62 (GND2)	L - W-B	Park/neutral position switch signal*1 Clutch pedal switch signal*2	Engine switch on (IG), shift lever not in P or N → P or N*1 Engine switch on (IG), Clutch pedal switch released → Depressed*2	Below 2 V → Pulse generation*3
E1-18 (SLP) - 2D-62 (GND2)	SB - W-B	Steering lock actuator position signal	Steering lock locked	11 to 14 V
E1-18 (SLP) - 2D-62 (GND2)	SB - W-B	Steering lock actuator position signal	Steering lock released	Below 1 V
E3-9 (SPD) - 2D-62 (GND2)	V - W-B	Speed signal from combination meter	Engine switch on (IG), driving wheel rotating slowly	Pulse generation (see waveform 1)
E3-8 (TACH) - 2D-62 (GND2)	W - W-B	Tachometer signal	Engine running	Pulse generation (see waveform 2)
E4-2 (P) - 2D-62 (GND2)*1	L - W-B	Shift lock signal	Shift lever in P	Pulse generation (see waveform 3)
E4-2 (P) - 2D-62 (GND2)*1	L - W-B	Shift lock signal	Shift lever not in P	Below 1 V
E4-4 (STSW) - 2D-62 (GND2)	R - W-B	Starter activation request signal	Brake pedal depressed, engine switch depressed*1 Clutch pedal depressed, engine switch depressed*2	11 to 14 V
E1-15 (INDS) - 2D-62 (GND2)	W - W-B	Vehicle condition signal	Brake pedal released with shift lever in P or N, engine switch off, on (ACC), or on (IG)*1 Clutch pedal released, engine switch off, on (ACC), or on (IG)*2	9 to 14 V
E1-14 (INDW) - 2D-62 (GND2)	W - W-B	Vehicle condition signal	Brake pedal released with shift lever in P or N, engine switch off, on (ACC), or on (IG)*1 Clutch pedal released,	9 to 14 V

			engine switch off, on (ACC), or on (IG)*2	
E1-25 (SWIL) - 2D-62 (GND2)	R - W-B	Illumination signal	Light control switch tail or head	11 to 14 V
2B-22 (STP) - 2D-62 (GND2)	R - W-B	Stop light switch signal	Brake pedal depressed	11 to 14 V
2B-22 (STP) - 2D-62 (GND2)	R - W-B	Stop light switch signal	Brake pedal released	Below 1 V

HINT:

*1: for A/T

*2: for M/T

*3: Remove the ST CUT relay before measuring the voltage.

If the result is not as specified, the ECU may have a malfunction.

e. Using an oscilloscope, check the signal waveform of the ECU.


i. Waveform 1

Reference

Terminal No. (Symbol)	Tool Setting	Condition
E3-9 (SPD) - 2D-62 (GND2)	5 V/DIV., 100 msec./DIV.	Driving at approx. 20 km/h (12 mph)

HINT:


As the vehicle speed increases, the wavelength shortens.

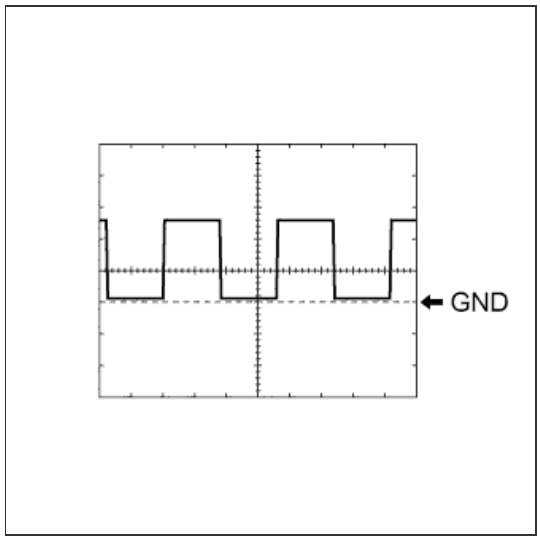

ii. Waveform 2

Reference


Terminal No. (Symbol)	Tool Setting	Condition
E3-8 (TACH) - 2D-62 (GND2)	10 V/DIV., 10 msec./DIV.	Engine switch on (IG) or engine started

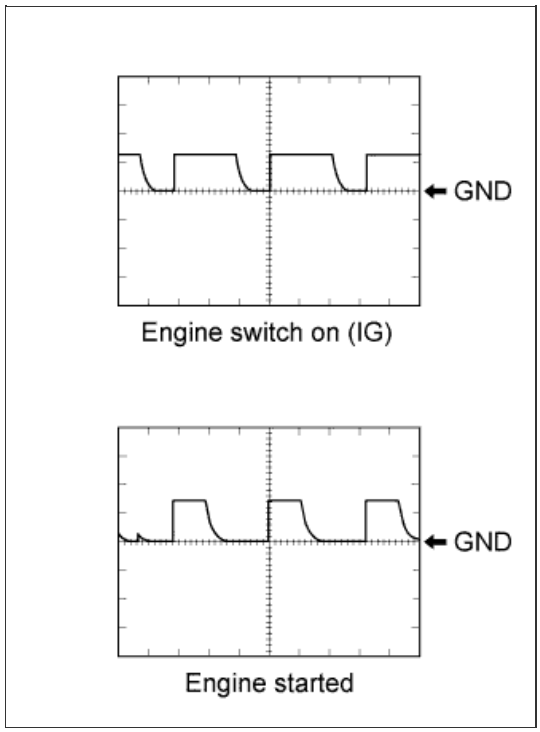


iii. Waveform 3

Reference

Terminal No. (Symbol)	Tool Setting	Condition
E4-2 (P) - 2D-62 (GND2)	2 V/DIV., 20 msec./DIV.	Shift lever in P

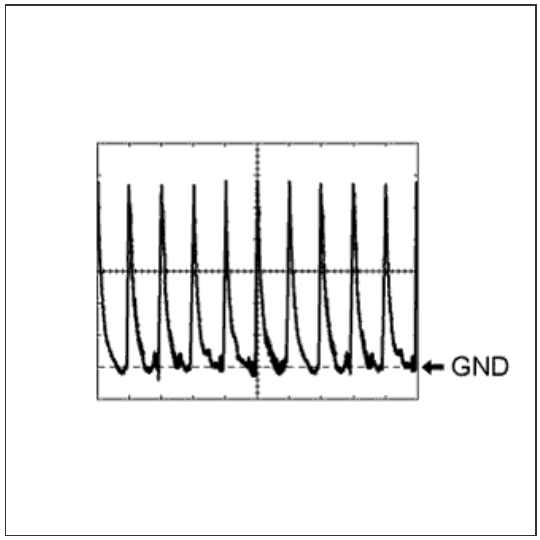

CHECK CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

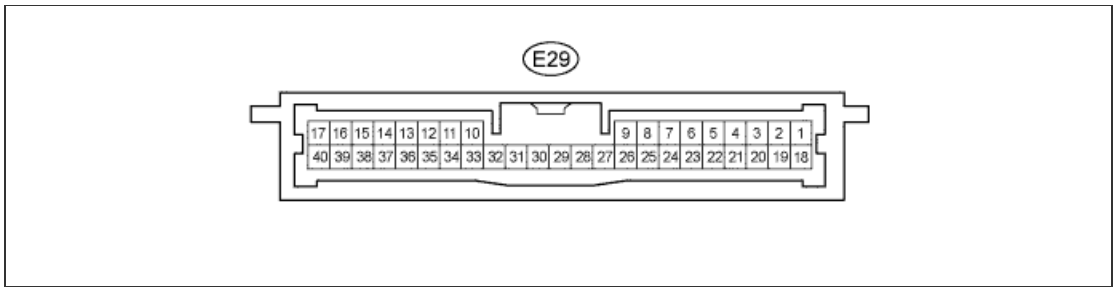

a. Disconnect the E29 certification ECU (smart key ECU assembly) connector.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29-1 (+B) - Body ground	B - Body ground	+B power supply	Always	11 to 14 V
E29-10 (LIN) - Body ground	GR - Body ground	LIN line	Always	10 kΩ or higher
E29-17 (E) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E29 certification ECU (smart key ECU assembly) connector.


d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29-18 (IG) - Body ground	B - Body ground	Ignition power supply	Engine switch on (IG)	11 to 14 V
E29-18 (IG) - Body ground	B - Body ground	Ignition power supply	Engine switch off	Below 1 V

If the result is not as specified, the certification ECU (smart key ECU assembly) may have a malfunction.

CHECK ECM

a. for LHD:
Disconnect the A38 and C45 ECM connectors.

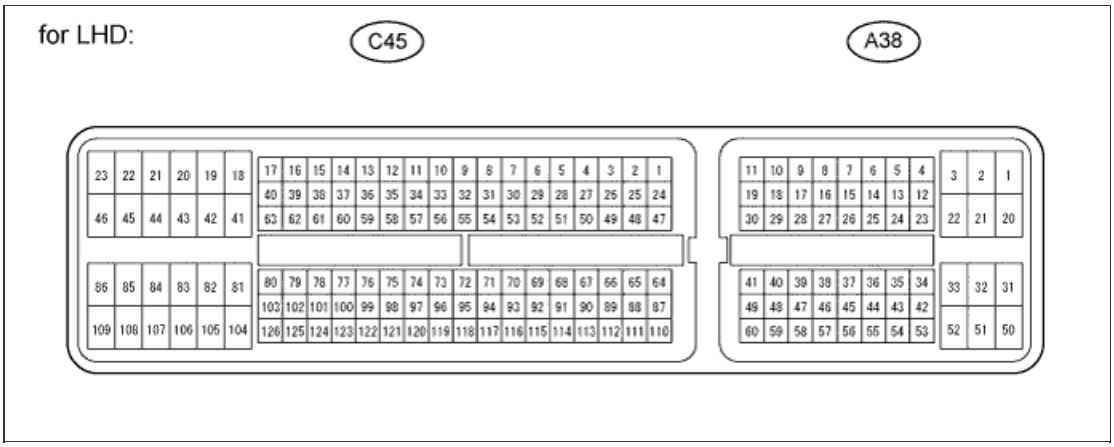

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
A38-1 (BATT) - C45-81 (E1)*1 A38-20 (BATT) - C45-81 (E1)*2, *3	L - BR	Battery (for measuring battery voltage and for ECM memory)	Always	11 to 14 V
A38-3 (+B) - C45-81 (E1)*1 A38-2 (+B) - C45-81 (E1)*2, *3	B - BR	Power source of ECM	Engine switch on (IG)	11 to 14 V
A38-28 (IGSW) - C45-81 (E1)	B - BR	Engine switch signal	Always	11 to 14 V
C45-81 (E1) - Body ground	BR - Body ground	Ground	Always	Below 1 Ω
C45-43 (E01) - Body ground*1 C45-22 (E01) - Body ground*2, *3	W-B - Body ground	Ground	Always	Below 1 Ω
C45-42 (E02) - Body ground*1 C45-21 (E02) - Body ground*2, *3	BR - Body ground	Ground	Always	Below 1 Ω
C45-46 (E03) - Body ground*1 C45-104 (E03) - Body ground*2	W-B - Body ground	Ground	Always	Below 1 Ω
C45-23 (E04) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
C45-21 (E05) - Body ground*1 C45-46 (E05) - Body ground*2	W-B - Body ground	Ground	Always	Below 1 Ω

HINT:

*1: for 2UZ-FE

*2: for 1GR-FE

*3: for 1VD-FTV

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the ECM connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
A38-46 (STA) - C45-81 (E1)*1 A38-48 (STA) - C45-81 (E1)*2, *3	R-B - BR	ST relay operation signal	Cranking	5.5 V or more
A38-14 (STSW) - C45-81 (E1)	R - BR	Starter activation request signal	Brake pedal depressed, engine switch on (IG)	Output voltage at terminal AM1 or AM2 is - 2 V or more

A -41 (ACCR) - C45-81 (E1)*1 A38-13 (ACCR) - C45-81 (E1)*2, *3	L-Y - BR	ACC relay cut signal (output)	Engine switch on (IG) → Cranking	11 to 14 V → Below 1 V
A38-15 (TACH) - C45-81 (E1)	W-G - BR	Engine speed signal (output)	Idling	Pulse generation (see waveform 1)
C45-16 (STAR) - C45-81 (E1)*1 C45-63 (STAR) - C45-81 (E1)*2 C45-51 (STAR) - C45-81 (E1)*3	L - BR	ST relay drive signal	Cranking	11 to 14 V

HINT:

*1: for 2UZ-FE

*2: for 1GR-FE

*3: for 1VD-FTV

If the result is not as specified, the ECM may have a malfunction.


e. Using an oscilloscope, check the signal waveform of the ECM.

Reference


Terminal No. (Symbol)	Tool Setting	Condition
A38-15 (TACH) - C45-81 (E1)	5 V/DIV., 10 ms./DIV.	Engine idling

HINT:

As the engine speed increases, the wavelength shortens.

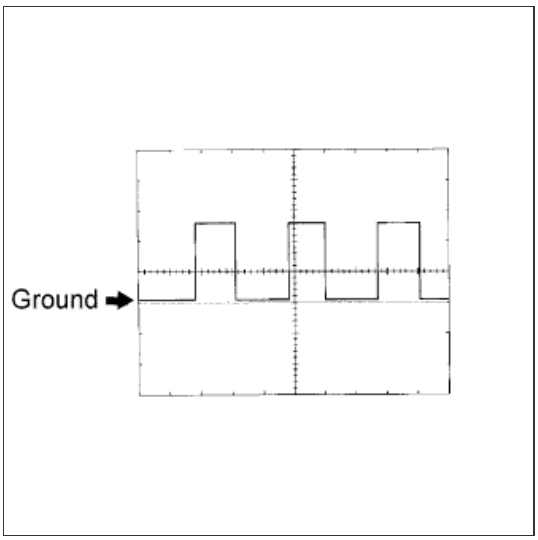

f. for RHD:
Disconnect the A52 and C46 ECM connectors.

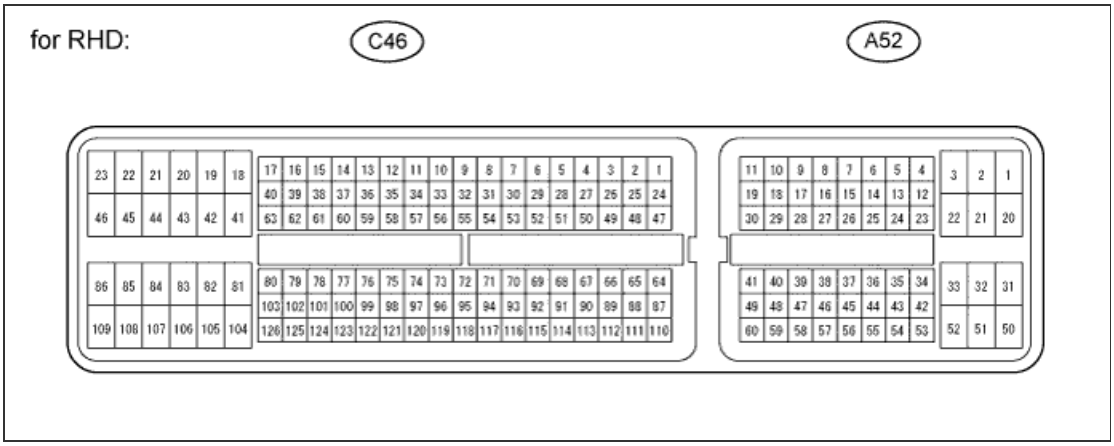

g. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
A52-1 (BATT) - C46-81 (E1)*1 A52-20 (BATT) - C46-81 (E1)*2, *3	L - BR	Battery (for measuring battery voltage and for ECM memory)	Always	11 to 14 V

A52-3 (+B) - C46-81 (E1)*1 A52-2 (+B) - C46-81 (E1)*2, *3	B - BR	Power source of ECM	Engine switch on (IG)	11 to 14 V
A52-28 (IGSW) - C46-81 (E1)	B - BR	Engine switch signal	Always	11 to 14 V
C46-81 (E1) - Body ground	BR - Body ground	Ground	Always	Below 1 Ω
C46-43 (E01) - Body ground*1 C46-22 (E01) - Body ground*2, *3	W-B - Body ground	Ground	Always	Below 1 Ω
C46-42 (E02) - Body ground*1 C46-21 (E02) - Body ground*2, *3	BR - Body ground	Ground	Always	Below 1 Ω
C46-46 (E03) - Body ground*1 C46-104 (E03) - Body ground*2	W-B - Body ground	Ground	Always	Below 1 Ω
C46-23 (E04) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
C46-21 (E05) - Body ground*1 C46-46 (E05) - Body ground*2	W-B - Body ground	Ground	Always	Below 1 Ω

HINT:

*1: for 2UZ-FE

*2: for 1GR-FE

*3: for 1VD-FTV

If the result is not as specified, there may be a malfunction on the wire harness side.

h. Reconnect the ECM connectors.

i. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
A52-46 (STA) - C46-81 (E1)*1 A52-48 (STA) - C46-81 (E1)*2, *3	R-B - BR	ST relay operation signal	Cranking	5.5 V or more
A52-14 (STSW) - C46-81 (E1)	R - BR	Starter activation request signal	Brake pedal depressed, engine switch on (IG)	Output voltage at terminal AM1 or AM2 is - 2 V or more
A52-41 (ACCR) - C46-81 (E1)*1 A52-13 (ACCR) - C46-81 (E1)*2, *3	L-Y - BR	ACC relay cut signal (output)	Engine switch on (IG) → Cranking	11 to 14 V → Below 1 V
A52-15 (TACH) - C46-81 (E1)	W-G - BR	Engine speed signal (output)	Idling	Pulse generation (see waveform 1)
C46-16 (STAR) - C46-81 (E1)*1 C46-63 (STAR) - C46-81 (E1)*2 C46-51 (STAR) - C46-81 (E1)*3	L - BR	ST relay drive signal	Cranking	11 to 14 V

HINT:

*1: for 2UZ-FE

*2: for 1GR-FE

*3: for 1VD-FTV

If the result is not as specified, the ECM may have a malfunction.


j. Using an oscilloscope, check the signal waveform of the ECM.

Reference


Terminal No. (Symbol)	Tool Setting	Condition
A52-15 (TACH) - C46-81 (E1)	5 V/DIV., 10 ms./DIV.	Engine idling

HINT:

As the engine speed increases, the wavelength shortens.

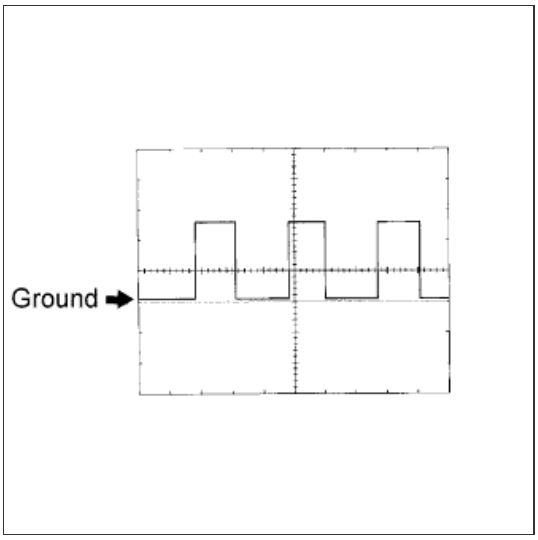

CHECK STEERING LOCK ECU

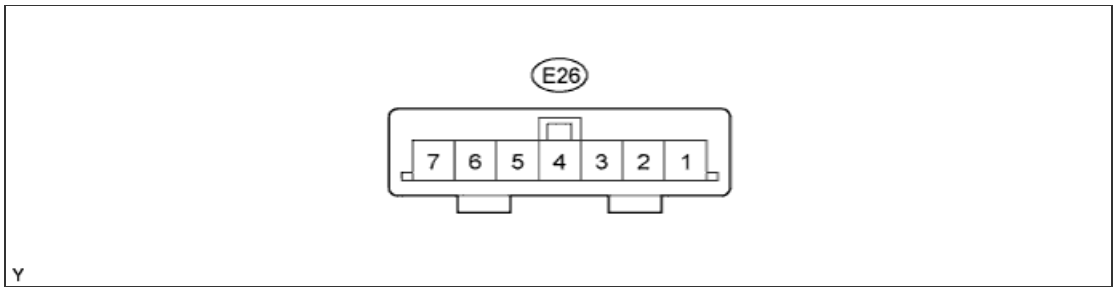

a. Disconnect the E26 steering lock ECU connector.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E26-7 (B) - Body ground	R - Body ground	+B power supply	Always	11 to 14 V
E26-6 (IG2) - Body ground	B - Body ground	Ignition power supply	Engine switch on (IG)	11 to 14 V
E26-6 (IG2) - Body ground	B - Body ground	Ignition power supply	Engine switch off	Below 1 V
E26-1 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E26-2 (SGND) - Body ground	BR - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E26 steering lock ECU connector.


d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E26-4 (SLP1) - E26-1 (GND)	SB - W-B	Steering lock actuator position signal	Steering locked	11 to 14 V
E26-4 (SLP1) - E26-1 (GND)	SB - W-B	Steering lock actuator position signal	Steering released	Below 1 V

If the result is not as specified, the ECU may have a malfunction.

for Preparation Click here

CHECK MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

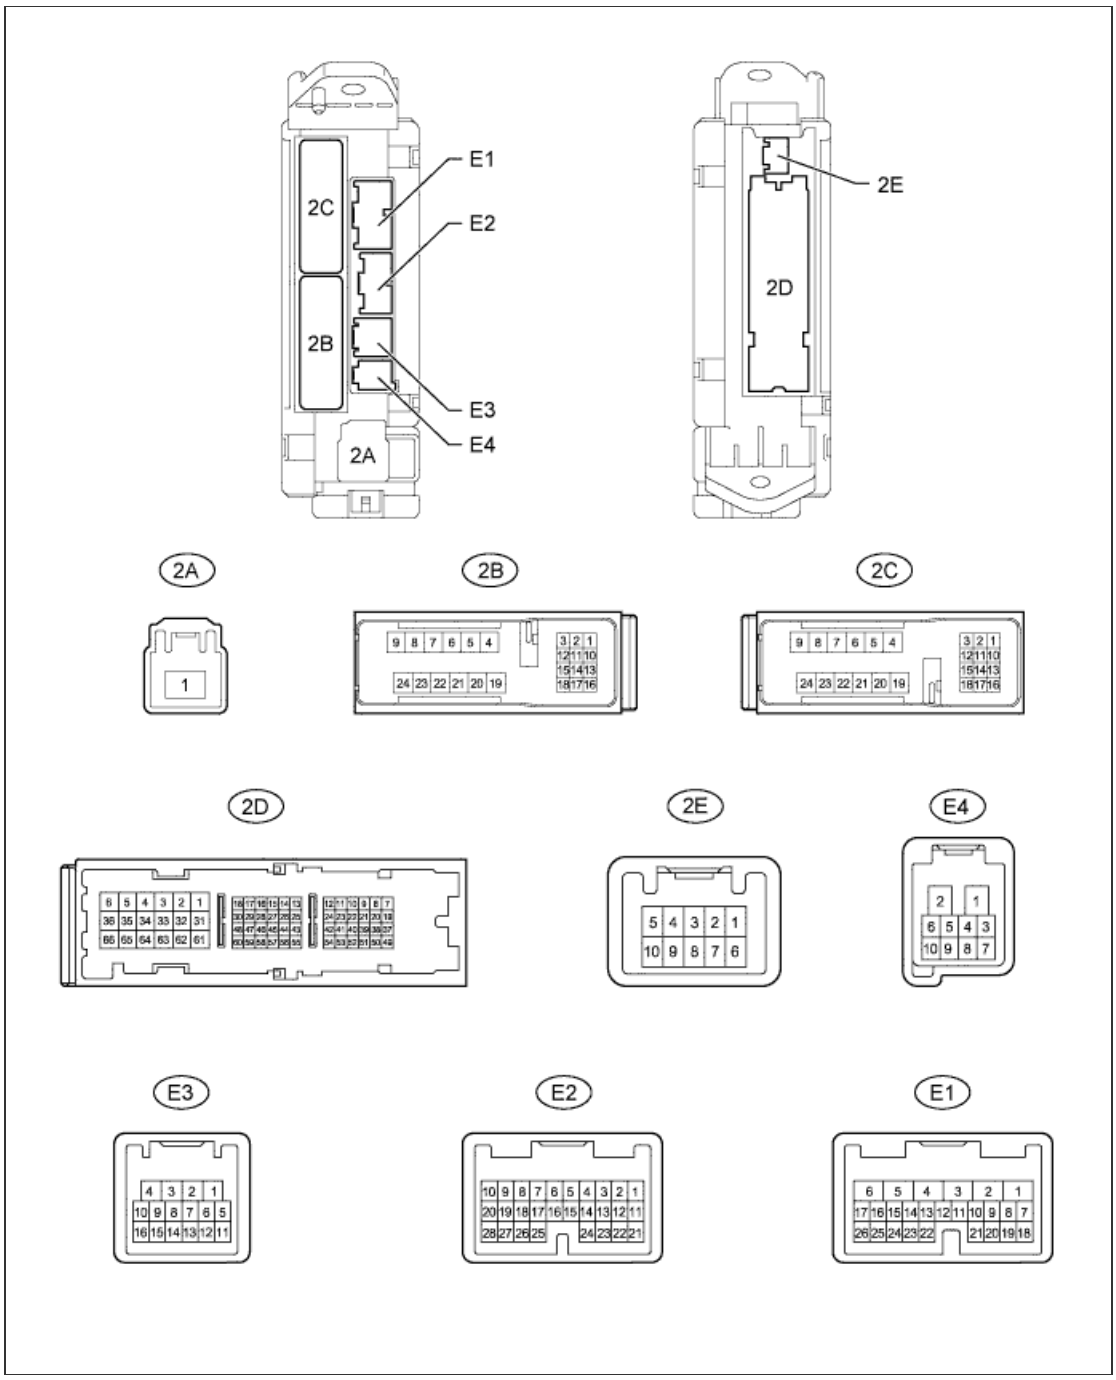

a. Disconnect the E1, E2 and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E1-6 (AM1) - Body ground	W - Body ground	+B power supply	Always	11 to 14 V
E2-1 (AM2) - Body ground	W - Body ground	+B power supply	Always	11 to 14 V
E1-17 (SSW1) - Body ground	B - Body ground	Engine switch 1 input	Engine switch pushed	Below 1 Ω
E1-17 (SSW1) - Body ground	B - Body ground	Engine switch 1 input	Engine switch not pushed	10 kΩ or higher

E1-16 (SSW2) - Body ground	B - Body ground	Engine switch 2 input	Engine switch pushed	Below 1 Ω
E1-16 (SSW2) - Body ground	B - Body ground	Engine switch 2 input	Engine switch not pushed	10 kΩ or higher
2D-62 (GND2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
2D-20 (LIN) - Body ground	GR - Body ground	LIN line	Always	10 kΩ or higher

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E1, E2 and 2D main body ECU connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E1-22 (ACCD) - 2D-62 (GND2)	P - W-B	ACC relay drive signal	Engine switch on (ACC)	11 to 14 V
E1-22 (ACCD) - 2D-62 (GND2)	P - W-B	ACC relay drive signal	Engine switch off	Below 1 V
E1-3 (IG1D) - 2D-62 (GND2)	G - W-B	IG1 No. 3 relay drive signal	Engine switch on (IG)	11 to 14 V
E1-3 (IG1D) - 2D-62 (GND2)	G - W-B	IG1 No. 3 relay drive signal	Engine switch on (ACC)	Below 1 V
E2-11 (IG2D) - 2D-62 (GND2)	B - W-B	Integration relay (IG2 relay) drive signal	Engine switch on (IG)	11 to 14 V
E2-11 (IG2D) - 2D-62 (GND2)	B - W-B	Integration relay (IG2 relay) drive signal	Engine switch on (ACC)	Below 1 V
E1-19 (SLR+) - 2D-62 (GND2)	G - W-B	Steering lock power supply	Steering lock motor operating	Below 1 V
E1-19 (SLR+) - 2D-62 (GND2)	G - W-B	Steering lock power supply	Steering lock motor not operating	11 to 14 V
E1-8 (STR) - 2D-62 (GND2)	L - W-B	Park/neutral position switch signal*1 Clutch pedal switch signal*2	Engine switch on (IG), shift lever not in P or N → P or N*1 Engine switch on (IG), Clutch pedal switch released → Depressed*2	Below 2 V → Pulse generation*3
E1-18 (SLP) - 2D-62 (GND2)	SB - W-B	Steering lock actuator position signal	Steering lock locked	11 to 14 V
E1-18 (SLP) - 2D-62 (GND2)	SB - W-B	Steering lock actuator position signal	Steering lock released	Below 1 V
E3-9 (SPD) - 2D-62 (GND2)	V - W-B	Speed signal from combination meter	Engine switch on (IG), driving wheel rotating slowly	Pulse generation (see waveform 1)
E3-8 (TACH) - 2D-62 (GND2)	W - W-B	Tachometer signal	Engine running	Pulse generation (see waveform 2)
E4-2 (P) - 2D-62 (GND2)*1	L - W-B	Shift lock signal	Shift lever in P	Pulse generation (see waveform 3)
E4-2 (P) - 2D-62 (GND2)*1	L - W-B	Shift lock signal	Shift lever not in P	Below 1 V
E4-4 (STSW) - 2D-62 (GND2)	R - W-B	Starter activation request signal	Brake pedal depressed, engine switch depressed*1 Clutch pedal depressed, engine switch depressed*2	11 to 14 V
E1-15 (INDS) - 2D-62 (GND2)	W - W-B	Vehicle condition signal	Brake pedal released with shift lever in P or N, engine switch off, on (ACC), or on (IG)*1 Clutch pedal released, engine switch off, on (ACC), or on (IG)*2	9 to 14 V
E1-14 (INDW) - 2D-62 (GND2)	W - W-B	Vehicle condition signal	Brake pedal released with shift lever in P or N, engine switch off, on (ACC), or on (IG)*1 Clutch pedal released,	9 to 14 V

			engine switch off, on (ACC), or on (IG)*2	
E1-25 (SWIL) - 2D-62 (GND2)	R - W-B	Illumination signal	Light control switch tail or head	11 to 14 V
2B-22 (STP) - 2D-62 (GND2)	R - W-B	Stop light switch signal	Brake pedal depressed	11 to 14 V
2B-22 (STP) - 2D-62 (GND2)	R - W-B	Stop light switch signal	Brake pedal released	Below 1 V

HINT:

*1: for A/T

*2: for M/T

*3: Remove the ST CUT relay before measuring the voltage.

If the result is not as specified, the ECU may have a malfunction.

e. Using an oscilloscope, check the signal waveform of the ECU.


i. Waveform 1

Reference

Terminal No. (Symbol)	Tool Setting	Condition
E3-9 (SPD) - 2D-62 (GND2)	5 V/DIV., 100 msec./DIV.	Driving at approx. 20 km/h (12 mph)

HINT:


As the vehicle speed increases, the wavelength shortens.

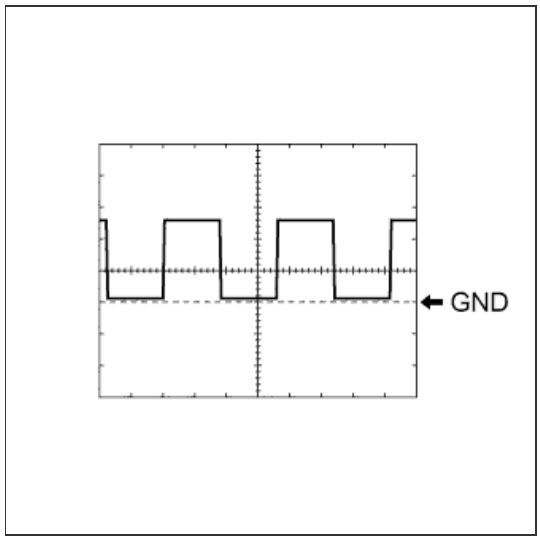

ii. Waveform 2

Reference


Terminal No. (Symbol)	Tool Setting	Condition
E3-8 (TACH) - 2D-62 (GND2)	10 V/DIV., 10 msec./DIV.	Engine switch on (IG) or engine started

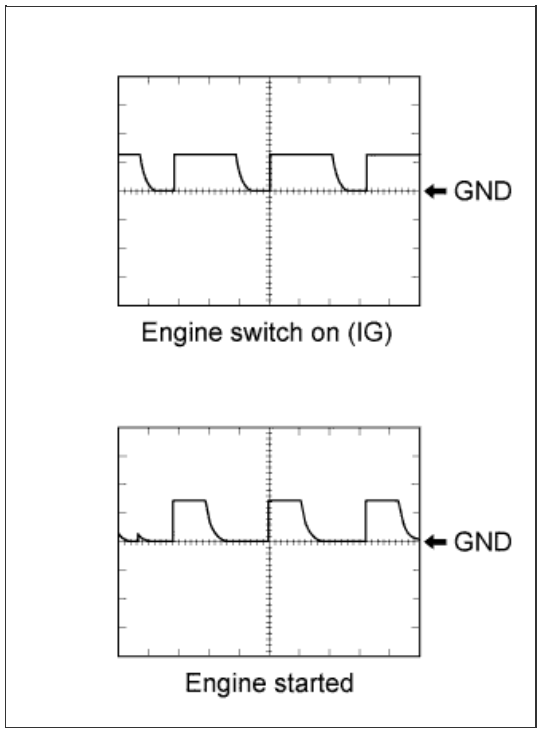


iii. Waveform 3

Reference

Terminal No. (Symbol)	Tool Setting	Condition
E4-2 (P) - 2D-62 (GND2)	2 V/DIV., 20 msec./DIV.	Shift lever in P

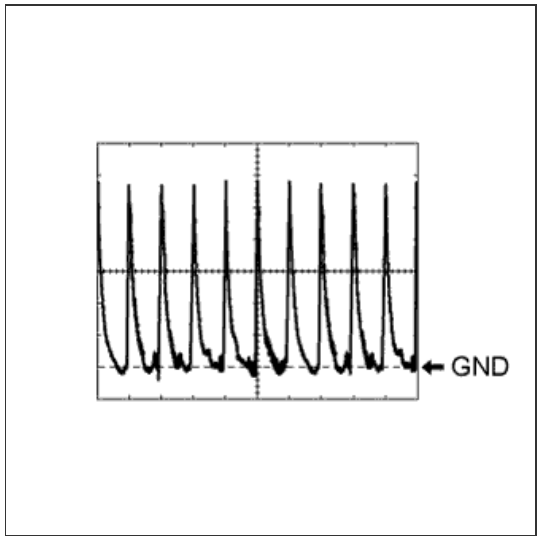

CHECK CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

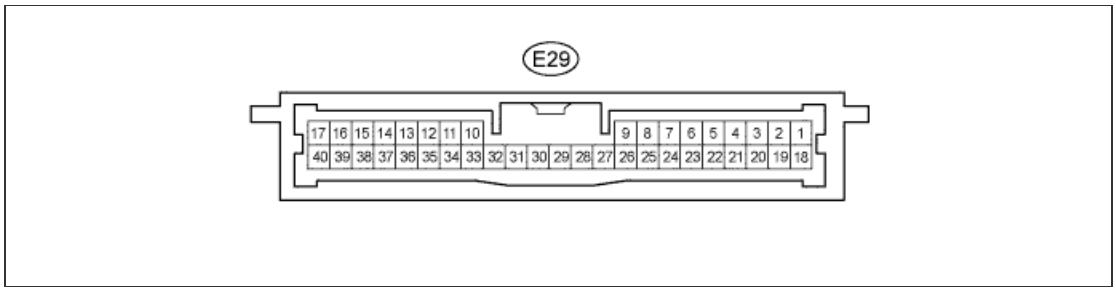

a. Disconnect the E29 certification ECU (smart key ECU assembly) connector.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29-1 (+B) - Body ground	B - Body ground	+B power supply	Always	11 to 14 V
E29-10 (LIN) - Body ground	GR - Body ground	LIN line	Always	10 kΩ or higher
E29-17 (E) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E29 certification ECU (smart key ECU assembly) connector.


d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29-18 (IG) - Body ground	B - Body ground	Ignition power supply	Engine switch on (IG)	11 to 14 V
E29-18 (IG) - Body ground	B - Body ground	Ignition power supply	Engine switch off	Below 1 V

If the result is not as specified, the certification ECU (smart key ECU assembly) may have a malfunction.

CHECK ECM

a. for LHD:
Disconnect the A38 and C45 ECM connectors.

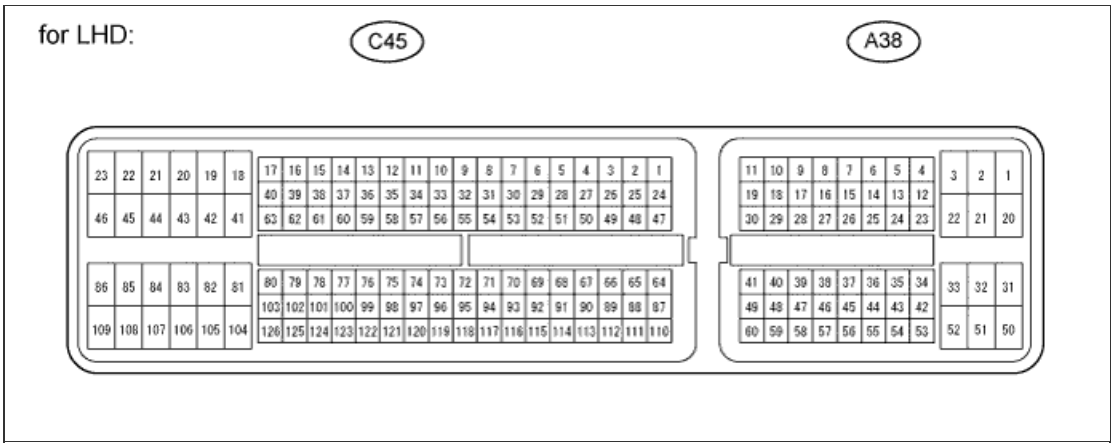

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
A38-1 (BATT) - C45-81 (E1)*1, *4 A38-20 (BATT) - C45-81 (E1)*2, *3	L - BR*1, *2, *3 L - W-B*4	Battery (for measuring battery voltage and for ECM memory)	Always	11 to 14 V
A38-3 (+B) - C45-81 (E1)*1, *4 A38-2 (+B) - C45-81 (E1)*2, *3	B - BR*1, *2, *3 B - W-B*4	Power source of ECM	Engine switch on (IG)	11 to 14 V
A38-28 (IGSW) - C45-81 (E1)	B - BR*1, *2, *3 B - W-B*4	Engine switch signal	Always	11 to 14 V
C45-81 (E1) - Body ground	BR - Body ground*1, *2, *3 W-B - Body ground*4	Ground	Always	Below 1 Ω
C45-43 (E01) - Body ground*1, *4 C45-22 (E01) - Body ground*2, *3	W-B - Body ground	Ground	Always	Below 1 Ω
C45-42 (E02) - Body ground*1, *4 C45-21 (E02) - Body ground*2, *3	BR - Body ground	Ground	Always	Below 1 Ω
C45-46 (E03) - Body ground*1, *4 C45-104 (E03) - Body ground*2	W-B - Body ground	Ground	Always	Below 1 Ω
C45-23 (E04) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
C45-21 (E05) - Body ground*1, *4 C45-46 (E05) - Body ground*2	W-B - Body ground	Ground	Always	Below 1 Ω

HINT:

*1: for 2UZ-FE

*2: for 1GR-FE

*3: for 1VD-FTV

*4: for 3UR-FE

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the ECM connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
A38-46 (STA) - C45-81 (E1)*1, *4 A38-48 (STA) - C45-81 (E1)*2, *3	R-B - BR*1, *2, *3 R-B - W-B*4	ST relay operation signal	Cranking	5.5 V or more
				Output voltage at

A -14 (STSW) - C45-81 (E1)	R - BR*1, *2, *3 R - W-B*4	Starter activation request signal	Brake pedal depressed, engine switch on (IG)	terminal AM1 or AM2 is - 2 V or more
A38-41 (ACCR) - C45-81 (E1)*1, *4 A38-13 (ACCR) - C45-81 (E1)*2, *3	L-Y - BR*1, *2, *3 L-Y - W-B*4	ACC relay cut signal (output)	Engine switch on (IG) → Cranking	11 to 14 V → Below 1 V
A38-15 (TACH) - C45-81 (E1)	W-G - BR*1, *2, *3 W-G - W-B*4	Engine speed signal (output)	Idling	Pulse generation (see waveform 1)
C45-16 (STAR) - C45-81 (E1)*1, *4 C45-63 (STAR) - C45-81 (E1)*2 C45-51 (STAR) - C45-81 (E1)*3	L - BR*1, *2, *3 L - W-B*4	ST relay drive signal	Cranking	11 to 14 V

HINT:

*1: for 2UZ-FE

*2: for 1GR-FE

*3: for 1VD-FTV

*4: for 3UR-FE

If the result is not as specified, the ECM may have a malfunction.


e. Using an oscilloscope, check the signal waveform of the ECM.

Reference


Terminal No. (Symbol)	Tool Setting	Condition
A38-15 (TACH) - C45-81 (E1)	5 V/DIV., 10 ms./DIV.	Engine idling

HINT:

As the engine speed increases, the wavelength shortens.

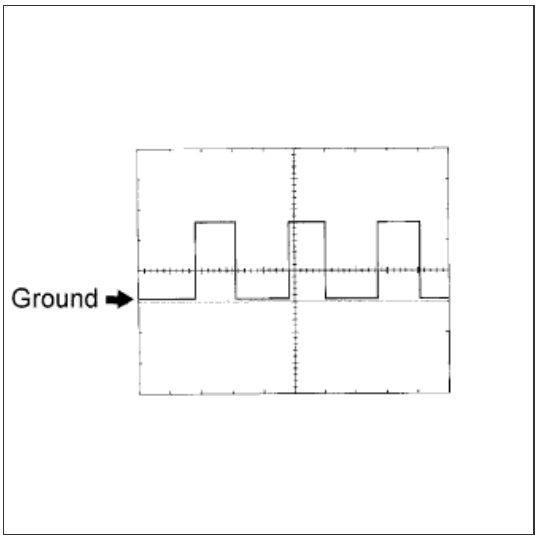

f. for RHD:
Disconnect the A52 and C46 ECM connectors.

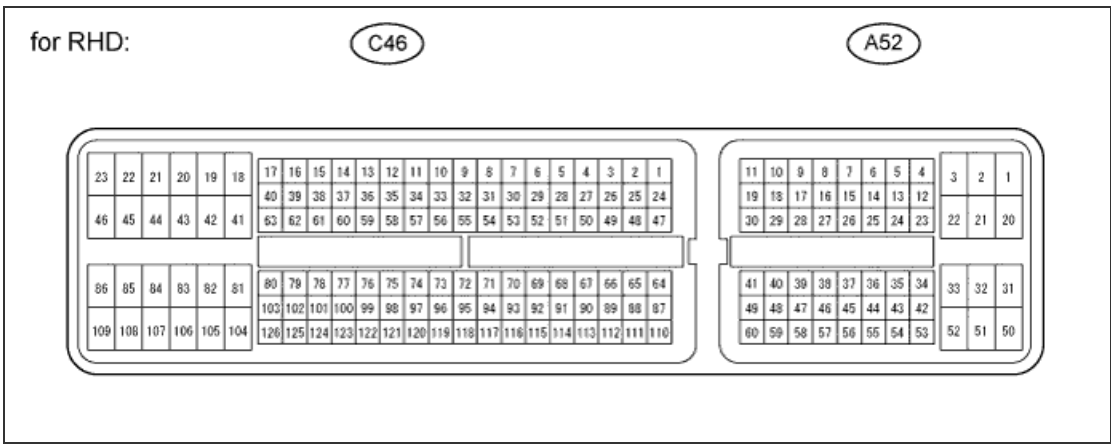

g. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition

A52-1 (BATT) - C46-81 (E1)*1 A52-20 (BATT) - C46-81 (E1)*2, *3	L - BR	Battery (for measuring battery voltage and for ECM memory)	Always	11 to 14 V
A52-3 (+B) - C46-81 (E1)*1 A52-2 (+B) - C46-81 (E1)*2, *3	B - BR	Power source of ECM	Engine switch on (IG)	11 to 14 V
A52-28 (IGSW) - C46-81 (E1)	B - BR	Engine switch signal	Always	11 to 14 V
C46-81 (E1) - Body ground	BR - Body ground	Ground	Always	Below 1 Ω
C46-43 (E01) - Body ground*1 C46-22 (E01) - Body ground*2, *3	W-B - Body ground	Ground	Always	Below 1 Ω
C46-42 (E02) - Body ground*1 C46-21 (E02) - Body ground*2, *3	BR - Body ground	Ground	Always	Below 1 Ω
C46-46 (E03) - Body ground*1 C46-104 (E03) - Body ground*2	W-B - Body ground	Ground	Always	Below 1 Ω
C46-23 (E04) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
C46-21 (E05) - Body ground*1 C46-46 (E05) - Body ground*2	W-B - Body ground	Ground	Always	Below 1 Ω

HINT:

*1: for 2UZ-FE

*2: for 1GR-FE

*3: for 1VD-FTV

If the result is not as specified, there may be a malfunction on the wire harness side.

h. Reconnect the ECM connectors.

i. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
A52-46 (STA) - C46-81 (E1)*1 A52-48 (STA) - C46-81 (E1)*2, *3	R-B - BR	ST relay operation signal	Cranking	5.5 V or more
A52-14 (STSW) - C46-81 (E1)	R - BR	Starter activation request signal	Brake pedal depressed, engine switch on (IG)	Output voltage at terminal AM1 or AM2 is - 2 V or more
A52-41 (ACCR) - C46-81 (E1)*1 A52-13 (ACCR) - C46-81 (E1)*2, *3	L-Y - BR	ACC relay cut signal (output)	Engine switch on (IG) → Cranking	11 to 14 V → Below 1 V
A52-15 (TACH) - C46-81 (E1)	W-G - BR	Engine speed signal (output)	Idling	Pulse generation (see waveform 1)
C46-16 (STAR) - C46-81 (E1)*1 C46-63 (STAR) - C46-81 (E1)*2 C46-51 (STAR) - C46-81 (E1)*3	L - BR	ST relay drive signal	Cranking	11 to 14 V

HINT:

*1: for 2UZ-FE

*2: for 1GR-FE

*3: for 1VD-FTV

f the result is not as specified, the ECM may have a malfunction.


j. Using an oscilloscope, check the signal waveform of the ECM.

Reference


Terminal No. (Symbol)	Tool Setting	Condition
A52-15 (TACH) - C46-81 (E1)	5 V/DIV., 10 ms./DIV.	Engine idling

HINT:

As the engine speed increases, the wavelength shortens.

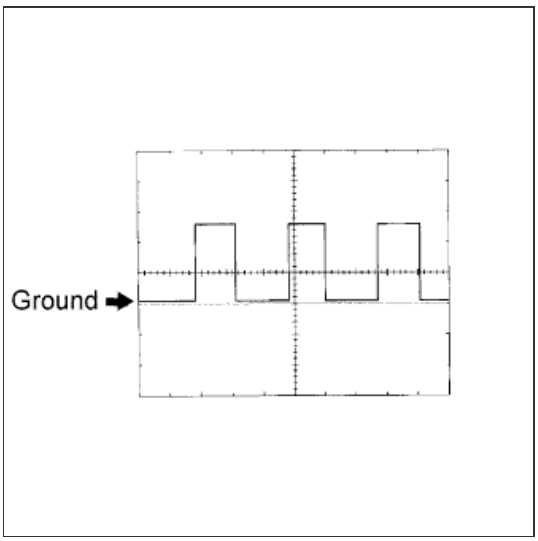

CHECK STEERING LOCK ECU

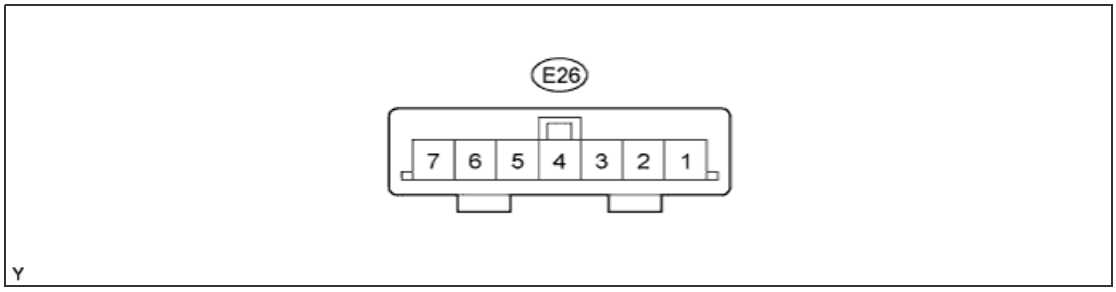

a. Disconnect the E26 steering lock ECU connector.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E26-7 (B) - Body ground	R - Body ground	+B power supply	Always	11 to 14 V
E26-6 (IG2) - Body ground	B - Body ground	Ignition power supply	Engine switch on (IG)	11 to 14 V
E26-6 (IG2) - Body ground	B - Body ground	Ignition power supply	Engine switch off	Below 1 V
E26-1 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E26-2 (SGND) - Body ground	BR - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E26 steering lock ECU connector.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E26-4 (SLP1) - E26-1 (GND)	SB - W-B	Steering lock actuator position signal	Steering locked	11 to 14 V
E26-4 (SLP1) - E26-1 (GND)	SB - W-B	Steering lock actuator position signal	Steering released	Below 1 V

If the result is not as specified, the ECU may have a malfunction.

for Preparation Click here

CHECK DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / DTC.

e. Read the DTCs.

CLEAR DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Main Body / DTC.

e. Clear the DTCs.

for Preparation Click here

READ DATA LIST

HINT:

Using the intelligent tester to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / Data List.

e. According to the display on the intelligent tester, read the Data List.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
ACC SW	Engine switch on (ACC)/ON or O	N: Engine switch on (ACC) O : Engine switch off	-
IG SW	Engine switch on (IG)/ON or O	N: Engine switch on (IG) O : Engine switch off	-
Stop Light SW	Stop light switch/ON or O	N: Brake pedal depressed O : Brake pedal released	-
Start Switch1	Start switch 1/ON or O	N: Engine switch on (IG) O : Engine switch off	-
Start Switch2	Start switch 2/ON or O	N: Engine switch on (IG) O : Engine switch off	-
Steering Unlock Switch	Steering lock condition/ON or O	N: Steering unlocked O : Steering locked	-
Neutral SW/ Clutch SW	ark/neutral position switch (A/T), clutch start switch (M/T)/ON or O	N: Shift lever in or N (A/T), clutch pedal depressed (M/T) O : Shift lever not in or N (A/T), clutch pedal released (M/T)	-
Shift Signal	Shift position signal/ON or O	N: Shift lever in : Shift lever not in	-
ehicle Speed Signal	ehicle speed signal/STO or RUN	STO : ehicle stopped RUN: ehicle running	-
Engine Condition	Engine condition/STO or RUN	STO : Engine stopped RUN: Engine running	-
IG1 Relay Monitor(Outside)	IG1 No. 3 relay outer relay monitor/ON or O	N: Engine switch on (IG) O : Engine switch off	-
IG2 Relay Monitor(Outside)	Integration relay (IG2 relay) outer relay monitor/ON or O	N: Engine switch on (IG) O : Engine switch off	-
IG1 Relay Monitor(Inside)	IG1 No. 3 relay inner relay monitor/ON or O	N: Engine switch on (IG) O : Engine switch off	-
IG2 Relay Monitor(Inside)	Integration relay (IG2 relay) inner relay monitor/ON or O	N: Engine switch on (IG) O : Engine switch off	-
ACC Relay Monitor	ACC relay monitor/ON or O	N: Engine switch on (ACC) O : Engine switch off	-
Latch Circuit	Latch circuit/ON or O	N: Engine switch on (ACC) O : Engine switch off, on (ACC)	-
Starter Request Signal	Starter request signal/ON or O	N: ST relay ON O : ST relay O	-
		ALL O : All relays O	

ower Supply Condition	ower supply condition/ALL O , ACC ON, IG2 ON, ST ON	ACC ON: ACC relay ON IG2 ON: Integration relay (IG2 relay) ON ST ON: STSW signal ON	-
ACC Relay Cut Signal	ACC relay cut signal/ON or O	N: Engine cranking O : Engine not cranking	-
Starter Relay Monitor	ST relay monitor/ON or O	N: Engine cranking O : Engine not cranking	-
Communication Smart/Wireless	Communication to certification ECU (smart key ECU assembly)/O or STO	: Communication STO : No communication	-
The Number of DTC	Number of diagnostic trouble codes/Min: 0, Ma : 255	-	-

Entry & Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Ignition Switch	Engine switch/ON or O	N: Engine switch on (IG) O : Engine switch off	-
Unmatched ehicle-ID	ey ID/ ES or NO	ES: ey ID matches NO: ey ID differs	-
No Response	No Communication condition between vehicle and electrical key transmitter (response) / es or No	es: ey ID code not matched to vehicle No: ey ID code matched to vehicle	-
Unmatch Code or orm	Code format/ ES or NO	ES: Code format matches NO: Code format differs	-
ey Low Battery	ey battery conditions/ es or No	es: ey battery voltage low No: ey battery voltage normal	-
Codes	Number of diagnostic trouble codes/Min: 0, Ma : 255	-	-
ID Code Difference(Resp)	ID code/ ES or NO	ES: ID code matches NO: ID code differs	-
C Code Difference	Challenge code/ ES or NO	ES: Challenge code matches NO: Challenge code differs	-
Engine Start Condition	Engine start condition by certification ECU (smart key ECU assembly)/O or NG	O : Engine start permitted NG: Engine start prohibited	-
S Code Check	S code certification result/NG or O	: S code certification result normal NG: S code certification result abnormal	-
L Code Check	L code certification result/NG or O	: L code certification result normal NG: L code certification result abnormal	-
Ignition Available Area	ey area where engine start is possible/All or ront	All: All areas ront: ront only	-

PERFORM ACTIVE TEST

HINT:

Using the intelligent tester to perform Active Tests allows relays, s, actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. erforming Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / Active Test.

e. According to the display on the intelligent tester, perform the Active Test.

Main Body

Tester Display	Test art	Control Range	Diagnostic Note
Indicator for Lighting	Indicator illumination	ON/O	-

Indicator Condition	Indicator light illumination pattern	Green/Amber/No Sig	-
Supply for Steering Lock	Steering lock ECU power supply	ON/O	-

Entry & Start

Tester Display	Test art	Control Range	Diagnostic Note
r-Seat Inside Transmitter	Indoor key antenna (for front)	ON/O	-
Rr-Seat Inside Transmitter	Indoor key antenna (for rear1)	ON/O	-
Inside Trunk/Backdoor Transmitter	Indoor key antenna (for rear2)	ON/O	-
Outside Trunk/Backdoor Transmitter	Electrical key antenna	ON/O	-

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Entry and Start System (for Start Function)

DTC Code	Detection Item	Trouble Area	See page
B2271	Ignition Hold Monitor Malfunction	- Main body ECU - AM2 fuse - Harness or connector	Click here
B2272	Ignition 1 Monitor Malfunction	- Main body ECU - Harness or connector	Click here
B2273	Ignition 2 Monitor Malfunction	- Main body ECU - IG2 MAIN fuse - Integration relay (IG2 relay) - Harness or connector	Click here
B2274	ACC Monitor Malfunction	- Main body ECU - Harness or connector	Click here
B2275	STSW Monitor Malfunction	- Main body ECU - ECM - Harness or connector	Click here
B2276	ACCR Signal Circuit Malfunction	- Main body ECU - ECM - Harness or connector	Click here
B2277	Detecting Vehicle Submersion	Main body ECU	Click here
B2278	Engine Switch Circuit Malfunction	- Main body ECU - Engine switch - Harness or connector	Click here
B2281	"P" Signal Malfunction	- Main body ECU - Shift lock control ECU - Harness or connector	Click here
B2282	Vehicle Speed Signal Malfunction	- Main body ECU - Combination meter - Harness or connector	Click here
B2283	Vehicle Speed Sensor Malfunction	- Main body ECU - Combination meter - Speed sensor - Skid control ECU - Harness or connector	Click here
B2284	Brake Signal Malfunction	- Main body ECU - Stop light switch - STOP fuse - Harness or connector	Click here
B2285	Steering Lock Position Signal Circuit Malfunction	- Main body ECU - Steering lock actuator assembly (steering lock ECU) - Harness or connector	Click here
B2286	Runnable Signal Malfunction	- Main body ECU - ECM - Harness or connector	Click here
B2288	Steering Lock Signal Circuit Malfunction	- Main body ECU - Steering lock actuator assembly (steering lock ECU) - Harness or connector	Click here
B2289	Key Collation Waiting Time Over	- Main body ECU - Engine switch - Certification ECU (smart key ECU assembly) - Key - Engine immobiliser system - Harness or connector	Click here

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Entry and Start System (for Start Function)

DTC Code	Detection Item	Trouble Area	See page
B2271	Ignition Hold Monitor Malfunction	- Main body ECU - AM2 fuse - Harness or connector	Click here
B2272	Ignition 1 Monitor Malfunction	- Main body ECU - Harness or connector	Click here
B2273	Ignition 2 Monitor Malfunction	- Main body ECU - IG2 MAIN fuse - Integration relay (IG2 relay) - Harness or connector	Click here
B2274	ACC Monitor Malfunction	- Main body ECU - Harness or connector	Click here
B2275	STSW Monitor Malfunction	- Main body ECU - ECM - Harness or connector	Click here
B2276	ACCR Signal Circuit Malfunction	- Main body ECU - ECM - Harness or connector	Click here
B2277	Detecting Vehicle Submersion	Main body ECU	Click here
B2278	Engine Switch Circuit Malfunction	- Main body ECU - Engine switch - Harness or connector	Click here
B2281	"P" Signal Malfunction	- Main body ECU - Shift lock control ECU - Harness or connector	Click here
B2282	Vehicle Speed Signal Malfunction	- Main body ECU - Combination meter - Harness or connector	Click here
B2283	Vehicle Speed Sensor Malfunction	- Main body ECU - Combination meter - Speed sensor - Skid control ECU - Harness or connector	Click here
B2284	Brake Signal Malfunction	- Main body ECU - Stop light switch - STOP fuse - Harness or connector	Click here
B2285	Steering Lock Position Signal Circuit Malfunction	- Main body ECU - Steering lock actuator assembly (steering lock ECU) - Harness or connector	Click here
B2286	Runnable Signal Malfunction	- Main body ECU - ECM - Harness or connector	Click here
B2288	Steering Lock Signal Circuit Malfunction	- Main body ECU - Steering lock actuator assembly (steering lock ECU) - Harness or connector	Click here
B2289	Key Collation Waiting Time Over	- Main body ECU - Engine switch - Certification ECU (smart key ECU assembly) - Key - Engine immobiliser system - Harness or connector	Click here

DTC B2271 Ignition Hold Monitor Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when the IG output circuits inside the main body ECU are open or shorted.

DTC Code	Detection Condition	Trouble Area
B2271	The IG1 No. 3 relay actuation circuit or integration relay (IG2 relay) actuation circuit inside the main body ECU is abnormal.	• Main body ECU • AM2 fuse • Harness or connector

WIRING DIAGRAM

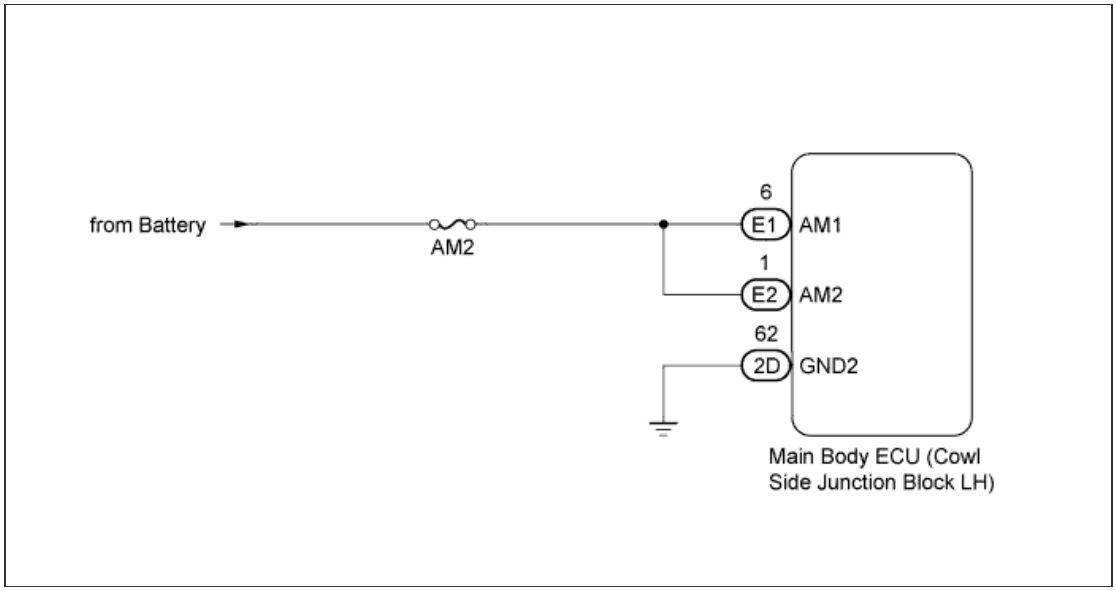

INSPECTION PROCEDURE

1.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Check whether DTC B2271 is output.

Result

Result	Proceed to
DTC B2271 output	A
No DTC output	B

B → USE SIMULATION METHOD TO CHECK (Click here)

A

2.INSPECT FUSE (AM2)

a. Remove the AM2 fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
AM2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

3.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

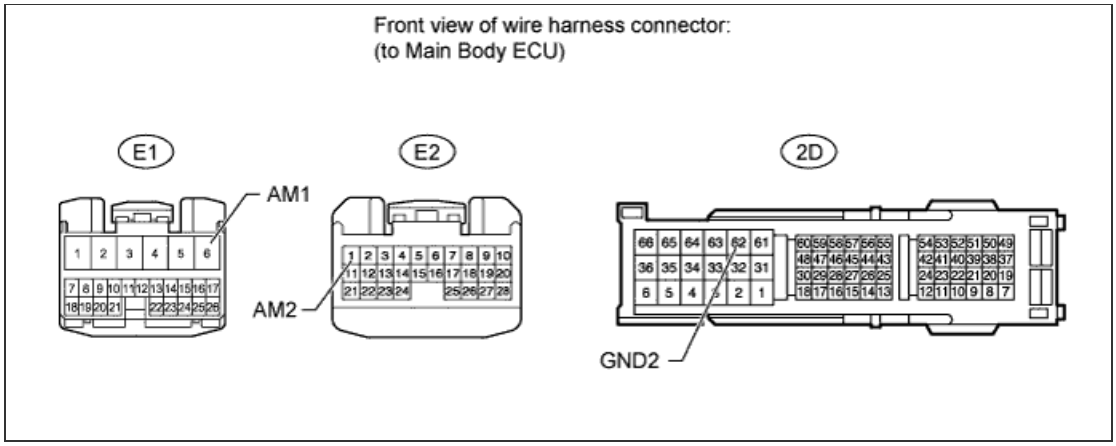

a. Disconnect the E1, E2 and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E1-6 (AM1) - Body ground	Always	11 to 14 V
E2-1 (AM2) - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
2D-62 (GND2) - Body ground	Always	Below 1 Ω

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

DTC B2278 Engine Switch Circuit Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when: 1) a malfunction is detected between the main body ECU and the engine switch; or 2) either of the switches inside the engine switch is malfunctioning.

DTC Code	Detection Condition	Trouble Area
B2278	Communication is abnormal between the main body ECU and engine switch or the engine switch is defective.	• Main body ECU • Engine switch • Harness or connector

WIRING DIAGRAM

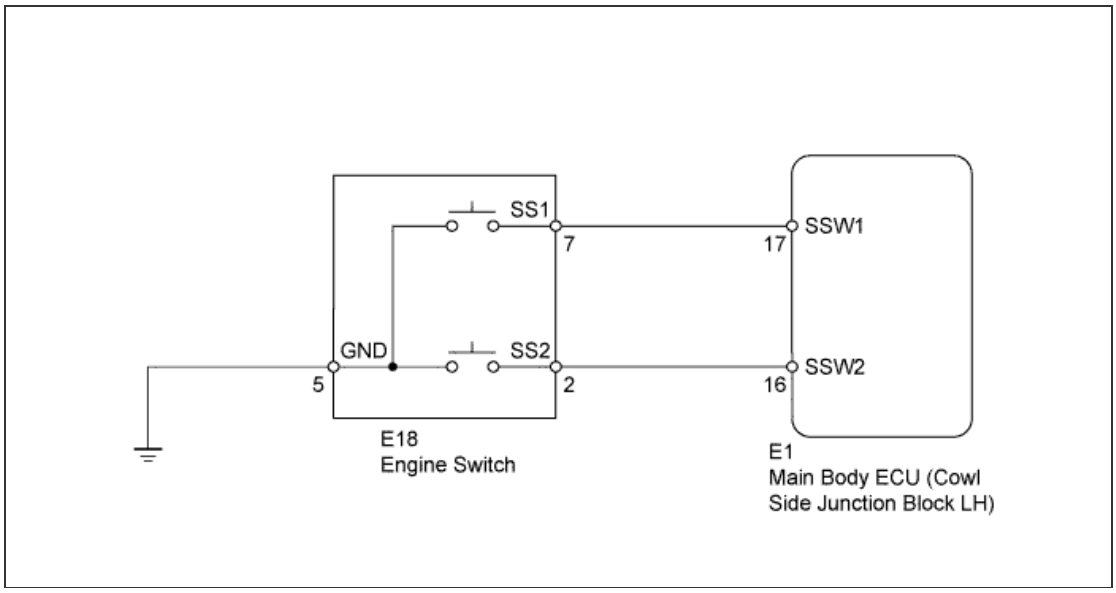

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (START SWITCH 1, 2)

a. Use the Data List to check if the engine switch is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Start Switch 1	Start Switch 1/ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-
Start Switch 2	Start Switch 2/ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-

OK:

When the engine switch is turned on (IG), ON is displayed on the intelligent tester.

NG → Go to step 3

OK

2.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Turn the engine switch on (IG), and check whether DTC B2278 is output.

Result

Result	Proceed to
No DTC output	A

DTC B2278 output	B

B → REPLACE MAIN BODY ECU

A

USE SIMULATION METHOD TO CHECK (Click here)

3.INSPECT ENGINE SWITCH


a. Disconnect the E18 engine switch connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
7 (SS1) - 5 (GND)	Pushed	Below 1 Ω
2 (SS2) - 5 (GND)	Pushed	Below 1 Ω
7 (SS1) - 5 (GND)	Not pushed	10 kΩ or higher
2 (SS2) - 5 (GND)	Not pushed	10 kΩ or higher

Component without harness connected:
(Engine Switch)

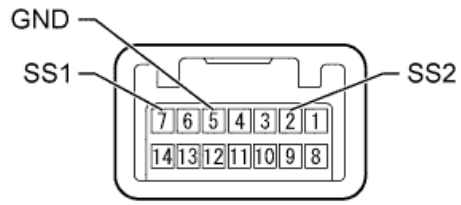

Result

Result	Proceed to
Within specified range	A
Outside specified range (for 1GR-FE)	B
Outside specified range (for 2UZ-FE)	C
Outside specified range (for 3UR-FE)	D
Outside specified range (for 1VD-FTV)	E

B → REPLACE ENGINE SWITCH (Click here)

C → REPLACE ENGINE SWITCH (Click here)


D → REPLACE ENGINE SWITCH (Click here)

E → REPLACE ENGINE SWITCH (Click here)


A

4.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ENGINE SWITCH AND BODY GROUND)

Front view of wire harness connector:
(to Main Body ECU)

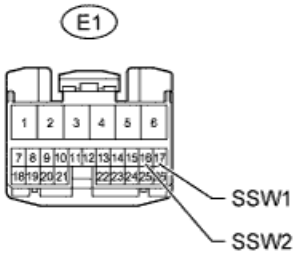

Front view of wire harness connector:
(to Engine Switch)

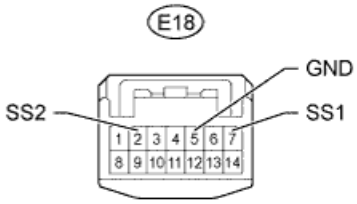

a. Disconnect the E1 main body ECU connector.

b. Disconnect the E18 engine switch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-17 (SSW1) - E18-7 (SS1)	Always	Below 1 Ω
E1-16 (SSW2) - E18-2 (SS2)	Always	Below 1 Ω
E18-5 (GND) - Body ground	Always	Below 1 Ω
E1-17 (SSW1) or E18-7 (SS1) - Body ground	Always	10 kΩ or higher
E1-16 (SSW2) or E18-2 (SS2) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK → REPLACE MAIN BODY ECU

DTC B2271 Ignition Hold Monitor Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when the IG output circuits inside the main body ECU are open or shorted.

DTC Code	Detection Condition	Trouble Area
B2271	The IG1 No. 3 relay actuation circuit or integration relay (IG2 relay) actuation circuit inside the main body ECU is abnormal.	• Main body ECU • AM2 fuse • Harness or connector

WIRING DIAGRAM

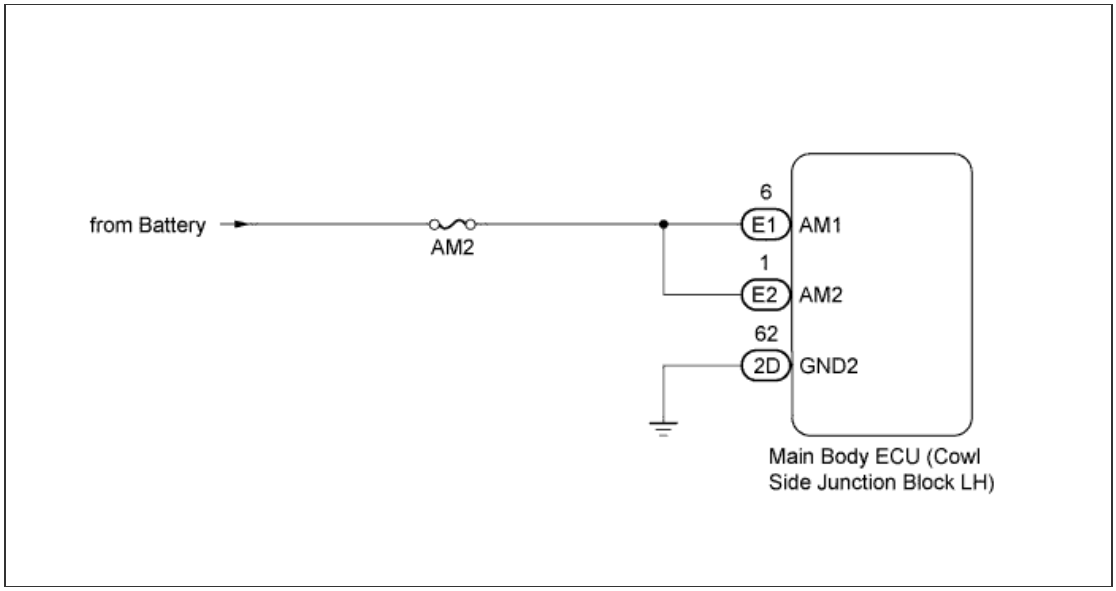

INSPECTION PROCEDURE

1.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Check whether DTC B2271 is output.

Result

Result	Proceed to
DTC B2271 output	A
No DTC output	B

B → USE SIMULATION METHOD TO CHECK (Click here)

A

2.INSPECT FUSE (AM2)

a. Remove the AM2 fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
AM2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

3.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

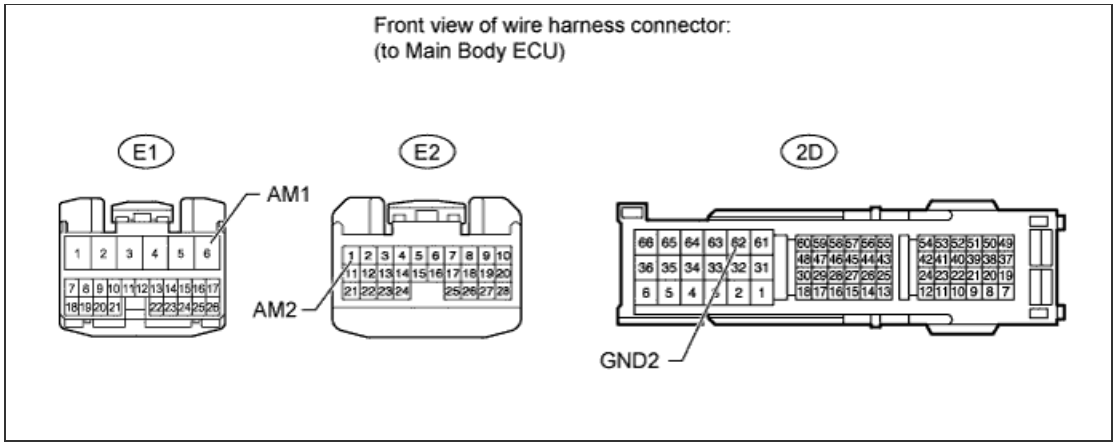

a. Disconnect the E1, E2 and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E1-6 (AM1) - Body ground	Always	11 to 14 V
E2-1 (AM2) - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
2D-62 (GND2) - Body ground	Always	Below 1 Ω

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

DTC B2281 "P" Signal Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when there is an abnormal circuit between the main body ECU and the shift lock control ECU.

DTC Code	Detection Condition	Trouble Area
B2281	Communication or the communication line is abnormal between the main body ECU and shift lock control ECU.	• Main body ECU • Shift lock control ECU • Harness or connector

WIRING DIAGRAM

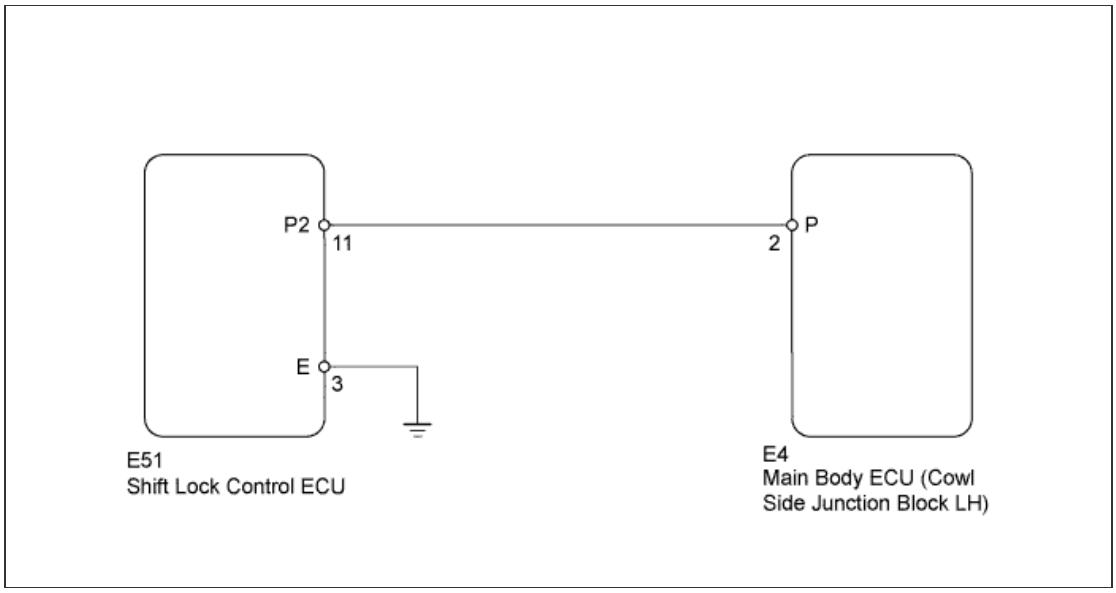

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (SHIFT P SIGNAL)

a. Use the Data List to check if the shift position signal is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Shift P Signal	Shift P position signal/ON or OFF	ON: Shift lever in P OFF: Shift lever not in P	-

Result

Result	Proceed to
Display on the intelligent tester does not change according to shift lever operation	A
Display on the intelligent tester changes according to shift lever operation	B

B → REPLACE MAIN BODY ECU

A

2.INSPECT SHIFT LOCK CONTROL ECU

a. Disconnect the E51 shift lock control ECU connector.


b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
11 (P2) - 3 (E)	Shift lever not in P	Below 1 Ω
11 (P2) - 3 (E)	Shift lever in P	10 kΩ or higher

Result

Result	Proceed to
Within specified range	A
Outside specified range (for 1GR-FE, 2UZ-FE)	B
Outside specified range (for 1VD-FTV)	C

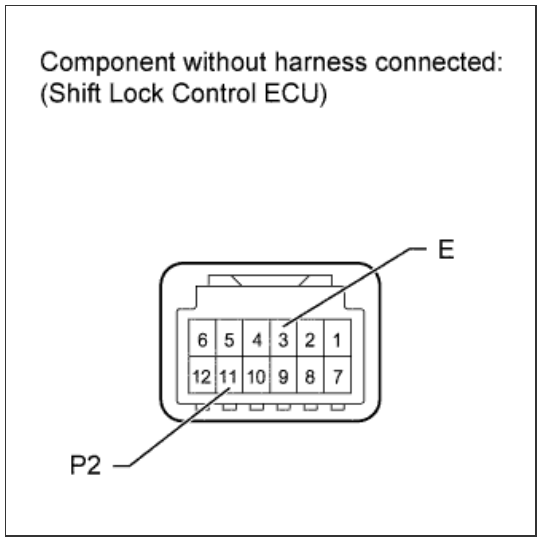


B → REPLACE SHIFT LOCK CONTROL ECU (Click here)

C → REPLACE SHIFT LOCK CONTROL ECU (Click here)

A

3.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - SHIFT LOCK CONTROL ECU AND BODY GROUND)

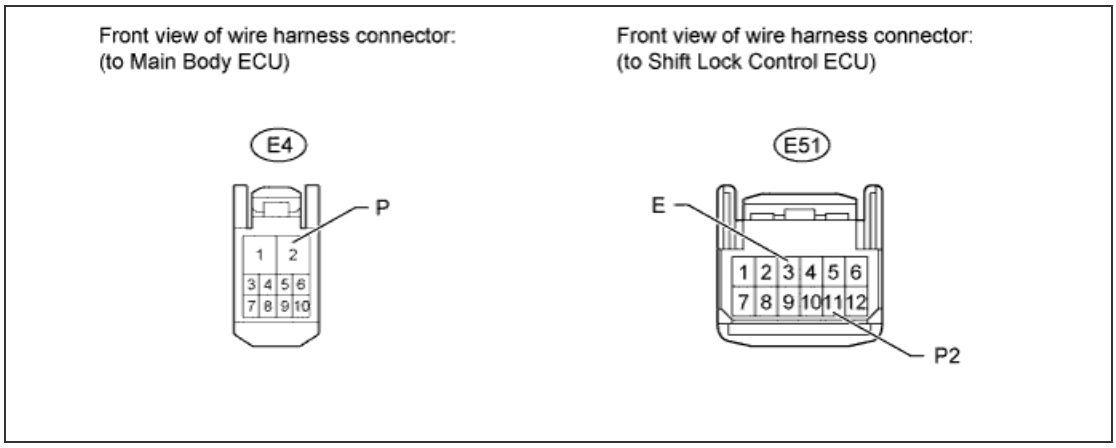

a. Disconnect the E4 main body ECU connector.

b. Disconnect the E51 shift lock control ECU connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E4-2 (P) - E51-11 (P2)	Always	Below 1 Ω
E51-3 (E) - Body ground	Always	Below 1 Ω
E4-2 (P) or E51-11 (P2) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

DTC B2272 Ignition 1 Monitor Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction occurs in the IG1D output circuit, which is between the IG1 No. 3 relay actuation circuit inside the main body ECU and the IG1 No. 3 relay.

DTC Code	Detection Condition	Trouble Area
B2272	The IG1 No. 3 relay actuation circuit inside the main body ECU or other related circuit is malfunctioning.	• Main body ECU • Harness or connector

WIRING DIAGRAM

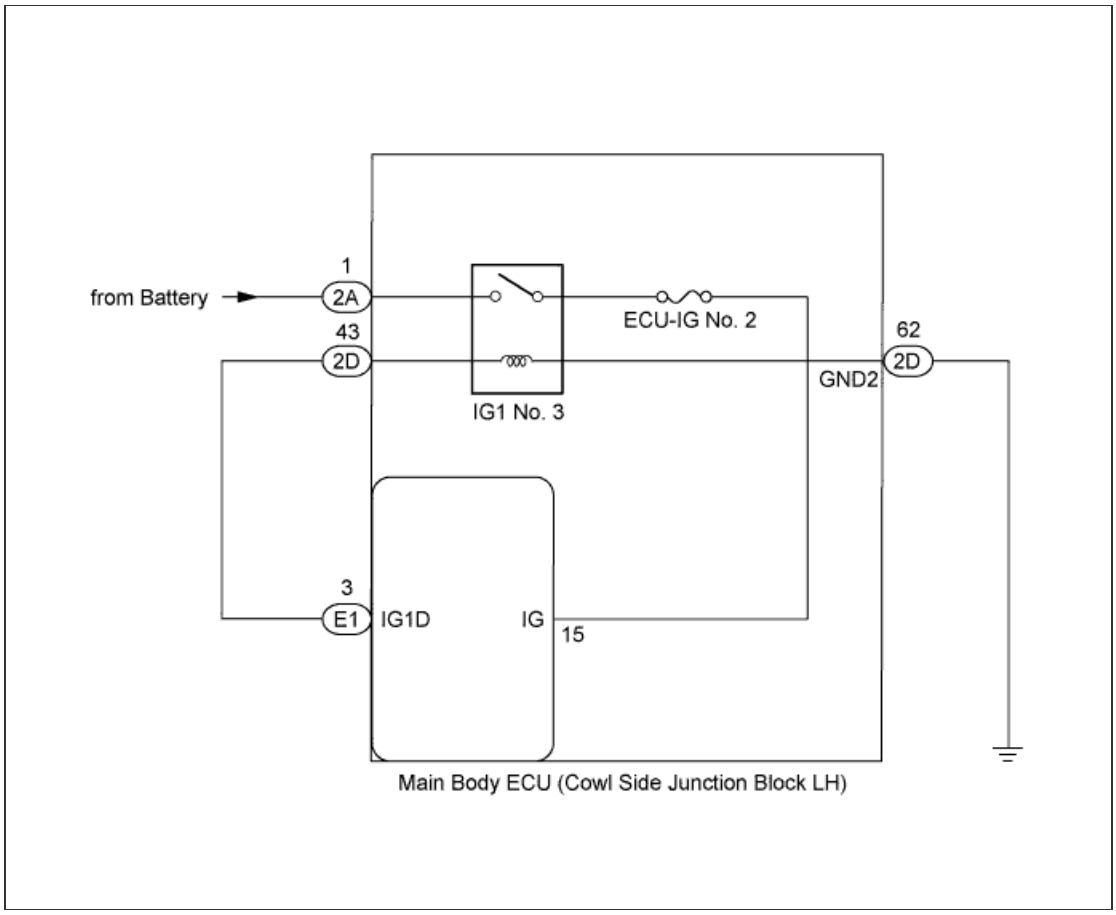

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (IG1 RELAY MONITOR (OUTSIDE))

a. Use the Data List to check if the IG1 No. 3 relay is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
IG1 Relay Monitor (Outside)	IG1 No. 3 relay outer relay monitor/ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-

OK:

When the engine switch is turned on (IG), ON is displayed on the intelligent tester.

NG → Go to step 3

OK

2.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Turn the engine switch on (IG), wait at least 10 seconds, and check whether DTC B2272 is output.

Result


Result	Proceed to
No DTC output	A
DTC B2272 output	B

B → REPLACE MAIN BODY ECU

A

USE SIMULATION METHOD TO CHECK (**Click here**)

3.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

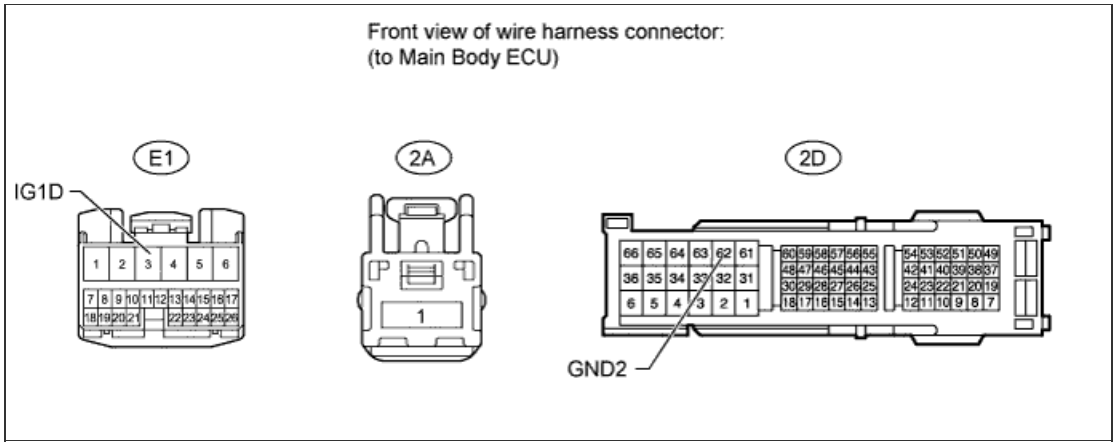

a. Disconnect the E1, 2A and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
2A-1 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-3 (IG1D) - 2D-43	Always	Below 1 Ω
2D-62 (GND2) - Body ground	Always	Below 1 Ω
E1-3 (IG1D) or 2D-43 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

DTC B2281 "P" Signal Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when there is an abnormal circuit between the main body ECU and the shift lock control ECU.

DTC Code	Detection Condition	Trouble Area
B2281	Communication or the communication line is abnormal between the main body ECU and shift lock control ECU.	• Main body ECU • Shift lock control ECU • Harness or connector

WIRING DIAGRAM

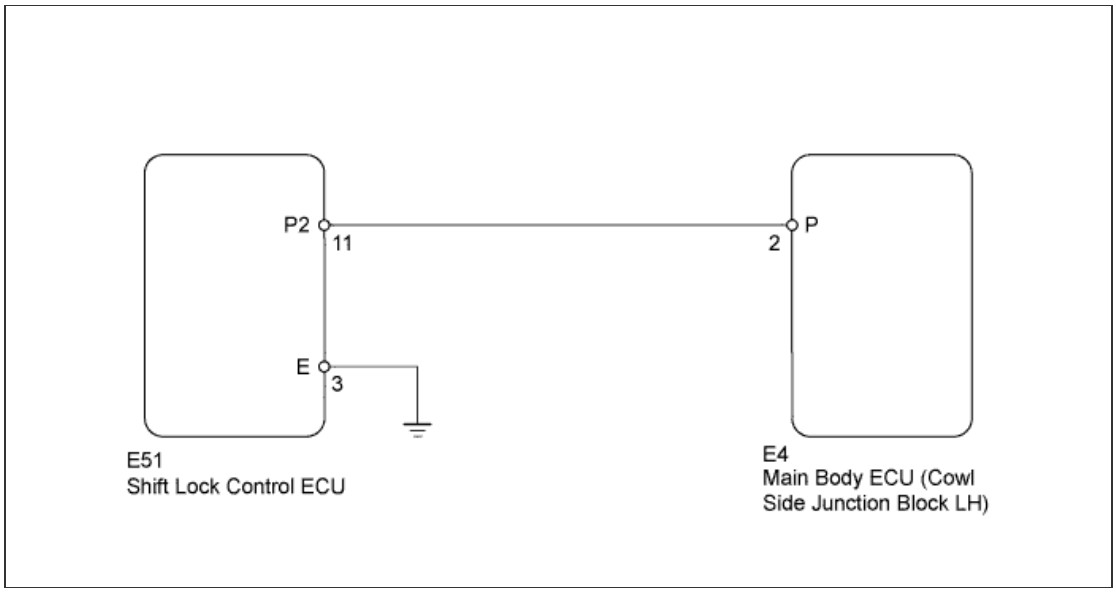

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (SHIFT P SIGNAL)

a. Use the Data List to check if the shift position signal is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Shift P Signal	Shift P position signal/ON or OFF	ON: Shift lever in P OFF: Shift lever not in P	-

Result

Result	Proceed to
Display on the intelligent tester does not change according to shift lever operation	A
Display on the intelligent tester changes according to shift lever operation	B

B → REPLACE MAIN BODY ECU

A

2.INSPECT SHIFT LOCK CONTROL ECU

a. Disconnect the E51 shift lock control ECU connector.


b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
11 (P2) - 3 (E)	Shift lever not in P	Below 1 Ω
11 (P2) - 3 (E)	Shift lever in P	10 kΩ or higher

Result

Result	Proceed to
Within specified range	A
Outside specified range (for 1GR-FE, 2UZ-FE)	B
Outside specified range (for 1VD-FTV, 3UR-FE)	C

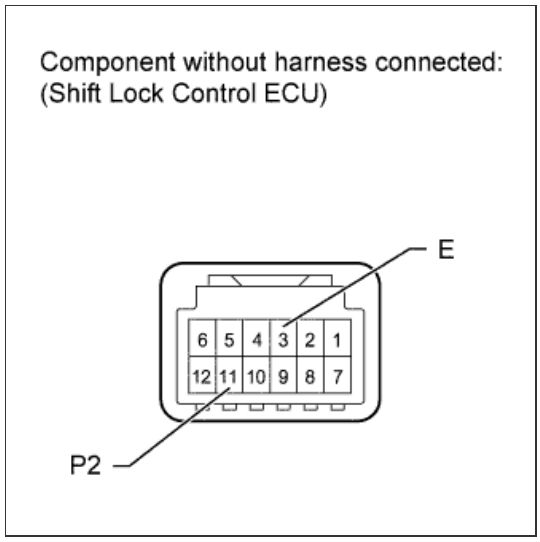


B → REPLACE SHIFT LOCK CONTROL ECU (Click here)

C → REPLACE SHIFT LOCK CONTROL ECU (Click here)

A

3.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - SHIFT LOCK CONTROL ECU AND BODY GROUND)

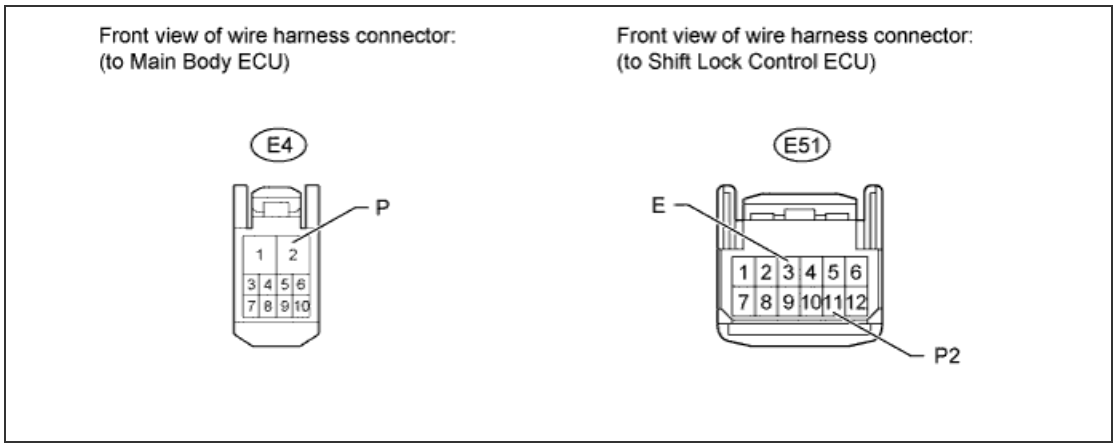

a. Disconnect the E4 main body ECU connector.

b. Disconnect the E51 shift lock control ECU connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E4-2 (P) - E51-11 (P2)	Always	Below 1 Ω
E51-3 (E) - Body ground	Always	Below 1 Ω
E4-2 (P) or E51-11 (P2) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

DTC B2272 Ignition 1 Monitor Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction occurs in the IG1D output circuit, which is between the IG1 No. 3 relay actuation circuit inside the main body ECU and the IG1 No. 3 relay.

DTC Code	Detection Condition	Trouble Area
B2272	The IG1 No. 3 relay actuation circuit inside the main body ECU or other related circuit is malfunctioning.	• Main body ECU • Harness or connector

WIRING DIAGRAM

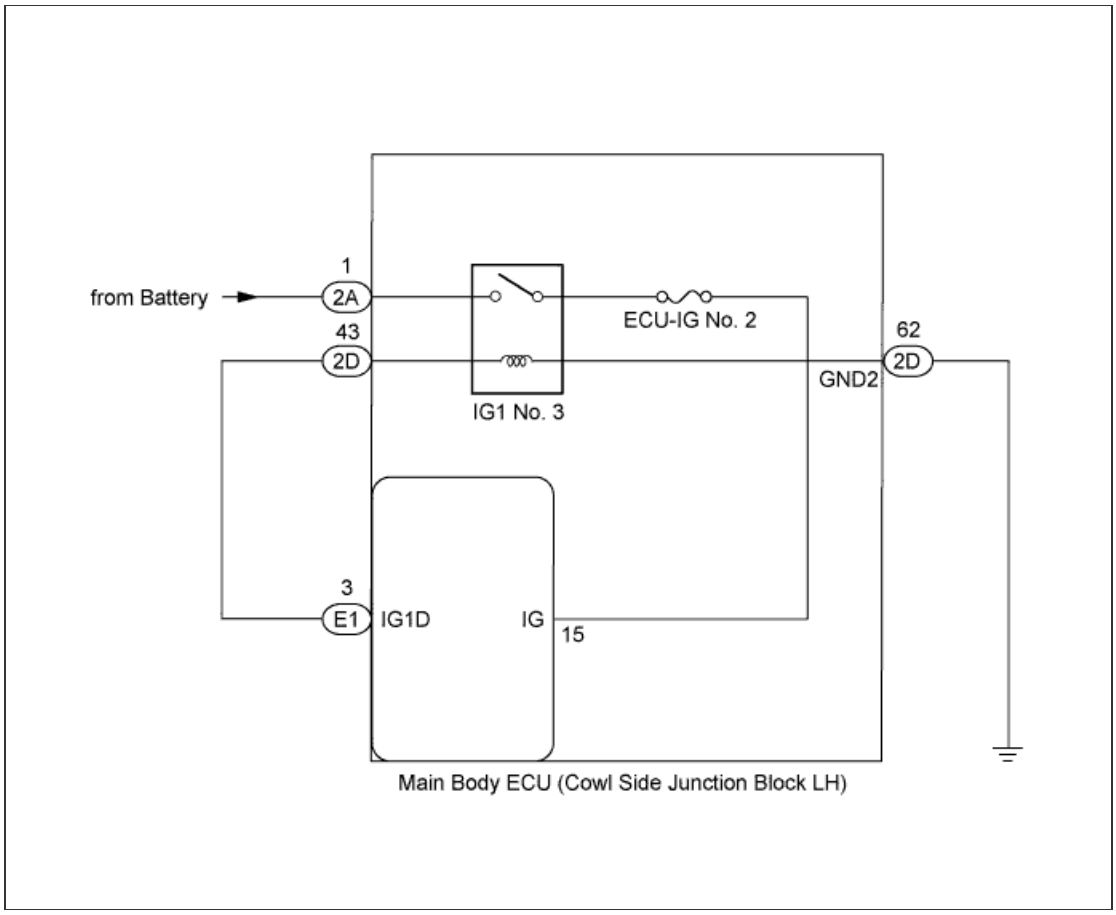

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (IG1 RELAY MONITOR (OUTSIDE))

a. Use the Data List to check if the IG1 No. 3 relay is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
IG1 Relay Monitor (Outside)	IG1 No. 3 relay outer relay monitor/ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-

OK:

When the engine switch is turned on (IG), ON is displayed on the intelligent tester.

NG → Go to step 3

OK

2.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Turn the engine switch on (IG), wait at least 10 seconds, and check whether DTC B2272 is output.

Result


Result	Proceed to
No DTC output	A
DTC B2272 output	B

B → REPLACE MAIN BODY ECU

A

USE SIMULATION METHOD TO CHECK (**Click here**)

3.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

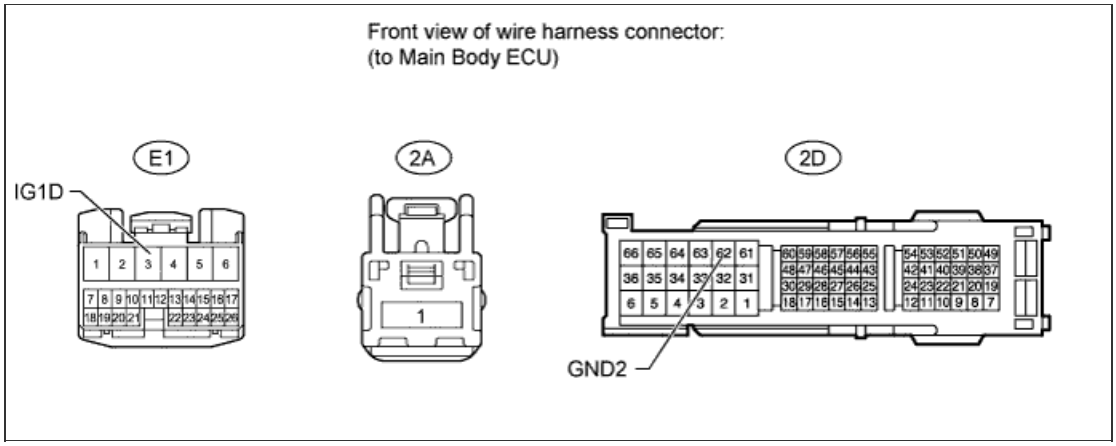

a. Disconnect the E1, 2A and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
2A-1 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-3 (IG1D) - 2D-43	Always	Below 1 Ω
2D-62 (GND2) - Body ground	Always	Below 1 Ω
E1-3 (IG1D) or 2D-43 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

DTC B2282 Vehicle Speed Signal Malfunction

DTC B2283 Vehicle Speed Sensor Malfunction

for Preparation Click here


DESCRIPTION

The main body ECU and the combination meter are connected with a cable and the CAN communication line. DTC B2282 is stored when signals, transmitted through the cable and communication line, do not match.


DTC Code	Detection Condition	Trouble Area
B2282	When the following conditions are met: • Signals between the main body ECU and combination meter are inconsistent. • A malfunction is detected in the circuit between the vehicle speed sensor and combination meter.	• Main body ECU • Combination meter assembly • Harness or connector

The skid control ECU converts signals from the speed sensor into 4-pulse signals and sends them to the combination meter. After these signals are converted into a more precise rectangular waveform by the waveform shaping circuit inside the combination meter, they are then transmitted to the main body ECU. The main body ECU determines the vehicle speed based on the frequencies of these pulse signals.

DTC Code	Detection Condition	Trouble Area
B2283	When both of the conditions below are met: • Vehicle speed decreases significantly. • Vehicle speed does not correspond with engine speed.	• Main body ECU • Combination meter assembly • Speed sensor • Skid control ECU • Harness or connector

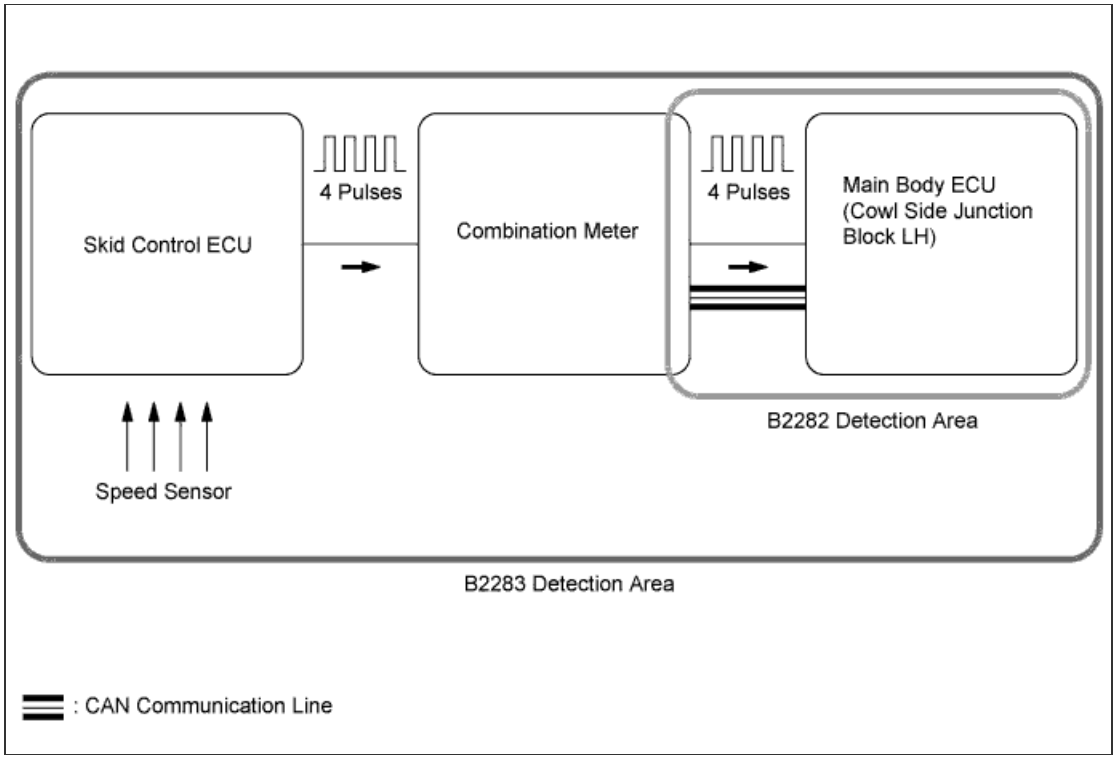

WIRING DIAGRAM

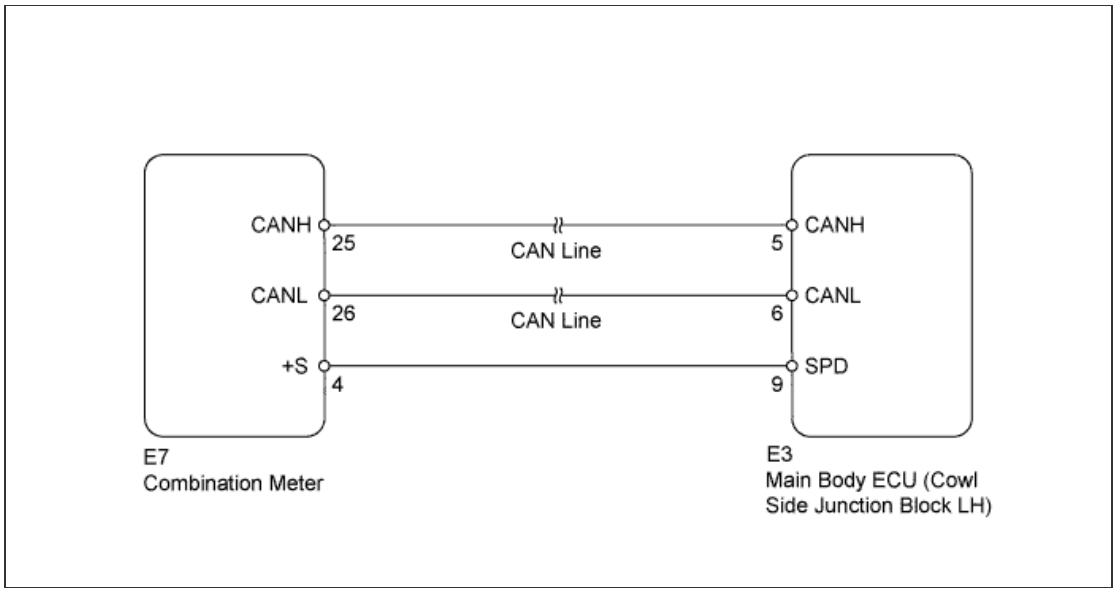

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (VEHICLE SPEED SIGNAL)

a. Use the Data List to check if the vehicle speed signal is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Vehicle Speed Signal	Vehicle speed signal/STOP or RUN	STOP: Vehicle stopped RUN: Vehicle running	-


Result

Result	Proceed to
Display on the intelligent tester does not change according to vehicle condition	A
Display on the intelligent tester changes according to vehicle condition	B

B → REPLACE MAIN BODY ECU

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - COMBINATION METER)

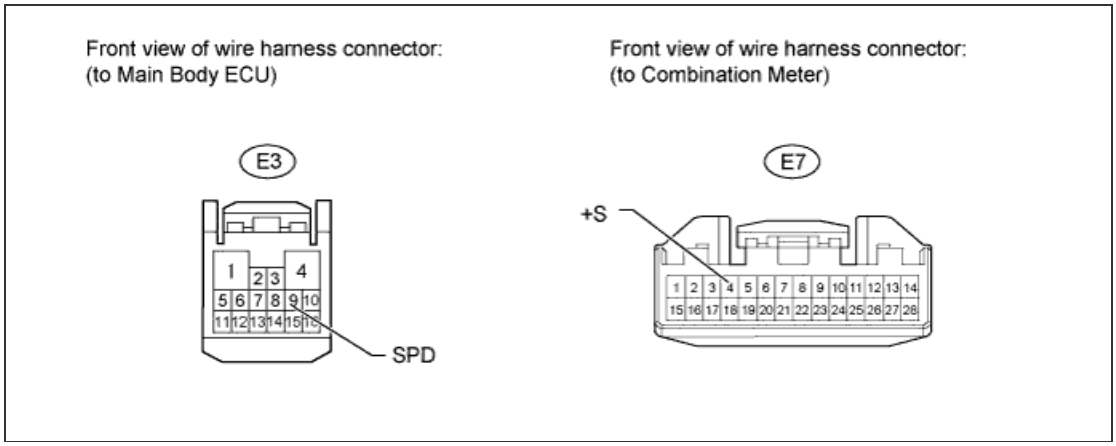

a. Disconnect the E3 main body ECU connector.

b. Disconnect the E7 combination meter connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E3-9 (SPD) - E7-10 (+S)	Always	Below 1 Ω
E3-9 (SPD) or E7-10 (+S) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.REPLACE MAIN BODY ECU

a. Temporarily replace the main body ECU with a new or normally functioning one.

b. Check whether DTC B2282 and B2283 are output.

Result

Result	Proceed to
DTC not output	A
DTC output (w/ Multi-information Display)	B
DTC output (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE COMBINATION METER (Click here)

A

END

DTC B2273 Ignition 2 Monitor Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction occurs in the IG2D output circuit, which is between the integration relay (IG2 relay) actuation circuit inside the main body ECU and the integration relay (IG2 relay).

DTC Code	Detection Condition	Trouble Area
B2273	The integration relay (IG2 relay) actuation circuit inside the main body ECU or other related circuit is malfunctioning.	• Main body ECU • IG2 MAIN fuse • Integration relay (IG2 relay) • Harness or connector

WIRING DIAGRAM

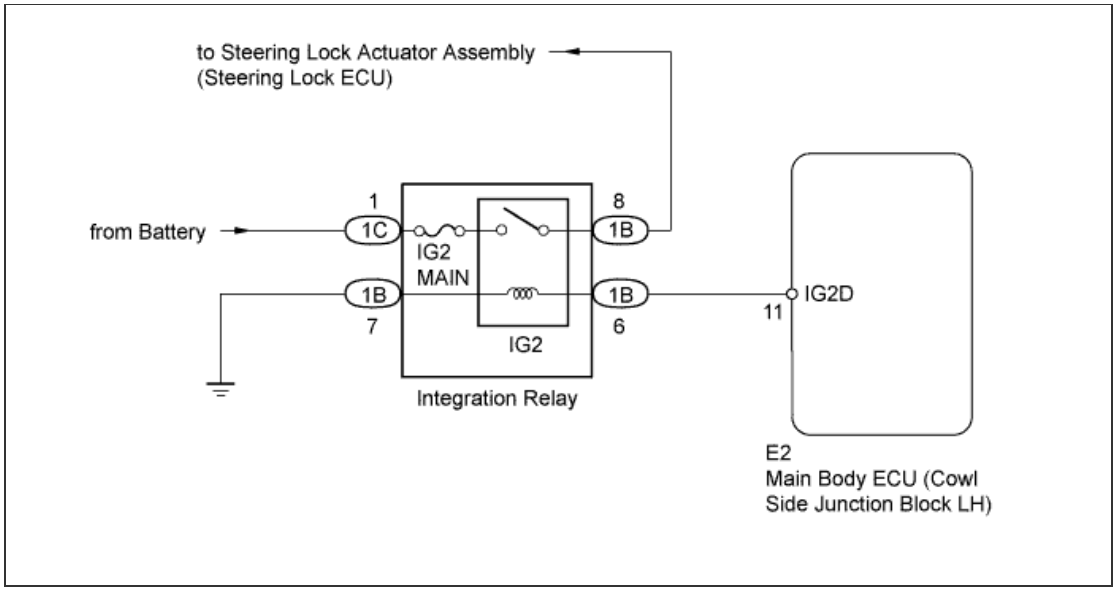

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (IG2 RELAY MONITOR (INSIDE))

a. Use the Data List to check if the integration relay (IG2 relay) is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
IG2 Relay Monitor (Inside)	Integration relay (IG2 relay) inner relay monitor/ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-

OK:

When the engine switch is turned on (IG), ON is displayed on the tester.

NG → Go to step 3

OK

2.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Turn the engine switch on (IG), wait at least 10 seconds, and check whether DTC B2273 is output.

Result

Result	Proceed to
No DTC output	A
DTC B2273 output	B

B → REPLACE MAIN BODY ECU

A

USE SIMULATION METHOD TO CHECK (Click here)

3.INSPECT FUSE (IG2 MAIN)

a. Remo e the IG2 MAIN fuse from the integration relay.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IG2 MAIN fuse	Always	Below 1 Ω

NG → REPLACE FUSE (IG2 MAIN)

OK

4.INSPECT INTEGRATION NO.1 RELAY (IG2 RELAY)


a. Install the IG2 MAIN fuse to the integration relay.

b. Remove the integration relay from the engine room relay block.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
1B-8 - 1C-1	Battery voltage applied to terminals 1B-6 and 1B-7	Below 1 Ω
1B-8 - 1C-1	Battery voltage not applied to terminals 1B-6 and 1B-7	10 kΩ or higher

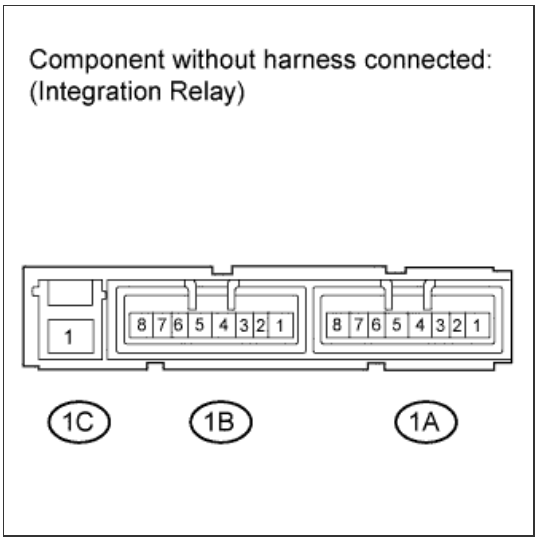

NG → REPLACE INTEGRATION NO.1 RELAY (IG2 RELAY)

OK

5.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - INTEGRATION RELAY (IG2 RELAY) AND BODY GROUND)

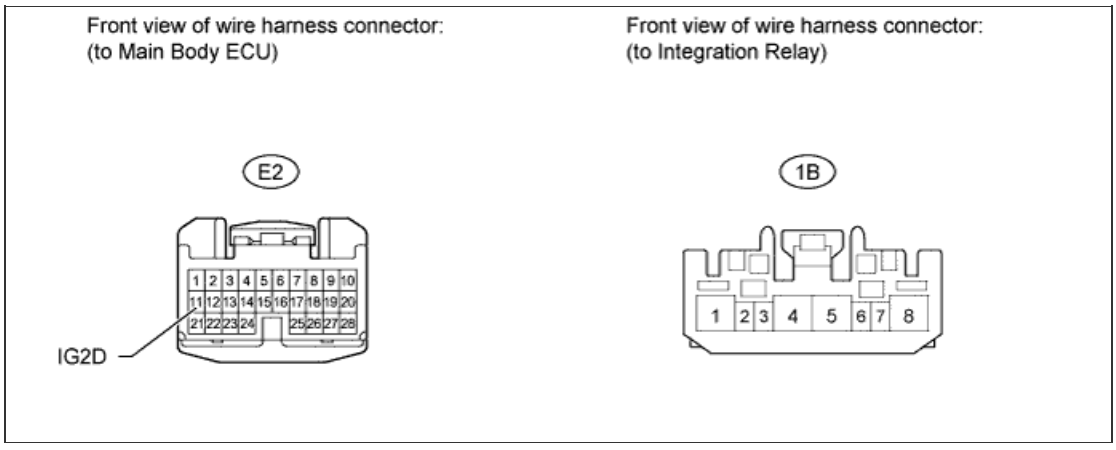

a. Disconnect the E2 main body ECU connector.

b. Disconnect the B integration relay connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E2-11 (IG2D) - 1B-6	Always	Below 1 Ω
1B-7 - Body ground	Always	Below 1 Ω
E2-11 (IG2D) or 1B-6 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK → REPLACE MAIN BODY ECU

DTC B2282 Vehicle Speed Signal Malfunction

DTC B2283 Vehicle Speed Sensor Malfunction

for Preparation Click here


DESCRIPTION

The main body ECU and the combination meter are connected with a cable and the CAN communication line. DTC B2282 is stored when signals, transmitted through the cable and communication line, do not match.


DTC Code	Detection Condition	Trouble Area
B2282	When the following conditions are met: • Signals between the main body ECU and combination meter are inconsistent. • A malfunction is detected in the circuit between the vehicle speed sensor and combination meter.	• Main body ECU • Combination meter assembly • Harness or connector

The skid control ECU converts signals from the speed sensor into 4-pulse signals and sends them to the combination meter. After these signals are converted into a more precise rectangular waveform by the waveform shaping circuit inside the combination meter, they are then transmitted to the main body ECU. The main body ECU determines the vehicle speed based on the frequencies of these pulse signals.

DTC Code	Detection Condition	Trouble Area
B2283	When both of the conditions below are met: • Vehicle speed decreases significantly. • Vehicle speed does not correspond with engine speed.	• Main body ECU • Combination meter assembly • Speed sensor • Skid control ECU • Harness or connector

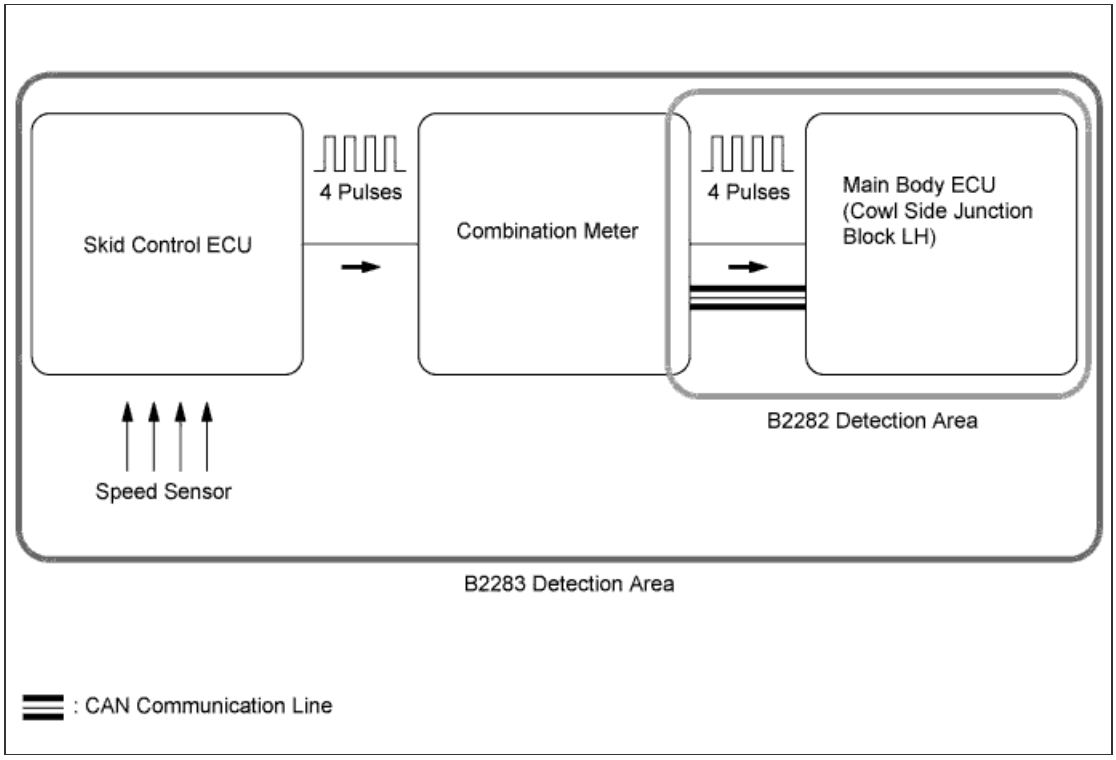

WIRING DIAGRAM

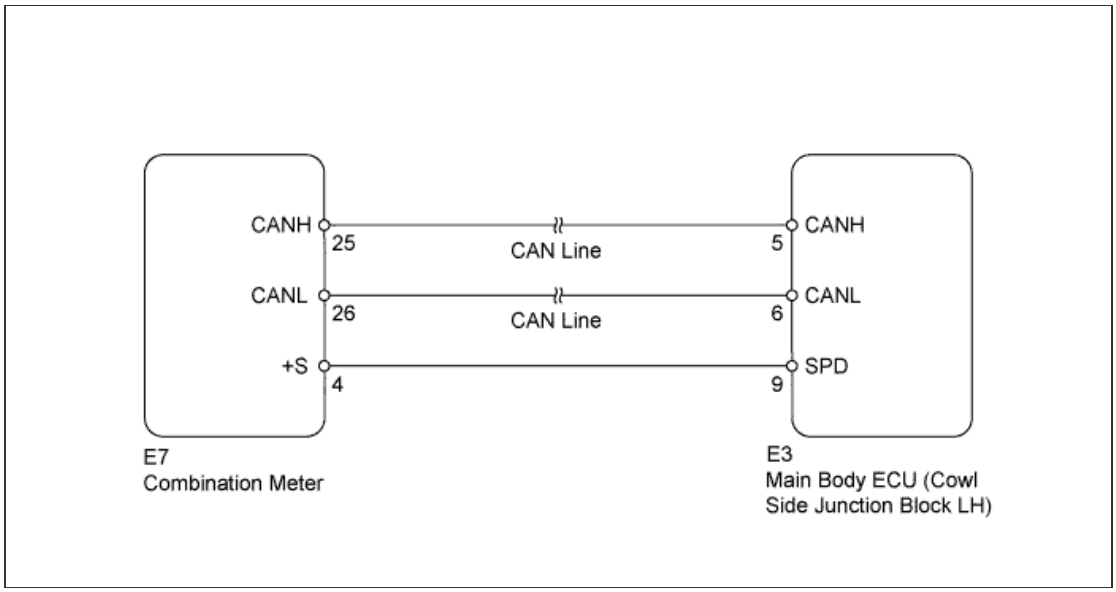

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (VEHICLE SPEED SIGNAL)

a. Use the Data List to check if the vehicle speed signal is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Vehicle Speed Signal	Vehicle speed signal/STOP or RUN	STOP: Vehicle stopped RUN: Vehicle running	-


Result

Result	Proceed to
Display on the intelligent tester does not change according to vehicle condition	A
Display on the intelligent tester changes according to vehicle condition	B

B → REPLACE MAIN BODY ECU

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - COMBINATION METER)

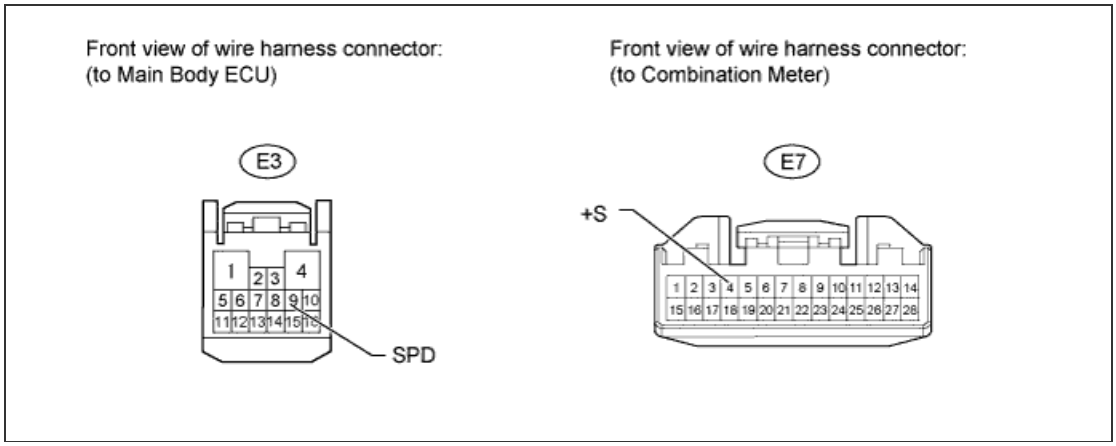

a. Disconnect the E3 main body ECU connector.

b. Disconnect the E7 combination meter connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E3-9 (SPD) - E7-10 (+S)	Always	Below 1 Ω
E3-9 (SPD) or E7-10 (+S) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.REPLACE MAIN BODY ECU

a. Temporarily replace the main body ECU with a new or normally functioning one.

b. Check whether DTC B2282 and B2283 are output.

Result

Result	Proceed to
DTC not output	A
DTC output (w/ Multi-information Display)	B
DTC output (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE COMBINATION METER (Click here)

A

END

DTC B2273 Ignition 2 Monitor Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction occurs in the IG2D output circuit, which is between the integration relay (IG2 relay) actuation circuit inside the main body ECU and the integration relay (IG2 relay).

DTC Code	Detection Condition	Trouble Area
B2273	The integration relay (IG2 relay) actuation circuit inside the main body ECU or other related circuit is malfunctioning.	• Main body ECU • IG2 MAIN fuse • Integration relay (IG2 relay) • Harness or connector

WIRING DIAGRAM

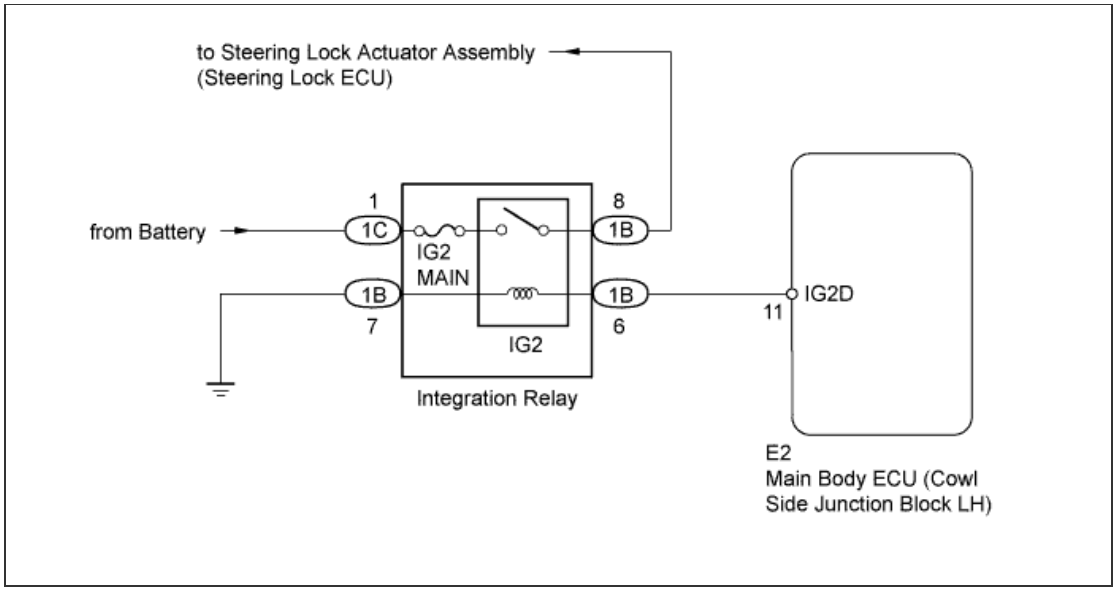

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (IG2 RELAY MONITOR (INSIDE))

a. Use the Data List to check if the integration relay (IG2 relay) is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
IG2 Relay Monitor (Inside)	Integration relay (IG2 relay) inner relay monitor/ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-

OK:

When the engine switch is turned on (IG), ON is displayed on the tester.

NG → Go to step 3

OK

2.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Turn the engine switch on (IG), wait at least 10 seconds, and check whether DTC B2273 is output.

Result

Result	Proceed to
No DTC output	A
DTC B2273 output	B

B → REPLACE MAIN BODY ECU

A

USE SIMULATION METHOD TO CHECK (Click here)

3.INSPECT FUSE (IG2 MAIN)

a. Remo e the IG2 MAIN fuse from the integration relay.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IG2 MAIN fuse	Always	Below 1 Ω

NG → REPLACE FUSE (IG2 MAIN)

OK

4.INSPECT INTEGRATION NO.1 RELAY (IG2 RELAY)


a. Install the IG2 MAIN fuse to the integration relay.

b. Remove the integration relay from the engine room relay block.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
1B-8 - 1C-1	Battery voltage applied to terminals 1B-6 and 1B-7	Below 1 Ω
1B-8 - 1C-1	Battery voltage not applied to terminals 1B-6 and 1B-7	10 kΩ or higher

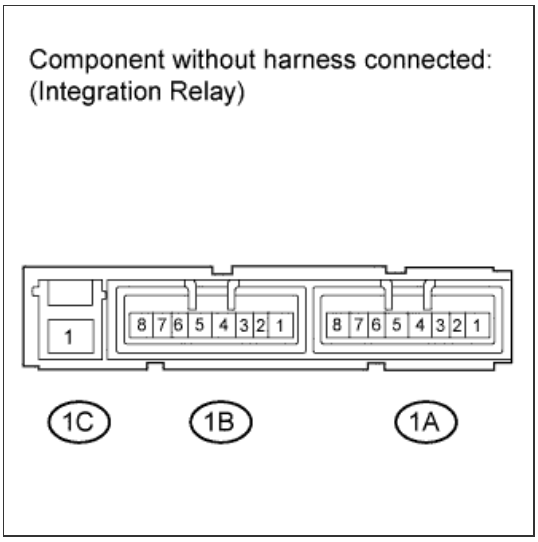

NG → REPLACE INTEGRATION NO.1 RELAY (IG2 RELAY)

OK

5.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - INTEGRATION RELAY (IG2 RELAY) AND BODY GROUND)

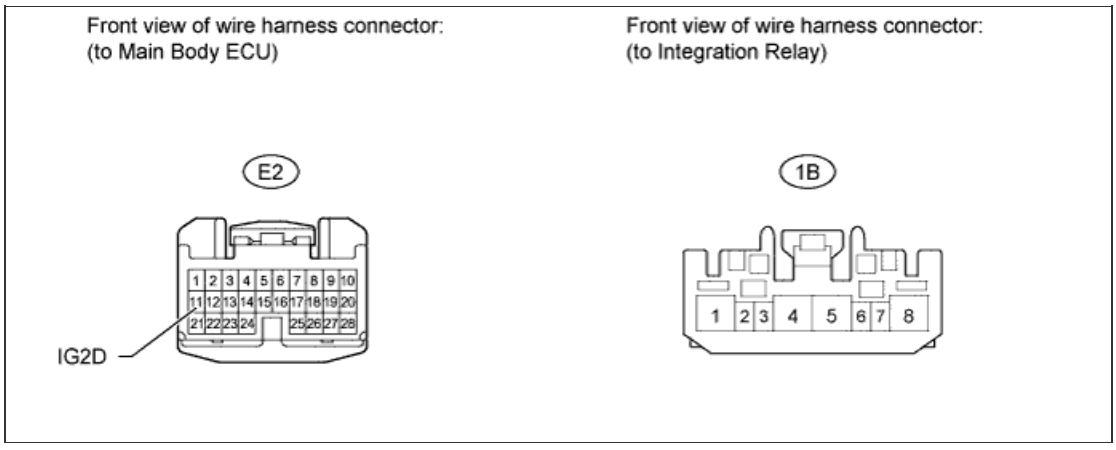

a. Disconnect the E2 main body ECU connector.

b. Disconnect the B integration relay connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E2-11 (IG2D) - 1B-6	Always	Below 1 Ω
1B-7 - Body ground	Always	Below 1 Ω
E2-11 (IG2D) or 1B-6 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK → REPLACE MAIN BODY ECU

DTC B2282 Vehicle Speed Signal Malfunction

DTC B2283 Vehicle Speed Sensor Malfunction

for Preparation Click here


DESCRIPTION

The main body ECU and the combination meter are connected with a cable and the CAN communication line. DTC B2282 is stored when signals, transmitted through the cable and communication line, do not match.


DTC Code	Detection Condition	Trouble Area
B2282	When the following conditions are met: • Signals between the main body ECU and combination meter are inconsistent. • A malfunction is detected in the circuit between the vehicle speed sensor and combination meter.	• Main body ECU • Combination meter assembly • Harness or connector

The skid control ECU converts signals from the speed sensor into 4-pulse signals and sends them to the combination meter. After these signals are converted into a more precise rectangular waveform by the waveform shaping circuit inside the combination meter, they are then transmitted to the main body ECU. The main body ECU determines the vehicle speed based on the frequencies of these pulse signals.

DTC Code	Detection Condition	Trouble Area
B2283	When both of the conditions below are met: • Vehicle speed decreases significantly. • Vehicle speed does not correspond with engine speed.	• Main body ECU • Combination meter assembly • Speed sensor • Skid control ECU • Harness or connector

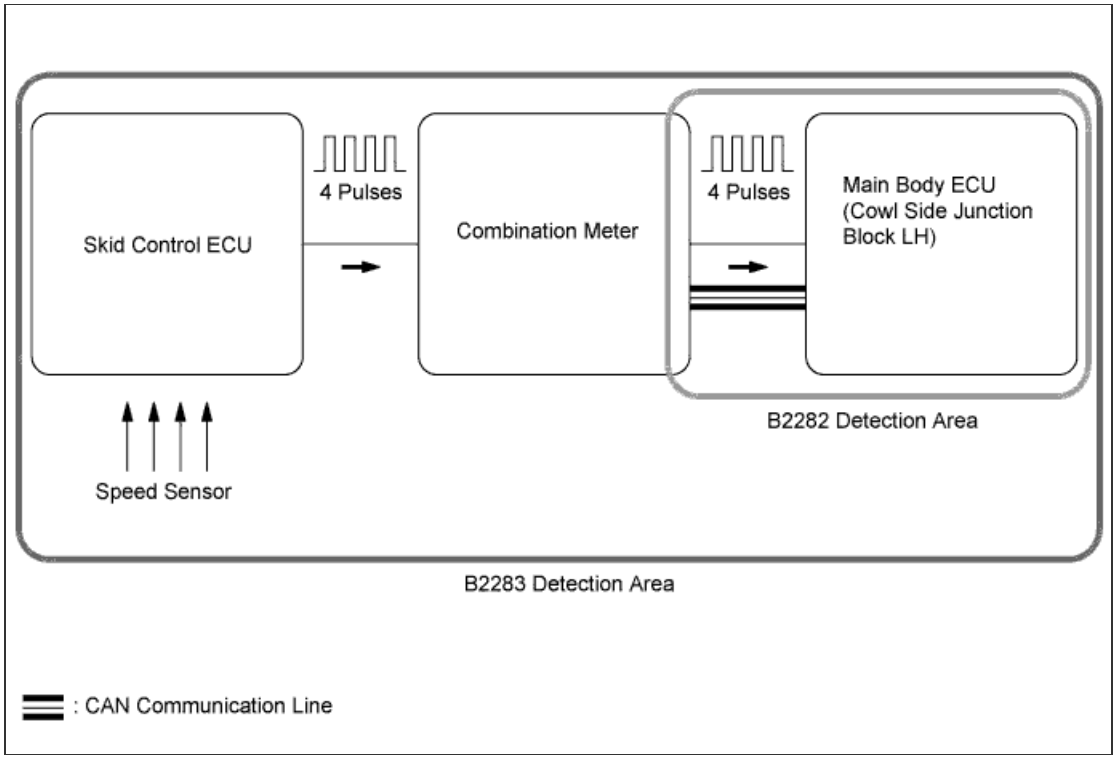

WIRING DIAGRAM

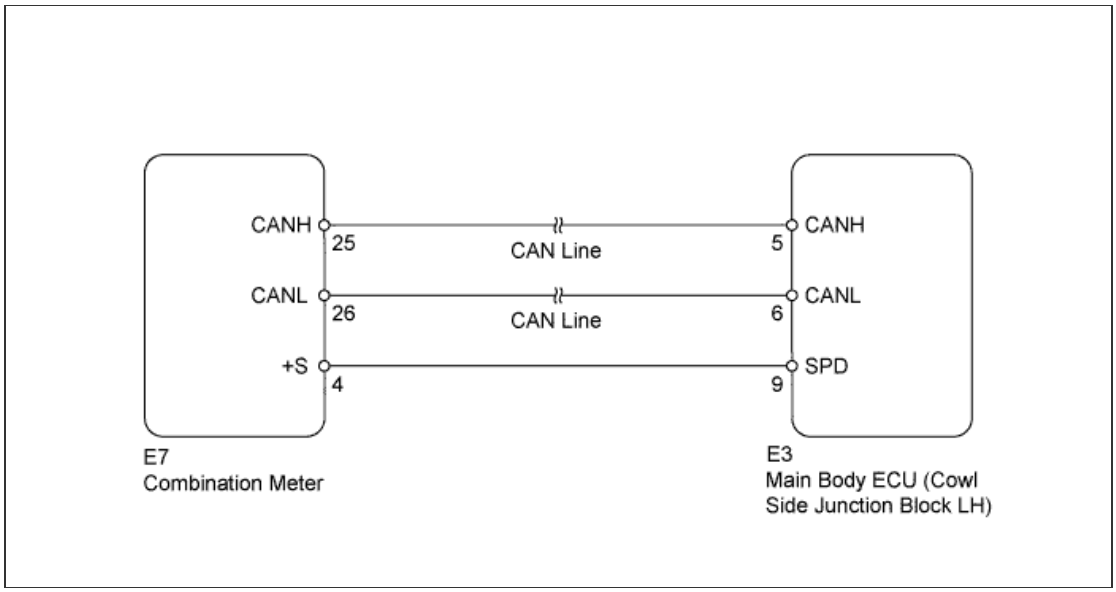

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (VEHICLE SPEED SIGNAL)

a. Use the Data List to check if the vehicle speed signal is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Vehicle Speed Signal	Vehicle speed signal/STOP or RUN	STOP: Vehicle stopped RUN: Vehicle running	-


Result

Result	Proceed to
Display on the intelligent tester does not change according to vehicle condition	A
Display on the intelligent tester changes according to vehicle condition	B

B → REPLACE MAIN BODY ECU

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - COMBINATION METER)

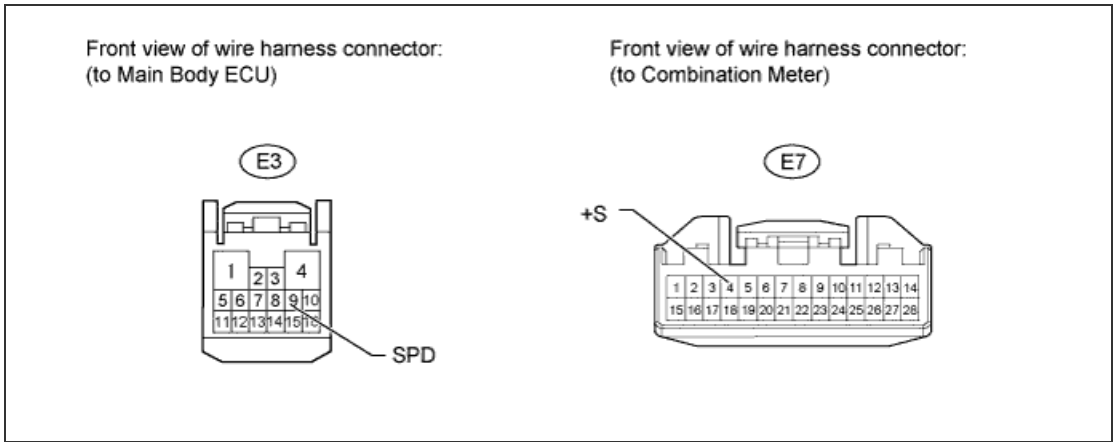

a. Disconnect the E3 main body ECU connector.

b. Disconnect the E7 combination meter connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E3-9 (SPD) - E7-10 (+S)	Always	Below 1 Ω
E3-9 (SPD) or E7-10 (+S) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.REPLACE MAIN BODY ECU

a. Temporarily replace the main body ECU with a new or normally functioning one.

b. Check whether DTC B2282 and B2283 are output.

Result

Result	Proceed to
DTC not output	A
DTC output (w/ Multi-information Display)	B
DTC output (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE COMBINATION METER (Click here)

A

END

DTC B2274 ACC Monitor Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction occurs in the ACCD output circuit, which is between the ACC relay actuation circuit inside the main body ECU and the ACC relay.

DTC Code	Detection Condition	Trouble Area
B2274	The ACC relay actuation circuit inside the main body ECU or other related circuit is malfunctioning.	• Main body ECU • Harness or connector

WIRING DIAGRAM

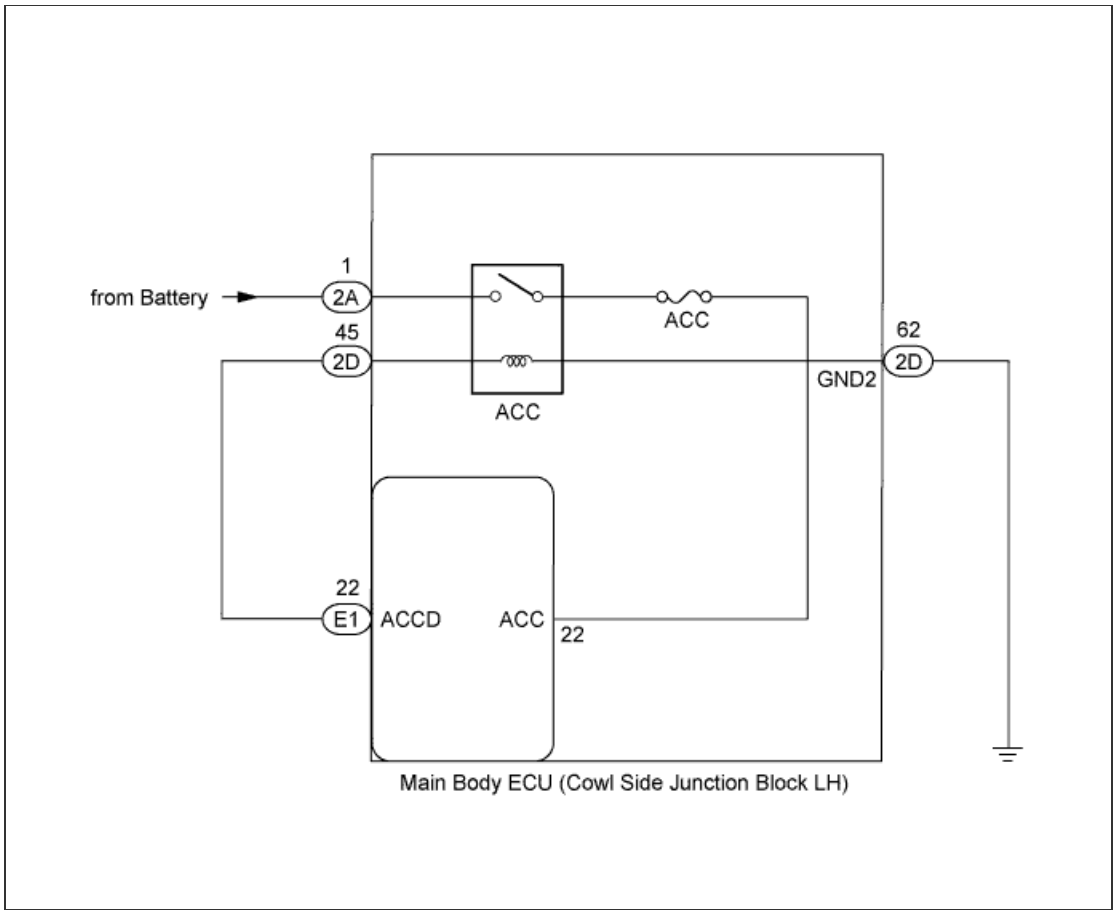

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (ACC RELAY MONITOR)

a. Use the Data List to check if the ACC relay is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
ACC Relay Monitor	ACC relay monitor/ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-

OK:

When the engine switch is turned on (IG), ON is displayed on the intelligent tester.

NG → Go to step 3

OK

2.C ECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs Click here .

b. Turn the engine switch on I , wait at least seconds, and check whether DTC B2274 is output.

Result


Result	Proceed to
No DTC output	A
DTC B2274 output	B

B → REPLACE MAIN BODY ECU

A

USE SIMULATION METHOD TO CHECK (Click here)

3.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

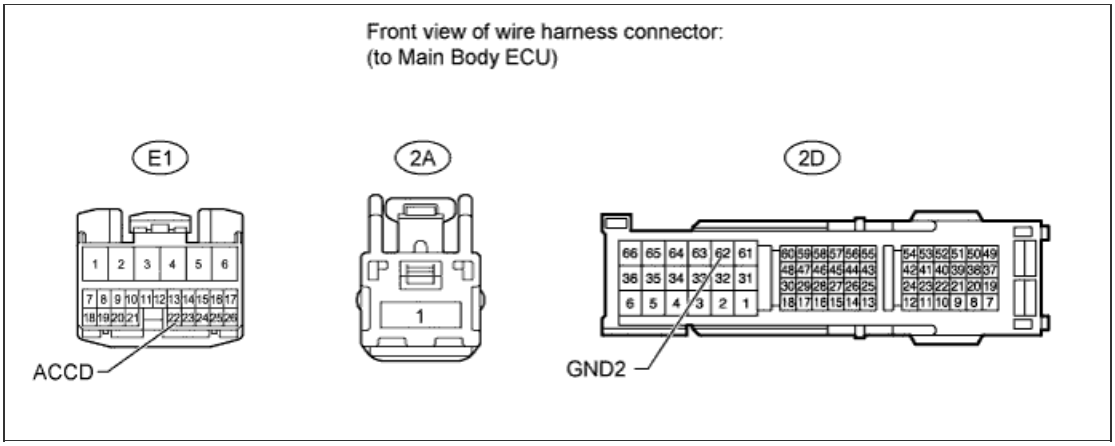

a. Disconnect the E , 2A and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
2A-1 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-22 (ACCD) - 2D-45	Always	Below 1 Ω
2D-62 (GND2) - Body ground	Always	Below 1 Ω
E1-22 (ACCD) or 2D-45 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

DTC B2282 Vehicle Speed Signal Malfunction

DTC B2283 Vehicle Speed Sensor Malfunction

for Preparation Click here


DESCRIPTION

The main body ECU and the combination meter are connected with a cable and the CAN communication line. DTC B2282 is stored when signals, transmitted through the cable and communication line, do not match.


DTC Code	Detection Condition	Trouble Area
B2282	When the following conditions are met: • Signals between the main body ECU and combination meter are inconsistent. • A malfunction is detected in the circuit between the vehicle speed sensor and combination meter.	• Main body ECU • Combination meter assembly • Harness or connector

The skid control ECU converts signals from the speed sensor into 4-pulse signals and sends them to the combination meter. After these signals are converted into a more precise rectangular waveform by the waveform shaping circuit inside the combination meter, they are then transmitted to the main body ECU. The main body ECU determines the vehicle speed based on the frequencies of these pulse signals.

DTC Code	Detection Condition	Trouble Area
B2283	When both of the conditions below are met: • Vehicle speed decreases significantly. • Vehicle speed does not correspond with engine speed.	• Main body ECU • Combination meter assembly • Speed sensor • Skid control ECU • Harness or connector

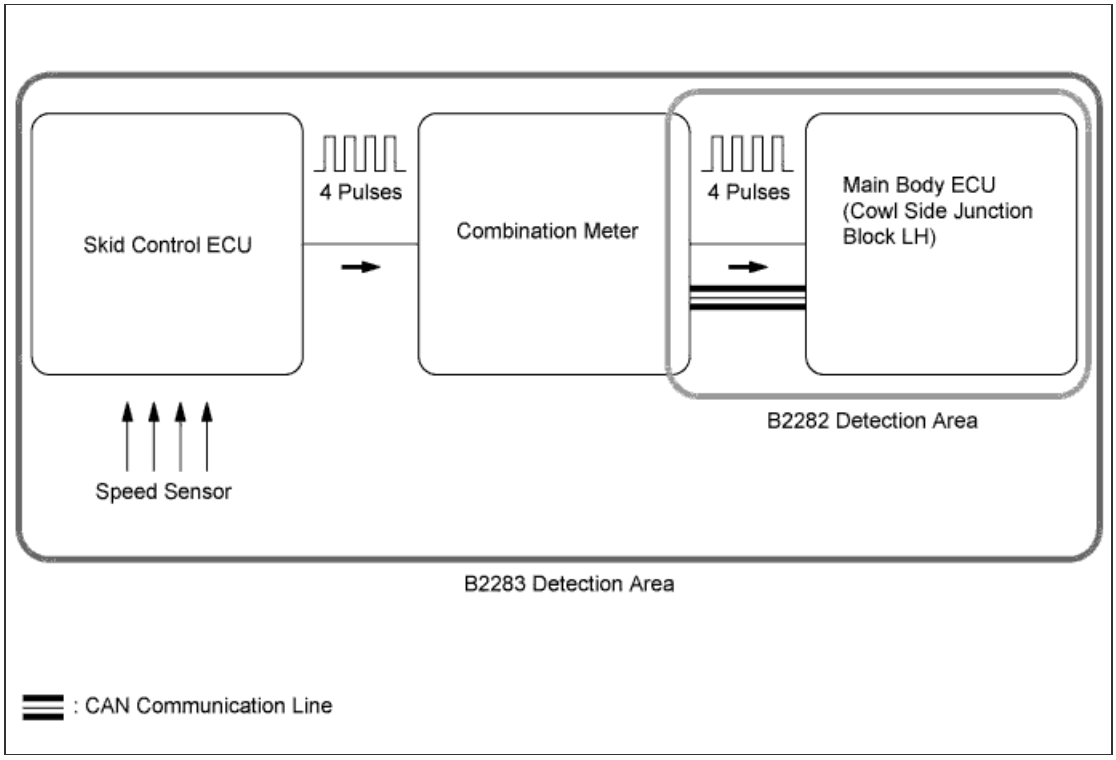

WIRING DIAGRAM

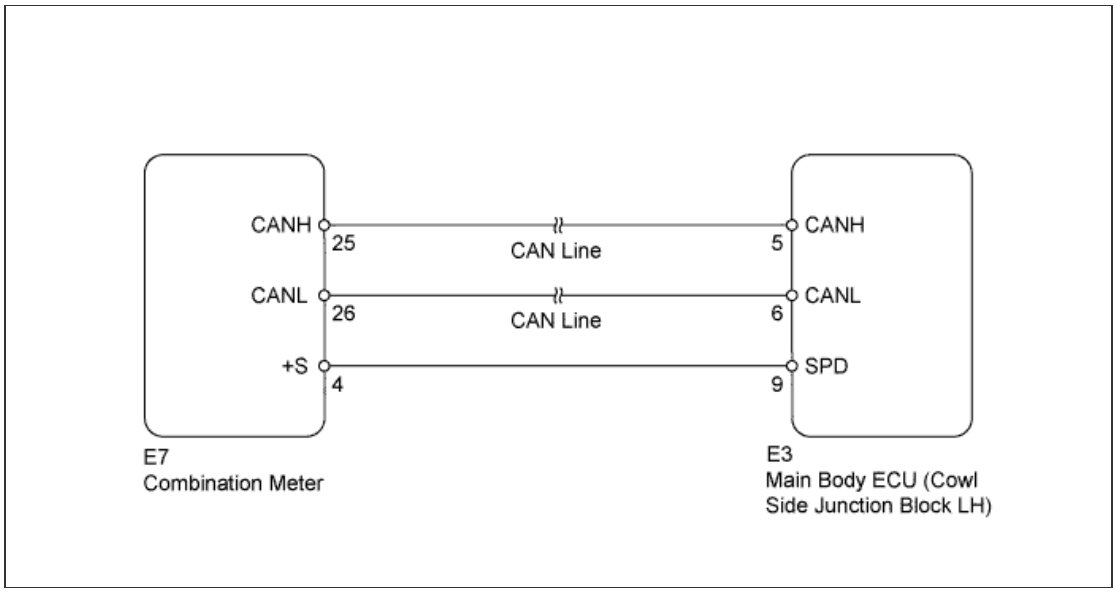

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (VEHICLE SPEED SIGNAL)

a. Use the Data List to check if the vehicle speed signal is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Vehicle Speed Signal	Vehicle speed signal/STOP or RUN	STOP: Vehicle stopped RUN: Vehicle running	-


Result

Result	Proceed to
Display on the intelligent tester does not change according to vehicle condition	A
Display on the intelligent tester changes according to vehicle condition	B

B → REPLACE MAIN BODY ECU

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - COMBINATION METER)

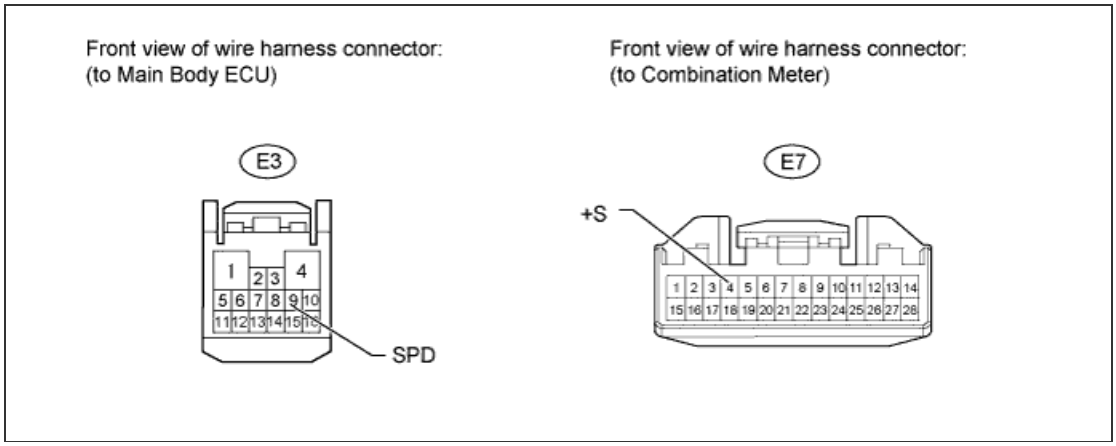

a. Disconnect the E3 main body ECU connector.

b. Disconnect the E7 combination meter connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E3-9 (SPD) - E7-10 (+S)	Always	Below 1 Ω
E3-9 (SPD) or E7-10 (+S) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.REPLACE MAIN BODY ECU

a. Temporarily replace the main body ECU with a new or normally functioning one.

b. Check whether DTC B2282 and B2283 are output.

Result

Result	Proceed to
DTC not output	A
DTC output (w/ Multi-information Display)	B
DTC output (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE COMBINATION METER (Click here)

A

END

DTC B2274 ACC Monitor Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction occurs in the ACCD output circuit, which is between the ACC relay actuation circuit inside the main body ECU and the ACC relay.

DTC Code	Detection Condition	Trouble Area
B2274	The ACC relay actuation circuit inside the main body ECU or other related circuit is malfunctioning.	• Main body ECU • Harness or connector

WIRING DIAGRAM

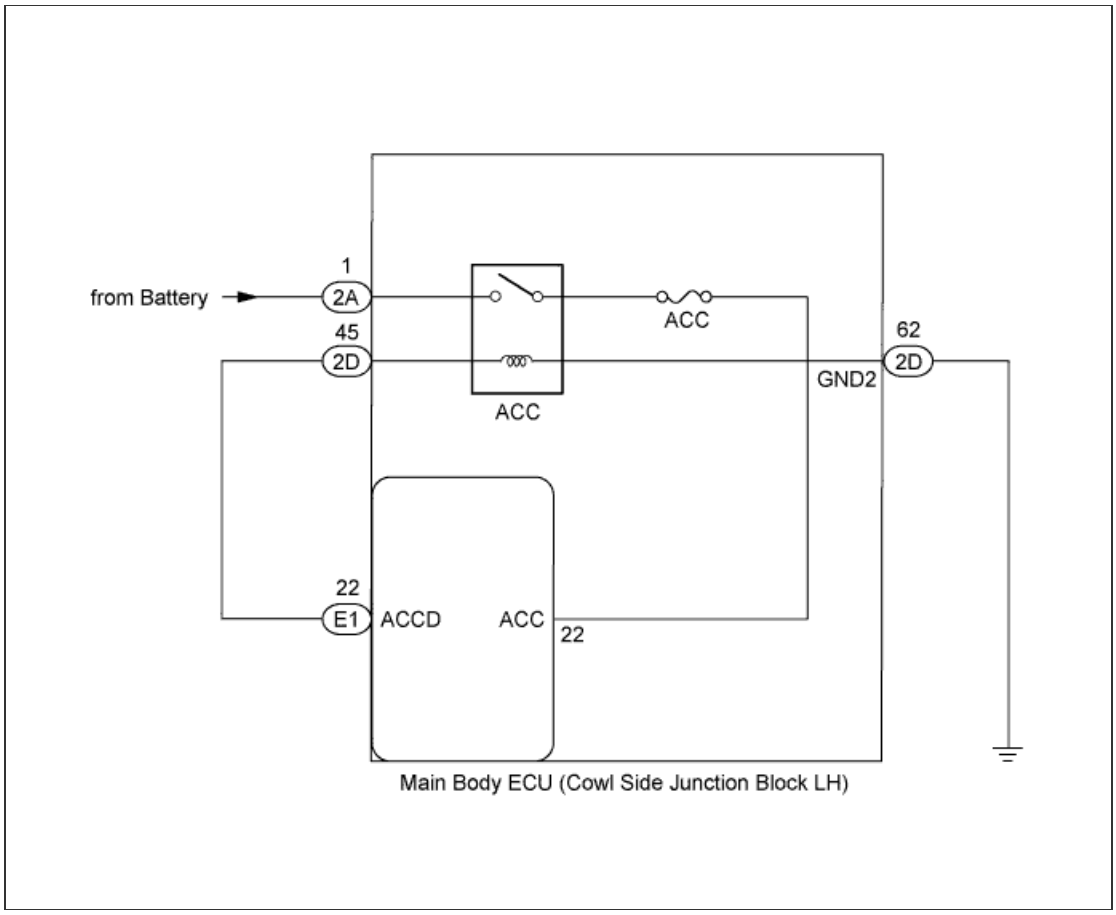

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (ACC RELAY MONITOR)

a. Use the Data List to check if the ACC relay is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
ACC Relay Monitor	ACC relay monitor/ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-

OK:

When the engine switch is turned on (IG), ON is displayed on the intelligent tester.

NG → Go to step 3

OK

2.C ECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs Click here .

b. Turn the engine switch on I , wait at least seconds, and check whether DTC B2274 is output.

Result


Result	Proceed to
No DTC output	A
DTC B2274 output	B

B → REPLACE MAIN BODY ECU

A

USE SIMULATION METHOD TO CHECK (Click here)

3.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

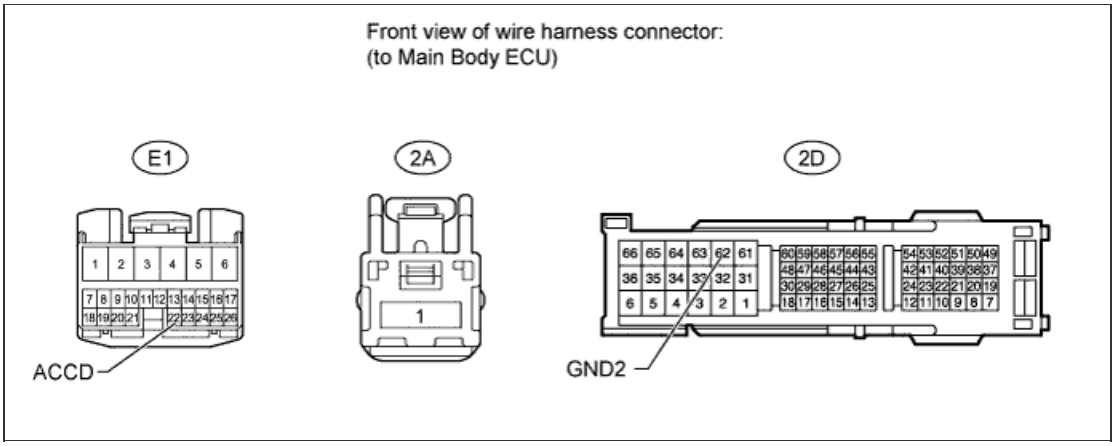

a. Disconnect the E , 2A and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
2A-1 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-22 (ACCD) - 2D-45	Always	Below 1 Ω
2D-62 (GND2) - Body ground	Always	Below 1 Ω
E1-22 (ACCD) or 2D-45 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

DTC B2284 Brake Signal Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when there is an inconsistency between the circuit between the main body ECU and stop light switch, and the CAN communication signal between the main body ECU and ECM.

DTC No.	Detection Condition	Trouble Area
B2284	The circuit between the main body ECU and stop light switch, and the CAN communication signal between the main body ECU and ECM are inconsistent.	• Main body ECU • Stop light switch • STOP fuse • Harness or connector

WIRING DIAGRAM

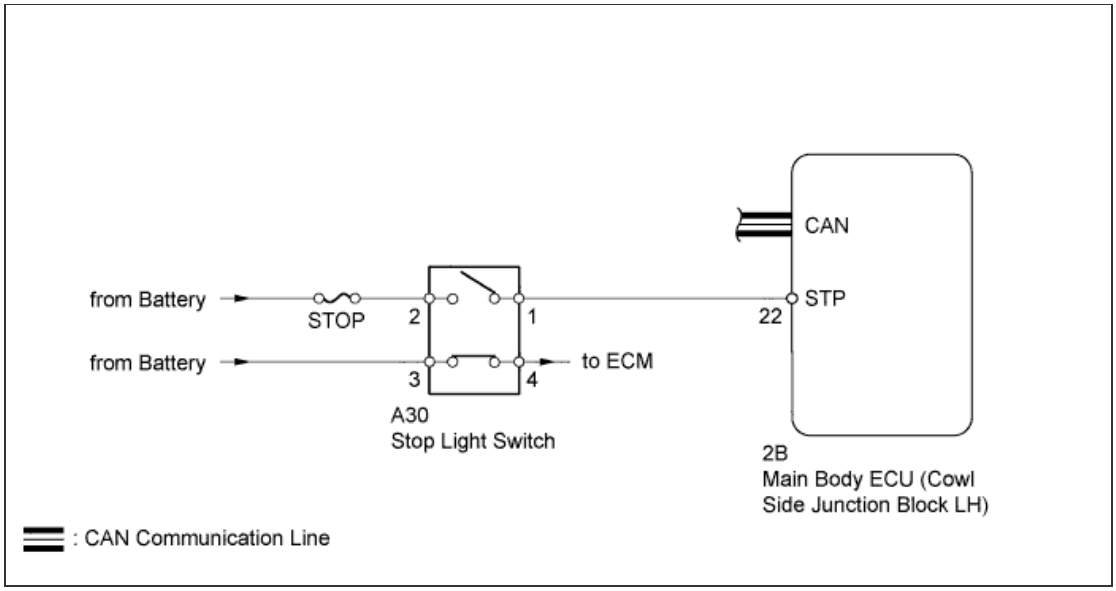

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (STOP LIGHT SWITCH)

a. Use the Data List to check if the stop light switch is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Stop Light SW	Stop light switch/ON or OFF	ON: Brake pedal depressed OFF: Brake pedal released	-

Result

Result	Proceed to
Display on the intelligent tester does not change according to brake pedal operation	A
Display on the intelligent tester changes according to brake pedal operation	B

B → REPLACE MAIN BODY ECU

A

2.INSPECT FUSE (STOP)

a. Remove the STOP fuse from the engine room relay block.

b. Measure the resistance according to the alue s in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
STOP fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

3.INSPECT STOP LIGHT SWITCH


a. Disconnect the A30 stop light switch connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
1 - 2	Stop light switch pin not pushed	Below 1 Ω
3 - 4	Stop light switch pin pushed	Below 1 Ω
1 - 2	Stop light switch pin pushed	10 kΩ or higher
3 - 4	Stop light switch pin not pushed	10 kΩ or higher

Component without harness connected:
(Stop Light Switch)

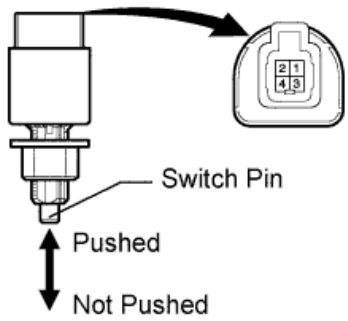


NG → REPLACE STOP LIGHT SWITCH (Click here)


OK

4.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND STOP LIGHT SWITCH)

Front view of wire harness connector:
(to Main Body ECU)

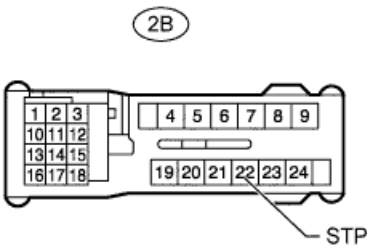

Front view of wire harness connector:
(to Stop Light Switch)



a. Disconnect the 2B main body ECU connector.

b. Disconnect the A30 stop light switch connector.

c. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
A30-2 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
2B-22 (STP) -		

A	lwayAs	Below 1 Ω
2B-22 (STP) or A30-1 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK → REPLACE MAIN BODY ECU

DTC B2275 STSW Monitor Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when the engine start request signal circuit inside the main body ECU is open or shorted.

DTC Code	Detection Condition	Trouble Area
B2275	The engine start request signal circuit inside the main body ECU or other related circuit is malfunctioning.	• Main body ECU • ECM • Harness or connector

WIRING DIAGRAM

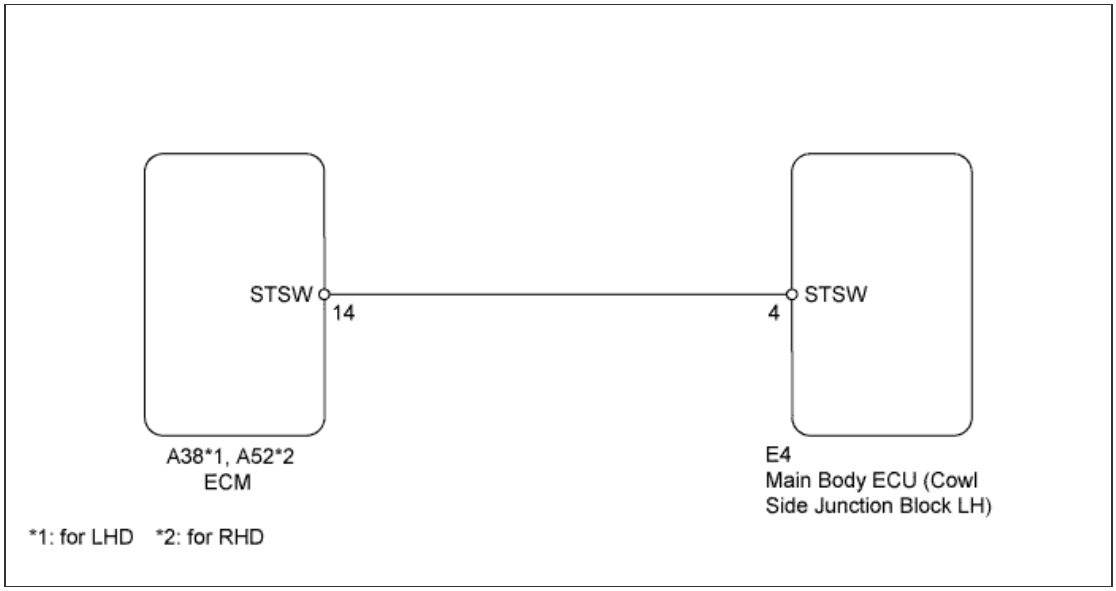

INSPECTION PROCEDURE

1.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Depress the brake pedal (for A/T) or clutch pedal (for M/T) with the engine switch on (IG), wait at least 15 seconds, and check whether DTC B2275 is output.


Result

Result	Proceed to
DTC B2275 output	A
No DTC output	B

B → USE SIMULATION METHOD TO CHECK (Click here)

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ECM)

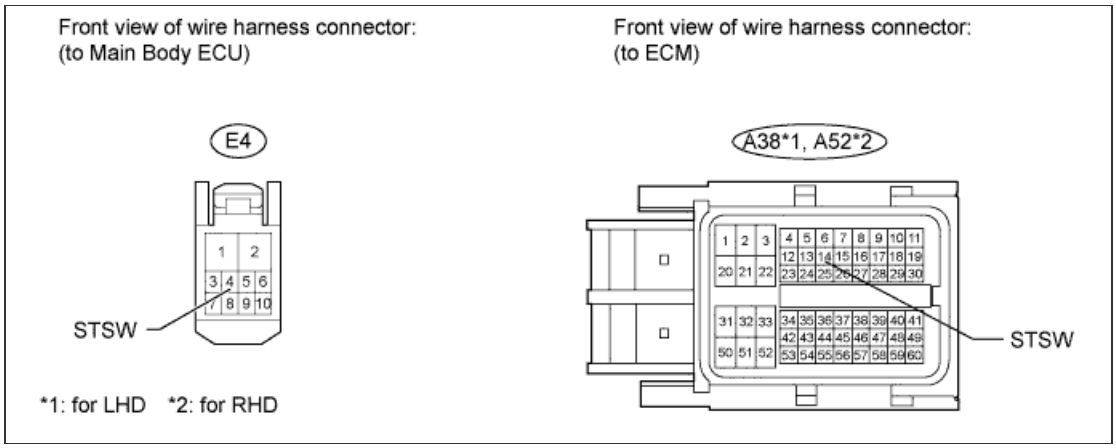

a. Disconnect the E main body ECU connector.

b. Disconnect the A38 (for LHD) or A52 (for RHD) ECM connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E4-4 (STSW) - A38-14 (STSW)*1 E4-4 (STSW) - A52-14 (STSW)*2	Always	Below 1 Ω
E4-4 (STSW) or A38-14 (STSW) - Body ground*1 E4-4 (STSW) or A52-14 (STSW) - Body ground*2	Always	10 kΩ or higher

HINT:

*1: for LHD


*2: for RHD

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT MAIN BODY ECU

a. Measure the voltage according to the value(s) in the table below.

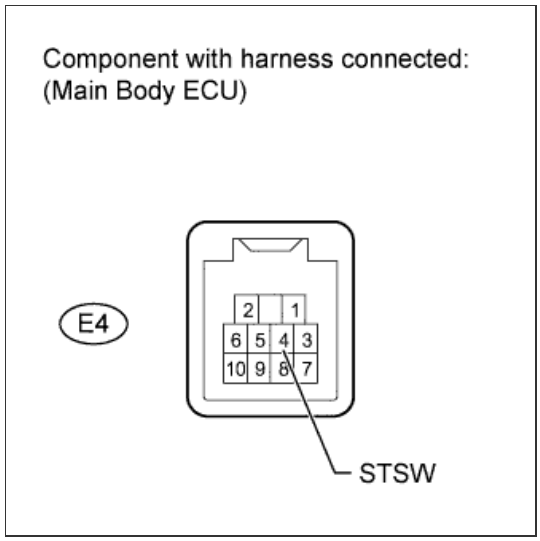

HINT:

The voltage is generated at terminal STSW for 0.3 seconds when the engine cranks.

Standard Voltage (for A/T):

Tester Connection	Condition	Specified Condition
E4-4 (STSW) - Body ground	Brake pedal depressed with shift lever in P, engine switch pushed once	11 to 14 V

Standard Voltage (for M/T):

Tester Connection	Condition	Specified Condition
E4-4 (STSW) - Body ground	Clutch pedal depressed, engine switch pushed once	11 to 14 V

Result

Result	Proceed to

Outside specified range	A
Within specified range (for 1GR-FE)	B
Within specified range (for 2UZ-FE)	C
Within specified range (for 1VD-FTV)	D

B → REPLACE ECM (Click here)

C → REPLACE ECM (Click here)

D → REPLACE ECM (Click here)

A → REPLACE MAIN BODY ECU

DTC B2285 Steering Lock Position Signal Circuit Malfunction

DTC B2288 Steering Lock Signal Circuit Malfunction


for Preparation Click here

DESCRIPTION

The main body ECU and the steering lock ECU are connected by a cable and the LIN communication line. These DTCs are stored when: 1) signals, transmitted through the cable and the communication line, do not match; or 2) a malfunction is detected in the circuit between the main body ECU and the steering lock ECU.

DTC Code	Detection Condition	Trouble Area
B2285	The cable and LIN information between the main body ECU and steering lock ECU is inconsistent.	• Main body ECU • Steering lock actuator assembly (steering lock ECU) • Harness or connector
B2288	After turning the engine switch from off to on (IG), the steering wheel does not unlock for a certain period of time (the ECU unlocks the steering wheel only when it receives an unlock signal from LIN communication and the cable).	• Main body ECU • Steering lock actuator assembly (steering lock ECU) • Harness or connector

WIRING DIAGRAM

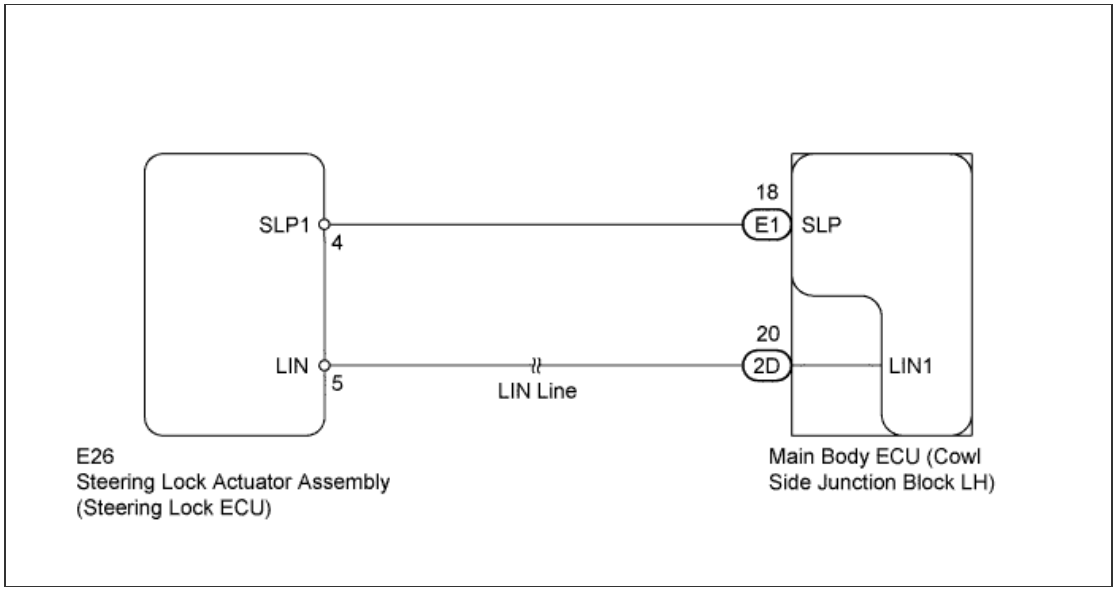

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (STEERING UNLOCK SWITCH)

a. Use the Data List to check if the steering lock is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Steering Unlock Switch	Steering lock condition/ON or OFF	ON: Steering unlocked OFF: Steering locked	-


Result

Result	Proceed to
Display on the intelligent tester does not change according to steering lock position	A
Display on the intelligent tester changes according to steering lock position	B

B → REPLACE MAIN BODY ECU

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - STEERING LOCK ECU)

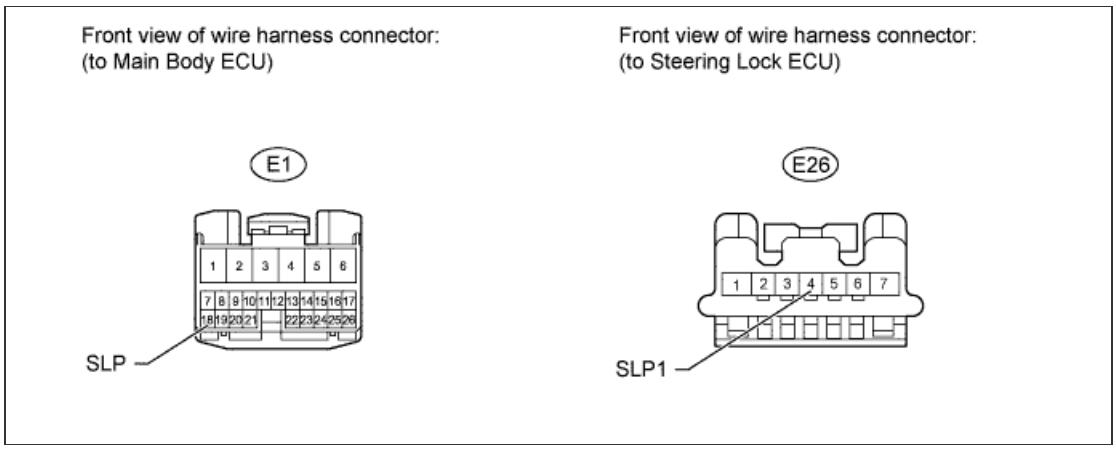

a. Disconnect the E1 main body ECU connector.

b. Disconnect the E26 steering lock ECU connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-18 (SLP) - E26-4 (SLP1)	Always	Below 1 Ω
E1-18 (SLP) or E26-4 (SLP1) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.REPLACE MAIN BODY ECU

a. Temporarily replace the main body ECU with a new or normally functioning one.

b. Check whether DTC B2285 and B2288 are output.

Result

Result	Proceed to
DTC not output	A
DTC output (for Power tilt and telescopic)	B
DTC output (for Manual tilt and telescopic)	C

B → REPLACE STEERING LOCK ACTUATOR ASSEMBLY (STEERING LOCK ECU) (Click here)

C → REPLACE STEERING LOCK ACTUATOR ASSEMBLY (STEERING LOCK ECU) (Click here)

A

END

DTC B2275 STSW Monitor Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when the engine start request signal circuit inside the main body ECU is open or shorted.

DTC Code	Detection Condition	Trouble Area
B2275	The engine start request signal circuit inside the main body ECU or other related circuit is malfunctioning.	• Main body ECU • ECM • Harness or connector

WIRING DIAGRAM

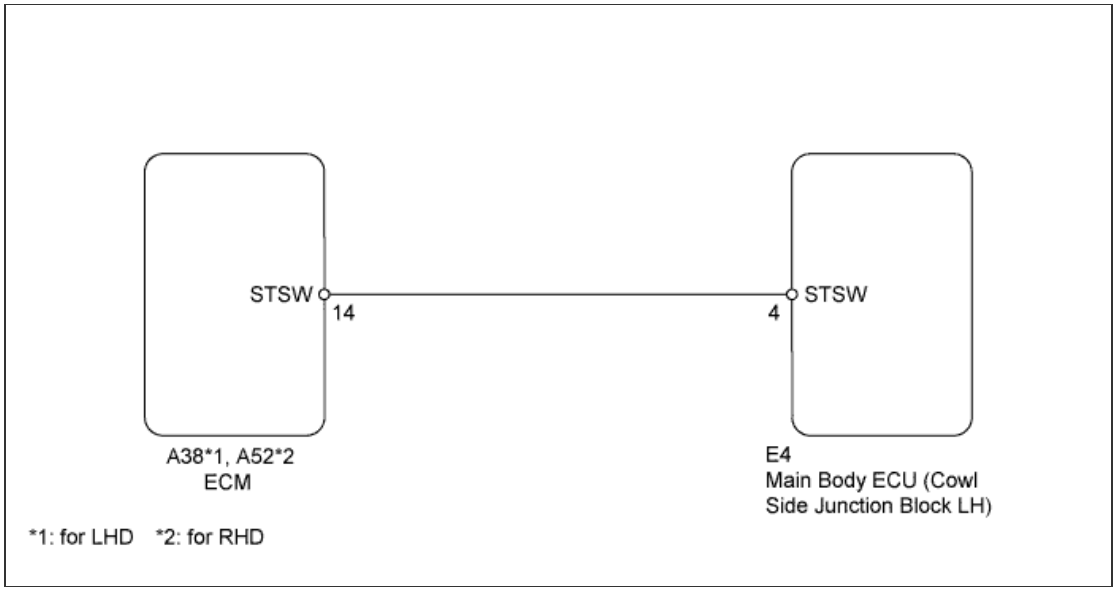

INSPECTION PROCEDURE

1.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Depress the brake pedal (for A/T) or clutch pedal (for M/T) with the engine switch on (IG), wait at least 15 seconds, and check whether DTC B2275 is output.


Result

Result	Proceed to
DTC B2275 output	A
No DTC output	B

B → USE SIMULATION METHOD TO CHECK (Click here)

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ECM)

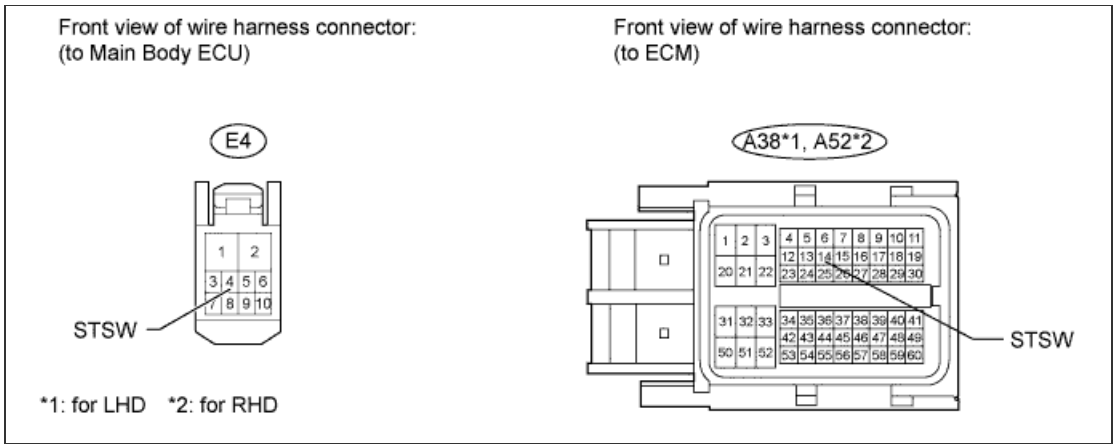

a. Disconnect the E main body ECU connector.

b. Disconnect the A38 (for LHD) or A52 (for RHD) ECM connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E4-4 (STSW) - A38-14 (STSW)*1 E4-4 (STSW) - A52-14 (STSW)*2	Always	Below 1 Ω
E4-4 (STSW) or A38-14 (STSW) - Body ground*1 E4-4 (STSW) or A52-14 (STSW) - Body ground*2	Always	10 kΩ or higher

HINT:

*1: for LHD


*2: for RHD

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT MAIN BODY ECU

a. Measure the voltage according to the value(s) in the table below.

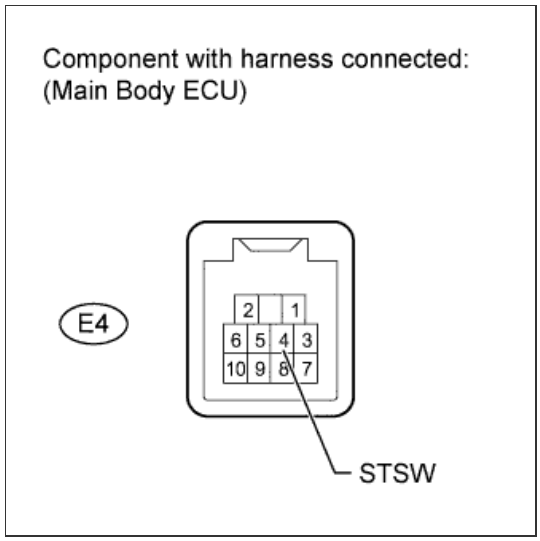

HINT:

The voltage is generated at terminal STSW for 0.3 seconds when the engine cranks.

Standard Voltage (for A/T):

Tester Connection	Condition	Specified Condition
E4-4 (STSW) - Body ground	Brake pedal depressed with shift lever in P, engine switch pushed once	11 to 14 V

Standard Voltage (for M/T):

Tester Connection	Condition	Specified Condition
E4-4 (STSW) - Body ground	Clutch pedal depressed, engine switch pushed once	11 to 14 V

Result

Result	Proceed to

Outside specified range	A
Within specified range (for 1GR-FE)	B
Within specified range (for 2UZ-FE)	C
Within specified range (for 3UR-FE)	D
Within specified range (for 1VD-FTV)	E

B → REPLACE ECM (Click here)

C → REPLACE ECM (Click here)

D → REPLACE ECM (Click here)

E → REPLACE ECM (Click here)

A

REPLACE MAIN BODY ECU

DTC B2285 Steering Lock Position Signal Circuit Malfunction

DTC B2288 Steering Lock Signal Circuit Malfunction


for Preparation Click here

DESCRIPTION

The main body ECU and the steering lock ECU are connected by a cable and the LIN communication line. These DTCs are stored when: 1) signals, transmitted through the cable and the communication line, do not match; or 2) a malfunction is detected in the circuit between the main body ECU and the steering lock ECU.

DTC Code	Detection Condition	Trouble Area
B2285	The cable and LIN information between the main body ECU and steering lock ECU is inconsistent.	• Main body ECU • Steering lock actuator assembly (steering lock ECU) • Harness or connector
B2288	After turning the engine switch from off to on (IG), the steering wheel does not unlock for a certain period of time (the ECU unlocks the steering wheel only when it receives an unlock signal from LIN communication and the cable).	• Main body ECU • Steering lock actuator assembly (steering lock ECU) • Harness or connector

WIRING DIAGRAM

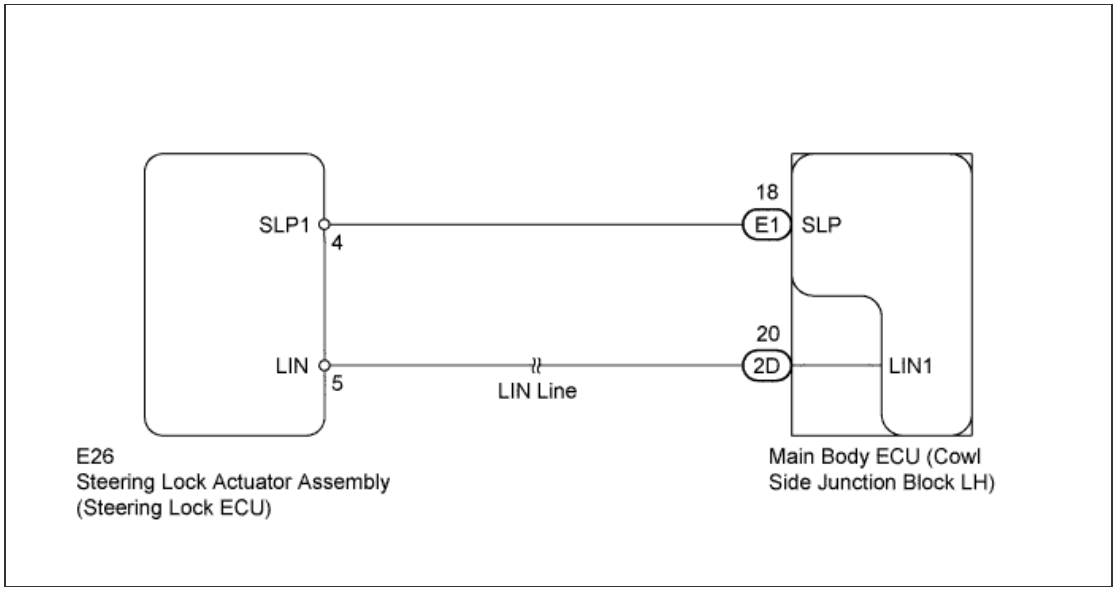

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (STEERING UNLOCK SWITCH)

a. Use the Data List to check if the steering lock is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Steering Unlock Switch	Steering lock condition/ON or OFF	ON: Steering unlocked OFF: Steering locked	-


Result

Result	Proceed to
Display on the intelligent tester does not change according to steering lock position	A
Display on the intelligent tester changes according to steering lock position	B

B → REPLACE MAIN BODY ECU

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - STEERING LOCK ECU)

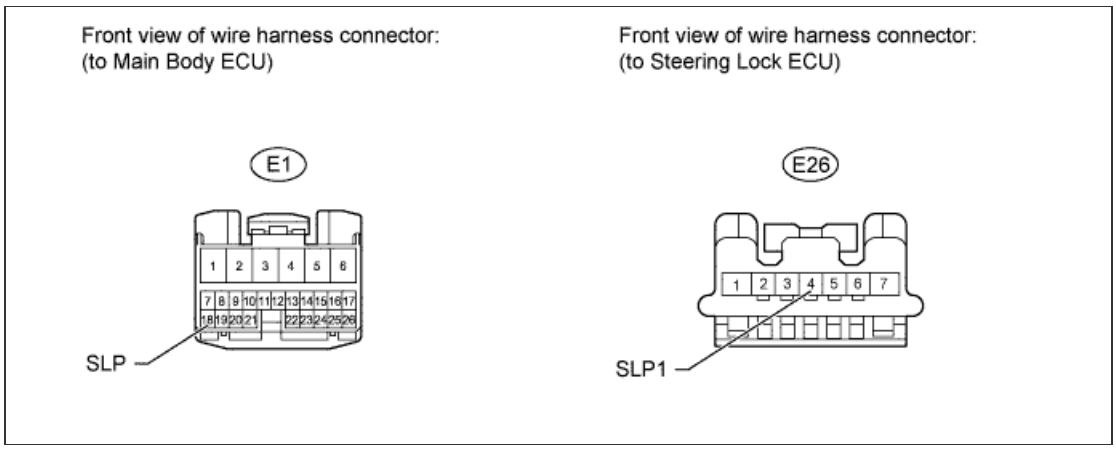

a. Disconnect the E1 main body ECU connector.

b. Disconnect the E26 steering lock ECU connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-18 (SLP) - E26-4 (SLP1)	Always	Below 1 Ω
E1-18 (SLP) or E26-4 (SLP1) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.REPLACE MAIN BODY ECU

a. Temporarily replace the main body ECU with a new or normally functioning one.

b. Check whether DTC B2285 and B2288 are output.

Result

Result	Proceed to
DTC not output	A
DTC output (for Power tilt and telescopic)	B
DTC output (for Manual tilt and telescopic)	C

B → REPLACE STEERING LOCK ACTUATOR ASSEMBLY (STEERING LOCK ECU) (Click here)

C → REPLACE STEERING LOCK ACTUATOR ASSEMBLY (STEERING LOCK ECU) (Click here)

A

END

DTC B2276 ACCR Signal Circuit Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction is detected in the ACCR signal output by the main body ECU.

DTC Code	Detection Condition	Trouble Area
B2276	The ACCR output circuit inside the main body ECU or other related circuit is malfunctioning.	• Main body ECU • ECM • Harness or connector

WIRING DIAGRAM

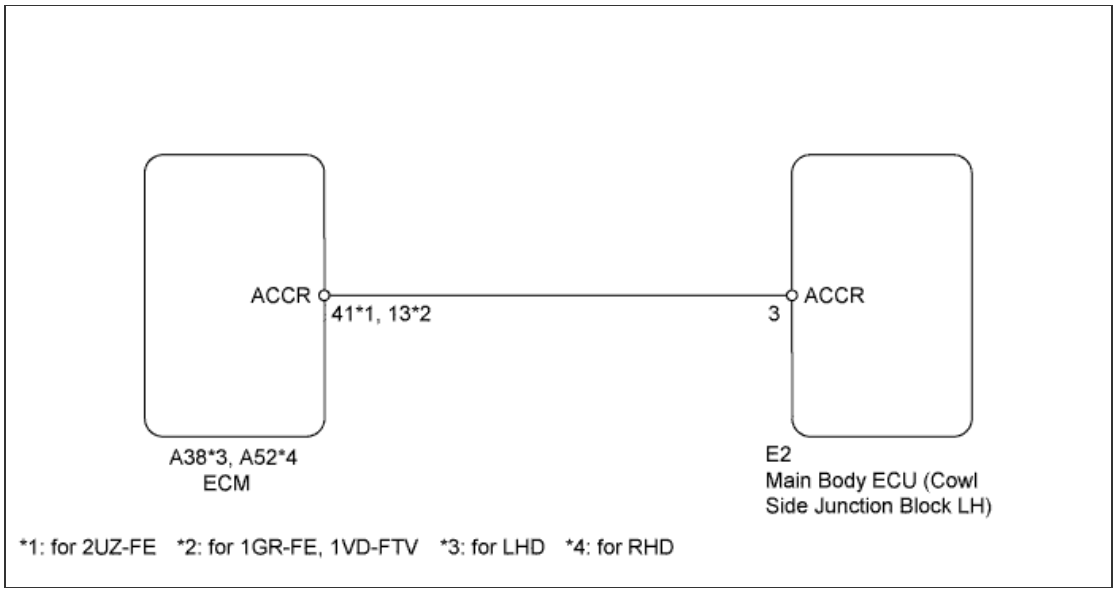

INSPECTION PROCEDURE

1.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Check whether DTC B2276 is output 50 seconds or more after the engine switch is turned on (IG).


Result

Result	Proceed to
DTC B2276 output	A
No DTC output	B

B → USE SIMULATION METHOD TO CHECK (SYSTEM IS OK) (Click here)

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ECM)

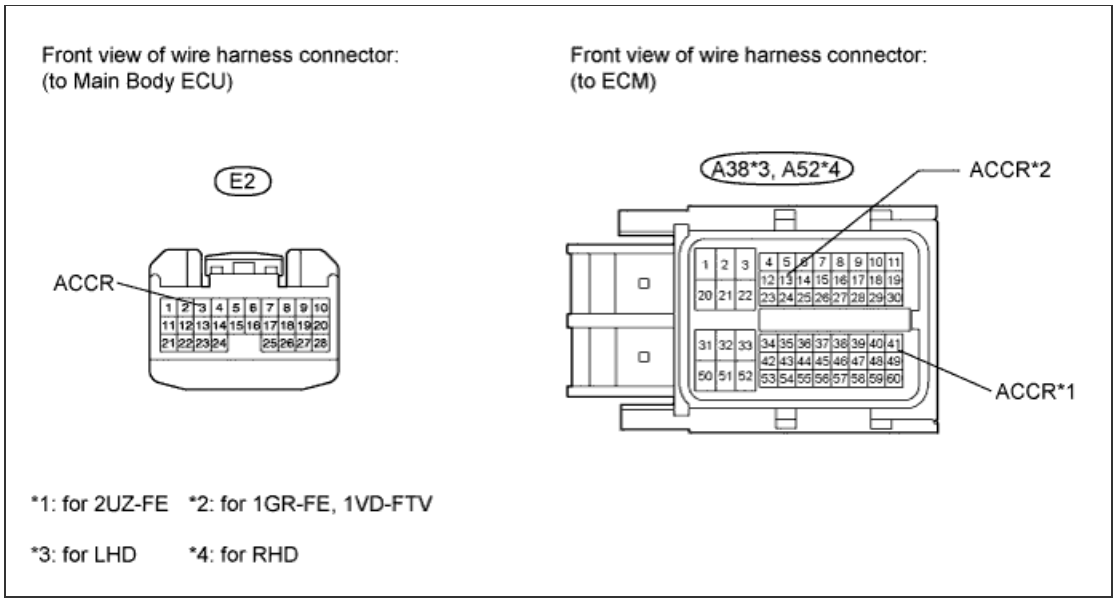

a. Disconnect the E2 main body ECU connector.

b. Disconnect the A38 (for LHD) or A52 (for RHD) ECM connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance (for 2UZ-FE):

Tester Connection	Condition	Specified Condition
E2-3 (ACCR) - A38-41 (ACCR)*1 E2-3 (ACCR) - A52-41 (ACCR)*2	Always	Below 1 Ω
E2-3 (ACCR) or A38-41 (ACCR) - Body ground*1 E2-3 (ACCR) or A52-41 (ACCR) - Body ground*2	Always	10 kΩ or higher

HINT:

*1: for LHD

*2: for RHD

Standard Resistance (for 1GR-FE, 1VD-FTV):

Tester Connection	Condition	Specified Condition
E2-3 (ACCR) - A38-13 (ACCR)*1 E2-3 (ACCR) - A52-13 (ACCR)*2	Always	Below 1 Ω
E2-3 (ACCR) or A38-13 (ACCR) - Body ground*1 E2-3 (ACCR) or A52-13 (ACCR) - Body ground*2	Always	10 kΩ or higher

HINT:

*1: for LHD

*2: for RHD

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

3.INSPECT MAIN BODY ECU

a. Measure the oltage according to the alue(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E2-3 (ACCR) - Body ground	Engine switch pressed and engine cranking	11 to 14 V

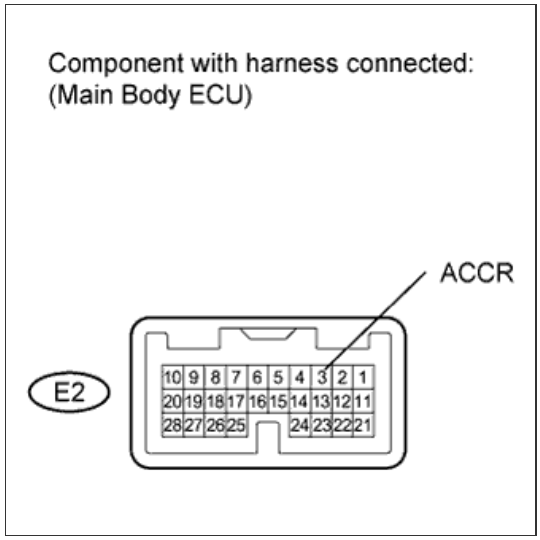

Result

Result	Proceed to
Outside specified range	A
Within specified range (for 1GR-FE)	B
Within specified range (for 2UZ-FE)	C
Within specified range (for 1VD-FTV)	D

B → REPLACE ECM (Click here)

C → REPLACE ECM (Click here)

D → REPLACE ECM (Click here)

A

REPLACE MAIN BODY ECU

DTC B2286 Runnable Signal Malfunction


for Preparation Click here

DESCRIPTION

The main body ECU and ECM are connected by a cable and the CAN communication line. If the cable information and CAN information are inconsistent, this DTC is stored.

DTC Code	Detection Condition	Trouble Area
B2286	The cable and CAN information between the main body ECU and ECM is inconsistent.	• Main body ECU • ECM • Harness or connector

WIRING DIAGRAM

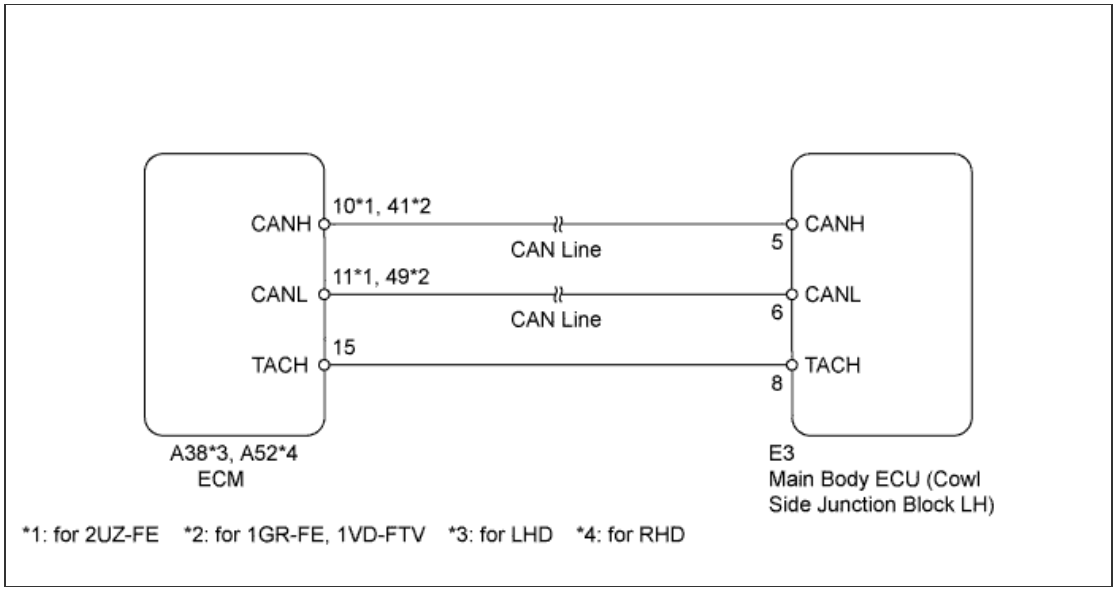

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (ENGINE CONDITION)

a. Use the Data List to check if the engine start is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Engine Condition	Engine condition/RUN or STOP	RUN: Engine running STOP: Engine stopped	-


Result

Result	Proceed to
Display on the intelligent tester does not change according to engine condition	A
Display on the intelligent tester changes according to engine condition	B

B → REPLACE MAIN BODY ECU

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ECM)

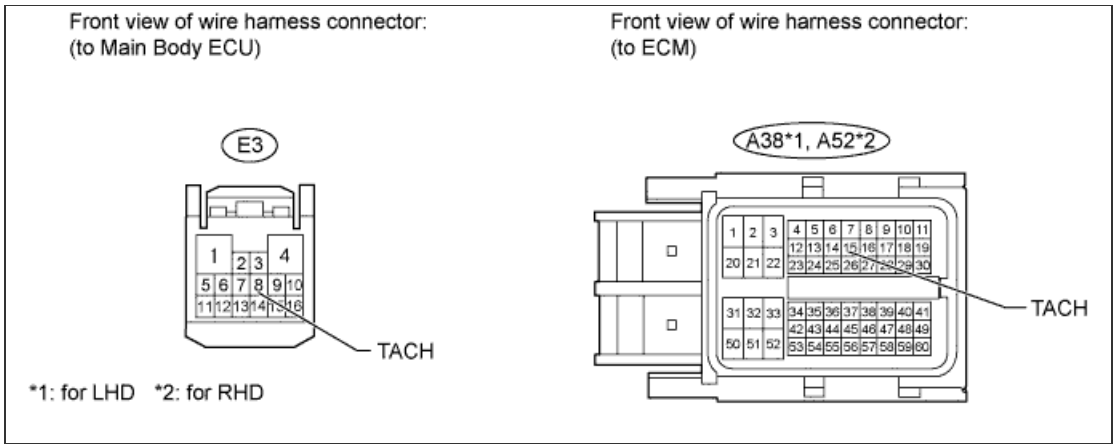

a. Disconnect the E3 main body ECU connector.

b. Disconnect the A38 (for LHD) or A52 (for RHD) ECM connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E3-8 (TACH) - A38-15 (TACH)*1 E3-8 (TACH) - A52-15 (TACH)*2	Always	Below 1 Ω
E3-8 (TACH) or A38-15 (TACH) - Body ground*1 E3-8 (TACH) or A52-15 (TACH) - Body ground*2	Always	10 kΩ or higher

HINT:

*1: for LHD

*2: for RHD

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK ↓

3.REPLACE MAIN BODY ECU

a. Temporarily replace the main body ECU with a new or normally functioning one.

b. Check whether DTC B2286 is output.

Result

Result	Proceed to
DTC not output	A
DTC output (for 1GR-FE)	B
DTC output (for 2UZ-FE)	C
DTC output (for 1VD-FTV)	D

B → REPLACE ECM (Click here)

C → REPLACE ECM (Click here)

D → REPLACE ECM (Click here)

A ↓

END

DTC B2276 ACCR Signal Circuit Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction is detected in the ACCR signal output by the main body ECU.

DTC Code	Detection Condition	Trouble Area
B2276	The ACCR output circuit inside the main body ECU or other related circuit is malfunctioning.	• Main body ECU • ECM • Harness or connector

WIRING DIAGRAM

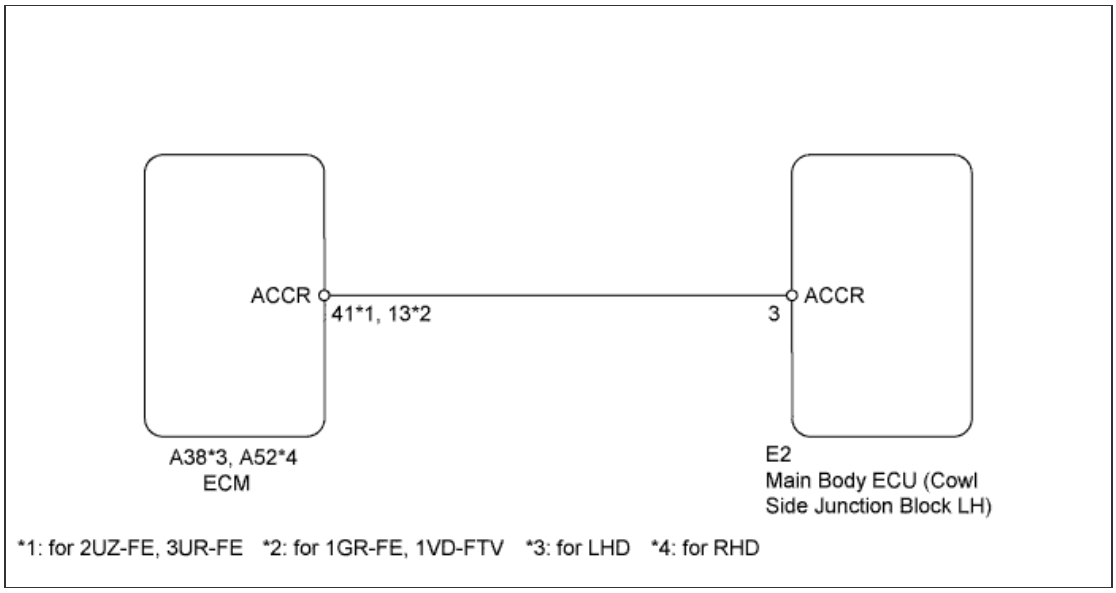

INSPECTION PROCEDURE

1.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Check whether DTC B2276 is output 50 seconds or more after the engine switch is turned on (IG).


Result

Result	Proceed to
DTC B2276 output	A
No DTC output	B

B → USE SIMULATION METHOD TO CHECK (SYSTEM IS OK) (Click here)

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ECM)

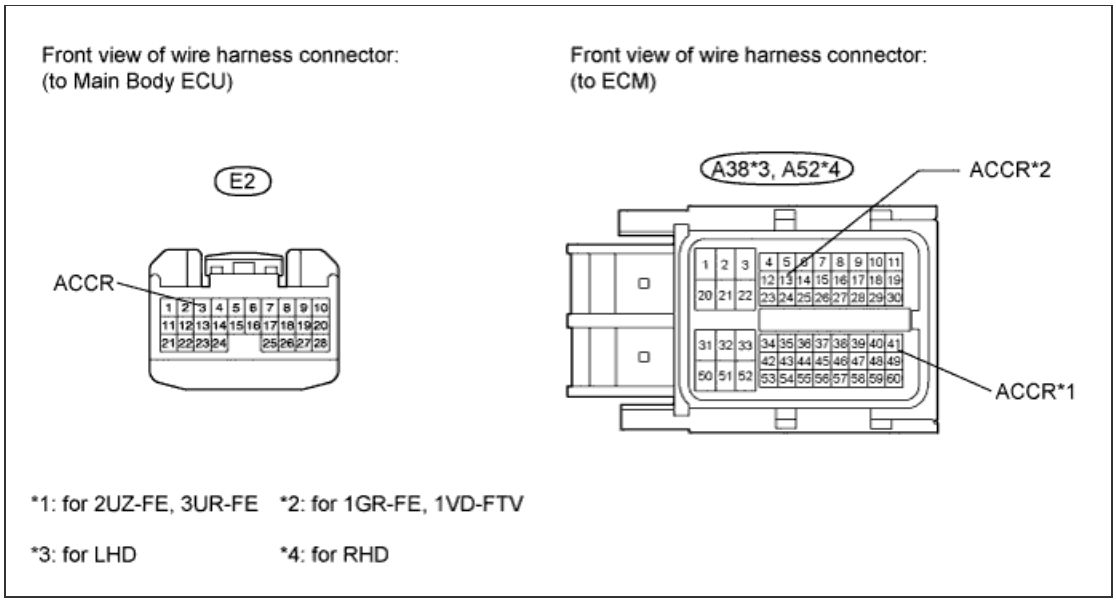

a. Disconnect the E2 main body ECU connector.

b. Disconnect the A38 (for LHD) or A52 (for RHD) ECM connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance (for 2UZ-FE, 3UR-FE):

Tester Connection	Condition	Specified Condition
E2-3 (ACCR) - A38-41 (ACCR)*1 E2-3 (ACCR) - A52-41 (ACCR)*2	Always	Below 1 Ω
E2-3 (ACCR) or A38-41 (ACCR) - Body ground*1 E2-3 (ACCR) or A52-41 (ACCR) - Body ground*2	Always	10 kΩ or higher

HINT:

*1: for LHD

*2: for RHD

Standard Resistance (for 1GR-FE, 1 FT):

Tester Connection	Condition	Specified Condition
E2-3 (ACCR) - A38-13 (ACCR)*1 E2-3 (ACCR) - A52-13 (ACCR)*2	Always	Below 1 Ω
E2-3 (ACCR) or A38-13 (ACCR) - Body ground*1 E2-3 (ACCR) or A52-13 (ACCR) - Body ground*2	Always	10 kΩ or higher

HINT:

*1: for LHD

*2: for RHD

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

3.INSPECT MAIN BODY ECU

a. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E2-3 (ACCR) - Body ground	Engine switch pressed and engine cranking	11 to 14 V

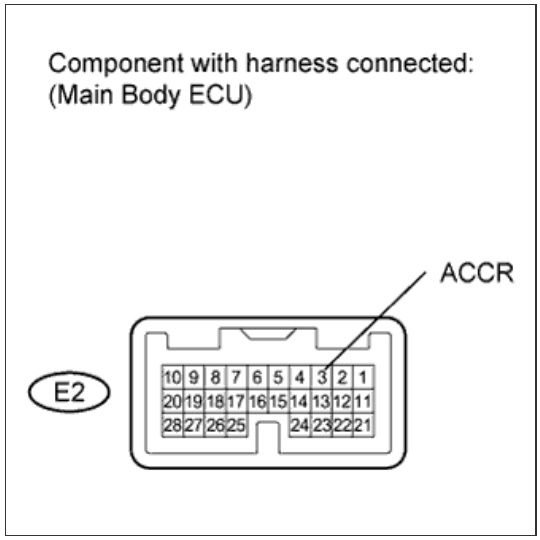

Result

Result	Proceed to
Outside specified range	A
Within specified range (for 1GR-FE)	B
Within specified range (for 2UZ-FE)	C
Within specified range (for 3UR-FE)	D
Within specified range (for 1VD-FTV)	E

B → REPLACE ECM (Click here)

C → REPLACE ECM (Click here)

D → REPLACE ECM (Click here)

E → REPLACE ECM (Click here)

A

REPLACE MAIN BODY ECU

DTC B2286 Runnable Signal Malfunction


for Preparation Click here

DESCRIPTION

The main body ECU and ECM are connected by a cable and the CAN communication line. If the cable information and CAN information are inconsistent, this DTC is stored.

DTC Code	Detection Condition	Trouble Area
B2286	The cable and CAN information between the main body ECU and ECM is inconsistent.	• Main body ECU • ECM • Harness or connector

WIRING DIAGRAM

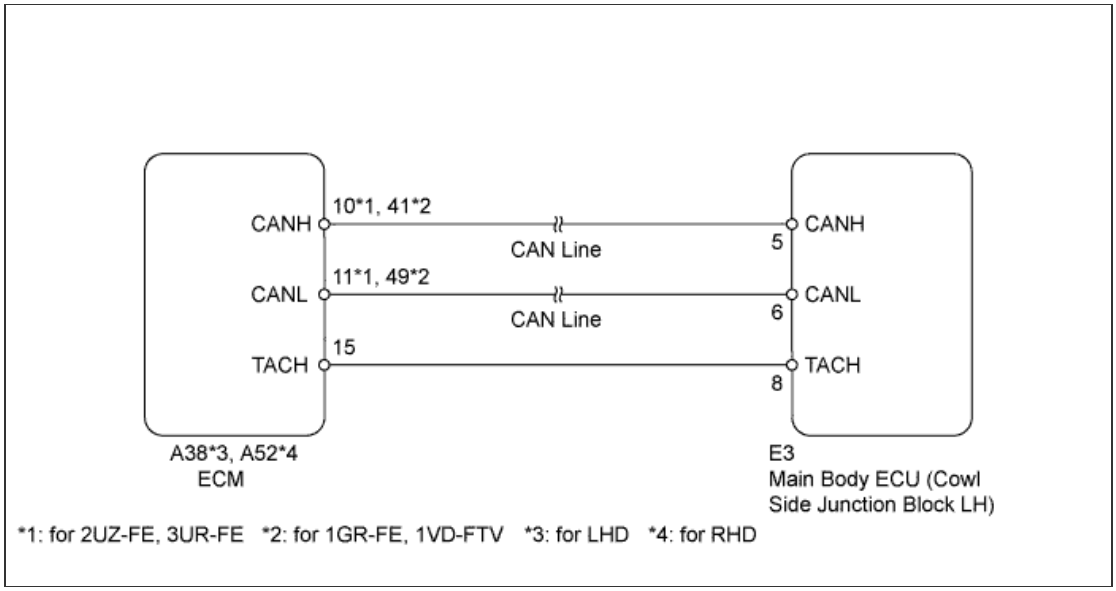

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (ENGINE CONDITION)

a. Use the Data List to check if the engine start is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Engine Condition	Engine condition/RUN or STOP	RUN: Engine running STOP: Engine stopped	-


Result

Result	Proceed to
Display on the intelligent tester does not change according to engine condition	A
Display on the intelligent tester changes according to engine condition	B

B → REPLACE MAIN BODY ECU

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ECM)

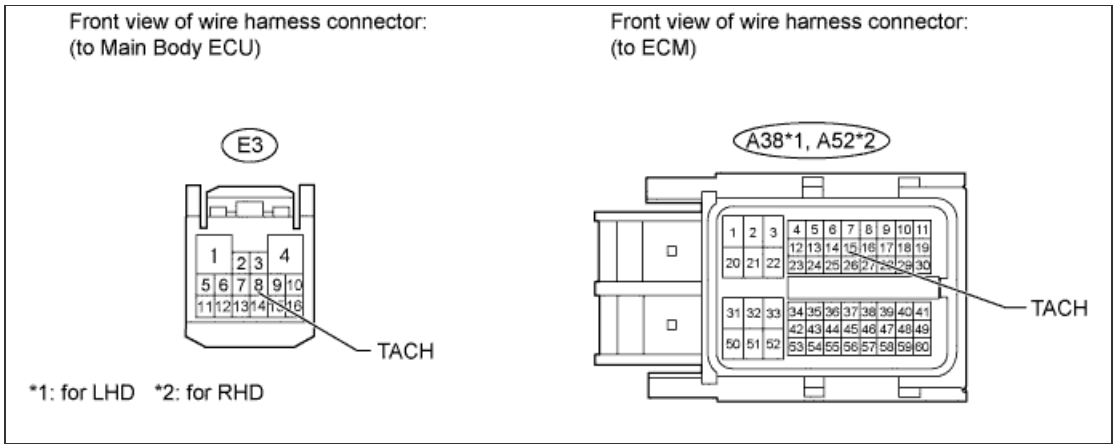

a. Disconnect the E3 main body ECU connector.

b. Disconnect the A38 (for LHD) or A52 (for RHD) ECM connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E3-8 (TACH) - A38-15 (TACH)*1 E3-8 (TACH) - A52-15 (TACH)*2	Always	Below 1 Ω
E3-8 (TACH) or A38-15 (TACH) - Body ground*1 E3-8 (TACH) or A52-15 (TACH) - Body ground*2	Always	10 kΩ or higher

HINT:

*1: for LHD

*2: for RHD

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.REPLACE MAIN BODY ECU

a. Temporarily replace the main body ECU with a new or normally functioning one.

b. Check whether DTC B2286 is output.

Result

Result	Proceed to
DTC not output	A
DTC output (for 1GR-FE)	B
DTC output (for 2UZ-FE)	C
DTC output (for 3UR-FE)	D
DTC output (for 1VD-FTV)	E

B → REPLACE ECM (Click here)

C → REPLACE ECM (Click here)

D → REPLACE ECM (Click here)

E → REPLACE ECM (Click here)

A

END

DTC B2277 Detecting Vehicle Submersion

for Preparation Click here

DESCRIPTION

This DTC is stored when the submersion circuit monitor inside the main body ECU detects that the vehicle has been submerged in water.

DTC Code	Detection Condition	Trouble Area
B2277	The submersion circuit monitor inside the main body ECU detects that the vehicle is submerged in water.	Main body ECU

INSPECTION PROCEDURE

HINT:

Before commencing troubleshooting, check if the main body ECU is wet. If it is, replace the main body ECU.

1.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Check whether DTC B2277 is output 30 seconds or more after the engine switch is turned on (IG).

OK:
No DTC is output.

NG → **REPLACE MAIN BODY ECU**

OK ↓

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2289 Key Collation Waiting Time Over


for Preparation Click here

DESCRIPTION

This DTC is stored when there is a LIN communication problem between the main body ECU and certification ECU (smart key ECU assembly) or when there is a problem in the engine immobiliser system.

DTC Code	Detection Condition	Trouble Area
B2289	When either of the following conditions is met: • Communication or the communication line is abnormal among the main body ECU, certification ECU (smart key ECU assembly), steering lock ECU and ID code box (immobiliser code ECU). • The immobiliser system malfunctions.	• Main body ECU • Engine switch • Certification ECU (smart key ECU assembly) • Key • Engine immobiliser system • Harness or connector

WIRING DIAGRAM

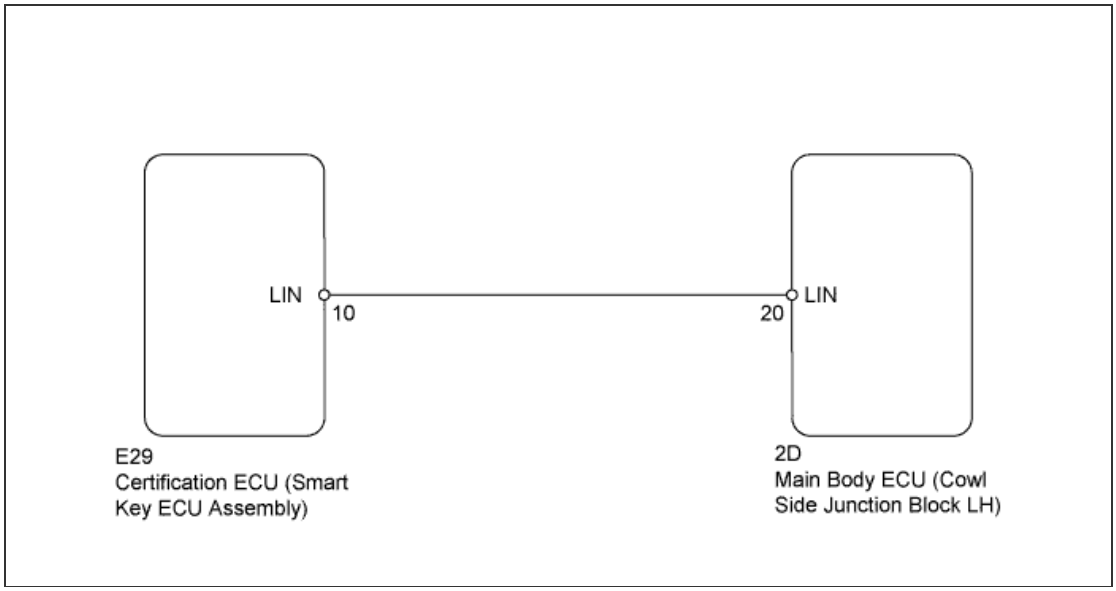

INSPECTION PROCEDURE

1.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Check whether DTC B2289 is output.


Result

Result	Proceed to
DTC B2289 output	A
No DTC output	B

B → USE SIMULATION METHOD TO CHECK (Click here)

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - CERTIFICATION ECU (SMART KEY ECU ASSEMBLY))

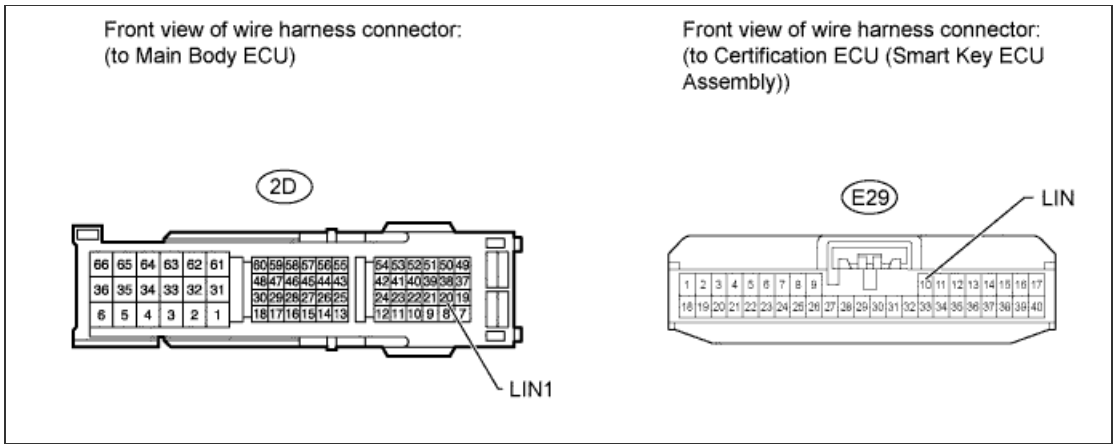

a. Disconnect the 2D main body ECU connector.

b. Disconnect the E29 certification ECU (smart key ECU assembly) connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
2D-20 (LIN1) - E29-10 (LIN)	Always	Below 1 Ω
2D-20 (LIN) or E29-10 (LIN) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.REPLACE MAIN BODY ECU

a. Temporarily replace the main body ECU with a new or normally functioning one.

b. Check whether DTC B2289 is output.

OK:
No DTC is output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END

DTC B2277 Detecting Vehicle Submersion

for Preparation Click here

DESCRIPTION

This DTC is stored when the submersion circuit monitor inside the main body ECU detects that the vehicle has been submerged in water.

DTC Code	Detection Condition	Trouble Area
B2277	The submersion circuit monitor inside the main body ECU detects that the vehicle is submerged in water.	Main body ECU

INSPECTION PROCEDURE

HINT:

Before commencing troubleshooting, check if the main body ECU is wet. If it is, replace the main body ECU.

1.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Check whether DTC B2277 is output 30 seconds or more after the engine switch is turned on (IG).

OK:
No DTC is output.

NG → **REPLACE MAIN BODY ECU**

OK ↓

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2289 Key Collation Waiting Time Over


for Preparation Click here

DESCRIPTION

This DTC is stored when there is a LIN communication problem between the main body ECU and certification ECU (smart key ECU assembly) or when there is a problem in the engine immobiliser system.

DTC Code	Detection Condition	Trouble Area
B2289	When either of the following conditions is met: • Communication or the communication line is abnormal among the main body ECU, certification ECU (smart key ECU assembly), steering lock ECU and ID code box (immobiliser code ECU). • The immobiliser system malfunctions.	• Main body ECU • Engine switch • Certification ECU (smart key ECU assembly) • Key • Engine immobiliser system • Harness or connector

WIRING DIAGRAM

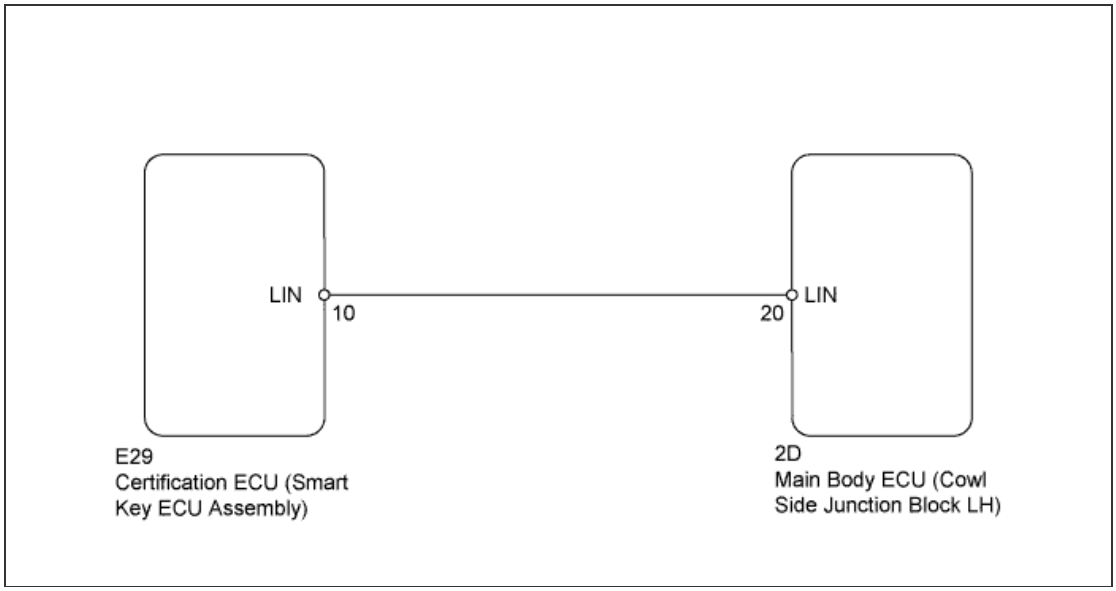

INSPECTION PROCEDURE

1.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Check whether DTC B2289 is output.


Result

Result	Proceed to
DTC B2289 output	A
No DTC output	B

B → USE SIMULATION METHOD TO CHECK (Click here)

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - CERTIFICATION ECU (SMART KEY ECU ASSEMBLY))

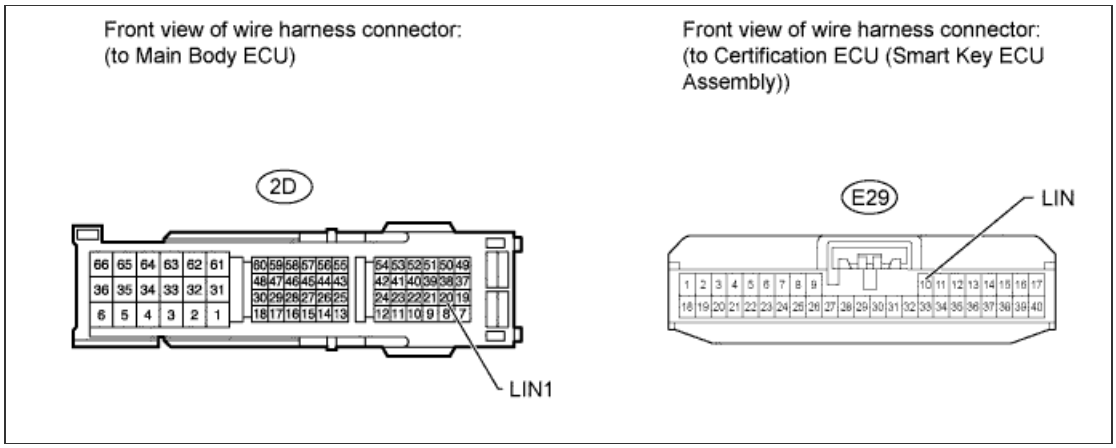

a. Disconnect the 2D main body ECU connector.

b. Disconnect the E29 certification ECU (smart key ECU assembly) connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
2D-20 (LIN1) - E29-10 (LIN)	Always	Below 1 Ω
2D-20 (LIN) or E29-10 (LIN) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.REPLACE MAIN BODY ECU

a. Temporarily replace the main body ECU with a new or normally functioning one.

b. Check whether DTC B2289 is output.

OK:
No DTC is output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END

DTC B2278 Engine Switch Circuit Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when: 1) a malfunction is detected between the main body ECU and the engine switch; or 2) either of the switches inside the engine switch is malfunctioning.

DTC Code	Detection Condition	Trouble Area
B2278	Communication is abnormal between the main body ECU and engine switch or the engine switch is defective.	• Main body ECU • Engine switch • Harness or connector

WIRING DIAGRAM

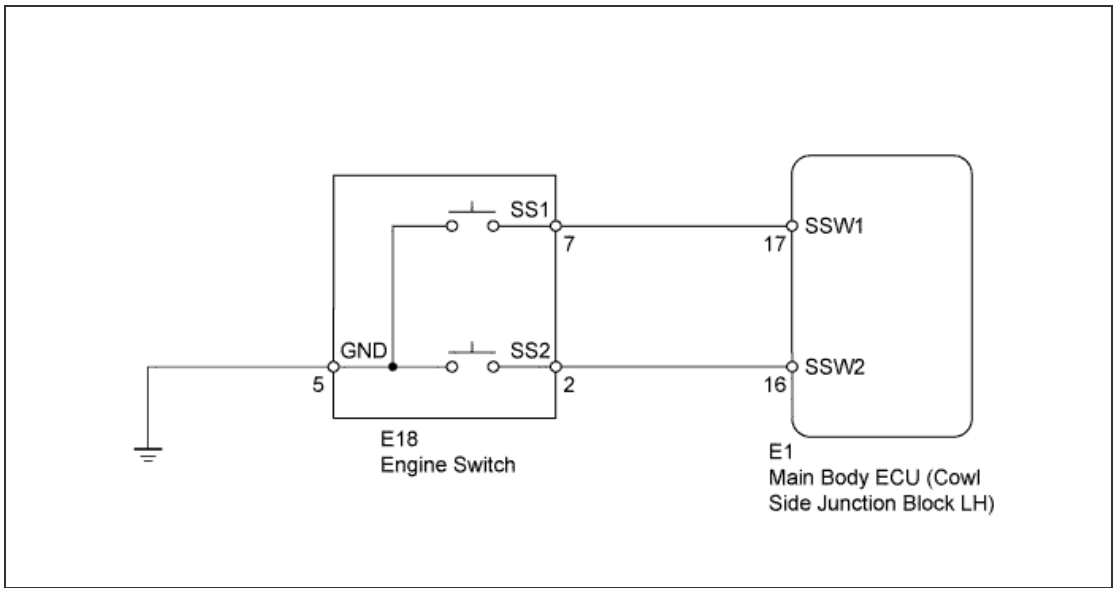

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (START SWITCH 1, 2)

a. Use the Data List to check if the engine switch is functioning properly.

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Start Switch 1	Start Switch 1/ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-
Start Switch 2	Start Switch 2/ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-

OK:

When the engine switch is turned on (IG), ON is displayed on the intelligent tester.

NG → Go to step 3

OK

2.CHECK WHETHER DTC OUTPUT RECURS

a. Clear the DTCs (Click here).

b. Turn the engine switch on (IG), and check whether DTC B2278 is output.

Result

Result	Proceed to
No DTC output	A

DTC B2278 output	B

B → REPLACE MAIN BODY ECU

A

USE SIMULATION METHOD TO CHECK (Click here)

3.INSPECT ENGINE SWITCH


a. Disconnect the E18 engine switch connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
7 (SS1) - 5 (GND)	Pushed	Below 1 Ω
2 (SS2) - 5 (GND)	Pushed	Below 1 Ω
7 (SS1) - 5 (GND)	Not pushed	10 kΩ or higher
2 (SS2) - 5 (GND)	Not pushed	10 kΩ or higher

Component without harness connected:
(Engine Switch)

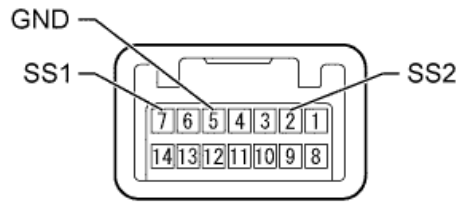

Result

Result	Proceed to
Within specified range	A
Outside specified range (for 1GR-FE)	B
Outside specified range (for 2UZ-FE)	C
Outside specified range (for 1VD-FTV)	D

B → REPLACE ENGINE SWITCH (Click here)


C → REPLACE ENGINE SWITCH (Click here)

D → REPLACE ENGINE SWITCH (Click here)


A

4.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ENGINE SWITCH AND BODY GROUND)

Front view of wire harness connector:
(to Main Body ECU)

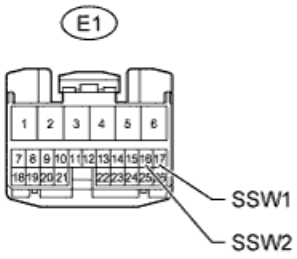

Front view of wire harness connector:
(to Engine Switch)

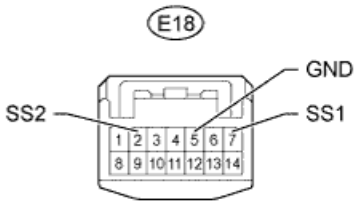

a. Disconnect the E1 main body ECU connector.

b. Disconnect the E18 engine switch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-17 (SSW1) - E18-7 (SS1)	Always	Below 1 Ω

E1-16 (SSW2) - E18-2 (SS2)	Always	Below 1 Ω
E18-5 (GND) - Body ground	Always	Below 1 Ω
E1-17 (SSW1) or E18-7 (SS1) - Body ground	Always	10 kΩ or higher
E1-16 (SSW2) or E18-2 (SS2) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK → REPLACE MAIN BODY ECU

for Preparation Click here


DESCRIPTION

When the certification ECU (smart key ECU assembly) has detected the key inside the cabin before the brake pedal (for A/T) or clutch pedal (for M/T) is depressed, the power source mode can be changed in the following order sequentially by pressing the engine switch: off → on (ACC) → on (IG) → off. When one of the DTCs shown in the illustration below is detected, troubleshoot the DTC(s) by following the troubleshooting procedure relevant to the DTC(s). If the power source mode still cannot be changed normally, despite troubleshooting, one of the following may have occurred:

- The LIN communication line is malfunctioning.
- The certification ECU (smart key ECU assembly) has determined that no key is inside the cabin.
- The engine switch is malfunctioning.
- The main body ECU is malfunctioning.

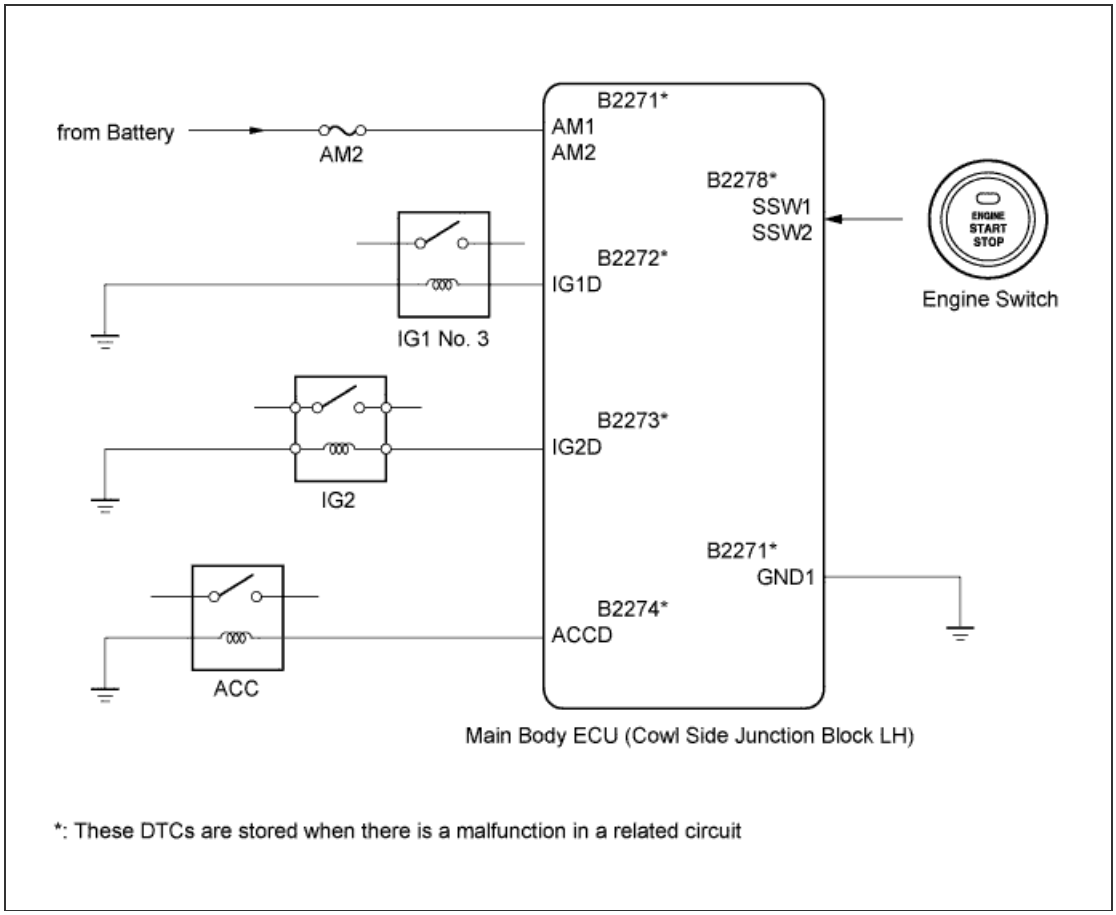

WIRING DIAGRAM

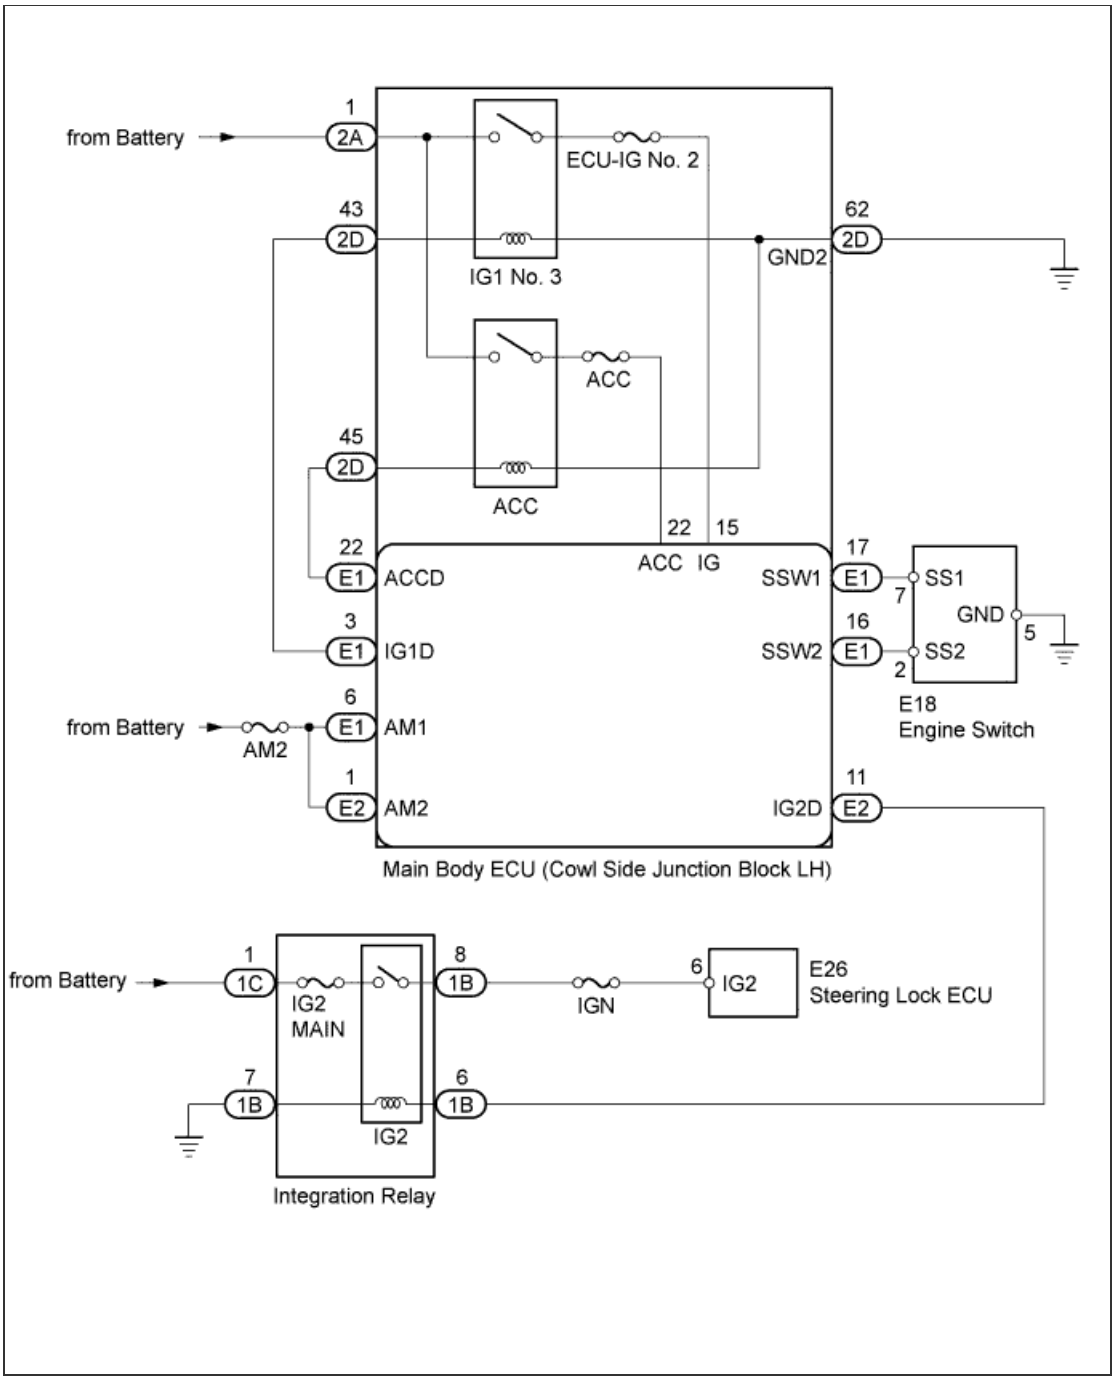

INSPECTION PROCEDURE

HINT:

If the vehicle is in key cancel mode, change to normal mode (Click here).

1.CHECK DTC OUTPUT

a. Check whether a DTC is output (Click here).

Result

Result	Proceed to
No DTC output	A
DTC output	B

B → GO TO ENTRY AND START SYSTEM (FOR START FUNCTION) (DIAGNOSTIC TROUBLE CODE CHART) (Click here)


A

2.CHECK ENTRY AND START SYSTEM

a. Remove the battery of the electrical key transmitter (Click here).

b. With the brake pedal (for A/T) or clutch pedal (for M/T) depressed, touch the TOYOTA mark of the key to the engine switch.

c. When operating the engine switch, check whether the engine switch changes to on (ACC) or on (IG).

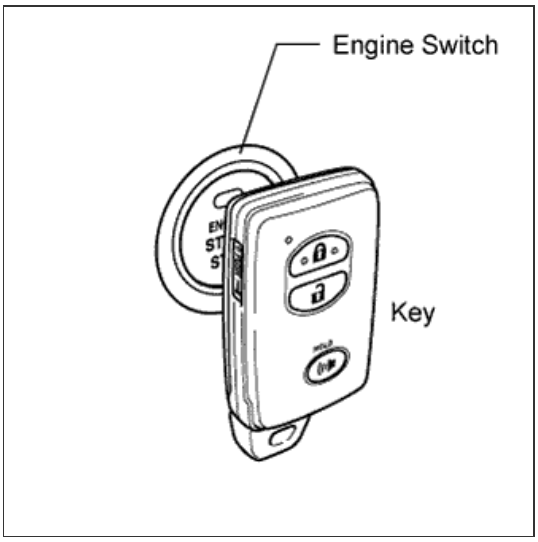

HINT:

- **When the electrical key transmitter cannot be verified even when it is in the operational area, the engine start check can be performed by removing the transmitter battery from the electrical key transmitter and holding the transmitter against the engine switch.**
- **When performing the check, if the engine switch turns on (ACC) or on (IG), there is a problem with key certification inside the cabin.**

Result

Result	Proceed to
Does not change to on (ACC)	A
Does not change to on (IG)	B
Does not change to on (ACC) and on (IG)	C
Changes to on (ACC) and on (IG)	D

B → Go to step 5

C → Go to step 11

D → GO TO ENTRY AND START SYSTEM (FOR ENTRY FUNCTION) (ROOM OSCILLATOR DOES NOT RECOGNIZE KEY) (Click here)

A

3.INSPECT FUSE (AM2)

a. Remove the AM2 fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
AM2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

4.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

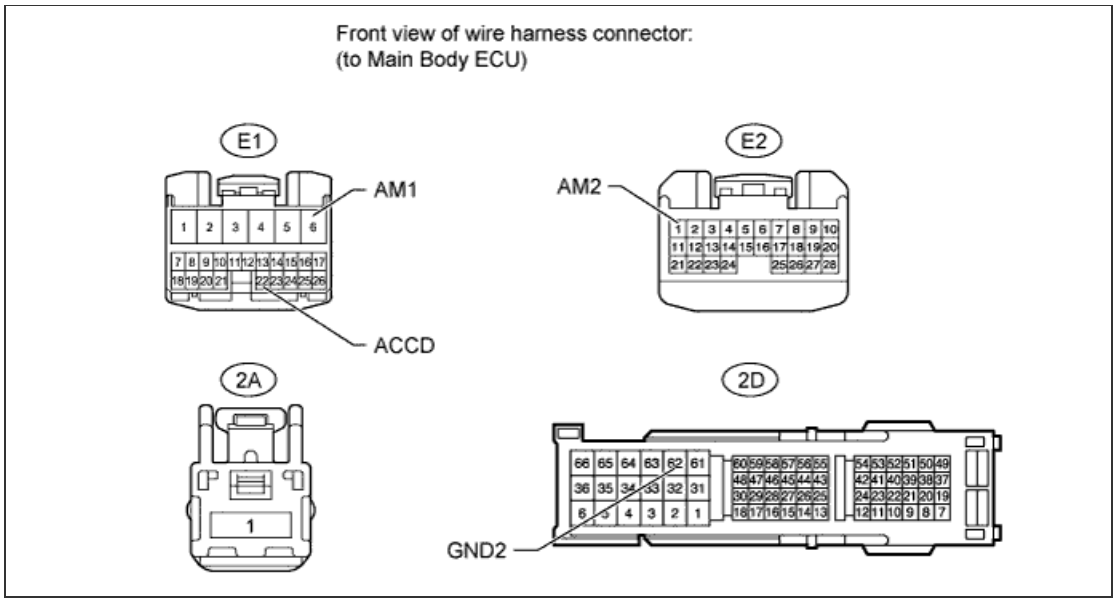

a. Disconnect the E1, E2, 2A and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E1-6 (AM1) - Body ground	Always	11 to 14 V
E2-1 (AM2) - Body ground	Always	11 to 14 V
2A-1 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-22 (ACCD) - 2D-45	Always	Below 1 Ω
2D-62 (GND2) - Body ground	Always	Below 1 Ω
E1-22 (ACCD) or 2D-45 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

5.INSPECT FUSE (AM2)

a. Remove the AM2 fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
AM2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

6.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

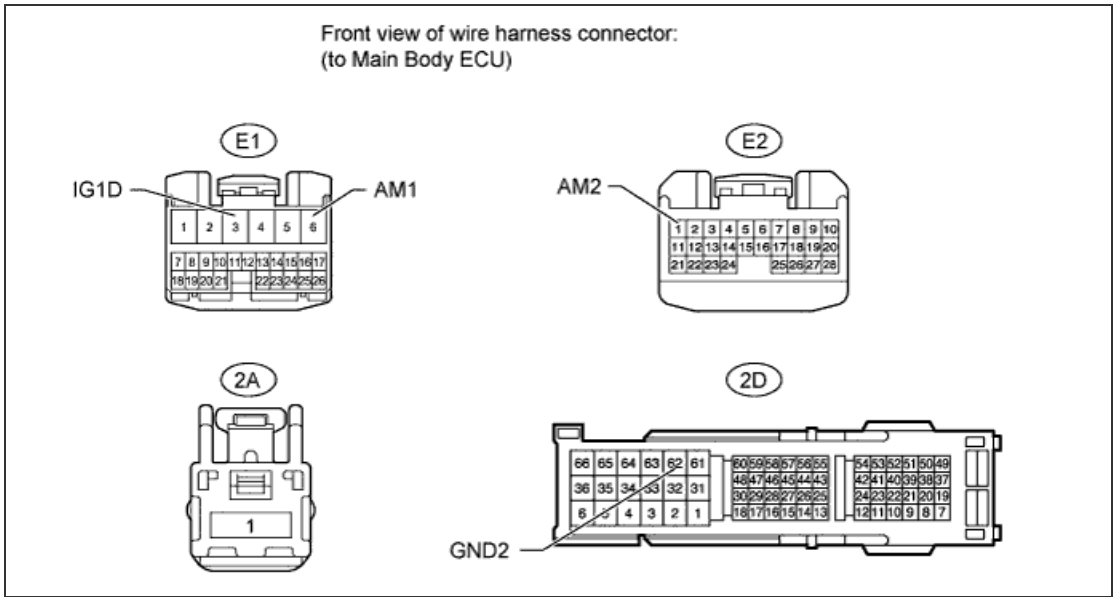

a. Disconnect the E1, E2, 2A and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E1-6 (AM1) - Body ground	Always	11 to 14 V
E2-1 (AM2) - Body ground	Always	11 to 14 V
2A-1 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-3 (IG1D) - 2D-43	Always	Below 1 Ω
2D-62 (GND2) - Body ground	Always	Below 1 Ω
E1-3 (IG1D) or 2D-43 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


7.INSPECT INTEGRATION RELAY (IG2 RELAY)

a. Remove the integration relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
1B-8 - 1C-1	Battery voltage applied to terminals 1B-6 and 1B-7	Below 1 Ω
1B-8 - 1C-1	Battery voltage not applied to terminals 1B-6 and 1B-7	10 kΩ or higher

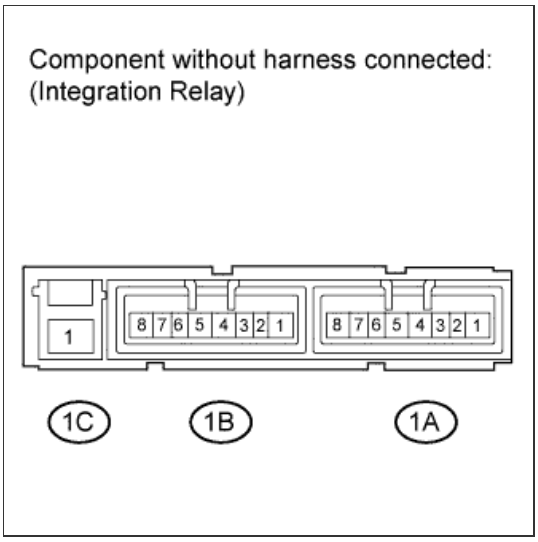

NG → REPLACE INTEGRATION NO.1 RELAY (IG2 RELAY)

OK

8.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - INTEGRATION RELAY (IG2 RELAY))

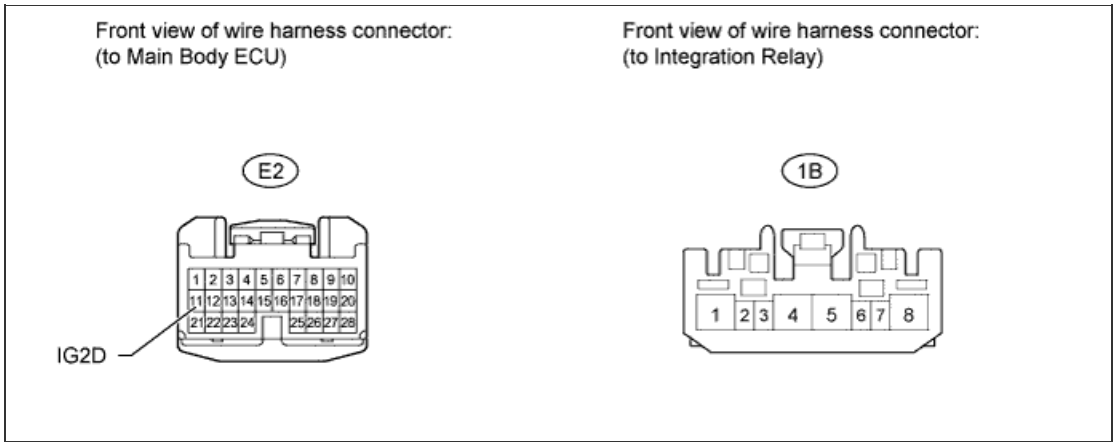

a. Disconnect the E2 main body ECU connector.

b. Disconnect the 1B integration relay connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E2-11 (IG2D) - 1B-6	Always	Below 1 Ω
1B-7 - Body ground	Always	Below 1 Ω
E2-11 (IG2D) or 1B-6 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.INSPECT FUSE (IGN, IG2 MAIN)

a. Remove the IGN fuse and IG2 MAIN fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
IGN fuse	Always	Below 1 Ω
IG2 MAIN fuse	Always	Below 1 Ω

NG → REP CE FUSE

OK

10.CHECK HARNESS AND CONNECTOR (STEERING LOCK ECU - INTEGRATION RELAY (IG2 RELAY))

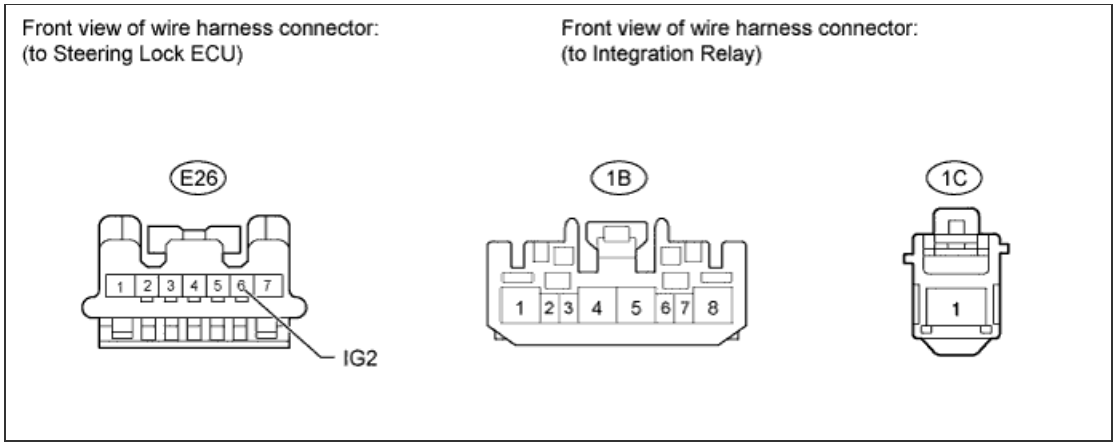

a. Disconnect the E26 steering lock ECU connector.

b. Disconnect the 1B and 1C integration relay connectors.

c. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
1C-1 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
E26-6 (IG2) - 1B-8	Always	Below 1 Ω
E26-6 (IG2) or 1B-8 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

→ REPLACE MAIN BODY ECU

11.INSPECT FUSE (AM2)

a. Remove the AM2 fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
AM2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

12.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

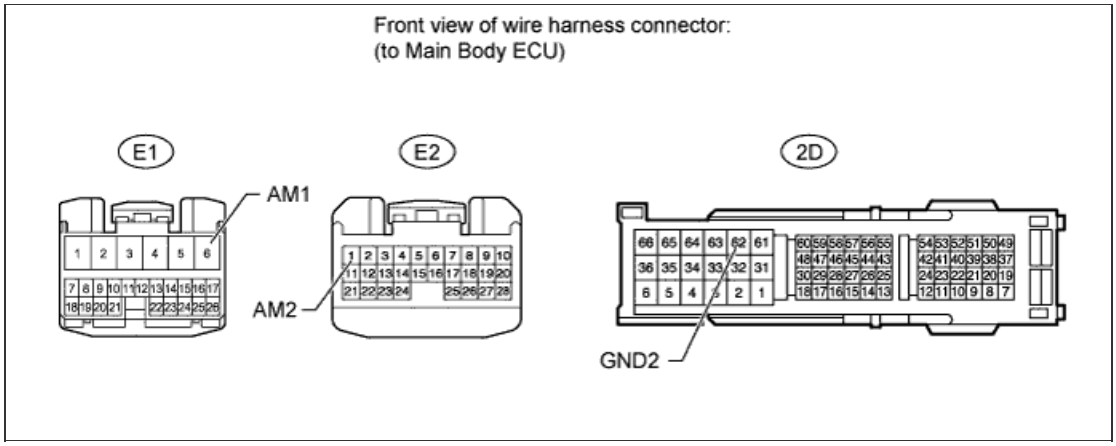

a. Disconnect the E1, E2 and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E1-6 (AM1) - Body ground	Always	11 to 14 V
E2-1 (AM2) - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
2D-62 (GND2) - Body ground	Always	Below 1 Ω


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

13.INSPECT ENGINE SWITCH

a. Disconnect the E18 engine switch connector.

b. Measure the resistance according to the value(s) in the table below.

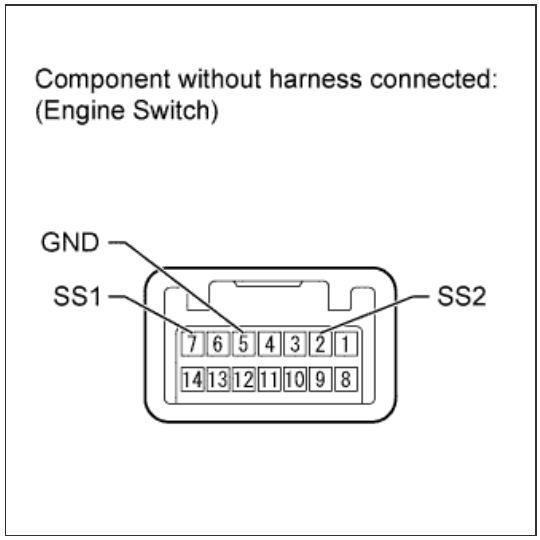

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
7 (SS1) - 5 (GND)	Pushed	Below 1 Ω
2 (SS2) - 5 (GND)	Pushed	Below 1 Ω
7 (SS1) - 5 (GND)	Not pushed	10 kΩ or higher
2 (SS2) - 5 (GND)	Not pushed	10 kΩ or higher

Result

Result	Proceed to
Within specified range	A
Outside specified range (for 1GR-FE)	B
Outside specified range (for 2UZ-FE)	C
Outside specified range (for 1VD-FTV)	D


B → REPLACE ENGINE SWITCH (Click here)

C → REPLACE ENGINE SWITCH (Click here)

D → REPLACE ENGINE SWITCH (Click here)

A

1 .CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ENGINE SWITCH AND BODY GROUND)

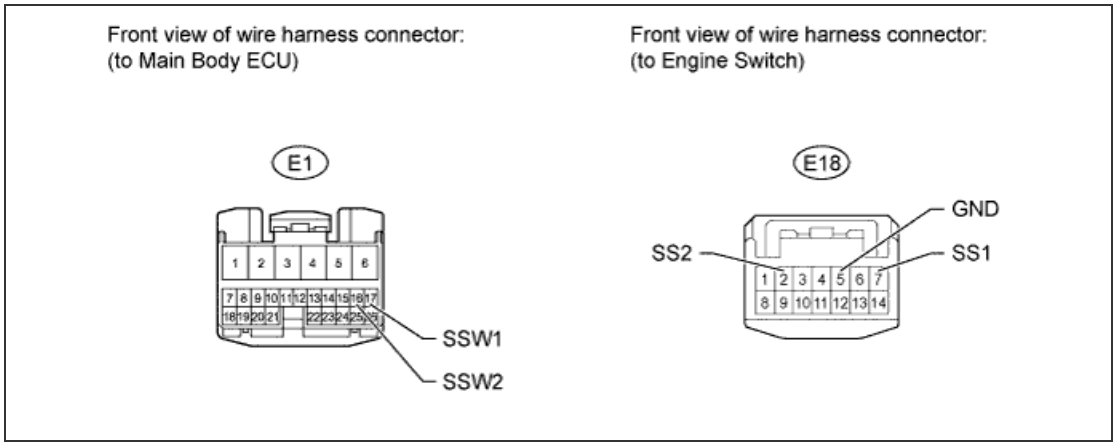

a. Disconnect the E1 main body ECU connector.

b. Disconnect the E18 engine switch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-17 (SSW1) - E18-7 (SS1)	Always	Below 1 Ω
E1-16 (SSW2) - E18-2 (SS2)	Always	Below 1 Ω
E18-5 (GND) - Body ground	Always	Below 1 Ω
E1-17 (SSW1) or E18-7 (SS1) - Body ground	Always	10 kΩ or higher
E1-16 (SSW2) or E18-2 (SS2) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE MAIN BODY ECU

for Preparation Click here


DESCRIPTION

When the certification ECU (smart key ECU assembly) has detected the key inside the cabin before the brake pedal (for A/T) or clutch pedal (for M/T) is depressed, the power source mode can be changed in the following order sequentially by pressing the engine switch: off → on (ACC) → on (IG) → off. When one of the DTCs shown in the illustration below is detected, troubleshoot the DTC(s) by following the troubleshooting procedure relevant to the DTC(s). If the power source mode still cannot be changed normally, despite troubleshooting, one of the following may have occurred:

- The LIN communication line is malfunctioning.
- The certification ECU (smart key ECU assembly) has determined that no key is inside the cabin.
- The engine switch is malfunctioning.
- The main body ECU is malfunctioning.

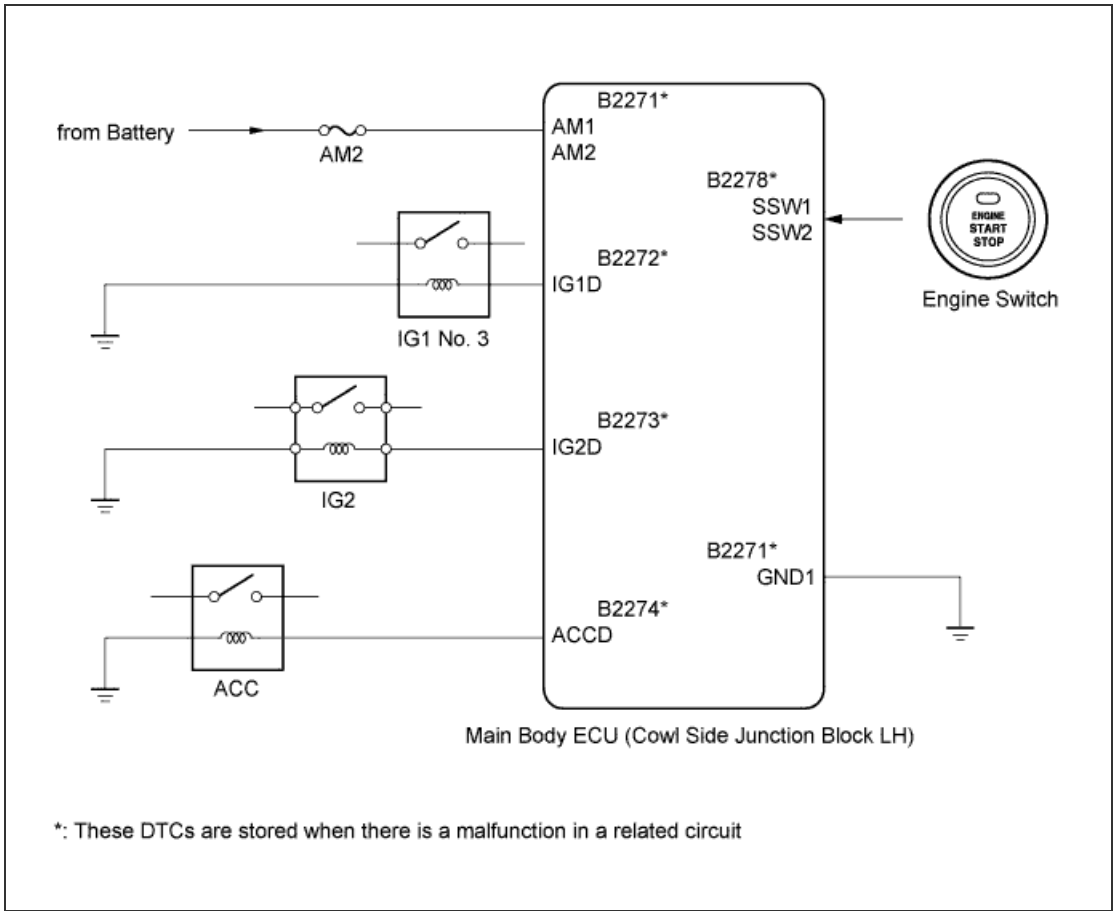

WIRING DIAGRAM

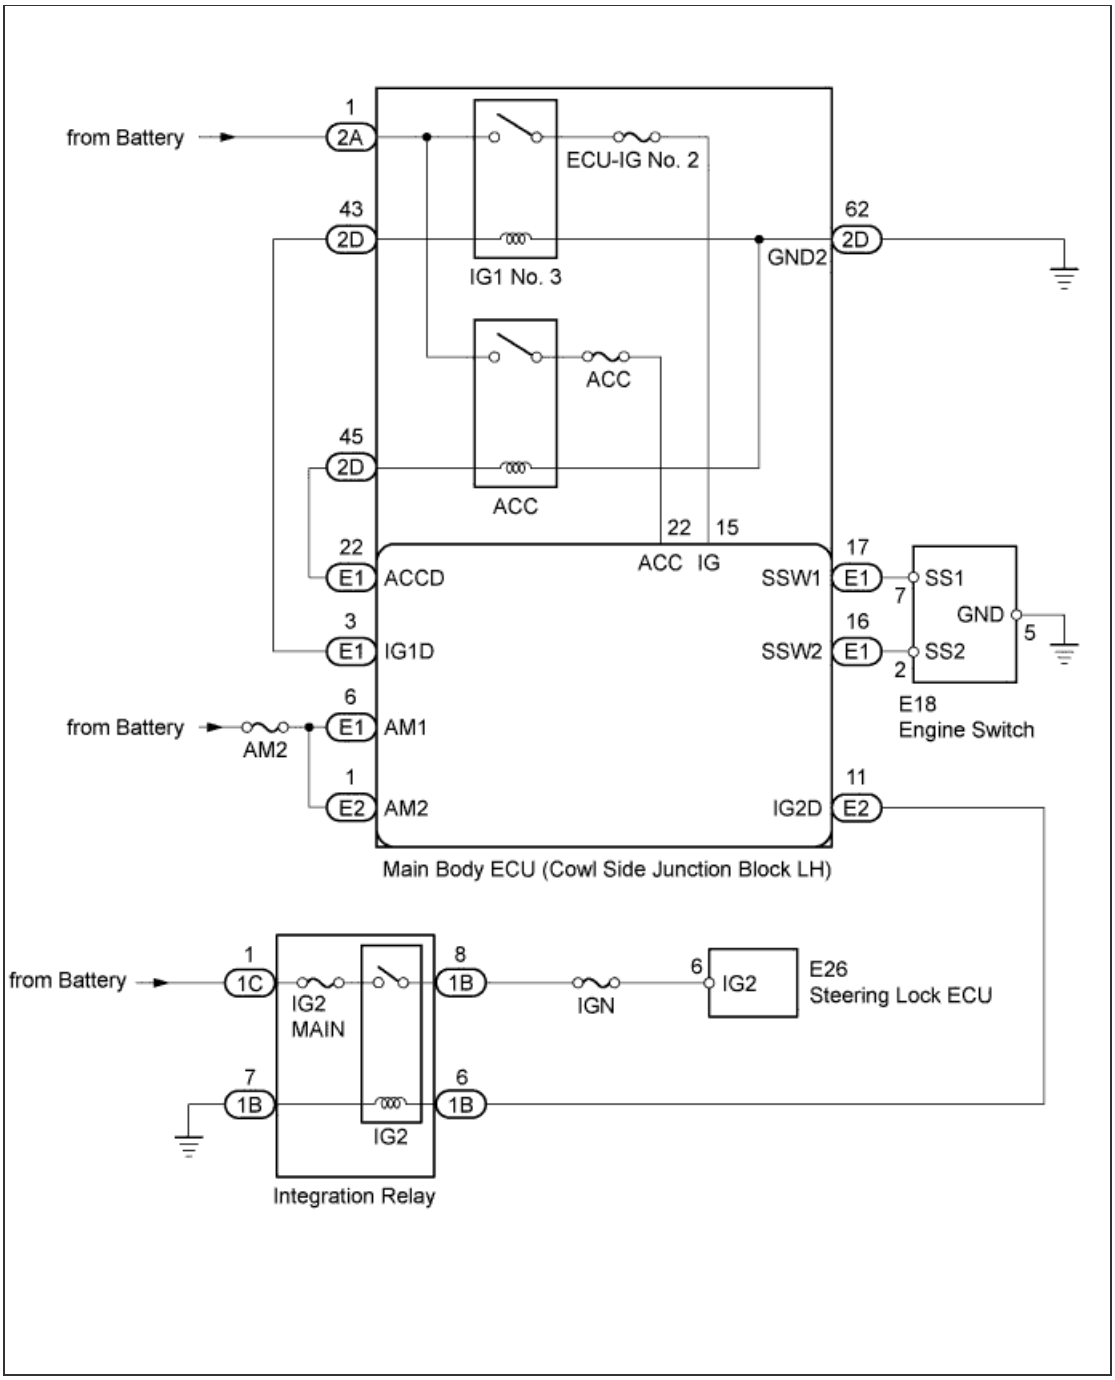

INSPECTION PROCEDURE

HINT:

If the vehicle is in key cancel mode, change to normal mode (Click here).

1.CHECK DTC OUTPUT

a. Check whether a DTC is output (Click here).

Result

Result	Proceed to
No DTC output	A
DTC output	B

B → GO TO ENTRY AND START SYSTEM (FOR START FUNCTION) (DIAGNOSTIC TROUBLE CODE CHART) (Click here)


A

2.CHECK ENTRY AND START SYSTEM

a. Remove the battery of the electrical key transmitter (Click here).

b. With the brake pedal (for A/T) or clutch pedal (for M/T) depressed, touch the TOYOTA mark of the key to the engine switch.

c. When operating the engine switch, check whether the engine switch changes to on (ACC) or on (IG).

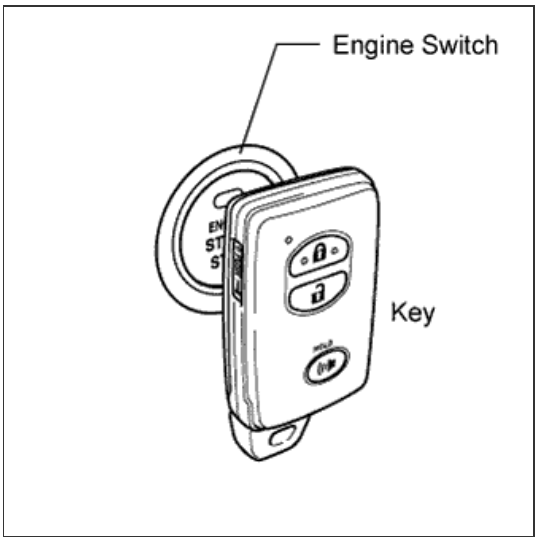

HINT:

- **When the electrical key transmitter cannot be verified even when it is in the operational area, the engine start check can be performed by removing the transmitter battery from the electrical key transmitter and holding the transmitter against the engine switch.**
- **When performing the check, if the engine switch turns on (ACC) or on (IG), there is a problem with key certification inside the cabin.**

Result

Result	Proceed to
Does not change to on (ACC)	A
Does not change to on (IG)	B
Does not change to on (ACC) and on (IG)	C
Changes to on (ACC) and on (IG)	D

B → Go to step 5

C → Go to step 11

D → GO TO ENTRY AND START SYSTEM (FOR ENTRY FUNCTION) (ROOM OSCILLATOR DOES NOT RECOGNIZE KEY) (Click here)

A

3.INSPECT FUSE (AM2)

a. Remove the AM2 fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
AM2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

4.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

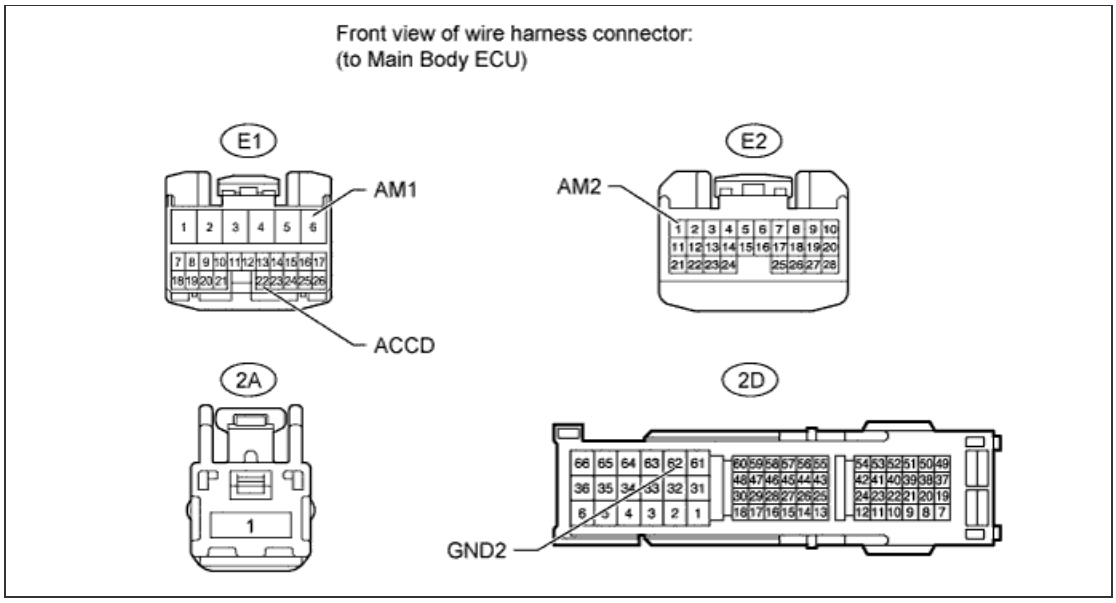

a. Disconnect the E1, E2, 2A and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E1-6 (AM1) - Body ground	Always	11 to 14 V
E2-1 (AM2) - Body ground	Always	11 to 14 V
2A-1 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-22 (ACCD) - 2D-45	Always	Below 1 Ω
2D-62 (GND2) - Body ground	Always	Below 1 Ω
E1-22 (ACCD) or 2D-45 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

5.INSPECT FUSE (AM2)

a. Remove the AM2 fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
AM2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

6.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

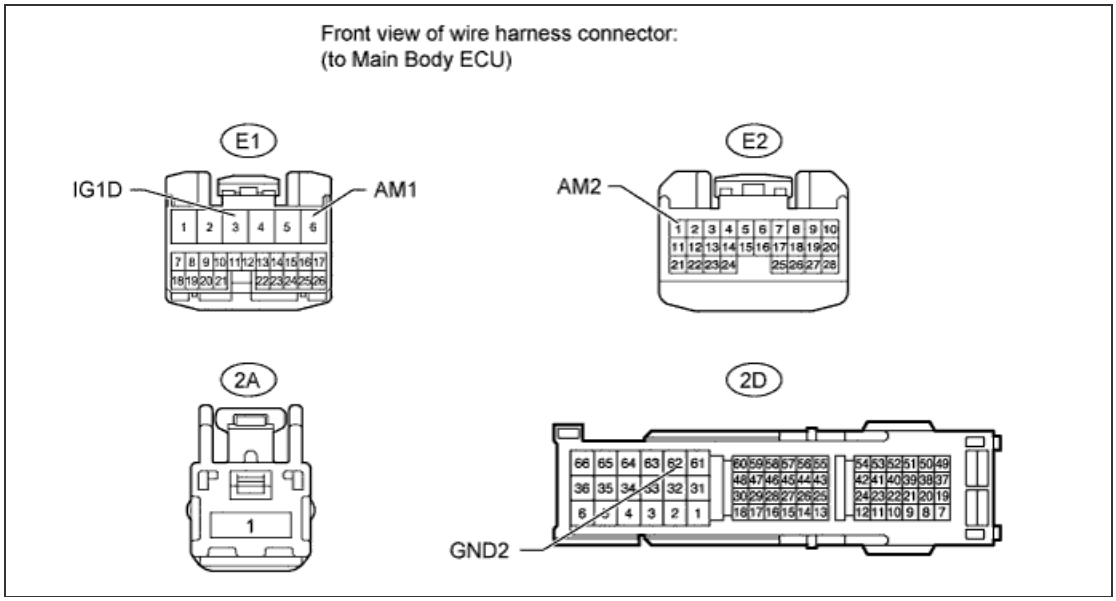

a. Disconnect the E1, E2, 2A and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E1-6 (AM1) - Body ground	Always	11 to 14 V
E2-1 (AM2) - Body ground	Always	11 to 14 V
2A-1 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-3 (IG1D) - 2D-43	Always	Below 1 Ω
2D-62 (GND2) - Body ground	Always	Below 1 Ω
E1-3 (IG1D) or 2D-43 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


7.INSPECT INTEGRATION RELAY (IG2 RELAY)

a. Remove the integration relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
1B-8 - 1C-1	Battery voltage applied to terminals 1B-6 and 1B-7	Below 1 Ω
1B-8 - 1C-1	Battery voltage not applied to terminals 1B-6 and 1B-7	10 kΩ or higher

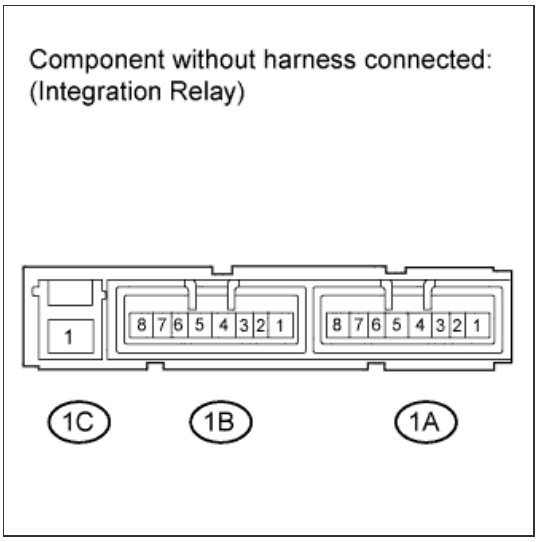

NG → REPLACE INTEGRATION NO.1 RELAY (IG2 RELAY)

OK

8.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - INTEGRATION RELAY (IG2 RELAY))

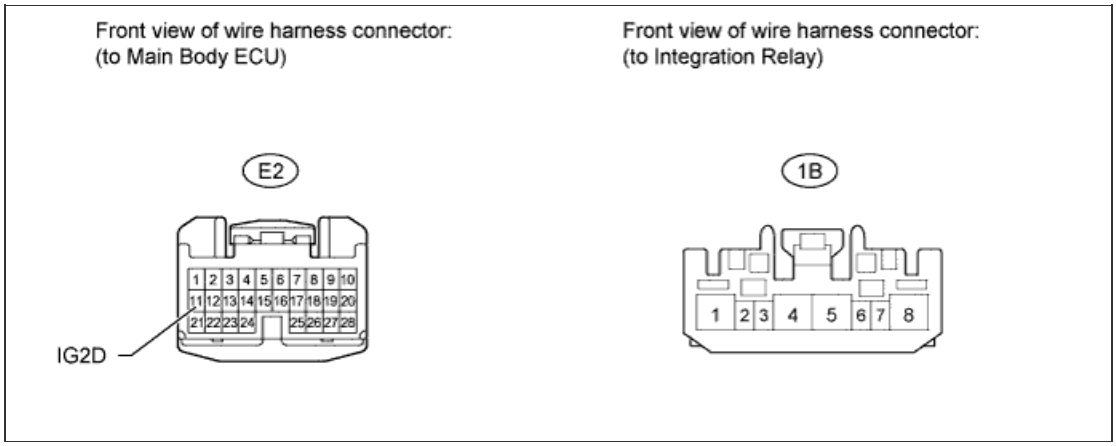

a. Disconnect the E2 main body ECU connector.

b. Disconnect the 1B integration relay connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E2-11 (IG2D) - 1B-6	Always	Below 1 Ω
1B-7 - Body ground	Always	Below 1 Ω
E2-11 (IG2D) or 1B-6 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.INSPECT FUSE (IGN, IG2 MAIN)

a. Remove the IGN fuse and IG2 MAIN fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
IGN fuse	Always	Below 1 Ω
IG2 MAIN fuse	Always	Below 1 Ω

NG → REP CE FUSE

OK

10.CHECK HARNESS AND CONNECTOR (STEERING LOCK ECU - INTEGRATION RELAY (IG2 RELAY))

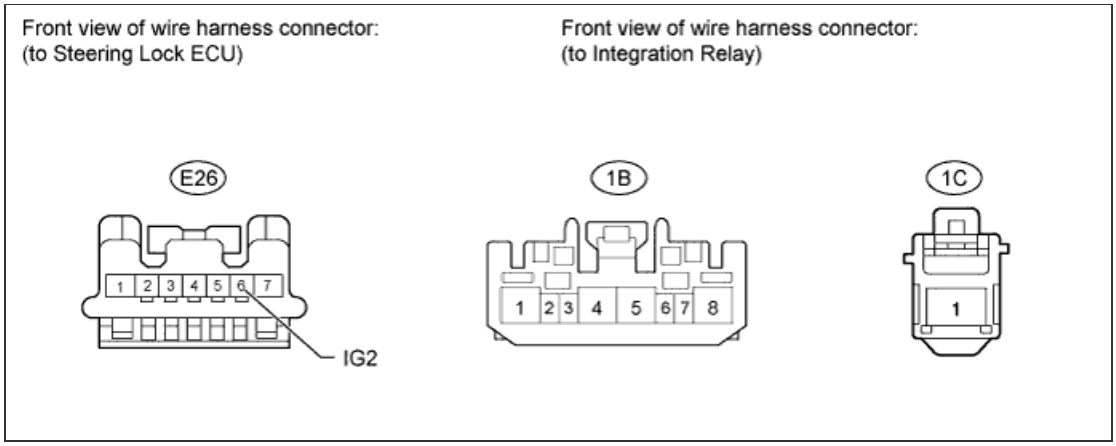

a. Disconnect the E26 steering lock ECU connector.

b. Disconnect the 1B and 1C integration relay connectors.

c. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
1C-1 - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
E26-6 (IG2) - 1B-8	Always	Below 1 Ω
E26-6 (IG2) or 1B-8 - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

→ REPLACE MAIN BODY ECU

11.INSPECT FUSE (AM2)

a. Remove the AM2 fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
AM2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

12.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - BATTERY AND BODY GROUND)

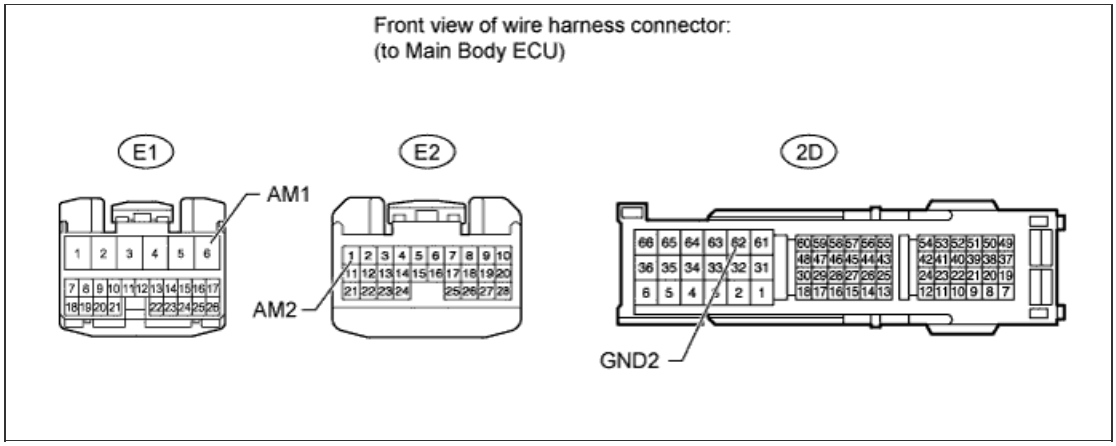

a. Disconnect the E1, E2 and 2D main body ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E1-6 (AM1) - Body ground	Always	11 to 14 V
E2-1 (AM2) - Body ground	Always	11 to 14 V

Standard Resistance:

Tester Connection	Condition	Specified Condition
2D-62 (GND2) - Body ground	Always	Below 1 Ω


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

13.INSPECT ENGINE SWITCH

a. Disconnect the E18 engine switch connector.

b. Measure the resistance according to the value(s) in the table below.

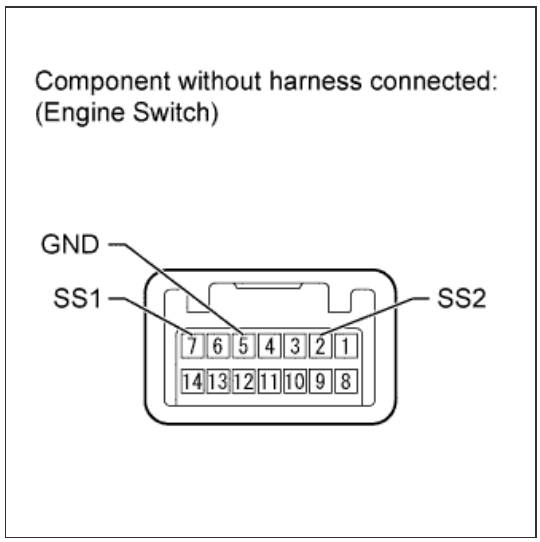

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
7 (SS1) - 5 (GND)	Pushed	Below 1 Ω
2 (SS2) - 5 (GND)	Pushed	Below 1 Ω
7 (SS1) - 5 (GND)	Not pushed	10 kΩ or higher
2 (SS2) - 5 (GND)	Not pushed	10 kΩ or higher

Result

Result	Proceed to
Within specified range	A
Outside specified range (for 1GR-FE)	B
Outside specified range (for 2UZ-FE)	C
Outside specified range (for 3UR-FE)	D
Outside specified range (for 1VD-FTV)	E

B → REPLACE ENGINE SWITCH (Click here)

C → REPLACE ENGINE SWITCH (Click here)


D → REPLACE ENGINE SWITCH (Click here)

E

REP ACE ENGINE SWITCH (Click here)

A

14.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ENGINE SWITCH AND BODY GROUND)

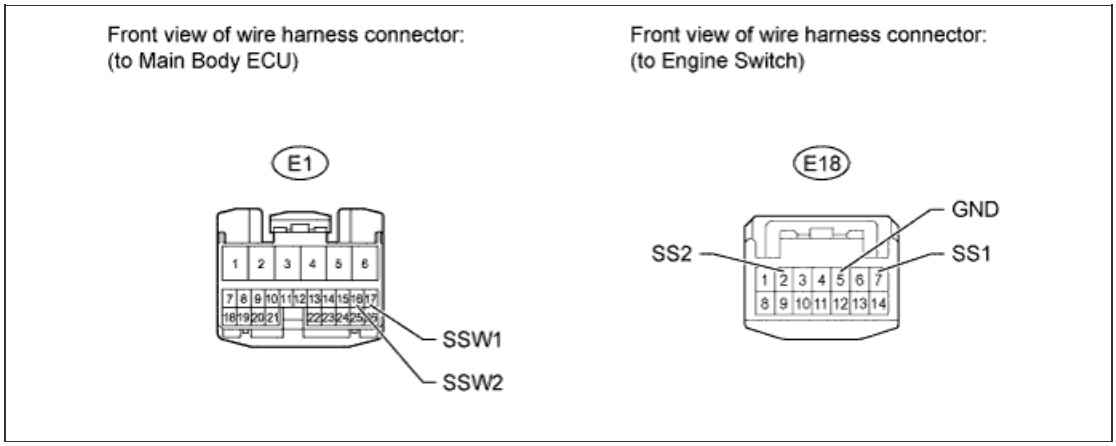

a. Disconnect the E1 main body ECU connector.

b. Disconnect the E18 engine switch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-17 (SSW1) - E18-7 (SS1)	Always	Below 1 Ω
E1-16 (SSW2) - E18-2 (SS2)	Always	Below 1 Ω
E18-5 (GND) - Body ground	Always	Below 1 Ω
E1-17 (SSW1) or E18-7 (SS1) - Body ground	Always	10 kΩ or higher
E1-16 (SSW2) or E18-2 (SS2) - Body ground	Always	10 kΩ or higher

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

for Preparation Click here


DESCRIPTION

Engine switch condition (power source mode) or system malfunctions can be checked by observing the status of the engine switch indicator light.

Engine Switch Indicator Light Condition

Power Source Mode/Condition	Indicator Light Condition		
	Brake pedal released (for A/T) Clutch pedal released (for M/T)	Brake pedal depressed, shift lever in P or N (for A/T)	Clutch pedal depressed (for M/T)
Off	Off	Illuminates (Green)	Illuminates (Green)
On (ACC, IG)	Illuminates (Amber)	Illuminates (Green)	Illuminates (Green)
Engine running	Off	Off	Off
Steering lock not unlocked	Flashes (Green) for 30 sec.	Flashes (Green) for 30 sec.	Flashes (Green) for 30 sec.
System malfunction	Flashes (Amber) for 15 sec.	Flashes (Amber) for 15 sec.	Flashes (Amber) for 15 sec.
Clutch start switch malfunction (for M/T)	Flashes (Green) for 15 sec.	Flashes (Green) for 15 sec.	Flashes (Green) for 15 sec.

WIRING DIAGRAM

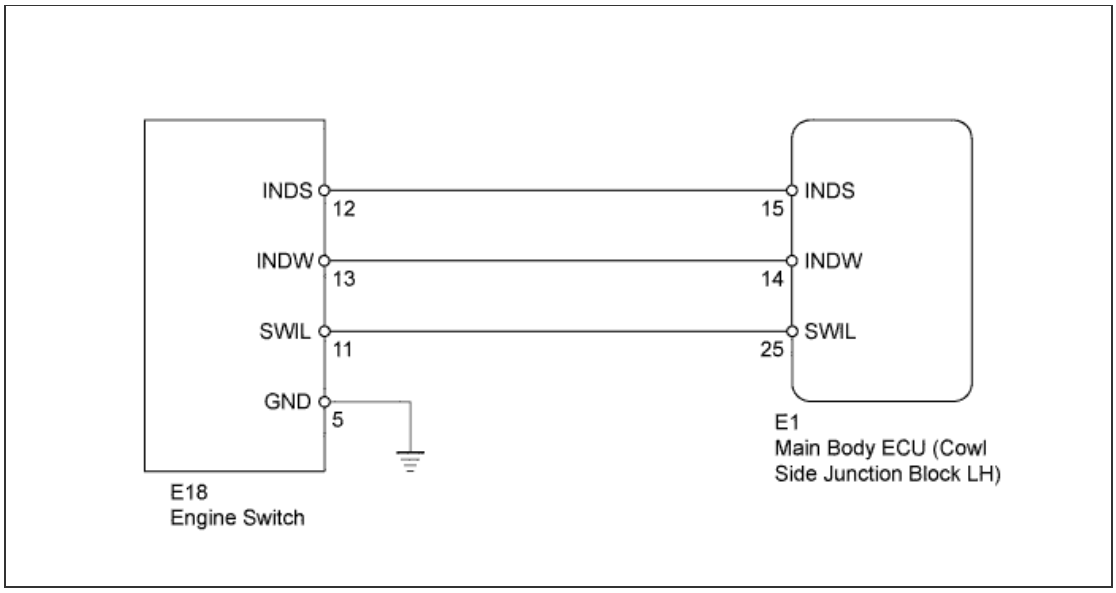

INSPECTION PROCEDURE

1.INSPECT ENGINE SWITCH

a. Disconnect the E18 engine switch connector.

b. Apply battery voltage between the terminals of the engine switch, and check the illumination condition of the engine switch indicator light.


NOTICE:

- **If the positive (+) lead and the negative (-) lead are incorrectly connected, the engine switch indicator light will not illuminate.**
- **If the voltage is too low, the indicator light will not illuminate.**

OK:

Measurement Condition	Condition	Specified Condition
Battery terminal (+) → Terminal 11 (SWIL) - Battery terminal (-) → Terminal 5 (GND)		

Battery terminal (+) → Terminal 12 (INDS) - Battery terminal (-) → Terminal 5 (GND)	Battery voltage is applied to the terminals	Illuminates
Battery terminal (+) → Terminal 13 (INDW) - Battery terminal (-) → Terminal 5 (GND)		

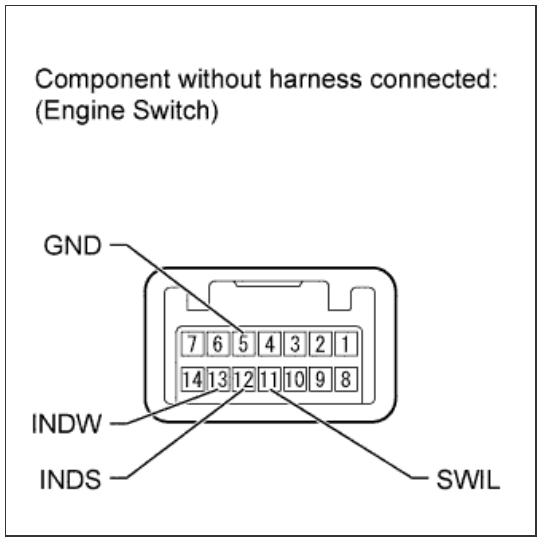


Result

Result	Proceed to
Illuminates	A
Does not illuminate (for 1GR-FE)	B
Does not illuminate (for 2UZ-FE)	C
Does not illuminate (for 1VD-FTV)	D

	REPLACE ENGINE SWITCH (Click here)
C	REPLACE ENGINE SWITCH (Click here)
D	REPLACE ENGINE SWITCH (Click here)

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ENGINE SWITCH AND BODY GROUND)

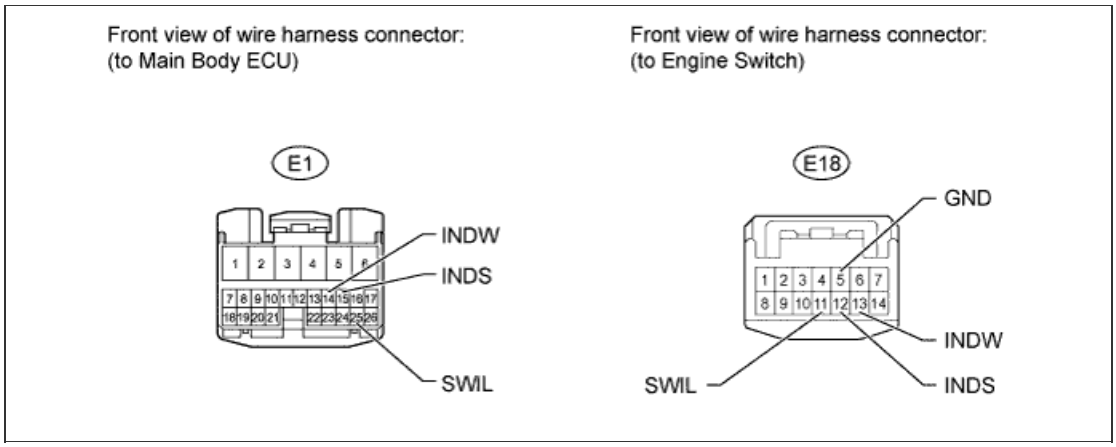

a. Disconnect the E1 main body ECU connector.

b. Disconnect the E18 engine switch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-25 (SWIL) - E18-11 (SWIL)	Always	Below 1 Ω
E1-15 (INDS) - E18-12 (INDS)	Always	Below 1 Ω
E1-14 (INDW) - E18-13 (INDW)	Always	Below 1 Ω
E18-5 (GND) - Body ground	Always	Below 1 Ω
E1-25 (SWIL) or E18-11 (SWIL) - Body ground	Always	10 kΩ or higher
E1-15 (INDS) or E18-12 (INDS) - Body ground	Always	10 kΩ or higher

E1-14 (INDW) or E18-13 (INDW) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU

for Preparation Click here


DESCRIPTION

Engine switch condition (power source mode) or system malfunctions can be checked by observing the status of the engine switch indicator light.

Engine Switch Indicator Light Condition

Power Source Mode/Condition	Indicator Light Condition		
	Brake pedal released (for A/T) Clutch pedal released (for M/T)	Brake pedal depressed, shift lever in P or N (for A/T)	Clutch pedal depressed (for M/T)
Off	Off	Illuminates (Green)	Illuminates (Green)
On (ACC, IG)	Illuminates (Amber)	Illuminates (Green)	Illuminates (Green)
Engine running	Off	Off	Off
Steering lock not unlocked	Flashes (Green) for 30 sec.	Flashes (Green) for 30 sec.	Flashes (Green) for 30 sec.
System malfunction	Flashes (Amber) for 15 sec.	Flashes (Amber) for 15 sec.	Flashes (Amber) for 15 sec.
Clutch start switch malfunction (for M/T)	Flashes (Green) for 15 sec.	Flashes (Green) for 15 sec.	Flashes (Green) for 15 sec.

WIRING DIAGRAM

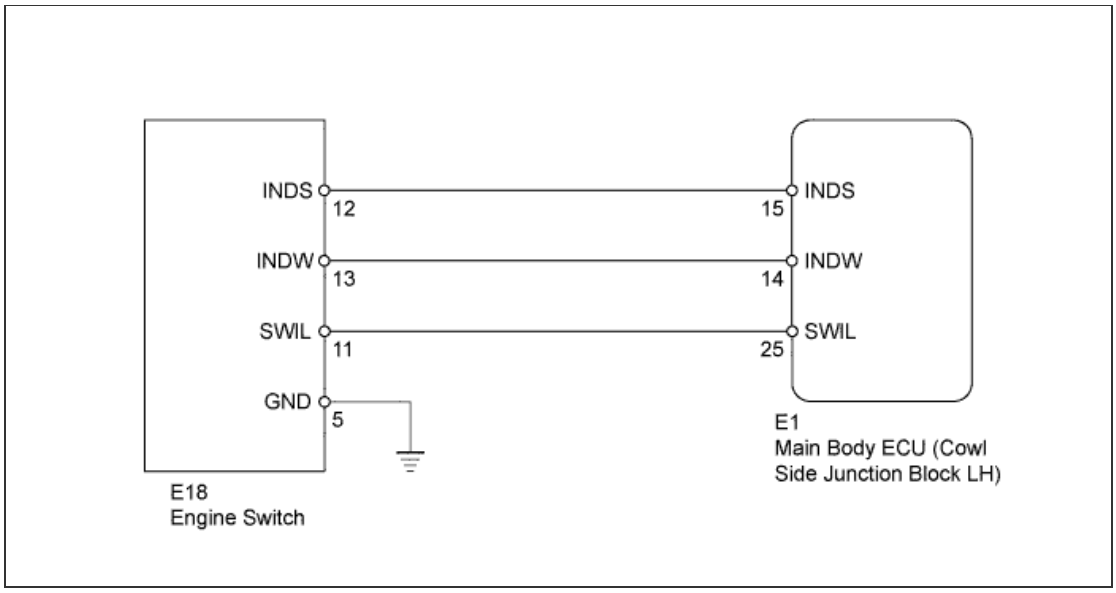

INSPECTION PROCEDURE

1.INSPECT ENGINE SWITCH

a. Disconnect the E18 engine switch connector.

b. Apply battery voltage between the terminals of the engine switch, and check the illumination condition of the engine switch indicator light.


NOTICE:

- **If the positive (+) lead and the negative (-) lead are incorrectly connected, the engine switch indicator light will not illuminate.**
- **If the voltage is too low, the indicator light will not illuminate.**

OK:

Measurement Condition	Condition	Specified Condition
Battery terminal (+) → Terminal 11 (SWIL) - Battery terminal (-) → Terminal 5 (GND)		

Battery terminal (+) → Terminal 12 (INDS) - Battery terminal (-) → Terminal 5 (GND)	Battery voltage is applied to the terminals	Illuminates
Battery terminal (+) → Terminal 13 (INDW) - Battery terminal (-) → Terminal 5 (GND)		

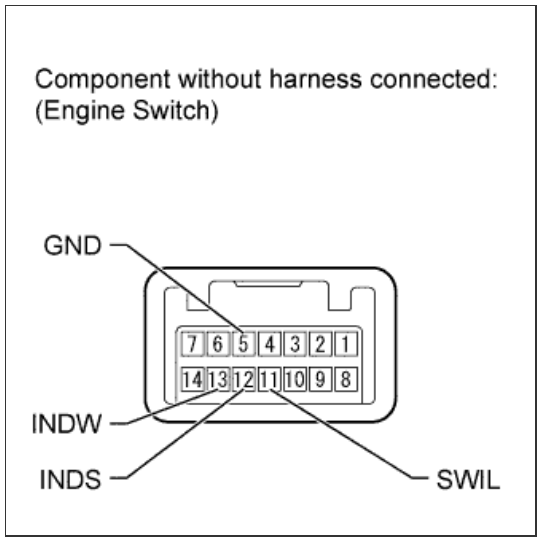


Result

Result	Proceed to
Illuminates	A
Does not illuminate (for 1GR-FE)	B
Does not illuminate (for 2UZ-FE)	C
Does not illuminate (for 3UR-FE)	D
Does not illuminate (for 1VD-FTV)	E

	REPLACE ENGINE SWITCH (Click here)
C	REPLACE ENGINE SWITCH (Click here)
D	REPLACE ENGINE SWITCH (Click here)
E	REPLACE ENGINE SWITCH (Click here)

A

2.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - ENGINE SWITCH AND BODY GROUND)

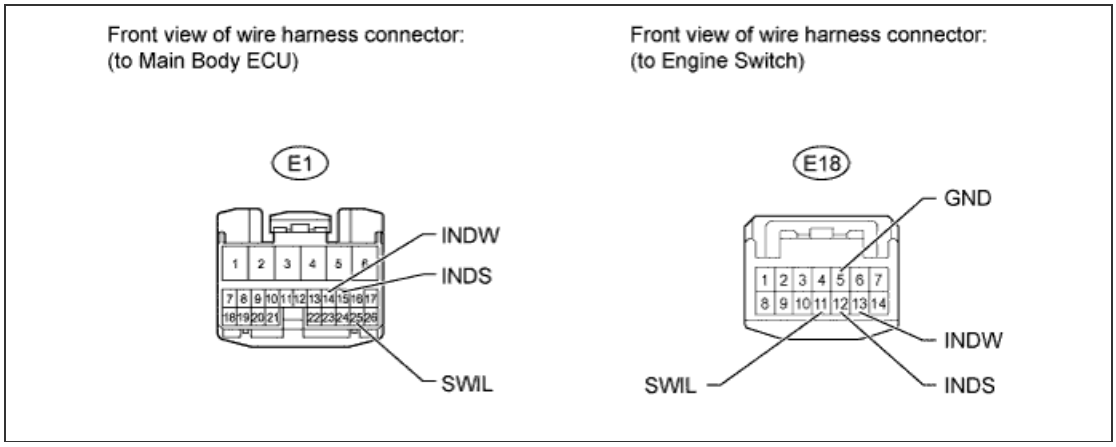

a. Disconnect the E1 main body ECU connector.

b. Disconnect the E18 engine switch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E1-25 (SWIL) - E18-11 (SWIL)	Always	Below 1 Ω
E1-15 (INDS) - E18-12 (INDS)	Always	Below 1 Ω
E1-14 (INDW) - E18-13 (INDW)	Always	Below 1 Ω
E18-5 (GND) - Body ground	Always	Below 1 Ω
E1-25 (SWIL) or E18-11 (SWIL) - Body ground	Always	10 kΩ or higher

E1-15 (INDS) or E18-12 (INDS) - Body ground	Always	10 kΩ or higher
E1-14 (INDW) or E18-13 (INDW) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK → REPLACE MAIN BODY ECU

for Preparation Click here

1.PRECAUTIONS WHEN USING THE INTELLIGENT TESTER

a. When using the intelligent tester with the engine switch off to troubleshoot: Connect the intelligent tester to the vehicle, and turn a courtesy light switch on and off at 1.5 second intervals until communication between the intelligent tester and vehicle begins.

b. After all DTCs are cleared, check if the trouble occurs again 6 seconds after turning the engine switch on (IG).

PRECAUTIONS FOR EACH FUNCTION

a. Precautions for the key:

The key is a precision instrument. Be sure to observe the following:

i. Do not drop or strike the key.

ii. Do not keep the key in a high temperature area for a long time.

iii. Do not use an ultrasonic washing machine to clean the key.

i . Keep the key away from magnets or magnetized items during use.

. Do not attach any stickers to the key.

b. Precautions for the engine start function:

i. Before starting the engine, firmly depress the brake pedal until the indicator of the engine switch illuminates in green.

ii. Be sure to turn the engine switch off before disconnecting the cable from the negative (-) battery terminal. When the battery cable is disconnected, the power source mode (off, on (ACC), on (IG)) is memorized. When battery depletion causes the vehicle power to be cut, be careful to remember the power source mode.

iii. After the battery is removed and reinstalled, be sure to wait 10 seconds or more before the next engine start. The engine may not start immediately after the battery is reinstalled.

i . When the key battery is depleted, affected by wave noise, etc. and it is held close to the engine switch to start the engine, several warnings may sound. However, the warnings most likely sound because the vehicle cannot determine if the key is in the vehicle or not, and not because there is an actual malfunction. The following warnings may sound:

1. Driver side door open → closed:
   - Warning to inform that the shift lever is in a position other than P, and the power source mode is not off.
   - Warning to inform that the shift lever is in P but the power source mode is not off.
2. Door other than the driver side door open → closed:
   - Warning to inform that a passenger is carrying the key out of the vehicle.

c. Precautions for the battery built into the key and the vehicle battery:

i. When the door is being locked, the vehicle battery is used to transmit a radio wave. The battery may be fully depleted if the vehicle remains stopped for a long time. If the vehicle is not used for a long time, recharge or replace the battery or cancel the entry and start system (for Entry Function) (Click here).

ii. When the door is being locked with the key in the detection area of the door oscillator, the battery is used to regulate communication between the key and vehicle. If the vehicle is not used, keep the key away from the vehicle (more than 2 m (6.56 ft.)).

.PRECAUTIONS FOR BATTERY

a. Immediately after removing and installing the battery, door unlock by the entry and start system (for Entry Function) may not operate. In that case, after performing a door unlock/lock operation with the door control transmitter, door unlock operation by the smart key system returns.

b. When the battery is fully depleted and it is recharged using another vehicle battery, start the engine by performing the following: (1) Put the shift lever in P; (2) with the engine switch off, open and close the driver door once; and (3) start the engine.


c. When starting the engine after removing and installing the battery, open and close the driver door and wait 10 seconds before starting the system.

HINT:


If the engine does not start the first time after removing and installing the battery, the engine will start normally from the second time

onward.


for Preparation Click here

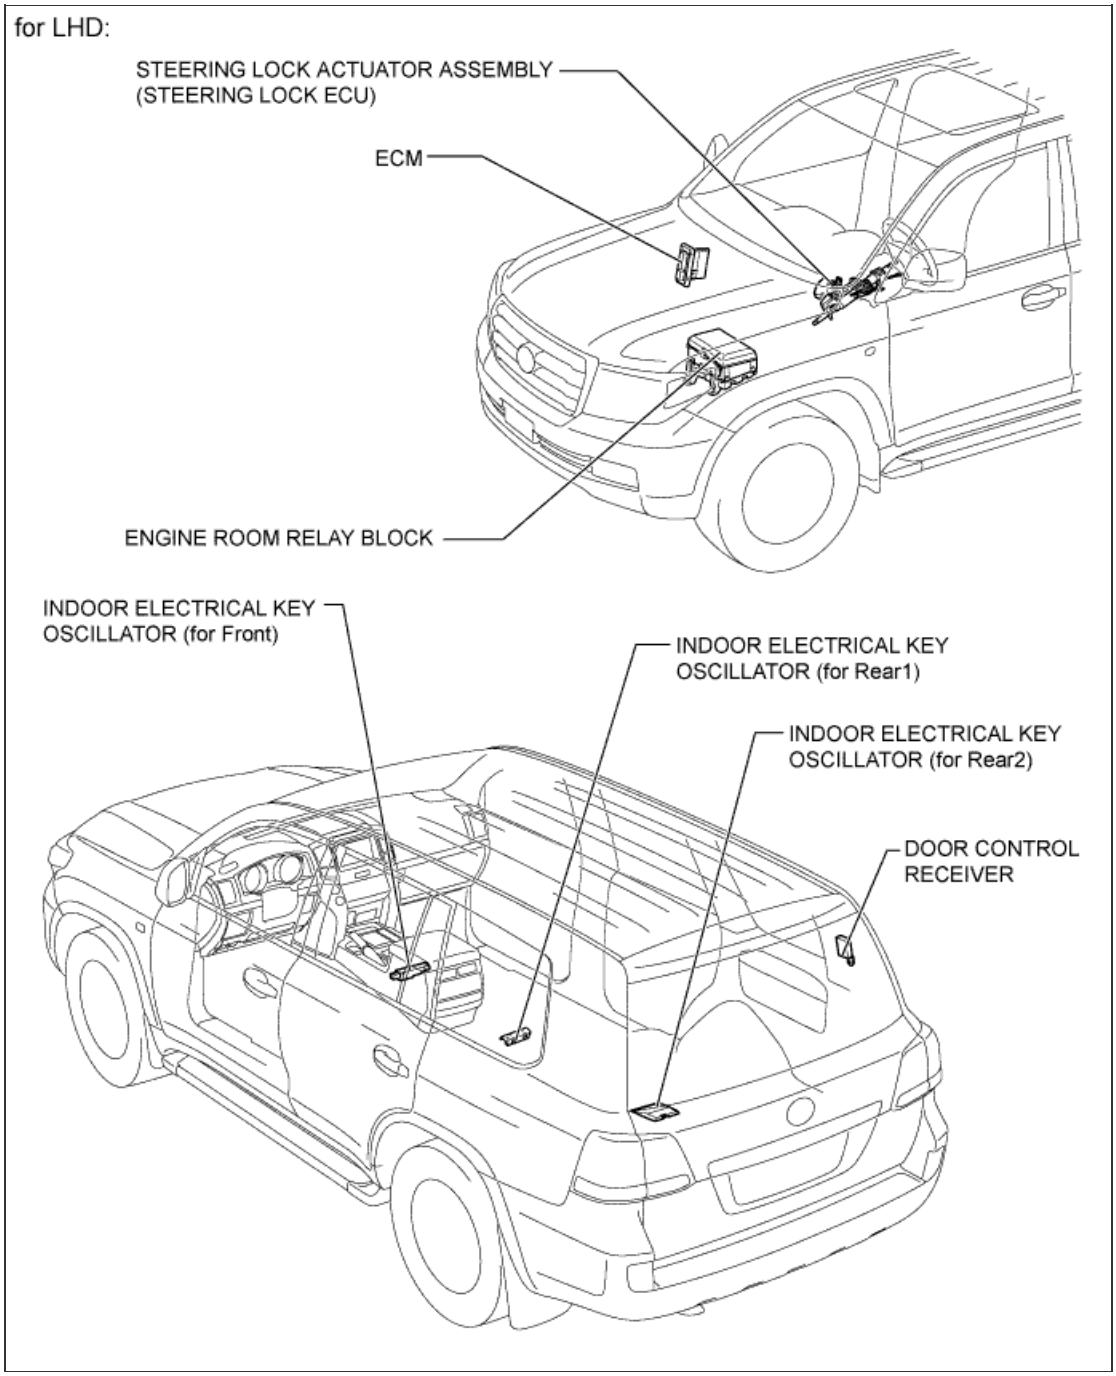


for RHD:

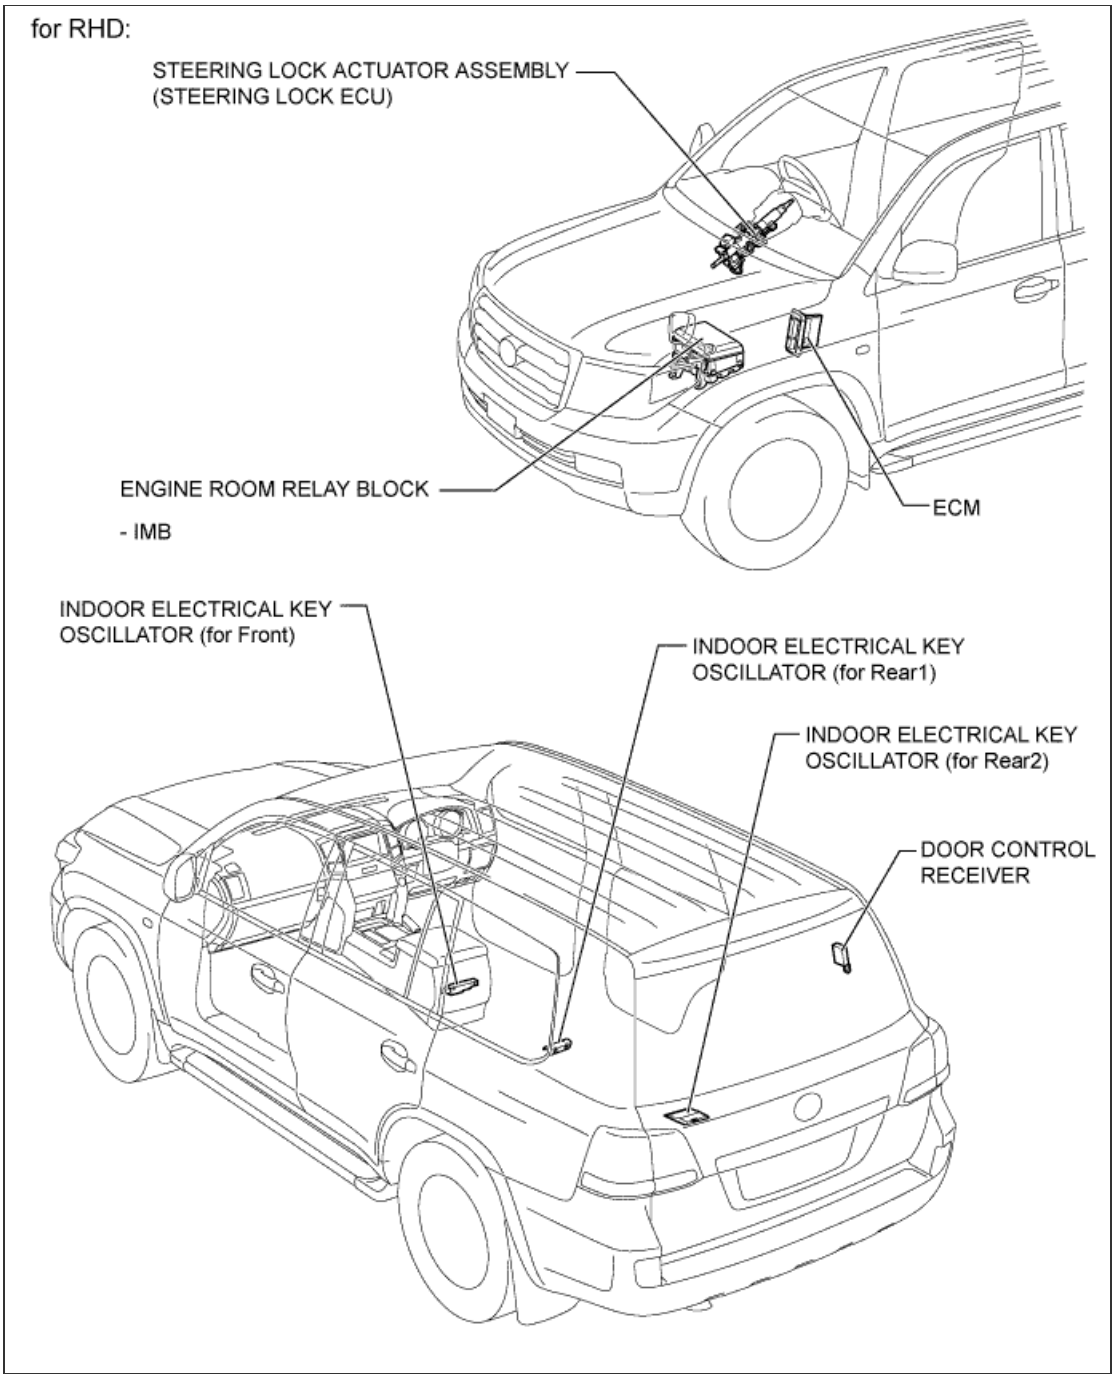
STEERING LOCK ACTUATOR ASSEMBLY
(STEERING LOCK ECU)
ENGINE ROOM RELAY BLOCK
- IMB
ECM
INDOOR ELECTRICAL KEY
OSCILLATOR (for Front)
INDOOR ELECTRICAL KEY
OSCILLATOR (for Rear1)
INDOOR ELECTRICAL KEY
OSCILLATOR (for Rear2)
DOOR CONTROL
RECEIVER

for LHD:

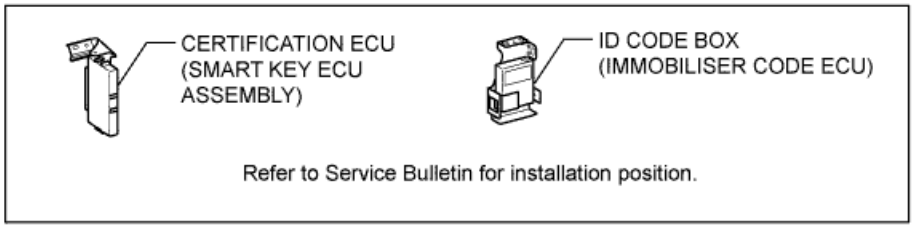


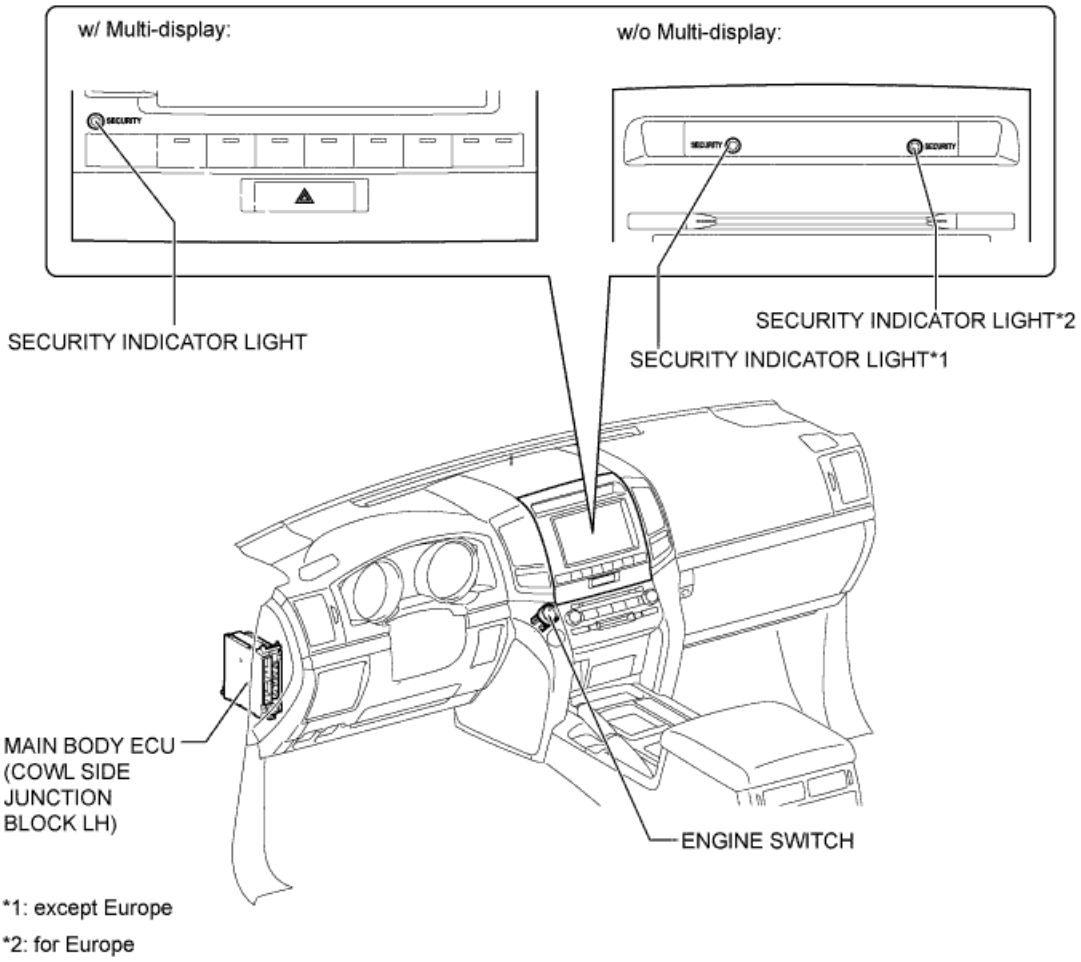


*1: except Europe

*2: for Europe


for RHD:

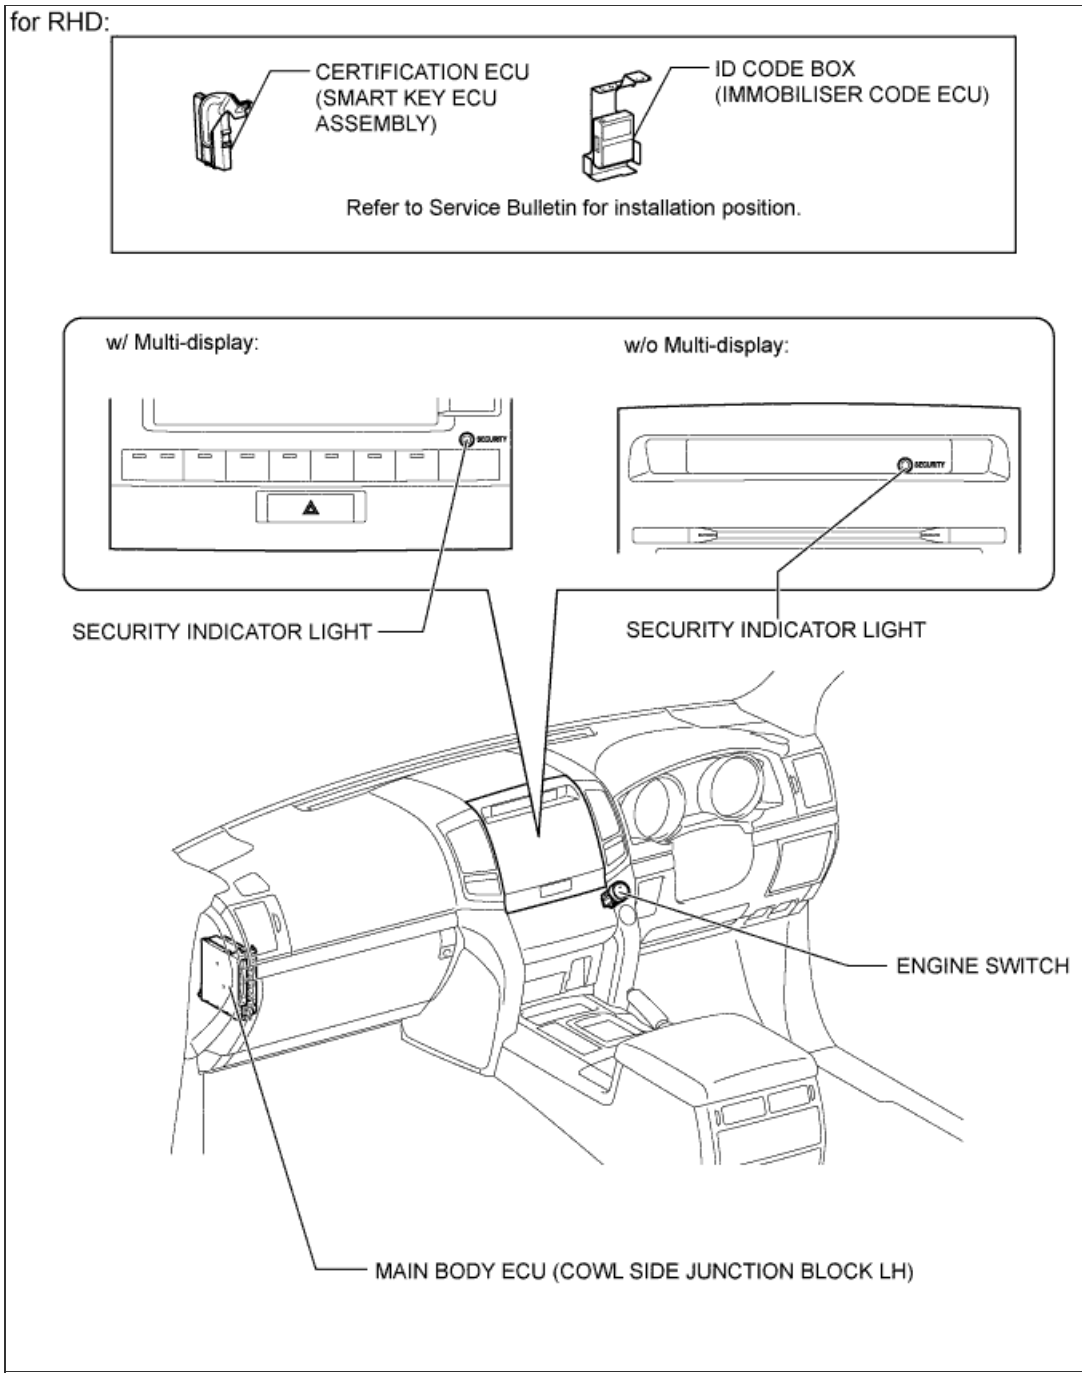
CERTIFICATION ECU
(SMART KEY ECU
ASSEMBLY)
ID CODE BOX
(IMMOBILISER CODE ECU)
Refer to Service Bulletin for installation position.
w/ Multi-display:
w/o Multi-display:
SECURITY INDICATOR LIGHT
SECURITY INDICATOR LIGHT
ENGINE SWITCH
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)


for Preparation Click here

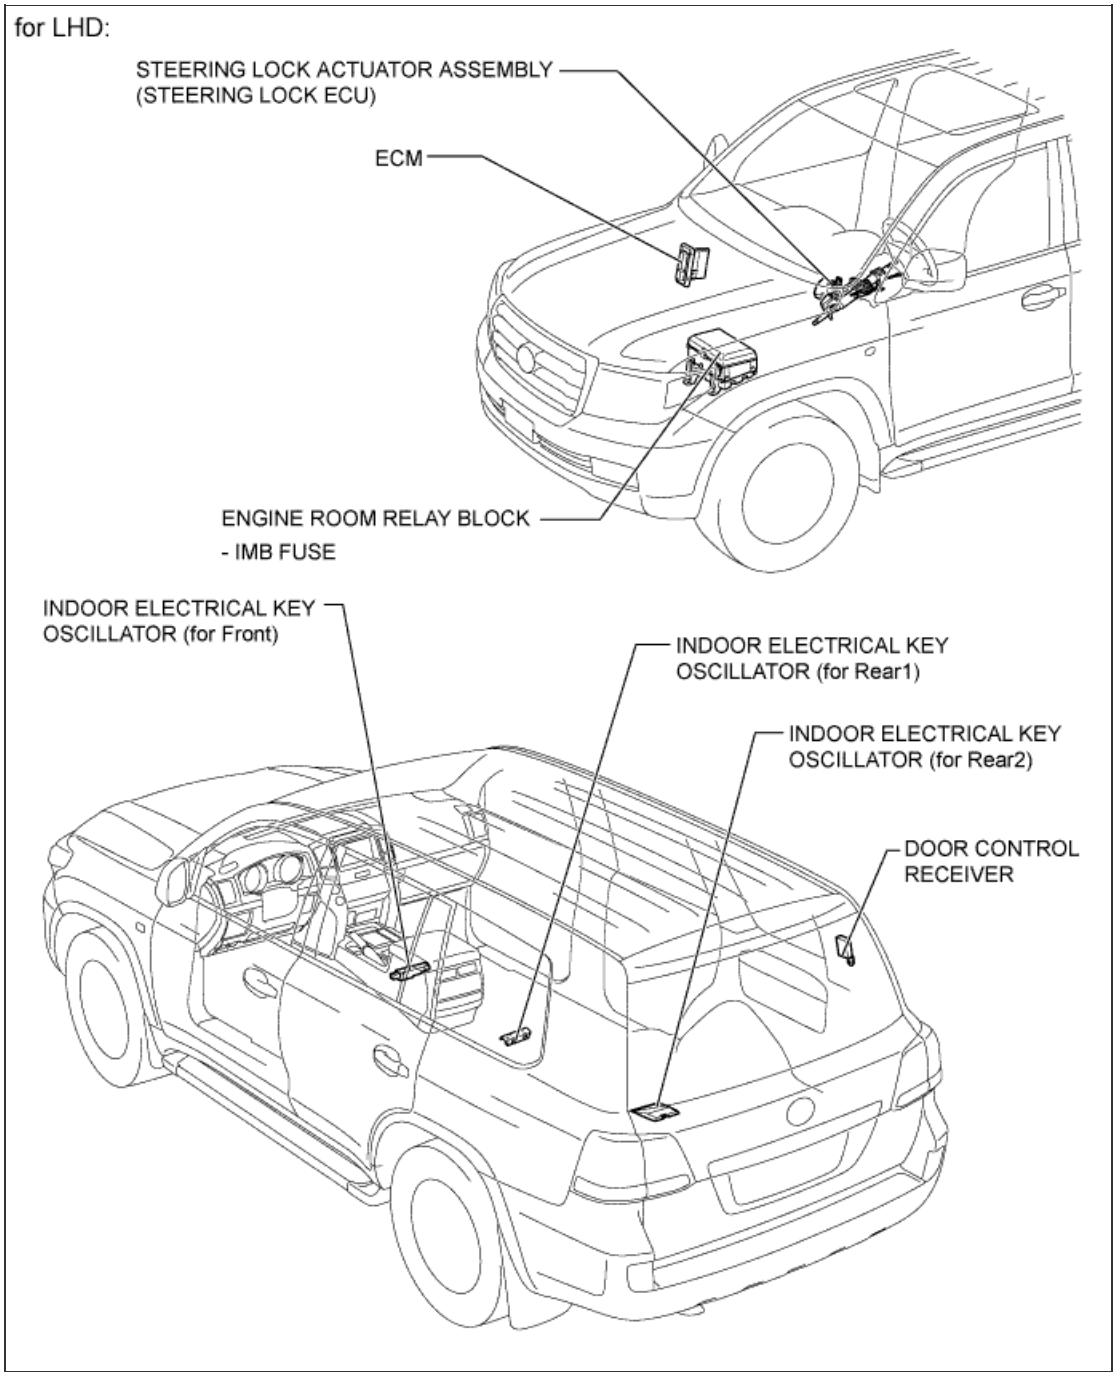


for RHD:

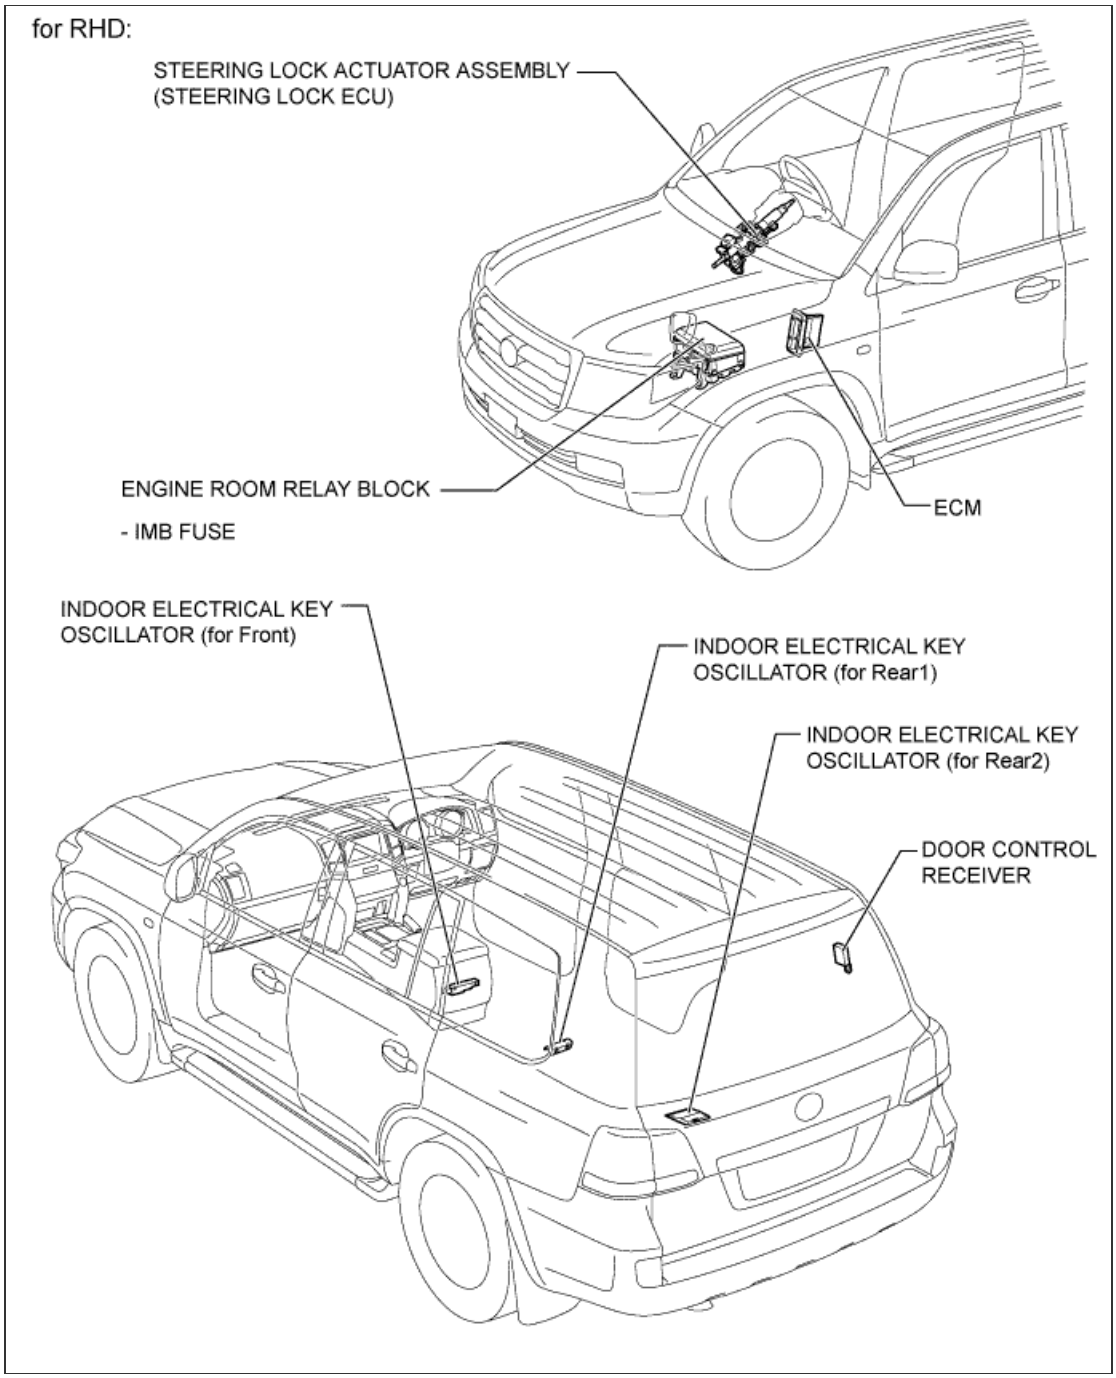
STEERING LOCK ACTUATOR ASSEMBLY
(STEERING LOCK ECU)
ENGINE ROOM RELAY BLOCK
- IMB FUSE
ECM
INDOOR ELECTRICAL KEY
OSCILLATOR (for Front)
INDOOR ELECTRICAL KEY
OSCILLATOR (for Rear1)
INDOOR ELECTRICAL KEY
OSCILLATOR (for Rear2)
DOOR CONTROL
RECEIVER

for LHD:

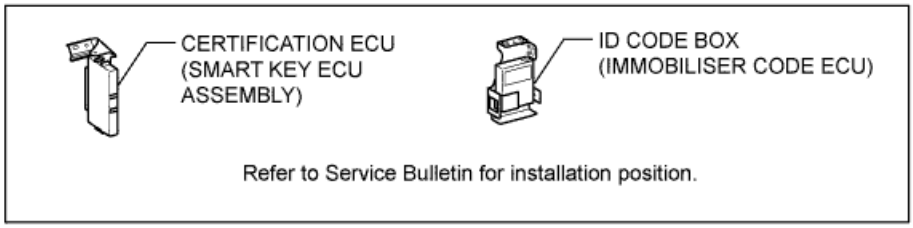


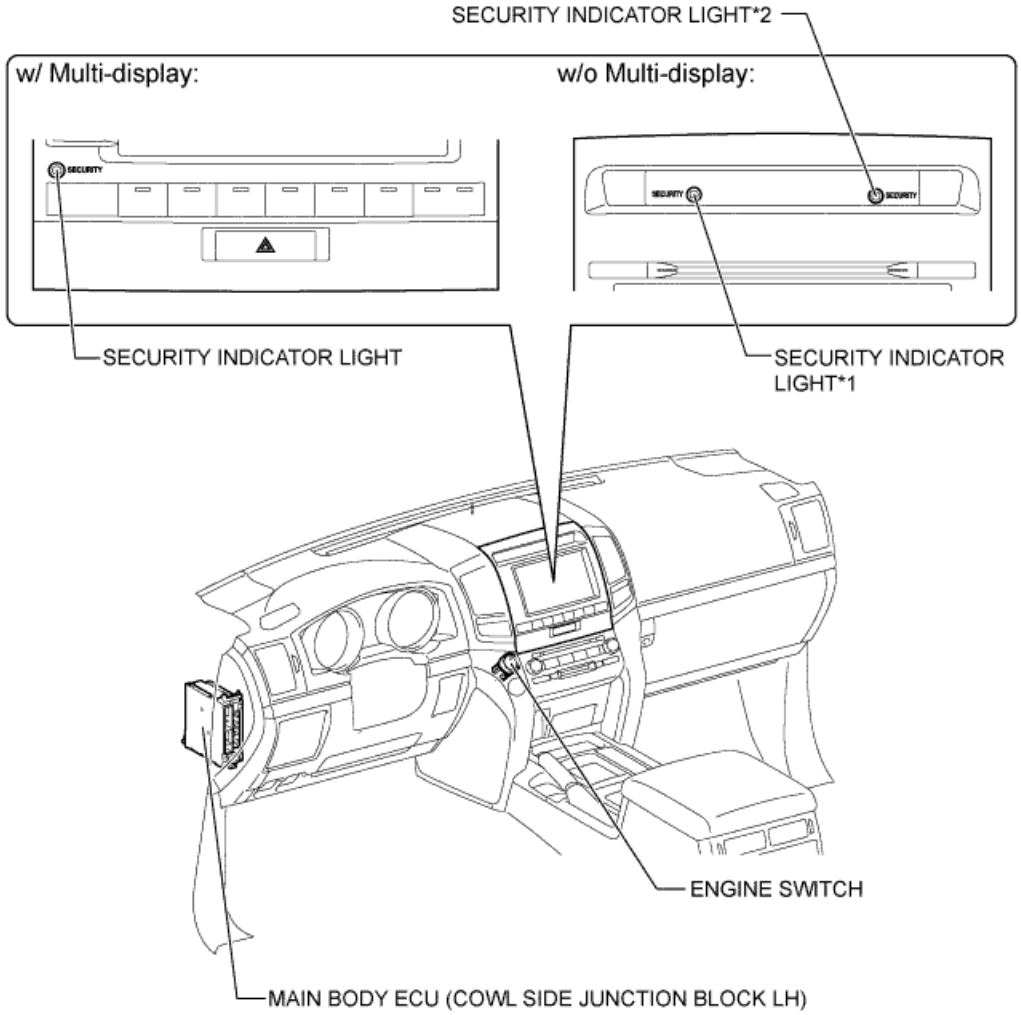


*1: except Europe

*2: for Europe

for RHD:

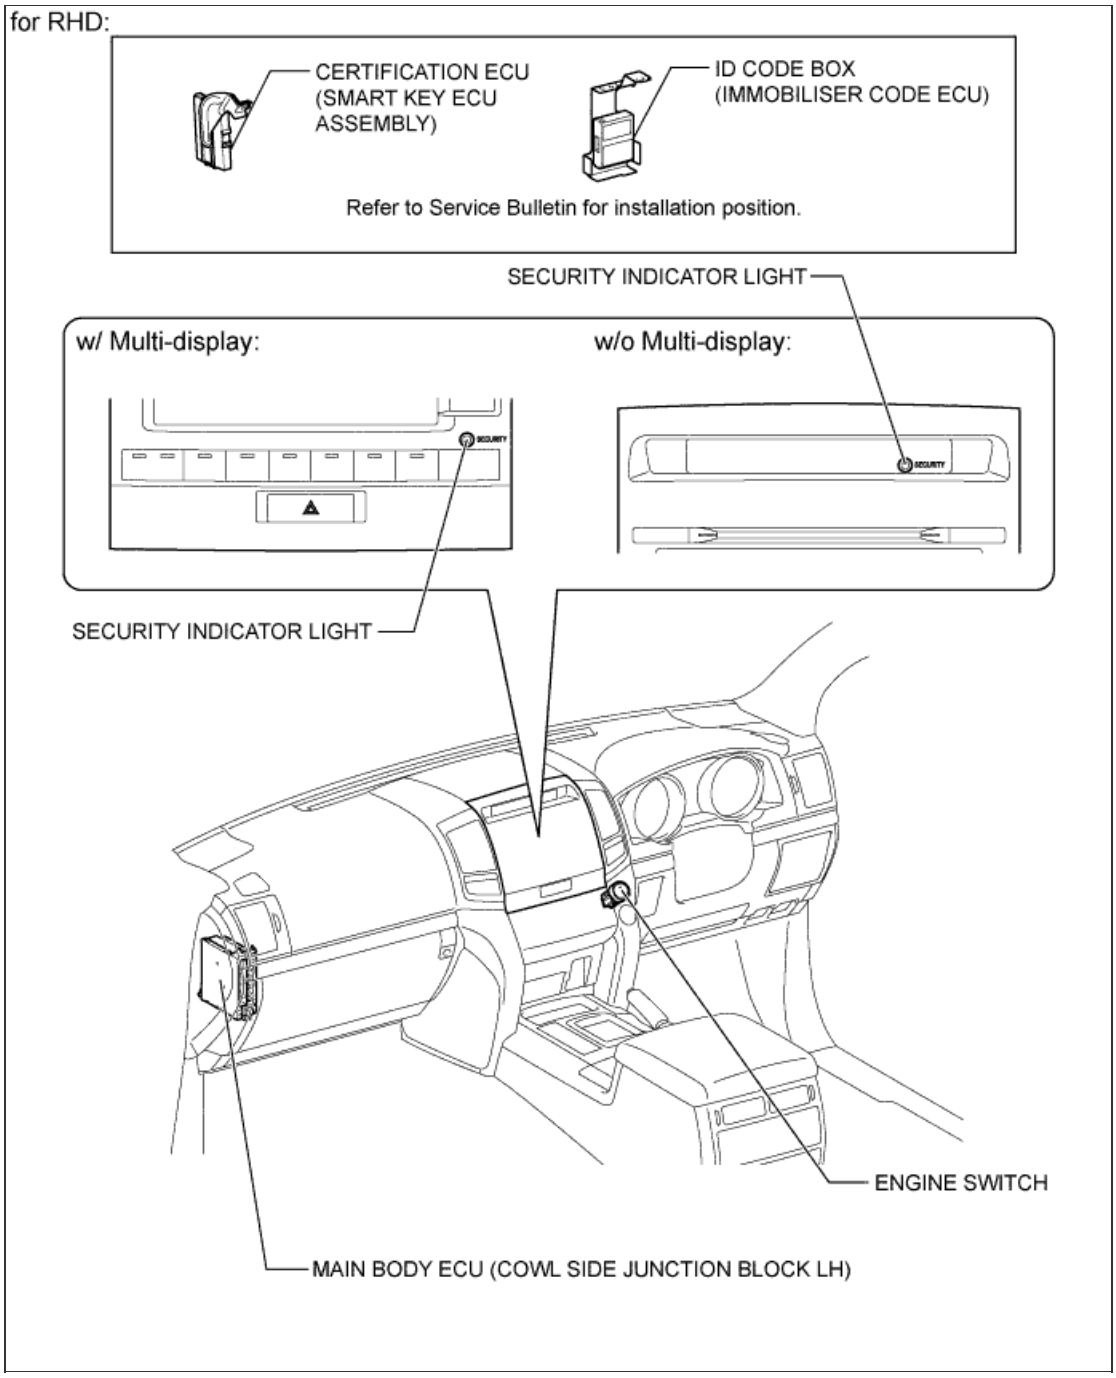
CERTIFICATION ECU
(SMART KEY ECU
ASSEMBLY)
ID CODE BOX
(IMMOBILISER CODE ECU)
Refer to Service Bulletin for installation position.
SECURITY INDICATOR LIGHT
w/ Multi-display:
w/o Multi-display:
SECURITY INDICATOR LIGHT
ENGINE SWITCH
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

for Preparation Click here

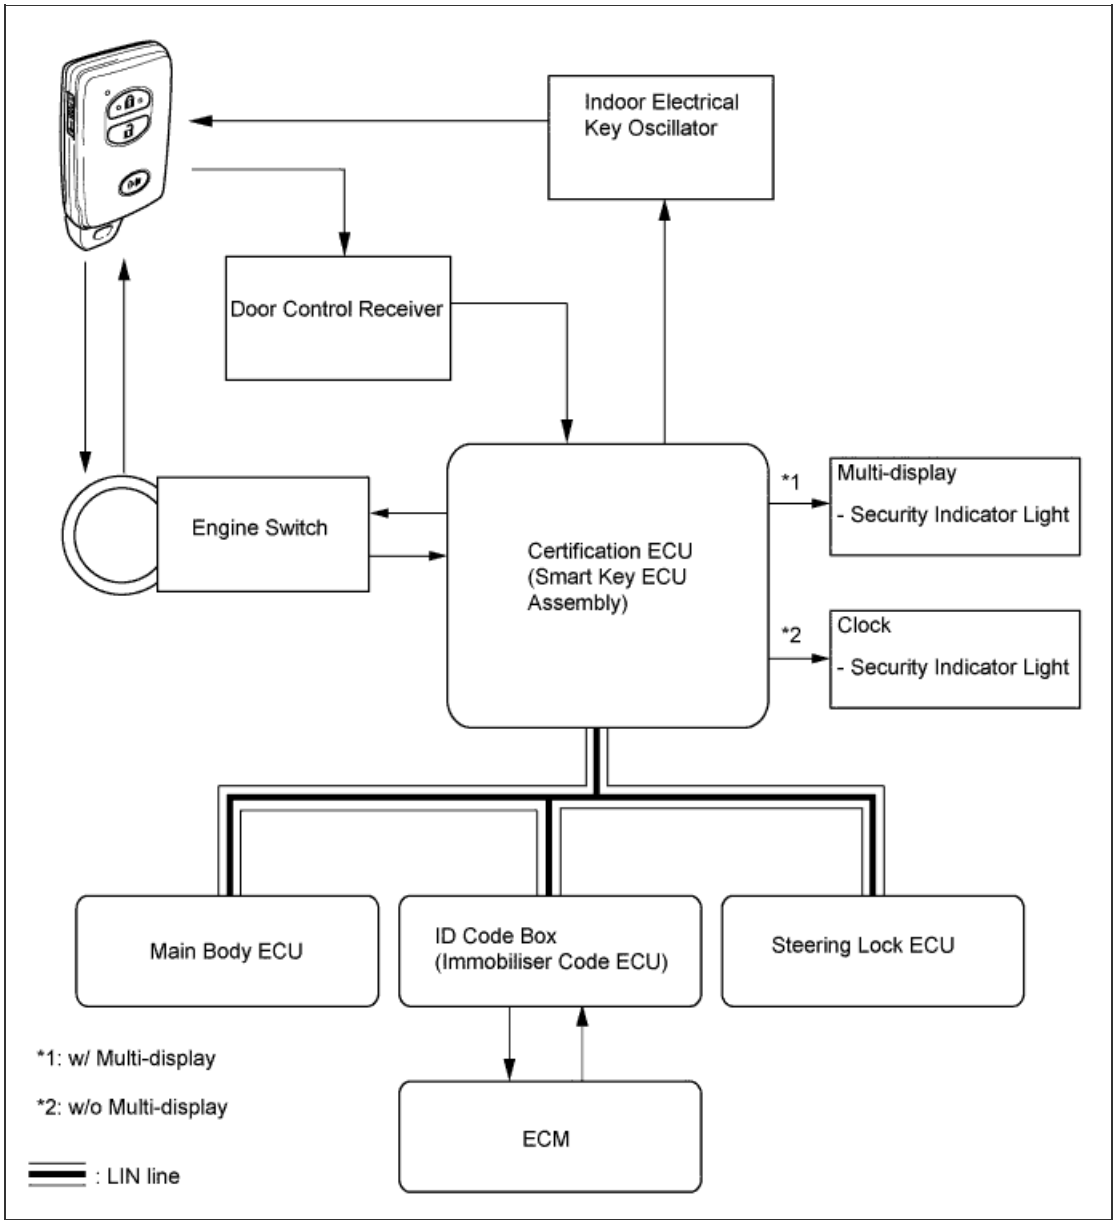

Communication Ta le

Transmitting ECU (Transmitter)	Receiving ECU (Receiver)	Signals	Communication Method
Certification ECU	Main body ECU	• Double lock fail-safe unset signal • Security indicator light flash signal • Security indicator light illumination signal • Engine immobiliser system set/unset signal	LIN
		• Engine start signal • Transponder valid signal • Steering unlock demand signal • Steering lock demand signal	
Main body ECU	Certification ECU	• Key code recognition signal • Engine start operation signal • ACC relay activation signal • IG relay activation signal	
		• Matching request random number signal • EFI code reception signal • Engine start permission demand reception signal • S code verification result signal	

ID code box	Certification ECU	• L code verification result signal • Steering unlock demand reception signal • Steering lock demand reception signal	
	Steering lock ECU	• Steering lock release signal • Matching request random number signal	
Steering lock ECU	Certification ECU	L code verification signal	

for Preparation Click here

ENGINE IMMOBILISER SYSTEM DESCRIPTION

a. The engine immobiliser system determines whether or not to disable starting of the SFI system*1 or ECD system*2 based on a comparison of the key ID code and the vehicle pre-registered code. The engine immobiliser system compares the vehicle certification ECU (smart key ECU assembly) pre-registered ID code with the key-embedded transponder chip ID code. If the ID codes do not match, the engine immobiliser system activates and the SFI system*1 or ECD system*2 cannot be started. The certification ECU (smart key ECU assembly) manages communication with the SFI system*1 or ECD system*2, main body ECU, steering lock ECU and ID code box (immobiliser code ECU). When the ID codes of the transponder chip and certification ECU (smart key ECU assembly) match, the certification ECU (smart key ECU assembly) authorizes the starting of the SFI system*1 or ECD system*2.

HINT:

- ***1: for 1GR E E**
- **for 1 D T**

FUNCTION OF MAIN COMPONENT

Component	Outline
Transponder key coil/amplifier (built into engine switch)	Receives the key ID code, amplifies the ID code and outputs it to the certification ECU (smart key ECU assembly).
Indoor electrical key oscillator	Transmits the key detection signals within the detection area in the vehicle interior upon receiving a transmission request signal from the certification ECU (smart key ECU assembly). The certification ECU (smart key ECU assembly) request signal is activated when the key is brought into the vehicle interior and the engine switch is pushed.
Door control receiver	Receives the ID code from the key in the actuation area and transmits it to the certification ECU (smart key ECU assembly).
Security indicator light	Illuminates or starts blinking. The Illumination is controlled by the certification ECU (smart key ECU assembly).

SYSTEM FUNCTION

a. Using the entry function (for Manual Transmission)

i. When the driver (or an occupant) gets in the vehicle and depresses the brake pedal and clutch pedal while carrying the key, the main body ECU recognizes that the brake pedal and clutch pedal have been depressed and sends a key certification request signal to the certification ECU (smart key ECU assembly). Then the certification ECU (smart key ECU assembly) generates a request signal and sends it to the indoor electrical key oscillator. When the request signal is received, the indoor electrical key oscillator sends another request signal in order to detect whether the key is inside the vehicle. When the key receives this request signal, it sends back an ID code which includes a response code. The ID code sent from the key is sent to the certification ECU (smart key ECU assembly) via the door control receiver. When the ID code is received, the certification ECU (smart key ECU assembly) analyzes the code. If the certification result is normal, the certification ECU (smart key ECU assembly) sends a key certification compatible response signal to the main body ECU. At this time, the engine switch indicator illuminates in green. When the indicator illuminates in green and the driver presses the engine switch, the main body ECU recognizes the engine start signal, changes the ACC relay to on, and changes the IG1 and IG2 relays to on in that order after 0.025 seconds. At this time, the certification ECU (smart key ECU assembly) confirms that the power source mode has changed, and sends a steering unlock command signal to the main body ECU. After this signal is received, the main body ECU supplies the steering lock actuator with power. Then (via the ID code box (immobiliser code ECU)) the steering lock ECU confirms that the certification ECU (smart key ECU assembly) is the proper ECU, and drives the steering actuator motor until the steering lock is unlocked. After the steering lock is unlocked, the steering lock ECU sends an unlock completion signal to the certification ECU (smart key ECU assembly) and main body ECU. When this signal is received, the certification ECU (smart key ECU assembly) sends an immobiliser unset command signal to the ID code box (immobiliser code ECU). Once this signal is received, the ID code box (immobiliser code ECU) sends an immobiliser unset command signal to the SFI system*1 or ECD system*2 after confirming that the certification ECU (smart key ECU assembly) is the proper ECU. Then the certification ECU (smart key ECU assembly) sends a security indicator light off signal to the clock*3 or multi-display*4.

HINT:

***1: for 1GR E E**
for 1 D T
*** : o M lti i play**
*** : M lti i play**

. Using the entry function (for Automatic Transmission)

i. When the driver (or an occupant) gets in the vehicle and depresses the brake pedal while carrying the key, the main body ECU recognizes that the brake pedal has been depressed and sends a key certification request signal to the certification ECU (smart key ECU assembly). Then the certification ECU (smart key ECU assembly) generates a request signal and sends it to the indoor electrical key oscillator. When the request signal is received, the indoor electrical key oscillator sends another request signal in order to detect whether the key is inside the vehicle. When the key receives this request signal, it sends back an ID code which includes a response code. The ID code sent from the key is sent to the certification ECU (smart key ECU assembly) via the door control receiver. When the ID code is received, the certification ECU (smart key ECU assembly) analyzes the code. If the certification result is normal, the certification ECU (smart key ECU assembly) sends a key certification compatible response signal to the main body ECU. At this time, the engine switch indicator illuminates in green. When the indicator illuminates in green and the driver presses the engine switch, the main body ECU recognizes the engine start signal, changes the ACC relay to on, and changes the IG1 and IG2 relays to on in that order after 0.025 seconds. At this time, the certification ECU (smart key ECU assembly) confirms that the power source mode has changed, and sends a steering unlock command signal to the main body ECU. After this signal is received, the main body ECU supplies the steering lock actuator with power. Then (via the ID code box (immobiliser code ECU)) the steering lock ECU confirms that the certification ECU (smart key ECU assembly) is the proper ECU, and drives the steering actuator motor until the steering lock is unlocked. After the steering lock is unlocked, the steering lock ECU sends an unlock completion signal to the certification ECU (smart key ECU assembly) and main body ECU. When this signal is received, the certification ECU (smart key ECU assembly) sends an immobiliser unset command signal to the ID code box (immobiliser code ECU). Once this signal is received, the ID code box (immobiliser code ECU) sends an immobiliser unset command signal to the SFI system*1 or ECD system*2 after confirming that the certification ECU (smart key ECU assembly) is the proper ECU. Then the certification ECU (smart key ECU assembly) sends a security indicator light off signal to the clock*3 or multi-display*4.

HINT:

***1: for 1GR E E**
for 1 D T
*** : o M lti i play**
*** : M lti i play**

c. Not using the entry function (when battery is depleted, transmitter is affected by wave noise, etc.) (for Manual Transmission)

i. When the driver is sitting in the vehicle while carrying the key and the brake pedal and the clutch pedal are depressed, the main body ECU recognizes that the stop light switch is on and sends a key confirmation request signal to the certification ECU (smart key ECU assembly). Upon receipt of this signal, the certification ECU (smart key ECU assembly) drives the motor of the engine switch built-in immobiliser amplifier. At this time, the engine switch outputs an RF (Radio Frequency) wave communication signal. If the driver holds the key up to the engine switch at this time, the key receives the immobiliser RF (Radio Frequency) wave signal and responds by sending a radio wave signal. When the engine switch receives the radio wave signal from the key, it duplicates the signal and sends an ID code to the certification ECU (smart key ECU assembly). Upon receipt of the ID code, the code is analyzed. If the certification passes, a key certification pass response signal is sent to the main body ECU while simultaneously sending a sound buzzer request signal to the meter ECU. When the main body ECU receives this signal, the ACC relay is switched on and the IG1 and IG2 relays are switched on in sequence after 0.025 seconds. At this time, the engine switch indicator illuminates in green. Then the certification ECU (smart key ECU assembly) checks that the power source mode has been changed and sends a steering lock command signal to the main body ECU. After receiving this signal, the main body ECU supplies power to the steering lock actuator. Then (via the ID code box (immobiliser code ECU)) the steering lock ECU confirms that the certification ECU (smart key ECU assembly) is certified and drives the steering actuator motor until the steering lock is unlocked. After unlocking the steering lock, an unlock completed signal is sent to the certification ECU (smart key ECU assembly). Upon receipt of this signal, the certification ECU (smart key ECU assembly) sends an unset command signal to the ID code box (immobiliser code ECU). Once this signal is received, the ID code box (immobiliser code ECU) confirms that the certification ECU (smart key ECU assembly) is certified, sends an immobiliser unset command signal to the SFI system*1 or ECD system*2, and then the certification ECU (smart key ECU assembly) sends a security indicator light off signal to the clock*3 or multi-display*4.

HINT:

***1: for 1GR E E**
for 1 D T
*** : o M lti i play**
*** : M lti i play**

. Not using the entry function (when battery is depleted, transmitter is affected by wave noise, etc.) (for Automatic Transmission)

i. When the driver is sitting in the vehicle while carrying the key and the brake pedal is depressed, the main body ECU recognizes that the stop light switch is on and sends a key confirmation request signal to the certification ECU (smart key ECU assembly). Upon receipt of this signal, the certification ECU (smart key ECU assembly) drives the motor of the engine switch built-in immobiliser amplifier. At this time, the engine switch outputs an RF (Radio Frequency) wave communication signal. If the driver holds the key up to the engine switch at this time, the key receives the immobiliser RF (Radio Frequency) wave signal and responds by sending a radio wave signal. When the engine switch receives the radio wave signal from the key, it duplicates the signal and sends an ID code to the certification ECU (smart key ECU assembly). Upon receipt of the ID code, the code is analyzed. If the certification passes, a key certification pass response signal is sent to the main body ECU while simultaneously sending a sound buzzer request signal to the meter ECU. When the main body ECU receives this signal, the ACC relay is switched on and the IG1 and IG2 relays are switched on in sequence after 0.025 seconds. At this time, the engine switch indicator illuminates in green. Then the certification ECU (smart key ECU assembly) checks that the power source mode has been changed and sends a steering lock command signal to the main body ECU. After receiving this signal, the main body ECU supplies power to the steering lock actuator. Then (via the ID code box (immobiliser code ECU)) the steering lock ECU confirms that the certification ECU (smart key ECU assembly) is certified and drives the steering actuator motor until the steering lock is unlocked.

After unlocking the steering lock, an unlock completed signal is sent to the certification ECU (smart key ECU assembly). Upon receipt of this signal, the certification ECU (smart key ECU assembly) sends an unset command signal to the ID code box (immobiliser code ECU). Once this signal is received, the ID code box (immobiliser code ECU) confirms that the certification ECU (smart key ECU assembly) is certified, sends an immobiliser unset command signal to the SFI system*1 or ECD system*2, and then the certification ECU (smart key ECU assembly) sends a security indicator light off signal to the clock*3 or multi-display*4.

HINT:

***1: for 1GR E E**
for 1 D T
*** : o M lti i play**
*** : M lti i play**

for Preparation Click here

ENGINE IMMOBILISER SYSTEM DESCRIPTION

a. The engine immobiliser system determines whether or not to disable starting of the SFI system*1 or ECD system*2 based on a comparison of the key ID code and the vehicle pre-registered code. The engine immobiliser system compares the vehicle certification ECU (smart key ECU assembly) pre-registered ID code with the key-embedded transponder chip ID code. If the ID codes do not match, the engine immobiliser system activates and the SFI system*1 or ECD system*2 cannot be started. The certification ECU (smart key ECU assembly) manages communication with the SFI system*1 or ECD system*2, main body ECU, steering lock ECU and ID code box (immobiliser code ECU). When the ID codes of the transponder chip and certification ECU (smart key ECU assembly) match, the certification ECU (smart key ECU assembly) authorizes the starting of the SFI system*1 or ECD system*2.

HINT:

- ***1: for 1GR E E R E**
- **for 1 D T**

FUNCTION OF MAIN COMPONENT

Component	Outline
Transponder key coil/amplifier (built into engine switch)	Receives the key ID code, amplifies the ID code and outputs it to the certification ECU (smart key ECU assembly).
Indoor electrical key oscillator	Transmits the key detection signals within the detection area in the vehicle interior upon receiving a transmission request signal from the certification ECU (smart key ECU assembly). The certification ECU (smart key ECU assembly) request signal is activated when the key is brought into the vehicle interior and the engine switch is pushed.
Door control receiver	Receives the ID code from the key in the actuation area and transmits it to the certification ECU (smart key ECU assembly).
Security indicator light	Illuminates or starts blinking. The Illumination is controlled by the certification ECU (smart key ECU assembly).

SYSTEM FUNCTION

a. Using the entry function (for Manual Transmission)

i. When the driver (or an occupant) gets in the vehicle and depresses the brake pedal and clutch pedal while carrying the key, the main body ECU recognizes that the brake pedal and clutch pedal have been depressed and sends a key certification request signal to the certification ECU (smart key ECU assembly). Then the certification ECU (smart key ECU assembly) generates a request signal and sends it to the indoor electrical key oscillator. When the request signal is received, the indoor electrical key oscillator sends another request signal in order to detect whether the key is inside the vehicle. When the key receives this request signal, it sends back an ID code which includes a response code. The ID code sent from the key is sent to the certification ECU (smart key ECU assembly) via the door control receiver. When the ID code is received, the certification ECU (smart key ECU assembly) analyzes the code. If the certification result is normal, the certification ECU (smart key ECU assembly) sends a key certification compatible response signal to the main body ECU. At this time, the engine switch indicator illuminates in green. When the indicator illuminates in green and the driver presses the engine switch, the main body ECU recognizes the engine start signal, changes the ACC relay to on, and changes the IG1 and IG2 relays to on in that order after 0.025 seconds. At this time, the certification ECU (smart key ECU assembly) confirms that the power source mode has changed, and sends a steering unlock command signal to the main body ECU. After this signal is received, the main body ECU supplies the steering lock actuator with power. Then (via the ID code box (immobiliser code ECU)) the steering lock ECU confirms that the certification ECU (smart key ECU assembly) is the proper ECU, and drives the steering actuator motor until the steering lock is unlocked. After the steering lock is unlocked, the steering lock ECU sends an unlock completion signal to the certification ECU (smart key ECU assembly) and main body ECU. When this signal is received, the certification ECU (smart key ECU assembly) sends an immobiliser unset command signal to the ID code box (immobiliser code ECU). Once this signal is received, the ID code box (immobiliser code ECU) sends an immobiliser unset command signal to the SFI system*1 or ECD system*2 after confirming that the certification ECU (smart key ECU assembly) is the proper ECU. Then the certification ECU (smart key ECU assembly) sends a security indicator light off signal to the clock*3 or multi-display*4.

HINT:

***1: for 1GR E E R E**
for 1 D T
*** : o M lti i play**
*** : M lti i play**

. Using the entry function (for Automatic Transmission)

i. When the driver (or an occupant) gets in the vehicle and depresses the brake pedal while carrying the key, the main body ECU recognizes that the brake pedal has been depressed and sends a key certification request signal to the certification ECU (smart key ECU assembly). Then the certification ECU (smart key ECU assembly) generates a request signal and sends it to the indoor electrical key oscillator. When the request signal is received, the indoor electrical key oscillator sends another request signal in order to detect whether the key is inside the vehicle. When the key receives this request signal, it sends back an ID code which includes a response code. The ID code sent from the key is sent to the certification ECU (smart key ECU assembly) via the door control receiver. When the ID code is received, the certification ECU (smart key ECU assembly) analyzes the code. If the certification result is normal, the certification ECU (smart key ECU assembly) sends a key certification compatible response signal to the main body ECU. At this time, the engine switch indicator illuminates in green. When the indicator illuminates in green and the driver presses the engine switch, the main body ECU recognizes the engine start signal, changes the ACC relay to on, and changes the IG1 and IG2 relays to on in that order after 0.025 seconds. At this time, the certification ECU (smart key ECU assembly) confirms that the power source mode has changed, and sends a steering unlock command signal to the main body ECU. After this signal is received, the main body ECU supplies the steering lock actuator with power. Then (via the ID code box (immobiliser code ECU)) the steering lock ECU confirms that the certification ECU (smart key ECU assembly) is the proper ECU, and drives the steering actuator motor until the steering lock is unlocked. After the steering lock is unlocked, the steering lock ECU sends an unlock completion signal to the certification ECU (smart key ECU assembly) and main body ECU. When this signal is received, the certification ECU (smart key ECU assembly) sends an immobiliser unset command signal to the ID code box (immobiliser code ECU). Once this signal is received, the ID code box (immobiliser code ECU) sends an immobiliser unset command signal to the SFI system*1 or ECD system*2 after confirming that the certification ECU (smart key ECU assembly) is the proper ECU. Then the certification ECU (smart key ECU assembly) sends a security indicator light off signal to the clock*3 or multi-display*4.

HINT:

***1: for 1GR E E R E**
for 1 D T
*** : o M lti i play**
*** : M lti i play**

c. Not using the entry function (when battery is depleted, transmitter is affected by wave noise, etc.) (for Manual Transmission)

i. When the driver is sitting in the vehicle while carrying the key and the brake pedal and the clutch pedal are depressed, the main body ECU recognizes that the stop light switch is on and sends a key confirmation request signal to the certification ECU (smart key ECU assembly). Upon receipt of this signal, the certification ECU (smart key ECU assembly) drives the motor of the engine switch built-in immobiliser amplifier. At this time, the engine switch outputs an RF (Radio Frequency) wave communication signal. If the driver holds the key up to the engine switch at this time, the key receives the immobiliser RF (Radio Frequency) wave signal and responds by sending a radio wave signal. When the engine switch receives the radio wave signal from the key, it duplicates the signal and sends an ID code to the certification ECU (smart key ECU assembly). Upon receipt of the ID code, the code is analyzed. If the certification passes, a key certification pass response signal is sent to the main body ECU while simultaneously sending a sound buzzer request signal to the meter ECU. When the main body ECU receives this signal, the ACC relay is switched on and the IG1 and IG2 relays are switched on in sequence after 0.025 seconds. At this time, the engine switch indicator illuminates in green. Then the certification ECU (smart key ECU assembly) checks that the power source mode has been changed and sends a steering lock command signal to the main body ECU. After receiving this signal, the main body ECU supplies power to the steering lock actuator. Then (via the ID code box (immobiliser code ECU)) the steering lock ECU confirms that the certification ECU (smart key ECU assembly) is certified and drives the steering actuator motor until the steering lock is unlocked. After unlocking the steering lock, an unlock completed signal is sent to the certification ECU (smart key ECU assembly). Upon receipt of this signal, the certification ECU (smart key ECU assembly) sends an unset command signal to the ID code box (immobiliser code ECU). Once this signal is received, the ID code box (immobiliser code ECU) confirms that the certification ECU (smart key ECU assembly) is certified, sends an immobiliser unset command signal to the SFI system*1 or ECD system*2, and then the certification ECU (smart key ECU assembly) sends a security indicator light off signal to the clock*3 or multi-display*4.

HINT:

***1: for 1GR E E R E**
for 1 D T
*** : o M lti i play**
*** : M lti i play**

. Not using the entry function (when battery is depleted, transmitter is affected by wave noise, etc.) (for Automatic Transmission)

i. When the driver is sitting in the vehicle while carrying the key and the brake pedal is depressed, the main body ECU recognizes that the stop light switch is on and sends a key confirmation request signal to the certification ECU (smart key ECU assembly). Upon receipt of this signal, the certification ECU (smart key ECU assembly) drives the motor of the engine switch built-in immobiliser amplifier. At this time, the engine switch outputs an RF (Radio Frequency) wave communication signal. If the driver holds the key up to the engine switch at this time, the key receives the immobiliser RF (Radio Frequency) wave signal and responds by sending a radio wave signal. When the engine switch receives the radio wave signal from the key, it duplicates the signal and sends an ID code to the certification ECU (smart key ECU assembly). Upon receipt of the ID code, the code is analyzed. If the certification passes, a key certification pass response signal is sent to the main body ECU while simultaneously sending a sound buzzer request signal to the meter ECU. When the main body ECU receives this signal, the ACC relay is switched on and the IG1 and IG2 relays are switched on in sequence after 0.025 seconds. At this time, the engine switch indicator illuminates in green. Then the certification ECU (smart key ECU assembly) checks that the power source mode has been changed and sends a steering lock command signal to the main body ECU. After receiving this signal, the main body ECU supplies power to the steering lock actuator. Then (via the ID code box (immobiliser code ECU)) the steering lock ECU confirms that the certification ECU (smart key ECU assembly) is certified and drives the steering actuator motor until the steering lock is unlocked.

After unlocking the steering lock, an unlock completed signal is sent to the certification ECU (smart key ECU assembly). Upon receipt of this signal, the certification ECU (smart key ECU assembly) sends an unset command signal to the ID code box (immobiliser code ECU). Once this signal is received, the ID code box (immobiliser code ECU) confirms that the certification ECU (smart key ECU assembly) is certified, sends an immobiliser unset command signal to the SFI system*1 or ECD system*2, and then the certification ECU (smart key ECU assembly) sends a security indicator light off signal to the clock*3 or multi-display*4.

HINT:

***1: for 1GR E E R E**
for 1 D T
*** : o M lti i play**
*** : M lti i play**

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the engine immobiliser system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK FOR DTC*

a. Check for DTCs and make a note of any codes that are output (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs (Click here). Based on the DTCs output above, try to cause the output of the same SFI system or ECD system DTC, LIN communication system DTC, steering lock system DTC or engine immobiliser system DTC by simulating the symptoms indicated by the DTC.

Result

Result	Proceed to
DTC is not output	A
SFI system (for 1GR-FE) DTC is output	B
SFI system (for 2UZ-FE) DTC is output	C
ECD system (for 1VD-FTV) DTC is output	D
LIN communication system DTC is output	E
Steering lock system DTC is output	F
Engine immobiliser system DTC is output	G

B.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
C.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
D.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
E.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
F.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
G.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the problem symptoms table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → Go to step 6

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Data List/Active Test (Click here)

b. Terminals of ECU (Click here)

NEXT

6.ADJUST, REPAIR OR REPLACE

NEXT

7.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the engine immobiliser system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK FOR DTC*

a. Check for DTCs and make a note of any codes that are output (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs (Click here). Based on the DTCs output above, try to cause the output of the same SFI system or ECD system DTC, LIN communication system DTC, steering lock system DTC or engine immobiliser system DTC by simulating the symptoms indicated by the DTC.

Result

Result	Proceed to
DTC is not output	A
SFI system (for 1GR-FE) DTC is output	B
SFI system (for 2UZ-FE) DTC is output	C
ECD system (for 1VD-FTV) DTC is output	D
SFI system (for 3UR-FE) DTC is output	E
LIN communication system DTC is output	F
Steering lock system DTC is output	G
Engine immobiliser system DTC is output	H

B.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
C.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
D.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
E.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
F.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
G.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)
H.	Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the problem symptoms table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → **Go to step 6**

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Data List/Active Test (Click here)

b. Terminals of ECU (Click here)

NEXT

6.ADJUST, REPAIR OR REPLACE

NEXT

7.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to this system before inspecting the suspected areas below.**

Engine Immobiliser System

Symptom	Suspected Area	See page
Engine does not start	LIN communication system	Click here
	ID code box power source circuit	Click here
	Certification ECU power source circuit	Click here
	Steering lock ECU power source circuit	Click here
	Entry and start system (for Starting function)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
Security indicator light malfunction	Security indicator light circuit	Click here

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to this system before inspecting the suspected areas below.**

Engine Immobiliser System

Symptom	Suspected Area	See page
Engine does not start	LIN communication system	Click here
	ID code box power source circuit	Click here
	Certification ECU power source circuit	Click here
	Steering lock ECU power source circuit	Click here
	Entry and start system (for Starting function)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
Security indicator light malfunction	Security indicator light circuit	Click here

for Preparation Click here

HINT:


- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to this system before inspecting the suspected areas below.**

Engine Immobiliser System

Symptom	Suspected Area	See page
Engine does not start	LIN communication system	Click here
	ID code box power source circuit	Click here
	Certification ECU power source circuit	Click here
	Steering lock ECU power source circuit	Click here
	Entry and start system (for Starting function)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	SFI system (for 3UR-FE)	Click here
Security indicator light malfunction	Security indicator light circuit	Click here

for Preparation Click here

CHECK ENGINE SWITCH

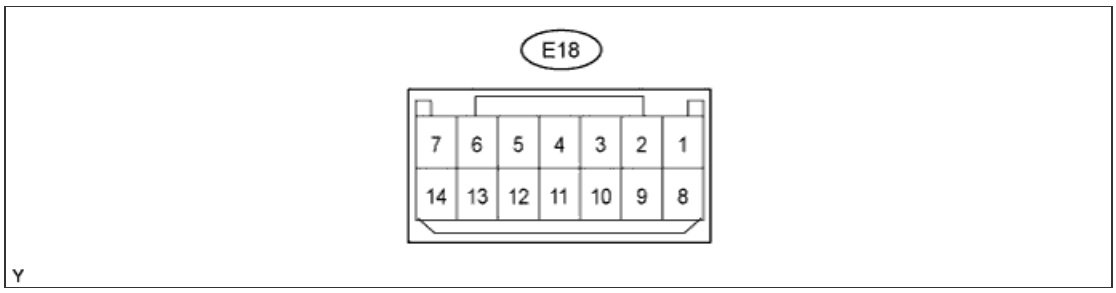

a. Disconnect the E18 switch connector.

b. Measure the resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E18-5 (GND) - Body ground	BR - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E18 switch connector.

d. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E18-8 (AGND) - Body ground	L - Body ground	Ground	Always	Below 1 Ω
E18-14 (VC5) - E18-8 (AGND)	P - L	Power supply	Key not in cabin	Below 1 V
			Engine switch pressed*	4.6 to 5.4 V
E18-10 (CODE) - E18-8 (AGND)	G - L	Demodulated signal of key code output	Key not in cabin	Below 1 V
			Engine switch pressed and key held close to engine switch*	Pulse generation (see waveform 1)
E18-9 (TXCT) - E18-8 (AGND)	SB - L	Key code input signal	Key not in cabin	Below 1 V
			Engine switch pressed and key held close to engine switch*	Pulse generation (see waveform 2)

HINT:

*: Remove the key battery before performing this inspection.

If the result is not as specified, the switch may have a malfunction.


e. Using an oscilloscope, check waveform 1.

Waveform 1 (Reference)

Item	Content
Terminal No. (Symbol)	E18-10 (CODE) - E18-8 (AGND)
Tool Setting	2 V/DIV., 20 msec./DIV.
Condition	Engine switch pressed and key held close to engine switch*

HINT:

*: Remove the key battery before performing this inspection.

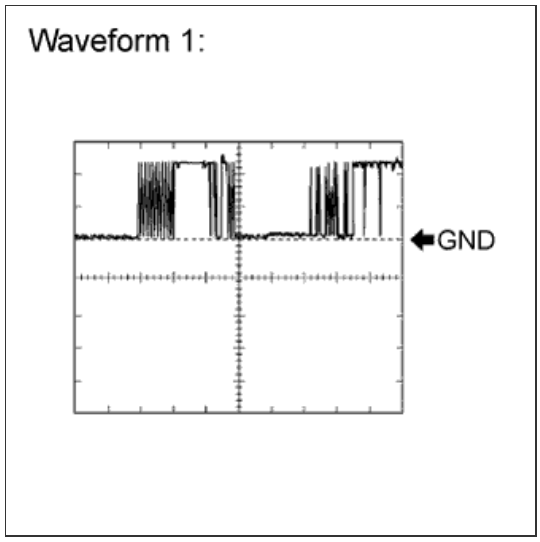


f. sing an oscilloscope, check waveform 2.

Wa form 2 (Reference)


Item	Content
Terminal No. (Symbol)	E18-9 (TXCT) - E18-8 (AGND)
Tool Setting	2 V/DIV., 20 msec./DIV.
Condition	Engine switch pressed and key held close to engine switch*

HINT:

*: Remove the key battery before performing this inspection.

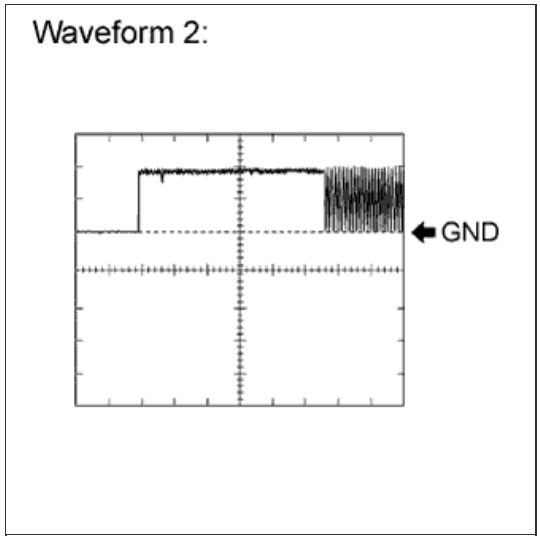

CHECK CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

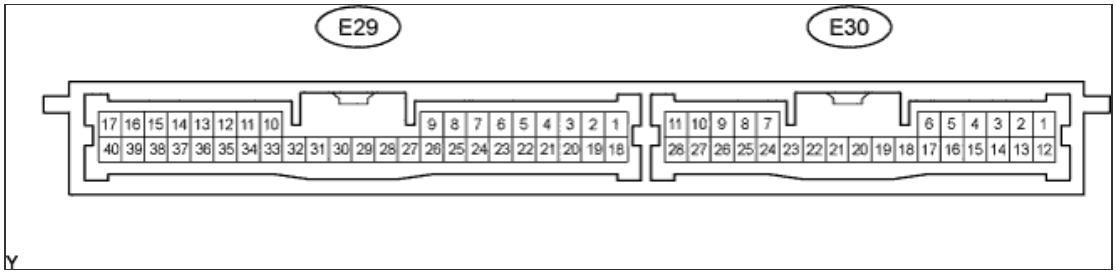

a. Disconnect the E29 ECU connector.

b. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29 -17 (E) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E29-1 (+B) - E29-17 (E)	B - W-B	+B power supply	Always	11 to 14 V
E29-18 (IG) - E29-17 (E)	B - W-B	Ignition power supply	Engine switch off	Below 1 V
			Engine switch on	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E29 ECU connector.

d. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29-40 (AGND) - Body				

ground	L - Body ground	Engine switch ground	Always	Below 1 Ω
E29-30 (VC5) - E29-40 (AGND)	P - L	Engine switch power supply	Key not in cabin	Below 1 V
			Engine switch pressed*	4.6 to 5.4 V
E29-9 (CODE) - E29-40 (AGND)	G- L	Engine switch CODE input	Key not in cabin	Below 1 V
			Engine switch pressed and key held close to engine switch*	Pulse generation (see waveform 1)
E29-8 (TXCT) - E29-40 (AGND)	SB - L	Engine switch TX output	Key not in cabin	Below 1 V
			Engine switch pressed and key held close to engine switch*	Pulse generation (see waveform 2)

HINT:

*: Remove the key battery before performing this inspection.

If the result is not as specified, the ECU may have a malfunction.


e. Using an oscilloscope, check waveform 1.

Waveform 1 (Reference)

Item	Content
Terminal No. (Symbol)	E29-9 (CODE) - E29-40 (AGND)
Tool Setting	2 V/DIV., 20 msec./DIV.
Condition	Engine switch pressed and key held close to engine switch*

HINT:

*: Remove the key battery before performing this inspection.

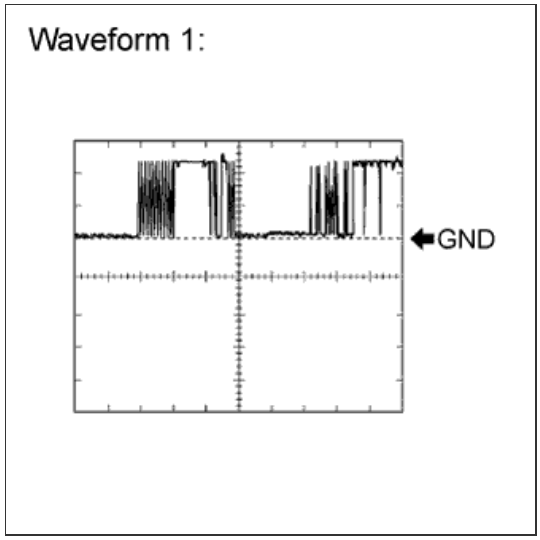


f. Using an oscilloscope, check waveform 2.

Waveform 2 (Reference)


Item	Content
Terminal No. (Symbol)	E29-8 (TXCT) - E29-40 (AGND)
Tool Setting	2 V/DIV., 20 msec./DIV.
Condition	Engine switch pressed and key held close to engine switch*

HINT:

*: Remove the key battery before performing this inspection.

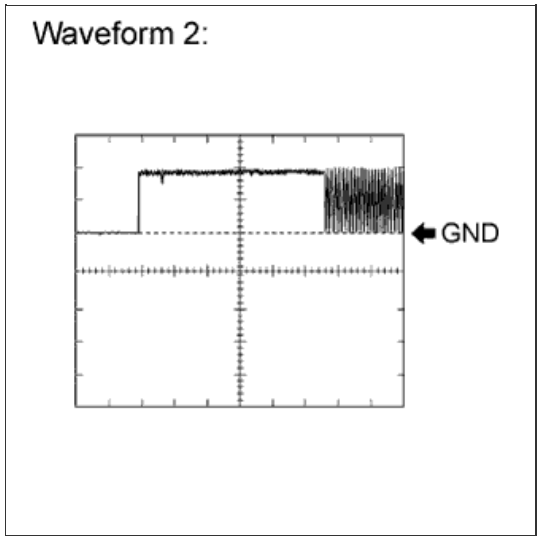

CHECK IMMOBILISER COMMUNICATION BETWEEN IMMOBILISER COIL AND ECU

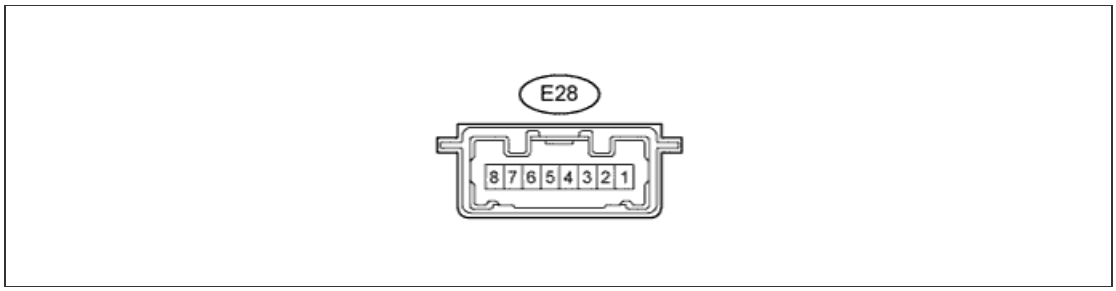

a. Disconnect the E28 box connector.

b. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E28-8 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E28-1 (+B) - E28-8 (GND)	B - W-B	+B power supply	Always	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E28 box connector.

d. Measure the voltage according to the value(s) in the table below.


Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E28-5 (EFII) - E28-8 (GND)	W - W-B	ECM input signal	Engine switch off	Below 1 V
			Engine switch on (IG)	Pulse generation (see waveform 1)
E28-6 (EFIO) - E28-8 (GND)	R - W-B	ECM output signal	Engine switch off	Below 1 V
			Engine switch on (IG)	Pulse generation (see waveform 2)

If the result is not as specified, the ID code box (immobiliser code ECU) may have a malfunction.

e. Using an oscilloscope, check waveform 1.

Waveform 1 (Reference)


Item	Content
Terminal No. (Symbol)	E28-5 (EFII) - E28-8 (GND)
Tool Setting	10 V/DIV., 100 msec./DIV.
Condition	Engine switch on (IG)

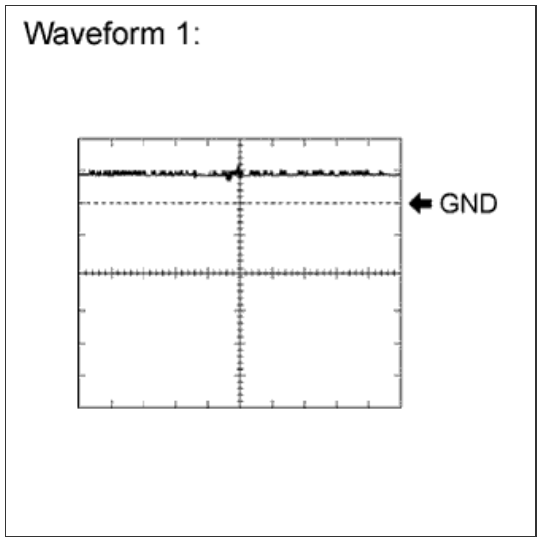


f. Using an oscilloscope, check waveform 2.

Waveform 2 (Reference)

Item	Content
Terminal No. (Symbol)	E28-6 (EFIO) - E28-8 (GND)
Tool Setting	10 V/DIV., 100 msec./DIV.
Condition	Engine switch on (IG)

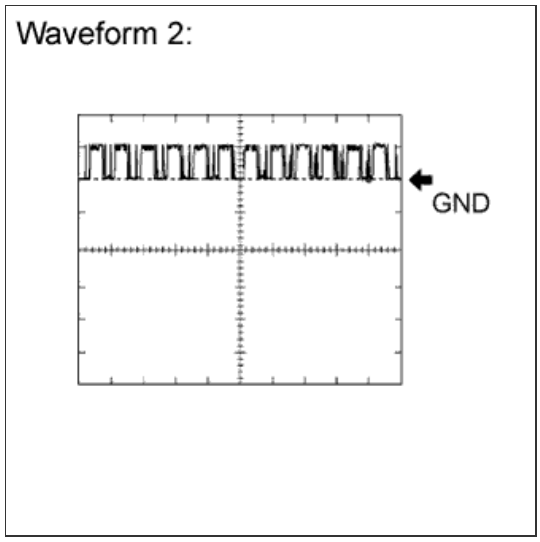

CHECK MAIN BO Y ECU (COWL SI E UNCTION BLOCK LH)

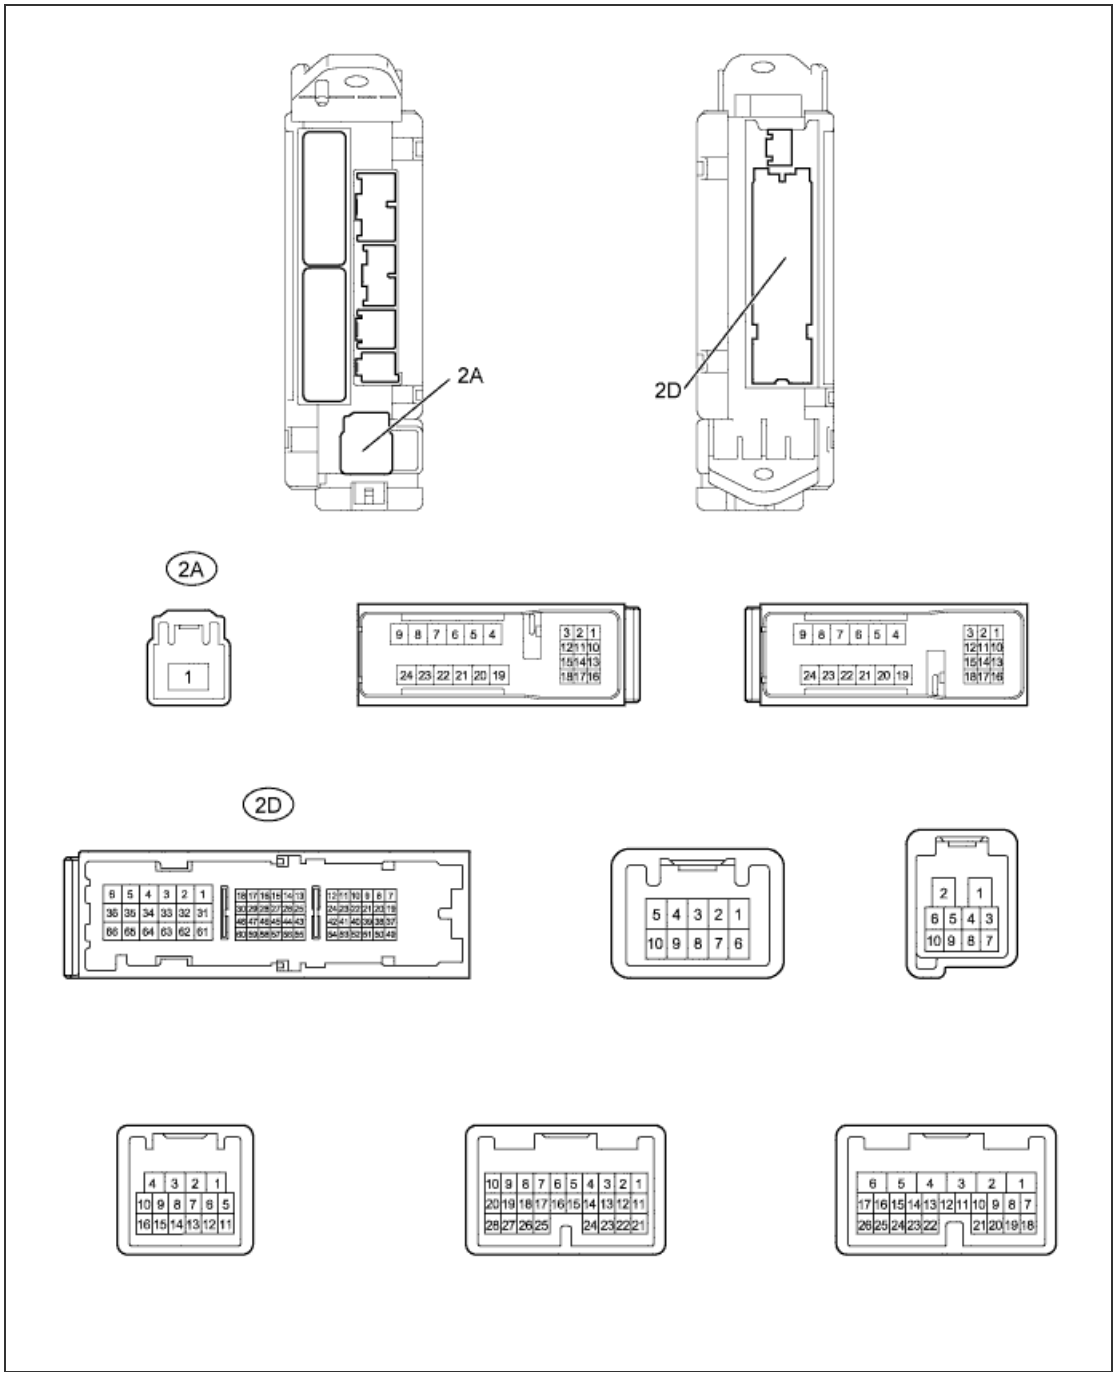


a. Disconnect the 2D and 2A ECU connectors.

b. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
2D-62 (GND2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
2D-8 (ACC) - 2D-62 (GND2)	GR - W-B	ACC power supply	Engine switch off	Below 1 V
			Engine switch on (ACC)	11 to 14 V
2A-1 (IG) - 2D-62 (GND2)	B - W-B	IG power supply	Engine switch off	Below 1 V
			Engine switch on (IG)	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side.

CHECK STEERING LOCK ACTUATOR (STEERING LOCK ECU)

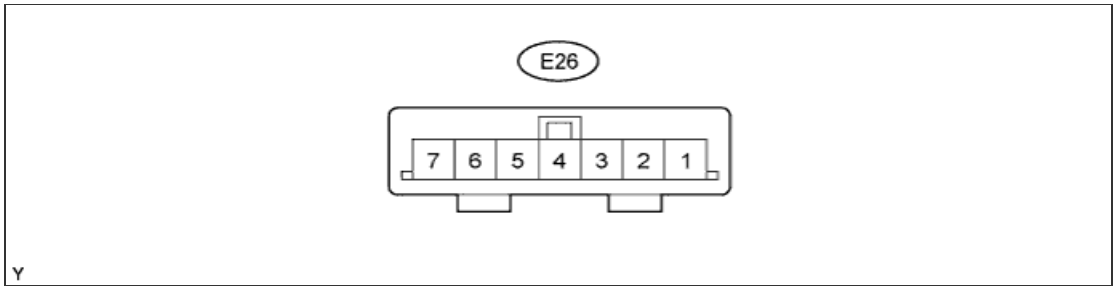

a. Disconnect the E26 ECU connector.

b. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E26-2 (SGND) - Body ground	BR - Body ground	Ground	Always	Below 1 Ω
E26-1 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E26-7 (B) - Body ground	R - Body ground	+B power supply	Always	11 to 14 V
E26-6 (IG2) - Body ground	B - Body ground	Ignition power supply	Engine switch off	Below 1 V
			Engine switch on (IG)	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side.

for Preparation Click here

CHECK DTC

HINT:

- **When using the intelligent tester with the engine switch off to troubleshoot: Connect the intelligent tester to the vehicle, and turn a courtesy light switch on and off at 1.5 second intervals until communication between the intelligent tester and vehicle begins.**
- **Refer to the intelligent tester operator manual for further details.**

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body or Powertrain / (desired system) / Trouble Codes.

e. Check the DTCs.

CLEAR DTC

HINT:

- **When using the intelligent tester with the engine switch off to troubleshoot: Connect the intelligent tester to the vehicle, and turn a courtesy light switch on and off at 1.5 second intervals until communication between the intelligent tester and vehicle begins.**
- **Refer to the intelligent tester operator manual for further details.**

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body or Powertrain / (desired system) / Trouble Codes.

e. Clear the DTCs.

for Preparation Click here

READ DATA LIST

HINT:

Using the intelligent tester to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Entry&Start / Data List.

e. According to the display on the intelligent tester, read the Data List.

Entry&Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Ignition Switch	Engine switch on (IG) signal / ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-
#Codes	Number of trouble codes / Min: 0, Max: 255	-	-
Immobiliser	Engine immobiliser system status / Set or Unset	Set: Key not in cabin Unset: Key in cabin	-
Master Key	Master key code signal / Match or No Match	Match: Master key code is sent No Match: Unmatched master key code sent	-
BCC Malfunction	Transponder chip signal / OK or NG	OK: Correct data sent NG: Incorrect data sent	-
Abnormal Status	Transponder chip data / OK or NG	OK: Data OK NG: Data error	-
Different Encrypt Code	Transponder chip signal / OK or NG	OK: Correct data sent NG: Incorrect data sent	-
Different Serial Number	Transponder chip signal / OK or NG	OK: Correct data sent NG: Incorrect data sent	-
Frame Error	Transponder chip signal / OK or NG	OK: Correct data sent NG: Incorrect data sent	-
Response	Transponder chip signal / OK or NG	OK: Correct data sent NG: Incorrect data sent	-
ID-BOX Sleep Condition	ID code box condition / Yes or No	Yes: ID code box in sleep condition No: ID code box not in sleep condition	-
ID-BOX Start Condition	ID code box condition / Yes or No	Yes: ID code box sends wake up signal No: ID code box does not send wake up signal	-
Engine Start Request	ID code box start request condition / OK or NG	OK: Start request condition signal received (past) NG: Start request condition signal not received (past)	-
S Code Check	S code verification result / OK or NG	OK: Verification confirmed NG: Verification not confirmed	-
L Code Check	L code verification result / OK or NG	OK: Verification confirmed NG: Verification not confirmed	-
Unlock Request Receive	Steering unlock command reception status / OK or NG	OK: Steering unlock request received NG: Steering unlock request not received	-
Lock Request Receive	Steering lock command reception status / OK or NG	OK: Steering lock request received NG: Steering lock request is not received	-

S Code Check (Past)	S code verification result (past) / OK or NG	OK: Verification confirmed (past) NG: Verification not confirmed (past)	-
L Code Check (Past)	L code verification result (past) / OK or NG	OK: Verification confirmed (past) NG: Verification not confirmed (past)	-
EFI Code Receive	SFI*1 or ECD*2 code receive (when DTC stored) / OK or NG	OK: SFI*1 or ECD*2 code received NG: SFI*1 or ECD*2 code not received	-
EFI communication	SFI*1 or ECD*2 communication / OK or NG	OK: SFI*1 or ECD*2 communication normal NG: SFI*1 or ECD*2 communication abnormal	-

HINT:

- ***1: for 1GR-FE, 2UZ-FE**
- ***2: for 1VD-FTV**

PERFORM ACTIVE TEST

HINT:

Using the intelligent tester to perform Active Tests allows relays, VSVs, actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. Performing Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Entry&Start / Active Test.

e. According to the display on the intelligent tester, perform the Active Test.

Entry&Start

Tester Display	Test Part	Control Range	Diagnostic Note
Security Indicator	Security indicator light	ON or OFF	-

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, check the circuit listed for that code in the table below. Then proceed to the "See page" below.

Certification ECU

DTC Code	Detection Item	Trouble Area	See page
B2784	Antenna Coil Open / Short	- Certification ECU (Smart key ECU assembly) - Engine switch	Click here
B278A	Short to GND in Immobiliser System Power Source Circuit	- Harness or connector - Engine switch - Certification ECU (Smart key ECU assembly)	Click here
B2790	ID BOX EEPROM Malfunction	ID code box	Click here

HINT:

The DTCs for the engine immobiliser system are specified above. If other codes are output, check the DTC chart for the hybrid control system.

ECM

DTC Code	Detection Item	Trouble Area	See page
B2799	Engine Immobiliser System Malfunction	- Harness or connector - ECM - ID code box (Immobiliser code ECU)	Click here
B279A	Theft Deterrent System Communication Line High Fixation	- Harness or connector - ID code box (Immobiliser code ECU) - ECM	Click here
B279C	Theft Deterrent System Presence Detection	ECM	Click here

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, check the circuit listed for that code in the table below. Then proceed to the "See page" below.

Certification ECU

DTC Code	Detection Item	Trouble Area	See page
B2784	Antenna Coil Open / Short	- Certification ECU (smart key ECU) - Engine switch	Click here
B278A	Short to GND in Immobiliser System Power Source Circuit	- Harness or connector - Engine switch - Certification ECU (smart key ECU)	Click here
B2790	ID BOX EEPROM Malfunction	ID code box	Click here

HINT:

The DTCs for the engine immobiliser system are specified above. If other codes are output, check the DTC chart for the hybrid control system.

ECM

DTC Code	Detection Item	Trouble Area	See page
B2799	Engine Immobiliser System Malfunction	- Harness or connector - ECM - ID code box (immobiliser code ECU)	Click here
B279A	Theft Deterrent System Communication Line High Fixation	- Harness or connector - ID code box (immobiliser code ECU) - ECM	Click here
B279C	Theft Deterrent System Presence Detection	ECM	Click here

DTC B2784 Antenna Coil Open / Short

for Preparation Click here

DESCRIPTION

This DTC is output when there is an open or short malfunction in the transponder key coil (built into the engine switch).

DTC Code	DTC Detection Condition	Trouble Area
B2784	The antenna coil is open/shorted.	• Certification ECU (Smart key ECU assembly) • Engine switch

INSPECTION PROCEDURE

1.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

2.CHECK FOR DTC

a. Check for DTCs (Click here).

OK:
DTC B2784 is not output.

NG → Go to step 3

OK

USE SIMULATION METHOD TO CHECK (Click here)

3.REPLACE ENGINE SWITCH

a. for 1GR-FE

i. Temporarily replace the engine switch with a new one (Click here).

b. for 2UZ-FE

i. Temporarily replace the engine switch with a new one (Click here).

c. for 1VD-FTV

i. Temporarily replace the engine switch with a new one (Click here).

NEXT

4.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

5.CHECK FOR DTC

a. Recheck for DTCs (Click here).

OK:
DTC B2784 is not output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (ENGINE SWITCH IS DEFECTIVE)

DTC B2799 Engine Immobiliser System Malfunction


for Preparation Click here


DESCRIPTION


This DTC is output when one of the following occurs: 1) the ECM detected errors in its own communications with the ID code box (immobiliser code ECU); 2) the ECM detects errors in the communication lines; or 3) the ECU communication ID between the ID code box (immobiliser code ECU) and ECM is different and an engine start is attempted.
Before troubleshooting for this DTC, make sure no certification ECU DTCs are stored. If stored, troubleshoot the certification ECU DTCs first.

DTC Code	DTC Detection Condition	Trouble Area
B2799	One of following conditions is met: • Error in the communication between the ECM and the ID code box (immobiliser code ECU). • Error in the communication lines. • The communication ID is different during communication with the ID code box (immobiliser code ECU).	• Harness or connector • ECM • ID code box (immobiliser code ECU)

WIRING DIAGRAM

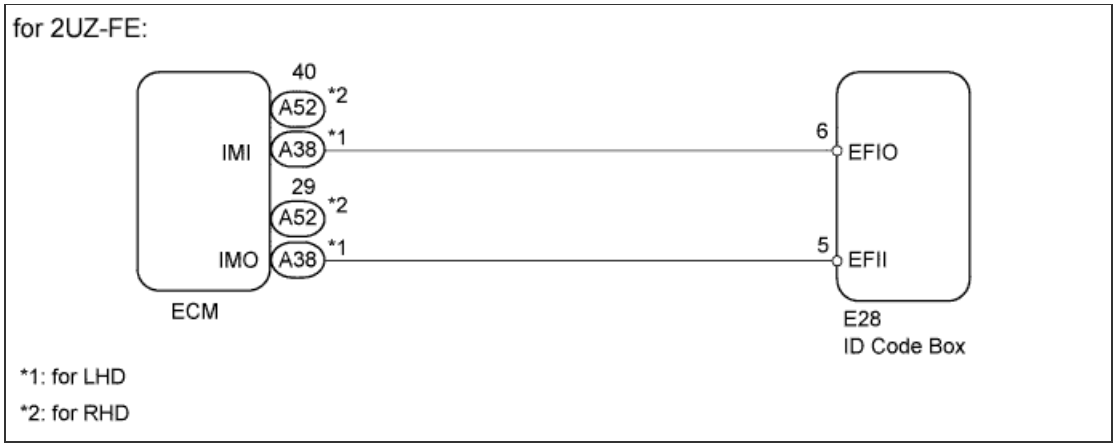

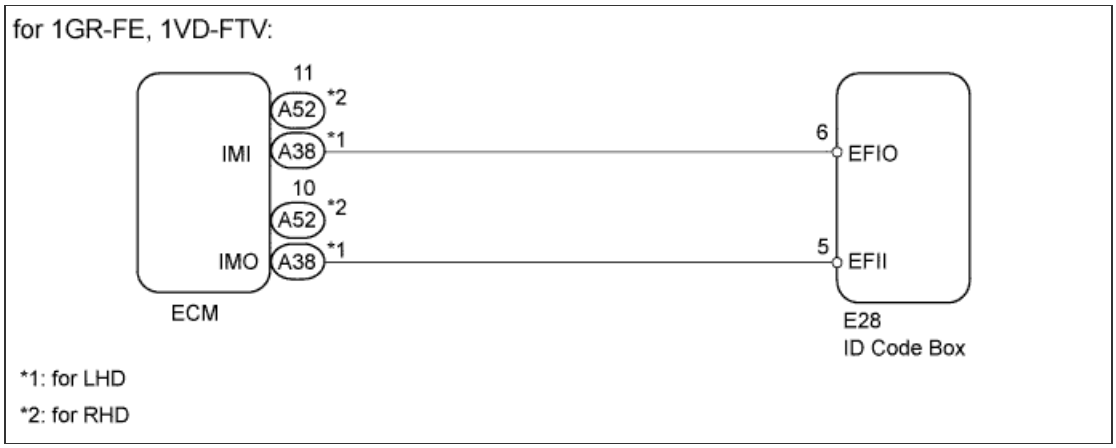

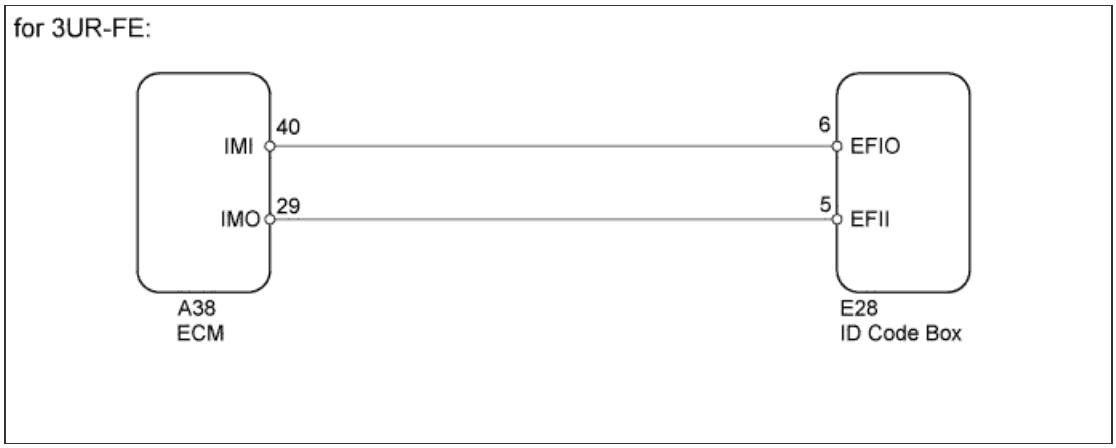

INSPECTION PROCEDURE

1.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

2.CHECK FOR DTC

a. Check for DTCs (Click here).

OK:
DTC B2799 is not output.

NG → **Go to step 3**

OK

USE SIMULATION METHOD TO CHECK (Click here)

3.REREGISTER ECU CODE

a. Reregister the recognition codes in the ECUs.

NEXT

4.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

5.CHECK FOR DTC

a. Check for DTCs (Click here).

OK:
DTC B2799 is not output.

NG → **Go to step 6**

OK

END (RECOGNITION CODE IN ECU IS DEFECTIVE)

6.CHECK CONNECTION OF CONNECTOR

a. Turn the engine switch off.

b. Check that the connectors are properly connected to the ECM and the ID code box.


OK:
Connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

7.CHECK HARNESS AND CONNECTOR (ID CODE BOX (IMMOBILISER CODE ECU) - ECM)

a. Disconnect the E28 box connector.

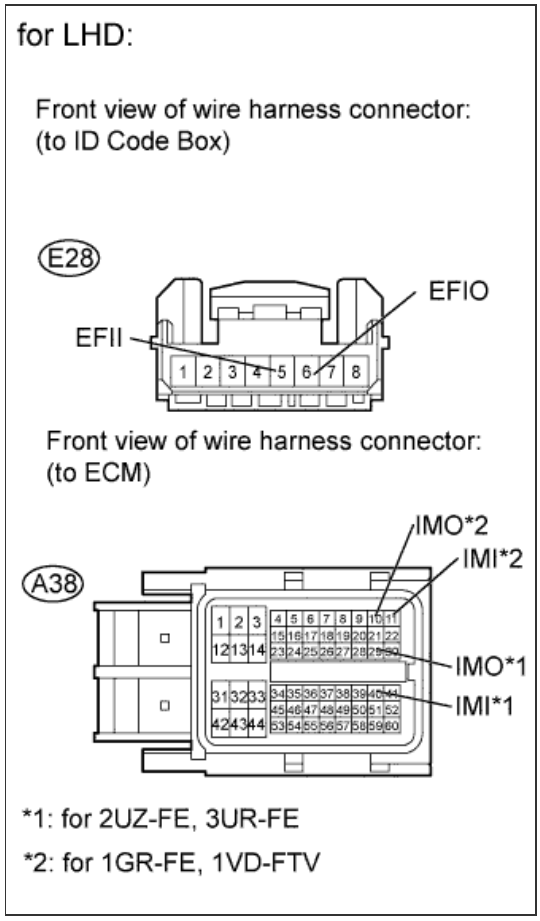

b. Disconnect the A38*1 or A52*2 ECU connector.

HINT:

- ***1: for LHD**
- ***2: for RHD**

c. Measure the resistance according to the value(s) in the table below.

i. for 2UZ-FE

Standard Resistance:

Tester Connection	Condition	Specified Condition
E28-5 (EFII) - A38*1-29 (IMO)	Always	Below 1 Ω
E28-6 (EFIO) - A38*1-40 (IMI)		
E28-5 (EFII) or A38*1-29 (IMO) - Body ground	Always	10 kΩ or higher

E28-6 (EFIO) or A38*1-40 (IMI) - Body ground		
E28-5 (EFII) - A52*2-29 (IMO)	Always	Below 1 Ω
E28-6 (EFIO) - A52*2-40 (IMI)		
E28-5 (EFII) or A52*2-29 (IMO) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) or A52*2-40 (IMI) - Body ground		

INT:

- ***1: for LHD**
- ***2: for RHD**

ii. for 1GR-FE, 1VD-FTV

Standard Resistance:

Tester Connection	Condition	Specified Condition
E28-5 (EFII) - A38*1-10 (IMO)	Always	Below 1 Ω
E28-6 (EFIO) - A38*1-11 (IMI)		
E28-5 (EFII) or A38*1-10 (IMO) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) or A38*1-11 (IMI) - Body ground		
E28-5 (EFII) - A52*2-10 (IMO)	Always	Below 1 Ω
E28-6 (EFIO) - A52*2-11 (IMI)		
E28-5 (EFII) or A52*2-10 (IMO) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) or A52*2-11 (IMI) - Body ground		

HINT:

- ***1: for LHD**
- ***2: for RHD**


iii. for 3UR-FE

Standard Resistance:


Tester Connection	Condition	Specified Condition
E28-5 (EFII) - A38-29 (IMO)	Always	Below 1 Ω
E28-6 (EFIO) - A38-40 (IMI)		
E28-5 (EFII) or A38-29 (IMO) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) or A38-40 (IMI) - Body ground		

for RHD:

Front view of wire harness connector:
(to ID Code Box)

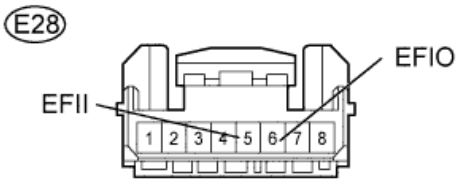

Front view of wire harness connector:
(to ECM)

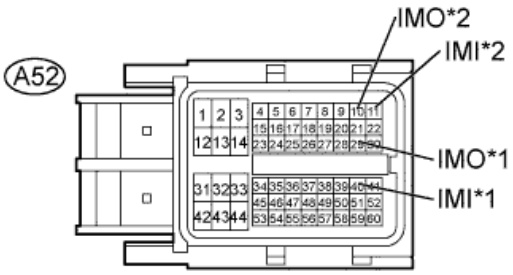

*1: for 2UZ-FE

*2: for 1GR-FE, 1VD-FTV

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.REPLACE ECM

a. for 1GR-FE

i. Temporarily replace the ECM with a new one (Click here).

b. for 2UZ-FE

i. Temporarily replace the ECM with a new one (Click here).

c. for 1VD-FTV

i. Temporarily replace the ECM with a new one (Click here).

d. for 3UR-FE

i. Temporarily replace the ECM with a new one (Click here).

NEXT

9.REGISTER ECU CODE

a. Register the recognition codes in the ECUs.

NEXT

10.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

11.CHECK FOR DTC

a. Check for DTCs (Click here).

OK:
DTC B2799 is not output.

NG → **REPLACE ID CODE BOX (IMMOBILISER CODE ECU)**

OK

END (ECM IS DEFECTIVE)

DTC B2784 Antenna Coil Open / Short

for Preparation Click here

DESCRIPTION

This DTC is output when there is an open or short malfunction in the transponder key coil (built into the engine switch).

DTC Code	DTC Detection Condition	Trouble Area
B2784	The antenna coil is open/shorted.	• Certification ECU (Smart key ECU assembly) • Engine switch

INSPECTION PROCEDURE

1.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

2.CHECK FOR DTC

a. Check for DTCs (Click here).

OK:
DTC B2784 is not output.

NG → Go to step 3

OK

USE SIMULATION METHOD TO CHECK (Click here)

3.REPLACE ENGINE SWITCH

a. for 1GR-FE

i. Temporarily replace the engine switch with a new one (Click here).

b. for 2UZ-FE

i. Temporarily replace the engine switch with a new one (Click here).

c. for 1VD-FTV

i. Temporarily replace the engine switch with a new one (Click here).

. for UR-FE

i. Temporarily replace the engine switch with a new one (Click here).

NEXT

4.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

5.CHECK FOR DTC

a. Recheck for DTCs (Click here).

OK:
DTC B2784 is not output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (ENGINE SWITCH IS DEFECTI E)

DTC B279A Theft Deterrent System Communication Line High Fixation


for Preparation Click here


DESCRIPTION

If the communication line (EFIO-IMI) to the ID code box (immobiliser code ECU) is stuck on HI output, the ECM outputs this DTC.

DTC Code	DTC Detection Condition	Trouble Area
B279A	When the communication line (EFIO-IMI) between the ECM and the ID code box (immobiliser code ECU) is stuck on HI output.	• Harness or connector • ID code box (immobiliser code ECU) • ECM

WIRING DIAGRAM

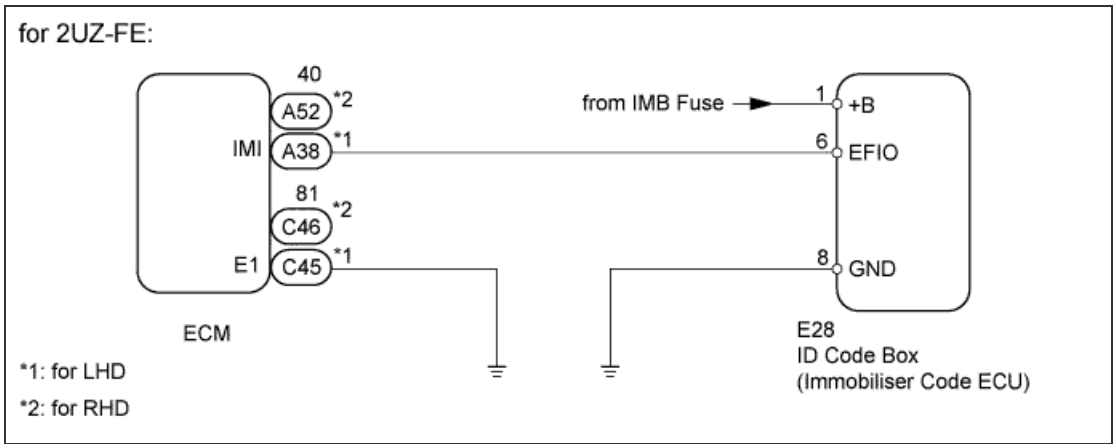

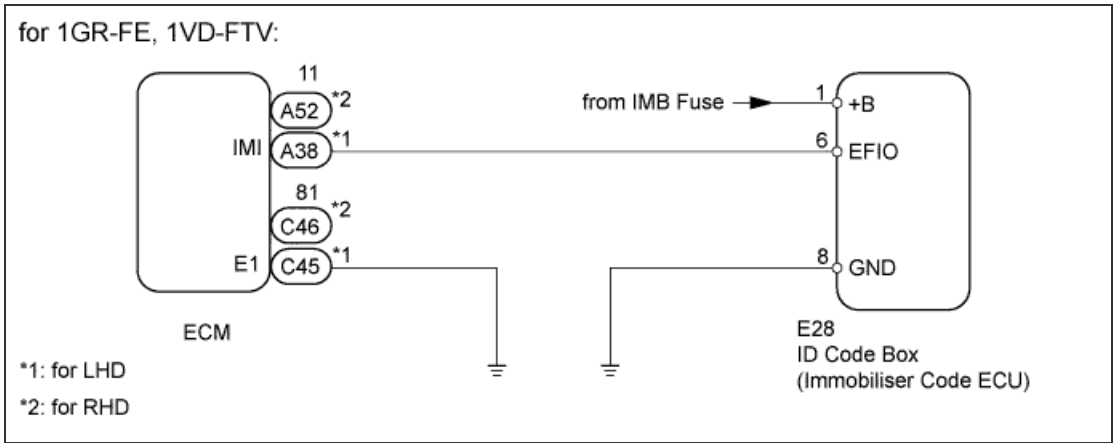

INSPECTION PROCEDURE

1.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

2.CHECK FOR DTC

a. Check for DTCs (Click here).

HINT:

If DTCs other than DTC B279A are output, troubleshoot those DTCs first.

Result

Result	Proceed to


DTC B279A is output	A
DTC B279A and other DTCs are output	B

B → Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)

A

3.CHECK HARNESS AND CONNECTOR (ID CODE BOX (IMMOBILISER CODE ECU) - ECM)

a. Disconnect the E28 box connector.

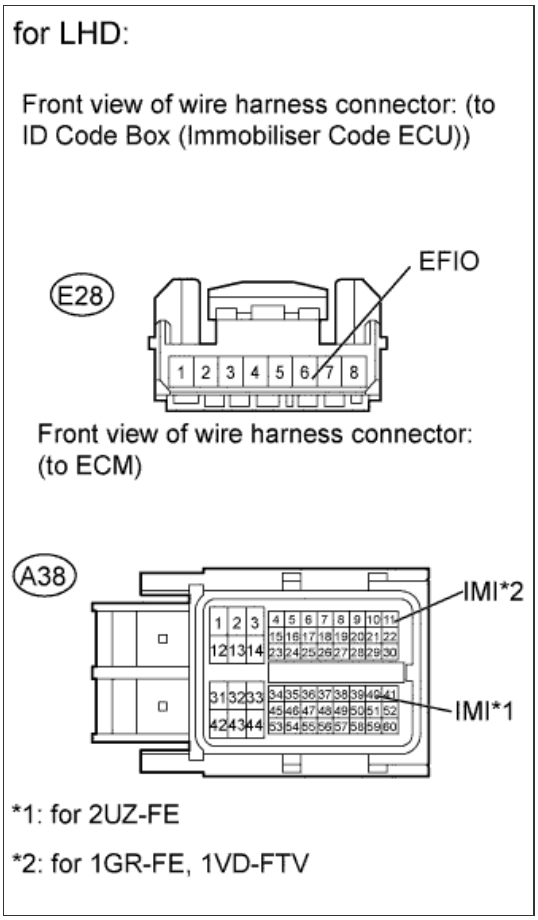

b. Disconnect the A38*1 or A52 ECU connector.

HINT:

- ***1: for LHD**
- ***2: for RHD**

c. Measure the resistance and voltage according to the value(s) in the table below.

i. for 2UZ-FE

Standard Resistance:

Tester Connection	Condition	Specified Condition
E28-6 (EFIO) - A38*1-40 (IMI)	Always	Below 1 Ω
E28-6 (EFIO) or A38*1-40 (IMI) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) - A52*2-40 (IMI)	Always	Below 1 Ω
E28-6 (EFIO) or A52*2-40 (IMI) - Body ground	Always	10 kΩ or higher

HINT:

- ***1: for LHD**
- ***2: for RHD**

Standard Voltage:

Tester Connection	Condition	Specified Condition
E28-6 (EFIO) - Body ground	Always	Below 1 V
A38*1-40 (IMI) - Body ground		
A52*2-40 (IMI) - Body ground		

HINT:

- ***1: for LHD**
- ***2: for RHD**

ii. for 1GR-FE, 1VD-FTV

Standard Resistance:

Tester Connection	Condition	Specified Condition
E28-6 (EFIO) - A38-11 (IMI)	Always	Below 1 Ω
E28-6 (EFIO) or A38-11 (IMI) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) - A52*1-11 (IMI)	Always	Below 1 Ω
E28-6 (EFIO) or A52*2-11 (IMI) - Body ground	Always	10 kΩ or higher

HINT:

- ***1: for LHD**
- ***2: for RHD**

Standard Voltage:


Tester Connection	Condition	Specified Condition
E28-6 (EFIO) - Body ground	Always	Below 1 V
A38*1-11 (IMI) - Body ground		
A52*2-11 (IMI) - Body ground		

HINT:


- ***1: for LHD**
- ***2: for RHD**

for RHD:

Front view of wire harness connector: (to ID Code Box (Immobiliser Code ECU))

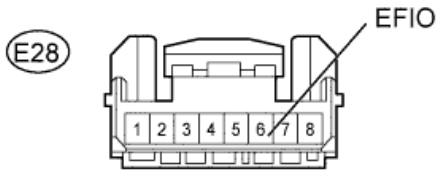

Front view of wire harness connector: (to ECM)

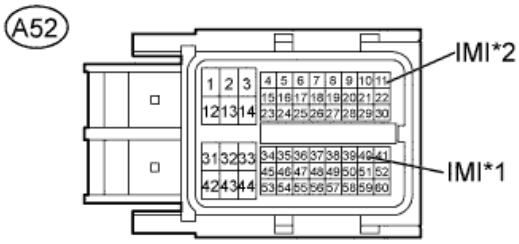


*1: for 2UZ-FE

*2: for 1GR-FE, 1VD-FTV

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK ID CODE BOX (IMMOBILISER CODE ECU) (OUTPUT)

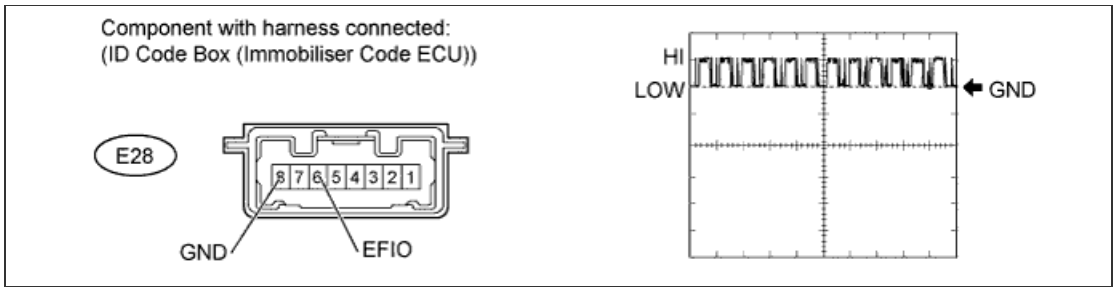

a. Using an oscilloscope, check the waveform.

Measurement Condition

Item	Content
Tester Connection	E28-6 (EFIO) - E28-8 (GND)
Tool Setting	10 V/DIV., 100 msec./DIV.
Condition	Engine switch on (IG)

OK:

Waveform is output normally (see illustration).

Result

Result	Proceed to
NG	A
OK (for 1GR-FE)	B
OK (for 2UZ-FE)	C
OK (for 1VD-FTV)	D

B → REPLACE ECM (Click here)

C → REPLACE ECM (Click here)

D → REPLACE ECM (Click here)

A


5.CHECK ID CODE BOX (IMMOBILISER CODE ECU) (POWER SOURCE AND BODY GROUND)

a. Turn the engine switch on (IG).

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connector	Condition	Specified Condition
E28-1 (+B) - E28-8 (GND)	Always	11 to 14 V

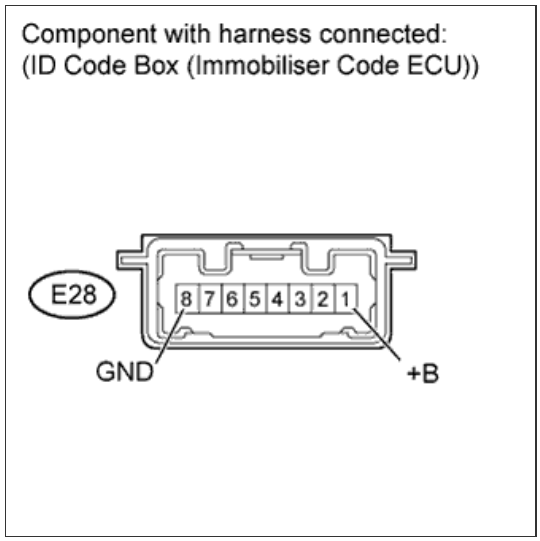

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE ID CODE BOX (IMMOBILISER CODE ECU)

DTC B278A Short to GND in Immobiliser System Power Source Circuit


for Preparation Click here

DESCRIPTION

This DTC is output when the engine switch power source supply line is open or shorted.


DTC Code	DTC Detection Condition	Trouble Area
B278A	The engine switch power source supply line is open or shorted.	• Harness or connector • Engine switch • Certification ECU (Smart key ECU)

WIRING DIAGRAM

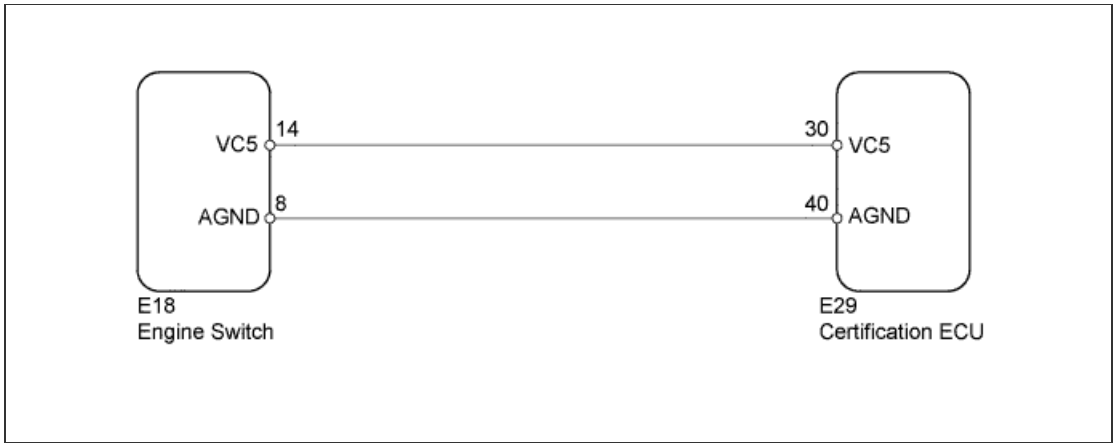

INSPECTION PROCEDURE

1.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU (SMART KEY ECU ASSEMBLY) - ENGINE SWITCH)

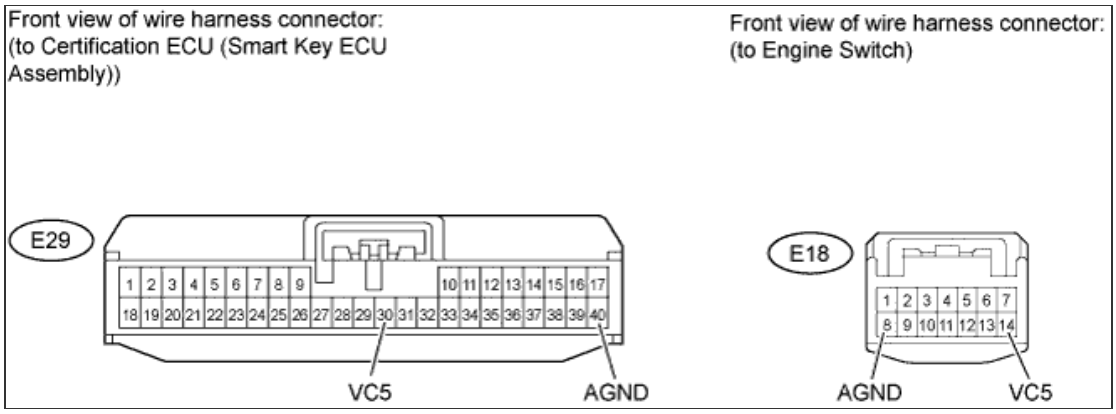

a. Disconnect the E29 ECU connector.

b. Disconnect the E18 switch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E29-30 (VC5) - E18-14 (VC5)	Always	Below 1 Ω
E29-40 (AGND) - E18-8 (AGND)		
E29-30 (VC5) or E18-14 (VC5) - Body ground		

E29-40 (AGND) or E18-8 (AGND) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2.REPLACE ENGINE SWITCH

a. for 1GR-FE

i. Temporarily replace the engine switch with a new one (Click here).

b. for 2UZ-FE

i. Temporarily replace the engine switch with a new one (Click here).

c. for 1VD-FTV

i. Temporarily replace the engine switch with a new one (Click here).

NEXT

3.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

4.CHECK FOR DTC

a. Check for DTCs (Click here).

OK:
DTC B278A is not output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (ENGINE SWITCH IS DEFECTIVE)

DTC B279A Theft Deterrent System Communication Line High Fixation


for Preparation Click here


DESCRIPTION


If the communication line (EFIO-IMI) to the ID code box (immobiliser code ECU) is stuck on HI output, the ECM outputs this DTC.

DTC Code	DTC Detection Condition	Trouble Area
B279A	When the communication line (EFIO-IMI) between the ECM and the ID code box (immobiliser code ECU) is stuck on HI output.	• Harness or connector • ID code box (immobiliser code ECU) • ECM

WIRING DIAGRAM

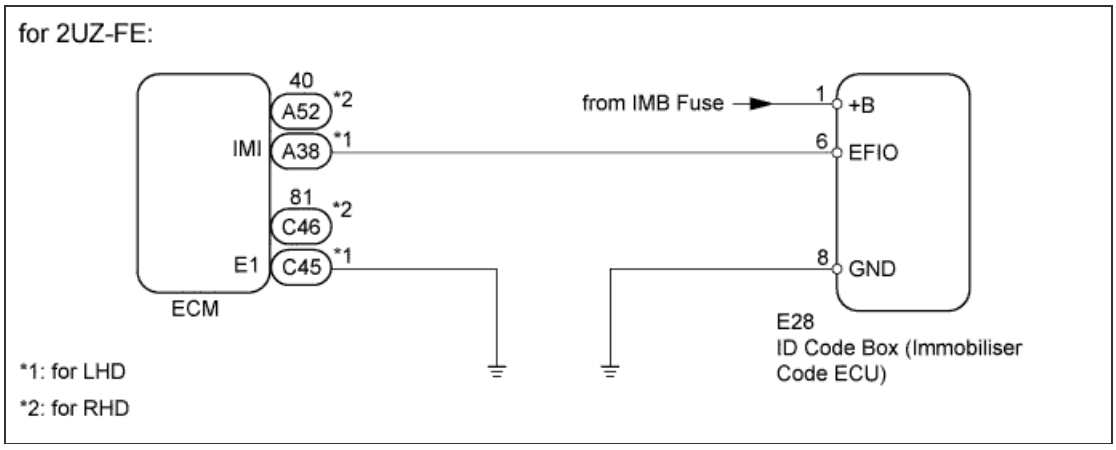

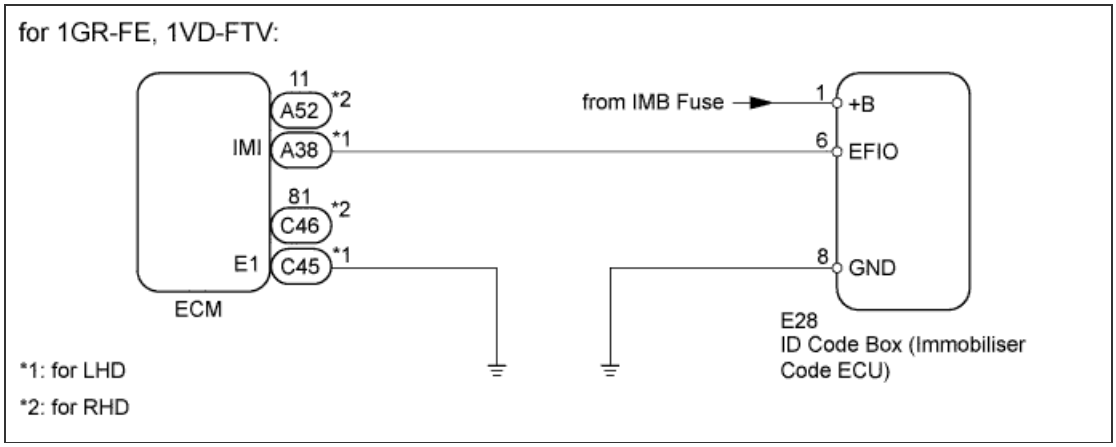

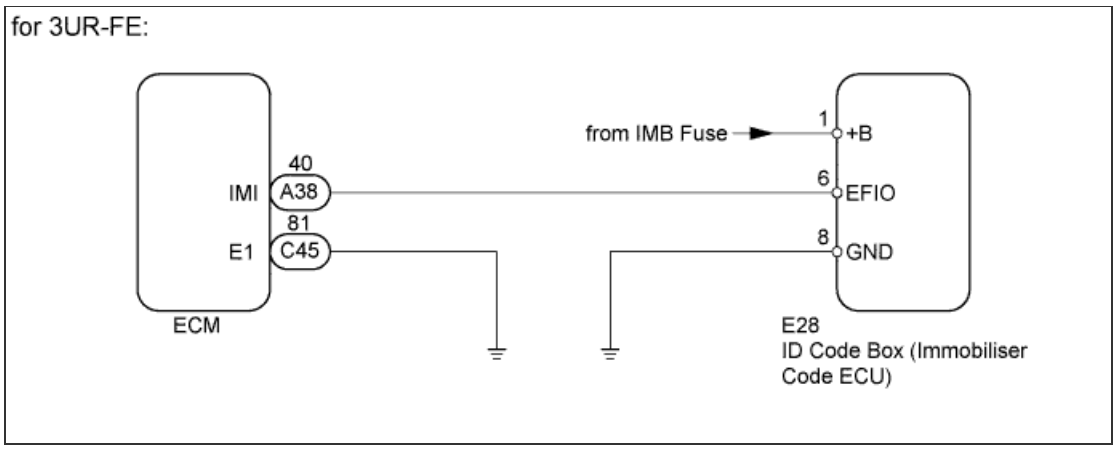

INSPECTION PROCEDURE

1.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

2.CHECK FOR DTC

a. Check for DTCs (Click here).

HINT:

If DTCs other than DTC B279A are output, troubleshoot those DTCs first.

Result


Result	Proceed to
DTC B279A is output	A
DTC B279A and other DTCs are output	B

B → Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)

A

3.CHECK HARNESS AND CONNECTOR (ID CODE BOX (IMMOBILISER CODE ECU) - ECM)

a. Disconnect the E28 box connector.

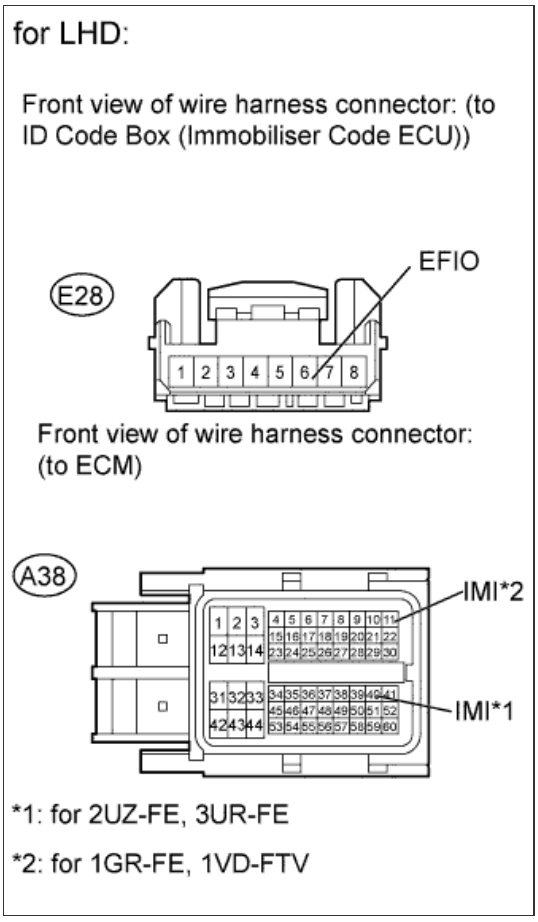

b. Disconnect the A38*1 or A52*2 ECU connector.

HINT:

- ***1: for LHD**
- ***2: for RHD**

c. Measure the resistance and voltage according to the value(s) in the table below.

i. for 2UZ-FE

Stan ar Resistance:

Tester Connection	Condition	Specified Condition
E28-6 (EFIO) - A38*1-40 (IMI)	Always	Below 1 Ω
E28-6 (EFIO) or A38*1-40 (IMI) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) - A52*2-40 (IMI)	Always	Below 1 Ω
E28-6 (EFIO) or A52*2-40 (IMI) - Body ground	Always	10 kΩ or higher

HINT:

- ***1: for LHD**
- ***2: for RHD**

Standard Voltage:

Tester Connection	Condition	Specified Condition
E28-6 (EFIO) - Body ground	Always	Below 1 V
A38*1-40 (IMI) - Body ground		
A52*2-40 (IMI) - Body ground		

HINT:

- ***1: for LHD**
- ***2: for RHD**

ii. for 1GR-FE, 1VD-FTV

Standard Resistance:

Tester Connection	Condition	Specified Condition
E28-6 (EFIO) - A38*1-11 (IMI)	Always	Below 1 Ω
E28-6 (EFIO) or A38*1-11 (IMI) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) - A52*2-11 (IMI)	Always	Below 1 Ω
E28-6 (EFIO) or A52*2-11 (IMI) - Body ground	Always	10 kΩ or higher

HINT:

- ***1: for LHD**
- ***2: for RHD**

Standard Voltage:


Tester Connection	Condition	Specified Condition
E28-6 (EFIO) - Body ground	Always	Below 1 V
A38*1-11 (IMI) - Body ground		
A52*2-11 (IMI) - Body ground		

HINT:


- ***1: for LHD**
- ***2: for RHD**

for RHD:

Front view of wire harness connector: (to ID Code Box (Immobiliser Code ECU))

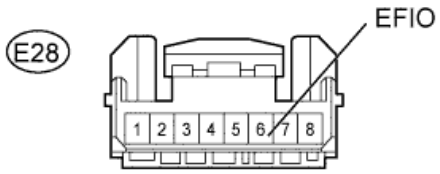

Front view of wire harness connector: (to ECM)

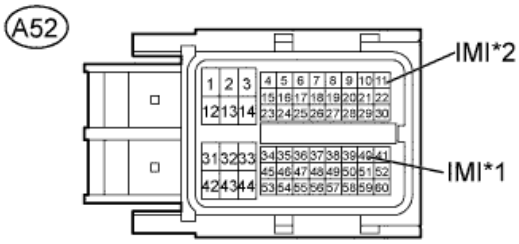

*1: for 2UZ-FE

*2: for 1GR-FE, 1VD-FTV

iii. for 3UR-FE

Stan ar Resistance:

Tester Connection	Condition	Specified Condition
E28-6 (EFIO) - A38-40 (IMI)	Always	Below 1 Ω
E28-6 (EFIO) or A38-40 (IMI) - Body ground	Always	10 kΩ or higher


Standard Voltage:

Tester Connection	Condition	Specified Condition
E28-6 (EFIO) - Body ground	Always	Below 1 V
A38-40 (IMI) - Body ground		

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK ID CODE BOX (IMMOBILISER CODE ECU) (OUTPUT)

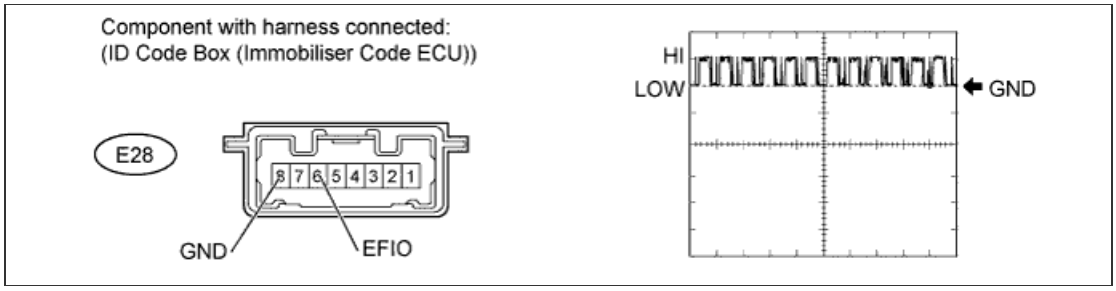

a. Using an oscilloscope, check the waveform.

Measurement Condition

Item	Content
Tester Connection	E28-6 (EFIO) - E28-8 (GND)
Tool Setting	10 V/DIV., 100 msec./DIV.
Condition	Engine switch on (IG)

OK:

Waveform is output normally (see illustration).

Result

Result	Proceed to
NG	A
OK (for 1GR-FE)	B
OK (for 2UZ-FE)	C
OK (for 1VD-FTV)	D
OK (for 3UR-FE)	E

B → REPLACE ECM (Click here)

C → REPLACE ECM (Click here)

D → REPLACE ECM (Click here)

E → REPLACE ECM (Click here)

A

.CHECK ID CODE BO IMMOBILISER CODE ECU) (POWER SOURCE AND BODY GROUND)


a. Turn the engine switch on (IG).

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connector	Condition	Specified Condition
E28-1 (+B) - E28-8 (GND)	Always	11 to 14 V

Component with harness connected:
(ID Code Box (Immobiliser Code ECU))

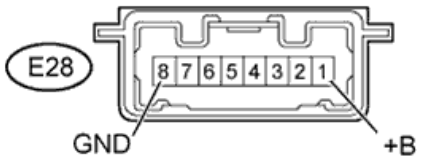

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE ID CODE BOX (IMMOBILISER CODE ECU)

DTC B278A Short to GND in Immobiliser System Power Source Circuit


for Preparation Click here

DESCRIPTION

This DTC is output when the engine switch power source supply line is open or shorted.


DTC Code	DTC Detection Condition	Trouble Area
B278A	The engine switch power source supply line is open or shorted.	• Harness or connector • Engine switch • Certification ECU (Smart key ECU)

WIRING DIAGRAM

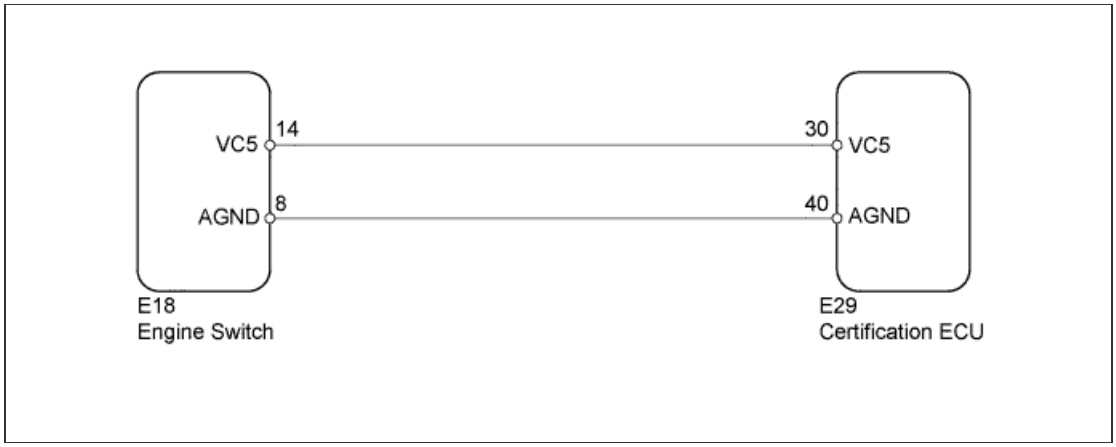

INSPECTION PROCEDURE

1.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU (SMART KEY ECU ASSEMBLY) - ENGINE SWITCH)

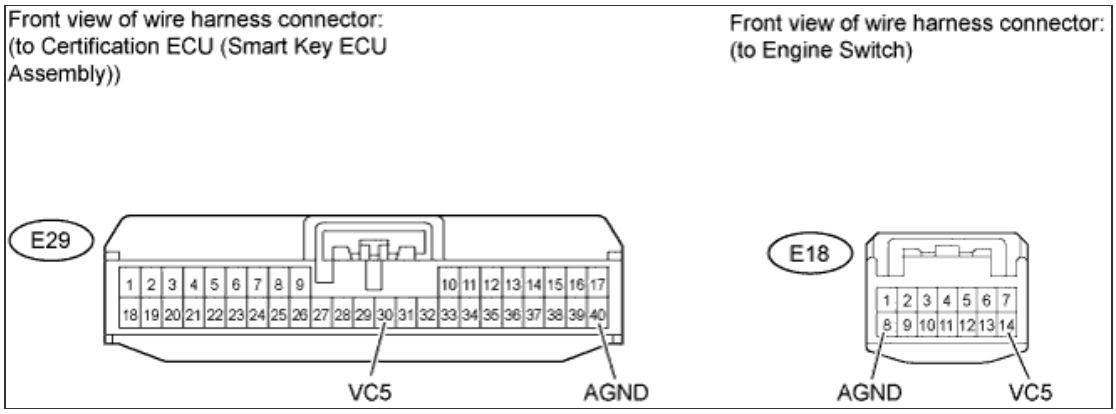

a. Disconnect the E29 ECU connector.

b. Disconnect the E18 switch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E29-30 (VC5) - E18-14 (VC5)	Always	Below 1 Ω
E29-40 (AGND) - E18-8 (AGND)		
E29-30 (VC5) or E18-14 (VC5) - Body ground		

E29-40 (AGND) or E18-8 (AGND) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2.REPLACE ENGINE SWITCH

a. for 1GR-FE

i. Temporarily replace the engine switch with a new one (Click here).

b. for 2UZ-FE

i. Temporarily replace the engine switch with a new one (Click here).

c. for 1VD-FTV

i. Temporarily replace the engine switch with a new one (Click here).

d. for 3UR-FE

i. Temporarily replace the engine switch with a new one (Click here).

NEXT

3.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

4.CHECK FOR DTC

a. Check for DTCs (Click here).

OK:
DTC B278A is not output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (ENGINE SWITCH IS DEFECTIVE)

DTC B279C Theft Deterrent System Presence Detection

for Preparation Click here

DESCRIPTION

If an ECM that is incompatible with the engine immobiliser system is installed, the ECM outputs this DTC.

DTC Code	DTC Detection Condition	Trouble Area
B279C	When an ECM that is incompatible with the engine immobiliser system is installed.	ECM

INSPECTION PROCEDURE

1.REPLACE CURRENT ECM WITH PROPER ECM

a. for 1GR-FE

i. Replace the current ECM with the proper ECM (Click here).

b. for 2UZ-FE

i. Replace the current ECM with the proper ECM (Click here)

c. for 1VD-FTV

i. Replace the current ECM with the proper ECM (Click here)

NEXT

END

DTC B2790 ID BOX EEPROM Malfunction

for Preparation Click here

DESCRIPTION

This DTC is output when the ID code box detects an internal malfunction.

DTC Code	DTC Detection Condition	Trouble Area
B2790	The ID code box detects an internal malfunction.	ID code box

INSPECTION PROCEDURE

1.REPLACE ID CODE BOX

a. Replace the ID code box.

NEXT

2.REGISTER ECU CODE

a. Reregister the recognition codes in the ECUs.

NEXT

END

DTC B279C Theft Deterrent System Presence Detection

for Preparation Click here

DESCRIPTION

If an ECM that is incompatible with the engine immobiliser system is installed, the ECM outputs this DTC.

DTC Code	DTC Detection Condition	Trouble Area
B279C	When an ECM that is incompatible with the engine immobiliser system is installed.	ECM

INSPECTION PROCEDURE

1.REPLACE CURRENT ECM WITH PROPER ECM

a. for 1GR-FE

i. Replace the current ECM with the proper ECM (Click here).

b. for 2UZ-FE

i. Replace the current ECM with the proper ECM (Click here)

c. for 1VD-FTV

i. Replace the current ECM with the proper ECM (Click here)

d. for UR-FE

i. Replace the current ECM with proper ECM (Click here).

NE T

END

DTC B2799 Engine Immobiliser System Malfunction


for Preparation Click here


DESCRIPTION

This DTC is output when one of the following occurs: 1) the ECM detected errors in its own communications with the ID code box (immobiliser code ECU); 2) the ECM detects errors in the communication lines; or 3) the ECU communication ID between the ID code box (immobiliser code ECU) and ECM is different and an engine start is attempted.
Before troubleshooting for this DTC, make sure no certification ECU DTCs are stored. If stored, troubleshoot the certification ECU DTCs first.

DTC Code	DTC Detection Condition	Trouble Area
B2799	One of following conditions is met: • Error in the communication between the ECM and the ID code box (immobiliser code ECU). • Error in the communication lines. • The communication ID is different during communication with the ID code box (immobiliser code ECU).	• Harness or connector • ECM • ID code box (immobiliser code ECU)

WIRING DIAGRAM

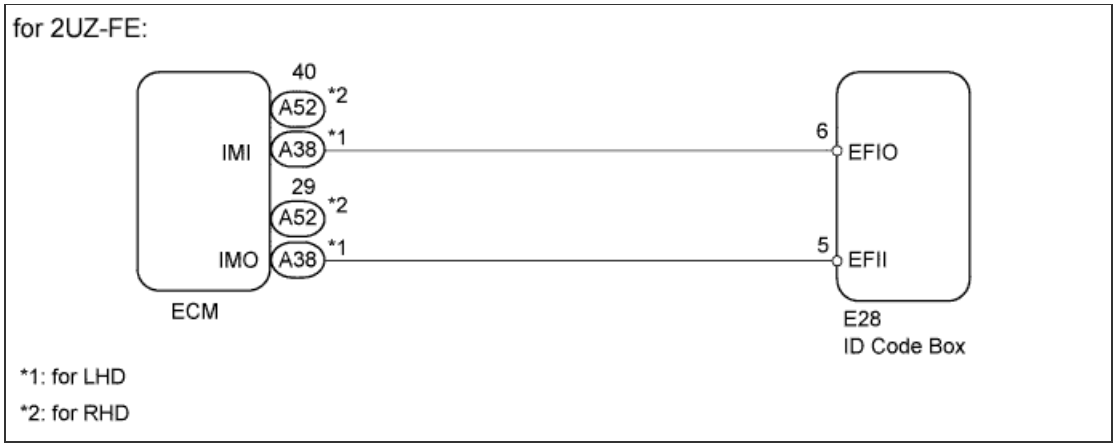

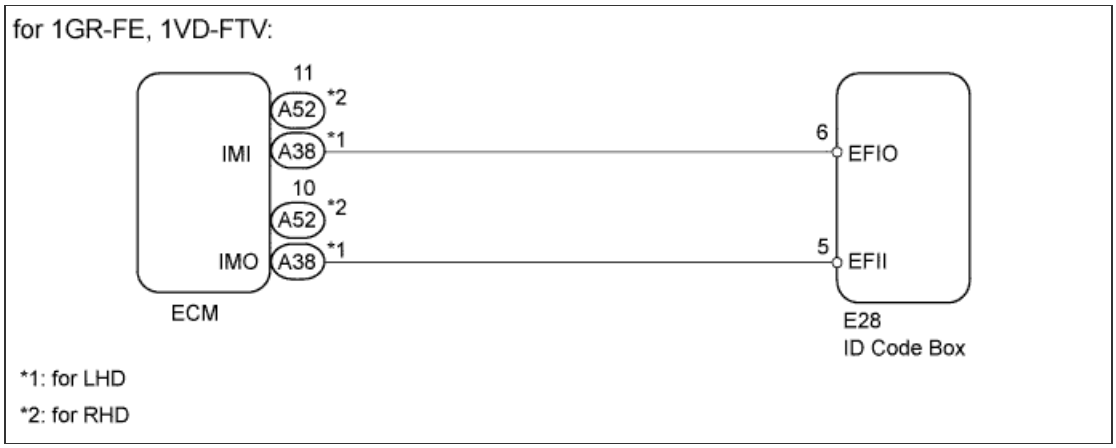

INSPECTION PROCEDURE

1.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

2.CHECK FOR DTC

a. Check for DTCs (Click here).

O
DTC B2799 is not output.

NG → **Go to step 3**

OK

USE SIMULATION METHOD TO CHECK (Click here)

3.REREGISTER ECU CODE

a. Reregister the recognition codes in the ECUs.

NEXT

4.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

5.CHECK FOR DTC

a. Check for DTCs (Click here).

OK:
DTC B2799 is not output.

NG → **Go to step 6**

OK

END (RECOGNITION CODE IN ECU IS DEFECTIVE)

6.CHECK CONNECTION OF CONNECTOR

a. Turn the engine switch off.

b. Check that the connectors are properly connected to the ECM and the ID code box.

OK:
Connectors are properly connected.

NG → **CONNECT CONNECTORS PROPERLY**


OK

7.CHECK HARNESS AND CONNECTOR (ID CODE BOX (IMMOBILISER CODE ECU) - ECM)


a. Disconnect the E28 box connector.

for LHD:

Front view of wire harness connector:
(to ID Code Box)

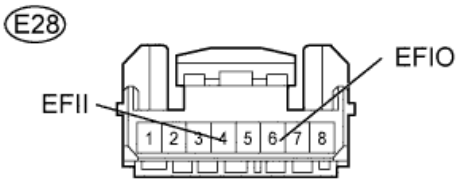

Front view of wire harness connector:
(to ECM)

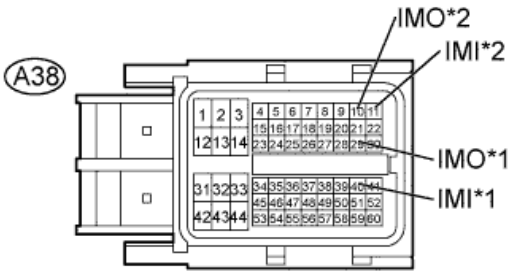

*1: for 2UZ-FE

*2: for 1GR-FE, 1VD-FTV

b. Disconnect the A38*1 or A52*2ECU connector.

HINT:

- ***1: for LHD**
- ***2: for RHD**

c. Measure the resistance according to the value(s) in the table below.

i. for 2UZ-FE

Standard Resistance:


Tester Connection	Condition	Specified Condition
E28-5 (EFII) - A38*1-29 (IMO)	Always	Below 1 Ω
E28-6 (EFIO) - A38*1-40 (IMI)		
E28-5 (EFII) or A38*1-29 (IMO) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) or A38*1-40 (IMI) - Body ground		
E28-5 (EFII) - A52*2-29 (IMO)	Always	Below 1 Ω
E28-6 (EFIO) - A52*2-40 (IMI)		
E28-5 (EFII) or A52*2-29 (IMO) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) or A52*2-40 (IMI) - Body ground		

HINT:


- ***1: for LHD**
- ***2: for RHD**

for RHD:

Front view of wire harness connector:
(to ID Code Box)

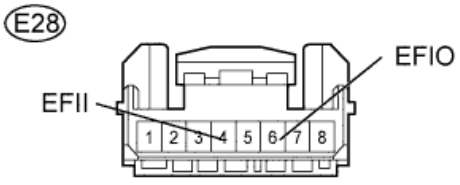

Front view of wire harness connector:
(to ECM)

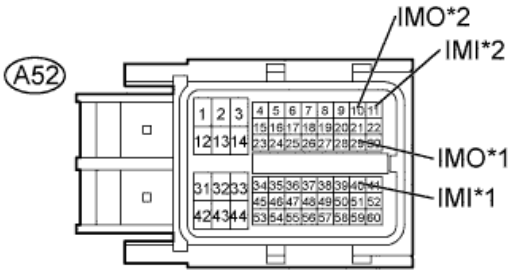

*1: for 2UZ-FE

*2: for 1GR-FE, 1VD-FTV

ii. for 1GR-FE, 1VD-FTV

Stan ard Resistance:

Tester Connection	Condition	Specified Condition
E28-5 (EFII) - A38*1-10 (IMO)	Always	Below 1 Ω
E28-6 (EFIO) - A38*1-11 (IMI)		
E28-5 (EFII) or A38*1-10 (IMO) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) or A38*1-11 (IMI) - Body ground		
E28-5 (EFII) - A52*2-10 (IMO)	Always	Below 1 Ω
E28-6 (EFIO) - A52*2-11 (IMI)		
E28-5 (EFII) or A52*2-10 (IMO) - Body ground	Always	10 kΩ or higher
E28-6 (EFIO) or A52*2-11 (IMI) - Body ground		

HINT:

- ***1: for LHD**
- ***2: for RHD**

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

8.REPLACE ECM

a. for 1GR-FE

i. Temporarily replace the ECM with a new one (Click here).

b. for 2UZ-FE

i. Temporarily replace the ECM with a new one (Click here).

c. for 1VD-FTV

i. Temporarily replace the ECM with a new one (Click here).

NEXT

9.REGISTER ECU CODE

a. Register the recognition codes in the ECUs.

NEXT

10.CLEAR DTC

a. Clear the DTCs (Click here).

NEXT

11.CHECK FOR DTC

a. Check for DTCs (Click here).

O
DTC B2799 is not output.

NG → **REPLACE ID CODE BOX (IMMOBILISER CODE ECU)**

OK


END (ECM IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

This circuit provides power to operate the ID code box.

WIRING DIAGRAM

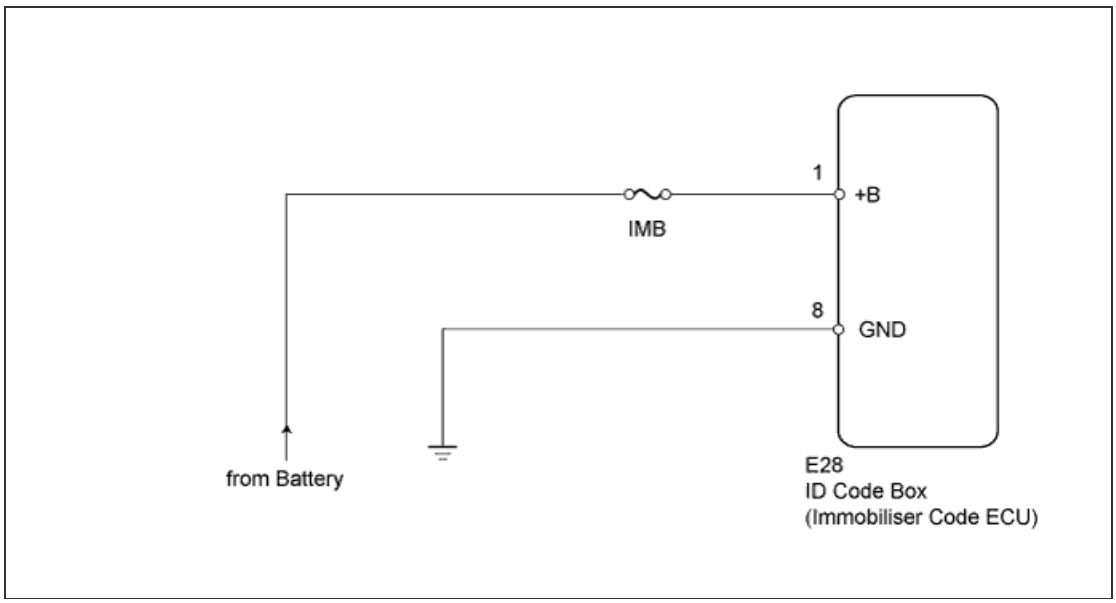

INSPECTION PROCEDURE

1.INSPECT FUSE (IMB)

a. Remove the IMB fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IMB fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (ID CODE BOX (IMMOBILISER CODE ECU) - BATTERY AND BODY GROUND)

a. Disconnect the E28 box connector.


b. Measure the resistance and voltage according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E28-8 (GND) - Body ground	Always	Below 1 Ω

Standard Voltage:

Tester Connection	Condition	Specified Condition
E28-1 (+B) - Body ground	Always	11 to 14 V

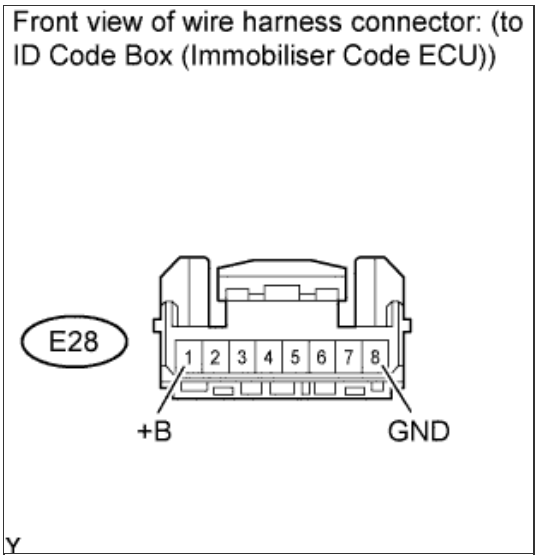

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

DESCRIPTION

This circuit provides power to operate the ID code box.

WIRING DIAGRAM

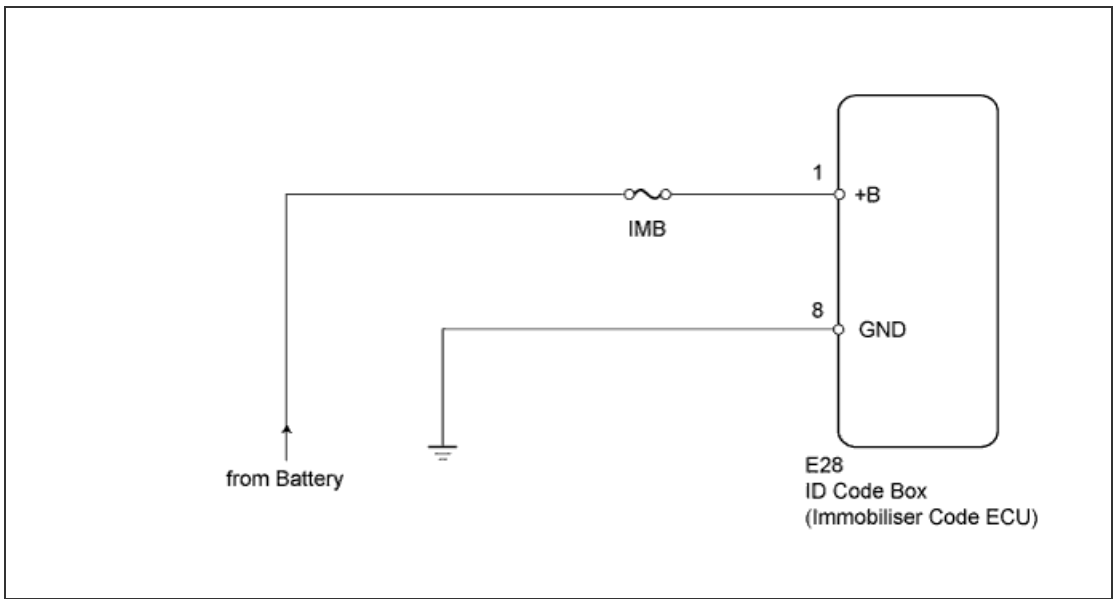

INSPECTION PROCEDURE

1.INSPECT FUSE (IMB)

a. Remove the IMB fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IMB fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (ID CODE BOX (IMMOBILISER CODE ECU) - BATTERY AND BODY GROUND)

a. Disconnect the E28 box connector.


b. Measure the resistance and voltage according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E28-8 (GND) - Body ground	Always	Below 1 Ω

Standard Voltage:

Tester Connection	Condition	Specified Condition
E28-1 (+B) - Body ground	Always	11 to 14 V

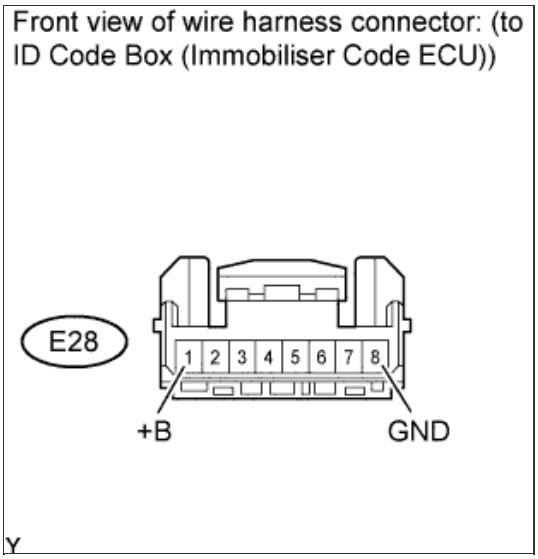

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here


1.NOTICE FOR ARMED STATE


If the vehicle is left in the armed state for an extended period of time or in another condition that causes the battery to be fully depleted, the alarm may sound simultaneously with the recharging of the battery or the replacement of the battery with a new one.* If this occurs, immediately unlock the vehicle's doors through a wireless unlock operation or entry unlock operation to stop the alarm.


HINT:

*: This may occur in the following situation: during active arming mode while in the armed state, the cable of the negative (-) battery terminal is disconnected and reconnected (Click here).

for Preparation Click here

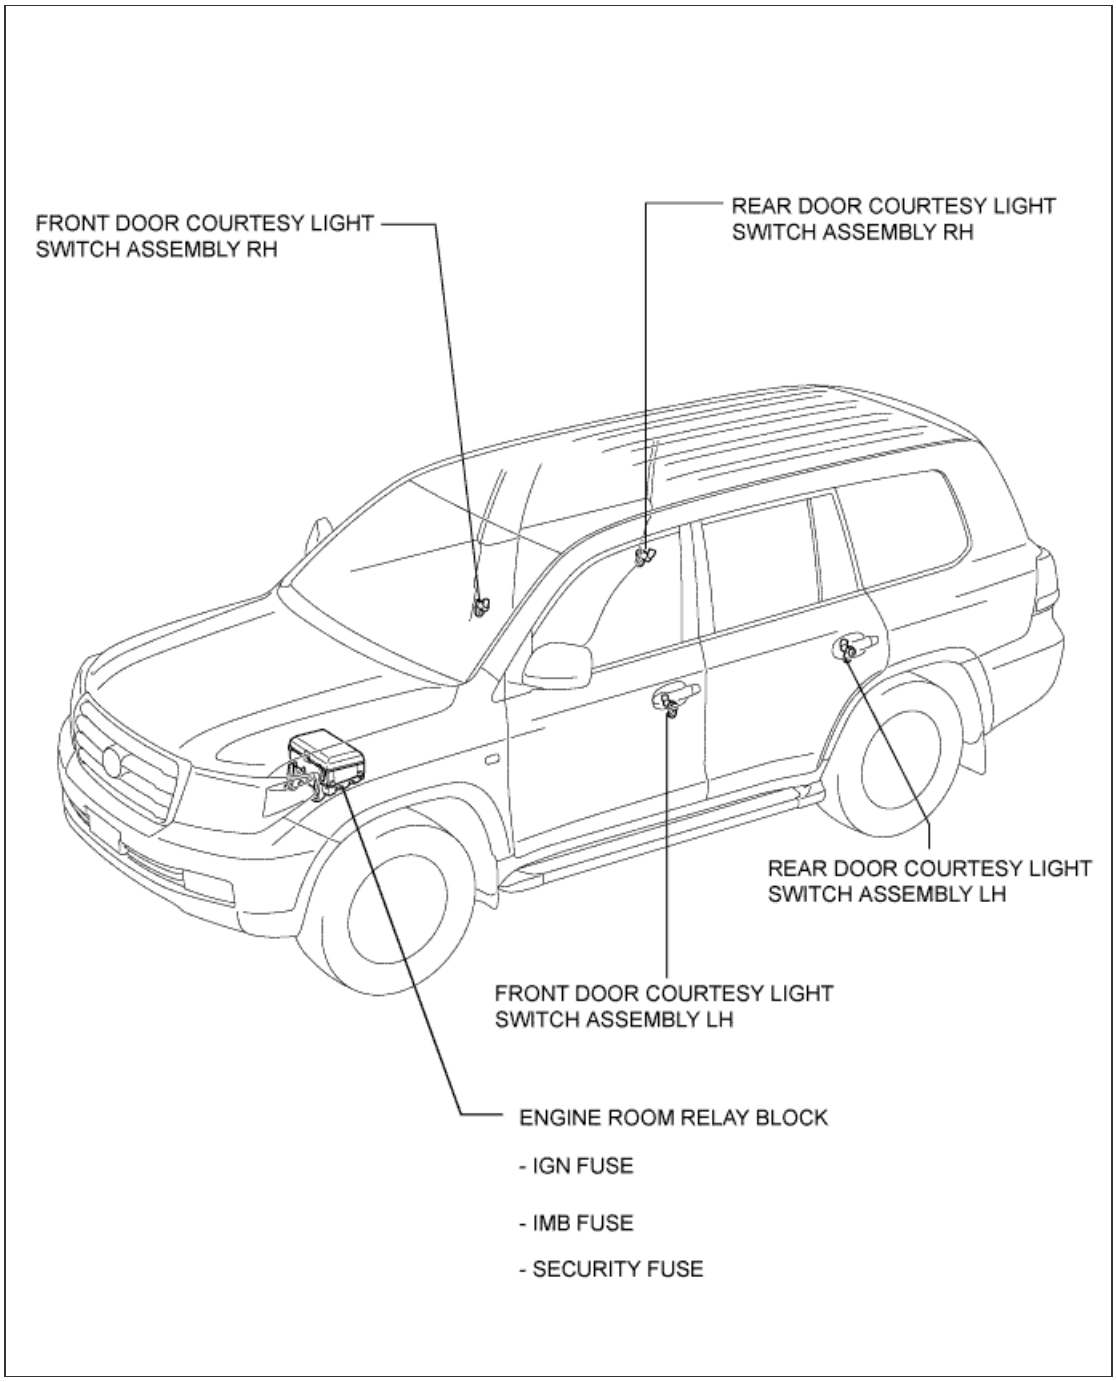


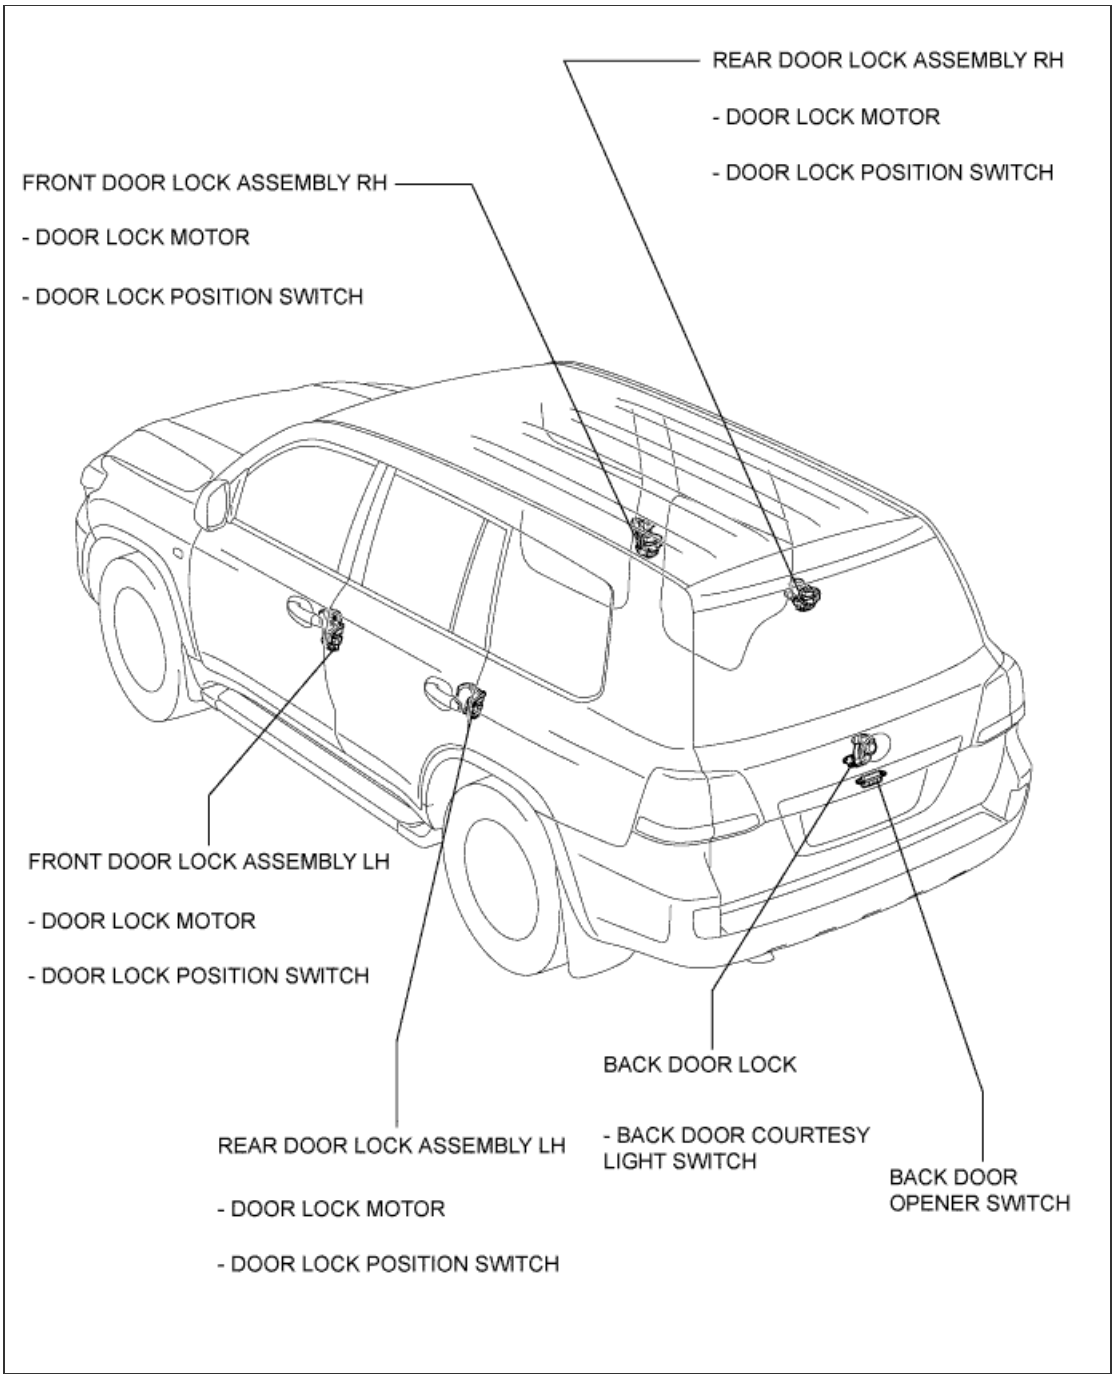
REAR DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
FRONT DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
FRONT DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
REAR DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
BACK DOOR LOCK
- BACK DOOR COURTESY LIGHT SWITCH
BACK DOOR OPENER SWITCH

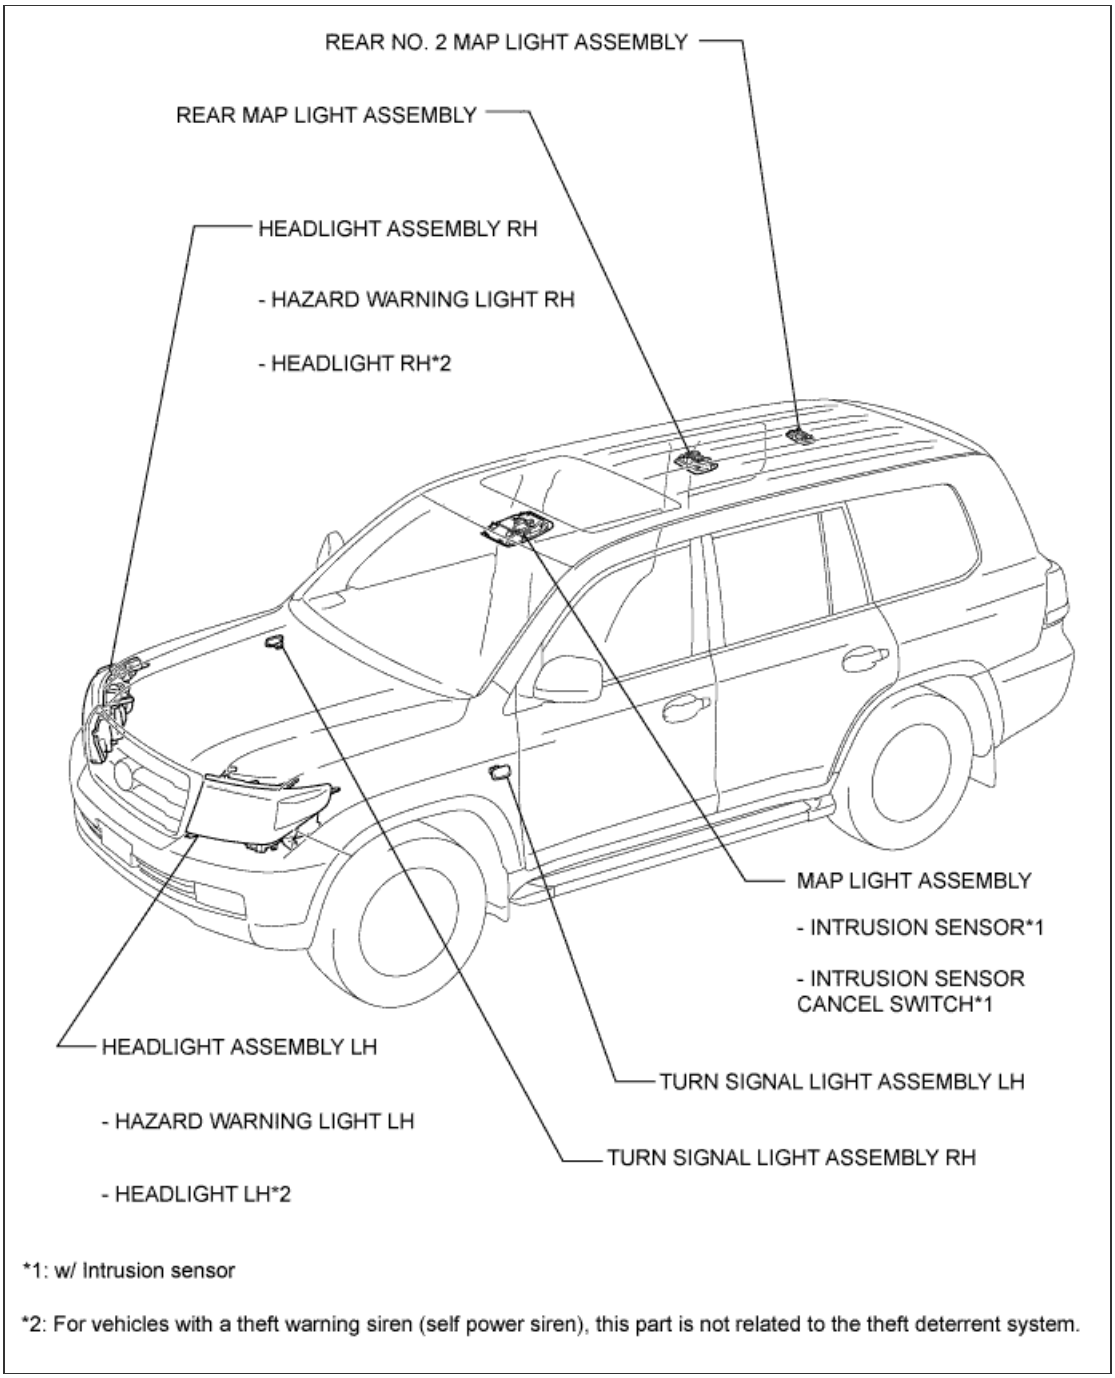

*1: w/ Intrusion sensor


*2: For vehicles with a theft warning siren (self power siren), this part is not related to the theft deterrent system.

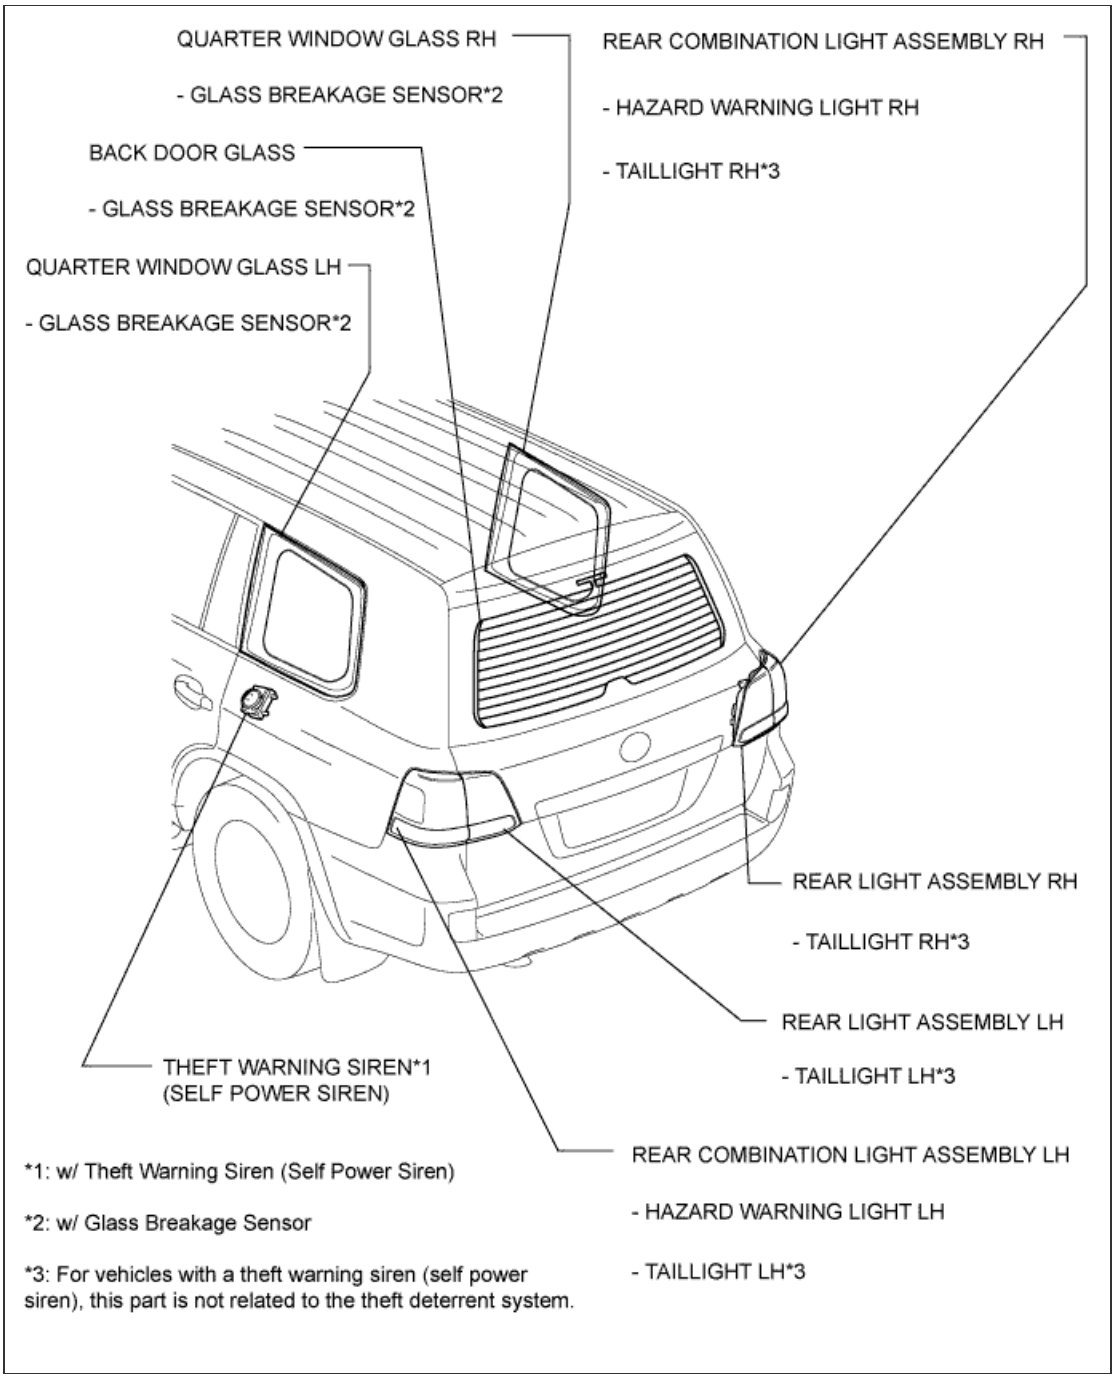


*1: w/ Theft Warning Siren (Self Power Siren)


*2: w/ Glass Breakage Sensor

*3: For vehicles with a theft warning siren (self power siren), this part is not related to the theft deterrent system.

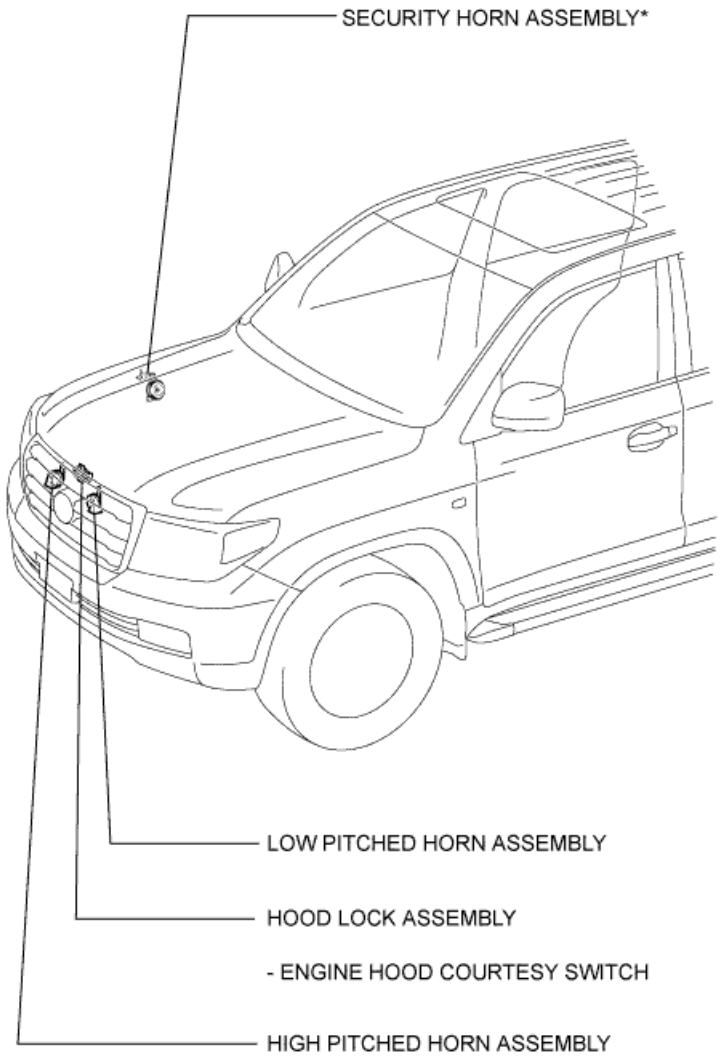



*: w/ Security Horn

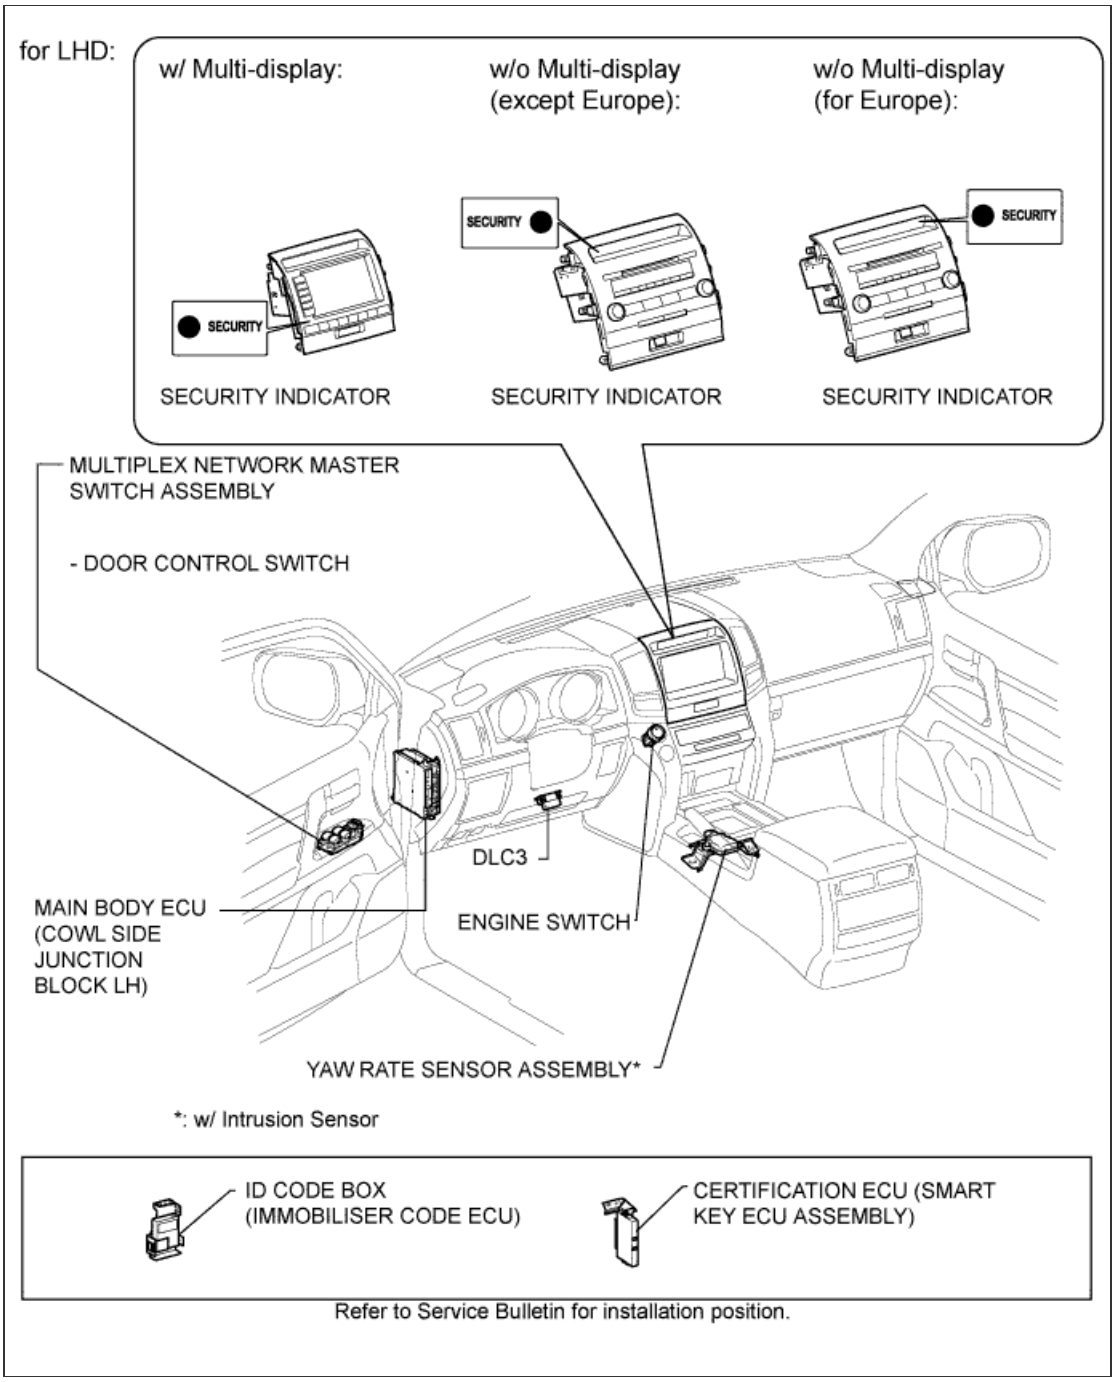

for LHD:
w/ Multi-display:
w/o Multi-display (except Europe):
w/o Multi-display (for Europe):
SECURITY
SECURITY
SECURITY
SECURITY INDICATOR
SECURITY INDICATOR
SECURITY INDICATOR
MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY
- DOOR CONTROL SWITCH
DLC3
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
ENGINE SWITCH
YAW RATE SENSOR ASSEMBLY*
*: w/ Intrusion Sensor
ID CODE BOX (IMMOBILISER CODE ECU)
CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)
Refer to Service Bulletin for installation position.

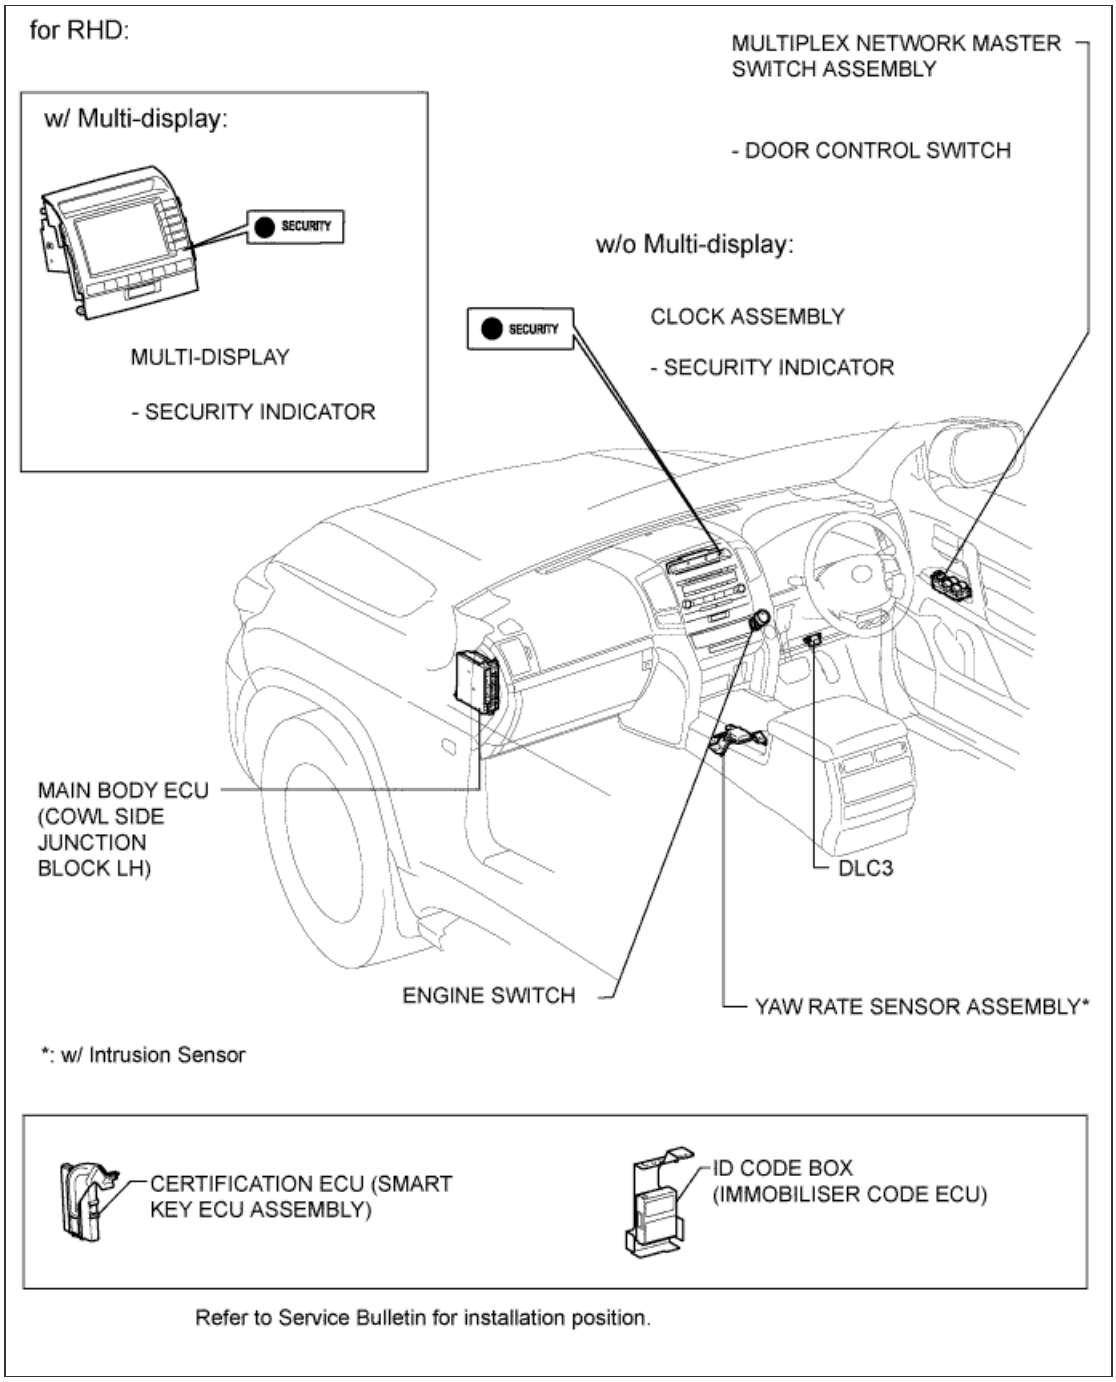
for RHD:
MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY
- DOOR CONTROL SWITCH
w/ Multi-display:
SECURITY
MULTI-DISPLAY
- SECURITY INDICATOR
w/o Multi-display:
SECURITY
CLOCK ASSEMBLY
- SECURITY INDICATOR
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
DLC3
ENGINE SWITCH
YAW RATE SENSOR ASSEMBLY*
*: w/ Intrusion Sensor
CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)
ID CODE BOX (IMMOBILISER CODE ECU)
Refer to Service Bulletin for installation position.

for Preparation Click here

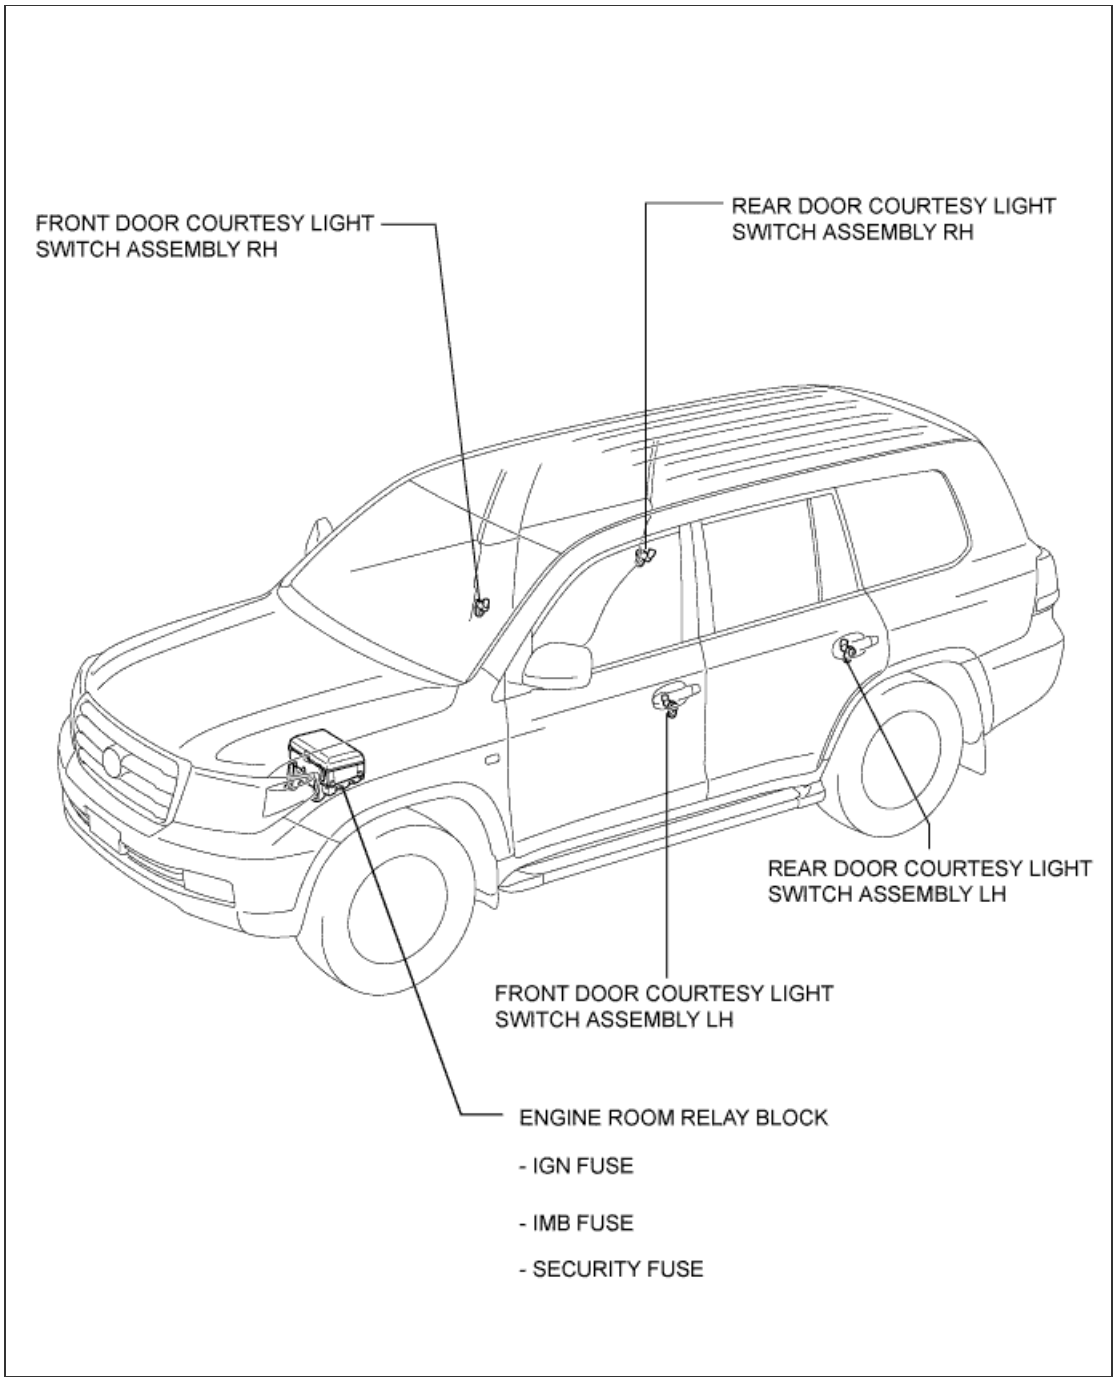


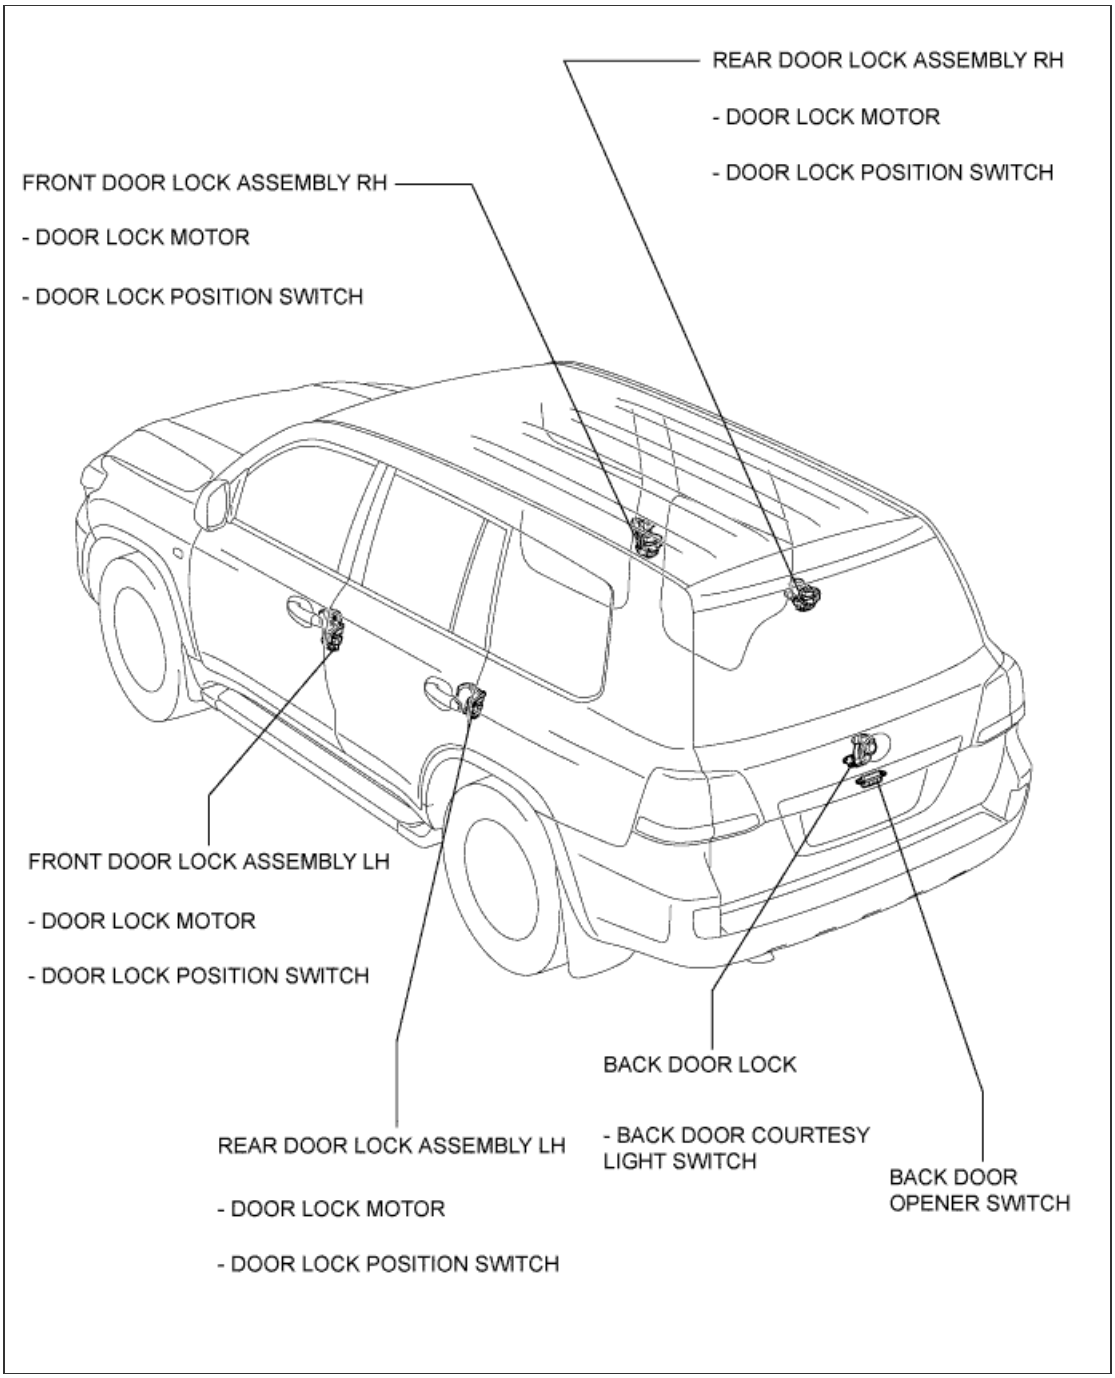
REAR DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
FRONT DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
FRONT DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
REAR DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR LOCK POSITION SWITCH
BACK DOOR LOCK
- BACK DOOR COURTESY LIGHT SWITCH
BACK DOOR OPENER SWITCH

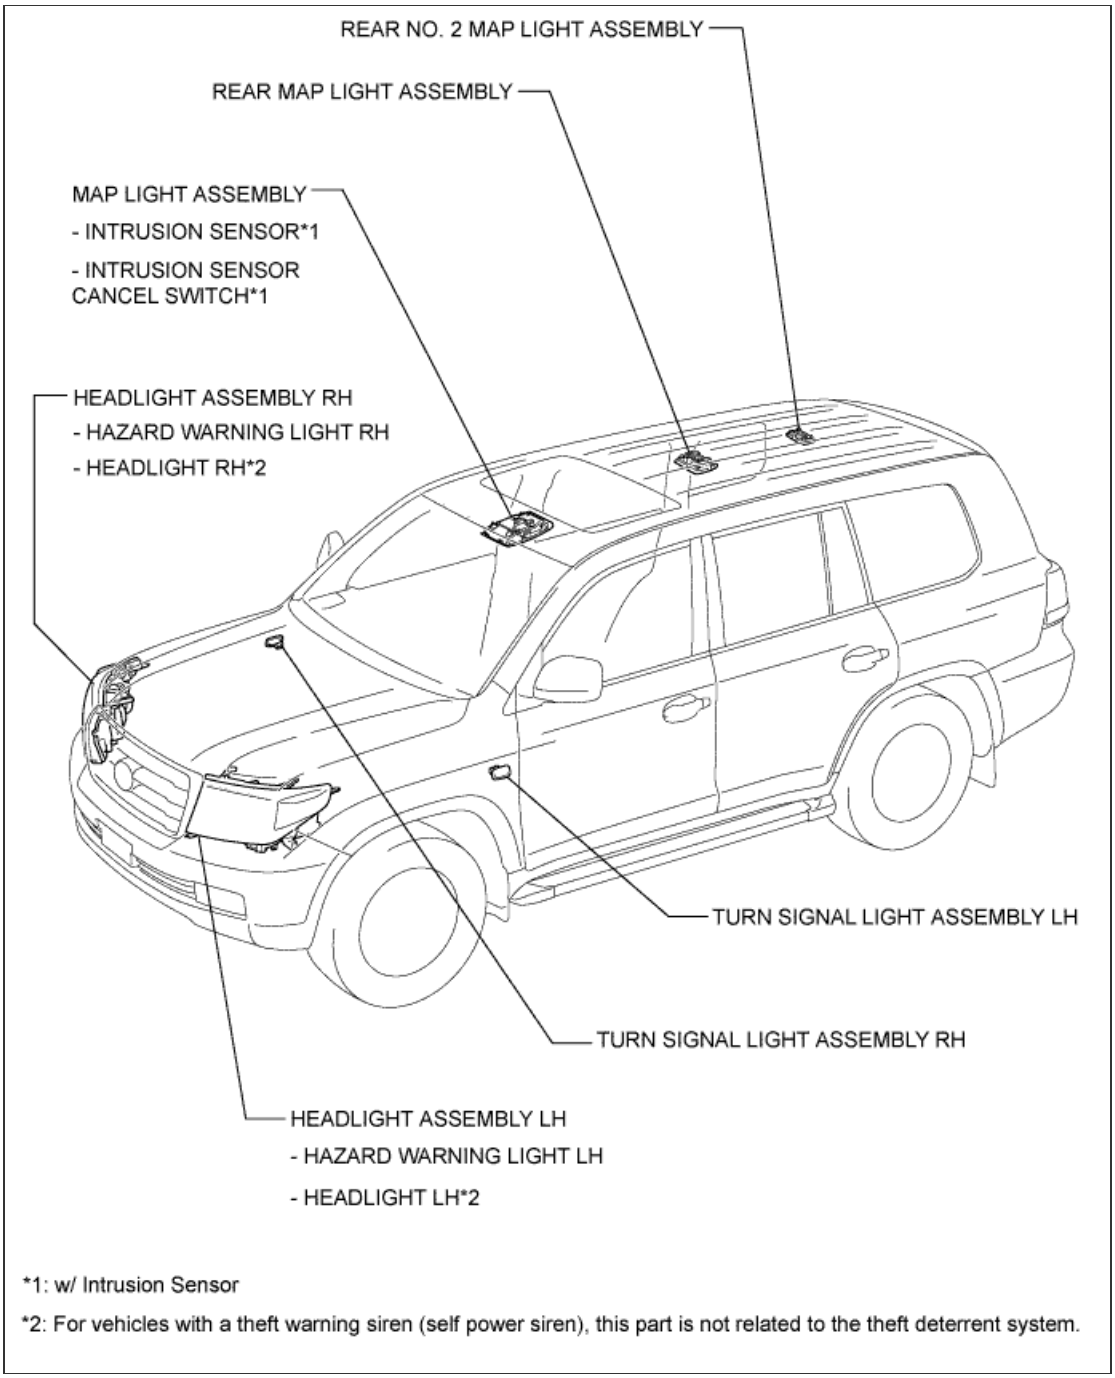

*1: w/ Intrusion Sensor


*2: For vehicles with a theft warning siren (self power siren), this part is not related to the theft deterrent system.

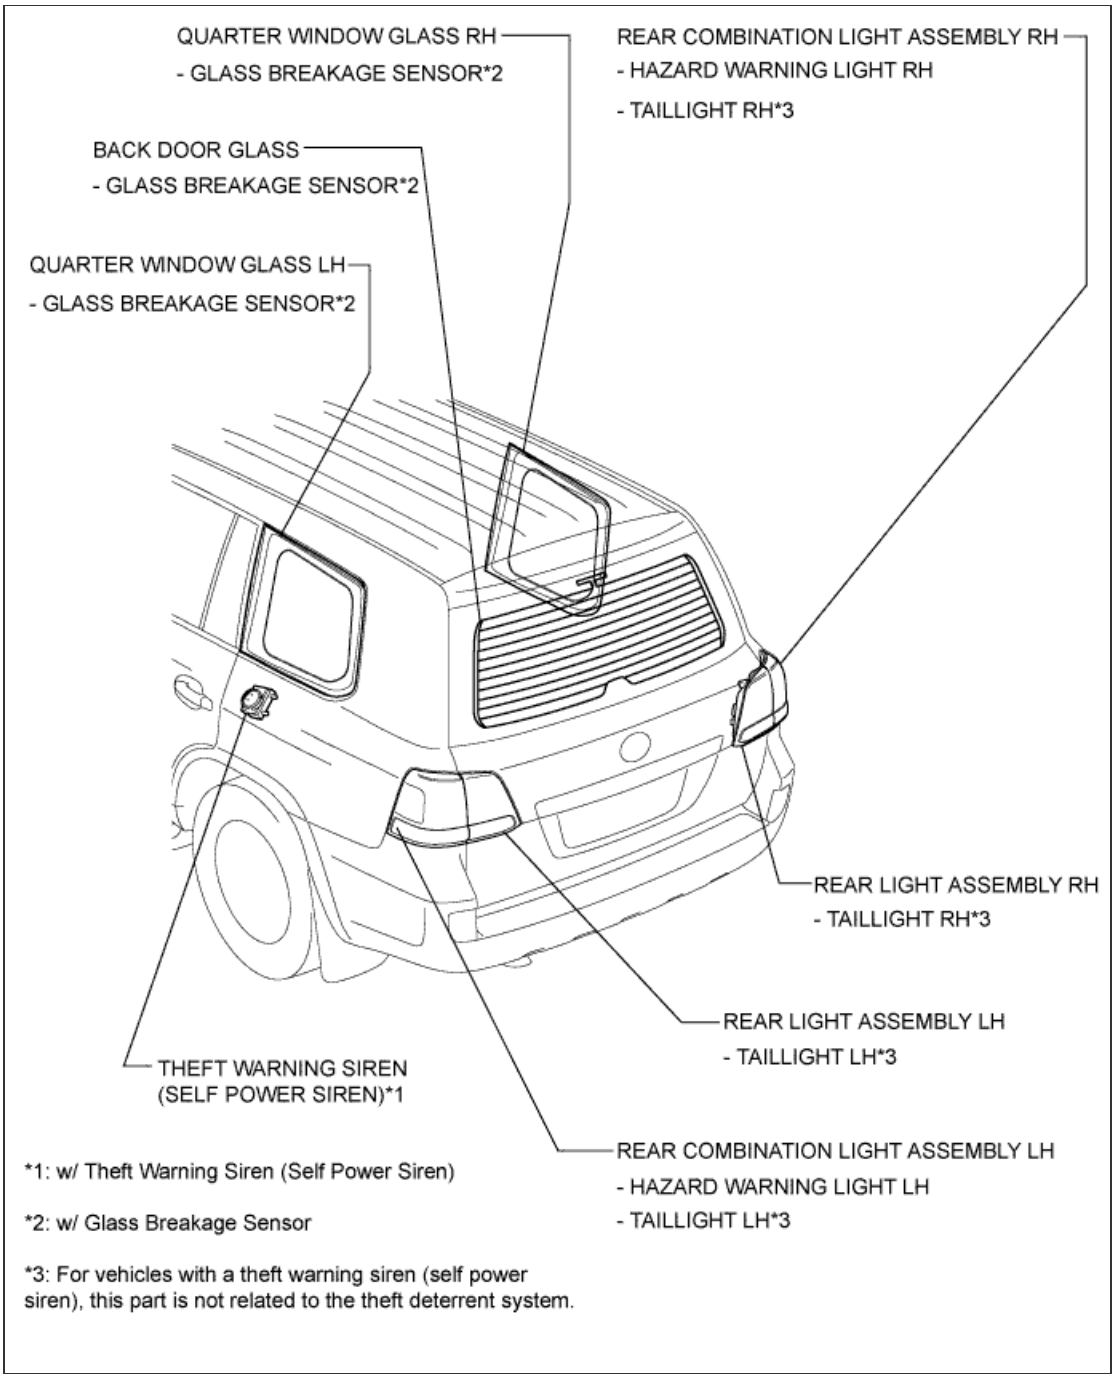

*1: w/ Theft Warning Siren (Self Power Siren)


*2: w/ Glass Breakage Sensor

*3: For vehicles with a theft warning siren (self power siren), this part is not related to the theft deterrent system.

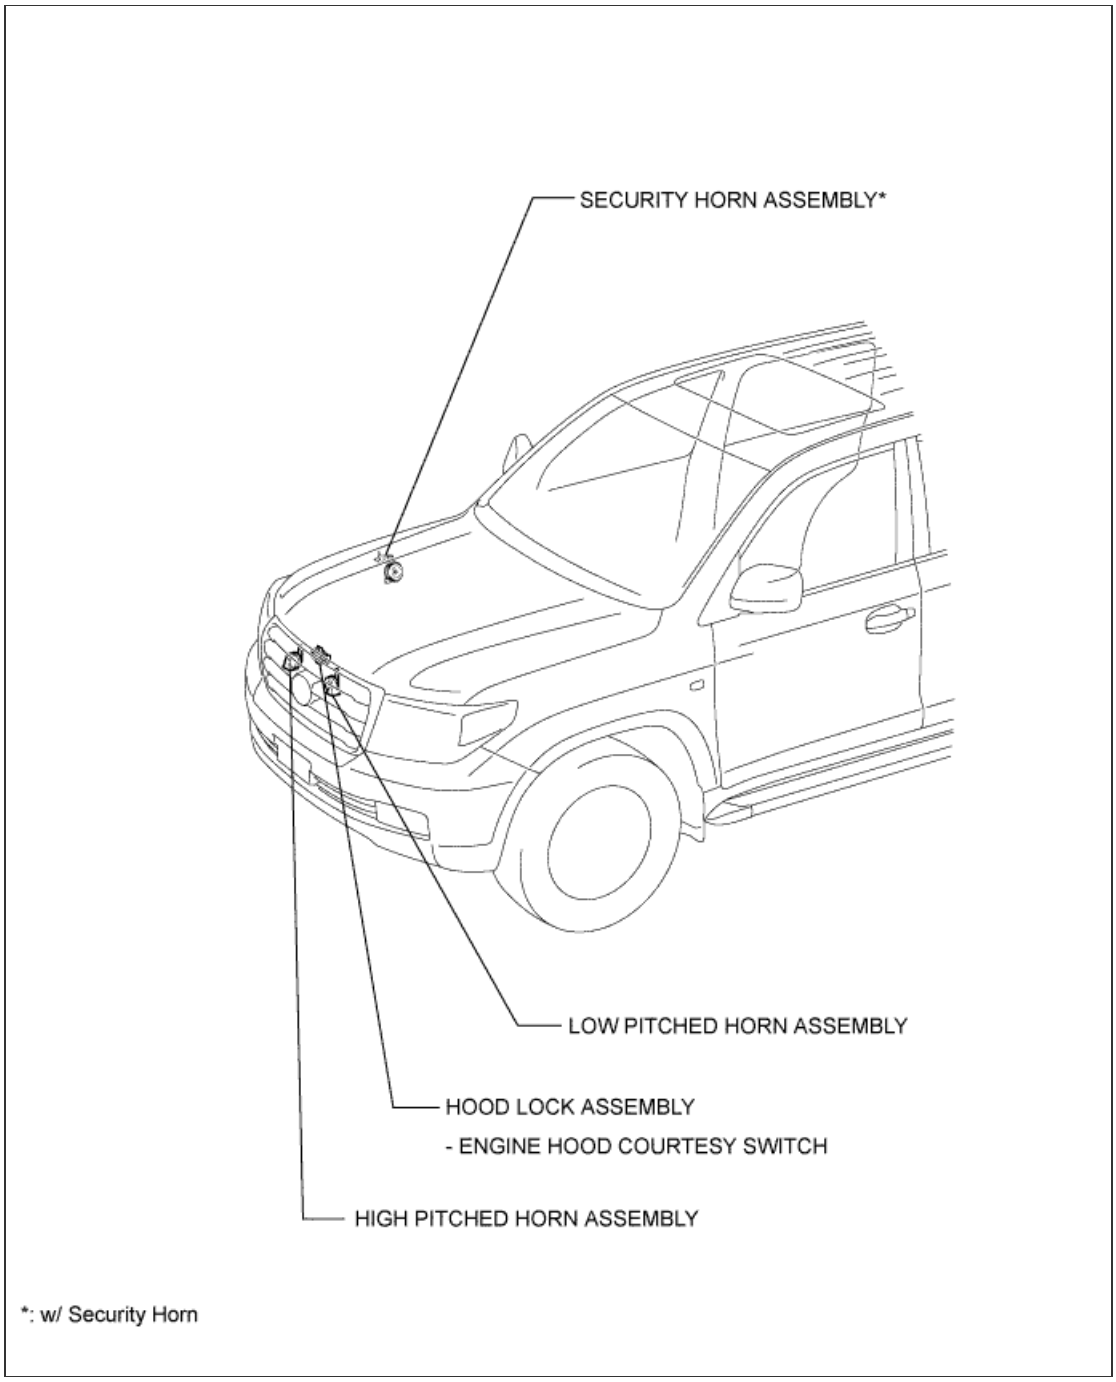


*: w/ Security Horn


for LHD:

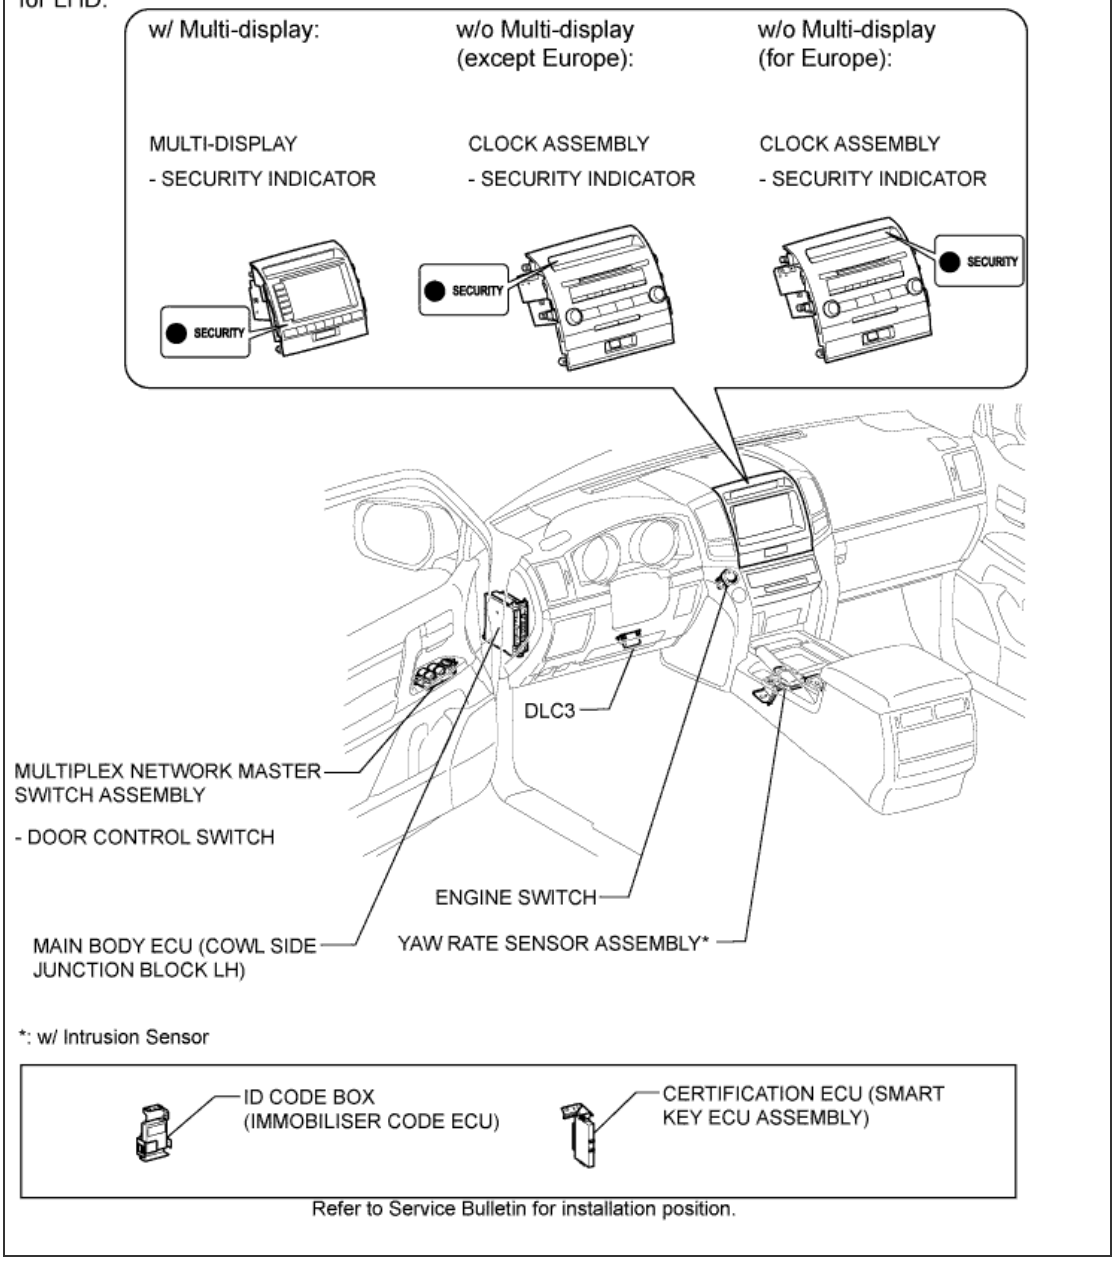

Refer to Service Bulletin for installation position.

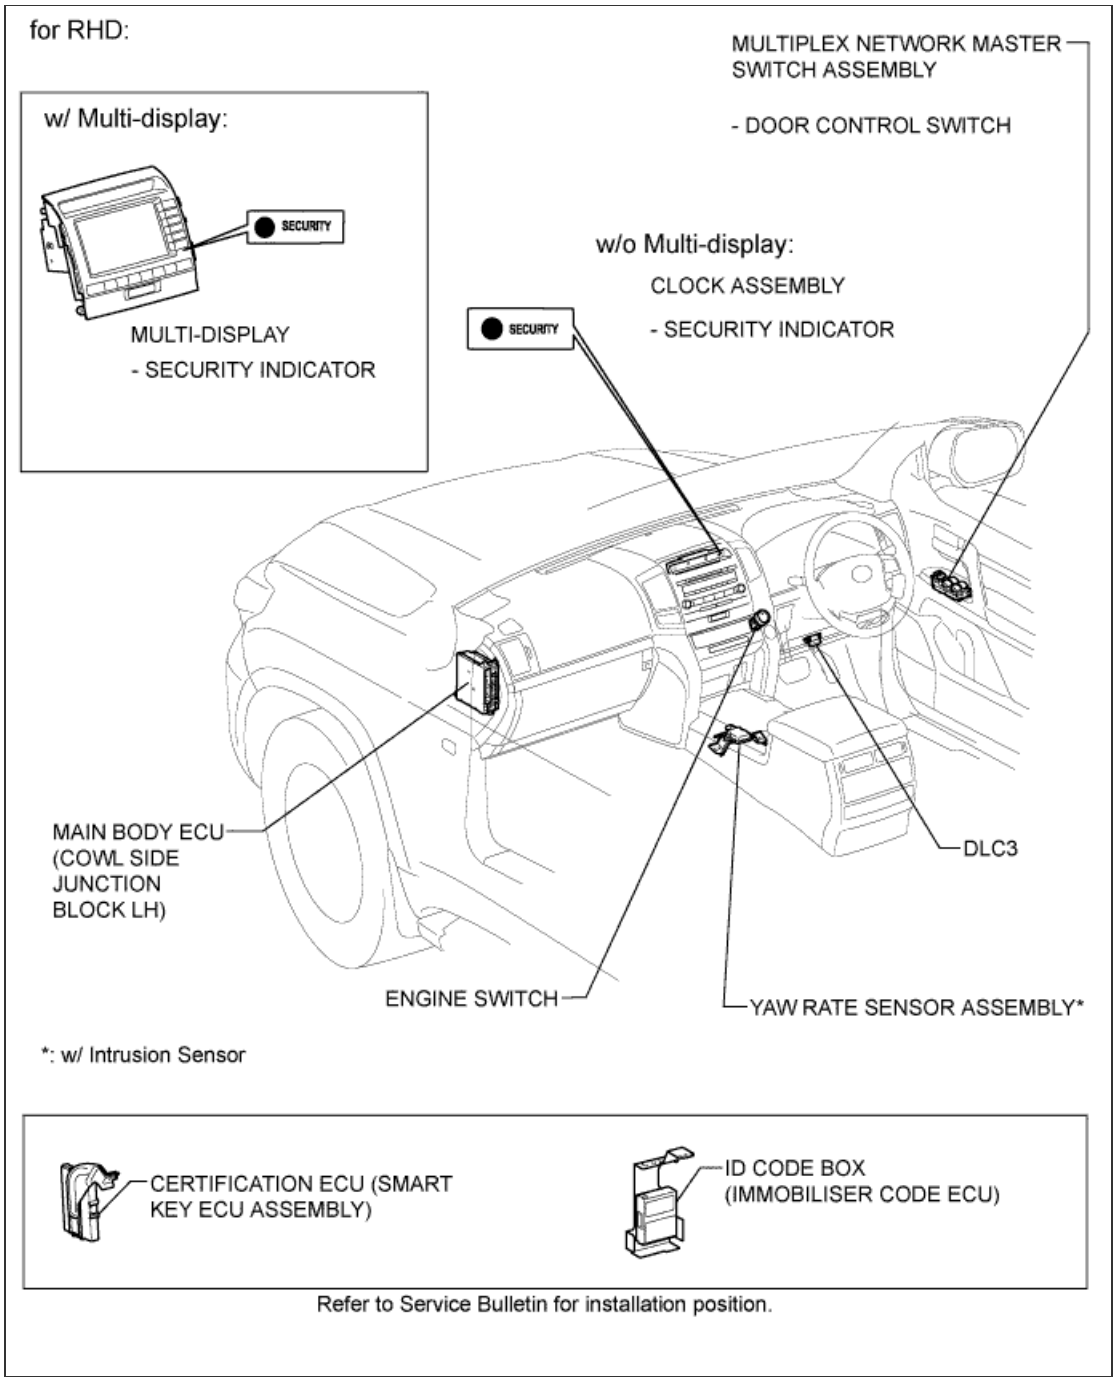
for RHD:
MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY
- DOOR CONTROL SWITCH
w/ Multi-display:
SECURITY
MULTI-DISPLAY
- SECURITY INDICATOR
w/o Multi-display:
CLOCK ASSEMBLY
- SECURITY INDICATOR
SECURITY
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
DLC3
ENGINE SWITCH
YAW RATE SENSOR ASSEMBLY*
*: w/ Intrusion Sensor
CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)
ID CODE BOX (IMMOBILISER CODE ECU)
Refer to Service Bulletin for installation position.

for Preparation Click here

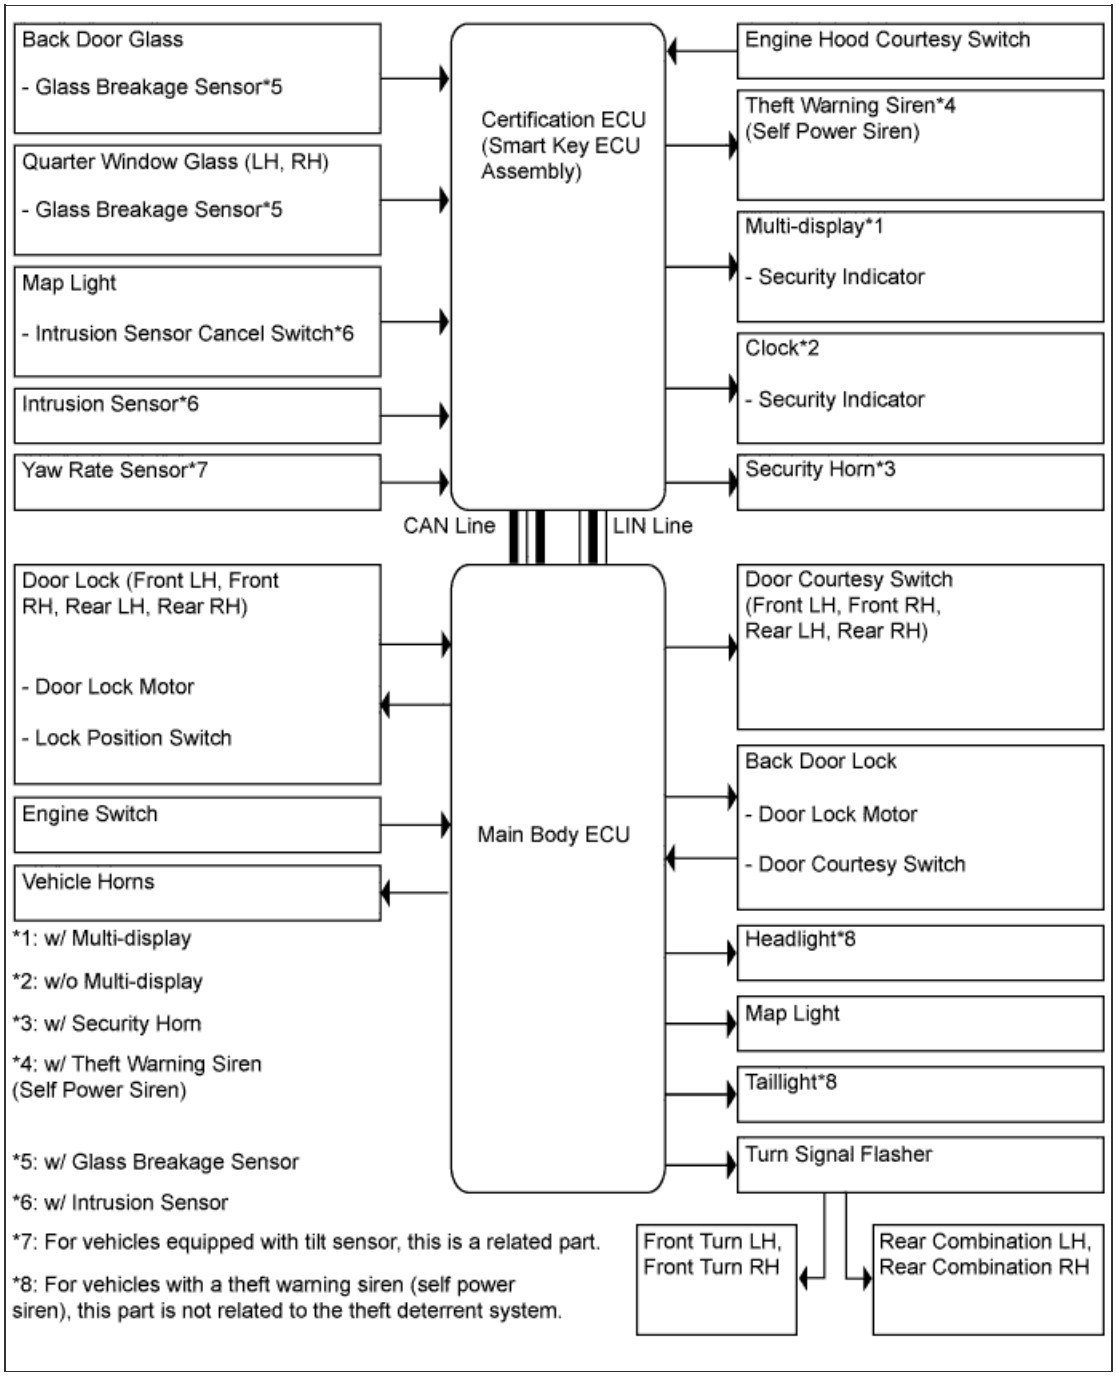

Communication Table

Sender	Receiver	Signal	Line
Main Body ECU	Certification ECU (Smart Key ECU Assembly)	• Door courtesy light switch signal • Engine switch status signal • Driver door lock position signal • Driver door manual lock switch signal • Front passenger door lock position signal • Front passenger door manual lock switch signal • Rear door lock LH position signal • Rear door lock RH position signal • Back door courtesy switch signal • Back door open signal	CAN
		• Driver door lock control signal • Front passenger door lock control signal	

Certification ECU (Smart Key ECU Assembly)	Main Body ECU	• Rear door lock LH control signal • Rear door lock RH control signal • Back door lock control signal • Horn signal • Hazard warning light flash signal • Taillight flash signal* • Horn signal • Headlight flash signal*	CAN
Certification ECU (Smart Key ECU Assembly)	Main Body ECU	Map light and interior light illumination signal	CAN/LIN

HINT:

*: For vehicles with a theft warning siren (self power siren), this part is not related to the theft deterrent system.

for Preparation Click here

THEFT DETERRENT SYSTEM DESCRIPTION

The theft deterrent system is designed to deter vehicle break-ins and theft. If an attempted break-in or theft is detected, the vehicle horns and security horn*1 or theft warning siren (self power siren)*2 will sound, the room light will illuminate, and the headlights*3, taillights*3 and hazard warning lights will flash. The system detects an attempted break-in or theft when any of the following occurs: 1) the vehicle is forcibly entered; 2) the engine hood is forcibly opened; 3) the doors are unlocked without the use of a key; or 4) the cable from the negative (-) battery terminal is disconnected and reconnected.
If the system enters the alarm sounding state, any unlocked doors will automatically lock.
The system has 4 states: disarmed state, arming preparation state, armed and alarm sounding state.

HINT:

- ***1: w/ Security Horn**
- ***2: w/ Theft Warning Siren (Self Power Siren)**
- ***3: For vehicles with a theft warning siren (self power siren), this part is not related to the theft deterrent system.**

FUNCTION OF MAIN COMPONENT

Function	Outline
Security indicator	Informs driver of the theft deterrent system status.
Security horn*1	Sounds when an attempted break-in or theft is detected. Located in the engine compartment.
Theft warning siren (Self power siren)*2	Sounds when an attempted break-in or theft is detected. Located on the quarter inner LH.
Taillight*3	Flashes when an attempted break-in or theft is detected.
Map light and rear map light	Illuminates when an attempted break-in or theft is detected. The map light has intrusion sensor cancel switch. For vehicles equipped with a tilt sensor, the intrusion sensor cancel switch also functions as tilt sensor OFF switch.
Headlight*3	Begins flashing when an attempted break-in or theft is detected.
Hazard warning light	Begins flashing when an attempted break-in or theft is detected.
Vehicle horns	Sounds when an attempted break-in or theft is detected.
Door courtesy light switch	Detects the door open status (open or closed).
Door lock position switch	Detects the door lock status (locked or unlocked).
Engine hood courtesy switch	Detects the engine hood open status (open or closed).
Back door courtesy switch	Detects the back door open status (open or closed).
Main body ECU	Detects the engine switch condition (off, on (ACC), or on (IG)).
Intrusion sensor*4	If an intrusion is detected, the alarm is activated.
Yaw rate sensor*4	After the theft deterrent system is set, detects vehicle tilt. If vehicle tilt changes, the certification ECU (smart key ECU assembly) determines there was theft.
Glass breakage sensor*5	Sounds alarm when the left or right rear side glass or back door glass is broken, or when there is short in the wire harness.

HINT:

*1: w/ Security Horn

*2: w/ Theft Warning Siren (Self Power Siren)

*3: For vehicles with a theft warning siren (self power siren), this part is not related to the theft deterrent system.

*4: w/ Intrusion Sensor

*5: w/ Glass Breakage Sensor

SYSTEM FUNCTION

a. Disarmed state:

- The alarm function is not operating.
- The theft deterrent system is not operating.

b. Arming preparation state:

The theft deterrent system is not operating.

c. Armed state:

The theft deterrent system is operating.

d. Alarm sounding state:

The alarm function is operating (30 +/-5 seconds).

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the theft deterrent system.**
- ***: Use the intelligent tester.**
- **Troubleshooting of the theft deterrent system is based on the premise that the door lock control system, the wireless door lock control system, the lighting system, the horn system, the engine immobiliser system and the entry and start system are operating normally. Check these systems first before troubleshooting the theft deterrent system.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.INSPECT COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B. → Go to CAN COMMUNICATION SYSTEM (Click here)

C. → Go to CAN COMMUNICATION SYSTEM (Click here)

A

4.CHECK LIN COMMUNICATION SYSTEM*

a. The theft deterrent system uses the LIN communication system to communicate. Check that the LIN communication system is functioning normally.

Result

Result	Proceed to
LIN communication system is normal	A
LIN communication system is malfunctioning	B

B. → Go to LIN COMMUNICATION SYSTEM (Click here)

A

5.CHECK FOR DTC*

a. Check for DTCs (Click here) and note any codes that are output.

b. Clear the DTC (Click here).

c. Based on the DTCs output above, try to force output of the same DTC by simulating the symptoms indicated by the DTC. Then recheck for DTCs.

Result

Result	Proceed to
DTC output does not reoccur	A
DTC output reoccurs	B

B. → Go to step 7

A

6.PROBLEM SYMPTOMS TABLE

a. Refer to Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → Go to step 8

A

7.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Data List / Active Test (Click here)

b. Terminals of ECU (Click here)

c. Operation Check (Click here)

d. Inspection

NEXT

8.REPAIR OR REPLACE

NEXT

9.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the theft deterrent system.**
- ***: Use the intelligent tester.**
- **Troubleshooting of the theft deterrent system is based on the premise that the door lock control system, the wireless door lock control system, the lighting system, the horn system, the engine immobiliser system and the entry and start system are operating normally. Check these systems first before troubleshooting the theft deterrent system.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.INSPECT COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B. → Go to CAN COMMUNICATION SYSTEM (Click here)

C. → Go to CAN COMMUNICATION SYSTEM (Click here)

A

4.CHECK LIN COMMUNICATION SYSTEM*

a. The theft deterrent system uses the LIN communication system to communicate. Check that the LIN communication system is functioning normally.

Result

Result	Proceed to
LIN communication system is normal	A
LIN communication system is malfunctioning	B

B. → Go to LIN COMMUNICATION SYSTEM (Click here)

A

5.CHECK FOR DTC*

a. Check for DTCs (Click here) and note any codes that are output.

b. Clear the DTC (Click here).

c. Based on the DTCs output above, try to force output of the same DTC by simulating the symptoms indicated by the DTC. Then recheck for DTCs.

Result

Result	Proceed to
DTC output does not reoccur	A
DTC output reoccurs	B

B. → Go to step 7

A

6.PROBLEM SYMPTOMS TABLE

a. Refer to Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → Go to step 8

A

7.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Data List / Active Test (Click here)

b. Terminals of ECU (Click here)

c. Operation Check (Click here)

d. Inspection

NEXT

8.REPAIR OR REPLACE

NEXT

9.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Before checking the theft deterrent system function, cancel the entry and start system.**
- **If the battery is reconnected during the armed state, the system may enter the alarm sounding state and the alarm may sound. If so, perform a wireless unlock operation to stop the alarm.**
- **For vehicles with a theft warning siren (self power siren), if the battery is disconnected during the armed state, the system may enter the alarm sounding state and the alarm may sound. If so, perform a wireless unlock operation to stop the alarm.**

OUTLINE OF THEFT DETERRENT SYSTEM

a. When the theft deterrent system detects that the vehicle is being tampered with, the horns sound and lights flash continuously. For vehicles with a siren, the theft warning siren (self power siren) sounds simultaneously.

b. The system has active arming mode (refer to "Active Arming Mode").

c. Active arming mode has 4 states: disarmed state, arming preparation state, armed state and alarm sounding state.

i. Disarmed state:

- The alarm function is not operating.
- The theft deterrent system is not operating.

ii. Arming preparation state:

- The theft deterrent system is not operating.

iii. Armed state:

- The theft deterrent system is operating.

iv. Alarm sounding state:

- The alarm function is operating (30 +/-5 seconds).

Alarm Method and Time

Alarm Method	Hazard Warning Light	Blinking (cycle of flasher relay)
	Vehicle Horn	Sounding (cycle of 0.4 seconds)
	Security Horn*1	Sounding (cycle of 0.4 seconds)
	Headlight*1	Flashing
	Taillight*1	Flashing
	Room Light	Illuminating
	Theft Warning Siren (Self Power Siren)*2	Sounding (cycle of 0.4 seconds)
	Security Indicator	Illuminating
Alarm Time	30 +/-5 seconds	

HINT:

- **If during the alarm sounding state, one of the doors is unlocked without using a proper key, a forced door lock signal will be output (refer to "Forced Door Lock Control").**
- ***1: w/ Security Horn**
- ***2: w/ Theft Warning Siren (Self Power Siren)**

ACTIVE ARMING MODE

HINT:

- **Active arming mode starts the alarm control immediately after the doors are locked.**
- **Before checking the theft deterrent system, cancel the entry and start system.**

System State	State Switching Condition	Transfer to
	Perform one of following, and system will go on to "Arming preparation state":	

1. Disarmed state	1. With all doors and engine hood closed, lock all doors by wireless operation. 2. With all doors and engine hood closed, lock all doors using mechanical key.*1 3. With any door or engine hood open, lock all doors and close all doors and engine hood.*1	2. Arming preparation state
2. Arming preparation state	Perform one of following, and system will go on to "Disarmed state": 1. Unlock all doors by wireless operation. 2. Unlock all doors using mechanical key.*1 3. Unlock door. 4. Open engine hood. 5. With brake pedal depressed, put and hold key 10 mm (0.393 in.) from engine switch with key ornament facing engine switch for 5 seconds, and turn engine switch on (ACC) or on (IG). 6. Reconnect battery.	1. Disarmed state
	Perform one of following, and system will go on to "Armed state": 1. Allow 30 (+/-1.5) seconds to elapse.	3. Armed state
3. Armed State	Perform one of following, and system will go on to "Disarmed state": 1. Unlock all doors by wireless operation. 2. Unlock all doors using mechanical key.*1 3. With brake pedal depressed, put and hold key 10 mm (0.393 in.) from engine switch with key ornament facing engine switch for 5 seconds, and turn engine switch on (IG).	1. Disarmed state
	Perform one of following, and system will go on to "Alarm sounding state": 1. Open engine hood. 2. Open door. 3. Unlock door without using wireless operation.*2 4. Unlock door without using mechanical key.*1 5. Disconnect and reconnect battery negative (-) cable.*3 6. Force engine ignition system to turn on without proper engine start method. 7. Intrusion sensor detects movement within vehicle.*4	4. Alarm sounding state
4. Alarm sounding state	Perform one of following, and system will go on to "Disarmed state": 1. Unlock all doors using wireless operation.*2 2. Unlock all doors using mechanical key.*1 3. With brake pedal depressed, put and hold key 10 mm (0.393 in.) from engine switch with key ornament facing engine switch for 5 seconds, and turn engine switch ON (IG).	1. Disarmed state
	Perform one of following, and system will go on to "Armed state":	

	1. Allow 30 (+/-5) seconds to elapse.	3. Armed state (alarm stops sounding)

HINT:

*1: w/ Security Horn

*2: w/ Theft Warning Siren (Self Power Siren)

*3: For vehicles with a theft warning siren (self power siren), the siren begins to sound as soon as the battery cable is disconnected.

*4: w/ Intrusion sensor

FORCED DOOR OCK CONTRO

a. The forced door lock control also helps to prevent the vehicle from being tampered with. When a door is unlocked and the alarm starts, the door is forced to lock by a forced door lock signal.

i. Conditions that force the doors to lock:

- 0.4 seconds have elapsed after the previous output of a forced door lock signal.
- The theft deterrent system is in the alarm sounding state of active arming mode.
- A door is unlocked.

PANIC ALARM CONTROL (w/ Panic Switch)

a. The panic alarm control activates the panic alarm when the wireless transmitter panic switch is pressed. The panic alarm control operates independently from the change of the theft deterrent system alarm control from the armed state to the alarm sounding state.

i. Conditions that cause the panic alarm control to set off the panic alarm:
The panic alarm is activated when the panic switch on the wireless transmitter is pressed and held for 1.0 seconds or more under the following conditions.

- The engine switch is off.
- The theft deterrent system is not in the alarm sounding state.
- The panic alarm control is not operating (the alarm is not set off).

ii. Conditions that cause the panic alarm control to shut off the alarm:
The panic alarm is deactivated when any of the following conditions is fulfilled during panic alarm operation.

- The engine switch is turned on (IG).
- The wireless transmitter lock/unlock switch is pressed.
- 60 +/-5 seconds have passed and the panic alarm has ended.
- The theft deterrent system changes to the alarm sounding state. However, the alarm still sounds, because the theft deterrent system has changed to the alarm sounding state.
  Conditions for canceling the panic alarm are the same as for the alarm control.

HINT:

For more information about active mode, refer to "Active Arming Mode".

SECURITY INDICATOR OUTPUT

a. The security indicator turns on and off based on output signals from the certification ECU (smart key ECU assembly). However, in some cases, the actual status of the security indicator is different from the output signals of the certification ECU (smart key ECU assembly).

Output

State of Theft Deterrent System	Security Indicator	
	Output Signals from ECU	Actual Lighting Condition
Disarmed state	Off	Off (Immobiliser system not set) Blinking (Immobiliser system set)
Arming preparation state	On	On
Armed state	Off	Blinking
Alarm sounding state	On	On

Blinking Cycle

Time	Security Indicator
0.125 seconds	On
1.875 seconds	Off

HINT:

When the immobiliser system is set, the security indicator blinks during the disarmed state and the armed state due to the output signals from the immobiliser system.

for Preparation Click here

CUSTOMIZING FUNCTION WITH INTELLIGENT TESTER (REFERENCE)

NOTICE:

- **When the customer requests a change in a function, first make sure that the function can be customized.**
- **Be sure to make a note of the current settings before customizing.**
- **When troubleshooting a function, first make sure that the function is set to the default setting.**

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Utility / Customize.

e. Select the setting by referring to the table below.

Security:

Display	Default	Contents	Setting
Warning by Horn*1	ON	Function that allows vehicle horns and security horn to be used as warning device.	ON/OFF
Warning by Glass Broken Sensor*2	ON	Function that turns the glass breakage sensor on/off.	ON/OFF

HINT:

- ***1: w/ Security Horn**
- ***2: w/ Glass Breakage Sensor**

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Troubleshooting of the theft deterrent system is based on the premise that the door lock control system, the wireless door lock control system, the lighting system, the horn system, the engine immobiliser system and the entry and start system are operating normally. Check these systems first before troubleshooting the theft deterrent system.**

Theft Deterrent System

Symptom	Suspected Area	See page
Theft deterrent system cannot be set	Engine hood courtesy switch circuit	Click here
	Door courtesy switch circuit	Click here
	Certification ECU power source circuit	Click here
Security indicator is not blinking when theft deterrent system is set	Security indicator light circuit	Click here
Alarm sounding state cannot be canceled when engine switch is turned on (IG)	IG power source circuit	Click here
Theft deterrent system can be set even when any door is open	Engine hood courtesy switch circuit	Click here
	Door courtesy switch circuit	Click here
Horns (low pitched, high pitched) do not sound while theft deterrent system is in alarm sounding state	Horn system	Click here
Hazard warning lights do not flash while theft deterrent system is in warning operation	Hazard warning switch circuit	Click here
Security horn does not sound while theft deterrent system is set*1	Security horn circuit	Click here
Headlights do not flash while theft deterrent system is in alarm sounding state*1	Headlight signal circuit	Click here
Taillights do not flash while theft deterrent system is in alarm sounding state*1	Taillight circuit	Click here
Map light does not illuminate while theft deterrent system is in alarm sounding state	Illumination circuit	Click here
Theft warning siren (self power siren) does not sound when theft deterrent system is in alarm sounding state*2	Theft warning siren circuit	Click here
Intrusion sensor cancel switch does not operate*3	Intrusion sensor cancel switch circuit	Click here
Glass breakage sensor does not operate*4	Glass breakage sensor circuit	Click here

HINT:

- ***1: w/ Security Horn**
- ***2: w/ Theft Warning Siren (Self Power Siren)**
- ***3: w/ Intrusion Sensor**
- ***4: w/ Glass Breakage Sensor**

If the suspected areas operate normally, replace the certification ECU (smart key ECU assembly).

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Troubleshooting of the theft deterrent system is based on the premise that the door lock control system, the wireless door lock control system, the lighting system, the horn system, the engine immobiliser system and the entry and start system are operating normally. Check these systems first before troubleshooting the theft deterrent system.**

Theft Deterrent System

Symptom	Suspected Area	See page
Theft deterrent system cannot be set	Engine hood courtesy switch circuit	Click here
	Door courtesy switch circuit	Click here
	Certification ECU power source circuit	Click here
Security indicator is not blinking when theft deterrent system is set	Security indicator light circuit	Click here
Alarm sounding state cannot be canceled when engine switch is turned on (IG)	IG power source circuit	Click here
Theft deterrent system can be set even when any door is open	Engine hood courtesy switch circuit	Click here
	Door courtesy switch circuit	Click here
Horns (low pitched, high pitched) do not sound while theft deterrent system is in alarm sounding state	Horn system	Click here
Hazard warning lights do not flash while theft deterrent system is in warning operation	Hazard warning switch circuit	Click here
Security horn does not sound while theft deterrent system is set*1	Security horn circuit	Click here
Headlights do not flash while theft deterrent system is in alarm sounding state*1	Headlight signal circuit	Click here
Taillights do not flash while theft deterrent system is in alarm sounding state*1	Taillight circuit	Click here
Map light does not illuminate while theft deterrent system is in alarm sounding state	Illumination circuit	Click here
Theft warning siren (self power siren) does not sound when theft deterrent system is in alarm sounding state*2	Theft warning siren circuit	Click here
Intrusion sensor cancel switch does not operate*3	Intrusion sensor cancel switch circuit	Click here
Glass breakage sensor does not operate*4	Glass breakage sensor circuit	Click here

HINT:

- ***1: w/ Security Horn**
- ***2: w/ Theft Warning Siren (Self Power Siren)**
- ***3: w/ Intrusion Sensor**
- ***4: w/ Glass Breakage Sensor**

If the suspected areas operate normally, replace the certification ECU (smart key ECU assembly).

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Troubleshooting of the theft deterrent system is based on the premise that the door lock control system, the wireless door lock control system, the lighting system, the horn system, the engine immobiliser system and the entry and start system are operating normally. Check these systems first before troubleshooting the theft deterrent system.**

Theft Deterrent System

Symptom	Suspected Area	See page
Theft deterrent system cannot be set	Engine hood courtesy switch circuit	Click here
	Door courtesy switch circuit	Click here
	Certification ECU power source circuit	Click here
Security indicator is not blinking when theft deterrent system is set	Security indicator light circuit	Click here
Alarm sounding state cannot be canceled when engine switch is turned on (IG)	IG power source circuit	Click here
Theft deterrent system can be set even when any door is open	Engine hood courtesy switch circuit	Click here
	Door courtesy switch circuit	Click here
Horns (low pitched, high pitched) do not sound while theft deterrent system is in alarm sounding state	Horn system	Click here
Hazard warning lights do not flash while theft deterrent system is in warning operation	Hazard warning switch circuit	Click here
Security horn does not sound while theft deterrent system is set*1	Security horn circuit	Click here
Headlights do not flash while theft deterrent system is in alarm sounding state*1	Headlight signal circuit	Click here
Taillights do not flash while theft deterrent system is in alarm sounding state*1	Taillight circuit	Click here
Map light does not illuminate while theft deterrent system is in alarm sounding state	Illumination circuit	Click here
Theft warning siren (self power siren) does not sound when theft deterrent system is in alarm sounding state*2	Theft warning siren circuit	Click here
Intrusion sensor cancel switch does not operate*3	Intrusion sensor cancel switch circuit	Click here
Glass breakage sensor does not operate*4	Glass breakage sensor circuit	Click here


HINT:

- ***1: w/ Security Horn**
- ***2: w/ Theft Warning Siren (Self Power Siren)**
- ***3: w/ Intrusion Sensor**
- ***4: w/ Glass Breakage Sensor**

If the suspected areas operate normally, replace the certification ECU (smart key ECU assembly).

for Preparation Click here

CHECK CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

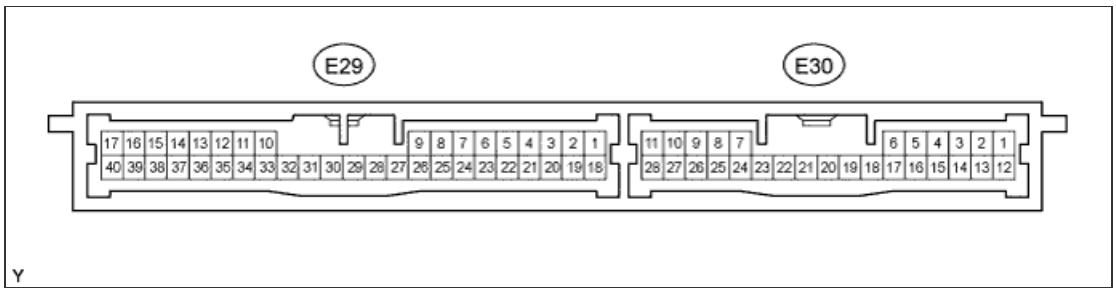

a. Disconnect the E29 and E30 ECU connectors.

b. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29-1 (+B) - Body ground	B - Body ground	+B power supply	Always	11 to 14 V
E29-18 (IG) - Body ground	B - Body ground	IG power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 Ω
E29-17 (E) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E29 and E30 ECU connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E29-2 (IND) - Body ground	V - Body ground	Security indicator signal	Security indicator illuminates (illuminates only for 60 sec. in alarm sounding state (blinking when system in armed state))	6 to 11 V
E30-20 (SH-) - Body ground*1	LG - Body ground	Security horn signal	Security horn not sounding (theft deterrent system in alarm sounding state)	11 to 14 V
			Security horn sounding (theft deterrent system in alarm sounding state)	0.5 to 4 V
E30-24 (HSW) - Body ground	W - Body ground	Engine hood courtesy switch signal	Engine hood closed	10 kΩ or higher
			Engine hood open	Below 1 Ω
E30-7 (SSCL) - Body ground*2	L - Body ground	Theft warning siren (self power siren) signal	Theft warning siren (self power siren) sounding (theft warning system in alarm sounding state)	Below 2 V
			Theft warning siren (self power siren) not sounding (theft warning system in alarm sounding state)	4.5 to 14 V
E30-4 (IOUT) - Body ground*3	P - Body ground	Intrusion sensor signal input	No moving object detected	9 to 14 V
			Moving object detected during arming preparation state or armed state	Pulse generation (see waveform 1)
			Intrusion sensor cancel	

E30-5 (SSW1) - Body ground*3	V - Body ground	Intrusion sensor cancel switch signal	switch on	Below 1.5 V
			Intrusion sensor cancel switch off	4.5 to 14 V
E30-21 (CSIF) - Body ground*3	P - Body ground	Tilt sensor signal input	Vehicle tilt not detected	9 to 14 V
			Vehicle tilt detected during arming preparation state or armed state	Pulse generation (see waveform 2)
E30-23 (GBS) - Body ground*4	V - Body ground	Glass breakage sensor signal	Glass breakage sensor normal	Below 2 V
			Glass breakage sensor malfunctioning	4.5 to 14 V

HINT:

*1: w/ Security Horn

*2: w/ Theft Warning Siren (Self Power Siren)

*3: w/ Intrusion Sensor


*4: w/ Glass Breakage Sensor

If the result is not as specified, the ECU may have a malfunction.

e. Using an oscilloscope, check waveform 1.

Waveform 1 (Reference)


Item	Content
Terminal No. (Symbol)	E30-4 (IOUT) - Body ground
Tool Setting	2 V/DIV., 500 ms/DIV.
Condition	Moving object detected during arming preparation state or armed state

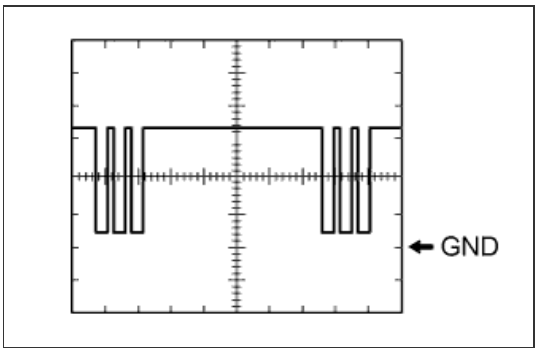


f. Using an oscilloscope, check waveform 2.

Waveform 2 (Reference)

Item	Content
Terminal No. (Symbol)	E30-21 (CSIF) - Body ground
Tool Setting	2 V/DIV., 500 ms/DIV.
Condition	Vehicle tilt detected during arming preparation state or armed state

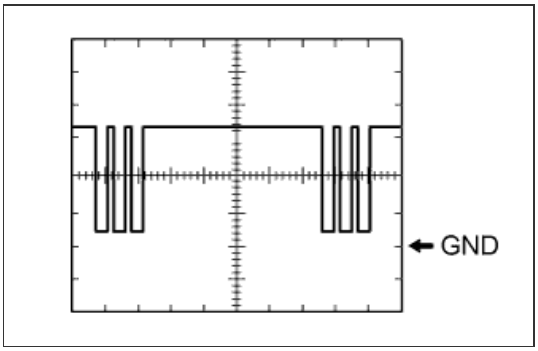

CHECK MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

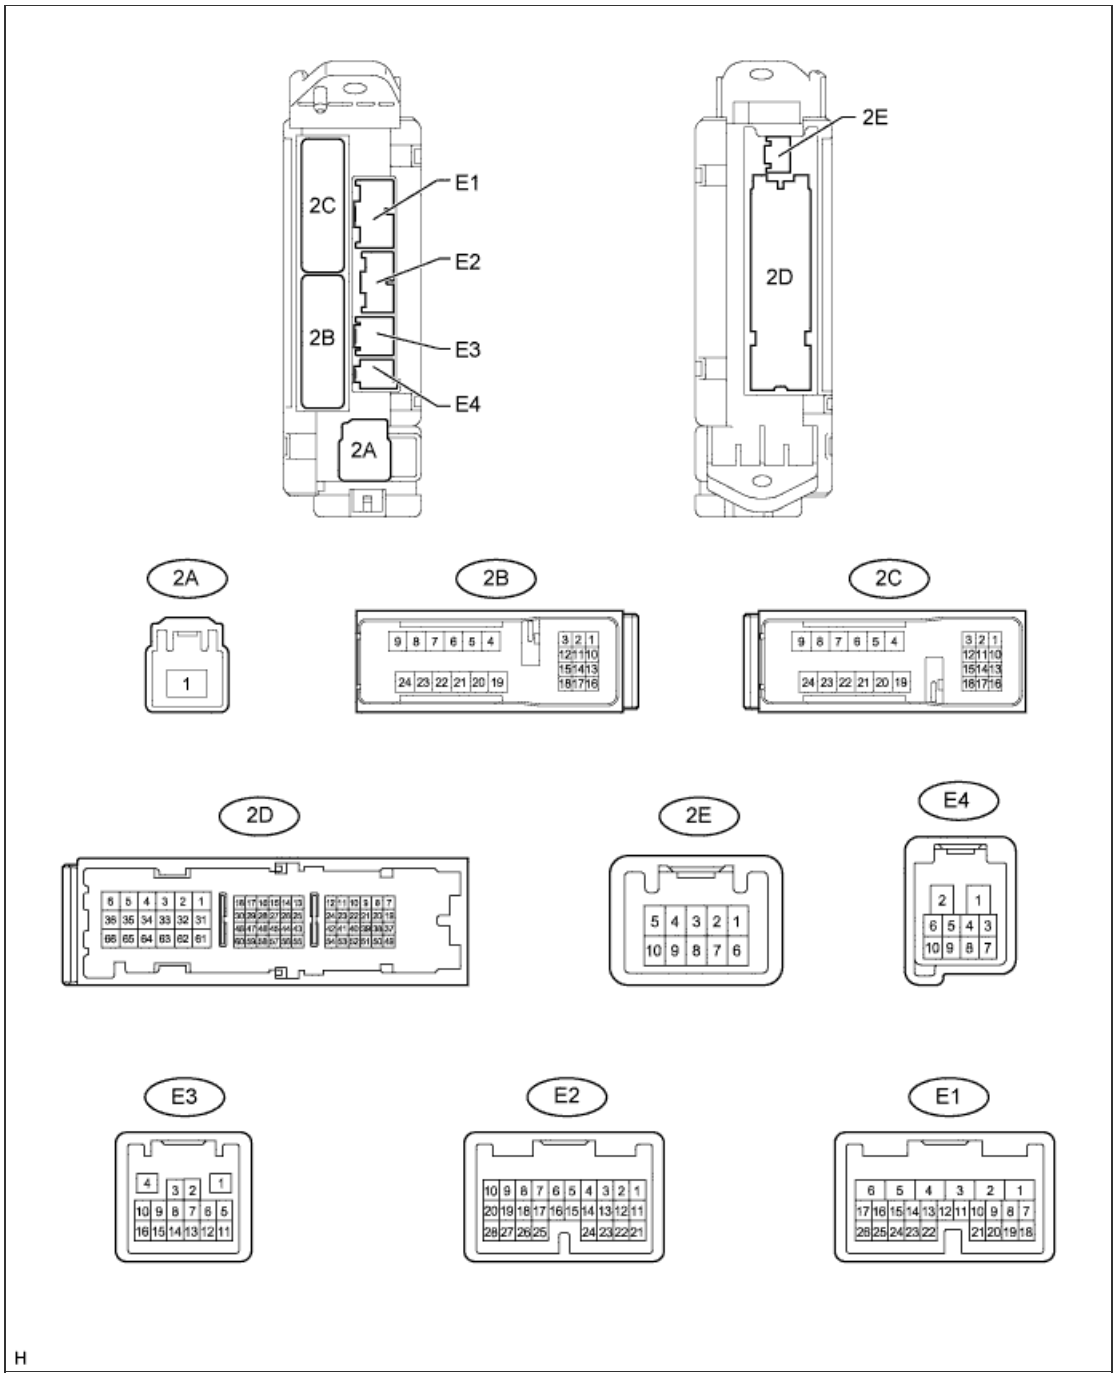

a. Disconnect the 2A, 2B, 2D and E3 ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
2A-1 (ALTB) - Body ground	B - Body ground	Battery power supply	Always	11 to 14 V
2B-20 (BATB) - Body ground	L - Body ground	Battery power supply	Always	11 to 14 V
2D-7 (IG) - Body ground	G - Body ground	IG power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V
2D-8 (ACC) - Body ground	GR - Body ground	ACC power supply	Engine switch on (ACC)	11 to 14 V
			Engine switch off	Below 1 V
2D-62 (GND2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E3-1 (GND3) - Body ground	BR - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction in the wire harness.

c. Reconnect the 2A, 2B, 2D and E3 ECU connectors.

d. Measure the voltage of the connectors.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E1-24 (DCT) - Body ground	L - Body ground*1 - Body ground*2	Driver side door courtesy switch input	Driver side door open	Below 1 V
			Engine switch off, and driver side door courtesy switch off	Pulse generation (see waveform 1 or 2)
E2-21 (PCTY) - Body ground	Y - Body ground*1 L - Body ground*2	Front passenger side door courtesy switch input	Front passenger side door open	Below 1 V
			Engine switch off, and passenger side door courtesy switch off	Pulse generation (see waveform 3 or 4)
2C-2 (LCTY) - Body ground	W - Body ground	Rear door LH courtesy light switch input	Rear door LH open	Below 1 V
			Engine switch off, and rear LH side door courtesy switch off	Pulse generation (see waveform 5 or 6)
E2-7 (RCTY) - Body ground	G - Body ground	Rear door RH courtesy light switch input	Rear door RH open	Below 1 V
			Engine switch off, and rear RH side door courtesy switch off	Pulse generation (see waveform 7 or 8)
E2-25 (BCTY) - Body ground	W - Body ground	Back door courtesy light switch input	Back door open	Below 1 V
			Engine switch off, and back door closed	Pulse generation (see waveform 9 or 10)
2D-3 (ACT+) - Body ground	L - Body ground	Driver side door lock motor lock drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
			Master switch (door control switch) or driver side door key cylinder lock	11 to 14 V
E1-5 (ACTD) - Body ground	B - Body ground	Driver side door lock motor unlock drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
			Master switch (door control switch) or driver side door key cylinder unlock	11 to 14 V
2D-3 (ACT+) - Body ground	L - Body ground	Front passenger side door lock motor lock drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
			Master switch (door control switch) or driver side door key cylinder lock	11 to 14 V
2D-2 (ACT-) - Body ground	B - Body ground	Front passenger side door lock motor unlock drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
			Master switch (door control switch) or driver side door key cylinder unlock	11 to 14 V
2D-3 (ACT+) - Body ground	L - Body ground	Rear door LH lock motor lock drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
			Master switch (door control switch) or driver side door key cylinder lock	11 to 14 V
2C-23 (ACT-) - Body ground	BR - Body ground	Rear door LH lock motor unlock drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
			Master switch (door control switch) or driver side door key cylinder unlock	11 to 14 V
2D-3 (ACT+) - Body ground	L - Body ground	Rear door RH lock motor lock drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
			Master switch (door control switch) or driver	11 to 14 V

			side door key cylinder lock	
2D-2 (ACT-) - Body ground	B - Body ground	Rear door RH lock motor unlock drive output	Master switch (door control switch) or driver side door key cylinder off	Below 1 V
			Master switch (door control switch) or driver side door key cylinder unlock	11 to 14 V
E1-10 (UL3) - Body ground	Y - Body ground	Driver side door lock key switch input	Driver side door key cylinder unlock	Below 1 V
			Engine switch off, all doors closed and driver side door key cylinder neutral position	Pulse generation (see waveform 11 or 12)
2D-53 (L2) - Body ground	LG - Body ground	Driver side door lock key switch input	Driver side door key cylinder lock	Below 1 V
			Engine switch off, all doors closed and driver side door key cylinder neutral position	Pulse generation (see waveform 13 or 14)
E1-9 (LSWD) - Body ground	BR - Body ground	Driver side door lock position switch input	Driver side door unlock	Below 1 V
			Engine switch off, all doors closed and driver side door lock	Pulse generation (see waveform 15 or 16)
E2-27 (LSWP) - Body ground	Y - Body ground	Passenger side door lock position switch input	Passenger side door unlock	Below 1 V
			Engine switch off, all doors closed and passenger side door lock	Pulse generation (see waveform 17 or 18)
2C-1 (LSWL) - Body ground	BR - Body ground	Rear door LH lock position switch input	Rear door LH unlock	Below 1 V
			Engine switch off, all doors closed and rear door LH lock	Pulse generation (see waveform 19 or 20)
E2-5 (LSWR) - Body ground	BR - Body ground	Rear door RH lock position switch input	Rear door RH unlock	Below 1 V
			Engine switch off, all doors closed and rear door RH lock	Pulse generation (see waveform 21 or 22)
E1-26 (BDSU) - Body ground	L - Body ground	Back door opener switch input	Back door lock opener switch off	Below 1 V
			Back door lock opener switch on	Pulse generation (see waveform 23 or 24)

HINT:


- ***1: for LHD**
- ***2: for RHD**

If the result is not as specified, the ECU may have a malfunction.

e. Using an oscilloscope, check waveform 1.

Waveform 1 (Reference)


Item	Content
Terminal No. (Symbol)	E1-24 (DCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and driver side door courtesy switch off

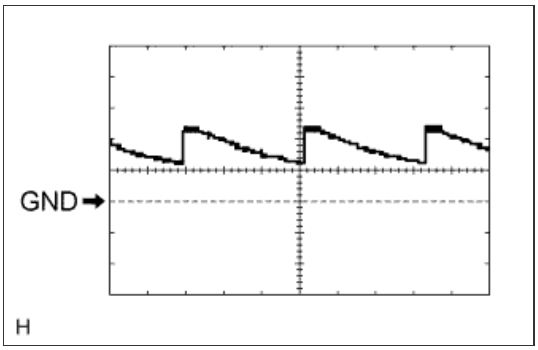

f. Using an oscilloscope, check waveform 2.

Waveform 2 (Reference)


Item	Content
Terminal No. (Symbol)	E1-24 (DCT) - Body ground
Tool Setting	5 V DIV., 20 ms/DIV.
Condition	Engine switch off, and driver side door courtesy switch off

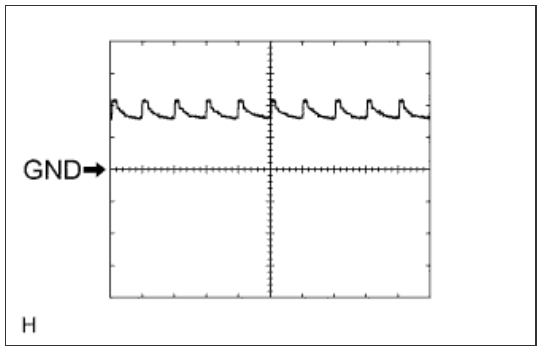

g. Using an oscilloscope, check waveform 3.

Waveform 3 (Reference)


Item	Content
Terminal No. (Symbol)	E2-21 (PCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and passenger side door courtesy switch off

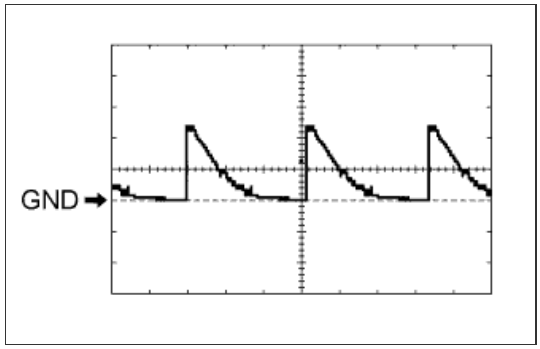

h. Using an oscilloscope, check waveform 4.

Waveform 4 (Reference)


Item	Content
Terminal No. (Symbol)	E2-21 (PCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and passenger side door courtesy switch off

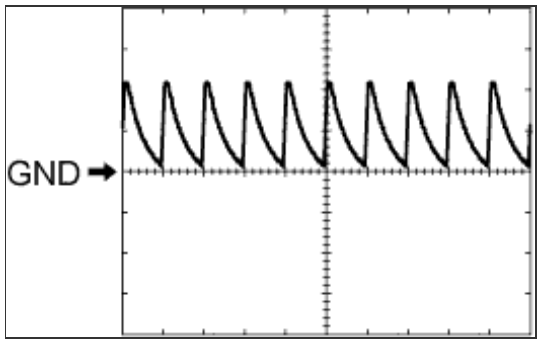

i. Using an oscilloscope, check waveform 5.

Waveform 5 (Reference)


Item	Content
Terminal No. (Symbol)	2C-2 (LCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear LH side door courtesy switch off

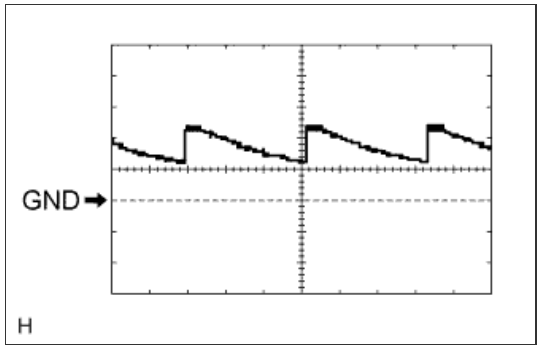

j. Using an oscilloscope, check waveform 6.

Waveform 6 (Reference)


Item	Content
Terminal No. (Symbol)	2C-2 (LCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear LH side door courtesy switch off

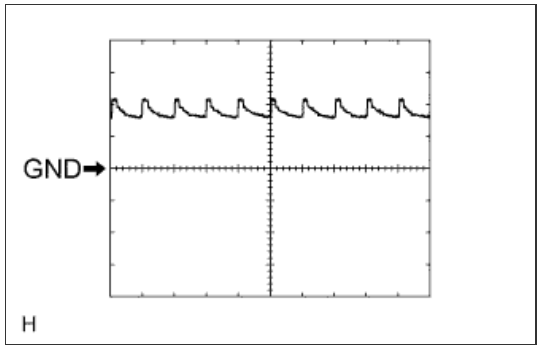

k. Using an oscilloscope, check waveform 7.

Waveform 7 (Reference)


Item	Content
Terminal No. (Symbol)	E2-7 (RCT) - Body ground
Tool Setting	5 V DIV., 20 ms/DIV.
Condition	Engine switch off, and rear RH side door courtesy switch off

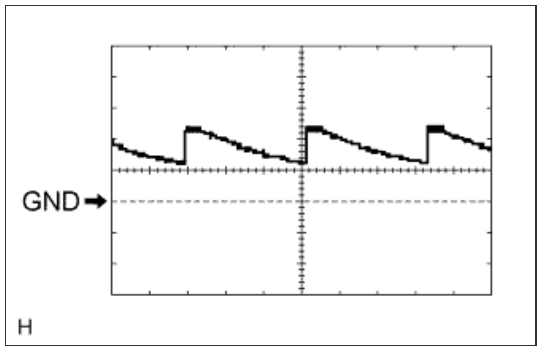

l. Using an oscilloscope, check waveform 8.

Waveform 8 (Reference)


Item	Content
Terminal No. (Symbol)	E2-7 (RCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and rear RH side door courtesy switch off

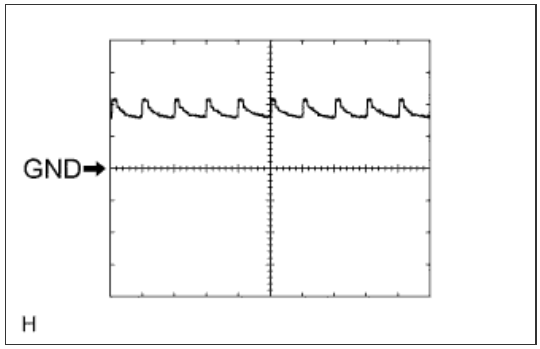

m. Using an oscilloscope, check waveform 9.

Waveform 9 (Reference)


Item	Content
Terminal No. (Symbol)	E2-25 (BCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and back door closed

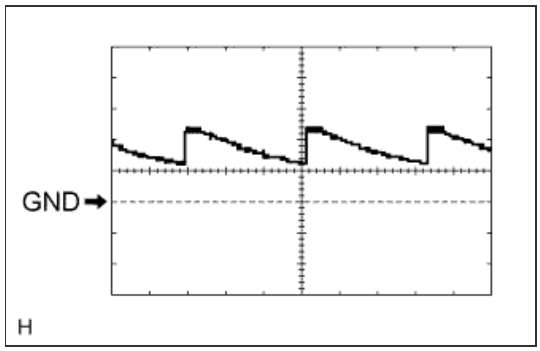

n. Using an oscilloscope, check waveform 10.

Waveform 10 (Reference)


Item	Content
Terminal No. (Symbol)	E2-25 (BCTY) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, and back door closed

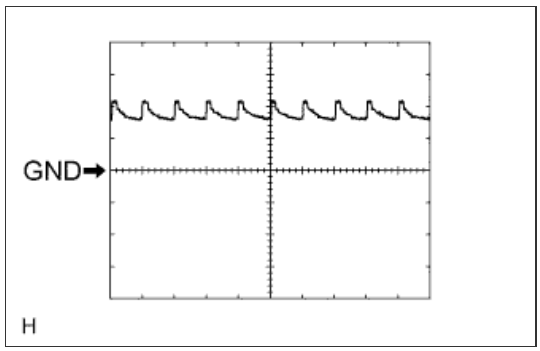

o. Using an oscilloscope, check waveform 11.

Waveform 11 (Reference)


Item	Content
Terminal No. (Symbol)	E1-10 (UL3) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door key cylinder neutral position

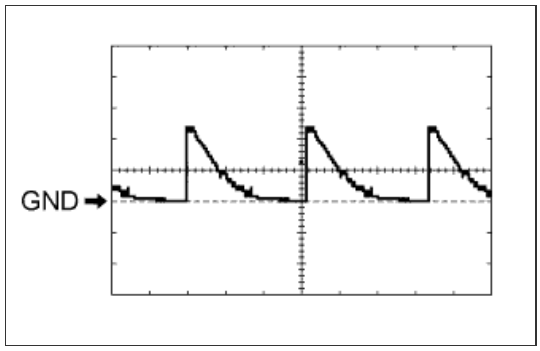

p. Using an oscilloscope, check waveform 12.

Waveform 12 (Reference)


Item	Content
Terminal No. (Symbol)	E1-10 (UL3) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door key cylinder neutral position

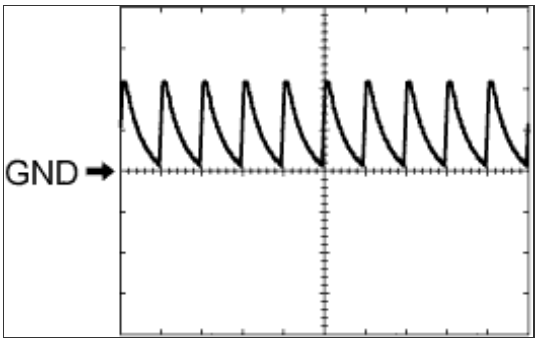

q. Using an oscilloscope, check waveform 13.

Waveform 13 (Reference)


Item	Content
Terminal No. (Symbol)	2D-53 (L2) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door key cylinder neutral position

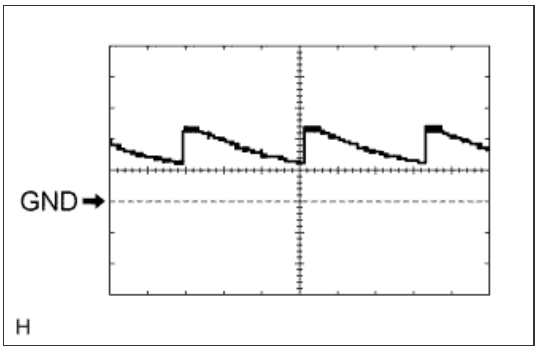

r. Using an oscilloscope, check waveform 14.

Waveform 14 (Reference)


Item	Content
Terminal No. (Symbol)	2D-53 (L2) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door key cylinder neutral position

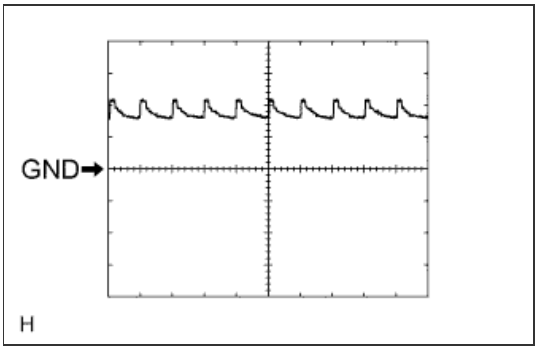

s. Using an oscilloscope, check waveform 15.

Waveform 15 (Reference)


Item	Content
Terminal No. (Symbol)	E1-9 (LSWD) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door lock

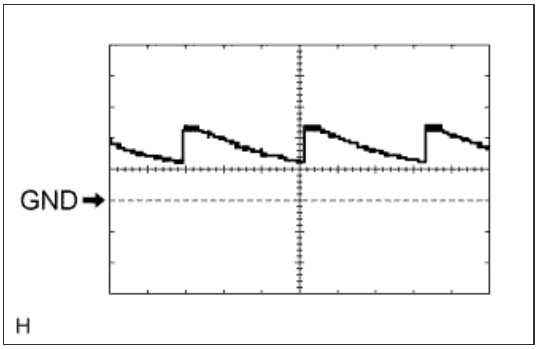

t. Using an oscilloscope, check waveform 16.

Waveform 16 (Reference)


Item	Content
Terminal No. (Symbol)	E1-9 (LSWD) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and driver side door lock

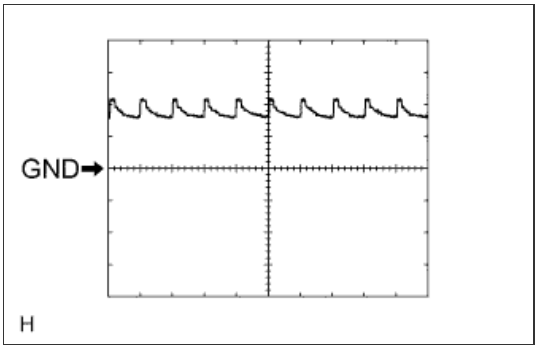

u. Using an oscilloscope, check waveform 17.

Waveform 17 (Reference)


Item	Content
Terminal No. (Symbol)	E2-27 (LSW) - Body ground
Tool Setting	5 V DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and passenger side door lock

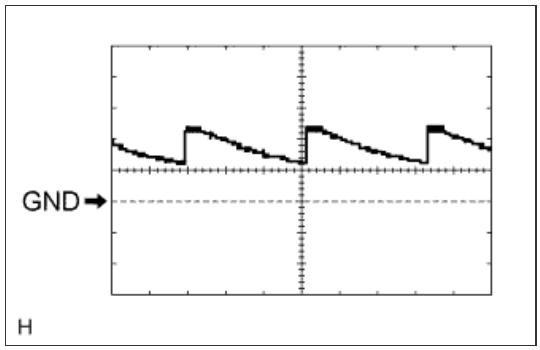

v. Using an oscilloscope, check waveform 18.

Waveform 18 (Reference)


Item	Content
Terminal No. (Symbol)	E2-27 (LSWP) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and passenger side door lock

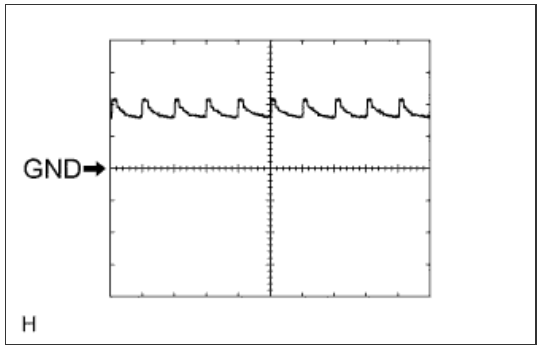

w. Using an oscilloscope, check waveform 19.

Waveform 19 (Reference)


Item	Content
Terminal No. (Symbol)	2C-1 (LSWL) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and rear door LH lock

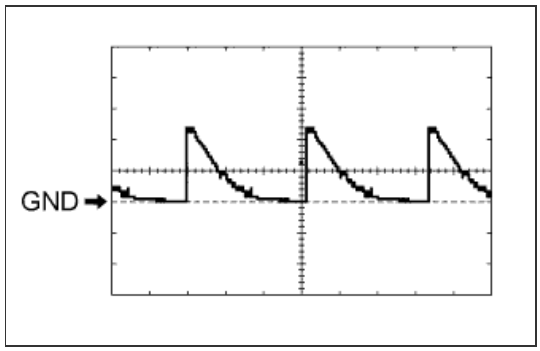

x. Using an oscilloscope, check waveform 20.

Waveform 20 (Reference)


Item	Content
Terminal No. (Symbol)	2C-1 (LSWL) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and rear door LH lock

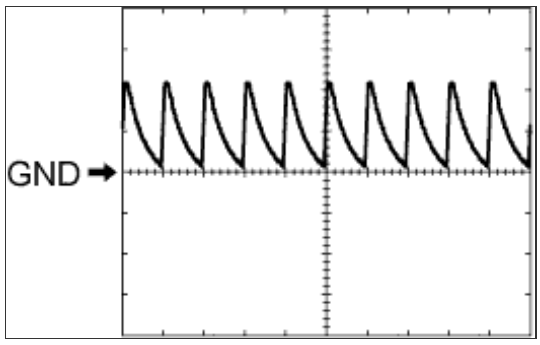

y. Using an oscilloscope, check waveform 21.

Waveform 21 (Reference)


Item	Content
Terminal No. (Symbol)	E2-5 (LSWR) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and rear door RH lock

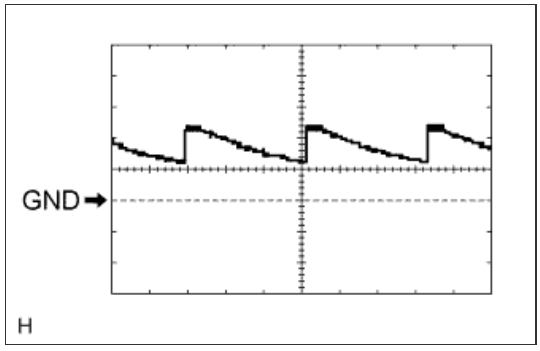

z. Using an oscilloscope, check waveform 22.

Waveform 22 (Reference)


Item	Content
Terminal No. (Symbol)	E2-5 (LSWR) - Body ground
Tool Setting	5 V DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and rear door RH lock

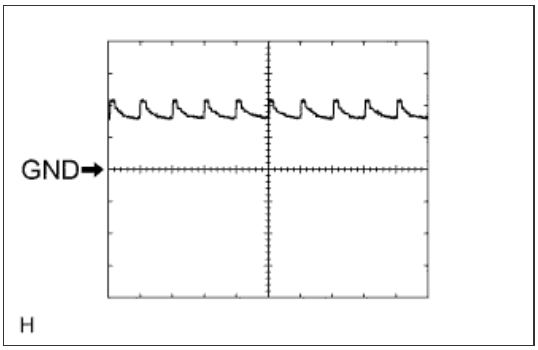

aa. Using an oscilloscope, check waveform 23.

Waveform 23 (Reference)


Item	Content
Terminal No. (Symbol)	E1-26 (BDSU) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and back door opener switch on

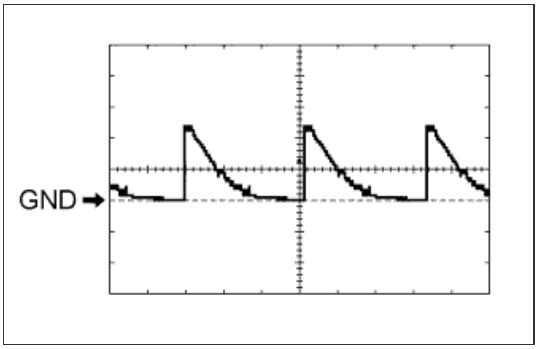

ab. Using an oscilloscope, check waveform 24.

Waveform 24 (Reference)

Item	Content
Terminal No. (Symbol)	E1-26 (BDSU) - Body ground
Tool Setting	5 V/DIV., 20 ms/DIV.
Condition	Engine switch off, all doors closed and back door opener switch on

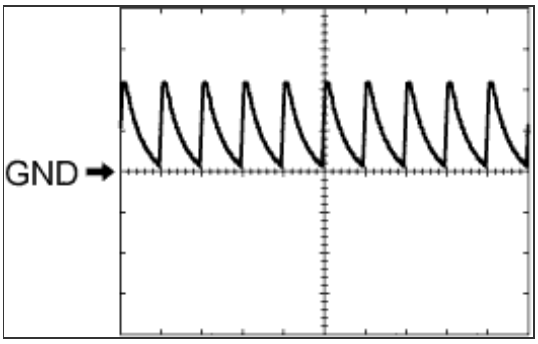

for Preparation Click here

CHECK DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / DTC.

e. Read the DTCs.

CLEAR DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / DTC.

e. Clear the DTCs.

for Preparation Click here

DATA LIST

HINT:

Using the intelligent tester to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / Data List.

e. According to the display on intelligent tester, read the "Data List".

Entry&Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Intrusion sensor OFF	Intrusion sensor cancel switch / ON or OFF	ON: Intrusion sensor active (switch off) OFF: Intrusion sensor not active (switch on)	-
Intrusion sensor detection	Intrusion sensor setting / ON or OFF	ON: Moving object detected by sensor during arming preparation state to armed state OFF: No moving object detected by sensor	-
Tilt sensor detection	Tilt sensor setting / ON or OFF	ON: Tilt sensor set OFF: Tilt sensor not set	-
Hood Courtesy Switch	Engine hood courtesy switch / ON or OFF	ON: Engine hood open OFF: Engine hood closed	-
Warn By Horn	Security horn / ON or OFF	ON: Security horn sounding OFF: Security horn not sounding	-
Glass break sensor detection	Glass breakage sensor detection / ON or OFF	ON: Glass breakage sensor operates OFF: Glass breakage sensor does not operate	-
Pattern Glass Connection	Pattern Glass Connection / OK or NG	OK: Pattern glass connection NG: No pattern glass connection	-
Intrusion sensor 1 communication	Intrusion sensor setting / OK or STOP	OK: Intrusion sensor set STOP: Intrusion sensor not set	-
Tilt sensor communication	Tilt sensor setting / OK or STOP	OK: Tilt sensor set STOP: Tilt sensor not set	-
Tilt sensor OFF Switch	Tilt sensor OFF switch / ON or OFF	ON: Tilt sensor active (switch off) OFF: Tilt sensor not active (switch on)	-
# Codes	Number of diagnostic trouble codes	-	-

Main Body

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D Door Courtesy SW	Driver side door courtesy light switch signal / ON or OFF	ON: Driver side door opened OFF: Driver side door closed	-
D Door Lock Pos SW	Driver side door lock position switch signal / ON or OFF	ON: Driver side door unlocked OFF: Driver side door locked	-
Door Key SW-Lock	Door key linked lock switch signal / ON or OFF	ON: Driver side door key cylinder turned to lock position OFF: Driver side door key cylinder not turned	-

D-Door Key SW-UL	Door key linked unlock switch signal / ON or OFF	ON: Driver side door key cylinder turned to unlock position OFF: Driver side door key cylinder not turned	-
P-Door Courtesy SW	Front passenger side door courtesy light switch signal / ON or OFF	ON: Front passenger side door opened OFF: Front passenger side door closed	-
P-Door Lock Pos SW	Front passenger side door lock position switch signal / ON or OFF	ON: Front passenger side door unlocked OFF: Front passenger side door locked	-
Door Lock SW-Lock	Door manual lock switch signal / ON or OFF	ON: Front passenger side door control switch on (LOCK) OFF: Front passenger side door control switch off	-
Door Unlock SW-Unlock	Door manual unlock switch signal / ON or OFF	ON: Front passenger side door control switch on (UNLOCK) OFF: Front passenger side door control switch off	-
RL Door Courtesy SW	Rear LH side door courtesy light switch signal / ON or OFF	ON: Rear LH side door opened OFF: Rear LH side door closed	-
RL-Door Lock Pos SW	Rear LH side door lock position switch signal / ON or OFF	ON: Rear LH side door unlocked OFF: Rear LH side door locked	-
RR Door Courtesy SW	Rear RH side door courtesy light switch signal / ON or OFF	ON: Rear RH side door opened OFF: Rear RH side door closed	-
RR-Door Lock Pos SW	Rear RH side door lock position switch signal / ON or OFF	ON: Rear RH side door unlocked OFF: Rear RH side door locked	-
Back Door Courtesy SW	Back door courtesy light switch signal / ON or OFF	ON: Back door open OFF: Back door closed	-
Back Door Open SW	ON / OFF	ON: Back door opener switch on OFF: Back door opener switch off	-
Back Door Open	Permit / Prohibit	PERMIT: Back door open available PROHIBIT: Back door open unavailable	-
IG SW	ON / OFF	ON: Engine switch is on (IG) OFF: Engine switch is off	-
ACC SW	ON / OFF	ON: Engine switch on (ACC) OFF: Engine switch off	-

ACTIVE TEST

HINT:

Using the intelligent tester to perform the Active Test allows relays, VSVs and actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. Performing Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Entry&Start / Active Test.

e. According to the display on intelligent tester, perform the "Active Test".

Entry&Start

Tester Display	Test Part	Control Range	Diagnostic Note
Security Indicator	Security indicator	ON / OFF	-
Security Horn*1	Security horn	ON / OFF	-
Security Horn2*2	Theft warning siren (self power siren)	ON / OFF	-
Power For Tilt Sensor*3	Tilt sensor power supply	ON / OFF	-
Power For Intrusion Sensor*3	Intrusion sensor power supply	ON / OFF	-

HINT:

*1: w/ Security Horn

*2: w/ Theft Warning Siren (Self Power Siren)

*3: w/ Intrusion Sensor

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Certification ECU [Entry&Start]

DTC Code	Detection Item	Trouble Area	See page
B2761	Intrusion Sensor Internal Circuit Malfunction	- Intrusion sensor - Map light assembly - Certification ECU (Smart key ECU assembly)	Click here
B2762	Intrusion Sensor Signal Circuit Malfunction	- Intrusion sensor - Map light assembly - Certification ECU (Smart key ECU assembly) - Harness or connector	Click here
B2764	Short to GND in Intrusion Sensor Signal Circuit	- Intrusion sensor - Map light assembly - Certification ECU (Smart key ECU assembly) - Harness or connector	Click here
B2768	Tilt Sensor Internal Circuit Malfunction	- Yaw rate sensor - Certification ECU (Smart key ECU assembly)	Click here
B2769	Tilt Sensor Signal Circuit Malfunction	- Yaw rate sensor - Certification ECU (Smart key ECU assembly) - Harness or connector	Click here
B276A	Short to GND in Tilt Sensor Signal Circuit	- Yaw rate sensor - Certification ECU (Smart key ECU assembly) - Harness or connector	Click here

DTC B2761 Intrusion Sensor Internal Circuit Malfunction

for Preparation Click here

DESCRIPTION

The intrusion sensor conducts a self-diagnosis immediately after the power is supplied to the sensor (when the theft deterrent system is set).
If a malfunction is detected in the intrusion wave transmission or wave reception, or the intrusion sensor wave transmission or wave reception circuit, the intrusion sensor sends a signal to the certification ECU (smart key ECU assembly). The ECU then outputs this DTC.

DTC Code	DTC Detection Condition	Trouble Area
B2761	The intrusion sensor outputs a signal for a sensor malfunction.	• Intrusion sensor • Map light assembly • Certification ECU (Smart key ECU assembly)

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Set the theft deterrent system and check if the same DTC is not output.

OK:
DTC B2761 is not output.

NG → **Go to step 2**

OK →

USE SIMULATION METHOD TO CHECK (Click here)

2.CHECK INTRUSION SENSOR (OPERATION)

a. Temporarily replace the intrusion sensor with a new or normally functioning sensor (Click here).

b. Check if DTC B2761 is not output.

OK:
DTC B2761 is not output.

NG → **Go to step 3**

OK →

END (INTRUSION SENSOR IS FAULTY)

3.CHECK MAP LIGHT ASSEMBLY (OPERATION)

a. Temporarily replace the map light with a new or normally functioning one (Click here).

b. Check if DTC B2761 is not output.

OK:
DTC B2761 is not output.

NG → **REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)**

OK →

END (MAP LIGHT ASSEMBLY IS FAULTY)

DTC B2768 Tilt Sensor Internal Circuit Malfunction

for Preparation Click here

DESCRIPTION

This DTC is stored when one of the following occurs: 1) yaw rate sensor power supply malfunction; 2) yaw rate sensor open malfunction; or 3) EEPROM malfunction.

DTC Code	DTC Detection Condition	Trouble Area
B2768	If one of the following is detected: • A yaw rate sensor power supply malfunction. • A yaw rate sensor open malfunction. • An EEPROM malfunction.	• Yaw rate sensor • Certification ECU (Smart key ECU assembly)

INSPECTION PROCEDURE

1.CHECK FOR DTC (OPERATION)

a. Clear DTCs (Click here).

b. Turn the engine switch on (IG), then off.

c. Set the theft deterrent system to the armed state.

d. Check that the security indicator changes from illuminated to flashing.

e. Set the theft deterrent system to the disarmed state.

f. Check for DTCs (Click here).

OK:
DTC B2768 is not output.

NG → **Go to step 2**

OK

USE SIMULATION METHOD TO CHECK (Click here)

2.CHECK YAW RATE SENSOR (OPERATION)

a. Temporarily replace the yaw rate sensor that has a tilt determining function with a new or normally functioning one (Click here).

b. Check that the system operates normally.

OK:
DTC B2768 is not output.

NG → **REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)**

OK

END (YAW RATE SENSOR IS FAULTY)

DTC B2762 Intrusion Sensor Signal Circuit Malfunction


for Preparation Click here

DESCRIPTION

The intrusion sensor conducts a self-diagnosis immediately after power is supplied to the sensor (when the theft deterrent system is set). If a malfunction is detected in the IOUT line, the certification ECU (smart key ECU assembly) stores this DTC.

DTC Code	DTC Detection Condition	Trouble Area
B2762	After a normal/trouble signal is output from the intrusion sensor as result of self-diagnosis, either of the following malfunctions is detected: 1. The IOUT line circuit is open. 2. Reception of signals other than a normal/trouble signal.	• Intrusion sensor • Map light assembly • Certification ECU (Smart key ECU assembly) • Harness or connector

WIRING DIAGRAM

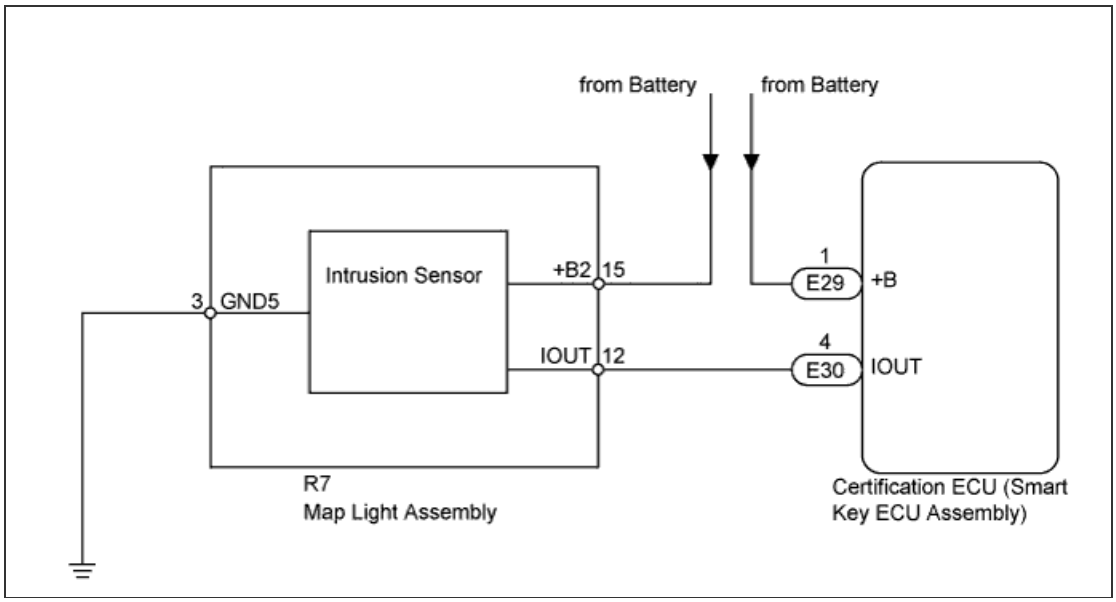

INSPECTION PROCEDURE

1.CHECK HARNESS AND CONNECTOR (MAP LIGHT - CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] AND BODY GROUND)

a. Disconnect the R7 light connector.


b. Disconnect the E30 ECU connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
R7-12 (IOUT) - E30- (IOUT)	Always	Below 1 Ω
R7-12 (IOUT) or E30- (IOUT) - Body ground	Always	10 kΩ or higher
R7-3 (D) - Body ground	Always	Below 1 Ω

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

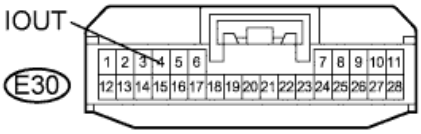

Front view of wire harness connector:
(to Map Light)

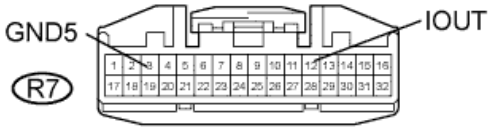

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2.CHECK INTRUSION SENSOR (OPERATION)

a. Temporarily replace the intrusion sensor with a new or normally functioning sensor (Click here).

b. Check if DTC B2762 is not output.

OK:
DTC B2762 is not output.

NG → Go to step 3

OK

END (INTRUSION SENSOR IS FAULTY)

3.CHECK MAP LIGHT ASSEMBLY (OPERATION)

a. Temporarily replace the map light with a new or normally functioning one (Click here).

b. Check if DTC B2762 is not output.

OK:
DTC B2762 is not output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (MAP LIGHT ASSEMBLY IS FAULTY)

DTC B2769 Tilt Sensor Signal Circuit Malfunction


for Preparation Click here

DESCRIPTION

The yaw rate sensor conducts a self-diagnosis immediately after power is supplied to the sensor (when the theft deterrent system is set).
If a malfunction is detected in the CSIF-CSIF line, the certification ECU (smart key ECU assembly) stores this DTC.

DTC Code	DTC Detection Condition	Trouble Area
B2769	After a normal/trouble signal is output from the yaw rate sensor as the result of self-diagnosis, either of the following malfunctions is detected: • The CSIF-CSIF line circuit is open. • Reception of signals other than a normal/trouble signal.	• Yaw rate sensor • Certification ECU (Smart key ECU assembly) • Harness or connector

WIRING DIAGRAM

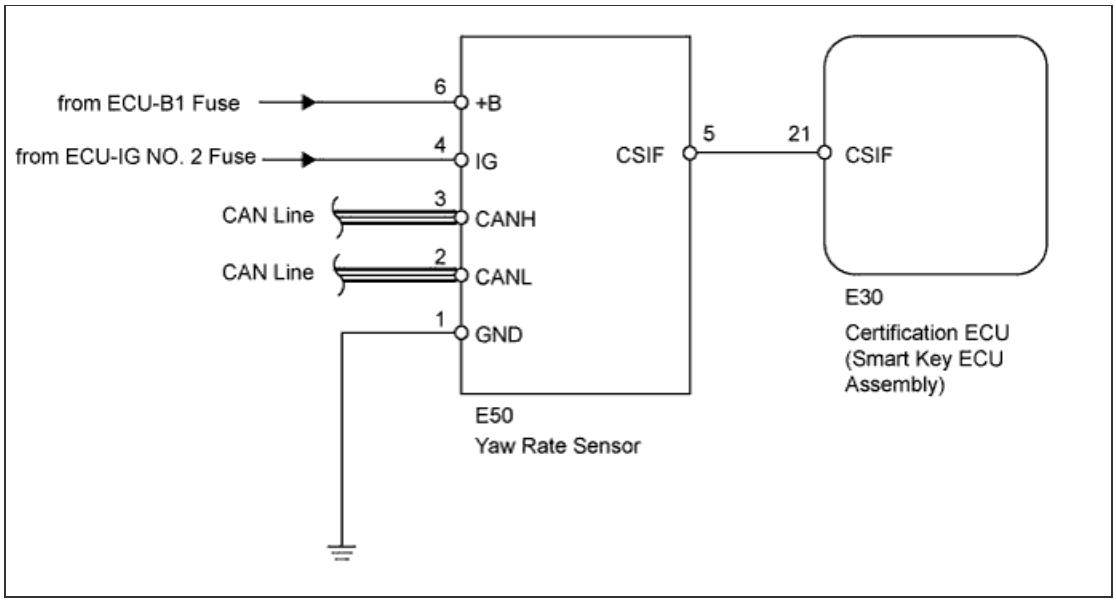

INSPECTION PROCEDURE

1.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - YAW RATE SENSOR)

a. Disconnect the E30 ECU connector.


b. Disconnect the E50 sensor connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E30-21 (CSIF) - E50-5 (CSIF)	Always	Below 1 Ω
E30-21 (CSIF) or E50-5 (CSIF) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

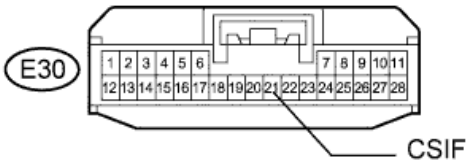

Front view of wire harness connector:
(to Yaw Rate Sensor)

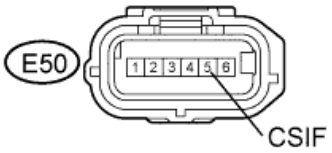

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2.CHECK YAW RATE SENSOR (OPERATION)

a. Temporarily replace the yaw rate sensor that has a tilt determining function with a new or normally functioning one (Click here).

b. Check that the system operates normally.

OK:
DTC B2769 is not output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (YAW RATE SENSOR IS FAULTY)

DTC B2764 Short to GND in Intrusion Sensor Signal Circuit


for Preparation Click here

DESCRIPTION

The intrusion sensor conducts a self-diagnosis immediately after power is supplied to the sensor (when the theft deterrent system is set). This DTC is stored when terminal IOUT of the intrusion sensor has not received a signal for 5 seconds or more.

DTC Code	DTC Detection Condition	Trouble Area
B2764	After normal/trouble signal is output from the intrusion sensor as result of self-diagnosis, the following malfunction is detected: Terminal IOUT of the intrusion sensor has not received signal for 5 seconds or more.	• Intrusion sensor • Map light assembly • Certification ECU (Smart key ECU assembly) • Harness or connector

WIRING DIAGRAM

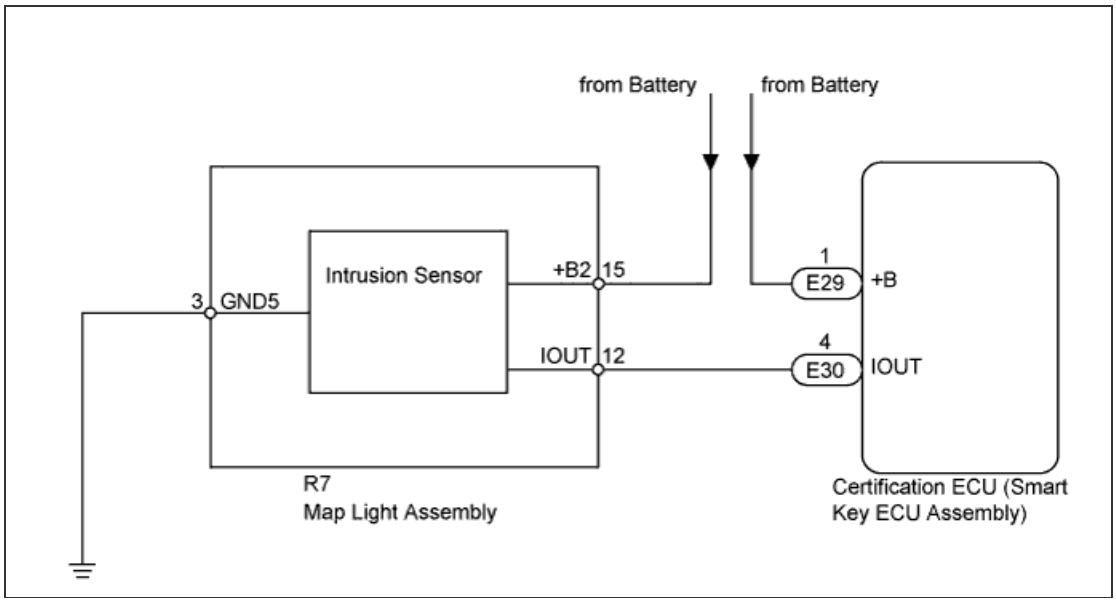

INSPECTION PROCEDURE

1.CHECK HARNESS AND CONNECTOR (MAP LIGHT - CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] AND BODY GROUND)

a. Disconnect the R7 light connector.


b. Disconnect the E30 ECU connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
R7-12 (IOUT) - E30-4 (IOUT)	Always	Below 1 Ω
R7-12 (IOUT) or E30-4 (IOUT) - Body ground	Always	10 kΩ or higher
R7-3 (GND5) - Body ground	Always	Below 1 Ω

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

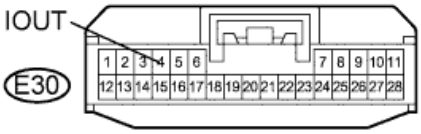

Front view of wire harness connector:
(to Map Light)

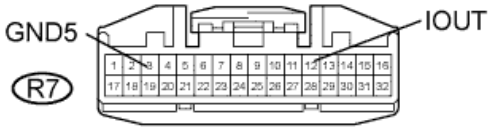

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2.CHECK INTRUSION SENSOR (OPERATION)

a. Temporarily replace the intrusion sensor with a new or normally functioning sensor (Click here).

b. Check if DTC B2764 is not output.

OK:
DTC B2764 is not output.

NG → Go to step 3

OK

END (INTRUSION SENSOR IS FAULTY)

3.CHECK MAP LIGHT ASSEMBLY (OPERATION)

a. Temporarily replace the map light with a new or normally functioning one (Click here).

b. Check if DTC B2764 is not output.

OK:
DTC B2764 is not output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

END (MAP LIGHT ASSEMBLY IS FAULTY)

DTC B276A Short to GND in Tilt Sensor Signal Circuit


for Preparation Click here

DESCRIPTION

The yaw rate sensor conducts a self-diagnosis immediately after power is supplied to the sensor (when the theft deterrent system is set).
This DTC is stored when terminal CSIF of the yaw rate sensor has not received a signal for 5 seconds or more.

DTC Code	DTC Detection Condition	Trouble Area
B276A	After normal/trouble signal is output from the yaw rate sensor as result of self-diagnosis, the following malfunction is detected: Terminal CSIF of the yaw rate sensor has not received signal for 5 seconds or more	• Yaw rate sensor • Certification ECU (Smart key ECU assembly) • Harness or connector

WIRING DIAGRAM

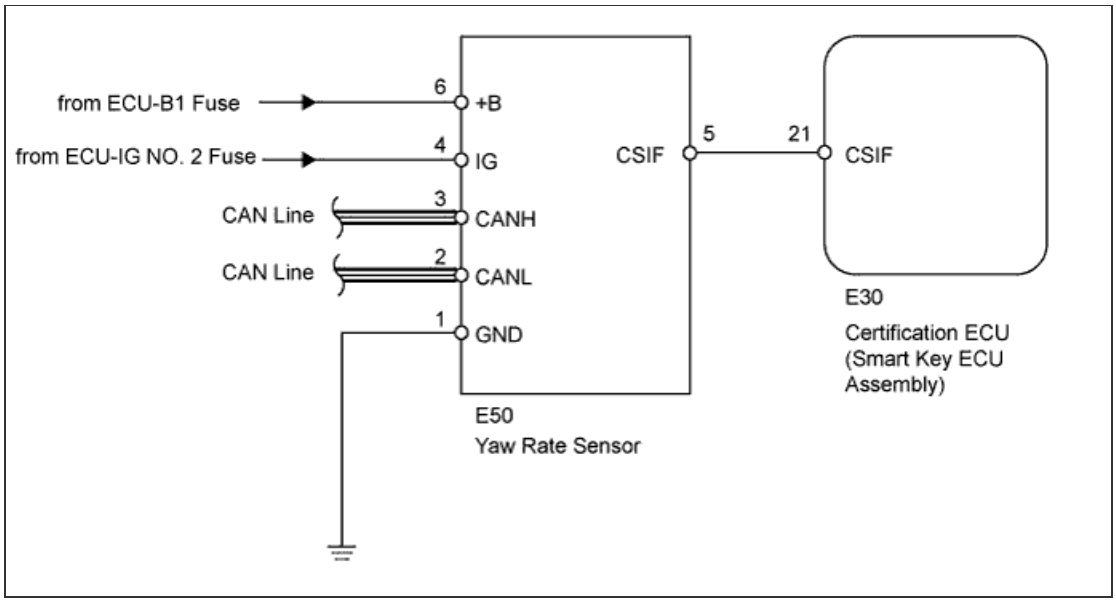

INSPECTION PROCEDURE

1.CHECK HARNESS OR CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - YAW RATE SENSOR)


a. Disconnect the E30 ECU connector.

b. Disconnect the E50 sensor connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E30-21 (CSIF) - E50-5 (CSIF)	Always	Below 1 Ω
E30-21 (CSIF) or E50-5 (CSIF) - Body ground	Always	10 kΩ or higher

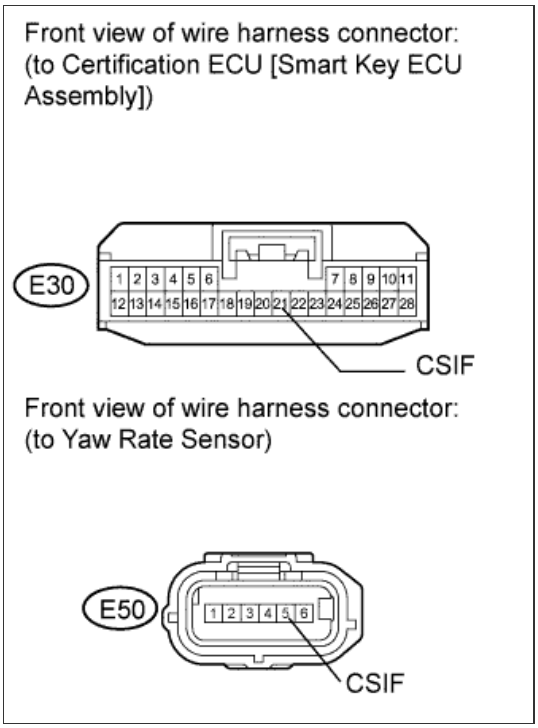

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2.CHECK YAW RATE SENSOR (OPERATION)

a. Temporarily replace the yaw rate sensor that has a tilt determining function with a new or normally functioning one (Click here).

b. Check that the system operates normally.

OK:
DTC B276A is not output.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (YAW RATE SENSOR IS FAULTY)

for Preparation Click here

DESCRIPTION

The engine hood courtesy switch is built into the hood lock. This switch turns on when the engine hood is opened and turns off when the engine hood is closed.

WIRING DIAGRAM

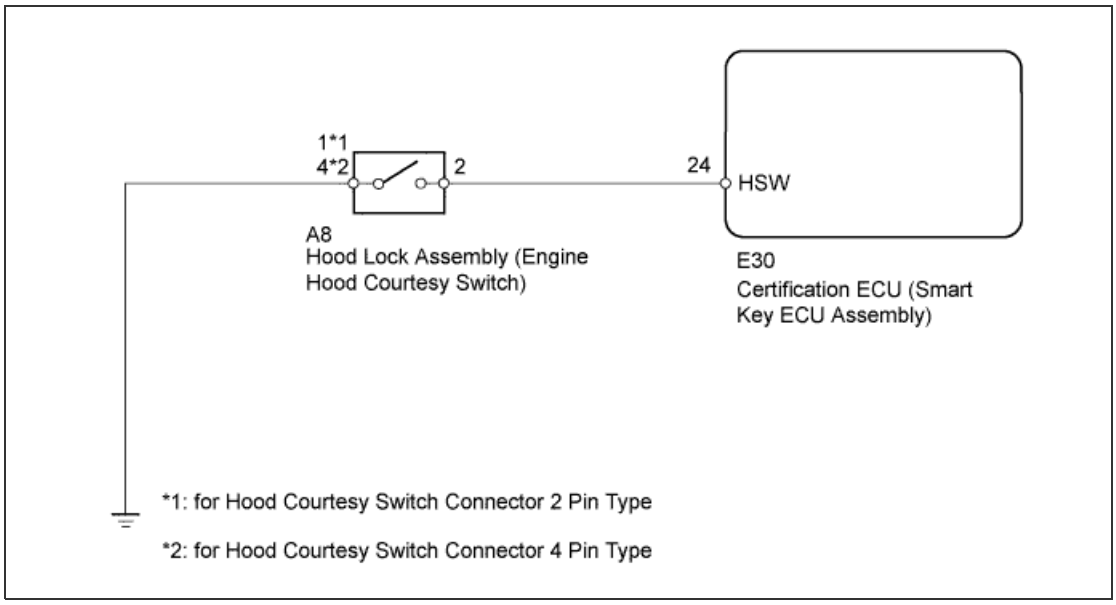

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (ENGINE HOOD COURTESY SWITCH)

a. Using the intelligent tester, read the Data List.

Entry&Start

Tester Display	Measurement Item / Display (Range)	Normal Condition	Diagnostic Note
Hood Courtesy Switch	Engine hood courtesy switch / ON or OFF	ON: Engine hood is open OFF: Engine hood is closed	-


OK:
ON (engine hood is open) appears on screen.

NG → Go to step 2

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

2.INSPECT HOOD LOCK ASSEMBLY (ENGINE HOOD COURTESY SWITCH)

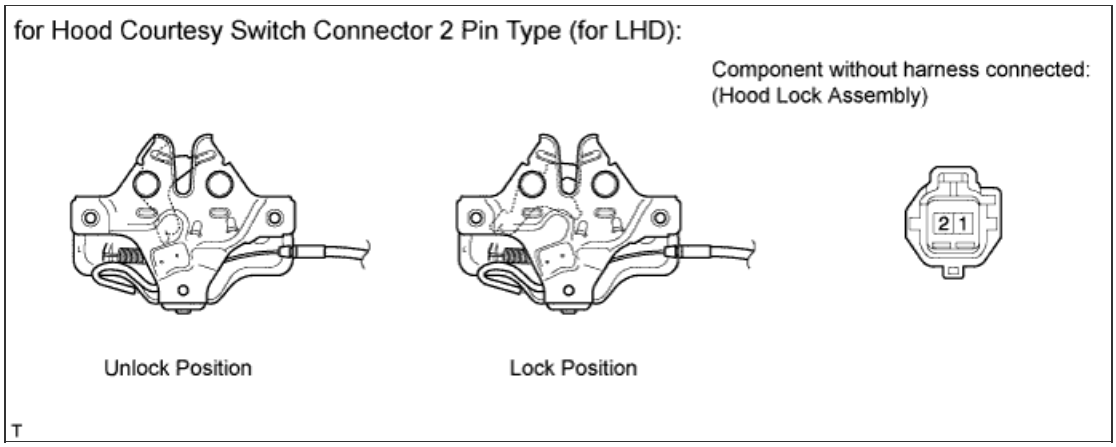


a. for Hood Courtesy Switch Connector 2 Pin Type (for LHD):

i. Remove the hood lock (Click here).

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	Unlock position	10 kΩ or higher
1 - 2	Lock position	Below 1 Ω

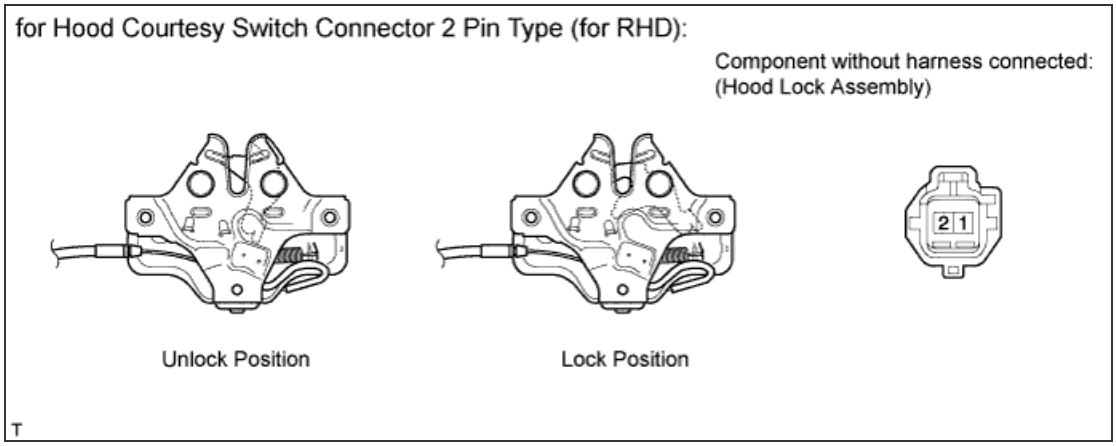

b. for Hood Courtesy Switch Connector 2 Pin Type (for RHD):

i. Remove the hood lock (Click here).


ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	Unlock position	10 kΩ or higher
1 - 2	Lock position	Below 1 Ω

for Hood Courtesy Switch Connector 4 Pin Type:

Component without harness connected:
(Hood Lock Assembly)

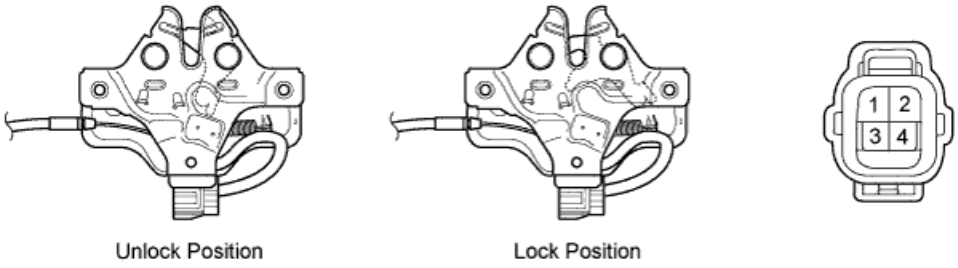

c. for Hood Courtesy Switch Connector 4 Pin Type:

i. Remove the hood lock (Click here).

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
2 - 4	Unlock position	10 kΩ or higher
2 - 4	Lock position	Below 1 Ω

NG → REPLACE HOOD LOCK ASSEMBLY (ENGINE HOOD COURTESY SWITCH)

OK

3.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - HOOD LOCK AND BODY GROUND)

a. for Hood Courtesy Switch Connector 2 Pin Type:

i. Disconnect the E30 ECU connector.

ii. Disconnect the A8 switch connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E30-24 (HSW) - A8-2	Always	Below 1 Ω
A8-1 - Body ground	Always	Below 1 Ω
E30-24 (HSW) or A8-2 - Body ground	Always	10 kΩ or higher

b. for Hood Courtesy Switch Connector 4 Pin Type:

i. Disconnect the E30 ECU connector.


ii. Disconnect the A8 switch connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E30-24 (HSW) - A8-2	Always	Below 1 Ω
A8-4 - Body ground	Always	Below 1 Ω
E30-24 (HSW) or A8-2 - Body	Always	10 kΩ or higher

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

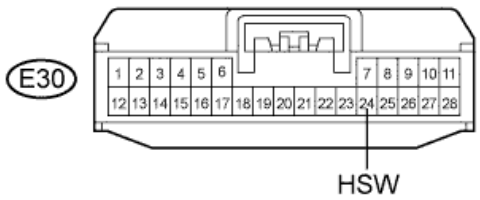


Front view of wire harness connector:
(to Hood Lock)

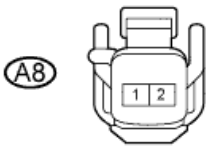


ground		

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

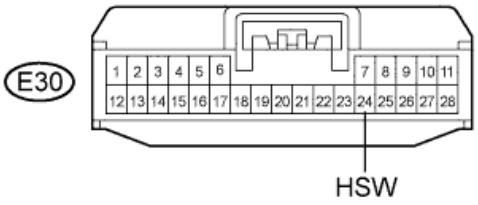

Front view of wire harness connector:
(to Hood Lock)

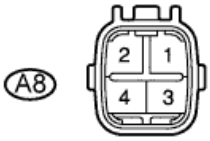

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

for Preparation Click here

DESCRIPTION

When the theft deterrent system is operating, the certification ECU (smart key ECU assembly) outputs a signal continuously at 0.4 second intervals, causing the security horn to sound.

WIRING DIAGRAM

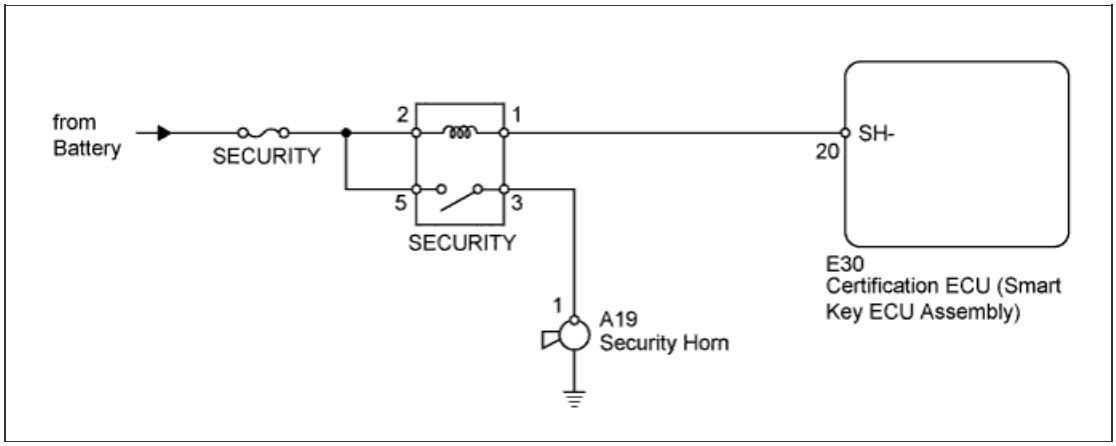

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (SECURITY HORN)

a. Operate the intelligent tester according to the steps on the display and select "Active Test".

Entry&Start

Tester Display	Test Part	Control Range	Diagnostic Note
Security Horn	Security horn	ON/OFF	-

OK:

Security horn operates normally.

NG → Go to step 2

OK →

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

2.INSPECT FUSE (SECURITY)

a. Remove the SECURITY fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
SECURITY fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK →


3.INSPECT SECURITY RELAY

a. Remove the security relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 5	Battery voltage is not applied to terminals 1 and 2	10 kΩ or higher
3 - 5	Battery voltage is applied to terminals 1 and 2	Below 1 Ω

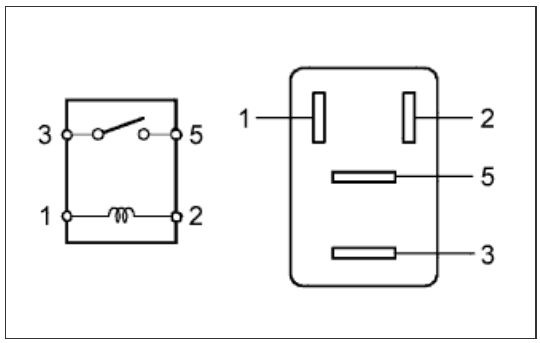

NG → REPLACE SECURITY RELAY

OK


4.INSPECT SECURITY HORN ASSEMBLY

a. Remove the security horn (Click here).

b. Apply battery voltage to the horn connector and check the operation of the horn.

OK:


Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1 Battery negative (-) → Horn bracket	Horn sounds

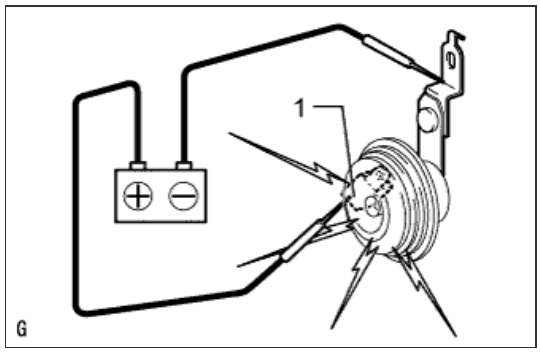

NG → REPLACE SECURITY HORN ASSEMBLY (Click here)

OK

5.CHECK HARNESS AND CONNECTOR (ENGINE ROOM RELAY BLOCK - CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] AND SECURITY HORN)

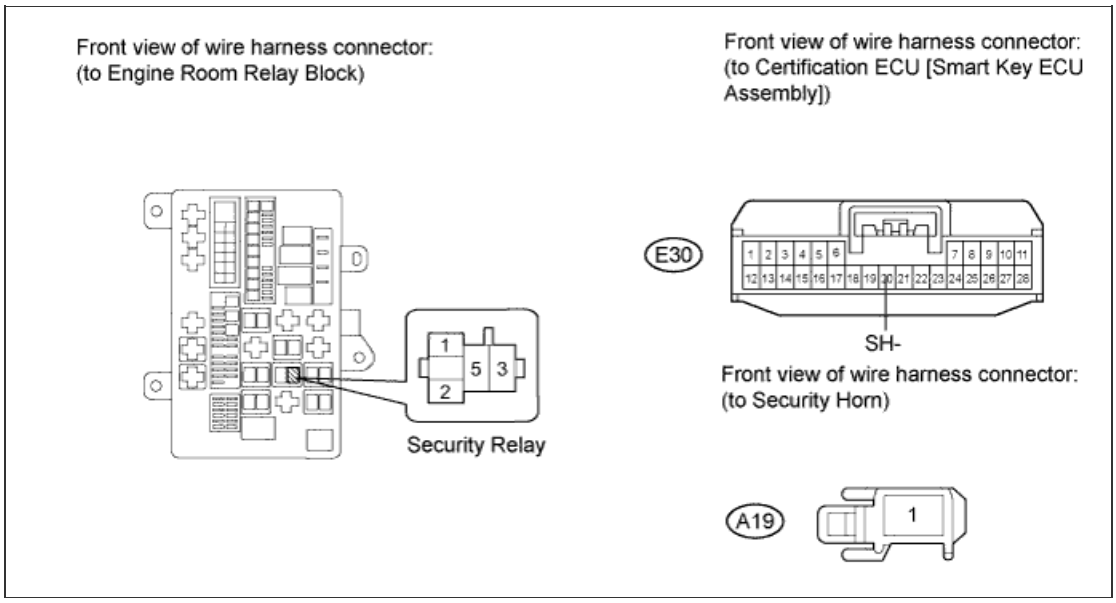

a. Remove the SECURITY relay from the engine room relay block.

b. Disconnect the E30 ECU connector.

c. Disconnect the A19 horn connector.

d. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Relay block security relay terminal 1 - E30-20 (SH-)	Always	Below 1 Ω
Relay block security relay terminal 3 - A19-1	Always	Below 1 Ω
E30-20 (SH-) Body ground	Always	10 kΩ or higher
A19-1 - Body ground	Always	10 kΩ or higher

e. Measure the voltage according to value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
Relay block security relay terminal 2 - Body ground	Always	11 to 14 V
Relay block security relay terminal 5 - Body ground	Always	11 to 14 V

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

for Preparation Click here

DESCRIPTION

When the intrusion sensor cancel switch on the map light is pressed, the sensor off signal is sent to the certification ECU (smart key ECU assembly) which causes the intrusion sensor to stop operating.

WIRING DIAGRAM

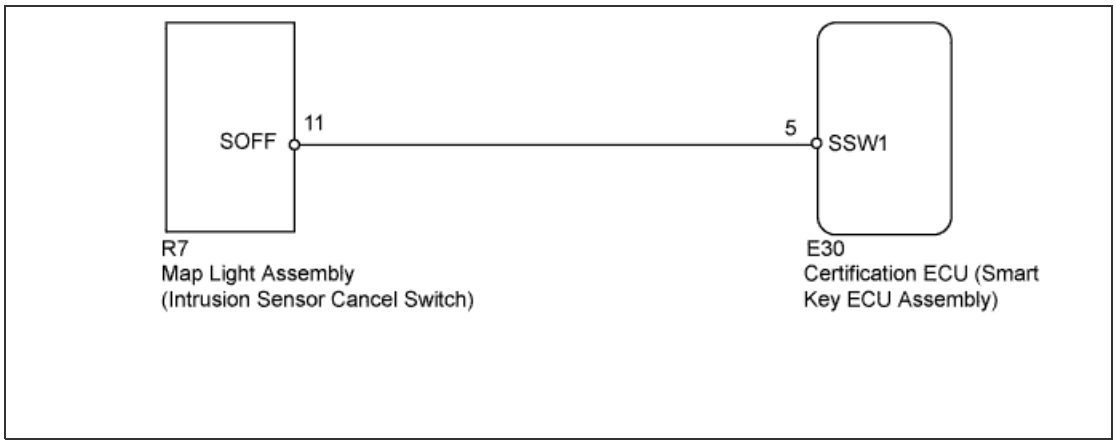

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (INTRUSION SENSOR CANCEL SWITCH)

a. Using the intelligent tester, read the Data List.

Entry&Start

Tester Display	Measurement Item / Display (Range)	Normal Condition	Diagnostic Note
Intrusion sensor OFF	Intrusion sensor cancel switch / ON or OFF	ON: Intrusion sensor active (switch off) OFF: Intrusion sensor not active (switch on)	-

OK:

ON (intrusion sensor active [switch off]) appears on screen.

NG → Go to step 2

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

2.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - MAP LIGHT ASSEMBLY)

a. Disconnect the E30 ECU connector.


b. Disconnect the R7 light connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E30-5 (SSW1) - R7-11 (SOFF)	Always	Below 1 Ω
E30-5 (SSW1) or R7-11 (SOFF) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

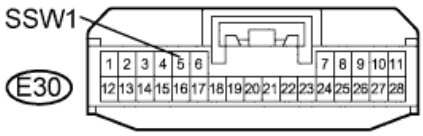

Front view of wire harness connector:
(to Map Light)

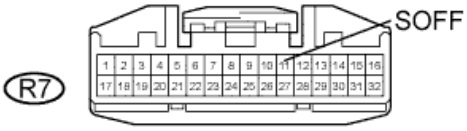

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK MAP LIGHT ASSEMBLY (INTRUSION SENSOR CANCEL SWITCH [OPERATION])

a. Temporarily replace the map light assembly (intrusion sensor cancel switch) with a new or normally functioning one (Click here).

b. Turn the intrusion sensor off by pressing the intrusion sensor cancel switch. Check if the switch operates normally by checking that the theft deterrent system does not operate when you move your hand in front of the sensor.

OK:
Intrusion sensor cancel switch operates normally.

NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK


END (MAP LIGHT [INTRUSION SENSOR CANCEL SWITCH] IS FAULTY)

for Preparation Click here

DESCRIPTION

The theft warning siren (self power siren) has an internal battery. If the vehicle battery cable is disconnected or any of the communication lines are open, the theft warning siren (self power siren) detects this and sounds its siren.
Although the theft warning siren (self power siren) usually sounds by receiving a signal from the certification ECU (smart key ECU assembly), the theft warning siren (self power siren) can sound by its internal battery in case the vehicle battery cable is disconnected.
The certification ECU (smart key ECU assembly) sends an arming signal to the theft warning siren (self power siren) while transferring to the armed state, and it also sends a disarming signal to the siren while switching to the disarmed state. Also, the certification ECU (smart key ECU assembly) can cause the theft warning siren (self power siren) to sound by sending an alarm signal during the alarm sounding state.

WIRING DIAGRAM

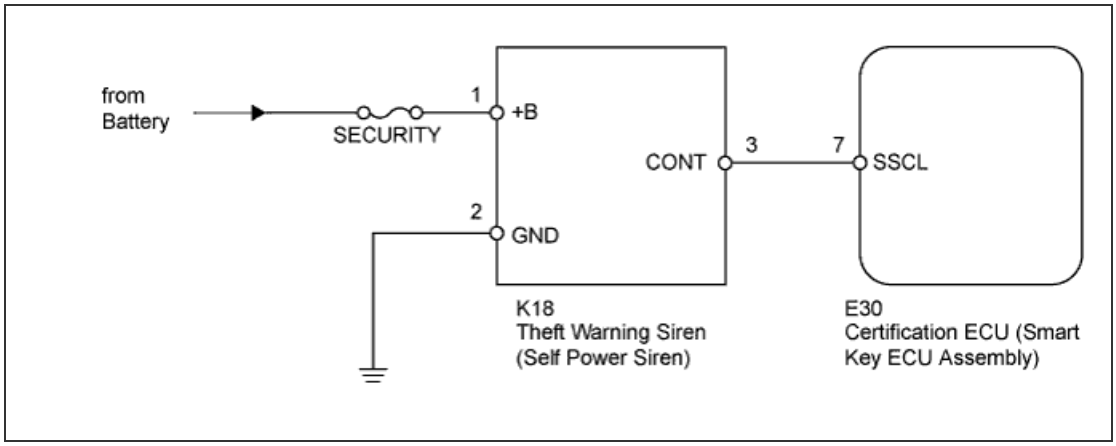

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (THEFT WARNING SIREN [SELF POWER SIREN])

a. Operate the intelligent tester according to the steps on the display and select "Active Test".

Entry&Start

Tester Display	Test Part	Control Range	Diagnostic Note
Security Horn2	Theft warning siren (self power siren)	ON / OFF	-


OK:
Siren operates normally.

NG → Go to step 2

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

2.CHECK THEFT WARNING SIREN (SELF POWER SIREN)

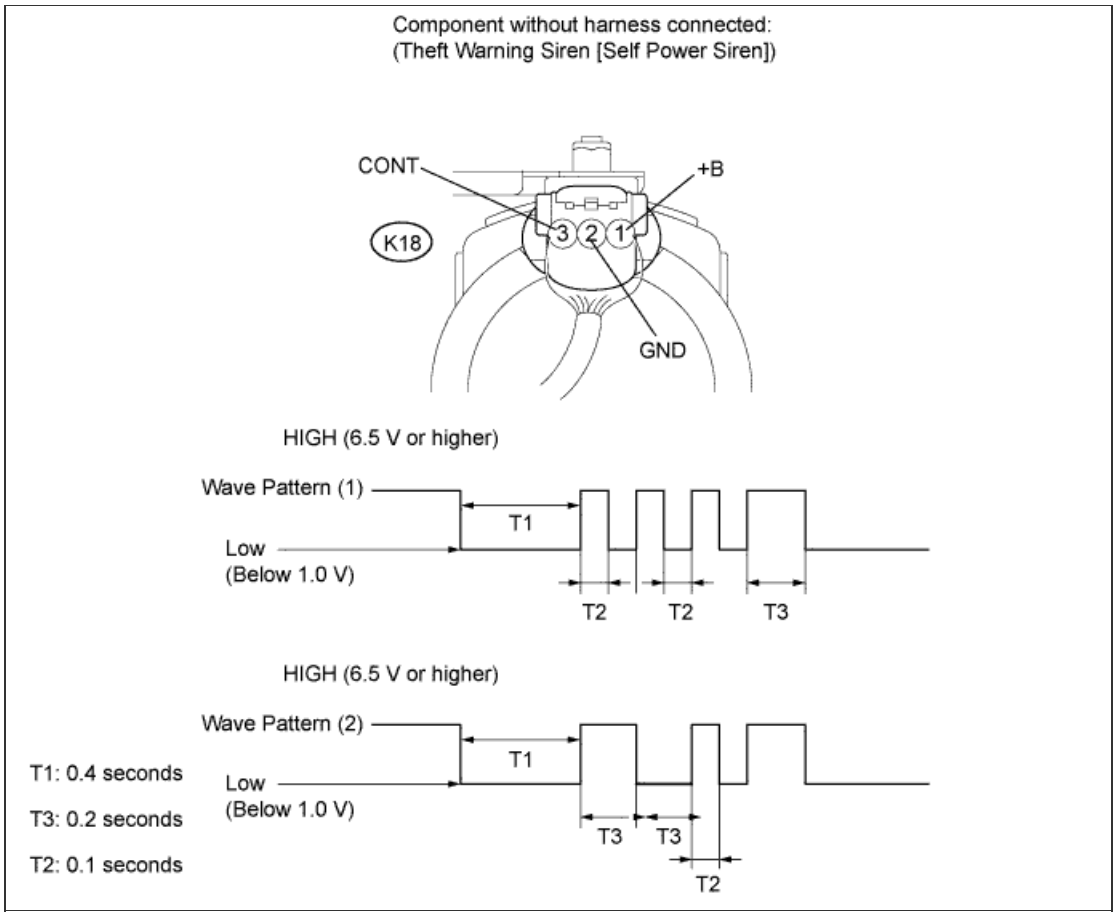

a. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
K18-1 (+B) - Body ground	Always	11 to 14 V
K18-2 (GND) - Body ground	Always	Below 1 V
K18-3 (CONT) - Body ground	Switched from armed state or arming preparation state to disarmed state (1)	Wave pattern (1) shown in chart below
	Switched from arming preparation state to armed state (2)	Wave pattern (2) shown in chart below
	Normal condition (Except (1) and (2))	1 to 2 V

NG → Go to step 3

OK

REPLACE THEFT WARNING SIREN (SELF POWER SIREN) (Click here)

3.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - THEFT WARNING SIREN [SELF POWER SIREN])

a. Disconnect the E30 ECU connector.


b. Disconnect the K18 siren connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E30-7 (SSCL) - K18-3 (CONT)	Always	Below 1 Ω
E30-7 (SSCL) or K18-3 (CONT) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

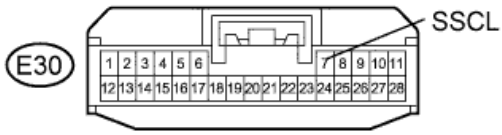

Front view of wire harness connector:
(to Theft Warning Siren [Self Power Siren])



NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK HARNESS AND CONNECTOR (THEFT WARNING SIREN [SELF POWER SIREN] - BODY GROUND)


a. Disconnect the K18 siren connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K18-2 (GND) - Body ground	Always	Below 1 Ω

Front view of wire harness connector:
(to Theft Warning Siren [Self Power Siren])

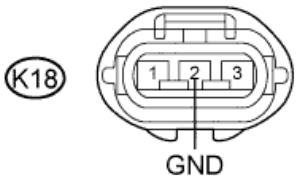

Y

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


for Preparation Click here

DESCRIPTION

When the theft deterrent system is in the disarmed state, the security indicator will flash continuously if the immobiliser system is set, or not illuminate if the immobiliser system is not set.
When the theft deterrent system is in the armed state, the immobiliser system is automatically set and the security indicator will flash continuously.
When the theft deterrent system is in the arming preparation state and alarm sounding state, the certification ECU (smart key ECU assembly) causes the security indicator to be illuminated.

WIRING DIAGRAM

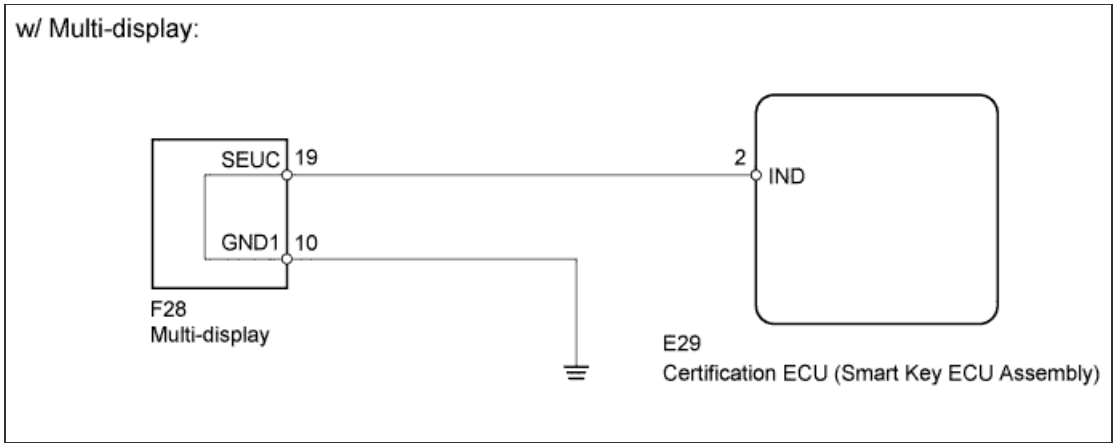

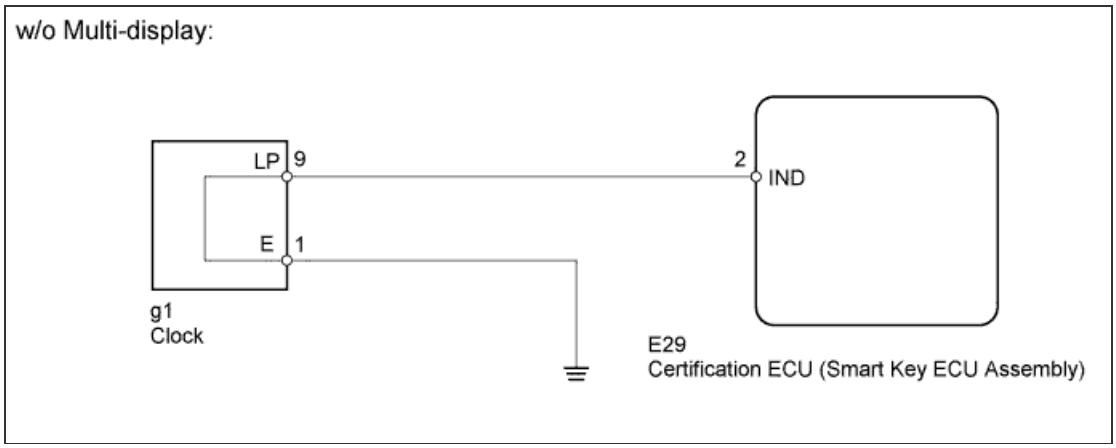

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (SECURITY INDICATOR)

a. Operate the intelligent tester according to the steps on the display and select "Active Test".

Entry&Start

Tester Display	Test Part	Control Range	Diagnostic Note
Security Indicator	Security indicator	ON / OFF	-

OK:
Security indicator illuminates.

NG → Go to step 2

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

2.CHECK VEHICLE EQUIPMENT

a. Check if the multi-display is equipped on the vehicle.

Result

Result	Proceed to
w/ Multi-display	A
w/o Multi-display	B

B → Go to step 4

A

3.CHECK HARNESS AND CONNECTOR (MULTI-DISPLAY - CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] AND BODY GROUND)


a. Disconnect the F28 display connector.

b. Disconnect the E29 ECU connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F28-19 (SEUC) - E29-2 (IND)	Always	Below 1 Ω
F28-10 (GND1) - Body ground	Always	Below 1 Ω
F28-19 (SEUC) or E29-2 (IND) - Body ground	Always	10 kΩ or higher

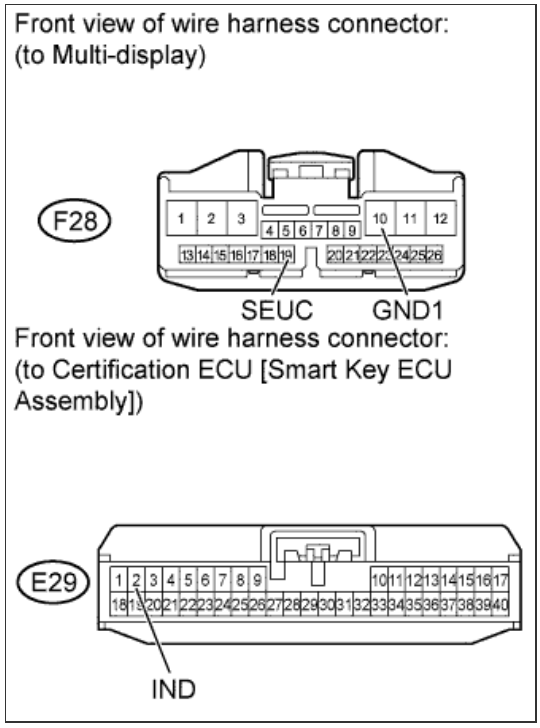

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MULTI-DISPLAY (Click here)

4.CHECK HARNESS AND CONNECTOR (CLOCK - CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] AND BODY GROUND)

a. Disconnect the g1 clock connector.


b. Disconnect the E29 ECU connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
g1-9 (LP) - E29-2 (IND)	Always	Below 1 Ω
g1-1 (E) - Body ground	Always	Below 1 Ω
g1-9 (LP) or E29-2 (IND) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Clock)

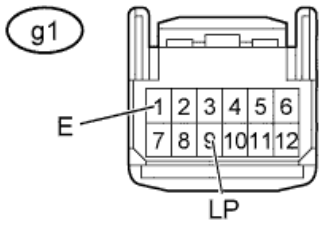

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

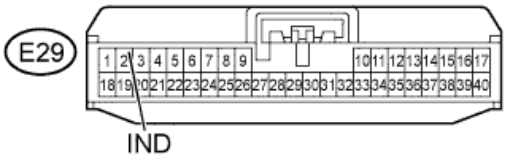

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE CLOCK (Click here)


for Preparation Click here

DESCRIPTION

When the theft deterrent system is in the disarmed state, the security indicator will flash continuously if the immobiliser system is set, or not illuminate if the immobiliser system is not set.
When the theft deterrent system is in the armed state, the immobiliser system is automatically set and the security indicator will flash continuously.
When the theft deterrent system is in the arming preparation state and alarm sounding state, the certification ECU (smart key ECU assembly) causes the security indicator to be illuminated.

WIRING DIAGRAM

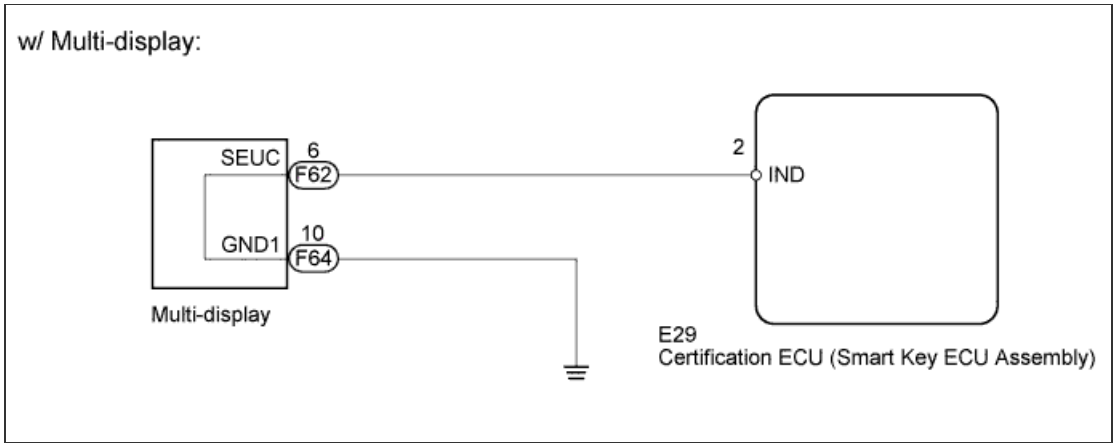

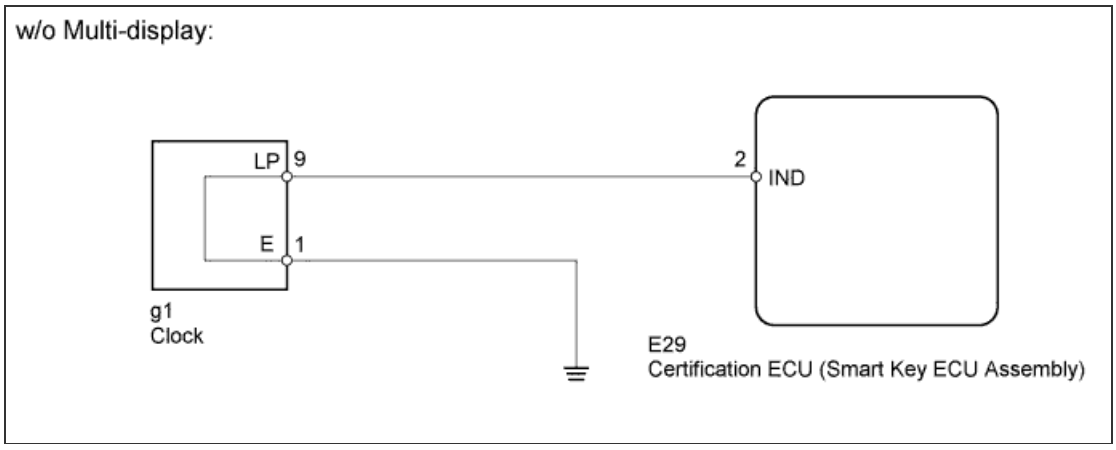

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (SECURITY INDICATOR)

a. Operate the intelligent tester according to the steps on the display and select "Active Test".

Entry&Start

Tester Display	Test Part	Control Range	Diagnostic Note
Security Indicator	Security indicator	ON / OFF	-

OK:
Security indicator illuminates.

NG → Go to step 2

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

2.CHECK VEHICLE EQUIPMENT

a. Check if the multi-display is equipped on the vehicle.

Result

Result	Proceed to
w/ Multi-display	A
w/o Multi-display	B

B → Go to step 4

A

3.CHECK HARNESS AND CONNECTOR (MULTI-DISPLAY - CERTIFICATION ECU (SMART KEY ECU ASSEMBLY) AND BODY GROUND)


a. Disconnect the F62 and F64 display connector.

. Disconnect the E29 ECU connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F62-6 (SEUC) - E29-2 (IND)	Always	Below 1 Ω
F64-10 (GND1) - Body ground	Always	Below 1 Ω
F62-6 (SEUC) or E29-2 (IND) - Body ground	Always	10 kΩ or higher

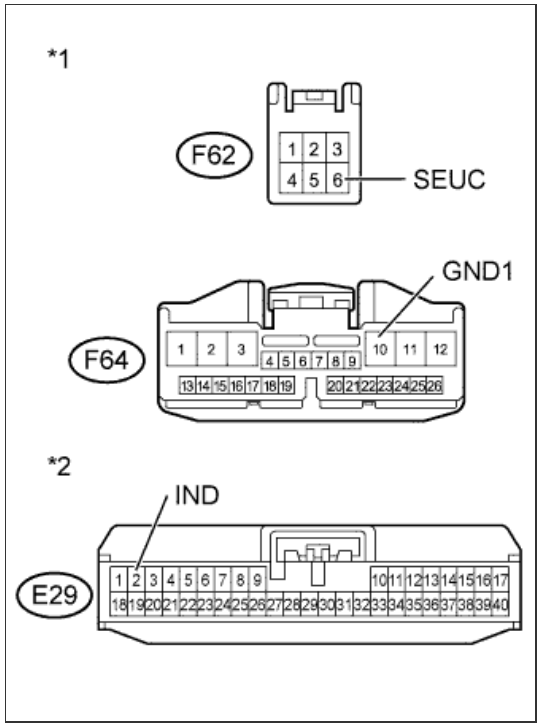

Te t in Illustration

1	Front view of wire harness connector (to Multi-display)
2	Front view of wire harness connector (to Certification ECU (Smart ey ECU Assembly))

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MULTI-DISPLAY (Click here)

4.CHECK HARNESS AND CONNECTOR (CLOCK - CERTIFICATION ECU (SMART KEY ECU ASSEMBLY) AND BODY GROUND)

a. Disconnect the g1 clock connector.

. Disconnect the E29 ECU connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
g1-9 (P) - E29-2 (IND)	Always	Below 1 Ω
g1-1 (E) - Body ground	Always	Below 1 Ω
g1-9 (P) or E29-2 (IND) - Body ground	Always	10 kΩ or higher

Te t in Illustration

	Front view of wire harness connector

*1	(to Clock)
2	Front view of wire harness connector (to Certification ECU Smart ey ECU Assembly)

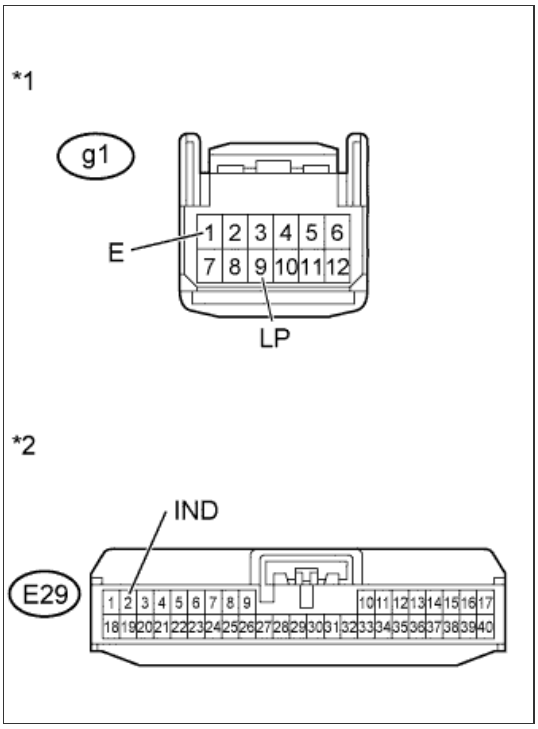

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE CLOCK (Click here)

for Preparation Click here

DESCRIPTION

When the glass breakage sensor detects that the back door glass, quarter window glass LH or quarter window glass RH is tapped or broken, the sensor will set off the alarm for 30 seconds.

WIRING DIAGRAM

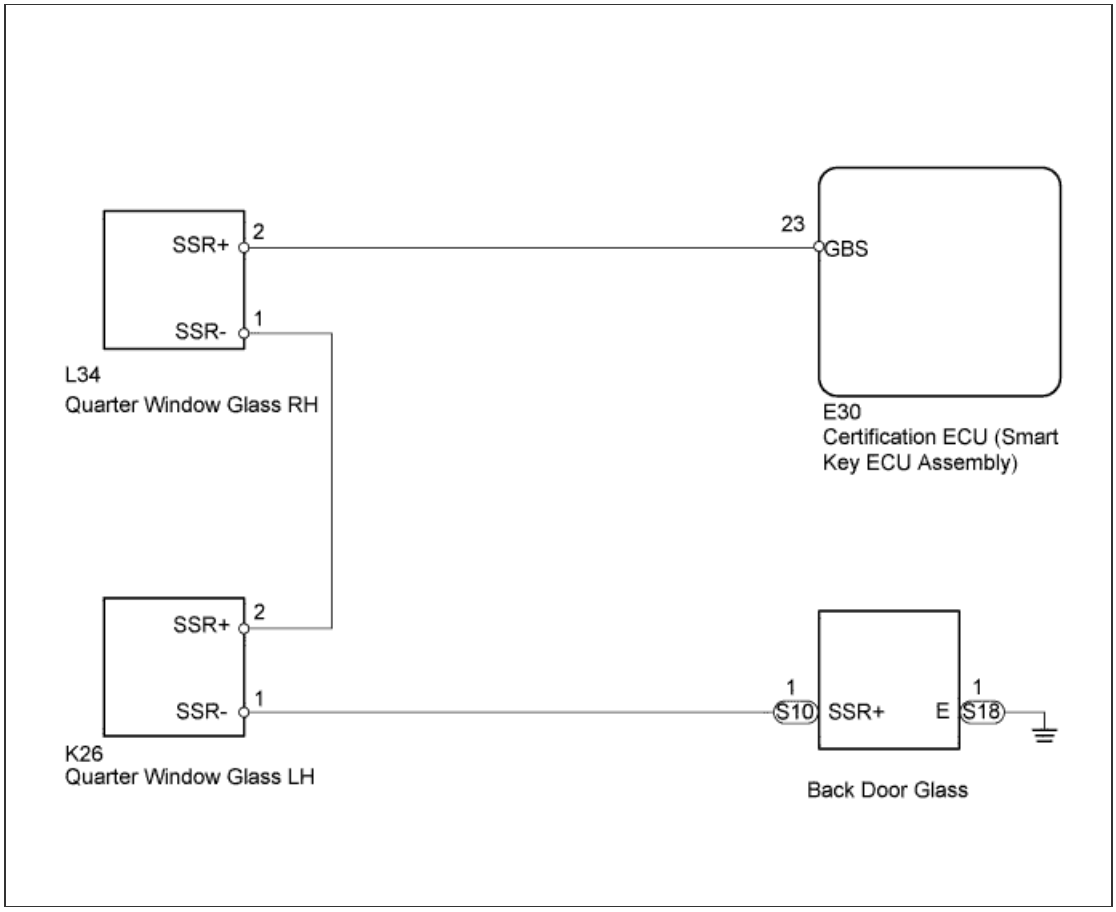

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (GLASS BREAK SENSOR)

a. Using the intelligent tester, read the Data List.

Entry&Start

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Glass break sensor detection	Glass breakage sensor detection / ON or OFF	ON: Glass breakage sensor operates OFF: Glass breakage sensor does not operate	-

OK:

ON (glass breakage sensor operates) appears on screen.

NG → Go to step 2

OK

REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)


2.INSPECT CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

a. Disconnect the E30 ECU connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E30-23 (GBS) - Body ground	Always	Below 1.5 V

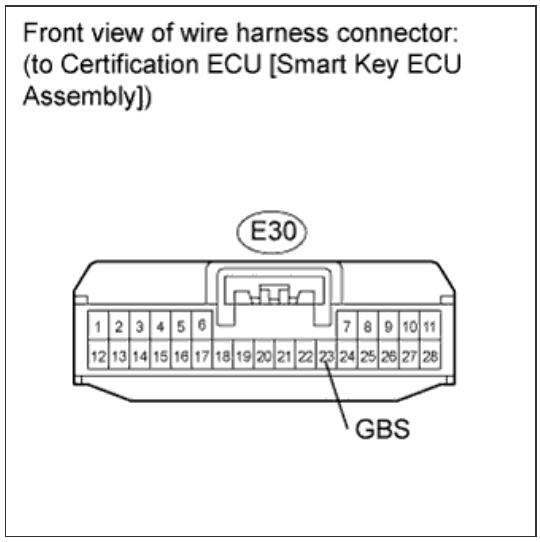


NG → REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

OK

3.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - GLASS BREAKAGE SENSOR)

a. Disconnect the E30 ECU connector.

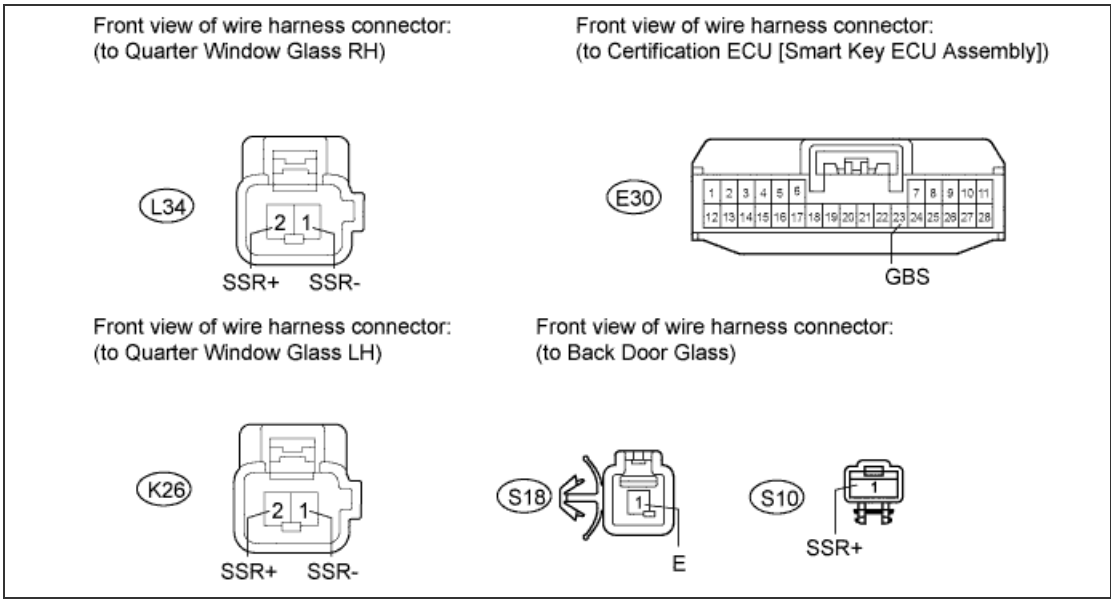

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E30-23 (GBS) - L34-2 (SSR+)	Always	Below 1 Ω
L34-1 (SSR-) - K26-2 (SSR+)	Always	Below 1 Ω
K26-1 (SSR-) - S10-1 (SSR+)	Always	Below 1 Ω
S18-1 (E) - Body ground	Always	Below 1 Ω

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


4.INSPECT QUARTER WINDOW GLASS RH

a. Disconnect the L34 sensor connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (SSR-) - 2 (SSR+)	Always	Below 1 Ω

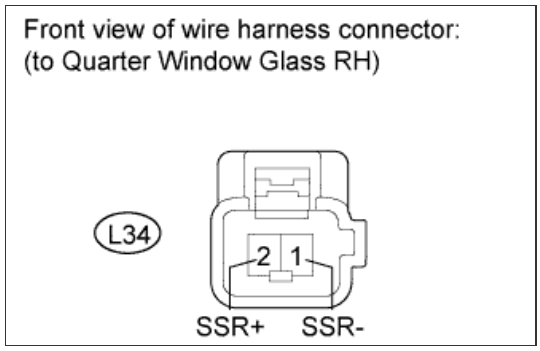

NG → REPLACE REAR DOOR QUARTER WINDOW GLASS RH

OK


5.INSPECT QUARTER WINDOW GLASS LH

a. Disconnect the K26 sensor connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (SSR-) - 2 (SSR+)	Always	Below 1 Ω

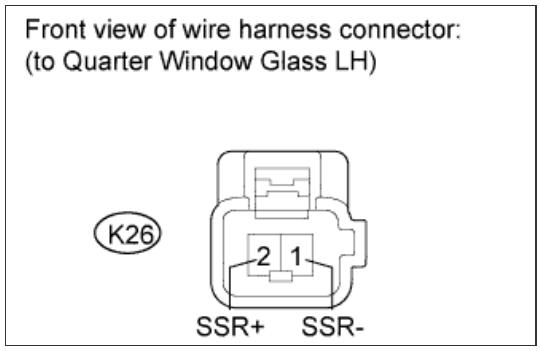

NG → REPLACE REAR DOOR QUARTER WINDOW GLASS LH

OK

6.INSPECT BACK DOOR GLASS


a. Disconnect the S10 sensor connector.

b. Disconnect the S18 defogger connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
S10-1 (SSR+) - S18-1 (E)	Always	Below 1 Ω

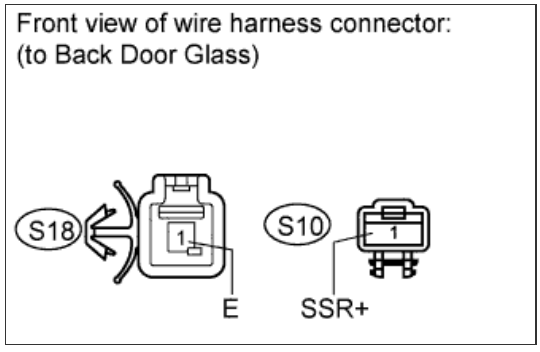

NG → REPLACE BACK DOOR GLASS

OK


REPLACE CERTIFICATION ECU (SMART KEY ECU ASSEMBLY)

for Preparation Click here

DESCRIPTION

This circuit provides power to operate the certification ECU (smart key ECU assembly).

WIRING DIAGRAM

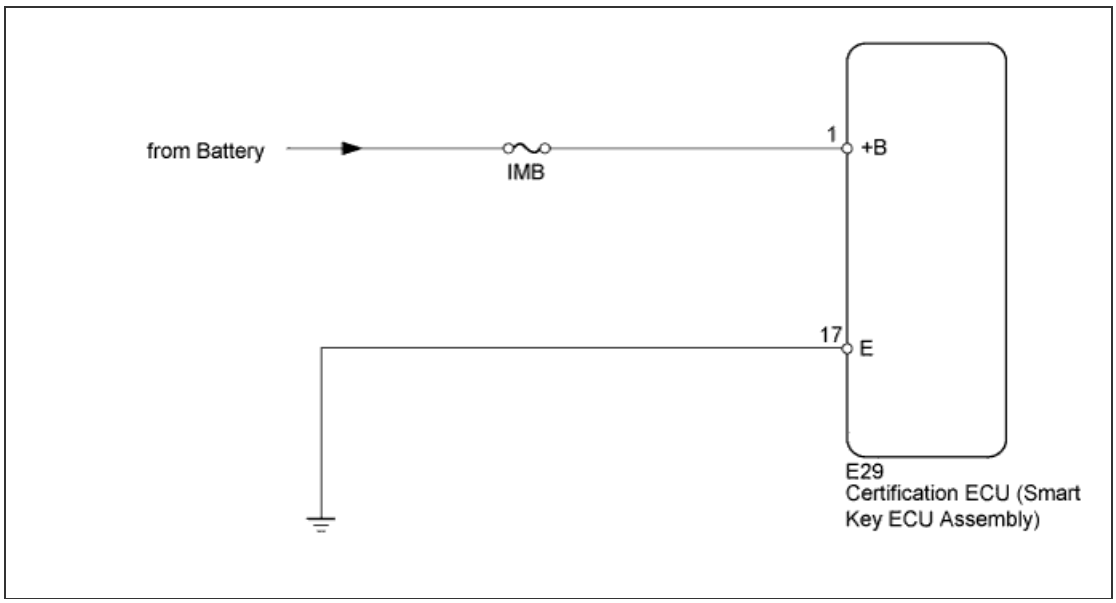

INSPECTION PROCEDURE

1.INSPECT FUSE (IMB)

a. Remove the IMB fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IMB fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - BATTERY AND BODY GROUND)

a. Disconnect the E29 ECU connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E29-17 (E) - Body ground	Always	Below 1 Ω

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E29-1 (+B) - Body ground	Always	11 to 14 V

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

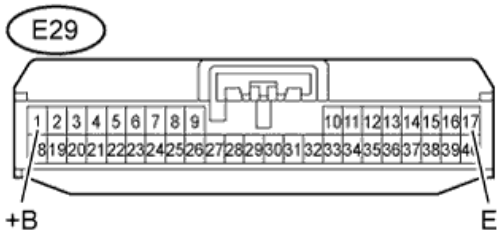

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


PROCEED TO NE T CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

DESCRIPTION

This circuit provides power to operate the certification ECU (smart key ECU assembly).

WIRING DIAGRAM

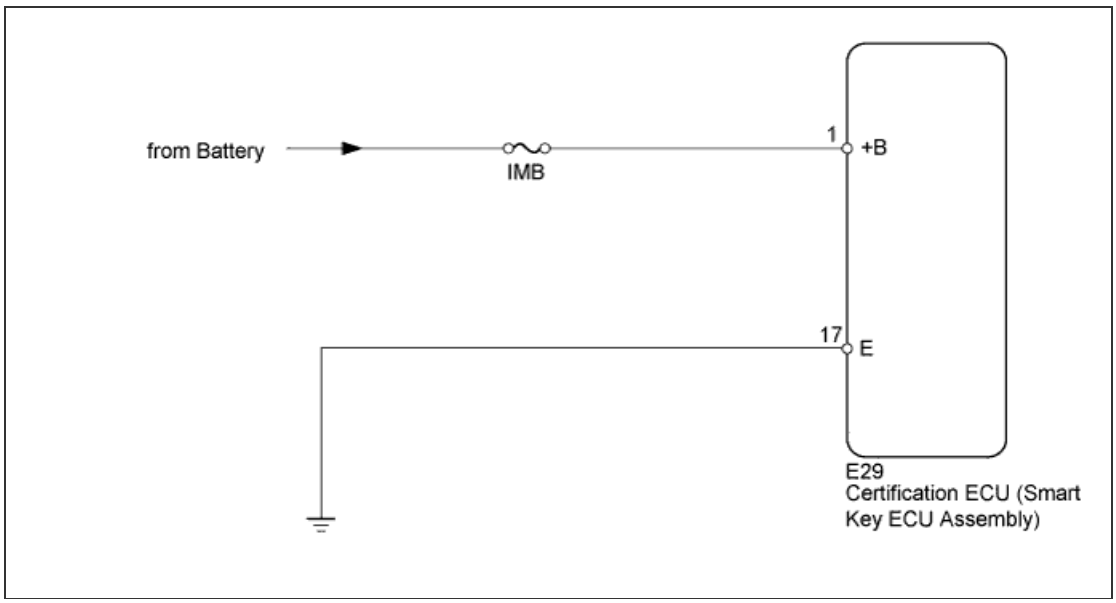

INSPECTION PROCEDURE

1.INSPECT FUSE (IMB)

a. Remove the IMB fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IMB fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - BATTERY AND BODY GROUND)

a. Disconnect the E29 ECU connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E29-17 (E) - Body ground	Always	Below 1 Ω

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E29-1 (+B) - Body ground	Always	11 to 14 V

Front view of wire harness connector:
(to Certification ECU [Smart Key ECU Assembly])

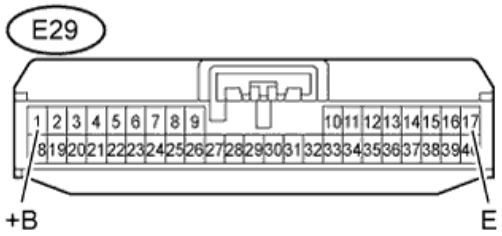

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


PROCEED TO NE T CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

DESCRIPTION

When the engine switch is turned on (IG), positive (+) battery voltage is applied to the certification ECU (smart key ECU assembly).

WIRING DIAGRAM

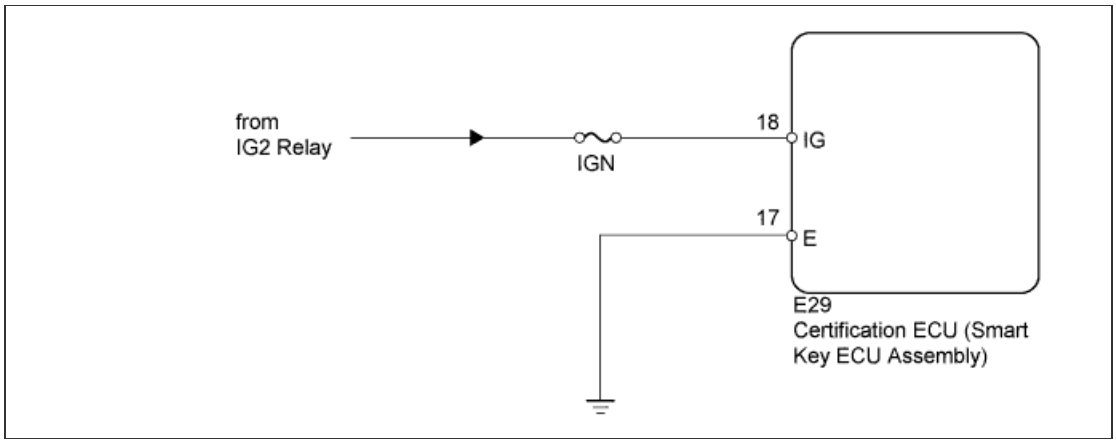

INSPECTION PROCEDURE

1.CHECK BASIC FUNCTION (POWER SOURCE MODE FUNCTION)

a. Check the basic function of the power source mode function.

OK:
Basic function operates normally.

NG → GO TO ENTRY AND START SYSTEM (for Start Function) (Click here)

OK

2.INSPECT FUSE (IGN)

a. Remove the IGN fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IGN fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

3.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - BATTERY AND BODY GROUND)

a. Disconnect the E29 ECU connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition

E29-1 (E) - Body ground	Always	Below 1 Ω

c. Measure the voltage according to the value(s) in the table below.

Standard olta e:

Tester Connection	Switch Condition	Specified Condition
E29-18 (IG) - Body ground	Engine switch on (IG)	11 to 14 V

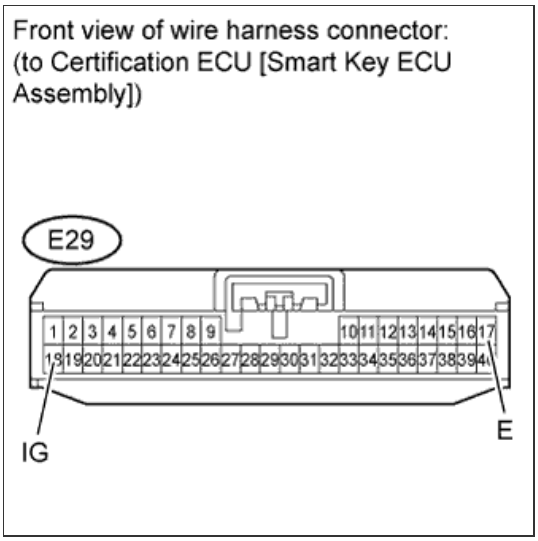

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

DESCRIPTION

When the engine switch is turned on (IG), positive (+) battery voltage is applied to the certification ECU (smart key ECU assembly).

WIRING DIAGRAM

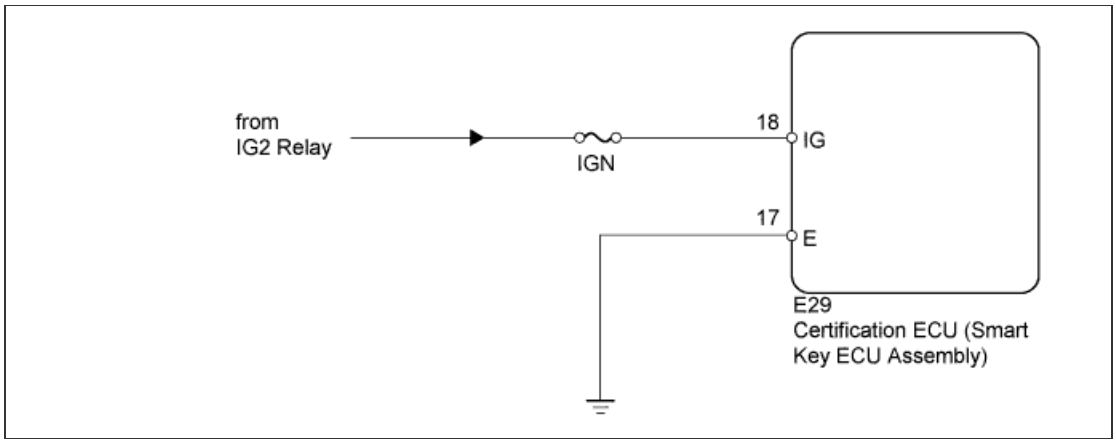

INSPECTION PROCEDURE

1.CHECK BASIC FUNCTION (POWER SOURCE MODE FUNCTION)

a. Check the basic function of the power source mode function.

OK:
Basic function operates normally.

NG → GO TO ENTRY AND START SYSTEM (for Start Function) (Click here)

OK

2.INSPECT FUSE (IGN)

a. Remove the IGN fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IGN fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

3.CHECK HARNESS AND CONNECTOR (CERTIFICATION ECU [SMART KEY ECU ASSEMBLY] - BATTERY AND BODY GROUND)

a. Disconnect the E29 ECU connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition

E29-1 (E) - Body ground	Always	Below 1 Ω

c. Measure the voltage according to the value(s) in the table below.

Standard olta e:

Tester Connection	Switch Condition	Specified Condition
E29-18 (IG) - Body ground	Engine switch on (IG)	11 to 14 V

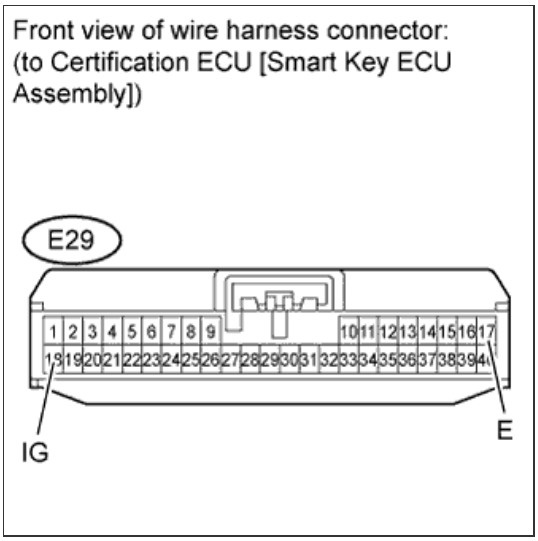


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

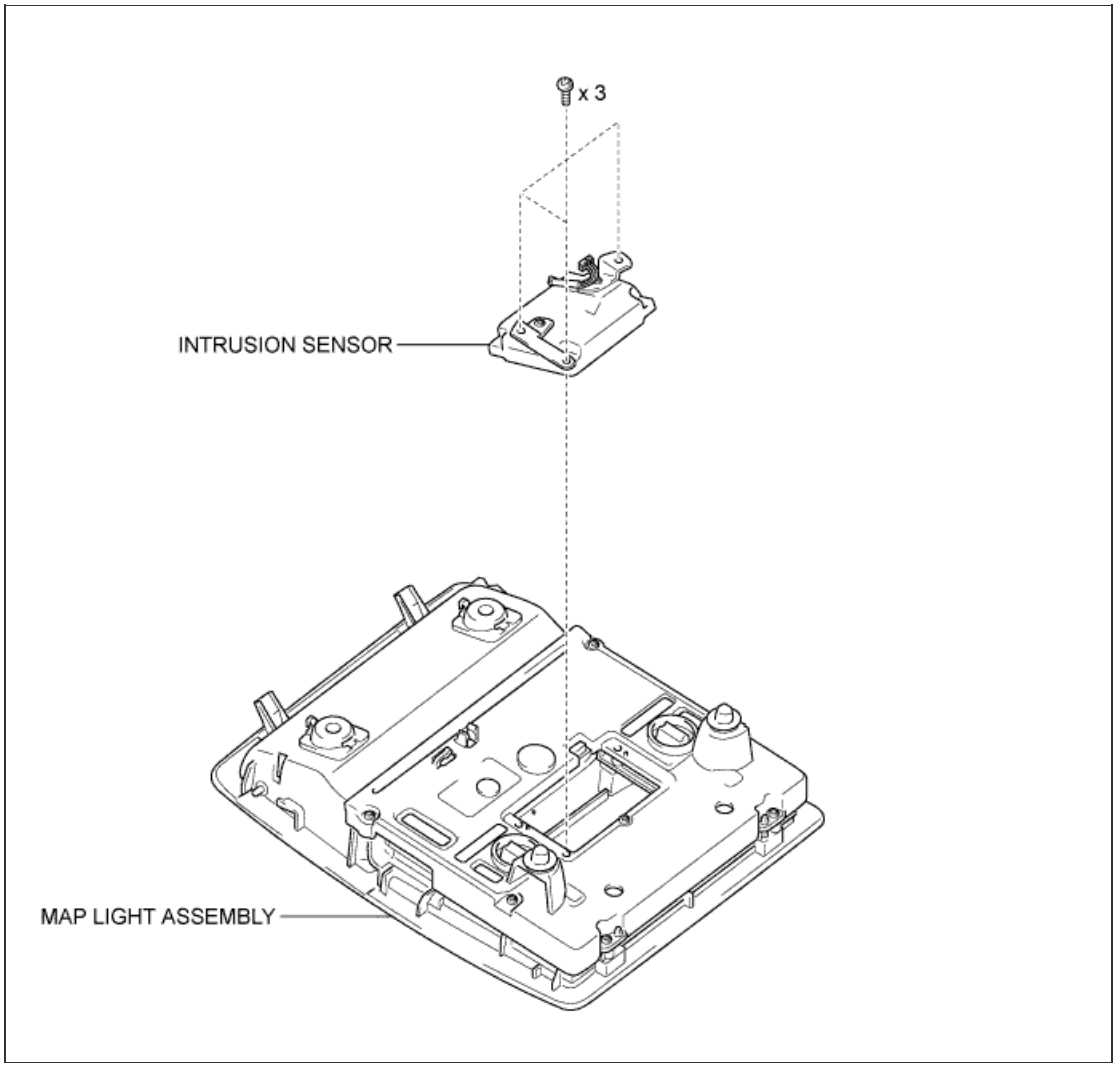

for Preparation Click here

1. REMOVE MAP LIGHT ASSEMBLY


a. w/ Sliding Roof:
Remove the map light (Click here).

b. w/o Sliding Roof:
Remove the map light (Click here).

2. REMOVE INTRUSION SENSOR

a. Disconnect the connectors.

b. Remove the 3 screws and sensor.

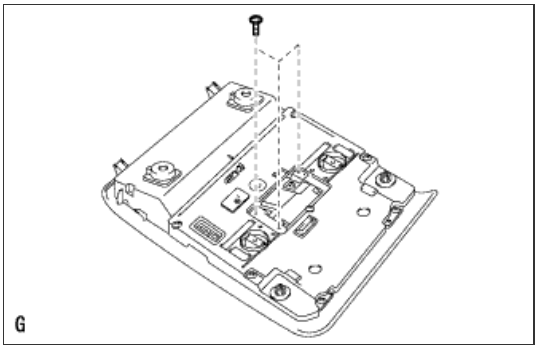

for Preparation Click here

1. REMOVE MAP LIGHT ASSEMBLY


a. w/ Sliding Roof:
Remove the map light (Click here).

b. w/o Sliding Roof:
Remove the map light (Click here).

2. REMOVE INTRUSION SENSOR

a. Disconnect the connectors.

b. Remove the 3 screws and sensor.

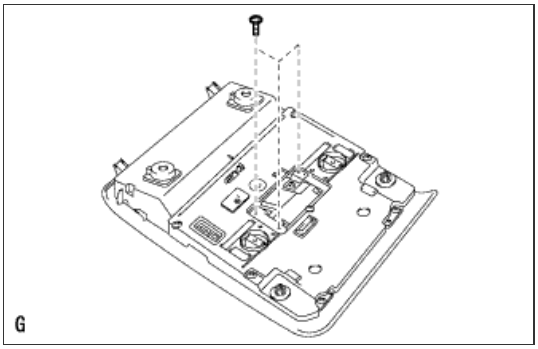


for Preparation Click here

1. INSTALL INTRUSION SENSOR

a. Install the sensor with the 3 screws.

b. Connect the connectors.

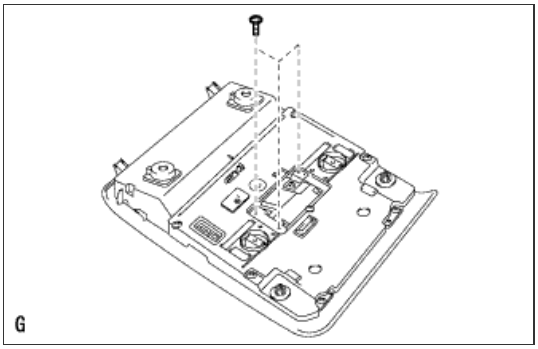

2. INSTALL MAP LIGHT ASSEMBLY

a. w/ Sliding Roof:
Install the map light (Click here).


b. w/o Sliding Roof:
Install the map light (Click here).

for Preparation Click here

1. INSTALL INTRUSION SENSOR

a. Install the sensor with the 3 screws.

b. Connect the connectors.

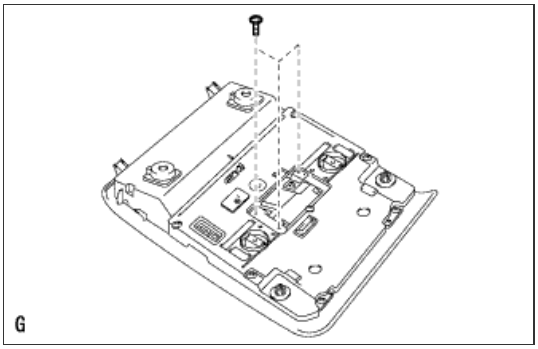


2. INSTALL MAP LIGHT ASSEMBLY

a. w/ Sliding Roof:
Install the map light (Click here).

b. w/o Sliding Roof:
Install the map light (Click here).

for Preparation Click here

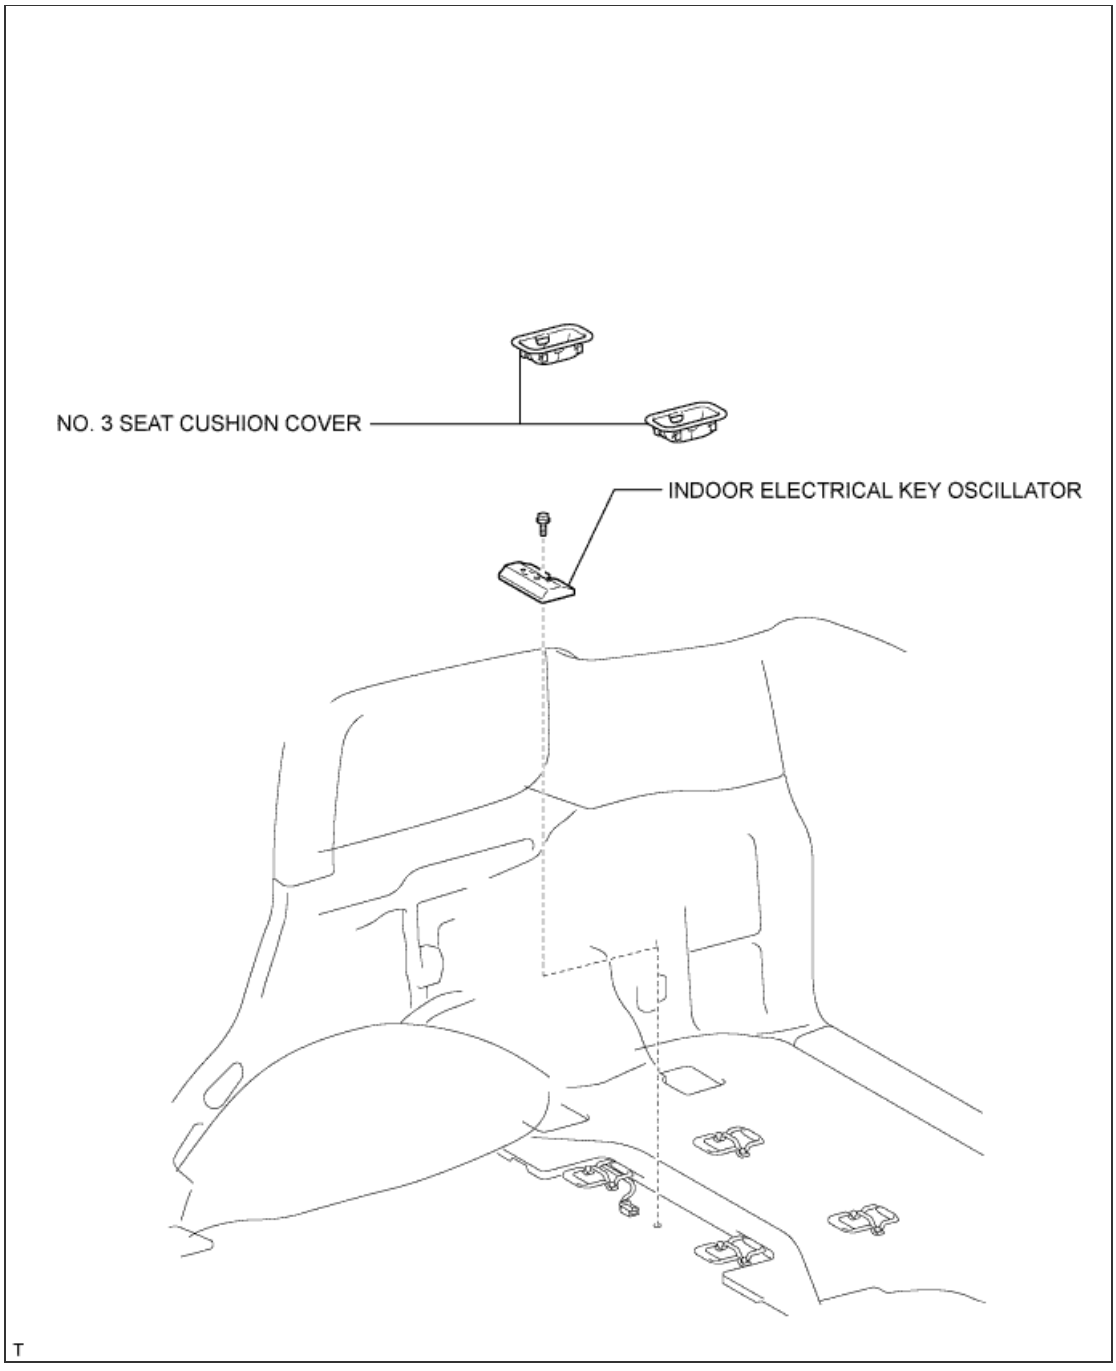

for Preparation Click here

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

5. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH


a. Remove the front quarter trim panel assembly LH (Click here).

6. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. Remove the front quarter trim panel assembly RH (Click here).

7. REMOVE NO. 3 SEAT CUSHION COVER

a. Detach the 4 clips and 16 claws, and then remove the 4 seat cushion covers.

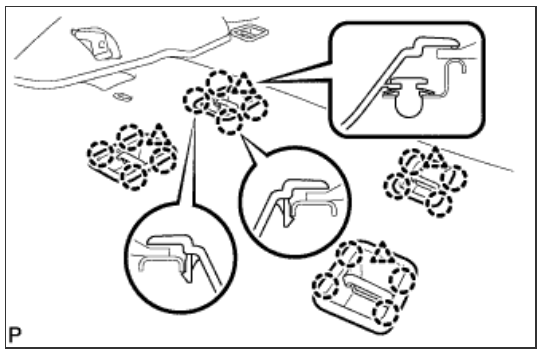


8. REMOVE INDOOR ELECTRICAL KEY OSCILLATOR

a. Fold back the rear floor carpet assembly.

b. Disconnect the connector.

c. Remove the bolt and electrical key oscillator.

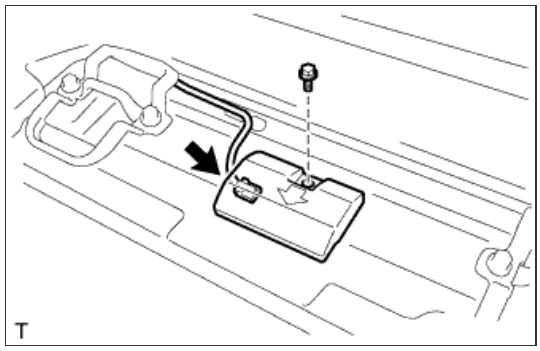
T

for Preparation Click here

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

5. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH


a. Remove the front quarter trim panel assembly LH (Click here).

6. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. Remove the front quarter trim panel assembly RH (Click here).

7. REMOVE NO. 3 SEAT CUSHION COVER

a. Detach the 4 clips and 16 claws, and then remove the 4 seat cushion covers.

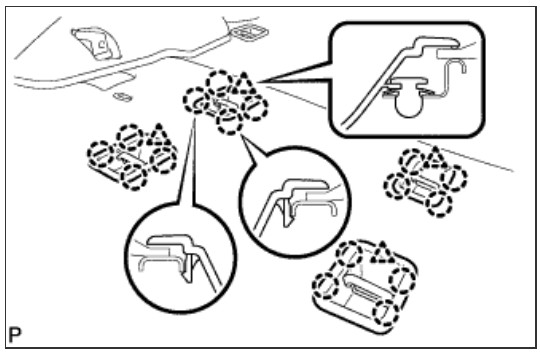


8. REMOVE INDOOR ELECTRICAL KEY OSCILLATOR

a. Fold back the rear floor carpet assembly.

b. Disconnect the connector.

c. Remove the bolt and electrical key oscillator.

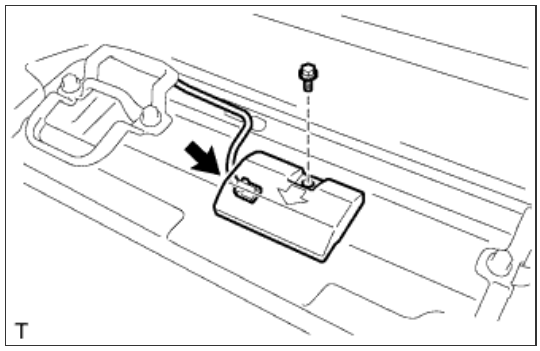
T

for Preparation Click here

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

5. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH


a. Remove the front quarter trim panel assembly LH (Click here).

6. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. Remove the front quarter trim panel assembly RH (Click here).

7. REMOVE NO. 3 SEAT CUSHION COVER

a. Detach the 4 clips and 16 claws, and then remove the 4 seat cushion covers.

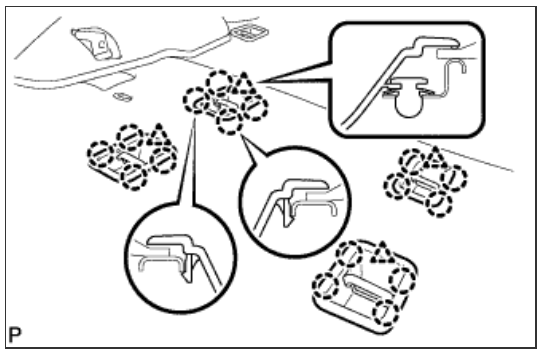


8. REMOVE INDOOR ELECTRICAL KEY OSCILLATOR

a. Fold back the rear floor carpet assembly.

b. Disconnect the connector.

c. Remove the bolt and electrical key oscillator.

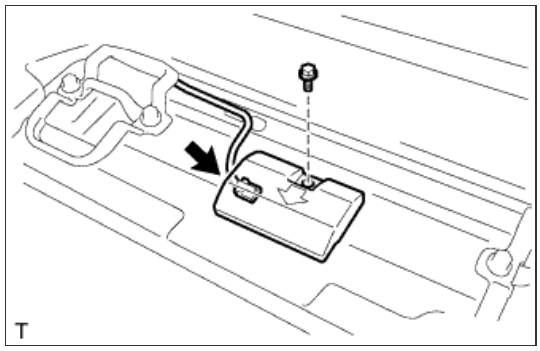

T

for Preparation Click here

1. INSTALL INDOOR ELECTRICAL KEY OSCILLATOR


a. Install the electrical key oscillator with the bolt.

b. Connect the connector.

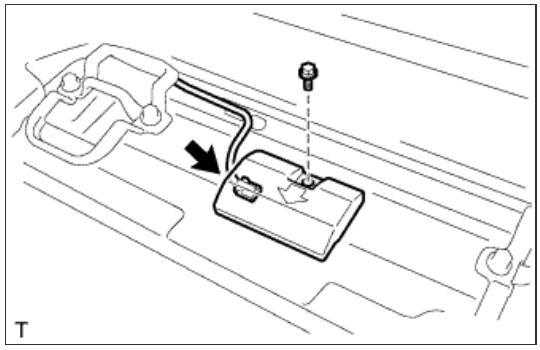

2. INSTALL NO. 3 SEAT CUSHION COVER

a. Attach the 8 claws and 4 clips to install the 4 seat cushion covers.

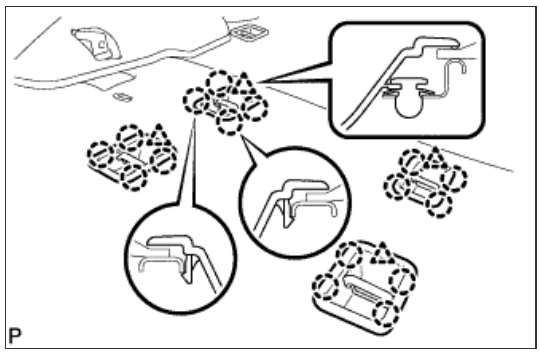

3. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. Install the front quarter trim panel assembly RH (Click here).

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. Install the front quarter trim panel assembly LH (Click here).

5. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

6. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembly LH (Click here).

7. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

8. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)


a. Install the rear No. 2 seat assembly LH (Click here).

for Preparation Click here

1. INSTALL INDOOR ELECTRICAL KEY OSCILLATOR

a. Install the electrical key oscillator with the bolt.

b. Connect the connector.

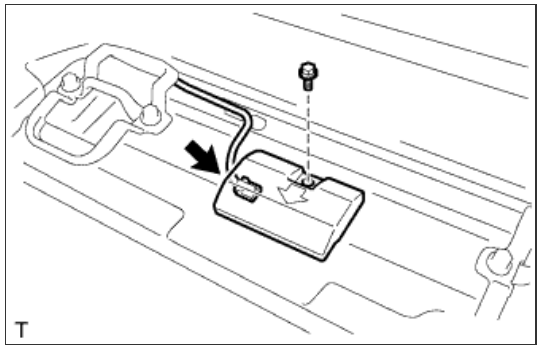

2. INSTALL NO. 3 SEAT CUSHION COVER

a. Attach the 16 claws and 4 clips to install the 4 seat cushion covers.

3. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. Install the front quarter trim panel assembly RH (Click here).

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. Install the front quarter trim panel assembly LH (Click here).

5. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

6. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembly LH (Click here).

7. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

8. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)


a. Install the rear No. 2 seat assembly LH (Click here).

for Preparation Click here

1. INSTALL INDOOR ELECTRICAL KEY OSCILLATOR

a. Install the electrical key oscillator with the bolt.

b. Connect the connector.

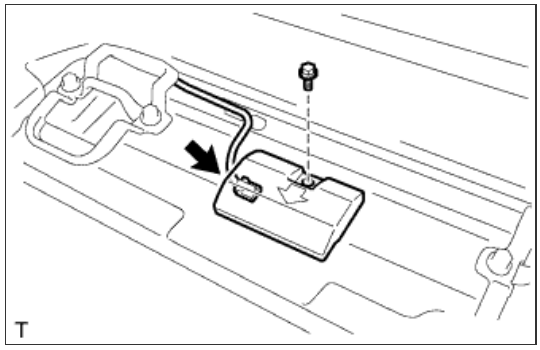

2. INSTALL NO. 3 SEAT CUSHION COVER

a. Attach the 16 claws and 4 clips to install the 4 seat cushion covers.

3. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. Install the front quarter trim panel assembly RH (Click here).

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. Install the front quarter trim panel assembly LH (Click here).

5. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

6. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembly LH (Click here).


7. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

8. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembly LH (Click here).

for Preparation Click here

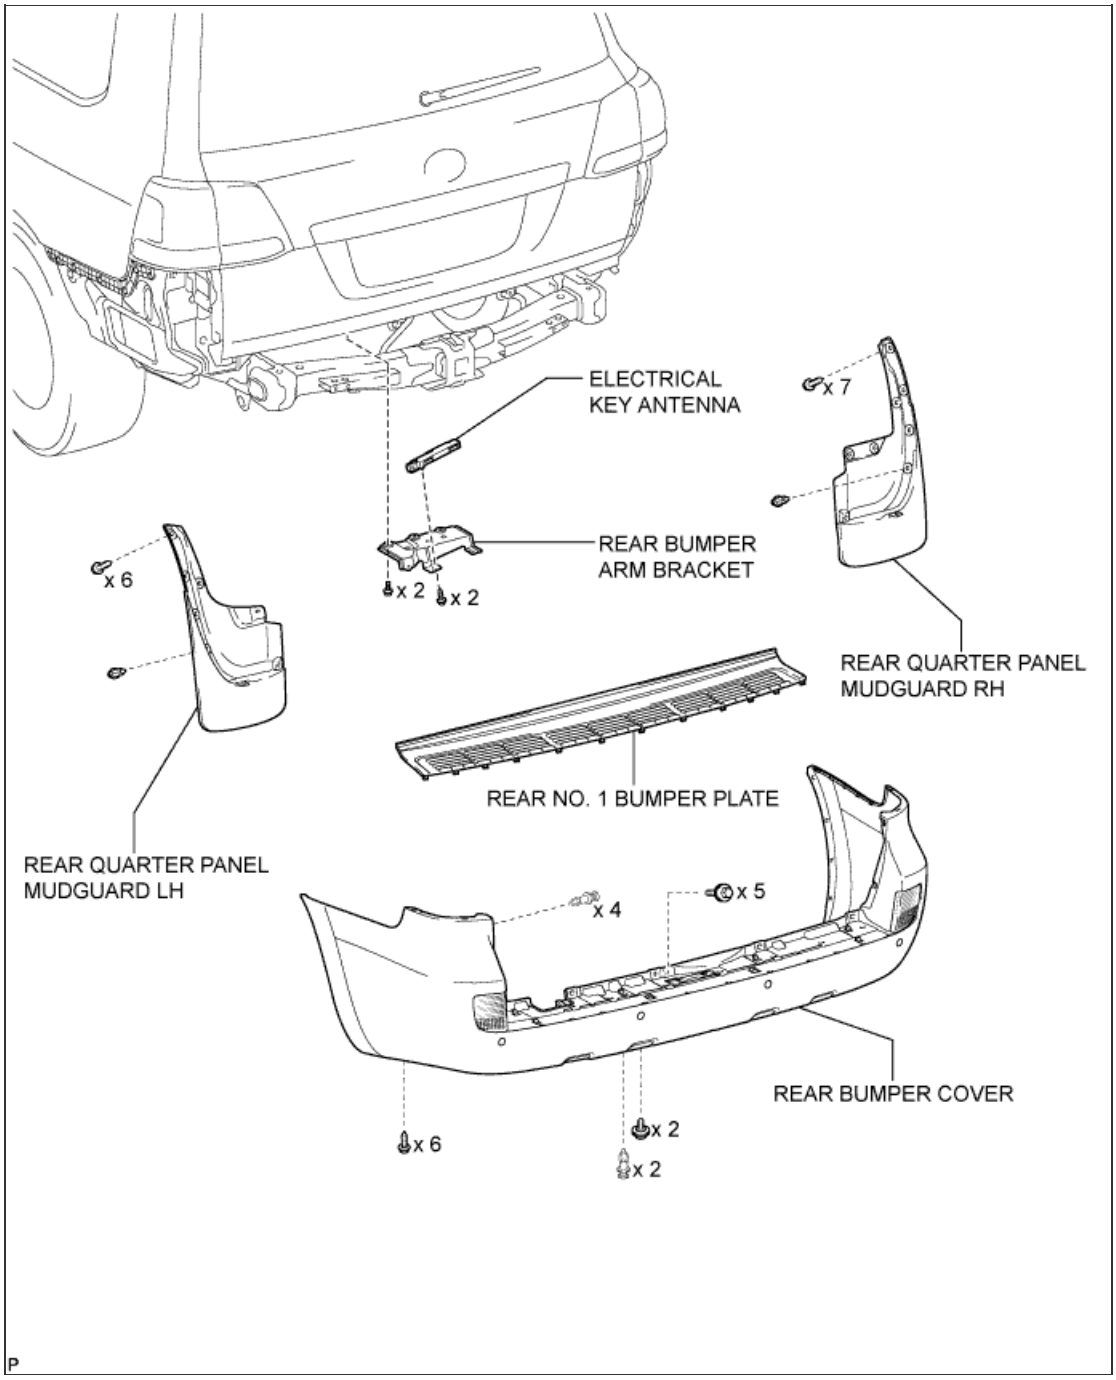

for Preparation Click here

1. REMOVE PINTLE HOOK ASSEMBLY (w/ Pintle Hook)

a. Remove the pintle hook assembly (Click here).


2. REMOVE SPARE WHEEL CARRIER SUB-ASSEMBLY (w/ Tire Carrier)

a. Remove the spare wheel carrier sub-assembly (Click here).

3. REMOVE REAR QUARTER PANEL MUDGUARD LH

a. Remove the clip.


b. Using a T30 "TORX" socket, remove the 6 screws and mudguard.

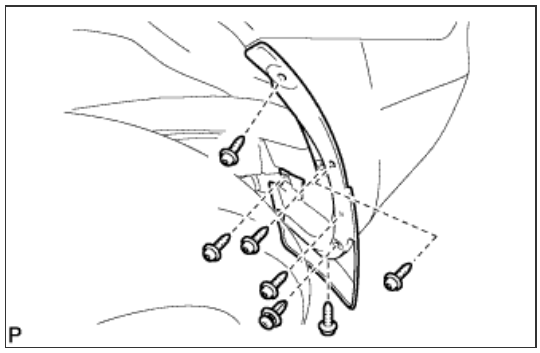

4. REMOVE REAR QUARTER PANEL MUDGUARD RH

a. Remove the clip.


b. Using a T30 "TORX" socket, remove the 7 screws and mudguard.

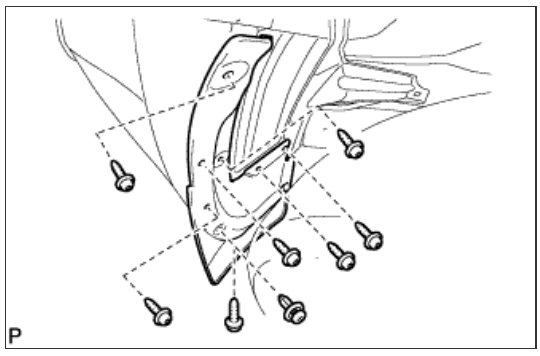

5. REMOVE REAR NO. 1 BUMPER PLATE

a. Put protective tape around the bumper plate.

b. Detach the 20 claws and remove the bumper plate.

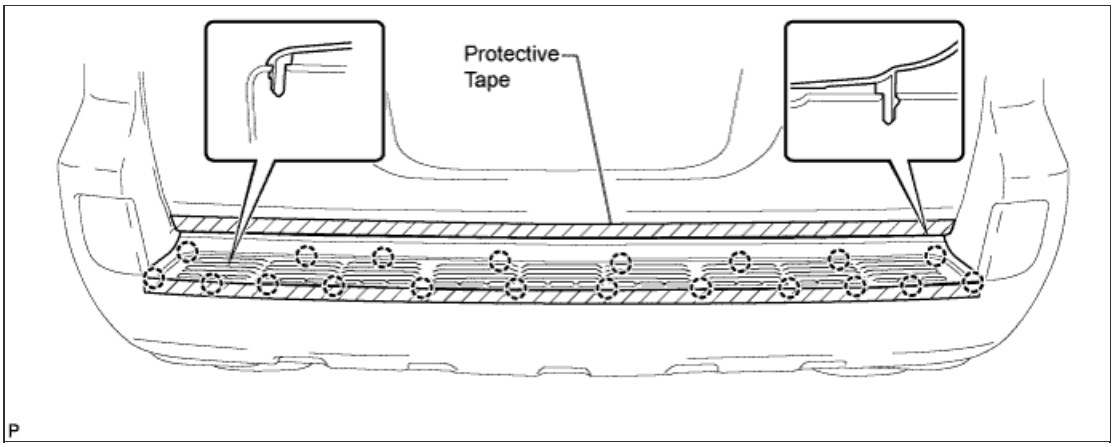


6. REMOVE REAR BUMPER COVER


HINT:

For the rear bumper cover with tire carrier, use the procedures described below.

a. Put protective tape around the bumper cover.

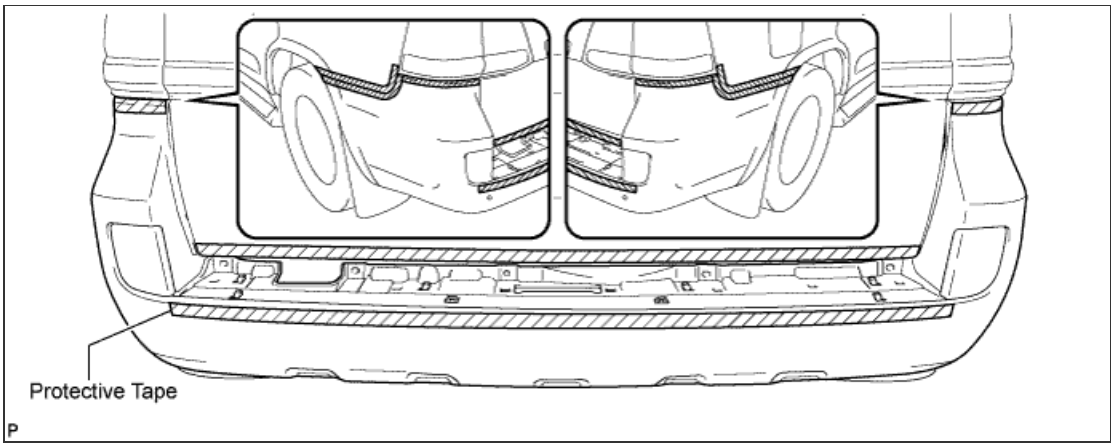

b. Open the tail gate and remove the 4 clips.

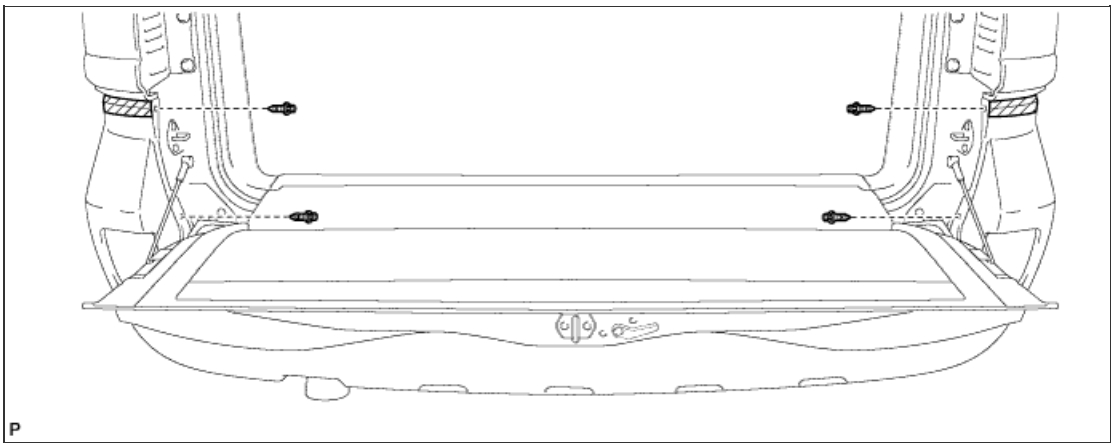


c. Close the tail gate.

d. Remove the 7 bolts, 6 screws and 2 clips.

e. w/o TOYOTA Parking Assist-sensor System, w/o Rear Fog Light:
Detach the 14 claws and remove the bumper cover.


f. w/ TOYOTA Parking Assist-sensor System or w/ Rear Fog Light:
Detach the 14 claws, disconnect the No. 2 frame wire connector and remove the bumper cover.

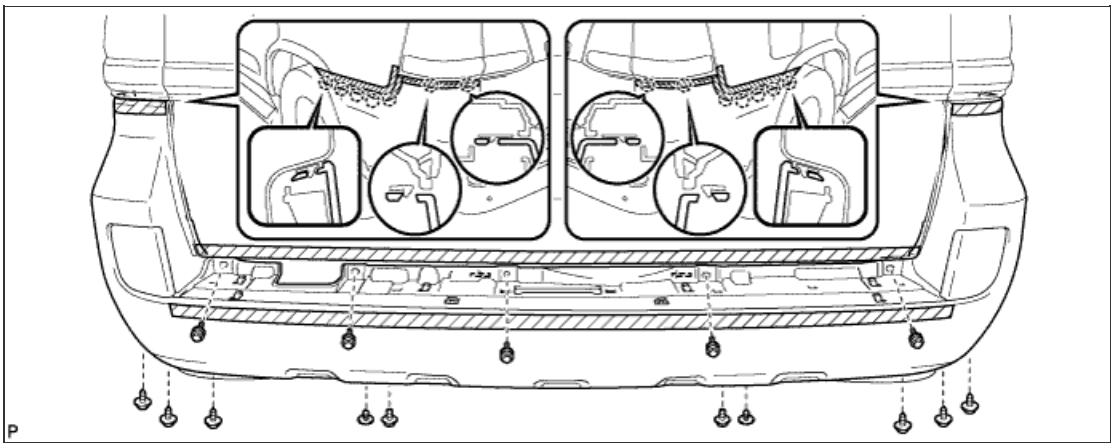

7. REMOVE REAR BUMPER ARM BRACKET LH


a. Disconnect the connector.

b. Remove the 2 bolts and bumper arm bracket.

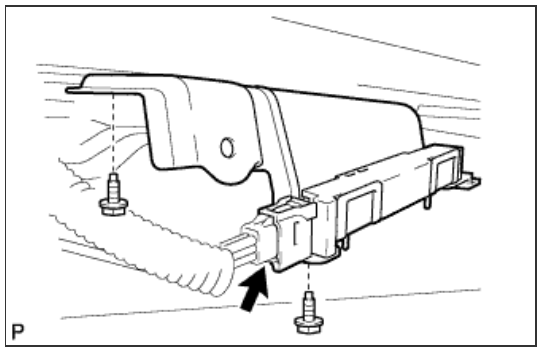

8. REMOVE ELECTRICAL KEY ANTENNA


a. Remove the 2 screws and antenna.

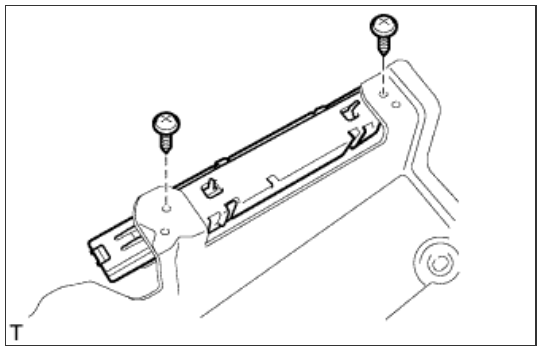

for Preparation Click here

1. INSTALL ELECTRICAL KEY ANTENNA


a. Install the antenna with the 2 screws.

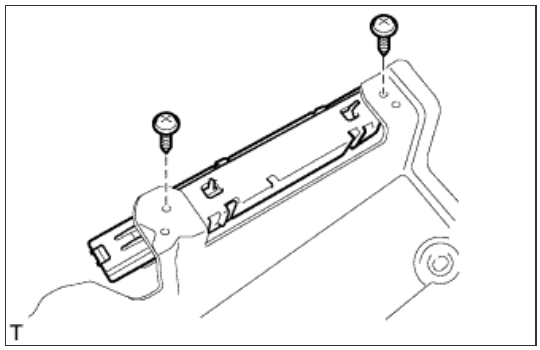

2. INSTALL REAR BUMPER ARM BRACKET LH

a. Install the bumper arm bracket with the 2 bolts.

b. Connect the connector.

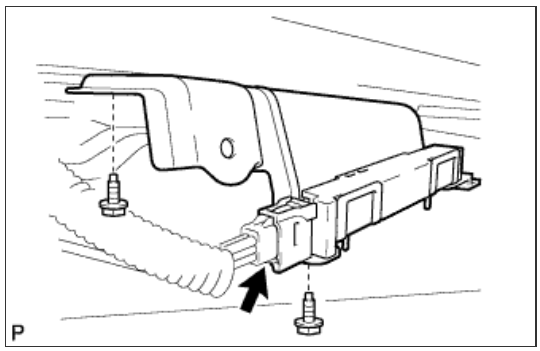

3. INSTALL REAR BUMPER COVER


HINT:

For the rear bumper cover with tire carrier, use the procedures described below.


a. w/o TOYOTA Parking Assist-sensor S ste n, w/o Rear Fog Light:
Attach the 14 claws to install the bumper cover.

b. w/ TOYOTA Parking Assist-sensor S ste n or w/ Rear Fog Light:
Connect the No. 2 rame wire connector and attach the 14 claws to install the bumper cover.

c. Install the bolts, 6 screws and 2 clips.

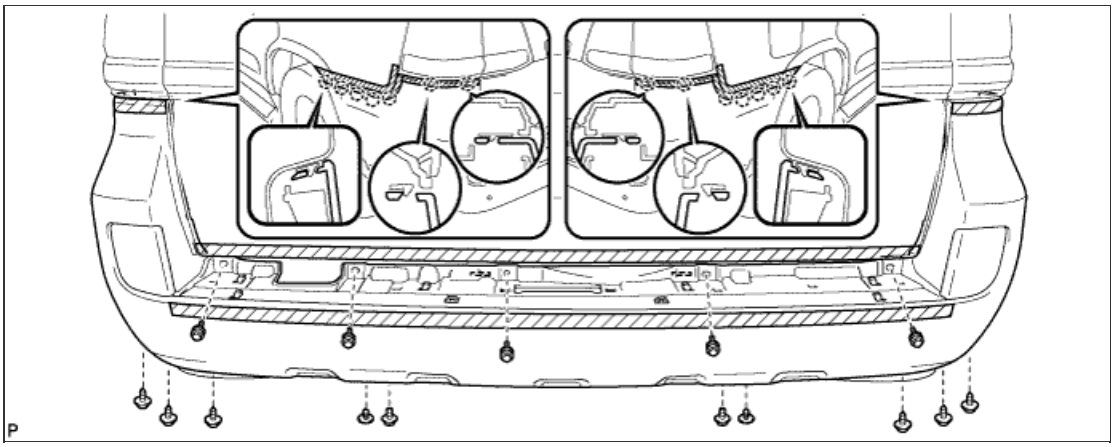


d. Open the tail gate and install the 4 clips.

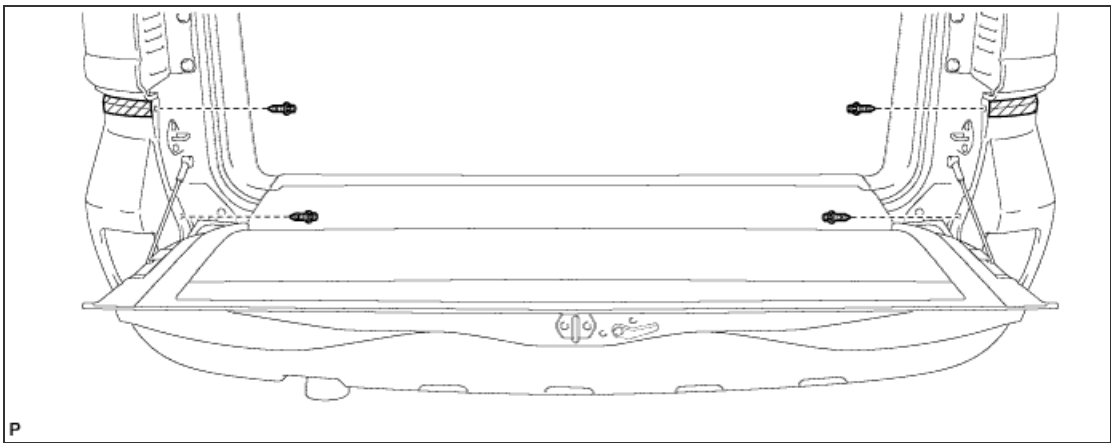

e. Close the tail gate.

4. INSTALL REAR NO. 1 BUMPER PLATE


a. Attach the 2 claws to install the bumper plate.

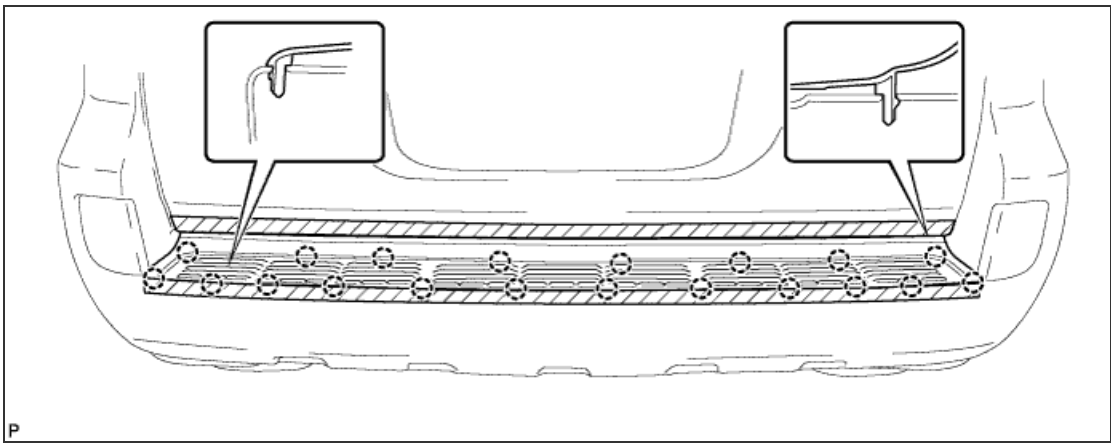

5. INSTALL REAR QUARTER PANEL MUDGUARD LH

a. Install the mudguard with the clip.


b. Using a T3 TOR sket, install the 6 screws.

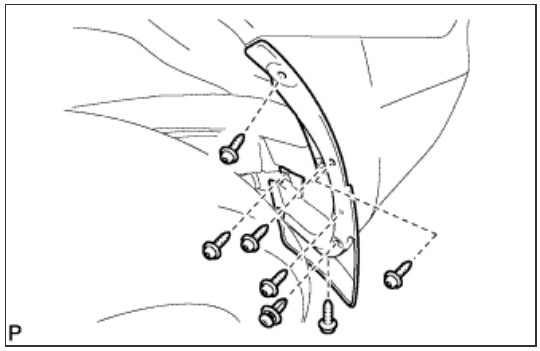

6. INSTALL REAR QUARTER PANEL MUDGUARD RH

a. Install the mudguard with the clip.

b. Using a T3 TOR sket, install the crews.

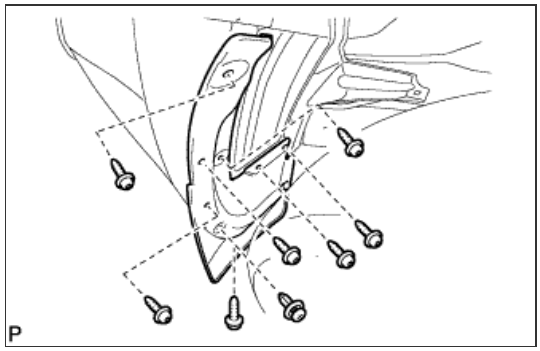


7. INSTALL SPARE WHEEL CARRIER SUB-ASSEMBLY (w/ Tire Carrier)

a. Install the spare wheel carrier sub-assembl Click here .

8. INSTALL PINTLE HOOK ASSEMBLY (w/ Pintle Hook)

a. Install the pintle hook assembl Click here .

for Preparation Click here

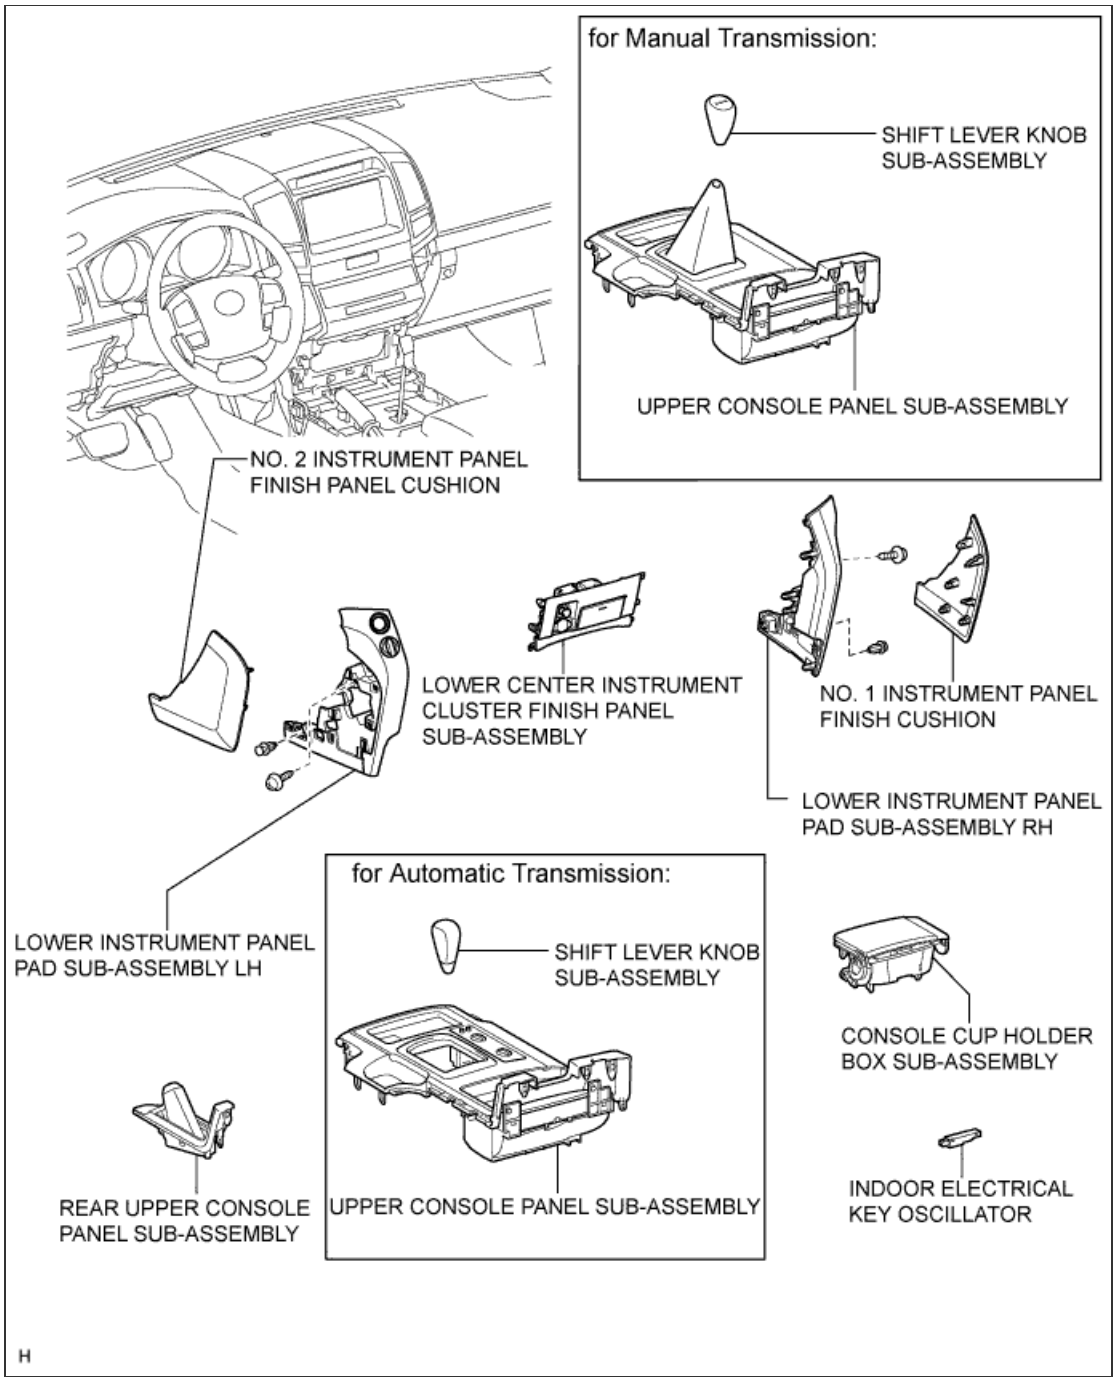

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

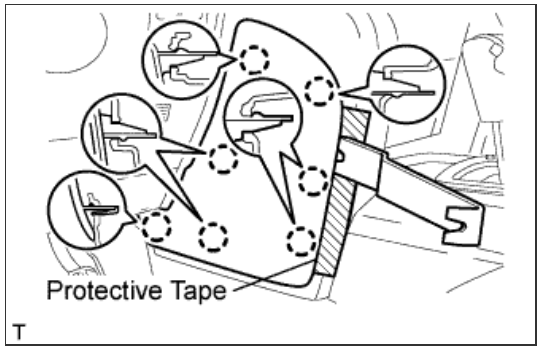


2. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

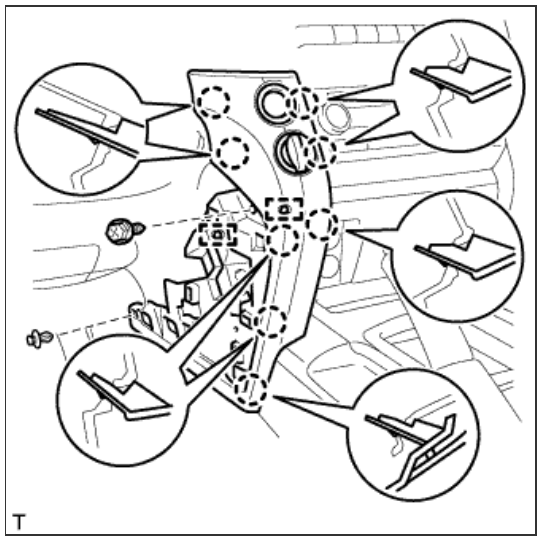

3. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

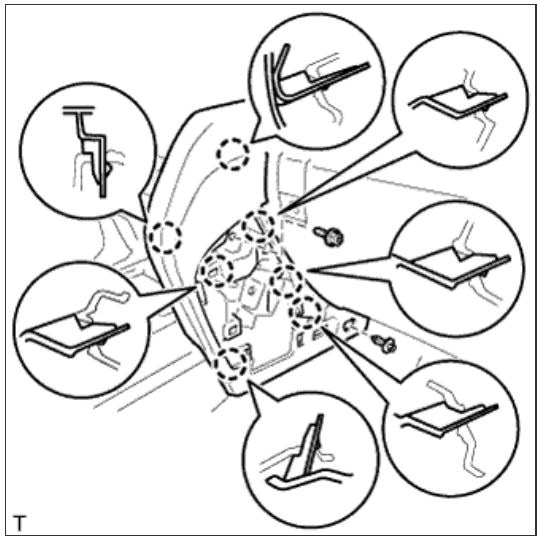

5. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


a. Twist the shift lever knob in the direction indicated by the arrow and remove it.

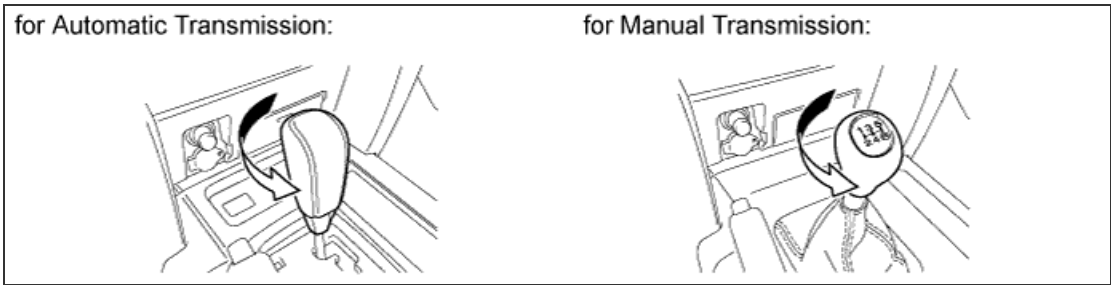

6. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 7 claws.

b. Disconnect the connectors and remove the panel.

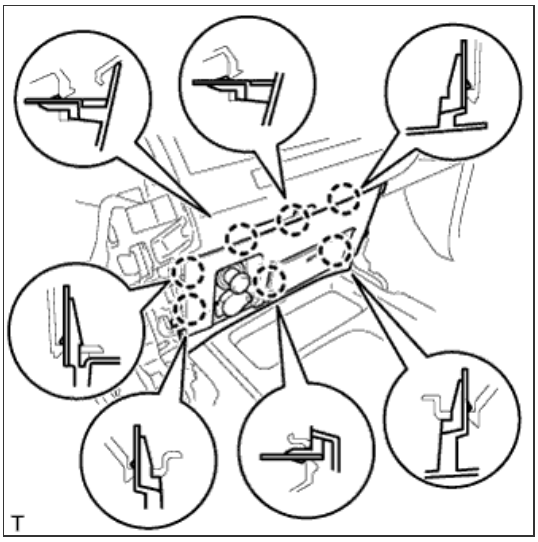


7. REMOVE REAR UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 9 claws and remove the panel.

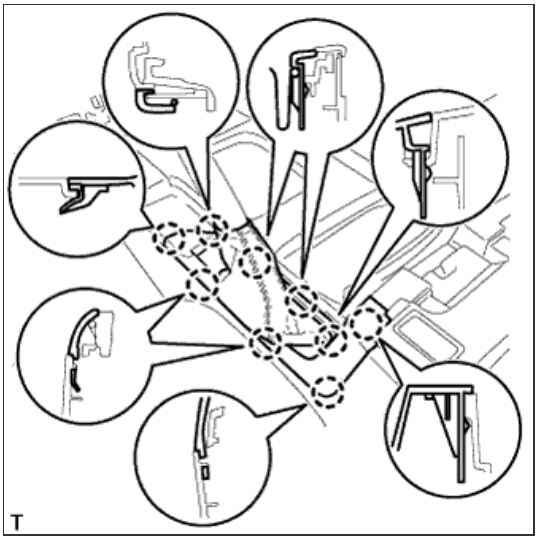

8. REMOVE CONSOLE CUP HOLDER BOX SUB-ASSEMBLY


a. Detach the 4 claws and remove the box.

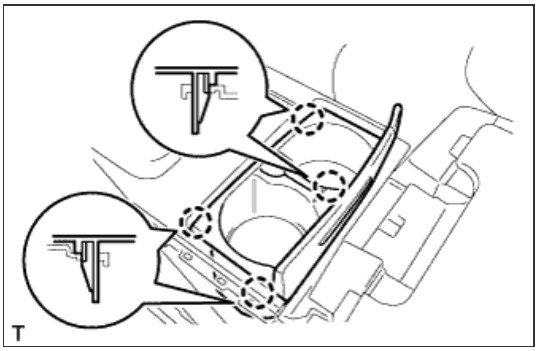

9. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 14 claws.


b. Disconnect the connectors and remove the console panel.

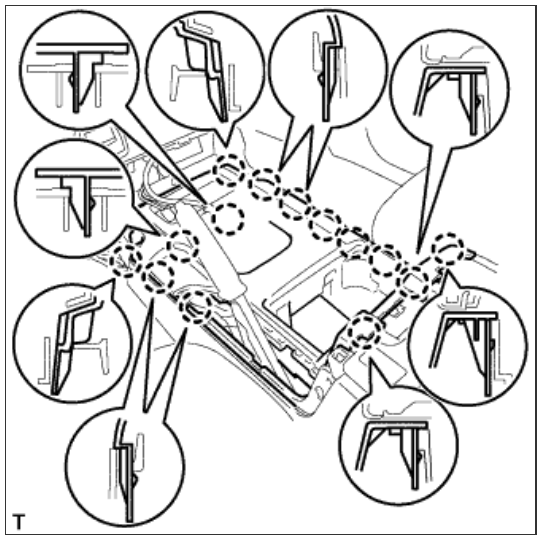

1 . REMOVE INDOOR ELECTRICAL KEY OSCILLATOR

a. Disconnect the connector.

b. Detach the 2 claws and remove the electrical key oscillator.

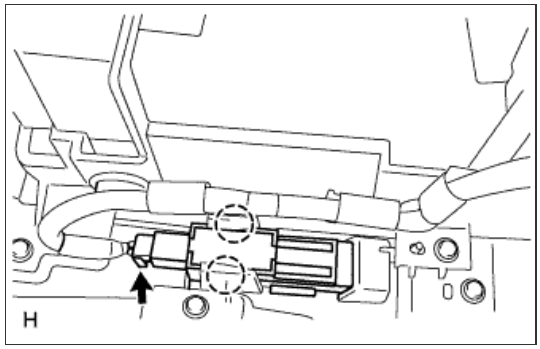

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

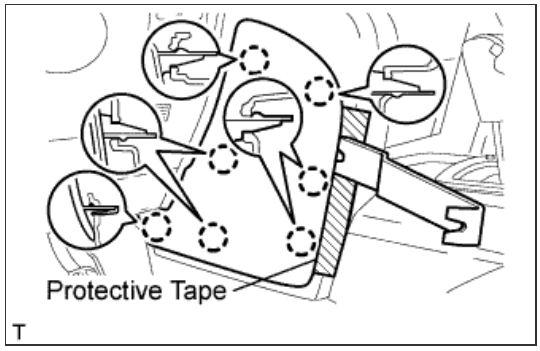


2. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

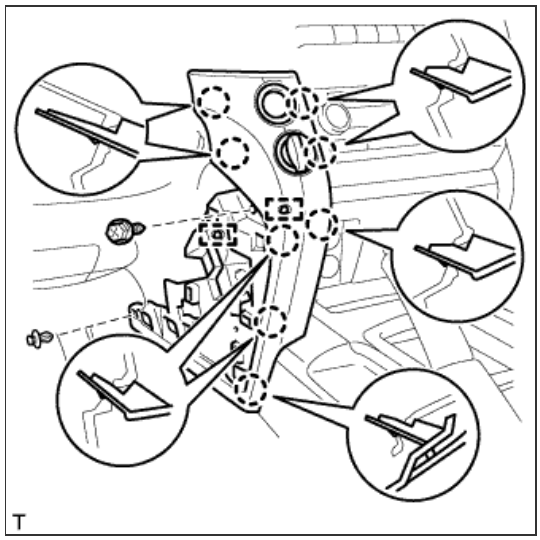

3. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

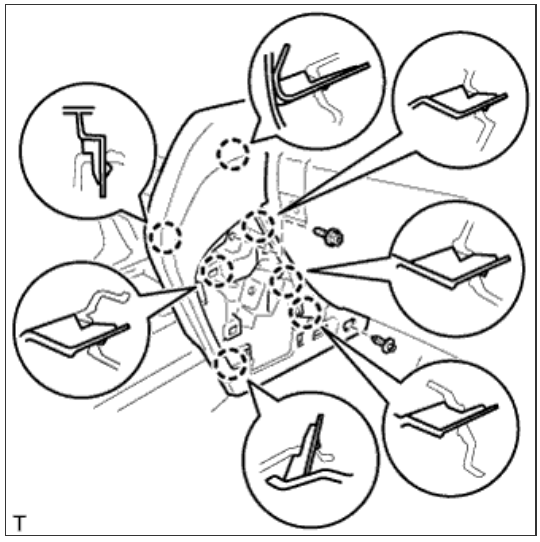

5. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


a. Twist the shift lever knob in the direction indicated by the arrow and remove it.

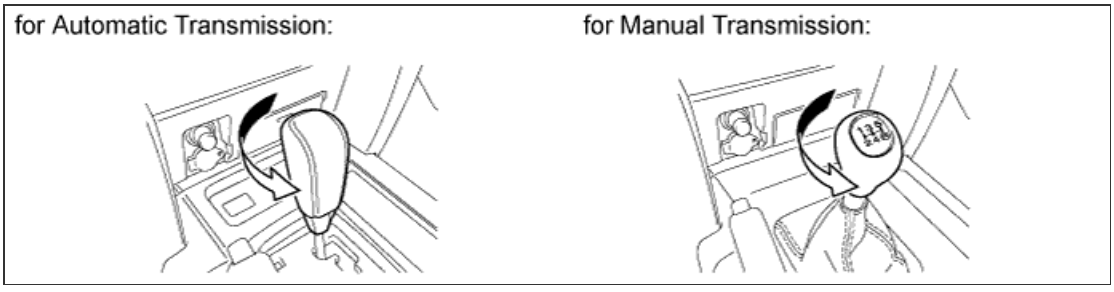

6. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 7 claws.

b. Disconnect the connectors and remove the panel.

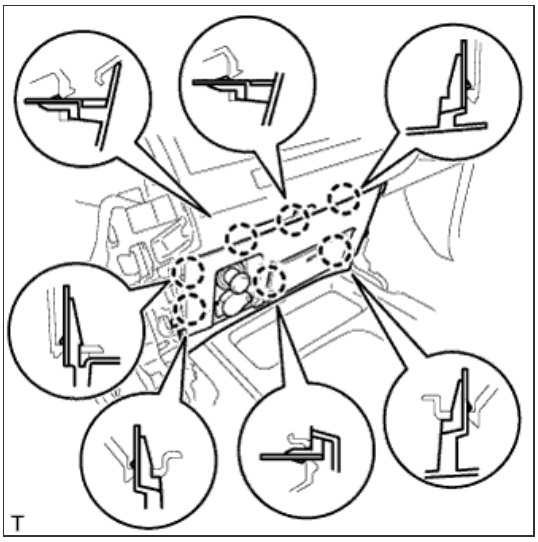


7. REMOVE REAR UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 9 claws and remove the panel.

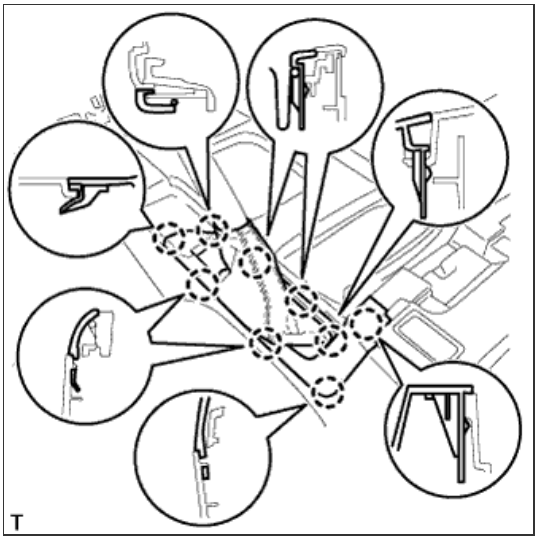

8. REMOVE CONSOLE CUP HOLDER BOX SUB-ASSEMBLY


a. Detach the 4 claws and remove the box.

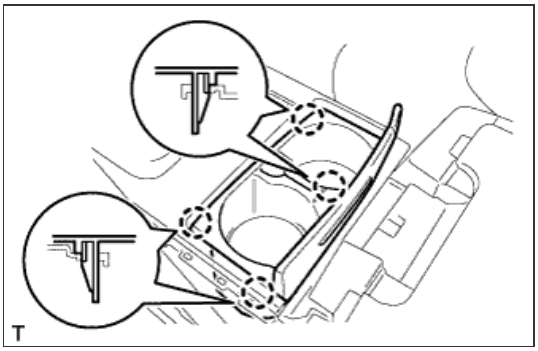

9. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 14 claws.


b. Disconnect the connectors and remove the console panel.

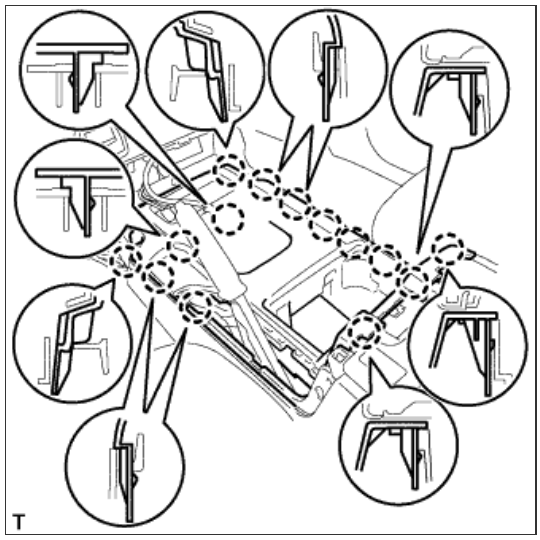

1 . REMOVE INDOOR ELECTRICAL KEY OSCILLATOR

a. Disconnect the connector.

b. Detach the 2 claws and remove the electrical key oscillator.

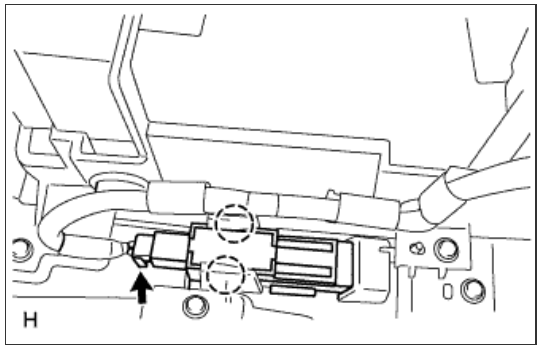

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL INDOOR ELECTRICAL KEY OSCILLATOR

a. Connect the connector.


b. Attach the 2 claws to install the electrical key oscillator.

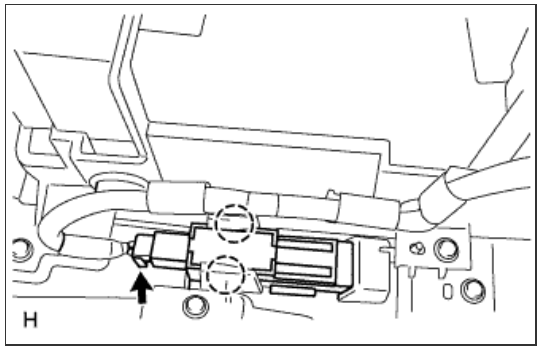

2. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 14 claws to install the console panel.

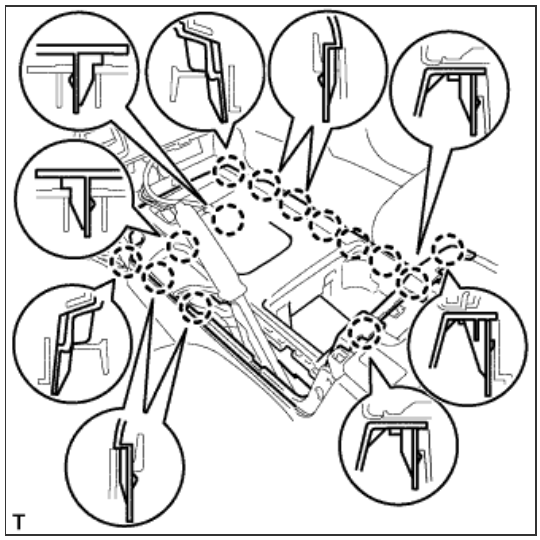


3. INSTALL CONSOLE CUP HOLDER BOX SUB-ASSEMBLY

a. Attach the 4 claws to install the box.

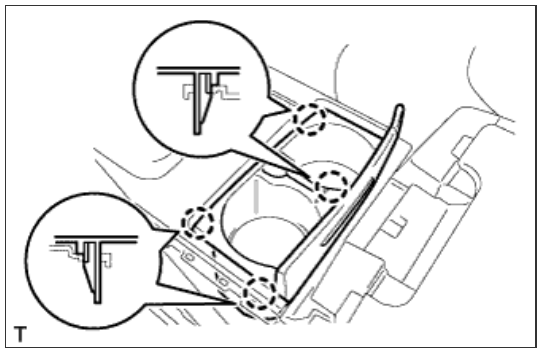

4. INSTALL REAR UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Attach the 9 claws to install the panel.

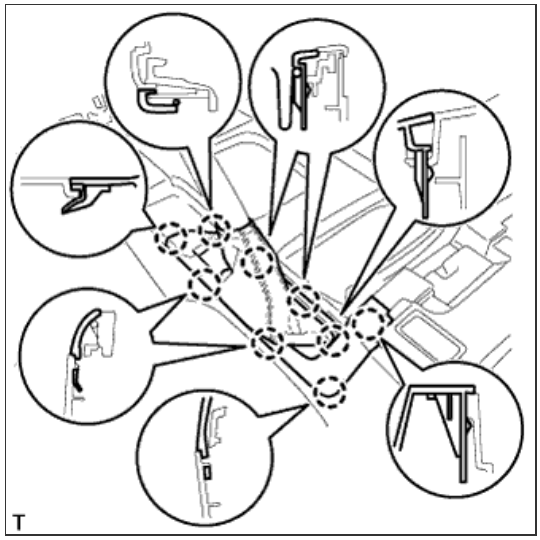

5. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 7 claws to install the panel.

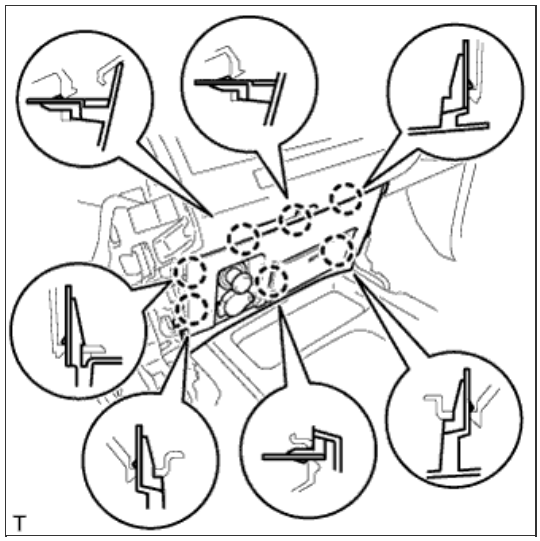

6. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

a. Install the shift lever knob and twist it in the direction indicated by the arrow.

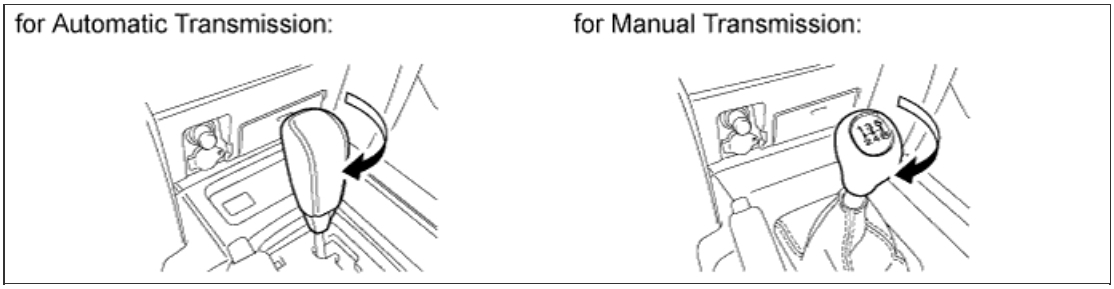


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

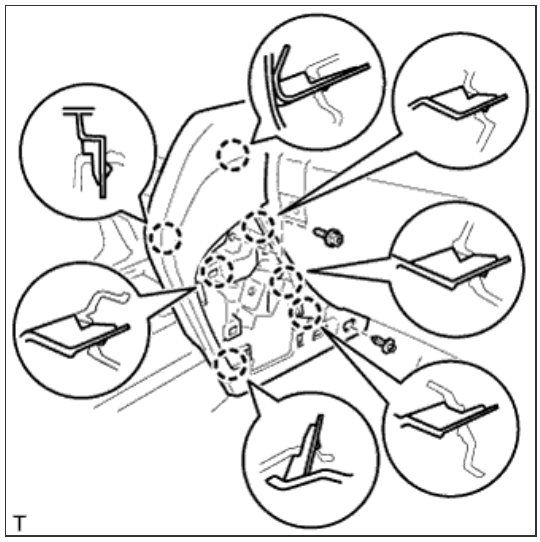

8. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

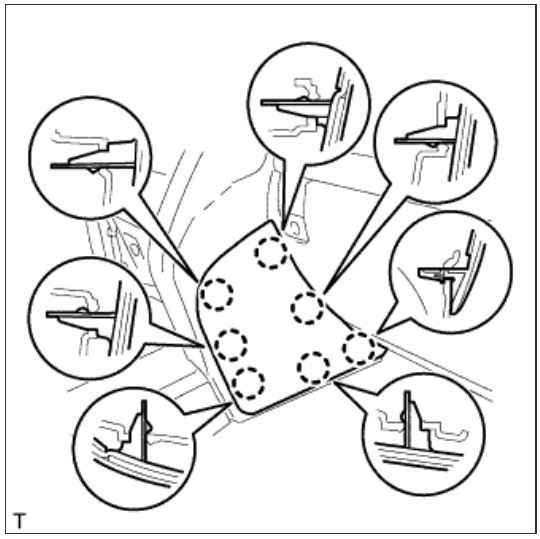


9. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

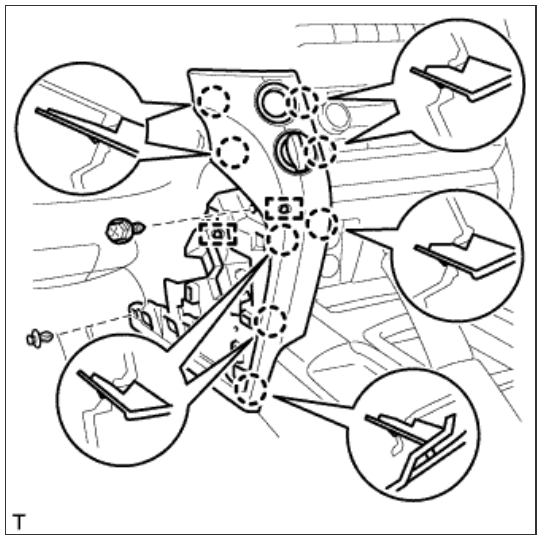

10. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

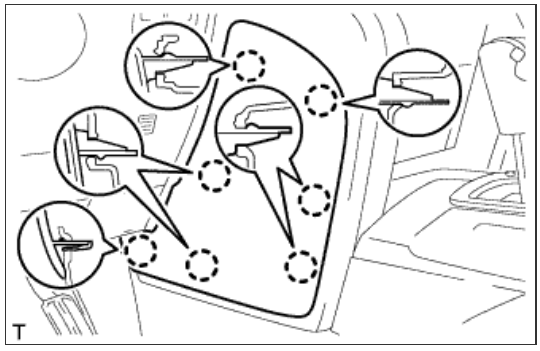

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL INDOOR ELECTRICAL KEY OSCILLATOR

a. Connect the connector.


b. Attach the 2 claws to install the electrical key oscillator.

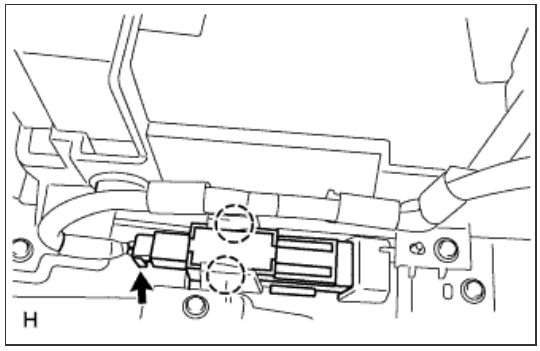

2. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 14 claws to install the console panel.

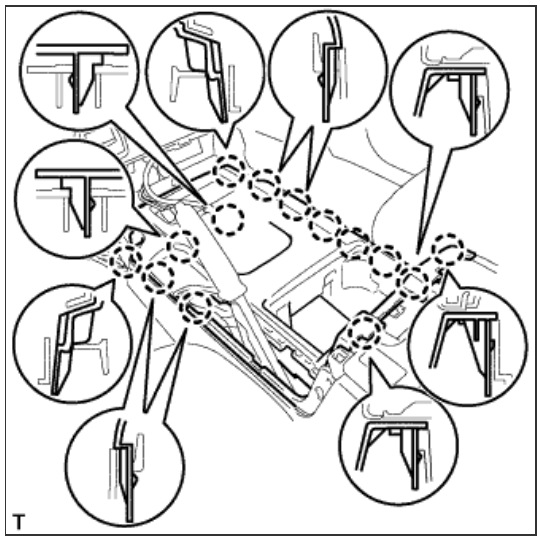


3. INSTALL CONSOLE CUP HOLDER BOX SUB-ASSEMBLY

a. Attach the 4 claws to install the box.

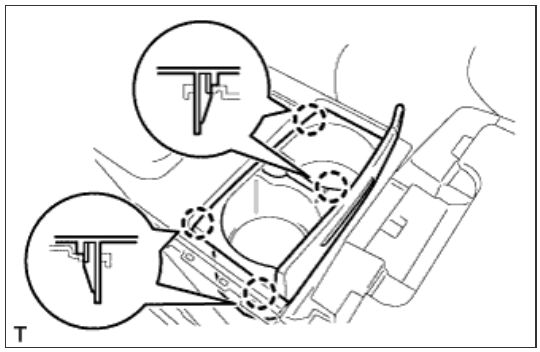

4. INSTALL REAR UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Attach the 9 claws to install the panel.

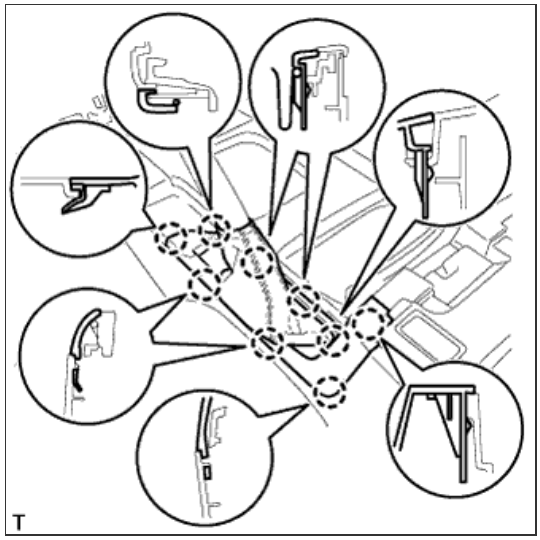

5. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 7 claws to install the panel.

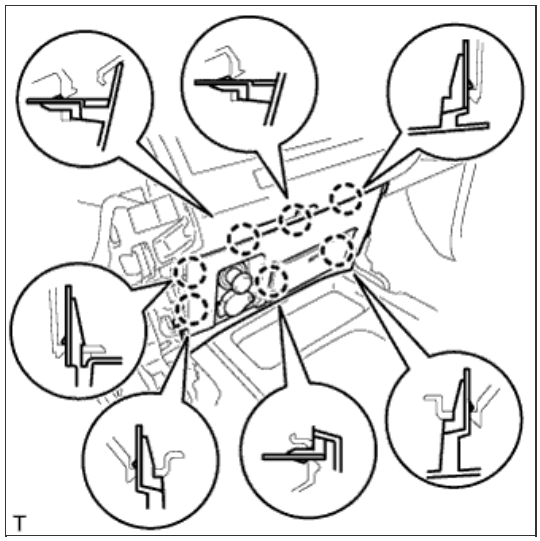

6. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

a. Install the shift lever knob and twist it in the direction indicated by the arrow.

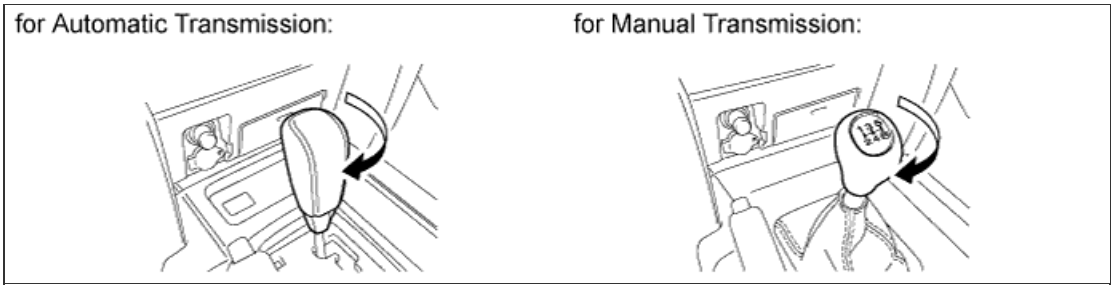


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

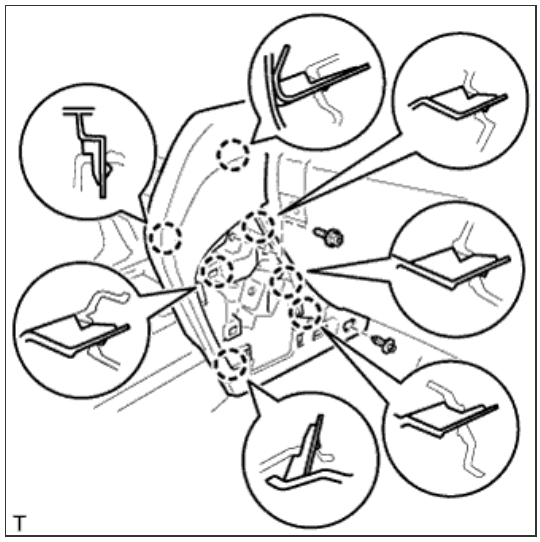

8. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

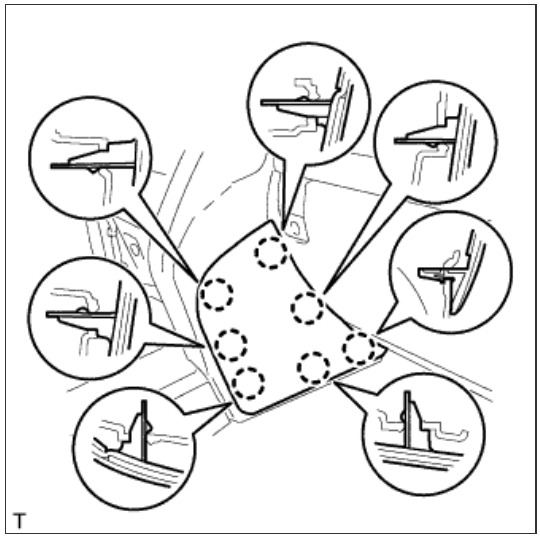


9. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

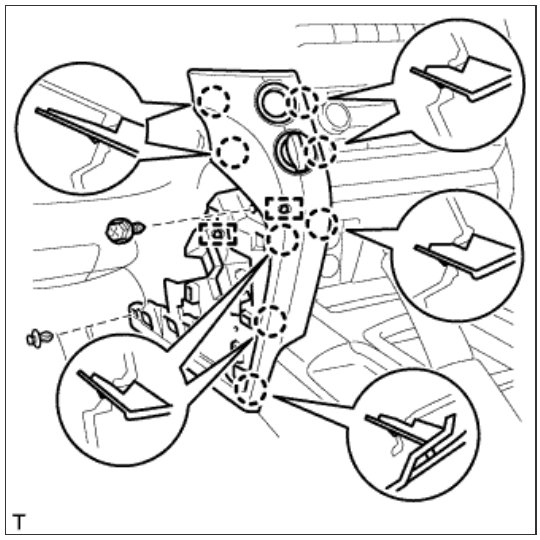


10. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

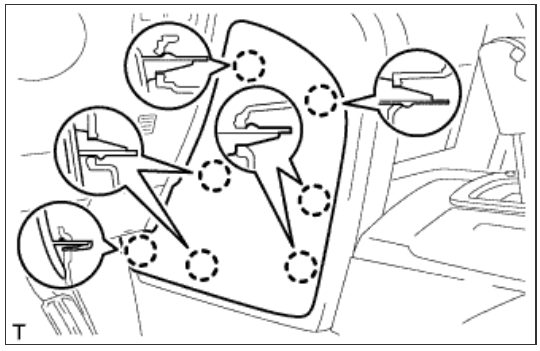

for Preparation Click here

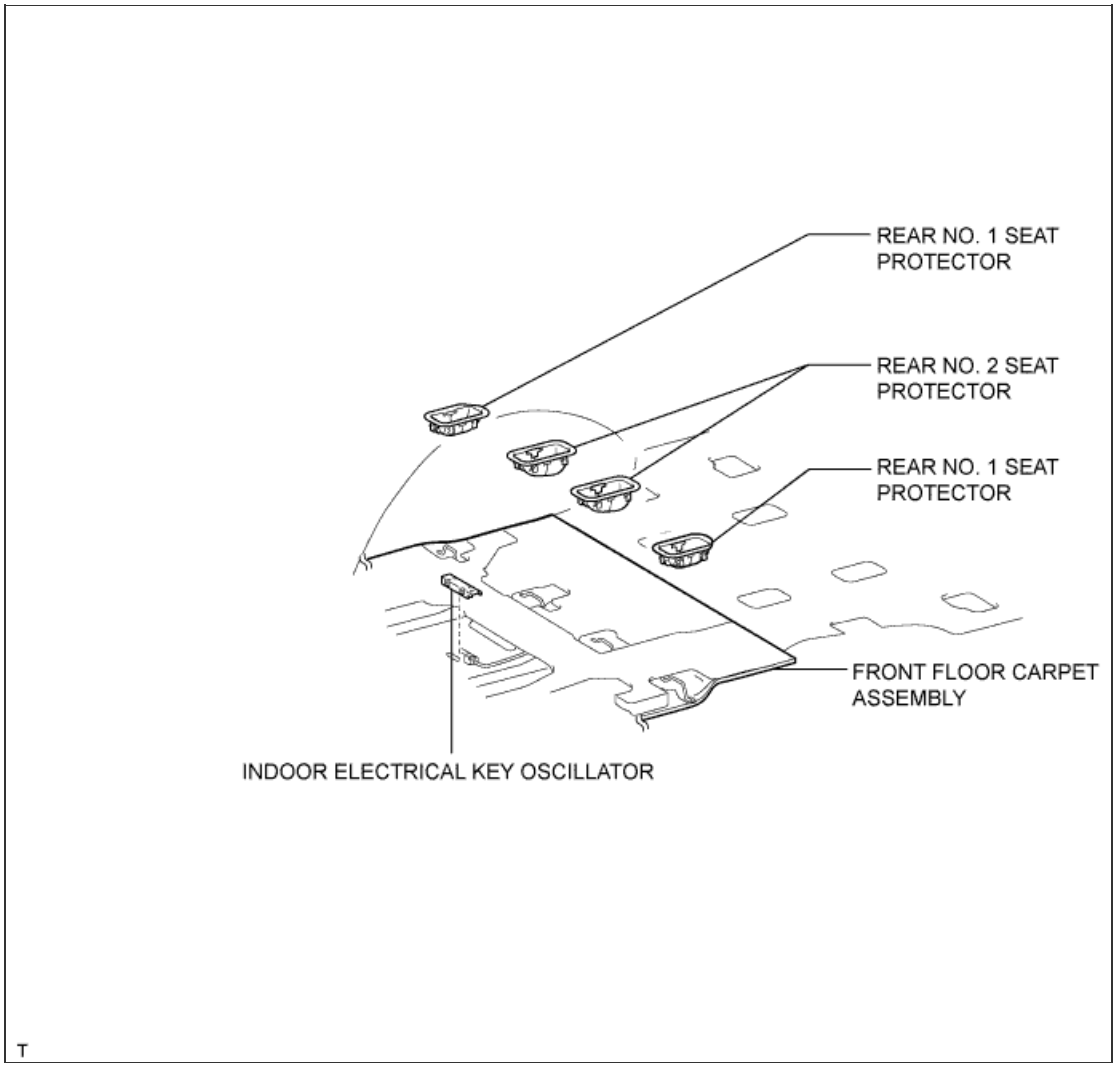

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

5. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

6. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. Remove the rear No. 1 seat assembly LH (Click here).

7. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. Remove the rear No. 1 seat assembly RH (Click here).

8. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH


a. Remove the front quarter trim panel assembly LH (Click here).

9. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. Remove the front quarter trim panel assembly LH (Click here).


10. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

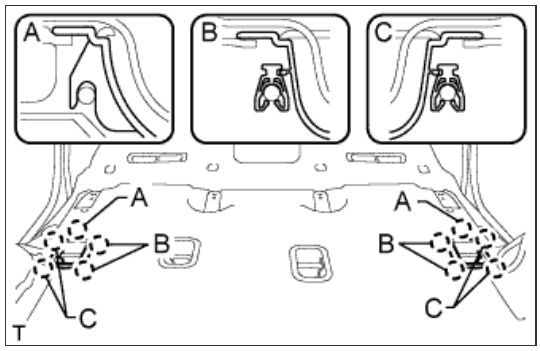

11. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

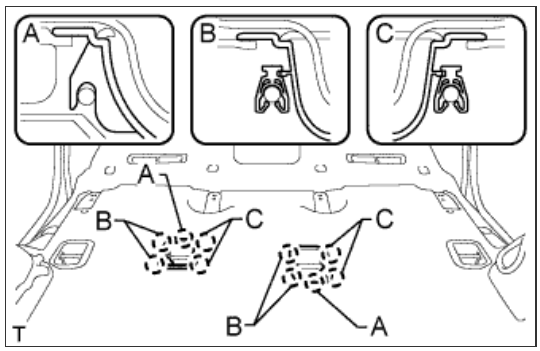


12. REMOVE INDOOR ELECTRICAL KEY OSCILLATOR

a. Fold back the front floor carpet assembly.

b. Disconnect the connector.

c. Detach the 2 claws and remove the electrical key oscillator.

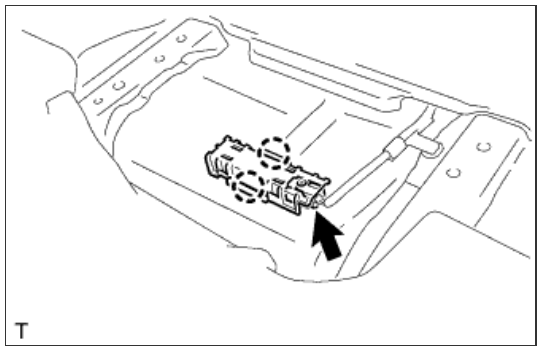

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

5. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly RH (Click here).

6. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. Remove the rear No. 1 seat assembly LH (Click here).

7. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. Remove the rear No. 1 seat assembly RH (Click here).

8. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH


a. Remove the front quarter trim panel assembly LH (Click here).

9. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. Remove the front quarter trim panel assembly LH (Click here).


10. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

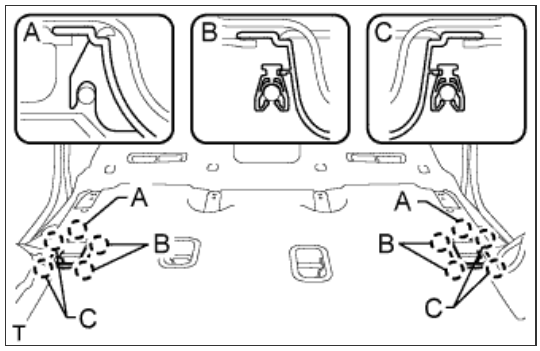

11. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

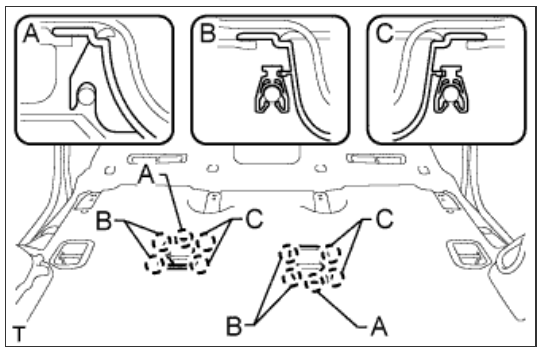


12. REMOVE INDOOR ELECTRICAL KEY OSCILLATOR

a. Fold back the front floor carpet assembly.

b. Disconnect the connector.

c. Detach the 2 claws and remove the electrical key oscillator.

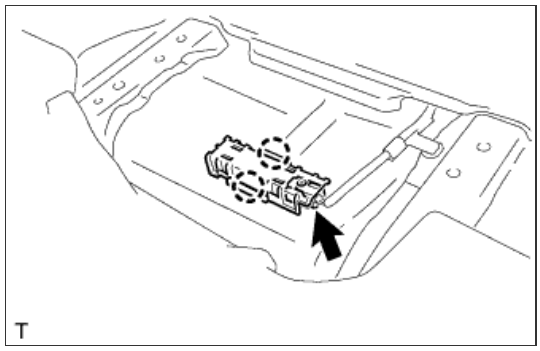


for Preparation Click here

1. INSTALL INDOOR ELECTRICAL KEY OSCILLATOR

a. Attach the 2 claws to install the electrical key oscillator.


b. Connect the connector.

c. Install the front floor carpet assembly.

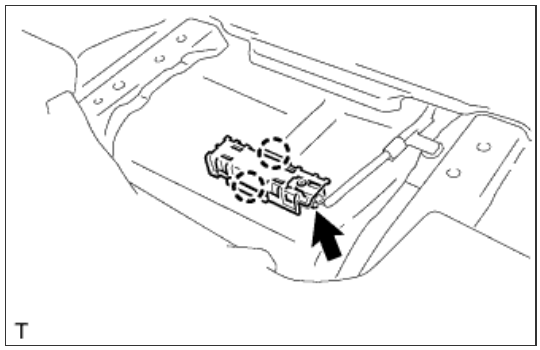


2. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

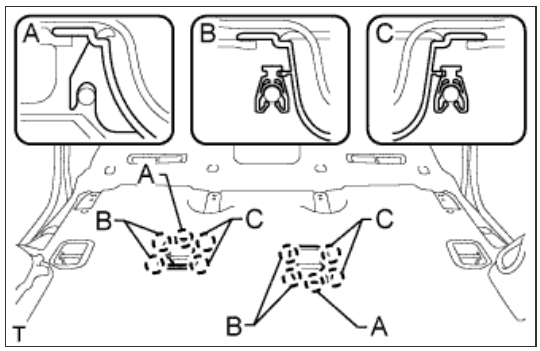

3. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

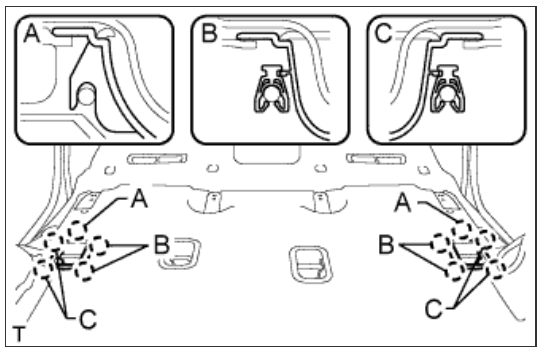

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. Install the front quarter trim panel assembly RH (Click here).

5. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. Install the front quarter trim panel assembly LH (Click here).

6. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. Install the rear No. 1 seat assembly RH (Click here).

7. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly LH (Click here).

8. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Install the rear No. 2seat assembly RH (Click here).

9. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2seat assembly LH (Click here).

10. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

11. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembly LH (Click here).

12. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

13. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).


for Preparation Click here

1. INSTALL INDOOR ELECTRICAL KEY OSCILLATOR

a. Attach the 2 claws to install the electrical key oscillator.


b. Connect the connector.

c. Install the front floor carpet assembly.

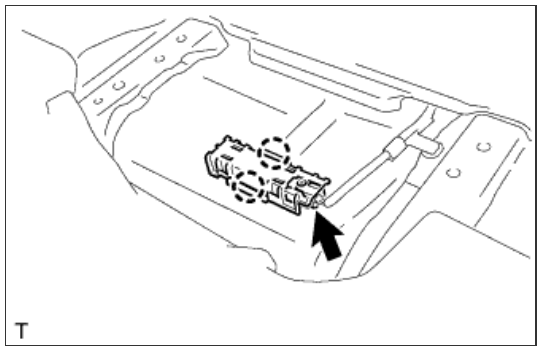


2. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

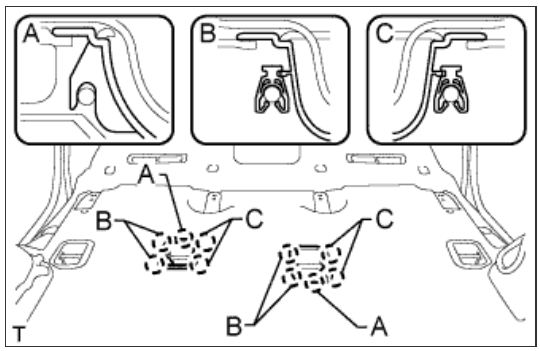

3. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

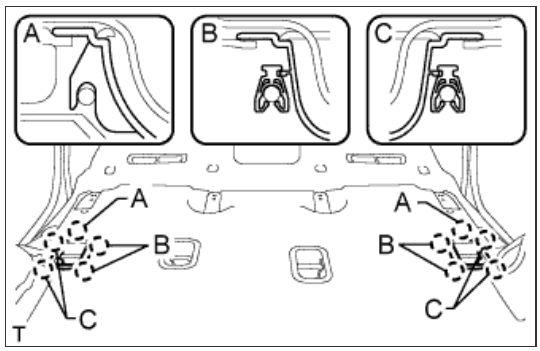

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. Install the front quarter trim panel assembly RH (Click here).

5. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. Install the front quarter trim panel assembly LH (Click here).

6. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. Install the rear No. 1 seat assembly RH (Click here).

7. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly LH (Click here).

8. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

a. Install the rear No. 2seat assembly RH (Click here).

9. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2seat assembly LH (Click here).

10. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembly RH (Click here).

11. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembly LH (Click here).

12. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

13. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

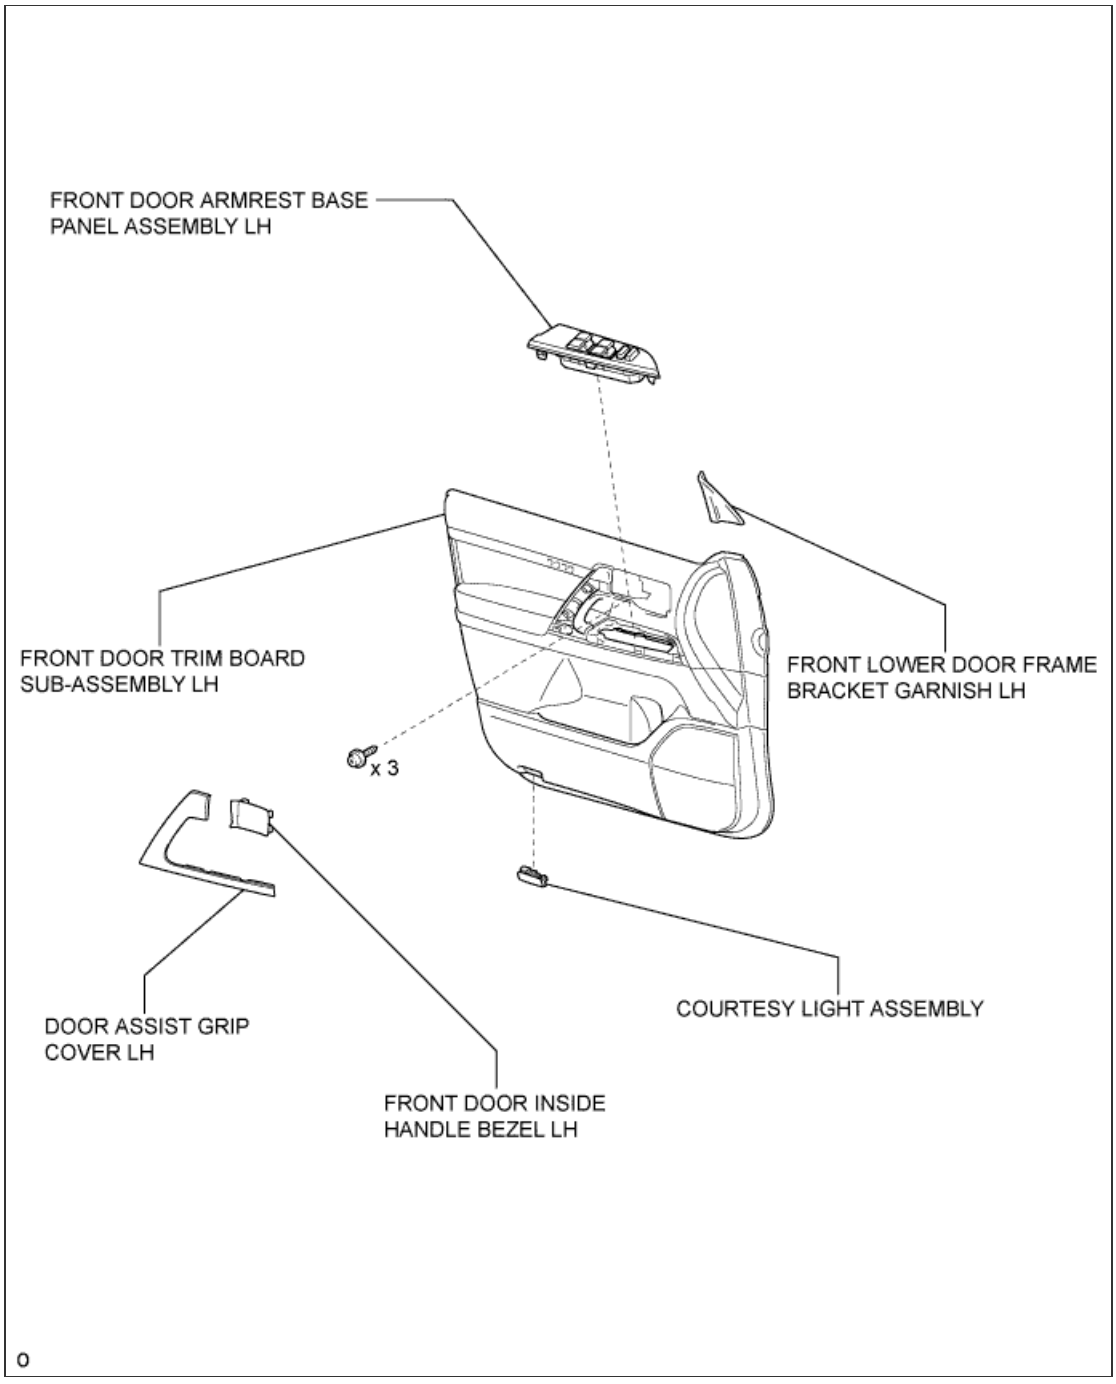

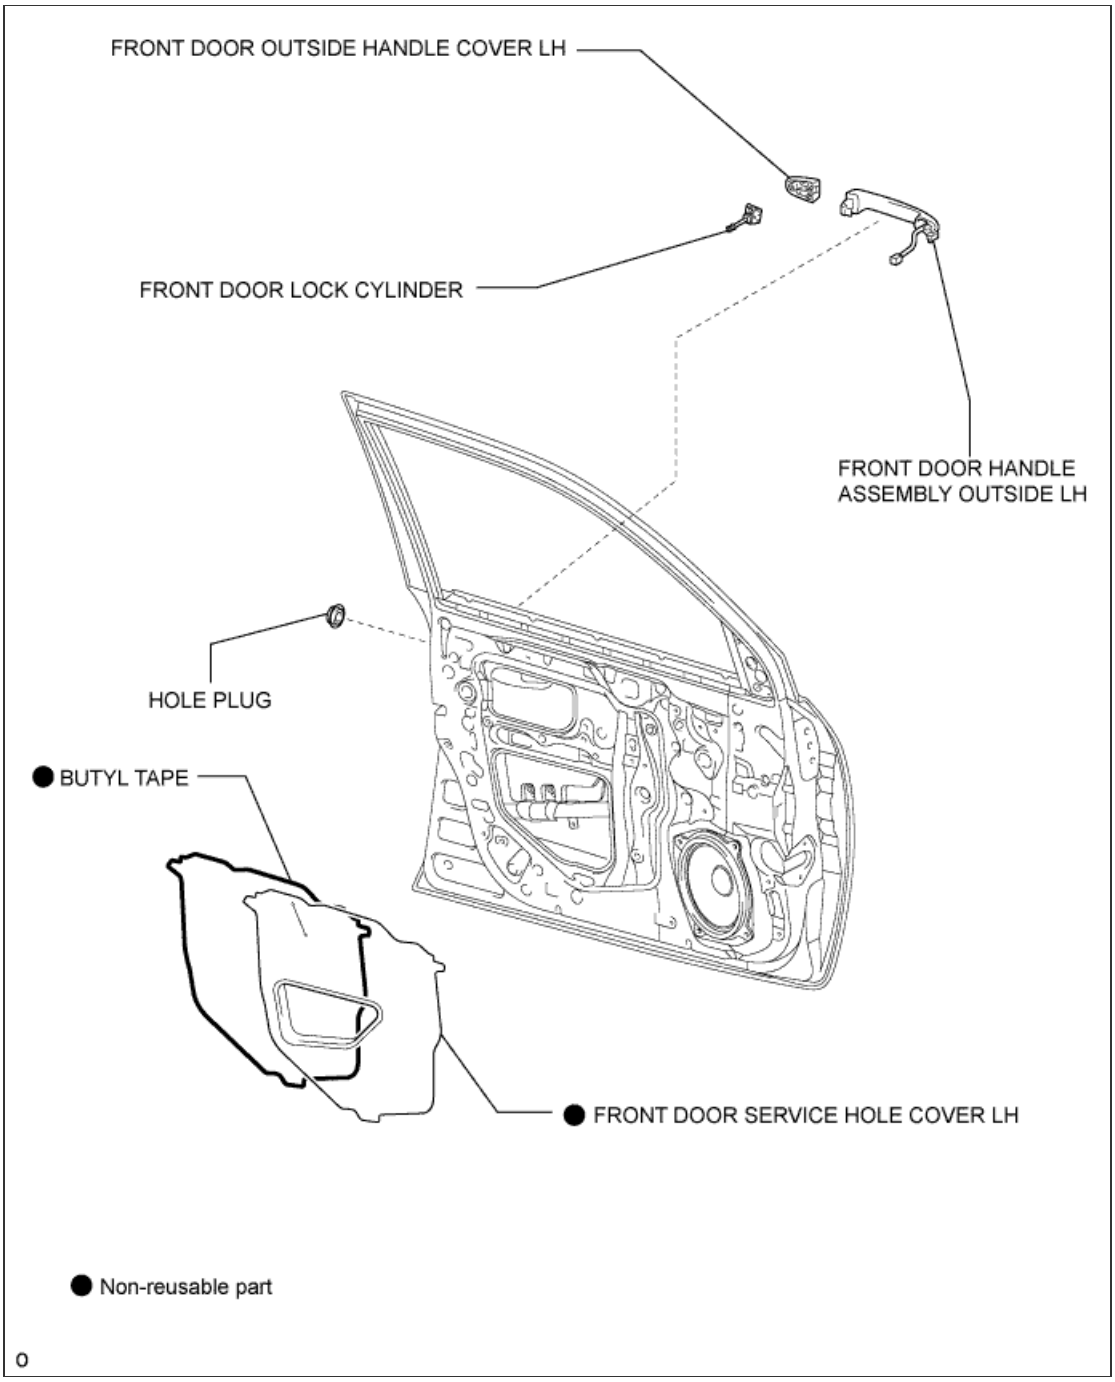
FRONT DOOR OUTSIDE HANDLE COVER LH
FRONT DOOR LOCK CYLINDER
FRONT DOOR HANDLE ASSEMBLY OUTSIDE LH
HOLE PLUG
● BUTYL TAPE
● FRONT DOOR SERVICE HOLE COVER LH
● Non-reusable part

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT LOWER DOOR FRAME BRACKET GARNISH LH


a. Detach the clip and claw, remove the front lower door frame bracket garnish.

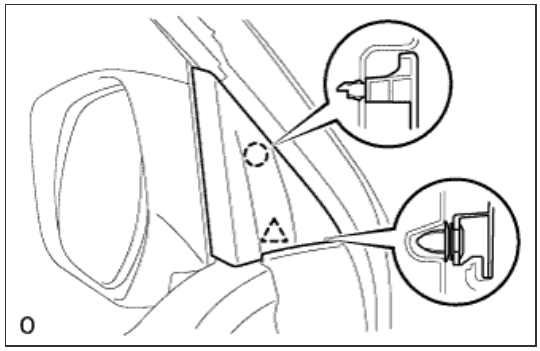

3. REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Using a moulding remover, detach the 5 claws.

b. Disconnect the connector and remove the front door armrest base panel and multiplex network master switch.

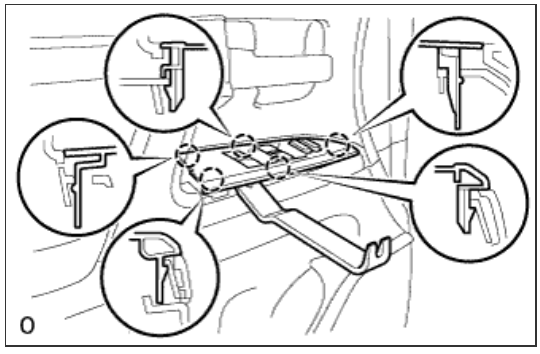


4. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle bezel.


HINT:

Tape the screwdriver tip before use.

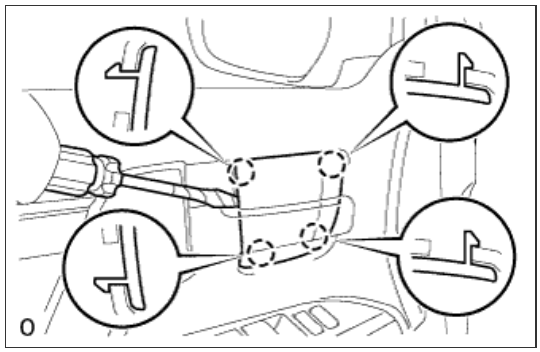

5. REMOVE DOOR ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

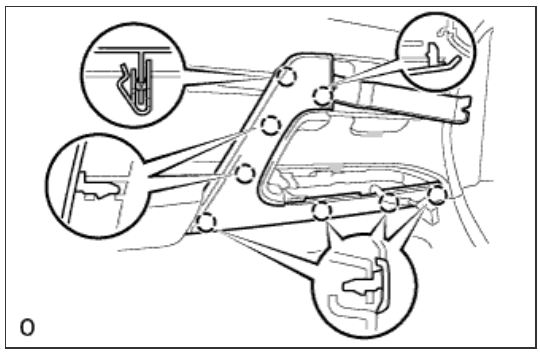

6. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

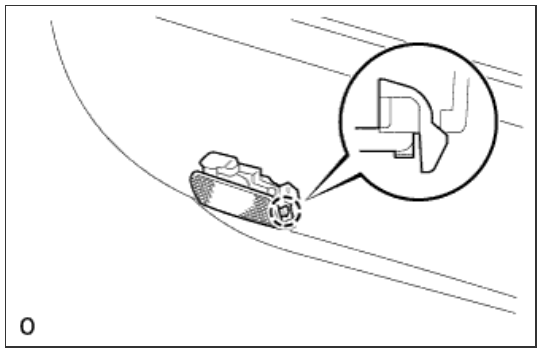


7. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 13 clips, 4 claws and trim board.

c. Disconnect the connector.

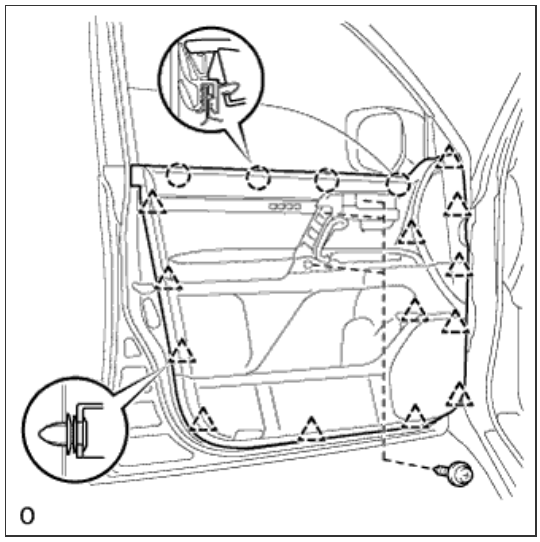

d. Disconnect the 2 cables from the inside handle.

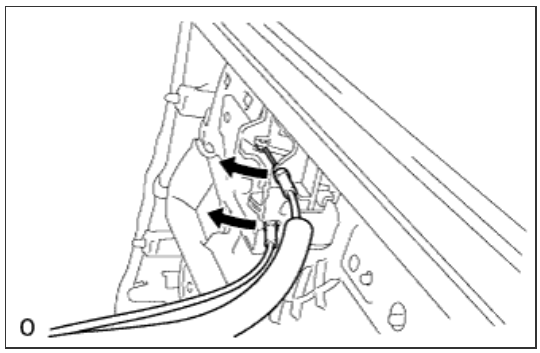

8. REMOVE FRONT DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 9 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:


Remove the remaining tape on the door.

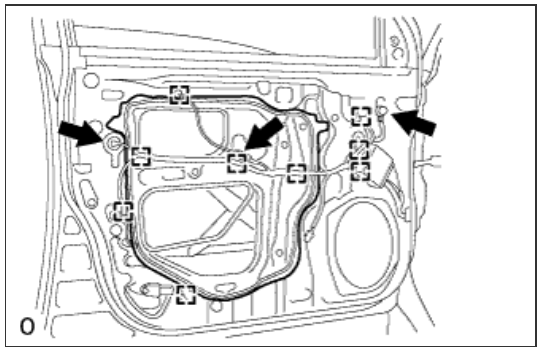


9. REMOVE FRONT DOOR OUTSIDE HANDLE COVER LH

a. Remove the hole plug.

b. Using a T30 "TORX" wrench, loosen the screw and remove the cover with the door lock cylinder installed.

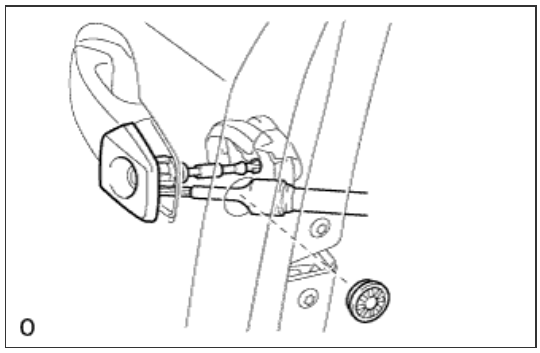


c. Detach the 2 claws and remove the front door outside handle cover.

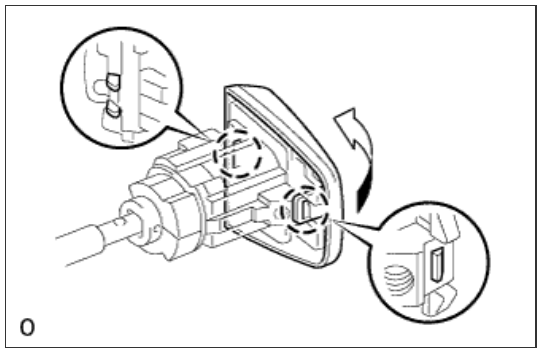

10. REMOVE FRONT DOOR HANDLE ASSEMBLY OUTSIDE LH

a. Disconnect the connector.


b. Using a T30 "TORX" wrench, loosen the screw.

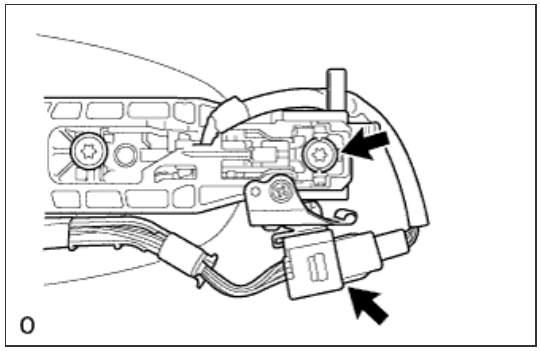

c. Remove the handle by sliding and pulling it in the direction indicated by the arrow in the illustration.

NOTICE:

If the release plate is not pulled and held when removing the handle, the release plate will interfere with the handle and become damaged.

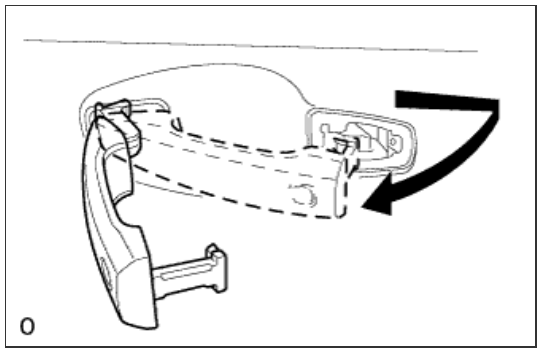

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT LOWER DOOR FRAME BRACKET GARNISH LH


a. Detach the clip and claw, remove the front lower door frame bracket garnish.

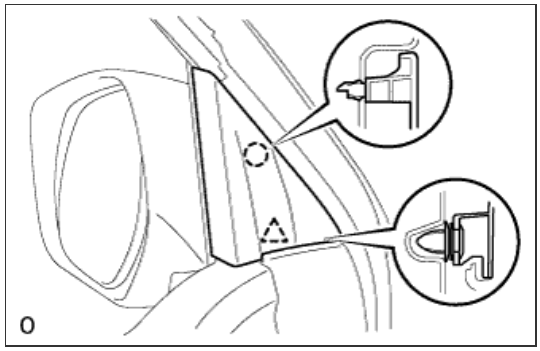

3. REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Using a moulding remover, detach the 5 claws.

b. Disconnect the connector and remove the armrest base panel.

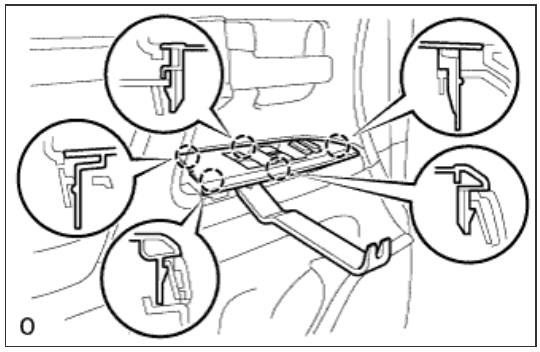


4. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle bezel.


HINT:

Tape the screwdriver tip before use.

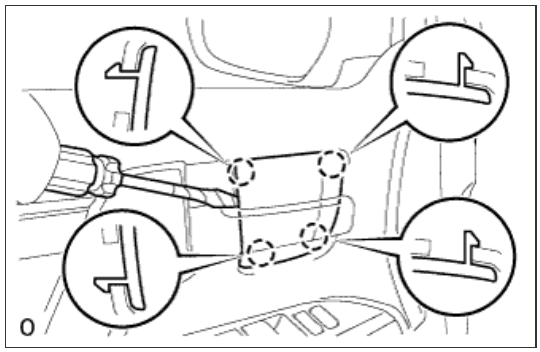

5. REMOVE DOOR ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

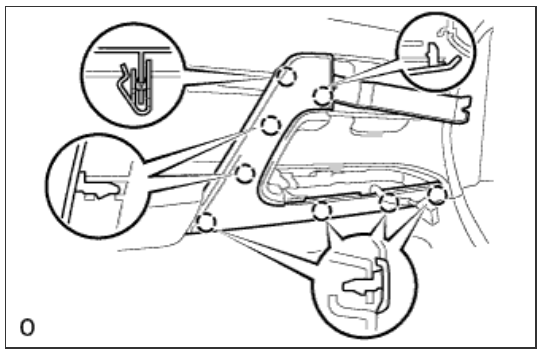

6. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

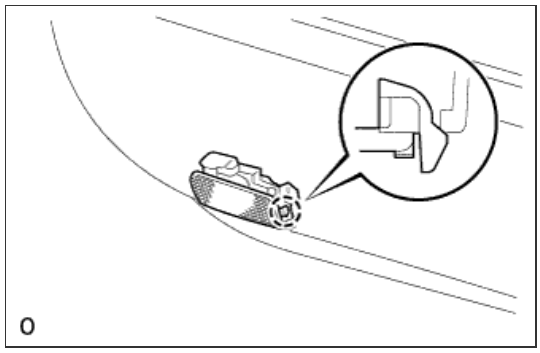


7. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 13 clips, 4 claws and trim board.

c. Disconnect the connector.

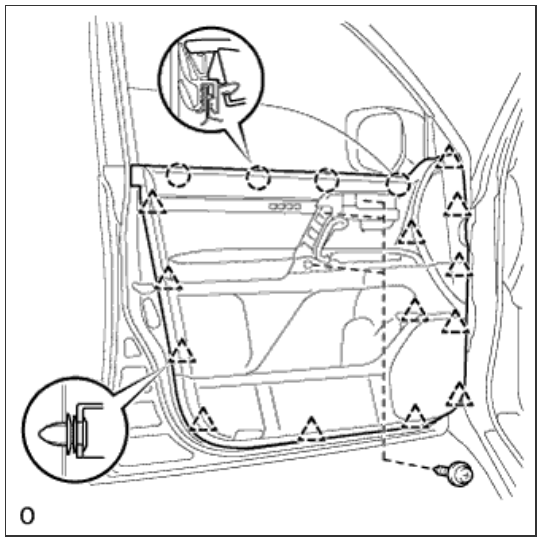

d. Disconnect the 2 cables from the inside handle.

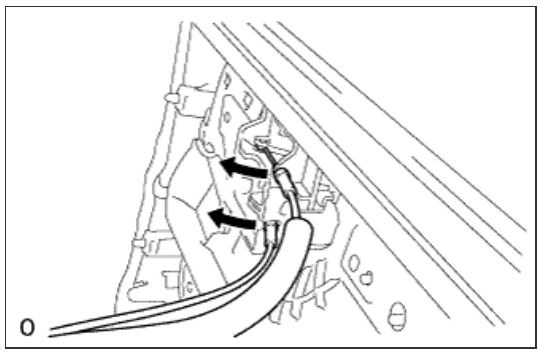

8. REMOVE FRONT DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 9 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:


Remove the remaining tape on the door.

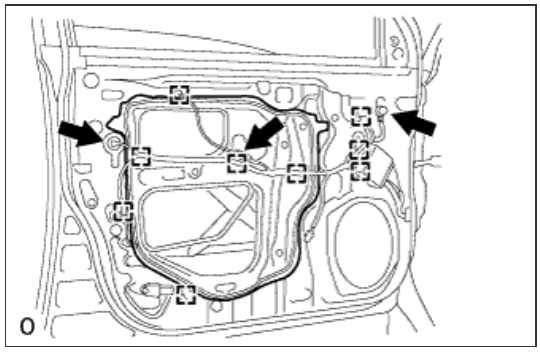


9. REMOVE FRONT DOOR OUTSIDE HANDLE COVER LH

a. Remove the hole plug.

b. Using a T30 "TORX" wrench, loosen the screw and remove the cover with the door lock cylinder installed.

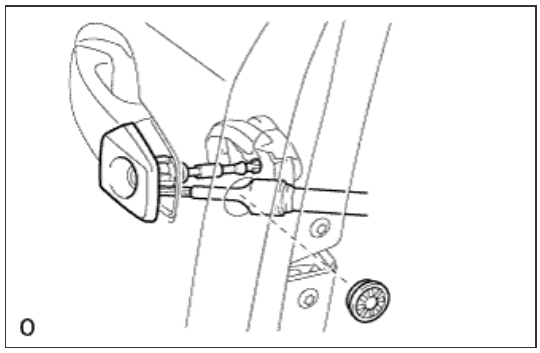


c. Detach the 2 claws and remove the front door outside handle cover.

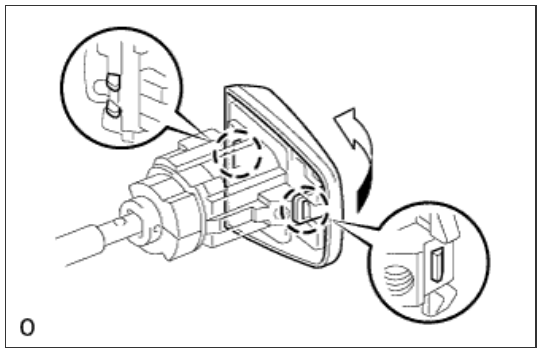

10. REMOVE FRONT DOOR HANDLE ASSEMBLY OUTSIDE LH

a. Disconnect the connector.


b. Using a T30 "TORX" wrench, loosen the screw.

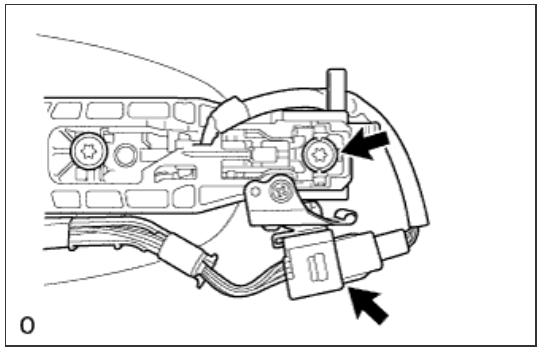

c. Remove the handle by sliding and pulling it in the direction indicated by the arrow in the illustration.

NOTICE:

f the release plate is not pulled and held when removing the handle, the release plate will interfere with the handle and become damaged.

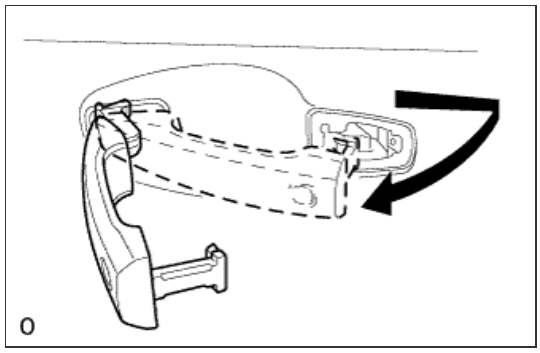

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT LOWER DOOR FRAME BRACKET GARNISH LH


a. Detach the clip and claw, remove the front lower door frame bracket garnish.

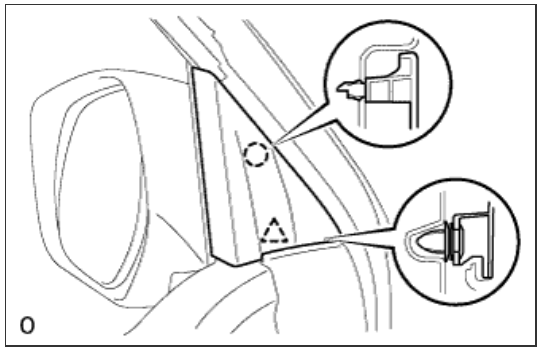

3. REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Using a moulding remover, detach the 5 claws.

b. Disconnect the connector and remove the armrest base panel.

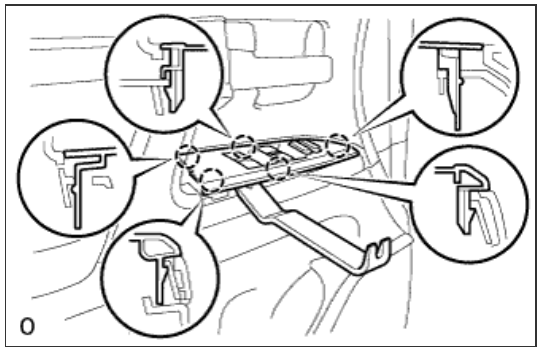


4. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle bezel.


HINT:

Tape the screwdriver tip before use.

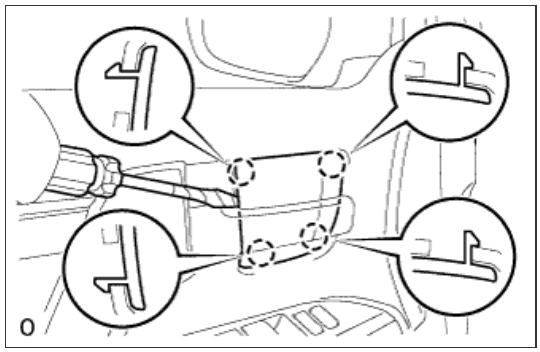

5. REMOVE DOOR ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

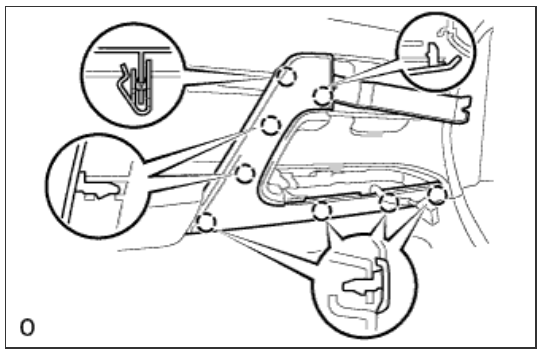

6. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

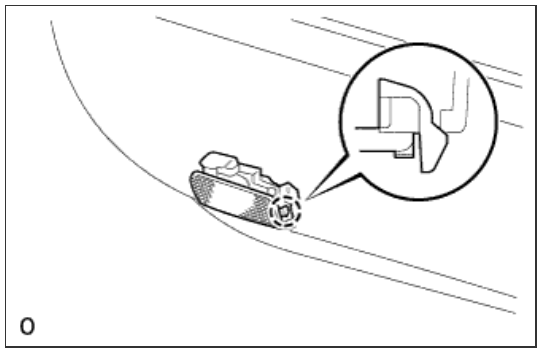


7. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 13 clips, 4 claws and trim board.

c. Disconnect the connector.

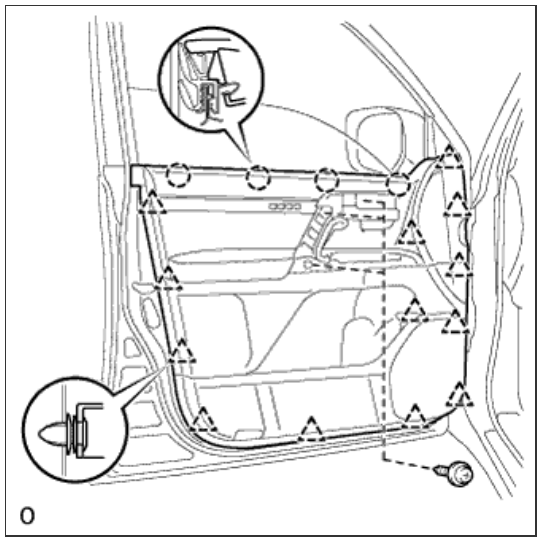

d. Disconnect the 2 cables from the inside handle.

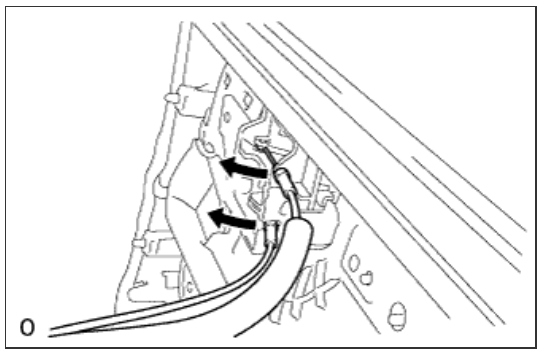

8. REMOVE FRONT DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 9 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:


Remove the remaining tape on the door.

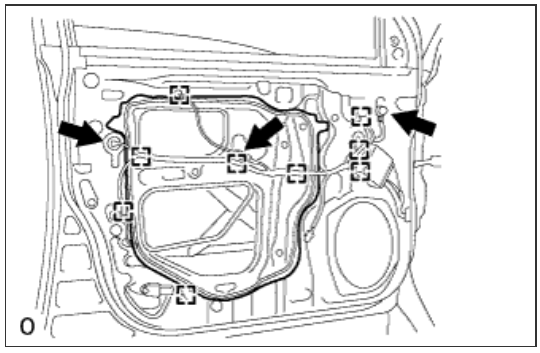


9. REMOVE FRONT DOOR OUTSIDE HANDLE COVER LH

a. Remove the hole plug.

b. Using a T30 "TORX" wrench, loosen the screw and remove the cover with the door lock cylinder installed.

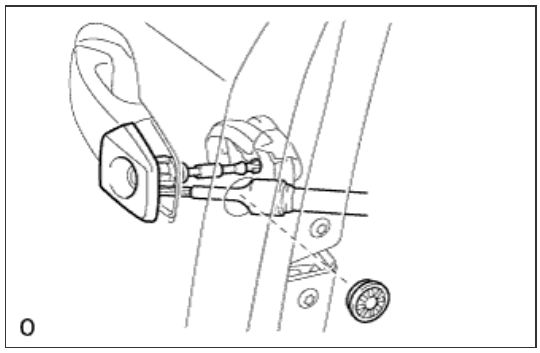


c. Detach the 2 claws and remove the front door outside handle cover.

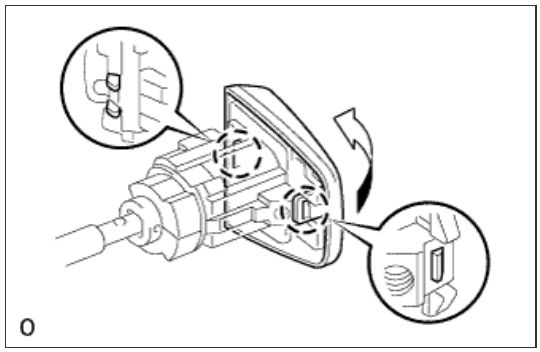

10. REMOVE FRONT DOOR HANDLE ASSEMBLY OUTSIDE LH

a. Disconnect the connector.


b. Using a T30 "TORX" wrench, loosen the screw.

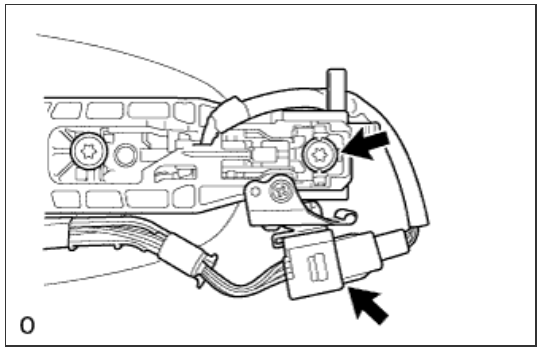

c. Remove the handle by sliding and pulling it in the direction indicated by the arrow in the illustration.

NOTICE:

f the release plate is not pulled and held when removing the handle, the release plate will interfere with the handle and become damaged.

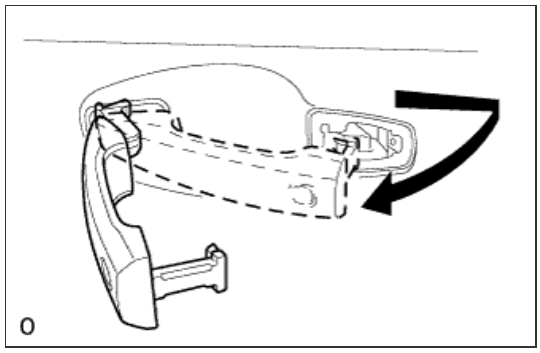

for Preparation Click ere

HINT

- U e t e a e proce re for t e LH i e an RH i e
- T e proce re li te belo are for t e LH i e

INSPECT ENTRY LOCK AND UNLOCK SWITCH

a Disconnect the connector.


b Remove the outside handle.

c Measure the resistance according to the value(s) in the table below.

Stan ar Re i tance

Tester Connection	Switch Condition	Specified Condition
1 (TRG-) - 3 (TRG+)	Lock switch not pushed (OFF)	10 kΩ or higher
1 (TRG-) - 3 (TRG+)	Lock switch pushed (ON)	Below 1 Ω

If the result is not as specified, replace the entry lock and unlock switch.

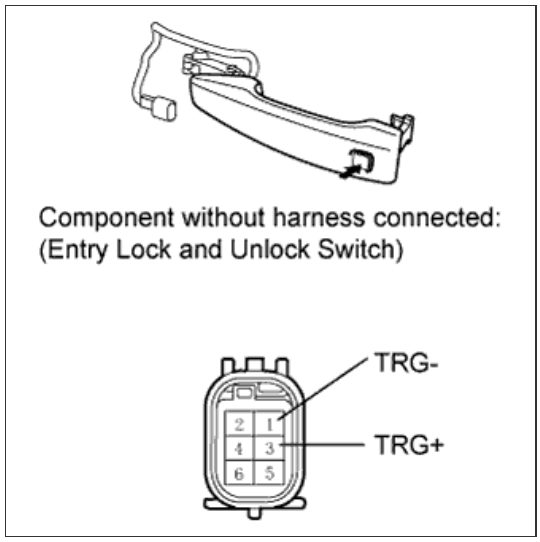


for Preparation Click here

HINT:

- **Use the same proced res for the LH side and RH side.**
- **The proced res listed below are for the LH side.**


1. INSTALL FRONT DOOR HANDLE ASSEMBLY OUTSIDE LH

a. Install the handle by pushing it in the direction of the arrow in the illustration.

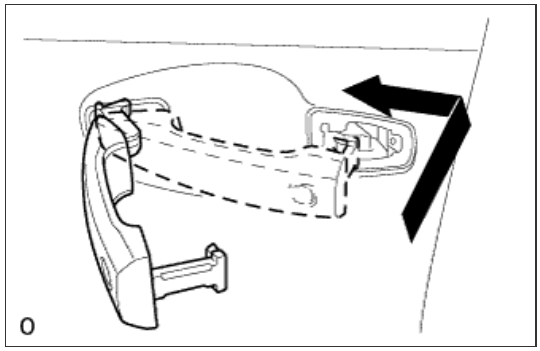


b. Using a T30 "TORX" socket, install the screw.

c. Connect the connector.

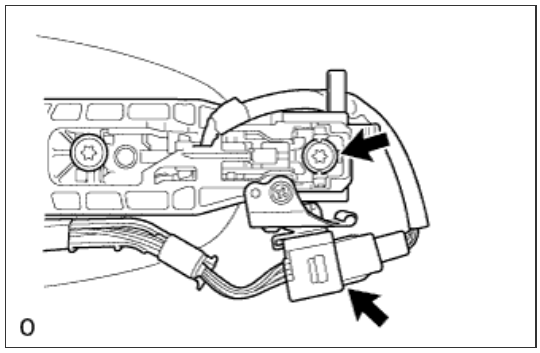

2. INSTALL FRONT DOOR OUTSIDE HANDLE COVER LH


a. Attach the 2 claws to install the front door outside handle cover to the front door lock cylinder.

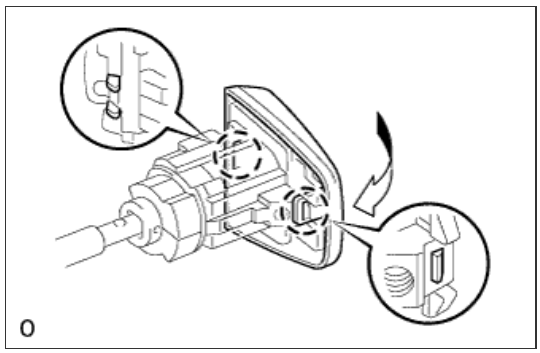

b. Using a T30 "TORX" socket, install the cover (with the door lock cylinder) with the screw.

Tor e:
.0 N m{ 41 kgf cm 3 in. lbf


c. Install the hole plug.

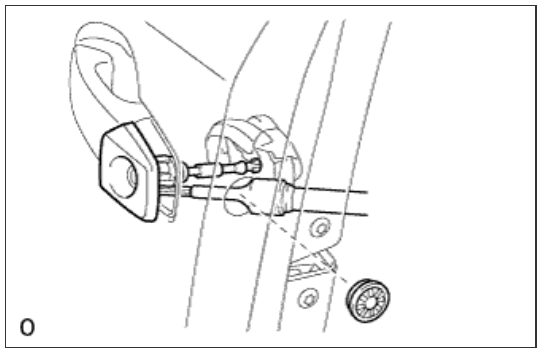

3. INSTALL FRONT DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the front door lock remote control cable and front door inside locking cable through a new front door service hole cover.

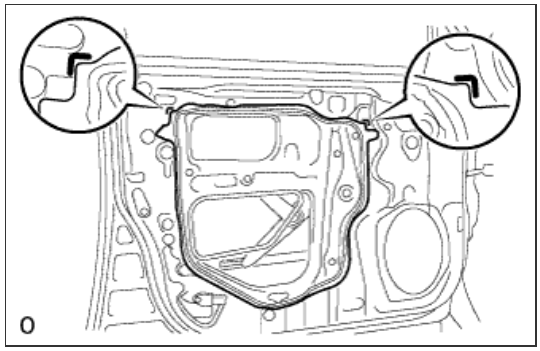


NOTICE:

- **When installing the ser ice hole co er p ll the links and connectors thro h the ser ice hole co er.**
- **There sho ld be no wrinkles or folds after attaching the ser ice hole co er.**
- **After attaching the ser ice hole co er check the sealing alit .**

c. Connect the 2 connectors.

d. Attach the 9 clamps.

e. Install the bolt as shown in the illustration.

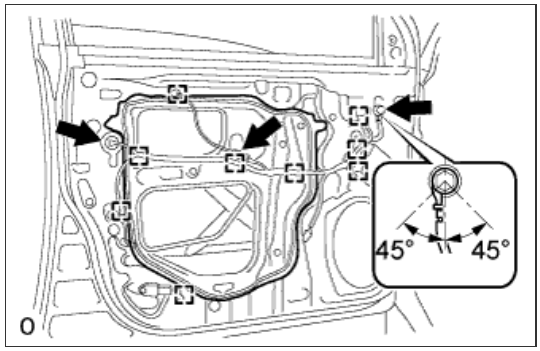


Tor e:
.4 N m{ 8 kgf cm 4 in. lbf

4. INSTALL FRONT DOOR TRIM BOARD SUB ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

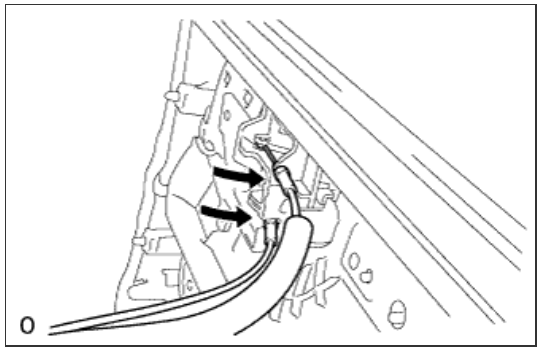

c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.


d. Install the 3 screws.

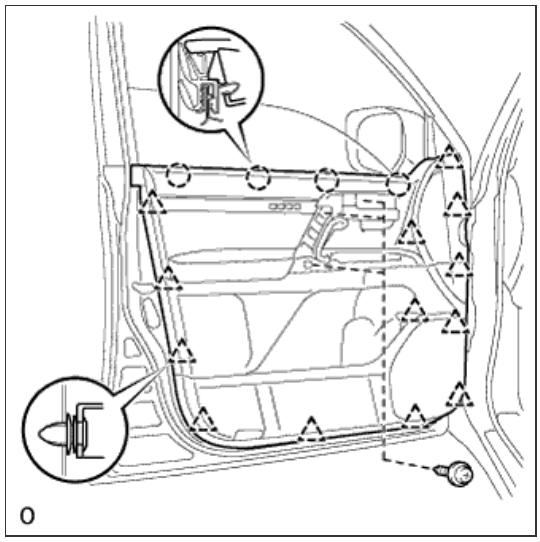

INSTALL COURTESY LI HT ASSEMBLY (w Co rtes Light)


a. Connect the connector.

b. Attach the claw of the courtesy light to the front door trim.

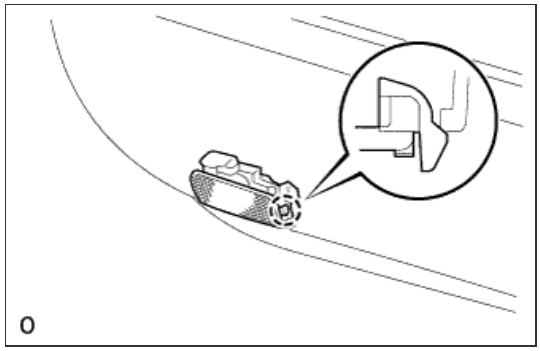


. INSTALL DOOR ASSIST RIP COVER LH

a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

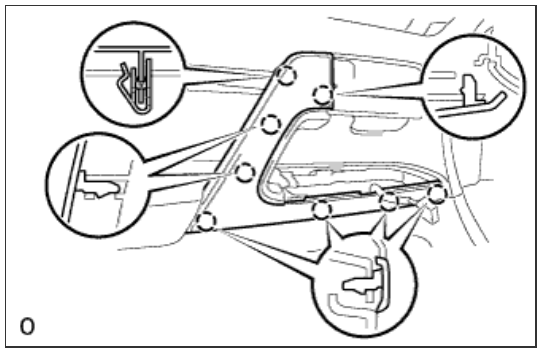

. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH


a. Attach the 4 claws to install the bezel.

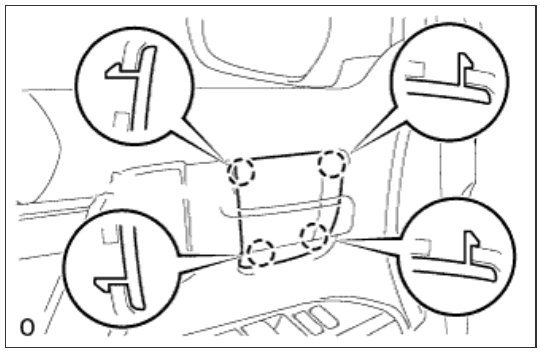

8. INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Connect the connector.

b. Attach the 5 claws and install the front door armrest base panel.

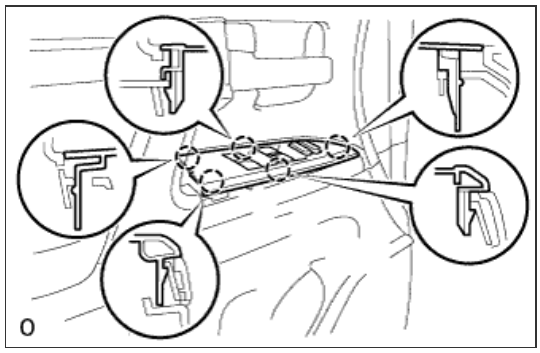

9. INSTALL FRONT LOWER DOOR FRAME BRACKET ARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

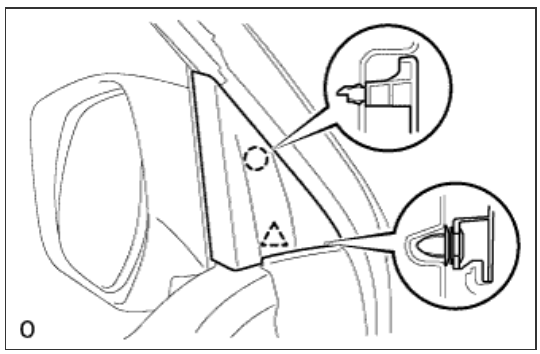

10. CONNECT CABLE TO NE ATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

. CHECK SRS WARNIN LI HT

a. Check the SRS warning light (Click here).


for Preparation Click here

HINT:

- **Use the same proced res for the LH side and RH side.**
- **The proced res listed below are for the LH side.**


1. INSTALL FRONT DOOR HANDLE ASSEMBLY OUTSIDE LH

a. Install the handle by pushing it in the direction of the arrow in the illustration.

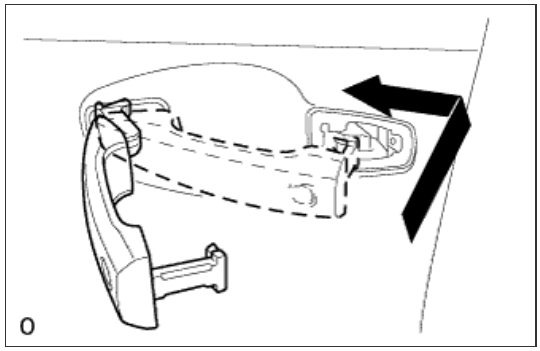


b. Using a T30 "TORX" socket, install the screw.

c. Connect the connector.

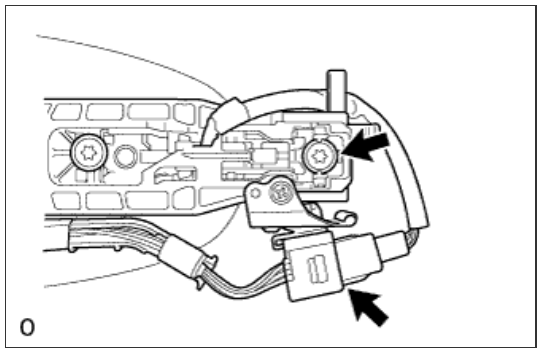

2. INSTALL FRONT DOOR OUTSIDE HANDLE COVER LH


a. Attach the 2 claws to install the front door outside handle cover to the front door lock cylinder.

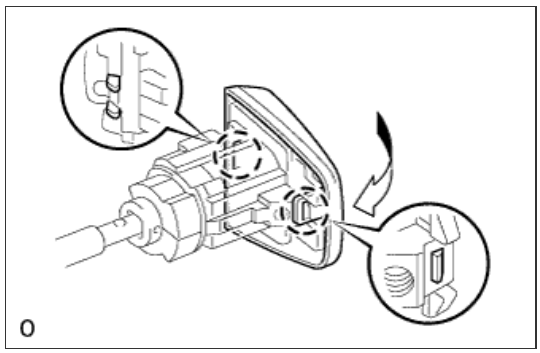

b. Using a T30 "TORX" socket, install the cover (with the door lock cylinder) with the screw.

Tor e:
.0 N m{ 41 kgf cm 3 in. lbf


c. Install the hole plug.

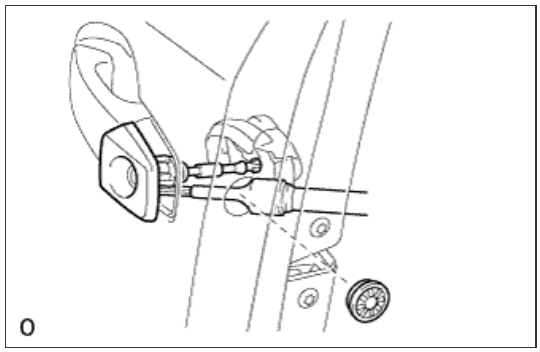

3. INSTALL FRONT DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the front door lock remote control cable and front door inside locking cable through a new front door service hole cover.

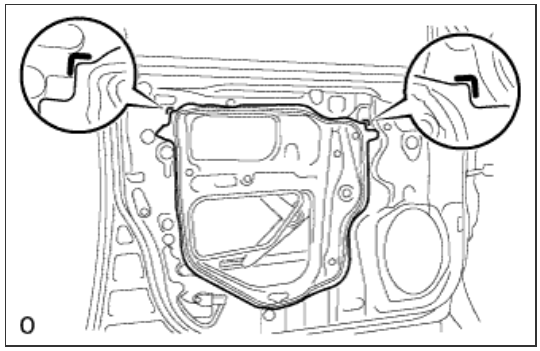


NOTICE:

- **When installing the ser ice hole co er p ll the links and connectors thro h the ser ice hole co er.**
- **There sho ld be no wrinkles or folds after attaching the ser ice hole co er.**
- **After attaching the ser ice hole co er check the sealing alit .**

c. Connect the 2 connectors.

d. Attach the 9 clamps.

e. Install the bolt as shown in the illustration.

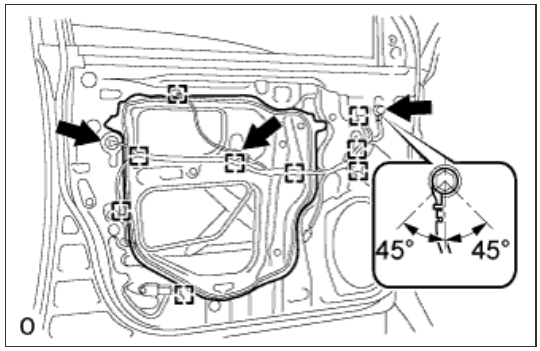


Tor e:
.4 N m{ 8 kgf cm 4 in. lbf

4. INSTALL FRONT DOOR TRIM BOARD SUB ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

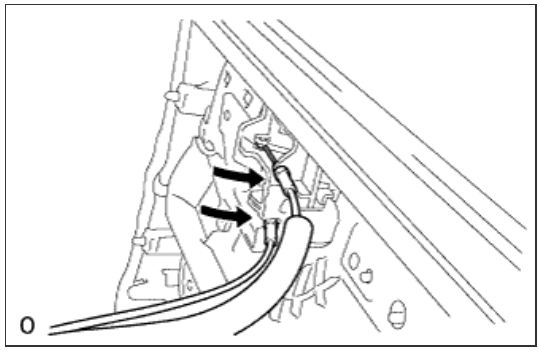

c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.


d. Install the 3 screws.

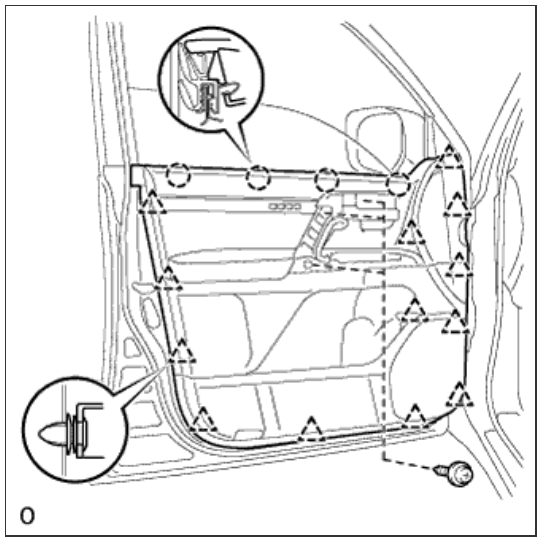

INSTALL COURTESY LI HT ASSEMBLY (w Co rtes Light)


a. Connect the connector.

b. Attach the claw of the courtesy light to the front door trim.

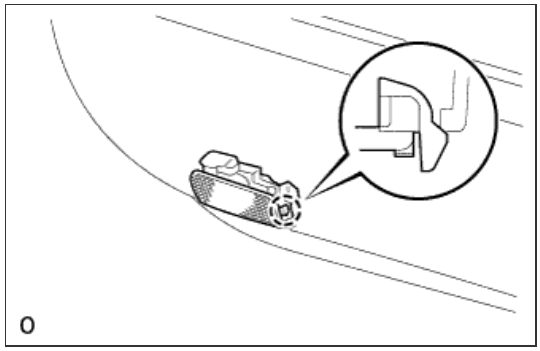


. INSTALL DOOR ASSIST RIP COVER LH

a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

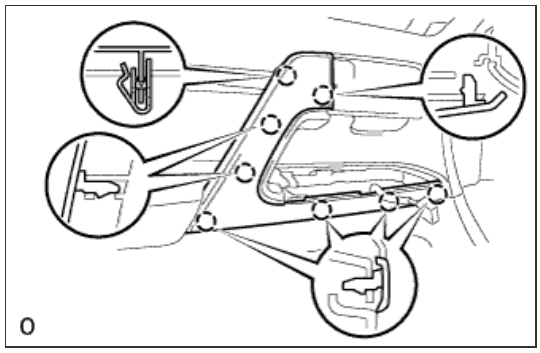

. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH


a. Attach the 4 claws to install the bezel.

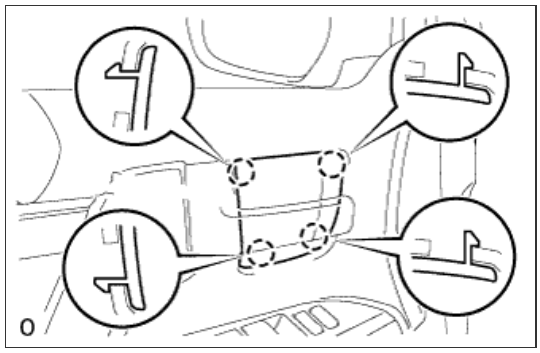

8. INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Connect the connector.

b. Attach the 5 claws to install the armrest base panel.

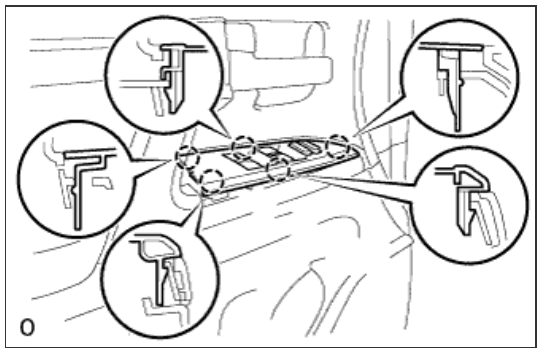

9. INSTALL FRONT LOWER DOOR FRAME BRACKET ARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

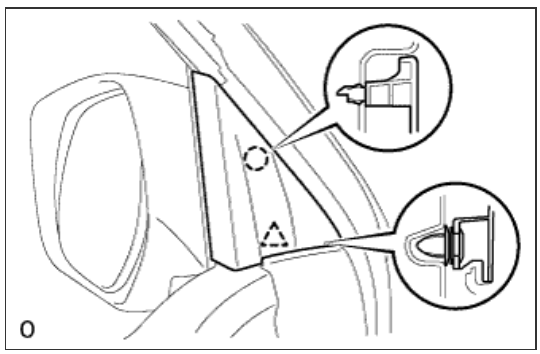

10. CONNECT CABLE TO NE ATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

. CHECK SRS WARNIN LI HT

a. Check the SRS warning light (Click here).


for Preparation Click here

HINT:

- **Use the same proced res for the LH side and RH side.**
- **The proced res listed below are for the LH side.**


1. INSTALL FRONT DOOR HANDLE ASSEMBLY OUTSIDE LH

a. Install the handle by pushing it in the direction of the arrow in the illustration.

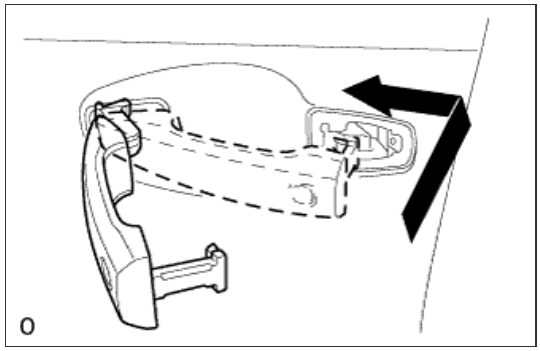


b. Using a T30 "TORX" socket, install the screw.

c. Connect the connector.

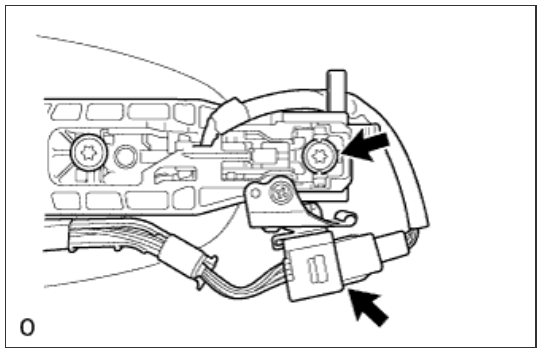

2. INSTALL FRONT DOOR OUTSIDE HANDLE COVER LH


a. Attach the 2 claws to install the front door outside handle cover to the front door lock cylinder.

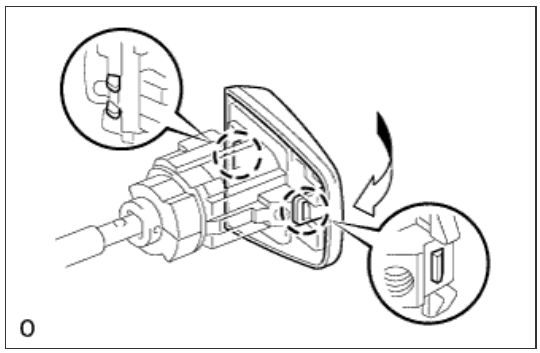

b. Using a T30 "TORX" socket, install the cover (with the door lock cylinder) with the screw.

Tor e:
.0 N m{ 41 kgf cm 3 in. lbf


c. Install the hole plug.

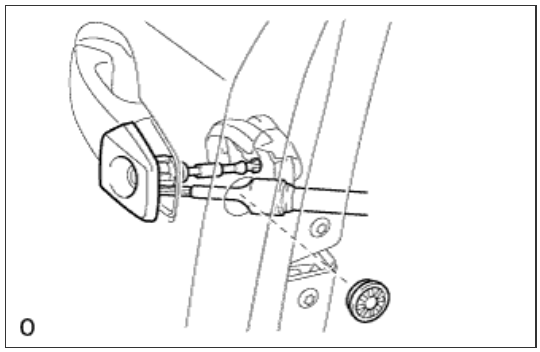

3. INSTALL FRONT DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the front door lock remote control cable and front door inside locking cable through a new front door service hole cover.

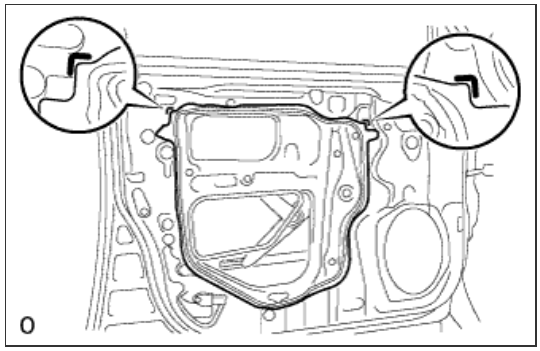


NOTICE:

- **When installing the ser ice hole co er p ll the links and connectors thro h the ser ice hole co er.**
- **There sho ld be no wrinkles or folds after attaching the ser ice hole co er.**
- **After attaching the ser ice hole co er check the sealing alit .**

c. Connect the 2 connectors.

d. Attach the 9 clamps.

e. Install the bolt as shown in the illustration.

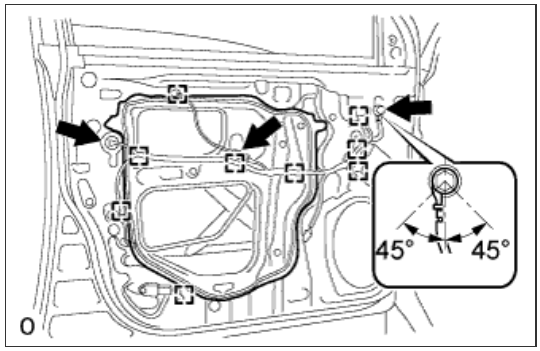


Tor e:
.4 N m{ 8 kgf cm 4 in. lbf

4. INSTALL FRONT DOOR TRIM BOARD SUB ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

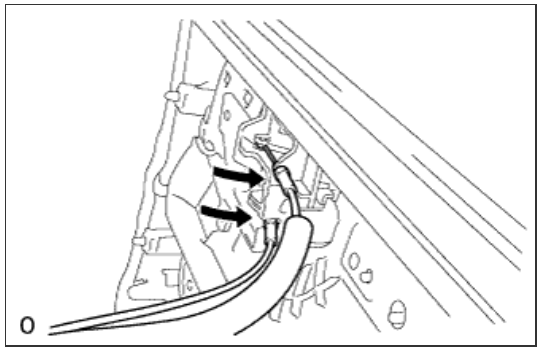

c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.


d. Install the 3 screws.

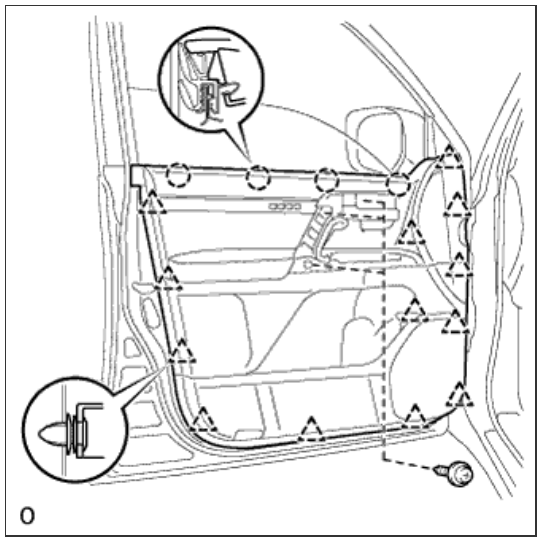

INSTALL COURTESY LI HT ASSEMBLY (w Co rtes Light)


a. Connect the connector.

b. Attach the claw of the courtesy light to the front door trim.

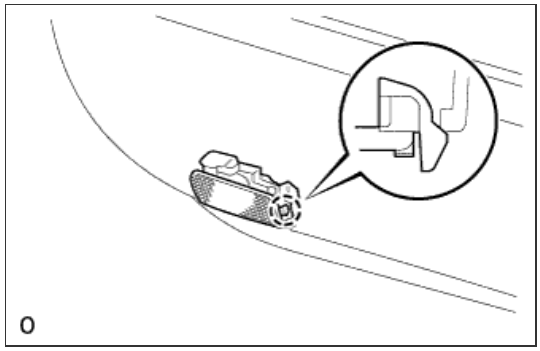


. INSTALL DOOR ASSIST RIP COVER LH

a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

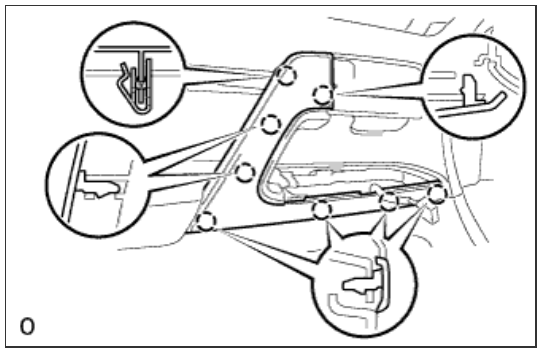

. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH


a. Attach the 4 claws to install the bezel.

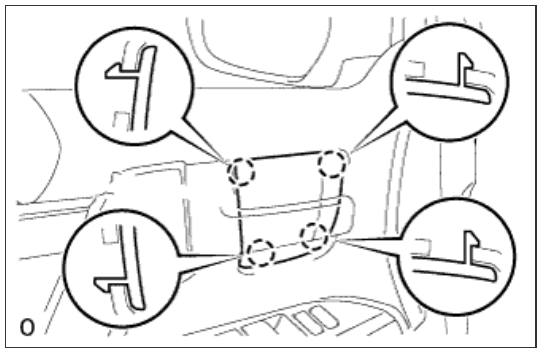

8. INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Connect the connector.

b. Attach the 5 claws to install the armrest base panel.

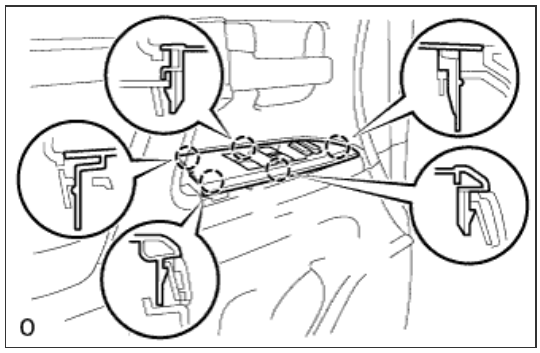

9. INSTALL FRONT LOWER DOOR FRAME BRACKET ARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

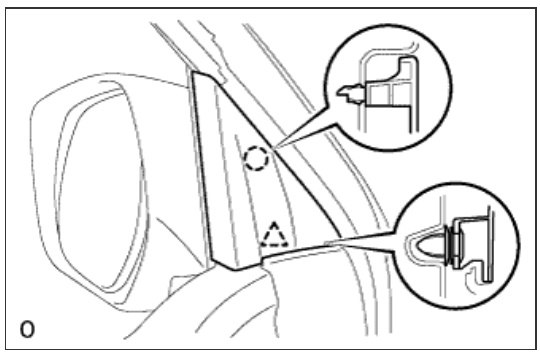

10. CONNECT CABLE TO NE ATIVE BATTERY TERMINAL


NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

. CHECK SRS WARNIN LI HT

a. Check the SRS warning light (Click here).

for Preparation Click ere

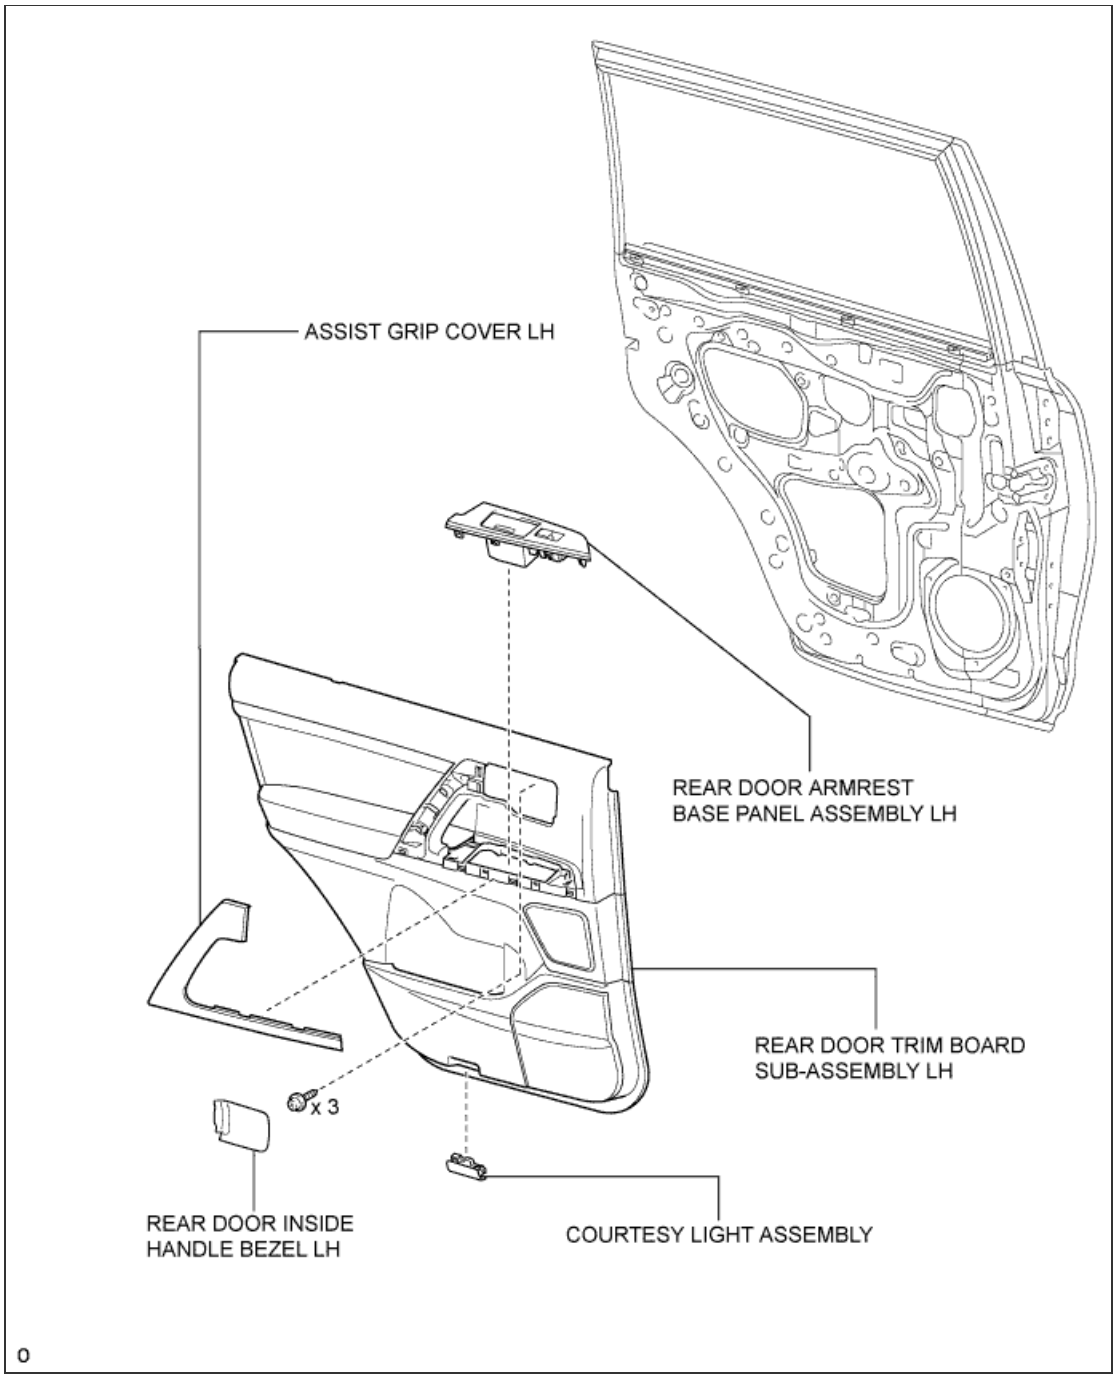

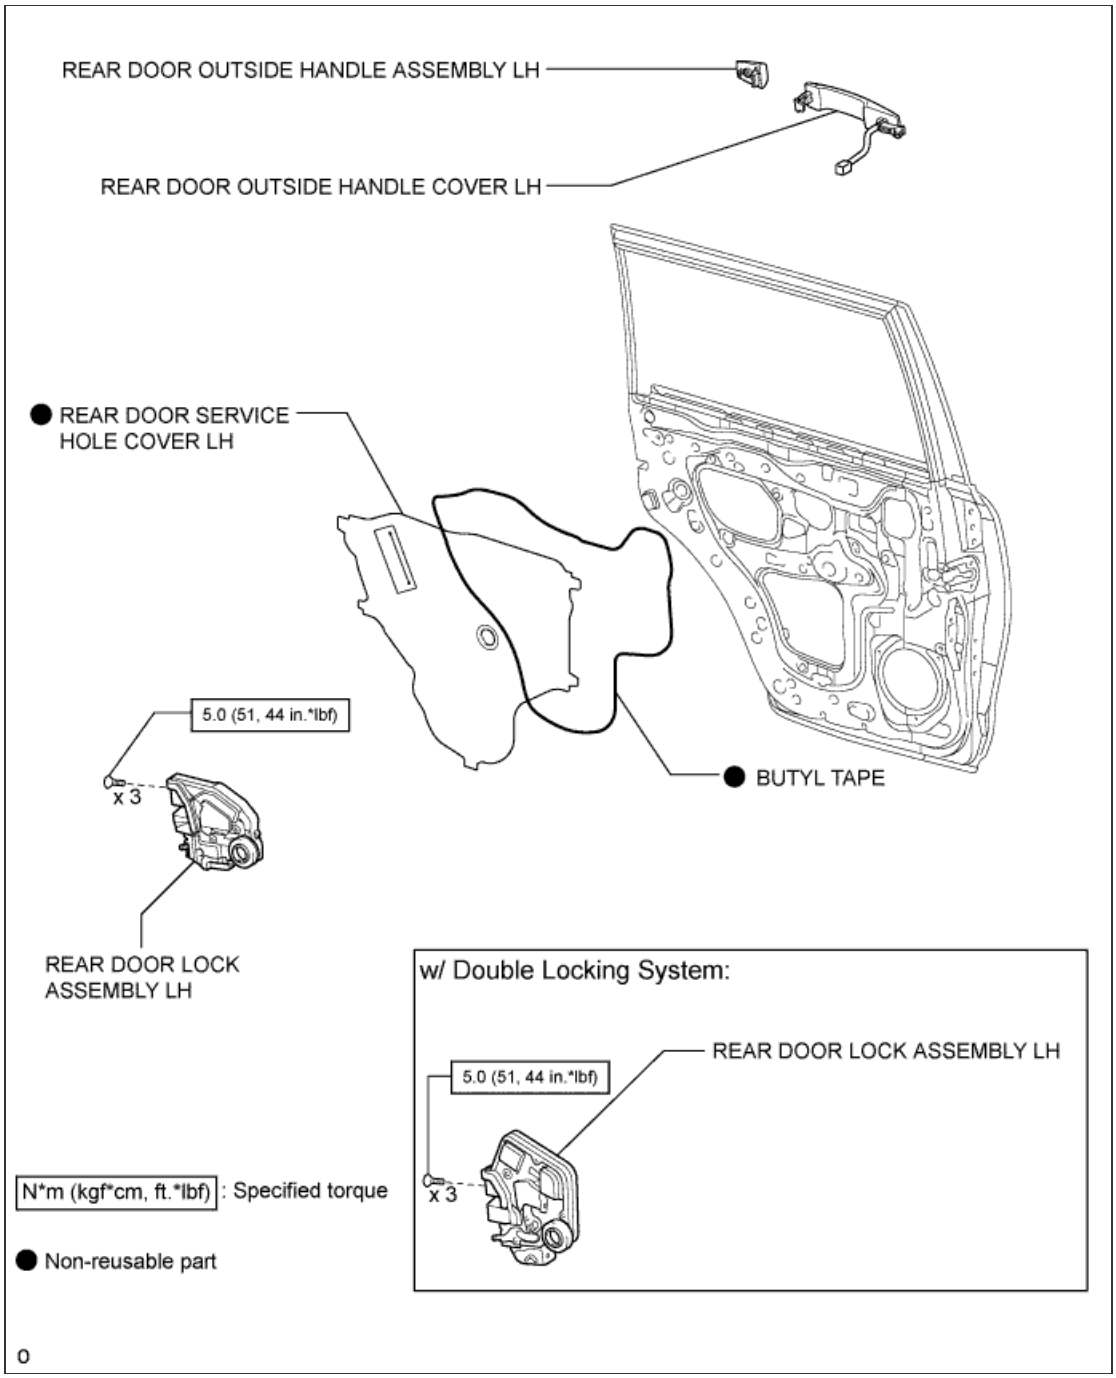
REAR DOOR OUTSIDE HANDLE ASSEMBLY LH
REAR DOOR OUTSIDE HANDLE COVER LH
● REAR DOOR SERVICE HOLE COVER LH
5.0 (51, 44 in.*lbf)
x 3
● BUTYL TAPE
REAR DOOR LOCK ASSEMBLY LH
w/ Double Locking System:
REAR DOOR LOCK ASSEMBLY LH
5.0 (51, 44 in.*lbf)
x 3
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
o

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Using a moulding remover, detach the 7 claws.

b. Disconnect the connector and remove the rear door armrest base panel and rear power window regulator switch assembly.

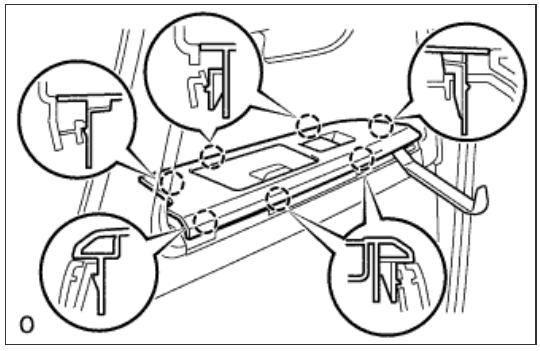


3. REMOVE REAR DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the bezel.


HINT:

Tape the screwdriver tip before use.

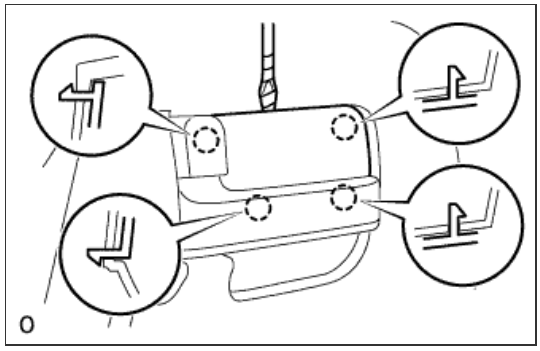

4. REMOVE ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 9 claws and remove the door assist grip cover.

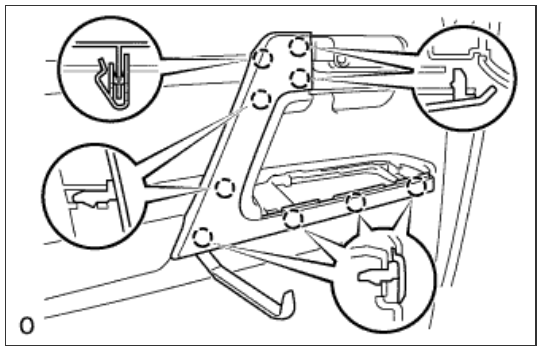

5. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

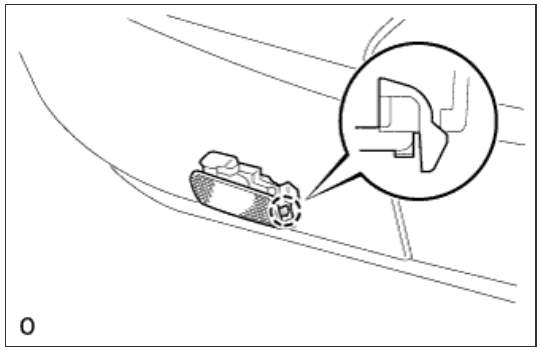


6. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 9 clips, 4 claws and trim board.

c. Disconnect the connector and remove the trim board.

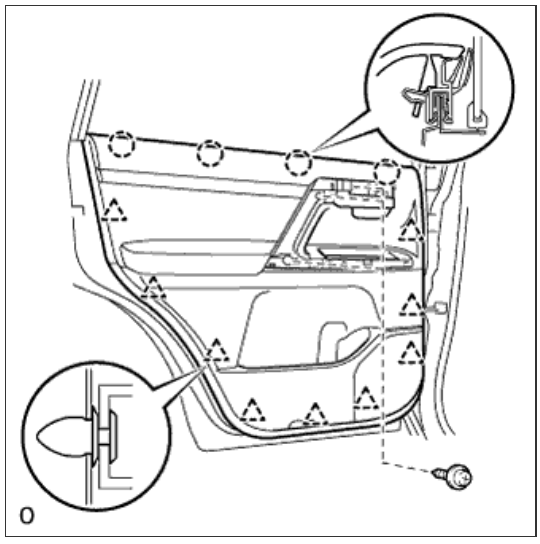

d. Disconnect the 2 cables from the inside handle.

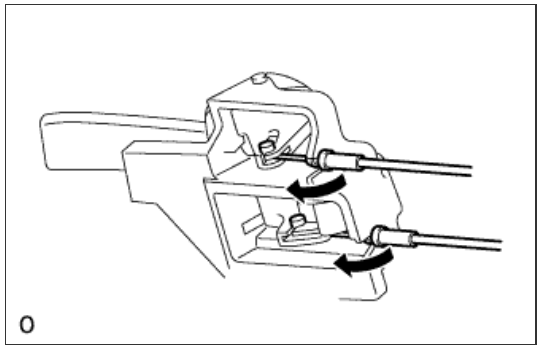

7. REMOVE REAR DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 6 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:

Remove the remaining tape on the door.

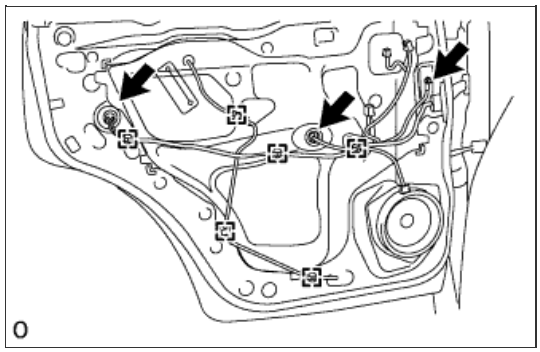


8. REMOVE REAR DOOR LOCK ASSEMBLY LH

a. Using a T30 "TORX" socket, remove the 3 screws and door lock.


NOTICE:

Be careful when removing the screws as the door lock may fall and become damaged.

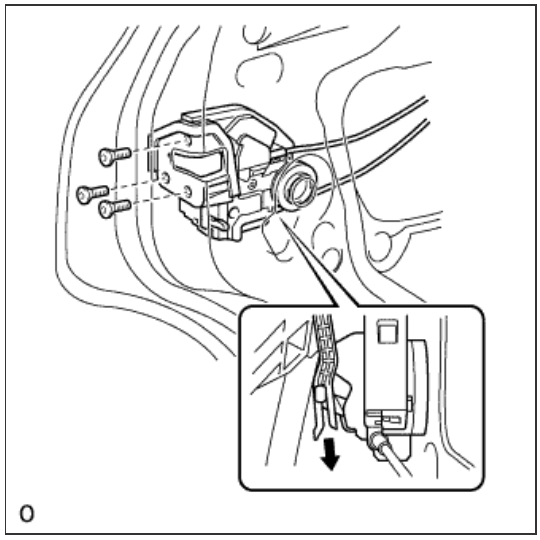


9. REMOVE REAR DOOR OUTSIDE HANDLE COVER LH

a. Using a T30 "TORX" socket, loosen the screw.

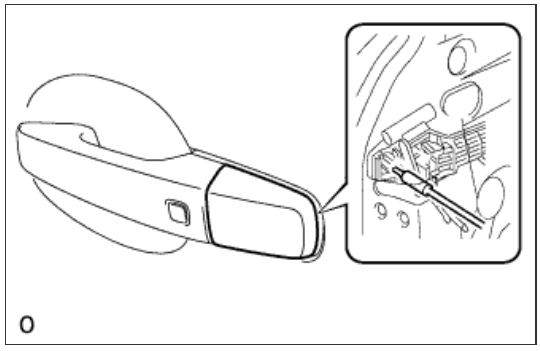


b. Detach the claw and remove the rear door outside handle cover.

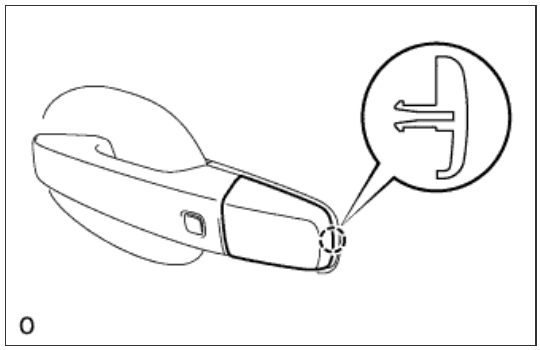


1 . REMOVE REAR DOOR OUTSIDE HANDLE ASSEMBLY LH

a. Using a T30 "TORX" wrench, loosen the screw.

b. Disconnect the connector.

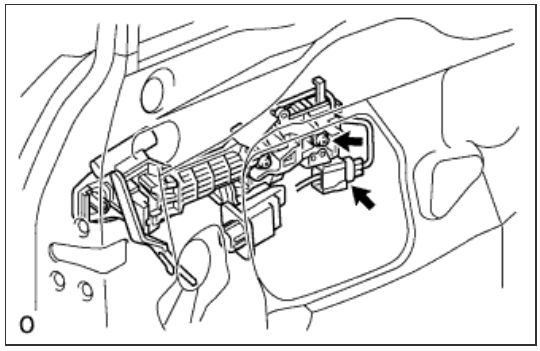

c. Remove the handle by sliding and pulling it in the direction indicated by the arrow in the illustration.

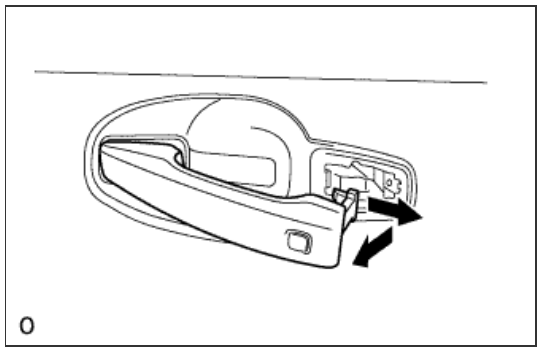

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Using a moulding remover, detach the 7 claws.

b. Disconnect the connector and remove the armrest base panel.

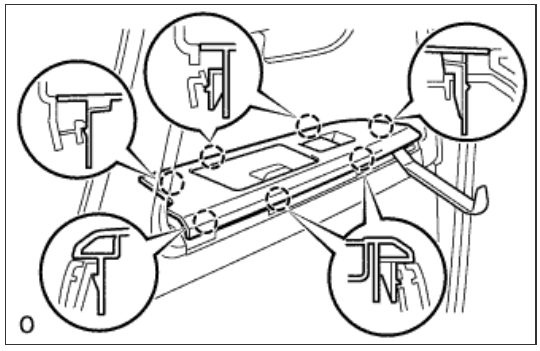

3. REMOVE REAR DOOR INSIDE HANDLE BEZEL LH


a. Using a screwdriver, detach the 4 claws and remove the bezel.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

*1	Protective tape

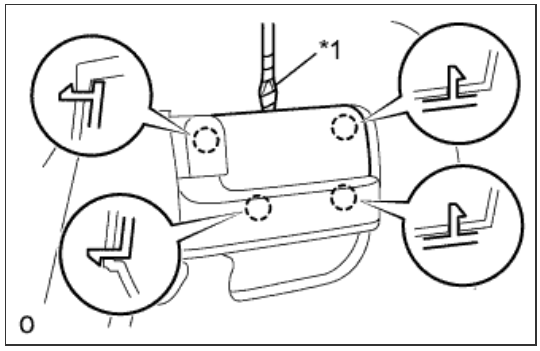

4. REMOVE ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 9 claws and remove the door assist grip cover.

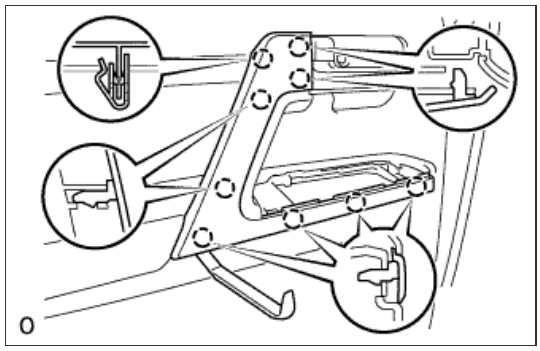

5. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

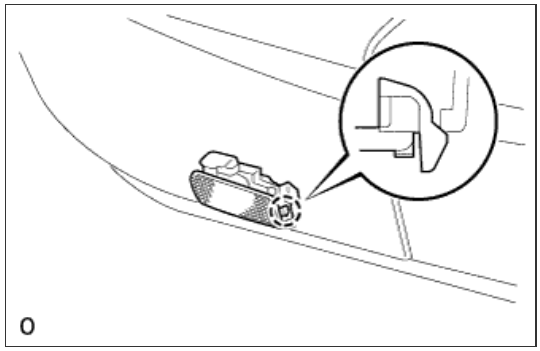


. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 9 clips, 4 claws and trim board.

c. Disconnect the connector and remove the trim board.

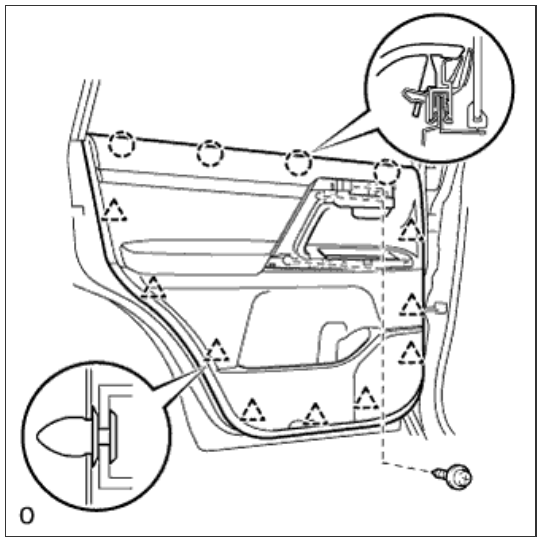

d. Disconnect the 2 cables from the inside handle.

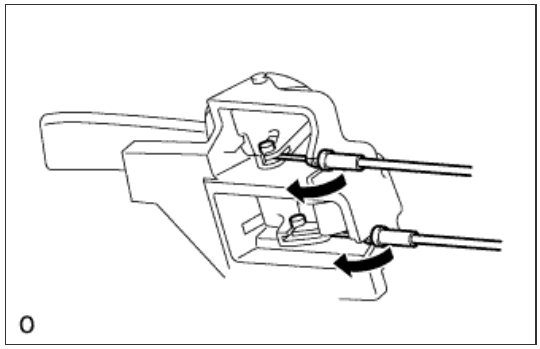

. REMOVE REAR DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 6 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:

Remove the remaining tape on the door.

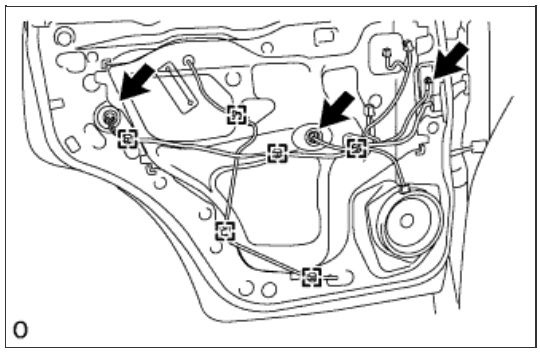


8. REMOVE REAR DOOR LOCK ASSEMBLY LH

a. Using a T30 "TORX" socket, remove the 3 screws and door lock.


NOTICE:

Be careful when removing the screws as the door lock may fall and become damaged.

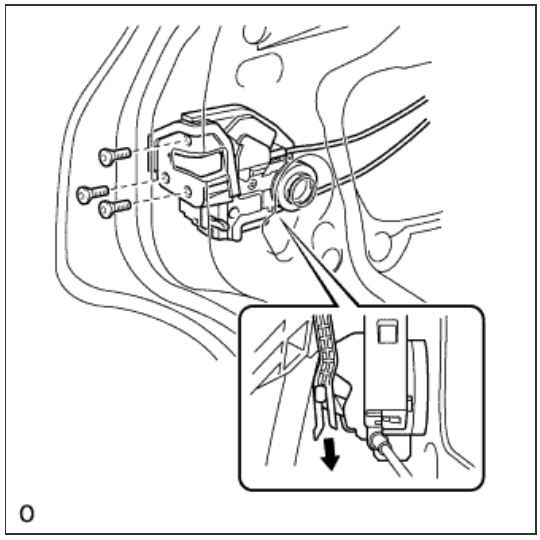


9. REMOVE REAR DOOR OUTSIDE HANDLE COVER LH

a. Using a T30 "TORX" socket, loosen the screw.

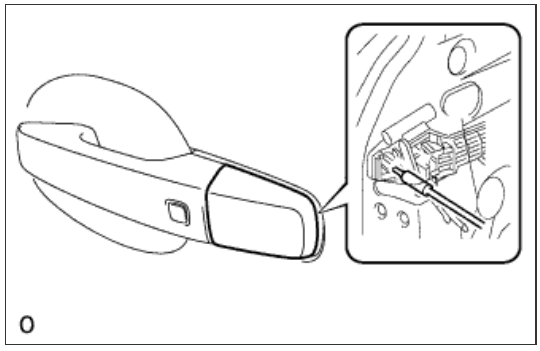


b. Detach the claw and remove the rear door outside handle cover.

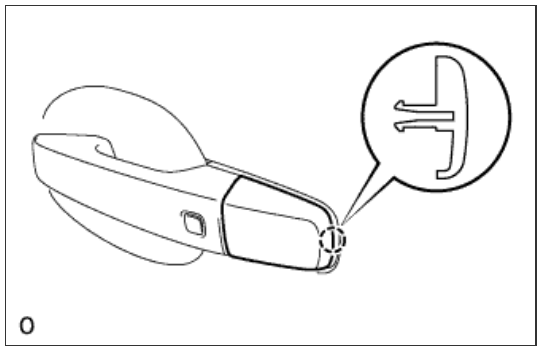


1 . REMOVE REAR DOOR OUTSIDE HANDLE ASSEMBLY LH

a. Using a T30 TORX wrench, loosen the screw.

b. Disconnect the connector.

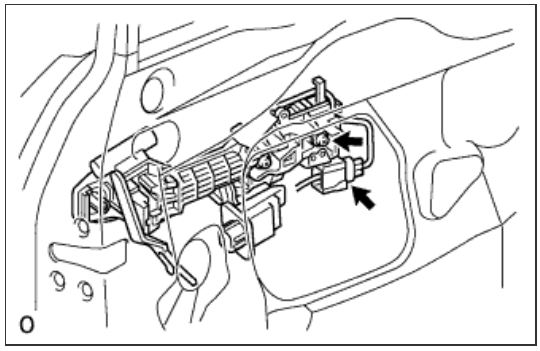

c. Remove the handle by sliding and pulling it in the direction indicated by the arrow in the illustration.

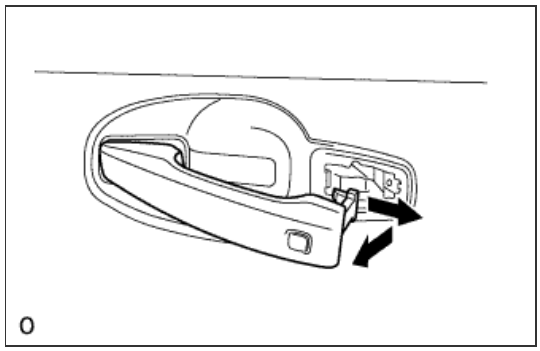

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR DOOR ARMREST BASE PANEL ASSEMBLY LH

a. Using a moulding remover, detach the 7 claws.

b. Disconnect the connector and remove the armrest base panel.

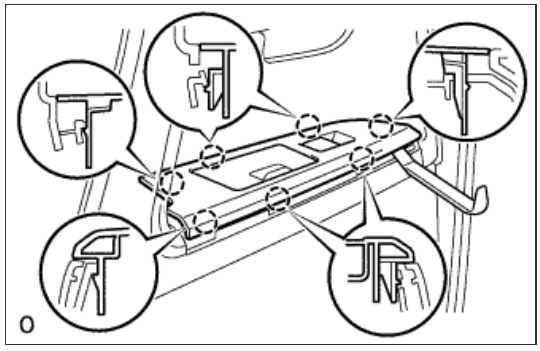

3. REMOVE REAR DOOR INSIDE HANDLE BEZEL LH


a. Using a screwdriver, detach the 4 claws and remove the bezel.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

*1	Protective tape

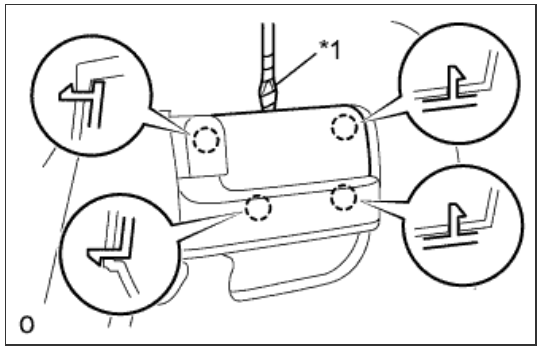

4. REMOVE ASSIST GRIP COVER LH


a. Using a moulding remover, detach the 9 claws and remove the door assist grip cover.

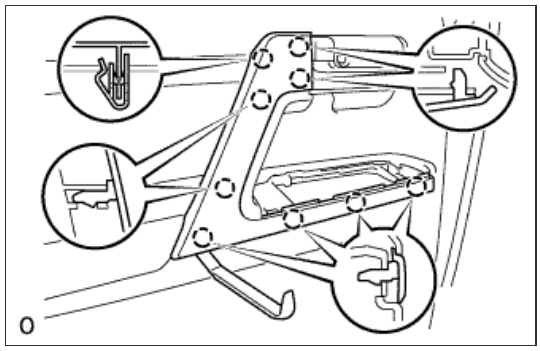

5. REMOVE COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

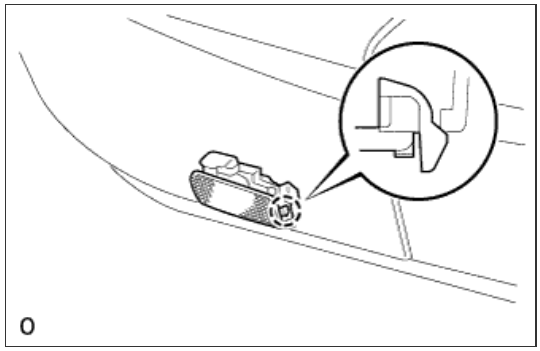


. REMOVE REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 9 clips, 4 claws and trim board.

c. Disconnect the connector and remove the trim board.

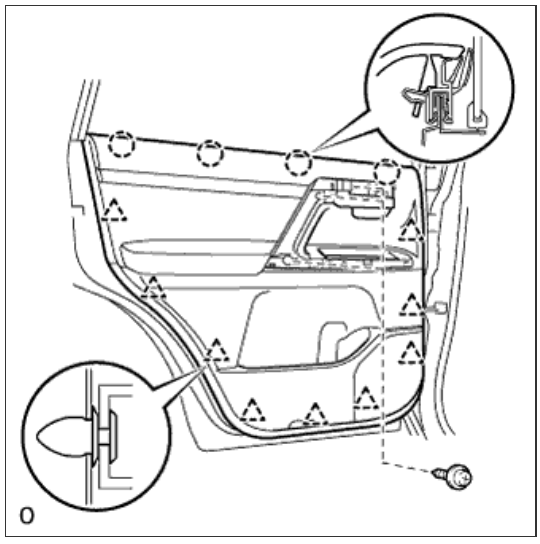

d. Disconnect the 2 cables from the inside handle.

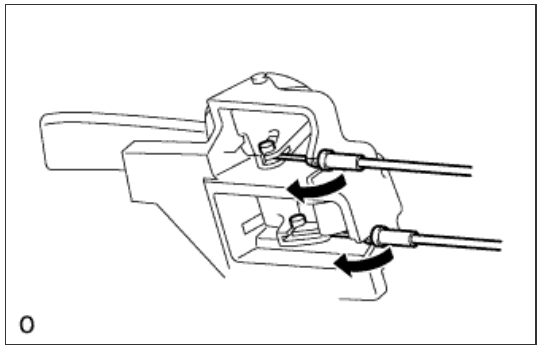

. REMOVE REAR DOOR SERVICE HOLE COVER LH


a. Using a clip remover, detach the 6 clamps.

b. Remove the bolt and disconnect the 2 connectors.

c. Remove the service hole cover.

HINT:

Remove the remaining tape on the door.

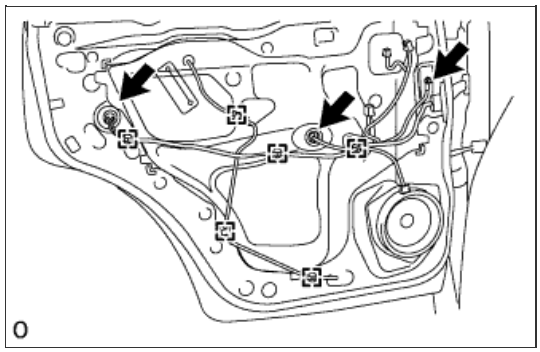


8. REMOVE REAR DOOR LOCK ASSEMBLY LH

a. Using a T30 "TORX" socket, remove the 3 screws and door lock.


NOTICE:

Be careful when removing the screws as the door lock may fall and become damaged.

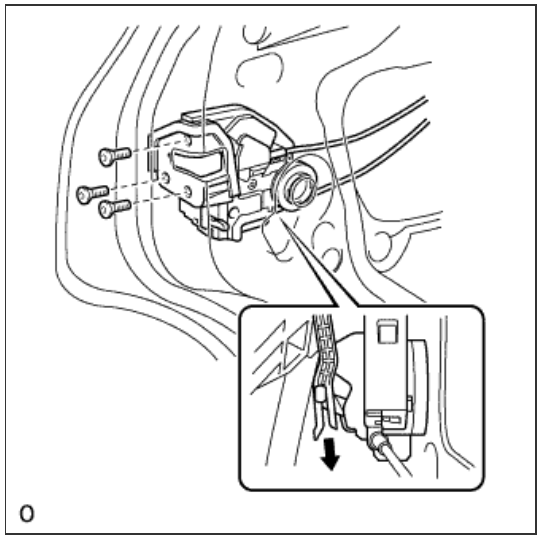


9. REMOVE REAR DOOR OUTSIDE HANDLE COVER LH

a. Using a T30 "TORX" socket, loosen the screw.

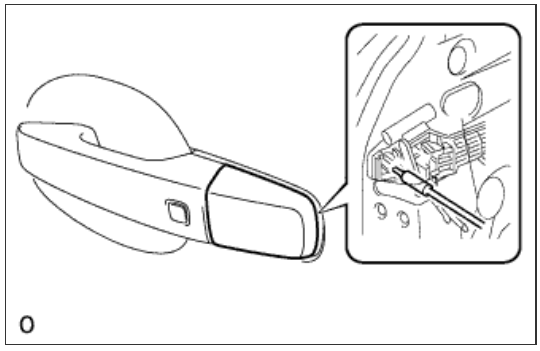


b. Detach the claw and remove the rear door outside handle cover.

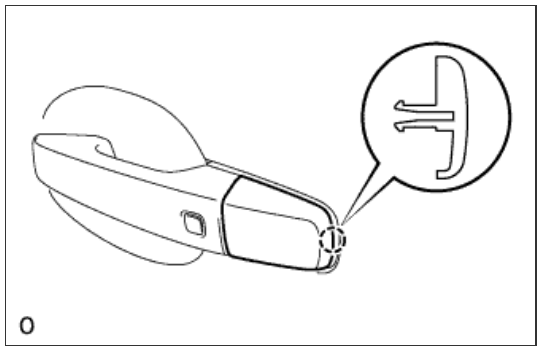


1 . REMOVE REAR DOOR OUTSIDE HANDLE ASSEMBLY LH

a. Using a T30 TORX wrench, loosen the screw.

b. Disconnect the connector.

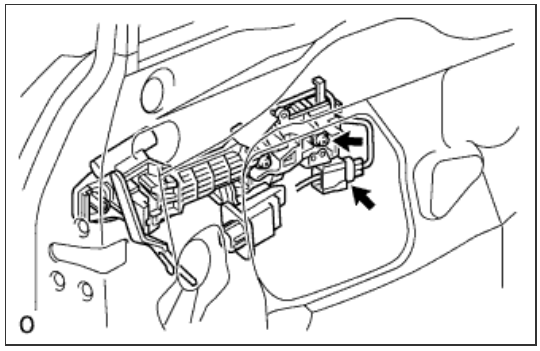

c. Remove the handle by sliding and pulling it in the direction indicated by the arrow in the illustration.

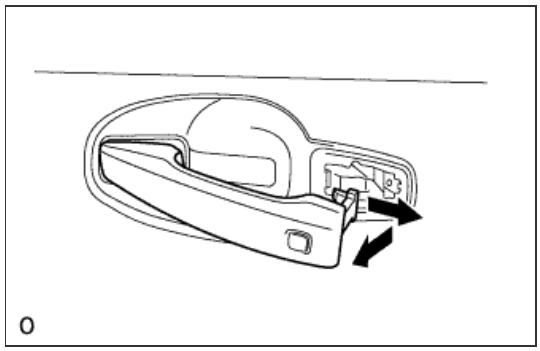

for Preparation Click here

HINT:

- **Use the sa e proce res for the LH si e an RH si e**
- **The proce res liste elow are for the LH si e**

INSPECT ENTRY LOCK AND UNLOCK SWITCH

a Disconnect the connector.


Remove the outside handle.

c Measure the resistance according to the value(s) in the table below.

Stan ar Resistance:

Tester Connection	Switch Condition	Specified Condition
1 (TRG-) - 3 (TRG+)	Lock switch not pushed (OFF)	10 kΩ or higher
1 (TRG-) - 3 (TRG+)	Lock switch pushed (ON)	Below 1 Ω

If the result is not as specified, replace the entry lock and unlock switch.

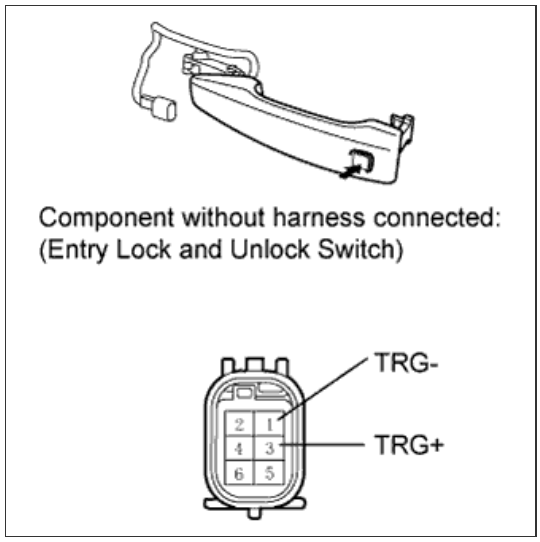

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**


1. INSTALL REAR DOOR OUTSIDE HANDLE ASSEMBLY LH

a. Insert the front end of the rear door outside handle assembly into the rear door outside handle frame.

NOTICE:


If the bellcrank lever is not pulled and held when installing the outside handle, the bellcrank lever will interfere with the outside handle and the release plate may be damaged.

b. Insert the rear end of the rear door outside handle assembly into the rear door outside handle frame. Next, slide the rear door outside handle assembly toward the front of the vehicle to install it.

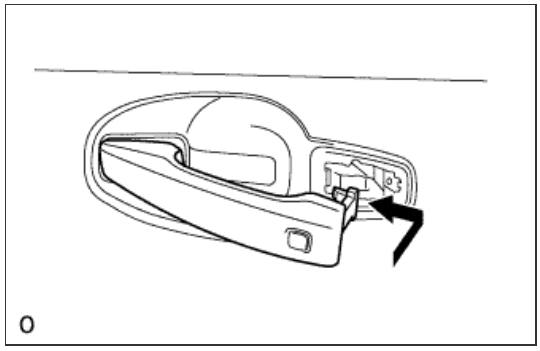


c. Using a T30 "TORX" socket, tighten the screw.

d. Connect the connector.

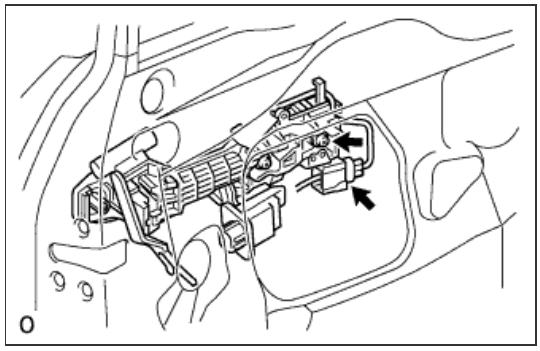


2. INSTALL REAR DOOR OUTSIDE HANDLE COVER LH

a. Attach the claw to install the rear door outside handle cover.

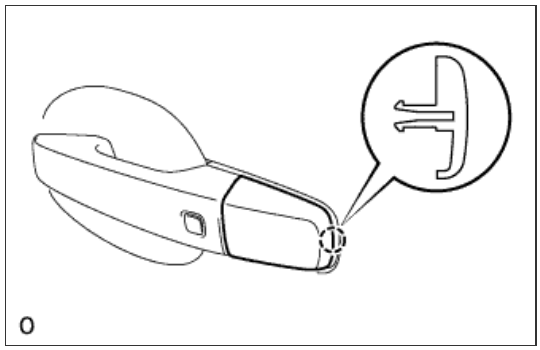

b. Using a T30 "TORX" socket, install the cover with the screw.

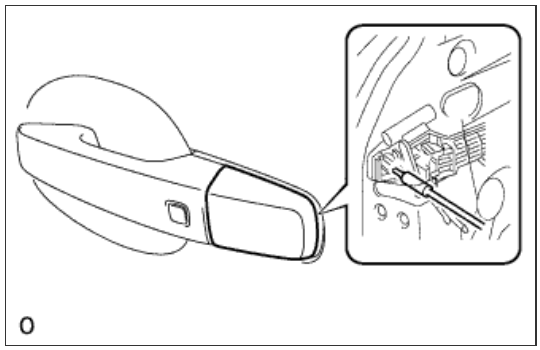

3. INSTALL REAR DOOR LOCK ASSE LY LH


a. Apply MP grease to the sliding parts of the rear door lock assembly.

b. Insert the rear door lock assembly to the rear door outside handle release plate, and set it to the rear door panel.

c. Make sure that the rear door outside handle frame release plate is securely connected to the rear door lock assembly.

d. Using a T30 "TORX" wrench, the 3 screws.

Tor ue:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

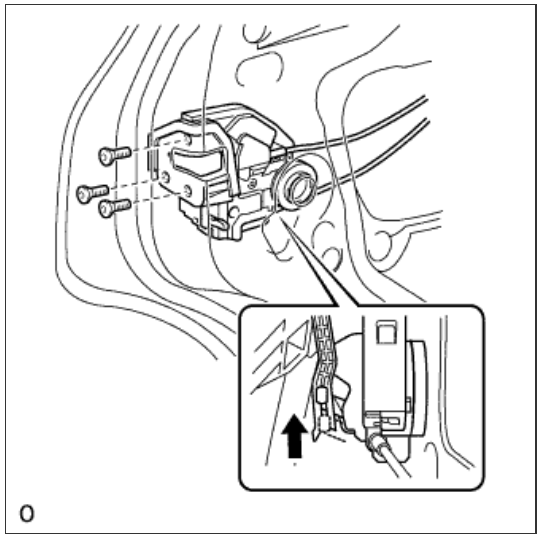


4. INSTALL REAR DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the rear door lock remote control cable and rear door inside locking cable through a new rear door service hole cover.


NOTICE:

- **When installing the service hole cover, pull the links and connectors through the service hole cover.**
- **There should be no wrinkles or folds after attaching the service hole cover.**
- **After attaching the service hole cover, check the sealing quality.**

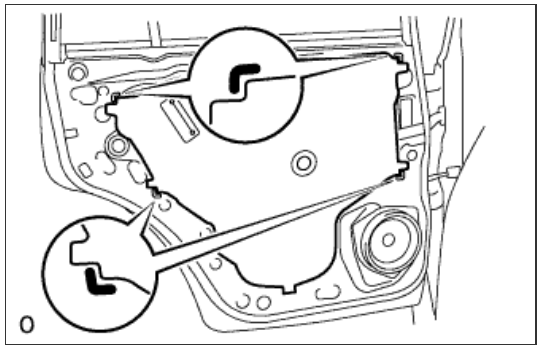


c. Connect the 2 connectors.

d. Attach the 6 clamps.

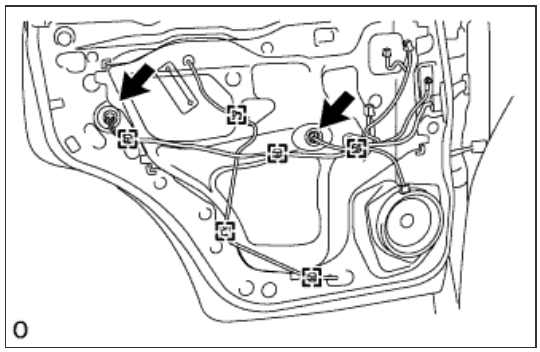

e. Install the bolt as shown in the illustration.


Tor ue:
8.4 N*m{ 86 kgf*cm , 74 in.*lbf }

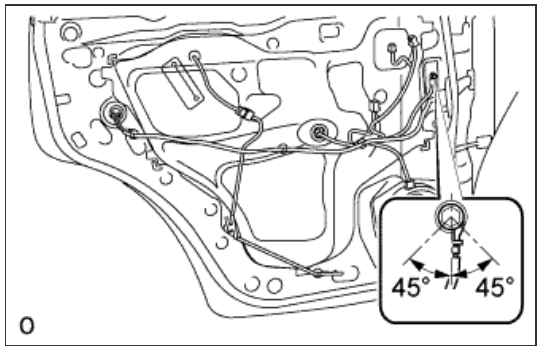

5. INSTALL COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Connect the connector.


b. Attach the claw of the courtesy light to the rear door trim.

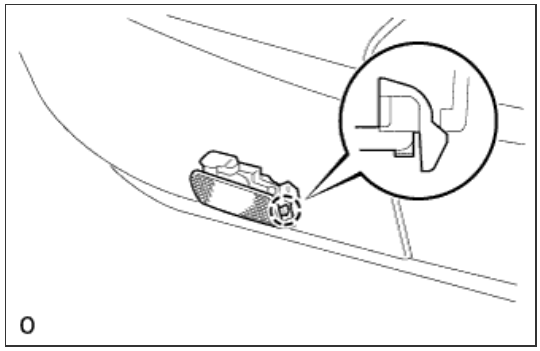

6. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the rear door lock remote control cable and rear door inside locking cable to the rear door inside handle sub-assembly.

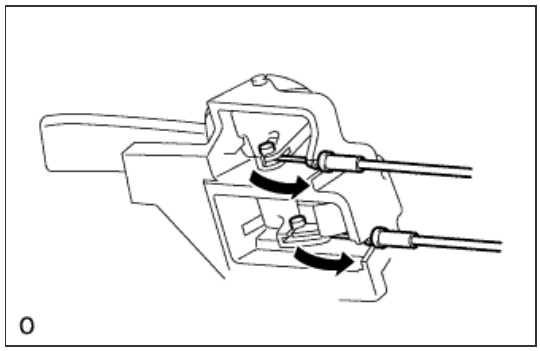


c. Attach the 4 claws and 9 clips to install the rear door trim board sub-assembly.

d. Install the 3 screws.

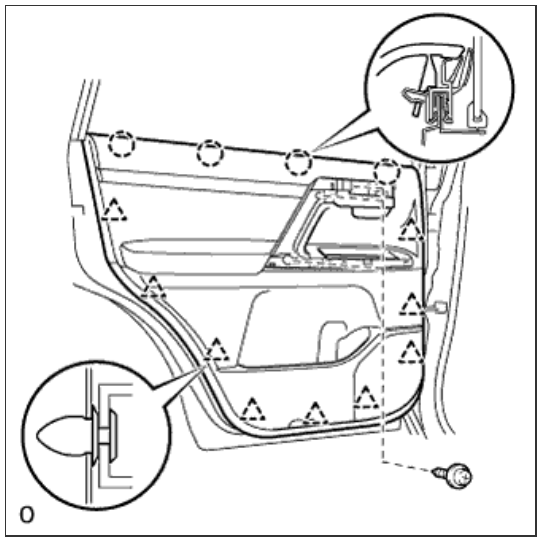


7. INSTALL ASSIST RIP COVER LH

a. Attach the 9 claws to install the door assist grip cover to the door trim panel.

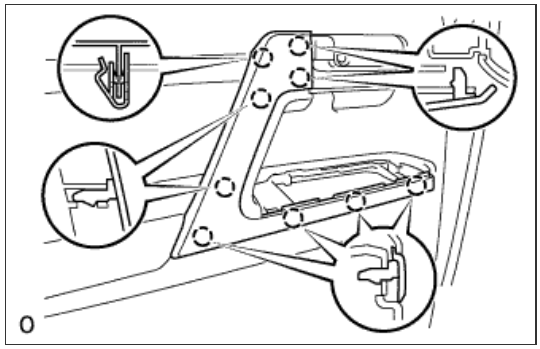

8. INSTALL REAR DOOR INSIDE HANDLE E LEH


a. Attach the 4 claws to install the bezel.

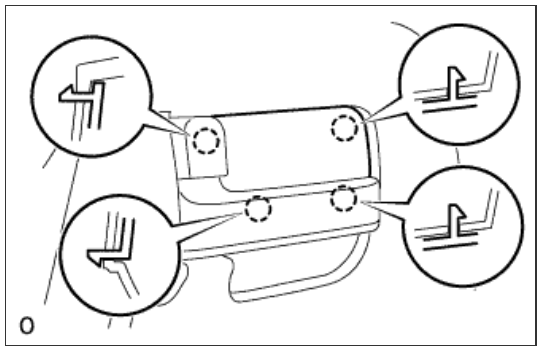

9. INSTALL REAR DOOR AR RST ASE PANEL ASSE LY LH

a. Connect the connector.

b. Attach the 7 claws to install the rear door armrest base panel.

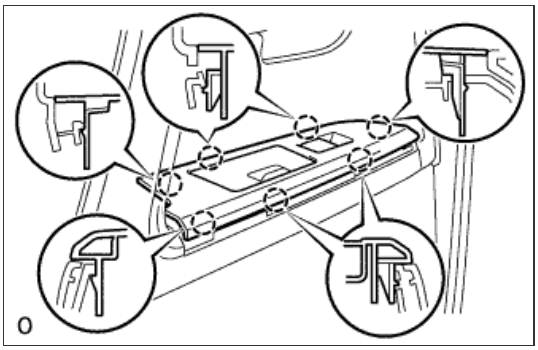

10. CONNECT CA LE TO NE ATIVE ATTERY TER INAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**


1. INSTALL REAR DOOR OUTSIDE HANDLE ASSEMBLY LH

a. Insert the front end of the rear door outside handle assembly into the rear door outside handle frame.

NOTICE:


If the bellcrank lever is not pulled and held when installing the outside handle, the bellcrank lever will interfere with the outside handle and the release plate may be damaged.

b. Insert the rear end of the rear door outside handle assembly into the rear door outside handle frame. Next, slide the rear door outside handle assembly toward the front of the vehicle to install it.

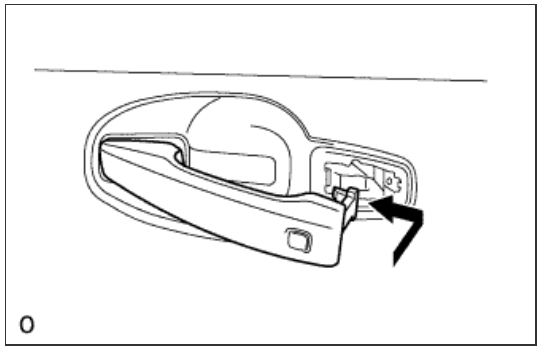


c. Using a T30 "TORX" socket, tighten the screw.

d. Connect the connector.

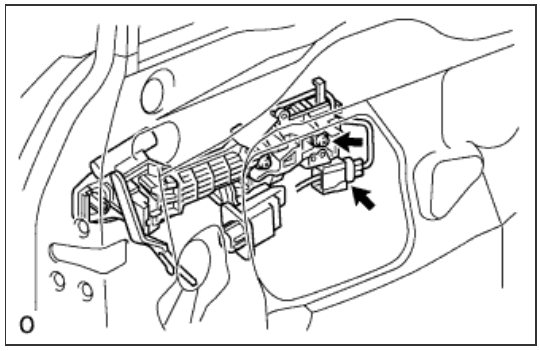


2. INSTALL REAR DOOR OUTSIDE HANDLE COVER LH

a. Attach the claw to install the rear door outside handle cover.

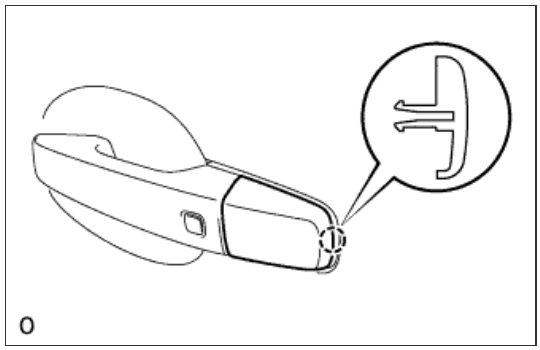

b. Using a T30 "TORX" socket, install the cover with the screw.

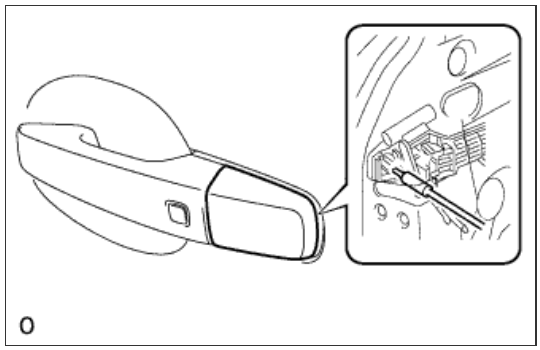

3. INSTALL REAR DOOR LOCK ASSE LY LH


a. Apply MP grease to the sliding parts of the rear door lock assembly.

b. Insert the rear door lock assembly to the rear door outside handle release plate, and set it to the rear door panel.

c. Make sure that the rear door outside handle frame release plate is securely connected to the rear door lock assembly.

d. Using a T30 "TORX" wrench, the 3 screws.

Tor ue:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

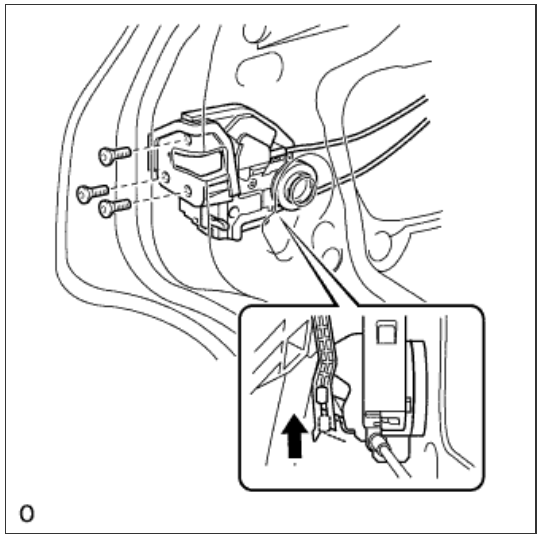


4. INSTALL REAR DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the rear door lock remote control cable and rear door inside locking cable through a new rear door service hole cover.


NOTICE:

- **When installing the service hole cover, pull the links and connectors through the service hole cover.**
- **There should be no wrinkles or folds after attaching the service hole cover.**
- **After attaching the service hole cover, check the sealing quality.**

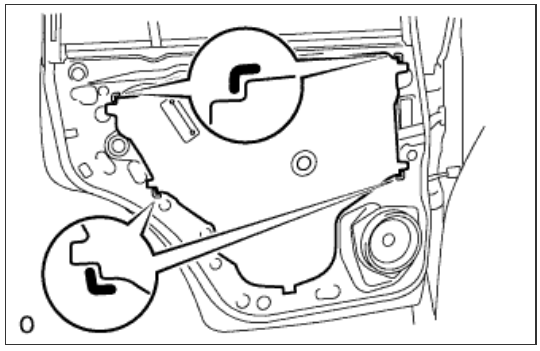


c. Connect the 2 connectors.

d. Attach the 6 clamps.

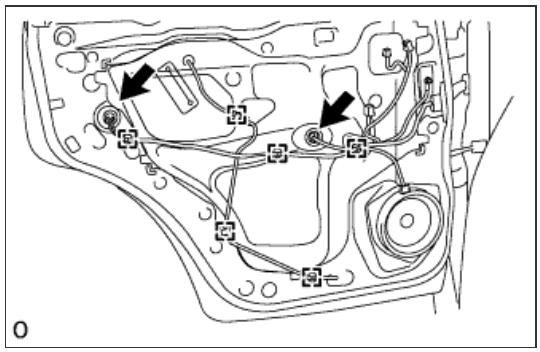

e. Install the bolt as shown in the illustration.


Tor ue:
8.4 N*m{ 86 kgf*cm , 74 in.*lbf }

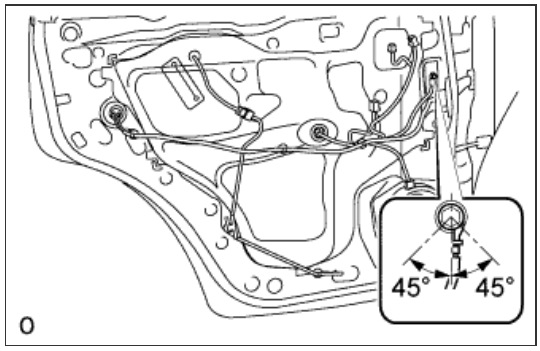

5. INSTALL COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Connect the connector.


b. Attach the claw of the courtesy light to the rear door trim.

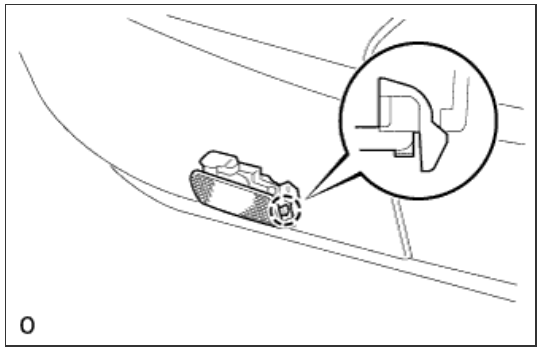

6. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the rear door lock remote control cable and rear door inside locking cable to the rear door inside handle sub-assembly.

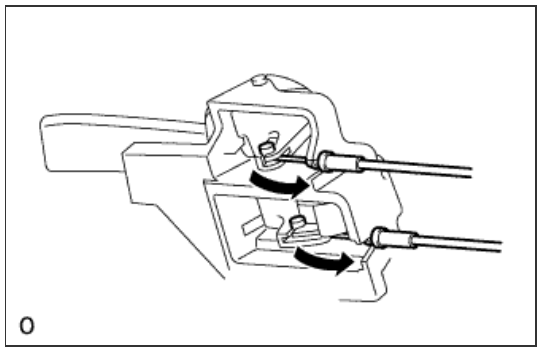


c. Attach the 4 claws and 9 clips to install the rear door trim board sub-assembly.

d. Install the 3 screws.

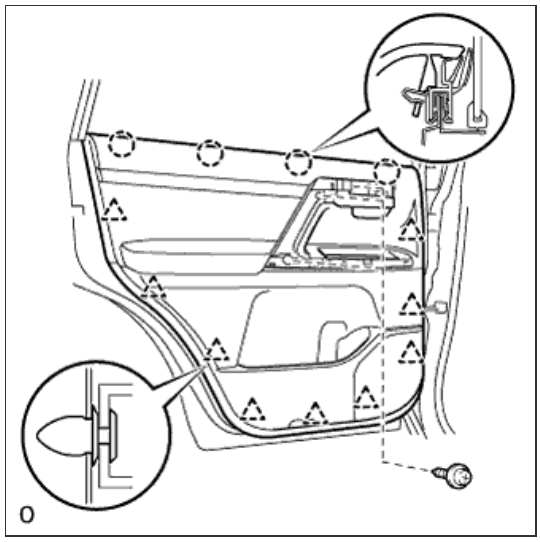


7. INSTALL ASSIST RIP COVER LH

a. Attach the 9 claws to install the door assist grip cover to the door trim panel.

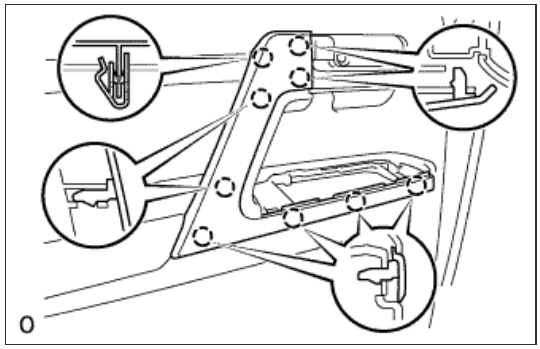

8. INSTALL REAR DOOR INSIDE HANDLE E LEH


a. Attach the 4 claws to install the bezel.

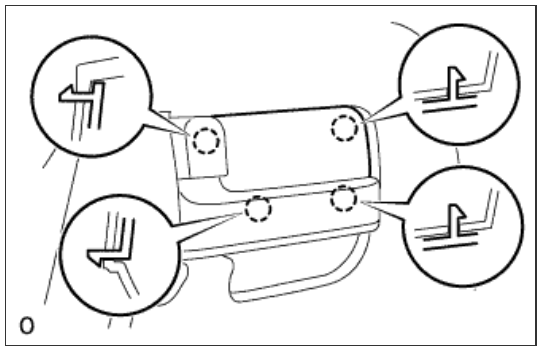

9. INSTALL REAR DOOR AR RST ASE PANEL ASSE LY LH

a. Connect the connector.

b. Attach the 7 claws to install the armrest base panel.

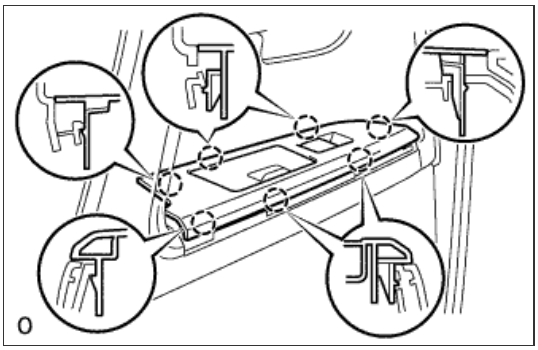

10. CONNECT CA LE TO NE ATIVE ATTERY TER INAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**


1. INSTALL REAR DOOR OUTSIDE HANDLE ASSEMBLY LH

a. Insert the front end of the rear door outside handle assembly into the rear door outside handle frame.

NOTICE:


If the bellcrank lever is not pulled and held when installing the outside handle, the bellcrank lever will interfere with the outside handle and the release plate may be damaged.

b. Insert the rear end of the rear door outside handle assembly into the rear door outside handle frame. Next, slide the rear door outside handle assembly toward the front of the vehicle to install it.

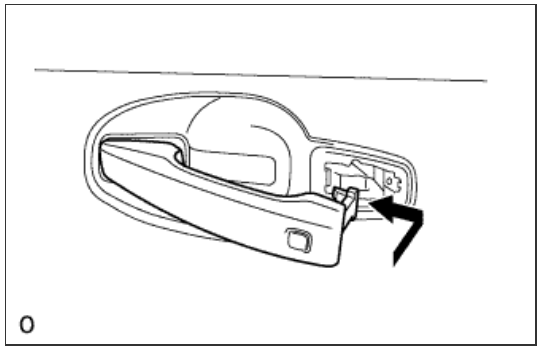


c. Using a T30 "TORX" socket, tighten the screw.

d. Connect the connector.

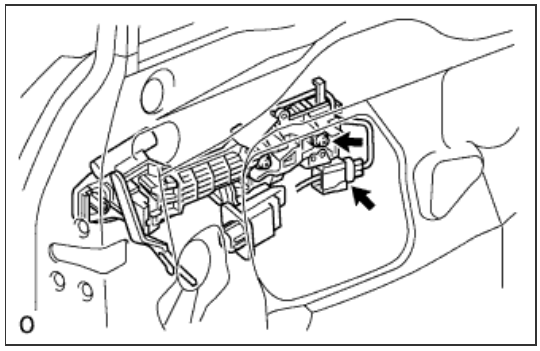


2. INSTALL REAR DOOR OUTSIDE HANDLE COVER LH

a. Attach the claw to install the rear door outside handle cover.

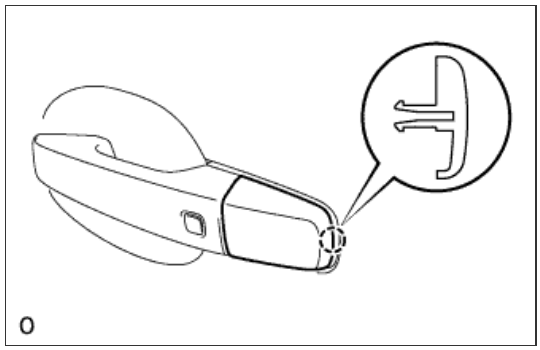

b. Using a T30 "TORX" socket, install the cover with the screw.

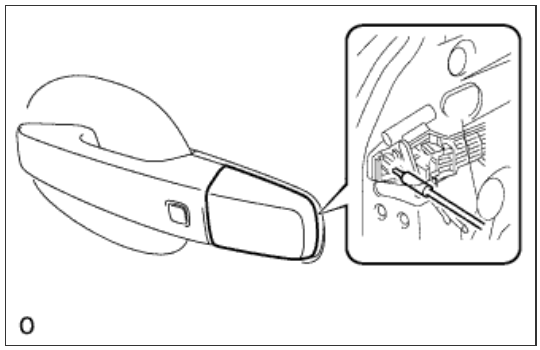

3. INSTALL REAR DOOR LOCK ASSE LY LH


a. Apply MP grease to the sliding parts of the rear door lock assembly.

b. Insert the rear door lock assembly to the rear door outside handle release plate, and set it to the rear door panel.

c. Make sure that the rear door outside handle frame release plate is securely connected to the rear door lock assembly.

d. Using a T30 "TORX" wrench, the 3 screws.

Tor ue:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

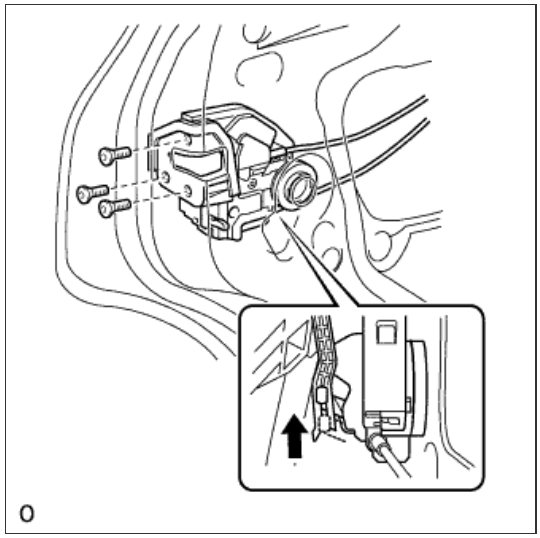


4. INSTALL REAR DOOR SERVICE HOLE COVER LH

a. Apply butyl tape to the door.

b. Pass the rear door lock remote control cable and rear door inside locking cable through a new rear door service hole cover.


NOTICE:

- **When installing the service hole cover, pull the links and connectors through the service hole cover.**
- **There should be no wrinkles or folds after attaching the service hole cover.**
- **After attaching the service hole cover, check the sealing quality.**

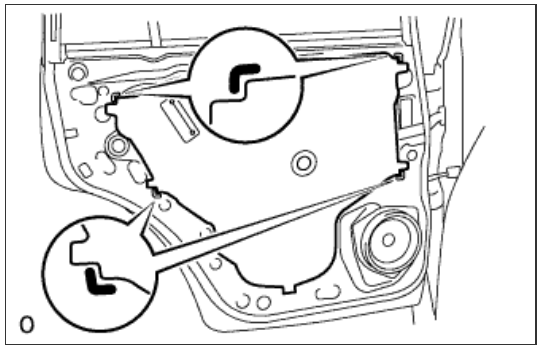


c. Connect the 2 connectors.

d. Attach the 6 clamps.

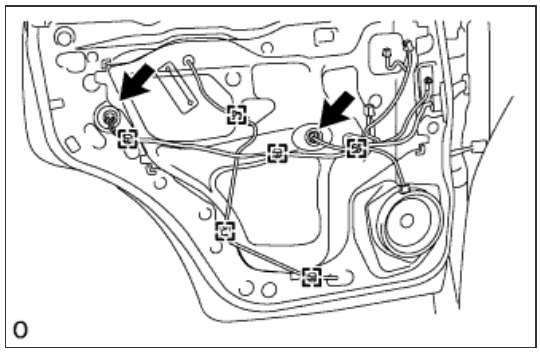

e. Install the bolt as shown in the illustration.


Tor ue:
8.4 N*m{ 86 kgf*cm , 74 in.*lbf }

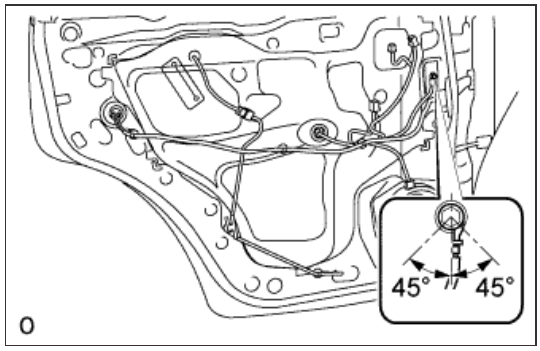

5. INSTALL COURTESY LIGHT ASSEMBLY (w/ Courtesy Light)

a. Connect the connector.


b. Attach the claw of the courtesy light to the rear door trim.

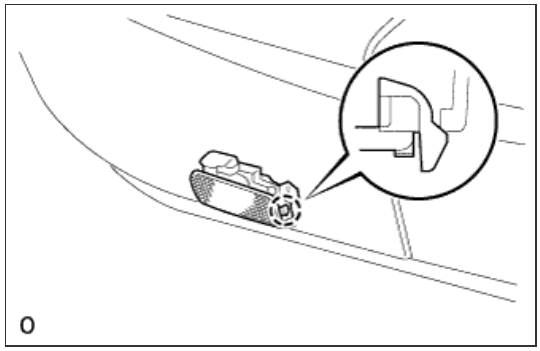

6. INSTALL REAR DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the rear door lock remote control cable and rear door inside locking cable to the rear door inside handle sub-assembly.

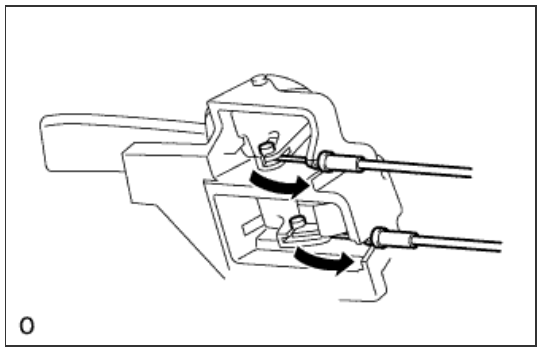


c. Attach the 4 claws and 9 clips to install the rear door trim board sub-assembly.

d. Install the 3 screws.

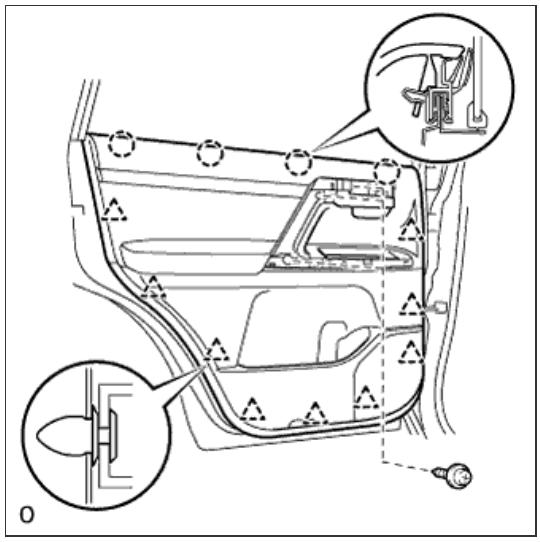


7. INSTALL ASSIST RIP COVER LH

a. Attach the 9 claws to install the door assist grip cover to the door trim panel.

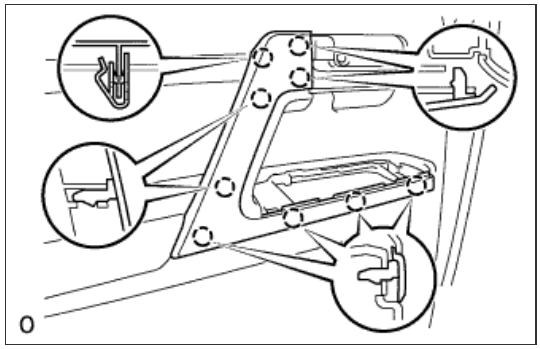

8. INSTALL REAR DOOR INSIDE HANDLE E LEH


a. Attach the 4 claws to install the bezel.

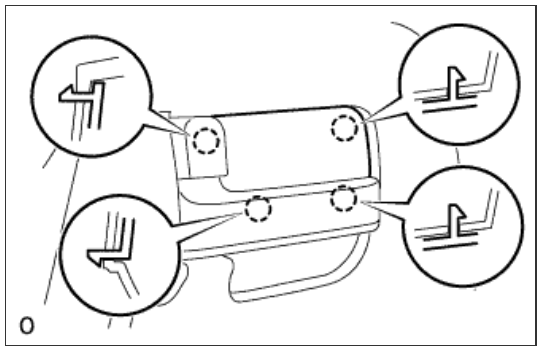

9. INSTALL REAR DOOR AR RST ASE PANEL ASSE LY LH

a. Connect the connector.

b. Attach the 7 claws to install the armrest base panel.

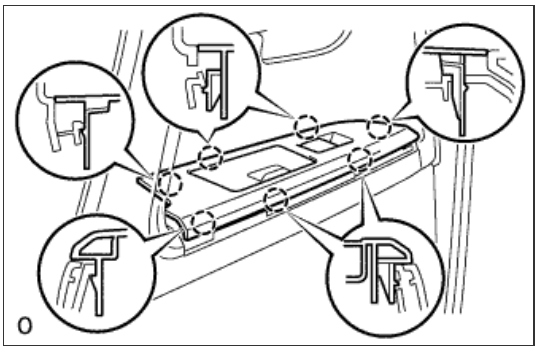



10. CONNECT CA LE TO NE ATIVE ATTERY TER INAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

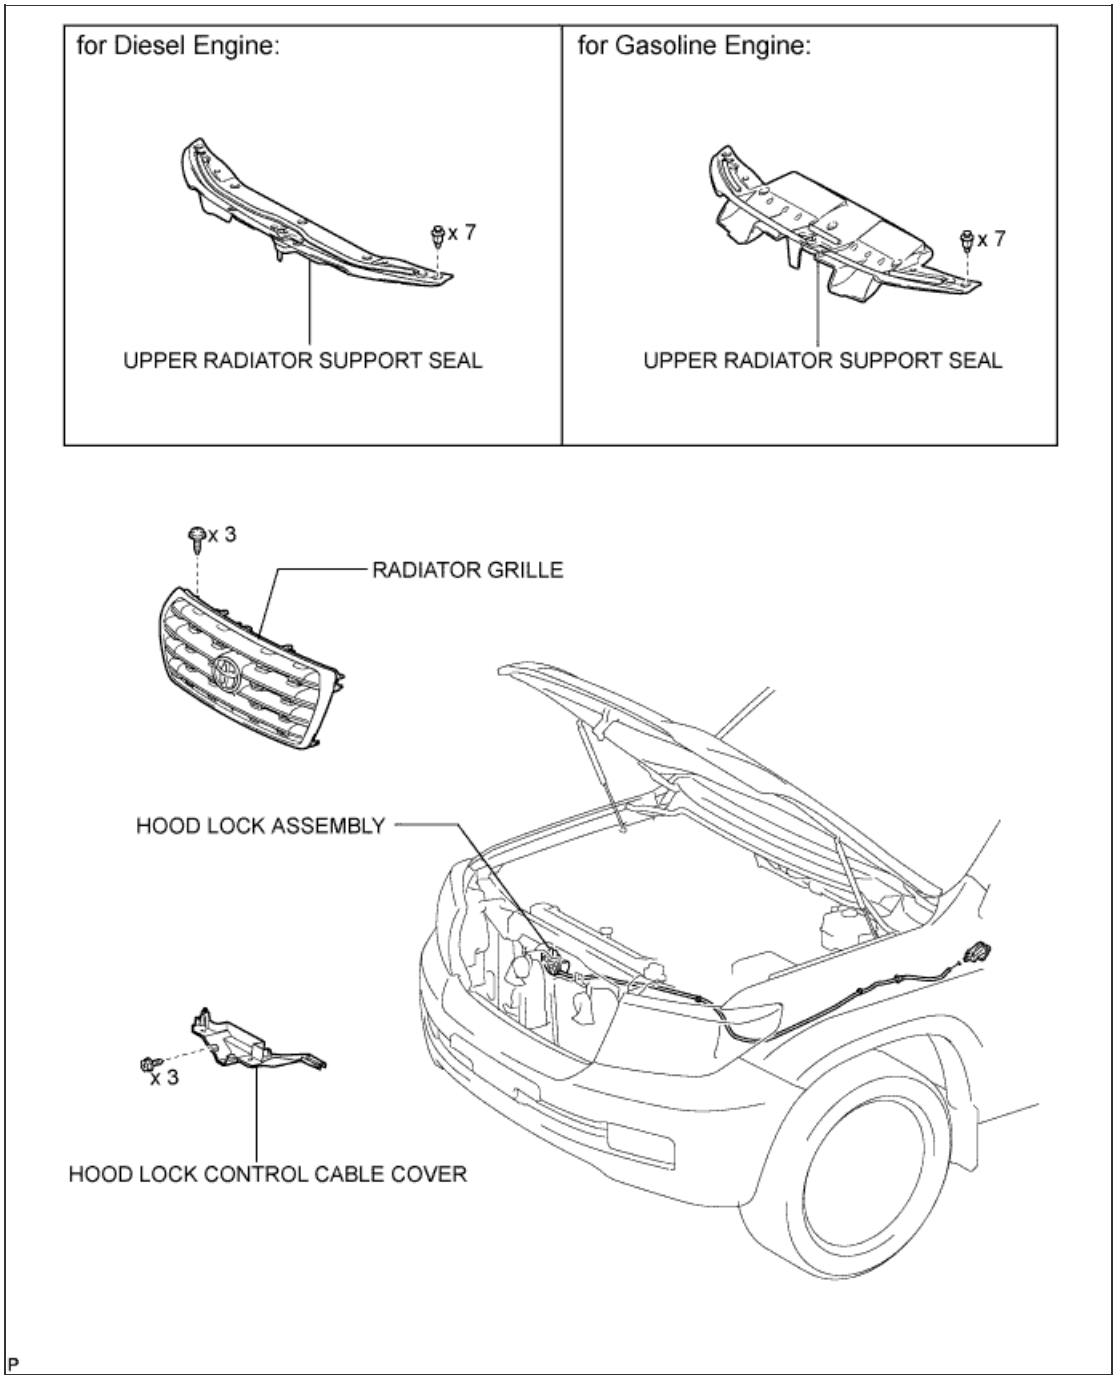

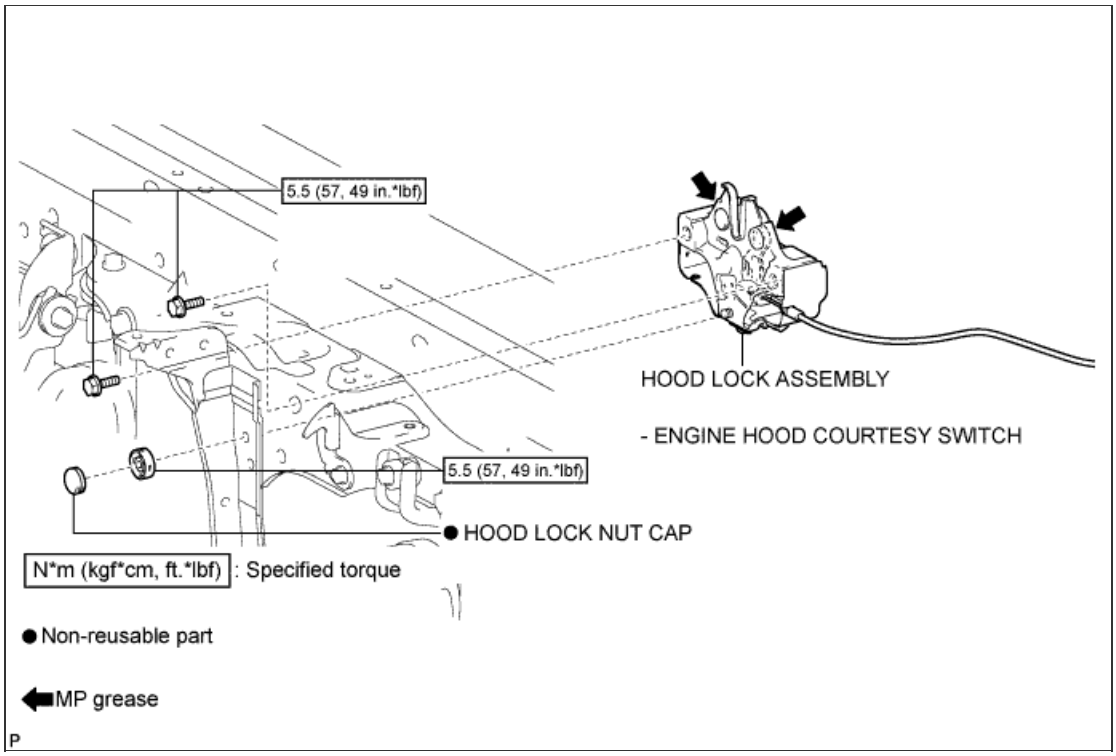
5.5 (57, 49 in.*lbf)
HOOD LOCK ASSEMBLY
- ENGINE HOOD COURTESY SWITCH
5.5 (57, 49 in.*lbf)
● HOOD LOCK NUT CAP
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
MP grease
P

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE UPPER RADIATOR SUPPORT SEAL

a. for Gasoline Engine:
Remove the upper radiator support seal (Click here).


b. for Diesel Engine:
Remove the upper radiator support seal (Click here).

2. REMOVE RADIATOR GRILLE ASSEMBLY

a. Put protective tape around the radiator grille.

b. Remove the 3 screws.


c. Detach the 2 clips and 8 claws, and remove the radiator grille.

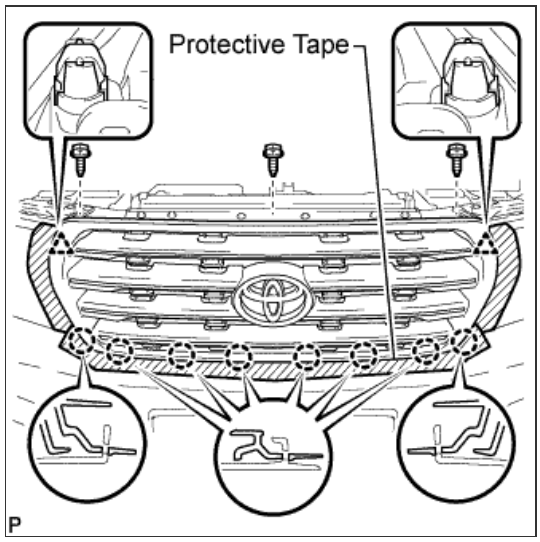

3. REMOVE HOOD LOC CONTROL CABLE COVER

a. Remove the 3 screws.

b. Detach the claw and remove the cover.

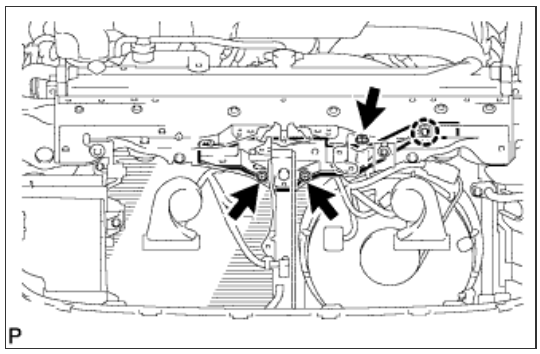


4. REMOVE HOOD LOC ASSEMBLY


a. Remove the hood lock nut cap.

b. Remove the 2 bolts and nut.

c. Disconnect the connector.

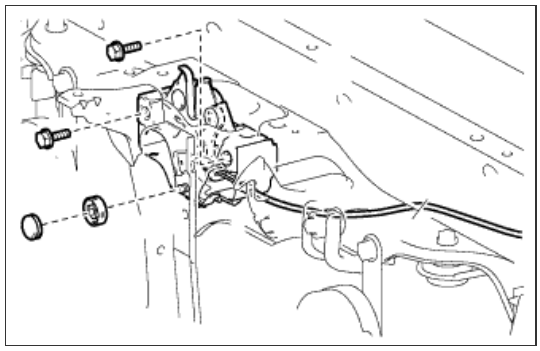

d. Disconnect the hood lock control cable and remove the hood lock.

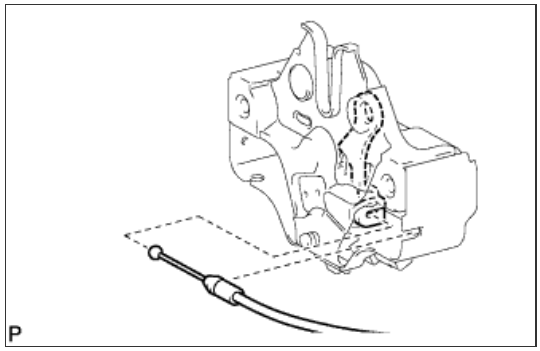

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE UPPER RADIATOR SUPPORT SEAL

a. for Gasoline Engine:
Remove the upper radiator support seal (Click here).


b. for Diesel Engine:
Remove the upper radiator support seal (Click here).

2. REMOVE RADIATOR GRILLE ASSEMBLY

a. Put protective tape around the radiator grille.

b. Remove the 3 screws.


c. Detach the 2 clips and 8 claws, and remove the radiator grille.

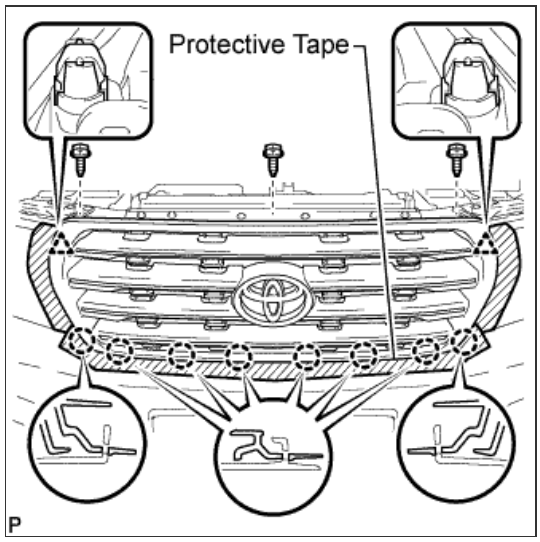

3. REMOVE HOOD LOC CONTROL CABLE COVER

a. Remove the 3 screws.

b. Detach the claw and remove the cover.

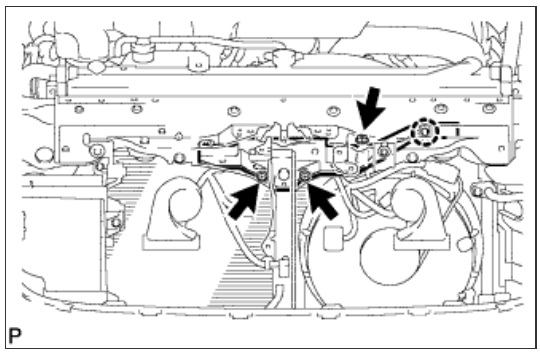


4. REMOVE HOOD LOC ASSEMBLY


a. Remove the hood lock nut cap.

b. Remove the 2 bolts and nut.

c. Disconnect the connector.

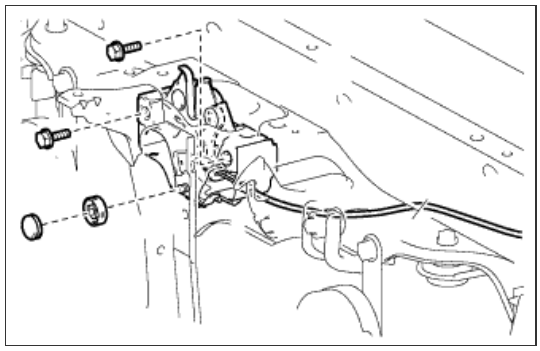


d. Disconnect the hood lock control cable and remove the hood lock.

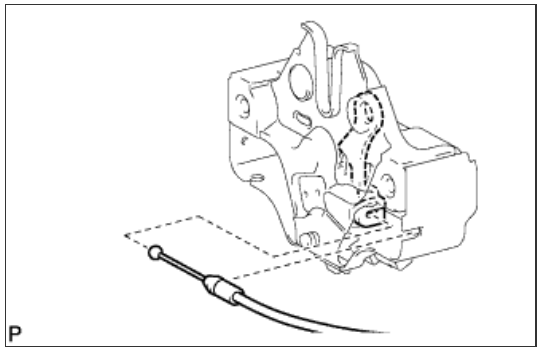

for Preparation Click here

1. INSPECT HOOD LOCK ASSEMBLY (ENGINE HOOD COURTESY SWITCH)

a. for Engine Hood Courtesy Switch Connector 2 Pin Type (for LHD Vehicle):

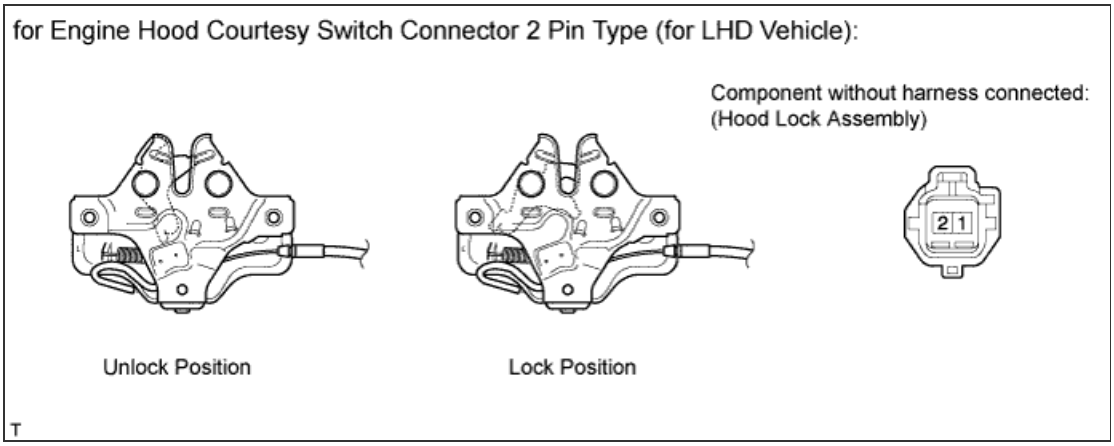


i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	Unlock	10 kΩ or higher
1 - 2	Lock	Below 1 Ω

If the result is not as specified, replace the hood lock assembly.

b. for Engine Hood Courtesy Switch Connector 2 Pin Type (for RHD Vehicle):

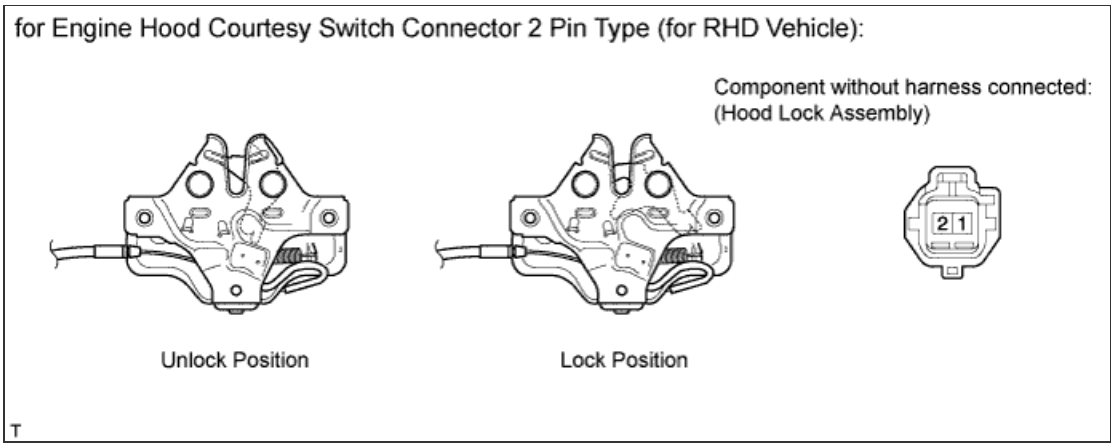

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition

1 - 2	Unlock	10 kΩ or higher
1 - 2	Lock	Below 1 Ω

If the result is not as specified, replace the hood lock assembly.

c. for Engine Hood Courtesy Switch Connector 4 Pin Type:

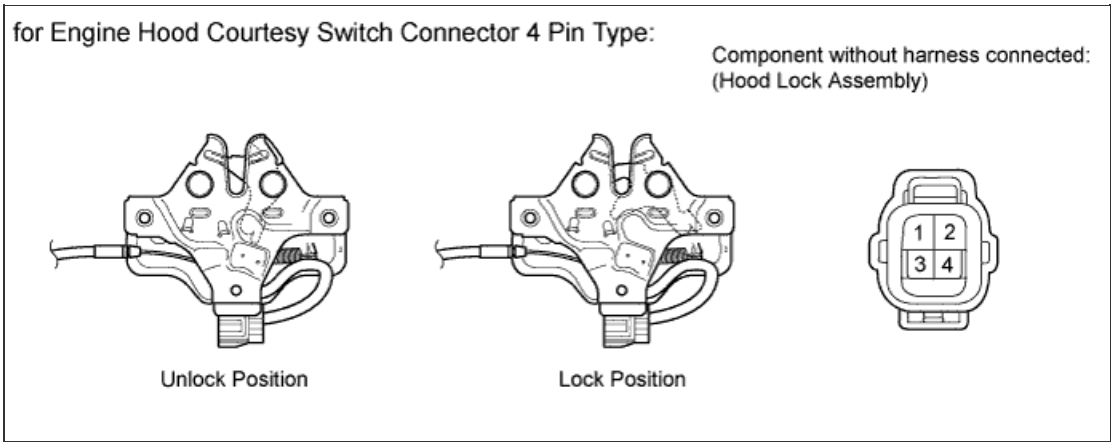

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 3	Always	Below 1 Ω
2 - 4	Unlock	10 kΩ or higher
2 - 4	Lock	Below 1 Ω

If the result is not as specified, replace the hood lock assembly.


for Preparation Click here

HINT:


- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL HOOD LOCK ASSEMBLY

a. Apply MP grease to the sliding areas of the lock.

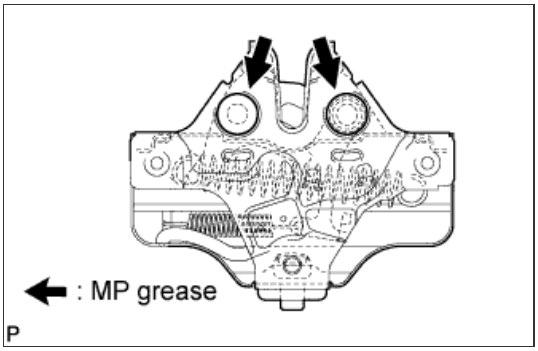

b. Connect the hood lock control cable.

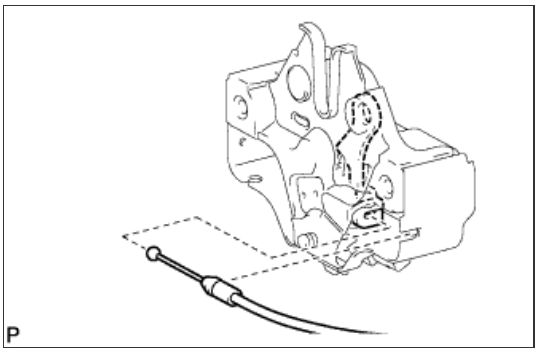


c. Connect the connector.

d. Install the hood lock with the 2 bolts and nut.

Torque:
5.5 N*m{ 57 kgf*cm , 49 in.*lbf }


e. Install a new hood lock nut cap.

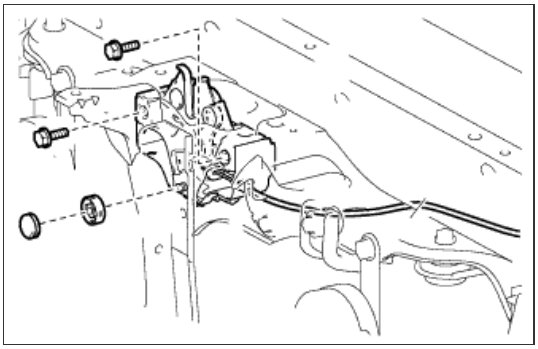

2. INSTALL HOOD LOCK CONTROL CABLE COVER

a. Attach the claw to install the cover.


b. Install the 3 screws.

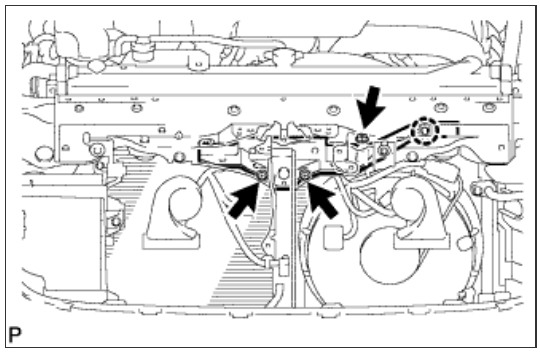

. INSTALL RADIATOR GRILLE

a. Attach the 2 clips and 8 claws to install the radiator grille.

b. Install the 3 screws.

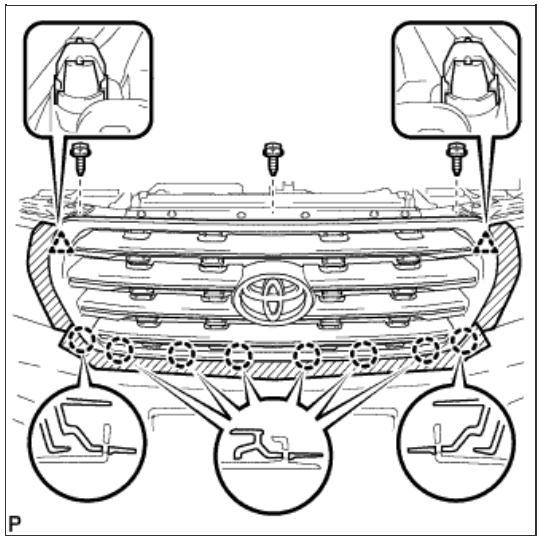

4. INSTALL UPPER RADIATOR SUPPORT SEAL

a. for Gasoline Engine:
Install the upper radiator support seal (Click here).

b. for Diesel Engine:
Install the upper radiator support seal (Click here).


for Preparation Click here

HINT:


- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL HOOD LOCK ASSEMBLY

a. Apply MP grease to the sliding areas of the lock.

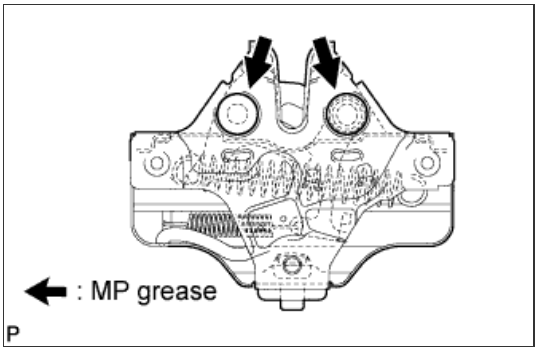

b. Connect the hood lock control cable.

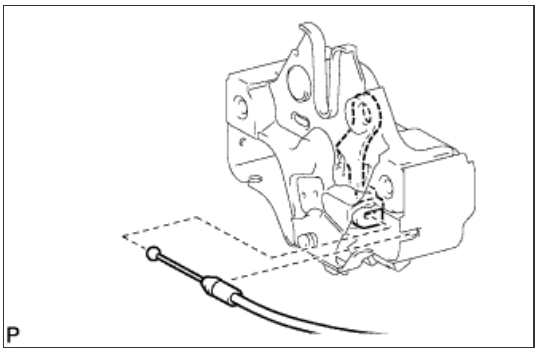


c. Connect the connector.

d. Install the hood lock with the 2 bolts and nut.

Torque:
5.5 N*m{ 57 kgf*cm , 49 in.*lbf }


e. Install a new hood lock nut cap.

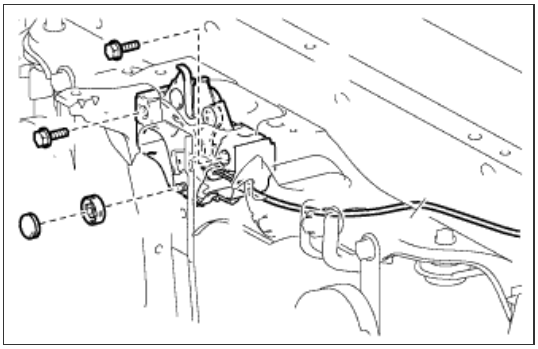

2. INSTALL HOOD LOCK CONTROL CABLE COVER


a. Attach the claw to install the cover.

b. Install the 3 screws.

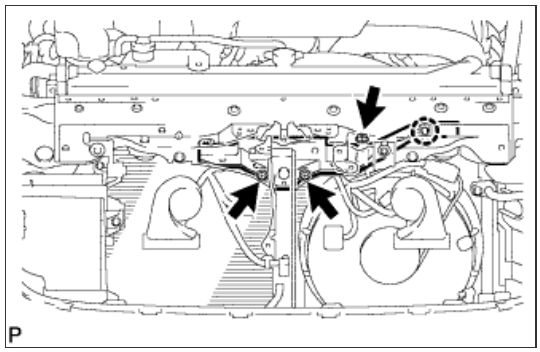

. INSTALL RADIATOR GRILLE

a. Install the radiator support seal with the 7 clips.

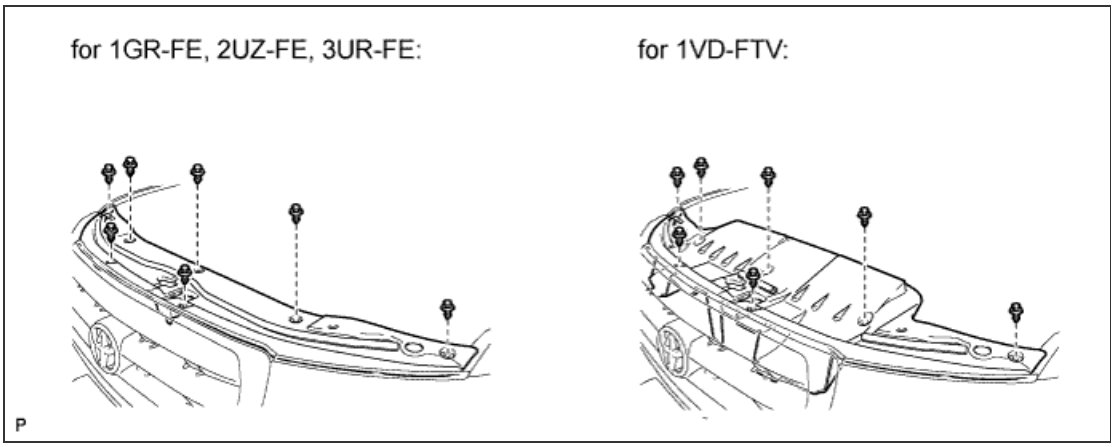


4. INSTALL UPPER RADIATOR SUPPORT SEAL

a. for Gasoline Engine:
Install the upper radiator support seal (Click here).

b. for Diesel Engine:
Install the upper radiator support seal (Click here).

for Preparation Click here

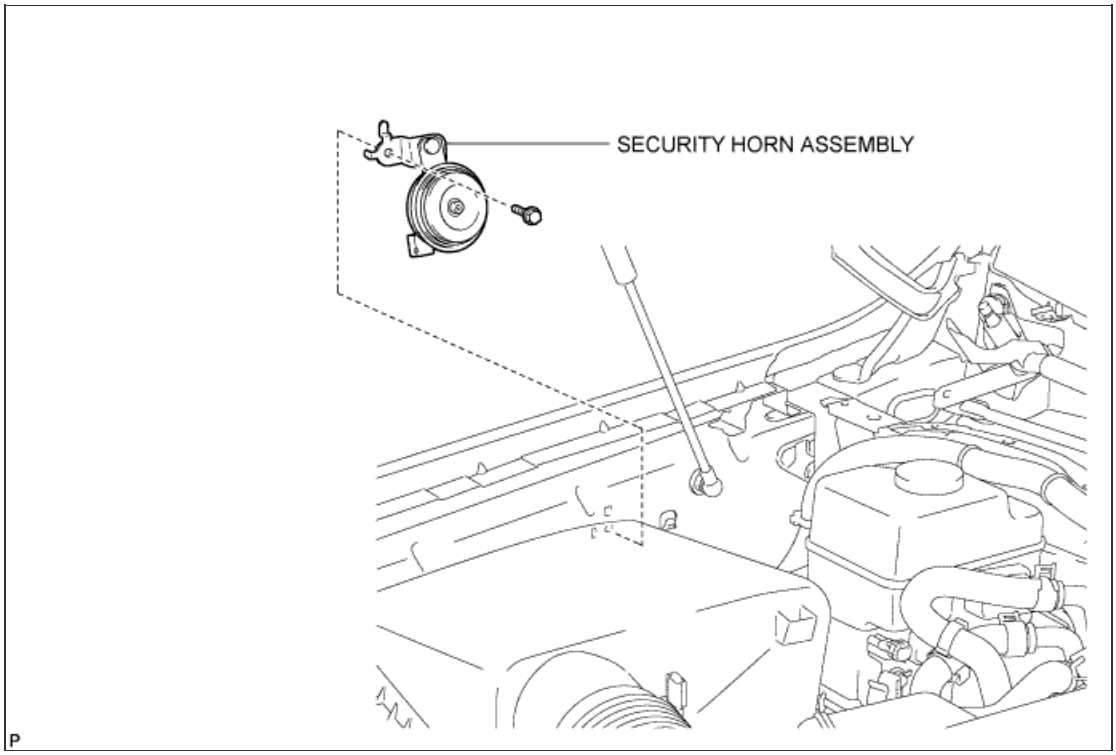


for Preparation Click here

1. REMOVE SECURITY HORN ASSEMBLY

a. Disconnect the connector.


b. Remove the bolt and horn.

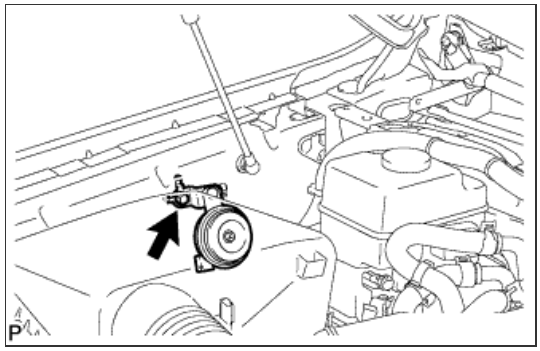

for Preparation Click here

1. INSPECT SECURITY HORN ASSEMBLY

a. Apply battery voltage to the horn connector and check the operation of the horn.

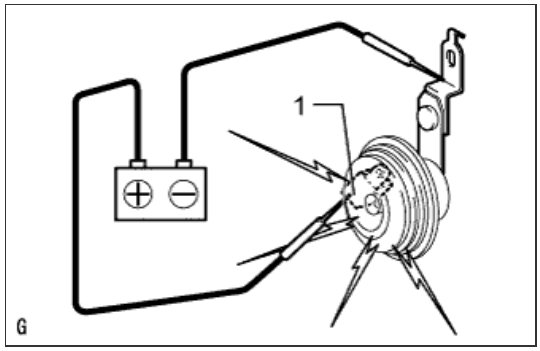

OK:

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1 Battery negative (-) → Horn bracket	Horn sounds

If the result is not as specified, replace the security horn assembly.

for Preparation Click here


HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).


1. INSTALL SECURITY HORN ASSEMBLY

a. Install the horn with the bolt.

b. Connect the connector.

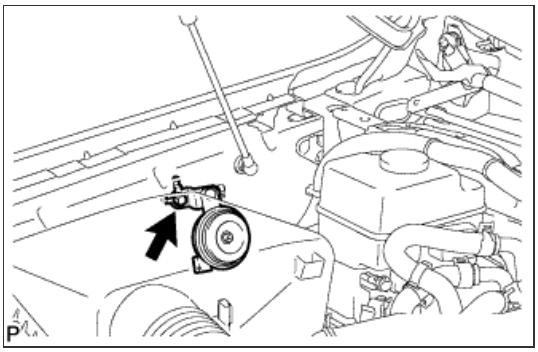



for Preparation Click here

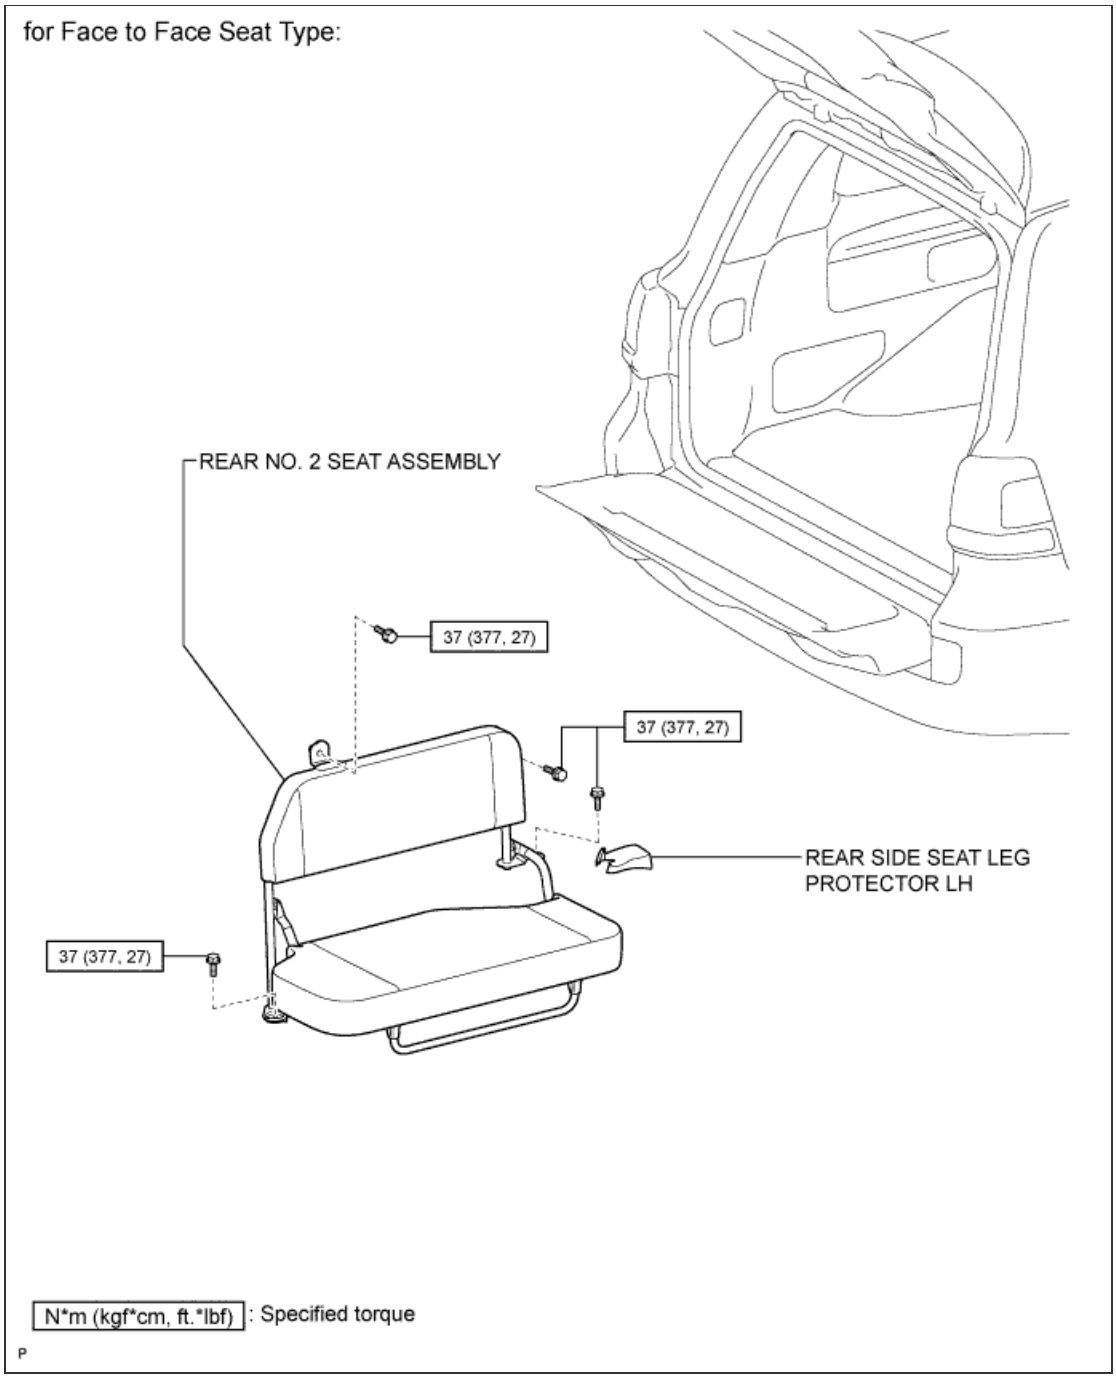

except Face to Face Seat Type:

LH Side:

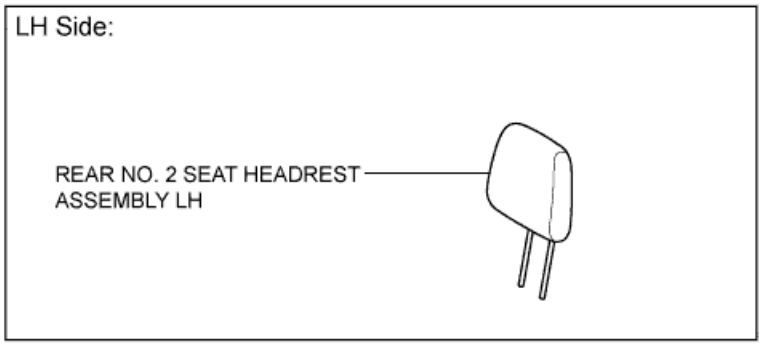


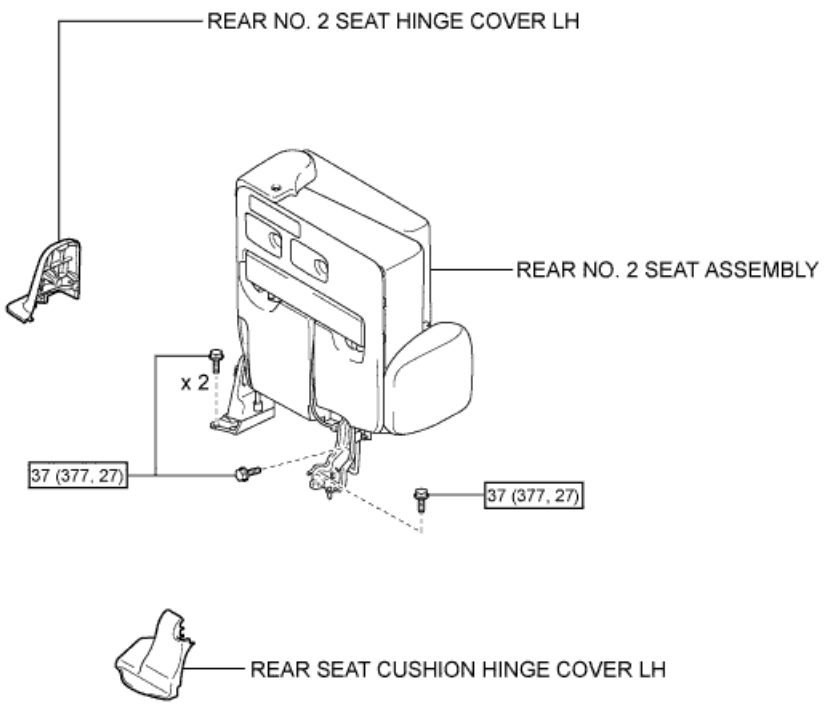

N*m (kgf*cm, ft.*lbf) : Specified torque

P


w/ Tonneau Cover:

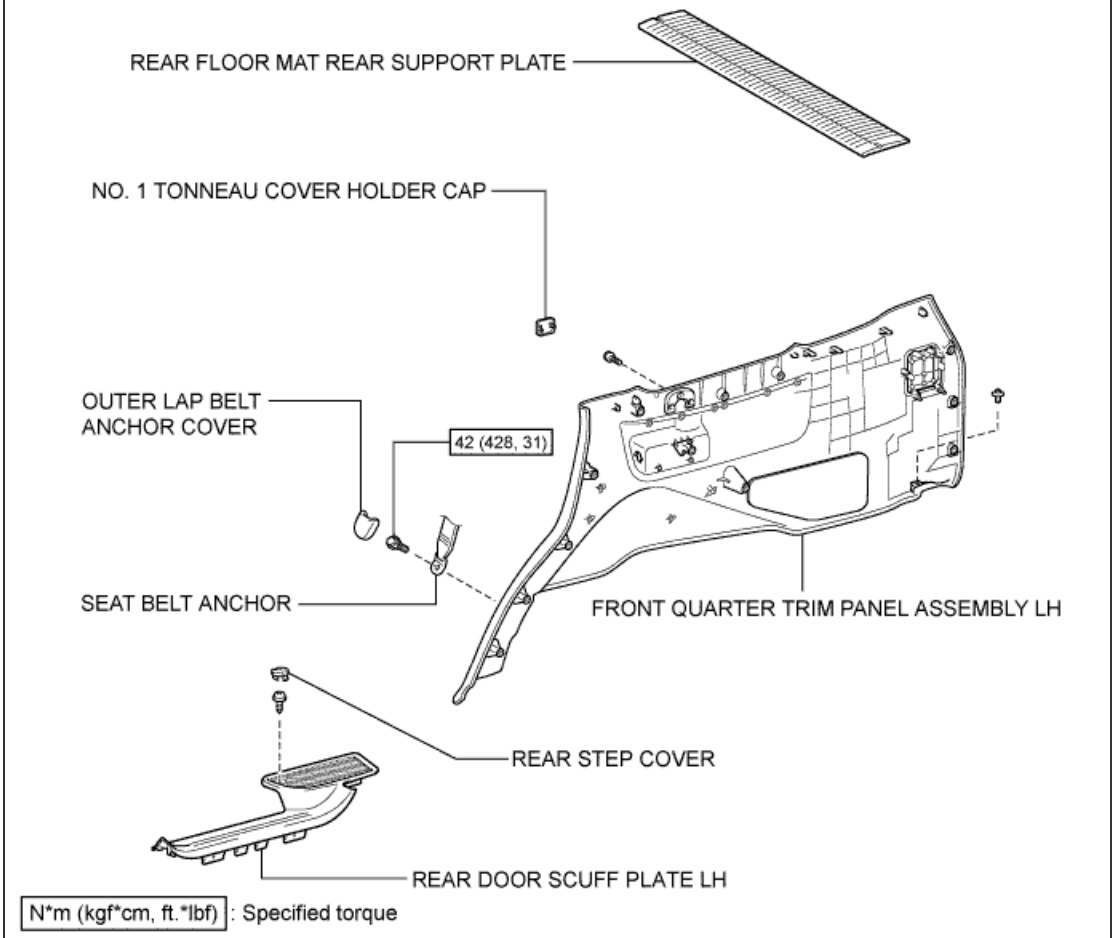

N*m (kgf*cm, ft.*lbf) : Specified torque

T


w/o Rear No. 2 Seat:

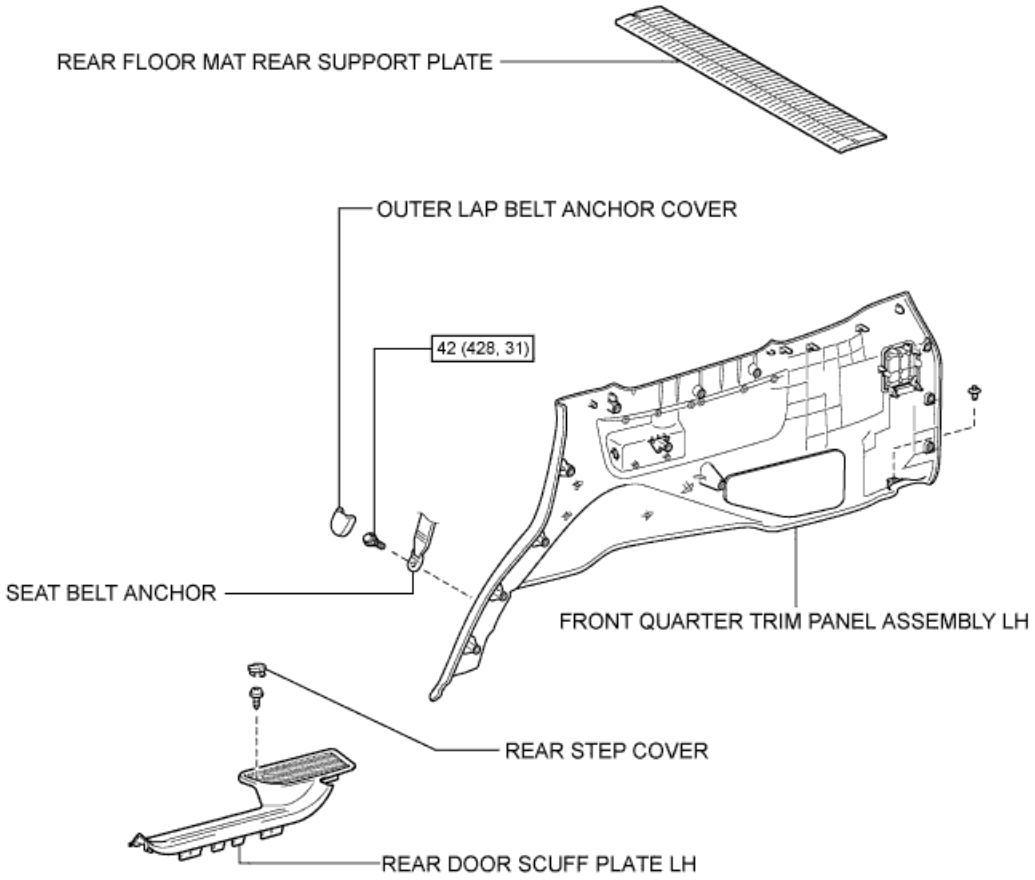

N*m (kgf*cm, ft.*lbf) : Specified torque


T

w/ Rear No. 2 Seat:

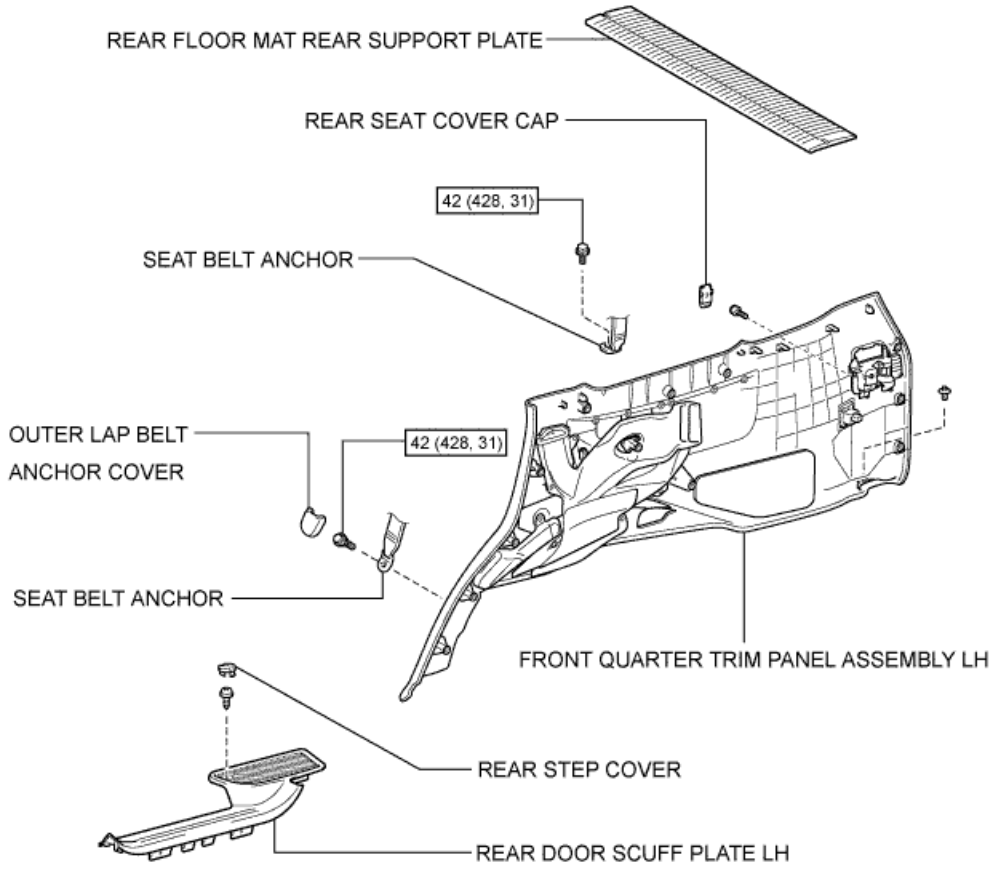

N*m (kgf*cm, ft.*lbf) : Specified torque

T

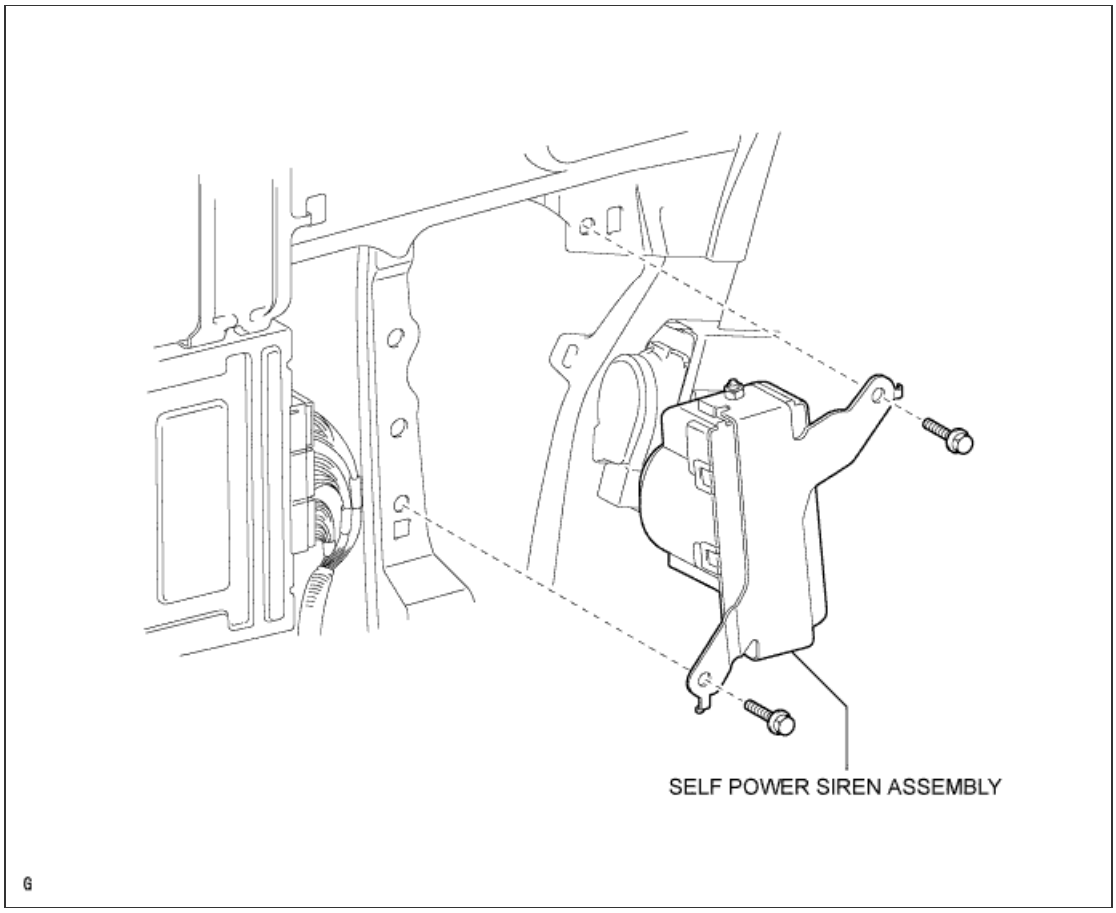
SELF POWER SIREN ASSEMBLY
G


for Preparation Click here

1. REMOVE REAR SIDE SEAT LEG PROTECTOR LH (for Face to Face Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the protector.


HINT:

Tape the screwdriver tip before use.

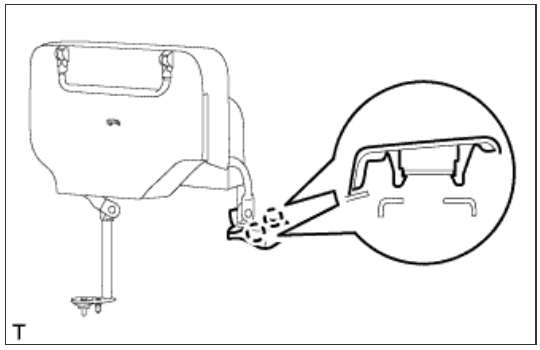

2. REMOVE REAR NO. 2 SEAT ASSEMBLY (for Face to Face Seat Type)


a. Remove the 4 bolts and rear No. 2 seat.

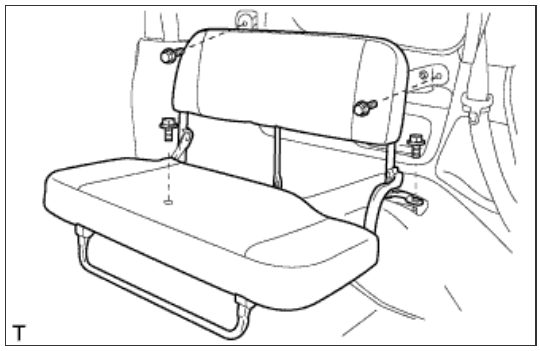


3. REMOVE REAR NO. 2 SEAT HEADREST ASSEMBLY LH (except Face to Face Seat Type)

4. REMOVE REAR SEAT CUSHION HINGE COVER LH (except Face to Face Seat Type)


a. Operate the rear seat headrest handle and lower the headrest.

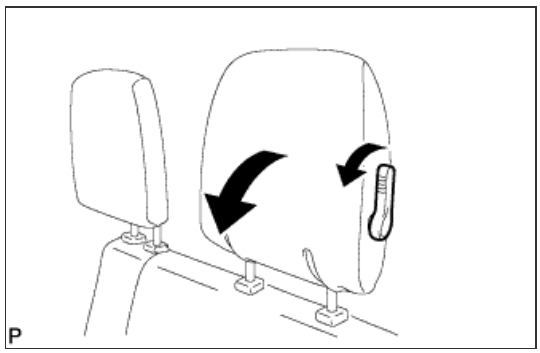

b. Operate the reclining adjuster release handle and fold down the seat.

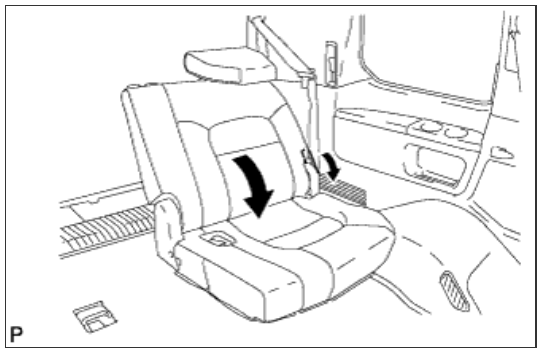


c. Operate the seat cushion lock release lever and move the seat to the storage position.

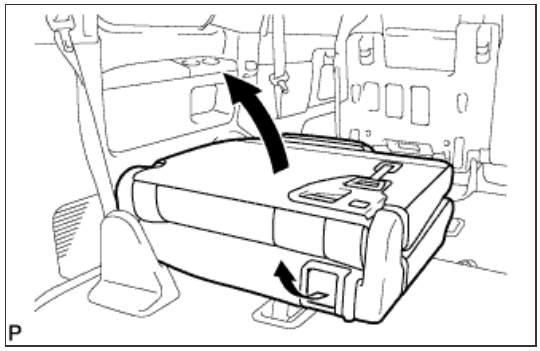

d. Using a screwdriver, detach the 3 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

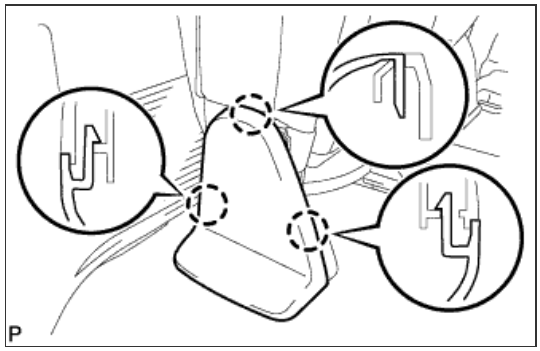

5. REMOVE REAR NO. 2 SEAT HINGE COVER LH (except Face to Face Seat Type)

a. Detach the 2 claws and clip, and then remove the cover.

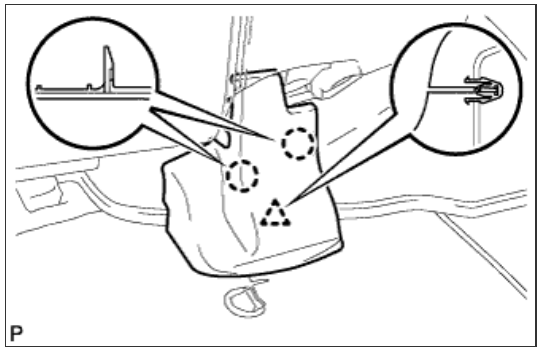


6. REMOVE REAR NO. 2 SEAT ASSEMBLY (except Face to Face Seat Type)

a. Remove the 4 bolts and seat assembly.


NOTICE:

Be careful not to damage the vehicle body.

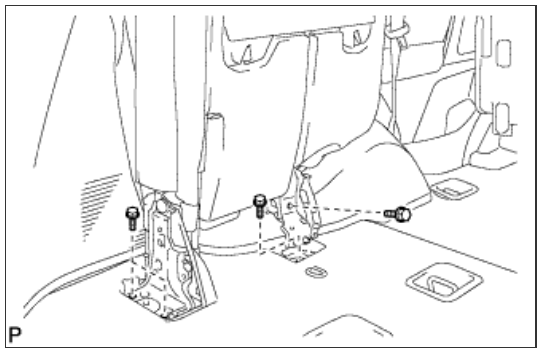

7. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

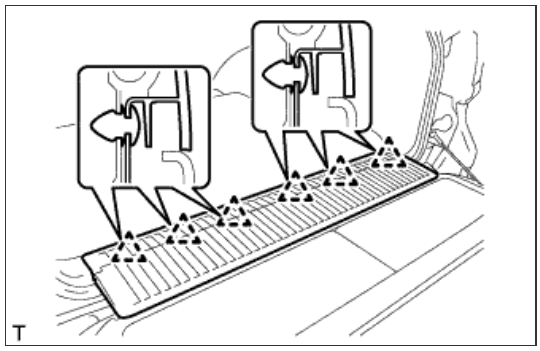


8. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

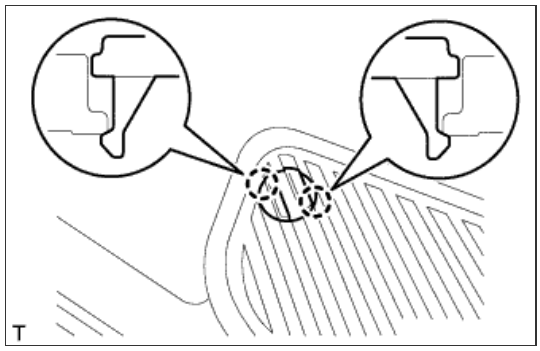

9. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

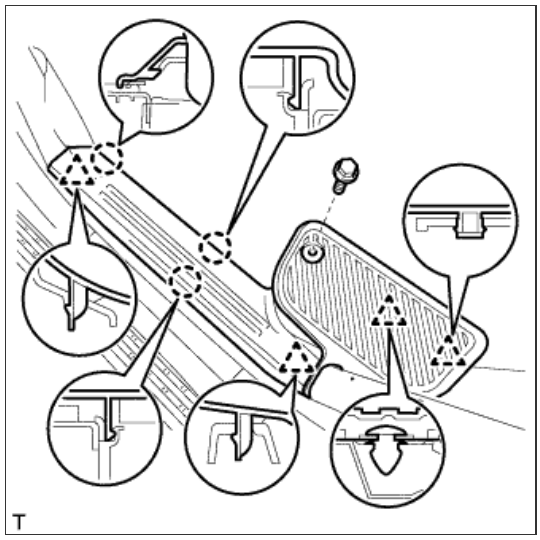


1 REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

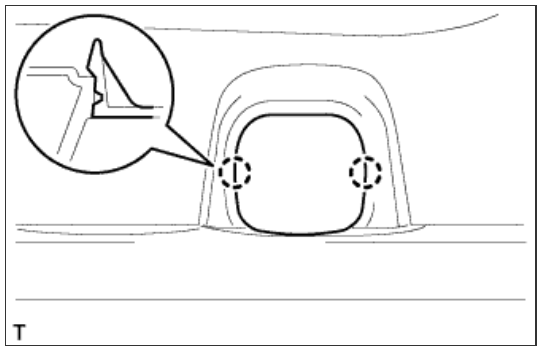

11. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


Tape the screwdriver tip before use.

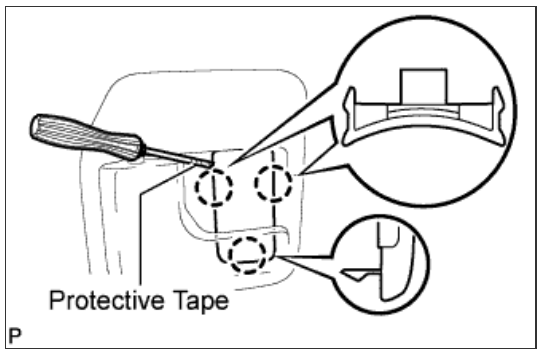


12. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

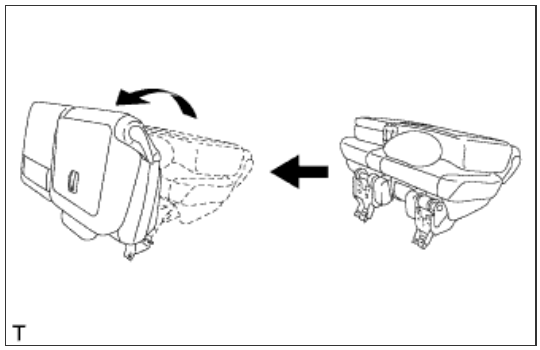


a. Detach the 3 claws and remove the cover.

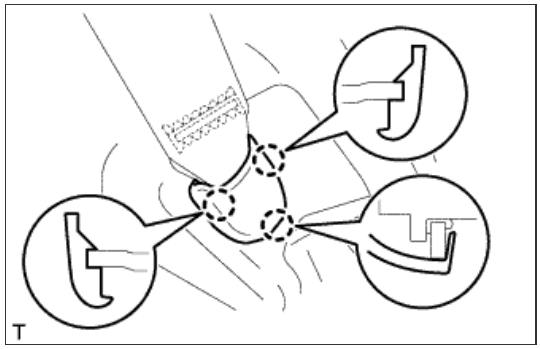

b. Remove the bolt and rear No. 1 seat belt anchor.

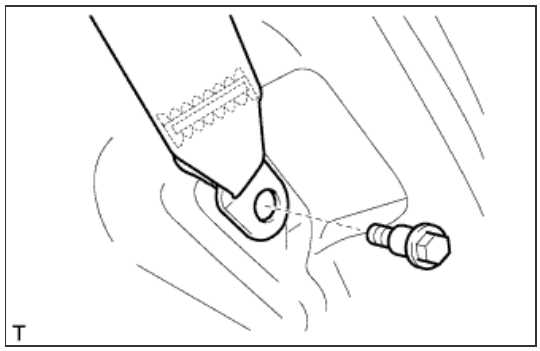

c. w/ Rear No. 2 Seat, except Face to Face Seat Type:
Remove the bolt and rear No. 2 seat belt anchor.

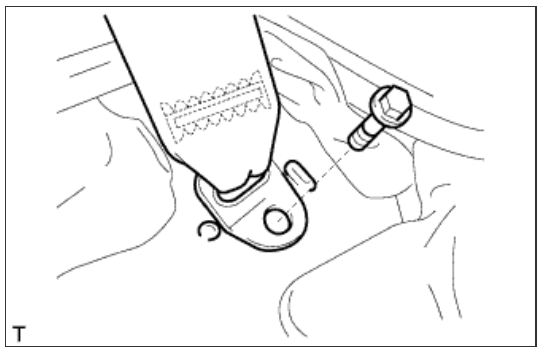


d. w/ Rear No. 2 Seat, except Face to Face Seat Type:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

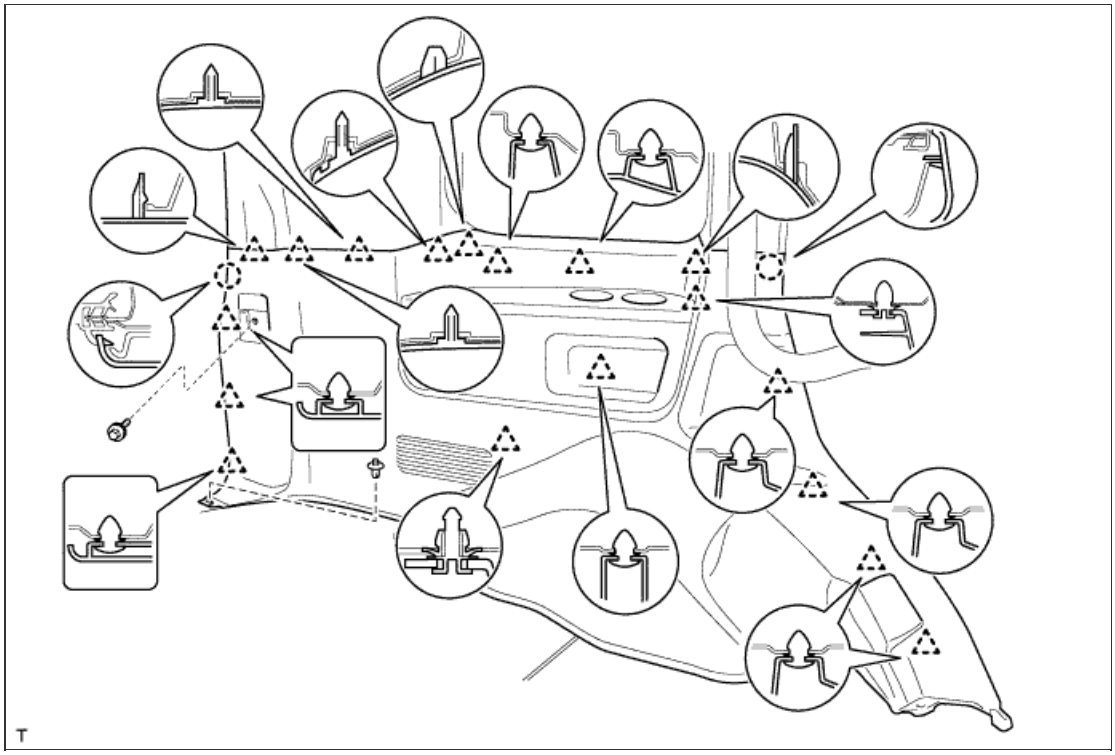

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

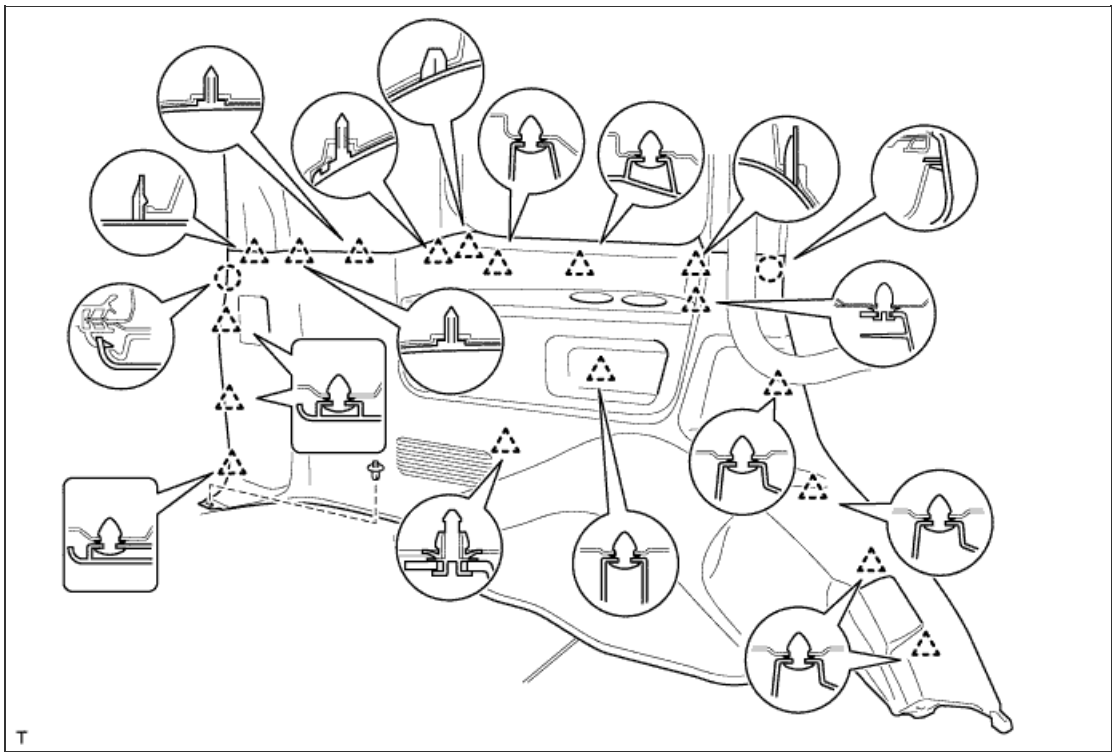

13. REMOVE SELF POWER SIREN ASSEMBLY

a. Disconnect the connector.

b. Remove the 2 bolts and siren.

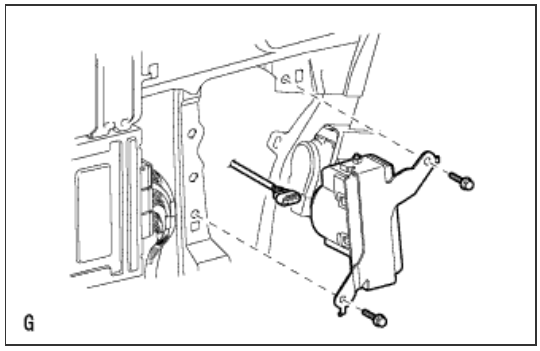


for Preparation Click here

1. REMOVE REAR SIDE SEAT LEG PROTECTOR LH (for Face to Face Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the protector.


HINT:

Tape the screwdriver tip before use.

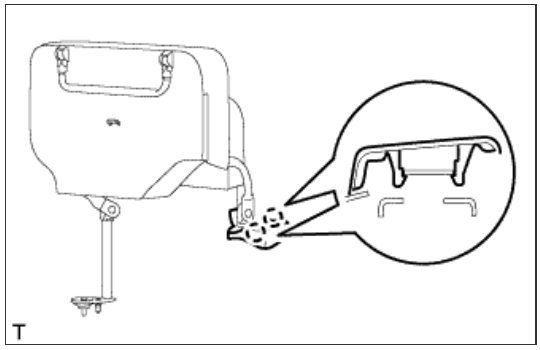

2. REMOVE REAR NO. 2 SEAT ASSEMBLY (for Face to Face Seat Type)


a. Remove the 4 bolts and rear No. 2 seat.

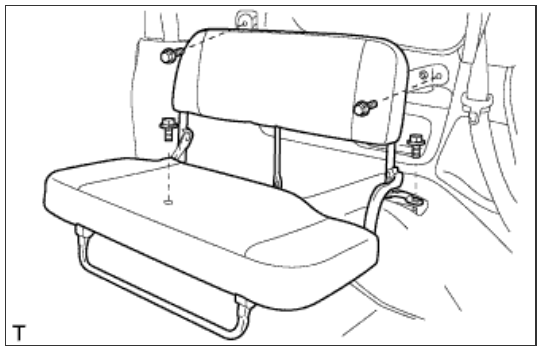


3. REMOVE REAR NO. 2 SEAT HEADREST ASSEMBLY LH (except Face to Face Seat Type)

4. REMOVE REAR SEAT CUSHION HINGE COVER LH (except Face to Face Seat Type)


a. Operate the rear seat headrest handle and lower the headrest.

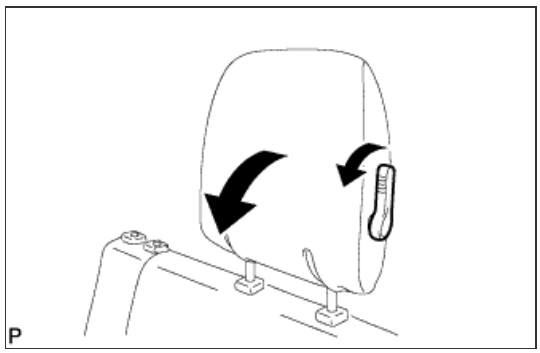

b. Operate the reclining adjuster release handle and fold down the seat.

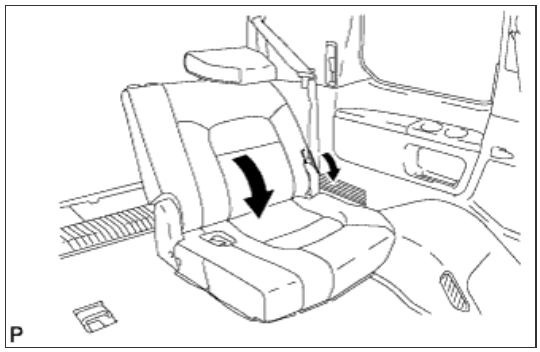


c. Operate the seat cushion lock release lever and move the seat to the storage position.

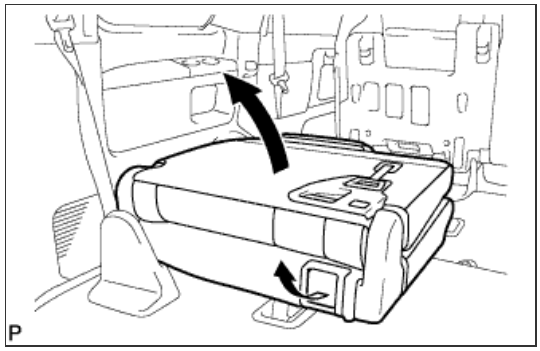

d. Using a screwdriver, detach the 3 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

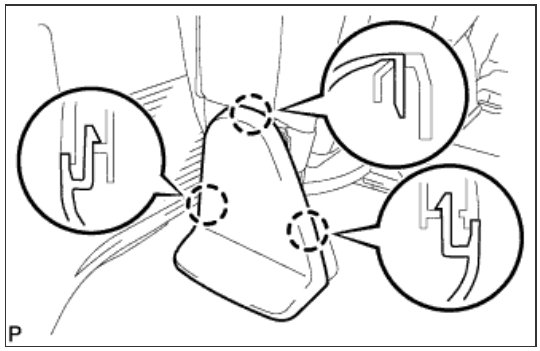

5. REMOVE REAR NO. 2 SEAT HINGE COVER LH (except Face to Face Seat Type)

a. Detach the 2 claws and clip, and then remove the cover.

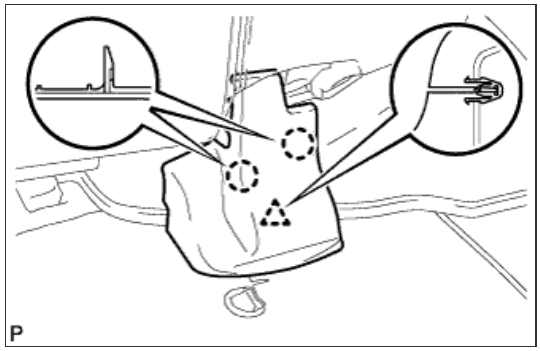


6. REMOVE REAR NO. 2 SEAT ASSEMBLY (except Face to Face Seat Type)

a. Remove the 4 bolts and seat assembly.


NOTICE:

Be careful not to damage the vehicle body.

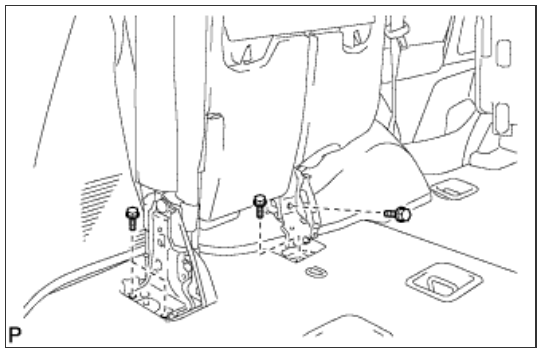

7. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

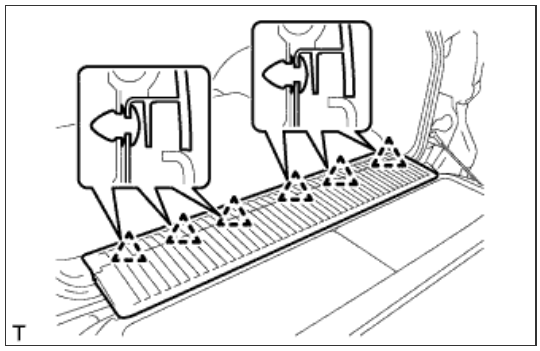


8. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

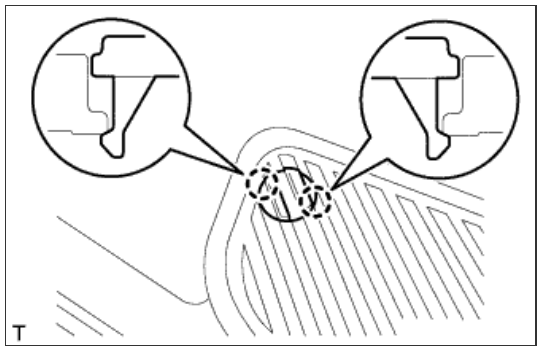

9. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

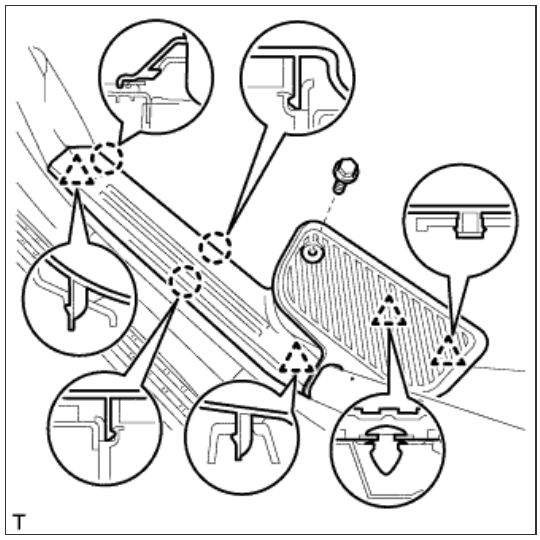


1 REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

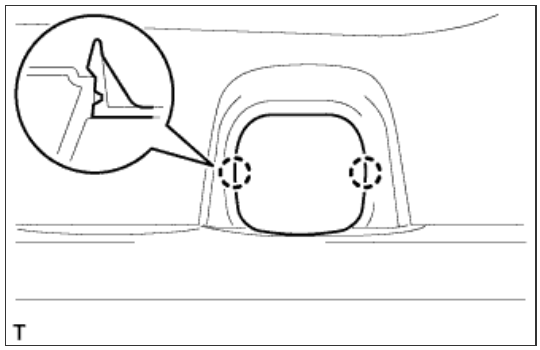

11. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


Tape the screwdriver tip before use.

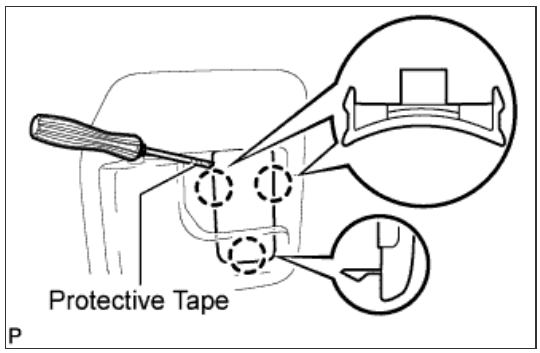


12. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

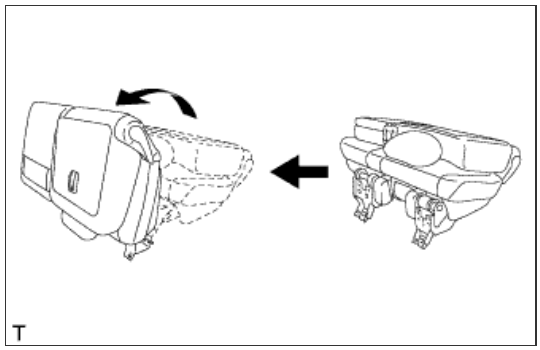


a. Detach the 3 claws and remove the cover.

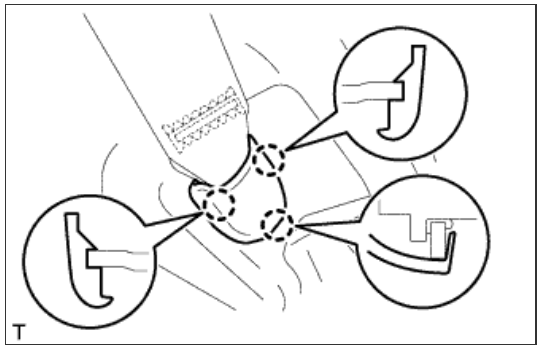

b. Remove the bolt and rear No. 1 seat belt anchor.

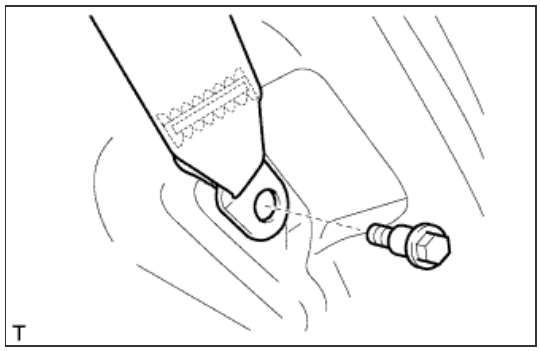

c. w/ Rear No. 2 Seat, except Face to Face Seat Type:
Remove the bolt and rear No. 2 seat belt anchor.

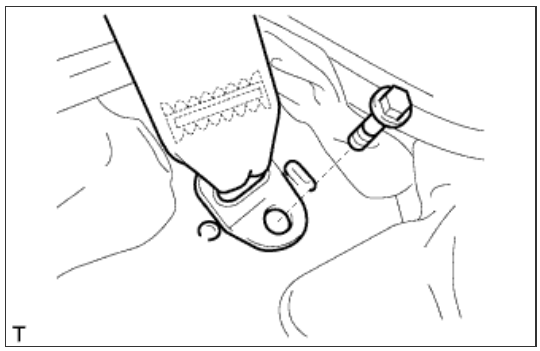


d. w/ Rear No. 2 Seat, except Face to Face Seat Type:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

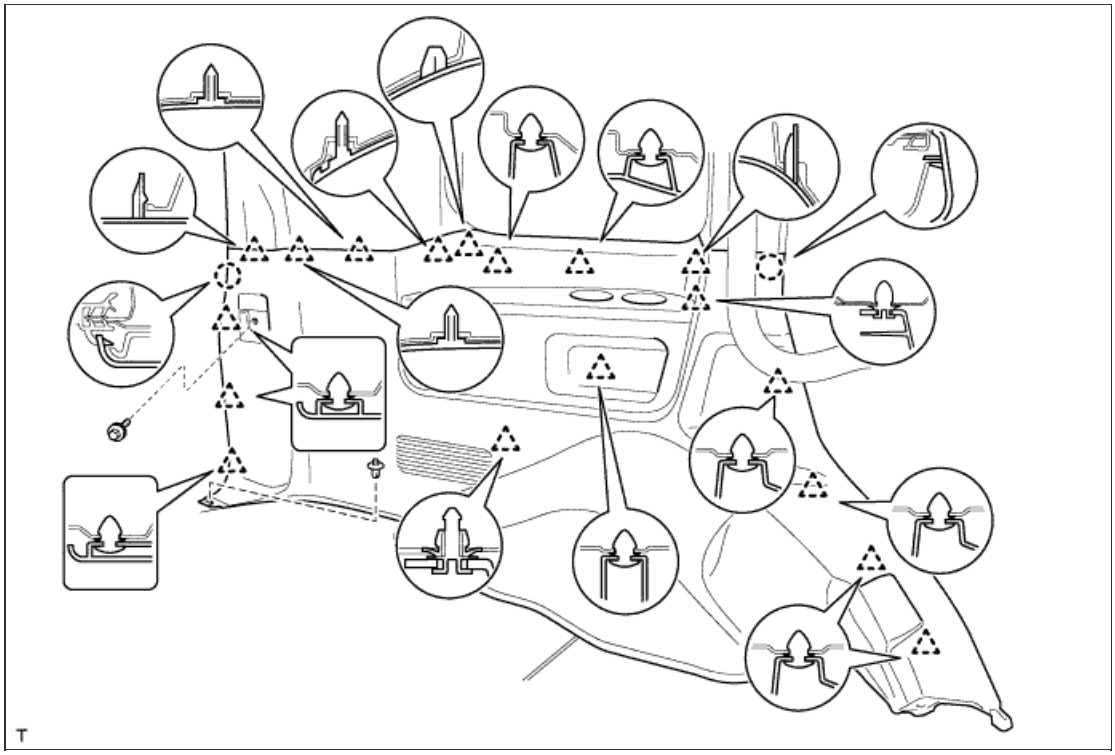

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

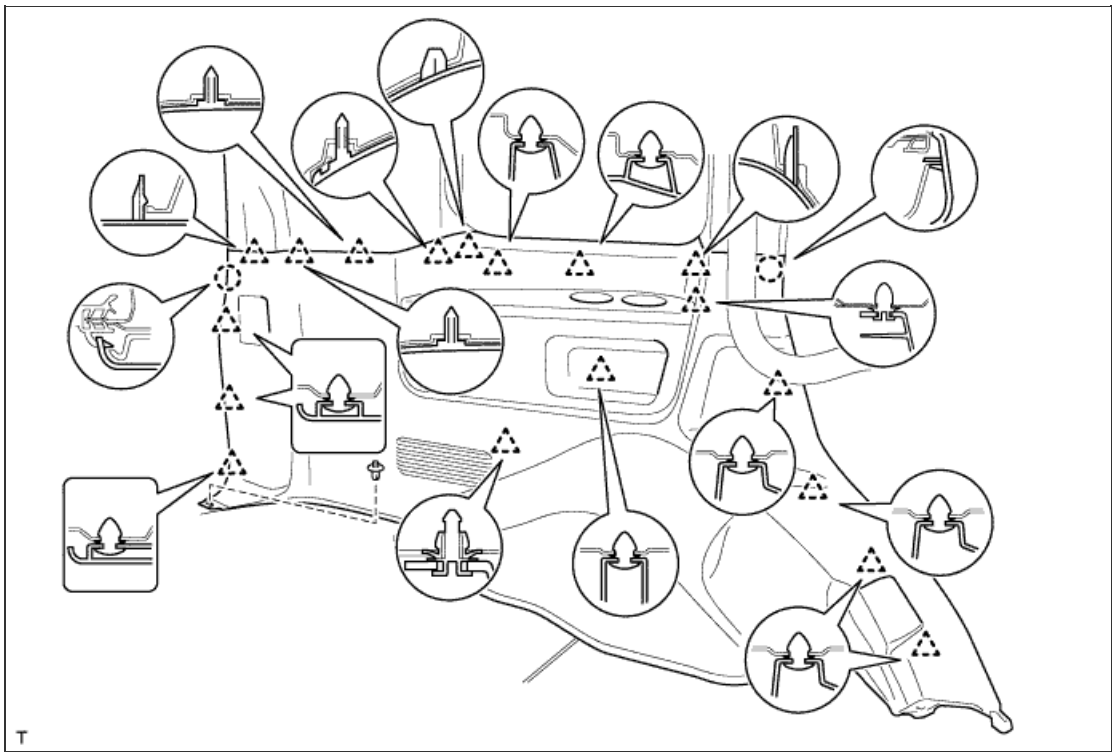

13. REMOVE SELF POWER SIREN ASSEMBLY

a. Disconnect the connector.

b. Remove the 2 bolts and siren.

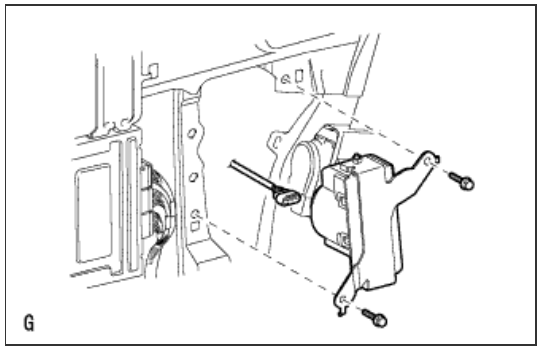


for Preparation Click here

1. REMOVE REAR SIDE SEAT LEG PROTECTOR LH (for Face to Face Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the protector.


HINT:

Tape the screwdriver tip before use.

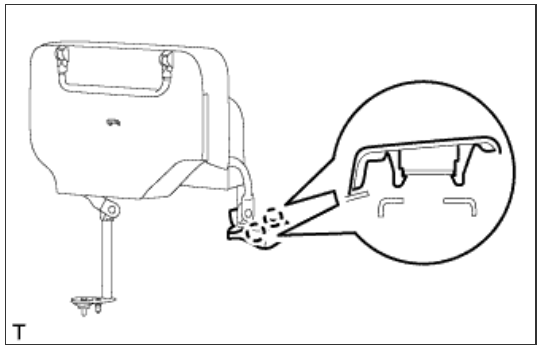

2. REMOVE REAR NO. 2 SEAT ASSEMBLY (for Face to Face Seat Type)


a. Remove the 4 bolts and rear No. 2 seat.

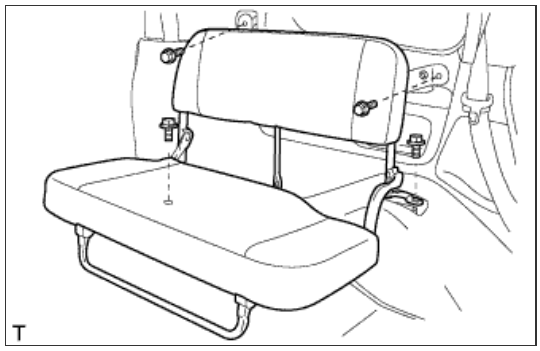


3. REMOVE REAR NO. 2 SEAT HEADREST ASSEMBLY LH (except Face to Face Seat Type)

4. REMOVE REAR SEAT CUSHION HINGE COVER LH (except Face to Face Seat Type)


a. Operate the rear seat headrest handle and lower the headrest.

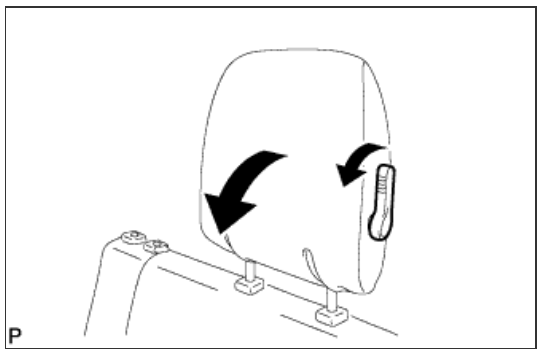

b. Operate the reclining adjuster release handle and fold down the seat.

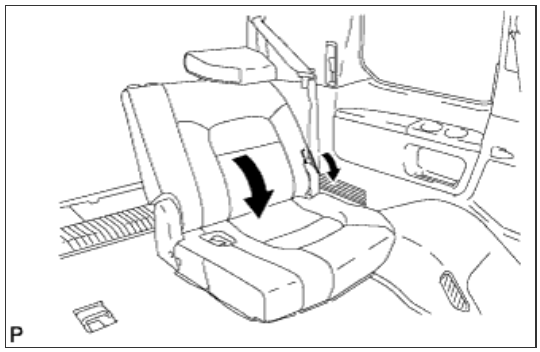


c. Operate the seat cushion lock release lever and move the seat to the storage position.

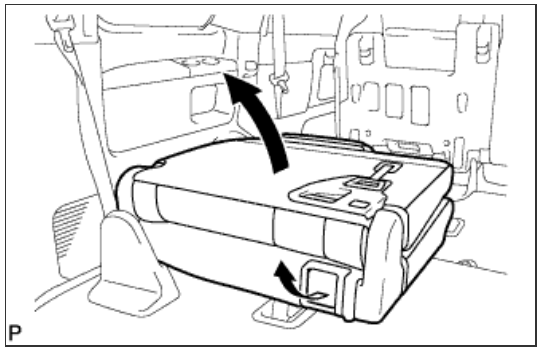

d. Using a screwdriver, detach the 3 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

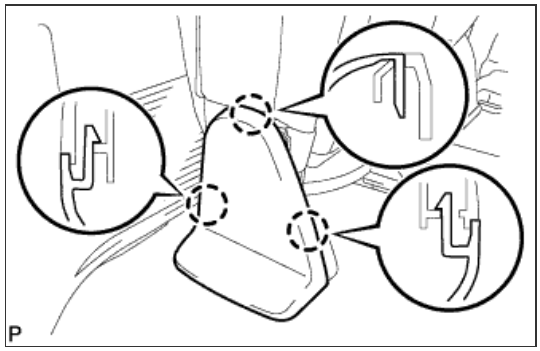

5. REMOVE REAR NO. 2 SEAT HINGE COVER LH (except Face to Face Seat Type)

a. Detach the 2 claws and clip, and then remove the cover.

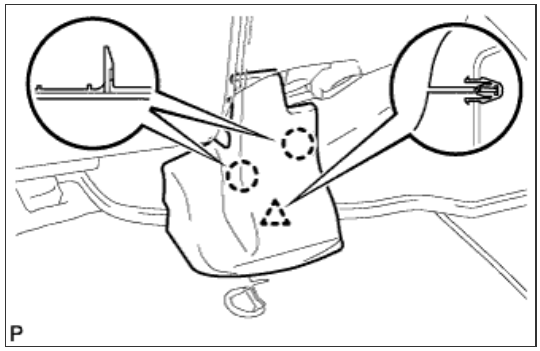


6. REMOVE REAR NO. 2 SEAT ASSEMBLY (except Face to Face Seat Type)

a. Remove the 4 bolts and seat assembly.


NOTICE:

Be careful not to damage the vehicle body.

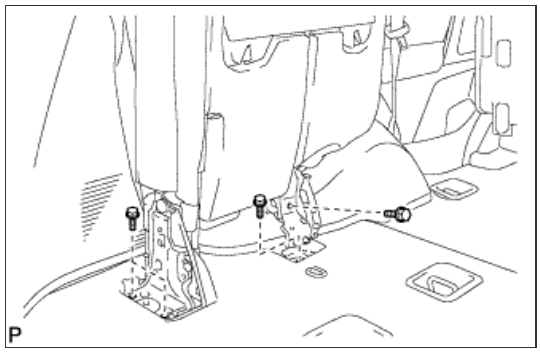

7. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

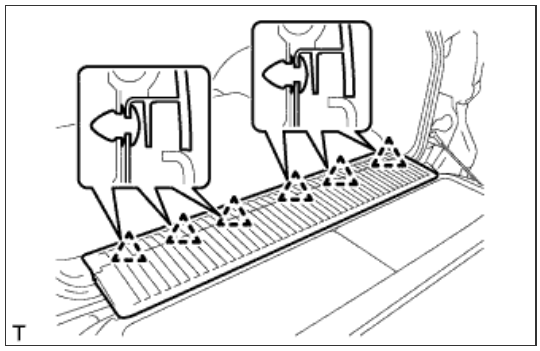


8. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

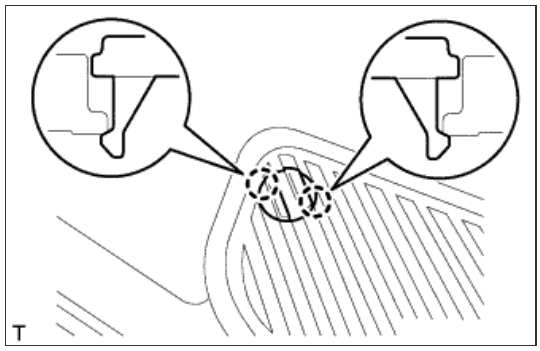

9. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

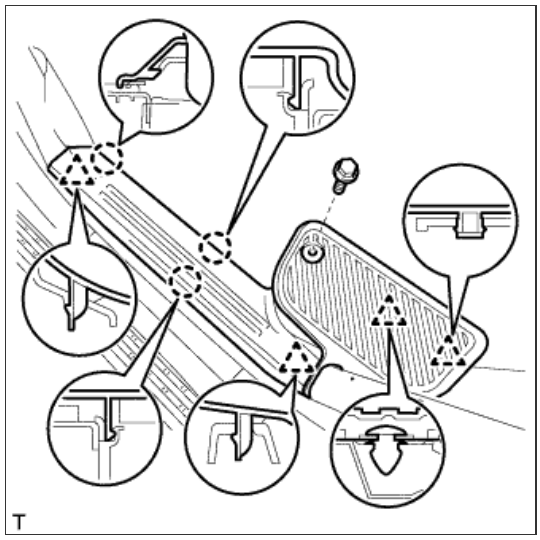


1 REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

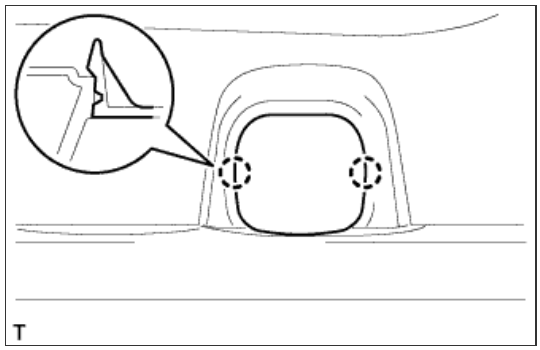

11. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


Tape the screwdriver tip before use.

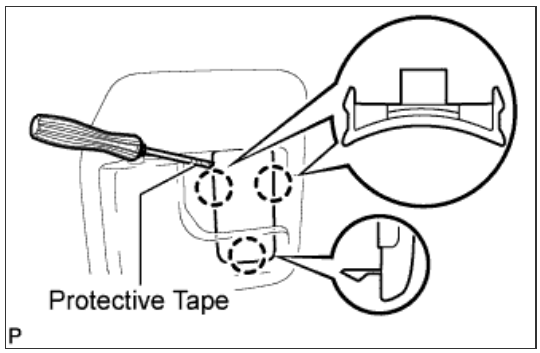


12. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

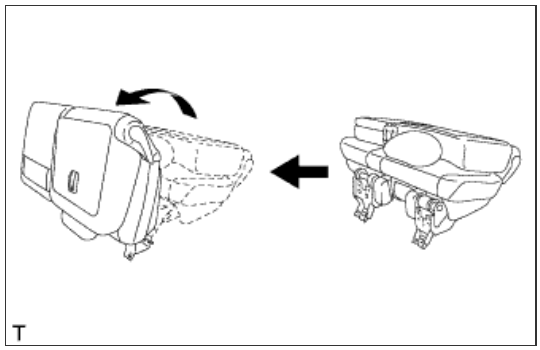


a. Detach the 3 claws and remove the cover.

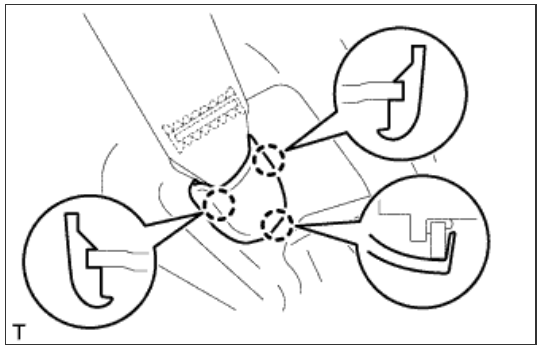

b. Remove the bolt and rear No. 1 seat belt anchor.

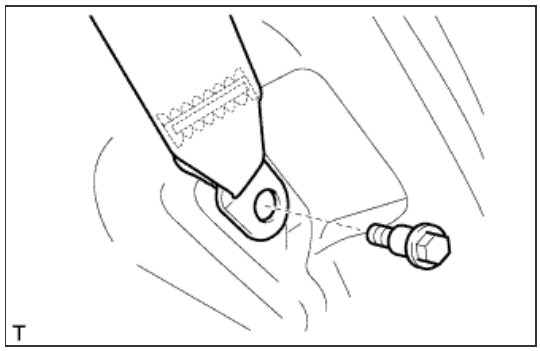

c. w/ Rear No. 2 Seat, except Face to Face Seat Type:
Remove the bolt and rear No. 2 seat belt anchor.

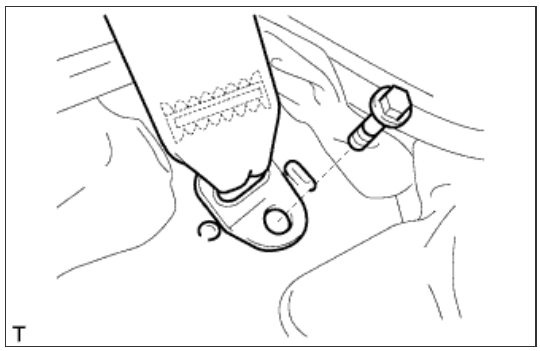


d. w/ Rear No. 2 Seat, except Face to Face Seat Type:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

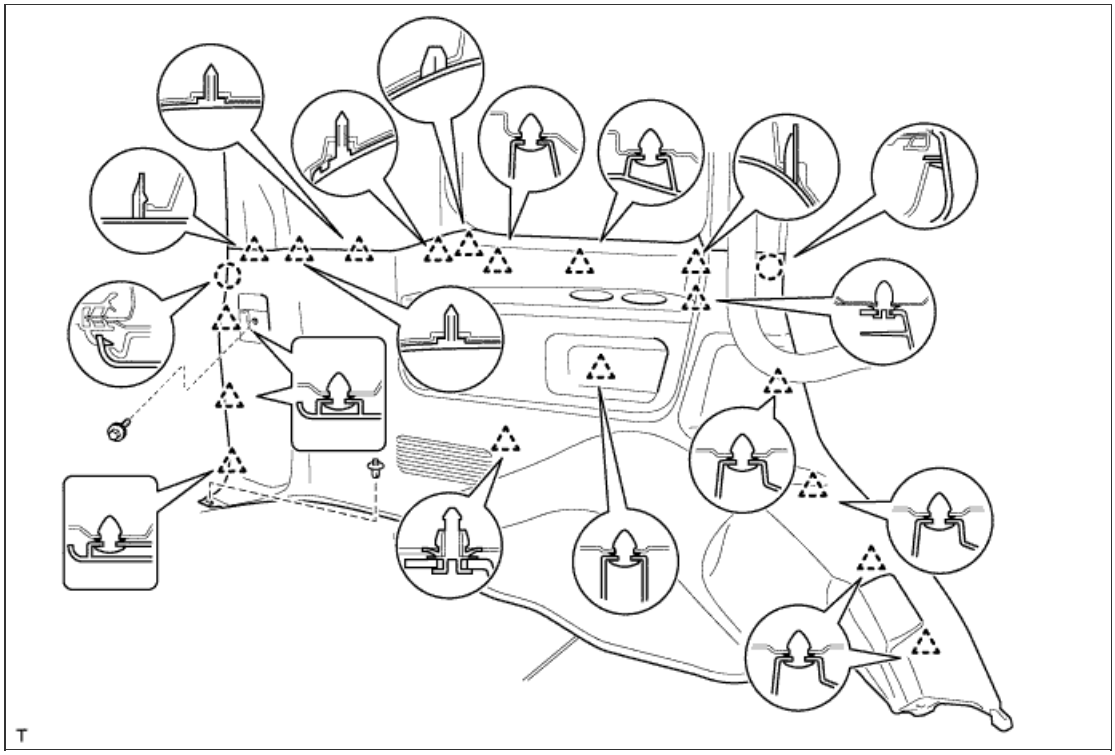

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

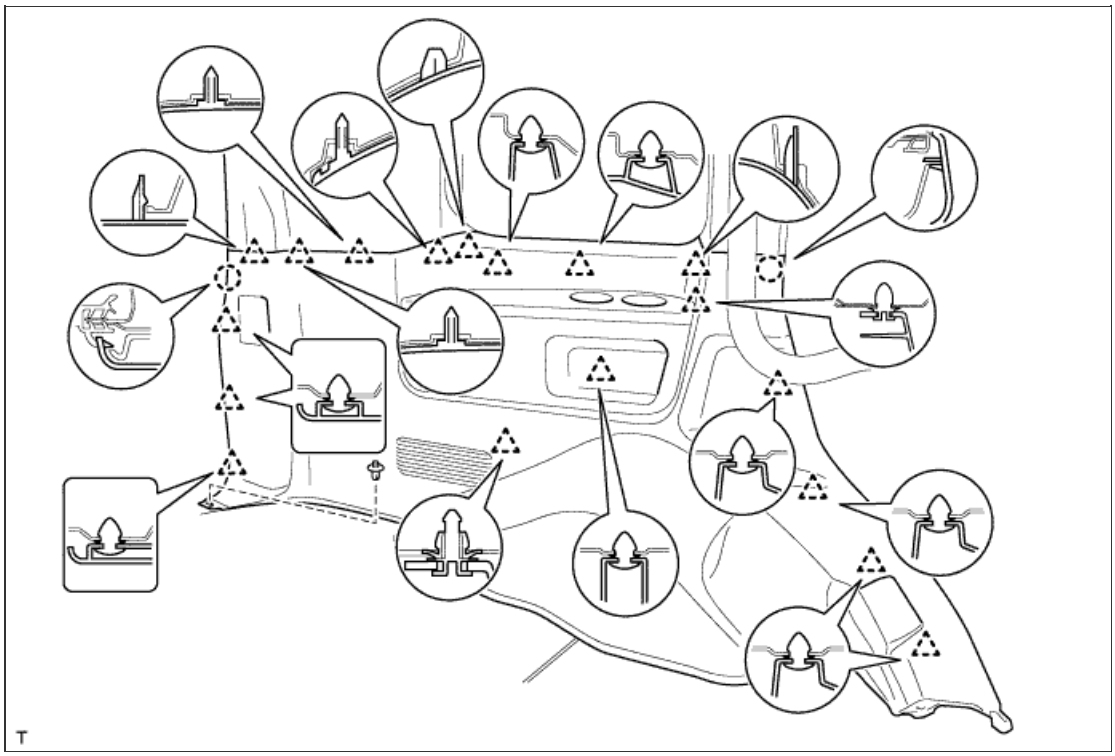

13. REMOVE SELF POWER SIREN ASSEMBLY

a. Disconnect the connector.

b. Remove the 2 bolts and siren.

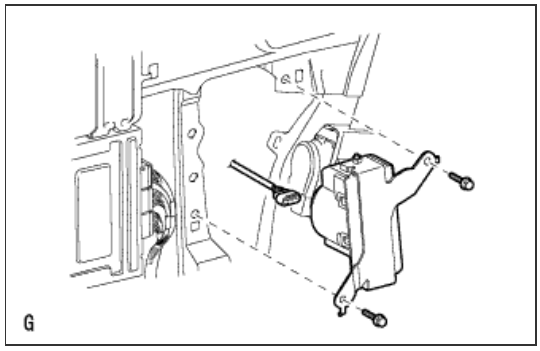

for Preparation Click here


HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL SELF POWER SIREN ASSEMBLY

a. Connect the connector.


b. Install the siren with the 2 bolts.

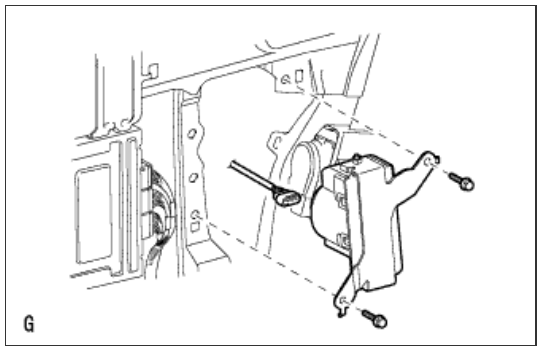

2. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

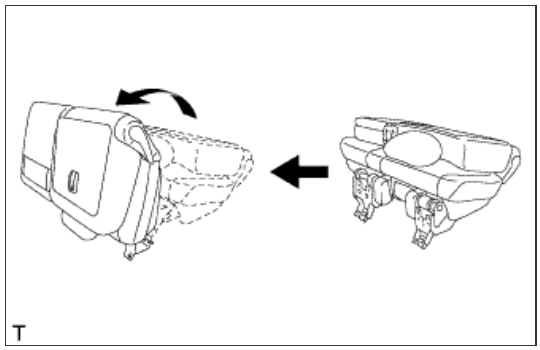

a. w/ Rear No. 2 Seat, except Face to Face Seat Type:


i. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

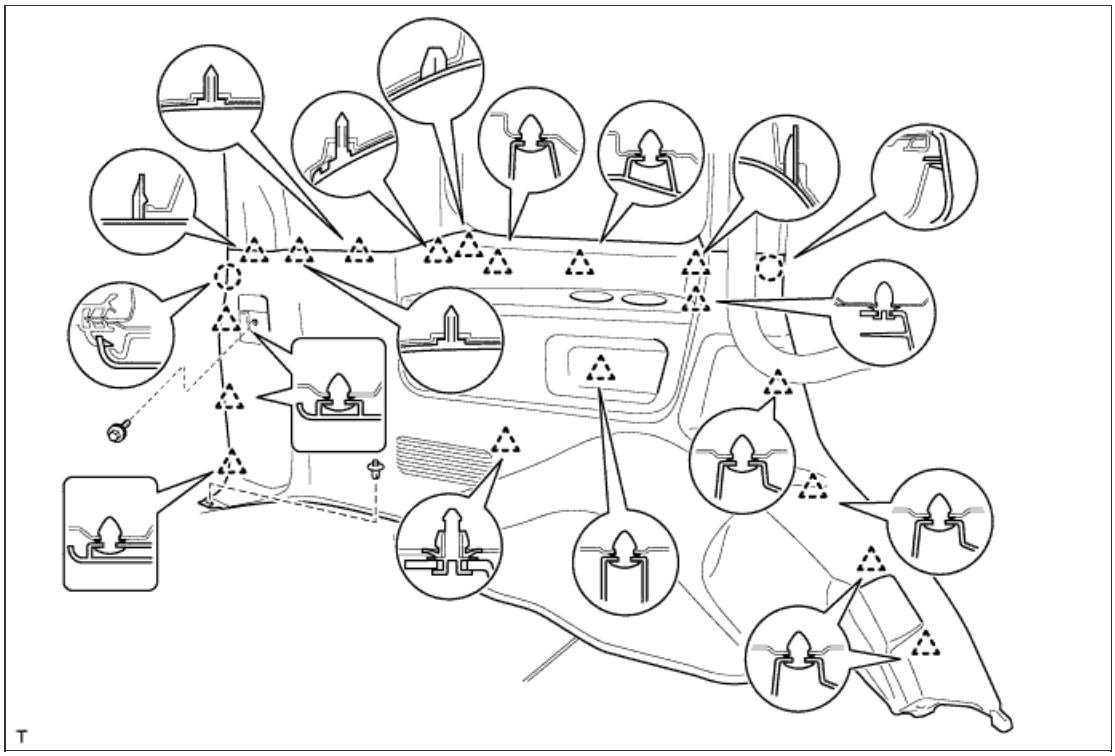

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the clip.

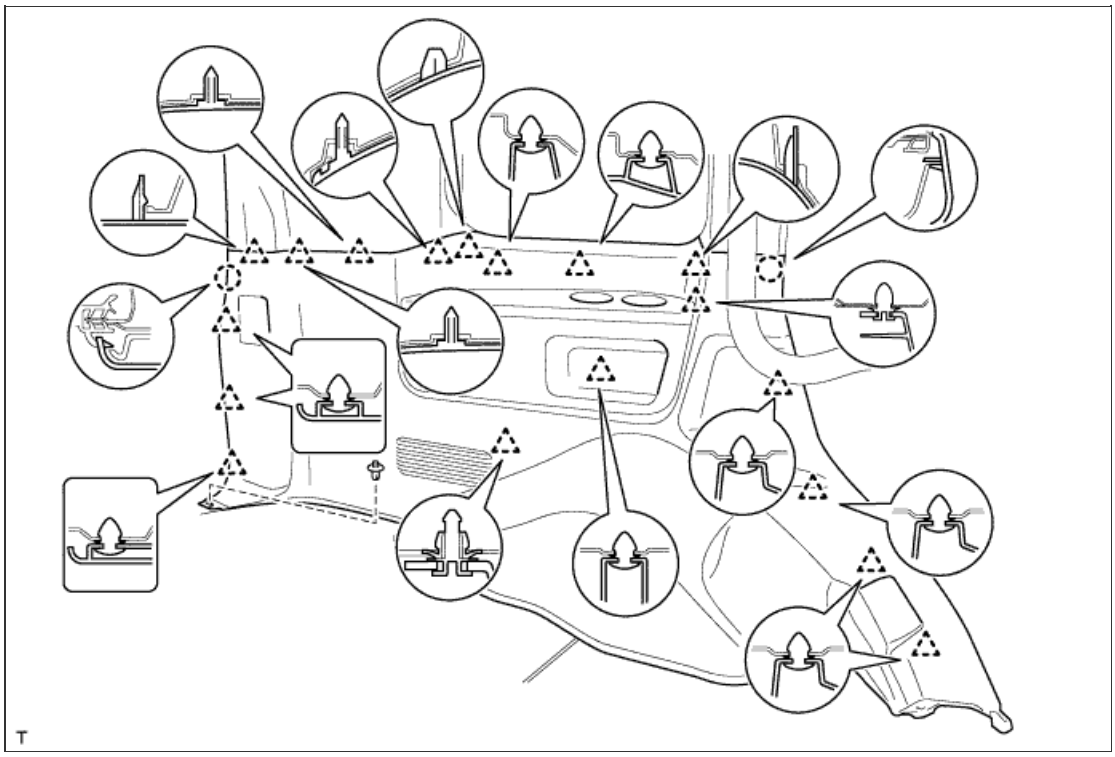


c. w/ Rear No. 2 Seat, except Face to Face Seat Type:

Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }


NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

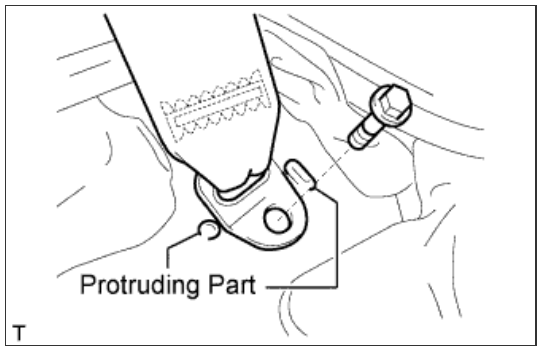


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

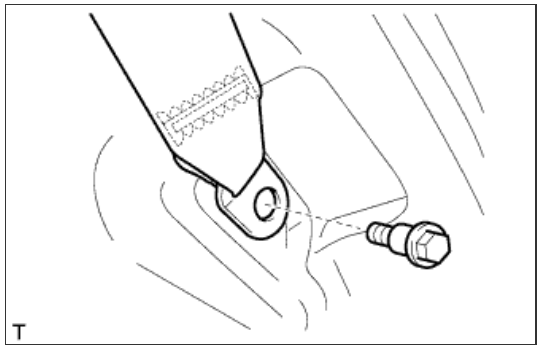

e. Attach the 3 claws to install the cover.

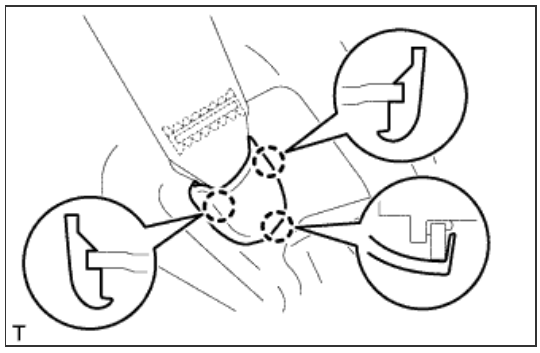


3. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

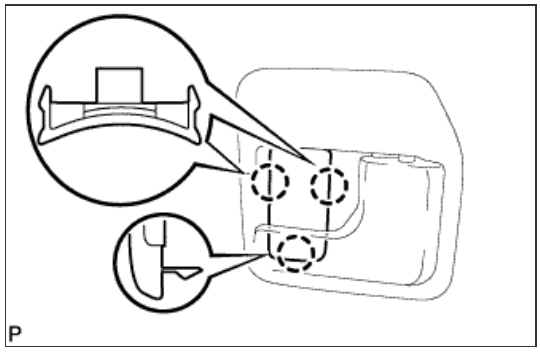


4. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to install the tonneau cover holder cap on the other side.


a. Attach the 2 claws to install the tonneau cover holder cap.

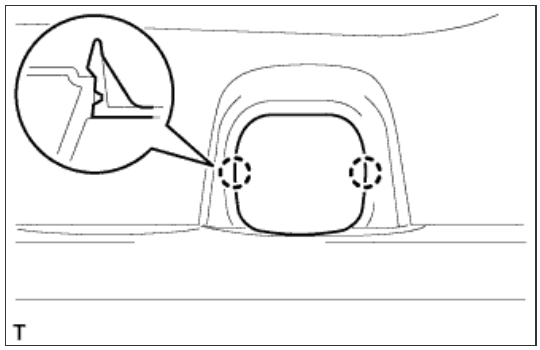

5. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

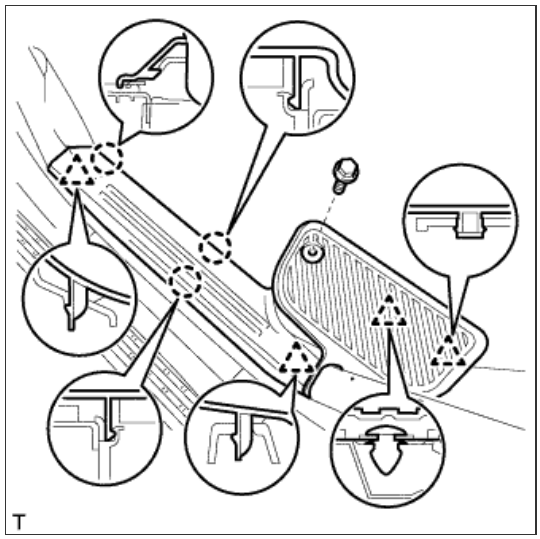


6. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

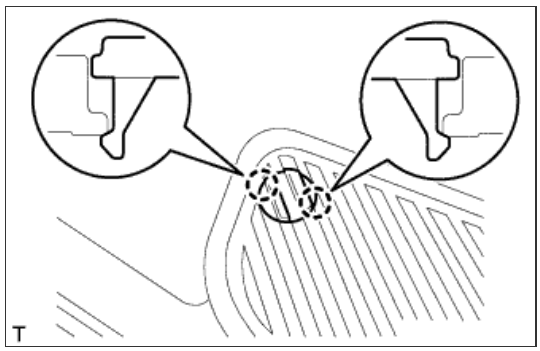

7. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the 6 clips to install the support plate.

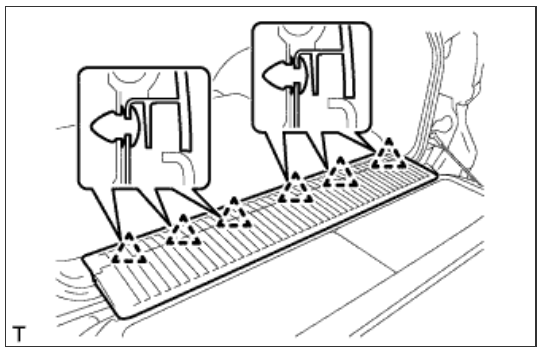


8. INSTALL REAR NO. 2 SEAT ASSEMBLY (for Face to Face Seat Type)

a. Temporarily install the rear No. 2 seat with the 4 bolts.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

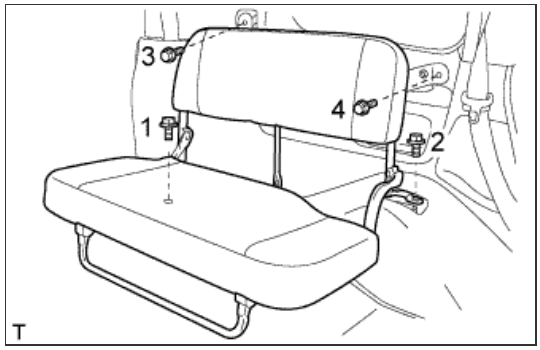

9. INSTALL REAR SIDE SEAT LEG PROTECTOR LH (for Face to Face Seat Type)

a. Attach the 2 claws to install the protector.

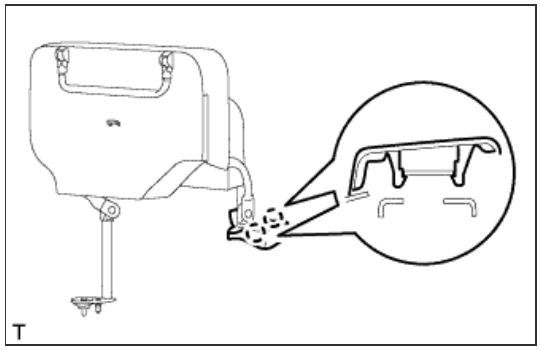

10. INSTALL REAR NO. 2 SEAT ASSEMBLY (except Face to Face Seat Type)


a. Temporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

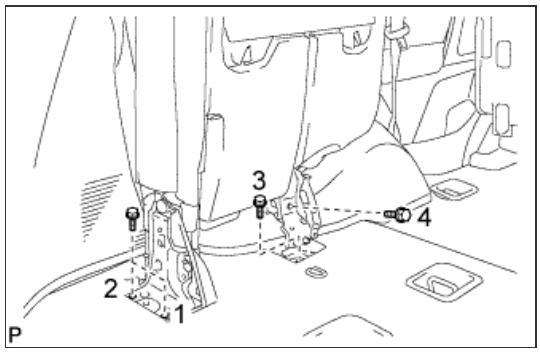

11. INSTALL REAR NO. 2 SEAT HINGE COVER LH (except Face to Face Seat Type)


a. Attach the clip and 2 claws to install the cover.

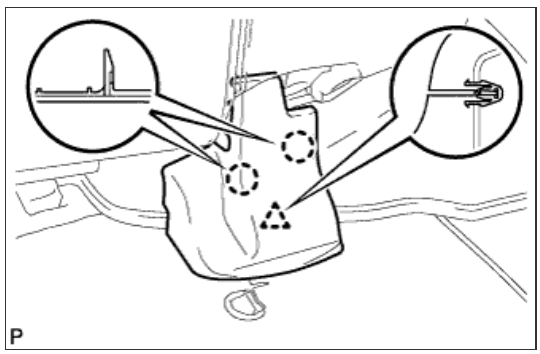

12. INSTALL REAR SEAT CUSHION HINGE COVER LH (except Face to Face Seat Type)

a. Attach the 3 claws to install the cover.

b. Return the seat to the upright position.

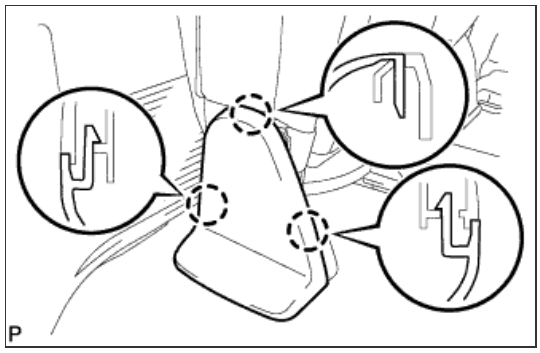

13. INSTALL REAR NO. 2 SEAT HEADREST ASSEMBLY LH (except Face to Face Seat Type)

for Preparation Click here


HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL SELF POWER SIREN ASSEMBLY

a. Connect the connector.


b. Install the siren with the 2 bolts.

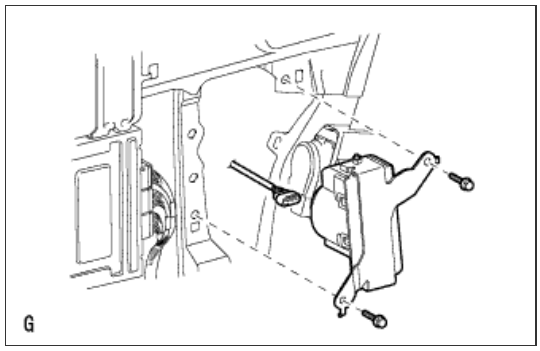

2. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

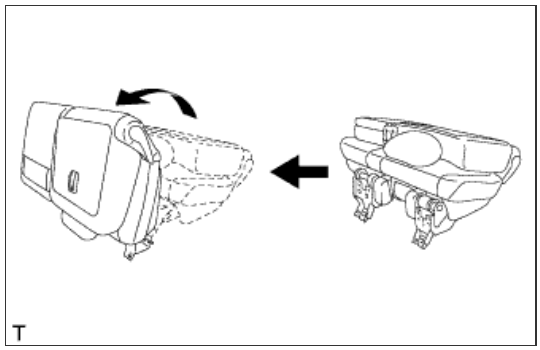

a. w/ Rear No. 2 Seat, except Face to Face Seat Type:


i. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

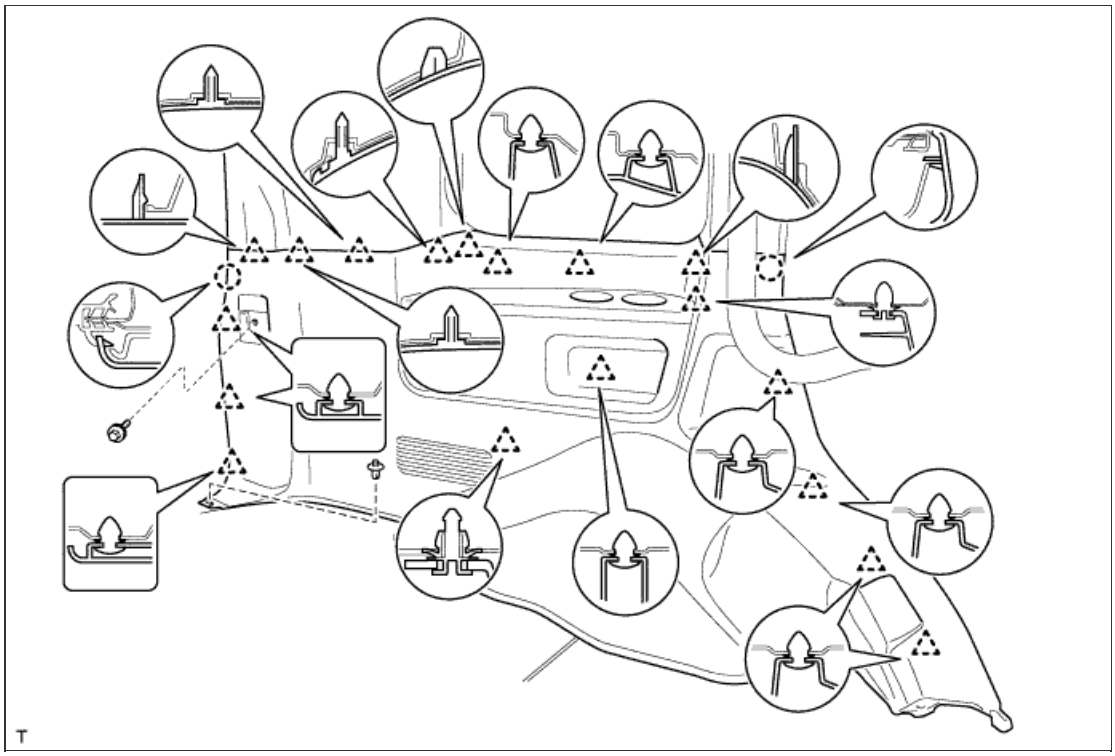

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the clip.

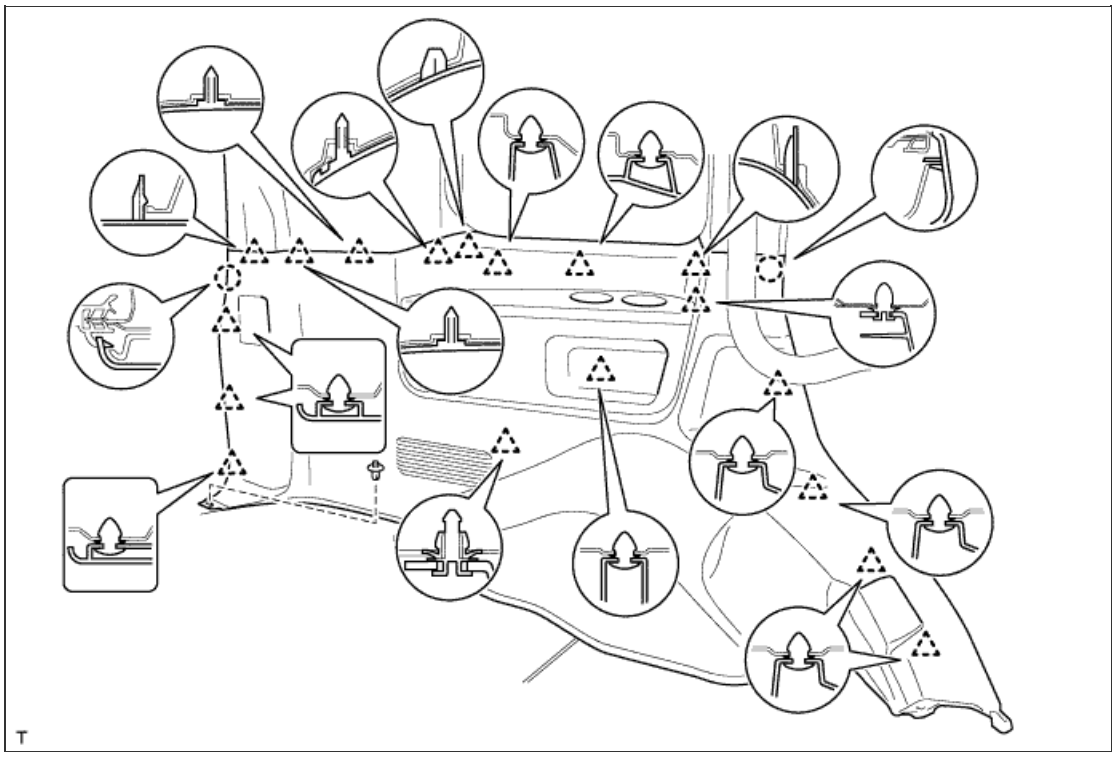


c. w/ Rear No. 2 Seat, except Face to Face Seat Type:

Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }


NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

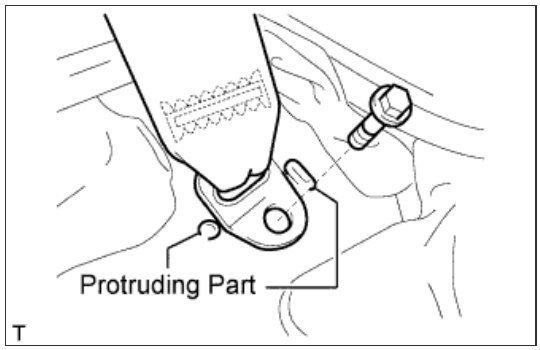


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

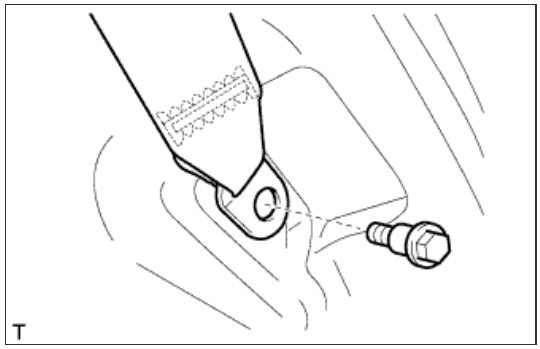

e. Attach the 3 claws to install the cover.

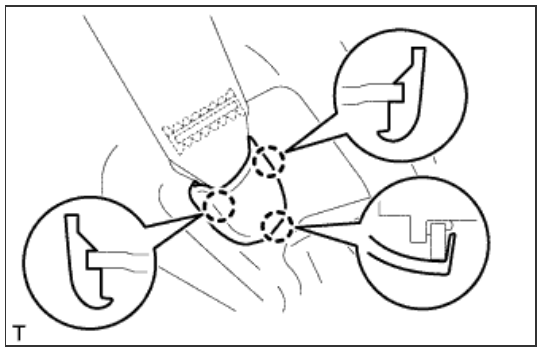


3. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

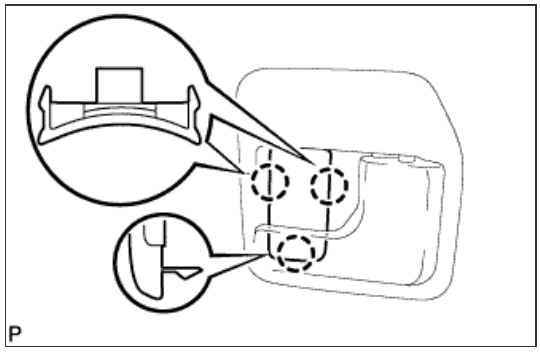


4. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to install the tonneau cover holder cap on the other side.


a. Attach the 2 claws to install the tonneau cover holder cap.

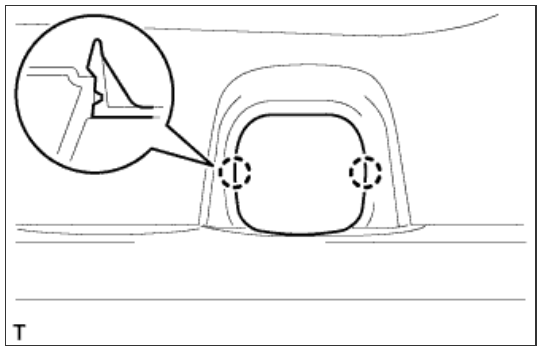

5. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

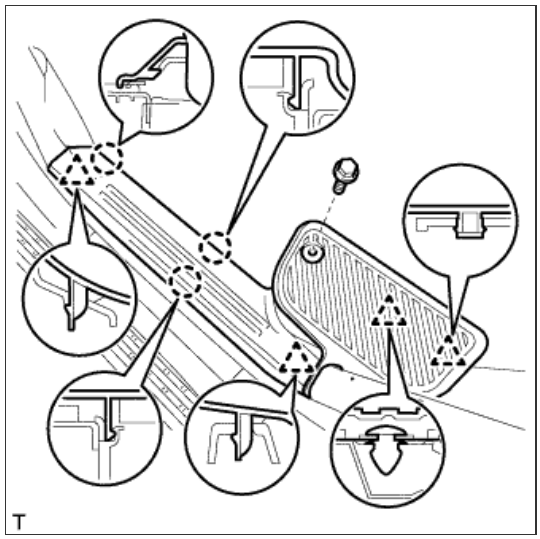


6. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

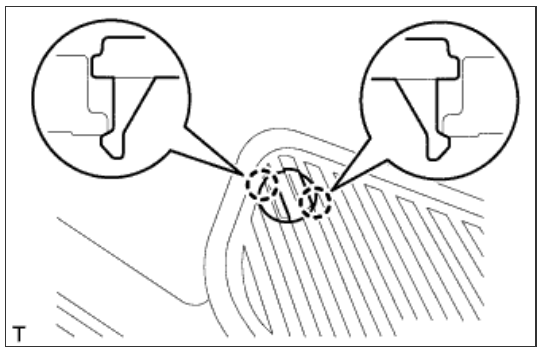

7. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the 6 clips to install the support plate.

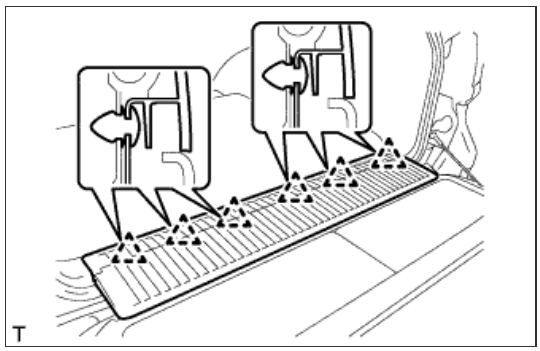


8. INSTALL REAR NO. 2 SEAT ASSEMBLY (for Face to Face Seat Type)

a. Temporarily install the rear No. 2 seat with the 4 bolts.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

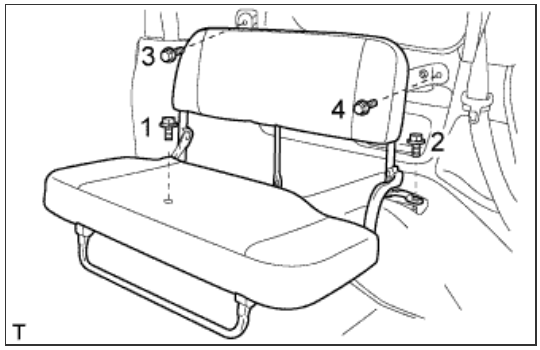

9. INSTALL REAR SIDE SEAT LEG PROTECTOR LH (for Face to Face Seat Type)

a. Attach the 2 claws to install the protector.

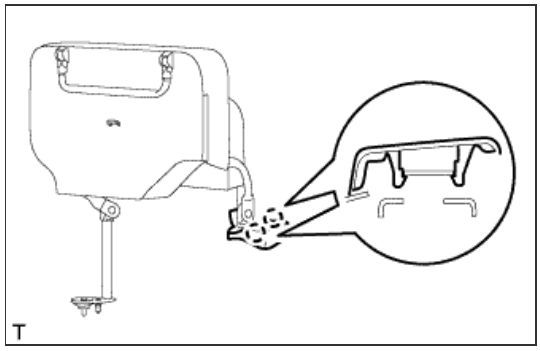

10. INSTALL REAR NO. 2 SEAT ASSEMBLY (except Face to Face Seat Type)


a. Temporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.

b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

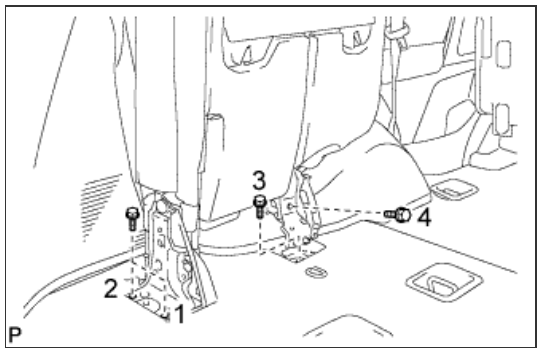

11. INSTALL REAR NO. 2 SEAT HINGE COVER LH (except Face to Face Seat Type)

a. Attach the clip and 2 claws to install the cover.

12. INSTALL REAR SEAT CUSHION HINGE COVER LH (except Face to Face Seat Type)

a. Attach the 3 claws to install the cover.

b. Return the seat to the upright position.

13. INSTALL REAR NO. 2 SEAT HEADREST ASSEMBLY LH (except Face to Face Seat Type)

for Preparation Click here


HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL SELF POWER SIREN ASSEMBLY

a. Connect the connector.


b. Install the siren with the 2 bolts.

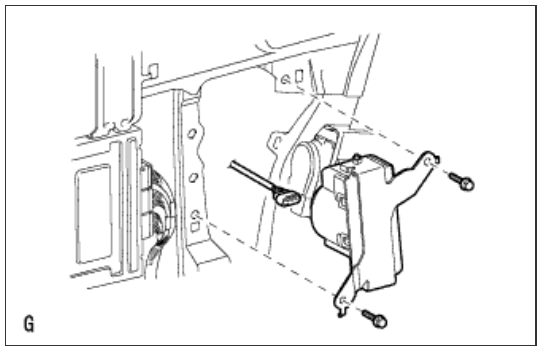

2. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

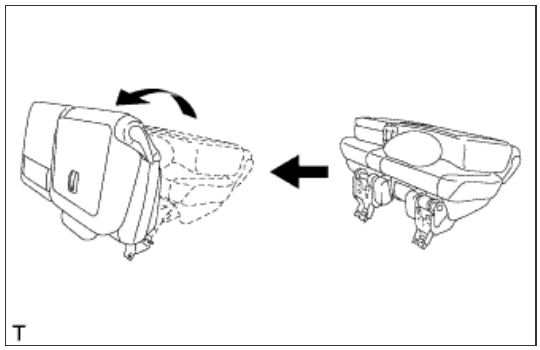

a. w/ Rear No. 2 Seat, except Face to Face Seat Type:


i. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

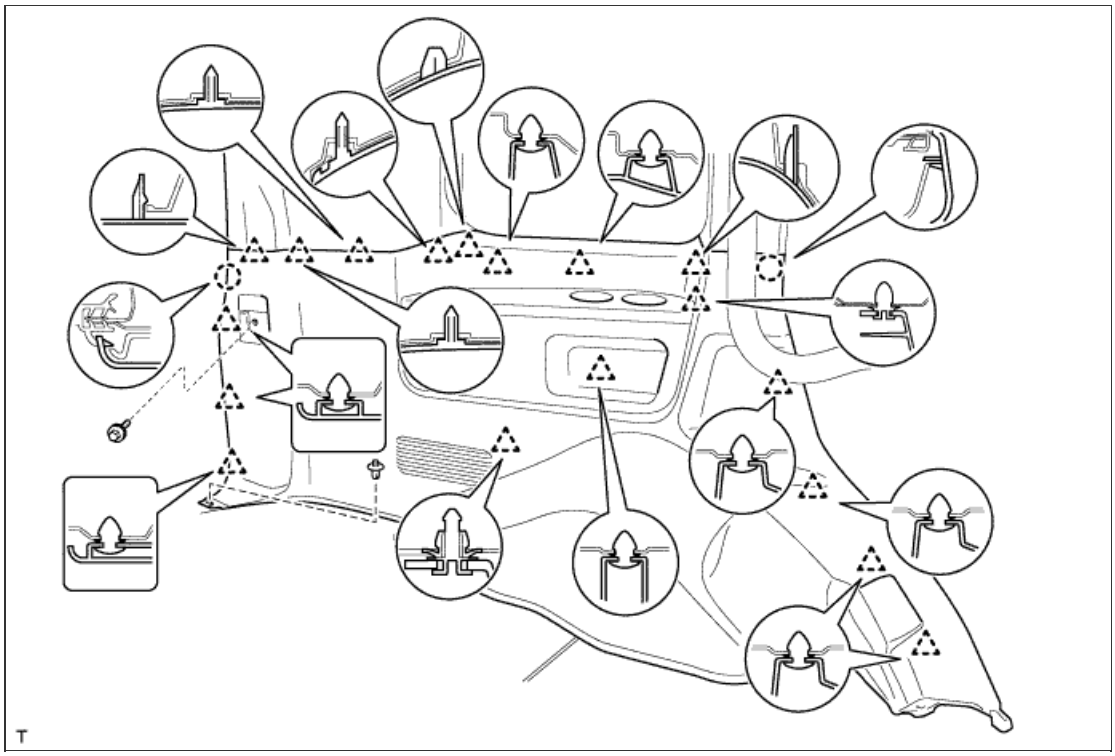

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the clip.

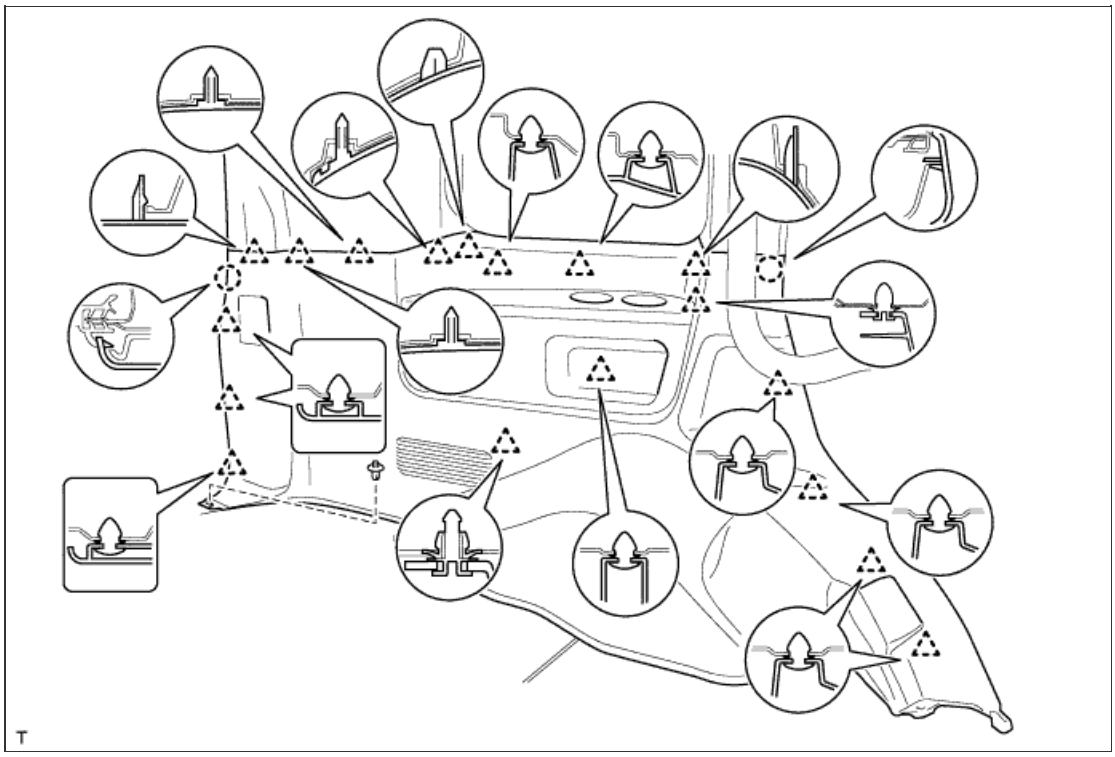


c. w/ Rear No. 2 Seat, except Face to Face Seat Type:

Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }


NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

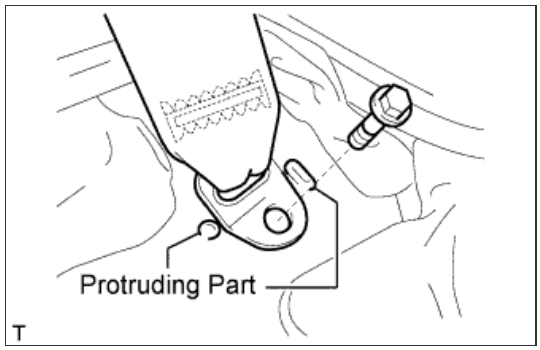


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

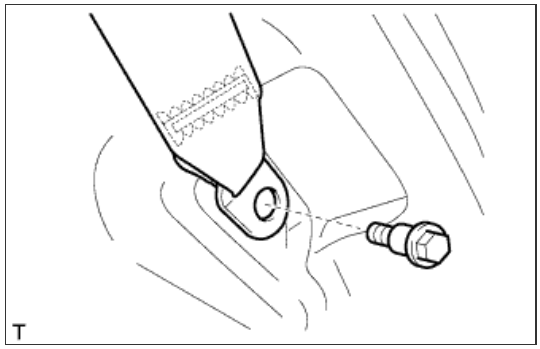

e. Attach the 3 claws to install the cover.

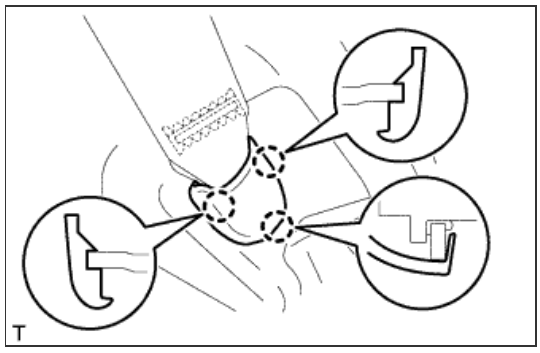


3. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

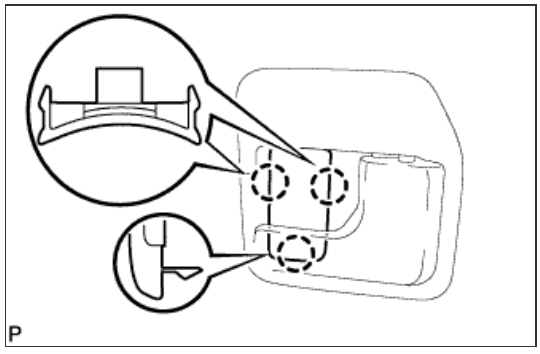


4. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:


Use the same procedure to install the tonneau cover holder cap on the other side.

a. Attach the 2 claws to install the tonneau cover holder cap.

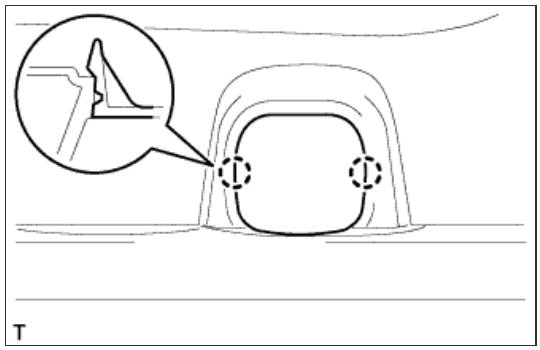

5. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the claws and 4 clips to install the scuff plate.

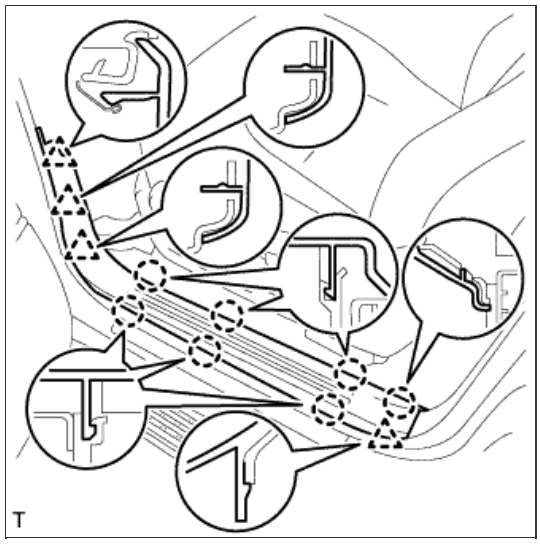


6. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

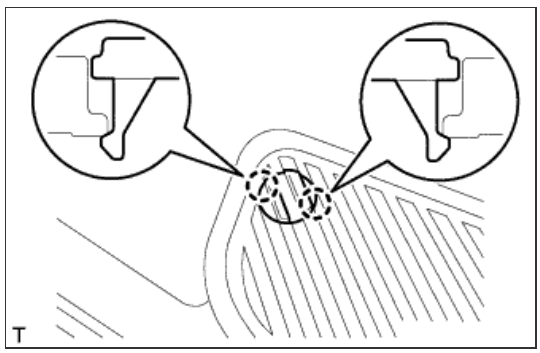

7. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the 6 clips to install the support plate.

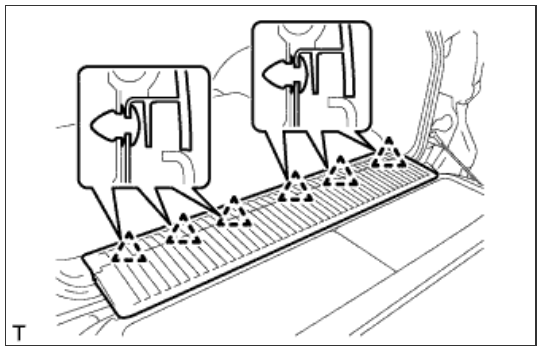


8. INSTALL REAR NO. 2 SEAT ASSEMBLY (for Face to Face Seat Type)

a. Temporarily install the rear No. 2 seat with the 4 bolts.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

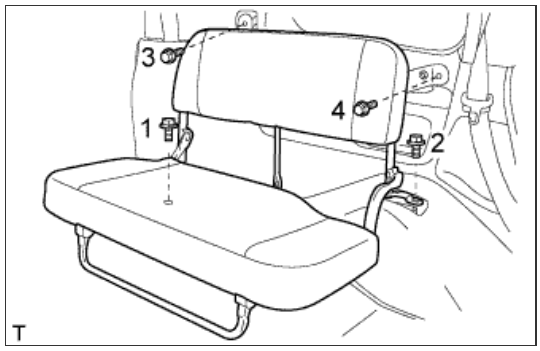

9. INSTALL REAR SIDE SEAT LEG PROTECTOR LH (for Face to Face Seat Type)

a. Attach the 2 claws to install the protector.

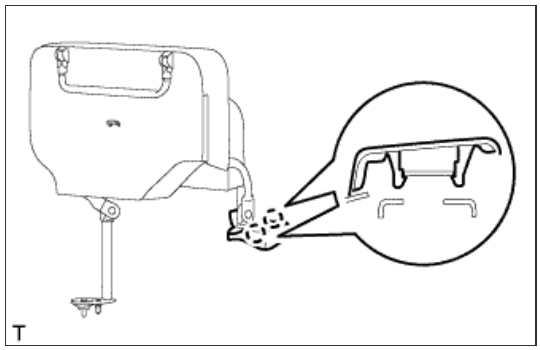

10. INSTALL REAR NO. 2 SEAT ASSEMBLY (except Face to Face Seat Type)


a. Temporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.

b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

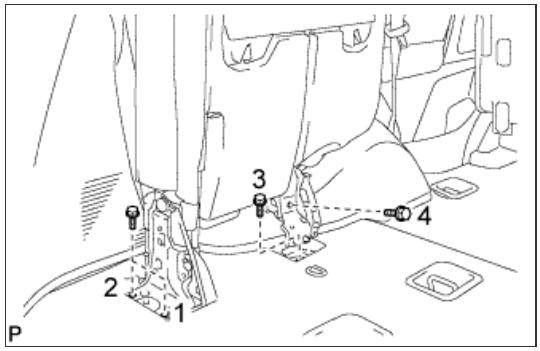

11. INSTALL REAR NO. 2 SEAT HINGE COVER LH (except Face to Face Seat Type)

a. Attach the clip and 2 claws to install the cover.


12. INSTALL REAR SEAT CUSHION HINGE COVER LH (except Face to Face Seat Type)

a. Attach the 3 claws to install the cover.

b. Return the seat to the upright position.

13. INSTALL REAR NO. 2 SEAT HEADREST ASSEMBLY LH (except Face to Face Seat Type)

for Preparation Click here

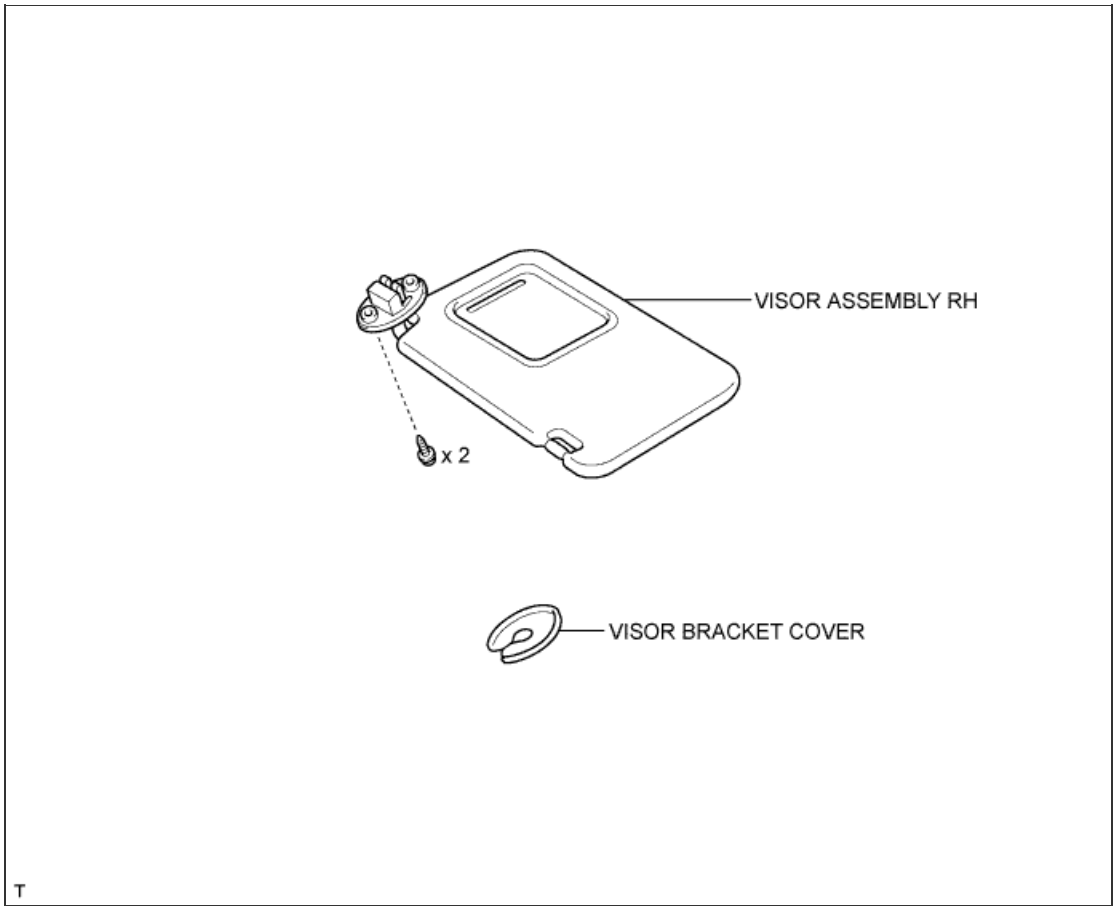


for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH side.**
- **The procedures listed below are for the RH side.**


1. REMOVE VISOR BRACKET COVER

a. Detach the 4 claws and remove the visor bracket cover.

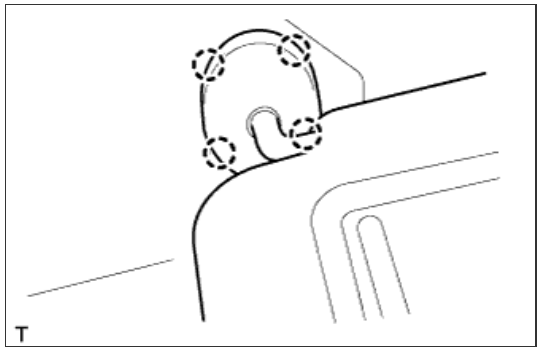

2. REMOVE VISOR ASSEMBLY RH

a. Remove the 2 screws and visor.

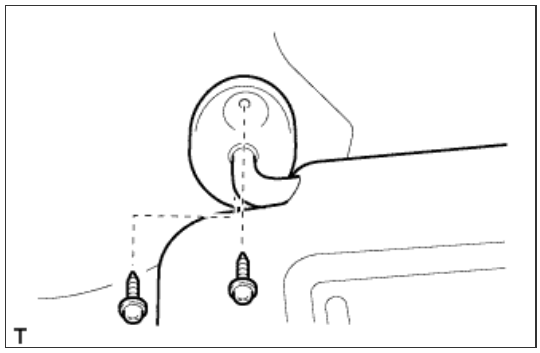


for Preparation Click here

1. INSPECT VISOR ASSE YLRH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
2 (SW) - 1 (GND)	Visor raised	10 kΩ or higher
2 (SW) - 1 (GND)	Visor lowered and mirror cover closed	10 kΩ or higher
2 (SW) - 1 (GND)	Visor lowered and mirror cover open	Below 1 Ω

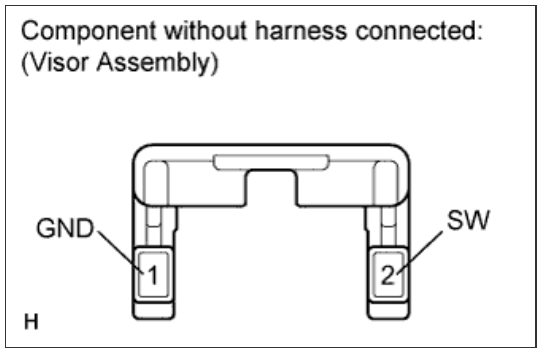


If the result is not as specified, there may be a malfunction in the visor assembly.

2. INSPECT VISOR ASSE YLLH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
2 (SW) - 1 (GND)	Visor raised	10 kΩ or higher
2 (SW) - 1 (GND)	Visor lowered and mirror cover closed	10 kΩ or higher
2 (SW) - 1 (GND)	Visor lowered and mirror cover open	Below 1 Ω

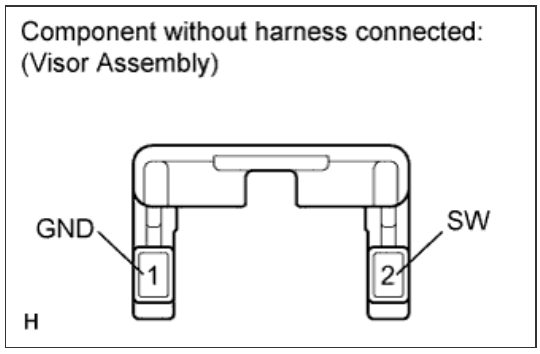

If the result is not as specified, there may be a malfunction in the visor assembly.


for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH side.**
- **The procedures listed below are for the RH side.**


1. INSTALL VISOR ASSEMBLY RH

a. Install the visor with the 2 screws.

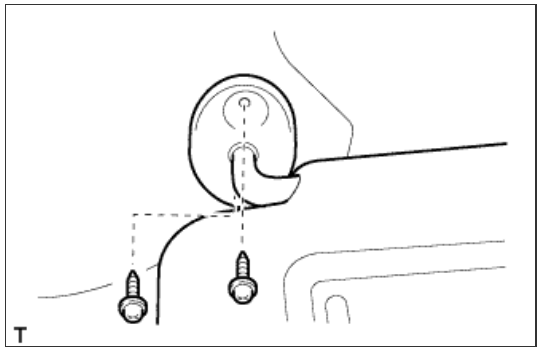


2. INSTALL VISOR BRACKET COVER

a. Attach the 4 claws to install the visor bracket cover.

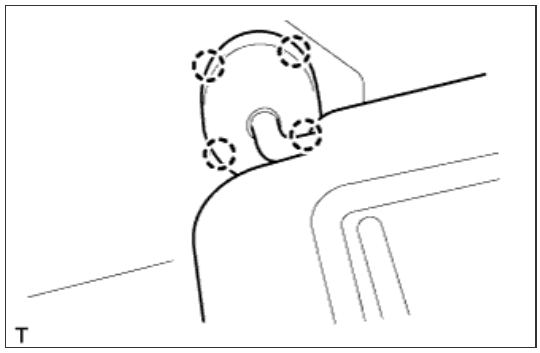

for Preparation Click here

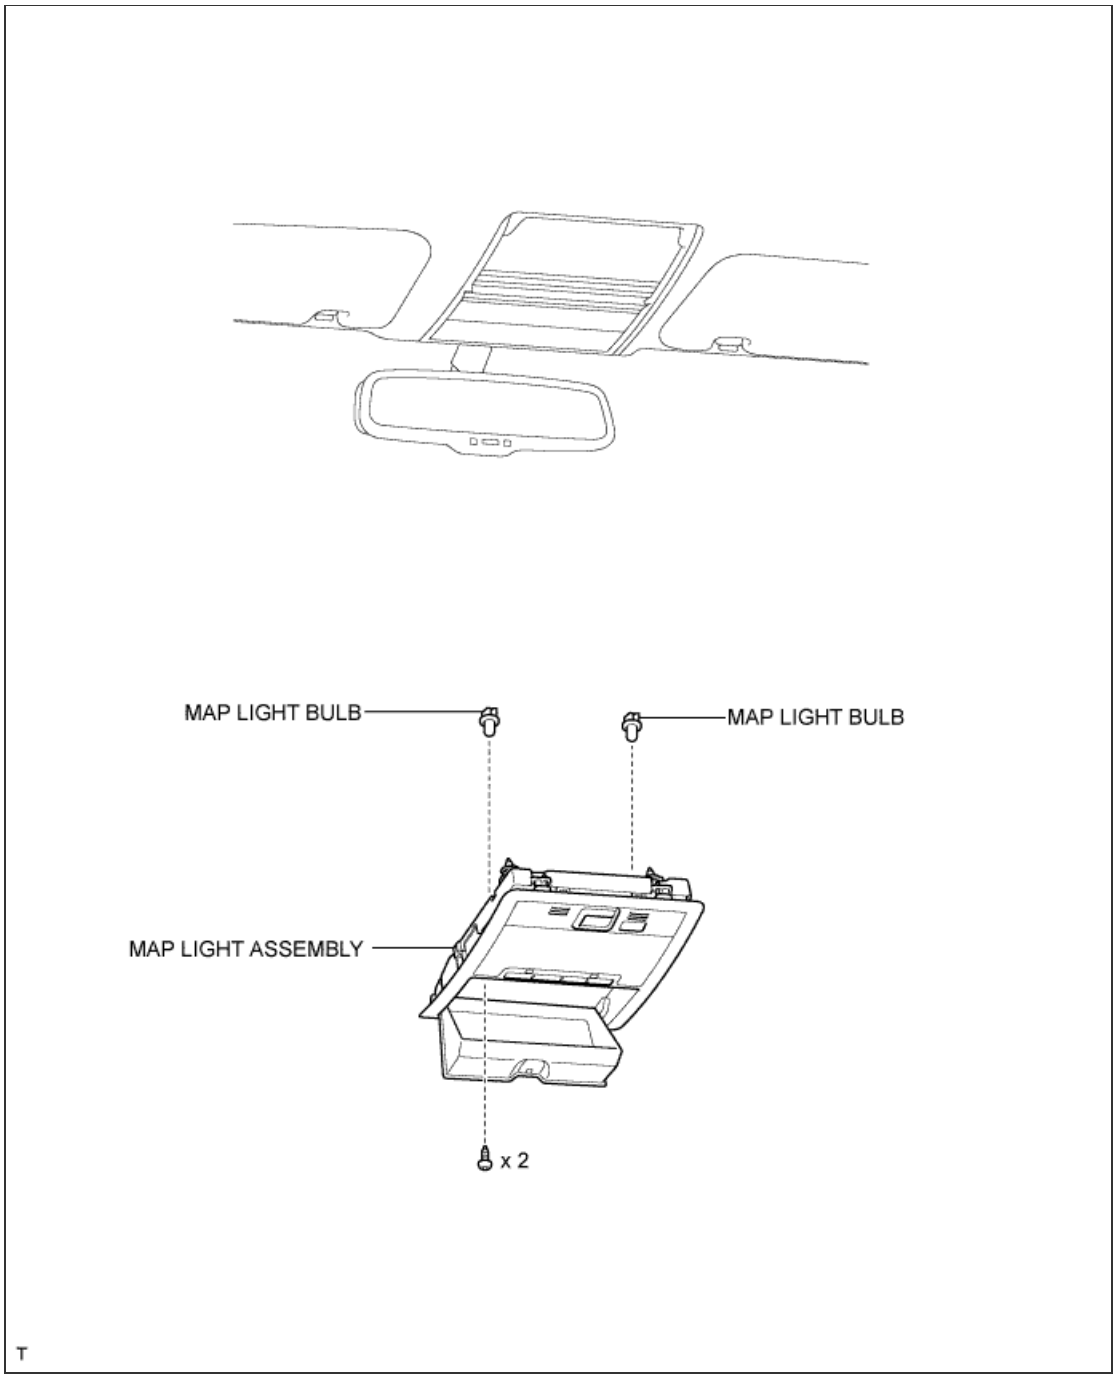

for Preparation Click here


1. CHECK MAP LIGHT ASSEMBLY

a. Remove the map light with the connector connected.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
R7-6 (RILL) - R7-17 (GND9)	Rear dome light off	11 to 14 V
	Rear dome light on	Below 1 V
R7-10 (ILL-) - R7-17 (GND9)	Headlight dimmer switch off	11 to 14 V
	Headlight dimmer switch on	Below 1 V
R7-13 (ILL+) - R7-17 (GND9)	Engine switch on (ACC)	11 to 14 V
R7-15 (+B) - R7-17 (GND9)	Always	11 to 14 V
R7-16 (DOME) - R7-17 (GND9)	Always	11 to 14 V

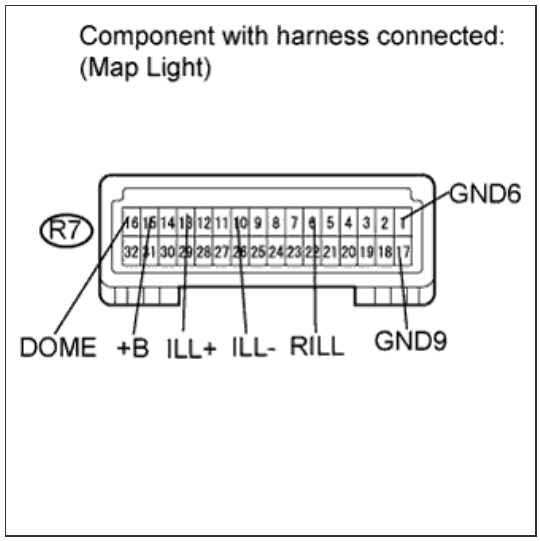

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
R7-1 (GND6) - Body ground	Always	Below 1 Ω
R7-17 (GND9) - Body ground	Always	Below 1 Ω

If the result is not as specified, replace the map light assembly.

for Preparation Click here

HINT:

When only replacing the room light bulbs, use the following procedures.

1. REMOVE MAP LIGHT ASSEMBLY (w/ Sliding Roof)

a. Using a screwdriver, detach the 2 claws and open the 2 covers.


HINT:

Tape the screwdriver tip before use.

b. Remove the 2 screws.

c. Detach the 2 clips and 2 guides.

d. Disconnect the connector and then remove the map light

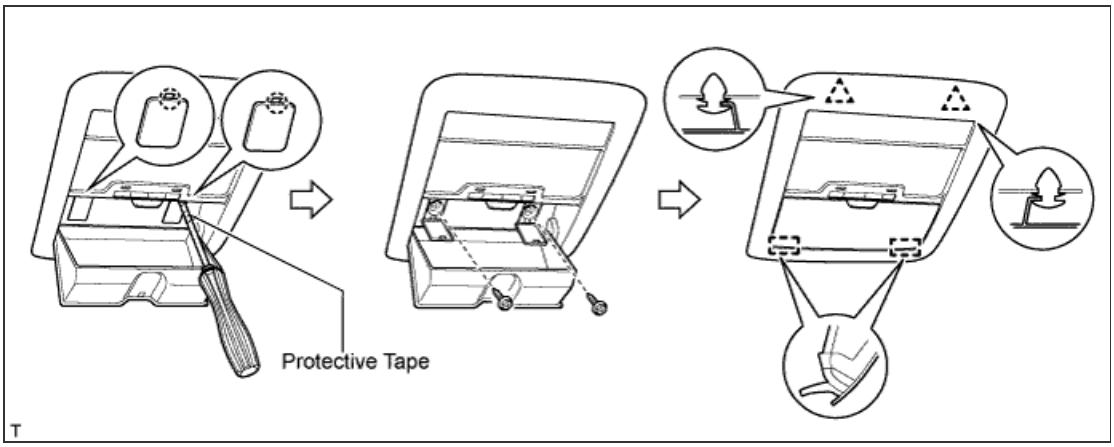

2. REMOVE MAP LIGHT ASSEMBLY (w/o Sliding Roof)

a. sing a screwdriver, detach the 2 claws and open the 2 covers.


HINT:

Tape the screwdriver tip before use.

b. Remove the 2 screws.


c. Detach the 2 clips and 2 guides.

d. Disconnect the connector and then remove the map light

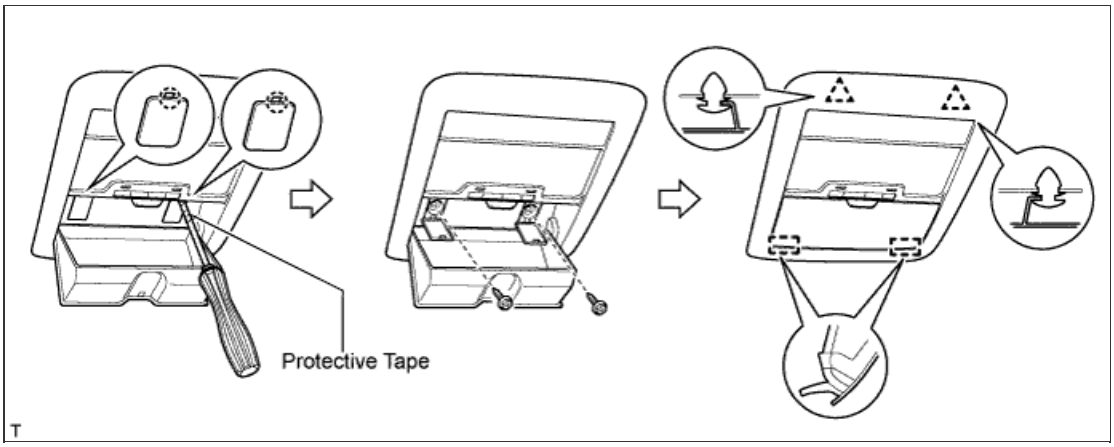

3. REMOVE MAP LIGHT BULB

a. Turn the 2 map light bulbs in the direction indicated by the arrows and remove them.

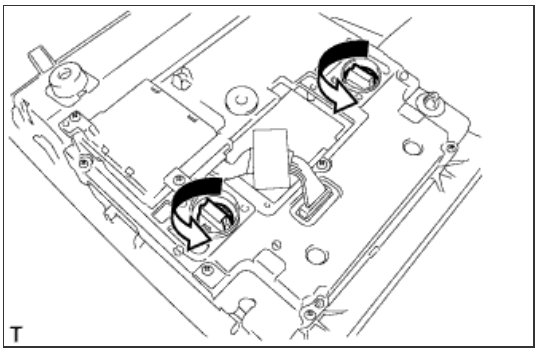

for Preparation Click here

HINT:

When only replacing the room light bulbs, use the following procedures.

1. REMOVE MAP LIGHT ASSEMBLY (w/ Sliding Roof)

a. Using a screwdriver, detach the 2 claws and open the 2 covers.


HINT:

Tape the screwdriver tip before use.

b. Remove the 2 screws.

c. Detach the 2 clips and 2 guides.

d. Disconnect the connector and then remove the map light

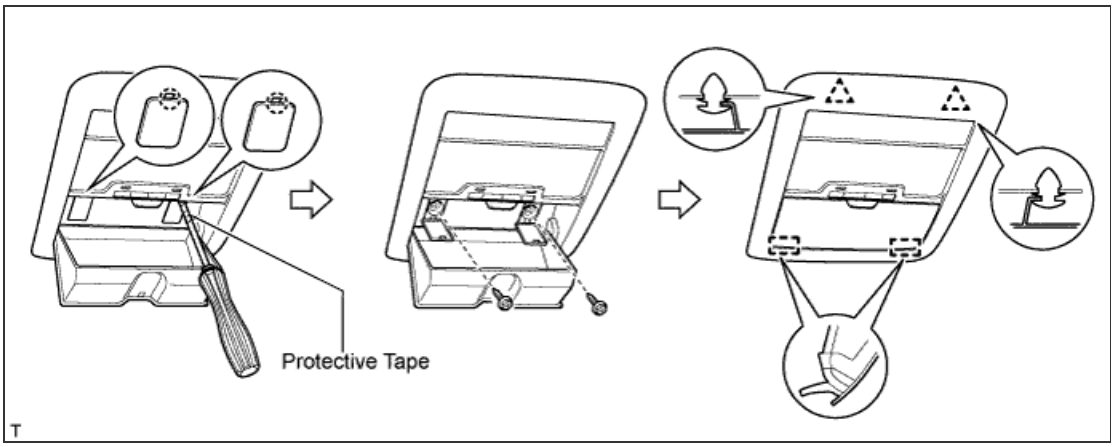

2. REMOVE MAP LIGHT ASSEMBLY (w/o Sliding Roof)

a. sing a screwdriver, detach the 2 claws and open the 2 covers.


HINT:

Tape the screwdriver tip before use.

b. Remove the 2 screws.


c. Detach the 2 clips and 2 guides.

d. Disconnect the connector and then remove the map light

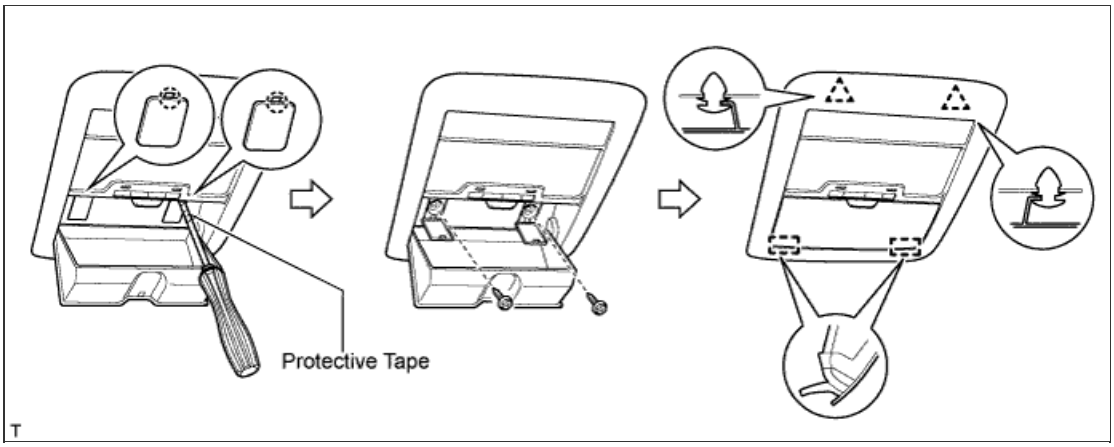

3. REMOVE MAP LIGHT BULB

a. Turn the 2 map light bulbs in the direction indicated by the arrows and remove them.

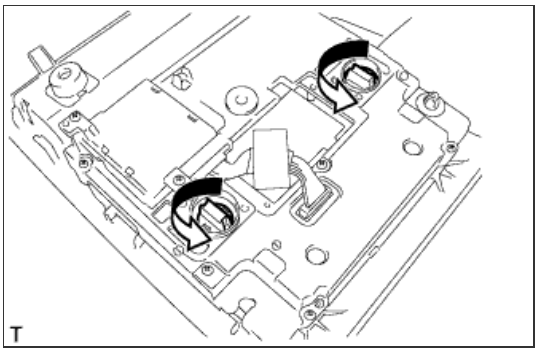


for Preparation Click here

HINT:

When only replacing the room light bulbs, use the following procedures.

1. INSTALL MAP LIGHT BULB

a. Turn the 2 map light bulbs in the direction indicated by the arrow to install them.

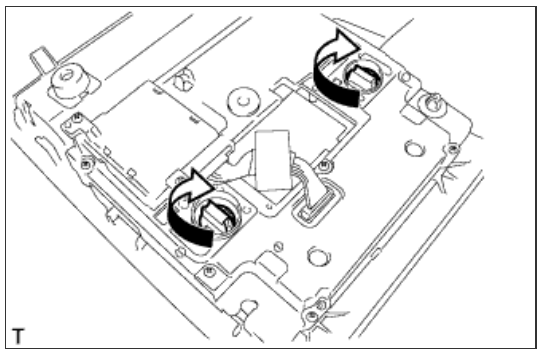


2. INSTALL MAP LIGHT ASSEMBLY (w/ Sliding Roof)

a. Connect the connector.

b. Attach the 2 clips and 2 guides to install the map light

c. nstall the 2 screws.

d. Attach the 2 claws to close the 2 co ers.

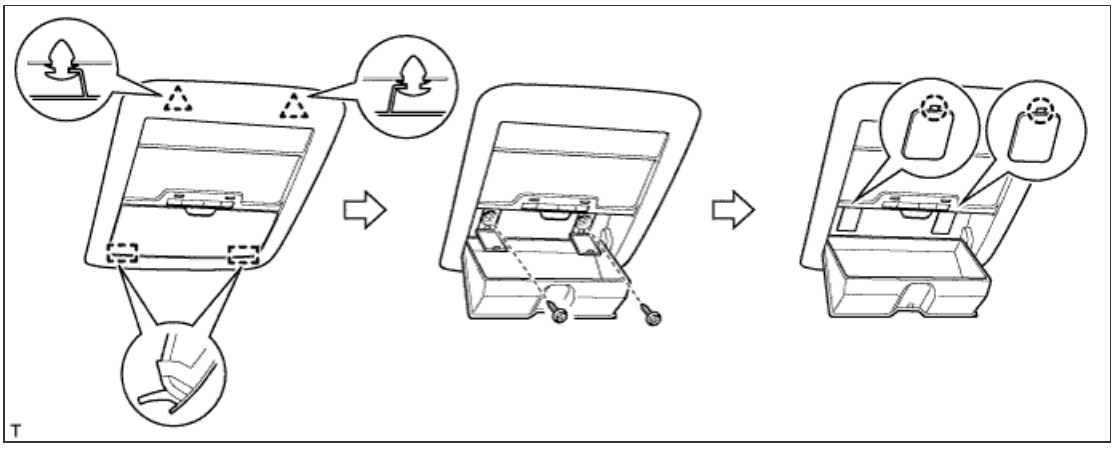


3. INSTALL MAP LIGHT ASSEMBLY (w/o Sliding Roof)

a. Connect the connector.

b. Attach the 2 clips and 2 guides to install the map light

c. nstall the 2 screws.

d. Attach the 2 claws to close the 2 co ers.

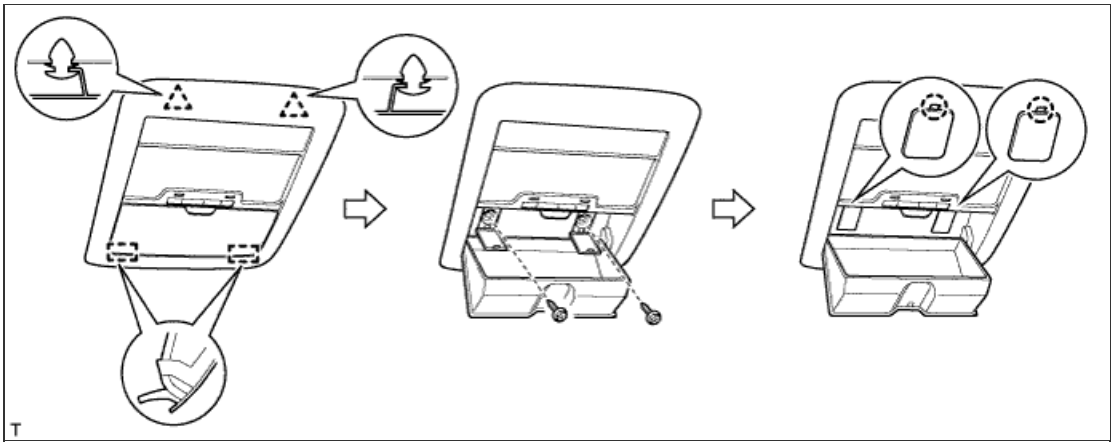


for Preparation Click here

HINT:

When only replacing the room light bulbs, use the following procedures.

1. INSTALL MAP LIGHT BULB

a. Turn the 2 map light bulbs in the direction indicated by the arrow to install them.

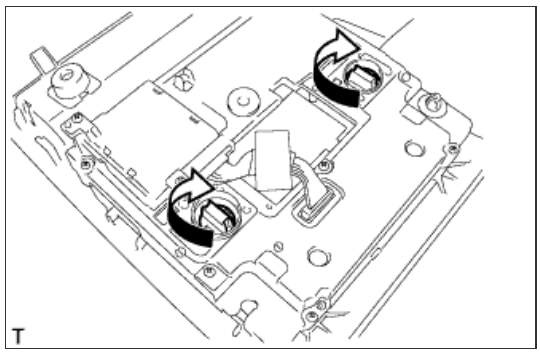


2. INSTALL MAP LIGHT ASSEMBLY (w/ Sliding Roof)

a. Connect the connector.

b. Attach the 2 clips and 2 guides to install the map light

c. nstall the 2 screws.

d. Attach the 2 claws to close the 2 co ers.

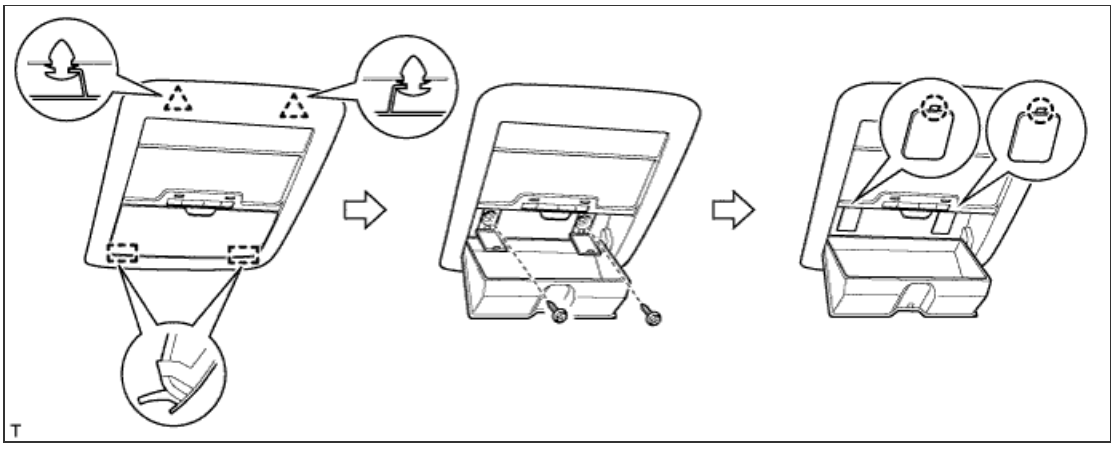


3. INSTALL MAP LIGHT ASSEMBLY (w/o Sliding Roof)

a. Connect the connector.

b. Attach the 2 clips and 2 guides to install the map light


c. nstall the 2 screws.

d. Attach the 2 claws to close the 2 co ers.

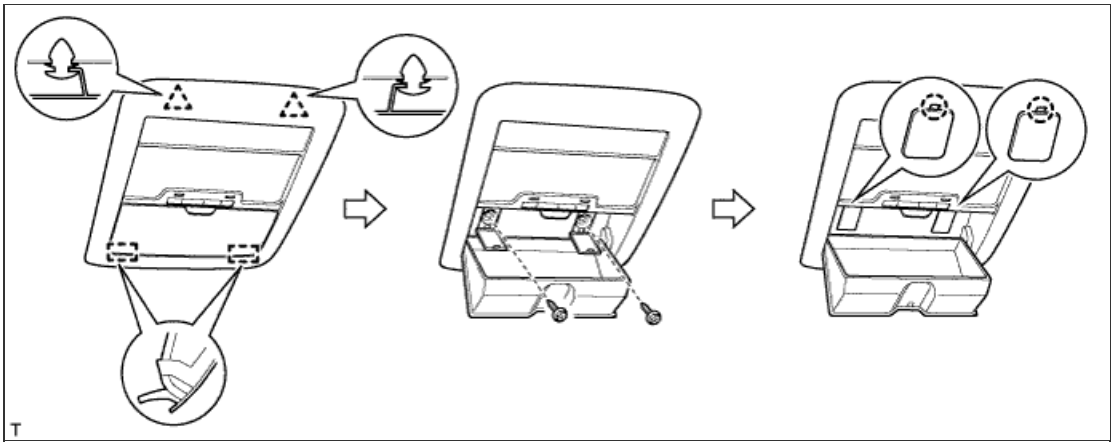


for Preparation Click here

w/o Rear Seat Entertainment System:

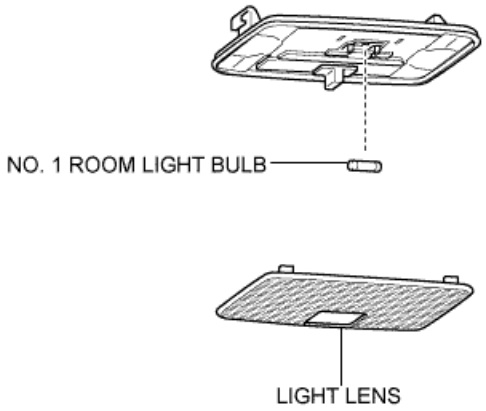

T

w/ Rear Seat Entertainment System:

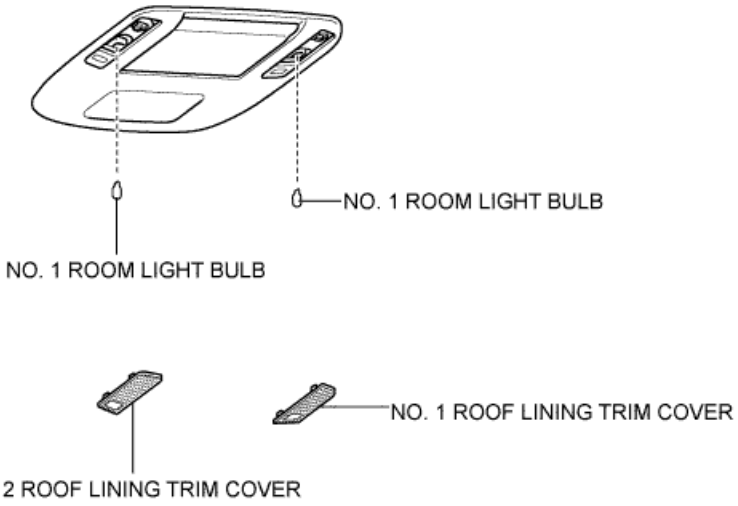

T


for Preparation Click here

HINT:


When only replacing the room light bulb, use the following procedures.

1. REMOVE NO. 1 ROOM LIGHT BULB (w/o Rear Seat Entertainment System)

a. Detach the claws and remove the light lens.

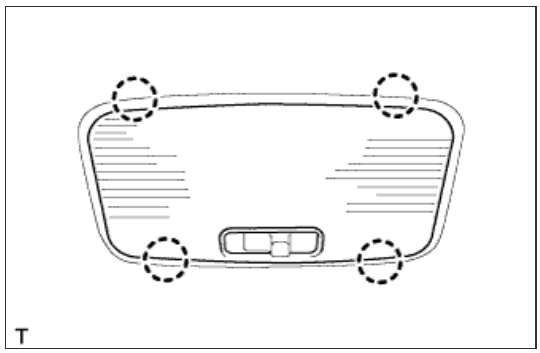


b. emove the bulb.

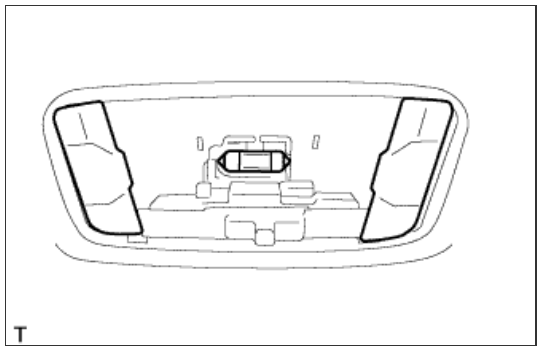


2. REMOVE NO. 1 ROOF LINING TRIM COVER (w/ Rear Seat Entertainment System)

a. Detach the claws and remove the room light trim cover.

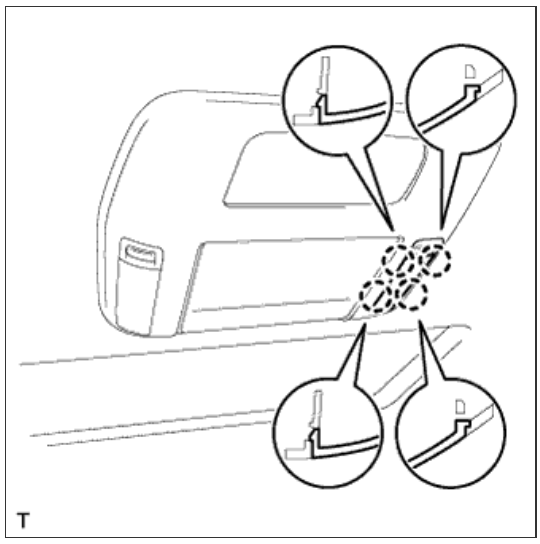


3. REMOVE NO. 2 ROOF LINING TRIM COVER (w/ Rear Seat Entertainment System)

a. Detach the claws and remove the room light trim cover.

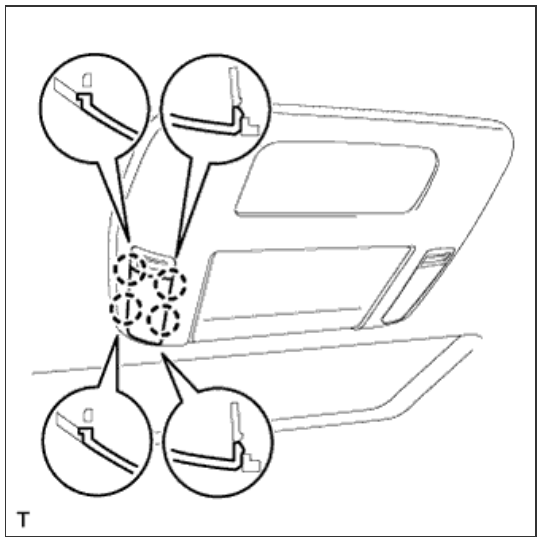

4. REMOVE NO. 1 ROOM LIGHT ASSEMBLY (w/ Rear Seat Entertainment System)

a. emove the 2 bulbs.

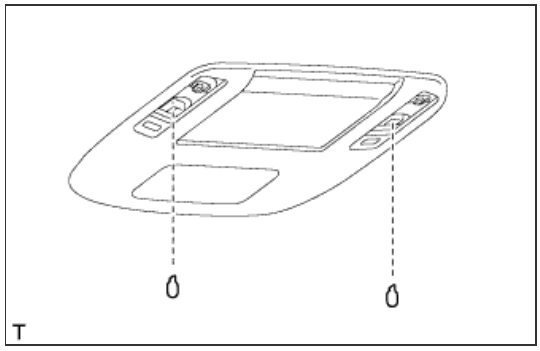


for Preparation Click here

HINT:


When only replacing the room light bulb, use the following procedures.

1. INSTALL NO. 1 ROOM LIGHT BULB (w o Rear Seat Entertainment System)

a. nstall the bulb.

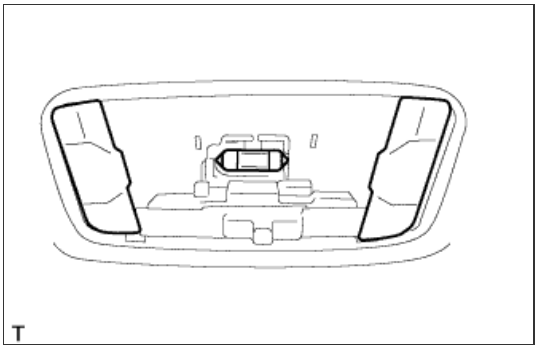


b. Attach the claws to install the light lens.

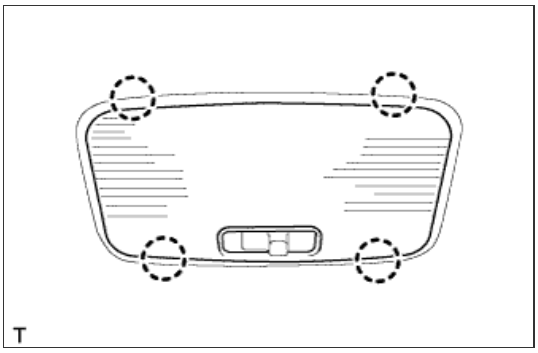


2. INSTALL NO. 1 ROOM LIGHT ASSEMBLY (w Rear Seat Entertainment System)

a. nstall the 2 bulbs.

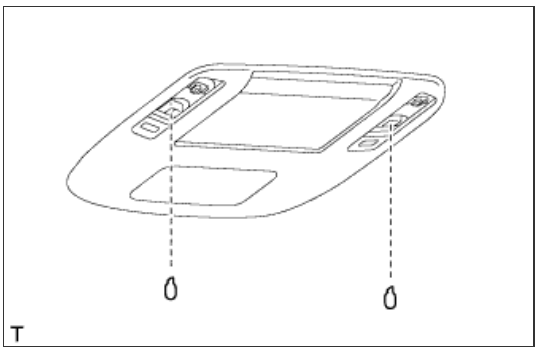


. INSTALL NO. 1 ROO LINING TRIM CO ER (w Rear Seat Entertainment System)

a. Attach the claws to install the room light trim cover.

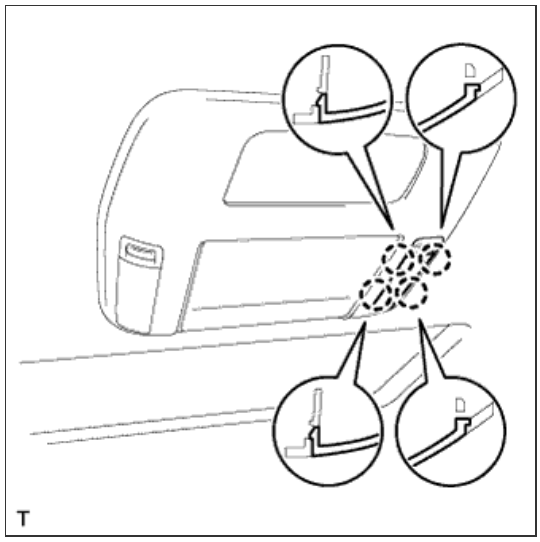


. INSTALL NO. 2 ROO LINING TRIM CO ER (w Rear Seat Entertainment System)

a. Attach the claws to install the room light trim cover.

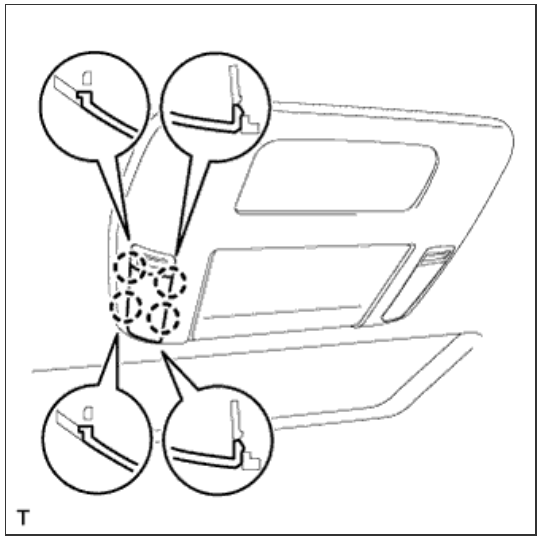

for Preparation Click here

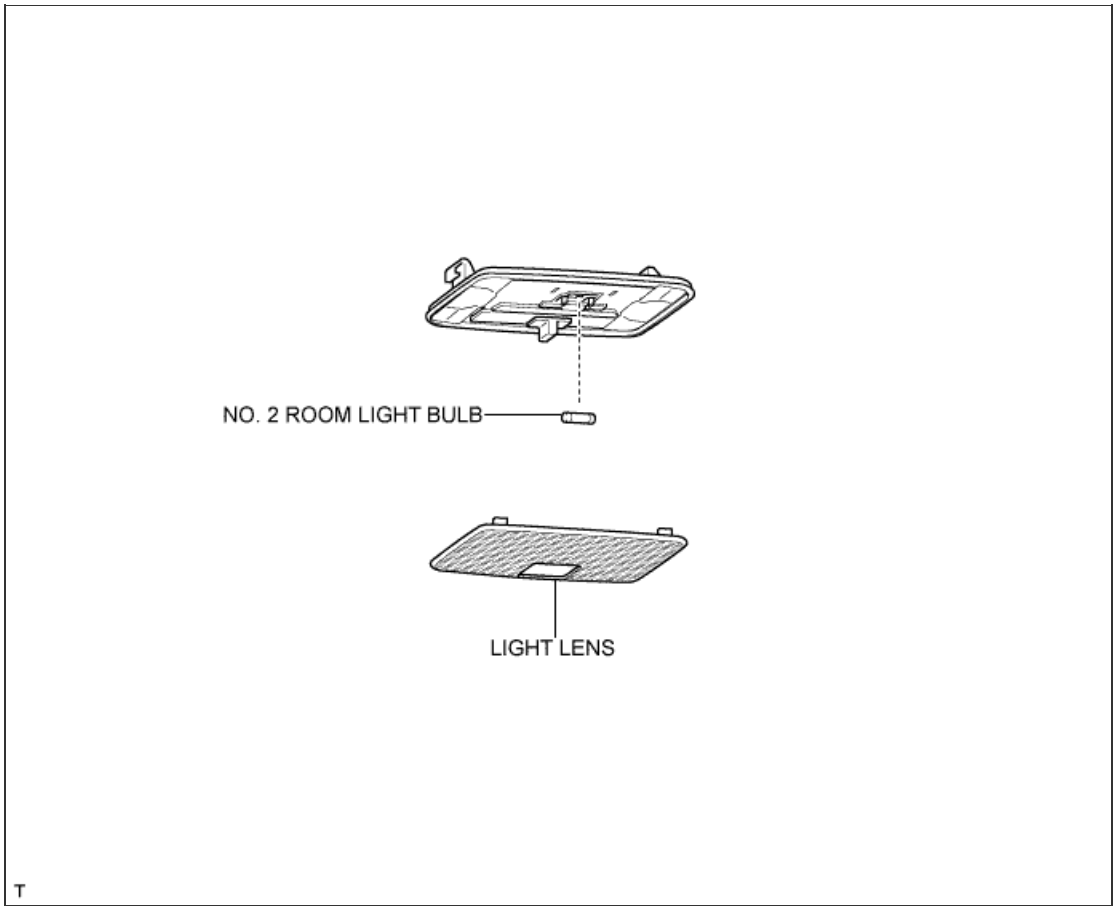


for Preparation Click here

HINT:


When only replacing the room light bulb, use the following procedures.

1. REMOVE NO. ROOM LIGHT BULB

a. Detach the claws and remove the light lens.

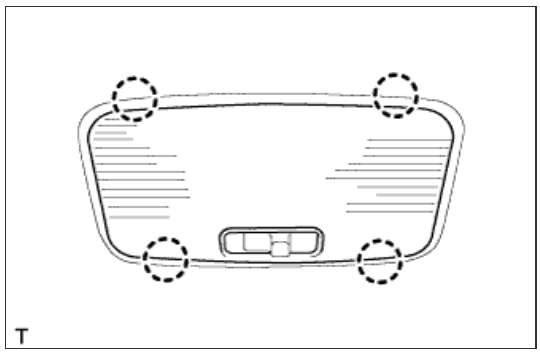

b. emove the bulb.

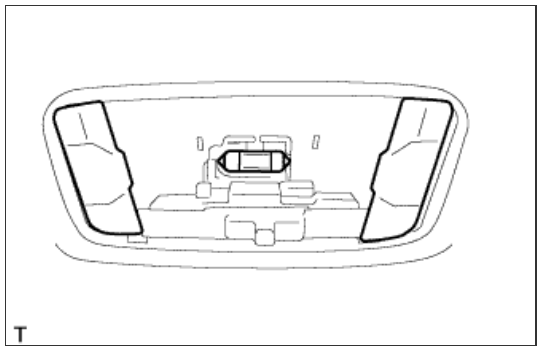


for Preparation Click here

HINT:


When only replacing the room light bulb, use the following procedures.

1. INSTALL NO. 2 ROOM LIGHT BULB


a. nstall the bulb.

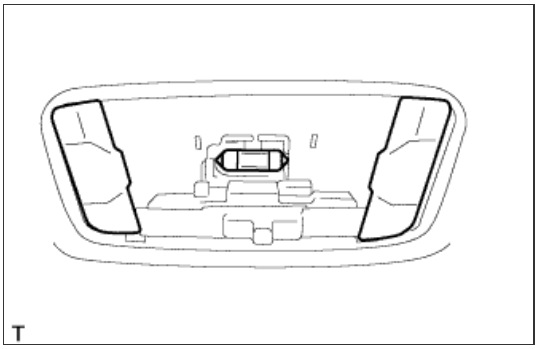

b. Attach the claws to install the light lens.

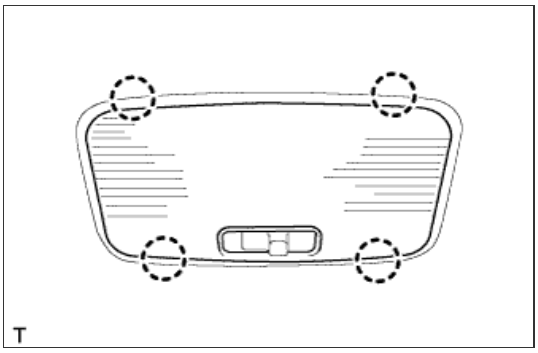

for Preparation Click here

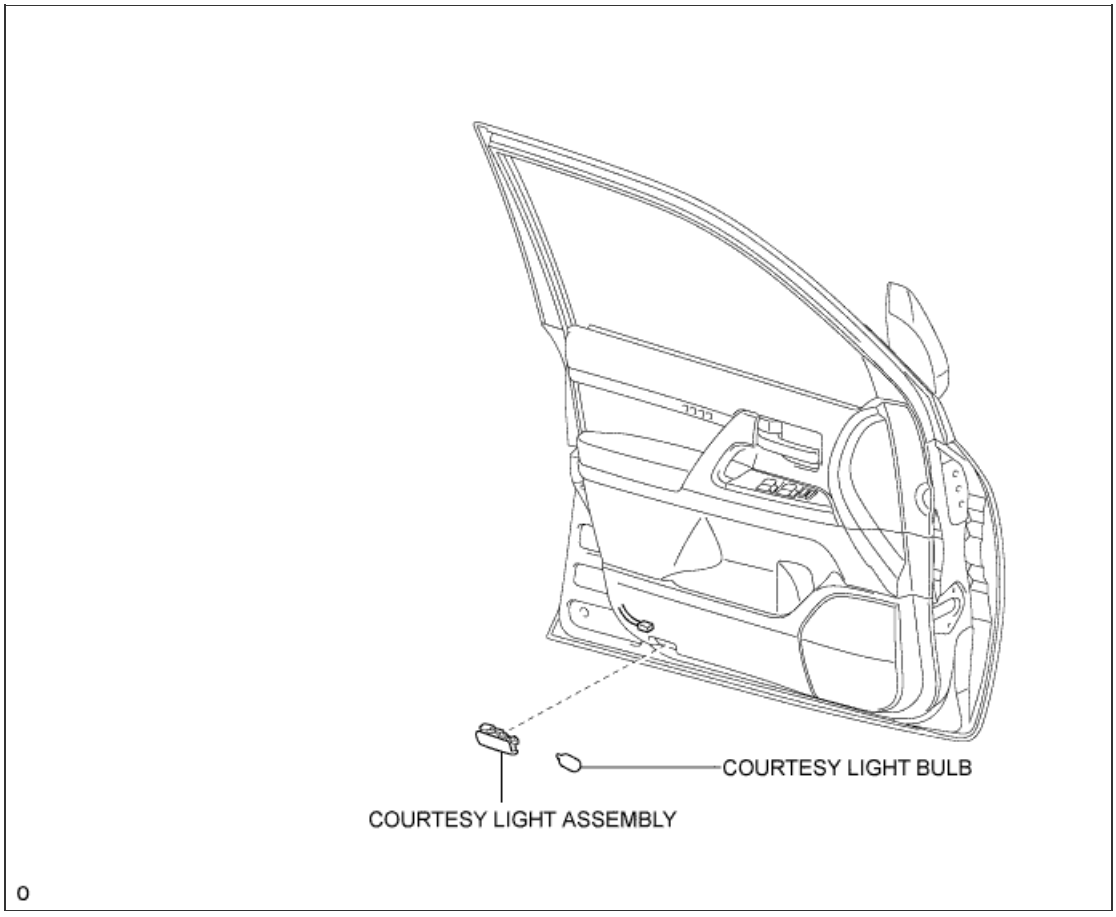

for Preparation Click here


HINT:

- **Use the same procedures for the RH and LH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE COURTESY LIGHT ASSEMBLY

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

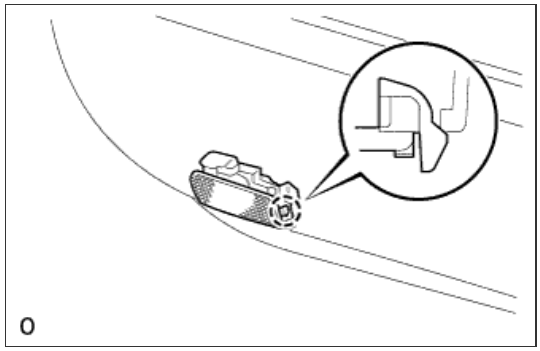

2. REMOVE COURTESY LIGHT BULB

a. Remove the bulb.

for Preparation Click here

1. INSPECT COURTESY LIGHT ASSEMBLY

a. Measure the resistance according to the value(s) in the table below.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 2 Battery negative (-) → Terminal 1	Light illuminates

If the result is not as specified, replace the courtesy light assembly.

Component without harness connected:
(Door Courtesy Light)



for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH side.**
- **The procedures listed below are for the LH side.**


1. INSTALL COURTESY LIGHT BULB

a. Install the bulb.


2. INSTALL COURTESY LIGHT ASSE BLY

a. Connect the connector.

b. Attach the claw of the courtesy light to the front door trim.

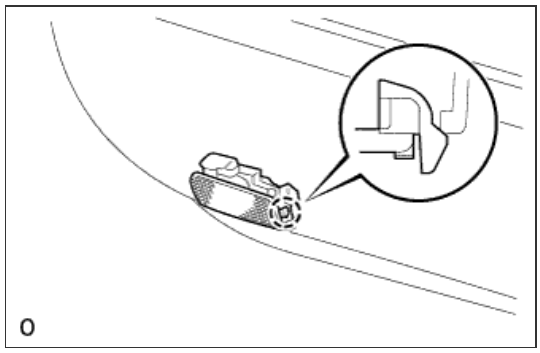

for Preparation Click here

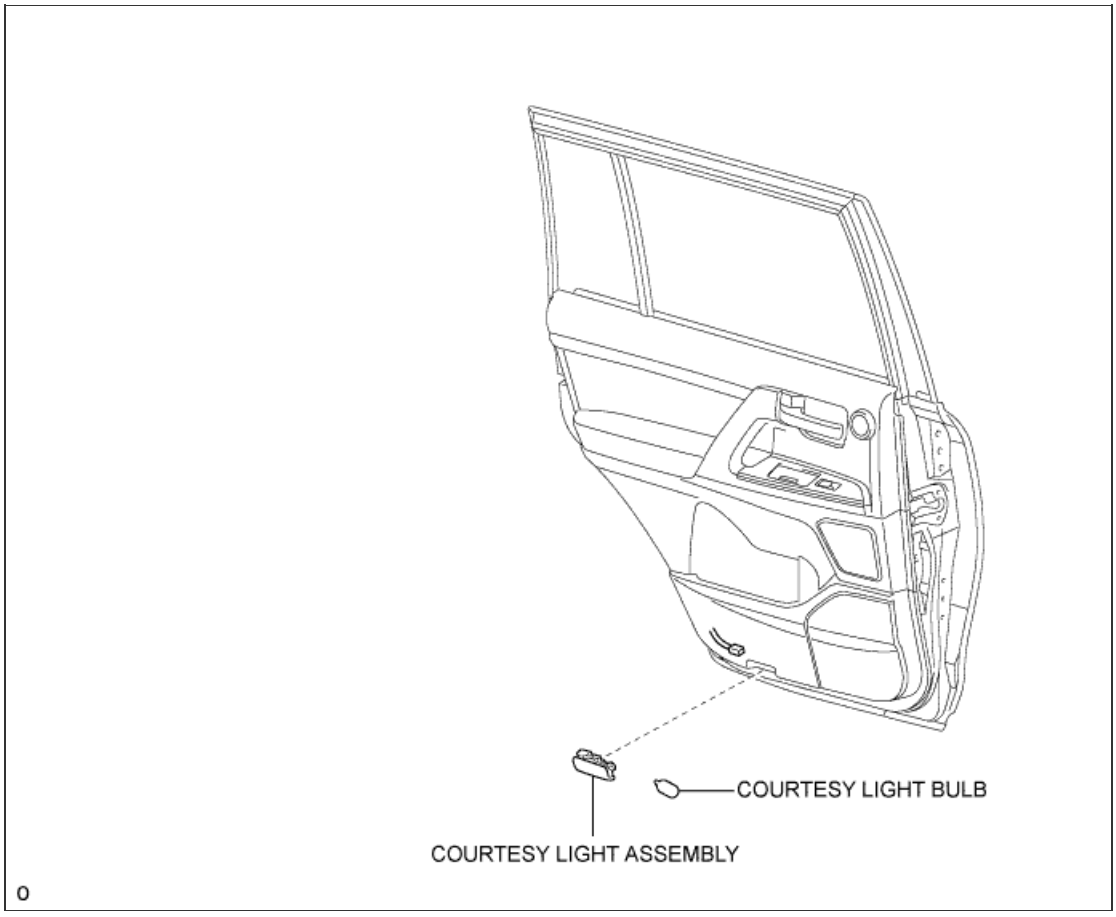

for Preparation Click here


HINT:

- **Use the same procedures for the RH and LH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE COURTESY LIGHT ASSEMBLY

a. Detach the claw.

b. Remove the courtesy light and then disconnect the connector.

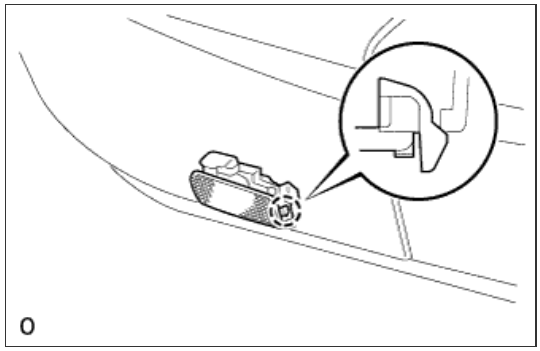

2. REMOVE COURTESY LIGHT BULB

a. Remove the bulb

for Preparation Click here

1. INSPECT COURTESY LIGHT ASSEMBLY

a. Measure the resistance according to the value(s) in the table below.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 2 Battery negative (-) → Terminal 1	Light illuminates

If the result is not as specified, replace the courtesy light assembly.

Component without harness connected:
(Door Courtesy Light)



for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH side.**
- **The procedures listed below are for the LH side.**


1. INSTALL COURTESY LIGHT BULB

a. Install the bulb.


2. INSTALL COURTESY LIGHT ASSEMBLY

a. Connect the connector.

b. Attach the claw of the courtesy light to the rear door trim.

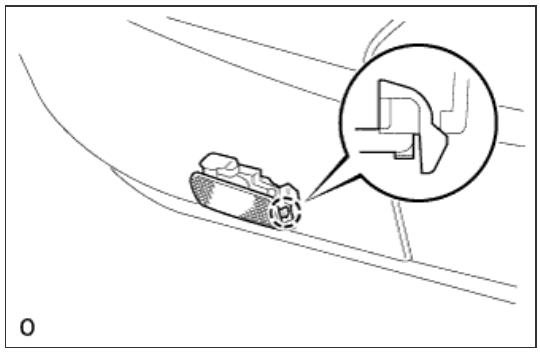

for Preparation Click here

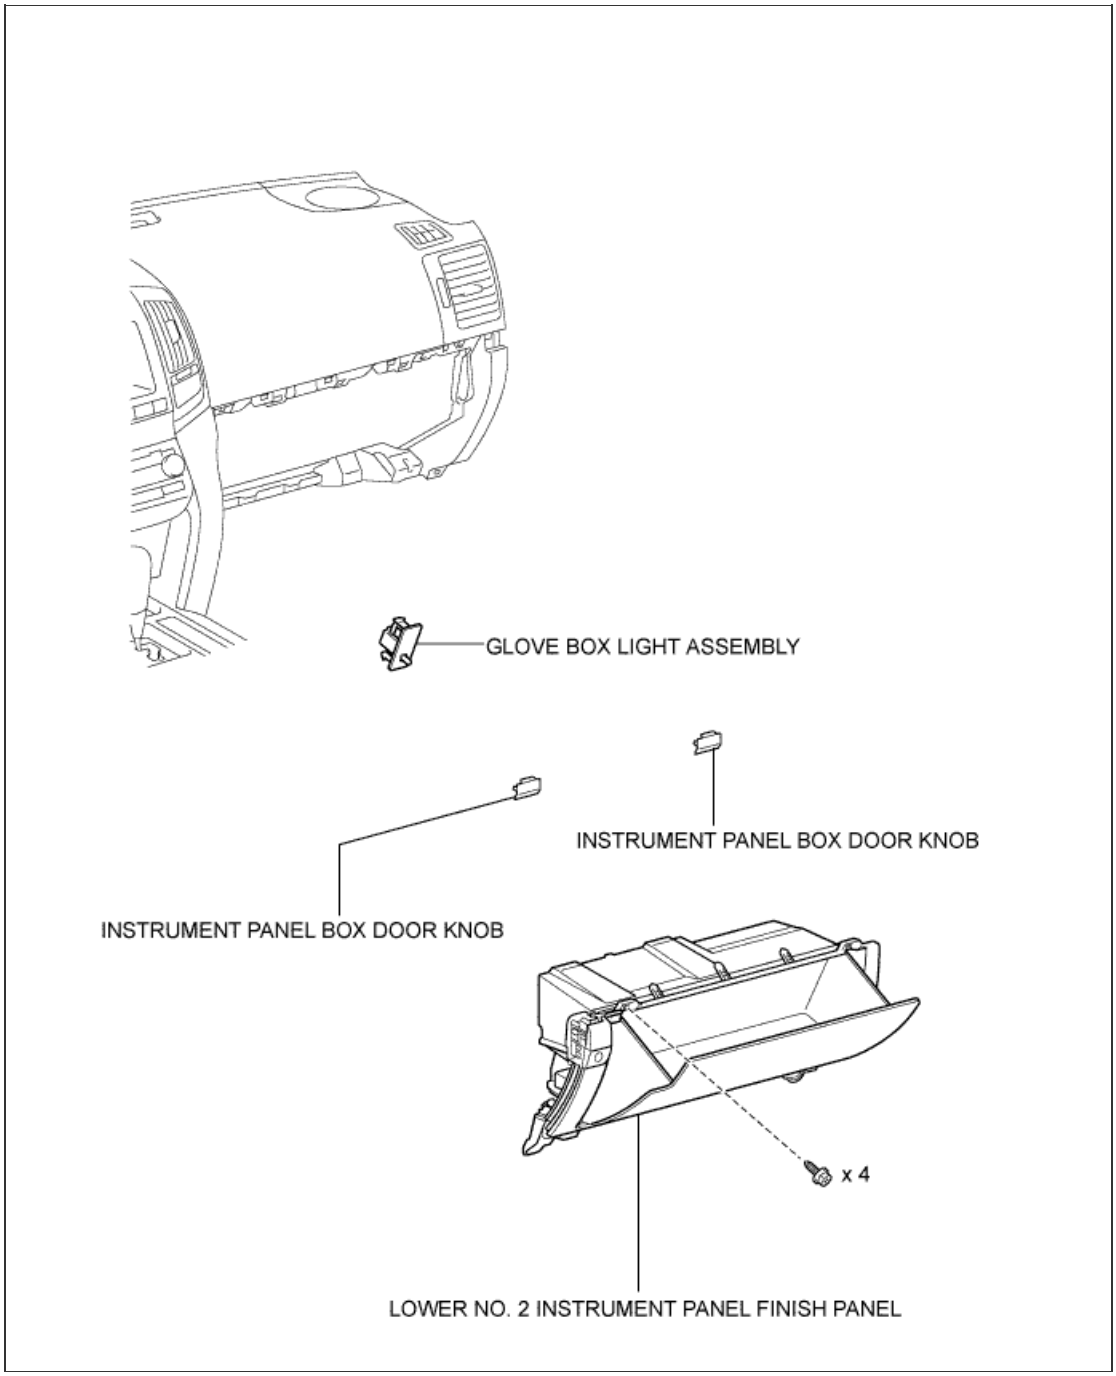

for Preparation Click here

HINT:


- **Use the same procedures for the RH and LH**
- **The procedures listed below are the LH side.**

1. REMOVE FRONT PA ENGER I KNEE AIRBAG A EMBLY

a. Remove the front passenger side knee airbag assembly (Cli k here).

2. REMOVE IN TRUMENT PANEL BOX OOR KNOB

a. sing a moulding remover, deta h the 2 la s and remove the knob.

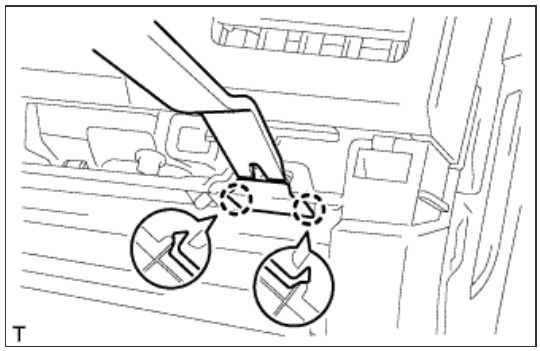


3. REMOVE LO ER NO. 2 IN TRUMENT PANEL FINI H PANEL

a. Remove the 4 bolts.


b. Deta h the 3 la s.

c. Remove the finish panel and then dis onne t the onne tor.

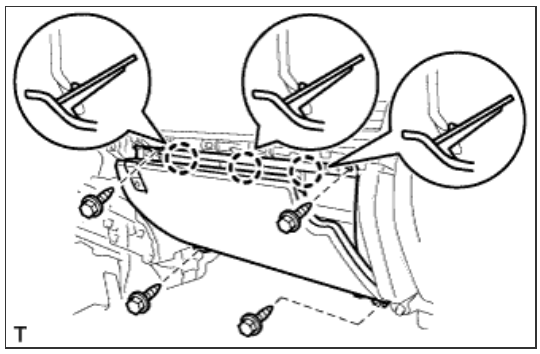

. REMOVE GLOVE BOX LIGHT A EMBLY

a. Remove the 2 s re s and glove bo light.

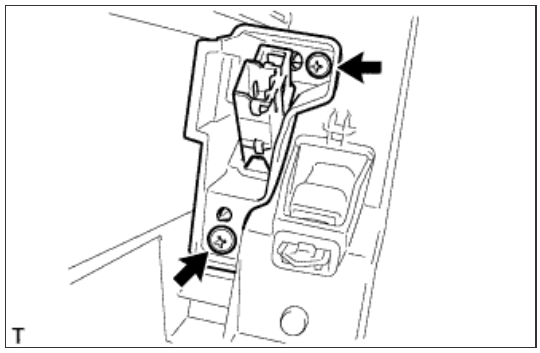
T

for Preparation Click here

HINT:


- **Use the same procedures for the RH and LH**
- **The procedures listed below are the LH side.**

1. REMOVE FRONT PA ENGER I KNEE AIRBAG A EMBLY

a. Remove the front passenger side knee airbag assembly (Cli k here).

2. REMOVE IN TRUMENT PANEL BOX OOR KNOB

a. sing a moulding remover, deta h the 2 la s and remove the knob.

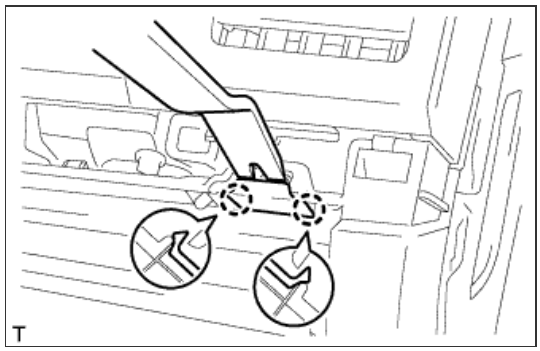


3. REMOVE LO ER NO. 2 IN TRUMENT PANEL FINI H PANEL

a. Remove the 4 bolts.


b. Deta h the 3 la s.

c. Remove the finish panel and then dis onne t the onne tor.

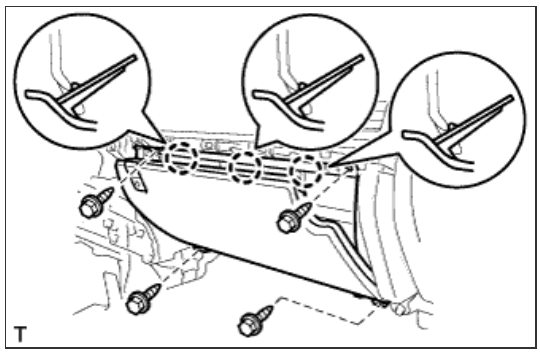

. REMOVE GLOVE BOX LIGHT A EMBLY

a. Remove the 2 s re s and glove bo light.

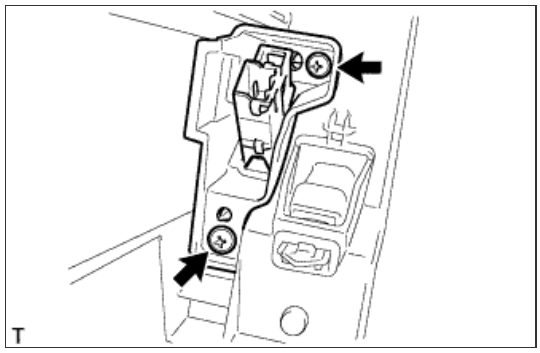
T

for Preparation Click here


1. INSPECT GLOVE BOX LIGHT ASSEMBLY

a. Apply battery voltage to the connector, and check the LED illumination condition.

OK:

Measurement Condition	Switch Condition	Specified Condition
Battery positive (+) → Terminal 1 (B) Battery positive (-) → Terminal 2 (E)	Not pushed	Light illuminates

If the result is not as specified, there may be a malfunction in the glove box light assembly.

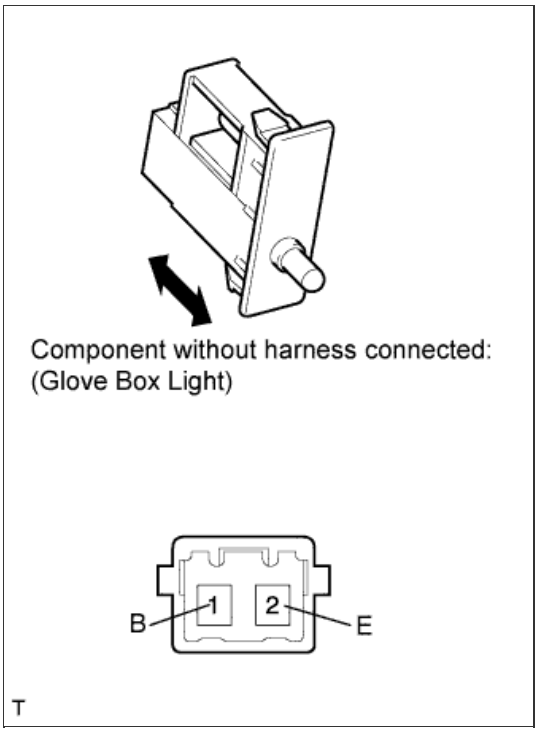


for Preparation Click here

HINT:

- **Use the same procedures for the H and LH**
- **The procedures listed below are the LH side.**

1. INSTALL GLOVE BOX LIGHT ASSE BLY

a. Install the glove box light with the 2 screws.

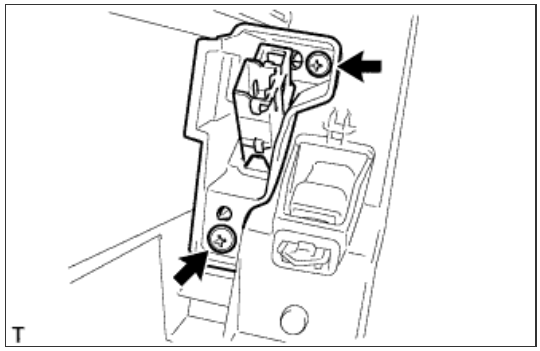


2. INSTALL LO E NO. 2 INST U ENT PANEL INISH PANEL

a. Connect the connector.


b. Attach the 3 claws to install the finish panel.

c. Install the 4 bolts.

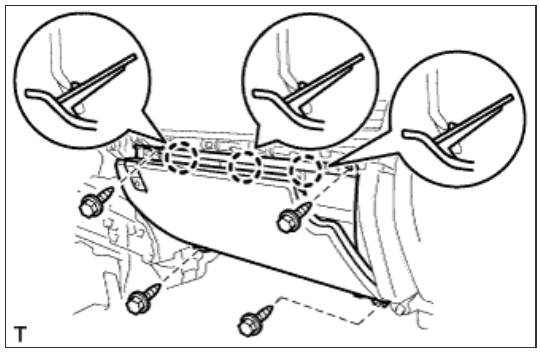

3. INSTALL INST U ENT PANEL BOX OO KNOB

a. Attach the 2 claws to install the knob.

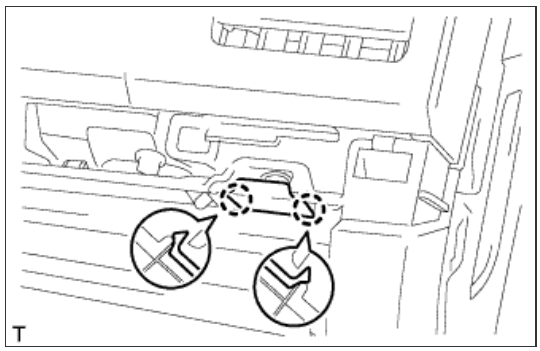

. INSTALL ONT PASSENGE SI E KNEE AI BAG ASSE BLY

a. Install the front passenger side knee airbag assembly (Click here).


for Preparation Click here

HINT:

- **Use the same procedures for the H and LH**
- **The procedures listed below are the LH side.**

1. INSTALL GLOVE BOX LIGHT ASSE BLY

a. Install the glove box light with the 2 screws.

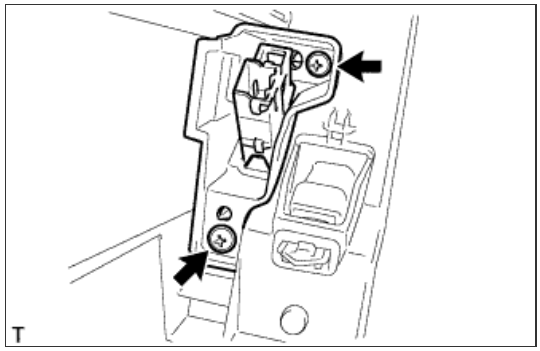


2. INSTALL LO E NO. 2 INST U ENT PANEL INISH PANEL

a. Connect the connector.


b. Attach the 3 claws to install the finish panel.

c. Install the 4 bolts.

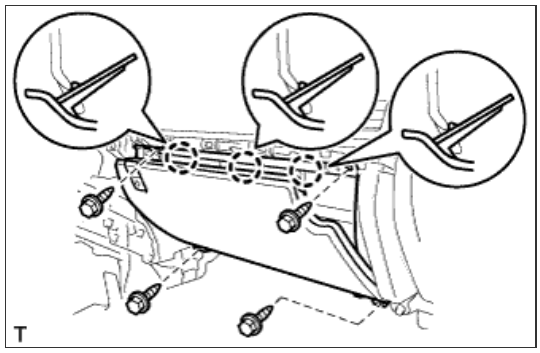

3. INSTALL INST U ENT PANEL BOX OO KNOB


a. Attach the 2 claws to install the knob.

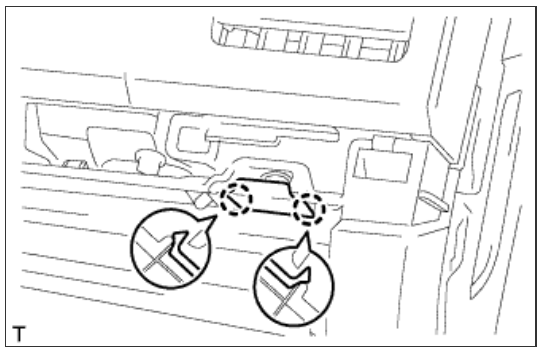

. INSTALL ONT PASSENGE SI E KNEE AI BAG ASSE BLY

a. Install the front passenger side knee airbag assembly (Click here).

for Preparation Click here

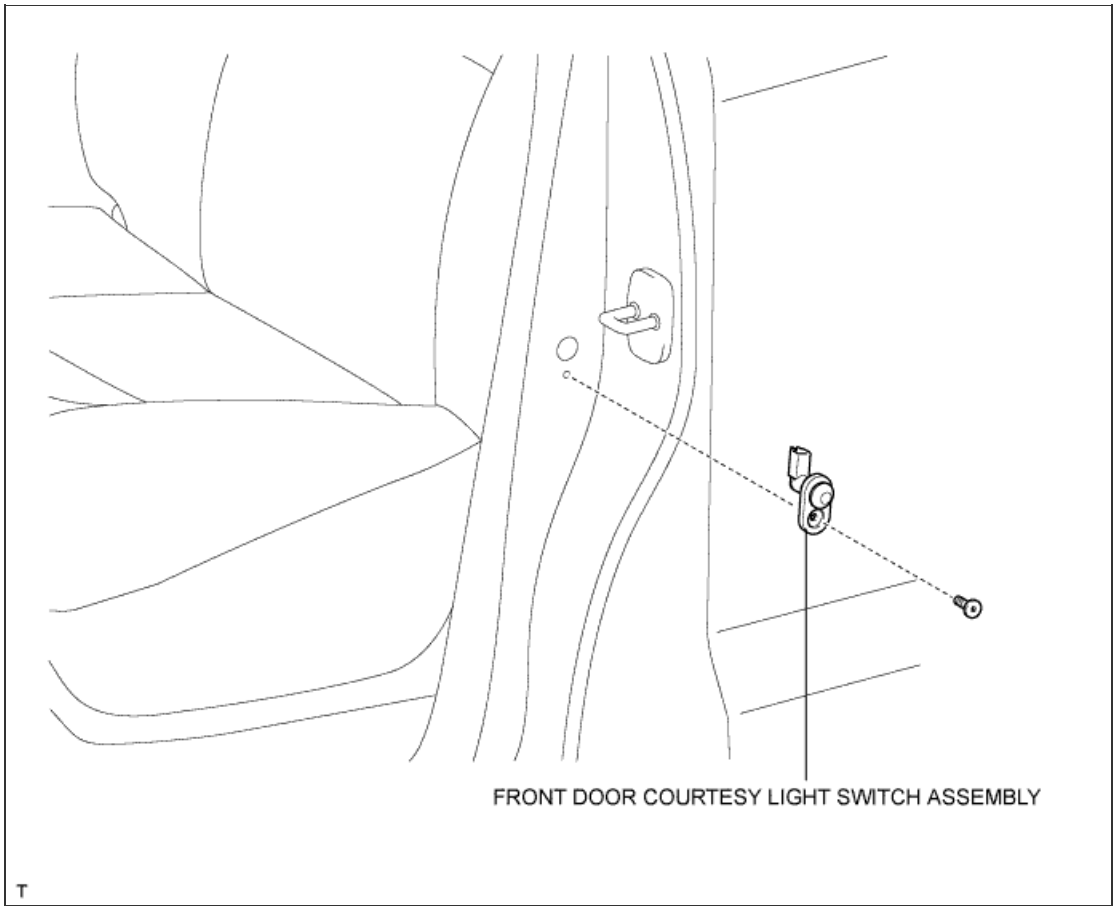


for Preparation Click here

1. REMOVE FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY

a. Using a T30 "TORX" socket wrench, remove the screw and switch.

b. Disconnect the connector.

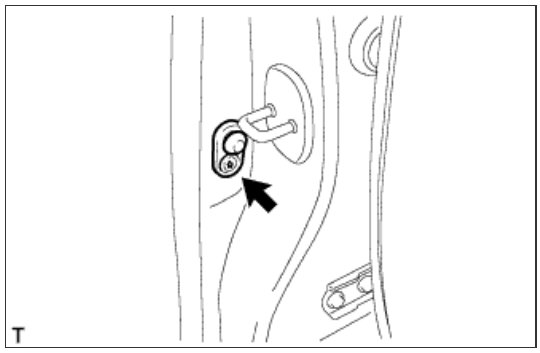

for Preparation Click here

1. INSPECT FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY


a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
1 - Body ground	Pin not pushed	Below 1 Ω
1 - Body ground	Pin pushed	10 kΩ or higher

If the result is not as specified, there may be a malfunction in the front door courtesy switch assembly.

Component without harness connected:
(Front Door Courtesy Switch)

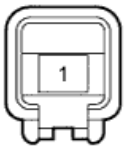


for Preparation Click here


1. INSTALL FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY

a. Connect the connector.

b. Using a T30 "TORX" socket wrench, install the switch with the screw.

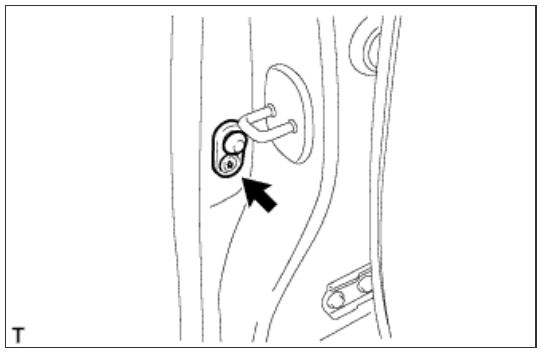

for Preparation [Click here]

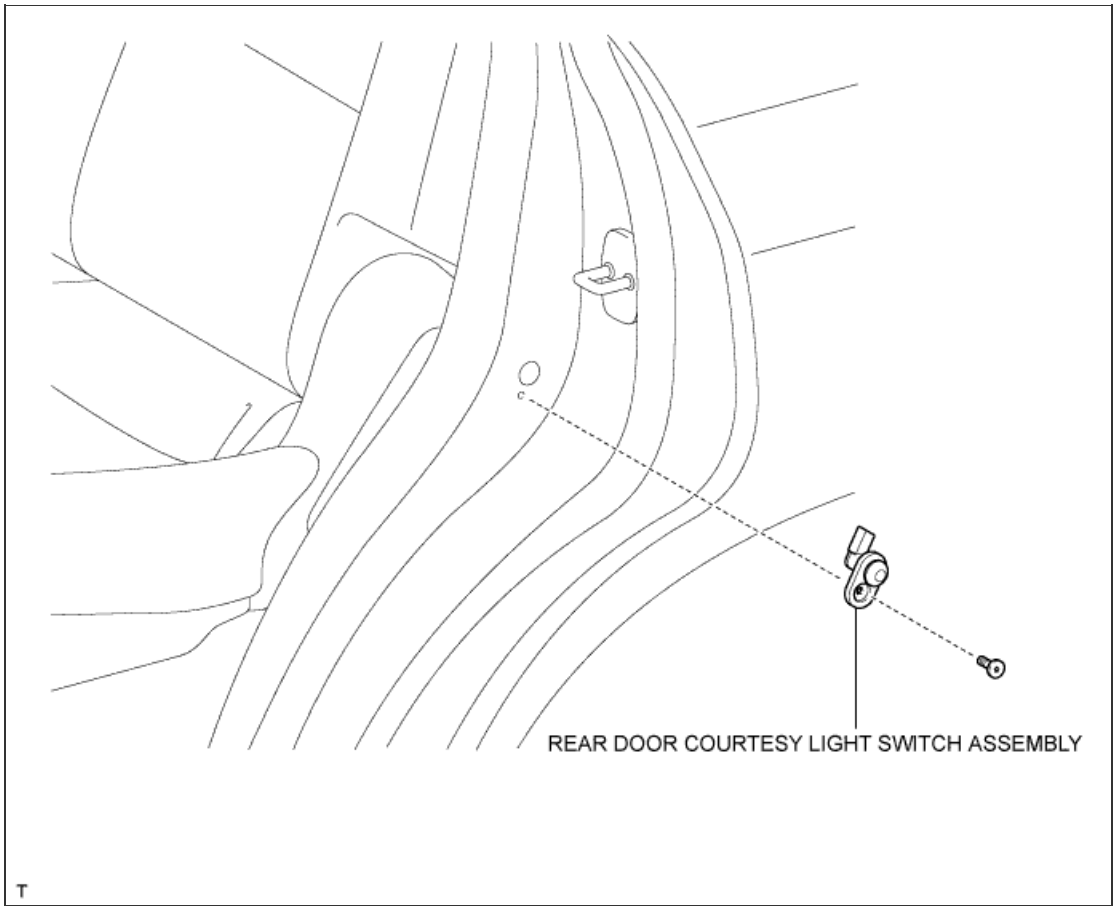


for Preparation Click here

1. REMOVE REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY

a. Using a T30 "TORX" socket wrench, remove the screw and switch.

b. Disconnect the connector.

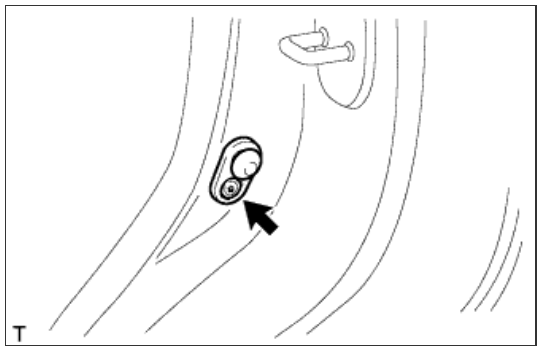

for Preparation Click here

1. INSPECT REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY


a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
1 - Body ground	Pin not pushed	Below 1 Ω
1 - Body ground	Pin pushed	10 kΩ or higher

If the result is not as specified, there may be a malfunction in the rear door courtesy switch assembly.

Component without harness connected:
(Rear Door Courtesy Switch)

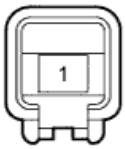


for Preparation Click here


1. INSTALL REAR DOOR COURTESY LIGHT SWITCH ASSEMBLY

a. Connect the connector.

b. Using a T30 "TORX" socket wrench, install the switch with the screw.

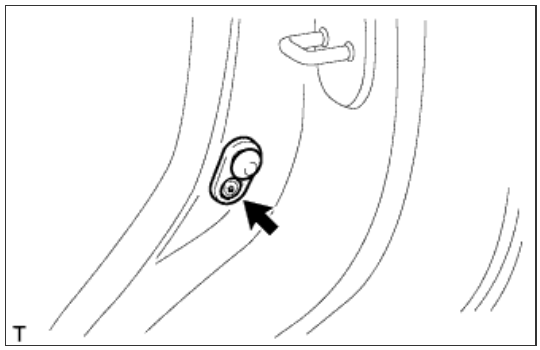


for Preparation Click here

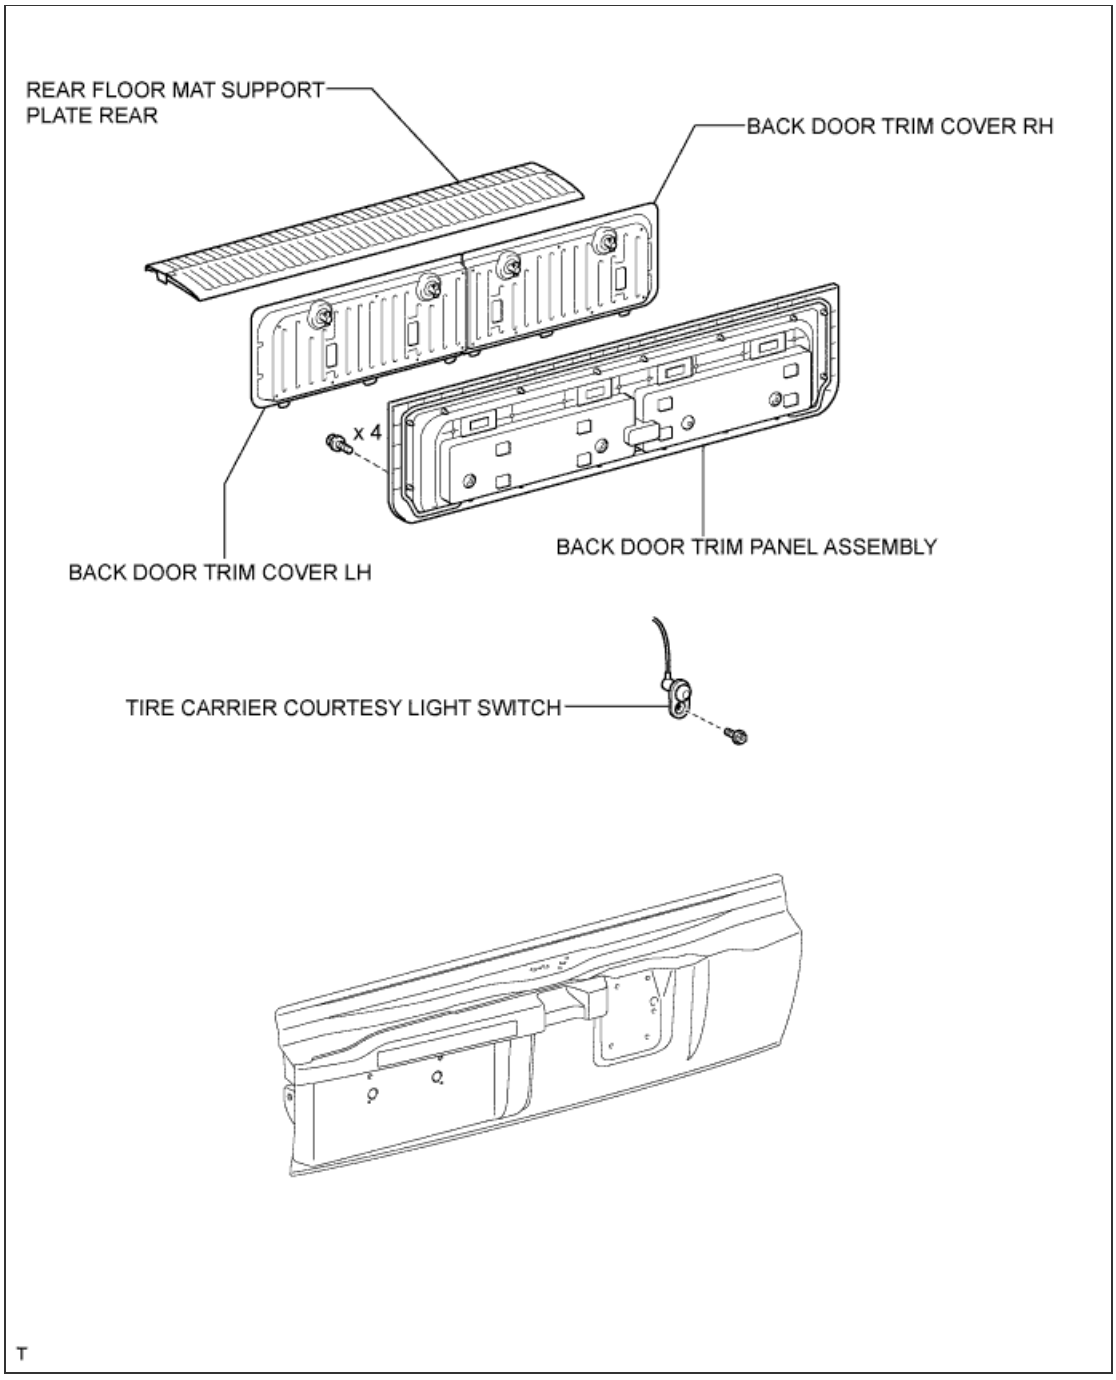

for Preparation Click here


1. REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (w/ Sliding Roof)

a. Detach the 6 clips and remove the support plate.

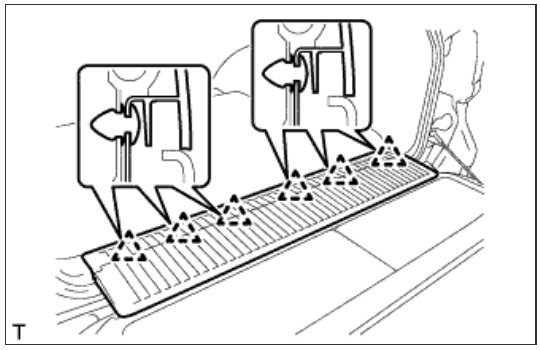


2. REMOVE REAR FLOOR MAT SUPPORT PLATE REAR (w/o Sliding Roof)

a. Detach the 6 clips and remove the support plate.

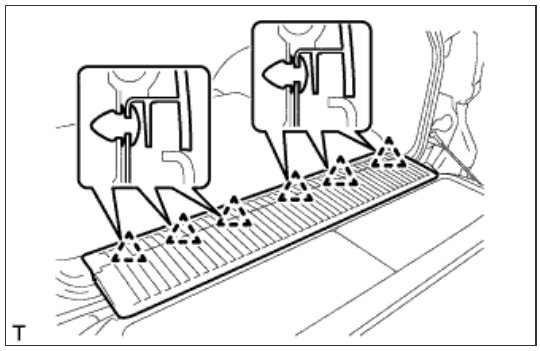


3. REMOVE BACK DOOR TRIM COVER LH

a. Remove the back door trim cover LH as shown in the illustration.

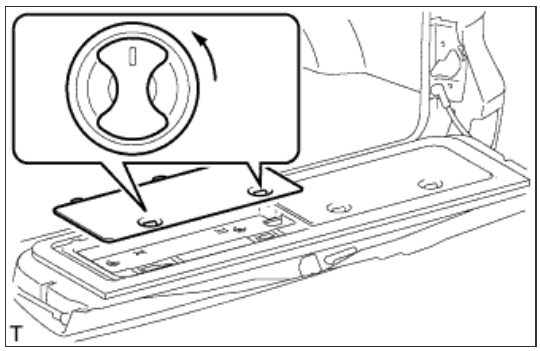

4. REMOVE BACK DOOR TRIM COVER RH


a. Remove the back door trim cover RH as shown in the illustration.

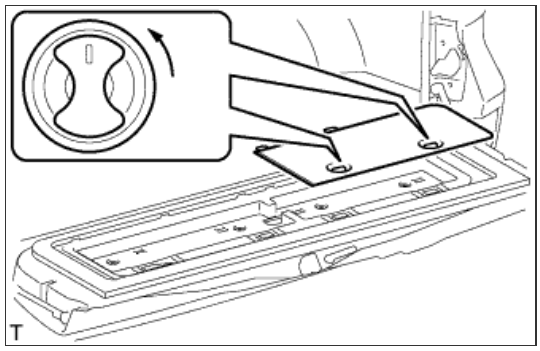

5. REMOVE BACK DOOR TRIM PANEL ASSEMBLY

a. Remove the bolts.


b. Detach the 6 clips and remove the back door trim panel.

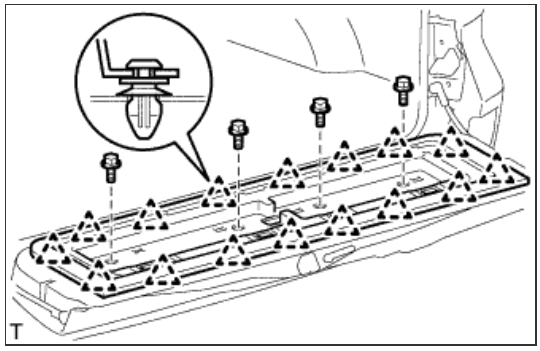

6. REMOVE TIRE CARRIER COURTESY LIGHT SWITCH

a. Disconnect the connector

b. Remove the bolt and switch.

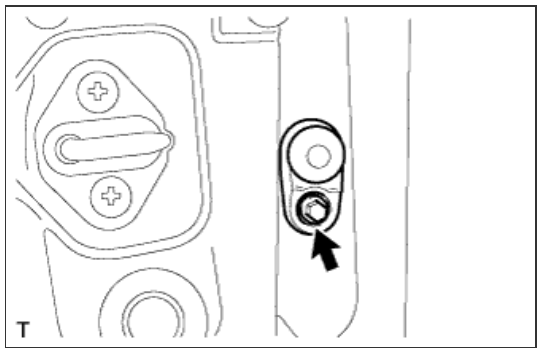

for Preparation Click here


1. INSPECT TIRE CARRIER COURTESY LIGHT SWITCH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
1 - Body ground	Pin not pushed	Below 1 Ω
1 - Ω	Pin pushed	10 kΩ or higher

If the result is not as specified, there may be a malfunction on the tire carrier courtesy switch.

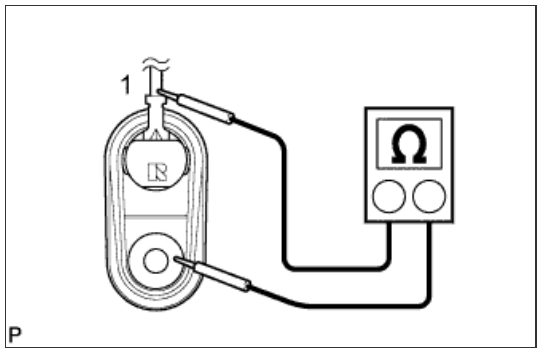


for Preparation Click here

1. INSTALL TIRE CARRIER COURTESY LIGHT SWITCH

a. Connect the connector.


b. Install the switch with the bolt.

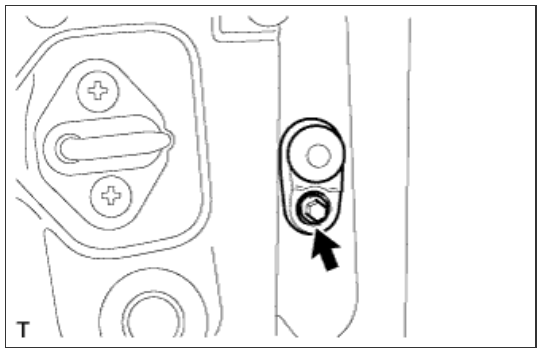

2. INSTALL BACK DOOR TRIM PANEL ASSEMBLY


a. Attach the 16 clips to install the back door trim panel.

b. Install the 4 bolts.

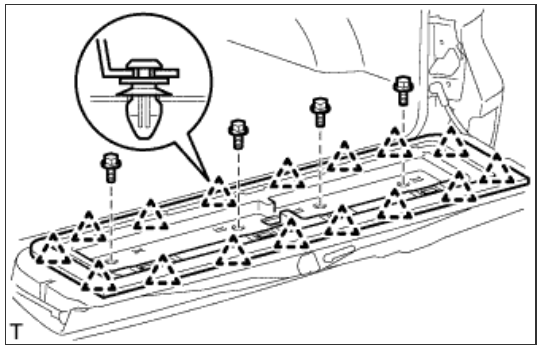


3. INSTALL BACK DOOR TRIM COVER RH

a. Install the back door trim cover RH as shown in the illustration.

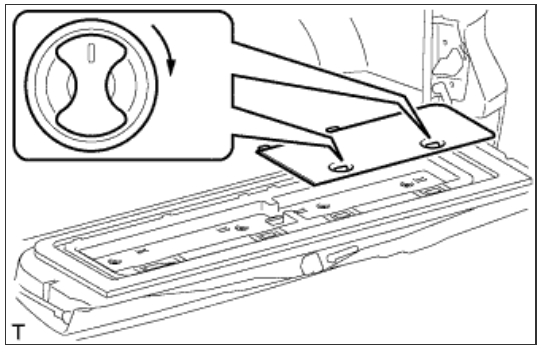


4. INSTALL BACK DOOR TRIM COVER LH

a. Install the back door trim cover LH as shown in the illustration.

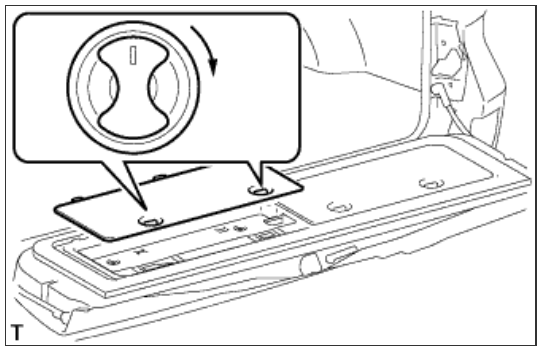


5. INSTALL REAR FLOOR MAT SUPPORT PLATE REAR (w/ Sliding Roof)

a. Attach the 6 clips to install the support plate.

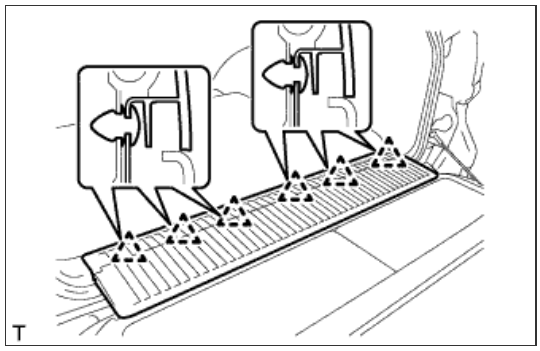


6. INSTALL REAR FLOOR MAT SUPPORT PLATE REAR (w/o Sliding Roof)


a. Attach the 6 clips to install the support plate.

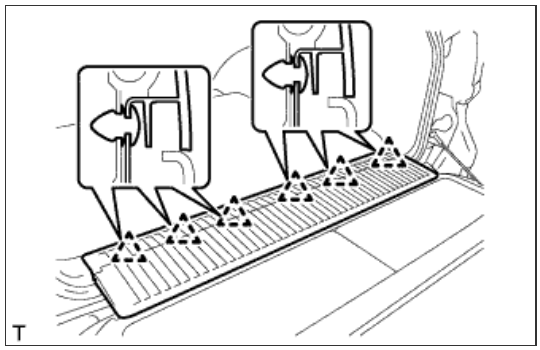


for Preparation Click here

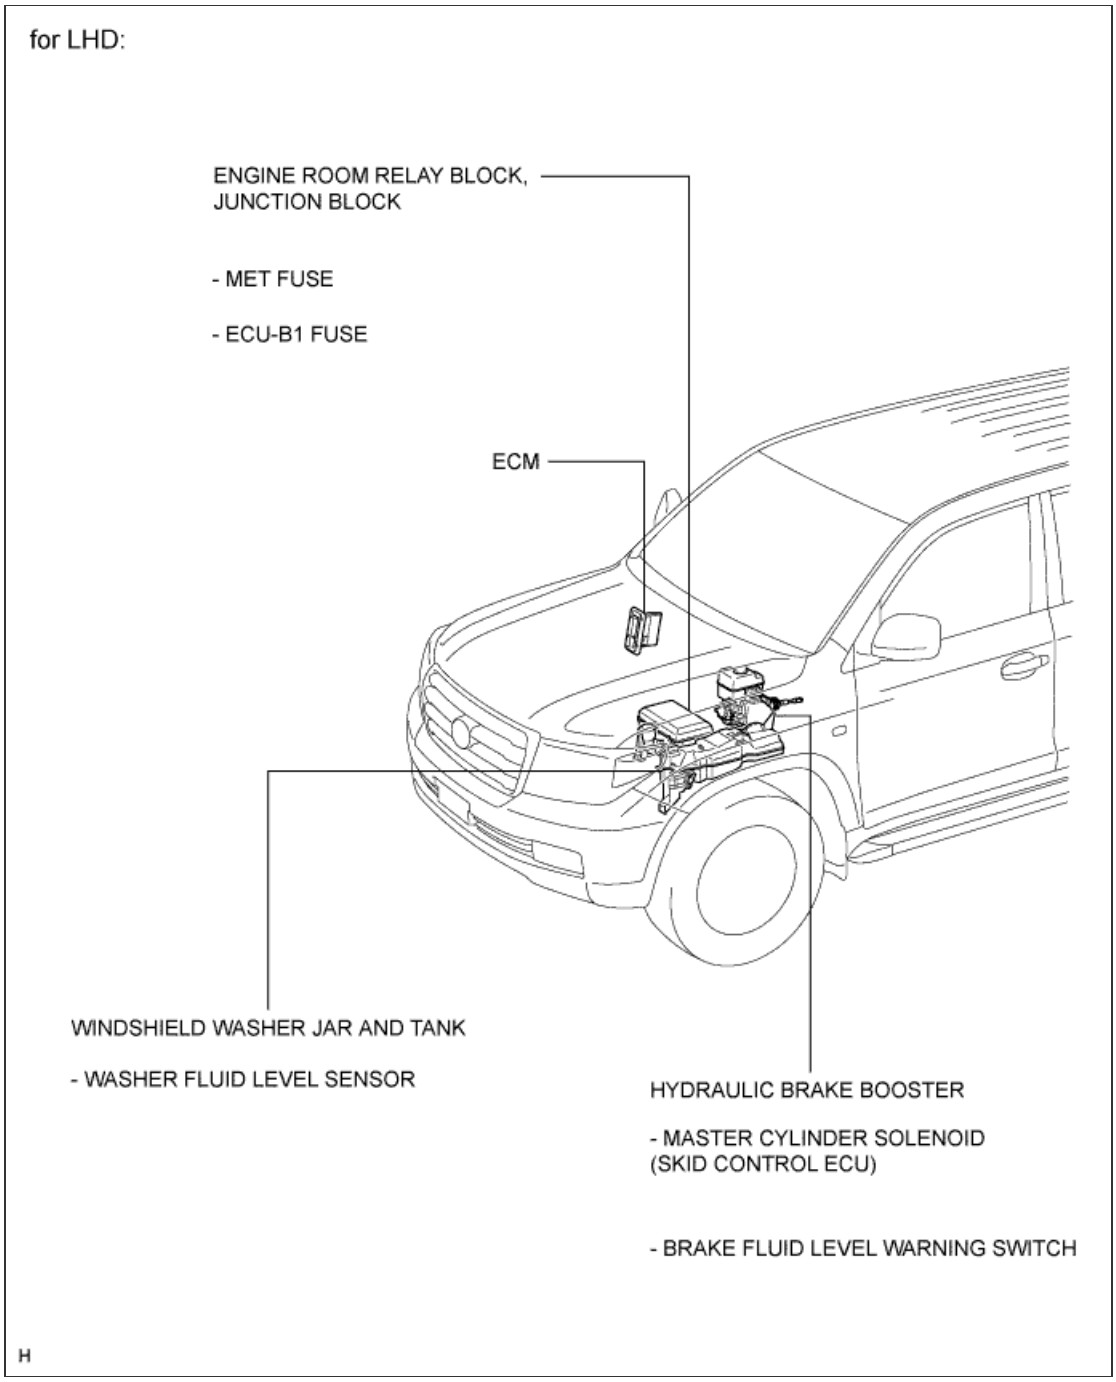


for RHD:

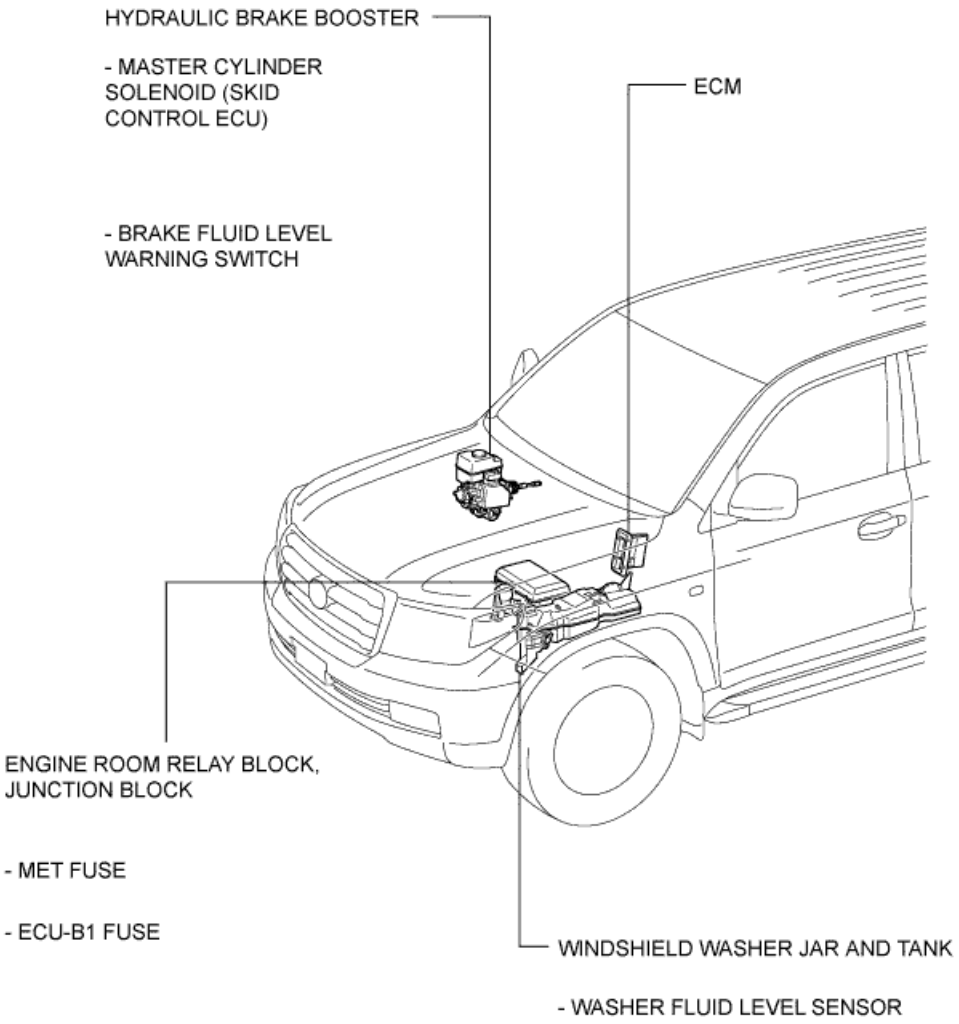
HYDRAULIC BRAKE BOOSTER
- MASTER CYLINDER SOLENOID (SKID CONTROL ECU)
- BRAKE FLUID LEVEL WARNING SWITCH
ECM
ENGINE ROOM RELAY BLOCK, JUNCTION BLOCK
- MET FUSE
- ECU-B1 FUSE
WINDSHIELD WASHER JAR AND TANK
- WASHER FLUID LEVEL SENSOR

H

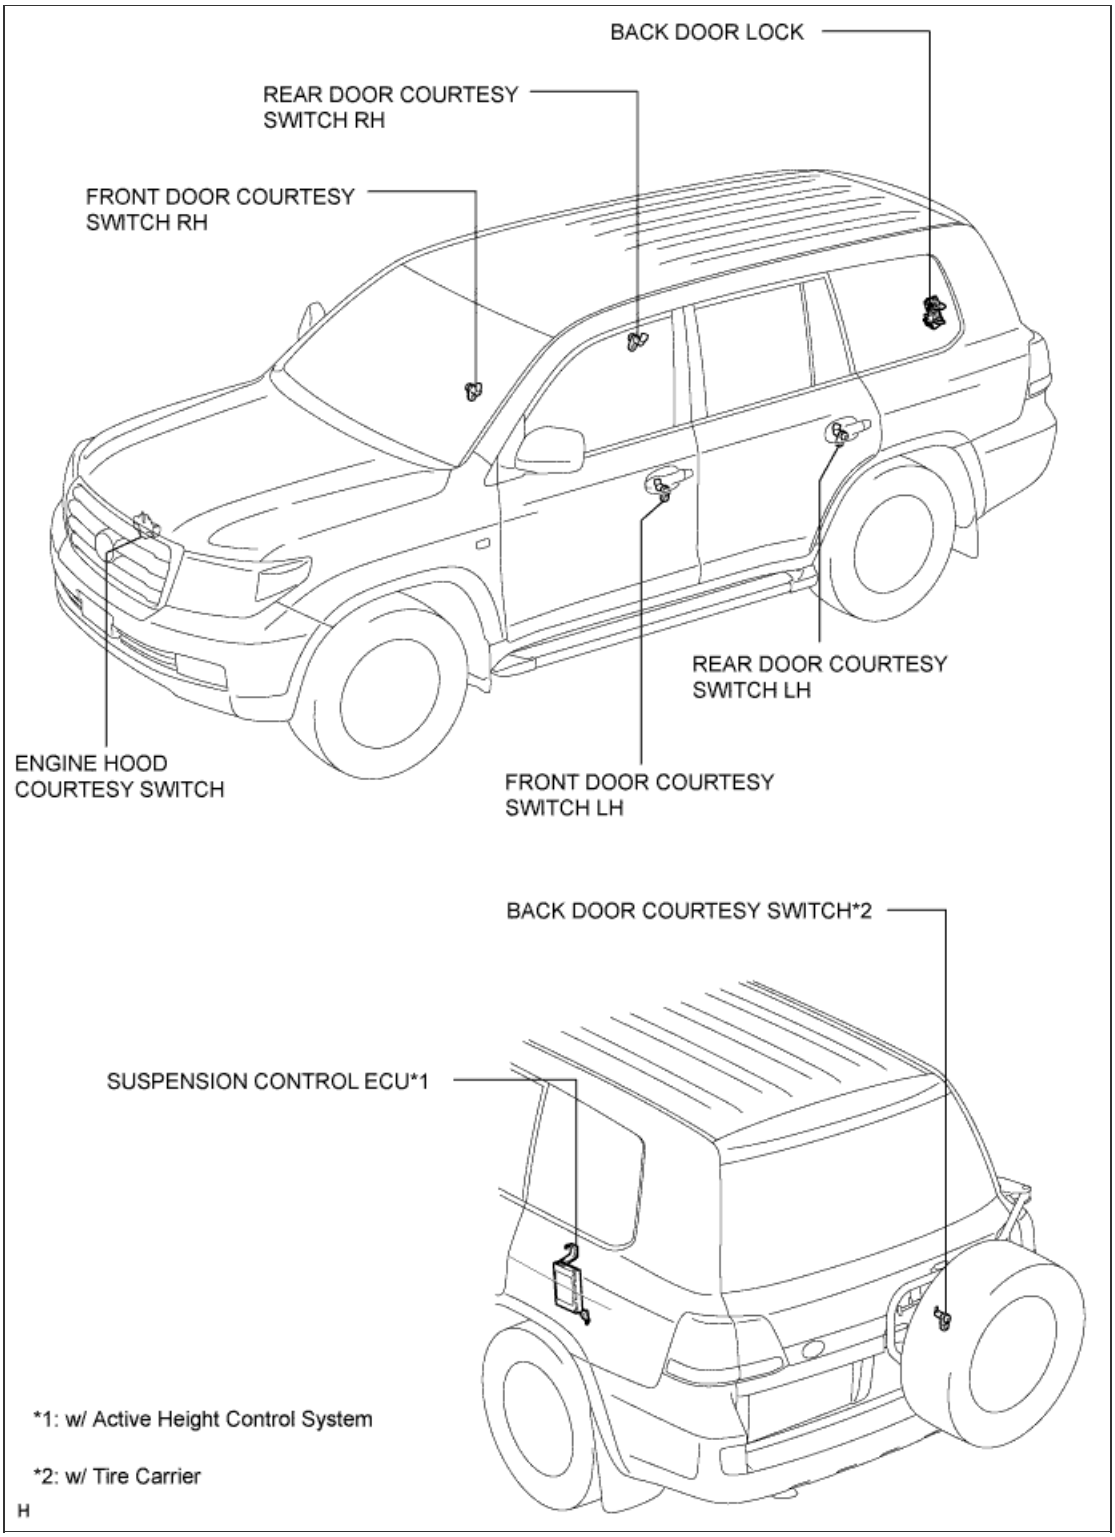

BACK DOOR LOCK
REAR DOOR COURTESY SWITCH RH
FRONT DOOR COURTESY SWITCH RH
REAR DOOR COURTESY SWITCH LH
ENGINE HOOD COURTESY SWITCH
FRONT DOOR COURTESY SWITCH LH
BACK DOOR COURTESY SWITCH*2
SUSPENSION CONTROL ECU*1
*1: w/ Active Height Control System
*2: w/ Tire Carrier
H

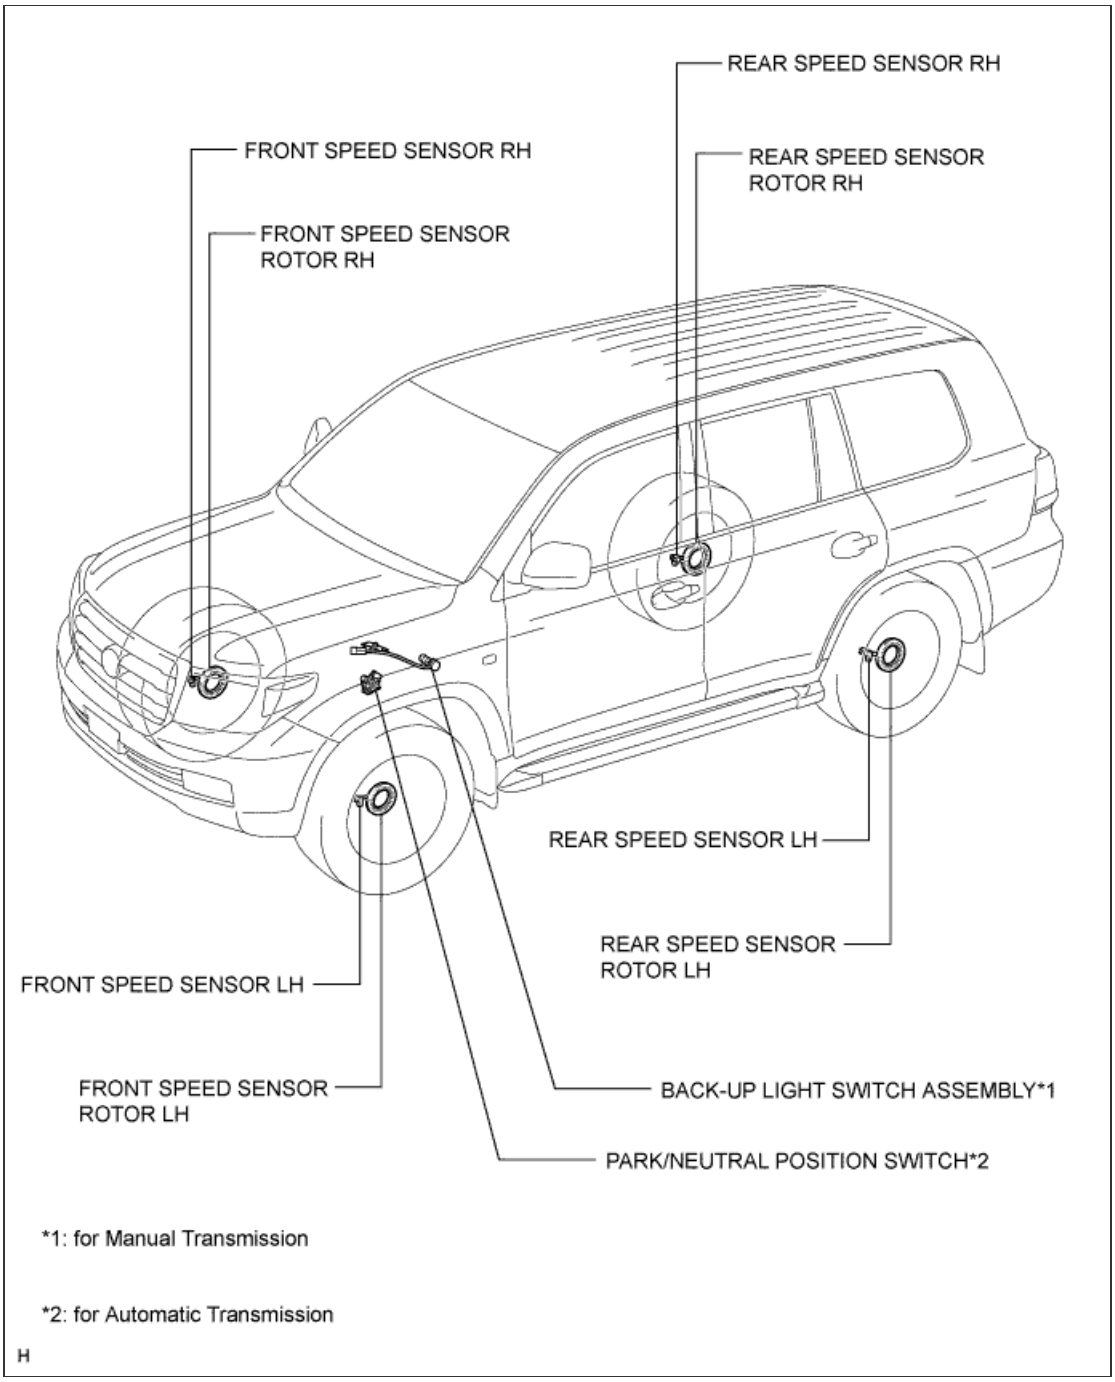

*1: for Manual Transmission


*2: for Automatic Transmission


H

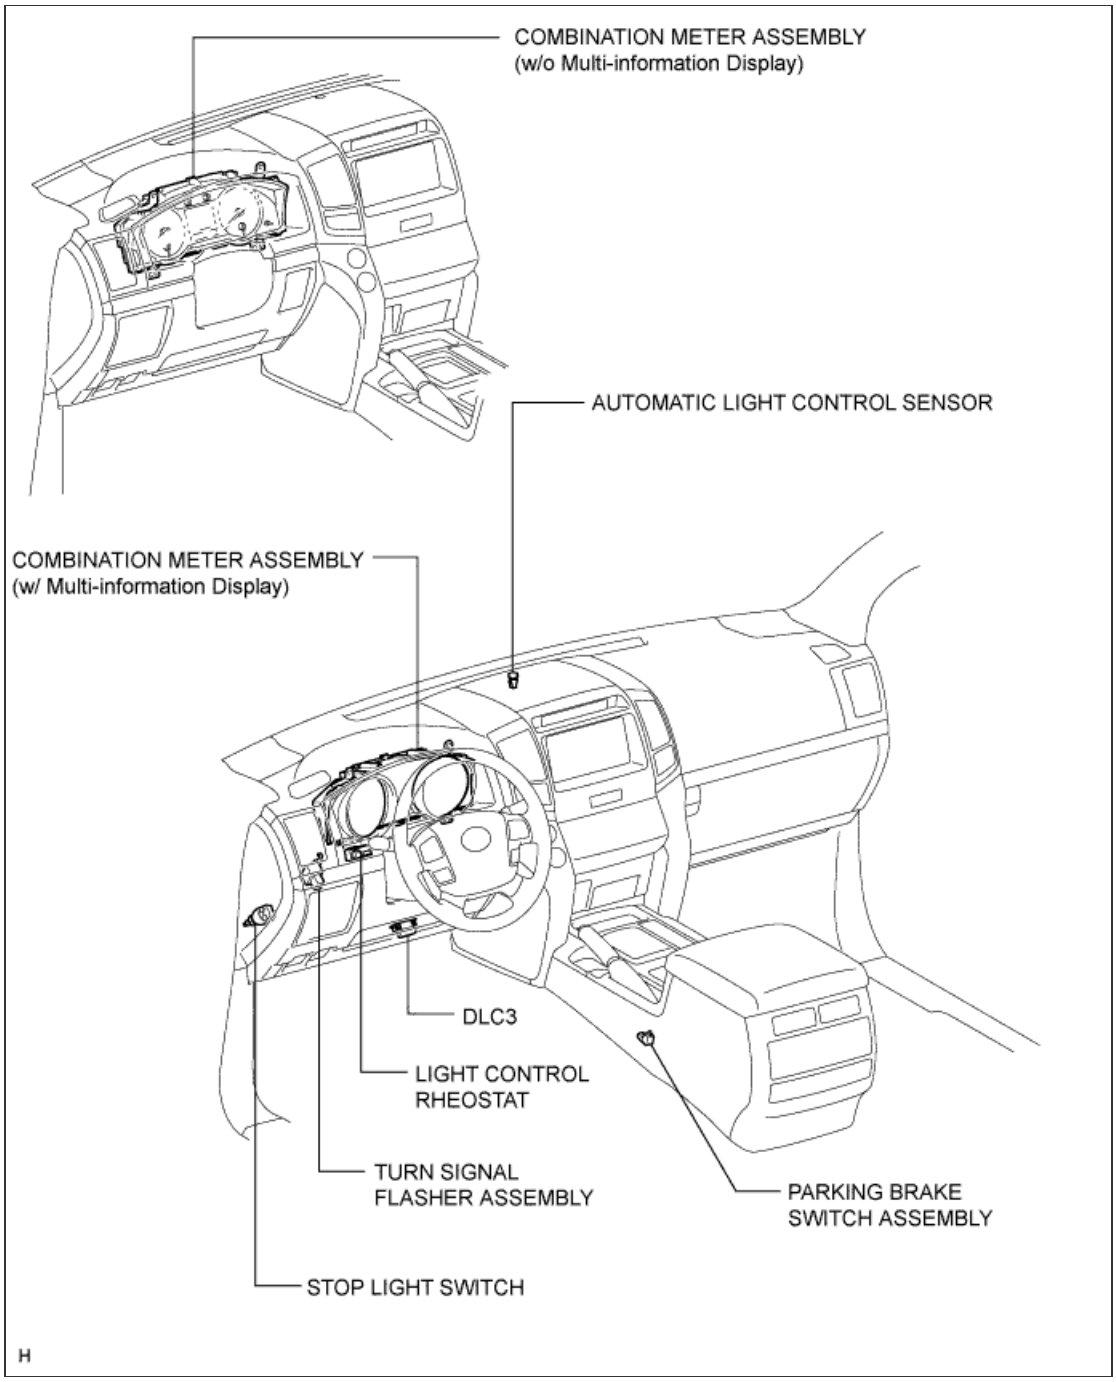
COMBINATION METER ASSEMBLY
(w/o Multi-information Display)
AUTOMATIC LIGHT CONTROL SENSOR
COMBINATION METER ASSEMBLY
(w/ Multi-information Display)
DLC3
LIGHT CONTROL
RHEOSTAT
TURN SIGNAL
FLASHER ASSEMBLY
PARKING BRAKE
SWITCH ASSEMBLY
STOP LIGHT SWITCH
H

for LHD:

Refer to Service Bulletin for installation position.

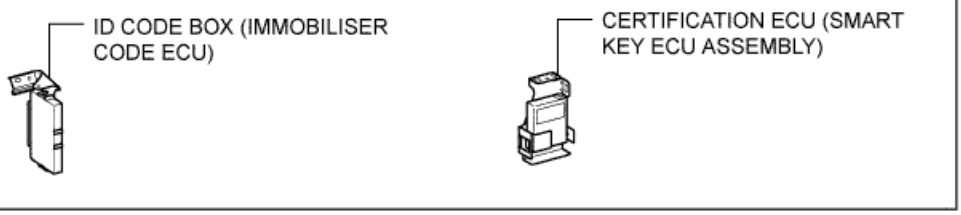

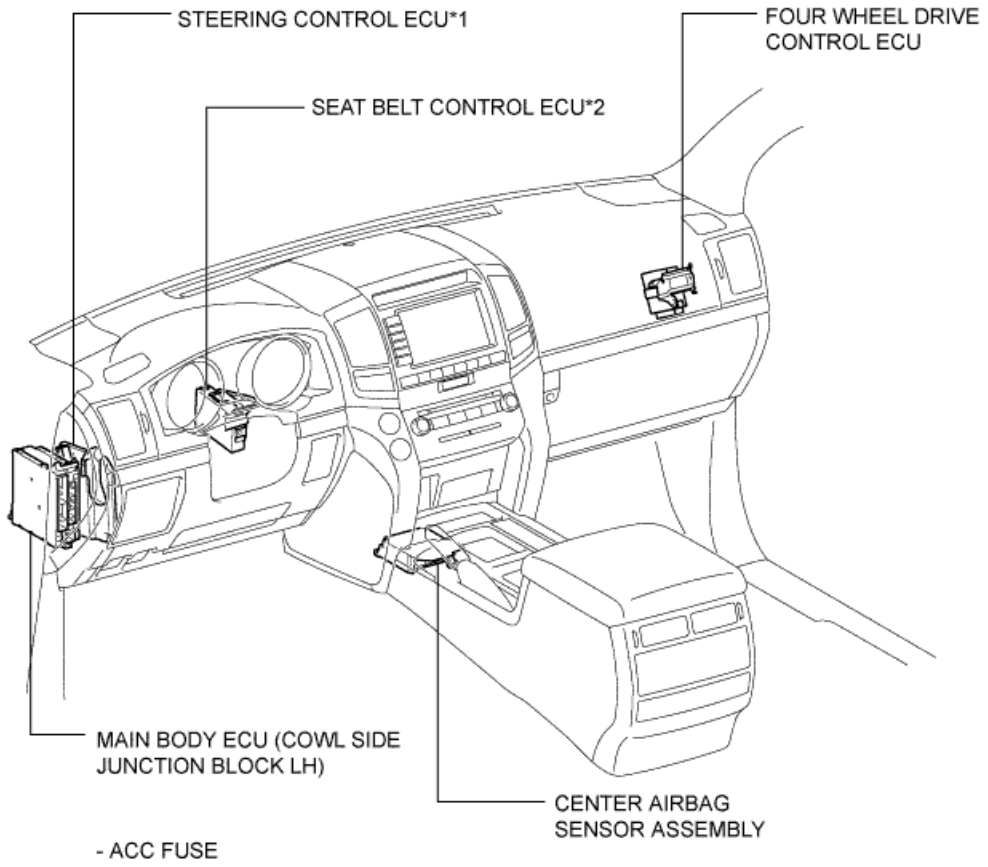


- ACC FUSE

*1: w/ VGRS

*2: w/ Pre-crash Safety System

H


for RHD:

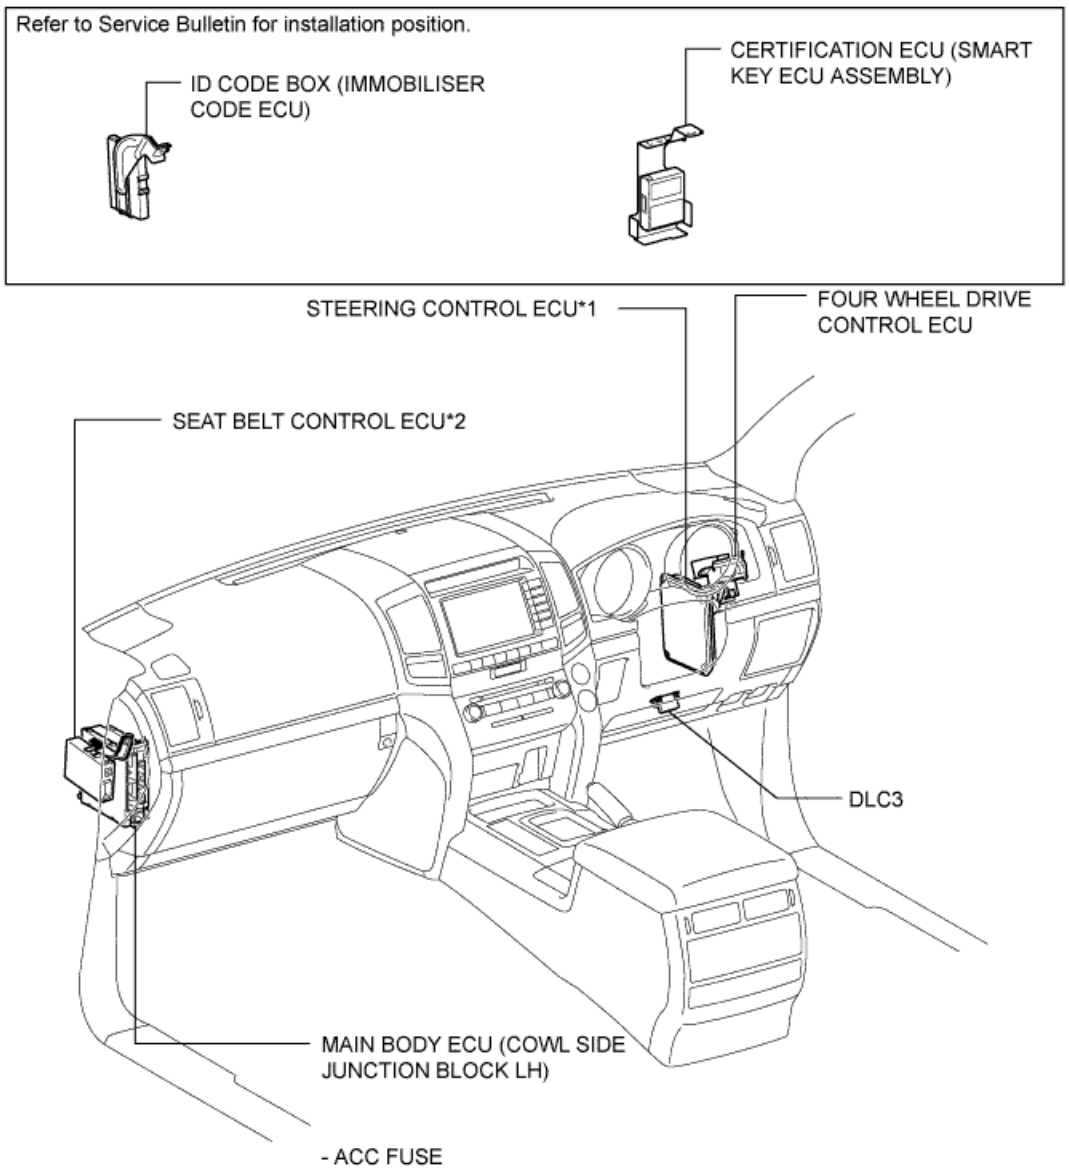

*1: w/ VGRS

*2: w/ Pre-crash Safety System

H

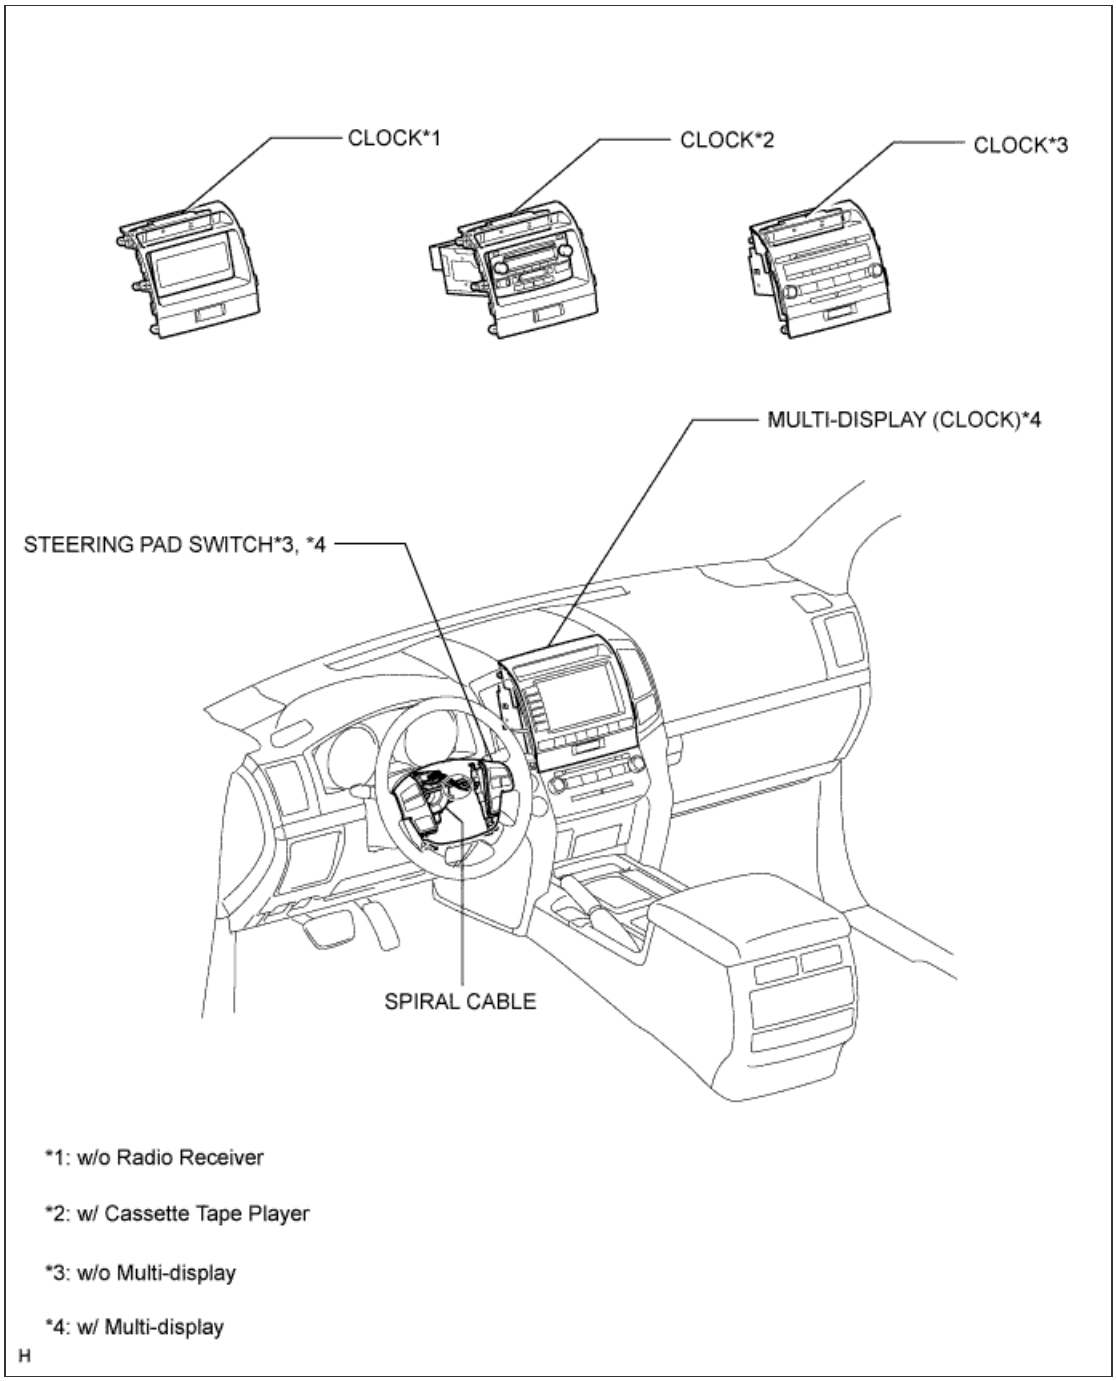

*1: w/o Radio Receiver


*2: w/ Cassette Tape Player

*3: w/o Multi-display

*4: w/ Multi-display


H

for 1GR-FE:

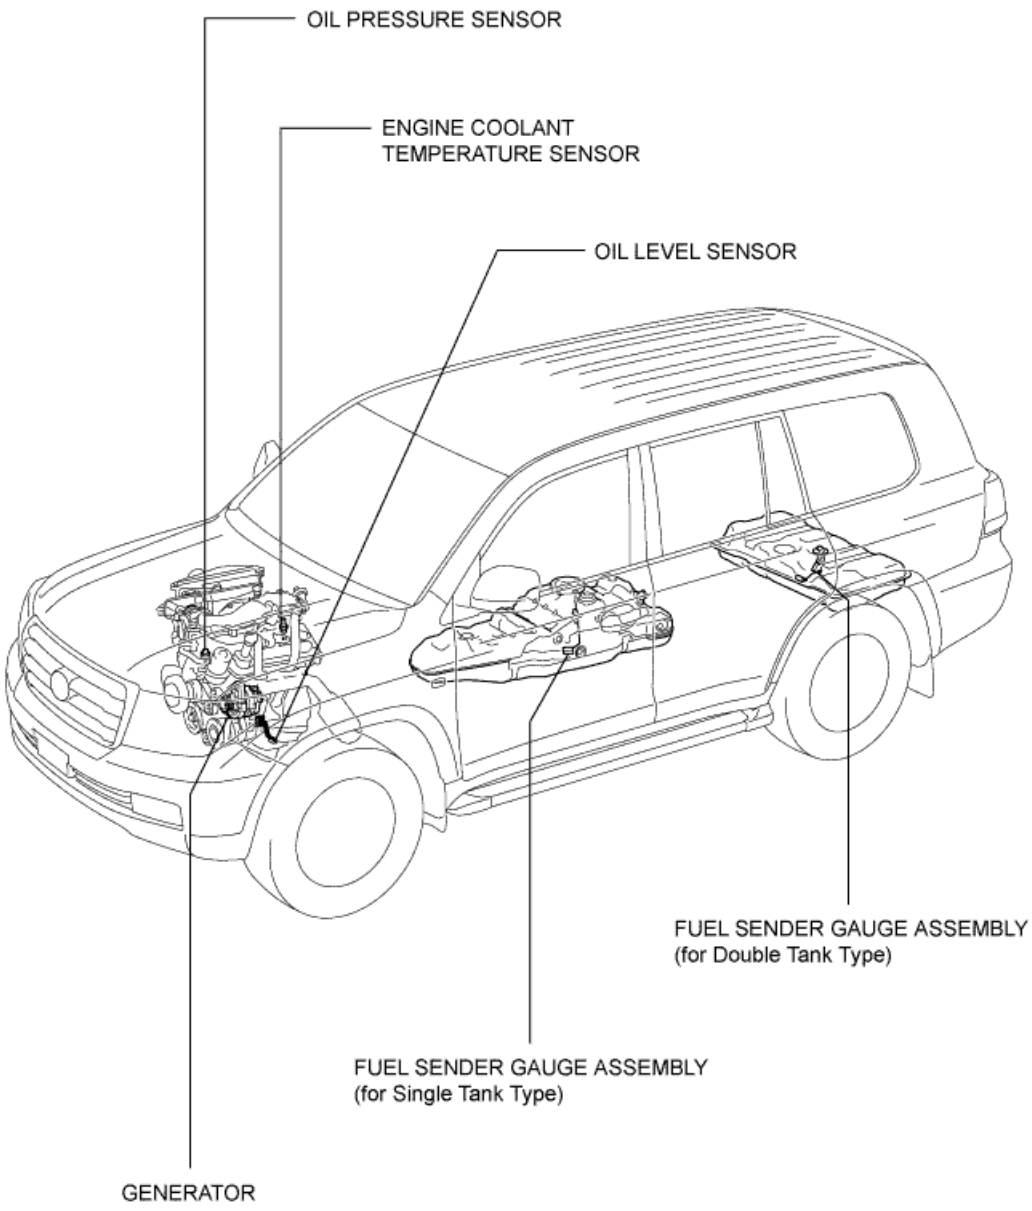

OIL PRESSURE SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
OIL LEVEL SENSOR
FUEL SENDER GAUGE ASSEMBLY (for Double Tank Type)
FUEL SENDER GAUGE ASSEMBLY (for Single Tank Type)
GENERATOR

H


for 2UZ-FE:

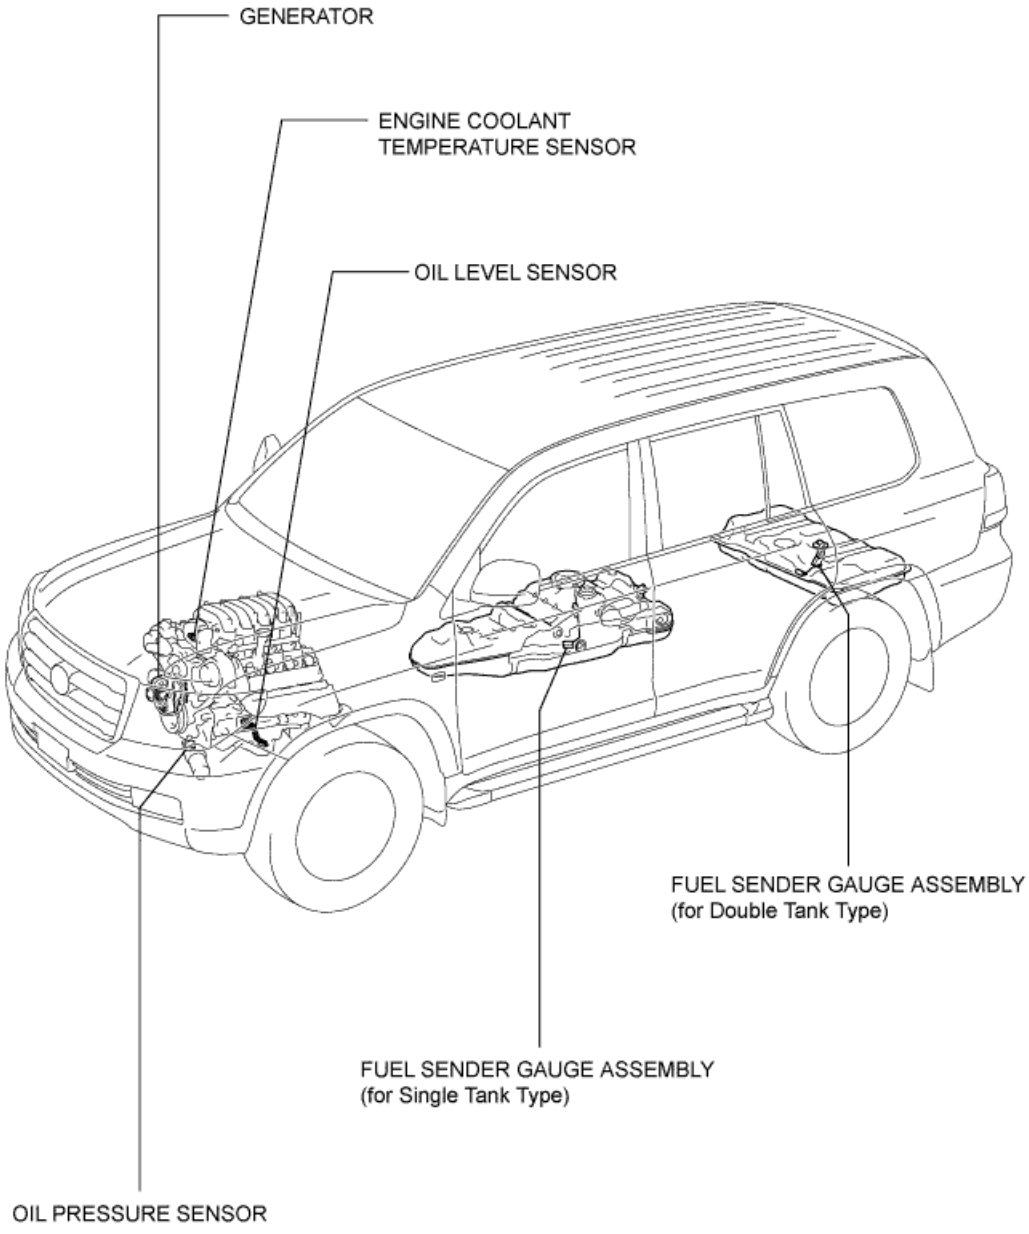
GENERATOR
ENGINE COOLANT
TEMPERATURE SENSOR
OIL LEVEL SENSOR
FUEL SENDER GAUGE ASSEMBLY
(for Double Tank Type)
FUEL SENDER GAUGE ASSEMBLY
(for Single Tank Type)
OIL PRESSURE SENSOR


H

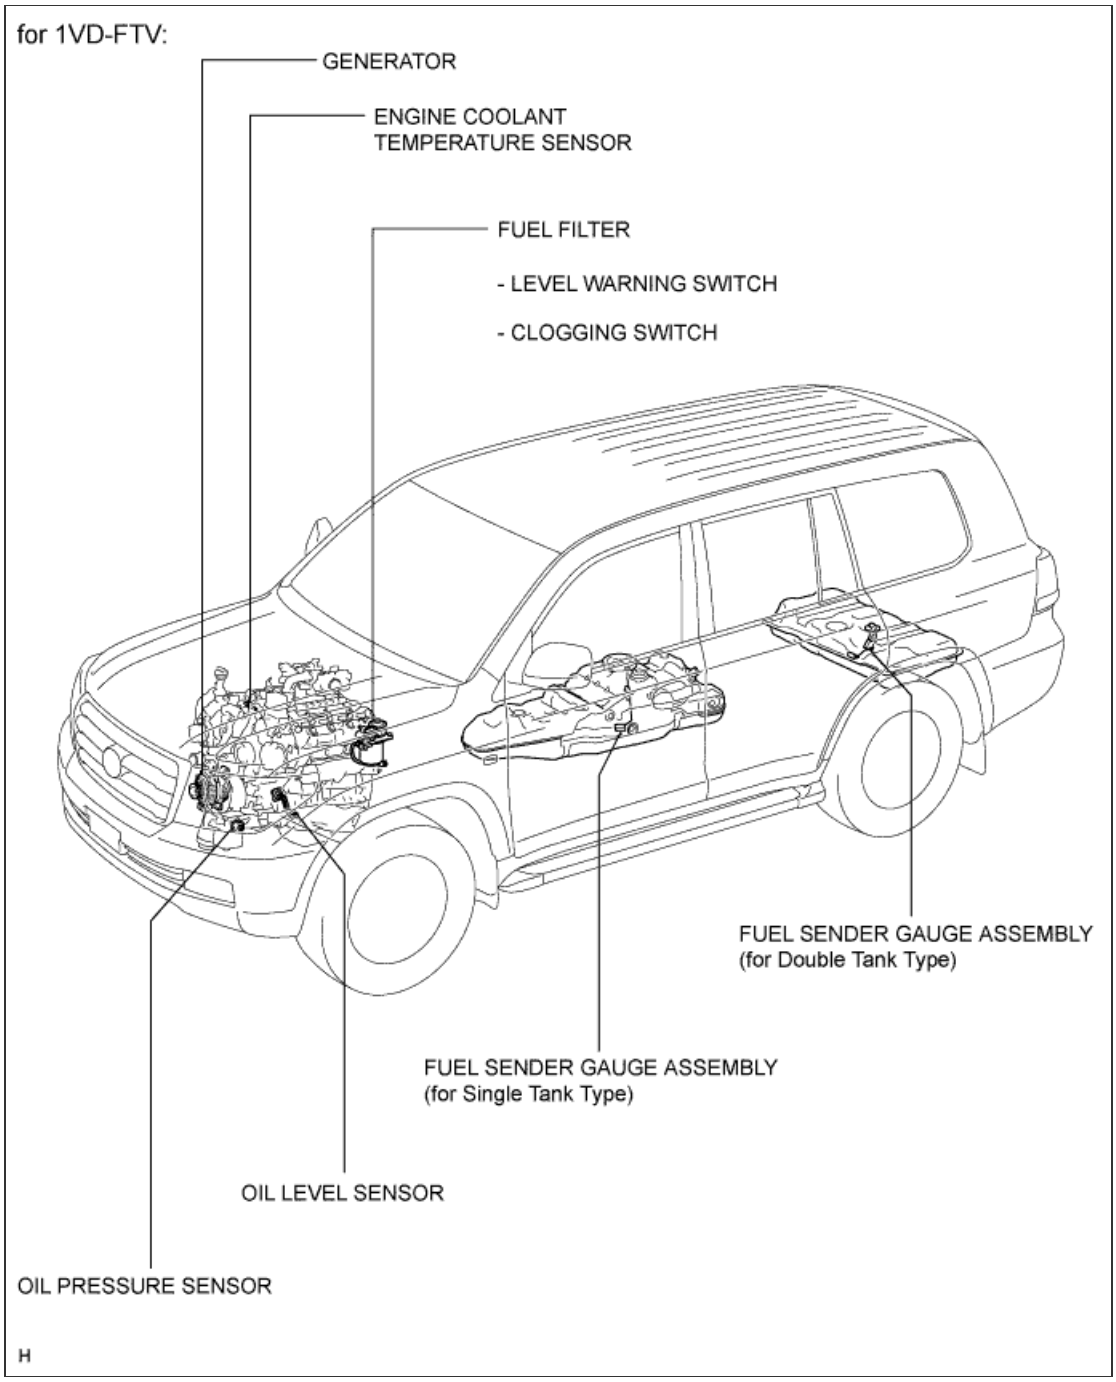
for 1VD-FTV:
GENERATOR
ENGINE COOLANT
TEMPERATURE SENSOR
FUEL FILTER
- LEVEL WARNING SWITCH
- CLOGGING SWITCH
FUEL SENDER GAUGE ASSEMBLY
(for Double Tank Type)
FUEL SENDER GAUGE ASSEMBLY
(for Single Tank Type)
OIL LEVEL SENSOR
OIL PRESSURE SENSOR
H


for Preparation Click here

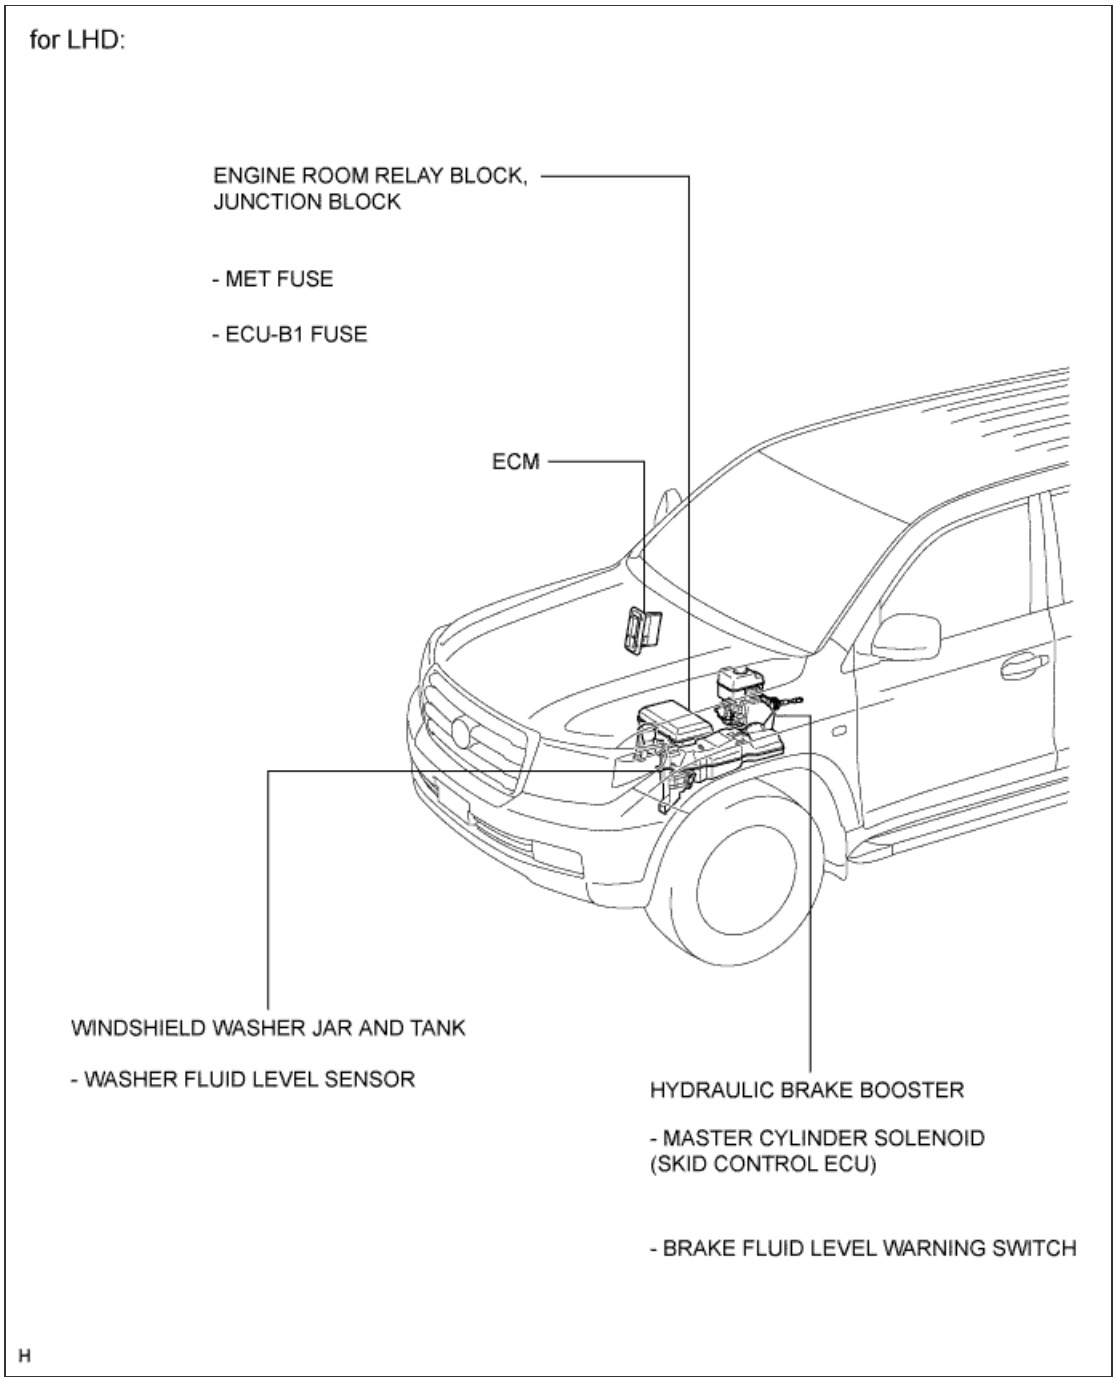


for RHD:

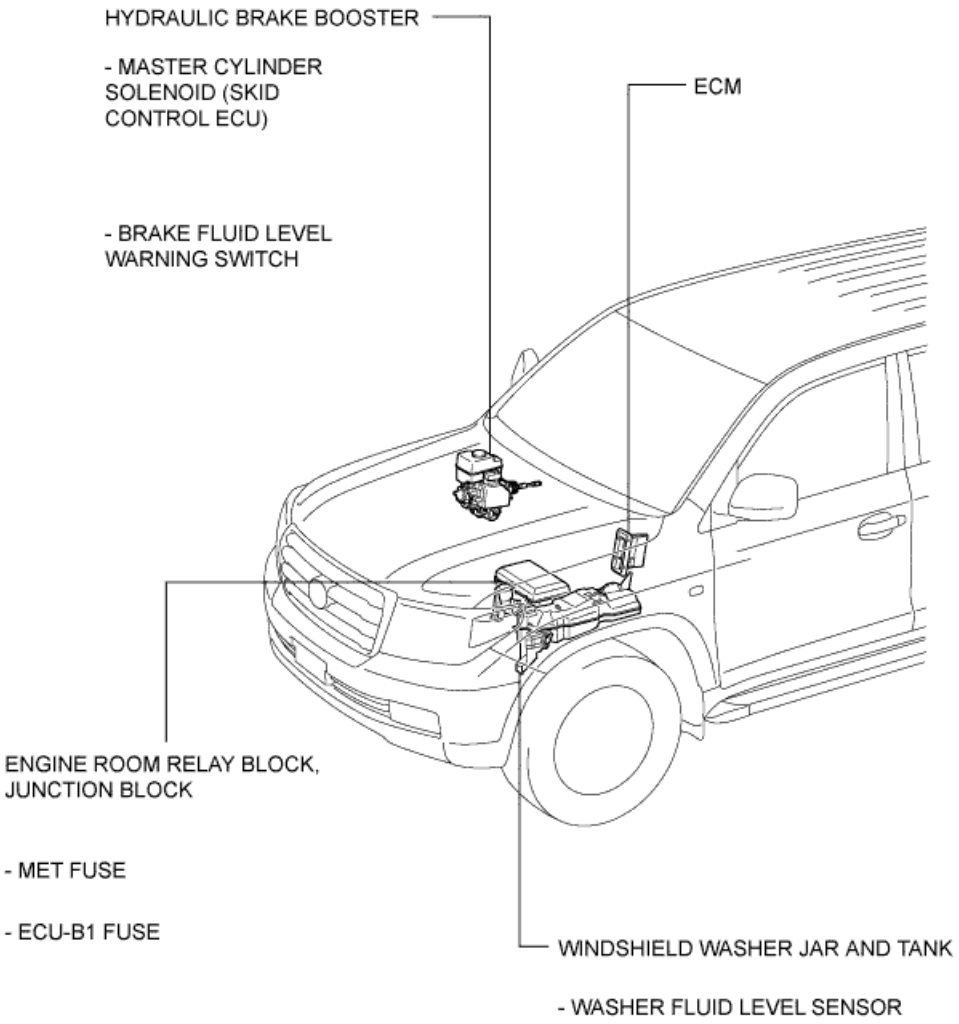
HYDRAULIC BRAKE BOOSTER
- MASTER CYLINDER SOLENOID (SKID CONTROL ECU)
- BRAKE FLUID LEVEL WARNING SWITCH
ECM
ENGINE ROOM RELAY BLOCK, JUNCTION BLOCK
- MET FUSE
- ECU-B1 FUSE
WINDSHIELD WASHER JAR AND TANK
- WASHER FLUID LEVEL SENSOR

H

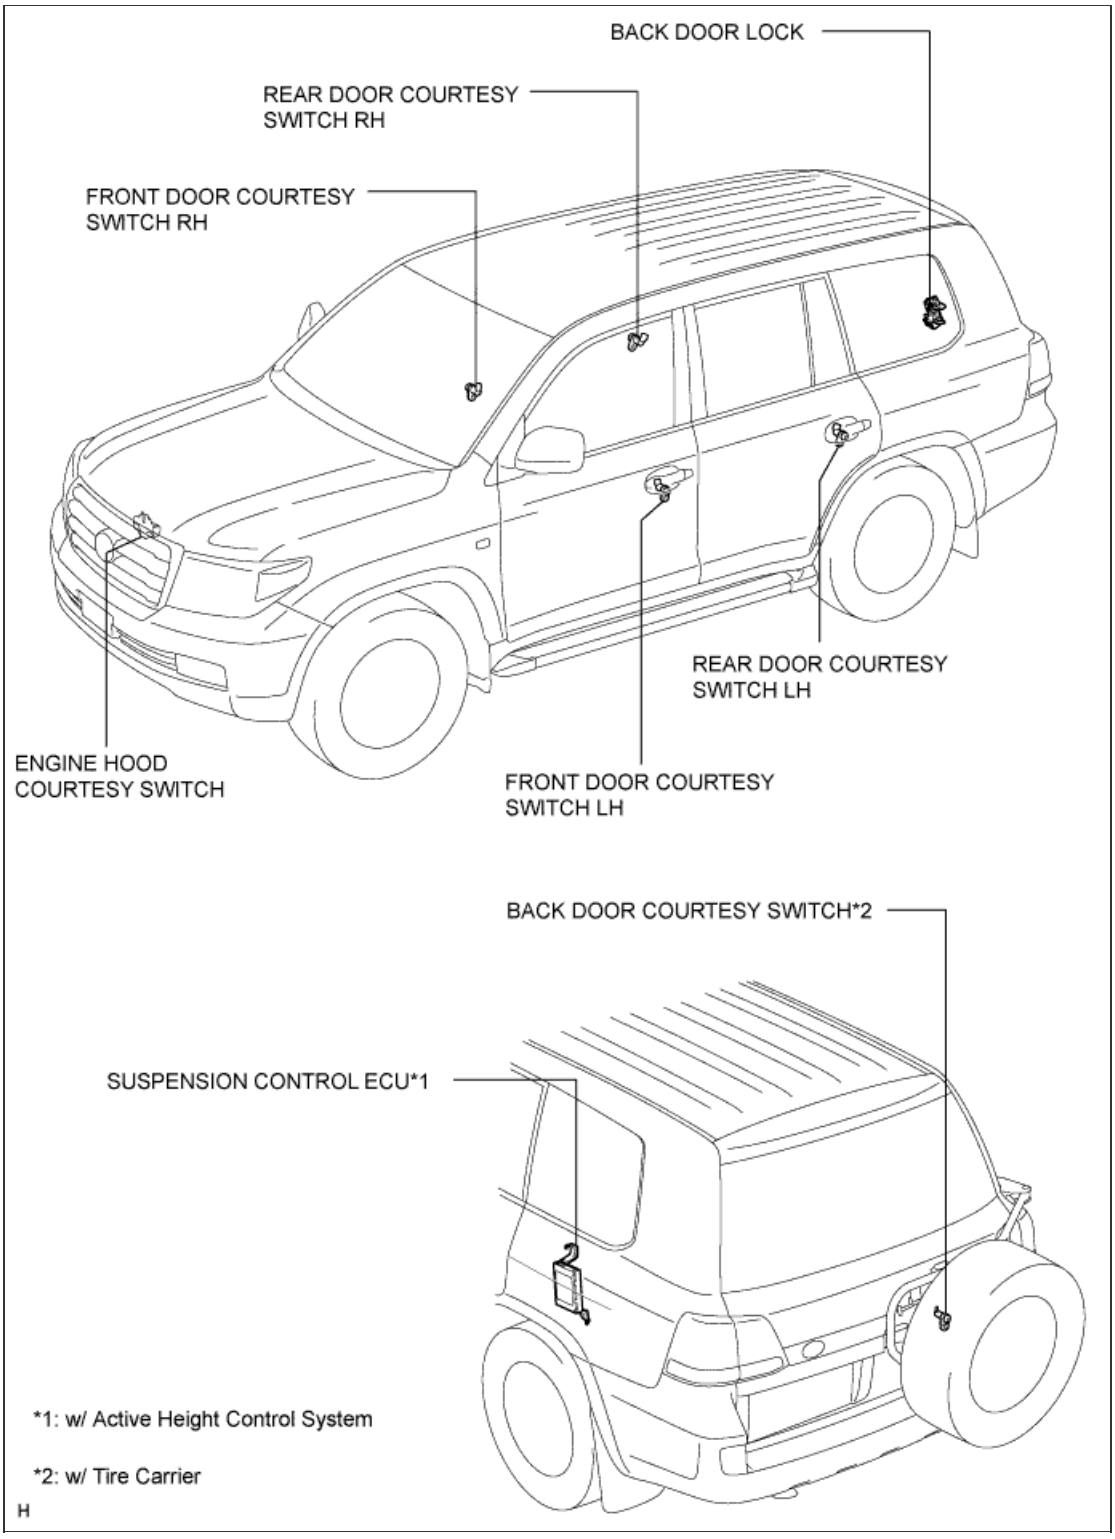

BACK DOOR LOCK
REAR DOOR COURTESY SWITCH RH
FRONT DOOR COURTESY SWITCH RH
REAR DOOR COURTESY SWITCH LH
ENGINE HOOD COURTESY SWITCH
FRONT DOOR COURTESY SWITCH LH
BACK DOOR COURTESY SWITCH*2
SUSPENSION CONTROL ECU*1
*1: w/ Active Height Control System
*2: w/ Tire Carrier
H

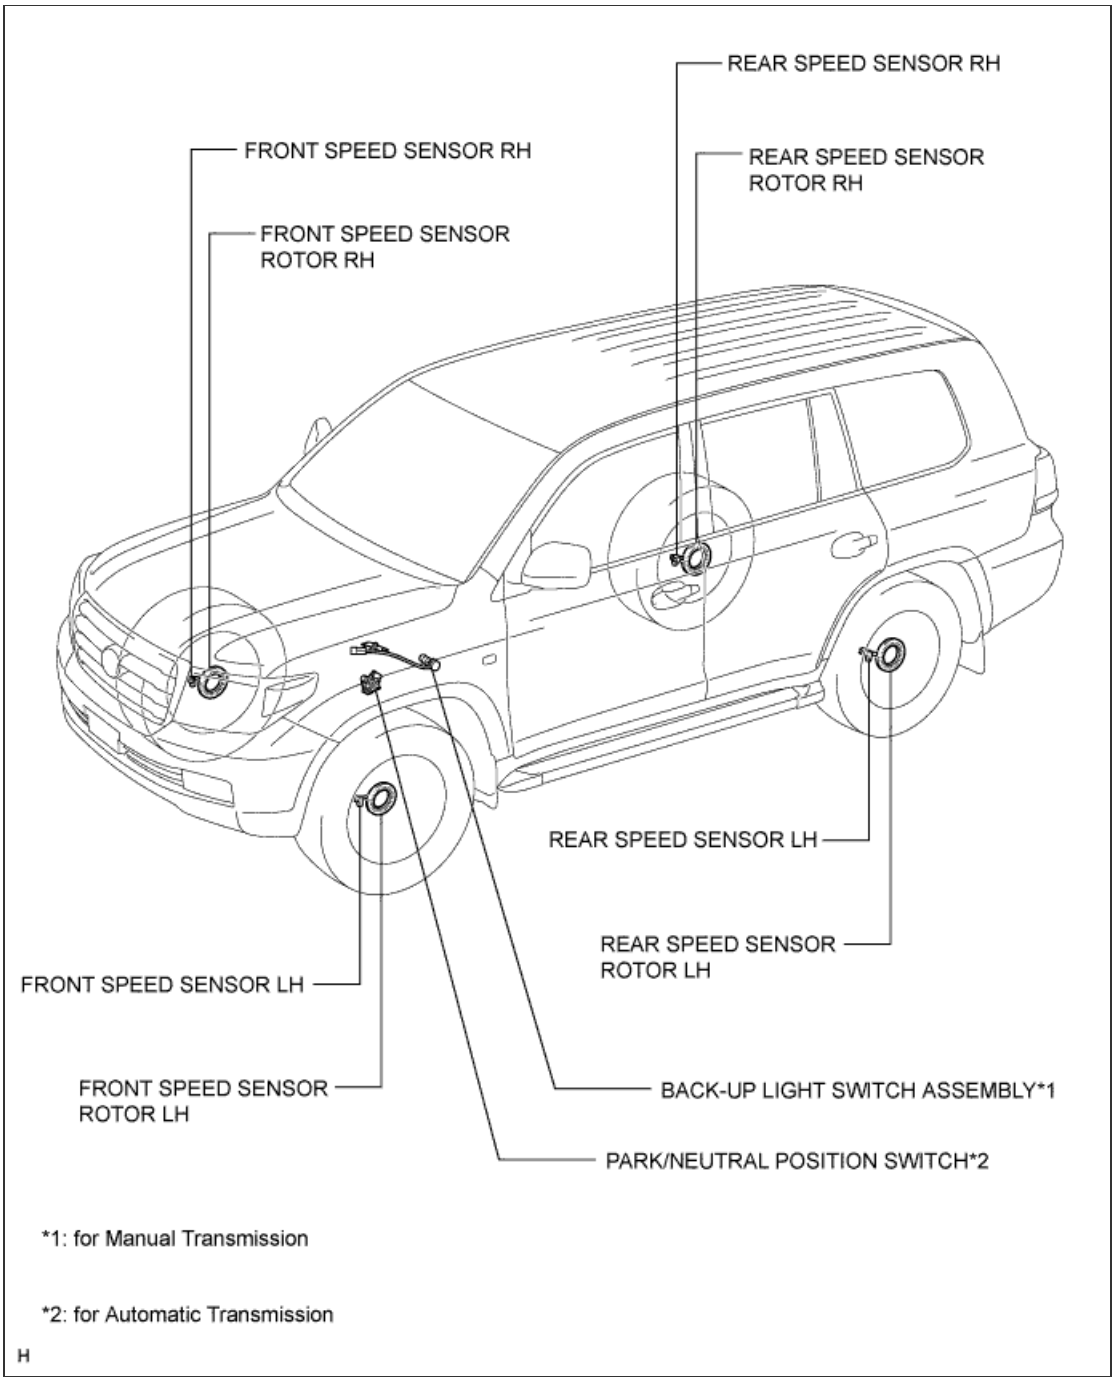

*1: for Manual Transmission


*2: for Automatic Transmission


H

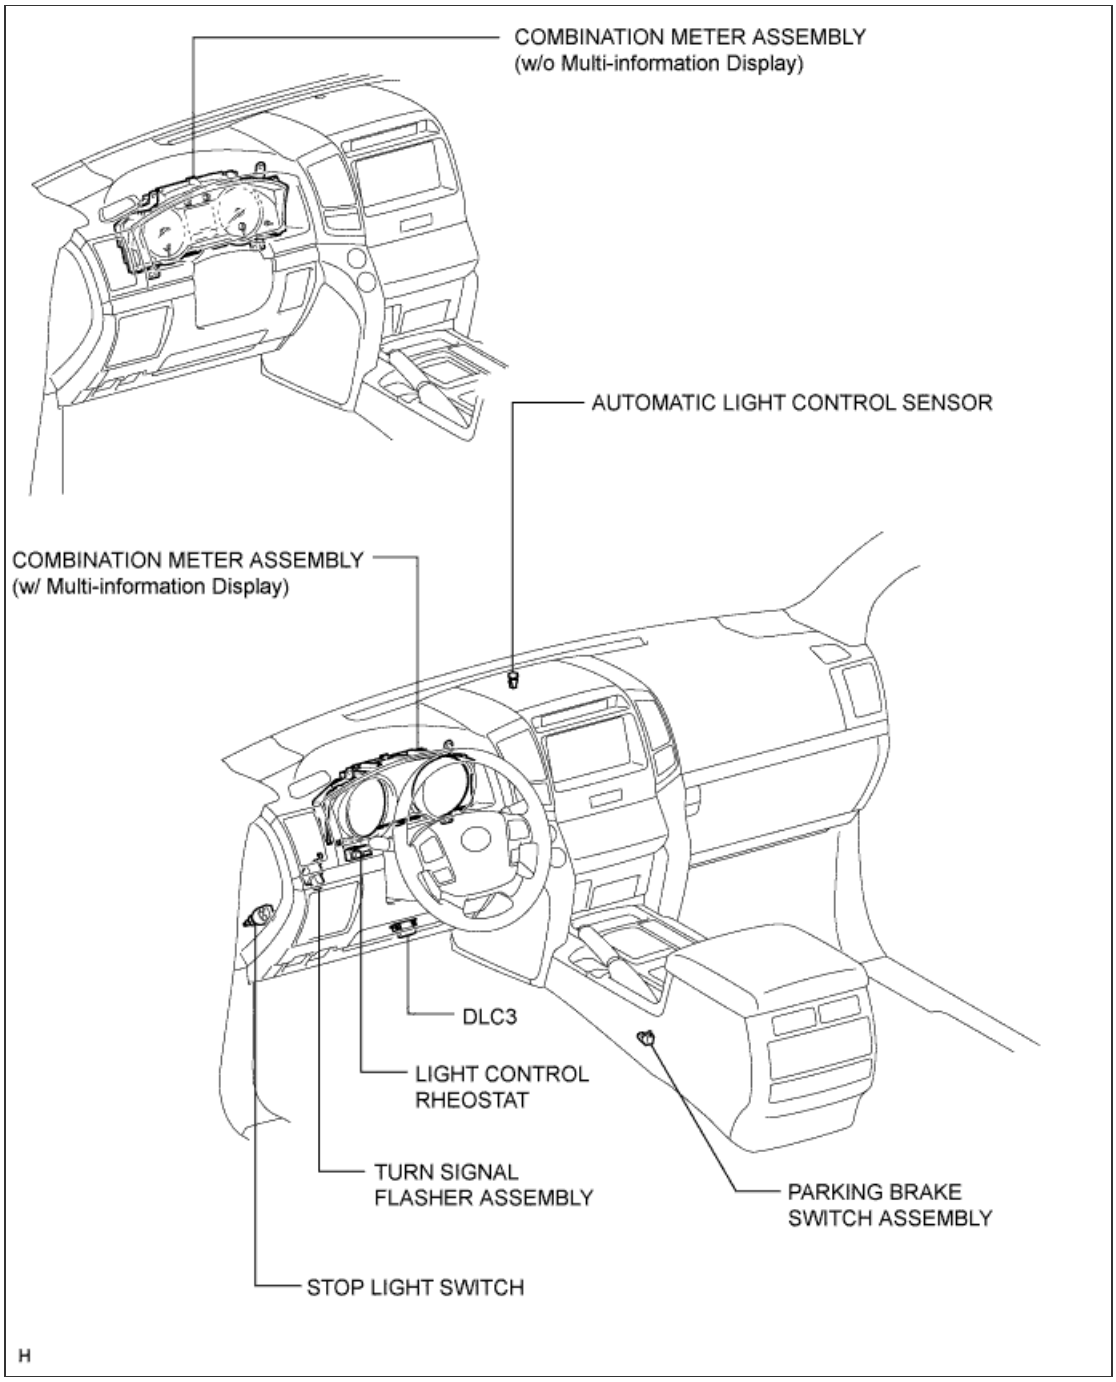
COMBINATION METER ASSEMBLY
(w/o Multi-information Display)
AUTOMATIC LIGHT CONTROL SENSOR
COMBINATION METER ASSEMBLY
(w/ Multi-information Display)
DLC3
LIGHT CONTROL
RHEOSTAT
TURN SIGNAL
FLASHER ASSEMBLY
PARKING BRAKE
SWITCH ASSEMBLY
STOP LIGHT SWITCH
H

for LHD:

Refer to Service Bulletin for installation position.

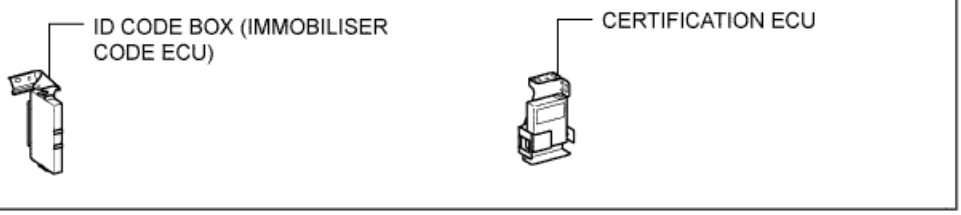

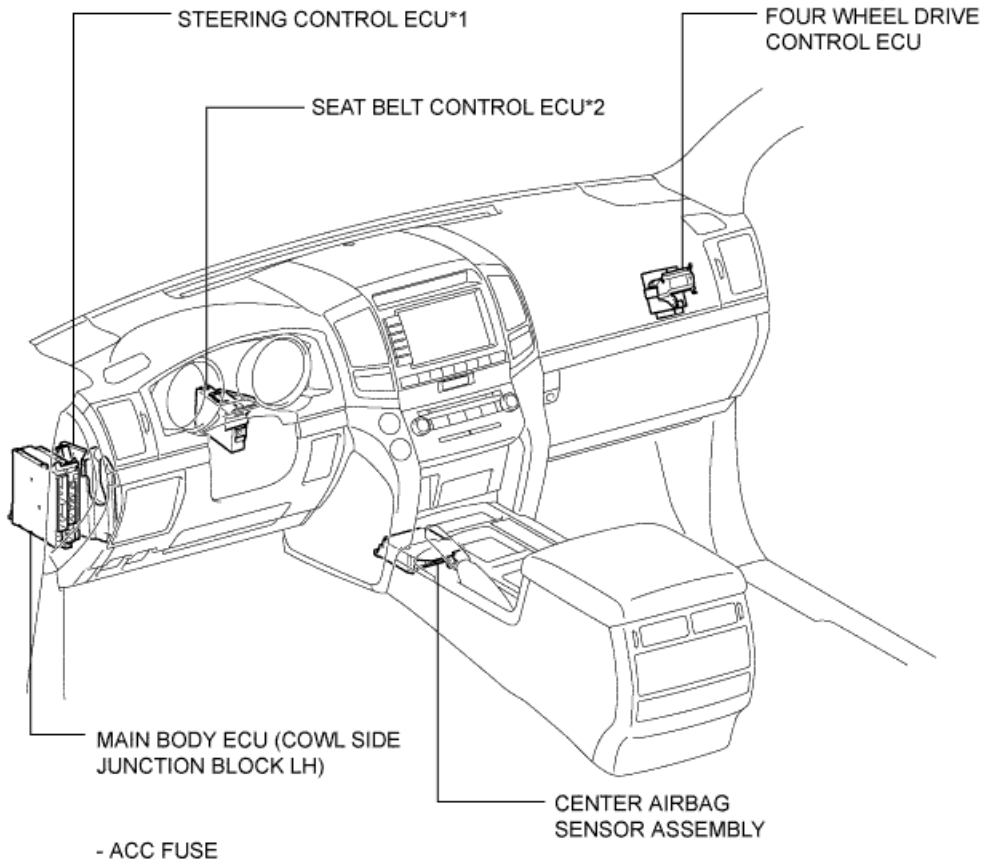


- ACC FUSE

*1: w/ VGRS

*2: w/ Pre-crash Safety System

H


for RHD:

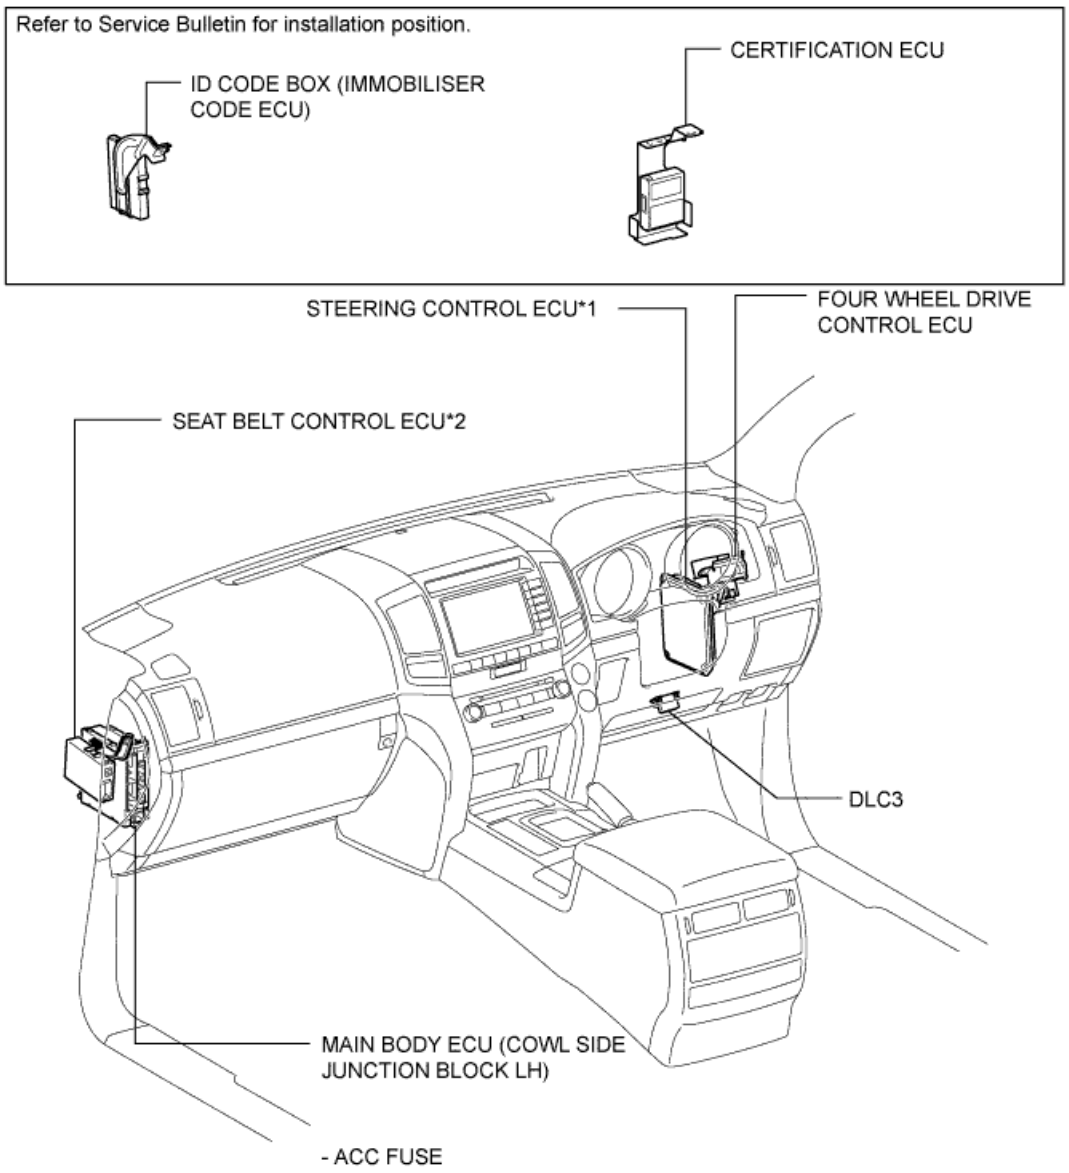

*1: w/ VGRS

*2: w/ Pre-crash Safety System

H

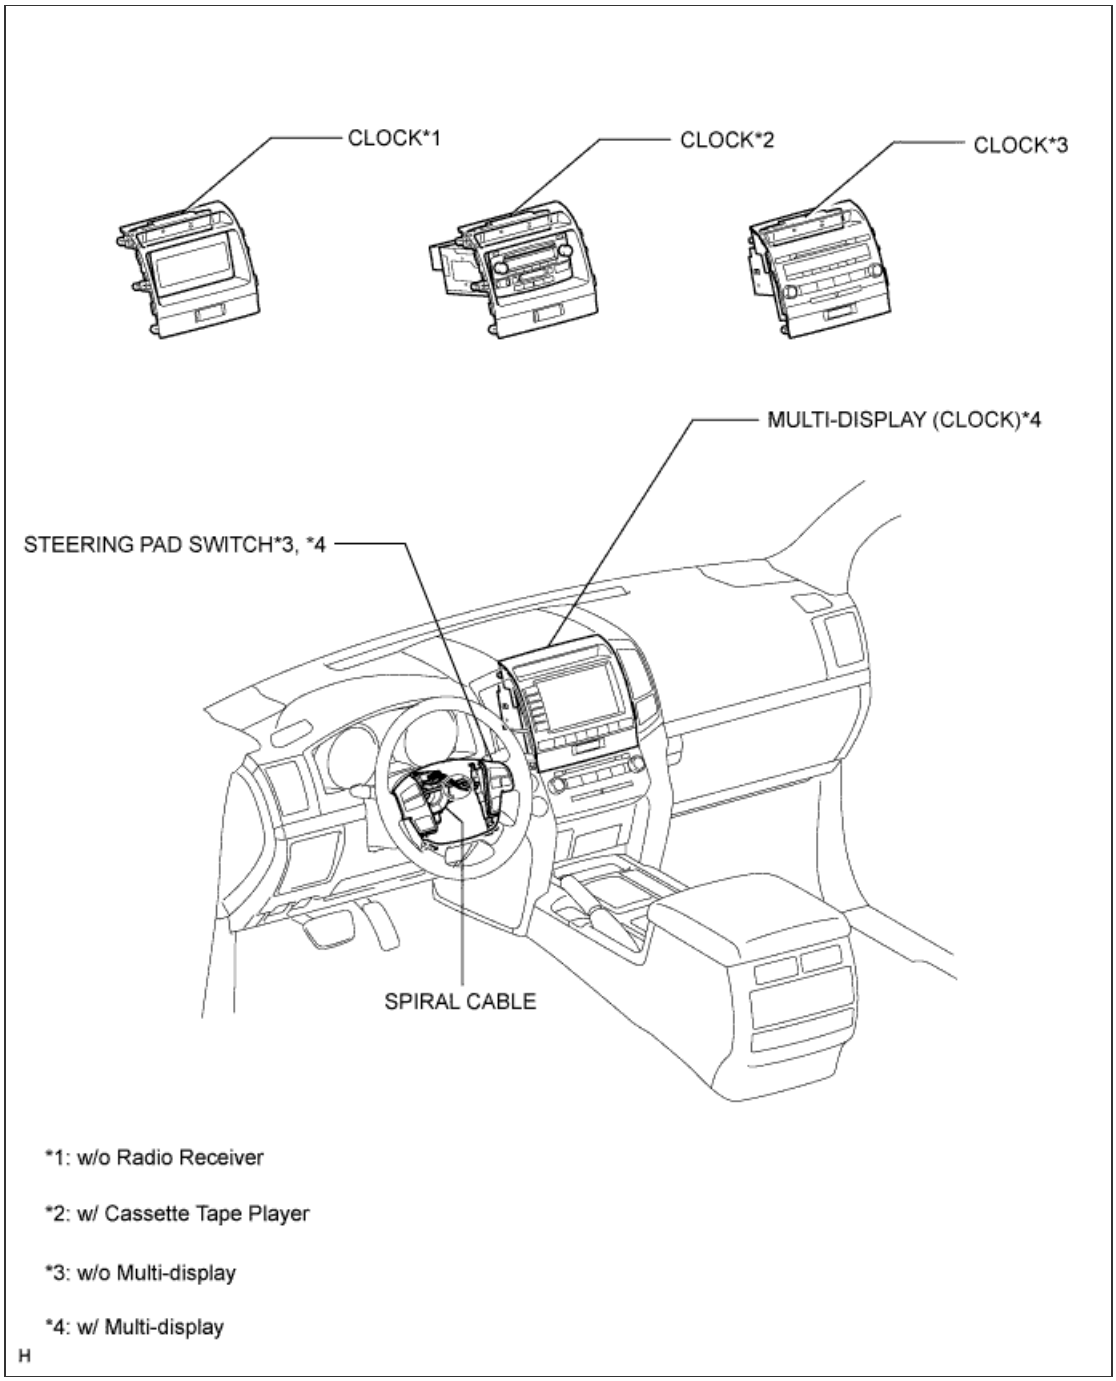

*1: w/o Radio Receiver


*2: w/ Cassette Tape Player

*3: w/o Multi-display

*4: w/ Multi-display


H

for 1GR-FE:

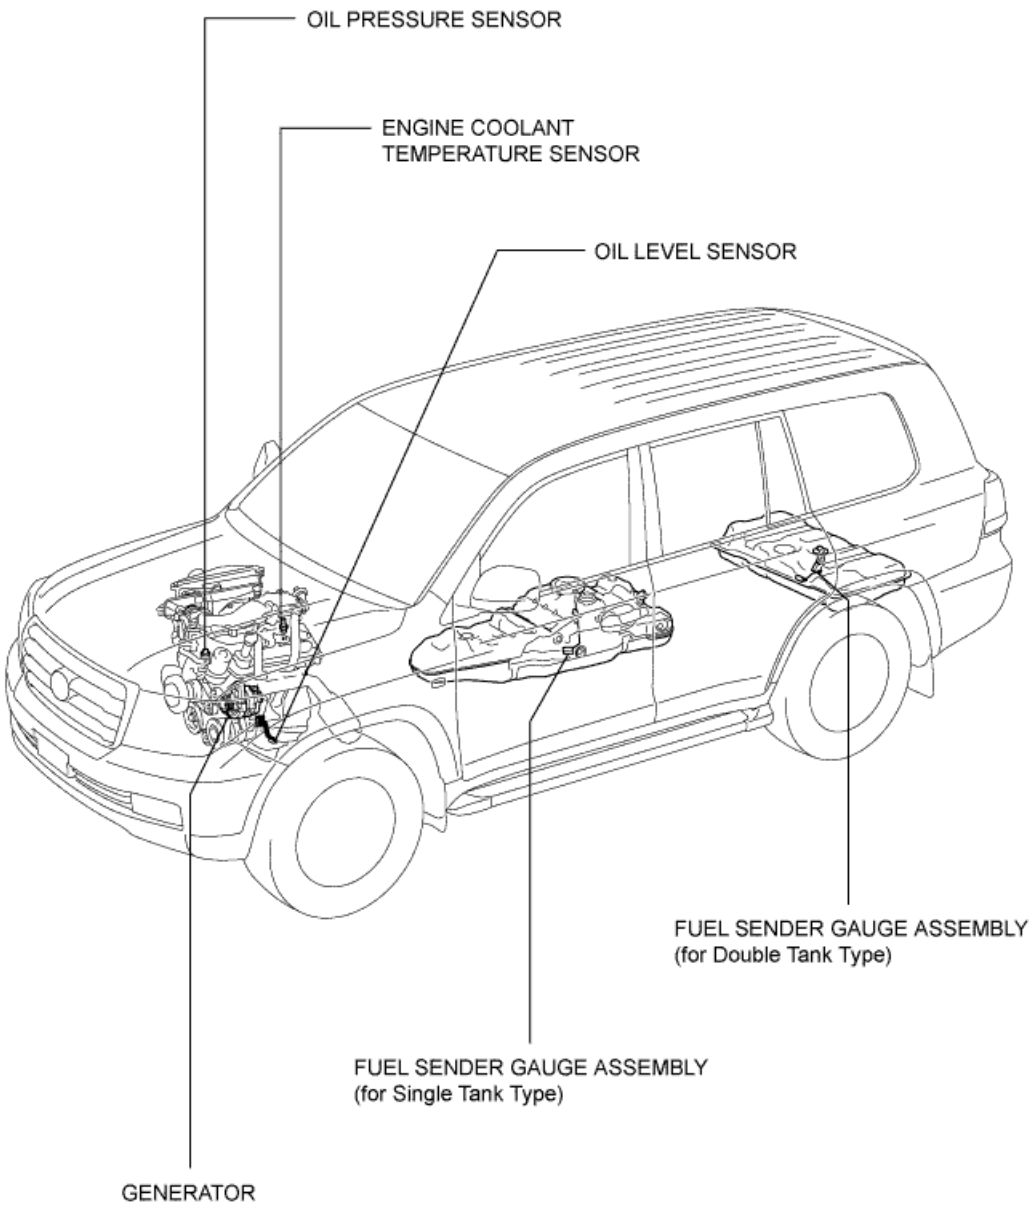

OIL PRESSURE SENSOR
ENGINE COOLANT TEMPERATURE SENSOR
OIL LEVEL SENSOR
FUEL SENDER GAUGE ASSEMBLY (for Double Tank Type)
FUEL SENDER GAUGE ASSEMBLY (for Single Tank Type)
GENERATOR

H


for 2UZ-FE:

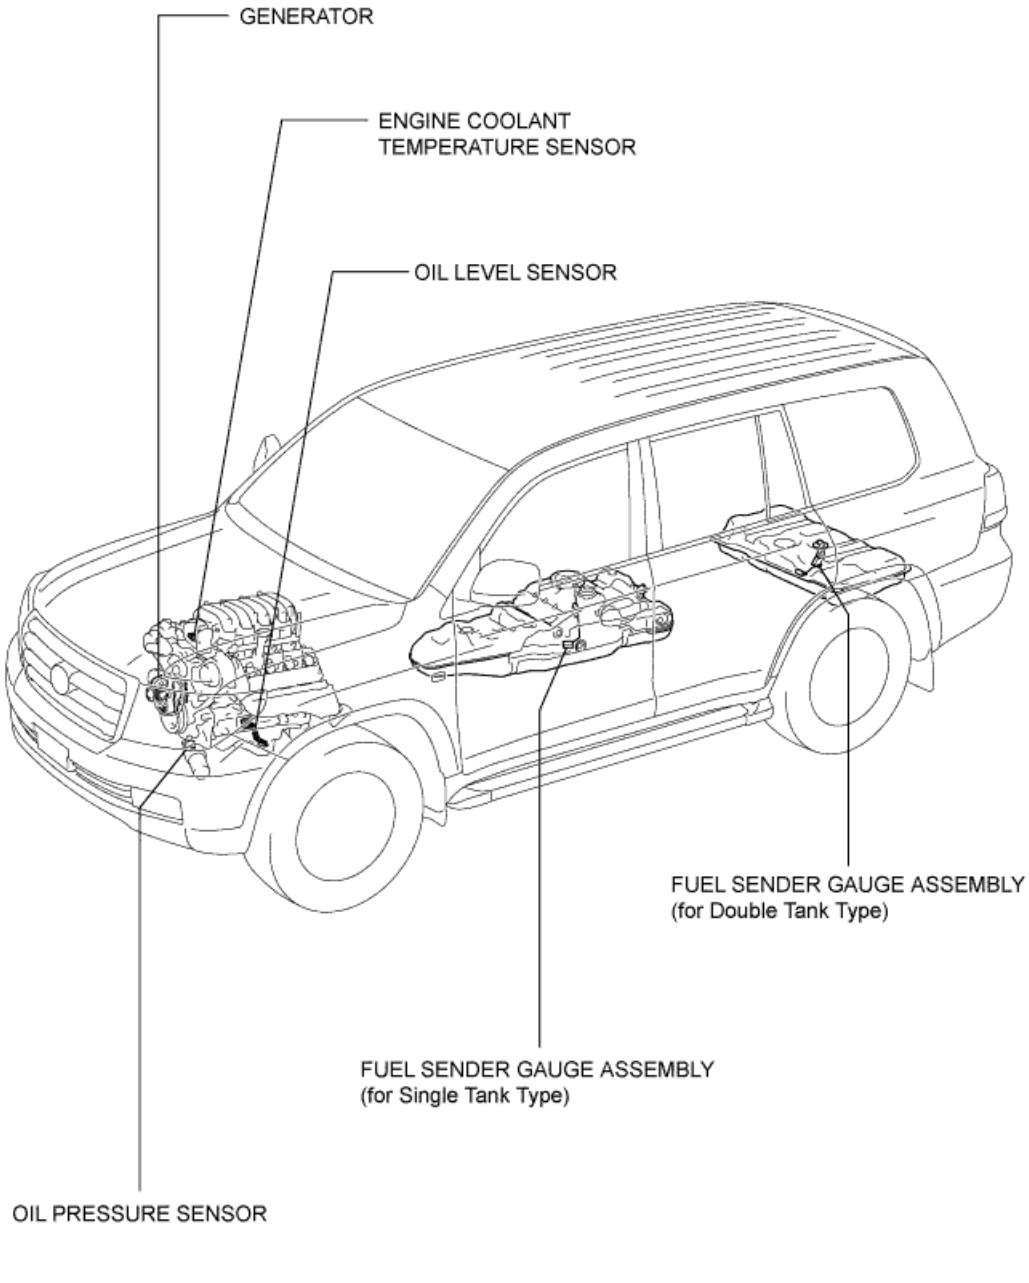
GENERATOR
ENGINE COOLANT
TEMPERATURE SENSOR
OIL LEVEL SENSOR
FUEL SENDER GAUGE ASSEMBLY
(for Double Tank Type)
FUEL SENDER GAUGE ASSEMBLY
(for Single Tank Type)
OIL PRESSURE SENSOR

H

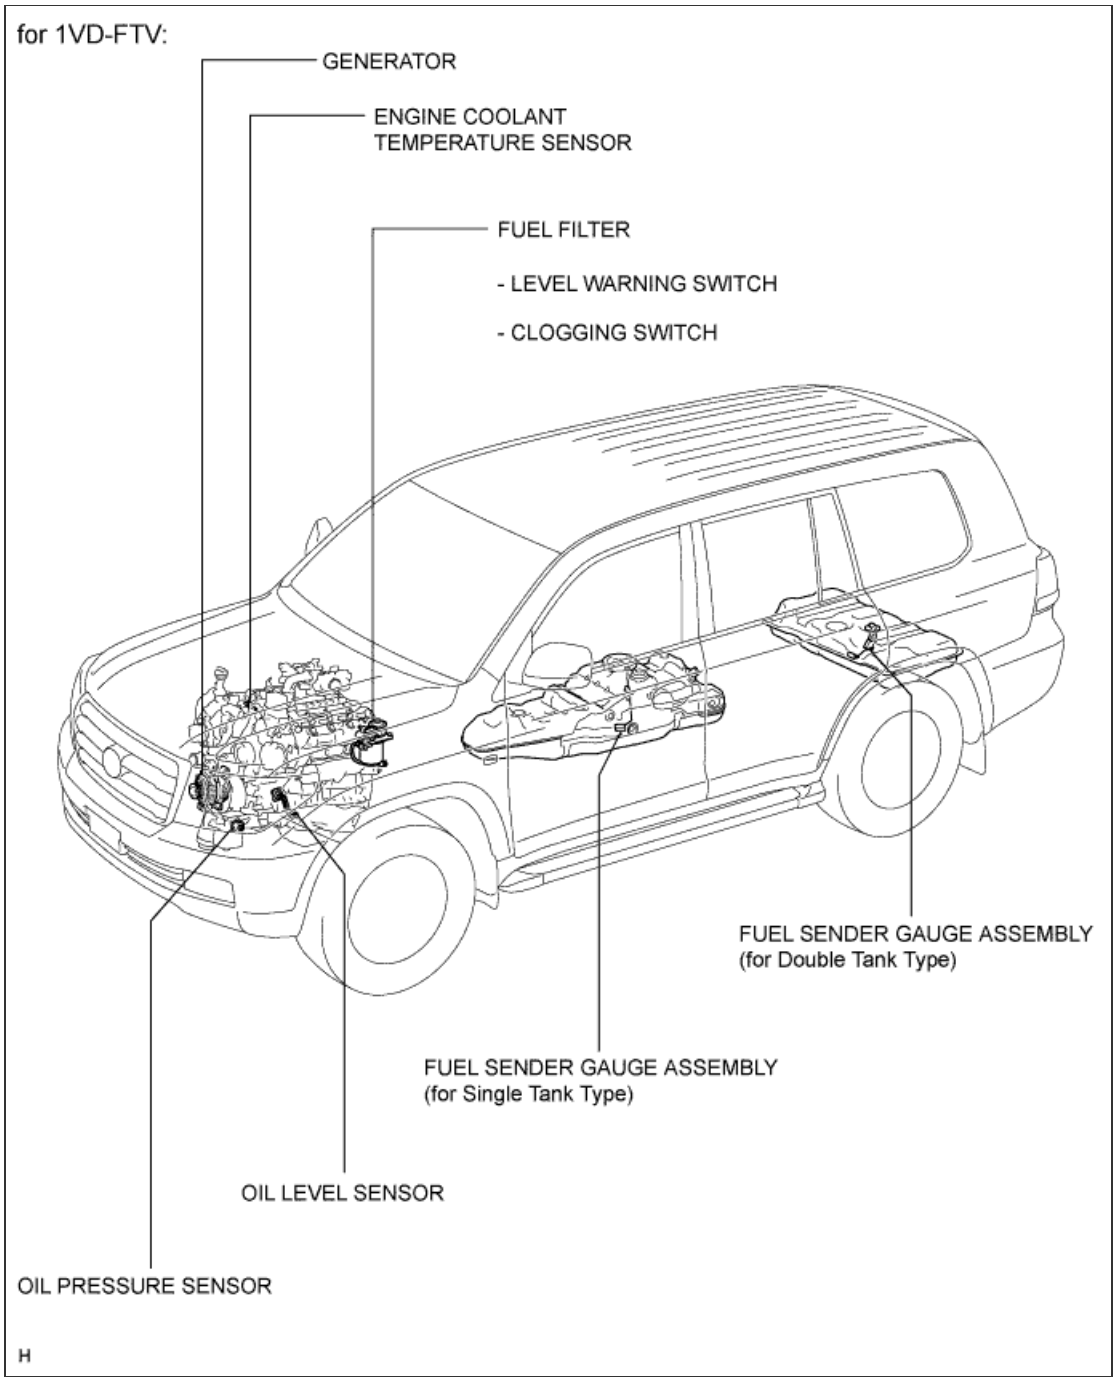

for 1VD-FTV:
GENERATOR
ENGINE COOLANT
TEMPERATURE SENSOR
FUEL FILTER
- LEVEL WARNING SWITCH
- CLOGGING SWITCH
FUEL SENDER GAUGE ASSEMBLY
(for Double Tank Type)
FUEL SENDER GAUGE ASSEMBLY
(for Single Tank Type)
OIL LEVEL SENSOR
OIL PRESSURE SENSOR
H


for 3UR-FE:

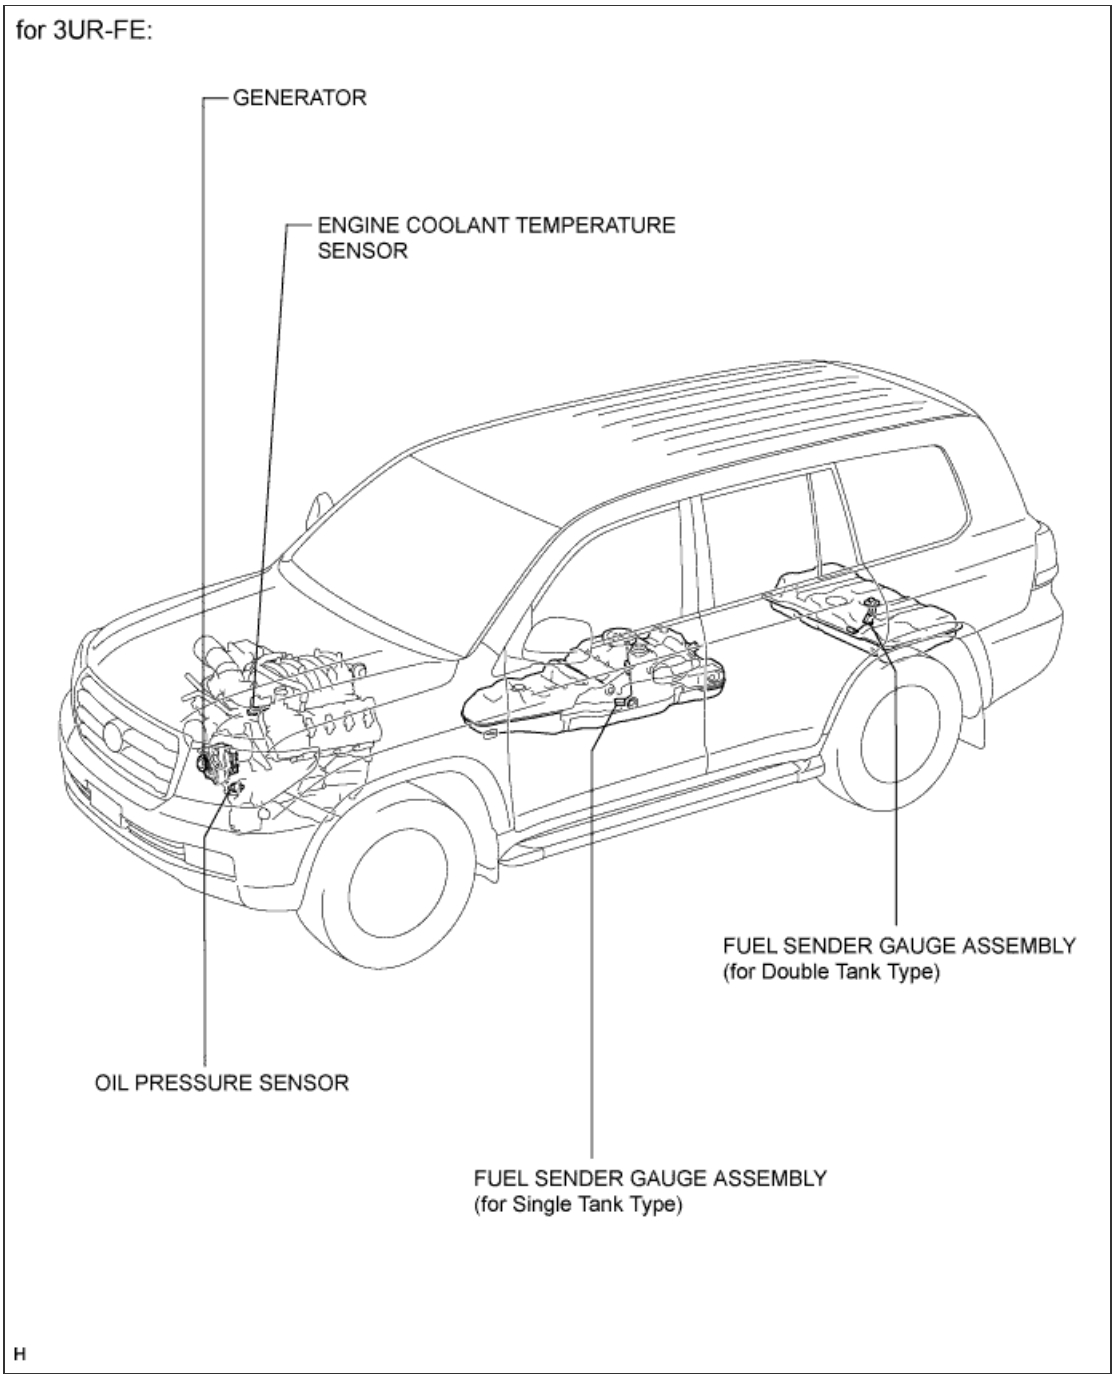
GENERATOR
ENGINE COOLANT TEMPERATURE SENSOR
FUEL SENDER GAUGE ASSEMBLY (for Double Tank Type)
OIL PRESSURE SENSOR
FUEL SENDER GAUGE ASSEMBLY (for Single Tank Type)

H

for Preparation Click here

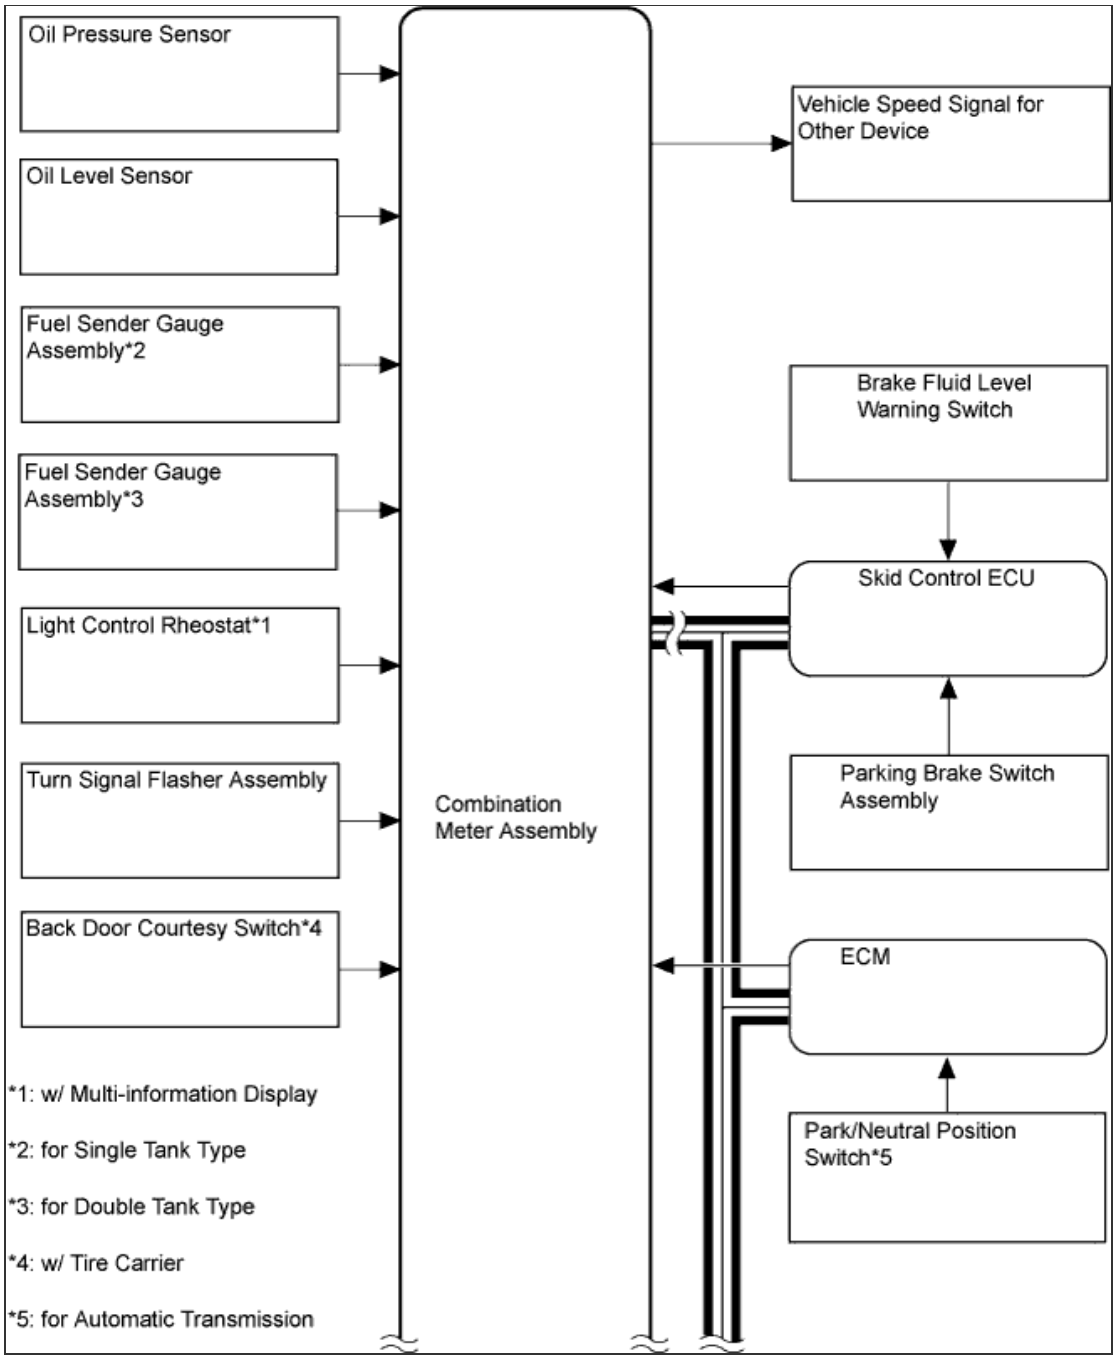

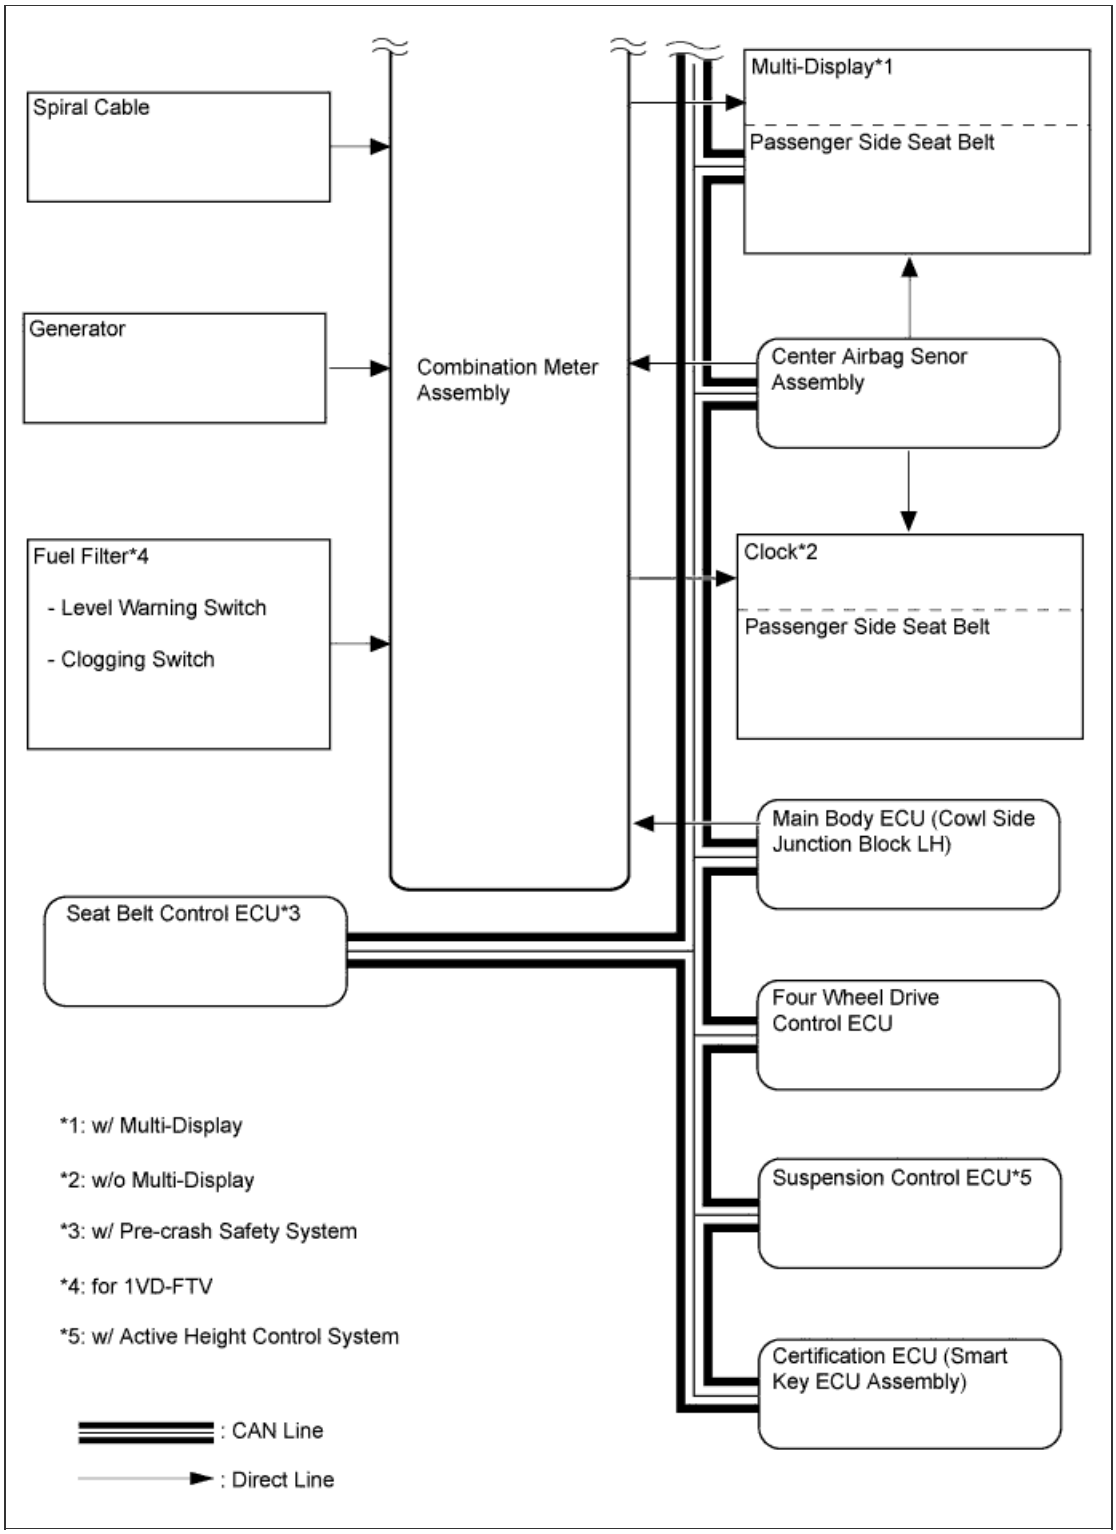

Communication Table (w/o Multi-information Display)

Sender	Receiver	Communication Signal	Communication Line
Combination meter assembly	• ECM • Main body ECU	Vehicle speed signal	Direct Line
	• Main body ECU	Rheostat duty signal	CAN
	• ECM	Vehicle specification signal (Destination/Handle code)	
	Multi-display*1	Front passenger side seat belt warning light signal	CAN
	Clock*2		Direct Line
		• CRUISE indicator signal • Engine coolant temperature signal • Fuel injection information signal*3, *4	CAN

ECM	Combination meter assembly	• Engine speed data*3, *4 • CHARGE indicator light signal	
		MIL signal	Direct Line
Center airbag sensor	Combination meter assembly	• Passenger side seat belt buckle switch signal • SRS warning light signal • Diagnosis signal	CAN
		• RSCA OFF indicator light signal*5	Direct Line
Four wheel drive control ECU	Combination meter assembly	• A/T P warning signal*6 • 4LO indicator light signal • Center differential lock indicator signal • Rear differential lock warning signal	CAN
Skid control ECU	Combination meter assembly	• ABS warning signal • VSC OFF indicator signal*7 • Slip indicator signal*7 • Vehicle speed signal • Brake warning light signal • CRAWL indicator signal • Downhill assist control indicator signal • SPEED LIMIT indicator signal	CAN
Main body ECU (Cowl side junction block LH)	Combination meter assembly	• Driver side seat belt buckle switch signal • Courtesy light switch signal • BEAM indicator light signal • FRONT FOG indicator light signal • REAR FOG indicator light signal*8 • DOOR warning signal	CAN
ECM*6	Combination meter assembly	• ECT PWR indicator signal • ATF temperature signal • Current gear position signal • Shift position P signal • Shift position R signal • Shift position N signal • Shift position D signal • Shift position 6 signal*9 • Shift position 5 signal • Shift position 4 signal • Shift position 3 signal • Shift position 2 signal • Shift position 1 signal • Sports mode enable signal • Shift position signal • Sports shift reject buzzer signal • 2nd START indicator light signal	CAN
Certification ECU	Combination meter assembly	• Smart key indicator light signal	CAN
Steering pad switch	Combination meter assembly	Steering pad switch operation signal	Direct Line
Fuel sender gauge	Combination meter assembly	Fuel level signal	Direct Line
Turn signal flasher assembly	Combination meter assembly	Turn signal indicator (LH/RH) signal	Direct Line
Washer fluid level sensor	Combination meter assembly	Washer signal	Direct Line
Brake fluid level warning switch	Combination meter assembly	Brake fluid level warning light signal	CAN
Oil level sensor	Combination meter assembly	Engine oil level signal	Direct Line
Light control rheostat	Combination meter assembly	Illumination signal	Direct Line
Generator	Combination meter assembly	CHARGE warning light signal	Direct Line
Oil pressure sensor	Combination meter assembly	Oil pressure signal	Direct Line

*1: w/ Multi-display

*2: w/o Multi-display
*3: for 1GR-FE
*4: for 2UZ-FE
*5: w/ Curtain Shield Airbag
*6: for Automatic Transmission
*7: w/ VSC
*8: w/ Rear Fog Light
*9: for AB60F Automatic Transmission


Communication Table (w/ Multi-information Display)


Sender	Receiver	Communication Signal	Communication Line
Combination meter assembly	• ECM • Main body ECU	Vehicle speed signal	Direct Line
	• Main body ECU	Rheostat duty signal	CAN
	• ECM	Vehicle specification signal (Destination/Handle code)	
	Multi-display*1	Front passenger side seat belt warning light signal	CAN
	Clock*2		Direct Line
ECM	Combination meter assembly	• CRUISE indicator signal • Engine coolant temperature signal • Fuel injection information signal*3 • Engine speed data*3 • CHARGE indicator light signal	CAN
		MIL signal	Direct Line
Center airbag sensor	Combination meter assembly	• Passenger side seat belt buckle switch signal • SRS warning light signal • Diagnosis signal	CAN
		• RSCA OFF indicator light signal*4	Direct Line
Four wheel drive control ECU	Combination meter assembly	• A/T P warning signal • 4LO indicator light signal • Center differential lock indicator signal • Rear differential lock warning signal*5	CAN
Skid control ECU	Combination meter assembly	• ABS warning signal • Slip indicator signal • Downhill assist control indicator signal • Vehicle speed signal • Brake warning light signal • CRAWL indicator signal • SPEED LIMIT indicator signal	CAN
Main body ECU (Cowl side junction block LH)	Combination meter assembly	• Driver side seat belt buckle switch signal • Courtesy light switch signal • BEAM indicator light signal • FRONT FOG indicator light signal • REAR FOG indicator light signal*6 • TAIL indicator light signal • DOOR warning signal	CAN
Seat belt control ECU	Combination meter assembly	• PCS indicator light signal*7	CAN
ECM	Combination meter assembly	• ECT PWR indicator signal • ATF temperature signal • Current gear position signal • Shift position P signal • Shift position R signal • Shift position N signal • Shift position D signal • Shift position 6 signal*8 • Shift position 5 signal • Shift position 4 signal • Shift position 3 signal • Shift position 2 signal	CAN

		• Shift position 1 signal • Sports mode enable signal • Shift position signal • Sports shift reject buzzer signal • 2nd START indicator light signal	
Steering pad switch	Combination meter assembly	Steering pad switch operation signal	Direct Line
Fuel sender gauge	Combination meter assembly	Fuel level signal	Direct Line
Turn signal flasher assembly	Combination meter assembly	Turn signal indicator (LH/RH) signal	Direct Line
Washer fluid level sensor	Combination meter assembly	Washer signal	Direct Line
Brake fluid level warning switch	Combination meter assembly	Brake fluid level warning light signal	CAN
Oil level sensor	Combination meter assembly	Engine oil level signal	Direct Line
Light control rheostat	Combination meter assembly	Illumination signal	Direct Line
Generator	Combination meter assembly	CHARGE warning light signal	Direct Line
Oil pressure sensor	Combination meter assembly	Oil pressure signal	Direct Line

*1: w/ Multi-display
*2: w/o Multi-display
*3: for 2UZ-FE
*4: w/ Curtain Shield Airbag
*5: w/ Rear Differential Lock
*6: w/ Rear Fog Light
*7: w/ Pre-crash Safety System
*8: for AB60F Automatic Transmission

for Preparation Click here

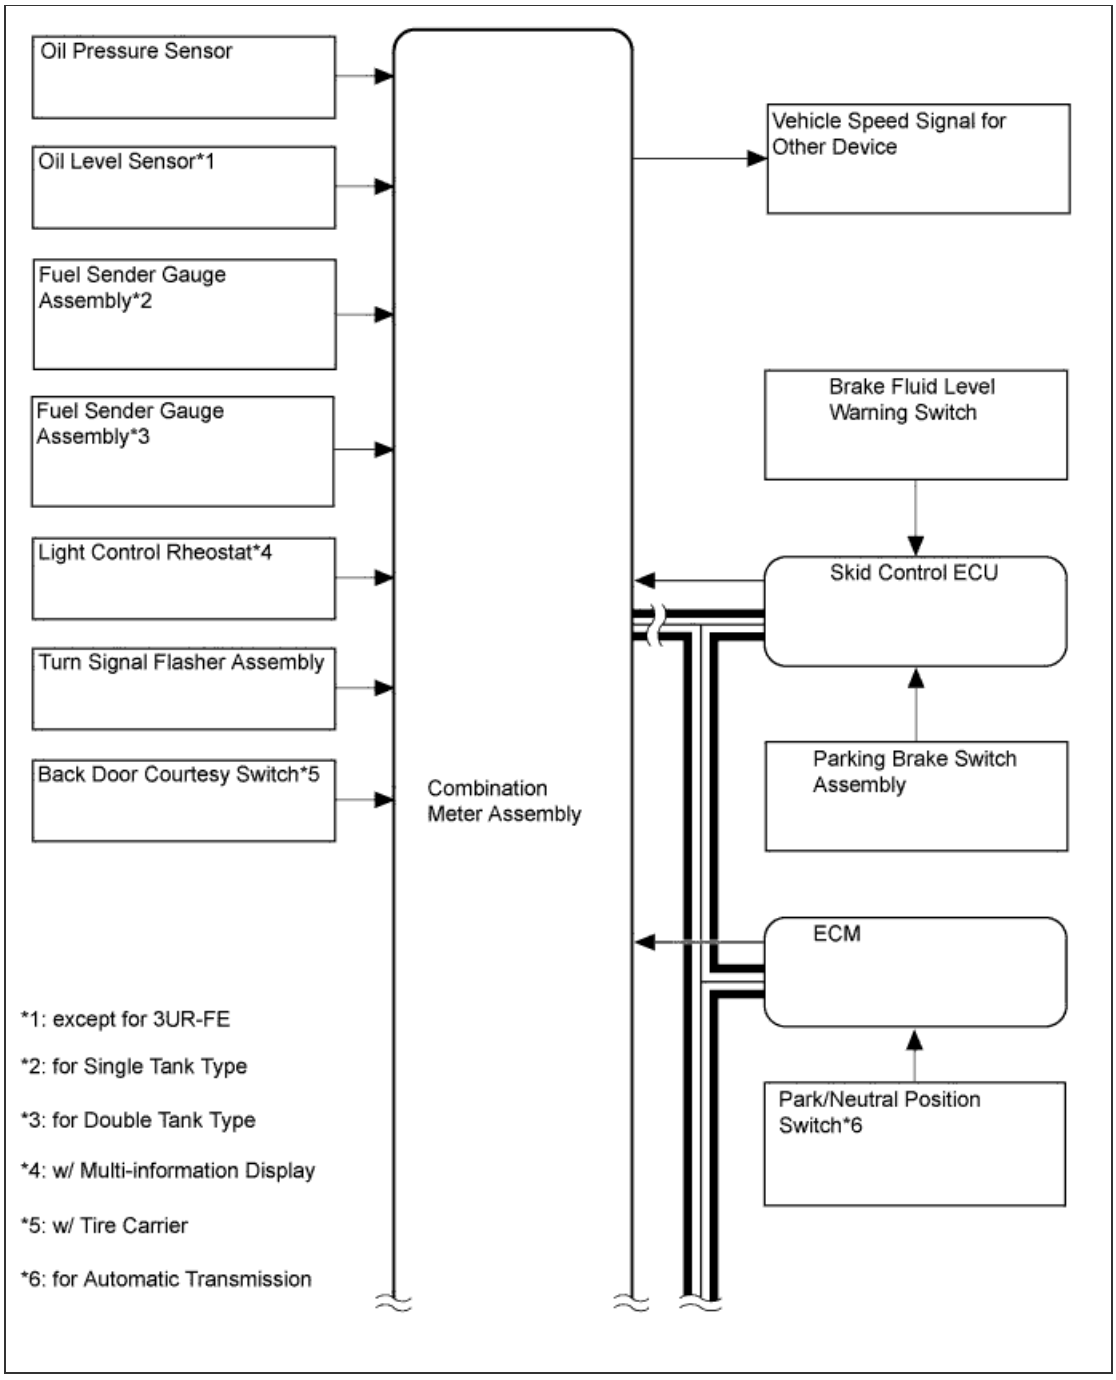

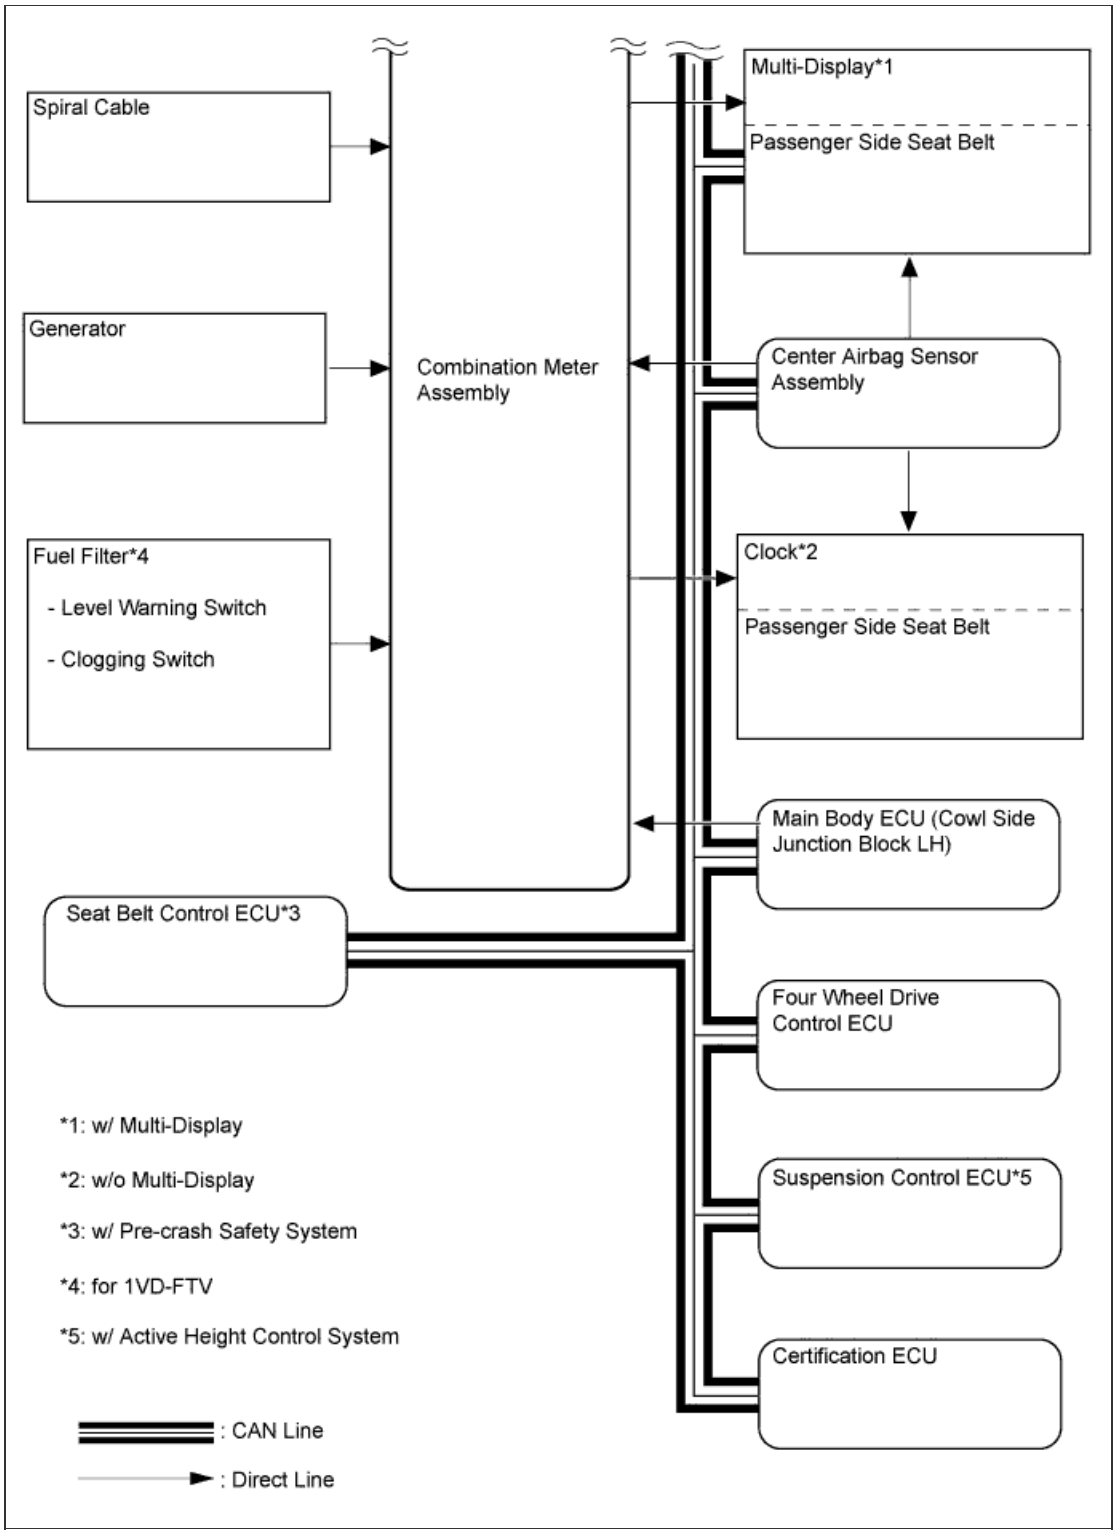

Communication Table (w/o Multi-information Display)

Sender	Receiver	Communication Signal	Communication Line
Combination meter assembly	• ECM • Main body ECU	Vehicle speed signal	Direct Line
	• Main body ECU	Rheostat duty signal	CAN
	• ECM	Vehicle specification signal (Destination/Handle code)	
	Multi-display*1	Front passenger side seat belt warning light signal	CAN
	Clock*2		Direct Line
		• CRUISE indicator signal • Engine coolant temperature signal • Fuel injection information signal*3, *4	CAN

ECM	Combination meter assembly	• Engine speed data*3, *4 • CHARGE indicator light signal	
		MIL signal	Direct Line
Center airbag sensor	Combination meter assembly	• Passenger side seat belt buckle switch signal • SRS warning light signal • Diagnosis signal	CAN
		• RSCA OFF indicator light signal*5	Direct Line
Four wheel drive control ECU	Combination meter assembly	• A/T P warning signal*6 • 4LO indicator light signal • Center differential lock indicator signal • Rear differential lock warning signal	CAN
Skid control ECU	Combination meter assembly	• ABS warning signal • VSC OFF indicator signal*7 • Slip indicator signal*7 • Vehicle speed signal • Brake warning light signal • CRAWL indicator signal • Downhill assist control indicator signal • SPEED LIMIT indicator signal	CAN
Main body ECU (Cowl side junction block LH)	Combination meter assembly	• Driver side seat belt buckle switch signal • Courtesy light switch signal • BEAM indicator light signal • FRONT FOG indicator light signal • REAR FOG indicator light signal*8 • DOOR warning signal	CAN
ECM*6	Combination meter assembly	• ECT PWR indicator signal • ATF temperature signal • Current gear position signal • Shift position P signal • Shift position R signal • Shift position N signal • Shift position D signal • Shift position 6 signal*9 • Shift position 5 signal • Shift position 4 signal • Shift position 3 signal • Shift position 2 signal • Shift position 1 signal • Sports mode enable signal • Shift position signal • Sports shift reject buzzer signal • 2nd START indicator light signal	CAN
Certification ECU	Combination meter assembly	• ey indicator light signal	CAN
Steering pad switch	Combination meter assembly	Steering pad switch operation signal	Direct Line
Fuel sender gauge	Combination meter assembly	Fuel level signal	Direct Line
Turn signal flasher assembly	Combination meter assembly	Turn signal indicator (LH/RH) signal	Direct Line
Washer fluid level sensor	Combination meter assembly	Washer signal	Direct Line
Brake fluid level warning switch	Combination meter assembly	Brake fluid level warning light signal	CAN
Oil level sensor*11	Combination meter assembly	Engine oil level signal	Direct Line
Light control rheostat	Combination meter assembly	Illumination signal	Direct Line
Generator	Combination meter assembly	CHARGE warning light signal	Direct Line
Oil pressure sensor	Combination meter assembly	Oil pressure signal	Direct Line

*1 w/ Multi-display

*2 w/o Multi-display
*3 for 1GR-FE
*4 for 2U -FE
*5 w/ Curtain Shield Airbag
*6 for Automatic Transmission
*7 w/ VSC
*8 w/ Rear Fog Light
*9 for AB6 F Automatic Transmission

Communication Table (w/ Multi-information Display)


Sender	Receiver	Communication Signal	Communication Line
Combination meter assembly	• ECM • Main body ECU	Vehicle speed signal	Direct Line
	• Main body ECU	Rheostat duty signal	CAN
	• ECM	Vehicle specification signal (Destination/Handle code)	
	Multi-display*1	Front passenger side seat belt warning light signal	CAN
	Clock*2		Direct Line
ECM	Combination meter assembly	• CRUISE indicator signal • Engine coolant temperature signal • Fuel injection information signal*3, *9 • Engine speed data*3, *9 • CHARGE indicator light signal	CAN
		MIL signal	Direct Line
Center airbag sensor	Combination meter assembly	• Passenger side seat belt buckle switch signal • SRS warning light signal • Diagnosis signal	CAN
		• RSCA OFF indicator light signal*4	Direct Line
Four wheel drive control ECU	Combination meter assembly	• A/T P warning signal • 4LO indicator light signal • Center differential lock indicator signal • Rear differential lock warning signal*5	CAN
Skid control ECU	Combination meter assembly	• ABS warning signal • Slip indicator signal • Downhill assist control indicator signal • Vehicle speed signal • Brake warning light signal • CRAWL indicator signal • SPEED LIMIT indicator signal	CAN
Main body ECU (Cowl side junction block LH)	Combination meter assembly	• Driver side seat belt buckle switch signal • Courtesy light switch signal • BEAM indicator light signal • FRONT FOG indicator light signal • REAR FOG indicator light signal*6 • TAIL indicator light signal • DOOR warning signal	CAN
Seat belt control ECU	Combination meter assembly	• PCS indicator light signal*7	CAN
ECM	Combination meter assembly	• ECT PWR indicator signal • ATF temperature signal • Current gear position signal • Shift position P signal • Shift position R signal • Shift position N signal • Shift position D signal • Shift position 6 signal*8 • Shift position 5 signal • Shift position 4 signal • Shift position 3 signal • Shift position 2 signal	CAN

		• Shift position 1 signal • Sports mode enable signal • Shift position signal • Sports shift reject buzzer signal • 2nd START indicator light signal	
Steering pad switch	Combination meter assembly	Steering pad switch operation signal	Direct Line
Fuel sender gauge	Combination meter assembly	Fuel level signal	Direct Line
Turn signal flasher assembly	Combination meter assembly	Turn signal indicator (LH/RH) signal	Direct Line
Washer fluid level sensor	Combination meter assembly	Washer signal	Direct Line
Brake fluid level warning switch	Combination meter assembly	Brake fluid level warning light signal	CAN
Oil level sensor*1	Combination meter assembly	Engine oil level signal	Direct Line
Light control rheostat	Combination meter assembly	Illumination signal	Direct Line
Generator	Combination meter assembly	CHARGE warning light signal	Direct Line
Oil pressure sensor	Combination meter assembly	Oil pressure signal	Direct Line

*1 w/ Multi-display
*2 w/o Multi-display
*3 for 2U -FE
*4 w/ Curtain Shield Airbag
*5 w/ Rear Differential Lock
*6 w/ Rear Fog Light
*7 w/ Pre-crash Safety System
*8 for AB6 F Automatic Transmission
*9 for 3UR-FE
*1 e cept for 3UR-FE

for Preparation Click here

METER GAUGE AND WARNING/INDICATOR (w/o Multi-information Display)

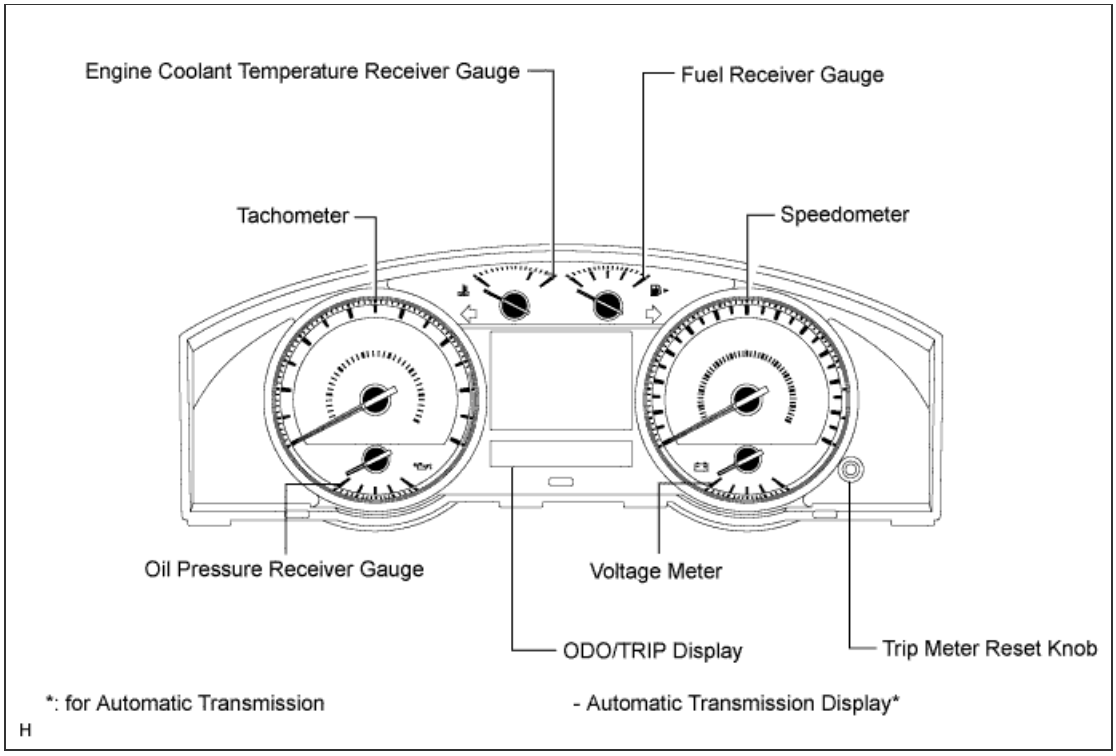

Meter/Gauge

Item	Details
Speedometer	Based on a signal received from the wheel speed sensor, the skid control ECU calculates the vehicle speed and transmits data to the combination meter (CAN).
Tachometer	The combination meter receives a speed signal from the ECM, and the gauge needle operates (CAN).
ODO/TRIP meter	• The combination meter receives a vehicle speed pulse integration signal from the skid control ECU, and the ODO/TRIP meter display operates. (CAN) • Using the trip meter reset knob, the ODO/TRIP meter display changes.
Fuel receiver gauge	The combination meter receives fuel amount information measured by the fuel sender gauge, and the gauge needle operates (Direct line).
Engine coolant temperature gauge	The combination meter receives an engine coolant temperature signal from the ECM, and the gauge needle operates (CAN).
Oil pressure receiver gauge	The combination meter receives an engine speed signal from the ECM (CAN), and receives an oil pressure sender signal from the oil pressure sender (Direct line). Then the meter measures signals and the gauge needle operates.
Voltage meter	Monitors IG voltage and the gauge needle operates (Direct line).

Warning/Indicator

Item	Details
BEAM indicator light	Receives signals from the main body ECU (CAN).
FRONT FOG indicator light	The indicator turns on when a FRONT FOG illumination command signal is received (CAN).
REAR FOG indicator light*1	


	The indicator turns on when a REAR FOG illumination command signal is received (CAN).
A/T OIL TEMP warning light*2 A/T OIL TEMP	Warning is displayed when the oil temperature is high (CAN).
A/T P warning light*2 A/T P	The indicator turns on when a shift position P signal or transfer neutral switch signal are received (CAN).
SRS warning light 	Receives malfunction signals from the center airbag sensor (CAN).
SMART KEY indicator light 	The indicator turns on when a key not in cabin warning signal is received (CAN).
DOOR warning light 	The open door indicator comes on when a signal is received from the main body ECU (CAN).
TIRE CARRIER warning light*3 	The indicator turns on based on the TIRE CARRIER illumination command signal (Direct line).
Driver side seat belt warning light 	Receives driver seat belt signals (Unfastened) from the main body ECU (CAN).
Brake warning light 	• Comes on when the parking brake switch is ON (CAN). • Brake fluid level warning switch is ON (Direct line). • Vehicle stability control system is malfunctioning.
CHARGE warning light 	Receives malfunction signals from the generator (Direct line).
4LO indicator light 4LO	Receives 4LO indicator signals from the Four WHEEL DRIVE control ECU (CAN).
ABS warning light 	Receives malfunction signals from the skid control ECU (CAN).
MIL 	Receives malfunction signals from the ECM (Direct line).
T-BELT indicator light*4	

T-BELT	Depending on the distance the timing belt warning is displayed on the meter. Only applies to diesel vehicles (Direct line).
GLOW indicator light*5 	The indicator turns on when a GLOW indicator signal is received (CAN).
OIL LEVEL indicator light 	The indicator turns on when an oil level signal is received (Direct line).
FUEL warning light 	Receives fuel empty signals from the fuel sender gauge (Direct line).
FUEL FILTER & SEDIMENTER indicator light*5 	The indicator turns on when a fuel filter clogged malfunction signal is received, or blinks when a fuel sedimenter malfunction signal is received (Direct line).
SLIP indicator light*6 	Receives malfunction signals from the skid control ECU (CAN).
VSC OFF indicator light*6 VSC OFF	The VSC OFF indicator turns on when a VSC warning signal is received (CAN).
CRUISE main indicator light CRUISE	Receives a CRUISE on signal or malfunction signal from the ECM (CAN).
Turn signal indicator light (LH/RH) 	Receives a turn signal from the FLASHER relay (Direct line).
WASHER indicator light 	The indicator turns on when a washer fluid level signal is received (Direct line).
RSCA OFF indicator light*7 RSCA OFF	Receives an RSCA OFF signal from the center airbag sensor (Direct line).
CRAWL indicator light 	Receives a CRAWL switch ON signal from the skid control ECU (CAN).
Downhill assist control indicator light 	The indicator turns on when a downhill assist control indicator signal is received (CAN).

ECT PWR indicator light*2 	Receives an ECT PWR switch ON signal from the ECM (CAN).
2nd START indicator light*2 	Receives a 2nd START switch ON signal from the ECM (CAN).
CENTER differential lock indicator light 	Receives a center differential lock switch ON signal from the Four WHEEL DRIVE control ECU (CAN).
REAR differential lock warning light 	The indicator turns on when a REAR differential lock indicator signal is received (CAN).
SPEED LIMIT indicator light 	The indicator turns on when a vehicle speed signal is received (CAN).
A/T P shift position indicator*2	Receives a P signal from the ECM (CAN).
A/T R shift position indicator*2	Receives an R signal from the ECM (CAN).
A/T N shift position indicator*2	Receives an N signal from the ECM (CAN).
A/T D shift position indicator*2	Receives a D signal from the ECM (CAN).
A/T S (1 to 5) shift position indicator*8	Receives a (1 to 5) signal from the ECM (CAN).
A/T S (1 to 6) shift position indicator*9	Receives a (1 to 6) signal from the ECM (CAN).

*1: w/ Rear Fog Light
*2: for Automatic Transmission
*3: w/ Tire Carrier
*4: for 2UZ-FE
*5: for 1VD-FTV
*6: w/ VSC
*7: w/ Curtain Shield Airbag
*8: for A750F Automatic Transmission
*9: for AB60F Automatic Transmission

METER GAUGE AND WARNING/INDICATOR (w/ Multi-information Display)

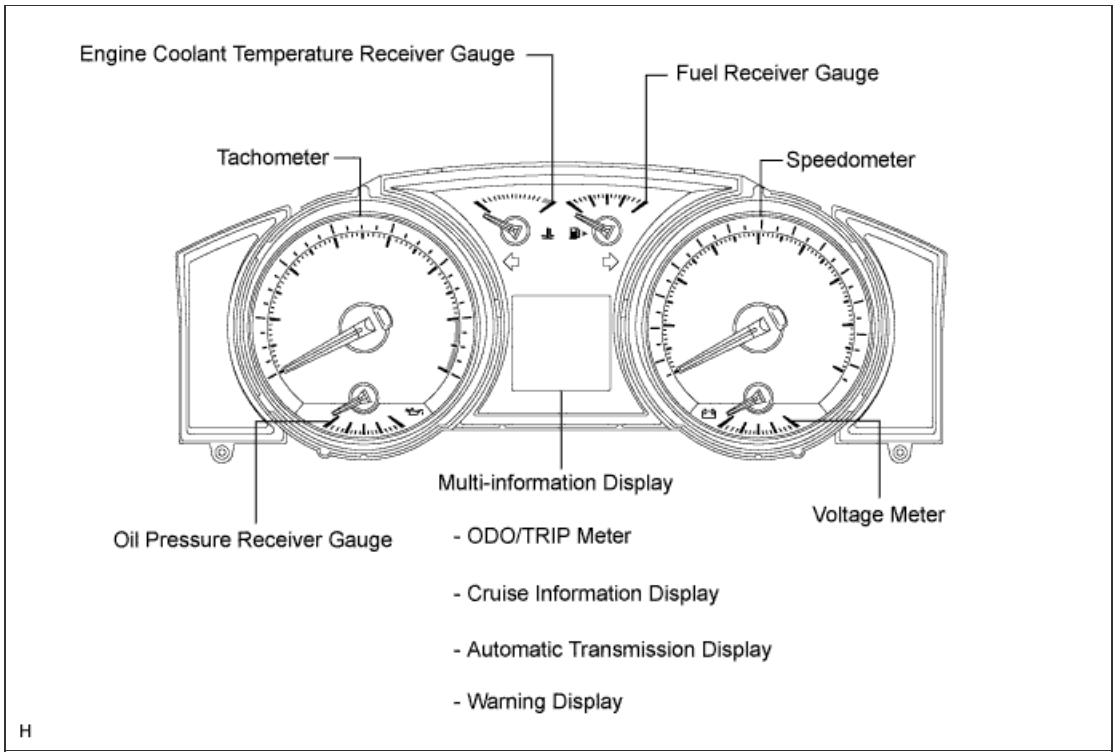

Meter/Gauge

Item	Details
Speedometer	Based on a signal received from the wheel speed sensor, the skid control ECU calculates the vehicle speed and transmits data to the combination meter (CAN).
Tachometer	The combination meter receives a speed signal from the ECM, and the gauge needle operates (CAN).
ODO/TRIP meter	• The combination meter receives a vehicle speed pulse integration signal from the skid control ECU, and the ODO/TRIP meter display operates. (CAN) • Using the trip meter reset knob, the ODO/TRIP meter display changes.
Fuel receiver gauge	The combination meter receives fuel amount information measured by the fuel sender gauge, and the gauge needle operates (Direct line).
Engine coolant temperature gauge	The combination meter receives an engine coolant temperature signal from the ECM, and the gauge needle operates (CAN).
Oil pressure receiver gauge	The combination meter receives an engine speed signal from the ECM (CAN), and receives an oil pressure sender signal from the oil pressure sender (Direct line). Then the meter measures signals and the gauge needle operates.
Voltage meter	Monitors IG voltage and the gauge needle operates (Direct line).

Warning/Indicator

Item	Details
BEAM indicator light 	Receives signals from the main body ECU (CAN).
FRONT FOG indicator light 	The indicator turns on when a FRONT FOG light illumination signal is received (CAN).
TAIL LIGHT indicator light 	The indicator turns on when a taillight illumination signal is received (CAN).
REAR FOG indicator light*1 	The indicator turns on when a REAR FOG light illumination signal is received (CAN).

A/T P warning light A/T P	The indicator turns on when a shift position P signal or transfer neutral switch signal are received (CAN).
SRS warning light 	Receives malfunction signals from the center airbag sensor (CAN).
DOOR warning light 	The open door indicator comes on when a signal is received from the main body ECU (CAN).
TIRE CARRIER warning light*2 	The indicator turns on based on the TIRE CARRIER illumination command signal (Direct line).
Driver side seat belt warning light 	Receives driver seat belt signals (Unfastened) from the main body ECU (CAN).
Brake warning light 	• Comes on when the parking brake switch is ON (CAN). • Brake fluid level warning switch is ON (Direct line). • Vehicle stability control system is malfunctioning.
CHARGE warning light 	Receives malfunction signals from the generator (Direct line).
4LO indicator light 4LO	Receives 4LO indicator light signal from the Four WHEEL DRIVE control ECU (CAN).
ABS warning light 	Receives malfunction signals from the skid control ECU (CAN).
MIL 	Receives malfunction signals from the ECM (Direct line).
GLOW indicator light*3 	The indicator turns on when a GLOW indicator signal is received (CAN).
FUEL warning light 	Receives fuel empty signals from the fuel sender gauge (Direct line).
SLIP indicator light 	Receives malfunction signals from the skid control ECU (CAN).

CRUISE main indicator light CRUISE	Receives a CRUISE on signal or malfunction signal from the ECM (CAN).
Turn signal indicator light (LH/RH) 	Receives a turn signal from the FLASHER relay (Direct line).
RSCA OFF indicator light*4 RSCA OFF	Receives an RSCA OFF signal from the center airbag sensor (Direct line).
Master warning light 	Receives a warning signal from each sensor and ECU (Direct line and CAN).
CRAWL indicator light 	Receives a CRAWL switch ON signal from the skid control ECU (CAN).
Downhill assist control indicator light 	The indicator turns on when a downhill assist control indicator signal is received (CAN).
ECT PWR indicator light ECT PWR	Receives an ECT PWR switch ON signal from the ECM (CAN).
2nd START indicator light 2nd STRT	Receives a 2nd START switch ON signal from the ECM (CAN).
Center Differential Lock indicator light 	Receives a center differential lock switch ON signal from the Four WHEEL DRIVE ECU (CAN).
Rear Differential Lock warning light*5 	The indicator turns on when a REAR differential lock indicator signal is received (CAN).
SPEED LIMIT indicator light 120 km/h	The indicator turns on when a vehicle speed signal is received (CAN).
PCS indicator light*6 PCS	Receives a PCS indicator light signal from the seat belt control ECU (CAN).
A/T P shift position indicator	Receives a P signal from the ECM (CAN).
A/T R shift position indicator	Receives an R signal from the ECM (CAN).
A/T N shift position indicator	Receives an N signal from the ECM (CAN).
A/T D shift position indicator	Receives a D signal from the ECM (CAN).
A/T S (1 to 5) shift position indicator*7	Receives a (1 to 5) signal from the ECM (CAN).


A/T S (1 to 6) shift position indicator*8	Receives a (1 to 6) signal from the ECM (CAN).

*1: w/ Rear Fog Light
*2: w/ Tire Carrier
*3: for 1VD-FTV
*4: w/ Curtain Shield Airbag
*5: w/ Rear Differential Lock
*6: w/ Pre-crash Safety System
*7: for A750F Automatic Transmission
*8: for AB60F Automatic Transmission

MULTI-INFORMATION DISPLAY (w/ Multi-information Display)


When the DISP switch is pressed, the multi-information display is changed between the following: cruise information display and warning display.

a. Cruise information display:
The cruise information is displayed in the following order each time the DISP switch is pressed.

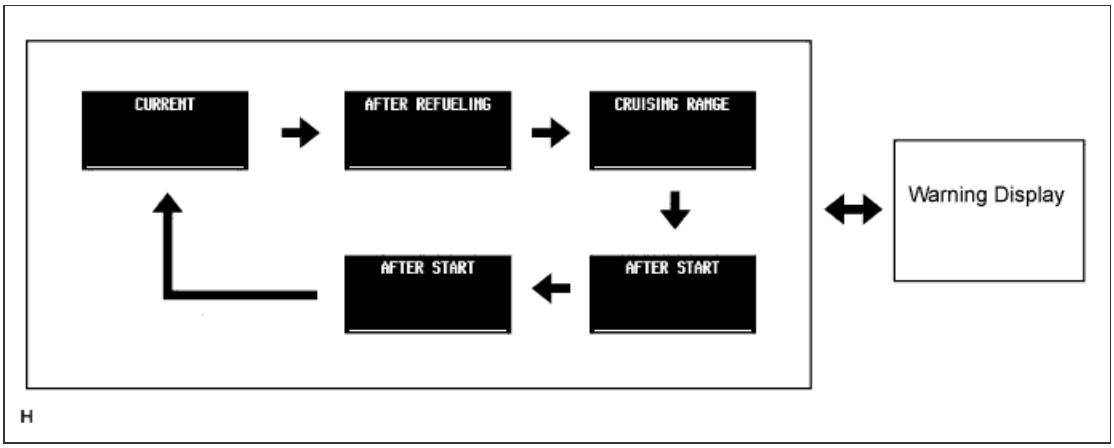


Display	Outline
CURRENT	Receives vehicle speed pulse signals (via the direct line and CAN) and fuel consumption data, and measures the instant fuel consumption.
AFTER REFUELING	Receives vehicle speed pulse signals (via CAN) and fuel consumption data, and measures the average fuel consumption from the time the vehicle was refueled.
CRUISING RANGE	• Calculates the estimated distance to empty. • The distance is calculated using the fuel gauge value and long-term learned fuel consumption value.
AFTER START (Average speed)	Receives vehicle speed pulse signals (via the direct line and CAN) and fuel consumption data, and measures the average vehicle speed from the time the engine was started.
AFTER START (Travel distance)	Receives vehicle speed pulse signals (via the direct line and CAN) and fuel consumption data, and measures the distance driven from the time the engine was started.


b. Basic Flowchart.

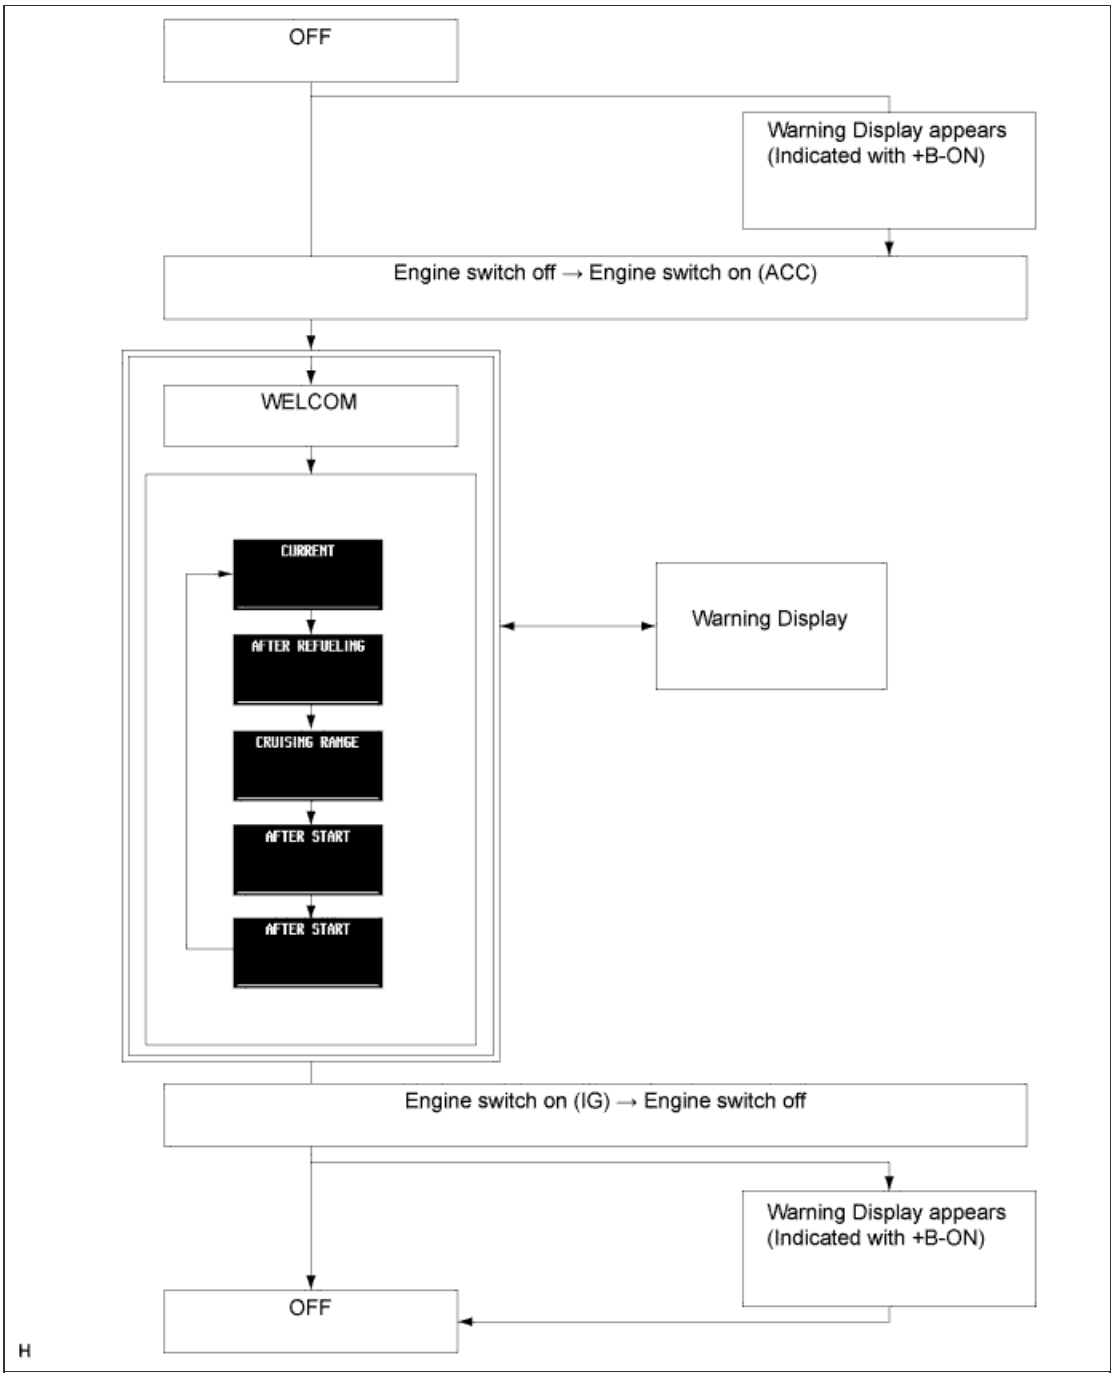


c. Multi-information Display:
When a warning is necessary, the warning display interrupts the multi-information display. The master warning light may illuminate or blink and buzzer may sound depending on the item in the multi-information display.

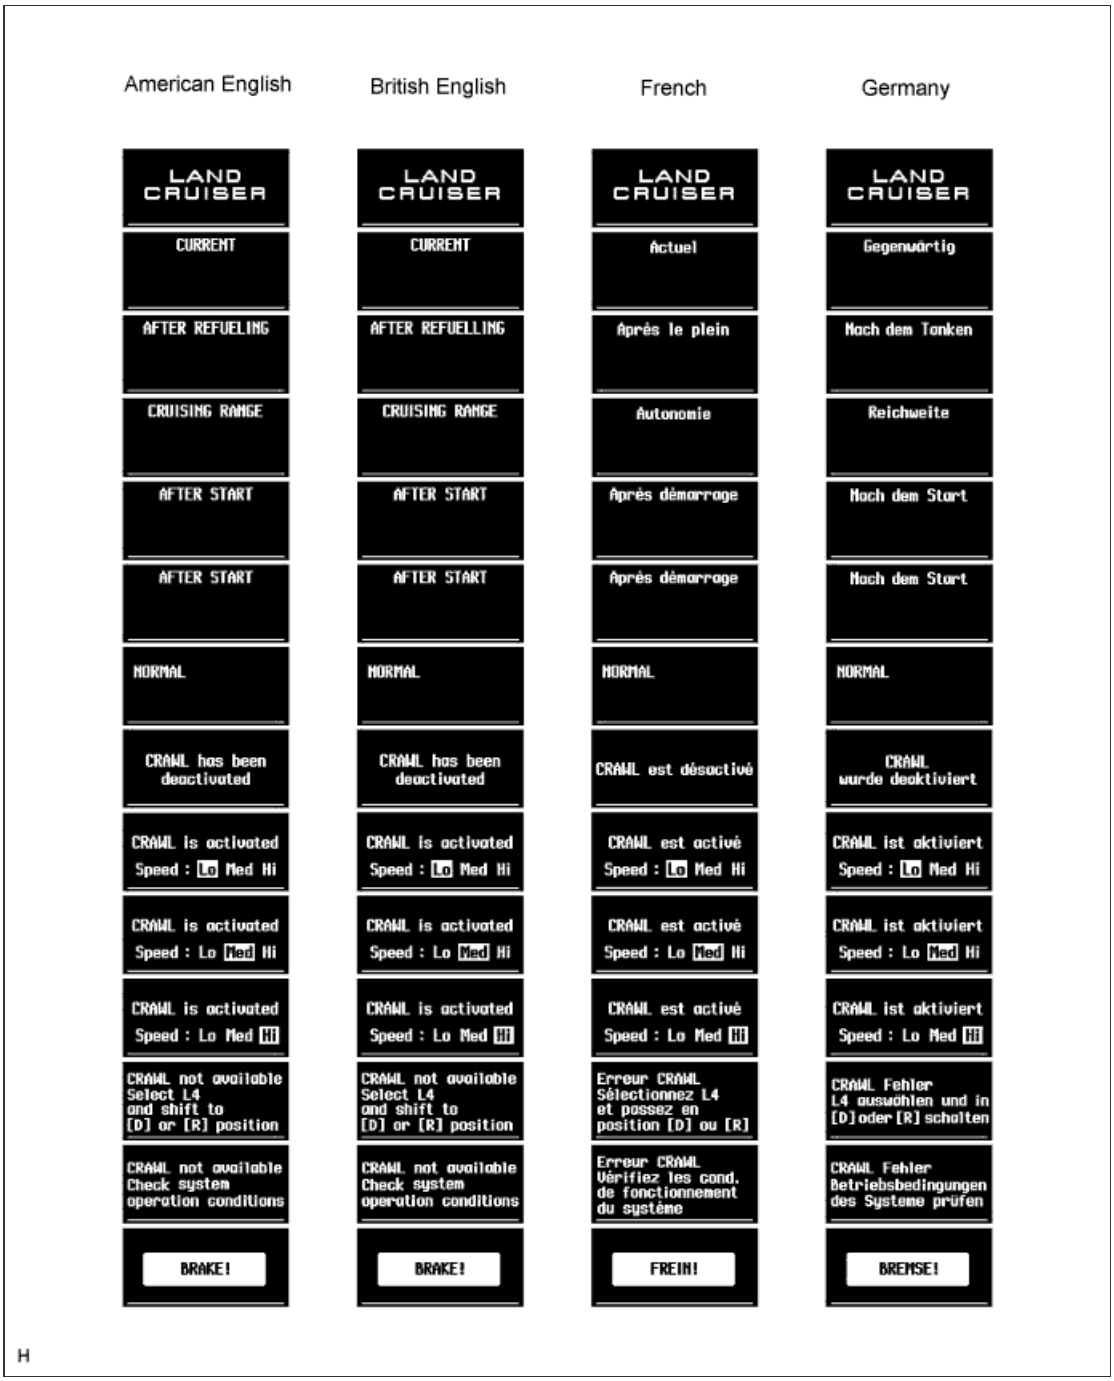
American English
British English
French
Germany
LAND CRUISER
CURRENT
AFTER REFUELING
CRUISING RANGE
AFTER START
AFTER START
NORMAL
CRAWL has been deactivated
CRAWL is activated Speed : Lo Med Hi
CRAWL is activated Speed : Lo Med Hi
CRAWL is activated Speed : Lo Med Hi
CRAWL not available Select L4 and shift to [D] or [R] position
CRAWL not available Check system operation conditions
BRAKE!
LAND CRUISER
CURRENT
AFTER REFUELLING
CRUISING RANGE
AFTER START
AFTER START
NORMAL
CRAWL has been deactivated
CRAWL is activated Speed : Lo Med Hi
CRAWL is activated Speed : Lo Med Hi
CRAWL is activated Speed : Lo Med Hi
CRAWL not available Select L4 and shift to [D] or [R] position
CRAWL not available Check system operation conditions
BRAKE!
LAND CRUISER
Actuel
Après le plein
Autonomie
Après démarrage
Après démarrage
NORMAL
CRAWL est désactivé
CRAWL est activé Speed : Lo Med Hi
CRAWL est activé Speed : Lo Med Hi
CRAWL est activé Speed : Lo Med Hi
Erreur CRAWL Sélectionnez L4 et passez en position [D] ou [R]
Erreur CRAWL Vérifiez les cond. de fonctionnement du système
FREIN!
LAND CRUISER
Gegenwärtig
Nach dem Tanken
Reichweite
Nach dem Start
Nach dem Start
NORMAL
CRAWL wurde deaktiviert
CRAWL ist aktiviert Speed : Lo Med Hi
CRAWL ist aktiviert Speed : Lo Med Hi
CRAWL ist aktiviert Speed : Lo Med Hi
CRAWL Fehler L4 auswählen und in [D] oder [R] schalten
CRAWL Fehler Betriebsbedingungen des Systems prüfen
BREMSE!


H

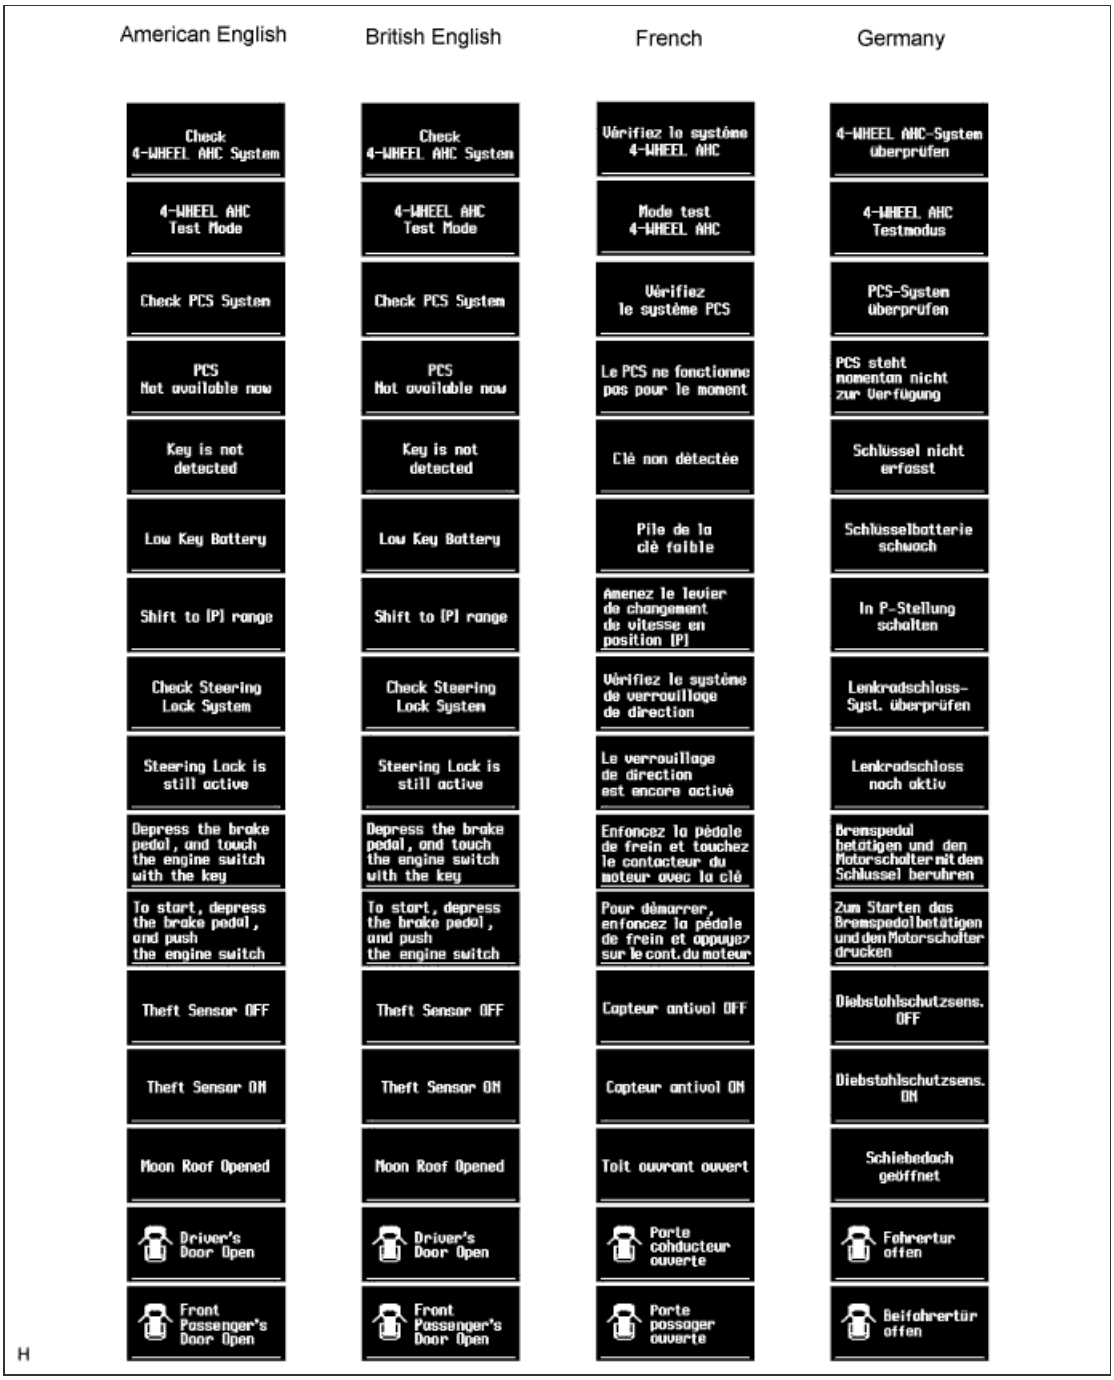

American English
British English
French
Germany
Check 4-WHEEL AHC System
Check 4-WHEEL AHC System
Vérifiez le système 4-WHEEL AHC
4-WHEEL AHC-System überprüfen
4-WHEEL AHC Test Mode
4-WHEEL AHC Test Mode
Mode test 4-WHEEL AHC
4-WHEEL AHC Testmodus
Check PCS System
Check PCS System
Vérifiez le système PCS
PCS-System überprüfen
PCS Not available now
PCS Not available now
Le PCS ne fonctionne pas pour le moment
PCS steht momentan nicht zur Verfügung
Key is not detected
Key is not detected
Clé non détectée
Schlüssel nicht erfasst
Low Key Battery
Low Key Battery
Pile de la clé faible
Schlüsselbatterie schwach
Shift to [P] range
Shift to [P] range
Amenez le levier de changement de vitesse en position [P]
In P-Stellung schalten
Check Steering Lock System
Check Steering Lock System
Vérifiez le système de verrouillage de direction
Lenkradschloss-Syst. überprüfen
Steering Lock is still active
Steering Lock is still active
Le verrouillage de direction est encore activé
Lenkradschloss noch aktiv
Depress the brake pedal, and touch the engine switch with the key
Depress the brake pedal, and touch the engine switch with the key
Enfoncez la pédale de frein et touchez le contacteur du moteur avec la clé
Bremspedal betätigen und den Motorschalter mit den Schlüssel berühren
To start, depress the brake pedal, and push the engine switch
To start, depress the brake pedal, and push the engine switch
Pour démarrer, enfoncez la pédale de frein et appuyez sur le cont. du moteur
Zum Starten das Bremspedal betätigen und den Motorschalter drücken
Theft Sensor OFF
Theft Sensor OFF
Capteur antivol OFF
Diebstahlschutzsens. OFF
Theft Sensor ON
Theft Sensor ON
Capteur antivol ON
Diebstahlschutzsens. ON
Moon Roof Opened
Moon Roof Opened
Toit ouvrant ouvert
Schiebedach geöffnet
Driver's Door Open
Driver's Door Open
Porte conducteur ouverte
Fahrertür offen
Front Passenger's Door Open
Front Passenger's Door Open
Porte passager ouverte
Beifahrertür offen

H

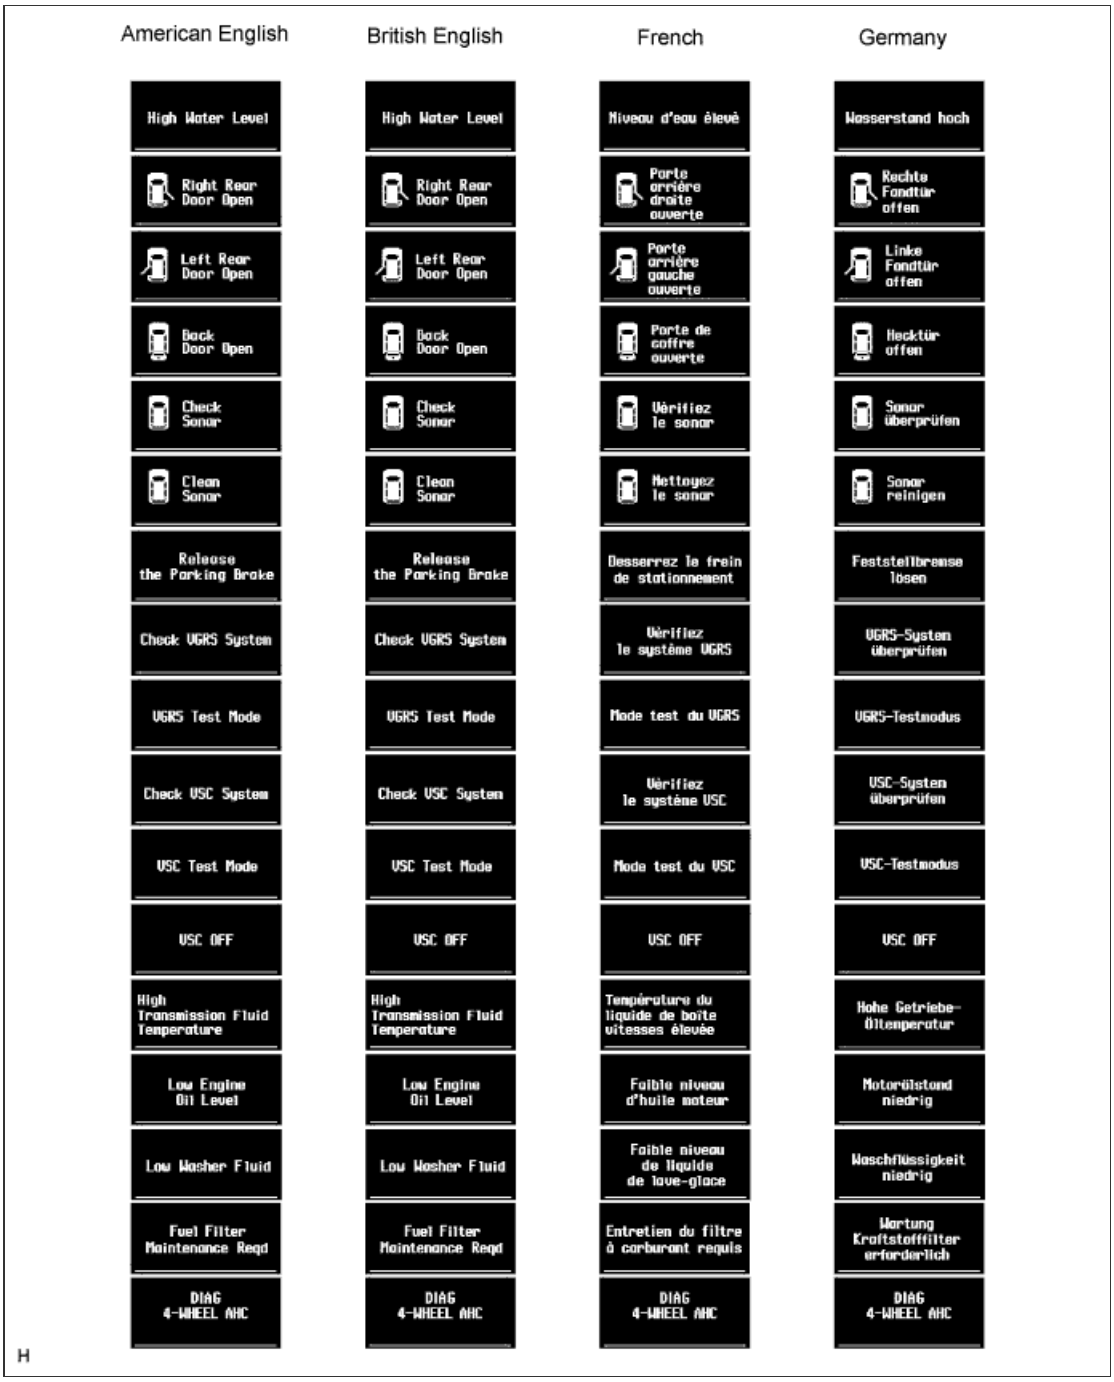

American English
British English
French
Germany
High Water Level
High Water Level
Niveau d'eau élevé
Wasserstand hoch
Right Rear Door Open
Right Rear Door Open
Porte arrière droite ouverte
Rechte Fondtür offen
Left Rear Door Open
Left Rear Door Open
Porte arrière gauche ouverte
Linke Fondtür offen
Back Door Open
Back Door Open
Porte de coffre ouverte
Hecktür offen
Check Sonar
Check Sonar
Vérifiez le sonar
Sonar überprüfen
Clean Sonar
Clean Sonar
Nettoyez le sonar
Sonar reinigen
Release the Parking Brake
Release the Parking Brake
Desserrez le frein de stationnement
Feststellbremse lösen
Check VGRS System
Check VGRS System
Vérifiez le système VGRS
VGRS-System überprüfen
VGRS Test Mode
VGRS Test Mode
Mode test du VGRS
VGRS-Testmodus
Check VSC System
Check VSC System
Vérifiez le système VSC
VSC-System überprüfen
VSC Test Mode
VSC Test Mode
Mode test du VSC
VSC-Testmodus
VSC OFF
VSC OFF
VSC OFF
VSC OFF
High Transmission Fluid Temperature
High Transmission Fluid Temperature
Température du liquide de boîte vitesses élevée
Hohe Getriebe-Öltemperatur
Low Engine Oil Level
Low Engine Oil Level
Faible niveau d'huile moteur
Motorölstand niedrig
Low Washer Fluid
Low Washer Fluid
Faible niveau de liquide de lave-glace
Waschflüssigkeit niedrig
Fuel Filter Maintenance Reqd
Fuel Filter Maintenance Reqd
Entretien du filtre à carburant requis
Wartung Kraftstofffilter erforderlich
DIAG 4-WHEEL AHC
DIAG 4-WHEEL AHC
DIAG 4-WHEEL AHC
DIAG 4-WHEEL AHC

H

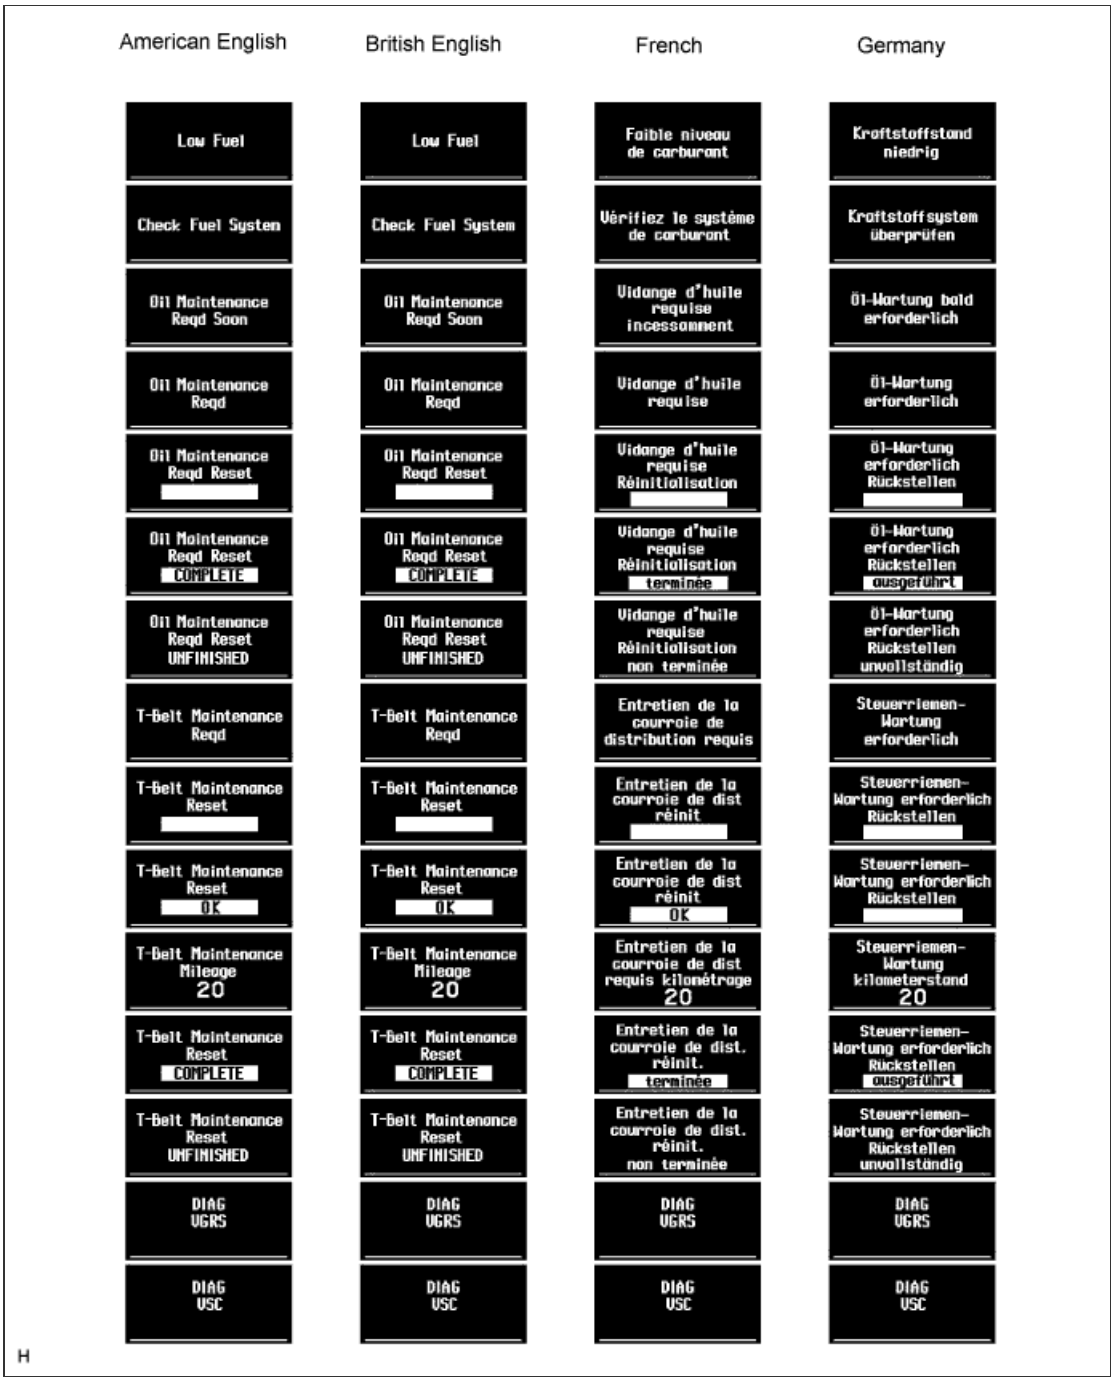

American English
British English
French
Germany
Low Fuel
Low Fuel
Faible niveau de carburant
Kraftstoffstand niedrig
Check Fuel Systen
Check Fuel System
Vérifiez le système de carburant
Kraftstoffsystem überprüfen
Oil Maintenance Reqd Soon
Oil Maintenance Reqd Soon
Vidange d'huile requise incessamment
Öl-Wartung bald erforderlich
Oil Maintenance Reqd
Oil Maintenance Reqd
Vidange d'huile requise
Öl-Wartung erforderlich
Oil Maintenance Reqd Reset
Oil Maintenance Reqd Reset
Vidange d'huile requise Réinitialisation
Öl-Wartung erforderlich Rückstellen
Oil Maintenance Reqd Reset COMPLETE
Oil Maintenance Reqd Reset COMPLETE
Vidange d'huile requise Réinitialisation terminée
Öl-Wartung erforderlich Rückstellen ausgeführt
Oil Maintenance Reqd Reset UNFINISHED
Oil Maintenance Reqd Reset UNFINISHED
Vidange d'huile requise Réinitialisation non terminée
Öl-Wartung erforderlich Rückstellen unvollständig
T-Belt Maintenance Reqd
T-Belt Maintenance Reqd
Entretien de la courroie de distribution requis
Steuerriemen-Wartung erforderlich
T-Belt Maintenance Reset
T-Belt Maintenance Reset
Entretien de la courroie de dist réinit
Steuerrienen-Wartung erforderlich Rückstellen
T-Belt Maintenance Reset OK
T-Belt Maintenance Reset OK
Entretien de la courroie de dist réinit OK
Steuerrienen-Wartung erforderlich Rückstellen
T-Belt Maintenance Mileage 20
T-Belt Maintenance Mileage 20
Entretien de la courroie de dist requis kilométrage 20
Steuerriemen-Wartung kilometerstand 20
T-Belt Maintenance Reset COMPLETE
T-Belt Maintenance Reset COMPLETE
Entretien de la courroie de dist. réinit. terminée
Steuerriemen-Wartung erforderlich Rückstellen ausgeführt
T-Belt Maintenance Reset UNFINISHED
T-Belt Maintenance Reset UNFINISHED
Entretien de la courroie de dist. réinit. non terminée
Steuerriemen-Wartung erforderlich Rückstellen unvollständig
DIAG VGRS
DIAG VGRS
DIAG VGRS
DIAG VGRS
DIAG VSC
DIAG VSC
DIAG VSC
DIAG VSC
H

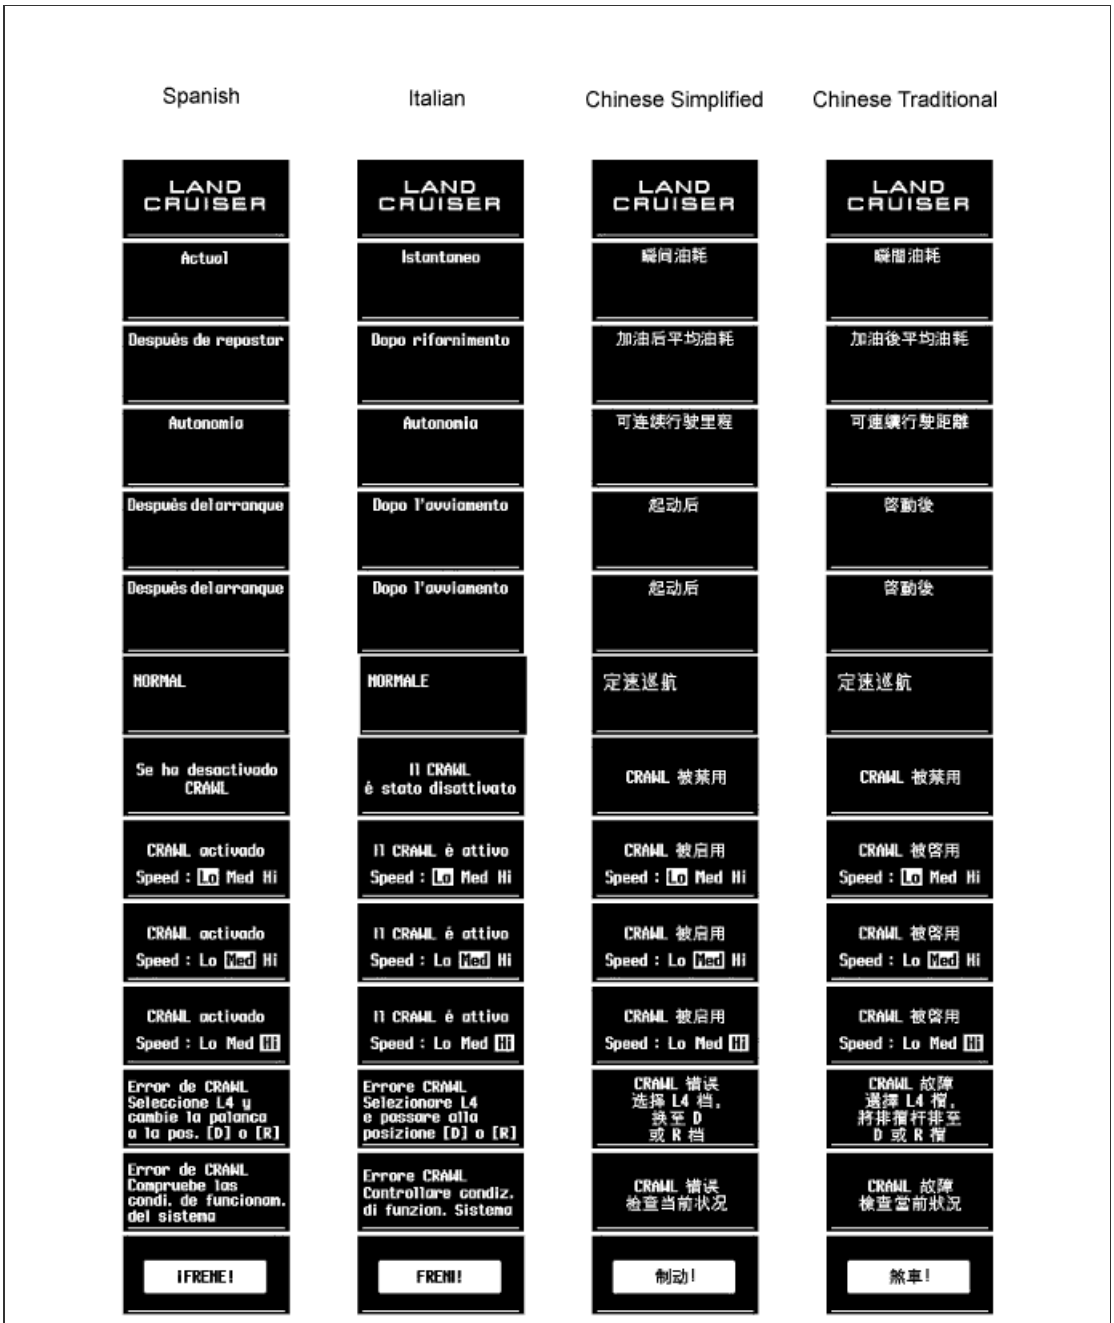
Spanish
Italian
Chinese Simplified
Chinese Traditional
LAND CRUISER
Actual
Después de repostar
Autonomía
Después del arranque
Después del arranque
NORMAL
Se ha desactivado CRAWL
CRAWL activado
Speed : Lo Med Hi
CRAWL activado
Speed : Lo Med Hi
CRAWL activado
Speed : Lo Med Hi
Error de CRAWL
Seleccione L4 y cambie la palanca a la pos. [D] o [R]
Error de CRAWL
Compruebe las condi. de funcionam. del sistema
¡FRENE!
LAND CRUISER
Istantaneo
Dopo rifornimento
Autonomia
Dopo l'avviamento
Dopo l'avviamento
NORMALE
Il CRAWL è stato disattivato
Il CRAWL è attivo
Speed : Lo Med Hi
Il CRAWL è attivo
Speed : Lo Med Hi
Il CRAWL è attivo
Speed : Lo Med Hi
Errore CRAWL
Selezionare L4 e passare alla posizione [D] o [R]
Errore CRAWL
Controllare condiz. di funzion. Sistema
FRENI!
LAND CRUISER
瞬间油耗
加油后平均油耗
可连续行驶里程
起动后
起动后
定速巡航
CRAWL 被禁用
CRAWL 被启用
Speed : Lo Med Hi
CRAWL 被启用
Speed : Lo Med Hi
CRAWL 被启用
Speed : Lo Med Hi
CRAWL 错误
选择 L4 档，
换至 D
或 R 档
CRAWL 错误
检查当前状况
制动!
LAND CRUISER
瞬間油耗
加油後平均油耗
可連續行駛距離
啓動後
啓動後
定速巡航
CRAWL 被禁用
CRAWL 被啓用
Speed : Lo Med Hi
CRAWL 被啓用
Speed : Lo Med Hi
CRAWL 被啓用
Speed : Lo Med Hi
CRAWL 故障
選擇 L4 檔，
將排檔杆排至
D 或 R 檔
CRAWL 故障
檢查當前狀況
煞車!


H

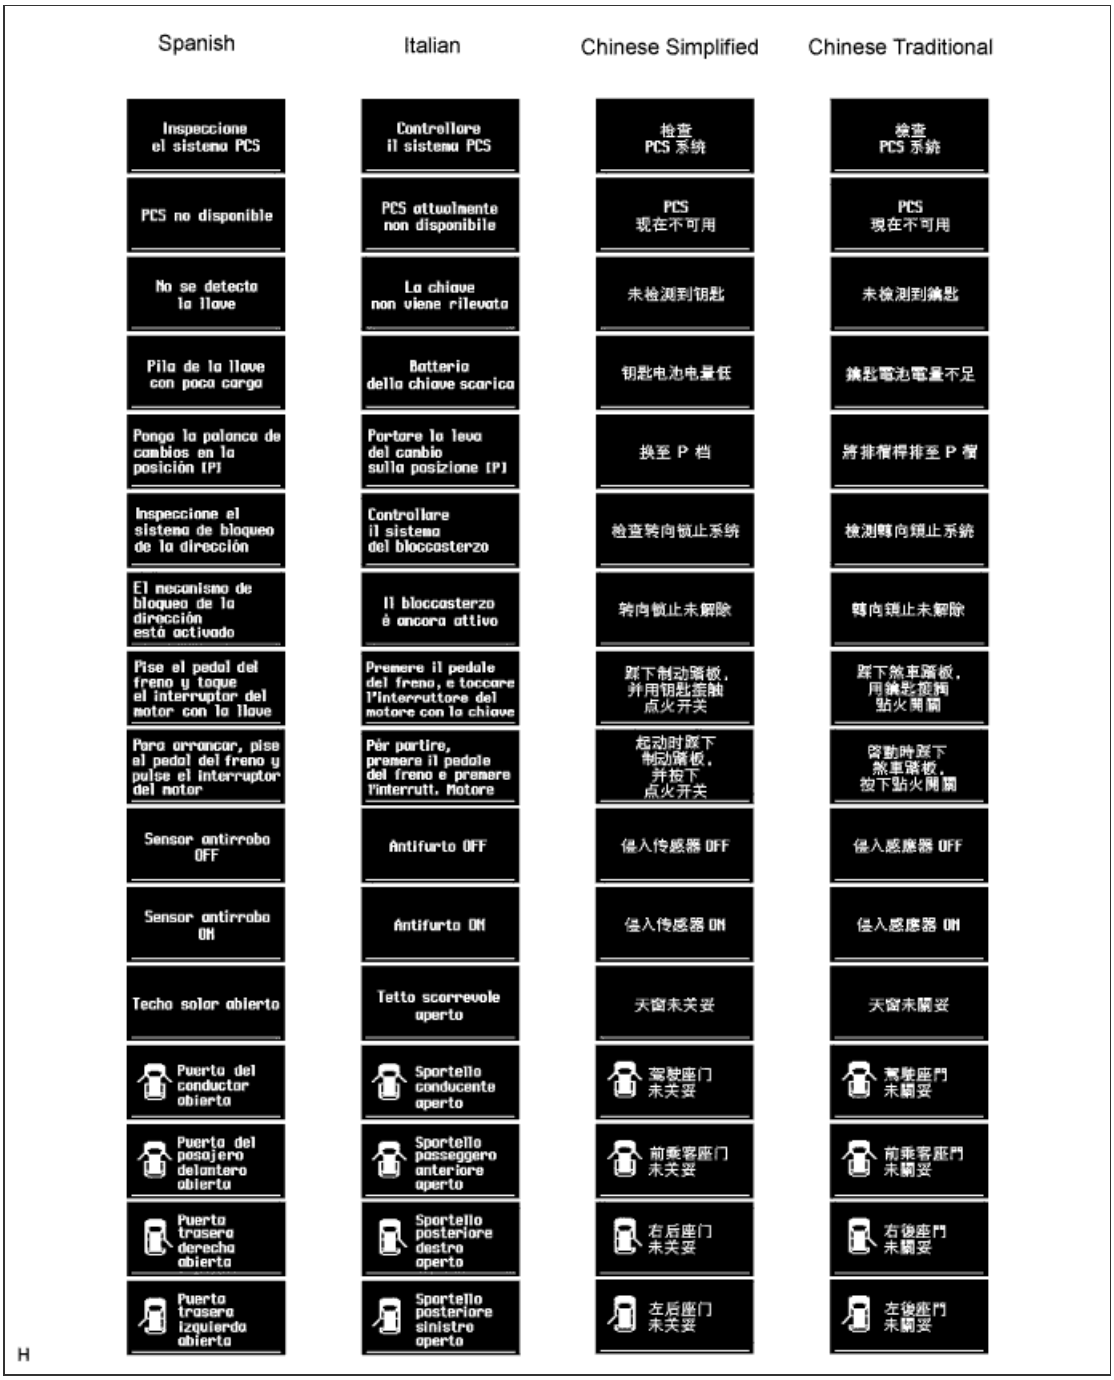
Spanish
Italian
Chinese Simplified
Chinese Traditional
Inspeccione el sistema PCS
Controllare il sistema PCS
检查 PCS 系统
檢查 PCS 系統
PCS no disponible
PCS attualmente non disponibile
PCS 现在不可用
PCS 現在不可用
No se detecta la llave
La chiave non viene rilevata
未检测到钥匙
未檢測到鑰匙
Pila de la llave con poca carga
Batteria della chiave scarica
钥匙电池电量低
鑰匙電池電量不足
Pongo la palanca de cambios en la posición (P)
Portare la leva del cambio sulla posizione (P)
换至 P 档
將排檔桿排至 P 檔
Inspeccione el sistema de bloqueo de la dirección
Controllare il sistema del bloccasterzo
检查转向锁止系统
檢測轉向鎖止系統
El mecanismo de bloqueo de la dirección está activado
Il bloccasterzo è ancora attivo
转向锁止未解除
轉向鎖止未解除
Pise el pedal del freno y toque el interruptor del motor con la llave
Premere il pedale del freno, e toccare l'interruttore del motore con la chiave
踩下制动踏板，并用钥匙触点火开关
踩下煞車踏板，用鑰匙接觸點火開關
Para arrancar, pise el pedal del freno y pulse el interruptor del motor
Per partire, premere il pedale del freno e premere l'interrutt. Motore
起动时踩下制动踏板，并按下点火开关
啓動時踩下煞車踏板，按下點火開關
Sensor antirrobo OFF
Antifurto OFF
侵入传感器 OFF
侵入感應器 OFF
Sensor antirrobo ON
Antifurto ON
侵入传感器 ON
侵入感應器 ON
Techo solar abierto
Tetto scorrevole aperto
天窗未关妥
天窗未關妥
Puerta del conductor abierta
Sportello conducente aperto
驾驶座门未关妥
駕駛座門未關妥
Puerta del pasajero delantero abierta
Sportello passeggero anteriore aperto
前乘客座门未关妥
前乘客座門未關妥
Puerta trasera derecha abierta
Sportello posteriore destro aperto
右后座门未关妥
右後座門未關妥
Puerta trasera izquierda abierta
Sportello posteriore sinistro aperto
左后座门未关妥
左後座門未關妥

H

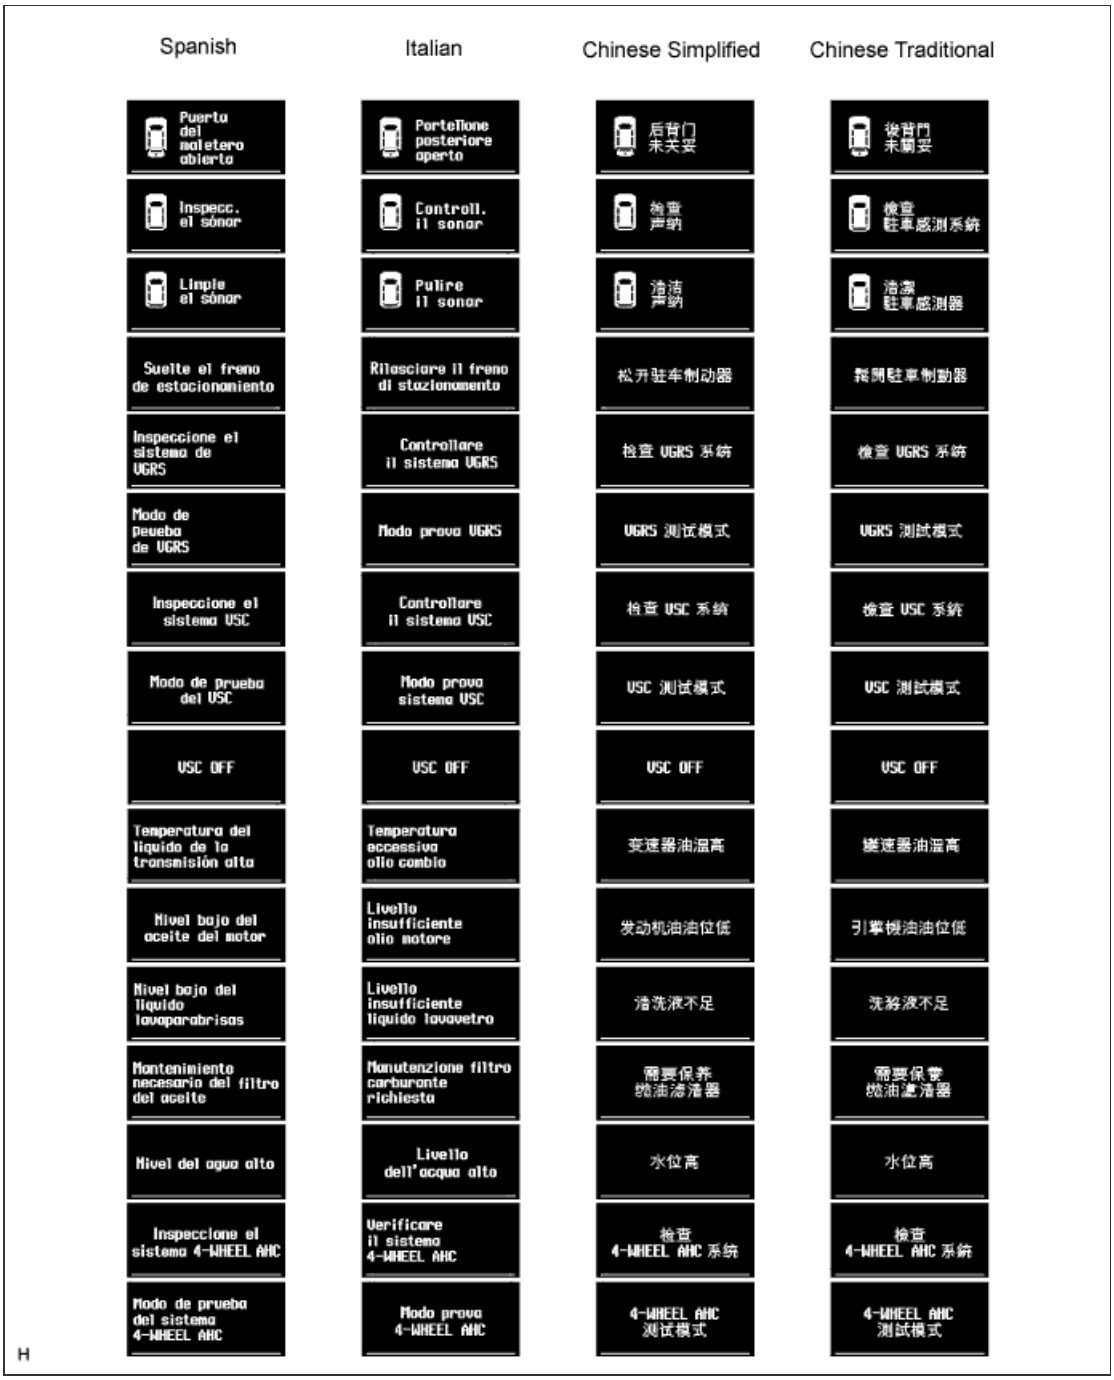
Spanish
Italian
Chinese Simplified
Chinese Traditional
Puerta del maletero abierto
Inspecc. el sónar
Limpie el sónar
Suelte el freno de estacionamiento
Inspeccione el sistema de VGRS
Modo de prueba de VGRS
Inspeccione el sistema VSC
Modo de prueba del VSC
VSC OFF
Temperatura del líquido de la transmisión alta
Nivel bajo del aceite del motor
Nivel bajo del líquido lavaparabrisas
Mantenimiento necesario del filtro del aceite
Nivel del agua alto
Inspeccione el sistema 4-WHEEL AHC
Modo de prueba del sistema 4-WHEEL AHC
PorteTlone posteriore aperto
Controll. il sonar
Pulire il sonar
Rilasciare il freno di stazionamento
Controllare il sistema VGRS
Modo prova VGRS
Controllare il sistema VSC
Modo prova sistema VSC
VSC OFF
Temperatura eccessiva olio cambio
Livello insufficiente olio motore
Livello insufficiente liquido lavavetro
Manutenzione filtro carburante richiesta
Livello dell'acqua alto
Verificare il sistema 4-WHEEL AHC
Modo prova 4-WHEEL AHC
后背门未关妥
检查声纳
清洁声纳
松开驻车制动器
检查 VGRS 系统
VGRS 测试模式
检查 VSC 系统
VSC 测试模式
VSC OFF
变速器油温高
发动机油油位低
清洗液不足
需要保养燃油滤清器
水位高
检查 4-WHEEL AHC 系统
4-WHEEL AHC 测试模式
後背門未關妥
檢查駐車感測系統
清潔駐車感測器
解開駐車制動器
檢查 VGRS 系統
VGRS 測試模式
檢查 VSC 系統
VSC 測試模式
VSC OFF
變速器油溫高
引擎機油油位低
洗務液不足
需要保養燃油濾清器
水位高
檢查 4-WHEEL AHC 系統
4-WHEEL AHC 測試模式

H

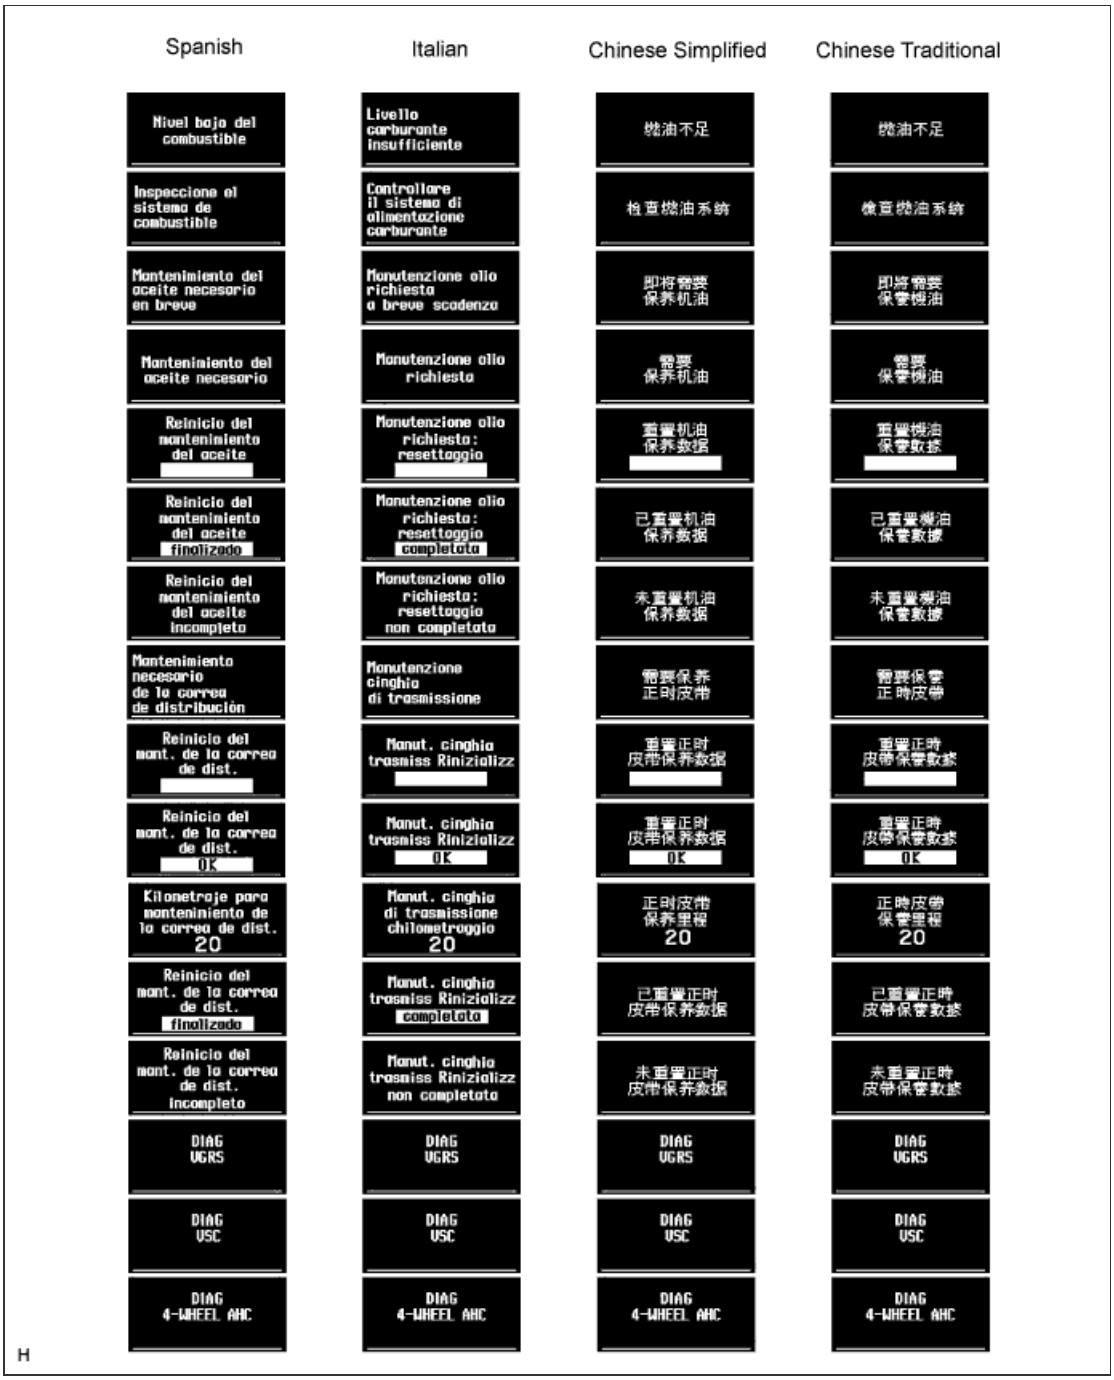
Spanish
Italian
Chinese Simplified
Chinese Traditional
Nivel bajo del combustible
Livello carburante insufficiente
燃油不足
燃油不足
Inspeccione el sistema de combustible
Controllare il sistema di alimentazione carburante
检查燃油系统
檢查燃油系統
Mantenimiento del aceite necesario en breve
Manutenzione olio richiesta a breve scadenza
即将需要保养机油
即將需要保養機油
Mantenimiento del aceite necesario
Manutenzione olio richiesta
需要保养机油
需要保養機油
Reinicio del mantenimiento del aceite
Manutenzione olio richiesta: resettaggio
重置机油保养数据
重置機油保養數據
Reinicio del mantenimiento del aceite finalizado
Manutenzione olio richiesta: resettaggio completata
已重置机油保养数据
已重置機油保養數據
Reinicio del mantenimiento del aceite incompleto
Manutenzione olio richiesta: resettaggio non completata
未重置机油保养数据
未重置機油保養數據
Mantenimiento necesario de la correa de distribución
Manutenzione cinghia di trasmissione
需要保养正时皮带
需要保養正時皮帶
Reinicio del mant. de la correa de dist.
Manut. cinghia trasmiss Rinizializz
重置正时皮带保养数据
重置正時皮帶保養數據
Reinicio del mant. de la correa de dist. OK
Manut. cinghia trasmiss Rinizializz OK
重置正时皮带保养数据 OK
重置正時皮帶保養數據 OK
Kilometraje para mantenimiento de la correa de dist. 20
Manut. cinghia di trasmissione chilometraggio 20
正时皮带保养里程 20
正時皮帶保養里程 20
Reinicio del mant. de la correa de dist. finalizado
Manut. cinghia trasmiss Rinizializz completata
已重置正时皮带保养数据
已重置正時皮帶保養數據
Reinicio del mant. de la correa de dist. incompleto
Manut. cinghia trasmiss Rinizializz non completata
未重置正时皮带保养数据
未重置正時皮帶保養數據
DIAG VGRS
DIAG VGRS
DIAG VGRS
DIAG VGRS
DIAG VSC
DIAG VSC
DIAG VSC
DIAG VSC
DIAG 4-WHEEL AHC
DIAG 4-WHEEL AHC
DIAG 4-WHEEL AHC
DIAG 4-WHEEL AHC

H

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the meter/gauge system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK FOR DTC*

a. Check for DTCs and note any codes that are output (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs. Based on the DTCs output above, try to force output of the same CAN communication system DTC or meter gauge system DTC by simulating the symptoms indicated by the DTC.

Result

Result	Proceed to
DTC is not output	A
CAN communication system (for L DTC is output	B
CAN communication system (for R DTC is output	C
eter gauge system DTC is output	D

B. Go to CAN COMMUNICATION SYSTEM (Click here)

C. Go to CAN COMMUNICATION SYSTEM (Click here)

D. Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. Go to step 7

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of CU (Click here)

b. Data List Active Test (Click here)

c. Operation Check (Click here)

NEXT

6.REPAIR OR REPLACE

NEXT

7.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the meter/gauge system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK FOR DTC*

a. Check for DTCs and note any codes that are output (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs. Based on the DTCs output above, try to force output of the same CAN communication system DTC or meter gauge system DTC by simulating the symptoms indicated by the DTC.

Result

Result	Proceed to
DTC is not output	A
CAN communication system (for L DTC is output	B
CAN communication system (for R DTC is output	C
eter gauge system DTC is output	D

B. Go to CAN COMMUNICATION SYSTEM (Click here)

C. Go to CAN COMMUNICATION SYSTEM (Click here)

D. Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. Go to step 7

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of CU (Click here)

b. Data List Active Test (Click here)

c. Operation Check (Click here)

NEXT

6.REPAIR OR REPLACE

NEXT

7.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the meter/gauge system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK FOR DTC*

a. Check for DTCs and note any codes that are output (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs. Based on the DTCs output above, try to force output of the same CAN communication system DTC or meter gauge system DTC by simulating the symptoms indicated by the DTC.

Result

Result	Proceed to
DTC is not output	A
CAN communication system (for L DTC is output	B
CAN communication system (for R DTC is output	C
eter gauge system DTC is output	D

B. Go to CAN COMMUNICATION SYSTEM (Click here)

C. Go to CAN COMMUNICATION SYSTEM (Click here)

D. Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. Go to step

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of CU (Click here)

b. Data List Active Test (Click here)

c. Operation Check (Click here)

NEXT

.REPAIR OR REPLACE

NEXT

.CONFIRMATION TEST

NEXT

END

for Preparation Click here

INSPECT INDICATOR/WARNING LIGHT

a. Check the following indicators and warning lights.

w/o Multi-information Display

Indicator/Warning Light	Switch Condition	Specified Condition
A/T OIL TEMP warning light*1	Engine switch off → on (IG)	Comes on for 3 seconds
BRAKE warning light		
ABS warning light		
T-BELT indicator light*2		
OIL LEVEL indicator light		
Downhill assist control indicator light		
FUEL FILTER & SEDIMENTER indicator light*3		
SLIP indicator light*4		
VSC OFF indicator light*4		
WASHER indicator light		
RSCA OFF indicator light*5		
CRAWL indicator light		
SPEED LIMIT indicator light		
SRS warning light	Engine switch off → on (IG)	Comes on for 6 seconds
CHARGE warning light	Engine switch off → on (IG)	Illuminates when engine switch is turned on (IG). Turns off when engine is started.
MIL		

*1: for Automatic Transmission
*2: for 2UZ-FE
*3: for 1VD-FTV
*4: w/ VSC
*5: w/ Curtain Shield Airbag

w/ Multi-information Display

Indicator/Warning Light	Switch Condition	Specified Condition
BRAKE warning light	Engine switch off → on (IG)	Comes on for 3 seconds
ABS warning light		
SLIP indicator light		
RSCA OFF indicator light*1		
CRAWL indicator light		
Downhill assist control indicator light		
SPEED LIMIT indicator light		
PCS indicator light*2		
SRS warning light	Engine switch off → on (IG)	Comes on for 6 seconds
CHARGE warning light	Engine switch off → on (IG)	Illuminates when Engine switch is turned on (IG). Turns off when engine is started.
MIL		

*1: w/ Curtain Shield Airbag
*2: w/ Pre-crash Safety System

INSPECT SPEEDOMETER

a. Using a speedometer tester, check that the speedometer reading is within the allowable range shown in the table below. Also, check for proper operation of the odometer.

Reference:

mph

Standard Indication	Acceptable Range
20 mph	18.5 to 22 mph
40 mph	39.5 to 42.5 mph
60 mph	59.5 to 63 mph
80 mph	80.5 to 84.5 mph
100 mph	100.5 to 105.5 mph
120 mph	119.5 to 126 mph
140 mph	141 to 147 mph

km/h (except Australia)

Standard Indication	Acceptable Range
20 km/h	21 to 25 km/h
40 km/h	41.7 to 46.2 km/h
60 km/h	62.7 to 67.2 km/h
80 km/h	83.4 to 88.4 km/h
100 km/h	104.3 to 109.3 km/h
120 km/h	125.1 to 130.6 km/h
140 km/h	145.8 to 151.8 km/h
160 km/h	166.2 to 173.2 km/h
180 km/h	186.9 to 194.5 km/h
200 km/h	207.7 to 215.7 km/h
220 km/h	228.4 to 236.8 km/h
240 km/h	249.2 to 258 km/h

km/h (for Australia)

Standard Indication	Acceptable Range
20 km/h	17.5 to 21.5 km/h
40 km/h	38 to 42 km/h
60 km/h	58 to 63 km/h
80 km/h	78 to 84 km/h
100 km/h	98.5 to 104.5 km/h
120 km/h	119 to 125 km/h
140 km/h	139 to 146 km/h
160 km/h	159 to 167 km/h
180 km/h	186.9 to 194.5 km/h
200 km/h	199 to 209 km/h
220 km/h	219 to 230 km/h
240 km/h	239 to 251 km/h

If the result is not as specified, the speedometer may have a malfunction.

NOTICE:

Do not use worn, underinflated or overinflated tires, as the speedometer reading will be inaccurate.

b. Check the deflection width of the speedometer indicator.

Reference:
Within 0.3°

INSPECT TACHOMETER

a. Connect a tune-up tachometer, and start the engine.

b. Compare the test results with the tachometer indicator.

DC 13.5 V, at 25°C (77°F):
1GR-FE:

Standard indication (rpm)	Acceptable range Data in ( ) is for reference
700	630 to 770
1000	(900 to 1100)
2000	(1850 to 2150)
3000	2800 to 3200
4000	(3800 to 4200)
5000	4800 to 5200
6000	(5750 to 6250)

2UZ-FE, 1VD-FTV:

Standard indication (rpm)	Acceptable range Data in ( ) is for reference
700	630 to 770
1000	(900 to 1100)
2000	(1850 to 2150)
3000	2800 to 3200
4000	(3800 to 4200)
5000	4800 to 5200
6000	(5750 to 6250)

If the result is not as specified, the tachometer may have a malfunction.

INSPECT METER/GAUGE

a. Connect the intelligent tester to the DLC3.

b. Perform Active Test (Click here).

OK:
Each meter/gauge needle indication is normal.

INSPECT WARNING/INDICATOR LIGHT

a. Connect the intelligent tester to the DLC3.

b. Perform Active Test (Click here).

OK:
Each warning/indicator light turns on and off using the intelligent tester.

INSPECT ENGINE OIL LEVEL WARNING

a. Turn the engine switch on (IG) and warm up the engine at an engine speed of 2000 rpm or less until the coolant temperature reaches approximately 80°C (176°F) or more.

b. Disconnect the engine oil level sensor connector for 40 seconds or more.

c. Turn the engine switch on (IG) and check the multi-information display.

OK:
Low engine oil level message is displayed.

INSPECT MULTI-INFORMATION DISPLAY (w/ Multi-information Display)

a. Connect the intelligent tester to the DLC3.


b. Perform Active Test (Click here).

HINT:

If this Active Test is being performed and the engine switch is turned off and then on (IG), the A/T and ODO/TRIP display background may turn white. If this occurs, end Active Test and turn the engine switch off.

OK:

All dots in the multi-information display turn on and off using the intelligent tester.

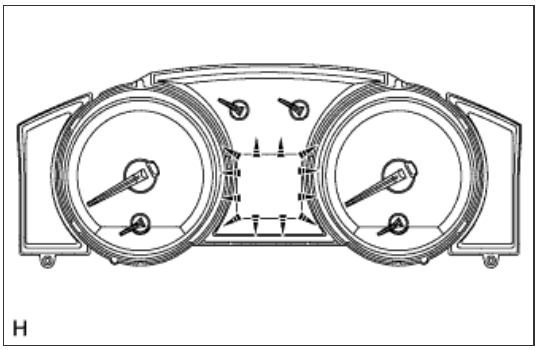

for Preparation Click here

INSPECT INDICATOR/WARNING LIGHT

a. Check the following indicators and warning lights.

w/o Multi-information Display

Indicator/Warning Light	Switch Condition	Specified Condition
A/T OIL TEMP warning light*1	Engine switch off → on (IG)	Comes on for 3 seconds
BRAKE warning light		
ABS warning light		
T-BELT indicator light*2		
OIL LEVEL indicator light		
Downhill assist control indicator light		
FUEL FILTER & SEDIMENTER indicator light*3		
SLIP indicator light*4		
VSC OFF indicator light*4		
WASHER indicator light		
RSCA OFF indicator light*5		
CRAWL indicator light		
SPEED LIMIT indicator light		
SRS warning light	Engine switch off → on (IG)	Comes on for 6 seconds
CHARGE warning light	Engine switch off → on (IG)	Illuminates when engine switch is turned on (IG). Turns off when engine is started.
MIL		

*1: for Automatic Transmission
*2: for 2UZ-FE
*3: for 1VD-FTV
*4: w/ VSC
*5: w/ Curtain Shield Airbag

w/ Multi-information Display

Indicator/Warning Light	Switch Condition	Specified Condition
BRAKE warning light	Engine switch off → on (IG)	Comes on for 3 seconds
ABS warning light		
SLIP indicator light		
RSCA OFF indicator light*1		
CRAWL indicator light		
Downhill assist control indicator light		
SPEED LIMIT indicator light		
PCS indicator light*2		
SRS warning light	Engine switch off → on (IG)	Comes on for 6 seconds
CHARGE warning light	Engine switch off → on (IG)	Illuminates when Engine switch is turned on (IG). Turns off when engine is started.
MIL		

*1: w/ Curtain Shield Airbag
*2: w/ Pre-crash Safety System

INSPECT SPEEDOMETER

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Powertrain / Engine and ECT / Data List.

Reference:

mph

Standard Indication	Acceptable Range
20 mph	18.5 to 22 mph
40 mph	39.5 to 42.5 mph
60 mph	59.5 to 63 mph
80 mph	80.5 to 84.5 mph
100 mph	100.5 to 105.5 mph
120 mph	119.5 to 126 mph
140 mph	141 to 147 mph

km/h (except Australia)

Standard Indication	Acceptable Range
20 km/h	21 to 25 km/h
40 km/h	41.7 to 46.2 km/h
60 km/h	62.7 to 67.2 km/h
80 km/h	83.4 to 88.4 km/h
100 km/h	104.3 to 109.3 km/h
120 km/h	125.1 to 130.6 km/h
140 km/h	145.8 to 151.8 km/h
160 km/h	166.2 to 173.2 km/h
180 km/h	186.9 to 194.5 km/h
200 km/h	207.7 to 215.7 km/h
220 km/h	228.4 to 236.8 km/h
240 km/h	249.2 to 258 km/h

km/h (for Australia)

Standard Indication	Acceptable Range
20 km/h	17.5 to 21.5 km/h
40 km/h	38 to 42 km/h
60 km/h	58 to 63 km/h
80 km/h	78 to 84 km/h
100 km/h	98.5 to 104.5 km/h
120 km/h	119 to 125 km/h
140 km/h	139 to 146 km/h
160 km/h	159 to 167 km/h
180 km/h	186.9 to 194.5 km/h
200 km/h	199 to 209 km/h
220 km/h	219 to 230 km/h
240 km/h	239 to 251 km/h

If the result is not as specified, the speedometer may have a malfunction.

NOTICE:

Do not use worn, underinflated or overinflated tires, as the speedometer reading will be inaccurate.

e. Check the deflection width of the speedometer indicator.

Reference:
Within 0.3

INSPECT TACHOMETER

a. Connect a tune-up tachometer, and start the engine.

b. Compare the test results with the tachometer indicator.

DC 13. at C (77
GR- E:

Standard indication (rpm)	Acceptable range Data in ( ) is for reference
700	630 to 770
1000	(900 to 1100)
2000	(1850 to 2150)
3000	2800 to 3200
4000	(3800 to 4200)
5000	4800 to 5200
6000	(5750 to 6250)

U- E D- T 3UR- E:

Standard indication (rpm)	Acceptable range Data in ( ) is for reference
700	630 to 770
1000	(900 to 1100)
2000	(1850 to 2150)
3000	2800 to 3200
4000	(3800 to 4200)
5000	4800 to 5200
6000	(5750 to 6250)

If the result is not as specified, the tachometer may have a malfunction.

INSPECT METER/GAUGE

a. Connect the intelligent tester to the DLC3.

b. Perform Active Test (Click here).

OK:
Each meter/ au e needle indication is normal.

INSPECT WARNING/INDICATOR LIGHT

a. Connect the intelligent tester to the DLC3.

b. Perform Active Test (Click here).

OK:
Each warnin /indicator li ht turns on and off usin the intelli en tester.

INSPECT ENGINE OIL LE EL WARNING (except for 3UR- E)

a. Turn the engine switch on (IG) and warm up the engine at an engine speed of 2000 rpm or less until the coolant temperature reaches approximately 80°C (176°F) or more.

b. Disconnect the engine oil level sensor connector for 40 seconds or more.

c. Turn the engine switch on (IG) and check the multi-information display.

OK:
Low en ine oil level messa es displayed.

INSPECT MULTI-IN ORMATION DISPLAY (w/ Multi-information Display)

a. Connect the intelligent tester to the DLC3.

b. Perform Active Test (Click here).


HINT:

If this Active Test is being performed and the engine switch is turned off and

then on (IG), the A/T and ODO/TRIP display background may turn white. If this occurs, end Active Test and turn the engine switch off.

OK:

All dots in the multi-information display turn on and off usin the intelli en tester.

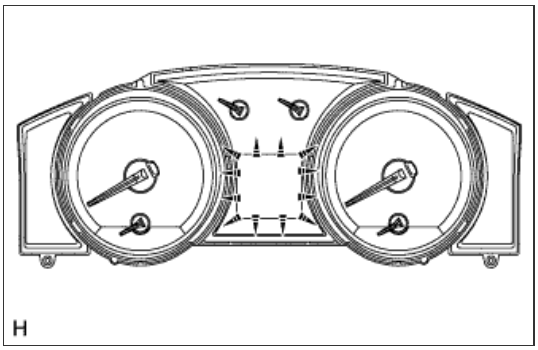

for Preparation Click here

CUSTOMIZING FUNCTION WITH INTELLIGENT TESTER

NOTICE:

- **When the customer requests a change in a function, first make sure that the function can be customized.**
- **Be sure to make a note of the current settings before customizing.**
- **When troubleshooting a function, first make sure that the function is set to the default setting.**

a. Connect the Intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Customize Setting.

e. Select the setting by referring to the table below.

Warning

Display (Item)	Default	Contents	Setting
Driver Side Seatbelt Warning Buzzer	ON	To change the seat-belt warning buzzer.	ON / OFF
Front Passenger Side Seatbelt Warning Buzzer	ON	To change the seat-belt warning buzzer.	ON / OFF

Unit Conversion

Display (Item)	Default	Contents	Setting
Units By Region	Different for each vehicle	To change the units of the display.	Km/l JP / Km/l / Ml/g US / Ml/g UK

Display

Display (Item)	Default	Contents	Setting
Language	None	To change the language of the display.	Eng US / Eng UK / French / German / Spanish / Italian / Japanes / CHN Sim / CHN Trd

for Preparation Click here

OIL MAINTENANCE INFORMATION MODE RESET OPERATION (for 1VD-FTV, w/ Multi-information Display)

NOTICE:

- **When "Oil Maintenance Reqd" or "Oil Maintenance Reqd Soon" is displayed, change the engine oil and perform this procedure.**
- **After the engine oil is changed, perform this procedure so that "Oil Maintenance Reqd" or "Oil Maintenance Reqd Soon" does not display.**

HINT:

- **The oil change maintenance system displays "Oil Maintenance Reqd" or "Oil Maintenance Reqd Soon" in the multi-information display to inform the driver that it is time to change the oil based on the distance driven**
- **The ODO/TRIP switch is in the light control rheostat.**

a. Turn the engine switch on (IG), and use the ODO/TRIP switch to change the screen display to TRIP A.

b. Turn the engine switch off.


c. While holding in the ODO/TRIP switch, turn the engine switch on (IG).

d. After a 5 second count, reset will end

NOTICE:

- **If the engine switch is turned off during the reset operation, reset mode will be canceled.**
- **If the ODO/TRIP switch is turned off during the reset operation, reset mode will be canceled.**

i. Reset flow chart

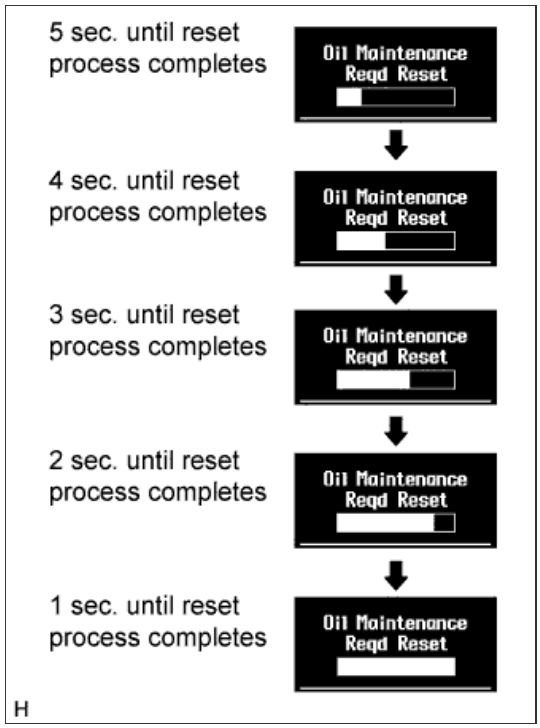

TIMING BELT INFORMATION MODE RESET OPERATION (for 2UZ-FE, w/ Multi-information Display)

NOTICE:

- **When "T-BELT Maintenance Reqd" is displayed, replace the timing belt and perform this procedure.**
- **After the timing belt is replaced, perform this procedure so that "T-BELT Maintenance Reqd" does not display.**

HINT:

- **The timing belt maintenance system displays "Maintenance Reqd" in the multi-information display to inform the driver that it is time to replace the timing belt based on the distance driven.**
- **The ODO/TRIP switch is in the light control rheostat.**

a. Turn the engine switch on (IG), and use the ODO/TRIP switch to change the screen display to TRIP B.

b. Turn the engine switch off.

c. While holding in the ODO/TRIP switch, turn the engine switch on (IG).

HINT:


"T-Belt Maintenance Reset" will be displayed.



d. Press and hold the ODO/TRIP switch for 5 seconds or more.

HINT:

A 5 second count will begin on the display.

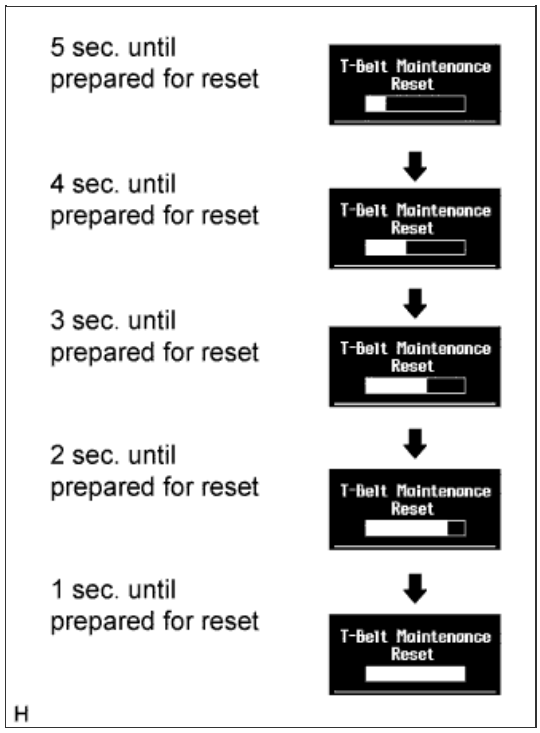

e. After the 5 second count finishes, "T-Belt Maintenance Reset OK" is displayed and T-BELT reset mode is complete.

f. While "T-Belt Maintenance Reset OK" is displayed, turn the ODO/TRIP switch from off to on.

HINT:

While "T-Belt Maintenance Reset OK" is displayed, if the ODO/TRIP switch is not turned from off to on, the normal display will return.




g. After the ODO/TRIP switch is turned on, enter the setting mode and change to T-BELT display mode.

HINT:

The T-BELT display mode will display the previously set value (the interval until the next time the timing belt needs to be replaced). However, the first time this is performed, the default setting from when the vehicle is delivered (150,000 km or 90,000 miles) is displayed.

h. Change the set value by repeatedly turning the ODO/TRIP switch on and off (the value must be changed within 5 seconds). (procedure A)

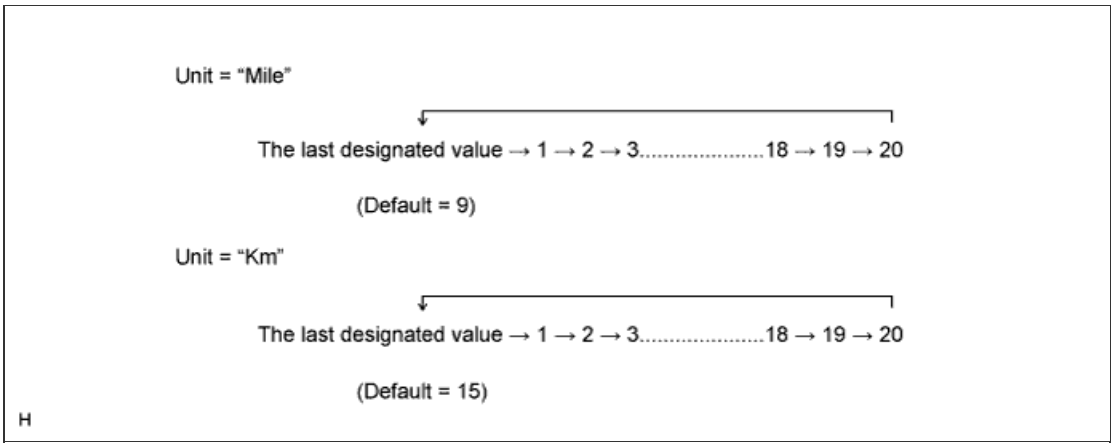

HINT:

Perform this procedure only when changing the previously set value.

NOTICE:

If the ODO/TRIP switch is not turned from on to off for 30 seconds or more during this step, the previously set value will be maintained and the TRIP B display will return (reset will not complete).

i. When the display changes to the desired setting, press the ODO/TRIP switch for 5 seconds or more to finish setting mode. (procedure B)

j. The set value is stored in the EEPROM, "T-Belt Maintenance Reset COMPLETE" is displayed (for 1 second), the buzzer (multi-display warning) sounds simultaneously, and reset mode is completed. (procedure C)




HINT:

If the set value is not stored in the EEPROM, "T-Belt Maintenance Reset UNFINISHED" is displayed for 6 seconds, and the normal display returns.

NOTICE:

- **When not changing the previously set value, do not perform the operations in procedure A above, only perform procedures B and C.**
- **If the starter signal is received during the reset operation, reset mode is canceled and cannot be resumed until the engine switch is turned off and on (IG) again.**

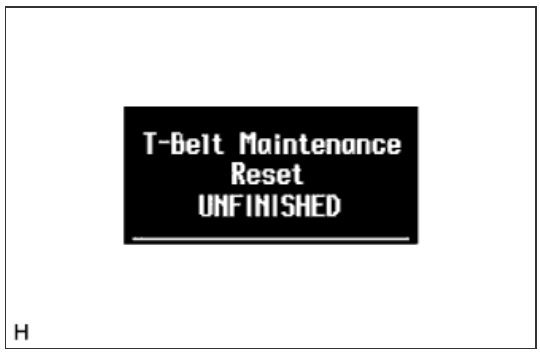

TIMING BELT INFORMATION MODE RESET OPERATION (for 2UZ-FE, w/o Multi-information)

NOTICE:

- **When the T-BELT indicator light is illuminated, replace the timing belt and perform this procedure.**
- **After the timing belt is replaced, perform this procedure so that the T-BELT indicator light does not turn on.**

HINT:

- **The timing belt maintenance system turns on the T-BELT indicator light to inform the driver that it is time to replace the timing belt based on the distance driven.**
- **The TRIP meter reset knob is on the bottom right side of the combination meter.**

a. Turn the engine switch on (IG), and use the TRIP meter reset knob to change

the screen display to TRIP B.

b. Turn the engine switch off.

c. While holding in the TRIP meter reset knob, turn the engine switch on (IG).


d. Press and hold the TRIP meter reset knob (on) for 5 seconds or more.

HINT:


If the TRIP meter reset knob is released (off is detected) within 5 seconds, the ODO/TRIP display, indicator display, and the integrated value will return to the state before the reset operation began.

e. After the TRIP meter reset knob is turned off, turn the TRIP meter reset knob on again within 5 seconds.

f. After the TRIP meter reset knob is turned on, enter the setting mode and change to T-BELT display mode.

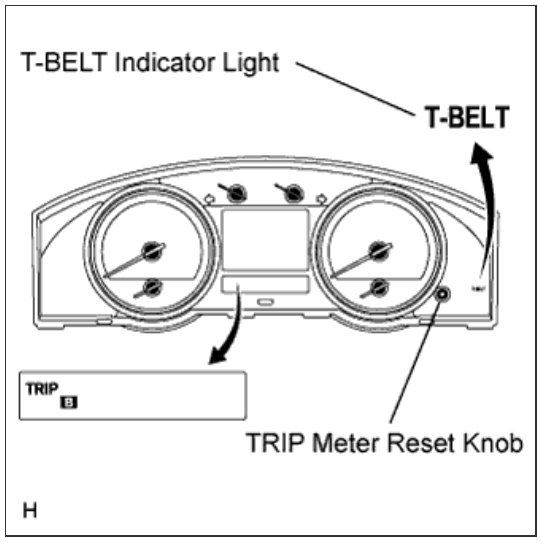

g. Change the set value in increments by turning the TRIP meter reset knob (the value must be changed within 5 seconds). (procedure A)

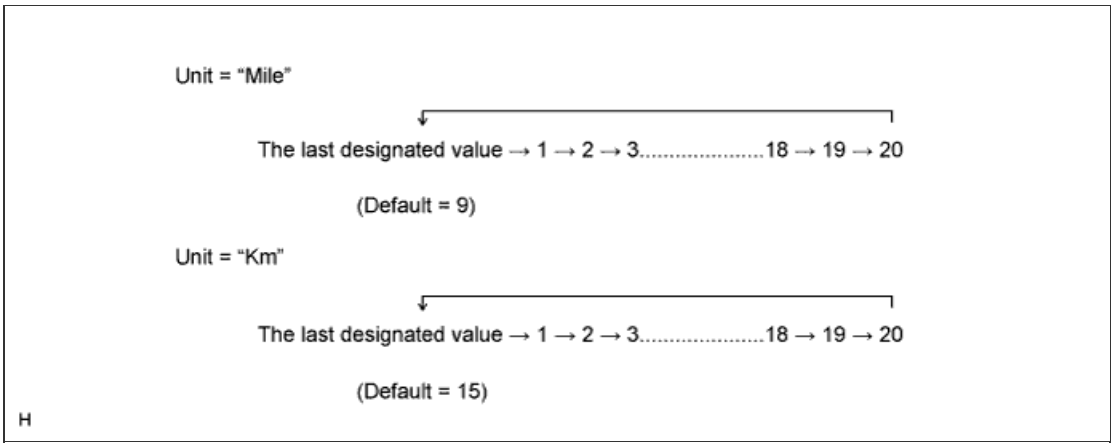

HINT:

Perform this procedure only when changing the previously set value.

NOTICE:

If the TRIP meter reset knob is not turned from on to off for 30 seconds or more during this step, the previously set value will be maintained and the TRIP B display will return (reset will not complete).

h. When the display changes to the desired setting, press the TRIP meter reset knob for 5 seconds or more to finish setting mode. (procedure B)

i. The ODO display area changes to the TRIP B display, the warning indicator turns off simultaneously and reset mode is completed. (procedure C)

NOTICE:

When not changing the previously set value, do not perform the operations in procedure A above, only perform procedures B and C.

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Malfunction System

Symptom	Suspected Area	See page
Entire Combination Meter does not Operate	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Fuses (ECU-B1, MET)	Click here
	Harness or connector	Click here
Odo/Trip Switch Malfunction	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Light control rheostat	Click here
	Harness or connector	Click here
Operating Light Control Rheostat does not Change Light Brightness	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Light control rheostat	Click here
	Harness or connector	Click here
Meter Illumination is Always Dark	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Main body ECU (Cowl side junction block LH)	Click here
Meter Illumination does not Dim at Night	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
Multi-information display does not change using DISP switch	Inspect steering pad switch	Click here
	Inspect spiral cable	Click here
	Perform Active Test (Meter display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Multi-information display is missing dots	Perform Active Test (Meter display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

Meter Gauges

Symptom	Suspected Area	See page
Speedometer Malfunction	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Vehicle stability control system	Click here
	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here

Tachometer Malfunction	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
Fuel Receiver Gauge Malfunction	Fuel sender gauge (DTC B1500)	Click here
	Fuel sender gauge (DTC B1501)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
Engine Coolant Gauge Malfunction	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
Oil Pressure Receiver Gauge Malfunction	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Oil pressure sensor (for 1GR-FE)	Click here
	Oil pressure sensor (for 2UZ-FE)	Click here
	Oil pressure sensor (for 1VD-FTV)	Click here
	Wire harness	Click here
Voltage Meter Malfunction	Fuse (MET)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Harness or connector	Click here

Warning/Indicator Lights

Symptom	Suspected Area	See page
BEAM indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Beam)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
FRONT FOG indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Fr FOG)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
TAIL indicator light does not come on*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Tail)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
REAR FOG indicator light does not come on*2	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Rr Fog)	Click here
	Replace combination meter assembly (w/ Multi-information	Click here

	Display)	
	Replace combination meter assembly (w/o Multi-information Display)	Click here
A/T OIL TEMP warning light does not come on*3, *4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (A/T Oil Temperature Operation)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
A/T P warning light does not come on*4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Perform Active Test (Indicat. A/T P)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
SMART KEY indicator light does not come on*3	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	ENTRY AND START system (for Entry Function)	Click here
	Perform Active Test (Indicat. KEY)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
SRS warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Airbag system	Click here
	Perform Active Test (Indicat. Lamp Airbag)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
DOOR warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Doors All Open)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
TIRE CARRIER warning light does not come on*5	Back door courtesy switch	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Driver side seat belt warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Perform Active Test (Driver Side Seat Belt)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Brake warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Lamp Brake)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

	Replace combination meter assembly (w/o Multi-information Display)	Click here
CHARGE warning light does not come on	Perform Active Test (Indicat. Lamp Charge)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
4LO indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
ABS warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Lamp ABS)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
MIL does not come on	Replace ECM (for 1GR-FE)	Click here
	Replace ECM (for 2UZ-FE)	Click here
	Replace ECM (for 1VD-FTV)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
	Harness or connector	-
T-BELT indicator light does not come on*3, *6	Replace combination meter assembly (w/o Multi-information Display)	Click here
GLOW indicator light does not come on*7	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Indicat. GLOW)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
OIL LEVEL indicator light does not come on*3	Oil Level Sensor (for 1GR-FE)	Click here
	Oil Level Sensor (for 2UZ-FE)	Click here
	Oil Level Sensor (for 1VD-FTV)	Click here
	Perform Active Test (Indicat. Lamp Oil Level)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
FUEL warning light does not come on	Perform Active Test (Indicat. Lamp fuel)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
	Harness or connector	-
FUEL FILTER & SEDIMENTER indicator light does not come on*3, *7	Fuel filter	Click here
	Perform Active Test (Indicat. Lamp Water Level)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
SLIP indicator light does not come on*8	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Lamp Slip)	Click here
	Replace combination meter assembly (w/ Multi-information	

	Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
CRUISE main indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Cruise control system	Click here
	Perform Active Test (Indicat. Lamp Cruise)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
VSC OFF indicator light does not come on*3, *8	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. VSC OFF)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Turn signal indicator light does not come on	Lighting system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
WASHER indicator light does not come on*3	Perform Active Test (Indicat. Lamp Washer)	Click here
	Wiper and washer system (w/ Rain sensor)	Click here
	Wiper and washer system (w/o Rain sensor)	Click here
	Wind washer jar and tank	-
	Replace combination meter assembly (w/o Multi-information Display)	Click here
RSCA OFF indicator light does not come on*9	AIRBAG system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Master warning light does not come on*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Perform Active Test (Master Warning)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
CRAWL indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. CRAWL)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Downhill assist control indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Downhill Assist Control)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
ECT PWR indicator light does not come on*4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system (for A750F, 1GR-FE)	Click here
	Automatic transmission system (for A750F, 2UZ-FE)	Click here
	Automatic transmission system (for AB60F, 1VD-FTV)	Click here
	Perform Active Test (Indicat. Lamp ECT PWR)	Click here

	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
2nd START indicator light does not come on*4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Indicat. 2nd START)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Center differential lock indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Perform Active Test (Indicat. Ctr DIFF LOCK)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
REAR DIFFERENTIAL LOCK warning light does not come on*10	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Perform Active Test (Indicat. Rr DIFF LOCK)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
PCS indicator light does not come on*1, *11	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Pre-Crash Safety system	Click here
	Perform Active Test (Indicat. Precrash)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
SPEED LIMIT indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Perform Active Test (Indicat. Over Speed)	Click here
	Vehicle stability control system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

*1: w/ Multi-information Display
*2: w/ Rear Fog Light
*3: w/o Multi-information Display
*4: for Automatic Transmission
*5: w/ Tire Carrier
*6: for 2UZ-FE
*7: for 1VD-FTV
*8: w/ VSC
*9: w/ Curtain Shield Airbag
*10: w/ Rear Differential Lock
*11: w/ Pre-crash Safety System

Multi-information Display

Symptom	Suspected Area	See page
"LAND CRUISER" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

"CURRENT" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"AFTER REFUELING" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRUISING RANGE" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"AFTER START" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"NORMAL" multi-function display malfunction	Cruise Control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRAWL has been deactivated" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRAWL is activated" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRAWL not available" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"BRAKE!" multi-function display malfunction	Pre-Crash Safety system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check PCS System" multi-function display malfunction	Pre-Crash Safety system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"PCS Not available now" multi-function display malfunction	Pre-Crash Safety system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Key is not detected" multi-function display malfunction	Entry and start system (for Entry Function)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
		Click

"Low Key Battery" multi-function display malfunction	Entry and start system (for Entry Function)	here
	Replace transmitter battery	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Shift to P position" multi-function display malfunction	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Entry and start system (for Start Function)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"P" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"R" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"N" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"D" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S1" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

"S2" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S3" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S4" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S5" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S6" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check Steering Lock System" multi-function display malfunction	Steering lock system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Steering Lock is still active" multi-function display malfunction	Steering lock system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Depress the brake pedal, and touch the engine switch with the key" multi-function display malfunction	Entry and start system (for Start Function)	Click here
	Engine Immobiliser system	Click here
	Steering lock system	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-	Click

	information Display)	here
"To start, depress the brake pedal, and push the engine switch" multi-function display malfunction	Entry and start system (for Start Function)	Click here
	Engine Immobiliser system	Click here
	Steering lock system	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Moon Roof Opened" multi-function display malfunction	Sliding roof system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Driver's door Open" multi-function display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Front Passenger's Door Open" multi-function display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Right Rear Door Open" multi-function display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Left Rear Door Open" multi-function display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Back Door Open" multi-function display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check Sonar" multi-function display malfunction	Toyota Parking Assist-Sensor system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Clean Sonar" multi-function display malfunction	Toyota Parking Assist-Sensor system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Parking brake system	Click here

"Release the Parking Brake" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check VSC System" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"VSC Test Mode" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"VSC OFF" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"High Transmission Fluid Temperature" multi-function display malfunction (for 2UZ-FE)	Automatic transmission system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"High Transmission Fluid Temperature" multi-function display malfunction (for 1VD-FTV)	Automatic transmission system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Engine Oil Level" multi-function display malfunction	Oil level sensor (for 2UZ-FE)	Click here
	Oil level sensor (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Washer Fluid" multi-function display malfunction	Wiper and washer system (w/ Rain sensor)	Click here
	Wiper and washer system (w/o Rain sensor)	Click here
	Wind washer jar and tank	-
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"High Water Level" multi-function display malfunction	Fuel filter	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Fuel" multi-function display malfunction (for 2UZ-FE)	Fuel system	Click here
	Replace Fuel sender gauge assembly	Click here
	Replace Fuel sender gauge assembly	Click here
	Perform Active Test (Meter Display 1)	Click here

	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Fuel" multi-function display malfunction (for 1VD-FTV)	Fuel system	Click here
	Replace Fuel sender gauge assembly	Click here
	Replace Fuel sender gauge assembly (for Fuel Sub Tank)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check Fuel System" multi-function display malfunction	Fuel system (for 2UZ-FE)	Click here
	Fuel system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd Soon" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd Reset" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd Reset UNFINISHED" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"DIAG VSC" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

Bu er

Symptom	Suspected Area	See page
A/T reverse buzzer (buzzer that sounds intermittently) does not sound*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	SFI system (for 1VD-FTV)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
Driver seat belt warning buzzer (buzzer that sounds intermittently. and then sounds 5 times) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Replace combination meter assembly (w/ Multi-	Click

	information Display)	here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Smart key buzzer (buzzer that sounds intermittently) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Entry And Start system (for Entry Function)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Immobiliser confirmed buzzer (buzzer that sounds once) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Engine immobiliser system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Multi display warning buzzer (buzzer that sounds once) does not sound*1	Replace combination meter assembly (w/ Multi-information Display)	Click here
Smart key (buzzer that sounds once) buzzer does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Entry And Start system (for Entry Function)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Seat belt warning LEVEL 1 buzzer (buzzer that sounds continuously) does not sound*2	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Seat belt warning LEVEL 2 buzzer (buzzer that sounds continuously) does not sound*2	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Smart key buzzer (buzzer that sounds continuous) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Entry And Start system (for Entry Function)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

PKB-ON running buzzer (buzzer that sounds intermittently) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Door ajar running warning buzzer (buzzer that sounds once) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sports shift reject buzzer (buzzer that sounds twice) does not sound (for 1GR-FE)	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sports shift reject buzzer (buzzer that sounds twice) does not sound (for 2UZ-FE)	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sports shift reject buzzer (buzzer that sounds twice) does not sound (for 1VD-FTV)	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Light reminder buzzer (buzzer that sounds continuously) does not sound*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sliding roof buzzer (buzzer that sounds once) does not sound	Sliding roof system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click

		here
Four wheel drive buzzer (buzzer that does not sound, sounds intermittently. and then sounds 3 times) does not sound	Transfer system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

*1: w/ Multi-information Display
*2: except Europe

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Malfunction System

Symptom	Suspected Area	See page
Entire Combination Meter does not Operate	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Fuses (ECU-B1, MET)	Click here
	Harness or connector	Click here
Odo/Trip Switch Malfunction	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Light control rheostat	Click here
	Harness or connector	Click here
Operating Light Control Rheostat does not Change Light Brightness	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Light control rheostat	Click here
	Harness or connector	Click here
Meter Illumination is Always Dark	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Main body ECU (Cowl side junction block LH)	Click here
Meter Illumination does not Dim at Night	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
Multi-information display does not change using DISP switch	Inspect steering pad switch	Click here
	Inspect spiral cable	Click here
	Perform Active Test (Meter display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Multi-information display is missing dots	Perform Active Test (Meter display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

Meter Gauges

Symptom	Suspected Area	See page
Speedometer Malfunction	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Vehicle stability control system	Click here
	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here

Tachometer Malfunction	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
Fuel Receiver Gauge Malfunction	Fuel sender gauge (DTC B1500)	Click here
	Fuel sender gauge (DTC B1501)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
Engine Coolant Gauge Malfunction	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
Oil Pressure Receiver Gauge Malfunction	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Oil pressure sensor (for 1GR-FE)	Click here
	Oil pressure sensor (for 2UZ-FE)	Click here
	Oil pressure sensor (for 1VD-FTV)	Click here
	Wire harness	Click here
Voltage Meter Malfunction	Fuse (MET)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Harness or connector	Click here

Warning/Indicator Lights

Symptom	Suspected Area	See page
BEAM indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Beam)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
FRONT FOG indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Fr FOG)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
TAIL indicator light does not come on*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Tail)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
REAR FOG indicator light does not come on*2	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Rr Fog)	Click here
	Replace combination meter assembly (w/ Multi-information	Click here

	Display)	
	Replace combination meter assembly (w/o Multi-information Display)	Click here
A/T OIL TEMP warning light does not come on*3, *4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (A/T Oil Temperature Operation)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
A/T P warning light does not come on*4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Perform Active Test (Indicat. A/T P)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
SMART KEY indicator light does not come on*3	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	ENTRY AND START system (for Entry Function)	Click here
	Perform Active Test (Indicat. KEY)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
SRS warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Airbag system	Click here
	Perform Active Test (Indicat. Lamp Airbag)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
DOOR warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Doors All Open)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
TIRE CARRIER warning light does not come on*5	Back door courtesy switch	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Driver side seat belt warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Perform Active Test (Driver Side Seat Belt)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Brake warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Lamp Brake)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

	Replace combination meter assembly (w/o Multi-information Display)	Click here
CHARGE warning light does not come on	Perform Active Test (Indicat. Lamp Charge)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
4LO indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
ABS warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Lamp ABS)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
MIL does not come on	Replace ECM (for 1GR-FE)	Click here
	Replace ECM (for 2UZ-FE)	Click here
	Replace ECM (for 1VD-FTV)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
	Harness or connector	-
T-BELT indicator light does not come on*3, *6	Replace combination meter assembly (w/o Multi-information Display)	Click here
GLOW indicator light does not come on*7	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Indicat. GLOW)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
OIL LEVEL indicator light does not come on*3	Oil Level Sensor (for 1GR-FE)	Click here
	Oil Level Sensor (for 2UZ-FE)	Click here
	Oil Level Sensor (for 1VD-FTV)	Click here
	Perform Active Test (Indicat. Lamp Oil Level)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
FUEL warning light does not come on	Perform Active Test (Indicat. Lamp fuel)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
	Harness or connector	-
FUEL FILTER & SEDIMENTER indicator light does not come on*3, *7	Fuel filter	Click here
	Perform Active Test (Indicat. Lamp Water Level)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
SLIP indicator light does not come on*8	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Lamp Slip)	Click here
	Replace combination meter assembly (w/ Multi-information	

	Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
CRUISE main indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Cruise control system	Click here
	Perform Active Test (Indicat. Lamp Cruise)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
VSC OFF indicator light does not come on*3, *8	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. VSC OFF)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Turn signal indicator light does not come on	Lighting system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
WASHER indicator light does not come on*3	Perform Active Test (Indicat. Lamp Washer)	Click here
	Wiper and washer system (w/ Rain sensor)	Click here
	Wiper and washer system (w/o Rain sensor)	Click here
	Wind washer jar and tank	-
	Replace combination meter assembly (w/o Multi-information Display)	Click here
RSCA OFF indicator light does not come on*9	AIRBAG system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Master warning light does not come on*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Perform Active Test (Master Warning)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
CRAWL indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. CRAWL)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Downhill assist control indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Downhill Assist Control)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
ECT PWR indicator light does not come on*4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system (for A750F, 1GR-FE)	Click here
	Automatic transmission system (for A750F, 2UZ-FE)	Click here
	Automatic transmission system (for AB60F, 1VD-FTV)	Click here
	Perform Active Test (Indicat. Lamp ECT PWR)	Click here

	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
2nd START indicator light does not come on*4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Indicat. 2nd START)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Center differential lock indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Perform Active Test (Indicat. Ctr DIFF LOCK)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
REAR DIFFERENTIAL LOCK warning light does not come on*10	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Perform Active Test (Indicat. Rr DIFF LOCK)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
PCS indicator light does not come on*1, *11	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Pre-Crash Safety system	Click here
	Perform Active Test (Indicat. Precrash)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
SPEED LIMIT indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Perform Active Test (Indicat. Over Speed)	Click here
	Vehicle stability control system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

*1: w/ Multi-information Display
*2: w/ Rear Fog Light
*3: w/o Multi-information Display
*4: for Automatic Transmission
*5: w/ Tire Carrier
*6: for 2UZ-FE
*7: for 1VD-FTV
*8: w/ VSC
*9: w/ Curtain Shield Airbag
*10: w/ Rear Differential Lock
*11: w/ Pre-crash Safety System

Multi-information Display

Symptom	Suspected Area	See page
"LAND CRUISER" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

"CURRENT" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"AFTER REFUELING" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRUISING RANGE" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"AFTER START" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"NORMAL" multi-function display malfunction	Cruise Control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRAWL has been deactivated" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRAWL is activated" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRAWL not available" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"BRAKE!" multi-function display malfunction	Pre-Crash Safety system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check PCS System" multi-function display malfunction	Pre-Crash Safety system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"PCS Not available now" multi-function display malfunction	Pre-Crash Safety system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Key is not detected" multi-function display malfunction	Entry and start system (for Entry Function)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
		Click

"Low Key Battery" multi-function display malfunction	Entry and start system (for Entry Function)	here
	Replace transmitter battery	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Shift to P position" multi-function display malfunction	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Entry and start system (for Start Function)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"P" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"R" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"N" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"D" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S1" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

"S2" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S3" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S4" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S5" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S6" does not display on multi-function display	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check Steering Lock System" multi-function display malfunction	Steering lock system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Steering Lock is still active" multi-function display malfunction	Steering lock system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Depress the brake pedal, and touch the engine switch with the key" multi-function display malfunction	Entry and start system (for Start Function)	Click here
	Engine Immobiliser system	Click here
	Steering lock system	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-	Click

	information Display)	here
"To start, depress the brake pedal, and push the engine switch" multi-function display malfunction	Entry and start system (for Start Function)	Click here
	Engine Immobiliser system	Click here
	Steering lock system	Click here
	SFI system (for 2UZ-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Moon Roof Opened" multi-function display malfunction	Sliding roof system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Driver's door Open" multi-function display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Front Passenger's Door Open" multi-function display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Right Rear Door Open" multi-function display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Left Rear Door Open" multi-function display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Back Door Open" multi-function display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check Sonar" multi-function display malfunction	Toyota Parking Assist-Sensor system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Clean Sonar" multi-function display malfunction	Toyota Parking Assist-Sensor system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Parking brake system	Click here

"Release the Parking Brake" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check VSC System" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"VSC Test Mode" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"VSC OFF" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"High Transmission Fluid Temperature" multi-function display malfunction (for 2UZ-FE)	Automatic transmission system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"High Transmission Fluid Temperature" multi-function display malfunction (for 1VD-FTV)	Automatic transmission system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Engine Oil Level" multi-function display malfunction	Oil level sensor (for 2UZ-FE)	Click here
	Oil level sensor (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Washer Fluid" multi-function display malfunction	Wiper and washer system (w/ Rain sensor)	Click here
	Wiper and washer system (w/o Rain sensor)	Click here
	Wind washer jar and tank	-
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"High Water Level" multi-function display malfunction	Fuel filter	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Fuel" multi-function display malfunction (for 2UZ-FE)	Fuel system	Click here
	Replace Fuel sender gauge assembly	Click here
	Replace Fuel sender gauge assembly	Click here
	Perform Active Test (Meter Display 1)	Click here

	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Fuel" multi-function display malfunction (for 1VD-FTV)	Fuel system	Click here
	Replace Fuel sender gauge assembly	Click here
	Replace Fuel sender gauge assembly (for Fuel Sub Tank)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check Fuel System" multi-function display malfunction	Fuel system (for 2UZ-FE)	Click here
	Fuel system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd Soon" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd Reset" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd Reset UNFINISHED" multi-function display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"DIAG VSC" multi-function display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

Bu er

Symptom	Suspected Area	See page
A/T reverse buzzer (buzzer that sounds intermittently) does not sound*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	SFI system (for 1VD-FTV)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
Driver seat belt warning buzzer (buzzer that sounds intermittently. and then sounds 5 times) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Replace combination meter assembly (w/ Multi-	Click

	information Display)	here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Smart key buzzer (buzzer that sounds intermittently) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Entry And Start system (for Entry Function)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Immobiliser confirmed buzzer (buzzer that sounds once) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Engine immobiliser system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Multi display warning buzzer (buzzer that sounds once) does not sound*1	Replace combination meter assembly (w/ Multi-information Display)	Click here
Smart key (buzzer that sounds once) buzzer does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Entry And Start system (for Entry Function)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Seat belt warning LEVEL 1 buzzer (buzzer that sounds continuously) does not sound*2	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Seat belt warning LEVEL 2 buzzer (buzzer that sounds continuously) does not sound*2	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Smart key buzzer (buzzer that sounds continuous) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Entry And Start system (for Entry Function)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

PKB-ON running buzzer (buzzer that sounds intermittently) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Door ajar running warning buzzer (buzzer that sounds once) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sports shift reject buzzer (buzzer that sounds twice) does not sound (for 1GR-FE)	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sports shift reject buzzer (buzzer that sounds twice) does not sound (for 2UZ-FE)	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sports shift reject buzzer (buzzer that sounds twice) does not sound (for 1VD-FTV)	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Light reminder buzzer (buzzer that sounds continuously) does not sound*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sliding roof buzzer (buzzer that sounds once) does not sound	Sliding roof system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click

		here
Four wheel drive buzzer (buzzer that does not sound, sounds intermittently. and then sounds 3 times) does not sound	Transfer system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

*1: w/ Multi-information Display
*2: except Europe

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Malfunction System

Symptom	Suspected Area	See page
Entire Combination Meter does not Operate	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Fuses (ECU-B1, MET)	Click here
	Harness or connector	Click here
Odo/Trip Switch Malfunction	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Light control rheostat	Click here
	Harness or connector	Click here
Operating Light Control Rheostat does not Change Light Brightness	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Light control rheostat	Click here
	Harness or connector	Click here
Meter Illumination is Always Dark	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Main body ECU (Cowl side junction block LH)	Click here
Meter Illumination does not Dim at Night	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
Multi-information display does not change using DISP switch	Inspect steering pad switch	Click here
	Inspect spiral cable	Click here
	Perform Active Test (Meter display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Multi-information display is missing dots	Perform Active Test (Meter display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

Meter Gauges

Symptom	Suspected Area	See page
Speedometer Malfunction	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Vehicle stability control system	Click here
	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here

Tachometer Malfunction	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
Fuel Receiver Gauge Malfunction	Fuel sender gauge (DTC B1500)	Click here
	Fuel sender gauge (DTC B1501)	Click here
	Fuel receiver gauge malfunction	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
Engine Coolant Gauge Malfunction	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
Oil Pressure Receiver Gauge Malfunction	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Oil pressure sensor (for 1GR-FE)	Click here
	Oil pressure sensor (for 2UZ-FE)	Click here
	Oil pressure sensor (for 3UR-FE)	Click here
	Oil pressure sensor (for 1VD-FTV)	Click here
	Wire harness	Click here
Voltage Meter Malfunction	Fuse (MET)	Click here
	Combination meter assembly (w/ Multi-information Display)	Click here
	Combination meter assembly (w/o Multi-information Display)	Click here
	Harness or connector	Click here

Warning/Indicator Lights

Symptom	Suspected Area	See page
BEAM indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Beam)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
FRONT FOG indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Fr FOG)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
TAIL indicator light does not come on*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Tail)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	CAN communication system (for LHD)	Click here

REAR FOG indicator light does not come on*2	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Rr Fog)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
A/T OIL TEMP warning light does not come on*3, *4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (A/T Oil Temperature Operation)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
A/T P warning light does not come on*4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Perform Active Test (Indicat. A/T P)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
KEY indicator light does not come on*3	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	ENTRY AND START system (for Entry Function)	Click here
	Perform Active Test (Indicat. KEY)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
SRS warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Airbag system	Click here
	Perform Active Test (Indicat. Lamp Airbag)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
DOOR warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Perform Active Test (Indicat. Lamp Doors All Open)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
TIRE CARRIER warning light does not come on*5	Back door courtesy switch	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Driver side seat belt warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Perform Active Test (Driver Side Seat Belt)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
	CAN communication system (for LHD)	Click here

Brake warning light does not come on	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Lamp Brake)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
CHARGE warning light does not come on	Perform Active Test (Indicat. Lamp Charge)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
4LO indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
ABS warning light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Lamp ABS)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
MIL does not come on	Replace ECM (for 1GR-FE)	Click here
	Replace ECM (for 2UZ-FE)	Click here
	Replace ECM (for 3UR-FE)	Click here
	Replace ECM (for 1VD-FTV)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
	Harness or connector	-
T-BELT indicator light does not come on*3, *6	Replace combination meter assembly (w/o Multi-information Display)	Click here
GLOW indicator light does not come on*7	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Indicat. GLOW)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
OIL LEVEL indicator light does not come on*3	Oil Level Sensor (for 1GR-FE)	Click here
	Oil Level Sensor (for 2UZ-FE)	Click here
	Oil Level Sensor (for 1VD-FTV)	Click here
	Perform Active Test (Indicat. Lamp Oil Level)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
FUEL warning light does not come on	Perform Active Test (Indicat. Lamp fuel)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
	Harness or connector	-
FUEL FILTER & SEDIMENTER indicator light does not come on*3, *7	Fuel filter	Click here
	Perform Active Test (Indicat. Lamp Water Level)	Click here
	Replace combination meter assembly (w/o Multi-information	

	Display)	Click here
SLIP indicator light does not come on*8	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Lamp Slip)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
CRUISE main indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Cruise control system	Click here
	Perform Active Test (Indicat. Lamp Cruise)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
VSC OFF indicator light does not come on*3, *8	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. VSC OFF)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Turn signal indicator light does not come on	Lighting system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
WASHER indicator light does not come on*3	Perform Active Test (Indicat. Lamp Washer)	Click here
	Wiper and washer system (w/ Rain sensor)	Click here
	Wiper and washer system (w/o Rain sensor)	Click here
	Wind washer jar and tank	-
	Replace combination meter assembly (w/o Multi-information Display)	Click here
RSCA OFF indicator light does not come on*9	AIRBAG system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Master warning light does not come on*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Perform Active Test (Master Warning)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
CRAWL indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. CRAWL)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Downhill assist control indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Vehicle stability control system	Click here
	Perform Active Test (Indicat. Downhill Assist Control)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
	CAN communication system (for LHD)	Click here

ECT PWR indicator light does not come on*4	CAN communication system (for RHD)	Click here
	Automatic transmission system (for A750F, 1GR-FE)	Click here
	Automatic transmission system (for A750F, 2UZ-FE)	Click here
	Automatic transmission system (for AB60F, 3UR-FE)	Click here
	Automatic transmission system (for AB60F, 1VD-FTV)	Click here
	Perform Active Test (Indicat. Lamp ECT PWR)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
2nd START indicator light does not come on*4	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	SFI system (for 1GR-FE)	Click here
	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Indicat. 2nd START)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Center differential lock indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Perform Active Test (Indicat. Ctr DIFF LOCK)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
REAR DIFFERENTIAL LOCK warning light does not come on*10	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Perform Active Test (Indicat. Rr DIFF LOCK)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
PCS indicator light does not come on*1, *11	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Pre-Crash Safety system	Click here
	Perform Active Test (Indicat. Precrash)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
SPEED LIMIT indicator light does not come on	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Perform Active Test (Indicat. Over Speed)	Click here
	Vehicle stability control system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

*1: w/ Multi-information Display
*2: w/ Rear Fog Light
*3: w/o Multi-information Display
*4: for Automatic Transmission
*5: w/ Tire Carrier
*6: for 2UZ-FE
*7: for 1VD-FTV
*8: w/ VSC
*9: w/ Curtain Shield Airbag
*10: w/ Rear Differential Lock

*11: w/ Pre-crash Safety System

Multi-information Display

Symptom	Suspected Area	See page
"LAND CRUISER" multi-information display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CURRENT" multi-information display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"AFTER REFUELING" multi-information display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRUISING RANGE" multi-information display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"AFTER START" multi-information display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"NORMAL" multi-information display malfunction	Cruise Control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRAWL has been deactivated" multi-information display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRAWL is activated" multi-information display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"CRAWL not available" multi-information display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"BRAKE!" multi-information display malfunction	Pre-Crash Safety system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check PCS System" multi-information display malfunction	Pre-Crash Safety system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Pre-Crash Safety system	Click here
		Click

"PCS Not available now" multi-information display malfunction	Perform Active Test (Meter Display 1)	here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Key is not detected" multi-information display malfunction	Entry and start system (for Entry Function)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Key Battery" multi-information display malfunction	Entry and start system (for Entry Function)	Click here
	Replace transmitter battery	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Shift to P position" multi-information display malfunction	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Entry and start system (for Start Function)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"P" does not display on multi-information display	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"R" does not display on multi-information display	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"N" does not display on multi-information display	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"D" does not display on multi-information display	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here

	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S" does not display on multi-information display	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S1" does not display on multi-information display	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S2" does not display on multi-information display	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S3" does not display on multi-information display	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S4" does not display on multi-information display	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"S5" does not display on multi-information display	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	SFI system (for 2UZ-FE)	Click

		here
"S6" does not display on multi-information display	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check Steering Lock System" multi-information display malfunction	Steering lock system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Steering Lock is still active" multi-information display malfunction	Steering lock system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Depress the brake pedal, and touch the engine switch with the key" multi-information display malfunction	Entry and start system (for Start Function)	Click here
	Engine Immobiliser system	Click here
	Steering lock system	Click here
	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"To start, depress the brake pedal, and push the engine switch" multi-information display malfunction	Entry and start system (for Start Function)	Click here
	Engine Immobiliser system	Click here
	Steering lock system	Click here
	SFI system (for 2UZ-FE)	Click here
	SFI system (for 3UR-FE)	Click here
	ECD system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Moon Roof Opened" multi-information display malfunction	Sliding roof system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Driver's door Open" multi-information display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

"Front Passenger's Door Open" multi-information display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Right Rear Door Open" multi-information display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Left Rear Door Open" multi-information display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Back Door Open" multi-information display malfunction	Lighting system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check Sonar" multi-information display malfunction	Toyota Parking Assist-Sensor system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Clean Sonar" multi-information display malfunction	Toyota Parking Assist-Sensor system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Release the Parking Brake" multi-information display malfunction	Parking brake system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Check VSC System" multi-information display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"VSC Test Mode" multi-information display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"VSC OFF" multi-information display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"High Transmission Fluid Temperature" multi-information display malfunction (for 2UZ-FE)	Automatic transmission system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

"High Transmission Fluid Temperature" multi-information display malfunction (for 3UR-FE)	Automatic transmission system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"High Transmission Fluid Temperature" multi-information display malfunction (for 1VD-FTV)	Automatic transmission system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Engine Oil Level" multi-information display malfunction	Oil level sensor (for 2UZ-FE)	Click here
	Oil level sensor (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Washer Fluid" multi-information display malfunction	Wiper and washer system (w/ Rain sensor)	Click here
	Wiper and washer system (w/o Rain sensor)	Click here
	Wind washer jar and tank	-
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"High Water Level" multi-information display malfunction (for 1VD-FTV)	Fuel filter	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Fuel" multi-information display malfunction (for 2UZ-FE)	Fuel system	Click here
	Replace Fuel sender gauge assembly	Click here
	Replace Fuel sender gauge assembly	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Fuel" multi-information display malfunction (for 3UR-FE)	Fuel system	Click here
	Replace Fuel sender gauge assembly	Click here
	Replace Fuel sender gauge assembly (for Fuel Sub Tank)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Low Fuel" multi-information display malfunction (for 1VD-FTV)	Fuel system	Click here
	Replace Fuel sender gauge assembly	Click here
	Replace Fuel sender gauge assembly (for Fuel Sub Tank)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

"Check Fuel System" multi-information display malfunction	Fuel system (for 2UZ-FE)	Click here
	Fuel system (for 3UR-FE)	Click here
	Fuel system (for 1VD-FTV)	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd Soon" multi-information display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd" multi-information display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd Reset" multi-information display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"Oil Maintenance Reqd Reset UNFINISHED" multi-information display malfunction	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
"DIAG VSC" multi-information display malfunction	Vehicle stability control system	Click here
	Perform Active Test (Meter Display 1)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here

Bu er

Symptom	Suspected Area	See page
Driver seat belt warning buzzer (buzzer that sounds intermittently, and then sounds 5 times) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Entry and start system buzzer (buzzer that sounds intermittently) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Entry And Start system (for Entry Function)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Immobiliser confirmed buzzer (buzzer that sounds once) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Engine immobiliser system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here


	Replace combination meter assembly (w/o Multi-information Display)	Click here
Multi display warning buzzer (buzzer that sounds once) does not sound*1	Replace combination meter assembly (w/ Multi-information Display)	Click here
Entry and start system (buzzer that sounds once) buzzer does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Entry And Start system (for Entry Function)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Seat belt warning LEVEL 1 buzzer (buzzer that sounds continuously) does not sound*2	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Seat belt warning LEVEL 2 buzzer (buzzer that sounds continuously) does not sound*2	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Seat belt warning system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Entry and start system buzzer (buzzer that sounds continuous) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Entry And Start system (for Entry Function)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
PKB-ON running buzzer (buzzer that sounds intermittently) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Door ajar running warning buzzer (buzzer that sounds once) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sports shift reject buzzer (buzzer that sounds twice) does not sound (for 1GR-FE)	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system	Click

		here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sports shift reject buzzer (buzzer that sounds twice) does not sound (for 2UZ-FE)	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sports shift reject buzzer (buzzer that sounds twice) does not sound (for 3UR-FE)	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sports shift reject buzzer (buzzer that sounds twice) does not sound (for 1VD-FTV)	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Automatic transmission system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Light reminder buzzer (buzzer that sounds continuously) does not sound*1	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Lighting system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Sliding roof buzzer (buzzer that sounds once) does not sound	Sliding roof system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here
Four wheel drive buzzer (buzzer that does not sound, sounds intermittently. and then sounds 3 times) does not sound	CAN communication system (for LHD)	Click here
	CAN communication system (for RHD)	Click here
	Transfer system	Click here
	Replace combination meter assembly (w/ Multi-information Display)	Click here
	Replace combination meter assembly (w/o Multi-information Display)	Click here

*1: w/ Multi-information Display
*2: except Europe

for Preparation Click here

CHECK COMBINATION METER

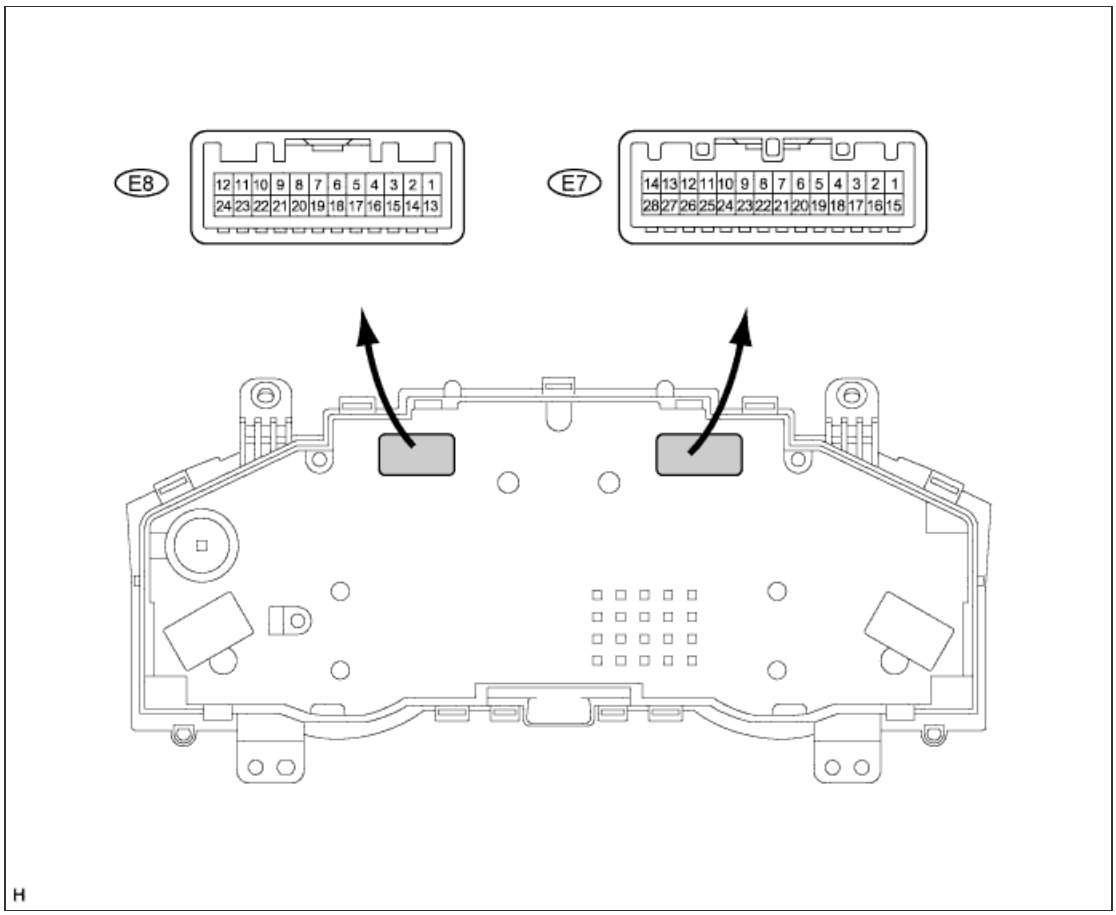

a. Measure the resistance and voltage according to the value(s) in the table below.


Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E7-3 (SI) - Body ground	V - Body ground	Speed signal (input)	Engine switch on (IG), wheel turned slowly	Pulse generation
E7-4 (+S) - Body ground	V - Body ground	Speed signal (output)	Engine switch on (IG), wheel turned slowly	Pulse generation
E7-5 (WLVL) - Body ground	V - Body ground	Washer level warning signal	Washer fluid level sensor ON	Below 1 V
			Washer fluid level sensor OFF	11 to 14 V
E7-6 (OIL) - Body ground	L - Body ground	Oil level signal	Oil level sensor ON	Below 1 V
			Oil level sensor OFF	11 to 14 V
E7-7 (P/SB) - Body ground	B - Body ground*1	Seat belt warning signal	Engine switch on (IG), seat occupied, seat belt unfastened → fastened	Alternating between below 1 and 11 to 14 V
	G - Body ground*2			
E7-8 (R) - Body ground	L - Body ground	Park/neutral signal*3	Park/neutral switch on	11 to 14 V
		Reverse signal*4	Back-up light switch on	
E7-9 (L A/B) - Body ground	GR - Body ground	Ground	Always	Below 1 V
E7-11 (R/O) - Body ground*5	P - Body ground	RSCA OFF indicator light input signal	Engine switch on (IG), RSCA OFF indicator light on	Below 1 V
			Engine switch on (IG), RSCA OFF indicator light off	8 to 14 V
			Engine switch on (IG),	

E7-12 (CHG-) - Body ground	B - Body ground	CHARGE warning light	CHARGE warning light on	Below 1 V
			Engine switch on (IG), CHARGE warning light off	11 to 14 V
E7-13 (IND) - Body ground*6	R - Body ground	TIRE CARRIER warning light	Back door open	Below 1 V
			Back door closed	11 to 14 V
E7-14 (EP) - Body ground	W - B	Ground	Always	Below 1 V
E7-15 (ET) - Body ground	BR - Body ground	Ground	Always	Below 1 V
E7-17 (B) - Body ground	R - Body ground	Power source	Always	11 to 14 V
E7-18 (IG+) - Body ground	B - Body ground	Engine switch signal	Engine switch off	Below 1 V
			Engine switch on (IG)	11 to 14 V
E7-22 (WRNP) - Body ground	Y - Body ground	Passenger seat belt warning light signal	Engine switch on (IG), passenger seat occupied, seat belt unfastened → fastened	Alternating between below 1 and 11 to 14 V
E7-27 (B) - Body ground	R - Body ground	Turn signal R	Engine switch on (IG), turn signal switch neutral position	Below 1 V
			Engine switch on (IG), turn signal switch turned to left	Alternating between below 1 and 11 to 14 V
E7-28 (B) - Body ground	L - Body ground	Turn signal L	Engine switch on (IG), turn signal switch neutral position	Below 1 V
			Engine switch on (IG), turn signal switch turned to right	Alternating between below 1 and 11 to 14 V
E8-3 (MSSL) - Body ground	L - Body ground	Spiral cable signal	Engine switch on (IG), steering pad switch signal DISP OFF	Below 1 V
			Engine switch on (IG), steering pad switch signal DISP ON	11 to 14 V
E8-4 (RSET) - Body ground*7	B - Body ground	Light control rheostat signal	Engine switch on (IG), light control rheostat trip switch off	Below 1 V
			Engine switch on (IG), light control rheostat trip switch on	11 to 14 V
E8-9 (L) - Body ground	Y - Body ground	Fuel sender gauge signal	Fuel F (full tank) → E (empty)	4.5 to 9 V
E8-10 (L) - Body ground*8	BR - Body ground	Fuel sender gauge signal	Fuel F (full tank) → E (empty)	4.5 to 9 V
E8-11 (S) - Body ground*9, *10	L - Body ground	Engine oil pressure warning signal	Engine oil pressure warning light illuminated → not illuminated	Alternating between below 1 and 11 to 14 V
E8-12 (CHK) - Body ground	R - Body ground	MIL input signal	Engine switch on (IG), MIL on	Below 3 V
			Engine switch on (IG), MIL off	11 to 14 V
E8-14 (S) - Body ground*10	G - Body ground	Fuel filter warning signal	Engine switch on (IG), clogging switch on	Alternating between below 1 and 11 to 14 V
E8-15 (FFTR) - Body ground*10	V - Body ground	Fuel filter warning signal	Engine switch on (IG), level warning switch on	Alternating between below 1 and 11 to 14 V
E8-16 (S) - Body ground*11	LG - Body ground	Engine oil pressure warning signal	Engine oil pressure warning light illuminated → not illuminated	Alternating between below 1 and 11 to 14 V
E8-17 (IG+) - Body ground*11	B - Body ground	Engine oil pressure warning signal	Engine oil pressure warning light illuminated → not illuminated	Alternating between below 1 and 11 to 14 V
E8-18 (ILL+) - Body ground*7	G - Body ground	Light control rheostat signal	Engine switch on (IG)	4.6 to 5.4 V
E8-19 (TR) - Body		Light control rheostat	Light control rheostat knob fully turned left	Below 1 V


ground*7	W - Body ground	knob input	Light control rheostat knob fully turned right	10 kΩ or higher
E8-20 (TC) - Body ground*7	B - Body ground	Light control rheostat signal	Engine switch on (IG), light control rheostat TAIL, cancel switch off	Below 1 V
			Engine switch on (IG), light control rheostat TAIL, cancel switch on	10 kΩ or higher
E8-21 (E) - Body ground	B - Body ground	Fuel sender gauge ground	Always	Below 1 Ω
E8-22 (FE) - Body ground*8	G - Body ground	Fuel sender gauge ground	Always	Below 1 Ω
E8-23 (E2) - Body ground*7	L - Body ground	Light control rheostat ground	Always	Below 1 V
E8-24 (E) - Body ground*11	W - Body ground	Oil pressure sensor ground	Always	Below 1 Ω

*1: for LHD
*2: for RHD
*3: for Automatic Transmission
*4: for Manual Transmission
*5: w/ Curtain Shield Airbag
*6: w/ Tire Carrier
*7: w/ Multi-information Display
*8: for Double Tank Type
*9: for 2UZ-FE
*10: for 1VD-FTV
*11: for 1GR-FE

CHECK COMBINATION METER INNER CIRCUIT

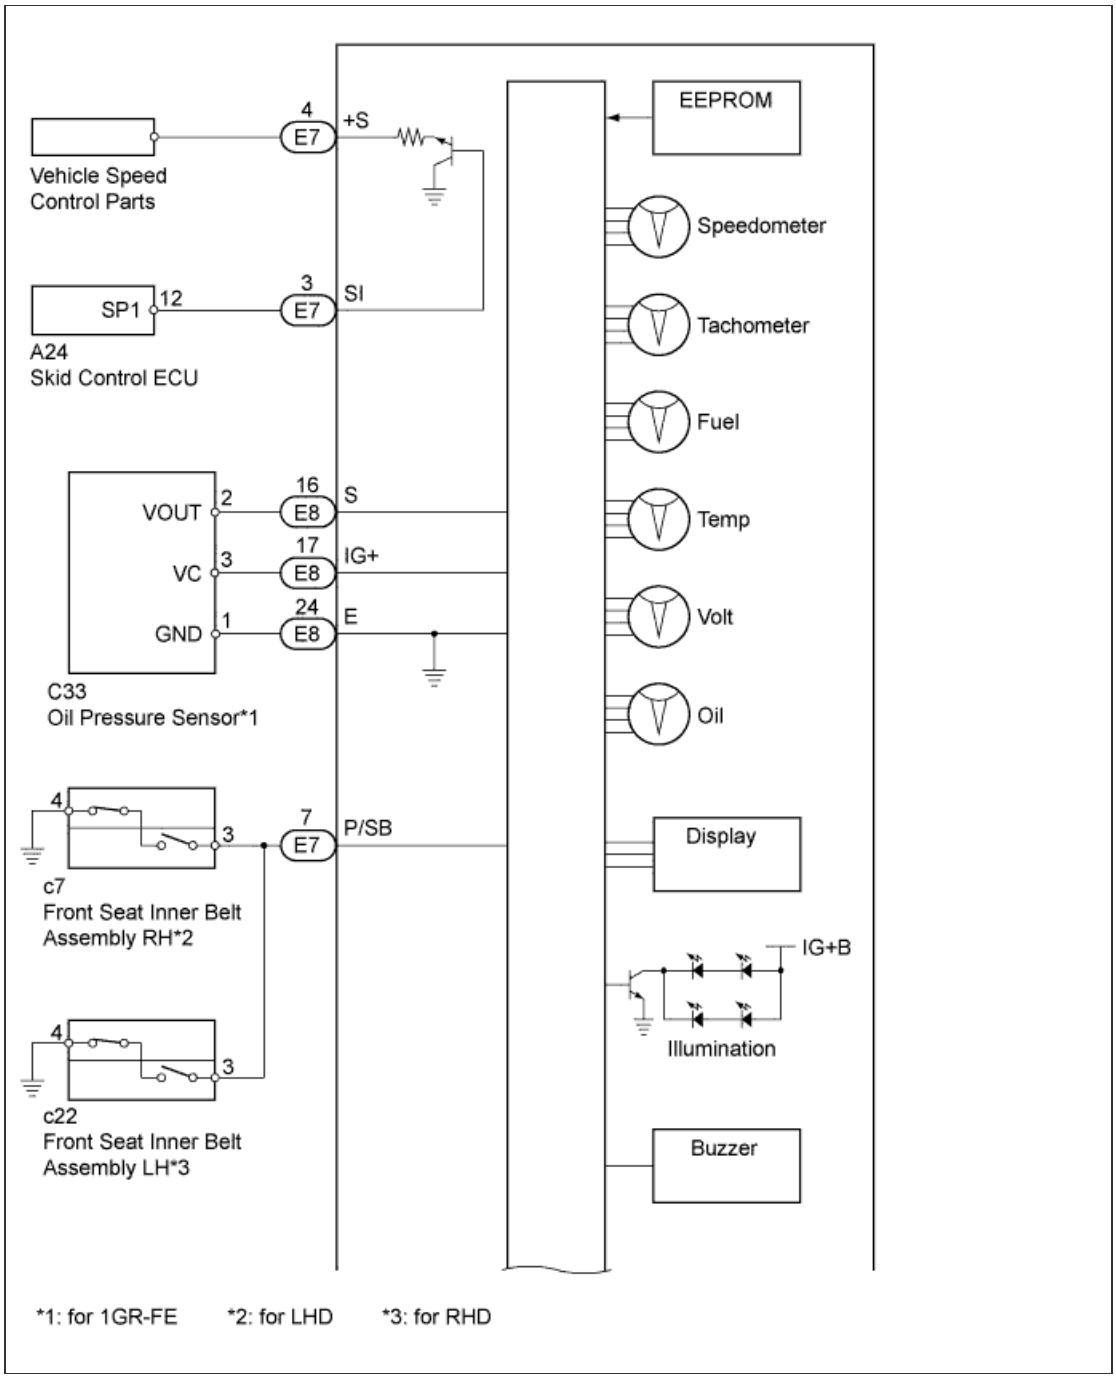

*1: for 1GR-FE *2: for LHD *3: for RHD

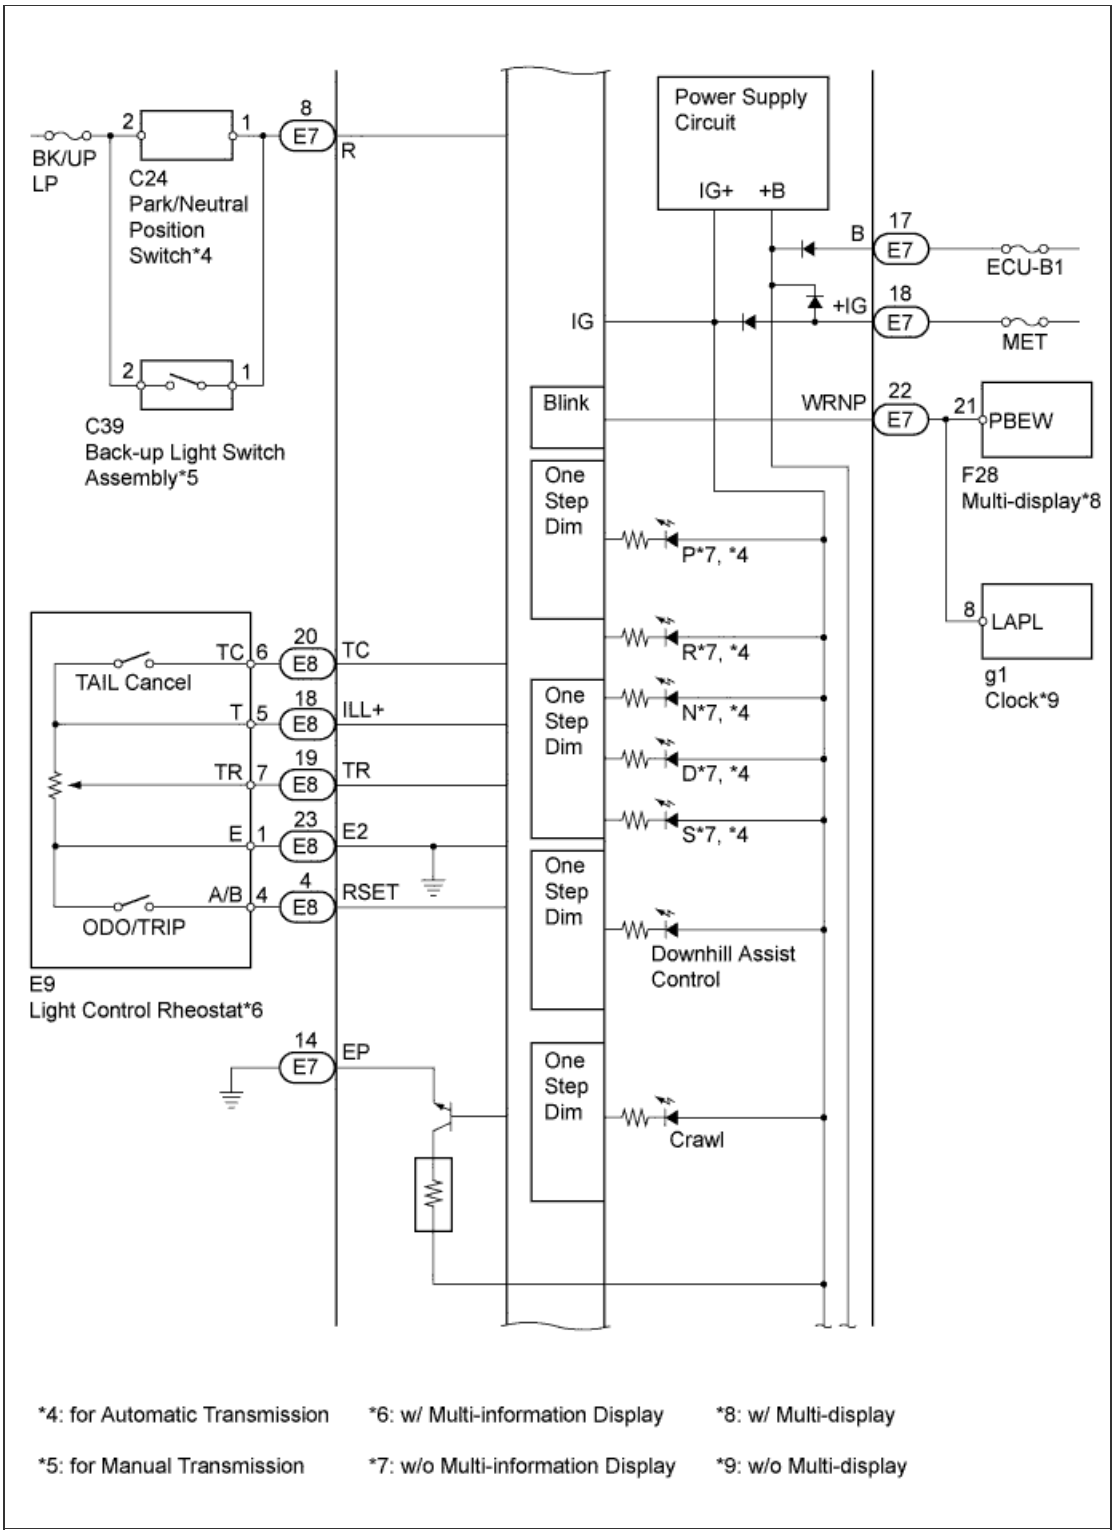

*4: for Automatic Transmission


*5: for Manual Transmission

*6: w/ Multi-information Display

*7: w/o Multi-information Display

*8: w/ Multi-display

*9: w/o Multi-display

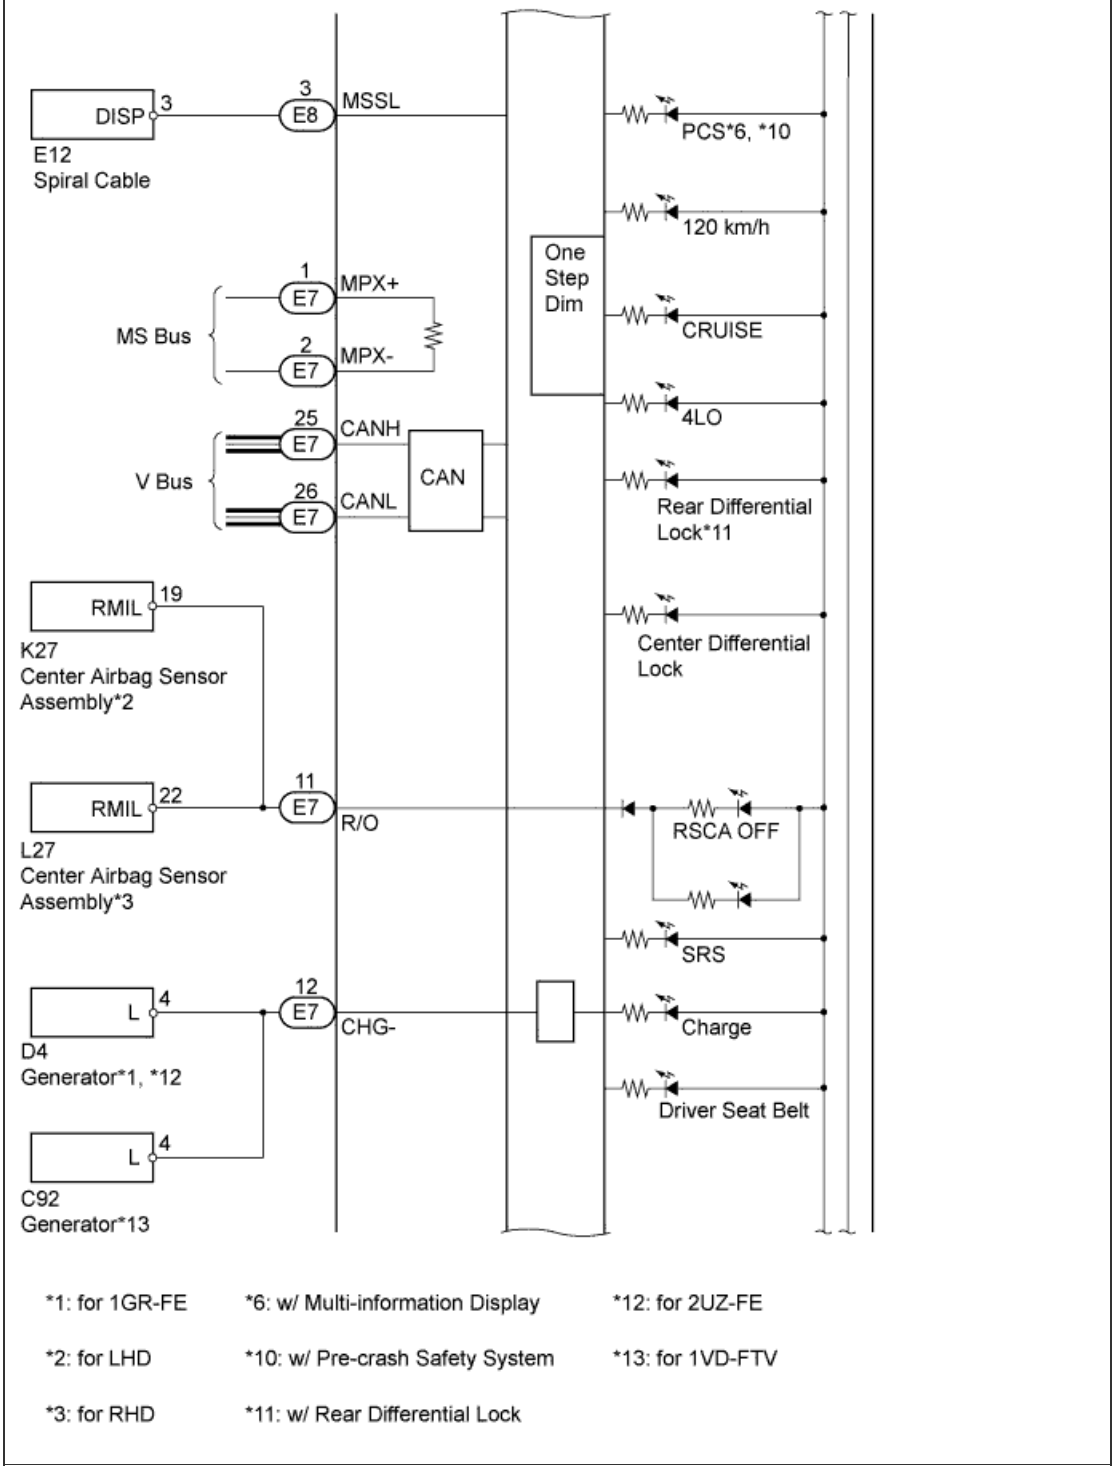

*1: for 1GR-FE

*2: for LHD

*3: for RHD


*6: w/ Multi-information Display

*10: w/ Pre-crash Safety System

*11: w/ Rear Differential Lock

*12: for 2UZ-FE

*13: for 1VD-FTV

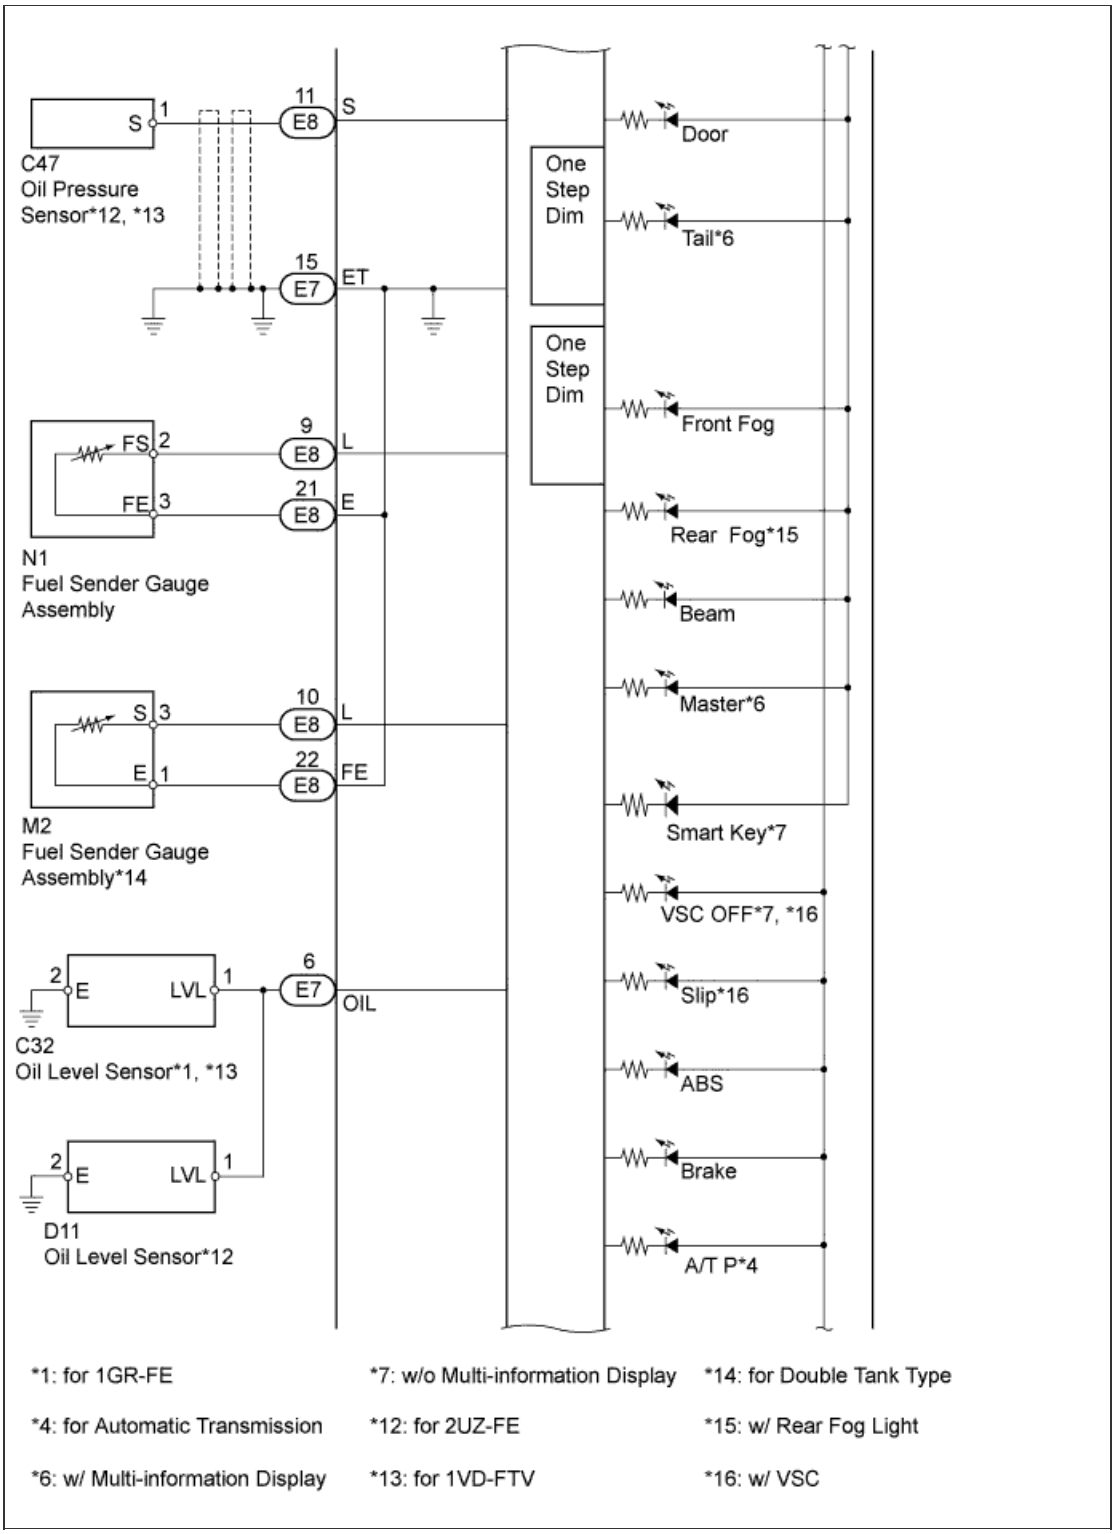

*1: for 1GR-FE

*4: for Automatic Transmission

*6: w/ Multi-information Display

*7: w/o Multi-information Display


*12: for 2UZ-FE

*13: for 1VD-FTV

*14: for Double Tank Type

*15: w/ Rear Fog Light

*16: w/ VSC

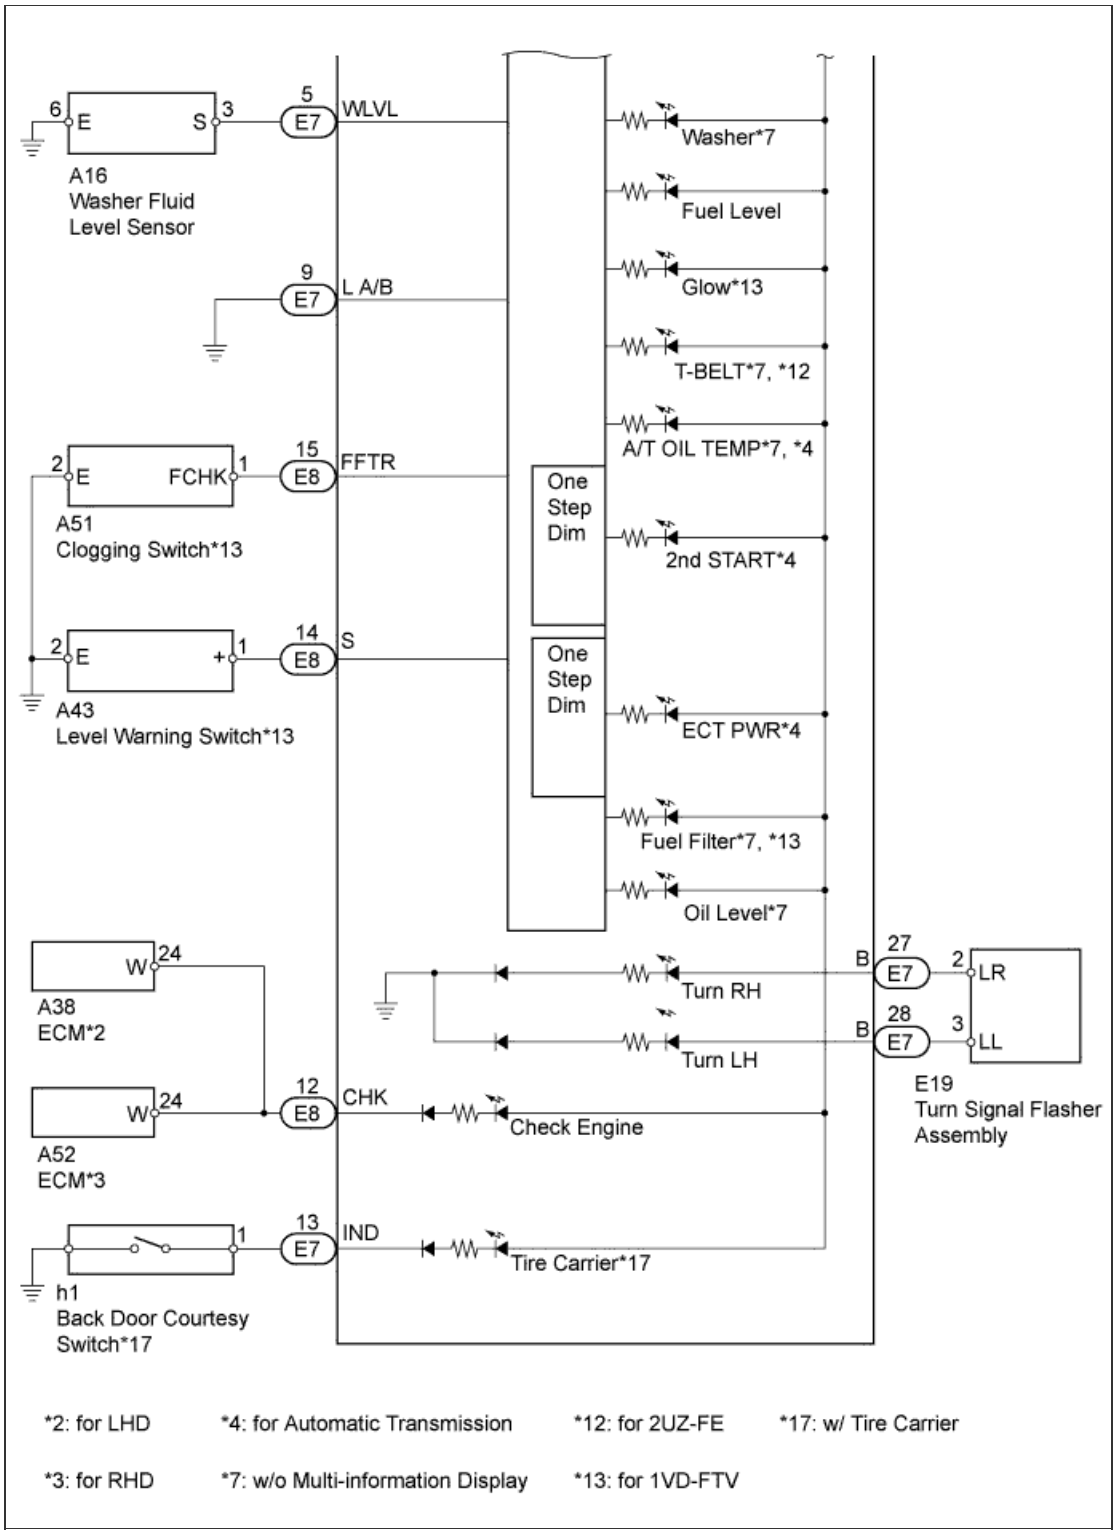


*2: for LHD *4: for Automatic Transmission *12: for 2UZ-FE *17: w/ Tire Carrier

*3: for RHD *7: w/o Multi-information Display *13: for 1VD-FTV

for Preparation Click here

CHECK COMBINATION METER

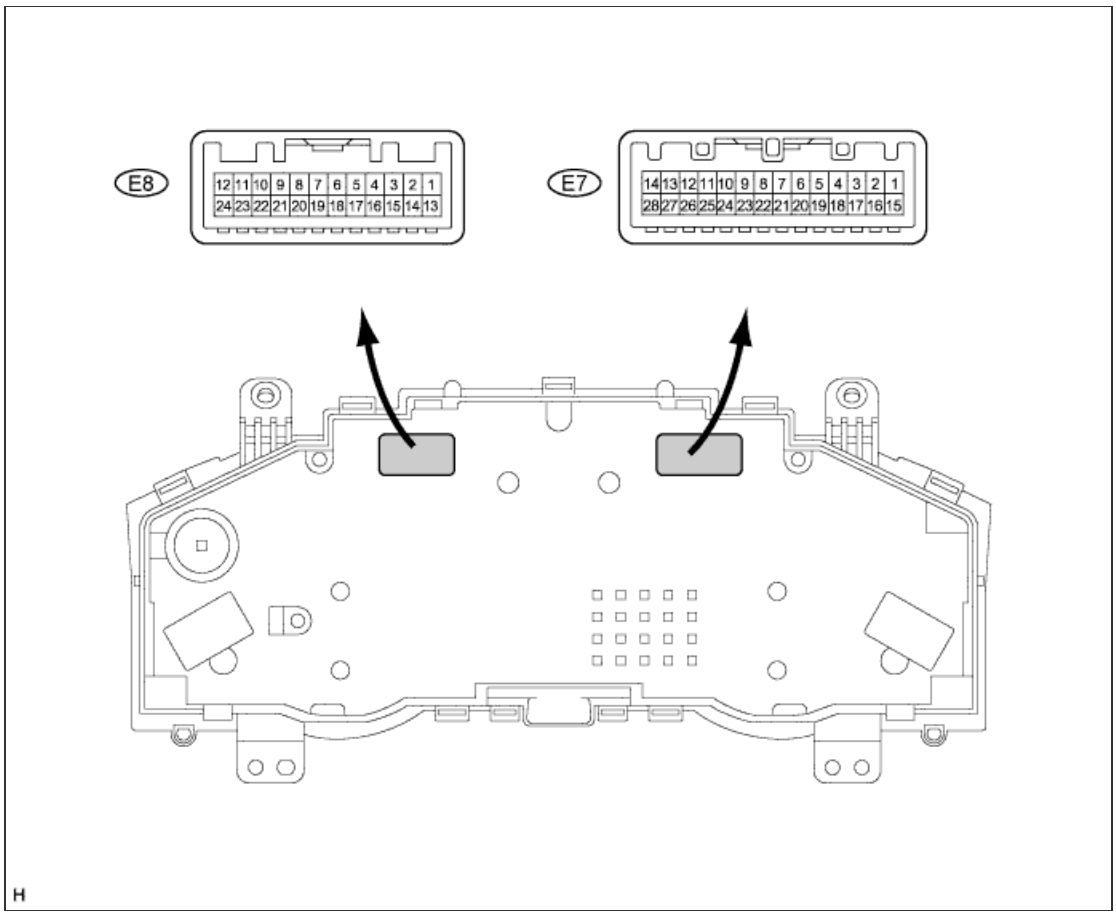

a. Measure the resistance and voltage according to the value(s) in the table below.


Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E7-3 (SI) - Body ground	V - Body ground	Speed signal (input)	Engine switch on (IG), wheel turned slowly	Pulse generation
E7-4 (+S) - Body ground	V - Body ground	Speed signal (output)	Engine switch on (IG), wheel turned slowly	Pulse generation
E7-5 (WLVL) - Body ground	V - Body ground	Washer level warning signal	Washer fluid level sensor ON	Below 1 V
			Washer fluid level sensor OFF	11 to 14 V
E7-6 (OIL) - Body ground	L - Body ground	Oil level signal	Oil level sensor ON	Below 1 V
			Oil level sensor OFF	11 to 14 V
E7-7 (P/SB) - Body ground	B - Body ground*1	Seat belt warning signal	Engine switch on (IG), seat occupied, seat belt unfastened → fastened	Alternating between below 1 and 11 to 14 V
	G - Body ground*2			
E7-8 (R) - Body ground	L - Body ground	Park/neutral signal*3	Park/neutral switch on	11 to 14 V
		Reverse signal*4	Back-up light switch on	
E7-9 (L A/B) - Body ground	GR - Body ground	Ground	Always	Below 1 V
E7-11 (R/O) - Body ground*5	P - Body ground	RSCA OFF indicator light input signal	Engine switch on (IG), RSCA OFF indicator light on	Below 1 V
			Engine switch on (IG), RSCA OFF indicator light off	8 to 14 V
			Engine switch on (IG),	

E7-12 (CHG-) - Body ground	B - Body ground	CHARGE warning light	CHARGE warning light on	Below 1 V
			Engine switch on (IG), CHARGE warning light off	11 to 14 V
E7-13 (IND) - Body ground*6	R - Body ground	TIRE CARRIER warning light	Back door open	Below 1 V
			Back door closed	11 to 14 V
E7-14 (EP) - Body ground	W - B	Ground	Always	Below 1 V
E7-15 (ET) - Body ground	BR - Body ground	Ground	Always	Below 1 V
E7-17 (B) - Body ground	R - Body ground	Power source	Always	11 to 14 V
E7-18 (IG+) - Body ground	B - Body ground	Engine switch signal	Engine switch off	Below 1 V
			Engine switch on (IG)	11 to 14 V
E7-22 (WRNP) - Body ground	Y - Body ground	Passenger seat belt warning light signal	Engine switch on (IG), passenger seat occupied, seat belt unfastened → fastened	Alternating between below 1 and 11 to 14 V
E7-27 (B) - Body ground	R - Body ground	Turn signal R	Engine switch on (IG), turn signal switch neutral position	Below 1 V
			Engine switch on (IG), turn signal switch turned to left	Alternating between below 1 and 11 to 14 V
E7-28 (B) - Body ground	L - Body ground	Turn signal L	Engine switch on (IG), turn signal switch neutral position	Below 1 V
			Engine switch on (IG), turn signal switch turned to right	Alternating between below 1 and 11 to 14 V
E8-3 (MSSL) - Body ground	L - Body ground	Spiral cable signal	Engine switch on (IG), steering pad switch signal DISP OFF	Below 1 V
			Engine switch on (IG), steering pad switch signal DISP ON	11 to 14 V
E8-4 (RSET) - Body ground*7	B - Body ground	Light control rheostat signal	Engine switch on (IG), light control rheostat trip switch off	Below 1 V
			Engine switch on (IG), light control rheostat trip switch on	11 to 14 V
E8-9 (L) - Body ground	Y - Body ground	Fuel sender gauge signal	Fuel F (full tank) → E (empty)	4.5 to 9 V
E8-10 (L) - Body ground*8	BR - Body ground	Fuel sender gauge signal	Fuel F (full tank) → E (empty)	4.5 to 9 V
E8-11 (S) - Body ground*9, *10	L - Body ground	Engine oil pressure warning signal	Engine oil pressure warning light illuminated → not illuminated	Alternating between below 1 and 11 to 14 V
E8-12 (CHK) - Body ground	R - Body ground	MIL input signal	Engine switch on (IG), MIL on	Below 3 V
			Engine switch on (IG), MIL off	11 to 14 V
E8-14 (S) - Body ground*10	G - Body ground	Fuel filter warning signal	Engine switch on (IG), clogging switch on	Alternating between below 1 and 11 to 14 V
E8-15 (FFTR) - Body ground*10	V - Body ground	Fuel filter warning signal	Engine switch on (IG), level warning switch on	Alternating between below 1 and 11 to 14 V
E8-16 (S) - Body ground*11	LG - Body ground	Engine oil pressure warning signal	Engine oil pressure warning light illuminated → not illuminated	Alternating between below 1 and 11 to 14 V
E8-17 (IG+) - Body ground*11	B - Body ground	Engine oil pressure warning signal	Engine oil pressure warning light illuminated → not illuminated	Alternating between below 1 and 11 to 14 V
E8-18 (ILL+) - Body ground*7	G - Body ground	Light control rheostat signal	Engine switch on (IG)	4.6 to 5.4 V
E8-19 (TR) - Body		Light control rheostat	Light control rheostat knob fully turned left	Below 1 V


ground*7	W - Body ground	knob input	Light control rheostat knob fully turned right	10 kΩ or higher
E8-20 (TC) - Body ground*7	B - Body ground	Light control rheostat signal	Engine switch on (IG), light control rheostat TAIL, cancel switch off	Below 1 V
			Engine switch on (IG), light control rheostat TAIL, cancel switch on	10 kΩ or higher
E8-21 (E) - Body ground	B - Body ground	Fuel sender gauge ground	Always	Below 1 Ω
E8-22 (FE) - Body ground*8	G - Body ground	Fuel sender gauge ground	Always	Below 1 Ω
E8-23 (E2) - Body ground*7	L - Body ground	Light control rheostat ground	Always	Below 1 V
E8-24 (E) - Body ground*11	W - Body ground	Oil pressure sensor ground	Always	Below 1 Ω

*1: for LHD
*2: for RHD
*3: for Automatic Transmission
*4: for Manual Transmission
*5: w/ Curtain Shield Airbag
*6: w/ Tire Carrier
*7: w/ Multi-information Display
*8: for Double Tank Type
*9: for 2UZ-FE
*10: for 1VD-FTV
*11: for 1GR-FE

CHECK COMBINATION METER INNER CIRCUIT

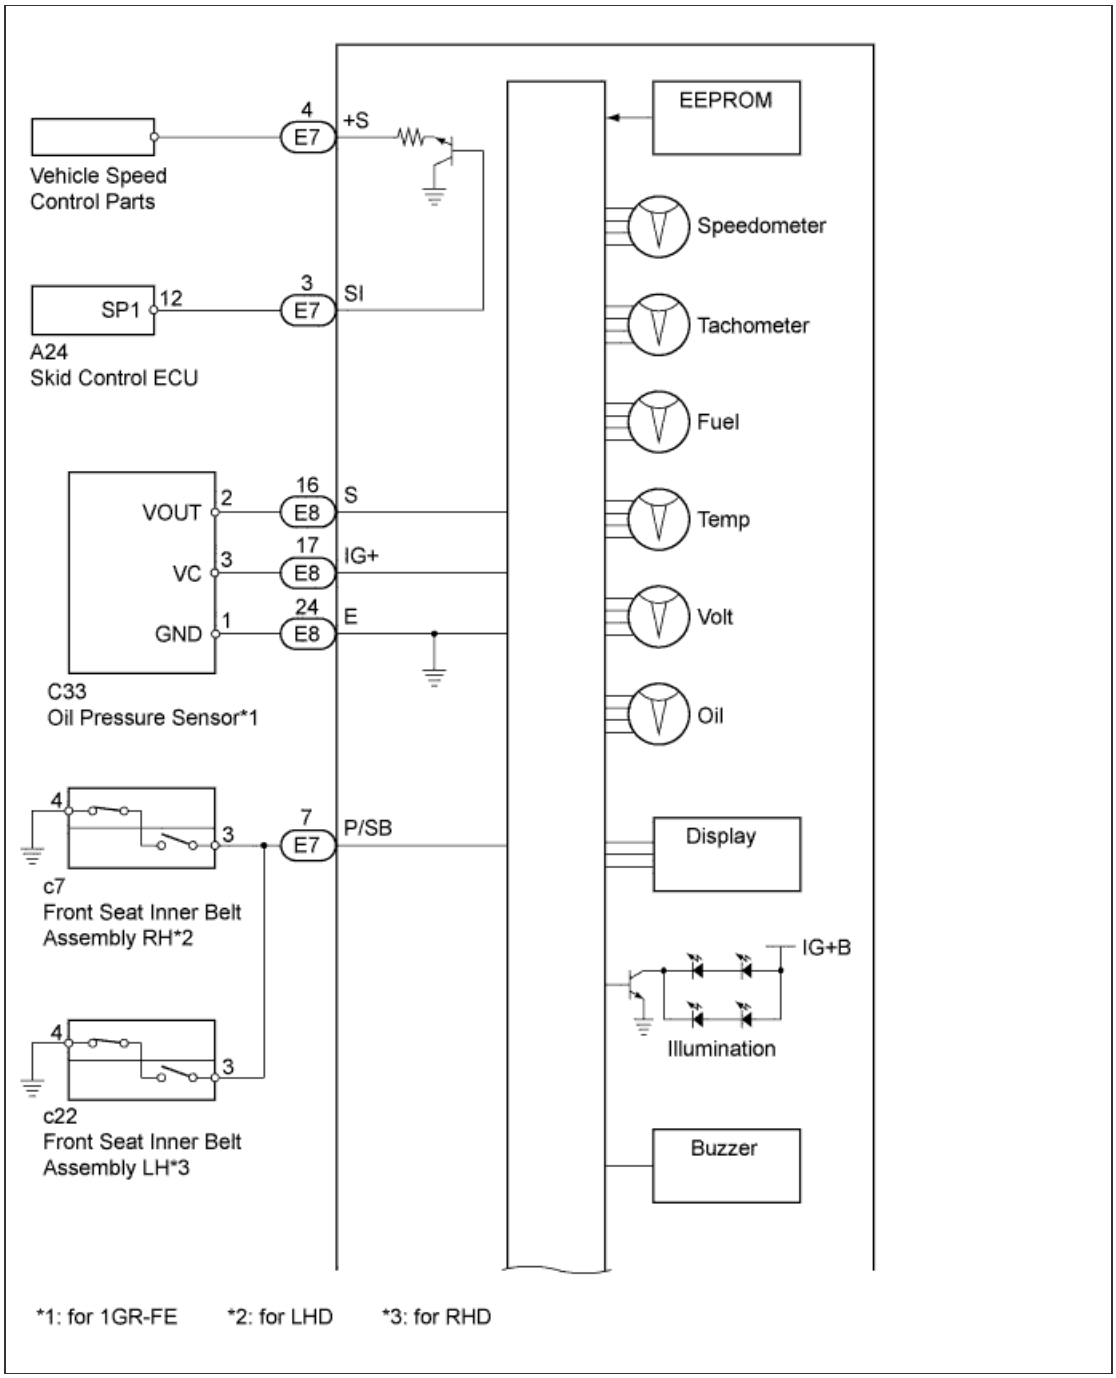

*1: for 1GR-FE *2: for LHD *3: for RHD

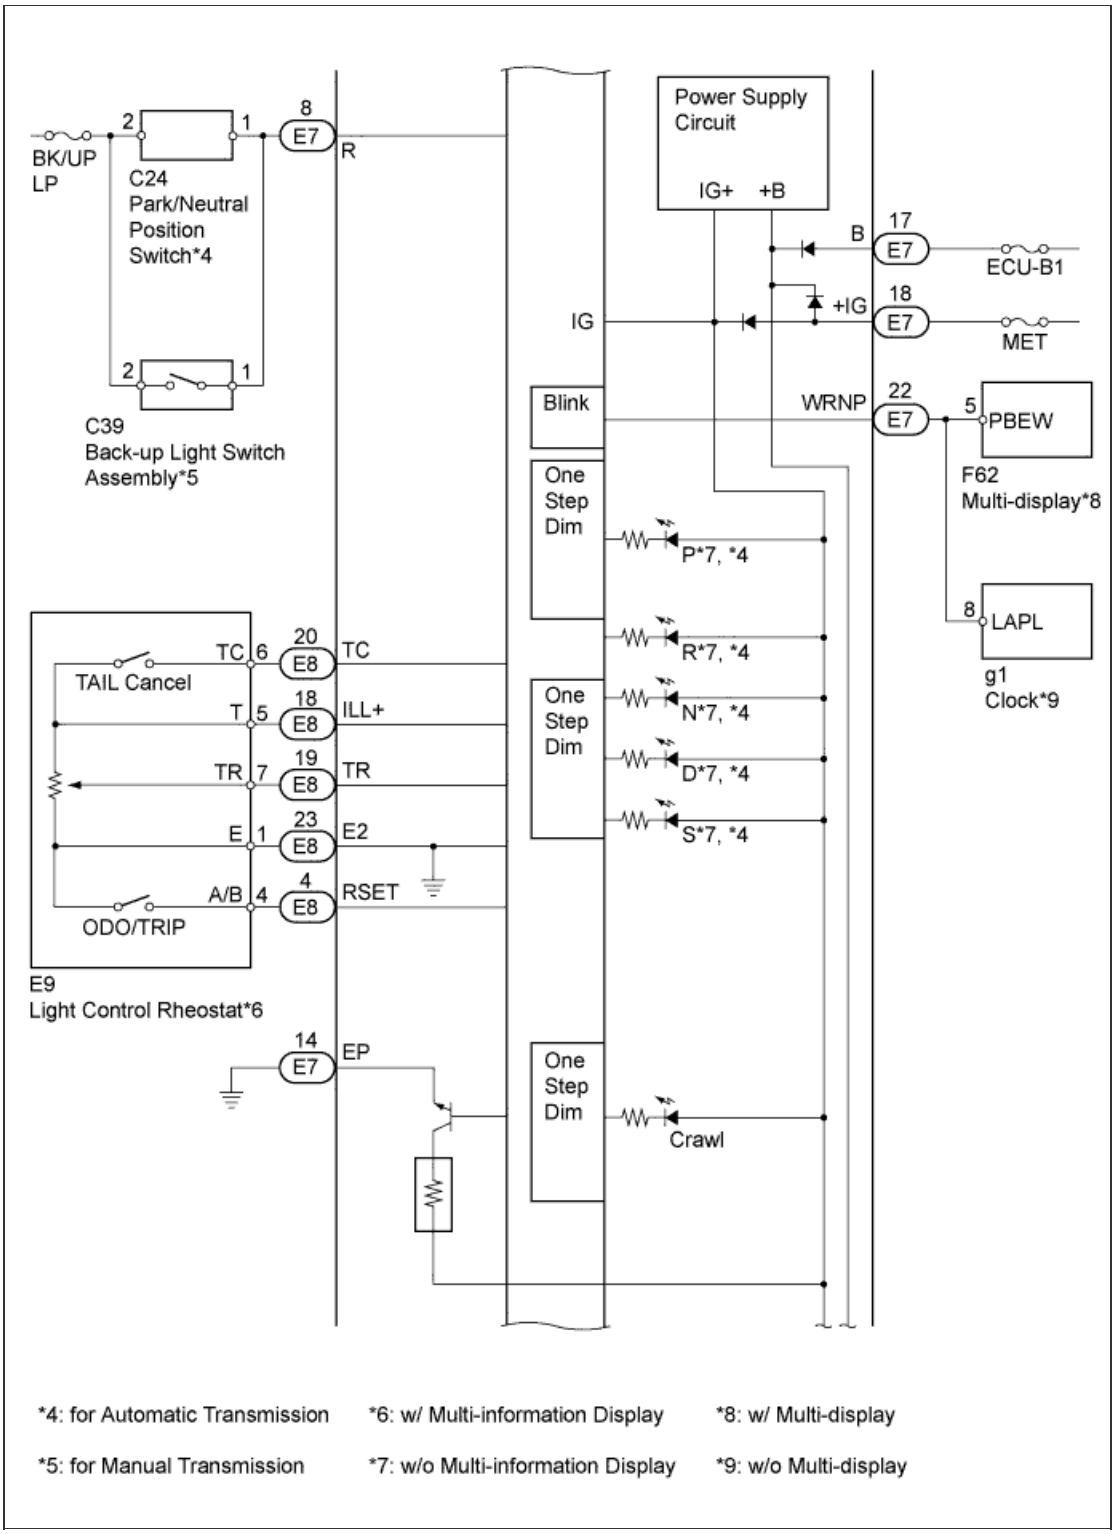

*4: for Automatic Transmission


*5: for Manual Transmission

*6: w/ Multi-information Display

*7: w/o Multi-information Display

*8: w/ Multi-display

*9: w/o Multi-display

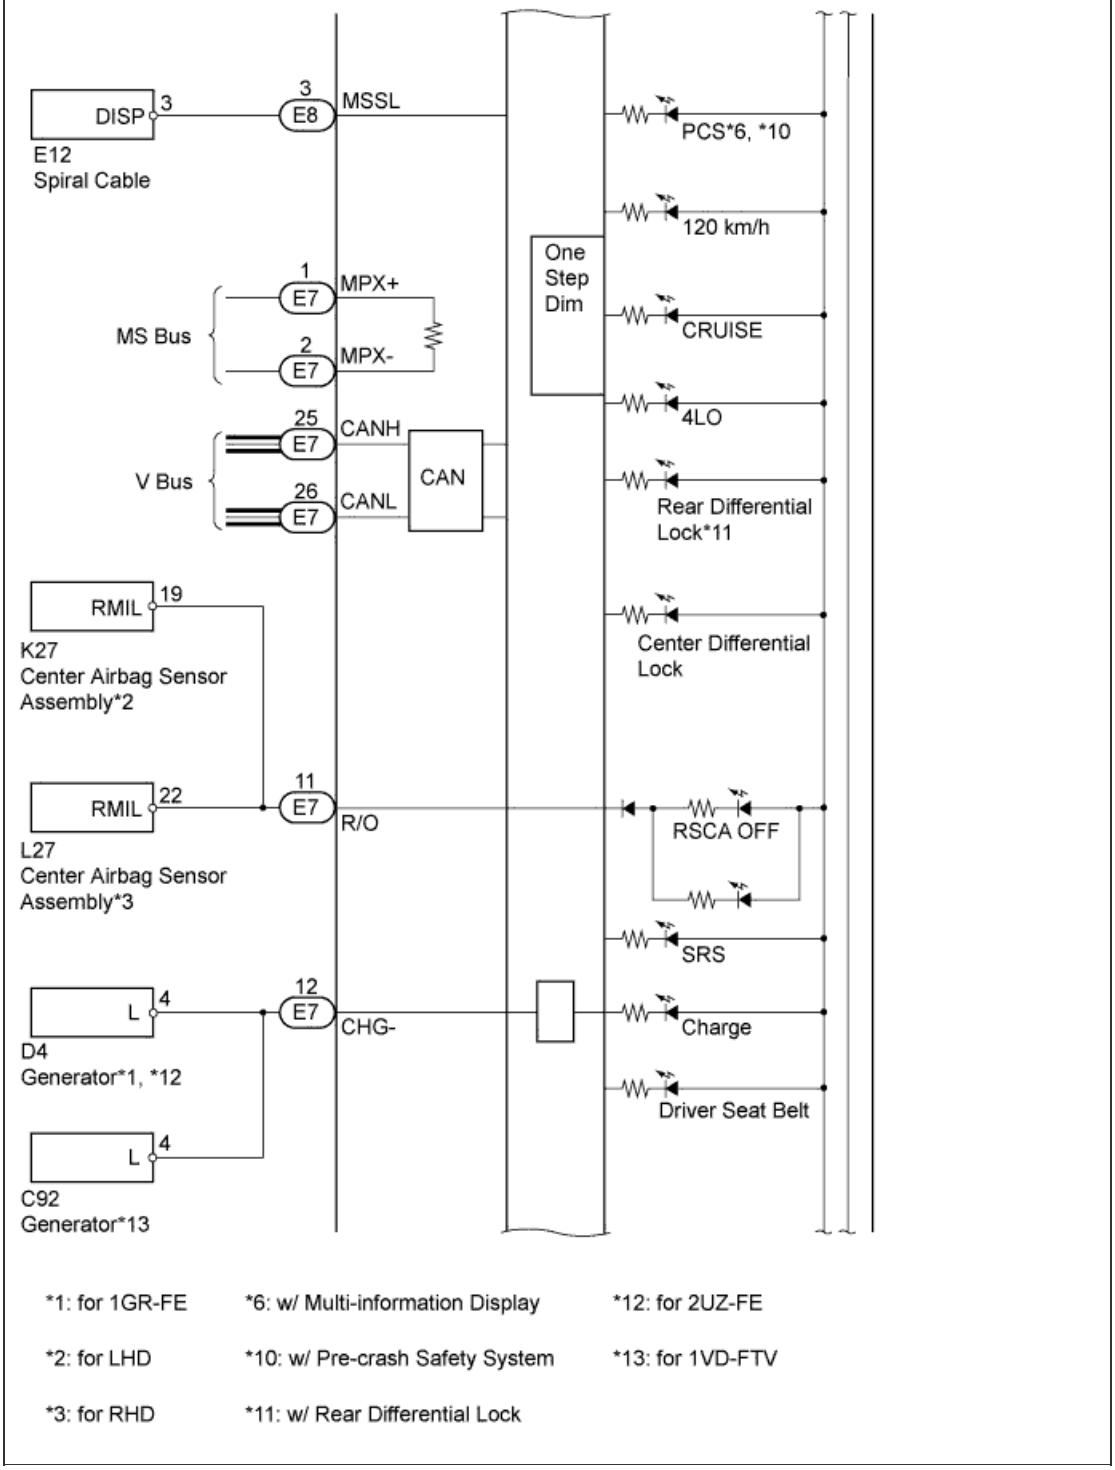

*1: for 1GR-FE

*2: for LHD

*3: for RHD


*6: w/ Multi-information Display

*10: w/ Pre-crash Safety System

*11: w/ Rear Differential Lock

*12: for 2UZ-FE

*13: for 1VD-FTV

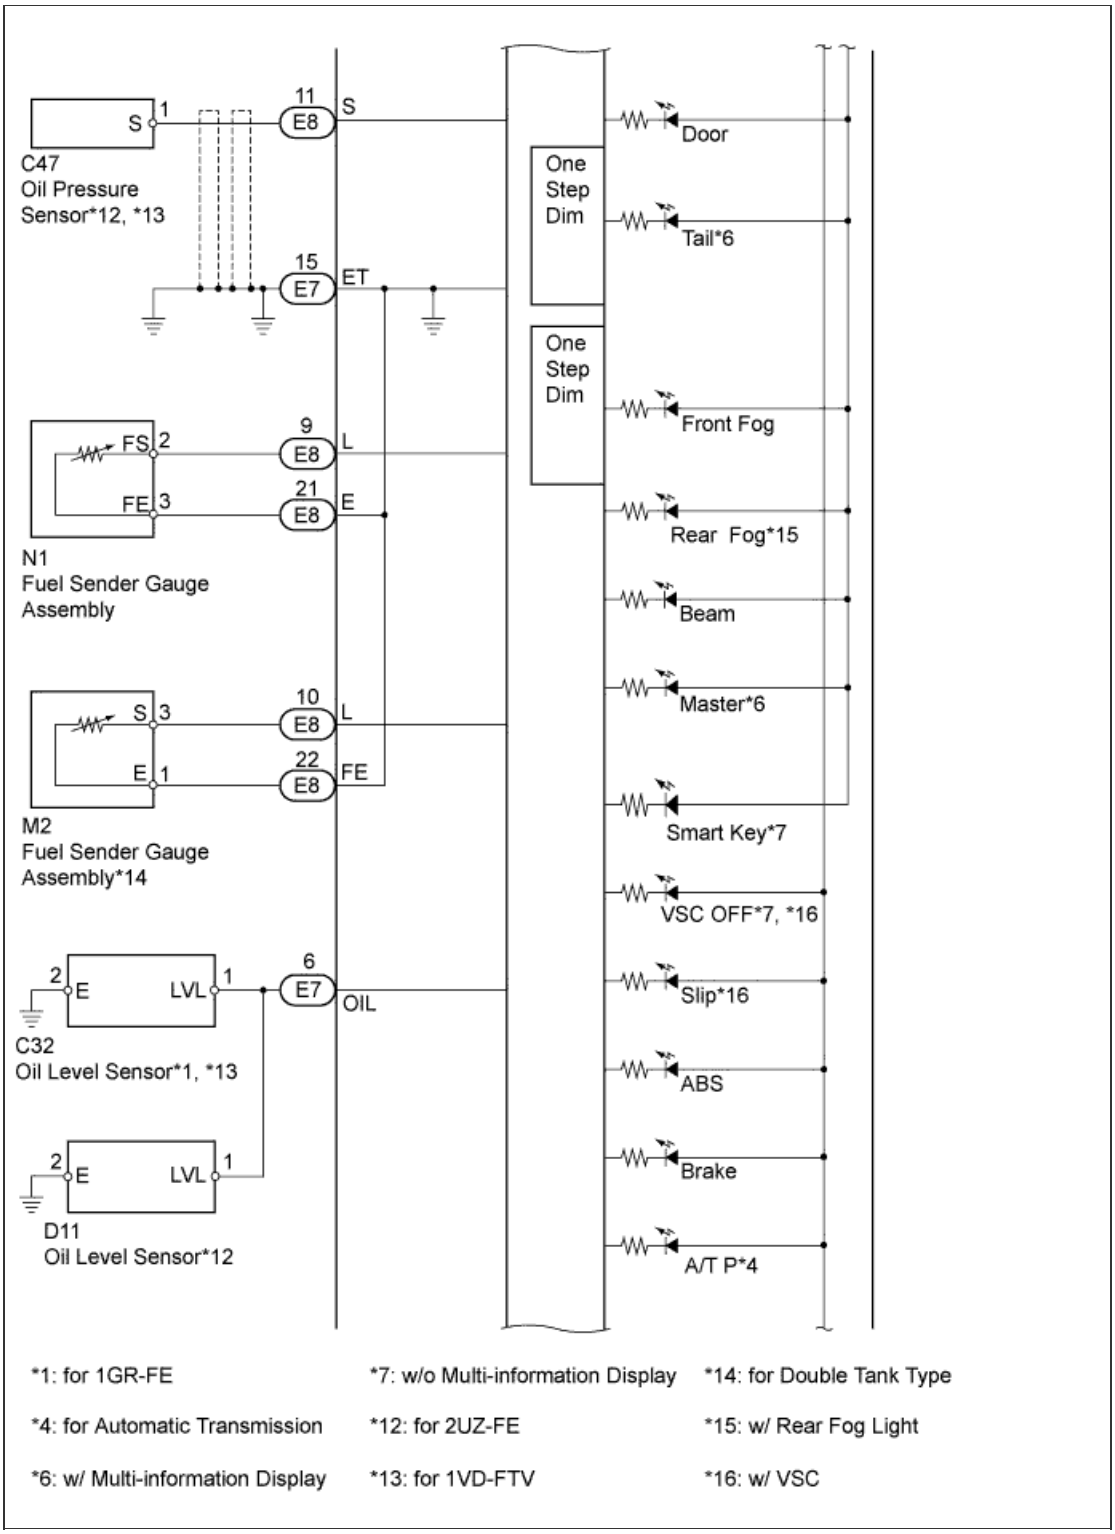

*1: for 1GR-FE

*4: for Automatic Transmission

*6: w/ Multi-information Display

*7: w/o Multi-information Display


*12: for 2UZ-FE

*13: for 1VD-FTV

*14: for Double Tank Type

*15: w/ Rear Fog Light

*16: w/ VSC

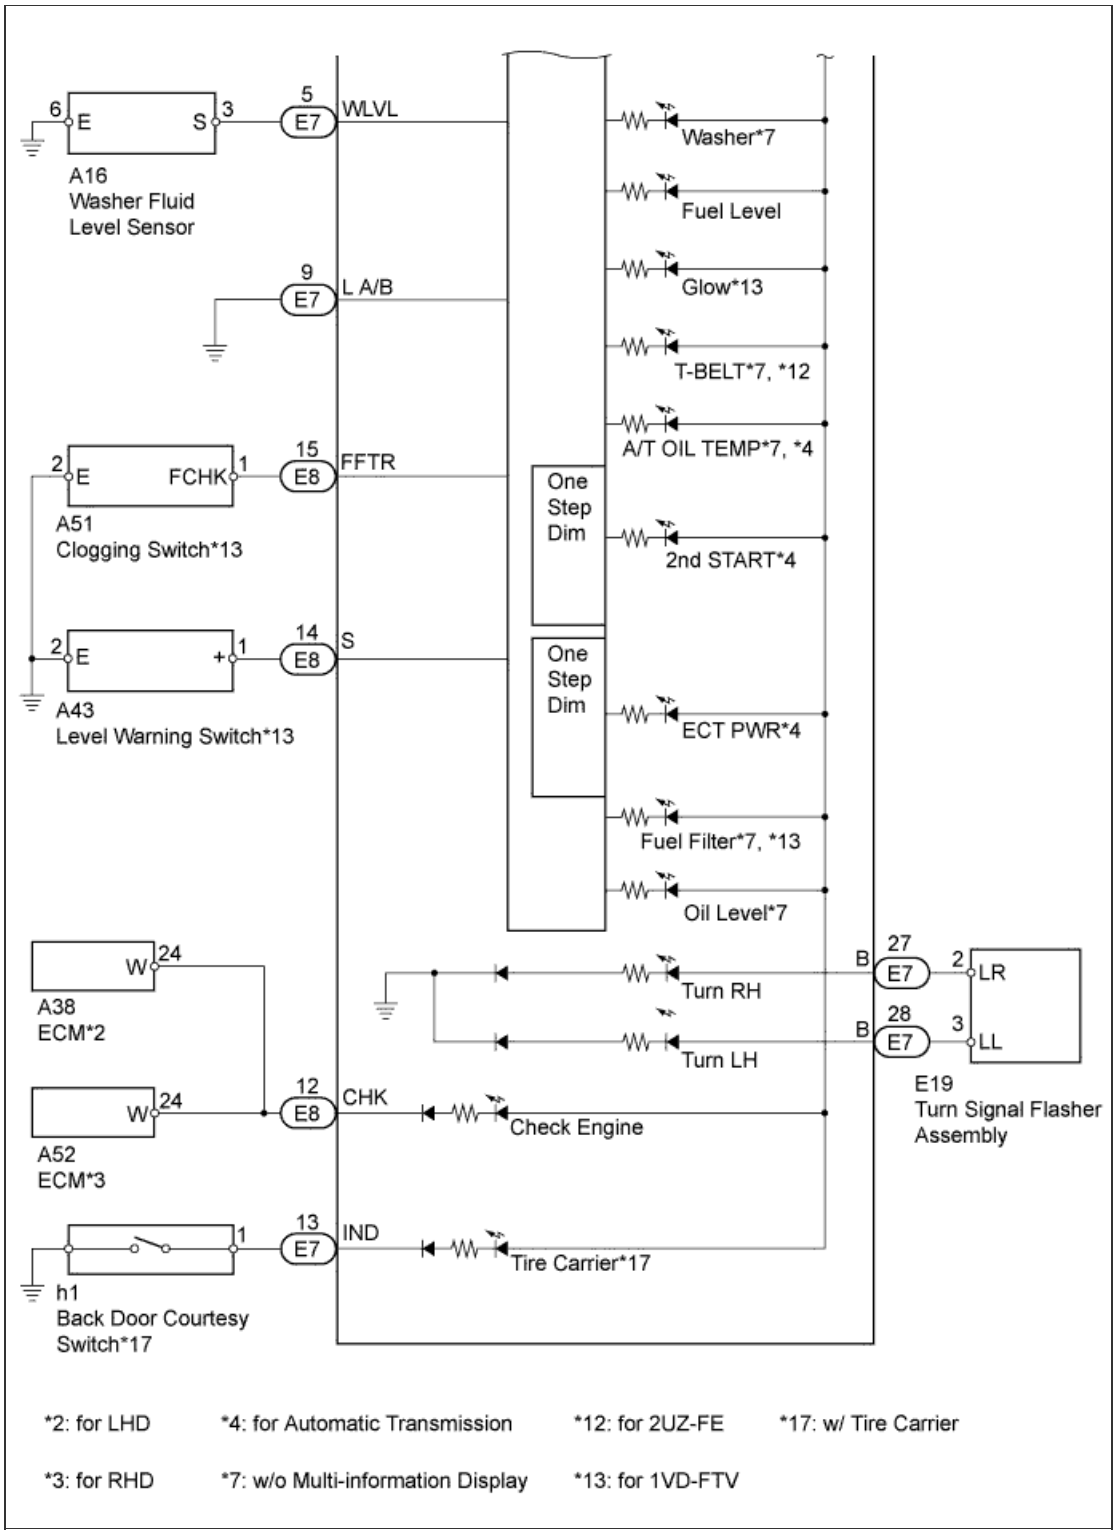


*2: for LHD *4: for Automatic Transmission *12: for 2UZ-FE *17: w/ Tire Carrier

*3: for RHD *7: w/o Multi-information Display *13: for 1VD-FTV

for Preparation Click here

CHECK COMBINATION METER

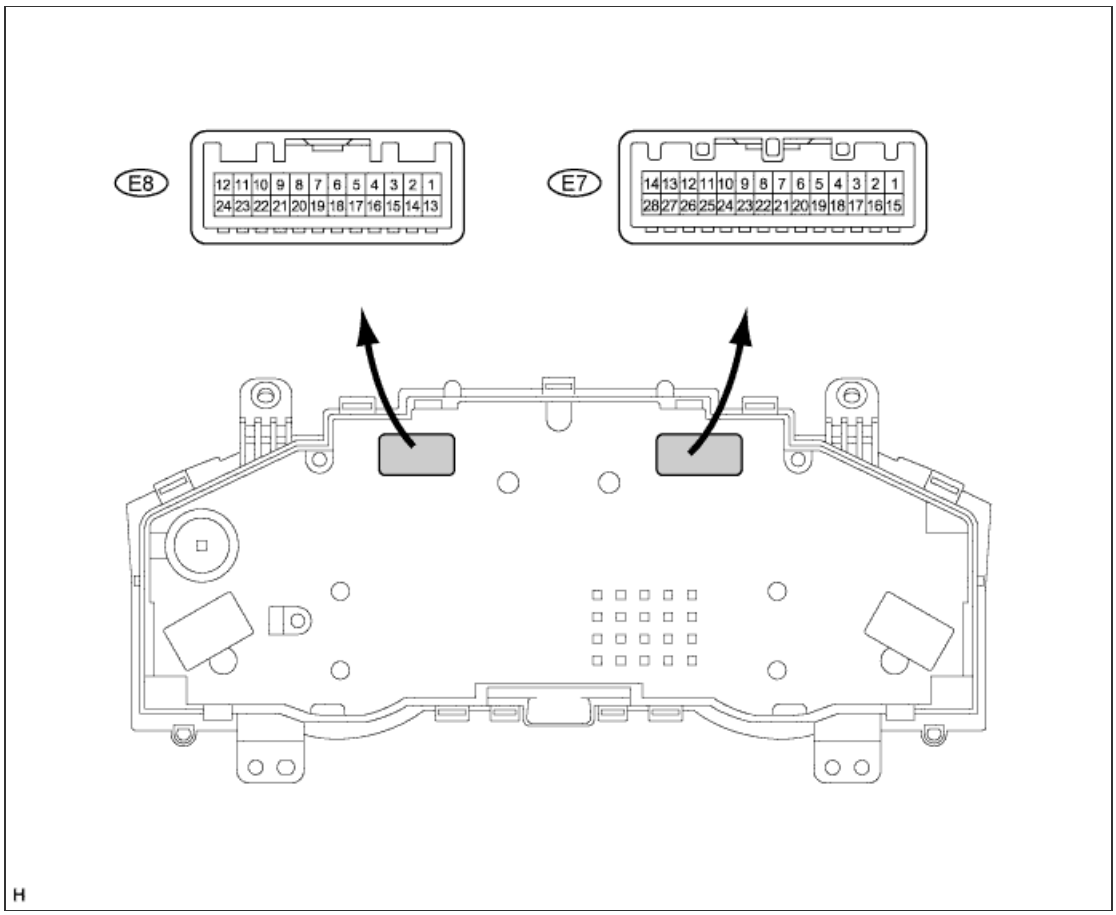

a. Measure the resistance and voltage according to the value(s) in the table below.


Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E7-3 (SI) - Body ground	V - Body ground	Speed signal (input)	Engine switch on (IG), wheel turned slowly	Pulse generation
E7-4 (+S) - Body ground	V - Body ground	Speed signal (output)	Engine switch on (IG), wheel turned slowly	Pulse generation
E7-5 (WLVL) - Body ground	V - Body ground	Washer level warning signal	Washer fluid level sensor ON	Below 1 V
			Washer fluid level sensor OFF	11 to 14 V
E7-6 (OIL) - Body ground 1	L - Body ground	Oil level signal	Oil level sensor ON	Below 1 V
			Oil level sensor OFF	11 to 14 V
E7-7 (P SB) - Body ground	B - Body ground	Seat belt warning signal	Engine switch on (IG), seat occupied, seat belt unfastened → fastened	Alternating between below 1 and 11 to 14 V
	G - Body ground 3			
E7-8 (R) - Body ground	L - Body ground	Park neutral signal 4	Park neutral switch on	11 to 14 V
		Reverse signal 5	Back-up light switch on	
E7-9 (L A B) - Body ground	GR - Body ground	Ground	Always	Below 1 V
E7-11 (R ϕ- Body ground	P - Body ground	RSCA OFF indicator light input signal	Engine switch on (IG), RSCA OFF indicator light on	Below 1 V
			Engine switch on (IG), RSCA OFF indicator light off	8 to 14 V
			Engine switch on (IG),	

E7-12 (CHG-) - Body ground	B - Body ground	CHARGE warning light	CHARGE warning light on	Below 1 V
			Engine switch on (IG), CHARGE warning light off	11 to 14 V
E7-13 (IND) - Body ground 7	R - Body ground	TIRE CARRIER warning light	Back door open	Below 1 V
			Back door closed	11 to 14 V
E7-14 (EP) - Body ground	W-B - Body ground	Ground	Always	Below 1 V
E7-15 (ET) - Body ground	BR - Body ground	Ground	Always	Below 1 V
E7-17 (B) - Body ground	R - Body ground	Power source	Always	11 to 14 V
E7-18 (IG+) - Body ground	B - Body ground	Engine switch signal	Engine switch off	Below 1 V
			Engine switch on (IG)	11 to 14 V
E7-22 (WRNP) - Body ground	Y - Body ground	Passenger seat belt warning light signal	Engine switch on (IG), passenger seat occupied, seat belt unfastened → fastened	Alternating between below 1 and 11 to 14 V
E7-27 (B) - Body ground	R - Body ground	Turn signal R	Engine switch on (IG), turn signal switch neutral position	Below 1 V
			Engine switch on (IG), turn signal switch turned to left	Alternating between below 1 and 11 to 14 V
E7-28 (B) - Body ground	L - Body ground	Turn signal L	Engine switch on (IG), turn signal switch neutral position	Below 1 V
			Engine switch on (IG), turn signal switch turned to right	Alternating between below 1 and 11 to 14 V
E8-3 (MSSL) - Body ground	L - Body ground	Spiral cable signal	Engine switch on (IG), steering pad switch signal DISP OFF	Below 1 V
			Engine switch on (IG), steering pad switch signal DISP ON	11 to 14 V
E8-4 (RSET) - Body ground	B - Body ground	Light control rheostat signal	Engine switch on (IG), light control rheostat trip switch off	Below 1 V
			Engine switch on (IG), light control rheostat trip switch on	11 to 14 V
E8-9 (L) - Body ground	Y - Body ground	Fuel sender gauge signal	Fuel F (full tank) → E (empty)	4.5 to 9 V
E8-10 (L) - Body ground	BR - Body ground	Fuel sender gauge signal	Fuel F (full tank) → E (empty)	4.5 to 9 V
E8-11 (S) - Body ground 10, 11, 13	L - Body ground	Engine oil pressure warning signal	Engine oil pressure warning light illuminated → not illuminated	Alternating between below 1 and 11 to 14 V
E8-12 (CHK) - Body ground	R - Body ground	MIL input signal	Engine switch on (IG), MIL on	Below 3 V
			Engine switch on (IG), MIL off	11 to 14 V
E8-14 (S) - Body ground 11	G - Body ground	Fuel filter warning signal	Engine switch on (IG), clogging switch on	Alternating between below 1 and 11 to 14 V
E8-15 (FFTR) - Body ground 11	V - Body ground	Fuel filter warning signal	Engine switch on (IG), level warning switch on	Alternating between below 1 and 11 to 14 V
E8-16 (S) - Body ground 12	LG - Body ground	Engine oil pressure warning signal	Engine oil pressure warning light illuminated → not illuminated	Alternating between below 1 and 11 to 14 V
E8-17 (IG+) - Body ground 12	B - Body ground	Engine oil pressure warning signal	Engine oil pressure warning light illuminated → not illuminated	Alternating between below 1 and 11 to 14 V
E8-18 (ILL+) - Body ground	G - Body ground	Light control rheostat signal	Engine switch on (IG)	4.6 to 5.4 V
E8-19 (TR) - Body		Light control rheostat	Light control rheostat knob fully turned left	Below 1 V


ground	W - Body ground	knob input	Light control rheostat knob fully turned right	10 kΩ or higher
E8-20 (TC) - Body ground	B - Body ground	Light control rheostat signal	Engine switch on (IG), light control rheostat TAIL, cancel switch off	Below 1 V
			Engine switch on (IG), light control rheostat TAIL, cancel switch on	10 kΩ or higher
E8-21 (E) - Body ground	B - Body ground	Fuel sender gauge ground	Always	Below 1 Ω
E8-22 (FE) - Body ground	G - Body ground	Fuel sender gauge ground	Always	Below 1 Ω
E8-23 (E2) - Body ground	L - Body ground	Light control rheostat ground	Always	Below 1 V
E8-24 (E) - Body ground 12	W - Body ground	Oil pressure sensor ground	Always	Below 1 Ω

1: e cept for 3 -FE
for LHD
3: for RHD
4: for Automatic Transmission
5: for Manual Transmission
w Curtain Shield Airbag
7: w Tire Carrier
w Multi-information Display
for Double Tank Type
10: for 2 -FE
11: for 1VD-FTV
12: for 1GR-FE
13: for 3 -FE

CHECK COMBINATION METER INNER CIRCUIT

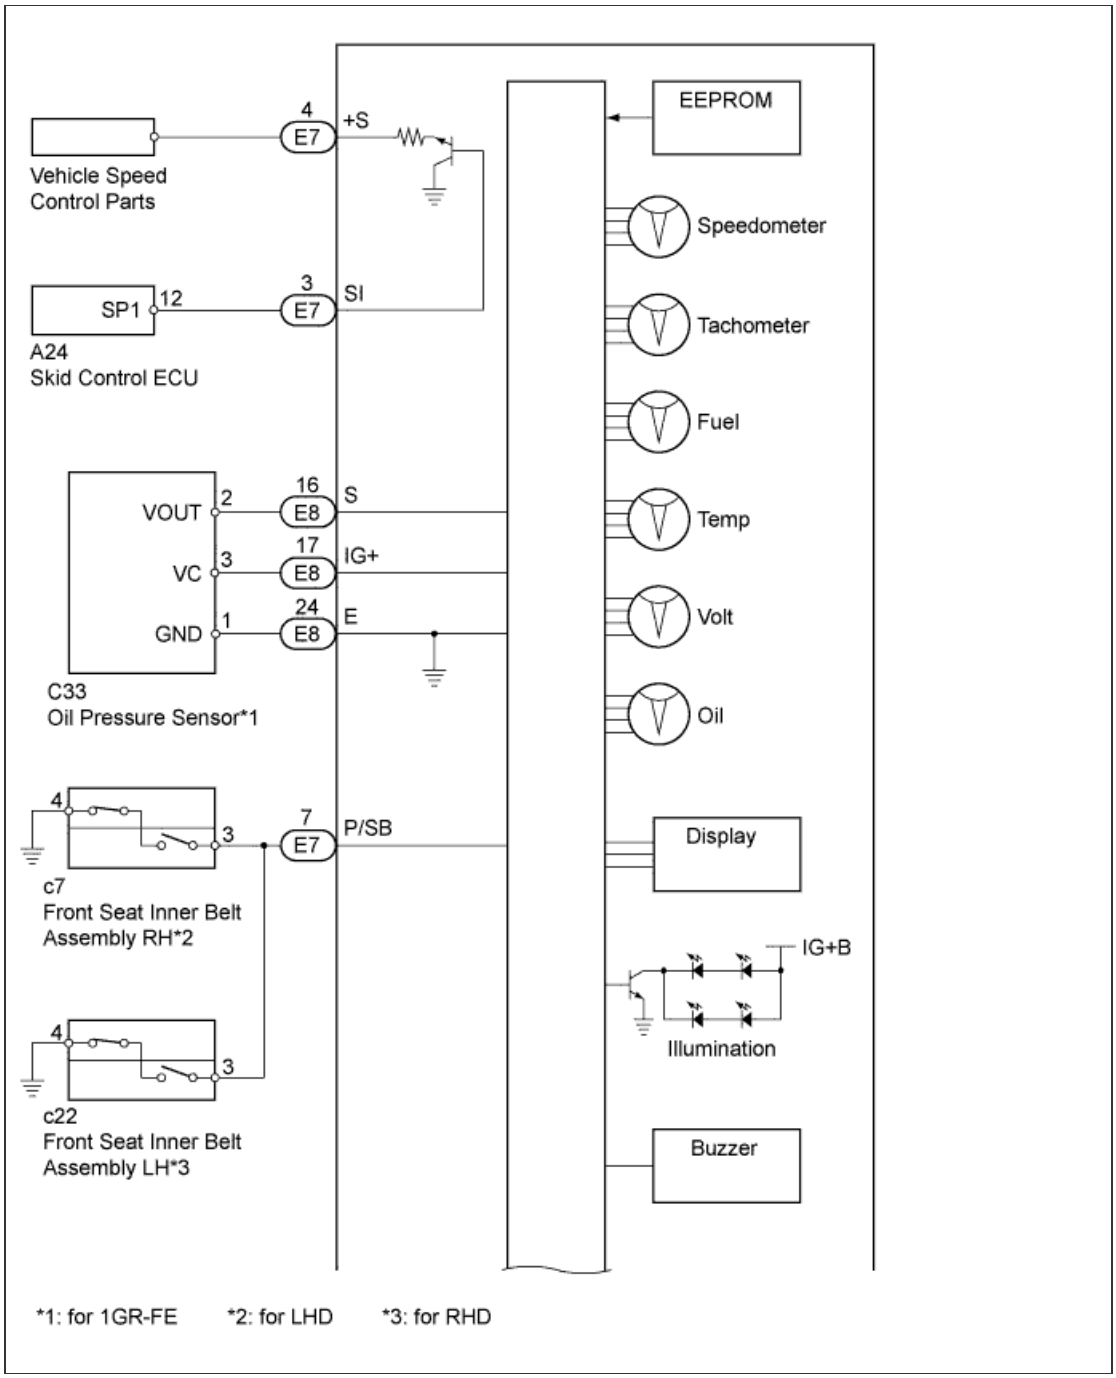

*1: for 1GR-FE *2: for LHD *3: for RHD

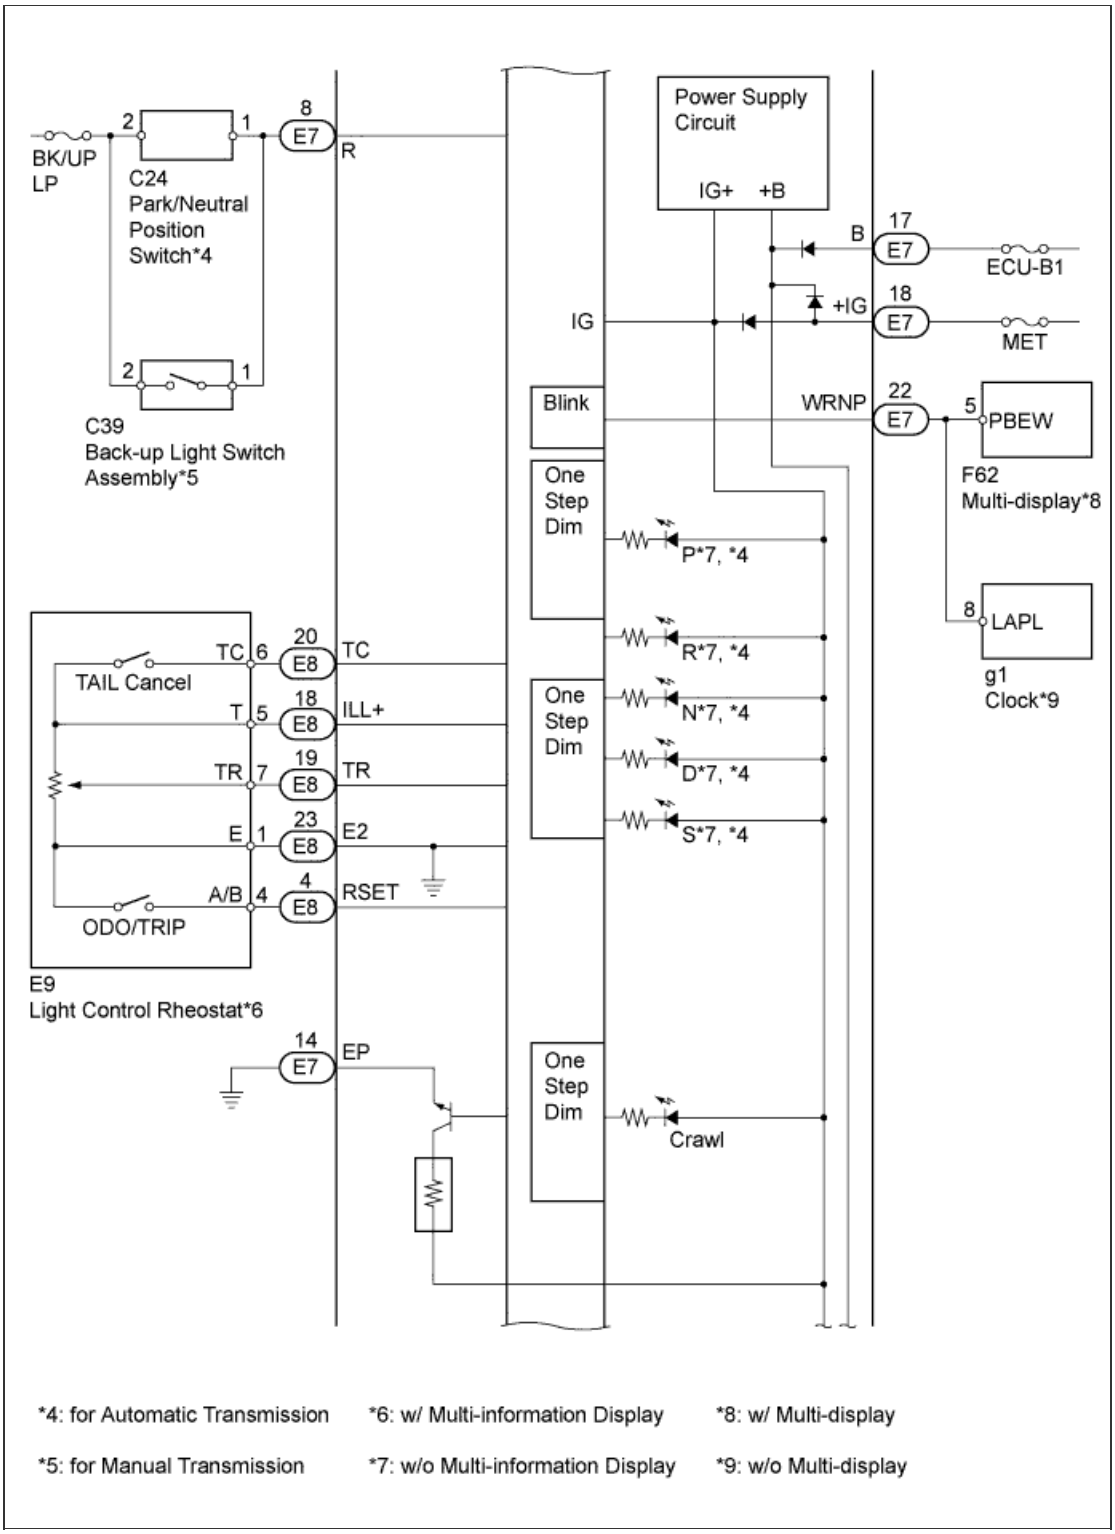

*4: for Automatic Transmission


*5: for Manual Transmission

*6: w/ Multi-information Display

*7: w/o Multi-information Display

*8: w/ Multi-display

*9: w/o Multi-display

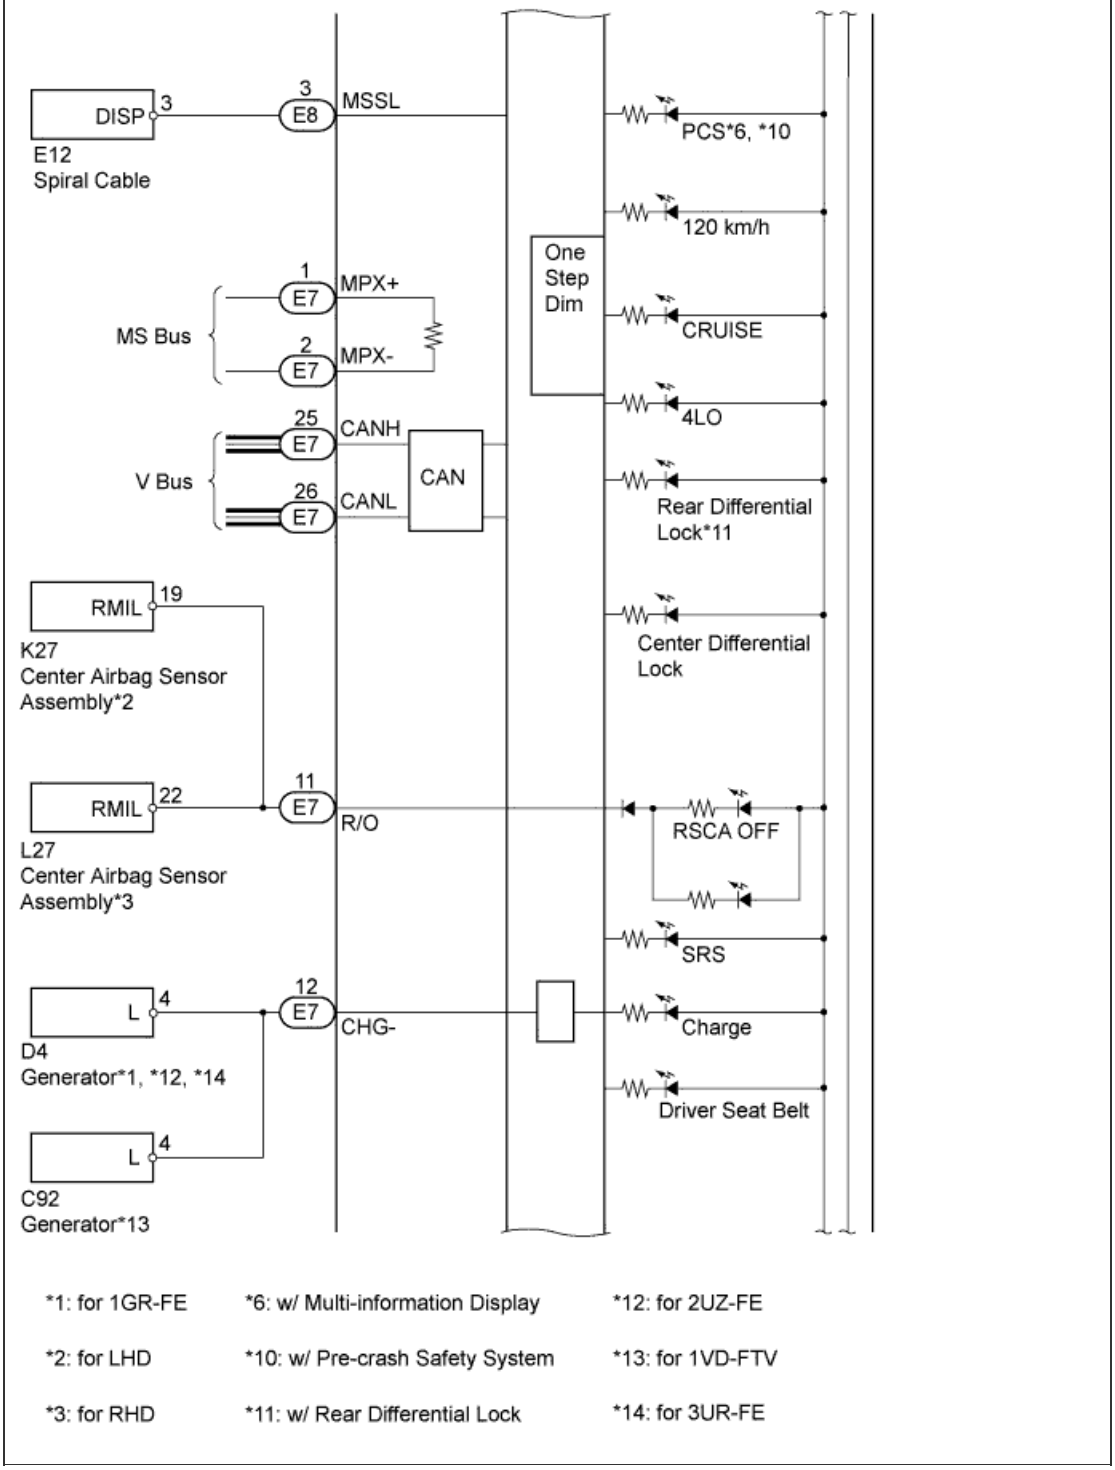

*1: for 1GR-FE

*2: for LHD

*3: for RHD

*6: w/ Multi-information Display


*10: w/ Pre-crash Safety System

*11: w/ Rear Differential Lock

*12: for 2UZ-FE

*13: for 1VD-FTV

*14: for 3UR-FE

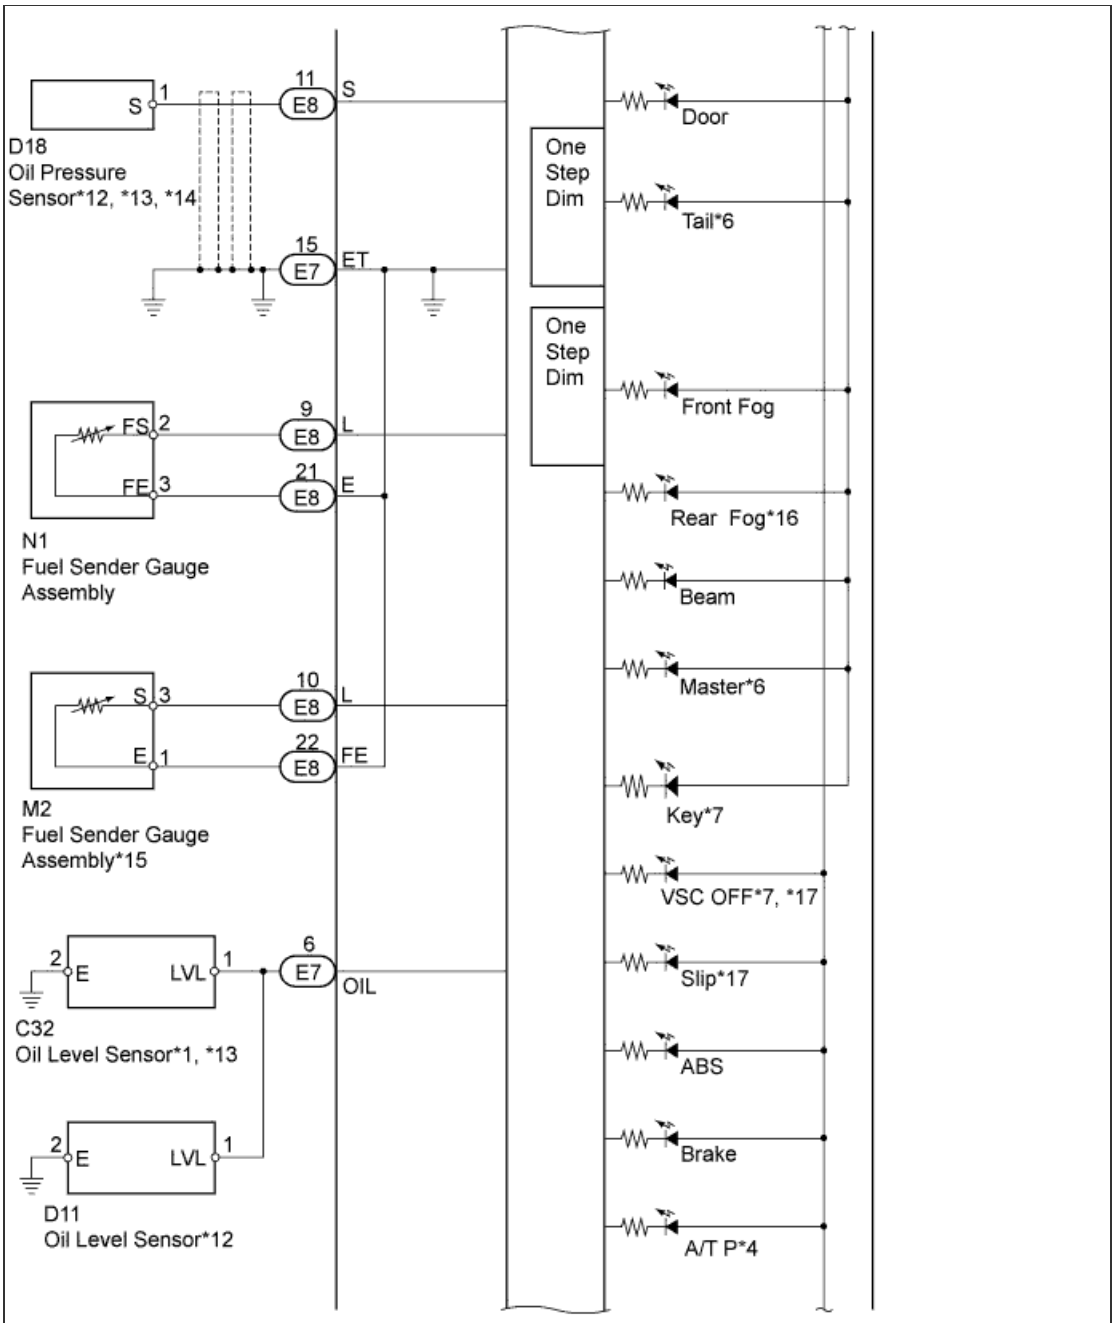

*1: for 1GR-FE

*4: for Automatic Transmission

*6: w/ Multi-information Display

*7: w/o Multi-information Display

*12: for 2UZ-FE


*13: for 1VD-FTV

*14: for 3UR-FE

*15: for Double Tank Type

*16: w/ Rear Fog Light

*17: w/ VSC

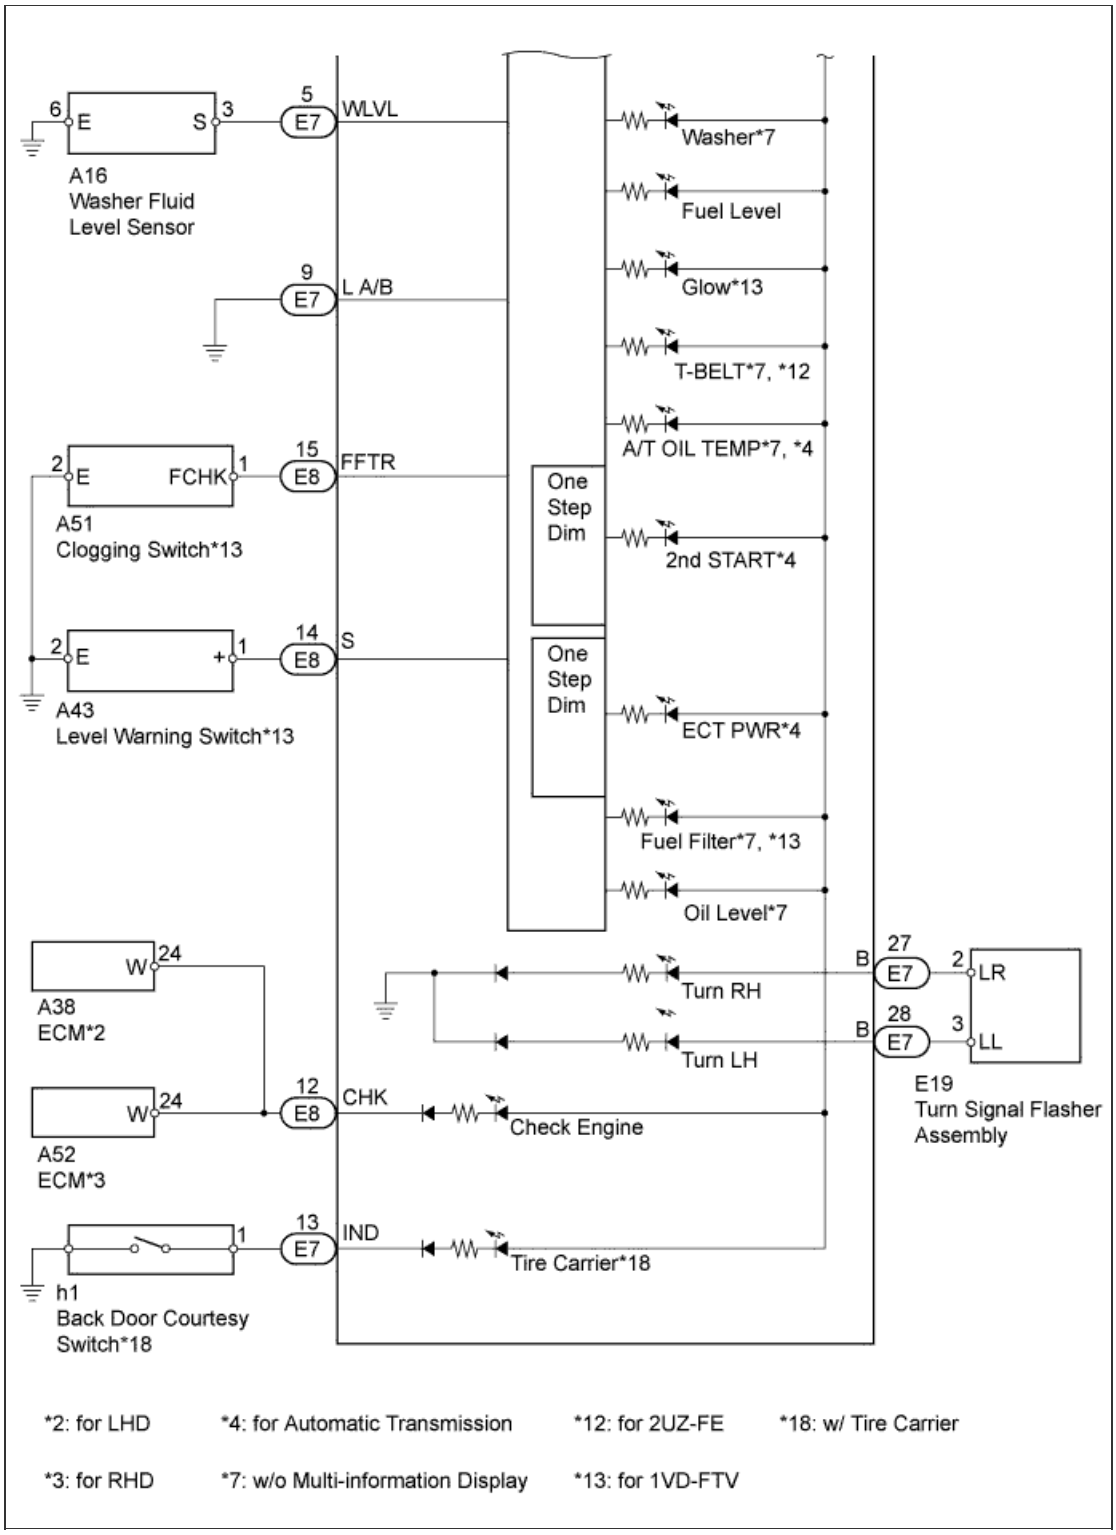

*2: for LHD *4: for Automatic Transmission *12: for 2UZ-FE *18: w/ Tire Carrier

*3: for RHD *7: w/o Multi-information Display *13: for 1VD-FTV

for Preparation Click here

CHECK DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body Electrical / (desired system) / Trouble Codes.

e. Read the DTCs.

CLEAR DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body Electrical / (desired system) / Trouble Codes.

e. Clear the DTCs.

for Preparation Click here

DATA LIST

HINT:

Using the intelligent tester to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body Electrical, Powertrain or Chassis / (desired system) / Data List.

e. According to the display on the intelligent tester, read the Data List.

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
ODO/TRIP Change SW	Trip switch (ODO/TRIP switch) condition/ON or OFF	ON: Trip switch (ODO/TRIP switch) pushed OFF: Trip switch (ODO/TRIP switch) not pushed	-
Tail Cancel SW	TAIL cancel switch condition/ON or OFF	ON: TAIL cancel switch on OFF: TAIL cancel switch off	-
Washer Switch	Washer switch/ON or OFF	ON: Washer switch on OFF: Washer switch off	-
P-Seatbelt Buckle SW	Front passenger side seat belt warning light request signal/ON or OFF	ON: Tongue plate (for front passenger side) inserted OFF: Tongue plate (for front passenger side) not inserted	-
Oil Level SW	Oil level switch/ON or OFF	ON: Oil level switch on OFF: Oil level switch off	-
Water Level SW	Water level switch/ON or OFF	ON: Water level switch on OFF: Water level switch off	-
Multi Display Select Switch	Steering multi-display select switch/ON or OFF	ON: Steering multi-display select switch ON OFF: Steering multi-display select switch OFF	-
Vehicle Speed Meter	Vehicle speed/Min.: 0 (0), Max.: 255 (158)	Almost same as actual vehicle speed (when driving)	Unit: km/h (mph)
Engine Rpm	Engine speed/Min.: 0, Max.: 12750	Idling: 700 to 800	Unit: rpm
Coolant Temperature	Engine coolant temperature/Min.: -40 (-40), Max.: 140 (284)	After warming up: 80 to 105 (176 to 221)	• Unit: °C (°F). • If the value is -40 (-40): The sensor circuit is open. • If the value is 140 (284): The sensor circuit is shorted.
Fuel Input	Fuel sender gauge input/Min.: 0, Max.: 127.5	Fuel sender input value	Unit: L
Rheostat value	Light control rheostat switch input/Min.: 0, Max.: 100	Light control rheostat switch is fully turned right (0) → fully turned left (100)	Unit: %
Communication ECM/Meter DTC 3	ECM communication stop history/Rec or Unrec	Rec: DTC is stored Unrec: DTC is not stored	-
ECM ODO (History 3)	ECM odometer history/Min.: 0, Max.: 999999	With history: 0 to 999999 Without history: ffffffh	-

Communication ECM/Meter DTC 2	ECM communication stop history/Rec or Unrec	Rec: DTC is stored Unrec: DTC is not stored	-
ECM ODO (History 2)	ECM odometer history/Min.: 0, Max.: 999999	With history: 0 to 999999 Without history: ffffffh	-
Communication ECM/Meter DTC 1	ECM communication stop history/Rec or Unrec	Rec: DTC is stored Unrec: DTC is not stored	-
ECM ODO (History 1)	ECM odometer history/Min.: 0, Max.: 999999	With history: 0 to 999999 Without history: ffffffh	-
Communication ABS/Meter DTC 3	Skid control ECU communication stop history/Rec or Unrec	Rec: DTC is stored Unrec: DTC is not stored	-
ABS/VSC ODO (History 3)	Skid control ECU odometer history/Min.: 0, Max.: 999999	With history: 0 to 999999 Without history: ffffffh	-
Communication ABS/Meter DTC 2	Skid control ECU communication stop history/Rec or Unrec	Rec: DTC is stored Unrec: DTC is not stored	-
ABS/VSC ODO (History 2)	Skid control ECU odometer history/Min.: 0, Max.: 999999	With history: 0 to 999999 Without history: ffffffh	-
Communication ABS/Meter DTC 1	Skid control ECU communication stop history/Rec or Unrec	Rec: DTC is stored Unrec: DTC is not stored	-
ABS/VSC ODO (History 1)	Skid control ECU odometer history/Min.: 0, Max.: 999999	With history: 0 to 999999 Without history: ffffffh	-
Units By Region	Unit of display setting/Km/l JP, Km/l, Ml/g US or Ml/g UK	Displays unit setting	-
Language	Language of display setting/English, Spanish, French*, German* or Italian*	Displays language setting	-
Driver Side Seatbelt Warning Buzzer	Front driver side seat belt warning buzzer setting/ON or OFF	ON: Front driver side seat belt warning buzzer ON setting OFF: Front driver side seat belt warning buzzer OFF setting	-
P-Seatbelt Warning Buzzer	Front passenger side seat belt warning buzzer setting/ON or OFF	ON: Front passenger side seat belt warning buzzer ON setting OFF: Front passenger side seat belt warning buzzer OFF setting	-
Sub Fuel Input	Fuel sender gauge input/Min.: 0, Max.: 127.5	Fuel sender input value	Unit: L
Integrated value for Oil Maintenance	Oil maintenance warning integrated value/Min.: 0 (0), Max.: 25500 (41037)	0 (0) to 25500 (41037)	Unit: mile
Integrated value for Timing belt	T-belt indicator integrated value/Min.: 0, Max.: 6553500	0 to 6553500	Unit: km/h
+B Voltage Value	+B voltage/Min.: 0, Max.: 25.5	Below 1 to 14	Unit: V
Coolant Temperature	Engine coolant temperature/Min.: -40 (-40), Max.: 140 (284)	After warming up: 80 to 105 (176 to 221)	• Unit: °C(°F) • If the value is -40 (-40): The sensor circuit is open. • If the value is 140 (284): The sensor circuit is shorted.

Engine

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Engine Rpm	Engine speed/Min.: 0, Max.: 16383.75	Idling: 700 to 800	Unit: rpm
Vehicle Speed Meter	Vehicle speed/Min.: 0 (0), Max.: 255 (158)	Actual vehicle speed	• Unit: km/h (mph) • The speed is indicated on the speedometer.
Coolant Temperature*1, *2	Engine coolant temperature: Min.: -40°C, Max.: 140°C	80 to 100°C (176 to 212): After warming up	• If the value is -40°C (-40°F), The sensor circuit is open. • If the value is 140°C (284°F) or higher, The sensor circuit is shorted.
Coolant Temperature*3	Engine coolant temperature/ Min.: -40°C, Max.: 140°C	After warming up engine: 75 to 90°C (167 to 194°F)	• If the value is -40°C (-40°F) or 140°C (284°F), the sensor circuit is open or shorted. • After a long soak, the coolant temperature, intake air temperature, and ambient air temperature are approximately equal.

HINT:

*1: for 1GR-FE

*2: for 2UZ-FE

*3: for 1VD-FTV

ACTIVE TEST

HINT:

Using the intelligent tester to perform Active Tests allows relays, VSVs, actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. Performing Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body Electrical / (Combination Meter) / Active Test.

e. According to the display on the intelligent tester, perform the Active Test.

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
Speed Meter Operation*1	Speedometer	0, 40, 80, 120, 160, 200, 240 or 280	Perform the test with the vehicle stopped and engine idling.
Tachometer operation	Tachometer	0, 1000, 2000, 3000, 4000, 5000, 6000 or 7000	Perform the test with the vehicle stopped and engine idling.
Fuel Meter Operation	Fuel receiver gauge	EMPTY, 1/4, FULL	Perform the test with the vehicle stopped and engine idling.
Volt Meter Operation	Voltmeter	0, 3, 6, 9, 12, 15 or 18	Perform the test with the vehicle stopped and engine idling.
Oil Pressure Meter Operation	Oil pressure receiver gauge	LOW, 1/4, 1/2, 3/4 or HIGH	Perform the test with the vehicle stopped and engine idling.
A/T Indicator operation (1)	A/T indicator (normal mode)	P, R, N, D, 4, 3, 2, L	Perform the test with the vehicle stopped and engine idling.
A/T Indicator operation (2)	A/T indicator (sequential mode)	Es, 5 or 6	Perform the test with the vehicle stopped and engine idling.
Meter Display 1*2	All dots in the multi-information display	ALL, 0, 1, 2, 3, 4, 5 or 6	Perform the test with the vehicle stopped and engine idling.
Meter Display 2*2	All dots in the multi-information display	7, 8 or 9	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Beam	BEAM indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Head	HEAD indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Tail	TAIL indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Fr FOG	FRONT FOG indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Airbag	SRS warning light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Precrash	PCS indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Driver Side Seat Belt	Driver side seat belt warning light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Front Passenger Side Seat Belt	Passenger side seat belt warning light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Doors All Open	All doors open light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Washer	Multi-information display	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Fuel	Low fuel warning light	ON or OFF	Perform the test with the vehicle stopped and engine idling.

Indicat. Lamp Charge	CHARGE warning light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp ABS	ABS warning light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Slip	SLIP indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Brake	Brake warning light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp oil Level	Multi-information display	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp ECT PWR	ECT PWR indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
A/T Oil Temperature Operation	Multi-information display	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Cruise	CRUISE main indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. KEY	Multi-information display	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Master Warning	Master warning light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Clearance Sonar LCD	Multi-information display	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. INTUITIVE P/A LCD	Multi-information display	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp VSC OFF	Multi-information display	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. 2nd START	2nd START indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Ctr DIFF LOCK	Center differential lock indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. 4LO	4LO indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. CRAWL	CRAWL indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. A/T P	A/T P indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Water Temperature Meter Operation	Engine coolant temperature receiver gauge	LOW, NORMAL or HIGH	Perform the test with the vehicle stopped and engine idling.
Indicat. GLOW	Glow indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Lamp Water Level	Fuel filter and sedimenter indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Timing Belt	T-belt indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.
Indicat. Over Speed	Speed limit indicator light	ON or OFF	Perform the test with the vehicle stopped and engine idling.

HINT:

*1:

- **The doors will be locked automatically when performing the speedometer Active Test. This is a normal function.**
- **The displayed value has the same units (km/h, mph) as the main scale of the vehicle speedometer.**
- **The needle position should be within the acceptable range.**

*2: If this Active Test is being performed and the engine switch is turned off and then on (IG), the A/T and ODO/TRIP display background may turn white. If this occurs, end this Active Test and turn the engine switch off.

Main Body

Tester Display	Test Part	Control Range	Diagnostic Note
Dimmer Signal	Illumination dimming operation	ON or OFF	-

for Preparation Click here

HINT:

If a trouble coded is displayed during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Meter/gauge System

DTC Code	Detection Item	Trouble Area	See page
U0100	Lost Communication with ECM / PCM "A"	- CAN communication system	Click here
U0129	Lost Communication with Brake System Control Module	- CAN communication system	Click here
B1500	Fuel Sender Open Detected	- Harness or connector - Combination meter assembly - Fuel sender gauge assembly	Click here
B1501	Sub Fuel Sender Open Detected	- Harness or connector - Combination meter assembly - Fuel sender gauge assembly	Click here

for Preparation Click here

HINT:

If a trouble coded is displayed during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Meter/gauge System

DTC Code	Detection Item	Trouble Area	See page
U0100	Lost Communication with ECM / PCM "A"	- CAN communication system	Click here
U0129	Lost Communication with Brake System Control Module	- CAN communication system	Click here
B1500	Fuel Sender Open Detected	- Harness or connector - Combination meter assembly - Fuel sender gauge assembly	Click here
B1501	Sub Fuel Sender Open Detected	- Harness or connector - Combination meter assembly - Fuel sender gauge assembly	Click here

for Preparation Click here

Meter/gauge System

DTC Code	Detection Item	Trouble Area	See page
U0100	Lost Communication with ECM / PCM "A"	- CAN communication system	Click here
U0129	Lost Communication with Brake System Control Module	- CAN communication system	Click here
B1500	Fuel Sender Open Detected	- Harness or connector - Combination meter assembly - Fuel sender gauge assembly	Click here
B1501	Sub Fuel Sender Open Detected	- Harness or connector - Combination meter assembly - Fuel sender gauge assembly	Click here

DTC B1500 Fuel Sender Open Detected


for Preparation Click here

DESCRIPTION

This DTC is output when the combination meter detects a fuel sender gauge malfunction via the CAN.

DTC Code	DTC Detection Condition	Trouble Area
B1500	When the combination meter detects a fuel sender gauge malfunction.	• Harness or connector • Combination meter assembly • Fuel suction with pump and gauge tube assembly • Fuel sender gauge assembly

WIRING DIAGRAM

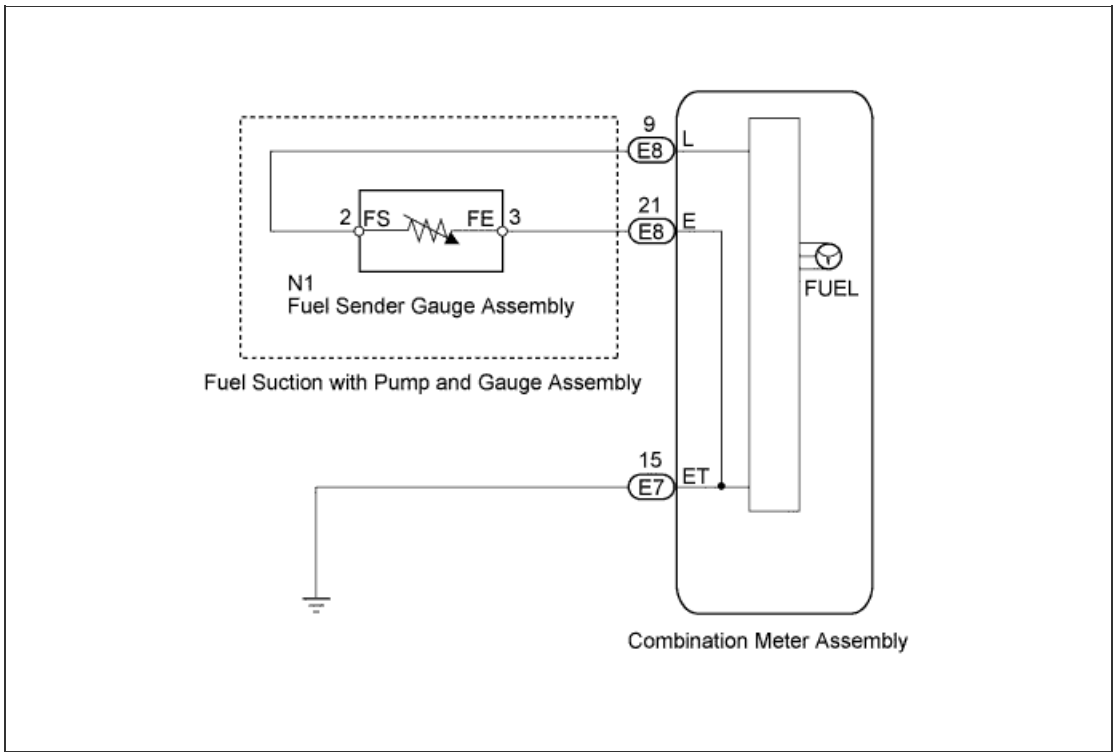

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FUEL SENDER GAUGE)

a. Operate the intelligent tester according to the display and select the Data List (Click here).

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Fuel Input	Fuel sender gauge (main) input signal/Min.: 0, Max.: 127.5	Fuel sender input value	Unit: L

OK:

Fuel value displayed on the intelligent tester is almost the same as needle indication.

Result


Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

B	REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

2.CHECK HARNESS AND CONNECTOR (COMBINATION METER - FUEL SENDER GAUGE AND BODY GROUND)

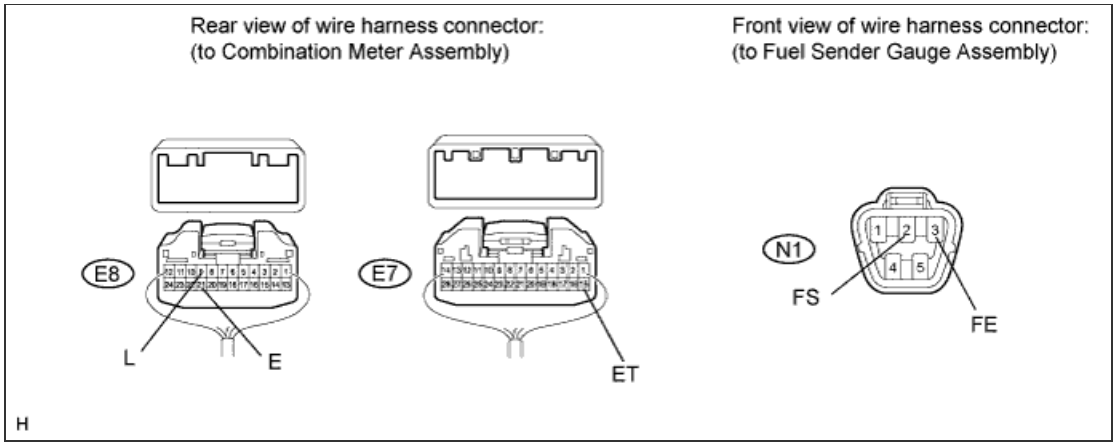

a. Disconnect the 7 and meter connectors.

b. Disconnect the N1 gauge connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance

Tester Connection	Condition	Specified Condition
E8-9 (L) - N1-2 (FS)	Always	Below 1 Ω
E8-21 (E) - N1-3 (FE)		
E7-15 (ET) - Body ground		
E8-9 (L) or N1-2 (FS) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY

a. for 1GR-FE:
Remove the fuel sender gauge (Click here).

b. for 2UZ-FE:
Remove the fuel sender gauge (Click here).

c. for 1VD-DTV:
Remove the fuel sender gauge (Click here).


d. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
2 (FS) - 2 (FS)	Always	Below 1 Ω
3 (FE) - 1 (FE)		

Result


Result	Proceed to
OK	A
NG (for 1GR-FE)	B
NG (for 2UZ-FE)	C
NG (for 1VD-DTV)	D

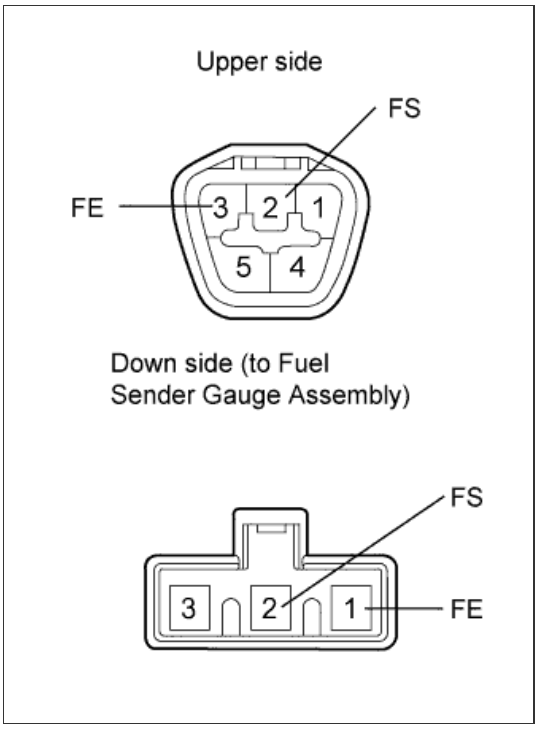

B	REPLACE FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY (Click here)
C	REPLACE FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY (Click here)
D	REPLACE FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY (Click here)

A

4.INSPECT FUEL SENDER GAUGE ASSEMBLY

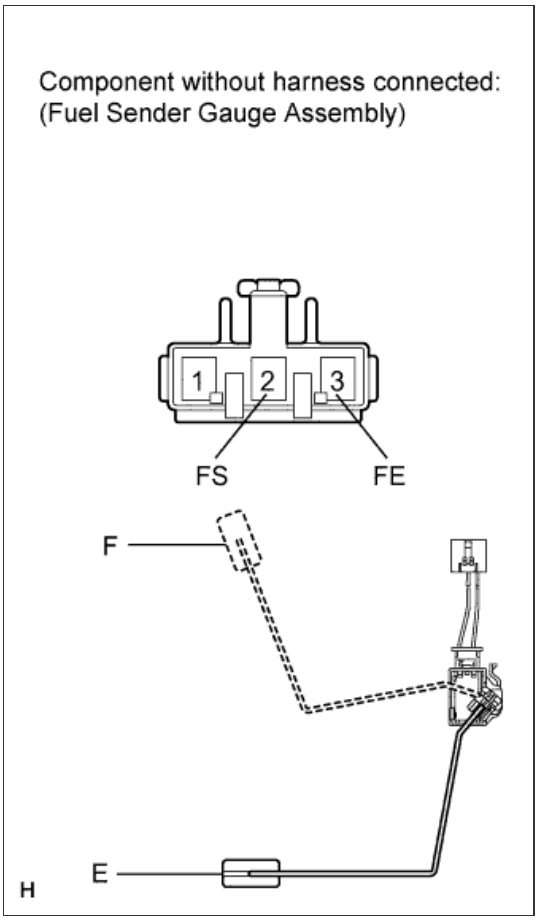

a. for 1GR-FE:
Remove the fuel sender gauge (Click here).

b. for 2UZ-FE:
Remove the fuel sender gauge (Click here).

c. for 1VD-DTV:
Remove the fuel sender gauge (Click here).

d. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
2 (FS) - 3 (FE)	Float level is F (upper)	12 to 18 Ω
	Float level is E (lower)	405 to 415 Ω

Result

Result	Proceed to
NG (for 1GR-FE)	A
NG (for 2UZ-FE)	B
NG (for 1VD-DTV)	C
OK (w/ Multi-information Display)	D
OK (w/o Multi-information Display)	E

B → REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

C → REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

D → REPLACE COMBINATION METER ASSEMBLY (Click here)

E → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

DTC B1501 Sub Fuel Sender Open Detected

for Preparation Click here

DESCRIPTION


HINT:

Trouble code B1501 is only output for double tank equipped vehicles

This DTC is stored when the combination meter detects a fuel sender gauge malfunction via the CAN.

DTC Code	DTC Detection Condition	Trouble Area
B1501	When the combination meter detects a fuel sender gauge malfunction.	• Harness or connector • Combination meter assembly • Fuel sender gauge assembly

WIRING DIAGRAM

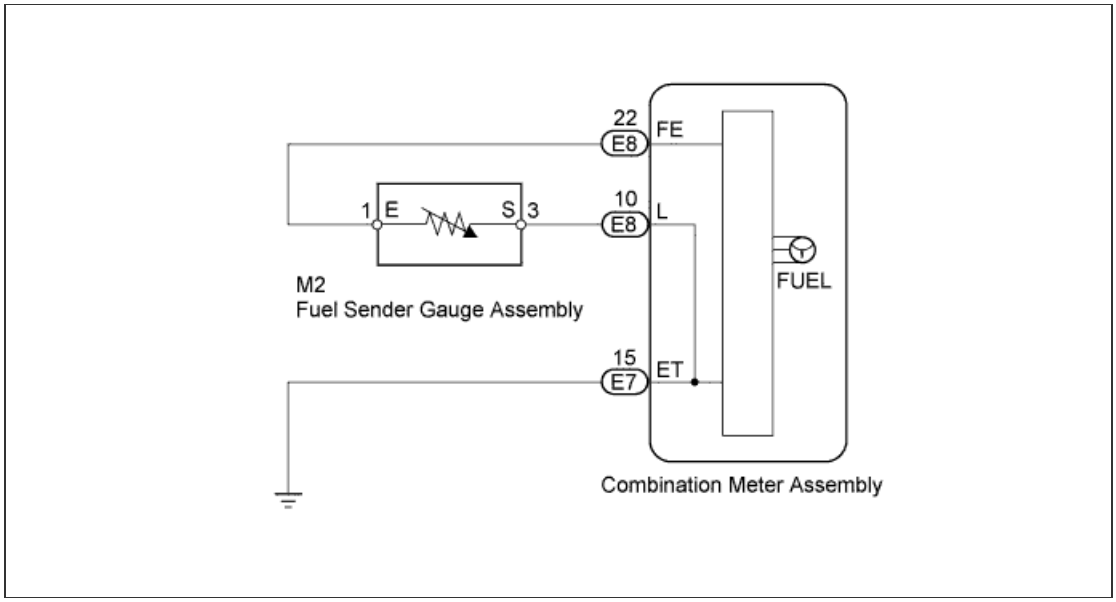

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FUEL SENDER GAUGE)

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Fuel Input	Fuel sender gauge (main) input signal/Min.: 0, Max.: 127.5	Fuel sender input value	Unit: L

a. Operate the intelligent tester according to the display and select the Data List (Click here).

OK:

Fuel value displayed on the intelligent tester is almost same as needle indication.

Result


Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

2.CHECK HARNESS AND CONNECTOR (COMBINATION METER - FUEL SENDER GAUGE AND BODY GROUND)

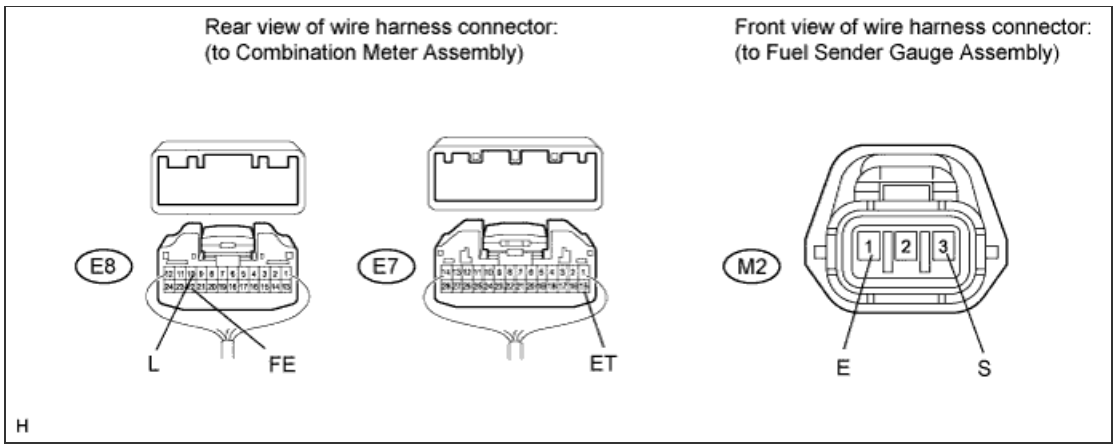

a. Disconnect the E7 and E8 meter connectors.

b. Disconnect the M2 gauge connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E8-10 (L) - M2-3 (S)	Always	Below 1 Ω
E8-22 (FE) - M2-1 (E)		
E7-15 (ET) - Body ground		
E8-10 (L) or M2-3 (S) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT FUEL SENDER GAUGE ASSEMBLY

a. for 1GR-FE:
Remove the fuel sender gauge (Click here).

b. for 2UZ-FE:
Remove the fuel sender gauge (Click here).

c. for 3UR-FE:
Remove the fuel sender gauge (Click here).

d. for 1VD-FTV:
Remove the fuel sender gauge (Click here).

e. Measure the resistance according to the value(s) in the table below.


Standard resistance:

Tester Connection	Condition	Specified Condition
3 (S) - 1 (E)	Float level is F (upper)	12 to 18 Ω
	Float level is E (lower)	405 to 415 Ω

Result

Result	Proceed to
OK	A

NG (for 1GR-FE)	B
NG (for 2UZ-FE)	C
NG (for 3UR-FE)	D
NG (for 1VD-FTV)	E

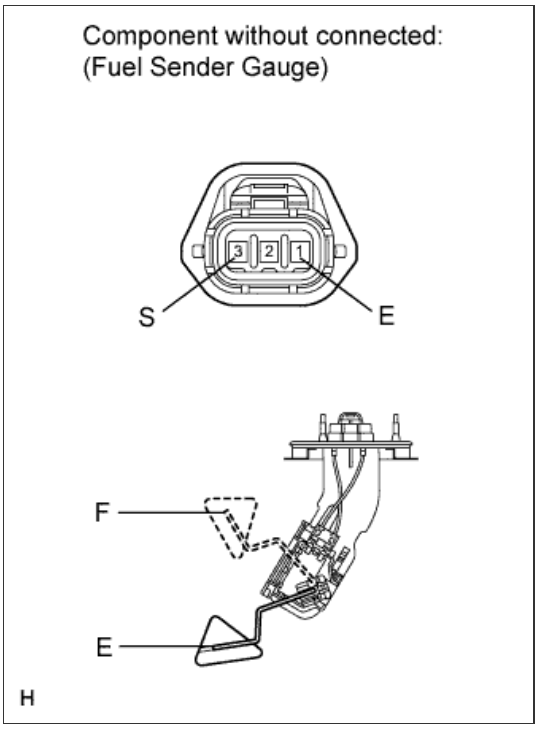

B	REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)
C	REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)
D	REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)
E	REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

A

4.CHECK COMBINATION METER ASSEMBLY

a. Check the combination meter type.

Result

Result	Proceed to
w/ Multi-information Display	A
w/o Multi-information Display	B

B	REPLACE COMBINATION METER ASSEMBLY (Click here)

A

REPLACE COMBINATION METER ASSEMBLY (Click here)

DTC B1500 Fuel Sender Open Detected


for Preparation Click here

DESCRIPTION

This DTC is output when the combination meter detects a fuel sender gauge malfunction via the CAN.

DTC Code	DTC Detection Condition	Trouble Area
B1500	When the combination meter detects a fuel sender gauge malfunction.	• Harness or connector • Combination meter assembly • Fuel suction with pump and gauge tube assembly • Fuel sender gauge assembly

WIRING DIAGRAM

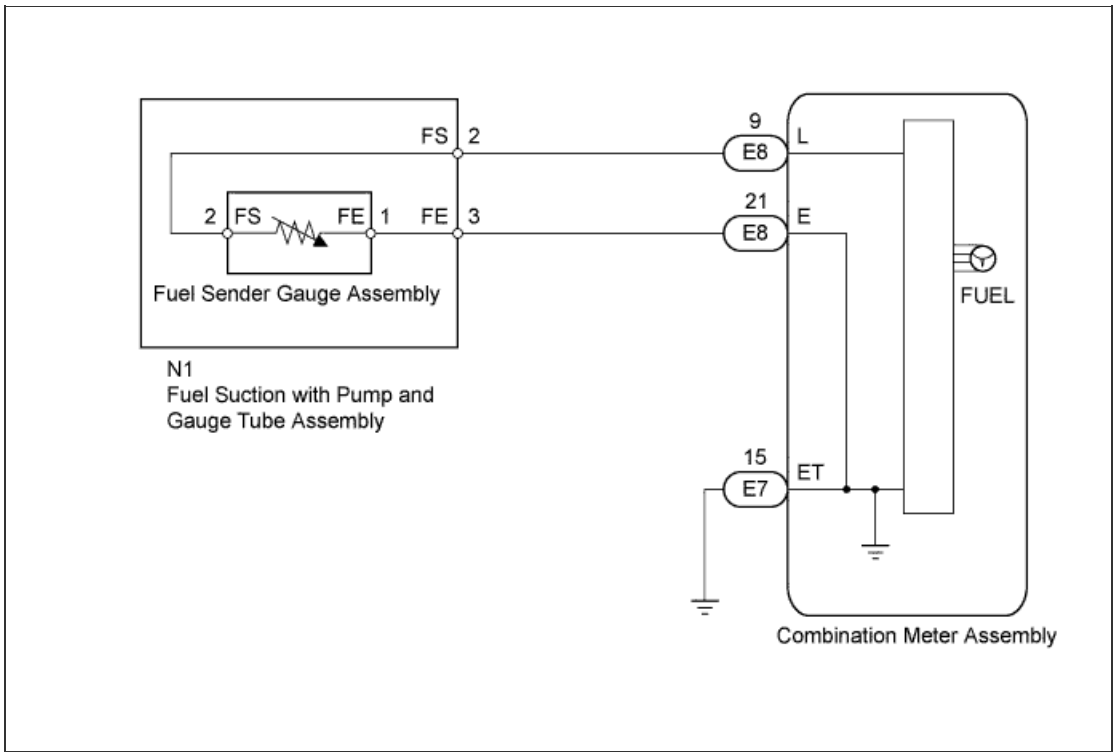

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FUEL SENDER GAUGE)

a. Operate the intelligent tester according to the display and select the Data List (Click here).

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Fuel Input	Fuel sender gauge (main) input signal/Min.: 0, Max.: 127.5	Fuel sender input value	Unit: L

OK:

Fuel value displayed on the intelligent tester is almost the same as needle indication.

Result

Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

B	REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

2.CHECK HARNESS AND CONNECTOR (COMBINATION METER - PUMP AND GAUGE AND BODY GROUND)

a. Disconnect the 7 and combination meter assembly connectors.

b. Disconnect the N1 fuel suction with pump and gauge tube assembly connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance

Tester Connection	Condition	Specified Condition
E8-9 (L) - N1-2 (FS)	Always	Below 1 Ω
E8-21 (E) - N1-3 (FE)	Always	Below 1 Ω
E7-15 (ET) - Body ground	Always	Below 1 Ω
E8-9 (L) or N1-2 (FS) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY

a. Remove the fuel sender gauge assembly.

HINT:

- **for 1GR-FE (Click here)**
- **for 2U FE (Click here)**
- **for 1VD-FTV (Click here)**

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
A-2 (FS) - B-2 (FS)	Always	Below 1 Ω
A-3 (FE) - B-1 (FE)	Always	Below 1 Ω

Text in Illustration

1	Component without harness connected (Fuel Suction with Pump and Gauge Tube Assembly)
2	Connector A
	Connector B

Result

Result	Proceed to
OK	A
NG (for 1GR-FE)	B
NG (for 2U FE)	C
NG (for 1 D-FT)	D

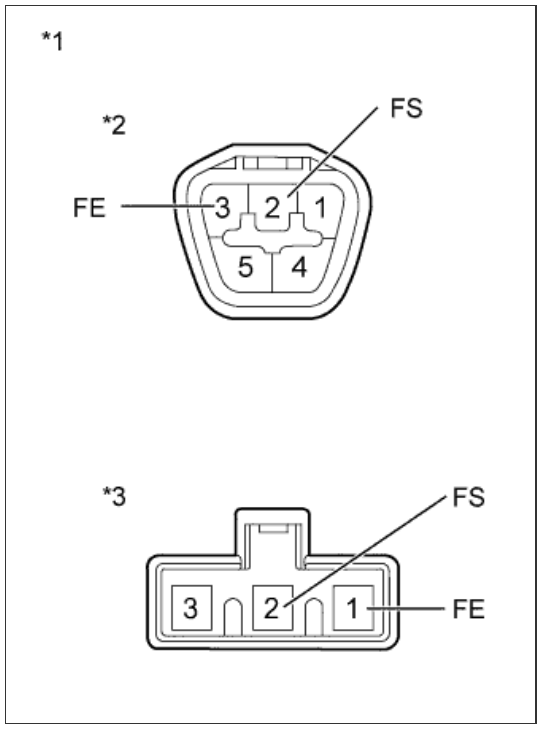

B → REPLACE FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY (Click here)

C → REPLACE FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY (Click here)

D → REPLACE FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY (Click here)

A


4.INSPECT FUEL SENDER GAUGE ASSEMBLY

a. Remove the fuel sender gauge assembly.

HINT:

- **for 1GR-FE (Click here)**
- **for 2U FE (Click here)**
- **for 1VD-FTV (Click here)**

b. Measure the resistance according to the value(s) in the table below.

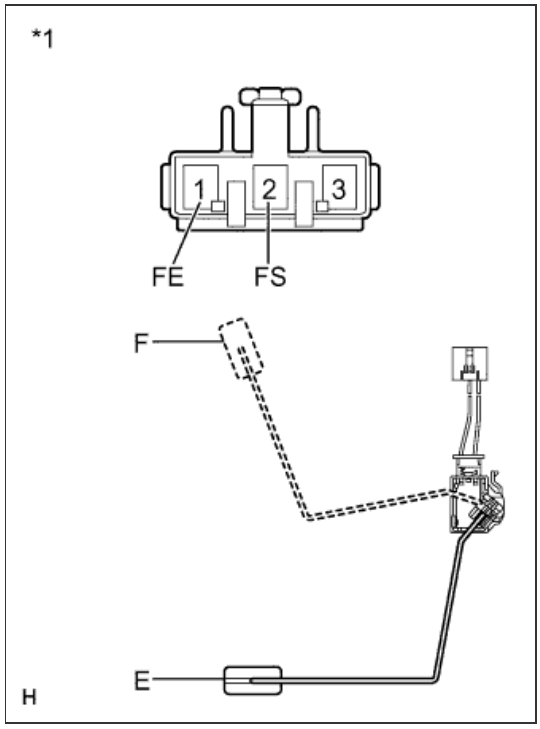

Standard Resistance:

Tester Connection	Condition	Specified Condition
2 (FS) - 1 (FE)	Float level is F (upper)	13.5 to 1 .5 Ω
	Float level is E (lower)	6.5 to 1.5 Ω

Text in Illustration

1	Component without harness connected (Fuel Sender Gauge Assembly)

Result

Result	Proceed to
NG (for 1GR-FE)	A
NG (for 2UZ-FE)	B
NG (for 1 D-FT	C
OK (w/ Multi-information Display)	D
OK (w/o Multi-information Display)	E

B	REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)
C	REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)
D	REPLACE COMBINATION METER ASSEMBLY (Click here)
E	REPLACE COMBINATION METER ASSEMBLY (Click here)

A

REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

DTC U0100 Lost Communication with ECM / PCM "A"


for Preparation Click here

DESCRIPTION

The combination meter communicates with the ECM via the CAN line.

DTC Code	DTC Detection Condition	Trouble Area
U0100	When the vehicle speed is 5 km/h (3 mph) or more and IG voltage is 10.5 V or more while no communication with the ECM continues for 3 seconds or more (no communication with the ECM or skid control ECU continues for 60 seconds or more).	CAN communication system

WIRING DIAGRAM

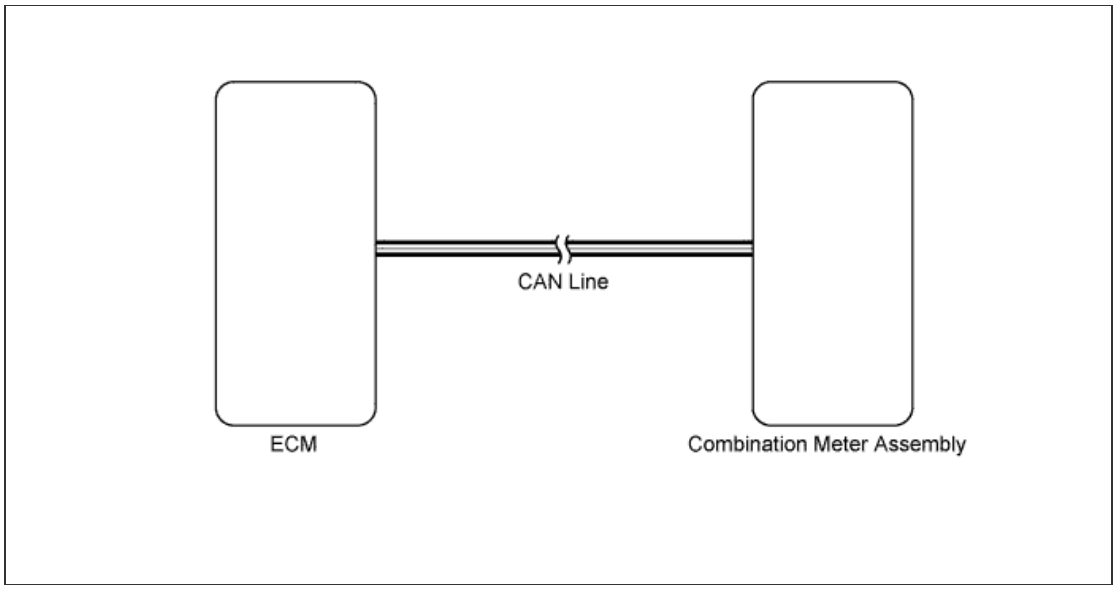

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Check for DTCs and note any codes that are output (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs (Click here).

Result

Result	Proceed to
CAN communication system DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C

HINT:

If CAN communication system DTC U0100 and another DTC are output at the same time, perform troubleshooting for CAN communication system DTC U0100 first.

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1500 Fuel Sender Open Detected


for Preparation Click here

DESCRIPTION

This DTC is output when the combination meter detects a fuel sender gauge malfunction via the CAN.

DTC Code	DTC Detection Condition	Trouble Area
B1500	When the combination meter detects a fuel sender gauge malfunction.	• Harness or connector • Combination meter assembly • Fuel suction with pump and gauge tube assembly • Fuel sender gauge assembly

WIRING DIAGRAM

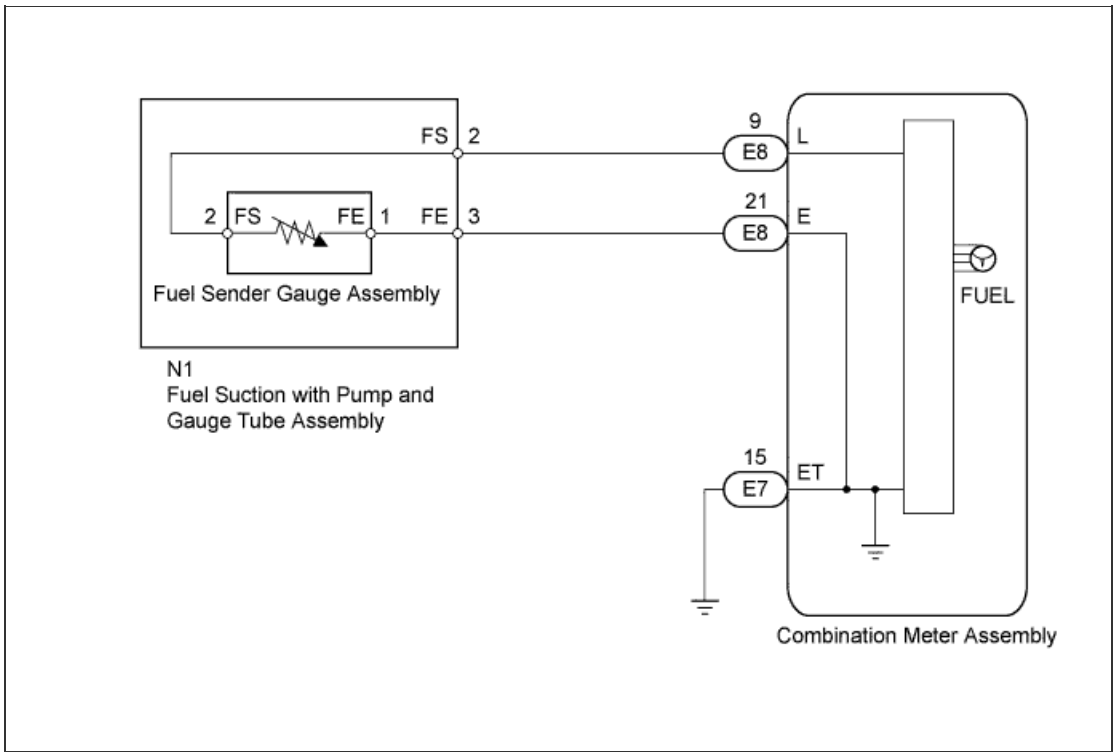

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FUEL SENDER GAUGE)

a. Operate the intelligent tester according to the display and select the Data List (Click here).

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Fuel Input	Fuel sender gauge (main) input signal/Min.: 0, Max.: 127.5	Fuel sender input value	Unit: L

OK:

Fuel value displayed on the intelligent tester is almost the same as needle indication.

Result


Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

B	REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

2.CHECK HARNESS AND CONNECTOR (COMBINATION METER - PUMP AND GAUGE AND BODY GROUND)

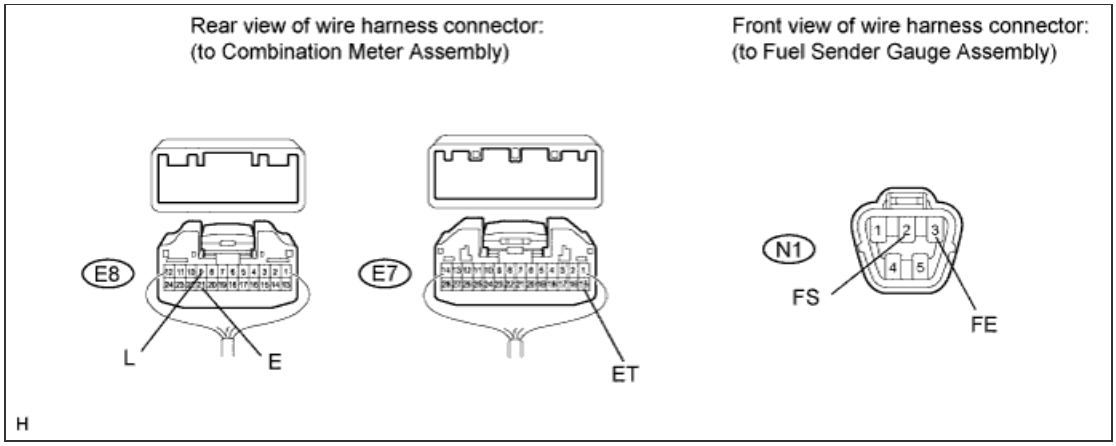

a. Disconnect the E7 and E8 combination meter assembly connectors.

b. Disconnect the N1 fuel suction with pump and gauge tube assembly connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E8-9 (L) - N1-2 (FS)	Always	Below 1 Ω
E8-21 (E) - N1-3 (FE)	Always	Below 1 Ω
E7-15 (ET) - Body ground	Always	Below 1 Ω
E8-9 (L) or N1-2 (FS) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY

a. Remove the fuel sender gauge assembly.

HINT:

- **for 1GR-FE (Click here)**
- **for 2U FE (Click here)**
- **for 3UR-FE (Click here)**
- **for 1VD-FTV (Click here)**

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A-2 (FS) - B-2 (FS)	Always	Below 1 Ω
A-3 (FE) - B-1 (FE)	Always	Below 1 Ω


Text in Illustration

1	Component without harness connected (Fuel Suction with Pump and Gauge Tube Assembly)
	Connector A

	Connector B

Result

Result	Proceed to
OK	A
NG (for 1GR-FE)	B
NG (for 2UZ-FE)	C
NG (for 3UR-FE)	D
NG (for 1 D-FT	

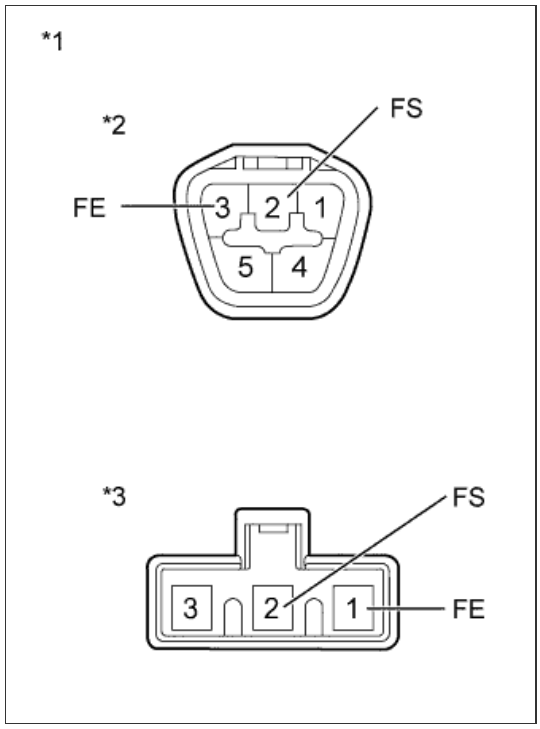

B → REPLACE FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY (Click here)

C → REPLACE FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY (Click here)

D → REPLACE FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY (Click here)

E → REPLACE FUEL SUCTION WITH PUMP AND GAUGE TUBE ASSEMBLY (Click here)

A

4.INSPECT FUEL SENDER GAUGE ASSEMBLY

a. emove the fuel sender gauge assembly.


HINT:

- for 1GR-FE (Click here)
- for 2U FE (Click here)
- for 3UR-FE (Click here)
- for 1VD-FTV (Click here)

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
2 (FS) - 1 (FE)	Float level is F (upper)	13.5 to 1 .5 Ω
	Float level is E (lower)	05.5 to 1.5 Ω

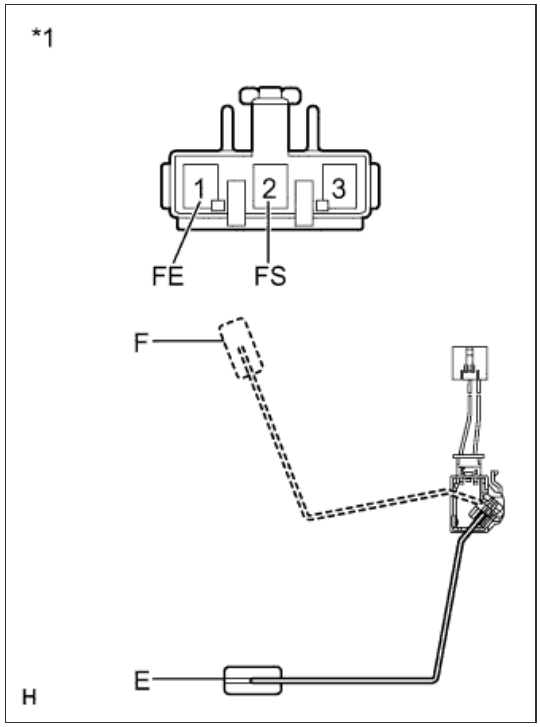

Text in Illustration

1	Component without harness connected (Fuel Sender Gauge Assembly)

Result

Result	Proceed to
OK	A
NG (for 1GR-FE)	B
NG (for 2UZ-FE)	C

NG (for 3UR-FE)	D
NG (for 1 D-FT	

B → REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

C → REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

D → REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

E → REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

A

5.CHECK COMBINATION METER TYPE

a. Check the combination meter type

Result

Result	Proceed to
w/ Multi-information Display	A
w/o Multi-information Display	B

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

REPLACE COMBINATION METER ASSEMBLY (Click here)

DTC U0129 Lost Communication with Brake System Control Module


for Preparation Click here

DESCRIPTION

The combination meter communicates with the skid control ECU via the CAN line.

DTC Code	DTC Detection Condition	Trouble Area
U0129	When 15 seconds have elapsed after the engine is started and IG voltage is 10.5 V or more while no communication with the skid control ECU continues for 3 seconds or more (no communication with the ECM or skid control ECU continues for 60 seconds or more).	CAN communication system

WIRING DIAGRAM

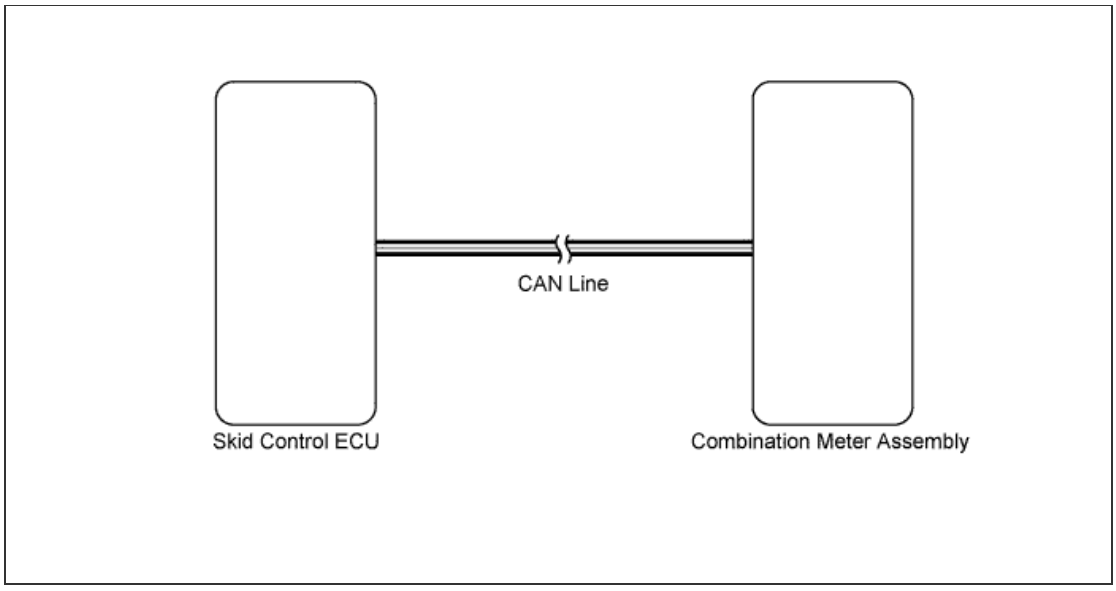

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Check for DTCs and note any codes that are output (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs (Click here).

Result

Result	Proceed to
CAN communication system DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C

HINT:

If CAN communication system DTC U0129 and another DTC are output at the same time, perform troubleshooting for CAN communication system DTC U0129 first.

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1501 Sub Fuel Sender Open Detected

for Preparation Click here

DESCRIPTION


HINT:

Trouble code B1501 is only output for double tank equipped vehicles

This DTC is stored when the combination meter detects a fuel sender gauge malfunction via the CAN.

DTC Code	DTC Detection Condition	Trouble Area
B1501	When the combination meter detects a fuel sender gauge malfunction.	• Harness or connector • Combination meter assembly • Fuel sender gauge assembly

WIRING DIAGRAM

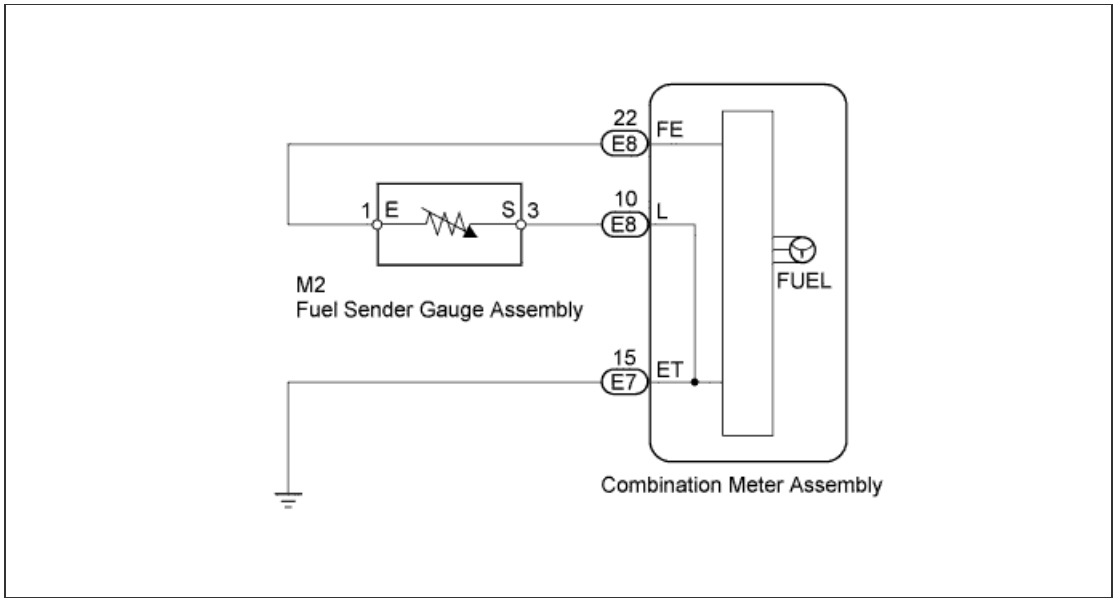

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FUEL SENDER GAUGE)

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Fuel Input	Fuel sender gauge (main) input signal/Min.: 0, Max.: 127.5	Fuel sender input value	Unit: L

a. Operate the intelligent tester according to the display and select the Data List (Click here).

OK:

Fuel value displayed on the intelligent tester is almost same as needle indication.

Result


Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

2.CHECK HARNESS AND CONNECTOR (COMBINATION METER - FUEL SENDER GAUGE AND BODY GROUND)

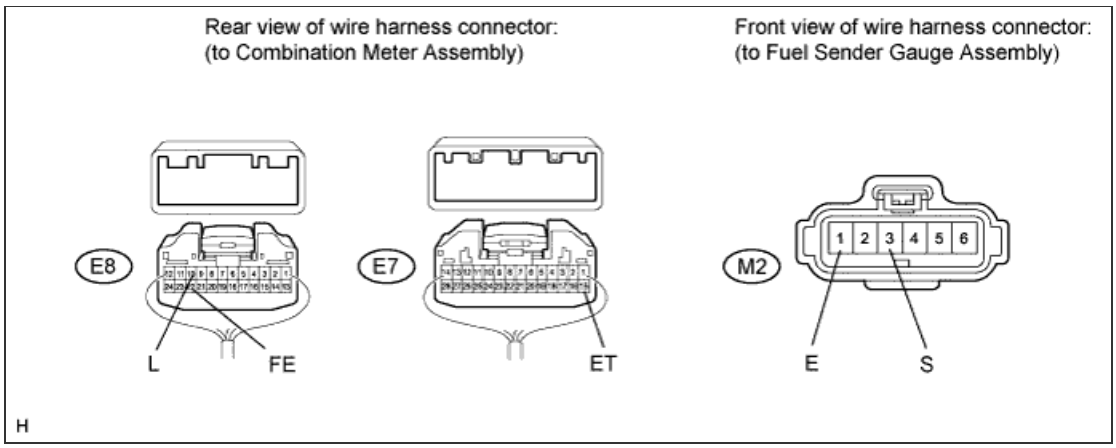

a. Disconnect the E7 and E8 meter connectors.

b. Disconnect the M2 gauge connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E8-10 (L) - M2-1 (E)	Always	Below 1 Ω
E8-22 (FE) - M2-3 (S)		
E7-15 (ET) - Body ground		
E8-10 (L) or M2-1 (E) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT FUEL SENDER GAUGE ASSEMBLY

a. for 1GR-FE:
Remove the fuel sender gauge (Click here).

b. for 2UZ-FE:
Remove the fuel sender gauge (Click here).

c. for 1VD-FTV:
Remove the fuel sender gauge (Click here).

d. Measure the resistance according to the value(s) in the table below.


Standard resistance:

Tester Connection	Condition	Specified Condition
3 (S) - 1 (E)	Float level is F (upper)	12 to 18 Ω
	Float level is E (lower)	405 to 415 Ω

Result

Result	Proceed to
NG (for 1GR-FE)	A
NG (for 2UZ-FE)	B
NG (for 1VD-FTV)	C

OK (w/ Multi-information Display)	D
OK (w/o Multi-information Display)	E

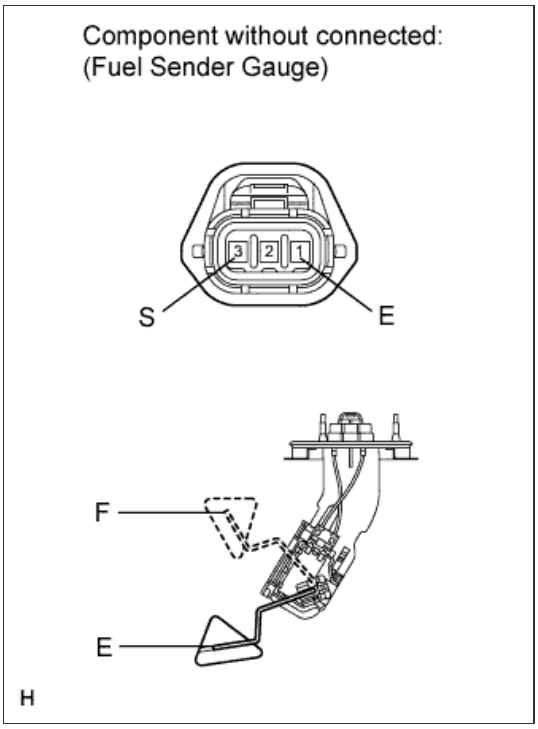

B → REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

C → REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

D → REPLACE COMBINATION METER ASSEMBLY (Click here)

E → REPLACE COMBINATION METER ASSEMBLY (Click here)

A


REPLACE FUEL SENDER GAUGE ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

This circuit is the power source circuit for the combination meter. This circuit provides 2 power source types: one is a constant power source mainly used as a backup power source, and the other is a power source mainly used for signal transmission. The constant power source is mainly used as a backup power source for the meter CPU. However, it is also used for communication. If a voltage of 12 V is not applied to terminal IG+ when the engine switch is on (IG), indicators will not operate.

WIRING DIAGRAM

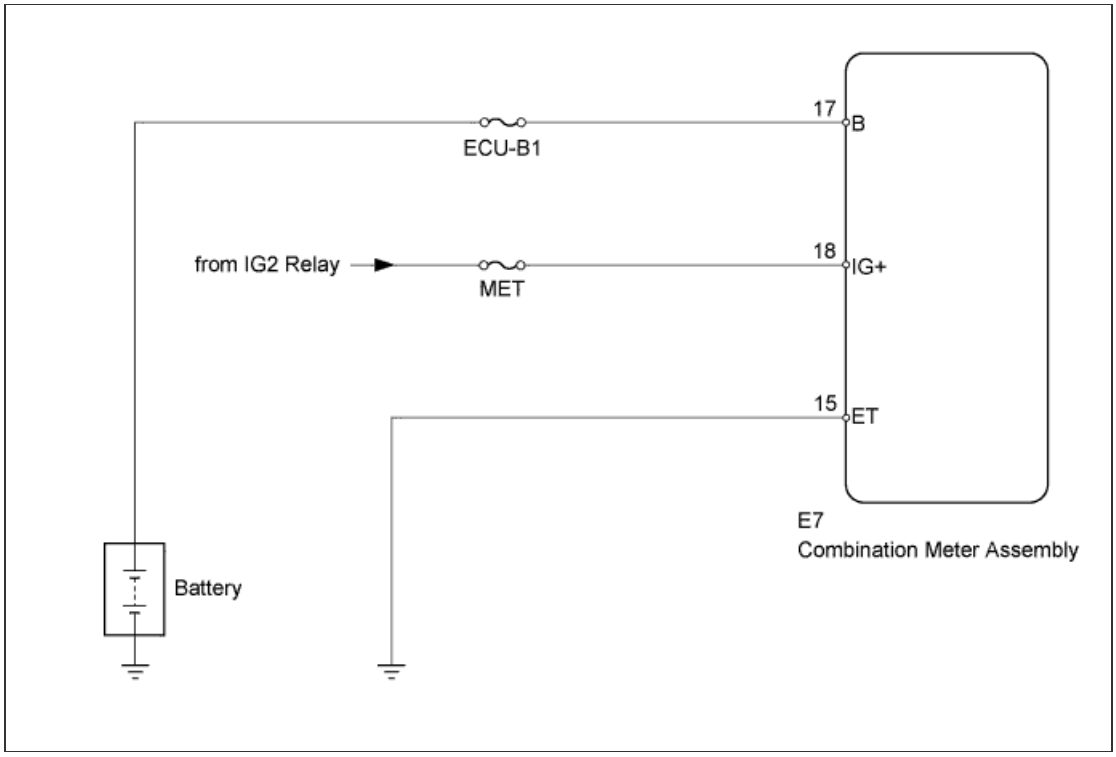

INSPECTION PROCEDURE

1.INSPECT FUSE (MET, ECU-B1)

a. Remove the MET and ECU-B1 fuses from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
MET fuse	Always	Below 1 Ω
ECU-B1 fuse		

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (COMBINATION METER ASSEMBLY - BATTERY AND BODY GROUND)

a. Disconnect the E7 meter connector.

b. Measure the resistance and voltage according to the value(s) in the tables below.


Standard Resistance:

Tester Connection	Condition	Specified Condition

E7-15 (ET) - Body ground	Always	Below 1 Ω

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E7-17 (B) - Body ground	Always	11 to 14 V
E7-18 (IG+) - Body ground	Engine switch on (IG)	

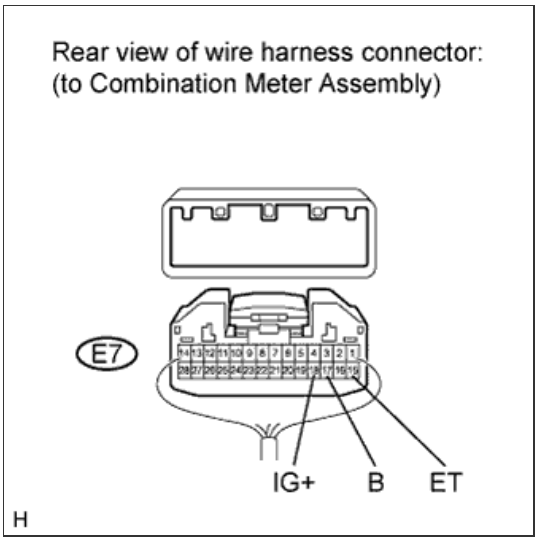

Result

Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)


A → REPAIR OR REPLACE HARNESS OR CONNECTOR

for Preparation Click here

DESCRIPTION

The combination meter receives vehicle speed signals from the skid control ECU via the CAN line. The vehicle speed sensor detects the voltage that varies according to the vehicle speed. The skid control ECU supplies power to the vehicle speed sensor. The skid control ECU detects vehicle speed signals based on the pulses of the voltage.

WIRING DIAGRAM

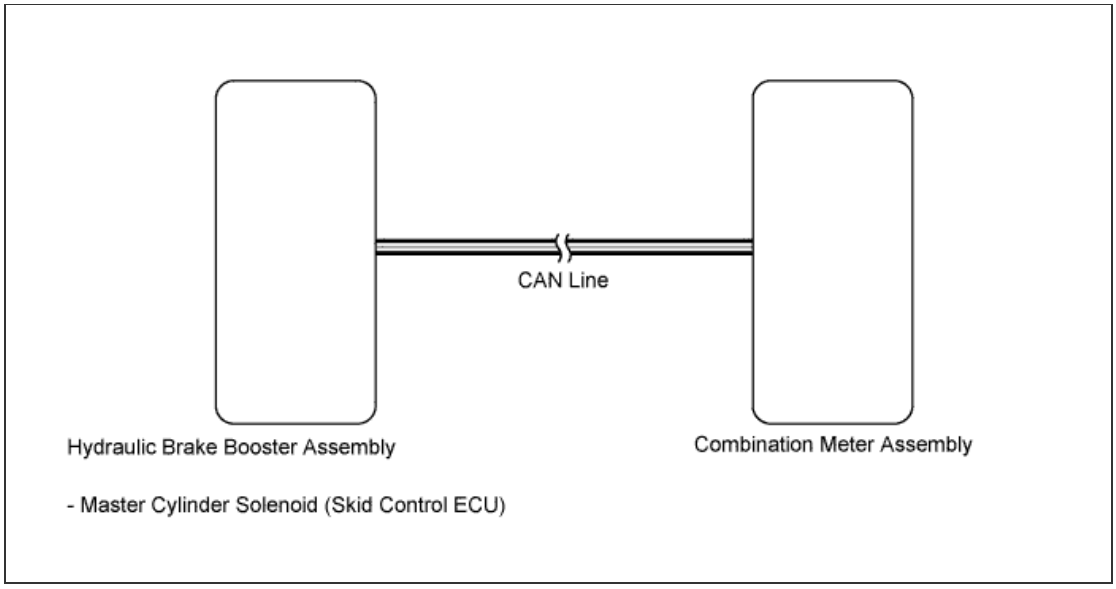

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for DTCs (Click here).

Result

Result	Proceed to
CAN communication DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

A

2.CHECK ANTI-LOCK BRAKE SYSTEM (VEHICLE SPEED)

a. Check for DTCs (Click here).

NG → Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)

OK

3.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (SPEEDOMETER)

a. Operate the intelligent tester according to the display and select Active Test (Click here).

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
Speed Meter Operation	Speedometer	4 8 2 24 or 28	Perform the test with the vehicle stopped and engine idling.

HINT:

- **Make sure that the vehicle is stopped and the engine is idling. The doors will be locked automatically when performing the speedometer Active Test. This is a normal function.**
- **The displayed value has the same units (km/h, mph) as the main scale of the vehicle speedometer.**
- **The needle position should be within the acceptable tolerance.**

OK:
Needle indication is normal.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

4.READ VALUE USING INTELLIGENT TESTER (VEHICLE SPEED)

a. Operate the intelligent tester according to the display and select Data List (Click here).

Combination Meter

Tester Display	Measurement tem/Range	Normal Condition	Diagnostic Note
ehicle Speed meter	ehicle speed/Min.: ( )Ma .: 255 ( )	Almost same as actual speed (when driving)	Unit: km/h (mph)

OK:
Vehicle speed displayed on the intelligent tester is almost the same as actual vehicle speed measured using speedometer tester (calibrated chassis dynamometer).

Result

Result	Proceed to
NG	A
(w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

5.READ VALUE USING INTELLIGENT TESTER (WHEEL SPEED SENSOR)

a. Operate the intelligent tester according to the display and select Data List (Click here).

ABS/VSC/TRAC

Tester Display	Measurement tem/Range	Normal Condition	Diagnostic Note
FR heel Speed	heel speed sensor FR reading/Min.: ( )Ma .: (2)	Actual wheel speed	A similar speed is indicated on the speedometer.
FL heel Speed	heel speed sensor FL reading/Min.: ( )Ma .: (2)	Actual wheel speed	A similar speed is indicated on the speedometer.
RR heel	heel speed sensor RR reading/Min.: ( )Ma .:	Actual wheel	A similar speed is indicated on the

Speed	(2)	speed	speedometer.
RL heel Speed	heel speed sensor RL reading/Min.: ( )Ma .: (2)	Actual wheel speed	A similar speed is indicated on the speedometer.

OK:

Vehicle speed displayed on the intelligent tester is almost the same as actual vehicle speed measured using speedometer tester (calibrated chassis dynamometer).

Result

Result	Proceed to
NG (for LHD)	A
NG (for RHD)	B
OK (w/ Multi-information Display)	C
OK (w/o Multi-information Display)	D

B → REPLACE HYDRAULIC BRAKE BOOSTER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

D → REPLACE COMBINATION METER ASSEMBLY (Click here)

A


REPLACE HYDRAULIC BRAKE BOOSTER ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

The combination meter receives engine speed signals from the ECM via the CAN line. The combination meter displays engine speed data that is calculated based on the data received from the ECM.

WIRING DIAGRAM

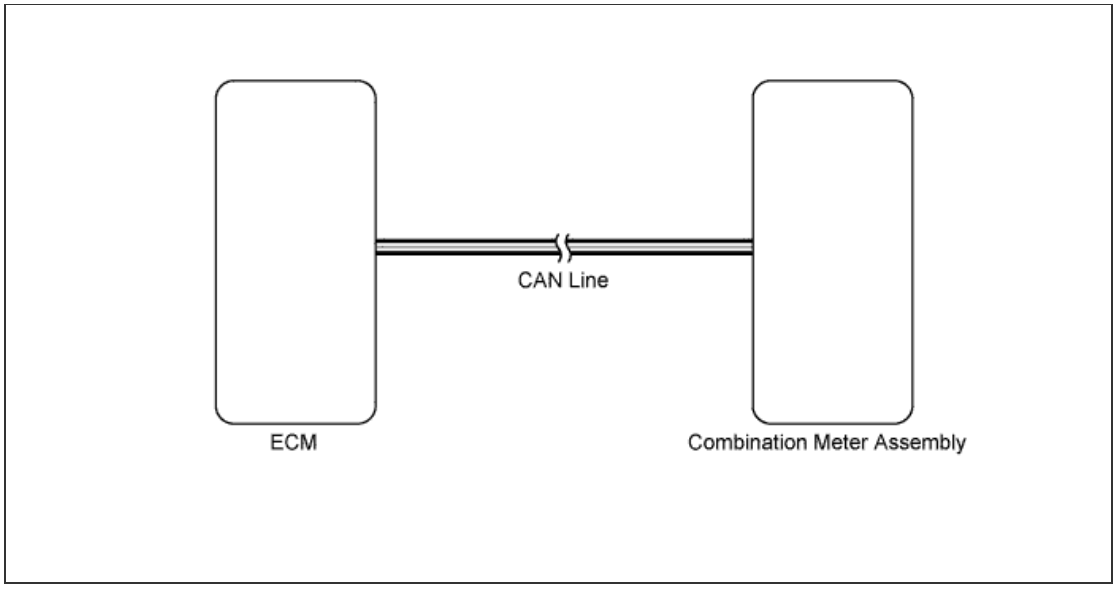

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for DTCs (Click here).

Result

Result	Proceed to
CAN communication system DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (TACHOMETER)

a. Operate the intelligent tester according to the display and select Active Test (Click here).

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
TachoMeter Operation	Tachometer	0, 1000, 2000, 3000, 4000, 5000, 6000, 7000	Perform the test with the vehicle stopped and engine idling.

HINT:

Make sure that the vehicle is stopped and the engine is idling.

OK:

Needle indication is normal.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

3.READ VALUE USING INTELLIGENT TESTER (TACHOMETER)

a. Operate the intelligent tester according to the display and select Data List (Click here).

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Engine Rpm	Engine speed/Min.: 0, Max.: 12750	Idling: 700 to 800	Unit: rpm

OK:

Engine speed displayed on the intelligent tester is almost the same as actual engine speed.

Result

Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

4.READ VALUE USING INTELLIGENT TESTER (ENGINE SPEED)

a. Operate the intelligent tester according to the display and select Data List (Click here).


Result

Result	Proceed to
Engine speed displayed on the intelligent tester is almost same as actual engine speed (w/ Multi-information Display)	A
Engine speed displayed on the intelligent tester is not same as actual engine speed (for 1GR-FE)	B
Engine speed displayed on the intelligent tester is not same as actual engine speed (for 2UZ-FE)	C
Engine speed displayed on the intelligent tester is not same as actual engine speed (for 1VD-FTV)	D
Engine speed displayed on the intelligent tester is almost same as actual engine speed (w/o Multi-information Display)	E

OK:

Engine speed displayed on the intelligent tester is almost the same as actual engine speed.

B → REPLACE ECM (Click here)

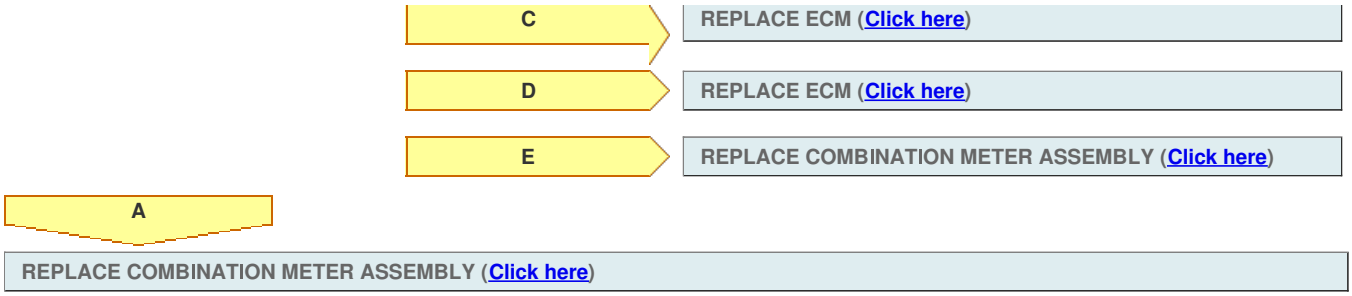

C
REPLACE ECM (Click here)
D
REPLACE ECM (Click here)
E
REPLACE COMBINATION METER ASSEMBLY (Click here)
A
REPLACE COMBINATION METER ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

The combination meter receives engine speed signals from the ECM via the CAN line. The combination meter displays engine speed data that is calculated based on the data received from the ECM.

WIRING DIAGRAM

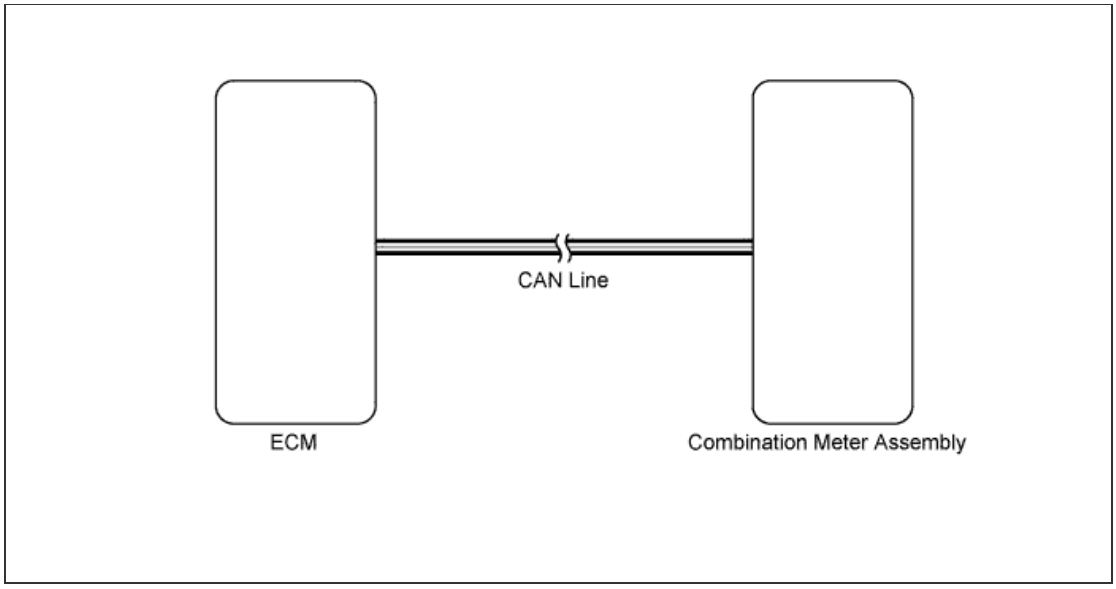

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for DTCs (Click here).

Result

Result	Proceed to
CAN communication system DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (TACHOMETER)

a. Operate the intelligent tester according to the display and select Active Test (Click here).

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
TachoMeter Operation	Tachometer	0, 1000, 2000, 3000, 4000, 5000, 6000, 7000	Perform the test with the vehicle stopped and engine idling.

HINT:

Make sure that the vehicle is stopped and the engine is idling.

OK:

Needle indication is normal.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

3.READ VALUE USING INTELLIGENT TESTER (TACHOMETER)

a. Operate the intelligent tester according to the display and select Data List (Click here).

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Engine Rpm	Engine speed/Min.: 0, Max.: 12750	Idling: 700 to 800	Unit: rpm

OK:

Engine speed displayed on the intelligent tester is almost the same as actual engine speed.

Result

Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

4.READ VALUE USING INTELLIGENT TESTER (ENGINE SPEED)

a. Operate the intelligent tester according to the display and select Data List (Click here).

Result

Result	Proceed to
Engine speed displayed on the intelligent tester is almost same as actual engine speed	A
Engine speed displayed on the intelligent tester is not same as actual engine speed (for 1GR-FE)	B
Engine speed displayed on the intelligent tester is not same as actual engine speed (for 2UZ-FE)	C
Engine speed displayed on the intelligent tester is not same as actual engine speed (for 3UR-FE)	D
Engine speed displayed on the intelligent tester is not same as actual engine speed (for 1VD-FTV)	E

OK:

Engine speed displayed on the intelligent tester is almost the same as actual engine speed.

B → REPLACE ECM (Click here)

C → REPLACE ECM (Click here)

D → REPLACE ECM (Click here)

E → REPLACE ECM (Click here)

A

5.CHECK COMBINATION METER ASSEMBLY

a. Check the combination meter type.

Result

Result	Proceed to
w/ Multi-information Display	A
w/o Multi-information Display	B

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

A


REPLACE COMBINATION METER ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

The fuel sender gauge has a variable resistance mechanism. The resistance decreases when the fuel amount increases, and the resistance increases when the fuel amount decreases. The fuel receiver gauge changes based on the resistance of the fuel sender gauge.

WIRING DIAGRAM

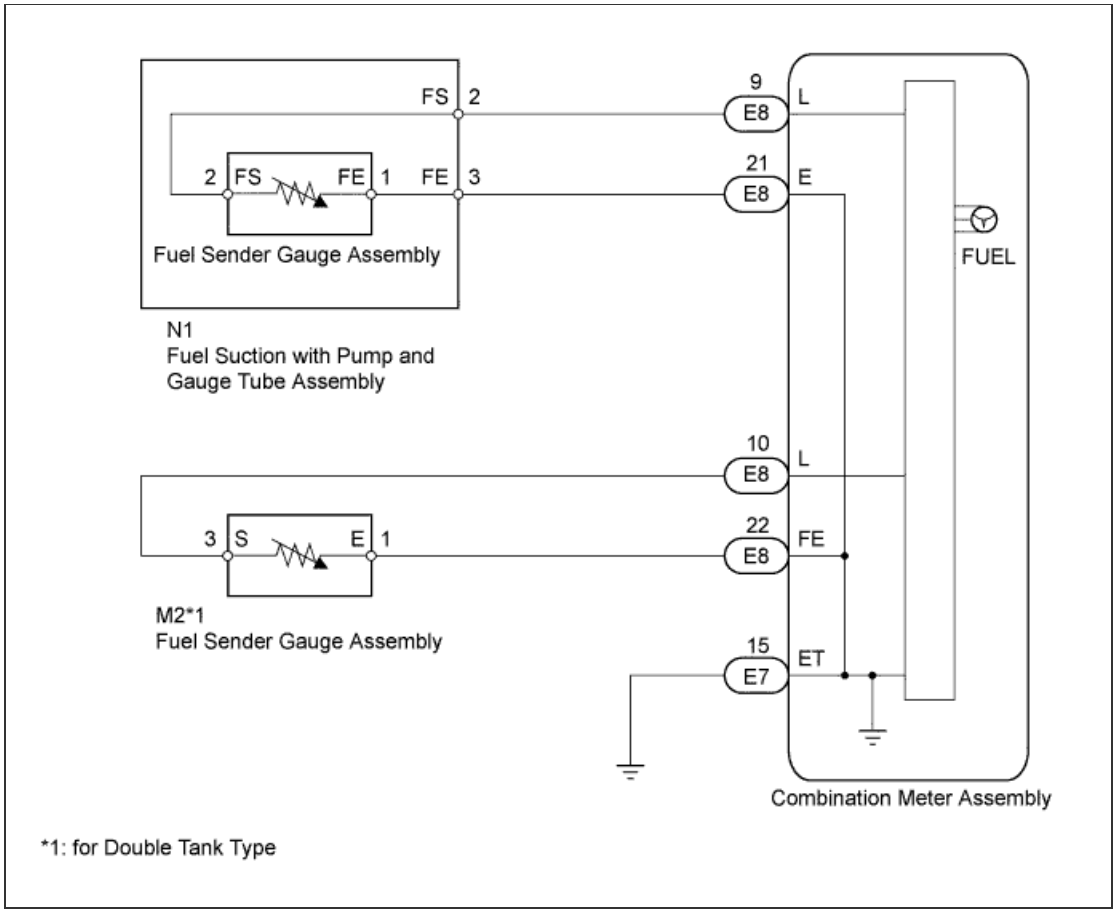

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1500 or B1501 is not output	A
DTC B1500 is output	B
DTC B1501 is output	C

B → GO TO DTC B1500 (Click here)

C → GO TO DTC B1501 (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (FUEL RECEIVER GAUGE ASSEMBLY)

a. Operate the intelligent tester according to the steps on the display and select Active Test (Click here).

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
Fuel Meter Operation	Fuel receiver gauge	EMPTY, 1/2 or FULL	Perform the test with the vehicle stopped and engine idling.

OK:

Needle indication is normal.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)


A → PROCEED TO NEXT INSPECTION PROCEDURE SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

DESCRIPTION

The fuel sender gauge has a variable resistance mechanism. The resistance decreases when the fuel amount increases, and the resistance increases when the fuel amount decreases. The fuel receiver gauge changes based on the resistance of the fuel sender gauge.

WIRING DIAGRAM

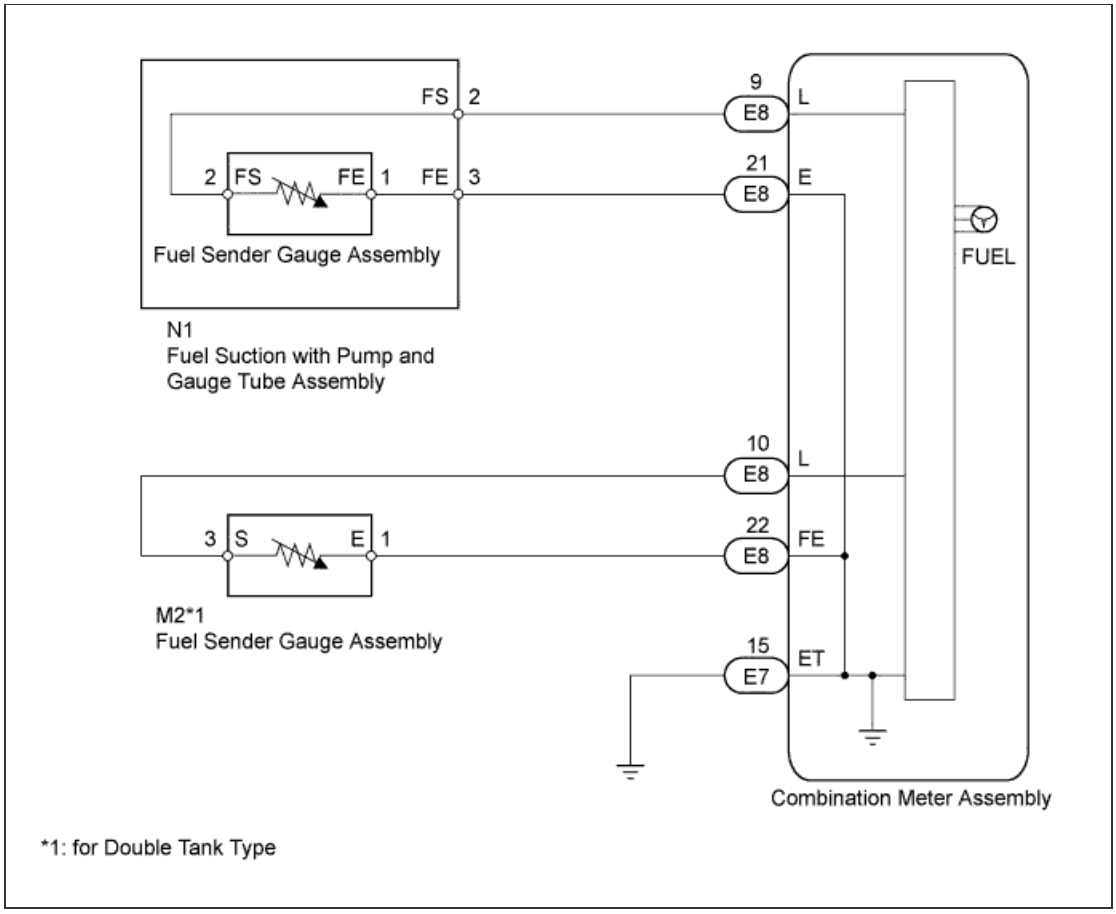

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1500 or B1501 is not output	A
DTC B1500 is output	B
DTC B1501 is output	C

B → GO TO DTC B1500 (Click here)

C → GO TO DTC B1501 (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (FUEL RECEIVER GAUGE ASSEMBLY)

a. Operate the intelligent tester according to the steps on the display and select Active Test (Click here).

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
Fuel Meter Operation	Fuel receiver gauge	EMPTY, 1/2 or FULL	Perform the test with the vehicle stopped and engine idling.

OK:

Needle indication is normal.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)


A → PROCEED TO NEXT INSPECTION PROCEDURE SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

DESCRIPTION

The fuel sender gauge has a variable resistance mechanism. The resistance decreases when the fuel amount increases, and the resistance increases when the fuel amount decreases. The fuel receiver gauge changes based on the resistance of the fuel sender gauge.

WIRING DIAGRAM

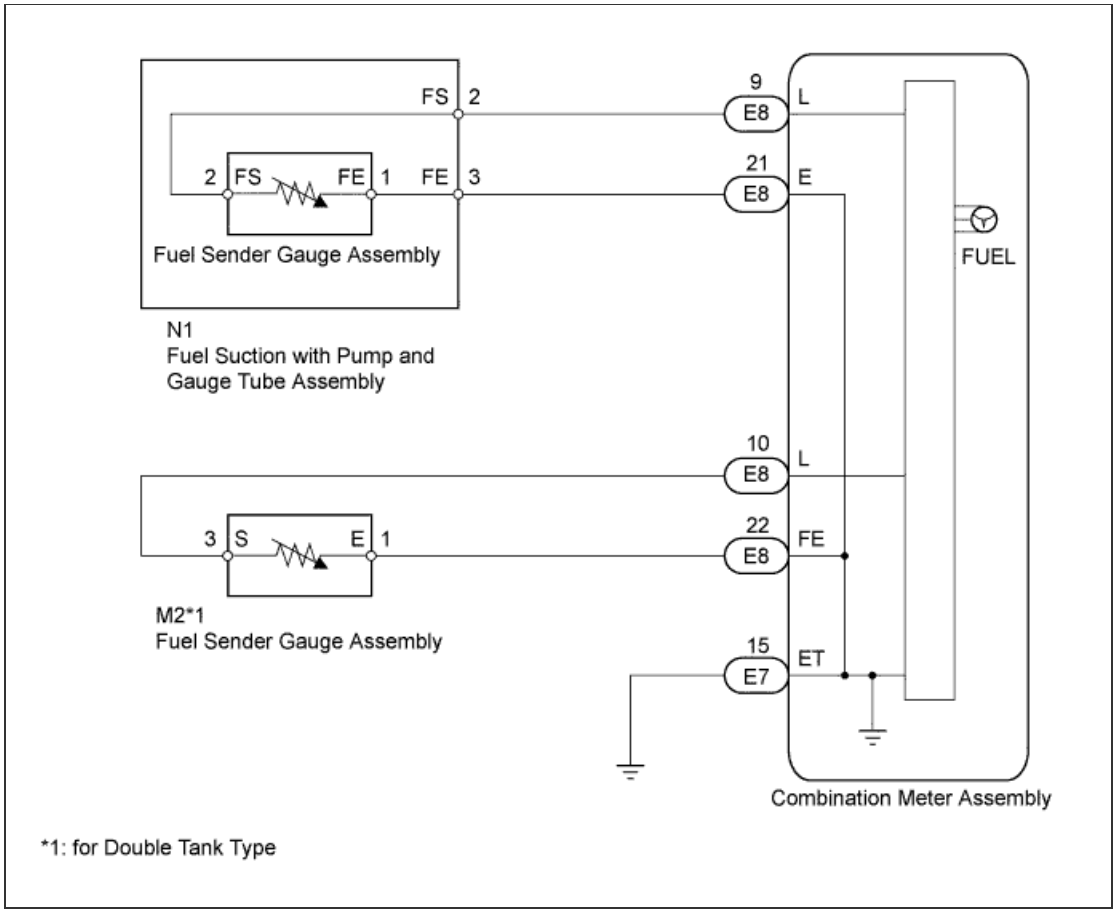

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1500 or B1501 is not output	A
DTC B1500 is output	B
DTC B1501 is output	C

B → GO TO DTC B1500 (Click here)

C → GO TO DTC B1501 (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (FUEL RECEIVER GAUGE ASSEMBLY)

a. Operate the intelligent tester according to the steps on the display and select Active Test (Click here).

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
Fuel Meter Operation	Fuel receiver gauge	EMPTY, 1/2 or FULL	Perform the test with the vehicle stopped and engine idling.

OK:

Needle indication is normal.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)


A → PROCEED TO NEXT INSPECTION PROCEDURE SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

DESCRIPTION

In this circuit, the combination meter assembly receives engine coolant temperature signals from the ECM using CAN communication lines. The combination meter assembly displays an engine coolant temperature that is calculated based on the data received from the ECM.

WIRING DIAGRAM

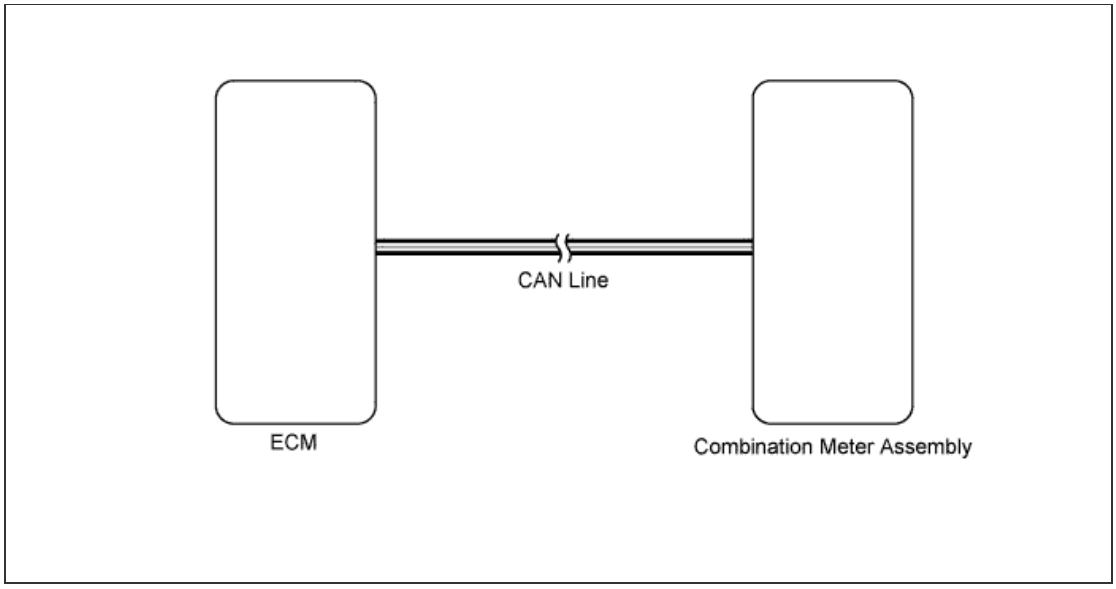

INSPECTION PROCEDURE

HINT:

If there is an open or short in the engine coolant temperature sensor circuit, an SFI system DTC is output. If output, perform troubleshooting on the SFI system first.

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for DTCs (Click here).

Result

Result	Proceed to
CAN communication system DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (COOLANT TEMP)

a. Operate the intelligent tester according to the display and select Active Test.

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
Water Temperature Meter Operation	Engine coolant temperature receiver gauge	LOW, NORMAL or HIGH	Perform the test with the vehicle stopped and engine idling.

HINT:

Confirm that the vehicle is stopped and the engine is idling.

OK:

Needle indication is normal.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

3.READ VALUE USING INTELLIGENT TESTER (COOLANT TEMPERATURE)

a. Operate the intelligent tester according to the display and select Data List.

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Coolant Temperature	Engine coolant temperature/Min.: -40 (-40), Max.: 140 (284)	After warming up: 80 to 105 (176 to 221)	• Unit: °C (°F) • If the value is -40 (-40): The sensor circuit is open • If the value is 140 (284): The sensor circuit is shorted.

OK:

Coolant temperature displayed on the intelligent tester is between 80°C (176°F) and 95°C (203°F) after warming up.

Result

Result Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

4.READ VALUE USING INTELLIGENT TESTER (ENGINE COOLANT)

a. Operate the intelligent tester according to the display and select Data List.

Engine*1, *2

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Coolant Temp	Engine coolant temperature: Min.: -40°C), Max.:140°C	80 to 100°C (176 to 212°F): After warming up	• If the value is -40°C (-40°F), the sensor circuit is open. • If the value is 140°C (284°F), the sensor circuit is shorted.

Engine*3

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
			• If the value is -40°C (-40°F) or 140°C (284°F), the sensor

Coolant Temp	Engine coolant temperature/ Min.: -40°C), Max.:140°C	After warming up engine: 75 to 90°C (167 to 194°F)	circuit is open or shorted. • After a long soak, the coolant temperature, intake air temperature, and ambient air temperature are approximately equal.

HINT:

*1: for 1GR-FE

*2: for 2UZ-FE

*3: for 1VD-FTV

OK:

Engine coolant temperature value displayed on the intelligent tester is almost the same as actual engine coolant temperature.

Result

Result	Proceed to
OK	A
NG (for 1GR-FE)	B
NG (for 2UZ-FE)	C
NG (for 1VD-FTV)	D

B	Go to SFI SYSTEM (Click here)
C	Go to SFI SYSTEM (Click here)
D	Go to ECD SYSTEM (Click here)

A

5.REPLACE COMBINATION METER ASSEMBLY

a. w/ Multi-information Display:

i. Temporarily replace the combination meter with a new one (Click here).

b. w/o Multi-information Display:

i. Temporarily replace the combination meter with a new one (Click here).

NEXT

6.CHECK COMBINATION METER ASSEMBLY

a. w/ Multi-information Display:

i. Check that the operation of the combination meter returns to normal (Click here).

b. w/o Multi-information Display:

i. Check that the operation of the combination meter returns to normal (Click here).

OK:

Operation of combination meter returns to normal.

Result

Result	Proceed to
OK	A
NG (for 1GR-FE)	B
NG (for 2UZ-FE)	C
NG (for 1VD-FTV)	D

B	REPLACE ECM (Click here)
C	REPLACE ECM (Click here)

D

REPLACE ECM (Click here)

OK


END (COMBINATION METER IS DEFECTIVE)

for Preparation Click here

DESCRIPTION

In this circuit, the combination meter assembly receives engine coolant temperature signals from the ECM using CAN communication lines. The combination meter assembly displays an engine coolant temperature that is calculated based on the data received from the ECM.

WIRING DIAGRAM

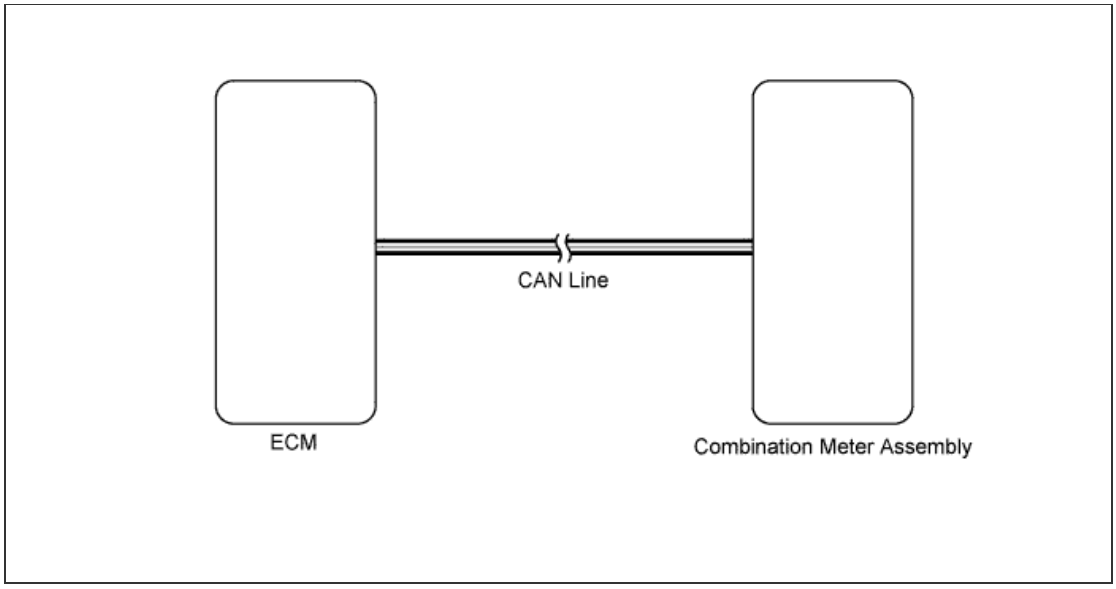

INSPECTION PROCEDURE

HINT:

If there is an open or short in the engine coolant temperature sensor circuit, an SFI system DTC is output. If output, perform troubleshooting on the SFI system first.

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for DTCs (Click here).

Result

Result	Proceed to
CAN communication system DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (COOLANT TEMP)

a. Operate the intelligent tester according to the display and select Active Test.

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
Water Temperature Meter Operation	Engine coolant temperature receiver gauge	LOW, NORMAL or HIGH	Perform the test with the vehicle stopped and engine idling.

HINT:

Confirm that the vehicle is stopped and the engine is idling.

OK:

Needle indication is normal.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

3.READ VALUE USING INTELLIGENT TESTER (COOLANT TEMPERATURE)

a. Operate the intelligent tester according to the display and select Data List.

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Coolant Temperature	Engine coolant temperature/Min.: -40 (-40), Max.: 140 (284)	After warming up: 80 to 105 (176 to 221)	• Unit: °C (°F) • If the value is -40 (-40): The sensor circuit is open • If the value is 140 (284): The sensor circuit is shorted.

OK:

Coolant temperature displayed on the intelligent tester is between 80°C (176°F) and 95°C (203°F) after warming up.

Result

Result Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

4.READ VALUE USING INTELLIGENT TESTER (ENGINE COOLANT)

a. Operate the intelligent tester according to the display and select Data List.

Engine*1, *2, *3

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Coolant Temp	Engine coolant temperature: Min.: -40°C, Max.:140°C	80 to 100°C (176 to 212°F): After warming up	• If the value is -40°C (-40°F), the sensor circuit is open. • If the value is 140°C (284°F), the sensor circuit is shorted.

Engine*4

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
			• If the value is -40°C (-40°F) or 140°C (284°F), the sensor

Coolant Temp	Engine coolant temperature/ Min.: -40°C, Max.:140°C	After warming up engine: 75 to 90°C (167 to 194°F)	circuit is open or shorted. • After a long soak, the coolant temperature, intake air temperature, and ambient air temperature are approximately equal.

*1: for 1GR-FE
*2: for 2UZ-FE
*3: for 3UR-FE
*4: for 1VD-FTV

OK:
Engine coolant temperature value displayed on the intelligent tester is almost the same as actual engine coolant temperature.

Result

Result	Proceed to
OK	A
NG (for 1GR-FE)	B
NG (for 2UZ-FE)	C
NG (for 3UR-FE)	D
NG (for 1VD-FTV)	E

B	Go to SFI SYSTEM (Click here)
C	Go to SFI SYSTEM (Click here)
D	Go to SFI SYSTEM (Click here)
E	Go to ECD SYSTEM (Click here)

A

5.REPLACE COMBINATION METER ASSEMBLY

a. w/ Multi-information Display:

i. Temporarily replace the combination meter with a new one (Click here).

b. w/o Multi-information Display:

i. Temporarily replace the combination meter with a new one (Click here).

NEXT

6.CHECK COMBINATION METER ASSEMBLY

a. w/ Multi-information Display:

i. Check that the operation of the combination meter returns to normal (Click here).

b. w/o Multi-information Display:

i. Check that the operation of the combination meter returns to normal (Click here).

OK:
Operation of combination meter returns to normal.

Result

Result	Proceed to
OK	A
NG (for 1GR-FE)	B
NG (for 2UZ-FE)	C
NG (for 3UR-FE)	D
NG (for 1VD-FTV)	E

B	REPLACE ECM (Click here)

C → REPLACE ECM (Click here)

D → REPLACE ECM (Click here)

E → REPLACE ECM (Click here)

A

END (COMBINATION METER IS DEFECTIVE)

for Preparation Click here


DESCRIPTION

w/ Multi-information Display:
The ODO/TRIP display of the meter changes each time the ODO/TRIP switch on the light control rheostat is pressed.

HINT:

For more information about changing between displays, refer to the owner's manual.

WIRING DIAGRAM

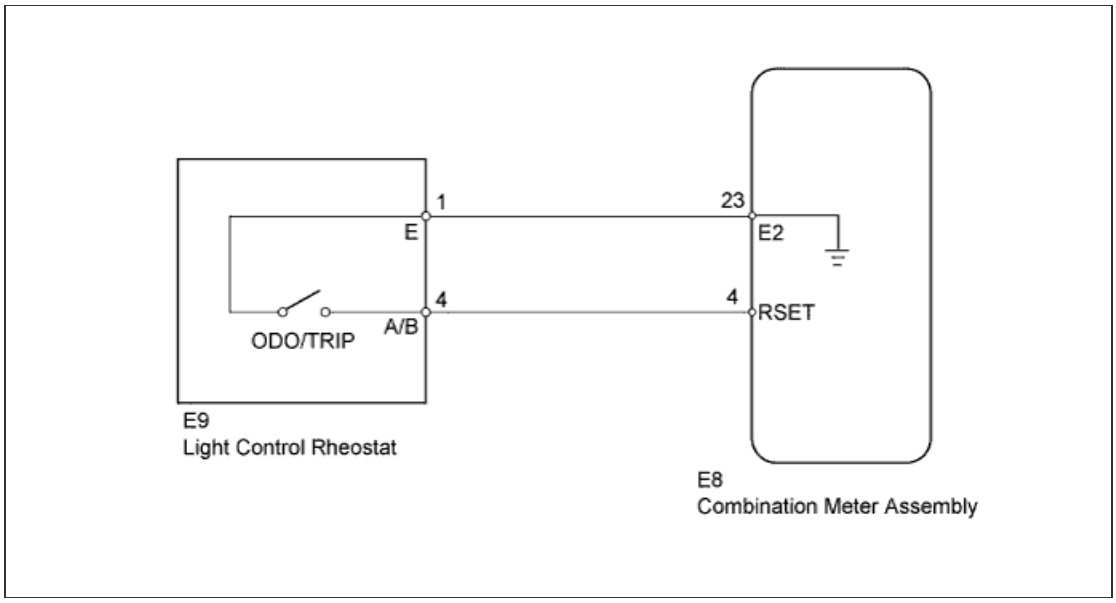

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (LIGHT CONTROL RHEOSTAT)

a. Operate the intelligent tester according to the display and select Data List.

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
ODO/TRIP Change SW	Trip switch (ODO/TRIP switch) condition/ON or OFF	ON: Trip switch pushed OFF: Trip switch not pushed	-

OK:
Switch condition (ON/OFF) can be switched by actual operation.

NG → Go to step 2

OK →

REPLACE COM INATION METER ASSEM LY (Click here)

2.INSPECT LIGHT CONTROL RHEOSTAT (TRIP SWITCH)


a. Remove the light control rheostat (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

		Specified

Tester Connection	Switch Condition	Condition
4 (A/B) - 1 (E)	TRIP switch ON (Pushed)	Below 200 Ω
	TRIP switch OFF (Not pushed)	1 MΩ or higher

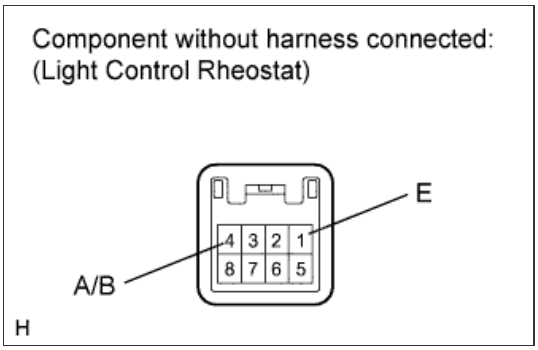

NG → REPLACE LIGHT CONTROL RHEOSTAT (Click here)

OK

3.CHECK HARNESS AND CONNECTOR (COM INATION METER - LIGHT CONTROL RHEOSTAT AND ODY GROUND)


a. Disconnect the E8 ECU connector.

b. Disconnect the E9 switch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E8-4 (RSET) - E9-4 (A/B)	Always	Below 1 Ω
E8-23 (E2) - E9-1 (E)		
E8-23 (E2) - Body ground		
E8-4 (RSET) or E9-4 (A/B) - Body ground		10 kΩ or higher

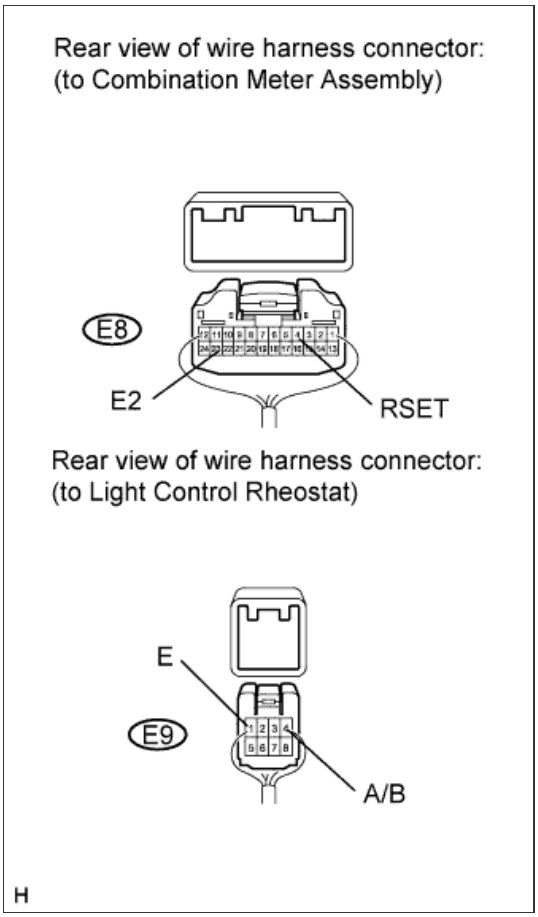

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE COM INATION METER ASSEM LY (Click here)

for Preparation Click here

DESCRIPTION

w/ Multi-information Display:
When the light control rheostat knob is turned to the left, the combination meter and vehicle interior illumination will become brighter. When the light control rheostat knob is turned to the right, the combination meter and vehicle illumination will dim.

WIRING DIAGRAM

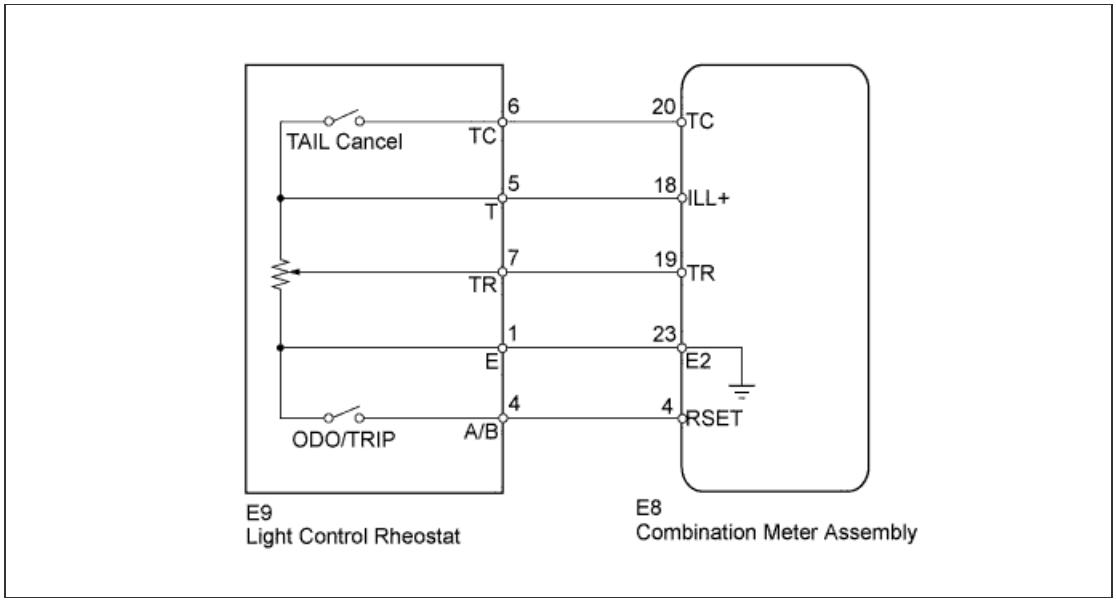

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (LIGHT CONTROL RHEOSTAT)

a. Operate the intelligent tester according to the display and select Data List (Click here).

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Tail Cancel SW*	TAIL cancel switch condition/ON or OFF	ON: TAIL cancel switch ON OFF: TAIL cancel switch OFF	-
Rheostat value	Light control rheostat switch input/Min.: 0, Max.: 100	Light control rheostat switch is fully turned right (0) → fully turned left (100)	Unit: %

HINT:

*: w/ TAIL Cancel Switch

OK:
Light brightness can be changed within specified range by manual operation.


NG → Go to step 2

OK

REPLACE COMBINATION METER ASSEMBLY (Click here)

2.INSPECT LIGHT CONTROL RHEOSTAT

a. Inspect the light control rheostat.

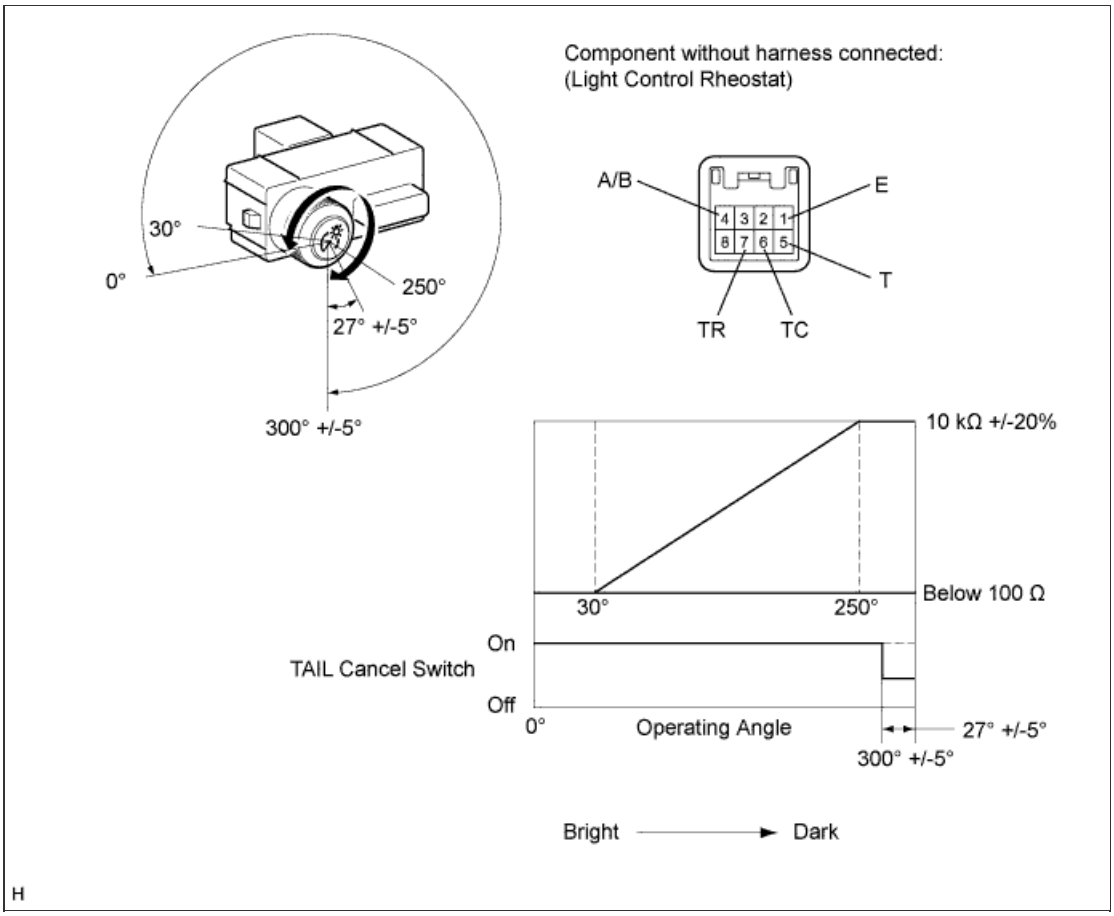

i. Remove the light control rheostat (Click here).

ii. Measure the resistance according to the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
6 (TC) - 1 (E)	TAIL cancel switch off → on	10 kΩ or higher → Below 1 Ω
5 (T) - 1 (E)	Always	10 kΩ or higher
7 (TR) - 1 (E)	Light control rheostat fully turned right → fully turned left	10 kΩ or higher → Below 100 Ω

b. Inspect the trip switch.

i. Measure the resistance according to the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
4 (A/B) - 1 (E)	TRIP switch on (Pushed)	Below 200 Ω
	TRIP switch off (Not Pushed)	1 MΩ or higher

NG → REPLACE LIGHT CONTROL RHEOSTAT (Click here)

OK

3.CHECK HARNESS AND CONNECTOR (COMBINATION METER - LIGHT CONTROL RHEOSTAT)


a. Disconnect the E8 meter connector.

b. Disconnect the E9 rheostat connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E8-18 (ILL+) - E9-5 (T)	Always	Below 1 Ω
E8-19 (TR) - E9-7 (TR)		
E8-23 (E2) - E9-1 (E)		
E8-20 (TC) - E9-6 (TC)		

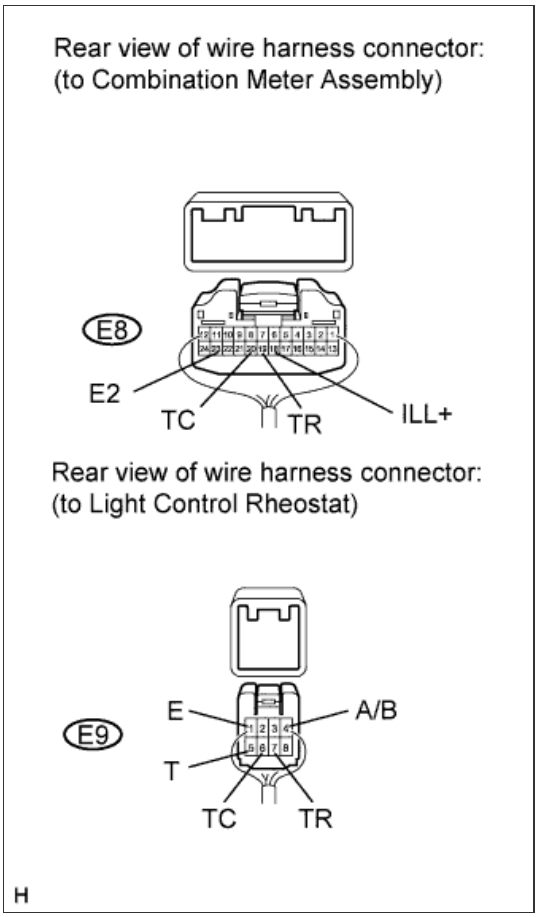

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE COMBINATION METER ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION


w/ Multi-information Display:

In this circuit, the combination meter assembly receives auto dimmer signals from the main body ECU using the CAN communication lines. When the combination meter assembly receives an auto dimmer signal, it dims the meter illumination. The main body ECU determines whether it is daytime, twilight or nighttime based on the waveform transmitted from the automatic light control sensor. If the main body ECU determines that it is daytime, the ECU does not send auto dimmer signals. Therefore, the meter illumination (warning and indicator lights) will not dim even if the driver accidentally turns the light control switch to the TAIL or HEAD position in the daytime.

HINT:

When the meter illumination does not dim at night, the light control rheostat position is in the TAIL cancel position, or there may be a malfunction in the automatic light control sensor, main body ECU, CAN communication system, wire harness or connector, or combination meter.

WIRING DIAGRAM

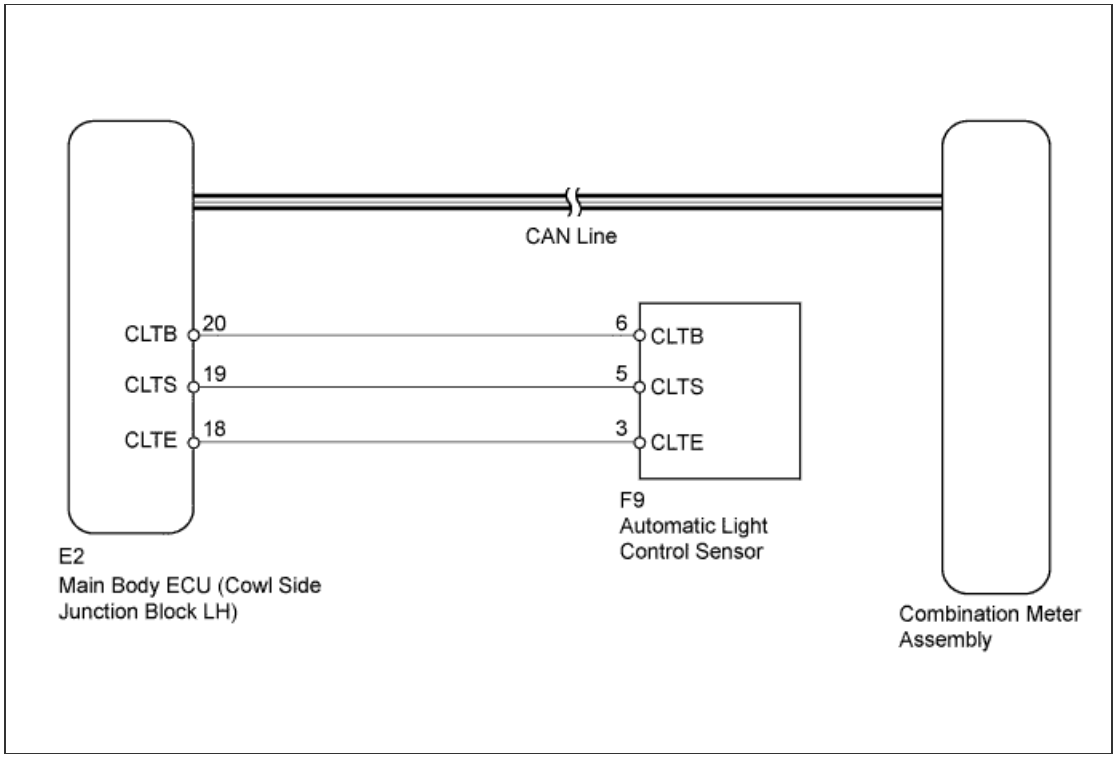

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for DTCs (Click here).

Result

Result	Proceed to
DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C
Lighting system DTC (B1244) is output	D

B	Go to CAN COMMUNICATION SYSTEM (Click here)
C	Go to CAN COMMUNICATION SYSTEM (Click here)

D → Go to LIGHTING SYSTEM (Click here)

A

2.PER ORM ACTIVE TEST USING INTELLIGENT TESTER (DIMMER SWITCH)

a. Operate the intelligent tester according to the display and select Active Test.

Main Body

Tester Display	Test Part	Control Range	Diagnostic Note
Dimmer Signal	Illumination dimming operation	ON or OFF	-

OK:

Meter illumination is dimmed when the dimmer switch is ON.

HINT:

Refer to the sensitivity setting in the customization table of the automatic light control system (Click here).

NG → Go to step 3

OK

CHECK LIGHTING SETTING (Click here)

3.REPLACE COMBINATION METER ASSEMBLY

a. Temporarily replace the combination meter with a new one (Click here).

NEXT

4.CHECK COMBINATION METER ASSEMBLY

a. Check that the operation of the combination meter returns to normal (Click here).

OK:

Operation of combination meter returns to normal.

NG → REPLACE MAIN BODY ECU (COWL SIDE UNCTION BLOCK LH)

OK

END COMBINATION METER IS DE ECTIVE)

for Preparation Click here


DESCRIPTION

w/ Multi-information Display:
If the dimmer switch is turned to TAIL, HEAD or AUTO, the main body ECU sends a TAIL relay signal, panel light illumination signal, panel relay signal, and TAIL cancel switch off signal to the combination meter. Then the meter and accessory meter become dim.

HINT:

TAIL cancel switch: When the headlights are illuminated and the TAIL cancel switch is turned on, the meter does not dim.

WIRING DIAGRAM

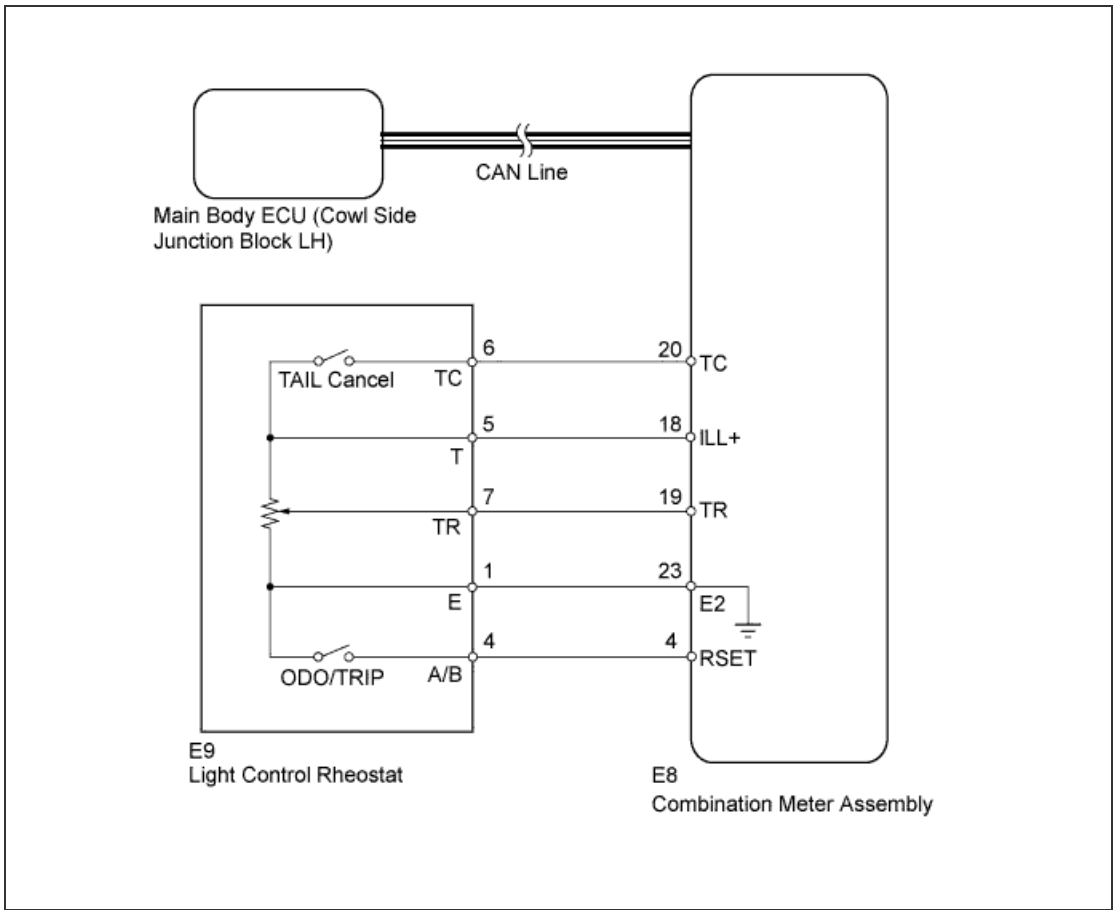

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for DTCs (Click here).

Result

Result	Proceed to
CAN communication system DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C

B	Go to CAN COMMUNICATION SYSTEM (Click here)
C	Go to CAN COMMUNICATION SYSTEM (Click here)

A

2.READ VALUE USING INTELLIGENT TESTER (LIGHT CONTROL RHEOSTAT)

a. Operate the intelligent tester according to the display and select Data List (Click here).

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Tail Cancel SW*	TAIL cancel switch condition/ON or OFF	ON: TAIL cancel switch ON OFF: TAIL cancel switch OFF	-
Rheostat value	Light control rheostat switch input/Min.: 0, Max.: 100	Light control rheostat switch is fully turned right (0) → fully turned left (100)	Unit: %

HINT:

*: w/ TAIL Cancel Switch

OK:

Light brightness can be changed within specified range by manual operation.


NG	Go to step 3

OK

REPLACE COMBINATION METER ASSEMBLY (Click here)

3.INSPECT LIGHT CONTROL RHEOSTAT

a. Inspect the light control rheostat.

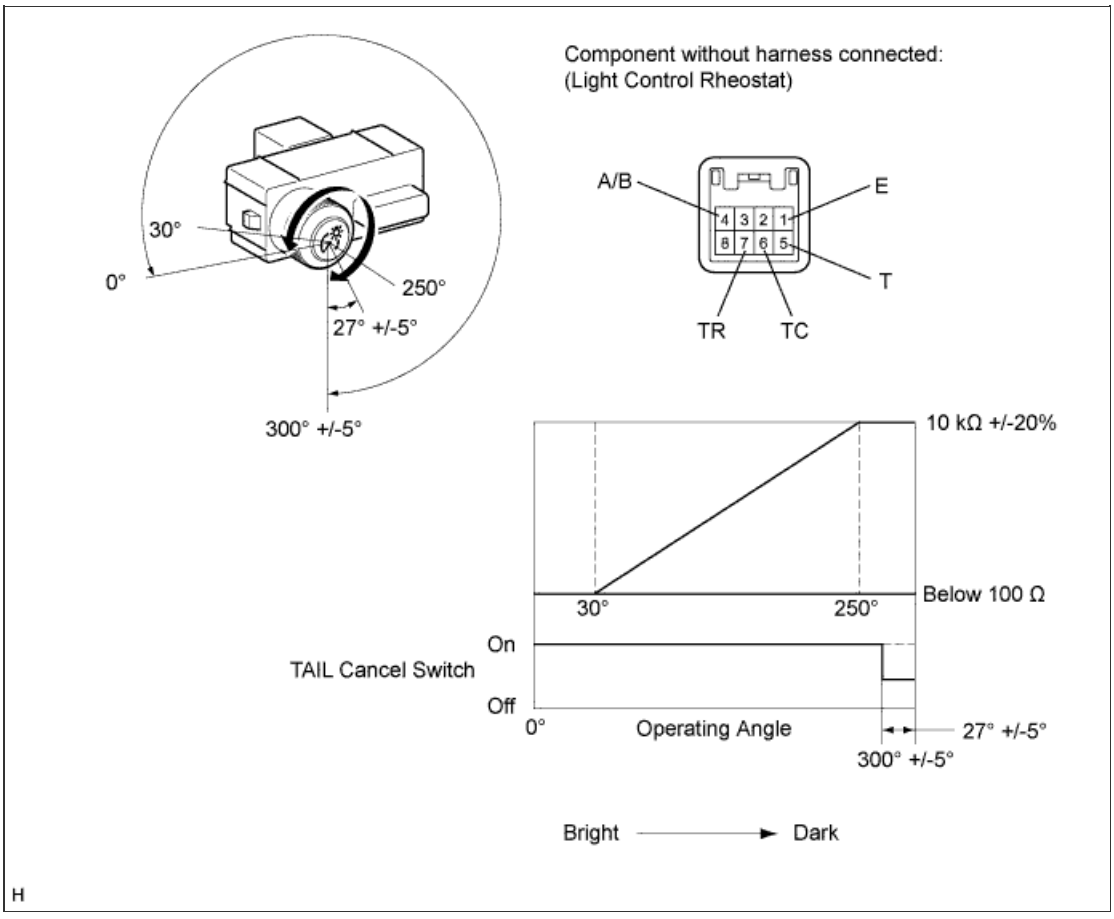

i. Remove the light control rheostat (Click here).

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
6 (TC) - 1 (E)	TAIL cancel switch off → on	10 kΩ or higher → Below 1 Ω
5 (T) - 1 (E)	Always	10 kΩ or higher
7 (TR) - 1 (E)	Light control rheostat fully turned right → fully turned left	10 kΩ or higher → Below 100 Ω

b. Inspect the trip switch.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
4 (A/B) - 1 (E)	TRIP switch on (Pushed)	Below 200 Ω
	TRIP switch off (Not Pushed)	1 MΩ or higher

NG → REPLACE LIGHT CONTROL RHEOSTAT (Click here)

OK

4.CHECK HARNESS AND CONNECTOR (COMBINATION METER - LIGHT CONTROL RHEOSTAT)


a. Disconnect the E8 meter connector.

b. Disconnect the E9 rheostat connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E8-18 (ILL+) - E9-5 (T)	Always	Below 1 Ω
E8-19 (TR) - E9-7 (TR)		
E8-23 (E2) - E9-1 (E)		
E8-20 (TC) - E9-6 (TC)		

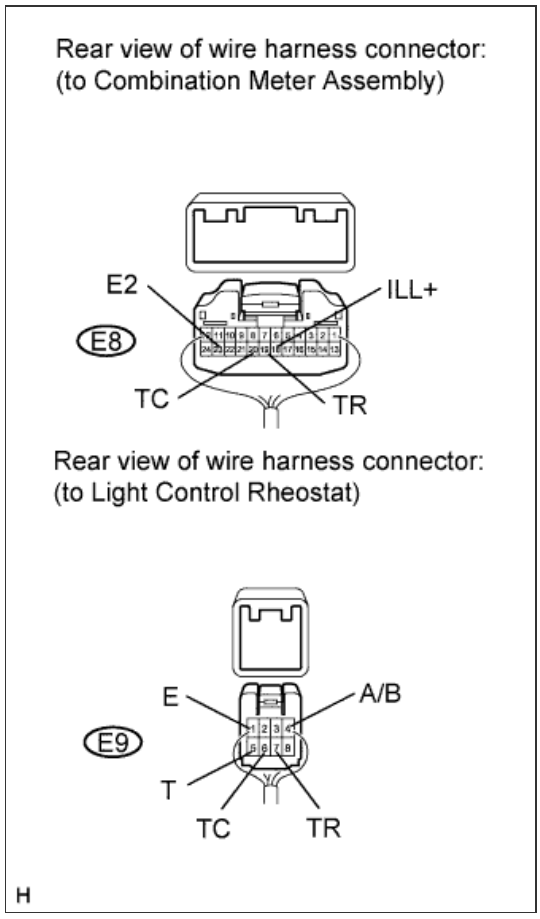

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE COMBINATION METER ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

The oil pressure sender detects the oil pressure generated when the engine is started. The combination meter determines that the engine is running when the engine speed is 400 rpm or more, and determines that the engine is cranking when the engine speed is 200 rpm or less. The oil pressure receiver gauge detects and indicates the oil pressure applied to the oil pressure sender.

WIRING DIAGRAM

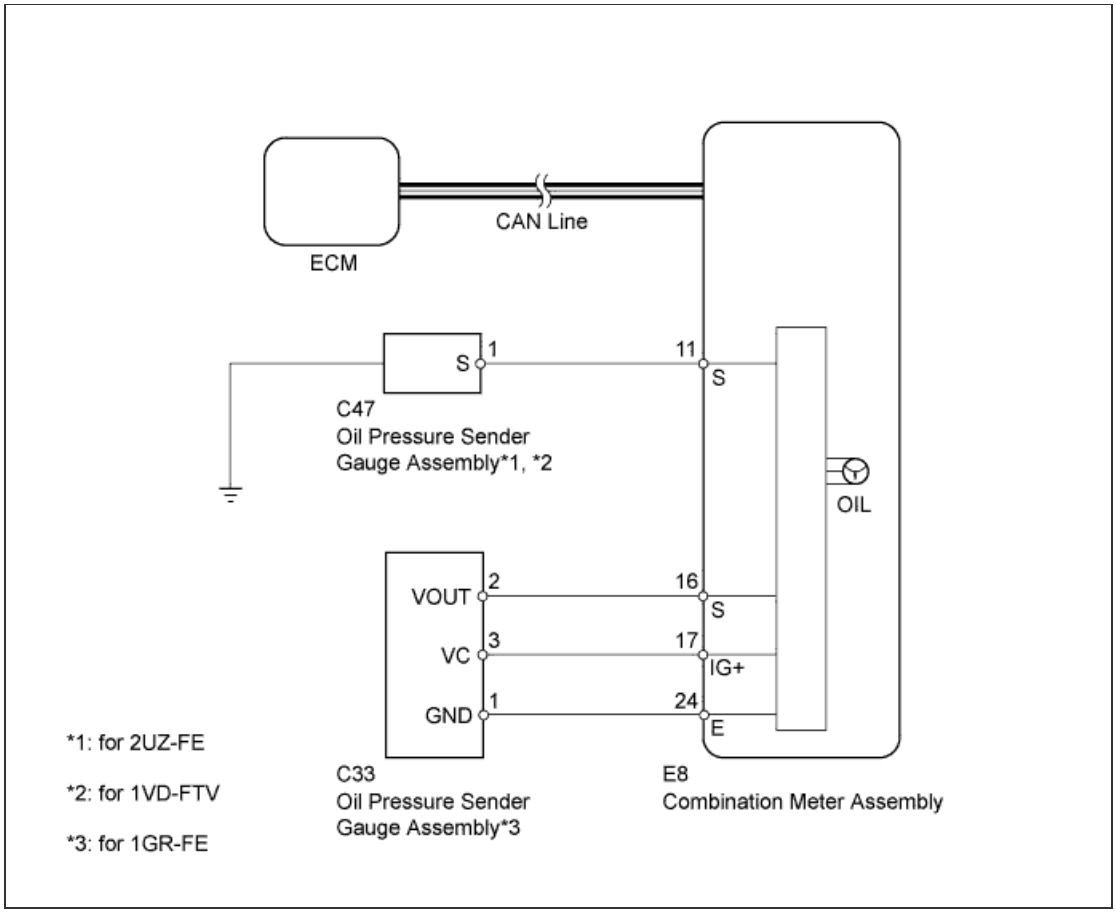

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for DTCs (Click here).

Result

Result	Proceed to
CAN communication system DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (OIL PRESSURE SENSOR)

a. Operate the intelligent tester according to the display and select Active Test (Click here).

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
Oil Pressure Meter Operation	Oil pressure receiver gauge	LOW, 1/4, 1/2, 3/4 or HIGH	Perform the test with the vehicle stopped and engine idling.

OK:
Needle indication is normal.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C


B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

3.INSPECT OIL PRESSURE GAUGE ASSEMBLY (OIL PRESSURE SENSOR)

a. Check that the needle moves in accordance with the engine speed.

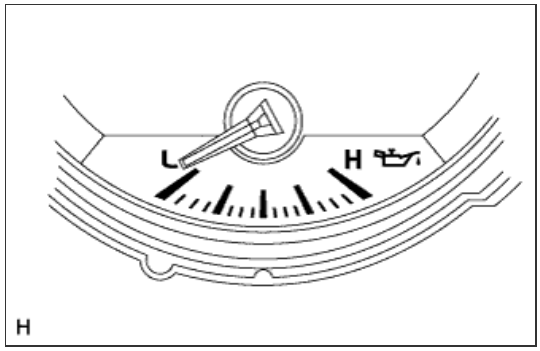

OK:
Needle is as shown in illustration when engine is stopped.
Needle moves when engine is running.

Result

Result	Proceed to
Oil pressure receiver gauge operates correctly according to engine condition	A
Oil pressure receiver gauge does not operate correctly according to engine condition (for 1GR-FE)	B
Oil pressure receiver gauge does not operate correctly according to engine condition (for 2UZ-FE)	C
Oil pressure receiver gauge does not operate correctly according to engine condition (for 1VD-FTV)	D

B → REPLACE OIL PRESSURE SENDER GAUGE ASSEMBLY (Click here)

C → REPLACE OIL PRESSURE SENDER GAUGE ASSEMBLY (Click here)

D → REPLACE OIL PRESSURE SENDER GAUGE ASSEMBLY (Click here)

A

4.CHECK HARNESS AND CONNECTOR (COMBINATION METER OIL PRESSURE SENSOR)

a. for 2UZ-FE, 1VD-FTV:

i. Disconnect the E8 meter connector.

ii. Disconnect the C47 gauge connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	pecified Condition
E8-11 ( ) - C47-1 (S)	Always	Below 1 Ω
E8-11 (S) or C47-1 (S) - Body ground	Always	10 kΩ or higher

b. for 1GR-FE:


i. Disconnect the E8 meter connector.

ii. Disconnect the C33 gauge connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E8-16 (S) - C33-2 (VOUT)	Always	Below 1 Ω
E8-17 (IG+) - C33-3 (VC)		
E8-24 (E) - C33-1 (GND)		
E8-16 (S) or C33-2 (VOUT) - Body ground	Always	10 kΩ or higher
E8-17 (IG+) or C33-3 (VC) - Body ground		

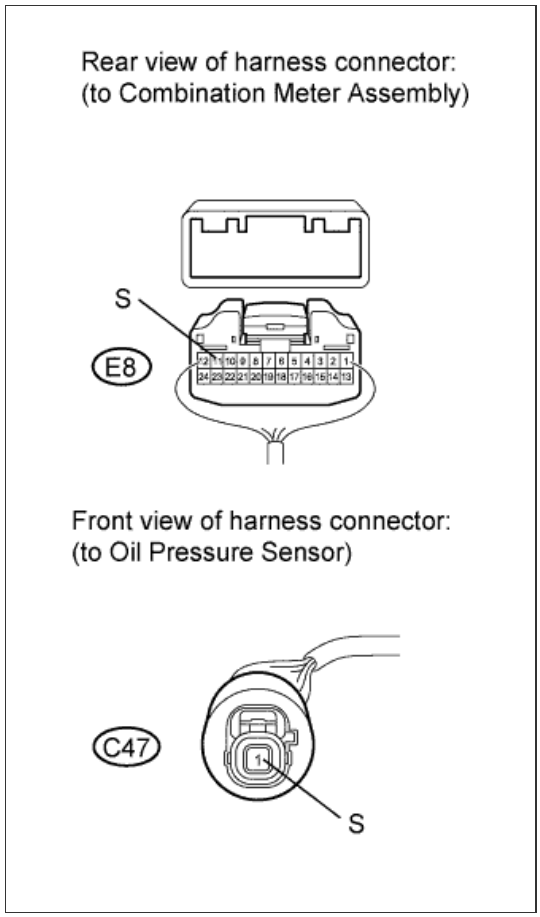

Result

Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

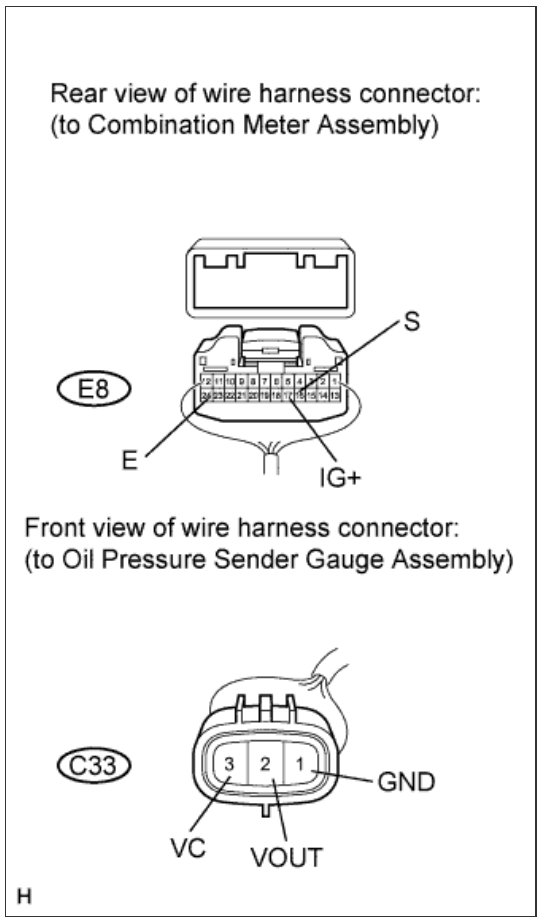

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)


A → REPAIR OR REPLACE HARNESS OR CONNECTOR

for Preparation Click here

DESCRIPTION

The oil pressure sender detects the oil pressure generated when the engine is started. The combination meter determines that the engine is running when the engine speed is 400 rpm or more, and determines that the engine is cranking when the engine speed is 200 rpm or less. The oil pressure receiver gauge detects and indicates the oil pressure applied to the oil pressure sender.

WIRING DIAGRAM

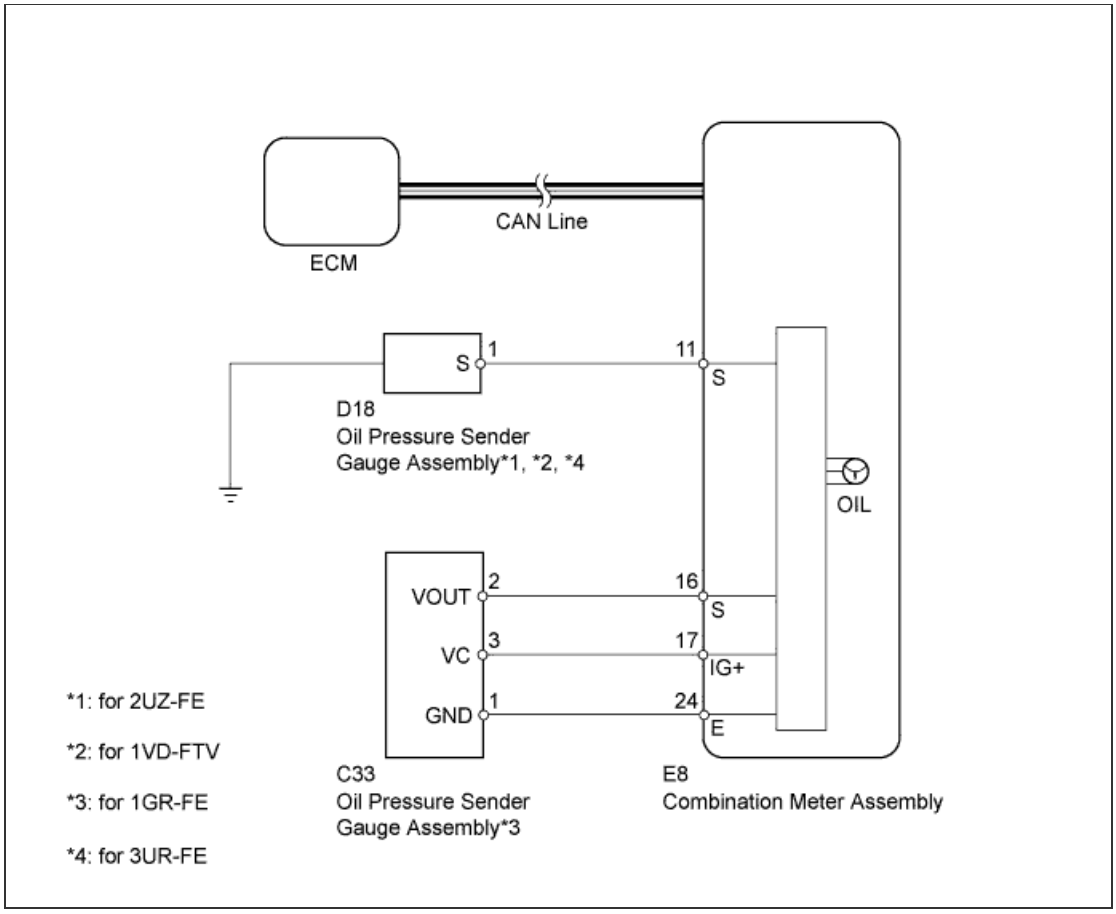

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for DTCs (Click here).

Result

Result	Proceed to
CAN communication system DTC is not output	A
CAN communication system (for LHD) DTC is output	B
CAN communication system (for RHD) DTC is output	C

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (OIL PRESSURE SENSOR)

a. Operate the intelligent tester according to the display and select Active Test (Click here).

Combination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
Oil Pressure Meter Operation	Oil pressure receiver gauge	LOW, 1/4, 1/2, 3/4 or HIGH	Perform the test with the vehicle stopped and engine idling.

OK:
Needle indication is normal.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C


B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

3.INSPECT OIL PRESSURE GAUGE ASSEMBLY (OIL PRESSURE SENSOR)

a. Check that the needle moves in accordance with the engine speed.

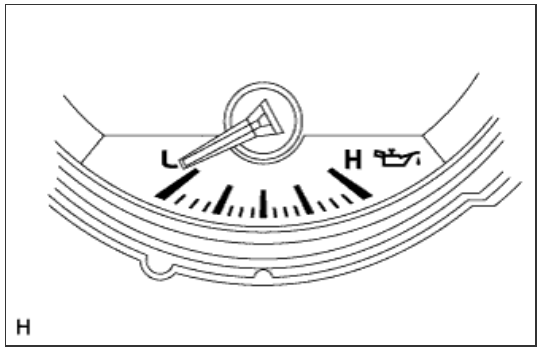

OK:
Needle is as shown in illustration when engine is stopped.
Needle moves when engine is running.

Result

Result	Proceed to
Oil pressure receiver gauge operates correctly according to engine condition	A
Oil pressure receiver gauge does not operate correctly according to engine condition (for 1GR-FE)	B
Oil pressure receiver gauge does not operate correctly according to engine condition (for 2UZ-FE)	C
Oil pressure receiver gauge does not operate correctly according to engine condition (for 3UR-FE)	D
Oil pressure receiver gauge does not operate correctly according to engine condition (for 1VD-FTV)	E

B → REPLACE OIL PRESSURE SENDER GAUGE ASSEMBLY (Click here)

C → REPLACE OIL PRESSURE SENDER GAUGE ASSEMBLY (Click here)

D → REPLACE OIL PRESSURE SENDER GAUGE ASSEMBLY (Click here)

E → REPLACE OIL PRESSURE SENDER GAUGE ASSEMBLY (Click here)

A

4.CHECK HARNESS AND CONNECTOR (COMBINATION METER OIL PRESSURE SENSOR)

a. for 2UZ-FE, 3UZ-FE, 1VD-FTV:

i. Disconnect the E8 meter connector.

ii. Disconnect the D18 gauge connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E8-11 (S) - D18-1 (S)	Always	Below 1 Ω
E8-11 (S) or D18-1 (S) - Body ground	Always	10 kΩ or higher

b. for 1GR-FE:

i. Disconnect the E8 meter connector.


ii. Disconnect the C33 gauge connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E8-16 (S) - C33-2 (VO T)	Always	Below 1 Ω
E8-17 (IG) - C33-3 (VC)		
E8-24 (E) - C33-1 (GND)		
E8-16 (S) or C33-2 (VO T) - Body ground	Always	10 kΩ or higher
E8-17 (IG) or C33-3 (VC) - Body ground		


Rear view of harness connector:
(to Combination Meter Assembly)

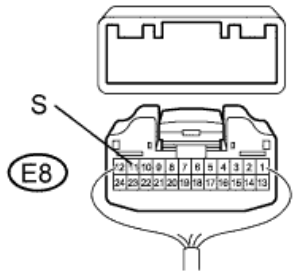


Front view of harness connector:
(to Oil Pressure Sensor)

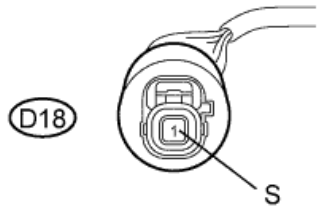

Rear view of wire harness connector:
(to Combination Meter Assembly)

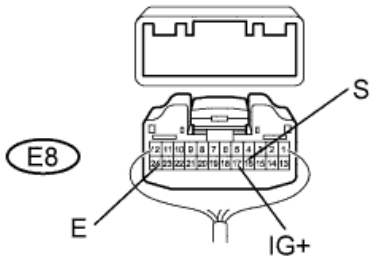

Front view of wire harness connector:
(to Oil Pressure Sender Gauge Assembly)

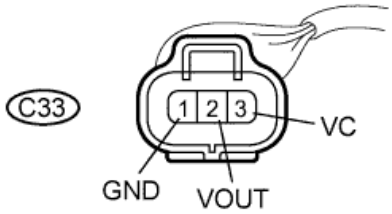

H

Result

Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A


REPAIR OR REPLACE HARNESS OR CONNECTOR

for Preparation Click here

DESCRIPTION

The voltmeter indicates the voltage applied to the IG+ terminal of the combination meter.

WIRING DIAGRAM

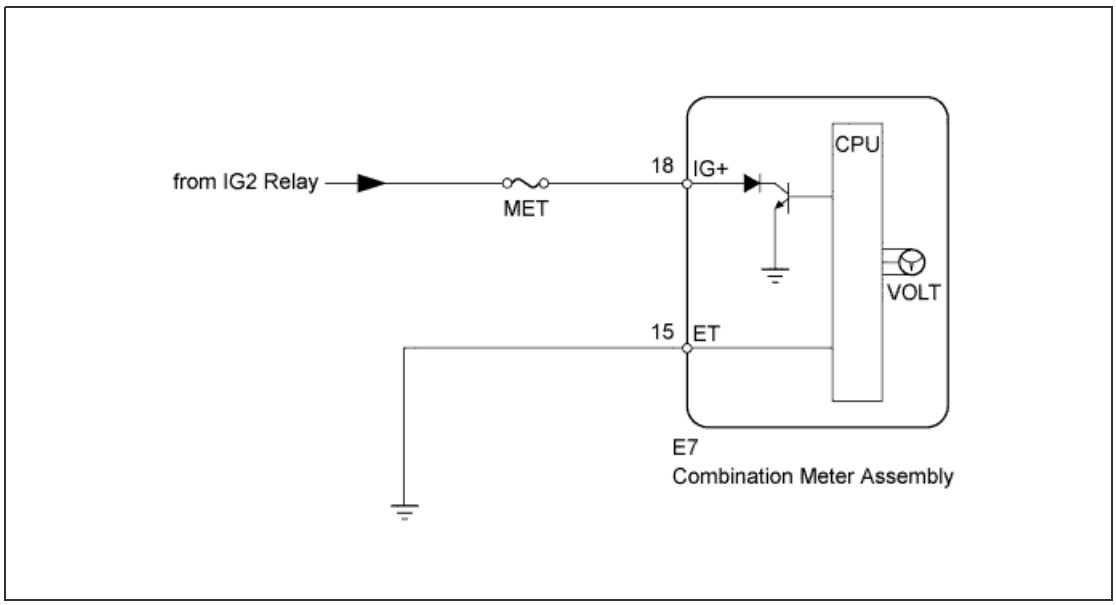

INSPECTION PROCEDURE

1.INSPECT FUSE (MET)

a. Remove the MET fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
MET fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (VOLTMETER)

a. Operate the intelligent tester according to the display and select Active Test (Click here).

Co bination Meter

Tester Display	Test Part	Control Range	Diagnostic Note
Volt meter Operation	Voltmeter	0, 3, 6, 9, 12, 15, or 18	Perform the test with the vehicle stopped and engine idling.

OK:

Needle indication is nor al.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)


C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

3.CHECK HARNESS AND CONNECTOR (COMBINATION METER - BATTERY AND BODY GROUND)

a. Disconnect the E7 meter connector.

b. Measure the resistance and voltage according to the value(s) in the tables below.

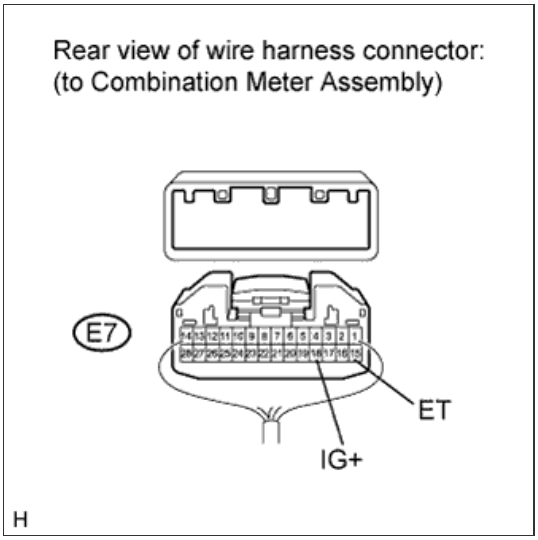

Standard Resistance:

Tester Connection	Condition	Specified Condition
E7-15 (ET) - Body ground	Always	Below 1 Ω

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E7-18 (IG+)	Engine switch on (IG)	11 to 14 V
	Engine switch off	Below 1 V

Result

Result	Proceed to
NG	A
OK (w/ Multi-information Display)	B
OK (w/o Multi-information Display)	C


B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)


A

REPAIR OR REPLACE HARNESS OR CONNECTOR

for Preparation Click here

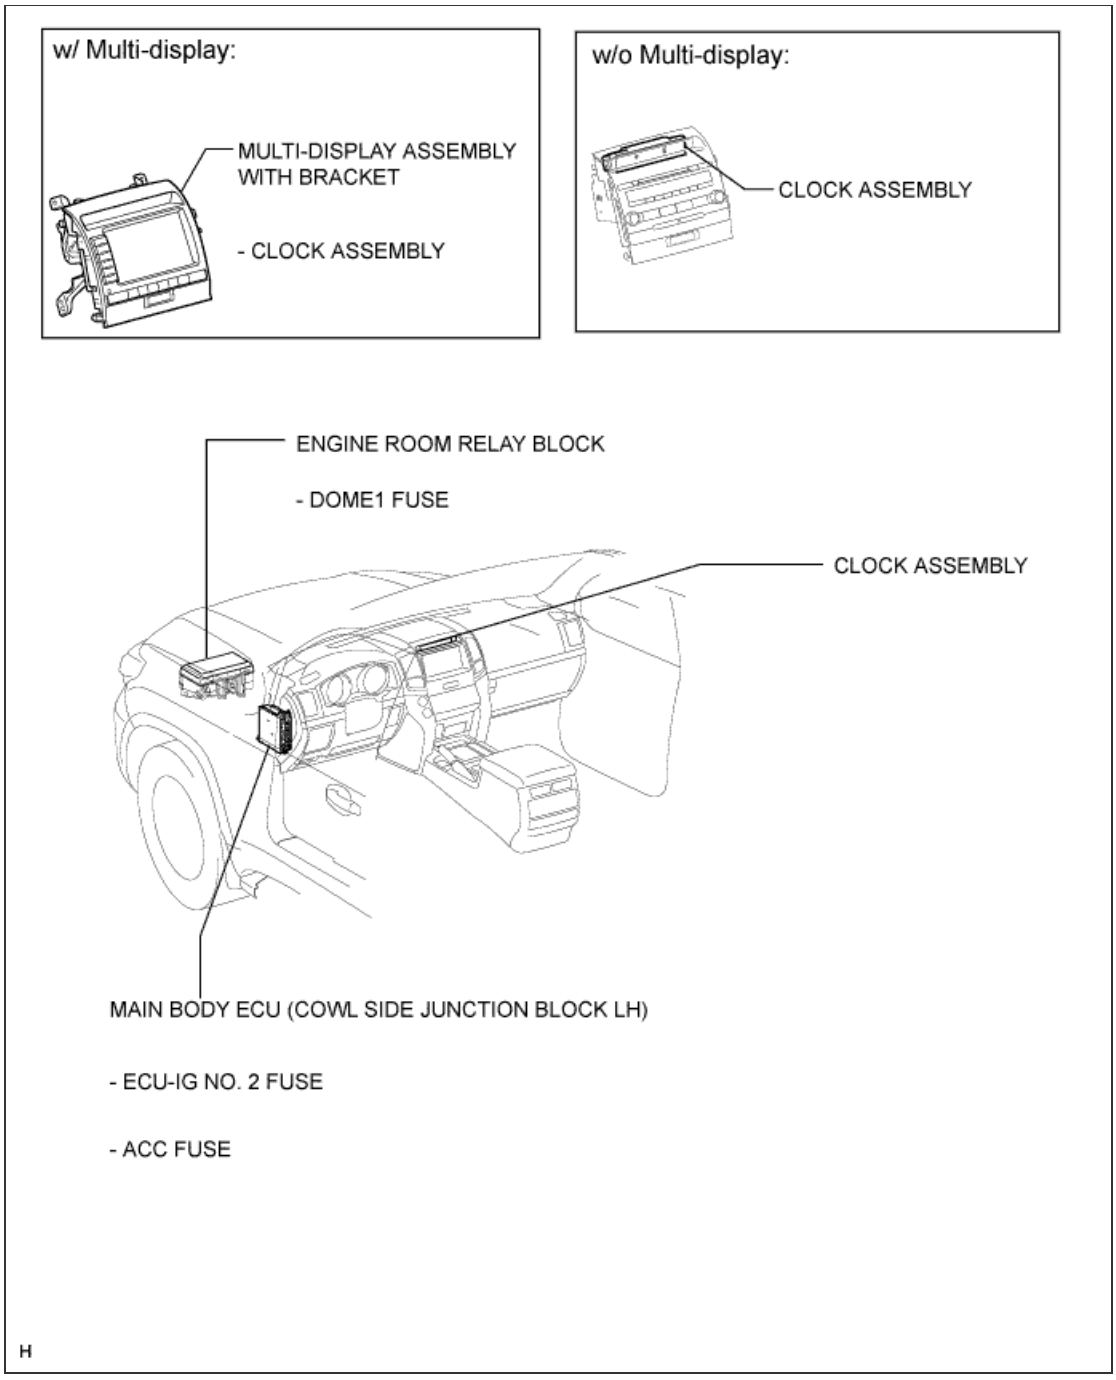


for Preparation Click here

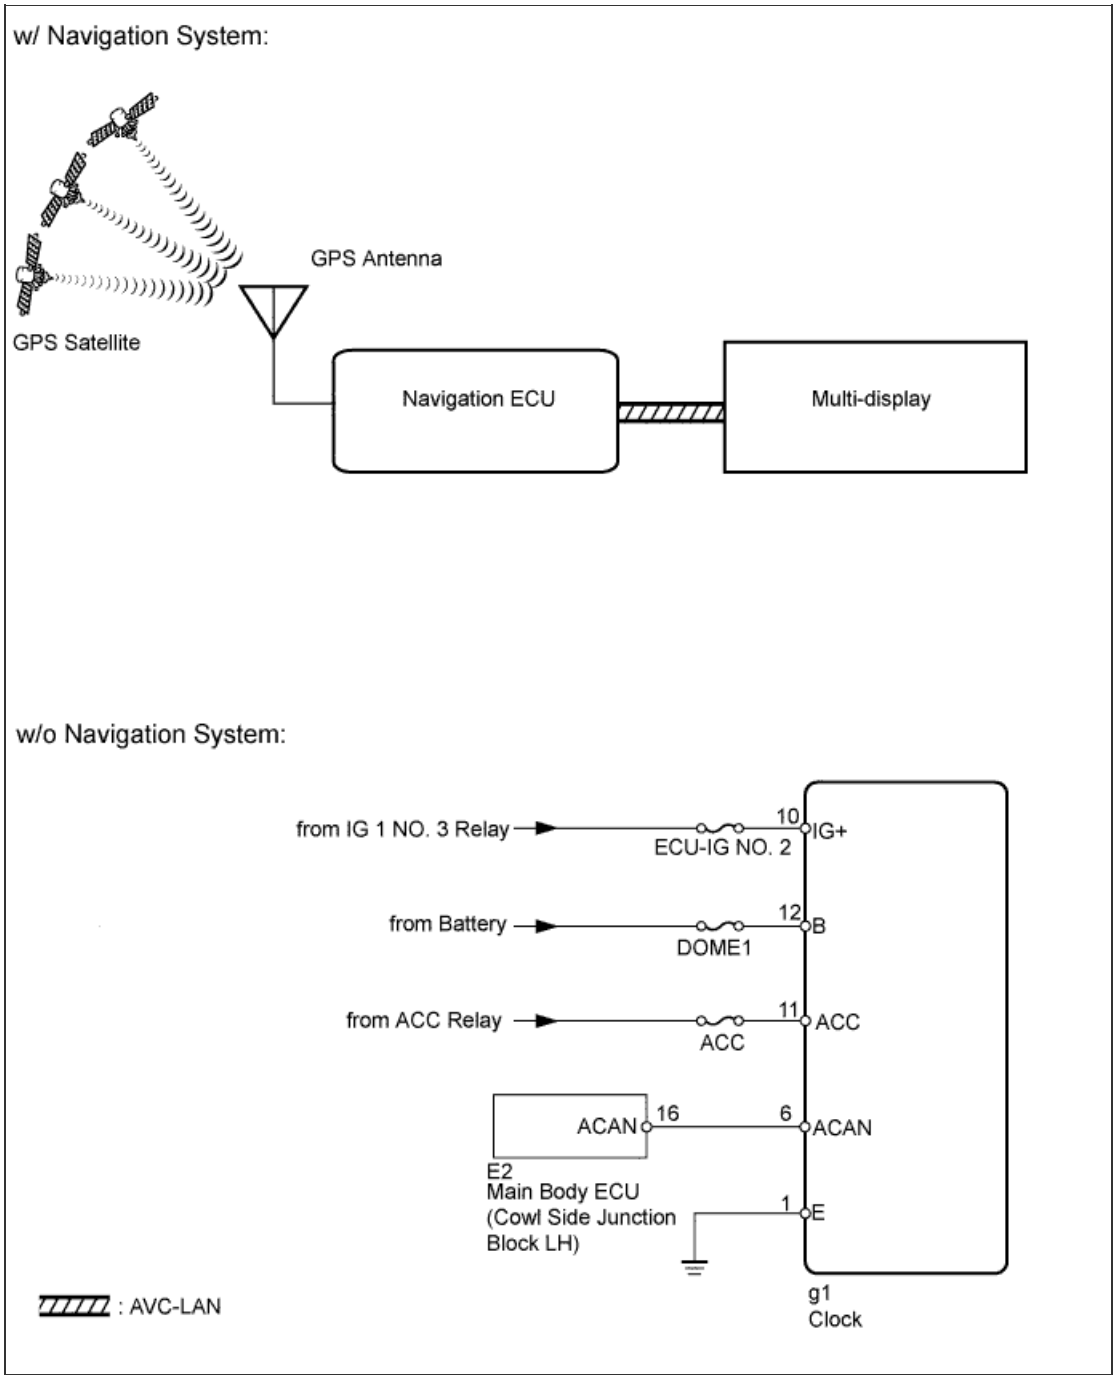


for Preparation Click here

w/ Navigation System:

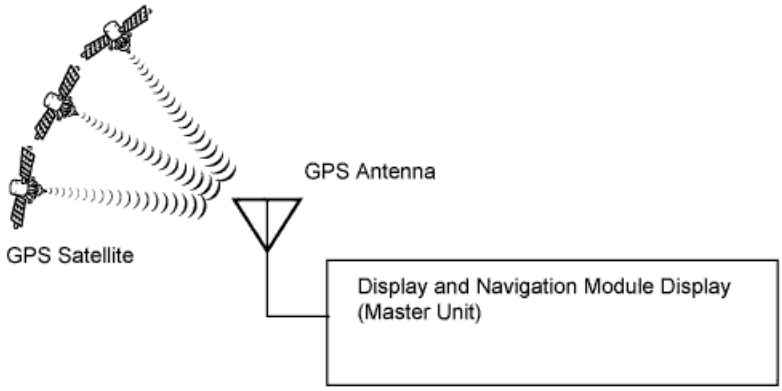

w/o Navigation System:

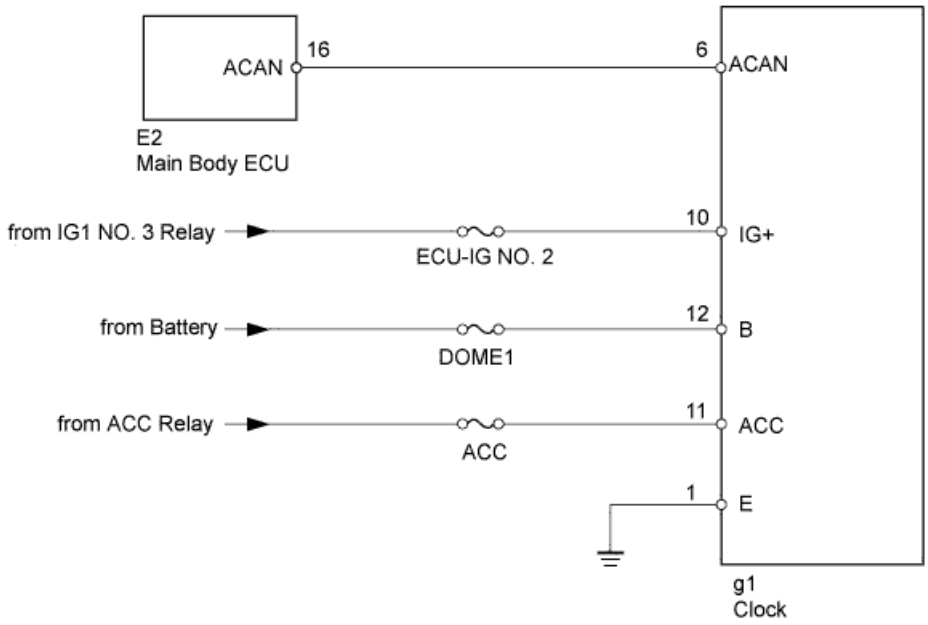

for Preparation Click here

CLOCK SYSTEM OUTLINE (w/ Navigation System)

a. The clock can be set through the multi-display screen.

b. The navigation system receives time data from Global Positioning System (GPS) satellites. The clock receives time data from the navigation system every minute, and corrects the time.

COMMUNICATION SYSTEM OUTLINE (w/ Navigation System)

a. Components of the clock system communicate with each other via the AVC-LAN.

b. The radio receiver has enough resistance (60 to 80 Ω) necessary for transmitting communication signals. This is essential for communication.

c. If a short circuit or open circuit occurs in the AVC-LAN circuit, communication is interrupted and the clock system will stop functioning.

for Preparation Click here

CLOCK SYSTEM OUTLINE (w/ Navigation System)

a. The clock can be set through the multi-display screen.

b. The navigation system receives time data from Global Positioning System (GPS) satellites. The clock receives time data from the navigation system every minute, and corrects the time.

for Preparation Click here

HINT:

Use these procedures to troubleshoot the clock system.

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.PROBLEM SYMPTOMS TABLE

a. Refer to problem symptoms table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. Go to step 5

A

4.OVERALL ANALYSIS AND TROUBLESHOOTING

a. Terminals of ECU (Click here).

NEXT

5.ADJUST, REPAIR OR REPLACE

NEXT

END

for Preparation Click here

HINT:

Use these procedures to troubleshoot the clock system.

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.PROBLEM SYMPTOMS TABLE

a. Refer to problem symptoms table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → Go to step 5

A

4.OVERALL ANALYSIS AND TROUBLESHOOTING

a. Terminals of ECU

HINT:

- **for DVD (Click here**
- **for HDD (Click here**

NEXT

5.AD UST, REPAIR OR REPLACE

NEXT

END

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. the potential causes of the symptoms are listed in order of probability in the uspected rea column of the table. Chec each symptom by chec in the suspected areas in the order they are listed. eplace parts as necessary.

Clock System (w/ Navigation System)

ymptom	uspected rea	ee pa e
Cloc is not displayed	ulti-display power source circuit	Clic here
Cloc s time is ery incorrect	Cloc loses or ains time	-
	circuit	Clic here
	eplace multi-display	Clic here
Cloc s ni ttime illumination does not operate	Illumination circuit	Clic here
	circuit	Clic here

Clock System (w/o Navigation System)

ymptom	uspected rea	ee pa e
Cloc is not displayed	Cloc power source circuit	Clic here
Cloc s time is ery incorrect	Cloc loses or ains time	-
	eplace cloc	lic here
Cloc s ni ttime illumination does not operate	Illumination circuit	Clic here
	eplace cloc	lic here

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the uspected rea column of the table. Check each symptom by checking the suspected areas in the order they are listed. eplace parts as necessary.


Clock System (w/ Navigation System)


Symptom	Suspected rea	See page
Clock is not displayed	avigation pp wer source circuit (for D	Click here
	avigation CU power source circuit (for HDD)	Click here
Clocks time is very incorrect	Clock loses or gains time	
	eplace multi display	Click here
Clocks nighttime illumination does not operate	Illumination circuit (for D	Click here
	Illumination circuit (for HDD)	Click here
	eplace multi display	Click here

Clock System (w/o Navigation System)

Symptom	Suspected Area	See page
Clock is not displayed	Clock power source circuit	Click here
Clocks time is very incorrect	Clock loses or gains time	
	eplace clock	Click here
Clocks nighttime illumination does not operate	Illumination circuit	Click here
	eplace clock	Click here

for Preparation Click here

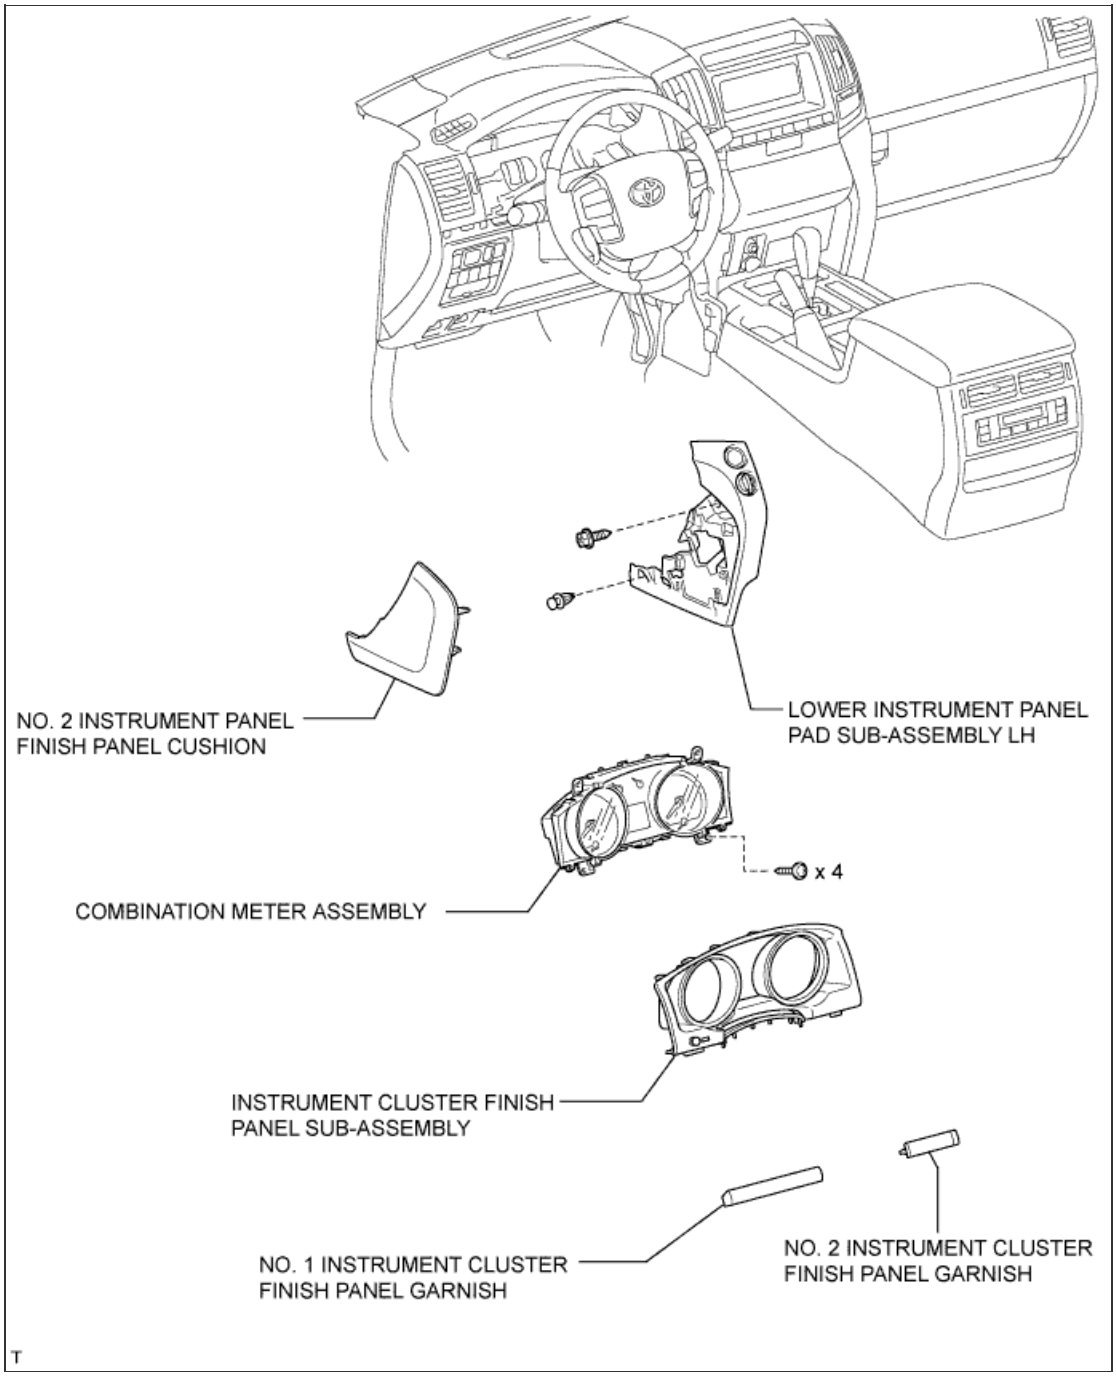

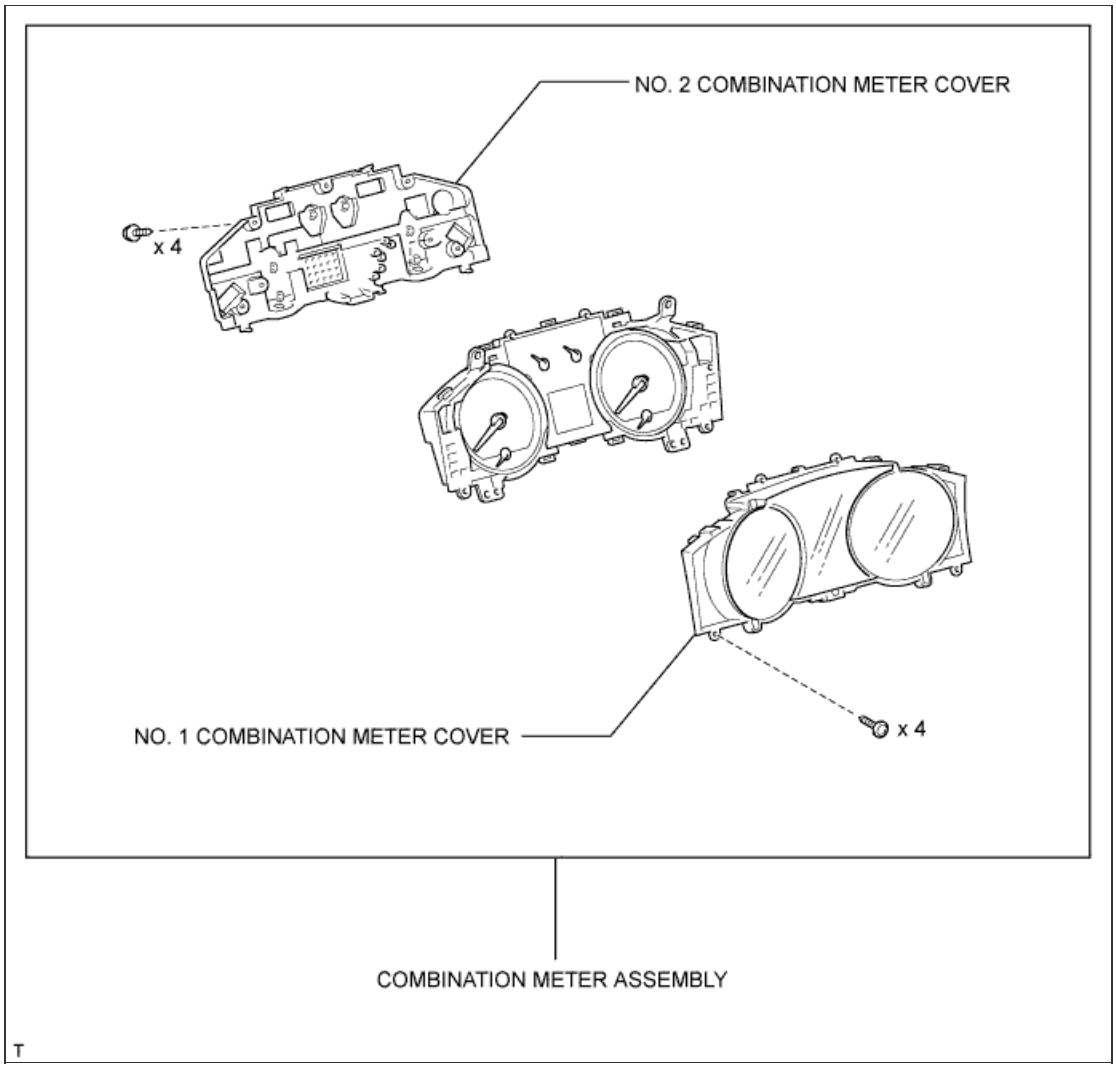
NO. 2 COMBINATION METER COVER
x 4
NO. 1 COMBINATION METER COVER
x 4
COMBINATION METER ASSEMBLY
T

for Preparation Click here

1. DISABLE AUTO TILT AWAY FUNCTION

a. Disable the function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:

Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.

b. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully e tend and lower the steering column assembly.

c. Turn the engine switch off.

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

3. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

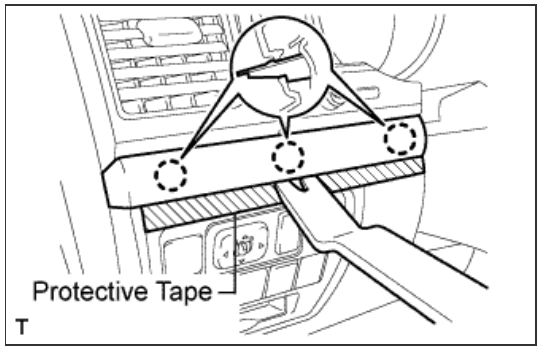

4. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

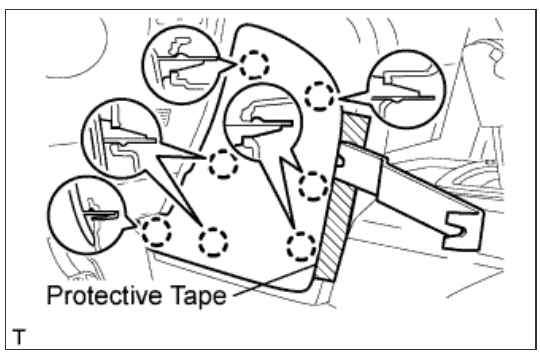


5. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

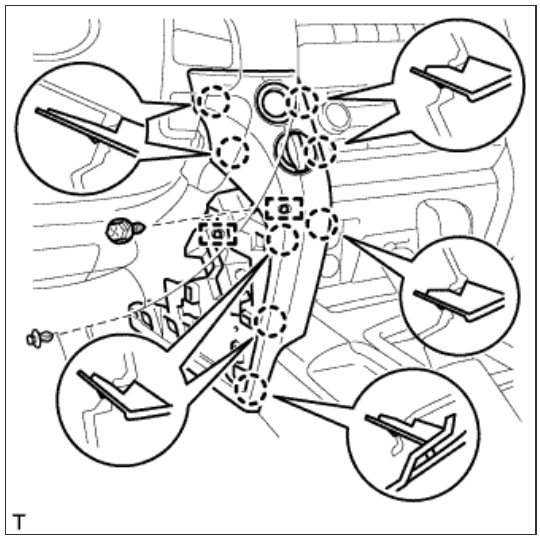

6. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

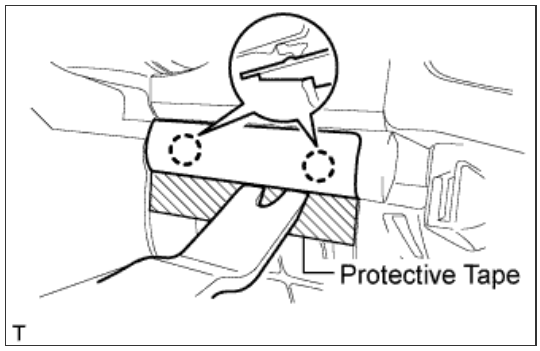


7. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 4 claws.

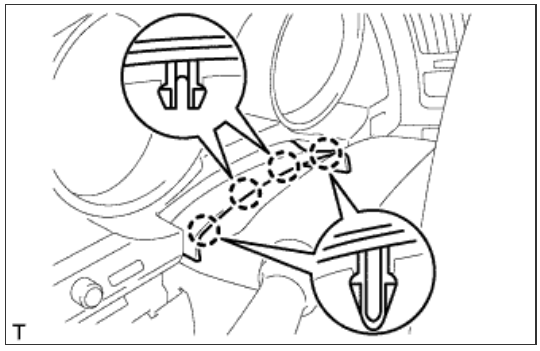

b. Detach the 9 claws.

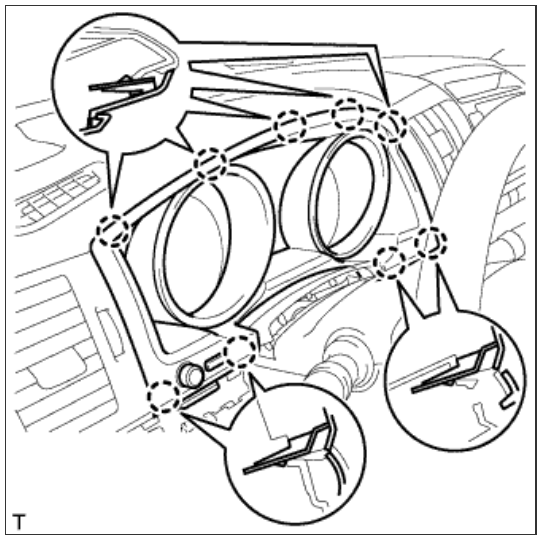


c. Remove the finish panel and disconnect the connector.

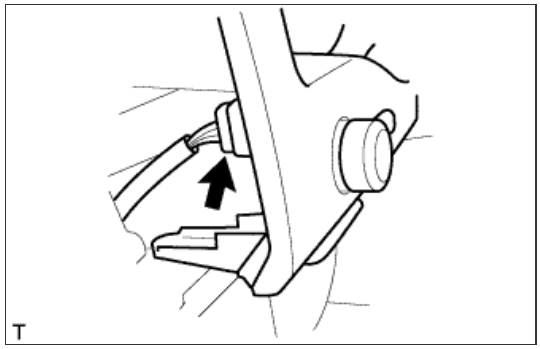


8. REMOVE COMBINATION METER ASSEMBLY

a. Remove the 4 screws.

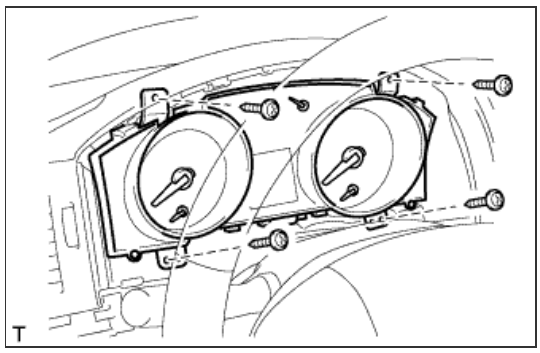

b. Disconnect the connectors, and remove the combination meter by pulling it up in the direction of the arrow in the illustration.

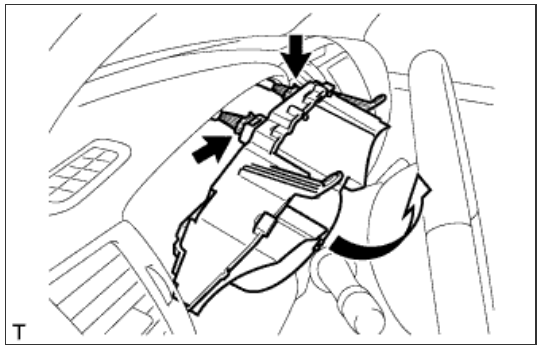

for Preparation Click here

1. DISABLE AUTO TILT AWAY FUNCTION

a. Disable the function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:

Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.

b. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully e tend and lower the steering column assembly.

c. Turn the engine switch off.

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

3. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

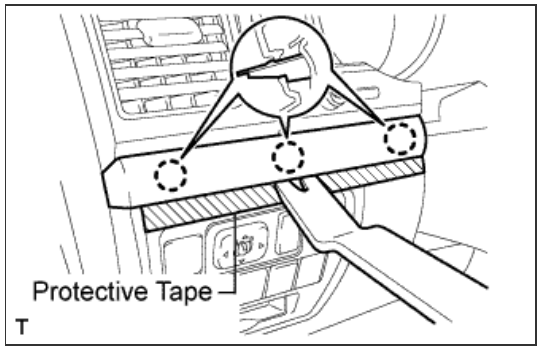

4. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

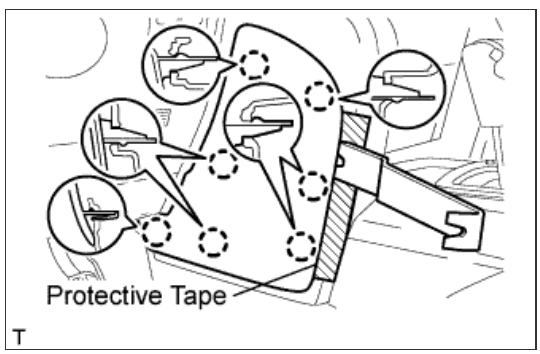


5. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

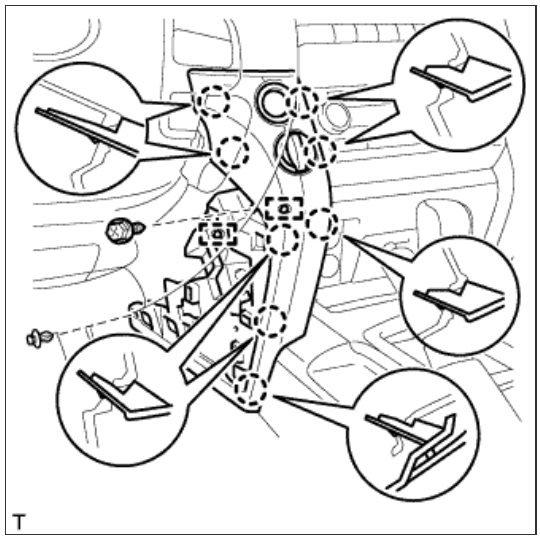

6. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

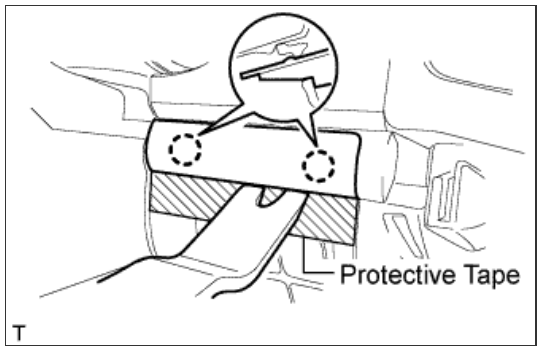


7. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 4 claws.

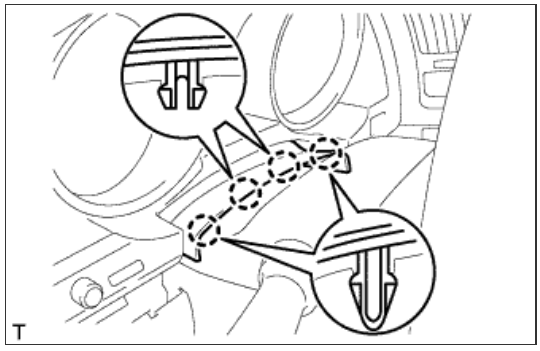

b. Detach the 9 claws.

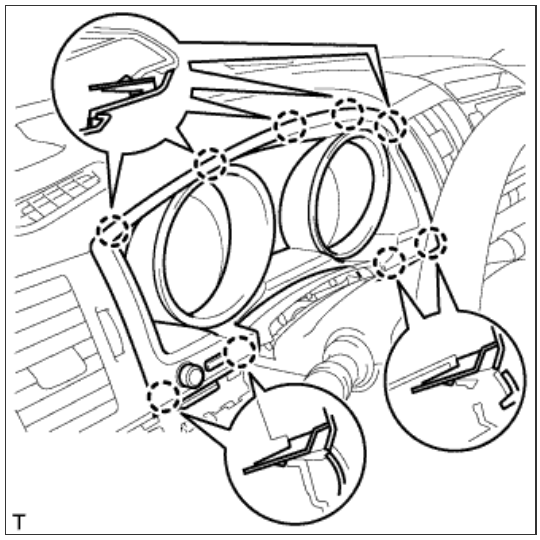


c. Remove the finish panel and disconnect the connector.

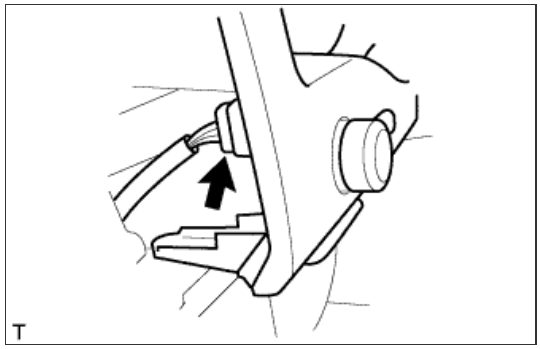


8. REMOVE COMBINATION METER ASSEMBLY

a. Remove the 4 screws.

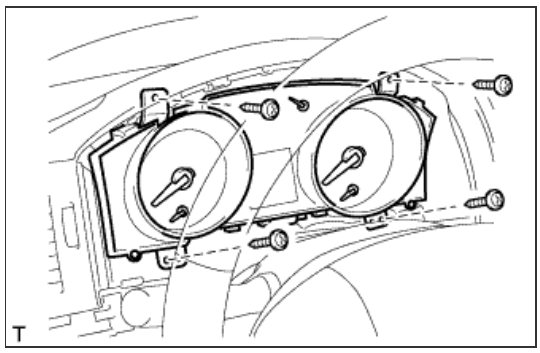

b. Disconnect the connectors, and remove the combination meter by pulling it up in the direction of the arrow in the illustration.

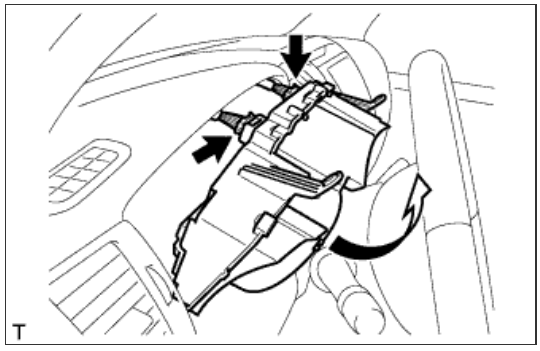


for Pr paration Cli h r

REMOVE NO. 2 COMBINATION METER COVER

a. Remove the 4 screws.


b. Detach the 4 claws and remove the cover.

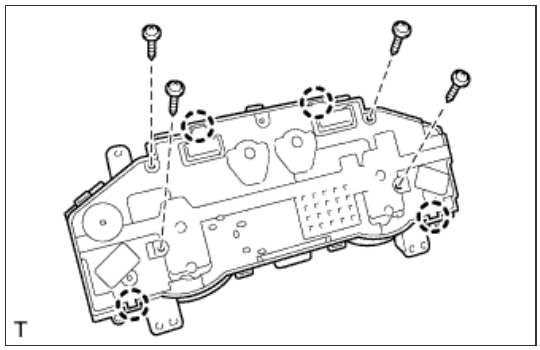

2. REMOVE NO. 1 COMBINATION METER COVER

a. Remove the 4 screws.

b. Detach the 9 claws and remove the cover.

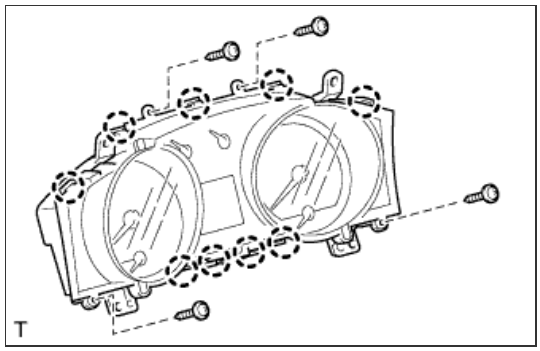


for Pr paration Cli h r

INSTALL NO. 1 COMBINATION METER COVER

a. Attach the 9 claws to install the cover.


b. Install the 4 screws.

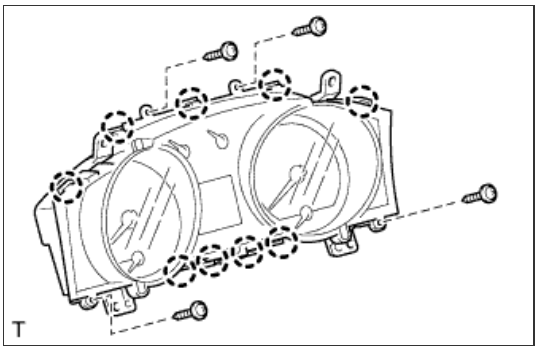

2. INSTALL NO. 2 COMBINATION METER COVER

a. Attach the 4 claws to install the cover.


b. Install the 4 screws.

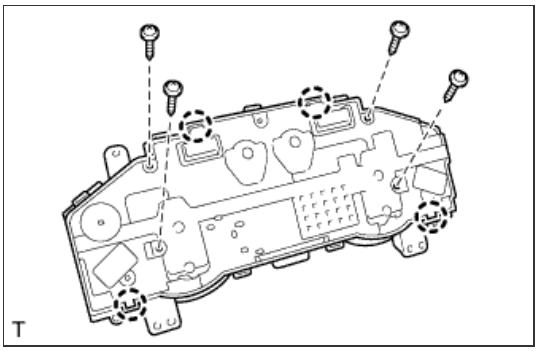


for Preparation Click here

1. INSTALL COMBINATION METER ASSEMBLY

a. Connect the connectors.

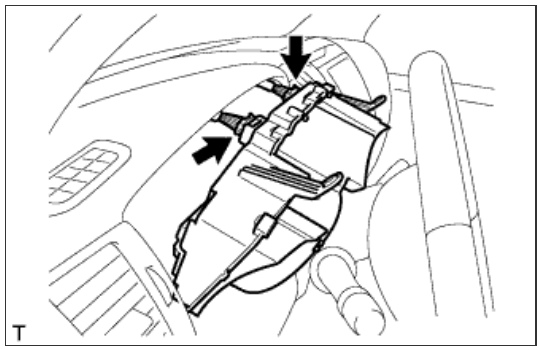


b. Install the combination meter with the 4 screws.

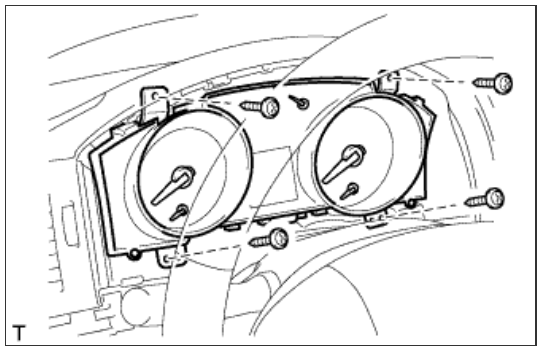


2. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connector.

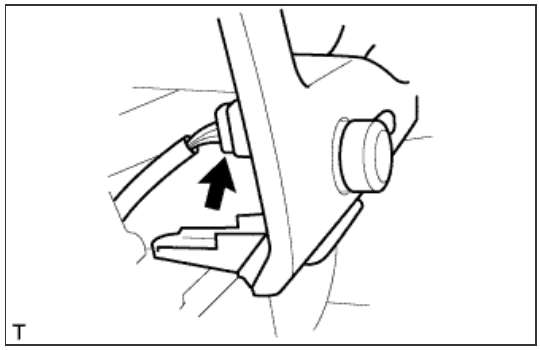

b. Attach the 9 claws to install the finish panel.

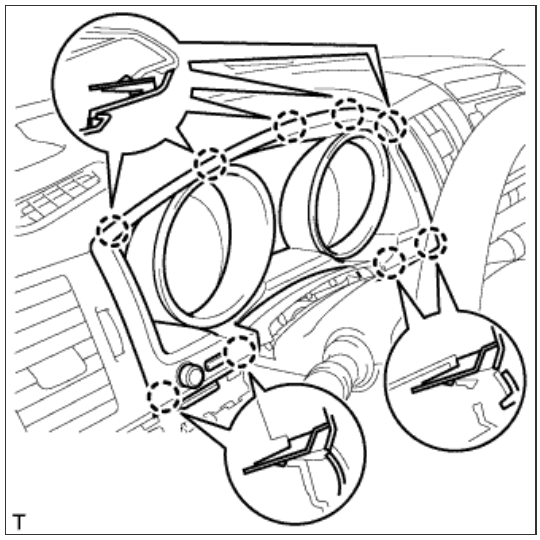


c. Attach the 4 claws.

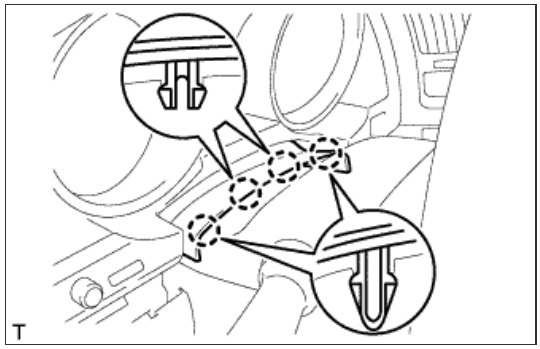

3. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

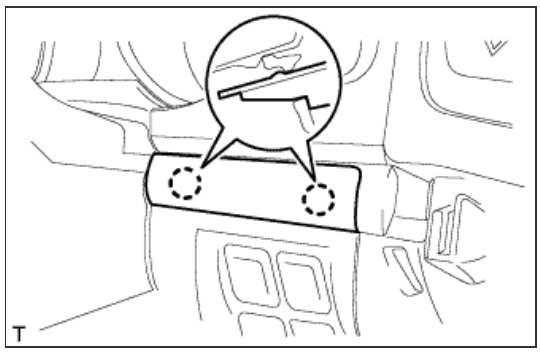


4. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

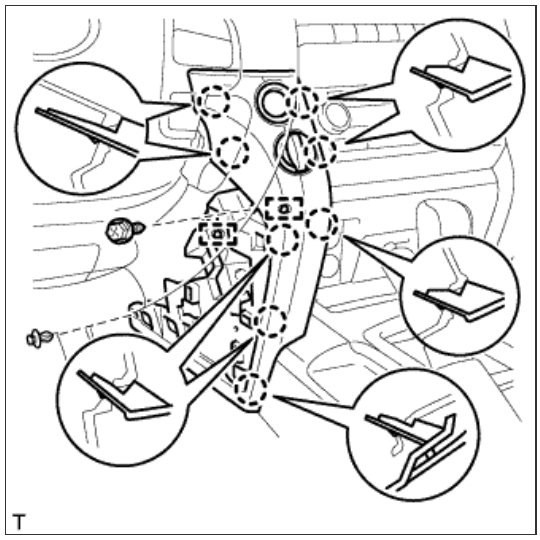


5. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

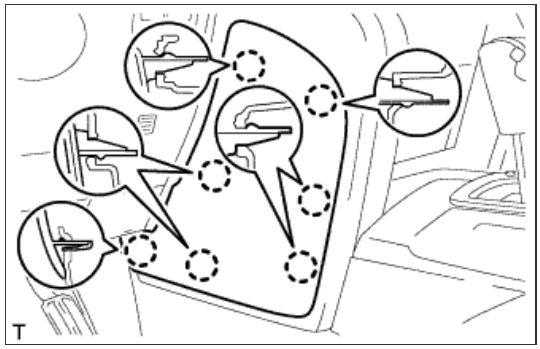

6. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

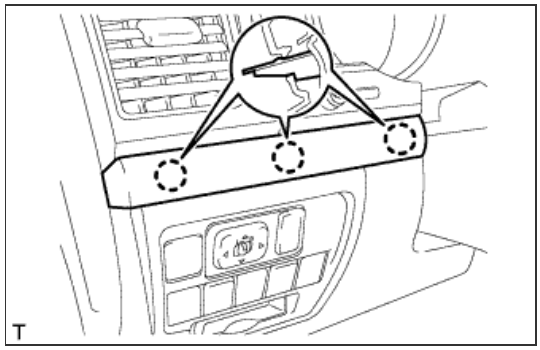

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:

- **Reset the Autoaway/Return function setting to the previous condition by changing the customize parameter (Click here).**
- **When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).**


for Preparation Click here

1. INSTALL COMBINATION METER ASSEMBLY

a. Connect the connectors.

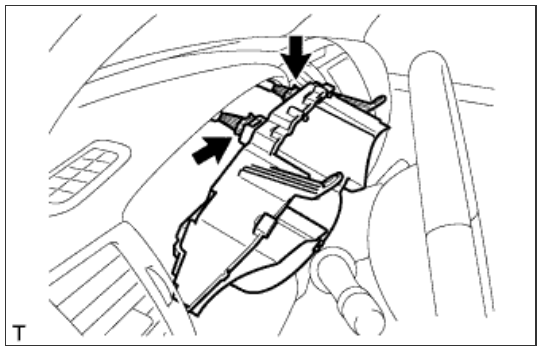


b. Install the combination meter with the 4 screws.

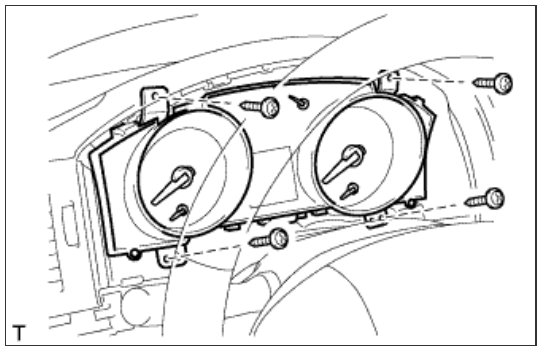


2. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connector.

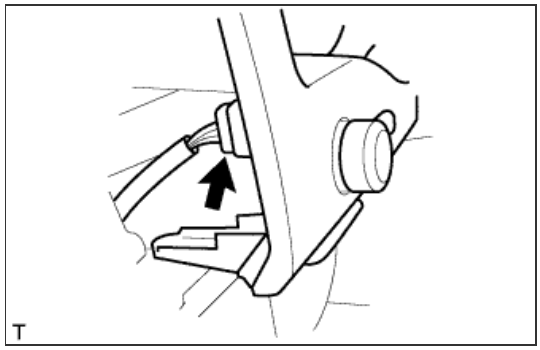

b. Attach the 9 claws to install the finish panel.

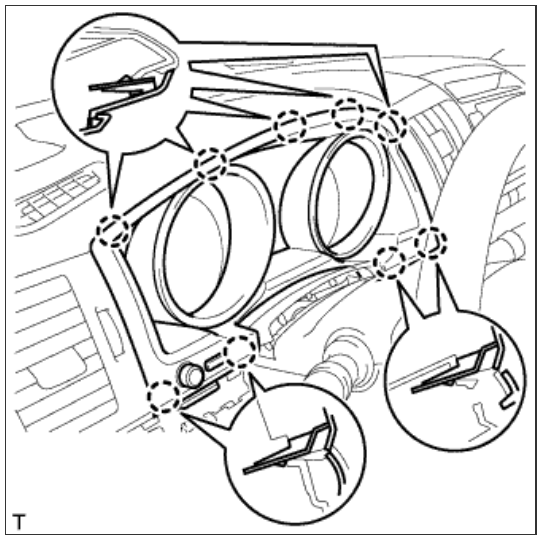


c. Attach the 4 claws.

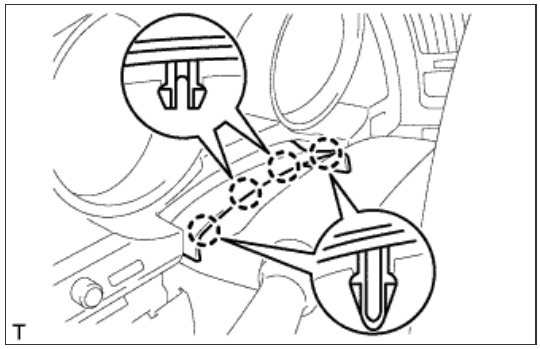

3. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

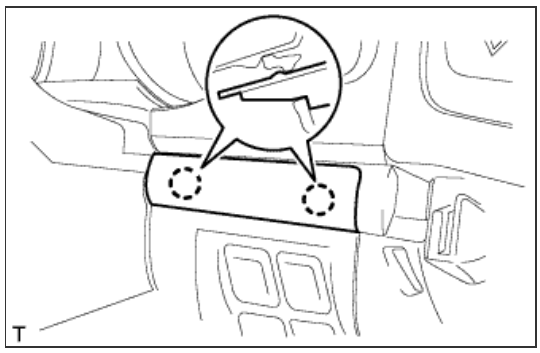


4. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

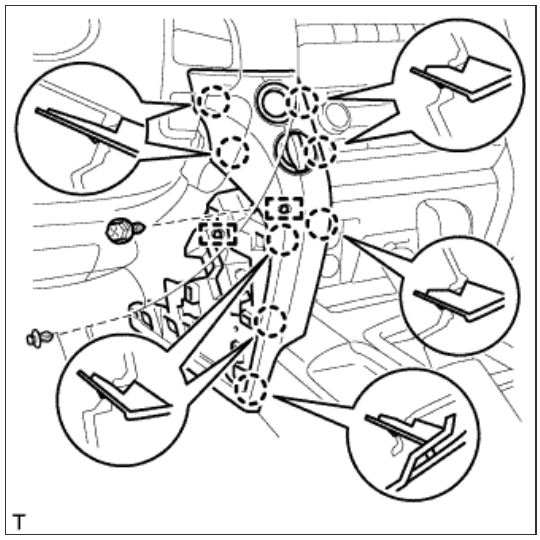


5. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

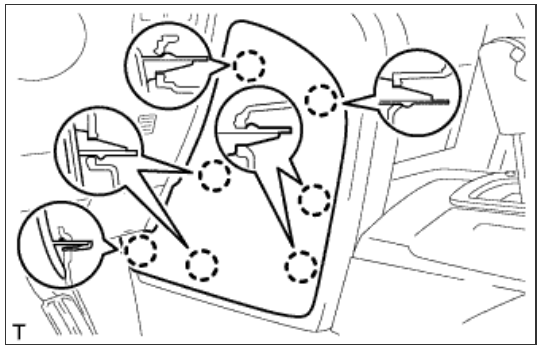

6. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

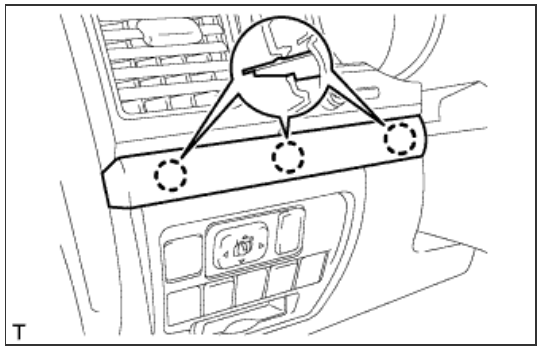



7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

- **Reset the Autoaway/Return function setting to the previous condition by changing the customize parameter (Click here).**
- **When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).**

for Preparation Click here

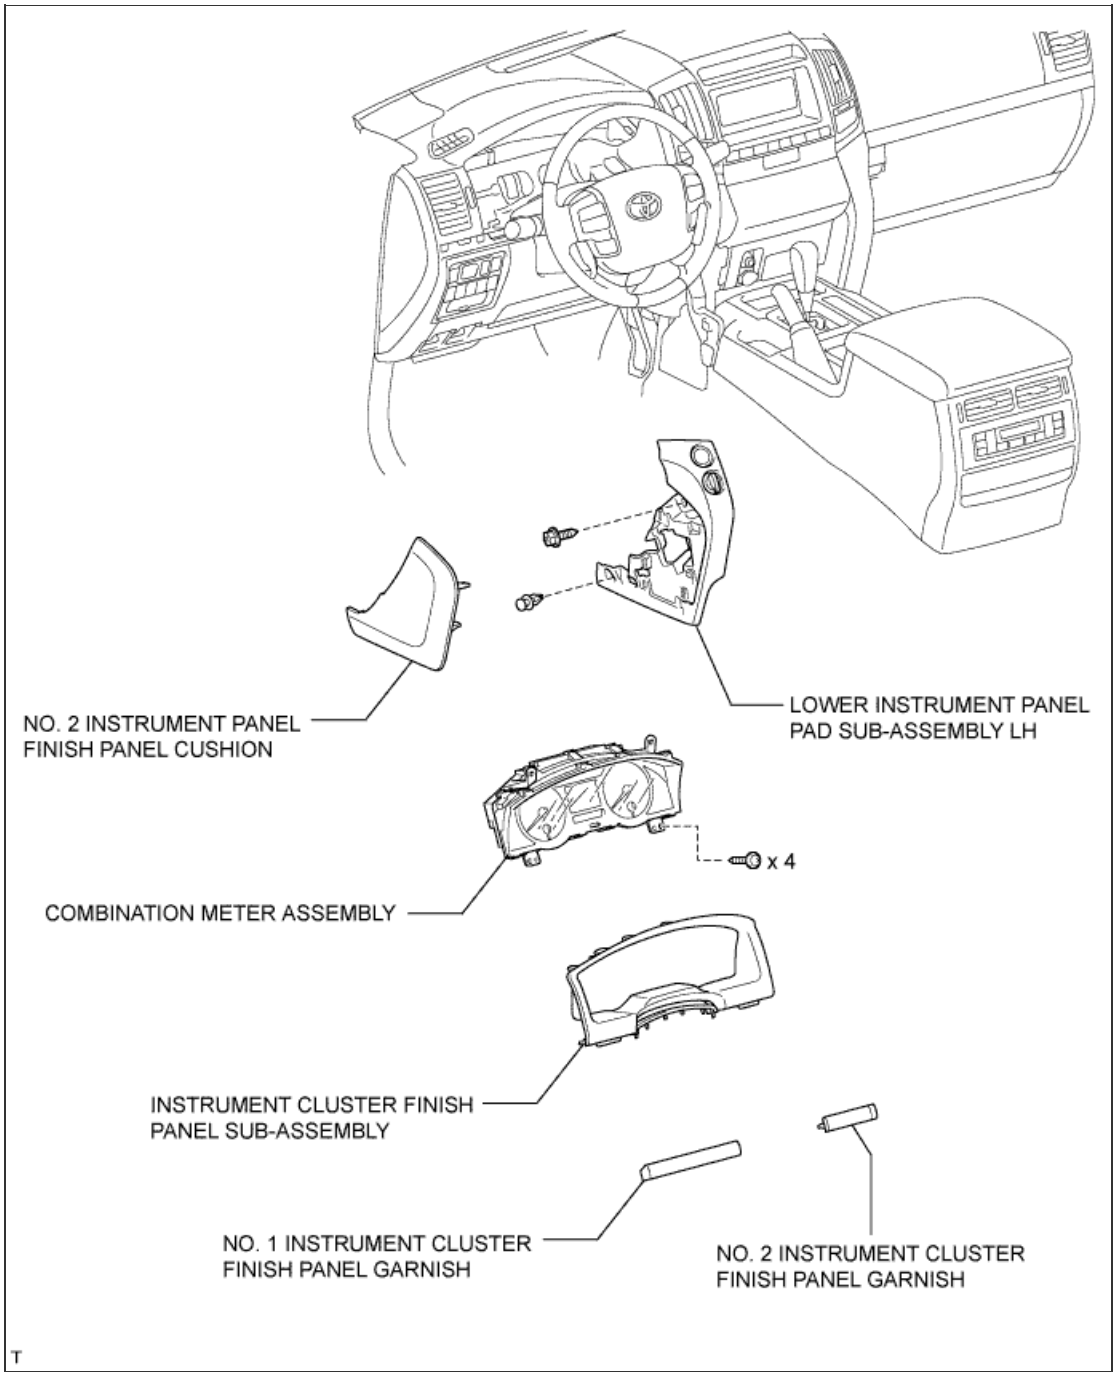

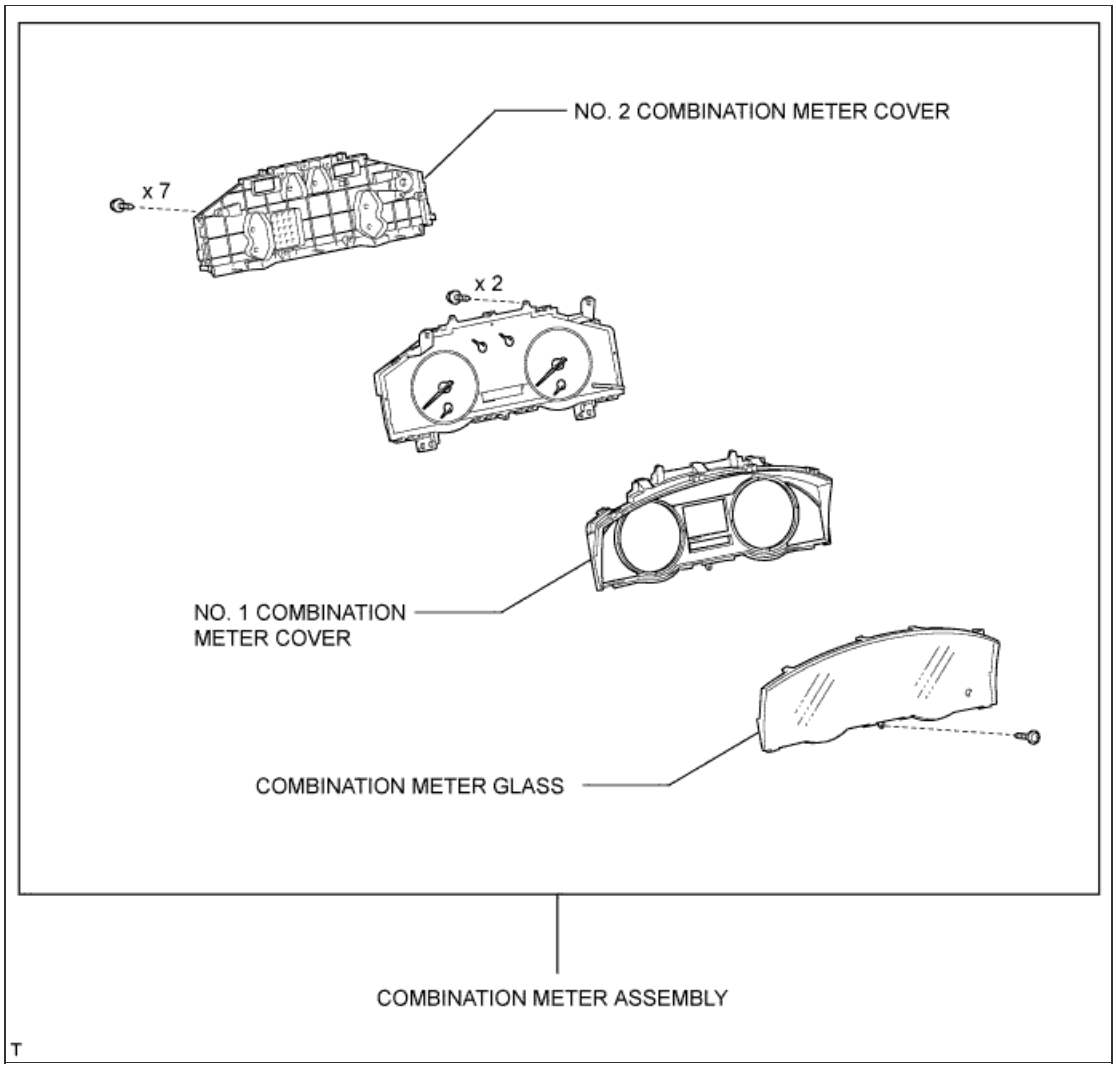
NO. 2 COMBINATION METER COVER
x 7
x 2
NO. 1 COMBINATION METER COVER
COMBINATION METER GLASS
COMBINATION METER ASSEMBLY
T

for Preparation Click here

1. REMOVE DISABLE AUTO TILT AWAY FUNCTION

a. for Power Tilt and Power Telescopic Steering Column:

i. Disable the Autoaway/Return function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:

Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.

ii. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully extend and lower the steering column assembly.

iii. Turn the engine switch off .

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

3. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

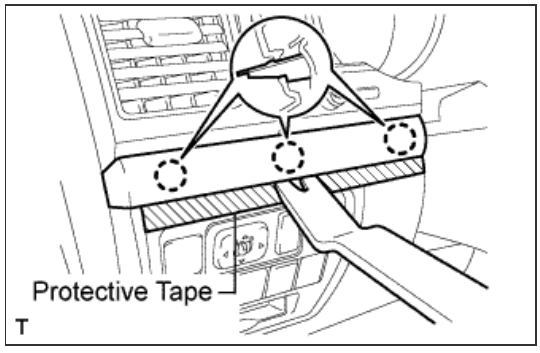

4. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

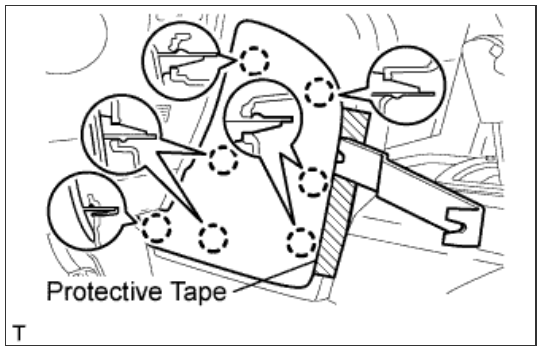


5. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

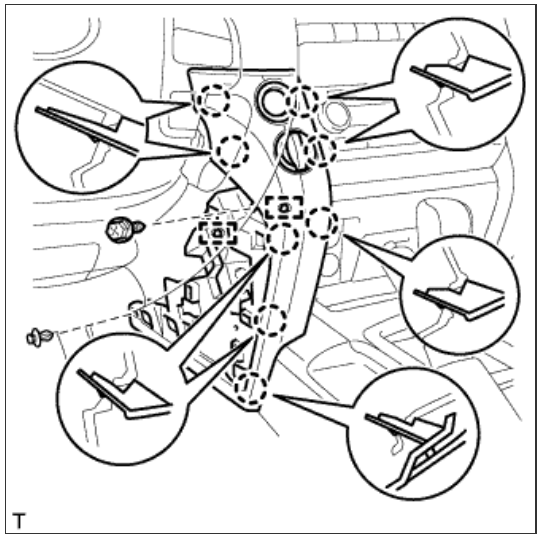

6. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

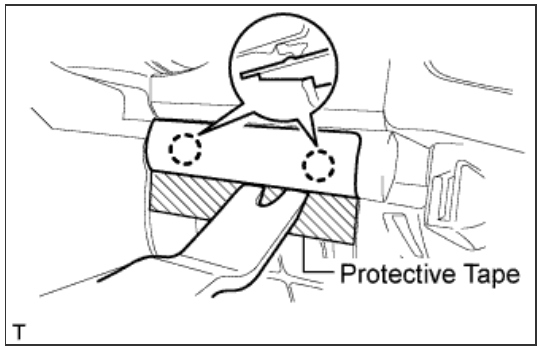


7. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. for Manual Tilt and Manual Telescopic Steering Column:

i. Operate the tilt and telescopic lever to fully extend and lower the steering column assembly.

b. Detach the 4 claws.

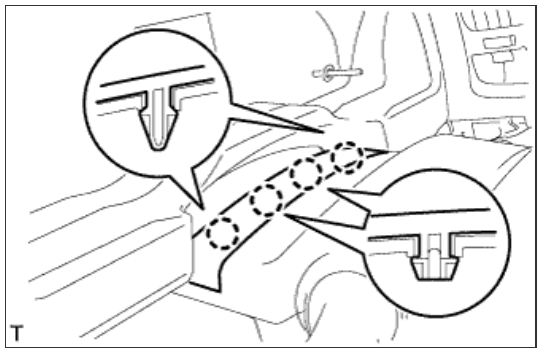


c. Detach the 9 claws and remove the finish panel.

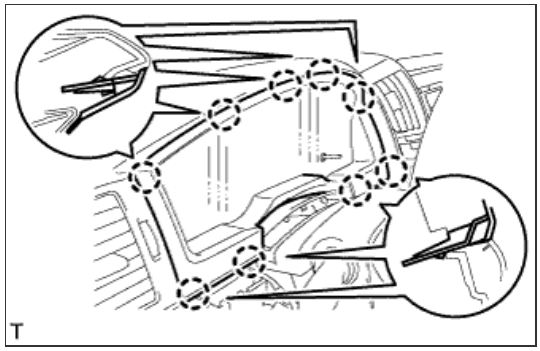


8. REMOVE COMBINATION METER ASSEMBLY

a. Remove the 4 screws.

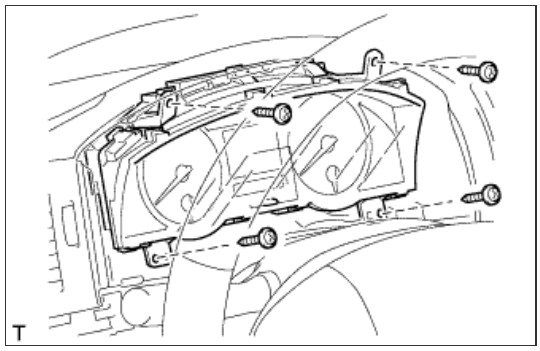

b. Disconnect the connectors, and remove the combination meter by pulling it up in the direction of the arrow in the illustration.

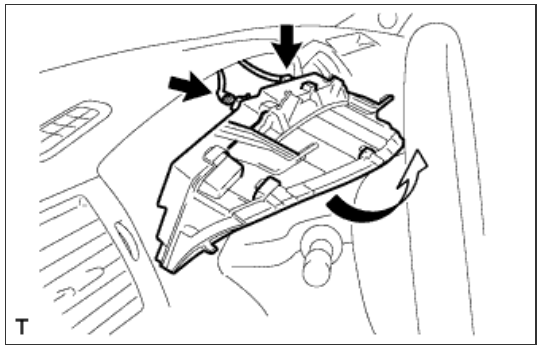

for Preparation Click here

1. REMOVE DISABLE AUTO TILT AWAY FUNCTION

a. for Power Tilt and Power Telescopic Steering Column:

i. Disable the Autoaway/Return function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:

Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.

ii. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully extend and lower the steering column assembly.

iii. Turn the engine switch off .

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

3. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

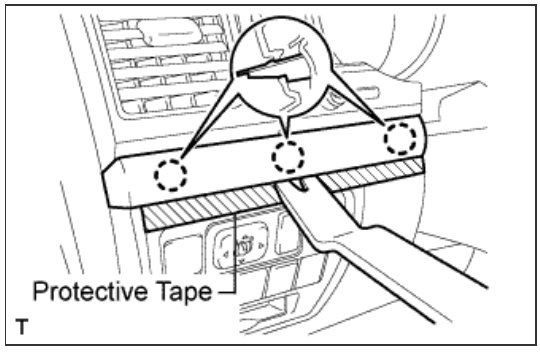

4. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

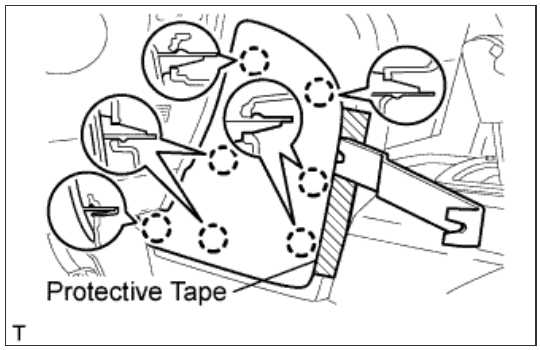


5. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

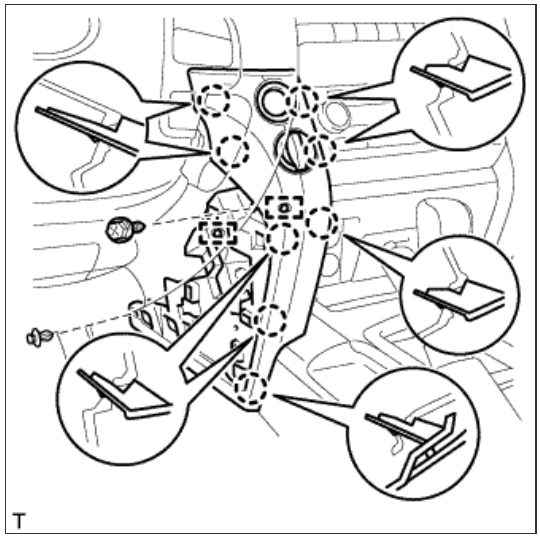

6. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

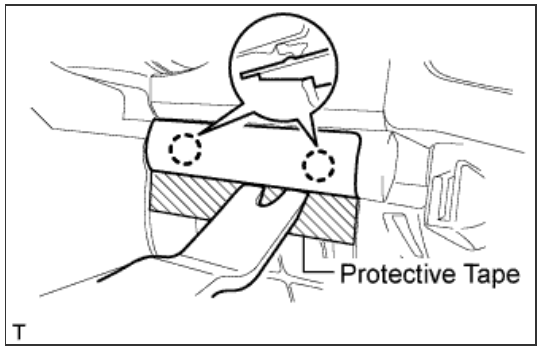


7. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. for Manual Tilt and Manual Telescopic Steering Column:

i. Operate the tilt and telescopic lever to fully extend and lower the steering column assembly.

b. Detach the 4 claws.

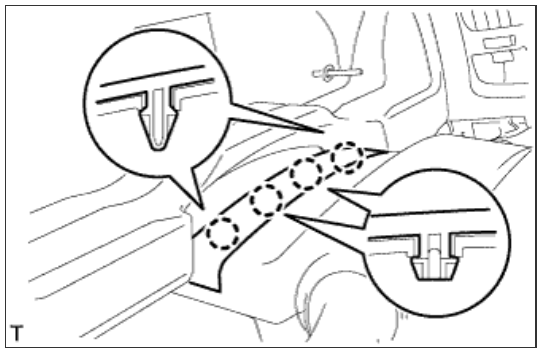


c. Detach the 9 claws and remove the finish panel.

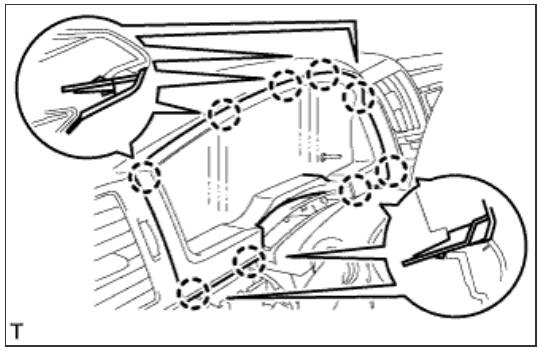


8. REMOVE COMBINATION METER ASSEMBLY

a. Remove the 4 screws.

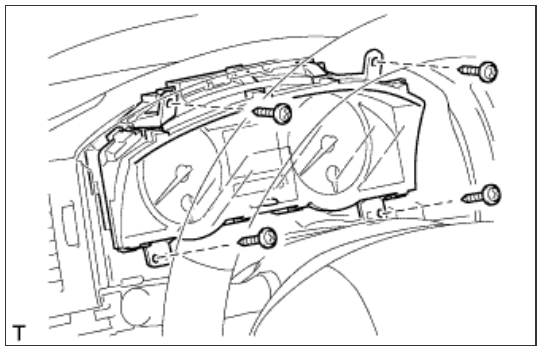

b. Disconnect the connectors, and remove the combination meter by pulling it up in the direction of the arrow in the illustration.

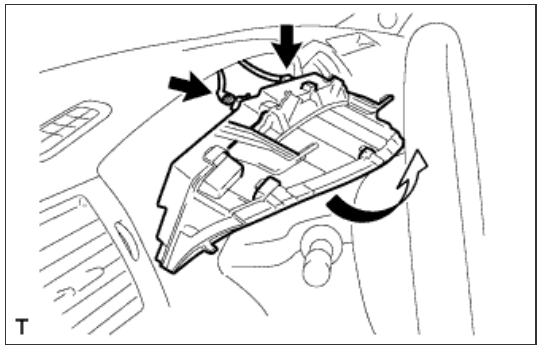


for Pr paration Cli h r

REMOVE COMBINATION METER GLASS

a. Remove the screw.


b. Detach the 8 claws and remove the meter glass.

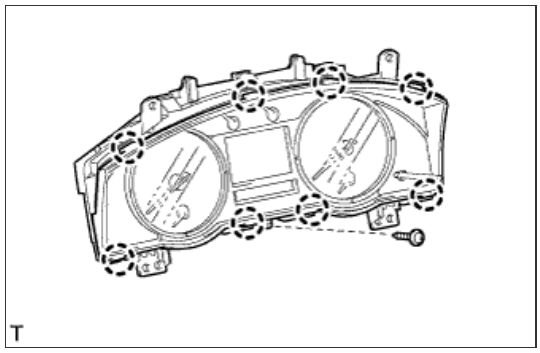

2. REMOVE NO. 1 COMBINATION METER COVER

a. Remove the 2 screws.


b. Detach the 9 claws and remove the cover.

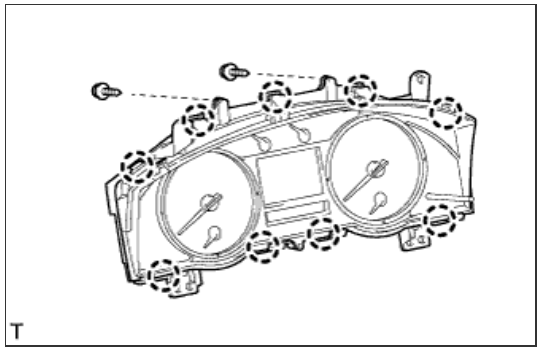

3. REMOVE NO. 2 COMBINATION METER COVER

a. Remove the 7 screws.

b. Detach the 2 claws and remove the cover.

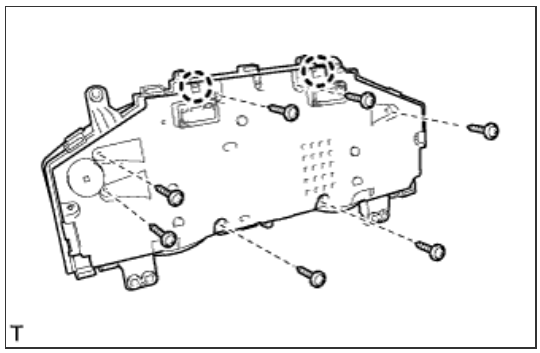


for Pr paration Cli h r

INSTALL NO. COMBINATION METER COVER

a. Attach the 2 claws to install the cover.


b. Install the 7 screws.

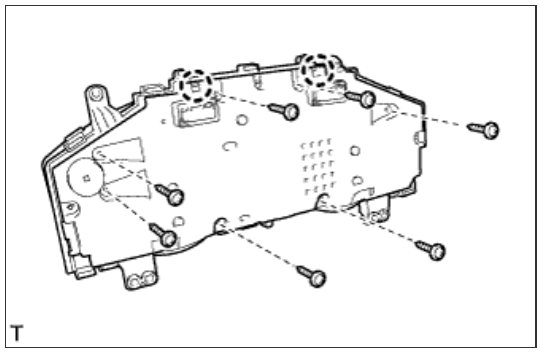

. INSTALL NO. 1 COMBINATION METER COVER

a. Attach the 9 claws to install the cover.


b. Install the 2 screws.

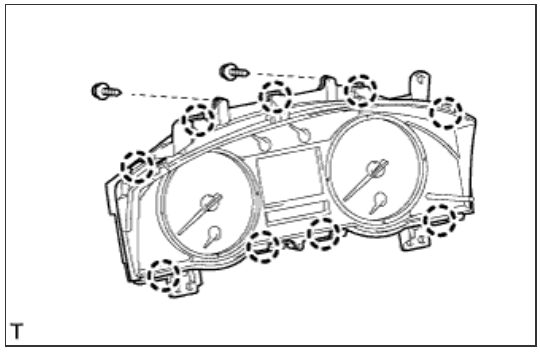

3. INSTALL COMBINATION METER GLASS

a. Attach the 8 claws to install the meter glass.


b. Install the screw.

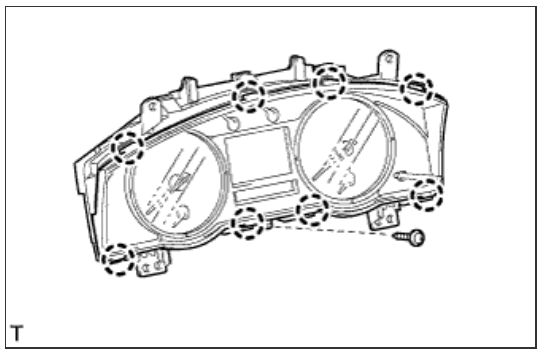


for Preparation Click here

1. INSTALL COMBINATION METER ASSEMBLY

a. Connect the connectors.

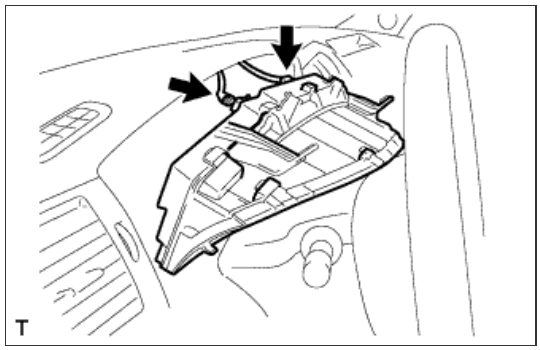


b. Install the combination meter with the 4 screws.

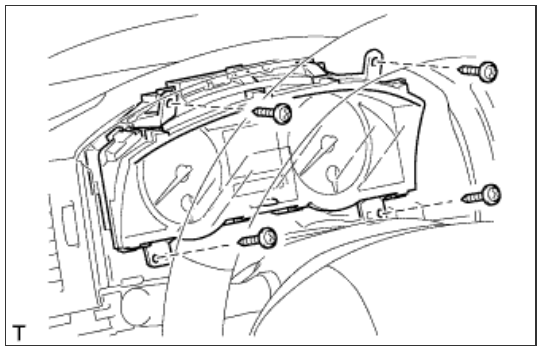


2. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

a. Attach the 9 claws to install the finish panel.

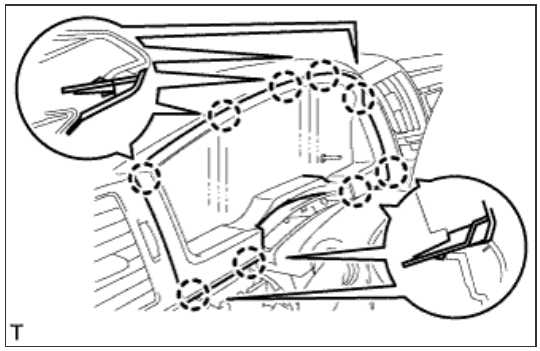


b. Attach the 4 claws.

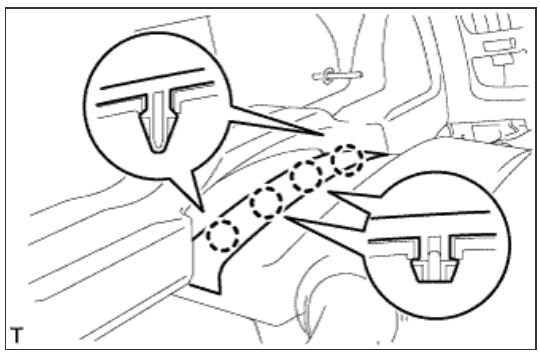

3. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

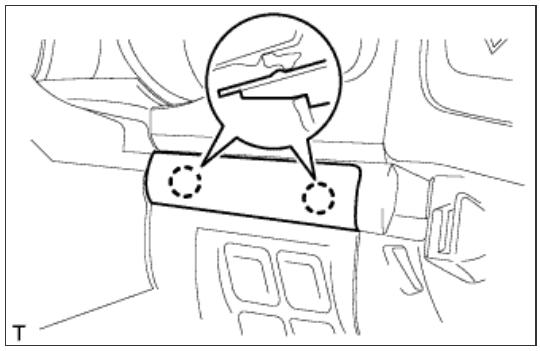


4. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

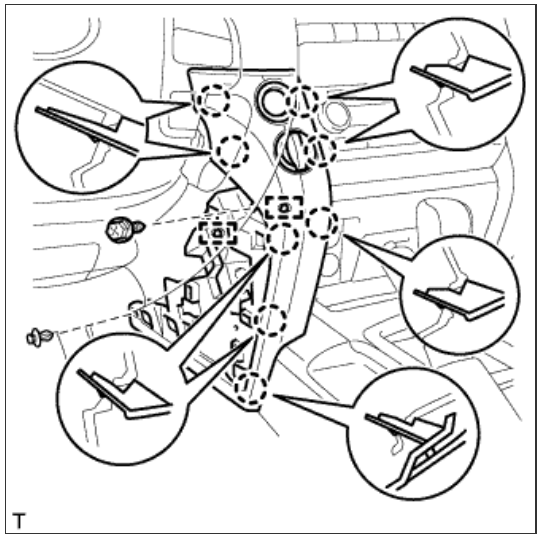


5. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

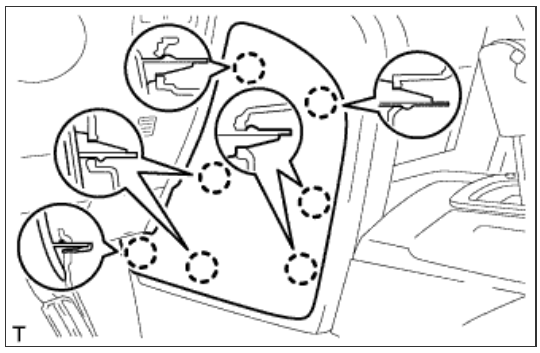

6. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

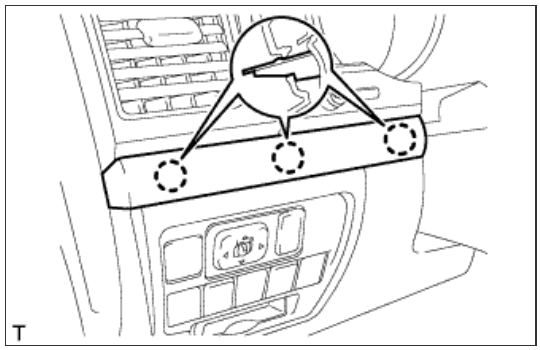

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:

- **Reset the Autoaway/Return function setting to the pre ious co dition by changing the customi e parameter Click here).**
- **When disconnecting the cable, some systems need to be initiali d after the cable is reconnected (Click here).**


for Preparation Click here

1. INSTALL COMBINATION METER ASSEMBLY

a. Connect the connectors.

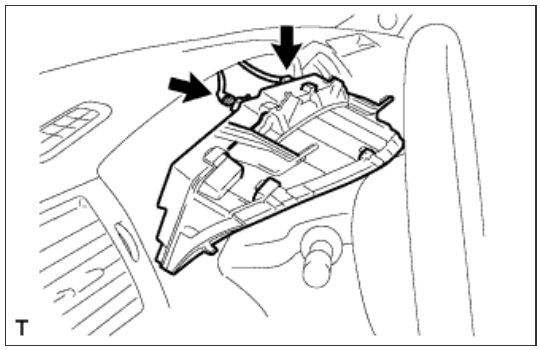


b. Install the combination meter with the 4 screws.

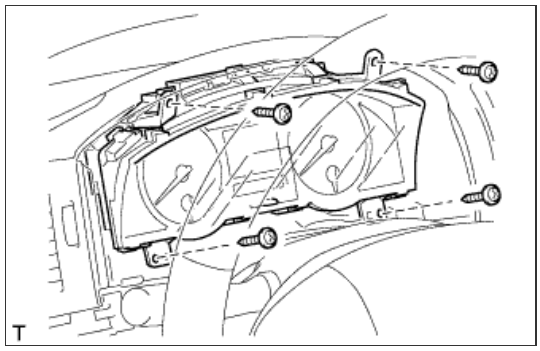


2. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

a. Attach the 9 claws to install the finish panel.

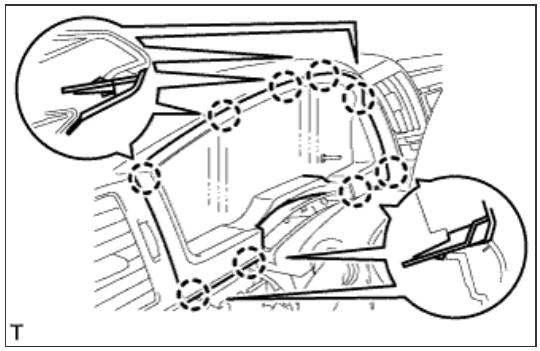


b. Attach the 4 claws.

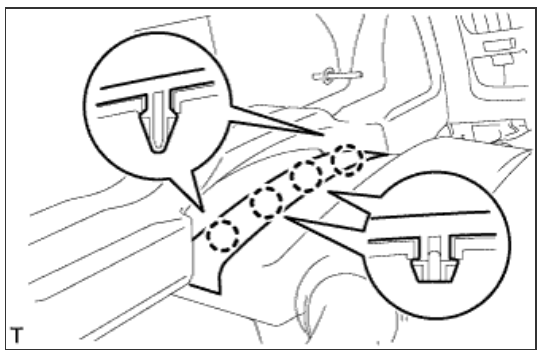

3. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

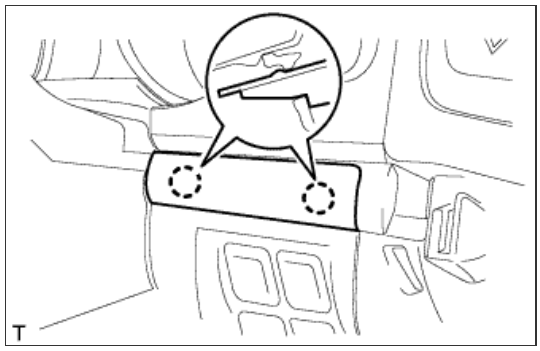


4. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

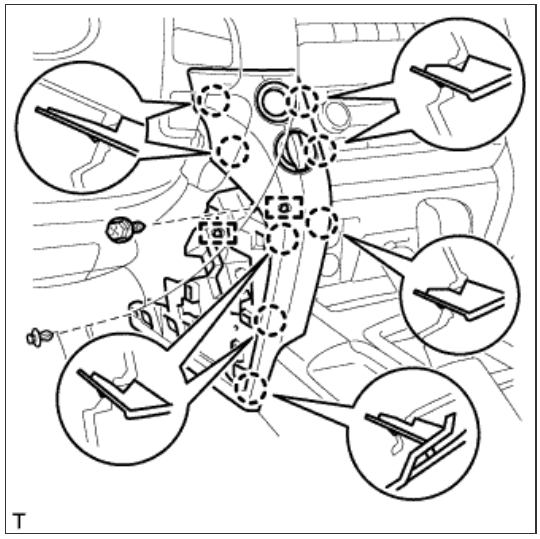


5. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

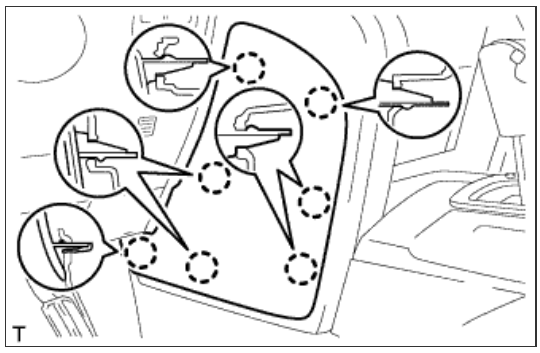

6. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

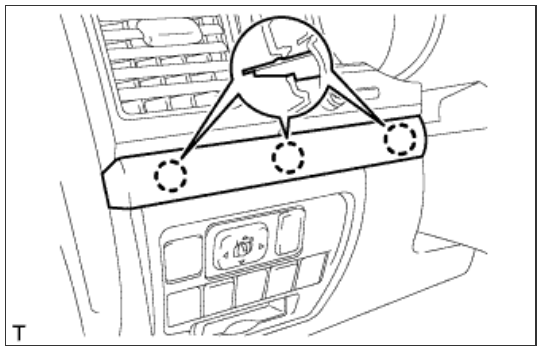


7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

- **Reset the Autoaway/Return function setting to the pre ious co dition by changing the customi e parameter Click here).**
- **When disconnecting the cable, some systems need to be initiali d after the cable is reconnected (Click here).**

for Preparation Click here

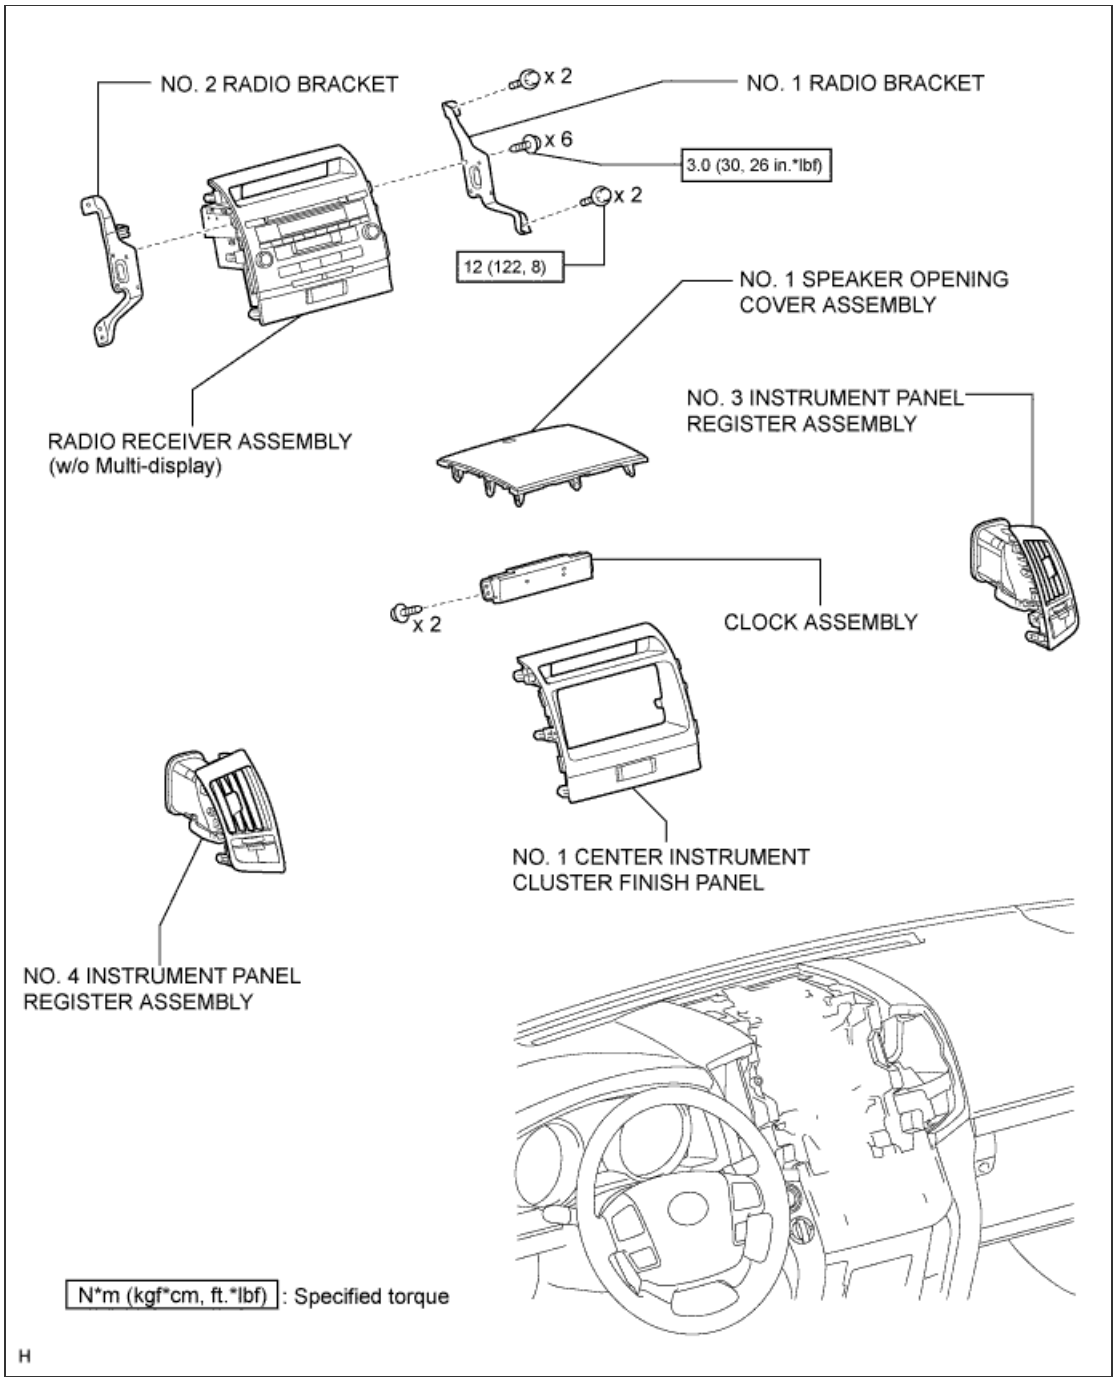


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Detach the 8 claws and remove the opening cover.

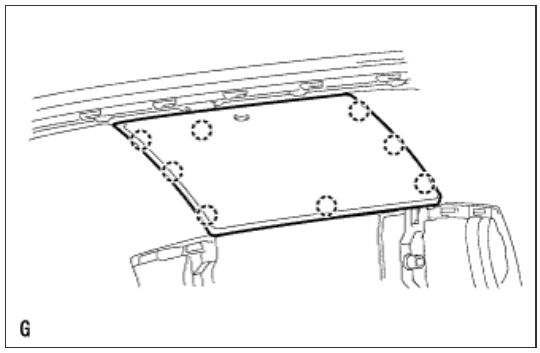

2. REMOVE NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.



3. REMOVE NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.


c. Remove the register and then disconnect the connector.



4. REMOVE NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL


a. Detach the 10 claws.

b. Remove the finish panel and then disconnect the connectors.

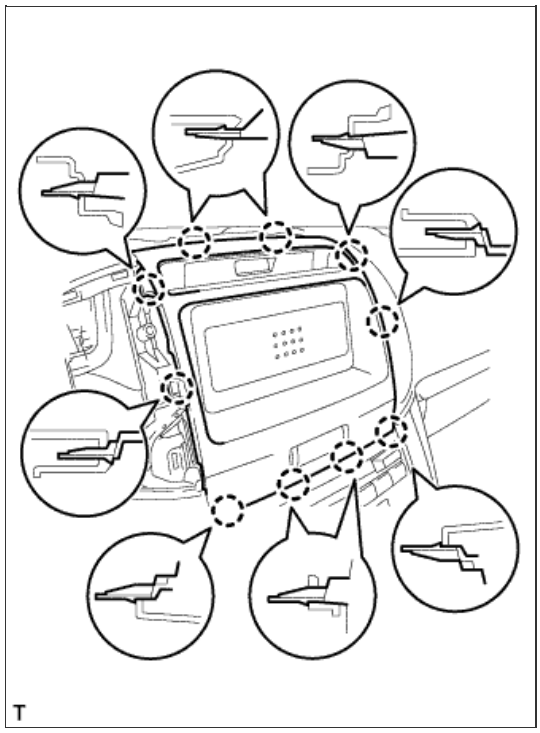


5. REMOVE CLOCK ASSEMBLY

a. Remove the 2 screws and clock.

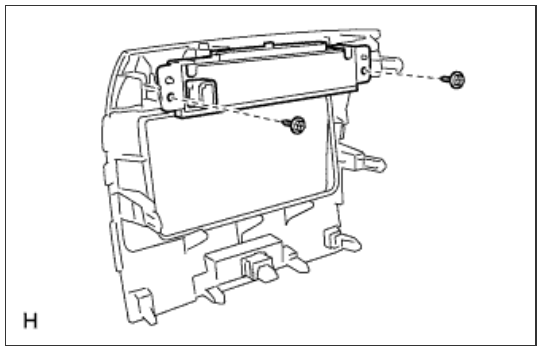


6. REMOVE RADIO RECEIVER ASSEMBLY (w/o Multi-display)

a. Remove the 2 screws and 2 bolts.

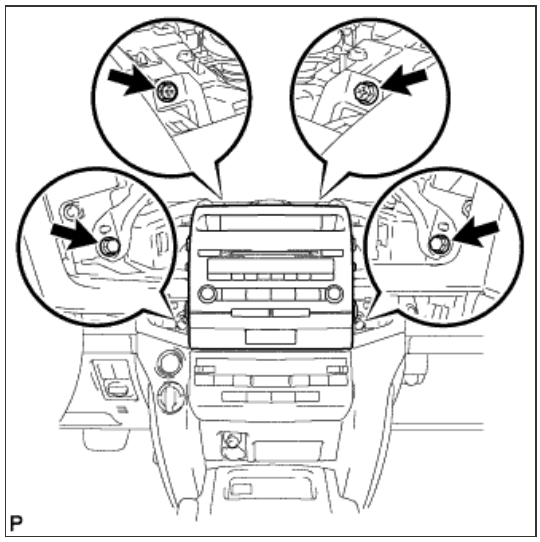


b. Pull the radio receiver to detach the 10 claws on the backside of the radio receiver.

c. Disconnect the connectors and remove the radio receiver.

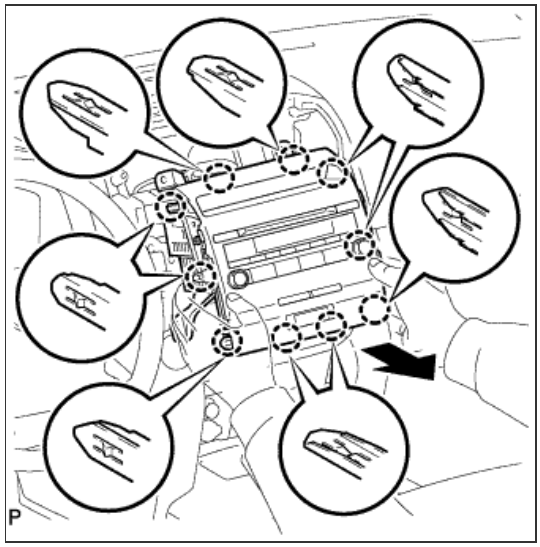


7. REMOVE NO. 2 RADIO BRACKET (w/o Multi-display)

a. Remove the 3 bolts and bracket.

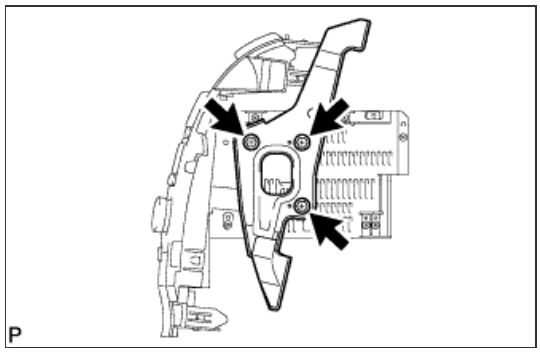


8. REMOVE NO. 1 RADIO BRACKET (w/o Multi-display)

a. Remove the 3 bolts and bracket.

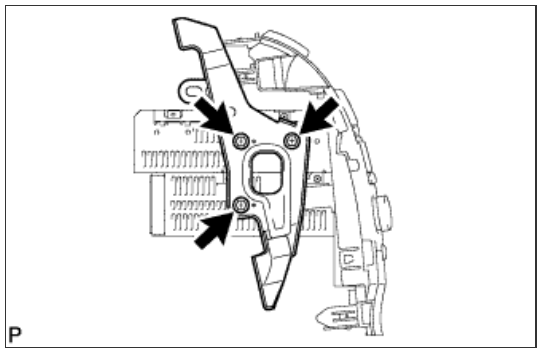

9. REMOVE CLOCK ASSEMBLY (w/o Multi-display)

a. Remove the 2 screws and clock.

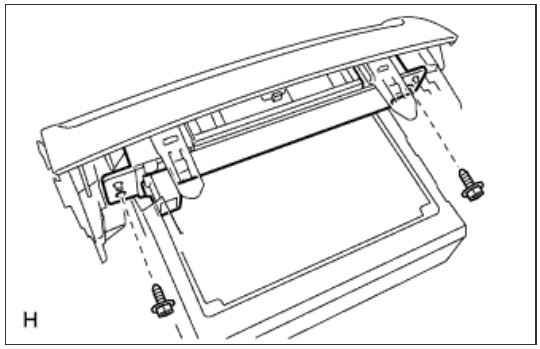


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Detach the 8 claws and remove the opening cover.

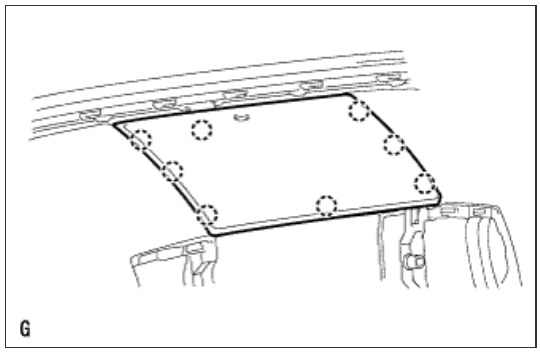

2. REMOVE NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.



3. REMOVE NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.


c. Remove the register and then disconnect the connector.



4. REMOVE NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL


a. Detach the 10 claws.

b. Remove the finish panel and then disconnect the connectors.

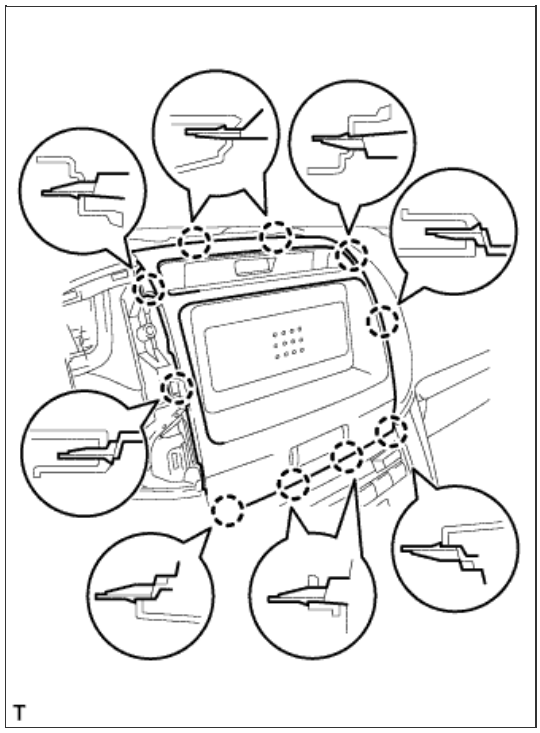


5. REMOVE CLOCK ASSEMBLY

a. Remove the 2 screws and clock.

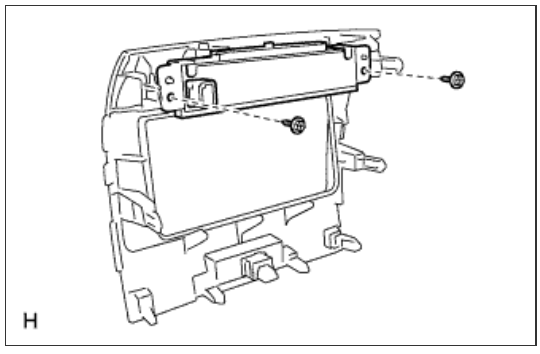


6. REMOVE RADIO RECEIVER ASSEMBLY (w/o Multi-display)

a. Remove the 2 screws and 2 bolts.

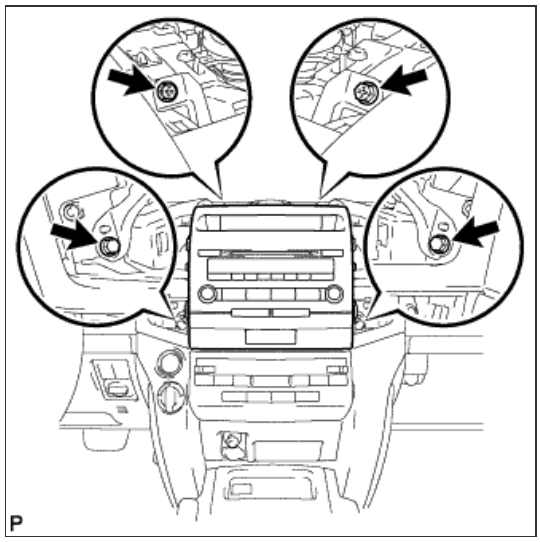


b. Pull the radio receiver to detach the 10 claws on the backside of the radio receiver.

c. Disconnect the connectors and remove the radio receiver.

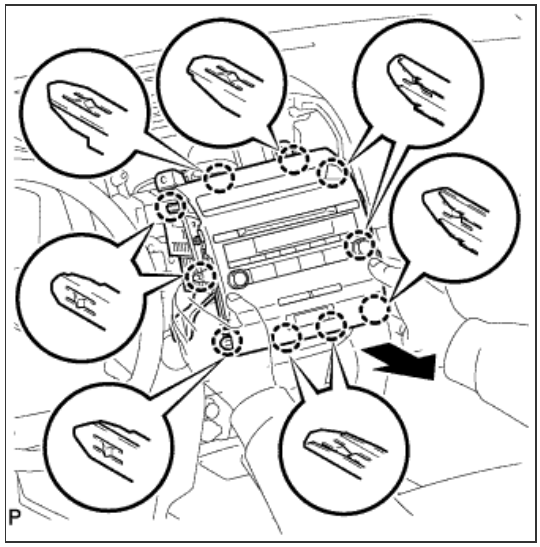


7. REMOVE NO. 2 RADIO BRACKET (w/o Multi-display)

a. Remove the 3 bolts and bracket.

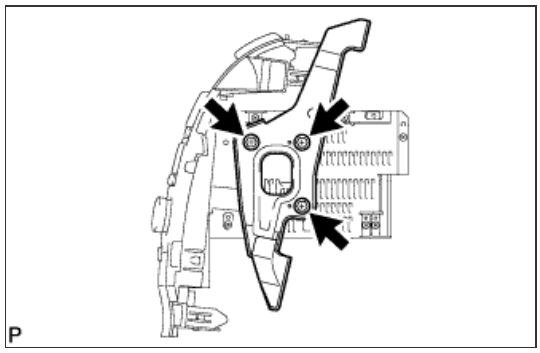


8. REMOVE NO. 1 RADIO BRACKET (w/o Multi-display)

a. Remove the 3 bolts and bracket.

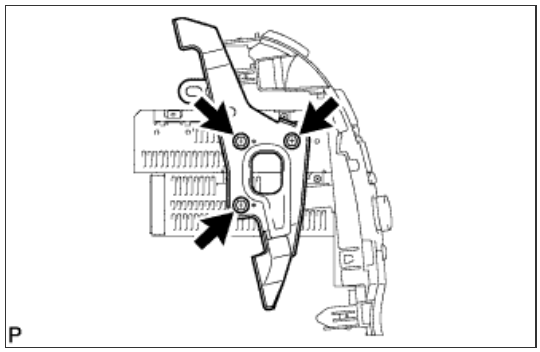

9. REMOVE CLOCK ASSEMBLY (w/o Multi-display)

a. Remove the 2 screws and clock.

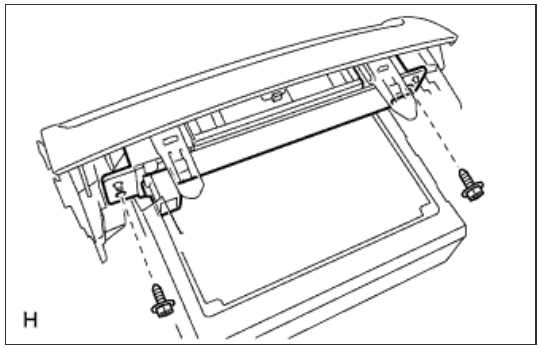


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL CLOCK ASSEMBLY


a. Install the clock with the 2 screws.

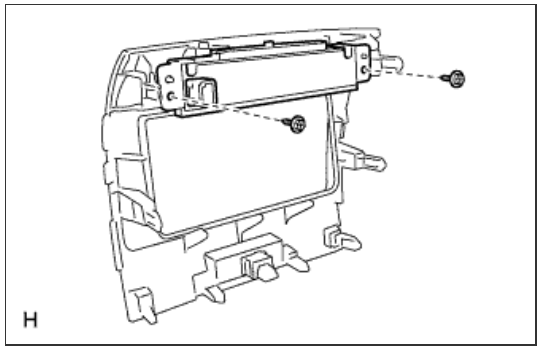

2. INSTALL NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL


a. Connect the connector.

b. Attach the 10 claws to install the finish panel.

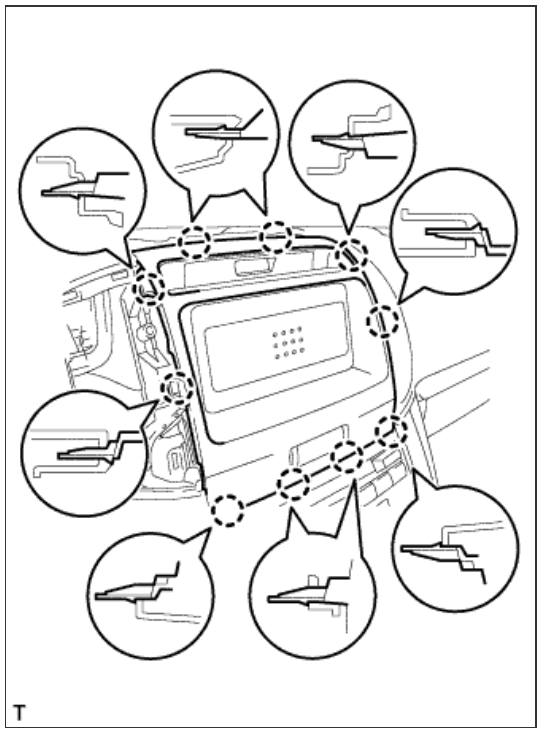

3. INSTALL CLOCK ASSEMBLY (w/o Multi-display)


a. Install the clock with the 2 screws.

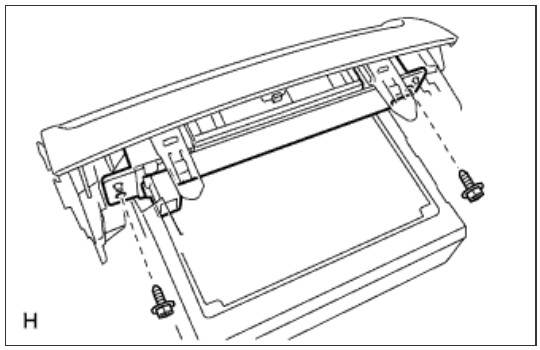

4. INSTALL NO. 1 RADIO BRACKET (w/o Multi-display)

a. Install the bracket with the 3 bolts.


Torque:
3.0 N*m{ 30 kgf*cm , 26 in.*lbf }

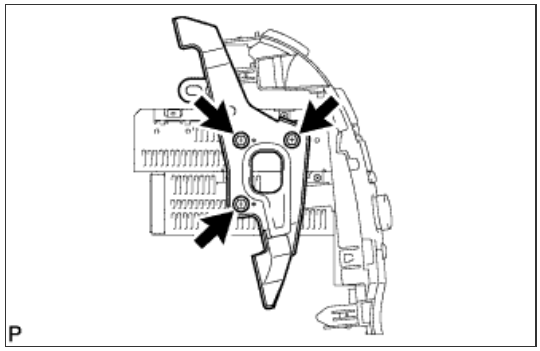

5. INSTALL NO. 2 RADIO BRACKET (w/o Multi-display)

a. Install the bracket with the 3 bolts.

Torque:
3.0 N*m{ 30 kgf*cm , 26 in.*lbf }

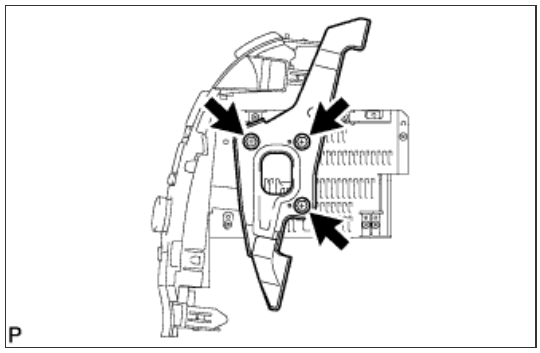


6. INSTALL RADIO RECEIVER ASSEMBLY (w/o Multi-display)

a. Connect the connectors.

b. Insert the radio receiver to attach the 10 claws on its backside.

NOTICE:

When inserting the radio receiver, do not press the knobs on it.

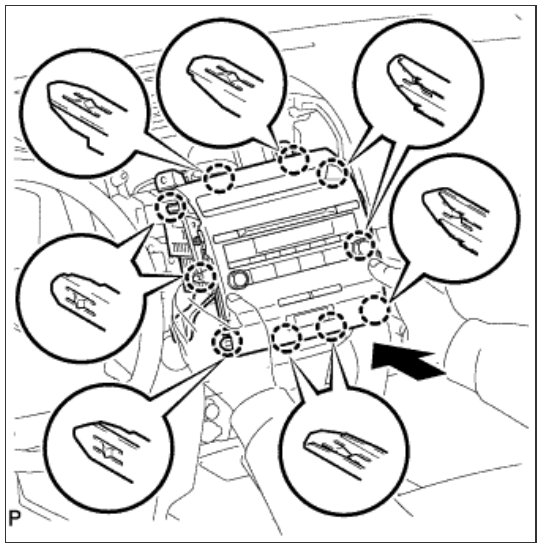

c. Install the radio receiver with the 2 screws and 2 bolts.


Torque:
Bolt:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }



7. INSTALL NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Connect the connector.


b. Attach the 6 claws to install the register.

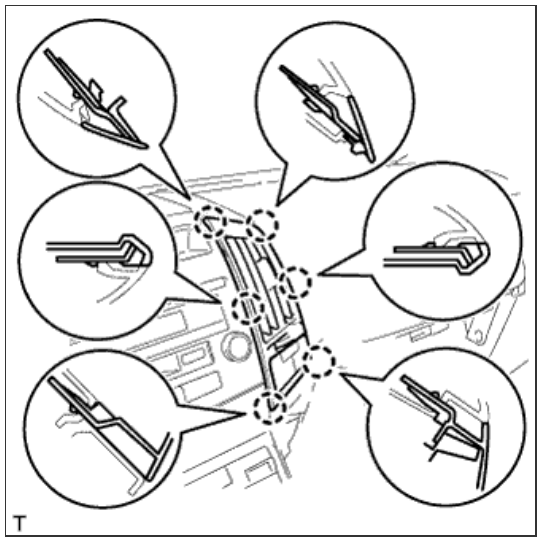

8. INSTALL NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Connect the connector.

b. Attach the 6 claws to install the register.

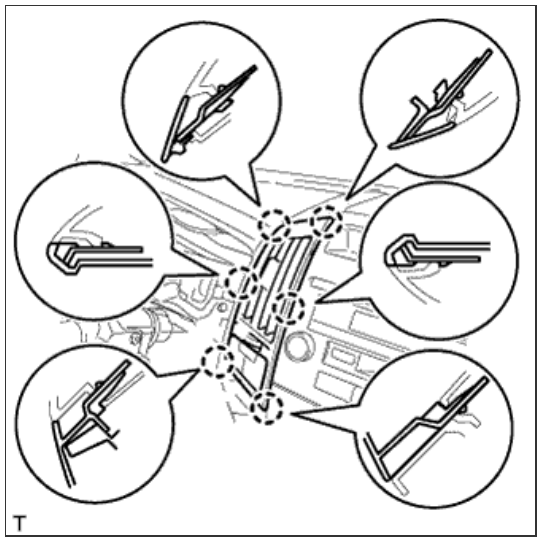

9. INSTALL NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Attach the 8 claws to install the opening cover.

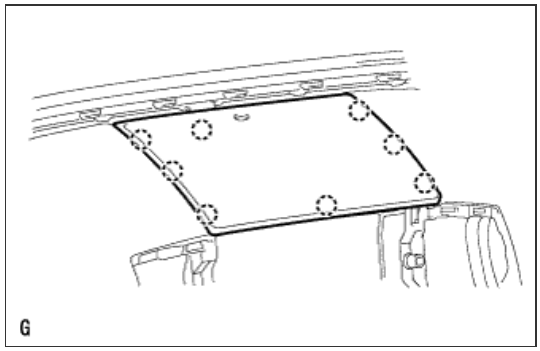


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL CLOCK ASSEMBLY


a. Install the clock with the 2 screws.

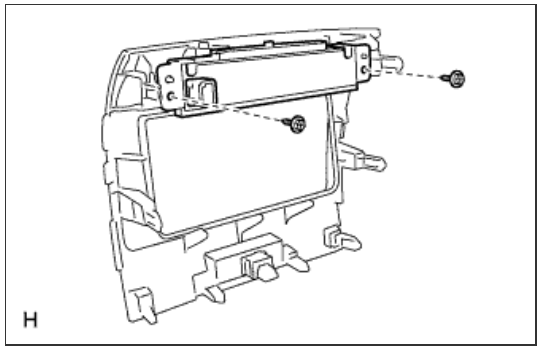

2. INSTALL NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL


a. Connect the connector.

b. Attach the 10 claws to install the finish panel.

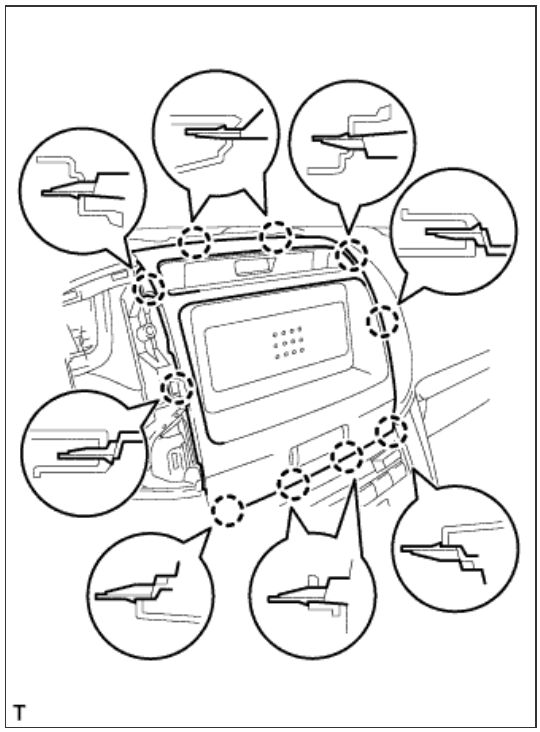

3. INSTALL CLOCK ASSEMBLY (w/o Multi-display)


a. Install the clock with the 2 screws.

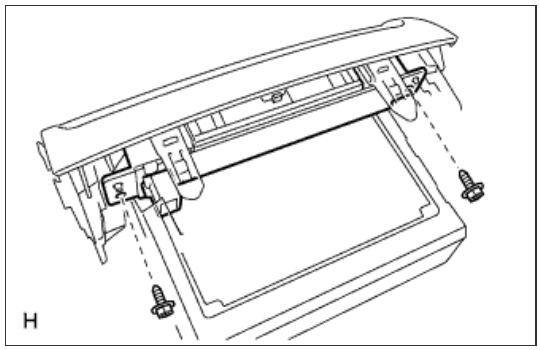

4. INSTALL NO. 1 RADIO BRACKET (w/o Multi-display)

a. Install the bracket with the 3 bolts.


Torque:
3.0 N*m{ 30 kgf*cm , 26 in.*lbf }

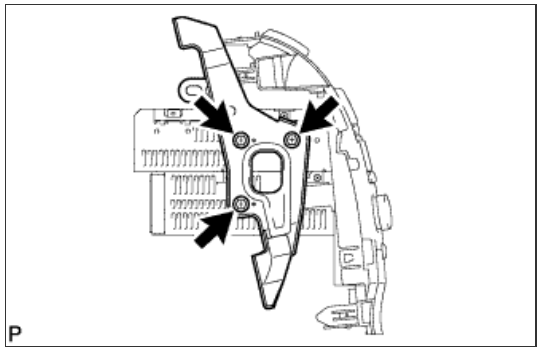

5. INSTALL NO. 2 RADIO BRACKET (w/o Multi-display)

a. Install the bracket with the 3 bolts.

Torque:
3.0 N*m{ 30 kgf*cm , 26 in.*lbf }

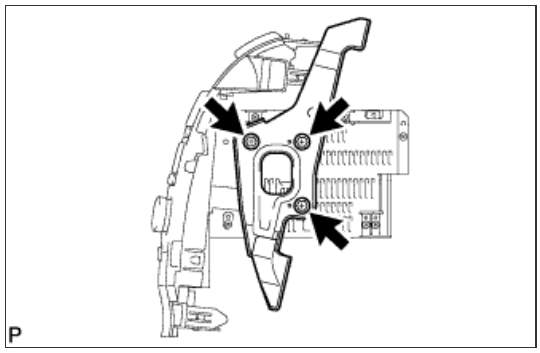


6. INSTALL RADIO RECEIVER ASSEMBLY (w/o Multi-display)

a. Connect the connectors.

b. Insert the radio receiver to attach the 10 claws on its backside.

NOTICE:

When inserting the radio receiver, do not press the knobs on it.

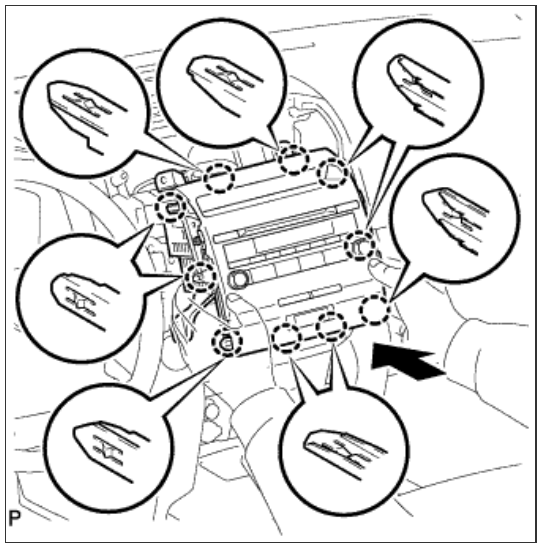

c. Install the radio receiver with the 2 screws and 2 bolts.


Torque:
Bolt:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }



7. INSTALL NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Connect the connector.


b. Attach the 6 claws to install the register.

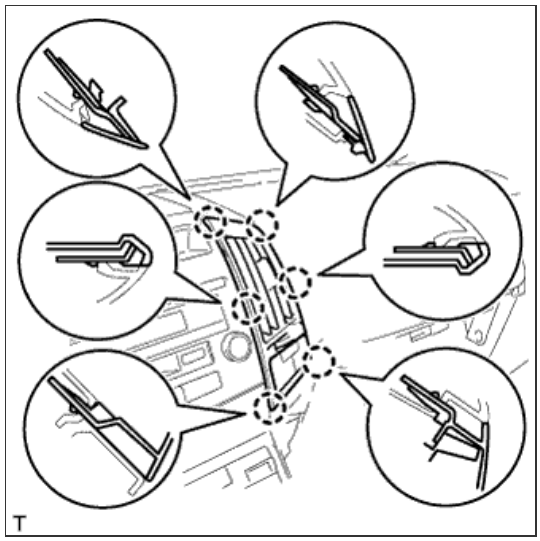

8. INSTALL NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Connect the connector.

b. Attach the 6 claws to install the register.

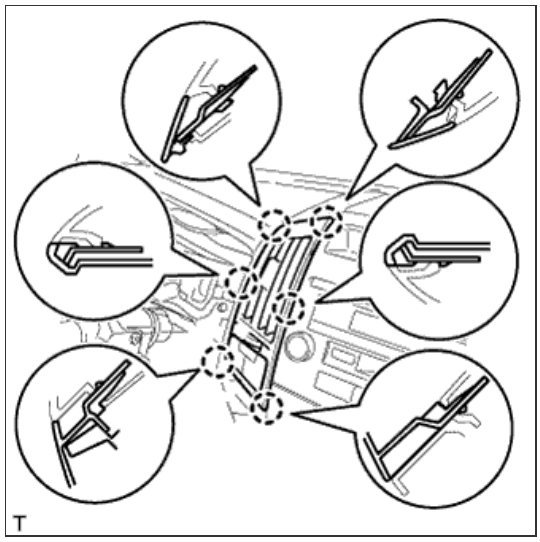


9. INSTALL NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Attach the 8 claws to install the opening cover.

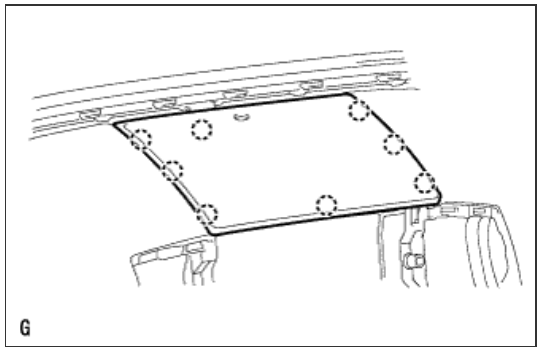

for Preparation Click here

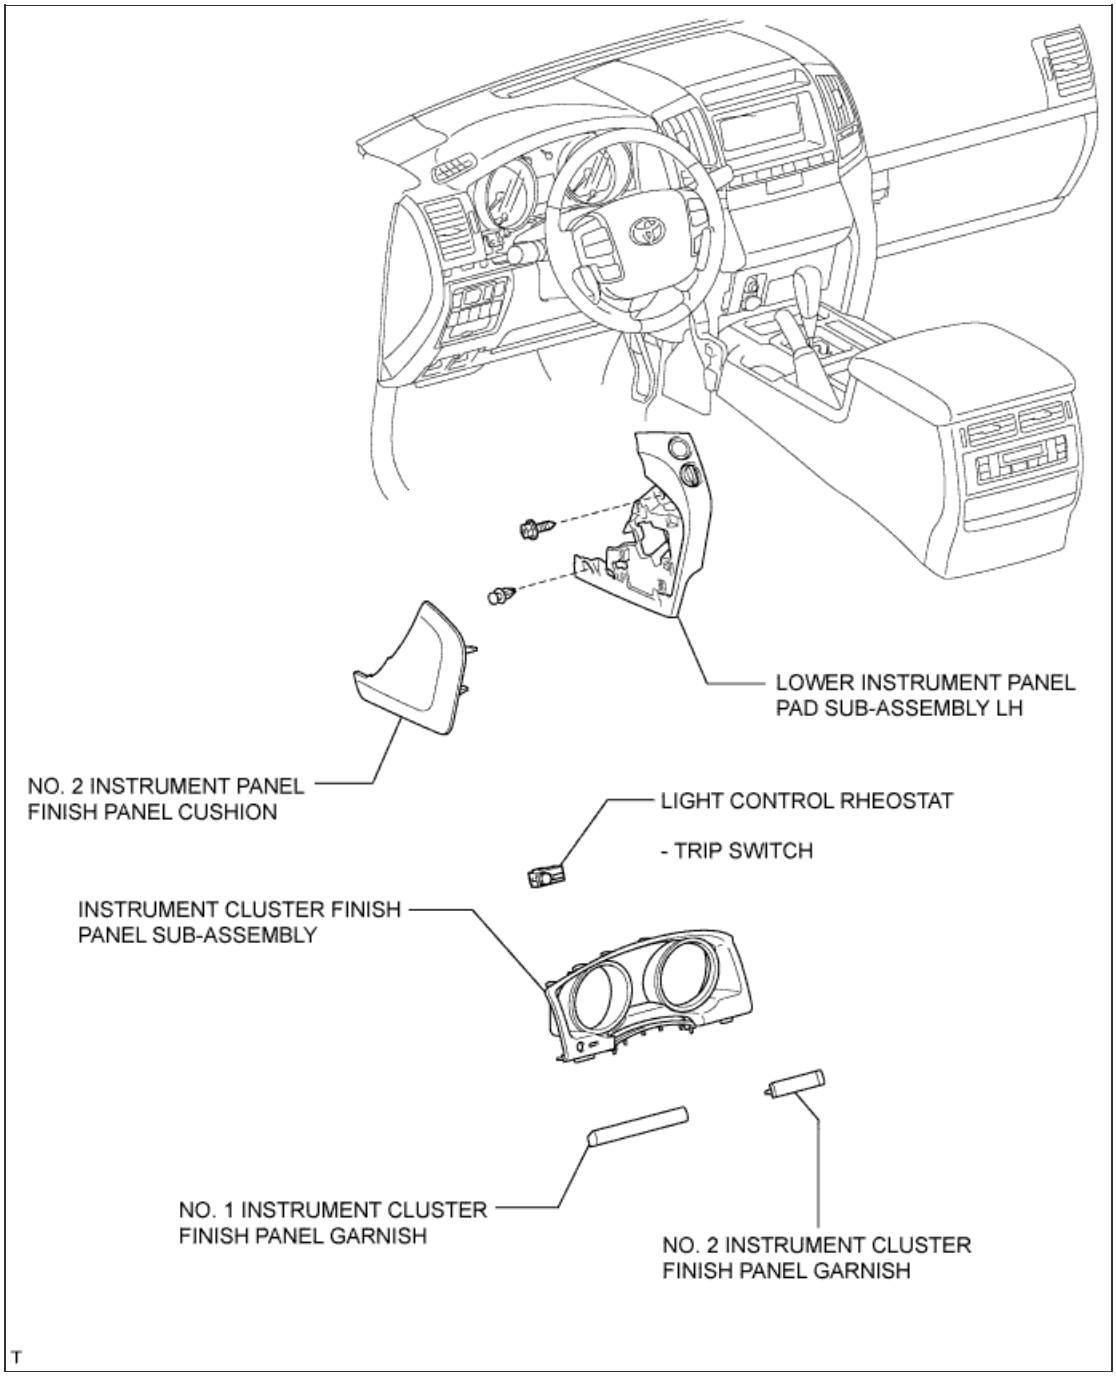

for Preparation Click here

1. DISABLE AUTO TILT AWAY FUNCTION

a. Disable the Autoaway/Return function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:

Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.


b. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully e tend and lower the steering column.

c. Turn the engine switch off.

2. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

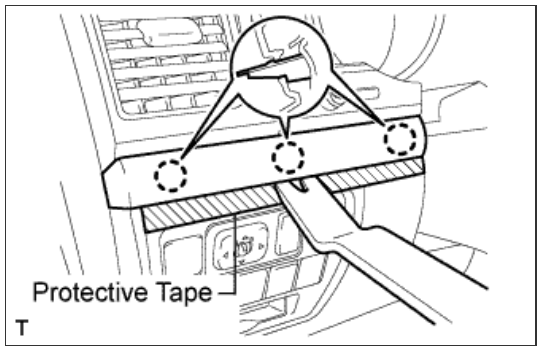

3. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the claws and remove the panel cushion.

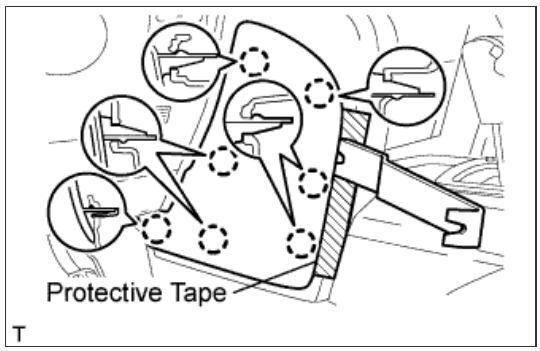


4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

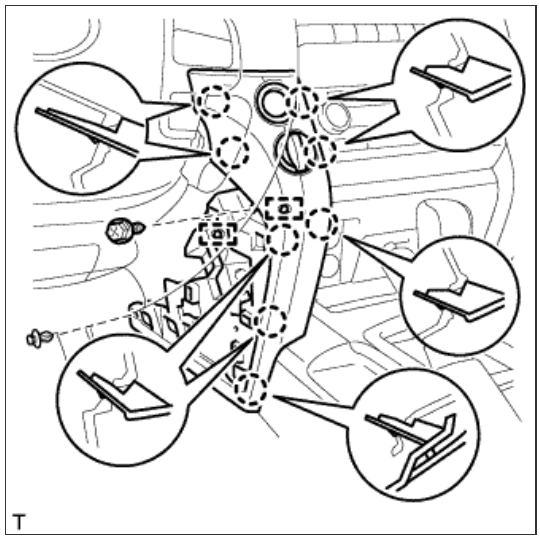

5. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

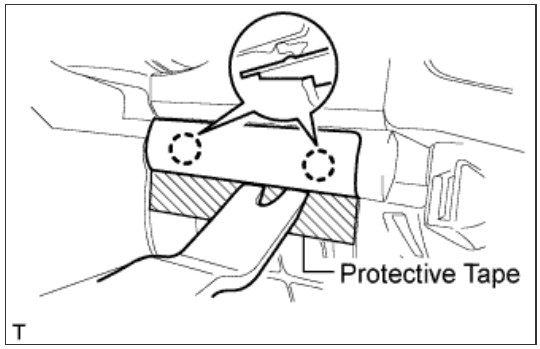


6. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 4 claws.

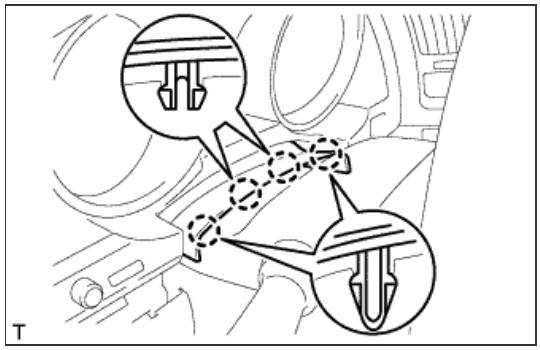

b. Detach the claws.

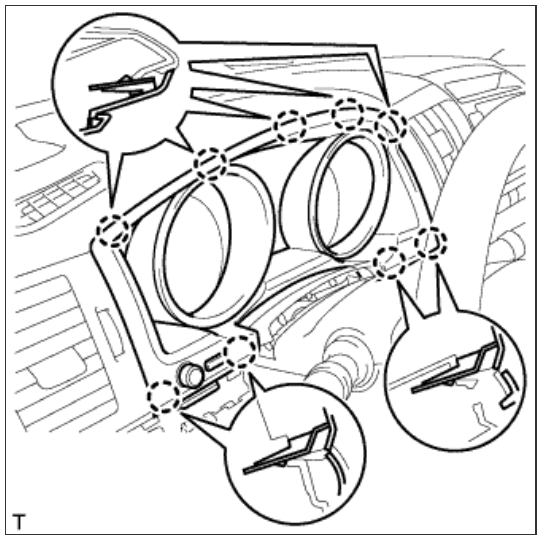


c. Remove the finish panel and disconnect the connector.

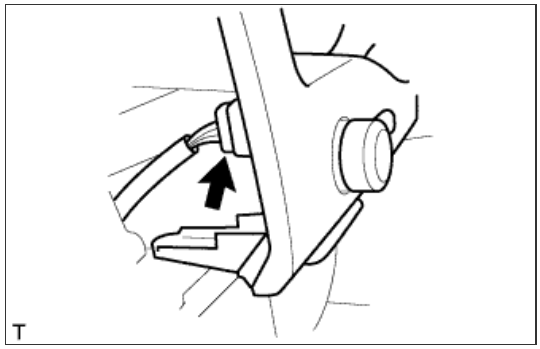

7. REMOVE LIGHT CONTROL RHEOSTAT

a. Detach the 2 claws and remove the rheostat.

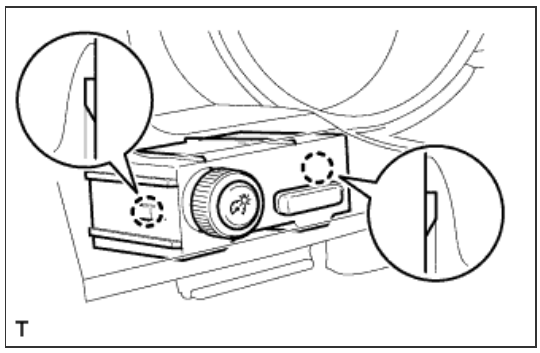


for Preparation Click here

1. INSPECT LIGHT CONTROL RHEOSTAT

a. Inspect the light control rheostat.

i. Measure the resistance according to the value(s) in the table below.

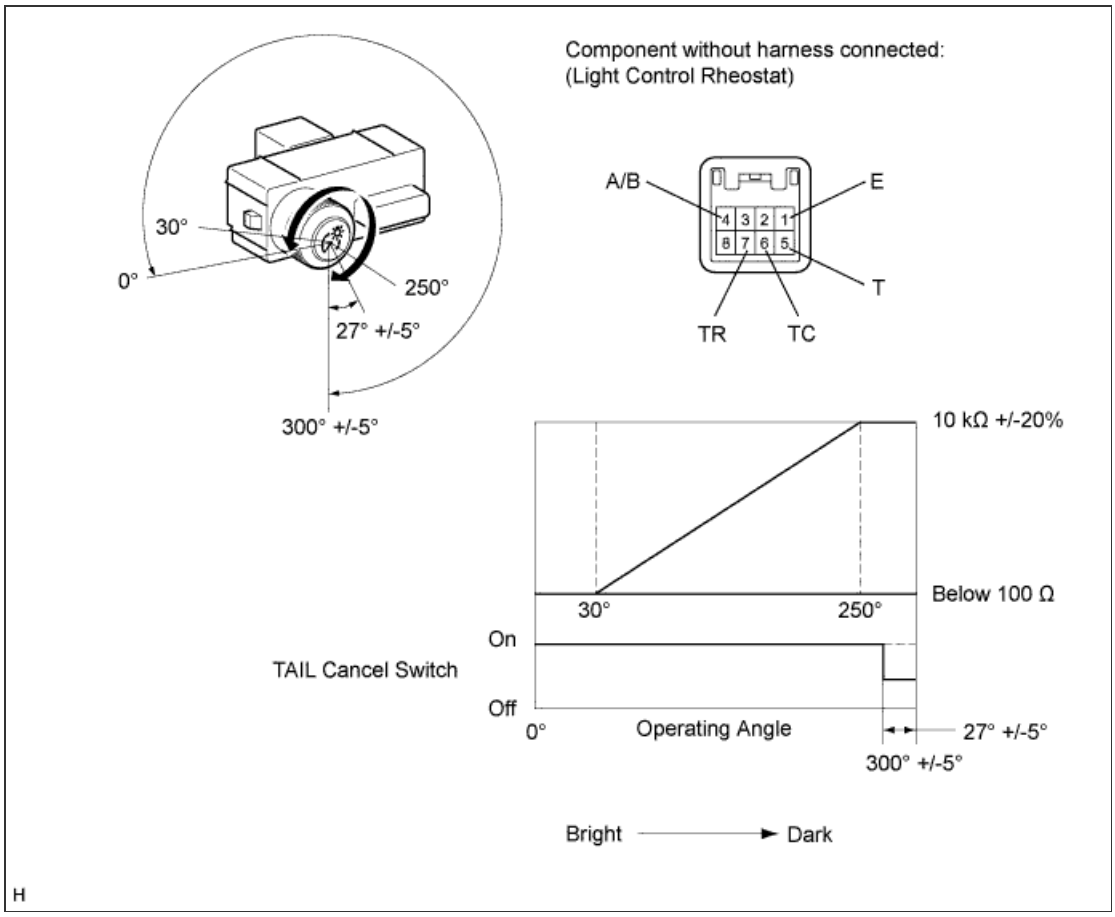

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
6 (TC) - 1 (E)	TAIL cancel switch off → on	10 kΩ or higher → Below 1 Ω
5 (T) - 1 (E)	Always	10 kΩ or higher
7 (TR) - 1 (E)	Light control rheostat fully turned right → fully turned left	10 kΩ or higher → Below 100 Ω

. Inspect the trip switch.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester	Switch	Specified


Connection	Condition	Condition
4 (A/B) - 1 (E)	Trip switch on (Pushed)	Below 200 Ω
	Trip switch off (Not Pushed)	1 MΩ or higher

If the result is not as specified, replace the rheostat.

for Preparation Click here


1. INSTALL LIGHT CONTROL RHEOSTAT

a. Attach the 2 claws to install the rheostat.

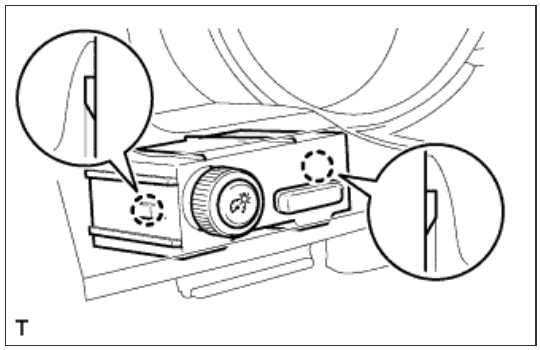


2. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connector.

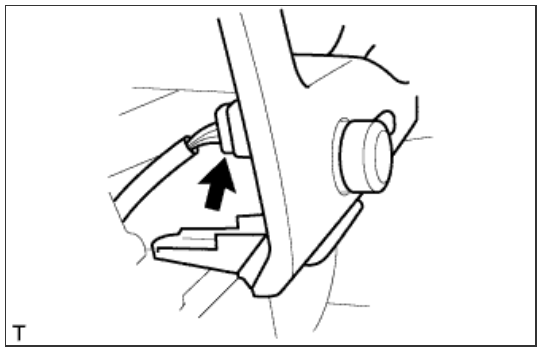

b. Attach the 9 claws to install the finish panel.

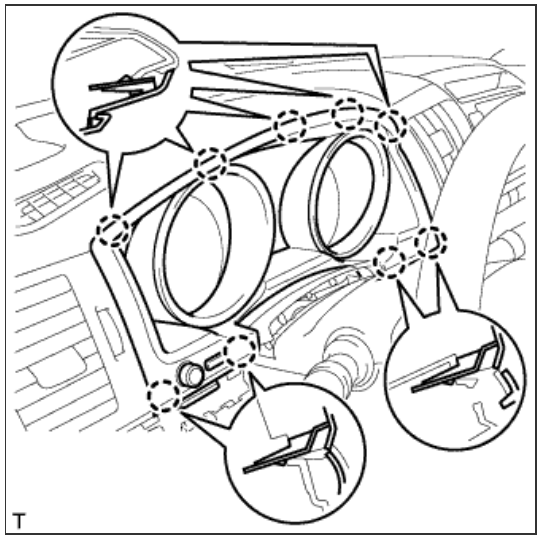


c. Attach the 4 claws.

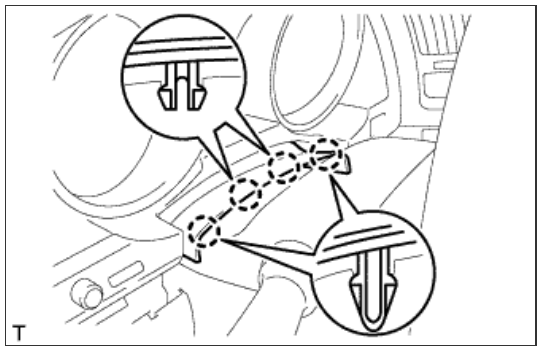

3. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

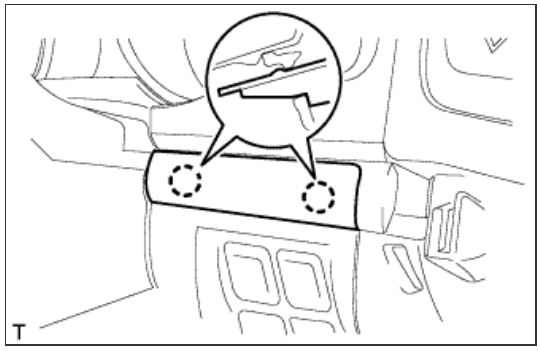


4. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

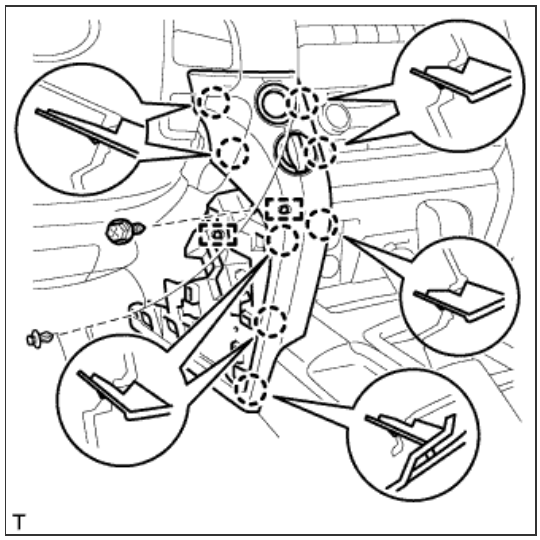


5. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

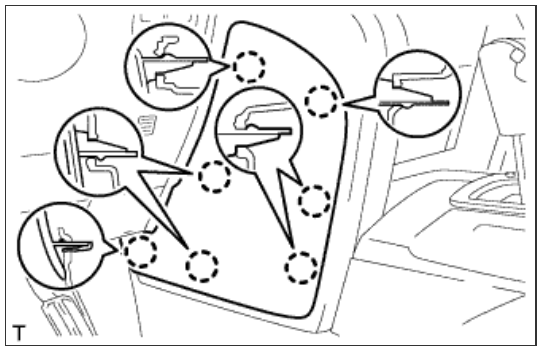



6. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

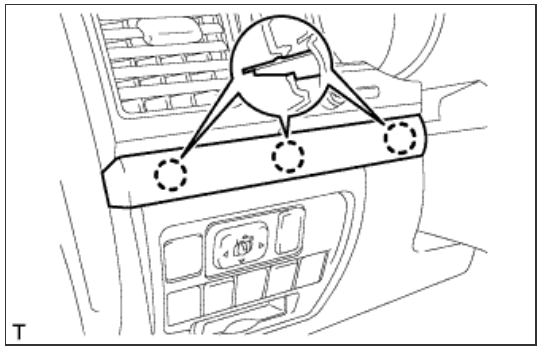


for Preparation Click here

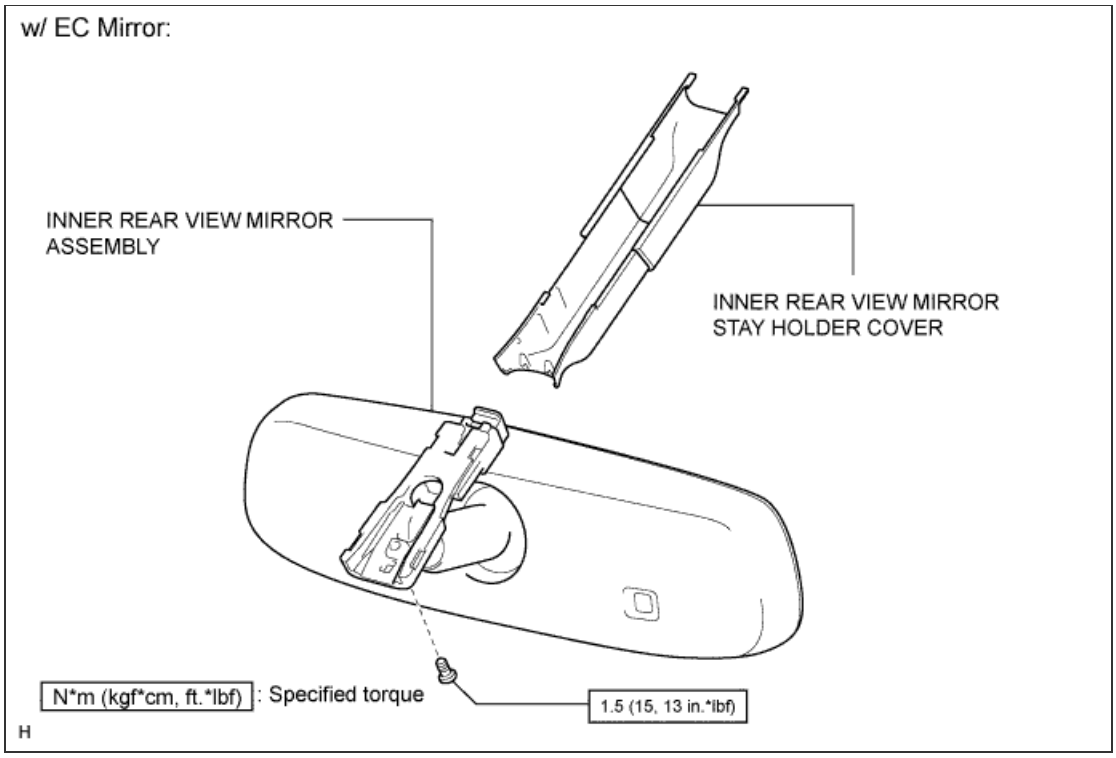

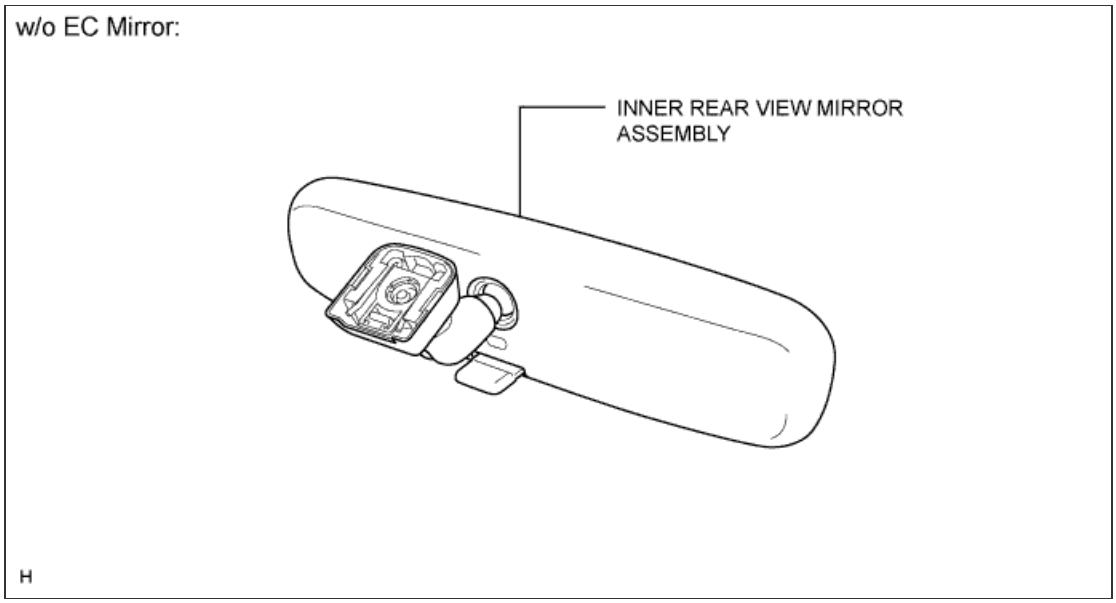

for Preparation Click here

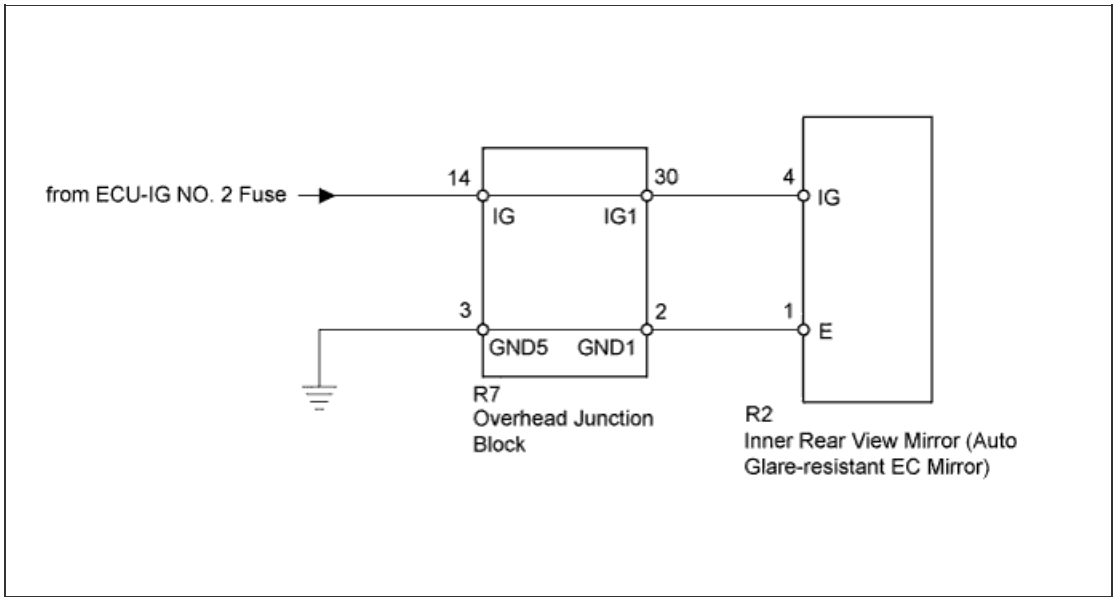

for Preparation Click here

HINT:

Refer to the Owner's Manual for more information.

SELECT COMPASS DISPLAY MODE

a. The compass switch allows you to select the Display or Non-display mode of the compass.

SET ZONE


a. Deviation between the "magnetic north" and "actual north" differs depending on the location. Therefore, adjustment of the magnetism is required. Because the magnetic condition differs depending on the area where the vehicle is used, it is necessary for each user to set the zone (refer to Compass Zone Map). The zone setting can be changed using the compass switch of the inner mirror.

PERFORM CALIBRATION

a. Because each vehicle has its own magnetic field, calibration should be performed for each individual vehicle. This compass function is used when storing the record of the vehicle's magnetic field.

WHEN COMPASS IS MAGNETIZED

a. The compass could be magnetized during shipping by vessels or freight cars. Therefore, ensure that calibration is performed properly before delivery. If driving the vehicle in a circle several times does not complete the calibration procedure, there may be a compass magnetization problem.

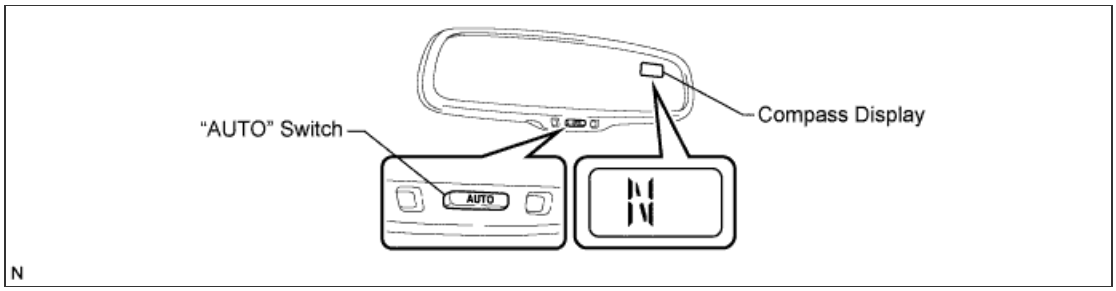


Deviation Calibration Procedure


a. Turn the ignition switch to the "IG-ON" position and push and hold the "AUTO" switch for 6 seconds until the zone number appears on the display.

HINT:

Pushing the "AUTO" switch for 3 seconds turns on or off the compass display.

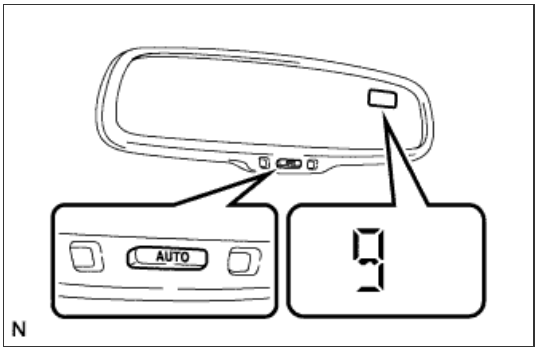


b. Push the "AUTO" switch to select the number of the zone where the vehicle is located.
See the map for zone reference.

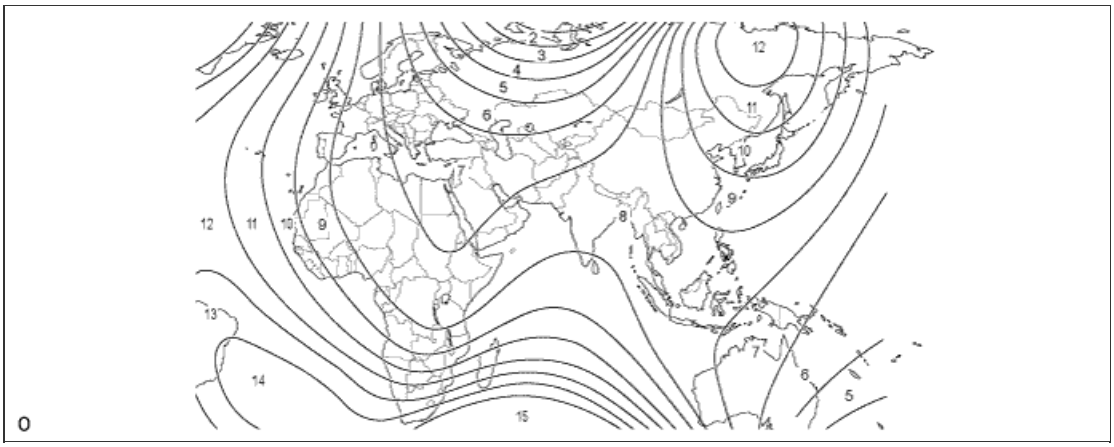

Circling Calibration Procedure


a. Start the engine and push and hold the "AUTO" switch for 9 seconds until "C" appears on the display.

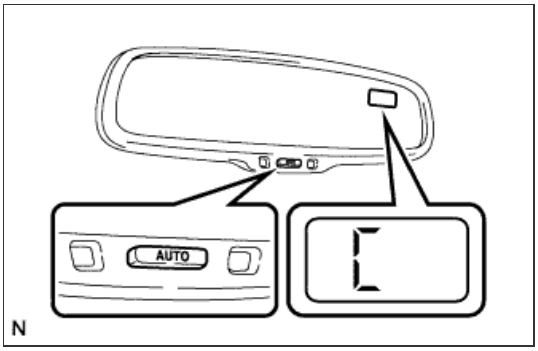

b. Drive the vehicle slowly at 8 km/h (5 mph) or lower in a circle.
If there is not enough space to drive in a circle, turn the car around in the following manner, doing two three-point turns in succession.
After driving in 1 to 3 circles in the above method, calibration is completed with the direction is shown on the display.

HINT:

- **Do not perform calibration of the compass in a place where the earth's magnetic field is subject to interference by artificial magnetic fields (underground parking, under a steel tower, between buildings, roof parking, near a crossing, near a large vehicle, etc.).**
- **During calibration, do not operate electric systems (sliding roof, power windows, etc.) as they may interfere with the calibration.**

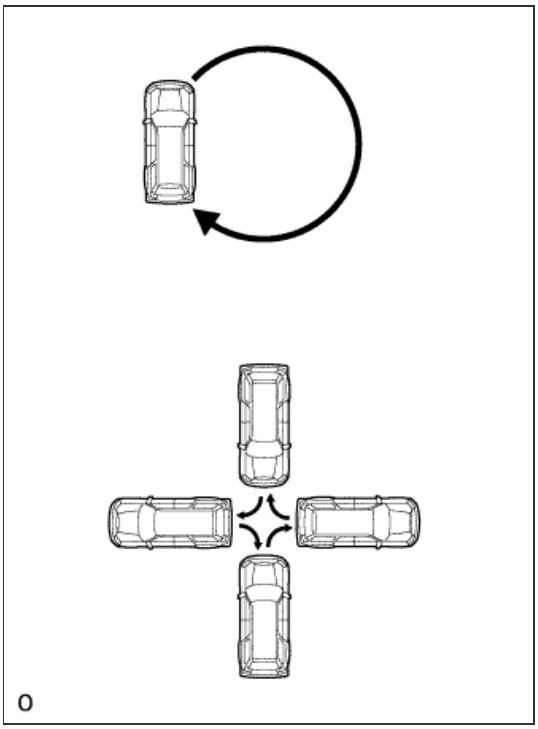

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.


Automatic Glare-resistant EC Mirror

Symptom	Suspected Area	See page
Automatic glare-resistant EC mirror does not operate	ECU-I NO. 2 fuse	-
	Inner rear view mirror	Click here
	Overhead unction block	-
	Harness or connector	-

for Preparation Click here

1. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER EC Mirror)


a. Detach the 2 claws and remove the cover as shown in the illustration.

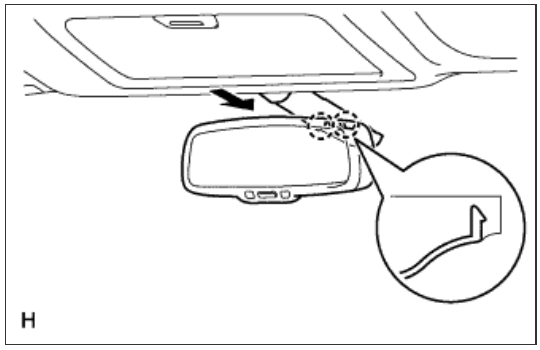

2. REMOVE INNER REAR VIEW MIRROR ASSEMBLY EC Mirror)

a. Disconnect the connector.


b. Using a T20 "TORX" socket wrench, remove the screw and inner rear view mirror.

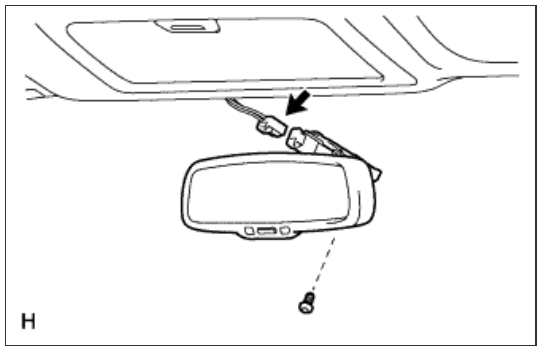

3. REMOVE INNER REAR VIEW MIRROR ASSEMBLY o EC Mirror)

a. Push the cover in the direction indicated by the arrows labeled A and remove it.

b. While holding down the claw in the direction of the black arrow labeled B, slide the mirror in the direction of the white arrow and remove it.

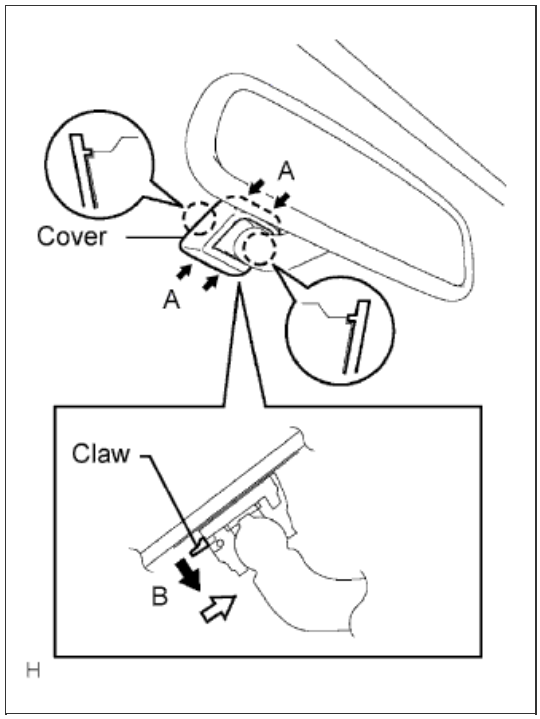

for Preparation Click here

1. INSPECT INNER REAR VIEW MIRROR ASSEMBLY (w EC Mirror)

a. Check the operation of the electrochromic inner mirror.

i. Connect the battery positive (lead to terminal 4 and the negative (lead to terminal 1.


ii. Attach black colored tape to the for ard sensor to prevent it from sensing.

iii. hine an electric light on the mirror. Check that the mirror s rface changes from bright to dark.

HINT:

hen the environment is very bright, the anti lare operation may occ r immediately after the tape is applied.

If the res lt is not as specified, replace the inner rear vie mirror assembly.

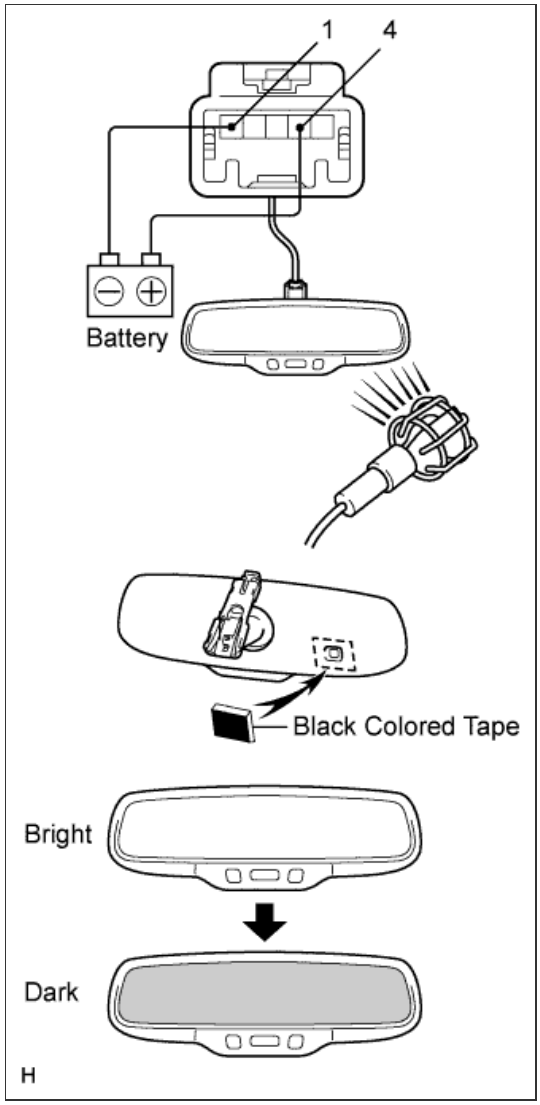


for Preparation Click here

1. INSTALL INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror)

a. Using a T20 "TORX" socket wrench, install the inner rear view mirror with the screw.


Torque:
1.5 N*m{ 15 kgf*cm , 13 in.*lbf }

b. Connect the connector.

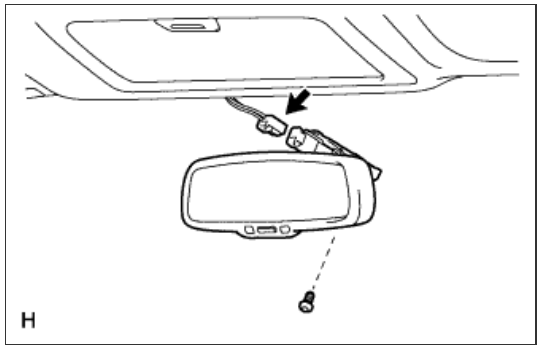

2. INSTALL INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)


a. Attach the 2 claws to install the cover.

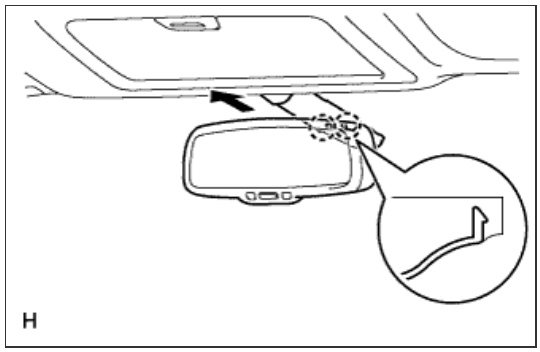

3. INSTALL INNER REAR VIEW MIRROR ASSEMBLY (w/o EC Mirror)

a. Install the mirror in the direction of the white arrow.

b. Install the cover with the 2 claws.

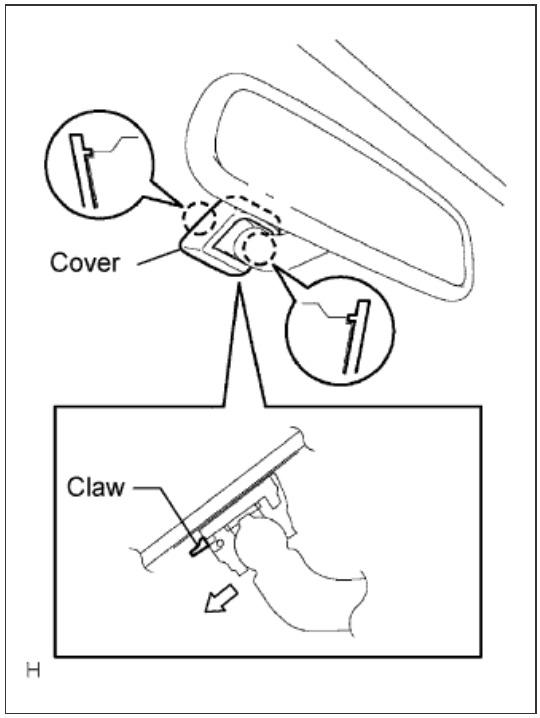

for Preparation Click here

CAUTION:

- **The vehicle is equipped with a Supplemental Restraint System (SRS), which consists of a steering pad, front passenger airbag, curtain shield airbag, front seat airbag, driver side knee airbag, front passenger side knee airbag, rear seat side airbag, rear floor airbag sensor, seat belt pretensioner, center airbag sensor, front airbag sensor, side airbag sensor, rear airbag sensor and seat position sensor. Failure to carry out service procedures in the correct sequence could cause SRS parts to unexpectedly deploy and possibly lead to serious injuries. Furthermore, if a mistake is made when servicing SRS parts, they may fail to operate when required. Before performing servicing (including installation/removal, inspection and replacement of parts), be sure to read the following precautions.**
- **Before starting work, wait at least 90 seconds after the engine switch is turned off and after the cable is disconnected from the negative (-) battery terminal (SRS parts are equipped with a backup power source. If work is started within 90 seconds of turning the engine switch off and disconnecting the cable from the negative (-) battery terminal, SRS parts may deploy).**
- **Do not expose SRS parts directly to hot air or flames.**

NOTICE:

- **Malfunction symptoms of SRS parts are difficult to confirm. DTCs are the most important source of information when troubleshooting. During troubleshooting, always confirm DTCs before disconnecting the cable from the negative (-) battery terminal.**
- **For minor collisions where SRS parts do not deploy, always inspect the SRS parts.**
- **Before performing repairs, remove the airbag sensors if any kind of impact is likely to occur to an airbag sensor during repairs.**
- **Never use SRS parts from another vehicle. When replacing SRS parts, replace them with new ones.**
- **Never disassemble or attempt to repair SRS parts.**
- **If an SRS part has been dropped, or if there are any cracks, dents or other defects in the case, bracket or connector, replace the SRS part with a new one.**
- **Use an ohmmeter/voltmeter with high impedance (10 kΩ/V minimum) for troubleshooting the electrical circuits.**
- **Information labels are attached to the periphery of SRS parts. Follow the cautions and instructions on the labels.**
- **After work on the SRS is completed, perform the SRS warning light check (Click here).**
- **When the cable is disconnected from the negative (-) battery terminal, the memory settings of each system will be cleared. Because of this, be sure to write down the settings of each system before starting work. When work is finished, reset the settings of each system as before. Never use a backup power supply from outside the vehicle to avoid erasing the memory in a system.**
- **If the vehicle is equipped with a mobile communication system, refer to the Precaution in the Introduction section.**

HINT:

In the airbag system, the center airbag sensor, front airbag sensor LH and RH, side airbag sensor LH and RH, rear airbag sensor LH and RH, rear floor airbag sensor are collectively referred to as the airbag sensors.

1.HANDLING PRECAUTIONS FOR AIRBAG SENSORS

a. Before starting the following operations, wait for at least 90 seconds after disconnecting the cable from the negative (-) battery terminal:

   i. Replacement of the airbag sensors.

   ii. Adjustment of the front/rear doors of the vehicle equipped with side airbags and curtain shield airbags (fitting adjustment).

b. When connecting or disconnecting the airbag sensor connectors, ensure that each sensor is installed in the vehicle.

c. Do not use airbag sensors which have been dropped during operation or transportation.

d. Do not disassemble the airbag sensors.

2.INSPECTION PROCEDURE FOR VEHICLE INVOLVED IN ACCIDENT


a. When the airbag has not deployed, confirm the DTCs by checking the SRS warning light. If there is any malfunction in the SRS airbag system, perform troubleshooting.

b. When any of the airbags have deployed, replace the airbag sensors and check the installation condition.


3.SRS CONNECTORS

a. SRS connectors are located as shown in the following illustration.


w/ Side Airbag:

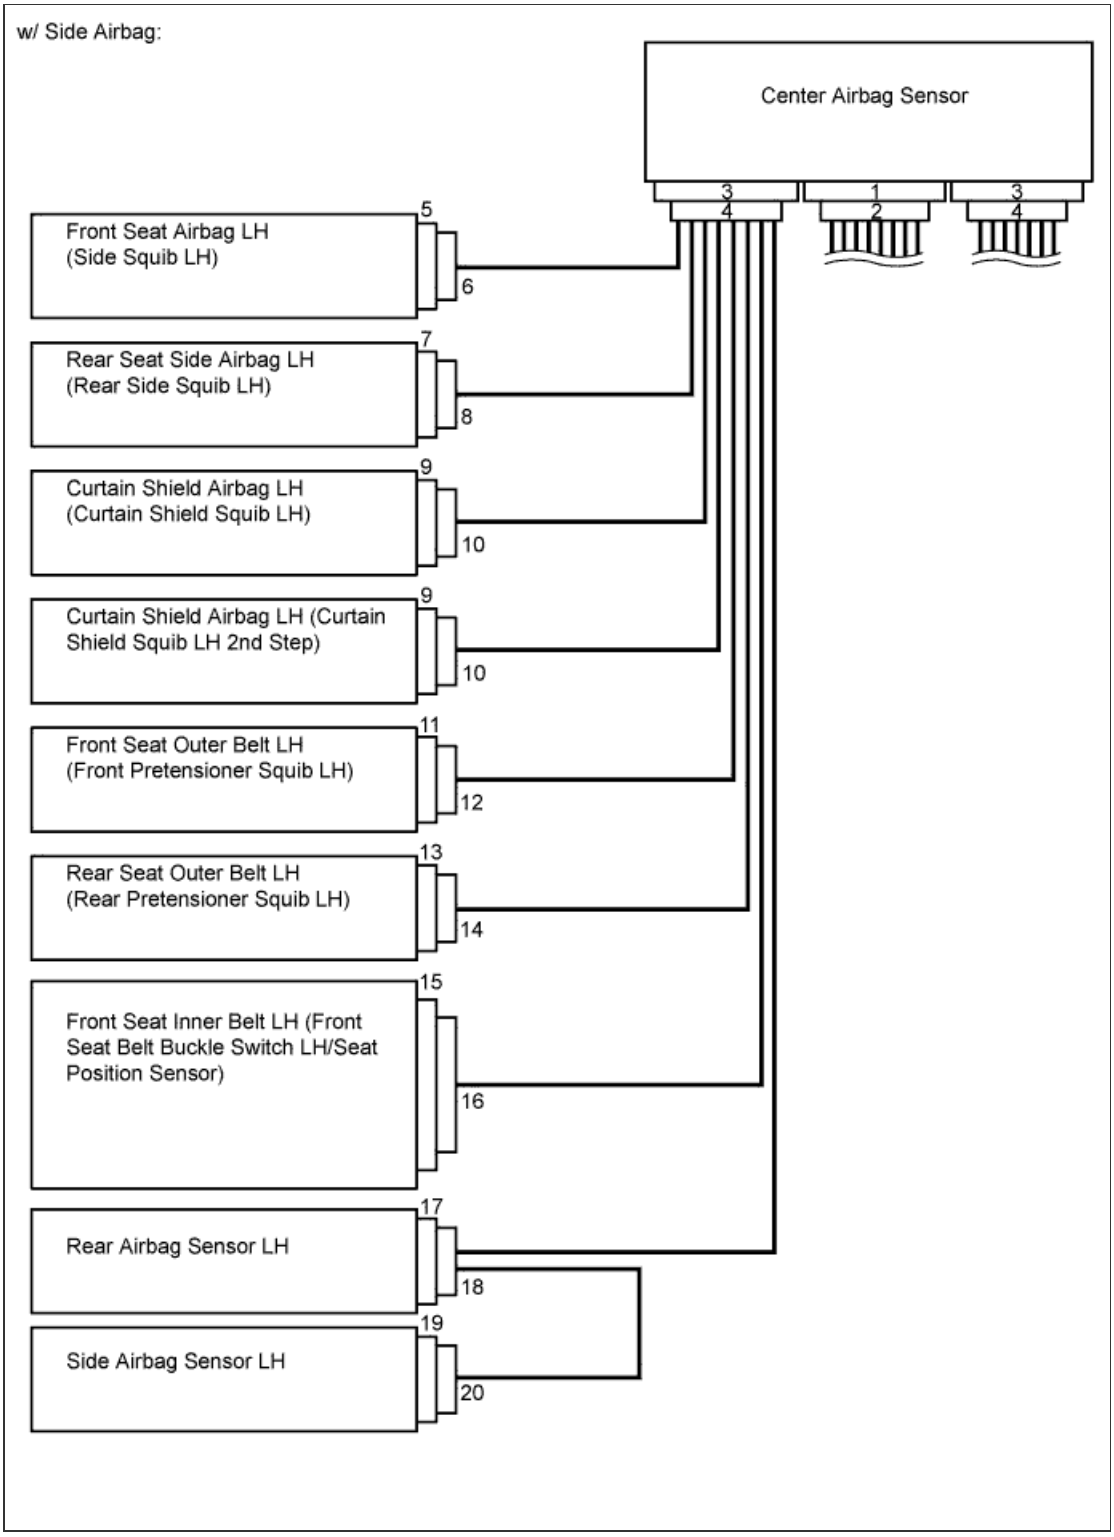


w/ Side Airbag:

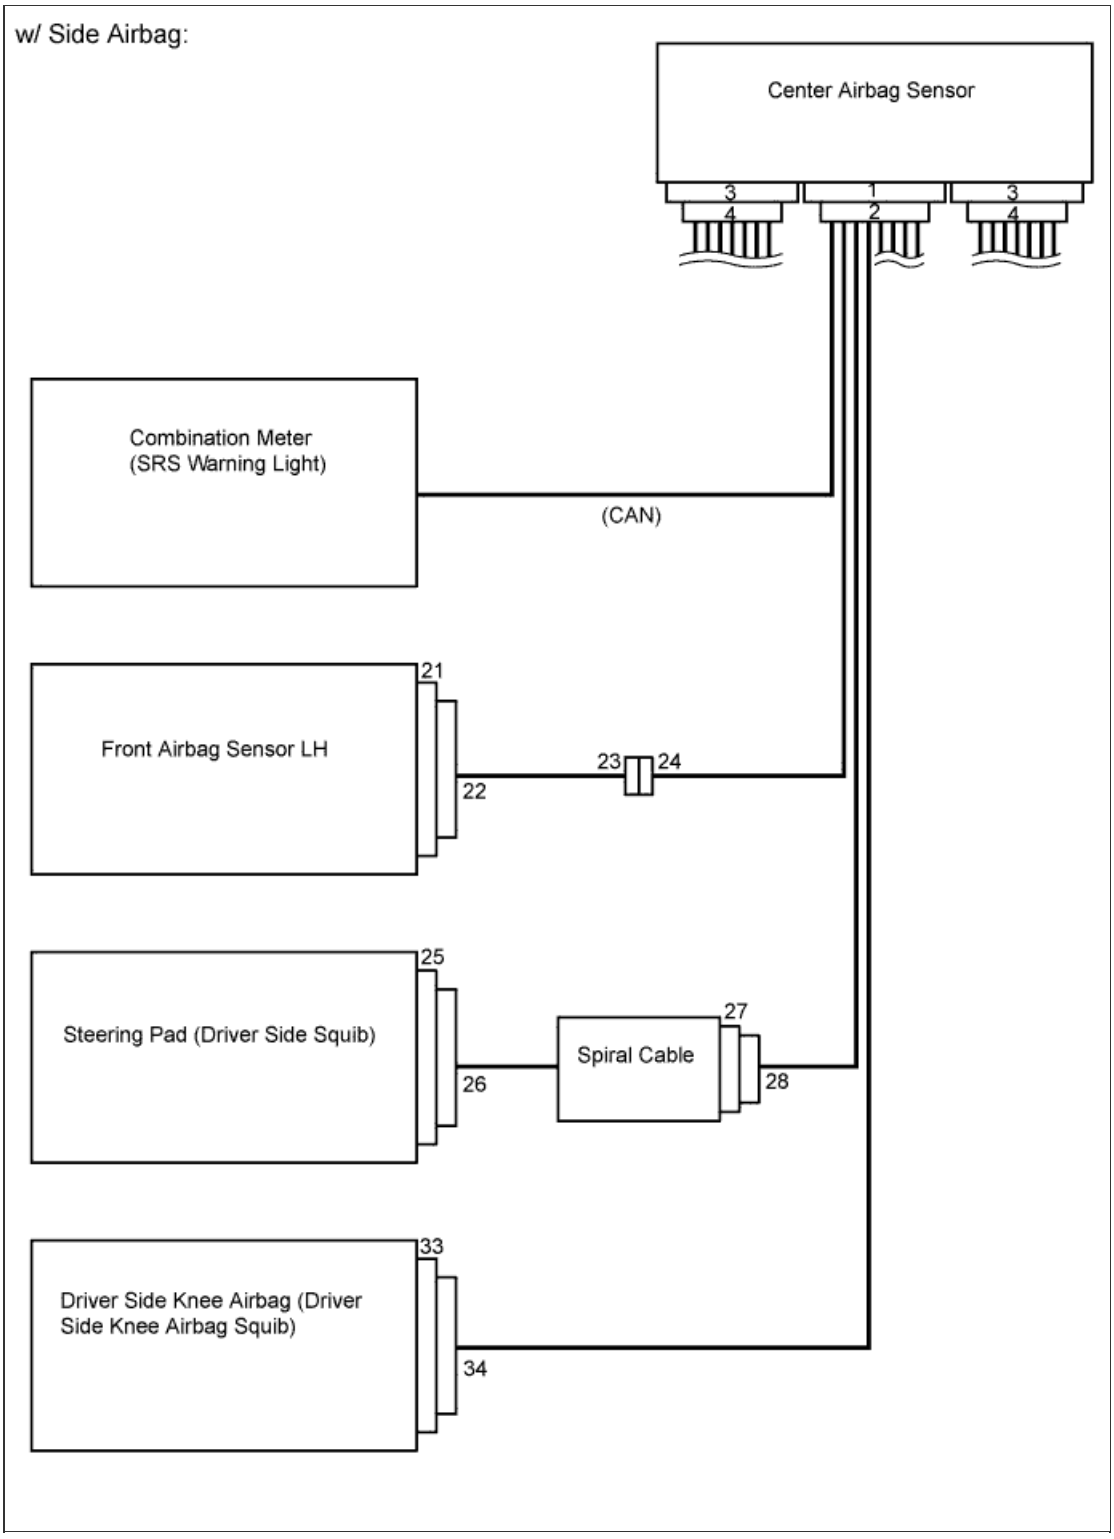


w/ Side Airbag:

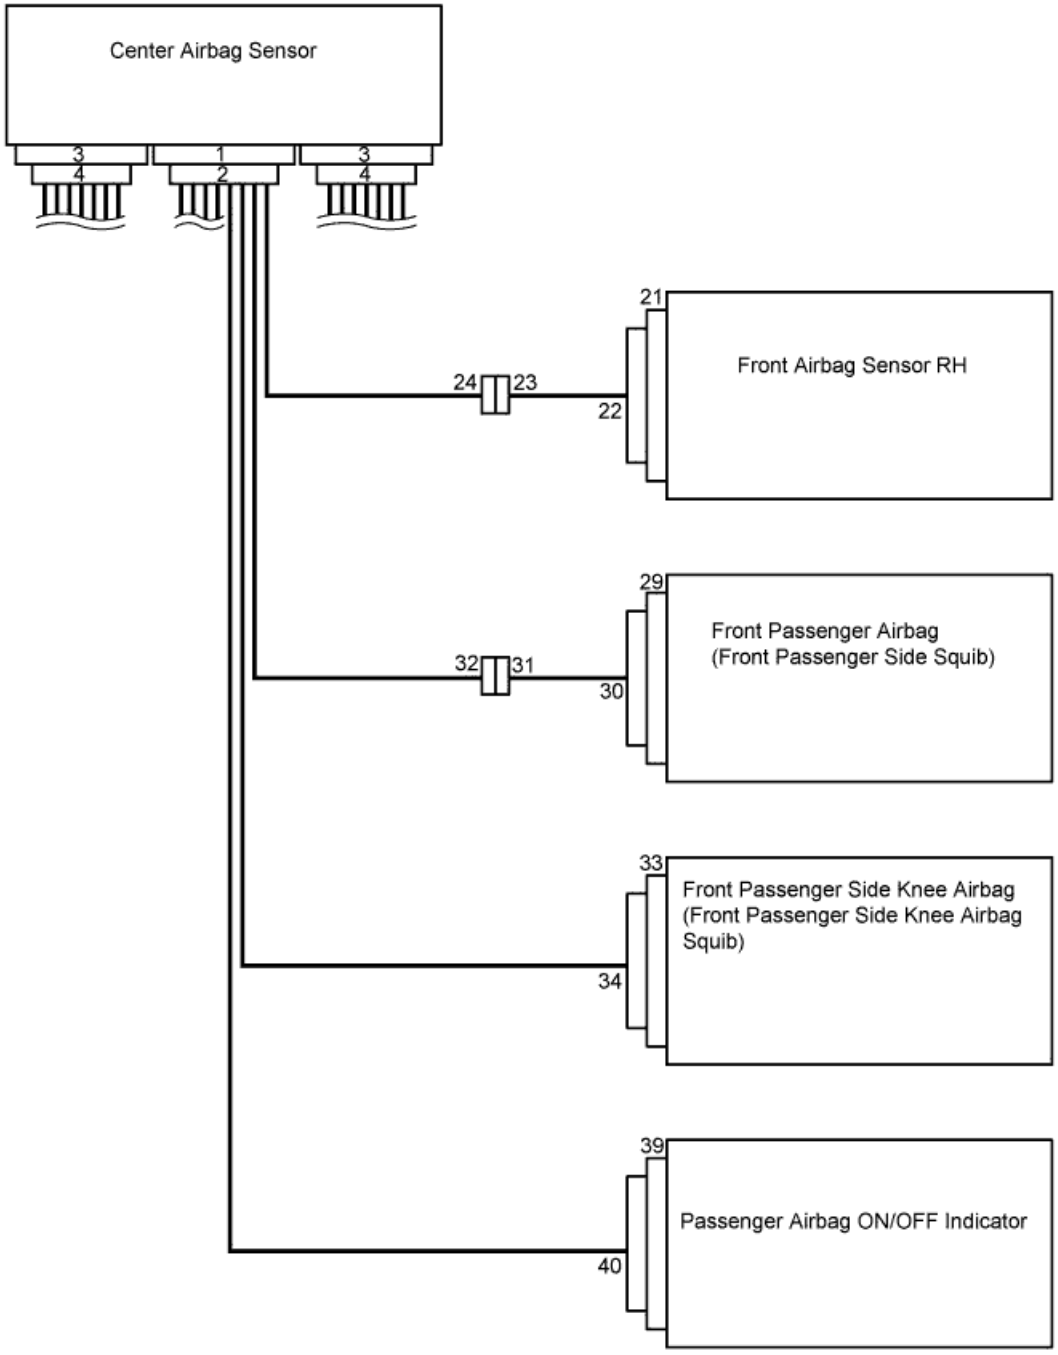


w/ Side Airbag:

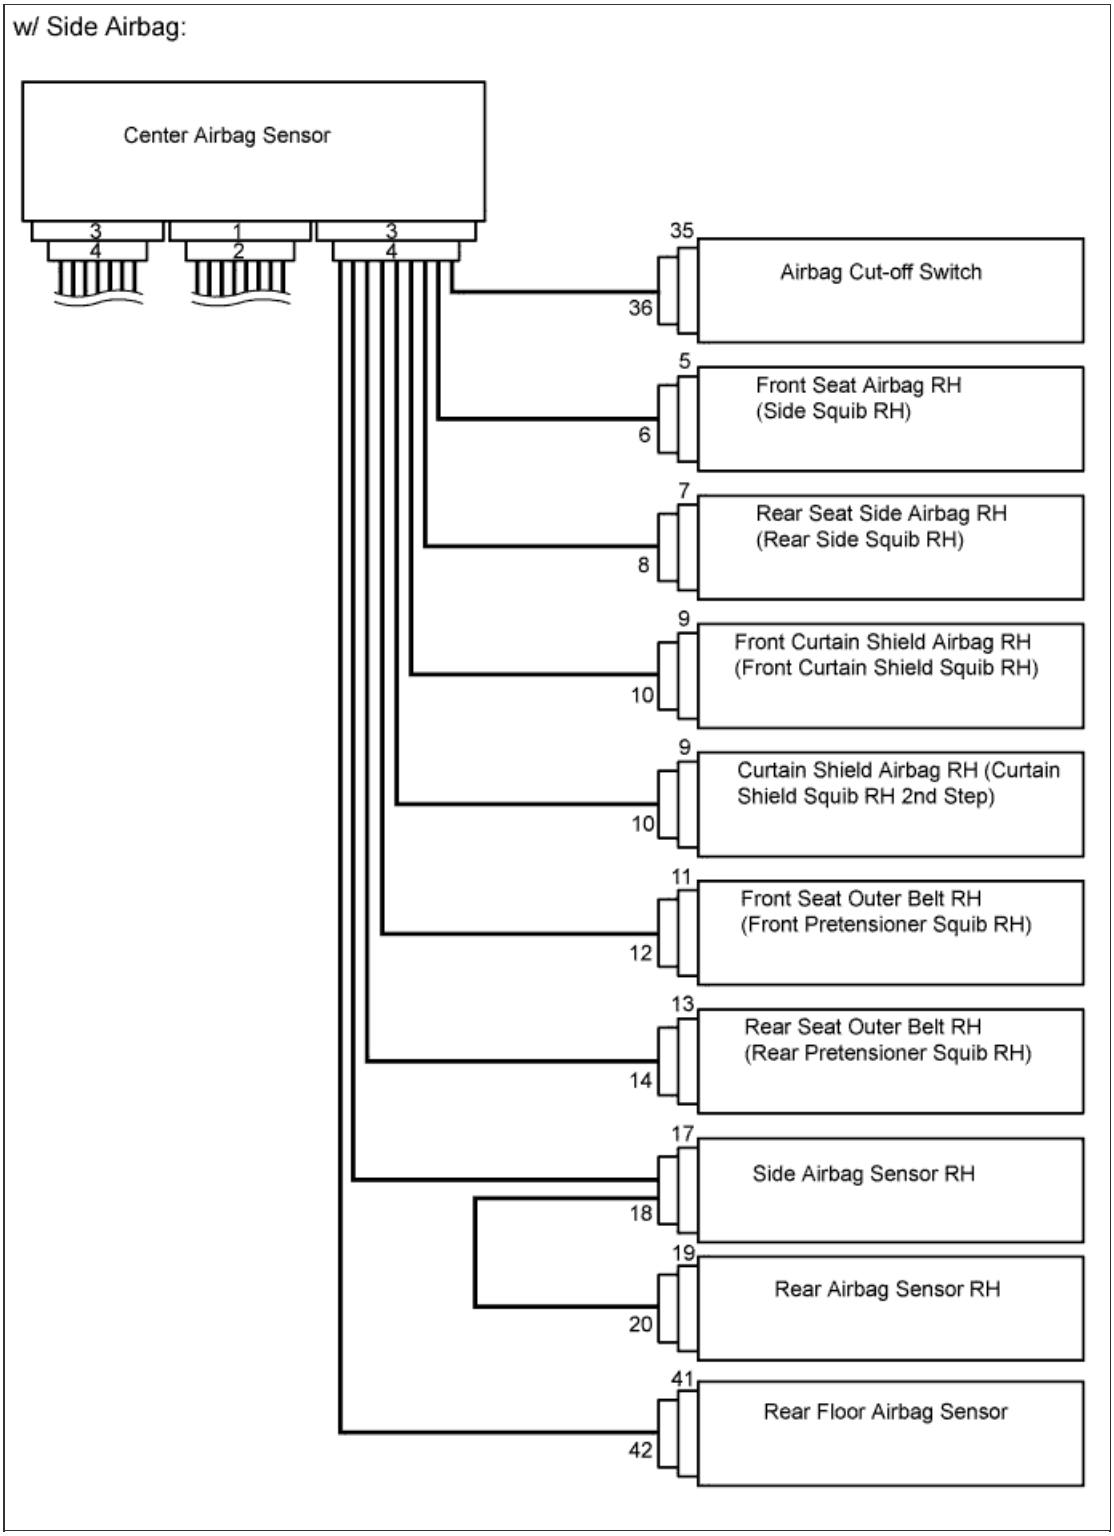


for LHD (w/o Side Airbag):

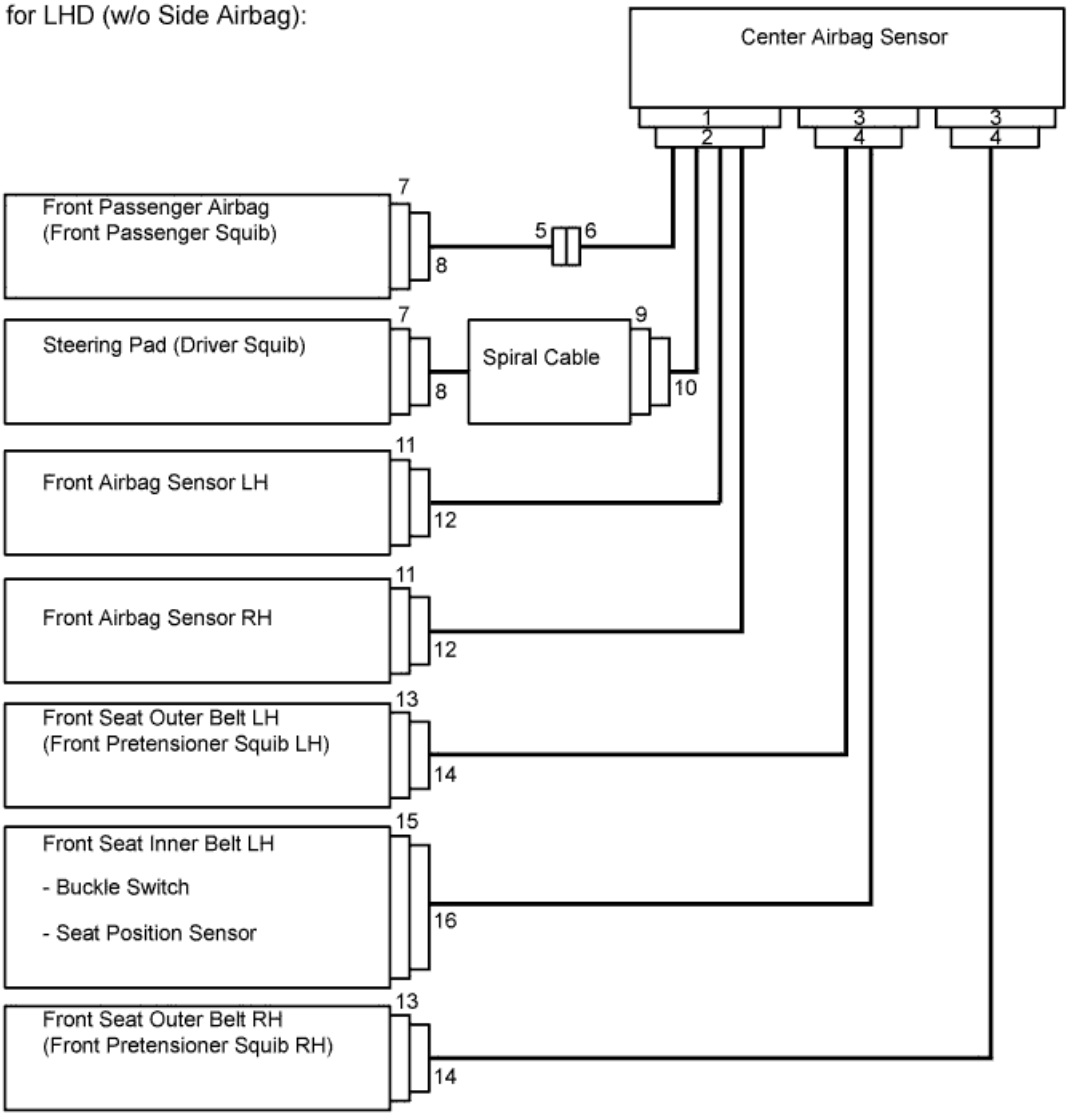

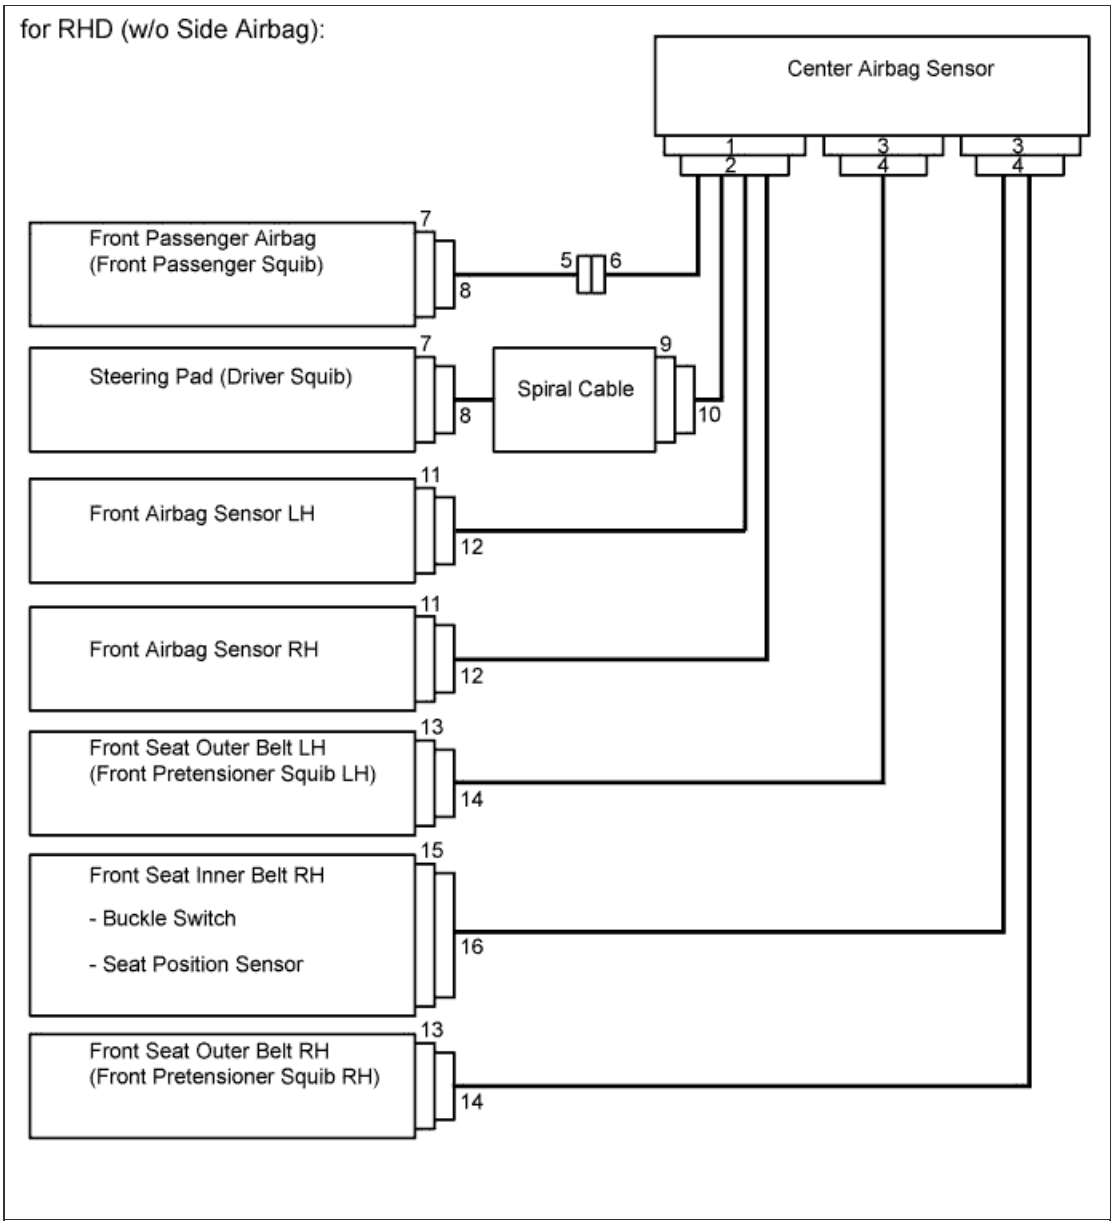


Item	Application
Terminal Twin-lock Mechanism	Connectors 5, 6, 7, 8, 18, 20, 23, 24, 27, 28, 31, 32, 37, 38, 41, 42
Activation Prevention Mechanism	Connectors 5, 7, 27, 31, 37, 41
Half Connection Prevention Mechanism	Connectors 6, 8, 23, 28, 32, 38, 42
Connector Position Assurance Mechanism	Connectors 18, 20, 22
Connector Lock Mechanism (1)	Connectors 10, 12, 14, 26, 30, 34
Connector Lock Mechanism (2)	Connectors 2, 4
Improper Connection Prevention Lock Mechanism	Connectors 1, 3

b. All connectors in the SRS, except the seat position sensor connector, are colored yellow to distinguish them from other connectors. These connectors have special functions, and are specially designed for the SRS. All SRS connectors use durable gold-plated terminals which are placed in the locations shown below to ensure high reliability.

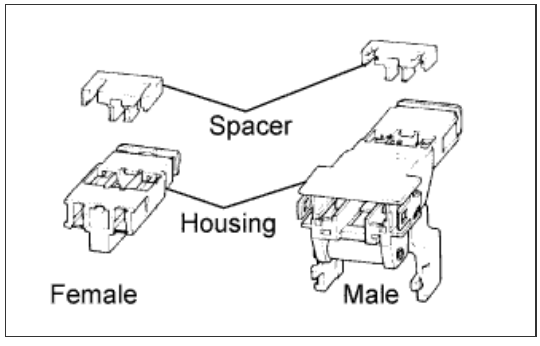


i. Terminal twin-lock mechanism:
All connectors with a terminal twin-lock mechanism have a two-piece component consisting of a housing and a spacer. This design enables the terminal to be locked securely by two locking devices (the retainer and the lance) to prevent terminals from coming out.


ii. Activation prevention mechanism:
All connectors with an activation prevention mechanism contain a short spring plate. When these connectors are disconnected, the short spring plate creates a short circuit by automatically connecting the positive (+) and negative (-) terminals of the squib.

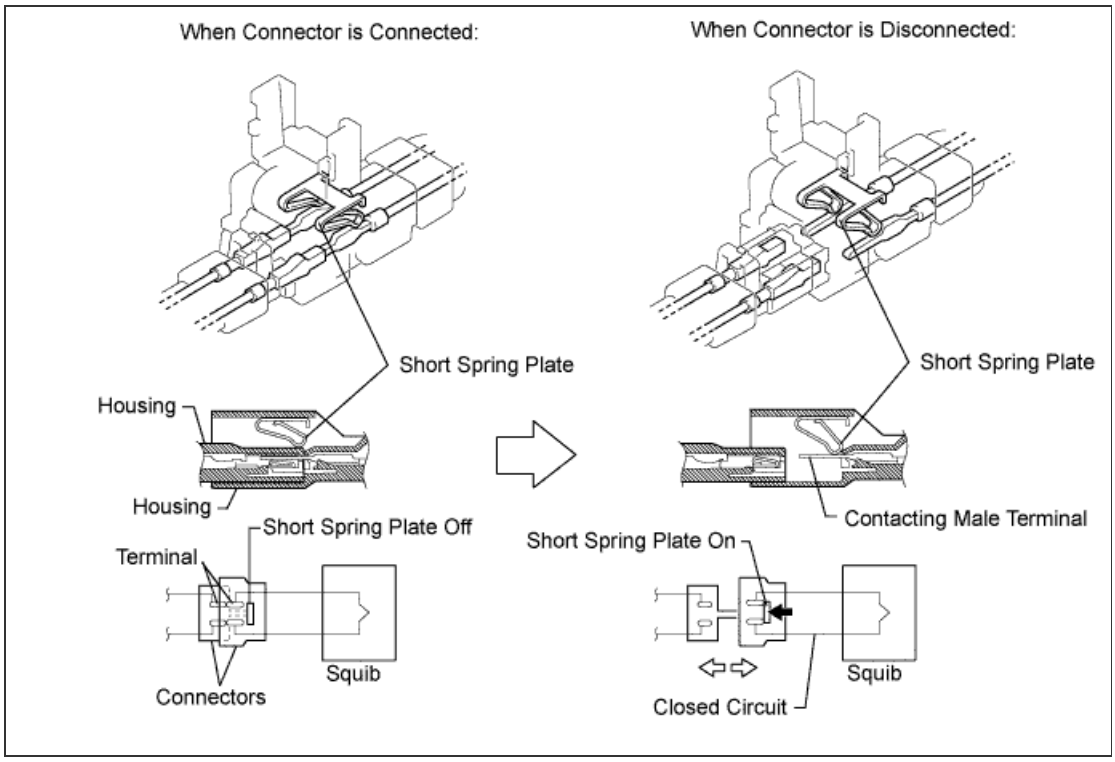

iii. Half connection prevention mechanism:
If the connector is not completely connected, the connector is disconnected due to the spring force so that no continuity exists.

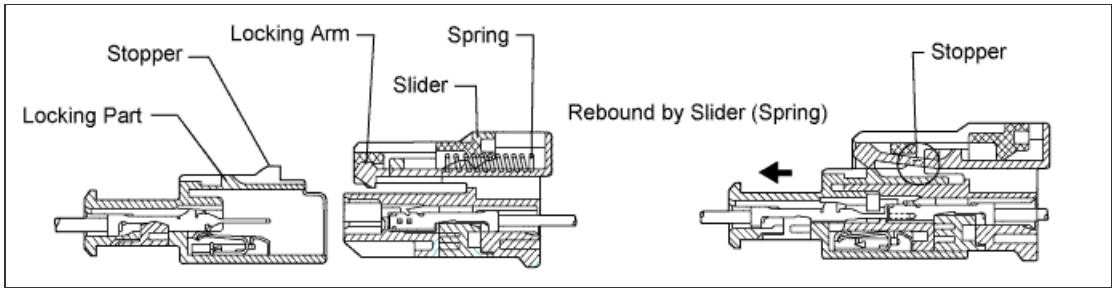


iv. Connector position assurance mechanism:
Only when the housing lock (white part) is completely engaged, the CPA (yellow part) slides, which completes the connector engagement.

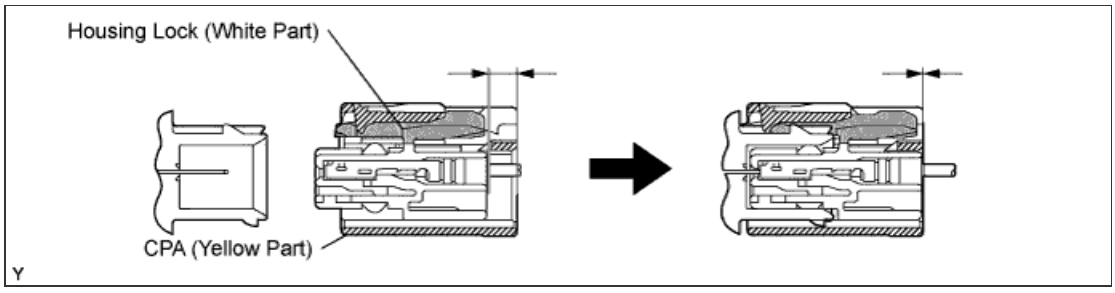


v. Connector lock mechanism (1):


Locking the connector lock button connects the connector securely.

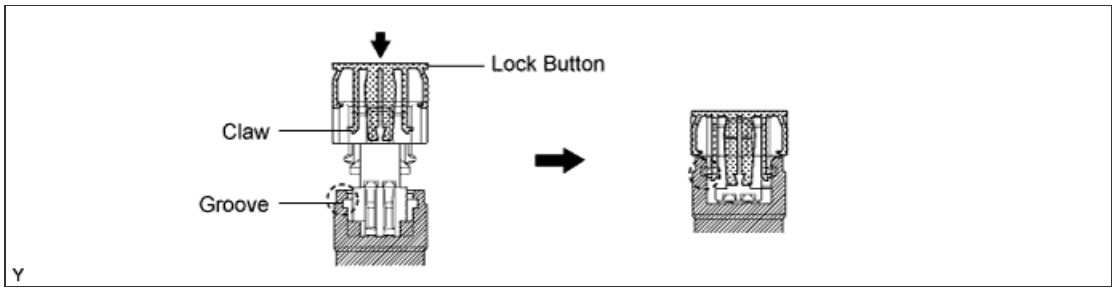

vi. Connector lock mechanism (2):
Both the primary lock with holder lances and the secondary lock with retainer prevent the connectors from becoming disconnected.

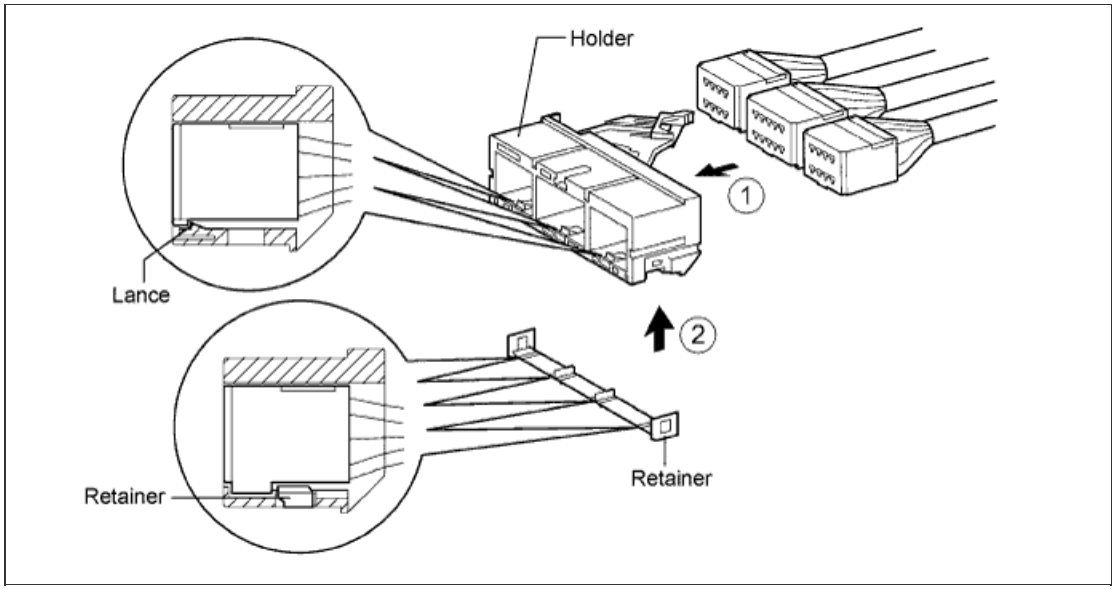

vii. Improper connection prevention lock mechanism:
When connecting the holder, the lever is pushed into the lock position by rotating around the A axis to lock the holder securely.

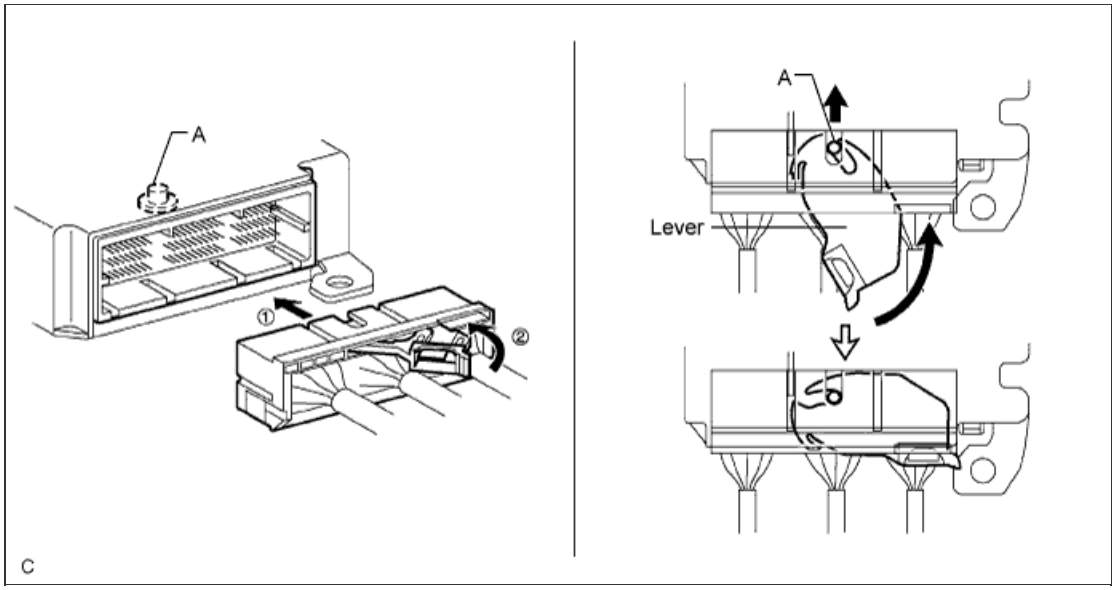


4. ISCONNECTION OF CONNECTORS FOR STEERING PAD, FRONT PASSENGER AIRBAG (SQUIB SIDE), DRIVER SIDE KNEE AIRBAG, FRONT PASSENGER SIDE KNEE AIRBAG, CURTAIN SHIELD AIRBAG, FRONT SEAT AIRBAG (SQUIB SIDE) AND REAR SEAT SIDE AIRBAG (SQUIB SIDE)

HINT:

Tape the screwdriver tip before use.

a. Release the lock button (yellow part) of the connector using a screwdriver.


b. Insert the screwdriver tip between the connector and the base, and then raise the connector.

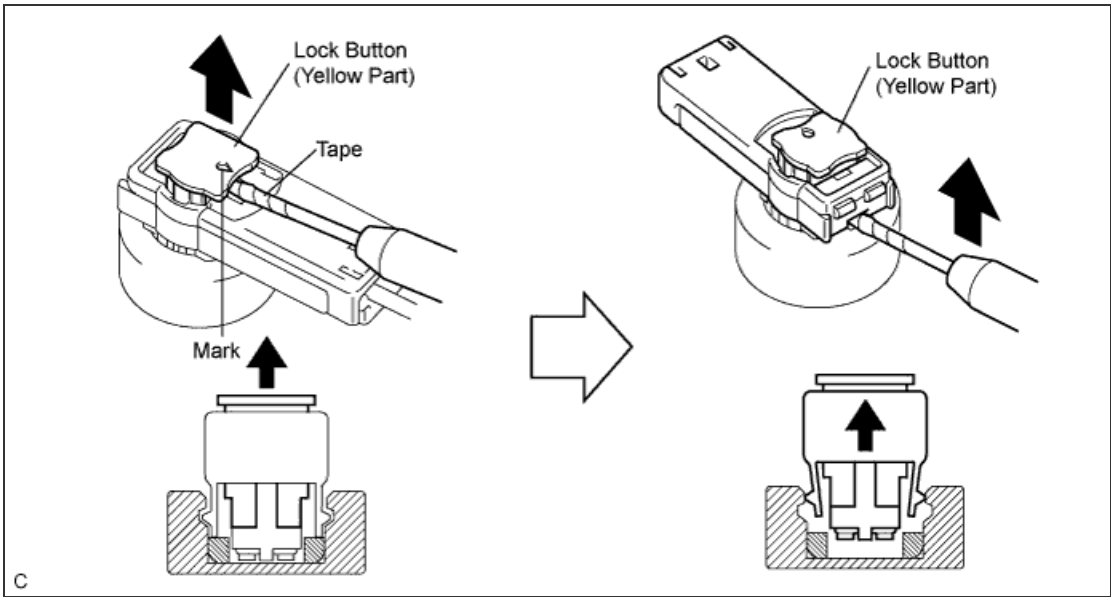

5.CONNECTION OF CONNECTORS FOR STEERING PAD, FRONT PASSENGER AIRBAG (SQUIB SIDE), DRIVER SIDE KNEE AIRBAG, FRONT PASSENGER SIDE KNEE AIRBAG, CURTAIN SHIELD AIRBAG, FRONT SEAT AIRBAG (SQUIB SIDE) AND REAR SEAT SIDE AIRBAG (SQUIB SIDE)

a. Connect the connector.

b. Push down securely on the lock button (yellow part) of the connector (when locked, a click sound can be heard).

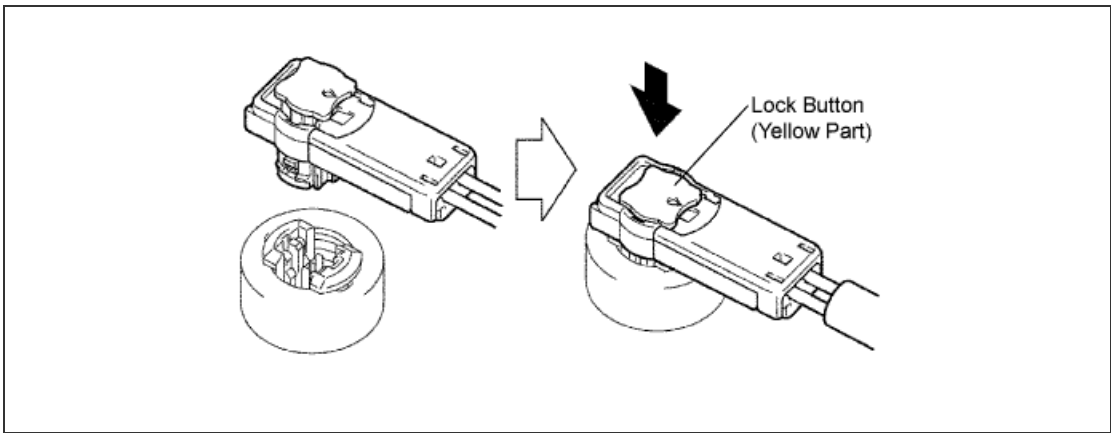


6.DISCONNECTION OF CONNECTORS FOR FRONT SEAT OUTER BELT AND REAR SEAT OUTER BELT

HINT:

Tape the screwdriver tip before use.

a. Release the lock button (black part) of the connector using a screwdriver.


b. Insert the screwdriver tip between the connector and the base, and then raise the connector.

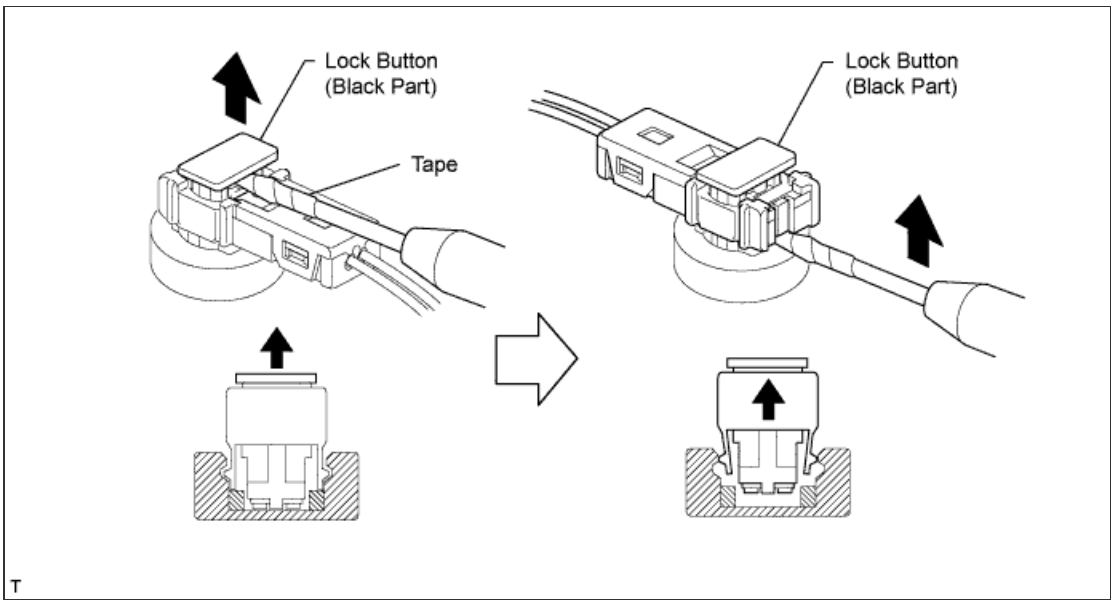

7.CONNECTION OF CONNECTORS FOR FRONT SEAT OUTER BELT AND REAR SEAT OUTER BELT


a. Connect the connector.

b. Push down security on the lock button (black part) of the connector (when locked, a click sound can be heard).

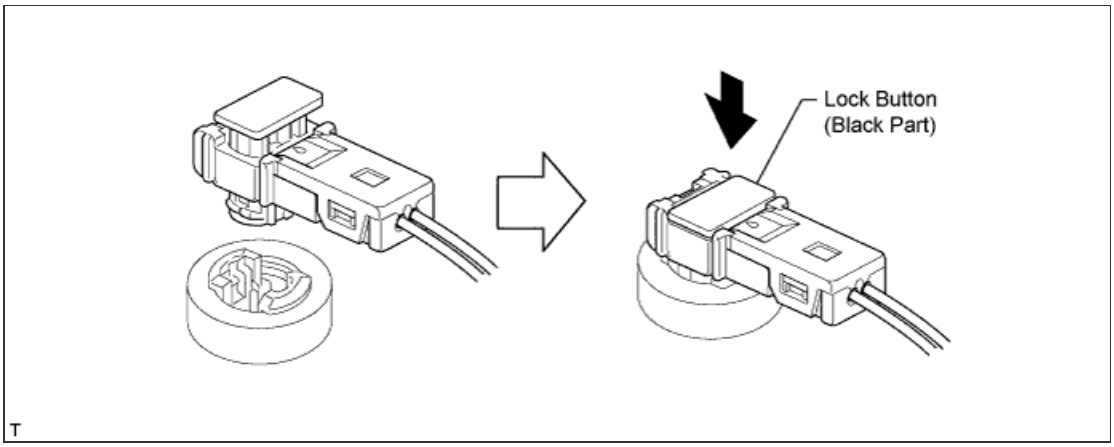

8.DISCONNECTION OF CONNECTOR FOR SPIRAL CABLE (INSTRUMENT PANEL WIRE SIDE) AND FRONT PASSENGER AIRBAG (INSTRUMENT PANEL WIRE SIDE)

a. Place a finger on the slider, slide the slider to release the lock, and then disconnect the connector.

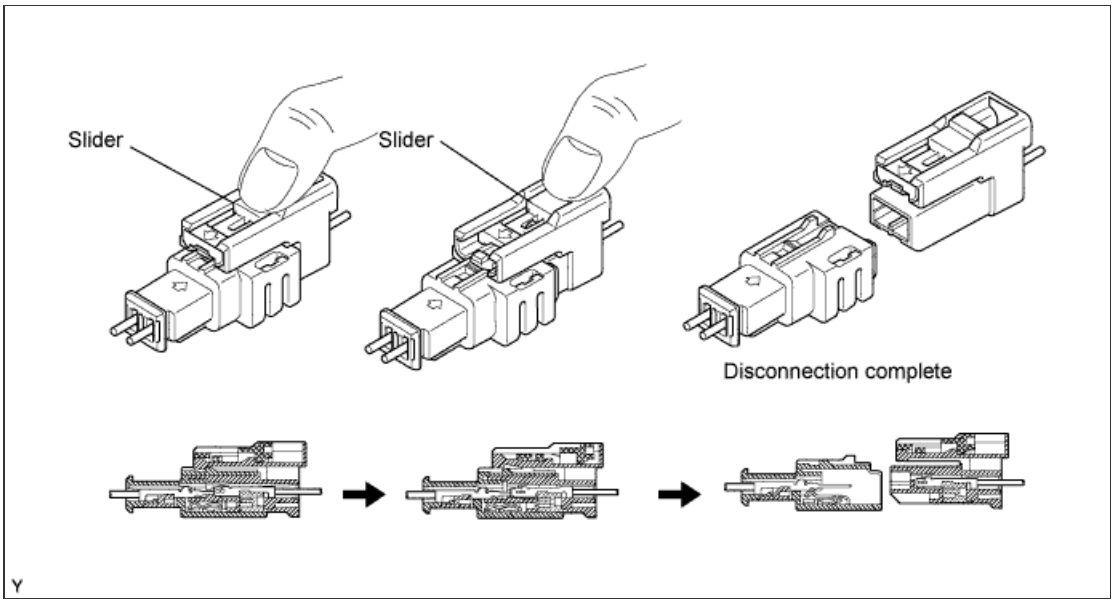


9.CONNECTION OF CONNECTOR FOR SPIRAL CABLE (INSTRUMENT PANEL WIRE SIDE) AND FRONT PASSENGER AIRBAG (INSTRUMENT PANEL WIRE ASSEMBLY SIDE)

a. Connect the connector as shown in the illustration (when locking, make sure that the slider returns to its original position and a click sound can be heard).


HINT:

When connecting, the slider will slide. Be sure not to touch the slider while connecting, as it may result in an insecure fit.

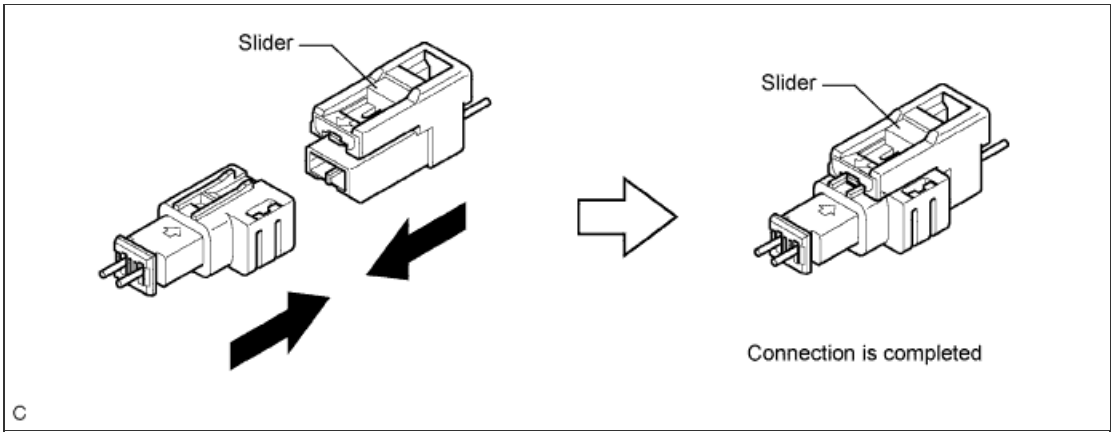

10.DISCONNECTION OF CONNECTORS FOR FRONT SEAT AIRBAG (FLOOR WIRE SIDE) AND REAR SEAT SIDE AIRBAG (FLOOR WIRE SIDE)

a. Push the slider with a finger to detach the first claw. Without releasing your finger, slide the slider to detach the second claw and disconnect the connector.

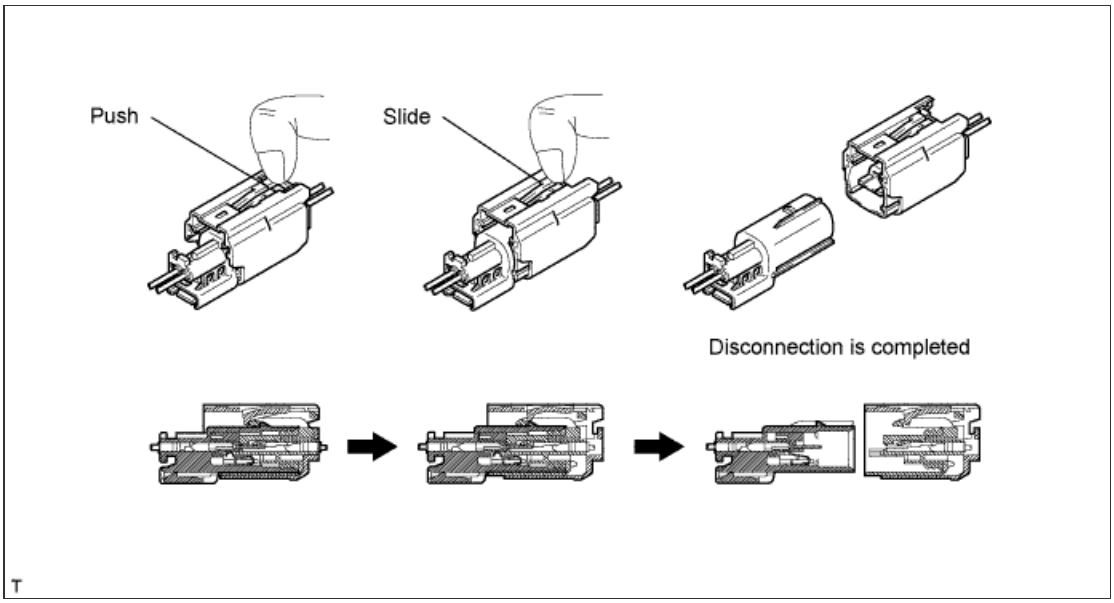


CONNECTION OF CONNECTORS FOR FRONT SEAT AIRBAG (FLOOR WIRE SIDE) AND REAR SEAT SIDE AIRBAG (FLOOR WIRE SIDE)

a. Connect the connector as shown in the illustration (when locking, make sure that the slider returns to its original position and click sounds can be heard).


HINT:

When connecting, the slider will slide. Be sure not to touch the slider while connecting, as it may result in an insecure fit.

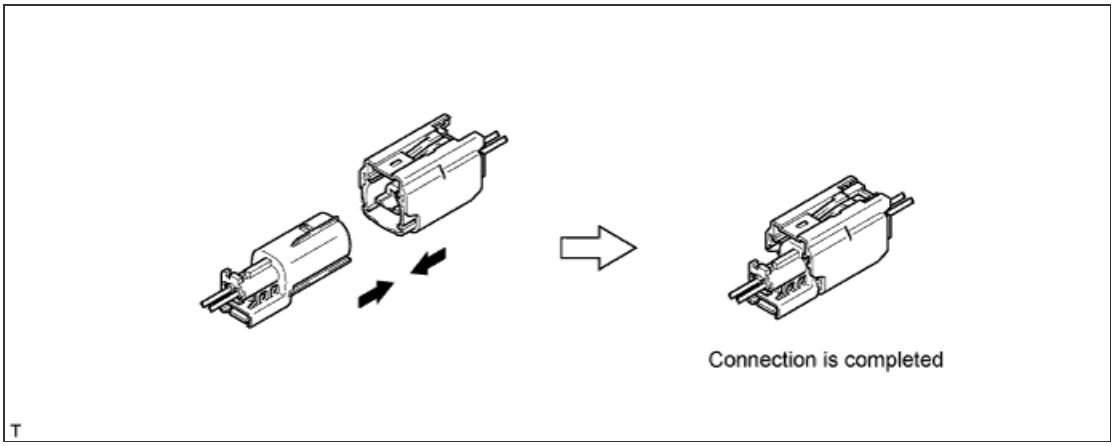

12.DISCONNECTION OF CONNECTOR FOR CENTER AIRBAG SENSOR

a. Pull the lever by pushing part A as shown in the illustration and disconnect the holder (with connectors).

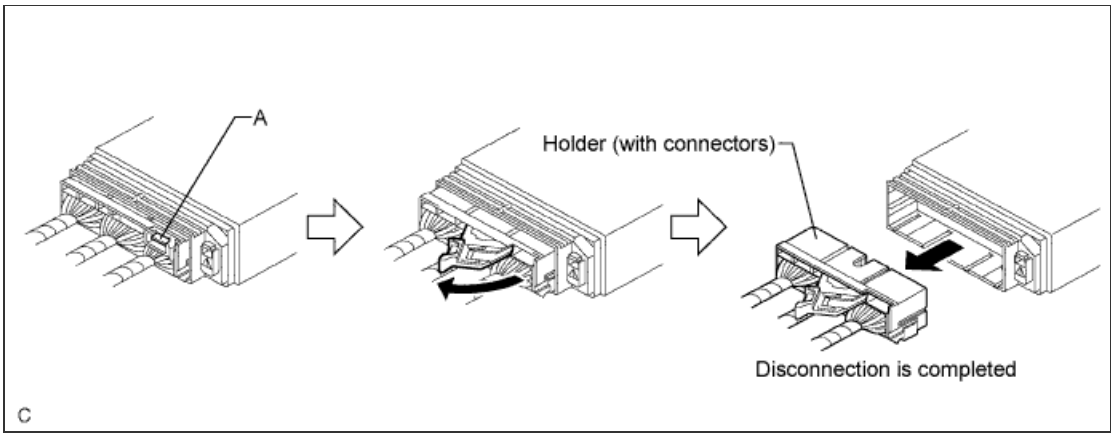


HINT:


Perform the following procedures when replacing the holder.

b. Remove the holder.

i. Using a screwdriver, unlock the retainer.

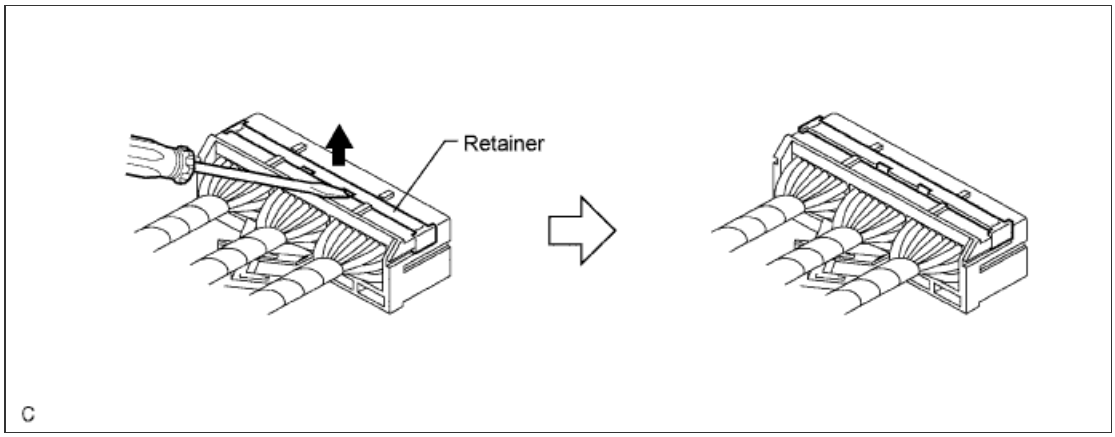

ii. Release the fitting lances and remove the holder.

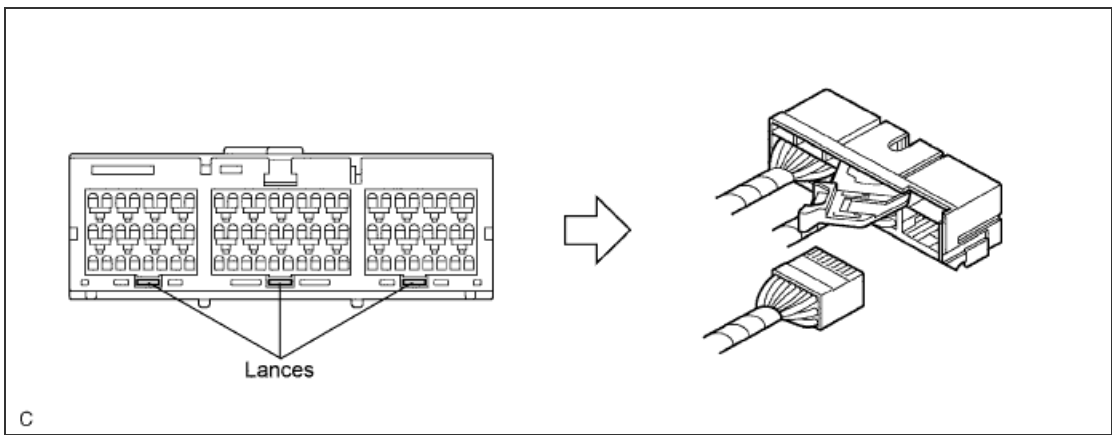


c. Install the holder.

i. Install the connectors to the holder (when locked, a click sound can be heard).

HINT:

The retainer is locked when the holder is connected.

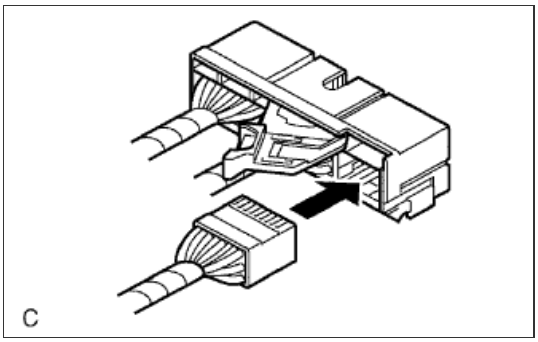


13.CONNECTION OF CONNECTOR FOR CENTER AIRBAG SENSOR

a. Firmly insert the holder (with connectors) into the center airbag sensor until it cannot be pushed any further.

b. Push the lever to connect the holder (with connectors) (when locked, a click sound can be heard).

HINT:

The holder slides into the center airbag sensor when it is being connected. Be sure not to hold the holder while connecting, as it may result in an insecure fit.

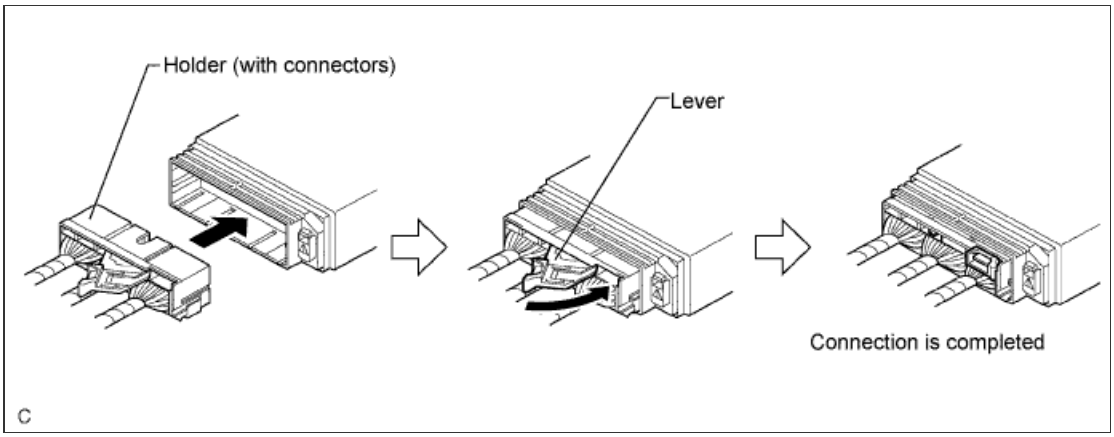


14.DISCONNECTION OF CONNECTOR FOR FRONT AIRBAG SENSOR, REAR AIRBAG SENSOR RH AND REAR FLOOR AIRBAG SENSOR

a. Push down the housing lock (white part) and slide the CPA (yellow part) (at this time, the connector cannot be disconnected yet).


b. Push down the housing lock (white part) again and disconnect the connector.

HINT:

Do not push down the part labeled A shown in the illustration when disconnecting.

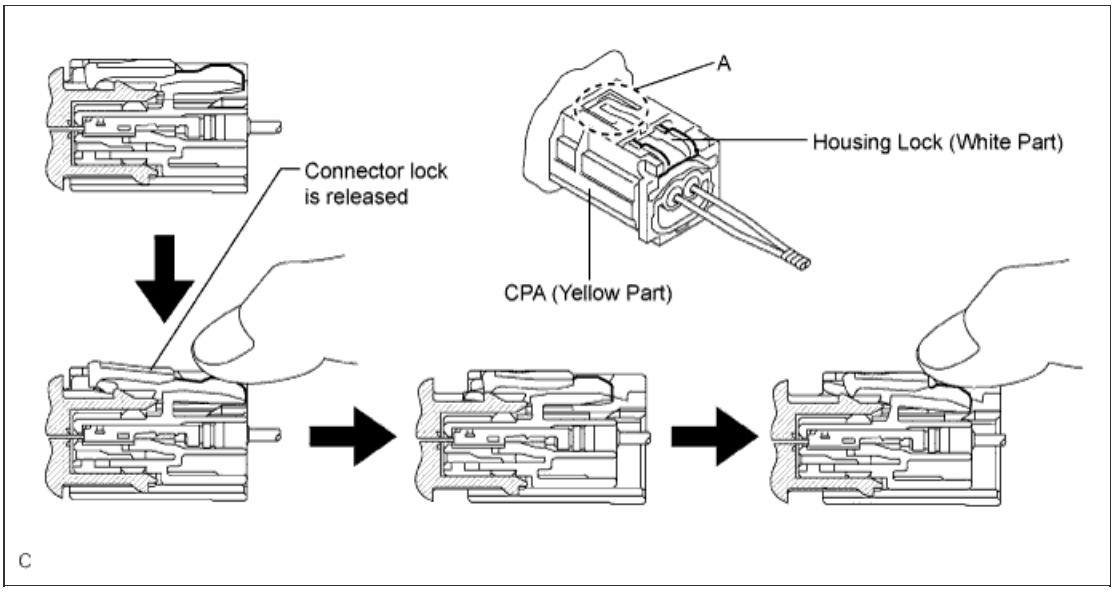


c. After disconnecting the connector, check that the position of the housing lock (white part) is as shown in the illustration.

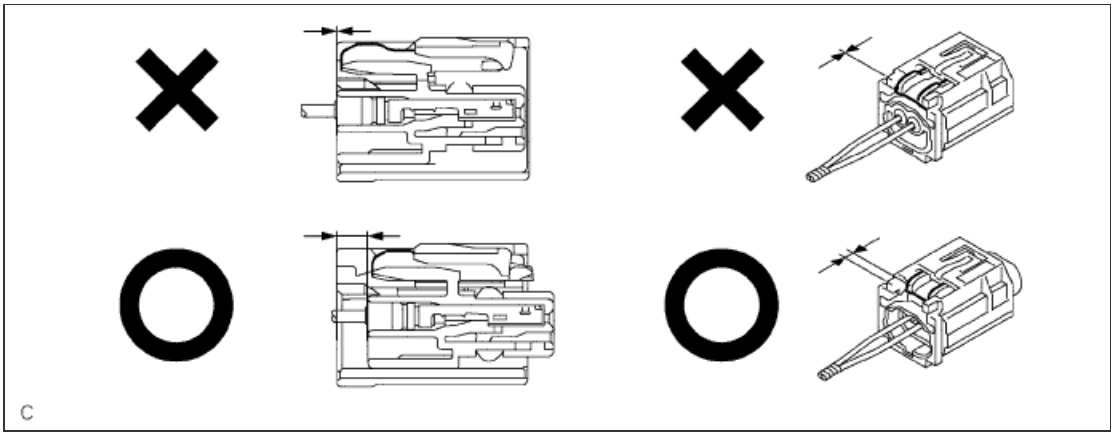

15.CONNECTION OF CONNECTOR FOR FRONT AIRBAG SENSOR, REAR AIRBAG SENSOR RH AND REAR FLOOR AIRBAG SENSOR


a. Before connecting the connectors, check that the position of the housing lock (white part) is as shown in the illustration.

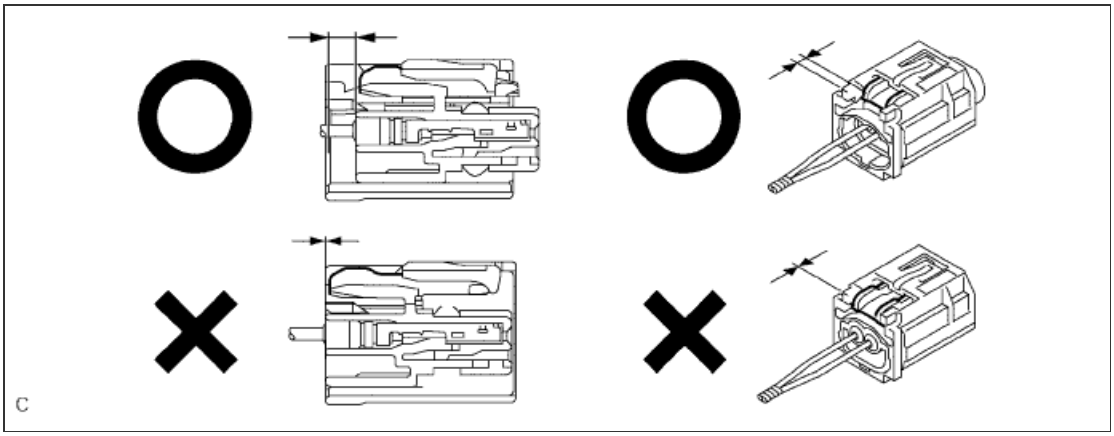

b. Be sure to engage the connectors until they are locked (when locking, make sure that a click sound can be heard).


HINT:

When connecting the connectors, the housing lock (white part) slides. Be sure not to hold the housing lock (white part) and the part labeled A, as it may result in an insecure fit.

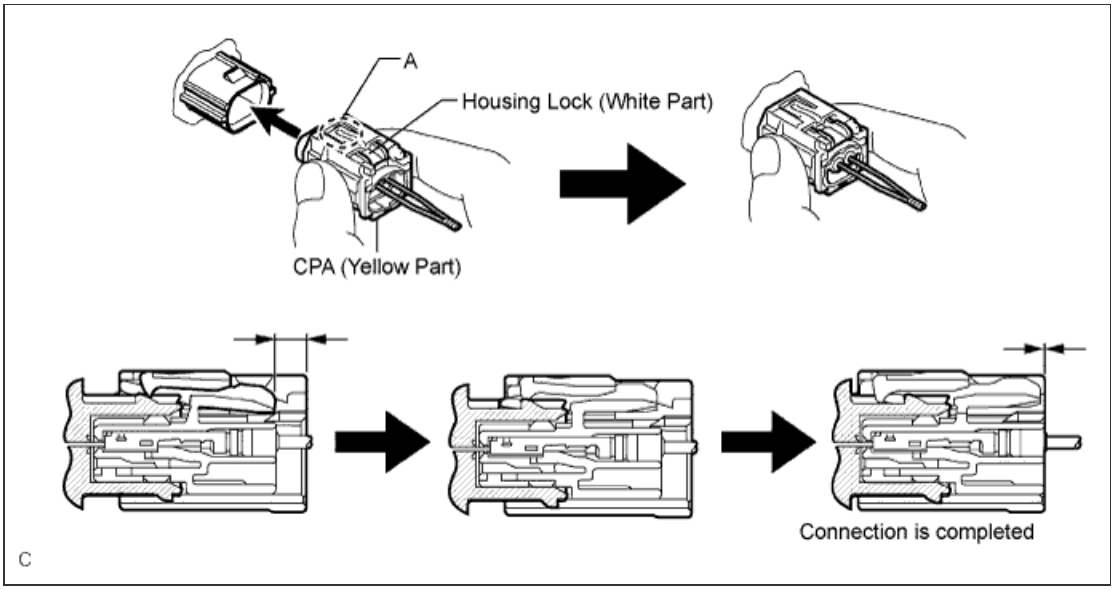

16.DISCONNECTION OF CONNECTORS FOR SIDE AIRBAG SENSOR AND REAR AIRBAG SENSOR LH


a. While holding the sides of the outer connector locking sleeve, slide the sleeve in the direction shown by the arrow.

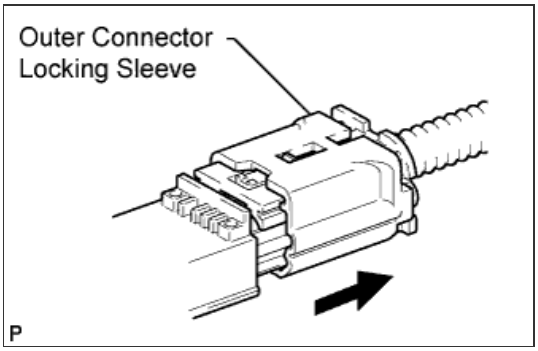

b. When the connector lock is released, the connectors are disconnected.

HINT:

Be sure to hold both sides of the sleeve. Holding the top and bottom will make disconnection difficult.

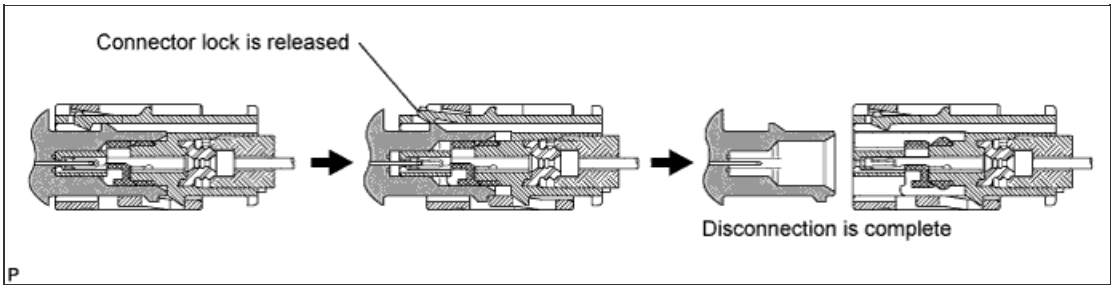


17.CONNECTION OF CONNECTORS FOR SIDE AIRBAG SENSOR AND REAR AIRBAG SENSOR LH

a. Connect the connector as shown in the illustration (when locking, make sure that the outer connector locking sleeve returns to its original

position and a click sound can be heard).

HINT:

When connecting, the sleeve will slide. Be sure not to hold the sleeve while connecting, as it may result in an insecure fit.

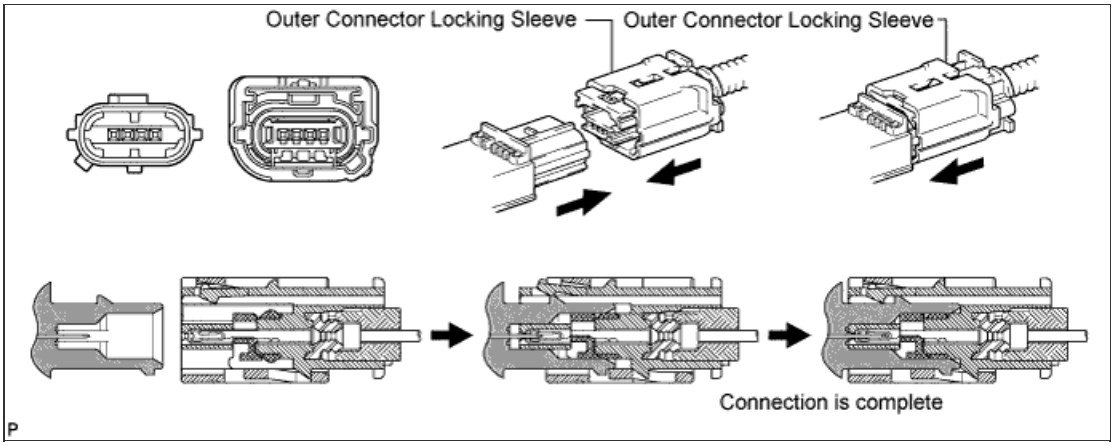

for Preparation Click here

CAUTION:

- **The vehicle is equipped with a Supplemental Restraint System (SRS), which consists of a steering pad, front passenger airbag, curtain shield airbag, front seat airbag, driver side knee airbag, front passenger side knee airbag, rear seat side airbag, rear floor airbag sensor, seat belt pretensioner, center airbag sensor, front airbag sensor, side airbag sensor, rear airbag sensor and seat position sensor. Failure to carry out service procedures in the correct sequence could cause SRS parts to unexpectedly deploy and possibly lead to serious injuries. Furthermore, if a mistake is made when servicing SRS parts, they may fail to operate when required. Before performing servicing (including installation/removal, inspection and replacement of parts), be sure to read the following precautions.**
- **Before starting work, wait at least 90 seconds after the engine switch is turned off and after the cable is disconnected from the negative (-) battery terminal (SRS parts are equipped with a backup power source. If work is started within 90 seconds of turning the engine switch off and disconnecting the cable from the negative (-) battery terminal, SRS parts may deploy).**
- **Do not expose SRS parts directly to hot air or flames.**

NOTICE:

- **Malfunction symptoms of SRS parts are difficult to confirm. DTCs are the most important source of information when troubleshooting. During troubleshooting, always confirm DTCs before disconnecting the cable from the negative (-) battery terminal.**
- **For minor collisions where SRS parts do not deploy, always inspect the SRS parts.**
- **Before performing repairs, remove the airbag sensors if any kind of impact is likely to occur to an airbag sensor during repairs.**
- **Never use SRS parts from another vehicle. When replacing SRS parts, replace them with new ones.**
- **Never disassemble or attempt to repair SRS parts.**
- **If an SRS part has been dropped, or if there are any cracks, dents or other defects in the case, bracket or connector, replace the SRS part with a new one.**
- **Use an ohmmeter/voltmeter with high impedance (10 kΩ/V minimum) for troubleshooting the electrical circuits.**
- **Information labels are attached to the periphery of SRS parts. Follow the cautions and instructions on the labels.**
- **After work on the SRS is completed, perform the SRS warning light check (Click here).**
- **When the cable is disconnected from the negative (-) battery terminal, the memory settings of each system will be cleared. Because of this, be sure to write down the settings of each system before starting work. When work is finished, reset the settings of each system as before. Never use a backup power supply from outside the vehicle to avoid erasing the memory in a system.**
- **If the vehicle is equipped with a mobile communication system, refer to the Precaution in the Introduction section.**

HINT:

In the airbag system, the center airbag sensor, front airbag sensor LH and RH, side airbag sensor LH and RH, rear airbag sensor LH and RH, rear floor airbag sensor are collectively referred to as the airbag sensors.

1.HANDLING PRECAUTIONS FOR AIRBAG SENSORS

a. Before starting the following operations, wait for at least 90 seconds after disconnecting the cable from the negative (-) battery terminal:

   i. Replacement of the airbag sensors.

   ii. Adjustment of the front/rear doors of the vehicle equipped with side airbags and curtain shield airbags (fitting adjustment).

b. When connecting or disconnecting the airbag sensor connectors, ensure that each sensor is installed in the vehicle.

c. Do not use airbag sensors which have been dropped during operation or transportation.

d. Do not disassemble the airbag sensors.

2.INSPECTION PROCEDURE FOR VEHICLE INVOLVED IN ACCIDENT


a. When the airbag has not deployed, confirm the DTCs by checking the SRS warning light. If there is any malfunction in the SRS airbag system, perform troubleshooting.

b. When any of the airbags have deployed, replace the airbag sensors and check the installation condition.


3.SRS CONNECTORS

a. SRS connectors are located as shown in the following illustration.


w/ Side Airbag:

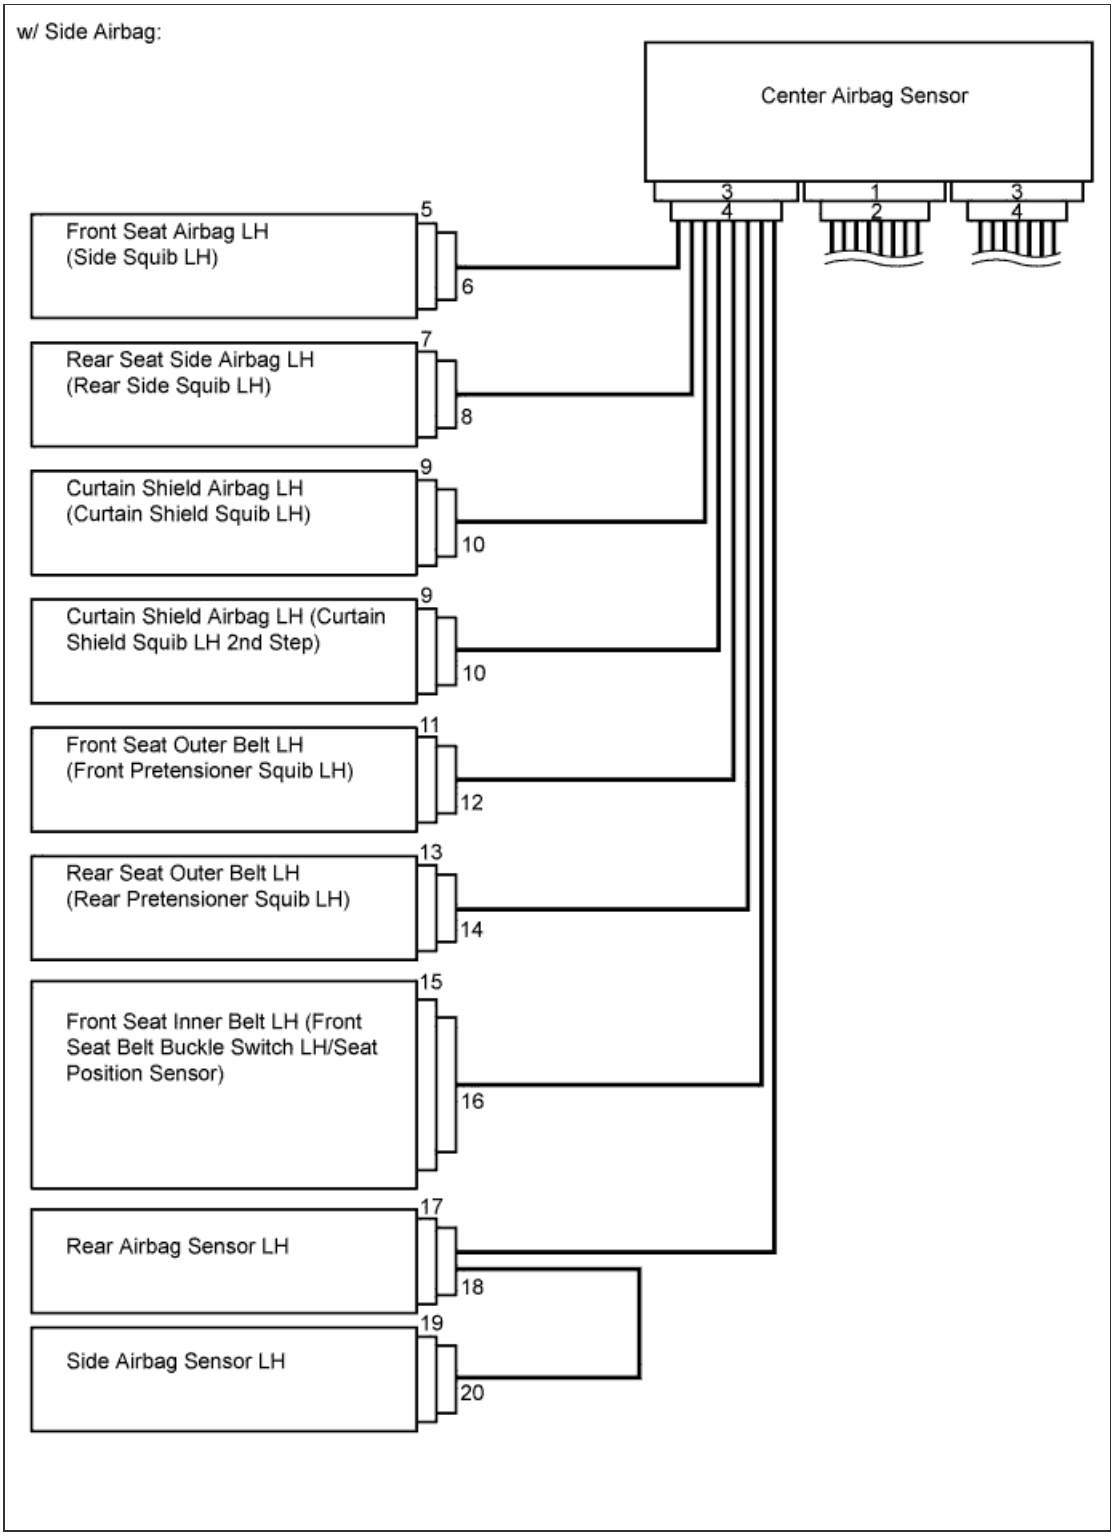


w/ Side Airbag:

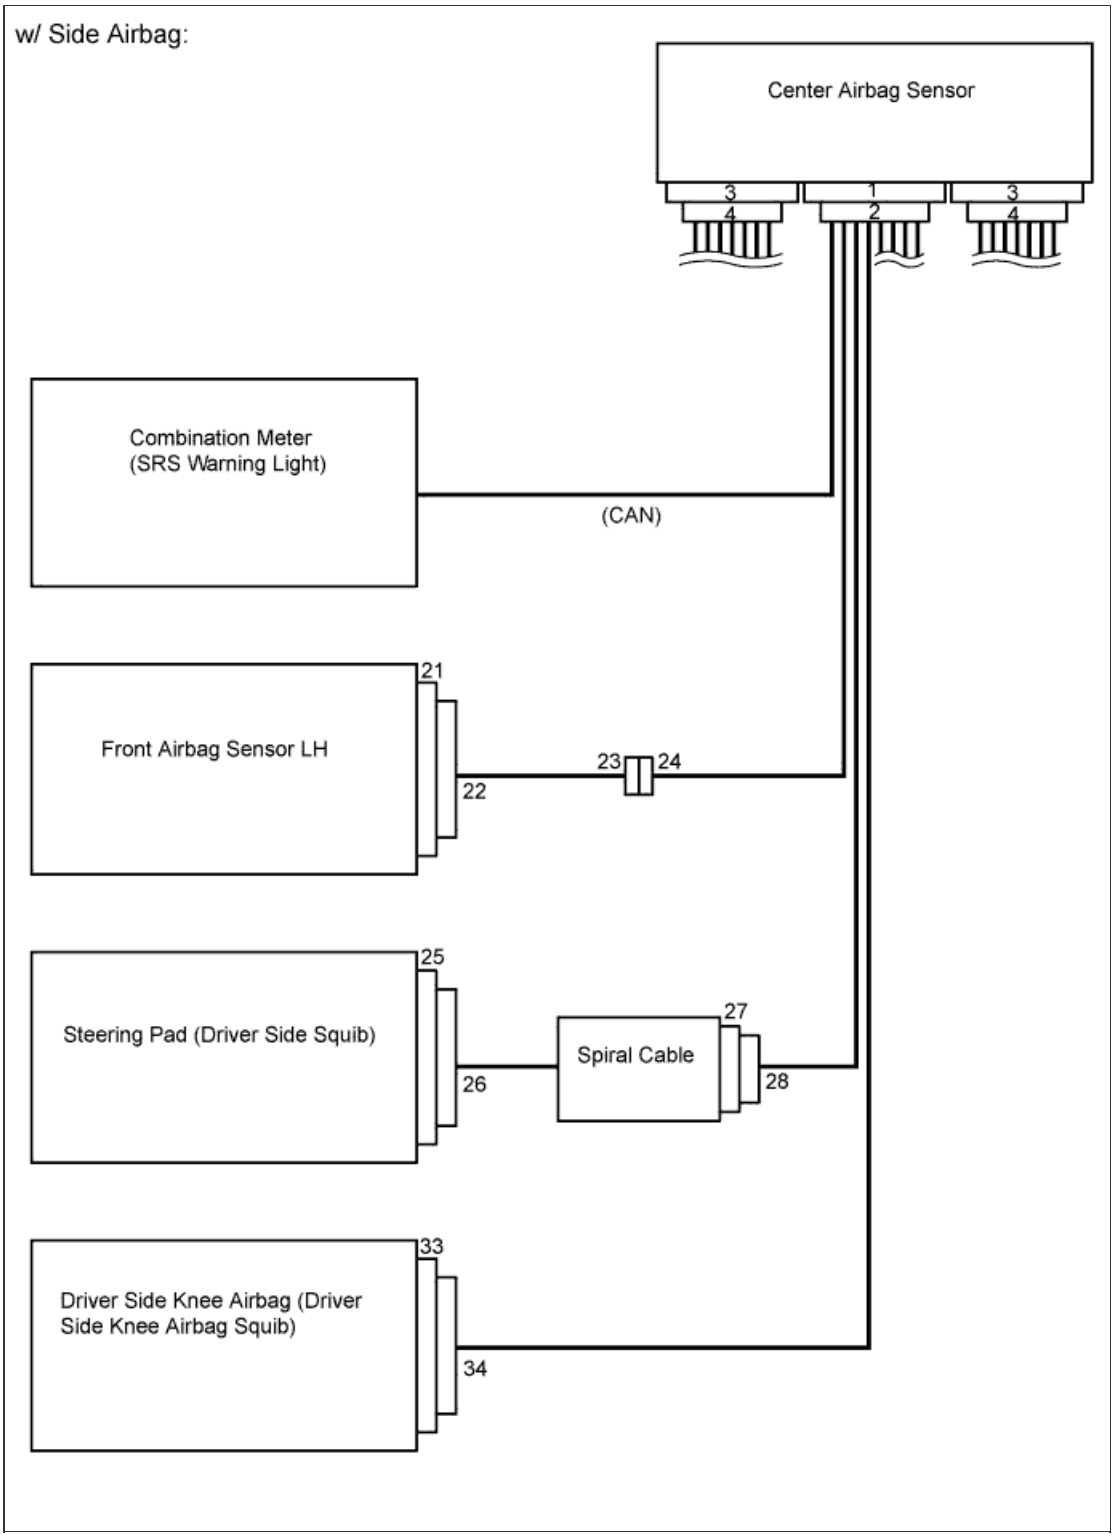


w/ Side Airbag:

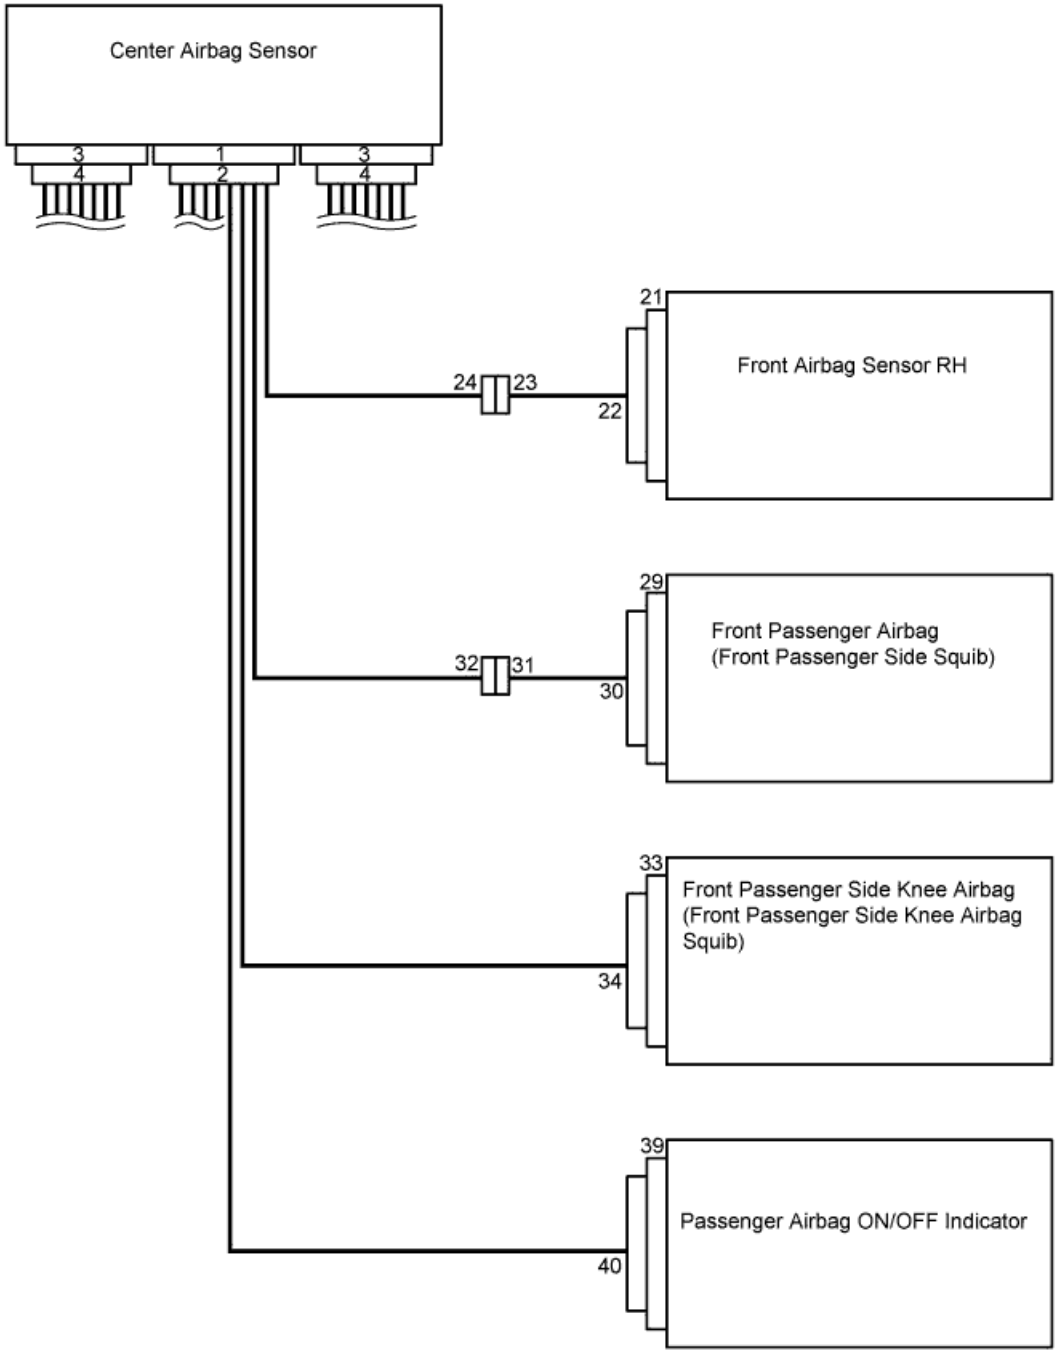


w/ Side Airbag:

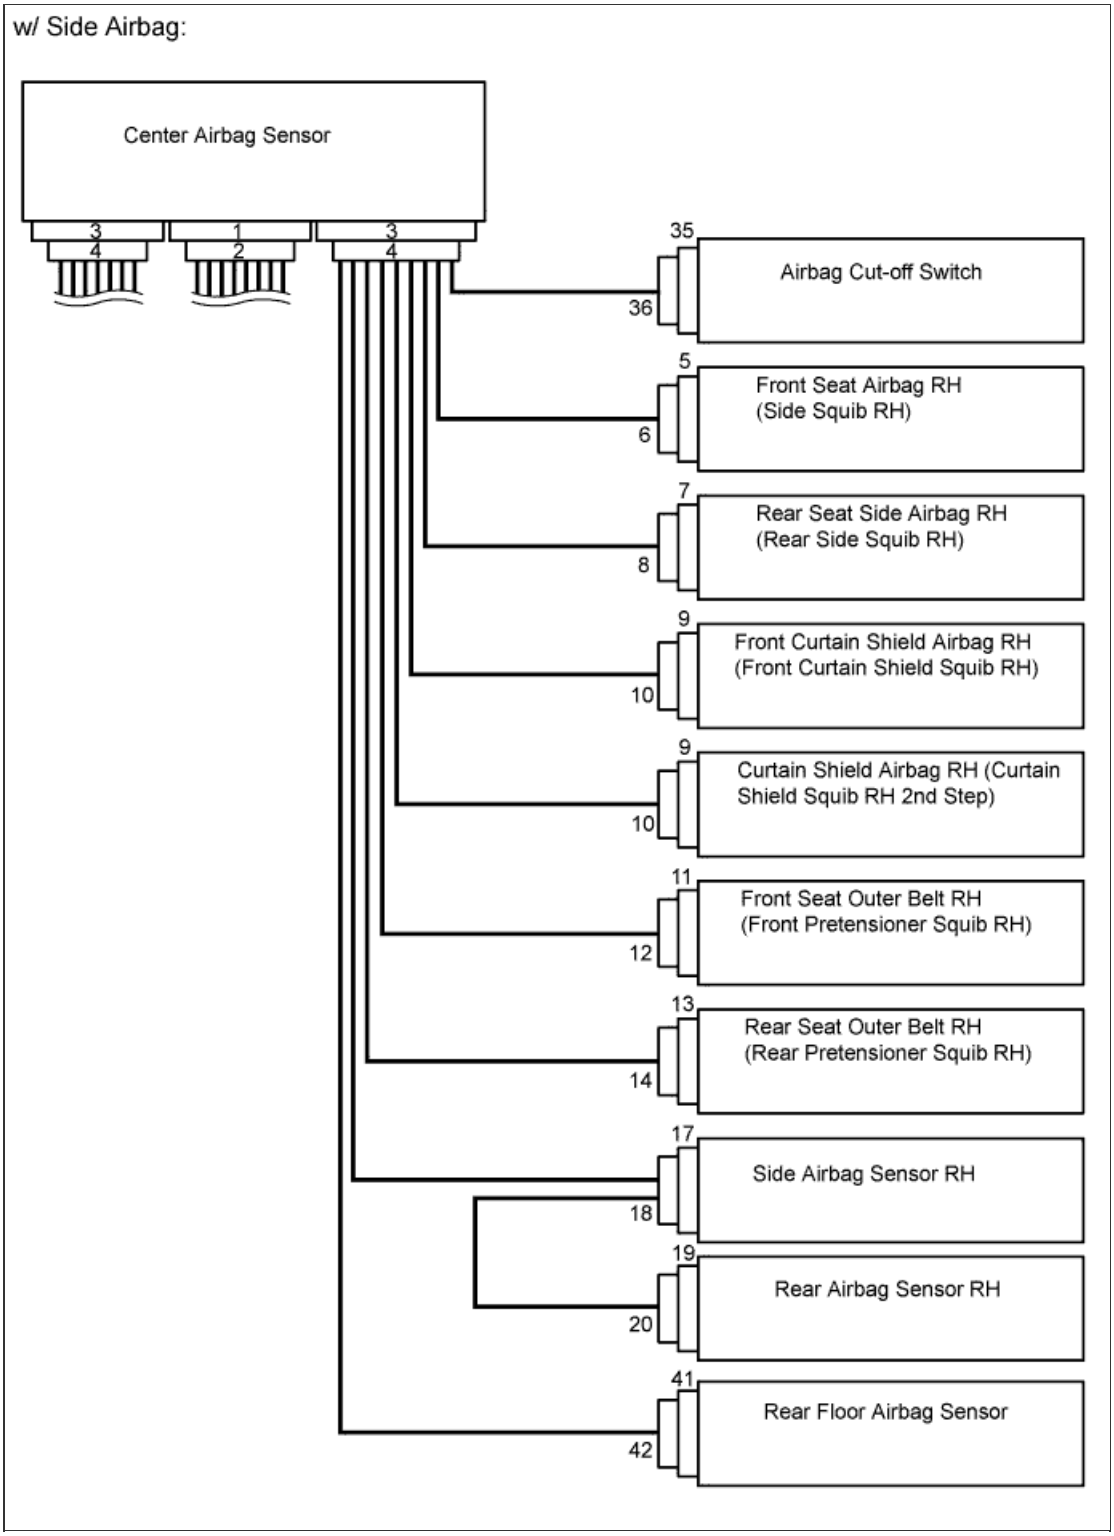


for LHD (w/o Side Airbag):

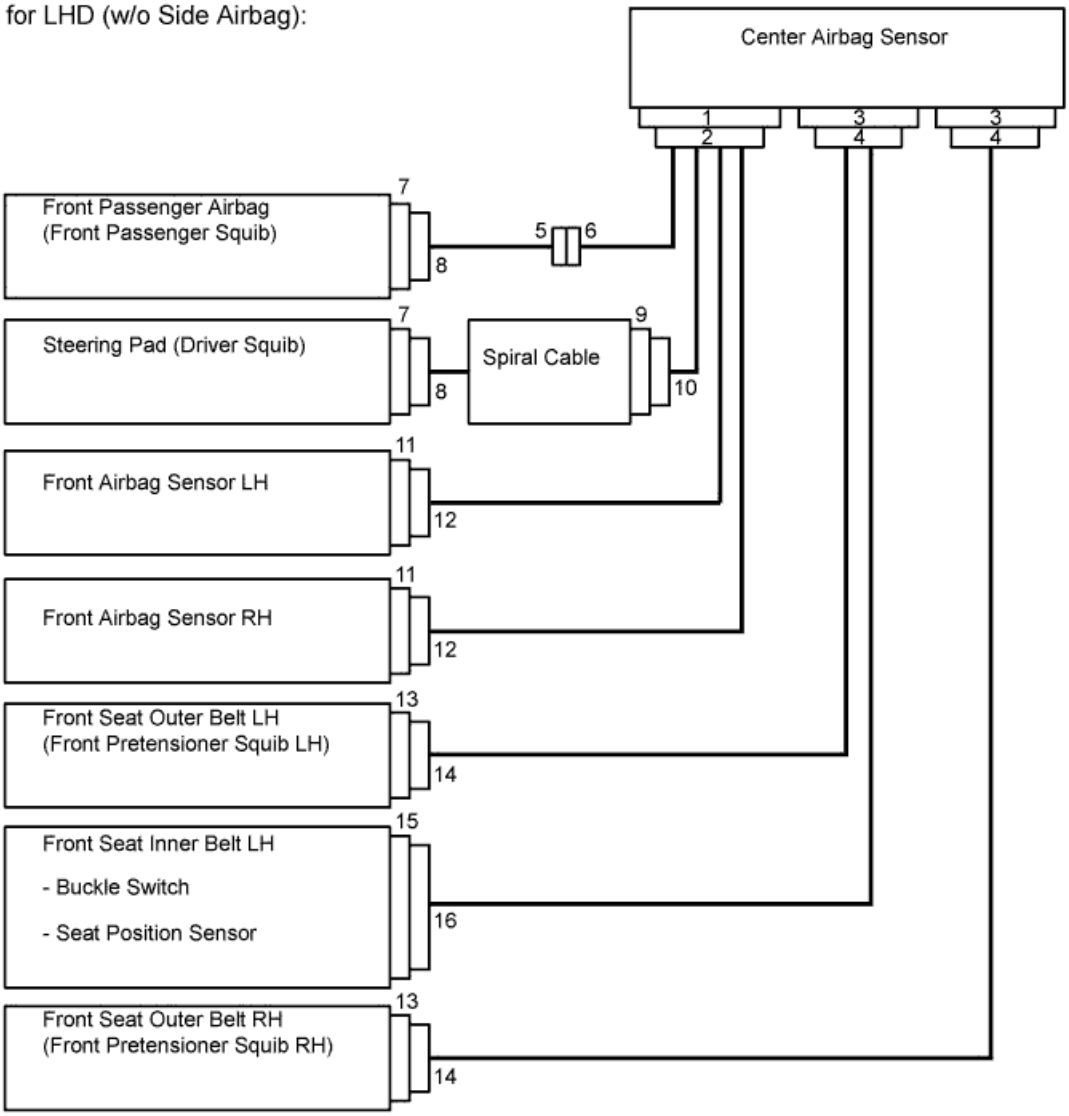

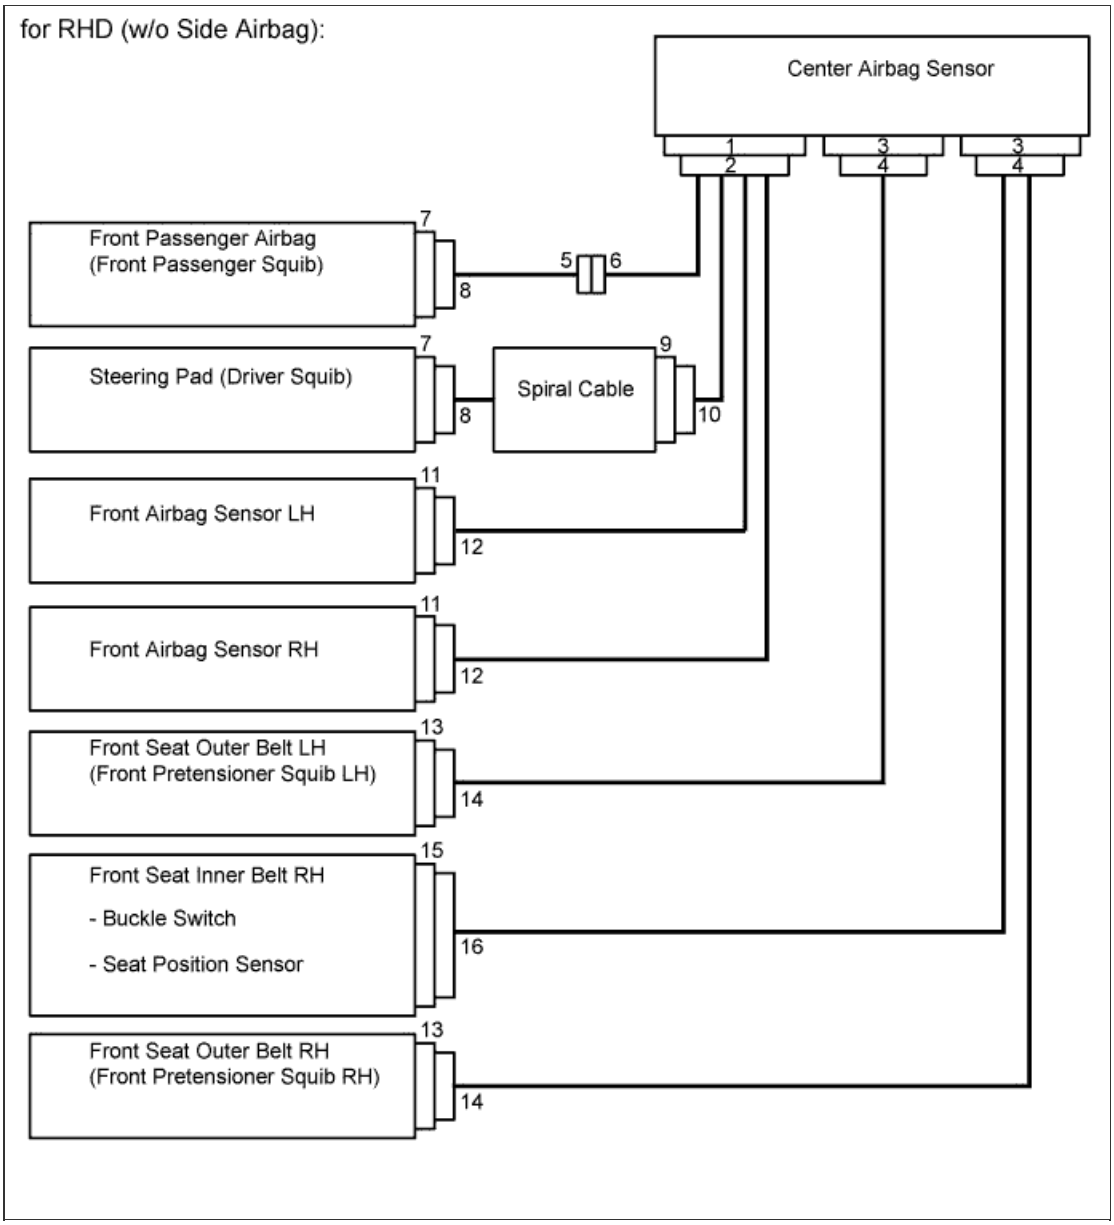


Item	Application
Terminal Twin-lock Mechanism	Connectors 5, 6, 7, 8, 18, 20, 23, 24, 27, 28, 31, 32, 37, 38, 41, 42
Activation Prevention Mechanism	Connectors 5, 7, 27, 31, 37, 41
Half Connection Prevention Mechanism	Connectors 6, 8, 23, 28, 32, 38, 42
Connector Position Assurance Mechanism	Connectors 18, 20, 22
Connector Lock Mechanism (1)	Connectors 10, 12, 14, 26, 30, 34
Connector Lock Mechanism (2)	Connectors 2, 4
Improper Connection Prevention Lock Mechanism	Connectors 1, 3

b. All connectors in the SRS, except the seat position sensor connector, are colored yellow to distinguish them from other connectors. These connectors have special functions, and are specially designed for the SRS. All SRS connectors use durable gold-plated terminals which are placed in the locations shown below to ensure high reliability.

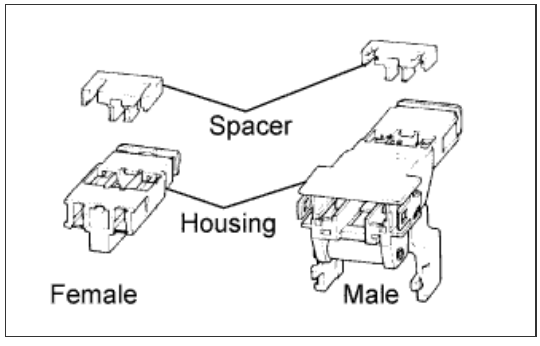


i. Terminal twin-lock mechanism:
All connectors with a terminal twin-lock mechanism have a two-piece component consisting of a housing and a spacer. This design enables the terminal to be locked securely by two locking devices (the retainer and the lance) to prevent terminals from coming out.


ii. Activation prevention mechanism:
All connectors with an activation prevention mechanism contain a short spring plate. When these connectors are disconnected, the short spring plate creates a short circuit by automatically connecting the positive (+) and negative (-) terminals of the squib.

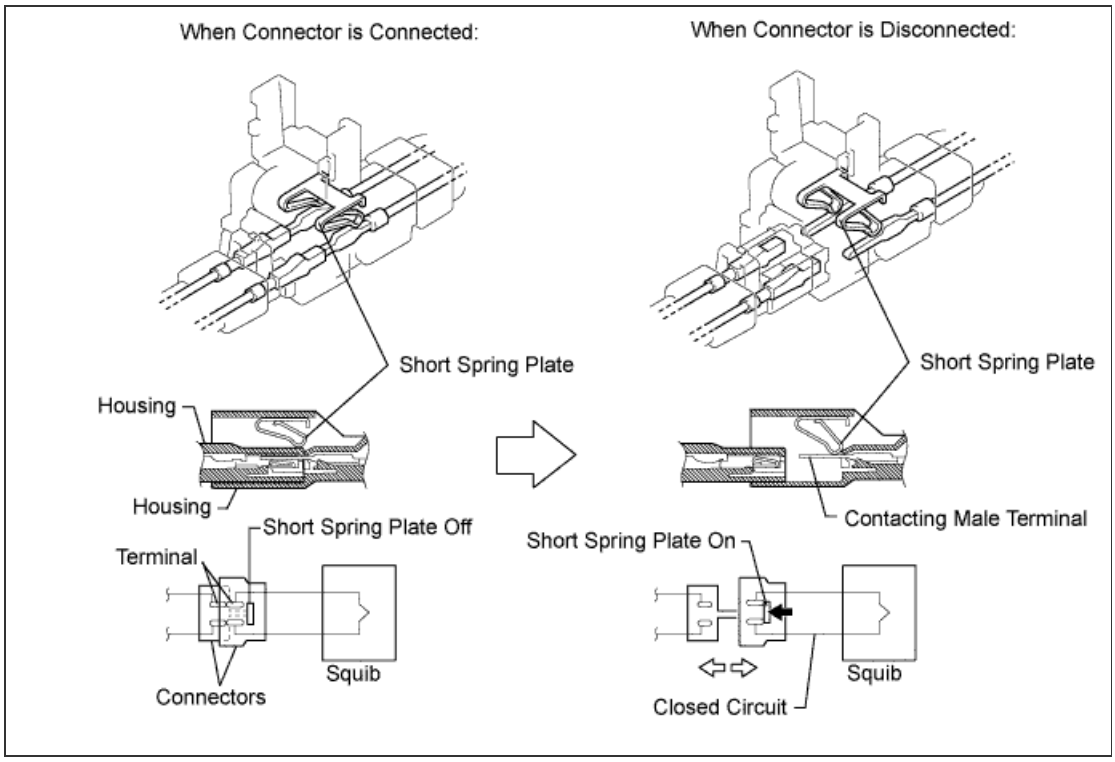

iii. Half connection prevention mechanism:
If the connector is not completely connected, the connector is disconnected due to the spring force so that no continuity exists.

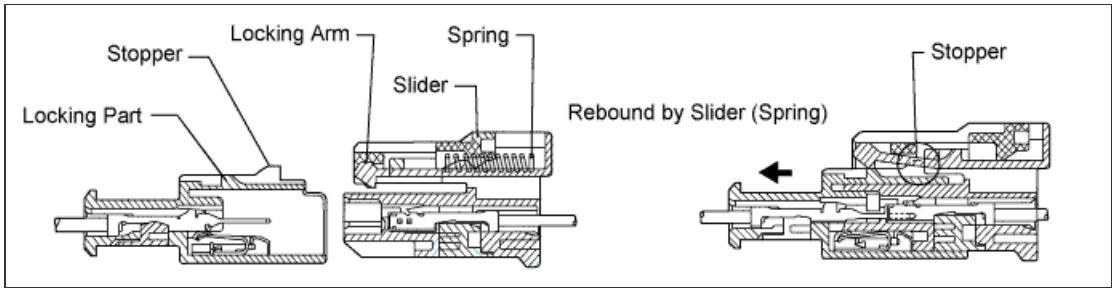


iv. Connector position assurance mechanism:
Only when the housing lock (white part) is completely engaged, the CPA (yellow part) slides, which completes the connector engagement.

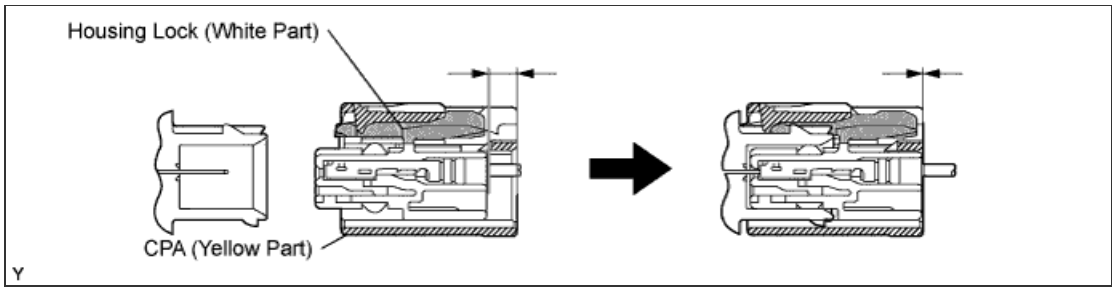


v. Connector lock mechanism (1):


Locking the connector lock button connects the connector securely.

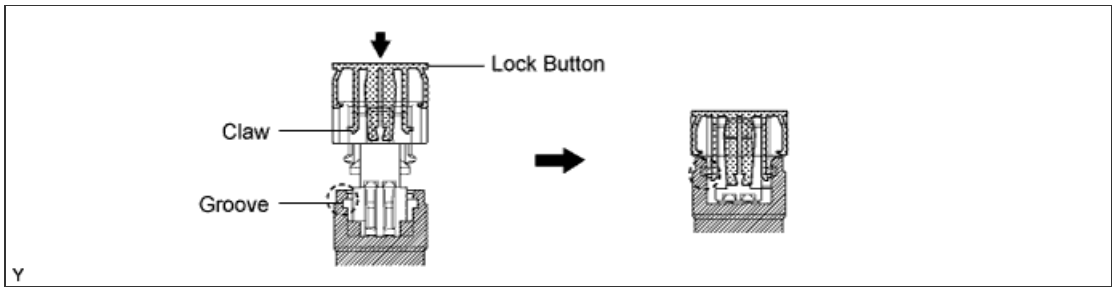

vi. Connector lock mechanism (2):
Both the primary lock with holder lances and the secondary lock with retainer prevent the connectors from becoming disconnected.

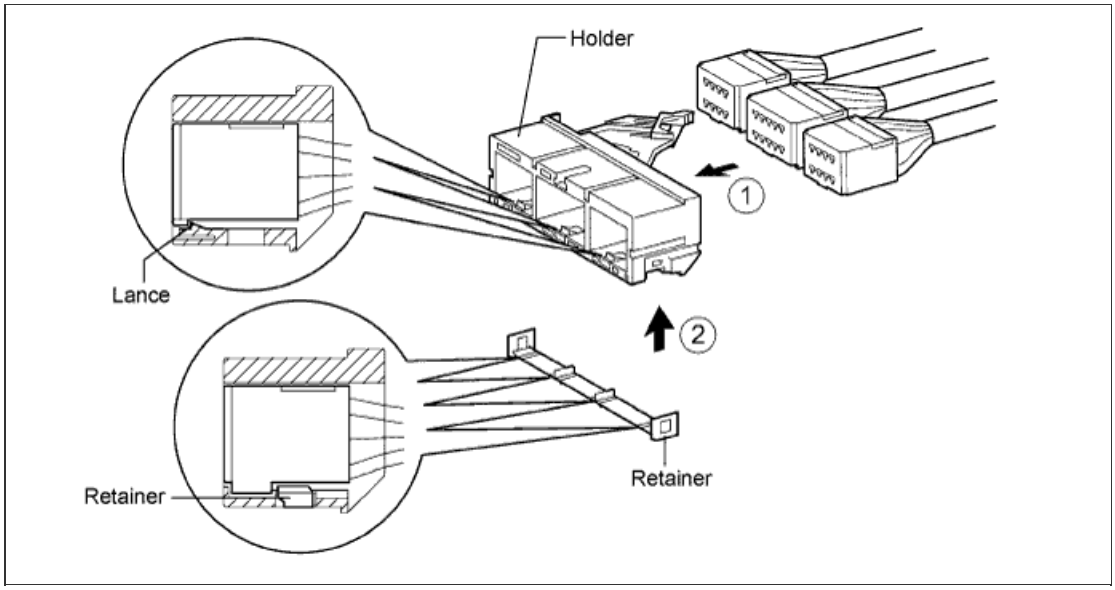

vii. Improper connection prevention lock mechanism:
When connecting the holder, the lever is pushed into the lock position by rotating around the A axis to lock the holder securely.

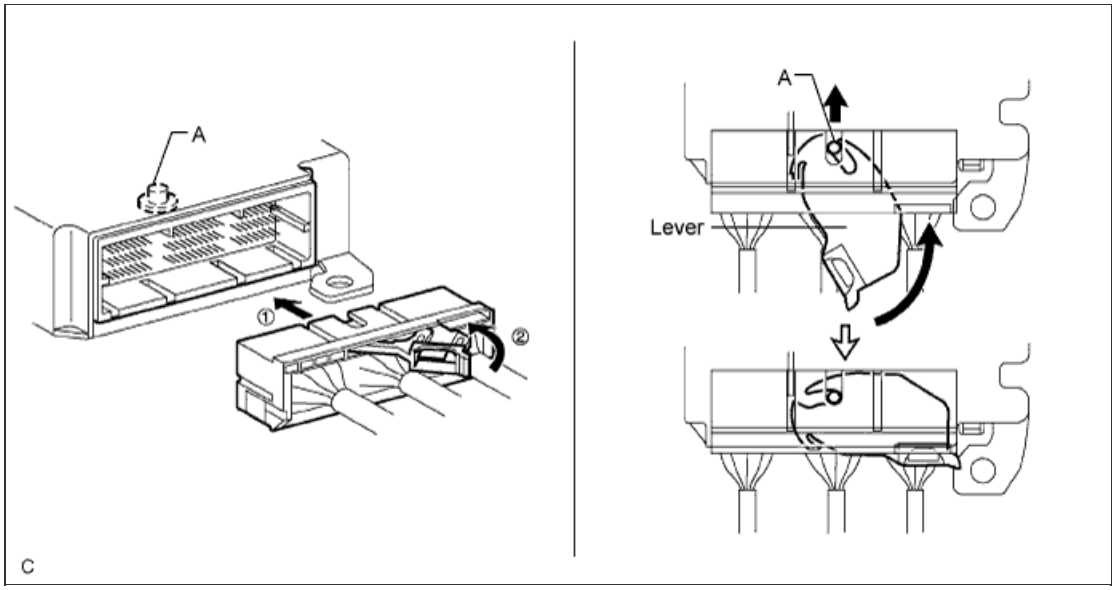


4. ISCONNECTION OF CONNECTORS FOR STEERING PAD, FRONT PASSENGER AIRBAG (SQUIB SIDE), DRIVER SIDE KNEE AIRBAG, FRONT PASSENGER SIDE KNEE AIRBAG, CURTAIN SHIELD AIRBAG, FRONT SEAT AIRBAG (SQUIB SIDE) AND REAR SEAT SIDE AIRBAG (SQUIB SIDE)

HINT:

Tape the screwdriver tip before use.

a. Release the lock button (yellow part) of the connector using a screwdriver.


b. Insert the screwdriver tip between the connector and the base, and then raise the connector.

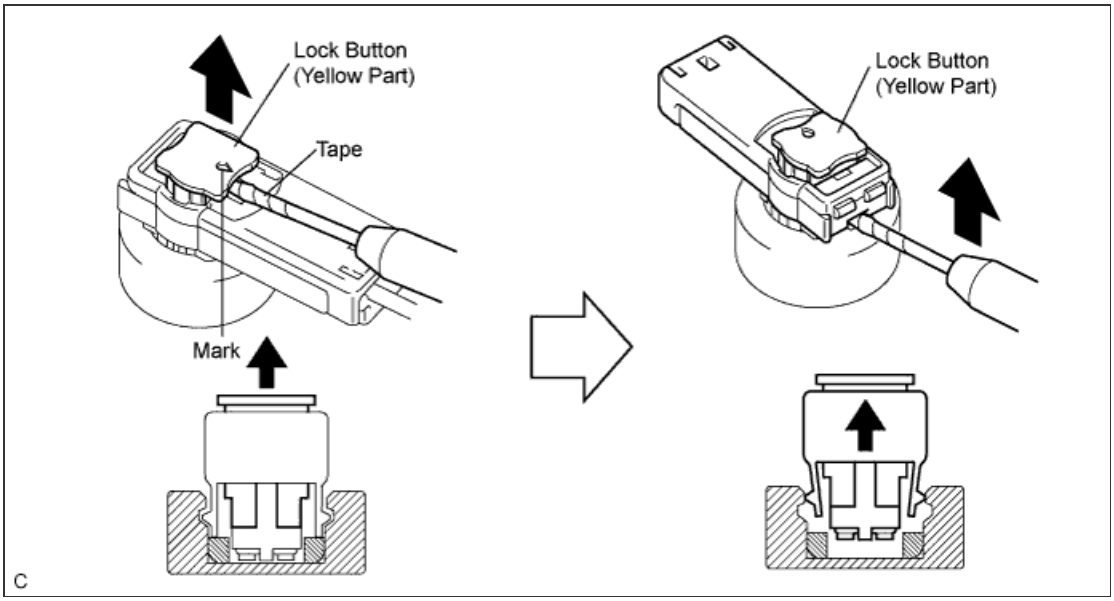

5.CONNECTION OF CONNECTORS FOR STEERING PAD, FRONT PASSENGER AIRBAG (SQUIB SIDE), DRIVER SIDE KNEE AIRBAG, FRONT PASSENGER SIDE KNEE AIRBAG, CURTAIN SHIELD AIRBAG, FRONT SEAT AIRBAG (SQUIB SIDE) AND REAR SEAT SIDE AIRBAG (SQUIB SIDE)

a. Connect the connector.

b. Push down securely on the lock button (yellow part) of the connector (when locked, a click sound can be heard).

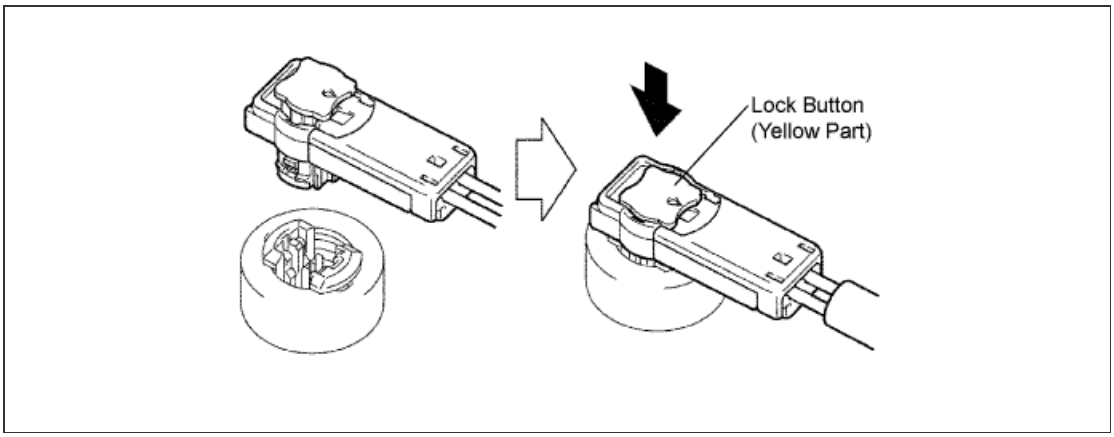


6.DISCONNECTION OF CONNECTORS FOR FRONT SEAT OUTER BELT AND REAR SEAT OUTER BELT

HINT:

Tape the screwdriver tip before use.

a. Release the lock button (black part) of the connector using a screwdriver.


b. Insert the screwdriver tip between the connector and the base, and then raise the connector.

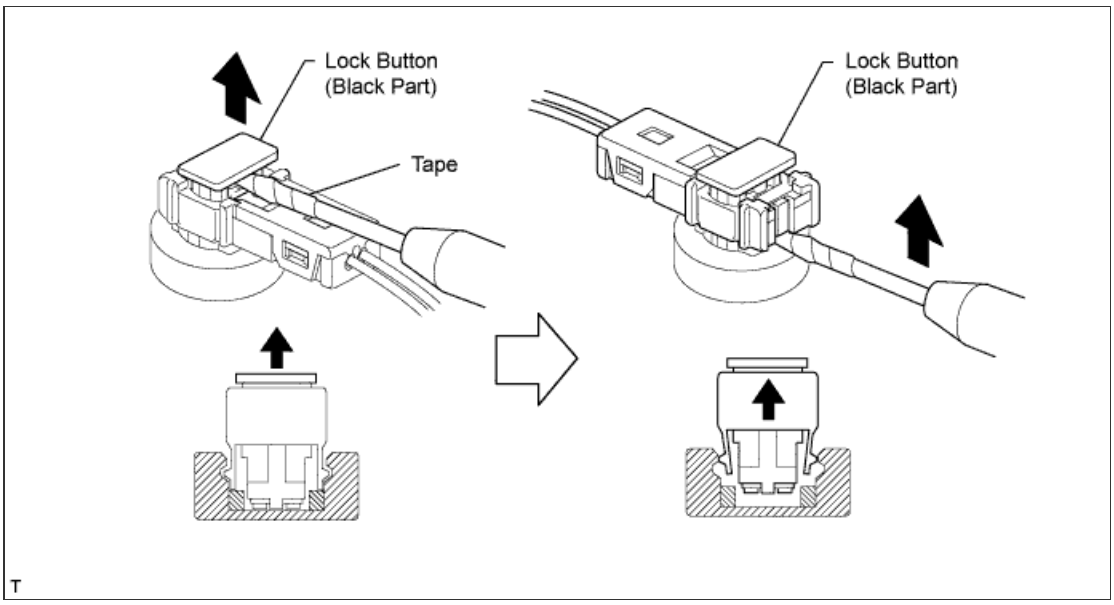

7.CONNECTION OF CONNECTORS FOR FRONT SEAT OUTER BELT AND REAR SEAT OUTER BELT


a. Connect the connector.

b. Push down security on the lock button (black part) of the connector (when locked, a click sound can be heard).

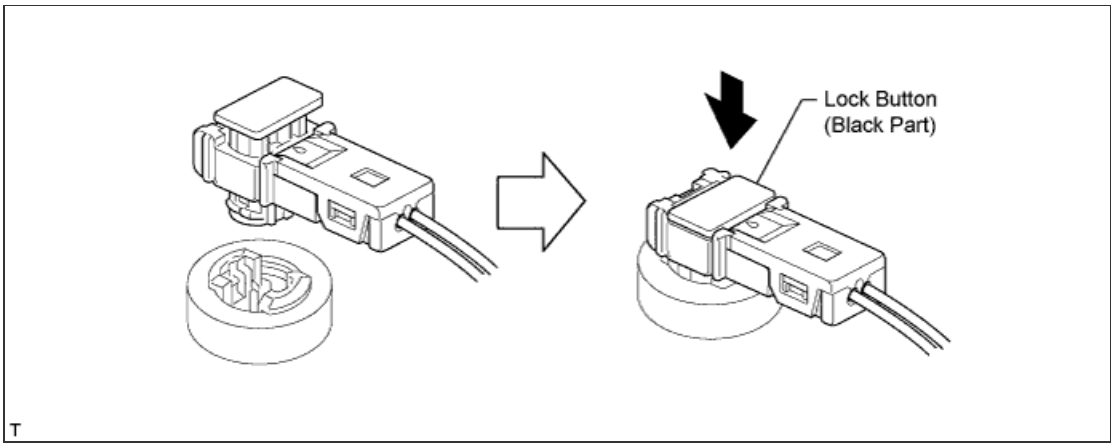

8.DISCONNECTION OF CONNECTOR FOR SPIRAL CABLE (INSTRUMENT PANEL WIRE SIDE) AND FRONT PASSENGER AIRBAG (INSTRUMENT PANEL WIRE SIDE)

a. Place a finger on the slider, slide the slider to release the lock, and then disconnect the connector.

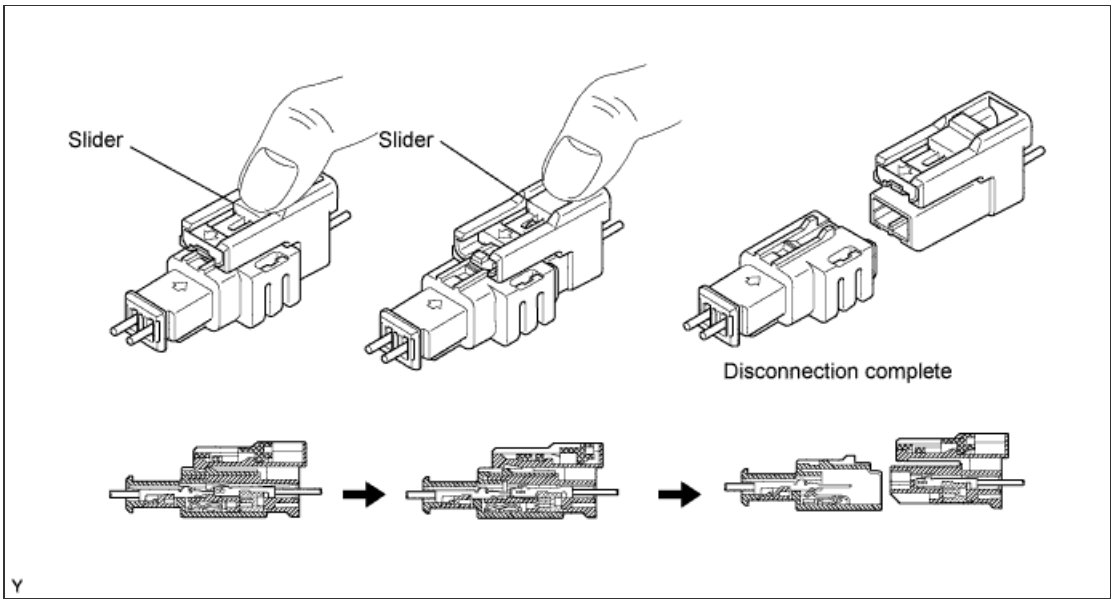


9.CONNECTION OF CONNECTOR FOR SPIRAL CABLE (INSTRUMENT PANEL WIRE SIDE) AND FRONT PASSENGER AIRBAG (INSTRUMENT PANEL WIRE ASSEMBLY SIDE)

a. Connect the connector as shown in the illustration (when locking, make sure that the slider returns to its original position and a click sound can be heard).


HINT:

When connecting, the slider will slide. Be sure not to touch the slider while connecting, as it may result in an insecure fit.

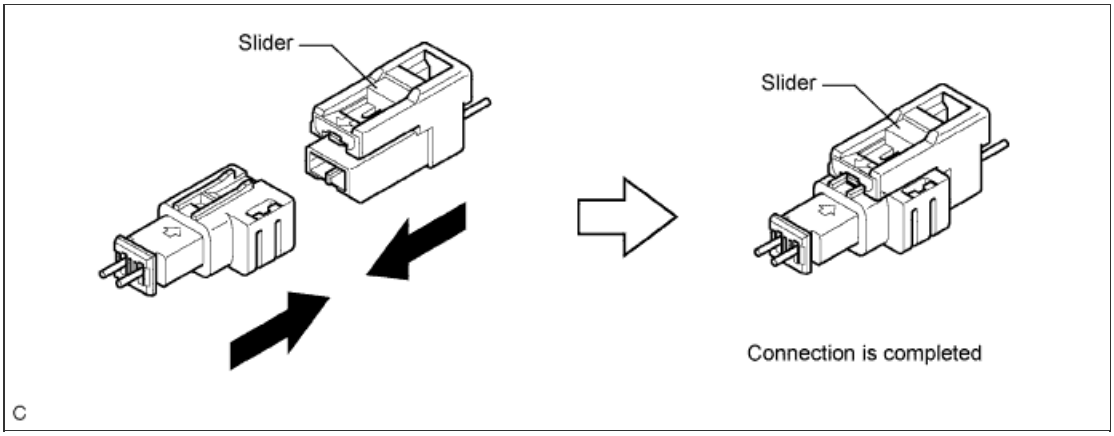

10.DISCONNECTION OF CONNECTORS FOR FRONT SEAT AIRBAG (FLOOR WIRE SIDE) AND REAR SEAT SIDE AIRBAG (FLOOR WIRE SIDE)

a. Push the slider with a finger to detach the first claw. Without releasing your finger, slide the slider to detach the second claw and disconnect the connector.

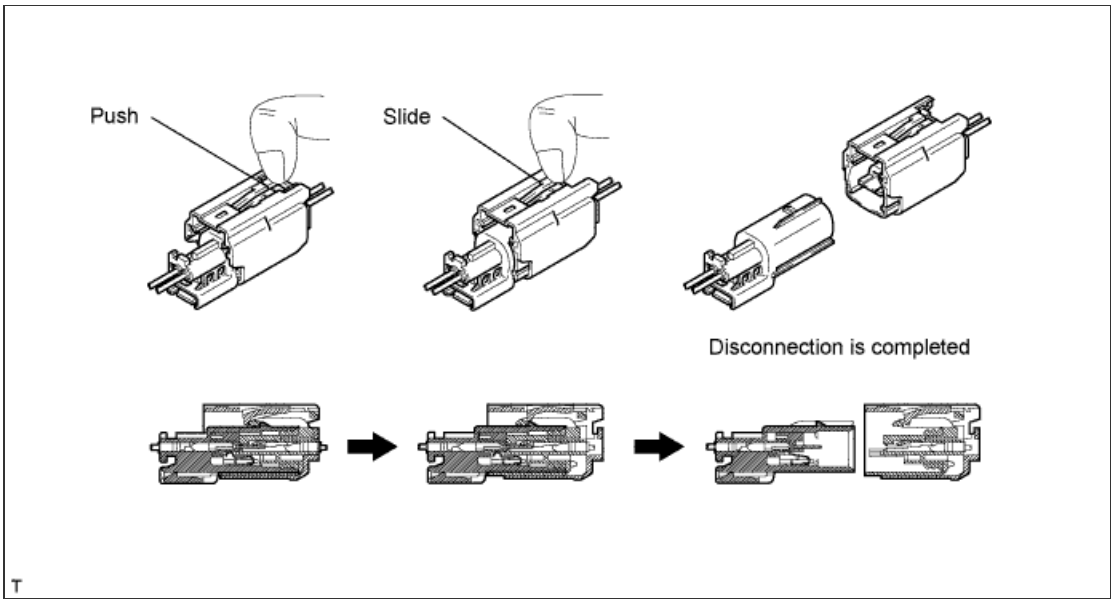


CONNECTION OF CONNECTORS FOR FRONT SEAT AIRBAG (FLOOR WIRE SIDE) AND REAR SEAT SIDE AIRBAG (FLOOR WIRE SIDE)

a. Connect the connector as shown in the illustration (when locking, make sure that the slider returns to its original position and click sounds can be heard).


HINT:

When connecting, the slider will slide. Be sure not to touch the slider while connecting, as it may result in an insecure fit.

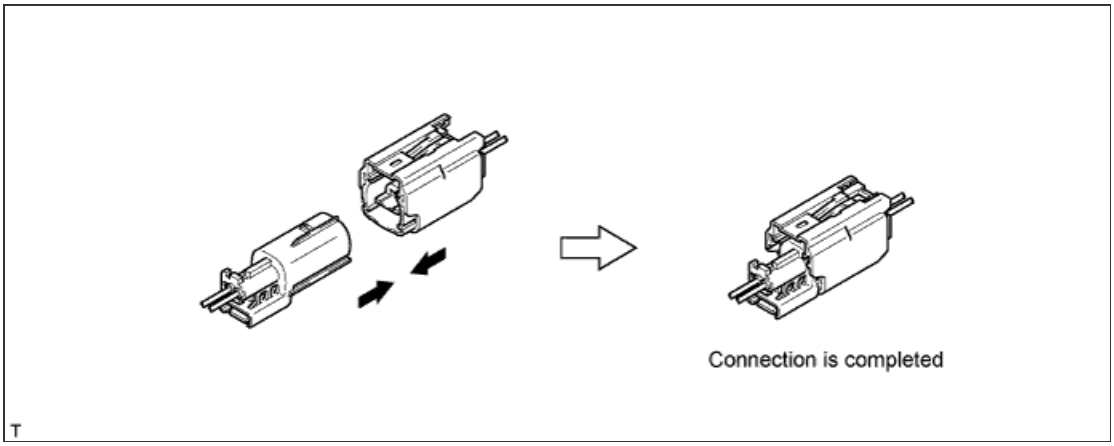

12.DISCONNECTION OF CONNECTOR FOR CENTER AIRBAG SENSOR

a. Pull the lever by pushing part A as shown in the illustration and disconnect the holder (with connectors).

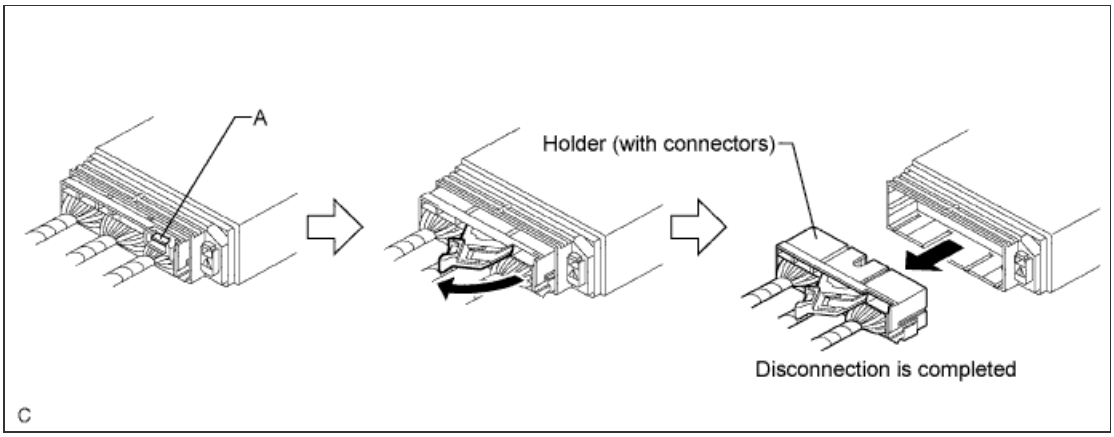


HINT:


Perform the following procedures when replacing the holder.

b. Remove the holder.

i. Using a screwdriver, unlock the retainer.

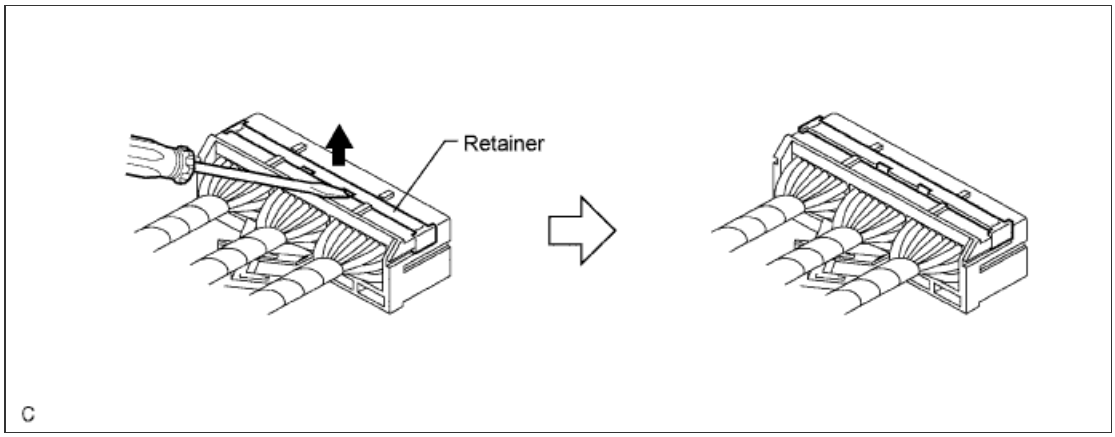

ii. Release the fitting lances and remove the holder.

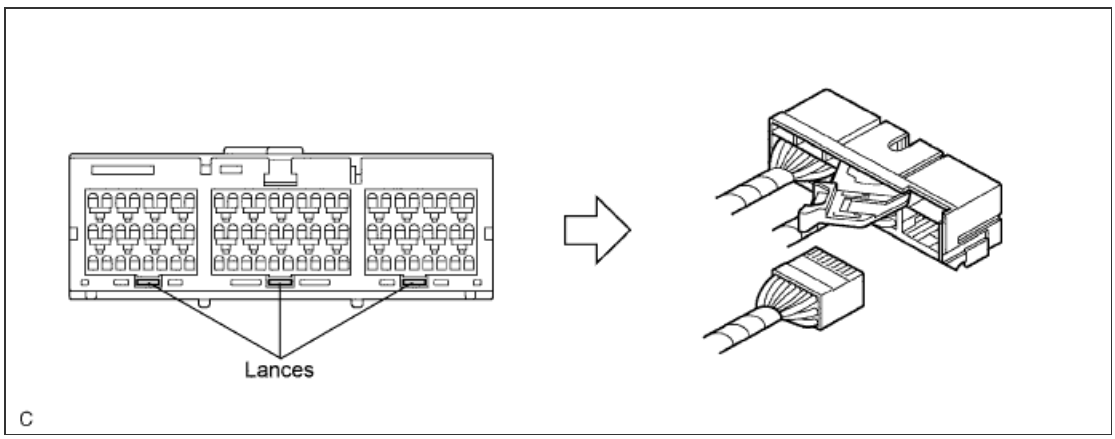


c. Install the holder.

i. Install the connectors to the holder (when locked, a click sound can be heard).

HINT:

The retainer is locked when the holder is connected.

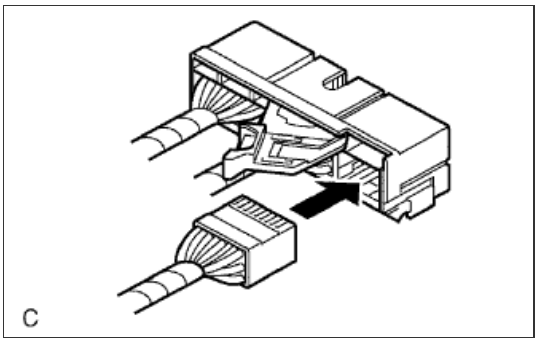


13.CONNECTION OF CONNECTOR FOR CENTER AIRBAG SENSOR

a. Firmly insert the holder (with connectors) into the center airbag sensor until it cannot be pushed any further.

b. Push the lever to connect the holder (with connectors) (when locked, a click sound can be heard).

HINT:

The holder slides into the center airbag sensor when it is being connected. Be sure not to hold the holder while connecting, as it may result in an insecure fit.

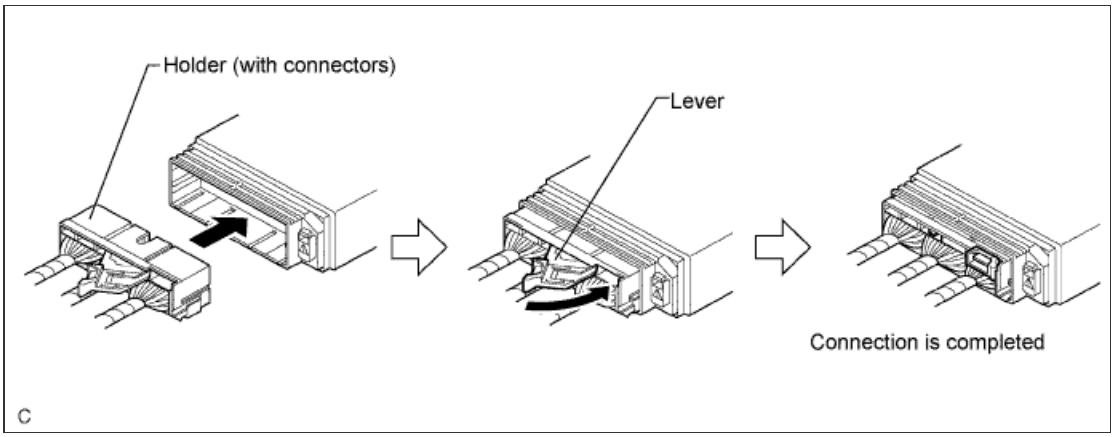


14.DISCONNECTION OF CONNECTOR FOR FRONT AIRBAG SENSOR, REAR AIRBAG SENSOR RH AND REAR FLOOR AIRBAG SENSOR

a. Push down the housing lock (white part) and slide the CPA (yellow part) (at this time, the connector cannot be disconnected yet).


b. Push down the housing lock (white part) again and disconnect the connector.

HINT:

Do not push down the part labeled A shown in the illustration when disconnecting.

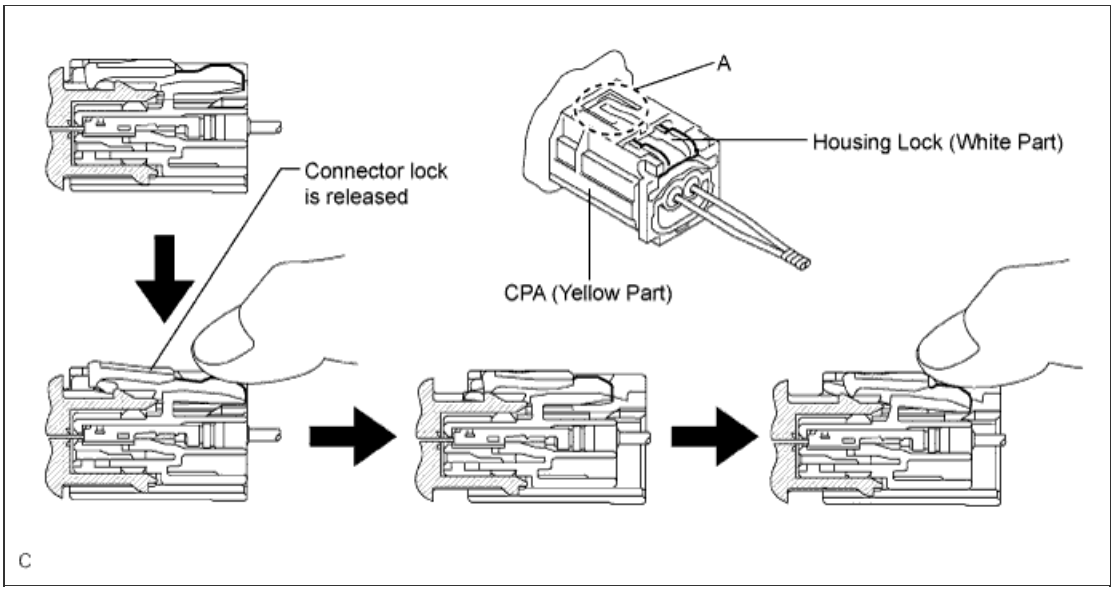


c. After disconnecting the connector, check that the position of the housing lock (white part) is as shown in the illustration.

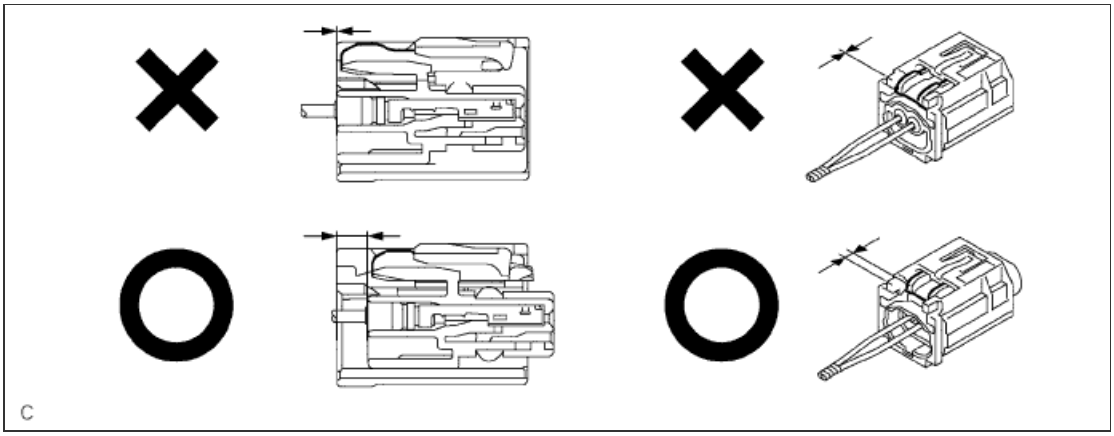

15.CONNECTION OF CONNECTOR FOR FRONT AIRBAG SENSOR, REAR AIRBAG SENSOR RH AND REAR FLOOR AIRBAG SENSOR


a. Before connecting the connectors, check that the position of the housing lock (white part) is as shown in the illustration.

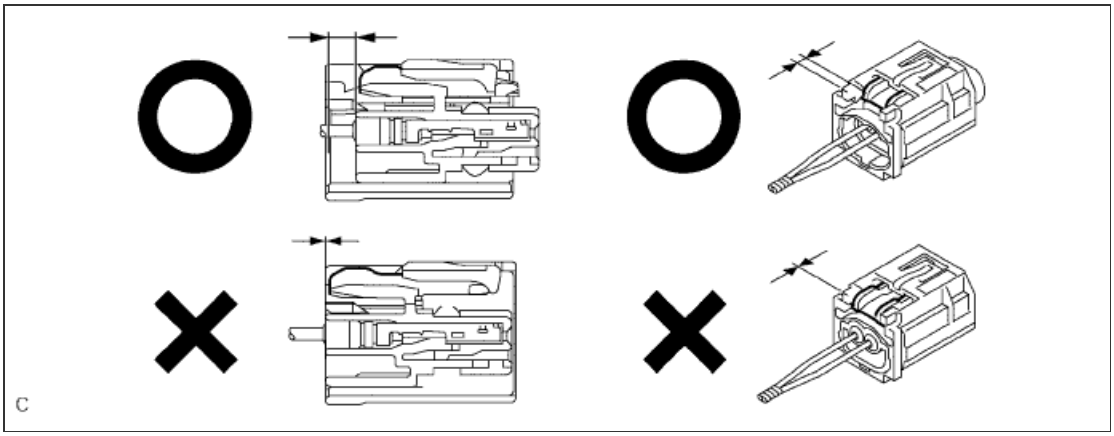

b. Be sure to engage the connectors until they are locked (when locking, make sure that a click sound can be heard).


HINT:

When connecting the connectors, the housing lock (white part) slides. Be sure not to hold the housing lock (white part) and the part labeled A, as it may result in an insecure fit.

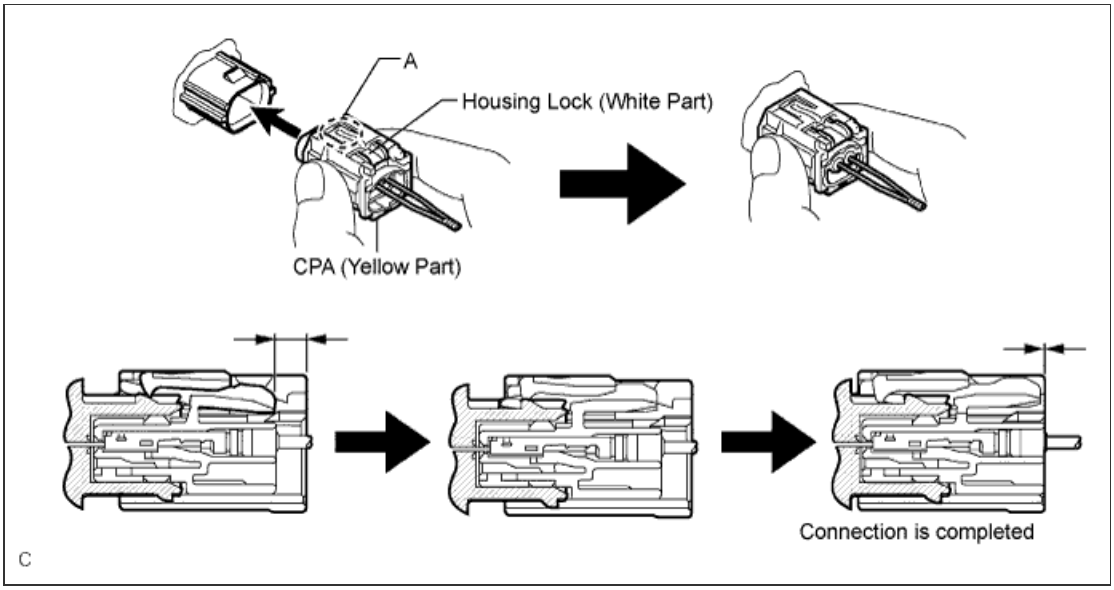

16.DISCONNECTION OF CONNECTORS FOR SIDE AIRBAG SENSOR AND REAR AIRBAG SENSOR LH


a. While holding the sides of the outer connector locking sleeve, slide the sleeve in the direction shown by the arrow.

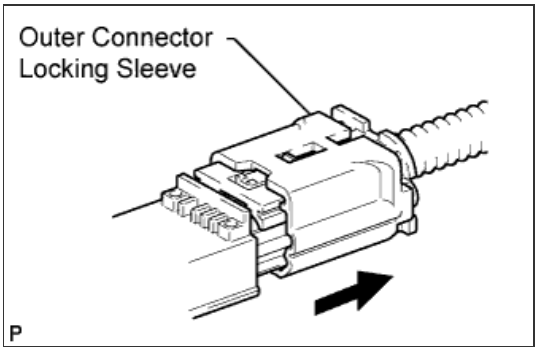

b. When the connector lock is released, the connectors are disconnected.

HINT:

Be sure to hold both sides of the sleeve. Holding the top and bottom will make disconnection difficult.

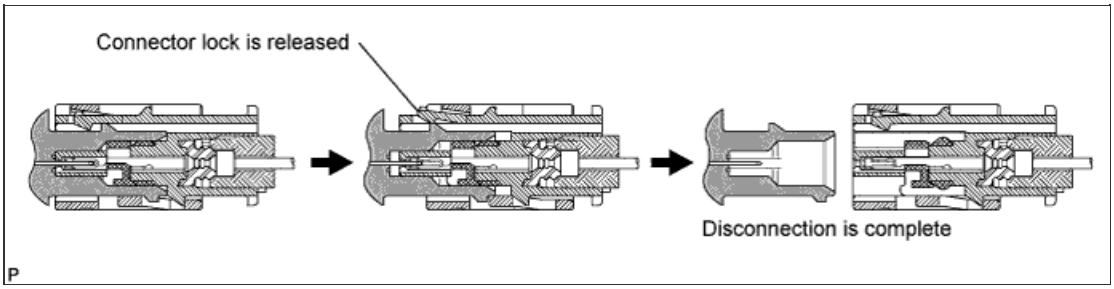


17.CONNECTION OF CONNECTORS FOR SIDE AIRBAG SENSOR AND REAR AIRBAG SENSOR LH

a. Connect the connector as shown in the illustration (when locking, make sure that the outer connector locking sleeve returns to its original


position and a click sound can be heard).

HINT:


When connecting, the sleeve will slide. Be sure not to hold the sleeve while connecting, as it may result in an insecure fit.

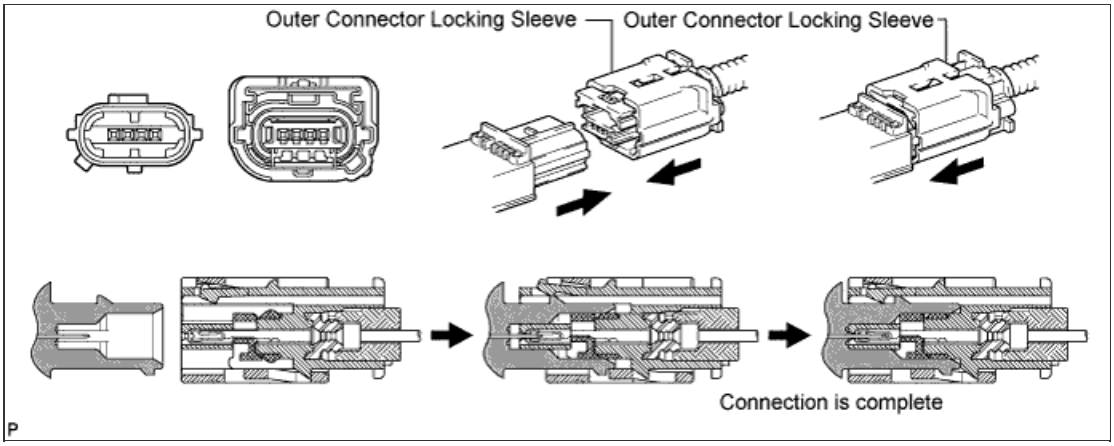


for Preparation Click here

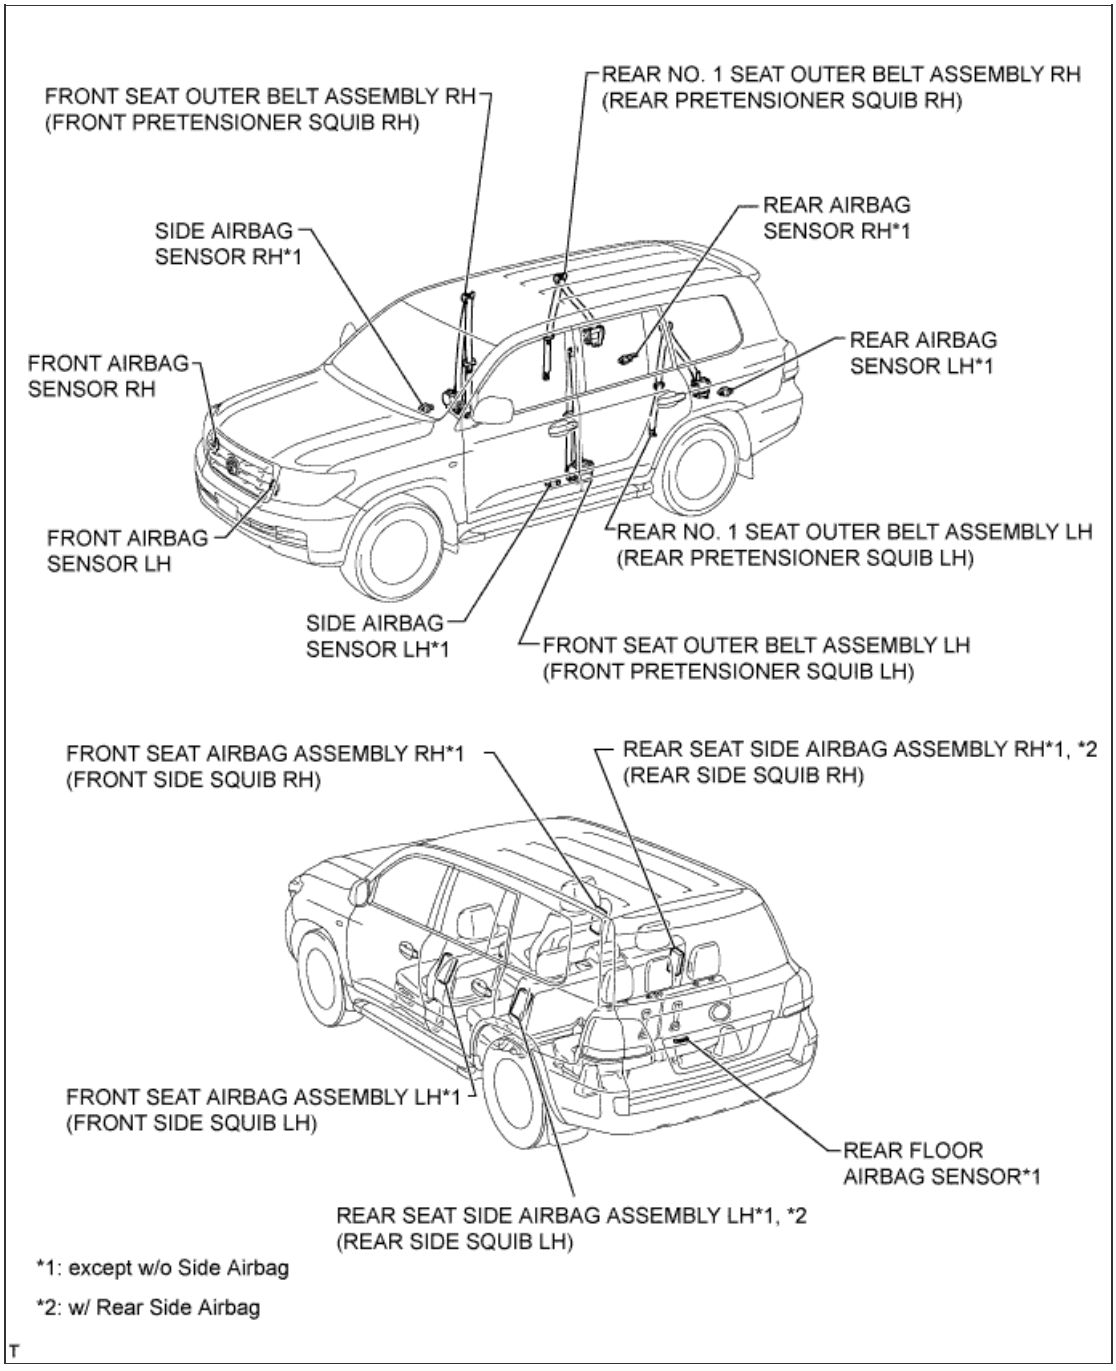


T

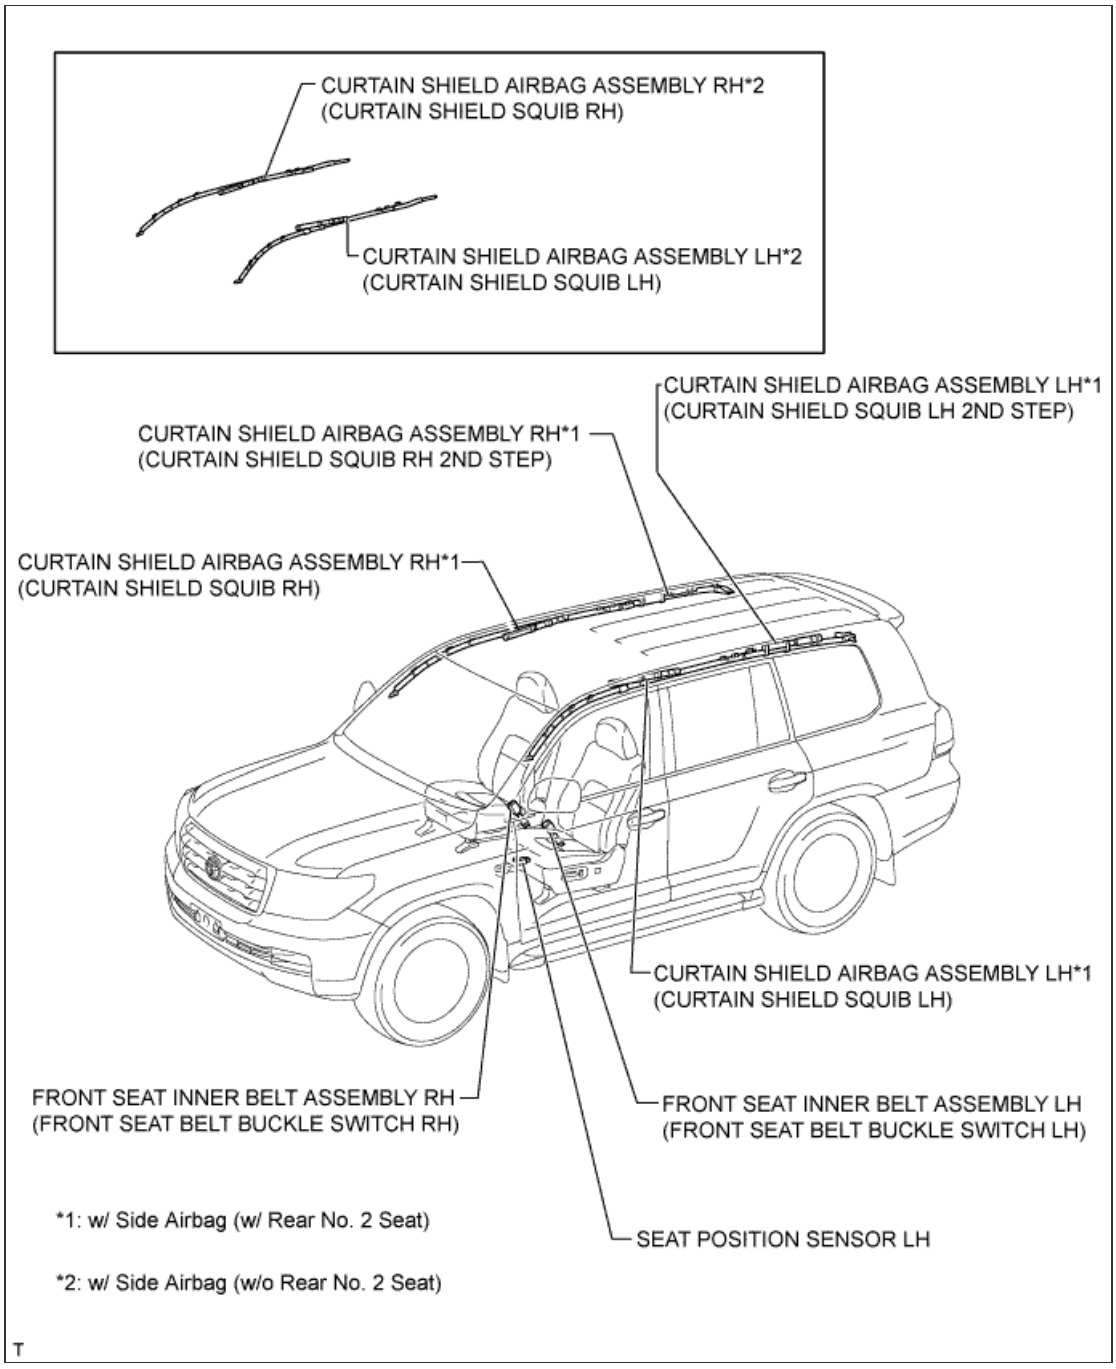

CURTAIN SHIELD AIRBAG ASSEMBLY RH*2
(CURTAIN SHIELD SQUIB RH)
CURTAIN SHIELD AIRBAG ASSEMBLY LH*2
(CURTAIN SHIELD SQUIB LH)
CURTAIN SHIELD AIRBAG ASSEMBLY LH*1
(CURTAIN SHIELD SQUIB LH 2ND STEP)
CURTAIN SHIELD AIRBAG ASSEMBLY RH*1
(CURTAIN SHIELD SQUIB RH 2ND STEP)
CURTAIN SHIELD AIRBAG ASSEMBLY RH*1
(CURTAIN SHIELD SQUIB RH)
CURTAIN SHIELD AIRBAG ASSEMBLY LH*1
(CURTAIN SHIELD SQUIB LH)
FRONT SEAT INNER BELT ASSEMBLY RH
(FRONT SEAT BELT BUCKLE SWITCH RH)
FRONT SEAT INNER BELT ASSEMBLY LH
(FRONT SEAT BELT BUCKLE SWITCH LH)
SEAT POSITION SENSOR LH
*1: w/ Side Airbag (w/ Rear No. 2 Seat)
*2: w/ Side Airbag (w/o Rear No. 2 Seat)
T

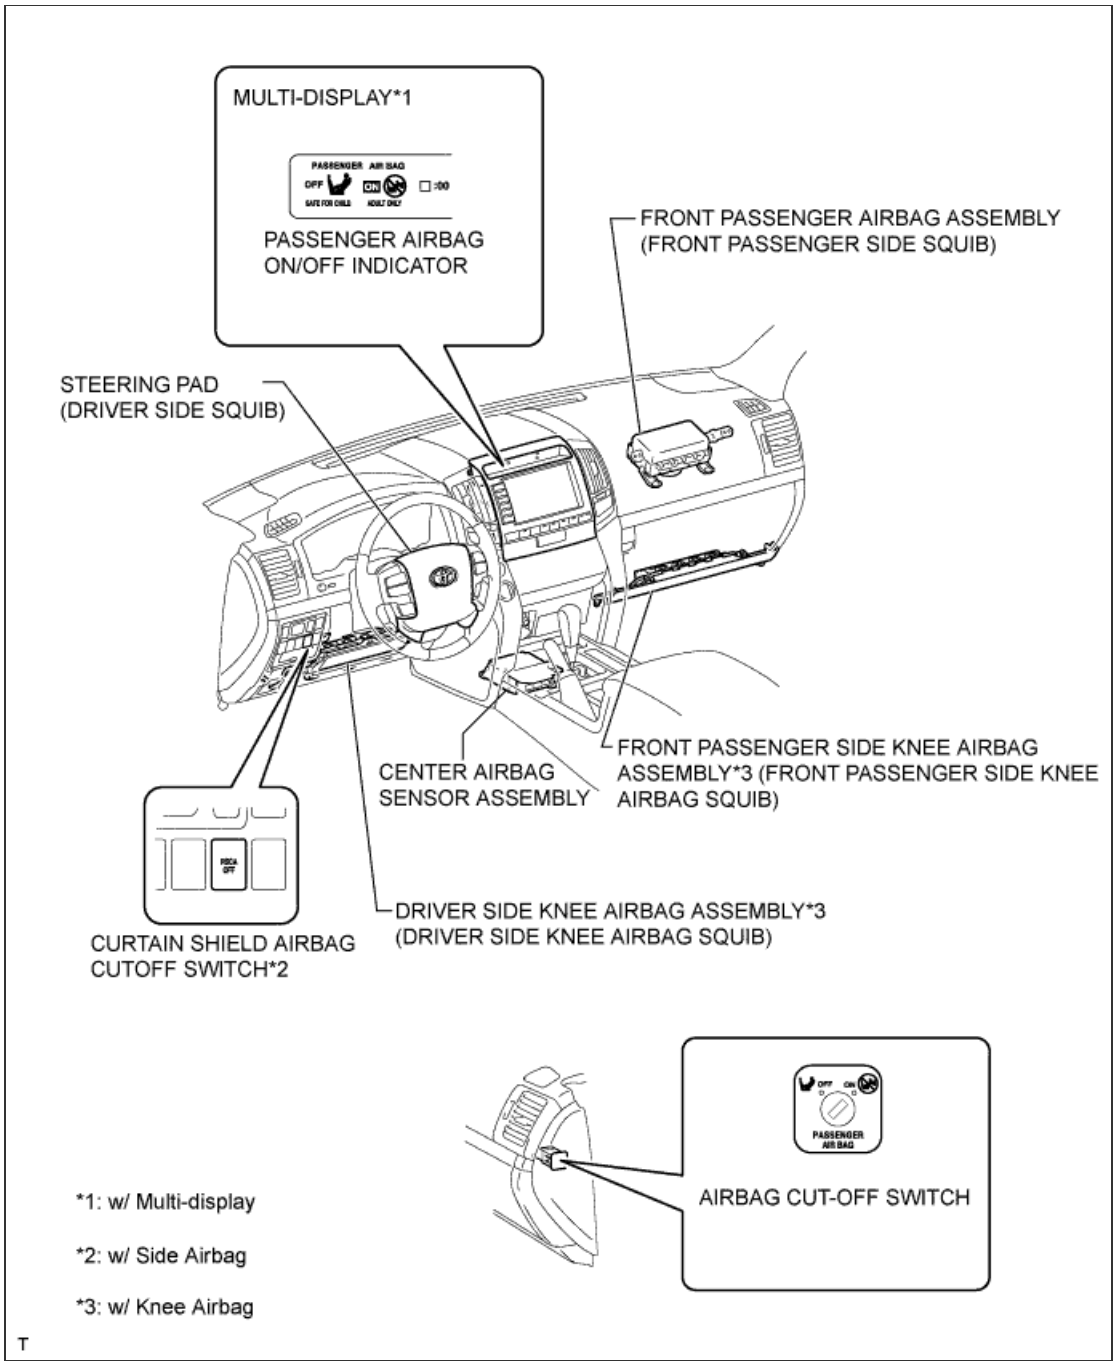
MULTI-DISPLAY*1
PASSENGER AIR BAG
OFF
ON
SAFE FOR CHILD
ADULT ONLY
PASSENGER AIRBAG
ON/OFF INDICATOR
FRONT PASSENGER AIRBAG ASSEMBLY
(FRONT PASSENGER SIDE SQUIB)
STEERING PAD
(DRIVER SIDE SQUIB)
CENTER AIRBAG
SENSOR ASSEMBLY
FRONT PASSENGER SIDE KNEE AIRBAG
ASSEMBLY*3 (FRONT PASSENGER SIDE KNEE
AIRBAG SQUIB)
DRIVER SIDE KNEE AIRBAG ASSEMBLY*3
(DRIVER SIDE KNEE AIRBAG SQUIB)
CURTAIN SHIELD AIRBAG
CUTOFF SWITCH*2
PASSENGER
AIR BAG
AIRBAG CUT-OFF SWITCH
*1: w/ Multi-display
*2: w/ Side Airbag
*3: w/ Knee Airbag


T

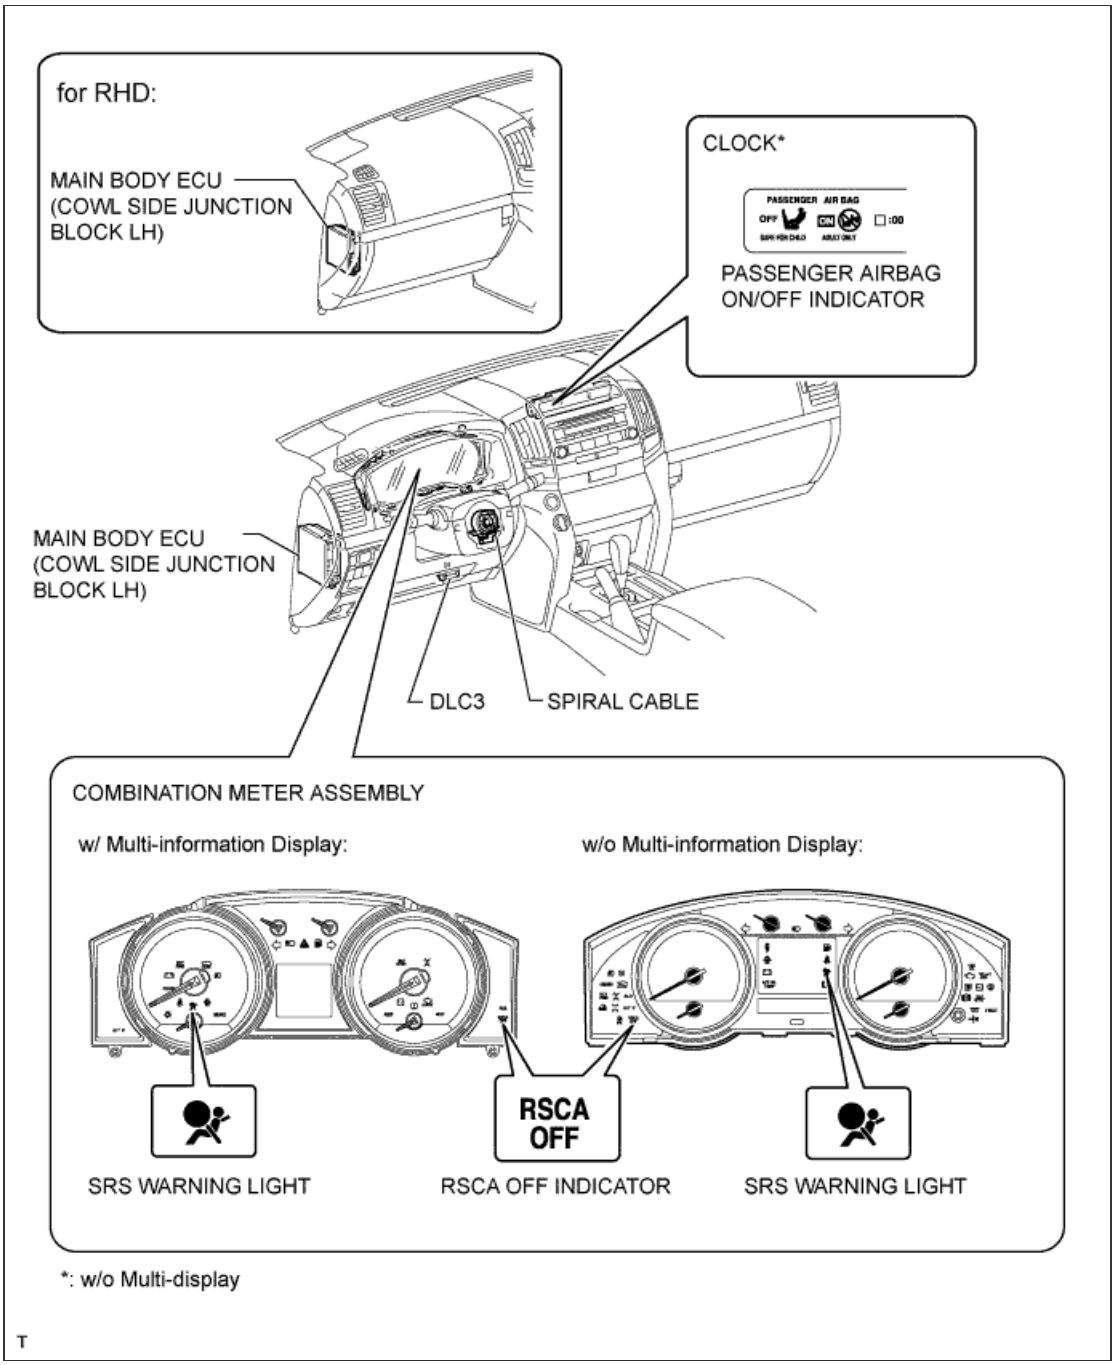

for RHD:
MAIN BODY ECU
(COWL SIDE JUNCTION
BLOCK LH)
CLOCK*
PASSENGER AIR BAG
OFF
ON
PASSENGER AIRBAG
ON/OFF INDICATOR
MAIN BODY ECU
(COWL SIDE JUNCTION
BLOCK LH)
DLC3
SPIRAL CABLE
COMBINATION METER ASSEMBLY
w/ Multi-information Display:
w/o Multi-information Display:
RSCA
OFF
SRS WARNING LIGHT
RSCA OFF INDICATOR
SRS WARNING LIGHT
*: w/o Multi-display
T

for Preparation Click here

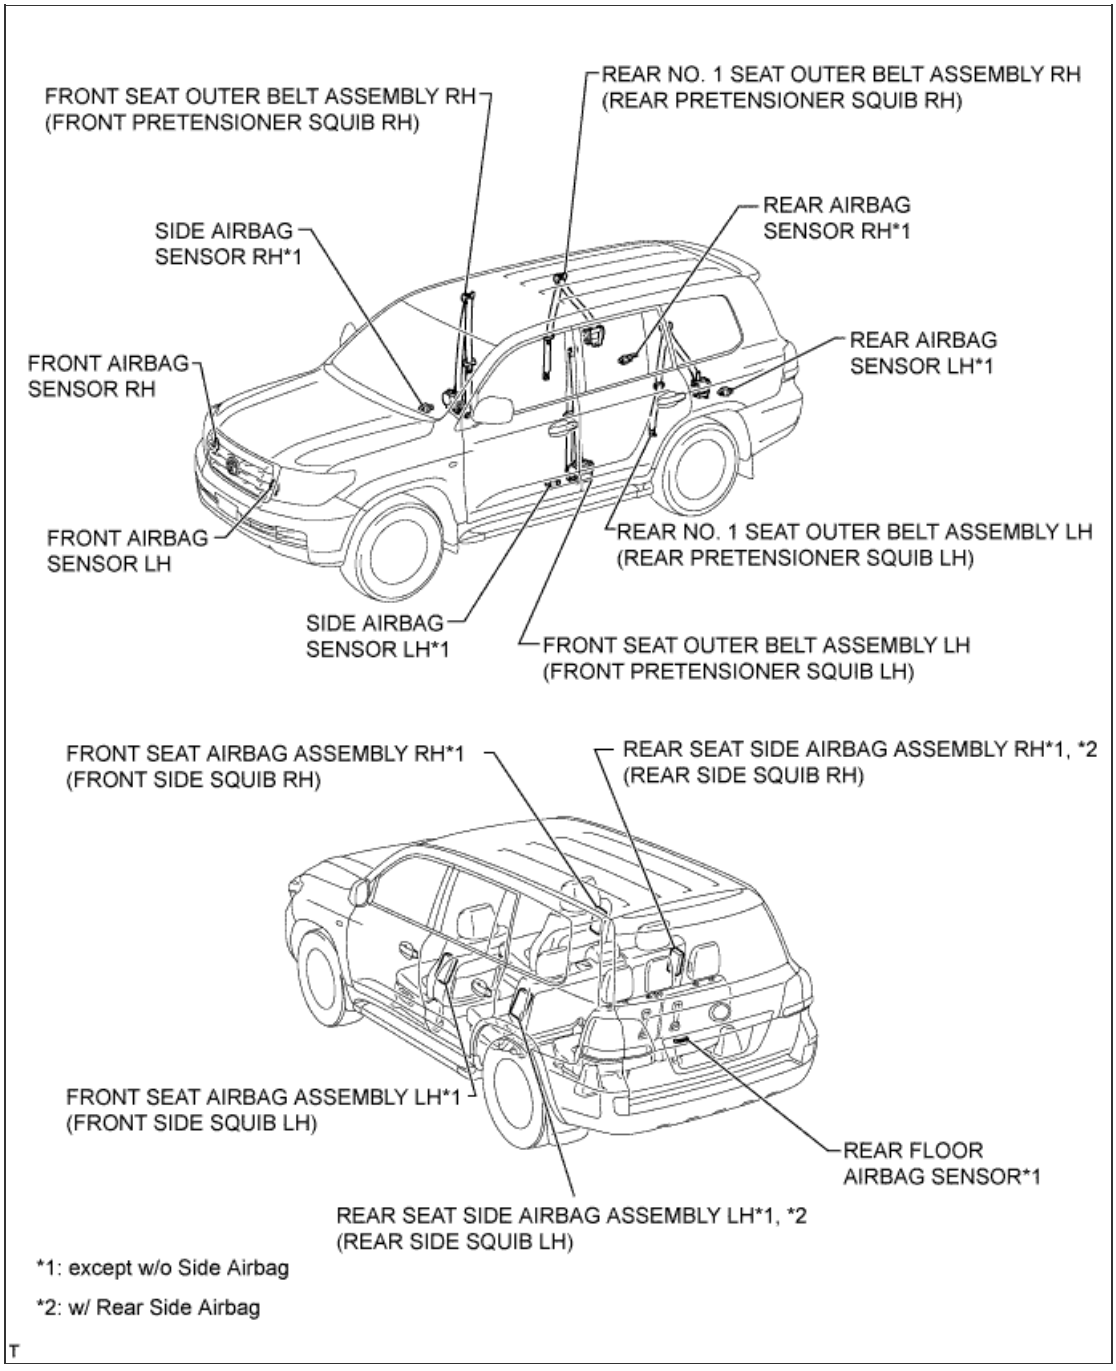


T

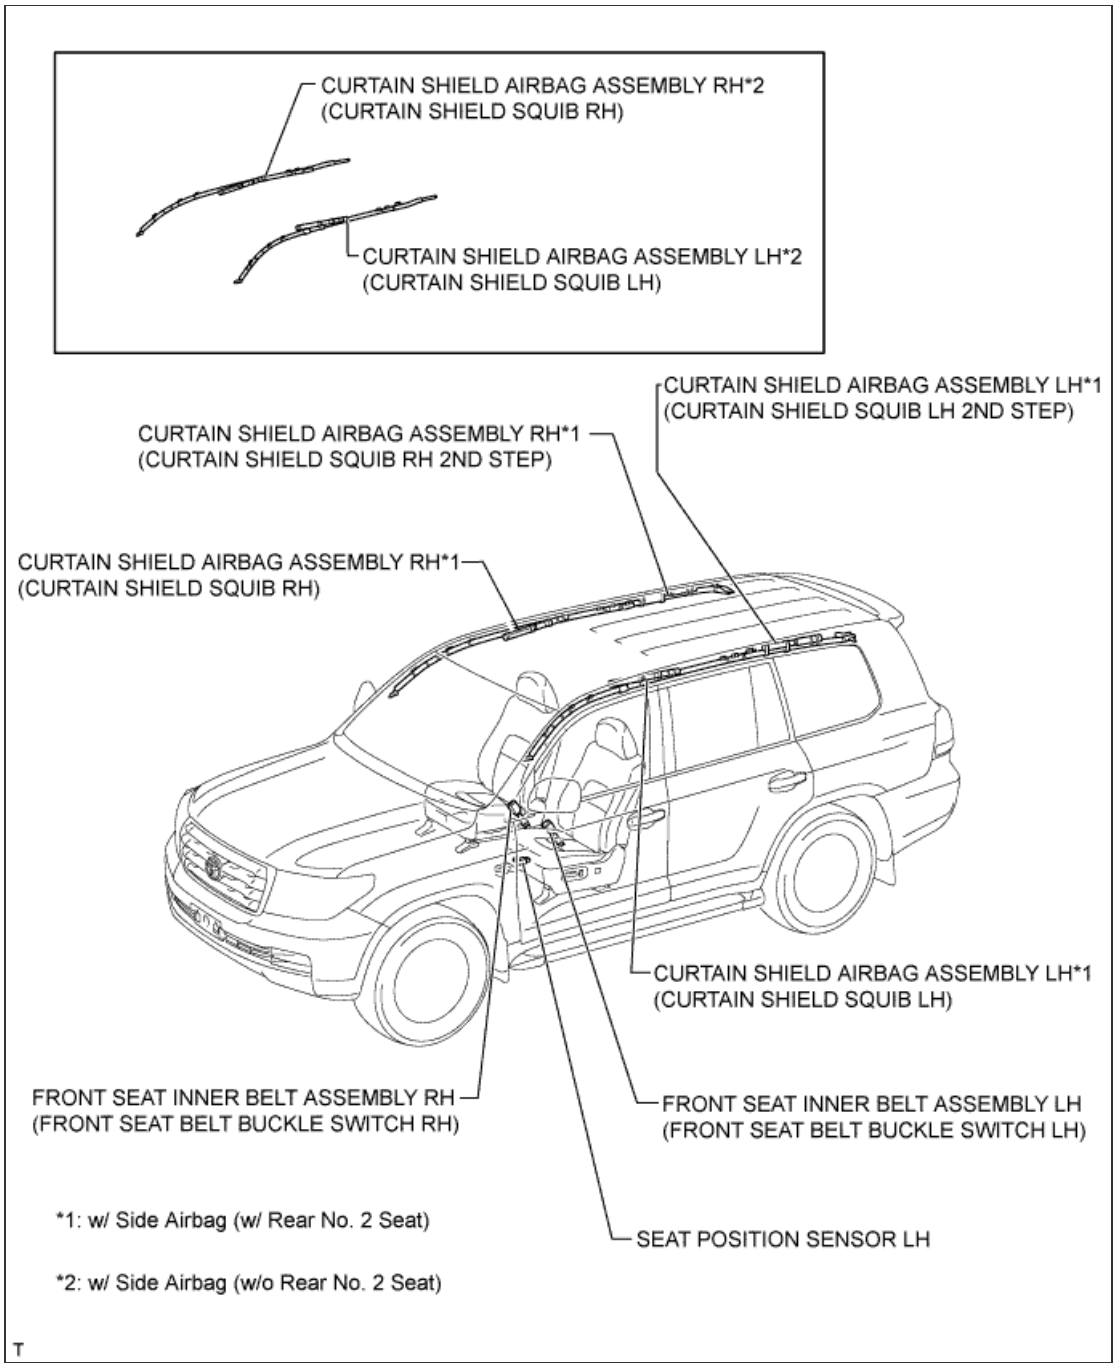

CURTAIN SHIELD AIRBAG ASSEMBLY RH*2
(CURTAIN SHIELD SQUIB RH)
CURTAIN SHIELD AIRBAG ASSEMBLY LH*2
(CURTAIN SHIELD SQUIB LH)
CURTAIN SHIELD AIRBAG ASSEMBLY LH*1
(CURTAIN SHIELD SQUIB LH 2ND STEP)
CURTAIN SHIELD AIRBAG ASSEMBLY RH*1
(CURTAIN SHIELD SQUIB RH 2ND STEP)
CURTAIN SHIELD AIRBAG ASSEMBLY RH*1
(CURTAIN SHIELD SQUIB RH)
CURTAIN SHIELD AIRBAG ASSEMBLY LH*1
(CURTAIN SHIELD SQUIB LH)
FRONT SEAT INNER BELT ASSEMBLY RH
(FRONT SEAT BELT BUCKLE SWITCH RH)
FRONT SEAT INNER BELT ASSEMBLY LH
(FRONT SEAT BELT BUCKLE SWITCH LH)
SEAT POSITION SENSOR LH
*1: w/ Side Airbag (w/ Rear No. 2 Seat)
*2: w/ Side Airbag (w/o Rear No. 2 Seat)
T

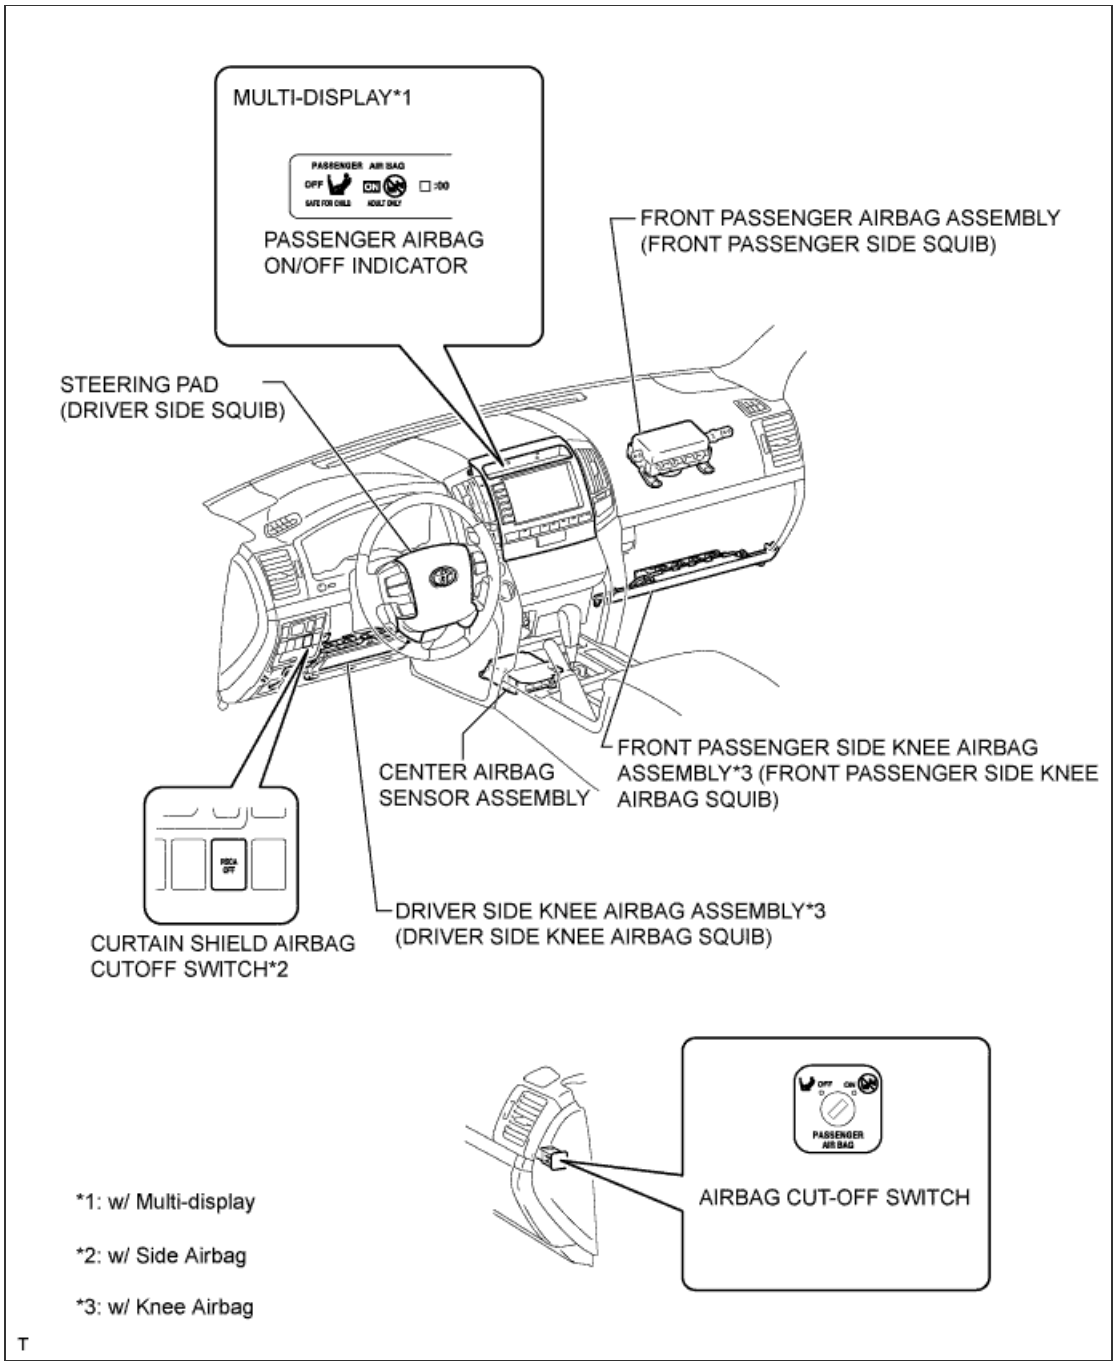

MULTI-DISPLAY*1
PASSENGER AIR BAG
OFF
ON
SAFE FOR CHILD
ADULT ONLY
PASSENGER AIRBAG
ON/OFF INDICATOR
FRONT PASSENGER AIRBAG ASSEMBLY
(FRONT PASSENGER SIDE SQUIB)
STEERING PAD
(DRIVER SIDE SQUIB)
CENTER AIRBAG
SENSOR ASSEMBLY
FRONT PASSENGER SIDE KNEE AIRBAG
ASSEMBLY*3 (FRONT PASSENGER SIDE KNEE
AIRBAG SQUIB)
DRIVER SIDE KNEE AIRBAG ASSEMBLY*3
(DRIVER SIDE KNEE AIRBAG SQUIB)
CURTAIN SHIELD AIRBAG
CUTOFF SWITCH*2
PASSENGER
AIR BAG
AIRBAG CUT-OFF SWITCH
*1: w/ Multi-display
*2: w/ Side Airbag
*3: w/ Knee Airbag


T

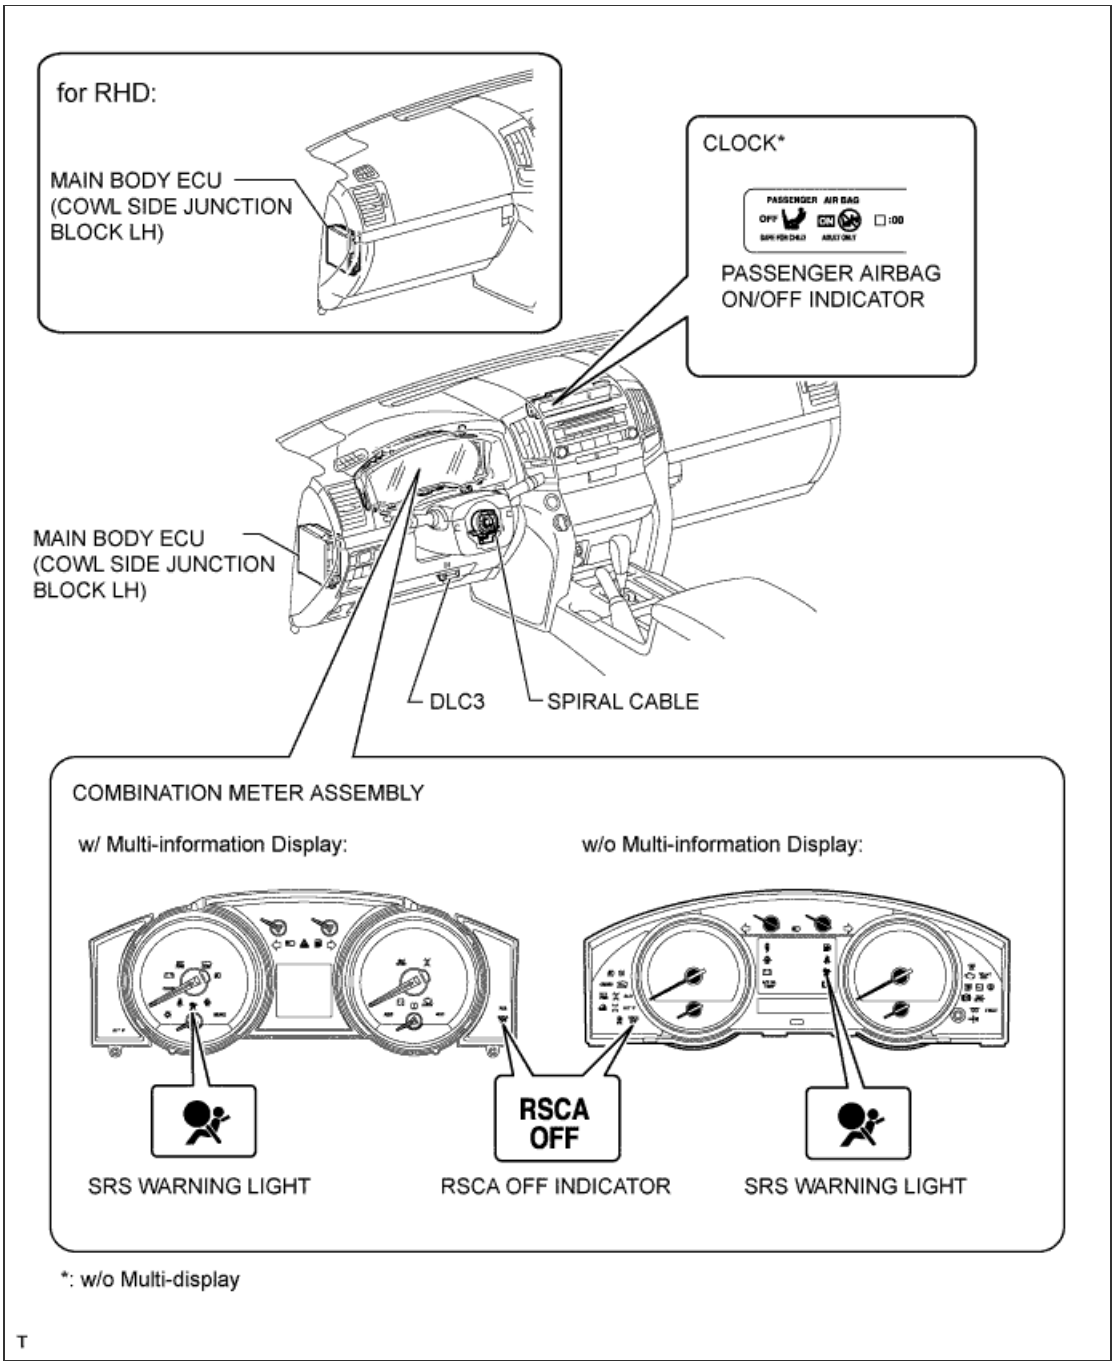
for RHD:
MAIN BODY ECU
(COWL SIDE JUNCTION
BLOCK LH)
CLOCK*
PASSENGER AIR BAG
OFF
ON
PASSENGER AIRBAG
ON/OFF INDICATOR
MAIN BODY ECU
(COWL SIDE JUNCTION
BLOCK LH)
DLC3
SPIRAL CABLE
COMBINATION METER ASSEMBLY
w/ Multi-information Display:
w/o Multi-information Display:
RSCA
OFF
SRS WARNING LIGHT
RSCA OFF INDICATOR
SRS WARNING LIGHT
*: w/o Multi-display
T

for Preparation Click here

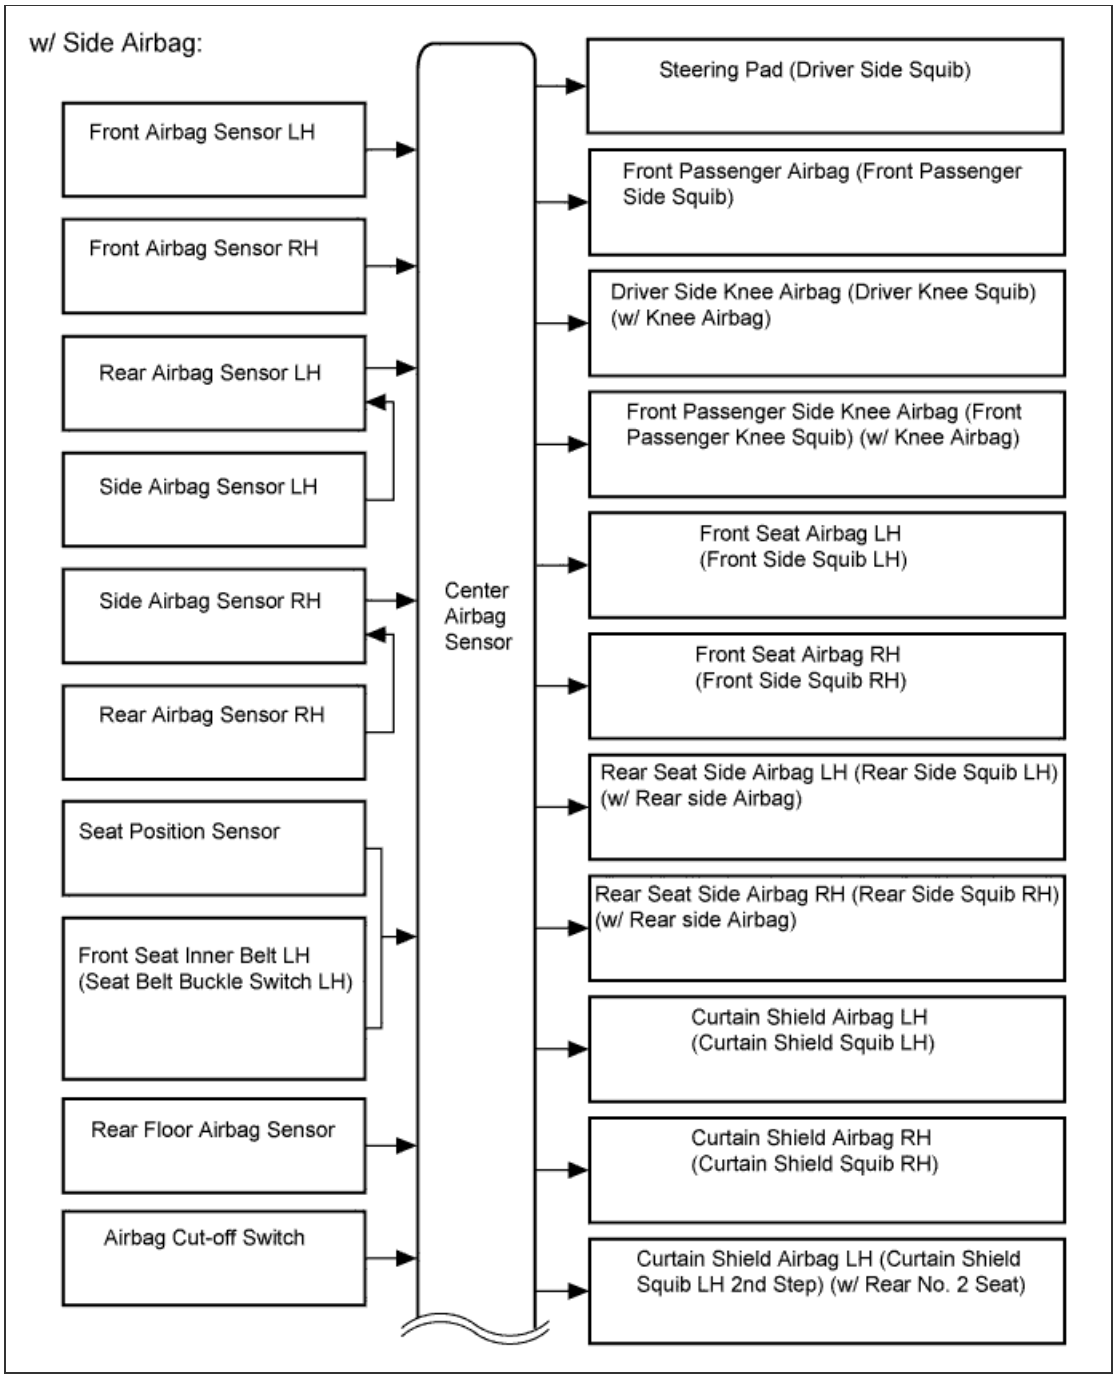

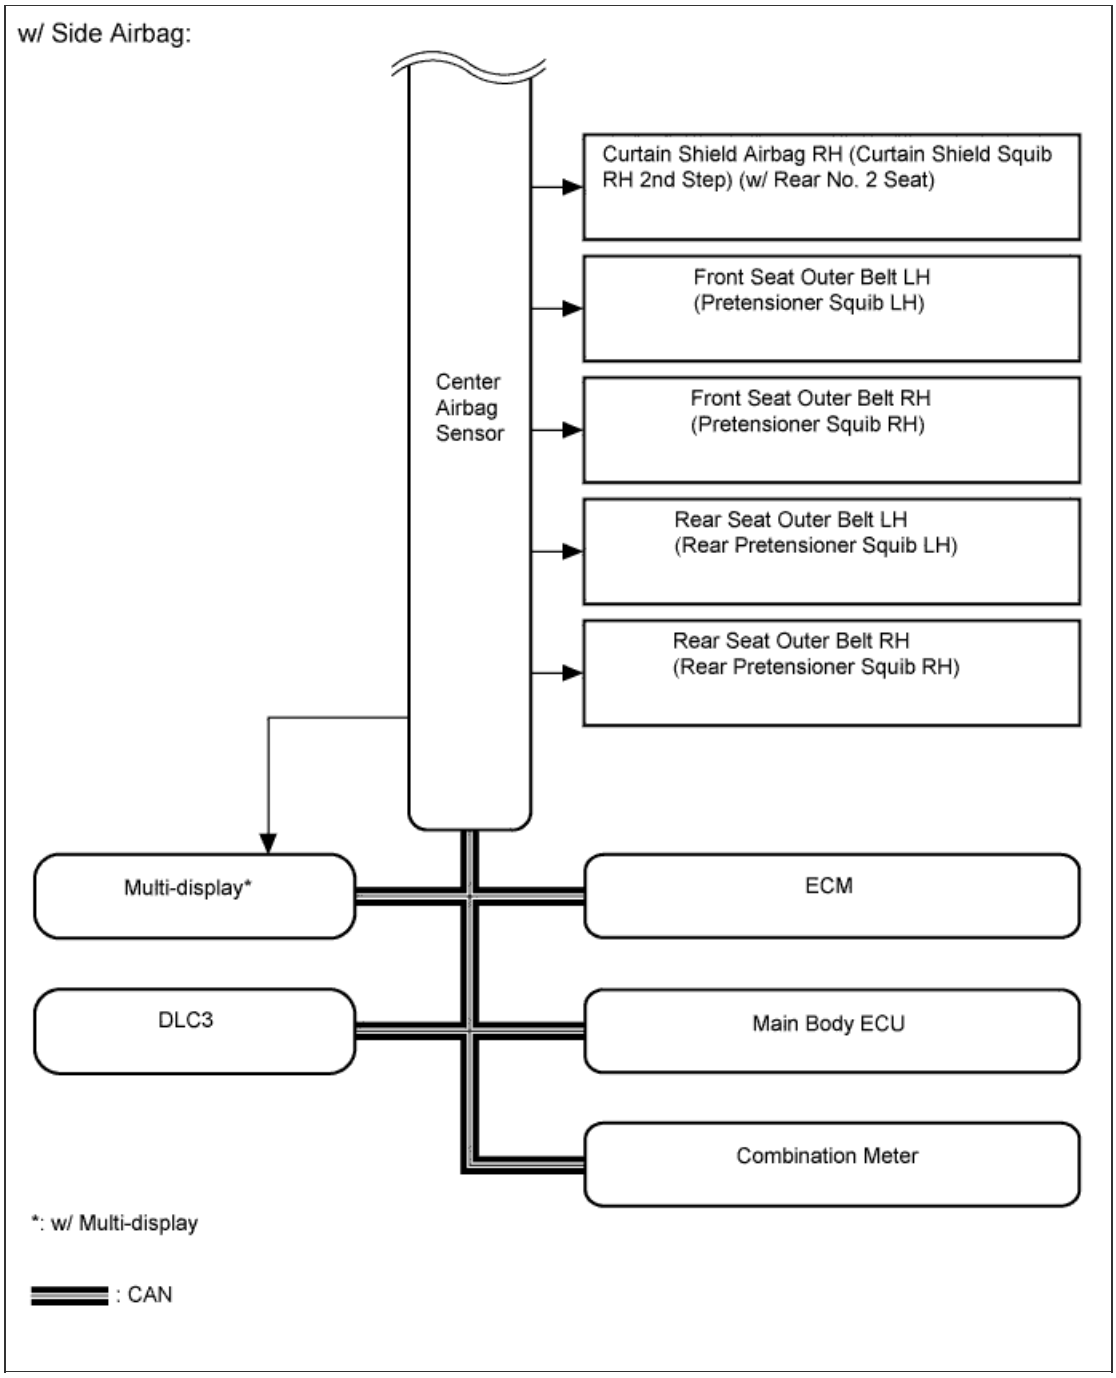
w/ Side Airbag:
Curtain Shield Airbag RH (Curtain Shield Squib RH 2nd Step) (w/ Rear No. 2 Seat)
Front Seat Outer Belt LH (Pretensioner Squib LH)
Front Seat Outer Belt RH (Pretensioner Squib RH)
Rear Seat Outer Belt LH (Rear Pretensioner Squib LH)
Rear Seat Outer Belt RH (Rear Pretensioner Squib RH)
Center Airbag Sensor
Multi-display*
ECM
DLC3
Main Body ECU
Combination Meter
*: w/ Multi-display
: CAN

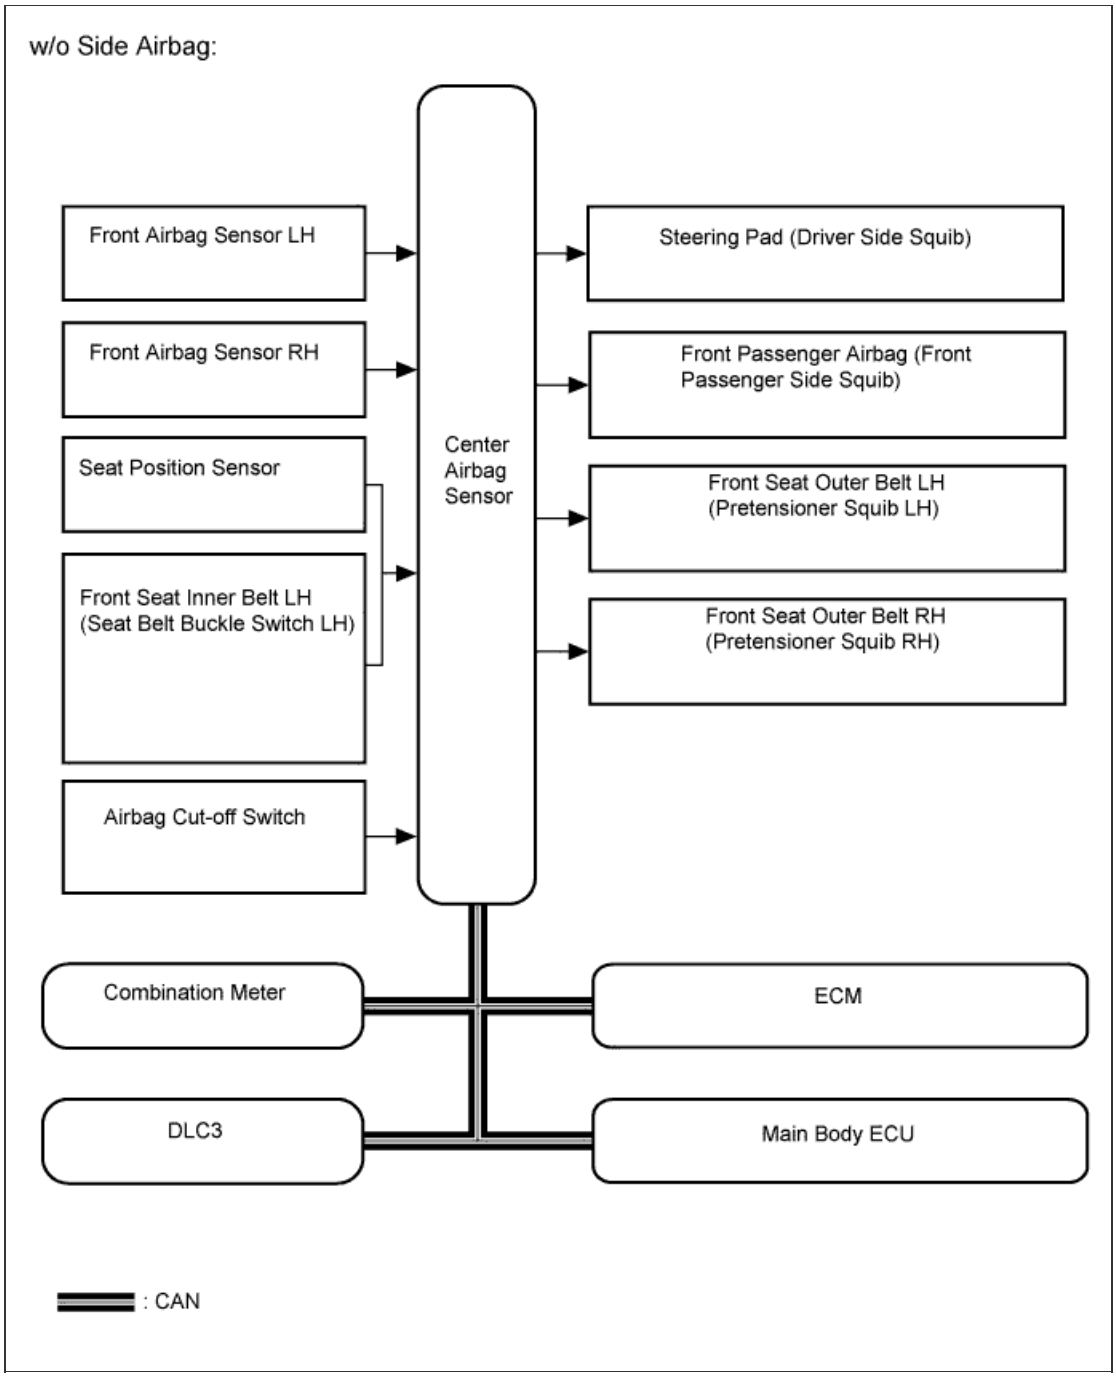

Transmitting ECU (Transmitter)	Receiving ECU	Signal	Communication Method
Center Airbag Sensor	ECM	• Crash detection signal • Fuel cut signal	CAN
Center Airbag Sensor	Main Body ECU	Driver seat buckle switch signal	
Center Airbag Sensor	Combination Meter	• SRS warning light on demand signal • SRS warning light blink demand signal • Passenger seat occupant detection signal • Passenger seat buckle switch signal • Diagnosis signal (DTC)	
Combination Meter	Center Airbag Sensor	• Vehicle speed signal • Meter diagnosis polling signal	
		• Engine speed signal • Accelerator opening	

ECM	Center Airbag Sensor	angle information • Accelerator opening angle signal • Shift position signal • Test mode signal • Stop signal	
Center Airbag Sensor	Multi-display	• Passenger occupant signal • Passenger seat buckle switch signal	

for Preparation Click here

GENERAL

a. In conjunction with the impact absorbing structure for a front collision, the SRS (Supplemental Restraint System) driver airbag, front passenger airbag, driver side knee airbag, and front passenger side knee airbag are designed to supplement seat belts in the event of a front collision in order to help reduce shock to the head, chest, and knees of the driver and front passenger. This system is a 3-sensor type airbag system which detects the impact during a front collision using the center airbag sensor and front airbag sensors. It also operates the airbag system and seat belt pretensioners.

b. This vehicle is equipped with electrical type deceleration sensors for the front airbags in order to detect details about the extent of a collision during the initial stages of the collision. Therefore, the deployment of the driver airbag and front passenger airbag is controlled in two stages according to the severity of the impact.

c. In conjunction with the impact absorbing structure for a side collision, the side airbag and curtain shield airbag are designed to help reduce shock to the driver, front passenger, and rear outer passengers in the event of a side collision.

d. The curtain shield airbag helps reduce shock to the front and rear seat occupants. In conjunction with the curtain shield airbag, side airbag sensors are installed at the bottom of the center pillars and rear airbag sensors are installed at the bottom of the rear pillars.

e. In this system, a front side collision is detected by the side airbag sensor in order to simultaneously deploy the front seat, rear seat side, and curtain shield airbags. A rear side collision is detected by the rear airbag sensor and the center airbag sensor in order to deploy the rear seat side airbags, and curtain shield airbag.

f. The center airbag sensor sends the airbag deployment signal to the ECM through the CAN (Controller Area Network) to operate the fuel pump control.

g. The center airbag sensor sends the airbag deployment signal to the main body ECU via the discrete line to operate collision door lock release control.

CONSTRUCTION AND OPERATION

a. FRONT AIRBAG SENSOR

   i. The front airbag sensors are installed on the right and left radiator supports respectively.

   ii. The front airbag sensor consists of a deceleration sensor.

   iii. The deceleration sensor is built into the front airbag sensor, and the distortion that is created in the sensor is converted into an electric signal based on the vehicle deceleration rate during a front collision. Accordingly, the extent of the initial collision can be detected in detail.

b. SIDE AIRBAG SENSOR

   i. The side airbag sensors are installed on the bottom of the right and left center pillars respectively.

   ii. The side airbag sensor consists of a deceleration sensor.

   iii. The deceleration sensor is built into the side airbag sensor, and the distortion that is created in the sensor is converted into an electric signal based on the vehicle deceleration rate during a front side collision. Accordingly, the extent of the initial collision can be detected in detail.

c. REAR AIRBAG SENSOR

   i. The rear airbag sensors are installed on the right and left rear pillars respectively.

   ii. The rear airbag sensor consists of a deceleration sensor.

   iii. The deceleration sensor is built into the rear airbag sensor, and the distortion that is created in the sensor is converted into an electric signal based on the vehicle deceleration rate during a rear side collision. Accordingly, the extent of the initial collision can be detected in detail.

d. REAR FLOOR AIRBAG SENSOR

   i. The floor airbag sensor is installed in the center of the floor between the rear pillars.

   ii. The floor airbag sensor consists of the deceleration sensor.

   iii. The deceleration sensor is built into the floor airbag sensor, and the distortion that is created in the sensor is converted into an electric signal based on the vehicle deceleration rate during a side collision. Accordingly, the extent of the initial collision can be

detected in detail.

e. CENTER AIR A S S R

i. eneral

- The center airbag sensor is installed in the center floor under the instrument panel.
- The center airbag sensor consists of a deceleration sensor, safing sensor, electronic safing sensor, ignition control circuit, and diagnostic circuit.
- The center airbag sensor receives signals from the deceleration sensor and safing sensor built into the center airbag sensor and front airbag sensor. Then the center airbag sensor determines whether the driver airbag, front passenger airbag, driver side knee airbag, front passenger side knee airbag, front seat belt pretensioners and rear seat belt pretensioners should be activated, and diagnoses system malfunctions.
- The center airbag sensor causes the front side, rear side, and curtain shield airbags to deploy when receiving signals from the side airbag sensors (w/ Side Airbag).
- The center airbag sensor receives signals from the deceleration sensor and the electronic safing sensor built into the center airbag sensor and the rear airbag sensor, and determines whether the rear seat side curtain shield airbag should be activated, and diagnoses system malfunctions (w/ Side Airbag).
- The center airbag sensor sends the airbag deployment signal to the ECM through the CAN to operate the fuel pump control.
- The center airbag sensor sends the airbag deployment signal to the main body ECU through the discrete line to operate collision door lock release control.

ii. Deceleration sensor and ignition control circuit

- The deceleration sensor is built into the center airbag sensor.
- The ignition control circuit performs calculations based on the signal output from the deceleration sensors of the center airbag sensor and front airbag sensor. If the calculated values are more than the specified values, it activates an ignition operation.

iii. Safing sensor

The safing sensor is built into the center airbag sensor. During a front collision, the sensor turns on and outputs an ON signal to the center airbag sensor if a deceleration rate sent to the safing sensor is more than the specified value.

iv. Electronic safing sensor

The electronic safing sensor is built into the center airbag sensor. During a side collision, the sensor turns on and outputs an ON signal to the center airbag sensor if a deceleration rate sent to the electronic safing sensor is more than the specified value.

v. Backup power source

The backup power source consists of a power supply capacitor and a DC-DC converter. When the power system does not function during a collision, the power supply capacitor discharges and supplies electric power to the system. The DC-DC converter operates as a boosting transformer when the battery voltage falls below a predetermined level.

vi. Diagnostic circuit

This circuit constantly diagnoses system malfunctions. When a malfunction is detected, it turns on the SRS warning light on the combination meter to inform the driver.

vii. Memory circuit

When a malfunction is detected in the diagnostic circuit, it is coded and stored in the memory circuit.


f. SRS Warning Light

i. The SRS warning light is located on the combination meter. It comes on to inform the driver of system trouble when a malfunction is detected in the self-diagnosis of the center airbag sensor. Under normal operating conditions when the engine switch is turned on (IG), it comes on for approximately 6 seconds and then goes off.

DEPLOYMENT CONDITION

If the vehicle is in a collision and the shock is more than the specified value, the SRS is activated automatically. The center airbag sensor includes the safing sensor and deceleration sensor. The safing sensor is designed to turn on at a lower deceleration rate than the deceleration sensor.


a. The center airbag sensor determines whether ignition is necessary based on signals from the deceleration sensor and the front airbag sensor*1. If the safing sensor turns on simultaneously, current flows to the squibs to deploy the SRS as shown in the illustration below.

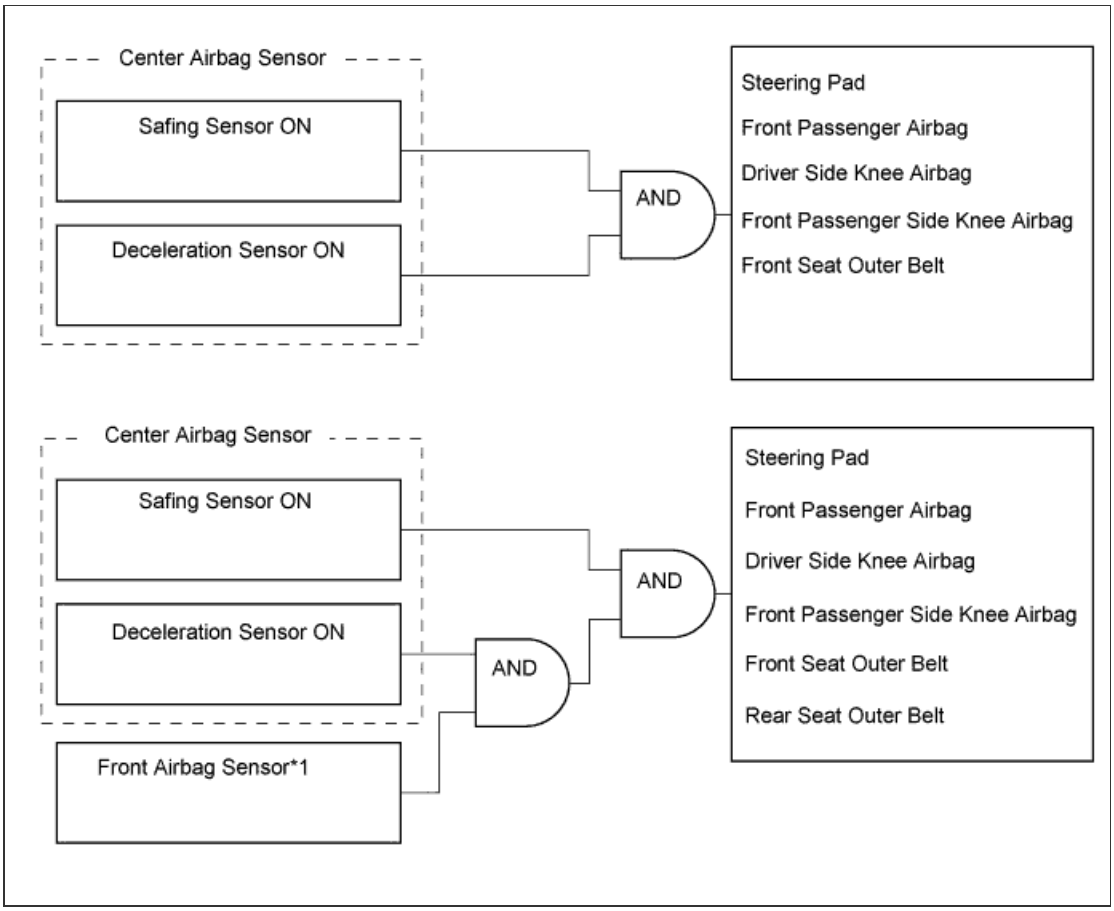


HINT:

*1: In case of a front collision, the ignition signal could be output with the deceleration sensor ON signal even without a signal from the front airbag sensor.


b. The center airbag sensor determines whether ignition is necessary based on signals from the side airbag sensor. If the safing sensor turns on simultaneously, current flows to the squib to deploy the SRS as shown in the illustration below.

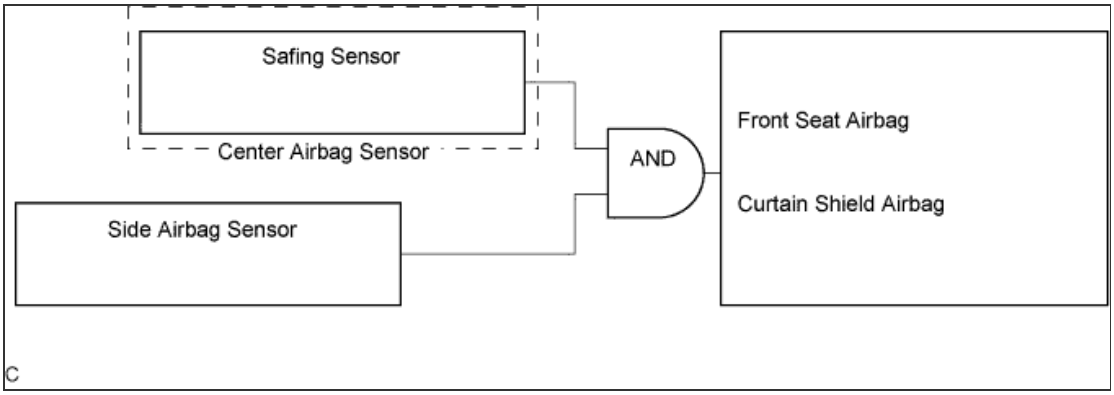

c. The center airbag sensor determines whether ignition is necessary based on signals from the side airbag sensor and rear airbag sensor. If the safing sensor turns on simultaneously, current flows to the squib to deploy the SRS as shown in the illustration below.

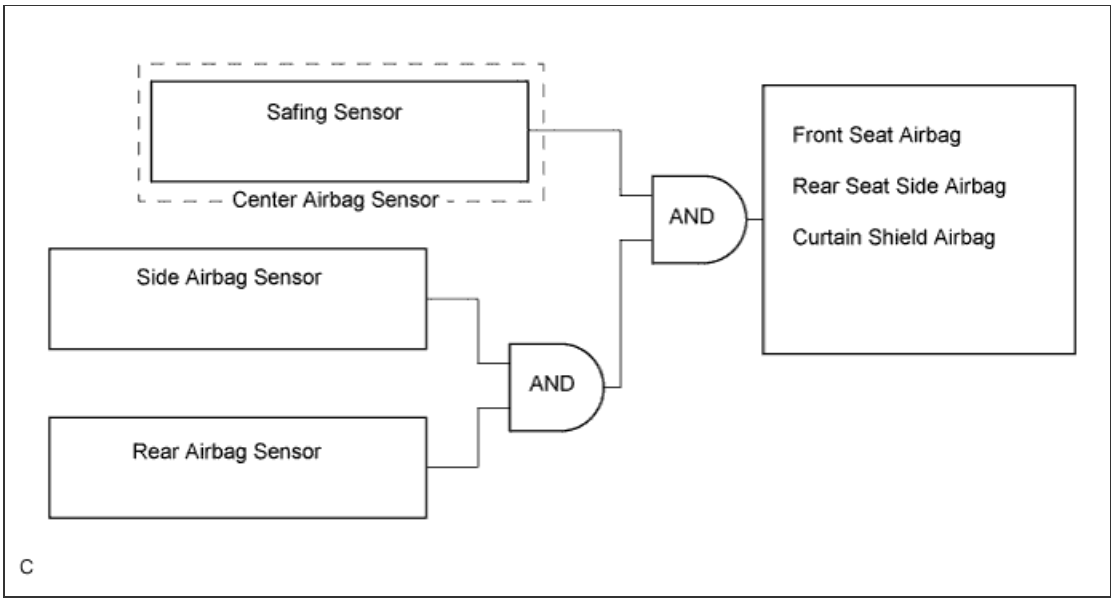

d. The center airbag sensor determines whether ignition is necessary based on signals from the rear airbag sensor. If the safing sensor turns on simultaneously, current flows to the squib to deploy the SRS as shown in the illustration below.

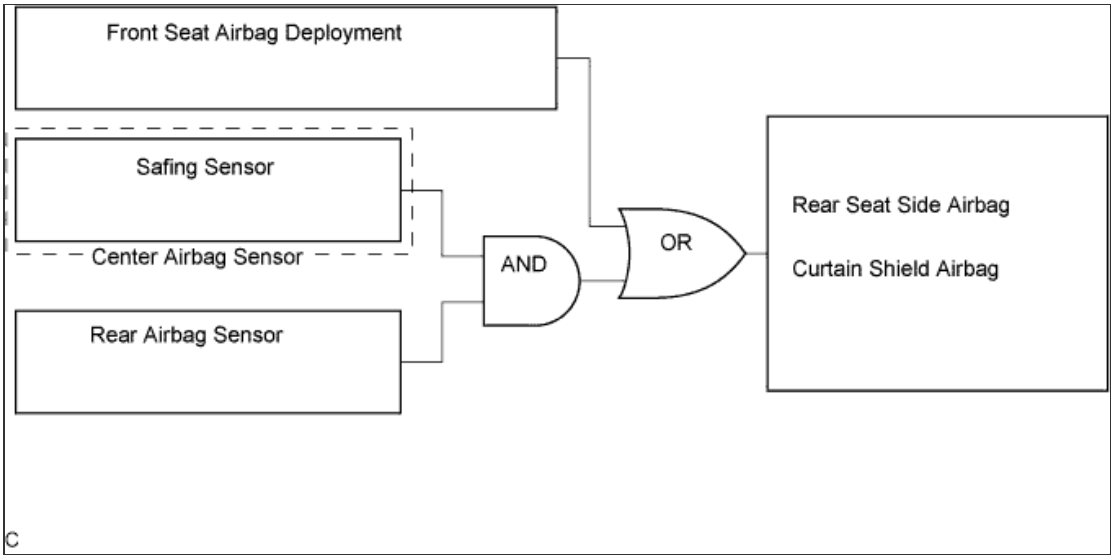

HINT:

If the front seat airbag deploys, the rear seat side airbag, and the curtain shield airbag will also deploy, regardless of whether the signal is output from the rear airbag sensor.

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the airbag system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK CAN COMMUNICATION SYSTEM*

a. Check for DTC (Click here).

Result

Res tl	Proceed to
DTC is not o tp t	A
DTC is o tp t (for LHD)	B
DTC is o tp t (for RHD)	C

B. Go to CAN COMMUNICATION SYSTEM (Click here)

C. Go to CAN COMMUNICATION SYSTEM (Click here)

A

4.WARNING LIGHT CHECK

NEXT

5.CHECK DTC (Present and Past DTCs)*

a. Check for DTC (Click here).

Result

Res tl	Proceed to
DTC is not o tp t	A
DTC is o tp t	B

B. Go to PROBLEM SYMPTOMS TABLE (Click here)

A

6.DTC CHART

NEXT

7.CIRCUIT INSPECTION

NEXT

8.REPAIR

NEXT

9.CLEAR DTC (Present and Past DTCs)*

NEXT

10.CHECK DTC (Present and Past DTCs)*

a. Check for DTC (Click here).

Result

Res tl	Proceed to
DTC is not o tp t	A
DTC is o tp t	B

B. Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)

A

11.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the airbag system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK CAN COMMUNICATION SYSTEM*

a. Check for DTC (Click here).

Result

Res tl	Proceed to
DTC is not o tp t	A
DTC is o tp t (for LHD)	B
DTC is o tp t (for RHD)	C

B. Go to CAN COMMUNICATION SYSTEM (Click here)

C. Go to CAN COMMUNICATION SYSTEM (Click here)

A

4.WARNING LIGHT CHECK

NEXT

5.CHECK DTC (Present and Past DTCs)*

a. Check for DTC (Click here).

Result

Res tl	Proceed to
DTC is not o tp t	A
DTC is o tp t	B

B. Go to PROBLEM SYMPTOMS TABLE (Click here)

A

6.DTC CHART

NEXT

7.CIRCUIT INSPECTION

NEXT

8.REPAIR

NEXT

9.CLEAR DTC (Present and Past DTCs)*

NEXT

10.CHECK DTC (Present and Past DTCs)*

a. Check for DTC (Click here).

Result

Res tl	Proceed to
DTC is not o tp t	A
DTC is o tp t	B

B. Go to DIAGNOSTIC TROUBLE CODE CHART (Click here)

A

11.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Airbag System

Symptom	Suspected Area	See page
The S S warning light goes off after the primary check, but then comes on.	S S Warning Light emains	Click here
With the engine switch on (IG), the S S warning light sometimes comes on after approximately 6 seconds.	S S Warning Light emains	Click here
The S S warning light always comes on even when DTC is not output.	S S Warning Light emains	Click here
With the engine switch on (IG), the S S warning light does not come on.	S S Warning Light does not Come	Click here
Although the S S warning light operates normally, a DTC or a normal system code is not output.	Diagnosis Circuit	Click here
Although terminals TC and CG of the DLC3 are not connected, a DTC or a normal system code is output.	Diagnosis Circuit	Click here

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Airbag System

Symptom	Suspected Area	See page
The S S warning light goes off after the primary check, but then comes on.	S S Warning Light emains	Click here
With the engine switch on (IG), the S S warning light sometimes comes on after approximately 6 seconds.	S S Warning Light emains	Click here
The S S warning light always comes on even when DTC is not output.	S S Warning Light emains	Click here
With the engine switch on (IG), the S S warning light does not come on.	S S Warning Light does not Come	Click here
Although the S S warning light operates normally, a DTC or a normal system code is not output.	Diagnosis Circuit	Click here
Although terminals TC and CG of the DLC3 are not connected, a DTC or a normal system code is output.	Diagnosis Circuit	Click here

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Airbag System


Symptom	Suspected Area	See page
The S S warning light goes off after the primary check, but then comes on.	S S Warning Light emains	Click here
With the engine switch on (IG), the S S warning light sometimes comes on after approximately 6 seconds.	S S Warning Light emains	Click here
The S S warning light always comes on even when DTC is not output.	S S Warning Light emains	Click here
With the engine switch on (IG), the S S warning light does not come on.	S S Warning Light does not Come	Click here
Although the S S warning light operates normally, a DTC or a normal system code is not output.	Diagnosis Circuit	Click here
Although terminals TC and CG of the DLC3 are not connected, a DTC or a normal system code is output.	Diagnosis Circuit	Click here

for Preparation Click here

CENTER AIRBAG SENSOR (w/ Side Airbag)

*4: w/ Rear Side Airbag
*5: w/ Knee Airbag

w/ Side Airbag:

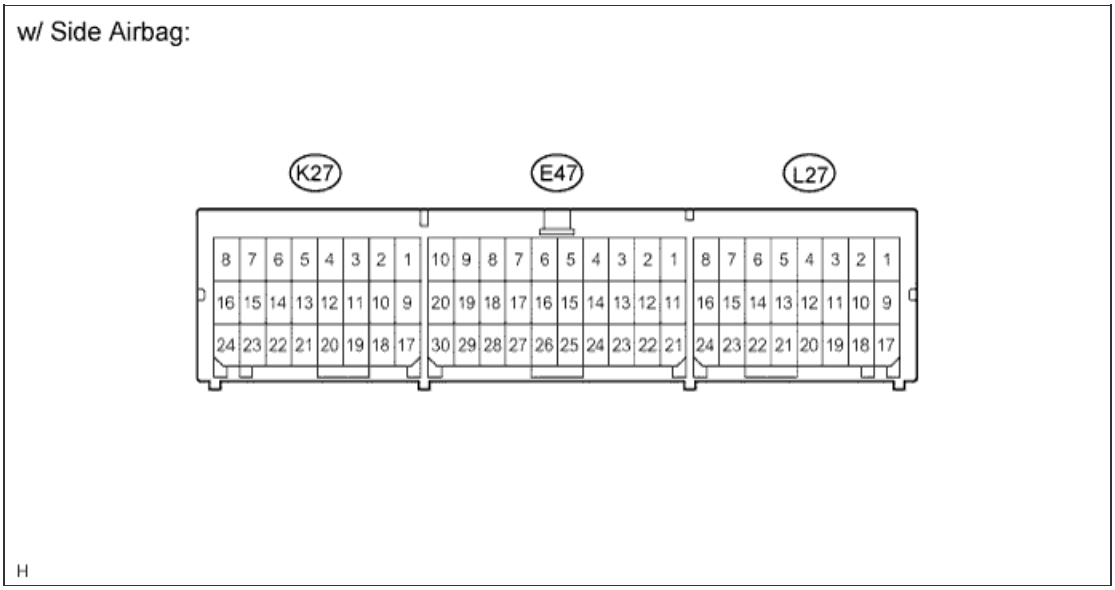

Terminal No.	Symbols	Destination
E47-1	P2+	Front passenger airbag (Front passenger side squib 2nd step)
E47-2	P2-	Front passenger airbag (Front passenger side squib 2nd step)
E47-3	P-	Front passenger airbag (Front passenger side squib)
E47-4	P+	Front passenger airbag (Front passenger side squib)
E47-5	D+	Steering pad (Driver side squib)
E47-6	D-	Steering pad (Driver side squib)
E47-7	D2-	Steering pad (Driver side squib 2nd step)
E47-8	D2+	Steering pad (Driver side squib 2nd step)
E47-9	DK+	Driver side knee airbag (Driver side knee airbag squib)*5
E47-10	DK-	Driver side knee airbag (Driver side knee airbag squib)*5
E47-13	CANH	CAN communication line
E47-17	P-AB	Passenger airbag ON/OFF indicator
E47-19	PK+	Front passenger side knee airbag (Front passenger side knee airbag squib)*5
E47-20	PK-	Front passenger side knee airbag (Front passenger side knee airbag squib)*5
E47-21	IG2	IGN fuse
E47-22	CANL	CAN communication line
E47-23	PAON	Passenger airbag ON/OFF indicator
E47-25	E1	Ground
E47-26	E2	Ground
E47-27	-SR	Front airbag sensor RH
E47-28	-SL	Front airbag sensor LH
E47-29	+SR	Front airbag sensor RH
E47-30	+SL	Front airbag sensor LH

K27-1	SFL+	Front seat airbag LH (Front side squib LH)
K27-2	SFL-	Front seat airbag LH (Front side squib LH)
K27-3	ICL-	Curtain shield airbag LH (Curtain shield squib LH)
K27-4	ICL+	Curtain shield airbag LH (Curtain shield squib LH)
K27-5	PL+	Front seat outer belt LH (Front pretensioner squib LH)
K27-6	PL-	Front seat outer belt LH (Front pretensioner squib LH)
K27-7	PLR-	Rear seat outer belt LH (Rear pretensioner squib LH)
K27-8	PLR+	Rear seat outer belt LH (Rear pretensioner squib LH)
K27-9	LSP+	Front seat inner belt LH (Seat position sensor)
K27-10	LBE+	Front seat inner belt LH (Seat belt buckle switch LH)
K27-11	CL2-	Curtain shield airbag LH (Curtain shield squib LH 2nd step)*3
K27-12	CL2+	Curtain shield airbag LH (Curtain shield squib LH 2nd step)*3
K27-15	RL-	Rear seat side airbag LH (Rear side squib LH)*4
K27-16	RL+	Rear seat side airbag LH (Rear side squib LH)*4
K27-19	RMIL	Combination meter (RSCA OFF Indicator)*1
K27-23	BBL-	Side airbag sensor LH
K27-24	BBL+	Side airbag sensor LH
L27-1	PRR+	Rear seat outer belt RH (Rear pretensioner squib RH)
L27-2	PRR-	Rear seat outer belt RH (Rear pretensioner squib RH)
L27-3	PR-	Front seat outer belt RH (Front pretensioner squib RH)
L27-4	PR+	Front seat outer belt RH (Front pretensioner squib RH)
L27-5	ICR+	Curtain shield airbag RH (Curtain shield squib RH)
L27-6	ICR-	Curtain shield airbag RH (Curtain shield squib RH)
L27-7	SFR-	Front seat airbag RH (Front side squib RH)
L27-8	SFR+	Front seat airbag RH (Front side squib RH)
L27-9	RR+	Rear seat side airbag RH (Rear side squib RH)*4
L27-10	RR-	Rear seat side airbag RH (Rear side squib RH)*4
L27-13	CR2+	Curtain shield airbag RH (Curtain shield squib RH 2nd step)*3
L27-14	CR2-	Curtain shield airbag RH (Curtain shield squib RH 2nd step)*3
L27-17	BBR+	Rear airbag sensor RH
L27-18	BBR-	Rear airbag sensor RH
L27-19	BCR-	Rear floor airbag sensor
L27-20	BCR+	Rear floor airbag sensor
L27-21	RMSW	Curtain shield airbag cutoff switch
L27-22	RMIL	Combination meter (RSCA OFF Indicator)*2

HINT:


*1: for LHD

*2: for RHD

*3: w/ Rear No. 2 Seat

CENTER AIRBAG SENSOR (w/o Side Airbag)

w/o Side Airbag:

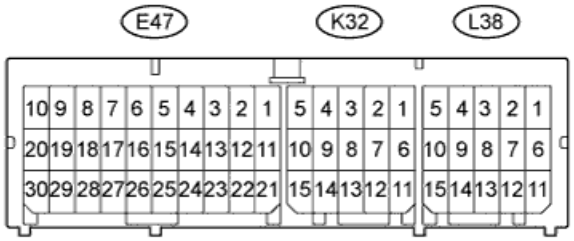

Terminal No.	Symbols	Destination
E47-1	P2+	Front passenger airbag assembly (Front passenger side squib 2nd step)
E47-2	P2-	Front passenger airbag assembly (Front passenger side squib 2nd step)
E47-3	P-	Front passenger airbag assembly (Front passenger side squib)
E47-4	P+	Front passenger airbag assembly (Front passenger side squib)
E47-5	D+	Steering pad (Driver side squib)
E47-6	D-	Steering pad (Driver side squib)
E47-7	D2-	Steering pad (Driver side squib 2nd step)
E47-8	D2+	Steering pad (Driver side squib 2nd step)
E47-13	CANH	CAN communication signal
E47-21	IG2	IGN fuse (Power Source)
E47-22	CANL	CAN communication signal
E47-25	E1	Ground
E47-26	E2	Ground
E47-27	-SR	Front airbag sensor RH
E47-28	-SL	Front airbag sensor LH
E47-29	+SR	Front airbag sensor RH
E47-30	+SL	Front airbag sensor LH
K32-1	PL-	Front seat outer belt assembly LH (Front pretensioner squib LH)
K32-2	PL+	Front seat outer belt assembly LH (Front pretensioner squib LH)
K32-11	LBE+	Front seat inner belt assembly LH*1
K32-12	LBE-	Front seat inner belt assembly LH*1
K32-13	LSP-	Seat position sensor*1
K32-14	LSP+	Seat position sensor*1
L38-4	PR+	Front seat outer belt assembly RH (Front pretensioner squib RH)
L38-5	PR-	Front seat outer belt assembly RH (Front pretensioner squib RH)
L38-12	RSP+	Seat position sensor*2
L38-13	RSP-	Seat position sensor*2
L38-14	RBE-	Front seat inner belt assembly RH*2
L38-15	RBE+	Front seat inner belt assembly RH*2

HINT:

*1: for LHD


*2: for RHD

for Preparation Click here

SYMPTOM SIMULATION

HINT:

The most difficult case in troubleshooting is when no problem symptoms occur. n such a case, a thorough problem analysis must be carried out. A simulation of the same or similar conditions and environment in which the problem occurred in the customer s vehicle should be carried out. No matter how much skill or e perience a technician has, troubleshooting without confirming the problem symptoms will lead to important repairs being overlooked and mistakes or delays.

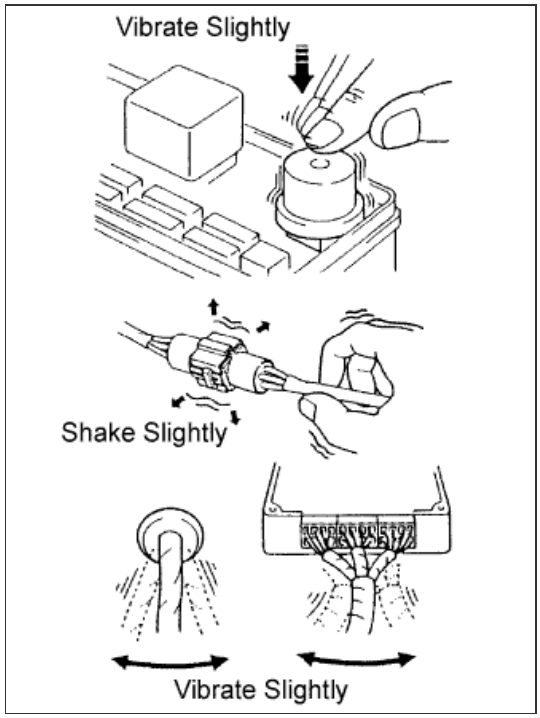

a. ibration method hen vibration seems to be the ma or cause.

HINT:

Perform the simulation method only during the primary check period (for appro imately 6 seconds after the engine switch is turned on (

i. lightly vibrate the part of the sensor considered to be the cause of the problem with your fingers and check whether the malfunction occurs.

NOTICE:

haking the relays too strongly may result in open relays.

ii. ightly shake the connector vertically and horizontally.

iii. ightly shake the wire harness vertically and horizontally.

HINT:

The connector oint and fulcrum of the vibration are the ma or areas to be checked thoroughly.

FUNCTION OF SRS WARNING LIGHT

a. Primary check.

i. Turn the engine switch off. ait for at least 2 seconds, then turn the engine switch on (The warning light comes on for appro imately 6 seconds and the diagnosis of the airbag system (including the seat belt pretensioners) is performed.

HINT:

f trouble is detected during the primary check, the warning light remains on even after the primary check period (of appro imately 6 seconds) has elapsed.

b. onstant check.

i. After the primary check, the center airbag sensor constantly monitors the airbag system for trouble.

HINT:

f trouble is detected during the constant check, the center airbag sensor functions as follows

- **The SRS warning light comes on.**
- **The SRS warning light goes off, and then comes on. This blinking pattern indicates a source voltage drop. The SRS warning light goes off 10 seconds after the source voltage returns to normal.**

c. eview.

i. hen the airbag system is normal
The warning light comes on only during the primary check period (for appro imately 6 seconds after the engine switch is turned on (

ii. hen the airbag system has trouble

- The warning light remains on even after the primary check period has elapsed.
- The warning light goes off after the primary check, but comes on again during the constant check.

- The warning light does not come on when turning the engine switch from off to on (


HINT:

The center airbag sensor functions to keep the warning light on if the airbag has been deployed.

CHECK SRS WARNING LIGHT

a. Turn the engine switch on (and check that the warning light comes on for appro imately 6 seconds (primary check).

b. heck that the warning light goes off appro imately 6 seconds after the engine switch is turned on ((constant check).

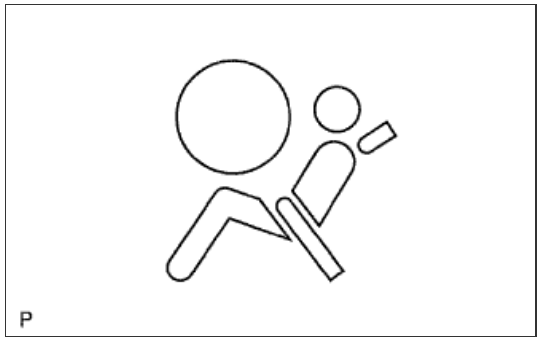

HINT:

hen any of the following symptoms occur, refer to the "Problem ymptoms Table" (lick here).

- **The SRS warning light comes on occasionally, after the primary check period has elapsed.**
- **The SRS warning light comes on, but a DTC is not output.**
- **The engine switch is turned from off to on (IG), but the SRS warning light does not come on.**

FUNCTION OF PASSENGER AIRBAG ON/OFF INDICATOR

a. nitial check

i. Turn the engine switch on (


ii. The passenger airbag ON/OFF indicator comes on for appro imately 4 seconds, then goes off for appro imately 2 seconds.

iii. Appro imately 6 seconds after the engine switch is turned on (the passenger airbag ON/OFF indicator will be ON or OFF depending on the conditions listed below.

ondition	"ON" indicator	"OFF" indicator
acant	Off	Off
Adult is seated	On	Off
hild is seated	Off	On
hild restraint system is set	Off	On
Front passenger occupant classification failure	Off	On

HINT:

- **The timing chart below shows the operation of the passenger airbag ON/OFF indicator. Use the chart to check the indicator light circuit.**
- **When the occupant classification system has trouble, both the SRS warning light and the passenger airbag ON/OFF indicator ("OFF") come on. In this case, check the DTCs for "Airbag System" first. Then troubleshoot the occupant classification system if DTC B1650/32 is output, and troubleshoot the passenger airbag ON/OFF indicator if DTC B1660/43 is output.**

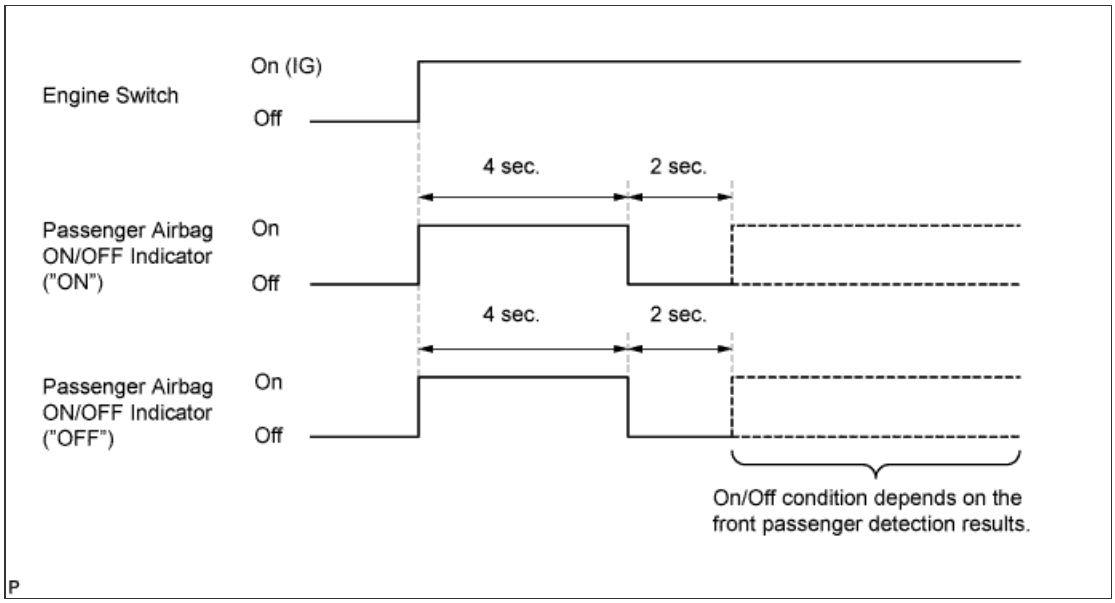

CHECK PASSENGER AIRBAG ON/OFF INDICATOR

a. Turn the engine switch on (

b. heck that the passenger airbag ON/OFF indicator ("ON" and "OFF") comes on for appro imately 4 seconds, then goes off for appro imately 2 seconds.

HINT:

Refer to the table in the previous step regarding the passenger airbag ON/OFF indicator when the engine switch is turned on (and appro imately 6 seconds have passed.



ACTIVATION PREVENTION MECHANISM

a. F N T OF A T T PR T AN

i. n activation prevention mechanism is built into the connector (on the center airbag sensor side) of the airbag system s uib circuit to prevent accidental airbag activation.

ii. This mechanism closes the circuit when the connector is disconnected by bringing the short spring into contact with the terminals and shutting off e ternal electricity to prevent accidental airbag activation.

b. R A OF A T T PR T AN

i. To release the activation prevention mechanism, insert a piece of paper with the same thickness as the male terminal (appro imately 0. mm (0. 20 in.)) between the terminals and the short spring to break the connection.

ii. Refer to the following illustrations concerning connectors utilizing the activation prevention mechanism and its release method.


CAUTION:

Never release the activation prevention mechanism on the s uib connector even when inspecting with the s uib disconnected.


NOTICE:

- **Do not release the activation prevention mechanism unless specially directed by the troubleshooting procedure.**
- **To prevent the terminal and the short spring from being damaged, always use a piece of paper with the same thickness as the male terminal.**


w/ Side Airbag:

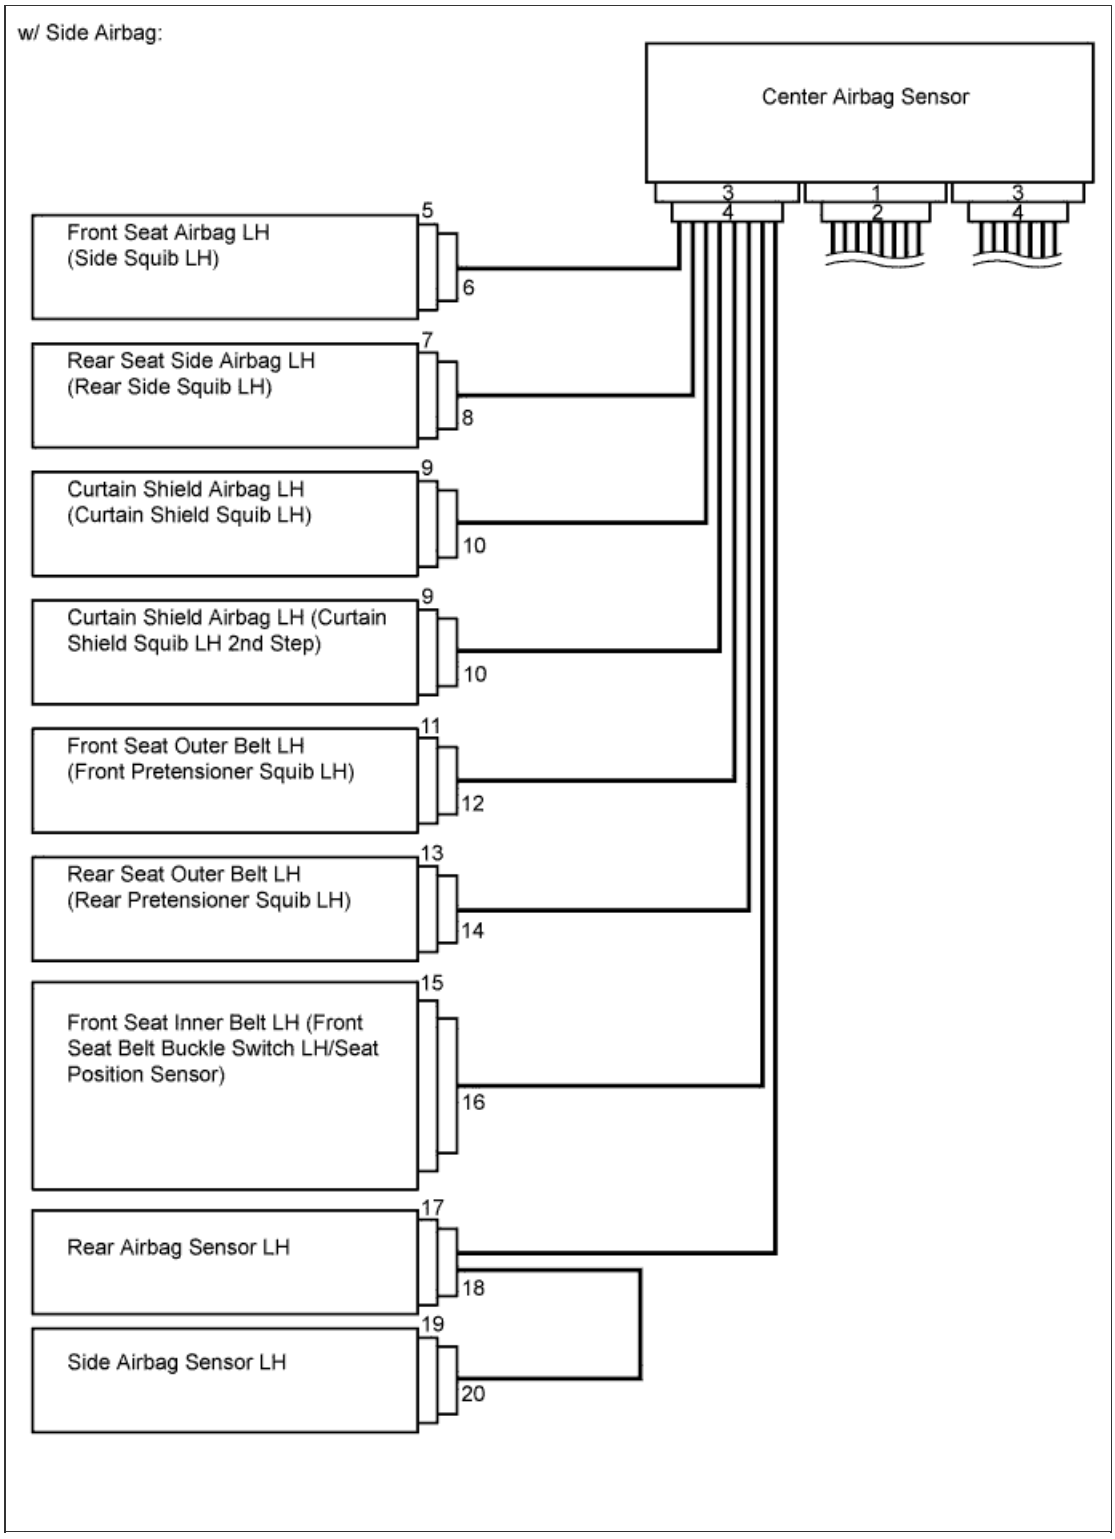


w/ Side Airbag:

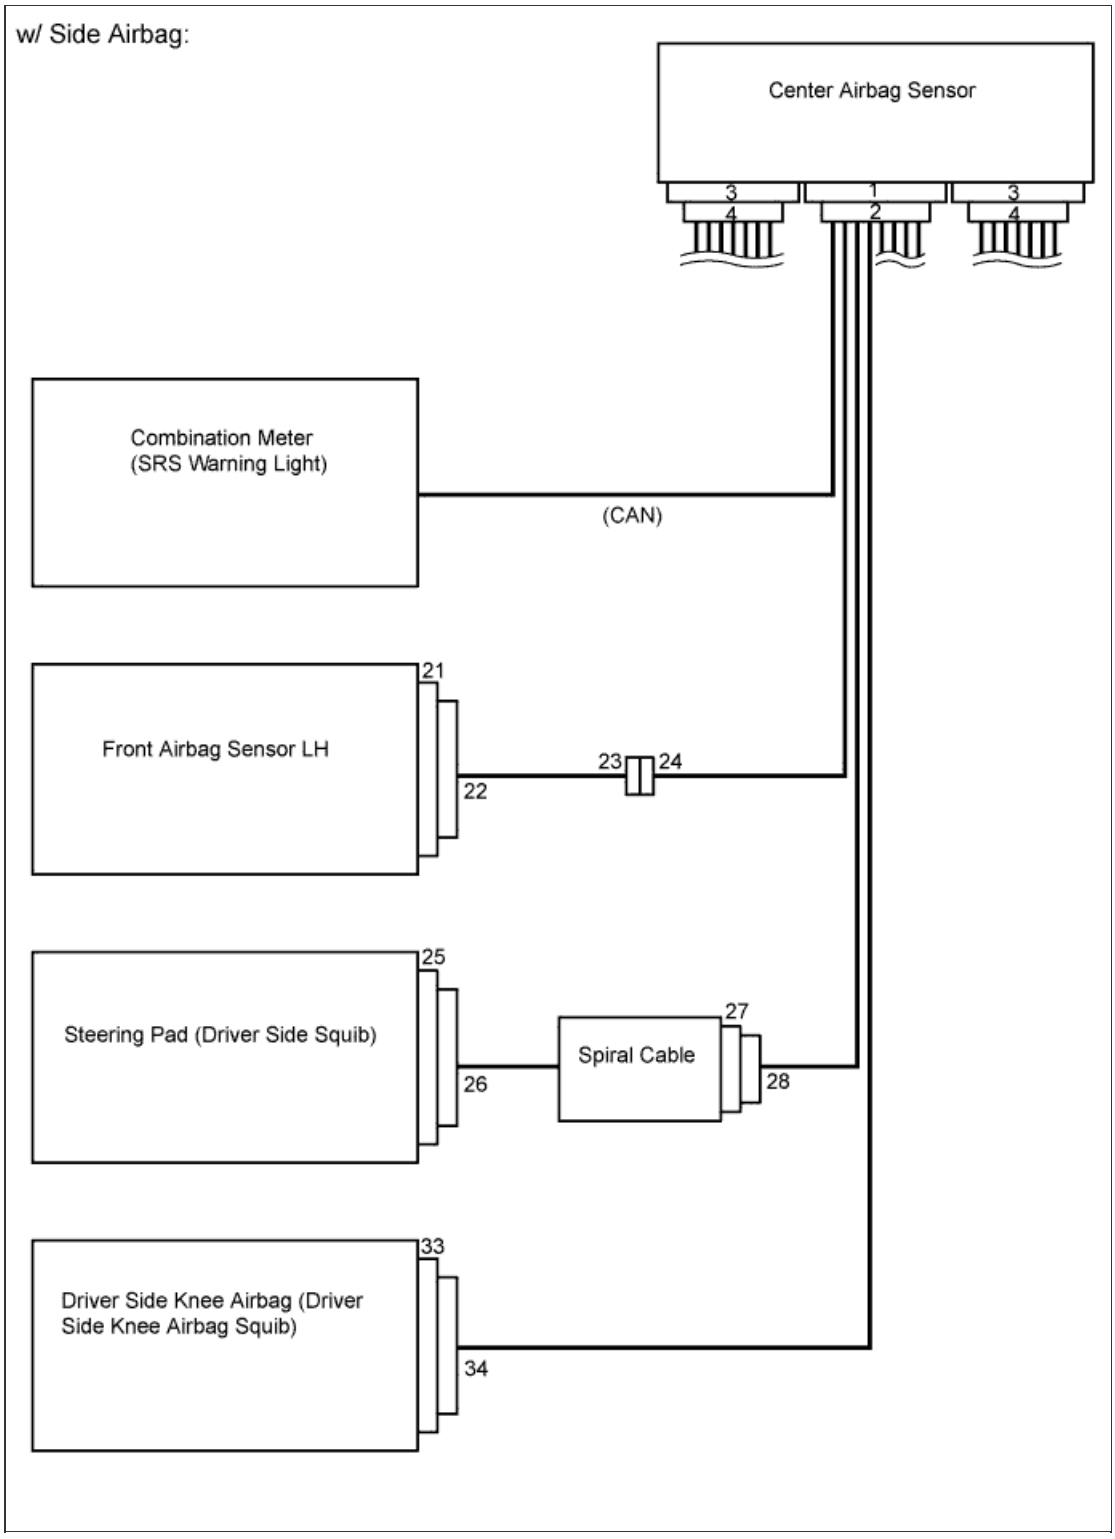


w/ Side Airbag:

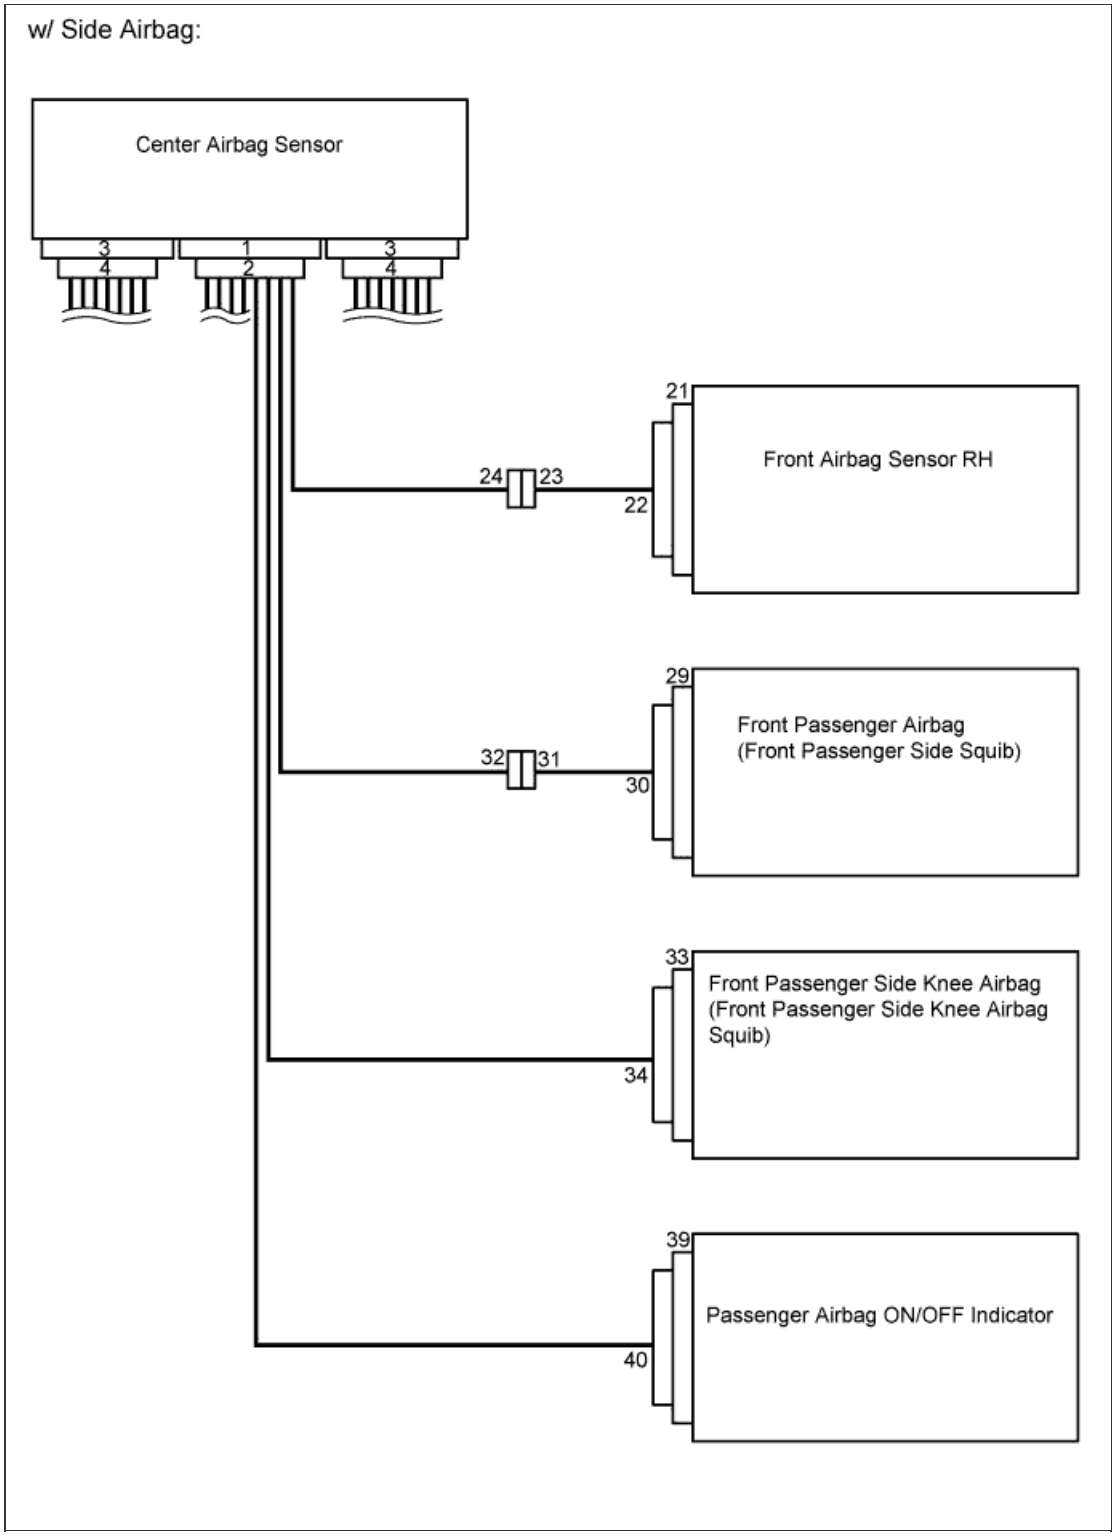


w/ Side Airbag:

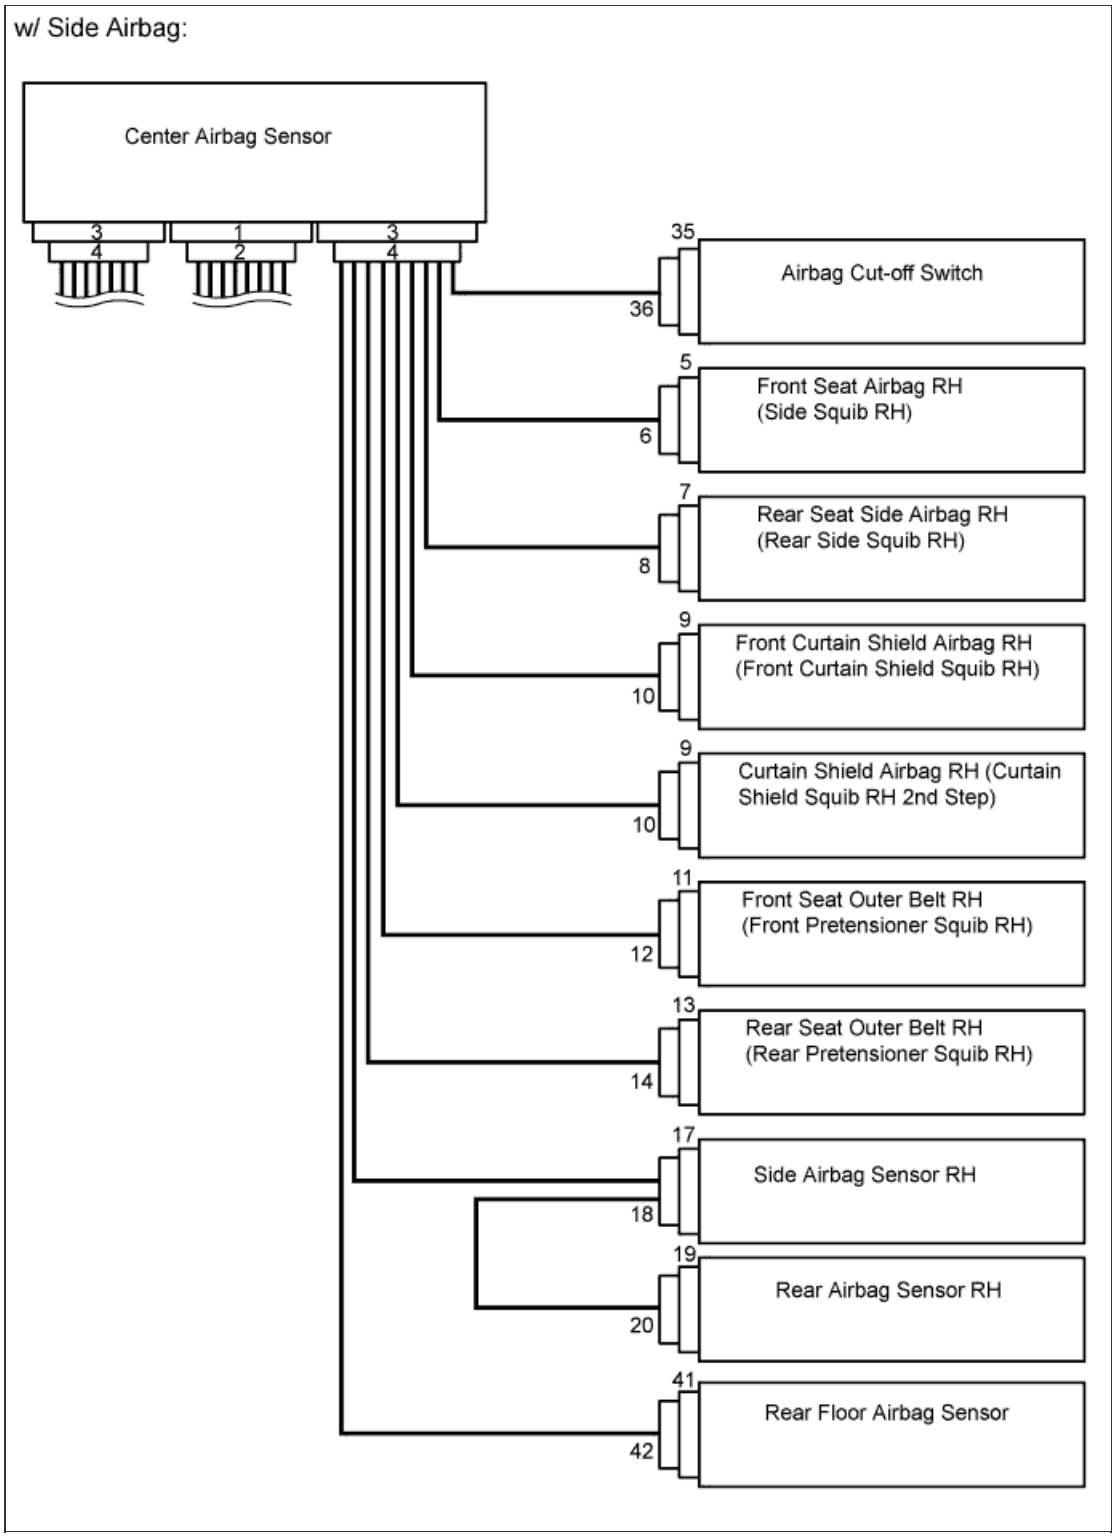

for LHD (w/o Side Airbag):

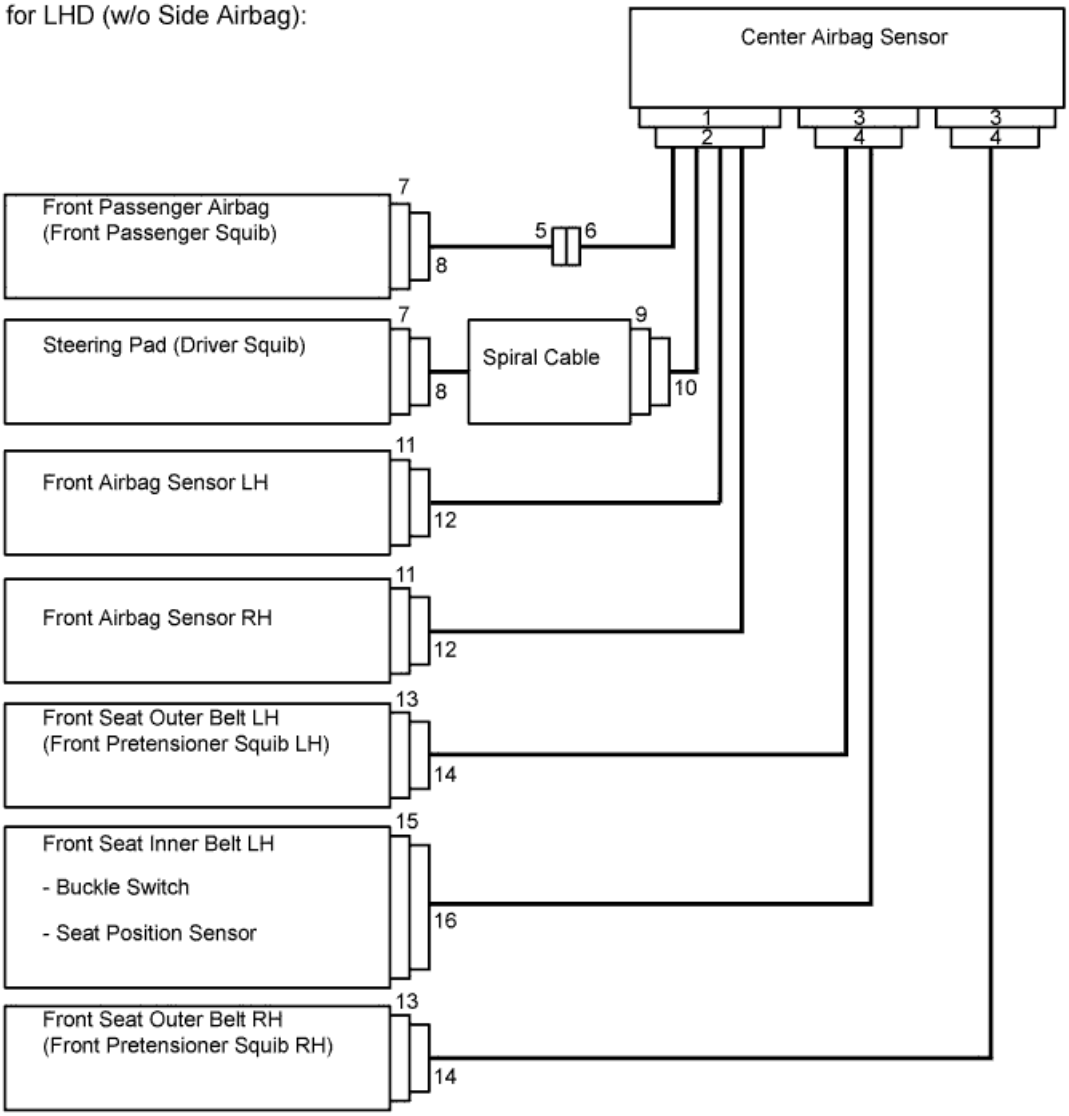



for RHD (w/o Side Airbag):

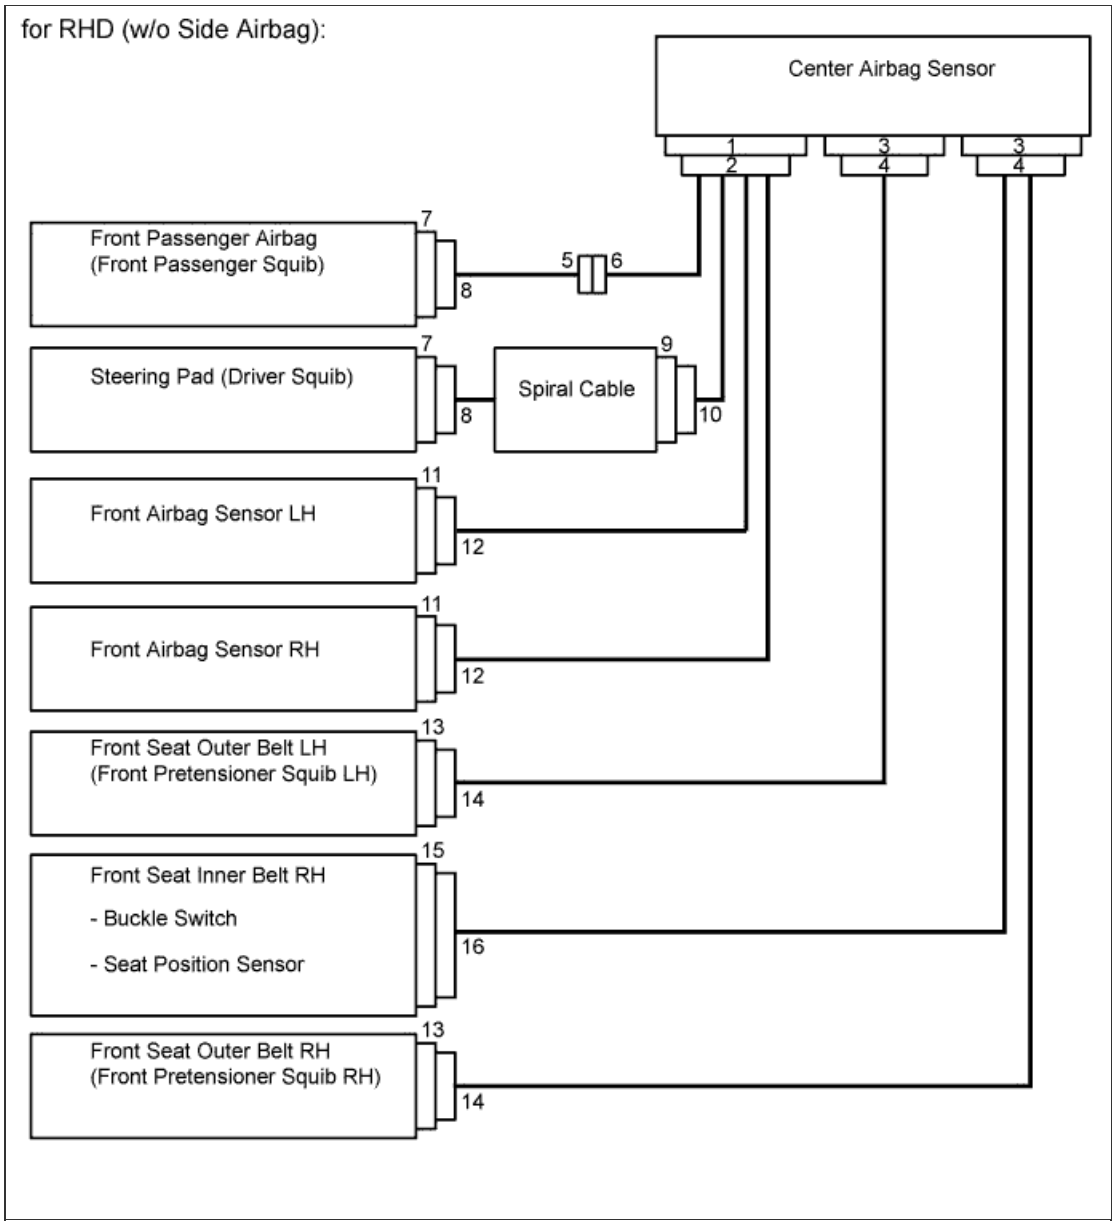


w/ Side Airbag:

Center Airbag Sensor Connector

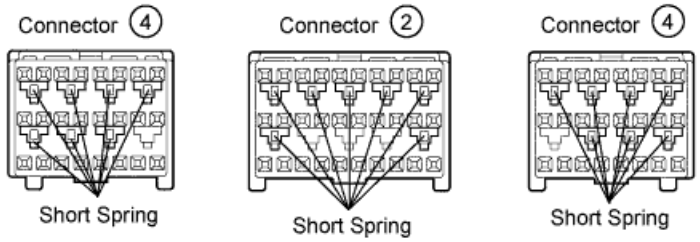


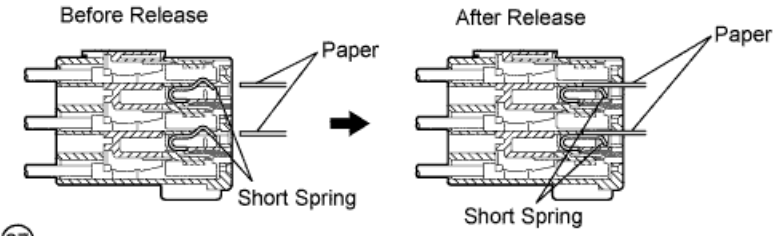


Connector 27

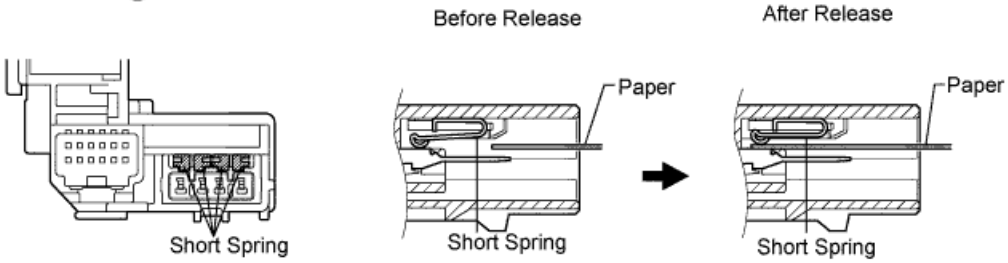

Connector 31

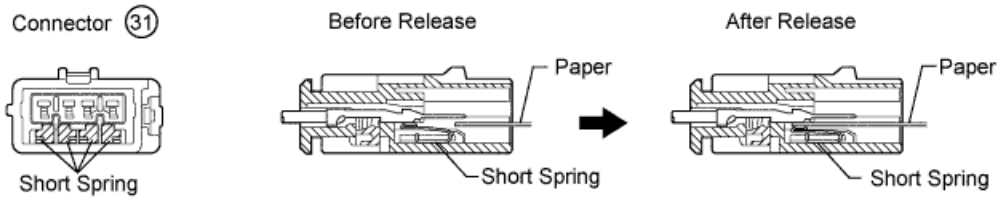



Connector 5 7 41

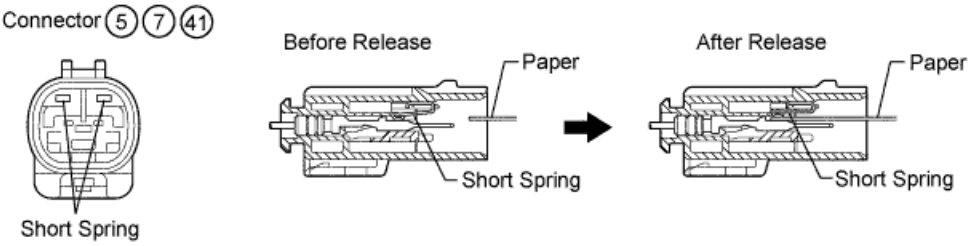


w/o Side Airbag:

Airbag Sensor Assembly Connector

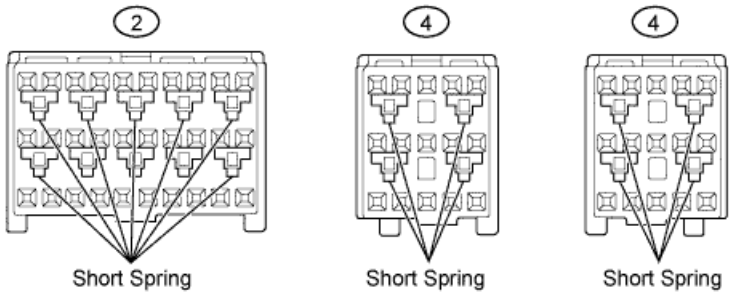


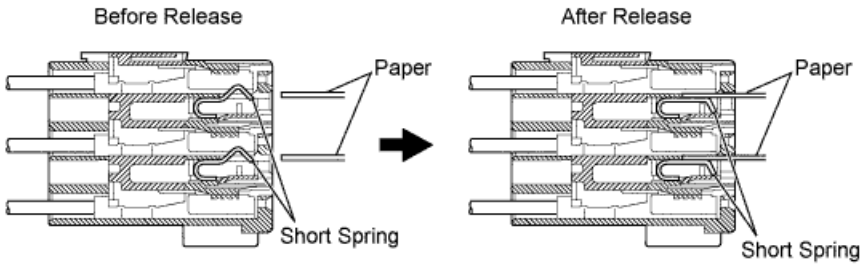

Connector (9)

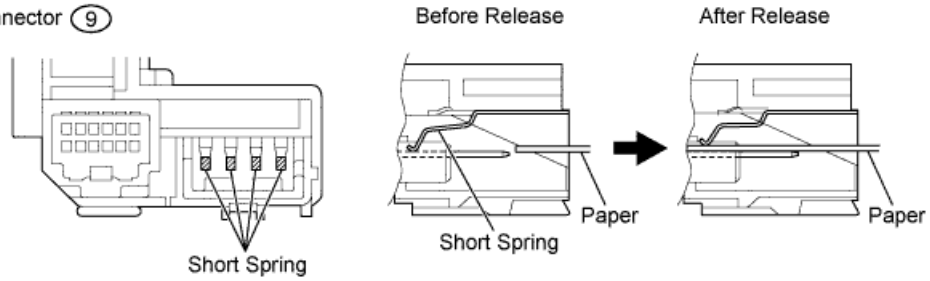

Connector (5)

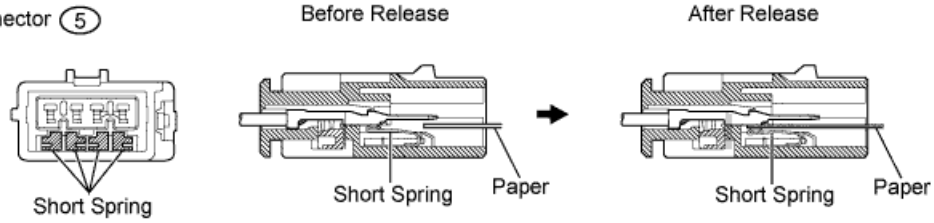


for Preparation Click here

SYMPTOM SIMULATION

HINT:

The most difficult case in troubleshooting is when no problem symptoms occur. n such a case, a thorough problem analysis must be carried out. A simulation of the same or similar conditions and environment in which the problem occurred in the customer s vehicle should be carried out. No matter how much skill or e perience a technician has, troubleshooting without confirming the problem symptoms will lead to important repairs being overlooked and mistakes or delays.

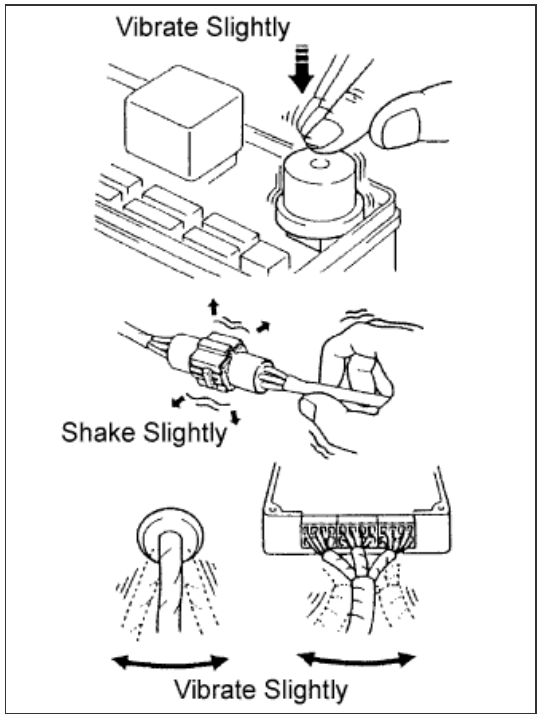

a. ibration method hen vibration seems to be the ma or cause.

HINT:

Perform the simulation method only during the primary check period (for appro imately 6 seconds after the engine switch is turned on (

i. lightly vibrate the part of the sensor considered to be the cause of the problem with your fingers and check whether the malfunction occurs.

NOTICE:

haking the relays too strongly may result in open relays.

ii. lightly shake the connector vertically and horizontally.

iii. lightly shake the wire harness vertically and horizontally.

HINT:

The connector oint and fulcrum of the vibration are the ma or areas to be checked thoroughly.

FUNCTION OF SRS WARNING LIGHT

a. Primary check.

i. Turn the engine switch off. ait for at least 2 seconds, then turn the engine switch on (The warning light comes on for appro imately 6 seconds and the diagnosis of the airbag system (including the seat belt pretensioners) is performed.

HINT:

f trouble is detected during the primary check, the warning light remains on even after the primary check period (of appro imately 6 seconds) has elapsed.

b. onstant check.

i. After the primary check, the center airbag sensor constantly monitors the airbag system for trouble.

HINT:

f trouble is detected during the constant check, the center airbag sensor functions as follows

- **The SRS warning light comes on.**
- **The SRS warning light goes off, and then comes on. This blinking pattern indicates a source voltage drop. The SRS warning light goes off 10 seconds after the source voltage returns to normal.**

c. eview.

i. hen the airbag system is normal
The warning light comes on only during the primary check period (for appro imately 6 seconds after the engine switch is turned on (

ii. hen the airbag system has trouble

- The warning light remains on even after the primary check period has elapsed.
- The warning light goes off after the primary check, but comes on again during the constant check.

- The warning light does not come on when turning the engine switch from off to on (


HINT:

The center airbag sensor functions to keep the warning light on if the airbag has been deployed.

CHECK SRS WARNING LIGHT

a. Turn the engine switch on (and check that the warning light comes on for appro imately 6 seconds (primary check).

b. heck that the warning light goes off appro imately 6 seconds after the engine switch is turned on ((constant check).

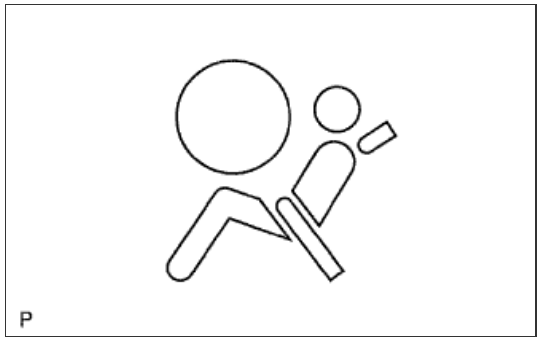

HINT:

hen any of the following symptoms occur, refer to the "Problem ymptoms Table" (lick here).

- **The SRS warning light comes on occasionally, after the primary check period has elapsed.**
- **The SRS warning light comes on, but a DTC is not output.**
- **The engine switch is turned from off to on (IG), but the SRS warning light does not come on.**

FUNCTION OF PASSENGER AIRBAG ON/OFF INDICATOR

a. nitial check

i. Turn the engine switch on (


ii. The passenger airbag ON/OFF indicator comes on for appro imately 4 seconds, then goes off for appro imately 2 seconds.

iii. Appro imately 6 seconds after the engine switch is turned on (the passenger airbag ON/OFF indicator will be ON or OFF depending on the conditions listed below.

ondition	"ON" indicator	"OFF" indicator
acant	Off	Off
Adult is seated	On	Off
hild is seated	Off	On
hild restraint system is set	Off	On
Front passenger occupant classification failure	Off	On

HINT:

- **The timing chart below shows the operation of the passenger airbag ON/OFF indicator. Use the chart to check the indicator light circuit.**
- **When the occupant classification system has trouble, both the SRS warning light and the passenger airbag ON/OFF indicator ("OFF") come on. In this case, check the DTCs for "Airbag System" first. Then troubleshoot the occupant classification system if DTC B1650/32 is output, and troubleshoot the passenger airbag ON/OFF indicator if DTC B1660/43 is output.**

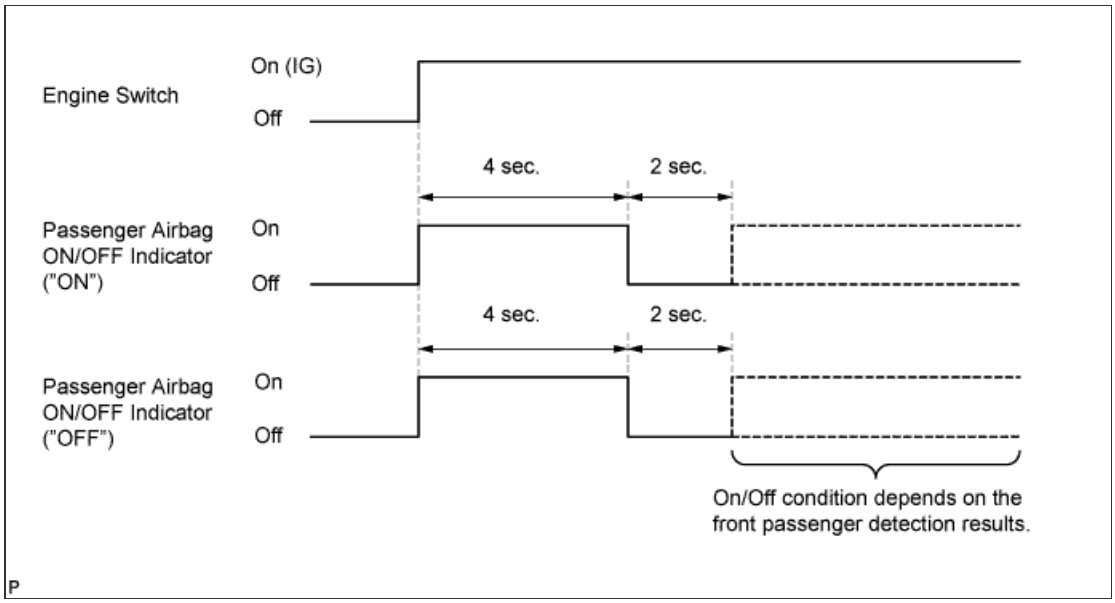

CHECK PASSENGER AIRBAG ON/OFF INDICATOR

a. Turn the engine switch on (

b. heck that the passenger airbag ON/OFF indicator ("ON" and "OFF") comes on for appro imately 4 seconds, then goes off for appro imately 2 seconds.

HINT:

Refer to the table in the previous step regarding the passenger airbag ON/OFF indicator when the engine switch is turned on (and appro imately 6 seconds have passed.



ACTIVATION PREVENTION MECHANISM

a. F N T OF A T T PR T AN

i. n activation prevention mechanism is built into the connector (on the center airbag sensor side) of the airbag system s uib circuit to prevent accidental airbag activation.

ii. This mechanism closes the circuit when the connector is disconnected by bringing the short spring into contact with the terminals and shutting off e ternal electricity to prevent accidental airbag activation.

b. R A OF A T T PR T AN

i. To release the activation prevention mechanism, insert a piece of paper with the same thickness as the male terminal (appro imately 0. mm (0. 20 in.)) between the terminals and the short spring to break the connection.

ii. Refer to the following illustrations concerning connectors utilizing the activation prevention mechanism and its release method.


CAUTION:

Never release the activation prevention mechanism on the s uib connector even when inspecting with the s uib disconnected.


NOTICE:

- **Do not release the activation prevention mechanism unless specially directed by the troubleshooting procedure.**
- **To prevent the terminal and the short spring from being damaged, always use a piece of paper with the same thickness as the male terminal.**


w/ Side Airbag:

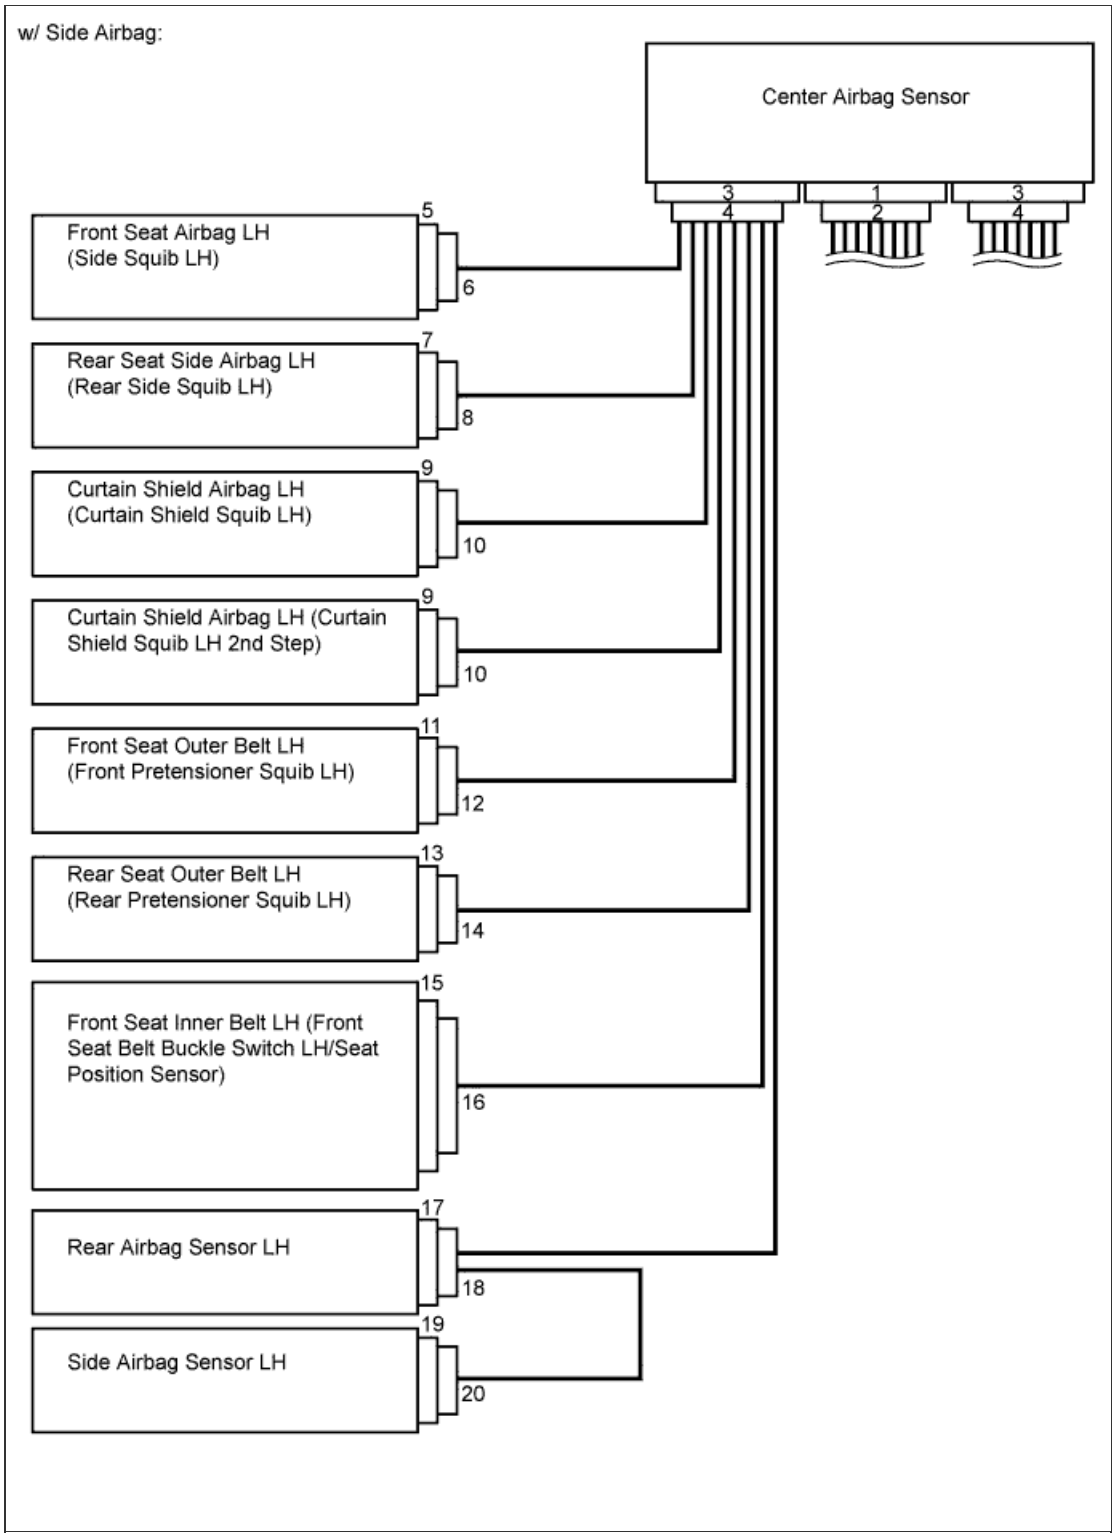


w/ Side Airbag:

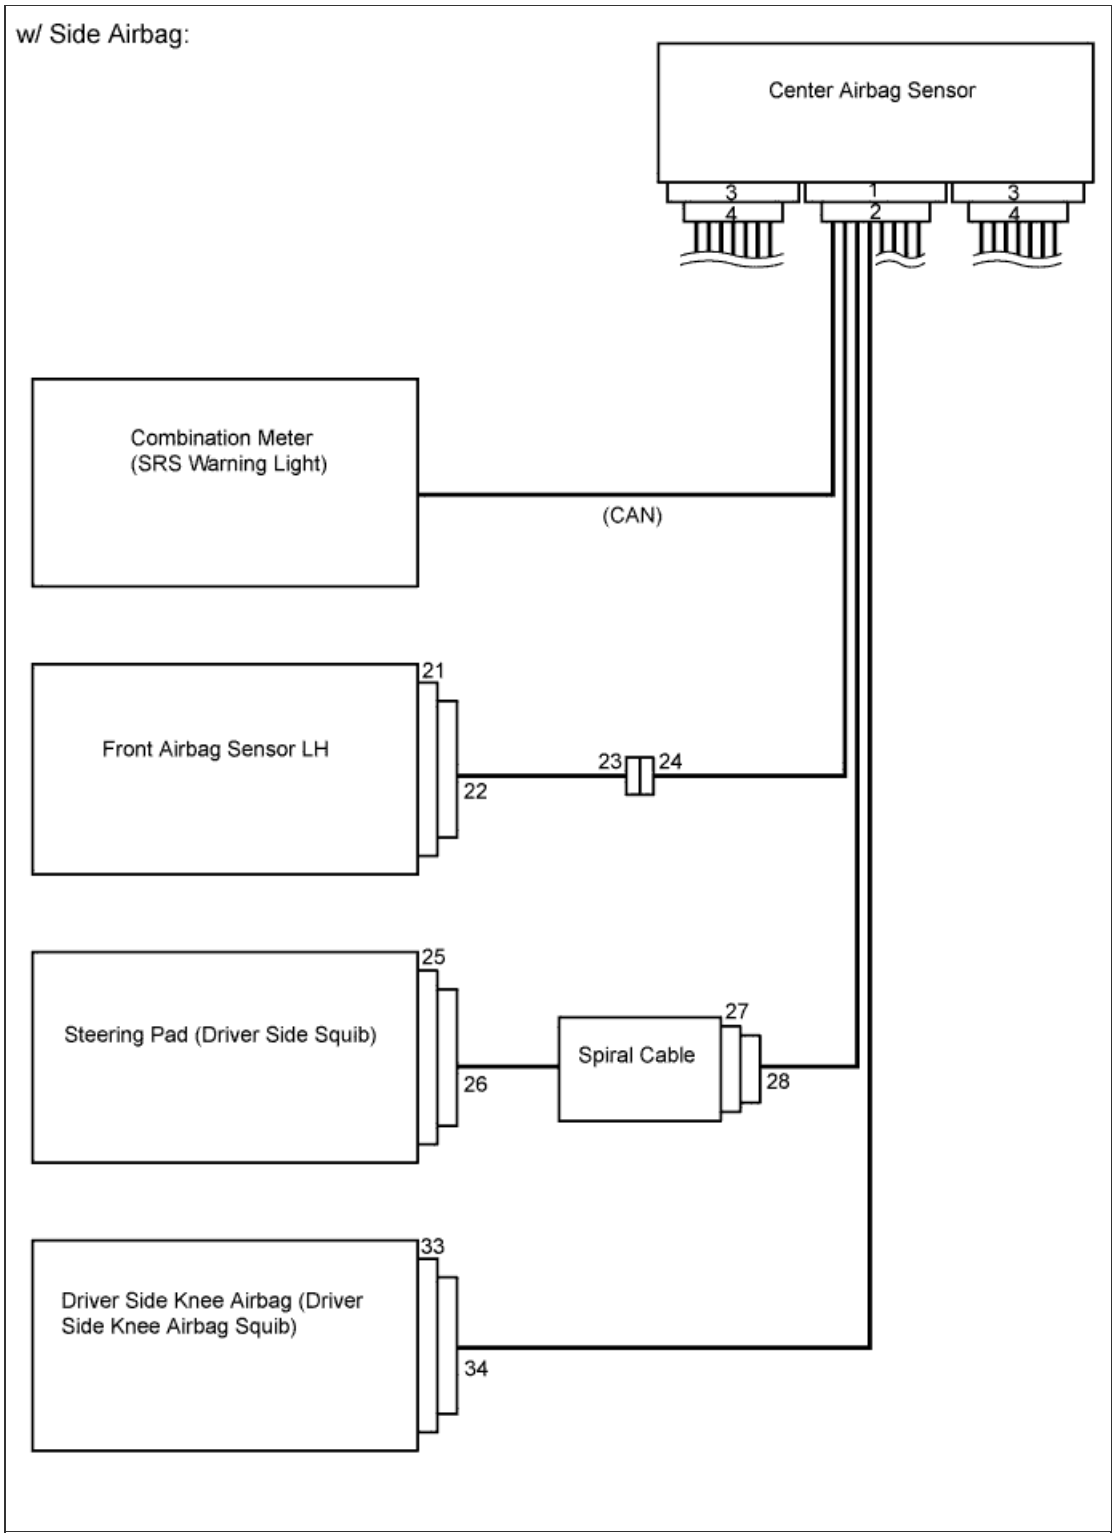


w/ Side Airbag:

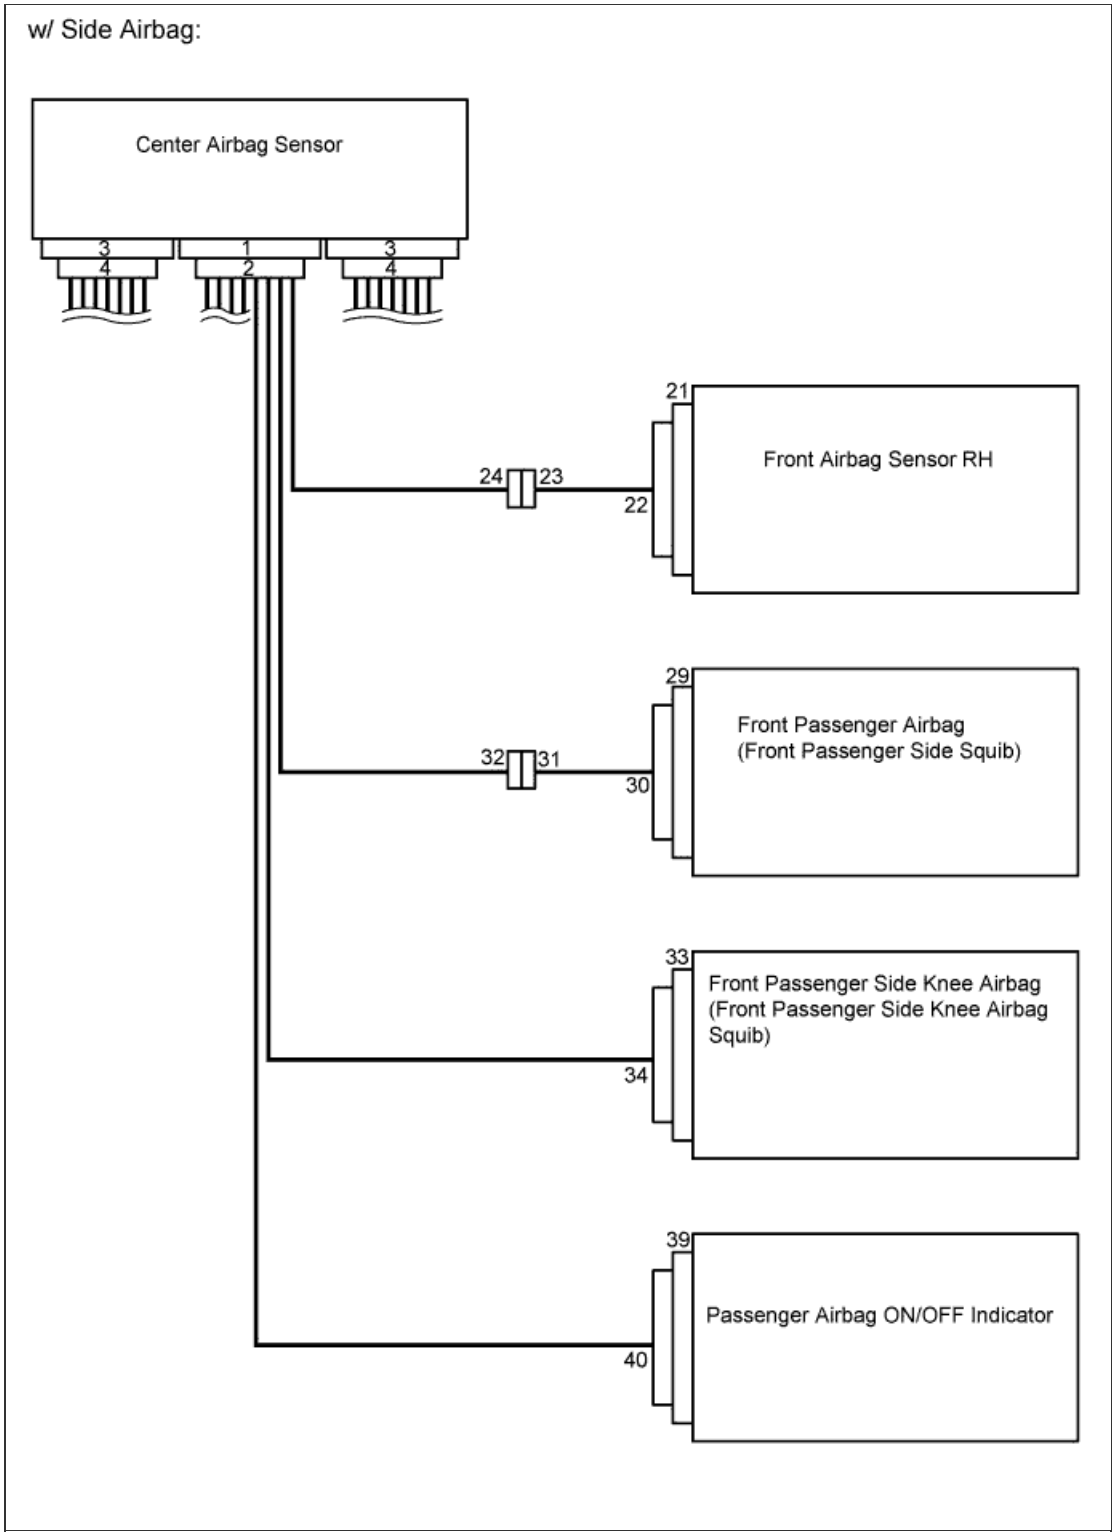


w/ Side Airbag:

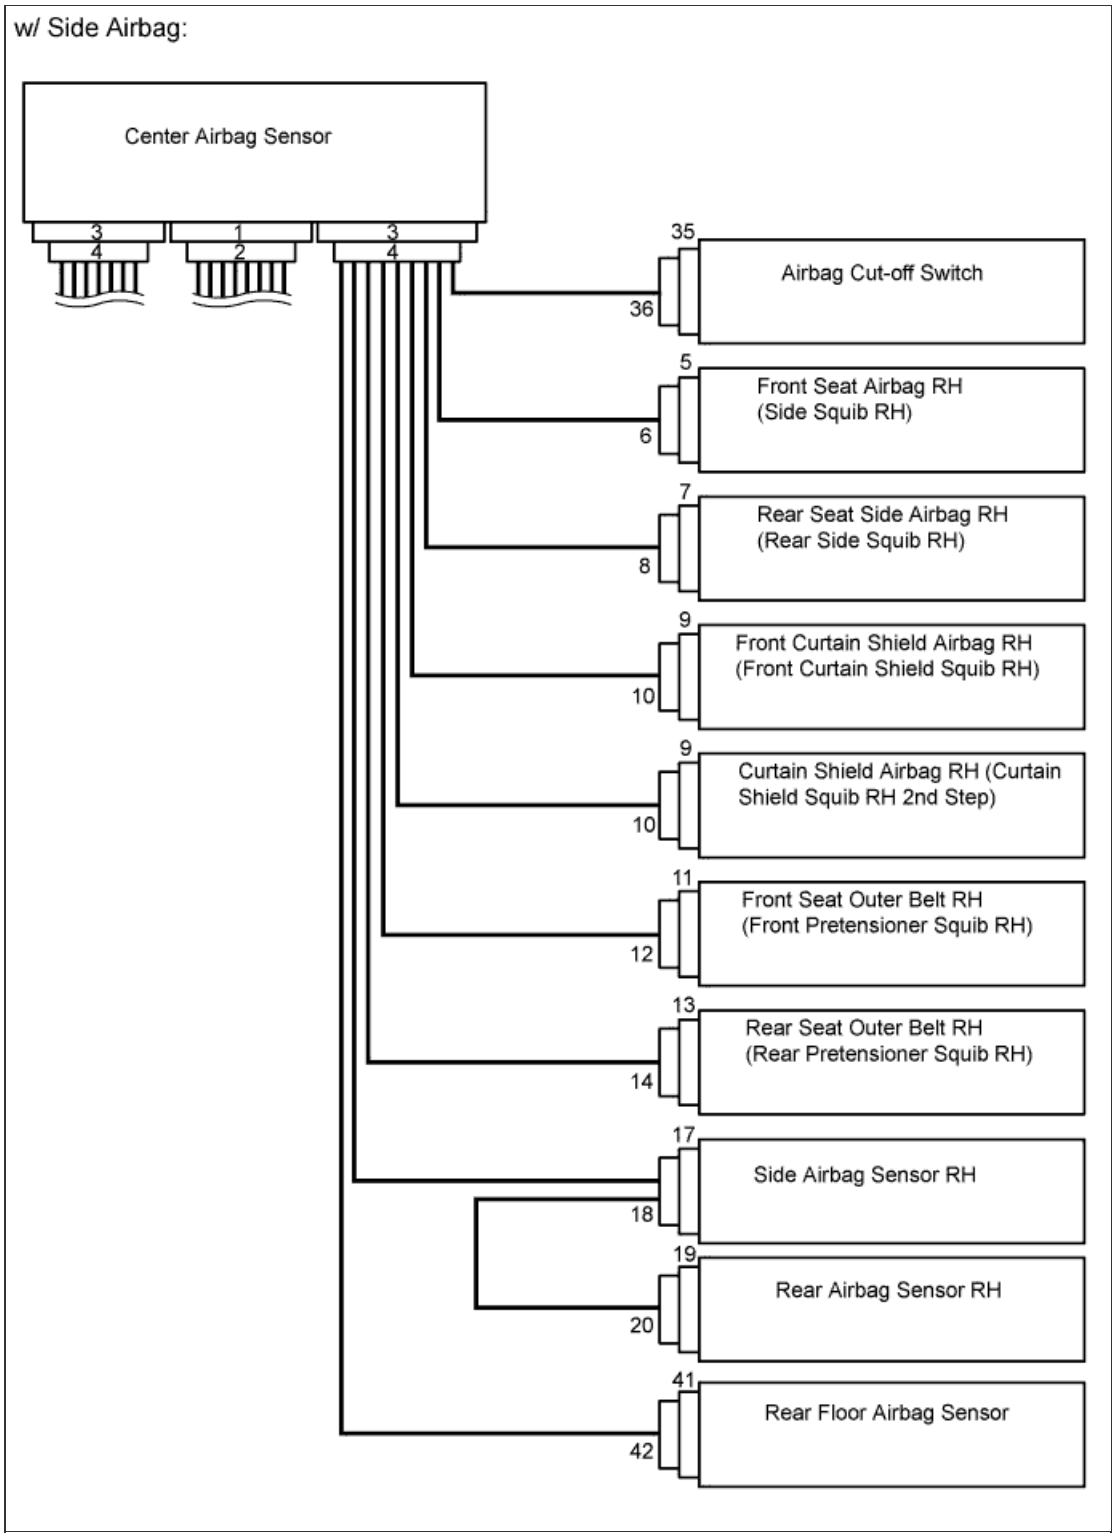

for LHD (w/o Side Airbag):

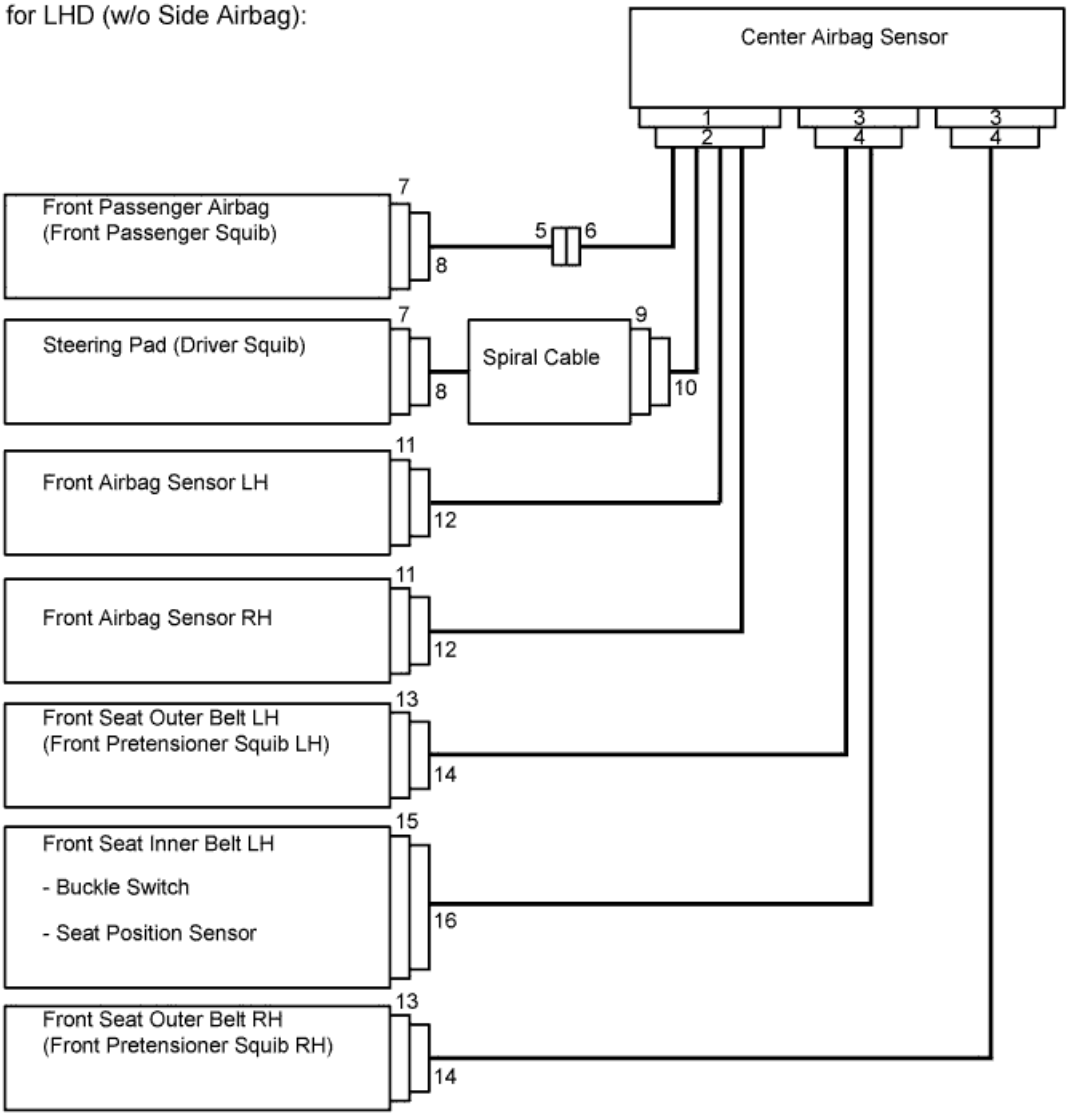



for RHD (w/o Side Airbag):

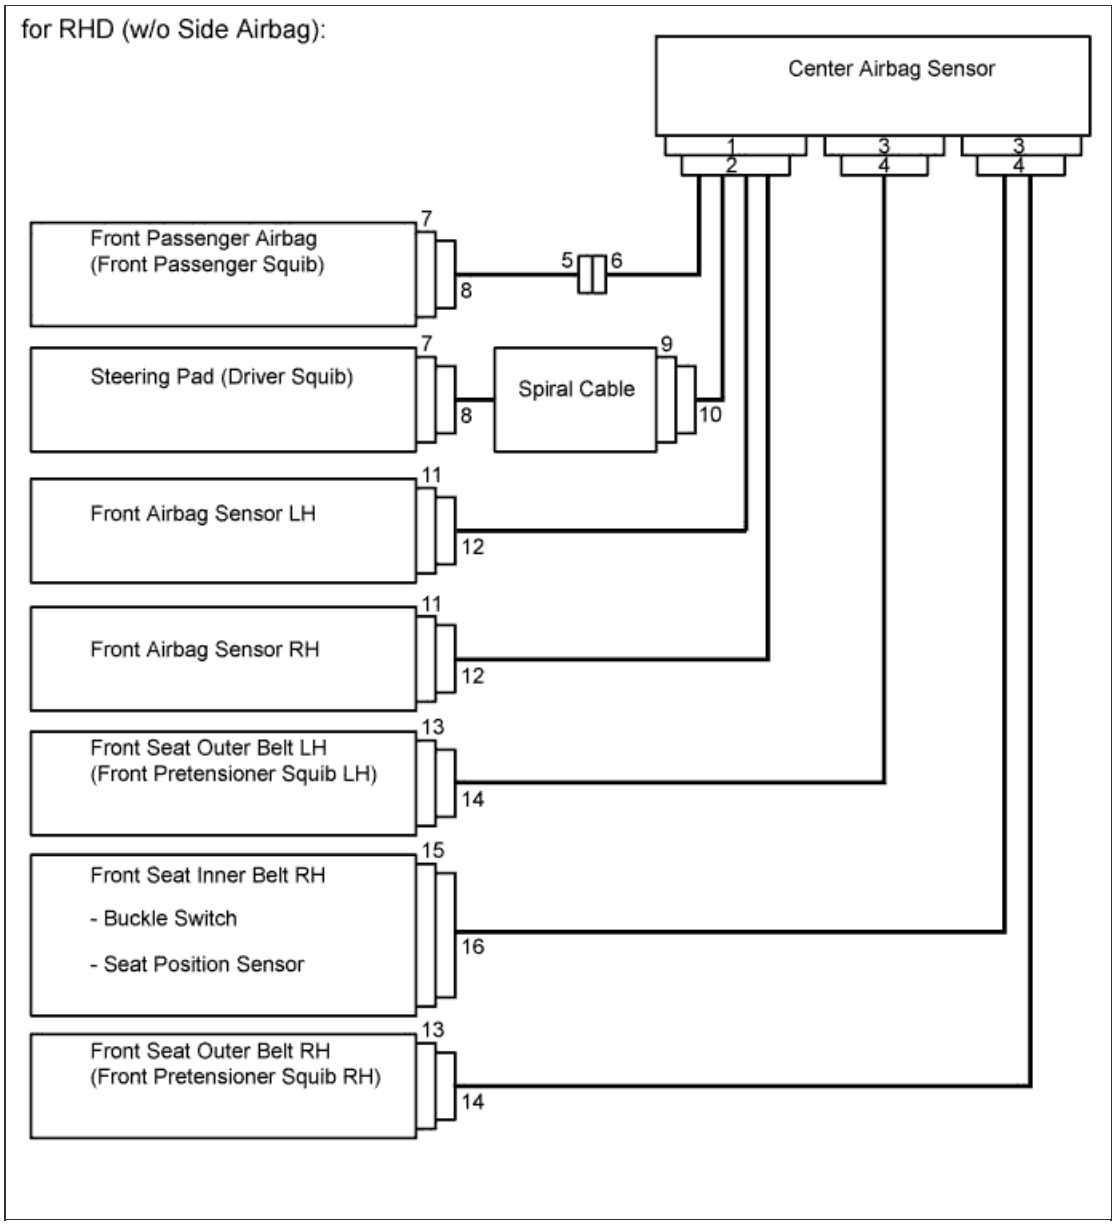


w/ Side Airbag:

Center Airbag Sensor Connector

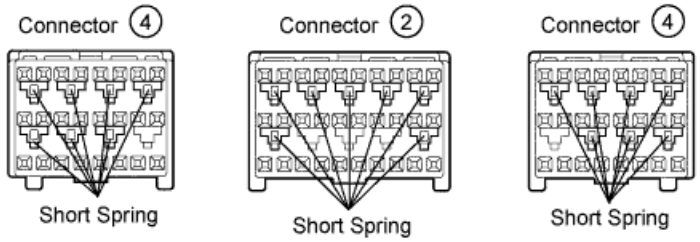


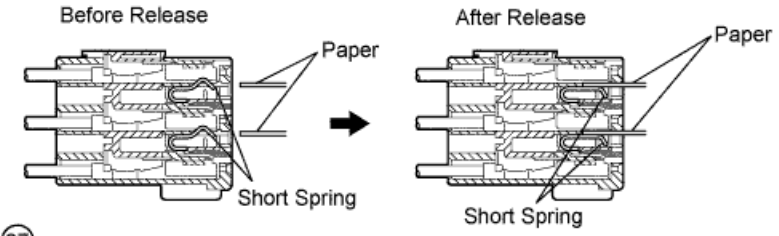


Connector 27

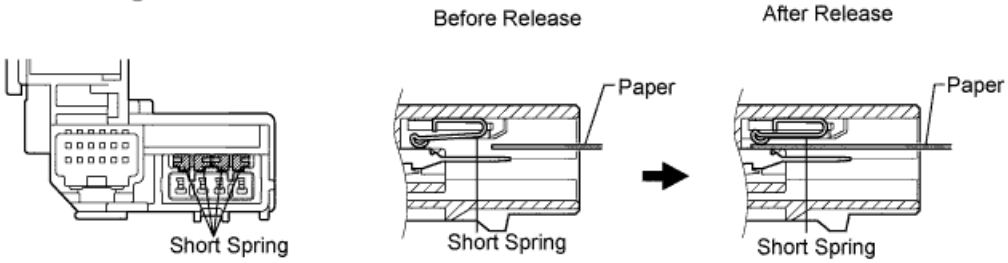

Connector 31

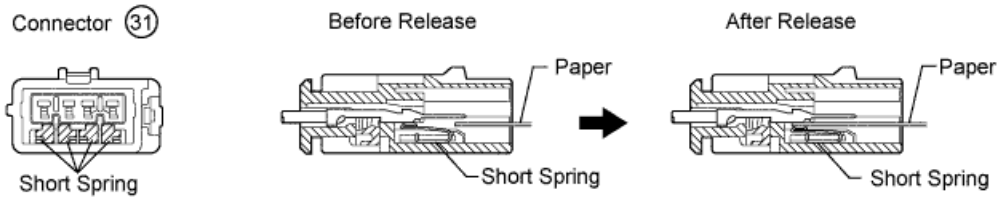



Connector 5 7 41

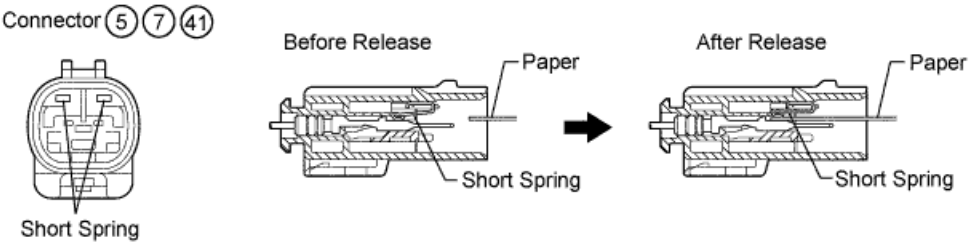


w/o Side Airbag:

Airbag Sensor Assembly Connector

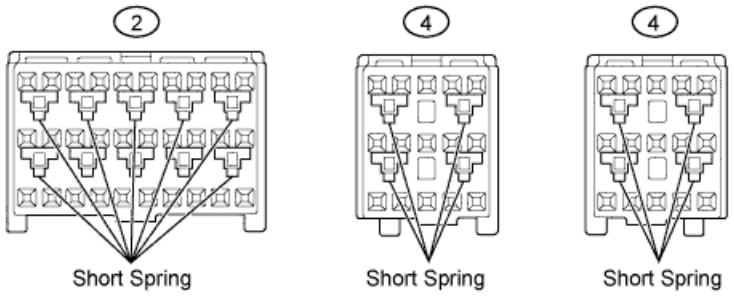


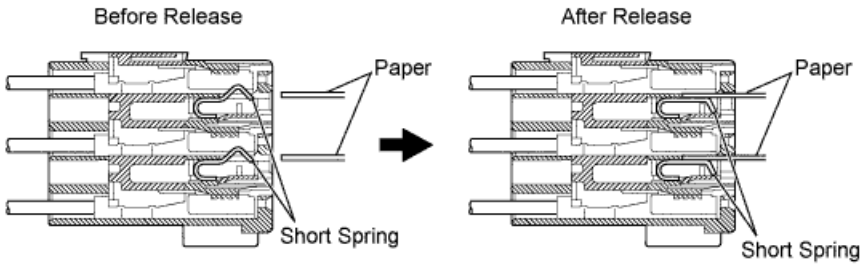

Connector (9)

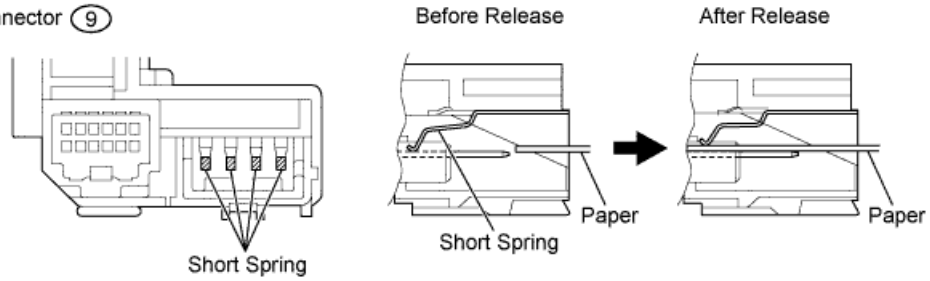


Connector (5)

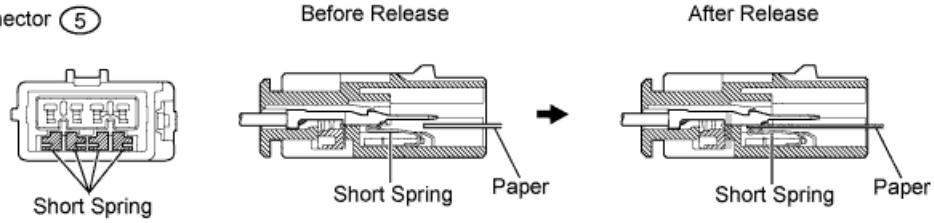

for Preparation Click here

CHECK DTC (Using SST Check Wire)

a. Check the DTCs (Present trouble code).

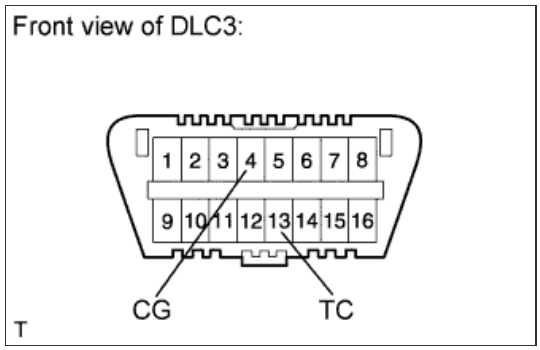

i. Turn the engine switch on (IG), and wait for approximately 60 seconds.

ii. Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3.

SST
09843-18040

NOTICE:

Connect the correct terminals to avoid a malfunction.

b. Check the DTCs (Past trouble code).

i. Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3.

SST
09843-18040

NOTICE:

Connect the correct terminals to avoid a malfunction.

ii. Turn the engine switch on (IG), and wait for approximately 60 seconds.

c. Read the DTCs.

i. Read the blinking patterns of the DTCs. As examples, the blinking patterns for the normal system code and trouble codes 11 and 31 are shown in the illustration.

- Normal system code indication (without past trouble code):
  The light blinks twice per second.
- Normal system code indication (with past trouble code):
  When a past trouble code is stored in the center airbag sensor, the light blinks only once per second.
- Trouble code indication:
  Each digit of a DTC is separated by a 1.5 second pause.

If there is more than 1 code, there will be a 2.5 second pause between each code. After all codes are shown, there will be a 4.0 second pause, and then all codes will be repeated.


HINT:

- **If 2 or more malfunctions are found, the indication begins with the smaller-numbered code.**
- **If DTCs are output without connecting the terminals, proceed to "Diagnosis Circuit" (Click here).**


Normal System Code (without Past Trouble Code):



Normal System Code (with Past Trouble Code):

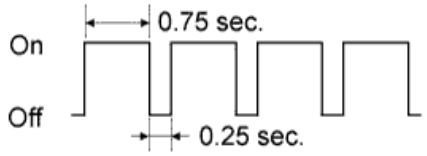

Trouble Code (Example Codes 11 and 31):

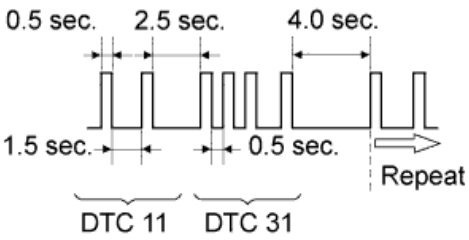

CLEAR DTC (Using SST Check Wire)

a. hen the engine switch is turned off, the DTCs are cleared.

HINT:

Depending on the DTC, the code may not be cleared by turning off the engine switch. In this case, proceed to the next procedure.

b. Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3, and then turn the engine switch on (IG).

SST
09843-18040


c. Disconnect terminal TC of the DLC3 within 3 to 10 seconds after the DTCs are output, and check if the SRS warning light comes on after 3 seconds.

d. Within 2 to 4 seconds after the SRS warning light comes on, connect terminals 13 (TC) and 4 (CG) of the DLC3.

e. The SRS warning light should go off within 2 to 4 seconds after connecting terminals 13 (TC) and 4 (CG) of the DLC3. Then, disconnect terminal 13 (TC) within 2 to 4 seconds after the SRS warning light goes off.

f. The SRS warning light comes on again within 2 to 4 seconds after disconnecting terminal 13 (TC). Then, reconnect terminals 13 (TC) and 4 (CG) within 2 to 4 seconds after the SRS warning light comes on.

g. Check if the SRS warning light goes off within 2 to 4 seconds after connecting terminals 13 (TC) and 4 (CG) of the DLC3. Also check if the normal system code is output within 1 second after the SRS warning light goes off.
If DTCs are not cleared, repeat this procedure until the codes are cleared.

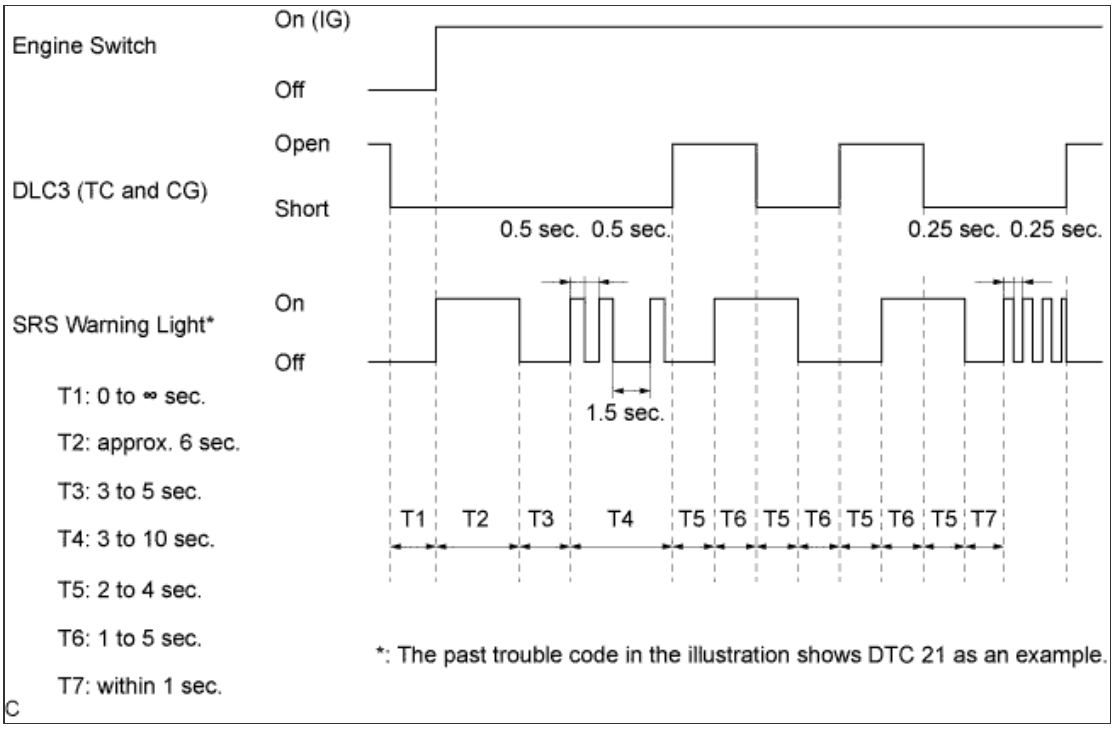

CHECK DTC (Using the Intelligent Tester)

a. Connect the intelligent tester to the D C3.

b. Turn the engine switch on (IG).

c. Check the DTCs by following the prompts on the tester screen.

HINT:

Refer to the intelligent tester operator's manual for further details.

CLEAR DTC (Using the Intelligent Tester)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Clear the DTCs by following the prompts on the tester screen.


HINT:

Refer to the intelligent tester operator's manual for further details.

for Preparation Click here

CHECK DTC (Using SST Check Wire)

a. Check the DTCs (Present trouble code).

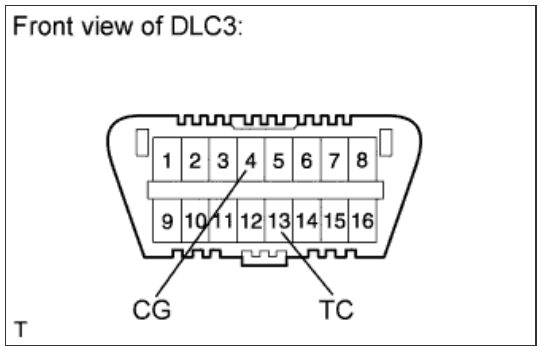

i. Turn the engine switch on (IG), and wait for approximately 60 seconds.

ii. Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3.

SST
09843-18040

NOTICE:

Connect the correct terminals to avoid a malfunction.

b. Check the DTCs (Past trouble code).

i. Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3.

SST
09843-18040

NOTICE:

Connect the correct terminals to avoid a malfunction.

ii. Turn the engine switch on (IG), and wait for approximately 60 seconds.

c. Read the DTCs.

i. Read the blinking patterns of the DTCs. As examples, the blinking patterns for the normal system code and trouble codes 11 and 31 are shown in the illustration.

- Normal system code indication (without past trouble code):
  The light blinks twice per second.
- Normal system code indication (with past trouble code):
  When a past trouble code is stored in the center airbag sensor, the light blinks only once per second.
- Trouble code indication:
  Each digit of a DTC is separated by a 1.5 second pause.

If there is more than 1 code, there will be a 2.5 second pause between each code. After all codes are shown, there will be a 4.0 second pause, and then all codes will be repeated.


HINT:

- **If 2 or more malfunctions are found, the indication begins with the smaller-numbered code.**
- **If DTCs are output without connecting the terminals, proceed to "Diagnosis Circuit" (Click here).**


Normal System Code (without Past Trouble Code):



Normal System Code (with Past Trouble Code):

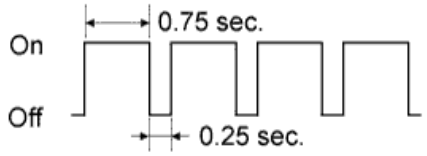

Trouble Code (Example Codes 11 and 31):

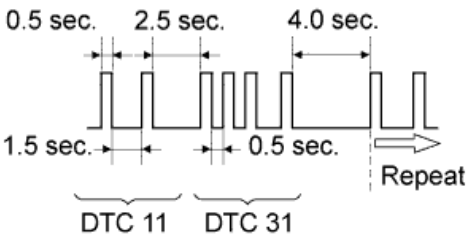

CLEAR DTC (Using SST Check Wire)

a. hen the engine switch is turned off, the DTCs are cleared.

HINT:

Depending on the DTC, the code may not be cleared by turning off the engine switch. In this case, proceed to the next procedure.

b. Using SST, connect terminals 13 (TC) and 4 (CG) of the DLC3, and then turn the engine switch on (IG).

SST
09843-18040


c. Disconnect terminal TC of the DLC3 within 3 to 10 seconds after the DTCs are output, and check if the SRS warning light comes on after 3 seconds.

d. Within 2 to 4 seconds after the SRS warning light comes on, connect terminals 13 (TC) and 4 (CG) of the DLC3.

e. The SRS warning light should go off within 2 to 4 seconds after connecting terminals 13 (TC) and 4 (CG) of the DLC3. Then, disconnect terminal 13 (TC) within 2 to 4 seconds after the SRS warning light goes off.

f. The SRS warning light comes on again within 2 to 4 seconds after disconnecting terminal 13 (TC). Then, reconnect terminals 13 (TC) and 4 (CG) within 2 to 4 seconds after the SRS warning light comes on.

g. Check if the SRS warning light goes off within 2 to 4 seconds after connecting terminals 13 (TC) and 4 (CG) of the DLC3. Also check if the normal system code is output within 1 second after the SRS warning light goes off.
If DTCs are not cleared, repeat this procedure until the codes are cleared.

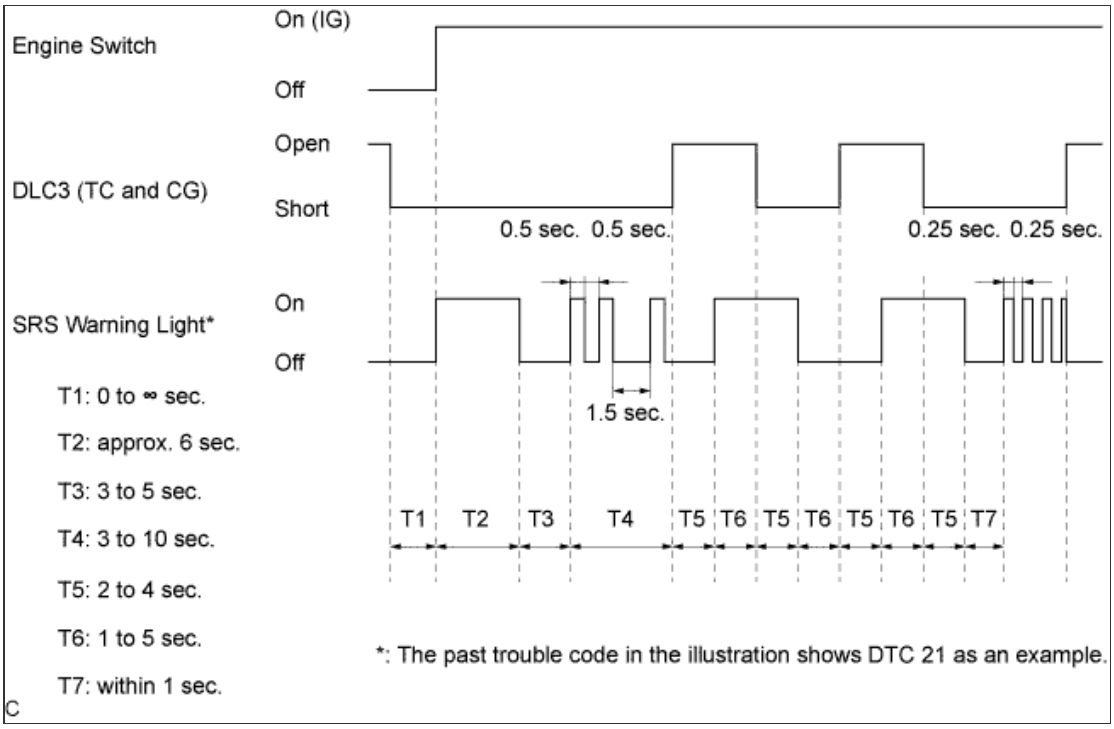

CHECK DTC (Using the Intelligent Tester)

a. Connect the intelligent tester to the D C3.

b. Turn the engine switch on (IG).

c. Check the DTCs by following the prompts on the tester screen.

HINT:

Refer to the intelligent tester operator's manual for further details.

CLEAR DTC (Using the Intelligent Tester)

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Clear the DTCs by following the prompts on the tester screen.

HINT:

Refer to the intelligent tester operator's manual for further details.

for Preparation Click here

NOTICE:

Enter "Signal Check" from the "DTC CHECK" screen displayed on the intelligent tester to clear the output DTCs (both present and past).

HINT:

- **DTCs can be stored more sensitively in check mode than in normal diagnosis mode.**
- **Perform the check mode inspection when a malfunction in each squib circuit is suspected even after the normal system code is output through normal diagnosis mode inspection.**

CHECK MODE PROCEDURE (for Using an Intelligent Tester)

a. Turn the engine switch off.

b. Connect the intelligent tester to the DLC3.

c. Turn the engine switch on (IG).

d. Turn the intelligent tester on.

e. Enter the following menus: Body / SRS Airbag / Utility / Signal Check / *.

HINT:

*: Follow the directions on the tester screen.

for Preparation Click here

READ DATA LIST

HINT:

Using the intelligent tester to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Warm up the engine.

b. Turn the engine switch off.

c. Connect the intelligent tester to the DLC3.

d. Turn the engine switch on (IG).

e. Turn the intelligent tester on.

f. Enter the following menus: Body / SRS Airbag / Data List.

g. According to the display on tester, read the Data List.

Center Airbag Sensor

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Driver Seat Position	Driver Seat Position/ FORWARD: Seat position is forward BKWARD: Seat position is backward FAIL: Failure detected	FORWARD/BKWARD	-
Passenger Detection	Passenger Detection/ NG: Data is not determined OFF: Vacant NONE: No passenger DETECT: A passenger is seated FAIL: Failure detected	NONE/DETECT	-
Right Side Buckle SW	Right Side Buckle SW/ UNSET: The seat belt is not fastened SET: The seat belt is fastened NG: Data is not determined	UNSET/SET	-
Left Side Buckle SW	Left Side Buckle SW/ UNSET: The seat belt is not fastened SET: The seat belt is fastened NG: Data is not determined	UNSET/SET	-
Display Type Information	Display Type Information/ LR: The display is indicated by LH/RH DP: The display is indicated by Driver/Passenger	LR	-
Number of Past DTC	Number of Past DTCs/ Min.: 0, Max.:		-

for Preparation Click here

- If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.
- When the SRS warning light remains on and the DTC output is the normal system code, a voltage source drop is likely to occur. This malfunction is not stored in the memory by the center airbag sensor.
- If the power source voltage returns to normal, the SRS warning light will automatically go off. When 2 or more codes are output, the code with the lower number is output first.
- When 2 or more codes are output, the code with the lower number is output first.
- If a code not listed in the chart is output, the center airbag sensor may have a malfunction.
- If a DTC is output indicating a short to ground, short to B+ or open in an airbag squib circuit area, other DTCs may not be output. First replace or repair the malfunctioning area indicated by the current DTC, and then check for DTCs again to output the other DTCs.
- ark in the check mode column:
  * DTC is not output in check mode.
  *2: DTC is output in check mode.
  *3: DTC is only for rear side airbag equipped vehicles.
- *4: w/ Side Airbag
  *5: w/ Rear Side Airbag
  *6: w/ Rear No. 2 Seat
  * except w/o Side Airbag
  *8: w/ Knee Airbag

Airbag System

DTC Code	Detection Item	Trouble Area	Check ode	See page
B	enter AC bag Sensor Assembly unction	Center airbag sensor assembly	*	Click here
B	Front Satellite Sensor Bus RH Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor RH Center airbag sensor assembly	*	Click here
B	Front Satellite Sensor Bus Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor RH unction	Front airbag sensor RH Center airbag sensor assembly	*	Click here
B 2/83	ost Communication with Front Airbag Sensor RH	Instrument panel wire ngine room main wire Front airbag sensor RH Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor RH Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor RH Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor unction	Front airbag sensor Center airbag sensor assembly	*	Click here
B	ost Communication with Front Airbag Sensor	Instrument panel wire ngine room main wire Front airbag sensor Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor Center airbag sensor assembly	*	Click here
B 23	Rear Airbag Sensor RH Circuit unction	Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B 2/8	ost Communication with Rear Airbag Sensor RH	No. 2 floor wire Front door wire RH Side airbag sensor RH Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B	Rear Airbag Sensor Assembly RH Initialization Incomplete	No. 2 floor wire Front door wire RH Side airbag sensor RH Rear airbag sensor RH	*	Click here

			Center airbag sensor assembly		
B	24	Rear Airbag Sensor Circuit lfunction	Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	ost Communication with Rear Airbag Sensor	Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	Rear Airbag Sensor Assembly Initialization Incomplete	Floor wire Rear airbag sensor Side airbag sensor Center airbag sensor assembly	*	Click here
B	2/8	ost Communication with Side Satellite Sensor Bus RH	No. 2 floor wire Front door wire RH Side airbag sensor RH Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B		Side Satellite Sensor Bus RH Initialization Incomplete	No. 2 floor wire Rear airbag sensor RH Side airbag sensor RH Center airbag sensor assembly	*	Click here
B	2	ost Communication with Side Satellite Sensor Bus	Floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	Side Satellite Sensor Bus Initialization Incomplete	No. 2 floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B		nual Cut off Switch Trouble	Instrument panel wire Airbag cut off switch Center airbag sensor assembly	*	Click here
B		Seat Position Airbag Sensor Circuit lfunction	Seat position sensor Center airbag sensor assembly Floor wire for D No. 2 floor wire for RHD		Click here
B		Driver Side Seat Belt Buckle Switch Circuit lfunction	Floor wire for D No. 2 floor wire for RHD Front seat inner belt assembly Seat belt buckle switch Front seat inner belt assembly RH Seat belt buckle switch RH Center airbag sensor assembly	*	Click here
B		senger Airbag FF Indicator Circuit lfunction	Instrument panel wire ulti isplay Clock Center airbag sensor assembly No. 2 instrument panel wire No. 5 instrument panel wire	*	Click here
B		Roll ver Cut ff Indicator lfunction	Combination meter assembly Curtain shield airbag cutoff switch Center airbag sensor assembly Instrument panel wire No. 3 instrument panel wire Floor wire No. 2 floor wire	*	Click here
B	2/45	Indicator ight Circuit lfunction	Combination meter assembly SRS warning light Center airbag sensor assembly Instrument panel wire	*	Click here
B	2	Rear Floor Airbag Sensor lfunction	Center airbag sensor assembly Rear floor airbag sensor	*	Click here
B		ost Communication with Rear Floor Airbag Sensor RH	Center airbag sensor assembly Rear floor airbag sensor No. 2 floor wire	*	Click here
B		Rear Floor Airbag Sensor RH Initialization Incomplete	Center airbag sensor assembly Rear floor airbag sensor No. 2 floor wire	*	Click here
B		Door Side Airbag Sensor RH lfunction	Side airbag sensor RH Center airbag sensor assembly	*	Click here
B	2/8	ost Communication with Door Side Airbag Sensor RH	Side airbag sensor RH Center airbag sensor assembly	*	Click here
			No. 2 floor wire		

B		Door Side Airbag Sensor RH Initialization Incomplete	Front door wire RH Side airbag sensor RH Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B		Side Satellite Sensor No. 2 Bus RH Initialization Incomplete	Center airbag sensor assembly Rear floor airbag sensor No. 2 floor wire	*	Click here
B		Door Side Airbag Sensor lfunction	Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	ost Communication with Door Side Airbag Sensor	Floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	Door Side Airbag Sensor Initialization Incomplete	Floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B		Short in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B		pen in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B	2/5	Short to D in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B		Short to B+ in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B	2	Short in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B	2	pen in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B	2	Short to D in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B	2	Short to B+ in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B		Short in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
B		pen in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
B	2/53	Short to D in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
B		Short to B+ in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
		Short in Front Passenger Side Squib 2nd Step	Instrument panel wire Instrument panel wire assembly		Click

B	Circuit	Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	here
B	pen in Front Passenger Side Squib 2nd Step Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	Click here
B	Short to D in Front Passenger Side Squib 2nd Step Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Passenger Side Squib 2nd Step Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	Click here
B 20/55	Short in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 2	pen in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 22/55	Short to D in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 23/55	Short to B+ in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 25/56	Short in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B 26/56	pen in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B 2	Short to D in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B 28/56	Short to B+ in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B	Short in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B	pen in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B 2/5	Short to D in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B	Short to B+ in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B	Short in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	pen in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	Short to D in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	Short to B+ in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	Short in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here

B		pen in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here
B	2/5	Short to D in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here
B		Short to B+ in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here
B		Short in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib squib 2nd step Center airbag sensor assembly	*2	Click here
B		pen in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib squib 2nd step Center airbag sensor assembly	*2	Click here
B		Short to D in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib 2nd step Center airbag sensor assembly	*2	Click here
B		Short to B+ in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib squib 2nd step Center airbag sensor assembly	*2	Click here
B	2	Short in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B	2	pen in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B	2/62	Short to D in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B	2	Short to B+ in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B		Short in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		pen in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		Short to D in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		Short to B+ in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		Short in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
B		pen in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
B	2/64	Short to D in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
B		Short to B+ in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
			Instrument panel wire		

B	Short in Front Passenger Side Knee Airbag Squib Circuit	Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	pen in Front Passenger Side Knee Airbag Squib Circuit	Instrument panel wire Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	Short to D in Front Passenger Side Knee Airbag Squib Circuit	Instrument panel wire Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Passenger Side Knee Airbag Squib Circuit	Instrument panel wire Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	Short in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B	pen in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 2/	Short to D in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B	Short in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B	pen in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B	Short to D in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B 20/	Short in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 2	pen in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 22/	Short to D in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 23/	Short to B+ in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 25/	Short in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly	*2	Click here
B 26/	pen in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly	*2	Click here

B 2	Short to D in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly		*2	Click here
B 28/	Short to B+ in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly		*2	Click here

for Preparation Click here

- If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.
- When the SRS warning light remains on and the DTC output is the normal system code, a voltage source drop is likely to occur. This malfunction is not stored in the memory by the center airbag sensor.
- If the power source voltage returns to normal, the SRS warning light will automatically go off. When 2 or more codes are output, the code with the lower number is output first.
- When 2 or more codes are output, the code with the lower number is output first.
- If a code not listed in the chart is output, the center airbag sensor may have a malfunction.
- If a DTC is output indicating a short to ground, short to B+ or open in an airbag squib circuit area, other DTCs may not be output. First replace or repair the malfunctioning area indicated by the current DTC, and then check for DTCs again to output the other DTCs.
- ck in the check mode column:
  * DTC is not output in check mode.
  *2: DTC is output in check mode.
  *3: DTC is only for rear side airbag equipped vehicles.
- *4: w/ Side Airbag
  *5: w/ Rear Side Airbag
  *6: w/ Rear No. 2 Seat
  * except w/o Side Airbag
  *8: w/ Knee Airbag

Airbag System

DTC Code	Detection Item	Trouble Area	Check ode	See page
B	Center Airbag Sensor Assembly lfunction	Center airbag sensor assembly	*	Click here
B	Front Satellite Sensor Bus RH Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor RH Center airbag sensor assembly	*	Click here
B	Front Satellite Sensor Bus Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor RH lfunction	Front airbag sensor RH Center airbag sensor assembly	*	Click here
B 2/83	ost Communication with Front Airbag Sensor RH	Instrument panel wire ngine room main wire Front airbag sensor RH Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor RH Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor RH Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor lfunction	Front airbag sensor Center airbag sensor assembly	*	Click here
B	ost Communication with Front Airbag Sensor	Instrument panel wire ngine room main wire Front airbag sensor Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor Center airbag sensor assembly	*	Click here
B 23	Rear Airbag Sensor RH Circuit lfunction	Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B 2/8	ost Communication with Rear Airbag Sensor RH	No. 2 floor wire Front door wire RH Side airbag sensor RH Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B	Rear Airbag Sensor Assembly RH Initialization Incomplete	No. 2 floor wire Front door wire RH Side airbag sensor RH Rear airbag sensor RH	*	Click here

			Center airbag sensor assembly		
B	24	Rear Airbag Sensor Circuit lfunction	Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	ost Communication with Rear Airbag Sensor	Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	Rear Airbag Sensor Assembly Initialization Incomplete	Floor wire Rear airbag sensor Side airbag sensor Center airbag sensor assembly	*	Click here
B	2/8	ost Communication with Side Satellite Sensor Bus RH	No. 2 floor wire Front door wire RH Side airbag sensor RH Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B		Side Satellite Sensor Bus RH Initialization Incomplete	No. 2 floor wire Rear airbag sensor RH Side airbag sensor RH Center airbag sensor assembly	*	Click here
B	2	ost Communication with Side Satellite Sensor Bus	Floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	Side Satellite Sensor Bus Initialization Incomplete	No. 2 floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B		nual Cut off Switch Trouble	Instrument panel wire Airbag cut off switch Center airbag sensor assembly	*	Click here
B		Seat Position Airbag Sensor Circuit lfunction	Seat position sensor Center airbag sensor assembly Floor wire for D No. 2 floor wire for RHD		Click here
B		Driver Side Seat Belt Buckle Switch Circuit lfunction	Floor wire for D No. 2 floor wire for RHD Front seat inner belt assembly Seat belt buckle switch Front seat inner belt assembly RH Seat belt buckle switch RH Center airbag sensor assembly	*	Click here
B		senger Airbag FF Indicator Circuit lfunction	Instrument panel wire ulti isplay Clock Center airbag sensor assembly No. 2 instrument panel wire No. 5 instrument panel wire	*	Click here
B		Roll ver Cut ff Indicator lfunction	Combination meter assembly Curtain shield airbag cutoff switch Center airbag sensor assembly Instrument panel wire No. 3 instrument panel wire Floor wire No. 2 floor wire	*	Click here
B	2/45	Indicator ight Circuit lfunction	Combination meter assembly SRS warning light Center airbag sensor assembly Instrument panel wire	*	Click here
B	2	Rear Floor Airbag Sensor lfunction	Center airbag sensor assembly Rear floor airbag sensor	*	Click here
B		ost Communication with Rear Floor Airbag Sensor RH	Center airbag sensor assembly Rear floor airbag sensor No. 2 floor wire	*	Click here
B		Rear Floor Airbag Sensor RH Initialization Incomplete	Center airbag sensor assembly Rear floor airbag sensor No. 2 floor wire	*	Click here
B		Door Side Airbag Sensor RH lfunction	Side airbag sensor RH Center airbag sensor assembly	*	Click here
B	2/8	ost Communication with Door Side Airbag Sensor RH	Side airbag sensor RH Center airbag sensor assembly	*	Click here
			No. 2 floor wire		

B		Door Side Airbag Sensor RH Initialization Incomplete	Front door wire RH Side airbag sensor RH Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B		Side Satellite Sensor No. 2 Bus RH Initialization Incomplete	Center airbag sensor assembly Rear floor airbag sensor No. 2 floor wire	*	Click here
B		Door Side Airbag Sensor lfunction	Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	ost Communication with Door Side Airbag Sensor	Floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	Door Side Airbag Sensor Initialization Incomplete	Floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B		Short in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B		pen in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B	2/5	Short to D in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B		Short to B+ in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B	2	Short in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B	2	pen in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B	2	Short to D in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B	2	Short to B+ in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B		Short in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
B		pen in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
B	2/53	Short to D in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
B		Short to B+ in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
		Short in Front Passenger Side Squib 2nd Step	Instrument panel wire Instrument panel wire assembly		Click

B	Circuit	Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	here
B	pen in Front Passenger Side Squib 2nd Step Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	Click here
B	Short to D in Front Passenger Side Squib 2nd Step Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Passenger Side Squib 2nd Step Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	Click here
B 20/55	Short in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 2	pen in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 22/55	Short to D in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 23/55	Short to B+ in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 25/56	Short in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B 26/56	pen in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B 2	Short to D in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B 28/56	Short to B+ in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B	Short in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B	pen in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B 2/5	Short to D in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B	Short to B+ in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B	Short in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	pen in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	Short to D in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	Short to B+ in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	Short in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here

B		pen in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here
B	2/5	Short to D in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here
B		Short to B+ in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here
B		Short in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib squib 2nd step Center airbag sensor assembly	*2	Click here
B		pen in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib squib 2nd step Center airbag sensor assembly	*2	Click here
B		Short to D in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib 2nd step Center airbag sensor assembly	*2	Click here
B		Short to B+ in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib squib 2nd step Center airbag sensor assembly	*2	Click here
B	2	Short in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B	2	pen in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B	2/62	Short to D in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B	2	Short to B+ in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B		Short in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		pen in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		Short to D in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		Short to B+ in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		Short in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
B		pen in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
B	2/64	Short to D in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
B		Short to B+ in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
			Instrument panel wire		

B	Short in Front Passenger Side Knee Airbag Squib Circuit	Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	pen in Front Passenger Side Knee Airbag Squib Circuit	Instrument panel wire Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	Short to D in Front Passenger Side Knee Airbag Squib Circuit	Instrument panel wire Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Passenger Side Knee Airbag Squib Circuit	Instrument panel wire Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	Short in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B	pen in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 2/	Short to D in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B	Short in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B	pen in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B	Short to D in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B 20/	Short in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 2	pen in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 22/	Short to D in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 23/	Short to B+ in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 25/	Short in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly	*2	Click here
B 26/	pen in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly	*2	Click here

B 2	Short to D in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly		*2	Click here
B 28/	Short to B+ in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly		*2	Click here

for Preparation Click here

- If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.
- When the SRS warning light remains on and the DTC output is the normal system code, a voltage source drop is likely to occur. This malfunction is not stored in the memory by the center airbag sensor.
- If the power source voltage returns to normal, the SRS warning light will automatically go off. When 2 or more codes are output, the code with the lower number is output first.
- When 2 or more codes are output, the code with the lower number is output first.
- If a code not listed in the chart is output, the center airbag sensor may have a malfunction.
- If a DTC is output indicating a short to ground, short to B+ or open in an airbag squib circuit area, other DTCs may not be output. First replace or repair the malfunctioning area indicated by the current DTC, and then check for DTCs again to output the other DTCs.
- ck in the check mode column:
  * DTC is not output in check mode.
  *2: DTC is output in check mode.
  *3: DTC is only for rear side airbag equipped vehicles.
- *4: w/ Side Airbag
  *5: w/ Rear Side Airbag
  *6: w/ Rear No. 2 Seat
  * except w/o Side Airbag
  *8: w/ Knee Airbag

Airbag System

DTC Code	Detection Item	Trouble Area	Check ode	See page
B	Center Airbag Sensor Assembly lfunction	Center airbag sensor assembly	*	Click here
B	Front Satellite Sensor Bus RH Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor RH Center airbag sensor assembly	*	Click here
B	Front Satellite Sensor Bus Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor RH lfunction	Front airbag sensor RH Center airbag sensor assembly	*	Click here
B 2/83	ost Communication with Front Airbag Sensor RH	Instrument panel wire ngine room main wire Front airbag sensor RH Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor RH Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor RH Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor lfunction	Front airbag sensor Center airbag sensor assembly	*	Click here
B	ost Communication with Front Airbag Sensor	Instrument panel wire ngine room main wire Front airbag sensor Center airbag sensor assembly	*	Click here
B	Front Airbag Sensor Initialization Incomplete	Instrument panel wire ngine room main wire Front airbag sensor Center airbag sensor assembly	*	Click here
B 23	Rear Airbag Sensor RH Circuit lfunction	Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B 2/8	ost Communication with Rear Airbag Sensor RH	No. 2 floor wire Front door wire RH Side airbag sensor RH Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B	Rear Airbag Sensor Assembly RH Initialization Incomplete	No. 2 floor wire Front door wire RH Side airbag sensor RH Rear airbag sensor RH	*	Click here

			Center airbag sensor assembly		
B	24	Rear Airbag Sensor Circuit lfunction	Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	ost Communication with Rear Airbag Sensor	Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	Rear Airbag Sensor Assembly Initialization Incomplete	Floor wire Rear airbag sensor Side airbag sensor Center airbag sensor assembly	*	Click here
B	2/8	ost Communication with Side Satellite Sensor Bus RH	No. 2 floor wire Front door wire RH Side airbag sensor RH Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B		Side Satellite Sensor Bus RH Initialization Incomplete	No. 2 floor wire Rear airbag sensor RH Side airbag sensor RH Center airbag sensor assembly	*	Click here
B	2	ost Communication with Side Satellite Sensor Bus	Floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	Side Satellite Sensor Bus Initialization Incomplete	No. 2 floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B		nual Cut off Switch Trouble	Instrument panel wire Airbag cut off switch Center airbag sensor assembly	*	Click here
B		Seat Position Airbag Sensor Circuit lfunction	Seat position sensor Center airbag sensor assembly Floor wire for D No. 2 floor wire for RHD		Click here
B		Driver Side Seat Belt Buckle Switch Circuit lfunction	Floor wire for D No. 2 floor wire for RHD Front seat inner belt assembly Seat belt buckle switch Front seat inner belt assembly RH Seat belt buckle switch RH Center airbag sensor assembly	*	Click here
B		senger Airbag FF Indicator Circuit lfunction	Instrument panel wire ulti isplay Clock Center airbag sensor assembly No. 2 instrument panel wire No. 5 instrument panel wire	*	Click here
B		Roll ver Cut ff Indicator lfunction	Combination meter assembly Curtain shield airbag cutoff switch Center airbag sensor assembly Instrument panel wire No. 3 instrument panel wire Floor wire No. 2 floor wire	*	Click here
B	2/45	Indicator ight Circuit lfunction	Combination meter assembly SRS warning light Center airbag sensor assembly Instrument panel wire	*	Click here
B	2	Rear Floor Airbag Sensor lfunction	Center airbag sensor assembly Rear floor airbag sensor	*	Click here
B		ost Communication with Rear Floor Airbag Sensor RH	Center airbag sensor assembly Rear floor airbag sensor No. 2 floor wire	*	Click here
B		Rear Floor Airbag Sensor RH Initialization Incomplete	Center airbag sensor assembly Rear floor airbag sensor No. 2 floor wire	*	Click here
B		Door Side Airbag Sensor RH lfunction	Side airbag sensor RH Center airbag sensor assembly	*	Click here
B	2/8	ost Communication with Door Side Airbag Sensor RH	Side airbag sensor RH Center airbag sensor assembly	*	Click here
			No. 2 floor wire		

B		Door Side Airbag Sensor RH Initialization Incomplete	Front door wire RH Side airbag sensor RH Rear airbag sensor RH Center airbag sensor assembly	*	Click here
B		Side Satellite Sensor No. 2 Bus RH Initialization Incomplete	Center airbag sensor assembly Rear floor airbag sensor No. 2 floor wire	*	Click here
B		Door Side Airbag Sensor lfunction	Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	ost Communication with Door Side Airbag Sensor	Floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B	2	Door Side Airbag Sensor Initialization Incomplete	Floor wire Front door wire Side airbag sensor Rear airbag sensor Center airbag sensor assembly	*	Click here
B		Short in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B		pen in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B	2/5	Short to D in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B		Short to B+ in Driver Side Squib Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib Center airbag sensor assembly	*2	Click here
B	2	Short in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B	2	pen in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B	2	Short to D in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B	2	Short to B+ in Front Passenger Side Squib Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib Center airbag sensor assembly	*2	Click here
B		Short in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
B		pen in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
B	2/53	Short to D in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
B		Short to B+ in Driver Side Squib 2nd Step Circuit	Instrument panel wire Spiral cable Steering pad Driver side squib 2nd step Center airbag sensor assembly	*2	Click here
		Short in Front Passenger Side Squib 2nd Step	Instrument panel wire Instrument panel wire assembly		Click

B	Circuit	Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	here
B	pen in Front Passenger Side Squib 2nd Step Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	Click here
B	Short to D in Front Passenger Side Squib 2nd Step Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Passenger Side Squib 2nd Step Circuit	Instrument panel wire Instrument panel wire assembly Front passenger airbag assembly Front passenger side squib 2nd step Center airbag sensor assembly	*2	Click here
B 20/55	Short in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 2	pen in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 22/55	Short to D in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 23/55	Short to B+ in Side Squib RH Circuit	No. 2 floor wire Front seat airbag assembly RH Side squib RH Center airbag sensor assembly	*2	Click here
B 25/56	Short in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B 26/56	pen in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B 2	Short to D in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B 28/56	Short to B+ in Side Squib Circuit	Floor wire Front seat airbag assembly Side squib Center airbag sensor assembly	*2	Click here
B	Short in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B	pen in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B 2/5	Short to D in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B	Short to B+ in Curtain Shield Squib RH Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib RH Center airbag sensor assembly	*2	Click here
B	Short in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	pen in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	Short to D in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	Short to B+ in Curtain Shield Squib Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib Center airbag sensor assembly	*2	Click here
B	Short in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here

B		pen in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here
B	2/5	Short to D in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here
B		Short to B+ in Curtain Shield Squib RH 2nd Step Circuit	No. 2 floor wire Curtain shield airbag assembly RH Curtain shield squib 2nd step RH Center airbag sensor assembly	*2	Click here
B		Short in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib squib 2nd step Center airbag sensor assembly	*2	Click here
B		pen in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib squib 2nd step Center airbag sensor assembly	*2	Click here
B		Short to D in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib 2nd step Center airbag sensor assembly	*2	Click here
B		Short to B+ in Curtain Shield Squib 2nd Step Circuit	Floor wire Curtain shield airbag assembly Curtain shield squib squib 2nd step Center airbag sensor assembly	*2	Click here
B	2	Short in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B	2	pen in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B	2/62	Short to D in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B	2	Short to B+ in Rear Side Squib RH Circuit	No. 2 floor wire Rear seat wire RH Rear seat side airbag assembly RH Rear side squib RH Center airbag sensor assembly	*2, *3	Click here
B		Short in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		pen in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		Short to D in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		Short to B+ in Rear Side Squib Circuit	Floor wire Rear seat side airbag assembly Rear side squib Center airbag sensor assembly	*2, *3	Click here
B		Short in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
B		pen in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
B	2/64	Short to D in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
B		Short to B+ in Driver Side Knee Airbag Squib Circuit	Instrument panel wire Driver side knee airbag assembly Driver side knee squib Center airbag sensor assembly	*2	Click here
			Instrument panel wire		

B	Short in Front Passenger Side Knee Airbag Squib Circuit	Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	pen in Front Passenger Side Knee Airbag Squib Circuit	Instrument panel wire Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	Short to D in Front Passenger Side Knee Airbag Squib Circuit	Instrument panel wire Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Passenger Side Knee Airbag Squib Circuit	Instrument panel wire Front passenger side knee airbag assembly Front passenger side knee squib Center airbag sensor assembly	*2	Click here
B	Short in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B	pen in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 2/	Short to D in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Pretensioner Squib RH Circuit	No. 2 floor wire Front seat outer belt assembly RH Front pretensioner squib RH Center airbag sensor assembly	*2	Click here
B	Short in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B	pen in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B	Short to D in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B	Short to B+ in Front Pretensioner Squib Circuit	Floor wire Front seat outer belt assembly Front pretensioner squib Center airbag sensor assembly	*2	Click here
B 20/	Short in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 2	pen in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 22/	Short to D in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 23/	Short to B+ in Rear Pretensioner Squib RH Circuit	No. 2 floor wire Rear seat outer belt assembly RH Rear pretensioner squib RH Center airbag sensor assembly	*2	Click here
B 25/	Short in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly	*2	Click here
B 26/	pen in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly	*2	Click here

B 2	Short to D in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly		*2	Click here
B 28/	Short to B+ in Rear Pretensioner Squib Circuit	Floor wire Rear seat outer belt assembly Rear pretensioner squib Center airbag sensor assembly		*2	Click here

DTC B1000/31 Center Airbag Sensor Assembly Malfunction

for Preparation Click here

DESCRIPTION

The center airbag sensor consists of the airbag sensor, the safing sensor, the drive circuit, the diagnosis circuit, the ignition control, etc.
If the center airbag sensor receives signals from the airbag sensor, it determines whether the SRS should be activated.
DTC B1000/31 is output when a malfunction is detected in the center airbag sensor.

DTC Code	DTC Detection Condition	Trouble Area
B1000/31	A center airbag sensor malfunction.	Center airbag sensor assembly

HINT:

When a trouble code is output simultaneously with B1000/31, repair the malfunction indicated by the other code first.

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CENTER AIRBAG SENSOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

OK:
DTC B1000 is not output.

NG → **REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)**

OK ↓

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1820/55 Short in Side Squib RH Circuit

DTC B1821/55 Open in Side Squib RH Circuit

DTC B1822/55 Short to GND in Side Squib RH Circuit

DTC B1823/55 Short to B+ in Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The side squib RH circuit consists of the center airbag sensor and the front seat airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1820/55	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib RH circuit during the primary check. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1821/55	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib RH circuit for 2 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1822/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1823/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

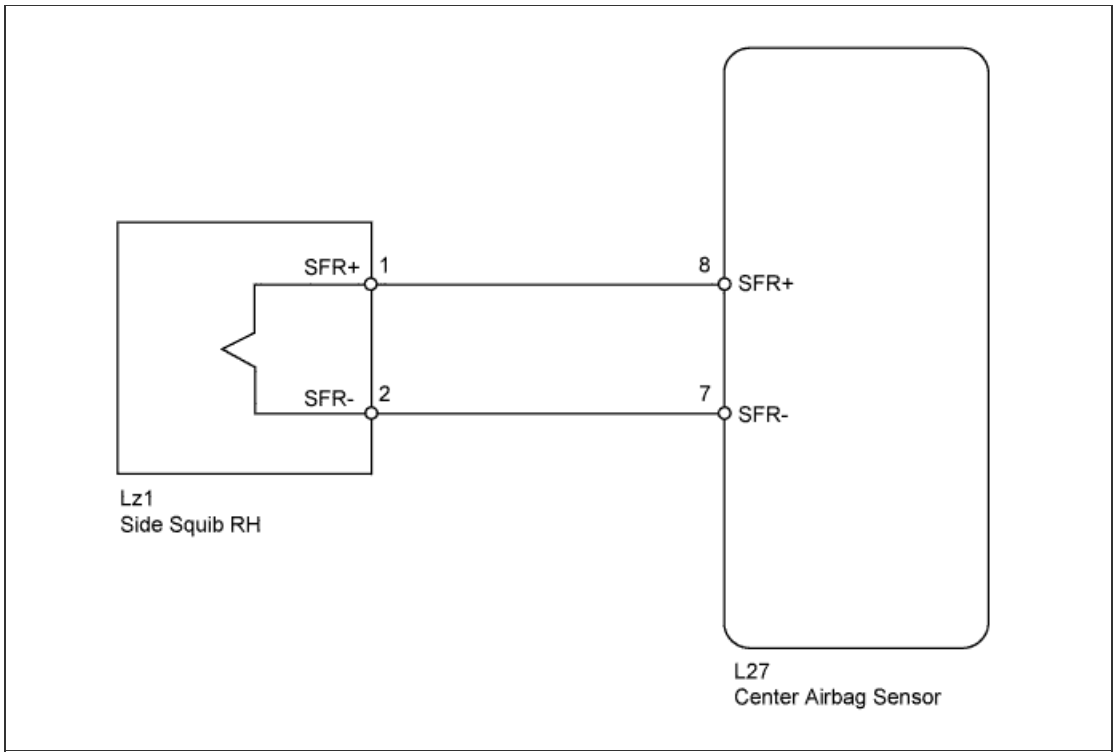

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG RH (SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag RH (side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

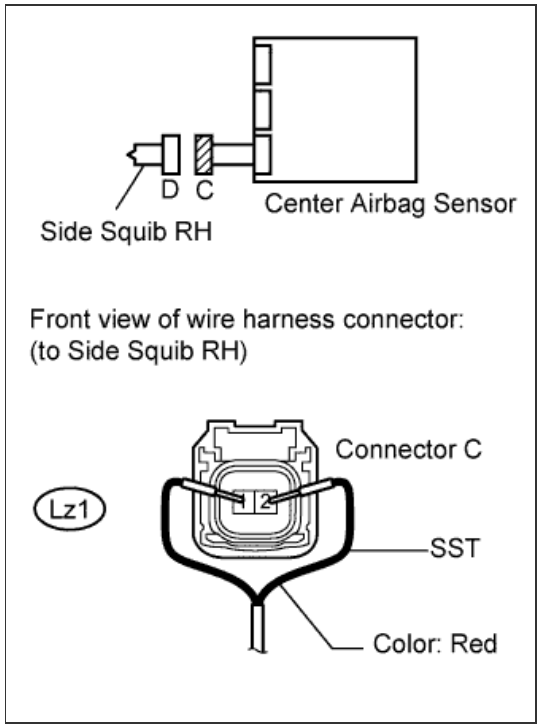

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B	REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)
C	Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

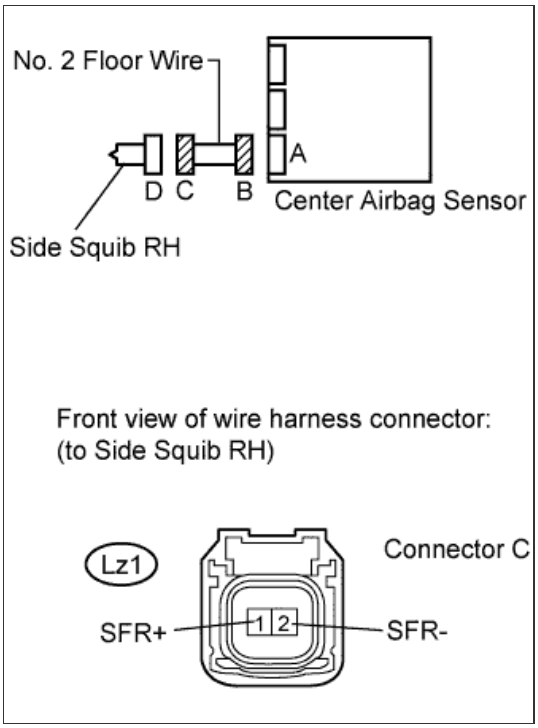

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz1-1 (SFR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz1-2 (SFR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	1 MΩ or higher
Lz1-1 (SFR+) - Body ground	Always	1 MΩ or higher
Lz1-2 (SFR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

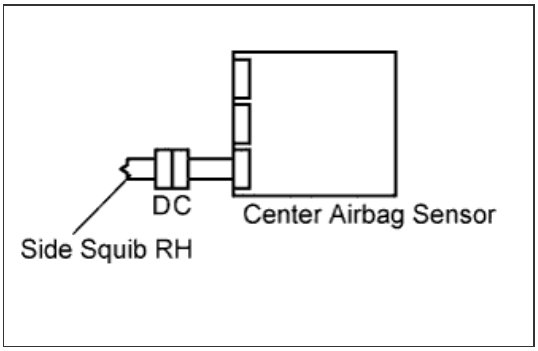

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1000/31 Center Airbag Sensor Assembly Malfunction

for Preparation Click here

DESCRIPTION

The center airbag sensor consists of the airbag sensor, the safing sensor, the drive circuit, the diagnosis circuit, the ignition control, etc.
If the center airbag sensor receives signals from the airbag sensor, it determines whether the SRS should be activated.
DTC B1000/31 is output when a malfunction is detected in the center airbag sensor.

DTC Code	DTC Detection Condition	Trouble Area
B1000/31	A center airbag sensor malfunction.	Center airbag sensor assembly

HINT:

When a trouble code is output simultaneously with B1000/31, repair the malfunction indicated by the other code first.

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CENTER AIRBAG SENSOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

OK:
DTC B1000 is not output.

NG → **REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)**

OK ↓

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1820/55 Short in Side Squib RH Circuit

DTC B1821/55 Open in Side Squib RH Circuit

DTC B1822/55 Short to GND in Side Squib RH Circuit

DTC B1823/55 Short to B+ in Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The side squib RH circuit consists of the center airbag sensor and the front seat airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1820/55	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib RH circuit during the primary check. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1821/55	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib RH circuit for 2 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1822/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1823/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

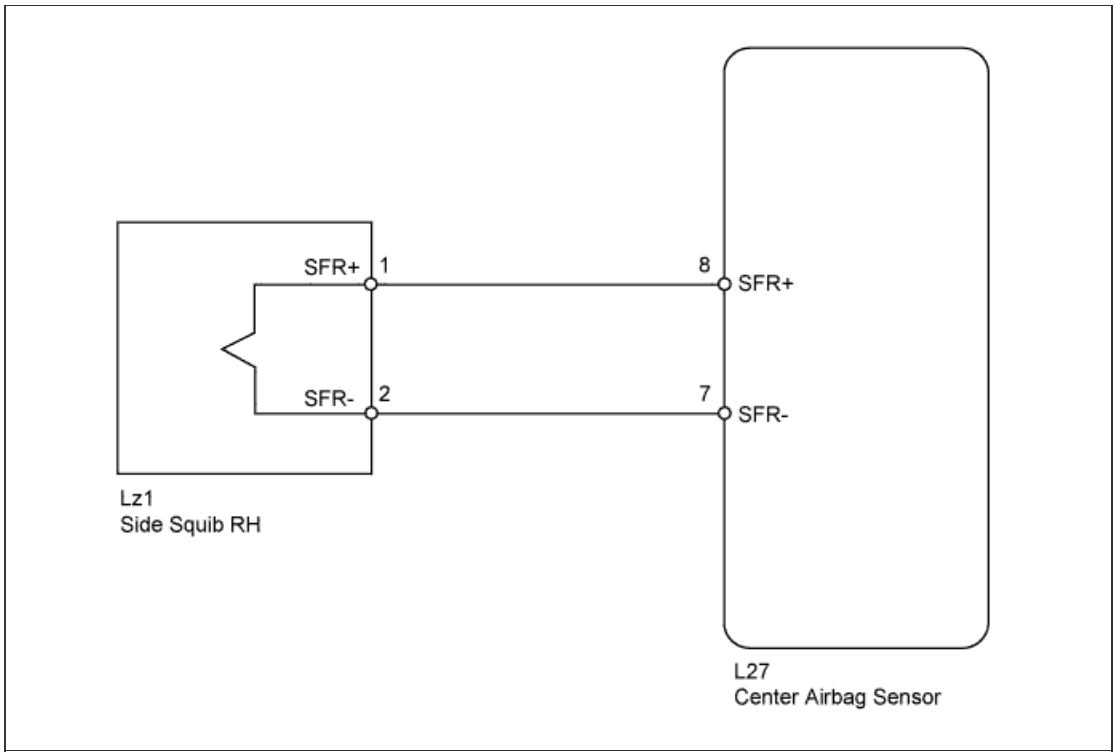

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG RH (SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag RH (side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

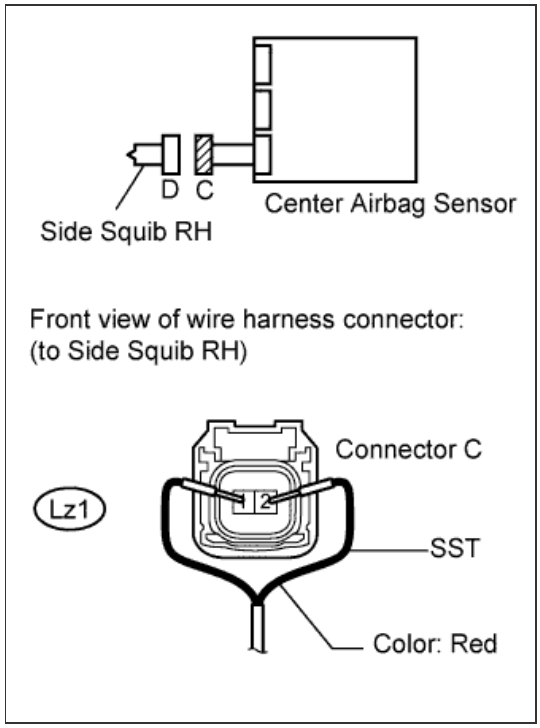

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B	REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)
C	Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

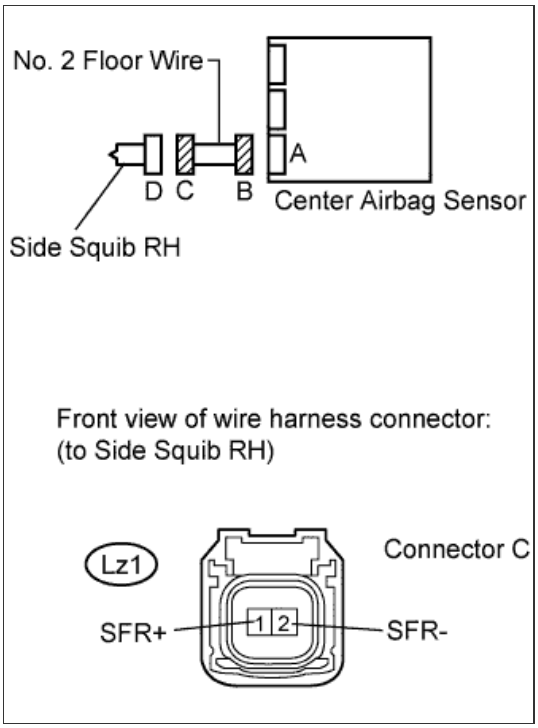

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz1-1 (SFR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz1-2 (SFR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	1 MΩ or higher
Lz1-1 (SFR+) - Body ground	Always	1 MΩ or higher
Lz1-2 (SFR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

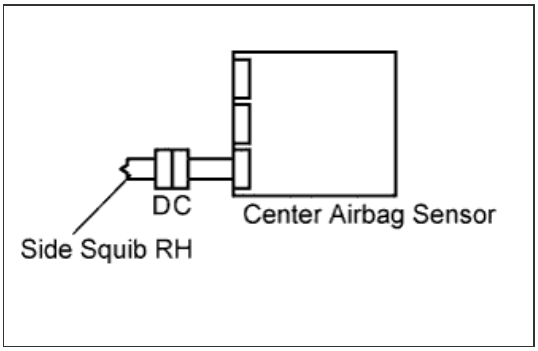

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1603/83 Front Satellite Sensor Bus RH Initialization Incomplete

DTC B1612/83 Lost Communication with Front Airbag Sensor RH

DTC B1613/83 Front Airbag Sensor RH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor RH circuit consists of the center airbag sensor and front airbag sensor RH.
The front airbag sensor RH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1603/83, B1612/83 or B1613/83 is stored when a malfunction is detected in the front airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1603/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1612/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1613/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

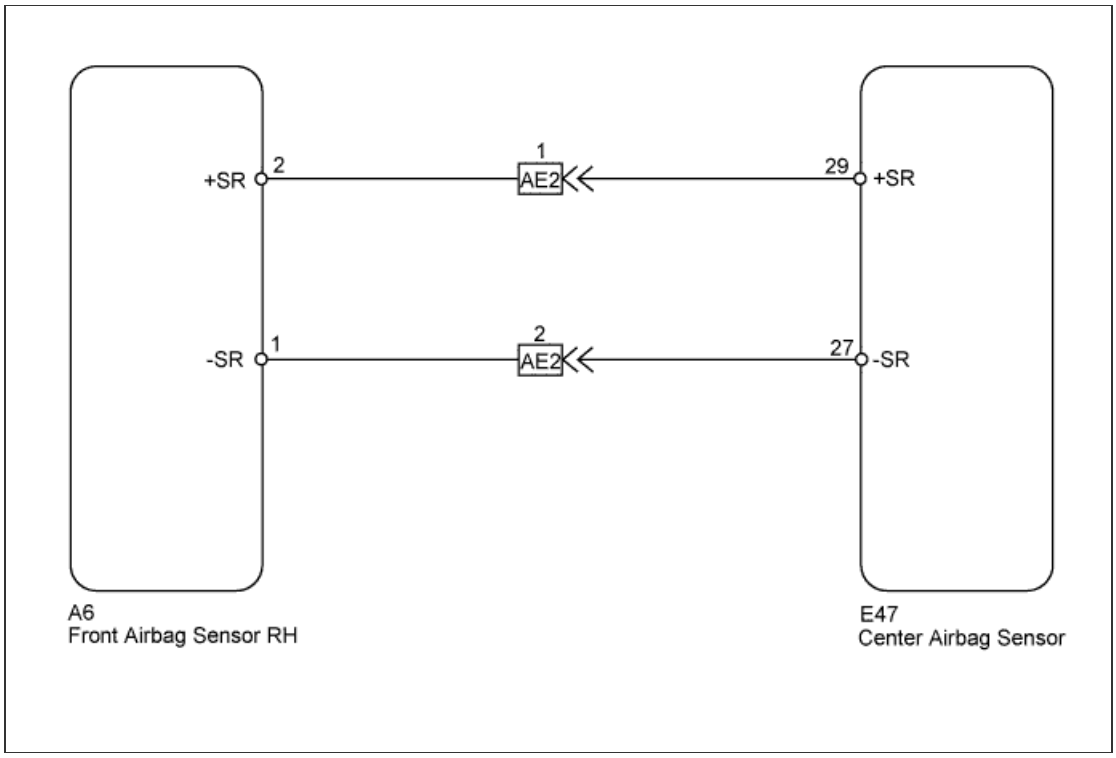

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (- battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the front airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor RH.


b. Check that the connectors (on the center airbag sensor side and front airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR RH CIRCUIT

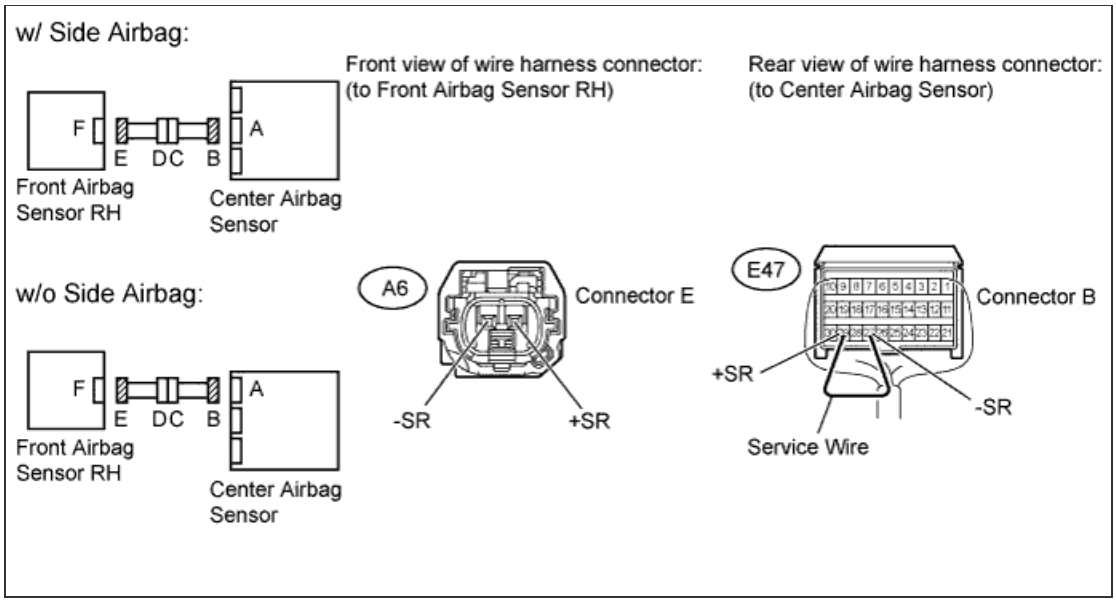

a. Connect the cable to the negative (- battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A6-2 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
A6-1 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	1 MΩ or higher
A6-2 (+SR) - Body ground	Always	1 MΩ or higher
A6-1 (-SR) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor H with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

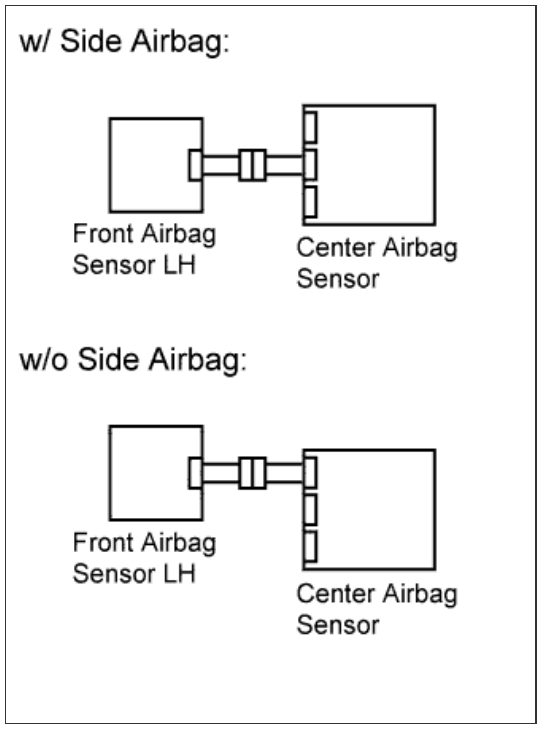

Result

Result	Proceed to
DTC B1612, B1613, B1617 and B1618 are not output	A
DTC B1617 or B1618 is output	B
DTC B1612 or B1613 is output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this check.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE FRONT AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

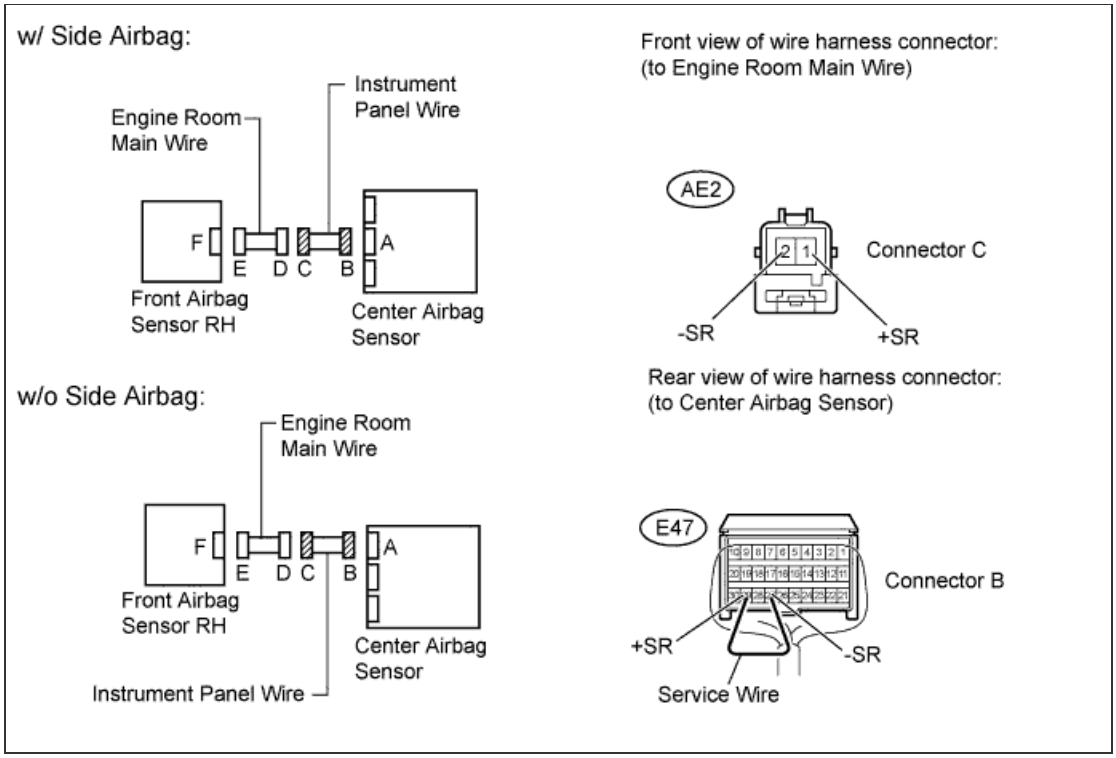

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE2-1 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
AE2-2 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminal 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminal of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	1 MΩ or higher
AE2-1 (+SR) - Body ground	Always	1 MΩ or higher
AE2-2 (-SR) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1820/55 Short in Side Squib RH Circuit

DTC B1821/55 Open in Side Squib RH Circuit

DTC B1822/55 Short to GND in Side Squib RH Circuit

DTC B1823/55 Short to B+ in Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The side squib RH circuit consists of the center airbag sensor and the front seat airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1820/55	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib RH circuit during the primary check. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1821/55	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib RH circuit for 2 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1822/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1823/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

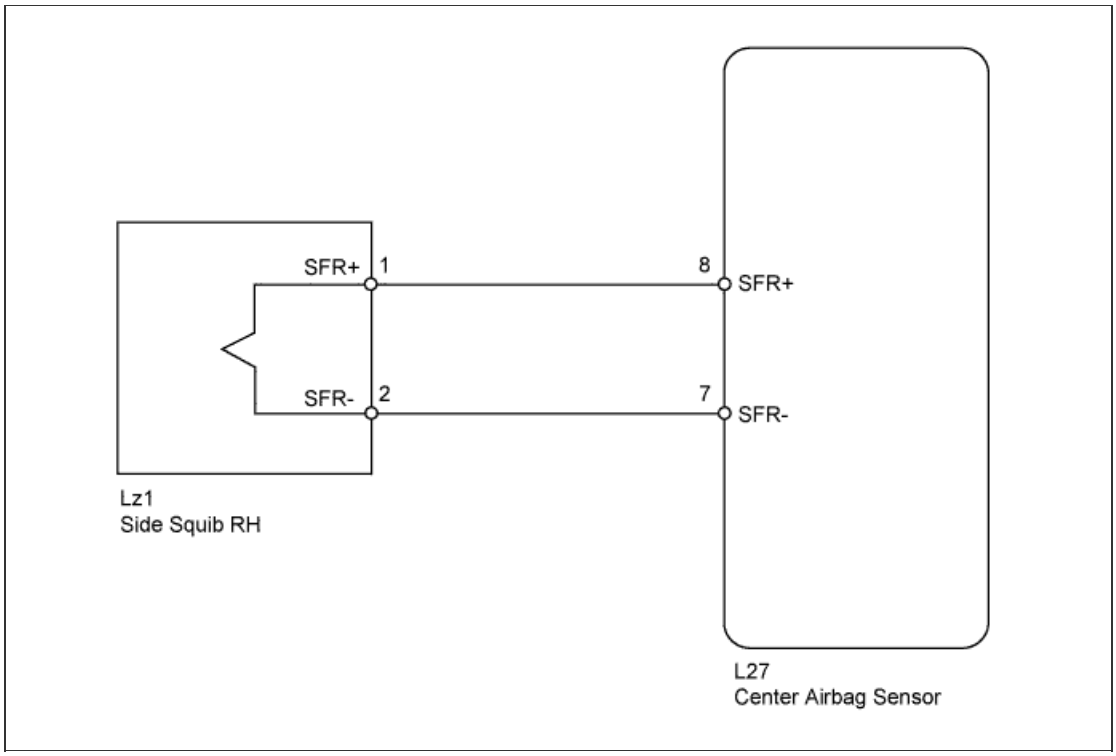

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG RH (SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag RH (side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

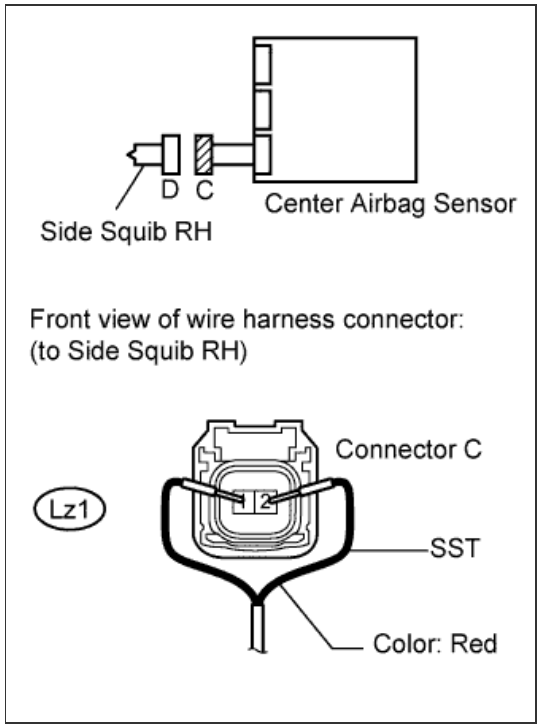

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B	REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)
C	Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

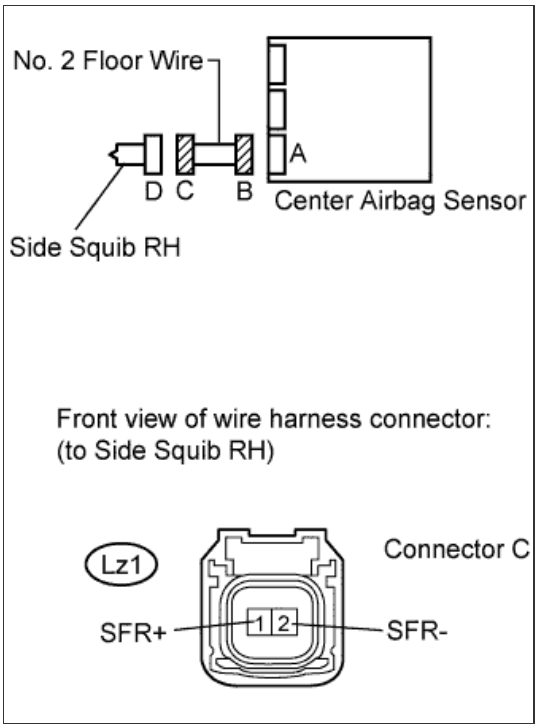

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz1-1 (SFR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz1-2 (SFR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	1 MΩ or higher
Lz1-1 (SFR+) - Body ground	Always	1 MΩ or higher
Lz1-2 (SFR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

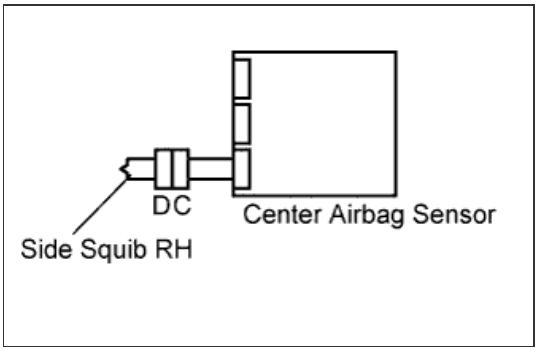

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1603/83 Front Satellite Sensor Bus RH Initialization Incomplete

DTC B1612/83 Lost Communication with Front Airbag Sensor RH

DTC B1613/83 Front Airbag Sensor RH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor RH circuit consists of the center airbag sensor and front airbag sensor RH.
The front airbag sensor RH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1603/83, B1612/83 or B1613/83 is stored when a malfunction is detected in the front airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1603/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1612/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1613/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

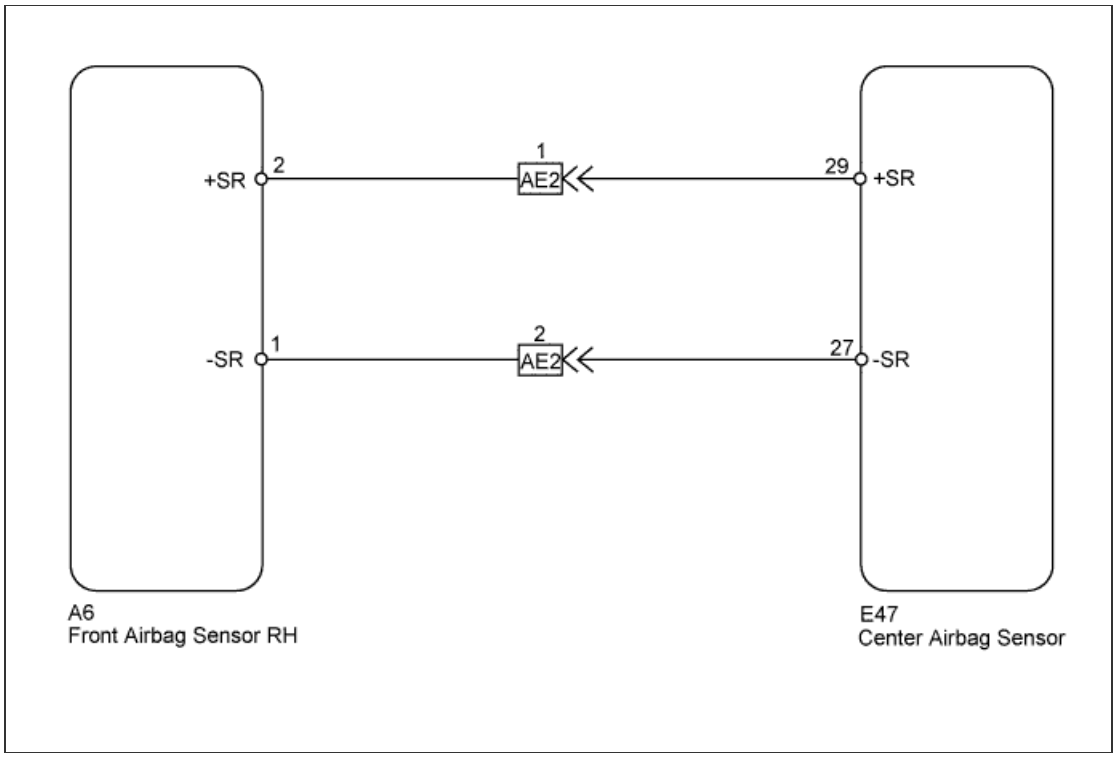

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (- battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the front airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor RH.


b. Check that the connectors (on the center airbag sensor side and front airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR RH CIRCUIT

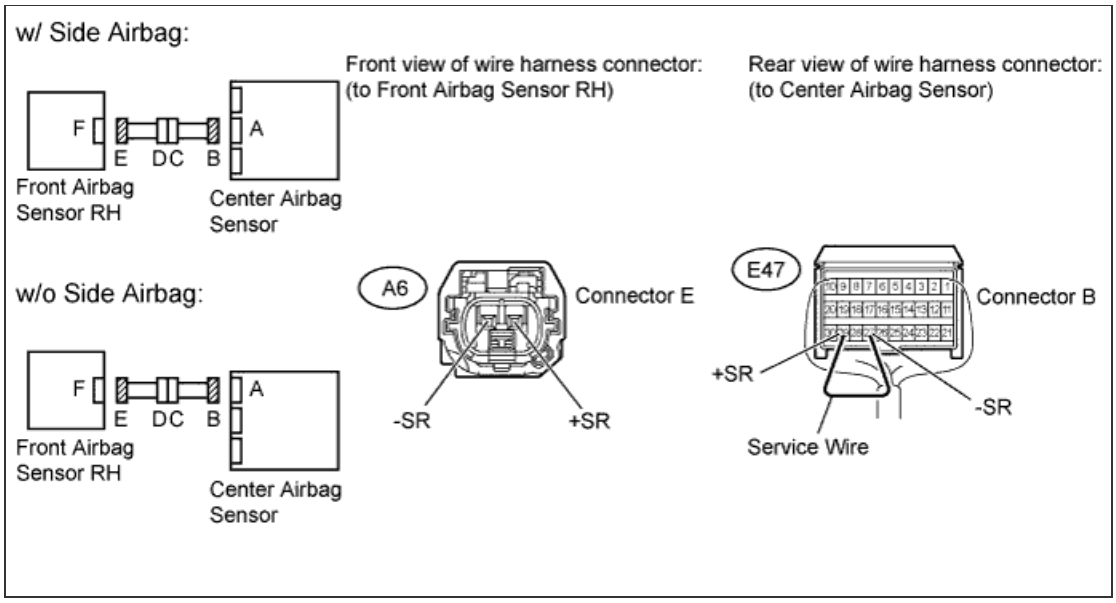

a. Connect the cable to the negative (- battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A6-2 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
A6-1 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	1 MΩ or higher
A6-2 (+SR) - Body ground	Always	1 MΩ or higher
A6-1 (-SR) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor H with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

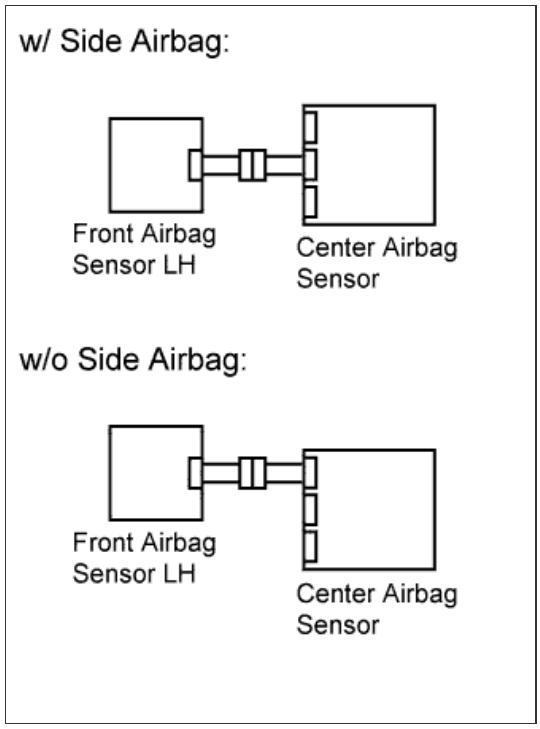

Result

Result	Proceed to
DTC B1612, B1613, B1617 and B1618 are not output	A
DTC B1617 or B1618 is output	B
DTC B1612 or B1613 is output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this check.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE FRONT AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

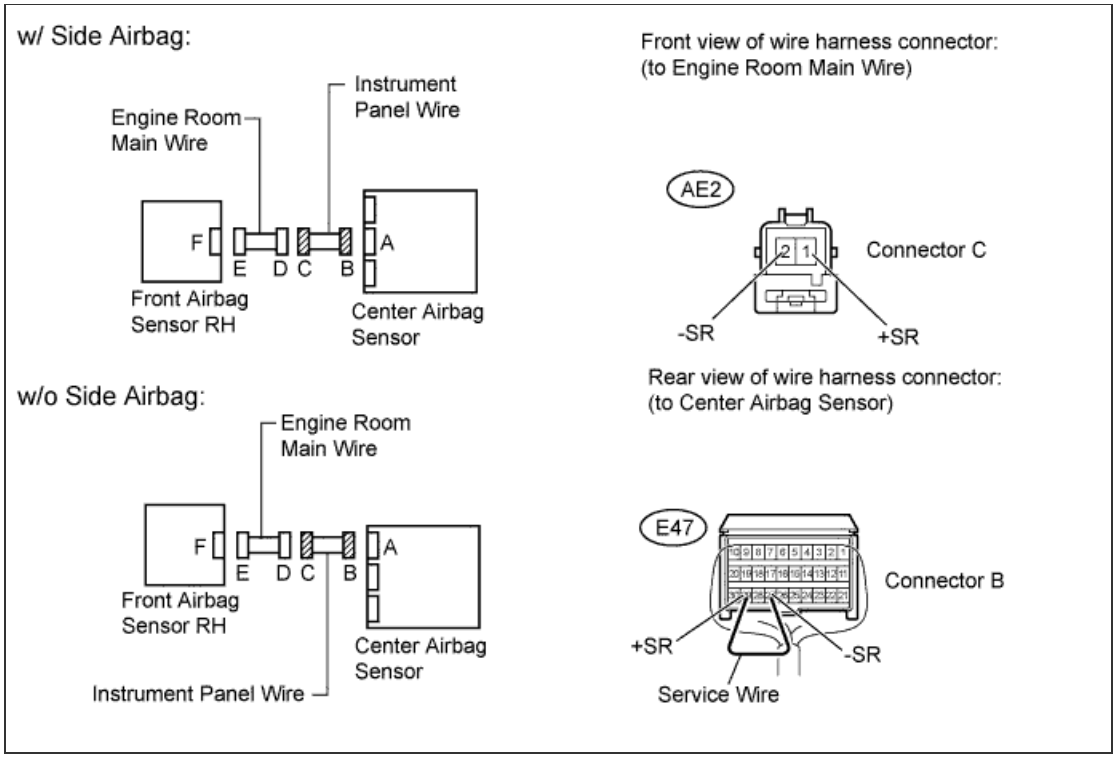

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE2-1 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
AE2-2 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminal 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminal of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	1 MΩ or higher
AE2-1 (+SR) - Body ground	Always	1 MΩ or higher
AE2-2 (-SR) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1825/56 Short in Side Squib LH Circuit

DTC B1826/56 Open in Side Squib LH Circuit

DTC B1827/56 Short to GND in Side Squib LH Circuit

DTC B1828/56 Short to B+ in Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The side squib LH circuit consists of the center airbag sensor and the front seat airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1825/56	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib LH circuit during the primary check. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1826/56	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib LH circuit for 2 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1827/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1828/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

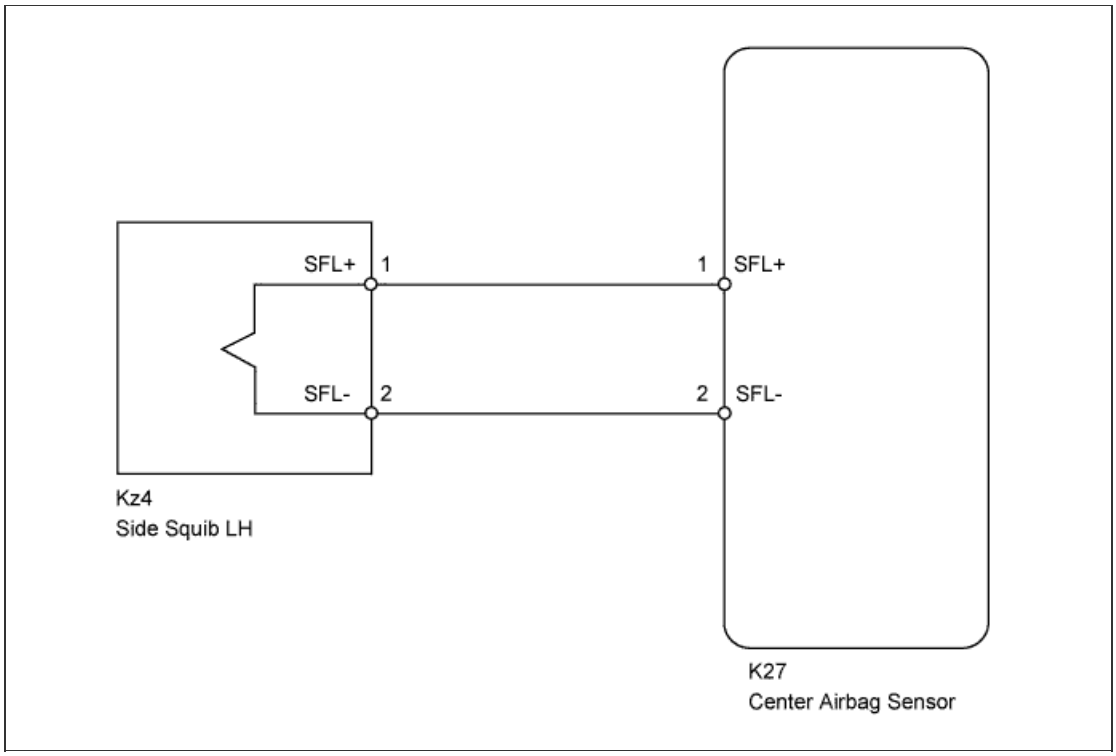

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG LH (SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag LH (side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

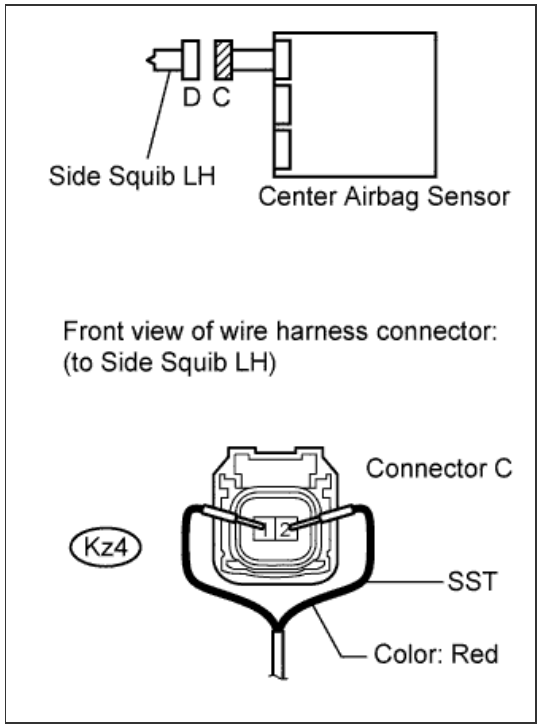

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B → REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

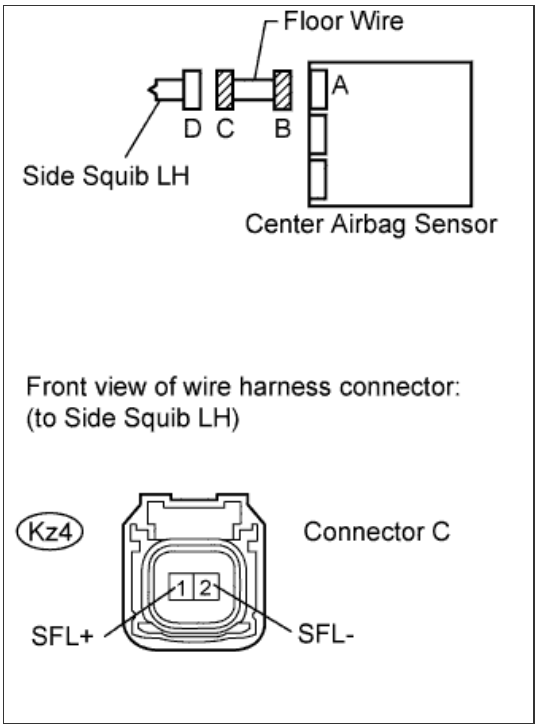

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz4-1 (SFL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz4-2 (SFL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	1 MΩ or higher
Kz4-1 (SFL+) - Body ground	Always	1 MΩ or higher
Kz4-2 (SFL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

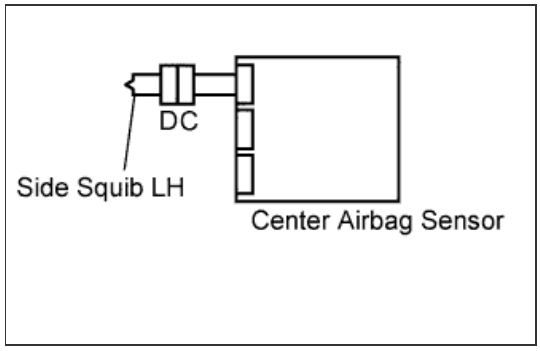

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1603/83 Front Satellite Sensor Bus RH Initialization Incomplete

DTC B1612/83 Lost Communication with Front Airbag Sensor RH

DTC B1613/83 Front Airbag Sensor RH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor RH circuit consists of the center airbag sensor and front airbag sensor RH.
The front airbag sensor RH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1603/83, B1612/83 or B1613/83 is stored when a malfunction is detected in the front airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1603/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1612/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1613/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

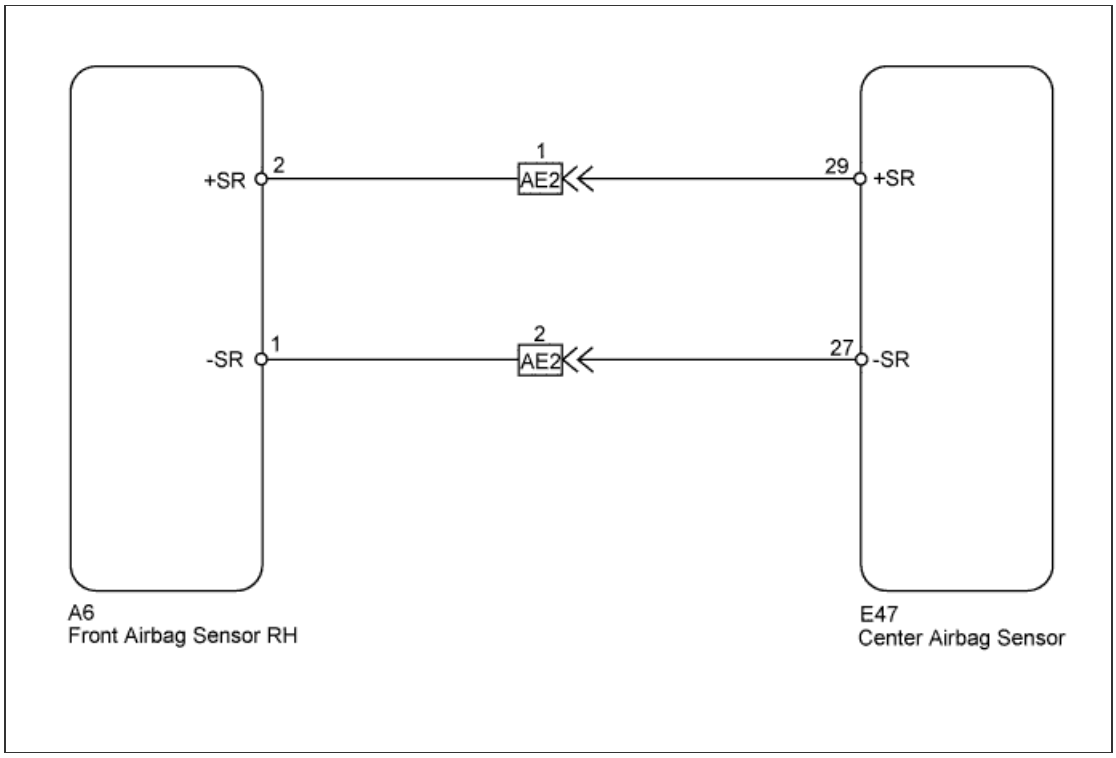

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (- battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the front airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor RH.


b. Check that the connectors (on the center airbag sensor side and front airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR RH CIRCUIT

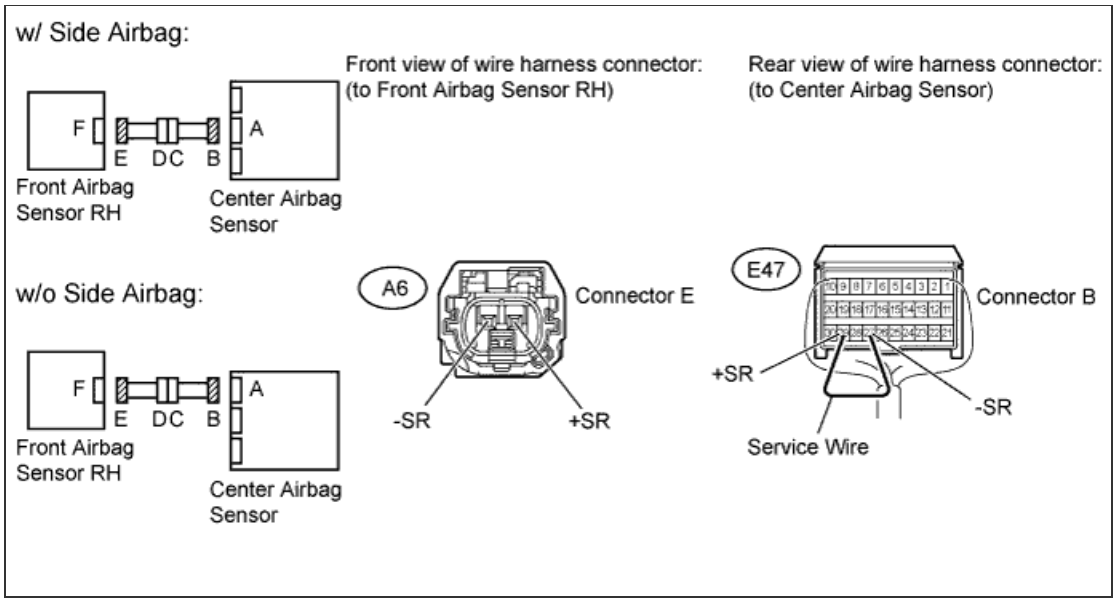

a. Connect the cable to the negative (- battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A6-2 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
A6-1 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	1 MΩ or higher
A6-2 (+SR) - Body ground	Always	1 MΩ or higher
A6-1 (-SR) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor H with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

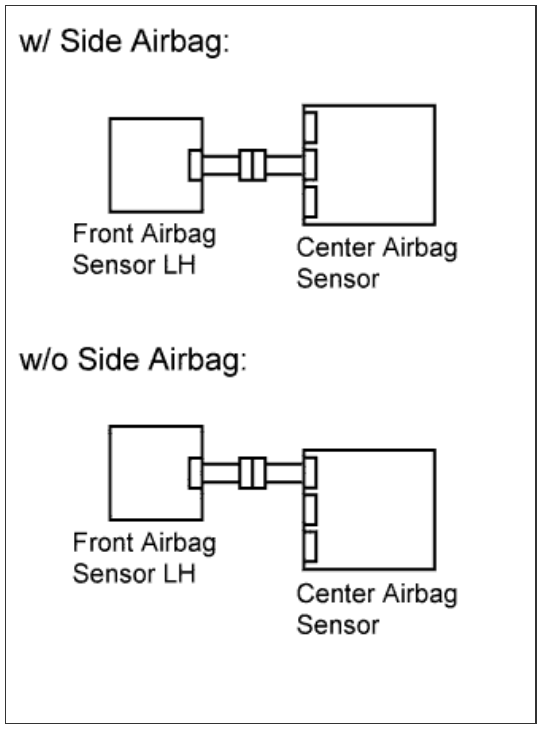

Result

Result	Proceed to
DTC B1612, B1613, B1617 and B1618 are not output	A
DTC B1617 or B1618 is output	B
DTC B1612 or B1613 is output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this check.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE FRONT AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

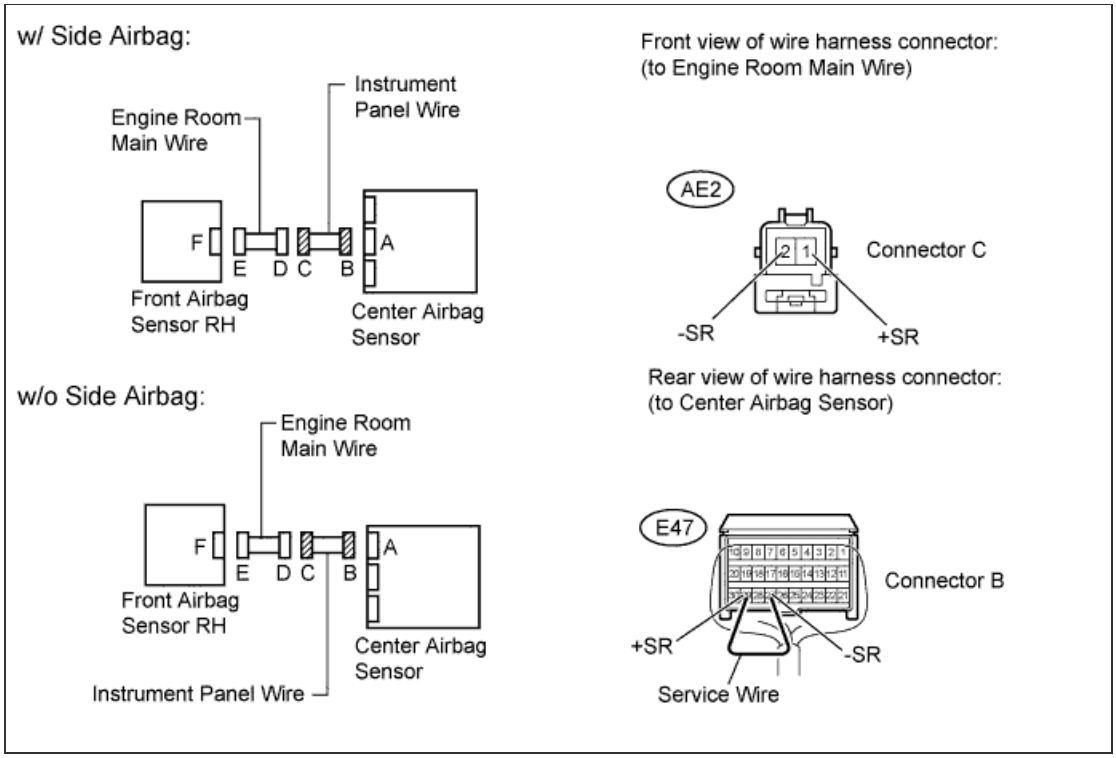

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE2-1 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
AE2-2 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminal 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminal of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	1 MΩ or higher
AE2-1 (+SR) - Body ground	Always	1 MΩ or higher
AE2-2 (-SR) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1825/56 Short in Side Squib LH Circuit

DTC B1826/56 Open in Side Squib LH Circuit

DTC B1827/56 Short to GND in Side Squib LH Circuit

DTC B1828/56 Short to B+ in Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The side squib LH circuit consists of the center airbag sensor and the front seat airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1825/56	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib LH circuit during the primary check. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1826/56	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib LH circuit for 2 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1827/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1828/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

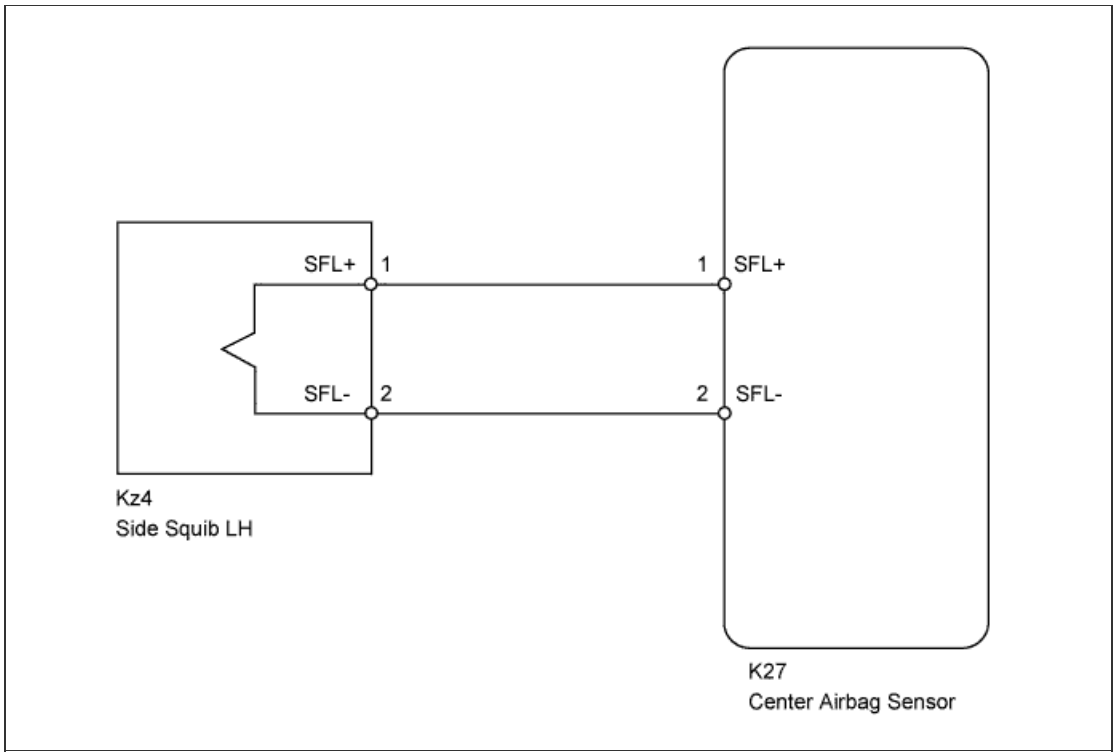

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG LH (SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag LH (side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

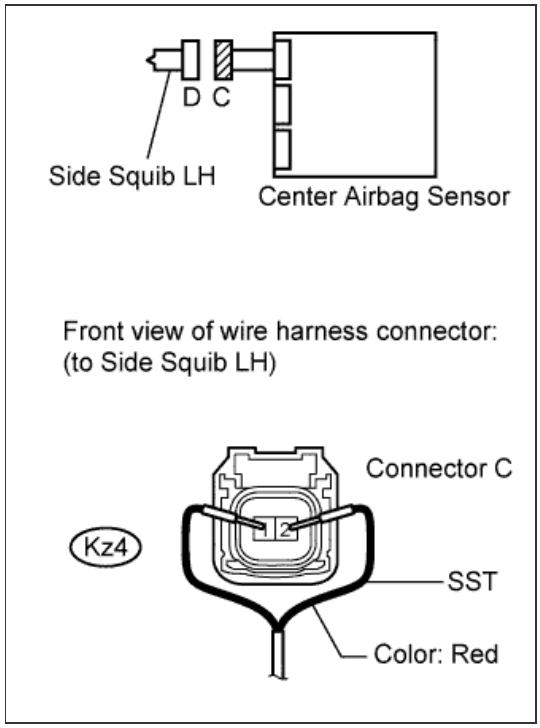

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B → REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

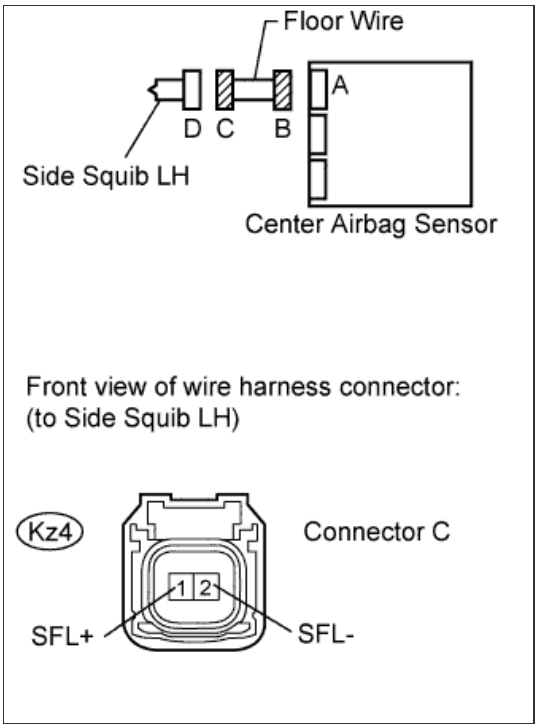

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz4-1 (SFL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz4-2 (SFL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	1 MΩ or higher
Kz4-1 (SFL+) - Body ground	Always	1 MΩ or higher
Kz4-2 (SFL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

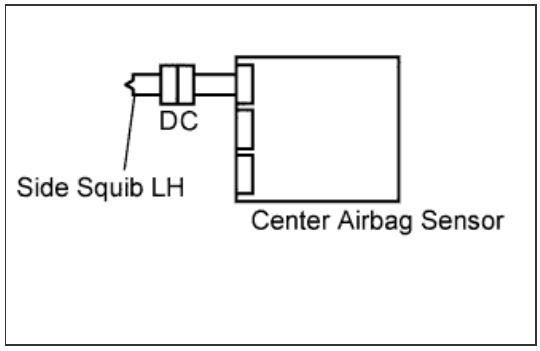

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1603/83 Front Satellite Sensor Bus RH Initialization Incomplete

DTC B1612/83 Lost Communication with Front Airbag Sensor RH

DTC B1613/83 Front Airbag Sensor RH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor RH circuit consists of the center airbag sensor and front airbag sensor RH.
The front airbag sensor RH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1603/83, B1612/83 or B1613/83 is stored when a malfunction is detected in the front airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1603/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1612/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1613/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

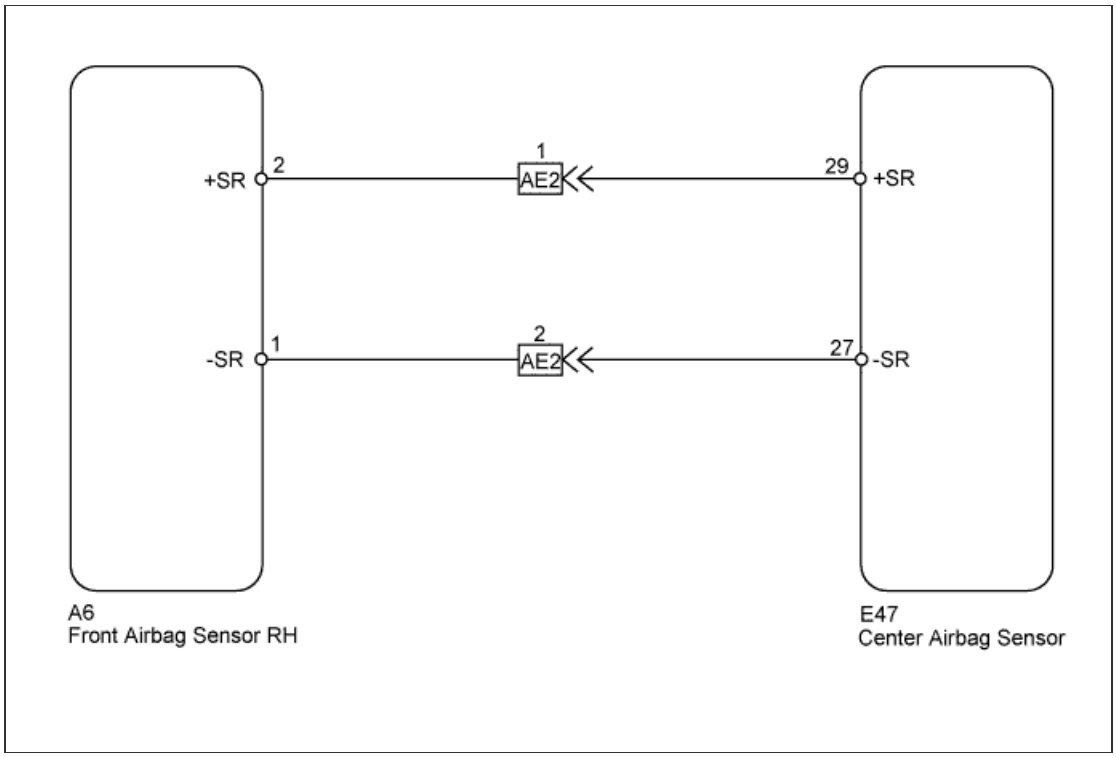

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (- battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the front airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor RH.


b. Check that the connectors (on the center airbag sensor side and front airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR RH CIRCUIT

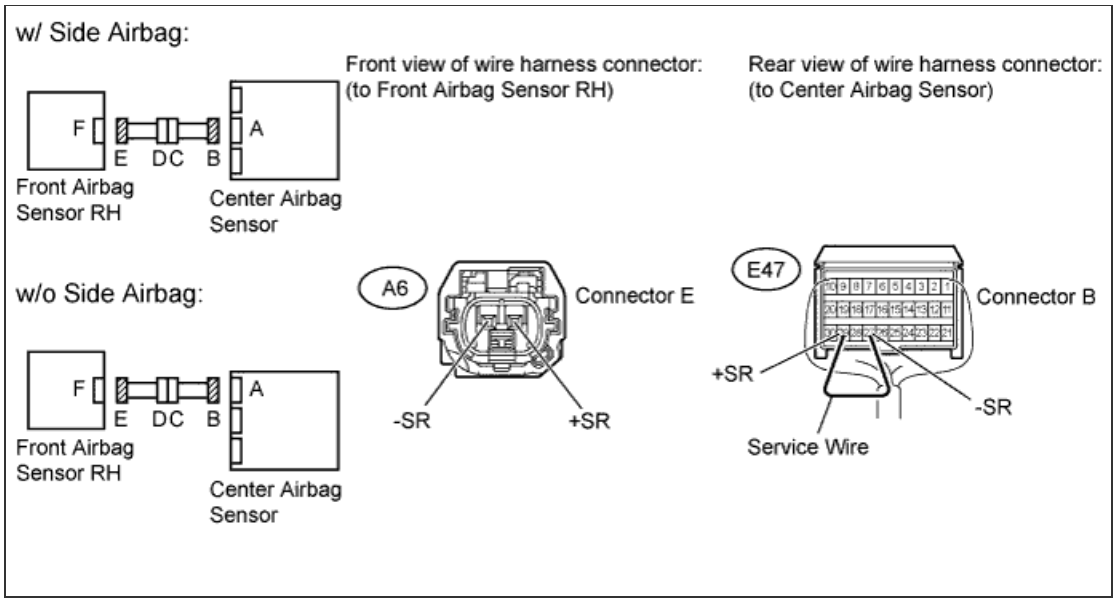

a. Connect the cable to the negative (- battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A6-2 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
A6-1 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	1 MΩ or higher
A6-2 (+SR) - Body ground	Always	1 MΩ or higher
A6-1 (-SR) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor H with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

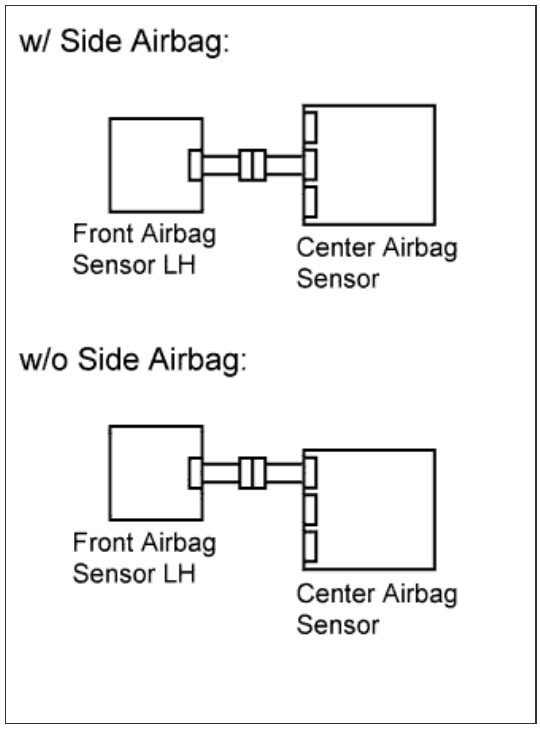

Result

Result	Proceed to
DTC B1612, B1613, B1617 and B1618 are not output	A
DTC B1617 or B1618 is output	B
DTC B1612 or B1613 is output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this check.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE FRONT AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

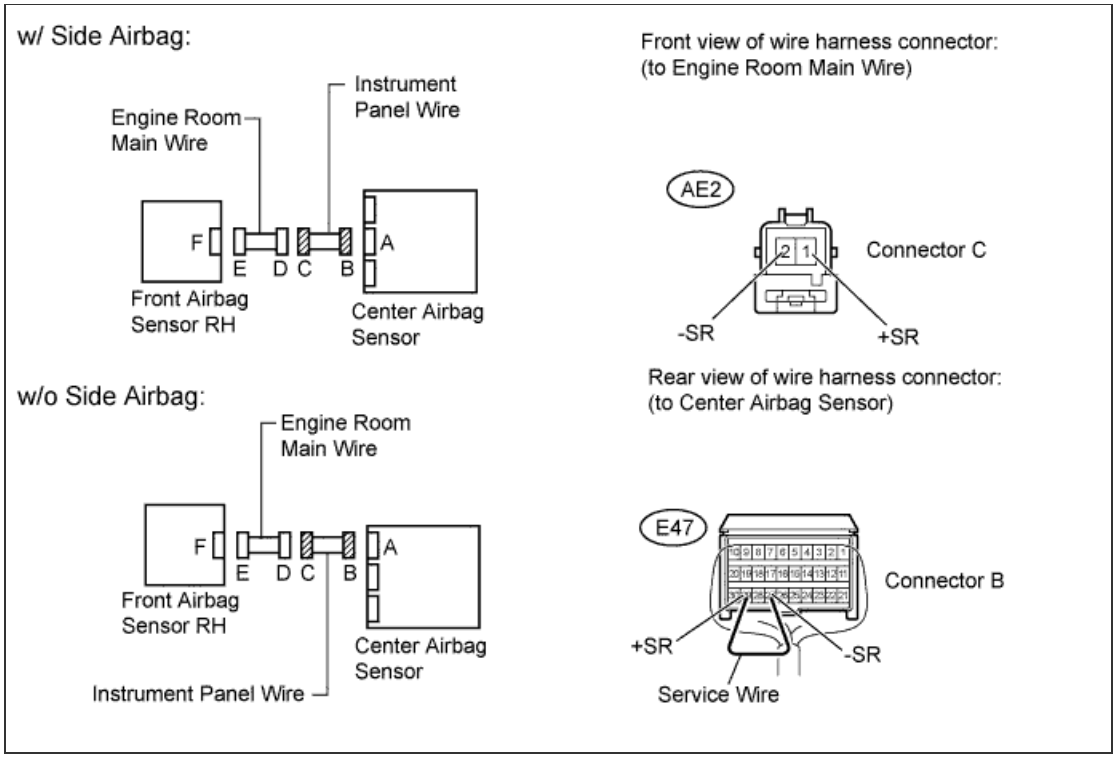

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE2-1 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
AE2-2 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminal 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminal of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	1 MΩ or higher
AE2-1 (+SR) - Body ground	Always	1 MΩ or higher
AE2-2 (-SR) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1825/56 Short in Side Squib LH Circuit

DTC B1826/56 Open in Side Squib LH Circuit

DTC B1827/56 Short to GND in Side Squib LH Circuit

DTC B1828/56 Short to B+ in Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The side squib LH circuit consists of the center airbag sensor and the front seat airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1825/56	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib LH circuit during the primary check. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1826/56	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib LH circuit for 2 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1827/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1828/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

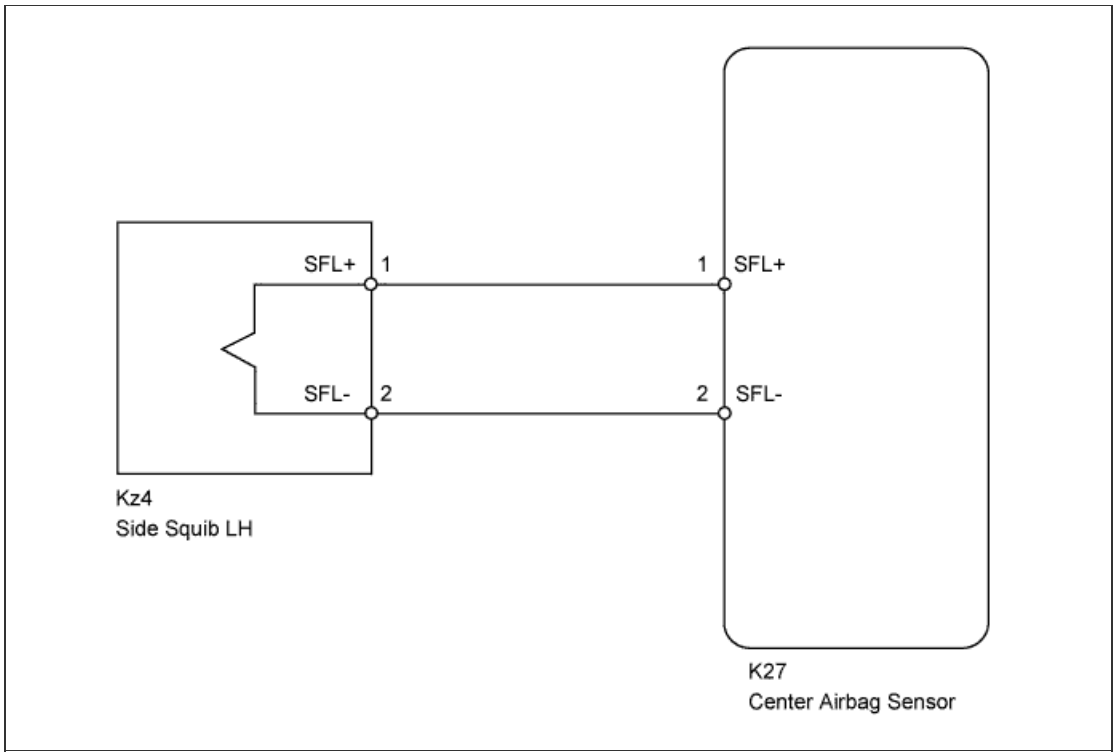

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG LH (SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag LH (side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

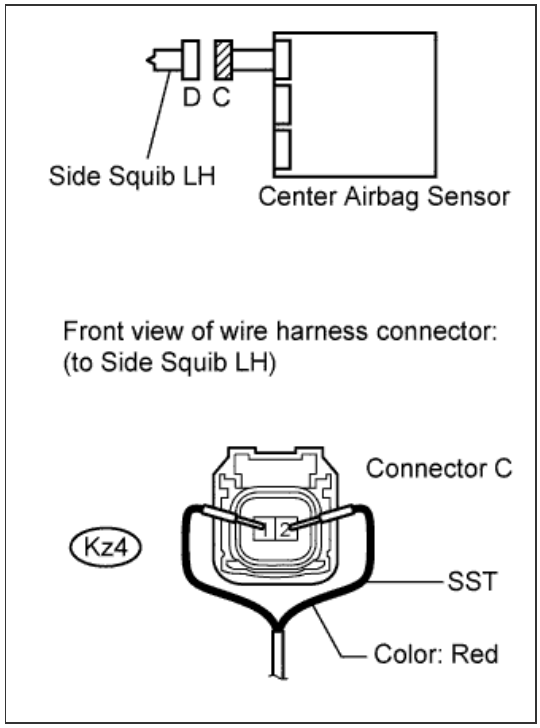

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B → REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

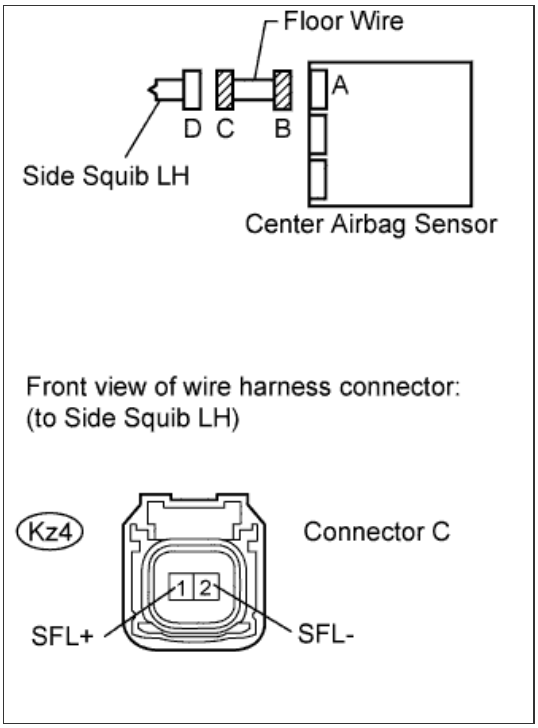

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz4-1 (SFL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz4-2 (SFL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	1 MΩ or higher
Kz4-1 (SFL+) - Body ground	Always	1 MΩ or higher
Kz4-2 (SFL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

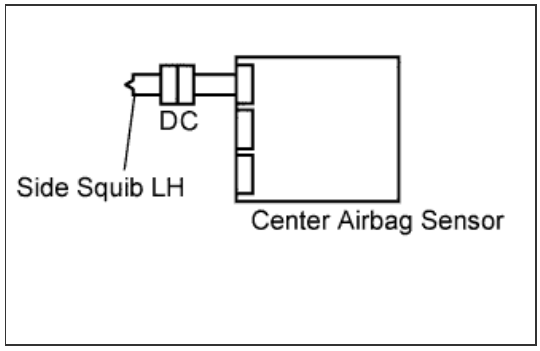

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1603/83 Front Satellite Sensor Bus RH Initialization Incomplete

DTC B1612/83 Lost Communication with Front Airbag Sensor RH

DTC B1613/83 Front Airbag Sensor RH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor RH circuit consists of the center airbag sensor and front airbag sensor RH.
The front airbag sensor RH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1603/83, B1612/83 or B1613/83 is stored when a malfunction is detected in the front airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1603/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1612/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1613/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

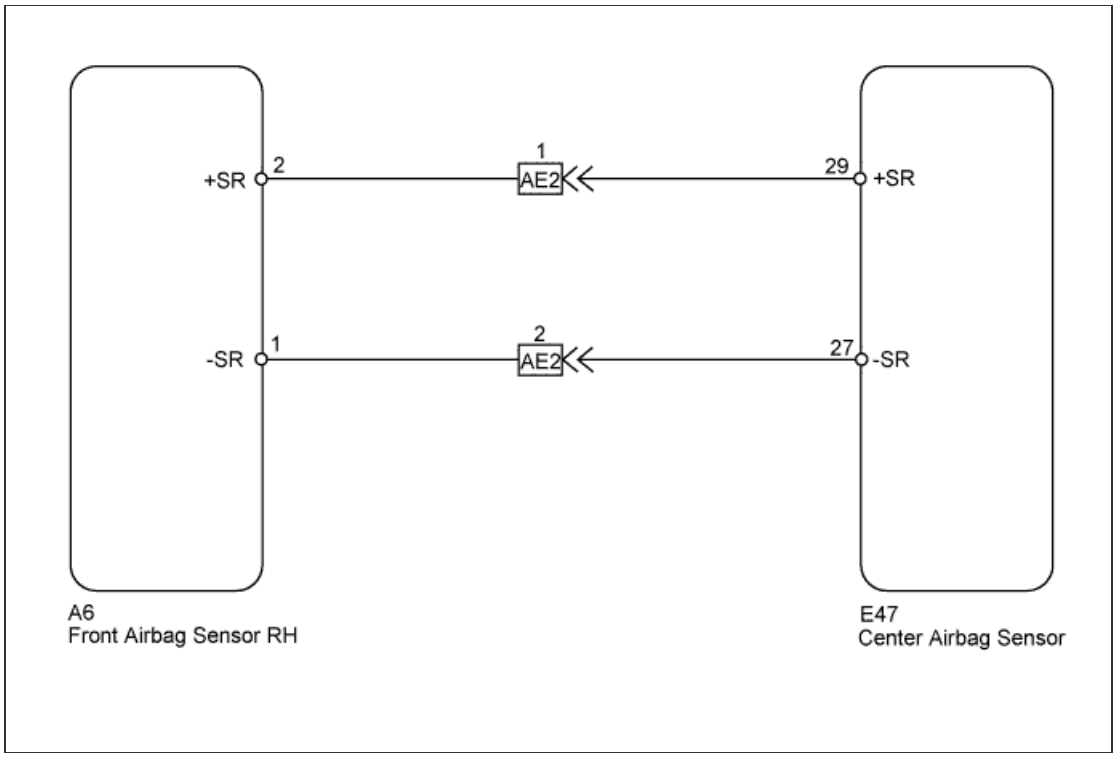

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (- battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the front airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor RH.


b. Check that the connectors (on the center airbag sensor side and front airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR RH CIRCUIT

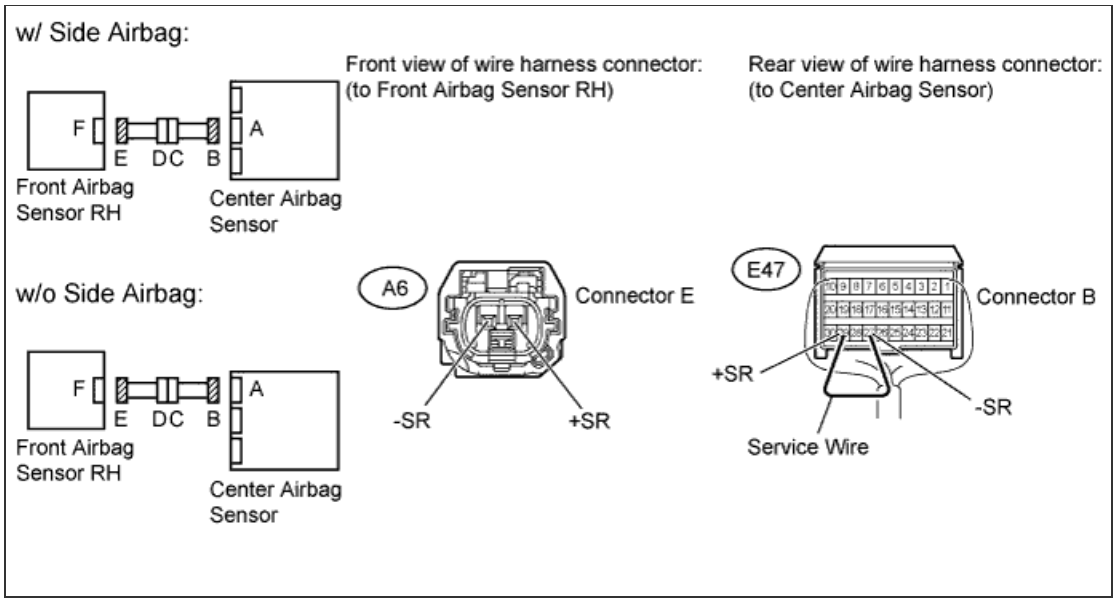

a. Connect the cable to the negative (- battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A6-2 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
A6-1 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	1 MΩ or higher
A6-2 (+SR) - Body ground	Always	1 MΩ or higher
A6-1 (-SR) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor H with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

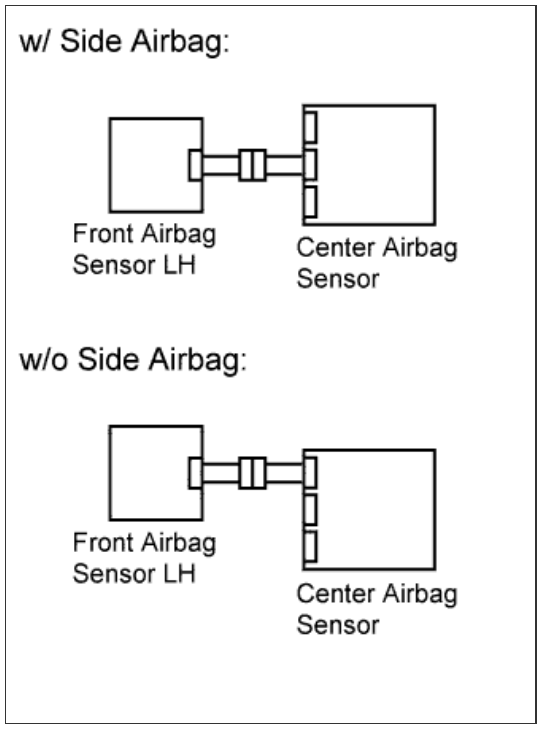

Result

Result	Proceed to
DTC B1612, B1613, B1617 and B1618 are not output	A
DTC B1617 or B1618 is output	B
DTC B1612 or B1613 is output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this check.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE FRONT AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

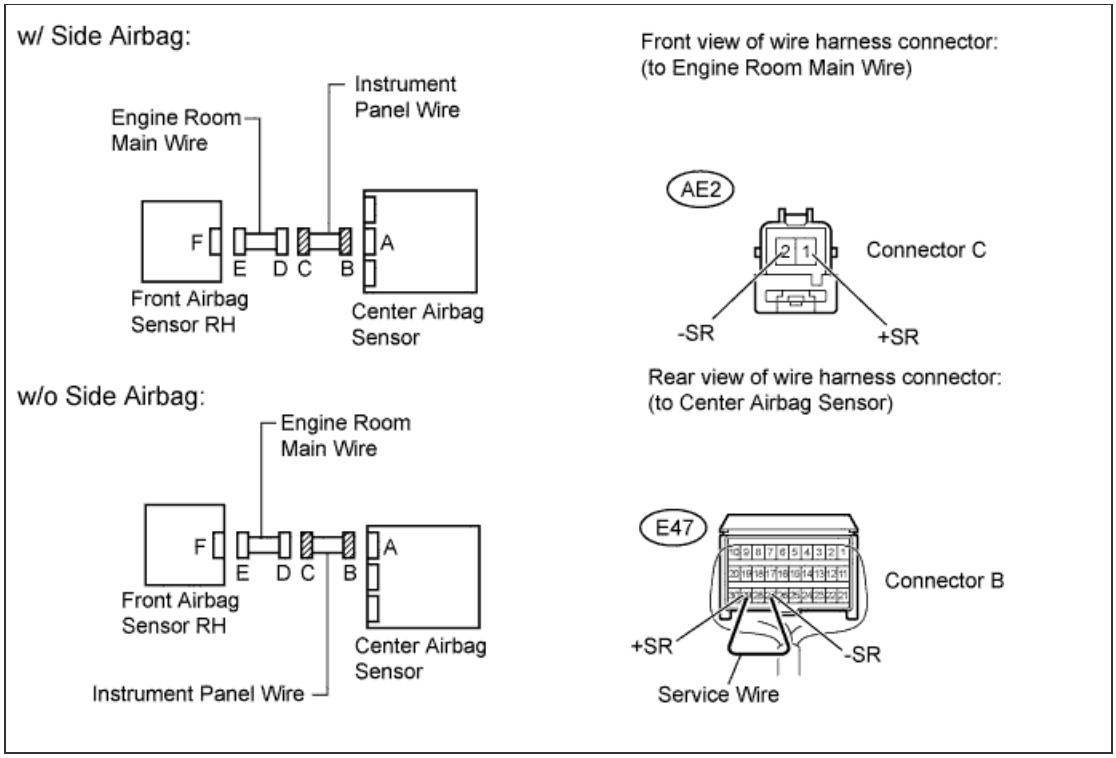

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE2-1 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
AE2-2 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminal 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminal of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	1 MΩ or higher
AE2-1 (+SR) - Body ground	Always	1 MΩ or higher
AE2-2 (-SR) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1825/56 Short in Side Squib LH Circuit

DTC B1826/56 Open in Side Squib LH Circuit

DTC B1827/56 Short to GND in Side Squib LH Circuit

DTC B1828/56 Short to B+ in Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The side squib LH circuit consists of the center airbag sensor and the front seat airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1825/56	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib LH circuit during the primary check. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1826/56	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib LH circuit for 2 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1827/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1828/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

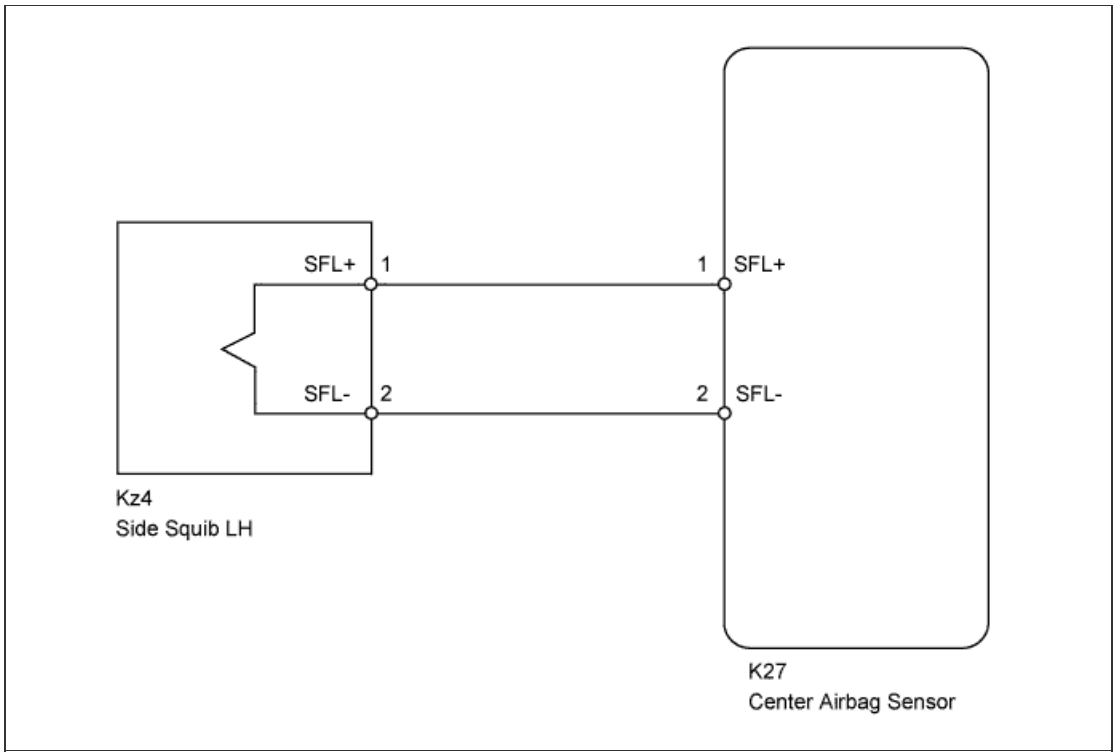

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG LH (SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag LH (side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

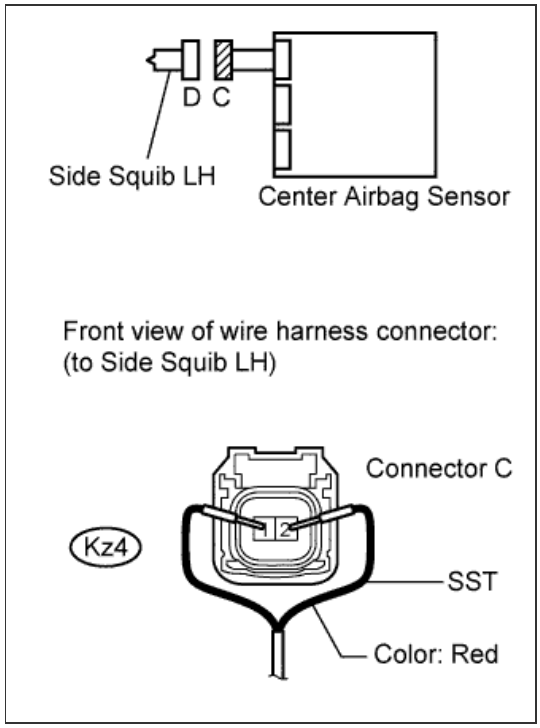

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B → REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

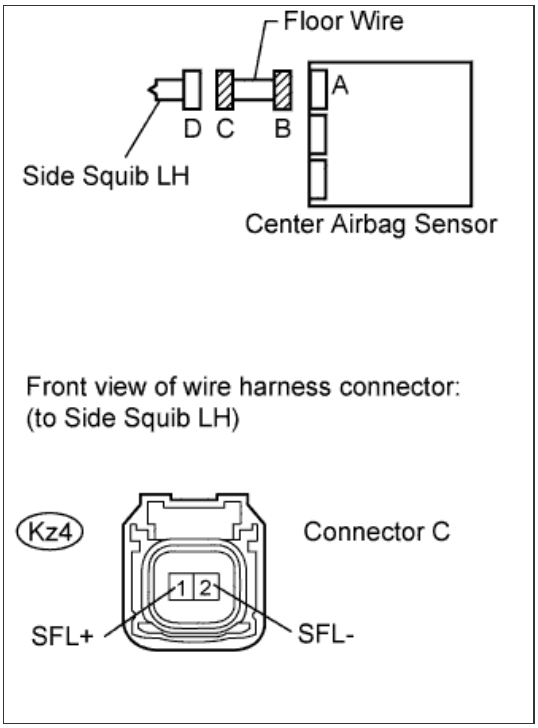

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz4-1 (SFL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz4-2 (SFL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	1 MΩ or higher
Kz4-1 (SFL+) - Body ground	Always	1 MΩ or higher
Kz4-2 (SFL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

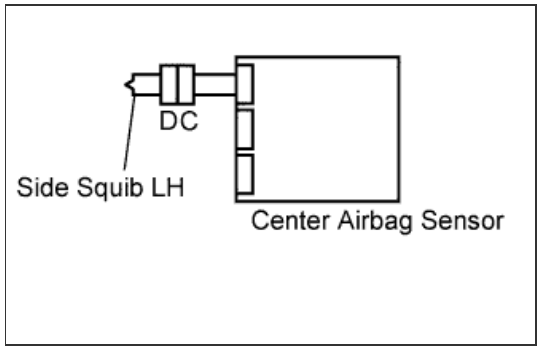

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1603/83 Front Satellite Sensor Bus RH Initialization Incomplete

DTC B1612/83 Lost Communication with Front Airbag Sensor RH

DTC B1613/83 Front Airbag Sensor RH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor RH circuit consists of the center airbag sensor and front airbag sensor RH.
The front airbag sensor RH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1603/83, B1612/83 or B1613/83 is stored when a malfunction is detected in the front airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1603/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1612/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly
B1613/83	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor RH circuit for 2 seconds. • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

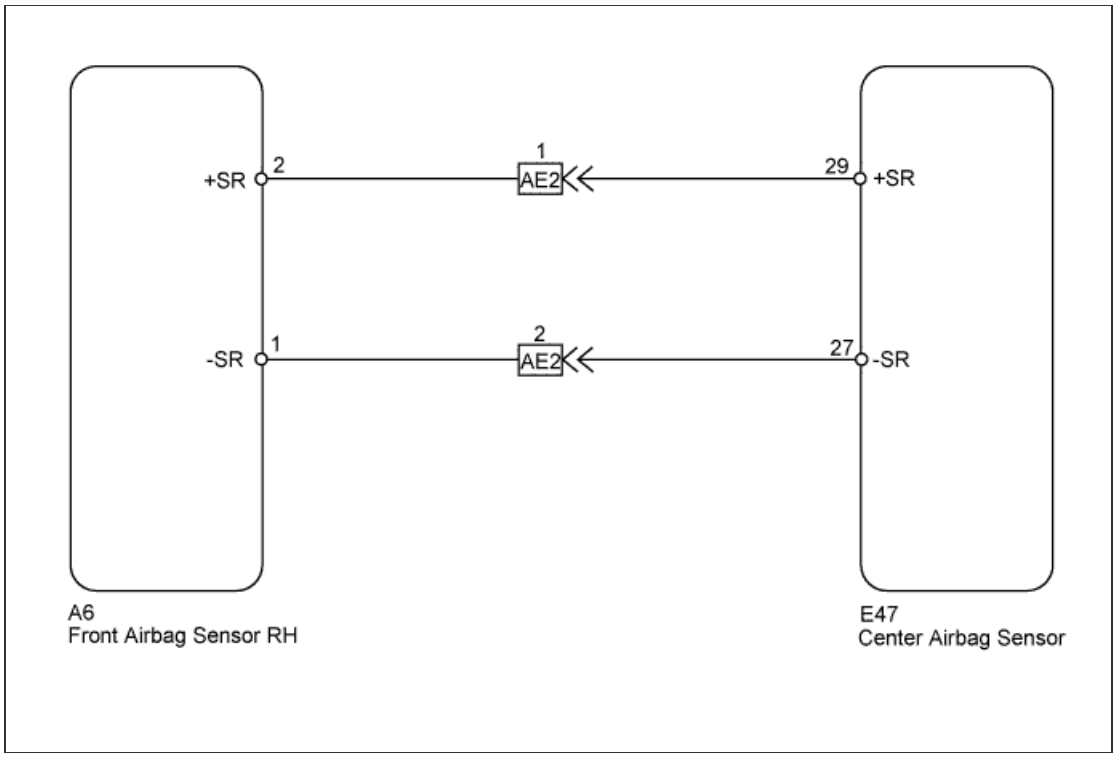

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (- battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the front airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor RH.


b. Check that the connectors (on the center airbag sensor side and front airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR RH CIRCUIT

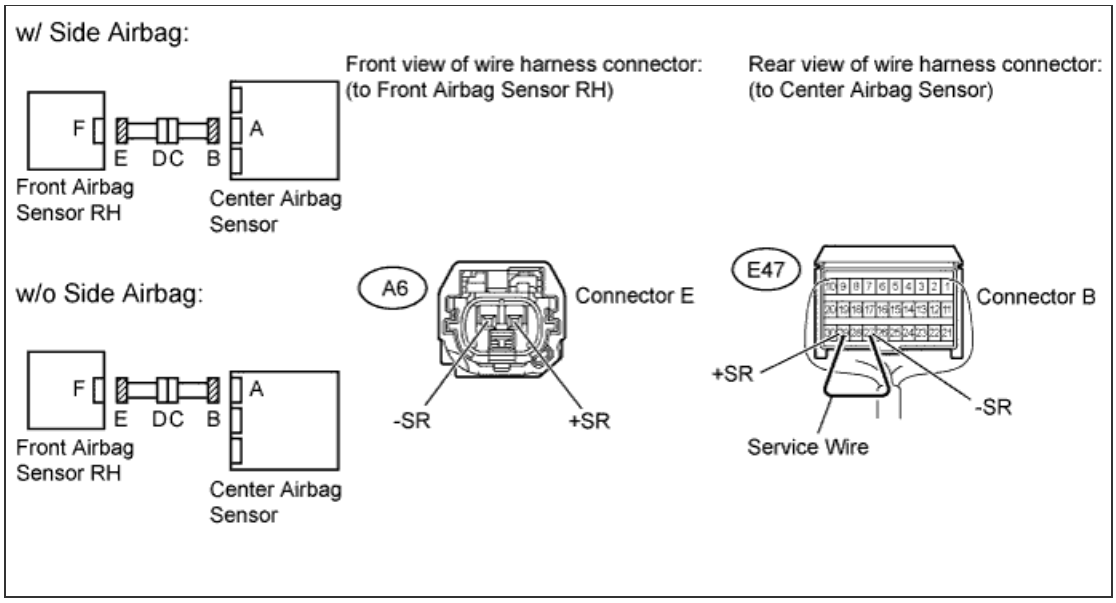

a. Connect the cable to the negative (- battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A6-2 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
A6-1 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A6-2 (+SR) - A6-1 (-SR)	Always	1 MΩ or higher
A6-2 (+SR) - Body ground	Always	1 MΩ or higher
A6-1 (-SR) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor H with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

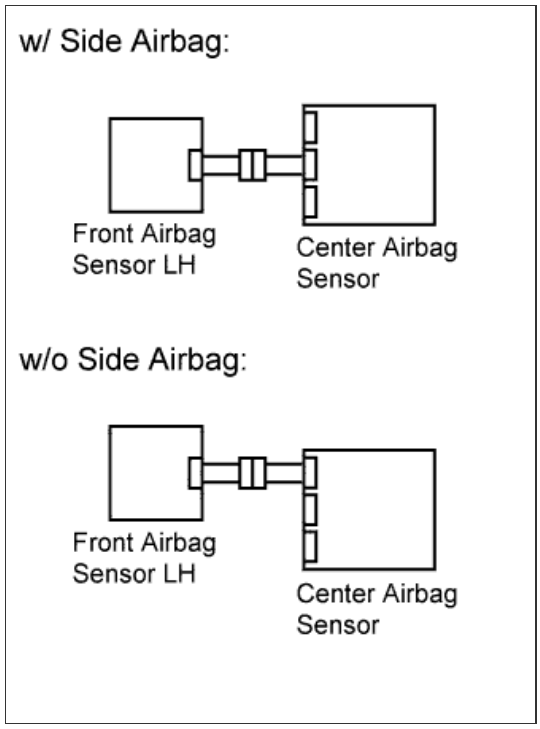

Result

Result	Proceed to
DTC B1612, B1613, B1617 and B1618 are not output	A
DTC B1617 or B1618 is output	B
DTC B1612 or B1613 is output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this check.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE FRONT AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

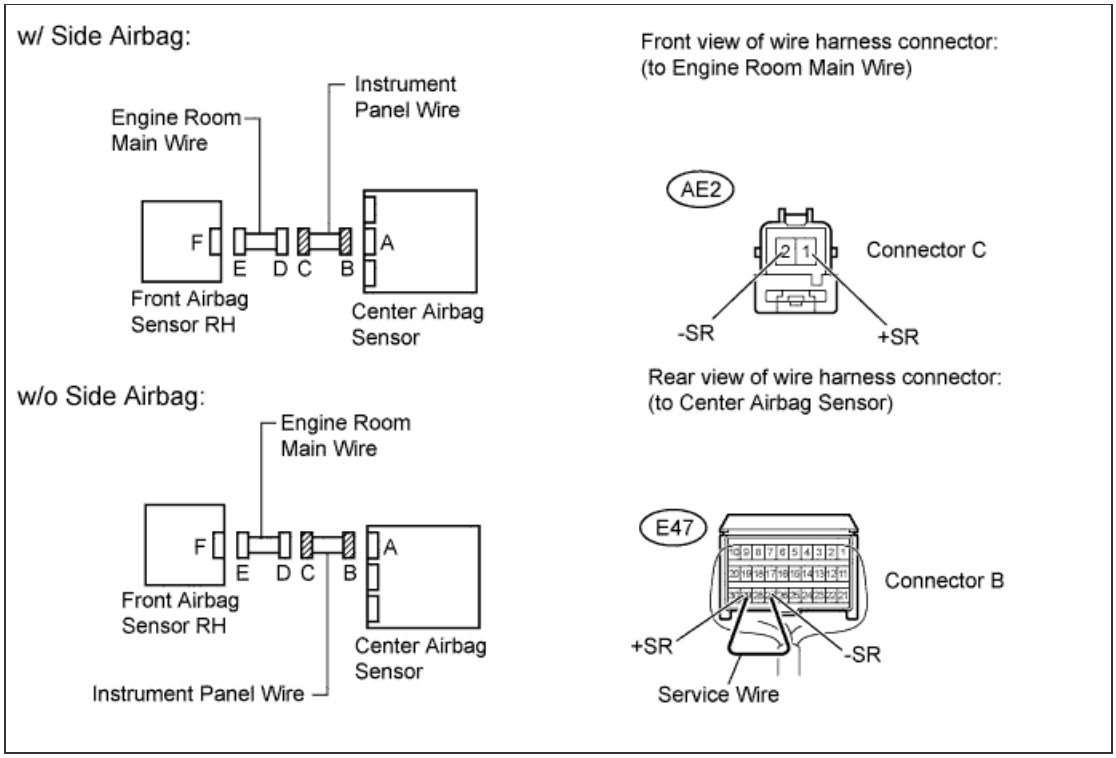

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE2-1 (+SR) - Body ground	Engine switch on (IG)	Below 1 V
AE2-2 (-SR) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminal 29 (+SR) and 27 (-SR) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminal of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE2-1 (+SR) - AE2-2 (-SR)	Always	1 MΩ or higher
AE2-1 (+SR) - Body ground	Always	1 MΩ or higher
AE2-2 (-SR) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1825/56 Short in Side Squib LH Circuit

DTC B1826/56 Open in Side Squib LH Circuit

DTC B1827/56 Short to GND in Side Squib LH Circuit

DTC B1828/56 Short to B+ in Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The side squib LH circuit consists of the center airbag sensor and the front seat airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1825/56	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib LH circuit during the primary check. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1826/56	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib LH circuit for 2 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1827/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1828/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

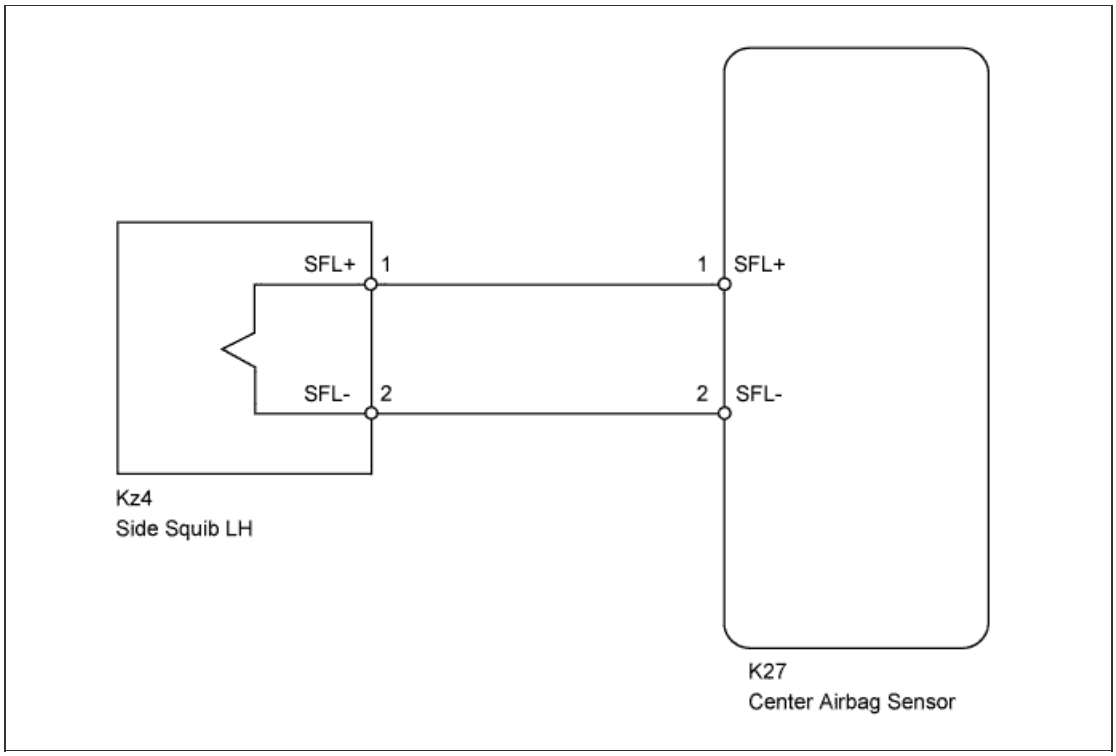

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG LH (SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag LH (side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

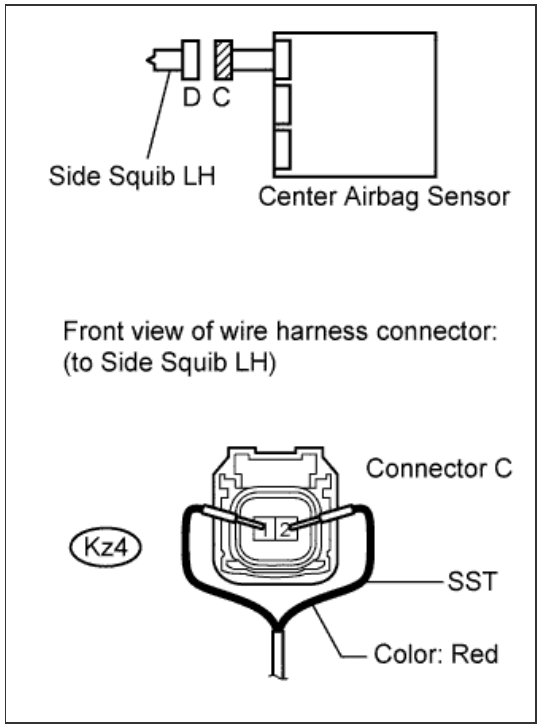

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B → REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

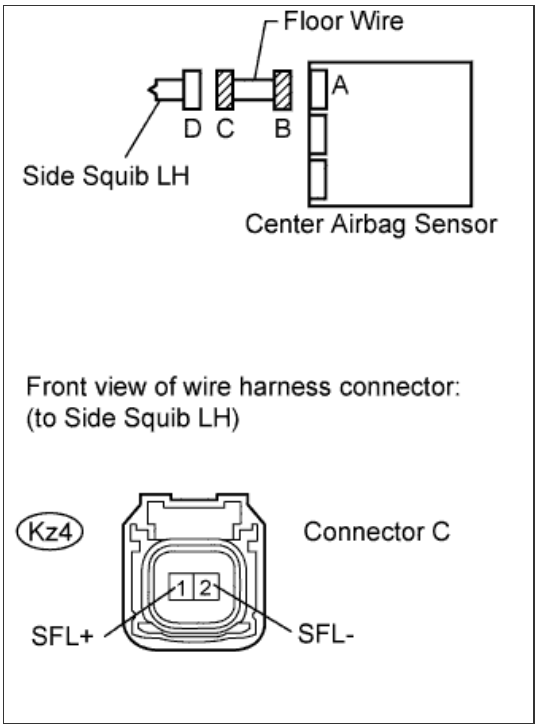

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz4-1 (SFL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz4-2 (SFL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	1 MΩ or higher
Kz4-1 (SFL+) - Body ground	Always	1 MΩ or higher
Kz4-2 (SFL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

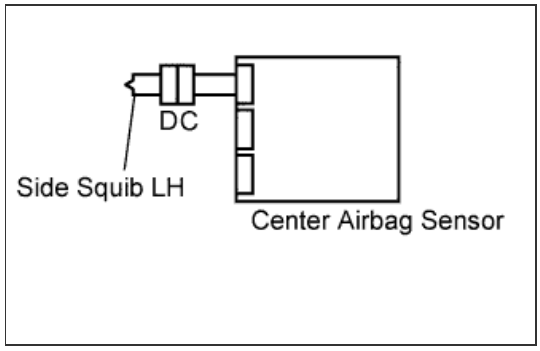

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1608/84 Front Satellite Sensor Bus LH Initialization Incomplete

DTC B1617/84 Lost Communication with Front Airbag Sensor LH

DTC B1618/84 Front Airbag Sensor LH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor LH circuit consists of the center airbag sensor and front airbag sensor LH.
The front airbag sensor LH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1608/84, B1617/84 or B1618/84 is stored when a malfunction is detected in the front airbag sensor LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1608/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1617/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1618/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

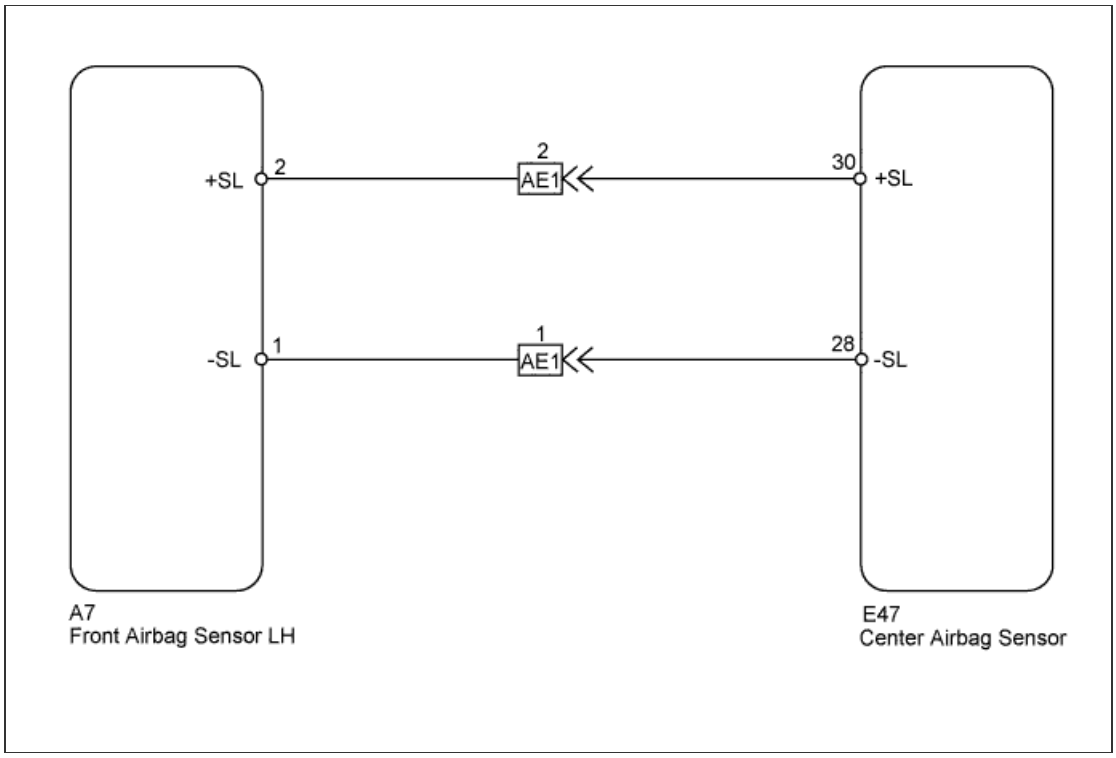

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initiali ed after the cable is reconnected (Clic here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Chec that the connectors are properly connected to the center airbag sensor and the front airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor LH.


b. Chec that the connectors (on the center airbag sensor side and front airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR LH CIRCUIT

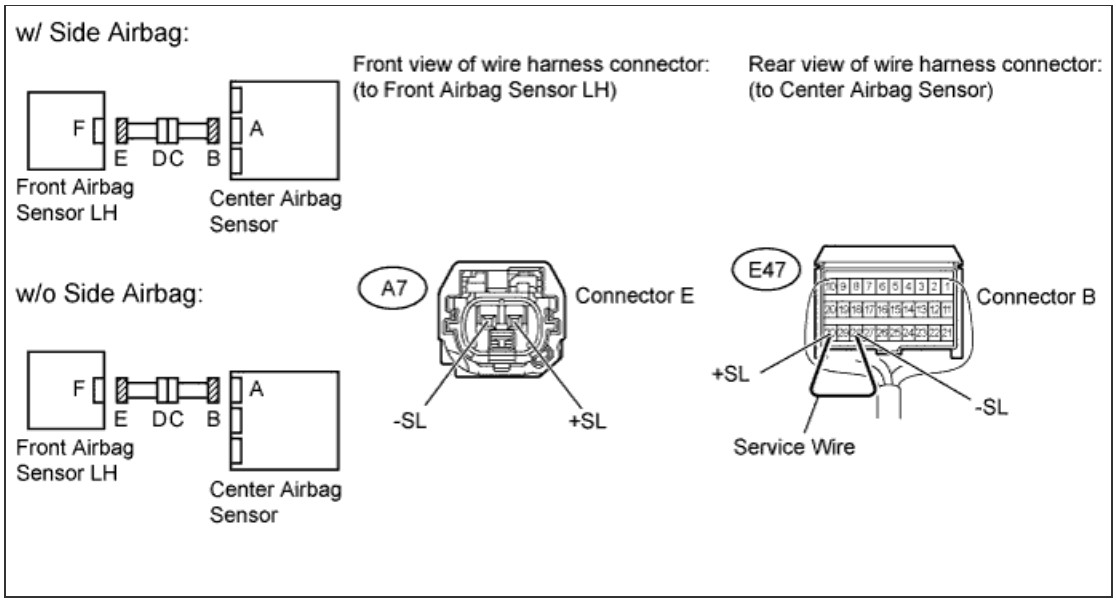

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A7-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
A7-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	1 Ω or higher
A7-2 (L) - Body ground	Always	1 Ω or higher
A7-1 (-SL) - Body ground	Always	1 Ω or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR LH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor LH with H and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Clic here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Chec for DTCs (Clic here).

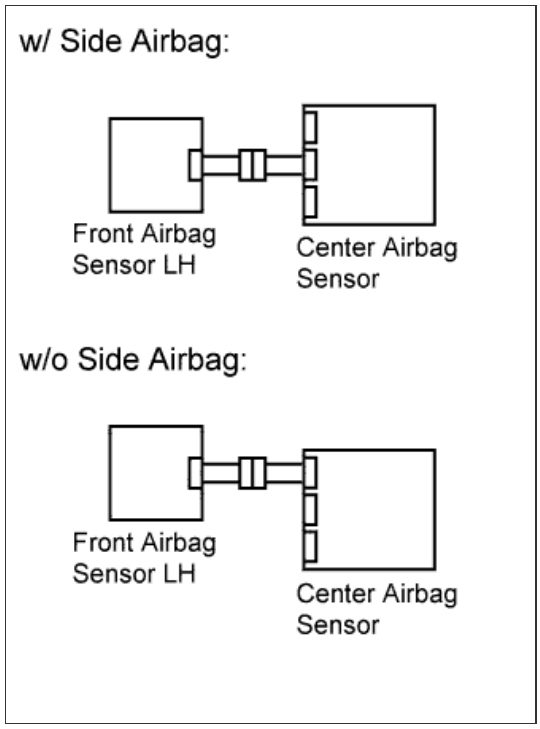

Result

esult	roceed to
DTC B1617 or B1618 is output	A
DTC B1612 or B1613 is output	B
DTC B1612, B1613, B1617 and B1618 are not output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this chec .


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE FRONT AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

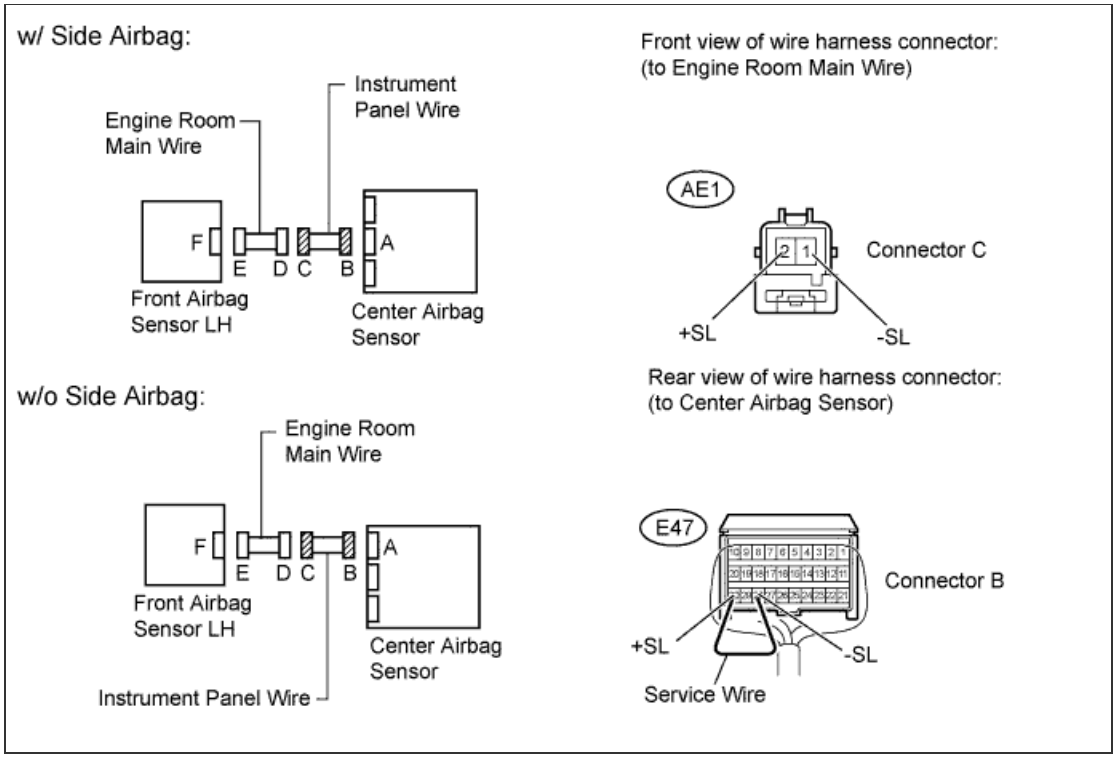

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE1-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
AE1-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	1 Ω or higher
AE1-2 (L) - Body ground	Always	1 Ω or higher
AE1-1 (-SL) - Body ground	Always	1 Ω or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1825/56 Short in Side Squib LH Circuit

DTC B1826/56 Open in Side Squib LH Circuit

DTC B1827/56 Short to GND in Side Squib LH Circuit

DTC B1828/56 Short to B+ in Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The side squib LH circuit consists of the center airbag sensor and the front seat airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1825/56	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib LH circuit during the primary check. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1826/56	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib LH circuit for 2 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1827/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1828/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

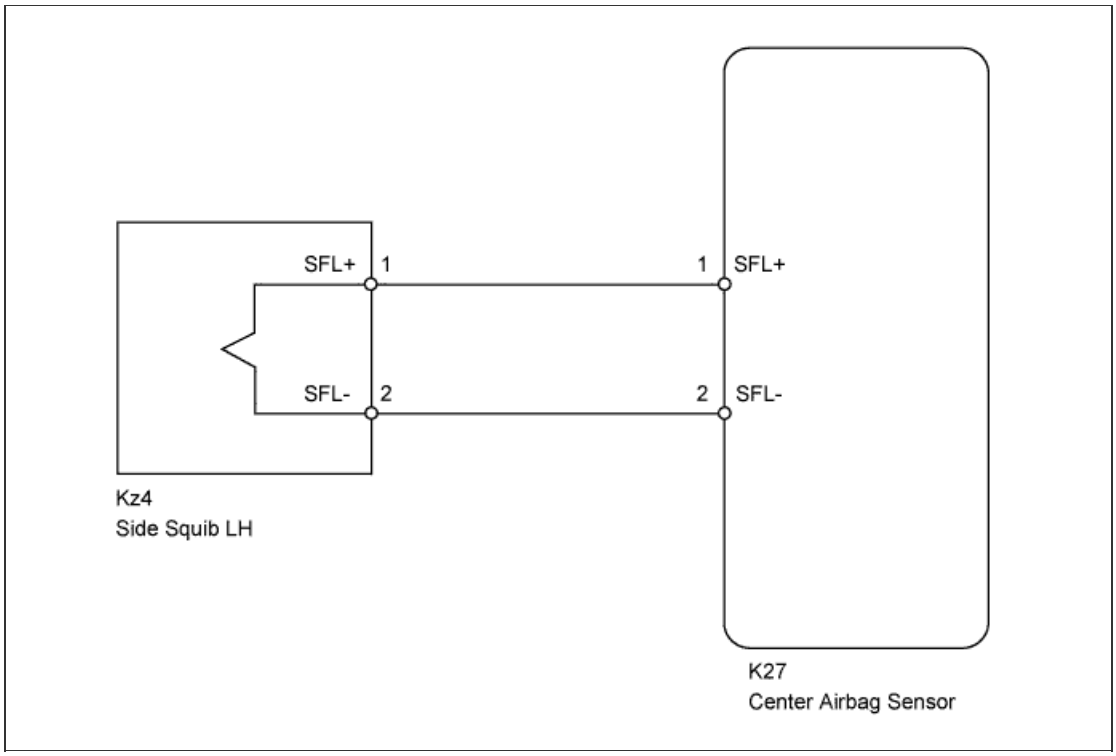

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG LH (SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag LH (side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

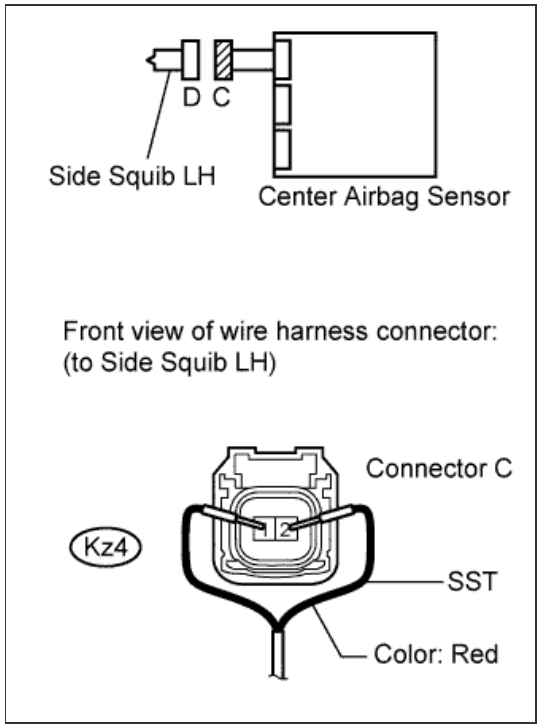

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B → REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

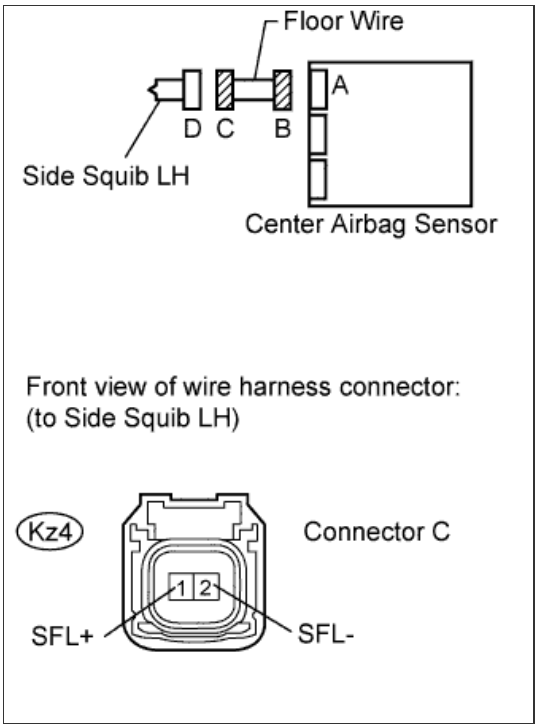

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz4-1 (SFL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz4-2 (SFL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	1 MΩ or higher
Kz4-1 (SFL+) - Body ground	Always	1 MΩ or higher
Kz4-2 (SFL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

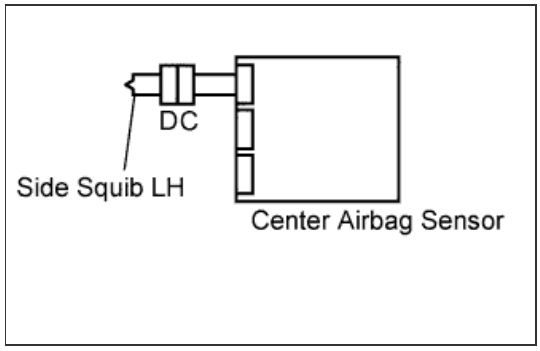

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1608/84 Front Satellite Sensor Bus LH Initialization Incomplete

DTC B1617/84 Lost Communication with Front Airbag Sensor LH

DTC B1618/84 Front Airbag Sensor LH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor LH circuit consists of the center airbag sensor and front airbag sensor LH.
The front airbag sensor LH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1608/84, B1617/84 or B1618/84 is stored when a malfunction is detected in the front airbag sensor LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1608/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1617/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1618/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

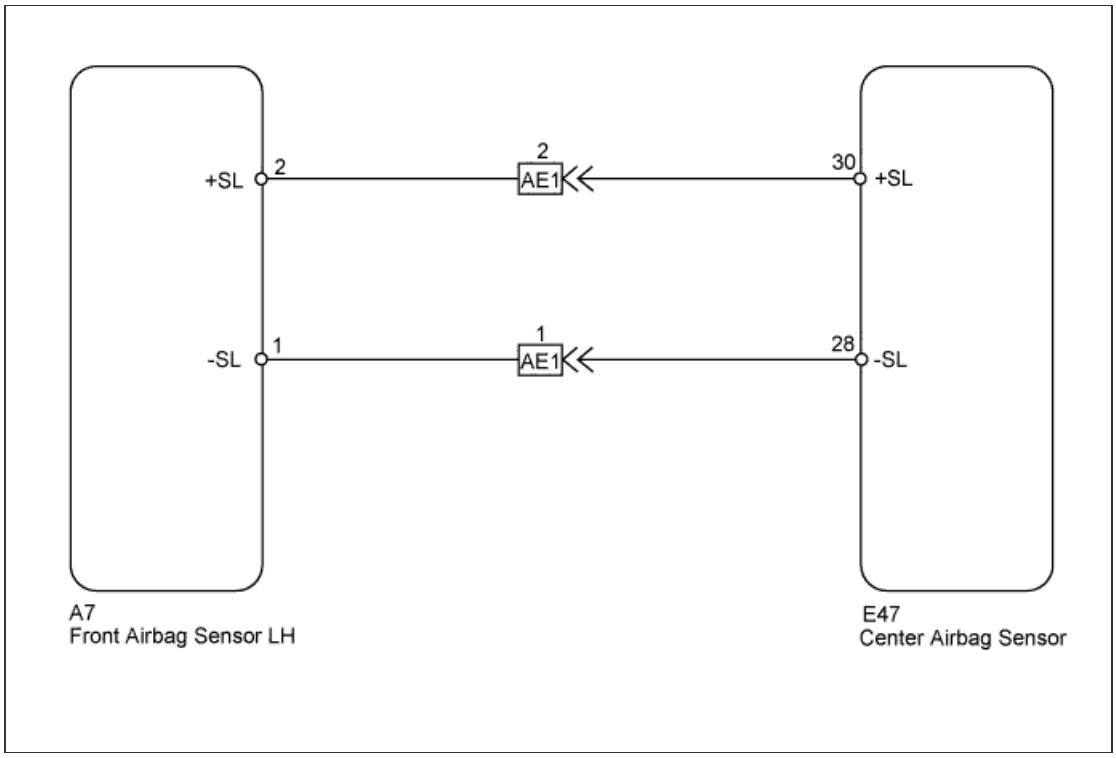

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initiali ed after the cable is reconnected (Clic here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Chec that the connectors are properly connected to the center airbag sensor and the front airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor LH.


b. Chec that the connectors (on the center airbag sensor side and front airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR LH CIRCUIT

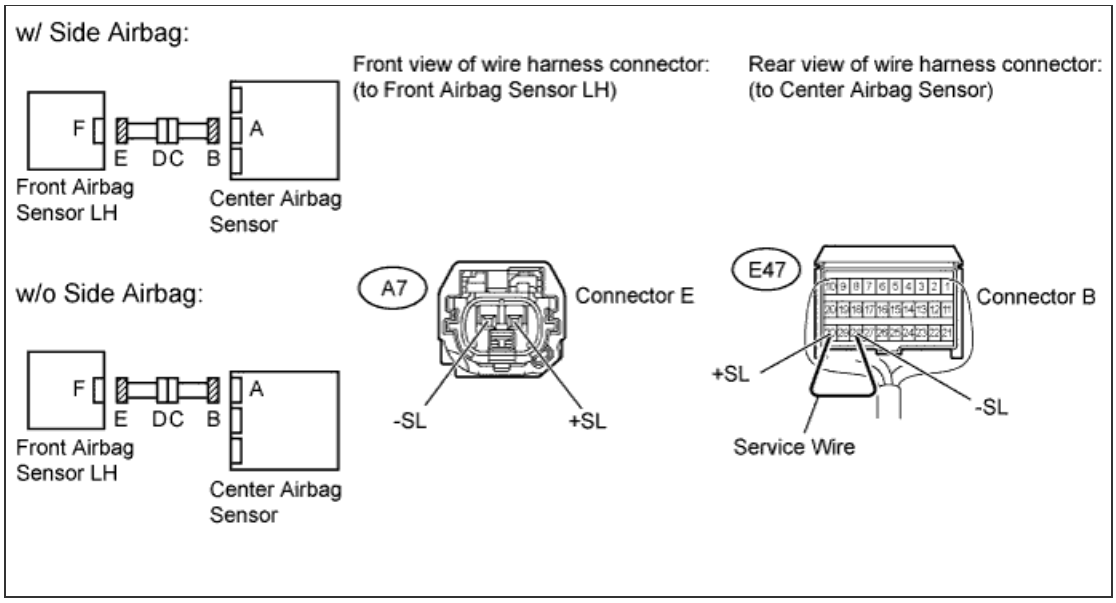

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A7-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
A7-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	1 Ω or higher
A7-2 (L) - Body ground	Always	1 Ω or higher
A7-1 (-SL) - Body ground	Always	1 Ω or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR LH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor LH with H and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Clic here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Chec for DTCs (Clic here).

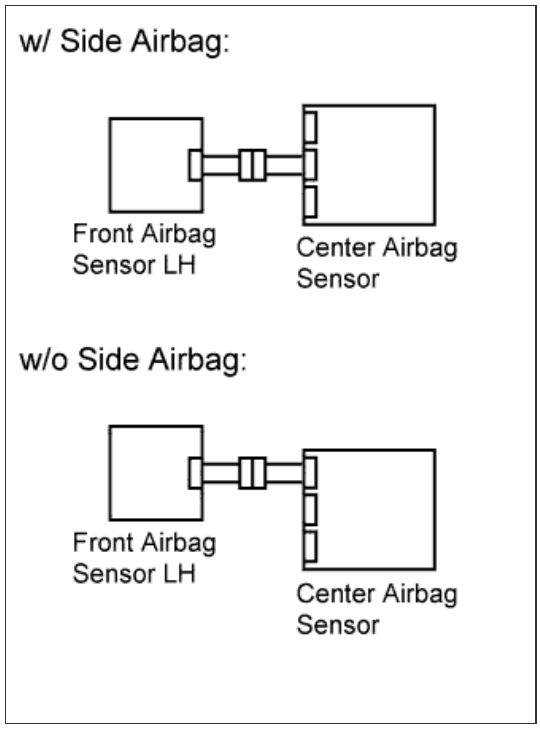

Result

esult	roceed to
DTC B1617 or B1618 is output	A
DTC B1612 or B1613 is output	B
DTC B1612, B1613, B1617 and B1618 are not output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this chec .


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE FRONT AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

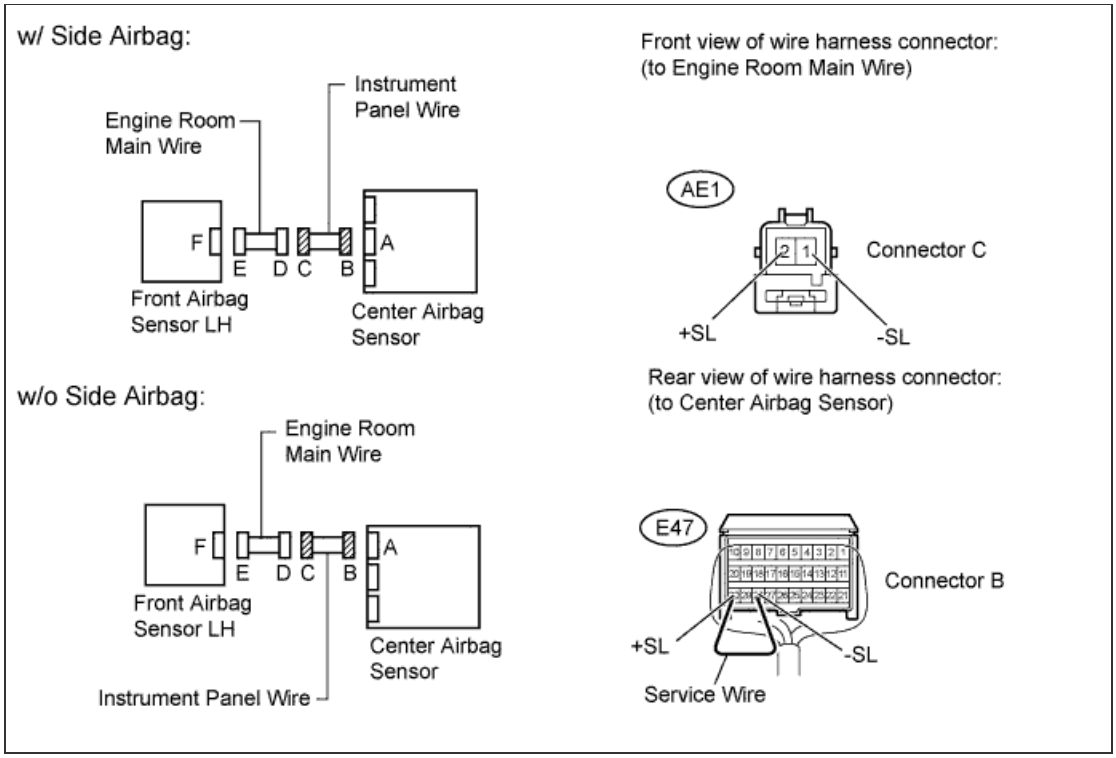

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE1-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
AE1-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	1 Ω or higher
AE1-2 (L) - Body ground	Always	1 Ω or higher
AE1-1 (-SL) - Body ground	Always	1 Ω or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1825/56 Short in Side Squib LH Circuit

DTC B1826/56 Open in Side Squib LH Circuit

DTC B1827/56 Short to GND in Side Squib LH Circuit

DTC B1828/56 Short to B+ in Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The side squib LH circuit consists of the center airbag sensor and the front seat airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1825/56	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib LH circuit during the primary check. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1826/56	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib LH circuit for 2 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1827/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1828/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

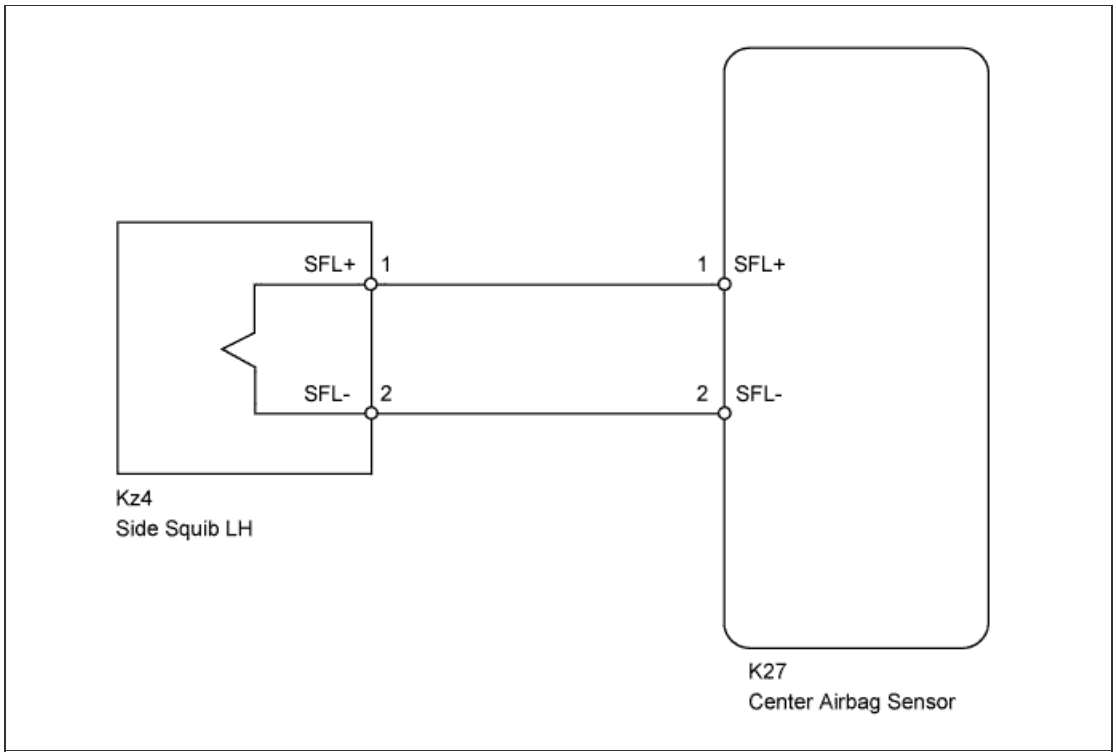

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG LH (SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag LH (side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

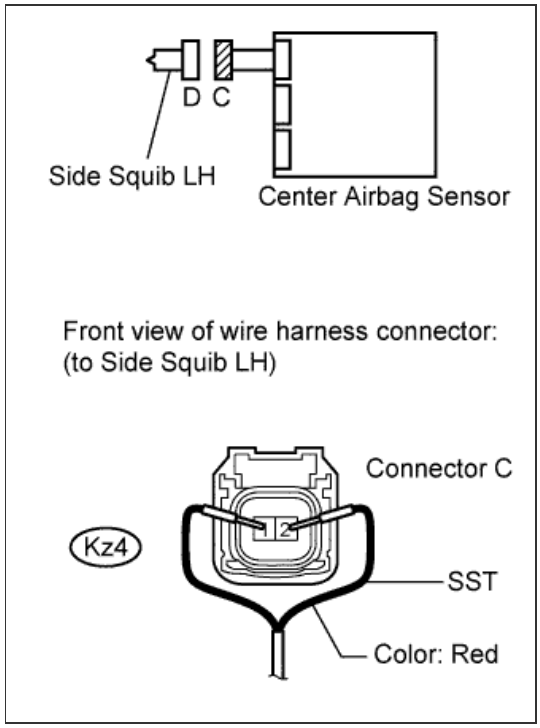

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B → REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

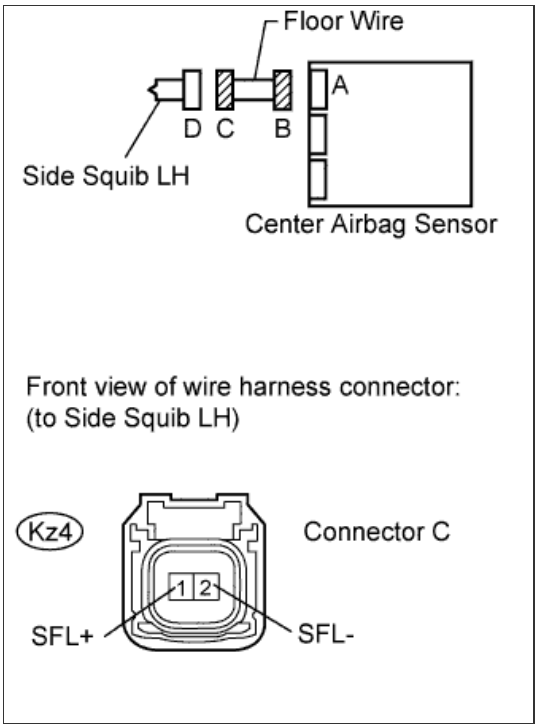

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz4-1 (SFL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz4-2 (SFL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	1 MΩ or higher
Kz4-1 (SFL+) - Body ground	Always	1 MΩ or higher
Kz4-2 (SFL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

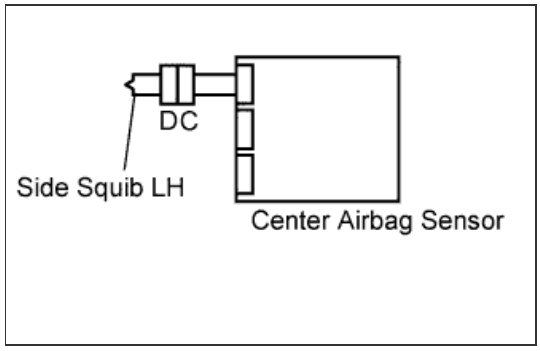

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1608/84 Front Satellite Sensor Bus LH Initialization Incomplete

DTC B1617/84 Lost Communication with Front Airbag Sensor LH

DTC B1618/84 Front Airbag Sensor LH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor LH circuit consists of the center airbag sensor and front airbag sensor LH.
The front airbag sensor LH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1608/84, B1617/84 or B1618/84 is stored when a malfunction is detected in the front airbag sensor LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1608/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1617/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1618/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

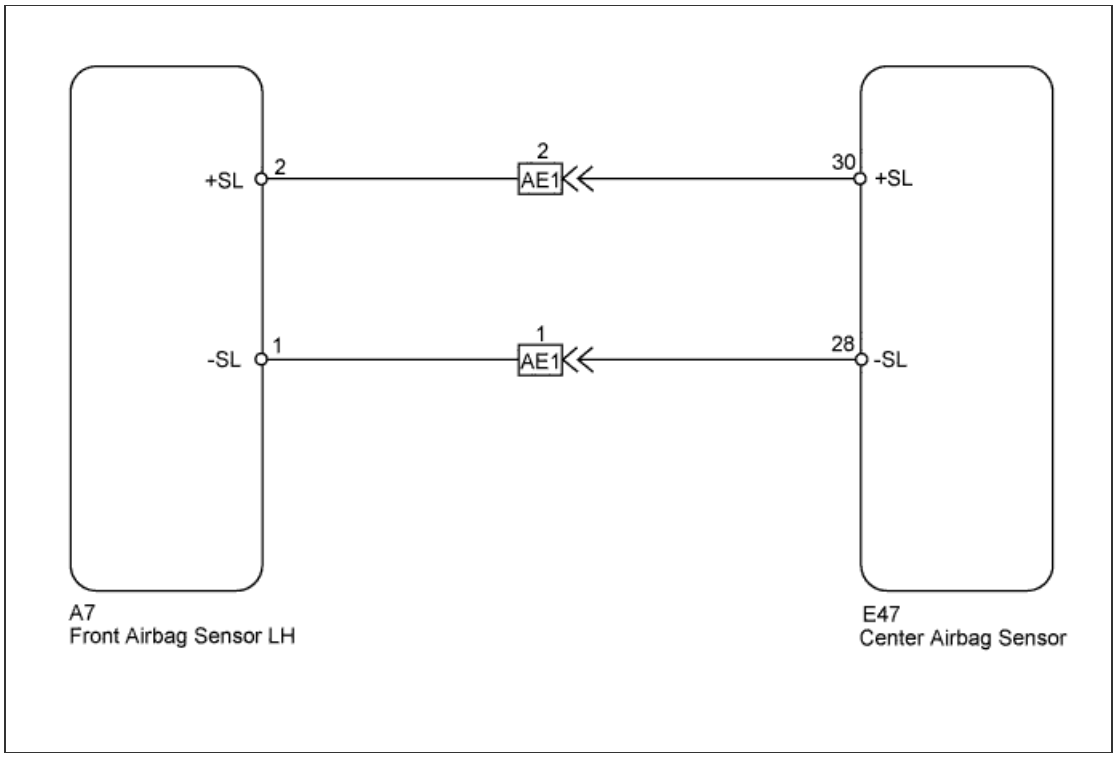

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initiali ed after the cable is reconnected (Clic here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Chec that the connectors are properly connected to the center airbag sensor and the front airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor LH.


b. Chec that the connectors (on the center airbag sensor side and front airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR LH CIRCUIT

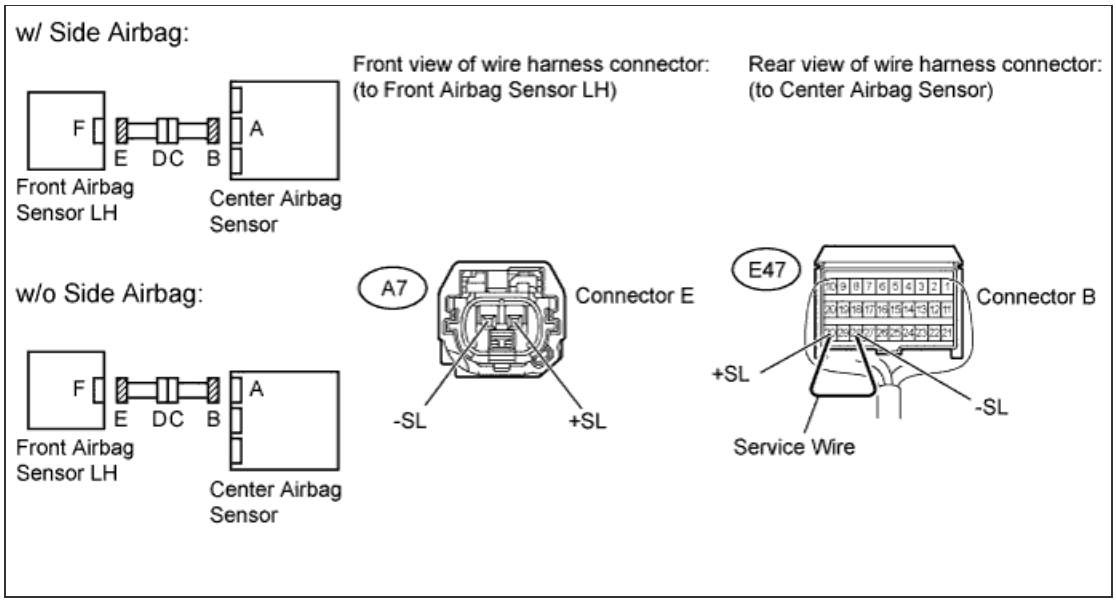

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A7-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
A7-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	1 Ω or higher
A7-2 (L) - Body ground	Always	1 Ω or higher
A7-1 (-SL) - Body ground	Always	1 Ω or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR LH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor LH with H and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Clic here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Chec for DTCs (Clic here).

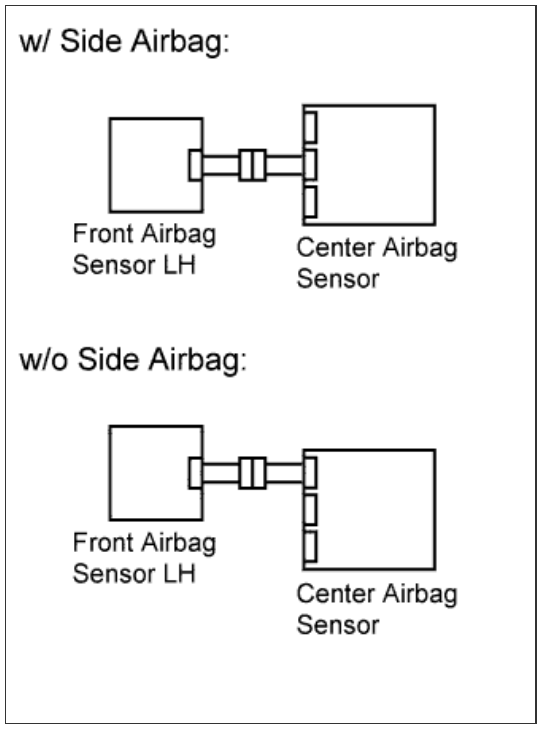

Result

esult	roceed to
DTC B1617 or B1618 is output	A
DTC B1612 or B1613 is output	B
DTC B1612, B1613, B1617 and B1618 are not output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this chec .


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE FRONT AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

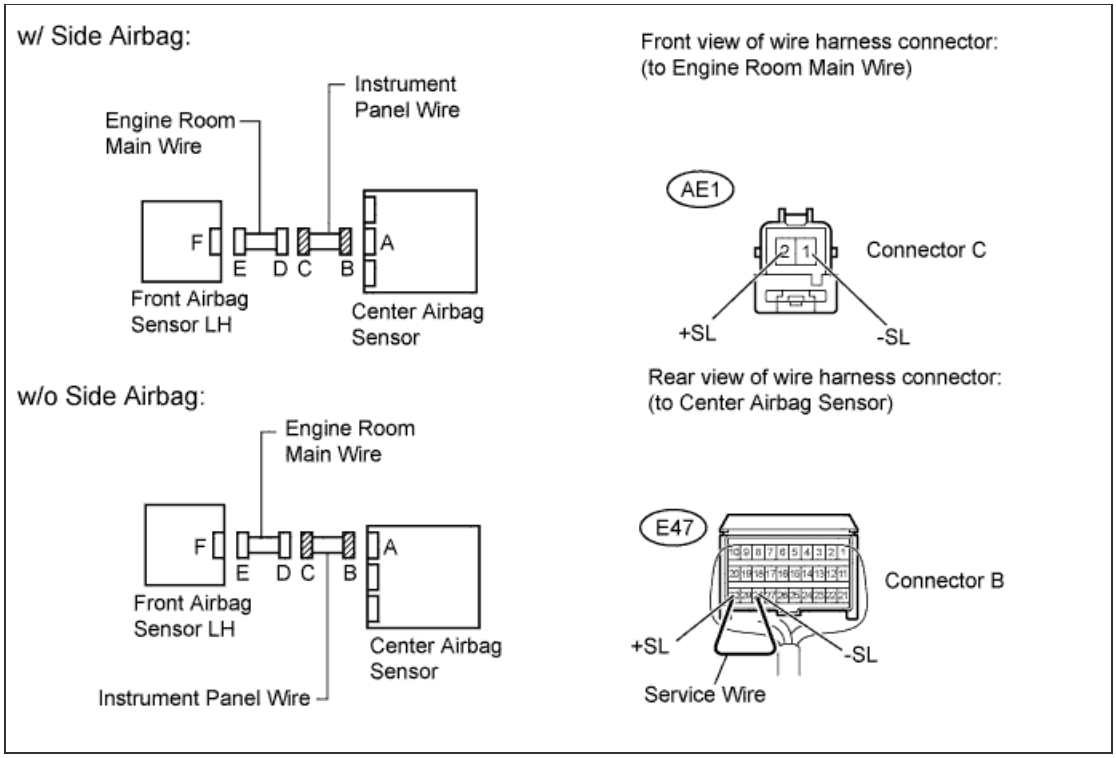

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE1-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
AE1-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	1 Ω or higher
AE1-2 (L) - Body ground	Always	1 Ω or higher
AE1-1 (-SL) - Body ground	Always	1 Ω or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1825/56 Short in Side Squib LH Circuit

DTC B1826/56 Open in Side Squib LH Circuit

DTC B1827/56 Short to GND in Side Squib LH Circuit

DTC B1828/56 Short to B+ in Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The side squib LH circuit consists of the center airbag sensor and the front seat airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1825/56	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib LH circuit during the primary check. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1826/56	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib LH circuit for 2 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1827/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly
B1828/56	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib LH circuit for 0.5 seconds. • A side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat airbag assembly LH (Side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

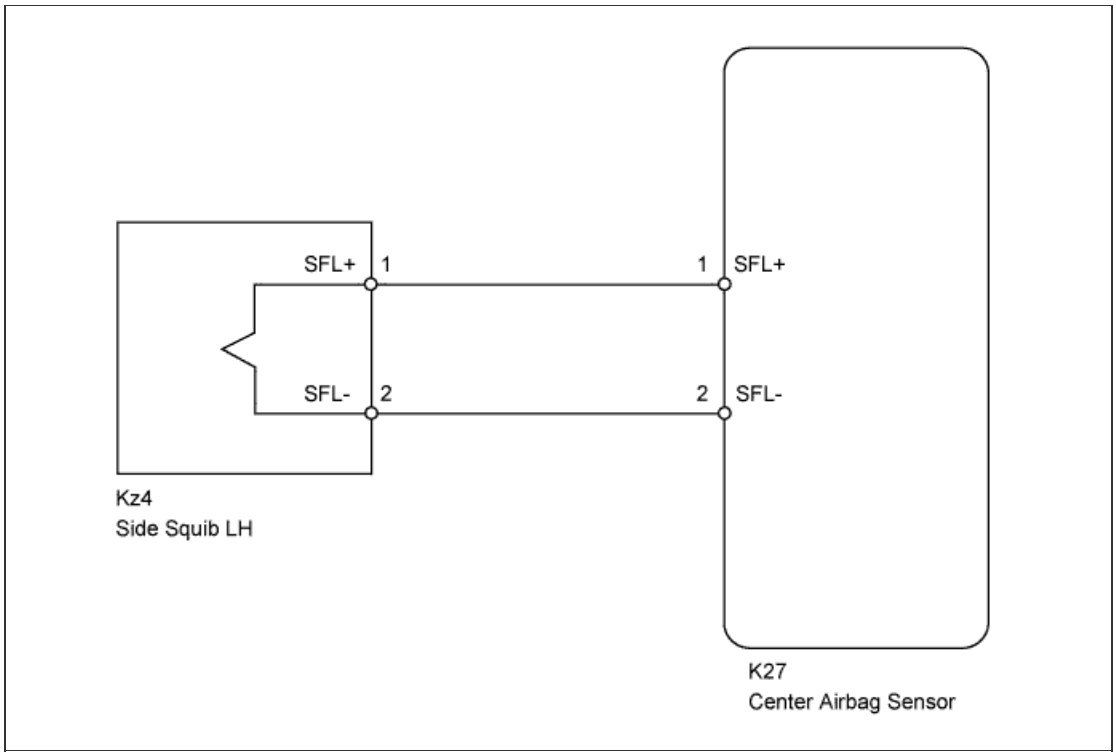

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG LH (SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag LH (side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

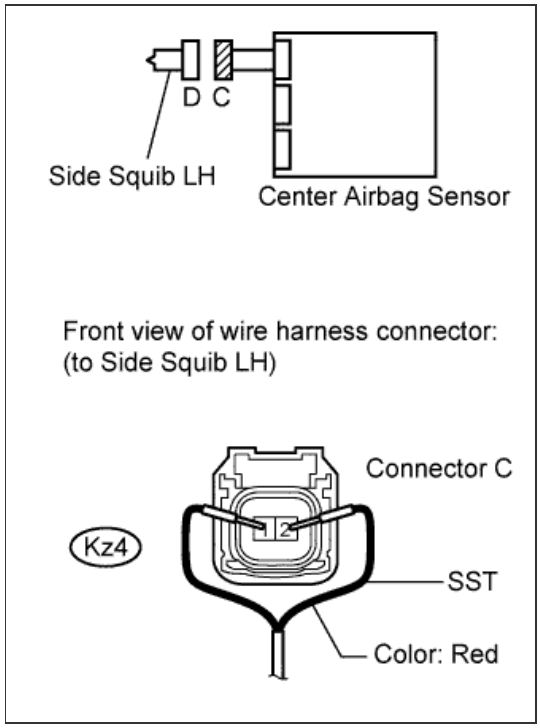

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B → REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

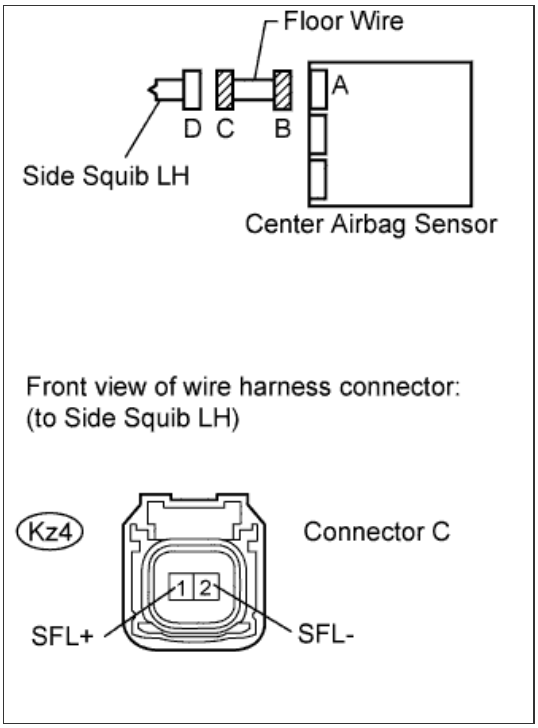

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz4-1 (SFL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz4-2 (SFL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz4-1 (SFL+) - Kz4-2 (SFL-)	Always	1 MΩ or higher
Kz4-1 (SFL+) - Body ground	Always	1 MΩ or higher
Kz4-2 (SFL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

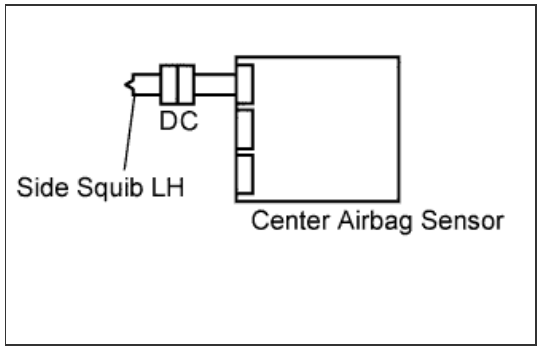

OK:

DTC B1825, B1826, B1827 or B1828 is not output.

HINT:

Codes other than DTC B1825, B1826, B1827 and B1828 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1608/84 Front Satellite Sensor Bus LH Initialization Incomplete

DTC B1617/84 Lost Communication with Front Airbag Sensor LH

DTC B1618/84 Front Airbag Sensor LH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor LH circuit consists of the center airbag sensor and front airbag sensor LH.
The front airbag sensor LH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1608/84, B1617/84 or B1618/84 is stored when a malfunction is detected in the front airbag sensor LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1608/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1617/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1618/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

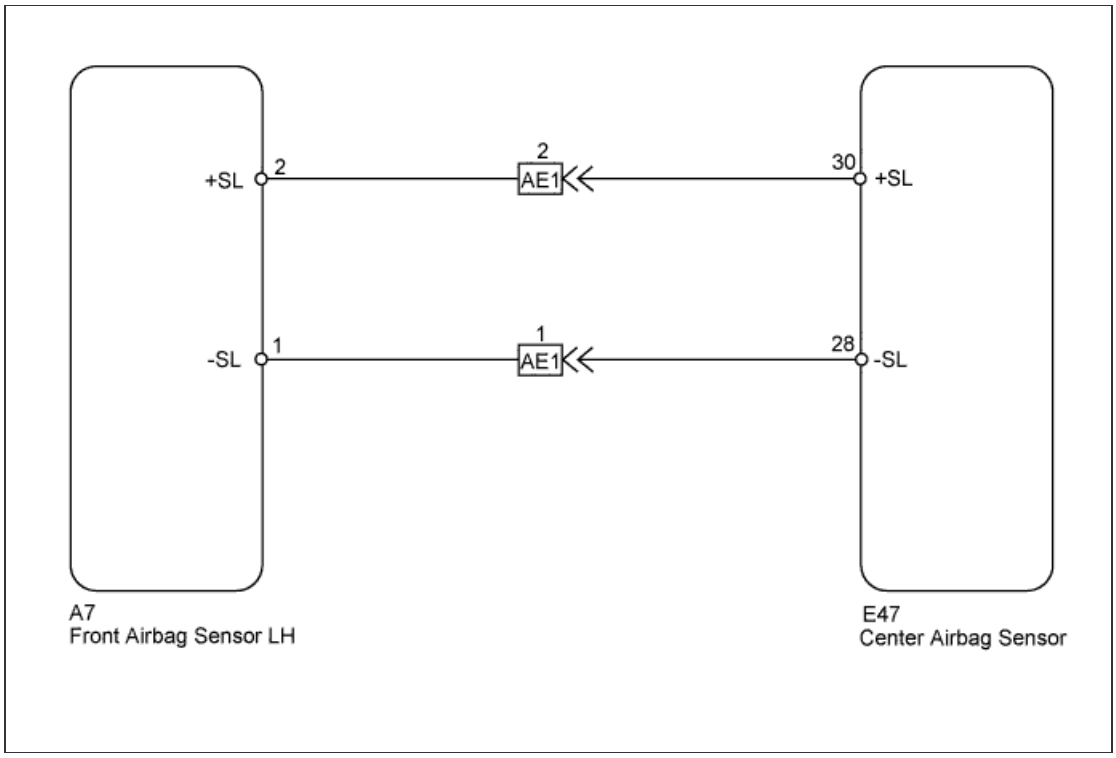

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initiali ed after the cable is reconnected (Clic here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Chec that the connectors are properly connected to the center airbag sensor and the front airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor LH.


b. Chec that the connectors (on the center airbag sensor side and front airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR LH CIRCUIT

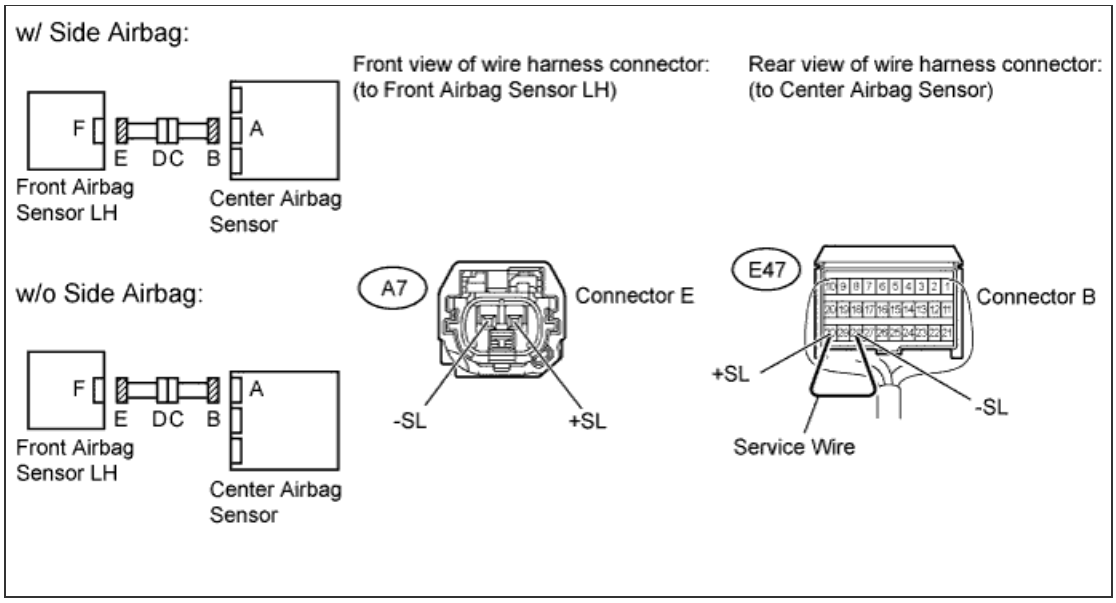

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A7-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
A7-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	1 Ω or higher
A7-2 (L) - Body ground	Always	1 Ω or higher
A7-1 (-SL) - Body ground	Always	1 Ω or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR LH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor LH with H and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Clic here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Chec for DTCs (Clic here).

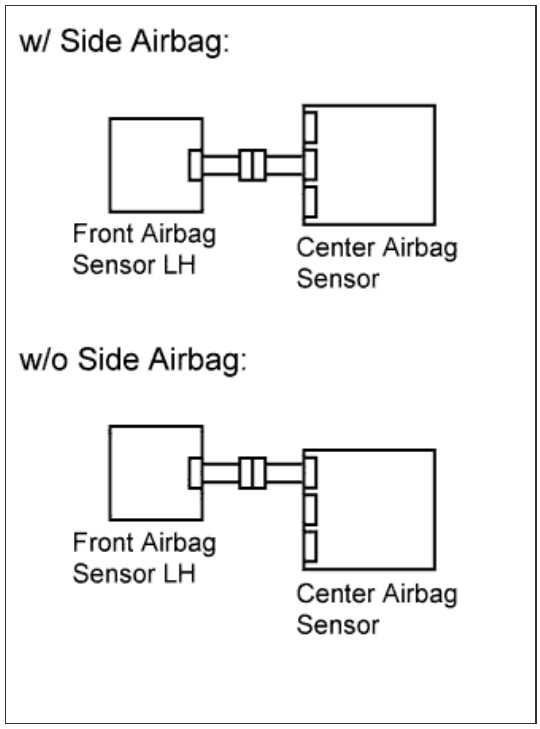

Result

esult	roceed to
DTC B1617 or B1618 is output	A
DTC B1612 or B1613 is output	B
DTC B1612, B1613, B1617 and B1618 are not output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this chec .


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE FRONT AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

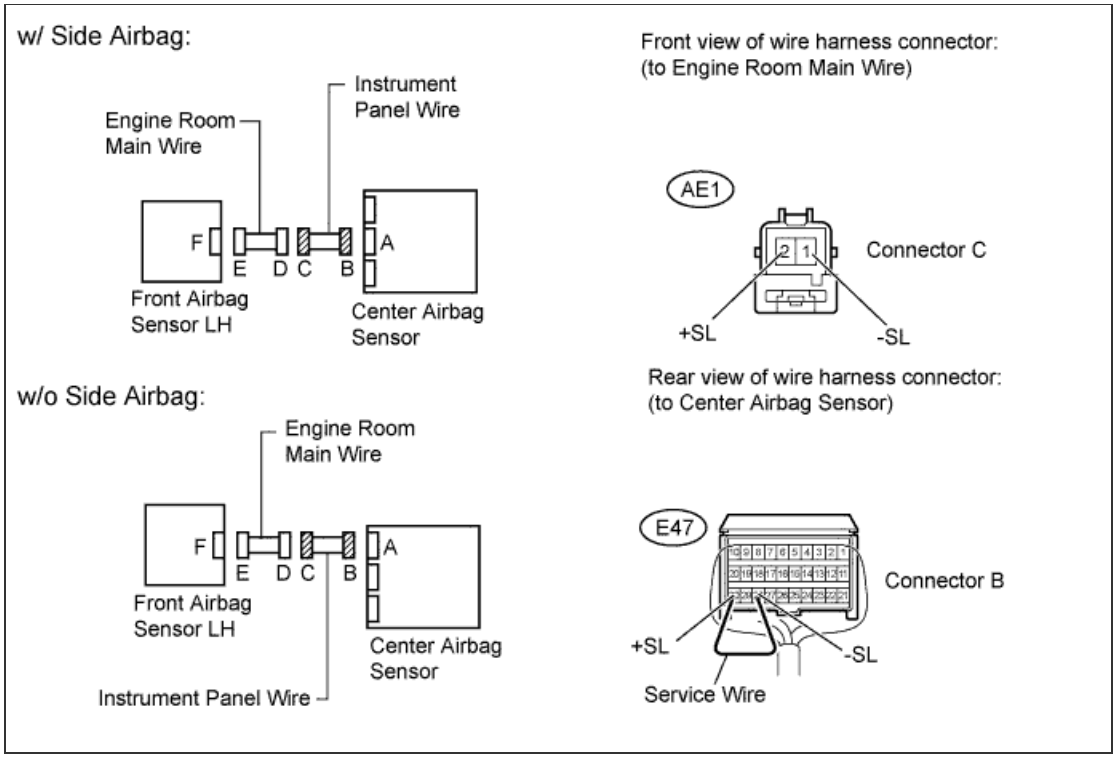

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE1-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
AE1-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	1 Ω or higher
AE1-2 (L) - Body ground	Always	1 Ω or higher
AE1-1 (-SL) - Body ground	Always	1 Ω or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1830/57 Short in Curtain Shield Squib RH Circuit

DTC B1831/57 Open in Curtain Shield Squib RH Circuit

DTC B1832/57 Short to GND in Curtain Shield Squib RH Circuit

DTC B1833/57 Short to B+ in Curtain Shield Squib RH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1830/57	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1831/57	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1832/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1833/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

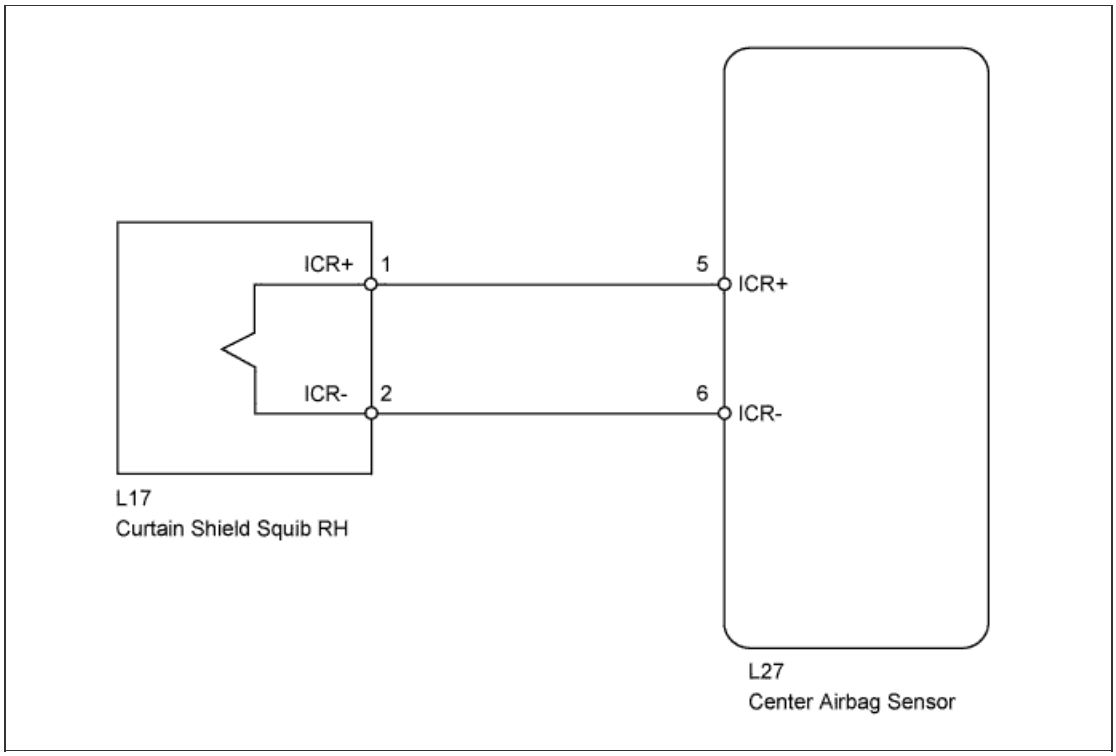

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield airbag RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

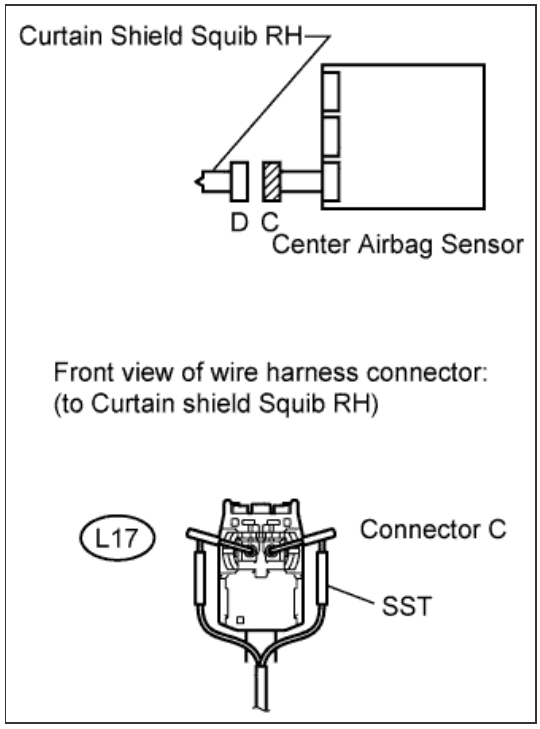

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield airbag RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
17-1 (ICR+) - Body ground	ngine switch on (IG)	Below 1 V
17-2 (ICR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	1 Ω or higher
17-1 (ICR+) - Body ground	Always	1 Ω or higher
17-2 (ICR-) -	Always	1 Ω or higher

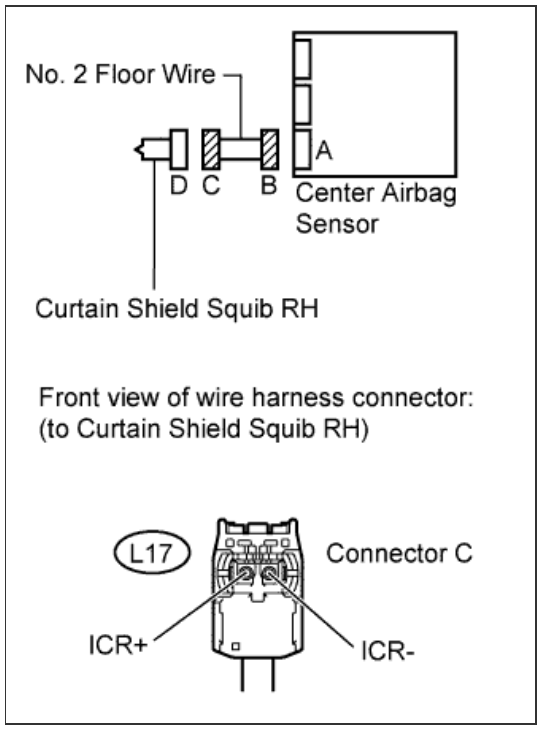

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

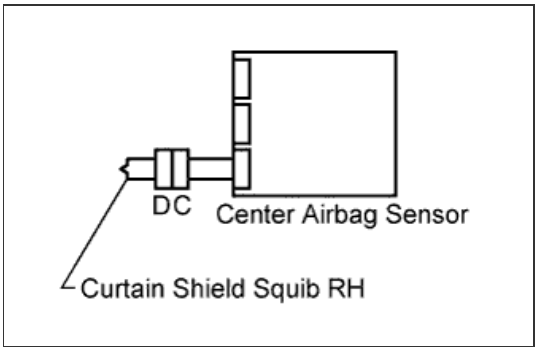

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1608/84 Front Satellite Sensor Bus LH Initialization Incomplete

DTC B1617/84 Lost Communication with Front Airbag Sensor LH

DTC B1618/84 Front Airbag Sensor LH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor LH circuit consists of the center airbag sensor and front airbag sensor LH.
The front airbag sensor LH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1608/84, B1617/84 or B1618/84 is stored when a malfunction is detected in the front airbag sensor LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1608/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1617/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1618/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

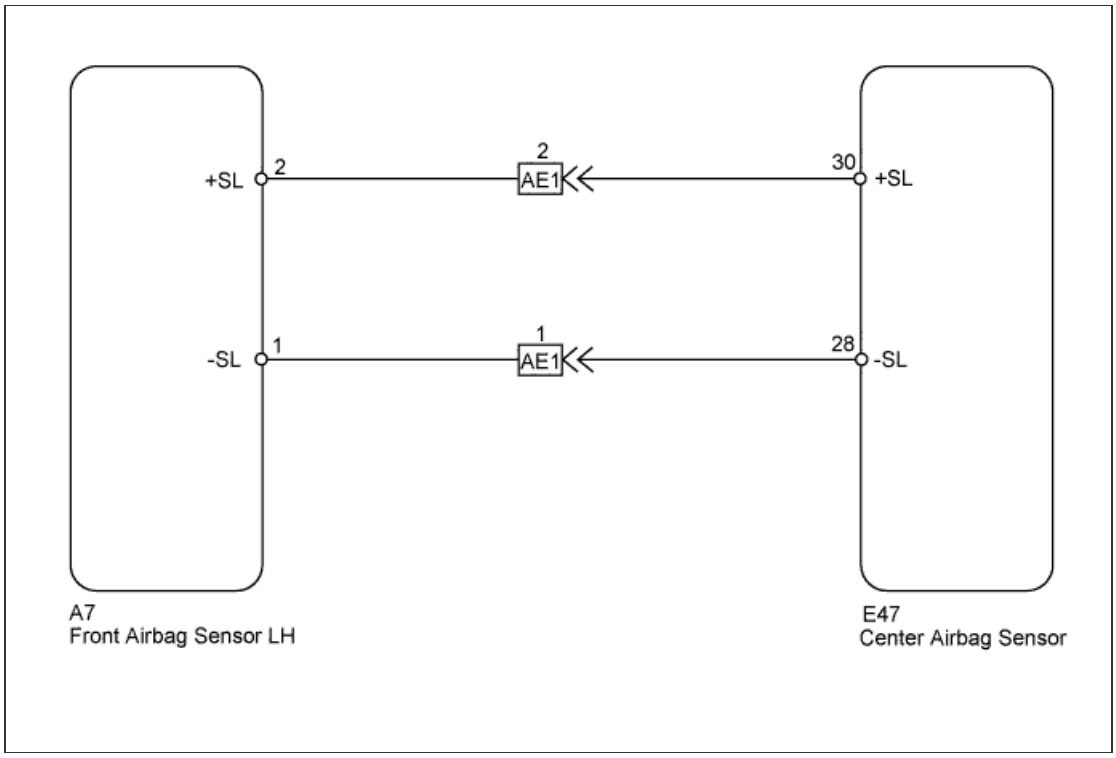

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initiali ed after the cable is reconnected (Clic here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Chec that the connectors are properly connected to the center airbag sensor and the front airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor LH.


b. Chec that the connectors (on the center airbag sensor side and front airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR LH CIRCUIT

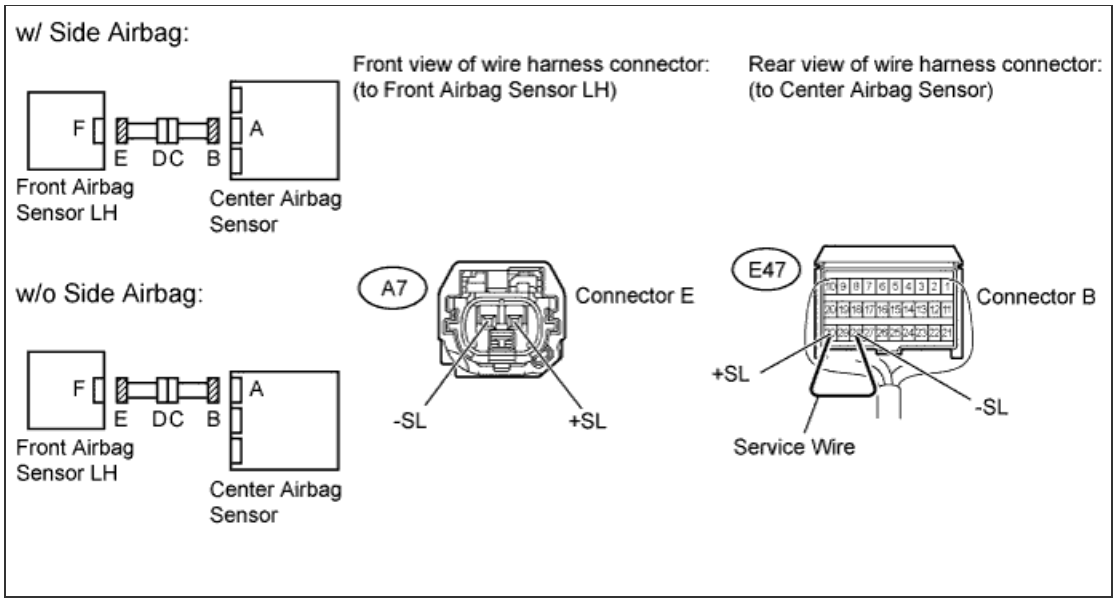

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A7-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
A7-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	1 Ω or higher
A7-2 (L) - Body ground	Always	1 Ω or higher
A7-1 (-SL) - Body ground	Always	1 Ω or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR LH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor LH with H and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Clic here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Chec for DTCs (Clic here).

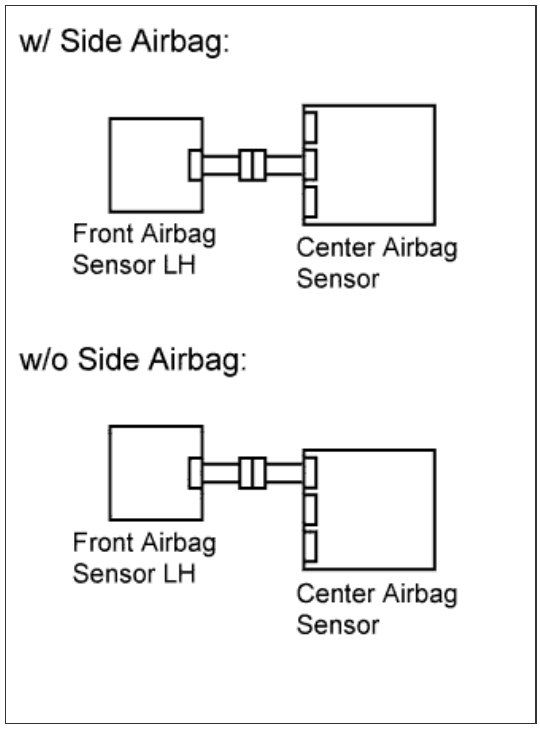

Result

esult	roceed to
DTC B1617 or B1618 is output	A
DTC B1612 or B1613 is output	B
DTC B1612, B1613, B1617 and B1618 are not output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this chec .


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE FRONT AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

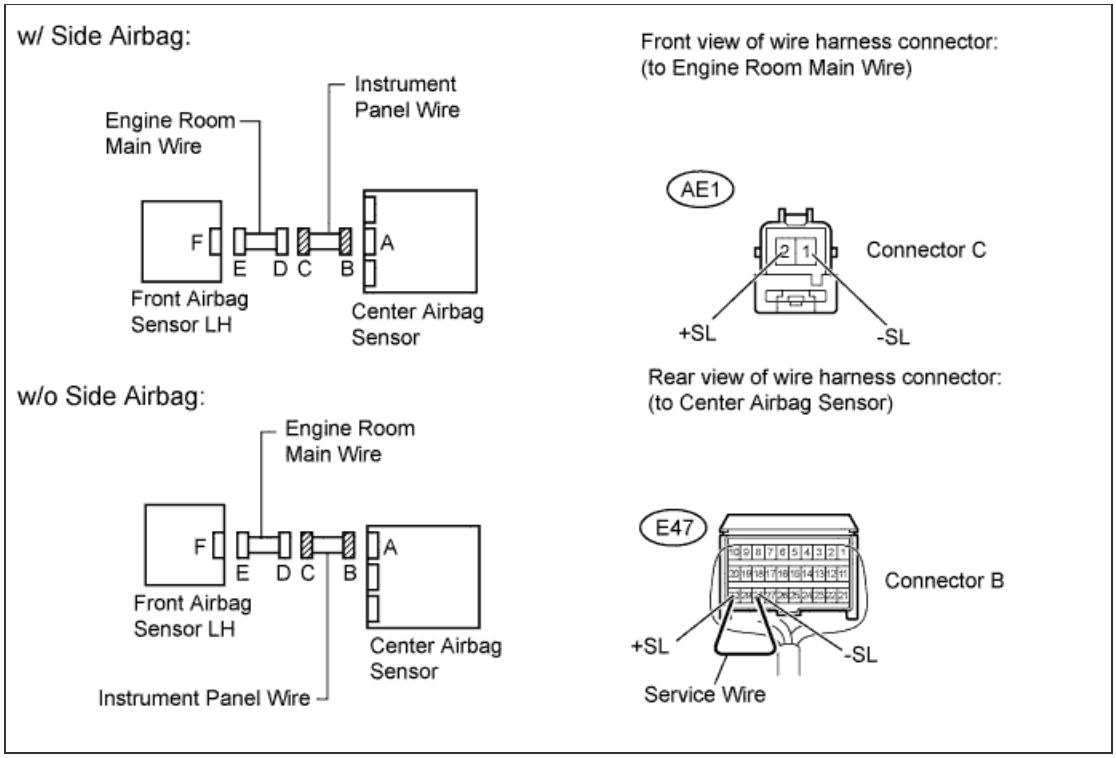

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE1-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
AE1-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	1 Ω or higher
AE1-2 (L) - Body ground	Always	1 Ω or higher
AE1-1 (-SL) - Body ground	Always	1 Ω or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1830/57 Short in Curtain Shield Squib RH Circuit

DTC B1831/57 Open in Curtain Shield Squib RH Circuit

DTC B1832/57 Short to GND in Curtain Shield Squib RH Circuit

DTC B1833/57 Short to B+ in Curtain Shield Squib RH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1830/57	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1831/57	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1832/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1833/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

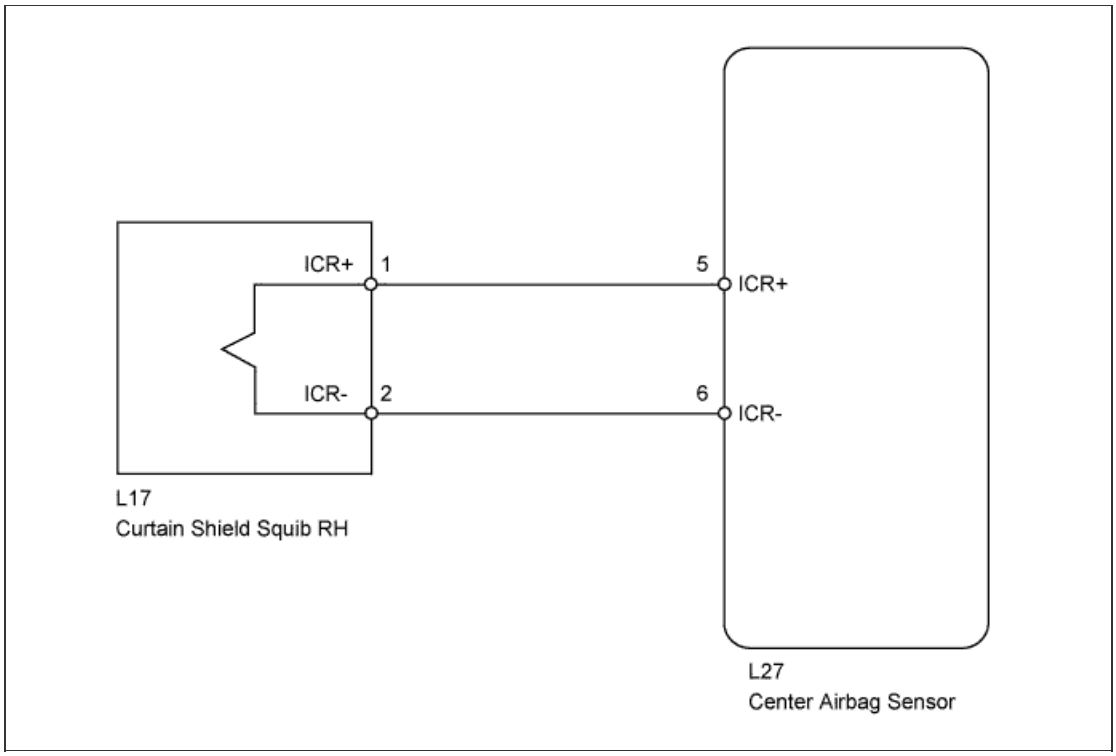

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield airbag RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

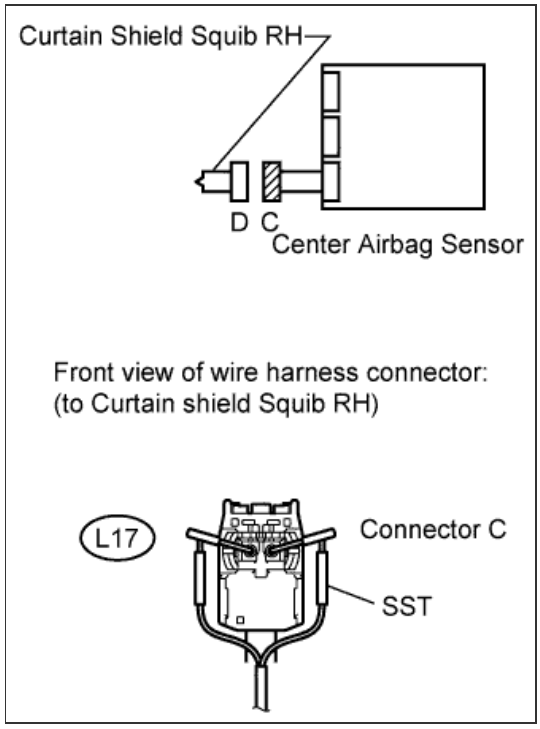

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield airbag RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
17-1 (ICR+) - Body ground	ngine switch on (IG)	Below 1 V
17-2 (ICR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	1 Ω or higher
17-1 (ICR+) - Body ground	Always	1 Ω or higher
17-2 (ICR-) -	Always	1 Ω or higher

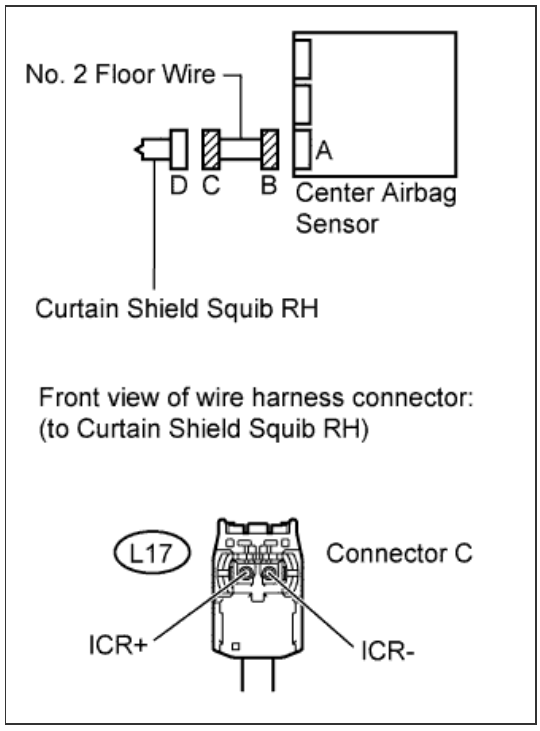

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

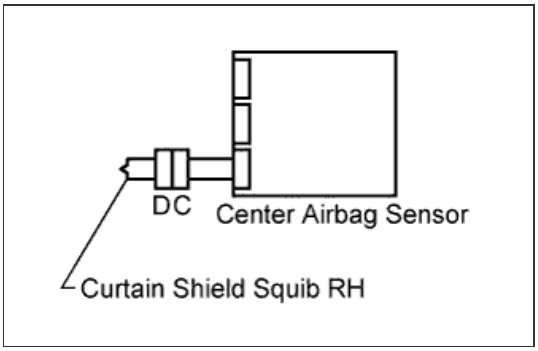

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1608/84 Front Satellite Sensor Bus LH Initialization Incomplete

DTC B1617/84 Lost Communication with Front Airbag Sensor LH

DTC B1618/84 Front Airbag Sensor LH Initialization Incomplete


for Preparation Click here

DESCRIPTION

The front airbag sensor LH circuit consists of the center airbag sensor and front airbag sensor LH.
The front airbag sensor LH detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1608/84, B1617/84 or B1618/84 is stored when a malfunction is detected in the front airbag sensor LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1608/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1617/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly
B1618/84	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the front airbag sensor LH circuit for 2 seconds. • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Engine room main wire • Front airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

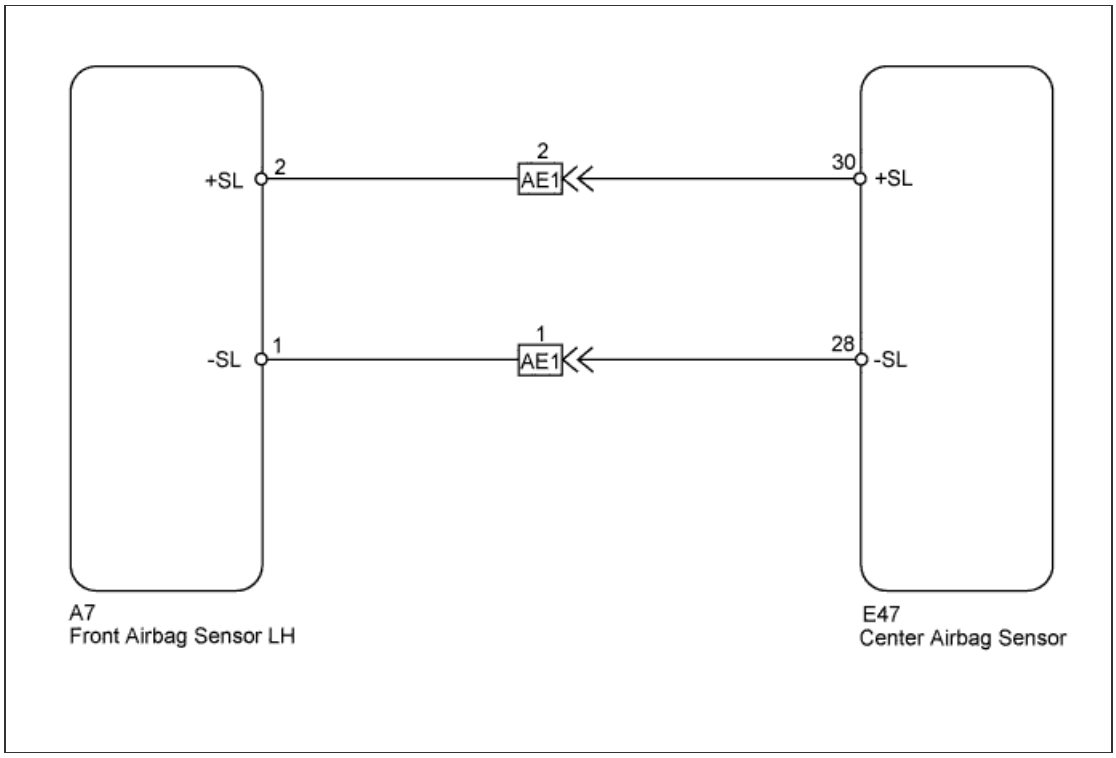

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initiali ed after the cable is reconnected (Clic here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Chec that the connectors are properly connected to the center airbag sensor and the front airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and front airbag sensor LH.


b. Chec that the connectors (on the center airbag sensor side and front airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK FRONT AIRBAG SENSOR LH CIRCUIT

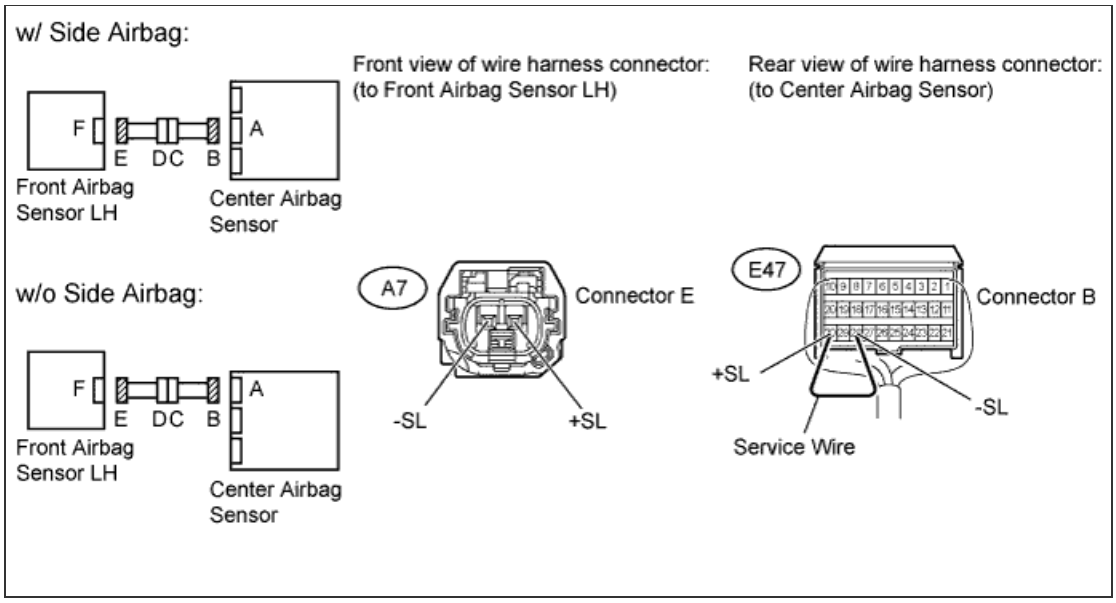

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A7-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
A7-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A7-2 (L) - A7-1 (-SL)	Always	1 Ω or higher
A7-2 (L) - Body ground	Always	1 Ω or higher
A7-1 (-SL) - Body ground	Always	1 Ω or higher

NG → Go to step 5

OK

4.CHECK FRONT AIRBAG SENSOR LH

a. Connect the connectors to the center airbag sensor.

b. Interchange the front airbag sensor LH with H and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Clic here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Chec for DTCs (Clic here).

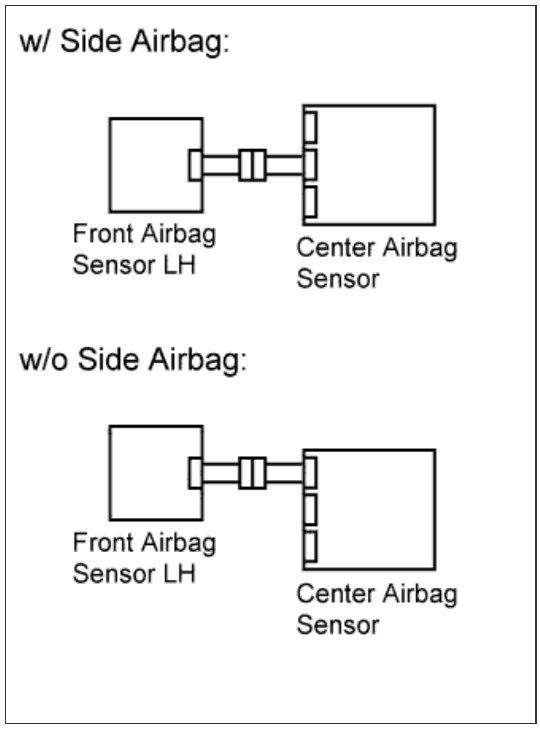

Result

esult	roceed to
DTC B1617 or B1618 is output	A
DTC B1612 or B1613 is output	B
DTC B1612, B1613, B1617 and B1618 are not output	C

HINT:

Codes other than DTC B1612, B1613, B1617 and B1618 may be output at this time, but they are not related to this chec .


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE FRONT AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - ENGINE ROOM MAIN WIRE)

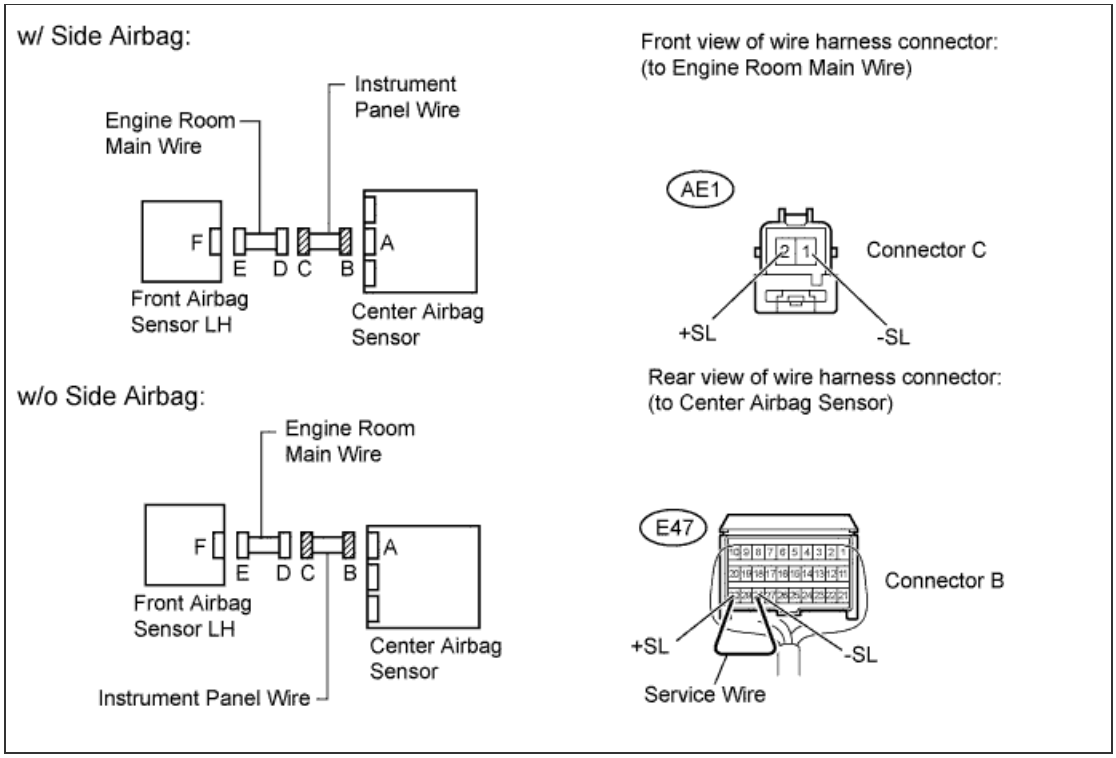

a. Disconnect the instrument panel wire connector from the engine room main wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
AE1-2 (L) - Body ground	Engine switch on (IG)	Below 1 V
AE1-1 (-SL) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 30 (L) and 28 (-SL) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
AE1-2 (L) - AE1-1 (-SL)	Always	1 Ω or higher
AE1-2 (L) - Body ground	Always	1 Ω or higher
AE1-1 (-SL) - Body ground	Always	1 Ω or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE ENGINE ROOM MAIN WIRE

DTC B1830/57 Short in Curtain Shield Squib RH Circuit

DTC B1831/57 Open in Curtain Shield Squib RH Circuit

DTC B1832/57 Short to GND in Curtain Shield Squib RH Circuit

DTC B1833/57 Short to B+ in Curtain Shield Squib RH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1830/57	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1831/57	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1832/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1833/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

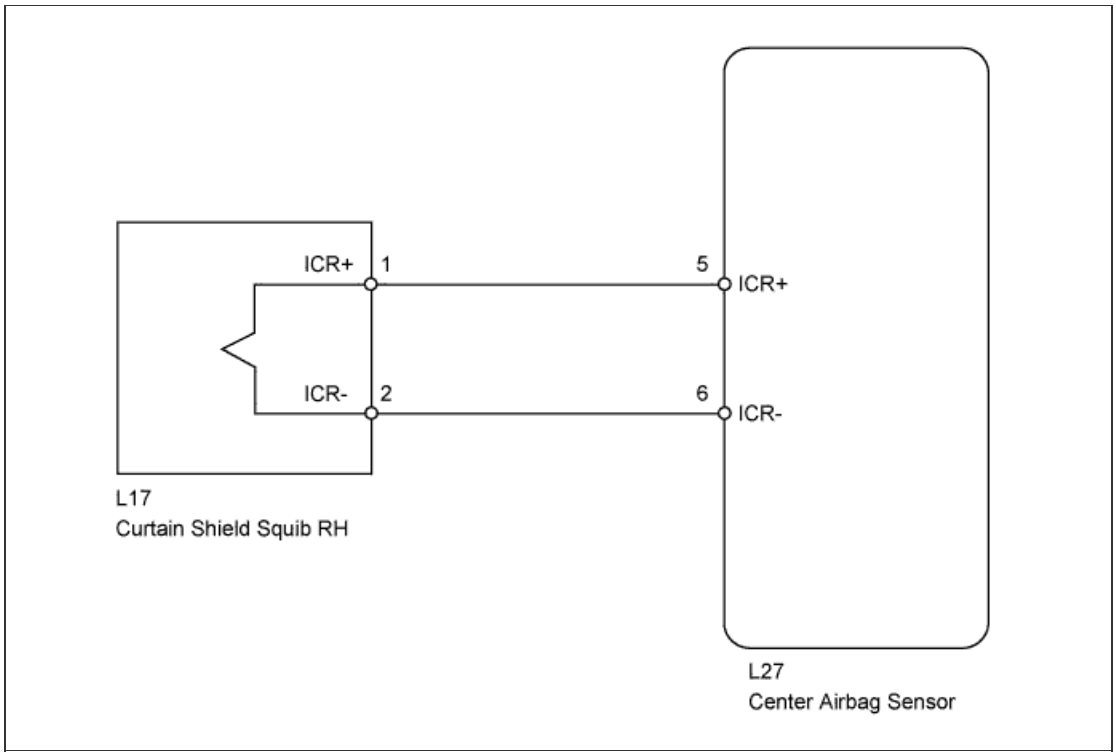

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield airbag RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

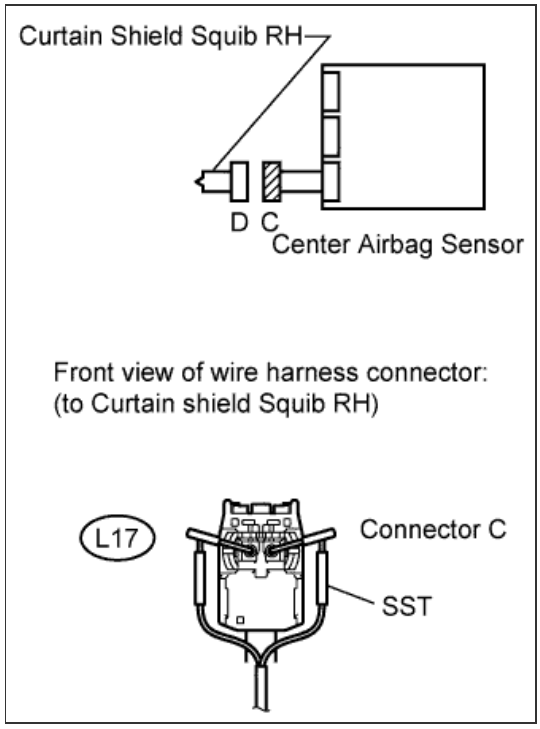

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield airbag RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
17-1 (ICR+) - Body ground	ngine switch on (IG)	Below 1 V
17-2 (ICR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	1 Ω or higher
17-1 (ICR+) - Body ground	Always	1 Ω or higher
17-2 (ICR-) -	Always	1 Ω or higher

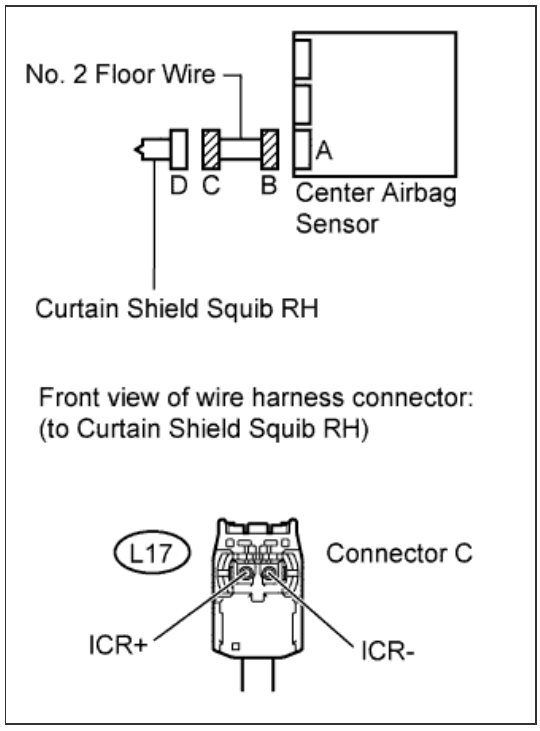

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

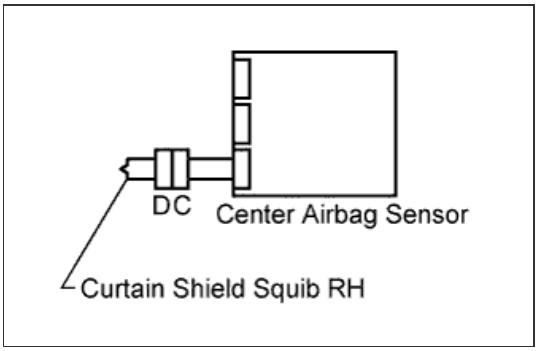

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1610/13 Front Airbag Sensor RH Malfunction


for Preparation Click here

DESCRIPTION

The front airbag sensor RH consists of the diagnostic circuit and the frontal deceleration sensor, etc.
If the center airbag sensor receives signals from the frontal deceleration sensor, it determines whether the SRS should be activated.
DTC B1610/13 is stored when a malfunction is detected in the front airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1610/13	When one of the following conditions is met: • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Front airbag sensor RH • Center airbag sensor assembl

WIRING DIAGRAM

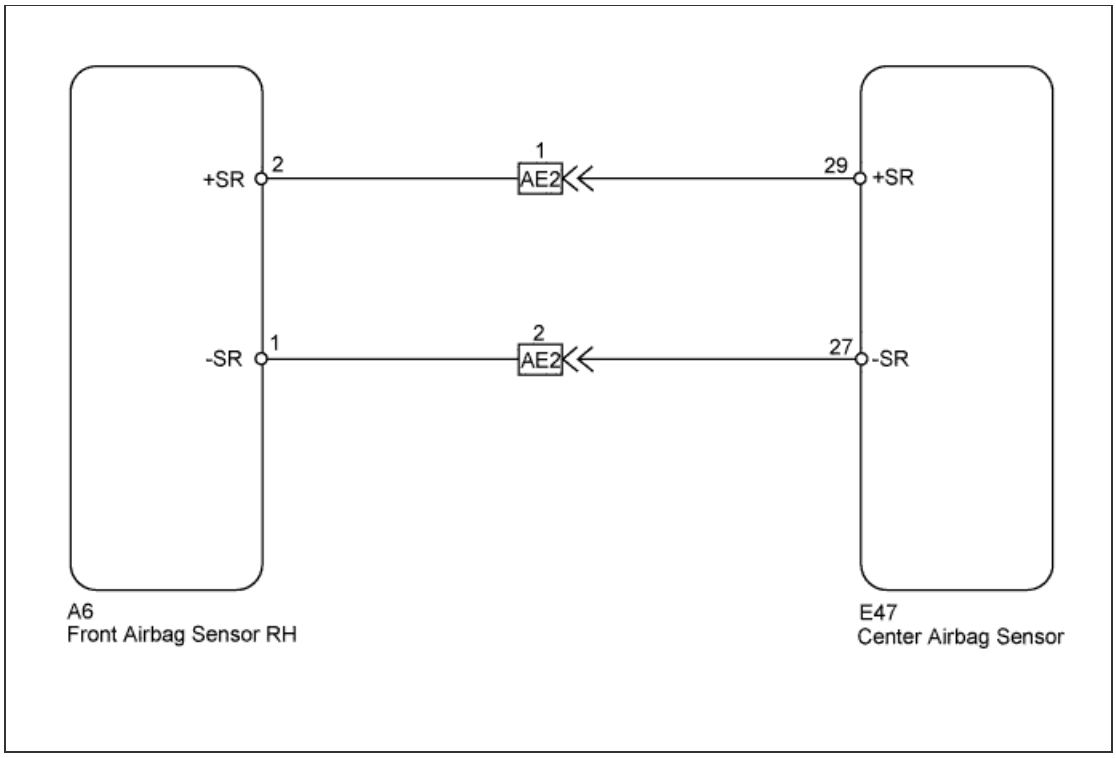

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) batter terminal while erforming re airs, some s stems need to be initiali ed after the cable is reconnected (Click here).

1.CHECK FRONT AIRBAG SENSOR RH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) batter terminal, and wait for at least 90 seconds.

c. Interchange the front airbag sensor LH with RH and connect the connectors to them.

d. Connect the cable to the negative (-) batter terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memor (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), and wait for at least 60 seconds.


i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1610 is output	A
DTC B1615 is output	B
DTC B1610 and B1615 are not output	C

HINT:

Codes other than DTC B1610 and B1615 may be output at this time, but they are not related to this check.

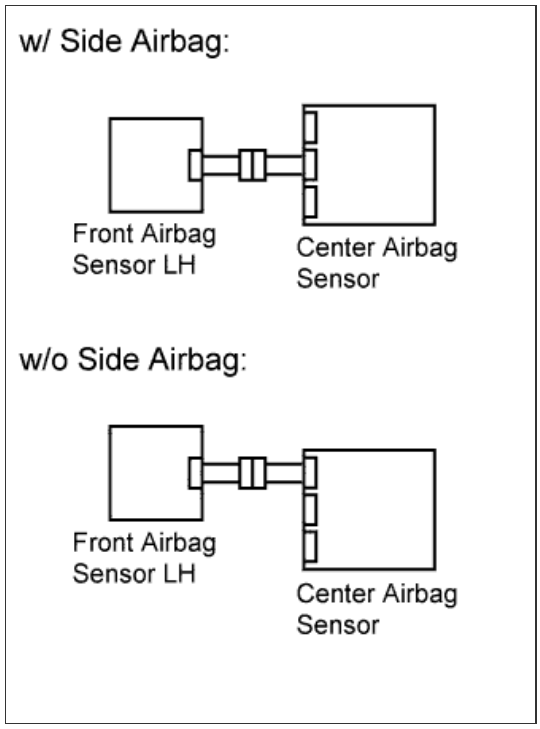

A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE FRONT AIRBAG SENSOR RH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1830/57 Short in Curtain Shield Squib RH Circuit

DTC B1831/57 Open in Curtain Shield Squib RH Circuit

DTC B1832/57 Short to GND in Curtain Shield Squib RH Circuit

DTC B1833/57 Short to B+ in Curtain Shield Squib RH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1830/57	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1831/57	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1832/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1833/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

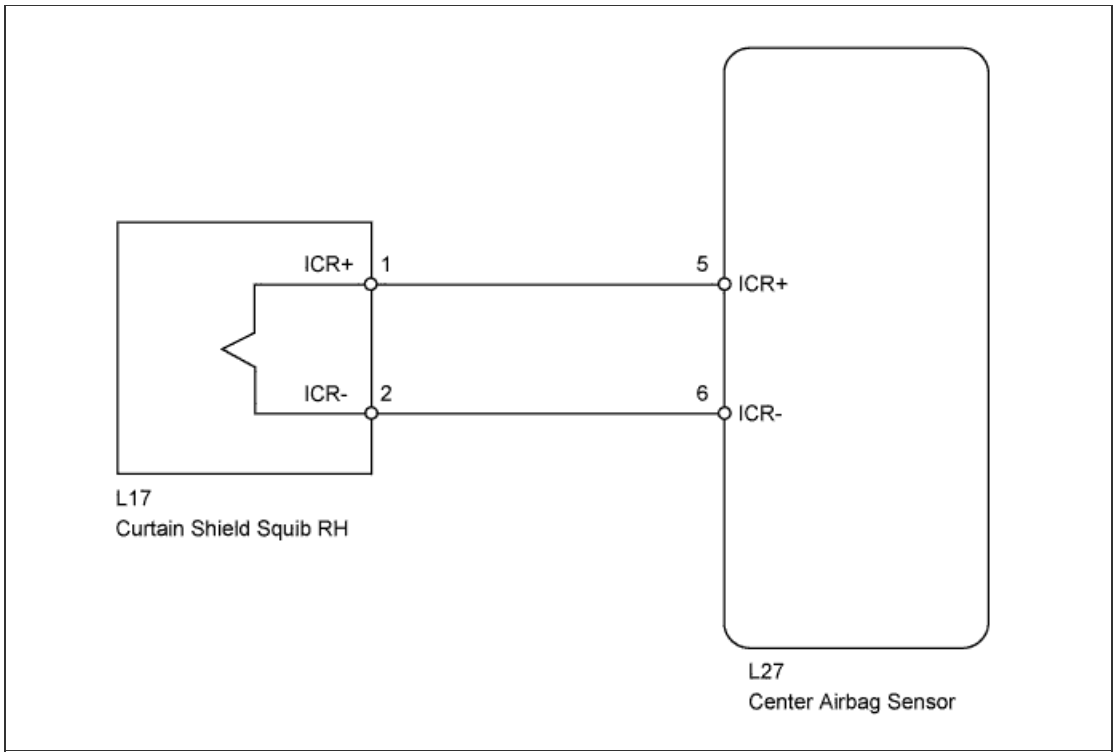

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield airbag RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

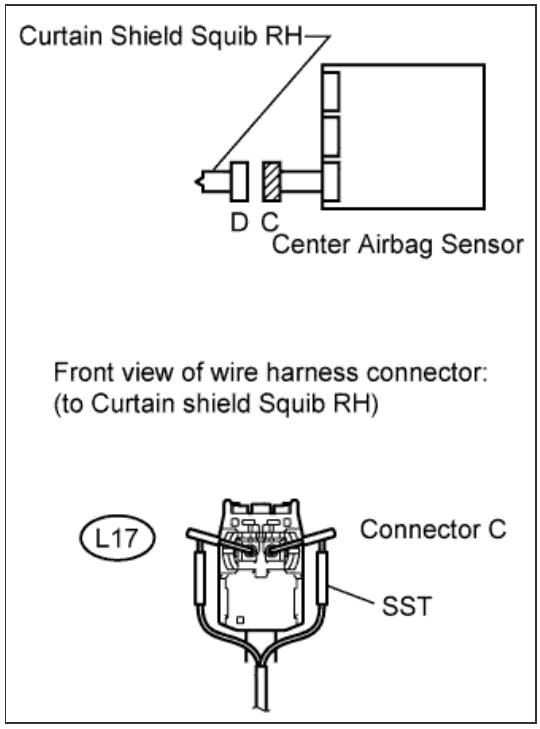

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield airbag RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
17-1 (ICR+) - Body ground	ngine switch on (IG)	Below 1 V
17-2 (ICR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	1 Ω or higher
17-1 (ICR+) - Body ground	Always	1 Ω or higher
17-2 (ICR-) -	Always	1 Ω or higher

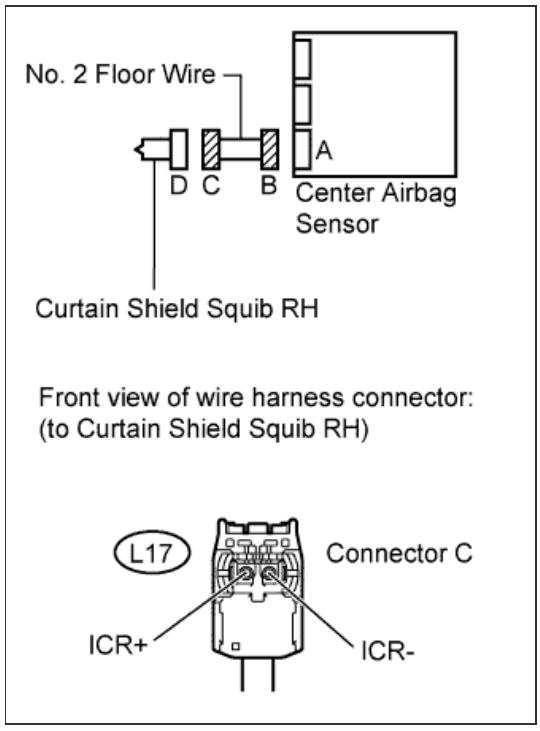

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

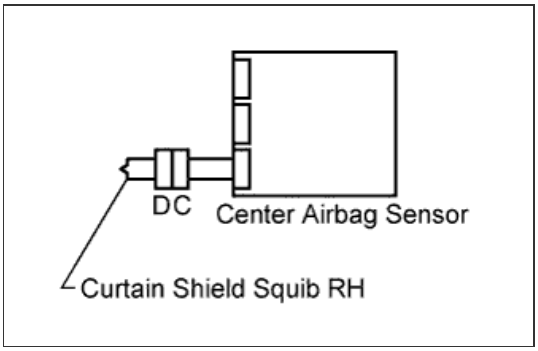

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1610/13 Front Airbag Sensor RH Malfunction


for Preparation Click here

DESCRIPTION

The front airbag sensor RH consists of the diagnostic circuit and the frontal deceleration sensor, etc.
If the center airbag sensor receives signals from the frontal deceleration sensor, it determines whether the SRS should be activated.
DTC B1610/13 is stored when a malfunction is detected in the front airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1610/13	When one of the following conditions is met: • A front airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Front airbag sensor RH • Center airbag sensor assembl

WIRING DIAGRAM

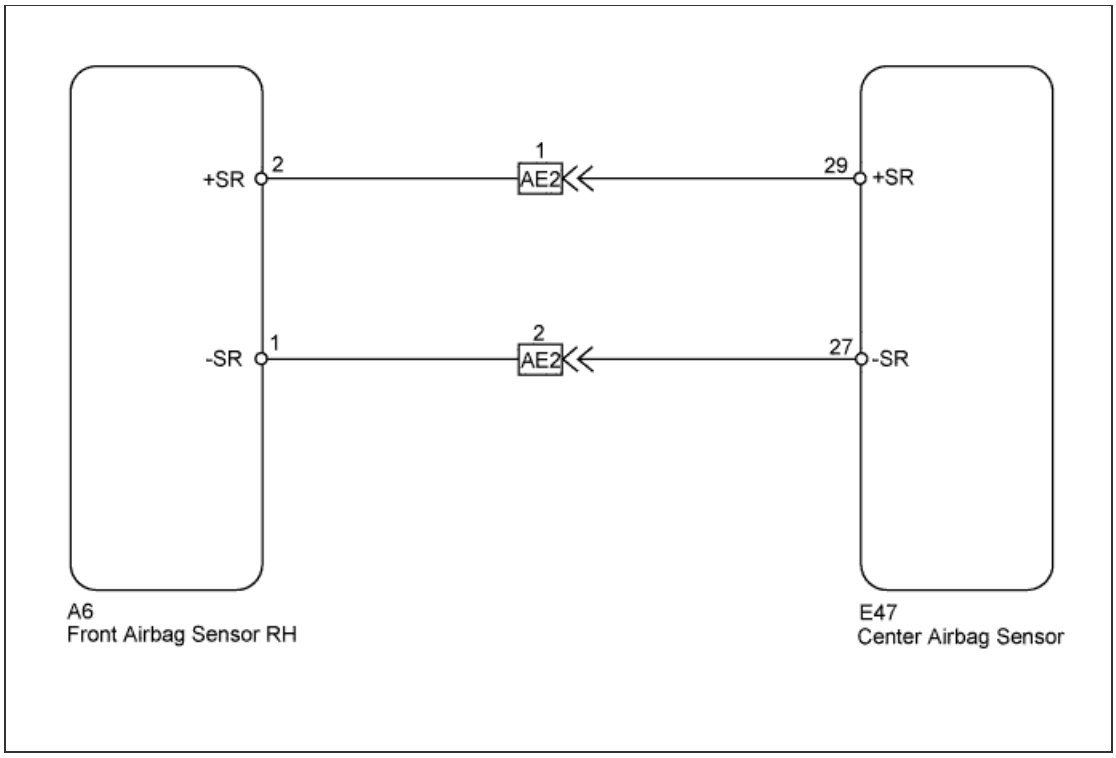

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) batter terminal while erforming re airs, some s stems need to be initiali ed after the cable is reconnected (Click here).

1.CHECK FRONT AIRBAG SENSOR RH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) batter terminal, and wait for at least 90 seconds.

c. Interchange the front airbag sensor LH with RH and connect the connectors to them.

d. Connect the cable to the negative (-) batter terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memor (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), and wait for at least 60 seconds.


i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1610 is output	A
DTC B1615 is output	B
DTC B1610 and B1615 are not output	C

HINT:

Codes other than DTC B1610 and B1615 may be output at this time, but they are not related to this check.

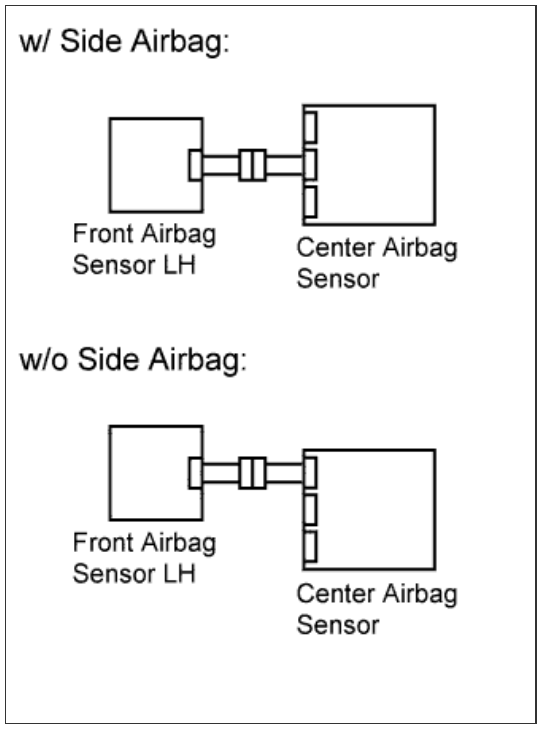

A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE FRONT AIRBAG SENSOR RH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1830/57 Short in Curtain Shield Squib RH Circuit

DTC B1831/57 Open in Curtain Shield Squib RH Circuit

DTC B1832/57 Short to GND in Curtain Shield Squib RH Circuit

DTC B1833/57 Short to B+ in Curtain Shield Squib RH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1830/57	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1831/57	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1832/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1833/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

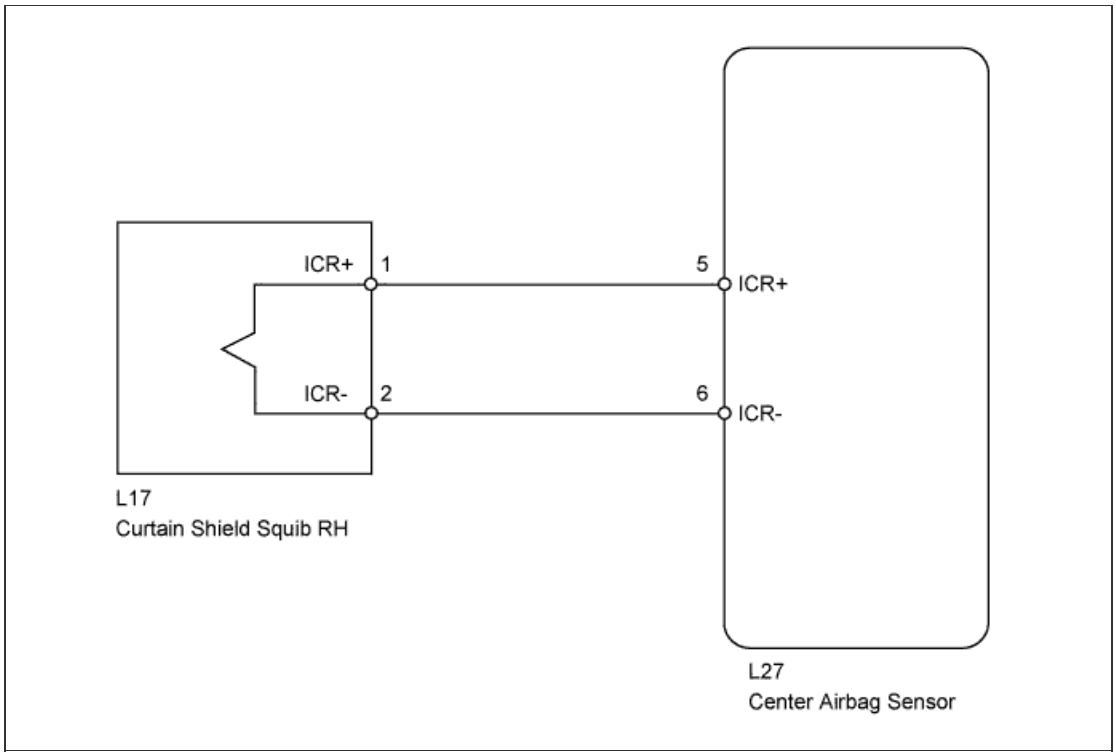

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield airbag RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

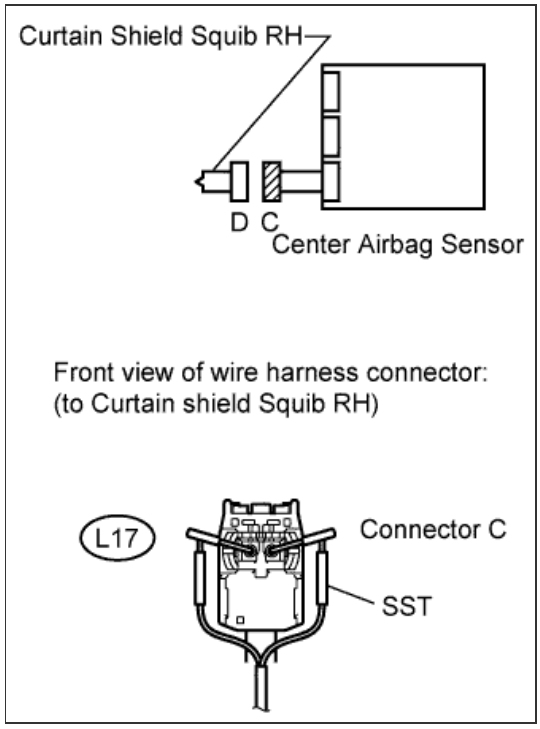

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield airbag RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
17-1 (ICR+) - Body ground	ngine switch on (IG)	Below 1 V
17-2 (ICR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	1 Ω or higher
17-1 (ICR+) - Body ground	Always	1 Ω or higher
17-2 (ICR-) -	Always	1 Ω or higher

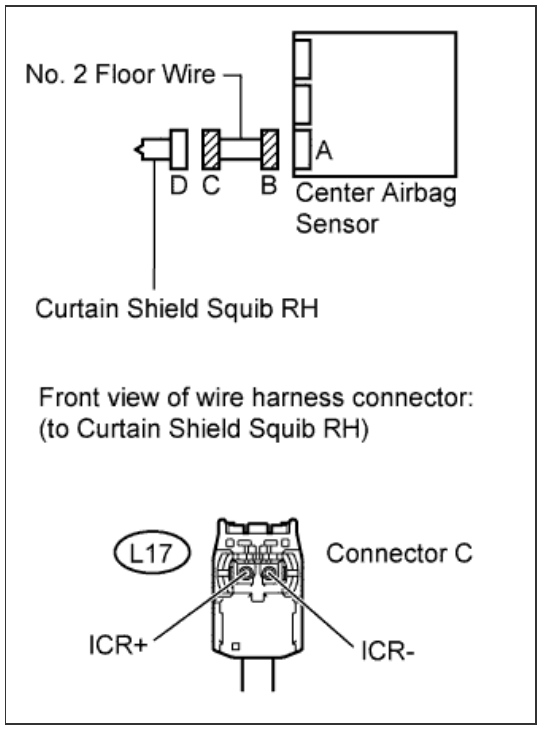

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

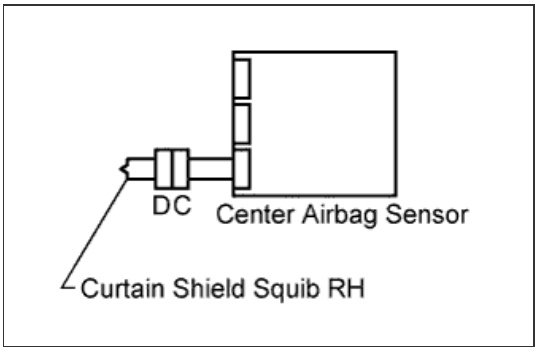

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1615/14 Front Airbag Sensor LH Malfunction


for Preparation Click here

DESCRIPTION

The front airbag sensor LH consists of the diagnostic circuit and the frontal deceleration sensor, etc.
If the center airbag sensor receives signals from the frontal deceleration sensor, it determines whether the SRS should be activated.
DTC B1615/14 is stored when a malfunction is detected in the front airbag sensor LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1615/14	When one of the following conditions is met: • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Front airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

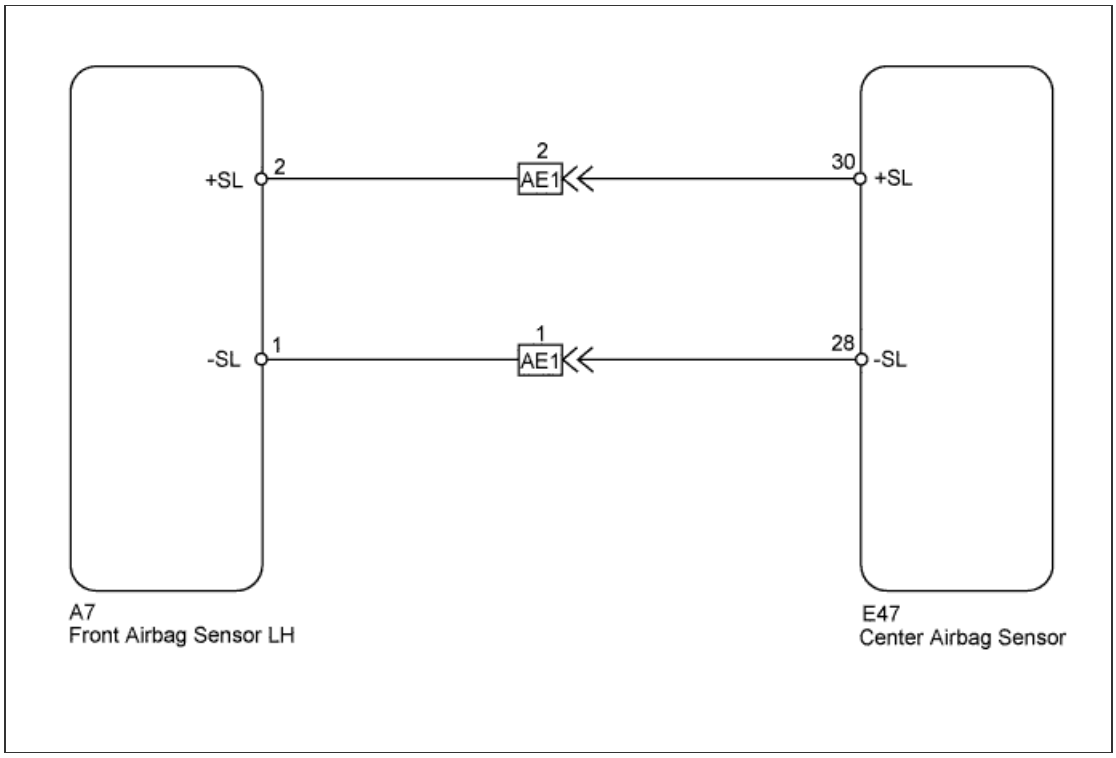

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FRONT AIRBAG SENSOR LH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the front airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), and wait for at least 60 seconds.


i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1615 is output	A
DTC B1610 is output	B
DTC B1610 and B1615 are not output	C

HINT:

Codes other than DTC B1610 and B1615 may be output at this time, but they are not related to this check.

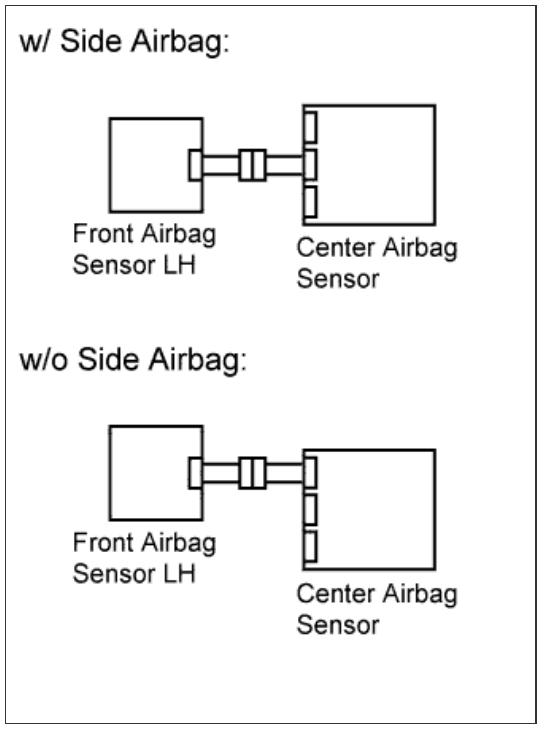

A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE FRONT AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1830/57 Short in Curtain Shield Squib RH Circuit

DTC B1831/57 Open in Curtain Shield Squib RH Circuit

DTC B1832/57 Short to GND in Curtain Shield Squib RH Circuit

DTC B1833/57 Short to B+ in Curtain Shield Squib RH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1830/57	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1831/57	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1832/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1833/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

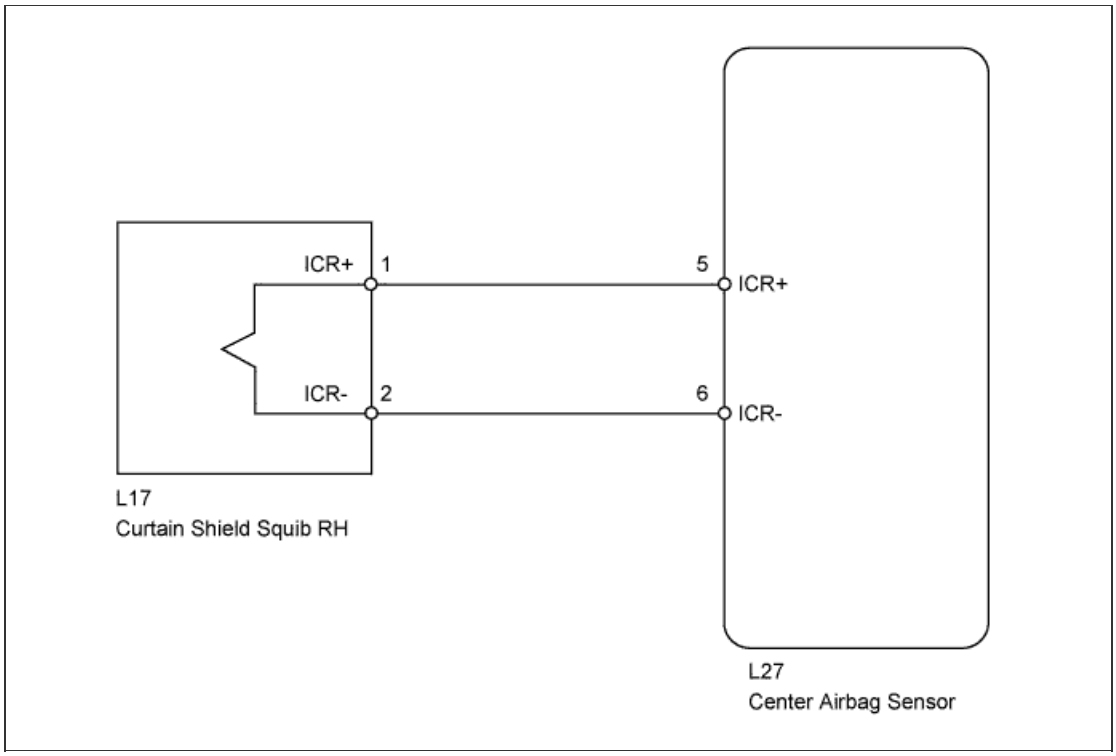

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield airbag RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

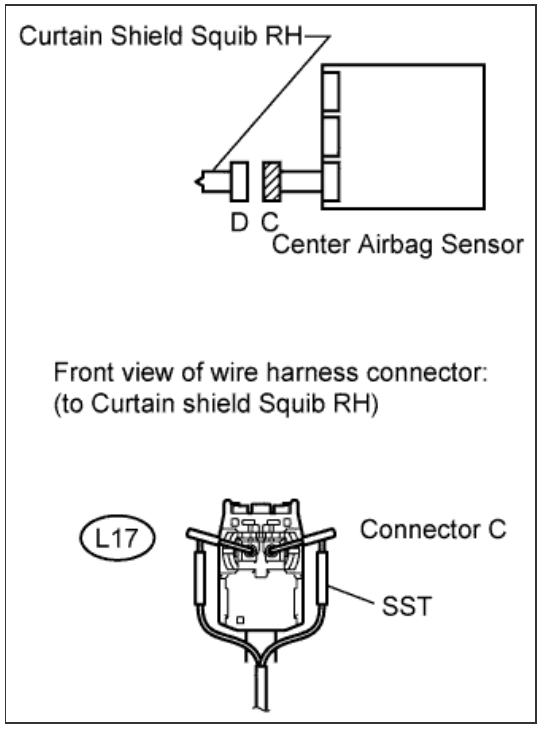

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield airbag RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
17-1 (ICR+) - Body ground	ngine switch on (IG)	Below 1 V
17-2 (ICR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	1 Ω or higher
17-1 (ICR+) - Body ground	Always	1 Ω or higher
17-2 (ICR-) -	Always	1 Ω or higher

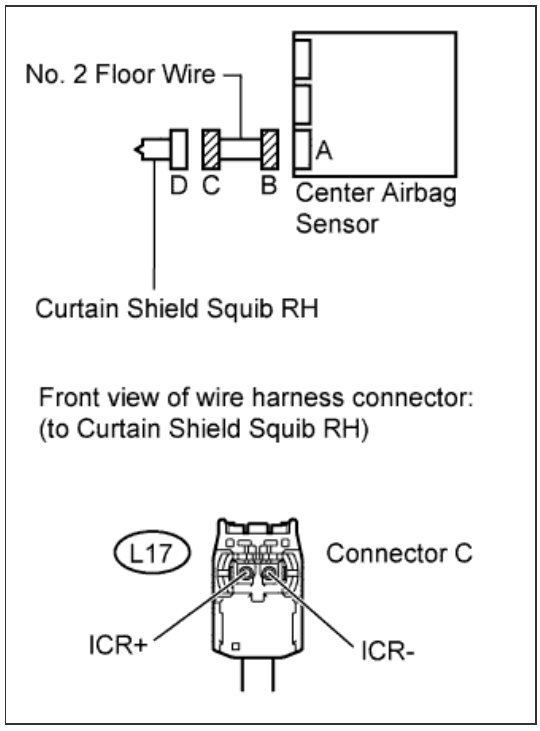

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

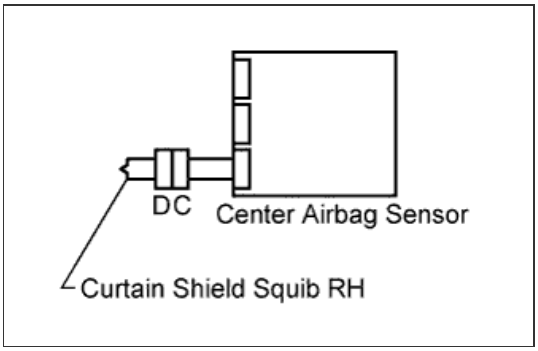

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1615/14 Front Airbag Sensor LH Malfunction


for Preparation Click here

DESCRIPTION

The front airbag sensor LH consists of the diagnostic circuit and the frontal deceleration sensor, etc.
If the center airbag sensor receives signals from the frontal deceleration sensor, it determines whether the SRS should be activated.
DTC B1615/14 is stored when a malfunction is detected in the front airbag sensor LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1615/14	When one of the following conditions is met: • A front airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Front airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

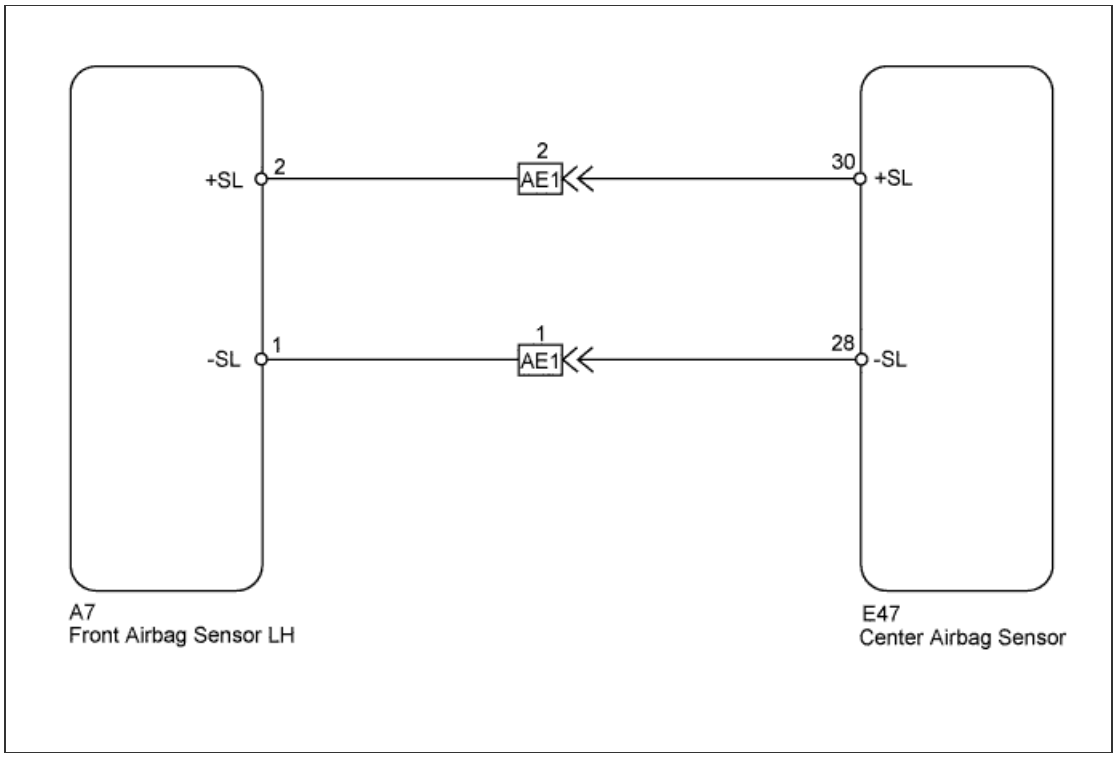

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FRONT AIRBAG SENSOR LH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the front airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), and wait for at least 60 seconds.


i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1615 is output	A
DTC B1610 is output	B
DTC B1610 and B1615 are not output	C

HINT:

Codes other than DTC B1610 and B1615 may be output at this time, but they are not related to this check.

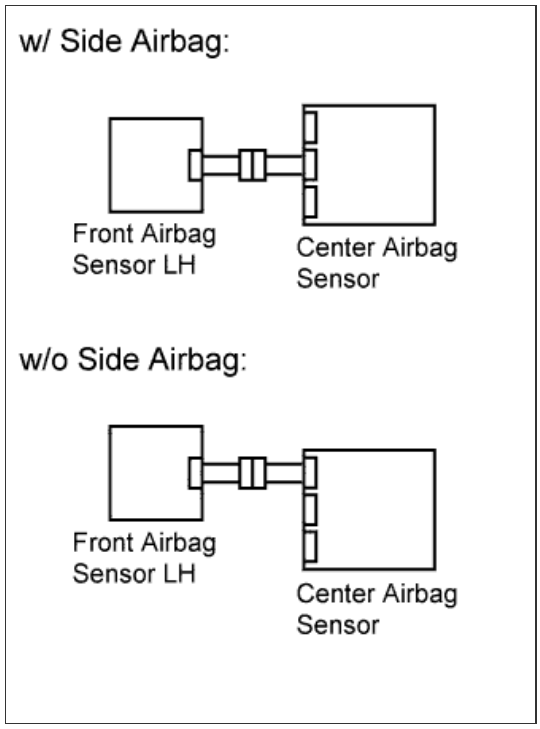

A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE FRONT AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1830/57 Short in Curtain Shield Squib RH Circuit

DTC B1831/57 Open in Curtain Shield Squib RH Circuit

DTC B1832/57 Short to GND in Curtain Shield Squib RH Circuit

DTC B1833/57 Short to B+ in Curtain Shield Squib RH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1830/57	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1831/57	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1832/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1833/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

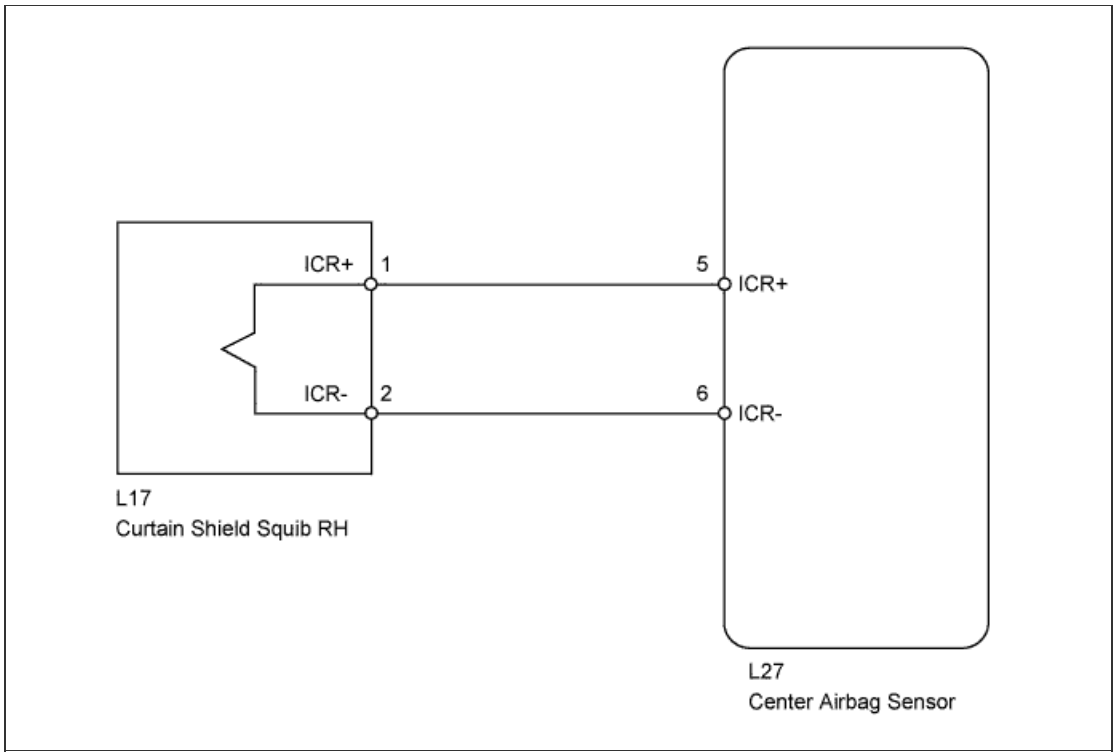

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield airbag RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

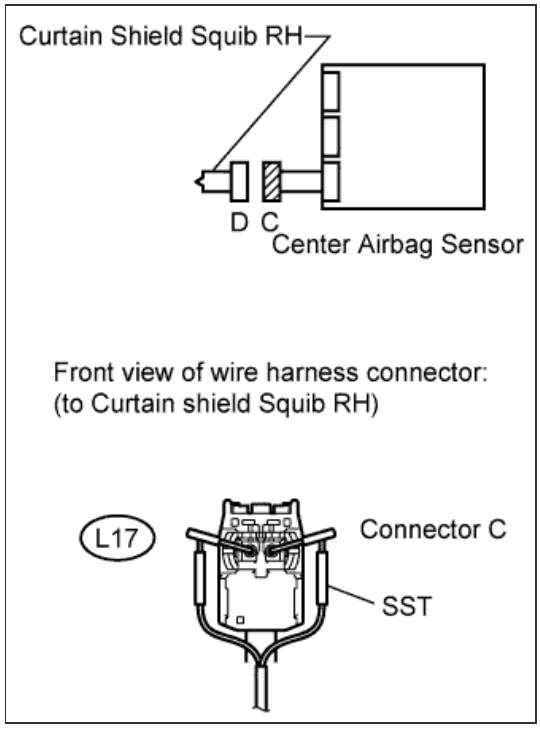

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield airbag RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
17-1 (ICR+) - Body ground	ngine switch on (IG)	Below 1 V
17-2 (ICR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	1 Ω or higher
17-1 (ICR+) - Body ground	Always	1 Ω or higher
17-2 (ICR-) -	Always	1 Ω or higher

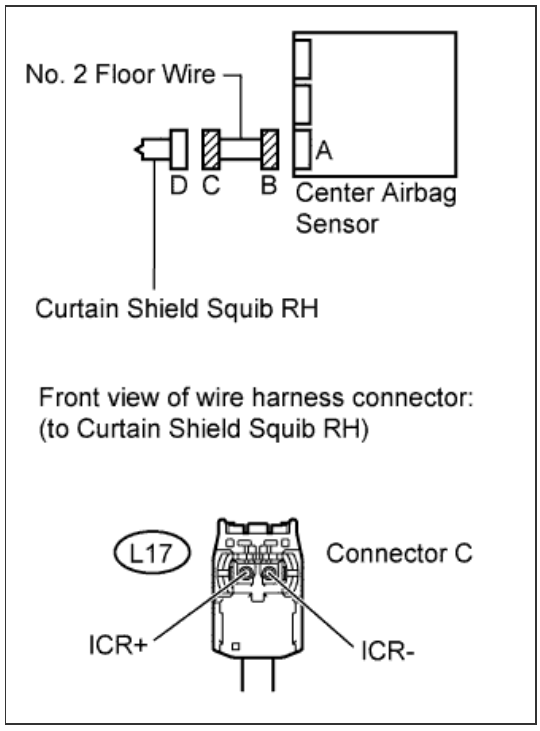

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

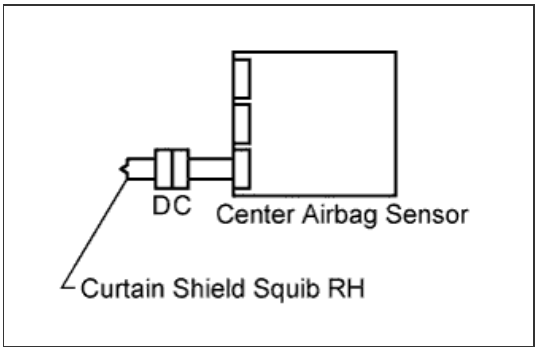

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1630/23 Rear Airbag Sensor RH Circuit Malfunction

DTC B1695/16 Door Side Airbag Sensor LH Malfunction

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.

- The side airbag sensor LH or rear airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc. If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated. DTC B1630/23 or B1695/16 is stored when a malfunction is detected in the side airbag sensor LH or rear airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1630/23	When one of the following conditions is met: • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor RH • Center airbag sensor assembly
B1695/16	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

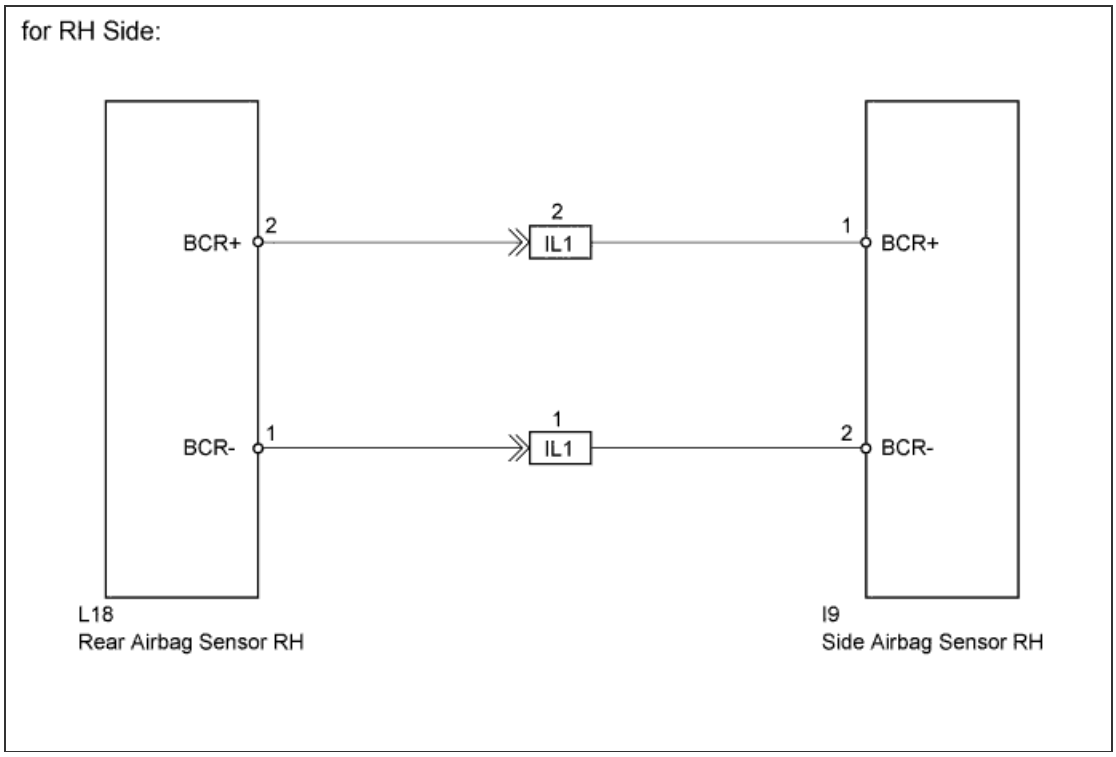

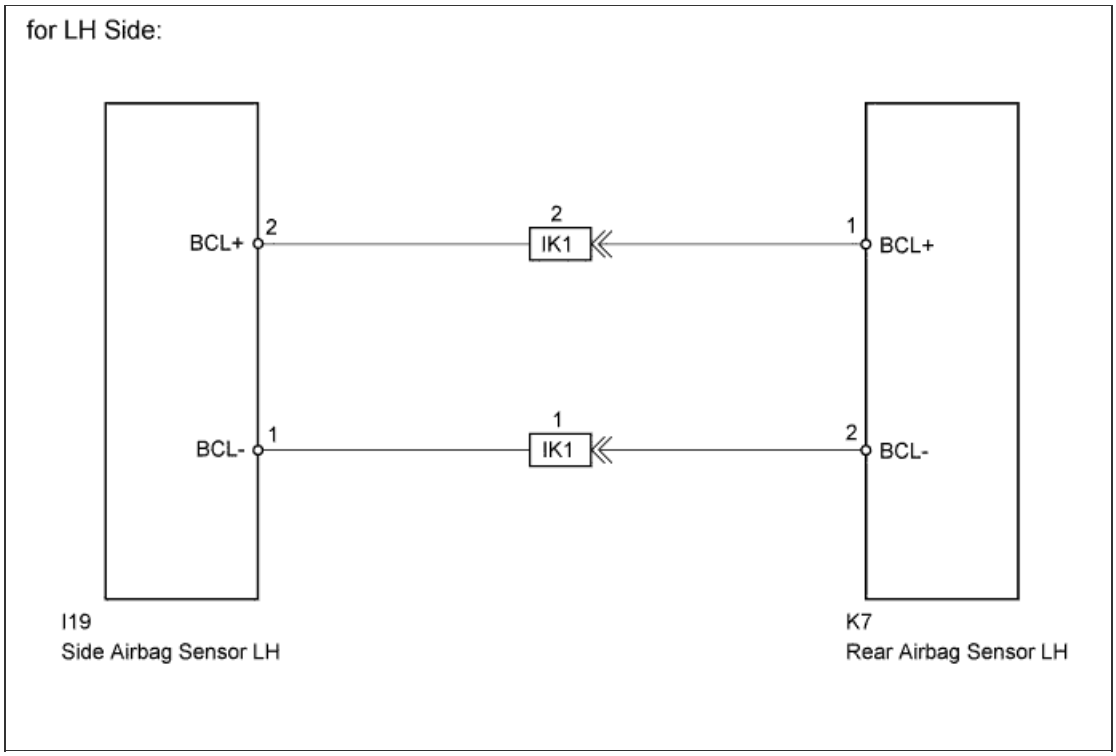

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG).

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1630 and B1695 are not output	A
DTC B1695 is output	B
DTC B1630 is output	C

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 3
C	

2.CHECK REAR AIRBAG SENSOR RH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor RH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g Turn the engine switch off.

h Turn the engine switch on (IG), and wait for at least 60 seconds.


i Check for DTCs (Click here).

OK:

DTC B1630 is not output.

HINT:

Codes other than DTC B1630 may be output at this time, but they are not related to this check.

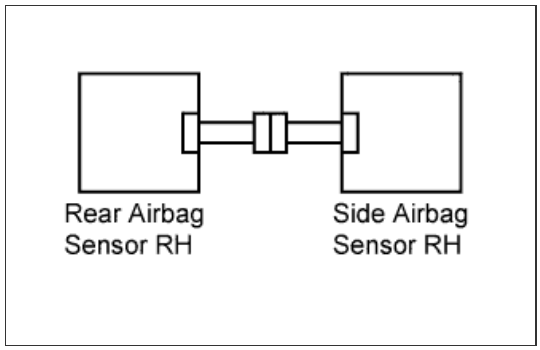

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

3.CHECK SIDE AIRBAG SENSOR LH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

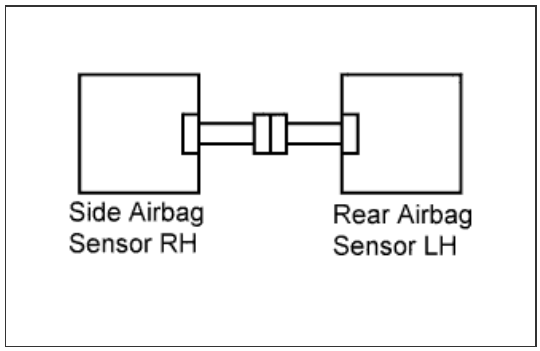

Result

Result	Proceed to
DTC B1690 and B1695 are not output	A
DTC B1695 is output	B
DTC B1690 is output	C

HINT:

Codes other than DTC B1690 and B1695 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

C

REPLACE SIDE AIRBAG SENSOR LH (Click here)

DTC B1830/57 Short in Curtain Shield Squib RH Circuit

DTC B1831/57 Open in Curtain Shield Squib RH Circuit

DTC B1832/57 Short to GND in Curtain Shield Squib RH Circuit

DTC B1833/57 Short to B+ in Curtain Shield Squib RH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1830/57	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1831/57	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1832/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly
B1833/57	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

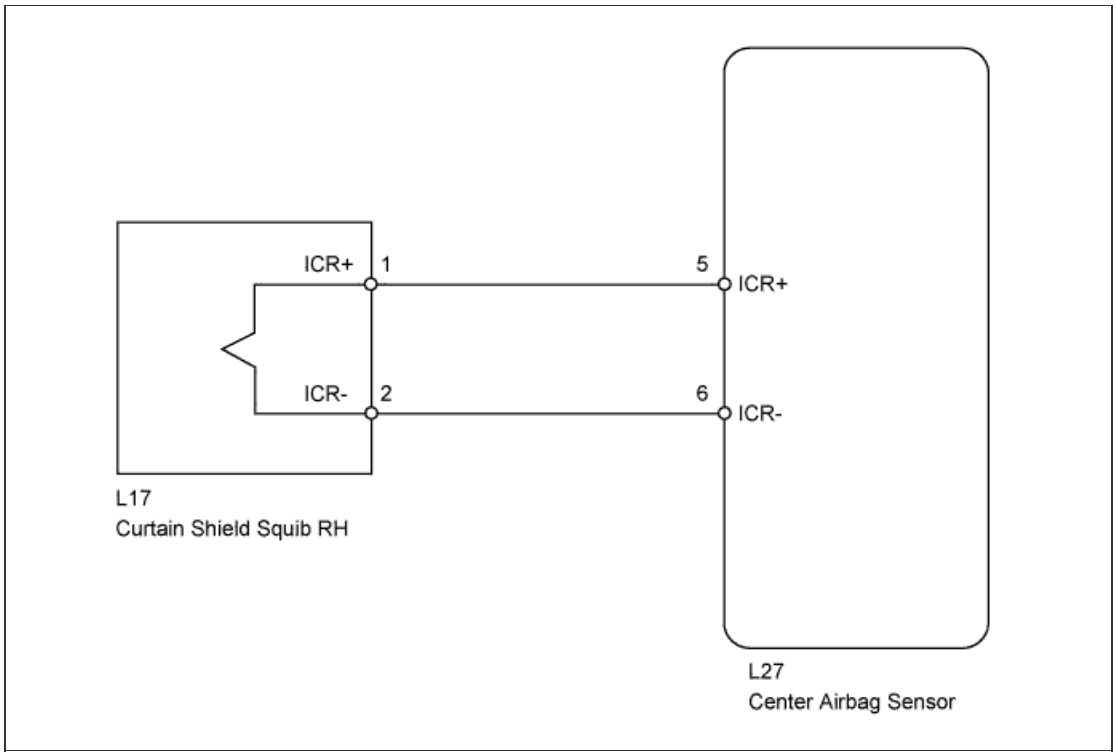

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield airbag RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

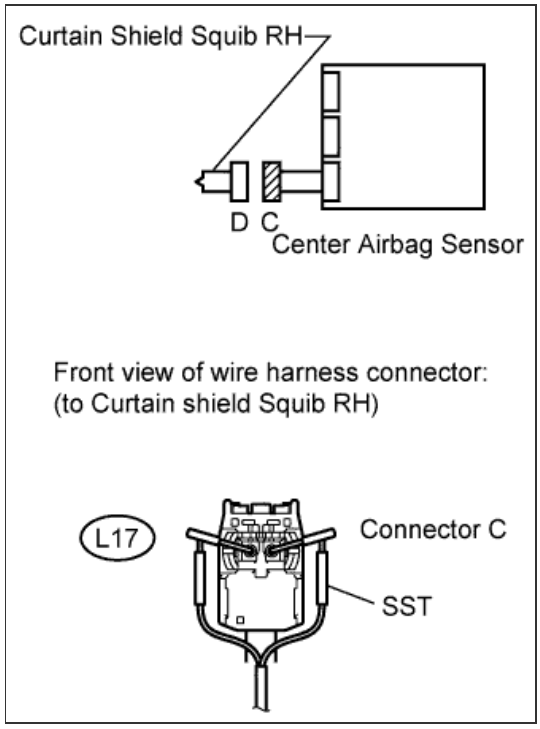

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield airbag RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
17-1 (ICR+) - Body ground	ngine switch on (IG)	Below 1 V
17-2 (ICR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
17-1 (ICR+) - 17-2 (ICR-)	Always	1 Ω or higher
17-1 (ICR+) - Body ground	Always	1 Ω or higher
17-2 (ICR-) -	Always	1 Ω or higher

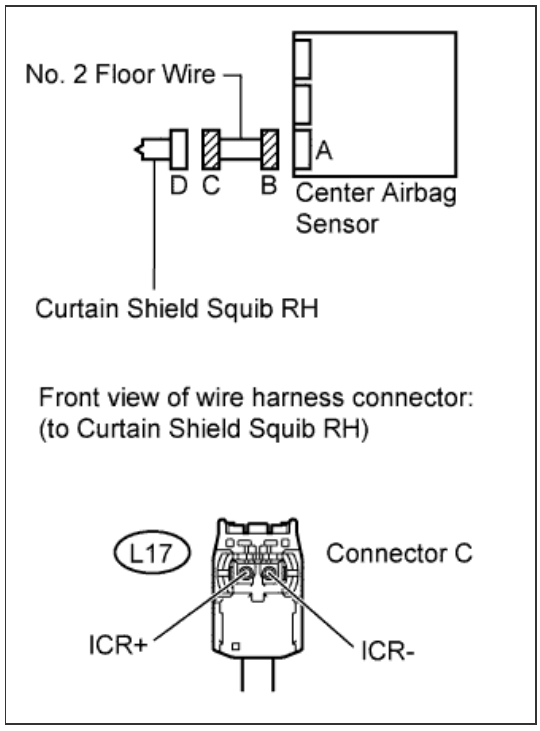

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

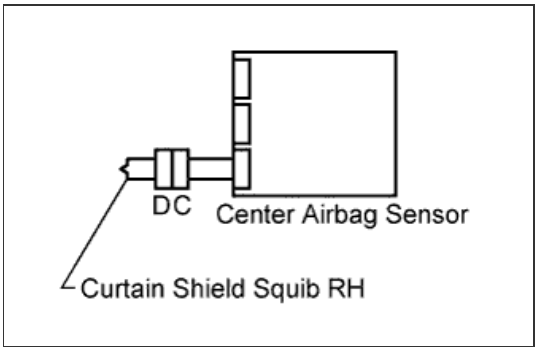

OK:

DTC B1830, B1831, B1832 or B1833 is not output.

HINT:

Codes other than DTC B1830, B1831, B1832 and B1833 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1630/23 Rear Airbag Sensor RH Circuit Malfunction

DTC B1695/16 Door Side Airbag Sensor LH Malfunction

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.

- The side airbag sensor LH or rear airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc. If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated. DTC B1630/23 or B1695/16 is stored when a malfunction is detected in the side airbag sensor LH or rear airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1630/23	When one of the following conditions is met: • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor RH • Center airbag sensor assembly
B1695/16	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

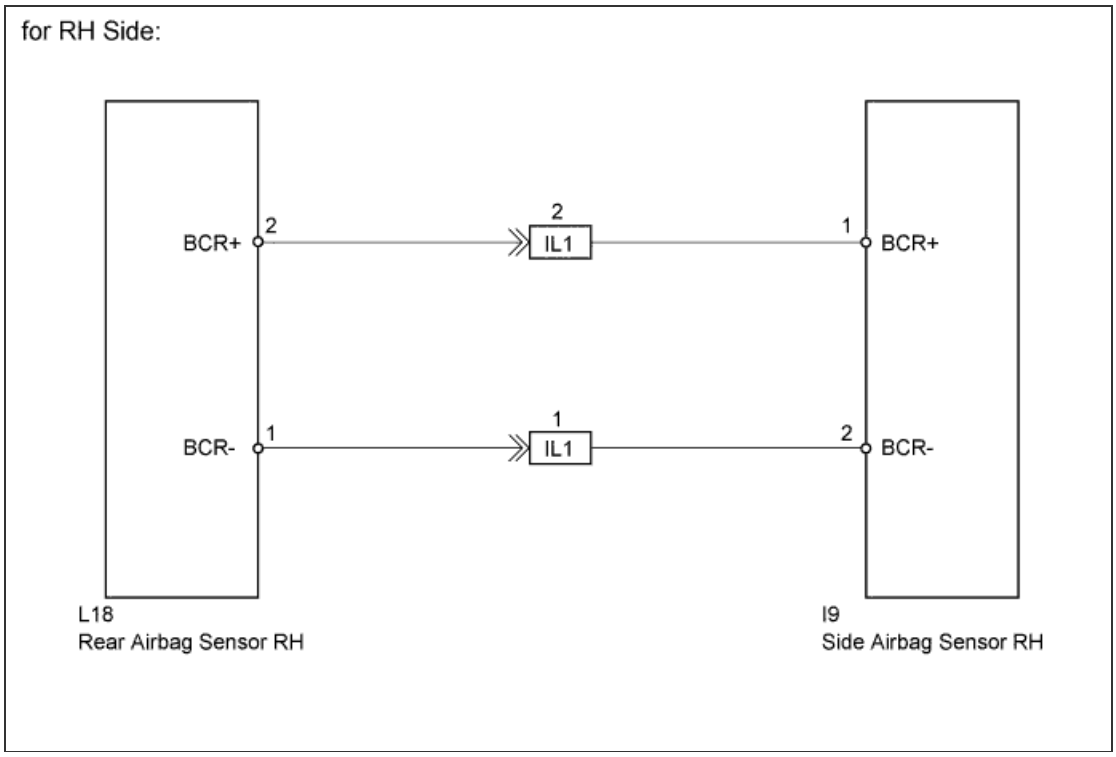

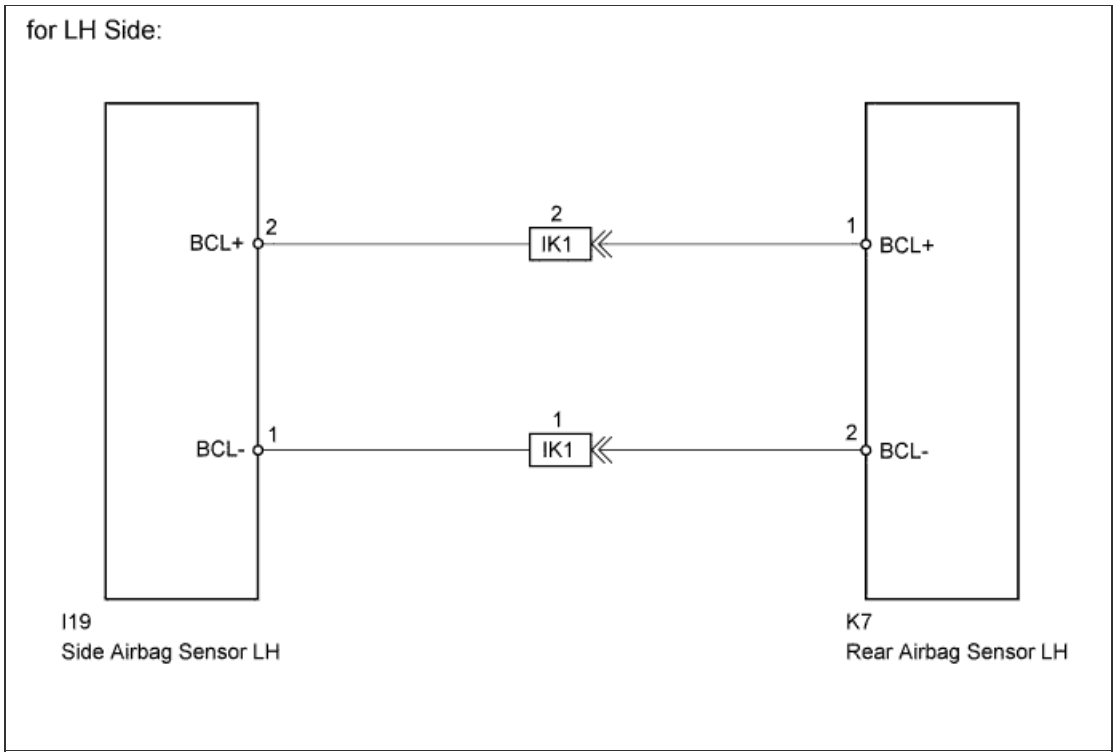

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG).

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1630 and B1695 are not output	A
DTC B1695 is output	B
DTC B1630 is output	C

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 3
C	

2.CHECK REAR AIRBAG SENSOR RH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor RH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g Turn the engine switch off.

h Turn the engine switch on (IG), and wait for at least 60 seconds.


i Check for DTCs (Click here).

OK:

DTC B1630 is not output.

HINT:

Codes other than DTC B1630 may be output at this time, but they are not related to this check.

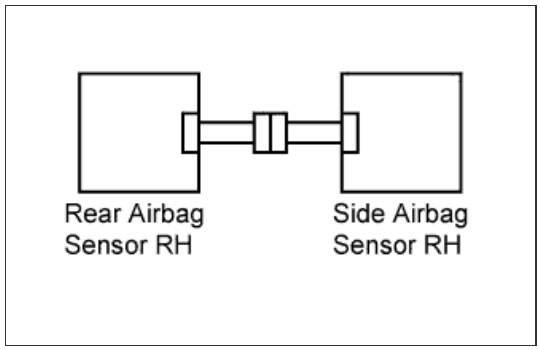

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

3.CHECK SIDE AIRBAG SENSOR LH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

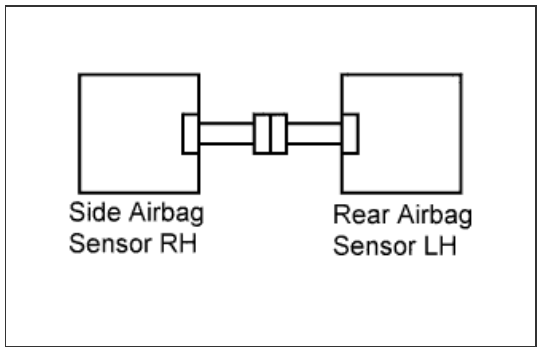

Result

Result	Proceed to
DTC B1690 and B1695 are not output	A
DTC B1695 is output	B
DTC B1690 is output	C

HINT:

Codes other than DTC B1690 and B1695 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

C

REPLACE SIDE AIRBAG SENSOR LH (Click here)

DTC B1835/58 Short in Curtain Shield Squib LH Circuit

DTC B1836/58 Open in Curtain Shield Squib LH Circuit

DTC B1837/58 Short to GND in Curtain Shield Squib LH Circuit

DTC B1838/58 Short to B+ in Curtain Shield Squib LH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1835/58	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1836/58	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1837/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1838/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

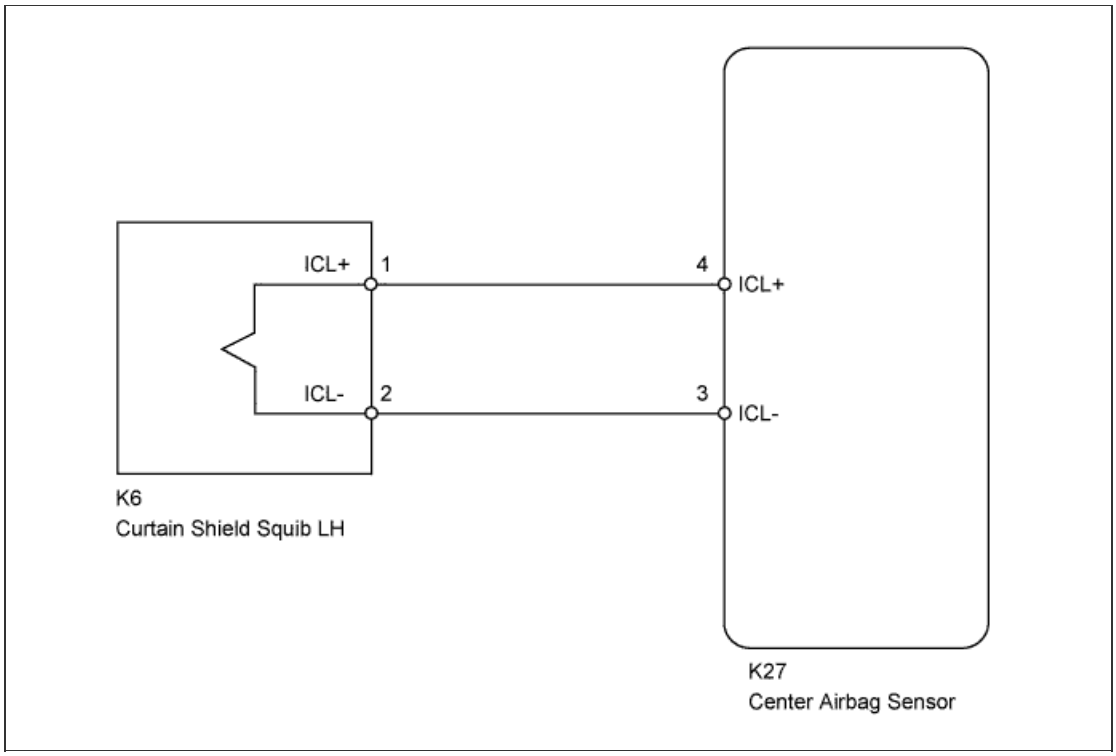

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield airbag LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag LH (curtain shield squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

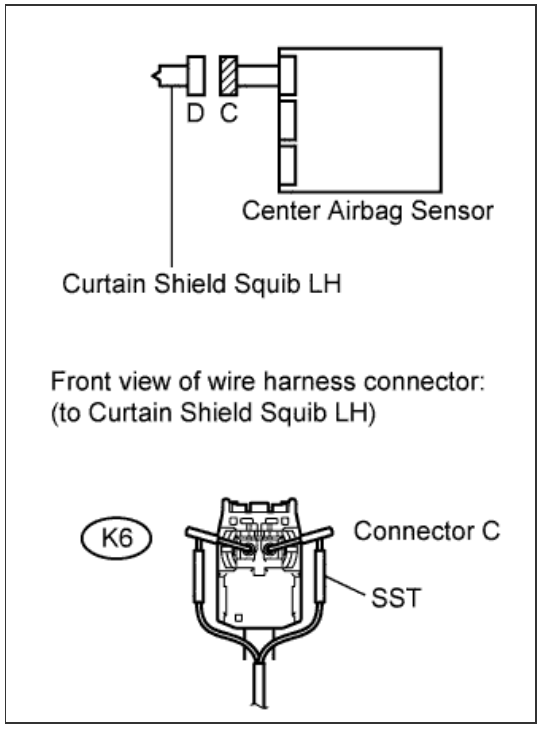

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield airbag LH side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD AIRBAG LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K6-1 (ICL+) - Body ground	Engine switch on (IG)	Below 1 V
K6-2 (ICL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	1 MΩ or higher
K6-1 (ICL+) - Body ground	Always	1 MΩ or higher
K6-2 (ICL-) - Body	Always	1 MΩ or higher

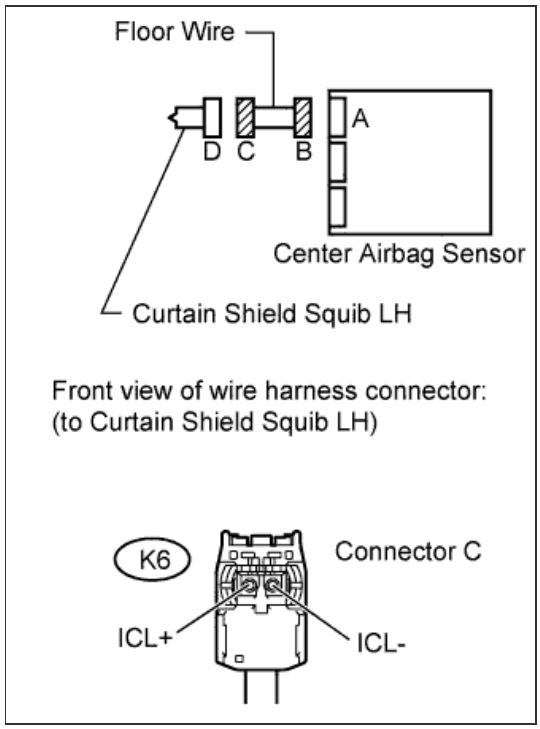

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

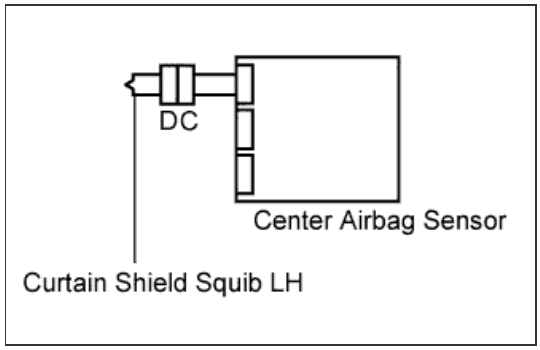

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1630/23 Rear Airbag Sensor RH Circuit Malfunction

DTC B1695/16 Door Side Airbag Sensor LH Malfunction

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.

- The side airbag sensor LH or rear airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc. If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated. DTC B1630/23 or B1695/16 is stored when a malfunction is detected in the side airbag sensor LH or rear airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1630/23	When one of the following conditions is met: • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor RH • Center airbag sensor assembly
B1695/16	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

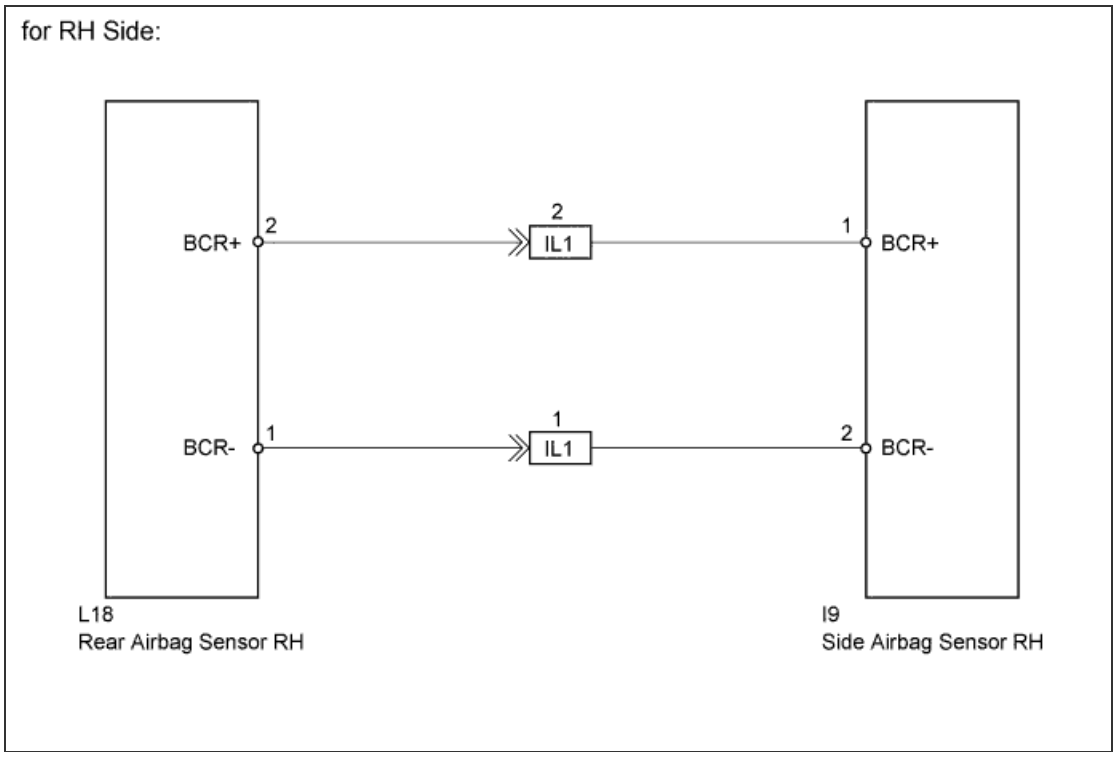

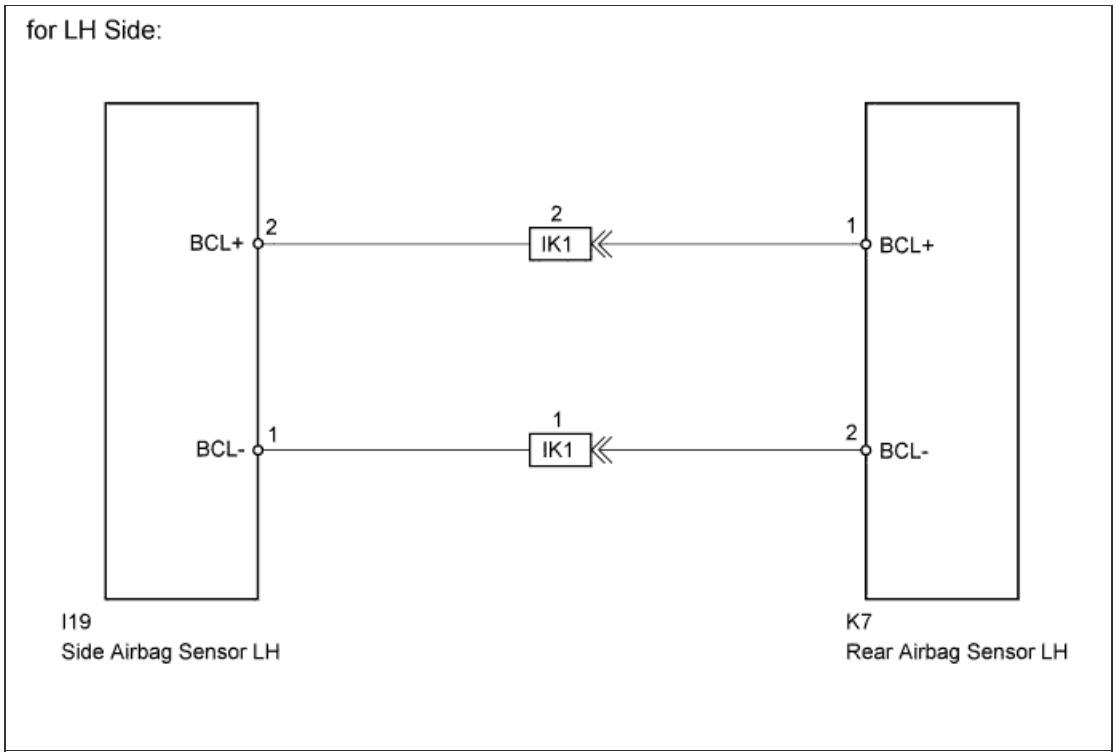

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG).

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1630 and B1695 are not output	A
DTC B1695 is output	B
DTC B1630 is output	C

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 3
C	

2.CHECK REAR AIRBAG SENSOR RH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor RH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g Turn the engine switch off.

h Turn the engine switch on (IG), and wait for at least 60 seconds.


i Check for DTCs (Click here).

OK:

DTC B1630 is not output.

HINT:

Codes other than DTC B1630 may be output at this time, but they are not related to this check.

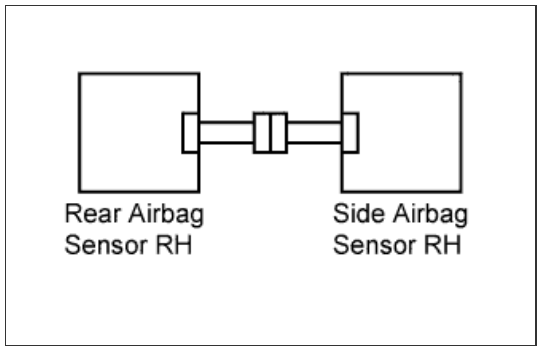

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

3.CHECK SIDE AIRBAG SENSOR LH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

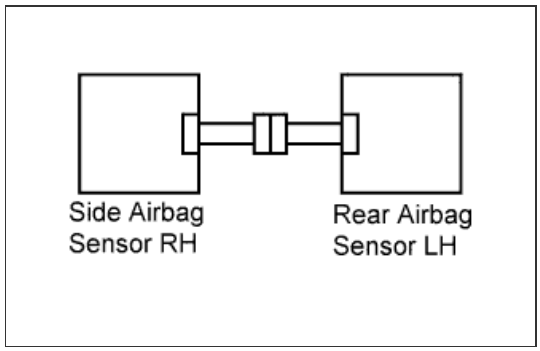

Result

Result	Proceed to
DTC B1690 and B1695 are not output	A
DTC B1695 is output	B
DTC B1690 is output	C

HINT:

Codes other than DTC B1690 and B1695 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

C

REPLACE SIDE AIRBAG SENSOR LH (Click here)

DTC B1835/58 Short in Curtain Shield Squib LH Circuit

DTC B1836/58 Open in Curtain Shield Squib LH Circuit

DTC B1837/58 Short to GND in Curtain Shield Squib LH Circuit

DTC B1838/58 Short to B+ in Curtain Shield Squib LH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1835/58	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1836/58	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1837/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1838/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

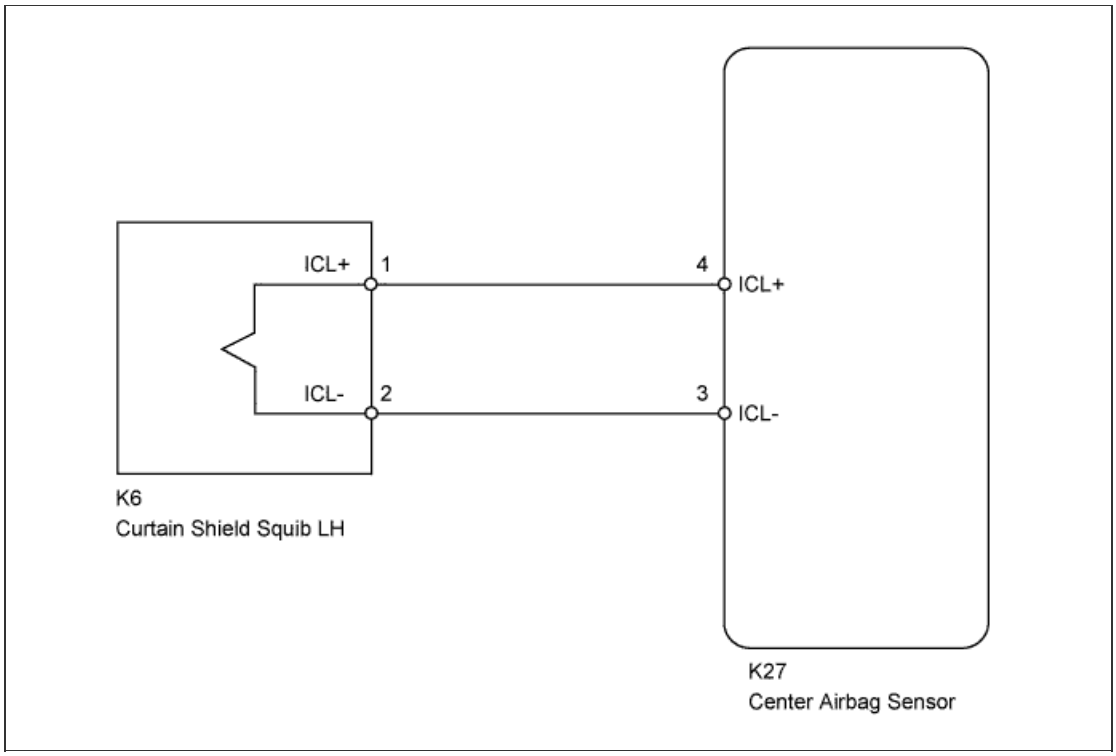

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield airbag LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag LH (curtain shield squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

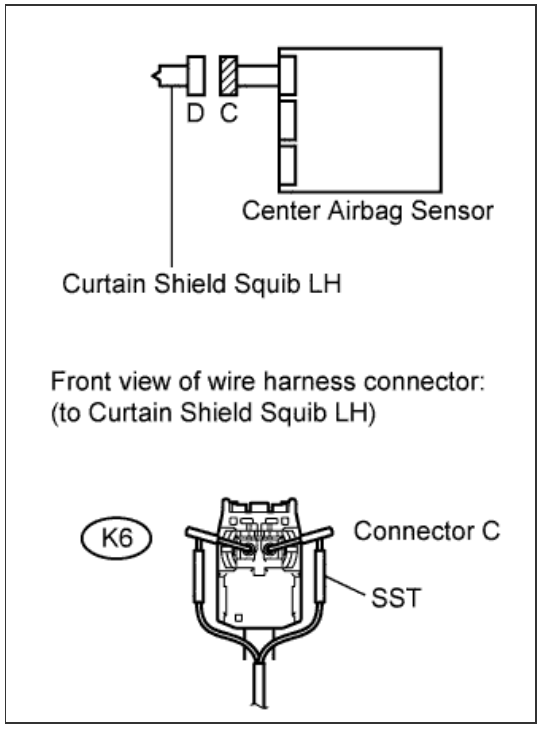

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield airbag LH side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD AIRBAG LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K6-1 (ICL+) - Body ground	Engine switch on (IG)	Below 1 V
K6-2 (ICL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	1 MΩ or higher
K6-1 (ICL+) - Body ground	Always	1 MΩ or higher
K6-2 (ICL-) - Body	Always	1 MΩ or higher

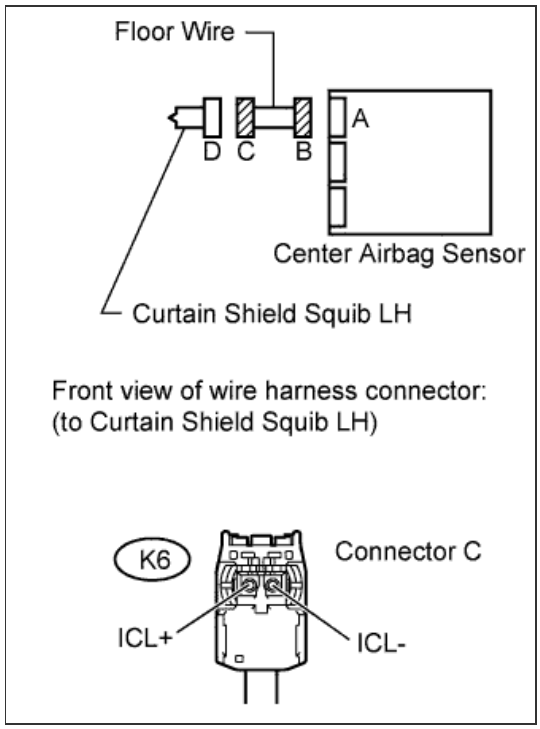

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

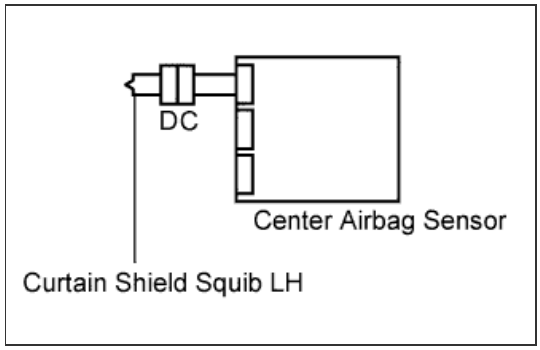

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1630/23 Rear Airbag Sensor RH Circuit Malfunction

DTC B1695/16 Door Side Airbag Sensor LH Malfunction

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.

- The side airbag sensor LH or rear airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc. If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated. DTC B1630/23 or B1695/16 is stored when a malfunction is detected in the side airbag sensor LH or rear airbag sensor RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1630/23	When one of the following conditions is met: • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor RH • Center airbag sensor assembly
B1695/16	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

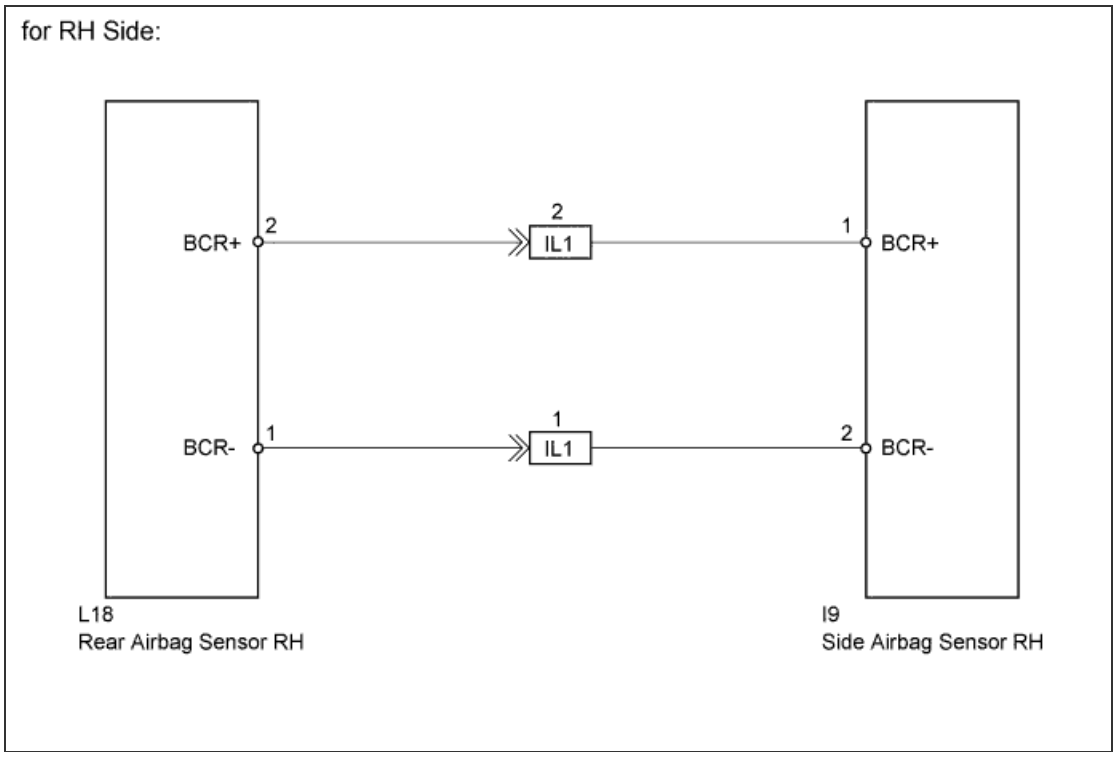

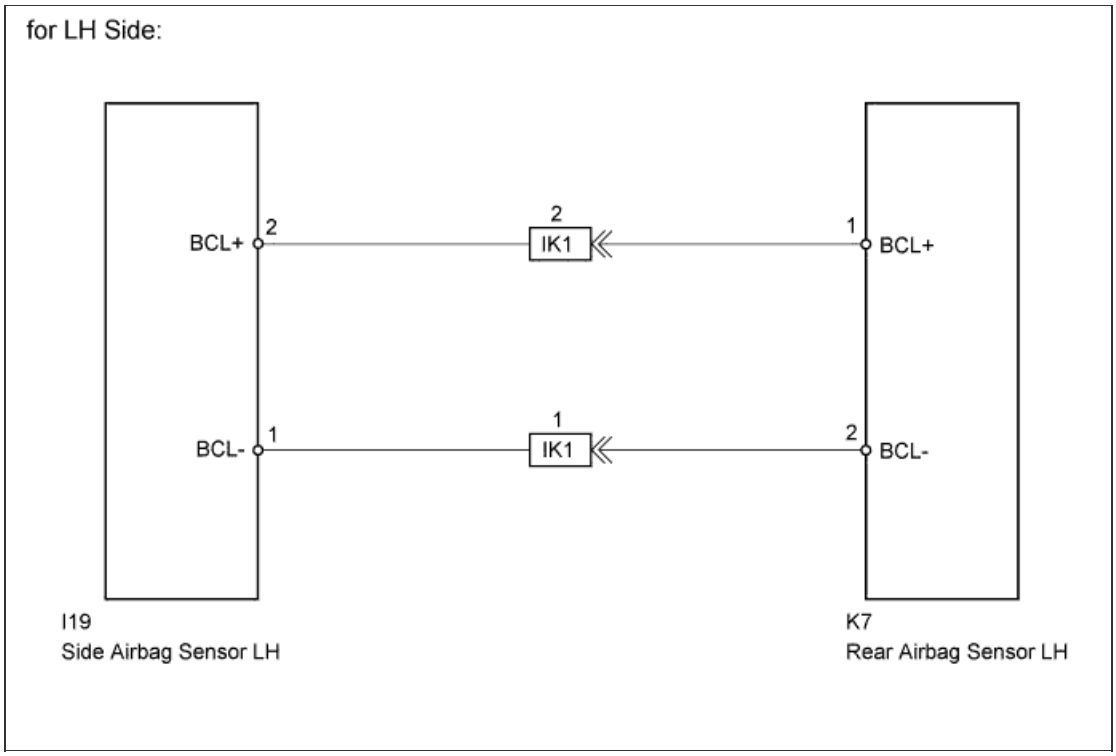

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG).

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1630 and B1695 are not output	A
DTC B1695 is output	B
DTC B1630 is output	C

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 3
C	

2.CHECK REAR AIRBAG SENSOR RH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor RH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g Turn the engine switch off.

h Turn the engine switch on (IG), and wait for at least 60 seconds.


i Check for DTCs (Click here).

OK:

DTC B1630 is not output.

HINT:

Codes other than DTC B1630 may be output at this time, but they are not related to this check.

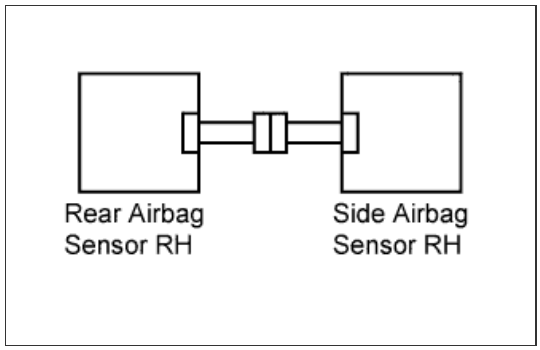

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

3.CHECK SIDE AIRBAG SENSOR LH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

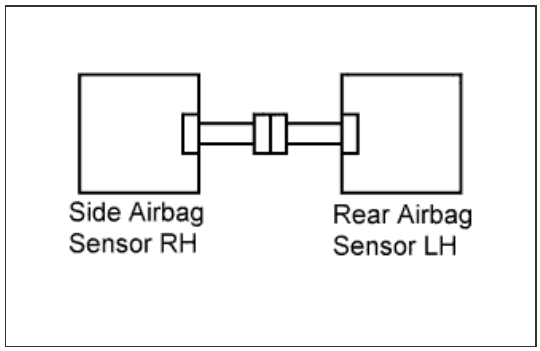

Result

Result	Proceed to
DTC B1690 and B1695 are not output	A
DTC B1695 is output	B
DTC B1690 is output	C

HINT:

Codes other than DTC B1690 and B1695 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

C

REPLACE SIDE AIRBAG SENSOR LH (Click here)

DTC B1835/58 Short in Curtain Shield Squib LH Circuit

DTC B1836/58 Open in Curtain Shield Squib LH Circuit

DTC B1837/58 Short to GND in Curtain Shield Squib LH Circuit

DTC B1838/58 Short to B+ in Curtain Shield Squib LH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1835/58	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1836/58	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1837/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1838/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

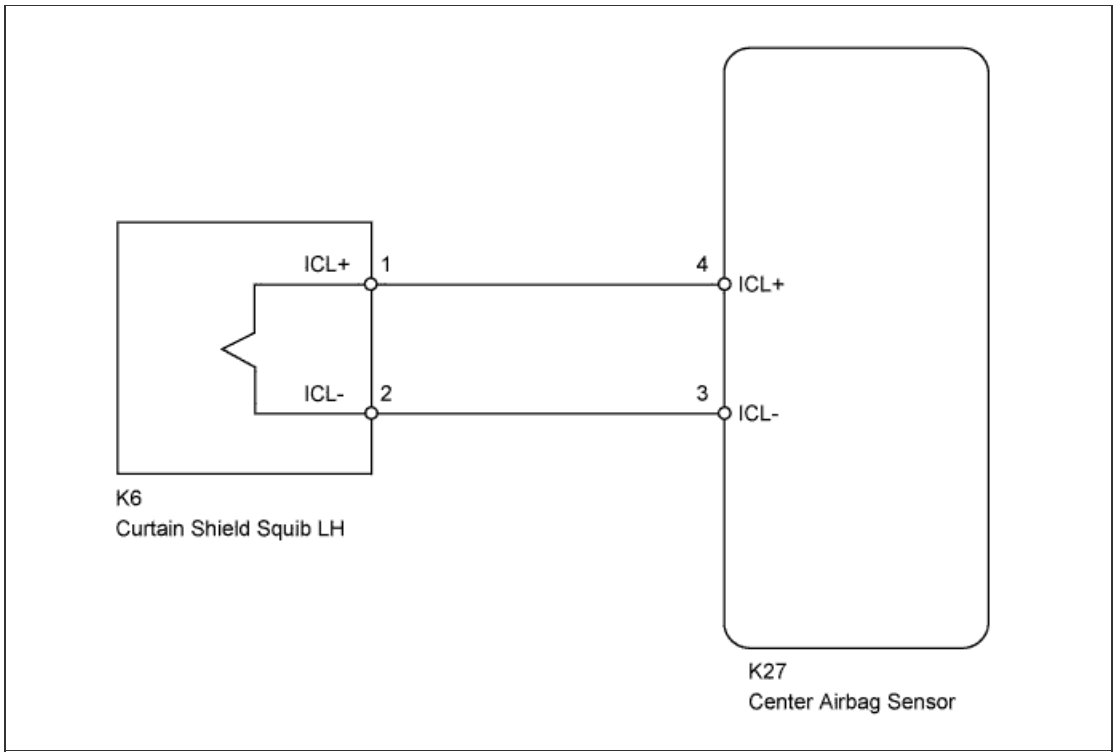

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield airbag LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag LH (curtain shield squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

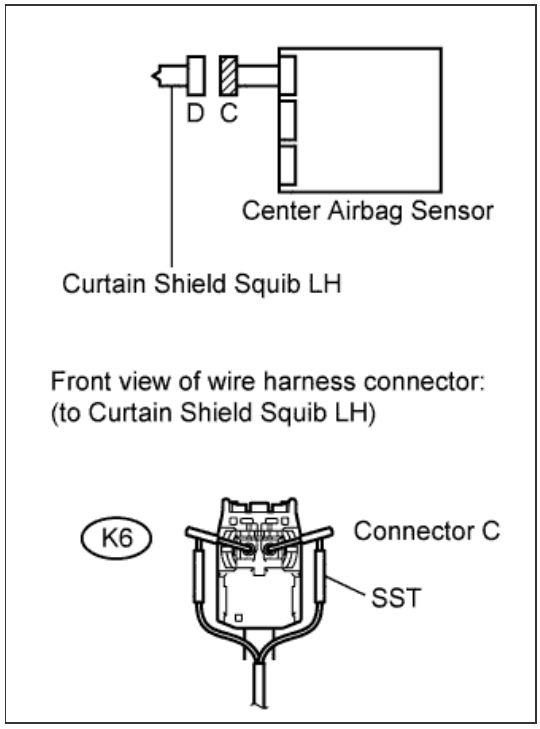

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield airbag LH side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD AIRBAG LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K6-1 (ICL+) - Body ground	Engine switch on (IG)	Below 1 V
K6-2 (ICL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	1 MΩ or higher
K6-1 (ICL+) - Body ground	Always	1 MΩ or higher
K6-2 (ICL-) - Body	Always	1 MΩ or higher

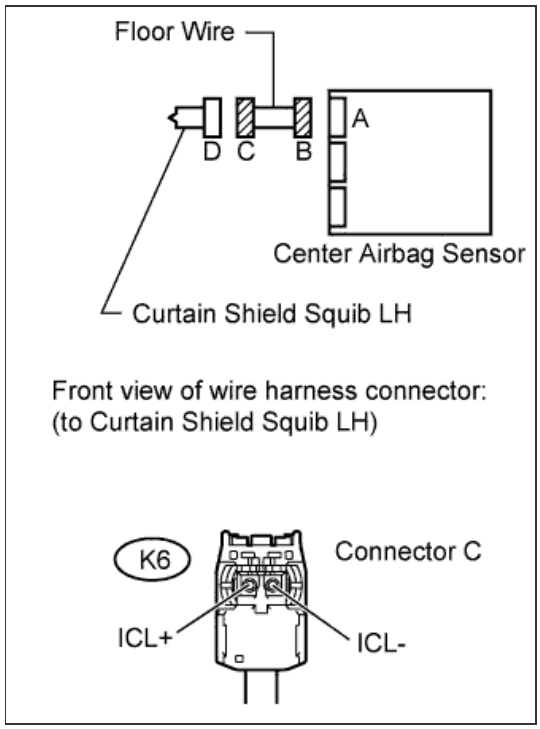

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

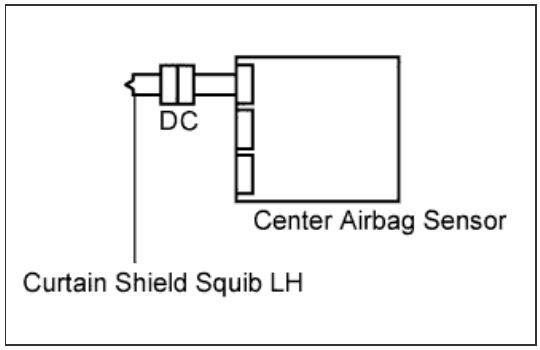

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1632/81 Lost Communication with Rear Airbag Sensor RH

DTC B1633/81 Rear Airbag Sensor Assembly RH Initialization Incomplete

DTC B1697/82 Lost Communication with Door Side Airbag Sensor LH

DTC B1698/82 Door Side Airbag Sensor LH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1632/81 or B1697/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1632/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1633/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1697/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1698/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

IRI DIAGRAM

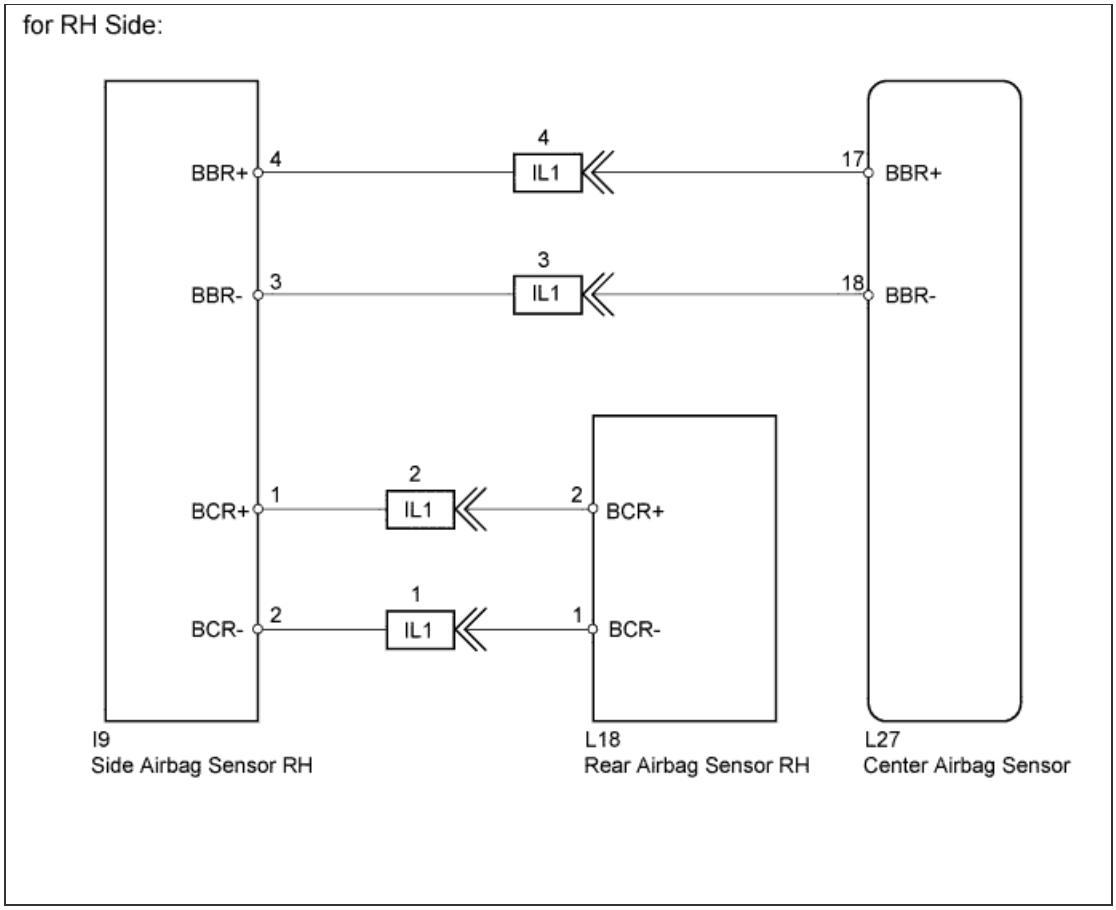

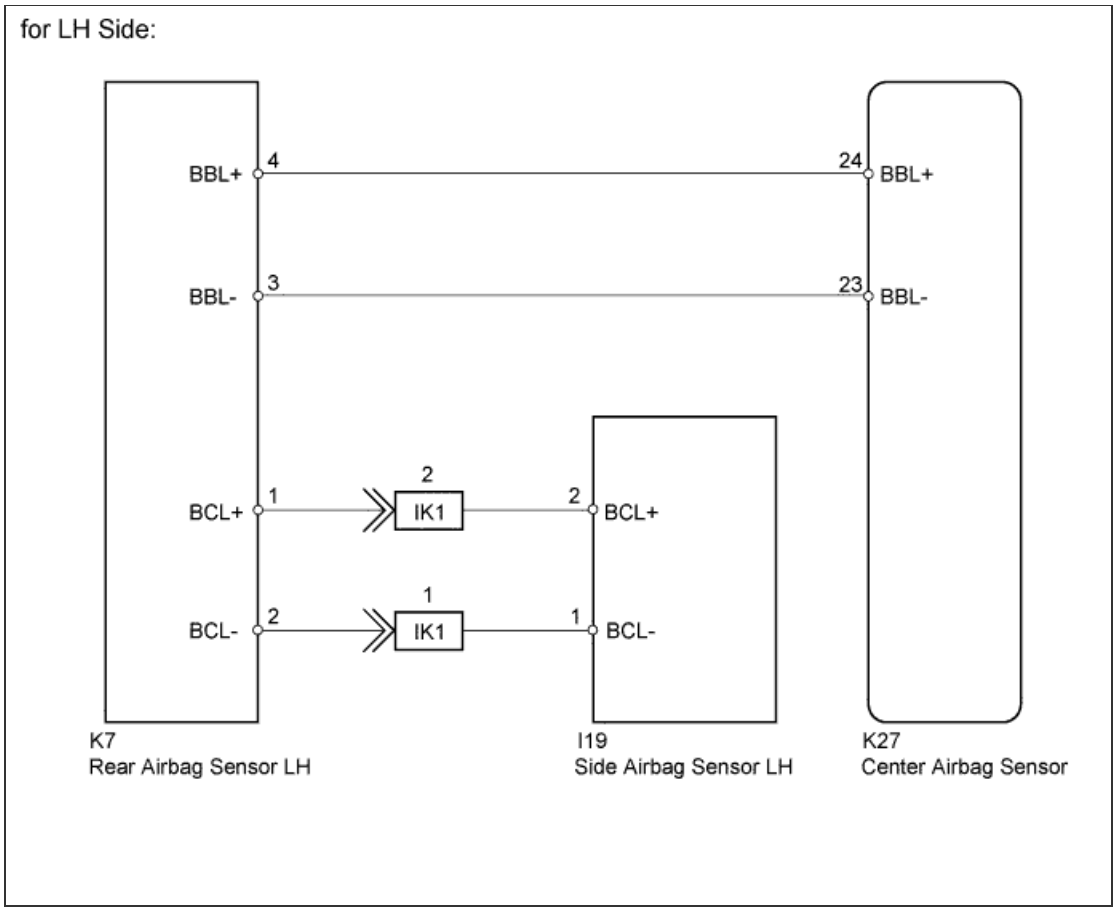

I SPECTION PROCEDURE

NOTICE:

hen disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 8
C	

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor RH and rear airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, rear airbag sensor RH and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor RH side and side airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

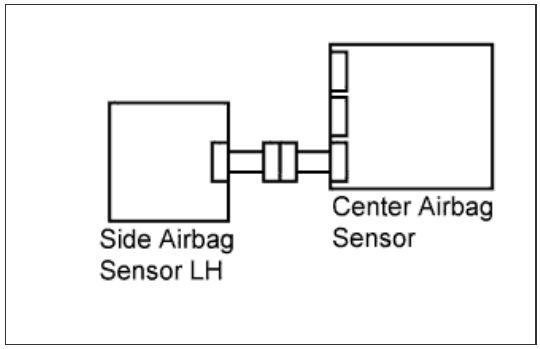

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

5 CHECK REAR AIRBAG SENSOR RH CIRCUIT

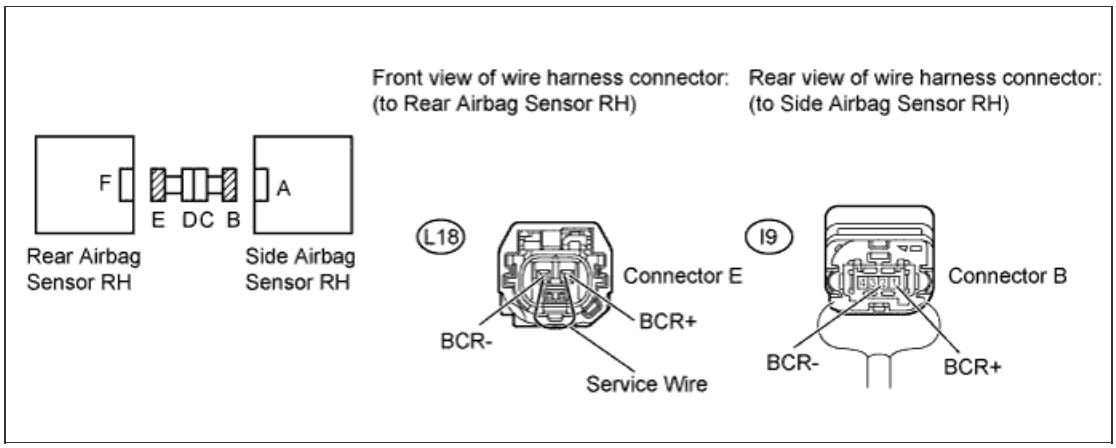

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector .

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 7

OK

6.CHECK REAR AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear airbag sensor RH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

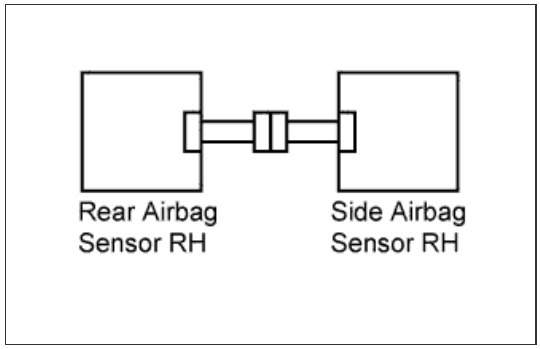

OK:

DTC B1632 and B1633 is not output.

HINT:


Codes other than DTC B1632 and B1633 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

7.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

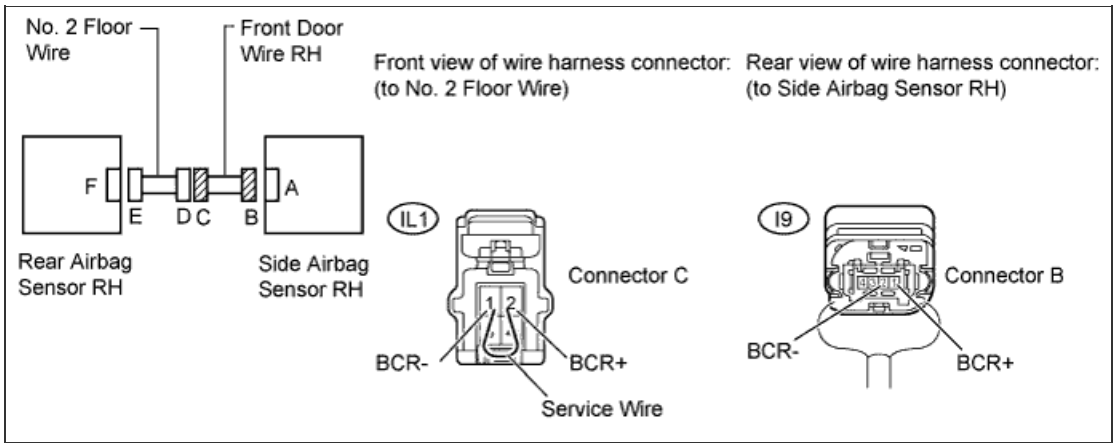

a. Disconnect the front door wire RH connectors from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

8.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor LH and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

9.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, side airbag sensor LH and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor LH side and side airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

10.CHECK REAR AIRBAG SENSOR LH

a. Connect the connector to the center airbag sensor.

b. Temporarily replace the rear airbag sensor LH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.


h. Check for DTCs (Click here).

OK:

DTC B1697 and B1698 are not output.

HINT:

Codes other than DTC B1697 and B1698 may be output at this time, but they are not related to this check.

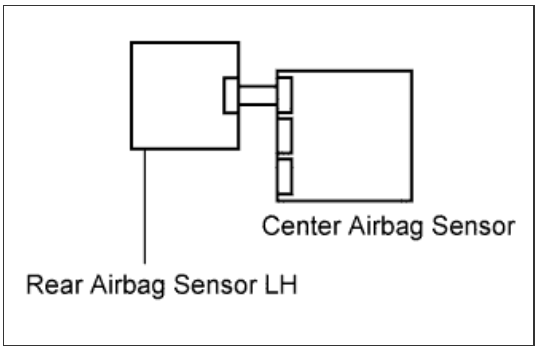


NG → Go to step 11

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

11.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

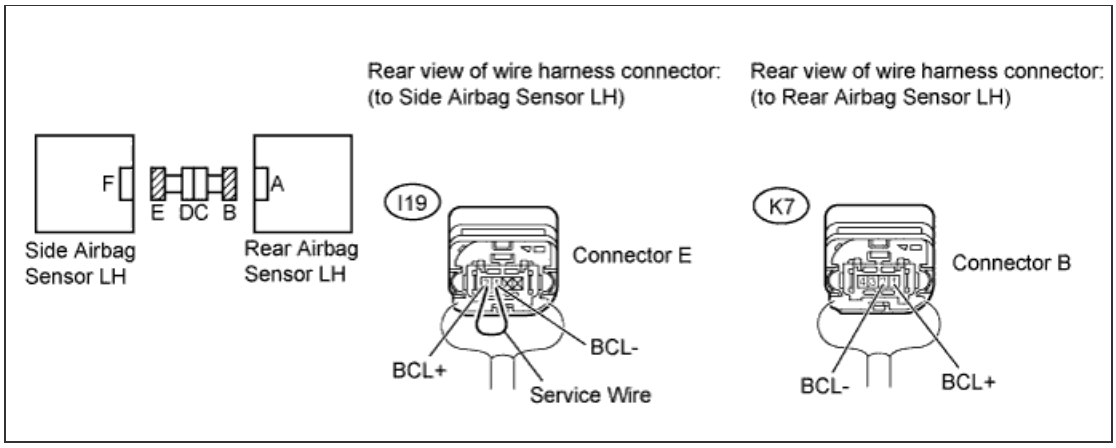

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the side airbag sensor LH and rear airbag sensor LH.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

j. Disconnect the service wire from connector .

k. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 13

OK

12.CHECK SIDE AIRBAG SENSOR LH

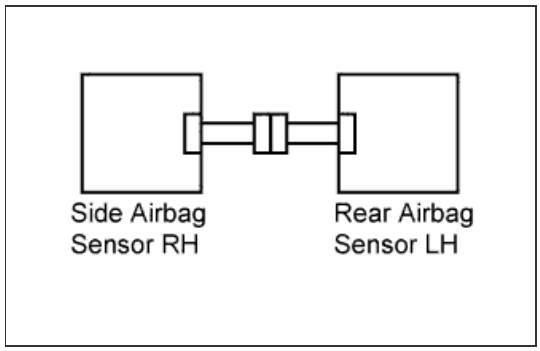

a. Connect the connectors to the rear airbag sensor LH.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1632 or B1633 is output	B
DTC B1697 or B1698 is output	C

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

13.CHECK FLOOR WIRE (SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

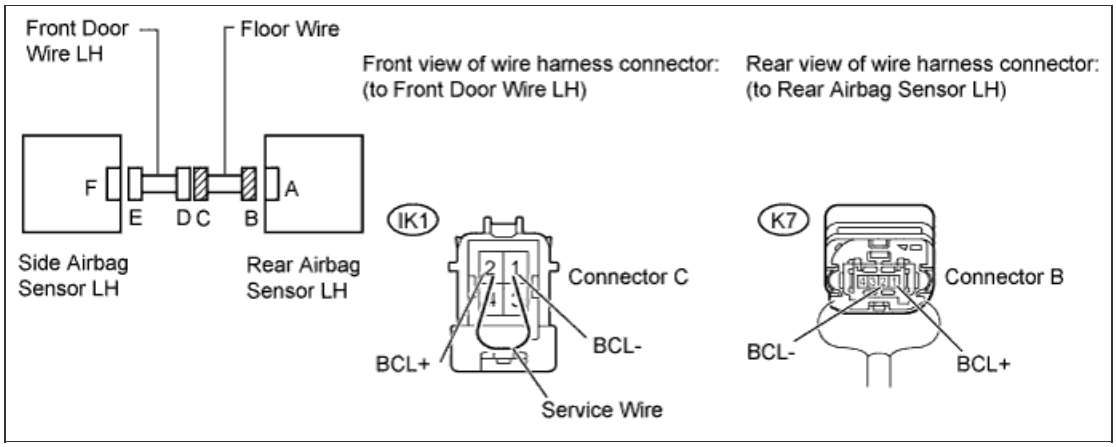

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

REPLACE FRONT DOOR WIRE LH

DTC B1835/58 Short in Curtain Shield Squib LH Circuit

DTC B1836/58 Open in Curtain Shield Squib LH Circuit

DTC B1837/58 Short to GND in Curtain Shield Squib LH Circuit

DTC B1838/58 Short to B+ in Curtain Shield Squib LH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1835/58	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1836/58	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1837/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1838/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

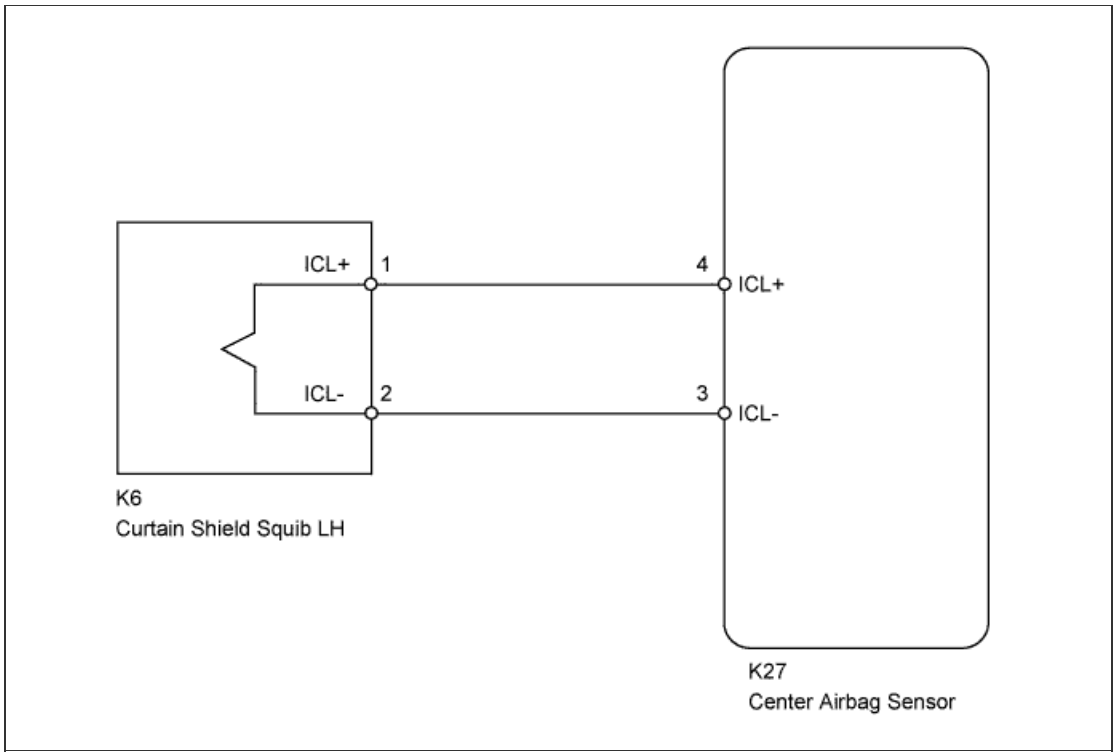

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield airbag LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag LH (curtain shield squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

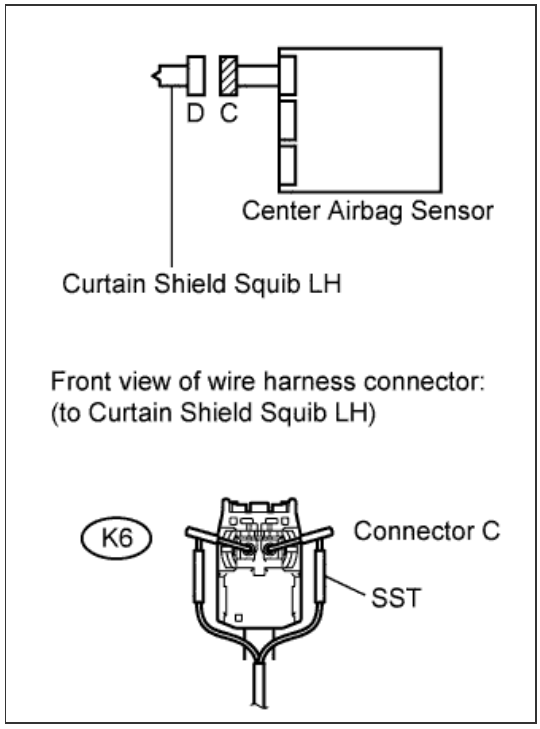

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield airbag LH side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD AIRBAG LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K6-1 (ICL+) - Body ground	Engine switch on (IG)	Below 1 V
K6-2 (ICL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	1 MΩ or higher
K6-1 (ICL+) - Body ground	Always	1 MΩ or higher
K6-2 (ICL-) - Body	Always	1 MΩ or higher

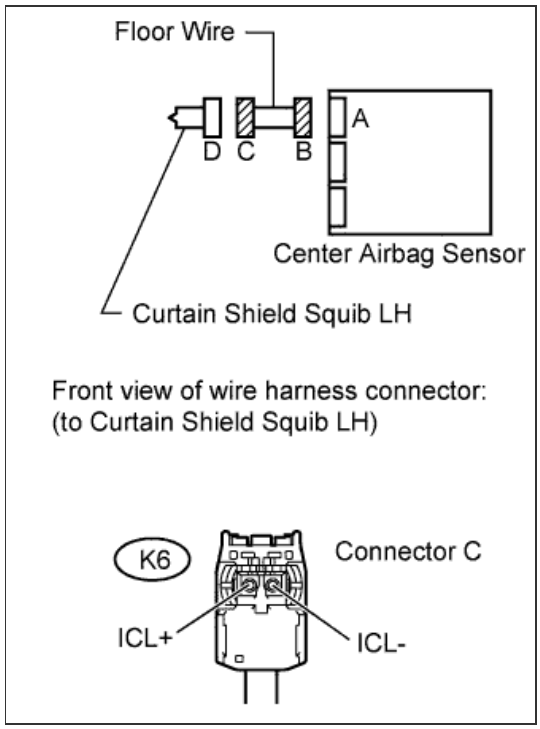

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

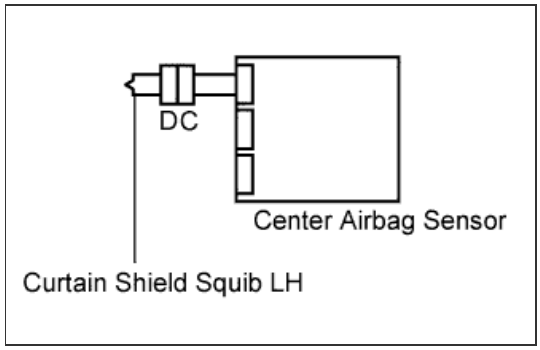

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1632/81 Lost Communication with Rear Airbag Sensor RH

DTC B1633/81 Rear Airbag Sensor Assembly RH Initialization Incomplete

DTC B1697/82 Lost Communication with Door Side Airbag Sensor LH

DTC B1698/82 Door Side Airbag Sensor LH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1632/81 or B1697/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1632/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1633/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1697/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1698/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

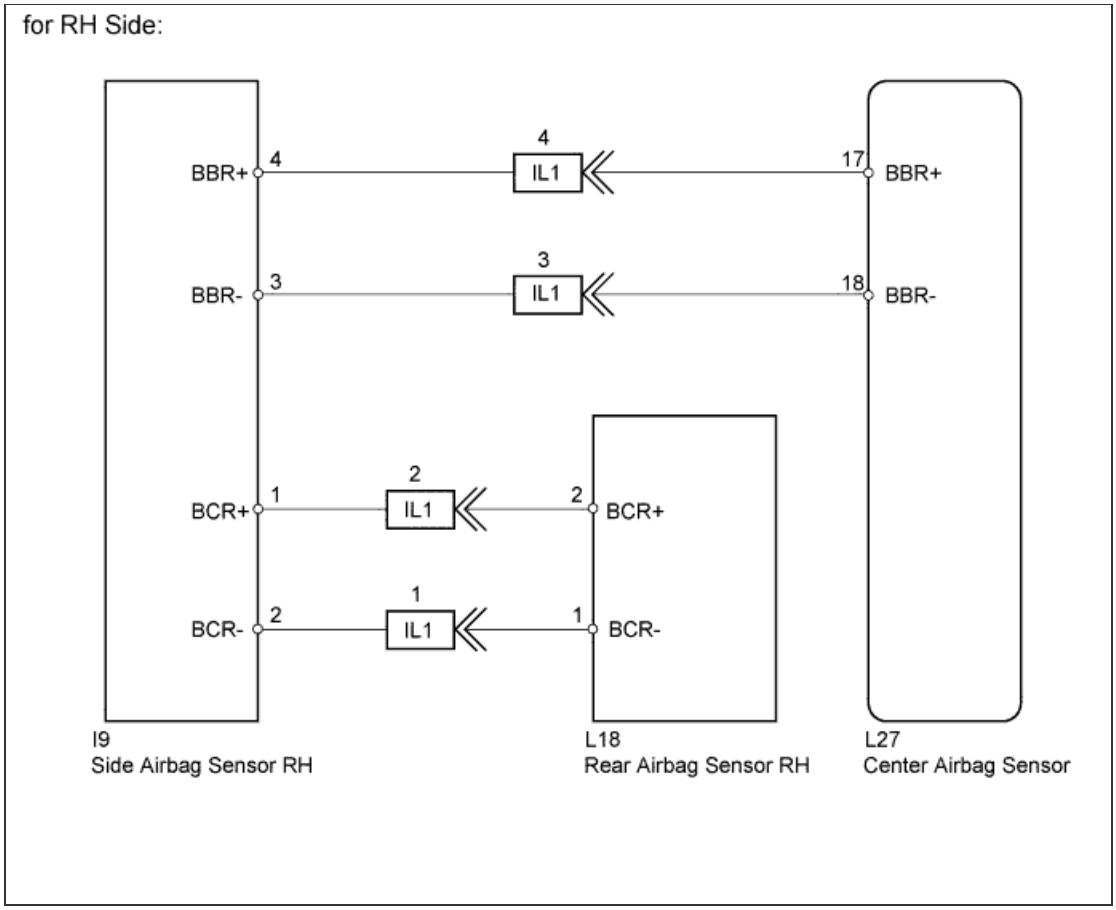

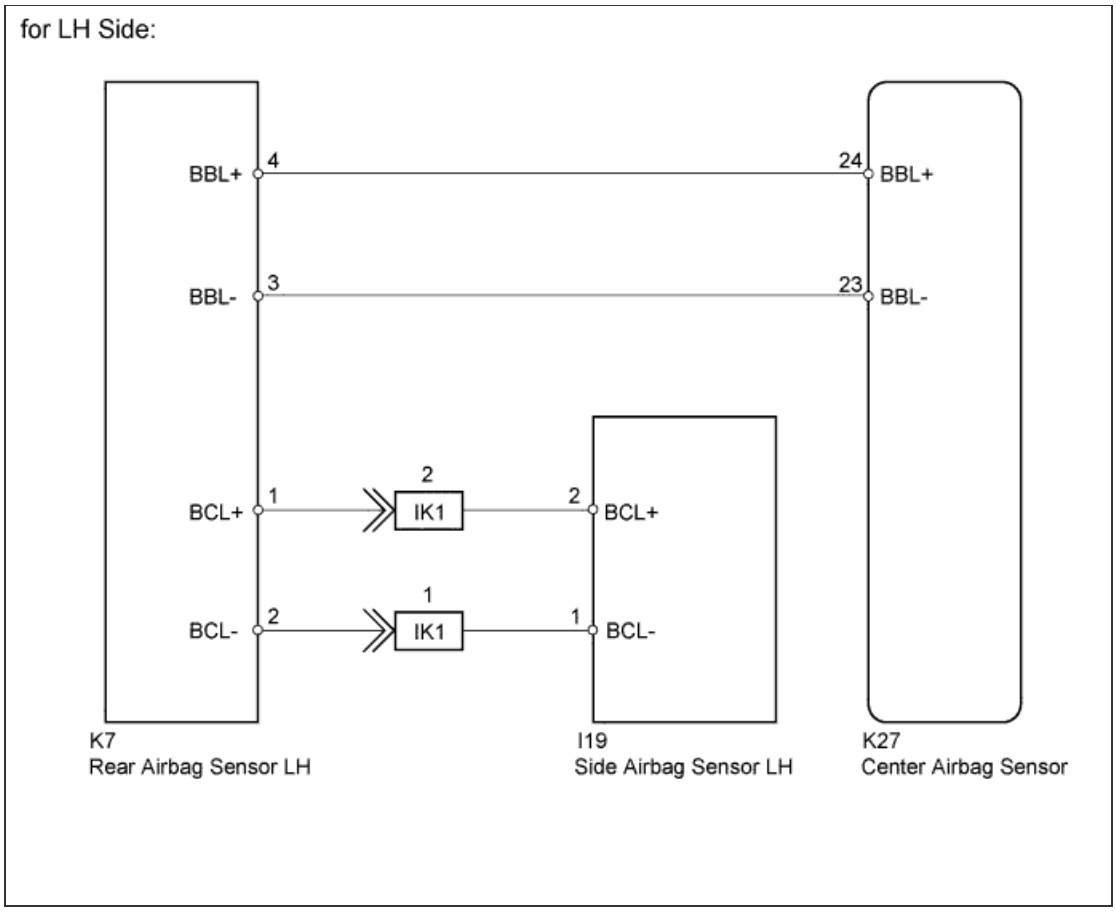

INSPECTION PROCEDURE

NOTICE:

hen disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 8
C	

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor RH and rear airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, rear airbag sensor RH and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor RH side and side airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

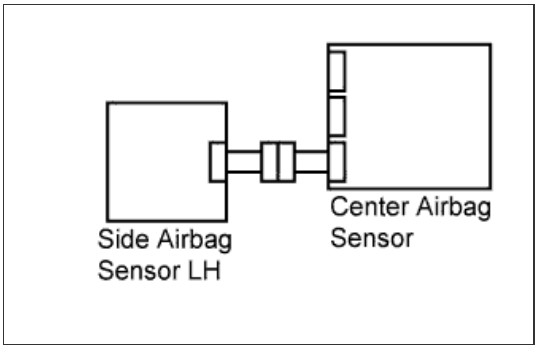

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

5.CHECK REAR AIRBAG SENSOR RH CIRCUIT

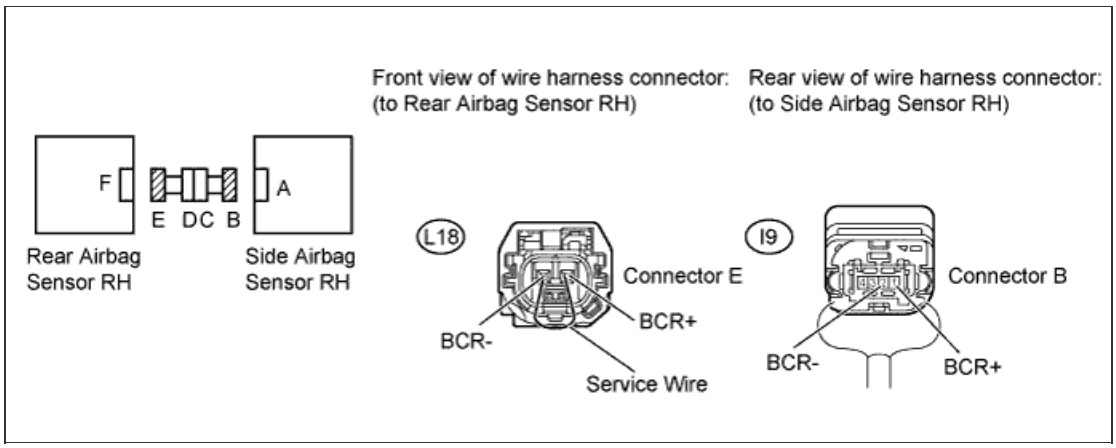

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector .

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 7

OK

6.CHECK REAR AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear airbag sensor RH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

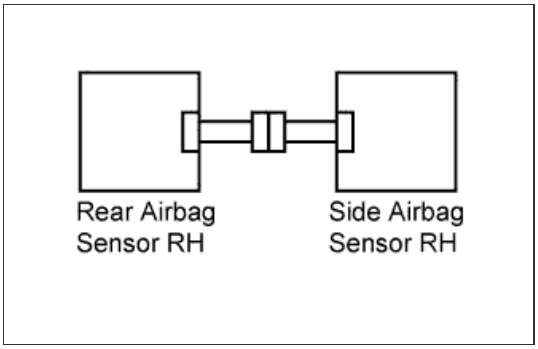

OK:

DTC B1632 and B1633 is not output.

HINT:


Codes other than DTC B1632 and B1633 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

7.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

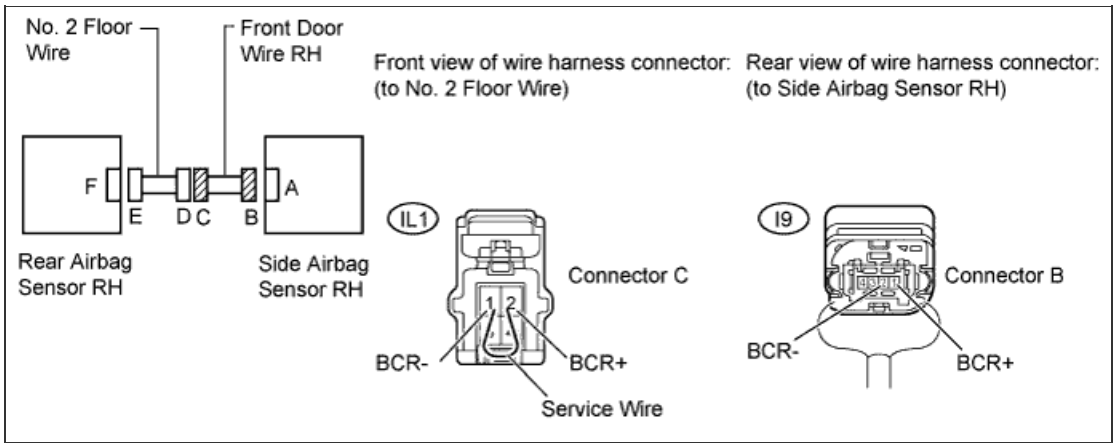

a. Disconnect the front door wire RH connectors from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

8.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor LH and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

9.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, side airbag sensor LH and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor LH side and side airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

10.CHECK REAR AIRBAG SENSOR LH

a. Connect the connector to the center airbag sensor.

b. Temporarily replace the rear airbag sensor LH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.


h. Check for DTCs (Click here).

OK:

DTC B1697 and B1698 are not output.

HINT:

Codes other than DTC B1697 and B1698 may be output at this time, but they are not related to this check.

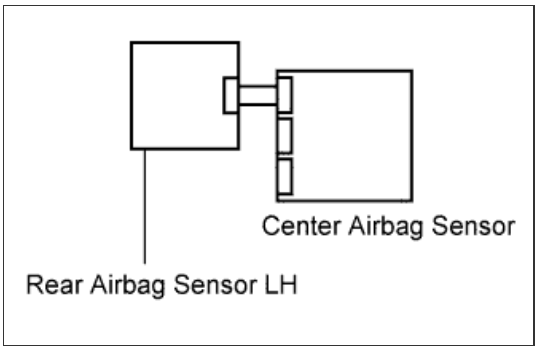


NG → Go to step 11

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

11.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

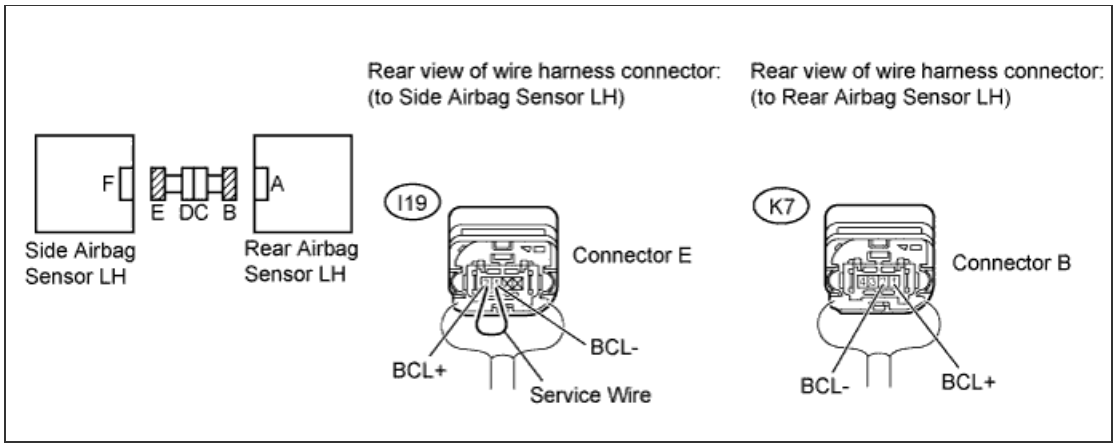

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the side airbag sensor LH and rear airbag sensor LH.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

j. Disconnect the service wire from connector .

k. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 13

OK

12.CHECK SIDE AIRBAG SENSOR LH

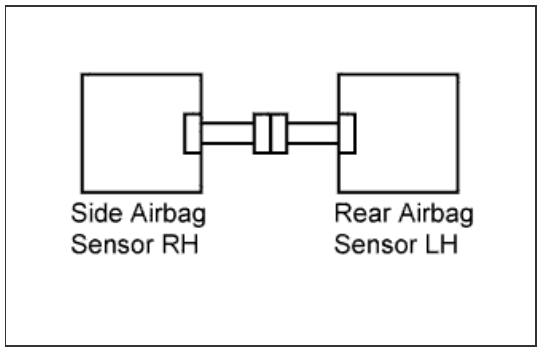

a. Connect the connectors to the rear airbag sensor LH.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1632 or B1633 is output	B
DTC B1697 or B1698 is output	C

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

13.CHECK FLOOR WIRE (SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

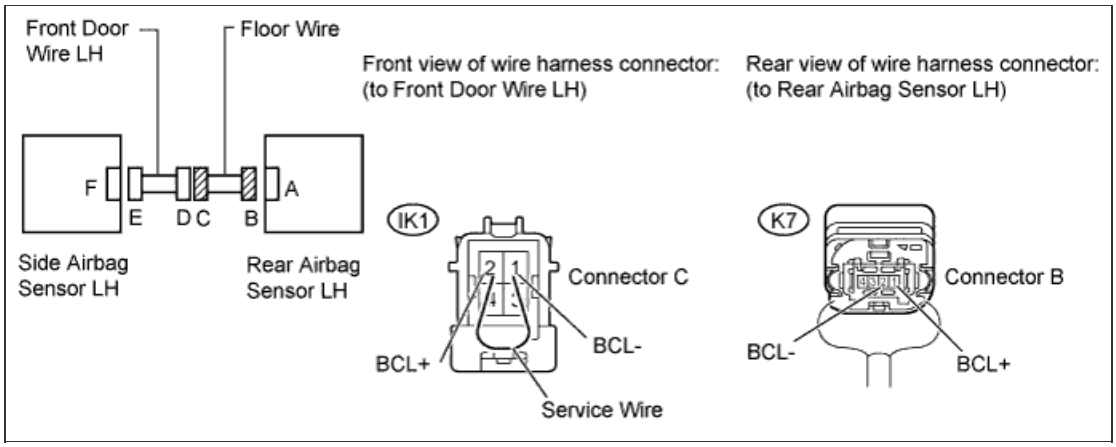

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

REPLACE FRONT DOOR WIRE LH

DTC B1835/58 Short in Curtain Shield Squib LH Circuit

DTC B1836/58 Open in Curtain Shield Squib LH Circuit

DTC B1837/58 Short to GND in Curtain Shield Squib LH Circuit

DTC B1838/58 Short to B+ in Curtain Shield Squib LH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1835/58	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1836/58	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1837/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1838/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

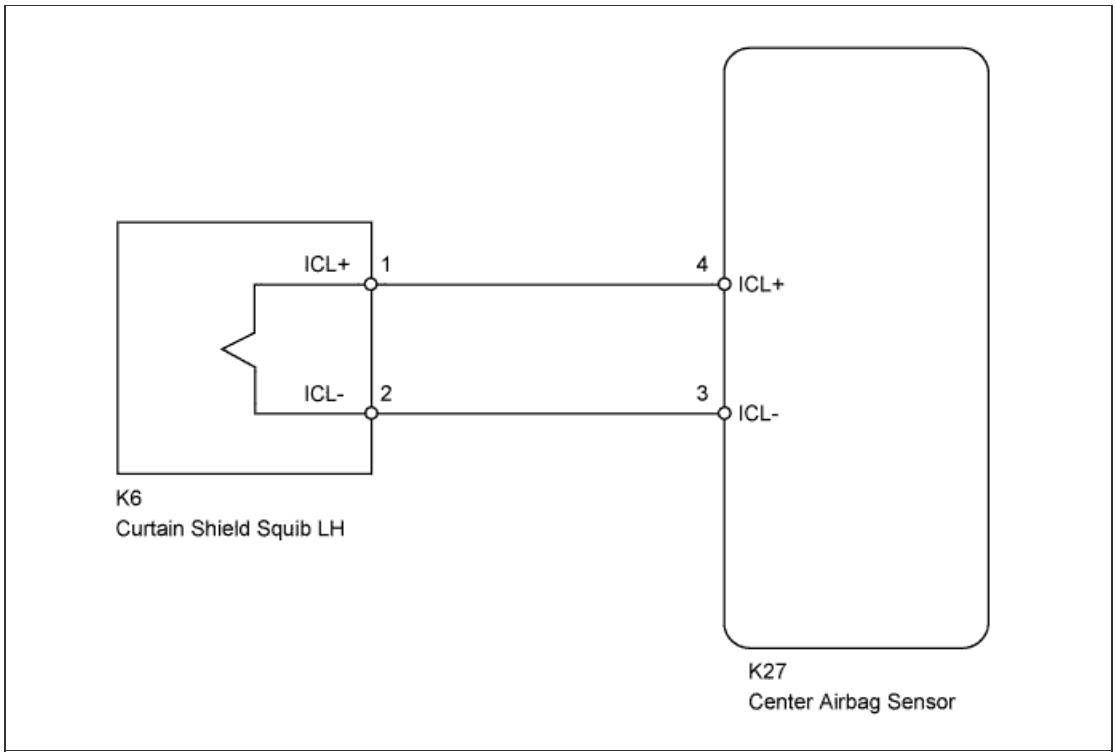

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield airbag LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag LH (curtain shield squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

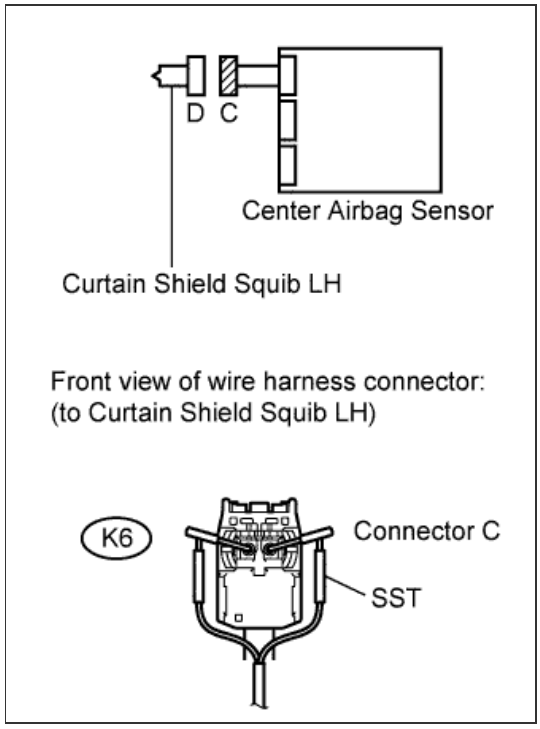

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield airbag LH side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD AIRBAG LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K6-1 (ICL+) - Body ground	Engine switch on (IG)	Below 1 V
K6-2 (ICL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	1 MΩ or higher
K6-1 (ICL+) - Body ground	Always	1 MΩ or higher
K6-2 (ICL-) - Body	Always	1 MΩ or higher

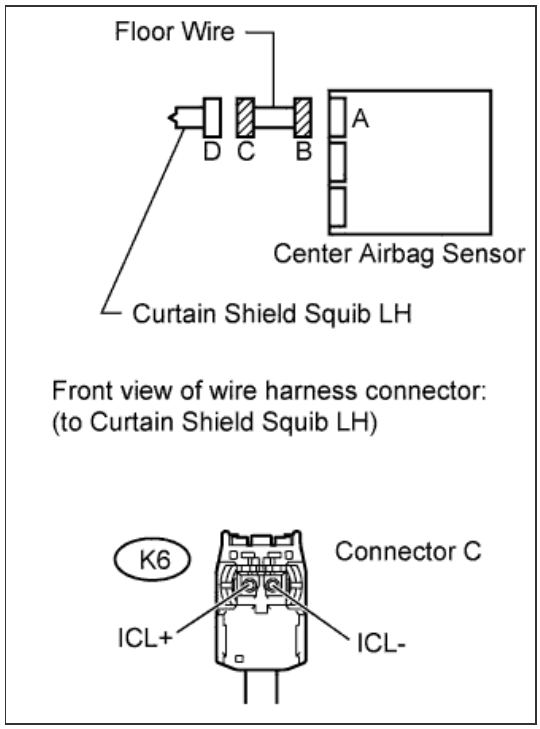

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

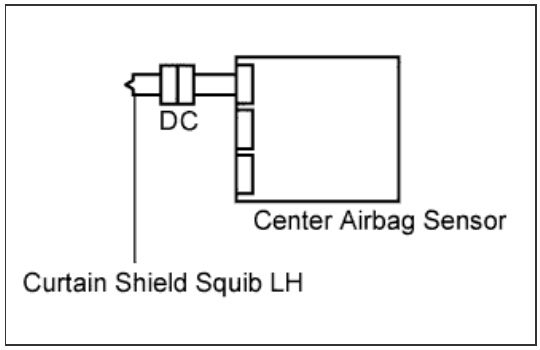

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1632/81 Lost Communication with Rear Airbag Sensor RH

DTC B1633/81 Rear Airbag Sensor Assembly RH Initialization Incomplete

DTC B1697/82 Lost Communication with Door Side Airbag Sensor LH

DTC B1698/82 Door Side Airbag Sensor LH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1632/81 or B1697/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1632/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1633/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1697/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1698/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

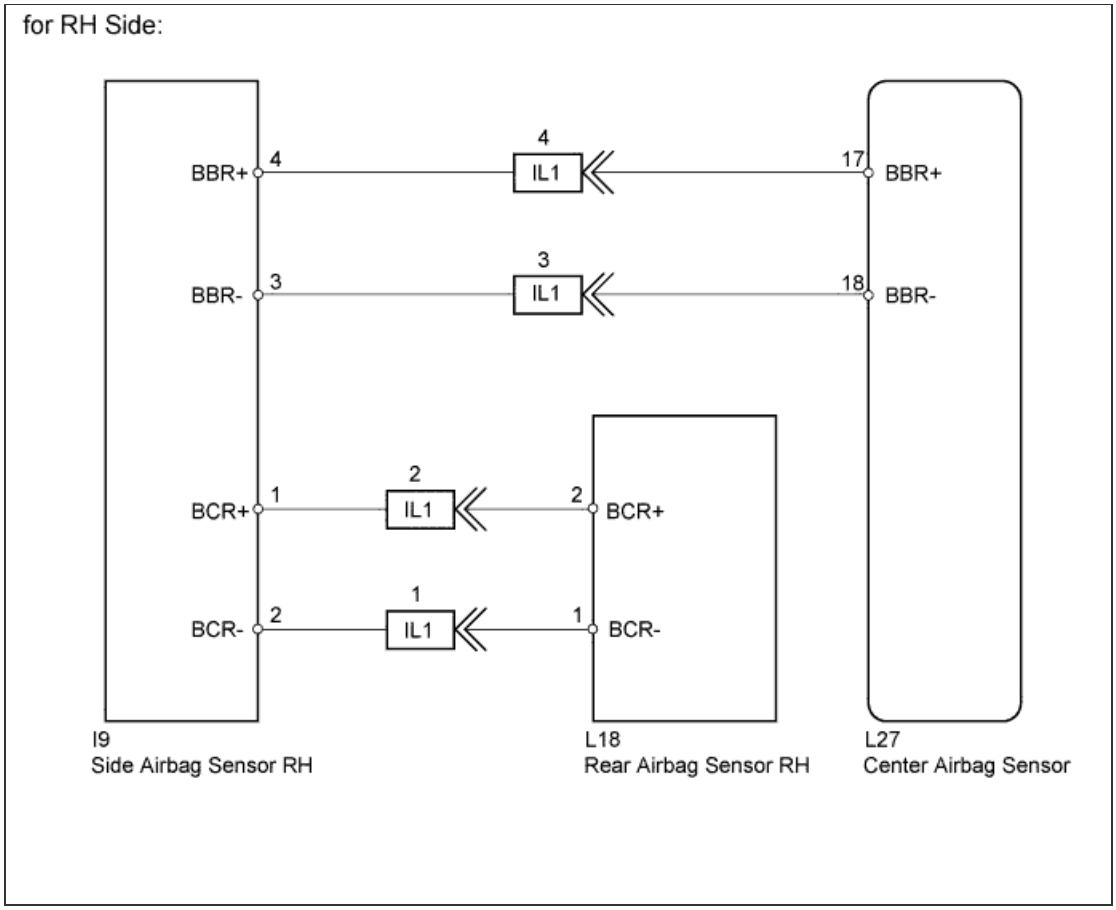

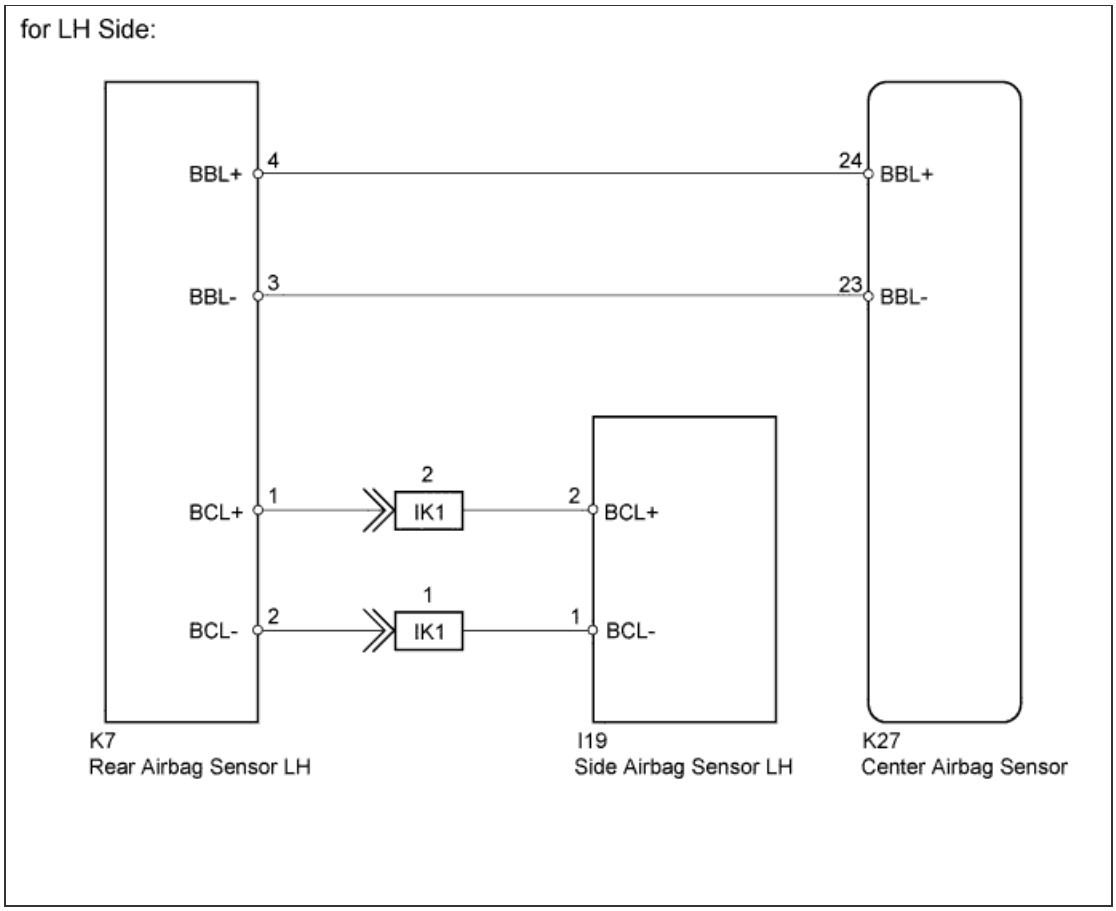

INSPECTION PROCEDURE

NOTICE:

hen disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 8
C	

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor RH and rear airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, rear airbag sensor RH and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor RH side and side airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

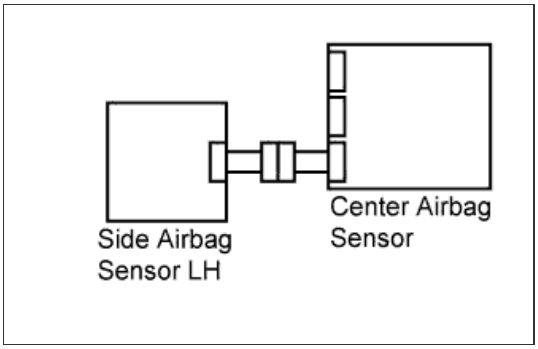

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

5.CHECK REAR AIRBAG SENSOR RH CIRCUIT

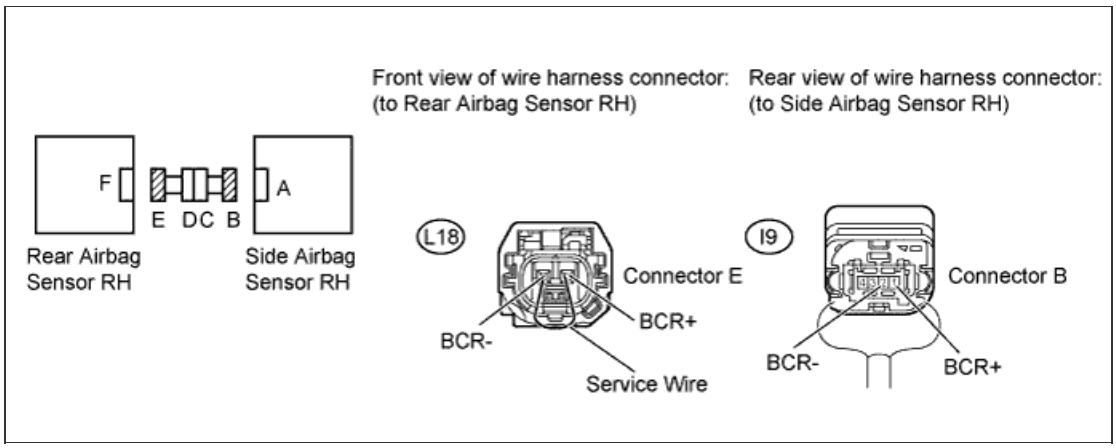

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector .

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 7

OK

6.CHECK REAR AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear airbag sensor RH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

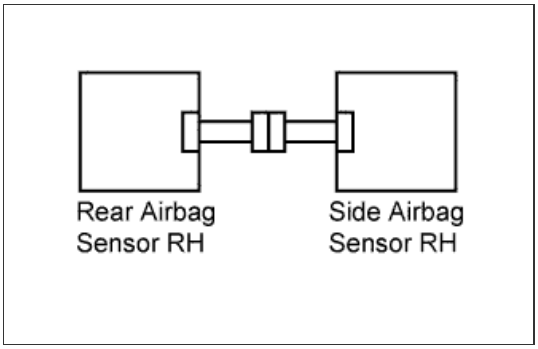

OK:

DTC B1632 and B1633 is not output.

HINT:


Codes other than DTC B1632 and B1633 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

7.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

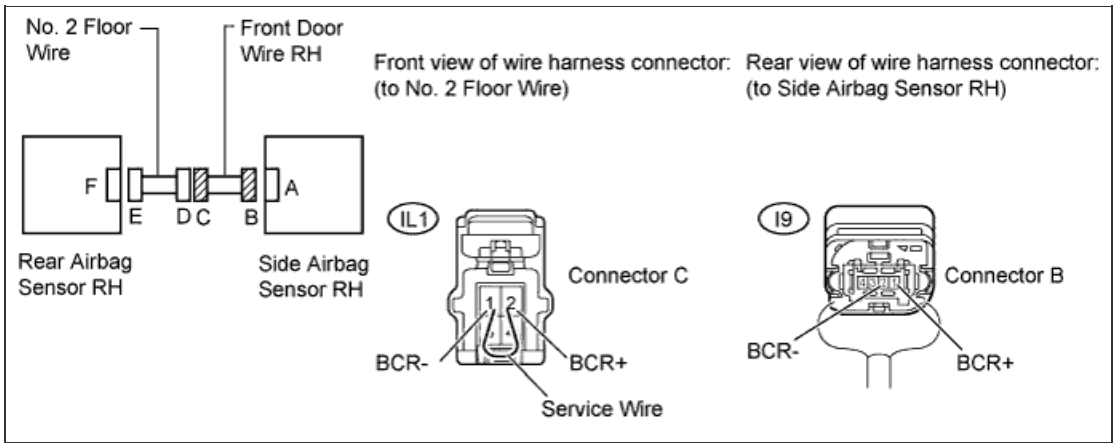

a. Disconnect the front door wire RH connectors from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

8.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor LH and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

9.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, side airbag sensor LH and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor LH side and side airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

10.CHECK REAR AIRBAG SENSOR LH

a. Connect the connector to the center airbag sensor.

b. Temporarily replace the rear airbag sensor LH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.


h. Check for DTCs (Click here).

OK:

DTC B1697 and B1698 are not output.

HINT:

Codes other than DTC B1697 and B1698 may be output at this time, but they are not related to this check.

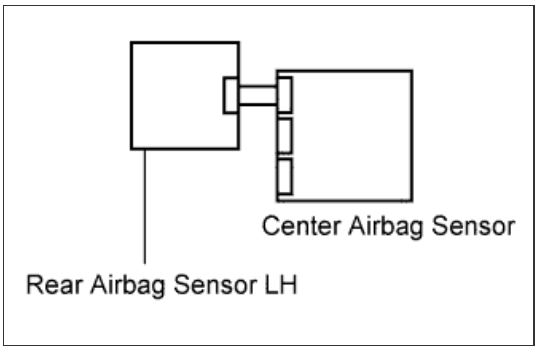


NG → Go to step 11

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

11.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

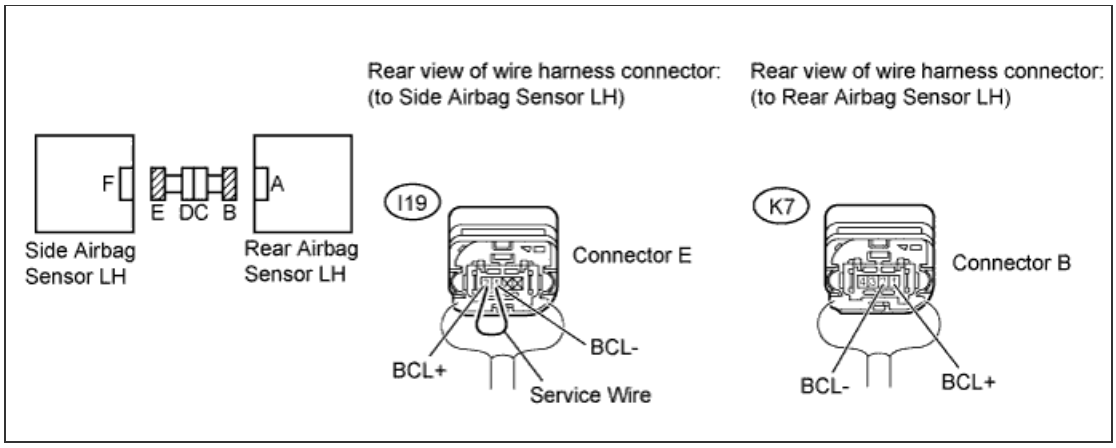

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the side airbag sensor LH and rear airbag sensor LH.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

j. Disconnect the service wire from connector .

k. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 13

OK

12.CHECK SIDE AIRBAG SENSOR LH

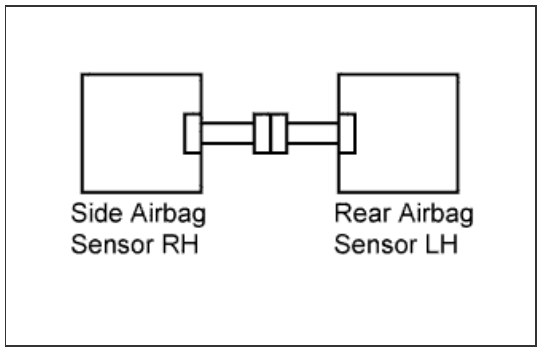

a. Connect the connectors to the rear airbag sensor LH.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1632 or B1633 is output	B
DTC B1697 or B1698 is output	C

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

13.CHECK FLOOR WIRE (SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

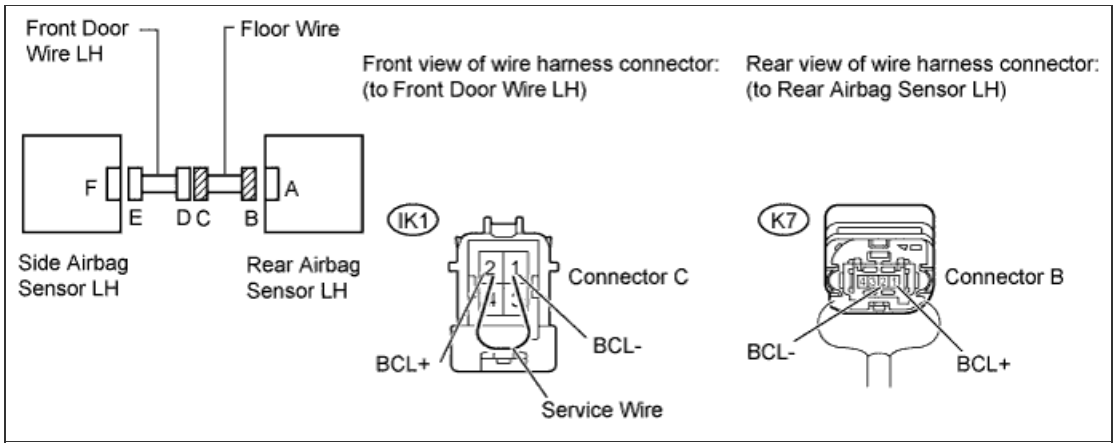

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

REPLACE FRONT DOOR WIRE LH

DTC B1835/58 Short in Curtain Shield Squib LH Circuit

DTC B1836/58 Open in Curtain Shield Squib LH Circuit

DTC B1837/58 Short to GND in Curtain Shield Squib LH Circuit

DTC B1838/58 Short to B+ in Curtain Shield Squib LH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1835/58	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1836/58	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1837/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1838/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

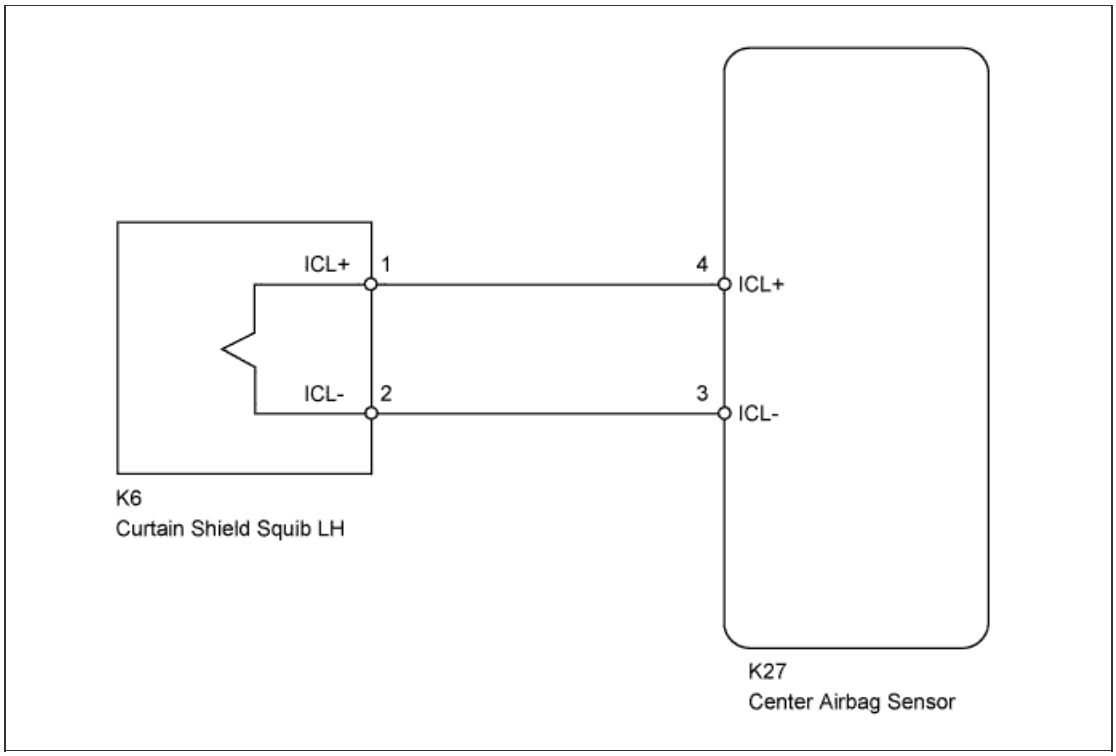

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield airbag LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag LH (curtain shield squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

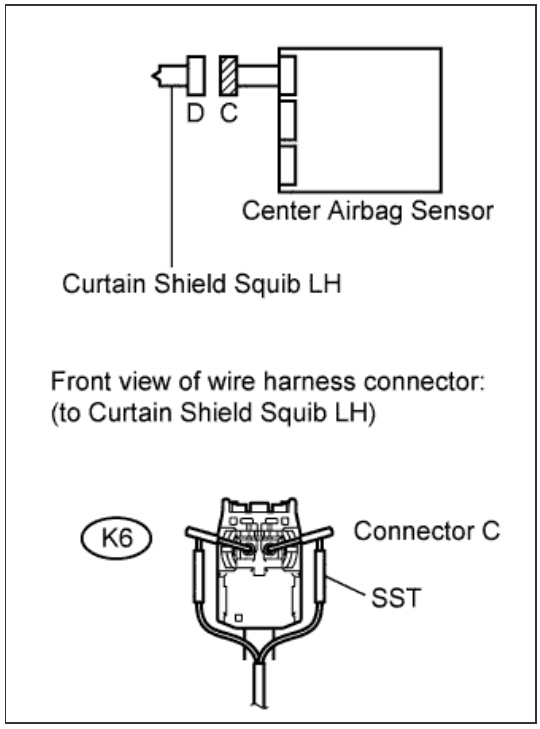

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield airbag LH side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD AIRBAG LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K6-1 (ICL+) - Body ground	Engine switch on (IG)	Below 1 V
K6-2 (ICL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	1 MΩ or higher
K6-1 (ICL+) - Body ground	Always	1 MΩ or higher
K6-2 (ICL-) - Body	Always	1 MΩ or higher

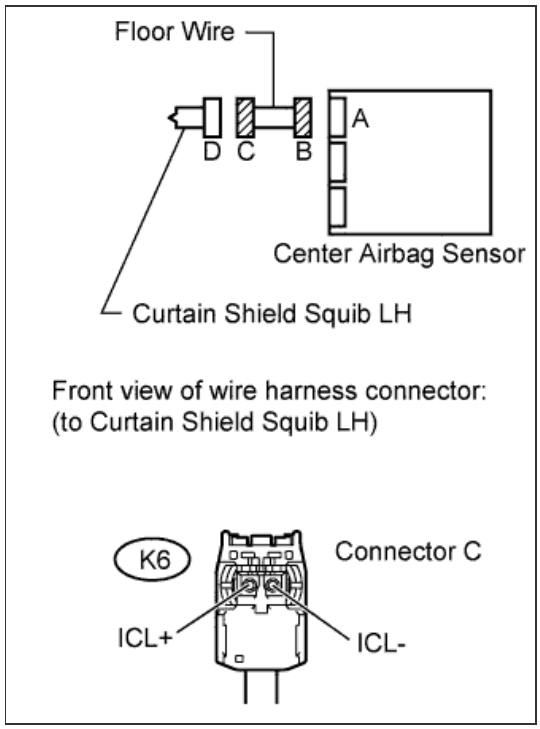

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

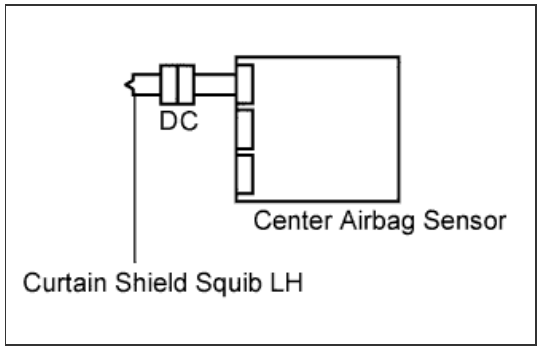

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1632/81 Lost Communication with Rear Airbag Sensor RH

DTC B1633/81 Rear Airbag Sensor Assembly RH Initialization Incomplete

DTC B1697/82 Lost Communication with Door Side Airbag Sensor LH

DTC B1698/82 Door Side Airbag Sensor LH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1632/81 or B1697/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1632/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1633/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1697/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1698/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

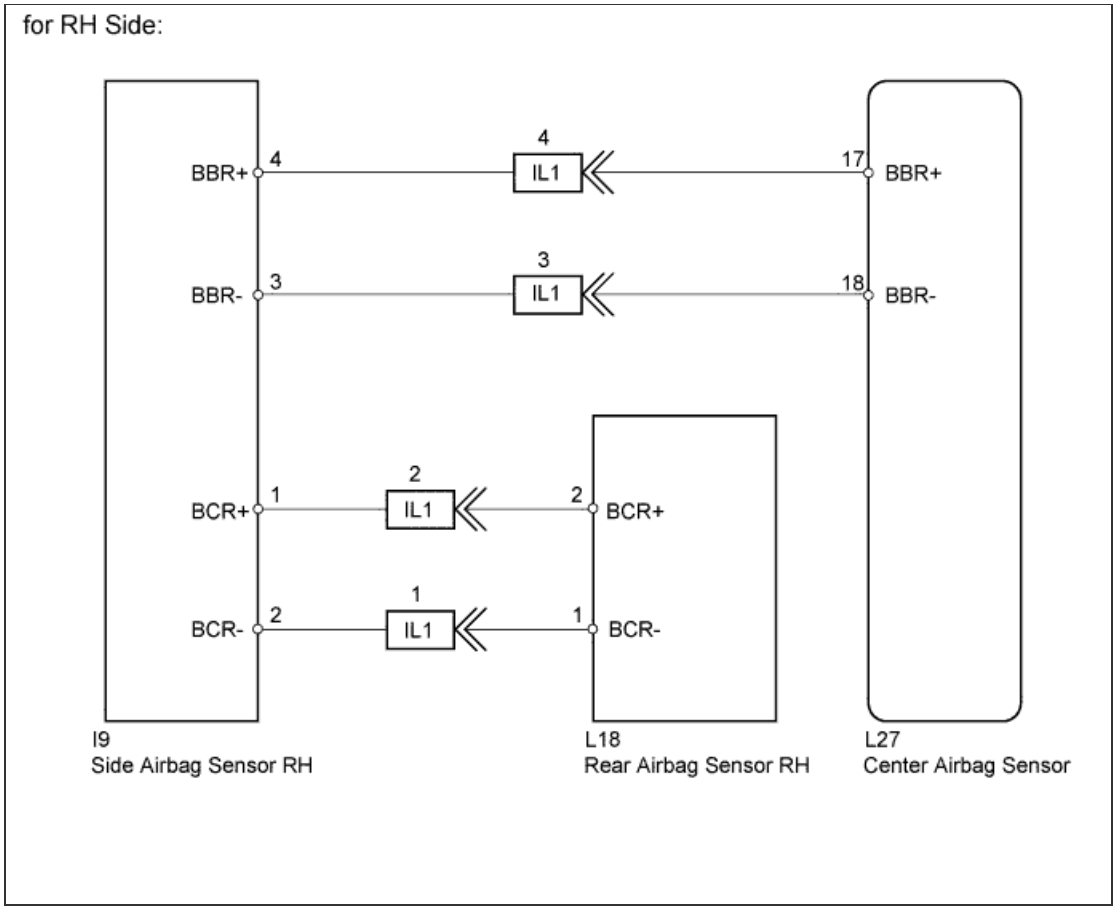

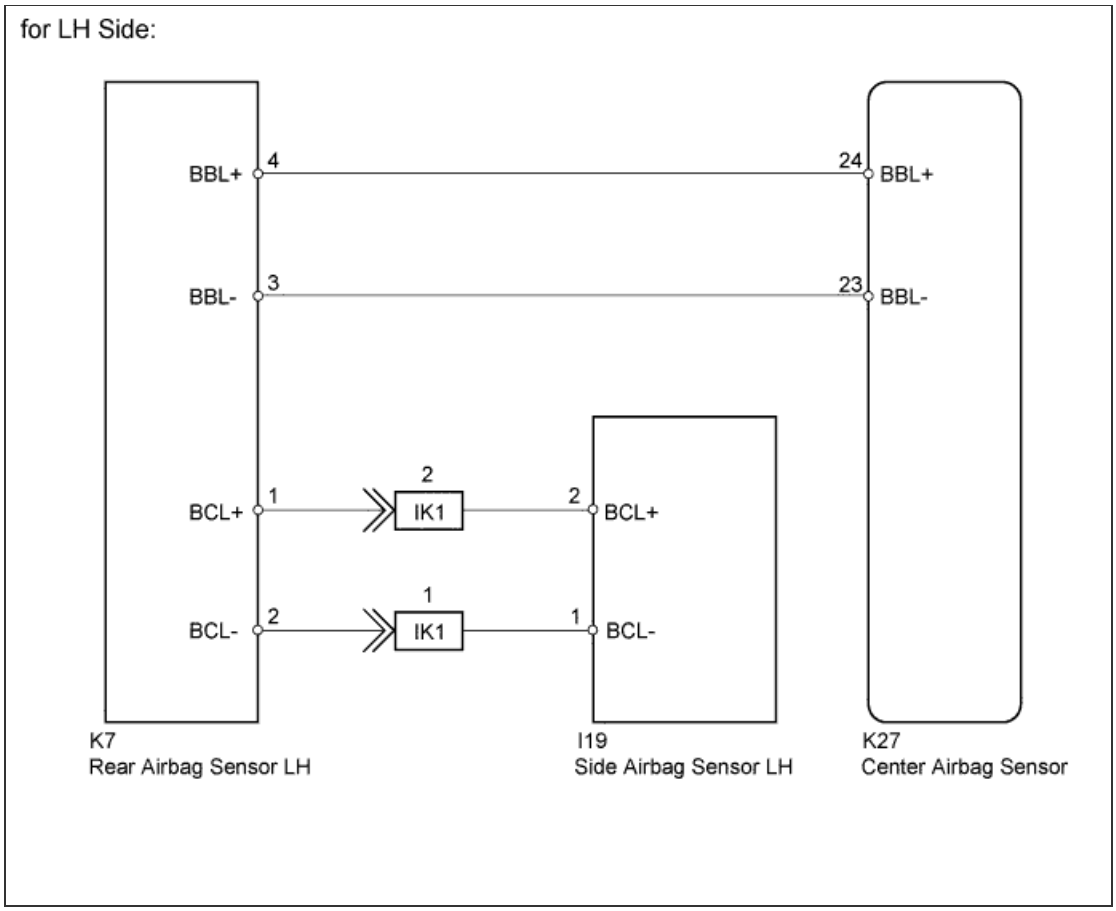

INSPECTION PROCEDURE

NOTICE:

hen disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 8
C	

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor RH and rear airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, rear airbag sensor RH and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor RH side and side airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

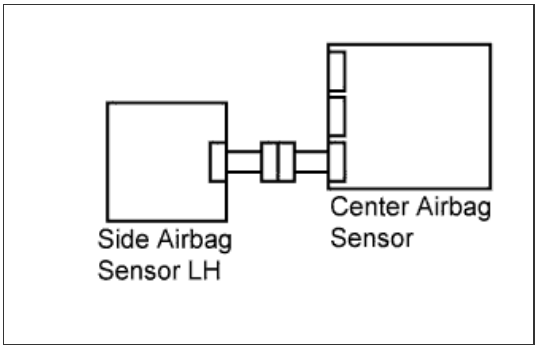

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

5.CHECK REAR AIRBAG SENSOR RH CIRCUIT

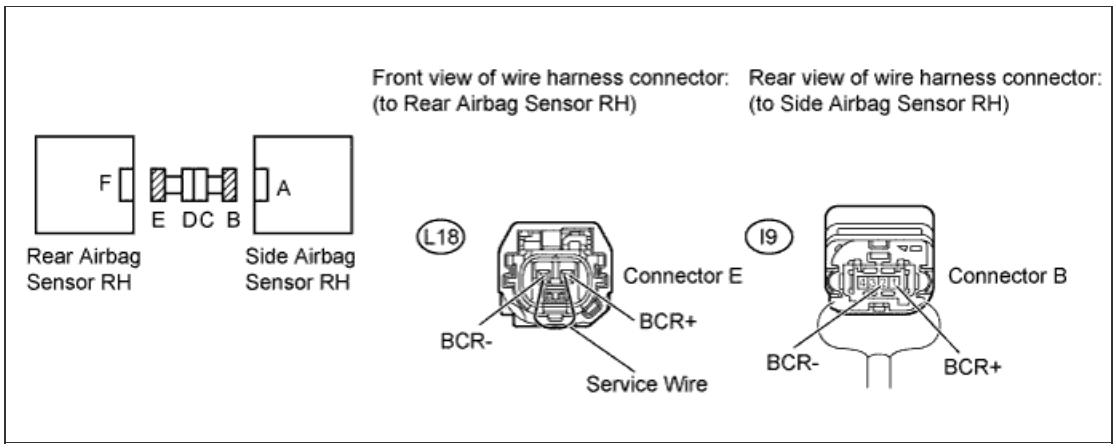

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector .

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 7

OK

6.CHECK REAR AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear airbag sensor RH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

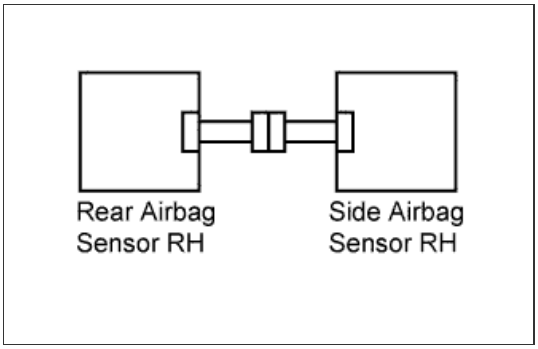

OK:

DTC B1632 and B1633 is not output.

HINT:


Codes other than DTC B1632 and B1633 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

7.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

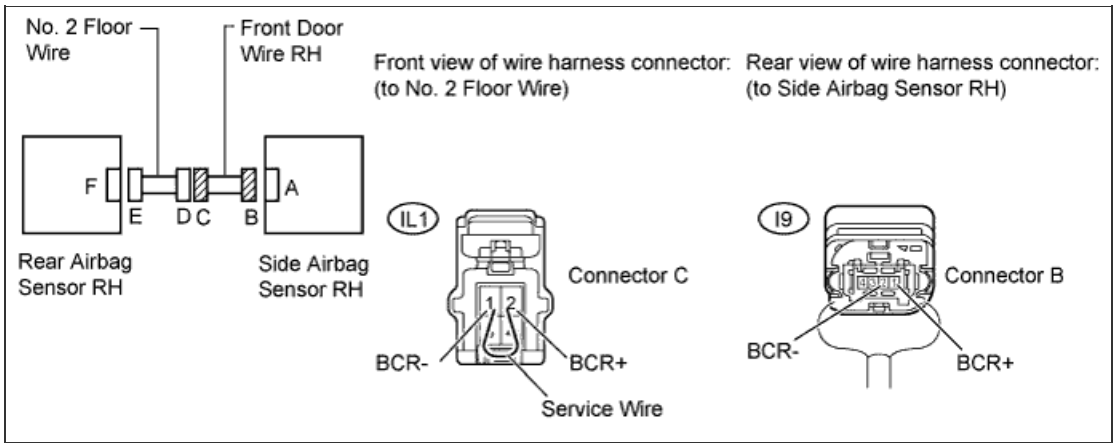

a. Disconnect the front door wire RH connectors from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

8.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor LH and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

9.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, side airbag sensor LH and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor LH side and side airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

10.CHECK REAR AIRBAG SENSOR LH

a. Connect the connector to the center airbag sensor.

b. Temporarily replace the rear airbag sensor LH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.


h. Check for DTCs (Click here).

OK:

DTC B1697 and B1698 are not output.

HINT:

Codes other than DTC B1697 and B1698 may be output at this time, but they are not related to this check.

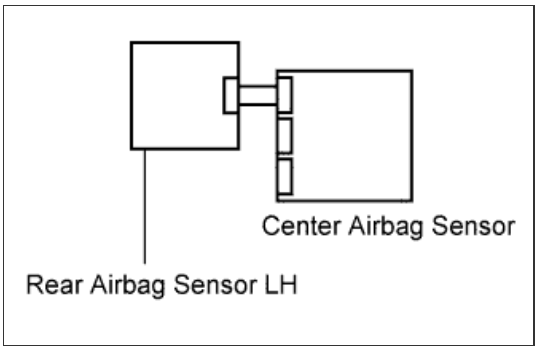


NG → Go to step 11

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

11.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

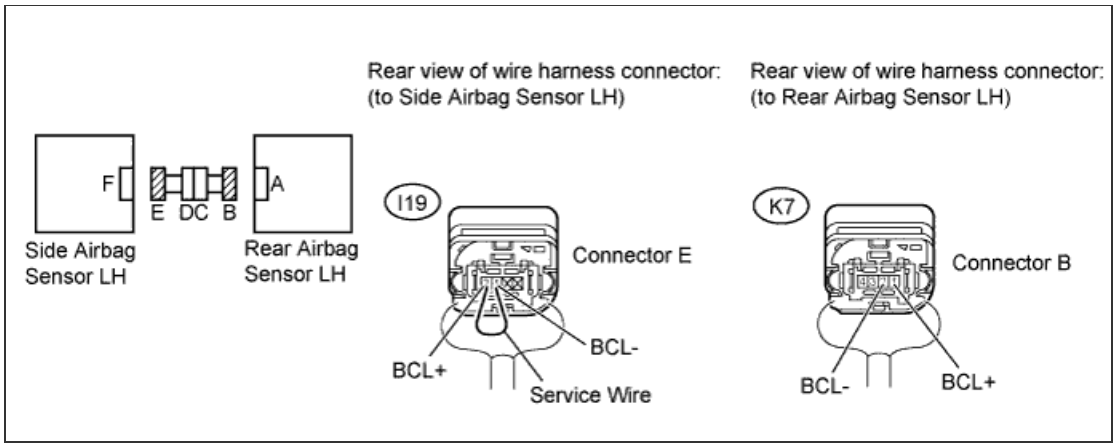

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the side airbag sensor LH and rear airbag sensor LH.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

j. Disconnect the service wire from connector .

k. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 13

OK

12.CHECK SIDE AIRBAG SENSOR LH

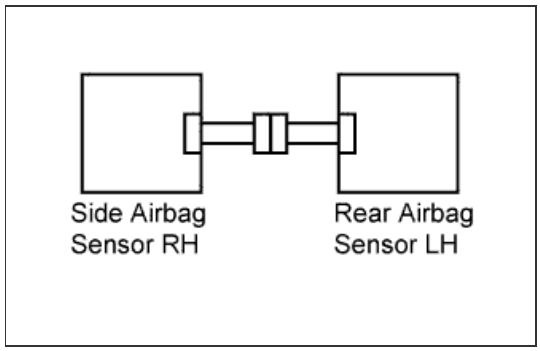

a. Connect the connectors to the rear airbag sensor LH.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1632 or B1633 is output	B
DTC B1697 or B1698 is output	C

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

13.CHECK FLOOR WIRE (SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

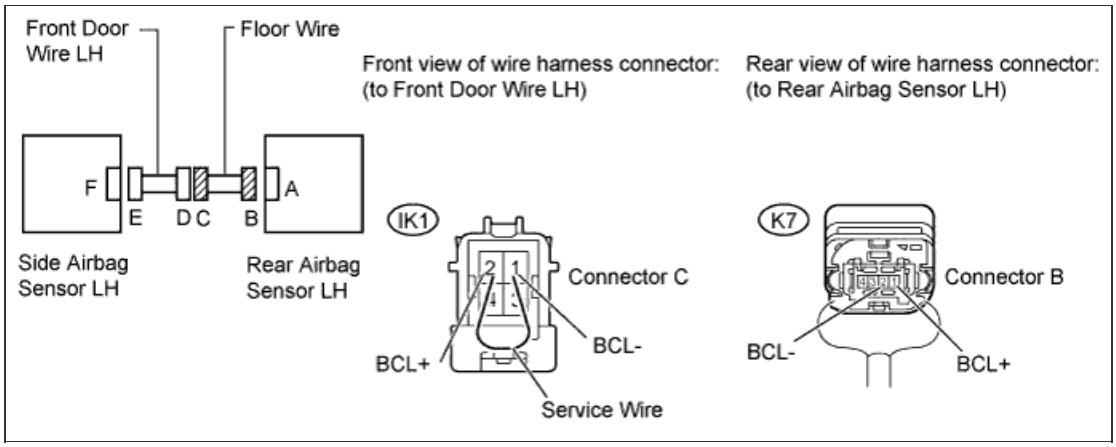

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

REPLACE FRONT DOOR WIRE LH

DTC B1835/58 Short in Curtain Shield Squib LH Circuit

DTC B1836/58 Open in Curtain Shield Squib LH Circuit

DTC B1837/58 Short to GND in Curtain Shield Squib LH Circuit

DTC B1838/58 Short to B+ in Curtain Shield Squib LH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1835/58	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1836/58	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1837/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1838/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

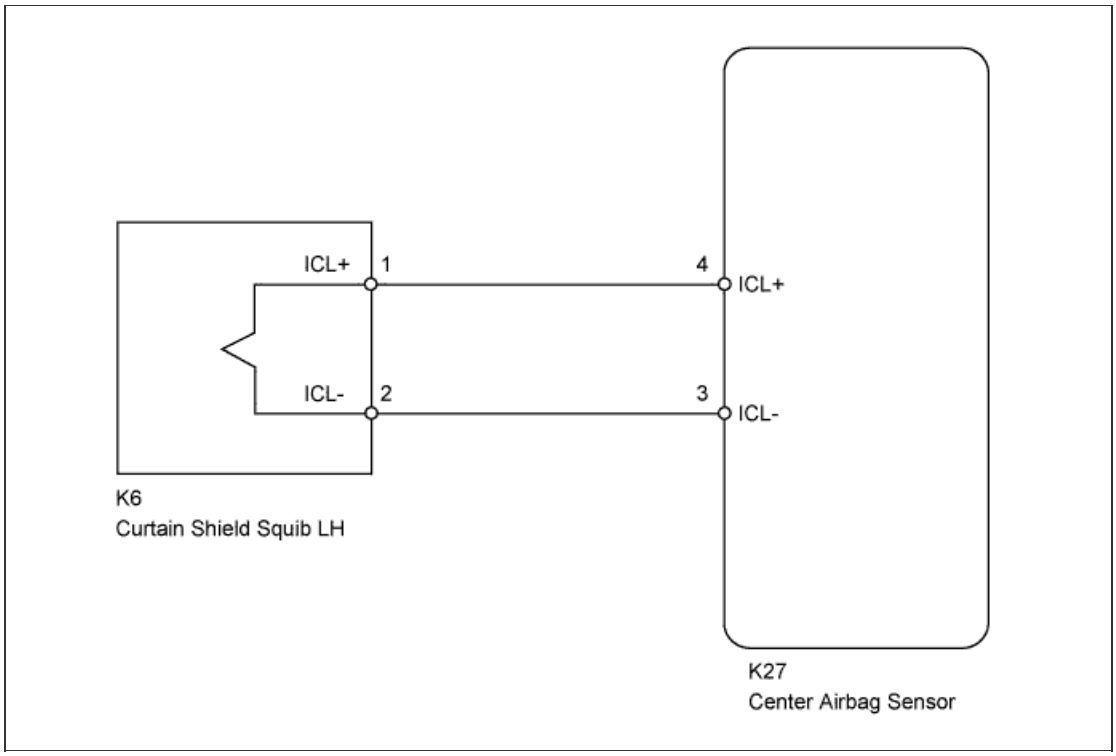

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield airbag LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag LH (curtain shield squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

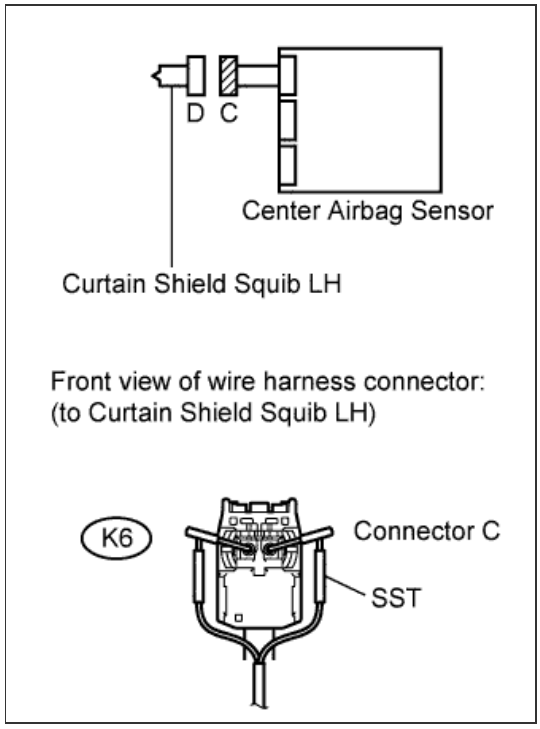

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield airbag LH side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD AIRBAG LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K6-1 (ICL+) - Body ground	Engine switch on (IG)	Below 1 V
K6-2 (ICL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	1 MΩ or higher
K6-1 (ICL+) - Body ground	Always	1 MΩ or higher
K6-2 (ICL-) - Body	Always	1 MΩ or higher

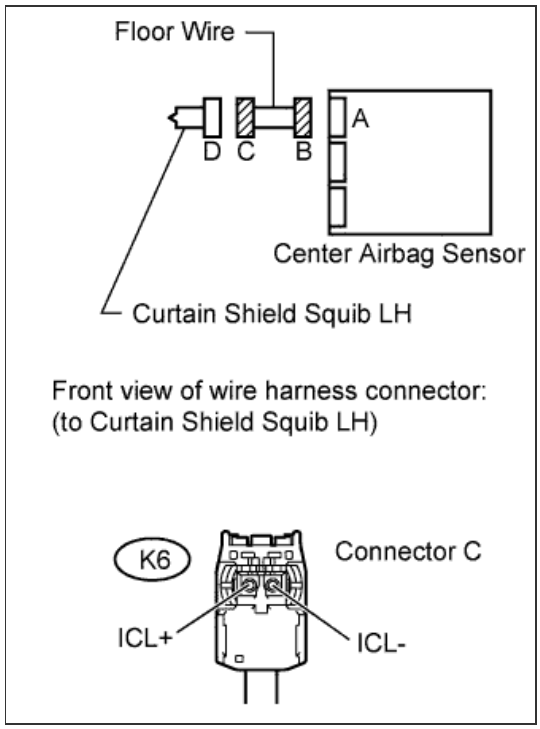

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

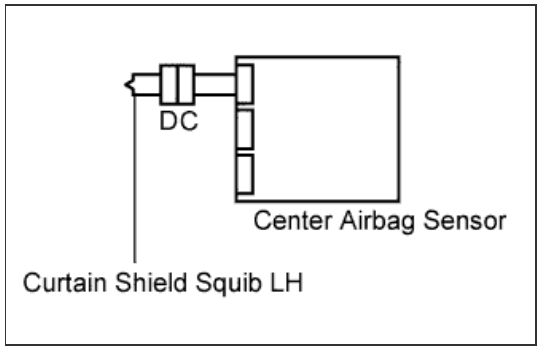

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1632/81 Lost Communication with Rear Airbag Sensor RH

DTC B1633/81 Rear Airbag Sensor Assembly RH Initialization Incomplete

DTC B1697/82 Lost Communication with Door Side Airbag Sensor LH

DTC B1698/82 Door Side Airbag Sensor LH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1632/81 or B1697/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1632/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1633/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1697/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1698/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

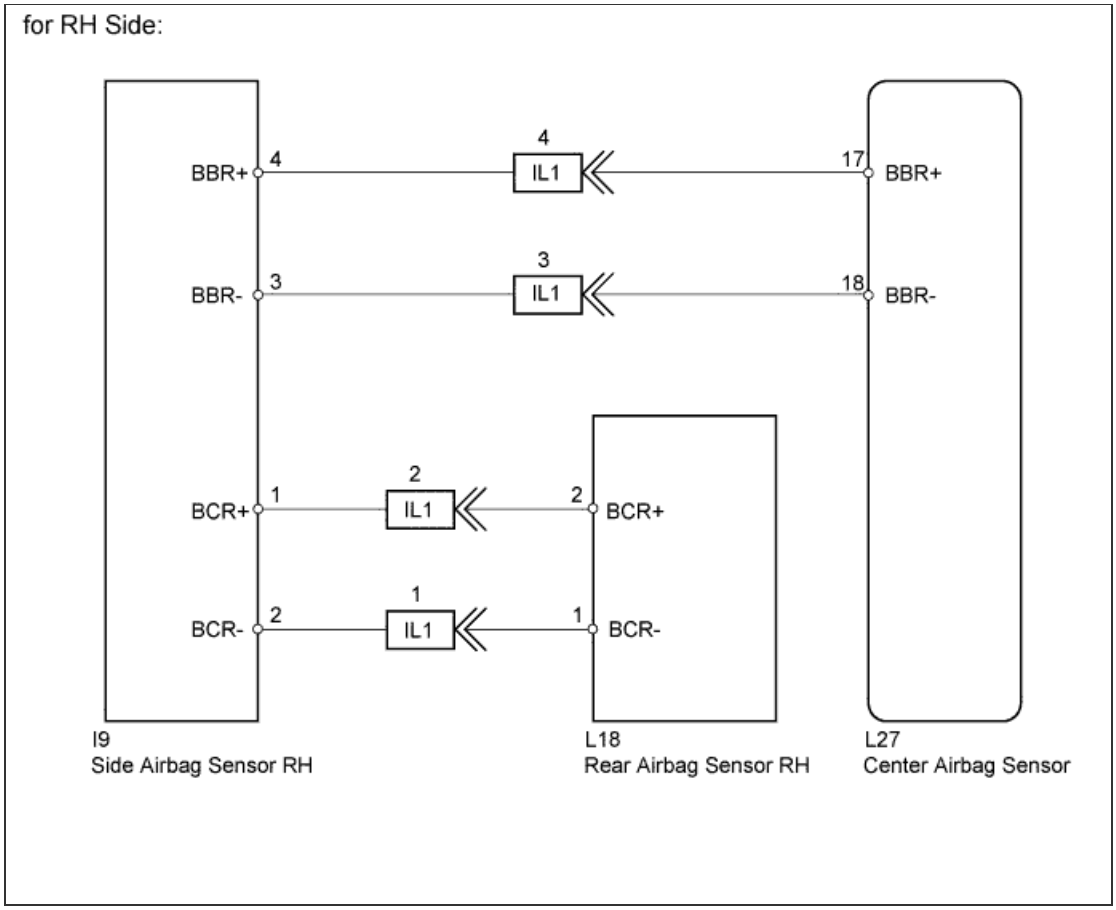

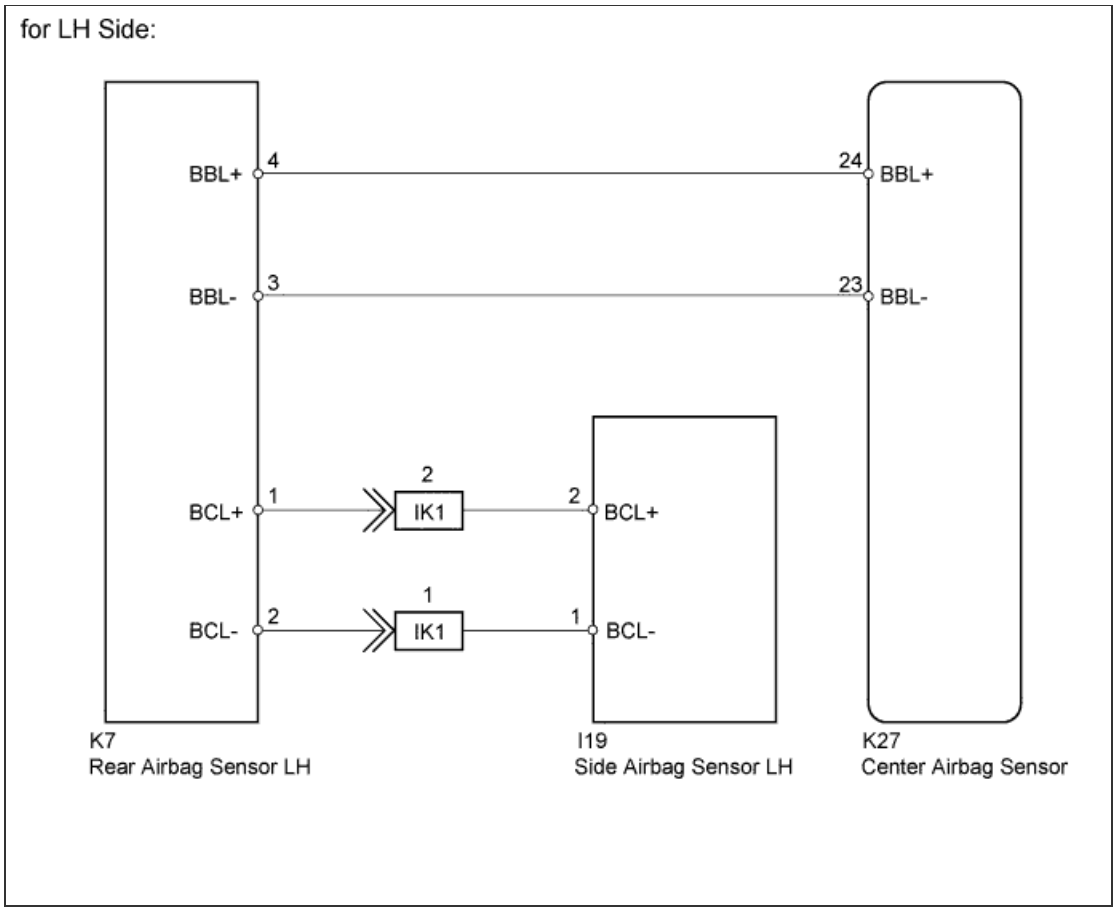

INSPECTION PROCEDURE

NOTICE:

hen disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 8
C	

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor RH and rear airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, rear airbag sensor RH and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor RH side and side airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

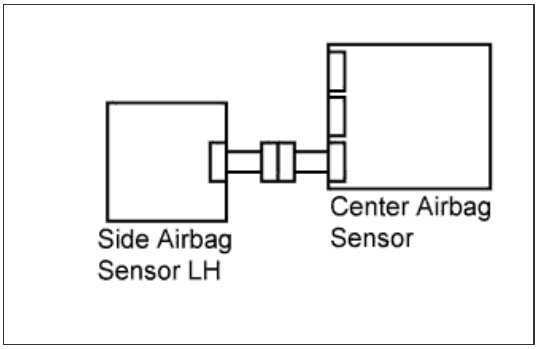

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

5.CHECK REAR AIRBAG SENSOR RH CIRCUIT

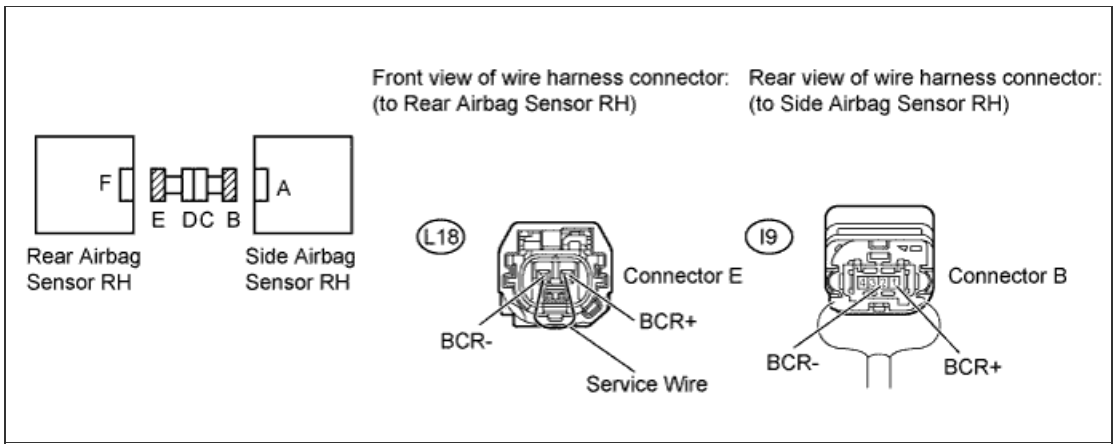

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector .

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 7

OK

6.CHECK REAR AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear airbag sensor RH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

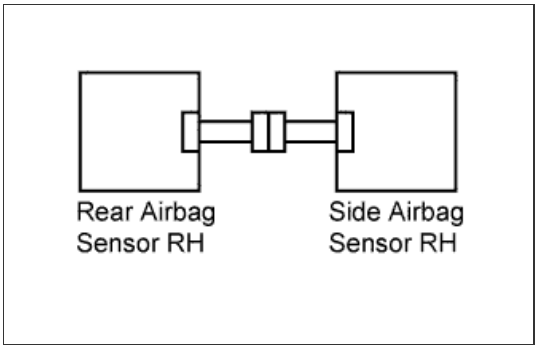

OK:

DTC B1632 and B1633 is not output.

HINT:


Codes other than DTC B1632 and B1633 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

7.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

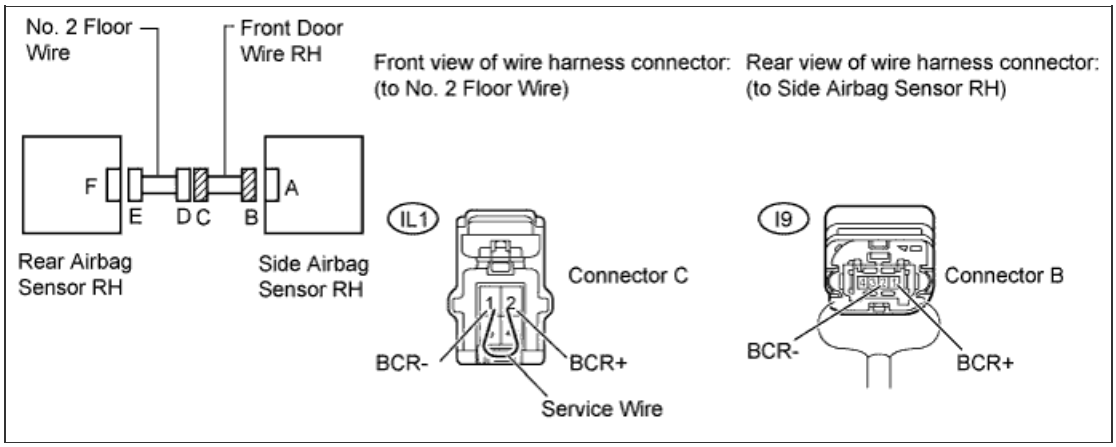

a. Disconnect the front door wire RH connectors from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

8.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor LH and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

9.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, side airbag sensor LH and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor LH side and side airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

10.CHECK REAR AIRBAG SENSOR LH

a. Connect the connector to the center airbag sensor.

b. Temporarily replace the rear airbag sensor LH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.


h. Check for DTCs (Click here).

OK:

DTC B1697 and B1698 are not output.

HINT:

Codes other than DTC B1697 and B1698 may be output at this time, but they are not related to this check.

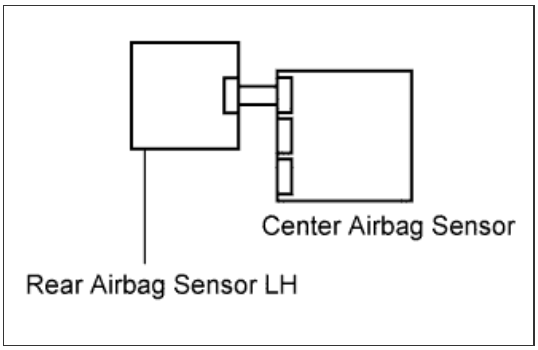


NG → Go to step 11

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

11.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

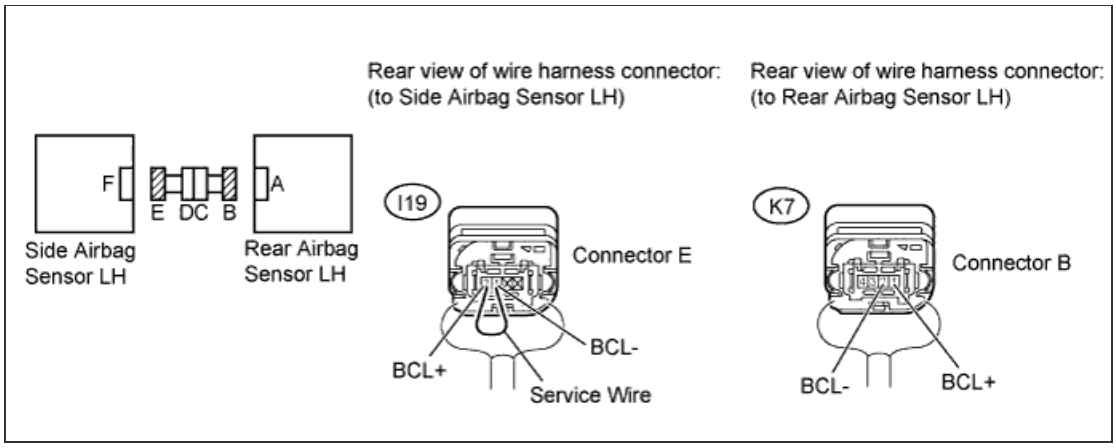

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the side airbag sensor LH and rear airbag sensor LH.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

j. Disconnect the service wire from connector .

k. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 13

OK

12.CHECK SIDE AIRBAG SENSOR LH

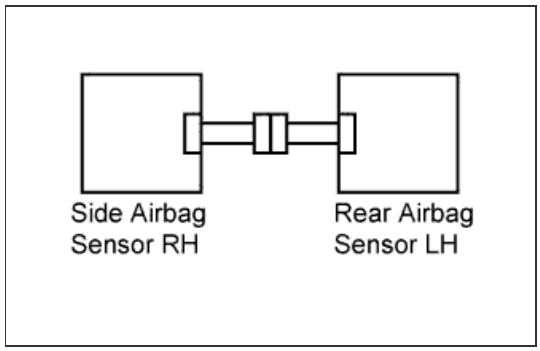

a. Connect the connectors to the rear airbag sensor LH.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1632 or B1633 is output	B
DTC B1697 or B1698 is output	C

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

13.CHECK FLOOR WIRE (SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

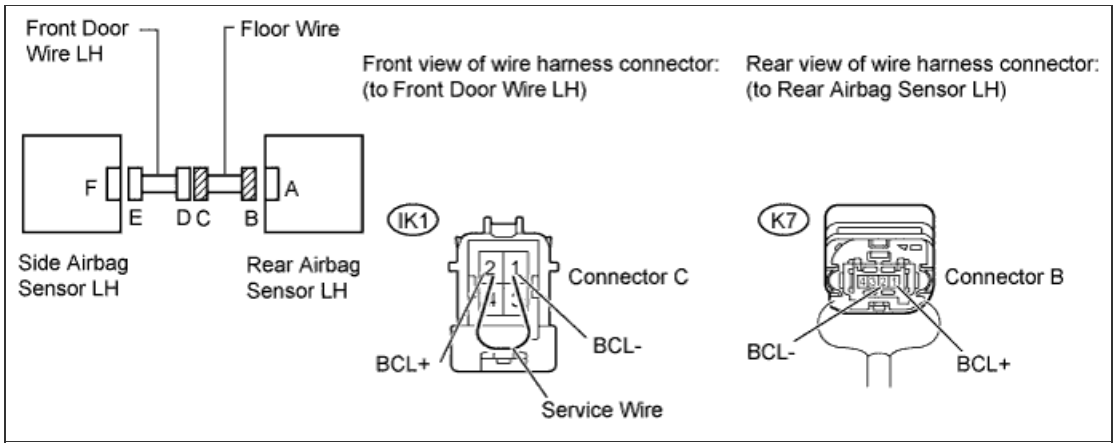

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

REPLACE FRONT DOOR WIRE LH

DTC B1835/58 Short in Curtain Shield Squib LH Circuit

DTC B1836/58 Open in Curtain Shield Squib LH Circuit

DTC B1837/58 Short to GND in Curtain Shield Squib LH Circuit

DTC B1838/58 Short to B+ in Curtain Shield Squib LH Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1835/58	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1836/58	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1837/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly
B1838/58	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

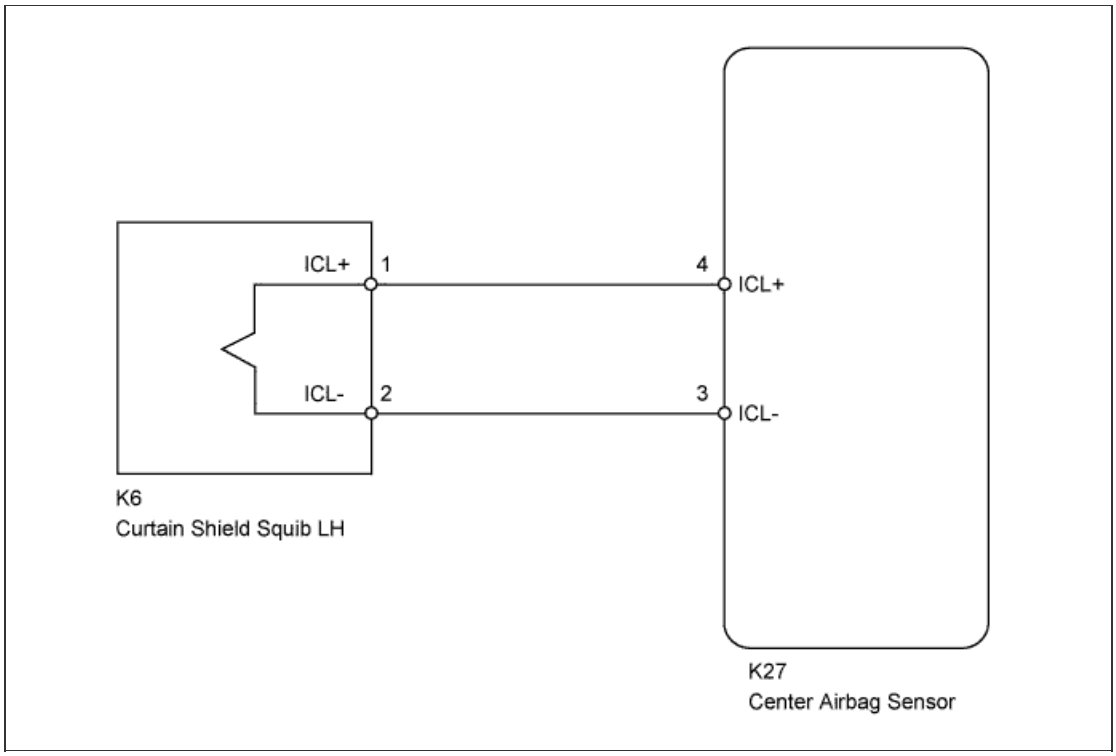

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield airbag LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag LH (curtain shield squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

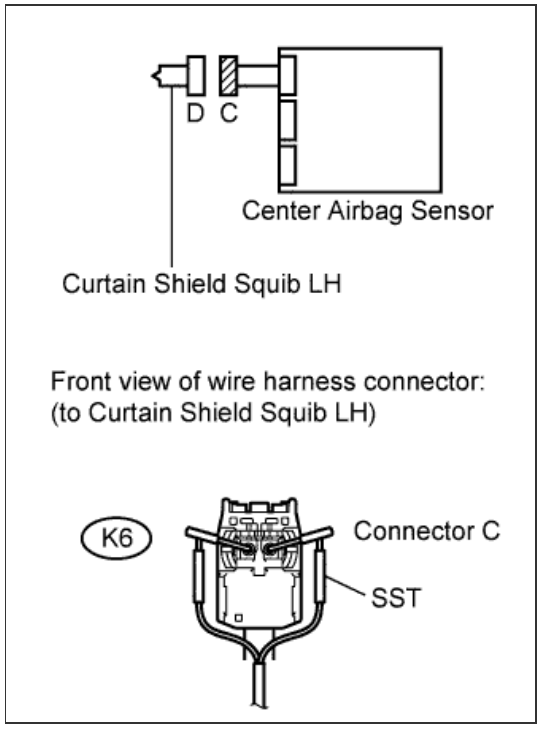

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield airbag LH side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD AIRBAG LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K6-1 (ICL+) - Body ground	Engine switch on (IG)	Below 1 V
K6-2 (ICL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K6-1 (ICL+) - K6-2 (ICL-)	Always	1 MΩ or higher
K6-1 (ICL+) - Body ground	Always	1 MΩ or higher
K6-2 (ICL-) - Body	Always	1 MΩ or higher

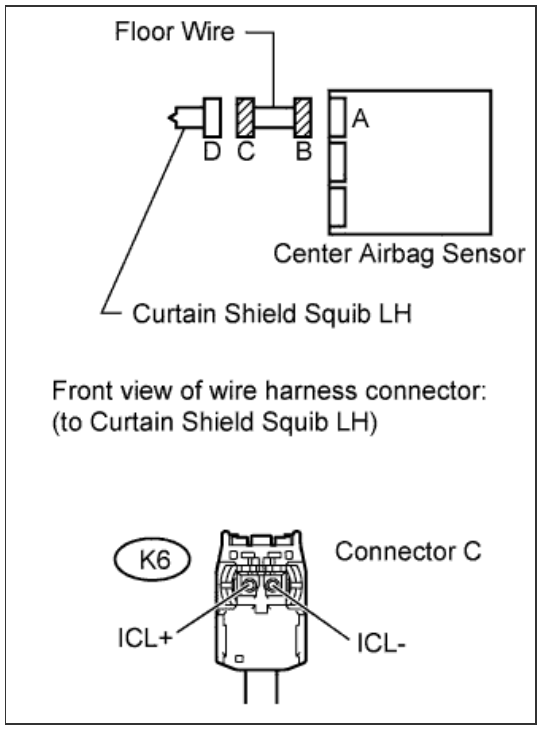

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

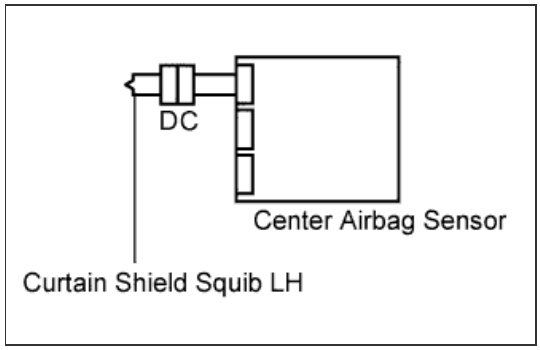

OK:

DTC B1835, B1836, B1837 or B1838 is not output.

HINT:

Codes other than DTC B1835, B1836, B1837 and B1838 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1632/81 Lost Communication with Rear Airbag Sensor RH

DTC B1633/81 Rear Airbag Sensor Assembly RH Initialization Incomplete

DTC B1697/82 Lost Communication with Door Side Airbag Sensor LH

DTC B1698/82 Door Side Airbag Sensor LH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1632/81 or B1697/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1632/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1633/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1697/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1698/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

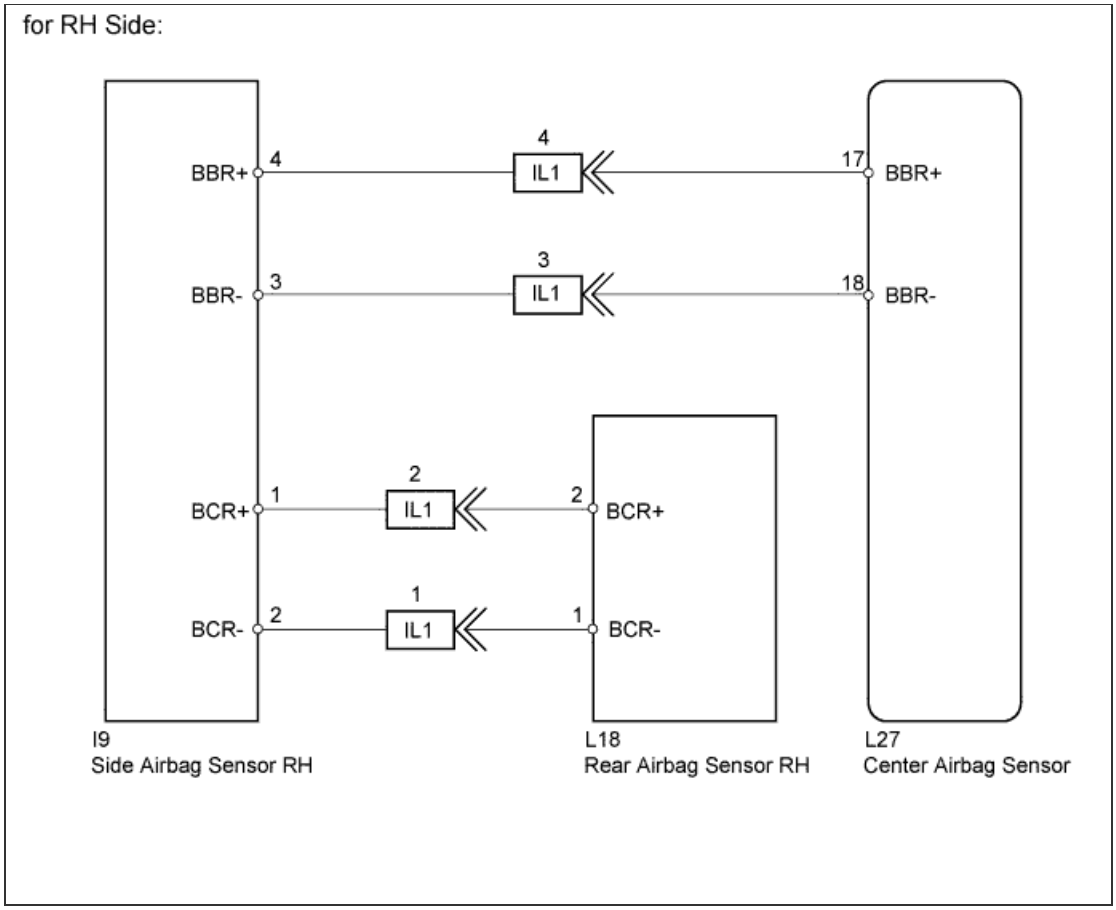

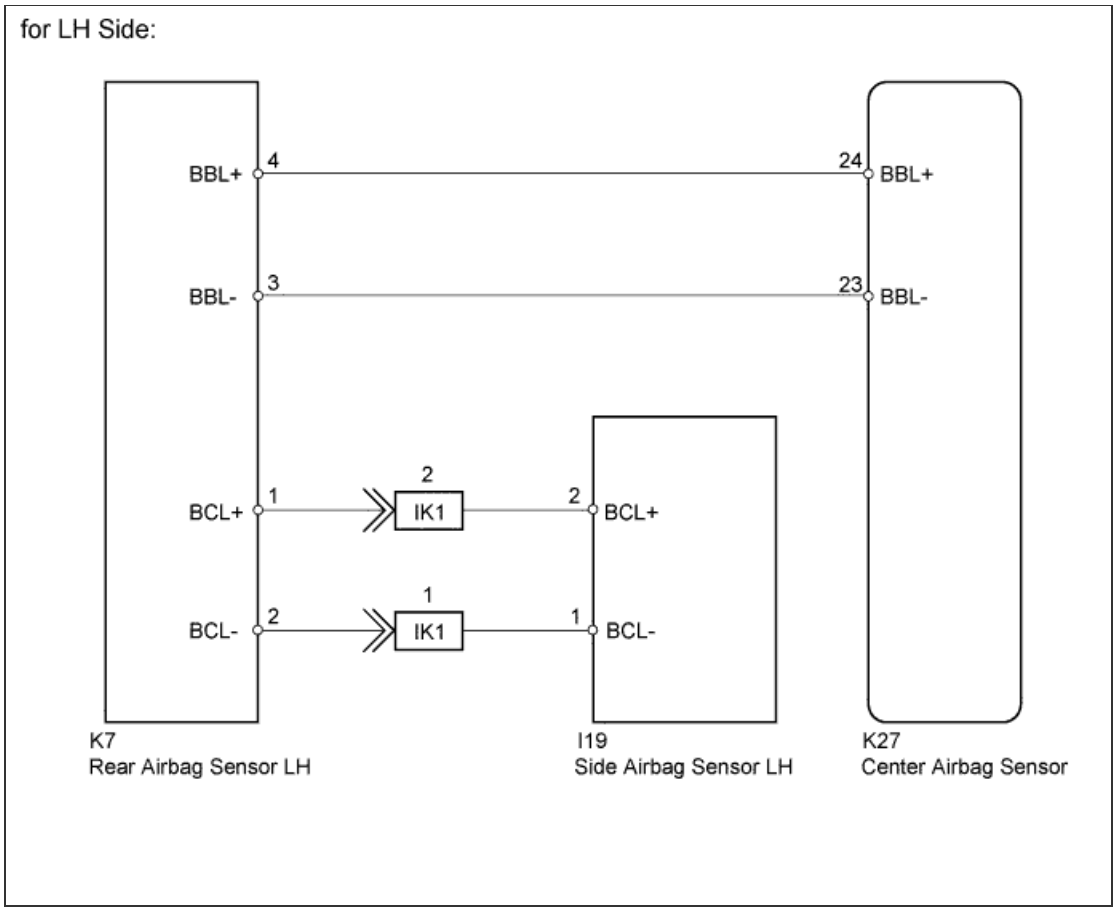

INSPECTION PROCEDURE

NOTICE:

hen disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 8
C	

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor RH and rear airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, rear airbag sensor RH and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor RH side and side airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

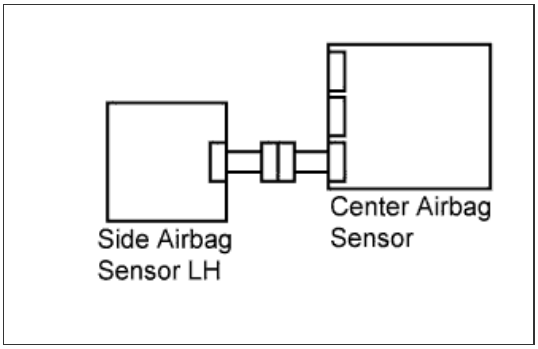

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

5.CHECK REAR AIRBAG SENSOR RH CIRCUIT

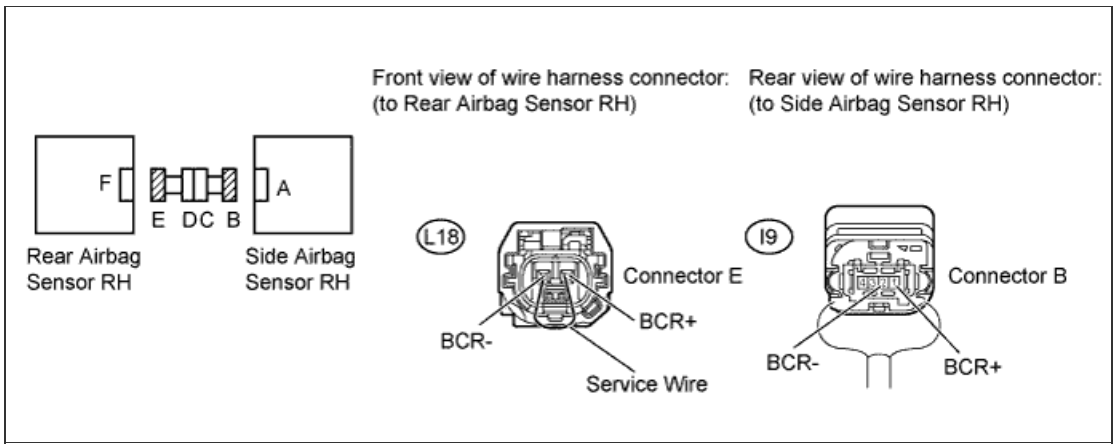

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector .

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 7

OK

6.CHECK REAR AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear airbag sensor RH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

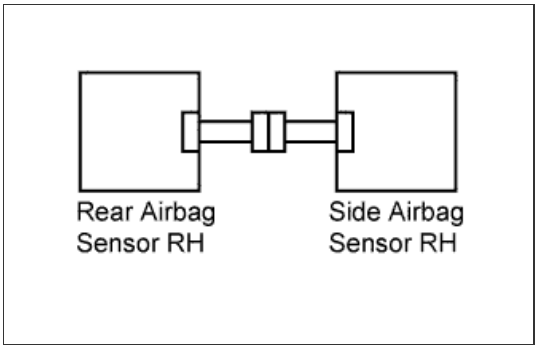

OK:

DTC B1632 and B1633 is not output.

HINT:


Codes other than DTC B1632 and B1633 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

7.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

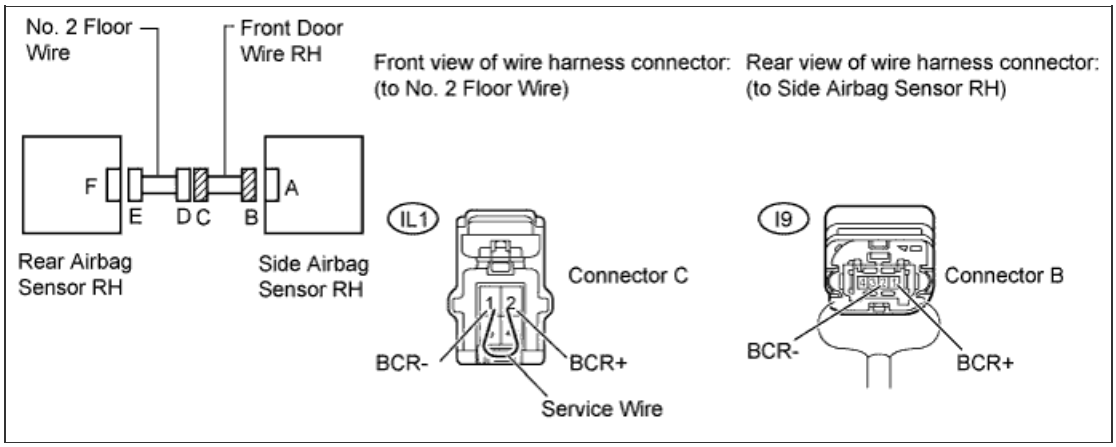

a. Disconnect the front door wire RH connectors from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	ngine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

8.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor LH and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

9.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, side airbag sensor LH and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor LH side and side airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

10.CHECK REAR AIRBAG SENSOR LH

a. Connect the connector to the center airbag sensor.

b. Temporarily replace the rear airbag sensor LH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.


h. Check for DTCs (Click here).

OK:

DTC B1697 and B1698 are not output.

HINT:

Codes other than DTC B1697 and B1698 may be output at this time, but they are not related to this check.

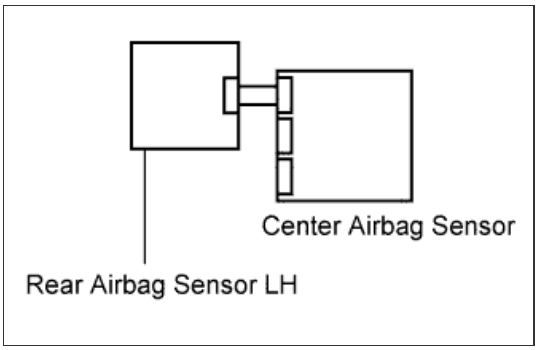


NG → Go to step 11

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

11.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

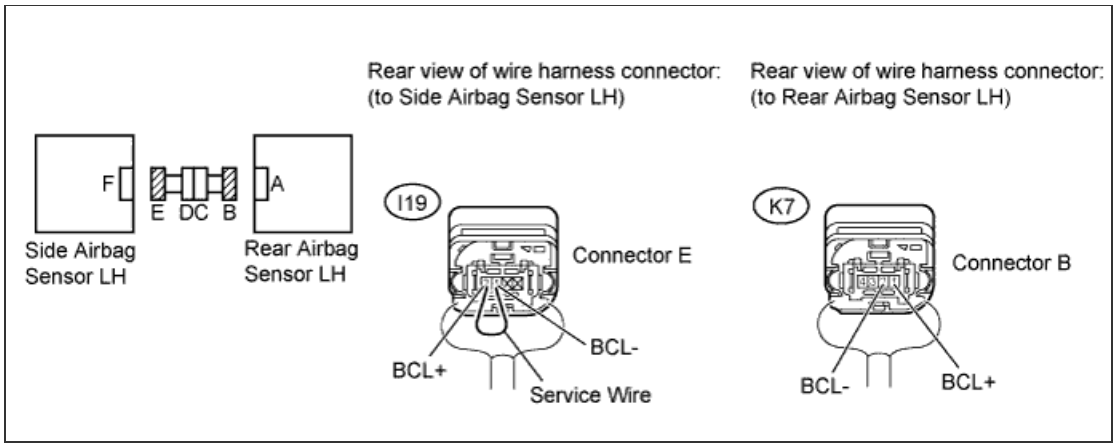

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the side airbag sensor LH and rear airbag sensor LH.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector .

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

j. Disconnect the service wire from connector .

k. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 13

OK

12.CHECK SIDE AIRBAG SENSOR LH

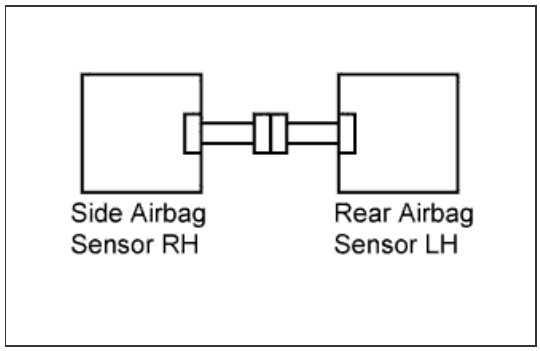

a. Connect the connectors to the rear airbag sensor LH.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1632 or B1633 is output	B
DTC B1697 or B1698 is output	C

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

13.CHECK FLOOR WIRE (SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

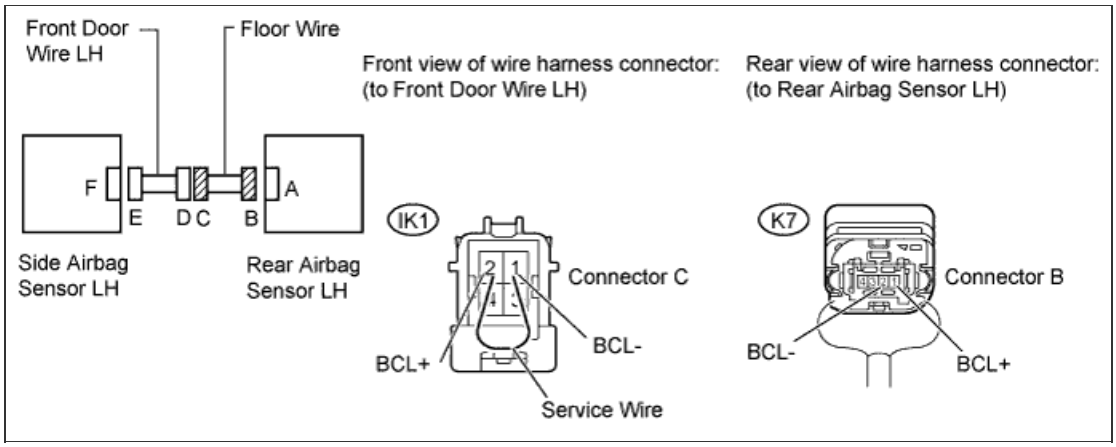

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
1 (BCL+) - Body ground	ngine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

REPLACE FRONT DOOR WIRE LH

DTC B1840/59 Short in Curtain Shield Squib RH 2nd Step Circuit

DTC B1841/59 Open in Curtain Shield Squib RH 2nd Step Circuit

DTC B1842/59 Short to GND in Curtain Shield Squib RH 2nd Step Circuit

DTC B1843/59 Short to B+ in Curtain Shield Squib RH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1840/59	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH 2nd step circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1841/59	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH 2nd step circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1842/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1843/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

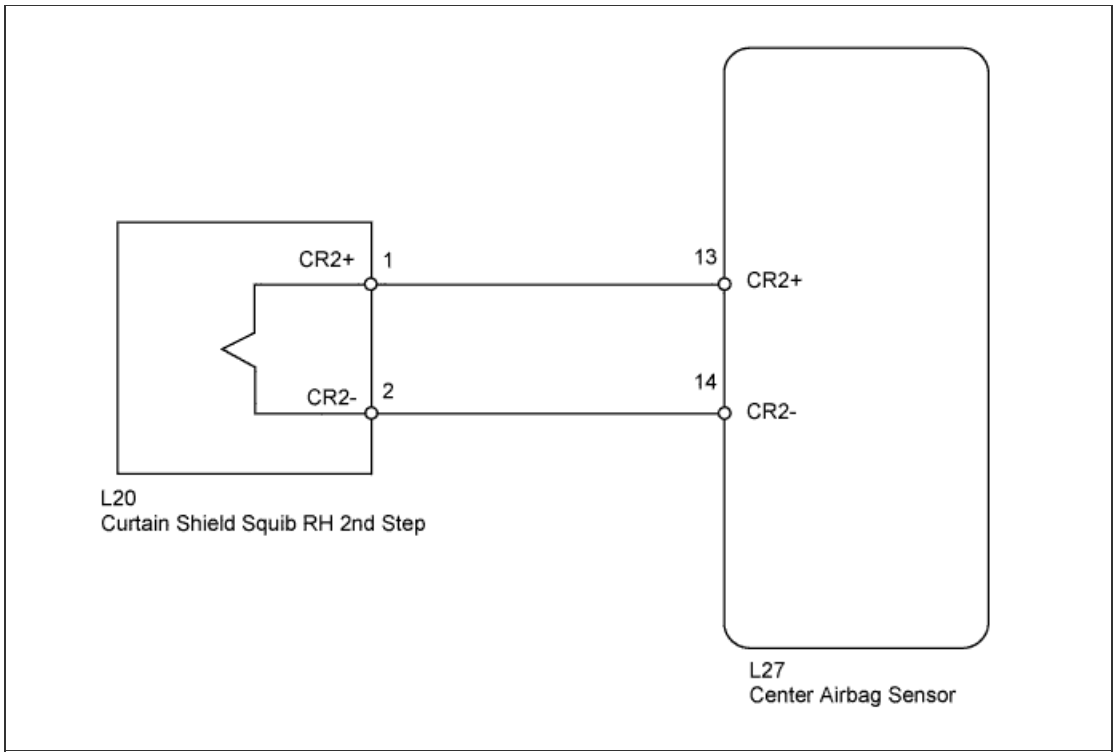

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield squib RH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

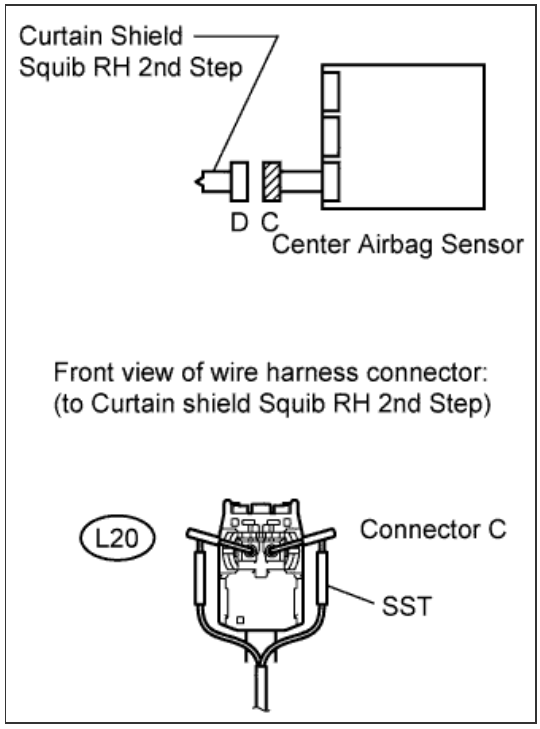

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield squib RH 2nd step side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L20-1 (CR2+) - Body ground	Engine switch on (IG)	Below 1 V
L20-2 (CR2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	1 MΩ or higher
L20-1 (CR2+) - Body ground	Always	1 MΩ or higher
L20-2 (CR2-) -	Always	1 MΩ or higher

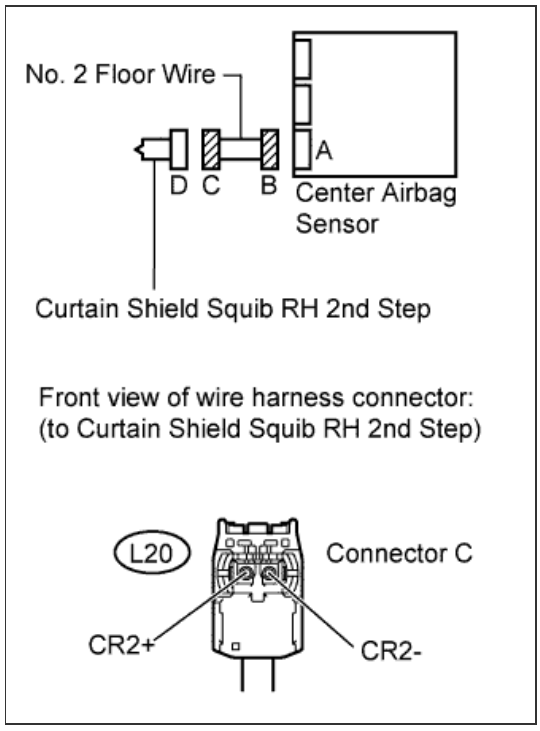

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib RH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

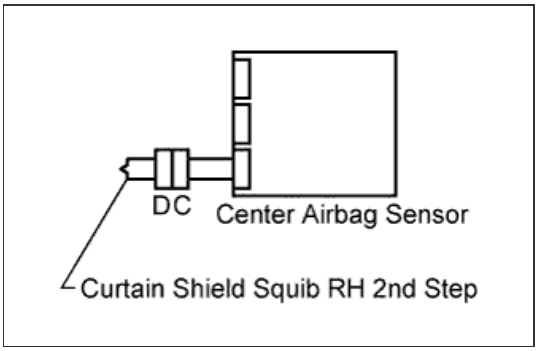

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1632/81 Lost Communication with Rear Airbag Sensor RH

DTC B1633/81 Rear Airbag Sensor Assembly RH Initialization Incomplete

DTC B1697/82 Lost Communication with Door Side Airbag Sensor LH

DTC B1698/82 Door Side Airbag Sensor LH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1632/81 or B1697/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1632/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1633/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1697/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1698/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

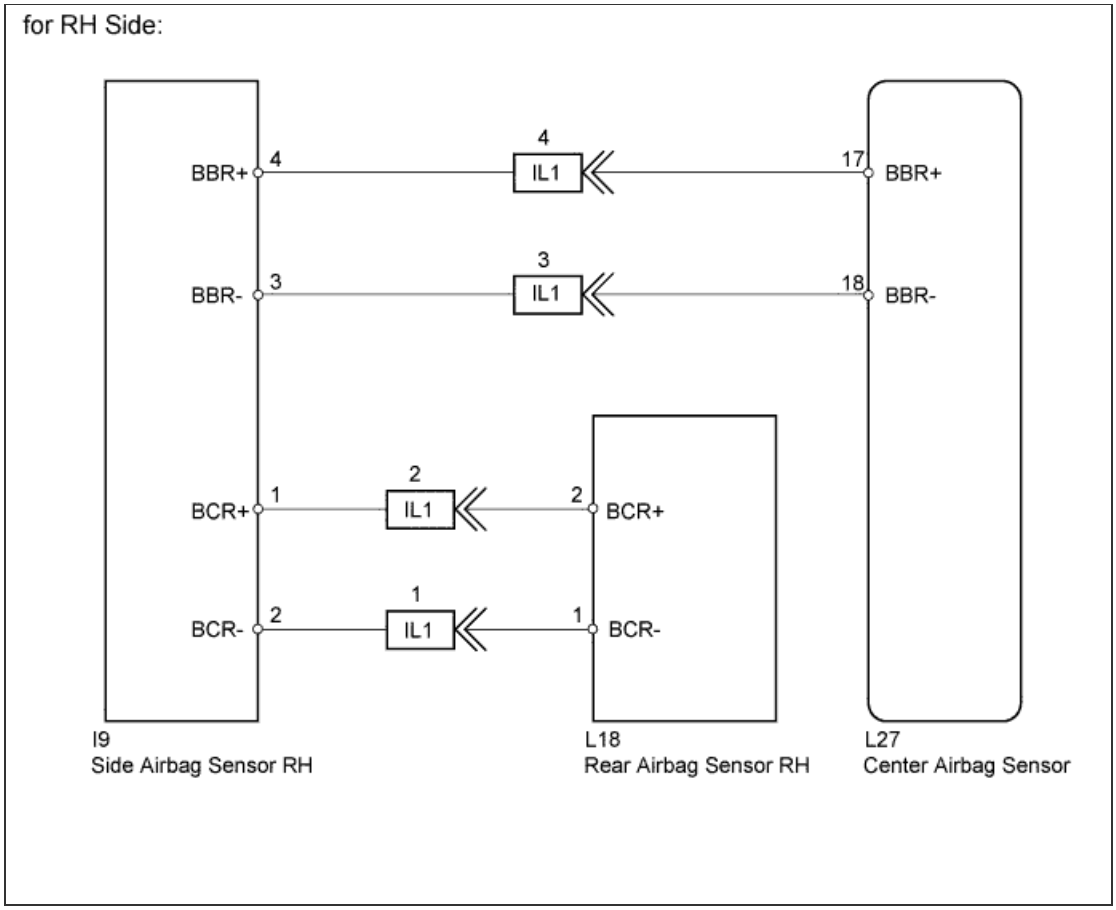

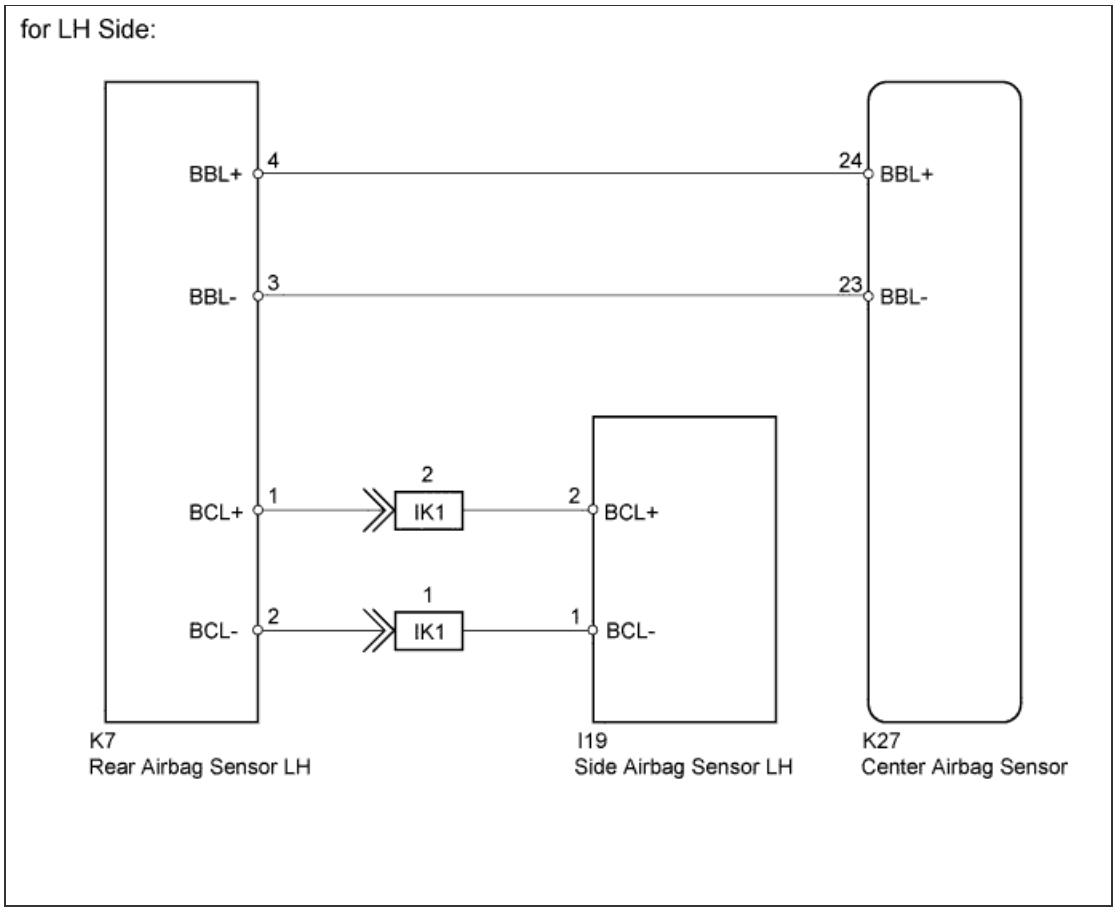

INSPECTION PROCEDURE

NOTICE:

hen disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 8
C	

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor RH and rear airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, rear airbag sensor RH and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor RH side and side airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

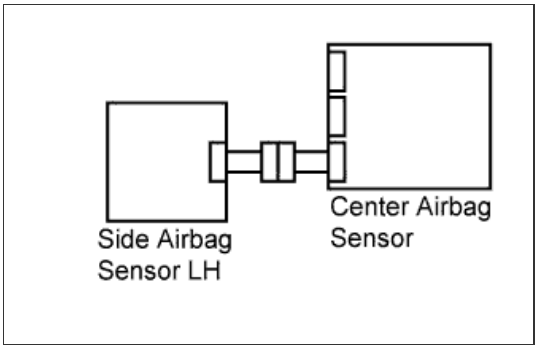

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

5.CHECK REAR AIRBAG SENSOR RH CIRCUIT

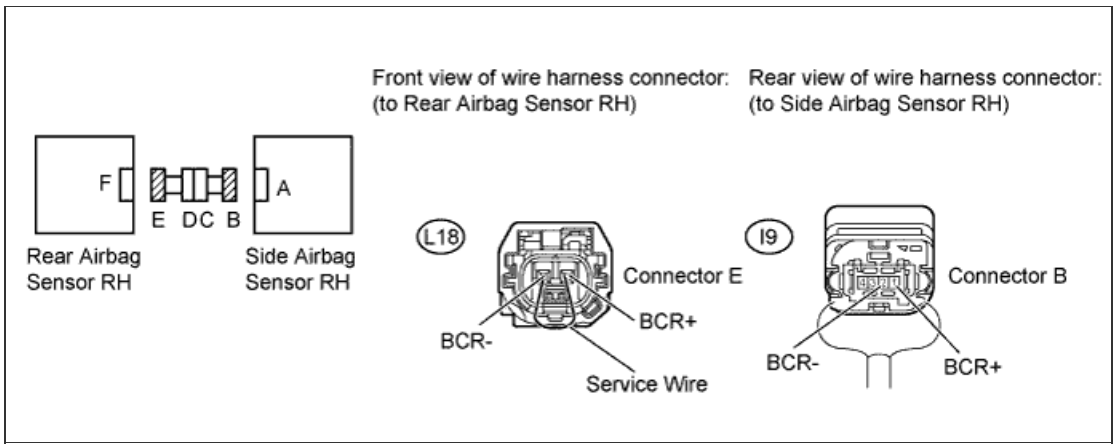

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector E.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 7

OK

6.CHECK REAR AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear airbag sensor RH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

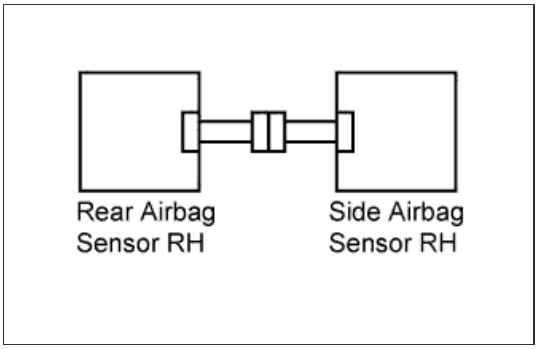

OK:

DTC B1632 and B1633 is not output.

HINT:


Codes other than DTC B1632 and B1633 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

7.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

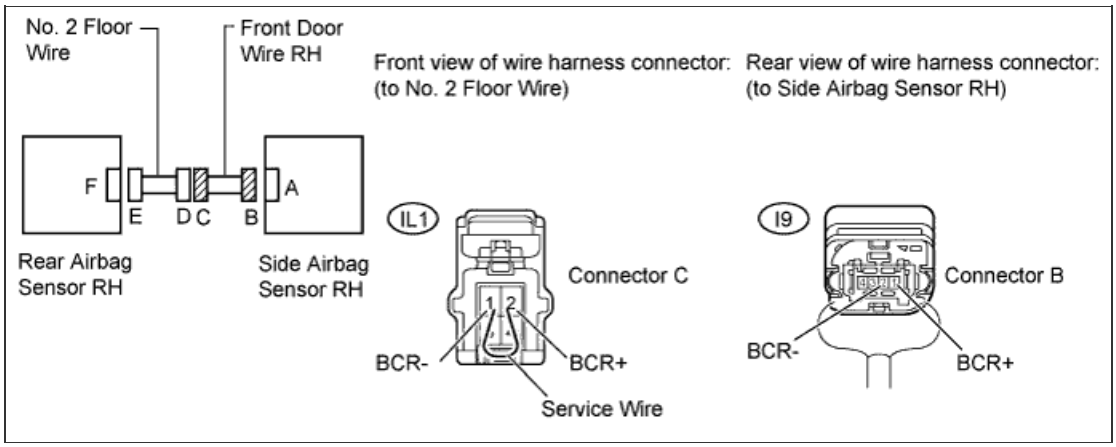

a. Disconnect the front door wire RH connectors from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

8.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor LH and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

9.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, side airbag sensor LH and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor LH side and side airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

10.CHECK REAR AIRBAG SENSOR LH

a. Connect the connector to the center airbag sensor.

b. Temporarily replace the rear airbag sensor LH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.


h. Check for DTCs (Click here).

OK:

DTC B1697 and B1698 are not output.

HINT:

Codes other than DTC B1697 and B1698 may be output at this time, but they are not related to this check.

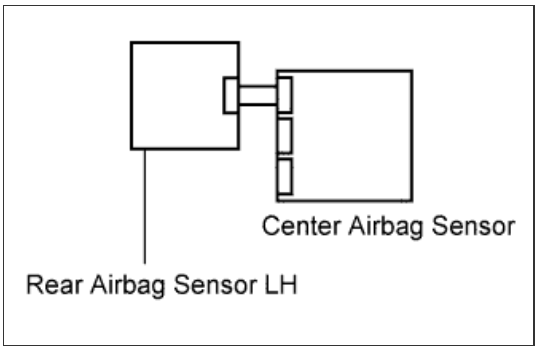


NG → Go to step 11

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

11.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

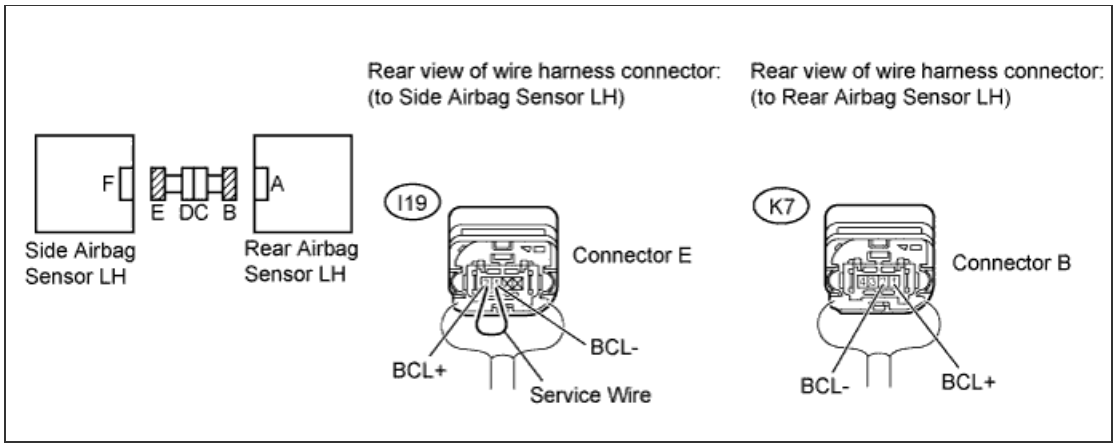

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the side airbag sensor LH and rear airbag sensor LH.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified condition
1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

j. Disconnect the service wire from connector E.

k. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 13

OK

12.CHECK SIDE AIRBAG SENSOR LH

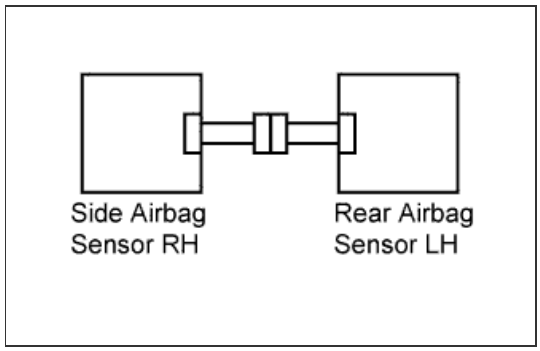

a. Connect the connectors to the rear airbag sensor LH.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1632 or B1633 is output	B
DTC B1697 or B1698 is output	C

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

13.CHECK FLOOR WIRE (SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

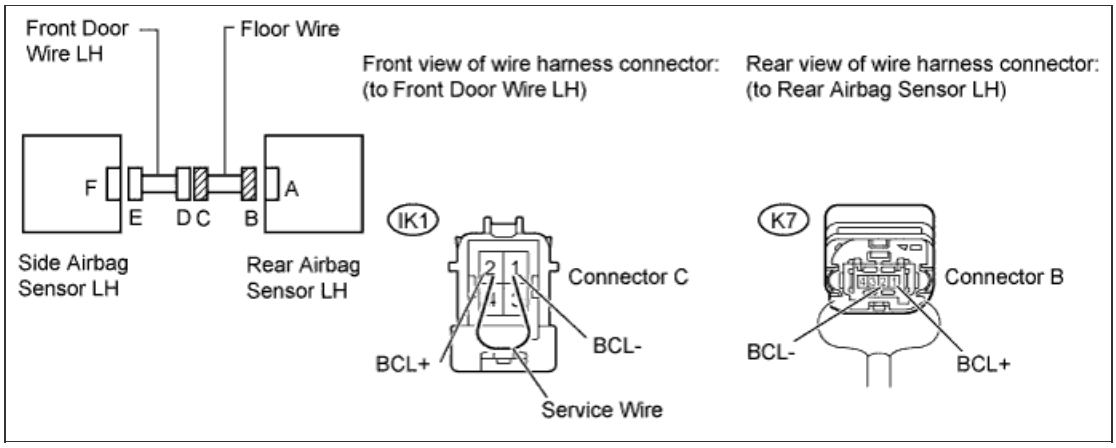

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1840/59 Short in Curtain Shield Squib RH 2nd Step Circuit

DTC B1841/59 Open in Curtain Shield Squib RH 2nd Step Circuit

DTC B1842/59 Short to GND in Curtain Shield Squib RH 2nd Step Circuit

DTC B1843/59 Short to B+ in Curtain Shield Squib RH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1840/59	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH 2nd step circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1841/59	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH 2nd step circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1842/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1843/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

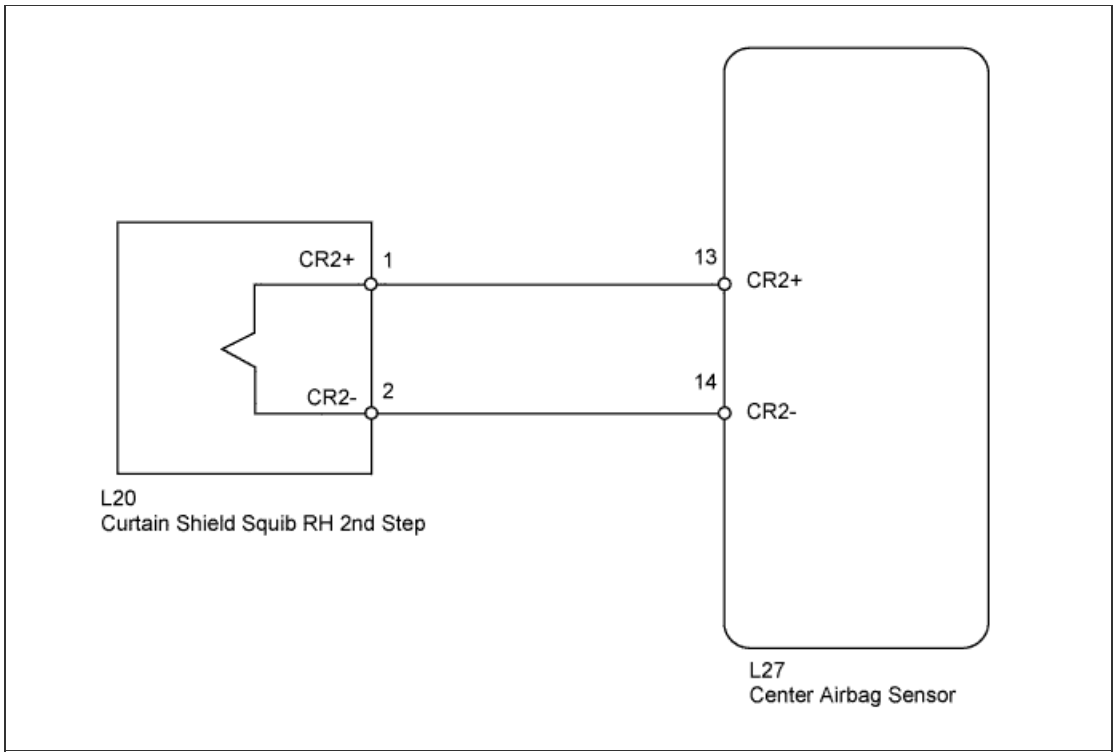

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield squib RH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

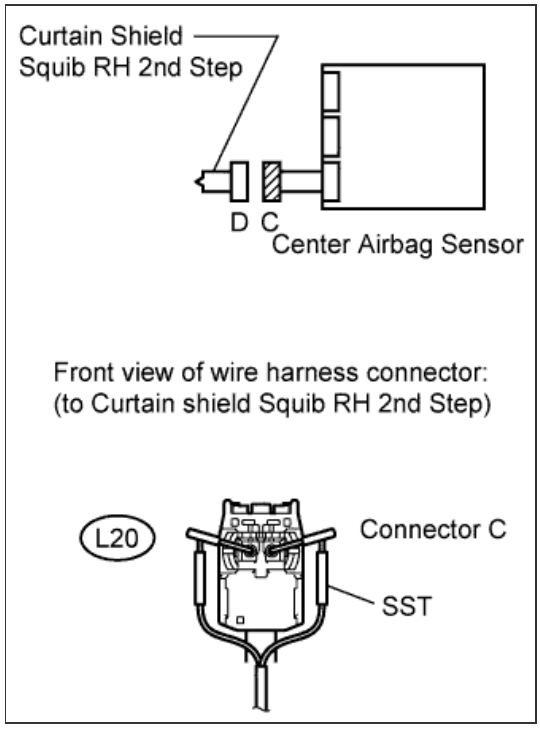

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield squib RH 2nd step side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L20-1 (CR2+) - Body ground	Engine switch on (IG)	Below 1 V
L20-2 (CR2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	1 MΩ or higher
L20-1 (CR2+) - Body ground	Always	1 MΩ or higher
L20-2 (CR2-) -	Always	1 MΩ or higher

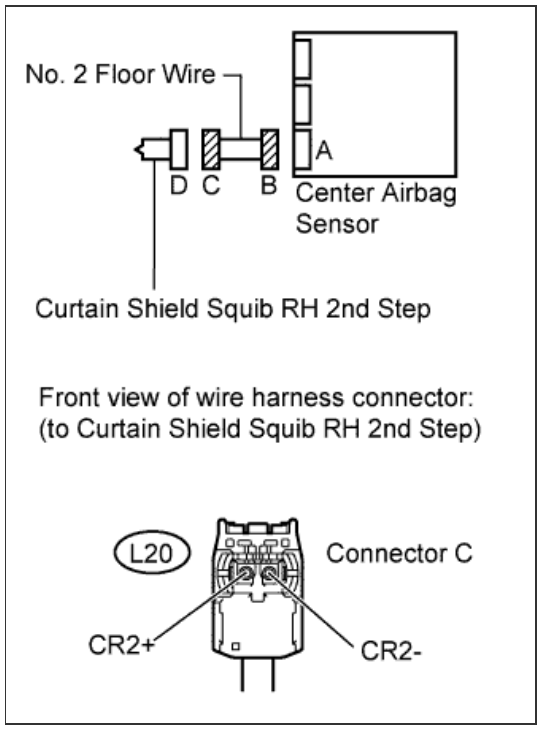

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib RH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

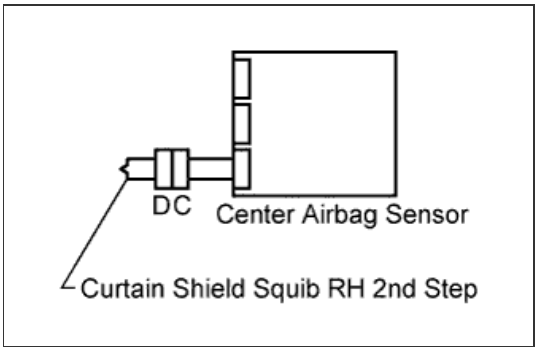

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1632/81 Lost Communication with Rear Airbag Sensor RH

DTC B1633/81 Rear Airbag Sensor Assembly RH Initialization Incomplete

DTC B1697/82 Lost Communication with Door Side Airbag Sensor LH

DTC B1698/82 Door Side Airbag Sensor LH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor LH" refer to the side airbag sensor LH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1632/81 or B1697/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1632/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1633/81	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1697/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1698/82	hen one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

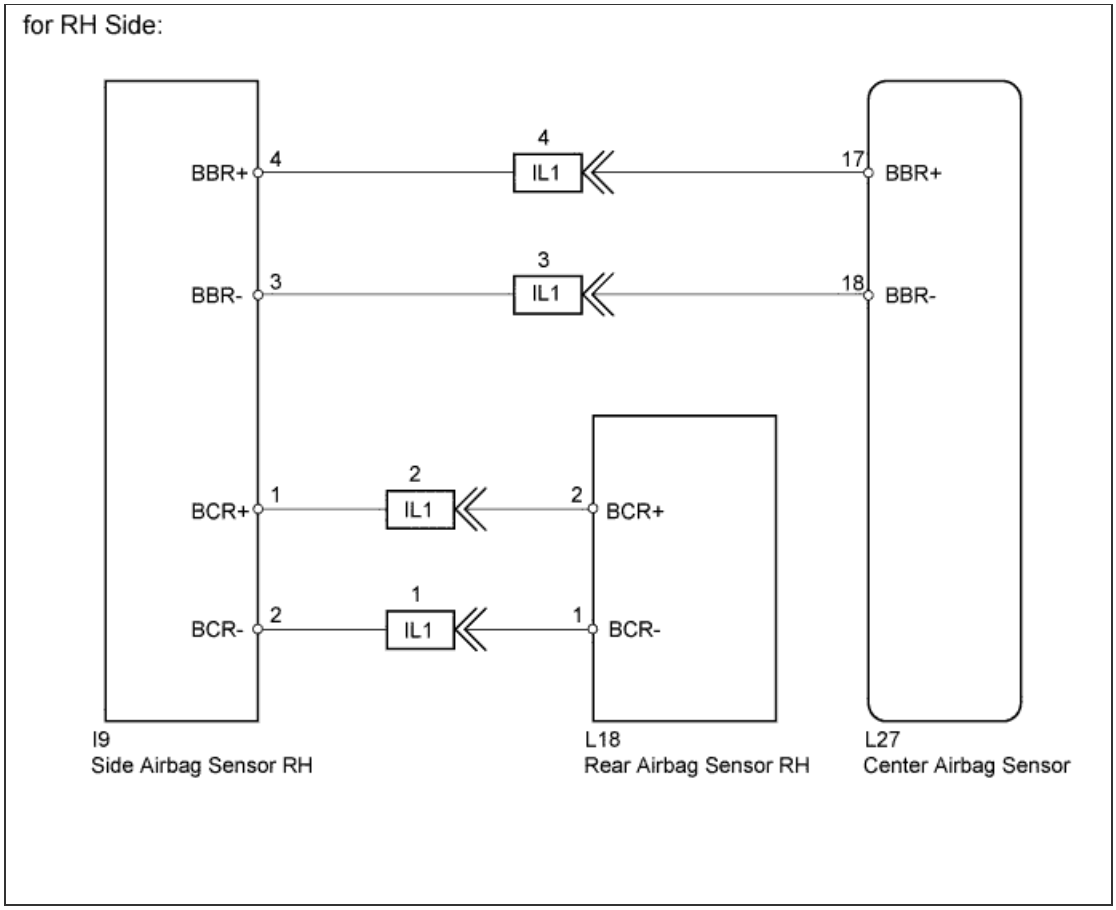

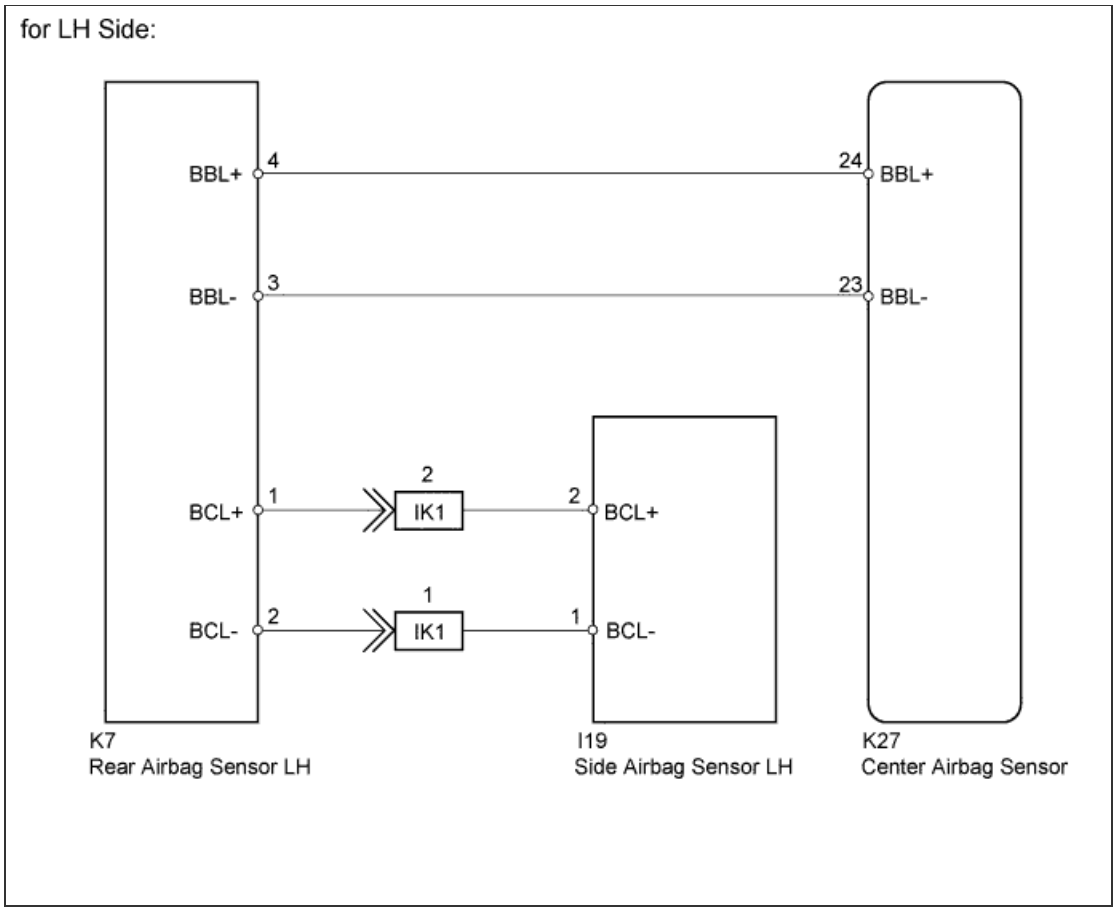

INSPECTION PROCEDURE

NOTICE:

hen disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	Go to step 8
C	

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor RH and rear airbag sensor RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, rear airbag sensor RH and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor RH side and side airbag sensor RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

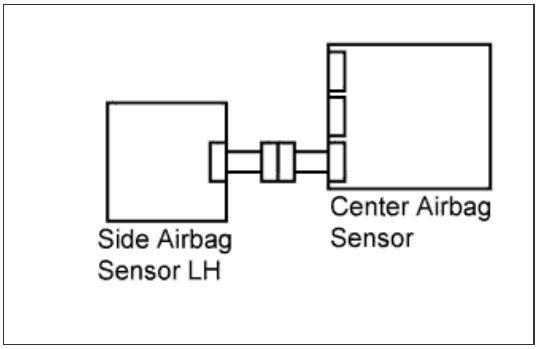

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1697 or B1698 is output	B
DTC B1632 or B1633 is output	C

HINT:

Codes other than DTC B1632, B1633, B1697 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

5.CHECK REAR AIRBAG SENSOR RH CIRCUIT

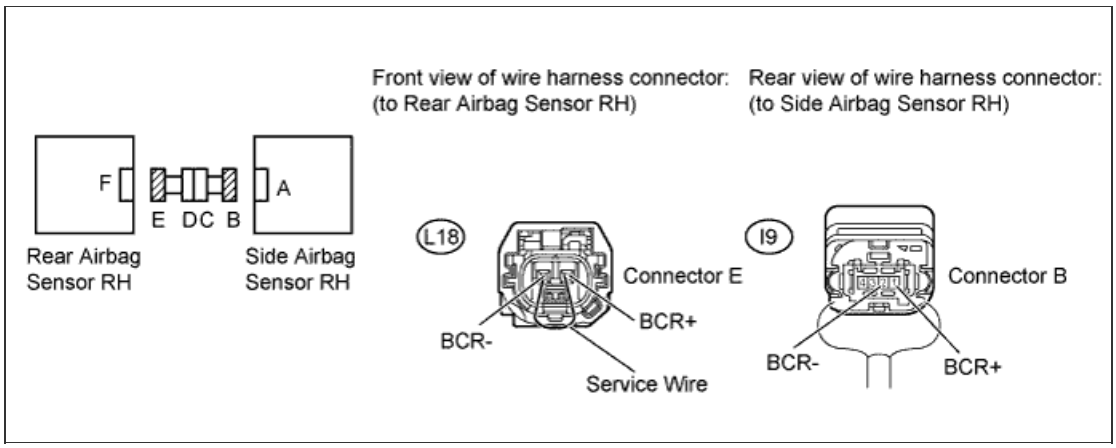

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector E.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 7

OK

6.CHECK REAR AIRBAG SENSOR RH

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear airbag sensor RH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

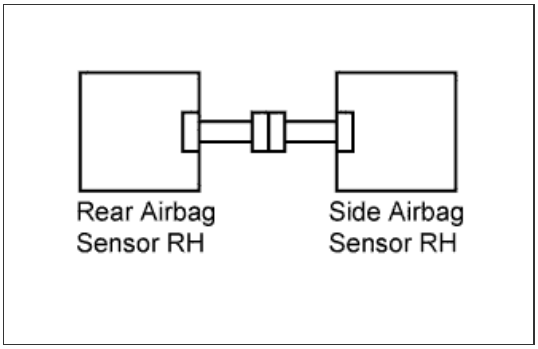

OK:

DTC B1632 and B1633 is not output.

HINT:


Codes other than DTC B1632 and B1633 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

7.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

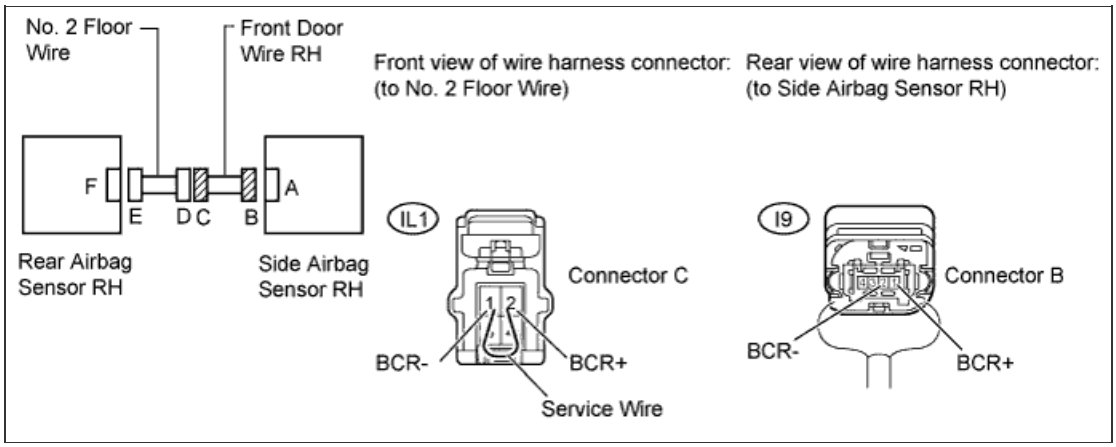

a. Disconnect the front door wire RH connectors from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

8.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor, the side airbag sensor LH and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

9.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor, side airbag sensor LH and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side, the rear airbag sensor LH side and side airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

10.CHECK REAR AIRBAG SENSOR LH

a. Connect the connector to the center airbag sensor.

b. Temporarily replace the rear airbag sensor LH with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.


h. Check for DTCs (Click here).

OK:

DTC B1697 and B1698 are not output.

HINT:

Codes other than DTC B1697 and B1698 may be output at this time, but they are not related to this check.

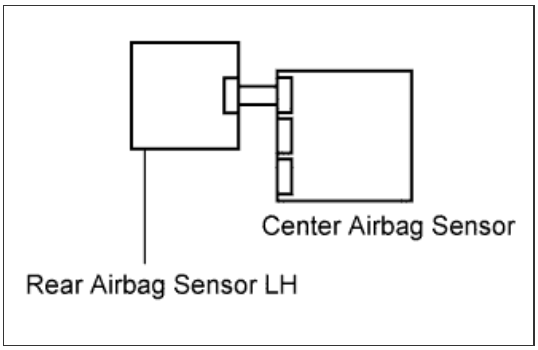


NG → Go to step 11

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

11.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

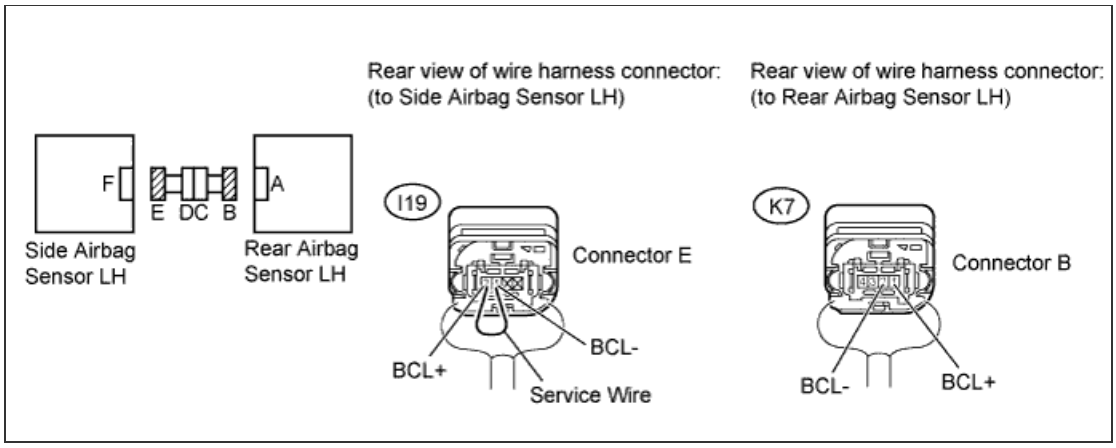

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the side airbag sensor LH and rear airbag sensor LH.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified condition
1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

j. Disconnect the service wire from connector E.

k. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 13

OK

12.CHECK SIDE AIRBAG SENSOR LH

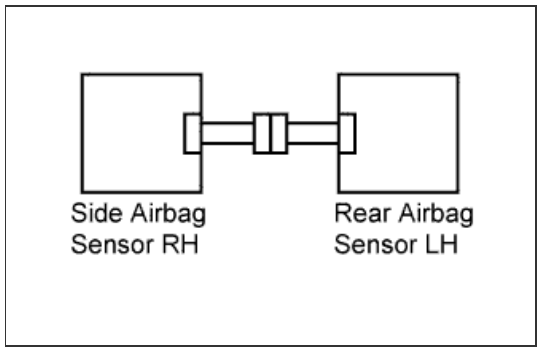

a. Connect the connectors to the rear airbag sensor LH.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1632, B1633, B1697 and B1698 are not output	A
DTC B1632 or B1633 is output	B
DTC B1697 or B1698 is output	C

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

13.CHECK FLOOR WIRE (SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

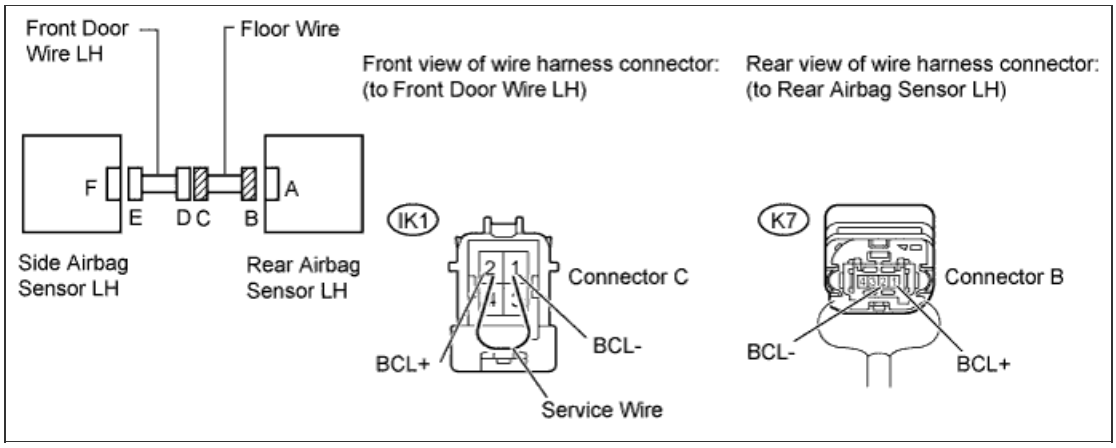

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. sing a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - 2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (BCL+) - Body ground	Always	1 MΩ or higher
2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1840/59 Short in Curtain Shield Squib RH 2nd Step Circuit

DTC B1841/59 Open in Curtain Shield Squib RH 2nd Step Circuit

DTC B1842/59 Short to GND in Curtain Shield Squib RH 2nd Step Circuit

DTC B1843/59 Short to B+ in Curtain Shield Squib RH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1840/59	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH 2nd step circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1841/59	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH 2nd step circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1842/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1843/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

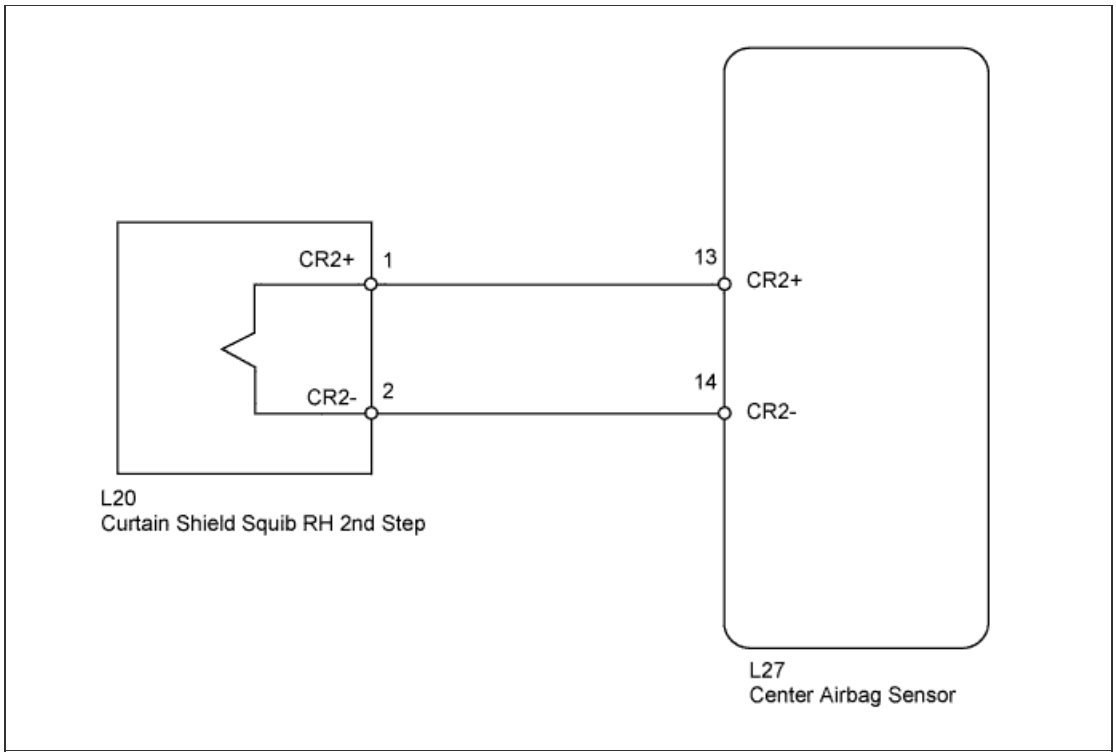

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield squib RH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

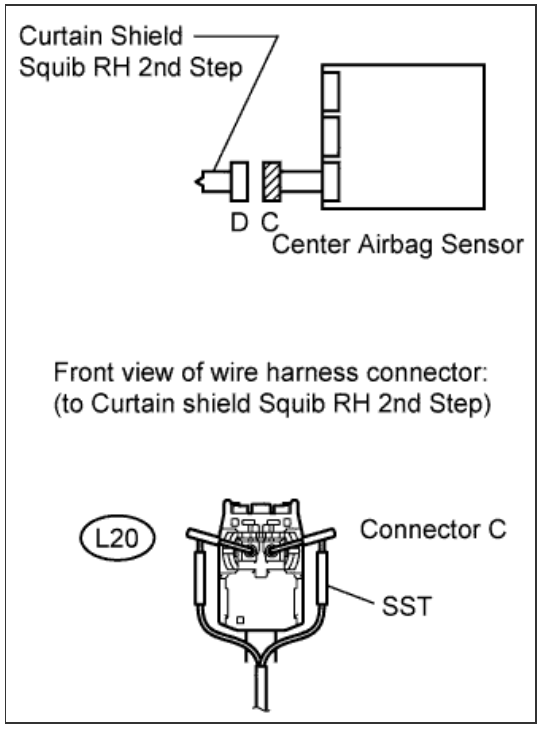

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield squib RH 2nd step side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L20-1 (CR2+) - Body ground	Engine switch on (IG)	Below 1 V
L20-2 (CR2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	1 MΩ or higher
L20-1 (CR2+) - Body ground	Always	1 MΩ or higher
L20-2 (CR2-) -	Always	1 MΩ or higher

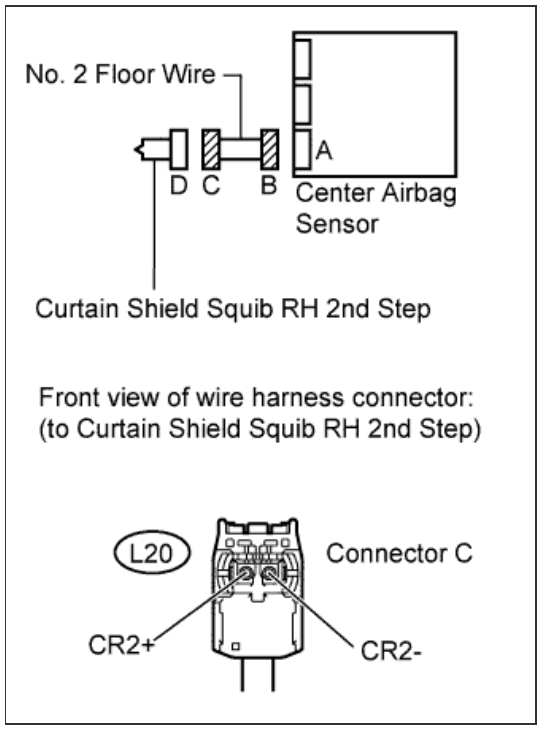

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib RH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

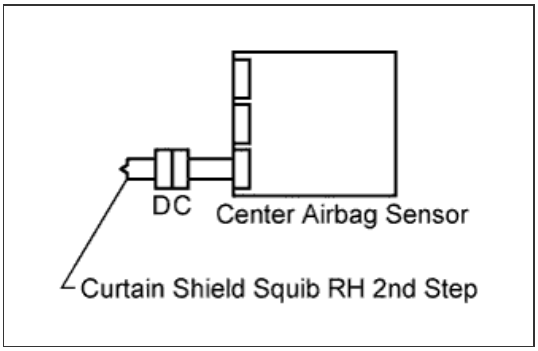

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1635/24 Rear Airbag Sensor LH Circuit Malfunction

DTC B1637/82 Lost Communication with Rear Airbag Sensor LH

DTC B1690/15 Door Side Airbag Sensor RH Malfunction

DTC B1692/81 Lost Communication with Door Side Airbag Sensor RH

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.

- For DTC B1690 and B1635:
  The rear airbag sensor LH and side airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc.
  If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated.
  DTC B1690/15 or B1635/24 is stored when a malfunction is detected in the rear airbag sensor LH or side airbag sensor RH circuit.
- For DTC B1692 and B1637:
  The circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH and curtain shield airbag RH or LH) is composed of the center airbag sensor, side airbag sensor RH or LH, and rear airbag sensor RH or LH.
  The side airbag sensor RH or LH, and rear airbag sensor RH or LH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1692 or B1637 is stored when a malfunction is detected in the circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH, and curtain shield airbag RH or LH).

DTC Code	DTC Detection Condition	Trouble Area
B1635/24	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1637/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH, rear seat side airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1690/15	When one of the following conditions is met: • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly
B1692/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH, rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

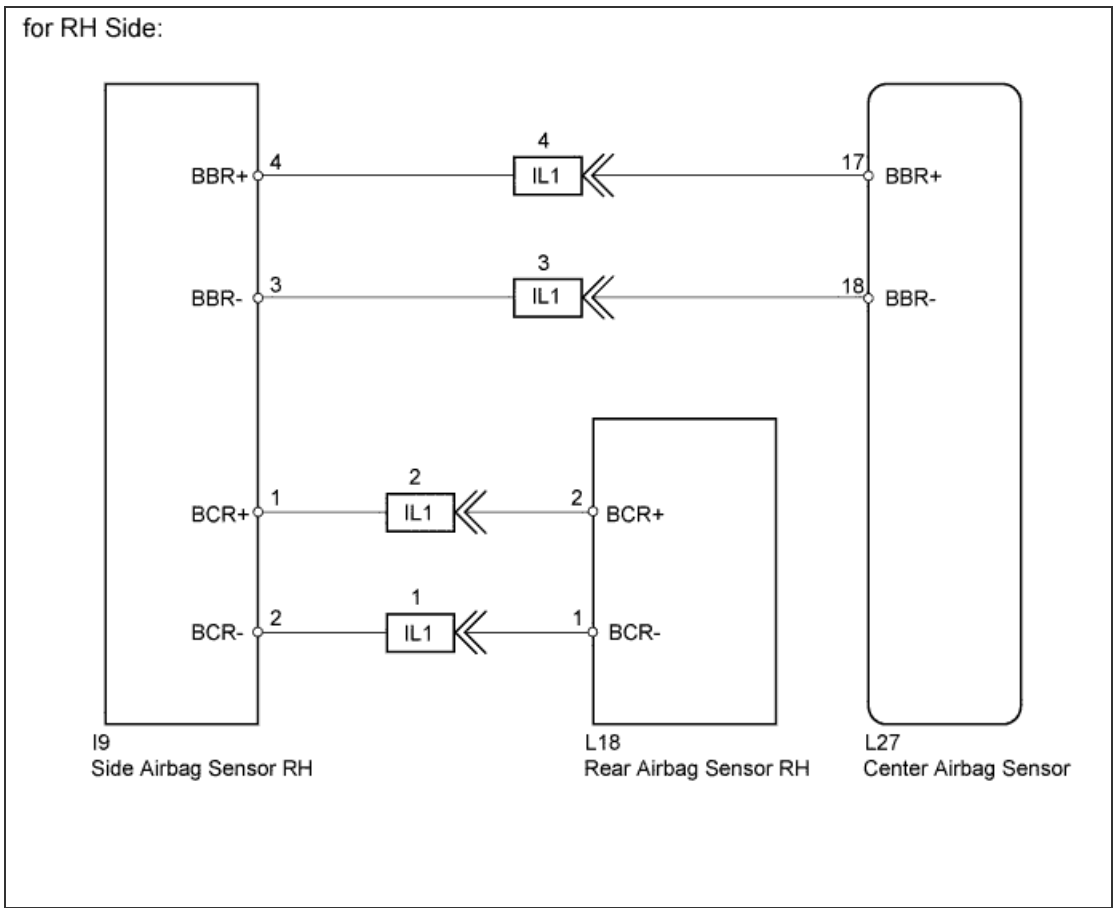

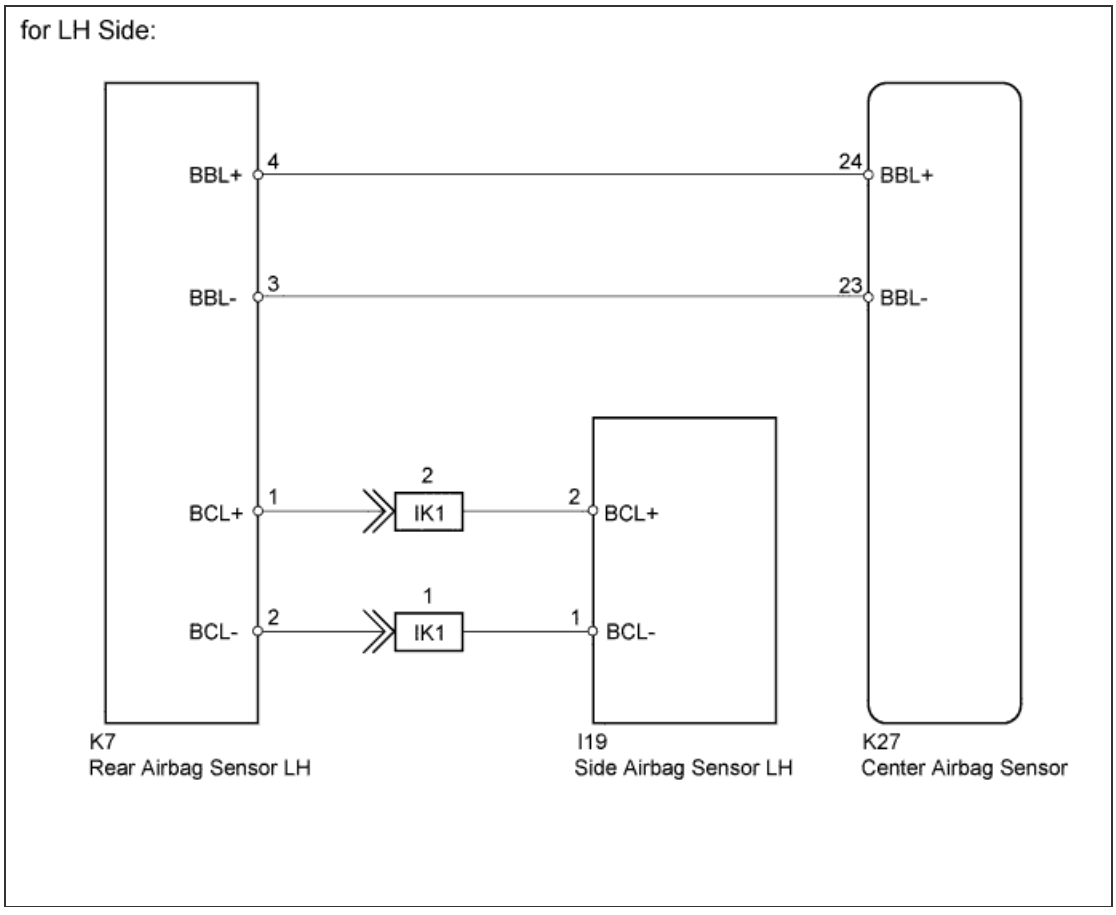

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1635, B1637, B1690 and B1692 are not output	A
DTC B1635 or B1637 is output	B
DTC B1690 or B1692 is output	C

HINT:


Codes other than DTC B1635, B1637, B1690 and B1692 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 3

C

2.CHECK SIDE AIRBAG SENSOR RH

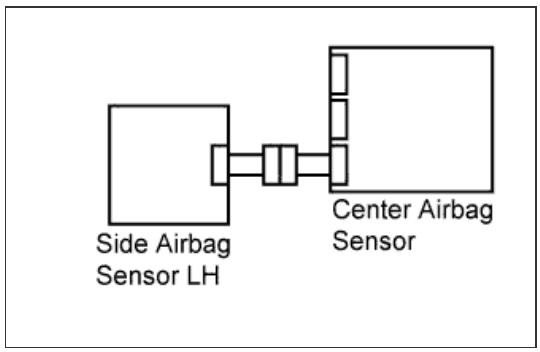

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1695, B1697, B1690 and B1692 are not output	A
DTC B1695 or B1697 is output	B
DTC B1690 or B1692 is output	C

HINT:

Codes other than DTC B1690, B1692, B1695 and B1697 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

3.CHECK REAR AIRBAG SENSOR LH

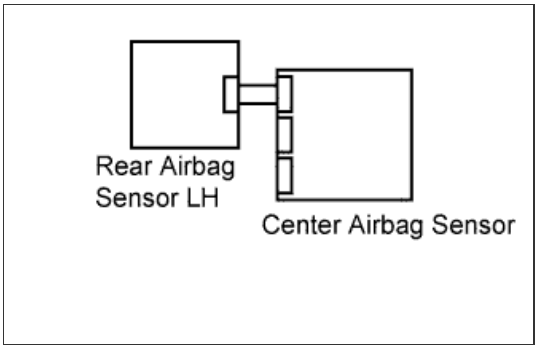

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor LH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1635 and B1637 are not output.

HINT:

Codes other than DTC B1635 and B1637 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

DTC B1840/59 Short in Curtain Shield Squib RH 2nd Step Circuit

DTC B1841/59 Open in Curtain Shield Squib RH 2nd Step Circuit

DTC B1842/59 Short to GND in Curtain Shield Squib RH 2nd Step Circuit

DTC B1843/59 Short to B+ in Curtain Shield Squib RH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1840/59	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH 2nd step circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1841/59	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH 2nd step circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1842/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1843/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

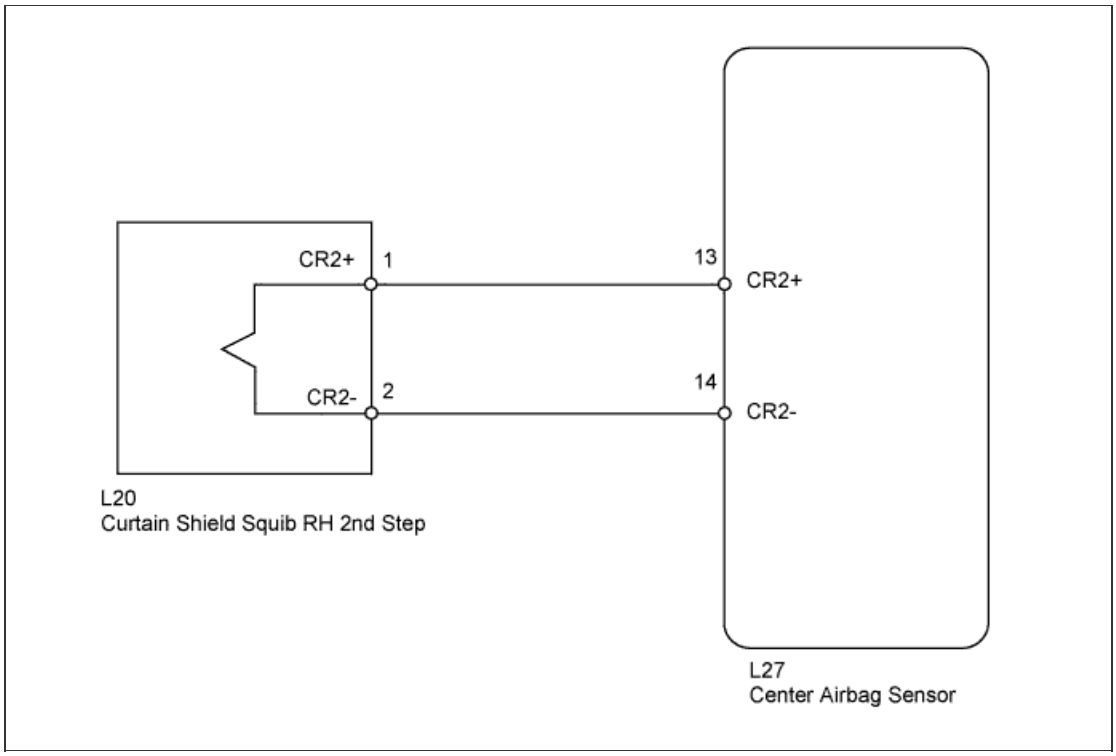

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield squib RH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

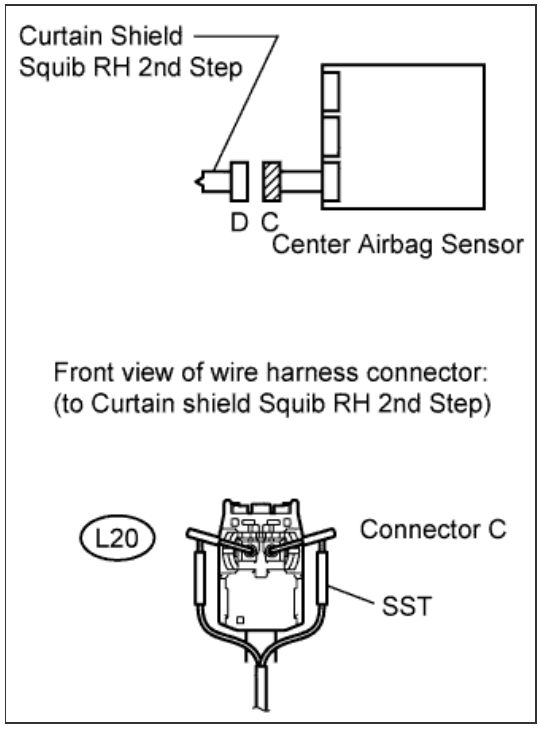

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield squib RH 2nd step side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L20-1 (CR2+) - Body ground	Engine switch on (IG)	Below 1 V
L20-2 (CR2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	1 MΩ or higher
L20-1 (CR2+) - Body ground	Always	1 MΩ or higher
L20-2 (CR2-) -	Always	1 MΩ or higher

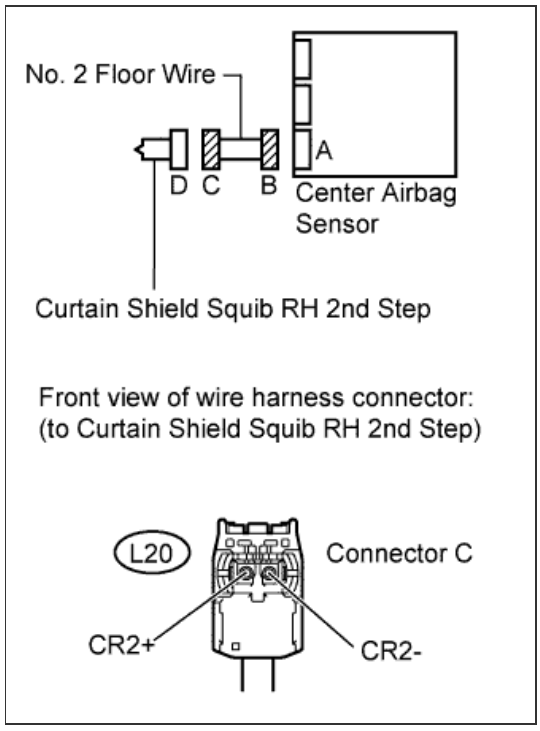

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib RH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

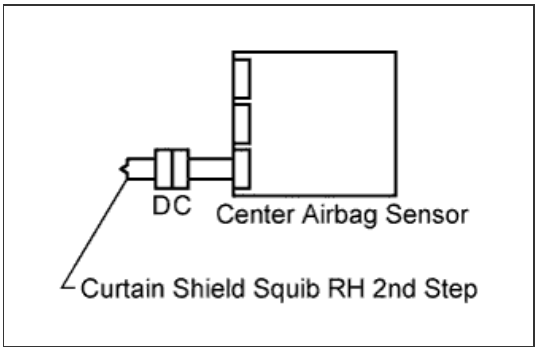

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1635/24 Rear Airbag Sensor LH Circuit Malfunction

DTC B1637/82 Lost Communication with Rear Airbag Sensor LH

DTC B1690/15 Door Side Airbag Sensor RH Malfunction

DTC B1692/81 Lost Communication with Door Side Airbag Sensor RH

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.

- For DTC B1690 and B1635:
  The rear airbag sensor LH and side airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc.
  If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated.
  DTC B1690/15 or B1635/24 is stored when a malfunction is detected in the rear airbag sensor LH or side airbag sensor RH circuit.
- For DTC B1692 and B1637:
  The circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH and curtain shield airbag RH or LH) is composed of the center airbag sensor, side airbag sensor RH or LH, and rear airbag sensor RH or LH.
  The side airbag sensor RH or LH, and rear airbag sensor RH or LH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1692 or B1637 is stored when a malfunction is detected in the circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH, and curtain shield airbag RH or LH).

DTC Code	DTC Detection Condition	Trouble Area
B1635/24	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1637/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH, rear seat side airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1690/15	When one of the following conditions is met: • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly
B1692/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH, rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

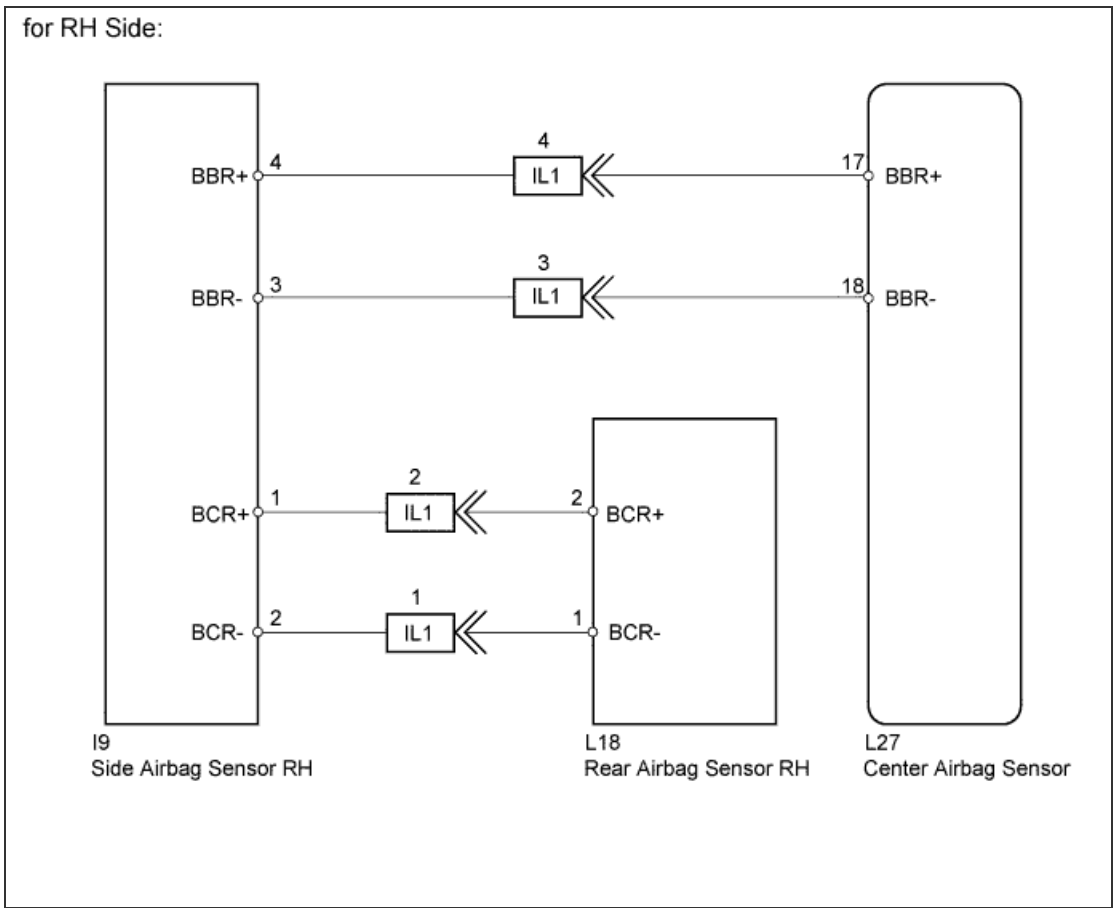

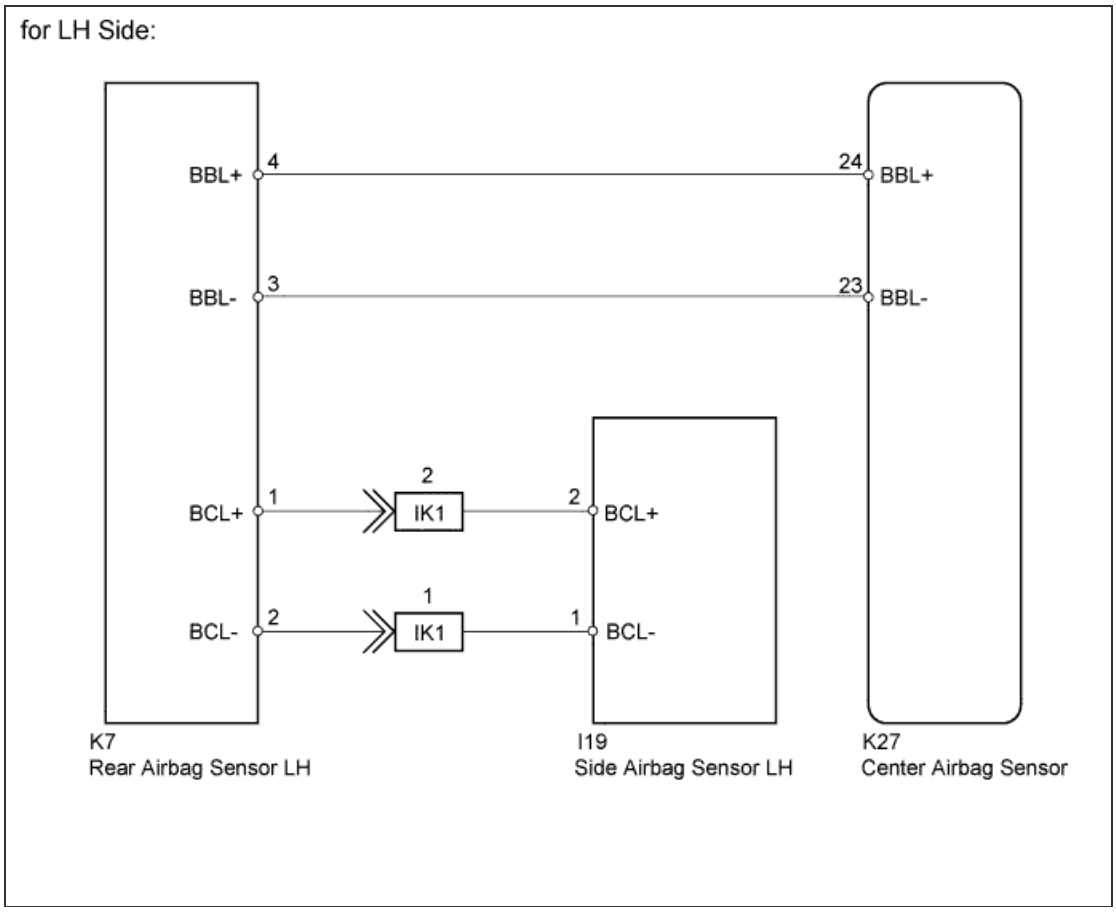

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1635, B1637, B1690 and B1692 are not output	A
DTC B1635 or B1637 is output	B
DTC B1690 or B1692 is output	C

HINT:


Codes other than DTC B1635, B1637, B1690 and B1692 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 3

C

2.CHECK SIDE AIRBAG SENSOR RH

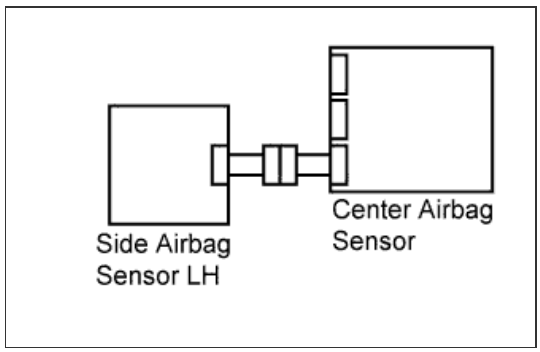

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1695, B1697, B1690 and B1692 are not output	A
DTC B1695 or B1697 is output	B
DTC B1690 or B1692 is output	C

HINT:

Codes other than DTC B1690, B1692, B1695 and B1697 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

3.CHECK REAR AIRBAG SENSOR LH

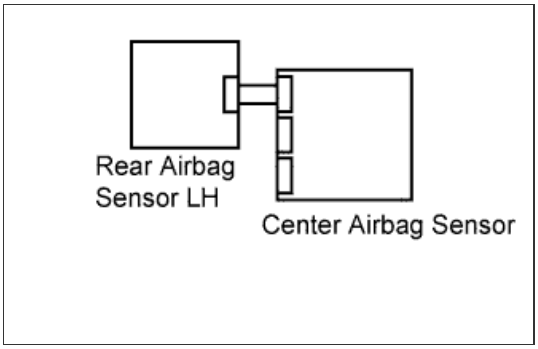

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor LH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1635 and B1637 are not output.

HINT:

Codes other than DTC B1635 and B1637 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

DTC B1840/59 Short in Curtain Shield Squib RH 2nd Step Circuit

DTC B1841/59 Open in Curtain Shield Squib RH 2nd Step Circuit

DTC B1842/59 Short to GND in Curtain Shield Squib RH 2nd Step Circuit

DTC B1843/59 Short to B+ in Curtain Shield Squib RH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1840/59	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH 2nd step circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1841/59	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH 2nd step circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1842/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1843/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

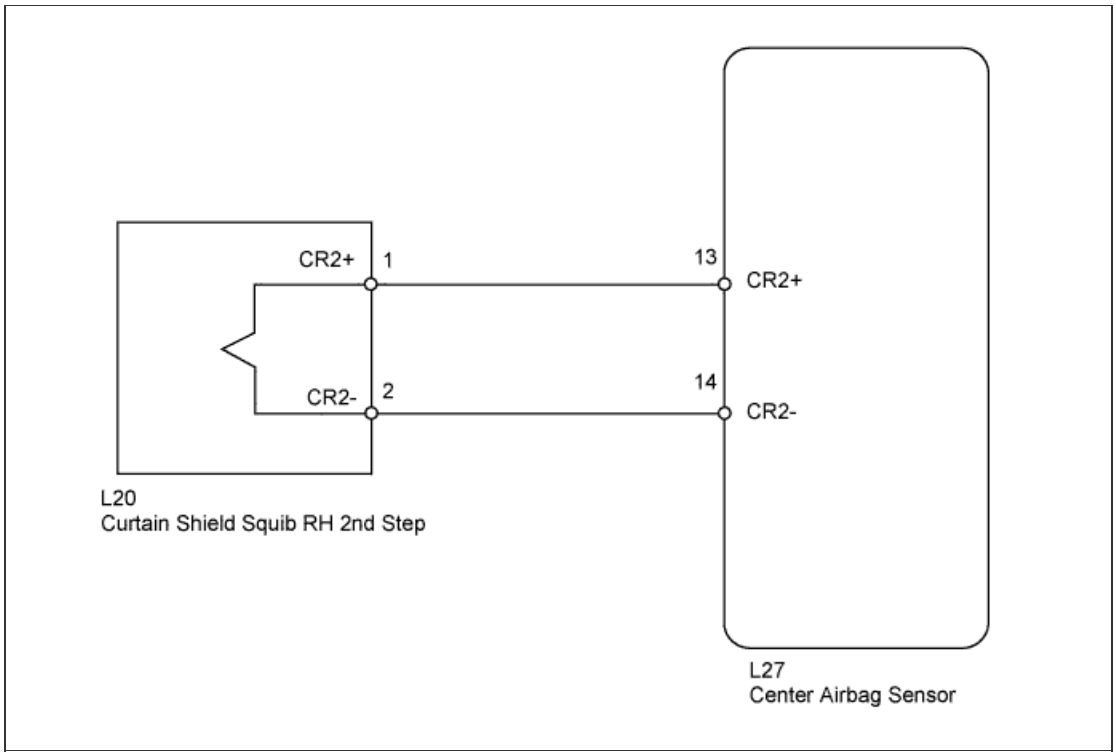

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield squib RH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

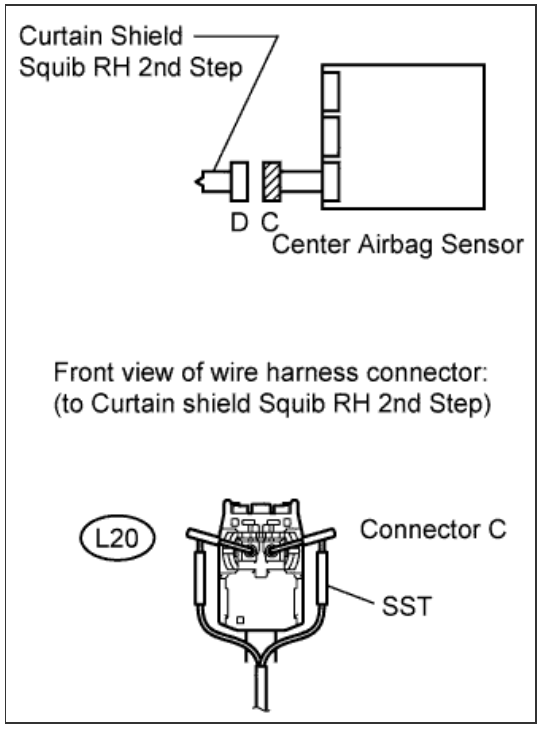

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield squib RH 2nd step side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L20-1 (CR2+) - Body ground	Engine switch on (IG)	Below 1 V
L20-2 (CR2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	1 MΩ or higher
L20-1 (CR2+) - Body ground	Always	1 MΩ or higher
L20-2 (CR2-) -	Always	1 MΩ or higher

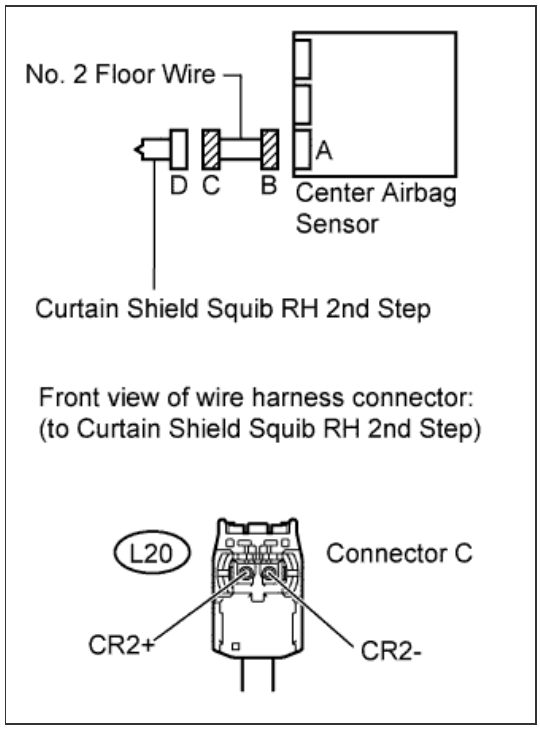

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib RH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

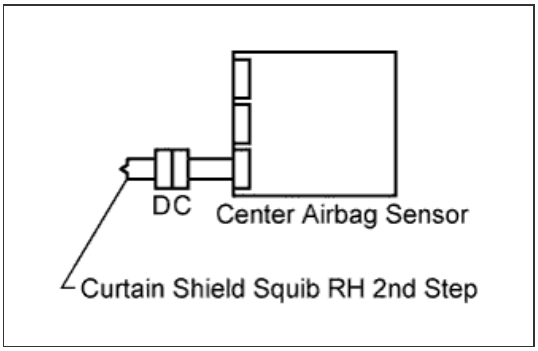

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1635/24 Rear Airbag Sensor LH Circuit Malfunction

DTC B1637/82 Lost Communication with Rear Airbag Sensor LH

DTC B1690/15 Door Side Airbag Sensor RH Malfunction

DTC B1692/81 Lost Communication with Door Side Airbag Sensor RH

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.

- For DTC B1690 and B1635:
  The rear airbag sensor LH and side airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc.
  If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated.
  DTC B1690/15 or B1635/24 is stored when a malfunction is detected in the rear airbag sensor LH or side airbag sensor RH circuit.
- For DTC B1692 and B1637:
  The circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH and curtain shield airbag RH or LH) is composed of the center airbag sensor, side airbag sensor RH or LH, and rear airbag sensor RH or LH.
  The side airbag sensor RH or LH, and rear airbag sensor RH or LH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1692 or B1637 is stored when a malfunction is detected in the circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH, and curtain shield airbag RH or LH).

DTC Code	DTC Detection Condition	Trouble Area
B1635/24	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1637/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH, rear seat side airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1690/15	When one of the following conditions is met: • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly
B1692/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH, rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

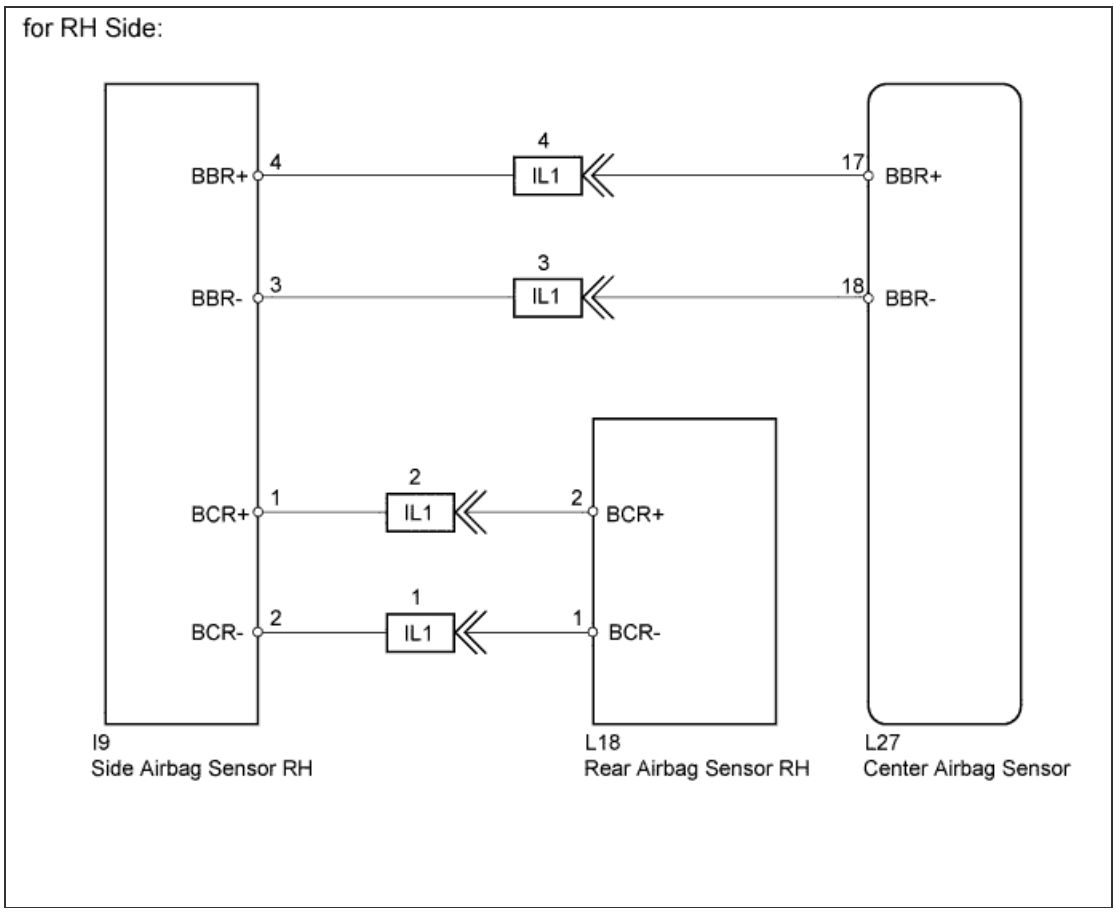

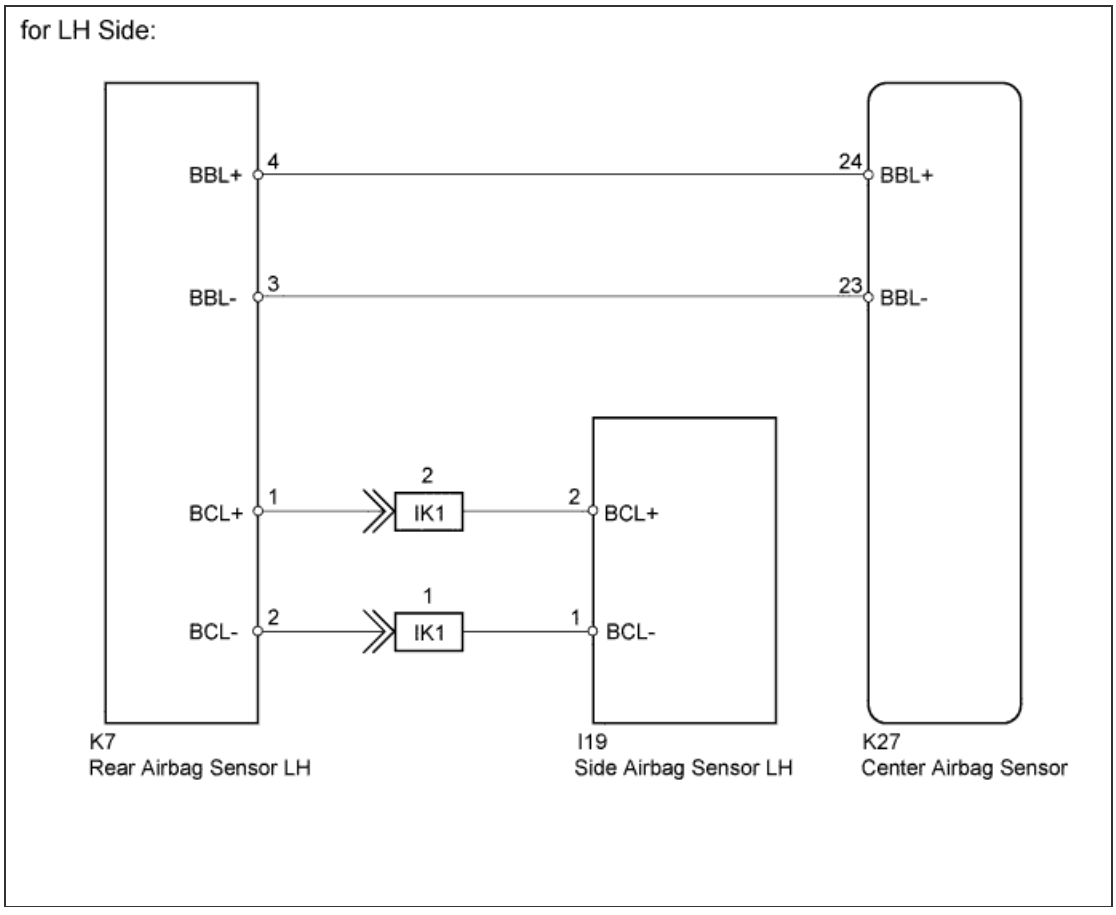

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1635, B1637, B1690 and B1692 are not output	A
DTC B1635 or B1637 is output	B
DTC B1690 or B1692 is output	C

HINT:


Codes other than DTC B1635, B1637, B1690 and B1692 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 3

C

2.CHECK SIDE AIRBAG SENSOR RH

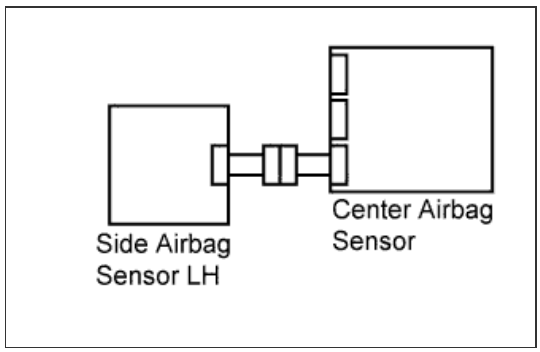

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1695, B1697, B1690 and B1692 are not output	A
DTC B1695 or B1697 is output	B
DTC B1690 or B1692 is output	C

HINT:

Codes other than DTC B1690, B1692, B1695 and B1697 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

3.CHECK REAR AIRBAG SENSOR LH

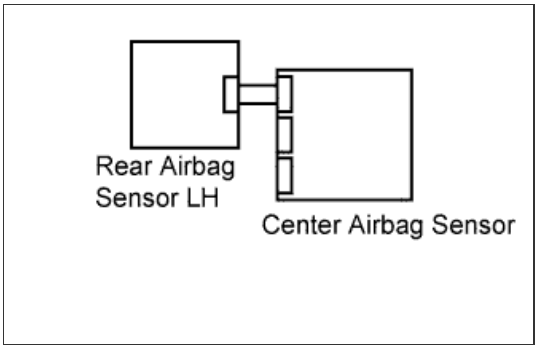

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor LH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1635 and B1637 are not output.

HINT:

Codes other than DTC B1635 and B1637 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

DTC B1840/59 Short in Curtain Shield Squib RH 2nd Step Circuit

DTC B1841/59 Open in Curtain Shield Squib RH 2nd Step Circuit

DTC B1842/59 Short to GND in Curtain Shield Squib RH 2nd Step Circuit

DTC B1843/59 Short to B+ in Curtain Shield Squib RH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1840/59	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH 2nd step circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1841/59	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH 2nd step circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1842/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1843/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

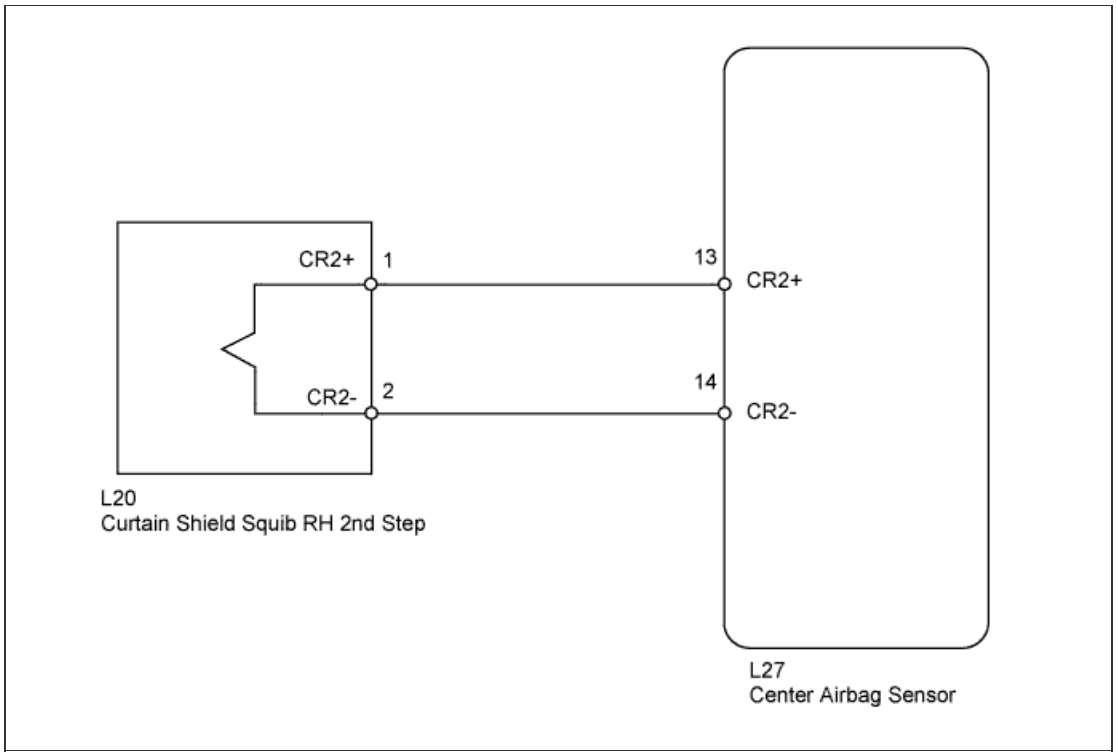

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield squib RH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

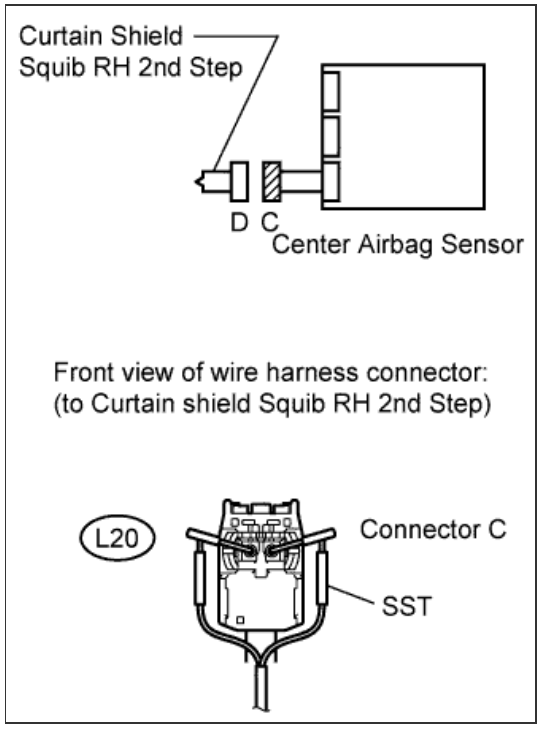

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield squib RH 2nd step side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L20-1 (CR2+) - Body ground	Engine switch on (IG)	Below 1 V
L20-2 (CR2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	1 MΩ or higher
L20-1 (CR2+) - Body ground	Always	1 MΩ or higher
L20-2 (CR2-) -	Always	1 MΩ or higher

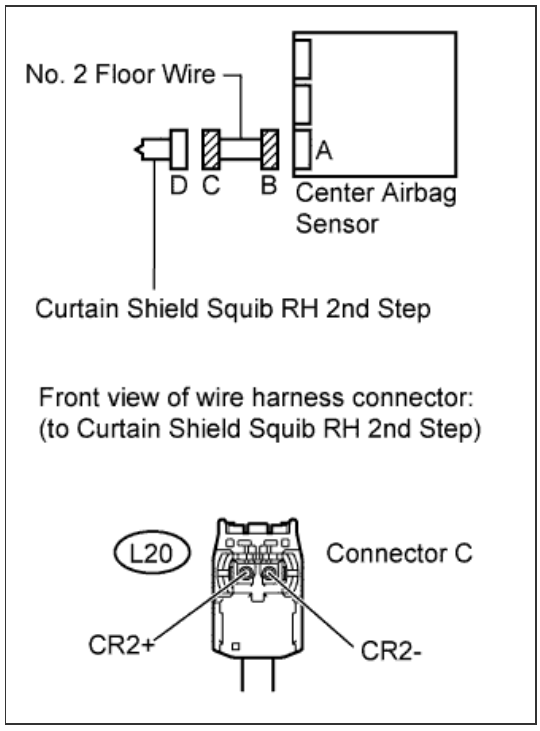

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib RH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

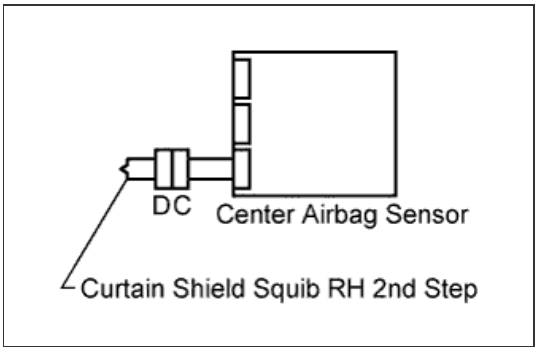

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1635/24 Rear Airbag Sensor LH Circuit Malfunction

DTC B1637/82 Lost Communication with Rear Airbag Sensor LH

DTC B1690/15 Door Side Airbag Sensor RH Malfunction

DTC B1692/81 Lost Communication with Door Side Airbag Sensor RH

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.

- For DTC B1690 and B1635:
  The rear airbag sensor LH and side airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc.
  If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated.
  DTC B1690/15 or B1635/24 is stored when a malfunction is detected in the rear airbag sensor LH or side airbag sensor RH circuit.
- For DTC B1692 and B1637:
  The circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH and curtain shield airbag RH or LH) is composed of the center airbag sensor, side airbag sensor RH or LH, and rear airbag sensor RH or LH.
  The side airbag sensor RH or LH, and rear airbag sensor RH or LH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1692 or B1637 is stored when a malfunction is detected in the circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH, and curtain shield airbag RH or LH).

DTC Code	DTC Detection Condition	Trouble Area
B1635/24	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1637/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH, rear seat side airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1690/15	When one of the following conditions is met: • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly
B1692/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH, rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

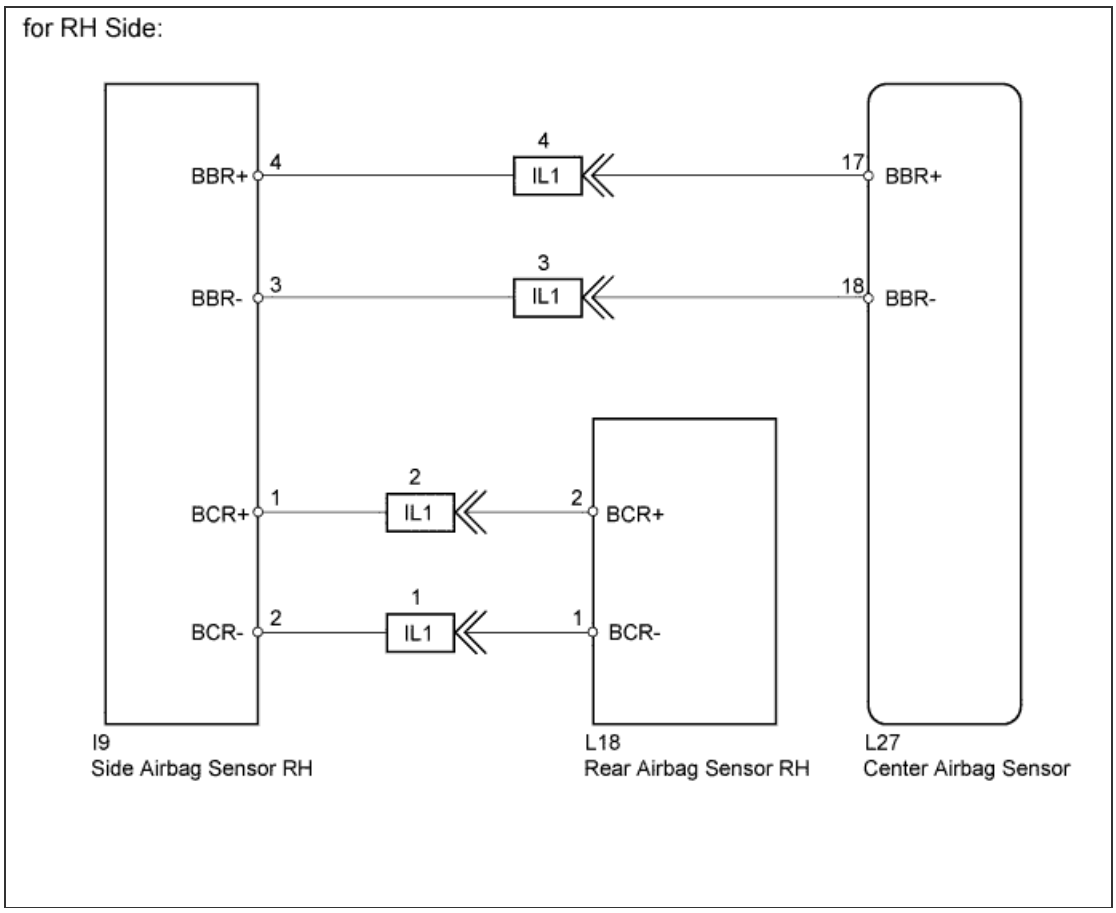

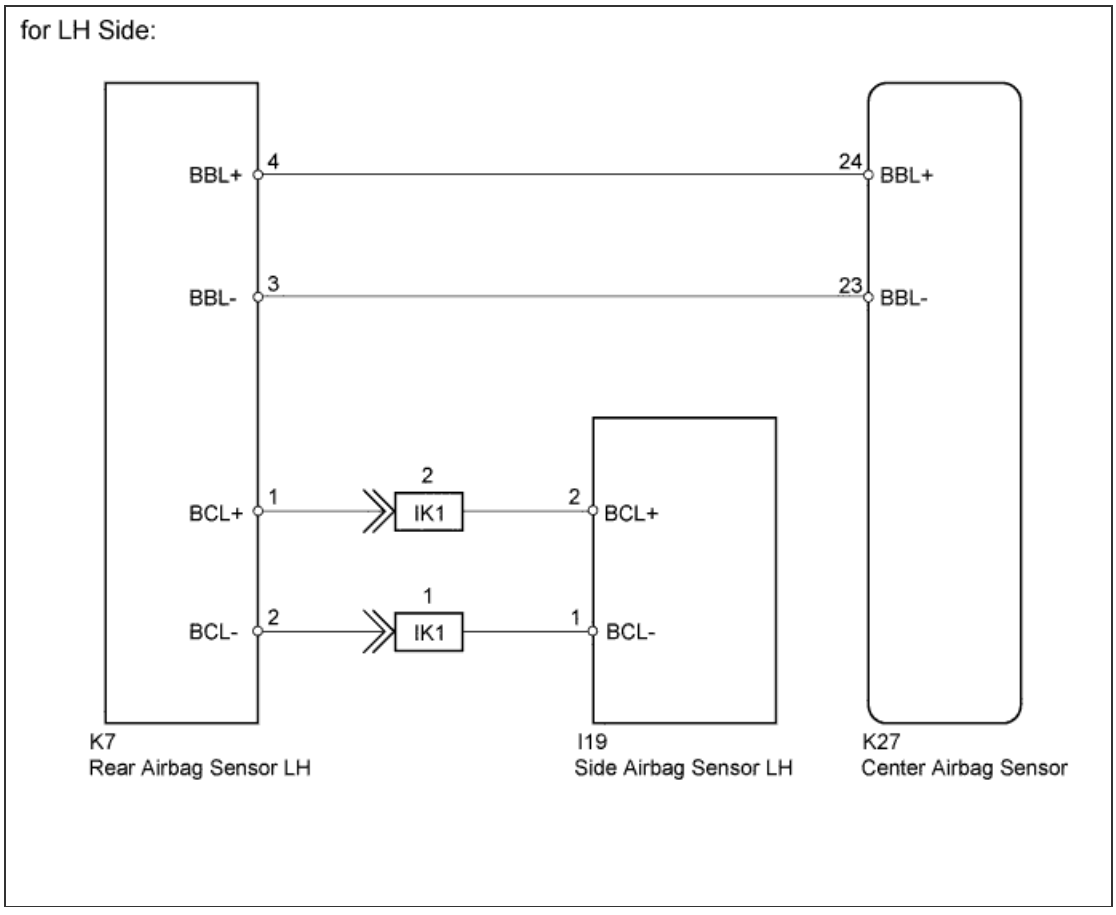

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1635, B1637, B1690 and B1692 are not output	A
DTC B1635 or B1637 is output	B
DTC B1690 or B1692 is output	C

HINT:


Codes other than DTC B1635, B1637, B1690 and B1692 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 3

C

2.CHECK SIDE AIRBAG SENSOR RH

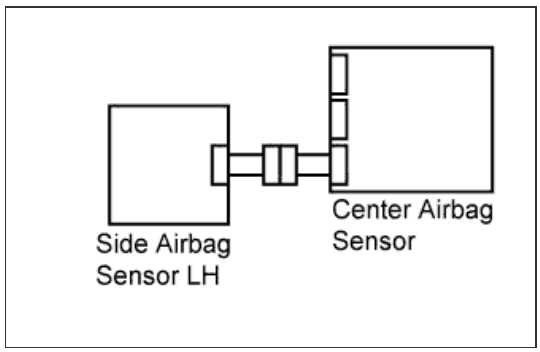

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1695, B1697, B1690 and B1692 are not output	A
DTC B1695 or B1697 is output	B
DTC B1690 or B1692 is output	C

HINT:

Codes other than DTC B1690, B1692, B1695 and B1697 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

3.CHECK REAR AIRBAG SENSOR LH

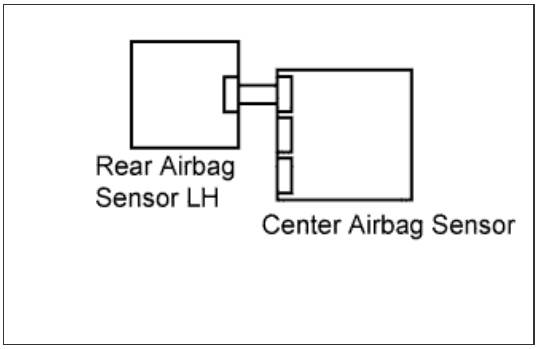

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor LH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1635 and B1637 are not output.

HINT:

Codes other than DTC B1635 and B1637 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

DTC B1840/59 Short in Curtain Shield Squib RH 2nd Step Circuit

DTC B1841/59 Open in Curtain Shield Squib RH 2nd Step Circuit

DTC B1842/59 Short to GND in Curtain Shield Squib RH 2nd Step Circuit

DTC B1843/59 Short to B+ in Curtain Shield Squib RH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1840/59	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH 2nd step circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1841/59	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH 2nd step circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1842/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1843/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

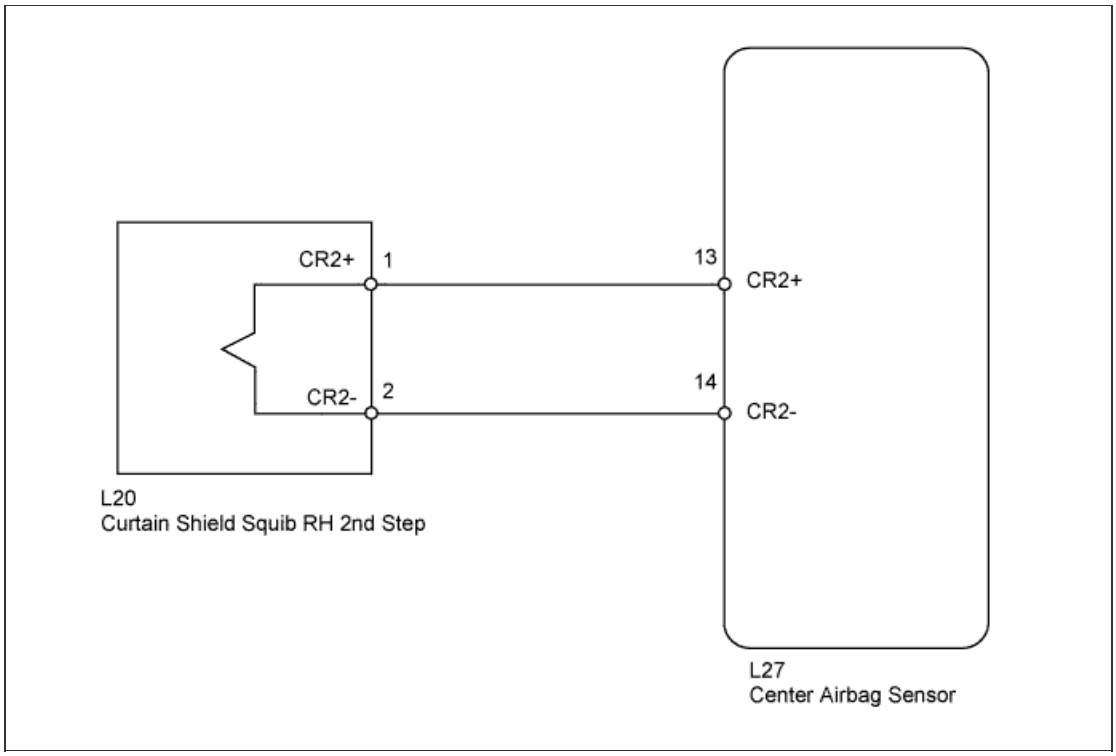

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield squib RH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

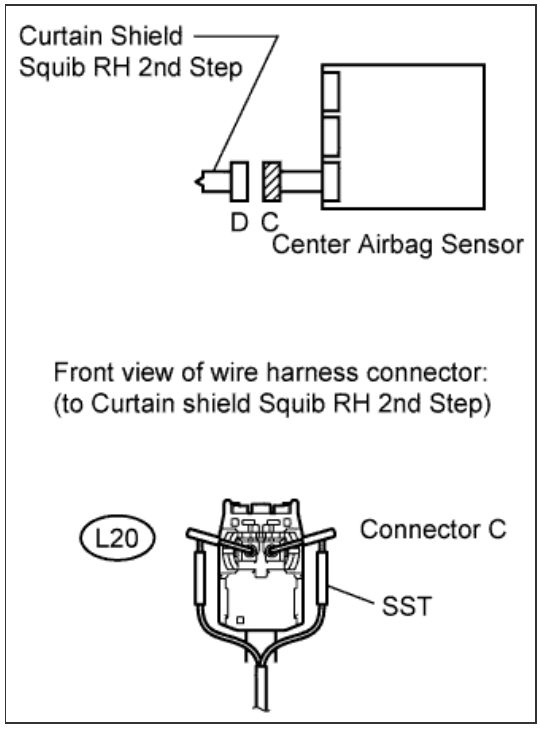

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield squib RH 2nd step side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L20-1 (CR2+) - Body ground	Engine switch on (IG)	Below 1 V
L20-2 (CR2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	1 MΩ or higher
L20-1 (CR2+) - Body ground	Always	1 MΩ or higher
L20-2 (CR2-) -	Always	1 MΩ or higher

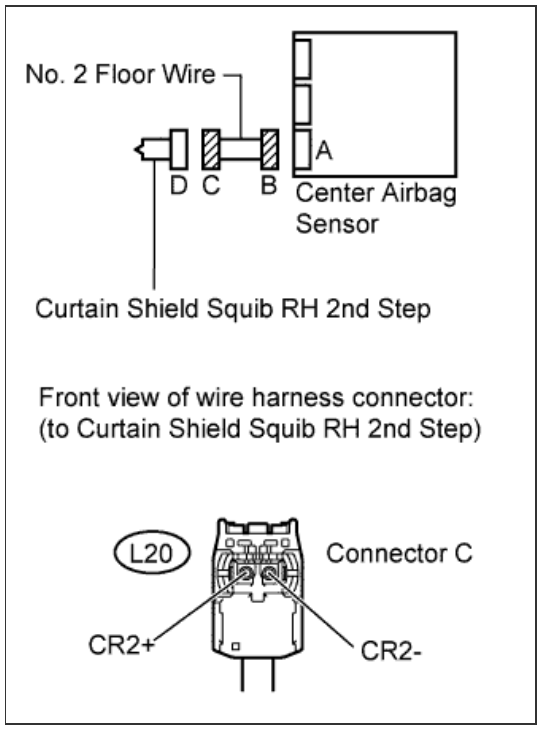

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib RH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

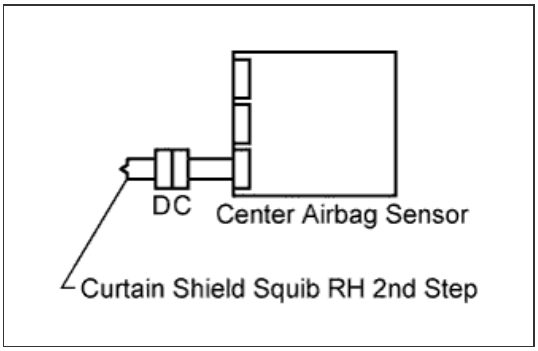

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1635/24 Rear Airbag Sensor LH Circuit Malfunction

DTC B1637/82 Lost Communication with Rear Airbag Sensor LH

DTC B1690/15 Door Side Airbag Sensor RH Malfunction

DTC B1692/81 Lost Communication with Door Side Airbag Sensor RH

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.

- For DTC B1690 and B1635:
  The rear airbag sensor LH and side airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc.
  If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated.
  DTC B1690/15 or B1635/24 is stored when a malfunction is detected in the rear airbag sensor LH or side airbag sensor RH circuit.
- For DTC B1692 and B1637:
  The circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH and curtain shield airbag RH or LH) is composed of the center airbag sensor, side airbag sensor RH or LH, and rear airbag sensor RH or LH.
  The side airbag sensor RH or LH, and rear airbag sensor RH or LH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1692 or B1637 is stored when a malfunction is detected in the circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH, and curtain shield airbag RH or LH).

DTC Code	DTC Detection Condition	Trouble Area
B1635/24	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1637/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH, rear seat side airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1690/15	When one of the following conditions is met: • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly
B1692/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH, rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

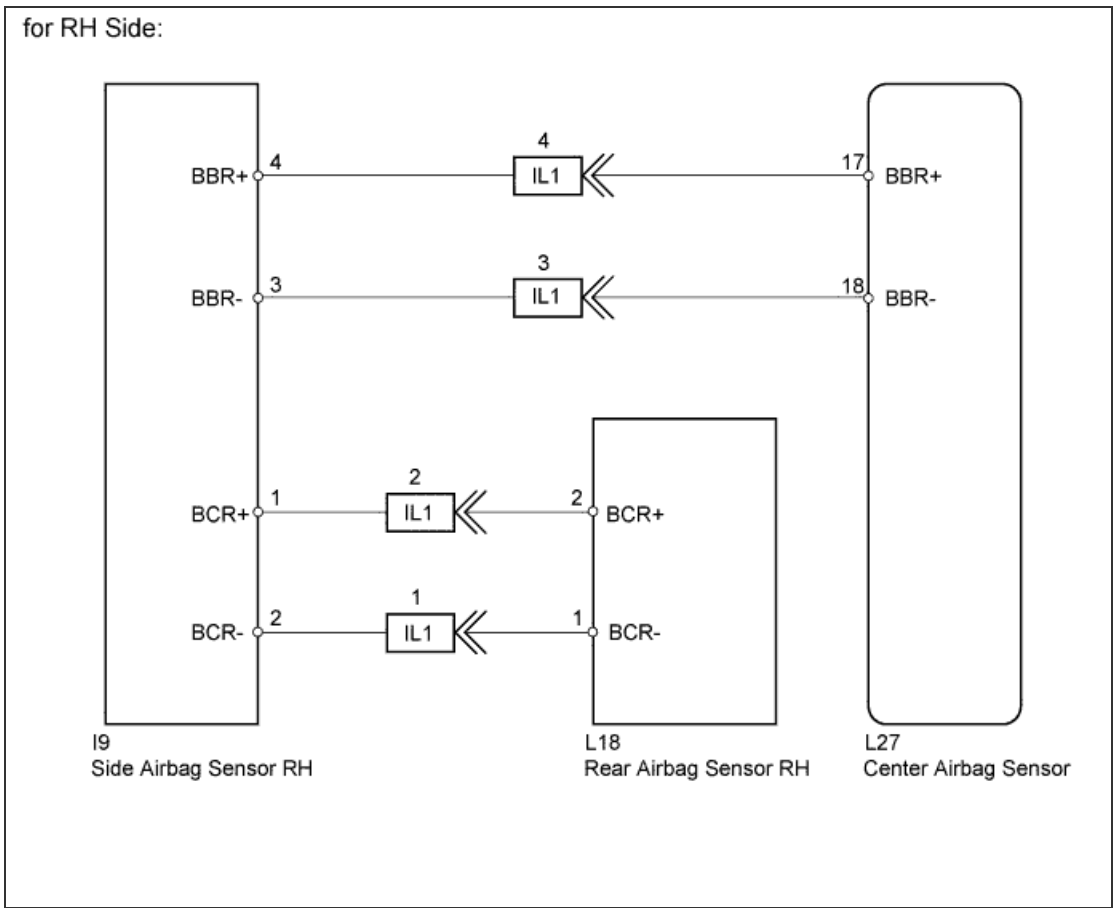

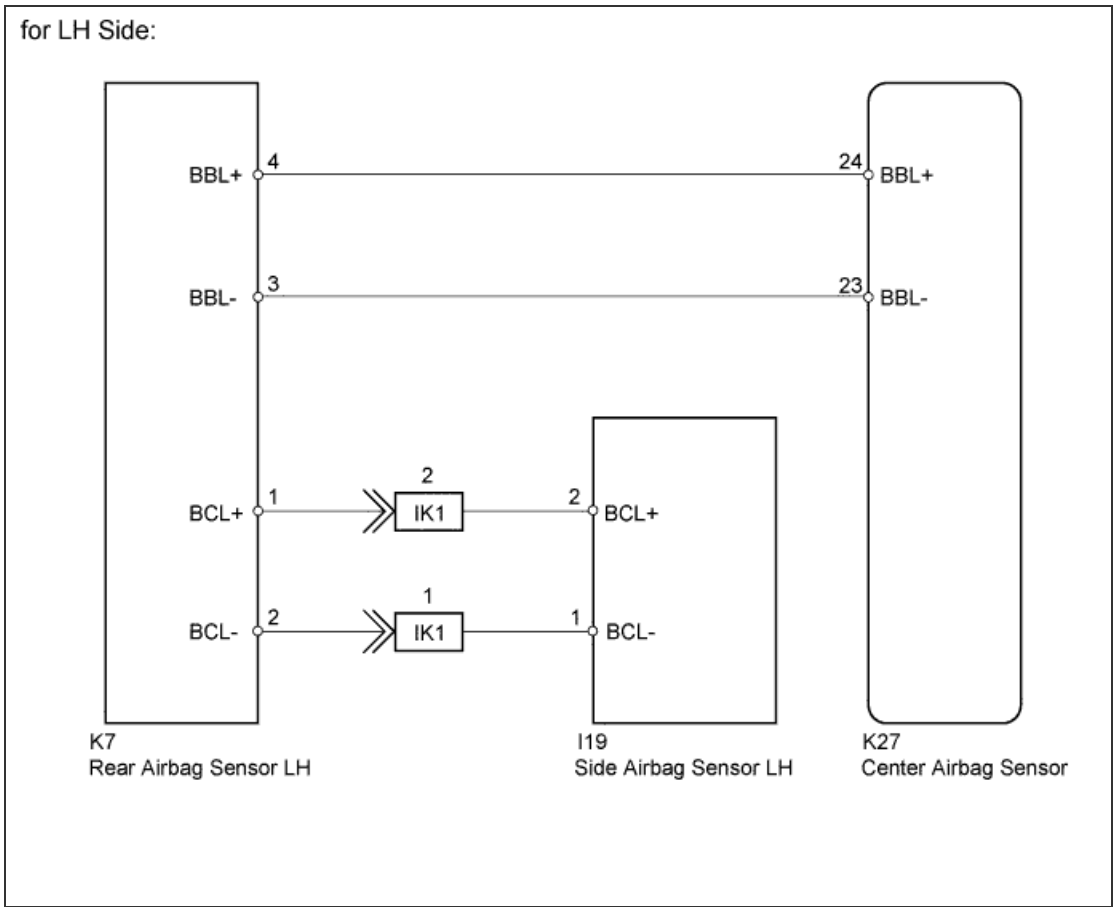

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1635, B1637, B1690 and B1692 are not output	A
DTC B1635 or B1637 is output	B
DTC B1690 or B1692 is output	C

HINT:


Codes other than DTC B1635, B1637, B1690 and B1692 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 3

C

2.CHECK SIDE AIRBAG SENSOR RH

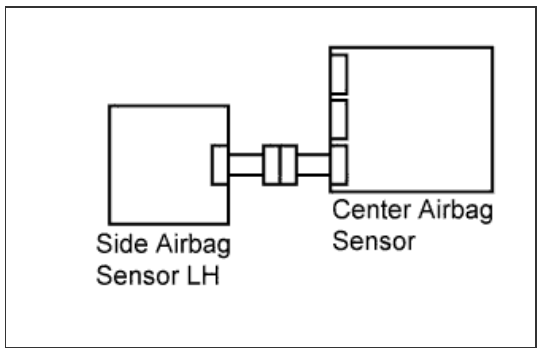

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1695, B1697, B1690 and B1692 are not output	A
DTC B1695 or B1697 is output	B
DTC B1690 or B1692 is output	C

HINT:

Codes other than DTC B1690, B1692, B1695 and B1697 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

3.CHECK REAR AIRBAG SENSOR LH

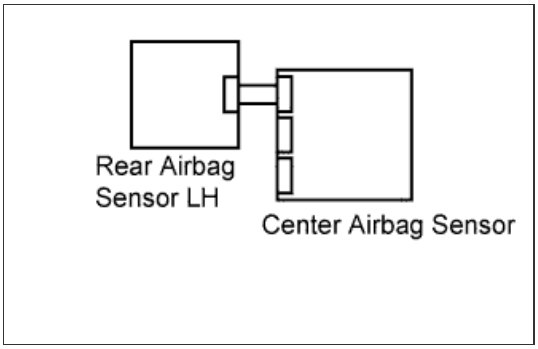

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor LH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1635 and B1637 are not output.

HINT:

Codes other than DTC B1635 and B1637 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

DTC B1840/59 Short in Curtain Shield Squib RH 2nd Step Circuit

DTC B1841/59 Open in Curtain Shield Squib RH 2nd Step Circuit

DTC B1842/59 Short to GND in Curtain Shield Squib RH 2nd Step Circuit

DTC B1843/59 Short to B+ in Curtain Shield Squib RH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib RH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag RH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib RH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1840/59	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib RH 2nd step circuit during the primary check. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1841/59	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib RH 2nd step circuit for 2 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1842/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly
B1843/59	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib RH 2nd step circuit for 0.5 seconds. • A curtain shield squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Curtain shield airbag assembly RH (Curtain shield squib RH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

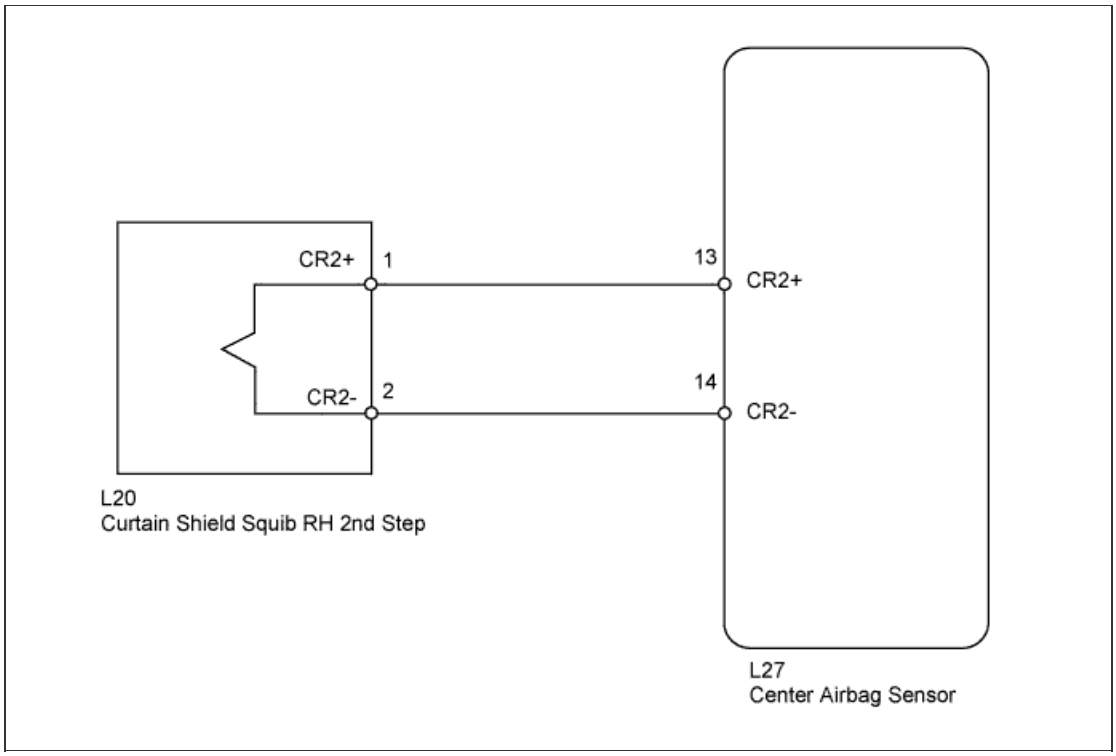

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG RH (CURTAIN SHIELD SQUIB RH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the curtain shield squib RH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the curtain shield airbag RH (curtain shield squib RH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

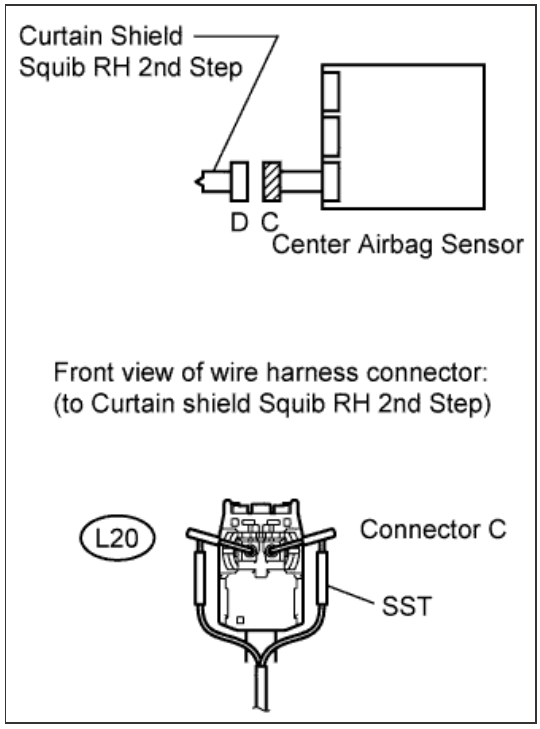

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the curtain shield squib RH 2nd step side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (CURTAIN SHIELD AIRBAG RH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L20-1 (CR2+) - Body ground	Engine switch on (IG)	Below 1 V
L20-2 (CR2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L20-1 (CR2+) - L20-2 (CR2-)	Always	1 MΩ or higher
L20-1 (CR2+) - Body ground	Always	1 MΩ or higher
L20-2 (CR2-) -	Always	1 MΩ or higher

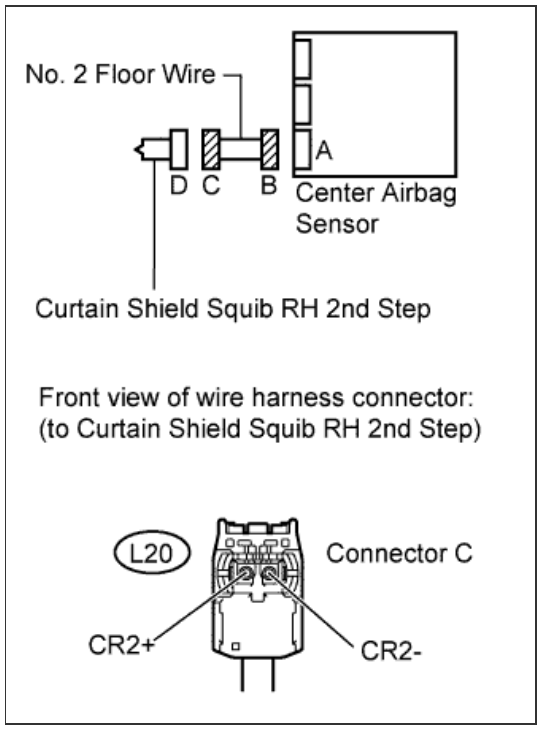

Body ground		

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib RH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

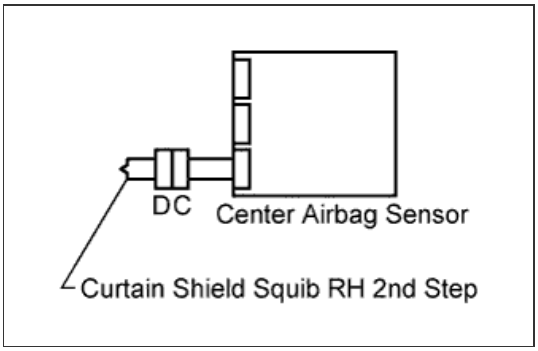

OK:

DTC B1840, B1841, B1842 or B1843 is not output.

HINT:

Codes other than DTC B1840, B1841, B1842 and B1843 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1635/24 Rear Airbag Sensor LH Circuit Malfunction

DTC B1637/82 Lost Communication with Rear Airbag Sensor LH

DTC B1690/15 Door Side Airbag Sensor RH Malfunction

DTC B1692/81 Lost Communication with Door Side Airbag Sensor RH

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.

- For DTC B1690 and B1635:
  The rear airbag sensor LH and side airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc.
  If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated.
  DTC B1690/15 or B1635/24 is stored when a malfunction is detected in the rear airbag sensor LH or side airbag sensor RH circuit.
- For DTC B1692 and B1637:
  The circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH and curtain shield airbag RH or LH) is composed of the center airbag sensor, side airbag sensor RH or LH, and rear airbag sensor RH or LH.
  The side airbag sensor RH or LH, and rear airbag sensor RH or LH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1692 or B1637 is stored when a malfunction is detected in the circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH, and curtain shield airbag RH or LH).

DTC Code	DTC Detection Condition	Trouble Area
B1635/24	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1637/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH, rear seat side airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1690/15	When one of the following conditions is met: • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly
B1692/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH, rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

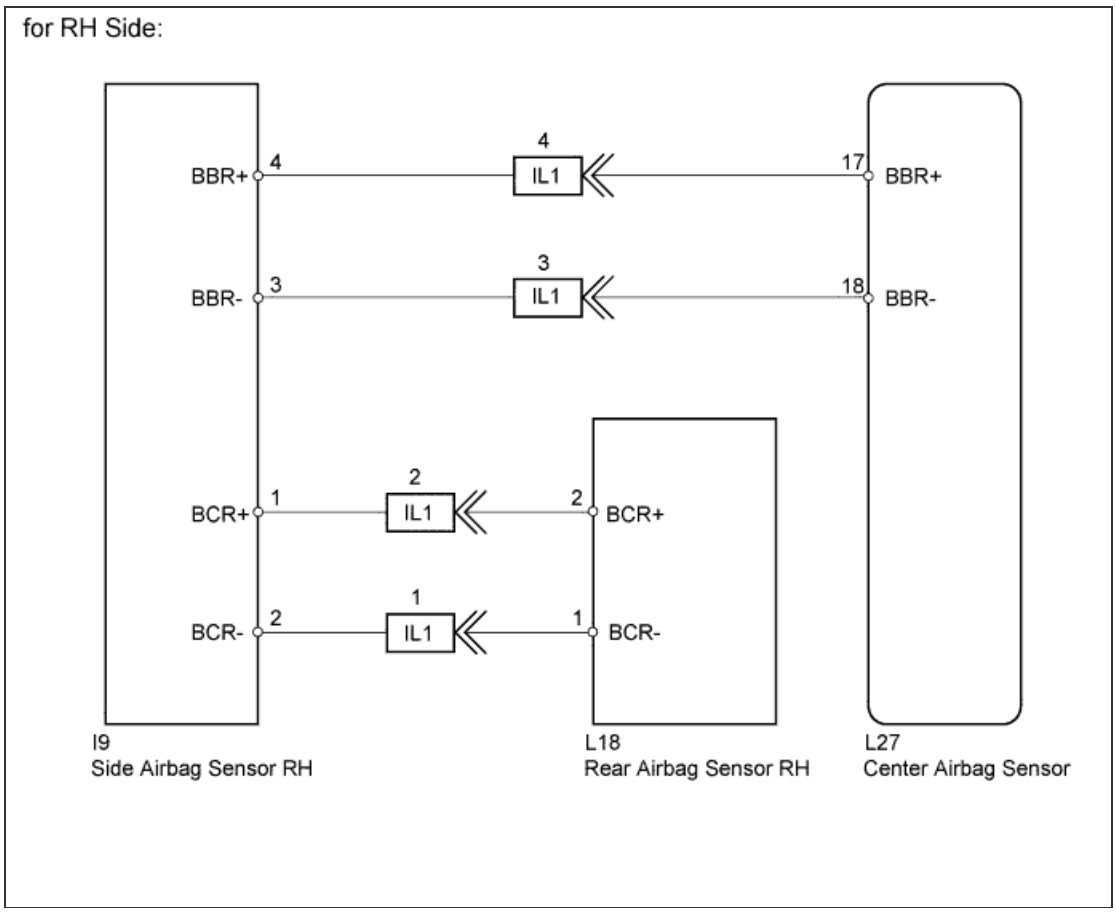

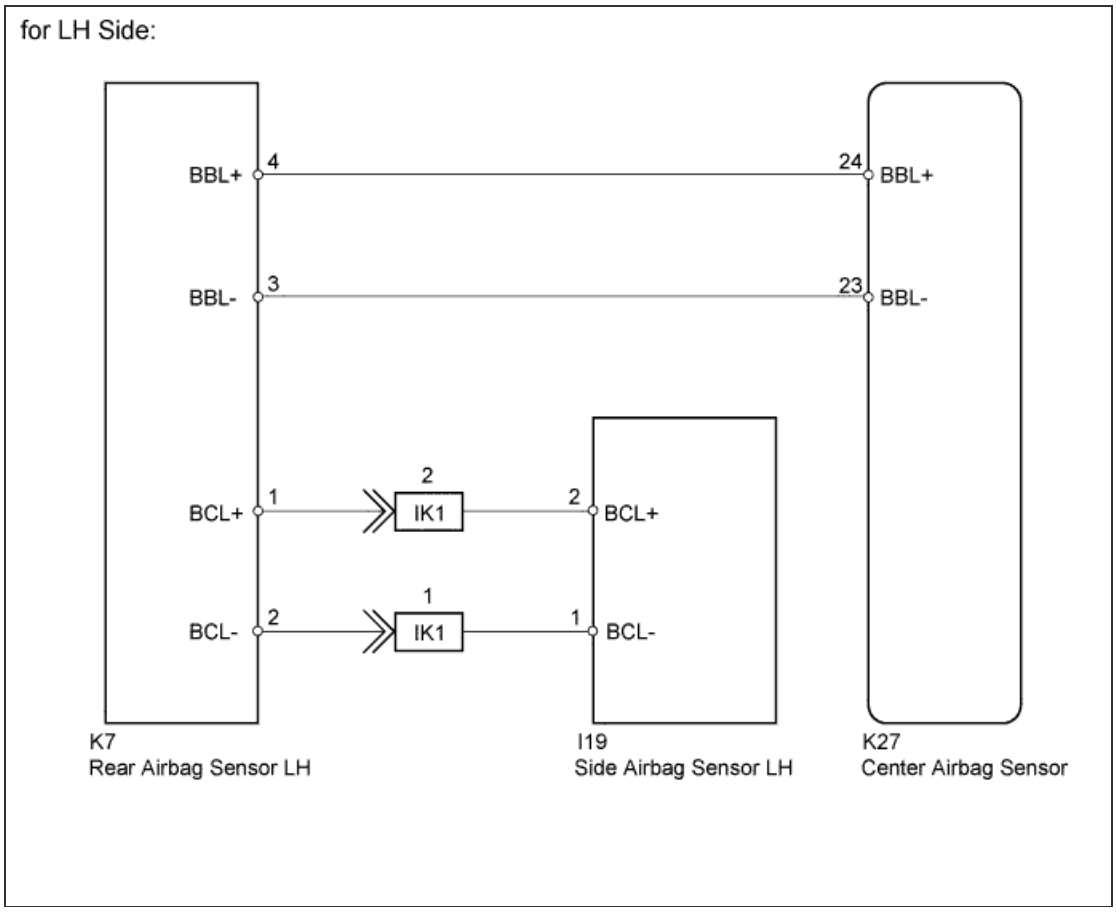

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1635, B1637, B1690 and B1692 are not output	A
DTC B1635 or B1637 is output	B
DTC B1690 or B1692 is output	C

HINT:


Codes other than DTC B1635, B1637, B1690 and B1692 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 3

C

2.CHECK SIDE AIRBAG SENSOR RH

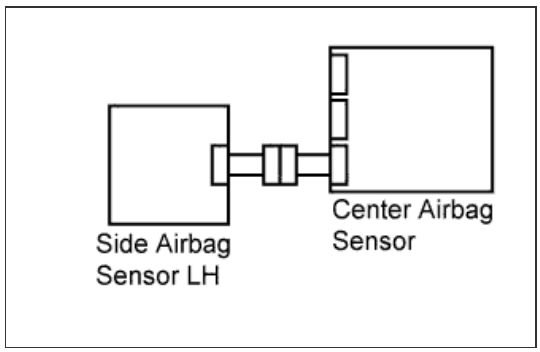

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1695, B1697, B1690 and B1692 are not output	A
DTC B1695 or B1697 is output	B
DTC B1690 or B1692 is output	C

HINT:

Codes other than DTC B1690, B1692, B1695 and B1697 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

3.CHECK REAR AIRBAG SENSOR LH

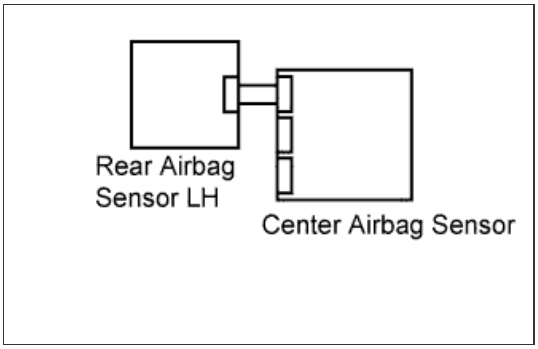

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor LH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1635 and B1637 are not output.

HINT:

Codes other than DTC B1635 and B1637 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

DTC B1845/61 Short in Curtain Shield Squib LH 2nd Step Circuit

DTC B1846/61 Open in Curtain Shield Squib LH 2nd Step Circuit

DTC B1847/61 Short to GND in Curtain Shield Squib LH 2nd Step Circuit

DTC B1848/61 Short to B+ in Curtain Shield Squib LH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1845/61	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH 2nd step circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1846/61	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH 2nd step circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1847/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1848/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

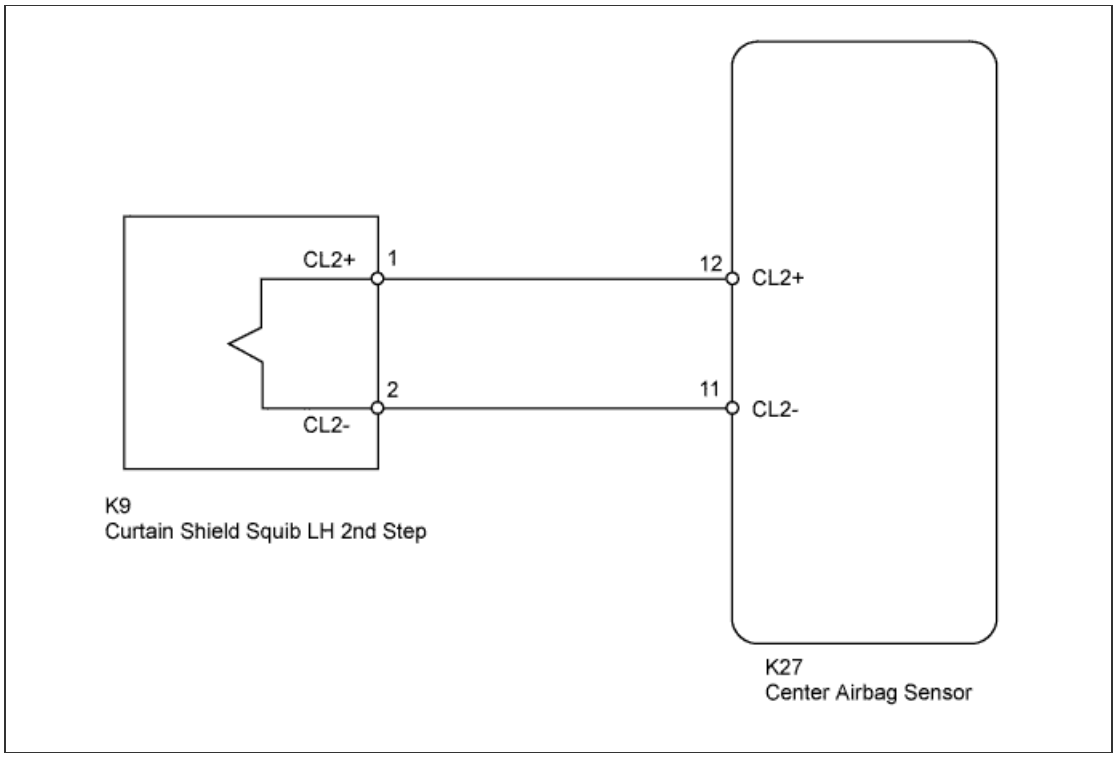

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield squib LH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the curtain shield airbag LH (curtain shield squib LH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

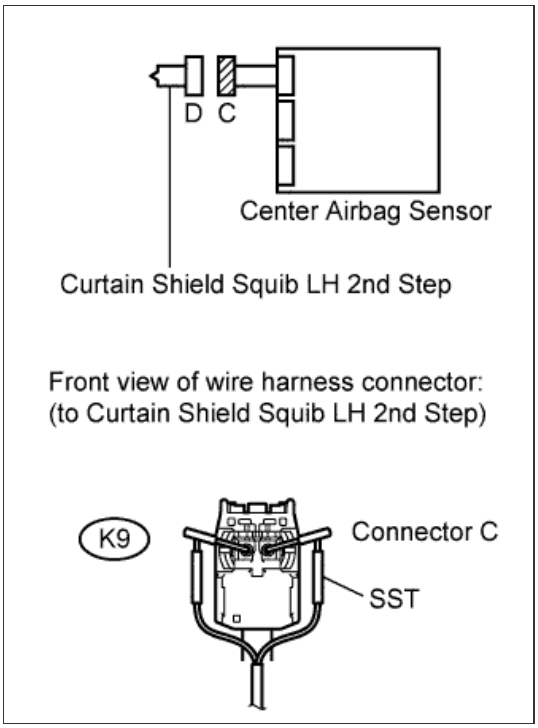

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield squib LH 2nd step side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD SQUIB LH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K9-1 (CL2+) - Body ground	Engine switch on (IG)	Below 1 V
K9-2 (CL2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	1 MΩ or higher
K9-1 (CL2+) - Body ground	Always	1 MΩ or higher
K9-2 (CL2-) - Body	Always	1 MΩ or higher

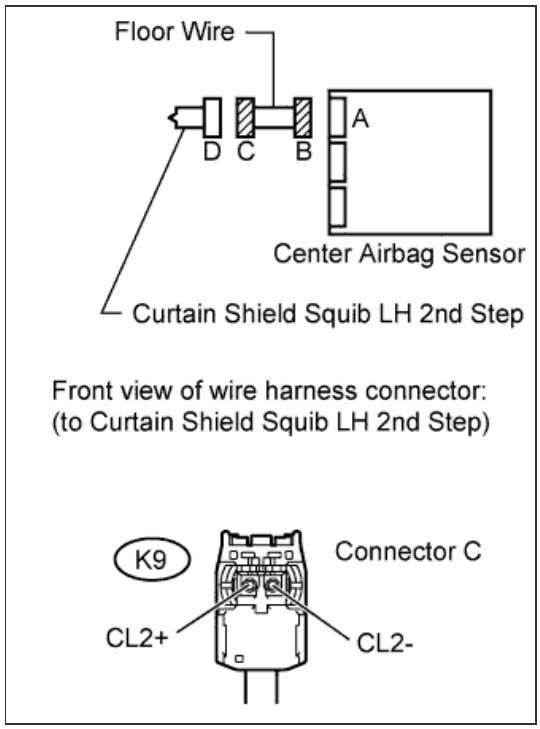

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib LH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

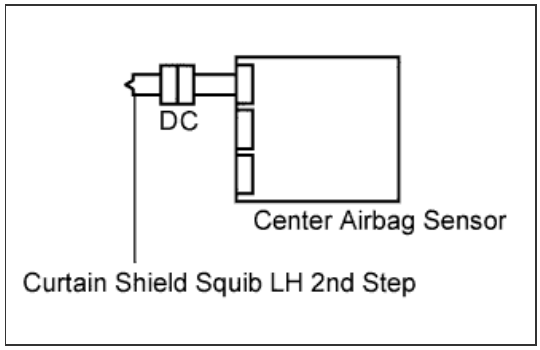

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1635/24 Rear Airbag Sensor LH Circuit Malfunction

DTC B1637/82 Lost Communication with Rear Airbag Sensor LH

DTC B1690/15 Door Side Airbag Sensor RH Malfunction

DTC B1692/81 Lost Communication with Door Side Airbag Sensor RH

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.

- For DTC B1690 and B1635:
  The rear airbag sensor LH and side airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc.
  If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated.
  DTC B1690/15 or B1635/24 is stored when a malfunction is detected in the rear airbag sensor LH or side airbag sensor RH circuit.
- For DTC B1692 and B1637:
  The circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH and curtain shield airbag RH or LH) is composed of the center airbag sensor, side airbag sensor RH or LH, and rear airbag sensor RH or LH.
  The side airbag sensor RH or LH, and rear airbag sensor RH or LH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1692 or B1637 is stored when a malfunction is detected in the circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH, and curtain shield airbag RH or LH).

DTC Code	DTC Detection Condition	Trouble Area
B1635/24	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1637/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH, rear seat side airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1690/15	When one of the following conditions is met: • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly
B1692/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH, rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

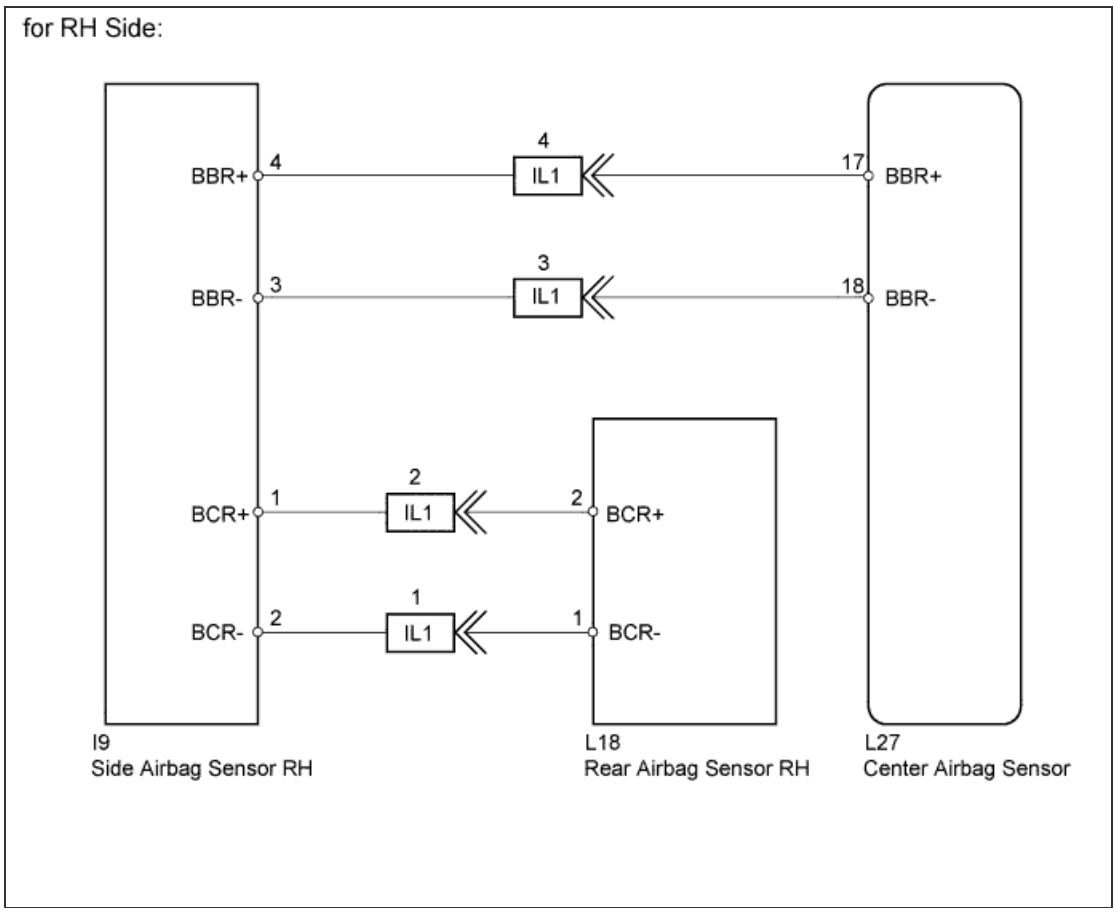

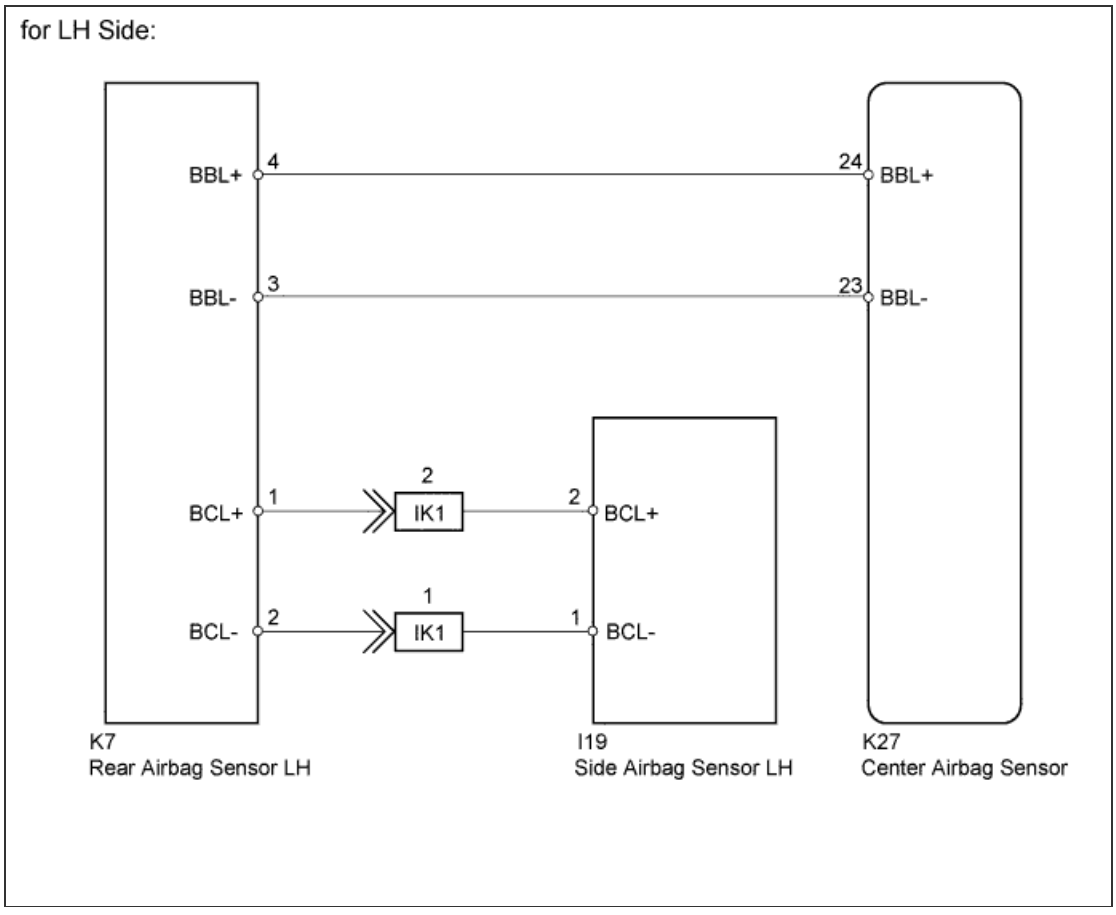

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1635, B1637, B1690 and B1692 are not output	A
DTC B1635 or B1637 is output	B
DTC B1690 or B1692 is output	C

HINT:


Codes other than DTC B1635, B1637, B1690 and B1692 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 3

C

2.CHECK SIDE AIRBAG SENSOR RH

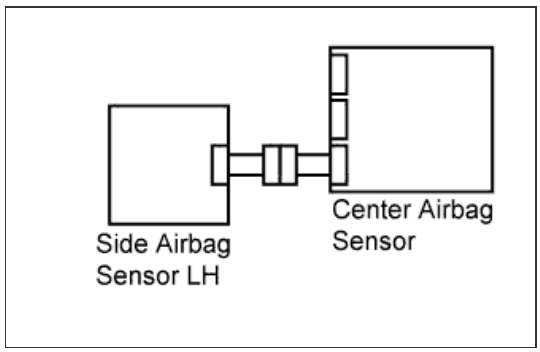

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1695, B1697, B1690 and B1692 are not output	A
DTC B1695 or B1697 is output	B
DTC B1690 or B1692 is output	C

HINT:

Codes other than DTC B1690, B1692, B1695 and B1697 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

3.CHECK REAR AIRBAG SENSOR LH

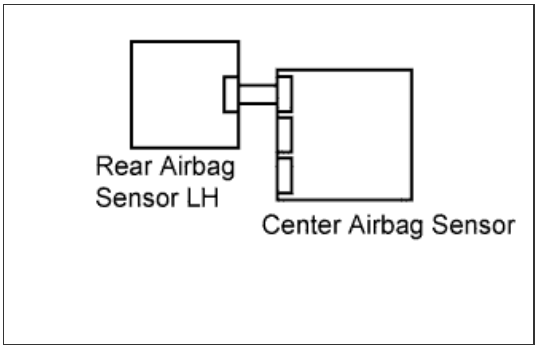

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor LH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1635 and B1637 are not output.

HINT:

Codes other than DTC B1635 and B1637 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

DTC B1845/61 Short in Curtain Shield Squib LH 2nd Step Circuit

DTC B1846/61 Open in Curtain Shield Squib LH 2nd Step Circuit

DTC B1847/61 Short to GND in Curtain Shield Squib LH 2nd Step Circuit

DTC B1848/61 Short to B+ in Curtain Shield Squib LH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1845/61	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH 2nd step circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1846/61	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH 2nd step circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1847/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1848/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

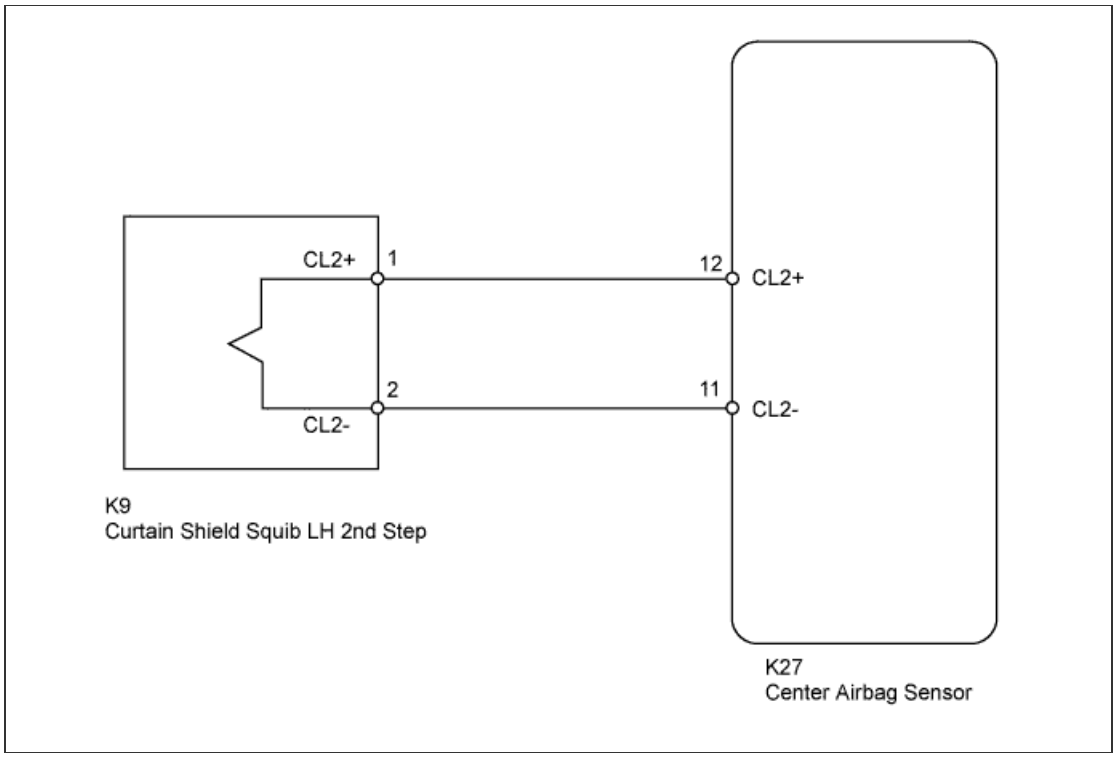

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield squib LH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the curtain shield airbag LH (curtain shield squib LH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

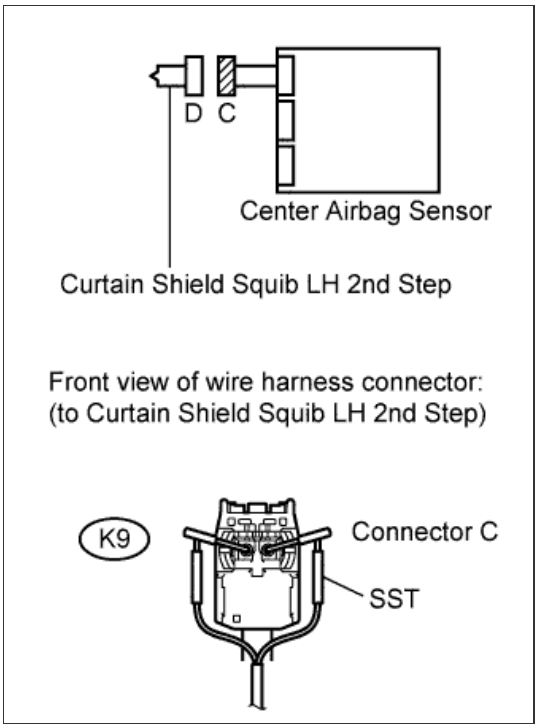

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield squib LH 2nd step side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD SQUIB LH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K9-1 (CL2+) - Body ground	Engine switch on (IG)	Below 1 V
K9-2 (CL2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	1 MΩ or higher
K9-1 (CL2+) - Body ground	Always	1 MΩ or higher
K9-2 (CL2-) - Body	Always	1 MΩ or higher

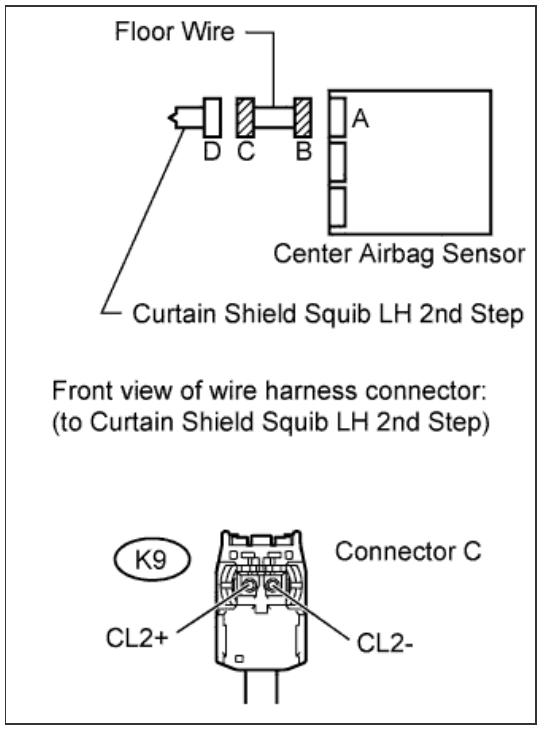

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib LH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

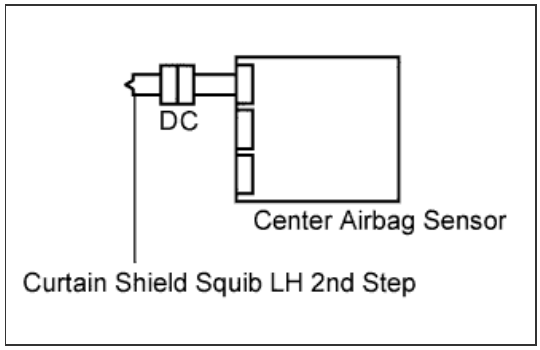

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1635/24 Rear Airbag Sensor LH Circuit Malfunction

DTC B1637/82 Lost Communication with Rear Airbag Sensor LH

DTC B1690/15 Door Side Airbag Sensor RH Malfunction

DTC B1692/81 Lost Communication with Door Side Airbag Sensor RH

for Preparation Click here

DESCRIPTION


HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.

- For DTC B1690 and B1635:
  The rear airbag sensor LH and side airbag sensor RH consists of the safing sensor, the diagnostic circuit, the lateral deceleration sensor, etc.
  If the center airbag sensor receives signals from the lateral deceleration sensor, it determines whether the SRS should be activated.
  DTC B1690/15 or B1635/24 is stored when a malfunction is detected in the rear airbag sensor LH or side airbag sensor RH circuit.
- For DTC B1692 and B1637:
  The circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH and curtain shield airbag RH or LH) is composed of the center airbag sensor, side airbag sensor RH or LH, and rear airbag sensor RH or LH.
  The side airbag sensor RH or LH, and rear airbag sensor RH or LH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1692 or B1637 is stored when a malfunction is detected in the circuit for the side collision sensor RH or LH (to determine deployment of the front seat airbag RH or LH, rear seat side airbag RH or LH, and curtain shield airbag RH or LH).

DTC Code	DTC Detection Condition	Trouble Area
B1635/24	When one of the following conditions is met: • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1637/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH, rear seat side airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Rear airbag sensor LH • Center airbag sensor assembly
B1690/15	When one of the following conditions is met: • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly
B1692/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH, rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Side airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

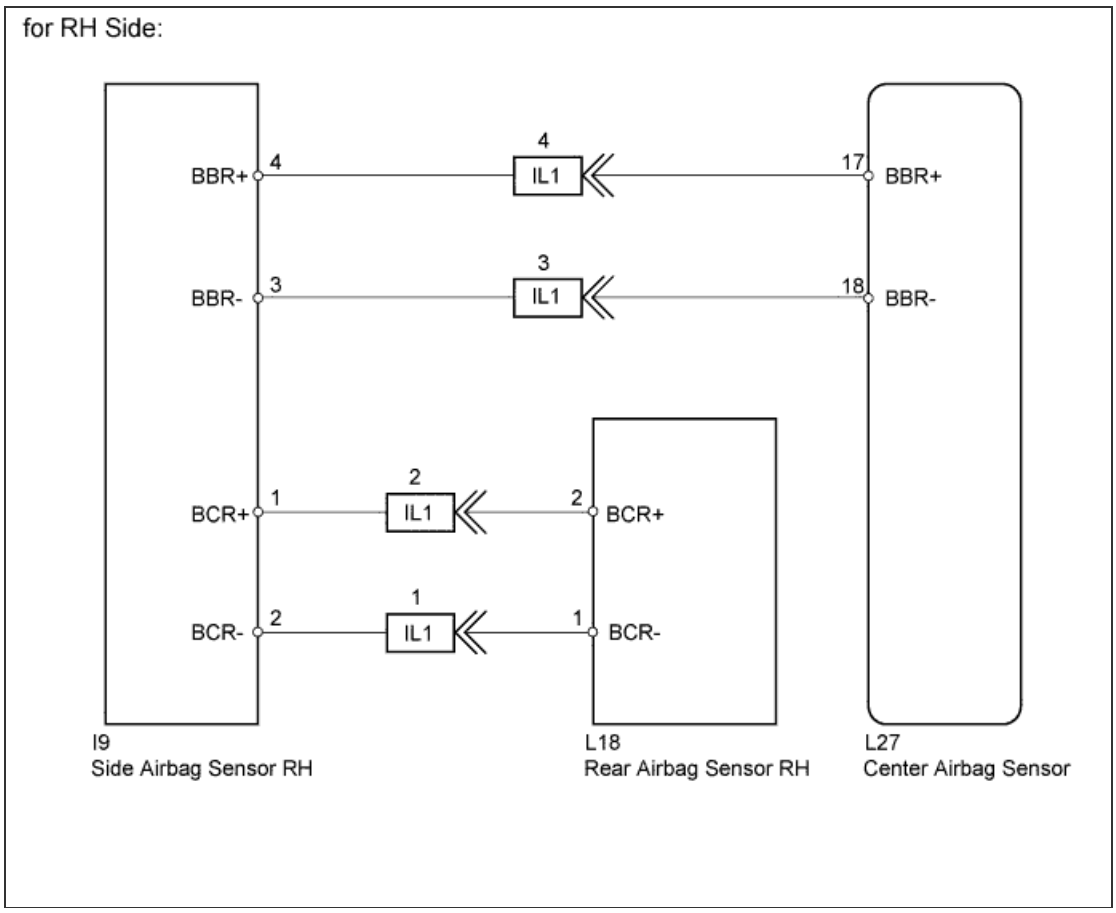

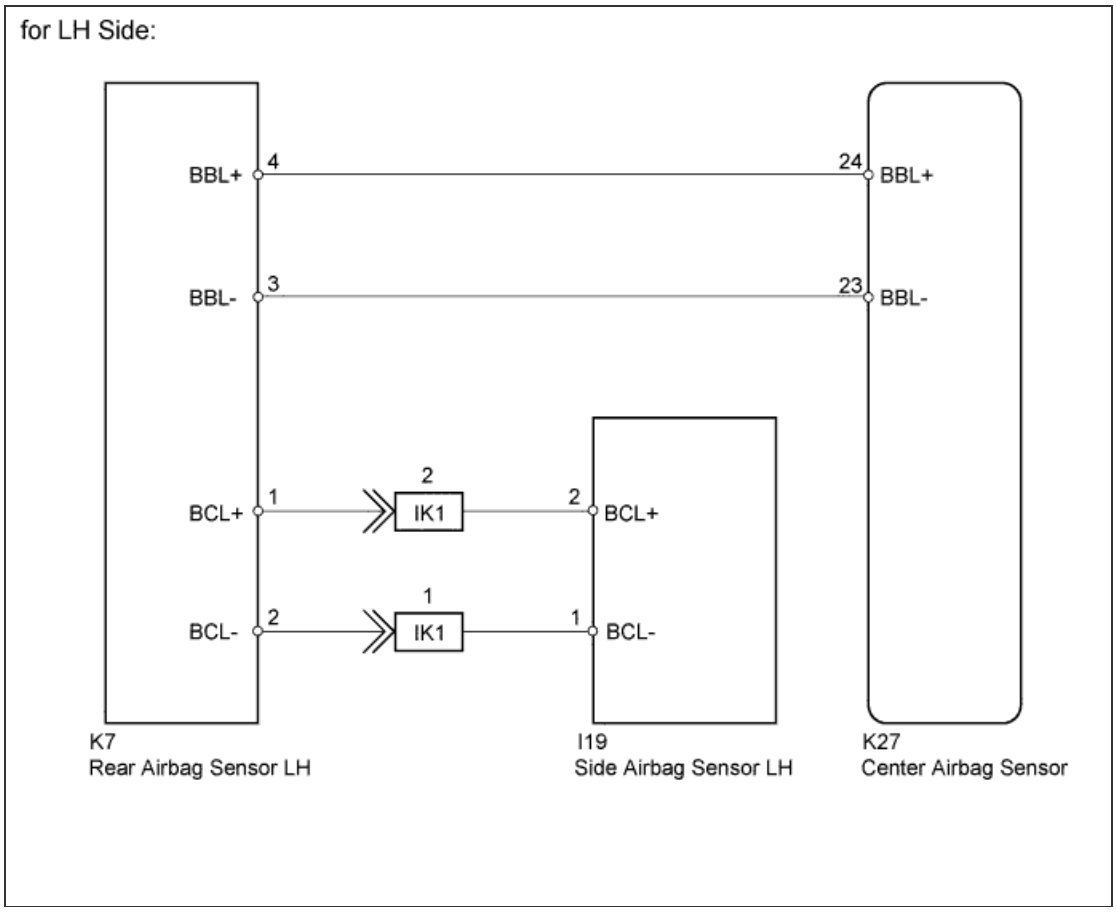

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs stored in the memory (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1635, B1637, B1690 and B1692 are not output	A
DTC B1635 or B1637 is output	B
DTC B1690 or B1692 is output	C

HINT:


Codes other than DTC B1635, B1637, B1690 and B1692 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 3

C

2.CHECK SIDE AIRBAG SENSOR RH

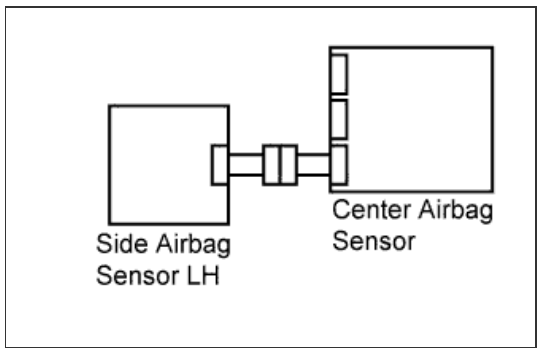

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Interchange the side airbag sensor RH with LH and connect the connectors to them.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1695, B1697, B1690 and B1692 are not output	A
DTC B1695 or B1697 is output	B
DTC B1690 or B1692 is output	C

HINT:

Codes other than DTC B1690, B1692, B1695 and B1697 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

3.CHECK REAR AIRBAG SENSOR LH

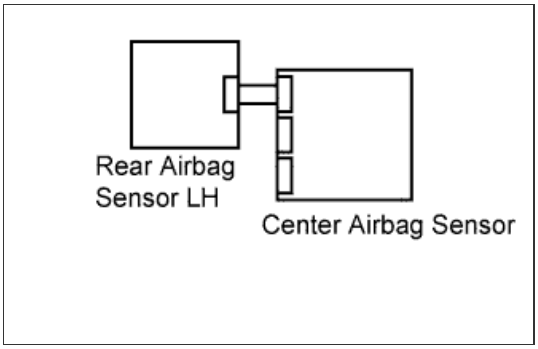

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Temporarily replace the rear airbag sensor LH with a new one.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memory (Click here).

g. Turn the engine switch off.

h. Turn the engine switch on (IG), wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1635 and B1637 are not output.

HINT:

Codes other than DTC B1635 and B1637 may be output at this time, but they are not related to this check.

j. Turn the engine switch off.

k. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

l. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

DTC B1845/61 Short in Curtain Shield Squib LH 2nd Step Circuit

DTC B1846/61 Open in Curtain Shield Squib LH 2nd Step Circuit

DTC B1847/61 Short to GND in Curtain Shield Squib LH 2nd Step Circuit

DTC B1848/61 Short to B+ in Curtain Shield Squib LH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1845/61	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH 2nd step circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1846/61	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH 2nd step circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1847/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1848/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

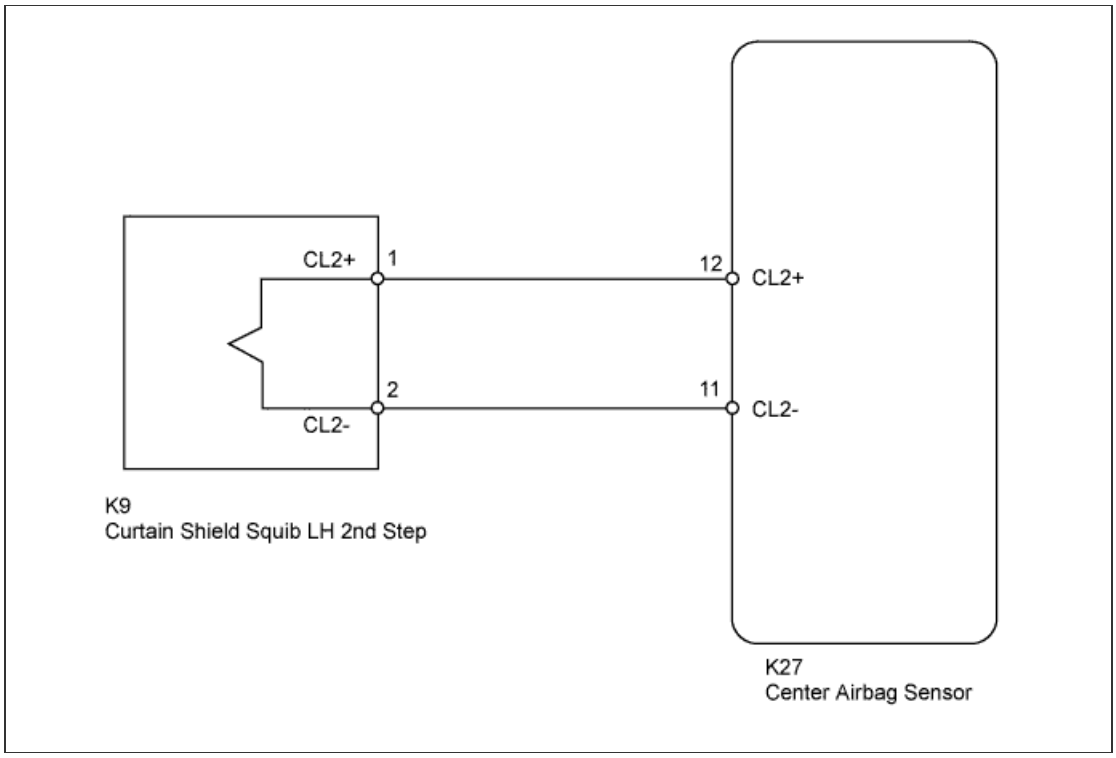

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield squib LH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the curtain shield airbag LH (curtain shield squib LH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

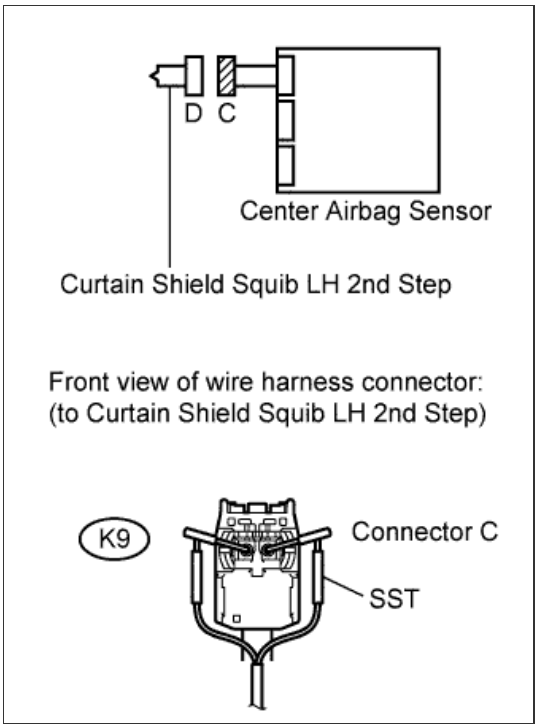

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield squib LH 2nd step side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD SQUIB LH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K9-1 (CL2+) - Body ground	Engine switch on (IG)	Below 1 V
K9-2 (CL2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	1 MΩ or higher
K9-1 (CL2+) - Body ground	Always	1 MΩ or higher
K9-2 (CL2-) - Body	Always	1 MΩ or higher

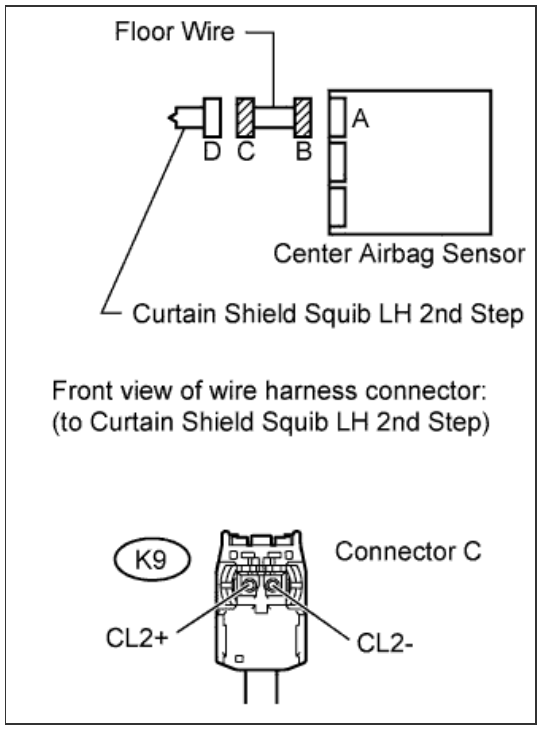

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib LH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

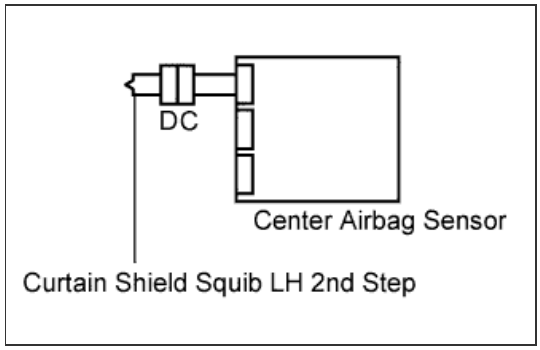

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1638/82 Rear Airbag Sensor Assembly LH Initialization Incomplete

DTC B1643/81 Side Satellite Sensor Bus RH Initialization Incomplete

DTC B1648/82 Side Satellite Sensor Bus LH Initialization Incomplete

DTC B1693/81 Door Side Airbag Sensor RH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1693/81 or B1648/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH and curtain shield airbag LH or RH).
  DTC B1643/81 or B1638/82 is stored when a malfunction is detected in the circuit for the rear collision sensor LH or RH (to determine deployment of the rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1638/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor LH (to determine deployment of the rear side seat airbag LH and curtain shield airbag LH) for 2 seconds. • A rear airbag sensor LH malfunction. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear airbag sensor LH • Side airbag sensor LH • Center airbag sensor assembly
B1643/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor RH (to determine deployment of the rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A rear airbag sensor RH malfunction. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear airbag sensor RH • Side airbag sensor RH • Center airbag sensor assembly
B1648/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds.	• No. 2 floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1693/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

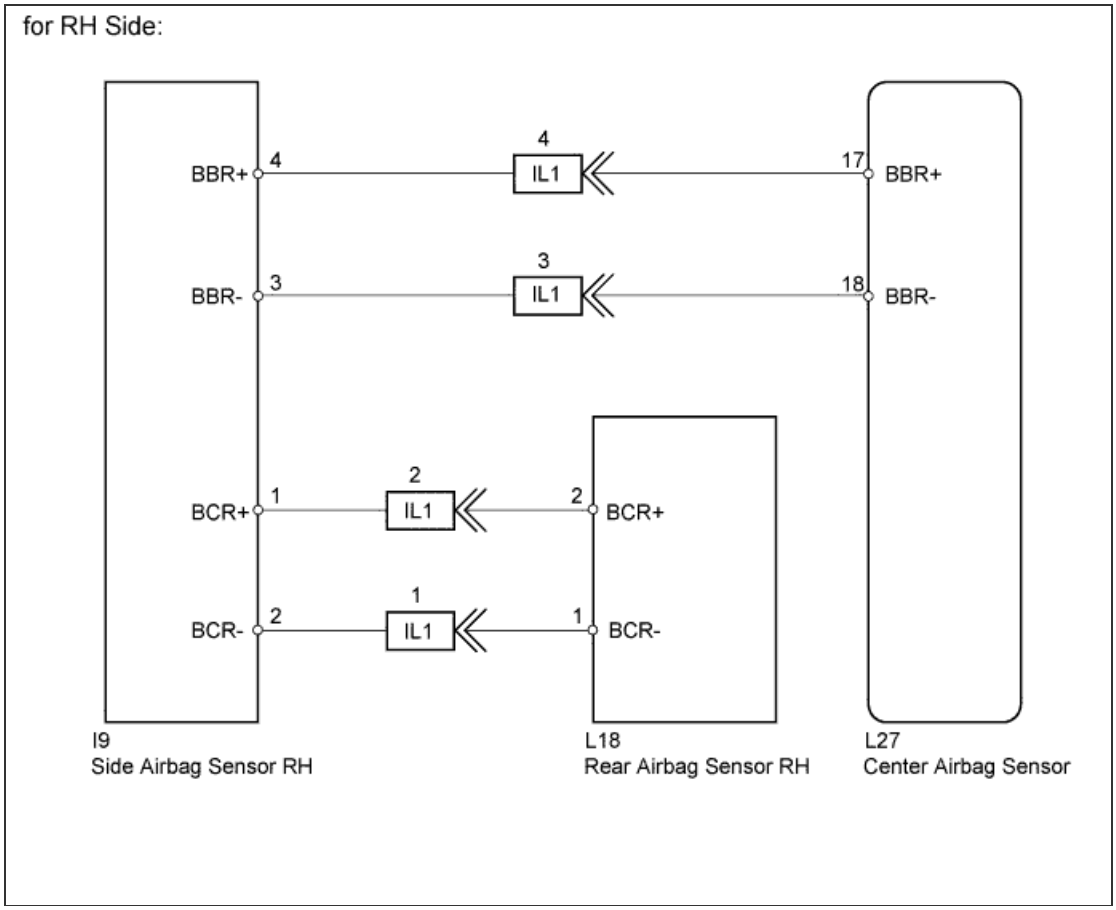

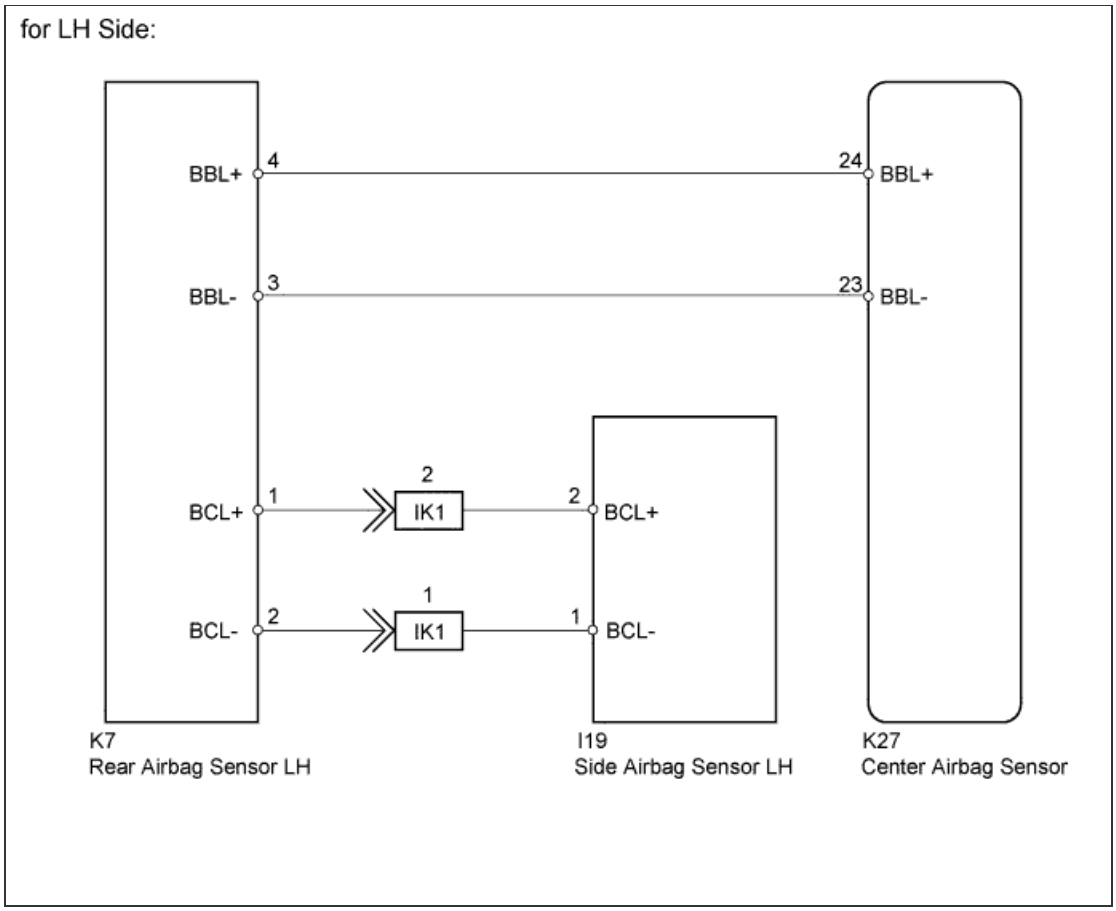

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK PAST DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1637 or B1692 is output	A
DTC B1632 or B1697 is output	B
DTC B1632, B1637, B1692 and B1697 are not output	C

A → GO TO DTC B1637 (Click here)

B → GO TO DTC B1632 (Click here)

C

2.CHECK FOR DTC

a. Turn the engine switch off.

HINT:

If a communication error occurs, DTCs for both the LH and RH sides will be stored simultaneously. The malfunctioning area can be identified by turning the engine switch off and then on (IG) again.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638, B1643, B1648 and B1693 are not output	A
DTC B1638 or B1648 is output	B
DTC B1643 or B1693 is output	C

HINT:

Codes other than DTC B1638, B1643,B1648 and B1693 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 13

C

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

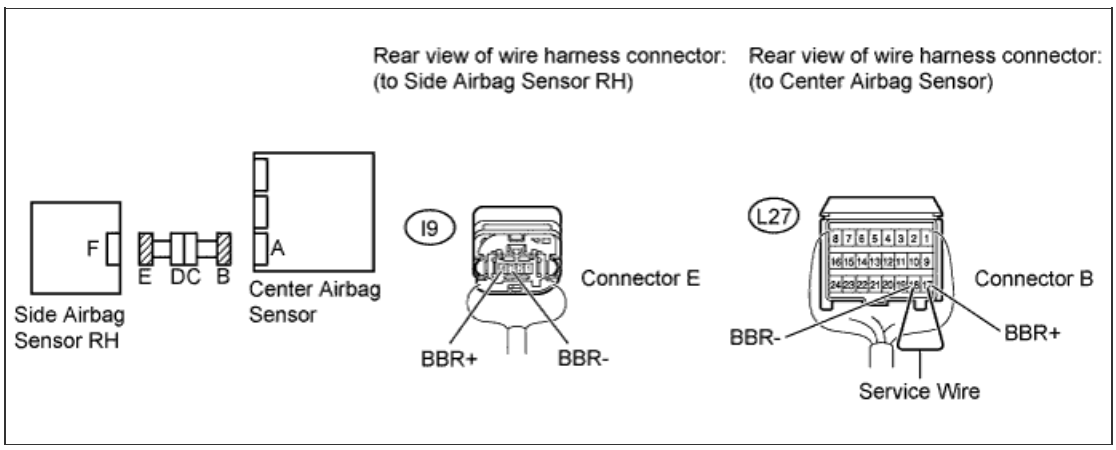

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

6.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

7.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.


b. Check that the connector (on the rear airbag sensor RH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

8.CHECK REAR AIRBAG SENSOR RH CIRCUIT

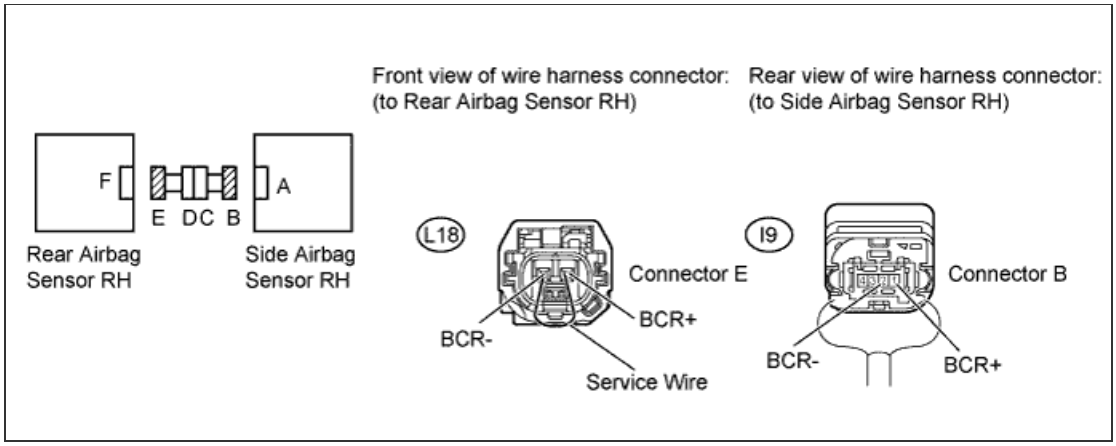

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 12

OK

9.CHECK SIDE AIRBAG SENSOR RH

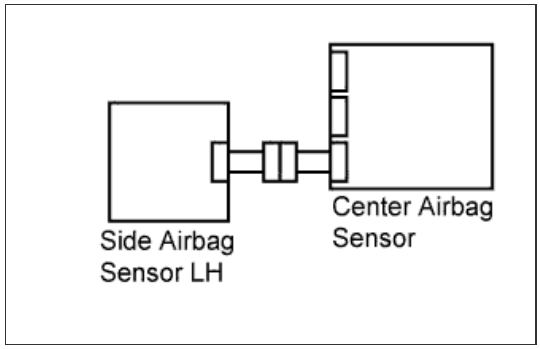

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1643, B1693 and B1698 are not output	A
DTC B1698 is output	B
DTC B1643 and B1693 are output	C

HINT:

Codes other than DTC B1643,B1693 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

10.CHECK REAR AIRBAG SENSOR RH

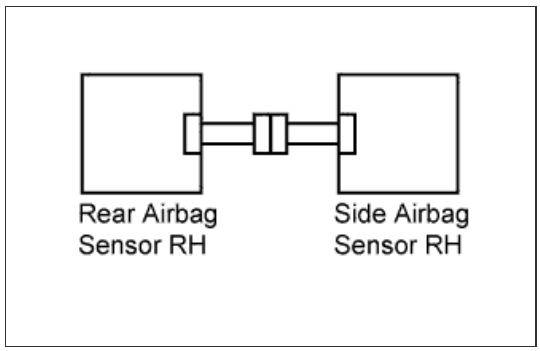

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:

DTC B1643 or B1693 is not output.

HINT:

Codes other than DTC B1643 and B1693 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

11.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

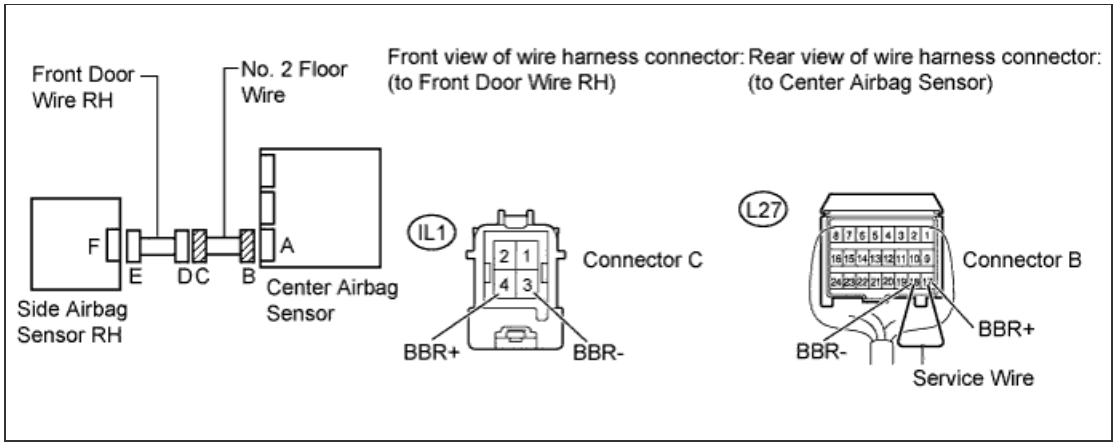

a. Disconnect the No. 2 floor wire from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE RH

12.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

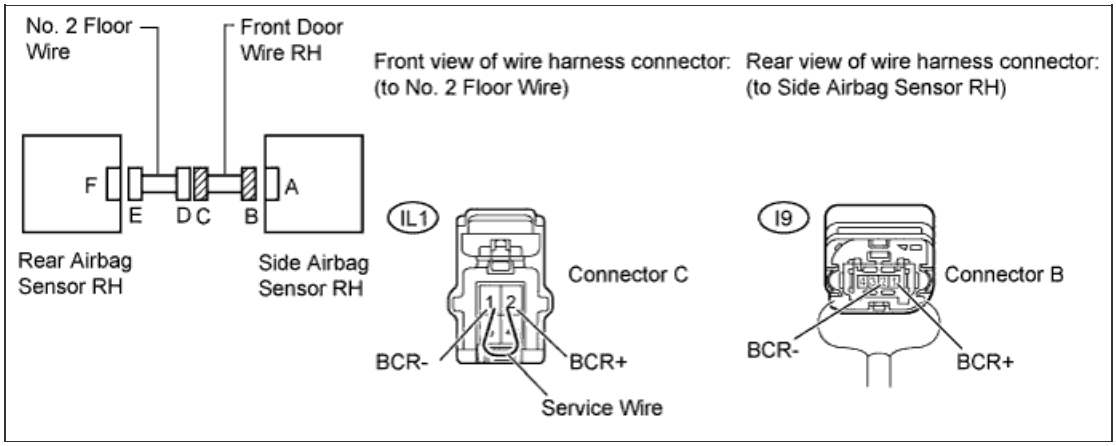

a. Disconnect the front door wire RH from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

13.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

14.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

15.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

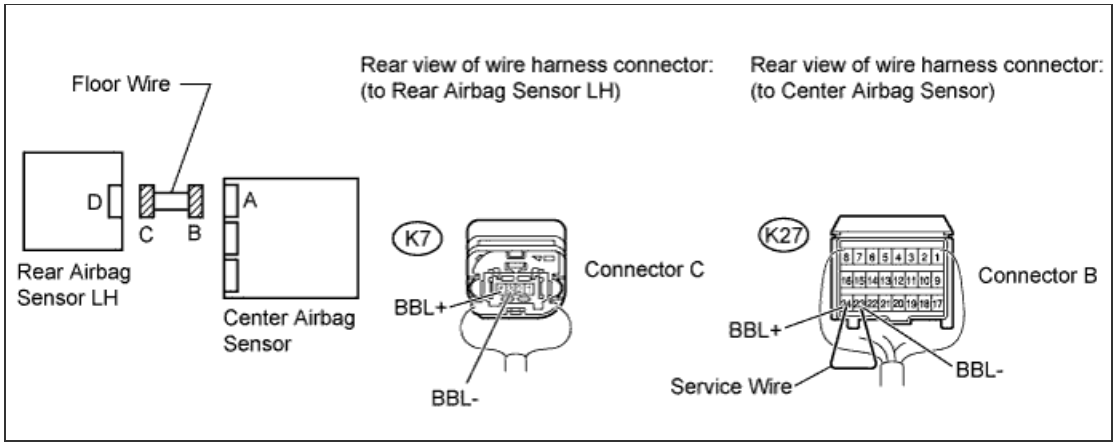

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

		Specified

Tester Connection	Condition	Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

16.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

17.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

18.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

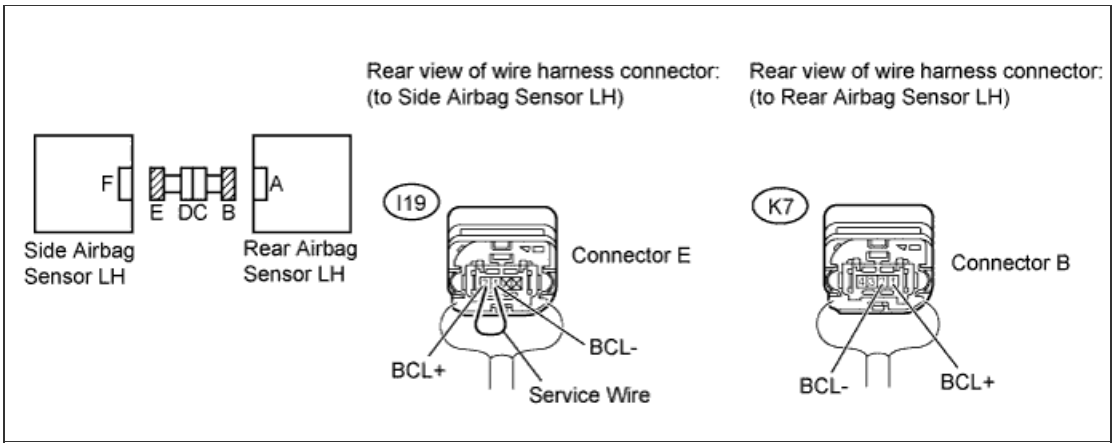

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 21

OK

19.CHECK REAR AIRBAG SENSOR LH

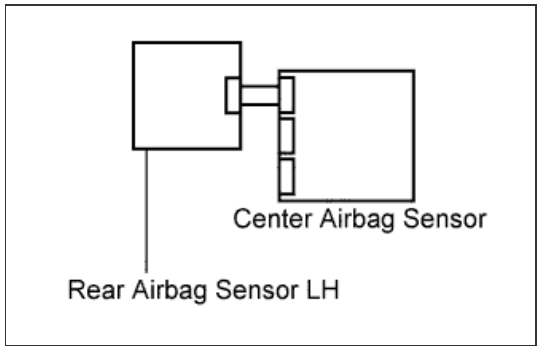

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1638 or B1648 is not output.

HINT:

Codes other than DTC B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 20

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

20.CHECK SIDE AIRBAG SENSOR LH

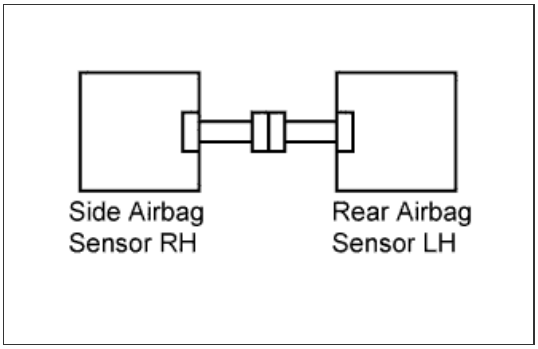

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 90 seconds.

g. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638 or B1648 is output	A
DTC B1633 is output	B
DTC B1633, B1638 and B1648 are not output	C

HINT:

Codes other than DTC B1633, B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

21.CHECK FLOOR WIRE (REAR AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

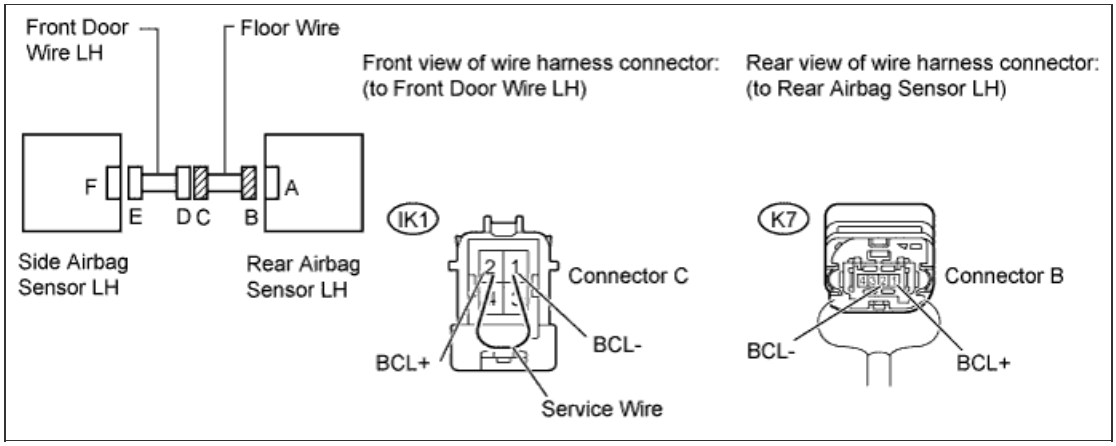

a. Disconnect the floor wire from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1845/61 Short in Curtain Shield Squib LH 2nd Step Circuit

DTC B1846/61 Open in Curtain Shield Squib LH 2nd Step Circuit

DTC B1847/61 Short to GND in Curtain Shield Squib LH 2nd Step Circuit

DTC B1848/61 Short to B+ in Curtain Shield Squib LH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1845/61	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH 2nd step circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1846/61	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH 2nd step circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1847/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1848/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

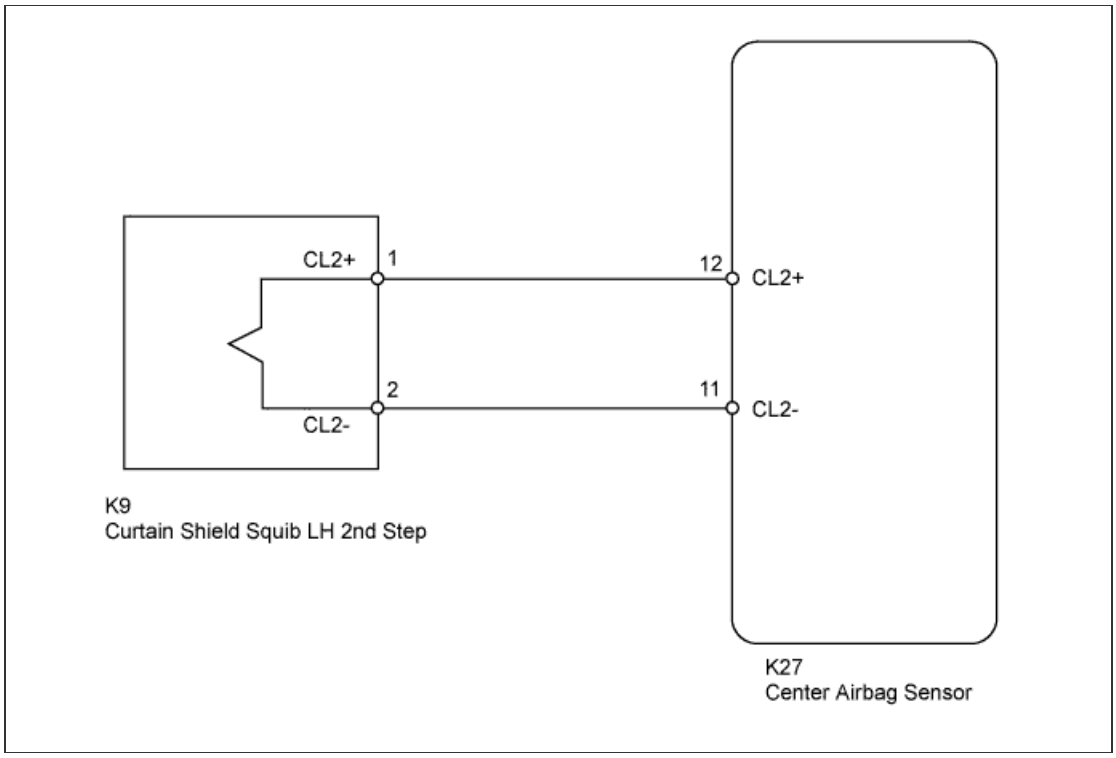

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield squib LH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the curtain shield airbag LH (curtain shield squib LH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

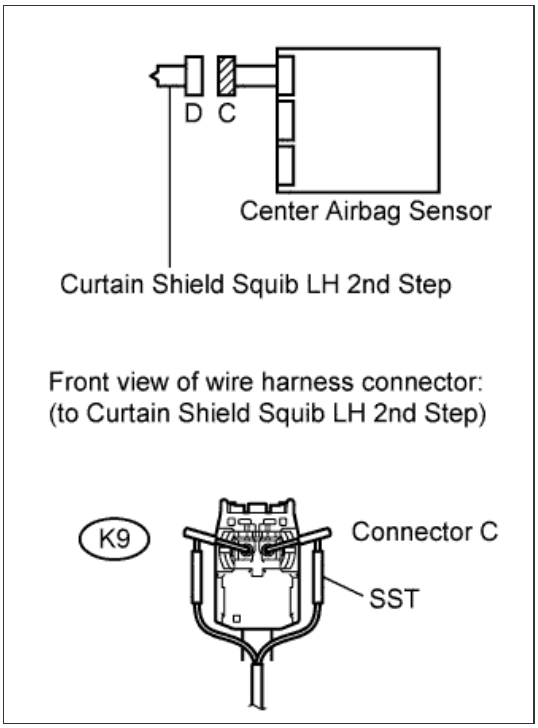

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield squib LH 2nd step side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD SQUIB LH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K9-1 (CL2+) - Body ground	Engine switch on (IG)	Below 1 V
K9-2 (CL2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	1 MΩ or higher
K9-1 (CL2+) - Body ground	Always	1 MΩ or higher
K9-2 (CL2-) - Body	Always	1 MΩ or higher

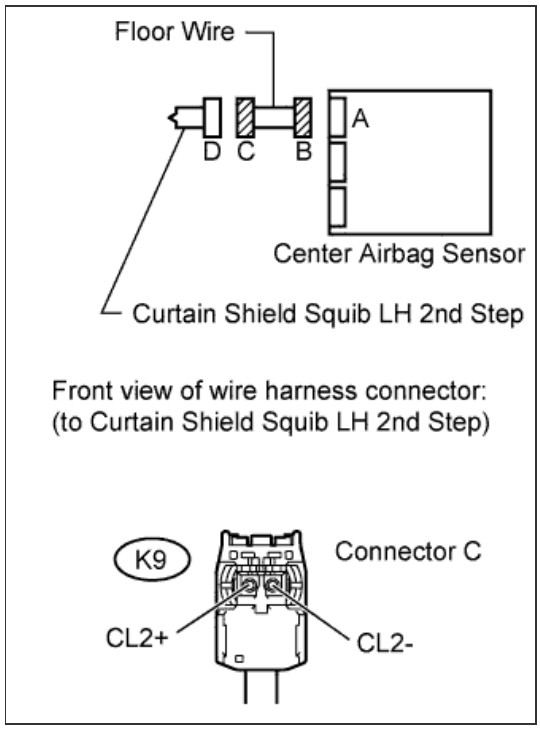

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib LH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

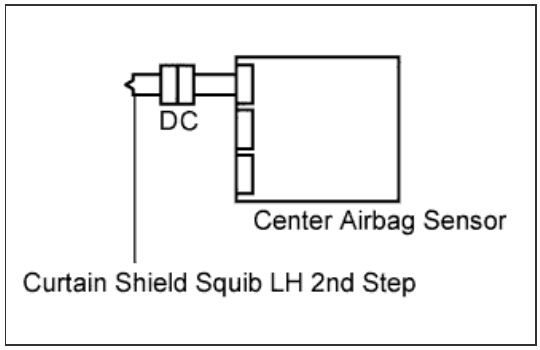

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1638/82 Rear Airbag Sensor Assembly LH Initialization Incomplete

DTC B1643/81 Side Satellite Sensor Bus RH Initialization Incomplete

DTC B1648/82 Side Satellite Sensor Bus LH Initialization Incomplete

DTC B1693/81 Door Side Airbag Sensor RH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1693/81 or B1648/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH and curtain shield airbag LH or RH).
  DTC B1643/81 or B1638/82 is stored when a malfunction is detected in the circuit for the rear collision sensor LH or RH (to determine deployment of the rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1638/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor LH (to determine deployment of the rear side seat airbag LH and curtain shield airbag LH) for 2 seconds. • A rear airbag sensor LH malfunction. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear airbag sensor LH • Side airbag sensor LH • Center airbag sensor assembly
B1643/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor RH (to determine deployment of the rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A rear airbag sensor RH malfunction. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear airbag sensor RH • Side airbag sensor RH • Center airbag sensor assembly
B1648/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds.	• No. 2 floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1693/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

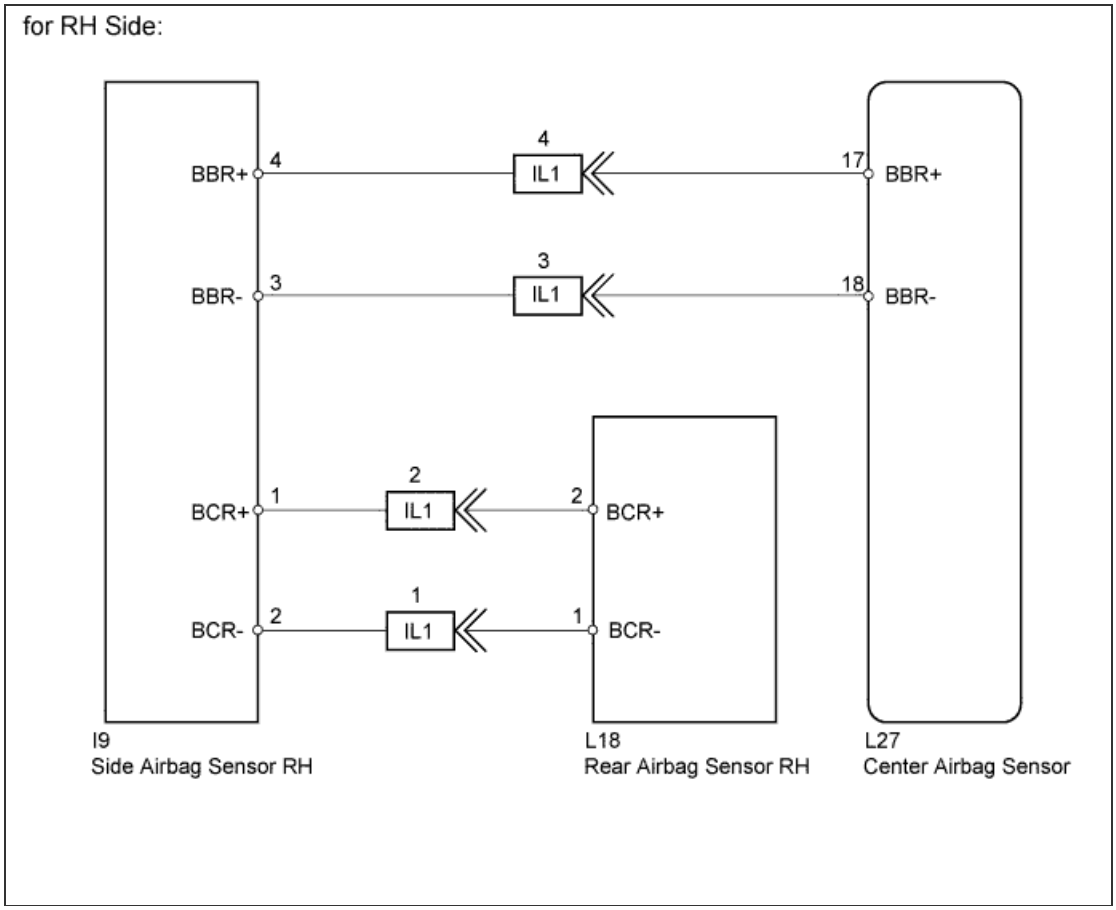

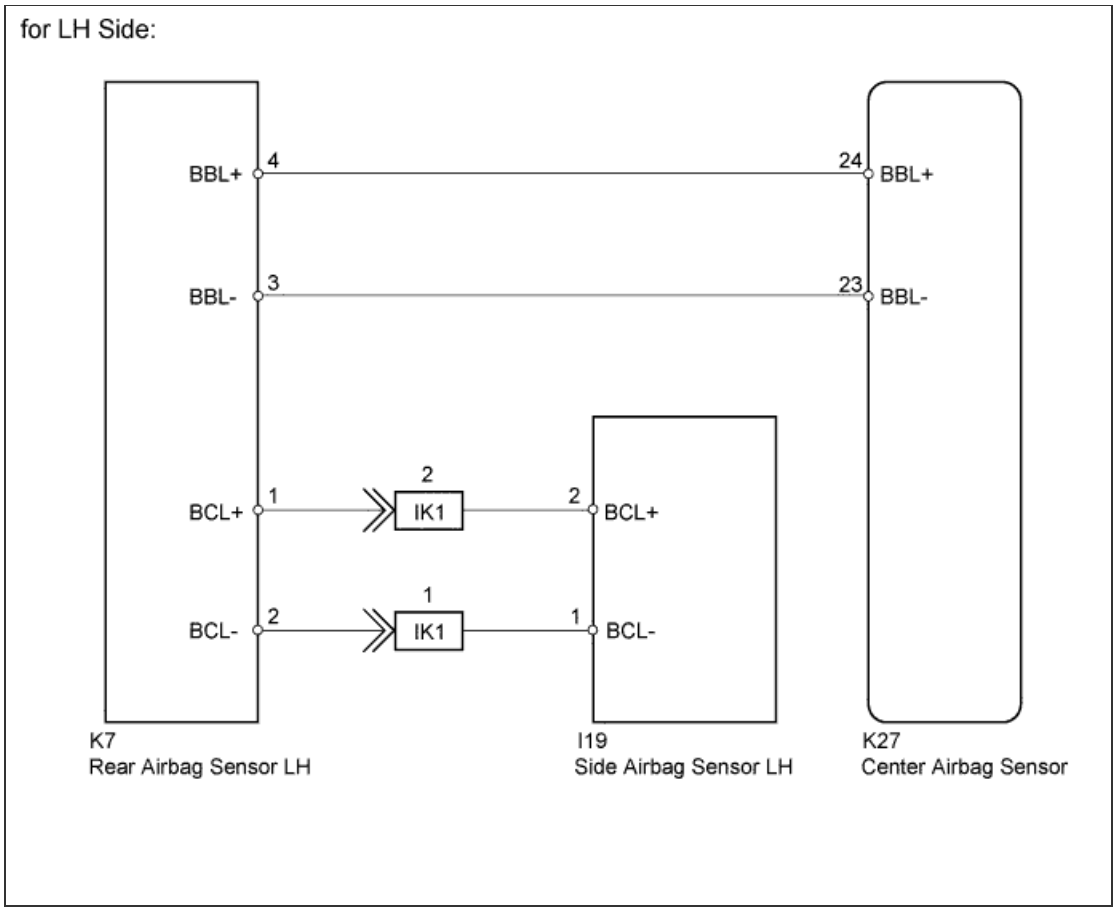

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK PAST DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1637 or B1692 is output	A
DTC B1632 or B1697 is output	B
DTC B1632, B1637, B1692 and B1697 are not output	C

A → GO TO DTC B1637 (Click here)

B → GO TO DTC B1632 (Click here)

C

2.CHECK FOR DTC

a. Turn the engine switch off.

HINT:

If a communication error occurs, DTCs for both the LH and RH sides will be stored simultaneously. The malfunctioning area can be identified by turning the engine switch off and then on (IG) again.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638, B1643, B1648 and B1693 are not output	A
DTC B1638 or B1648 is output	B
DTC B1643 or B1693 is output	C

HINT:

Codes other than DTC B1638, B1643,B1648 and B1693 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 13

C

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

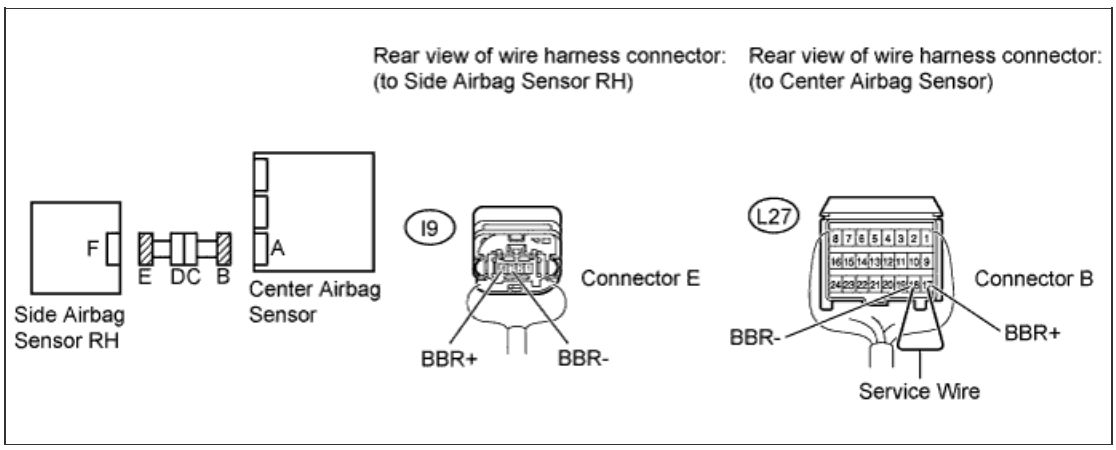

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

6.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

7.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.


b. Check that the connector (on the rear airbag sensor RH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

8.CHECK REAR AIRBAG SENSOR RH CIRCUIT

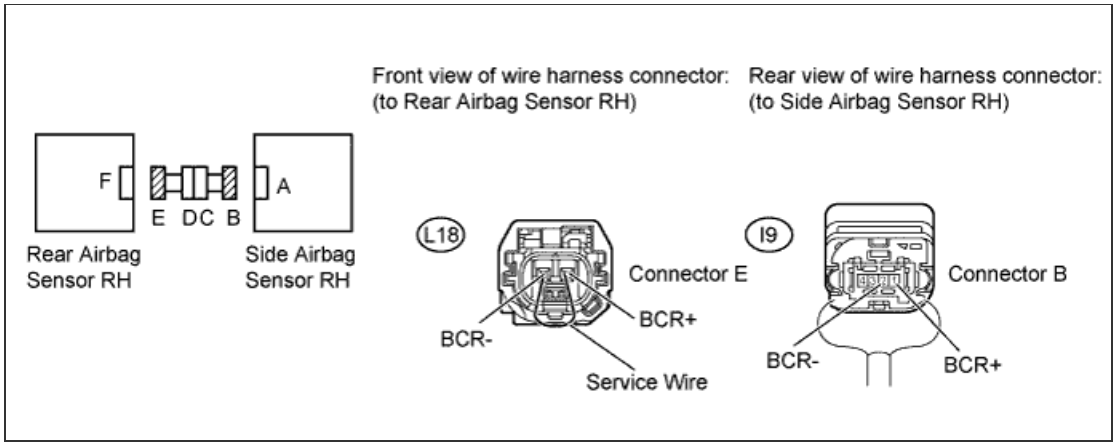

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 12

OK

9.CHECK SIDE AIRBAG SENSOR RH

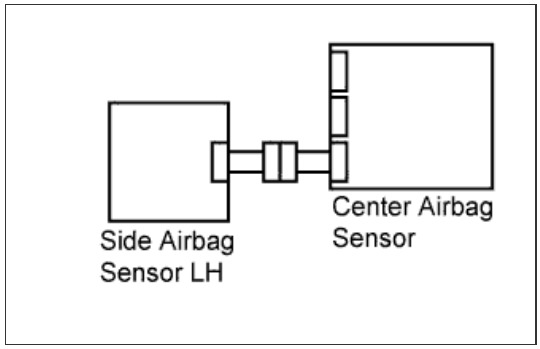

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1643, B1693 and B1698 are not output	A
DTC B1698 is output	B
DTC B1643 and B1693 are output	C

HINT:

Codes other than DTC B1643,B1693 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

10.CHECK REAR AIRBAG SENSOR RH

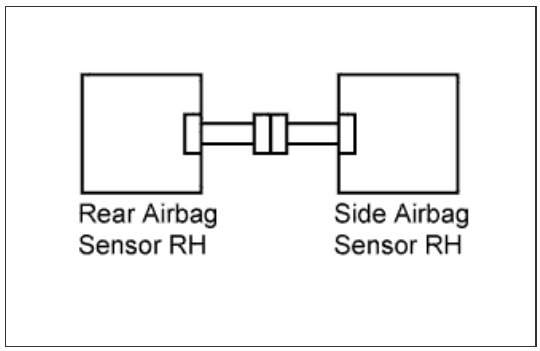

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:

DTC B1643 or B1693 is not output.

HINT:

Codes other than DTC B1643 and B1693 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

11.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

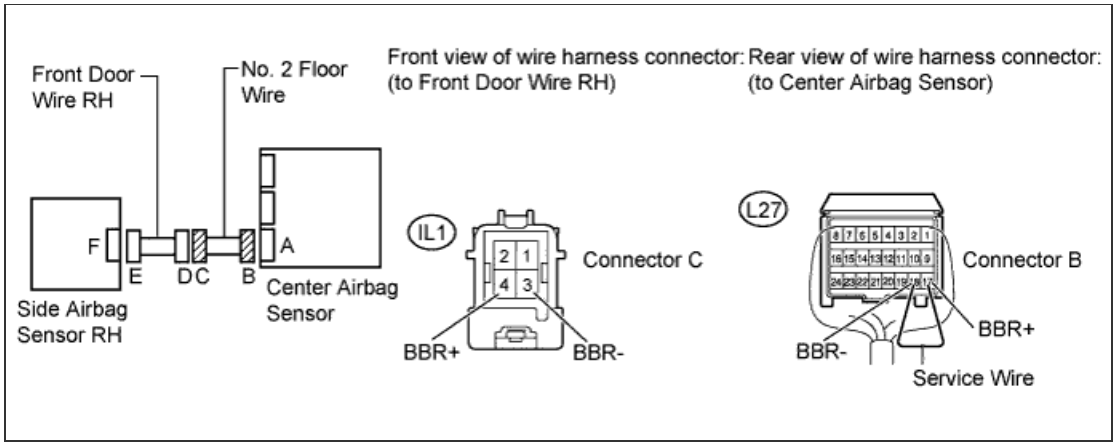

a. Disconnect the No. 2 floor wire from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE RH

12.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

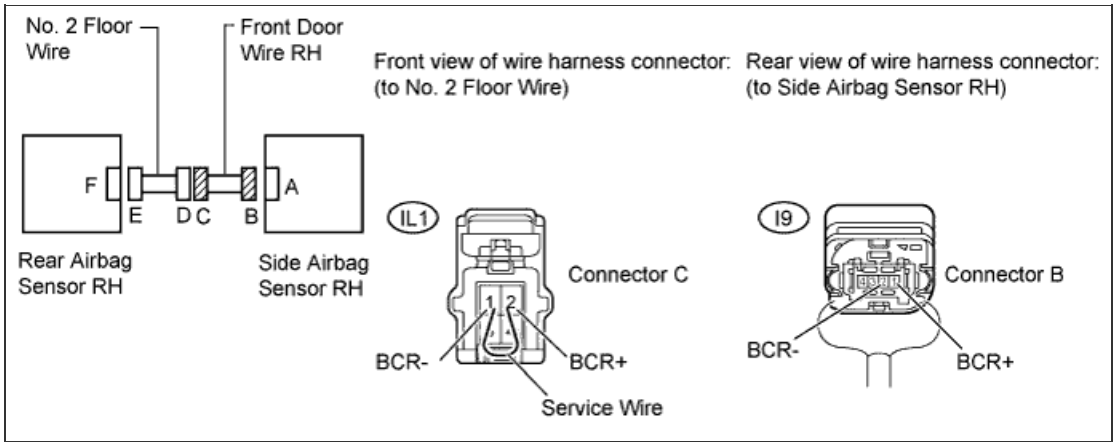

a. Disconnect the front door wire RH from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

13.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

14.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

15.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

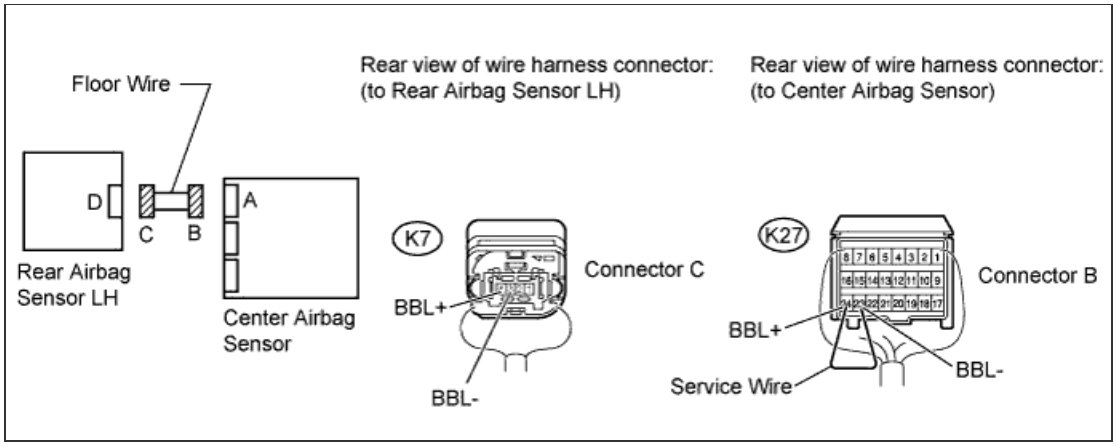

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

		Specified

Tester Connection	Condition	Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

16.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

17.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

18.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

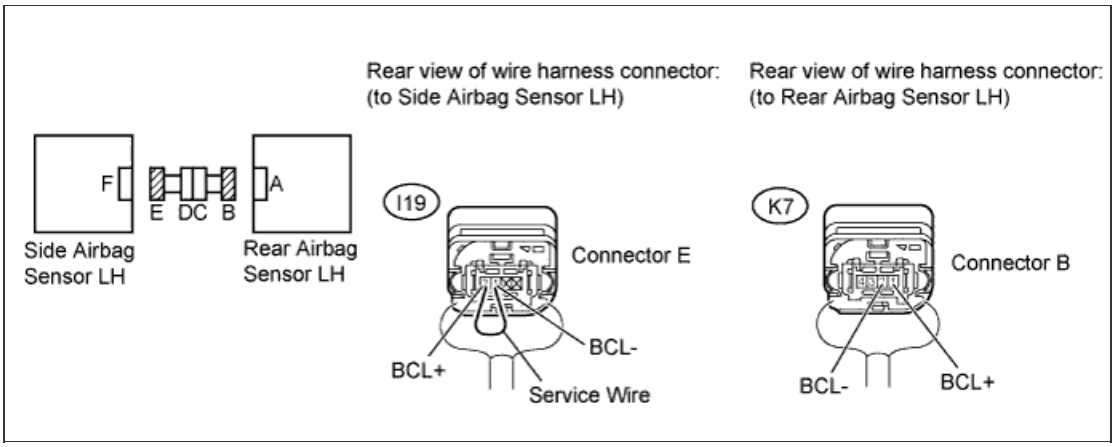

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 21

OK

19.CHECK REAR AIRBAG SENSOR LH

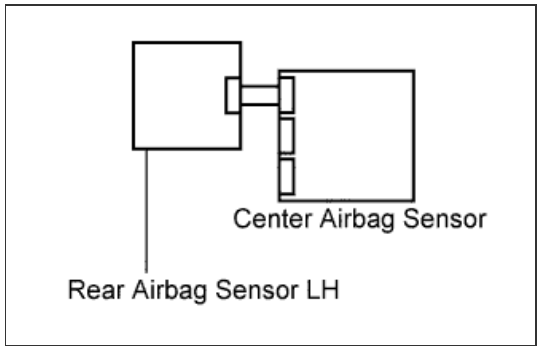

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1638 or B1648 is not output.

HINT:

Codes other than DTC B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 20

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

20.CHECK SIDE AIRBAG SENSOR LH

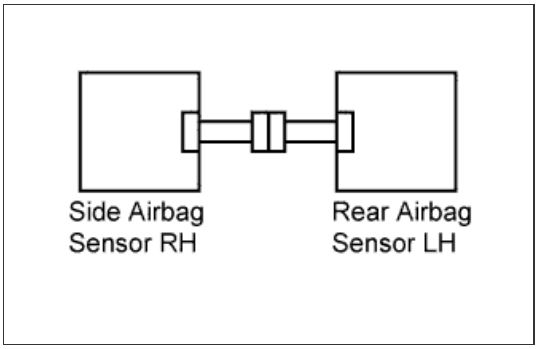

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 90 seconds.

g. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638 or B1648 is output	A
DTC B1633 is output	B
DTC B1633, B1638 and B1648 are not output	C

HINT:

Codes other than DTC B1633, B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

21.CHECK FLOOR WIRE (REAR AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

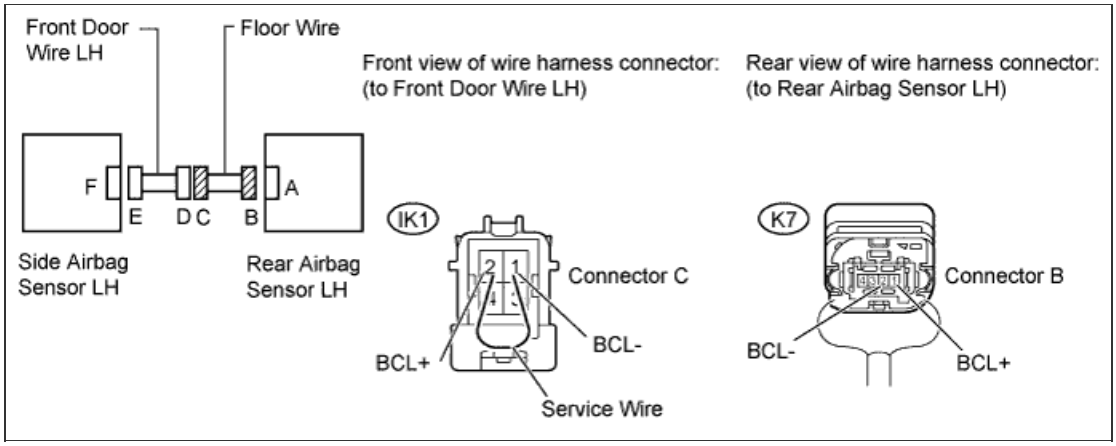

a. Disconnect the floor wire from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1845/61 Short in Curtain Shield Squib LH 2nd Step Circuit

DTC B1846/61 Open in Curtain Shield Squib LH 2nd Step Circuit

DTC B1847/61 Short to GND in Curtain Shield Squib LH 2nd Step Circuit

DTC B1848/61 Short to B+ in Curtain Shield Squib LH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1845/61	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH 2nd step circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1846/61	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH 2nd step circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1847/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1848/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

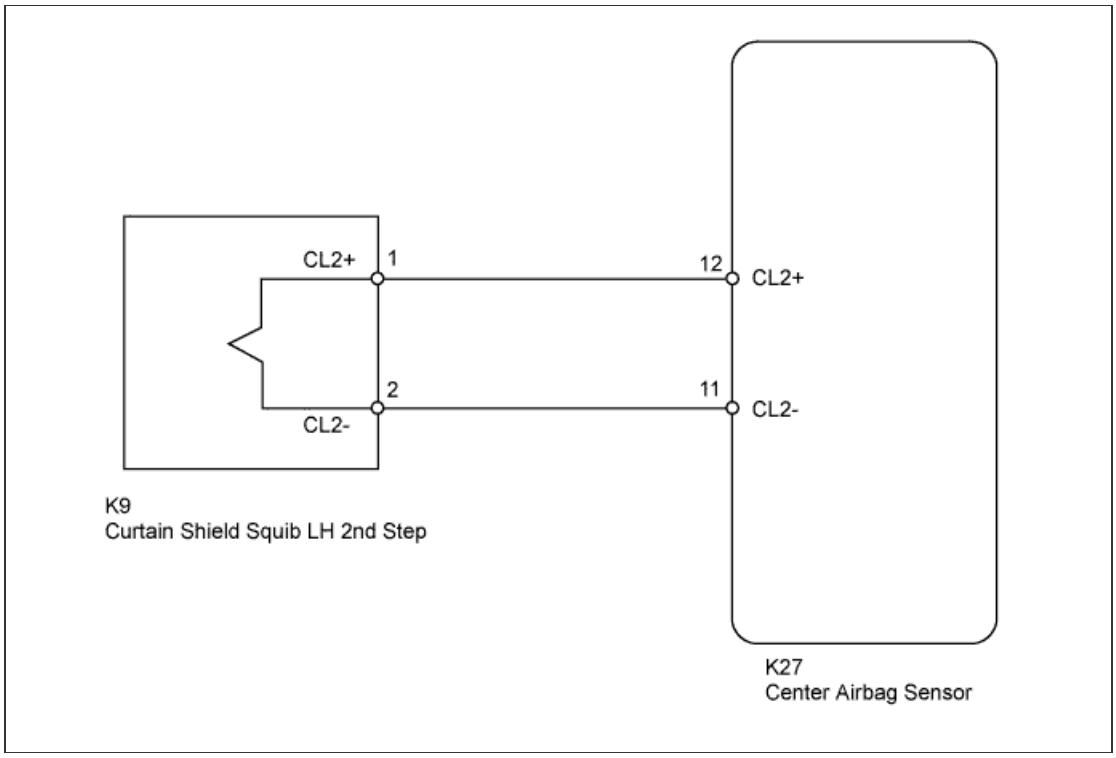

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield squib LH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the curtain shield airbag LH (curtain shield squib LH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

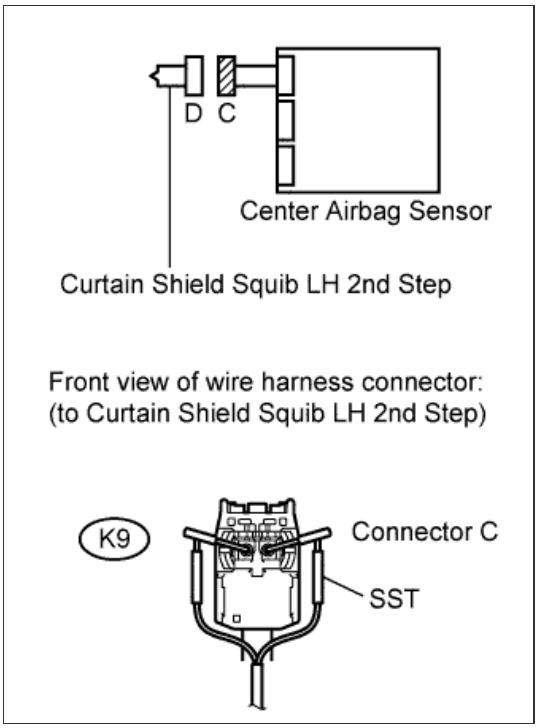

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield squib LH 2nd step side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD SQUIB LH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K9-1 (CL2+) - Body ground	Engine switch on (IG)	Below 1 V
K9-2 (CL2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	1 MΩ or higher
K9-1 (CL2+) - Body ground	Always	1 MΩ or higher
K9-2 (CL2-) - Body	Always	1 MΩ or higher

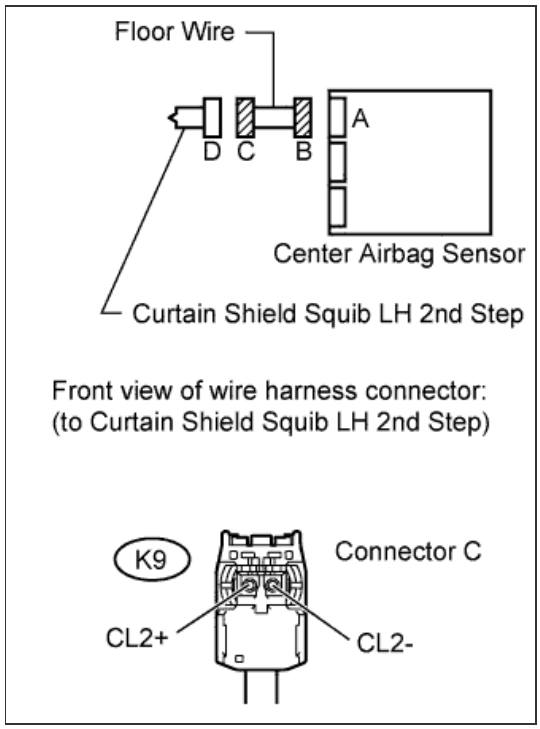

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib LH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

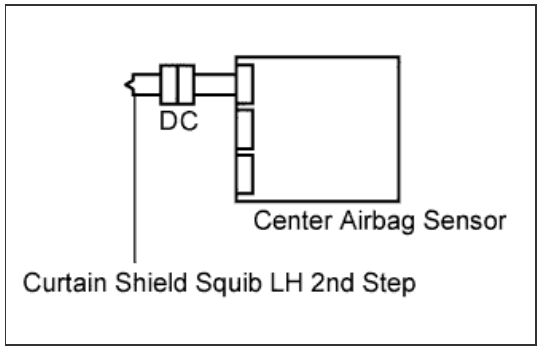

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1638/82 Rear Airbag Sensor Assembly LH Initialization Incomplete

DTC B1643/81 Side Satellite Sensor Bus RH Initialization Incomplete

DTC B1648/82 Side Satellite Sensor Bus LH Initialization Incomplete

DTC B1693/81 Door Side Airbag Sensor RH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1693/81 or B1648/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH and curtain shield airbag LH or RH).
  DTC B1643/81 or B1638/82 is stored when a malfunction is detected in the circuit for the rear collision sensor LH or RH (to determine deployment of the rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1638/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor LH (to determine deployment of the rear side seat airbag LH and curtain shield airbag LH) for 2 seconds. • A rear airbag sensor LH malfunction. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear airbag sensor LH • Side airbag sensor LH • Center airbag sensor assembly
B1643/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor RH (to determine deployment of the rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A rear airbag sensor RH malfunction. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear airbag sensor RH • Side airbag sensor RH • Center airbag sensor assembly
B1648/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds.	• No. 2 floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1693/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

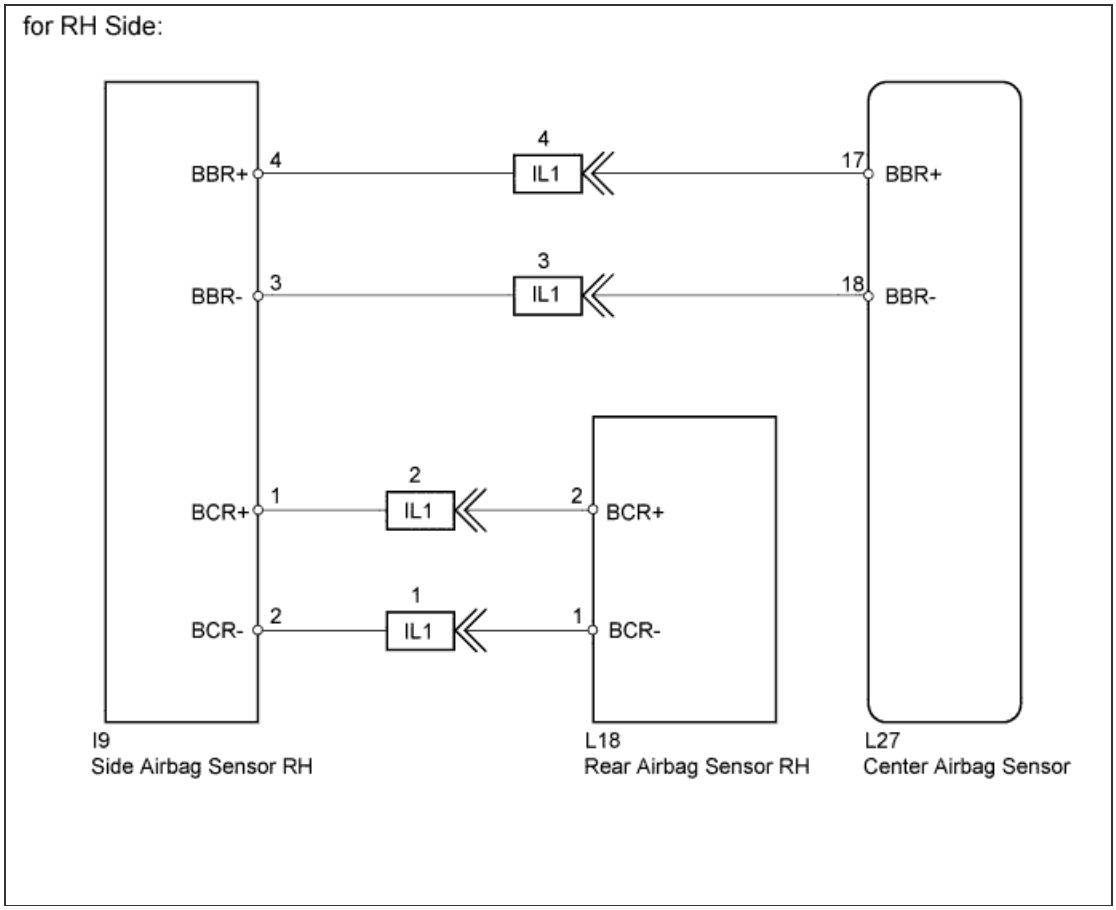

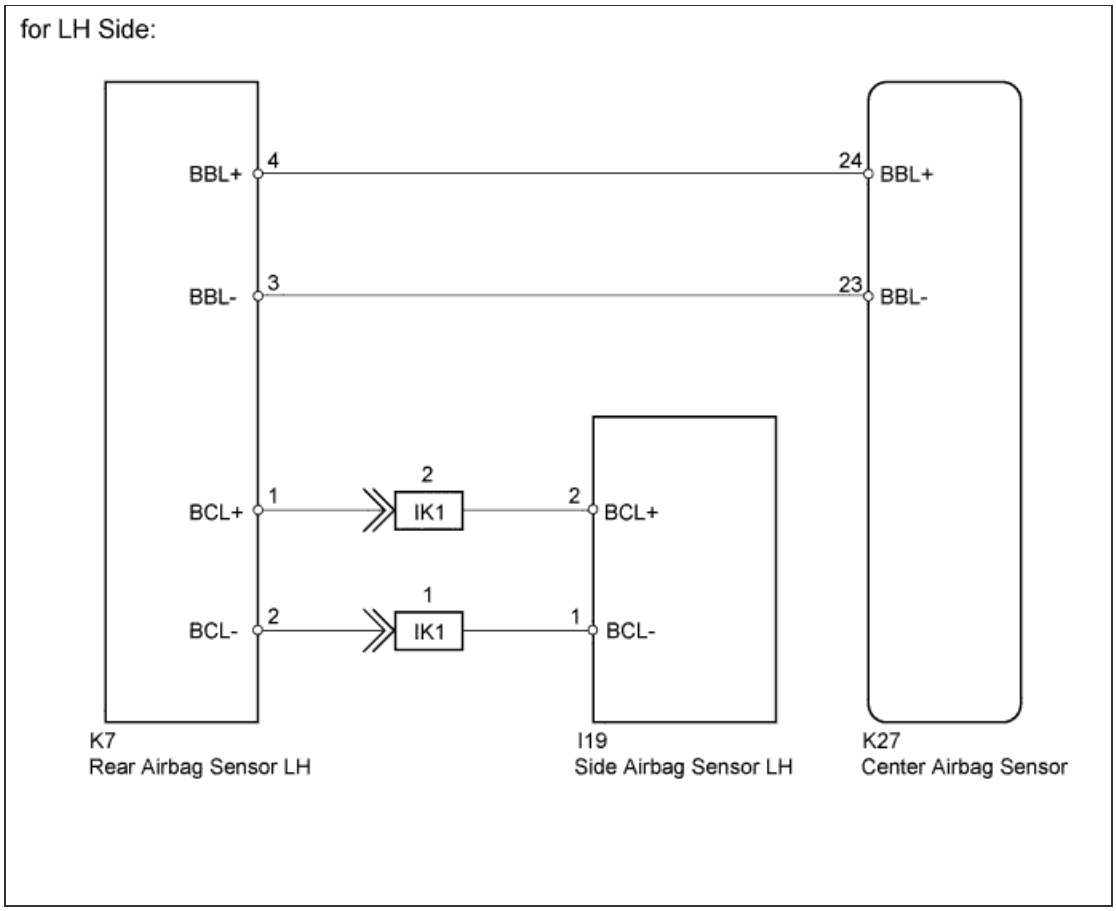

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK PAST DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1637 or B1692 is output	A
DTC B1632 or B1697 is output	B
DTC B1632, B1637, B1692 and B1697 are not output	C

A → GO TO DTC B1637 (Click here)

B → GO TO DTC B1632 (Click here)

C

2.CHECK FOR DTC

a. Turn the engine switch off.

HINT:

If a communication error occurs, DTCs for both the LH and RH sides will be stored simultaneously. The malfunctioning area can be identified by turning the engine switch off and then on (IG) again.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638, B1643, B1648 and B1693 are not output	A
DTC B1638 or B1648 is output	B
DTC B1643 or B1693 is output	C

HINT:

Codes other than DTC B1638, B1643,B1648 and B1693 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 13

C

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

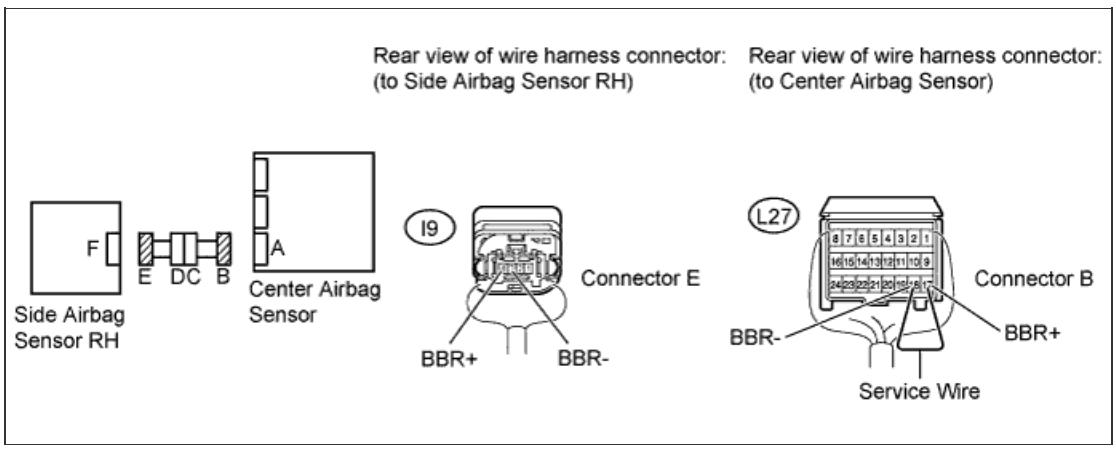

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

6.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

7.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.


b. Check that the connector (on the rear airbag sensor RH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

8.CHECK REAR AIRBAG SENSOR RH CIRCUIT

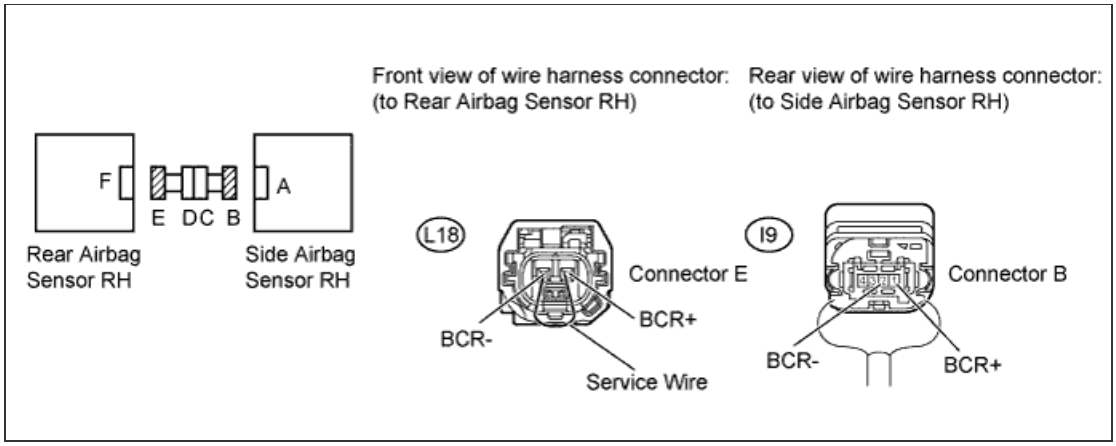

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 12

OK

9.CHECK SIDE AIRBAG SENSOR RH

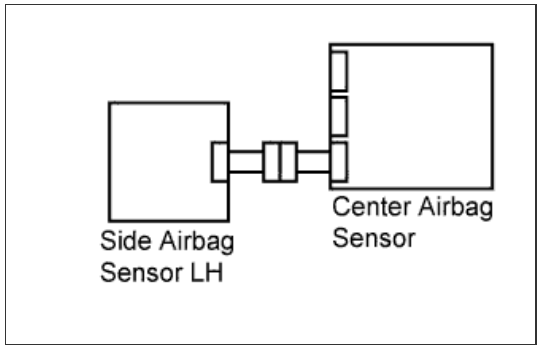

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1643, B1693 and B1698 are not output	A
DTC B1698 is output	B
DTC B1643 and B1693 are output	C

HINT:

Codes other than DTC B1643,B1693 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

10.CHECK REAR AIRBAG SENSOR RH

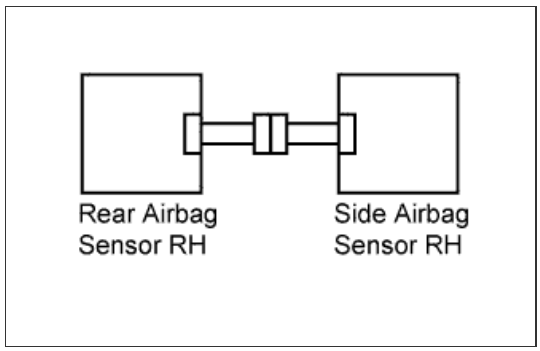

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:

DTC B1643 or B1693 is not output.

HINT:

Codes other than DTC B1643 and B1693 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

11.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

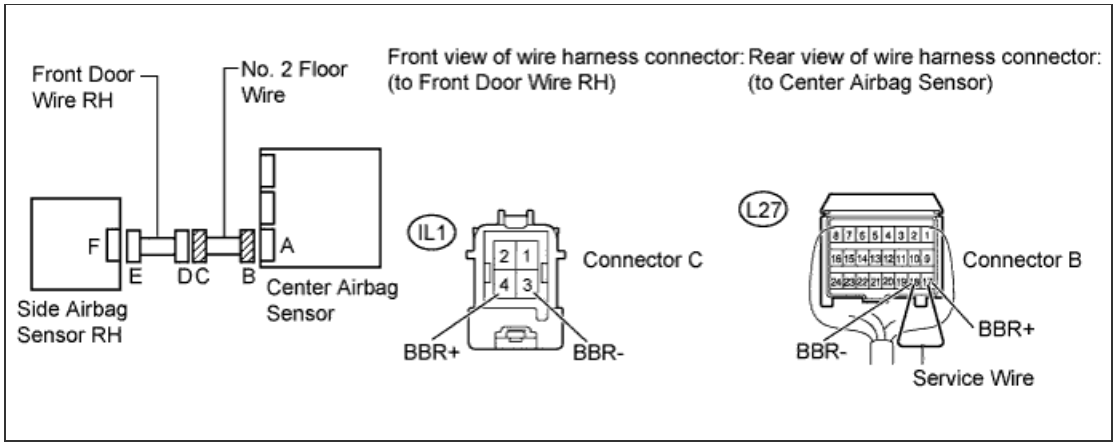

a. Disconnect the No. 2 floor wire from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE RH

12.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

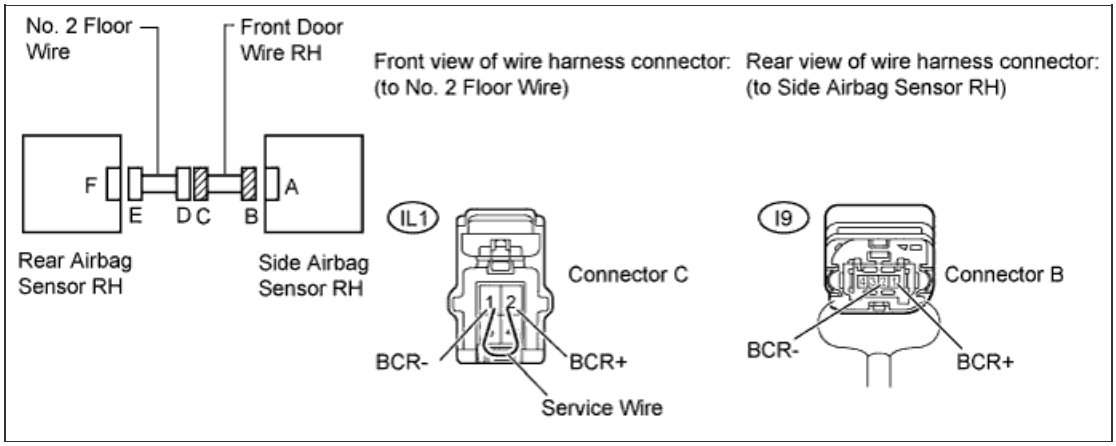

a. Disconnect the front door wire RH from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

13.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

14.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

15.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

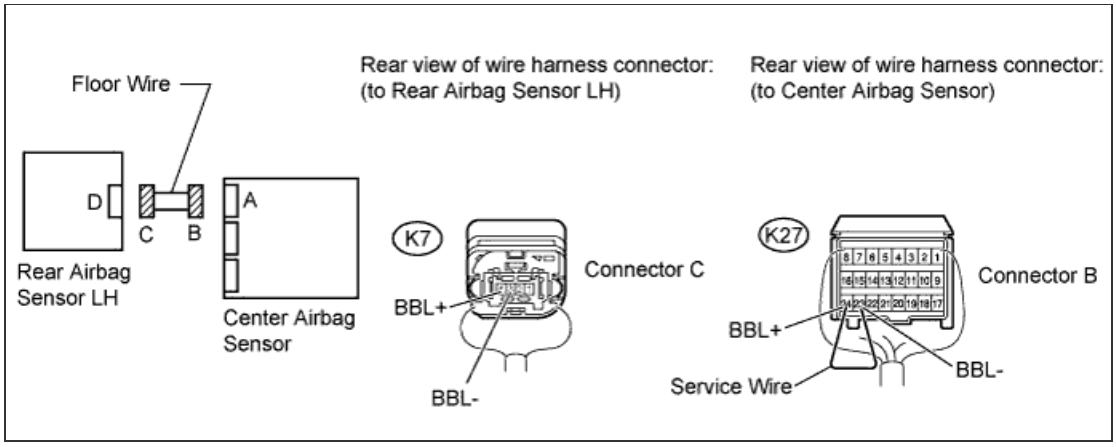

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

		Specified

Tester Connection	Condition	Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

16.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

17.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

18.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

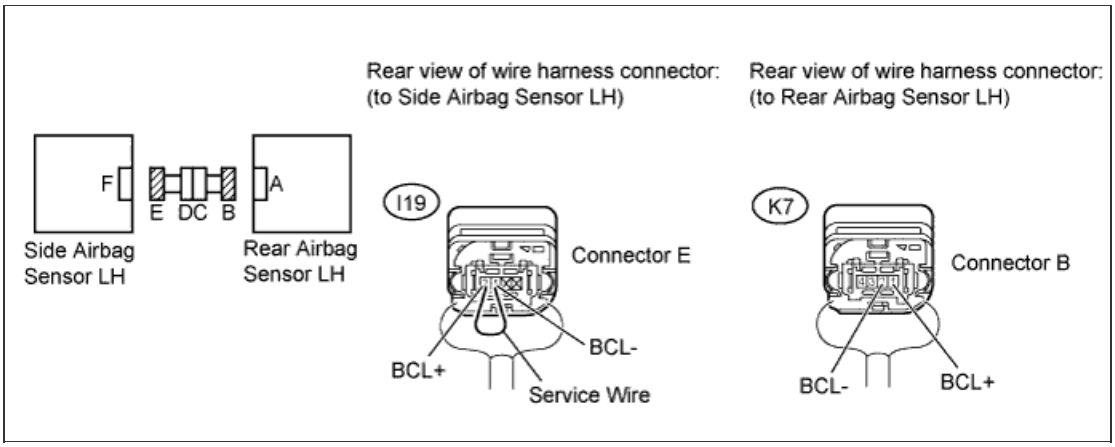

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 21

OK

19.CHECK REAR AIRBAG SENSOR LH

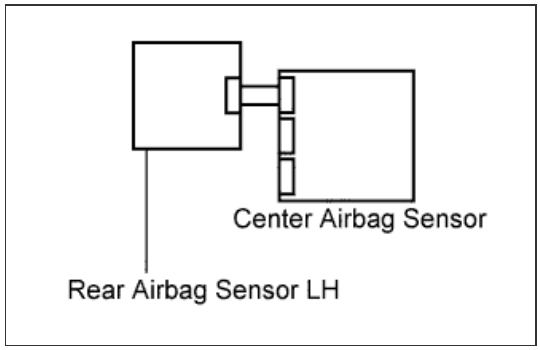

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1638 or B1648 is not output.

HINT:

Codes other than DTC B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 20

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

20.CHECK SIDE AIRBAG SENSOR LH

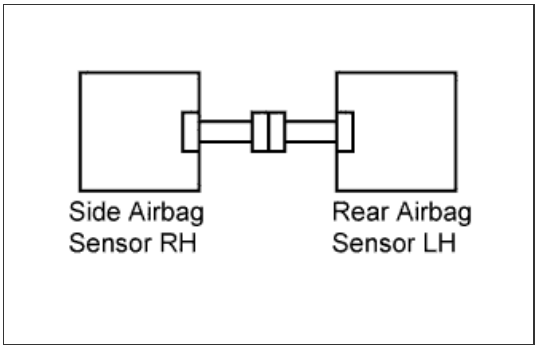

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 90 seconds.

g. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638 or B1648 is output	A
DTC B1633 is output	B
DTC B1633, B1638 and B1648 are not output	C

HINT:

Codes other than DTC B1633, B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

21.CHECK FLOOR WIRE (REAR AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

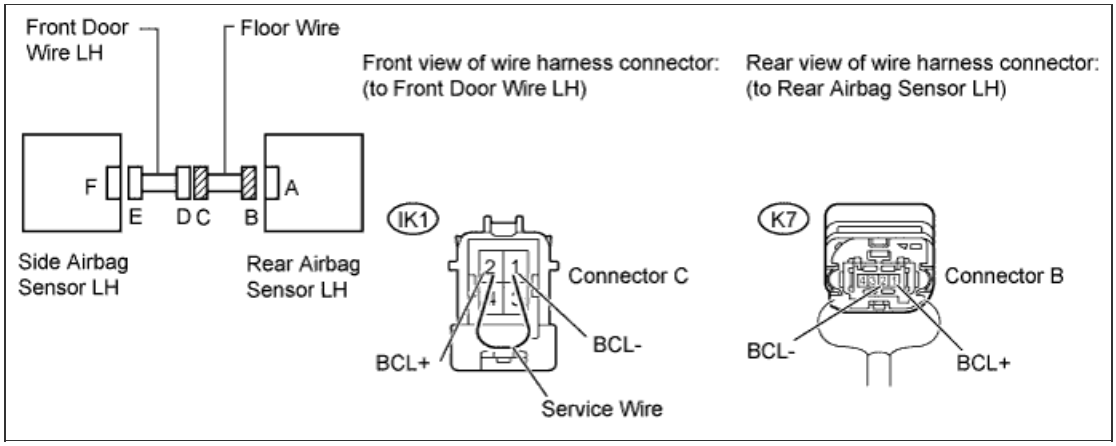

a. Disconnect the floor wire from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1845/61 Short in Curtain Shield Squib LH 2nd Step Circuit

DTC B1846/61 Open in Curtain Shield Squib LH 2nd Step Circuit

DTC B1847/61 Short to GND in Curtain Shield Squib LH 2nd Step Circuit

DTC B1848/61 Short to B+ in Curtain Shield Squib LH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1845/61	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH 2nd step circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1846/61	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH 2nd step circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1847/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1848/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

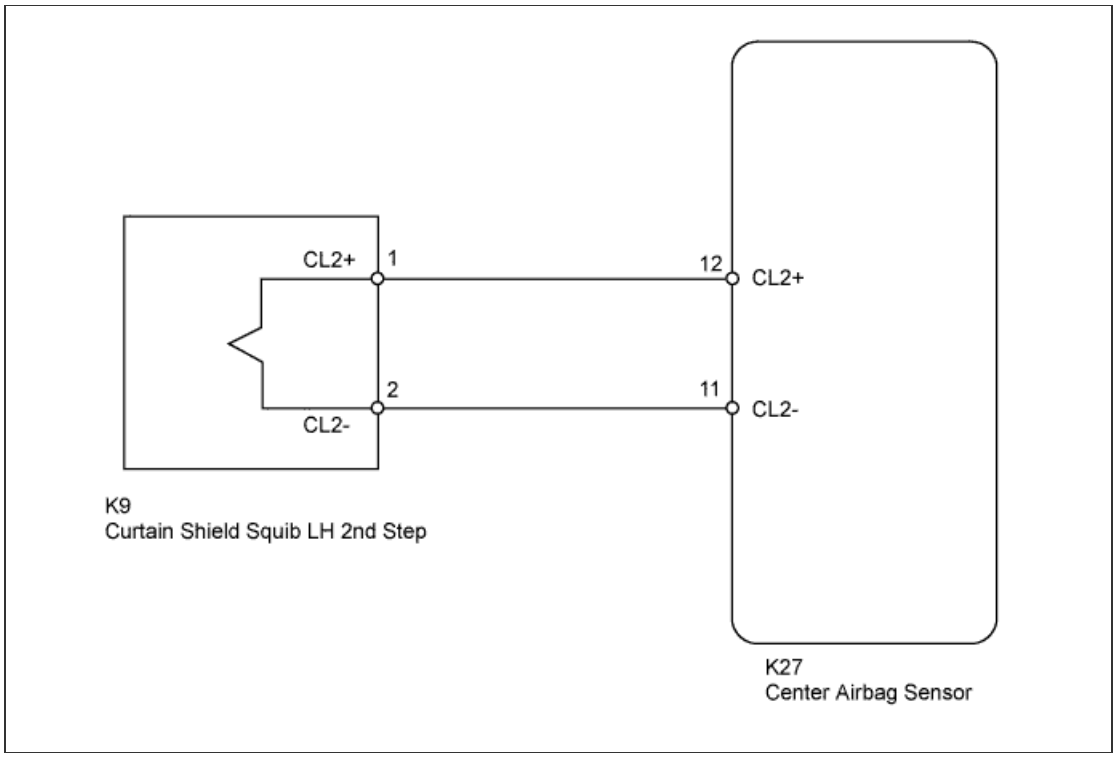

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield squib LH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the curtain shield airbag LH (curtain shield squib LH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

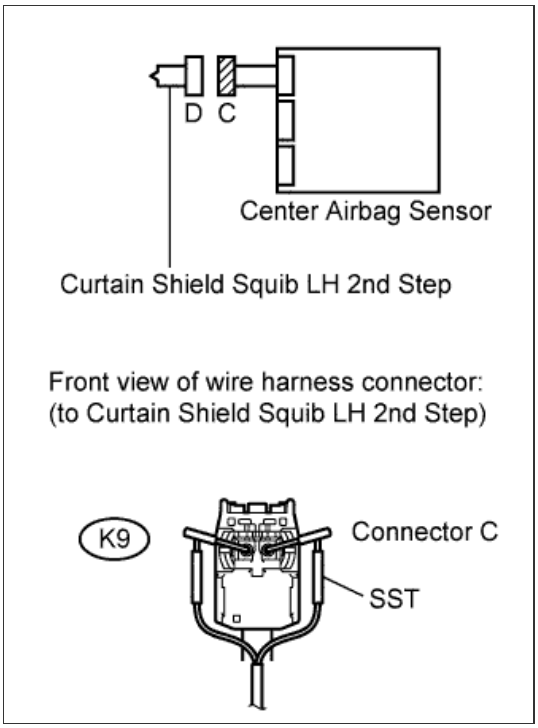

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield squib LH 2nd step side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD SQUIB LH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K9-1 (CL2+) - Body ground	Engine switch on (IG)	Below 1 V
K9-2 (CL2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	1 MΩ or higher
K9-1 (CL2+) - Body ground	Always	1 MΩ or higher
K9-2 (CL2-) - Body	Always	1 MΩ or higher

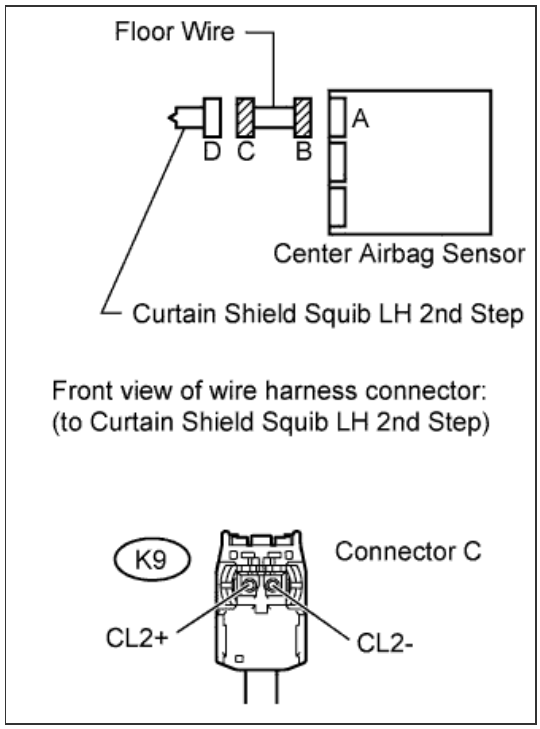

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib LH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

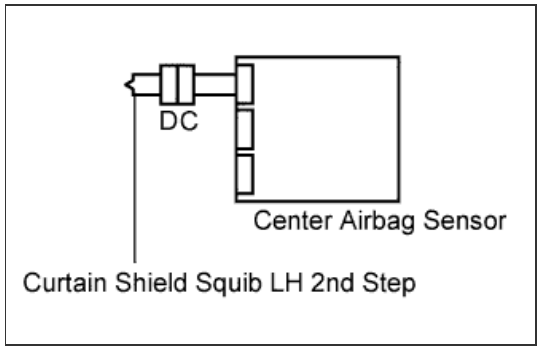

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1638/82 Rear Airbag Sensor Assembly LH Initialization Incomplete

DTC B1643/81 Side Satellite Sensor Bus RH Initialization Incomplete

DTC B1648/82 Side Satellite Sensor Bus LH Initialization Incomplete

DTC B1693/81 Door Side Airbag Sensor RH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1693/81 or B1648/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH and curtain shield airbag LH or RH).
  DTC B1643/81 or B1638/82 is stored when a malfunction is detected in the circuit for the rear collision sensor LH or RH (to determine deployment of the rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1638/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor LH (to determine deployment of the rear side seat airbag LH and curtain shield airbag LH) for 2 seconds. • A rear airbag sensor LH malfunction. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear airbag sensor LH • Side airbag sensor LH • Center airbag sensor assembly
B1643/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor RH (to determine deployment of the rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A rear airbag sensor RH malfunction. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear airbag sensor RH • Side airbag sensor RH • Center airbag sensor assembly
B1648/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds.	• No. 2 floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1693/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

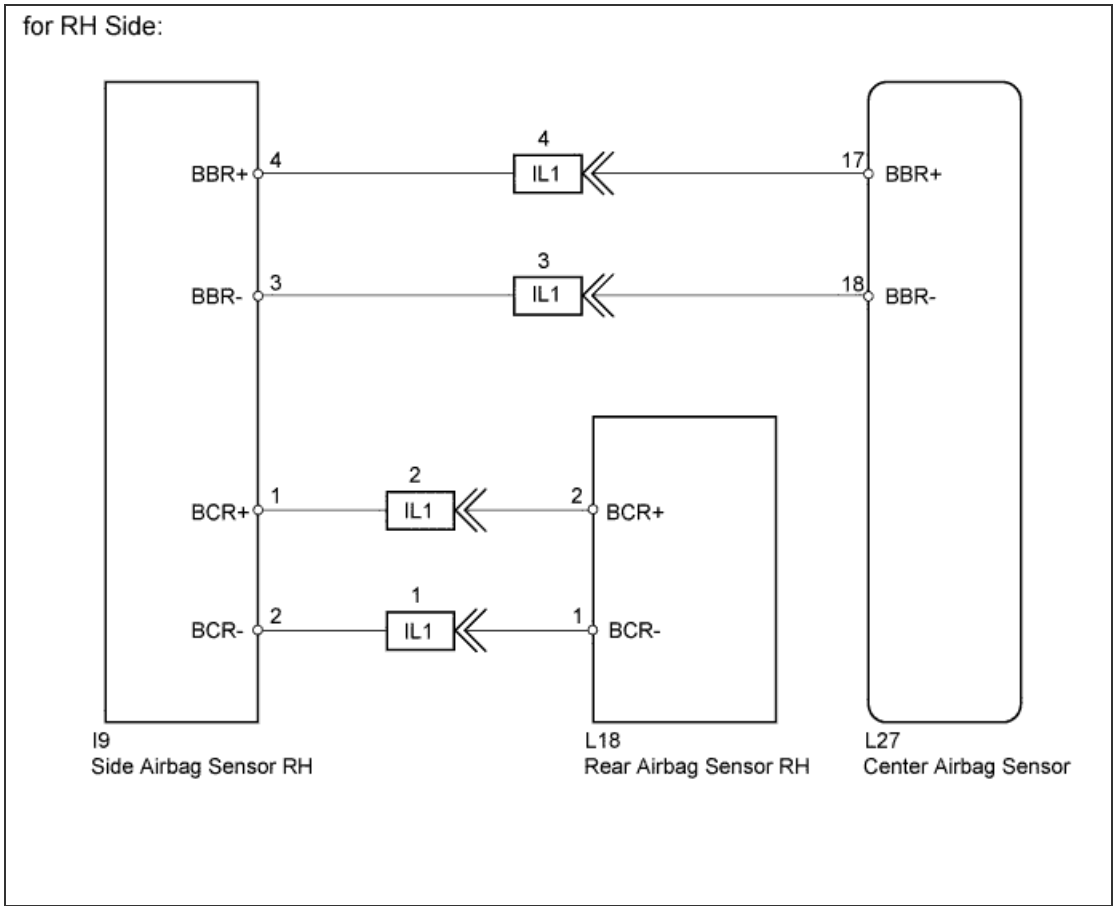

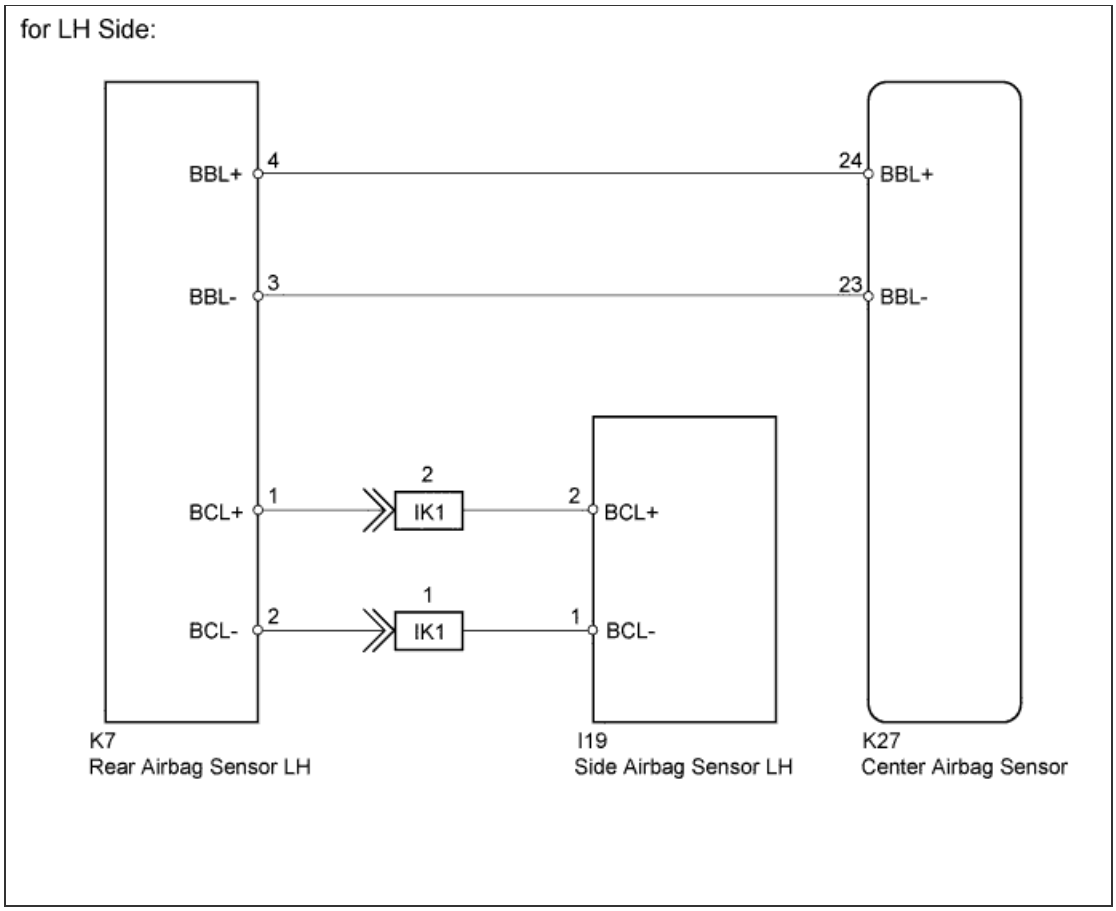

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK PAST DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1637 or B1692 is output	A
DTC B1632 or B1697 is output	B
DTC B1632, B1637, B1692 and B1697 are not output	C

A → GO TO DTC B1637 (Click here)

B → GO TO DTC B1632 (Click here)

C

2.CHECK FOR DTC

a. Turn the engine switch off.

HINT:

If a communication error occurs, DTCs for both the LH and RH sides will be stored simultaneously. The malfunctioning area can be identified by turning the engine switch off and then on (IG) again.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638, B1643, B1648 and B1693 are not output	A
DTC B1638 or B1648 is output	B
DTC B1643 or B1693 is output	C

HINT:

Codes other than DTC B1638, B1643,B1648 and B1693 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 13

C

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

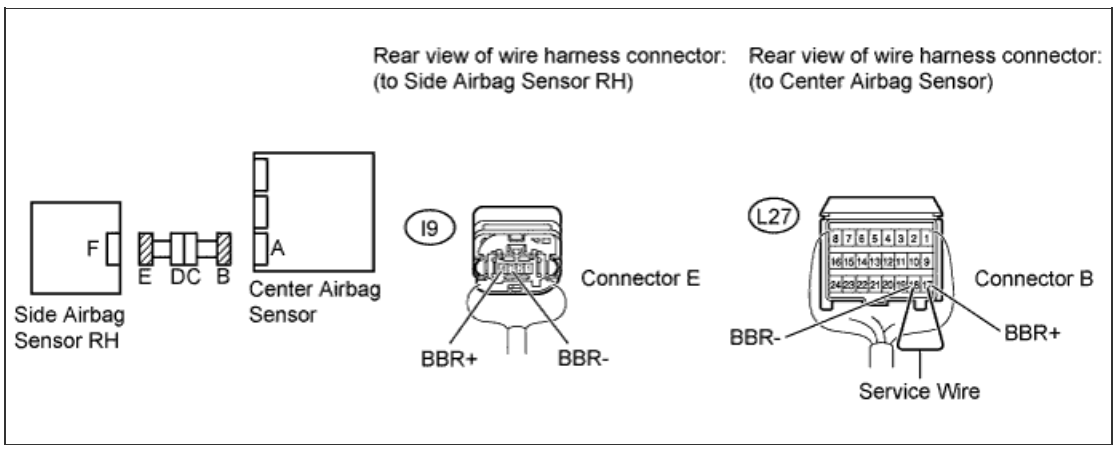

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

6.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

7.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.


b. Check that the connector (on the rear airbag sensor RH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

8.CHECK REAR AIRBAG SENSOR RH CIRCUIT

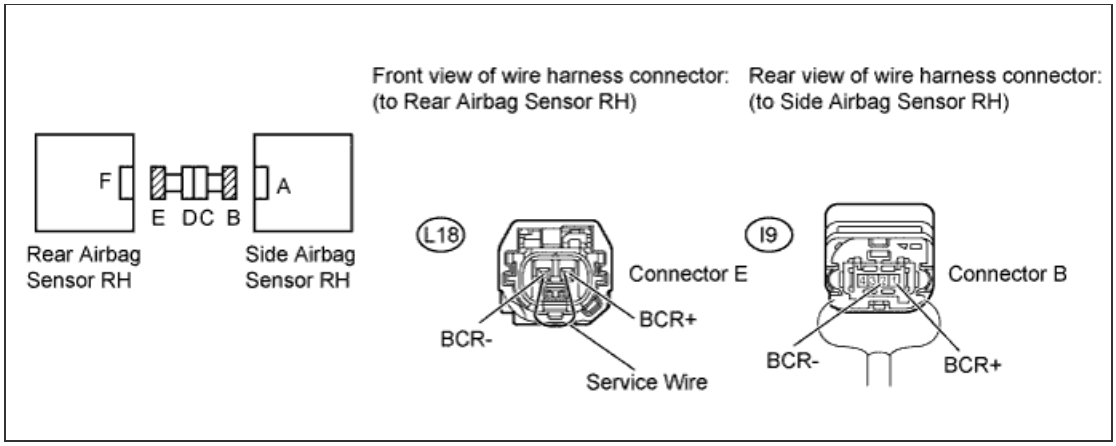

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 12

OK

9.CHECK SIDE AIRBAG SENSOR RH

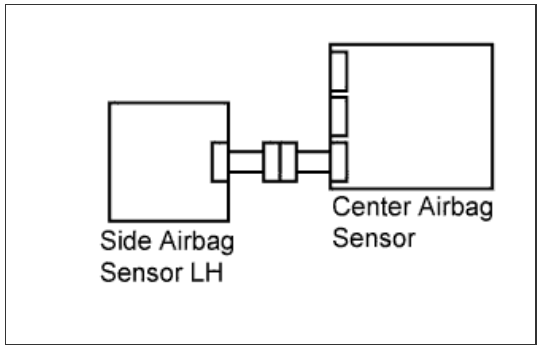

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1643, B1693 and B1698 are not output	A
DTC B1698 is output	B
DTC B1643 and B1693 are output	C

HINT:

Codes other than DTC B1643,B1693 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

10.CHECK REAR AIRBAG SENSOR RH

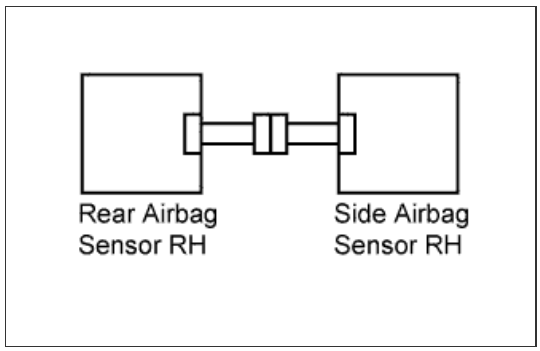

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:

DTC B1643 or B1693 is not output.

HINT:

Codes other than DTC B1643 and B1693 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

11.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

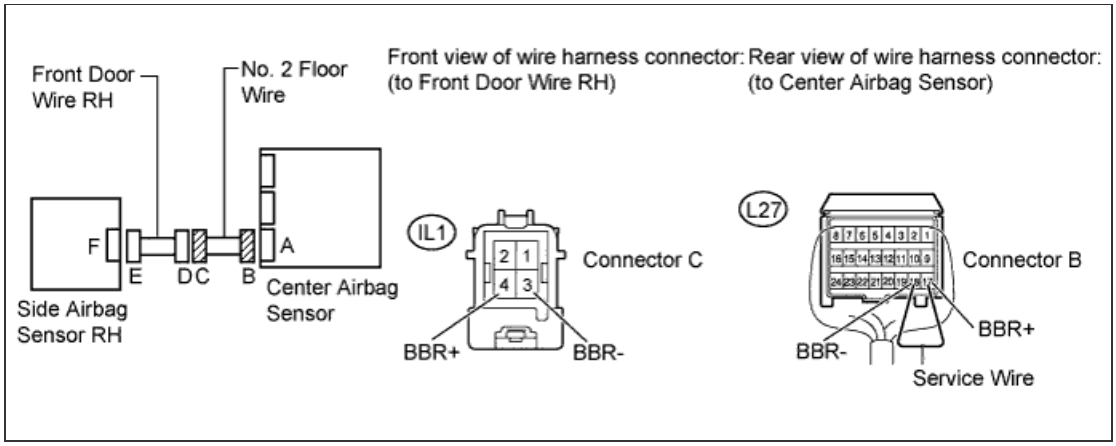

a. Disconnect the No. 2 floor wire from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE RH

12.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

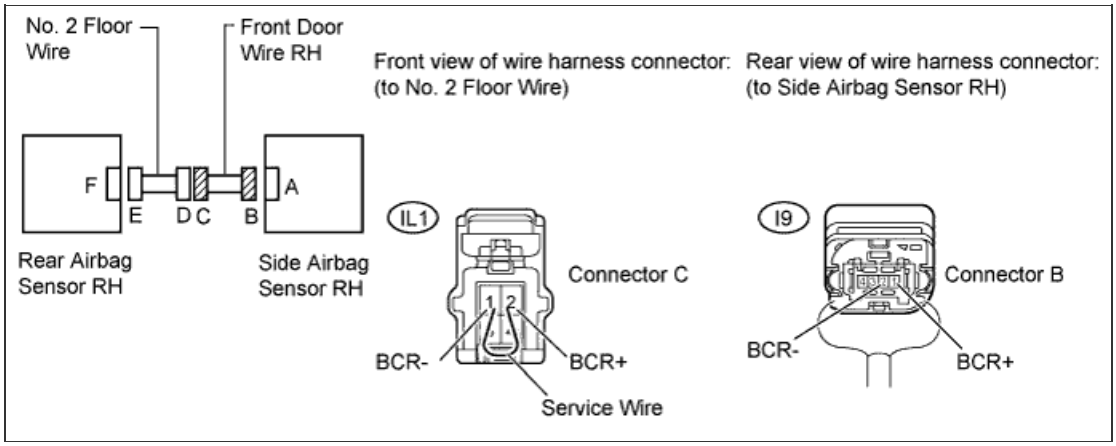

a. Disconnect the front door wire RH from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

13.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

14.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

15.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

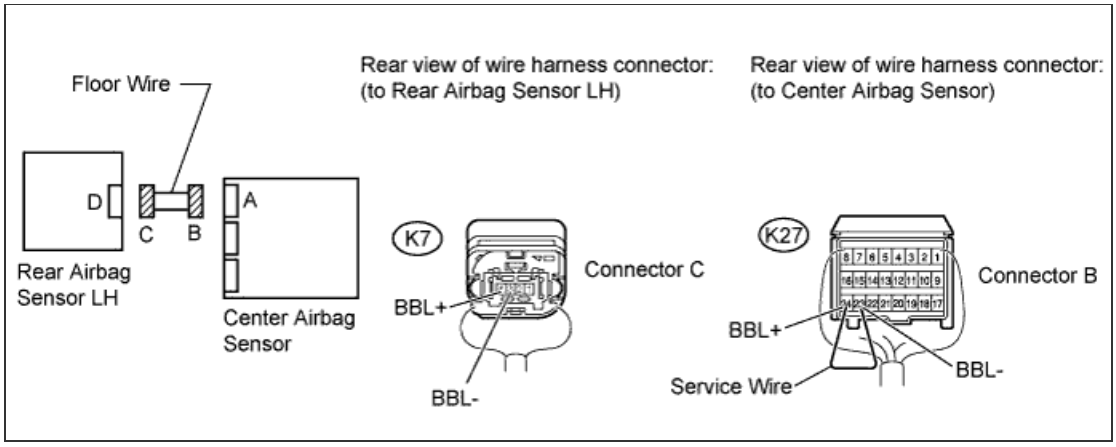

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

		Specified

Tester Connection	Condition	Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

16.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

17.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

18.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

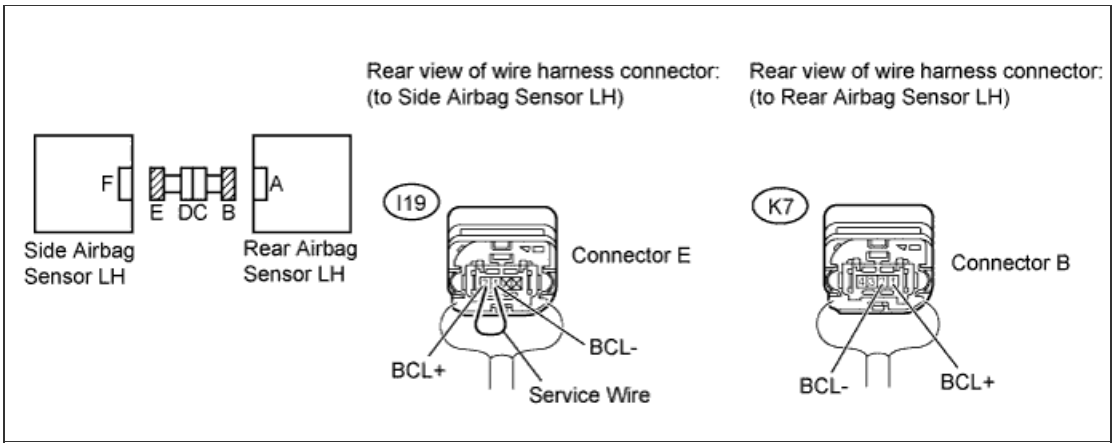

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 21

OK

19.CHECK REAR AIRBAG SENSOR LH

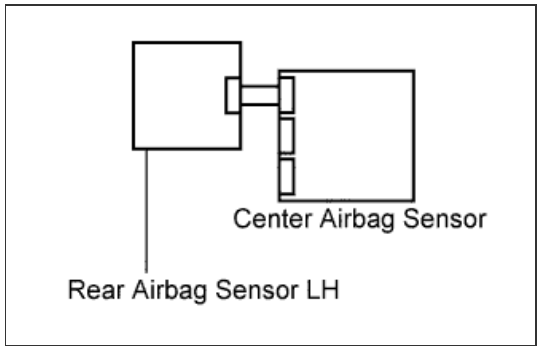

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1638 or B1648 is not output.

HINT:

Codes other than DTC B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 20

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

20.CHECK SIDE AIRBAG SENSOR LH

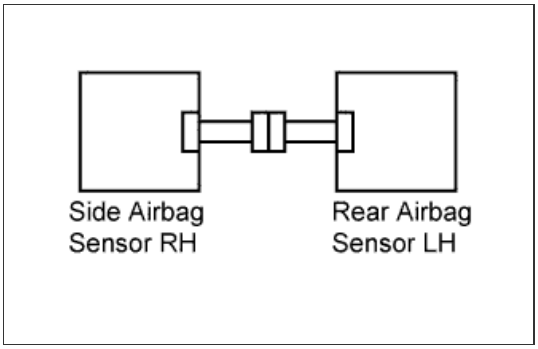

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 90 seconds.

g. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638 or B1648 is output	A
DTC B1633 is output	B
DTC B1633, B1638 and B1648 are not output	C

HINT:

Codes other than DTC B1633, B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

21.CHECK FLOOR WIRE (REAR AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

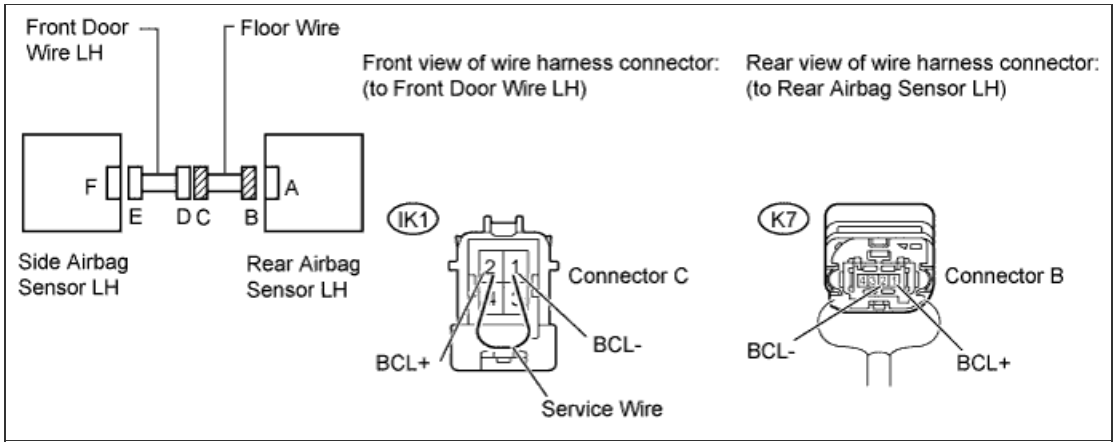

a. Disconnect the floor wire from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1845/61 Short in Curtain Shield Squib LH 2nd Step Circuit

DTC B1846/61 Open in Curtain Shield Squib LH 2nd Step Circuit

DTC B1847/61 Short to GND in Curtain Shield Squib LH 2nd Step Circuit

DTC B1848/61 Short to B+ in Curtain Shield Squib LH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1845/61	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH 2nd step circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1846/61	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH 2nd step circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1847/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1848/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

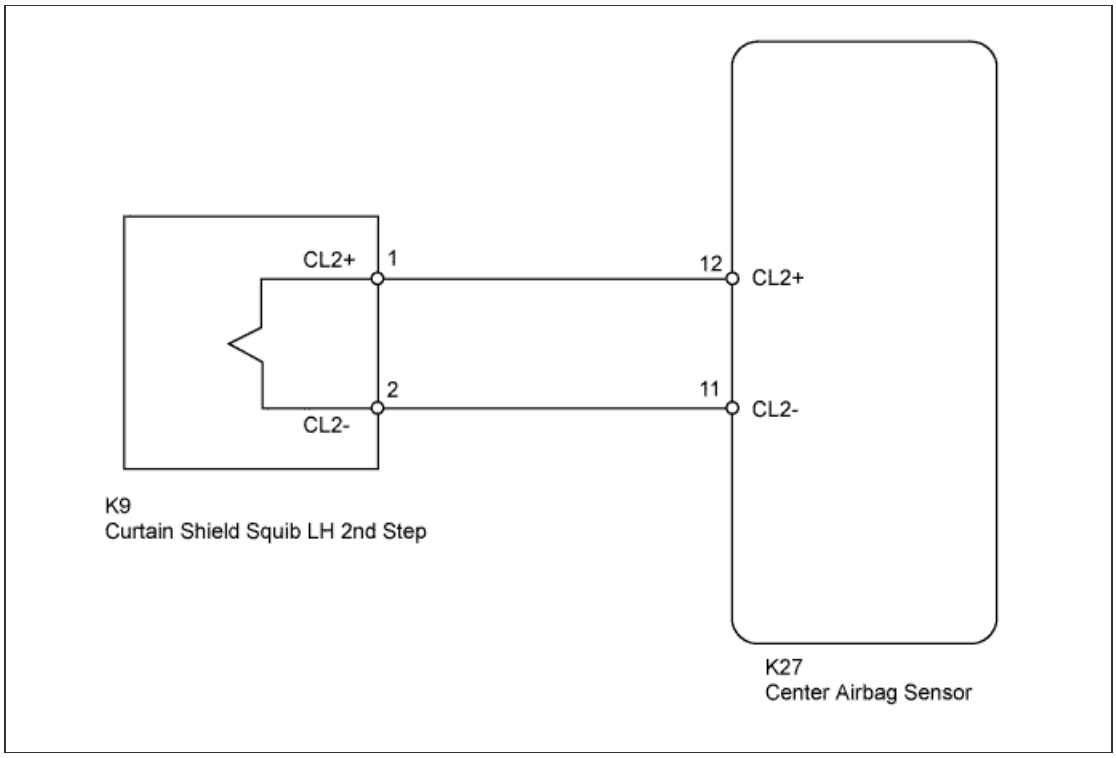

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield squib LH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the curtain shield airbag LH (curtain shield squib LH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

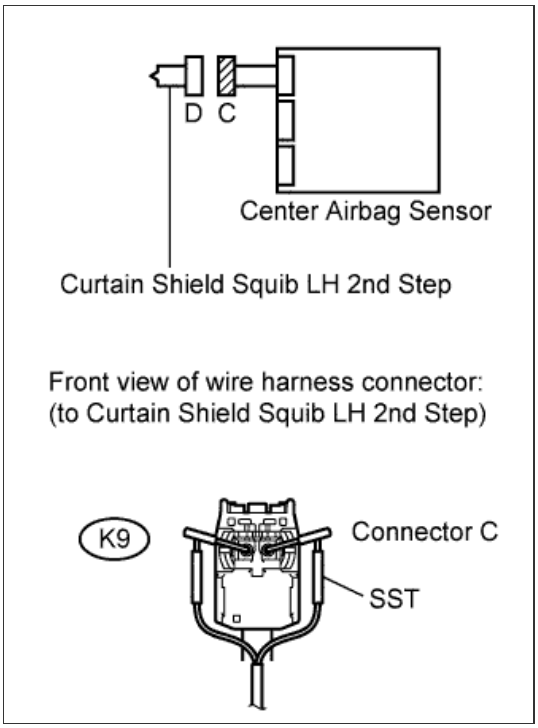

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield squib LH 2nd step side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD SQUIB LH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K9-1 (CL2+) - Body ground	Engine switch on (IG)	Below 1 V
K9-2 (CL2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	1 MΩ or higher
K9-1 (CL2+) - Body ground	Always	1 MΩ or higher
K9-2 (CL2-) - Body	Always	1 MΩ or higher

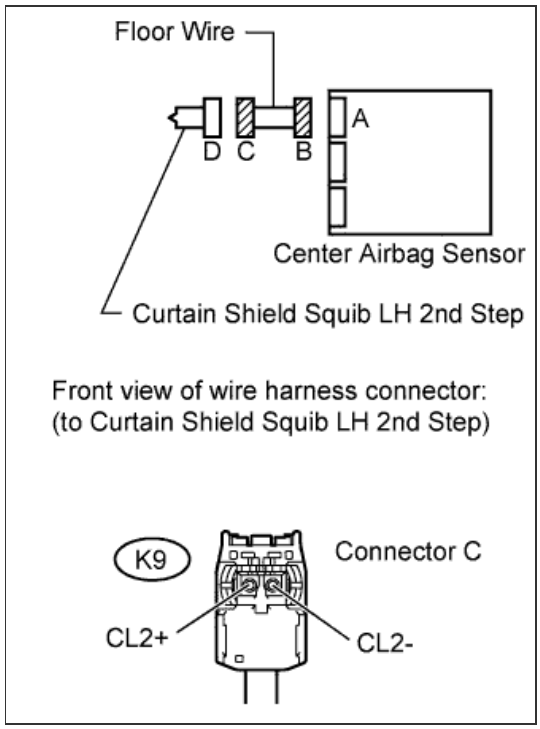

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib LH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

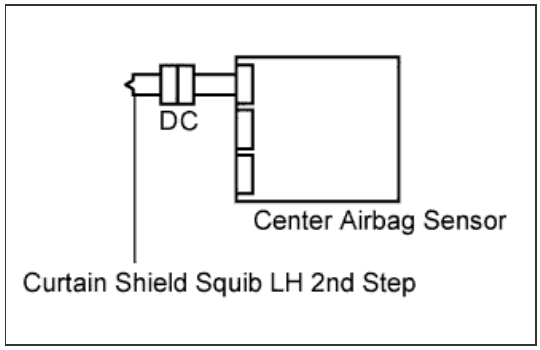

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1638/82 Rear Airbag Sensor Assembly LH Initialization Incomplete

DTC B1643/81 Side Satellite Sensor Bus RH Initialization Incomplete

DTC B1648/82 Side Satellite Sensor Bus LH Initialization Incomplete

DTC B1693/81 Door Side Airbag Sensor RH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1693/81 or B1648/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH and curtain shield airbag LH or RH).
  DTC B1643/81 or B1638/82 is stored when a malfunction is detected in the circuit for the rear collision sensor LH or RH (to determine deployment of the rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1638/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor LH (to determine deployment of the rear side seat airbag LH and curtain shield airbag LH) for 2 seconds. • A rear airbag sensor LH malfunction. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear airbag sensor LH • Side airbag sensor LH • Center airbag sensor assembly
B1643/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor RH (to determine deployment of the rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A rear airbag sensor RH malfunction. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear airbag sensor RH • Side airbag sensor RH • Center airbag sensor assembly
B1648/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds.	• No. 2 floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1693/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

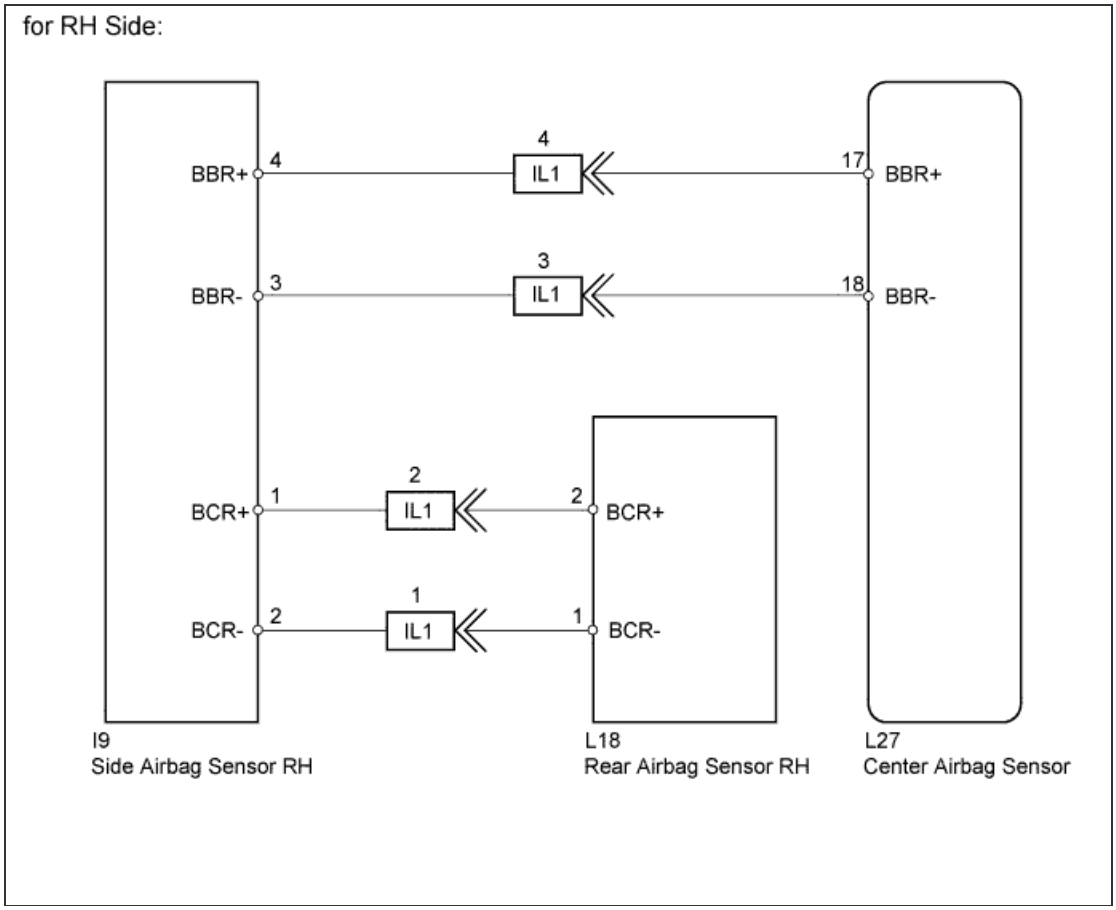

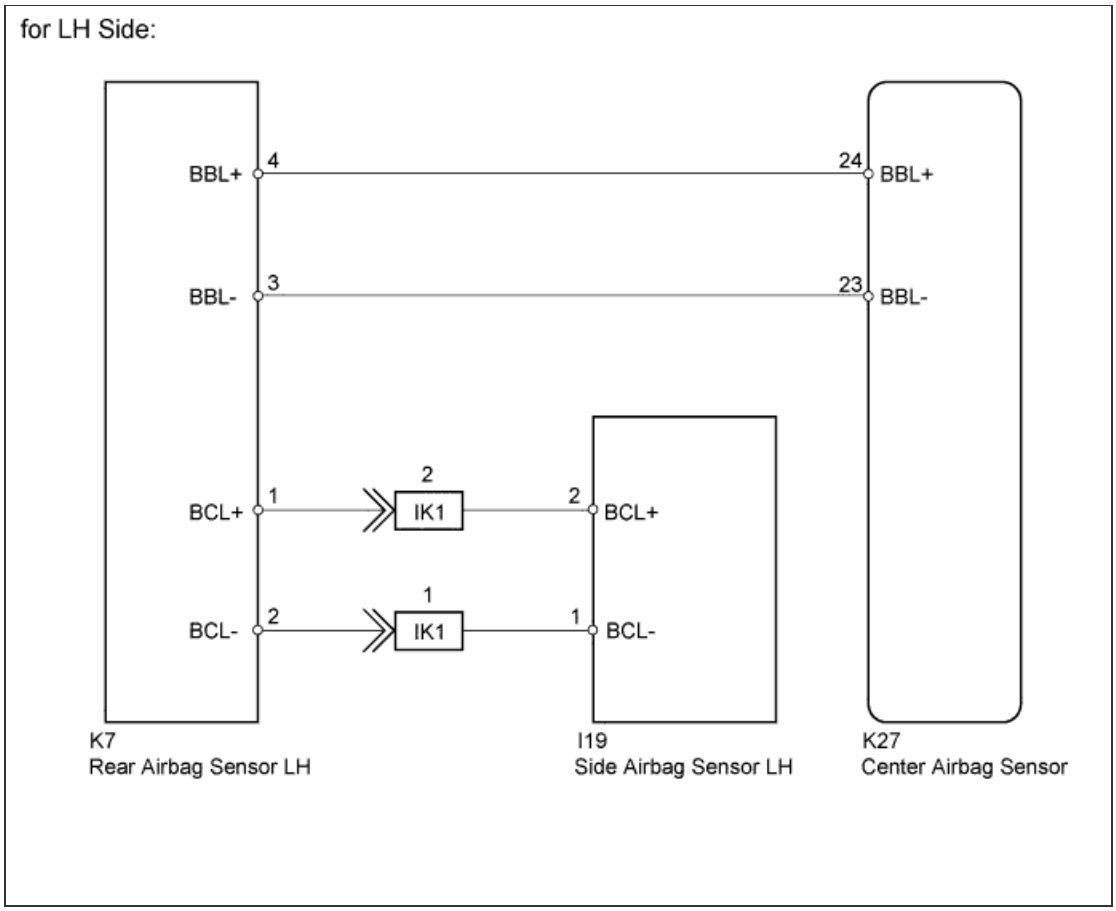

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK PAST DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1637 or B1692 is output	A
DTC B1632 or B1697 is output	B
DTC B1632, B1637, B1692 and B1697 are not output	C

A → GO TO DTC B1637 (Click here)

B → GO TO DTC B1632 (Click here)

C

2.CHECK FOR DTC

a. Turn the engine switch off.

HINT:

If a communication error occurs, DTCs for both the LH and RH sides will be stored simultaneously. The malfunctioning area can be identified by turning the engine switch off and then on (IG) again.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638, B1643, B1648 and B1693 are not output	A
DTC B1638 or B1648 is output	B
DTC B1643 or B1693 is output	C

HINT:

Codes other than DTC B1638, B1643,B1648 and B1693 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 13

C

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

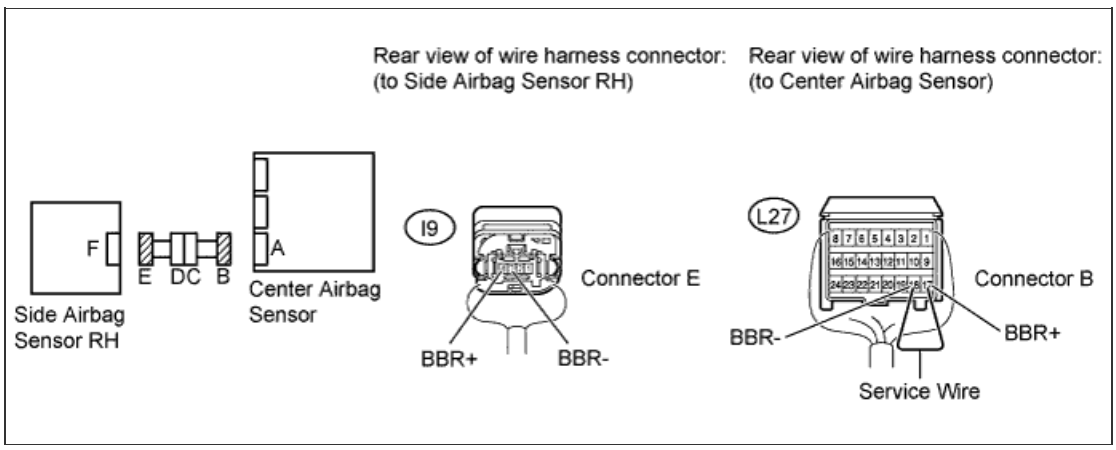

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

6.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

7.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.


b. Check that the connector (on the rear airbag sensor RH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

8.CHECK REAR AIRBAG SENSOR RH CIRCUIT

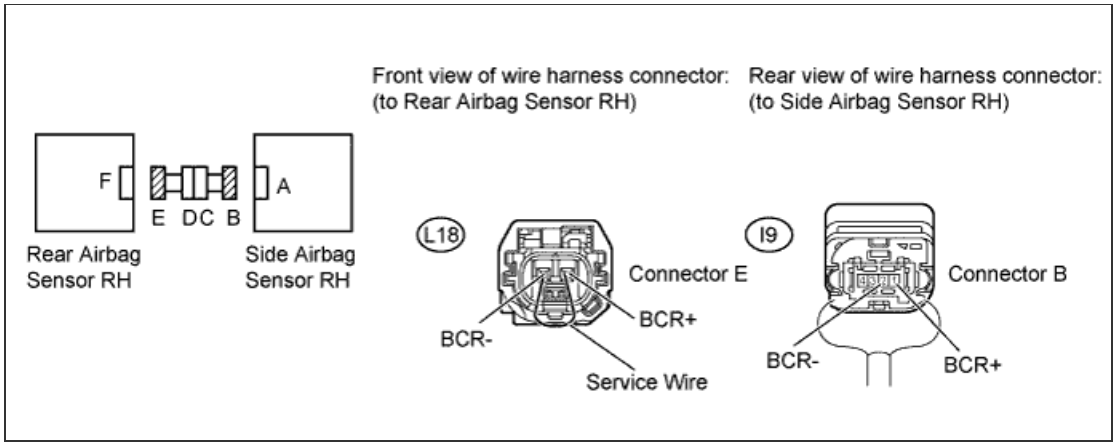

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 12

OK

9.CHECK SIDE AIRBAG SENSOR RH

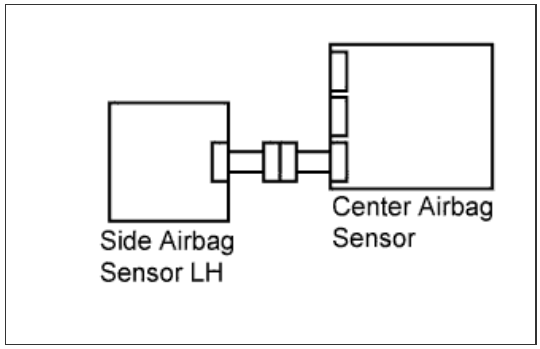

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1643, B1693 and B1698 are not output	A
DTC B1698 is output	B
DTC B1643 and B1693 are output	C

HINT:

Codes other than DTC B1643,B1693 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

10.CHECK REAR AIRBAG SENSOR RH

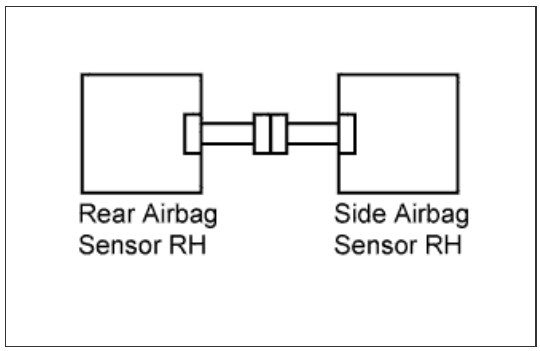

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:

DTC B1643 or B1693 is not output.

HINT:

Codes other than DTC B1643 and B1693 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

11.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

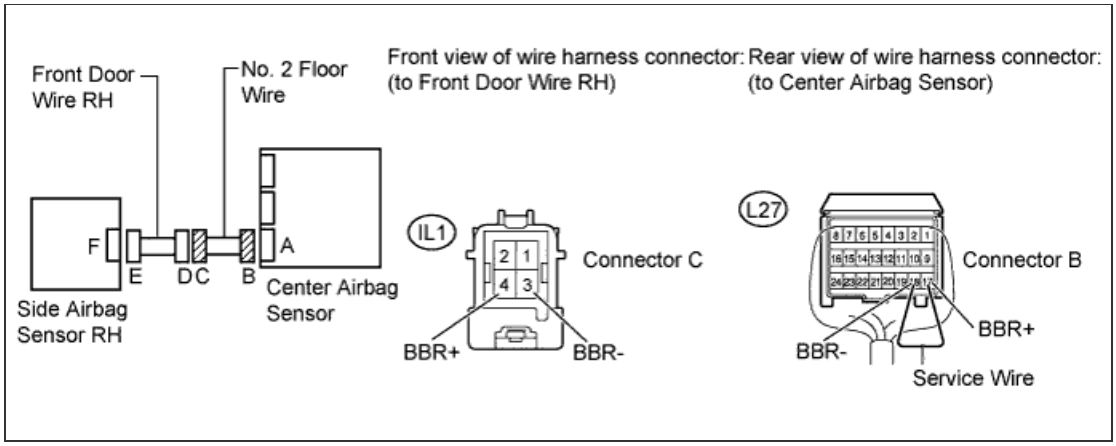

a. Disconnect the No. 2 floor wire from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE RH

12.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

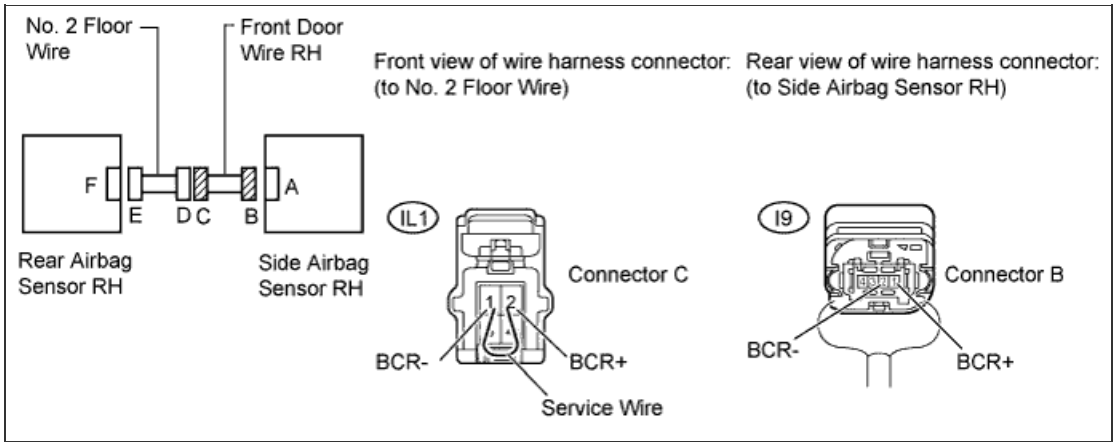

a. Disconnect the front door wire RH from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

13.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

14.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

15.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

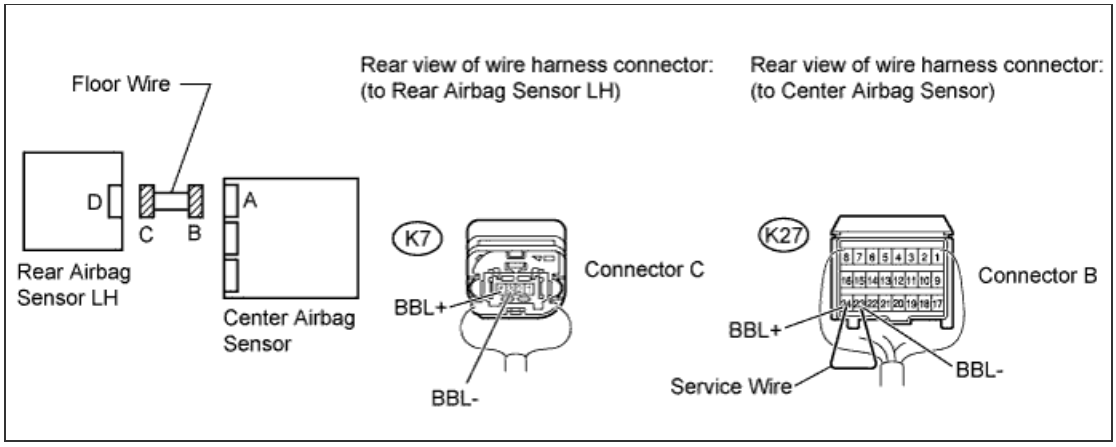

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

		Specified

Tester Connection	Condition	Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

16.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

17.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

18.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

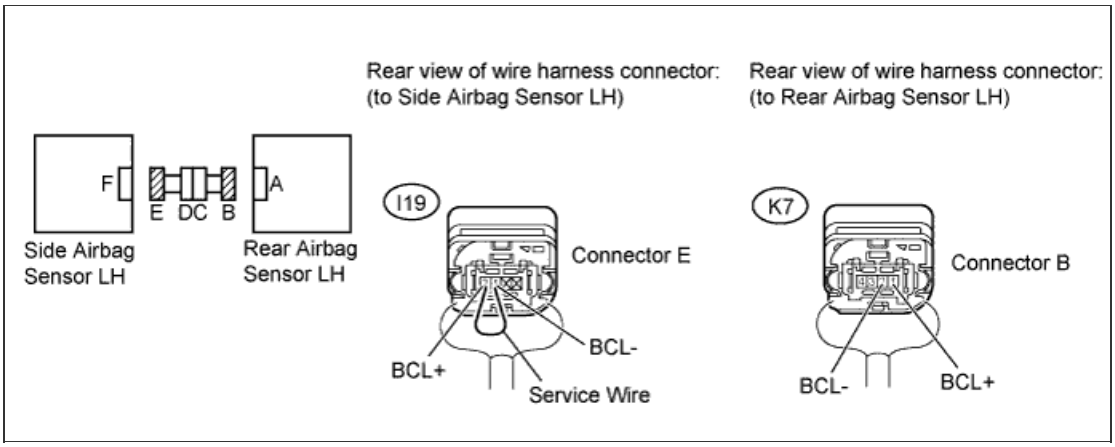

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 21

OK

19.CHECK REAR AIRBAG SENSOR LH

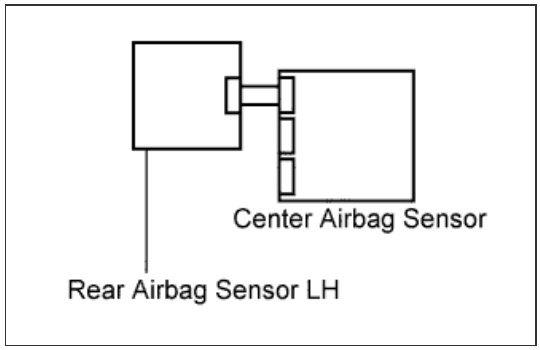

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1638 or B1648 is not output.

HINT:

Codes other than DTC B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 20

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

20.CHECK SIDE AIRBAG SENSOR LH

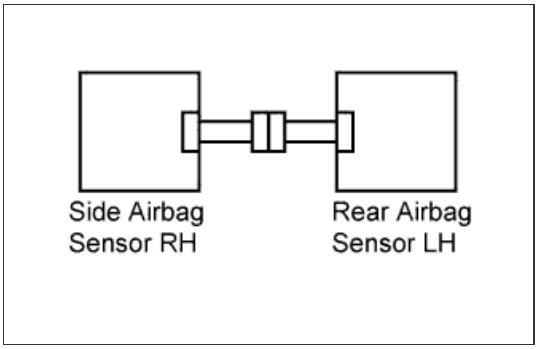

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 90 seconds.

g. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638 or B1648 is output	A
DTC B1633 is output	B
DTC B1633, B1638 and B1648 are not output	C

HINT:

Codes other than DTC B1633, B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

21.CHECK FLOOR WIRE (REAR AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

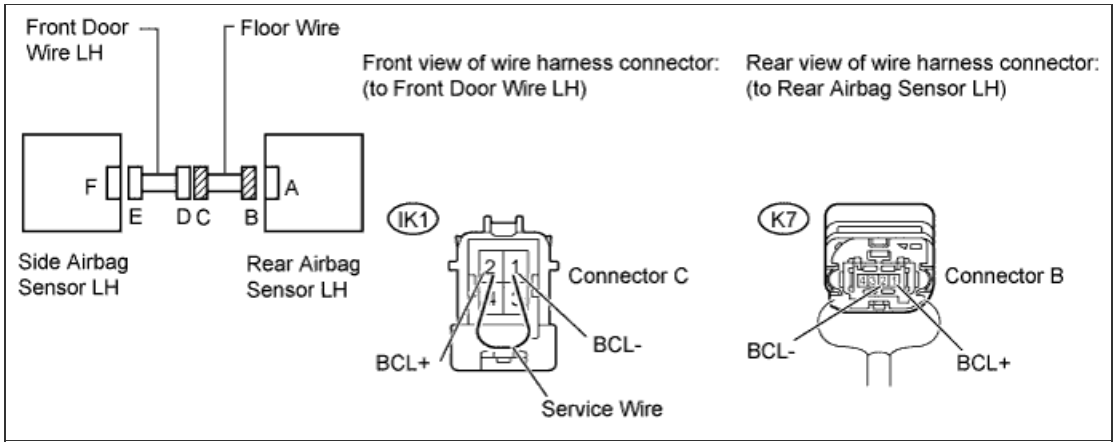

a. Disconnect the floor wire from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1845/61 Short in Curtain Shield Squib LH 2nd Step Circuit

DTC B1846/61 Open in Curtain Shield Squib LH 2nd Step Circuit

DTC B1847/61 Short to GND in Curtain Shield Squib LH 2nd Step Circuit

DTC B1848/61 Short to B+ in Curtain Shield Squib LH 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The curtain shield squib LH 2nd step circuit consists of the center airbag sensor and the curtain shield airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the curtain shield squib LH 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1845/61	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the curtain shield squib LH 2nd step circuit during the primary check. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1846/61	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the curtain shield squib LH 2nd step circuit for 2 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1847/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly
B1848/61	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the curtain shield squib LH 2nd step circuit for 0.5 seconds. • A curtain shield squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Curtain shield airbag assembly LH (Curtain shield squib LH 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

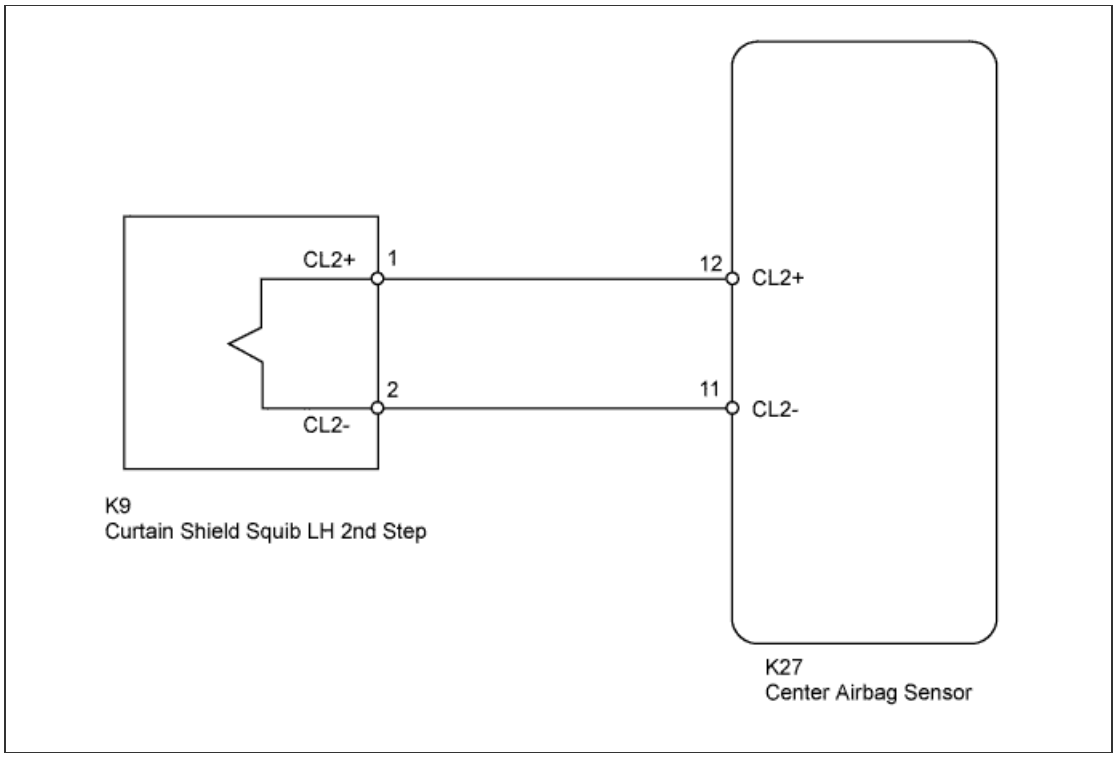

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK CURTAIN SHIELD AIRBAG LH (CURTAIN SHIELD SQUIB LH 2ND STEP)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the curtain shield squib LH 2nd step.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the curtain shield airbag LH (curtain shield squib LH 2nd step) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

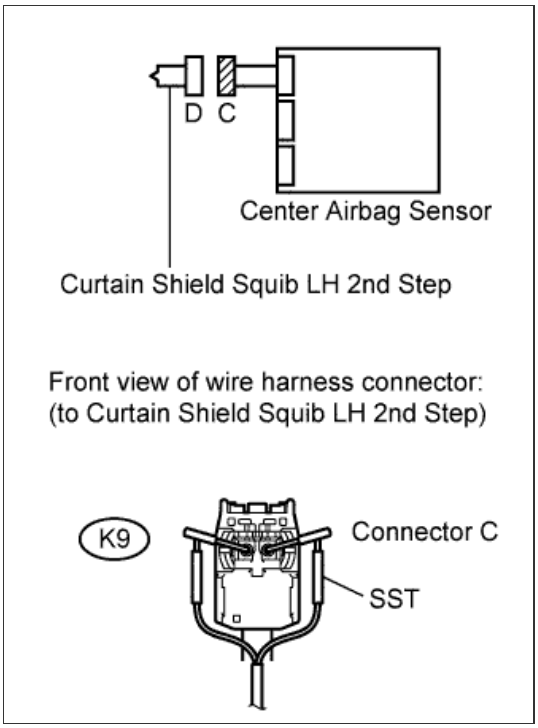

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE CURTAIN SHIELD AIRBAG ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connectors (on the curtain shield squib LH 2nd step side) are not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (CURTAIN SHIELD SQUIB LH 2ND STEP CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K9-1 (CL2+) - Body ground	Engine switch on (IG)	Below 1 V
K9-2 (CL2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K9-1 (CL2+) - K9-2 (CL2-)	Always	1 MΩ or higher
K9-1 (CL2+) - Body ground	Always	1 MΩ or higher
K9-2 (CL2-) - Body	Always	1 MΩ or higher

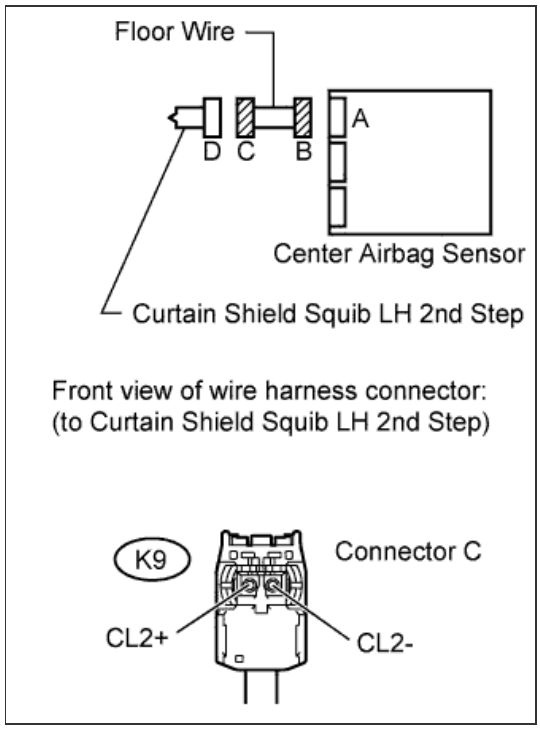

ground		

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the curtain shield squib LH 2nd step and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

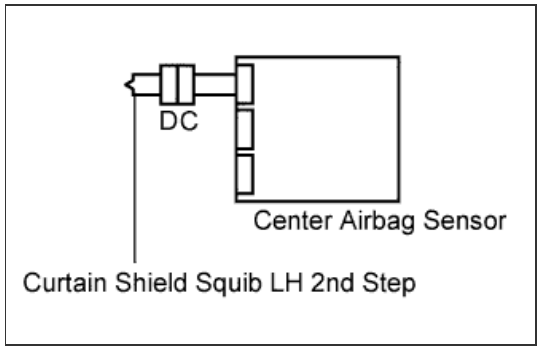

OK:

DTC B1845, B1846, B1847 or B1848 is not output.

HINT:

Codes other than DTC B1845, B1846, B1847 and B1848 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1638/82 Rear Airbag Sensor Assembly LH Initialization Incomplete

DTC B1643/81 Side Satellite Sensor Bus RH Initialization Incomplete

DTC B1648/82 Side Satellite Sensor Bus LH Initialization Incomplete

DTC B1693/81 Door Side Airbag Sensor RH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1693/81 or B1648/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH and curtain shield airbag LH or RH).
  DTC B1643/81 or B1638/82 is stored when a malfunction is detected in the circuit for the rear collision sensor LH or RH (to determine deployment of the rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1638/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor LH (to determine deployment of the rear side seat airbag LH and curtain shield airbag LH) for 2 seconds. • A rear airbag sensor LH malfunction. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear airbag sensor LH • Side airbag sensor LH • Center airbag sensor assembly
B1643/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor RH (to determine deployment of the rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A rear airbag sensor RH malfunction. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear airbag sensor RH • Side airbag sensor RH • Center airbag sensor assembly
B1648/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds.	• No. 2 floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1693/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

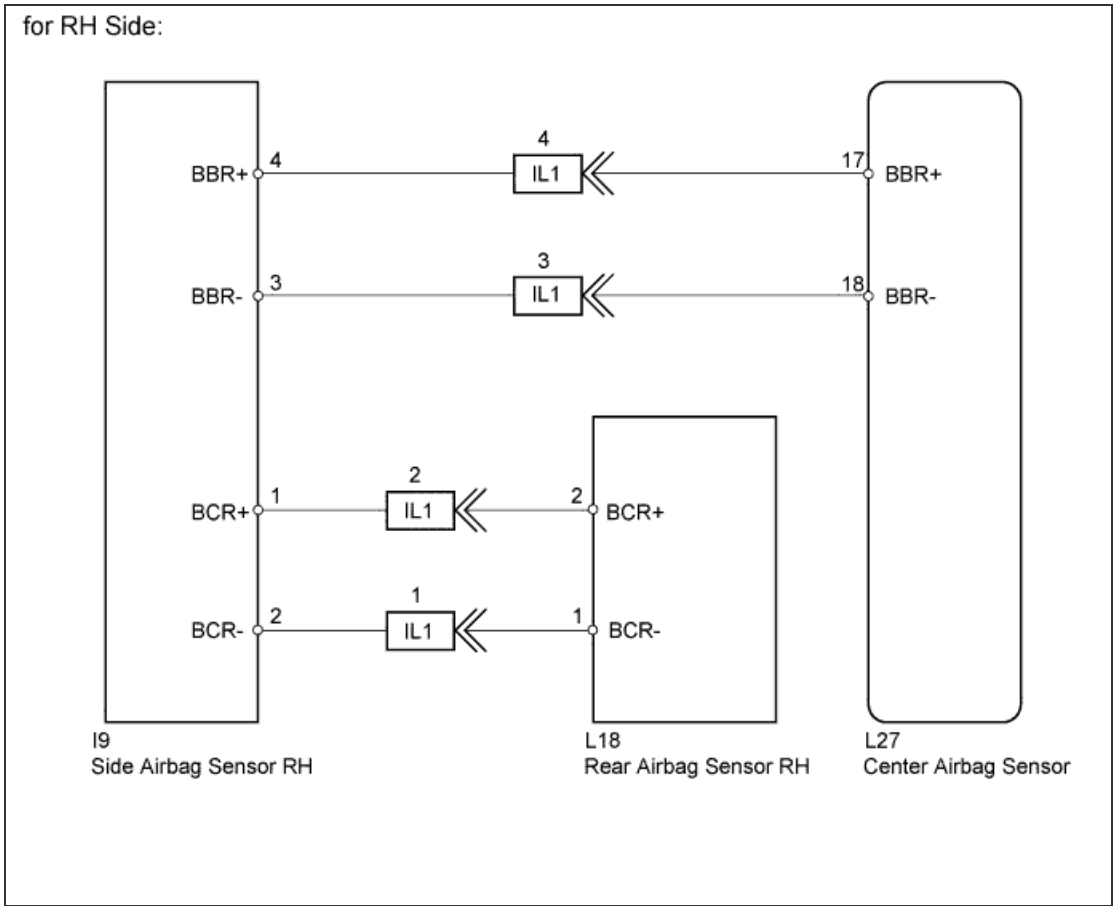

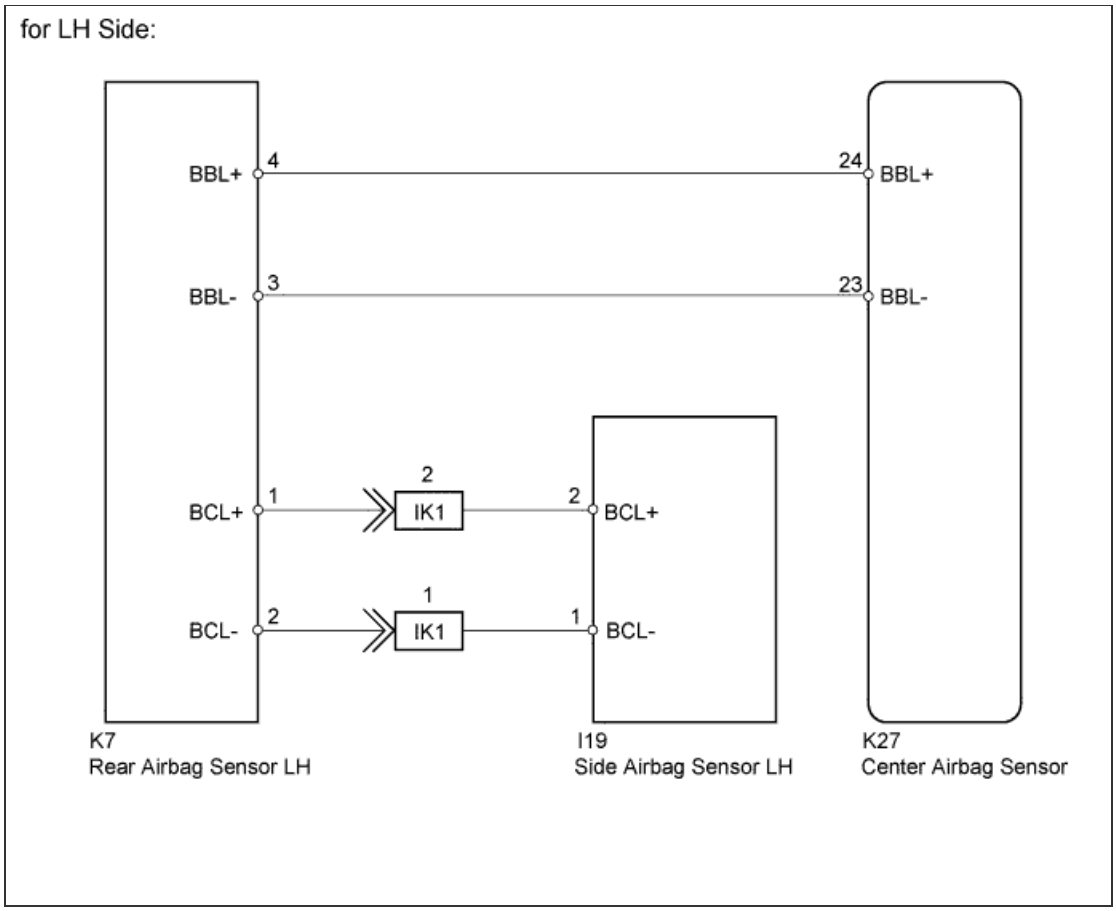

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK PAST DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1637 or B1692 is output	A
DTC B1632 or B1697 is output	B
DTC B1632, B1637, B1692 and B1697 are not output	C

A → GO TO DTC B1637 (Click here)

B → GO TO DTC B1632 (Click here)

C

2.CHECK FOR DTC

a. Turn the engine switch off.

HINT:

If a communication error occurs, DTCs for both the LH and RH sides will be stored simultaneously. The malfunctioning area can be identified by turning the engine switch off and then on (IG) again.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638, B1643, B1648 and B1693 are not output	A
DTC B1638 or B1648 is output	B
DTC B1643 or B1693 is output	C

HINT:

Codes other than DTC B1638, B1643,B1648 and B1693 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 13

C

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

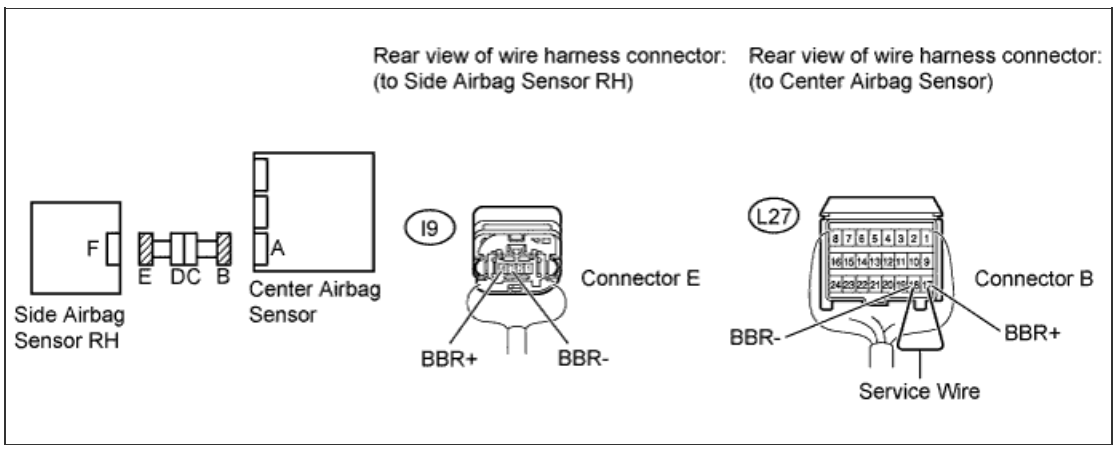

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

6.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

7.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.


b. Check that the connector (on the rear airbag sensor RH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

8.CHECK REAR AIRBAG SENSOR RH CIRCUIT

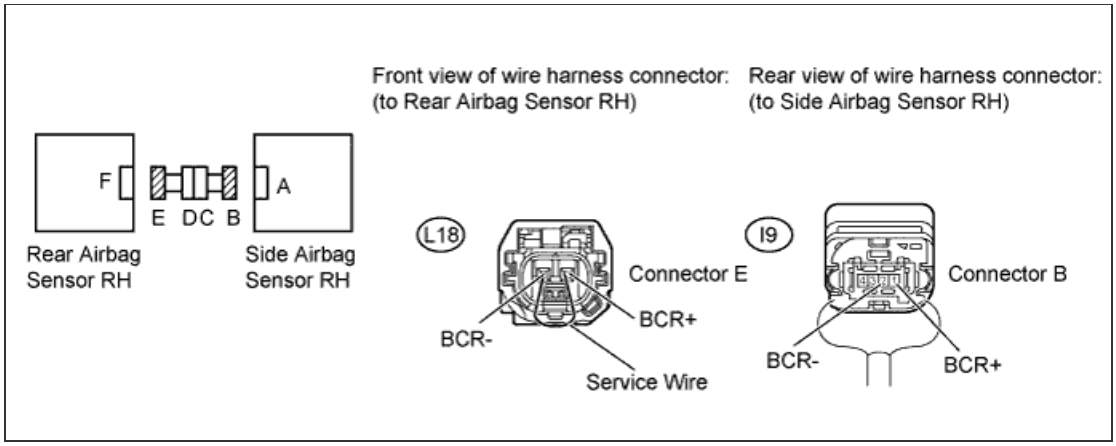

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 12

OK

9.CHECK SIDE AIRBAG SENSOR RH

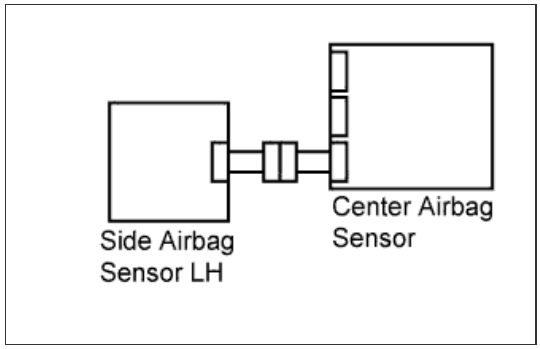

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1643, B1693 and B1698 are not output	A
DTC B1698 is output	B
DTC B1643 and B1693 are output	C

HINT:

Codes other than DTC B1643,B1693 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

10.CHECK REAR AIRBAG SENSOR RH

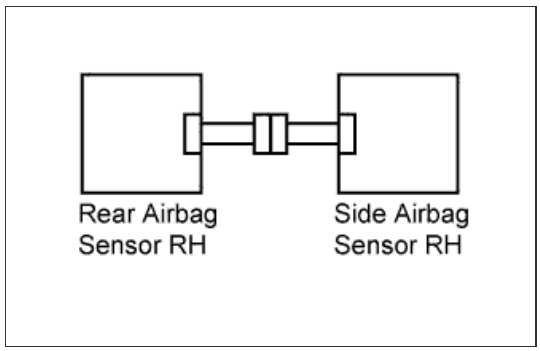

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:

DTC B1643 or B1693 is not output.

HINT:

Codes other than DTC B1643 and B1693 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

11.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

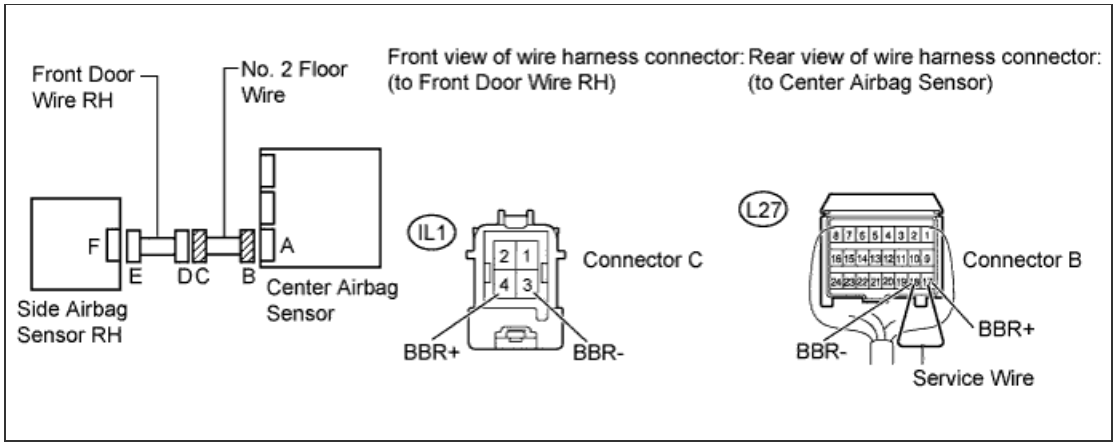

a. Disconnect the No. 2 floor wire from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE RH

12.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

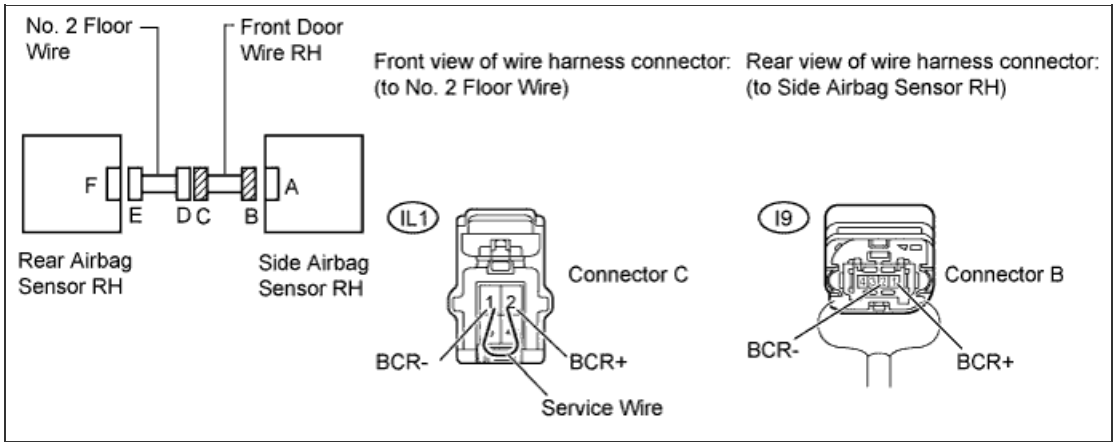

a. Disconnect the front door wire RH from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

13.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

14.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

15.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

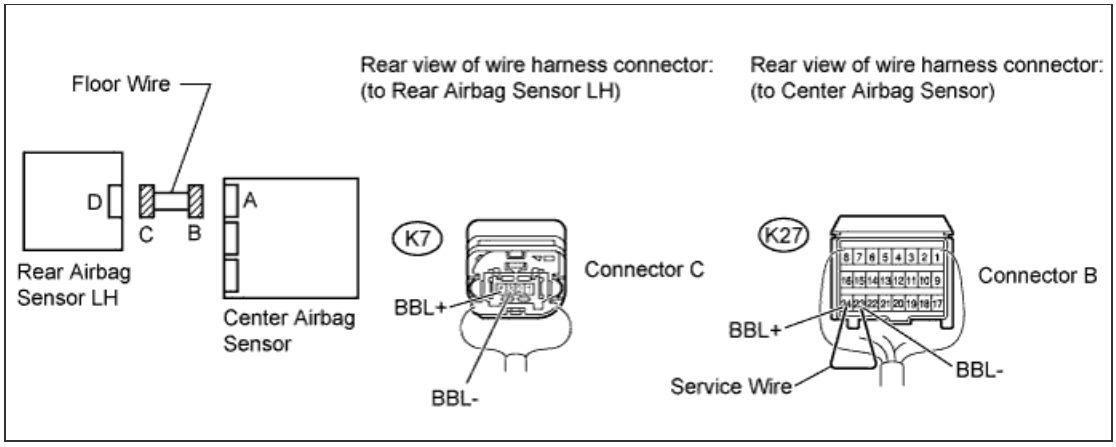

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

		Specified

Tester Connection	Condition	Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

16.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

17.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

18.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

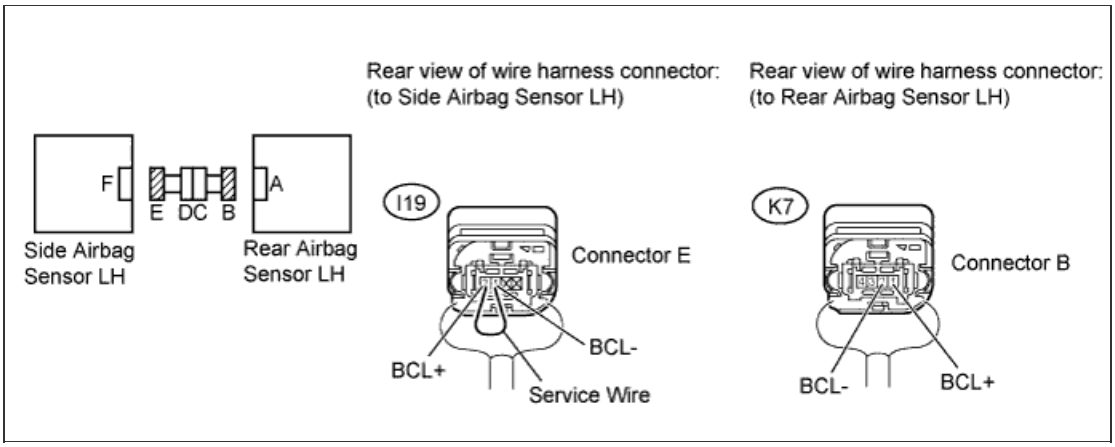

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 21

OK

19.CHECK REAR AIRBAG SENSOR LH

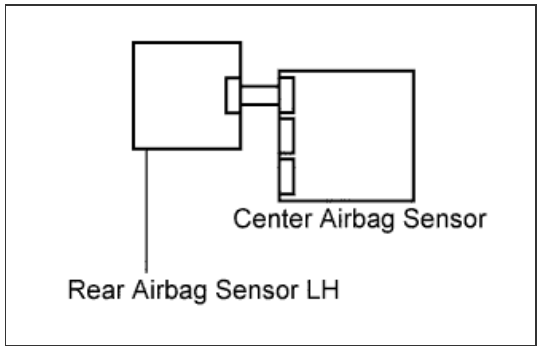

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1638 or B1648 is not output.

HINT:

Codes other than DTC B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 20

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

20.CHECK SIDE AIRBAG SENSOR LH

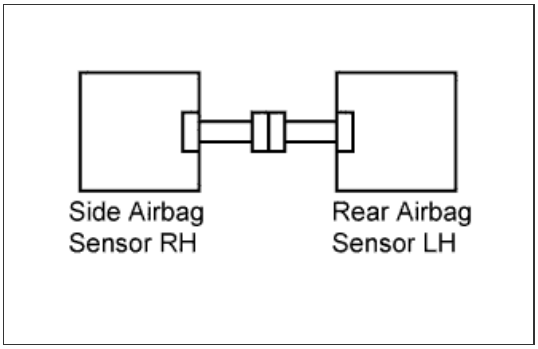

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 90 seconds.

g. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638 or B1648 is output	A
DTC B1633 is output	B
DTC B1633, B1638 and B1648 are not output	C

HINT:

Codes other than DTC B1633, B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

21.CHECK FLOOR WIRE (REAR AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

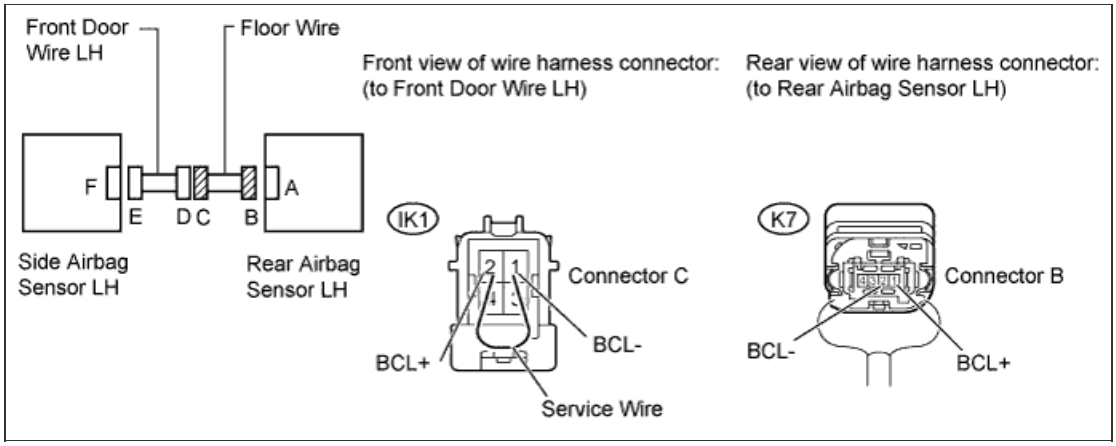

a. Disconnect the floor wire from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1850/62 Short in Rear Side Squib RH Circuit

DTC B1851/62 Open in Rear Side Squib RH Circuit

DTC B1852/62 Short to GND in Rear Side Squib RH Circuit

DTC B1853/62 Short to B+ in Rear Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib RH circuit consists of the center airbag sensor and the rear seat side airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1850/62	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib RH circuit during the primary check. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1851/62	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib RH circuit for 2 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1852/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1853/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

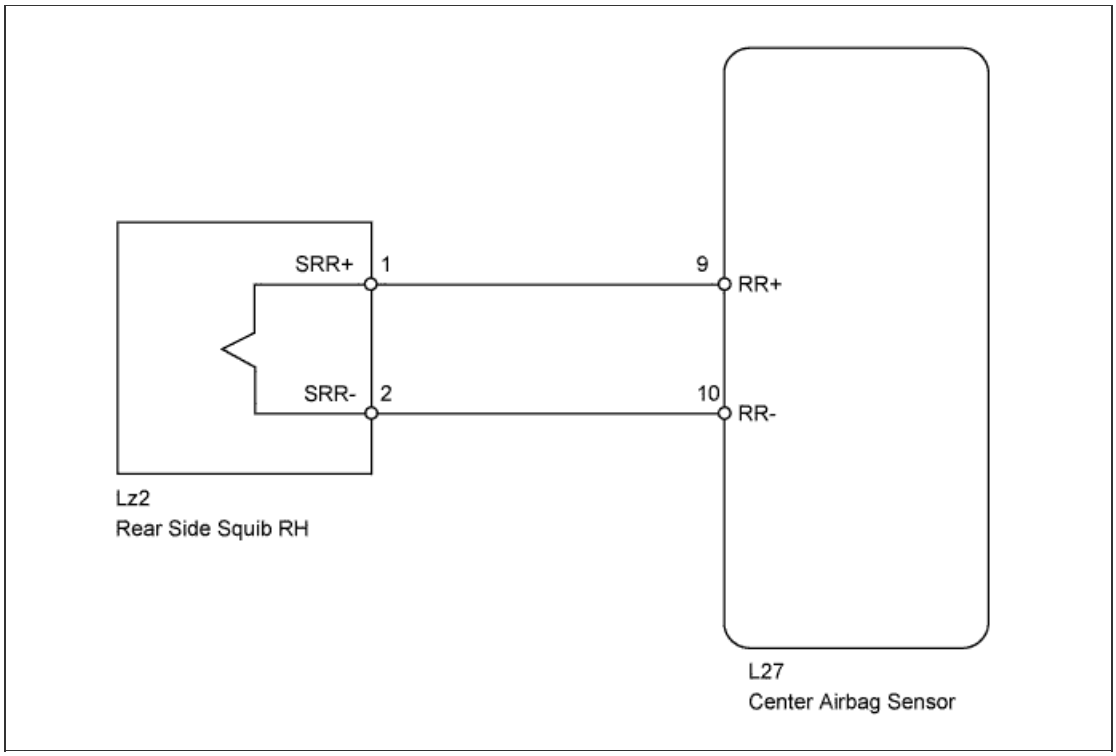

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG RH (REAR SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag RH (rear side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

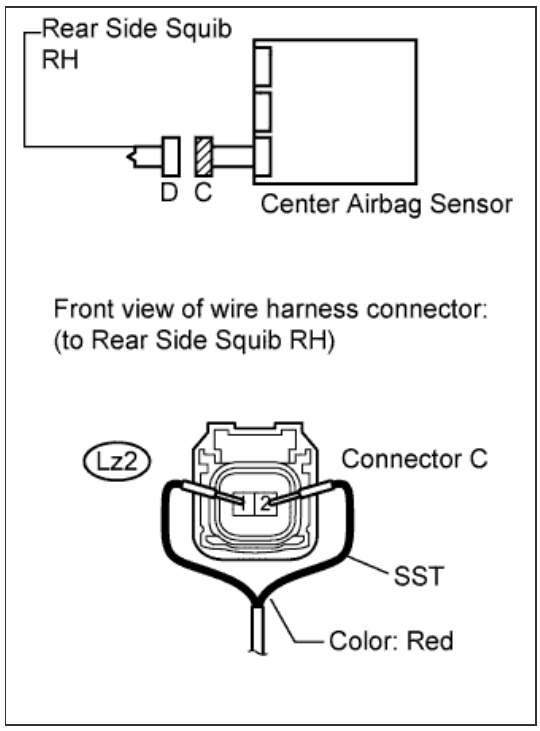

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1850 B1851 B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (REAR SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST (resistance: 2.1 Ω) from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

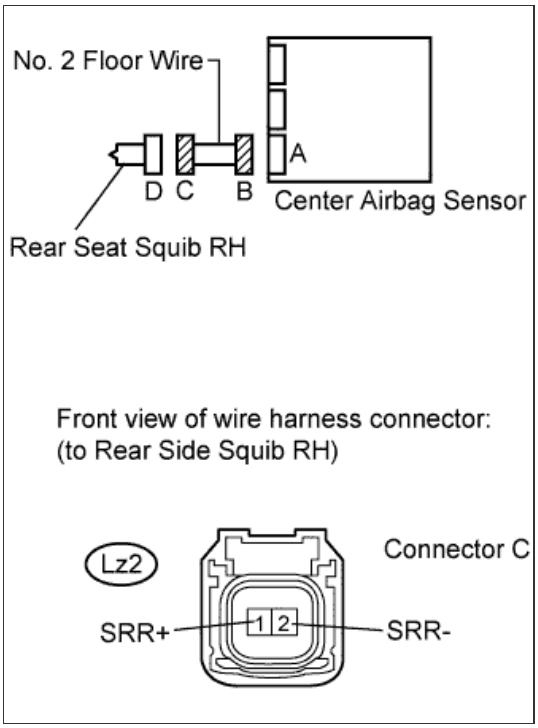

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz2-1 (SRR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz2-2 (SRR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	1 MΩ or higher
Lz2-1 (SRR+) - Body ground	Always	1 MΩ or higher
Lz2-2 (SRR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

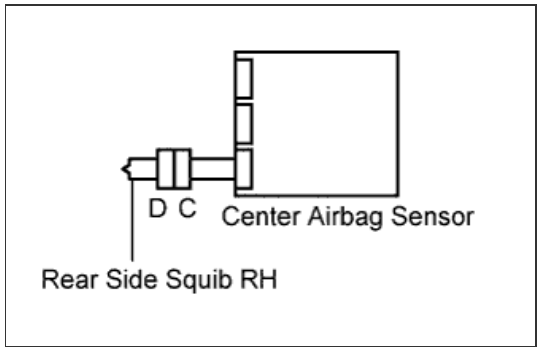

OK:

DTC B1850, B1851, B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1638/82 Rear Airbag Sensor Assembly LH Initialization Incomplete

DTC B1643/81 Side Satellite Sensor Bus RH Initialization Incomplete

DTC B1648/82 Side Satellite Sensor Bus LH Initialization Incomplete

DTC B1693/81 Door Side Airbag Sensor RH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1693/81 or B1648/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH and curtain shield airbag LH or RH).
  DTC B1643/81 or B1638/82 is stored when a malfunction is detected in the circuit for the rear collision sensor LH or RH (to determine deployment of the rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1638/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor LH (to determine deployment of the rear side seat airbag LH and curtain shield airbag LH) for 2 seconds. • A rear airbag sensor LH malfunction. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear airbag sensor LH • Side airbag sensor LH • Center airbag sensor assembly
B1643/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor RH (to determine deployment of the rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A rear airbag sensor RH malfunction. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear airbag sensor RH • Side airbag sensor RH • Center airbag sensor assembly
B1648/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds.	• No. 2 floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1693/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

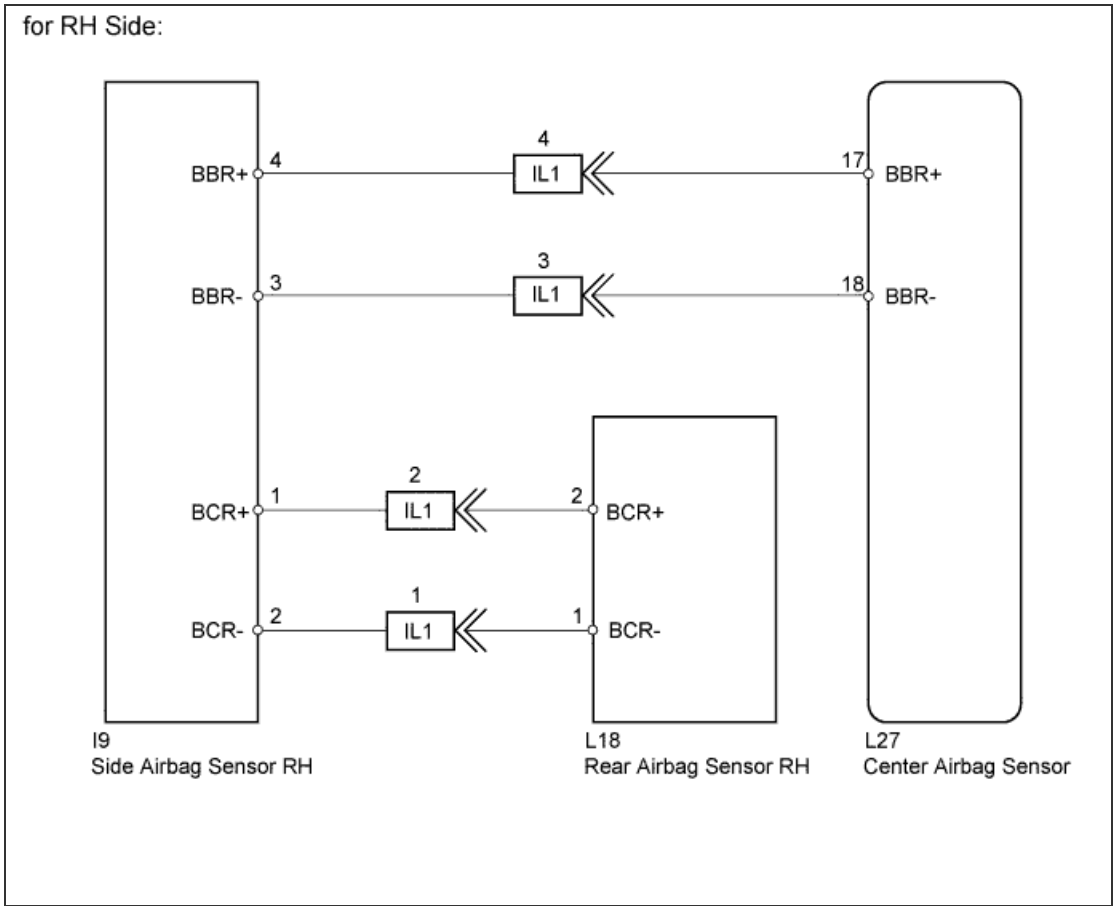

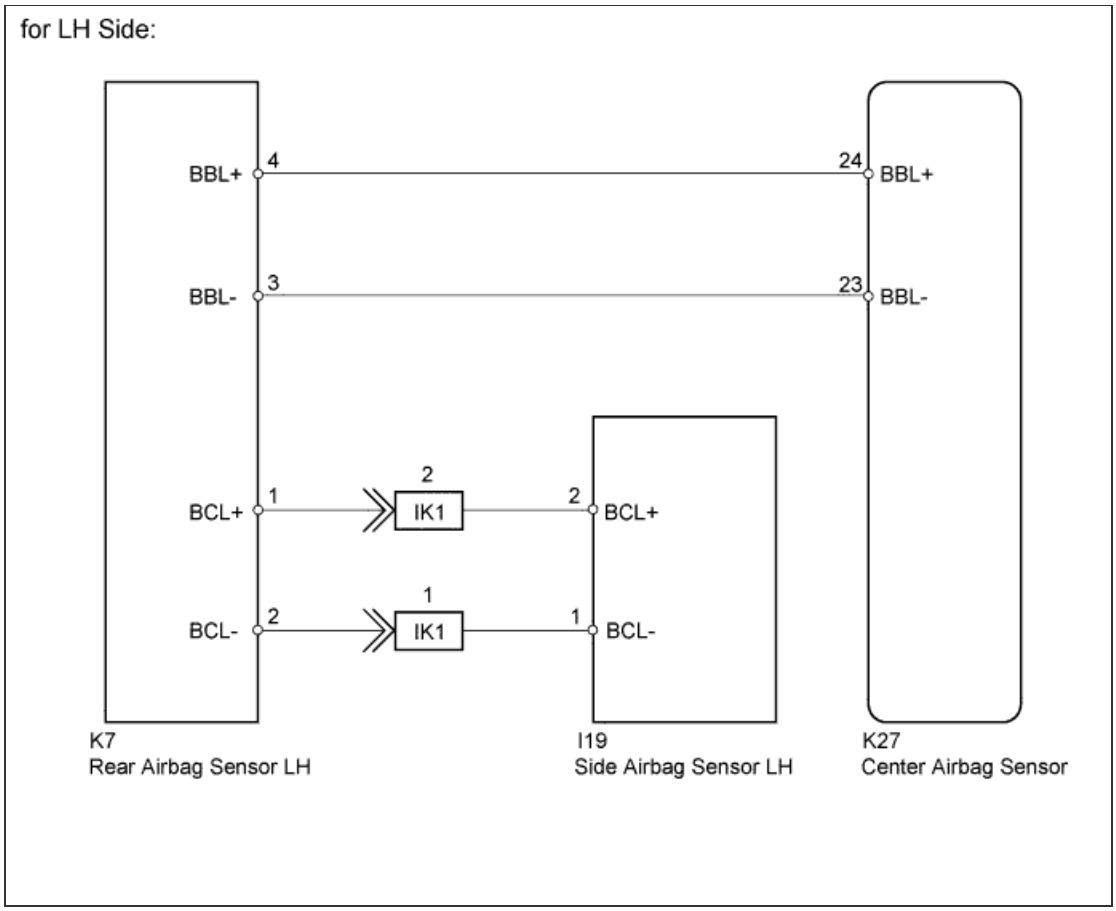

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK PAST DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1637 or B1692 is output	A
DTC B1632 or B1697 is output	B
DTC B1632, B1637, B1692 and B1697 are not output	C

A → GO TO DTC B1637 (Click here)

B → GO TO DTC B1632 (Click here)

C

2.CHECK FOR DTC

a. Turn the engine switch off.

HINT:

If a communication error occurs, DTCs for both the LH and RH sides will be stored simultaneously. The malfunctioning area can be identified by turning the engine switch off and then on (IG) again.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638, B1643, B1648 and B1693 are not output	A
DTC B1638 or B1648 is output	B
DTC B1643 or B1693 is output	C

HINT:

Codes other than DTC B1638, B1643,B1648 and B1693 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 13

C

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

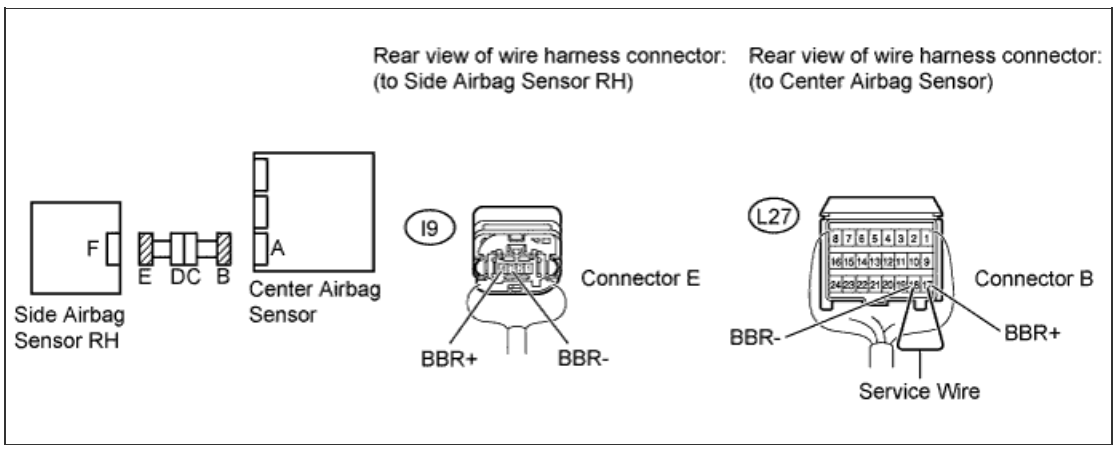

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

6.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

7.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.


b. Check that the connector (on the rear airbag sensor RH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

8.CHECK REAR AIRBAG SENSOR RH CIRCUIT

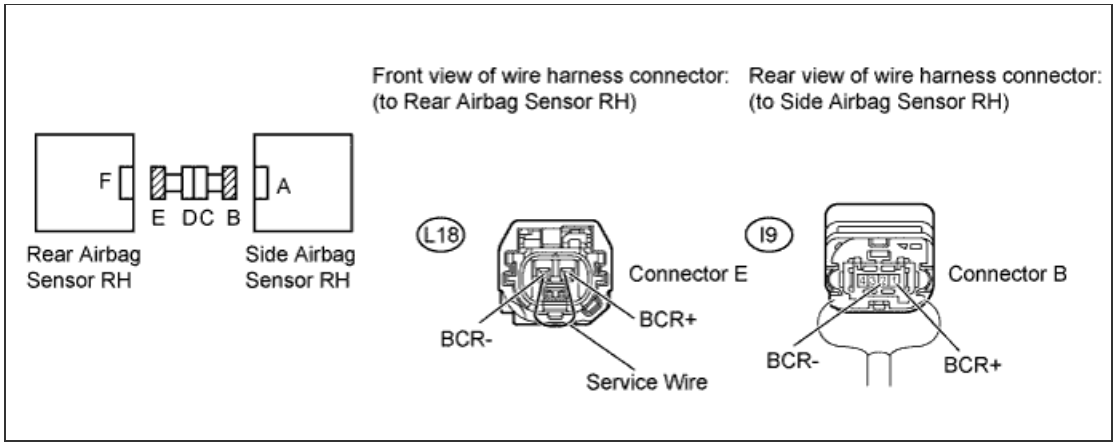

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 12

OK

9.CHECK SIDE AIRBAG SENSOR RH

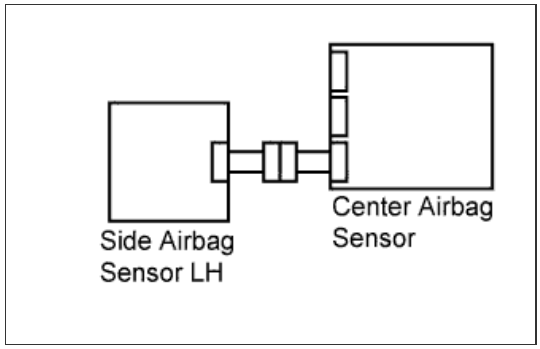

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1643, B1693 and B1698 are not output	A
DTC B1698 is output	B
DTC B1643 and B1693 are output	C

HINT:

Codes other than DTC B1643,B1693 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

10.CHECK REAR AIRBAG SENSOR RH

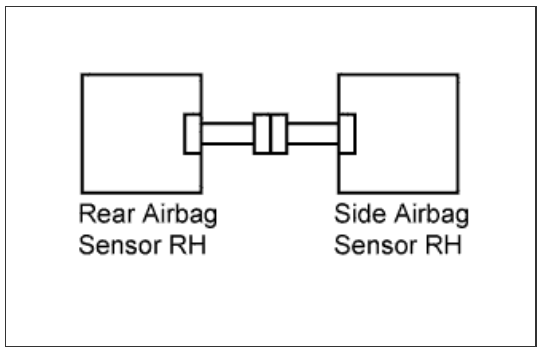

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:

DTC B1643 or B1693 is not output.

HINT:

Codes other than DTC B1643 and B1693 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

11.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

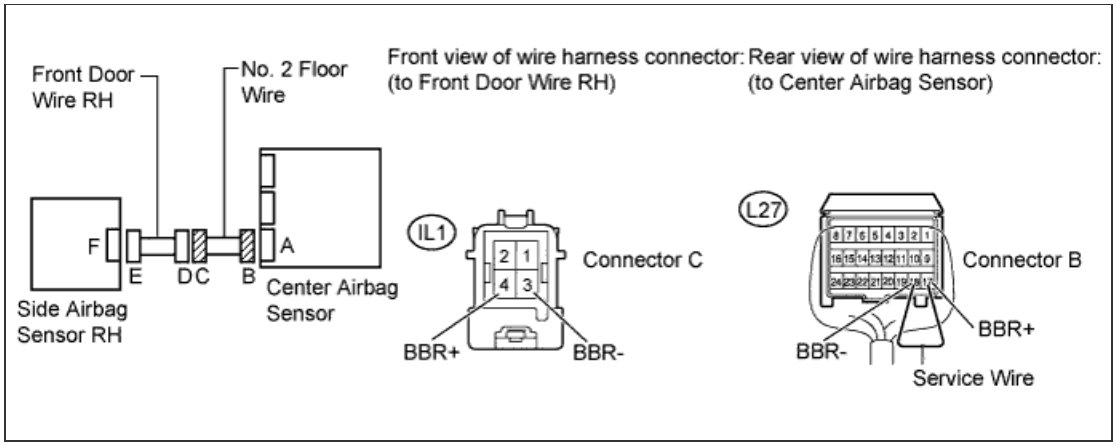

a. Disconnect the No. 2 floor wire from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE RH

12.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

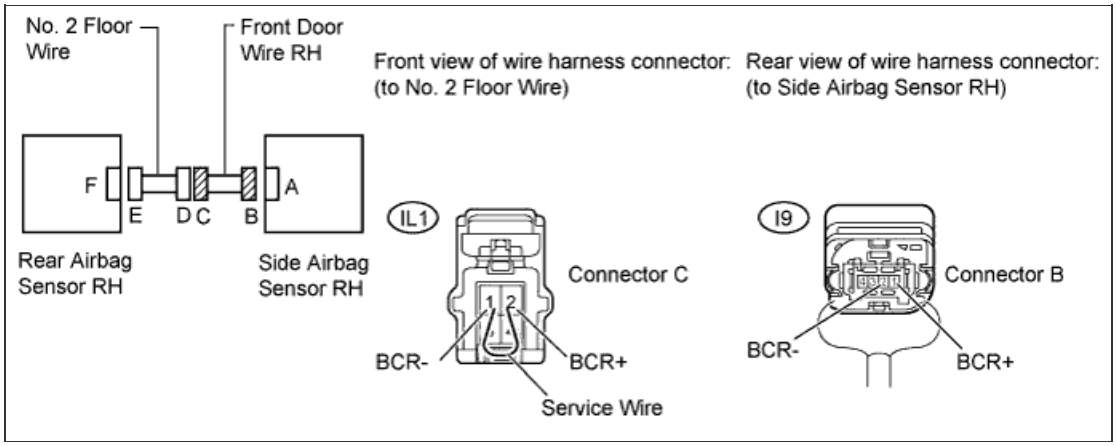

a. Disconnect the front door wire RH from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

13.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

14.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

15.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

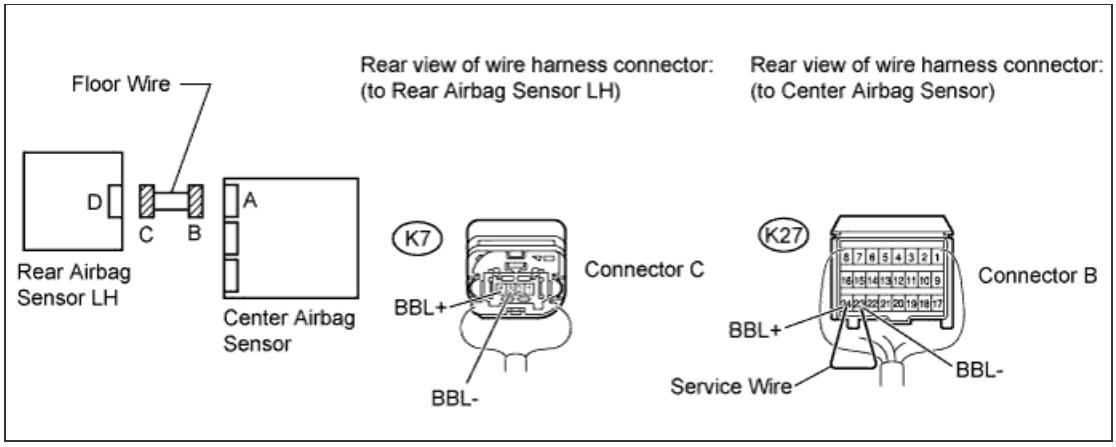

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

		Specified

Tester Connection	Condition	Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

16.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

17.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

18.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

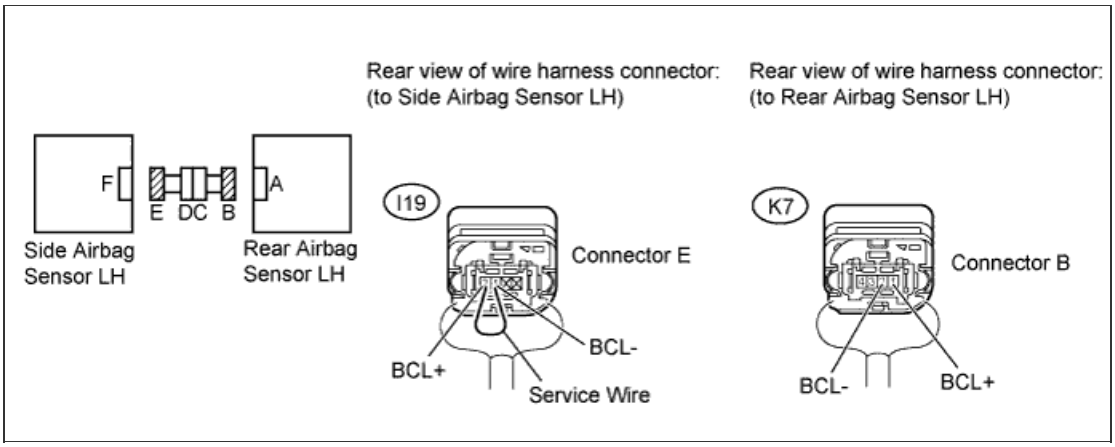

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 21

OK

19.CHECK REAR AIRBAG SENSOR LH

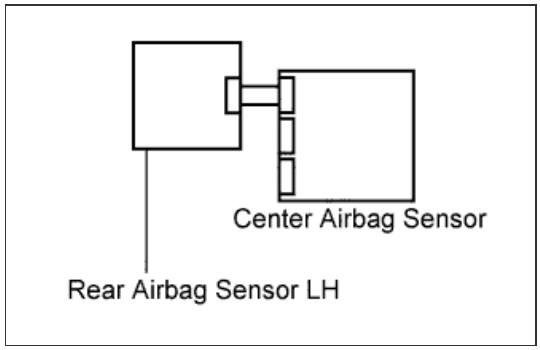

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1638 or B1648 is not output.

HINT:

Codes other than DTC B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 20

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

20.CHECK SIDE AIRBAG SENSOR LH

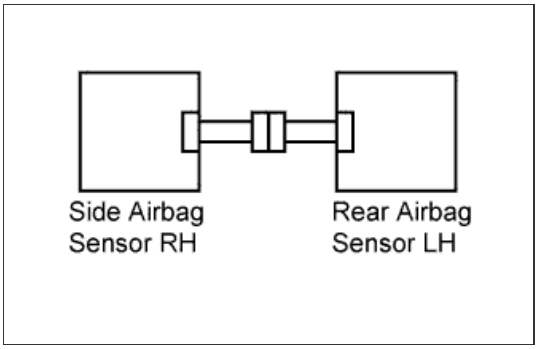

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 90 seconds.

g. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638 or B1648 is output	A
DTC B1633 is output	B
DTC B1633, B1638 and B1648 are not output	C

HINT:

Codes other than DTC B1633, B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

21.CHECK FLOOR WIRE (REAR AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

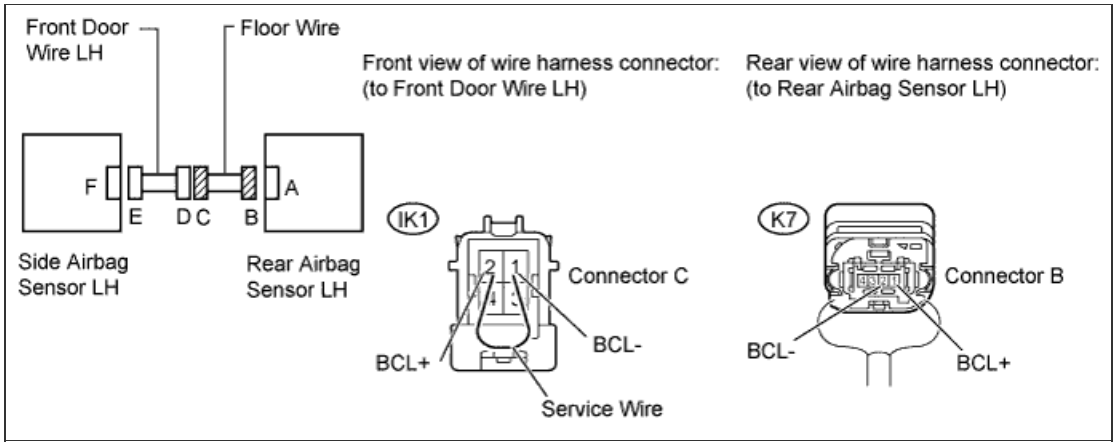

a. Disconnect the floor wire from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1850/62 Short in Rear Side Squib RH Circuit

DTC B1851/62 Open in Rear Side Squib RH Circuit

DTC B1852/62 Short to GND in Rear Side Squib RH Circuit

DTC B1853/62 Short to B+ in Rear Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib RH circuit consists of the center airbag sensor and the rear seat side airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1850/62	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib RH circuit during the primary check. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1851/62	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib RH circuit for 2 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1852/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1853/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

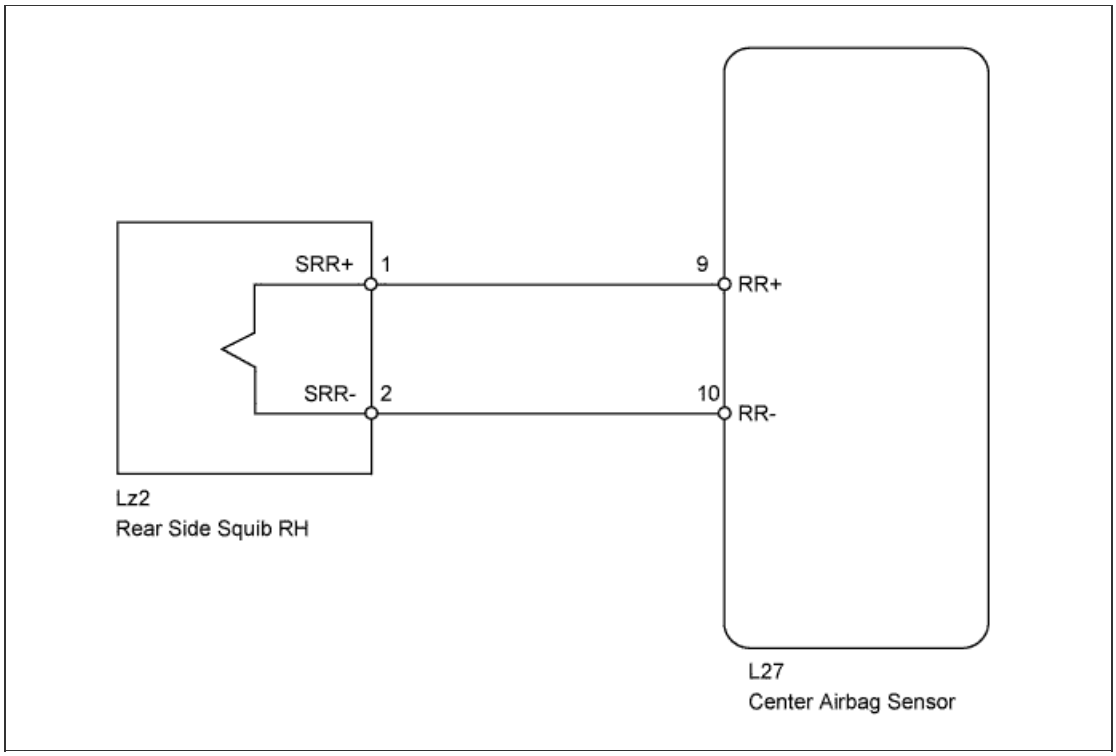

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG RH (REAR SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag RH (rear side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

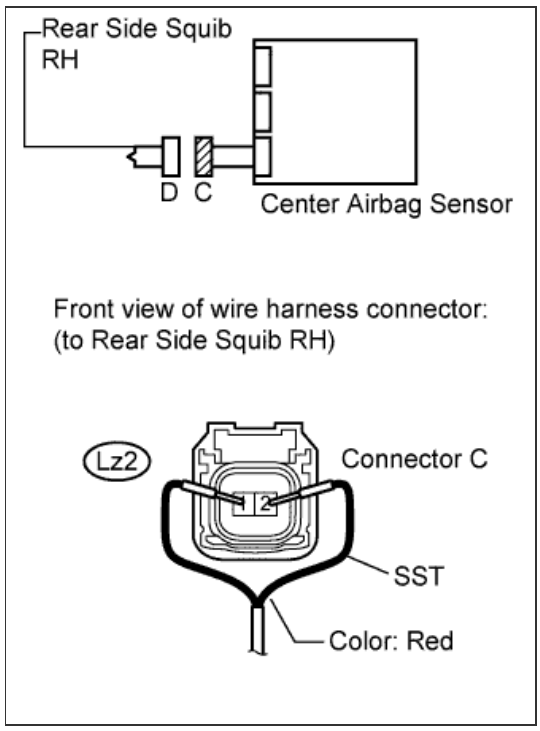

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1850 B1851 B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (REAR SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST (resistance: 2.1 Ω) from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

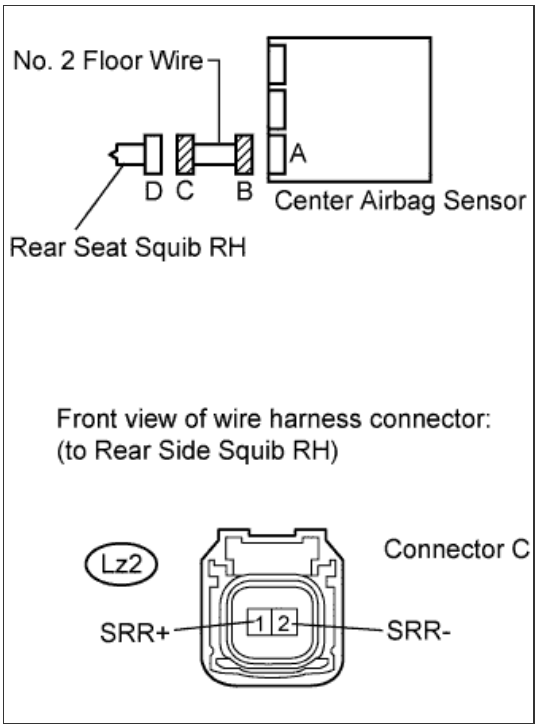

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz2-1 (SRR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz2-2 (SRR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	1 MΩ or higher
Lz2-1 (SRR+) - Body ground	Always	1 MΩ or higher
Lz2-2 (SRR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

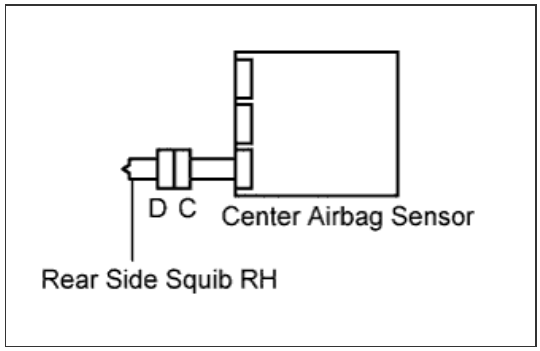

OK:

DTC B1850, B1851, B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1638/82 Rear Airbag Sensor Assembly LH Initialization Incomplete

DTC B1643/81 Side Satellite Sensor Bus RH Initialization Incomplete

DTC B1648/82 Side Satellite Sensor Bus LH Initialization Incomplete

DTC B1693/81 Door Side Airbag Sensor RH Initialization Incomplete

for Preparation Click here

DESCRIPTION

HINT:


"Door side airbag sensor RH" refer to the side airbag sensor RH.


- The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
  The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1693/81 or B1648/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH and curtain shield airbag LH or RH).
  DTC B1643/81 or B1638/82 is stored when a malfunction is detected in the circuit for the rear collision sensor LH or RH (to determine deployment of the rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1638/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor LH (to determine deployment of the rear side seat airbag LH and curtain shield airbag LH) for 2 seconds. • A rear airbag sensor LH malfunction. • A side airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear airbag sensor LH • Side airbag sensor LH • Center airbag sensor assembly
B1643/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the rear collision sensor RH (to determine deployment of the rear seat side airbag RH and curtain shield airbag RH) for 2 seconds. • A rear airbag sensor RH malfunction. • A side airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear airbag sensor RH • Side airbag sensor RH • Center airbag sensor assembly
B1648/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds.	• No. 2 floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

	• A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	
B1693/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly

WIRING DIAGRAM

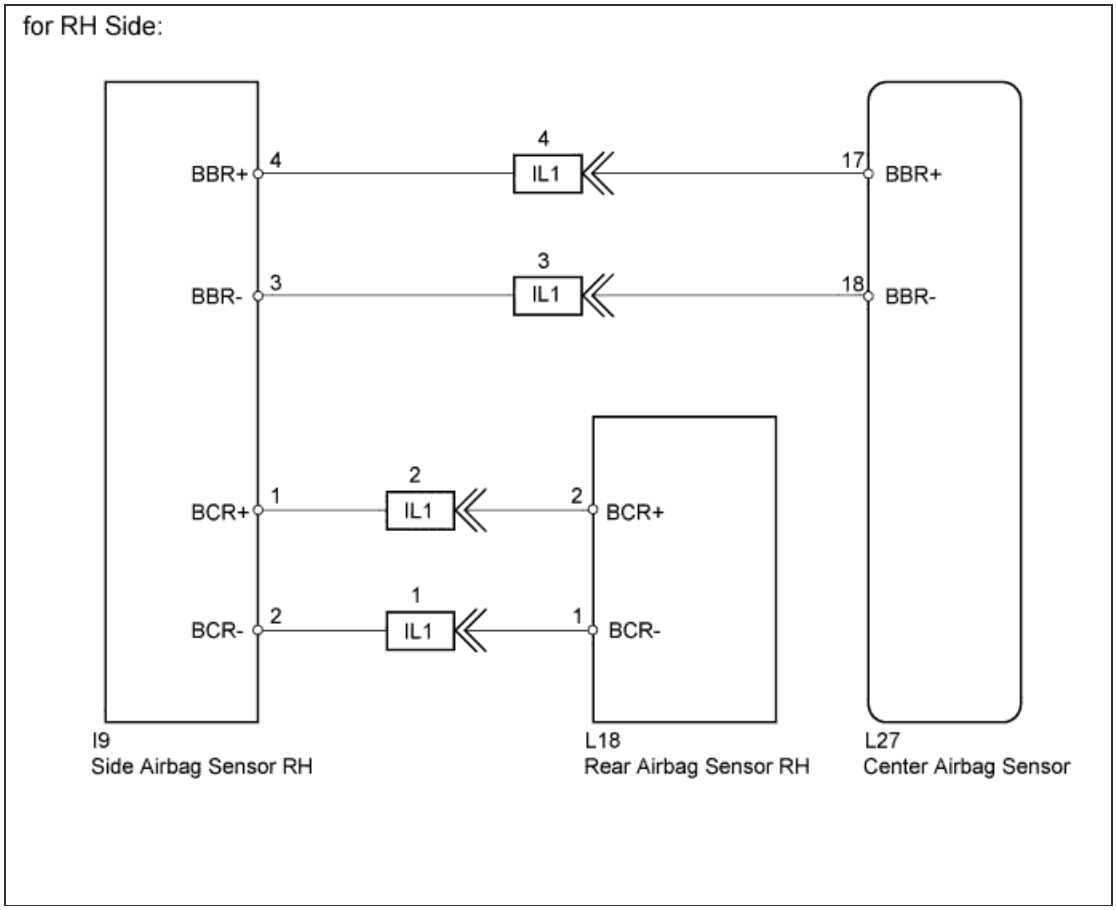

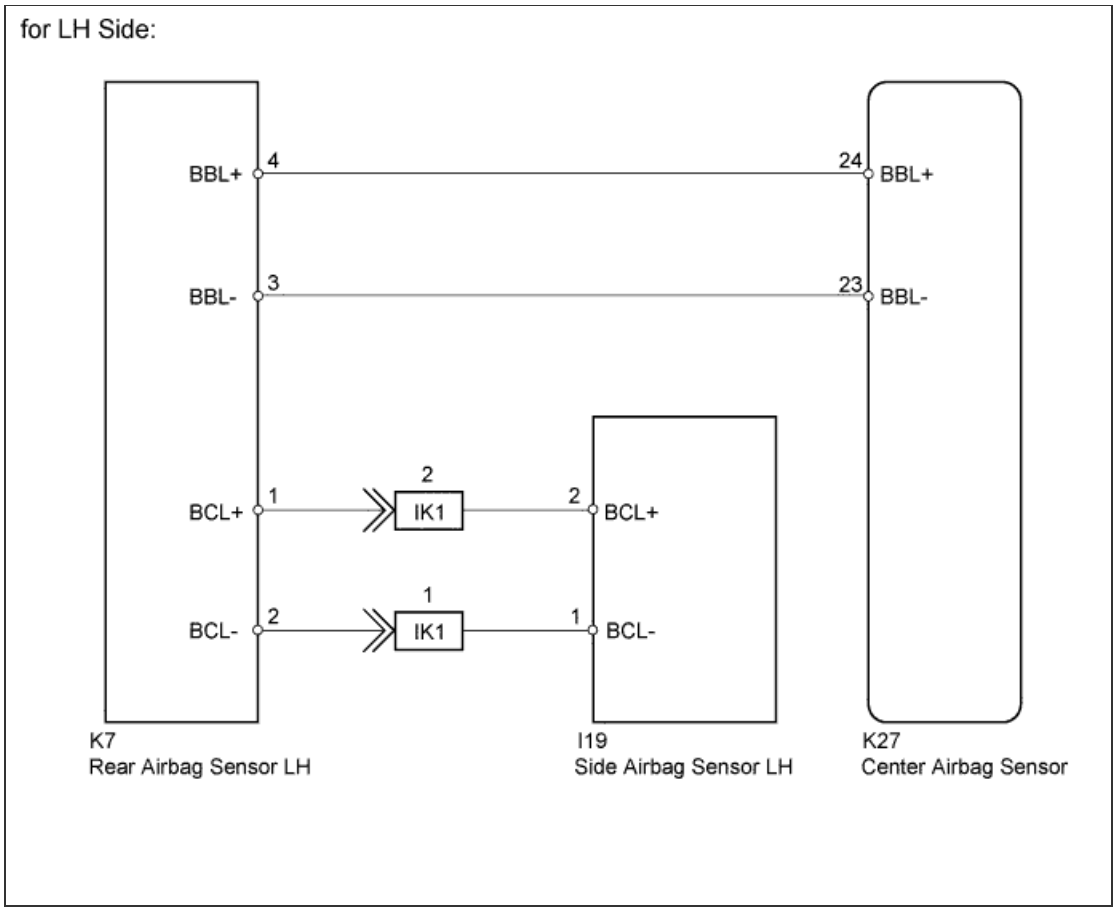

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK PAST DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1637 or B1692 is output	A
DTC B1632 or B1697 is output	B
DTC B1632, B1637, B1692 and B1697 are not output	C

A → GO TO DTC B1637 (Click here)

B → GO TO DTC B1632 (Click here)

C

2.CHECK FOR DTC

a. Turn the engine switch off.

HINT:

If a communication error occurs, DTCs for both the LH and RH sides will be stored simultaneously. The malfunctioning area can be identified by turning the engine switch off and then on (IG) again.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638, B1643, B1648 and B1693 are not output	A
DTC B1638 or B1648 is output	B
DTC B1643 or B1693 is output	C

HINT:

Codes other than DTC B1638, B1643,B1648 and B1693 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 13

C

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

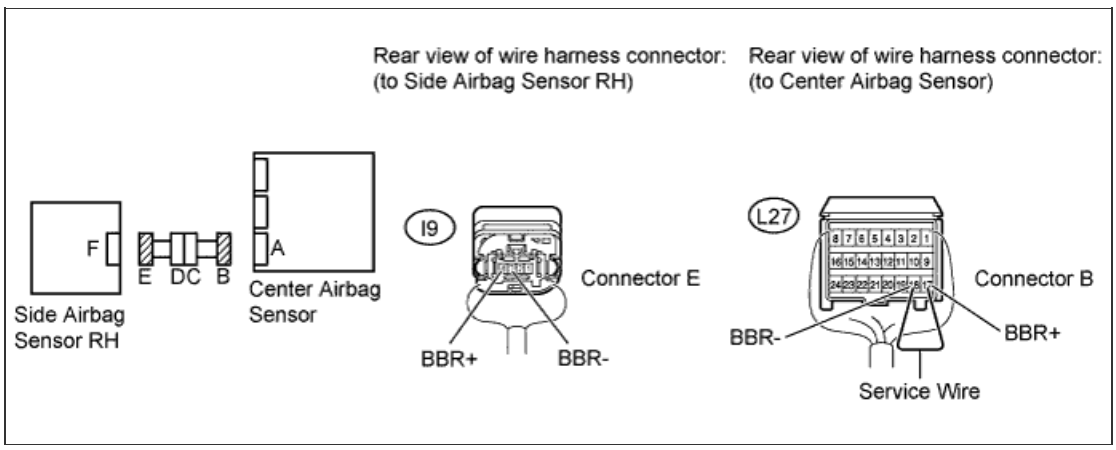

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

6.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

7.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.


b. Check that the connector (on the rear airbag sensor RH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

8.CHECK REAR AIRBAG SENSOR RH CIRCUIT

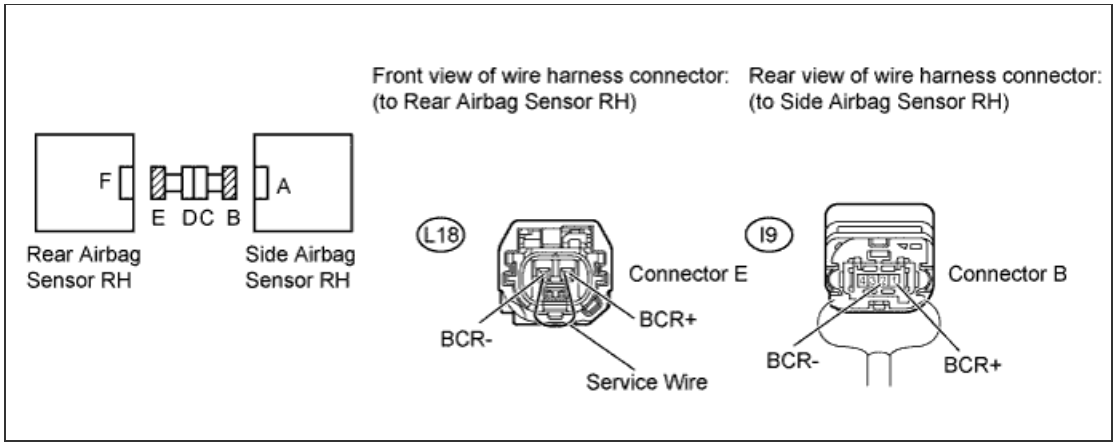

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 12

OK

9.CHECK SIDE AIRBAG SENSOR RH

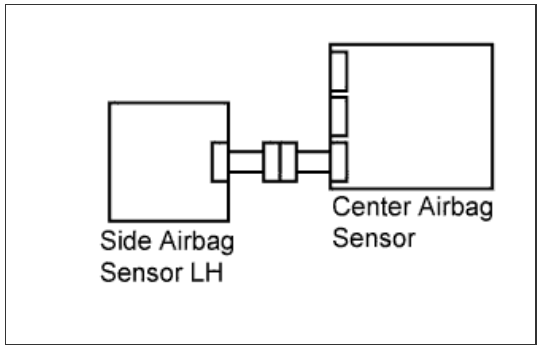

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1643, B1693 and B1698 are not output	A
DTC B1698 is output	B
DTC B1643 and B1693 are output	C

HINT:

Codes other than DTC B1643,B1693 and B1698 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR RH (Click here)

C

10.CHECK REAR AIRBAG SENSOR RH

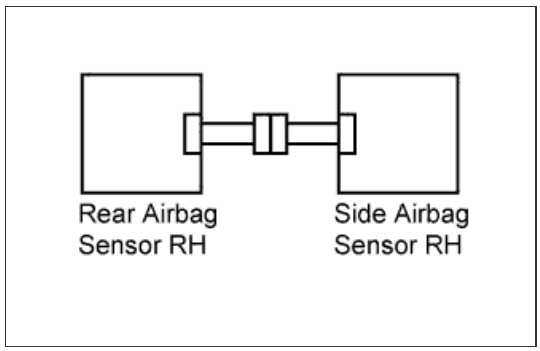

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:

DTC B1643 or B1693 is not output.

HINT:

Codes other than DTC B1643 and B1693 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

11.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

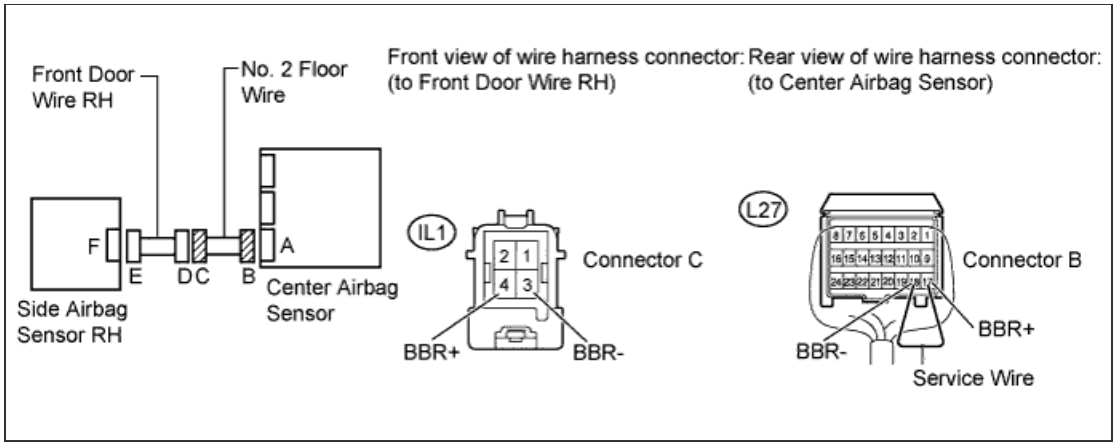

a. Disconnect the No. 2 floor wire from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE RH

12.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

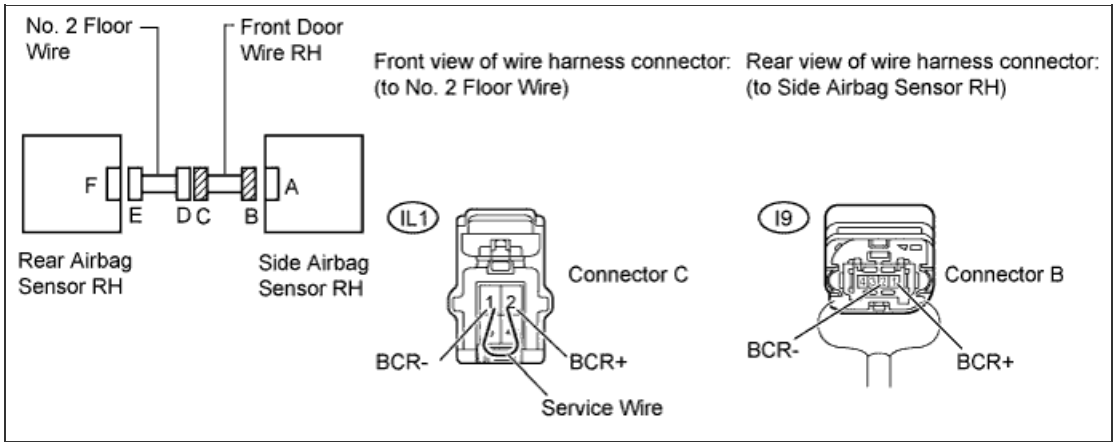

a. Disconnect the front door wire RH from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

13.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

14.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.

b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

15.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

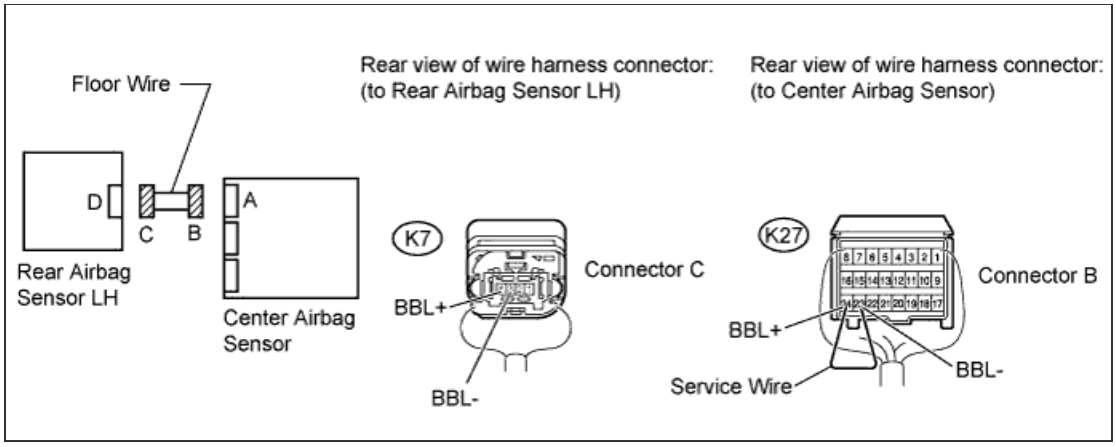

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

		Specified

Tester Connection	Condition	Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

16.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

17.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

18.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

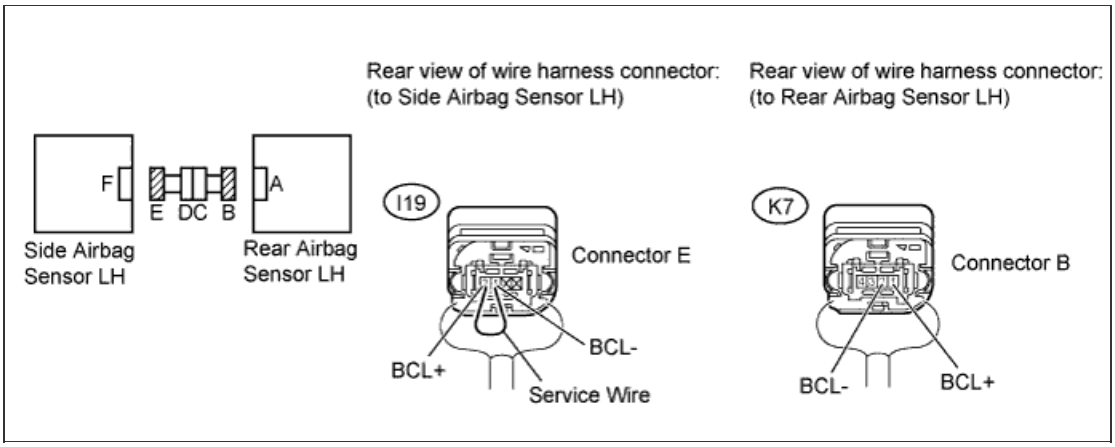

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 21

OK

19.CHECK REAR AIRBAG SENSOR LH

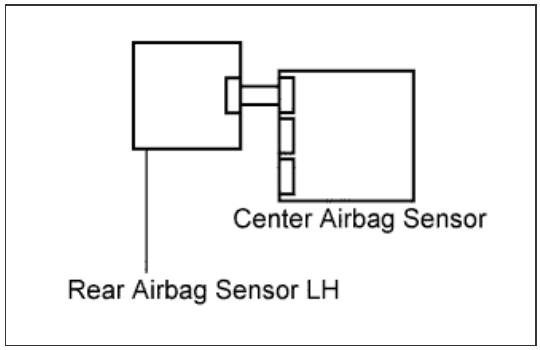

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1638 or B1648 is not output.

HINT:

Codes other than DTC B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.


i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 20

OK

REPLACE REAR AIRBAG SENSOR LH (Click here)

20.CHECK SIDE AIRBAG SENSOR LH

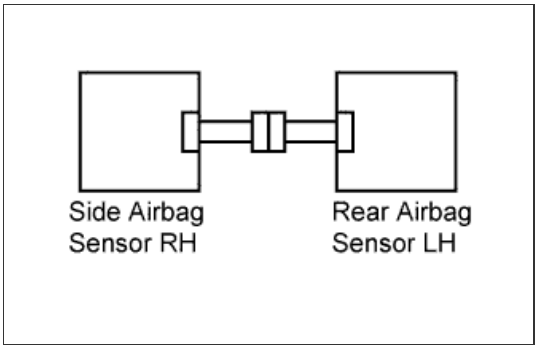

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 90 seconds.

g. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1638 or B1648 is output	A
DTC B1633 is output	B
DTC B1633, B1638 and B1648 are not output	C

HINT:

Codes other than DTC B1633, B1638 and B1648 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the side airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C

USE SIMULATION METHOD TO CHECK (Click here)

21.CHECK FLOOR WIRE (REAR AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

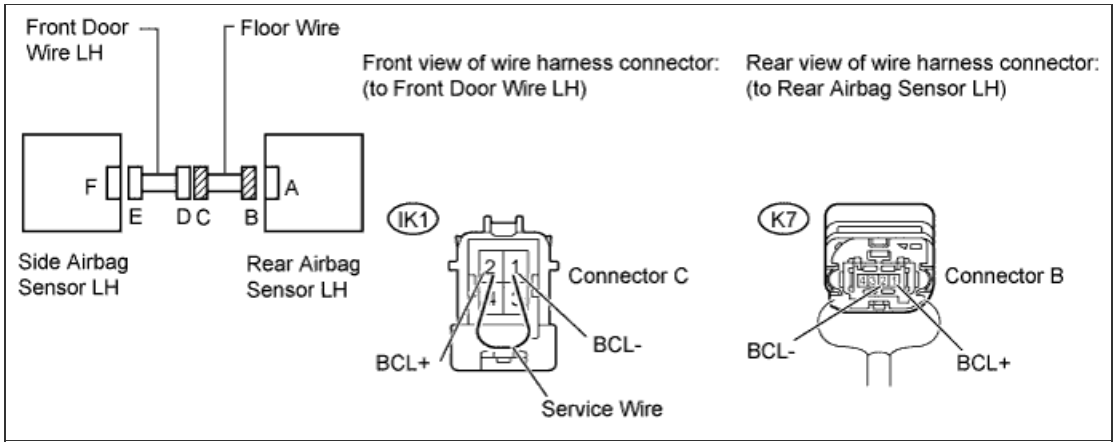

a. Disconnect the floor wire from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1850/62 Short in Rear Side Squib RH Circuit

DTC B1851/62 Open in Rear Side Squib RH Circuit

DTC B1852/62 Short to GND in Rear Side Squib RH Circuit

DTC B1853/62 Short to B+ in Rear Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib RH circuit consists of the center airbag sensor and the rear seat side airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1850/62	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib RH circuit during the primary check. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1851/62	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib RH circuit for 2 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1852/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1853/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

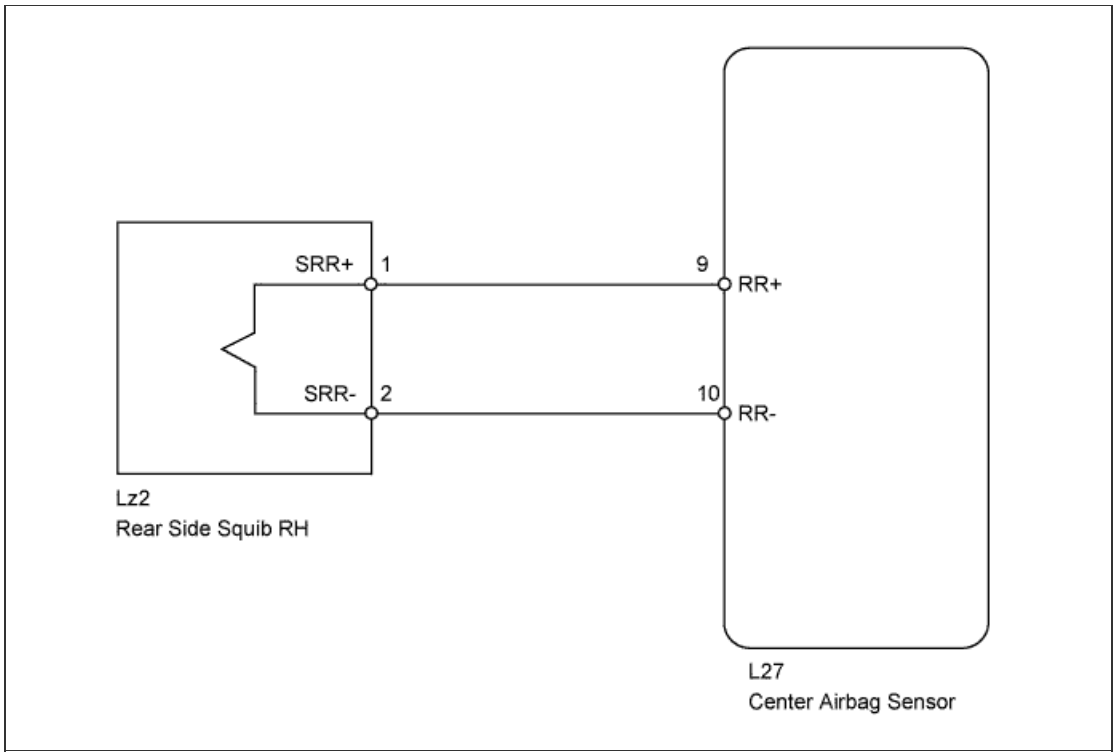

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG RH (REAR SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag RH (rear side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

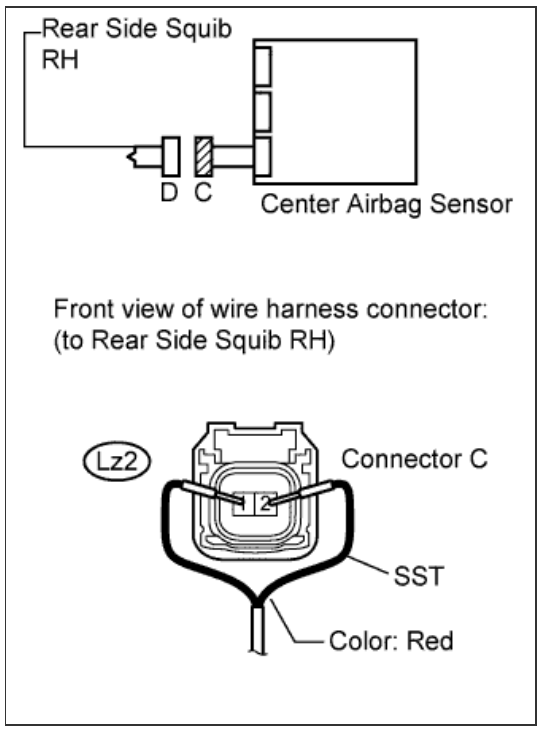

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1850 B1851 B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (REAR SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST (resistance: 2.1 Ω) from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

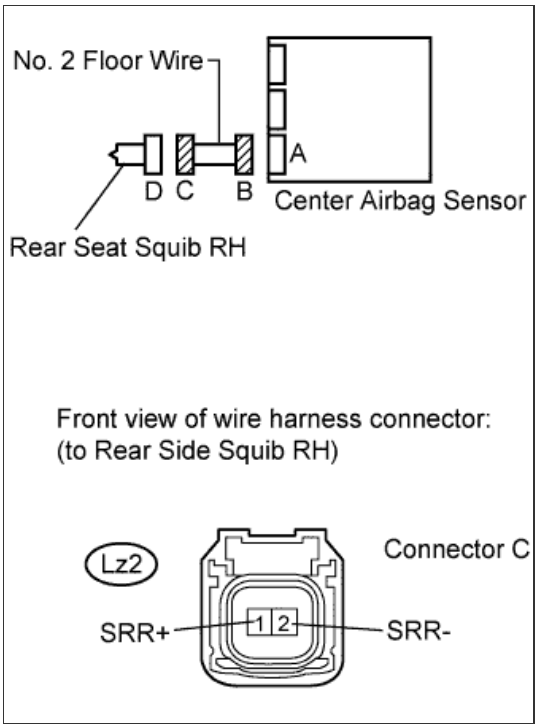

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz2-1 (SRR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz2-2 (SRR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	1 MΩ or higher
Lz2-1 (SRR+) - Body ground	Always	1 MΩ or higher
Lz2-2 (SRR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

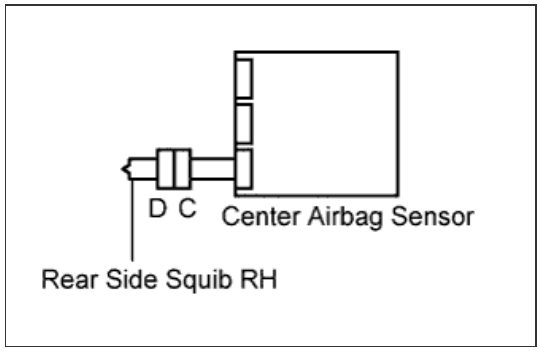

OK:

DTC B1850, B1851, B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1642/81 Lost Communication with Side Satellite Sensor Bus RH

DTC B1647/82 Lost Communication with Side Satellite Sensor Bus LH


for Preparation Click here


DESCRIPTION

The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1642/81 or B1647/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1642/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1647/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

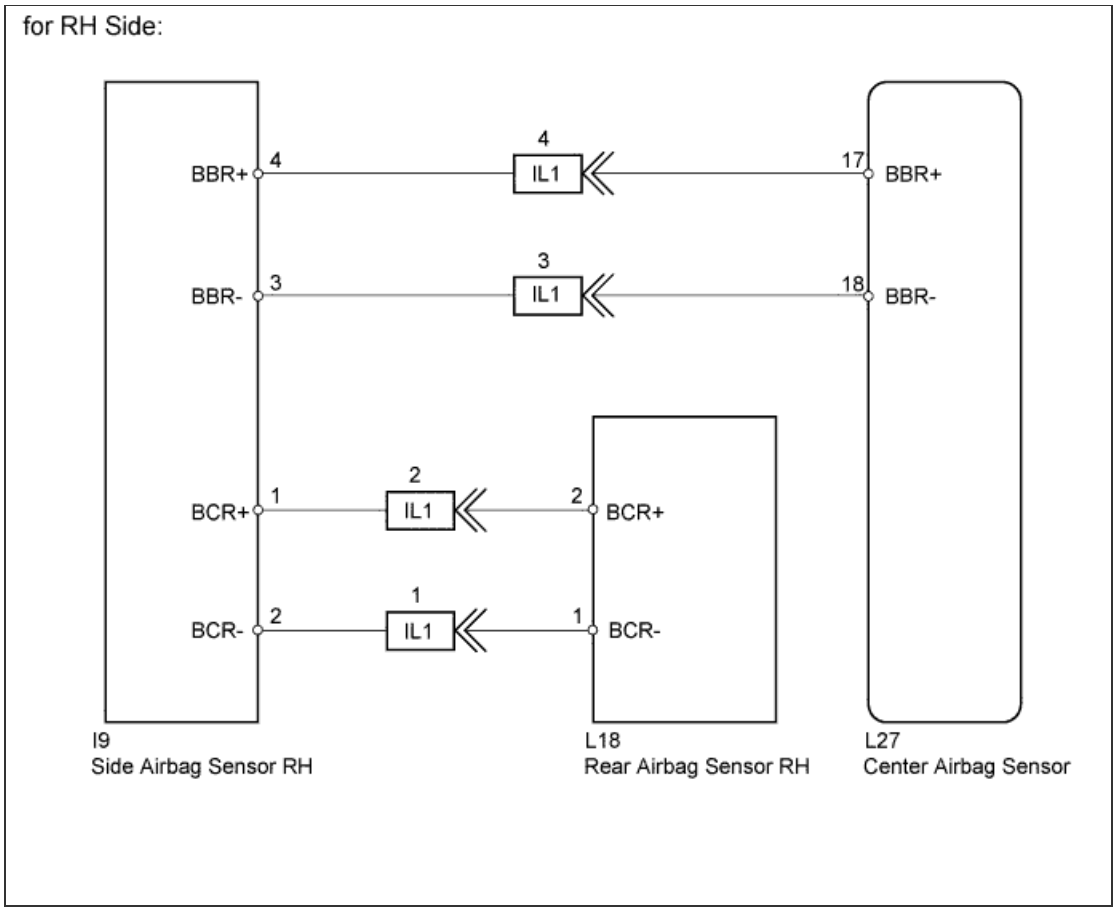

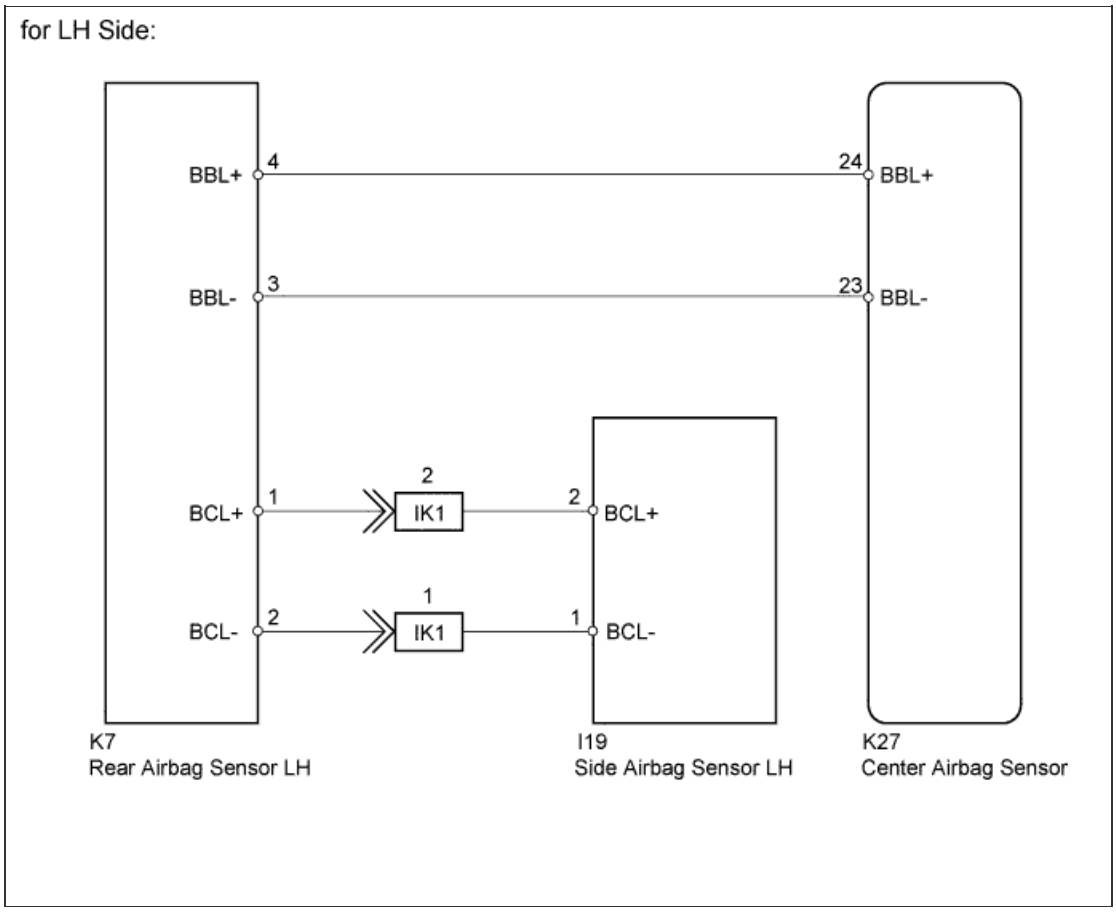

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch off.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1642 and B1647 are not output	A
DTC B1647 is output	B
DTC B1642 is output	C

HINT:

Code other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 12

C

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

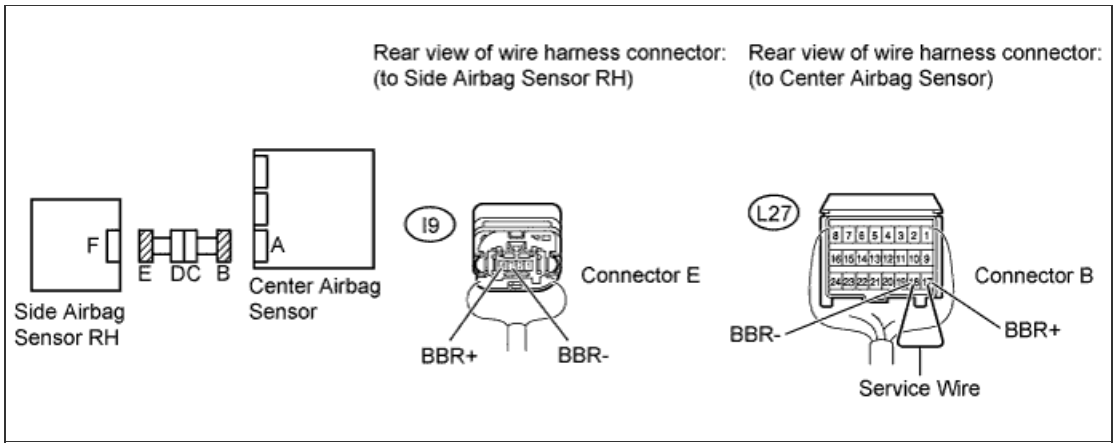

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 10

OK

5.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:

The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

6.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Check that the connector (on the rear airbag sensor RH side) is not damaged.


OK:

The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

7.CHECK REAR AIRBAG SENSOR RH CIRCUIT

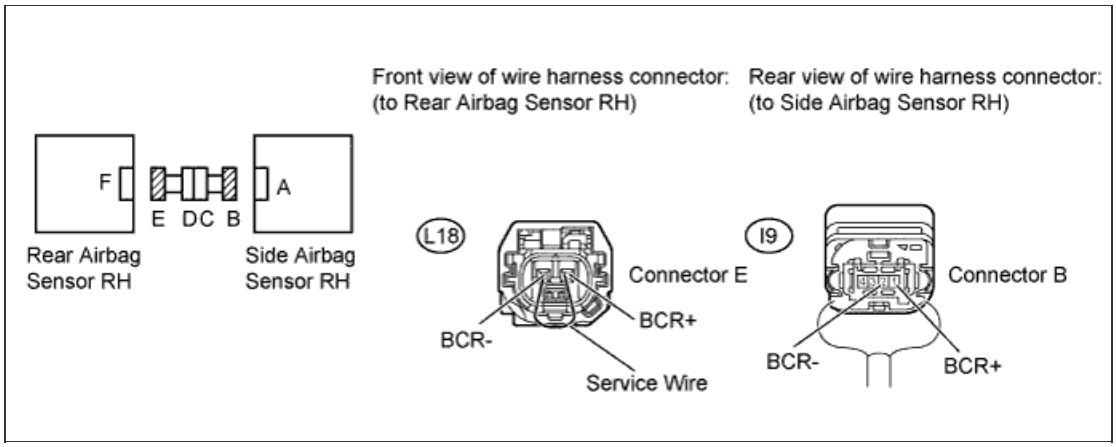

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

8.CHECK SIDE AIRBAG SENSOR RH

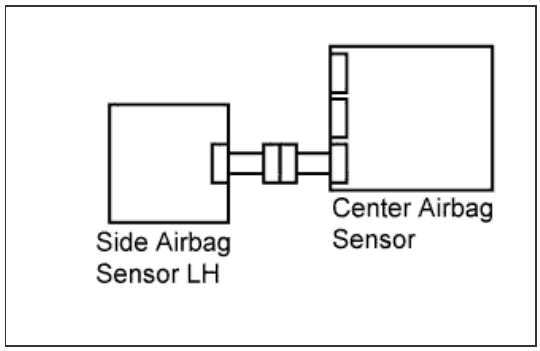

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1642 and B1647 are not output	A
DTC B1647 is output	B
DTC B1642 is output	C

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR ASSEMBLY RH (Click here)

C

9.CHECK REAR AIRBAG SENSOR RH

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).


OK:
DTC B1642 is not output.

HINT:

Codes other than DTC B1642 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

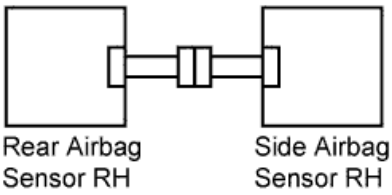


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

10.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

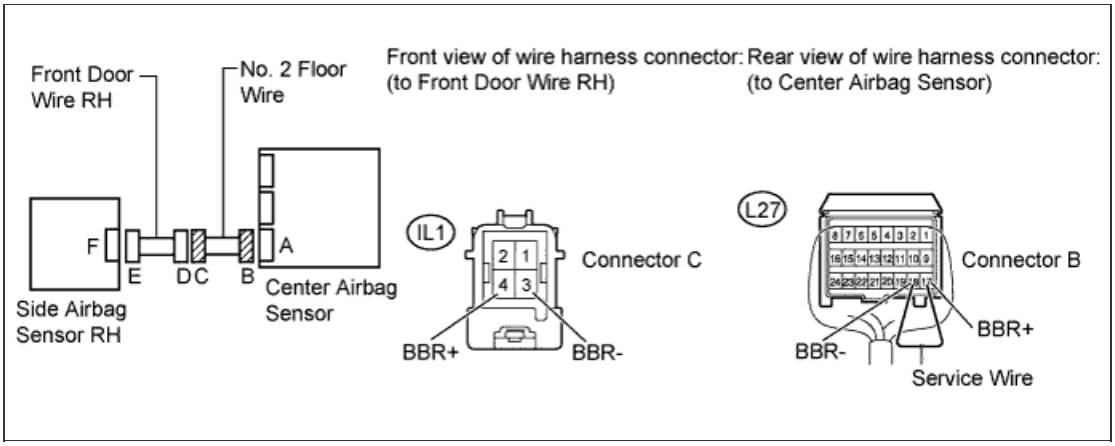

a. Disconnect the No. 2 floor wire connector from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

REPLACE FRONT DOOR WIRE RH

11.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

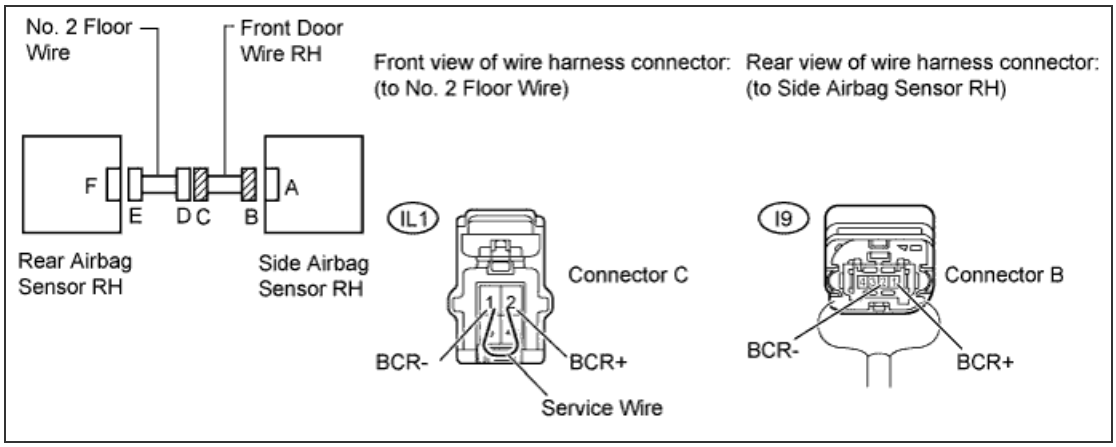

a. Disconnect the front door wire RH connector from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

12.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

13.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.


b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

14.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

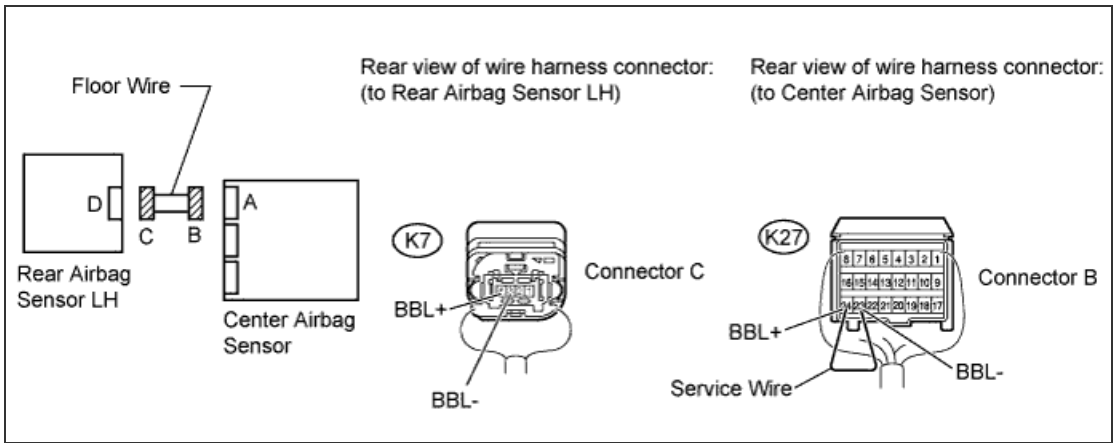

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK ↓

15.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK ↓

16.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK ↓

17.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

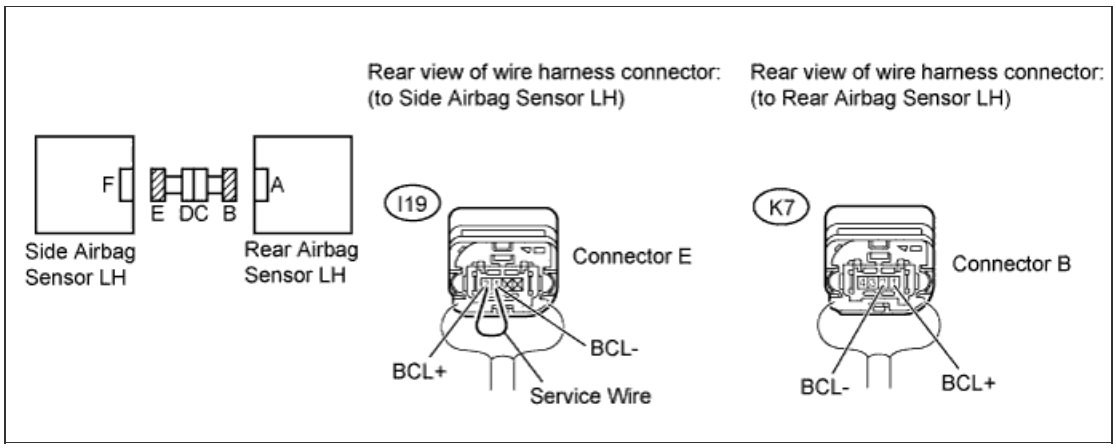

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 20

OK

18.CHECK REAR AIRBAG SENSOR LH

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

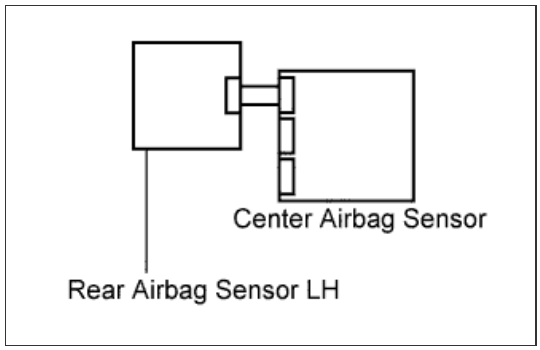

OK:
DTC B1642 or B1647 is not output.

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 19

OK →

REPLACE REAR AIRBAG SENSOR LH (Click here)

19.CHECK SIDE AIRBAG SENSOR LH

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

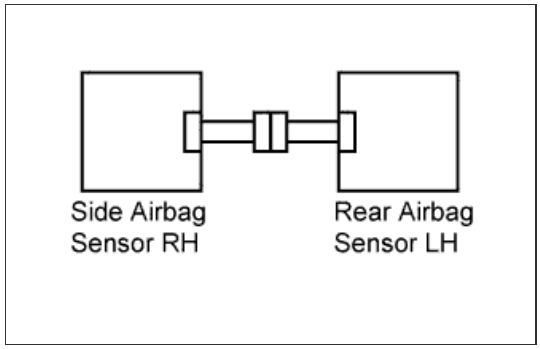

Result

Result	Proceed to
DTC B1647 is output	A
DTC B1642 is output	B
DTC B1642 and B1647 are not output	C

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the rear airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C →

USE SIMULATION METHOD TO CHECK (Click here)

20.CHECK FLOOR WIRE (REAR SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

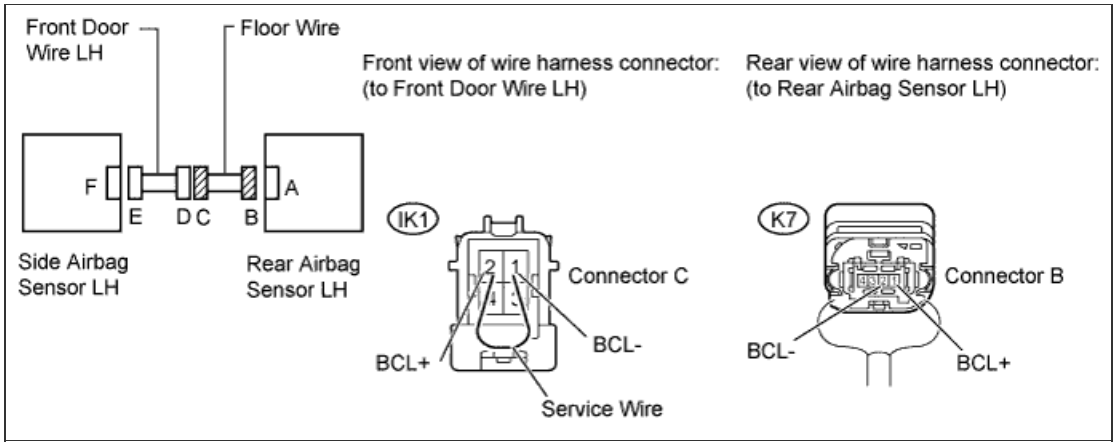

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1850/62 Short in Rear Side Squib RH Circuit

DTC B1851/62 Open in Rear Side Squib RH Circuit

DTC B1852/62 Short to GND in Rear Side Squib RH Circuit

DTC B1853/62 Short to B+ in Rear Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib RH circuit consists of the center airbag sensor and the rear seat side airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1850/62	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib RH circuit during the primary check. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1851/62	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib RH circuit for 2 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1852/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1853/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

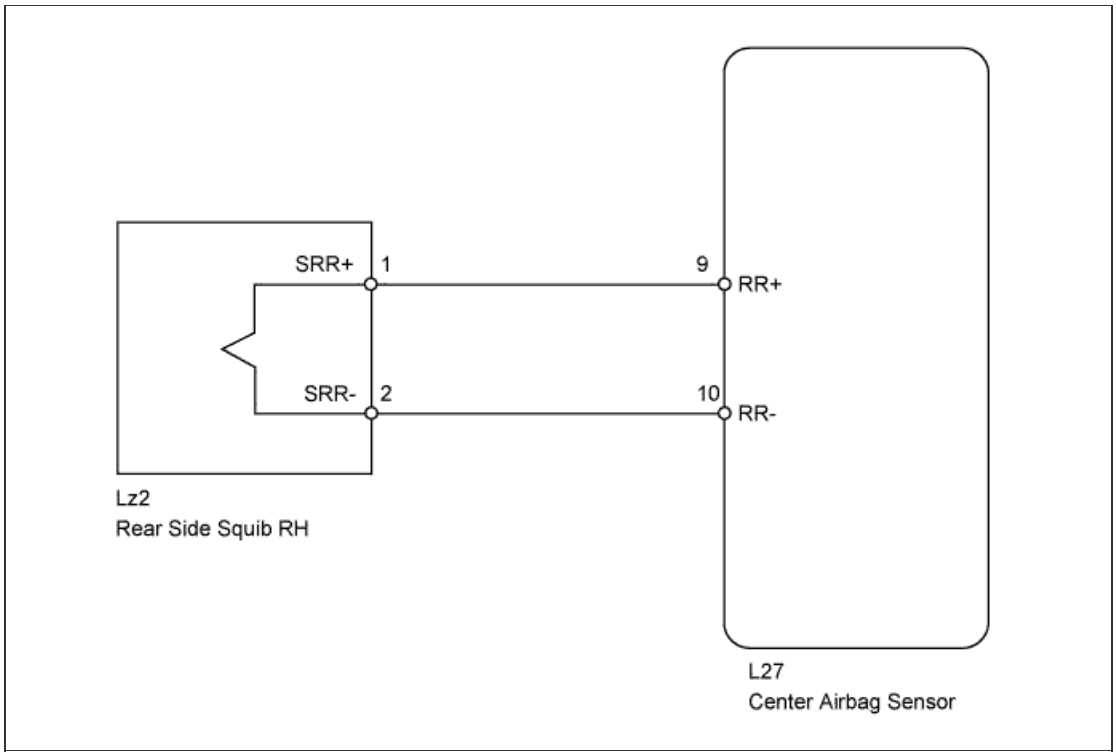

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG RH (REAR SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag RH (rear side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

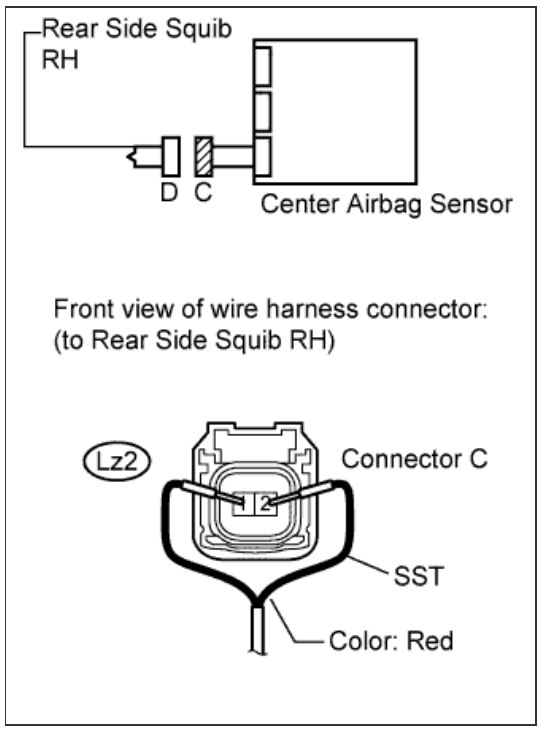

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1850 B1851 B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (REAR SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST (resistance: 2.1 Ω) from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

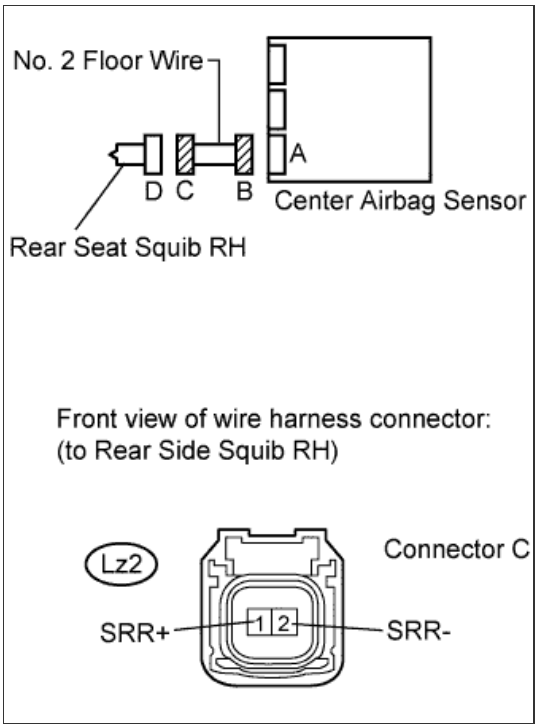

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz2-1 (SRR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz2-2 (SRR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	1 MΩ or higher
Lz2-1 (SRR+) - Body ground	Always	1 MΩ or higher
Lz2-2 (SRR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

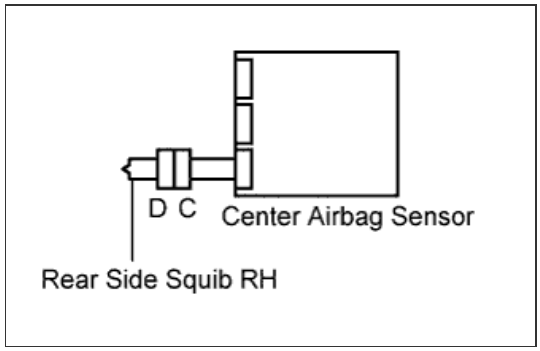

OK:

DTC B1850, B1851, B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1642/81 Lost Communication with Side Satellite Sensor Bus RH

DTC B1647/82 Lost Communication with Side Satellite Sensor Bus LH


for Preparation Click here


DESCRIPTION

The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1642/81 or B1647/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1642/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1647/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

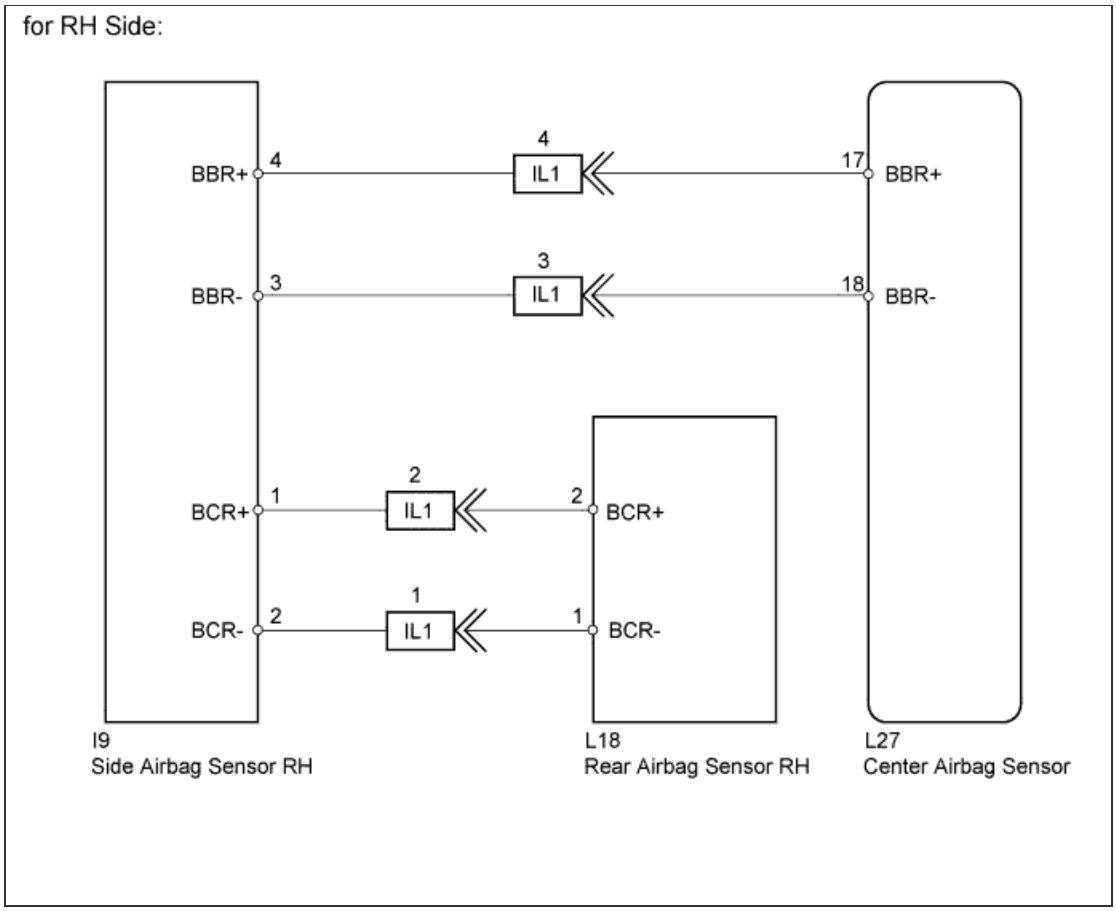

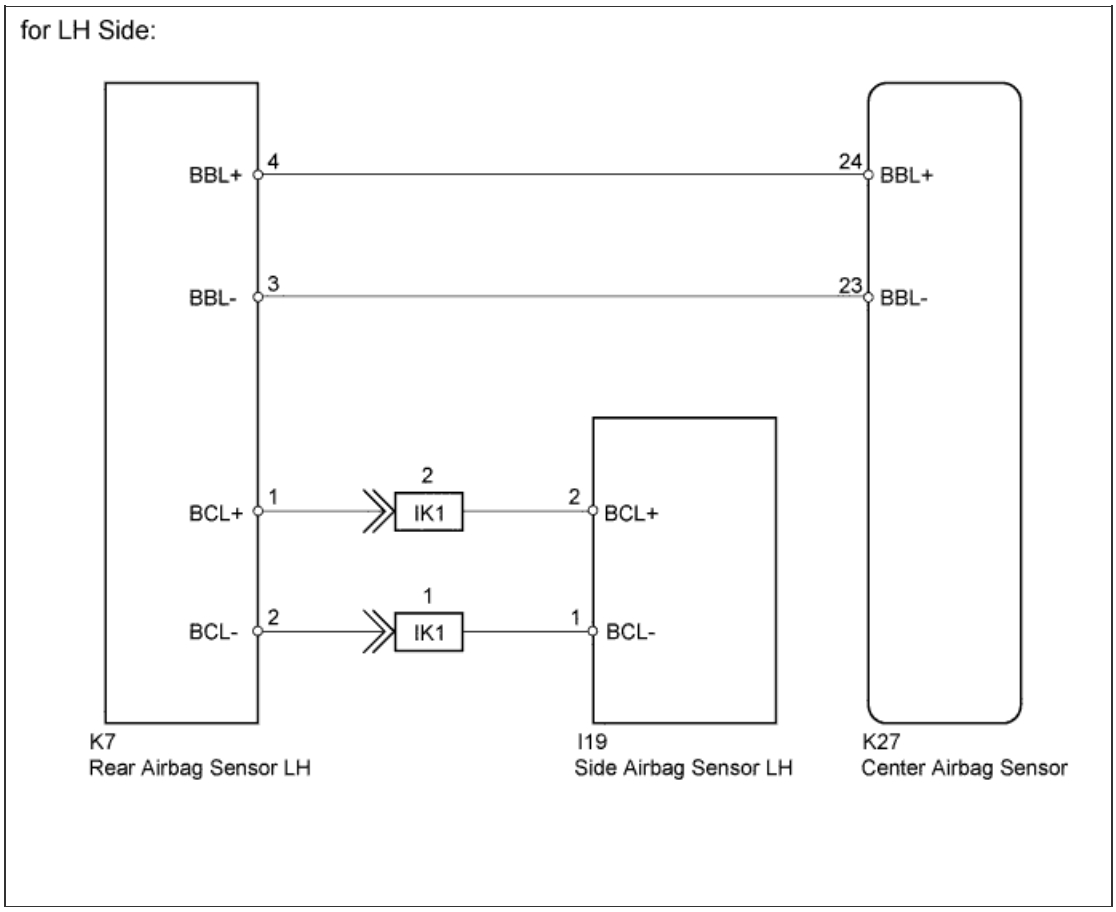

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch off.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1642 and B1647 are not output	A
DTC B1647 is output	B
DTC B1642 is output	C

HINT:

Code other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 12

C

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

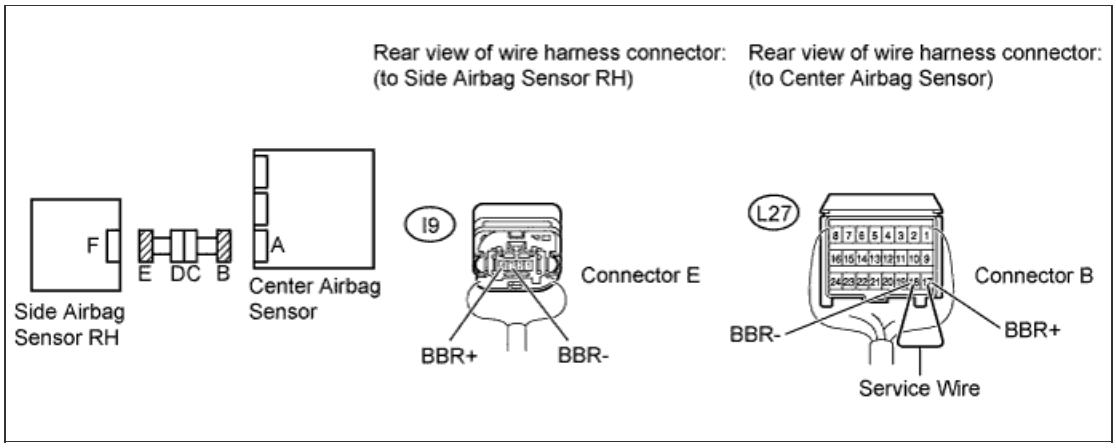

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 10

OK

5.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:

The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

6.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Check that the connector (on the rear airbag sensor RH side) is not damaged.


OK:

The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

7.CHECK REAR AIRBAG SENSOR RH CIRCUIT

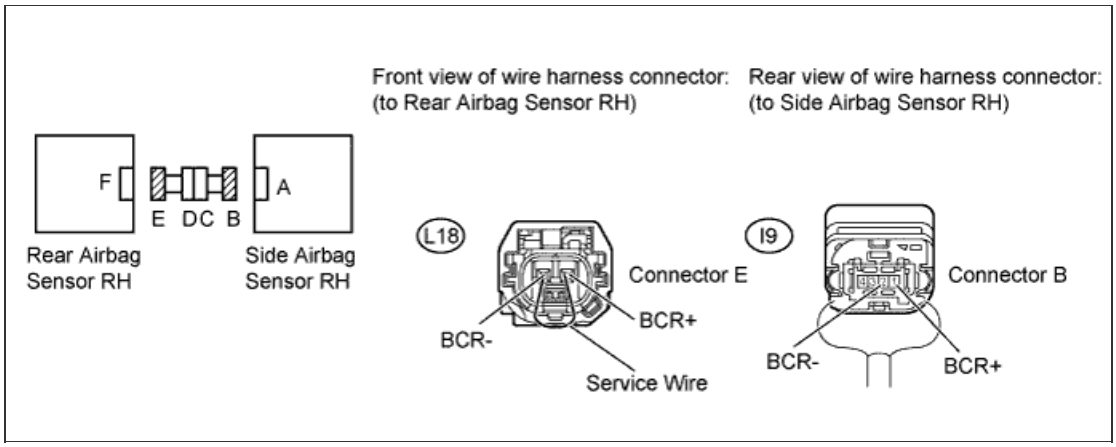

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

8.CHECK SIDE AIRBAG SENSOR RH

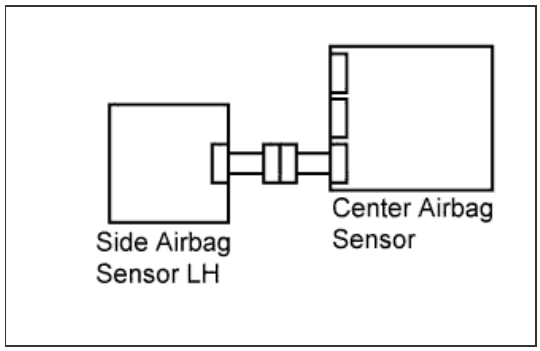

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1642 and B1647 are not output	A
DTC B1647 is output	B
DTC B1642 is output	C

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR ASSEMBLY RH (Click here)

C

9.CHECK REAR AIRBAG SENSOR RH

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).


OK:
DTC B1642 is not output.

HINT:

Codes other than DTC B1642 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

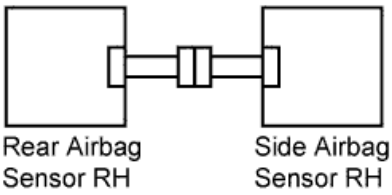


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

10.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

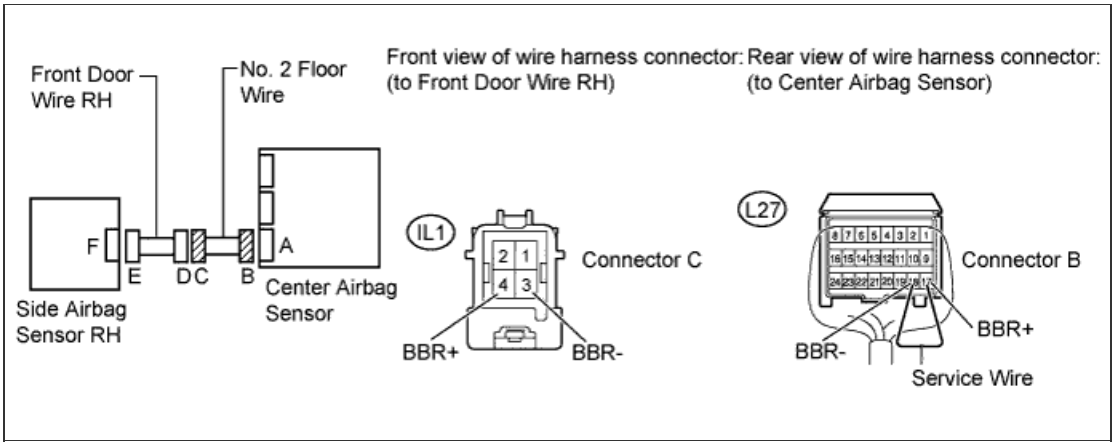

a. Disconnect the No. 2 floor wire connector from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

REPLACE FRONT DOOR WIRE RH

11.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

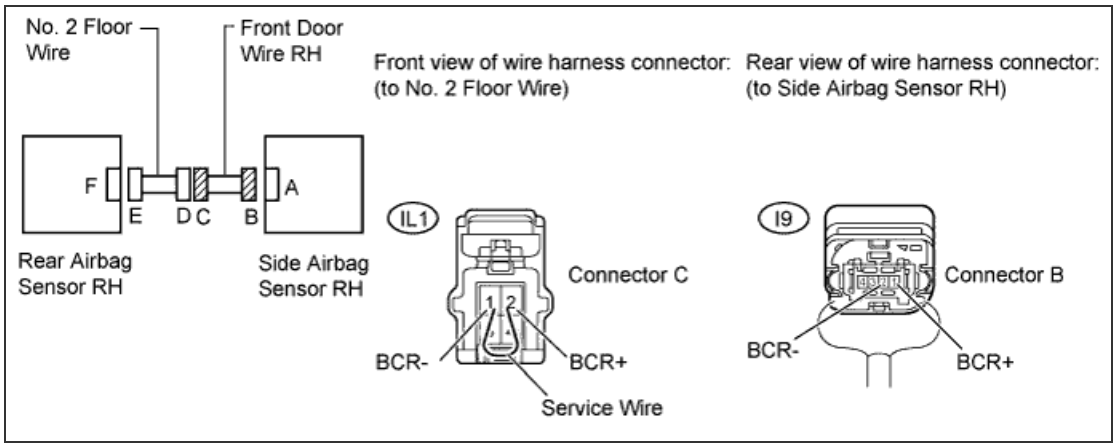

a. Disconnect the front door wire RH connector from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

12.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

13.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.


b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

14.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

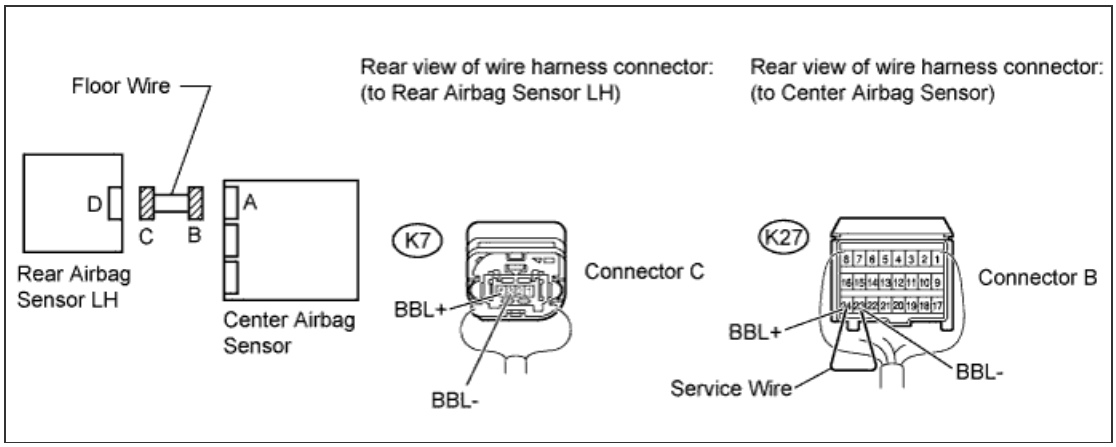

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK ↓

15.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK ↓

16.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK ↓

17.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

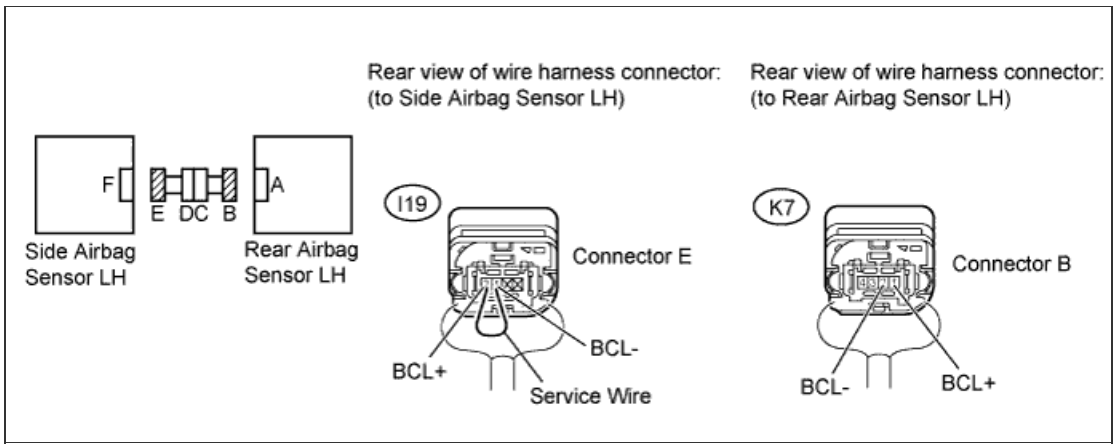

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 20

OK

18.CHECK REAR AIRBAG SENSOR LH

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

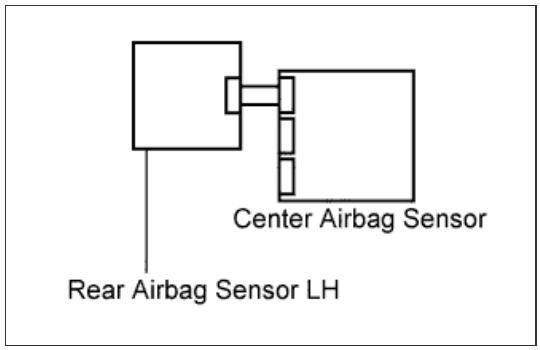

OK:
DTC B1642 or B1647 is not output.

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 19

OK →

REPLACE REAR AIRBAG SENSOR LH (Click here)

19.CHECK SIDE AIRBAG SENSOR LH

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

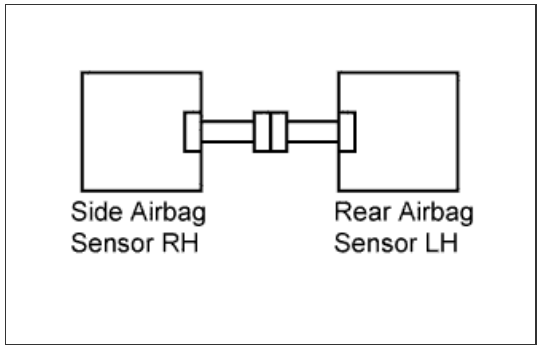

Result

Result	Proceed to
DTC B1647 is output	A
DTC B1642 is output	B
DTC B1642 and B1647 are not output	C

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the rear airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C →

USE SIMULATION METHOD TO CHECK (Click here)

20.CHECK FLOOR WIRE (REAR SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

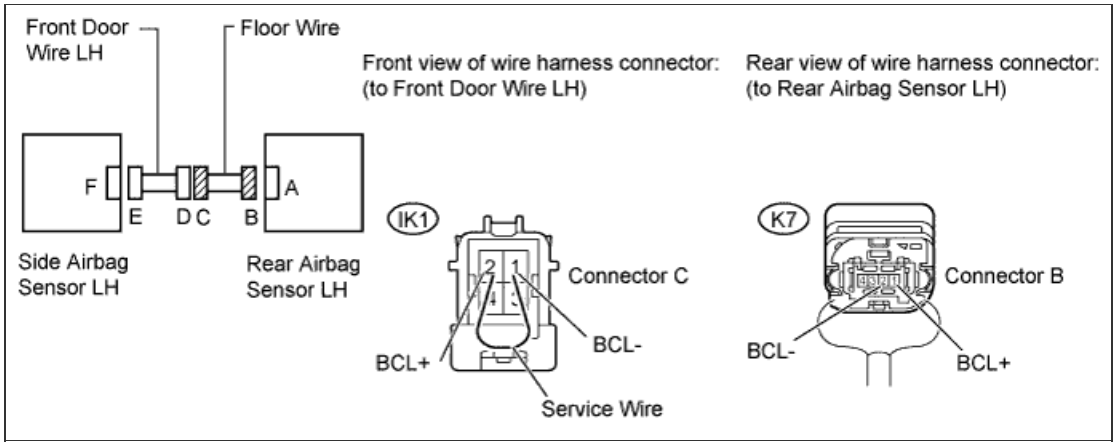

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1850/62 Short in Rear Side Squib RH Circuit

DTC B1851/62 Open in Rear Side Squib RH Circuit

DTC B1852/62 Short to GND in Rear Side Squib RH Circuit

DTC B1853/62 Short to B+ in Rear Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib RH circuit consists of the center airbag sensor and the rear seat side airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1850/62	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib RH circuit during the primary check. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1851/62	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib RH circuit for 2 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1852/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1853/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

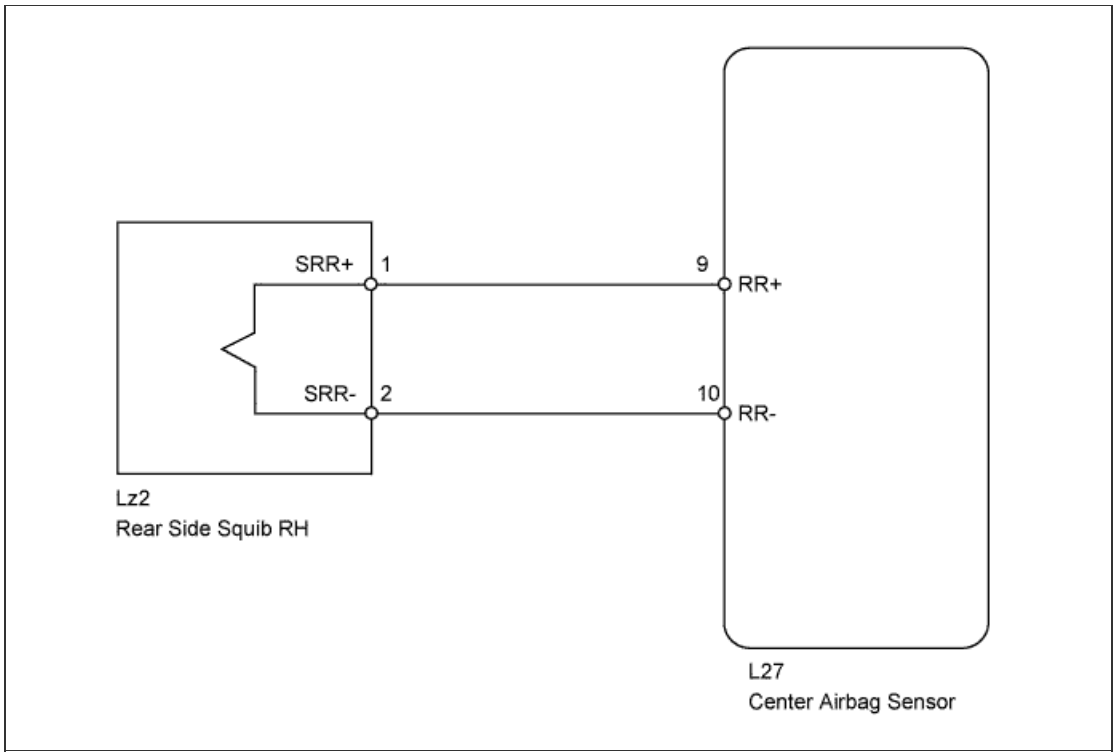

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG RH (REAR SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag RH (rear side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

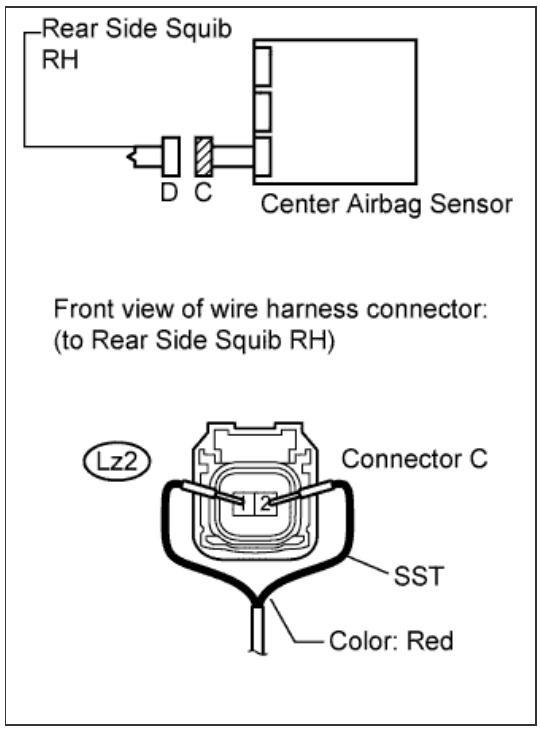

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1850 B1851 B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (REAR SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST (resistance: 2.1 Ω) from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

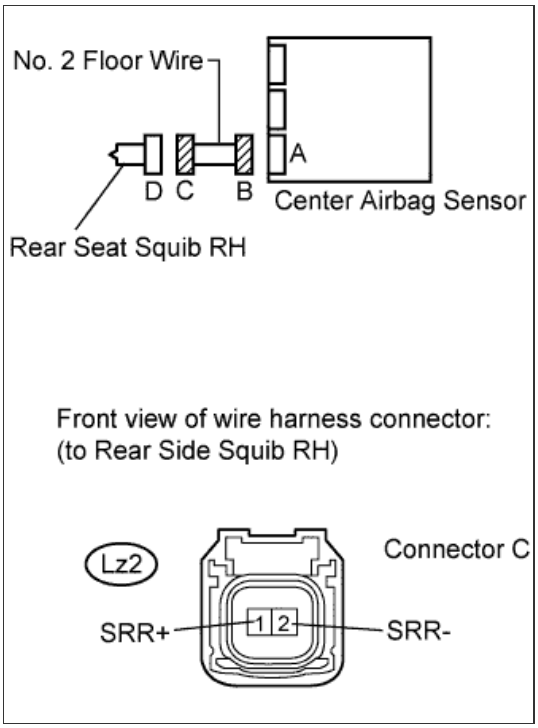

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz2-1 (SRR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz2-2 (SRR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	1 MΩ or higher
Lz2-1 (SRR+) - Body ground	Always	1 MΩ or higher
Lz2-2 (SRR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

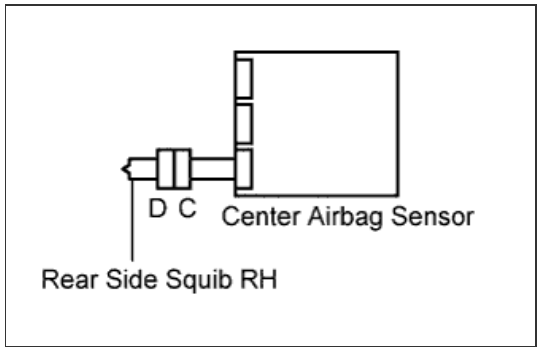

OK:

DTC B1850, B1851, B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1642/81 Lost Communication with Side Satellite Sensor Bus RH

DTC B1647/82 Lost Communication with Side Satellite Sensor Bus LH


for Preparation Click here


DESCRIPTION

The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1642/81 or B1647/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1642/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1647/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

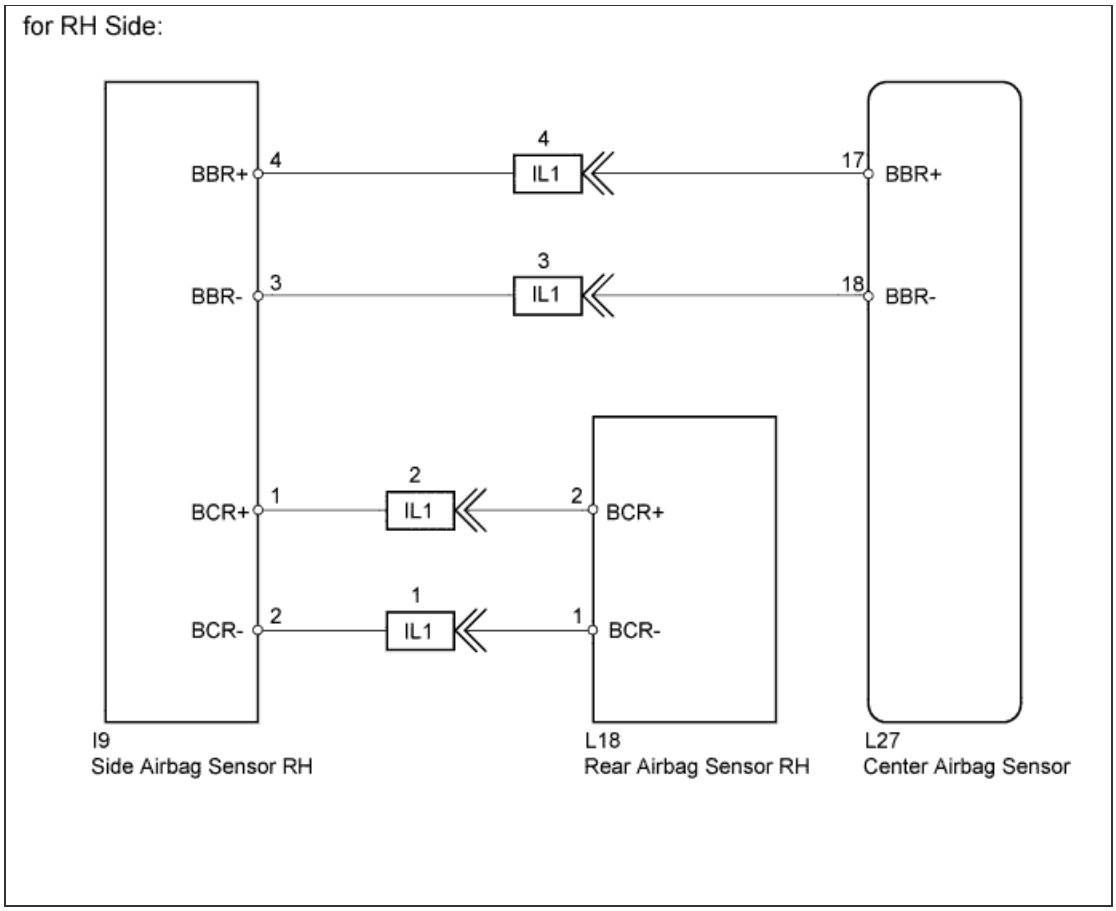

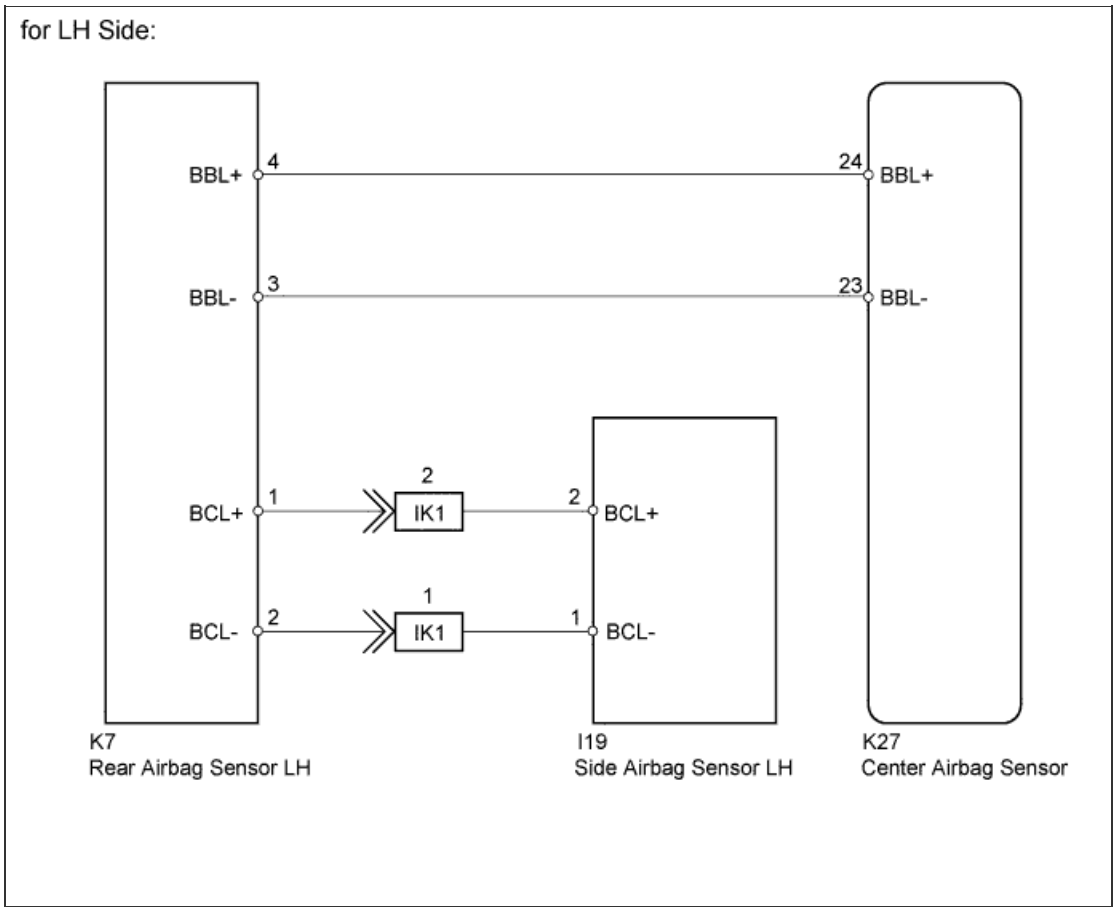

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch off.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1642 and B1647 are not output	A
DTC B1647 is output	B
DTC B1642 is output	C

HINT:

Code other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 12

C

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

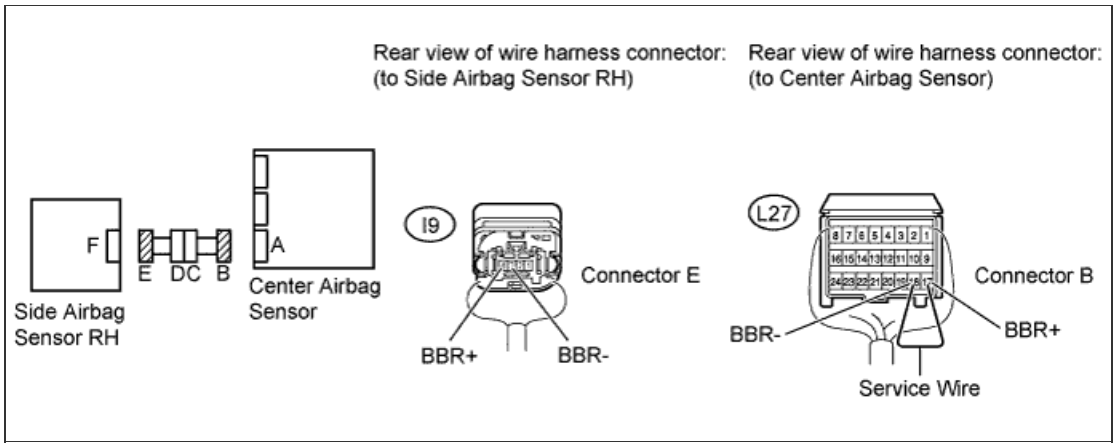

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 10

OK

5.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:

The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

6.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Check that the connector (on the rear airbag sensor RH side) is not damaged.


OK:

The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

7.CHECK REAR AIRBAG SENSOR RH CIRCUIT

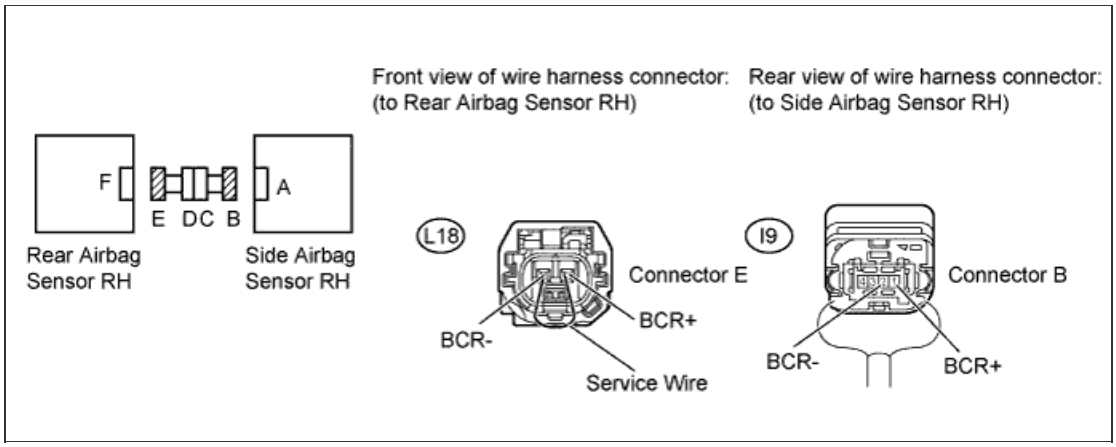

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

8.CHECK SIDE AIRBAG SENSOR RH

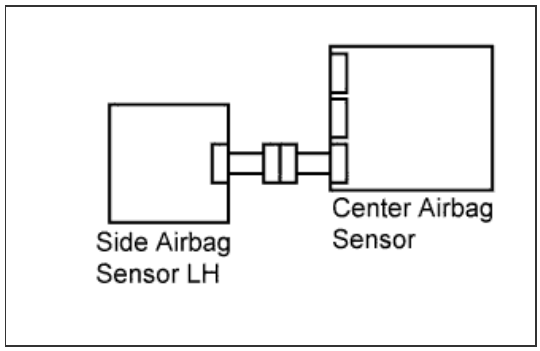

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1642 and B1647 are not output	A
DTC B1647 is output	B
DTC B1642 is output	C

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR ASSEMBLY RH (Click here)

C

9.CHECK REAR AIRBAG SENSOR RH

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).


OK:
DTC B1642 is not output.

HINT:

Codes other than DTC B1642 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

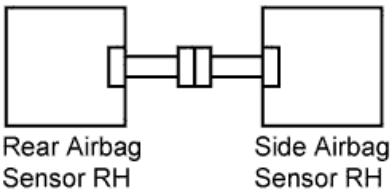


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

10.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

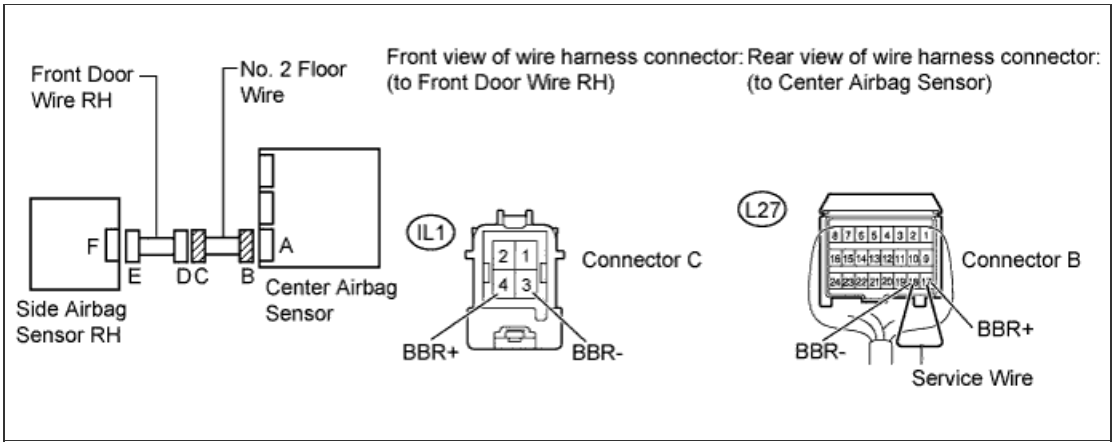

a. Disconnect the No. 2 floor wire connector from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

REPLACE FRONT DOOR WIRE RH

11.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

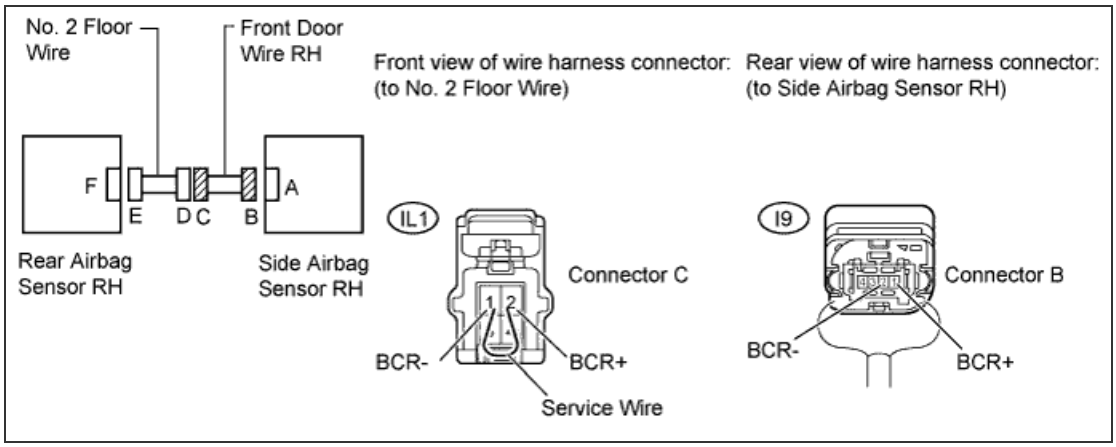

a. Disconnect the front door wire RH connector from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

12.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

13.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.


b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

14.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

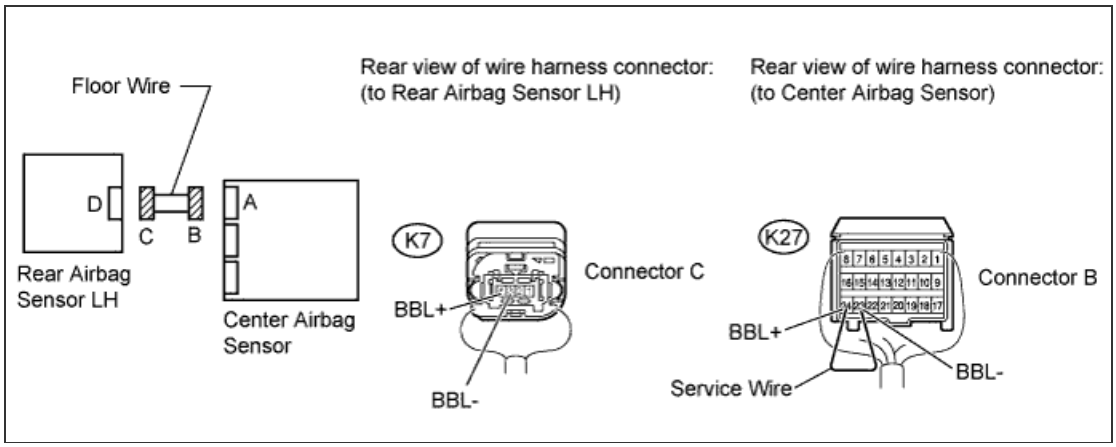

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK ↓

15.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK ↓

16.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK ↓

17.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

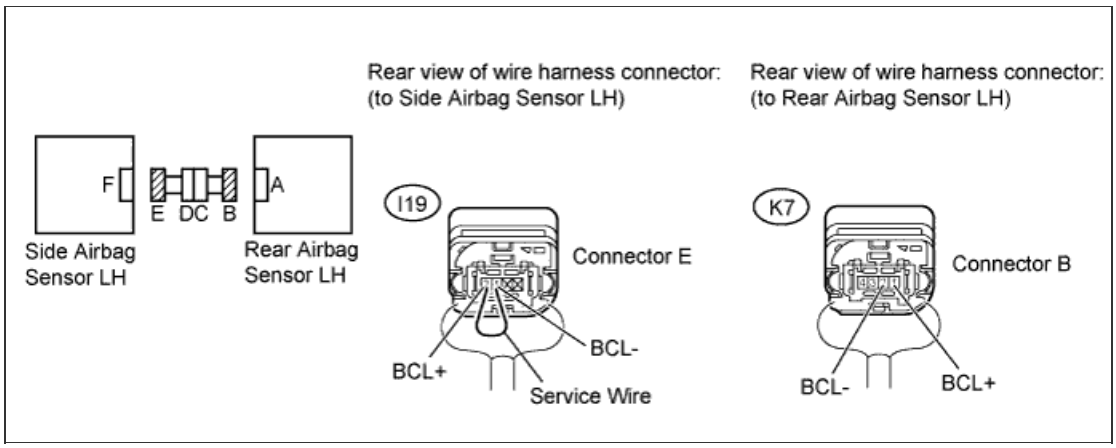

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 20

OK

18.CHECK REAR AIRBAG SENSOR LH

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

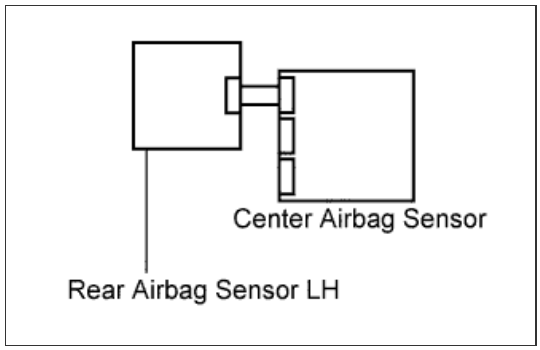

OK:
DTC B1642 or B1647 is not output.

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 19

OK →

REPLACE REAR AIRBAG SENSOR LH (Click here)

19.CHECK SIDE AIRBAG SENSOR LH

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

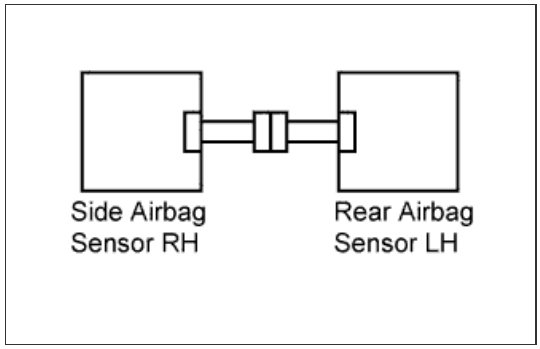

Result

Result	Proceed to
DTC B1647 is output	A
DTC B1642 is output	B
DTC B1642 and B1647 are not output	C

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the rear airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C →

USE SIMULATION METHOD TO CHECK (Click here)

20.CHECK FLOOR WIRE (REAR SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

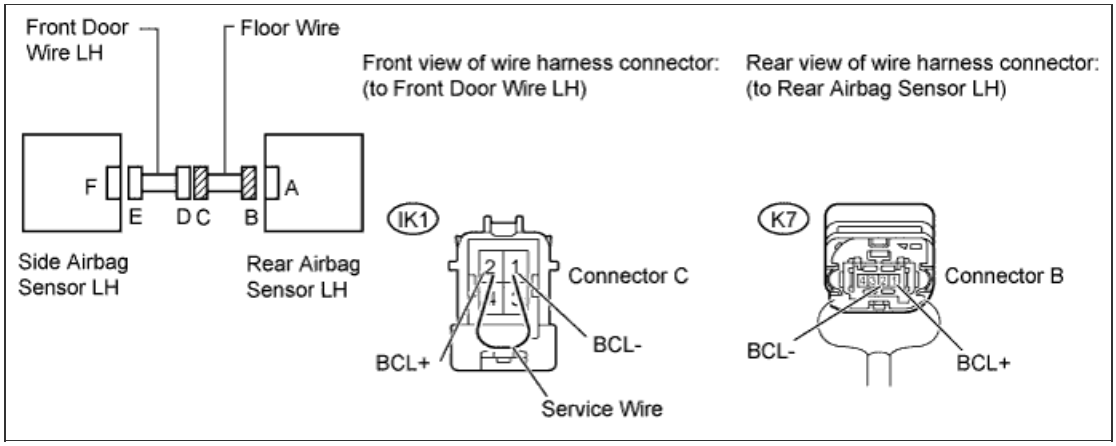

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1850/62 Short in Rear Side Squib RH Circuit

DTC B1851/62 Open in Rear Side Squib RH Circuit

DTC B1852/62 Short to GND in Rear Side Squib RH Circuit

DTC B1853/62 Short to B+ in Rear Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib RH circuit consists of the center airbag sensor and the rear seat side airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1850/62	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib RH circuit during the primary check. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1851/62	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib RH circuit for 2 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1852/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1853/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

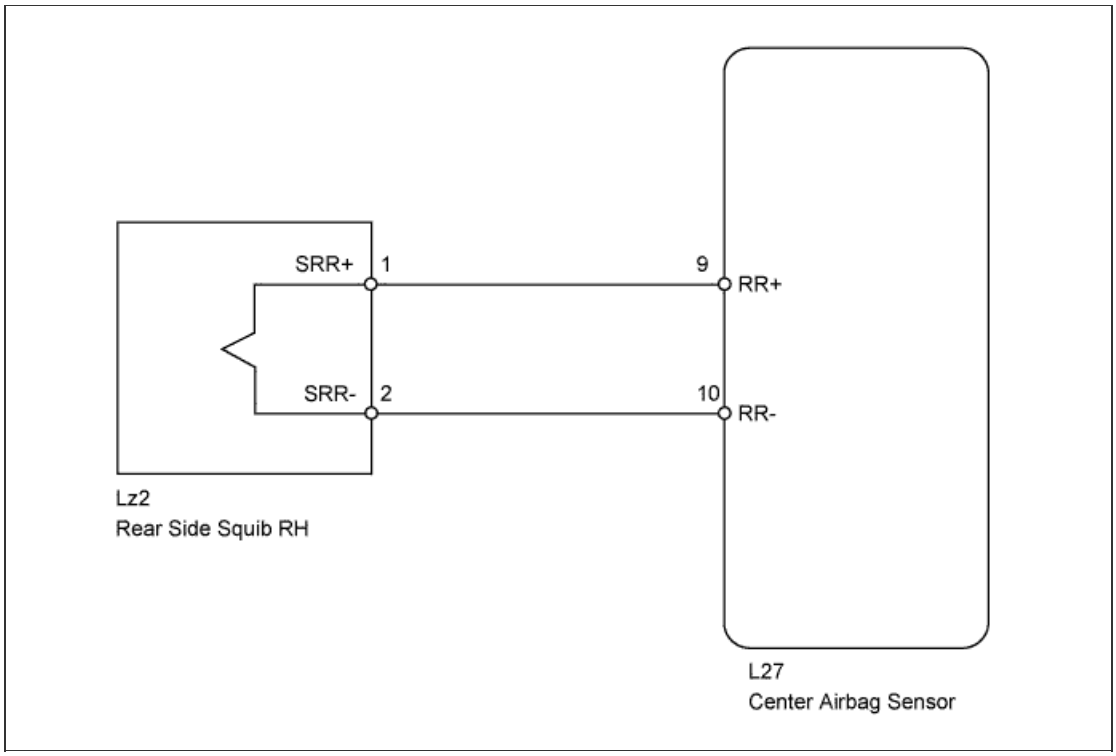

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG RH (REAR SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag RH (rear side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

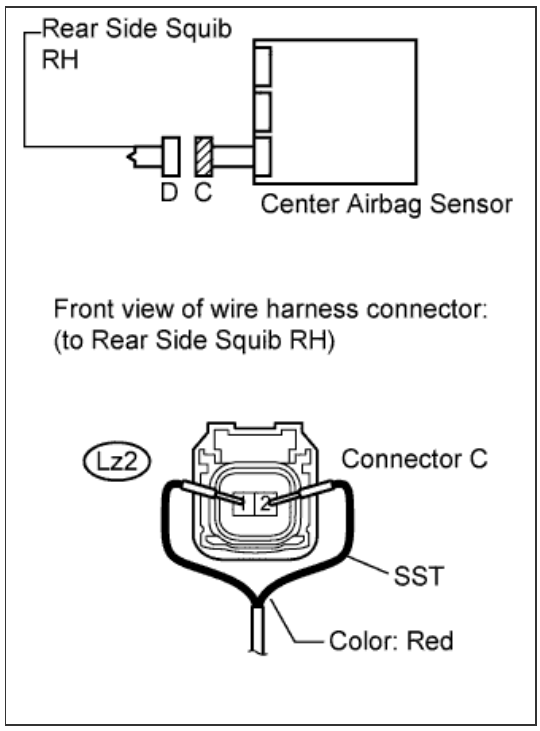

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1850 B1851 B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (REAR SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST (resistance: 2.1 Ω) from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

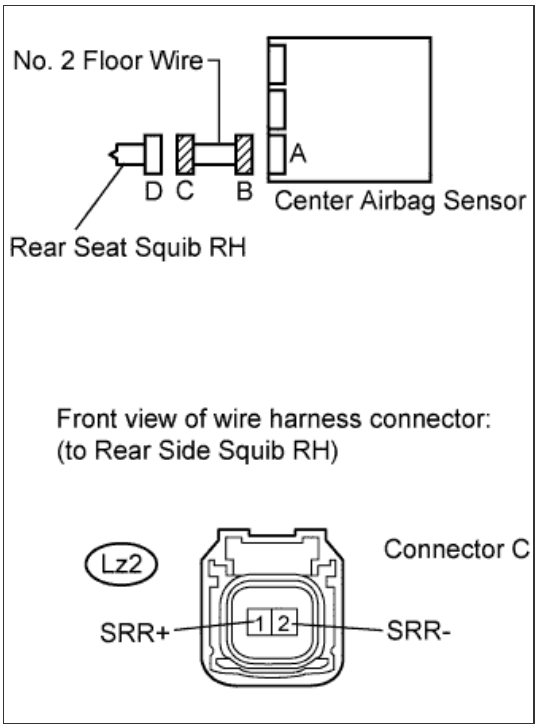

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz2-1 (SRR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz2-2 (SRR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	1 MΩ or higher
Lz2-1 (SRR+) - Body ground	Always	1 MΩ or higher
Lz2-2 (SRR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

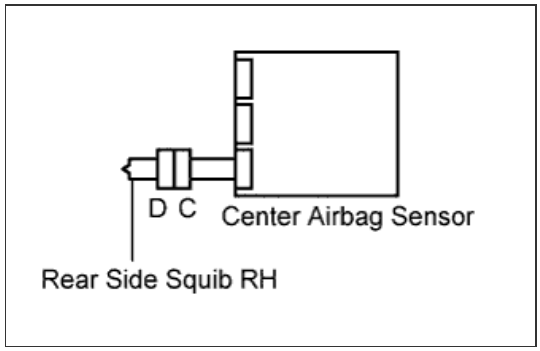

OK:

DTC B1850, B1851, B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1642/81 Lost Communication with Side Satellite Sensor Bus RH

DTC B1647/82 Lost Communication with Side Satellite Sensor Bus LH


for Preparation Click here


DESCRIPTION

The circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH) is composed of the center airbag sensor, side airbag sensor LH or RH, and rear airbag sensor LH or RH.
The side airbag sensor LH or RH and rear airbag sensor LH or RH detect impacts to the vehicle and send signals to the center airbag sensor to determine if the airbag should be deployed.
DTC B1642/81 or B1647/82 is stored when a malfunction is detected in the circuit for the side collision sensor LH or RH (to determine deployment of the front seat airbag LH or RH, rear seat side airbag LH or RH and curtain shield airbag LH or RH).

DTC Code	DTC Detection Condition	Trouble Area
B1642/81	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor RH (to determine deployment of the front seat airbag RH and curtain shield airbag RH) for 2 seconds. • A side airbag sensor RH malfunction. • A rear airbag sensor RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front door wire RH • Side airbag sensor RH • Rear airbag sensor RH • Center airbag sensor assembly
B1647/82	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the circuit for the side collision sensor LH (to determine deployment of the front seat airbag LH and curtain shield airbag LH) for 2 seconds. • A side airbag sensor LH malfunction. • A rear airbag sensor LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front door wire LH • Side airbag sensor LH • Rear airbag sensor LH • Center airbag sensor assembly

WIRING DIAGRAM

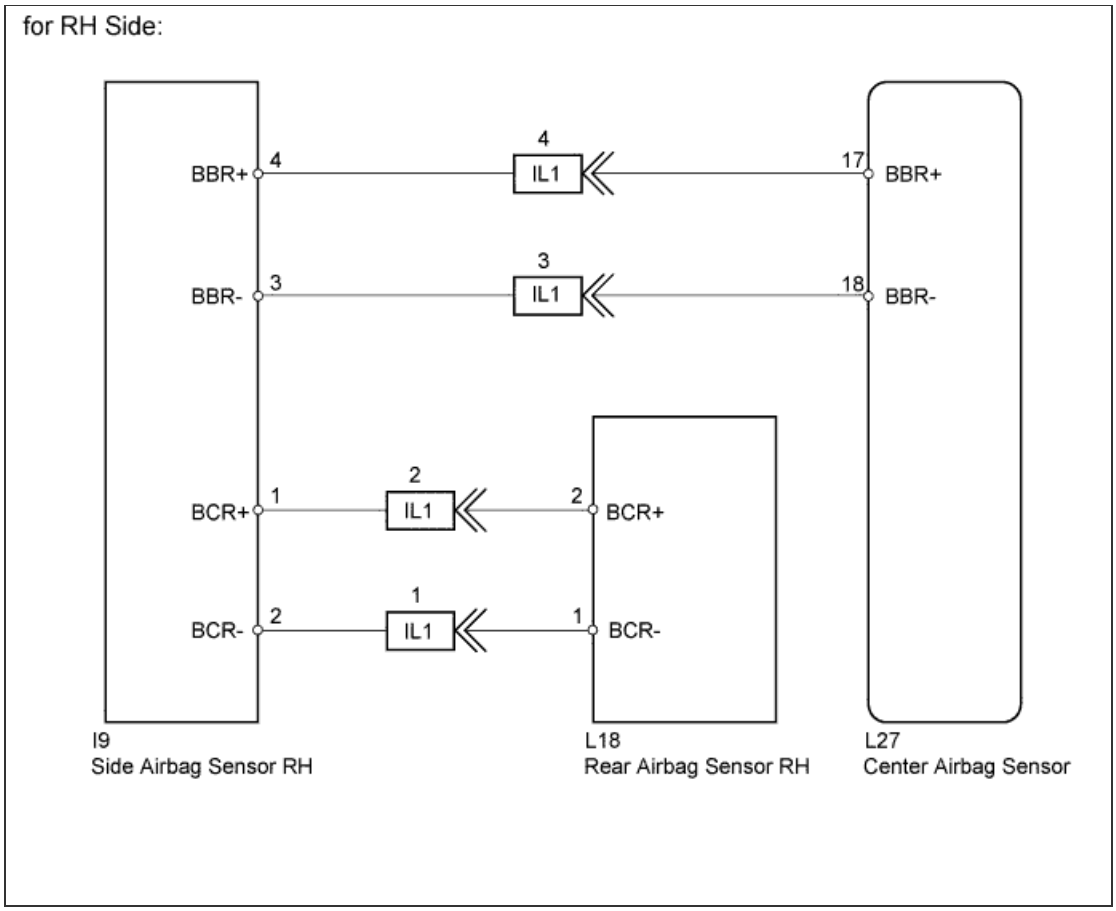

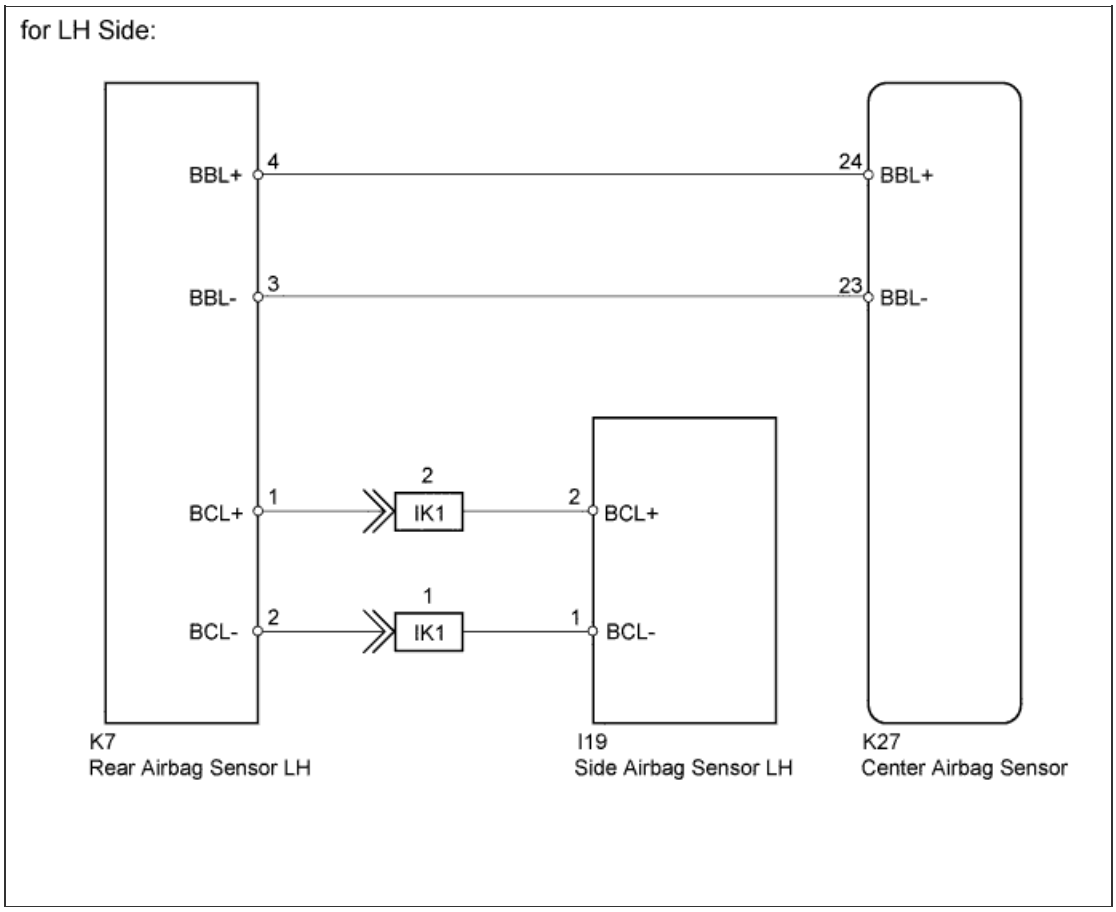

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK FOR DTC

a. Turn the engine switch off.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1642 and B1647 are not output	A
DTC B1647 is output	B
DTC B1642 is output	C

HINT:

Code other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → Go to step 12

C

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and side airbag sensor RH.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and side airbag sensor RH.

b. Check that the connectors (on the center airbag sensor side and side airbag sensor RH side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK SIDE AIRBAG SENSOR RH CIRCUIT

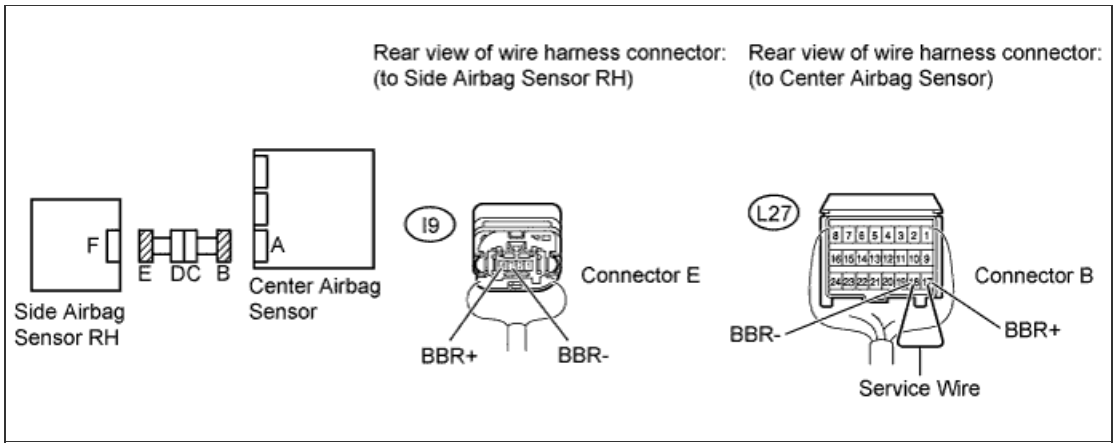

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-4 (BBR+) - I9-3 (BBR-)	Always	1 MΩ or higher
I9-4 (BBR+) - Body ground	Always	1 MΩ or higher
I9-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 10

OK

5.CHECK CONNECTION OF CONNECTORS

a. Check that the connector is properly connected to the rear airbag sensor RH.

OK:

The connector is properly connected.

NG → CONNECT CONNECTOR PROPERLY

OK

6.CHECK CONNECTORS

a. Disconnect the connectors from the side airbag sensor RH and rear airbag sensor RH.

b. Check that the connector (on the rear airbag sensor RH side) is not damaged.


OK:

The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

7.CHECK REAR AIRBAG SENSOR RH CIRCUIT

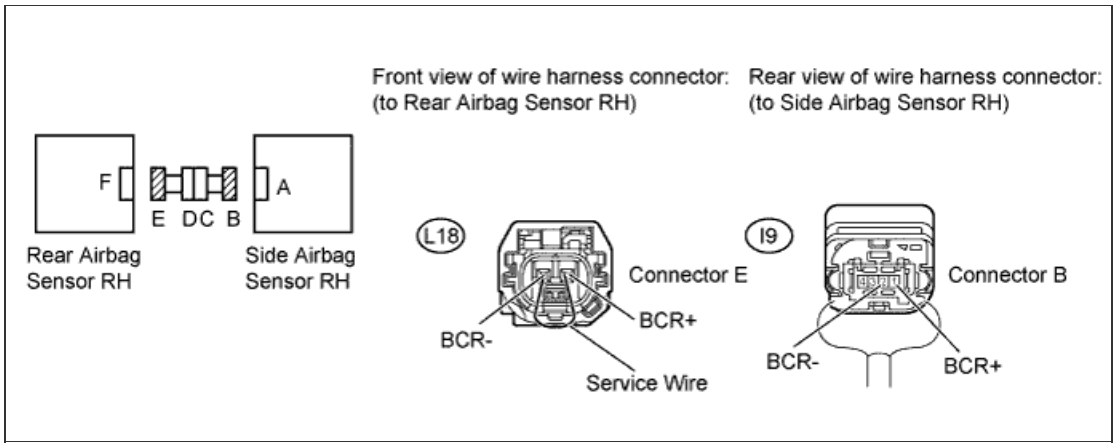

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → Go to step 11

OK

8.CHECK SIDE AIRBAG SENSOR RH

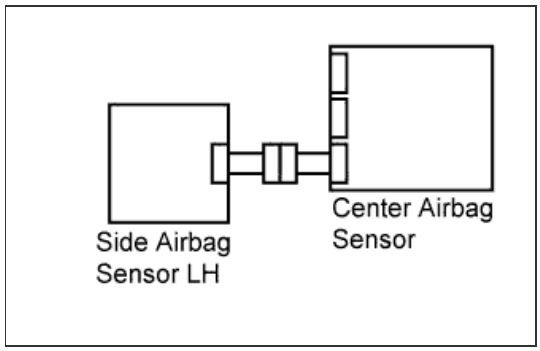

a. Connect the connector to the center airbag sensor.

b. Interchange the side airbag sensor LH with RH and connect the connectors to them.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

h. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1642 and B1647 are not output	A
DTC B1647 is output	B
DTC B1642 is output	C

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

i. Turn the engine switch off.

j. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

k. Return the side airbag sensor LH and RH to their original positions and connect the connectors to them.

A → USE SIMULATION METHOD TO CHECK (Click here)

B → REPLACE SIDE AIRBAG SENSOR ASSEMBLY RH (Click here)

C

9.CHECK REAR AIRBAG SENSOR RH

a. Temporarily replace the rear airbag sensor RH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).


OK:
DTC B1642 is not output.

HINT:

Codes other than DTC B1642 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

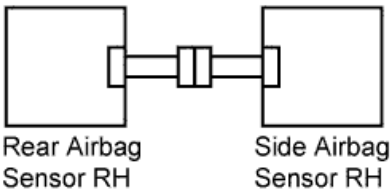


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE REAR AIRBAG SENSOR RH (Click here)

10.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT DOOR WIRE RH)

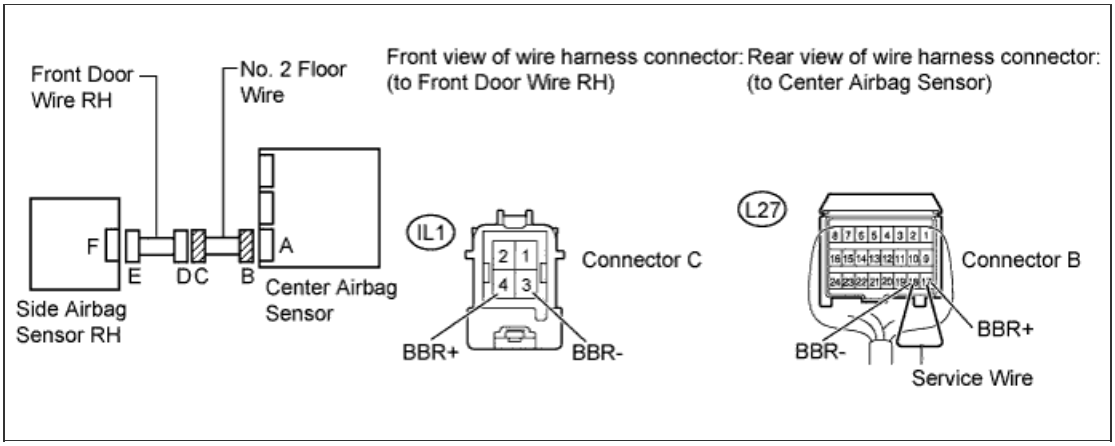

a. Disconnect the No. 2 floor wire connector from the front door wire RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
IL1-4 (BBR+) - Body ground	Engine switch on (IG)	Below 1 V
IL1-3 (BBR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 17 (BBR+) and 18 (BBR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
IL1-4 (BBR+) - IL1-3 (BBR-)	Always	1 MΩ or higher
IL1-4 (BBR+) - Body ground	Always	1 MΩ or higher
IL1-3 (BBR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

REPLACE FRONT DOOR WIRE RH

11.CHECK FRONT DOOR WIRE RH (SIDE AIRBAG SENSOR RH - NO. 2 FLOOR WIRE)

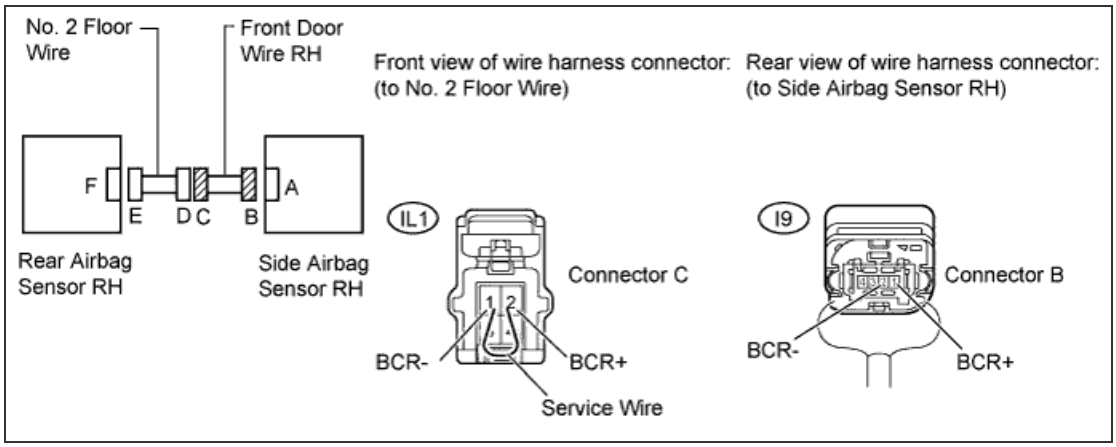

a. Disconnect the front door wire RH connector from the No. 2 floor wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
I9-1 (BCR+) - Body ground	Engine switch on (IG)	Below 1 V
I9-2 (BCR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
I9-1 (BCR+) - I9-2 (BCR-)	Always	1 MΩ or higher
I9-1 (BCR+) - Body ground	Always	1 MΩ or higher
I9-2 (BCR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FRONT DOOR WIRE RH

OK

REPLACE NO. 2 FLOOR WIRE

12.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and rear airbag sensor LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

13.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear airbag sensor LH.


b. Check that the connectors (on the center airbag sensor side and rear airbag sensor LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

14.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - REAR AIRBAG SENSOR LH)

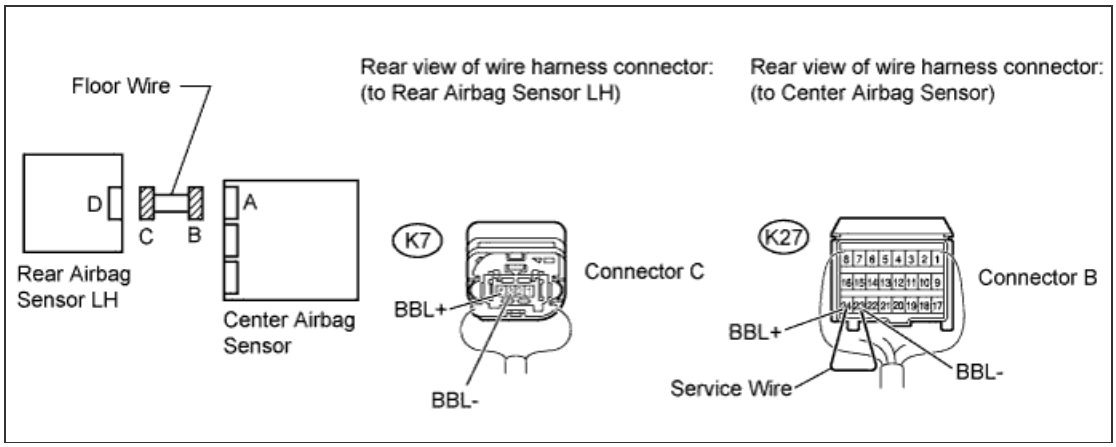

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-4 (BBL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-3 (BBL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 24 (BBL+) and 23 (BBL-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-4 (BBL+) - K7-3 (BBL-)	Always	1 MΩ or higher
K7-4 (BBL+) - Body ground	Always	1 MΩ or higher
K7-3 (BBL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK ↓

15.CHECK CONNECTION OF CONNECTOR

a. Check that the connector is properly connected to the side airbag sensor LH.

OK:
The connector is properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK ↓

16.CHECK CONNECTORS

a. Disconnect the connectors from the rear airbag sensor LH and side airbag sensor LH.


b. Check that the connector (on the side airbag sensor LH side) is not damaged.

OK:
The connector is not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK ↓

17.CHECK SIDE AIRBAG SENSOR LH CIRCUIT

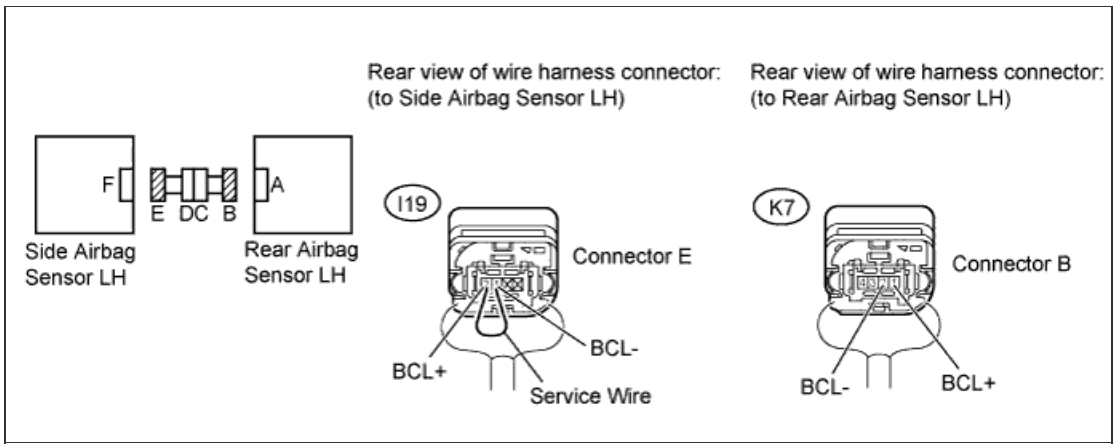

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 2 (BCL+) and 1 (BCL-) of connector E.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

g. Disconnect the service wire from connector E.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → Go to step 20

OK

18.CHECK REAR AIRBAG SENSOR LH

a. Temporarily replace the side airbag sensor LH with a new one.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

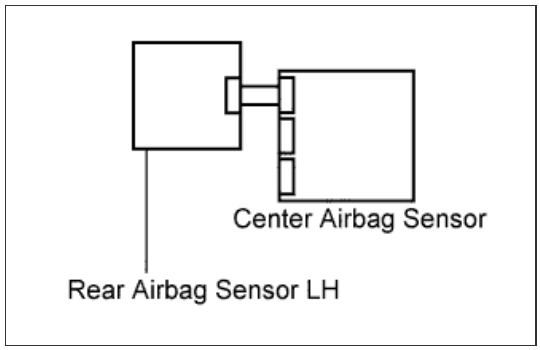

OK:
DTC B1642 or B1647 is not output.

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

NG → Go to step 19

OK →

REPLACE REAR AIRBAG SENSOR LH (Click here)

19.CHECK SIDE AIRBAG SENSOR LH

a. Interchange the side airbag sensor RH with LH and connect the connectors to them.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

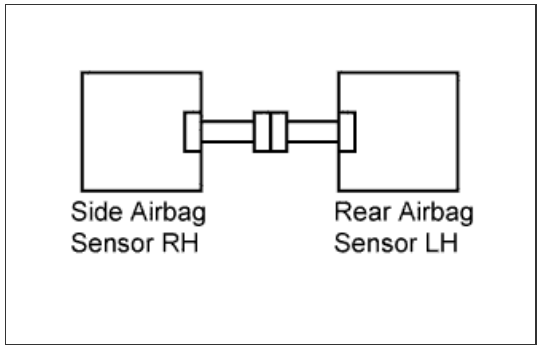

Result

Result	Proceed to
DTC B1647 is output	A
DTC B1642 is output	B
DTC B1642 and B1647 are not output	C

HINT:

Codes other than DTC B1642 and B1647 may be output at this time, but they are not related to this check.

h. Turn the engine switch off.

i. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

j. Return the rear airbag sensor RH and LH to their original positions and connect the connectors to them.


A → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

B → REPLACE SIDE AIRBAG SENSOR LH (Click here)

C →

USE SIMULATION METHOD TO CHECK (Click here)

20.CHECK FLOOR WIRE (REAR SIDE AIRBAG SENSOR LH - FRONT DOOR WIRE LH)

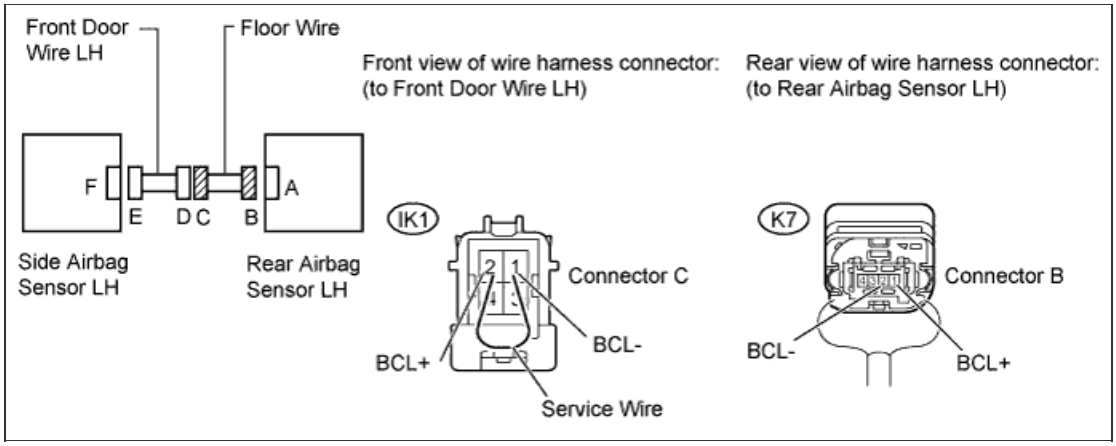

a. Disconnect the floor wire connector from the front door wire LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K7-1 (BCL+) - Body ground	Engine switch on (IG)	Below 1 V
K7-2 (BCL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 2 (BCR+) and 1 (BCR-) of connector C.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	Below 1 Ω

h. Disconnect the service wire from connector C.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K7-1 (BCL+) - K7-2 (BCL-)	Always	1 MΩ or higher
K7-1 (BCL+) - Body ground	Always	1 MΩ or higher
K7-2 (BCL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK → REPLACE FRONT DOOR WIRE LH

DTC B1850/62 Short in Rear Side Squib RH Circuit

DTC B1851/62 Open in Rear Side Squib RH Circuit

DTC B1852/62 Short to GND in Rear Side Squib RH Circuit

DTC B1853/62 Short to B+ in Rear Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib RH circuit consists of the center airbag sensor and the rear seat side airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1850/62	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib RH circuit during the primary check. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1851/62	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib RH circuit for 2 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1852/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1853/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

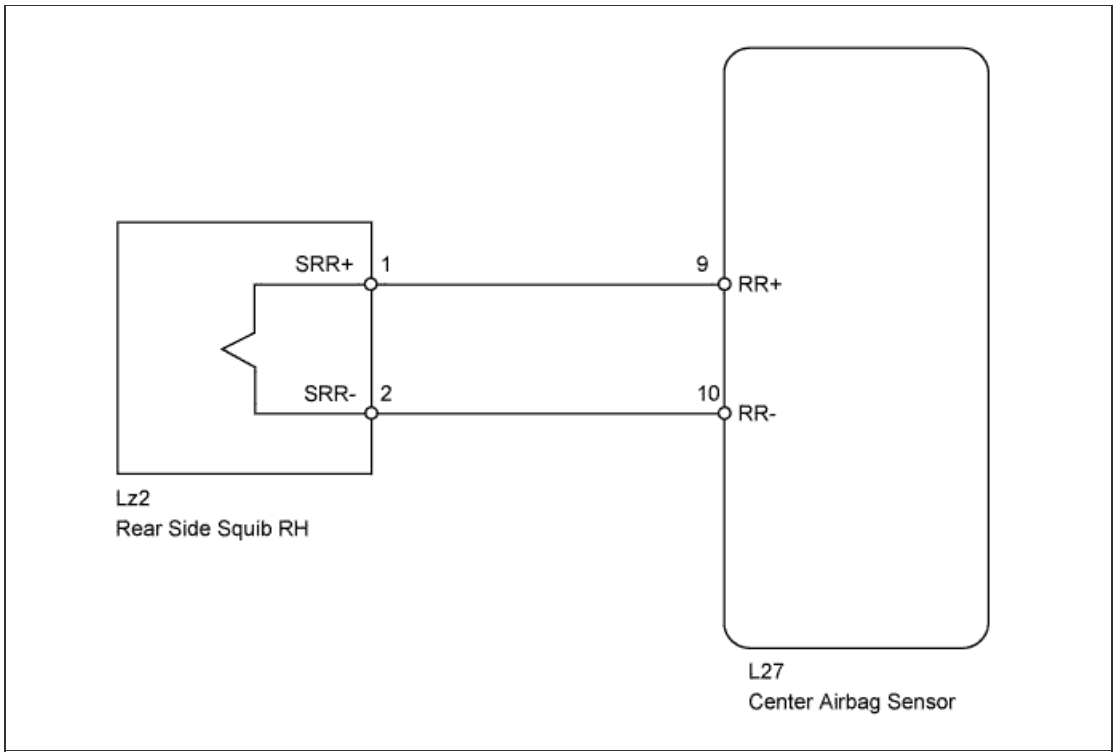

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG RH (REAR SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag RH (rear side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

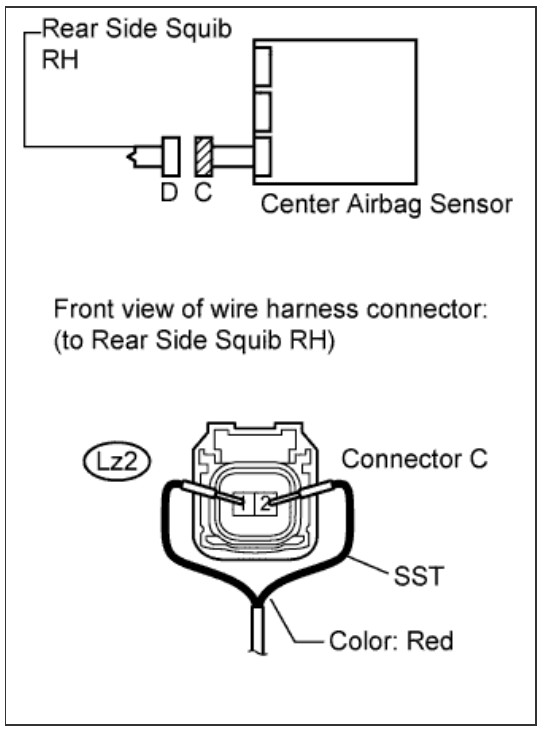

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1850 B1851 B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (REAR SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST (resistance: 2.1 Ω) from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

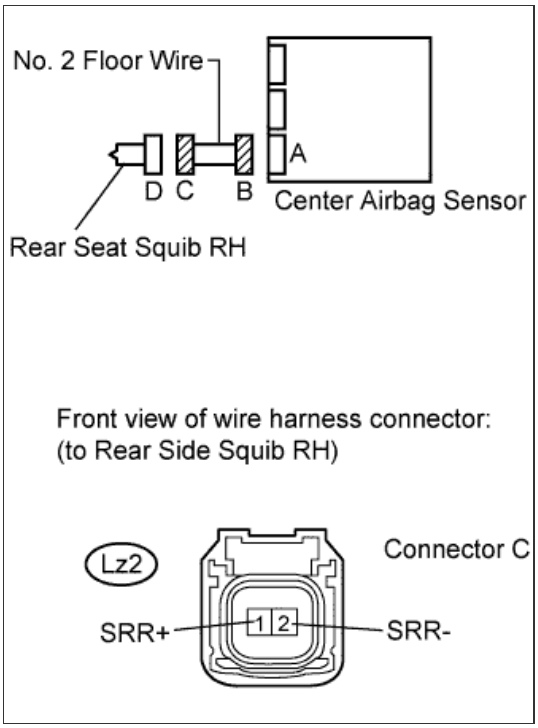

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz2-1 (SRR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz2-2 (SRR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	1 MΩ or higher
Lz2-1 (SRR+) - Body ground	Always	1 MΩ or higher
Lz2-2 (SRR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

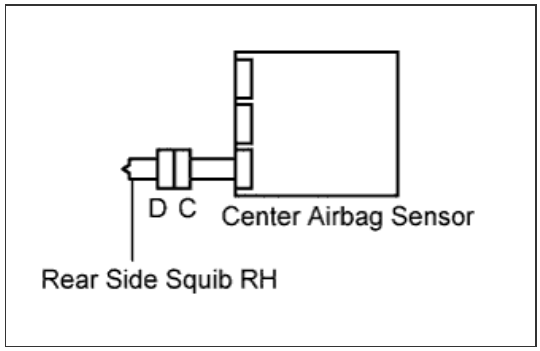

OK:

DTC B1850, B1851, B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1651/33 Manual Cut off Switch Trouble

for Preparation Click here

DESCRIPTION


HINT:

"Manual cut off switch" refers to the airbag cut-off switch.

- The airbag cut-off switch circuit consists of the center airbag sensor and the airbag cut-off switch.
  The front passenger airbag can be optionally deactivated via this circuit by turning the airbag cut-off switch to the "OFF" position.
  If the front passenger airbag is deactivated, the passenger airbag "OFF" indicator comes on to inform the passengers.
  DTC B1651/33 is recorded when a malfunction is detected in the airbag cut-off switch circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1651/33	When all the conditions below are met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the airbag cut-off switch circuit for 2 seconds. • A airbag cut-off switch malfunction • A center airbag sensor malfunction	• Instrument panel wire • No. 2 instrument panel wire • Airbag cut-off switch • Center airbag sensor assembly

WIRING DIAGRAM

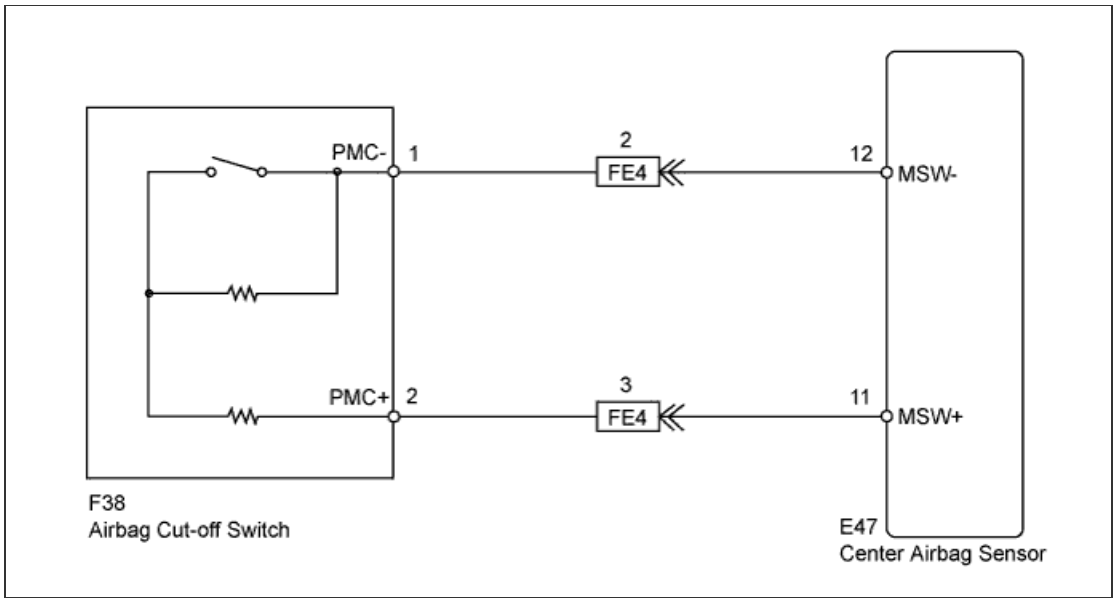

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

The E47-11 (MSW+) and E47-12 (MSW-) terminals in this circuit have an activation prevention mechanism. This mechanism can be used to check for an open circuit in the wire harness. In case of other checks (check for short, short to ground or short to B+), this mechanism should be released.

1.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - AIRBAG CUT-OFF SWITCH)

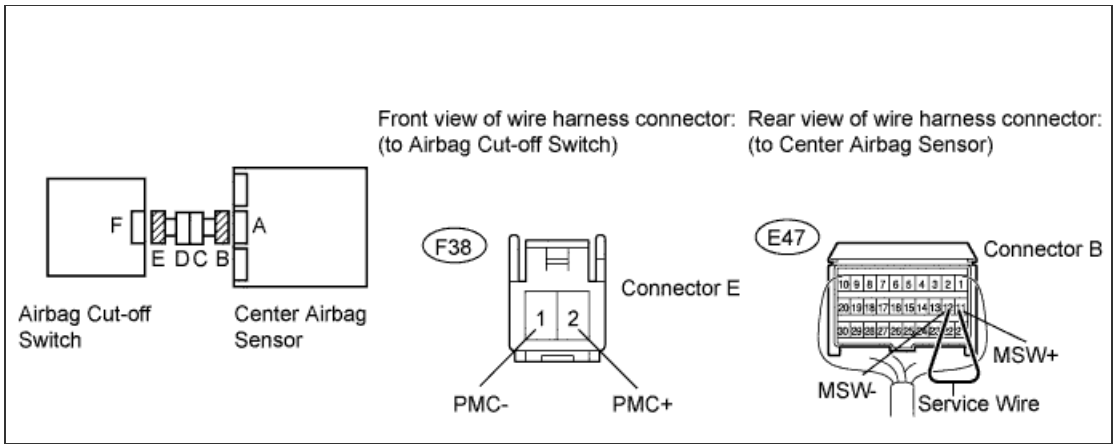

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the center airbag sensor and airbag cut-off switch.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG).

f. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
F38-2 (PMC+) - Body ground	Engine switch on (IG)	Below 1 V
F38-1 (PMC-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Using a service wire, connector terminals 11 (MSW+) and 12 (MSW-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

j. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F38-2 (PMC+) - F38-1 (PMC-)	Always	Below 1 Ω

k. Disconnect a service wire from connector B.

l. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F38-2 (PMC+) - F38-1 (PMC-)	Always	1 MΩ or higher
F38-2 (PMC+) - Body ground	Always	1 MΩ or higher
F38-1 (PMC-) - Body ground	Always	1 MΩ or higher

NG → Go to step 4

OK

.INSPECT AIRBAG CUT-OFF SWITCH


a. Remove the airbag cut-off switch (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
2 (PMC+) - 1 (PMC-)	Cut off switch is in "ON" position (Front passenger side airbag is active)	360 to 440 Ω
2 (PMC+) - 1 (PMC-)	Cut off switch is in "OFF" position (Front passenger side airbag is not active)	90 to 110 Ω

Component without harness connected:
(Airbag Cut-off Switch)

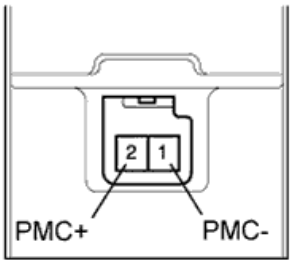

NG → REPLACE AIRBAG CUT-OFF SWITCH (Click here)

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the center airbag sensor and the airbag cut-off switch.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check the DTCs (Click here).

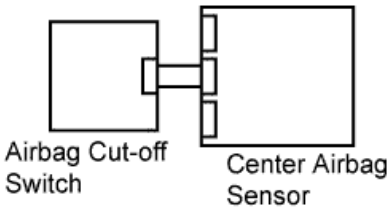

OK:
DTC B1651 is not output.

HINT:


Codes other than DTC B1651 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

4.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - NO. 2 INSTRUMENT PANEL WIRE)

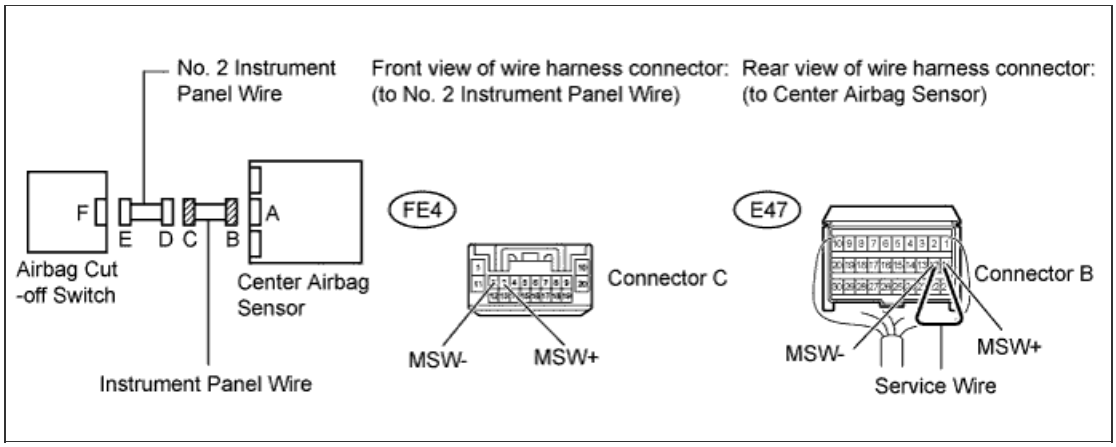

a. Disconnect the instrument panel wire connector from the No. 2 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG).

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
FE4-3 (MSW+) - Body ground	Engine switch on (IG)	Below 1 V
FE4-2 (MSW-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Using a service wire, connector terminals 11 (MSW+) and 12 (MSW-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-3 (MSW+) - FE4-2 (MSW-)	Always	Below 1 Ω

i. Disconnect the service wire from connector B.

j. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-3 (MSW+) - FE4-2 (MSW-)	Always	1 MΩ or higher
FE4-3 (MSW+) - Body ground	Always	1 MΩ or higher
FE4-2 (MSW-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK

REPLACE NO. 2 INSTRUMENT PANEL WIRE

DTC B1850/62 Short in Rear Side Squib RH Circuit

DTC B1851/62 Open in Rear Side Squib RH Circuit

DTC B1852/62 Short to GND in Rear Side Squib RH Circuit

DTC B1853/62 Short to B+ in Rear Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib RH circuit consists of the center airbag sensor and the rear seat side airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1850/62	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib RH circuit during the primary check. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1851/62	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib RH circuit for 2 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1852/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly
B1853/62	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib RH circuit for 0.5 seconds. • A rear side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat side airbag assembly RH (Rear side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

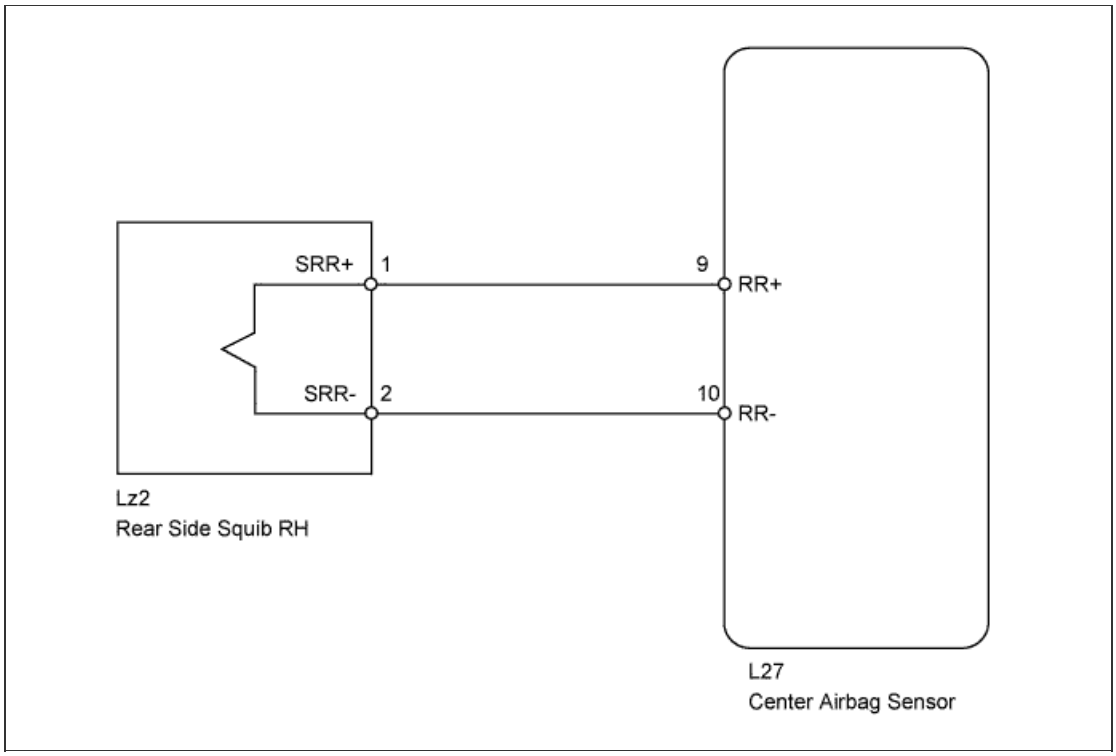

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG RH (REAR SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag RH (rear side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

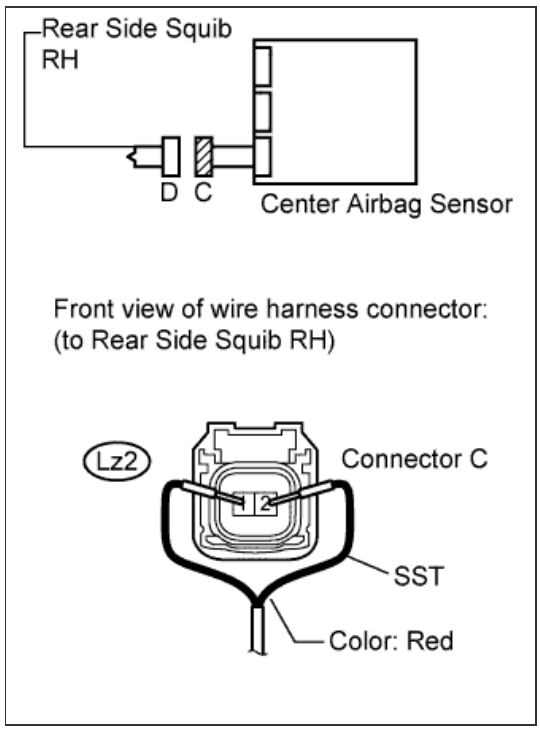

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1850 B1851 B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (REAR SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST (resistance: 2.1 Ω) from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

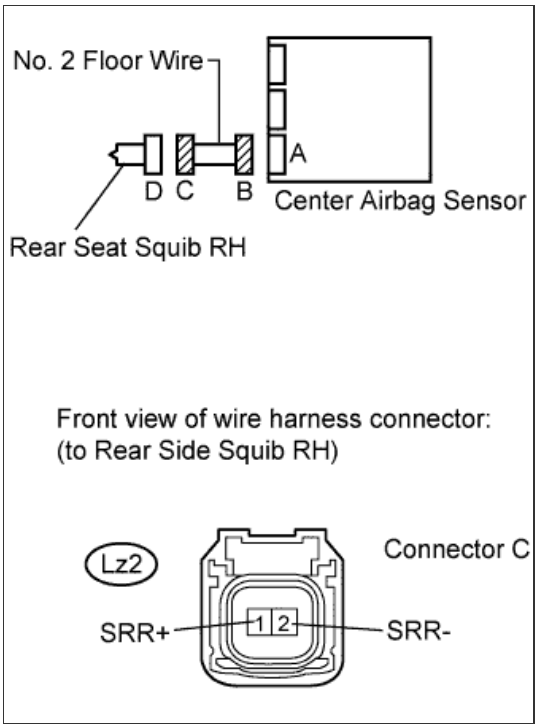

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz2-1 (SRR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz2-2 (SRR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz2-1 (SRR+) - Lz2-2 (SRR-)	Always	1 MΩ or higher
Lz2-1 (SRR+) - Body ground	Always	1 MΩ or higher
Lz2-2 (SRR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

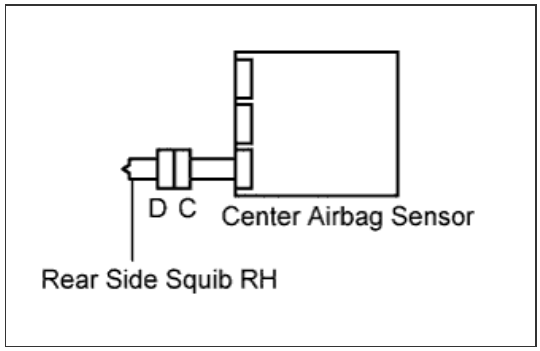

OK:

DTC B1850, B1851, B1852 or B1853 is not output.

HINT:

Codes other than DTC B1850, B1851, B1852 and B1853 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1651/33 Manual Cut off Switch Trouble

for Preparation Click here

DESCRIPTION


HINT:

"Manual cut off switch" refers to the airbag cut-off switch.

- The airbag cut-off switch circuit consists of the center airbag sensor and the airbag cut-off switch.
  The front passenger airbag can be optionally deactivated via this circuit by turning the airbag cut-off switch to the "OFF" position.
  If the front passenger airbag is deactivated, the passenger airbag "OFF" indicator comes on to inform the passengers.
  DTC B1651/33 is recorded when a malfunction is detected in the airbag cut-off switch circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1651/33	When all the conditions below are met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the airbag cut-off switch circuit for 2 seconds. • A airbag cut-off switch malfunction • A center airbag sensor malfunction	• Instrument panel wire • No. 2 instrument panel wire • Airbag cut-off switch • Center airbag sensor assembly

WIRING DIAGRAM

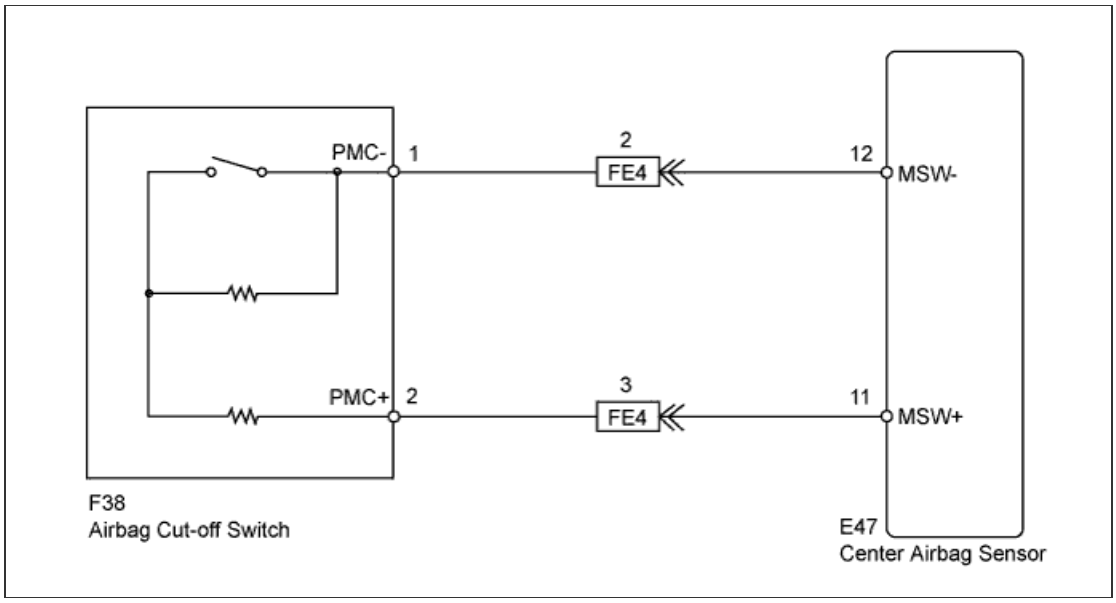

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

The E47-11 (MSW+) and E47-12 (MSW-) terminals in this circuit have an activation prevention mechanism. This mechanism can be used to check for an open circuit in the wire harness. In case of other checks (check for short, short to ground or short to B+), this mechanism should be released.

1.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - AIRBAG CUT-OFF SWITCH)

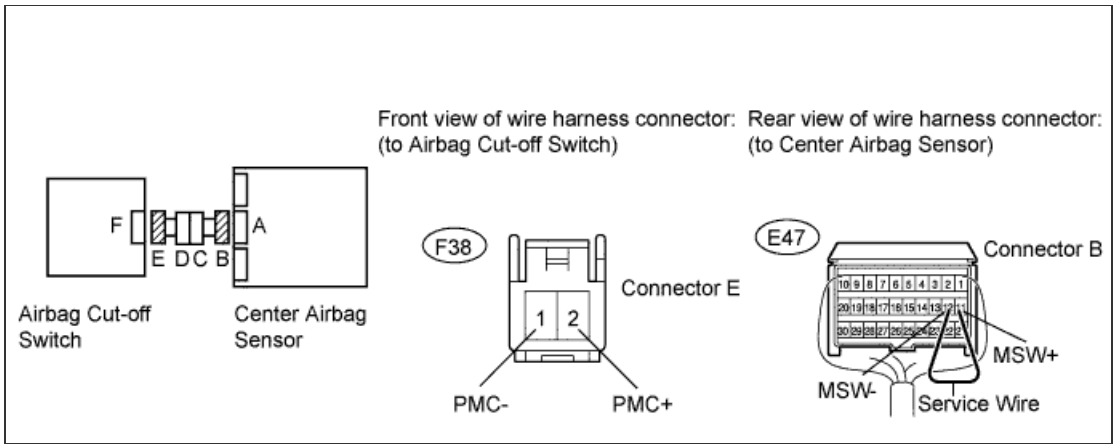

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the center airbag sensor and airbag cut-off switch.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG).

f. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
F38-2 (PMC+) - Body ground	Engine switch on (IG)	Below 1 V
F38-1 (PMC-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Using a service wire, connector terminals 11 (MSW+) and 12 (MSW-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

j. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F38-2 (PMC+) - F38-1 (PMC-)	Always	Below 1 Ω

k. Disconnect a service wire from connector B.

l. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F38-2 (PMC+) - F38-1 (PMC-)	Always	1 MΩ or higher
F38-2 (PMC+) - Body ground	Always	1 MΩ or higher
F38-1 (PMC-) - Body ground	Always	1 MΩ or higher

NG → Go to step 4

OK

.INSPECT AIRBAG CUT-OFF SWITCH


a. Remove the airbag cut-off switch (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
2 (PMC+) - 1 (PMC-)	Cut off switch is in "ON" position (Front passenger side airbag is active)	360 to 440 Ω
2 (PMC+) - 1 (PMC-)	Cut off switch is in "OFF" position (Front passenger side airbag is not active)	90 to 110 Ω

Component without harness connected:
(Airbag Cut-off Switch)

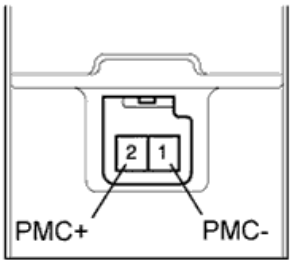

NG → REPLACE AIRBAG CUT-OFF SWITCH (Click here)

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the center airbag sensor and the airbag cut-off switch.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check the DTCs (Click here).

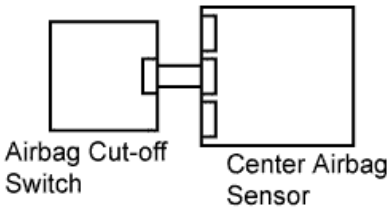

OK:
DTC B1651 is not output.

HINT:


Codes other than DTC B1651 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

4.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - NO. 2 INSTRUMENT PANEL WIRE)

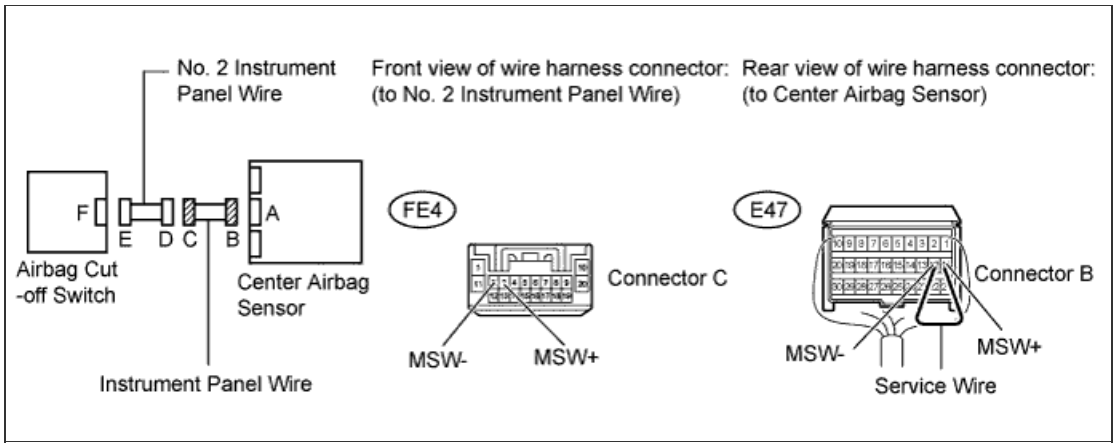

a. Disconnect the instrument panel wire connector from the No. 2 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG).

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
FE4-3 (MSW+) - Body ground	Engine switch on (IG)	Below 1 V
FE4-2 (MSW-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Using a service wire, connector terminals 11 (MSW+) and 12 (MSW-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-3 (MSW+) - FE4-2 (MSW-)	Always	Below 1 Ω

i. Disconnect the service wire from connector B.

j. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-3 (MSW+) - FE4-2 (MSW-)	Always	1 MΩ or higher
FE4-3 (MSW+) - Body ground	Always	1 MΩ or higher
FE4-2 (MSW-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK

REPLACE NO. 2 INSTRUMENT PANEL WIRE

DTC B1855/63 Short in Rear Side Squib LH Circuit

DTC B1856/63 Open in Rear Side Squib LH Circuit

DTC B1857/63 Short to GND in Rear Side Squib LH Circuit

DTC B1858/63 Short to B+ in Rear Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib LH circuit consists of the center airbag sensor and the rear seat side airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1855/63	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib LH circuit during the primary check. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1856/63	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib LH circuit for 2 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1857/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1858/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

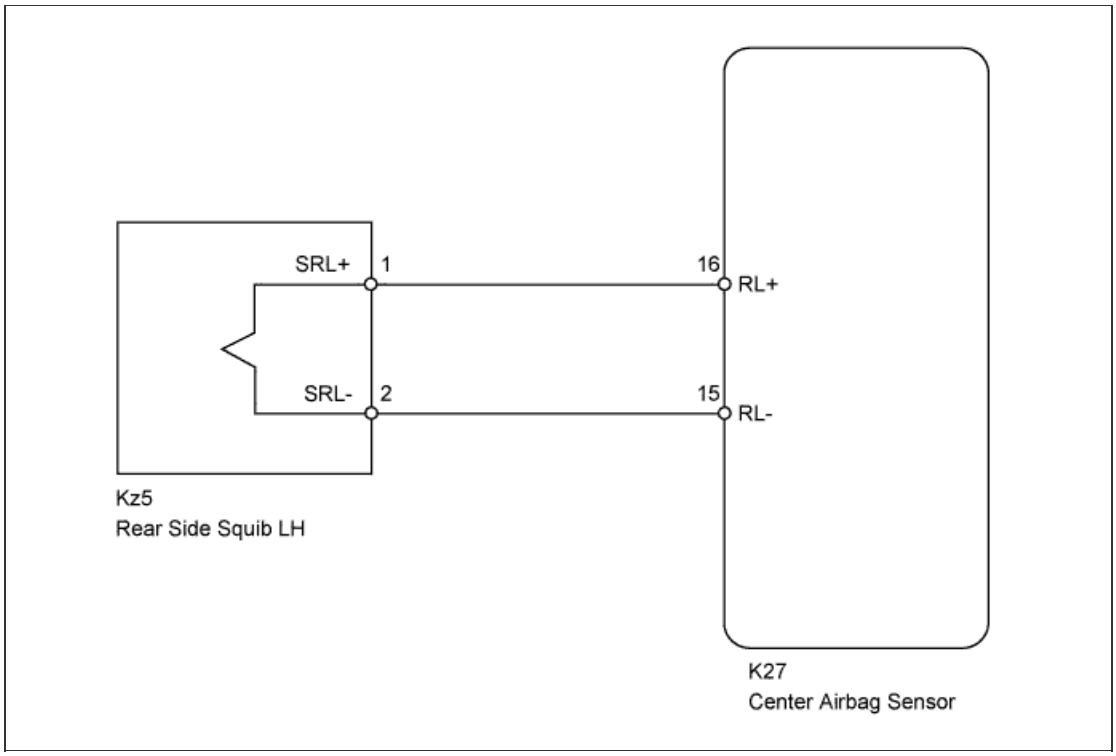

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG LH (REAR SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag LH (rear side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

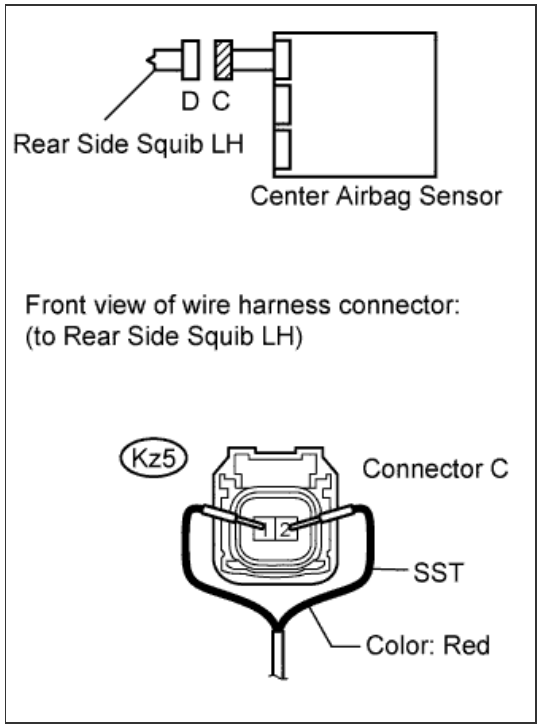

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (REAR SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

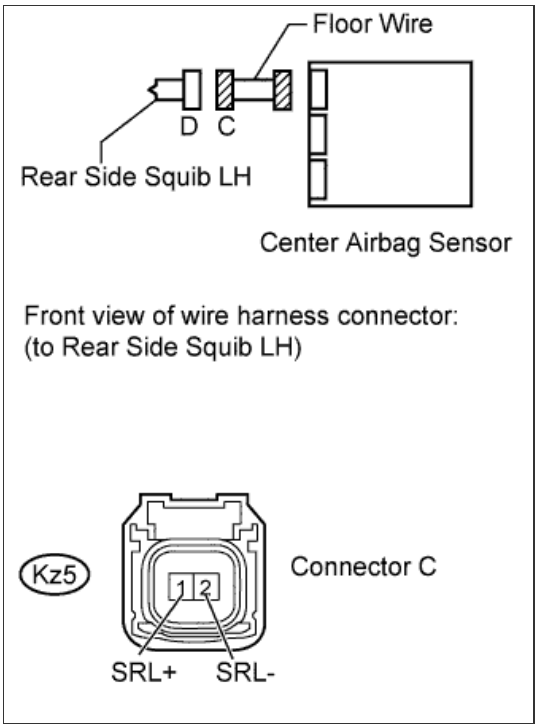

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz5-1 (SRL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz5-2 (SRL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	1 MΩ or higher
Kz5-1 (SRL+) - Body ground	Always	1 MΩ or higher
Kz5-2 (SRL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

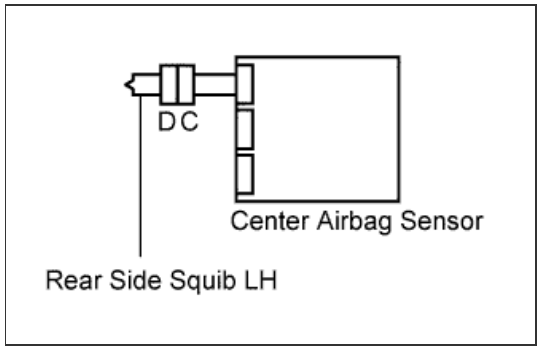

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1653/35 Seat Position Airbag Sensor Circuit Malfunction

for Preparation Click here

DESCRIPTION

The seat position sensor circuit consists of the center airbag sensor and the seat position sensor.
DTC B1653/35 is stored when a malfunction is detected in the seat position sensor circuit.


for LHD

DTC Code	DTC Detection Condition	Trouble Area
B1653/35	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the seat position sensor circuit for 2 seconds. • A seat position sensor malfunction. • A center airbag sensor malfunction.	• Floor wire • Seat position sensor • Center airbag sensor assembly


for RHD

DTC Code	DTC Detection Condition	Trouble Area
B1653/35	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the seat position sensor circuit for 2 seconds. • A seat position sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Seat position sensor • Center airbag sensor assembly


WIRING DIAGRAM

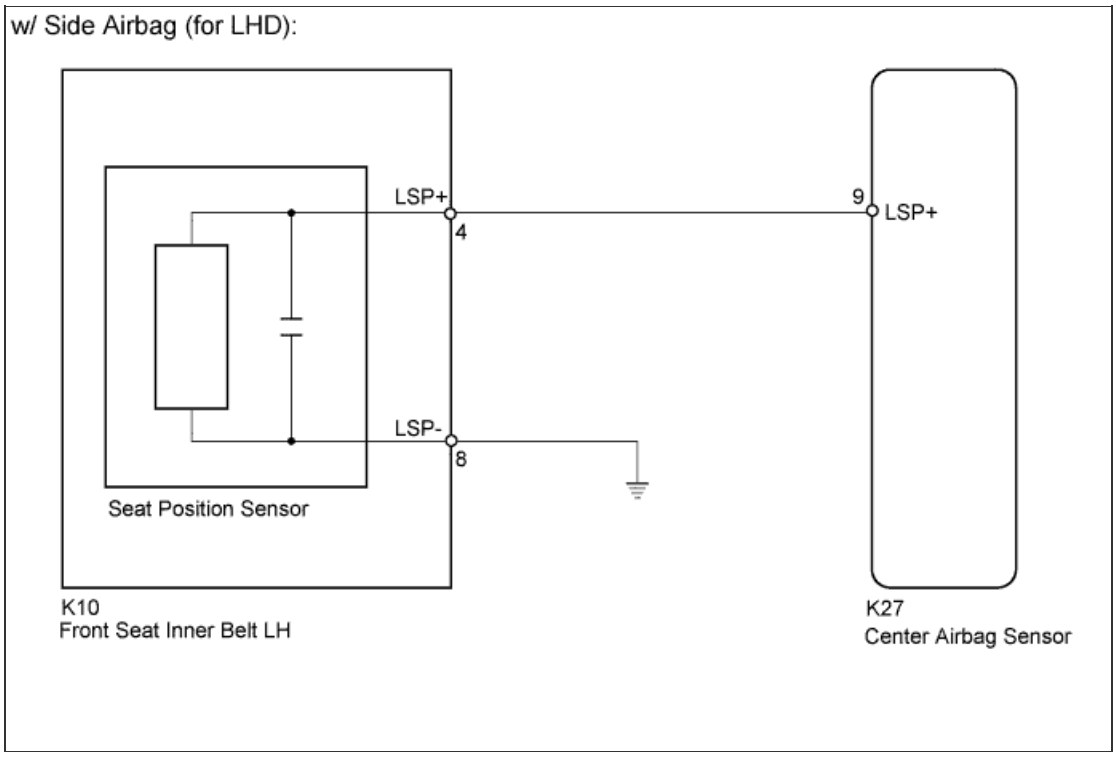


w/o Side Airbag (for LHD):

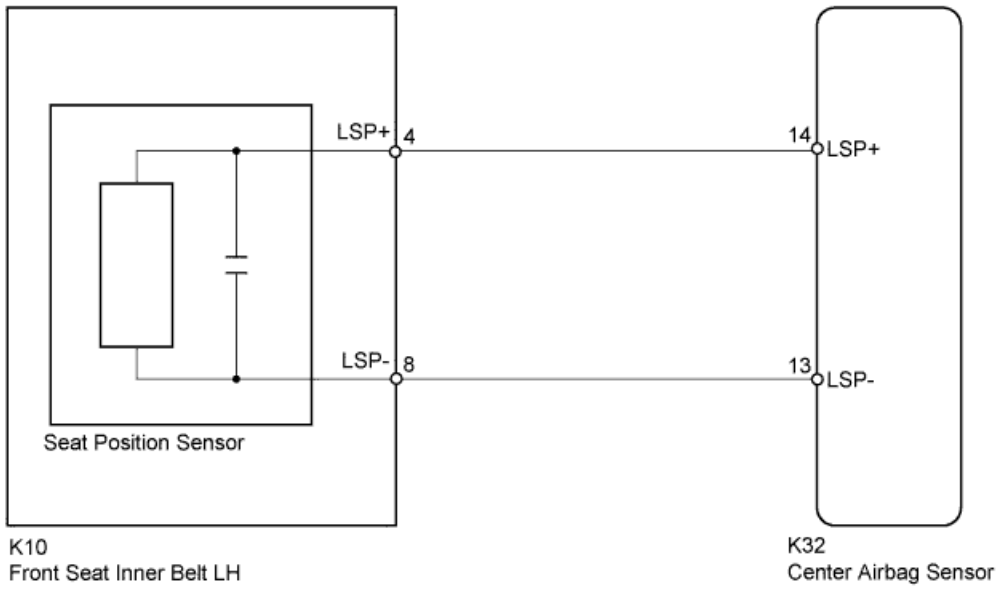

w/ Side Airbag (for RHD):

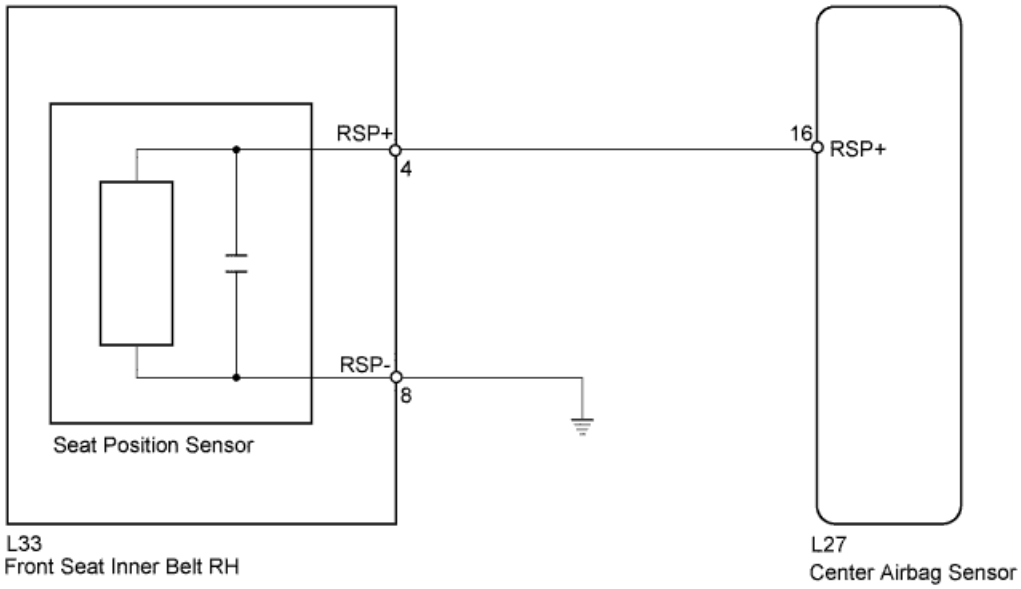

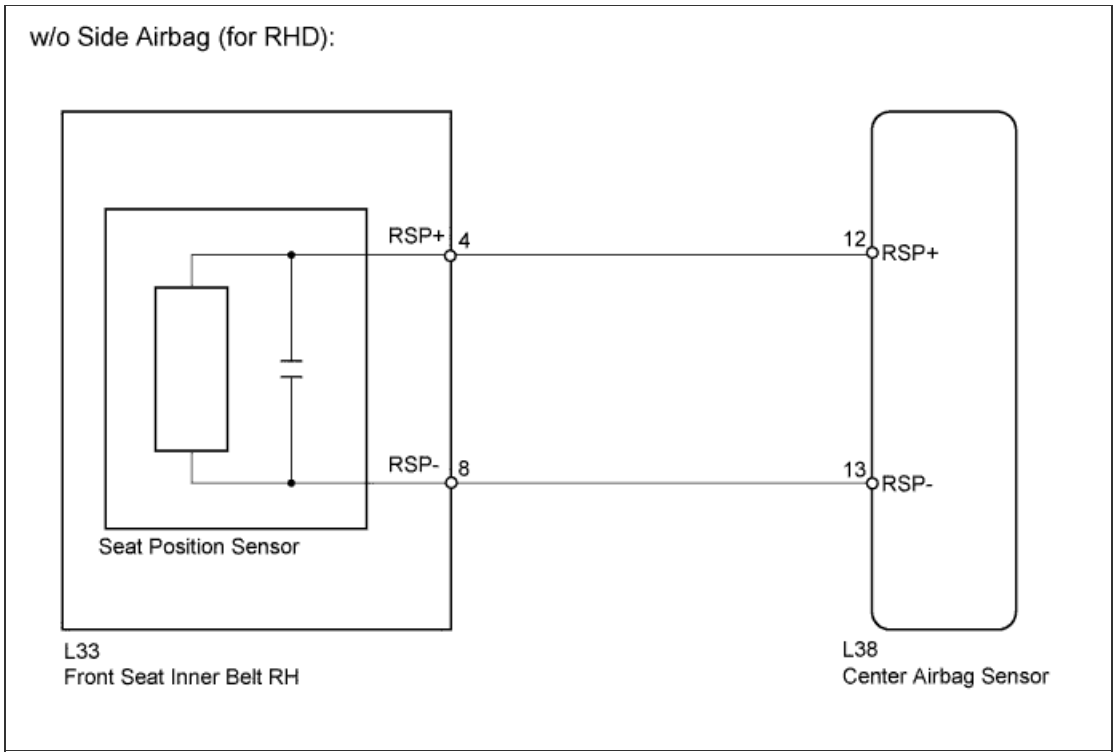

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK VEHICLE CONDITION

a. Check vehicle condition.

Result

Result	Proceed to
for LHD	A
for RHD	B

B → Go to step 9

A

2.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.


e. Check for DTCs (Click here).

OK:

DTC B1653 is not output.

HINT:

Codes other than DTC B1653 may be output at this time, but they are not related to this check.

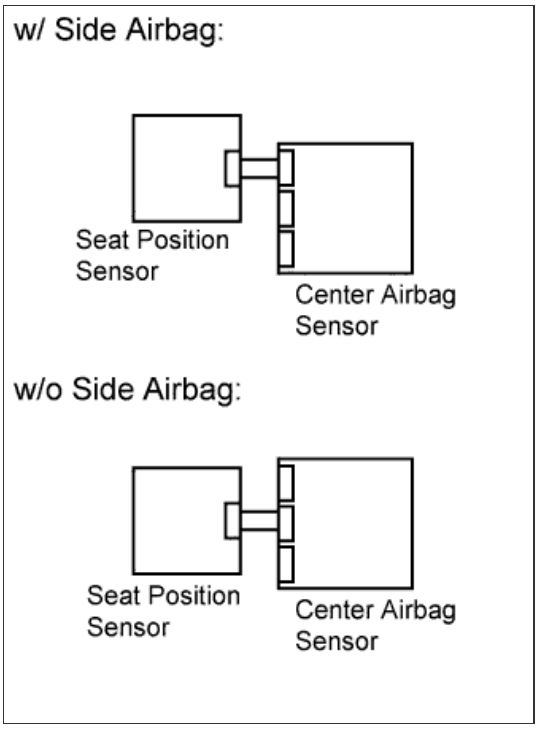

NG → Go to step 3

OK

USE SIMULATION METHOD TO CHECK (Click here)

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the seat position sensor.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the seat position sensor.


b. Check that the connectors (on the center airbag sensor side and seat position sensor side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

5.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - SEAT POSITION SENSOR)

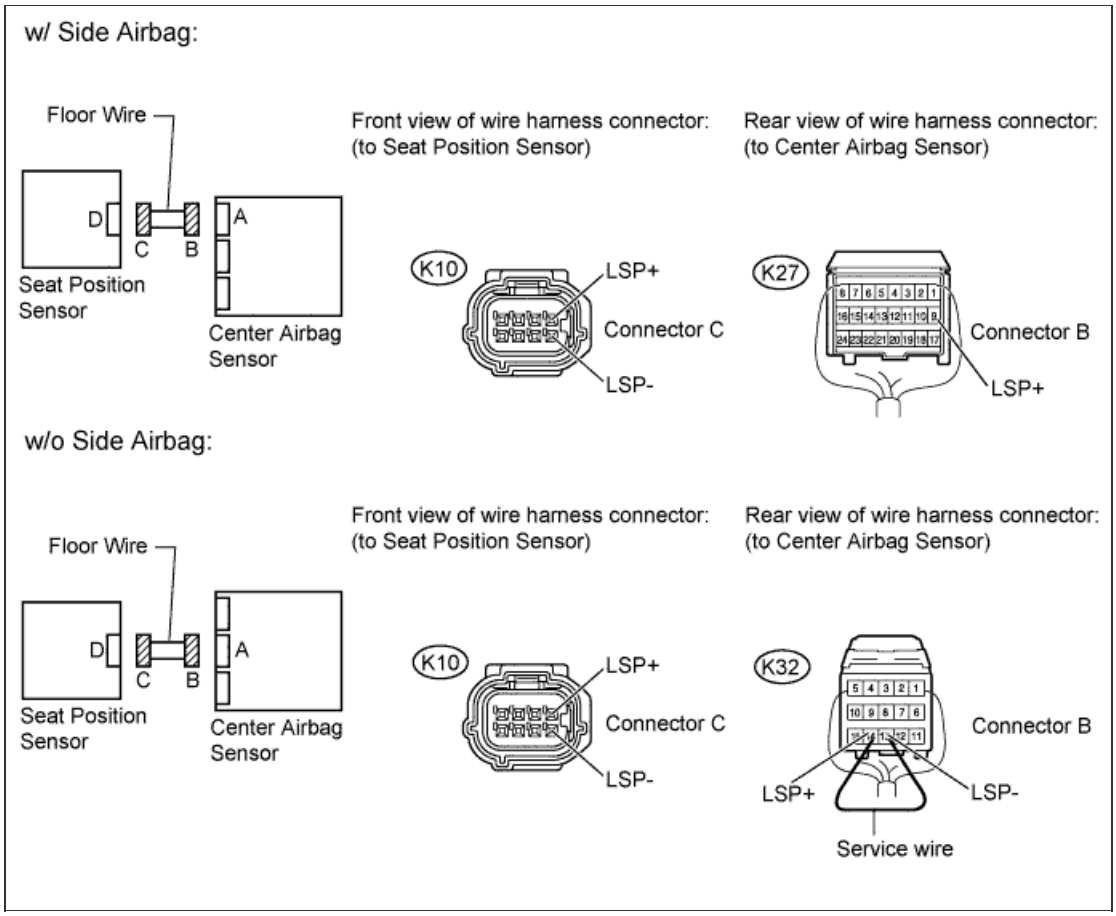

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K10-4 (LSP+) - Body ground	Engine switch on (IG)	Below 1 V
K10-8 (LSP-) - Body ground	Engine switch on (IG)	Below 1 V

c. w/ Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-4 (LSP+) - K27-9 (LSP+)	Always	Below 1 Ω
K10-4 (LSP+) - Body ground	Always	1 MΩ or higher
K10-8 (LSP-) - Body ground	Always	Below 1 Ω

d. w/o Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Using a service wire, connect terminals 14 (LSP+) and 13 (LSP-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

iv. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-4 (LSP+) - K10-8 (LSP-)	Always	Below 1 Ω

v. Disconnect the service wire from connector B.

vi. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-4 (LSP+) - K10-8 (LSP-)	Always	1 MΩ or higher
K10-4 (LSP+) - Body ground	Always	1 MΩ or higher
K10-8 (LSP-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

6.CHECK SEAT POSITION SENSOR (FRONT SEAT INNER BELT LH)

a. Connect the connectors to the center airbag sensor and the seat position sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1653 is not output.

HINT:

Codes other than DTC B1653 may be output at this time, but they are not related to this check.

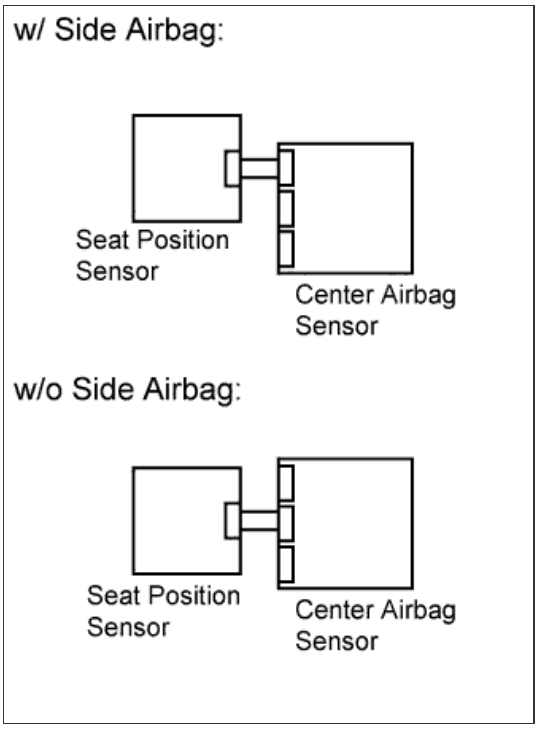

NG → Go to step 7

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

7.REPLACE SEAT POSITION SENSOR (FRONT SEAT INNER BELT LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Replace the front seat inner belt LH (Click here).

HINT:

Perform the inspection using parts from a normally functioning vehicle if possible.

NEXT

8.CHECK CENTER AIRBAG SENSOR

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Clear the DTCs (Click here).

d. Turn the engine switch off.


e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Check for DTCs (Click here).

OK:
DTC B1653 is not output.

HINT:

Codes other than DTC B1653 may be output at this time, but they are not related to this check.

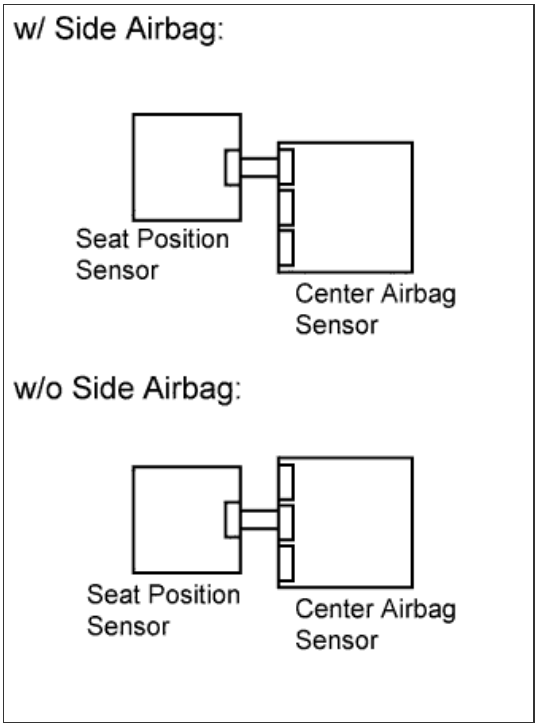

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE FRONT SEAT INNER BELT ASSEMBLY LH (Click here)

9.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs (Click here).

c. Turn the engine switch off.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

OK:
DTC B1653/35 is not output.

HINT:

Codes other than DTC B1653/35 may be output at this time, but they are not related to this check.

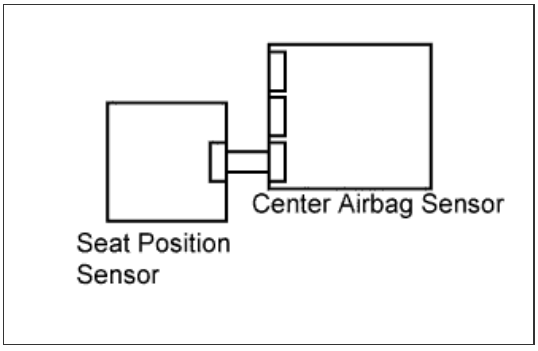

NG → Go to step 10

OK

USE SIMULATION METHOD TO CHECK (Click here)

10.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the seat position sensor.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK ↓

11.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the seat position sensor.


b. Check that the connectors (on the center airbag sensor side and seat position sensor side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK ↓

12.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - SEAT POSITION SENSOR)

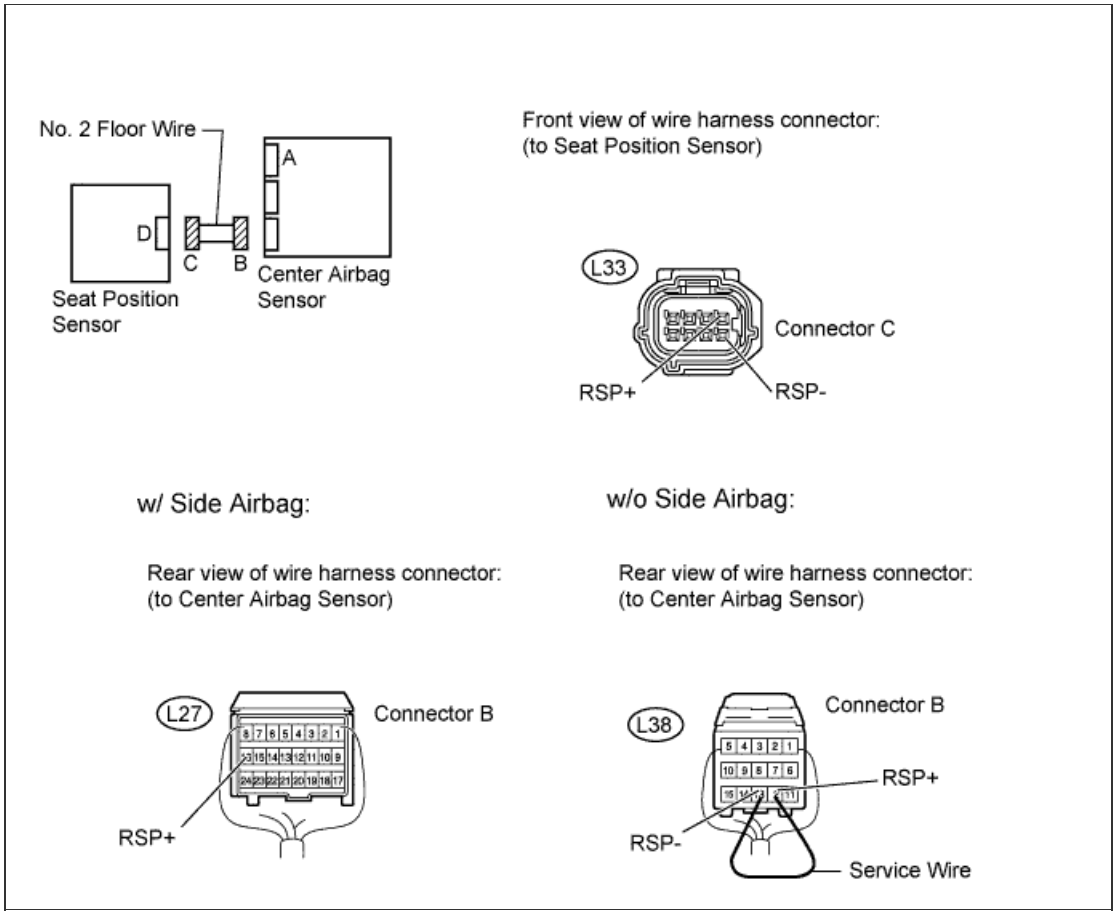

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L33-4 (RSP+) - Body ground	Engine switch on (IG)	Below 1 V
L33-8 (RSP-) - Body ground	Engine switch on (IG)	Below 1 V

c. w/ Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-4 (RSP+) - L27-16 (RSP+)	Always	Below 1 Ω
L33-4 (RSP+) - Body ground	Always	1 MΩ or higher
L33-8 (RSP-) - Body ground	Always	Below 1 Ω

d. w/o Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Using a service wire, connect terminals 12 (RSP+) and 13 (RSP-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

iv. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-4 (RSP+) - L33-8 (RSP-)	Always	Below 1 Ω

v. Disconnect the service wire from connector B.

vi. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-4 (RSP+) - Body ground	Always	1 MΩ or higher
L33-8 (RLSP-) - Body ground	Always	Below 1 Ω

NG → REPLACE NO. 2 FLOOR WIRE

OK

13.CHECK SEAT POSITION SENSOR (FRONT SEAT INNER BELT RH)

a. Connect the connectors to the center airbag sensor and the seat position sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

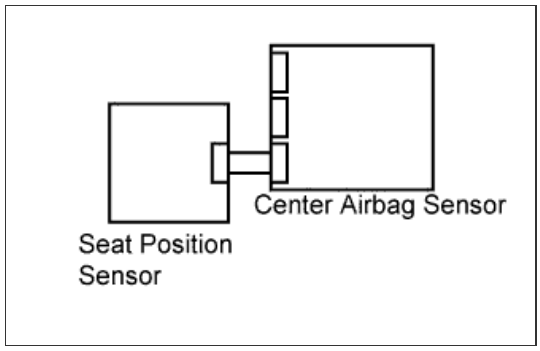

OK:
DTC B1653/35 is not output.

HINT:

Codes other than DTC B1653/35 may be output at this time, but they are not related to this check.

NG → Go to step 14

OK

USE SIMULATION METHOD TO CHECK (Click here)

14.REPLACE SEAT POSITION SENSOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Replace the seat position sensor (Click here).

HINT:

Perform inspection using parts from a normal vehicle if possible.

NEXT

15.CHECK CENTER AIRBAG SENSOR

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Clear the DTCs (Click here).

d. Turn the engine switch off.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Check for DTCs (Click here).

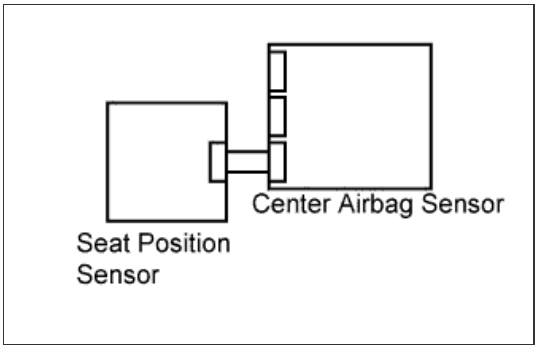

OK:
DTC B1653/35 is not output.

HINT:

Codes other than DTC B1653/35 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE FRONT SEAT INNER BELT ASSEMBLY RH

DTC B1855/63 Short in Rear Side Squib LH Circuit

DTC B1856/63 Open in Rear Side Squib LH Circuit

DTC B1857/63 Short to GND in Rear Side Squib LH Circuit

DTC B1858/63 Short to B+ in Rear Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib LH circuit consists of the center airbag sensor and the rear seat side airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1855/63	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib LH circuit during the primary check. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1856/63	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib LH circuit for 2 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1857/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1858/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

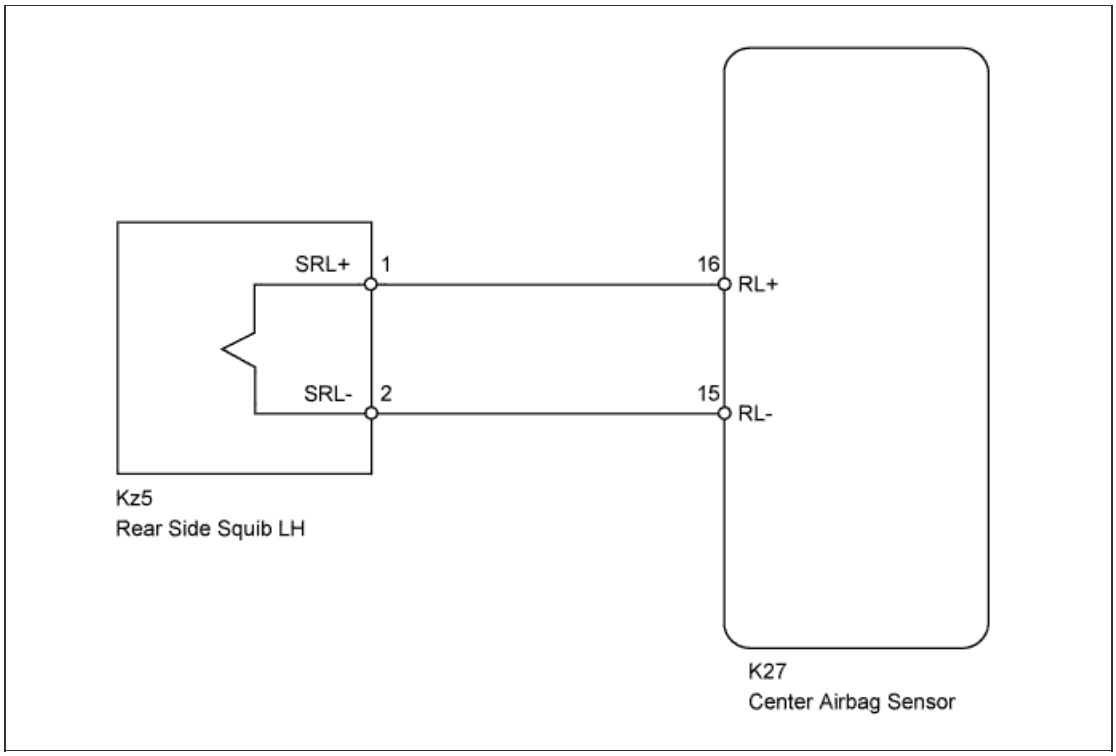

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG LH (REAR SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag LH (rear side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

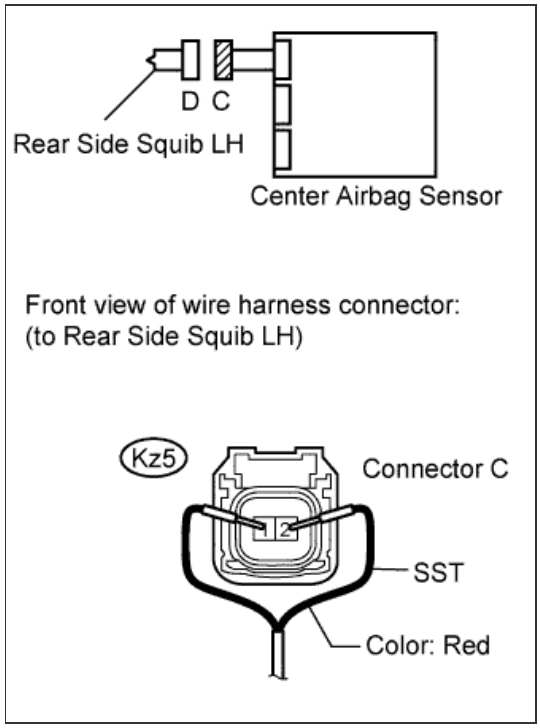

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (REAR SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

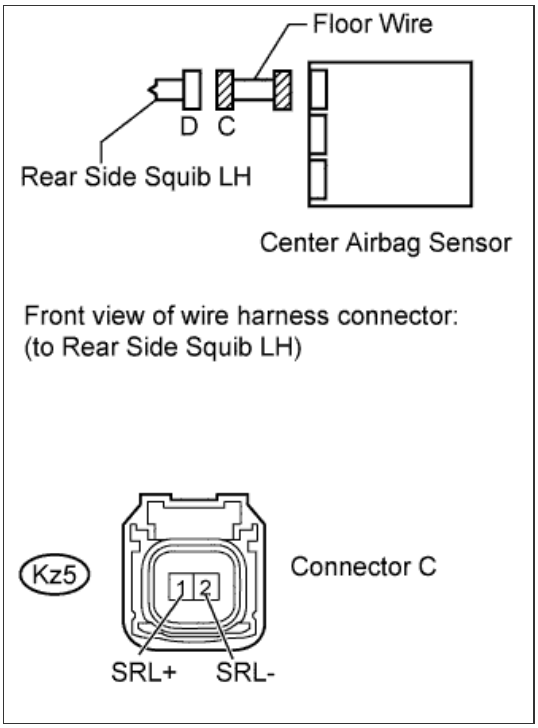

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz5-1 (SRL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz5-2 (SRL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	1 MΩ or higher
Kz5-1 (SRL+) - Body ground	Always	1 MΩ or higher
Kz5-2 (SRL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

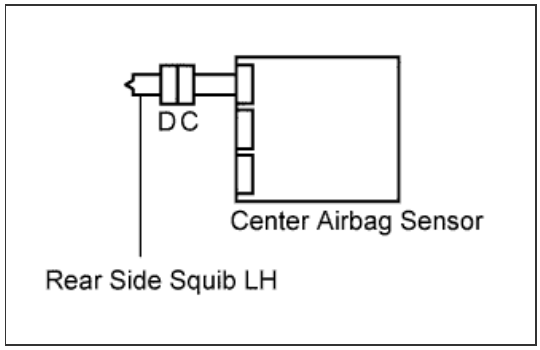

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1653/35 Seat Position Airbag Sensor Circuit Malfunction

for Preparation Click here

DESCRIPTION

The seat position sensor circuit consists of the center airbag sensor and the seat position sensor.
DTC B1653/35 is stored when a malfunction is detected in the seat position sensor circuit.


for LHD

DTC Code	DTC Detection Condition	Trouble Area
B1653/35	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the seat position sensor circuit for 2 seconds. • A seat position sensor malfunction. • A center airbag sensor malfunction.	• Floor wire • Seat position sensor • Center airbag sensor assembly


for RHD

DTC Code	DTC Detection Condition	Trouble Area
B1653/35	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the seat position sensor circuit for 2 seconds. • A seat position sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Seat position sensor • Center airbag sensor assembly


WIRING DIAGRAM

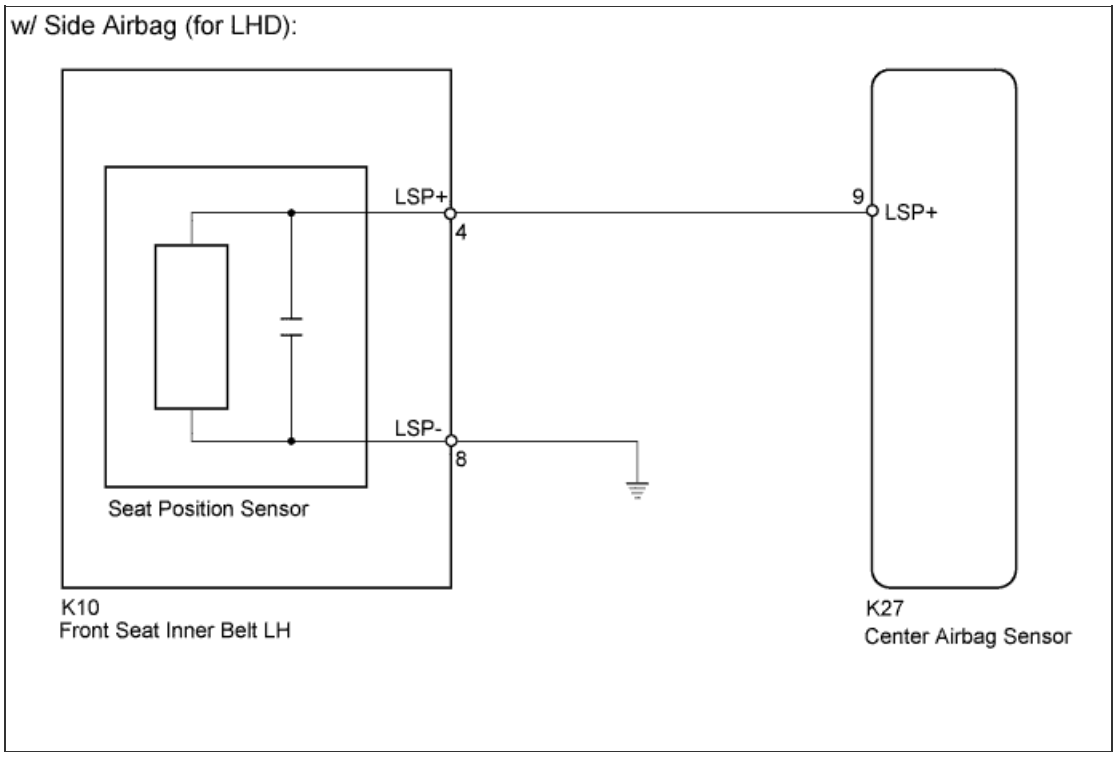


w/o Side Airbag (for LHD):

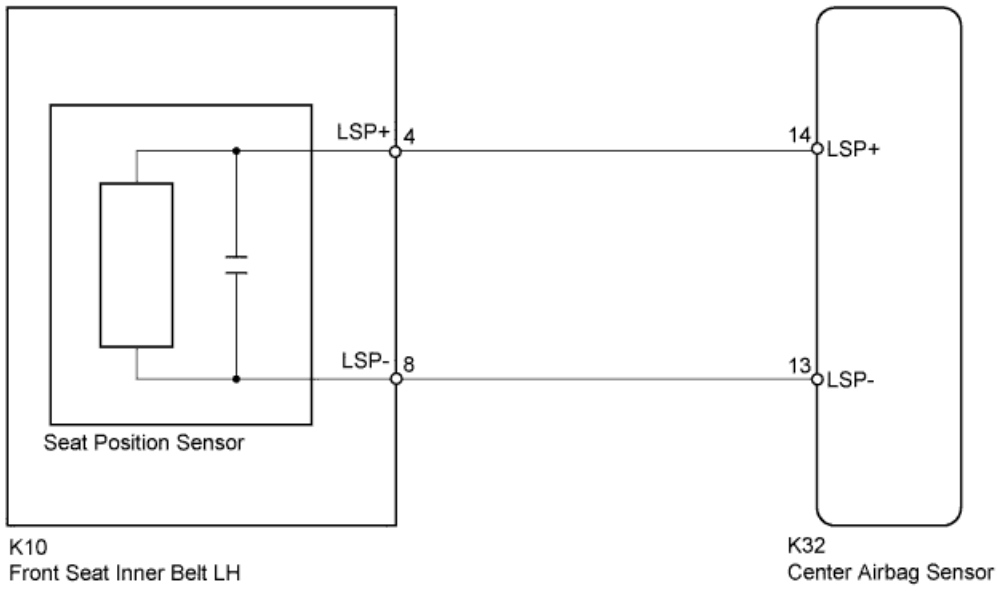

w/ Side Airbag (for RHD):

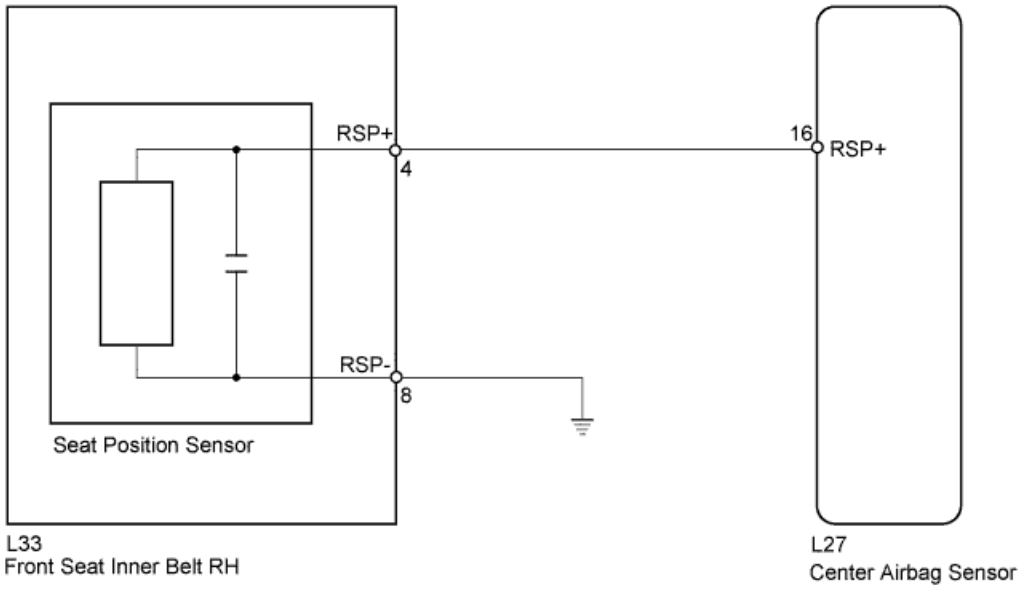

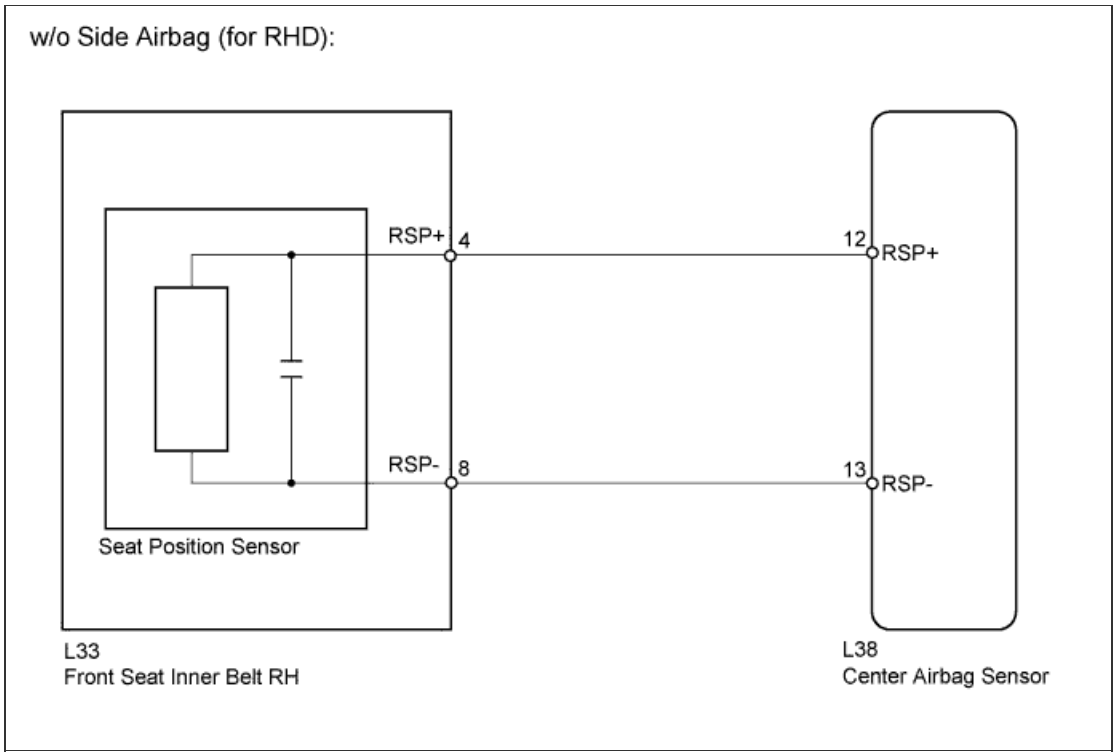

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK VEHICLE CONDITION

a. Check vehicle condition.

Result

Result	Proceed to
for LHD	A
for RHD	B

B → Go to step 9

A

2.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.


e. Check for DTCs (Click here).

OK:

DTC B1653 is not output.

HINT:

Codes other than DTC B1653 may be output at this time, but they are not related to this check.

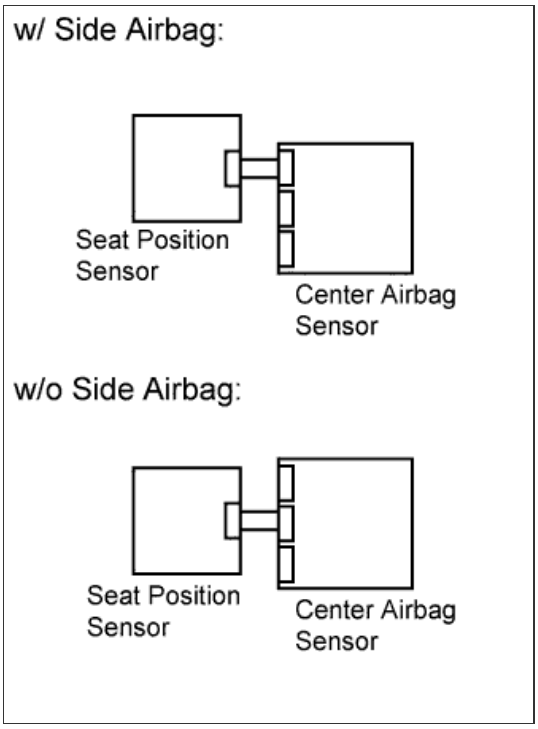

NG → Go to step 3

OK

USE SIMULATION METHOD TO CHECK (Click here)

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the seat position sensor.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the seat position sensor.


b. Check that the connectors (on the center airbag sensor side and seat position sensor side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

5.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - SEAT POSITION SENSOR)

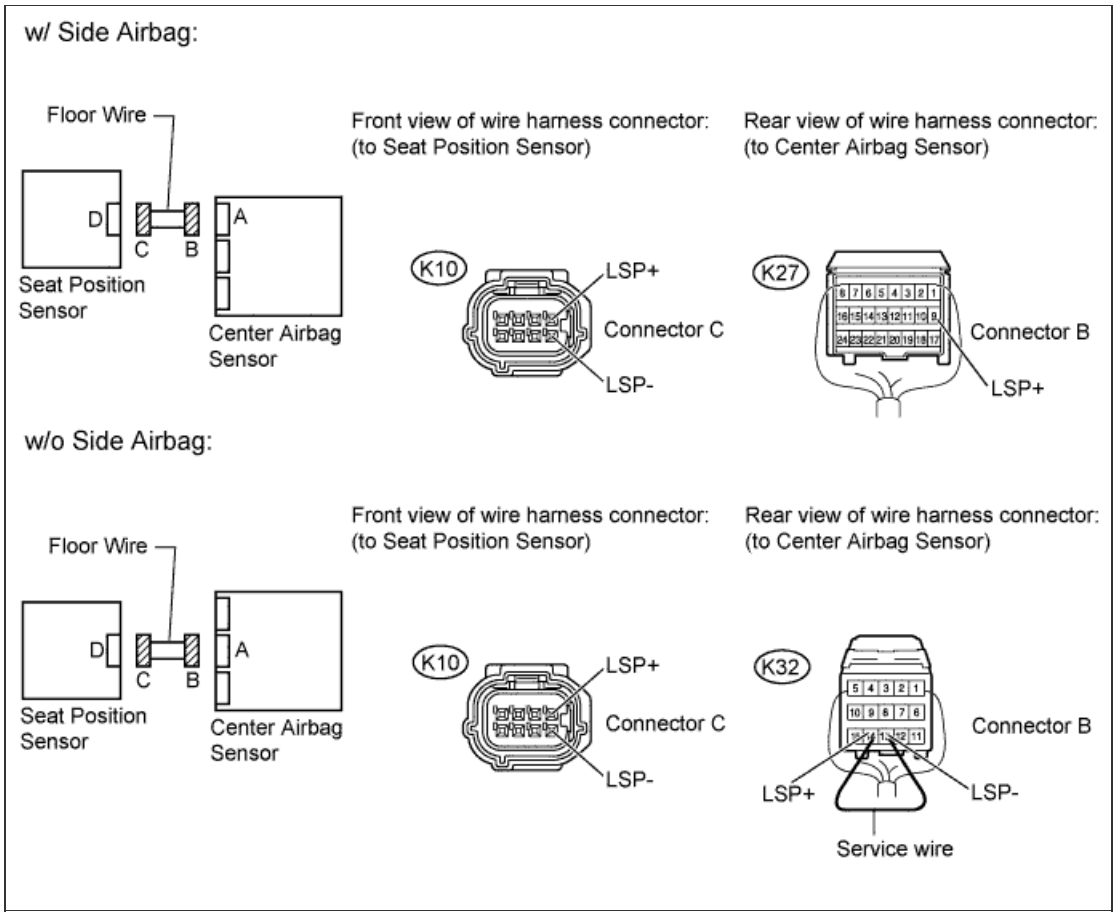

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K10-4 (LSP+) - Body ground	Engine switch on (IG)	Below 1 V
K10-8 (LSP-) - Body ground	Engine switch on (IG)	Below 1 V

c. w/ Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-4 (LSP+) - K27-9 (LSP+)	Always	Below 1 Ω
K10-4 (LSP+) - Body ground	Always	1 MΩ or higher
K10-8 (LSP-) - Body ground	Always	Below 1 Ω

d. w/o Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Using a service wire, connect terminals 14 (LSP+) and 13 (LSP-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

iv. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-4 (LSP+) - K10-8 (LSP-)	Always	Below 1 Ω

v. Disconnect the service wire from connector B.

vi. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-4 (LSP+) - K10-8 (LSP-)	Always	1 MΩ or higher
K10-4 (LSP+) - Body ground	Always	1 MΩ or higher
K10-8 (LSP-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

6.CHECK SEAT POSITION SENSOR (FRONT SEAT INNER BELT LH)

a. Connect the connectors to the center airbag sensor and the seat position sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1653 is not output.

HINT:

Codes other than DTC B1653 may be output at this time, but they are not related to this check.

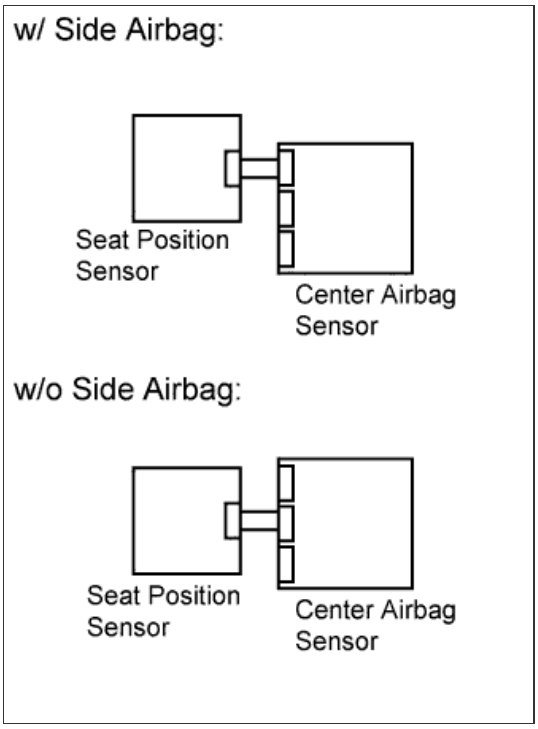

NG → Go to step 7

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

7.REPLACE SEAT POSITION SENSOR (FRONT SEAT INNER BELT LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Replace the front seat inner belt LH (Click here).

HINT:

Perform the inspection using parts from a normally functioning vehicle if possible.

NEXT

8.CHECK CENTER AIRBAG SENSOR

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Clear the DTCs (Click here).

d. Turn the engine switch off.


e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Check for DTCs (Click here).

OK:
DTC B1653 is not output.

HINT:

Codes other than DTC B1653 may be output at this time, but they are not related to this check.

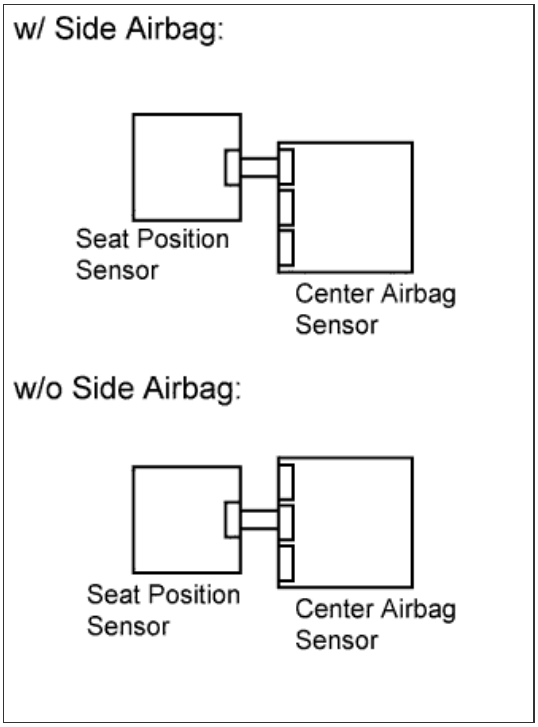

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE FRONT SEAT INNER BELT ASSEMBLY LH (Click here)

9.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs (Click here).

c. Turn the engine switch off.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

OK:
DTC B1653/35 is not output.

HINT:

Codes other than DTC B1653/35 may be output at this time, but they are not related to this check.

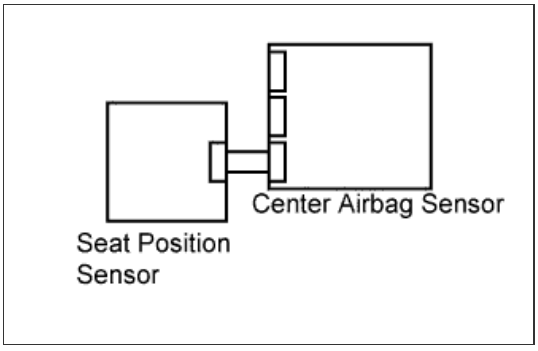

NG → Go to step 10

OK

USE SIMULATION METHOD TO CHECK (Click here)

10.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the seat position sensor.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK ↓

11.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the seat position sensor.


b. Check that the connectors (on the center airbag sensor side and seat position sensor side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK ↓

12.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - SEAT POSITION SENSOR)

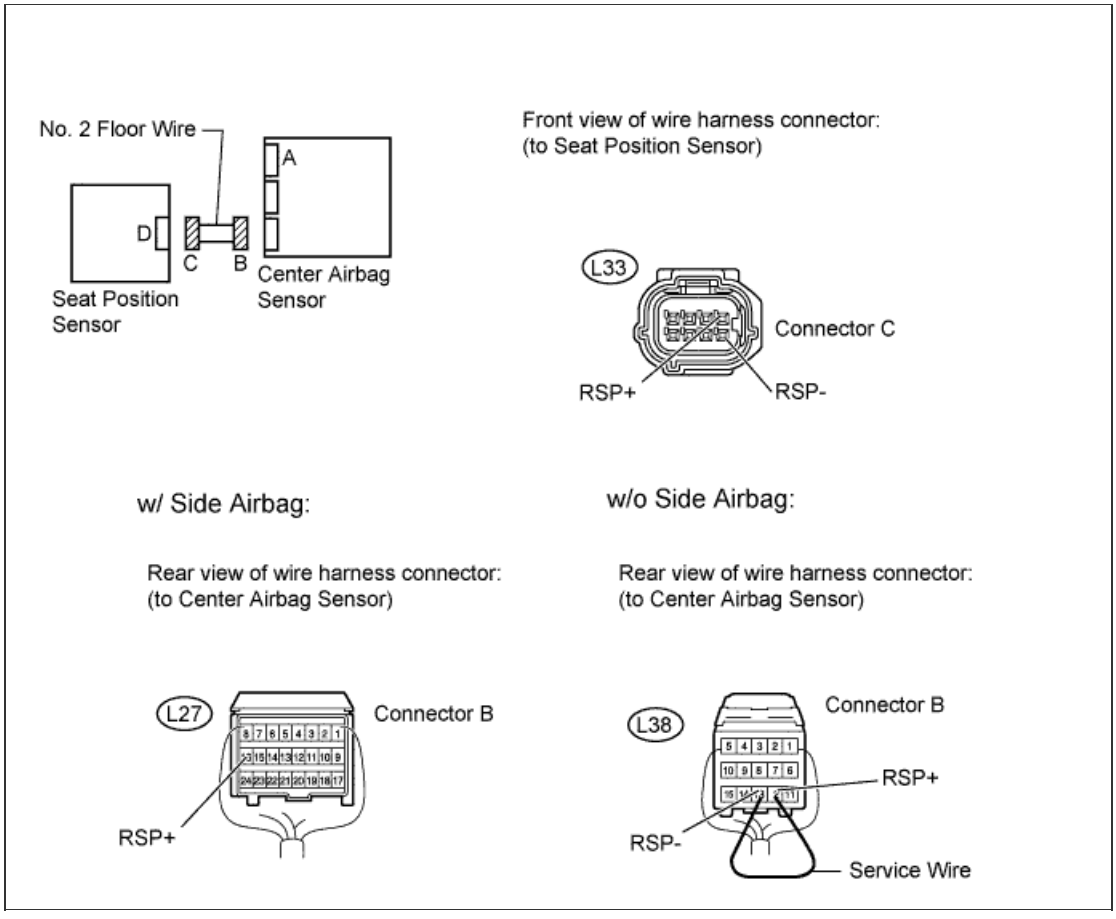

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L33-4 (RSP+) - Body ground	Engine switch on (IG)	Below 1 V
L33-8 (RSP-) - Body ground	Engine switch on (IG)	Below 1 V

c. w/ Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-4 (RSP+) - L27-16 (RSP+)	Always	Below 1 Ω
L33-4 (RSP+) - Body ground	Always	1 MΩ or higher
L33-8 (RSP-) - Body ground	Always	Below 1 Ω

d. w/o Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Using a service wire, connect terminals 12 (RSP+) and 13 (RSP-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

iv. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-4 (RSP+) - L33-8 (RSP-)	Always	Below 1 Ω

v. Disconnect the service wire from connector B.

vi. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-4 (RSP+) - Body ground	Always	1 MΩ or higher
L33-8 (RLSP-) - Body ground	Always	Below 1 Ω

NG → REPLACE NO. 2 FLOOR WIRE

OK

13.CHECK SEAT POSITION SENSOR (FRONT SEAT INNER BELT RH)

a. Connect the connectors to the center airbag sensor and the seat position sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

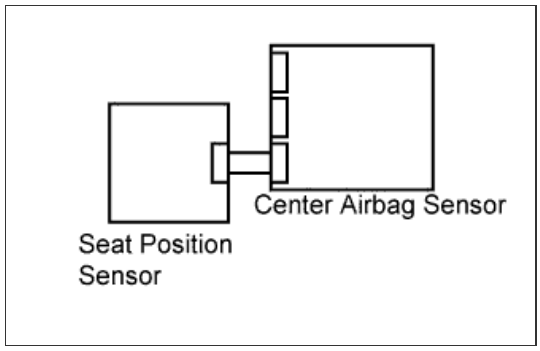

OK:
DTC B1653/35 is not output.

HINT:

Codes other than DTC B1653/35 may be output at this time, but they are not related to this check.

NG → Go to step 14

OK

USE SIMULATION METHOD TO CHECK (Click here)

14.REPLACE SEAT POSITION SENSOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Replace the seat position sensor (Click here).

HINT:

Perform inspection using parts from a normal vehicle if possible.

NEXT

15.CHECK CENTER AIRBAG SENSOR

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Clear the DTCs (Click here).

d. Turn the engine switch off.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Check for DTCs (Click here).

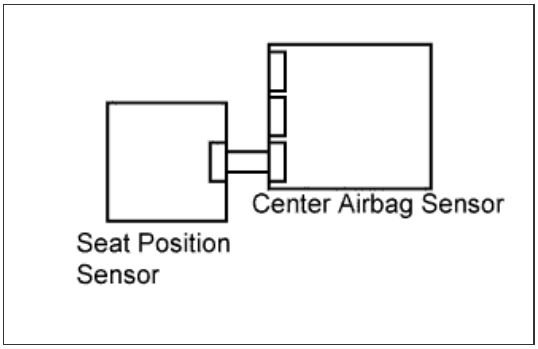

OK:
DTC B1653/35 is not output.

HINT:

Codes other than DTC B1653/35 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE FRONT SEAT INNER BELT ASSEMBLY RH

DTC B1855/63 Short in Rear Side Squib LH Circuit

DTC B1856/63 Open in Rear Side Squib LH Circuit

DTC B1857/63 Short to GND in Rear Side Squib LH Circuit

DTC B1858/63 Short to B+ in Rear Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib LH circuit consists of the center airbag sensor and the rear seat side airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1855/63	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib LH circuit during the primary check. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1856/63	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib LH circuit for 2 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1857/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1858/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

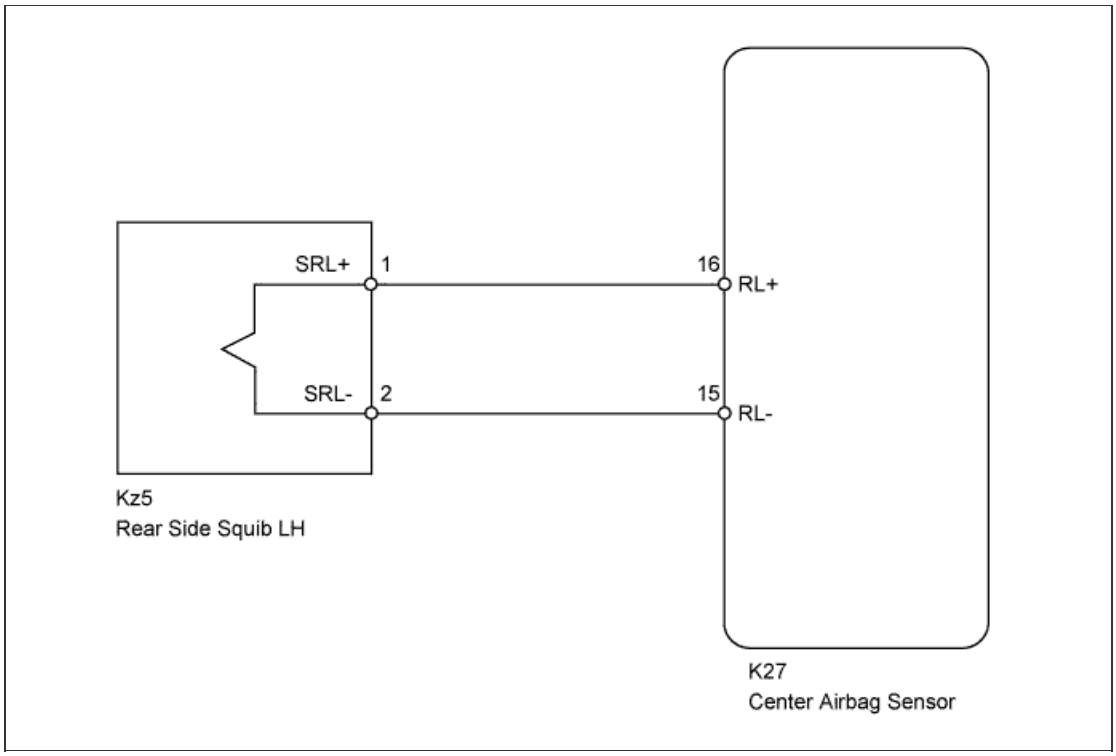

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG LH (REAR SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag LH (rear side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

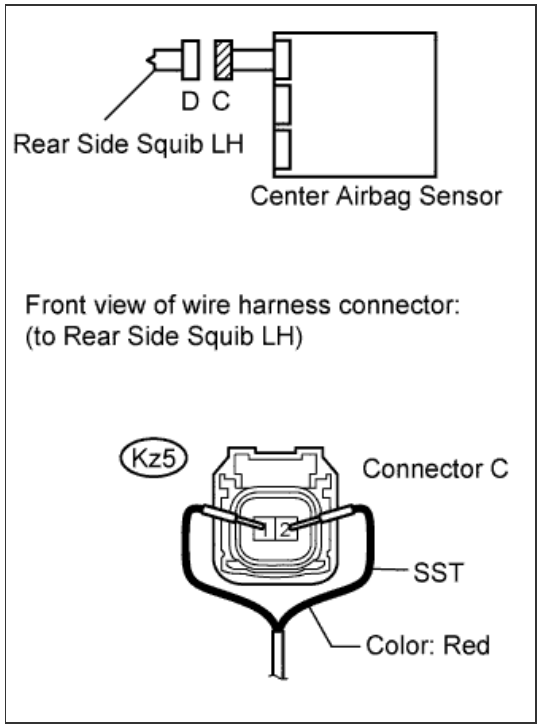

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (REAR SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

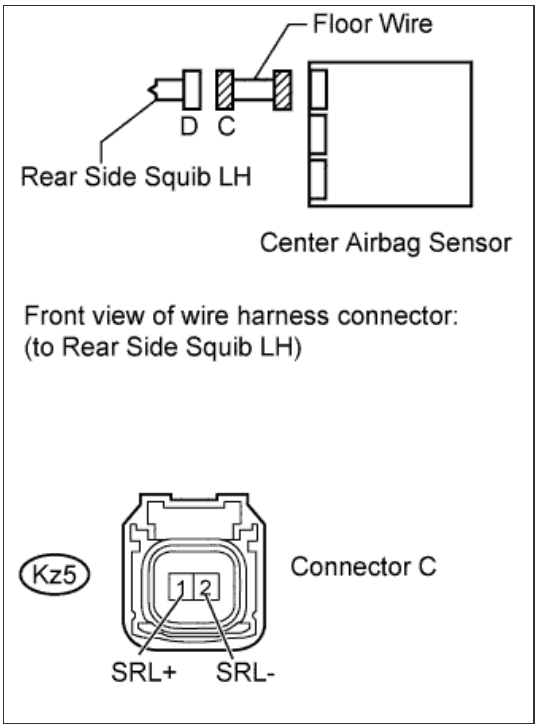

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz5-1 (SRL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz5-2 (SRL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	1 MΩ or higher
Kz5-1 (SRL+) - Body ground	Always	1 MΩ or higher
Kz5-2 (SRL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

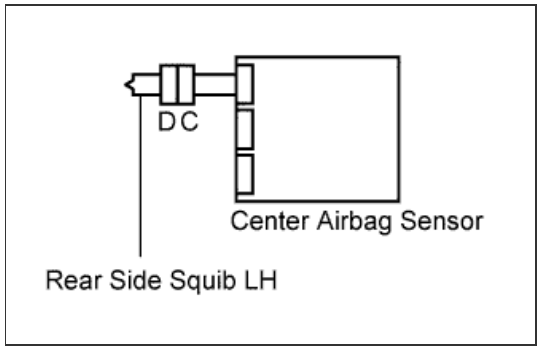

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1655/37 Driver Side Seat Belt Buckle Switch Circuit Malfunction

for Preparation Click here

DESCRIPTION

for LHD:
The seat belt buckle switch LH circuit consists of the center airbag sensor and the front seat inner belt LH.
DTC B1655/37 is recorded when a malfunction is detected in the seat belt buckle switch LH circuit.
for RHD:
The seat belt buckle switch RH circuit consists of the center airbag sensor and the front seat inner belt RH. DTC B1655/37 is stored when a malfunction is detected in the seat belt buckle switch RH circuit.


for LHD

DTC Code	DTC Detection Condition	Trouble Area
B1655/37	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the seat belt buckle switch LH circuit for 2 seconds. • A front seat inner belt LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat inner belt assembly LH (Seat belt buckle switch LH) • Center airbag sensor assembly


for RHD

DTC Code	DTC Detection Condition	Trouble Area
B1655/37	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the seat belt buckle switch RH circuit for 2 seconds. • A front seat inner belt RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat inner belt assembly RH (Seat belt buckle switch RH) • Center airbag sensor assembly


WIRING DIAGRAM

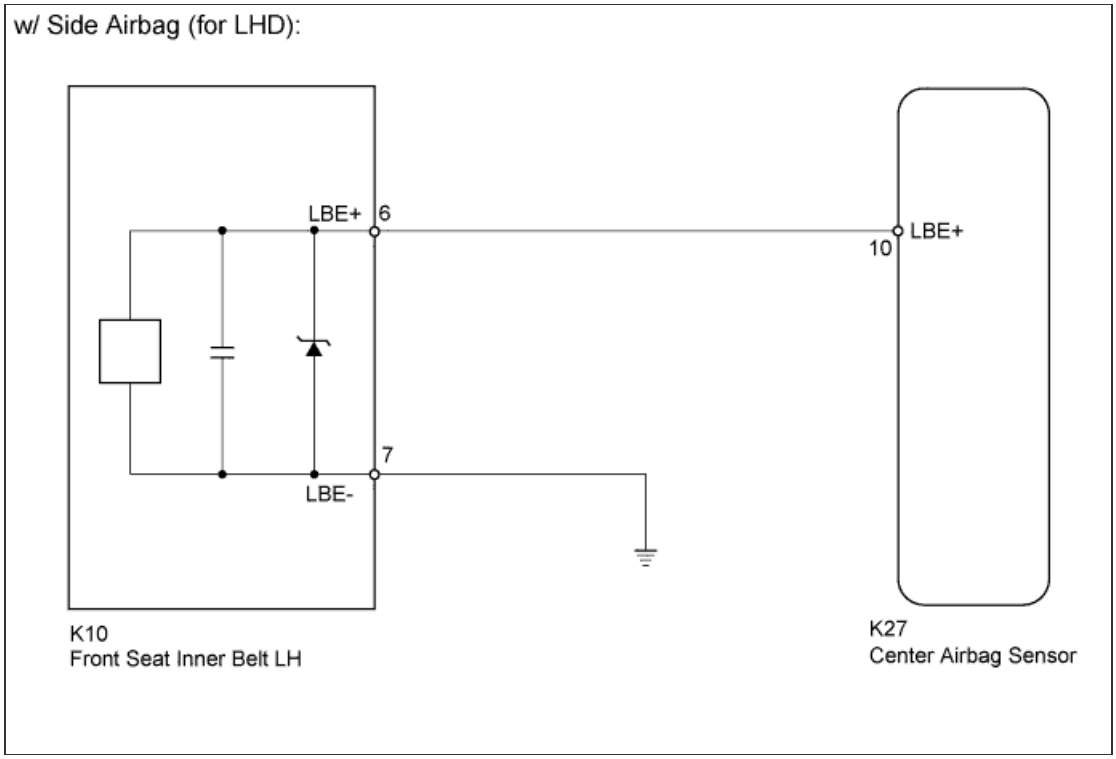


w/o Side Airbag (for LHD):

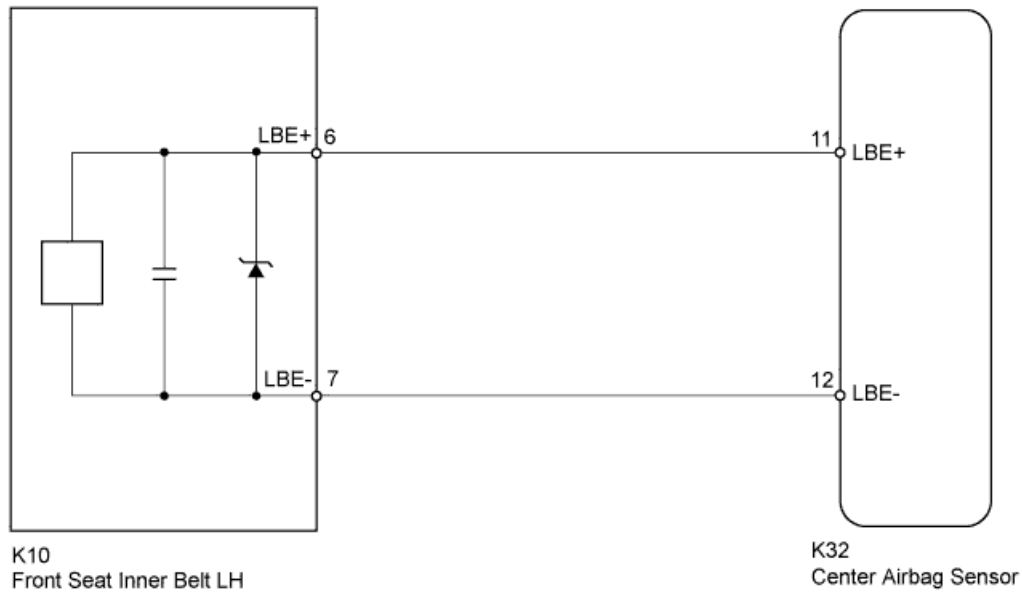

w/ Side Airbag (for RHD):

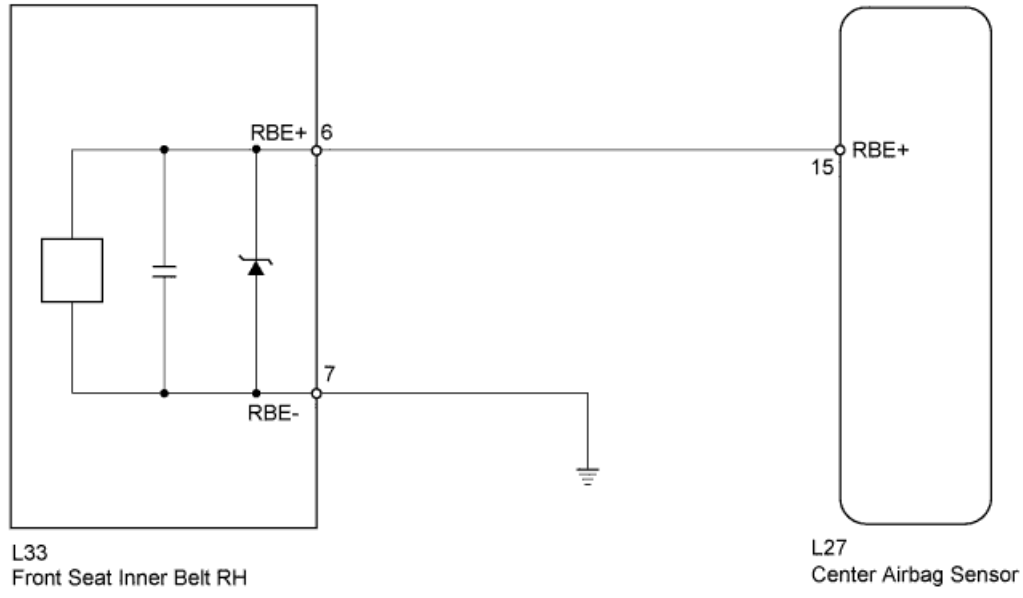

w/o Side Airbag (for RHD):

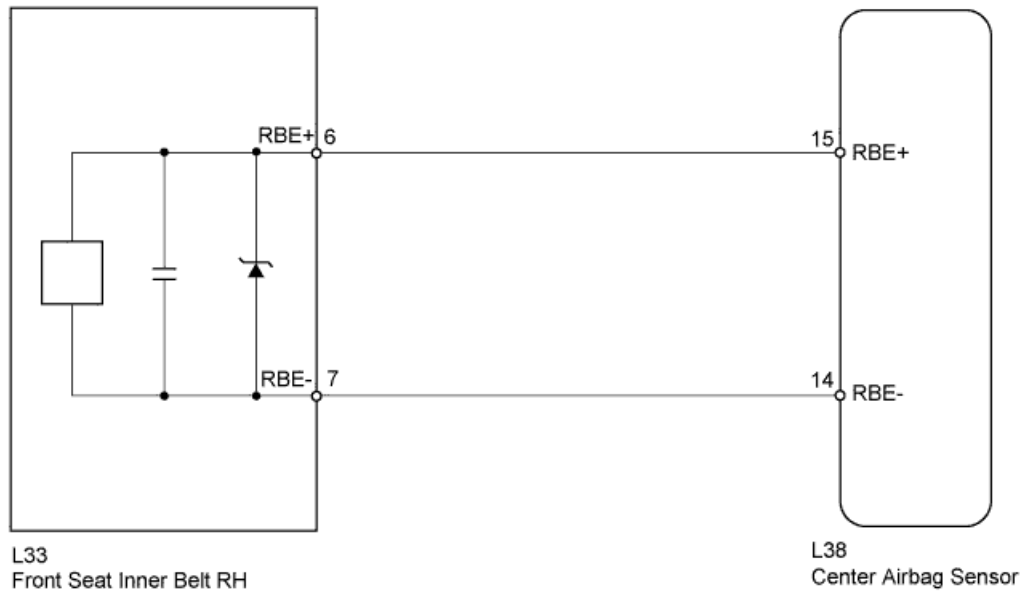

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK VEHICLE CONDITION

a. Check vehicle condition.

Result

Result	Proceed to
for LHD	A
for RHD	B

B → Go to step 9

A

2.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.


e. Check for DTCs (Click here).

OK:

DTC B1655 is not output.

HINT:

Codes other than DTC B1655 may be output at this time, but they are not related to this check.

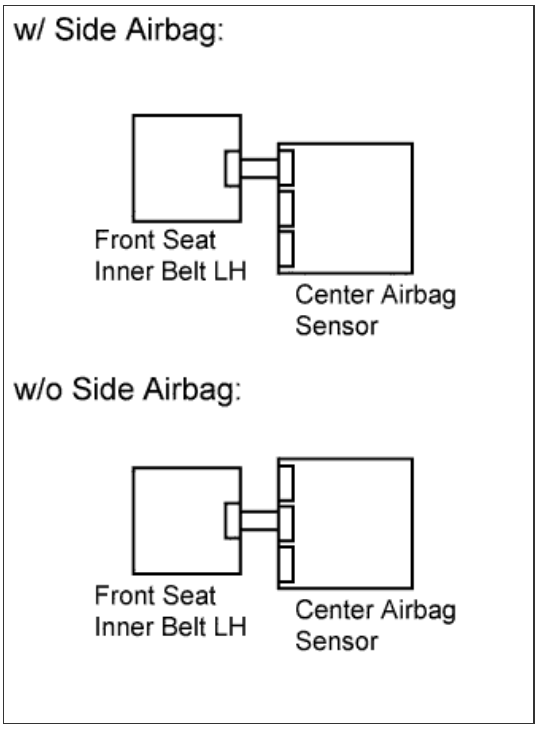

NG → Go to step 3

OK

USE SIMULATION METHOD TO CHECK (Click here)

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and front seat inner belt LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the front seat inner belt LH.


b. Check that the connectors (on the center airbag sensor side and front seat inner belt LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

5.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT SEAT INNER BELT LH)

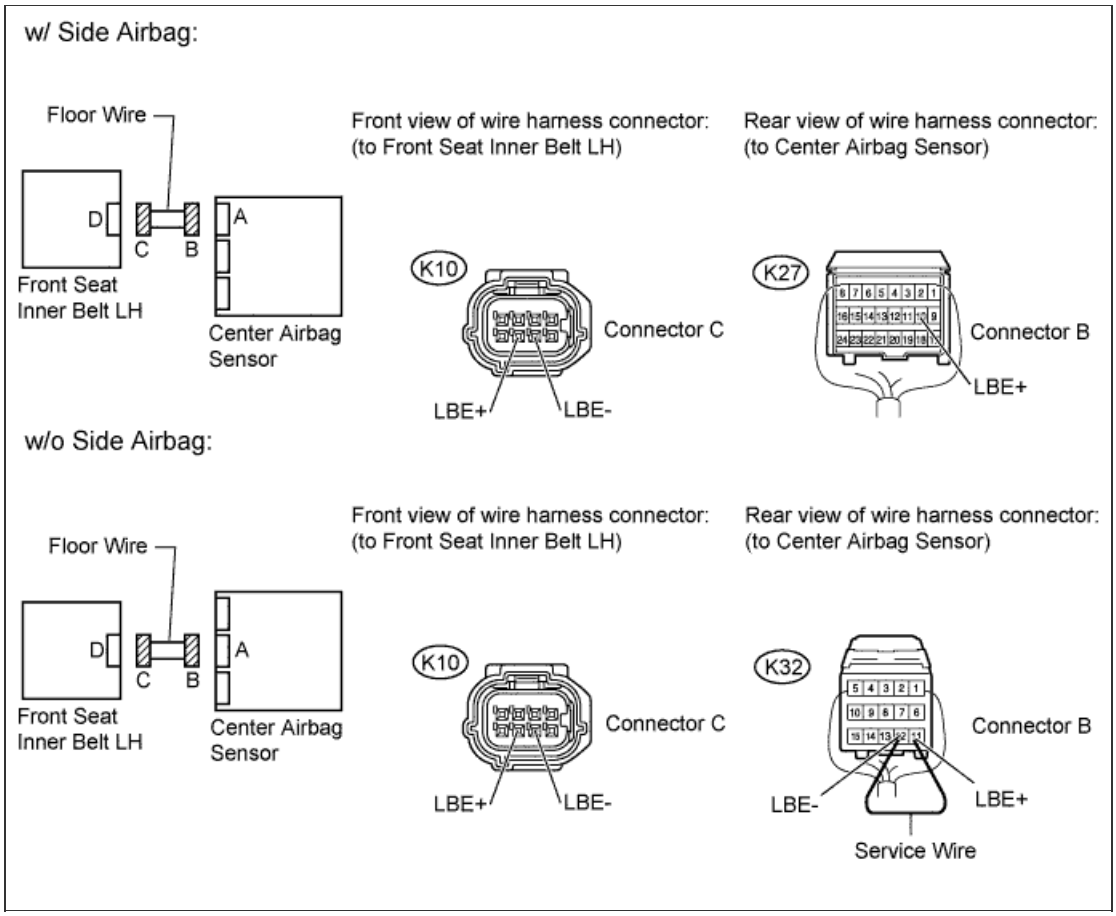

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K10-6 (LBE+) - Body ground	Engine switch on (IG)	Below 1 V
K10-7 (LBE-) - Body ground	Engine switch on (IG)	Below 1 V

c. w/ Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-6 (LBE+) - K27-10 (LBE+)	Always	Below 1 Ω
K10-6 (LBE+) - Body ground	Always	1 MΩ or higher
K10-7 (LBE-) - Body ground	Always	Below 1 Ω

d. w/o Side airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Using a service wire, connect terminals 11 (LBE+) and 12 (LBE-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

iv. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-6 (LBE+) - K10-7 (LBE-)	Always	Below 1 Ω

v. Disconnect a service wire from connector B.

vi. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-6 (LBE+) - K10-7 (LBE-)	Always	1 MΩ or higher
K10-6 (LBE+) - Body ground	Always	1 MΩ or higher
K10-7 (LBE-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

6.CHECK FRONT SEAT INNER BELT LH (SEAT BELT BUCKLE SWITCH)

a. Connect the connector to the center airbag sensor and the front seat inner belt LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.


f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1655 is not output.

HINT:

Codes other than DTC B1655 may be output at this time, but they are not related to this check.

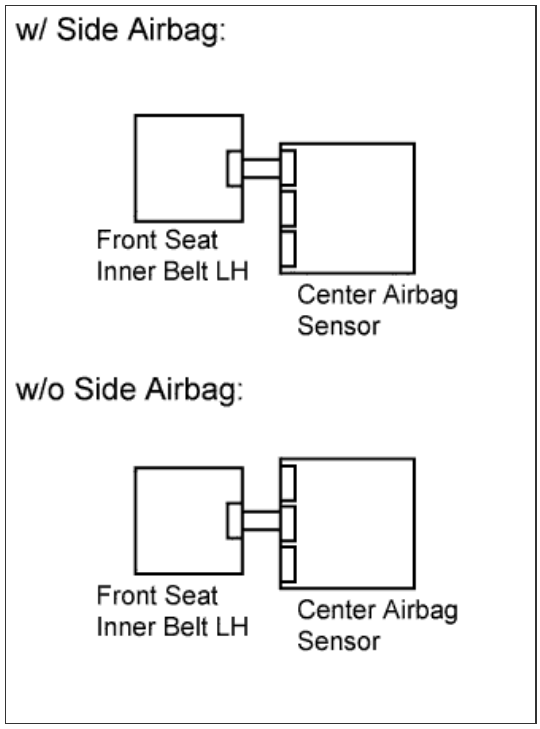

NG → Go to step 7

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

7.REPLACE FRONT SEAT INNER BELT LH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Replace the front seat inner belt LH (Click here).

HINT:

Perform the inspection using parts from a normally functioning vehicle if possible.

NEXT

8.CHECK CENTER AIRBAG SENSOR

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Clear the DTCs (Click here).

d. Turn the engine switch off.


e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Check for DTCs (Click here).

OK:
DTC B1655 is not output.

HINT:

Codes other than DTC B1655 may be output at this time, but they are not related to this check.

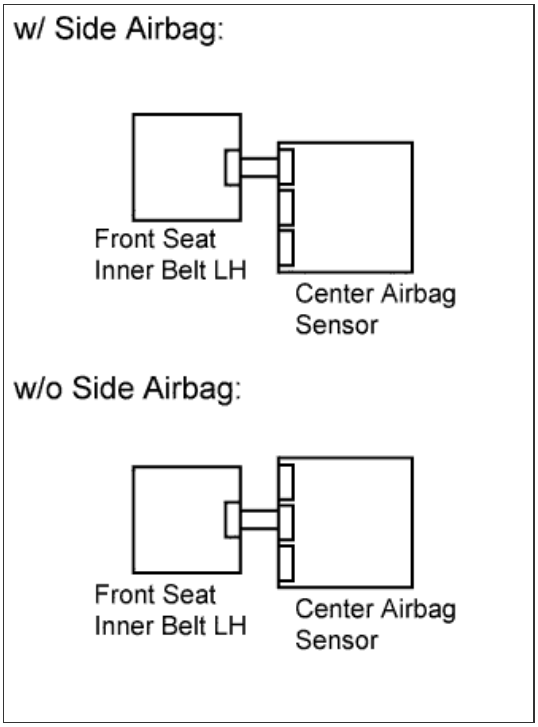

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE FRONT SEAT INNER BELT ASSEMBLY LH (Click here)

9.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs (Click here).

c. Turn the engine switch off.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

OK:
DTC B1655 is not output.

HINT:

Code other than DTC B1655 may be output at this time, but they are not related to this check.

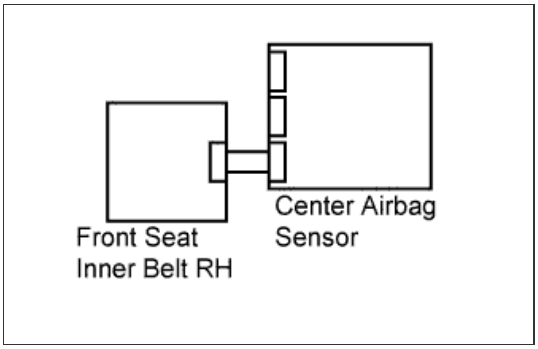

NG → Go to step 10

OK

USE SIMULATION METHOD TO CHECK (Click here)

10.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and front seat inner belt RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

11.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the front seat inner belt RH.


b. Check that the connectors (on the center airbag sensor side and front seat inner belt RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

12.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT SEAT INNER BELT RH)

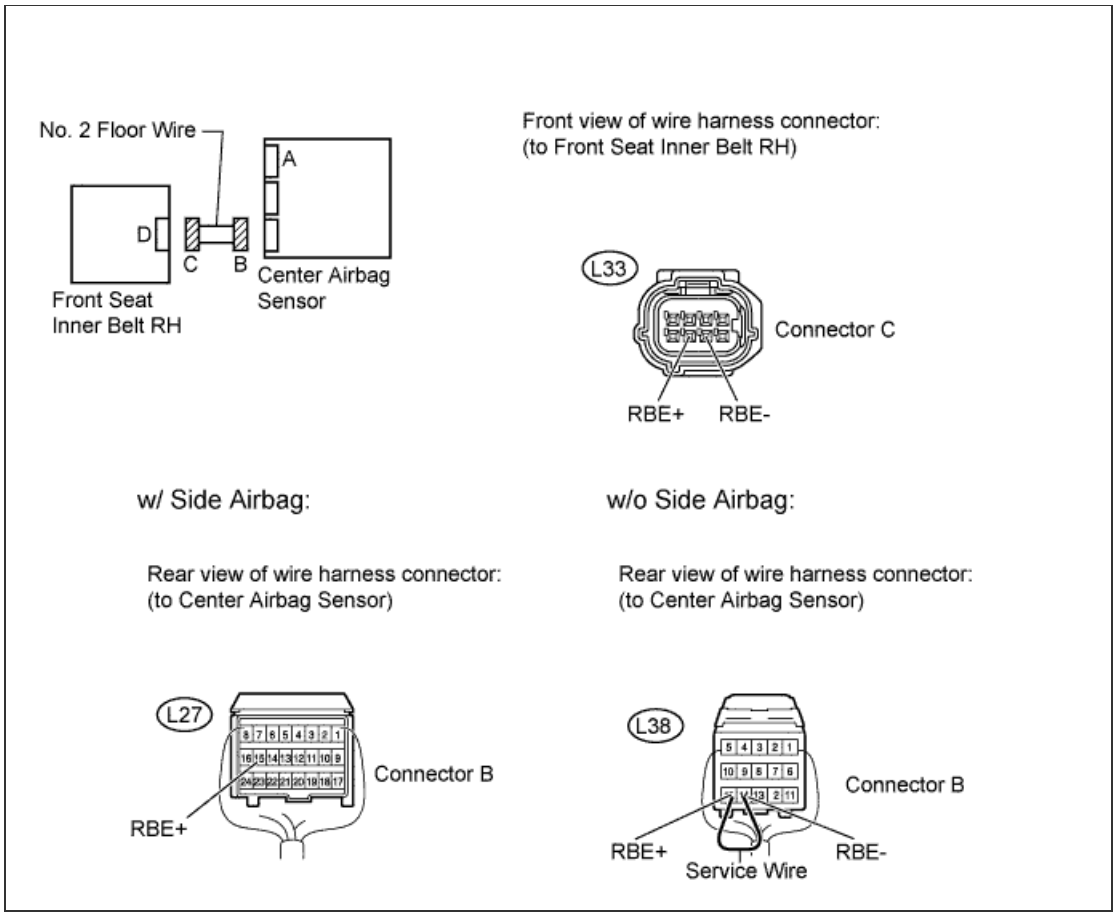

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Turn the engine switch on (IG).

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L33-6 (RBE+) - Body ground	Engine switch on (IG)	Below 1 V
L33-7 (RBE-) - Body ground	Engine switch on (IG)	Below 1 V

d. w/ Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-6 (RBE+) - L27-15 (RBE+)	Always	Below 1 Ω
L33-6 (RBE+) - Body ground	Always	1 MΩ or higher
L33-7 (RBE-) - Body ground	Always	Below 1 Ω

e. w/o Side airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Using a service wire, connect terminals 15 (RBE+) and 14 (RBE-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

iv. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-6 (RBE+) - L33-7 (RBE-)	Always	Below 1 Ω

v. Disconnect a service wire from connector B.

vi. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-6 (RBE+) - L33-7 (RBE-)	Always	1 MΩ or higher
L33-6 (RBE+) - Body ground	Always	1 MΩ or higher
L33-7 (RBE-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

13.CHECK FRONT SEAT INNER BELT RH (SEAT BELT BUCKLE SWITCH)

a. Connect the connector to the center airbag sensor and the front seat inner belt RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

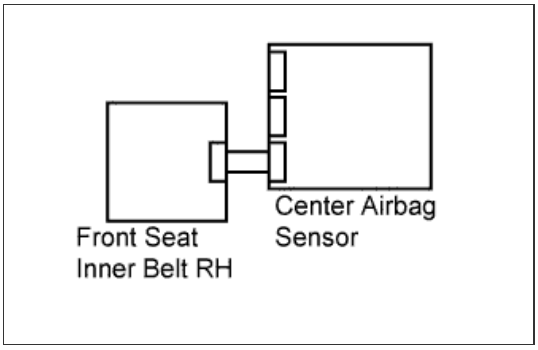

OK:
DTC B1655 is not output.

HINT:

Codes other than DTC B1655 may be output at this time, but they are not related to this check.

NG → Go to step 14

OK

USE SIMULATION METHOD TO CHECK (Click here)

14.REPLACE FRONT SEAT INNER BELT RH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Replace the front seat inner belt RH (Click here).

HINT:

Perform the inspection using parts from a normally functioning vehicle if possible.

NEXT

15.CHECK CENTER AIRBAG SENSOR

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Clear the DTCs (Click here).

d. Turn the engine switch off.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Check for DTCs (Click here).

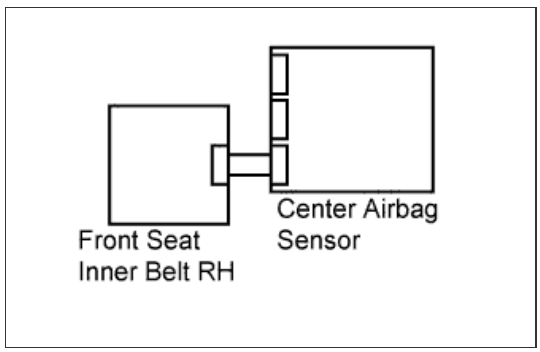

OK:
DTC B1655 is not output.

HINT:

Codes other than DTC B1655 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE FRONT SEAT INNER BELT ASSEMBLY RH

DTC B1855/63 Short in Rear Side Squib LH Circuit

DTC B1856/63 Open in Rear Side Squib LH Circuit

DTC B1857/63 Short to GND in Rear Side Squib LH Circuit

DTC B1858/63 Short to B+ in Rear Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib LH circuit consists of the center airbag sensor and the rear seat side airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1855/63	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib LH circuit during the primary check. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1856/63	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib LH circuit for 2 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1857/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1858/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

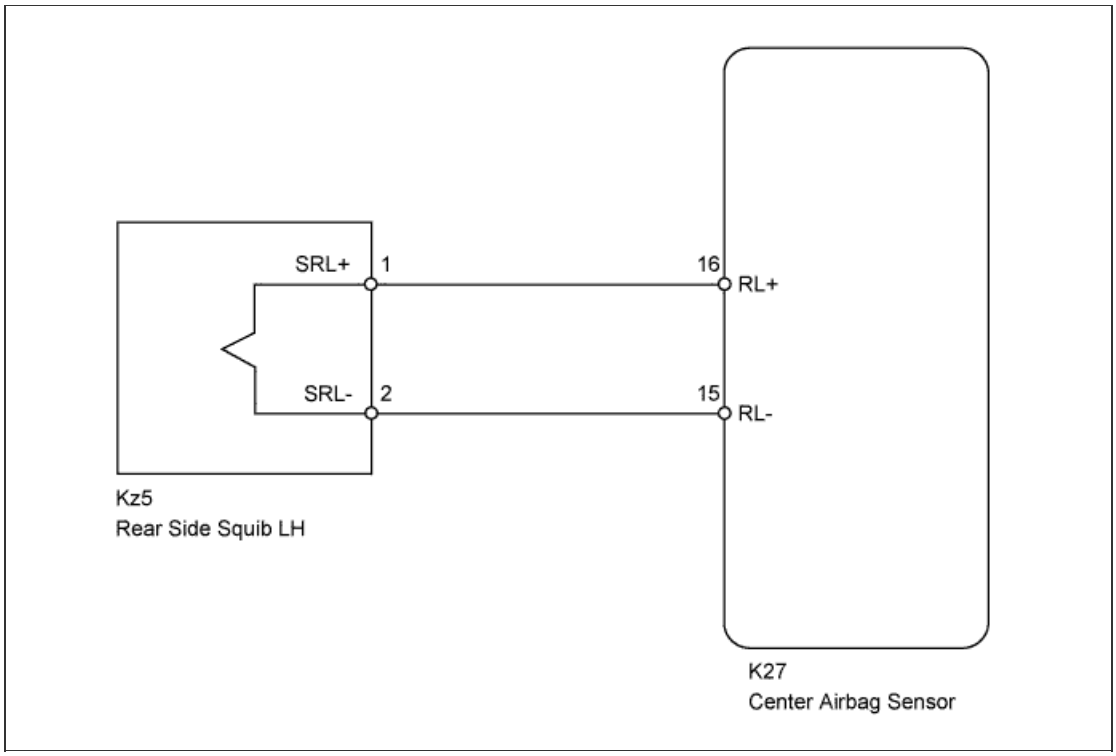

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG LH (REAR SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag LH (rear side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

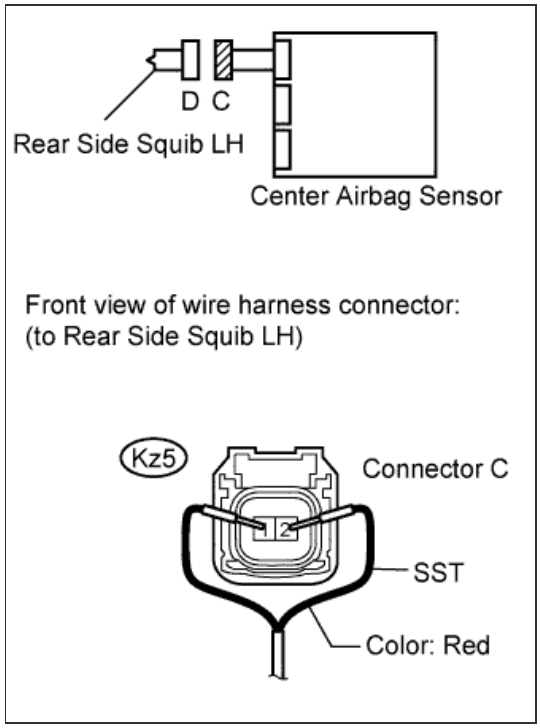

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (REAR SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

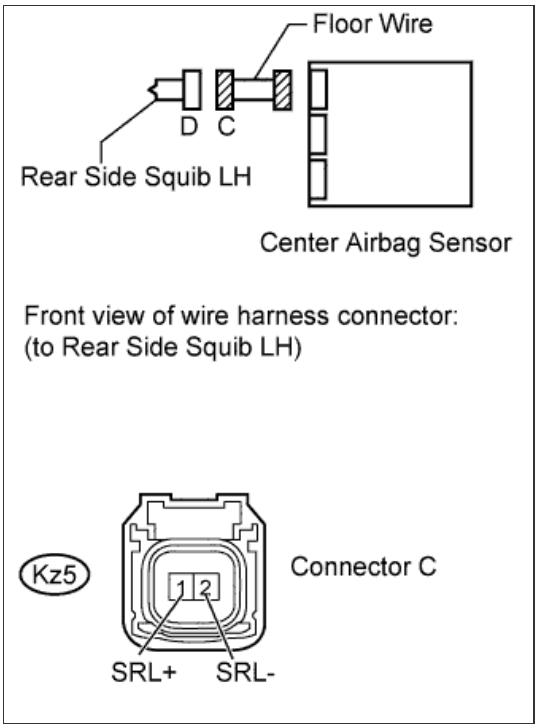

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz5-1 (SRL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz5-2 (SRL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	1 MΩ or higher
Kz5-1 (SRL+) - Body ground	Always	1 MΩ or higher
Kz5-2 (SRL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

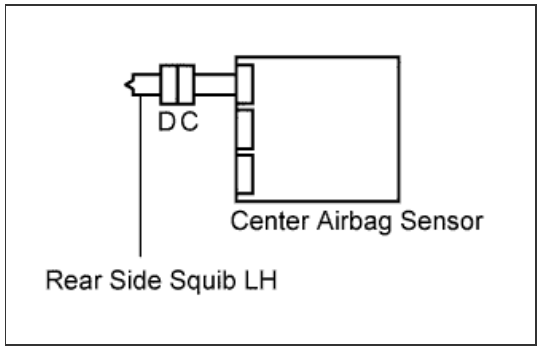

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1655/37 Driver Side Seat Belt Buckle Switch Circuit Malfunction

for Preparation Click here

DESCRIPTION

for LHD:
The seat belt buckle switch LH circuit consists of the center airbag sensor and the front seat inner belt LH.
DTC B1655/37 is recorded when a malfunction is detected in the seat belt buckle switch LH circuit.
for RHD:
The seat belt buckle switch RH circuit consists of the center airbag sensor and the front seat inner belt RH. DTC B1655/37 is stored when a malfunction is detected in the seat belt buckle switch RH circuit.


for LHD

DTC Code	DTC Detection Condition	Trouble Area
B1655/37	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the seat belt buckle switch LH circuit for 2 seconds. • A front seat inner belt LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat inner belt assembly LH (Seat belt buckle switch LH) • Center airbag sensor assembly


for RHD

DTC Code	DTC Detection Condition	Trouble Area
B1655/37	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the seat belt buckle switch RH circuit for 2 seconds. • A front seat inner belt RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat inner belt assembly RH (Seat belt buckle switch RH) • Center airbag sensor assembly


WIRING DIAGRAM

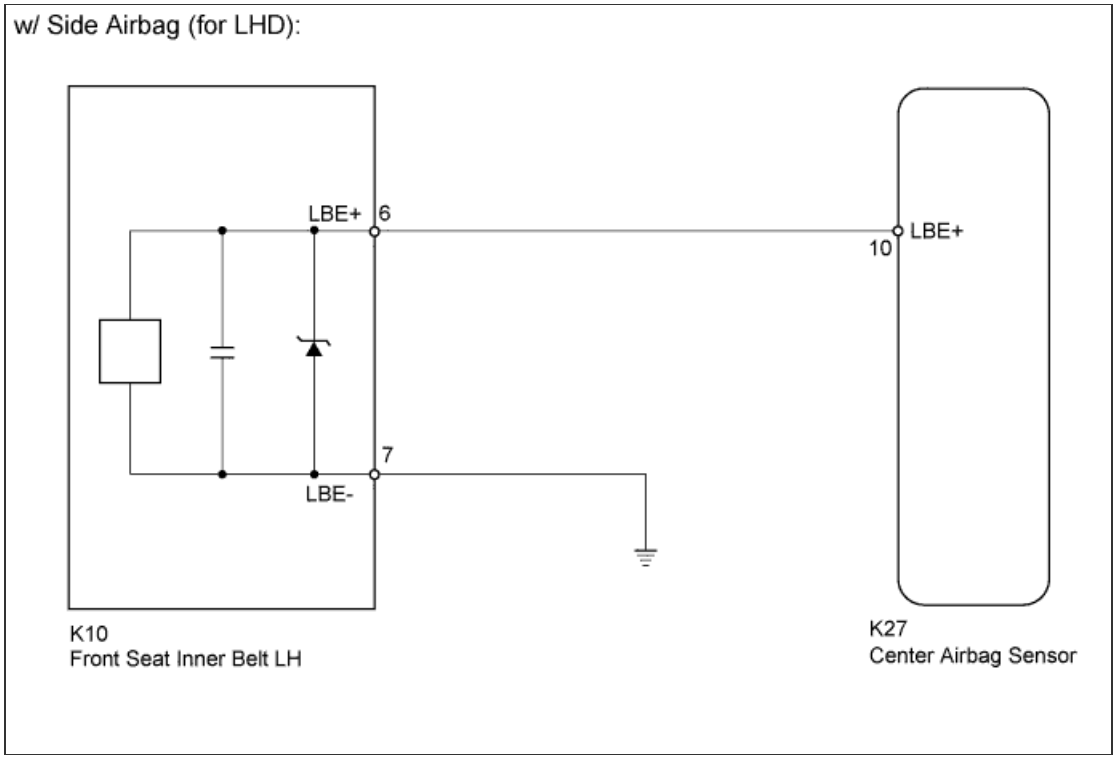


w/o Side Airbag (for LHD):

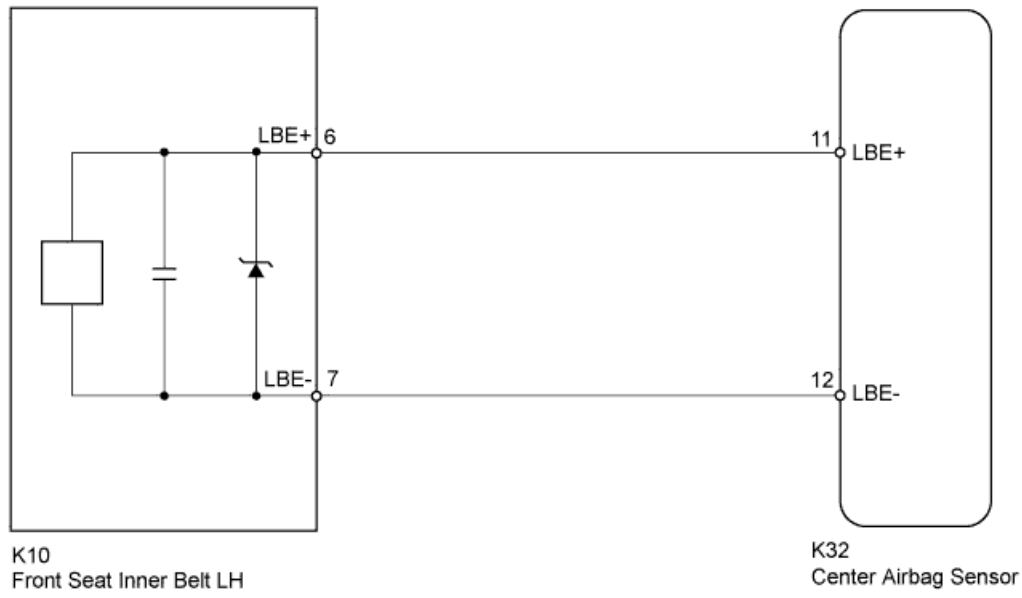

w/ Side Airbag (for RHD):

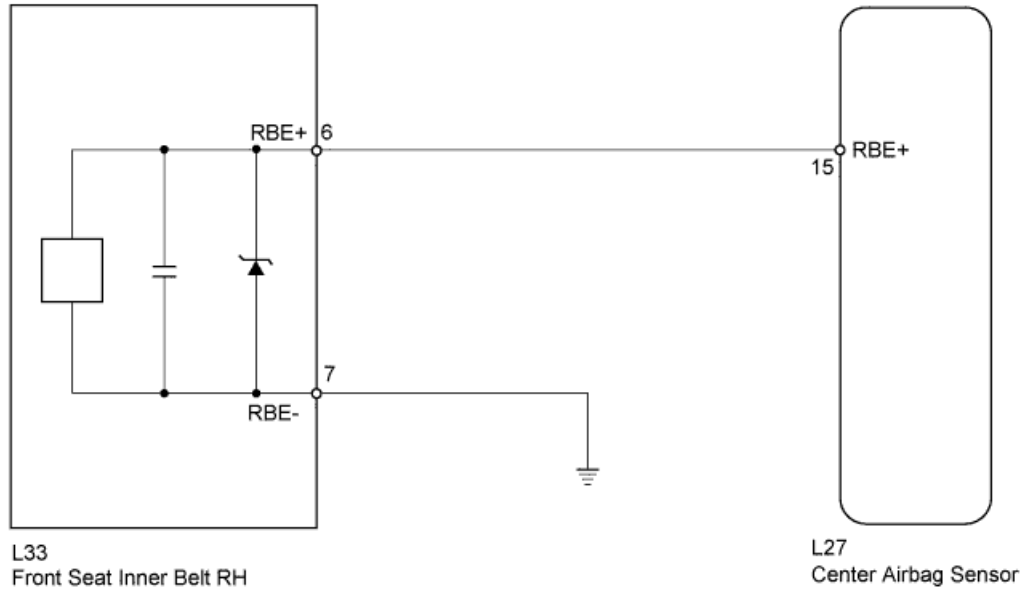

w/o Side Airbag (for RHD):

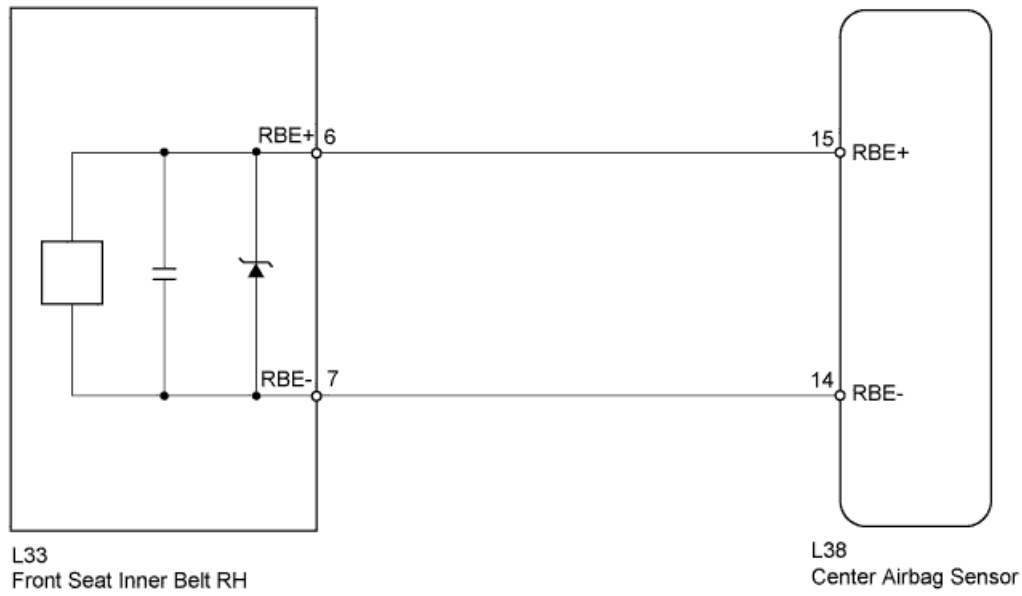

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK VEHICLE CONDITION

a. Check vehicle condition.

Result

Result	Proceed to
for LHD	A
for RHD	B

B → Go to step 9

A

2.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs (Click here).

c. Turn the engine switch off.

d. Turn the engine switch on (IG), and wait for at least 60 seconds.


e. Check for DTCs (Click here).

OK:

DTC B1655 is not output.

HINT:

Codes other than DTC B1655 may be output at this time, but they are not related to this check.

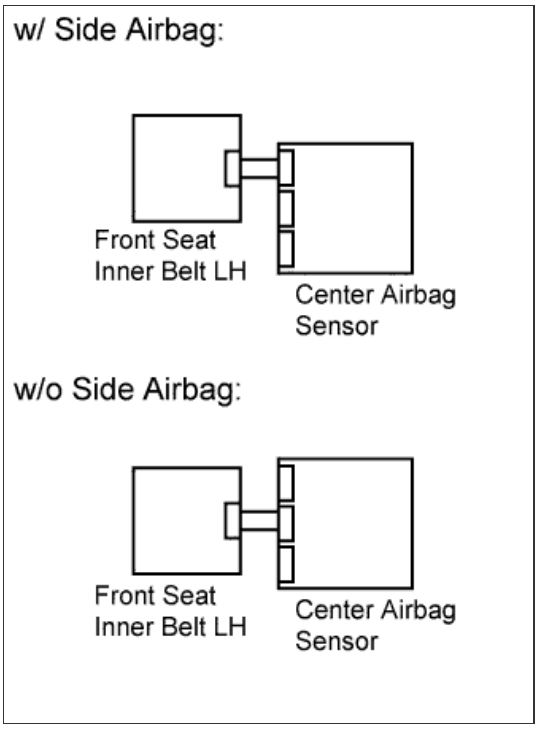

NG → Go to step 3

OK

USE SIMULATION METHOD TO CHECK (Click here)

3.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and front seat inner belt LH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the front seat inner belt LH.


b. Check that the connectors (on the center airbag sensor side and front seat inner belt LH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

5.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT SEAT INNER BELT LH)

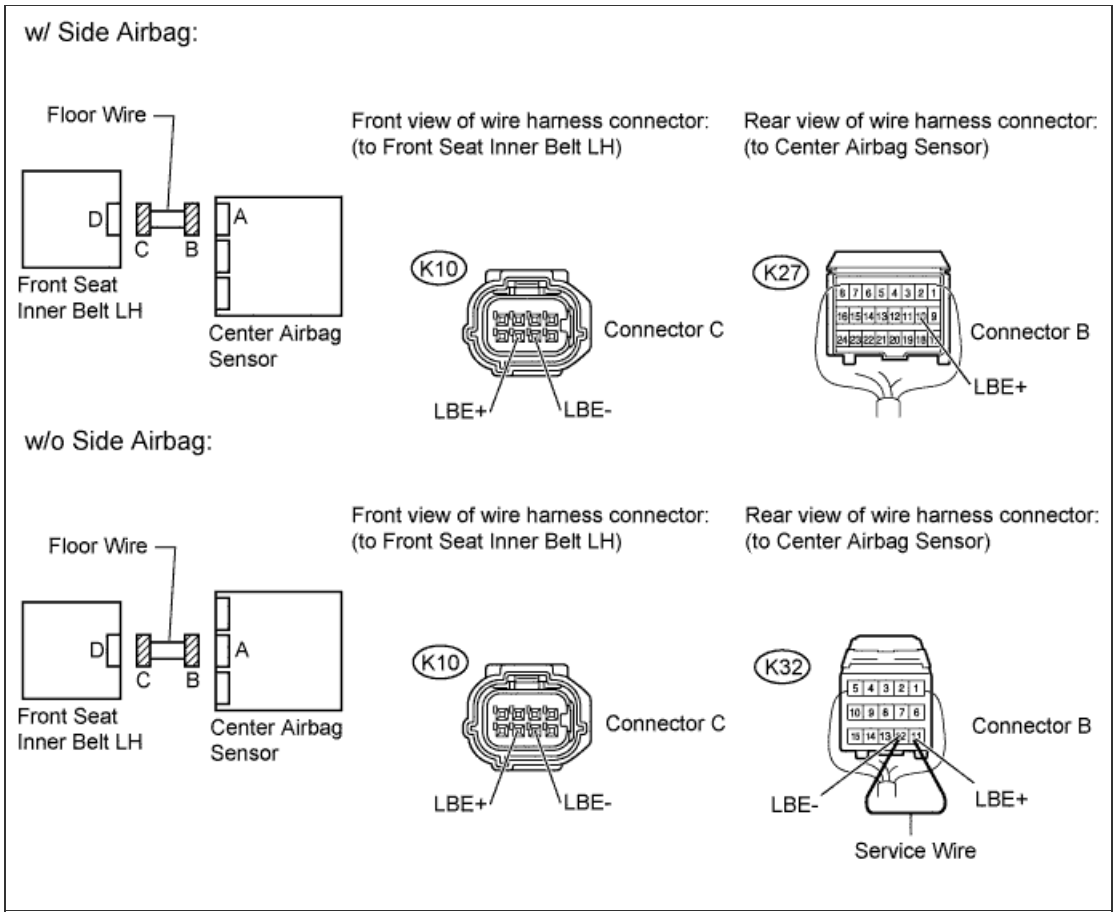

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K10-6 (LBE+) - Body ground	Engine switch on (IG)	Below 1 V
K10-7 (LBE-) - Body ground	Engine switch on (IG)	Below 1 V

c. w/ Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-6 (LBE+) - K27-10 (LBE+)	Always	Below 1 Ω
K10-6 (LBE+) - Body ground	Always	1 MΩ or higher
K10-7 (LBE-) - Body ground	Always	Below 1 Ω

d. w/o Side airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Using a service wire, connect terminals 11 (LBE+) and 12 (LBE-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

iv. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-6 (LBE+) - K10-7 (LBE-)	Always	Below 1 Ω

v. Disconnect a service wire from connector B.

vi. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K10-6 (LBE+) - K10-7 (LBE-)	Always	1 MΩ or higher
K10-6 (LBE+) - Body ground	Always	1 MΩ or higher
K10-7 (LBE-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

6.CHECK FRONT SEAT INNER BELT LH (SEAT BELT BUCKLE SWITCH)

a. Connect the connector to the center airbag sensor and the front seat inner belt LH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.


f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1655 is not output.

HINT:

Codes other than DTC B1655 may be output at this time, but they are not related to this check.

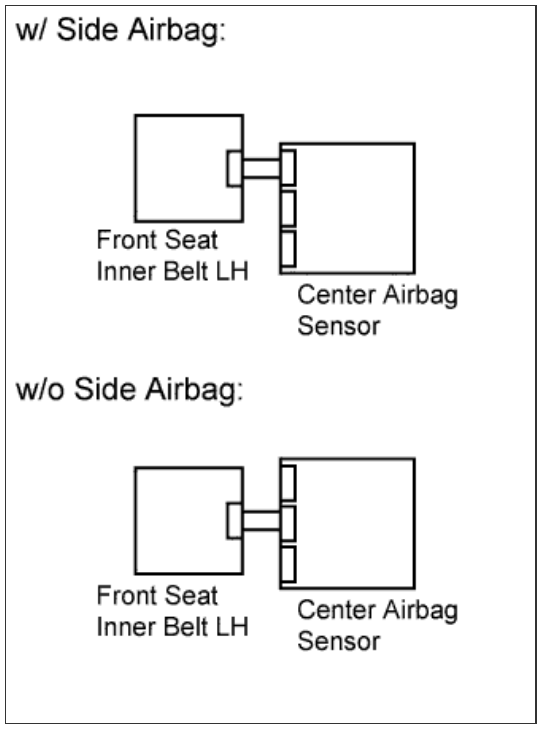

NG → Go to step 7

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

7.REPLACE FRONT SEAT INNER BELT LH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Replace the front seat inner belt LH (Click here).

HINT:

Perform the inspection using parts from a normally functioning vehicle if possible.

NEXT

8.CHECK CENTER AIRBAG SENSOR

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Clear the DTCs (Click here).

d. Turn the engine switch off.


e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Check for DTCs (Click here).

OK:
DTC B1655 is not output.

HINT:

Codes other than DTC B1655 may be output at this time, but they are not related to this check.

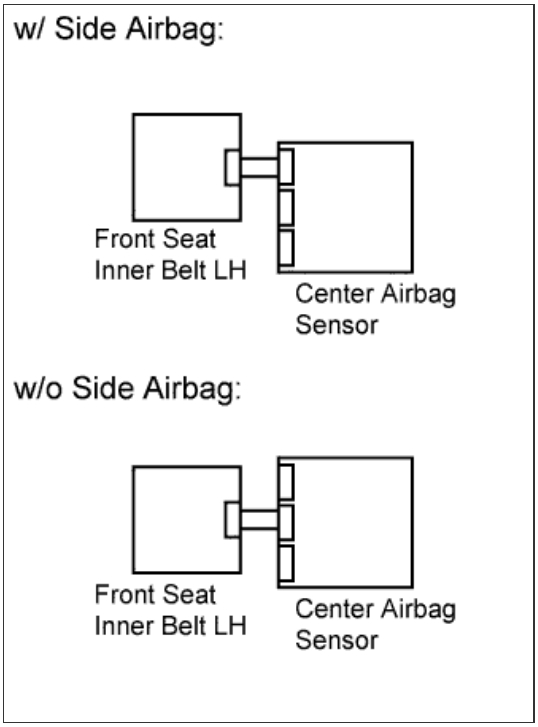

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE FRONT SEAT INNER BELT ASSEMBLY LH (Click here)

9.CHECK FOR DTC

a. Turn the engine switch on (IG), and wait for at least 60 seconds.

b. Clear the DTCs (Click here).

c. Turn the engine switch off.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Check for DTCs (Click here).

OK:
DTC B1655 is not output.

HINT:

Code other than DTC B1655 may be output at this time, but they are not related to this check.

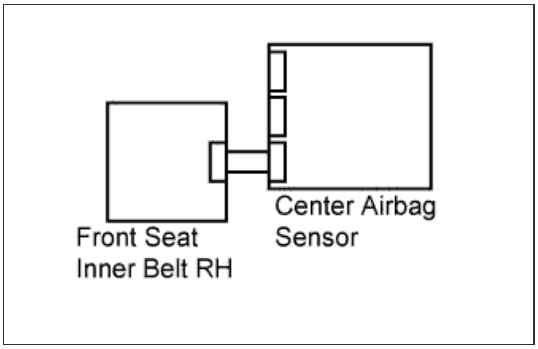

NG → Go to step 10

OK

USE SIMULATION METHOD TO CHECK (Click here)

10.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and front seat inner belt RH.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

11.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the front seat inner belt RH.


b. Check that the connectors (on the center airbag sensor side and front seat inner belt RH side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

12.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - FRONT SEAT INNER BELT RH)

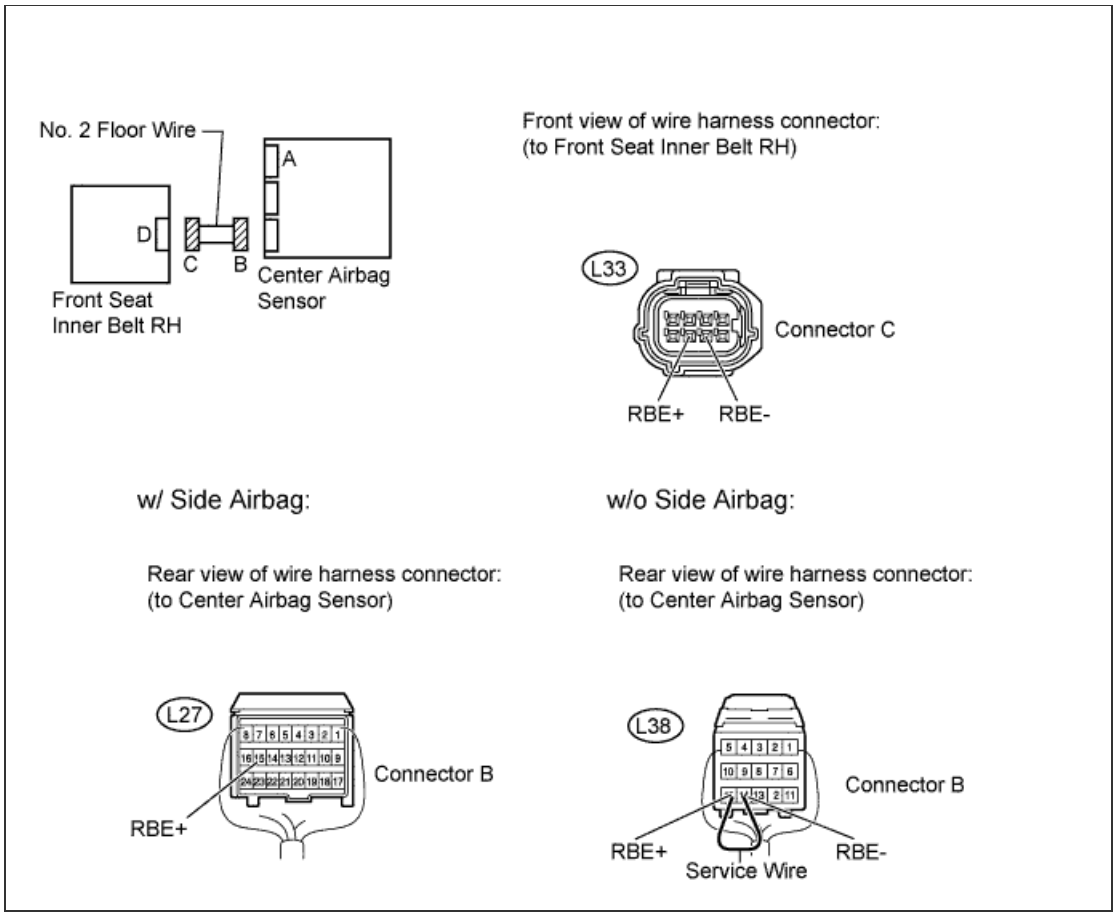

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Turn the engine switch on (IG).

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L33-6 (RBE+) - Body ground	Engine switch on (IG)	Below 1 V
L33-7 (RBE-) - Body ground	Engine switch on (IG)	Below 1 V

d. w/ Side Airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-6 (RBE+) - L27-15 (RBE+)	Always	Below 1 Ω
L33-6 (RBE+) - Body ground	Always	1 MΩ or higher
L33-7 (RBE-) - Body ground	Always	Below 1 Ω

e. w/o Side airbag:

i. Turn the engine switch off.

ii. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

iii. Using a service wire, connect terminals 15 (RBE+) and 14 (RBE-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

iv. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-6 (RBE+) - L33-7 (RBE-)	Always	Below 1 Ω

v. Disconnect a service wire from connector B.

vi. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L33-6 (RBE+) - L33-7 (RBE-)	Always	1 MΩ or higher
L33-6 (RBE+) - Body ground	Always	1 MΩ or higher
L33-7 (RBE-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

13.CHECK FRONT SEAT INNER BELT RH (SEAT BELT BUCKLE SWITCH)

a. Connect the connector to the center airbag sensor and the front seat inner belt RH.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

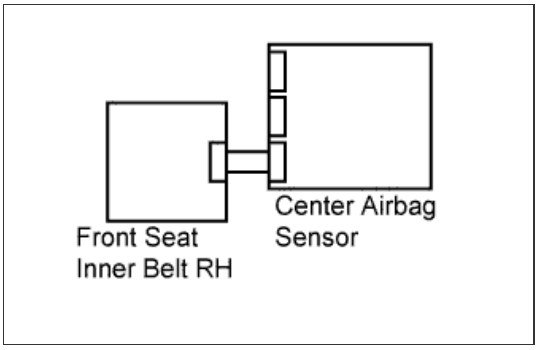

OK:
DTC B1655 is not output.

HINT:

Codes other than DTC B1655 may be output at this time, but they are not related to this check.

NG → Go to step 14

OK

USE SIMULATION METHOD TO CHECK (Click here)

14.REPLACE FRONT SEAT INNER BELT RH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Replace the front seat inner belt RH (Click here).

HINT:

Perform the inspection using parts from a normally functioning vehicle if possible.

NEXT

15.CHECK CENTER AIRBAG SENSOR

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


b. Turn the engine switch on (IG), and wait for at least 60 seconds.

c. Clear the DTCs (Click here).

d. Turn the engine switch off.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Check for DTCs (Click here).

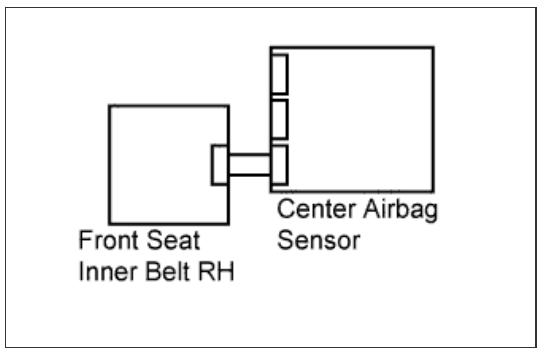

OK:
DTC B1655 is not output.

HINT:

Codes other than DTC B1655 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

REPLACE FRONT SEAT INNER BELT ASSEMBLY RH

DTC B1855/63 Short in Rear Side Squib LH Circuit

DTC B1856/63 Open in Rear Side Squib LH Circuit

DTC B1857/63 Short to GND in Rear Side Squib LH Circuit

DTC B1858/63 Short to B+ in Rear Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib LH circuit consists of the center airbag sensor and the rear seat side airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1855/63	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib LH circuit during the primary check. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1856/63	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib LH circuit for 2 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1857/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1858/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

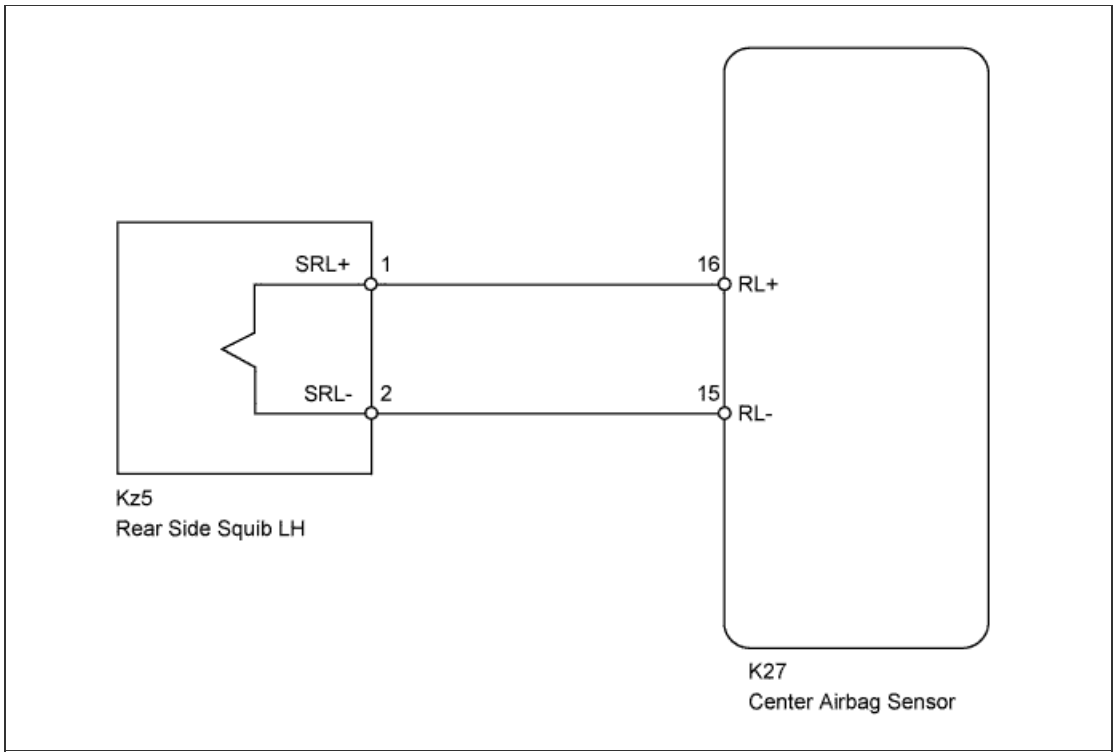

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG LH (REAR SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag LH (rear side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

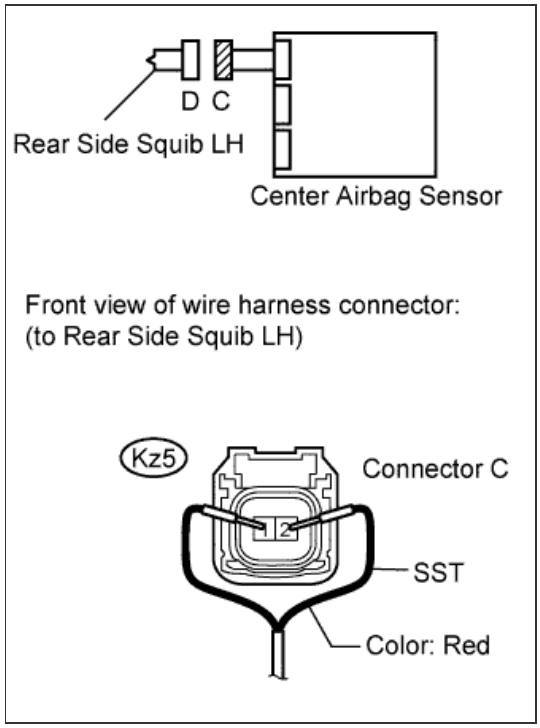

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (REAR SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

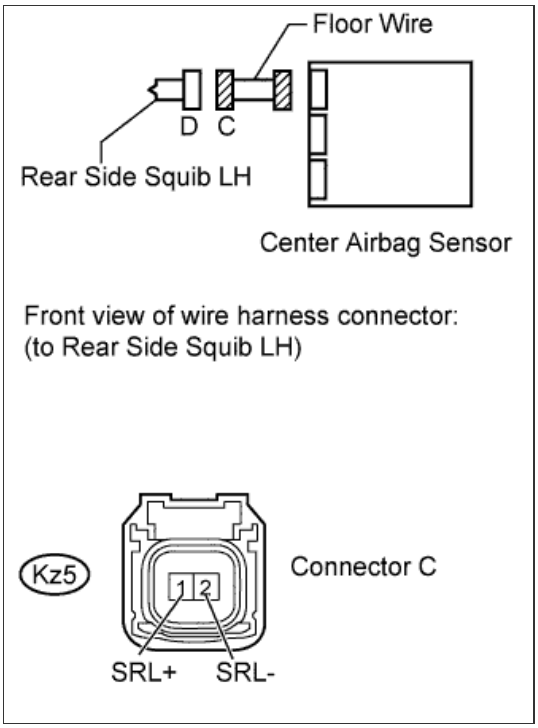

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz5-1 (SRL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz5-2 (SRL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	1 MΩ or higher
Kz5-1 (SRL+) - Body ground	Always	1 MΩ or higher
Kz5-2 (SRL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

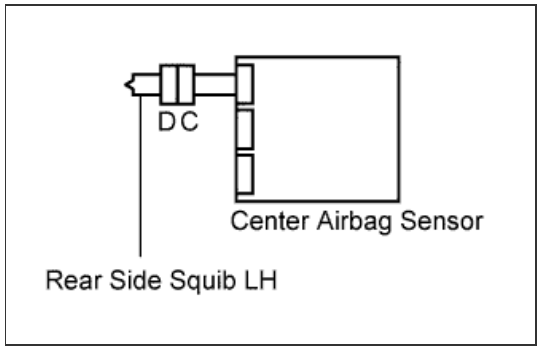

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1660/43 Passenger Airbag ON/OFF Indicator Circuit Malfunction

for Preparation Click here

DESCRIPTION

The passenger airbag ON/OFF indicator circuit consists of the center airbag sensor and the passenger airbag ON/OFF indicator.
The passenger airbag ON/OFF indicator indicates the operation condition of the front passenger airbag, front passenger side knee airbag, front seat airbag RH and front seat outer belt RH.
DTC B1660/43 is stored when a malfunction is detected in the passenger airbag ON/OFF indicator circuit.


DTC Code	DTC Detection Condition	Trouble Area
B1660/43	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the passenger airbag ON/OFF indicator circuit for 2 seconds. • A passenger airbag ON/OFF indicator malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Multi-display*1 • Clock*2 • Center airbag sensor assembly • No. 2 instrument panel wire • No. 5 instrument panel wire*2

HINT:


*1: w/ Multi-display

*2: w/o Multi-display


WIRING DIAGRAM

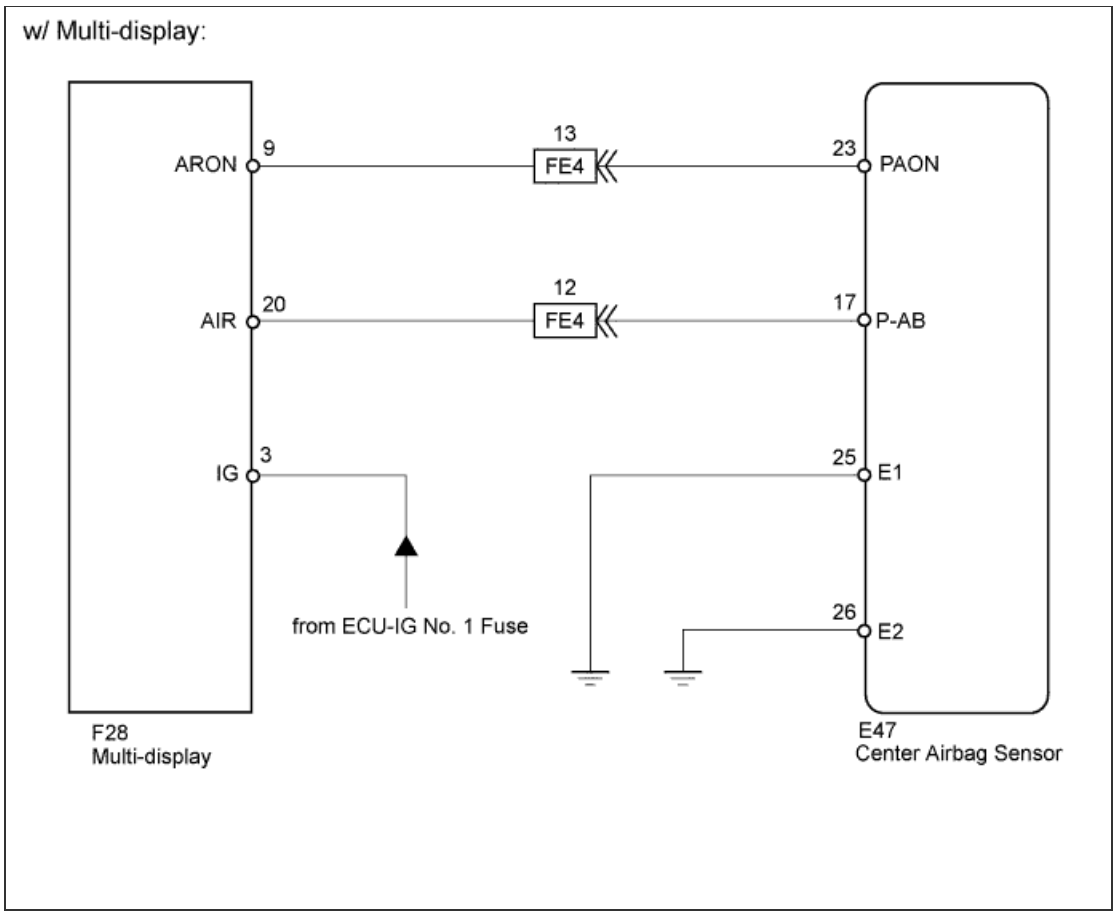

w/o Multi-display (w/o Cassette Tape Player):

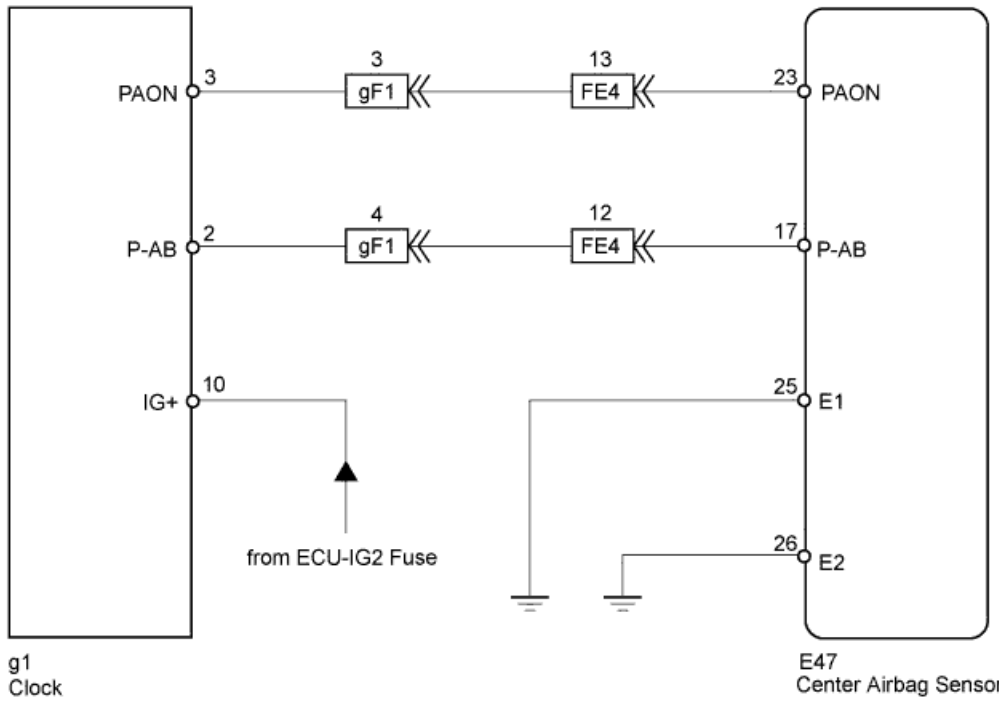

w/o Multi-display (w/ Cassette Tape Player):

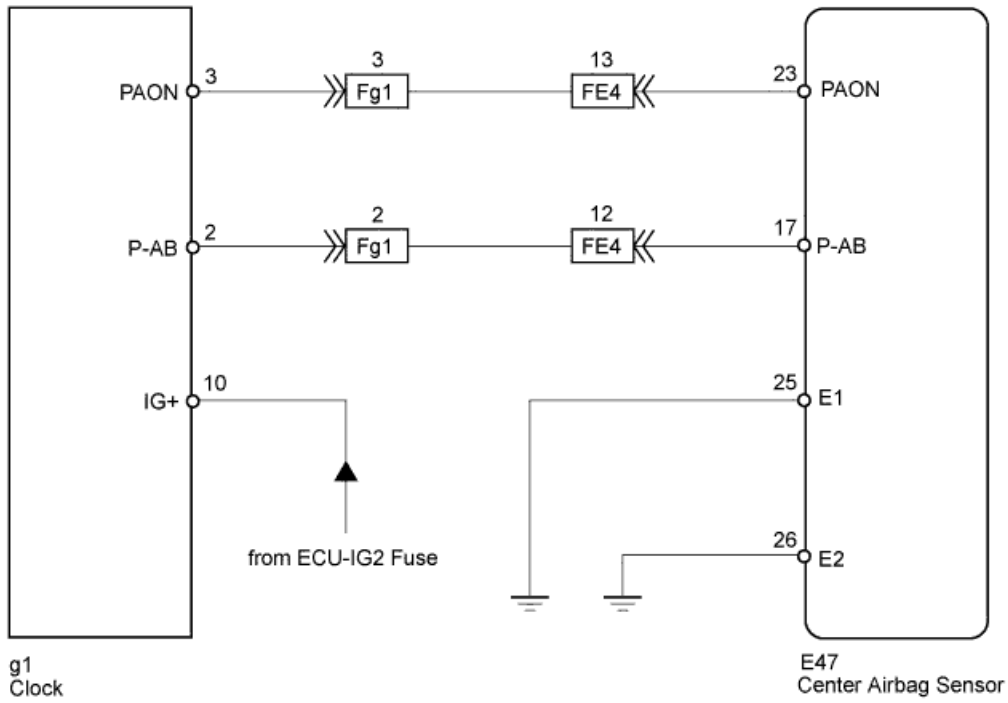


INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK PASSENGER AIRBAG ON/OFF INDICATOR CONDITION

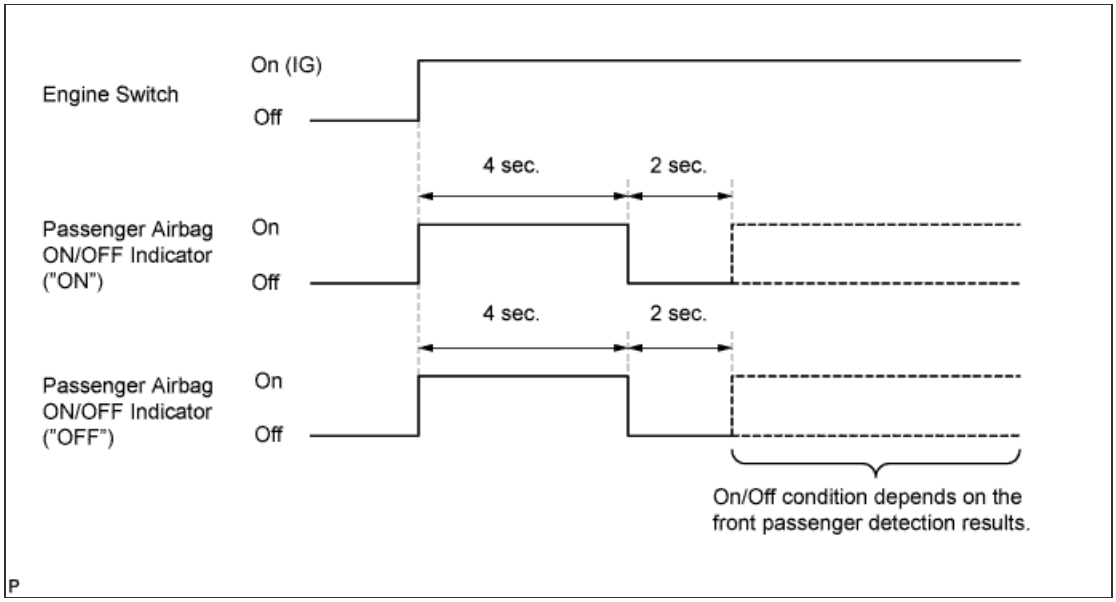

a. Turn the engine switch on (IG).

b. Check the passenger airbag ON/OFF indicator operation.

HINT:

Refer to the normal condition of the passenger airbag ON/OFF indicator (Click here).

Result

Result	Proceed to
Always On	A
Off	B

B → Go to step 9

A

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the multi-display or clock.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the multi-display or clock.

b. Check that the connectors (on the center airbag sensor side and multi-display side or clock side) are not damaged.

OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK PASSENGER AIRBAG ON/OFF INDICATOR

a. Connect the connector to the multi-display or clock.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG).

d. Check the passenger airbag ON/OFF indicator operation.

OK:
The passenger airbag ON/OFF indicator does not come on.



NG → Go to step 6

OK

5.CHECK CENTER AIRBAG SENSOR

a. Connect the connector to the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.


f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1660 is not output.

HINT:

Codes other than DTC B1660 may be output at this time, but they are not related to this check.

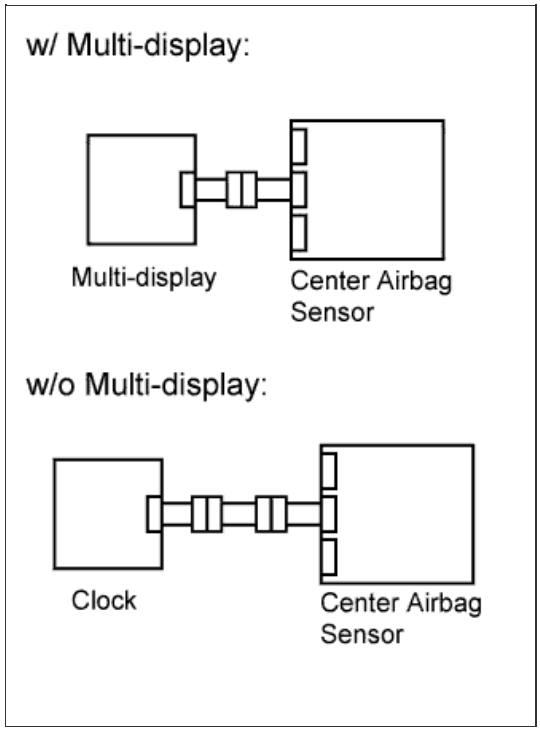


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

6.CHECK PASSENGER AIRBAG ON/OFF INDICATOR CIRCUIT

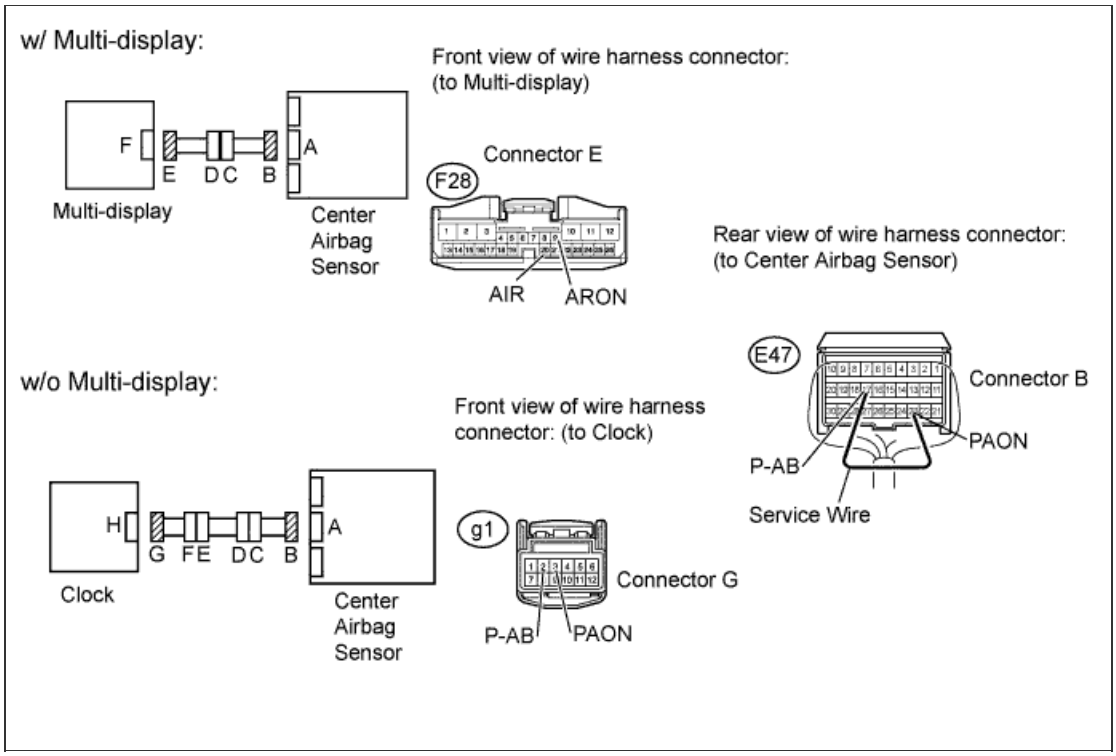

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the center airbag sensor and multi-display or clock.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

w/ Multi-display

Tester Connection	Switch Condition	Specified Condition
F28-9 (ARON) - Body ground	Engine switch on (IG)	Below 1 V
F28-20 (AIR) - Body ground	Engine switch on (IG)	Below 1 V

w/o Multi-display

Tester Connection	Switch Condition	Specified Condition
g1-3 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
g1-2 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. Using a service wire, connect terminals 23 (PAON) and 17 (P-AB) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/ Multi-display

Tester Connection	Condition	Specified Condition
F28-9 (ARON) - F28-20 (AIR)	Always	Below 1 Ω

w/o Multi-display

Tester Connection	Condition	Specified Condition
g1-3 (PAON) - g1-2 (P-AB)	Always	Below 1 Ω

j. Disconnect the service wire from connector B.

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/ Multi-display

Tester Connection	Condition	Specified Condition
F28-9 (ARON) - F28-20 (AIR)	Always	1 MΩ or higher
F28-9 (ARON) - Body ground	Always	1 MΩ or higher
F28-20 (AIR) - Body ground	Always	1 MΩ or higher

w/o Multi-display

Tester Connection	Condition	Specified Condition
g1-3 (PAON) - g1-2 (P-AB)	Always	1 MΩ or higher
g1-3 (PAON) - Body ground	Always	1 MΩ or higher
g1-2 (P-AB) - Body ground	Always	1 MΩ or higher

Result

Result	Proceed to
OK (w/ Multi-display)	A
OK (w/o Multi-display)	B
NG	C


B → REPLACE CLOCK (Click here)

C → Go to step 7

A

REPLACE MULTI-DISPLAY (Click here)

7.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - NO. 2 INSTRUMENT PANEL WIRE)

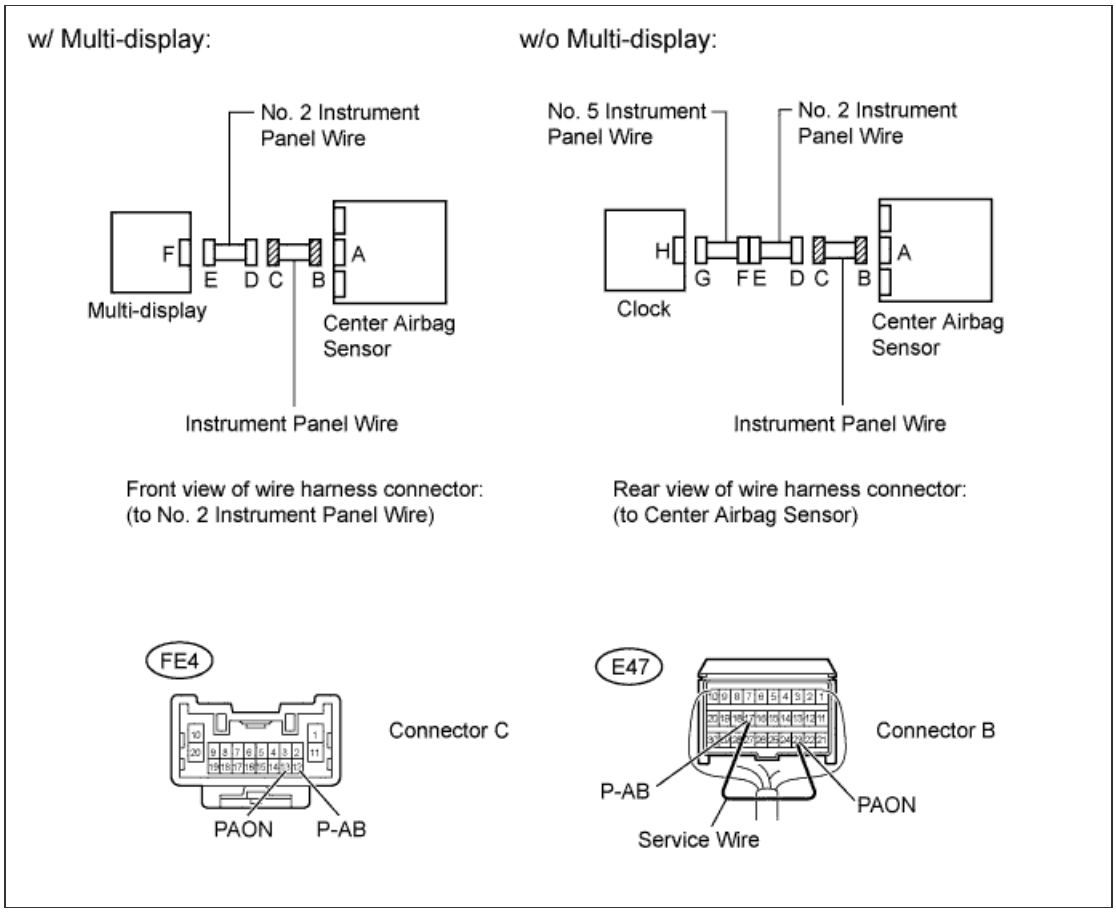

a. Disconnect the instrument panel wire connector from the No. 2 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
FE4-13 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
FE4-12 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 23 (PAON) and 17 (P-AB) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-13 (PAON) - FE4-12 (P-AB)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-13 (PAON) - FE4-12 (P-AB)	Always	1 MΩ or higher
FE4-13 (PAON) -	Always	1 MΩ or higher

Body ground		
FE4-12 (P-AB) - Body ground	Always	1 MΩ or higher

Result

Result	Proceed to
OK (w/ Multi-display)	A
OK (w/o Multi-display)	B
NG	C


B → Go to step 8

C → REPLACE INSTRUMENT PANEL WIRE

A

REPLACE NO. 2 INSTRUMENT PANEL WIRE

8.CHECK NO. 2 INSTRUMENT PANEL WIRE (INSTRUMENT PANEL WIRE - NO. 5 INSTRUMENT PANEL WIRE)

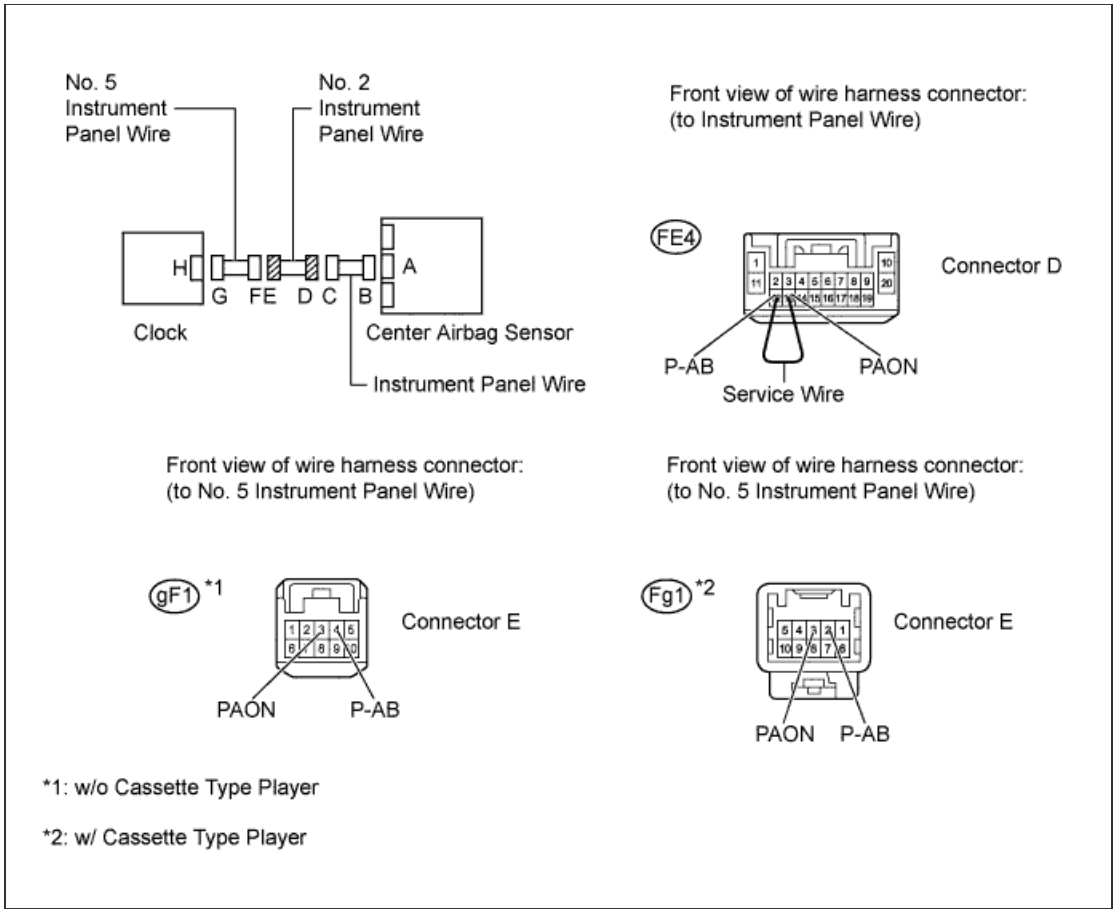

a. Disconnect the No. 2 instrument panel wire connector from the No. 5 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

w/o Cassette Type Player

Tester Connection	Switch Condition	Specified Condition
gF1-3 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
gF1-4 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

w/ Cassette Type Player

Tester Connection	Switch Condition	Specified Condition
Fg1-3 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
Fg1-2 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 13 (PAON) and 12 (P-AB) of connector D.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/o Cassette Type Player

Tester Connection	Condition	Specified Condition
gF1-3 (PAON) - gF1-4 (P-AB)	Always	Below 1 Ω

w/ Cassette Type Player

Tester Connection	Condition	Specified Condition
Fg1-3 (PAON) - Fg1-2 (P-AB)	Always	Below 1 Ω

h. Disconnect the service wire from connector D.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/o Cassette Type Player

Tester Connection	Condition	Specified Condition
gF1-3 (PAON) - gF1-4 (P-AB)	Always	1 MΩ or higher
gF1-3 (PAON) - Body ground	Always	1 MΩ or higher
gF1-4 (P-AB) - Body ground	Always	1 MΩ or higher

w/ Cassette Type Player

Tester Connection	Condition	Specified Condition
Fg1-3 (PAON) - Fg1-2 (P-AB)	Always	1 MΩ or higher
Fg1-3 (PAON) - Body ground	Always	1 MΩ or higher
Fg1-2 (P-AB) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 INSTRUMENT PANEL WIRE

OK

REPLACE NO. 5 INSTRUMENT PANEL WIRE

9.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the multi-display or clock.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

10.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the multi-display or clock.

b. Check that the connectors (on the center airbag sensor side and multi-display side or clock side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

11.CHECK PASSENGER AIRBAG ON/OFF INDICATOR CIRCUIT

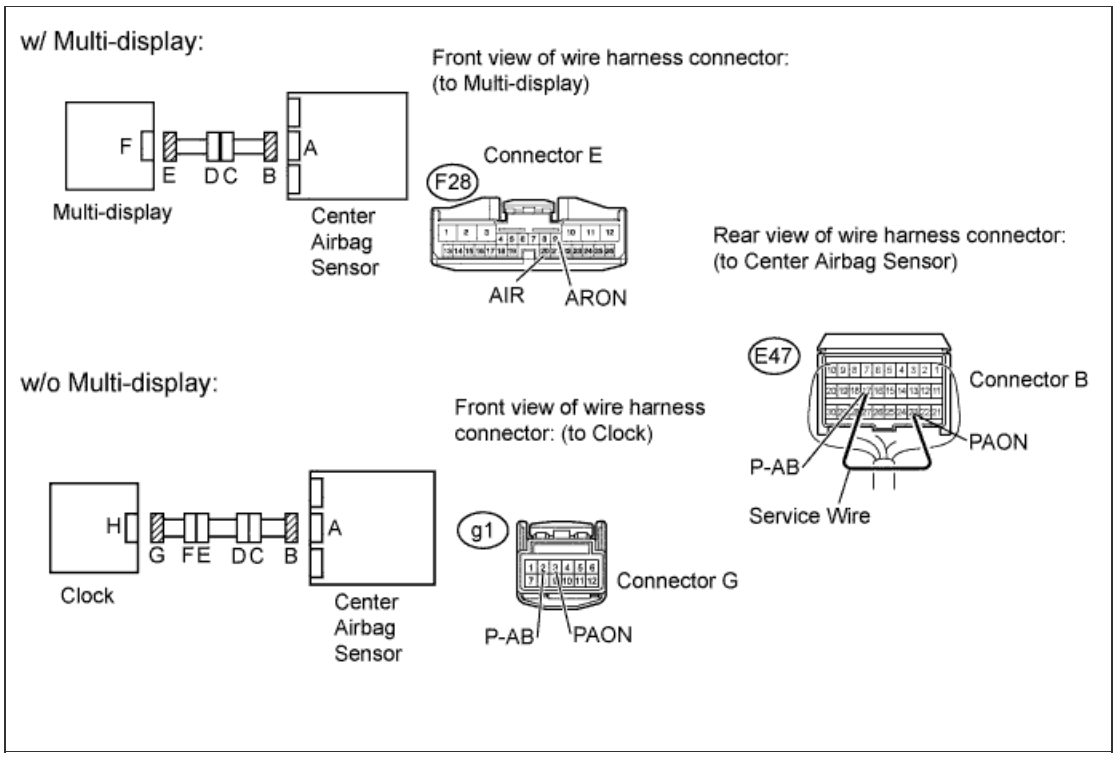

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

w/ Multi-display

Tester Connection	Switch Condition	Specified Condition
F28-9 (ARON) - Body ground	Engine switch on (IG)	Below 1 V
F28-20 (AIR) - Body ground	Engine switch on (IG)	Below 1 V

w/o Multi-display

Tester Connection	Switch Condition	Specified Condition
g1-3 (PAON) - Body	Engine switch on	

ground	(IG)	Below 1 V
g1-2 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 23 (PAON) and 17 (P-AB) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/ Multi-display

Tester Connection	Condition	Specified Condition
F28-9 (ARON) - F28-20 (AIR)	Always	Below 1 Ω

w/o Multi-display

Tester Connection	Condition	Specified Condition
g1-3 (PAON) - g1-2 (P-AB)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/ Multi-display

Tester Connection	Condition	Specified Condition
F28-9 (ARON) - F28-20 (AIR)	Always	1 MΩ or higher
F28-9 (ARON) - Body ground	Always	1 MΩ or higher
F28-20 (AIR) - Body ground	Always	1 MΩ or higher

w/o Multi-display

Tester Connection	Condition	Specified Condition
g1-3 (PAON) - g1-2 (P-AB)	Always	1 MΩ or higher
g1-3 (PAON) - Body ground	Always	1 MΩ or higher
g1-2 (P-AB) - Body ground	Always	1 MΩ or higher

NG → Go to step 15

OK

12.CHECK PASSENGER AIRBAG ON/OFF INDICATOR (SOURCE VOLTAGE)


a. Turn the engine switch off.

b. Connect the connectors to the center airbag sensor.


c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Front view of wire harness connector:
(to Multi-display)

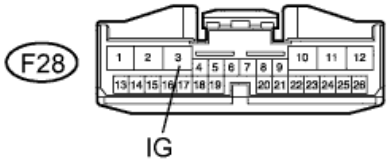

Front view of wire harness connector:
(to Clock)

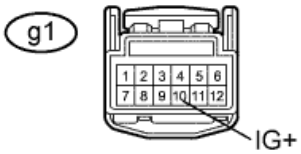

Standard Voltage:

w/ Multi-display

Tester Connection	Switch Condition	Specified Condition
F28-3 (IG) - Body ground	Engine switch on (IG)	11 to 14 V

w/o Multi-display

Tester Connection	Switch Condition	Specified Condition
g1-10 (IG+) - Body ground	Engine switch on (IG)	11 to 14 V

Result

Result	Proceed to
OK	A
NG (w/ Multi-display)	B
NG (w/o Multi-display)	C

B → REPLACE HARNESS AND CONNECTOR (MULTI-DISPLAY - BATTERY) OR BATTERY

C → REPLACE HARNESS AND CONNECTOR (CLOCK - BATTERY) OR BATTERY

A

13.CHECK PASSENGER AIRBAG ON/OFF INDICATOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connector to the multi-display or clock.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


f. Check the indicator according to the table below.

OK:

Tester Connection	Switch Condition	Passenger airbag ON/OFF indicator
E47-23 (PAON) - Body ground	Engine switch on (IG)	"ON" comes on
E47-17 (P-AB) - Body ground	Engine switch on (IG)	"OFF" comes on

Result

Result	Proceed to
OK	A
NG (w/ Multi-display)	B
NG (w/o Multi-display)	C

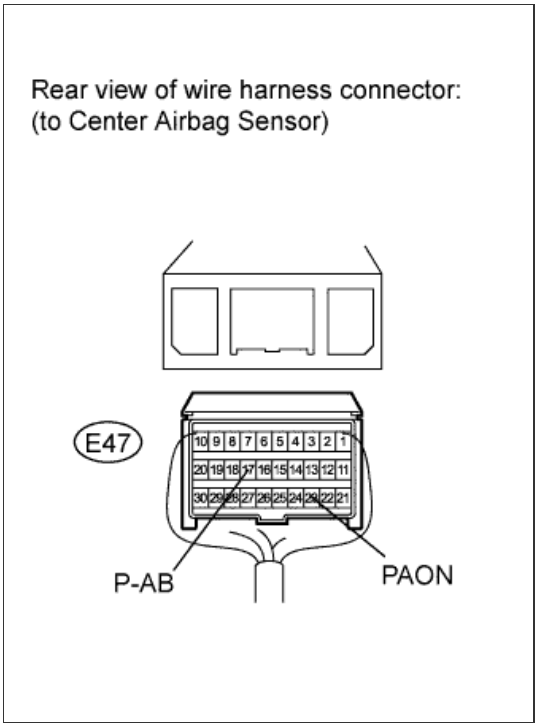

B → REPLACE MULTI-DISPLAY (Click here)

C → REPLACE CLOCK (Click here)

A

14.CHECK CENTER AIRBAG SENSOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connectors to the center airbag sensor.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs (Click here).

g. Turn the engine switch off.


h. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1660 is not output.

HINT:

Codes other than DTC B1660 may be output at this time, but they are not related to this check.

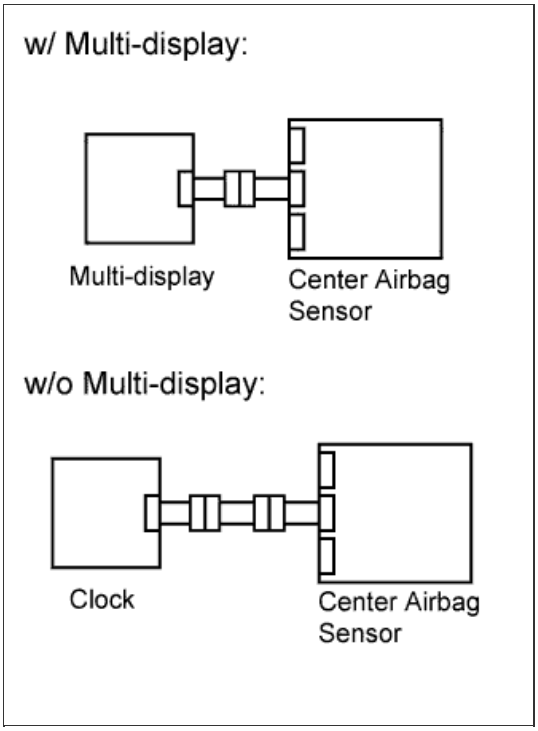


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

15.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - NO. 2 INSTRUMENT PANEL WIRE)

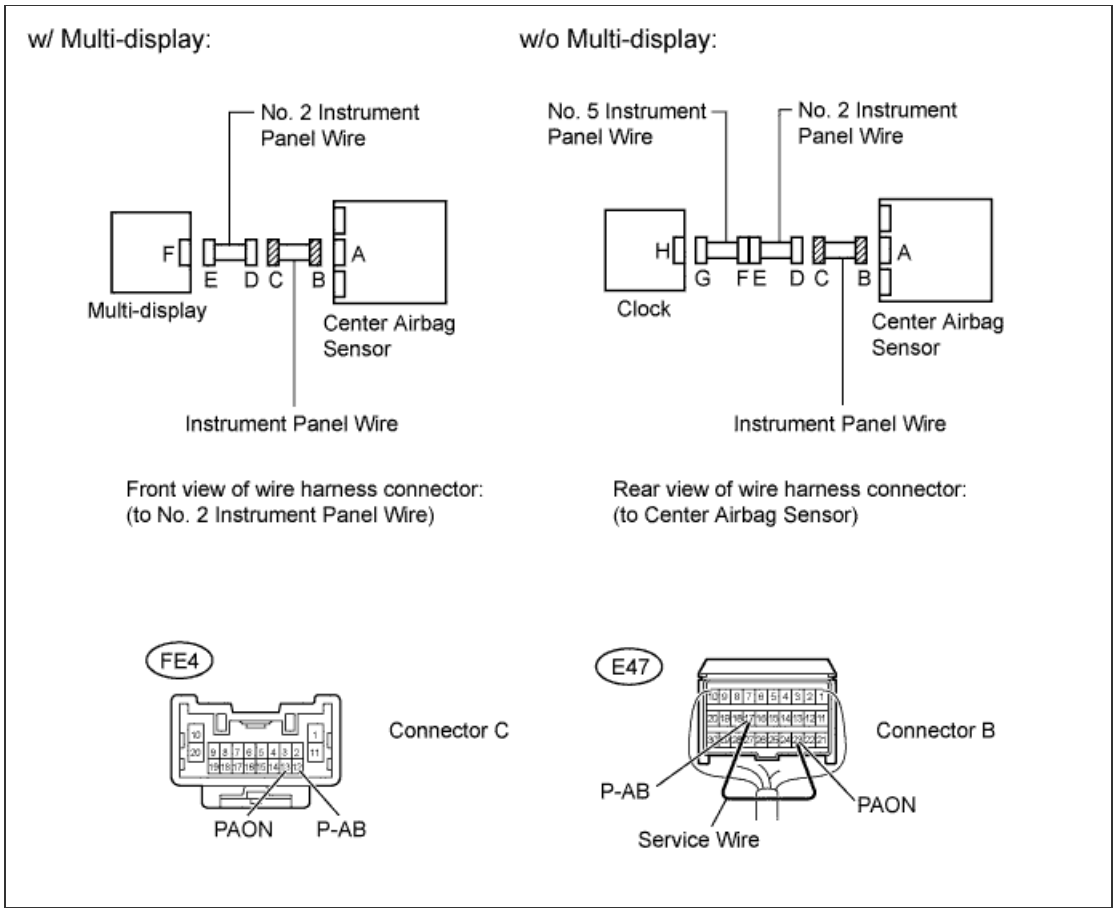

a. Disconnect the instrument panel wire connector from the No. 2 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
FE4-13 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
FE4-12 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 23 (PAON) and 17 (P-AB) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-13 (PAON) - FE4-12 (P-AB)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-13 (PAON) - FE4-12 (P-AB)	Always	1 MΩ or higher
FE4-13 (PAON) -	Always	1 MΩ or higher

Body ground		
FE4-12 (P-AB) - Body ground	Always	1 MΩ or higher

Result

Result	Proceed to
OK (w/ Multi-display)	A
OK (w/o Multi-display)	B
NG	C


B → Go to step 16

C → REPLACE INSTRUMENT PANEL WIRE

A

REPLACE NO. 2 INSTRUMENT PANEL WIRE

16.CHECK NO. 2 INSTRUMENT PANEL WIRE (INSTRUMENT PANEL WIRE - NO. 5 INSTRUMENT PANEL WIRE)

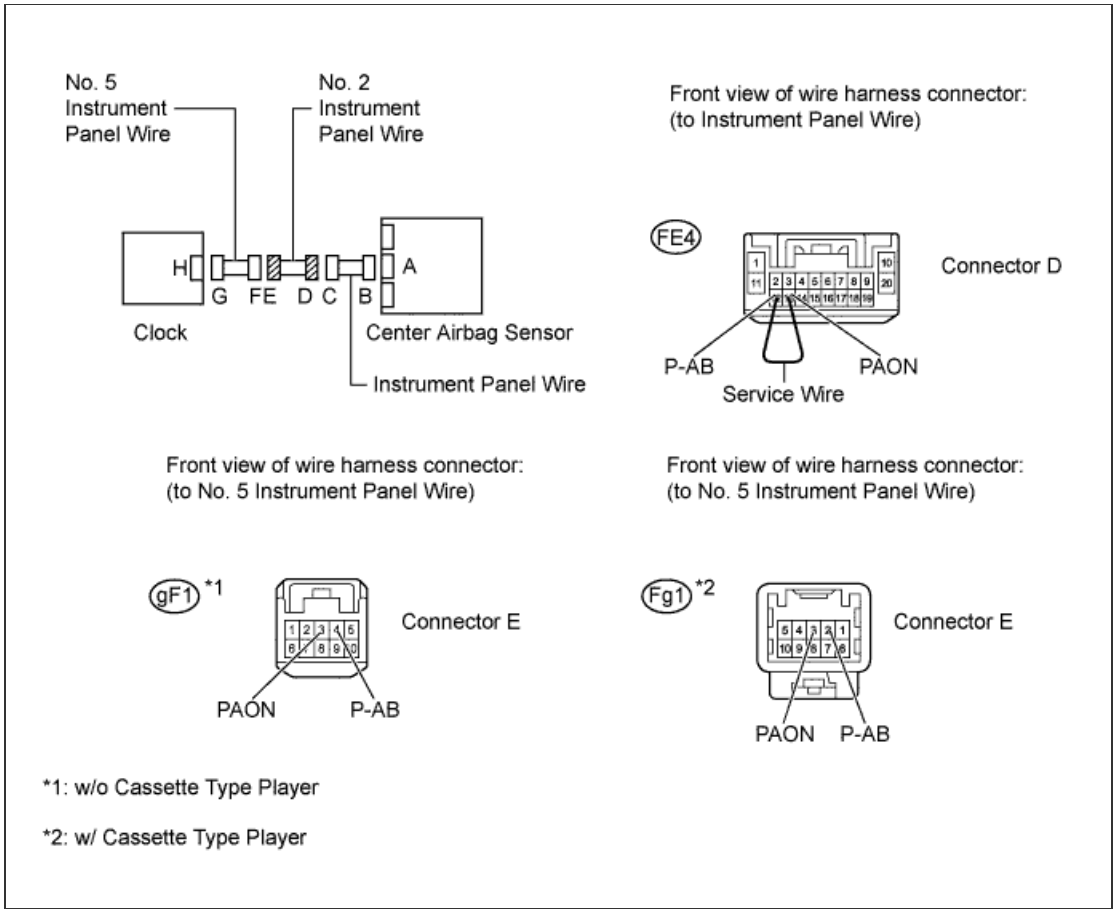

a. Disconnect the No. 2 instrument panel wire connector from the No. 5 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

w/o Cassette Type Player

Tester Connection	Switch Condition	Specified Condition
gF1-3 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
gF1-4 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

w/ Cassette Type Player

Tester Connection	Switch Condition	Specified Condition
Fg1-3 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
Fg1-2 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 13 (PAON) and 12 (P-AB) of connector D.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/o Cassette Type Player

Tester Connection	Condition	Specified Condition
gF1-3 (PAON) - gF1-4 (P-AB)	Always	Below 1 Ω

w/ Cassette Type Player

Tester Connection	Condition	Specified Condition
Fg1-3 (PAON) - Fg1-2 (P-AB)	Always	Below 1 Ω

h. Disconnect the service wire from connector D.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/o Cassette Type Player

Tester Connection	Condition	Specified Condition
gF1-3 (PAON) - gF1-4 (P-AB)	Always	1 MΩ or higher
gF1-3 (PAON) - Body ground	Always	1 MΩ or higher
gF1-4 (P-AB) - Body ground	Always	1 MΩ or higher

w/ Cassette Type Player

Tester Connection	Condition	Specified Condition
Fg1-3 (PAON) - Fg1-2 (P-AB)	Always	1 MΩ or higher
Fg1-3 (PAON) - Body ground	Always	1 MΩ or higher
Fg1-2 (P-AB) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 INSTRUMENT PANEL WIRE

OK → REPLACE NO. 5 INSTRUMENT PANEL WIRE

DTC B1855/63 Short in Rear Side Squib LH Circuit

DTC B1856/63 Open in Rear Side Squib LH Circuit

DTC B1857/63 Short to GND in Rear Side Squib LH Circuit

DTC B1858/63 Short to B+ in Rear Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib LH circuit consists of the center airbag sensor and the rear seat side airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1855/63	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib LH circuit during the primary check. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1856/63	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib LH circuit for 2 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1857/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1858/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

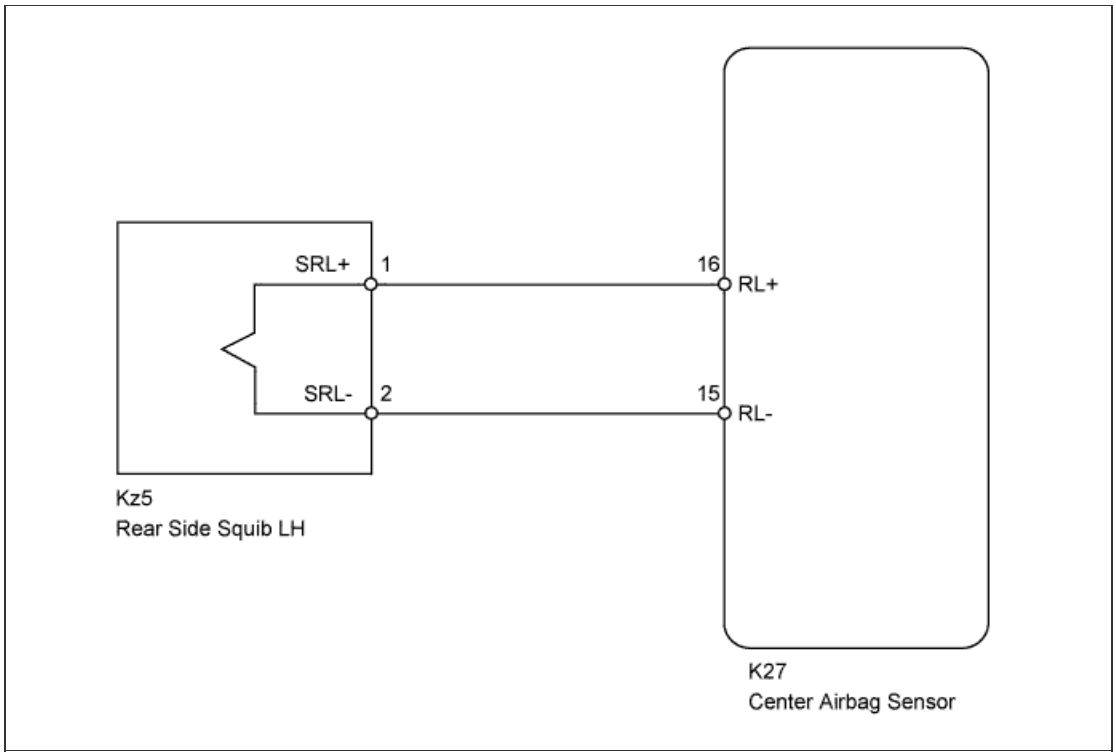

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG LH (REAR SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag LH (rear side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

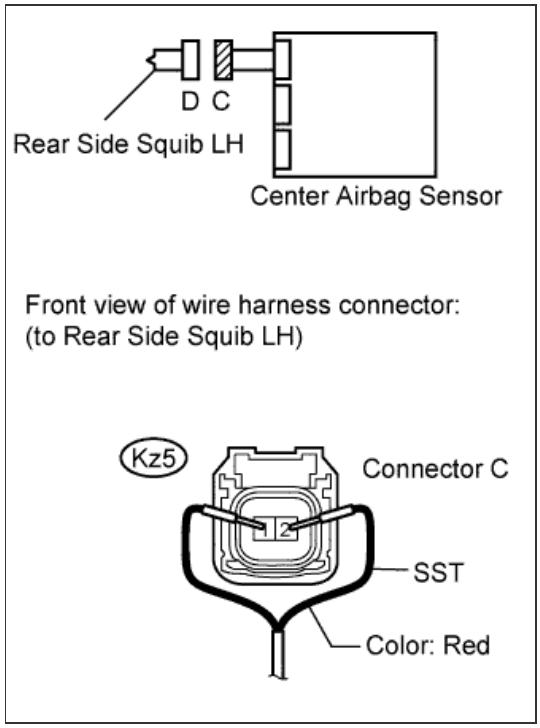

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (REAR SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

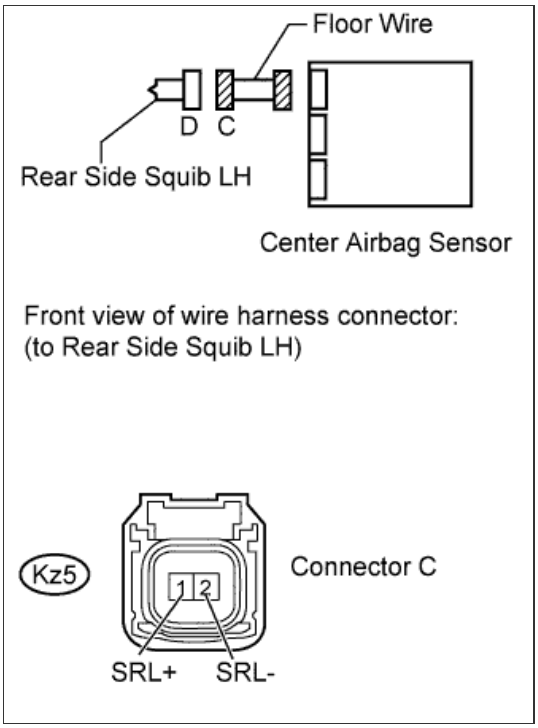

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz5-1 (SRL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz5-2 (SRL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	1 MΩ or higher
Kz5-1 (SRL+) - Body ground	Always	1 MΩ or higher
Kz5-2 (SRL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

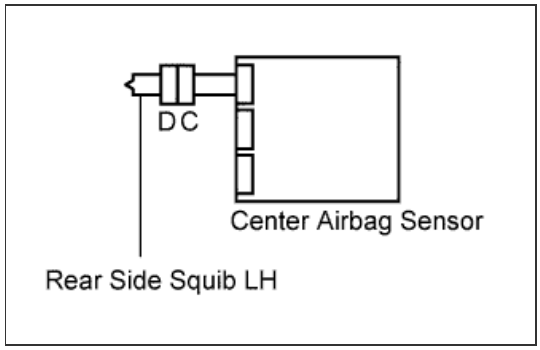

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1660/43 Passenger Airbag ON/OFF Indicator Circuit Malfunction

for Preparation Click here

DESCRIPTION

The passenger airbag ON/OFF indicator circuit consists of the center airbag sensor and the passenger airbag ON/OFF indicator.
The passenger airbag ON/OFF indicator indicates the operation condition of the front passenger airbag, front passenger side knee airbag, front seat airbag RH and front seat outer belt RH.
DTC B1660/43 is stored when a malfunction is detected in the passenger airbag ON/OFF indicator circuit.


DTC Code	DTC Detection Condition	Trouble Area
B1660/43	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the passenger airbag ON/OFF indicator circuit for 2 seconds. • A passenger airbag ON/OFF indicator malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Multi-display*1 • Clock*2 • Center airbag sensor assembly • No. 2 instrument panel wire • No. 5 instrument panel wire*2

HINT:


*1: w/ Multi-display

*2: w/o Multi-display


WIRING DIAGRAM

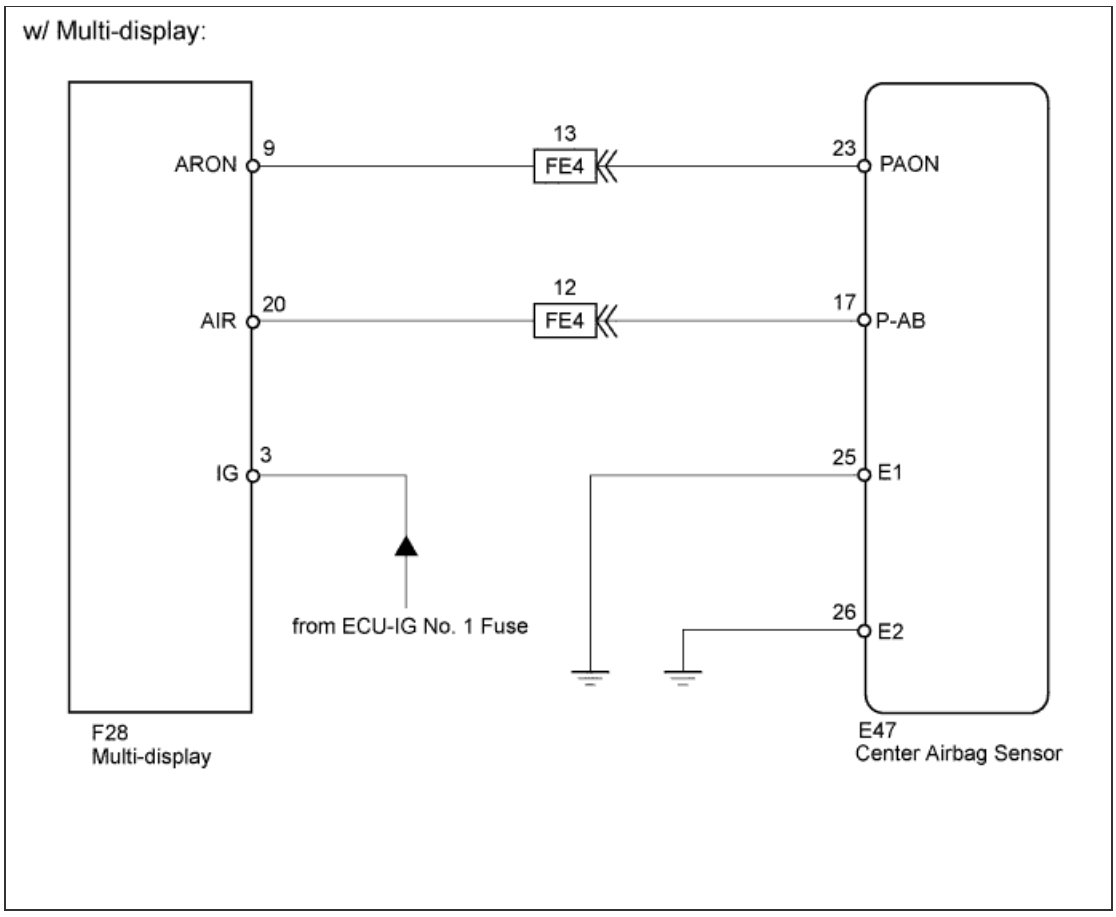

w/o Multi-display (w/o Cassette Tape Player):

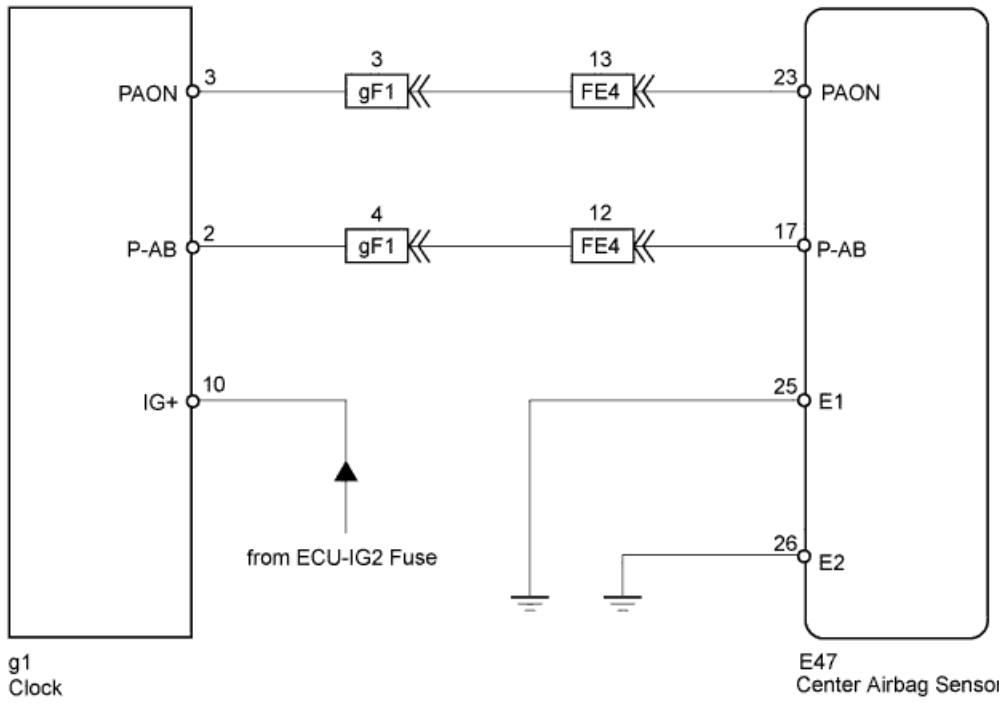

w/o Multi-display (w/ Cassette Tape Player):

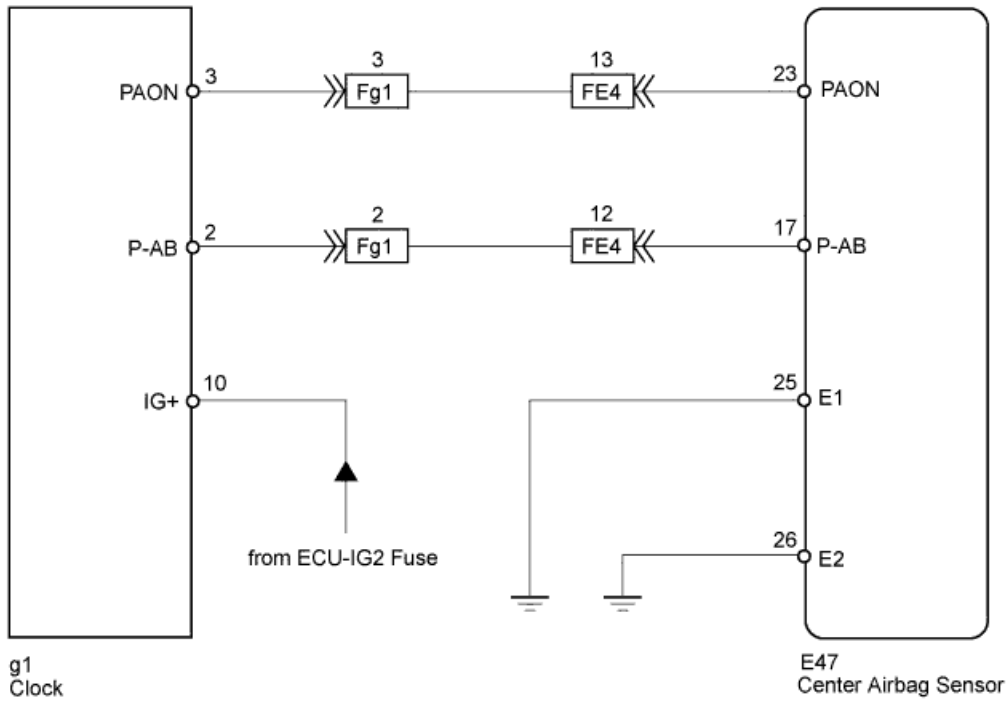


INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK PASSENGER AIRBAG ON/OFF INDICATOR CONDITION

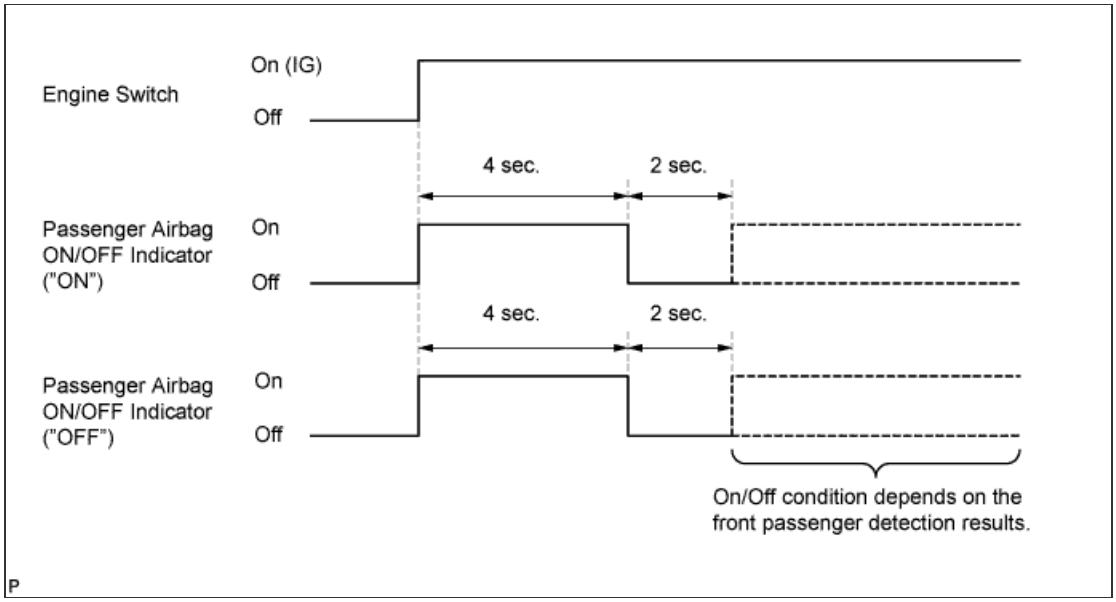

a. Turn the engine switch on (IG).

b. Check the passenger airbag ON/OFF indicator operation.

HINT:

Refer to the normal condition of the passenger airbag ON/OFF indicator (Click here).

Result

Result	Proceed to
Always On	A
Off	B

B → Go to step 9

A

2.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the multi-display or clock.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

3.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the multi-display or clock.

b. Check that the connectors (on the center airbag sensor side and multi-display side or clock side) are not damaged.

OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

4.CHECK PASSENGER AIRBAG ON/OFF INDICATOR

a. Connect the connector to the multi-display or clock.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG).

d. Check the passenger airbag ON/OFF indicator operation.

OK:
The passenger airbag ON/OFF indicator does not come on.



NG → Go to step 6

OK

5.CHECK CENTER AIRBAG SENSOR

a. Connect the connector to the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.


f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

OK:
DTC B1660 is not output.

HINT:

Codes other than DTC B1660 may be output at this time, but they are not related to this check.

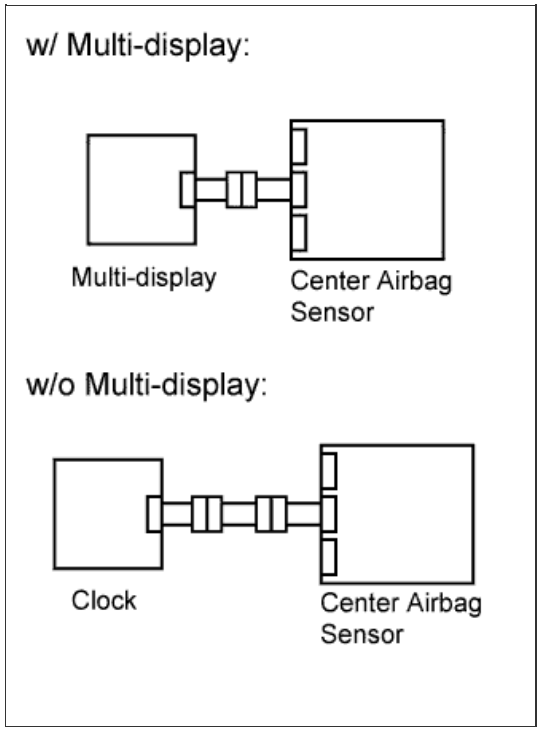


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

6.CHECK PASSENGER AIRBAG ON/OFF INDICATOR CIRCUIT

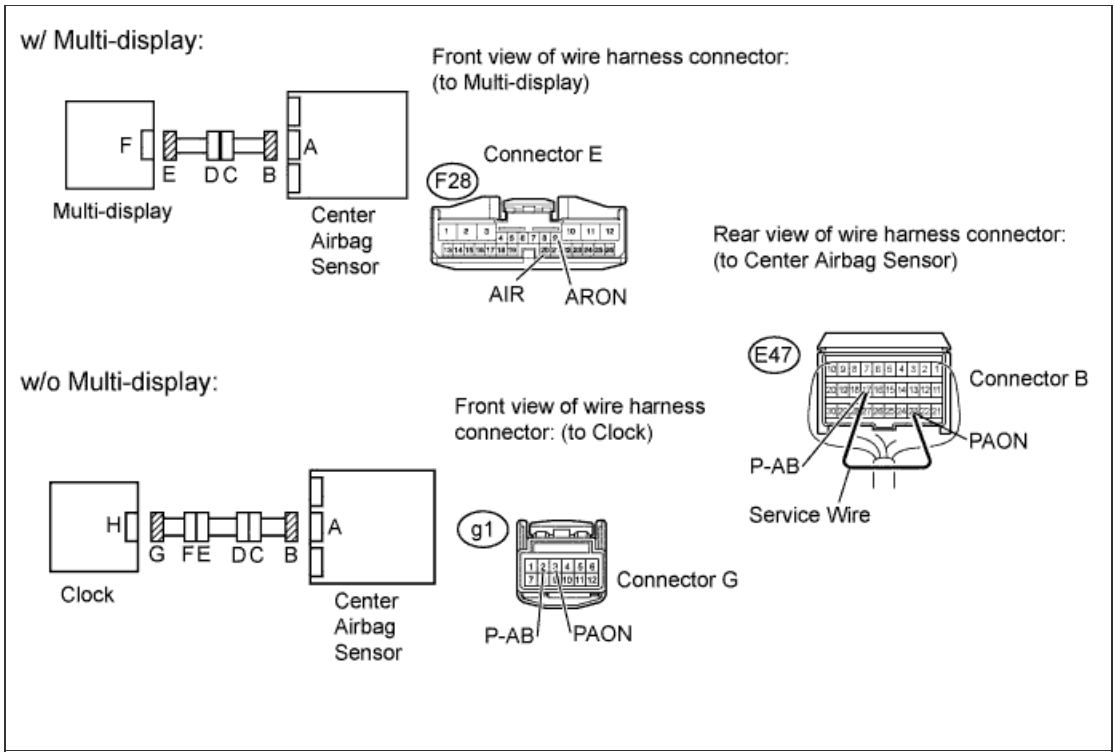

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the center airbag sensor and multi-display or clock.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

w/ Multi-display

Tester Connection	Switch Condition	Specified Condition
F28-9 (ARON) - Body ground	Engine switch on (IG)	Below 1 V
F28-20 (AIR) - Body ground	Engine switch on (IG)	Below 1 V

w/o Multi-display

Tester Connection	Switch Condition	Specified Condition
g1-3 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
g1-2 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. Using a service wire, connect terminals 23 (PAON) and 17 (P-AB) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/ Multi-display

Tester Connection	Condition	Specified Condition
F28-9 (ARON) - F28-20 (AIR)	Always	Below 1 Ω

w/o Multi-display

Tester Connection	Condition	Specified Condition
g1-3 (PAON) - g1-2 (P-AB)	Always	Below 1 Ω

j. Disconnect the service wire from connector B.

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/ Multi-display

Tester Connection	Condition	Specified Condition
F28-9 (ARON) - F28-20 (AIR)	Always	1 MΩ or higher
F28-9 (ARON) - Body ground	Always	1 MΩ or higher
F28-20 (AIR) - Body ground	Always	1 MΩ or higher

w/o Multi-display

Tester Connection	Condition	Specified Condition
g1-3 (PAON) - g1-2 (P-AB)	Always	1 MΩ or higher
g1-3 (PAON) - Body ground	Always	1 MΩ or higher
g1-2 (P-AB) - Body ground	Always	1 MΩ or higher

Result

Result	Proceed to
OK (w/ Multi-display)	A
OK (w/o Multi-display)	B
NG	C


B → REPLACE CLOCK (Click here)

C → Go to step 7

A

REPLACE MULTI-DISPLAY (Click here)

7.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - NO. 2 INSTRUMENT PANEL WIRE)

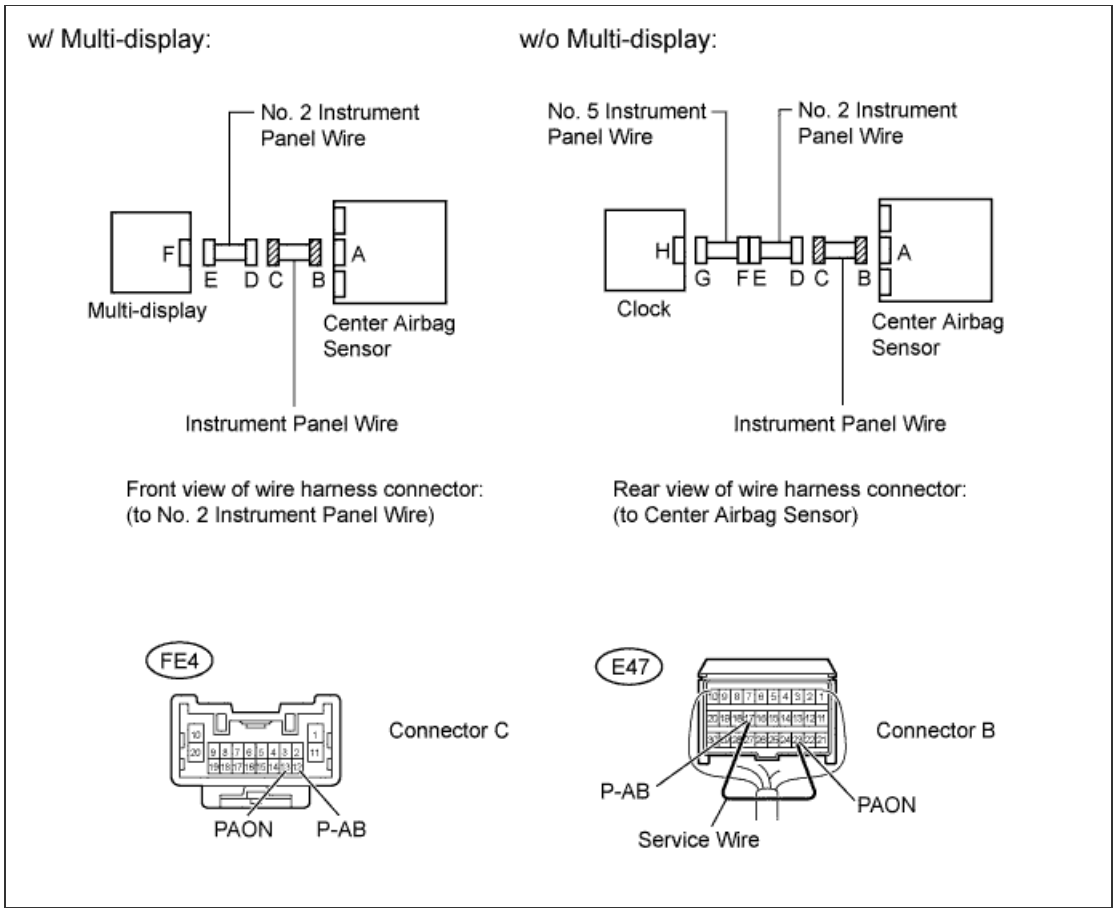

a. Disconnect the instrument panel wire connector from the No. 2 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
FE4-13 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
FE4-12 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 23 (PAON) and 17 (P-AB) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-13 (PAON) - FE4-12 (P-AB)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-13 (PAON) - FE4-12 (P-AB)	Always	1 MΩ or higher
FE4-13 (PAON) -	Always	1 MΩ or higher

Body ground		
FE4-12 (P-AB) - Body ground	Always	1 MΩ or higher

Result

Result	Proceed to
OK (w/ Multi-display)	A
OK (w/o Multi-display)	B
NG	C


B → Go to step 8

C → REPLACE INSTRUMENT PANEL WIRE

A

REPLACE NO. 2 INSTRUMENT PANEL WIRE

8.CHECK NO. 2 INSTRUMENT PANEL WIRE (INSTRUMENT PANEL WIRE - NO. 5 INSTRUMENT PANEL WIRE)

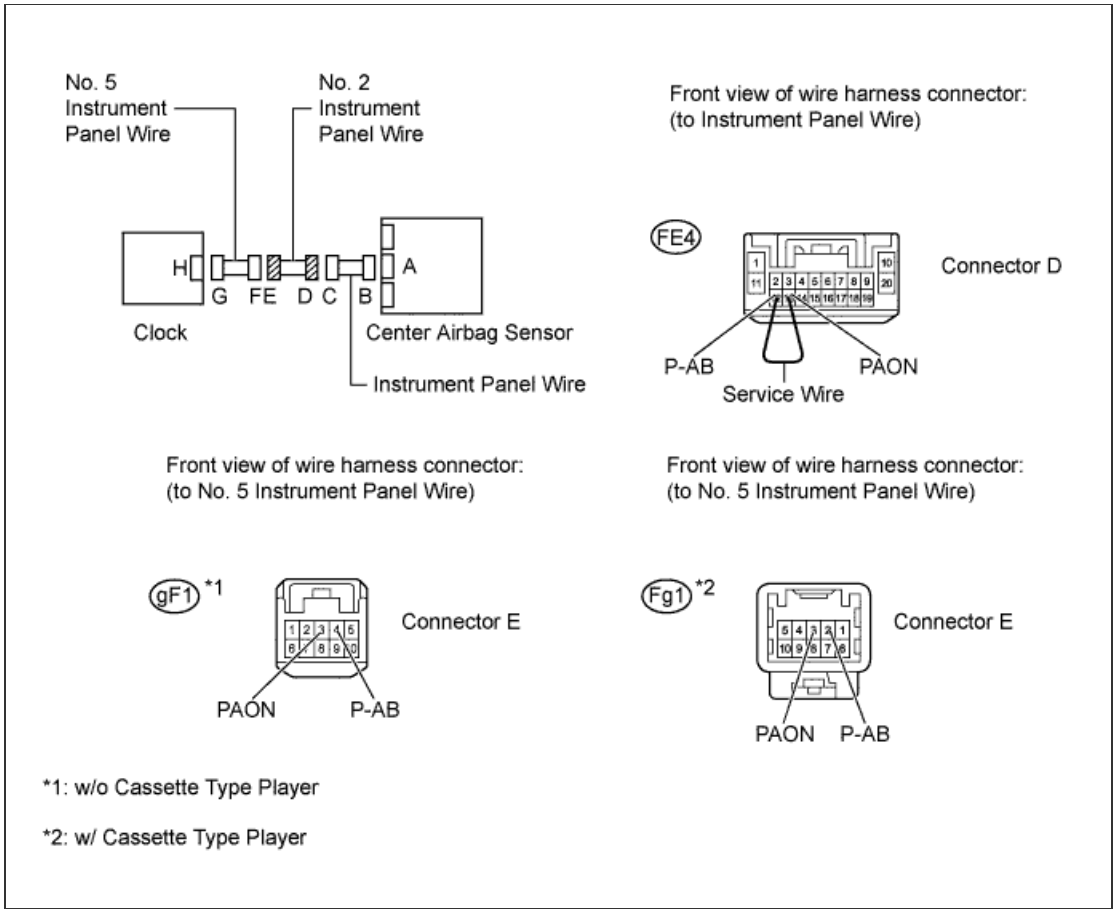

a. Disconnect the No. 2 instrument panel wire connector from the No. 5 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

w/o Cassette Type Player

Tester Connection	Switch Condition	Specified Condition
gF1-3 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
gF1-4 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

w/ Cassette Type Player

Tester Connection	Switch Condition	Specified Condition
Fg1-3 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
Fg1-2 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 13 (PAON) and 12 (P-AB) of connector D.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/o Cassette Type Player

Tester Connection	Condition	Specified Condition
gF1-3 (PAON) - gF1-4 (P-AB)	Always	Below 1 Ω

w/ Cassette Type Player

Tester Connection	Condition	Specified Condition
Fg1-3 (PAON) - Fg1-2 (P-AB)	Always	Below 1 Ω

h. Disconnect the service wire from connector D.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/o Cassette Type Player

Tester Connection	Condition	Specified Condition
gF1-3 (PAON) - gF1-4 (P-AB)	Always	1 MΩ or higher
gF1-3 (PAON) - Body ground	Always	1 MΩ or higher
gF1-4 (P-AB) - Body ground	Always	1 MΩ or higher

w/ Cassette Type Player

Tester Connection	Condition	Specified Condition
Fg1-3 (PAON) - Fg1-2 (P-AB)	Always	1 MΩ or higher
Fg1-3 (PAON) - Body ground	Always	1 MΩ or higher
Fg1-2 (P-AB) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 INSTRUMENT PANEL WIRE

OK

REPLACE NO. 5 INSTRUMENT PANEL WIRE

9.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the multi-display or clock.

OK:

The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

10.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and the multi-display or clock.

b. Check that the connectors (on the center airbag sensor side and multi-display side or clock side) are not damaged.


OK:

The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

11.CHECK PASSENGER AIRBAG ON/OFF INDICATOR CIRCUIT

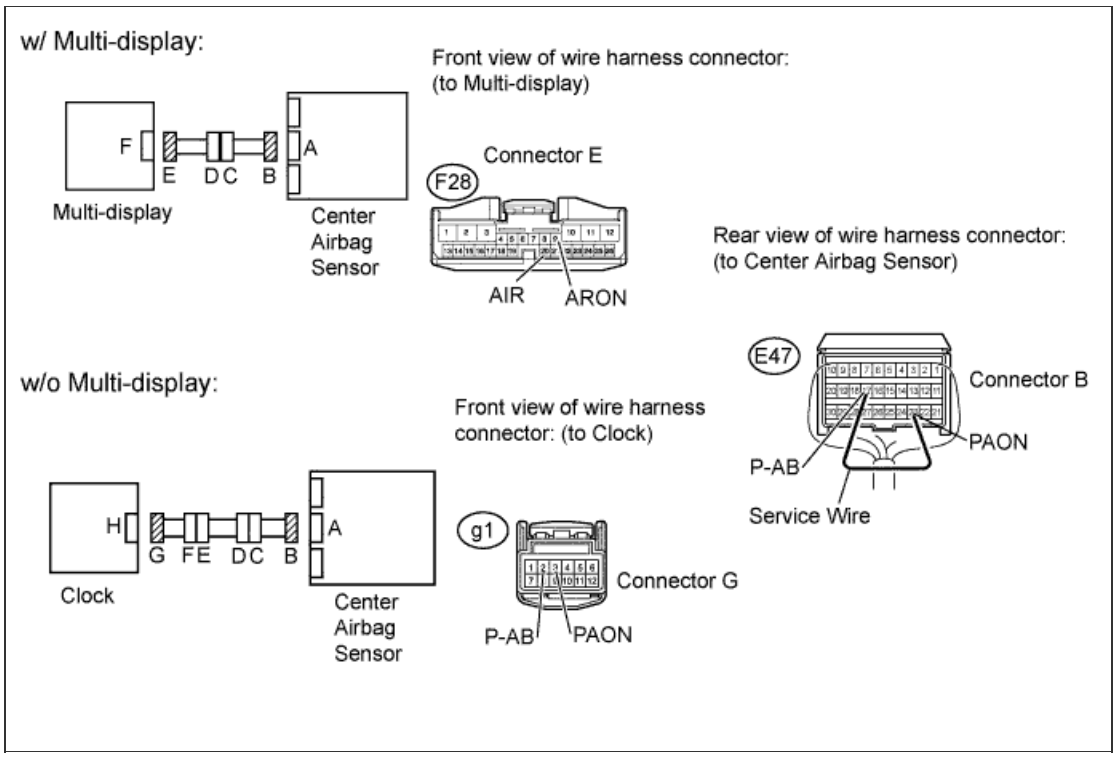

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

w/ Multi-display

Tester Connection	Switch Condition	Specified Condition
F28-9 (ARON) - Body ground	Engine switch on (IG)	Below 1 V
F28-20 (AIR) - Body ground	Engine switch on (IG)	Below 1 V

w/o Multi-display

Tester Connection	Switch Condition	Specified Condition
g1-3 (PAON) - Body	Engine switch on	

ground	(IG)	Below 1 V
g1-2 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 23 (PAON) and 17 (P-AB) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/ Multi-display

Tester Connection	Condition	Specified Condition
F28-9 (ARON) - F28-20 (AIR)	Always	Below 1 Ω

w/o Multi-display

Tester Connection	Condition	Specified Condition
g1-3 (PAON) - g1-2 (P-AB)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/ Multi-display

Tester Connection	Condition	Specified Condition
F28-9 (ARON) - F28-20 (AIR)	Always	1 MΩ or higher
F28-9 (ARON) - Body ground	Always	1 MΩ or higher
F28-20 (AIR) - Body ground	Always	1 MΩ or higher

w/o Multi-display

Tester Connection	Condition	Specified Condition
g1-3 (PAON) - g1-2 (P-AB)	Always	1 MΩ or higher
g1-3 (PAON) - Body ground	Always	1 MΩ or higher
g1-2 (P-AB) - Body ground	Always	1 MΩ or higher

NG → Go to step 15

OK

12.CHECK PASSENGER AIRBAG ON/OFF INDICATOR (SOURCE VOLTAGE)


a. Turn the engine switch off.

b. Connect the connectors to the center airbag sensor.


c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Front view of wire harness connector:
(to Multi-display)

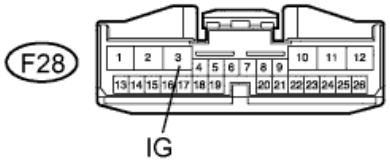

Front view of wire harness connector:
(to Clock)

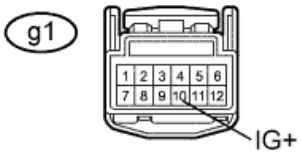

Standard Voltage:

w/ Multi-display

Tester Connection	Switch Condition	Specified Condition
F28-3 (IG) - Body ground	Engine switch on (IG)	11 to 14 V

w/o Multi-display

Tester Connection	Switch Condition	Specified Condition
g1-10 (IG+) - Body ground	Engine switch on (IG)	11 to 14 V

Result

Result	Proceed to
OK	A
NG (w/ Multi-display)	B
NG (w/o Multi-display)	C

B → REPLACE HARNESS AND CONNECTOR (MULTI-DISPLAY - BATTERY) OR BATTERY

C → REPLACE HARNESS AND CONNECTOR (CLOCK - BATTERY) OR BATTERY

A

13.CHECK PASSENGER AIRBAG ON/OFF INDICATOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connector to the multi-display or clock.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


f. Check the indicator according to the table below.

OK:

Tester Connection	Switch Condition	Passenger airbag ON/OFF indicator
E47-23 (PAON) - Body ground	Engine switch on (IG)	"ON" comes on
E47-17 (P-AB) - Body ground	Engine switch on (IG)	"OFF" comes on

Result

Result	Proceed to
OK	A
NG (w/ Multi-display)	B
NG (w/o Multi-display)	C

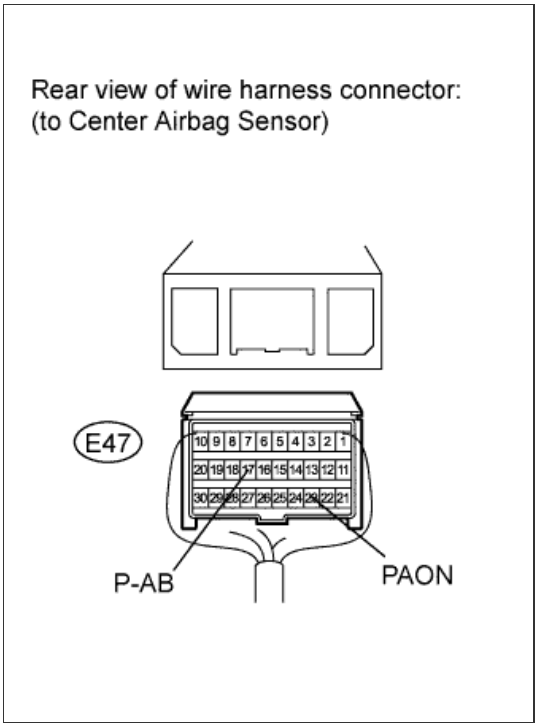

B → REPLACE MULTI-DISPLAY (Click here)

C → REPLACE CLOCK (Click here)

A

14.CHECK CENTER AIRBAG SENSOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connectors to the center airbag sensor.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs (Click here).

g. Turn the engine switch off.


h. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1660 is not output.

HINT:

Codes other than DTC B1660 may be output at this time, but they are not related to this check.

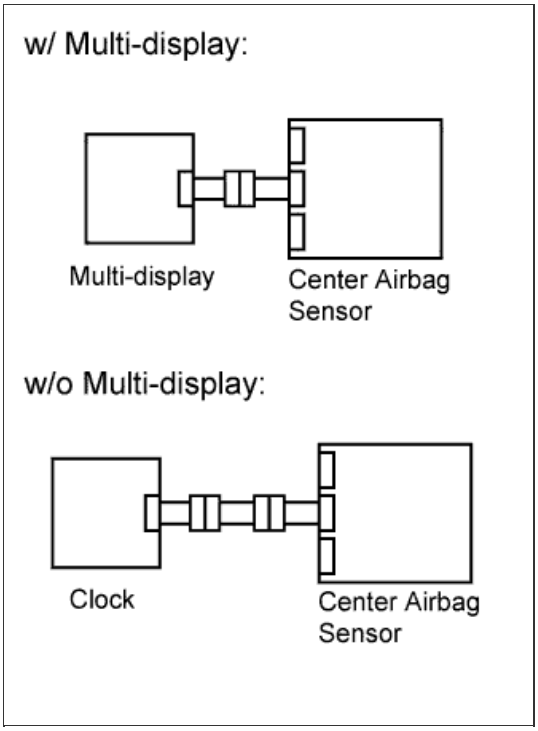


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

15.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - NO. 2 INSTRUMENT PANEL WIRE)

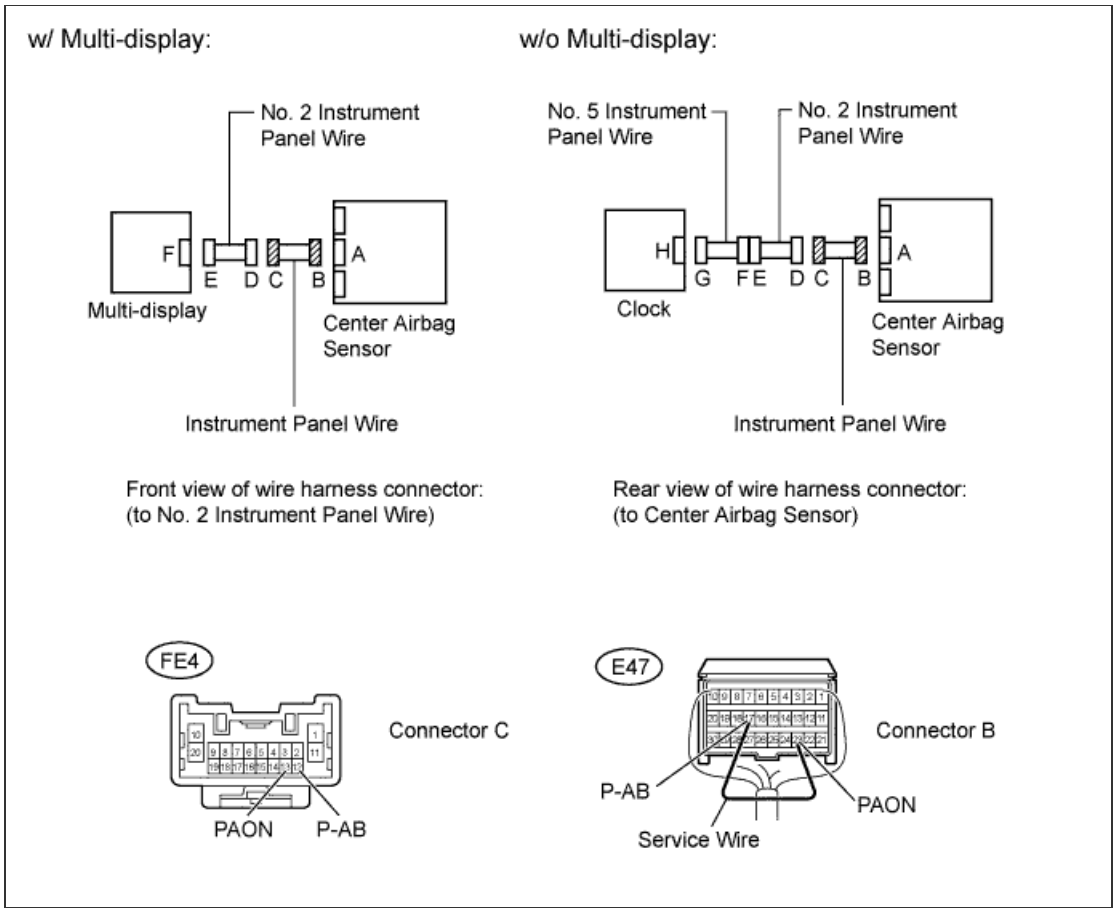

a. Disconnect the instrument panel wire connector from the No. 2 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
FE4-13 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
FE4-12 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 23 (PAON) and 17 (P-AB) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-13 (PAON) - FE4-12 (P-AB)	Always	Below 1 Ω

h. Disconnect the service wire from connector B.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
FE4-13 (PAON) - FE4-12 (P-AB)	Always	1 MΩ or higher
FE4-13 (PAON) -	Always	1 MΩ or higher

Body ground		
FE4-12 (P-AB) - Body ground	Always	1 MΩ or higher

Result

Result	Proceed to
OK (w/ Multi-display)	A
OK (w/o Multi-display)	B
NG	C


B → Go to step 16

C → REPLACE INSTRUMENT PANEL WIRE

A

REPLACE NO. 2 INSTRUMENT PANEL WIRE

16.CHECK NO. 2 INSTRUMENT PANEL WIRE (INSTRUMENT PANEL WIRE - NO. 5 INSTRUMENT PANEL WIRE)

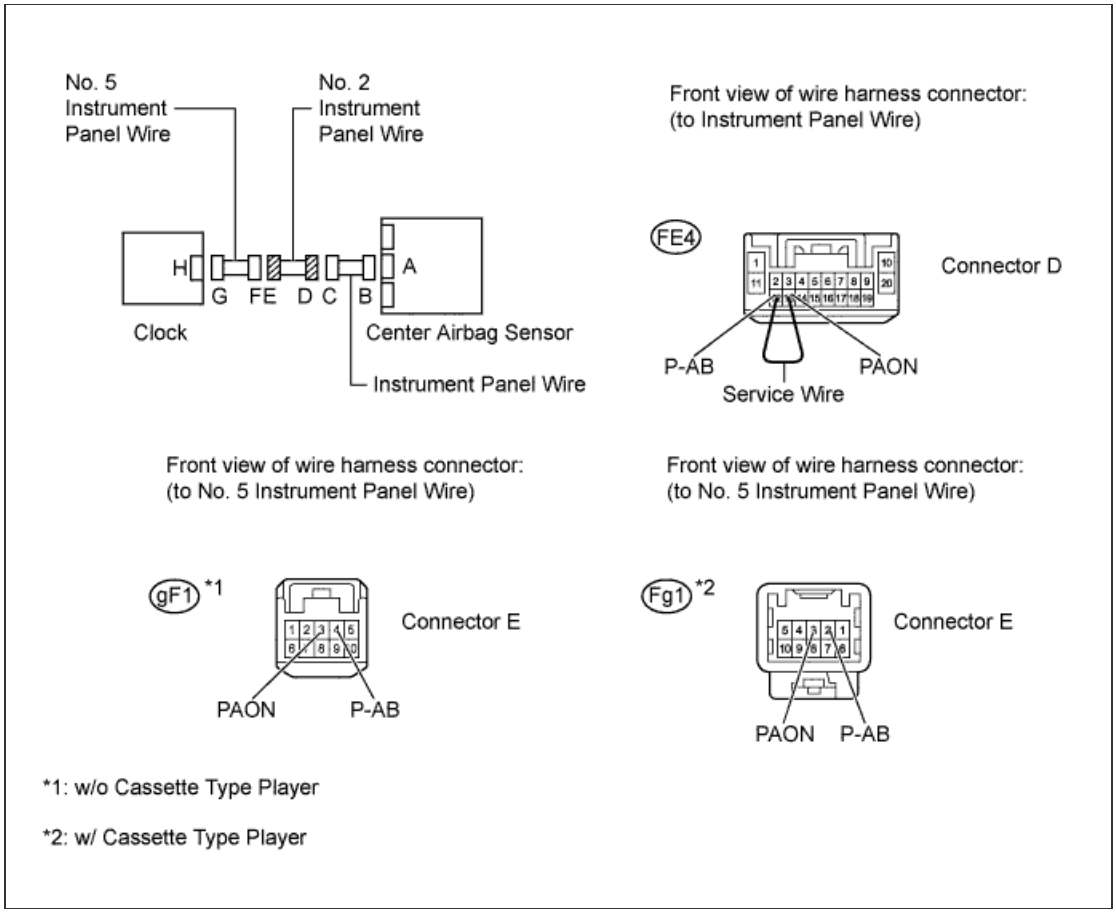

a. Disconnect the No. 2 instrument panel wire connector from the No. 5 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

w/o Cassette Type Player

Tester Connection	Switch Condition	Specified Condition
gF1-3 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
gF1-4 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

w/ Cassette Type Player

Tester Connection	Switch Condition	Specified Condition
Fg1-3 (PAON) - Body ground	Engine switch on (IG)	Below 1 V
Fg1-2 (P-AB) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Using a service wire, connect terminals 13 (PAON) and 12 (P-AB) of connector D.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/o Cassette Type Player

Tester Connection	Condition	Specified Condition
gF1-3 (PAON) - gF1-4 (P-AB)	Always	Below 1 Ω

w/ Cassette Type Player

Tester Connection	Condition	Specified Condition
Fg1-3 (PAON) - Fg1-2 (P-AB)	Always	Below 1 Ω

h. Disconnect the service wire from connector D.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

w/o Cassette Type Player

Tester Connection	Condition	Specified Condition
gF1-3 (PAON) - gF1-4 (P-AB)	Always	1 MΩ or higher
gF1-3 (PAON) - Body ground	Always	1 MΩ or higher
gF1-4 (P-AB) - Body ground	Always	1 MΩ or higher

w/ Cassette Type Player

Tester Connection	Condition	Specified Condition
Fg1-3 (PAON) - Fg1-2 (P-AB)	Always	1 MΩ or higher
Fg1-3 (PAON) - Body ground	Always	1 MΩ or higher
Fg1-2 (P-AB) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 INSTRUMENT PANEL WIRE

OK → REPLACE NO. 5 INSTRUMENT PANEL WIRE

DTC B1855/63 Short in Rear Side Squib LH Circuit

DTC B1856/63 Open in Rear Side Squib LH Circuit

DTC B1857/63 Short to GND in Rear Side Squib LH Circuit

DTC B1858/63 Short to B+ in Rear Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib LH circuit consists of the center airbag sensor and the rear seat side airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1855/63	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib LH circuit during the primary check. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1856/63	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib LH circuit for 2 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1857/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1858/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

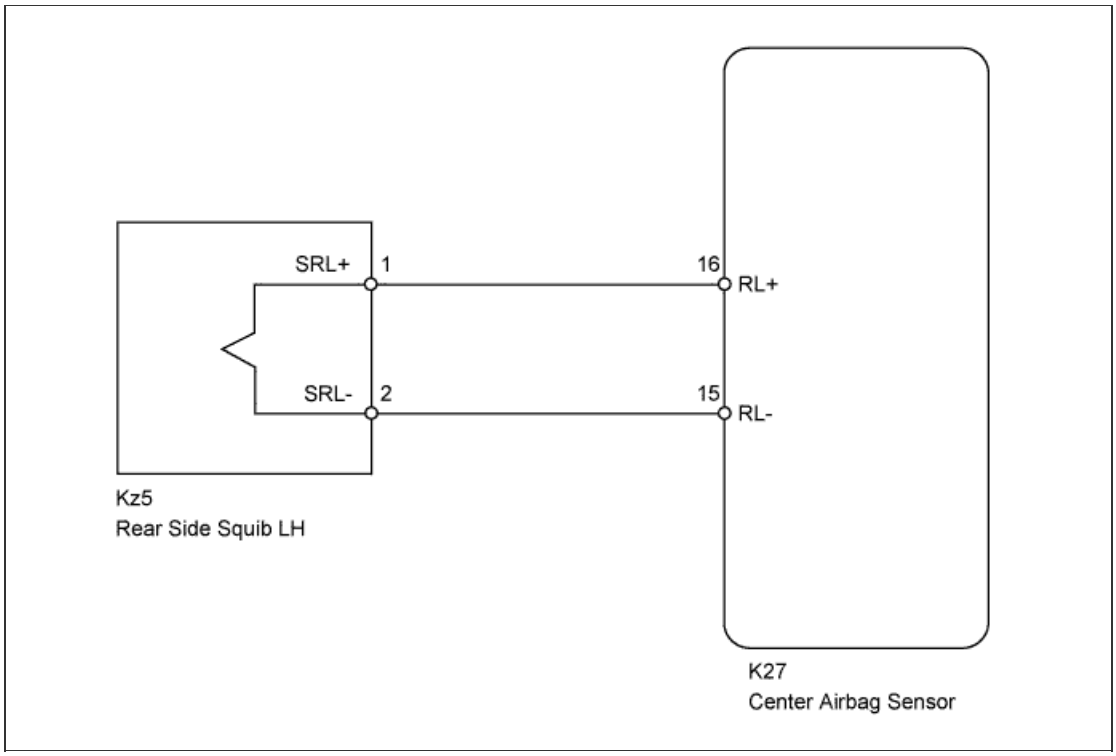

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG LH (REAR SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag LH (rear side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

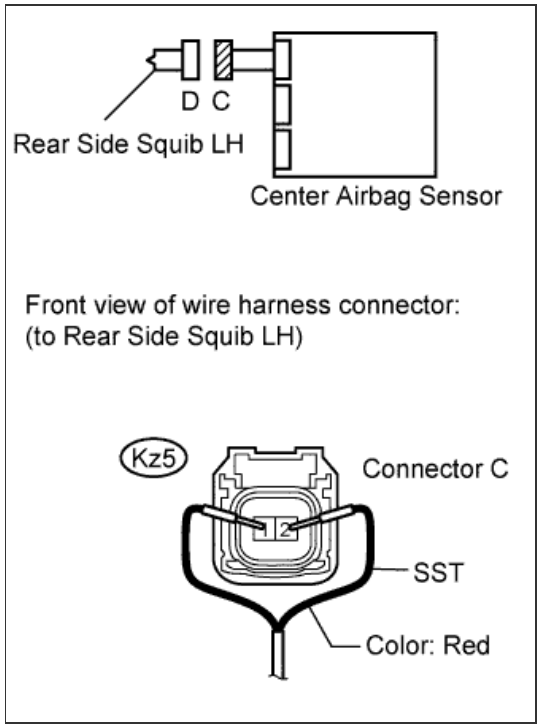

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (REAR SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

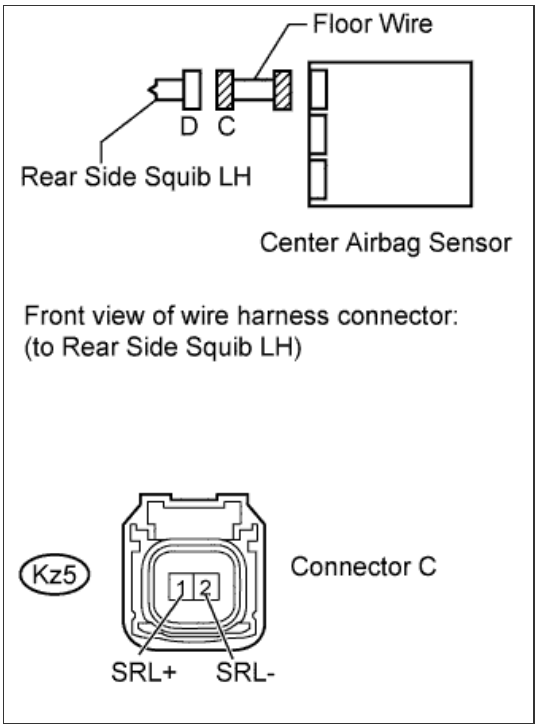

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz5-1 (SRL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz5-2 (SRL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	1 MΩ or higher
Kz5-1 (SRL+) - Body ground	Always	1 MΩ or higher
Kz5-2 (SRL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

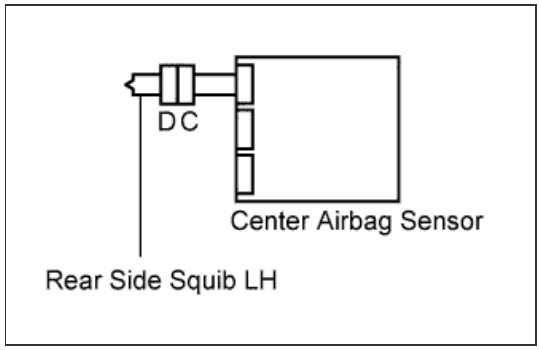

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1661/44 Roll Over Cut Off Indicator Malfunction


for Preparation Click here


DESCRIPTION

The curtain shield airbag cutoff switch is a mechanism that operates both the right and left sides of the curtain shield airbag and the front seat outer belt when the center airbag sensor detects a roll-over.
The RSCA OFF indicator is installed in the combination meter.
If the curtain shield airbag cutoff switch is operated, the indicator comes on to inform the drive that the roll-over detection system is not working.
The initial setting of the roll-over detection system is on. It automatically operates every time the engine switch is turned on (IG).

DTC Code	DTC Detection Condition	Trouble Area
B1661/44	When one of the following conditions is met: • The center airbag sensor receives an open signal or short to ground in the RSCA OFF indicator circuit. • An RSCA OFF indicator malfunction. • A center airbag sensor malfunction.	• Combination meter assembly • curtain shield airbag cutoff switch • Center airbag sensor assembly • Instrument panel wire • No. 3 instrument panel wire • Floor wire • No. 2 floor wire

WIRING DIAGRAM

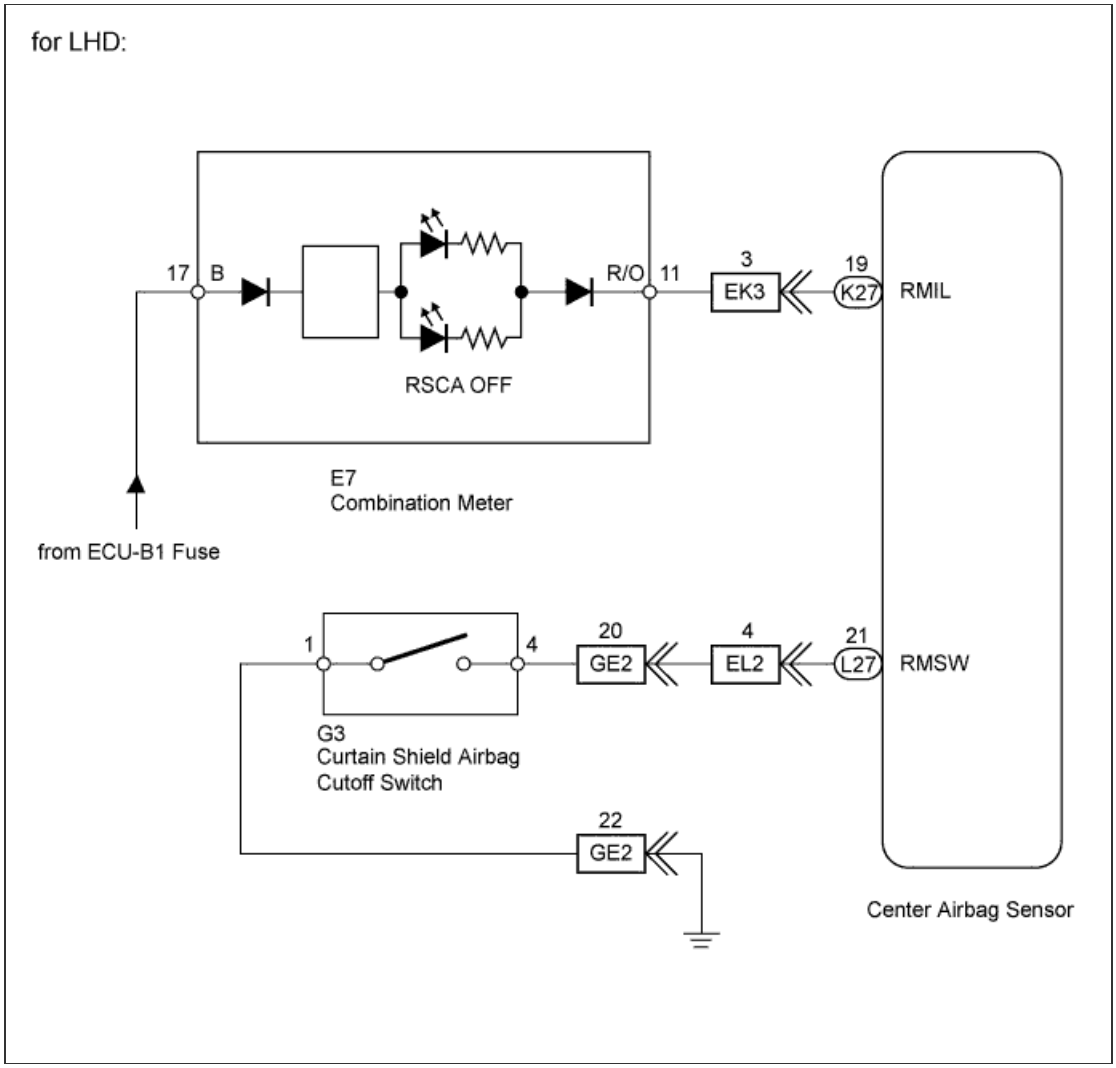

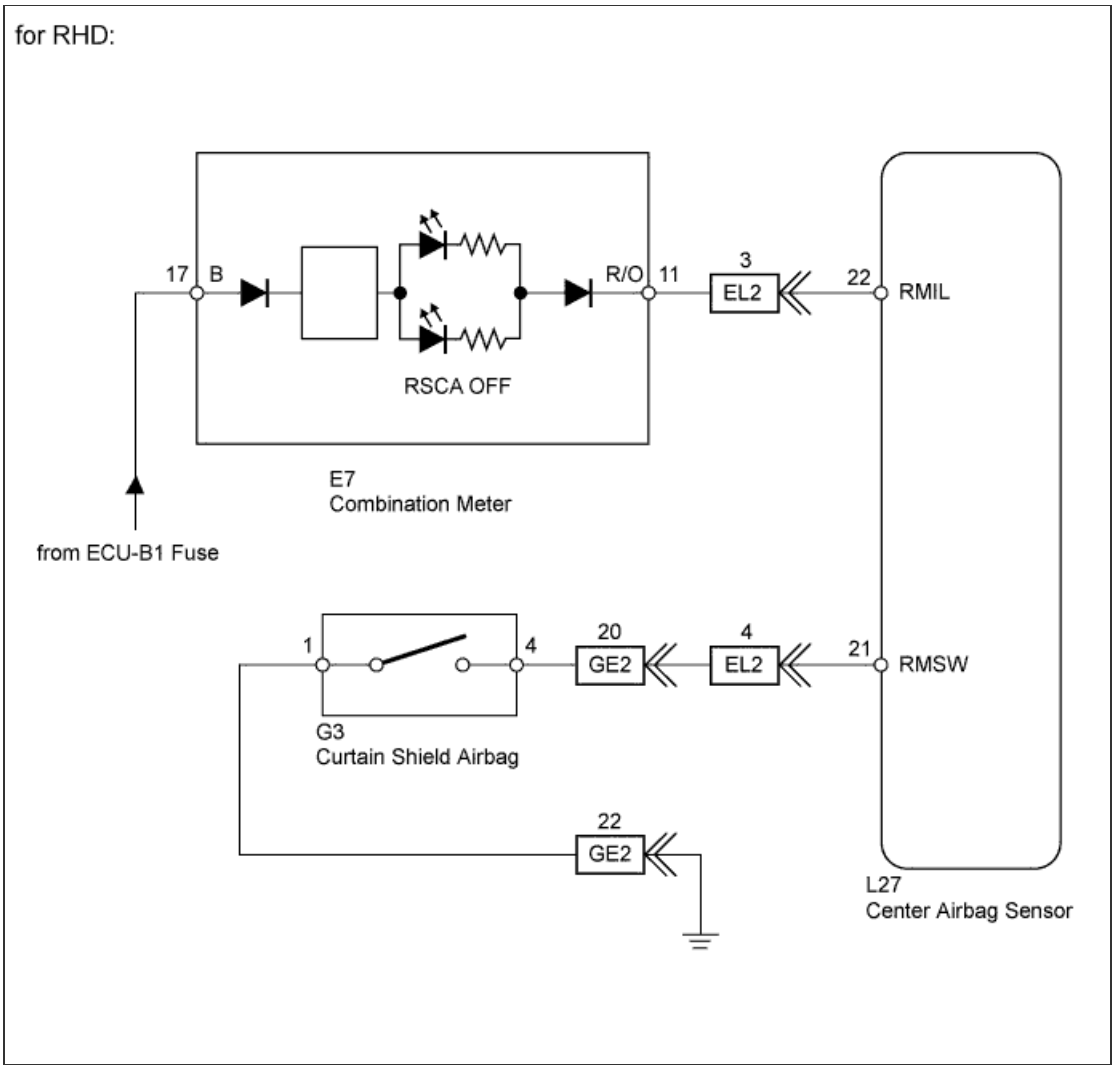

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK COMBINATION METER (SOURCE VOLTAGE)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Remove the combination meter with the connector connected.

d. Disconnect the connector from the center airbag sensor.


e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
-11 (R/O) - Body ground	ngine switch on (IG)	11 to 14 V


Component with harness connected:
(Combination Meter)

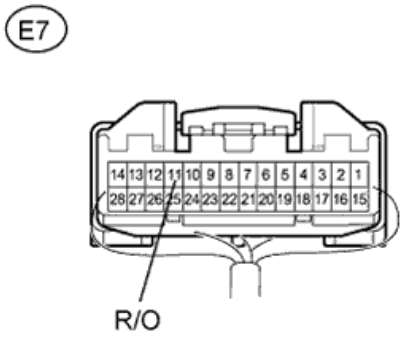

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK

2.CHECK RSCA OFF INDICATOR CIRCUIT

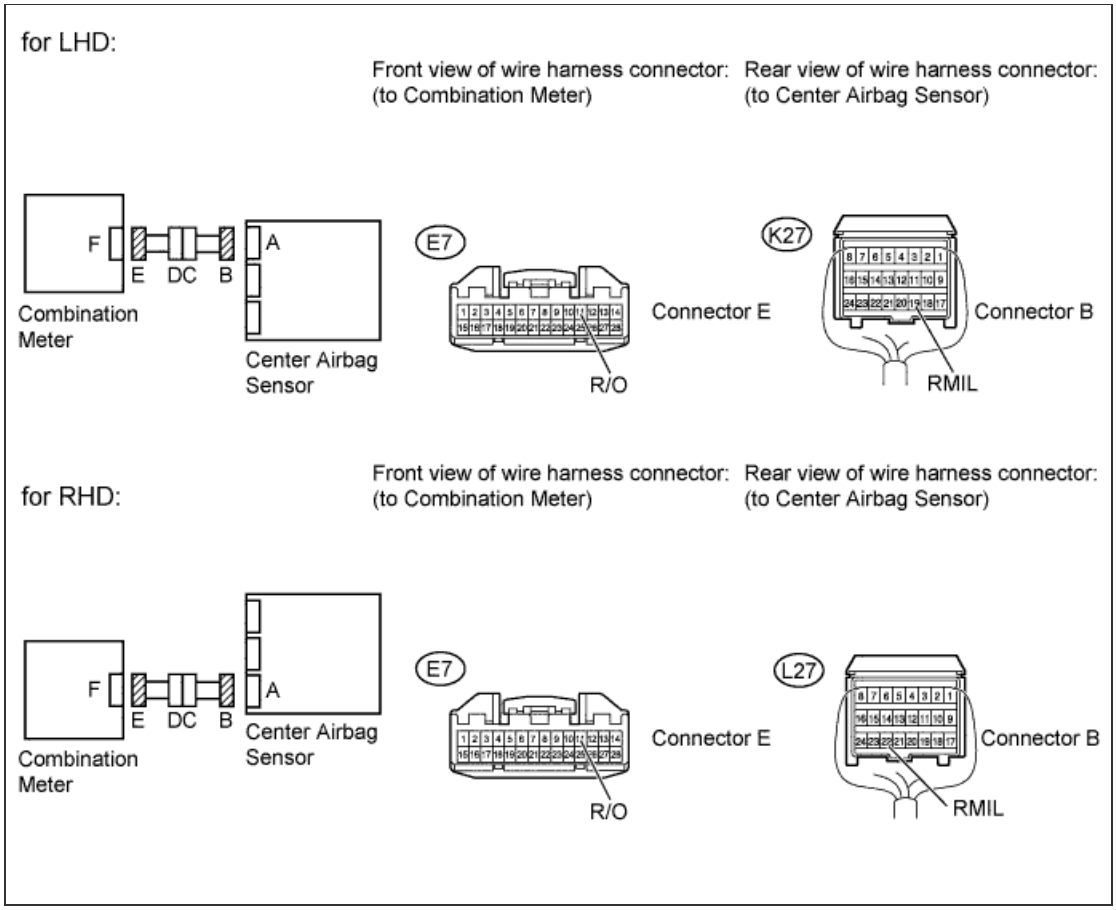

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the center airbag sensor and combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. easure the voltage according to the value(s) in the table below.

Standard Voltage:

for LHD

Tester Connection	Switch Condition	Specified Condition
-11 (R/O) - Body ground	ngine switch on (IG)	Below 1 V

for RHD

Tester Connection	Switch Condition	Specified Condition
-11 (R/O) - Body ground	ngine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

for LHD

Tester Connection	Condition	Specified Condition
-11 (R/O) - K27-19 (R IL)	Always	Below 1 Ω
-11 (R/O) - Body ground	Always	1 Ω or higher

for RHD

Tester Connection	Condition	Specified Condition
-11 (R/O) - L27-22(R IL)	Always	Below 1 Ω
-11 (R/O) - Body ground	Always	1 Ω or higher

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → Go to step 5

C → Go to step 6

A

3.INSPECT CURTAIN SHIELD AIRBAG CUTOFF SWITCH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


c. Remove the curtain shield airbag cutoff switch (Click here).

d. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
4 - 1	Curtain shield airbag cutoff switch is in on position	Below 1 Ω
4 - 1	Curtain shield airbag cutoff switch is in off position	1 Ω or higher


Component without harness connected:
(Curtain Shield Airbag Cutoff Switch)

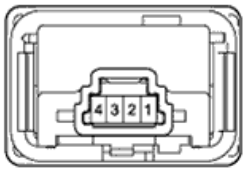

NG → REPLACE CURTAIN SHIELD AIRBAG CUTOFF SWITCH (Click here)

OK

4.CHECK CURTAIN SHIELD AIRBAG CUTOFF SWITCH CIRCUIT

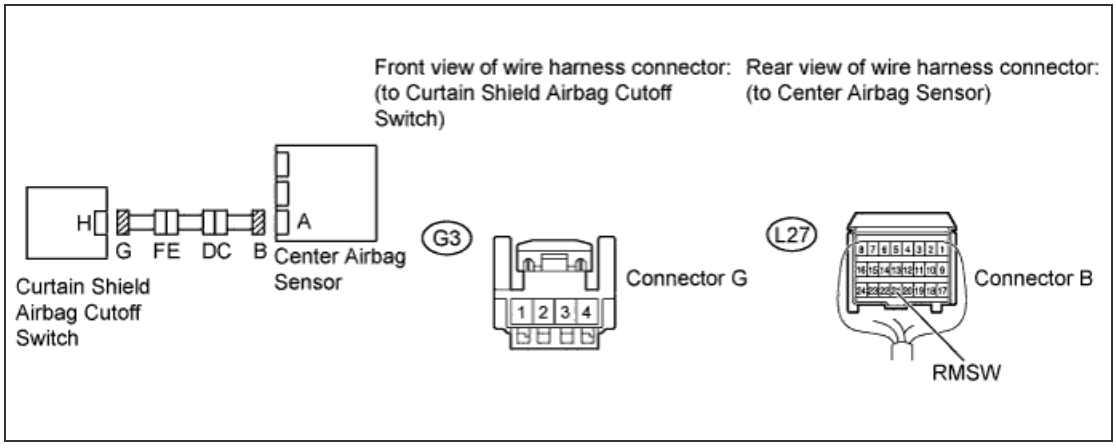

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the center airbag sensor and curtain shield airbag cutoff switch.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
G3-4 - Body ground	ngine switch on (IG)	Below 1 V
G3-1 - Body ground	ngine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L27-21 (R SW) - G3-4	Always	Below 1 Ω
G3-4 - Body ground	Always	1 Ω or higher
G3-1 - Body ground	Always	Below 1 Ω

NG → Go to step 7

OK

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

5.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE)

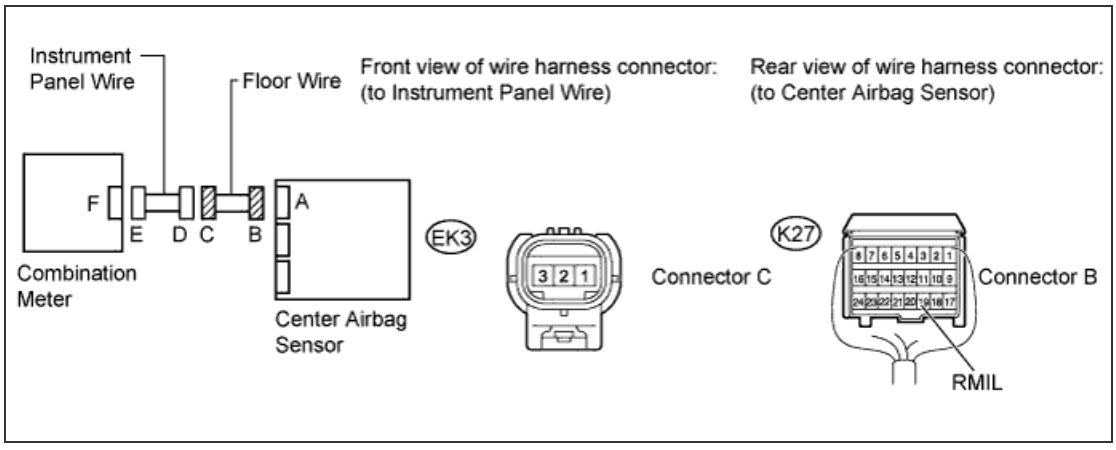

a. Disconnect the floor wire connector from the instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
-3 - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
-3 - K27-19 (R IL)	Always	Below 1 Ω
-3 - Body ground	Always	1 Ω or higher

NG → REPLACE FLOOR WIRE

OK →

REPLACE INSTRUMENT PANEL WIRE

6.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE)

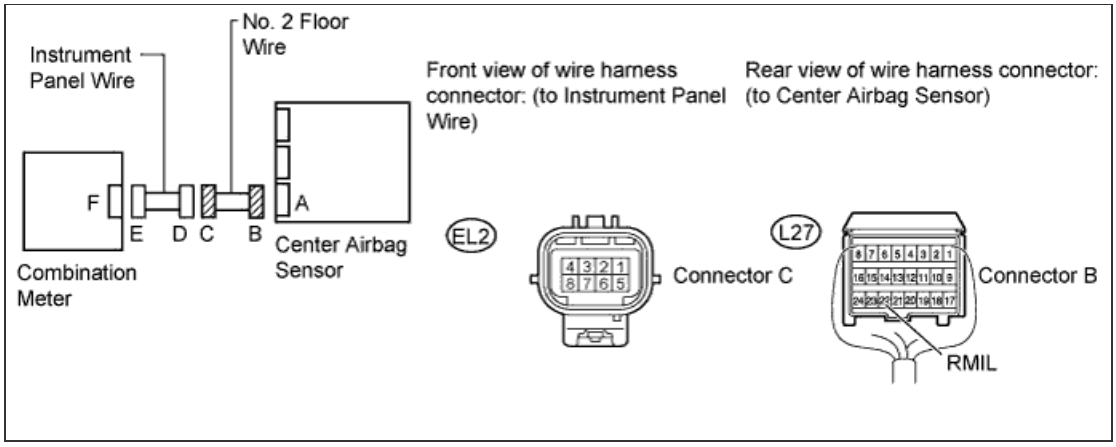

a. Disconnect the No. 2 floor wire connector from the instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
-3 - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
-3 - L27-22 (R IL)	Always	Below 1 Ω
-3 - Body ground	Always	1 Ω or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK →

REPLACE INSTRUMENT PANEL WIRE

7.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE)

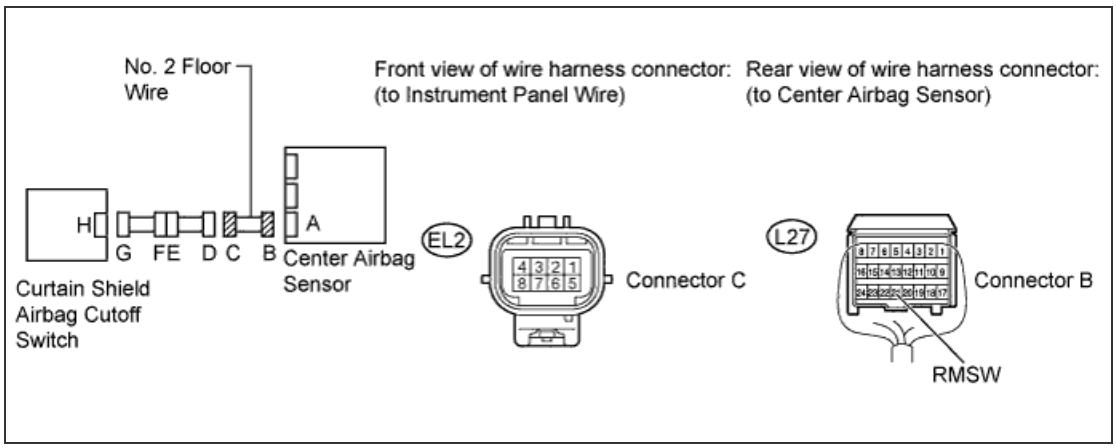

a. Disconnect the No. 2 floor wire connector from the instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
-4 - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
L27-21 (R SW) - -4	Always	Below 1 Ω
-4 - Body ground	Always	1 Ω or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

8.CHECK INSTRUMENT PANEL WIRE (NO. 2 FLOOR WIRE - NO. 3 INSTRUMENT PANEL WIRE AND BODY GROUND)

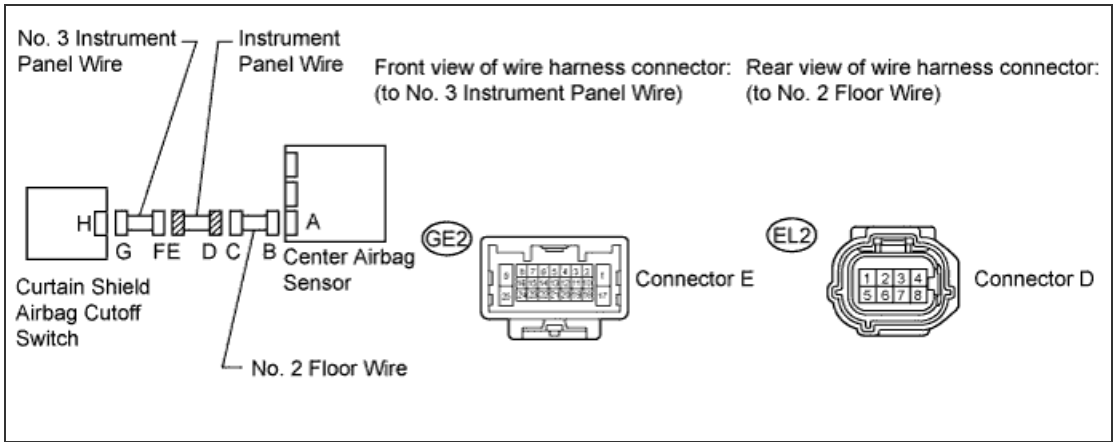

a. Disconnect the instrument panel wire connector from the No. 3 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG).

d. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
G -20 - Body ground	ngine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
-4 - G -20	Always	Below 1 Ω
G -20 - Body ground	Always	1 Ω or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE NO. 3 INSTRUMENT PANEL WIRE

DTC B1855/63 Short in Rear Side Squib LH Circuit

DTC B1856/63 Open in Rear Side Squib LH Circuit

DTC B1857/63 Short to GND in Rear Side Squib LH Circuit

DTC B1858/63 Short to B+ in Rear Side Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear side squib LH circuit consists of the center airbag sensor and the rear seat side airbag LH.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear side squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1855/63	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear side squib LH circuit during the primary check. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1856/63	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear side squib LH circuit for 2 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1857/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly
B1858/63	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear side squib LH circuit for 0.5 seconds. • A rear side squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat side airbag assembly LH (Rear side squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

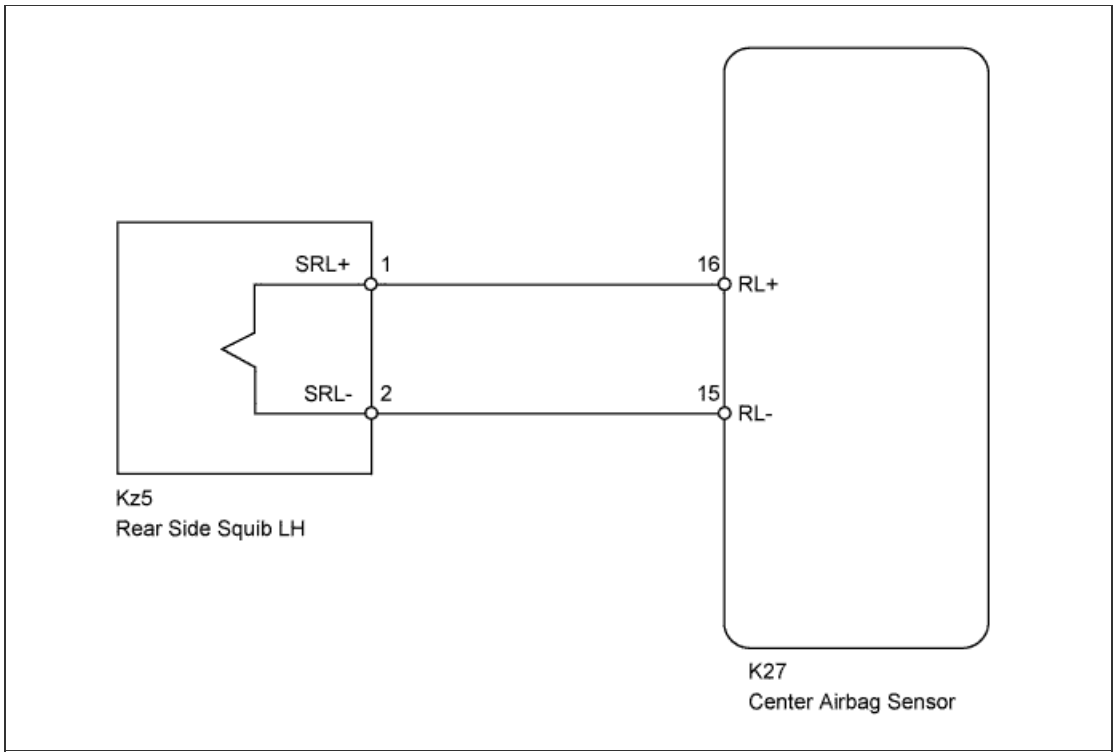

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT SIDE AIRBAG LH (REAR SIDE SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the rear seat side airbag LH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat side airbag LH (rear side squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

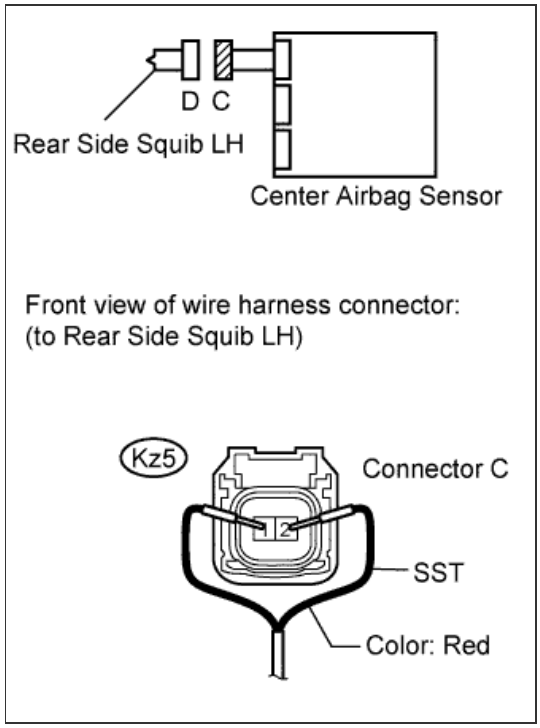

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

C → Go to step 2

A

REPLACE REAR NO. 1 SEAT ASSEMBLY LH (Click here)

2.CHECK FLOOR WIRE (REAR SIDE SQUIB LH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

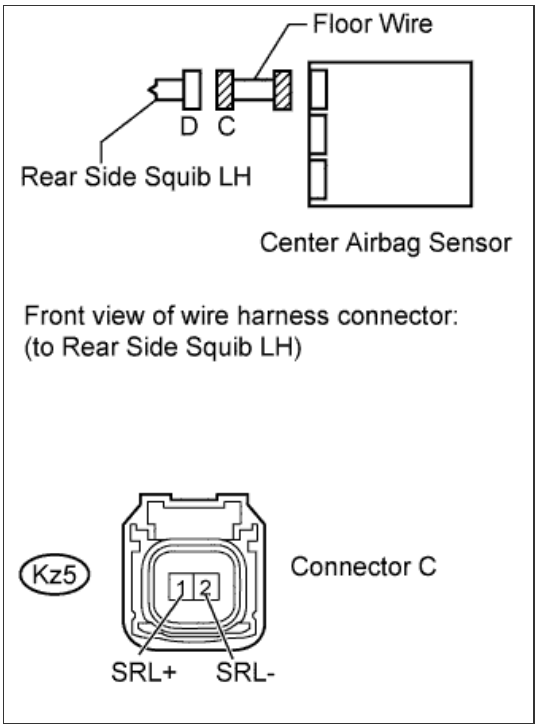

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Kz5-1 (SRL+) - Body ground	Engine switch on (IG)	Below 1 V
Kz5-2 (SRL-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Kz5-1 (SRL+) - Kz5-2 (SRL-)	Always	1 MΩ or higher
Kz5-1 (SRL+) - Body ground	Always	1 MΩ or higher
Kz5-2 (SRL-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat side airbag LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

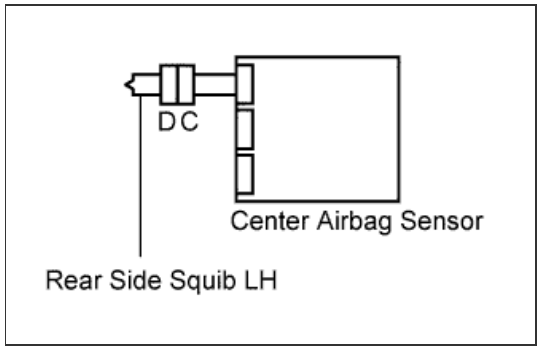

OK:

DTC B1855, B1856, B1857 or B1858 is not output.

HINT:

Codes other than DTC B1855, B1856, B1857 and B1858 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1661/44 Roll Over Cut Off Indicator Malfunction


for Preparation Click here


DESCRIPTION

The curtain shield airbag cutoff switch is a mechanism that operates both the right and left sides of the curtain shield airbag and the front seat outer belt when the center airbag sensor detects a roll-over.
The RSCA OFF indicator is installed in the combination meter.
If the curtain shield airbag cutoff switch is operated, the indicator comes on to inform the drive that the roll-over detection system is not working.
The initial setting of the roll-over detection system is on. It automatically operates every time the engine switch is turned on (IG).

DTC Code	DTC Detection Condition	Trouble Area
B1661/44	When one of the following conditions is met: • The center airbag sensor receives an open signal or short to ground in the RSCA OFF indicator circuit. • An RSCA OFF indicator malfunction. • A center airbag sensor malfunction.	• Combination meter assembly • curtain shield airbag cutoff switch • Center airbag sensor assembly • Instrument panel wire • No. 3 instrument panel wire • Floor wire • No. 2 floor wire

WIRING DIAGRAM

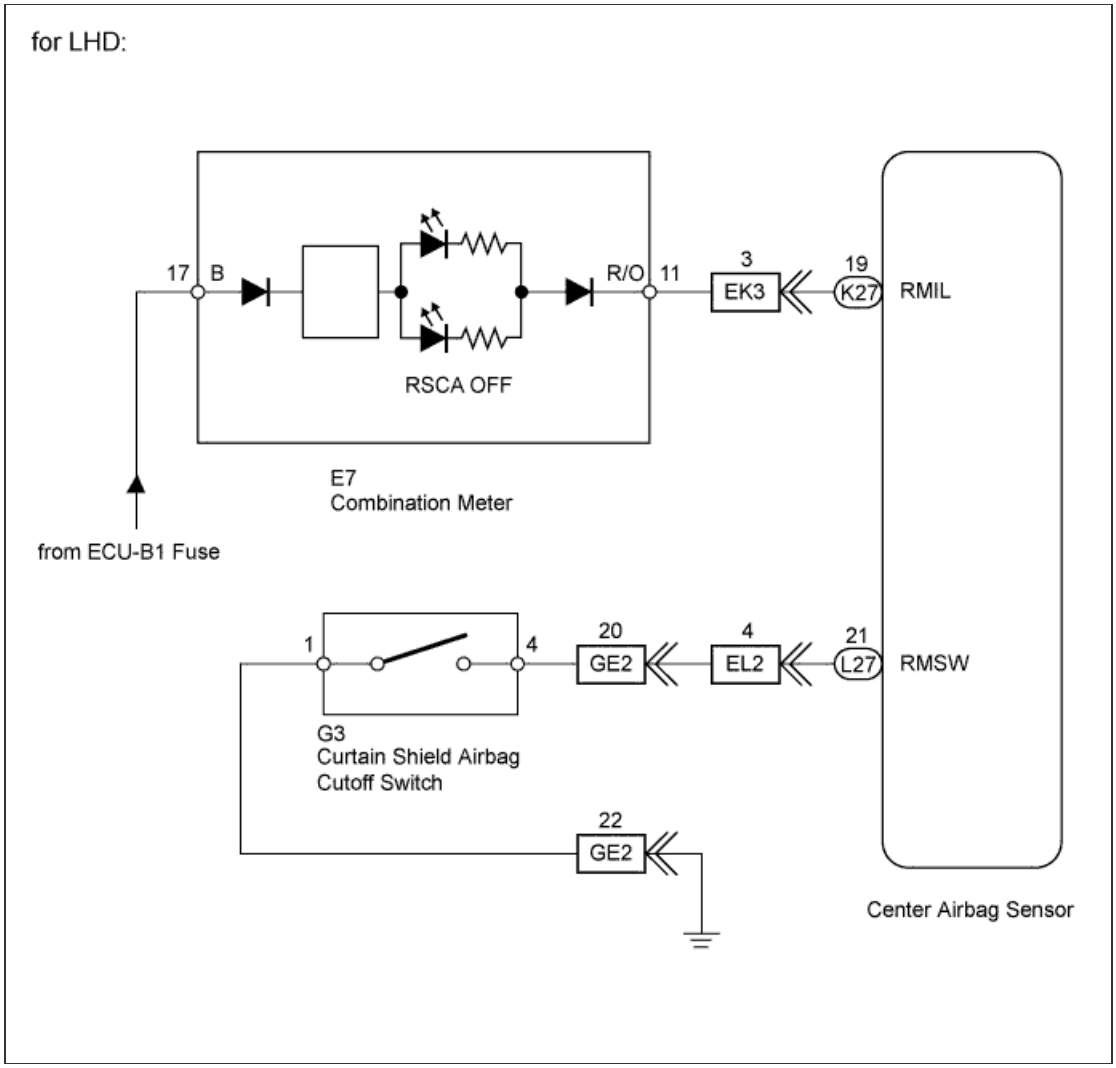

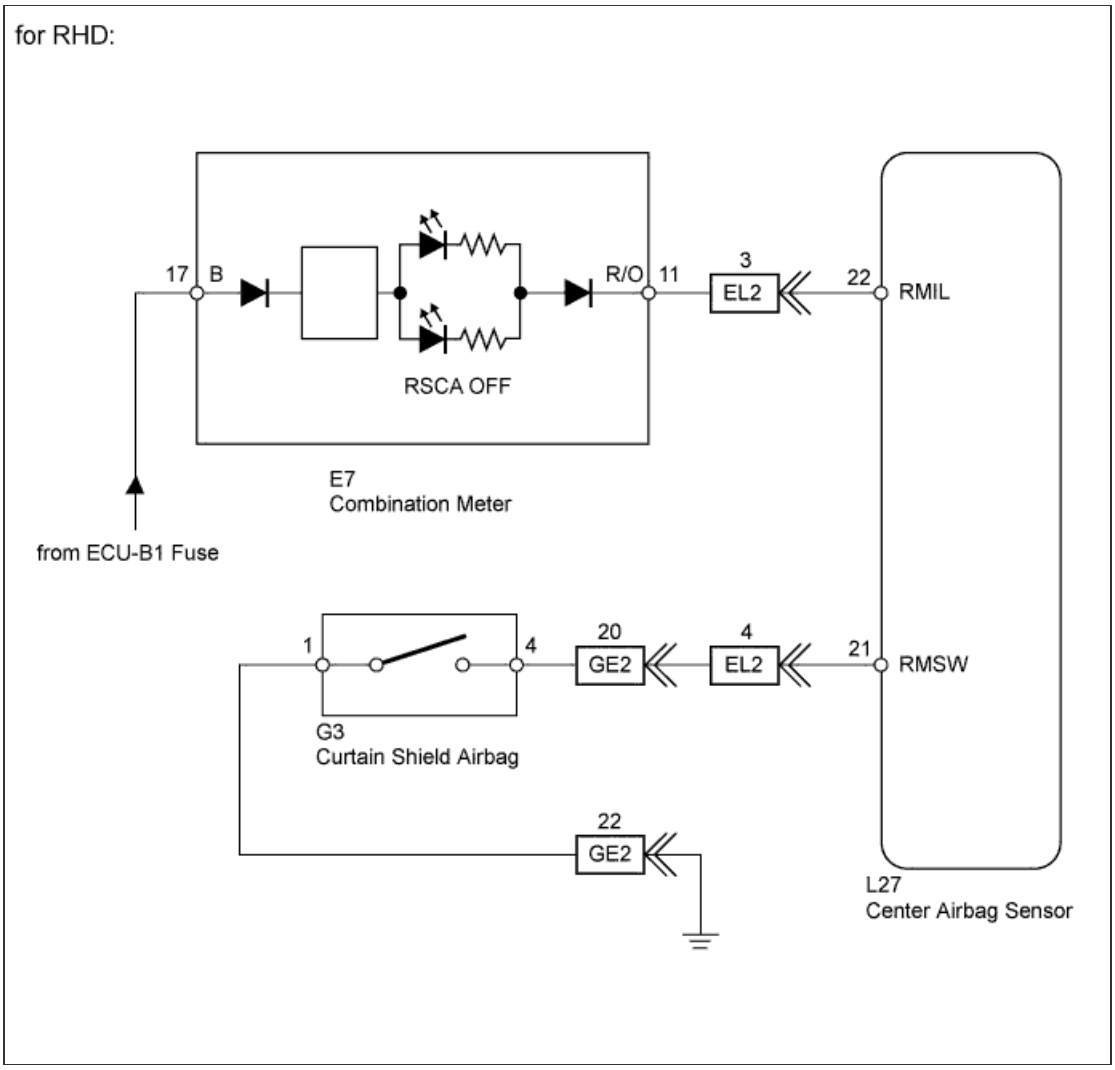

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK COMBINATION METER (SOURCE VOLTAGE)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Remove the combination meter with the connector connected.

d. Disconnect the connector from the center airbag sensor.


e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
-11 (R/O) - Body ground	ngine switch on (IG)	11 to 14 V


Component with harness connected:
(Combination Meter)

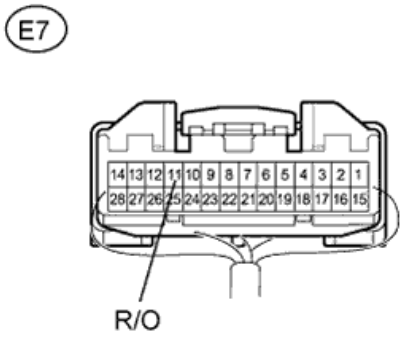

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK

2.CHECK RSCA OFF INDICATOR CIRCUIT

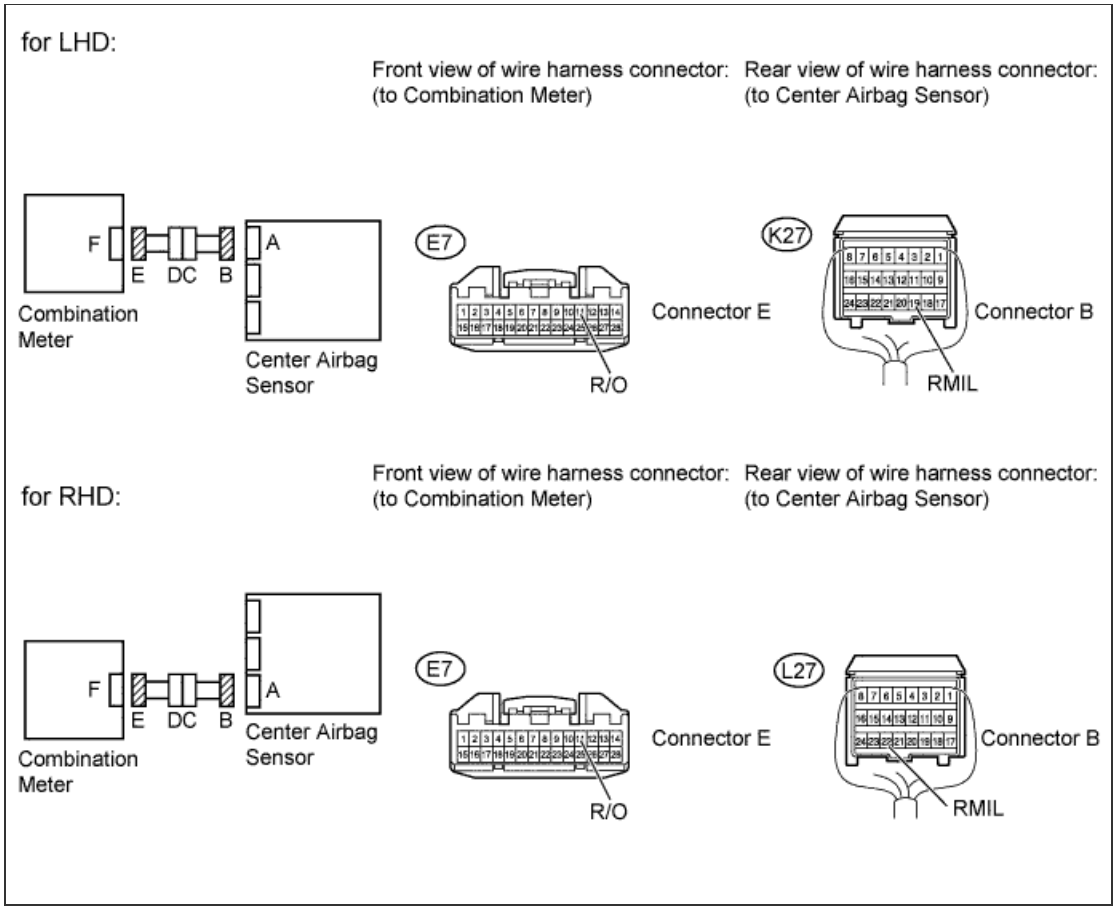

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the center airbag sensor and combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. easure the voltage according to the value(s) in the table below.

Standard Voltage:

for LHD

Tester Connection	Switch Condition	Specified Condition
-11 (R/O) - Body ground	ngine switch on (IG)	Below 1 V

for RHD

Tester Connection	Switch Condition	Specified Condition
-11 (R/O) - Body ground	ngine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:

for LHD

Tester Connection	Condition	Specified Condition
-11 (R/O) - K27-19 (R IL)	Always	Below 1 Ω
-11 (R/O) - Body ground	Always	1 Ω or higher

for RHD

Tester Connection	Condition	Specified Condition
-11 (R/O) - L27-22(R IL)	Always	Below 1 Ω
-11 (R/O) - Body ground	Always	1 Ω or higher

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → Go to step 5

C → Go to step 6

A

3.INSPECT CURTAIN SHIELD AIRBAG CUTOFF SWITCH

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


c. Remove the curtain shield airbag cutoff switch (Click here).

d. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
4 - 1	Curtain shield airbag cutoff switch is in on position	Below 1 Ω
4 - 1	Curtain shield airbag cutoff switch is in off position	1 Ω or higher


Component without harness connected:
(Curtain Shield Airbag Cutoff Switch)

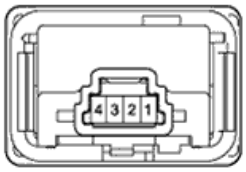

NG → REPLACE CURTAIN SHIELD AIRBAG CUTOFF SWITCH (Click here)

OK

4.CHECK CURTAIN SHIELD AIRBAG CUTOFF SWITCH CIRCUIT

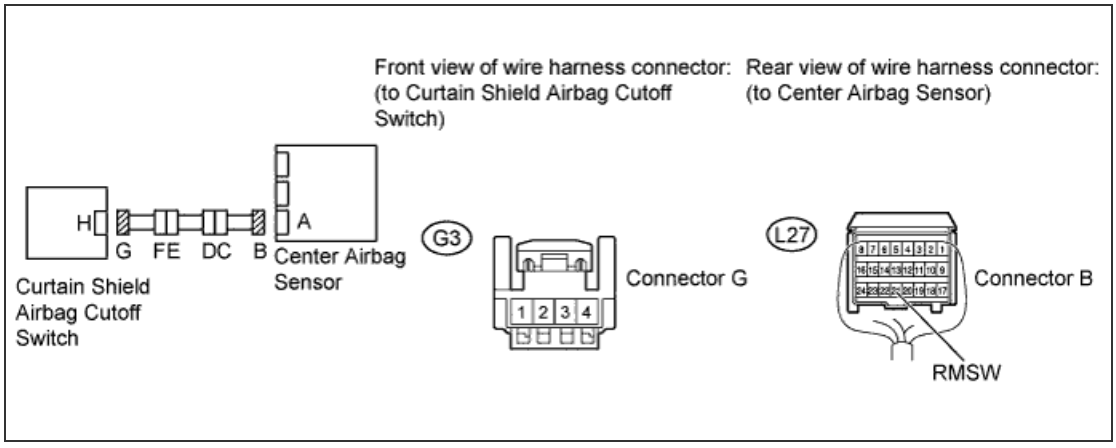

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the center airbag sensor and curtain shield airbag cutoff switch.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
G3-4 - Body ground	ngine switch on (IG)	Below 1 V
G3-1 - Body ground	ngine switch on (IG)	Below 1 V

f. Turn the engine switch off.

g. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

h. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L27-21 (R SW) - G3-4	Always	Below 1 Ω
G3-4 - Body ground	Always	1 Ω or higher
G3-1 - Body ground	Always	Below 1 Ω

NG → Go to step 7

OK

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

5.CHECK FLOOR WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE)

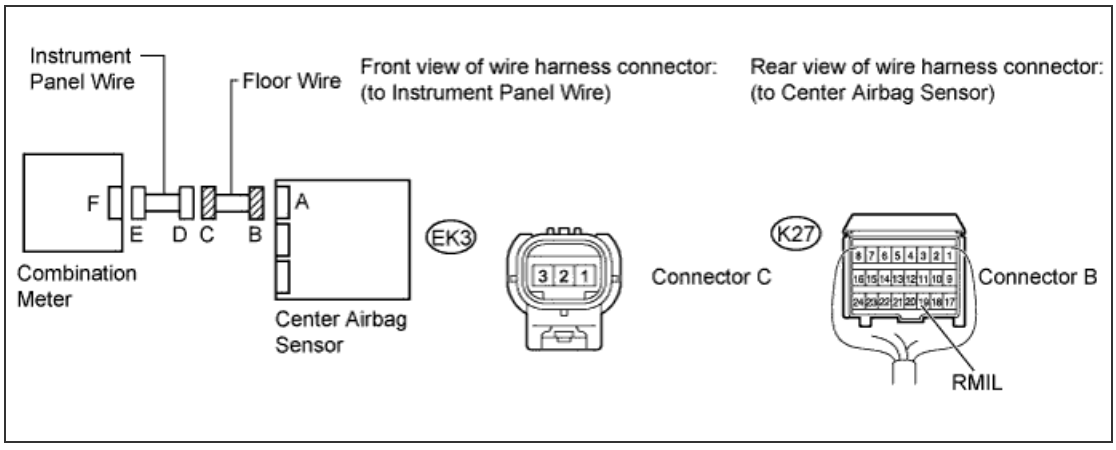

a. Disconnect the floor wire connector from the instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
-3 - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
-3 - K27-19 (R IL)	Always	Below 1 Ω
-3 - Body ground	Always	1 Ω or higher

NG → REPLACE FLOOR WIRE

OK →

REPLACE INSTRUMENT PANEL WIRE

6.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE)

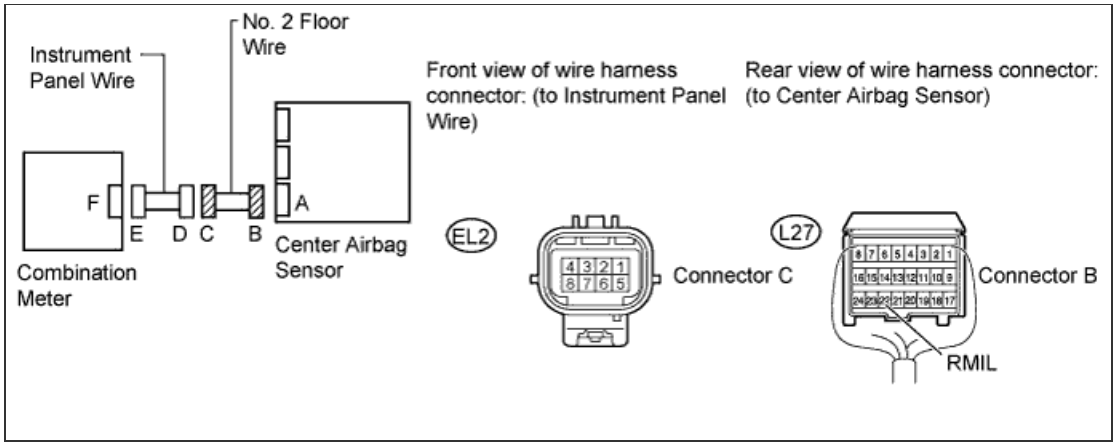

a. Disconnect the No. 2 floor wire connector from the instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
-3 - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
-3 - L27-22 (R IL)	Always	Below 1 Ω
-3 - Body ground	Always	1 Ω or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK →

REPLACE INSTRUMENT PANEL WIRE

7.CHECK NO. 2 FLOOR WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE)

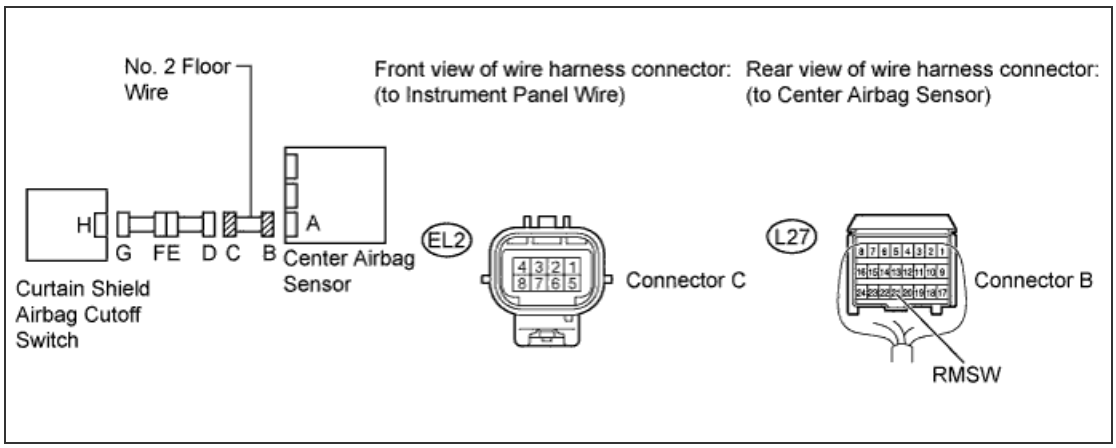

a. Disconnect the No. 2 floor wire connector from the instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
-4 - Body ground	ngine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. easure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
L27-21 (R SW) - -4	Always	Below 1 Ω
-4 - Body ground	Always	1 Ω or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

8.CHECK INSTRUMENT PANEL WIRE (NO. 2 FLOOR WIRE - NO. 3 INSTRUMENT PANEL WIRE AND BODY GROUND)

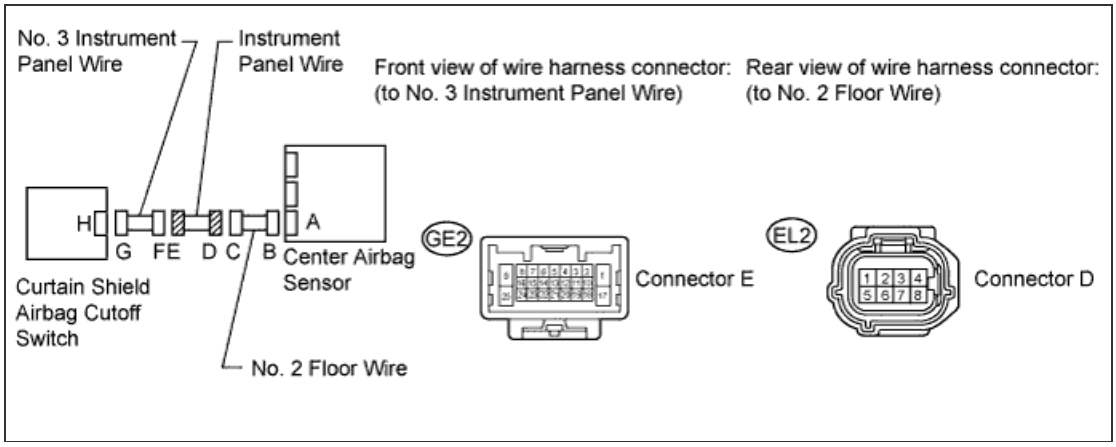

a. Disconnect the instrument panel wire connector from the No. 3 instrument panel wire.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG).

d. easure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
G -20 - Body ground	ngine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. easure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
-4 - G -20	Always	Below 1 Ω
G -20 - Body ground	Always	1 Ω or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE NO. 3 INSTRUMENT PANEL WIRE

DTC B1860/64 Short in Driver Side Knee Airbag Squib Circuit

DTC B1861/64 Open in Driver Side Knee Airbag Squib Circuit

DTC B1862/64 Short to GND in Driver Side Knee Airbag Squib Circuit

DTC B1863/64 Short to B+ in Driver Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side knee airbag squib circuit consists of the center airbag sensor and the driver side knee airbag.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1860/64	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side knee airbag squib circuit during the primary check. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1861/64	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side knee airbag squib circuit for 2 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1862/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to ground signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1863/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to B+ signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

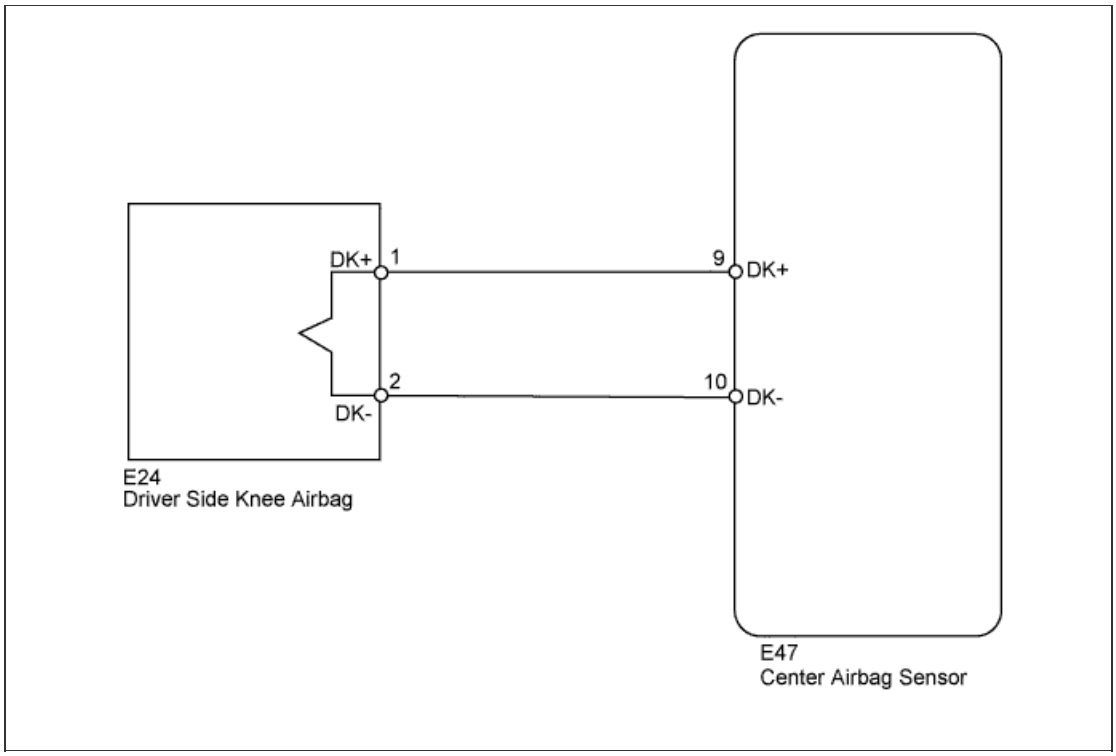

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK DRIVER SIDE KNEE AIRBAG (DRIVER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the driver side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the driver side knee airbag (driver side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

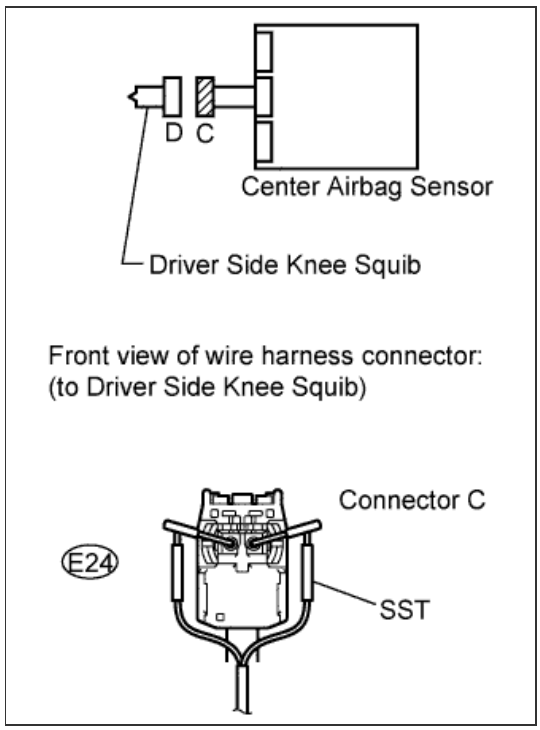

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE DRIVER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the driver side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (DRIVER SIDE KNEE AIRBAG CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E24-1 (DK+) - Body ground	Engine switch on (IG)	Below 1 V
E24-2 (DK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	1 MΩ or higher
E24-1 (DK+) - Body ground	Always	1 MΩ or higher
E24-2 (DK-) - Body	Always	1 MΩ or higher

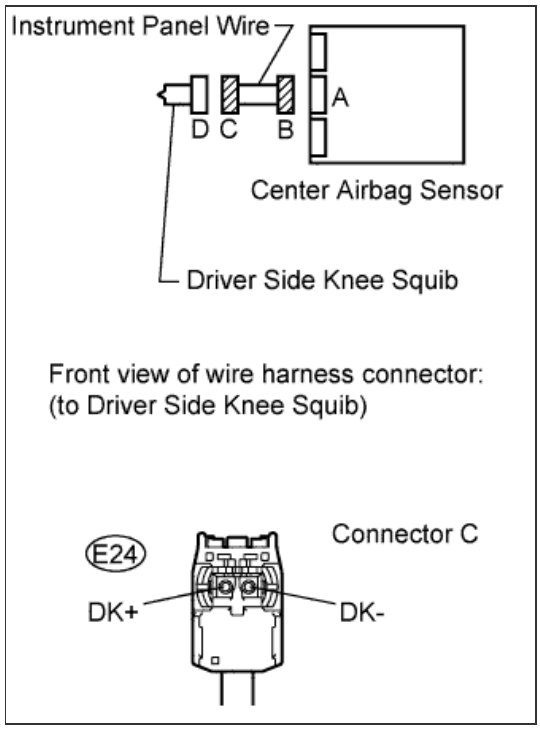

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the driver side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

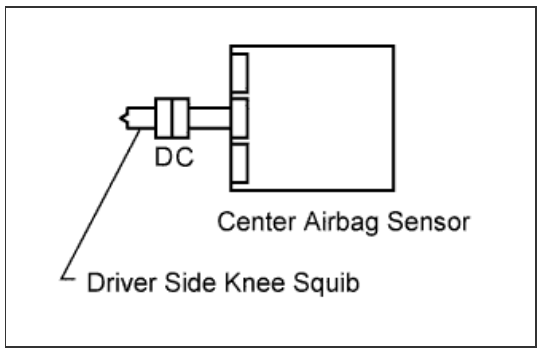

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1662/45 Indicator Light Circuit Malfunction


for Preparation Click here

DESCRIPTION

The indicator light circuit consists of the center airbag sensor and the combination meter.
When the center airbag sensor detects a malfunction in the SRS airbag system, the SRS warning light comes on to inform the driver. It also comes on when the source voltage drops, and automatically goes off in approximately 10 seconds after the source voltage returns to normal (DTC is not stored).
The SRS warning light comes on for 6 seconds after the engine switch is turned on (IG) and goes off if the system is normal.
When an open circuit is detected, such as when the connector between the combination meter and the center airbag sensor is disconnected, the SRS warning light remains on even when approximately 6 seconds elapsed after the engine switch is turned on (IG).
DTC B1662/45 is stored when a malfunction is detected in the indicator light circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1662/45	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal, a short to ground signal or a short circuit to ground signal or a short circuit to B+ signal in the indicator light circuit for 2 seconds. • A combination meter malfunction. • A center airbag sensor malfunction.	• Combination meter assembly (SRS warning light) • Center airbag sensor assembly • Instrument panel wire

WIRING DIAGRAM

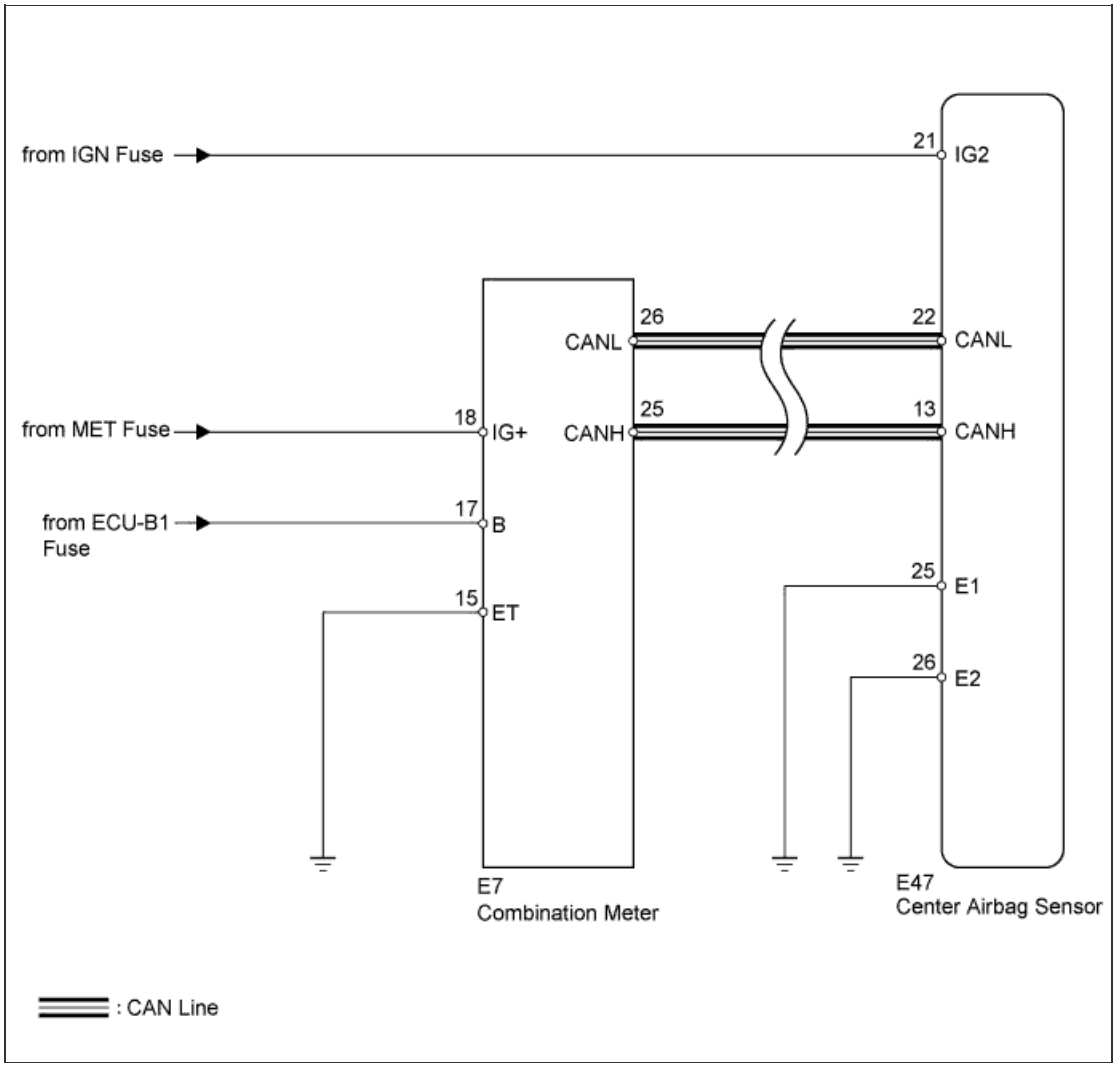

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CAN COMMUNICATION SYSTEM

a. Check if a CA communication DTC is output.

Result

Result	Proceed to
DTC is not output	A
DTC is output (for D)	B
DTC is output (for RHD)	C

B → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

C → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

A

2.CHECK BATTERY

a. Measure the voltage of the battery.

Standard Voltage:
11 to 14 V

NG → CHECK AND REPLACE BATTERY OR CHARGING SYSTEM

OK

3.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and combination meter.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF CENTER AIRBAG SENSOR)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG).


d. Operate all the components of the electrical system (defogger, wipers, headlights, heater blower, etc.).

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E47-21 (IG2) - E47-25 (E1)	Engine switch on (IG)	11 to 14 V
E47-21 (IG2) - E47-26 (E2)	Engine switch on (IG)	11 to 14 V

Rear view of wire harness connector:
(to Center Airbag Sensor)

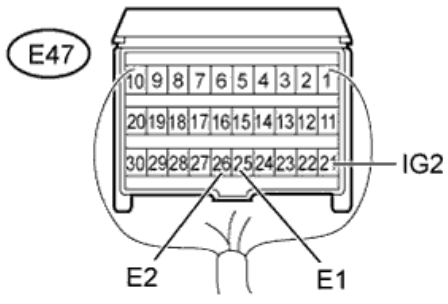

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF COMBINATION METER)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


c. Disconnect the E7 connector from the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E7-18 (IG+) - E7-15 (ET)	Engine switch on (IG)	11 to 14 V

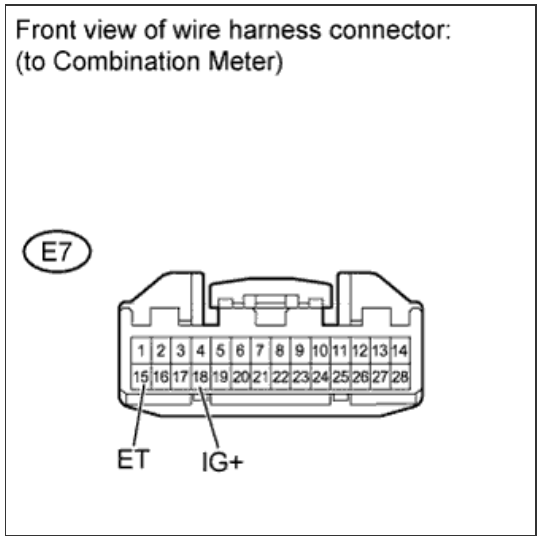

NG → REPLACE HARNESS AND CONNECTOR

OK

6.CHECK SRS WARNING LIGHT (SHORT TO GROUND)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connector to the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG).

f. Check the SRS warning light condition.

OK:

After the primary check period, SRS warning light goes off for approximately 10 seconds and then remains on.

HINT:

The primary check period is approximately 6 seconds after the engine switch is turned on (IG).

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

DTC B1860/64 Short in Driver Side Knee Airbag Squib Circuit

DTC B1861/64 Open in Driver Side Knee Airbag Squib Circuit

DTC B1862/64 Short to GND in Driver Side Knee Airbag Squib Circuit

DTC B1863/64 Short to B+ in Driver Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side knee airbag squib circuit consists of the center airbag sensor and the driver side knee airbag.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1860/64	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side knee airbag squib circuit during the primary check. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1861/64	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side knee airbag squib circuit for 2 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1862/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to ground signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1863/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to B+ signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

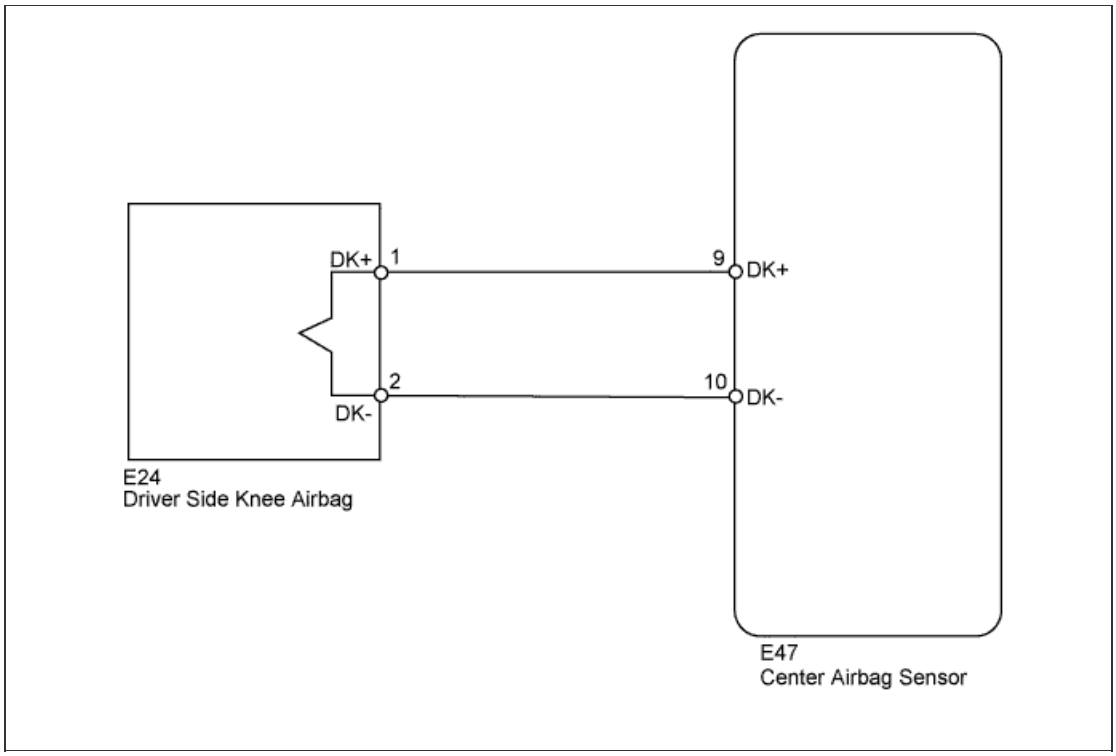

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK DRIVER SIDE KNEE AIRBAG (DRIVER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the driver side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the driver side knee airbag (driver side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

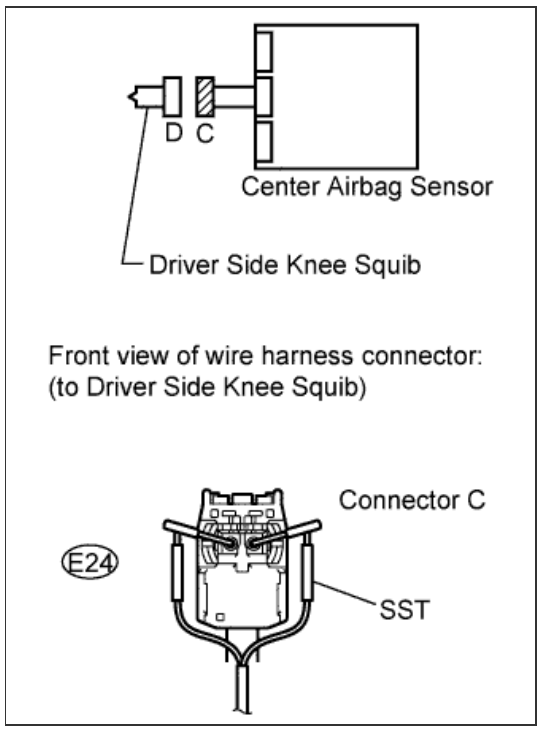

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE DRIVER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the driver side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (DRIVER SIDE KNEE AIRBAG CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E24-1 (DK+) - Body ground	Engine switch on (IG)	Below 1 V
E24-2 (DK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	1 MΩ or higher
E24-1 (DK+) - Body ground	Always	1 MΩ or higher
E24-2 (DK-) - Body	Always	1 MΩ or higher

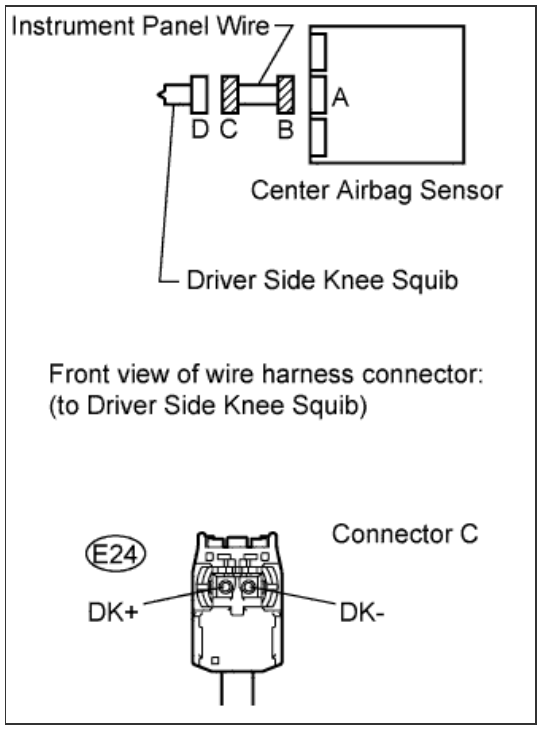

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the driver side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

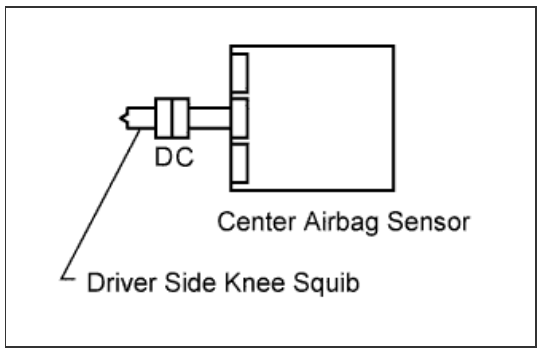

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1662/45 Indicator Light Circuit Malfunction


for Preparation Click here

DESCRIPTION

The indicator light circuit consists of the center airbag sensor and the combination meter.
When the center airbag sensor detects a malfunction in the SRS airbag system, the SRS warning light comes on to inform the driver. It also comes on when the source voltage drops, and automatically goes off in approximately 10 seconds after the source voltage returns to normal (DTC is not stored).
The SRS warning light comes on for 6 seconds after the engine switch is turned on (IG) and goes off if the system is normal.
When an open circuit is detected, such as when the connector between the combination meter and the center airbag sensor is disconnected, the SRS warning light remains on even when approximately 6 seconds elapsed after the engine switch is turned on (IG).
DTC B1662/45 is stored when a malfunction is detected in the indicator light circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1662/45	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal, a short to ground signal or a short circuit to ground signal or a short circuit to B+ signal in the indicator light circuit for 2 seconds. • A combination meter malfunction. • A center airbag sensor malfunction.	• Combination meter assembly (SRS warning light) • Center airbag sensor assembly • Instrument panel wire

WIRING DIAGRAM

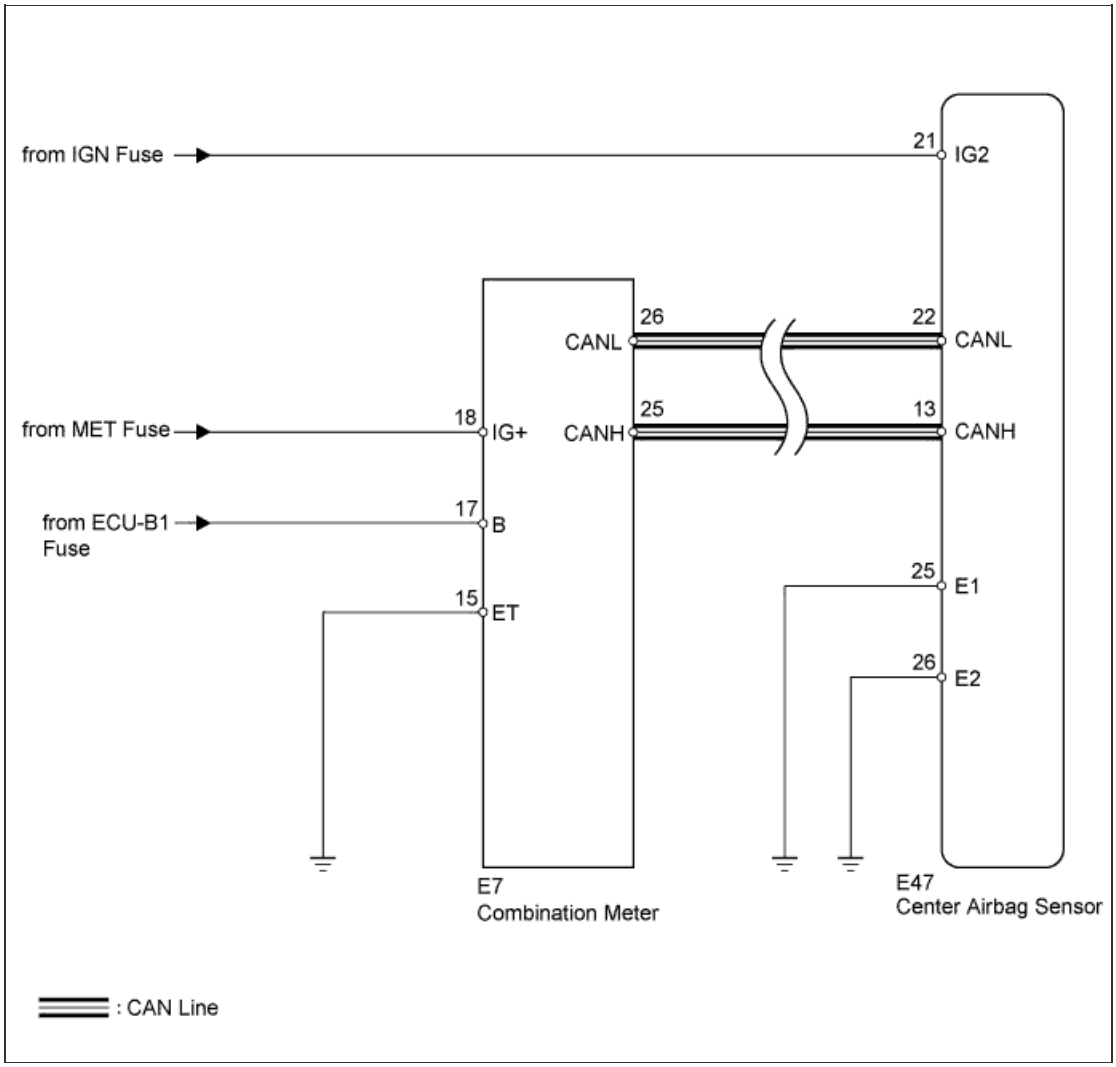

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CAN COMMUNICATION SYSTEM

a. Check if a CA communication DTC is output.

Result

Result	Proceed to
DTC is not output	A
DTC is output (for D)	B
DTC is output (for RHD)	C

B → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

C → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

A

2.CHECK BATTERY

a. Measure the voltage of the battery.

Standard Voltage:
11 to 14 V

NG → CHECK AND REPLACE BATTERY OR CHARGING SYSTEM

OK

3.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and combination meter.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF CENTER AIRBAG SENSOR)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG).


d. Operate all the components of the electrical system (defogger, wipers, headlights, heater blower, etc.).

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E47-21 (IG2) - E47-25 (E1)	Engine switch on (IG)	11 to 14 V
E47-21 (IG2) - E47-26 (E2)	Engine switch on (IG)	11 to 14 V

Rear view of wire harness connector:
(to Center Airbag Sensor)

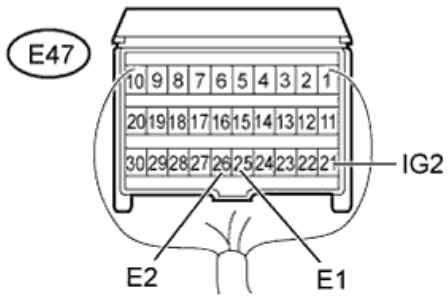

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF COMBINATION METER)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


c. Disconnect the E7 connector from the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E7-18 (IG+) - E7-15 (ET)	Engine switch on (IG)	11 to 14 V

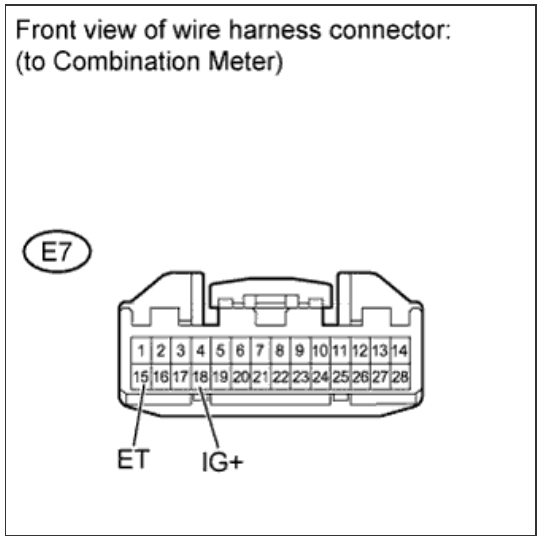

NG → REPLACE HARNESS AND CONNECTOR

OK

6.CHECK SRS WARNING LIGHT (SHORT TO GROUND)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connector to the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG).

f. Check the SRS warning light condition.

OK:

After the primary check period, SRS warning light goes off for approximately 10 seconds and then remains on.

HINT:

The primary check period is approximately 6 seconds after the engine switch is turned on (IG).

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

DTC B1860/64 Short in Driver Side Knee Airbag Squib Circuit

DTC B1861/64 Open in Driver Side Knee Airbag Squib Circuit

DTC B1862/64 Short to GND in Driver Side Knee Airbag Squib Circuit

DTC B1863/64 Short to B+ in Driver Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side knee airbag squib circuit consists of the center airbag sensor and the driver side knee airbag.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1860/64	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side knee airbag squib circuit during the primary check. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1861/64	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side knee airbag squib circuit for 2 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1862/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to ground signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1863/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to B+ signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

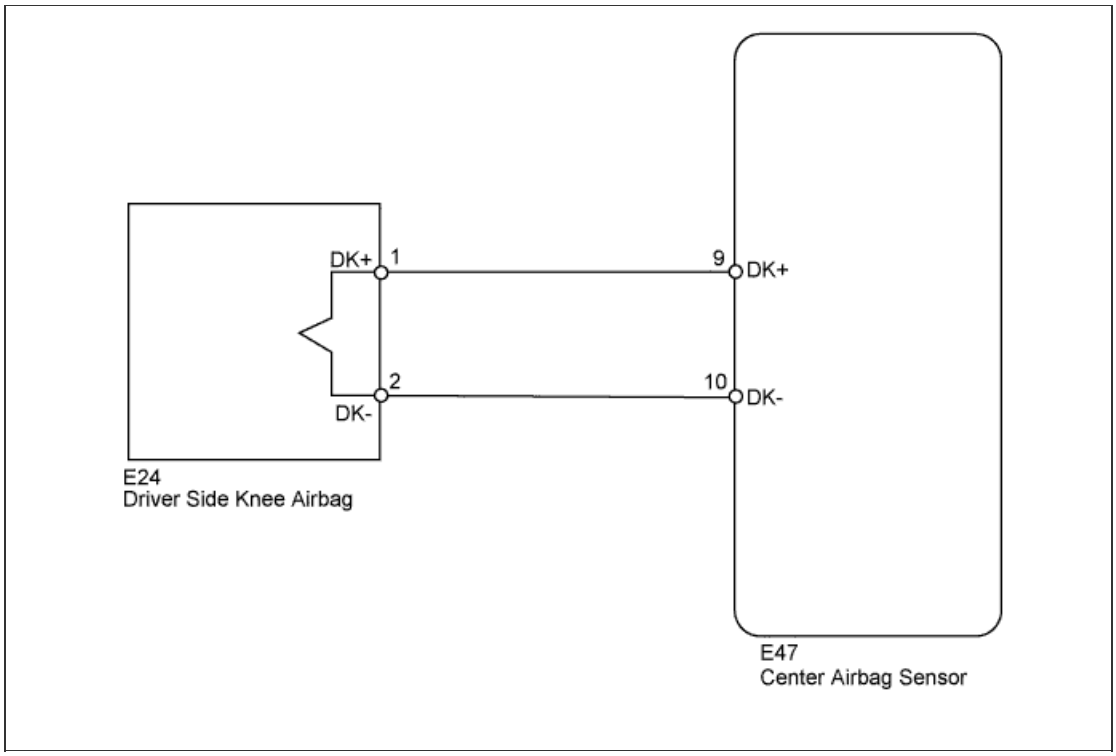

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK DRIVER SIDE KNEE AIRBAG (DRIVER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the driver side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the driver side knee airbag (driver side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

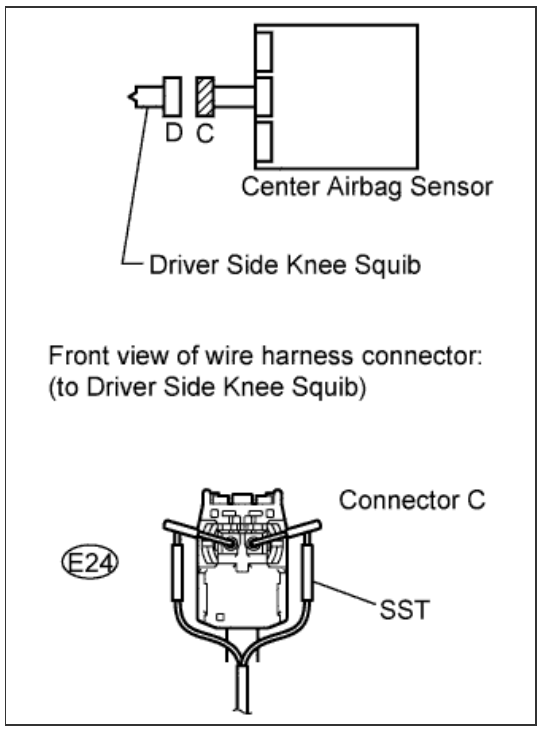

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE DRIVER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the driver side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (DRIVER SIDE KNEE AIRBAG CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E24-1 (DK+) - Body ground	Engine switch on (IG)	Below 1 V
E24-2 (DK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	1 MΩ or higher
E24-1 (DK+) - Body ground	Always	1 MΩ or higher
E24-2 (DK-) - Body	Always	1 MΩ or higher

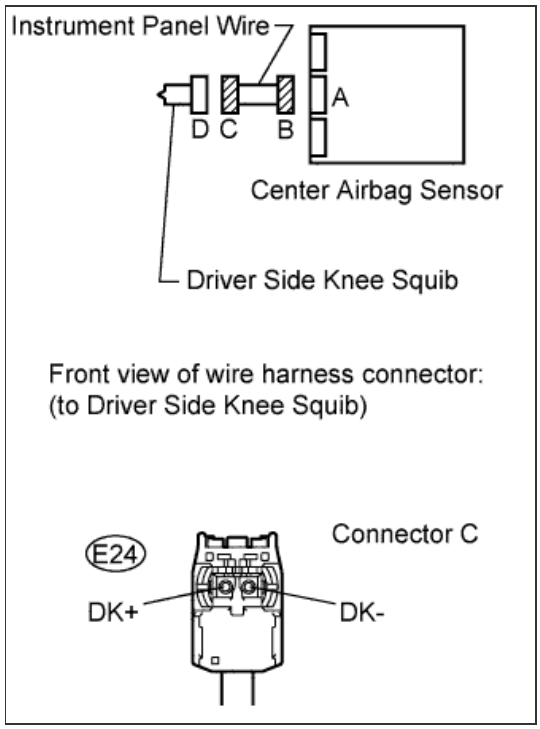

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the driver side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

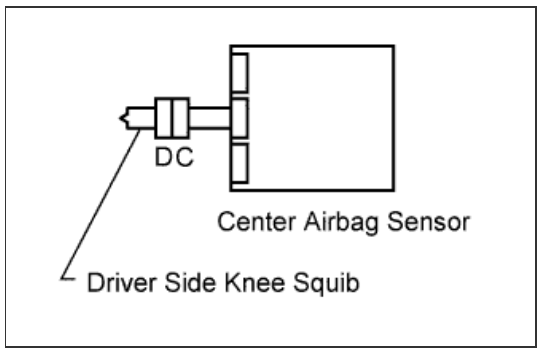

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1662/45 Indicator Light Circuit Malfunction


for Preparation Click here

DESCRIPTION

The indicator light circuit consists of the center airbag sensor and the combination meter.
When the center airbag sensor detects a malfunction in the SRS airbag system, the SRS warning light comes on to inform the driver. It also comes on when the source voltage drops, and automatically goes off in approximately 10 seconds after the source voltage returns to normal (DTC is not stored).
The SRS warning light comes on for 6 seconds after the engine switch is turned on (IG) and goes off if the system is normal.
When an open circuit is detected, such as when the connector between the combination meter and the center airbag sensor is disconnected, the SRS warning light remains on even when approximately 6 seconds elapsed after the engine switch is turned on (IG).
DTC B1662/45 is stored when a malfunction is detected in the indicator light circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1662/45	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal, a short to ground signal or a short circuit to ground signal or a short circuit to B+ signal in the indicator light circuit for 2 seconds. • A combination meter malfunction. • A center airbag sensor malfunction.	• Combination meter assembly (SRS warning light) • Center airbag sensor assembly • Instrument panel wire

WIRING DIAGRAM

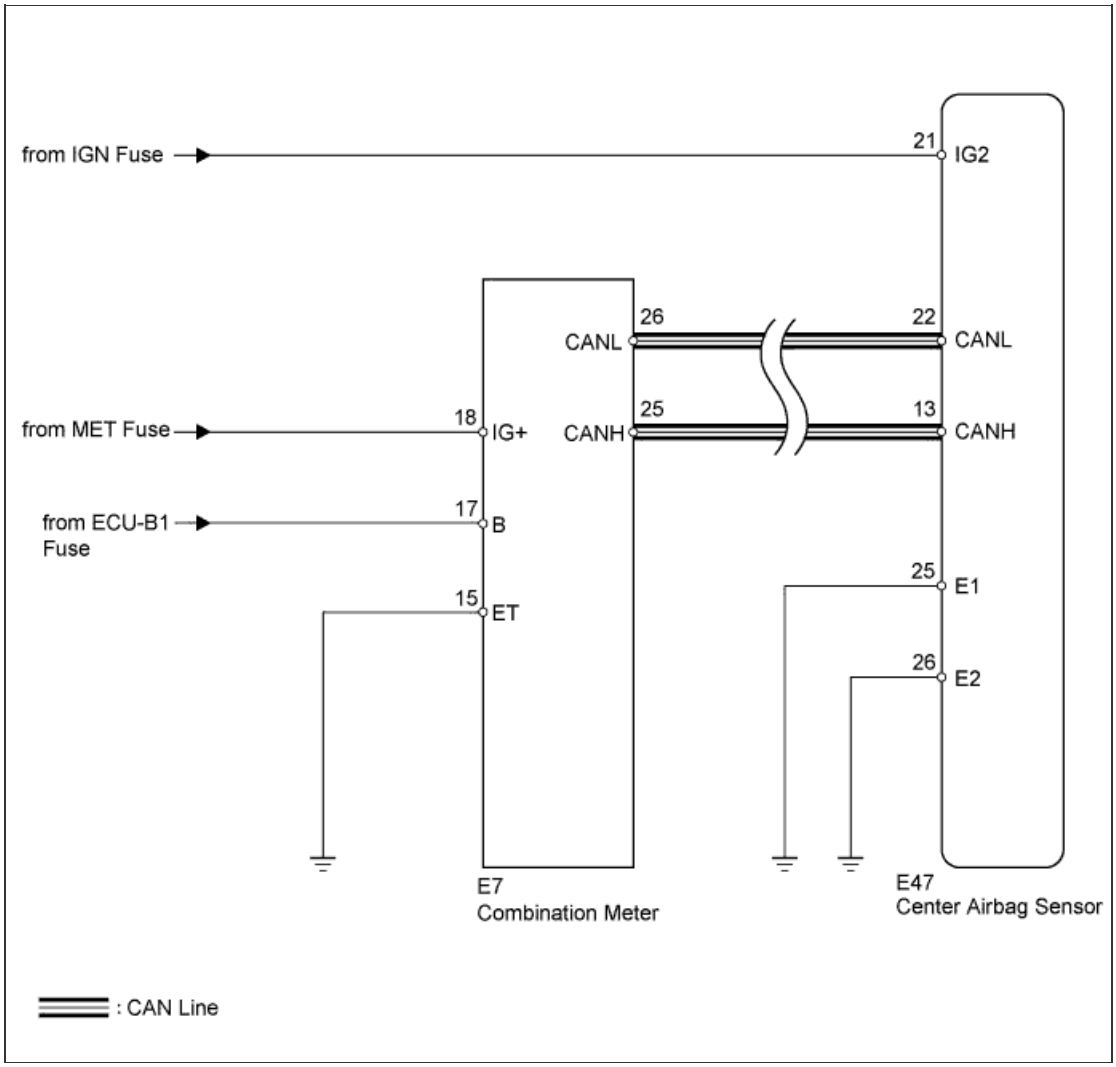

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CAN COMMUNICATION SYSTEM

a. Check if a CA communication DTC is output.

Result

Result	Proceed to
DTC is not output	A
DTC is output (for D)	B
DTC is output (for RHD)	C

B → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

C → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

A

2.CHECK BATTERY

a. Measure the voltage of the battery.

Standard Voltage:
11 to 14 V

NG → CHECK AND REPLACE BATTERY OR CHARGING SYSTEM

OK

3.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and combination meter.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF CENTER AIRBAG SENSOR)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG).


d. Operate all the components of the electrical system (defogger, wipers, headlights, heater blower, etc.).

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E47-21 (IG2) - E47-25 (E1)	Engine switch on (IG)	11 to 14 V
E47-21 (IG2) - E47-26 (E2)	Engine switch on (IG)	11 to 14 V

Rear view of wire harness connector:
(to Center Airbag Sensor)

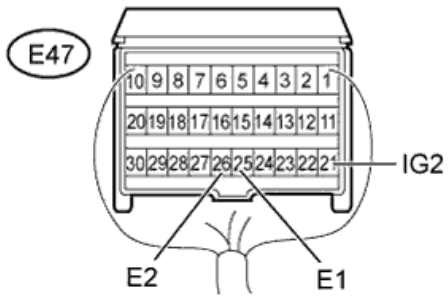

NG → REPLACE HARNESS AND CONNECTOR

OK

5.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF COMBINATION METER)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.


c. Disconnect the E7 connector from the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E7-18 (IG+) - E7-15 (ET)	Engine switch on (IG)	11 to 14 V

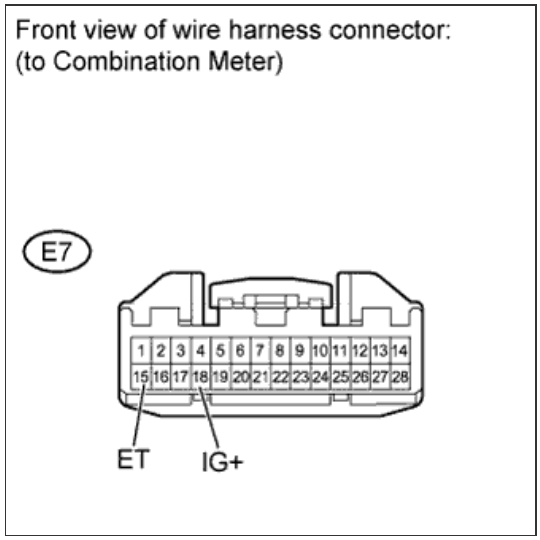

NG → REPLACE HARNESS AND CONNECTOR

OK

6.CHECK SRS WARNING LIGHT (SHORT TO GROUND)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connector to the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG).

f. Check the SRS warning light condition.

OK:

After the primary check period, SRS warning light goes off for approximately 10 seconds and then remains on.

HINT:

The primary check period is approximately 6 seconds after the engine switch is turned on (IG).

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

DTC B1860/64 Short in Driver Side Knee Airbag Squib Circuit

DTC B1861/64 Open in Driver Side Knee Airbag Squib Circuit

DTC B1862/64 Short to GND in Driver Side Knee Airbag Squib Circuit

DTC B1863/64 Short to B+ in Driver Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side knee airbag squib circuit consists of the center airbag sensor and the driver side knee airbag.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1860/64	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side knee airbag squib circuit during the primary check. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1861/64	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side knee airbag squib circuit for 2 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1862/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to ground signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1863/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to B+ signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

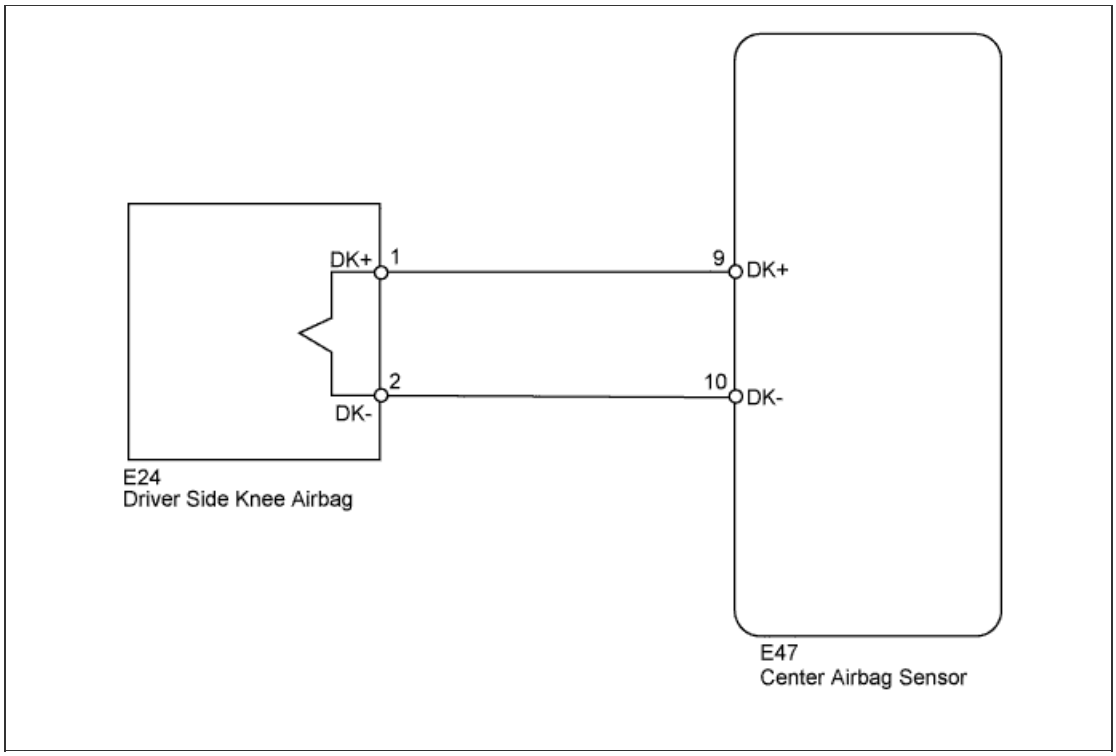

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK DRIVER SIDE KNEE AIRBAG (DRIVER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the driver side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the driver side knee airbag (driver side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

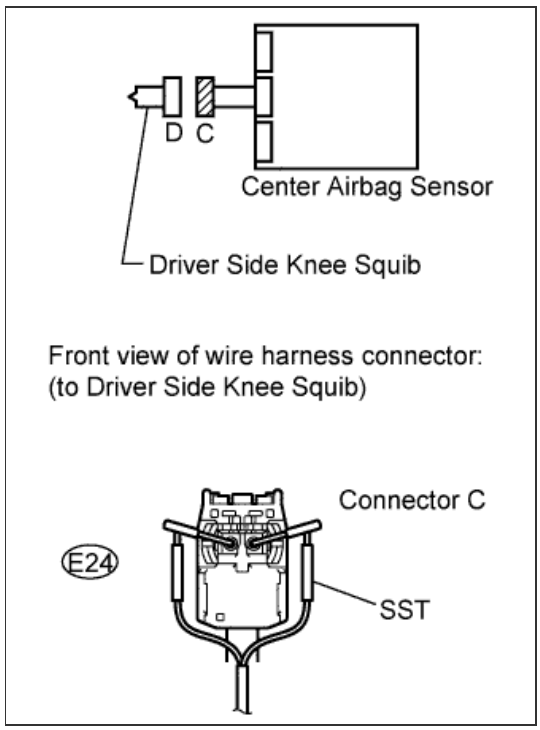

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE DRIVER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the driver side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (DRIVER SIDE KNEE AIRBAG CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E24-1 (DK+) - Body ground	Engine switch on (IG)	Below 1 V
E24-2 (DK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	1 MΩ or higher
E24-1 (DK+) - Body ground	Always	1 MΩ or higher
E24-2 (DK-) - Body	Always	1 MΩ or higher

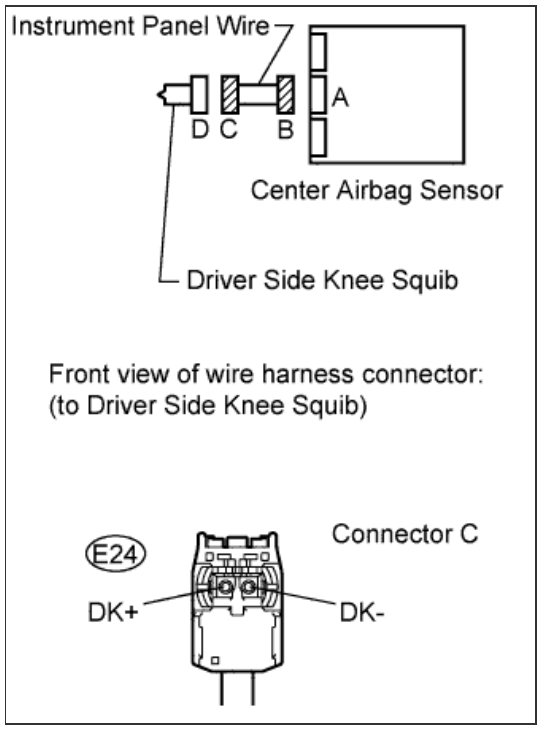

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the driver side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

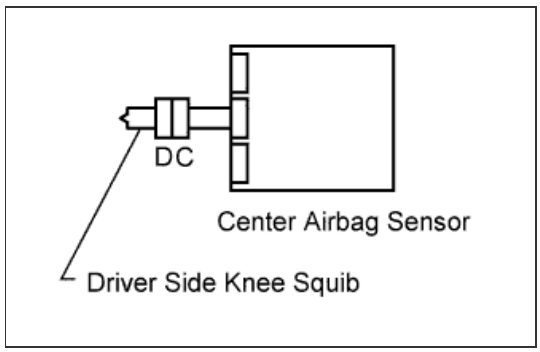

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1675/82 Rear Floor Airbag Sensor Malfunction


for Preparation Click here

DESCRIPTION

The rear floor airbag sensor consists of the diagnostic circuit, the rear floor deceleration sensor, etc.
If the center airbag sensor receives signals from the rear floor deceleration sensor, it determines whether the SRS should be activated.
DTC B1675/82 is stored when a malfunction is detected in the rear floor airbag sensor circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1675/82	When one of the following conditions is met: • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• Rear floor airbag sensor • Center airbag sensor assembl

WIRING DIAGRAM

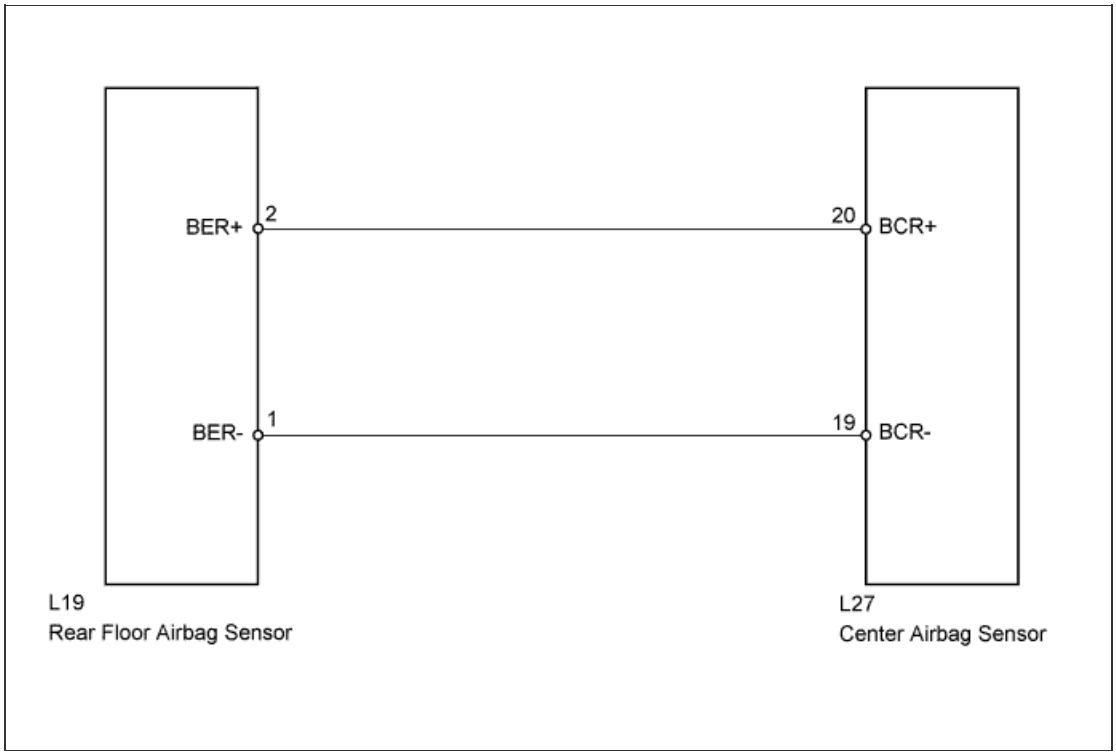

INSPECTION PROCEDURE

NOTICE:

hen disconnecting the cable from the negative (-) batter terminal while erforming re airs, some s stems need to be initiali ed after the cable is reconnected (Click here).

1.CHECK REAR FLOOR AIRBAG SENSOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) batter terminal, and wait for at least 90 seconds.


c. Tem oraril re lace the rear floor airbag sensor with a new one.

d. Connect the cable to the negative (-) batter terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memor (Click here).

g. Turn the engine switch off.

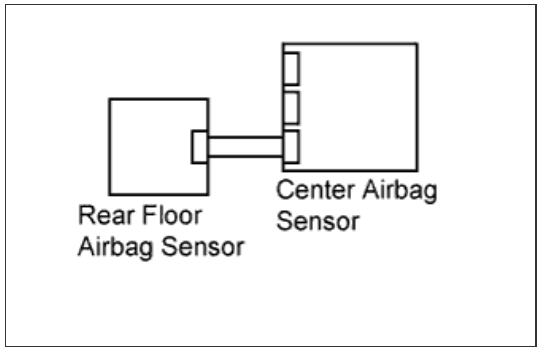

h. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1675 is not output.

HINT:

Codes other than DTC B1675 ma be out ut at this time, but the are not related to this check.

A	REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)
B	REPLACE REAR FLOOR AIRBAG SENSOR (**Click here**)

C

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1860/64 Short in Driver Side Knee Airbag Squib Circuit

DTC B1861/64 Open in Driver Side Knee Airbag Squib Circuit

DTC B1862/64 Short to GND in Driver Side Knee Airbag Squib Circuit

DTC B1863/64 Short to B+ in Driver Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side knee airbag squib circuit consists of the center airbag sensor and the driver side knee airbag.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1860/64	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side knee airbag squib circuit during the primary check. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1861/64	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side knee airbag squib circuit for 2 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1862/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to ground signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1863/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to B+ signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

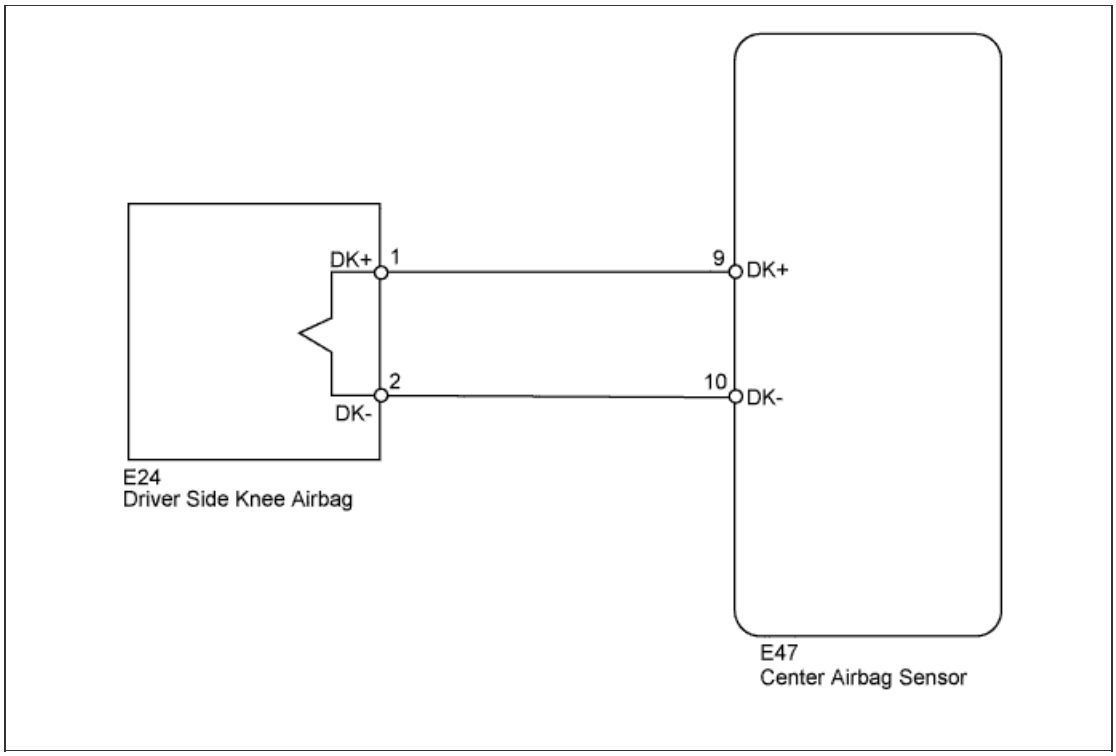

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK DRIVER SIDE KNEE AIRBAG (DRIVER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the driver side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the driver side knee airbag (driver side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

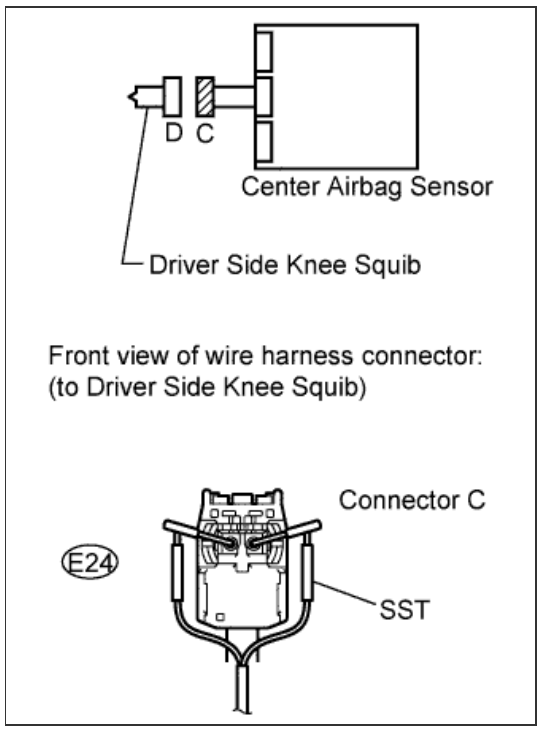

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE DRIVER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the driver side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (DRIVER SIDE KNEE AIRBAG CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E24-1 (DK+) - Body ground	Engine switch on (IG)	Below 1 V
E24-2 (DK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	1 MΩ or higher
E24-1 (DK+) - Body ground	Always	1 MΩ or higher
E24-2 (DK-) - Body	Always	1 MΩ or higher

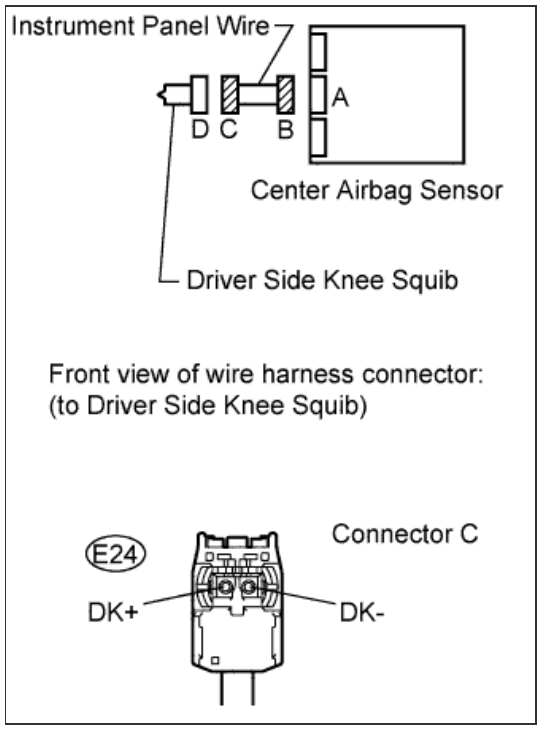

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the driver side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

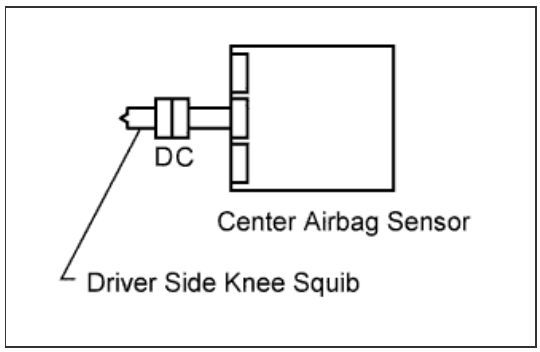

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1675/82 Rear Floor Airbag Sensor Malfunction


for Preparation Click here

DESCRIPTION

The rear floor airbag sensor consists of the diagnostic circuit, the rear floor deceleration sensor, etc.
If the center airbag sensor receives signals from the rear floor deceleration sensor, it determines whether the SRS should be activated.
DTC B1675/82 is stored when a malfunction is detected in the rear floor airbag sensor circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1675/82	When one of the following conditions is met: • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• Rear floor airbag sensor • Center airbag sensor assembl

WIRING DIAGRAM

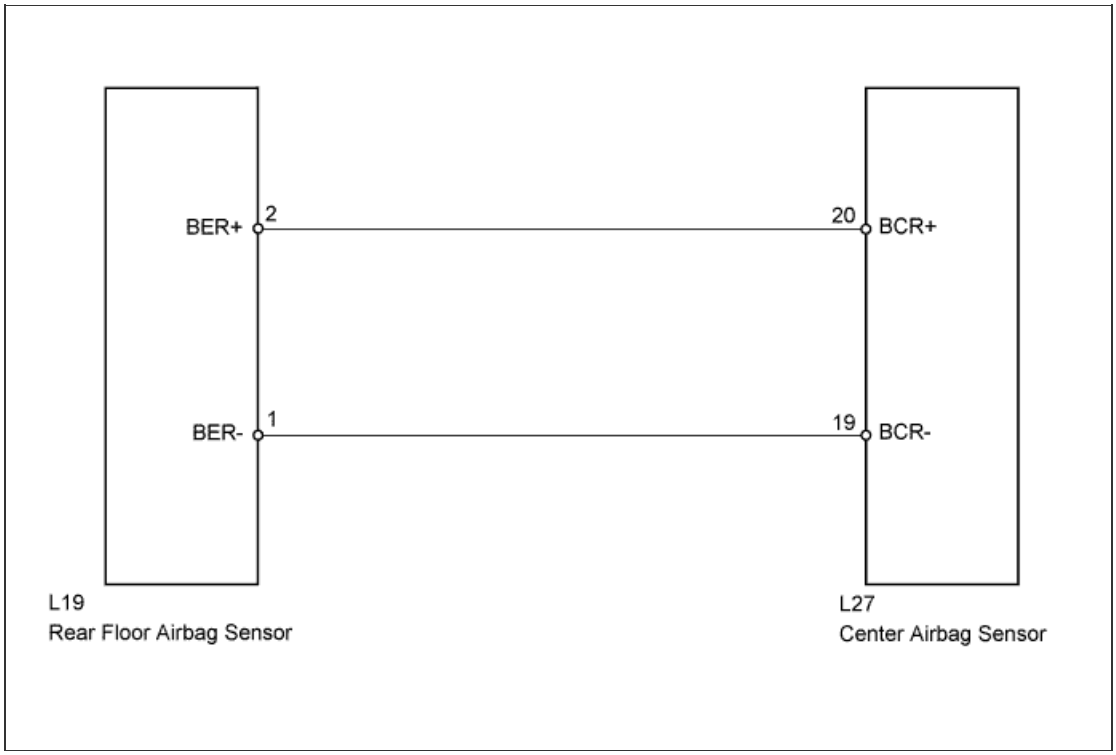

INSPECTION PROCEDURE

NOTICE:

hen disconnecting the cable from the negative (-) batter terminal while erforming re airs, some s stems need to be initiali ed after the cable is reconnected (Click here).

1.CHECK REAR FLOOR AIRBAG SENSOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) batter terminal, and wait for at least 90 seconds.


c. Tem oraril re lace the rear floor airbag sensor with a new one.

d. Connect the cable to the negative (-) batter terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG), and wait for at least 60 seconds.

f. Clear the DTCs stored in the memor (Click here).

g. Turn the engine switch off.

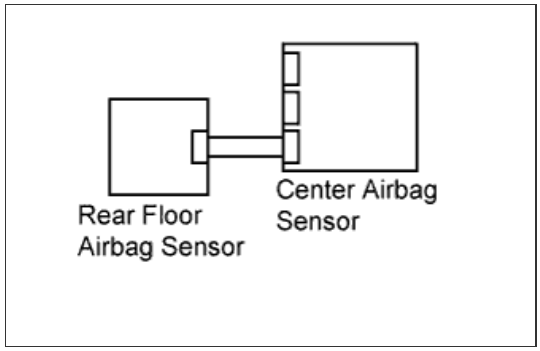

h. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

OK:
DTC B1675 is not output.

HINT:

Codes other than DTC B1675 ma be out ut at this time, but the are not related to this check.

A	REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)
B	REPLACE REAR FLOOR AIRBAG SENSOR (**Click here**)

C

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1860/64 Short in Driver Side Knee Airbag Squib Circuit

DTC B1861/64 Open in Driver Side Knee Airbag Squib Circuit

DTC B1862/64 Short to GND in Driver Side Knee Airbag Squib Circuit

DTC B1863/64 Short to B+ in Driver Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side knee airbag squib circuit consists of the center airbag sensor and the driver side knee airbag.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1860/64	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side knee airbag squib circuit during the primary check. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1861/64	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side knee airbag squib circuit for 2 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1862/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to ground signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1863/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to B+ signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

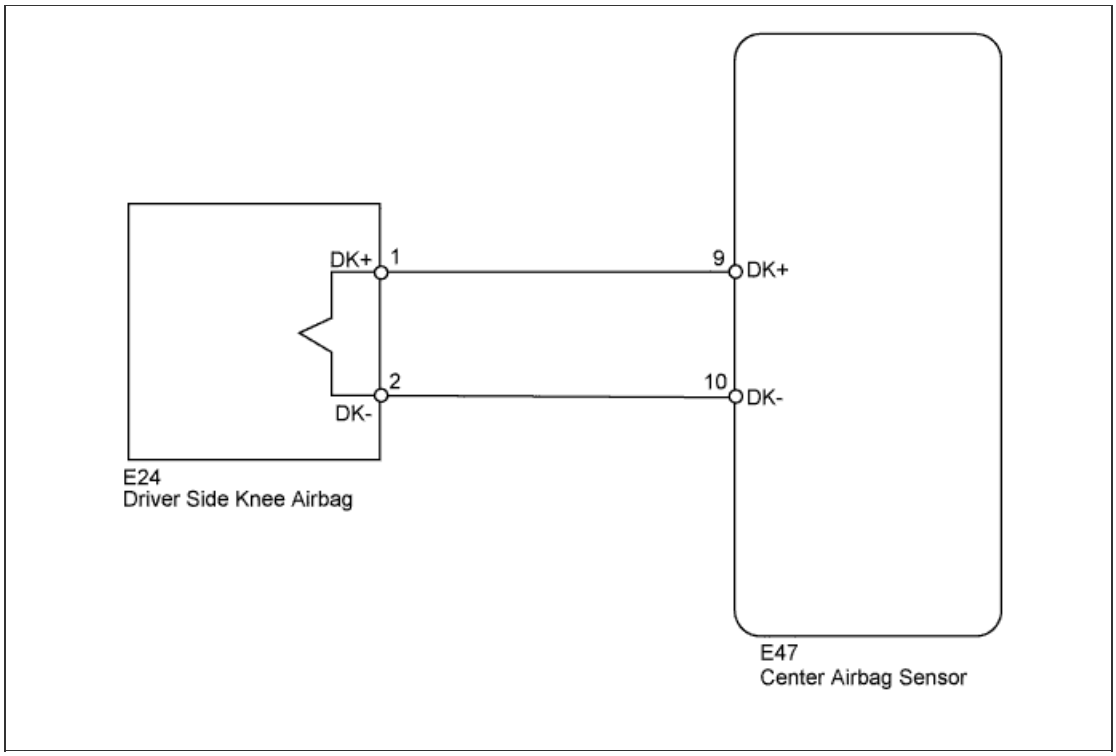

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK DRIVER SIDE KNEE AIRBAG (DRIVER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the driver side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the driver side knee airbag (driver side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

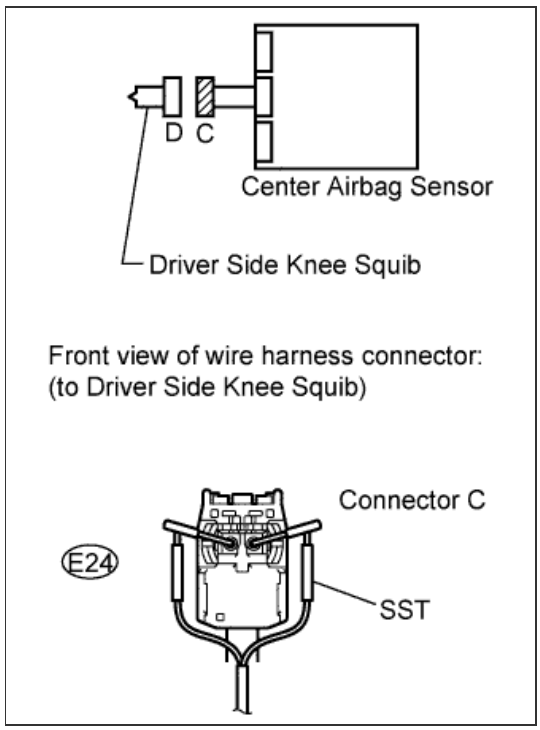

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE DRIVER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the driver side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (DRIVER SIDE KNEE AIRBAG CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E24-1 (DK+) - Body ground	Engine switch on (IG)	Below 1 V
E24-2 (DK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	1 MΩ or higher
E24-1 (DK+) - Body ground	Always	1 MΩ or higher
E24-2 (DK-) - Body	Always	1 MΩ or higher

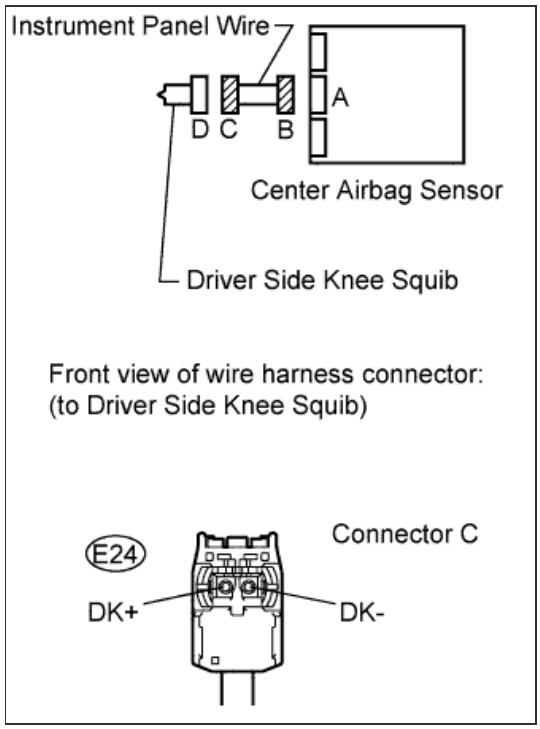

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the driver side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

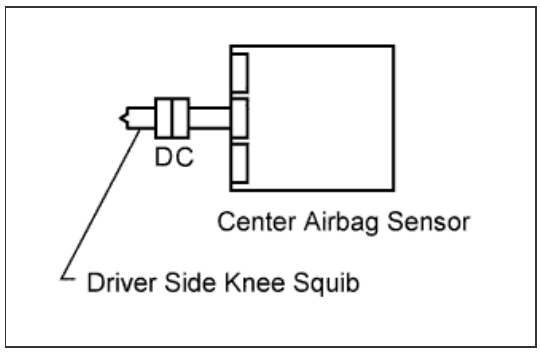

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1676/85 Lost Communication with Rear Floor Airbag Sensor RH

DTC B1677/85 Rear Floor Airbag Sensor RH Initialization Incomplete

DTC B1694/85 Side Satellite Sensor No. 2 Bus RH Initialization Incomplete

for Preparation Click here

DESCRIPTION


HINT:

"Rear floor airbag sensor RH" refer to the rear floor airbag sensor.

- The rear floor airbag sensor circuit consists of the center airbag sensor and rear floor airbag sensor.
  The rear floor airbag sensor detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1676/85, B1677/85 or B1694/85 is stored when a malfunction is detected in the rear floor airbag sensor circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1676/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1677/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1694/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly

WIRING DIAGRAM

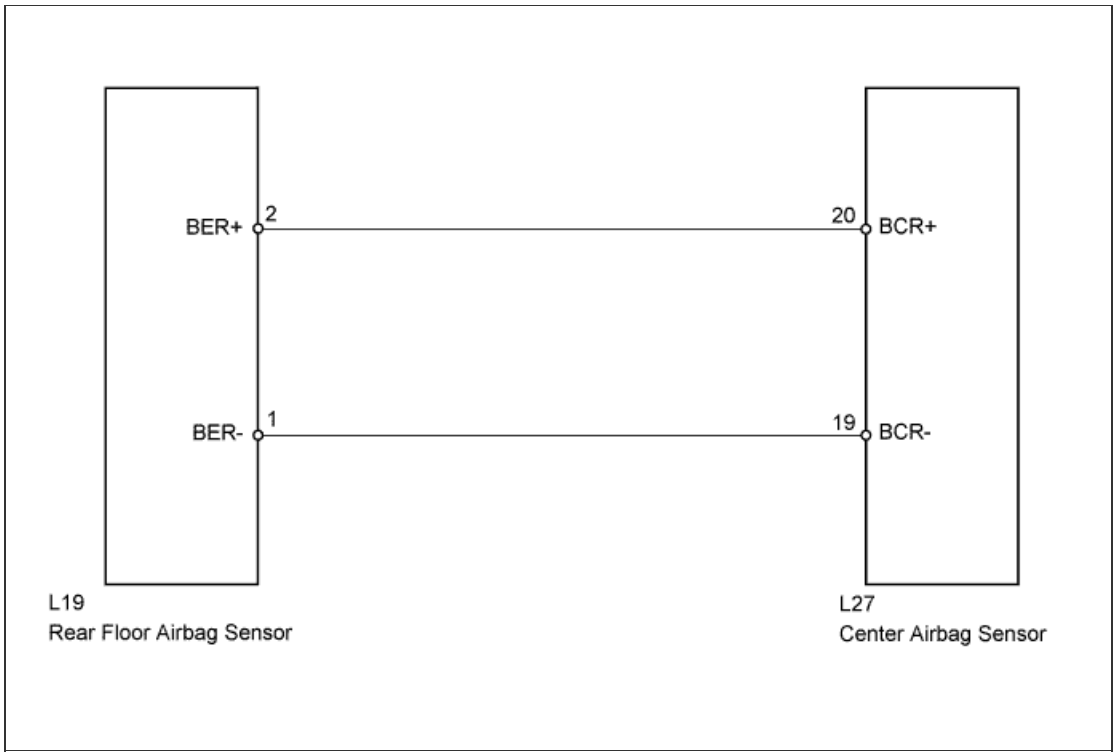

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the rear floor airbag sensor.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear floor airbag sensor.


b. Check that the connectors (on the center airbag sensor side and rear floor airbag sensor side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK REAR FLOOR AIRBAG SENSOR CIRCUIT

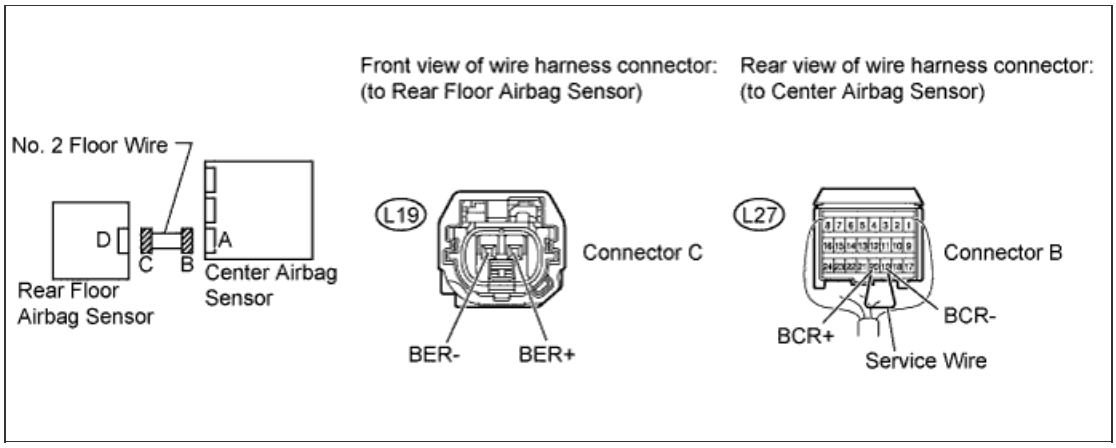

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L19-2 (BER+) - Body ground	Engine switch on (IG)	Below 1 V
L19-1 (BER-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 20 (BCR+) and 19 (BCR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	1 MΩ or higher
L19-2 (BER+) - Body ground	Always	1 MΩ or higher
L19-1 (BER-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK REAR FLOOR AIRBAG SENSOR

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear floor airbag sensor with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

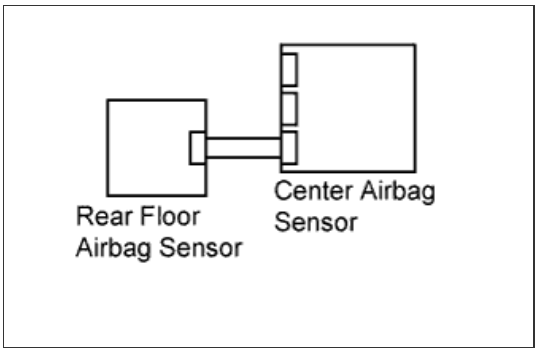

OK:

DTC B1676, B1677 and B1694 are not output.

HINT:

Codes other than DTC B1676, B1677 and B1694 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	REPLACE REAR FLOOR AIRBAG SENSOR (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

DTC B1860/64 Short in Driver Side Knee Airbag Squib Circuit

DTC B1861/64 Open in Driver Side Knee Airbag Squib Circuit

DTC B1862/64 Short to GND in Driver Side Knee Airbag Squib Circuit

DTC B1863/64 Short to B+ in Driver Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side knee airbag squib circuit consists of the center airbag sensor and the driver side knee airbag.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1860/64	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side knee airbag squib circuit during the primary check. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1861/64	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side knee airbag squib circuit for 2 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1862/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to ground signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1863/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to B+ signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

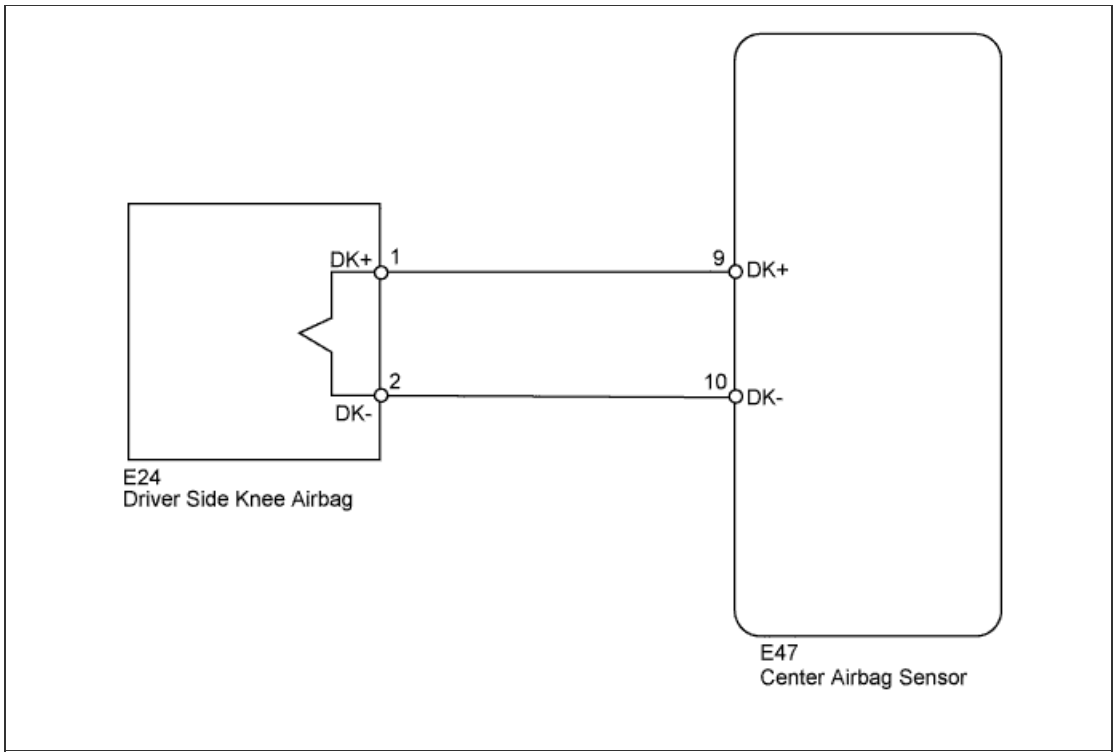

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK DRIVER SIDE KNEE AIRBAG (DRIVER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the driver side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the driver side knee airbag (driver side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

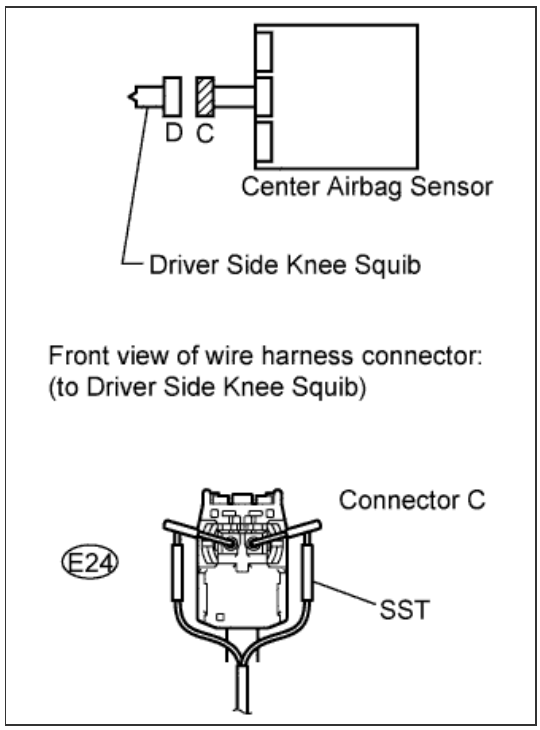

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE DRIVER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the driver side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (DRIVER SIDE KNEE AIRBAG CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E24-1 (DK+) - Body ground	Engine switch on (IG)	Below 1 V
E24-2 (DK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	1 MΩ or higher
E24-1 (DK+) - Body ground	Always	1 MΩ or higher
E24-2 (DK-) - Body	Always	1 MΩ or higher

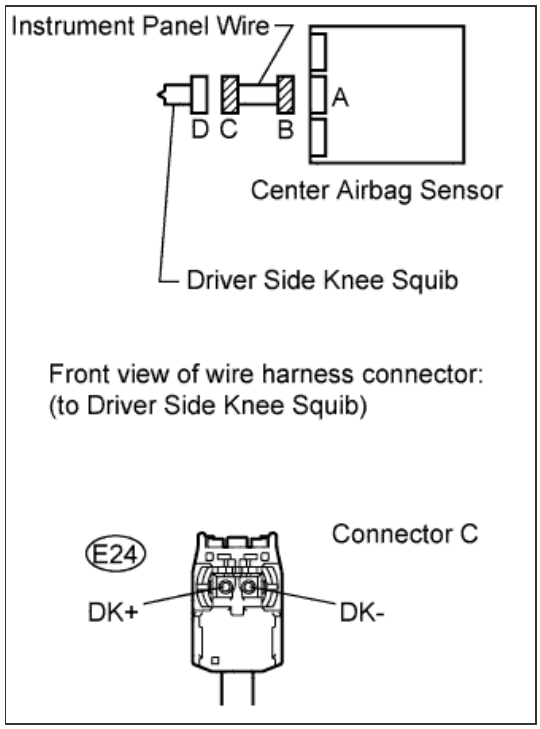

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the driver side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

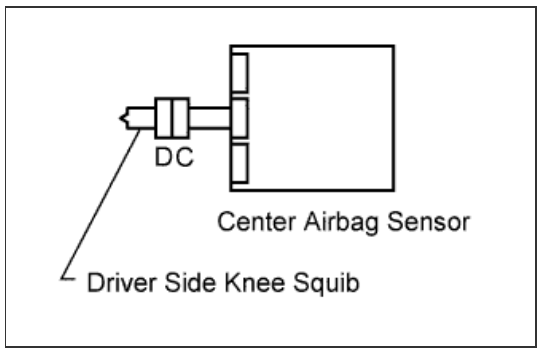

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1676/85 Lost Communication with Rear Floor Airbag Sensor RH

DTC B1677/85 Rear Floor Airbag Sensor RH Initialization Incomplete

DTC B1694/85 Side Satellite Sensor No. 2 Bus RH Initialization Incomplete

for Preparation Click here

DESCRIPTION


HINT:

"Rear floor airbag sensor RH" refer to the rear floor airbag sensor.

- The rear floor airbag sensor circuit consists of the center airbag sensor and rear floor airbag sensor.
  The rear floor airbag sensor detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1676/85, B1677/85 or B1694/85 is stored when a malfunction is detected in the rear floor airbag sensor circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1676/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1677/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1694/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly

WIRING DIAGRAM

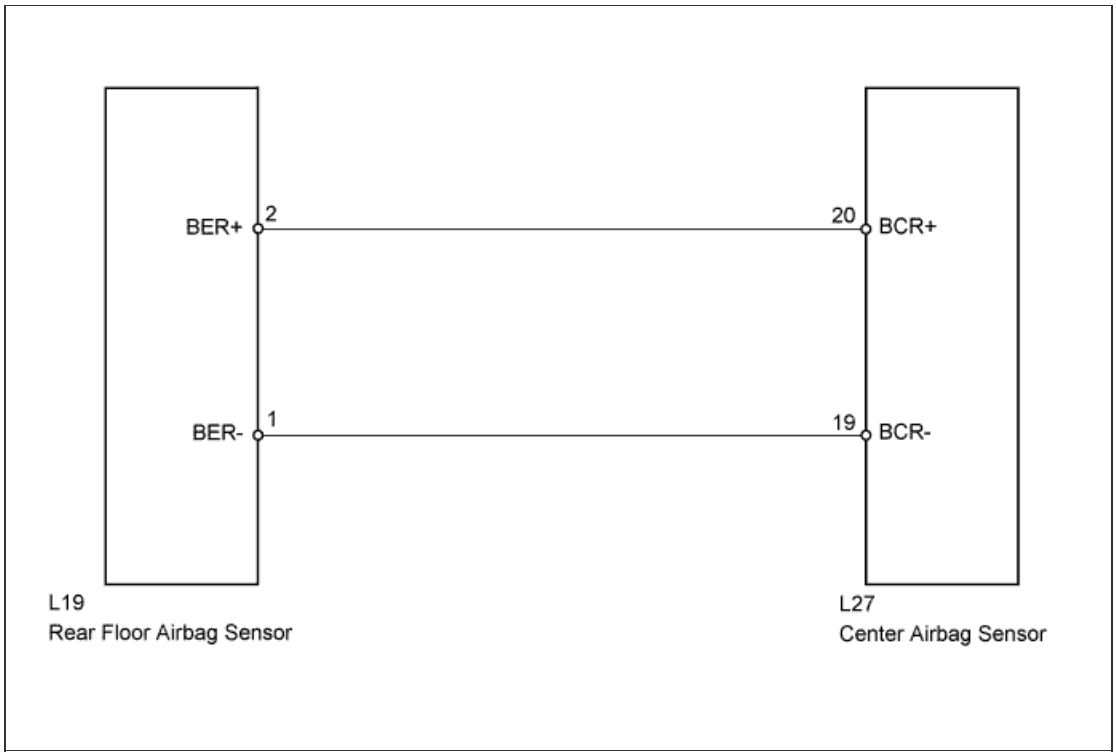

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the rear floor airbag sensor.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear floor airbag sensor.


b. Check that the connectors (on the center airbag sensor side and rear floor airbag sensor side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK REAR FLOOR AIRBAG SENSOR CIRCUIT

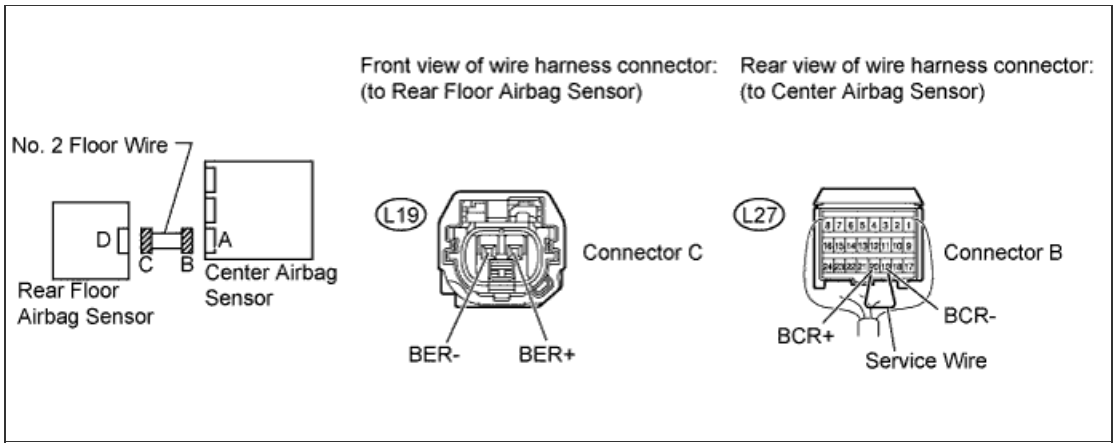

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L19-2 (BER+) - Body ground	Engine switch on (IG)	Below 1 V
L19-1 (BER-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 20 (BCR+) and 19 (BCR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	1 MΩ or higher
L19-2 (BER+) - Body ground	Always	1 MΩ or higher
L19-1 (BER-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK REAR FLOOR AIRBAG SENSOR

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear floor airbag sensor with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

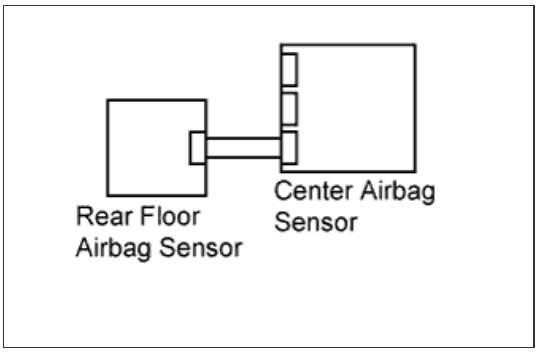

OK:

DTC B1676, B1677 and B1694 are not output.

HINT:

Codes other than DTC B1676, B1677 and B1694 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	REPLACE REAR FLOOR AIRBAG SENSOR (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

DTC B1860/64 Short in Driver Side Knee Airbag Squib Circuit

DTC B1861/64 Open in Driver Side Knee Airbag Squib Circuit

DTC B1862/64 Short to GND in Driver Side Knee Airbag Squib Circuit

DTC B1863/64 Short to B+ in Driver Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side knee airbag squib circuit consists of the center airbag sensor and the driver side knee airbag.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1860/64	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side knee airbag squib circuit during the primary check. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1861/64	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side knee airbag squib circuit for 2 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1862/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to ground signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly
B1863/64	When one of the following conditions is met: • The airbag sensor center receives a short circuit to B+ signal in the knee airbag (Driver side squib) circuit for 0.5 seconds. • A driver side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Driver side knee airbag assembly (Driver side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

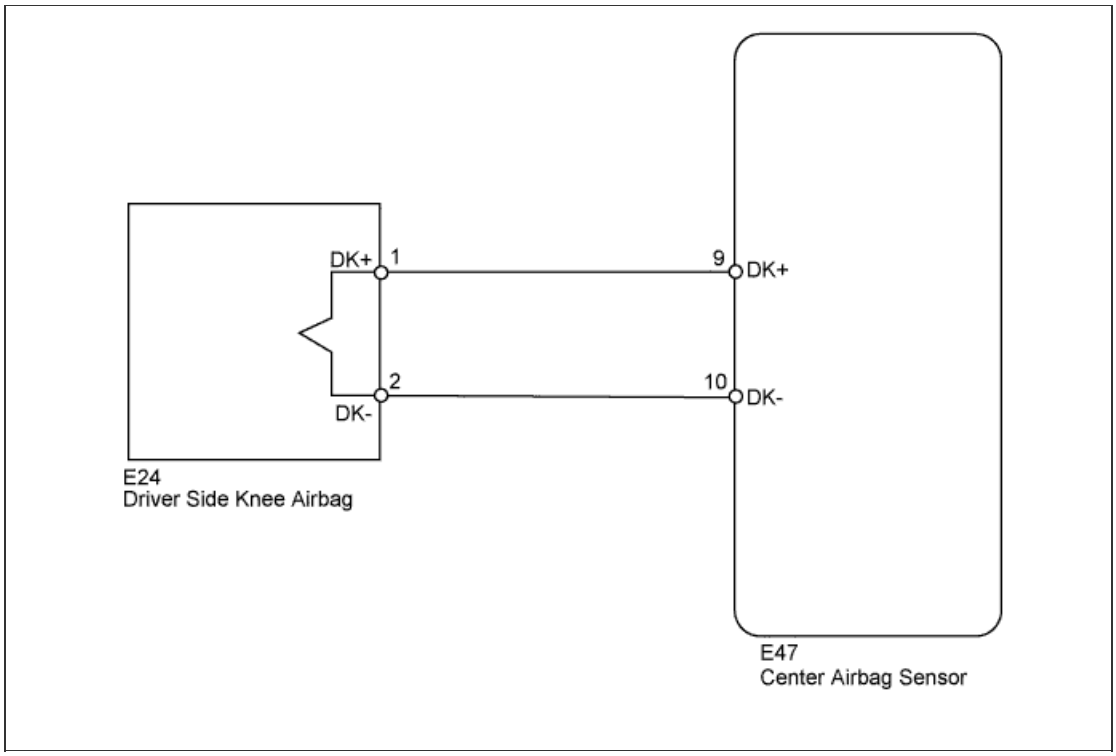

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK DRIVER SIDE KNEE AIRBAG (DRIVER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the driver side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the driver side knee airbag (driver side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

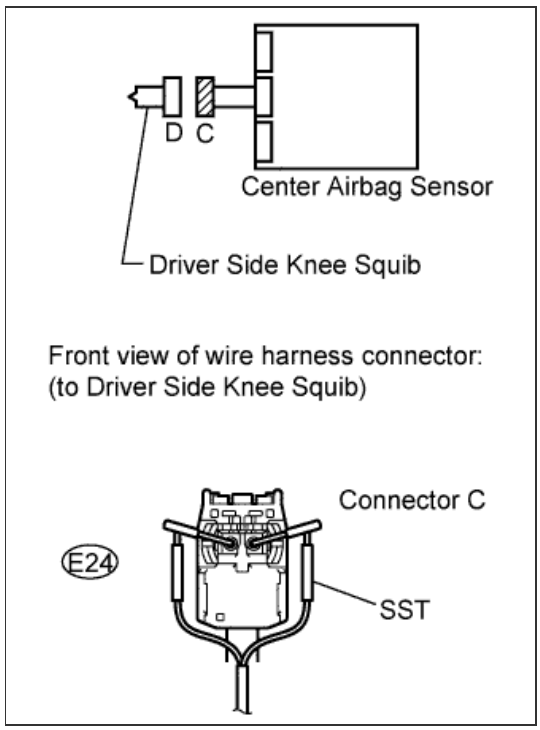

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE DRIVER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the driver side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (DRIVER SIDE KNEE AIRBAG CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E24-1 (DK+) - Body ground	Engine switch on (IG)	Below 1 V
E24-2 (DK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E24-1 (DK+) - E24-2 (DK-)	Always	1 MΩ or higher
E24-1 (DK+) - Body ground	Always	1 MΩ or higher
E24-2 (DK-) - Body	Always	1 MΩ or higher

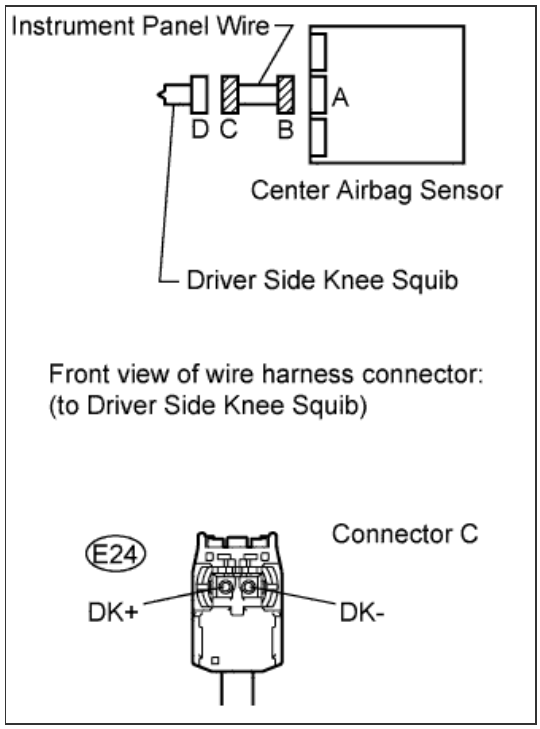

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the driver side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

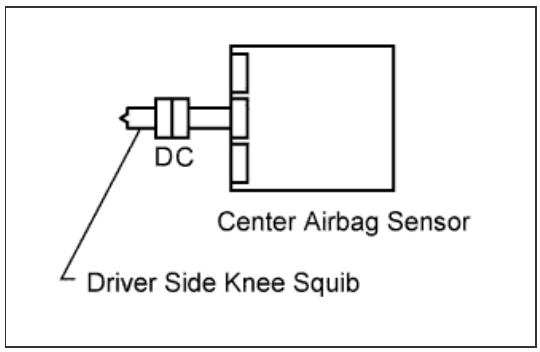

OK:

DTC B1860, B1861, B1862 or B1863 is not output.

HINT:

Codes other than DTC B1860, B1861, B1862 and B1863 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1676/85 Lost Communication with Rear Floor Airbag Sensor RH

DTC B1677/85 Rear Floor Airbag Sensor RH Initialization Incomplete

DTC B1694/85 Side Satellite Sensor No. 2 Bus RH Initialization Incomplete

for Preparation Click here

DESCRIPTION


HINT:

"Rear floor airbag sensor RH" refer to the rear floor airbag sensor.

- The rear floor airbag sensor circuit consists of the center airbag sensor and rear floor airbag sensor.
  The rear floor airbag sensor detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1676/85, B1677/85 or B1694/85 is stored when a malfunction is detected in the rear floor airbag sensor circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1676/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1677/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1694/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly

WIRING DIAGRAM

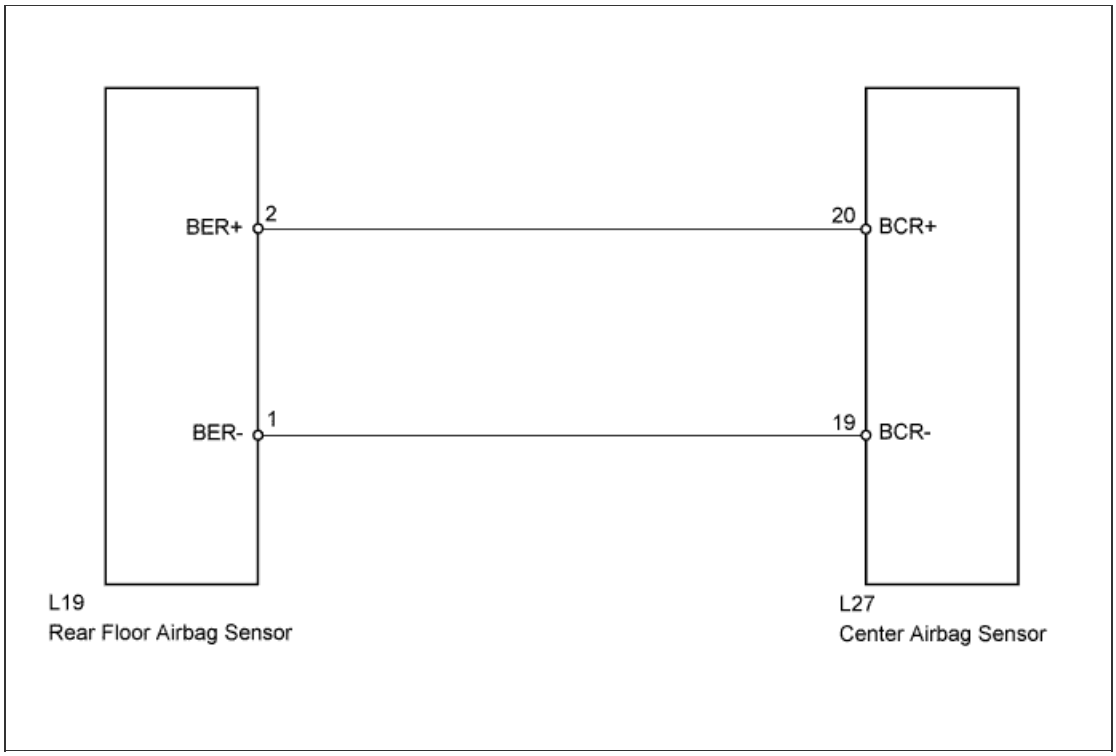

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the rear floor airbag sensor.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear floor airbag sensor.


b. Check that the connectors (on the center airbag sensor side and rear floor airbag sensor side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK REAR FLOOR AIRBAG SENSOR CIRCUIT

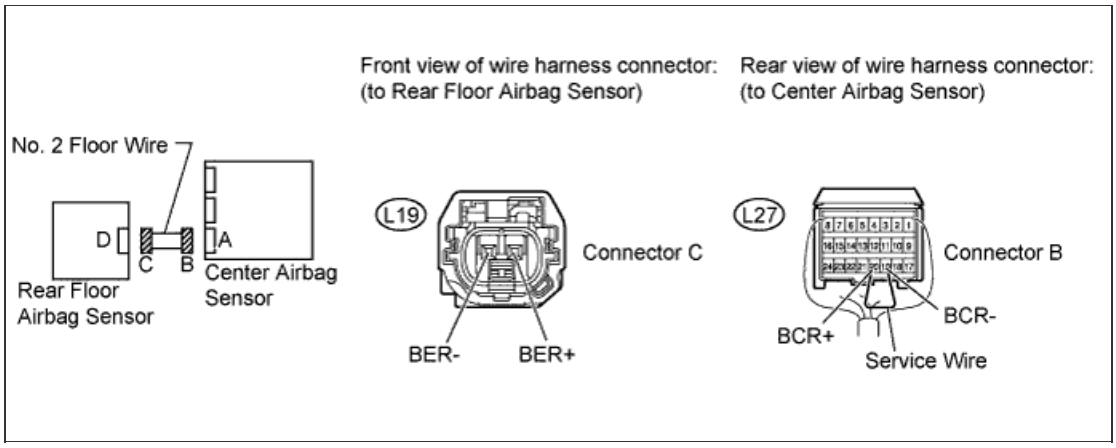

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L19-2 (BER+) - Body ground	Engine switch on (IG)	Below 1 V
L19-1 (BER-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 20 (BCR+) and 19 (BCR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	1 MΩ or higher
L19-2 (BER+) - Body ground	Always	1 MΩ or higher
L19-1 (BER-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK REAR FLOOR AIRBAG SENSOR

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear floor airbag sensor with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

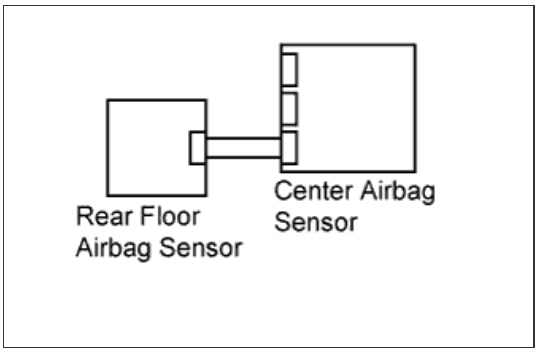

OK:

DTC B1676, B1677 and B1694 are not output.

HINT:

Codes other than DTC B1676, B1677 and B1694 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	REPLACE REAR FLOOR AIRBAG SENSOR (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

DTC B1865/65 Short in Front Passenger Side Knee Airbag Squib Circuit

DTC B1866/65 Open in Front Passenger Side Knee Airbag Squib Circuit

DTC B1867/65 Short to GND in Front Passenger Side Knee Airbag Squib Circuit

DTC B1868/65 Short to B+ in Front Passenger Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side knee airbag squib circuit consists of the center airbag sensor and the front passenger side knee airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1865/65	When one of the following conditions is met: • The center airbag sensor recei es a line short circuit signal 5 times in the front passenger side knee airbag squib circuit during the primary check. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1866/65	When one of the following conditions is met: • The center airbag sensor recei es an open circuit signal in the front passenger side knee airbag squib circuit for 2 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B186 /65	When one of the following conditions is met: • The center airbag sensor recei es a short circuit to ground signal in the front passenger side knee airbag squib circuit for 5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1868/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

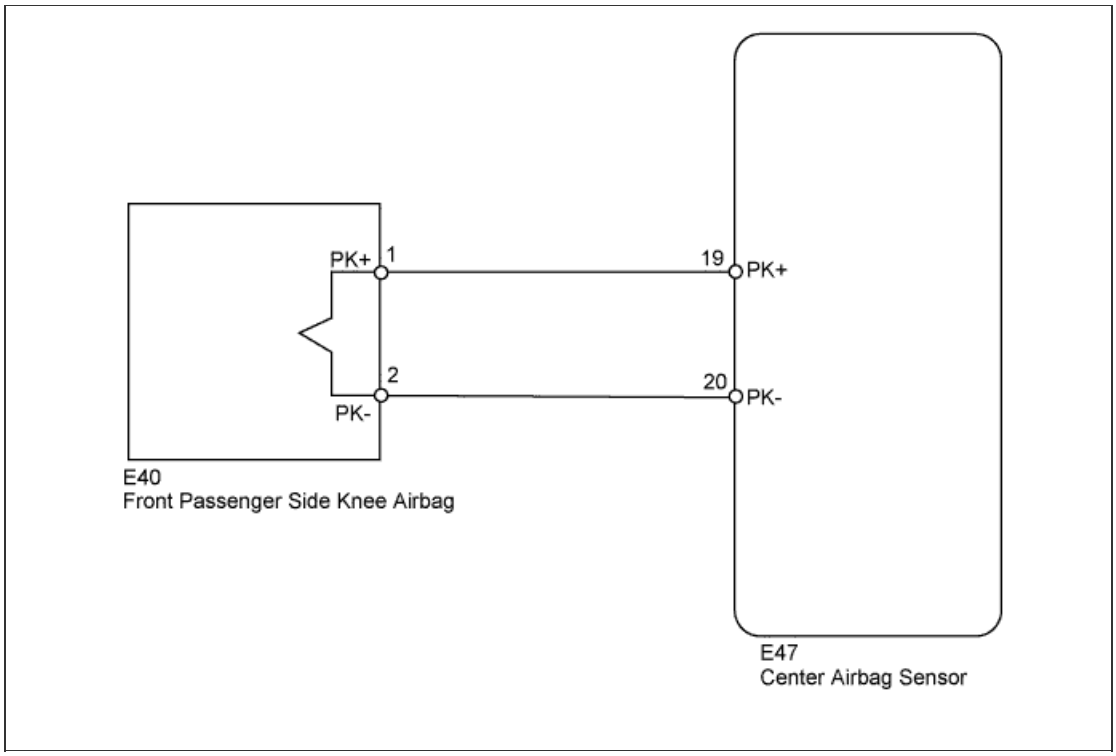

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER SIDE KNEE AIRBAG (FRONT PASSENGER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front passenger side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front passenger side knee airbag (front passenger side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

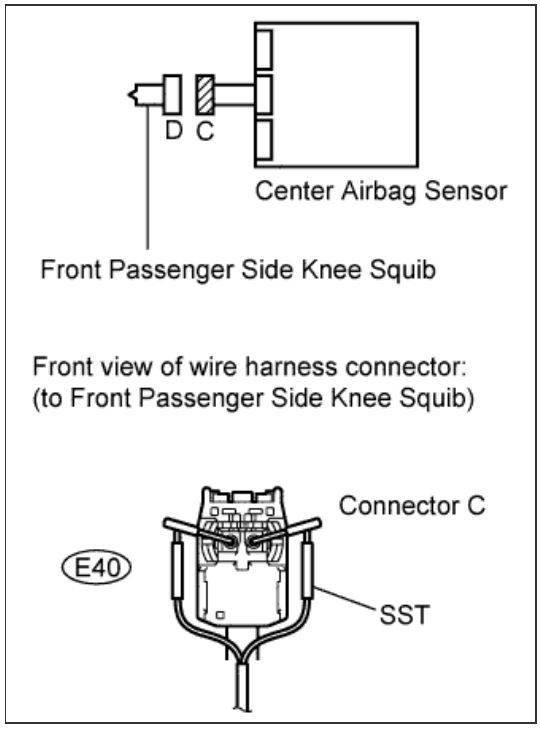

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the front passenger side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (FRONT PASSENGER KNEE SQUIB CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E40-1 (PK+) - Body ground	Engine switch on (IG)	Below 1 V
E40-2 (PK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	1 MΩ or higher
E40-1 (PK+) - Body ground	Always	1 MΩ or higher
E40-2 (PK-) - Body	Always	1 MΩ or higher

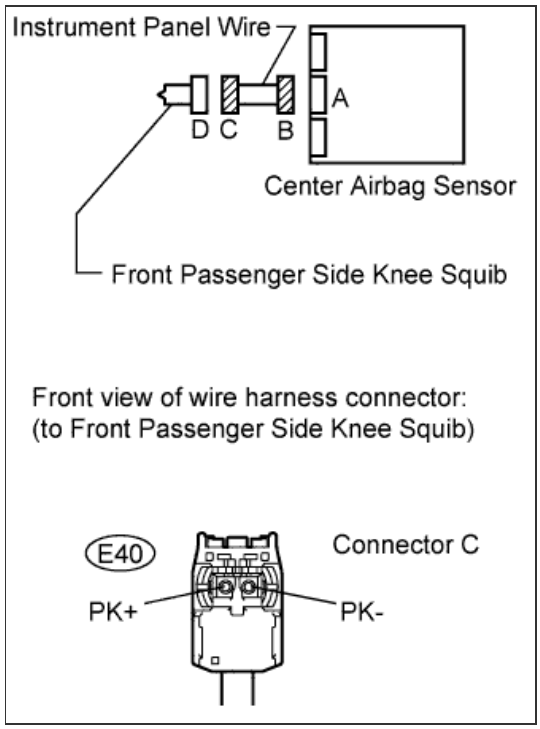

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

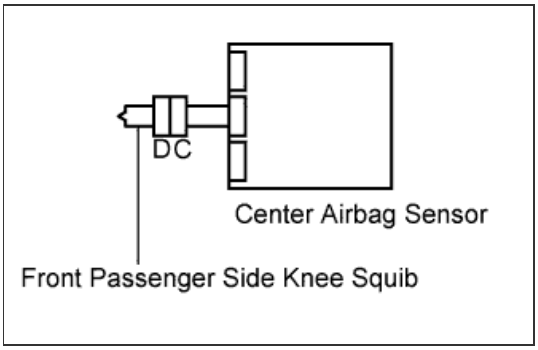

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1676/85 Lost Communication with Rear Floor Airbag Sensor RH

DTC B1677/85 Rear Floor Airbag Sensor RH Initialization Incomplete

DTC B1694/85 Side Satellite Sensor No. 2 Bus RH Initialization Incomplete

for Preparation Click here

DESCRIPTION


HINT:

"Rear floor airbag sensor RH" refer to the rear floor airbag sensor.

- The rear floor airbag sensor circuit consists of the center airbag sensor and rear floor airbag sensor.
  The rear floor airbag sensor detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1676/85, B1677/85 or B1694/85 is stored when a malfunction is detected in the rear floor airbag sensor circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1676/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1677/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1694/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly

WIRING DIAGRAM

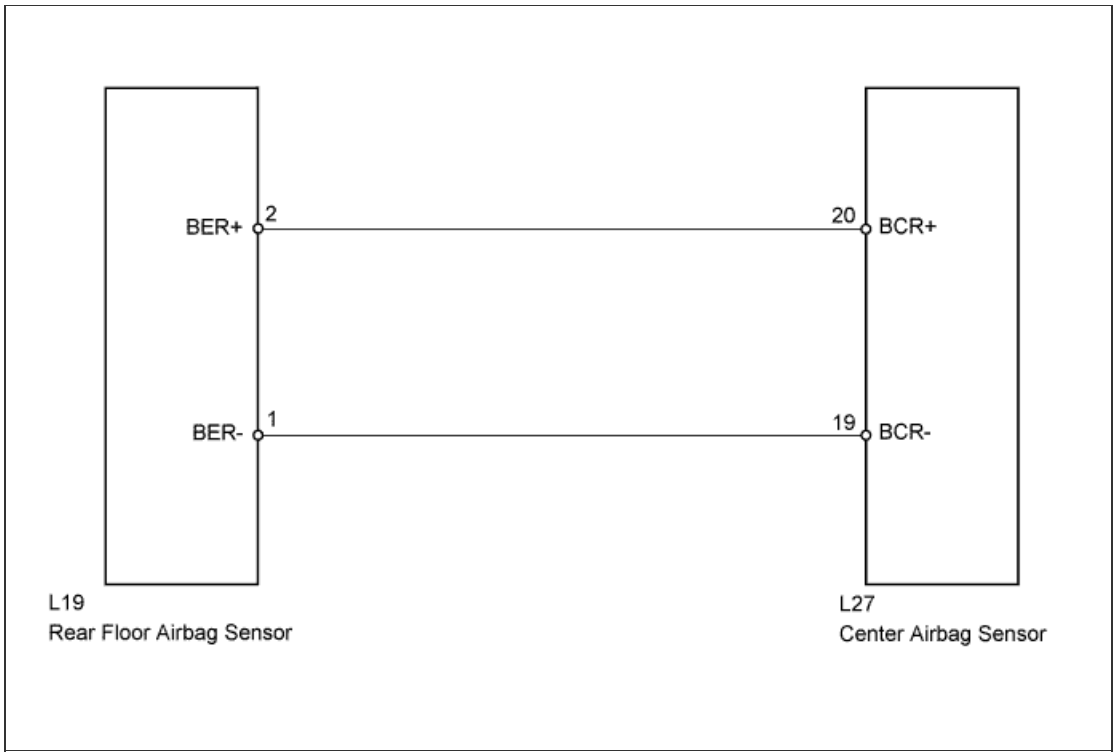

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the rear floor airbag sensor.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear floor airbag sensor.


b. Check that the connectors (on the center airbag sensor side and rear floor airbag sensor side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK REAR FLOOR AIRBAG SENSOR CIRCUIT

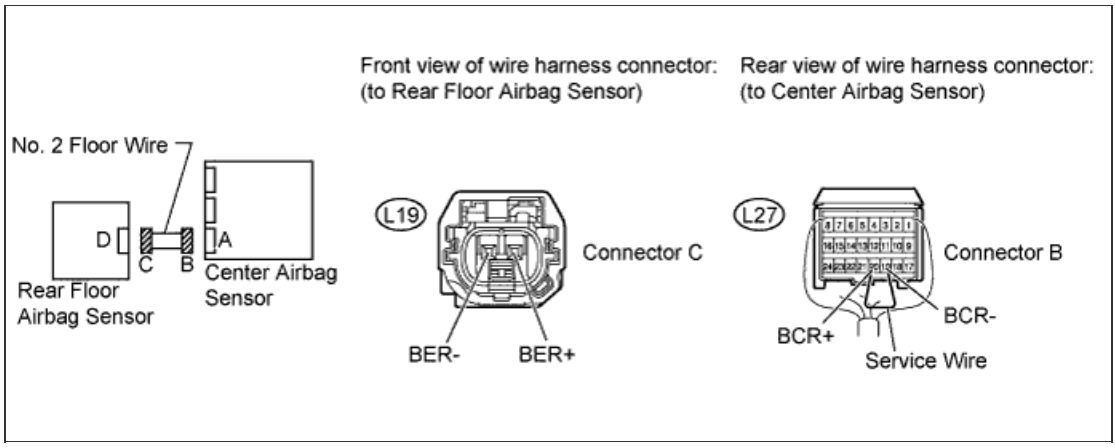

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L19-2 (BER+) - Body ground	Engine switch on (IG)	Below 1 V
L19-1 (BER-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 20 (BCR+) and 19 (BCR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	1 MΩ or higher
L19-2 (BER+) - Body ground	Always	1 MΩ or higher
L19-1 (BER-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK REAR FLOOR AIRBAG SENSOR

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear floor airbag sensor with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

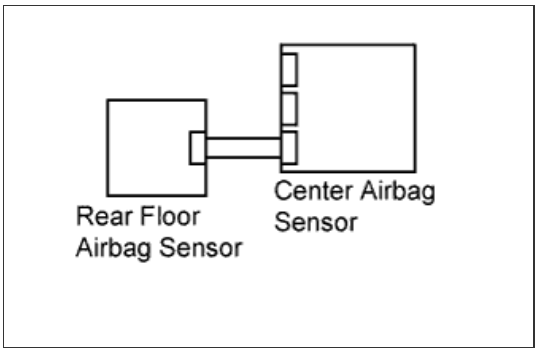

OK:

DTC B1676, B1677 and B1694 are not output.

HINT:

Codes other than DTC B1676, B1677 and B1694 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	REPLACE REAR FLOOR AIRBAG SENSOR (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

DTC B1865/65 Short in Front Passenger Side Knee Airbag Squib Circuit

DTC B1866/65 Open in Front Passenger Side Knee Airbag Squib Circuit

DTC B1867/65 Short to GND in Front Passenger Side Knee Airbag Squib Circuit

DTC B1868/65 Short to B+ in Front Passenger Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side knee airbag squib circuit consists of the center airbag sensor and the front passenger side knee airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1865/65	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side knee airbag squib circuit during the primary check. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1866/65	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side knee airbag squib circuit for 2 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1867/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1868/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

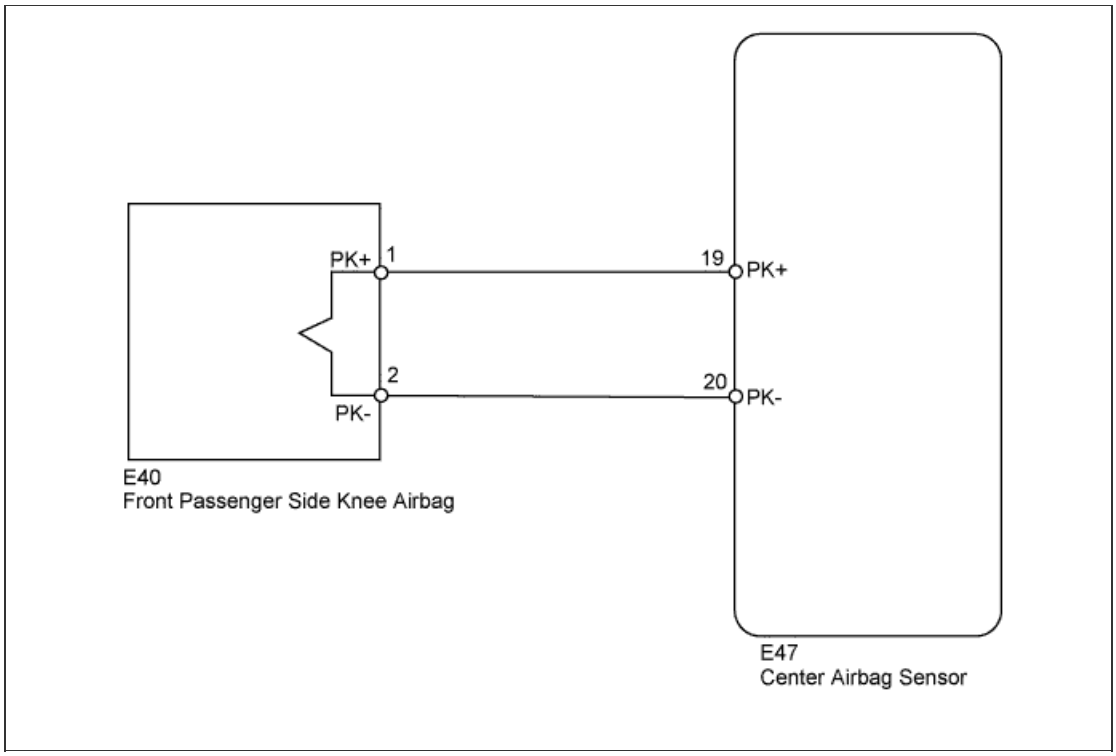

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER SIDE KNEE AIRBAG (FRONT PASSENGER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front passenger side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front passenger side knee airbag (front passenger side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

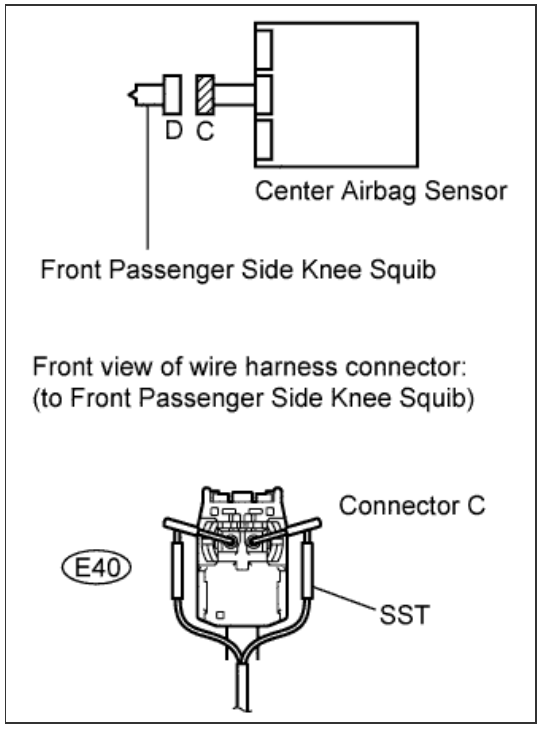

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the front passenger side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (FRONT PASSENGER KNEE SQUIB CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E40-1 (PK+) - Body ground	Engine switch on (IG)	Below 1 V
E40-2 (PK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	1 MΩ or higher
E40-1 (PK+) - Body ground	Always	1 MΩ or higher
E40-2 (PK-) - Body	Always	1 MΩ or higher

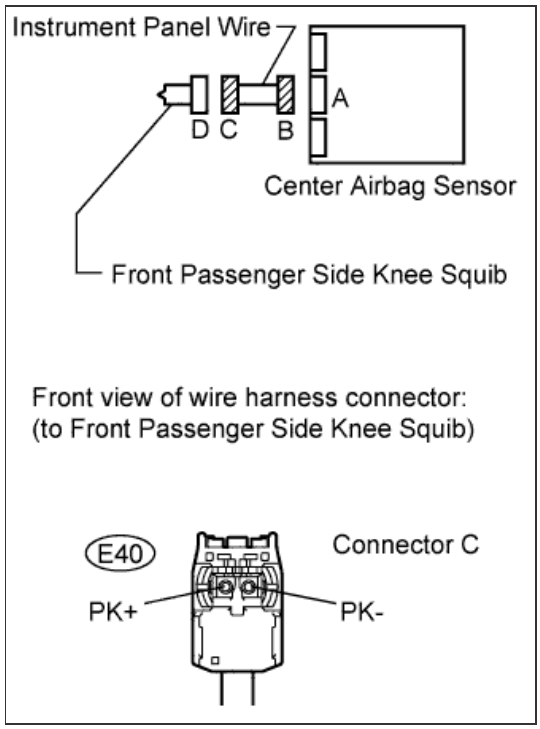

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

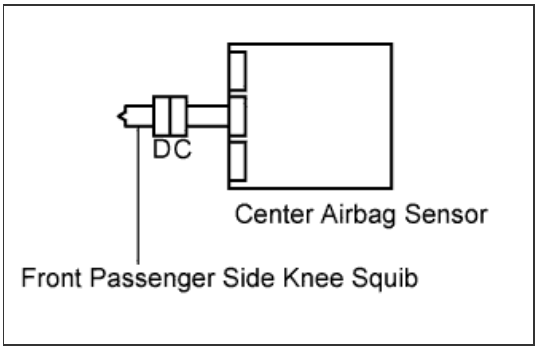

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1676/85 Lost Communication with Rear Floor Airbag Sensor RH

DTC B1677/85 Rear Floor Airbag Sensor RH Initialization Incomplete

DTC B1694/85 Side Satellite Sensor No. 2 Bus RH Initialization Incomplete

for Preparation Click here

DESCRIPTION


HINT:

"Rear floor airbag sensor RH" refer to the rear floor airbag sensor.

- The rear floor airbag sensor circuit consists of the center airbag sensor and rear floor airbag sensor.
  The rear floor airbag sensor detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1676/85, B1677/85 or B1694/85 is stored when a malfunction is detected in the rear floor airbag sensor circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1676/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1677/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1694/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly

WIRING DIAGRAM

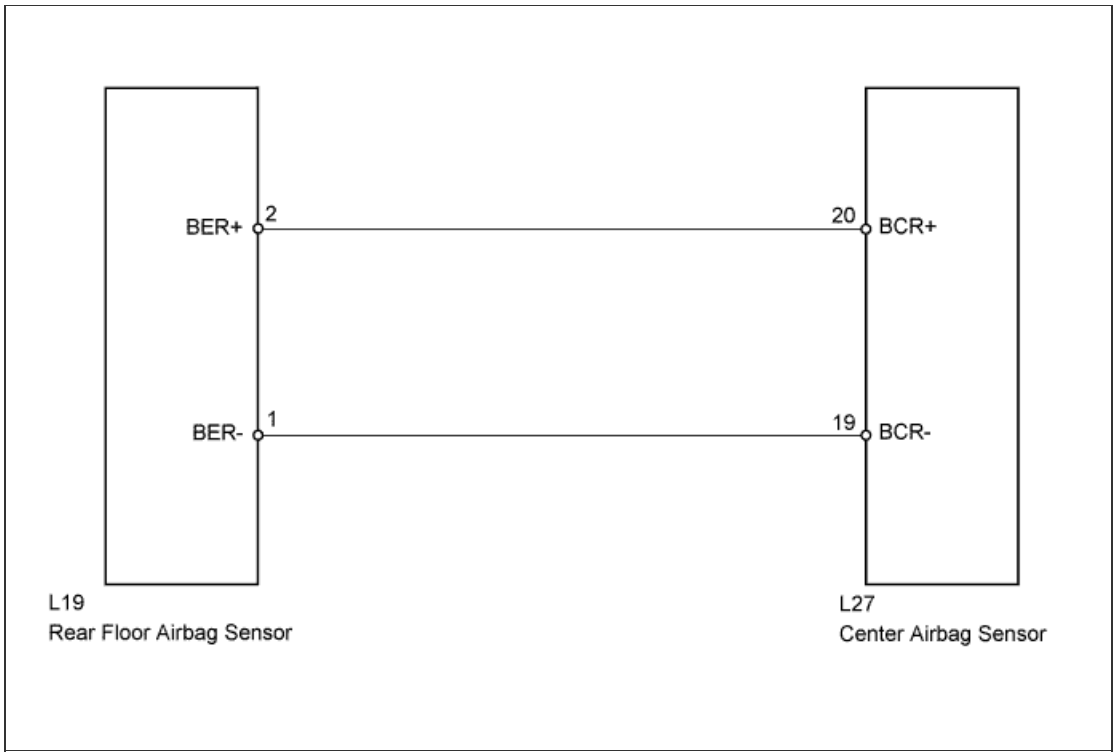

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the rear floor airbag sensor.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear floor airbag sensor.


b. Check that the connectors (on the center airbag sensor side and rear floor airbag sensor side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK REAR FLOOR AIRBAG SENSOR CIRCUIT

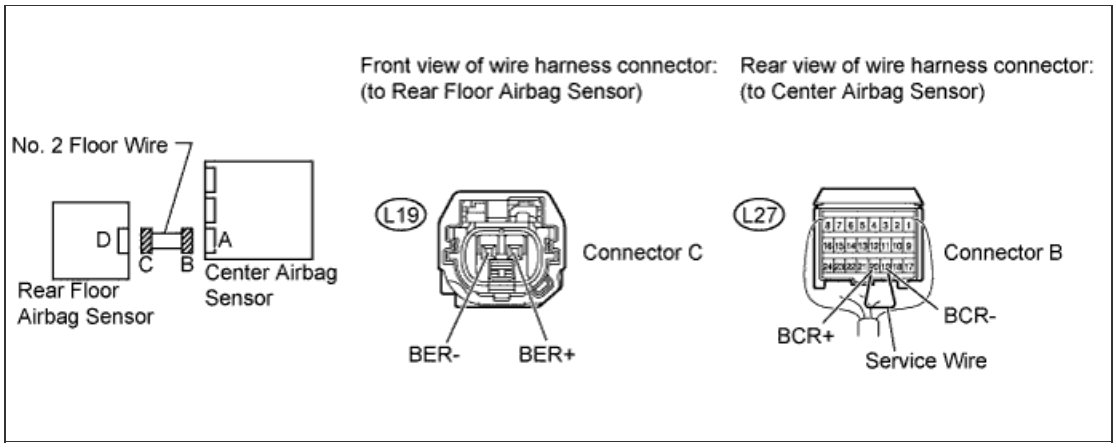

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L19-2 (BER+) - Body ground	Engine switch on (IG)	Below 1 V
L19-1 (BER-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 20 (BCR+) and 19 (BCR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	1 MΩ or higher
L19-2 (BER+) - Body ground	Always	1 MΩ or higher
L19-1 (BER-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK REAR FLOOR AIRBAG SENSOR

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear floor airbag sensor with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

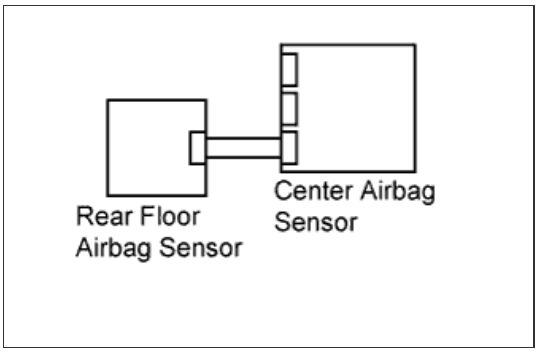

OK:

DTC B1676, B1677 and B1694 are not output.

HINT:

Codes other than DTC B1676, B1677 and B1694 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	REPLACE REAR FLOOR AIRBAG SENSOR (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

DTC B1865/65 Short in Front Passenger Side Knee Airbag Squib Circuit

DTC B1866/65 Open in Front Passenger Side Knee Airbag Squib Circuit

DTC B1867/65 Short to GND in Front Passenger Side Knee Airbag Squib Circuit

DTC B1868/65 Short to B+ in Front Passenger Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side knee airbag squib circuit consists of the center airbag sensor and the front passenger side knee airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1865/65	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side knee airbag squib circuit during the primary check. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1866/65	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side knee airbag squib circuit for 2 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1867/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1868/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

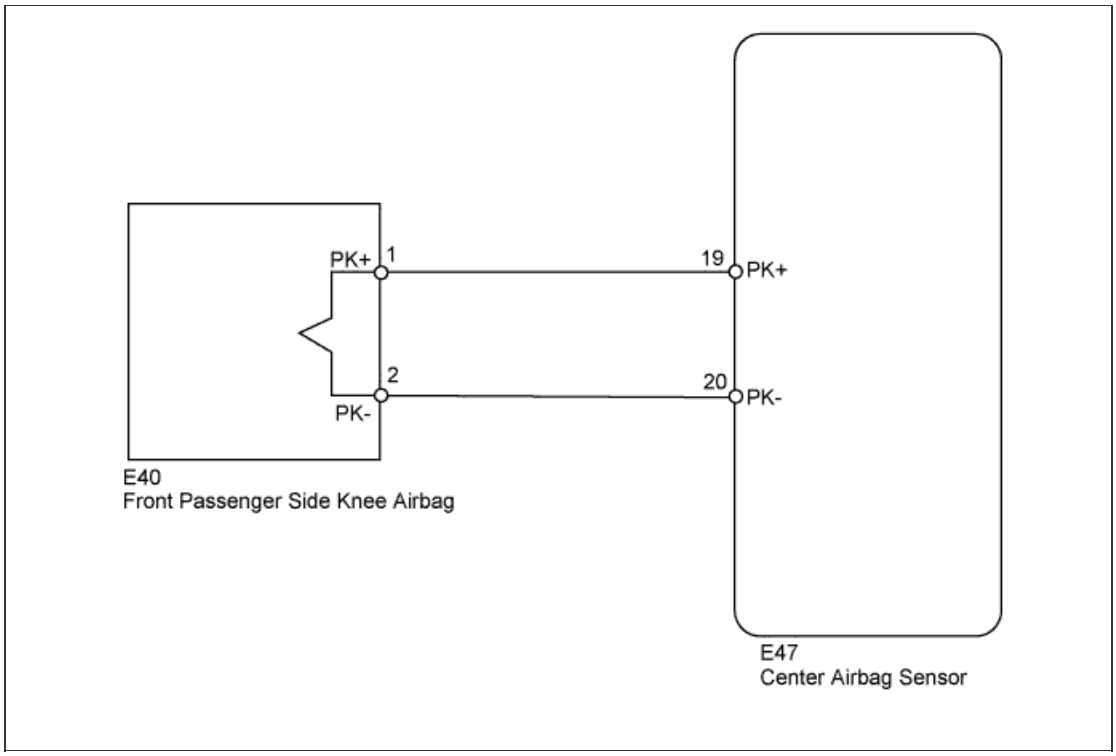

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER SIDE KNEE AIRBAG (FRONT PASSENGER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front passenger side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front passenger side knee airbag (front passenger side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

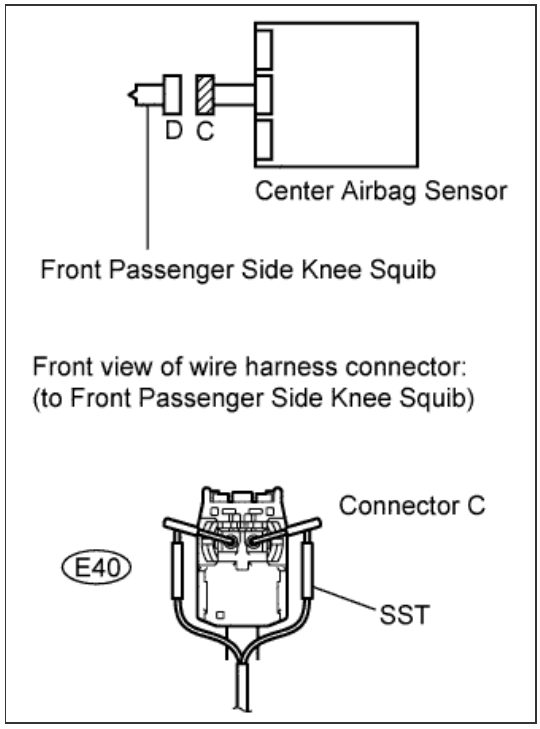

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the front passenger side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (FRONT PASSENGER KNEE SQUIB CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E40-1 (PK+) - Body ground	Engine switch on (IG)	Below 1 V
E40-2 (PK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	1 MΩ or higher
E40-1 (PK+) - Body ground	Always	1 MΩ or higher
E40-2 (PK-) - Body	Always	1 MΩ or higher

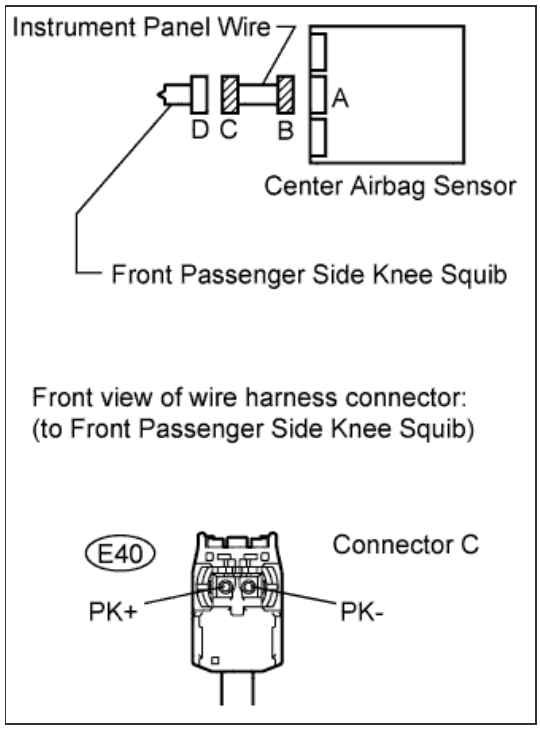

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

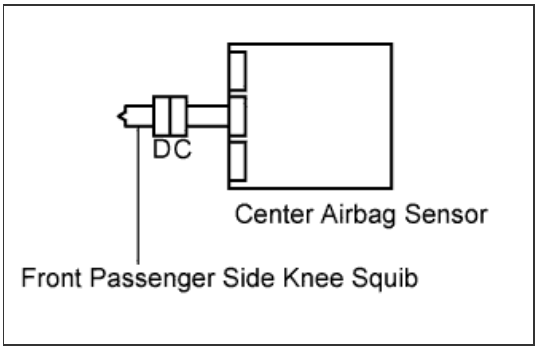

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1676/85 Lost Communication with Rear Floor Airbag Sensor RH

DTC B1677/85 Rear Floor Airbag Sensor RH Initialization Incomplete

DTC B1694/85 Side Satellite Sensor No. 2 Bus RH Initialization Incomplete

for Preparation Click here

DESCRIPTION


HINT:

"Rear floor airbag sensor RH" refer to the rear floor airbag sensor.

- The rear floor airbag sensor circuit consists of the center airbag sensor and rear floor airbag sensor.
  The rear floor airbag sensor detects impacts to the vehicle and sends signals to the center airbag sensor to determine if the airbag should be deployed.
  DTC B1676/85, B1677/85 or B1694/85 is stored when a malfunction is detected in the rear floor airbag sensor circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1676/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1677/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly
B1694/85	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal, an open circuit signal, a short circuit to ground signal or a short circuit to B+ signal in the rear floor airbag sensor circuit for 2 seconds. • A rear floor airbag sensor malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear floor airbag sensor • Center airbag sensor assembly

WIRING DIAGRAM

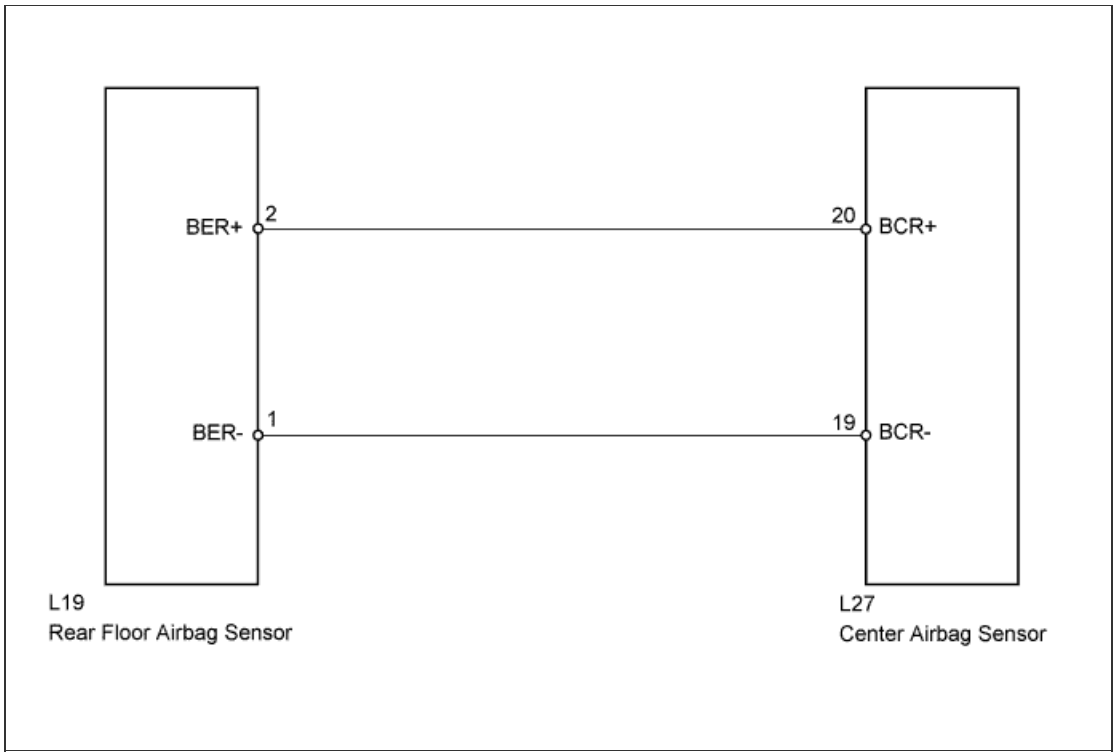

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CONNECTION OF CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and the rear floor airbag sensor.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

2.CHECK CONNECTORS

a. Disconnect the connectors from the center airbag sensor and rear floor airbag sensor.


b. Check that the connectors (on the center airbag sensor side and rear floor airbag sensor side) are not damaged.

OK:
The connectors are not deformed or damaged.

NG → REPLACE HARNESS AND CONNECTOR

OK

3.CHECK REAR FLOOR AIRBAG SENSOR CIRCUIT

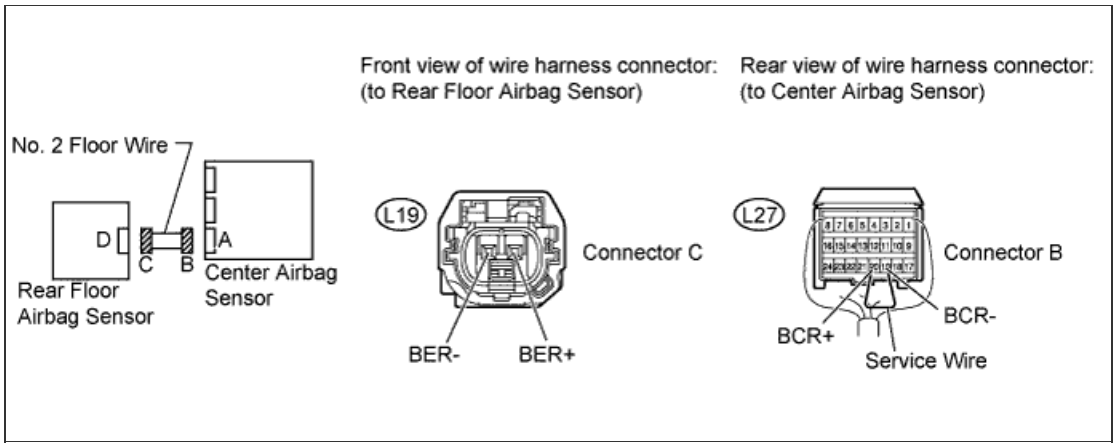

a. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L19-2 (BER+) - Body ground	Engine switch on (IG)	Below 1 V
L19-1 (BER-) - Body ground	Engine switch on (IG)	Below 1 V

c. Turn the engine switch off.

d. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

e. Using a service wire, connect terminals 20 (BCR+) and 19 (BCR-) of connector B.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector when connecting a service wire.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	Below 1 Ω

g. Disconnect the service wire from connector B.

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L19-2 (BER+) - L19-1 (BER-)	Always	1 MΩ or higher
L19-2 (BER+) - Body ground	Always	1 MΩ or higher
L19-1 (BER-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK REAR FLOOR AIRBAG SENSOR

a. Connect the connectors to the center airbag sensor.

b. Temporarily replace the rear floor airbag sensor with a new one.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.


d. Turn the engine switch on (IG), and wait for at least 60 seconds.

e. Clear the DTCs stored in the memory (Click here).

f. Turn the engine switch off.

g. Turn the engine switch on (IG), and wait for at least 60 seconds.

i. Check for DTCs (Click here).

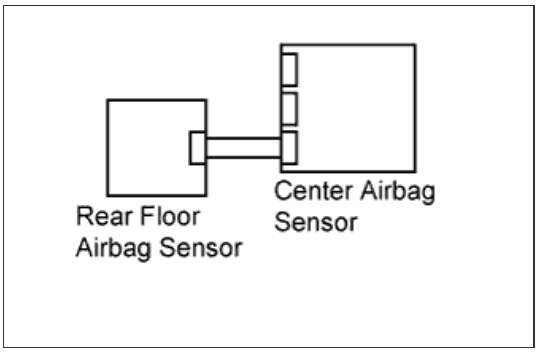

OK:

DTC B1676, B1677 and B1694 are not output.

HINT:

Codes other than DTC B1676, B1677 and B1694 may be output at this time, but they are not related to this check.

A	USE SIMULATION METHOD TO CHECK (Click here)
B	REPLACE REAR FLOOR AIRBAG SENSOR (Click here)

C

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

DTC B1865/65 Short in Front Passenger Side Knee Airbag Squib Circuit

DTC B1866/65 Open in Front Passenger Side Knee Airbag Squib Circuit

DTC B1867/65 Short to GND in Front Passenger Side Knee Airbag Squib Circuit

DTC B1868/65 Short to B+ in Front Passenger Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side knee airbag squib circuit consists of the center airbag sensor and the front passenger side knee airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1865/65	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side knee airbag squib circuit during the primary check. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1866/65	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side knee airbag squib circuit for 2 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1867/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1868/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

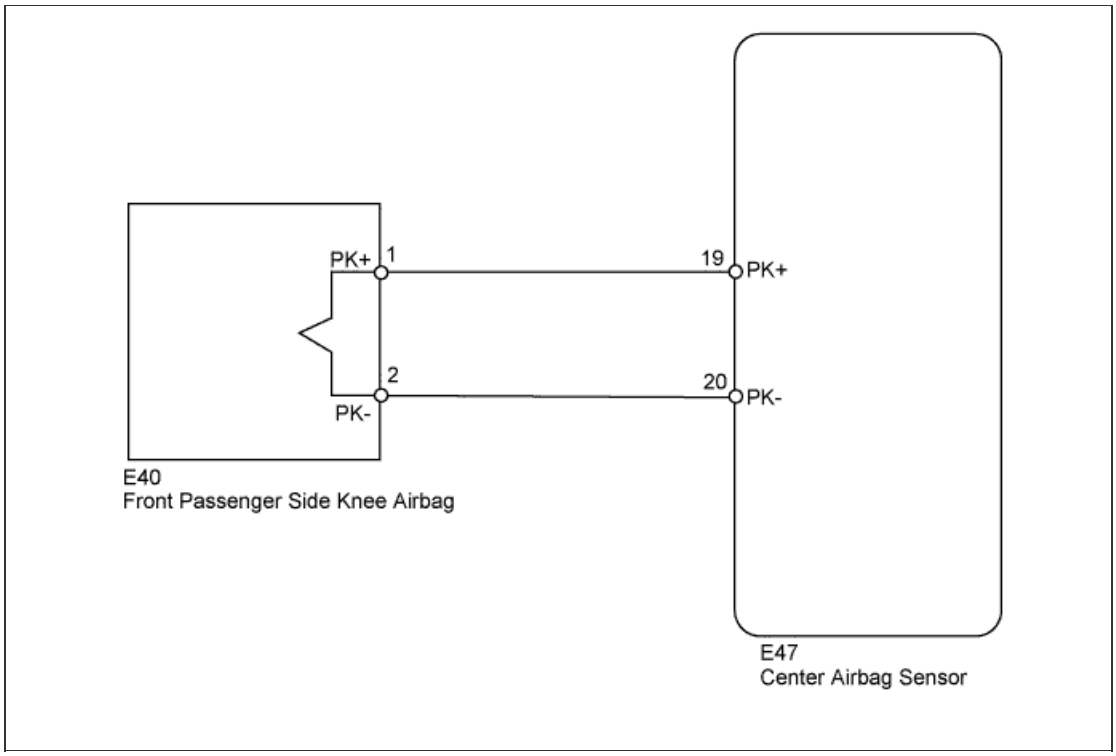

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER SIDE KNEE AIRBAG (FRONT PASSENGER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front passenger side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front passenger side knee airbag (front passenger side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

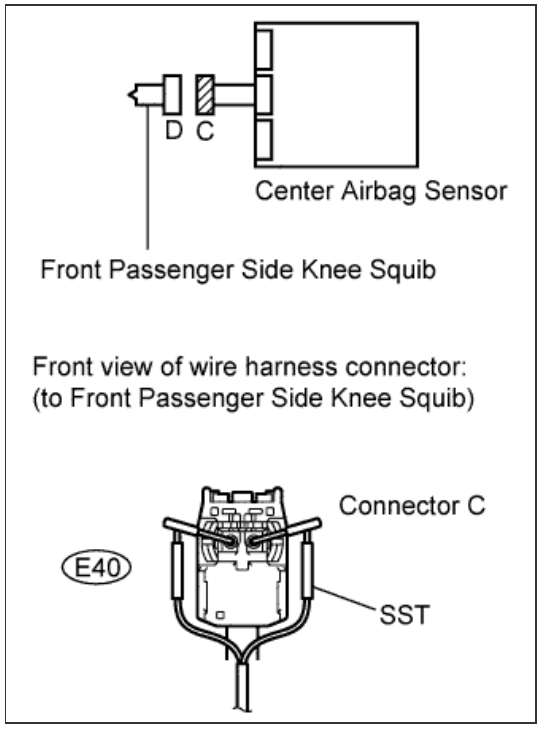

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the front passenger side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (FRONT PASSENGER KNEE SQUIB CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E40-1 (PK+) - Body ground	Engine switch on (IG)	Below 1 V
E40-2 (PK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	1 MΩ or higher
E40-1 (PK+) - Body ground	Always	1 MΩ or higher
E40-2 (PK-) - Body	Always	1 MΩ or higher

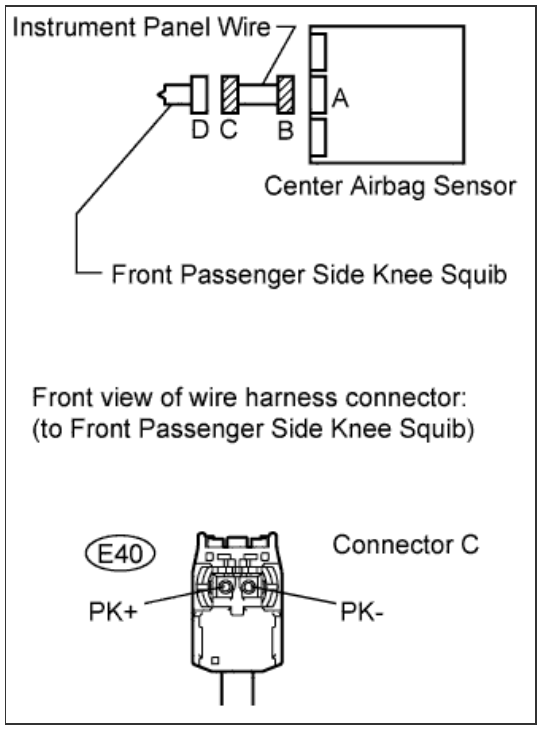

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

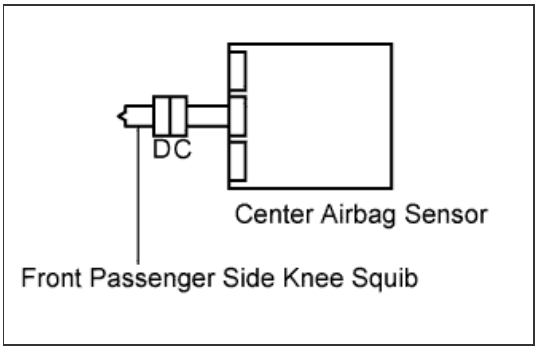

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1800/51 Short in Driver Side Squib Circuit

DTC B1801/51 Open in Driver Side Squib Circuit

DTC B1802/51 Short to GND in Driver Side Squib Circuit

DTC B1803/51 Short to B+ in Driver Side Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side squib circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1800/51	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib circuit during the primary check. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1801/51	When one of the following conditions is met: • The A center airbag sensor receives an open circuit signal in the driver side squib circuit for 2 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1802/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1803/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly

WIRING DIAGRAM

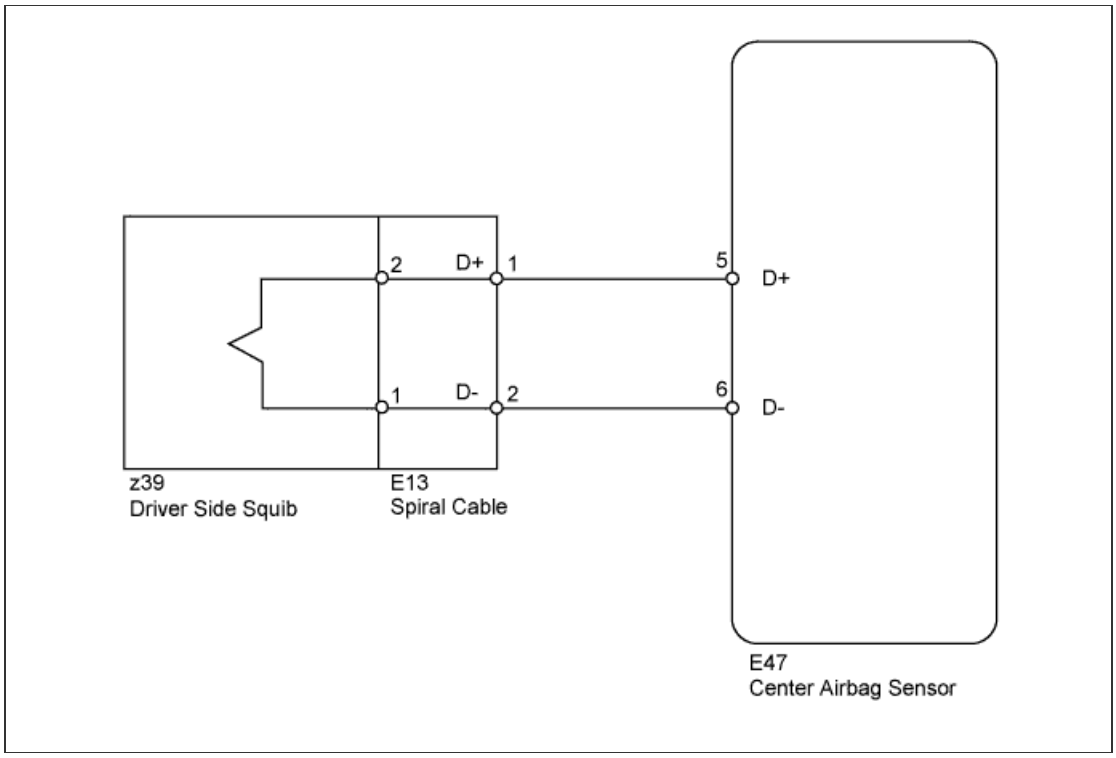

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB)

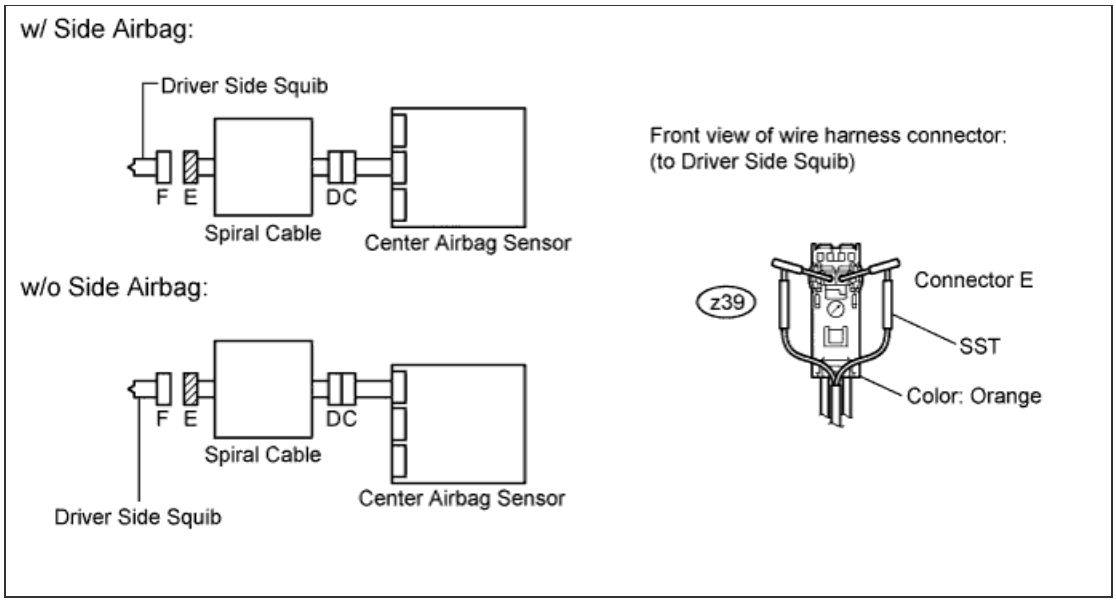

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib) for measurement, as this may lead to a serious injury due to airbag

deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB CIRCUIT

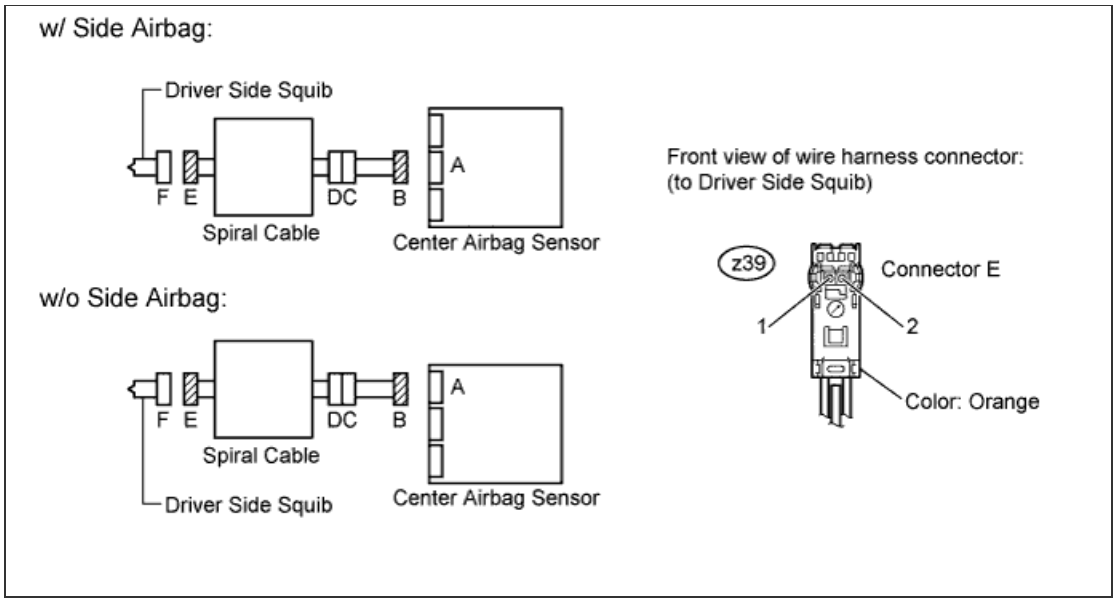

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z39-1 - Body ground	Engine switch on (IG)	Below 1 V
z39-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	1 MΩ or higher
z39-1 - Body ground	Always	1 MΩ or higher
z39-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

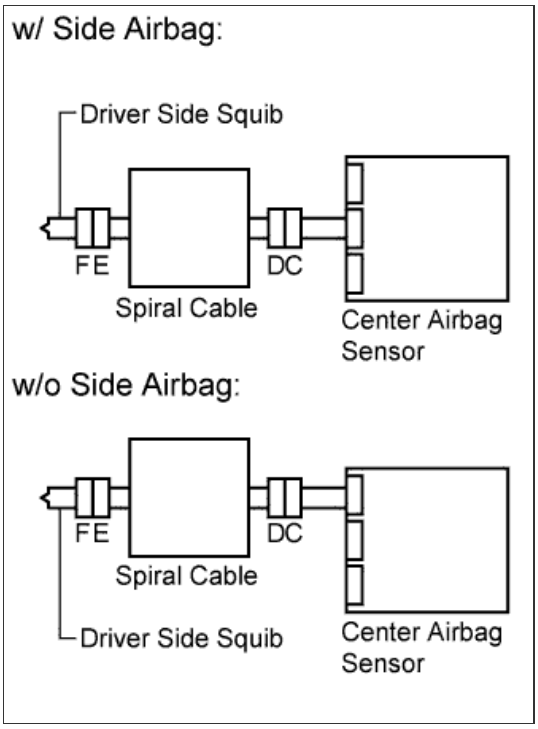


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

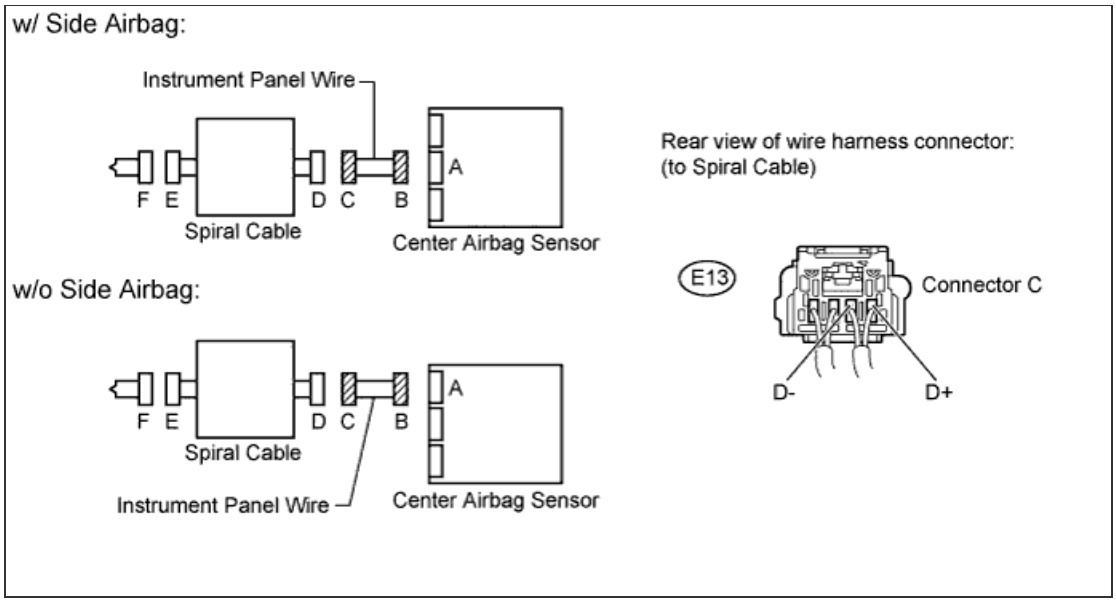

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-1 (D+) - Body ground	Engine switch on (IG)	Below 1 V
E13-2 (D-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	1 MΩ or higher
E13-1 (D+) - Body ground	Always	1 MΩ or higher
E13-2 (D-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK

REPLACE SPIRAL CABLE (Click here)

DTC B1865/65 Short in Front Passenger Side Knee Airbag Squib Circuit

DTC B1866/65 Open in Front Passenger Side Knee Airbag Squib Circuit

DTC B1867/65 Short to GND in Front Passenger Side Knee Airbag Squib Circuit

DTC B1868/65 Short to B+ in Front Passenger Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side knee airbag squib circuit consists of the center airbag sensor and the front passenger side knee airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1865/65	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side knee airbag squib circuit during the primary check. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1866/65	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side knee airbag squib circuit for 2 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1867/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1868/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

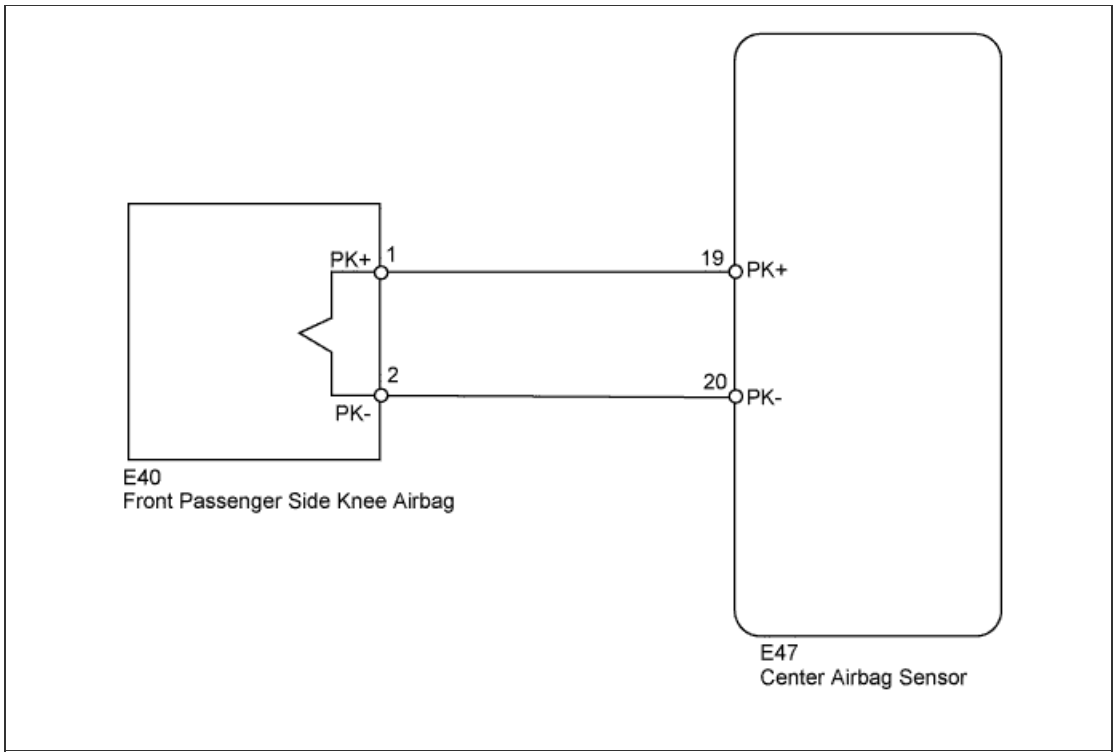

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER SIDE KNEE AIRBAG (FRONT PASSENGER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front passenger side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front passenger side knee airbag (front passenger side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

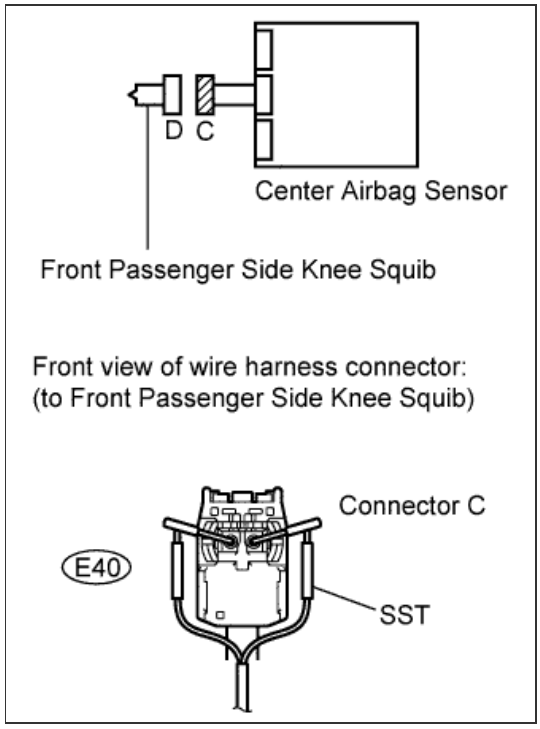

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the front passenger side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (FRONT PASSENGER KNEE SQUIB CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E40-1 (PK+) - Body ground	Engine switch on (IG)	Below 1 V
E40-2 (PK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	1 MΩ or higher
E40-1 (PK+) - Body ground	Always	1 MΩ or higher
E40-2 (PK-) - Body	Always	1 MΩ or higher

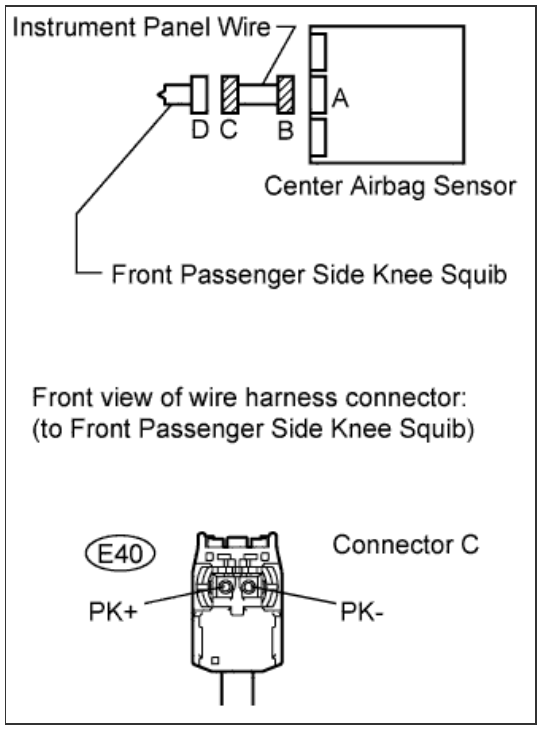

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

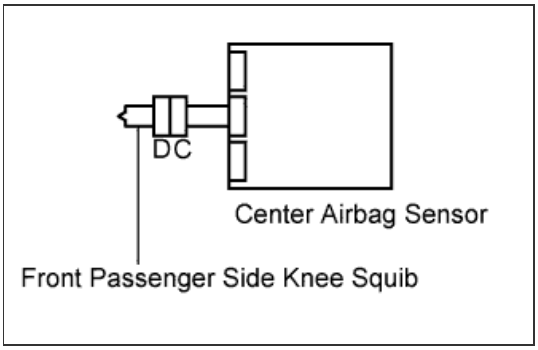

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1800/51 Short in Driver Side Squib Circuit

DTC B1801/51 Open in Driver Side Squib Circuit

DTC B1802/51 Short to GND in Driver Side Squib Circuit

DTC B1803/51 Short to B+ in Driver Side Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side squib circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1800/51	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib circuit during the primary check. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1801/51	When one of the following conditions is met: • The A center airbag sensor receives an open circuit signal in the driver side squib circuit for 2 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1802/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1803/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly

WIRING DIAGRAM

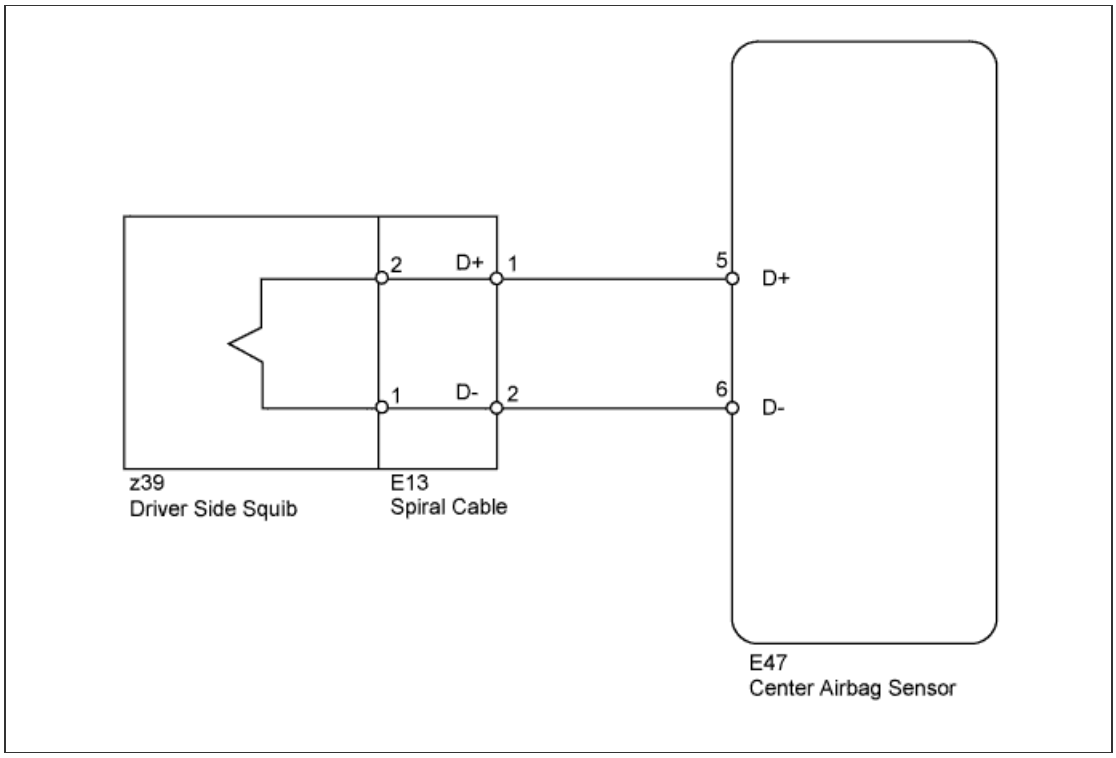

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB)

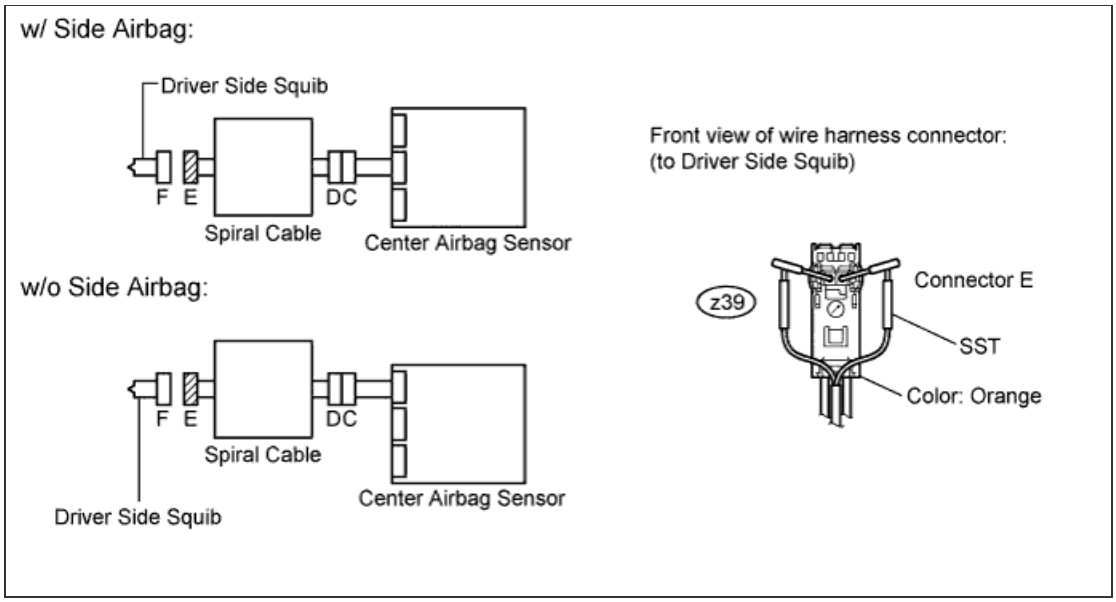

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib) for measurement, as this may lead to a serious injury due to airbag

deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB CIRCUIT

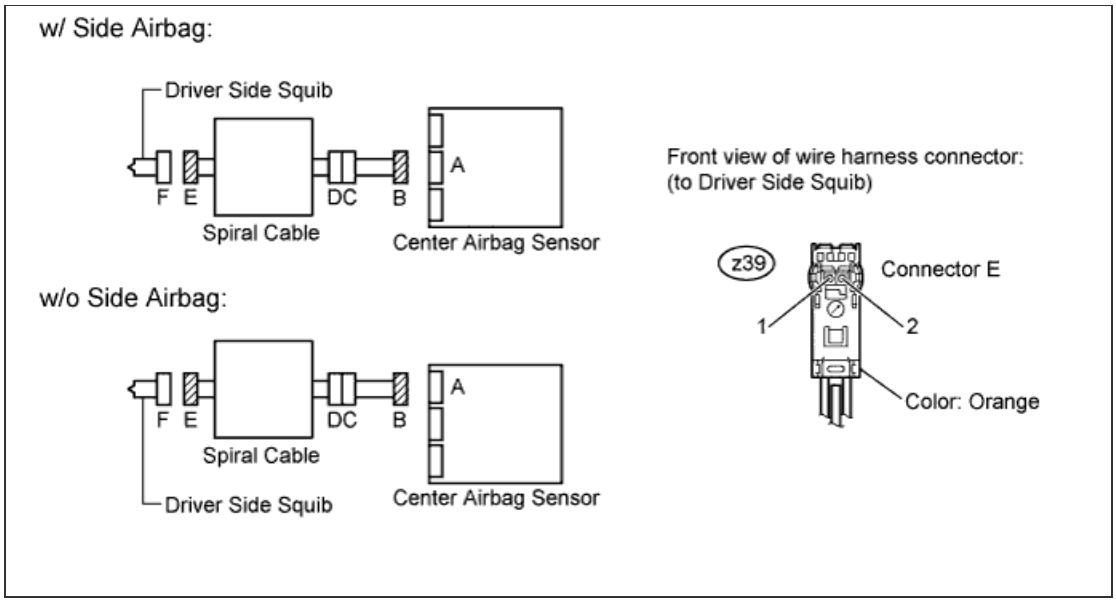

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z39-1 - Body ground	Engine switch on (IG)	Below 1 V
z39-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	1 MΩ or higher
z39-1 - Body ground	Always	1 MΩ or higher
z39-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

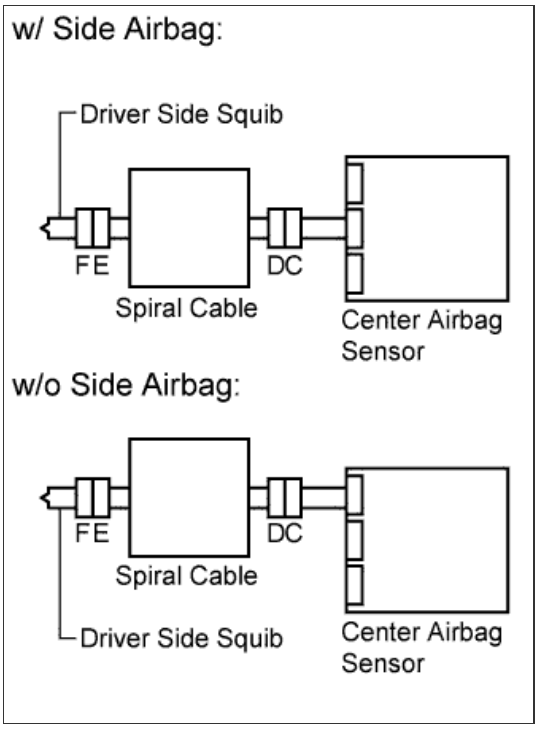


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

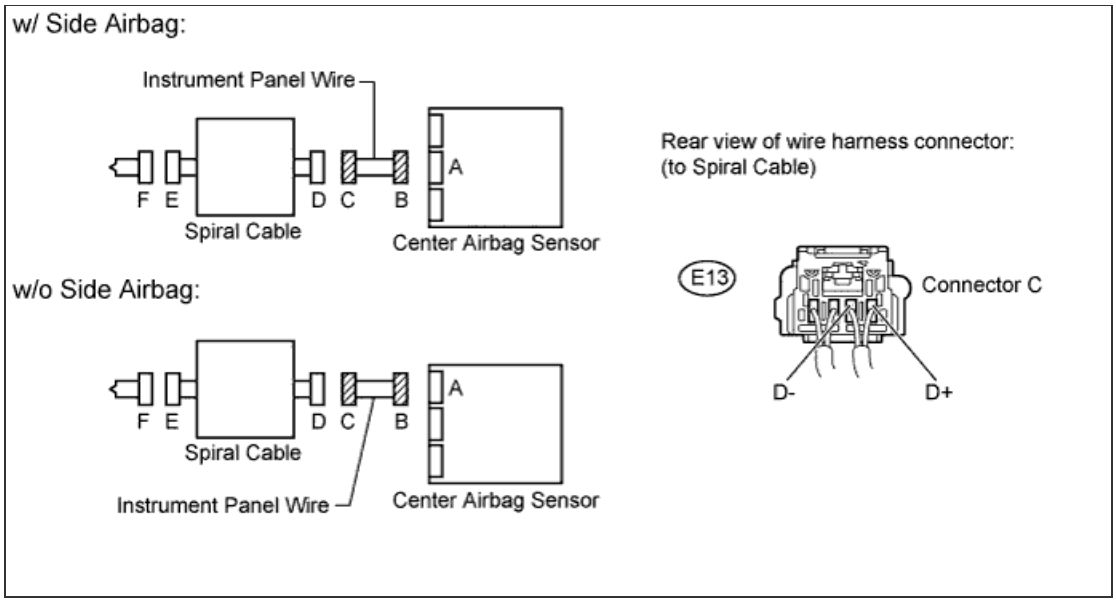

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-1 (D+) - Body ground	Engine switch on (IG)	Below 1 V
E13-2 (D-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	1 MΩ or higher
E13-1 (D+) - Body ground	Always	1 MΩ or higher
E13-2 (D-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK

REPLACE SPIRAL CABLE (Click here)

DTC B1865/65 Short in Front Passenger Side Knee Airbag Squib Circuit

DTC B1866/65 Open in Front Passenger Side Knee Airbag Squib Circuit

DTC B1867/65 Short to GND in Front Passenger Side Knee Airbag Squib Circuit

DTC B1868/65 Short to B+ in Front Passenger Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side knee airbag squib circuit consists of the center airbag sensor and the front passenger side knee airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1865/65	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side knee airbag squib circuit during the primary check. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1866/65	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side knee airbag squib circuit for 2 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1867/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1868/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

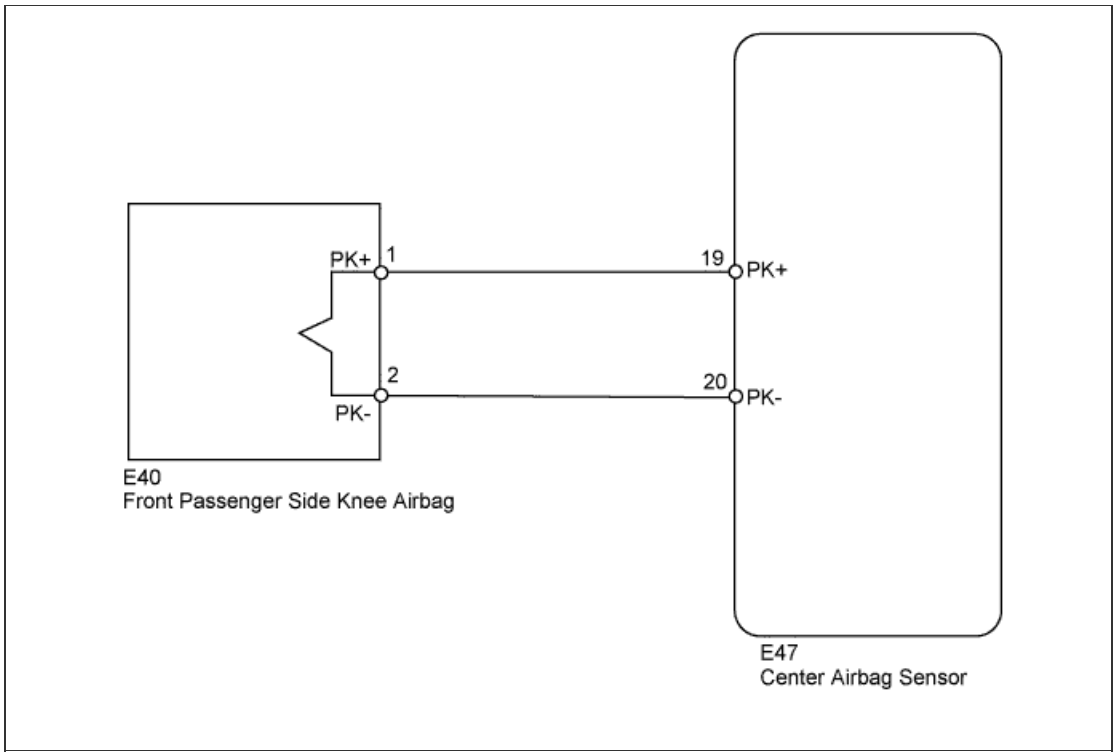

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER SIDE KNEE AIRBAG (FRONT PASSENGER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front passenger side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front passenger side knee airbag (front passenger side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

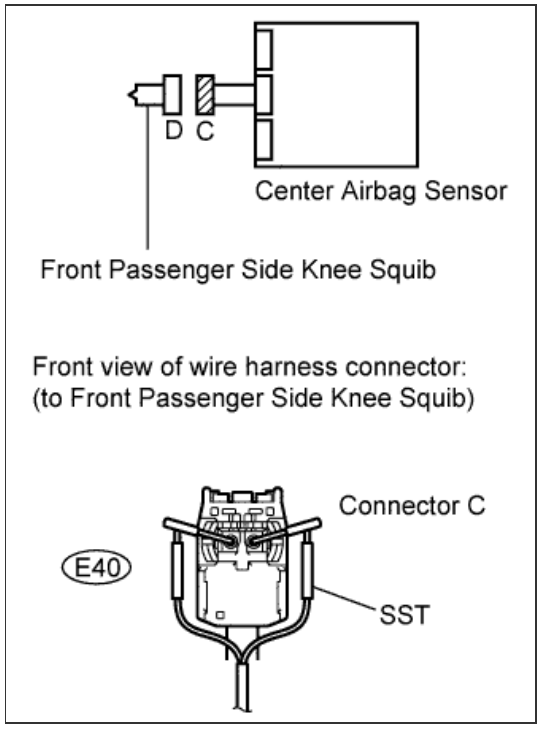

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the front passenger side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (FRONT PASSENGER KNEE SQUIB CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E40-1 (PK+) - Body ground	Engine switch on (IG)	Below 1 V
E40-2 (PK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	1 MΩ or higher
E40-1 (PK+) - Body ground	Always	1 MΩ or higher
E40-2 (PK-) - Body	Always	1 MΩ or higher

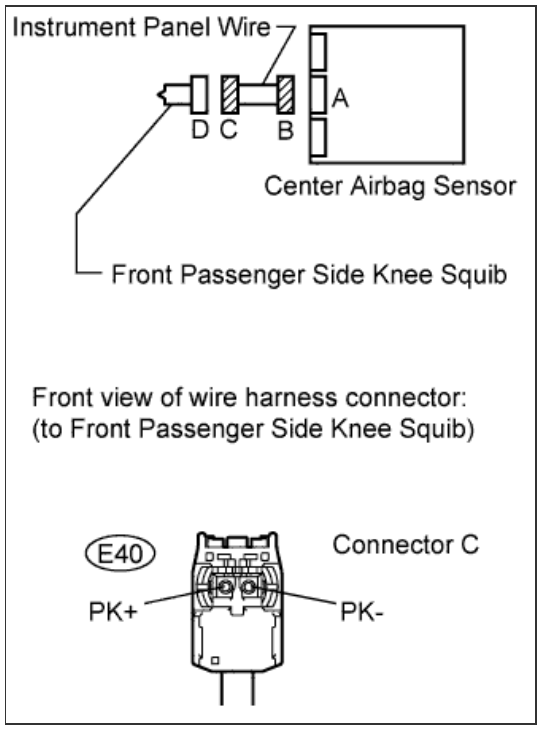

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

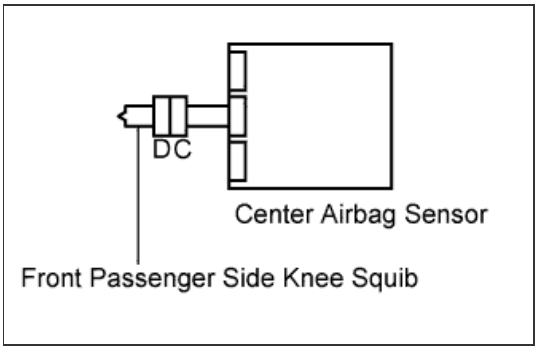

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1800/51 Short in Driver Side Squib Circuit

DTC B1801/51 Open in Driver Side Squib Circuit

DTC B1802/51 Short to GND in Driver Side Squib Circuit

DTC B1803/51 Short to B+ in Driver Side Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side squib circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1800/51	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib circuit during the primary check. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1801/51	When one of the following conditions is met: • The A center airbag sensor receives an open circuit signal in the driver side squib circuit for 2 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1802/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1803/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly

WIRING DIAGRAM

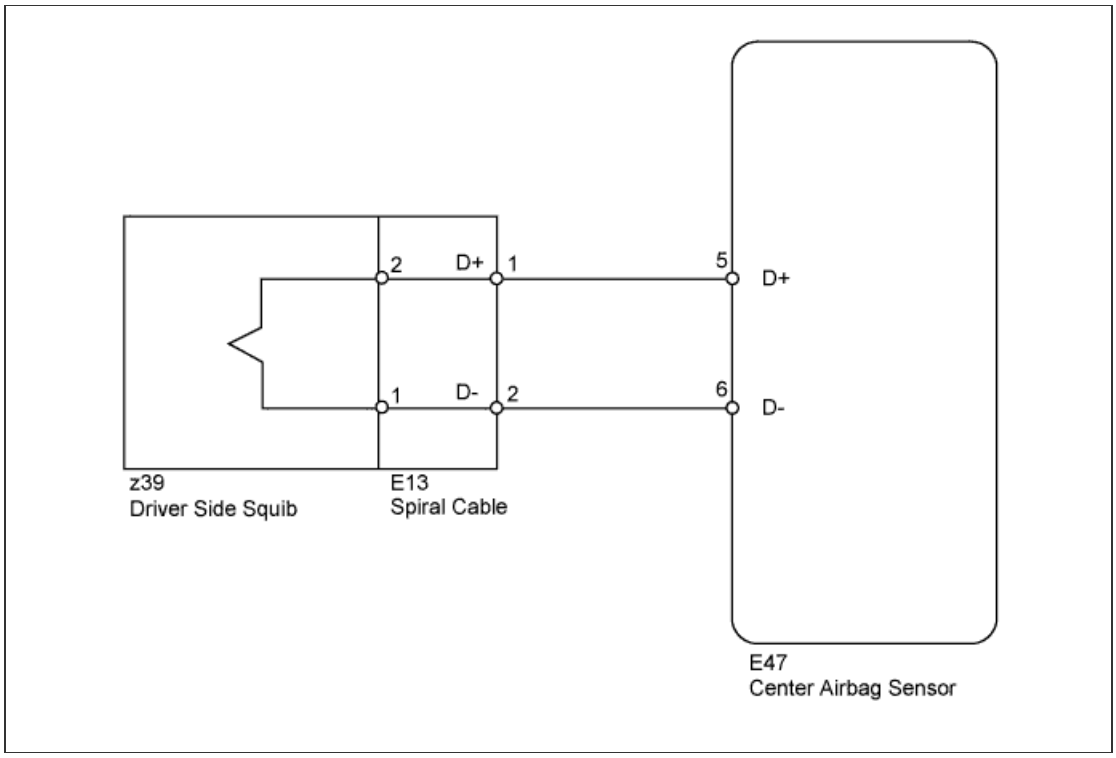

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB)

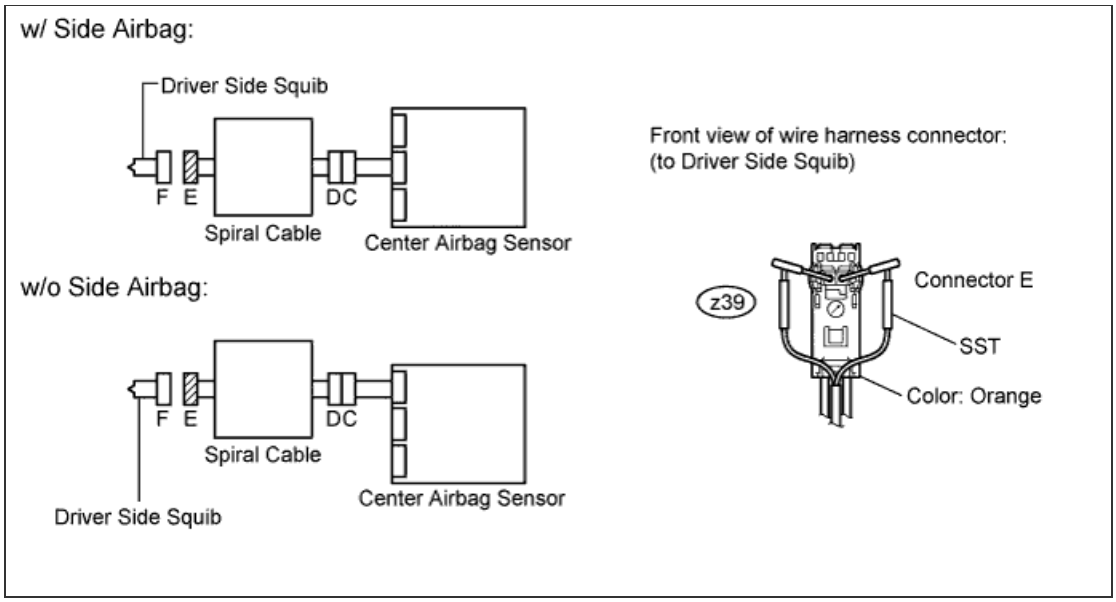

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib) for measurement, as this may lead to a serious injury due to airbag

deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB CIRCUIT

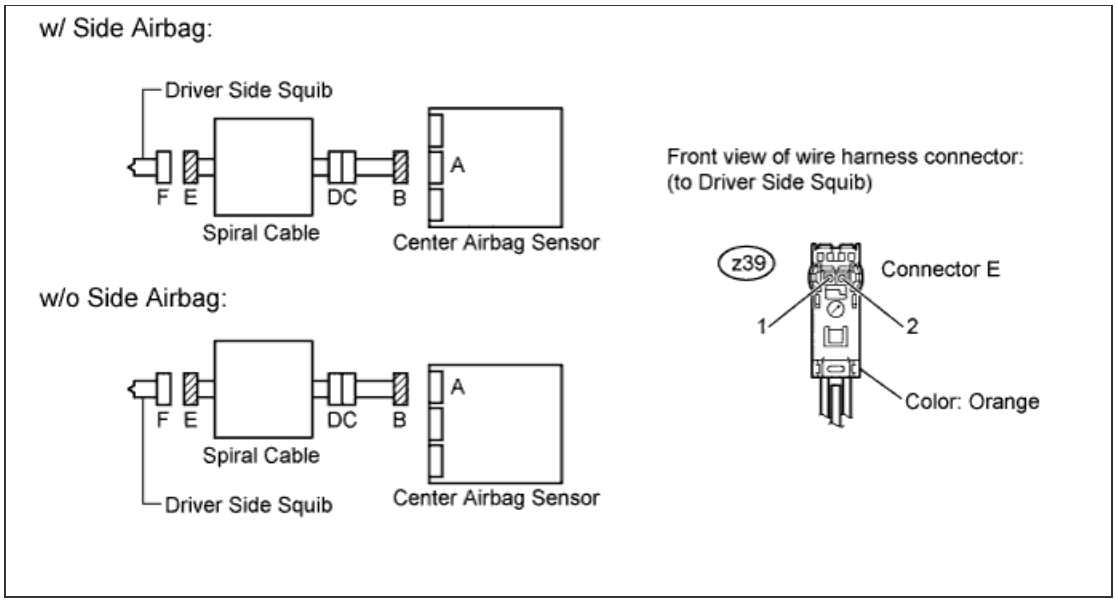

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z39-1 - Body ground	Engine switch on (IG)	Below 1 V
z39-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	1 MΩ or higher
z39-1 - Body ground	Always	1 MΩ or higher
z39-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

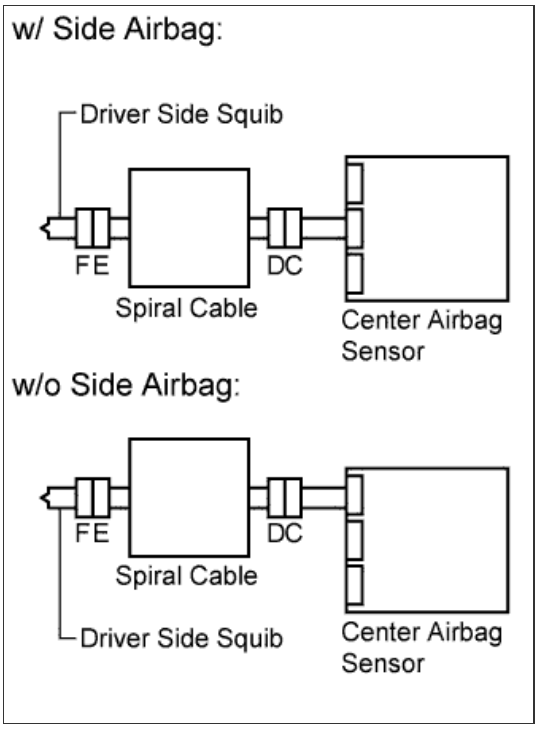


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

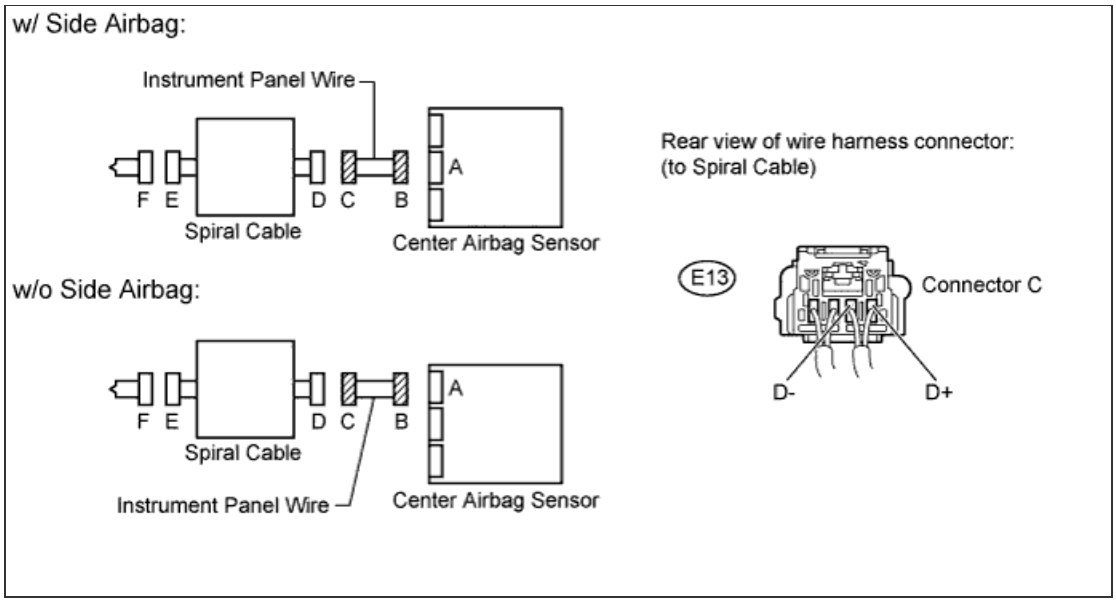

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-1 (D+) - Body ground	Engine switch on (IG)	Below 1 V
E13-2 (D-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	1 MΩ or higher
E13-1 (D+) - Body ground	Always	1 MΩ or higher
E13-2 (D-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK

REPLACE SPIRAL CABLE (Click here)

DTC B1865/65 Short in Front Passenger Side Knee Airbag Squib Circuit

DTC B1866/65 Open in Front Passenger Side Knee Airbag Squib Circuit

DTC B1867/65 Short to GND in Front Passenger Side Knee Airbag Squib Circuit

DTC B1868/65 Short to B+ in Front Passenger Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side knee airbag squib circuit consists of the center airbag sensor and the front passenger side knee airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1865/65	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side knee airbag squib circuit during the primary check. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1866/65	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side knee airbag squib circuit for 2 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1867/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1868/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

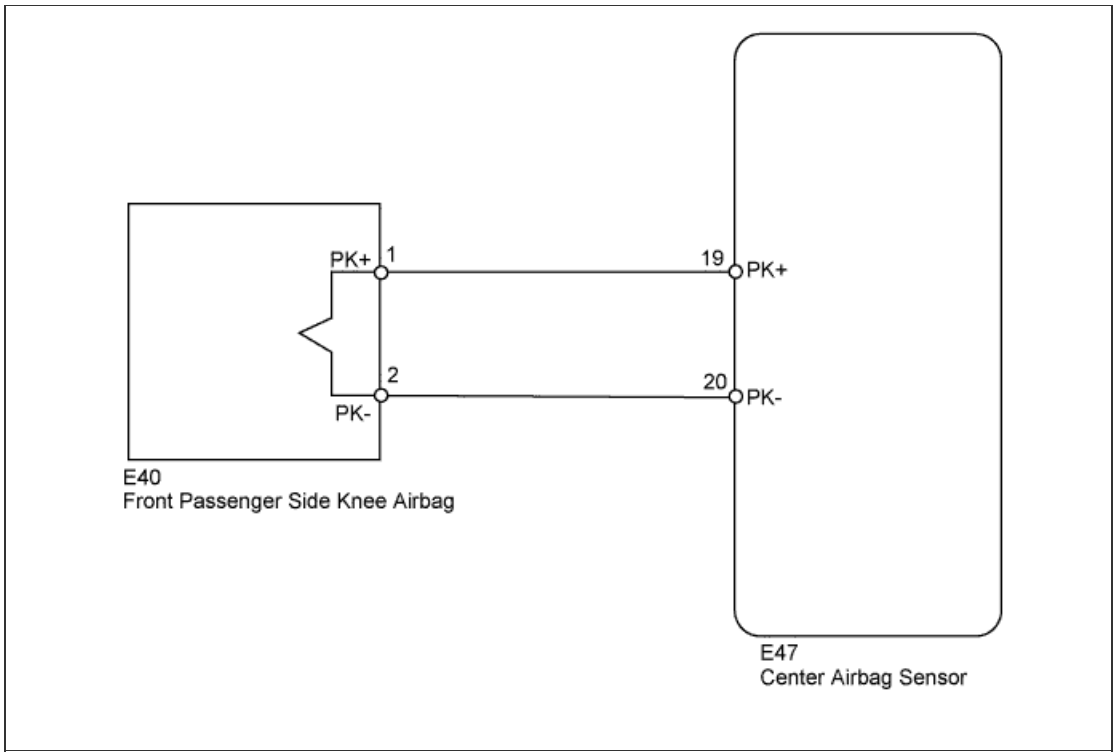

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER SIDE KNEE AIRBAG (FRONT PASSENGER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front passenger side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front passenger side knee airbag (front passenger side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

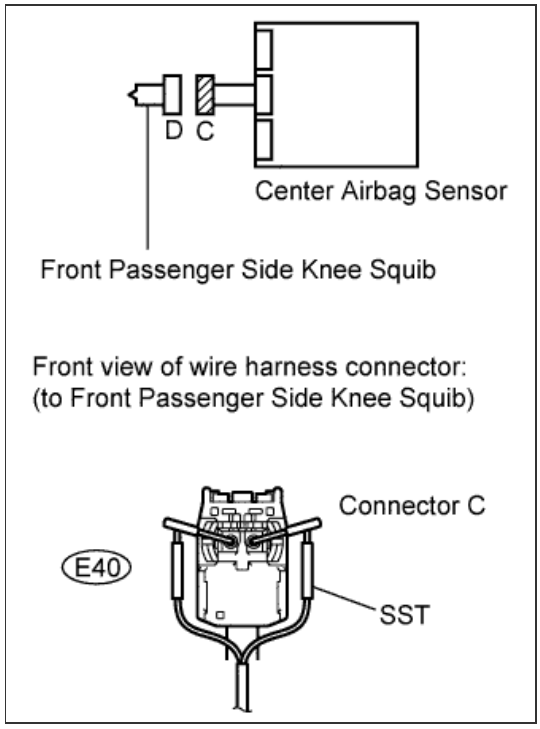

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the front passenger side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (FRONT PASSENGER KNEE SQUIB CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E40-1 (PK+) - Body ground	Engine switch on (IG)	Below 1 V
E40-2 (PK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	1 MΩ or higher
E40-1 (PK+) - Body ground	Always	1 MΩ or higher
E40-2 (PK-) - Body	Always	1 MΩ or higher

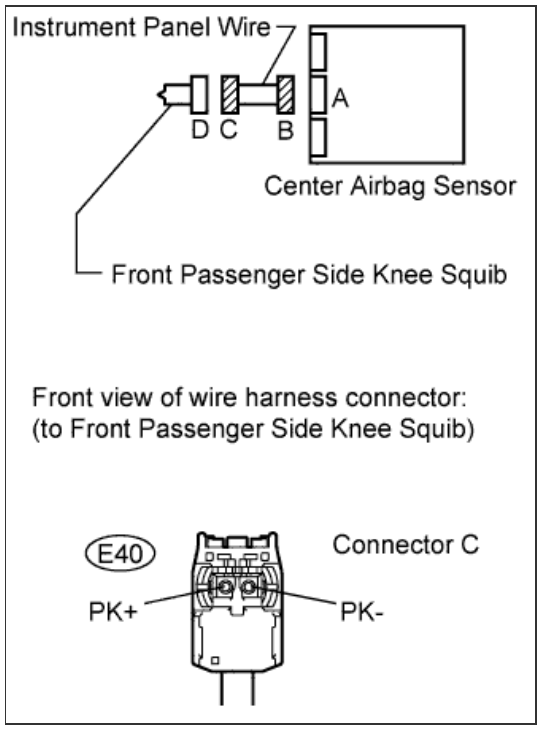

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

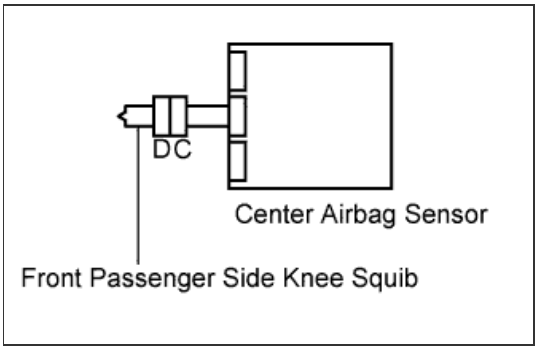

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1800/51 Short in Driver Side Squib Circuit

DTC B1801/51 Open in Driver Side Squib Circuit

DTC B1802/51 Short to GND in Driver Side Squib Circuit

DTC B1803/51 Short to B+ in Driver Side Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side squib circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1800/51	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib circuit during the primary check. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1801/51	When one of the following conditions is met: • The A center airbag sensor receives an open circuit signal in the driver side squib circuit for 2 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1802/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1803/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly

WIRING DIAGRAM

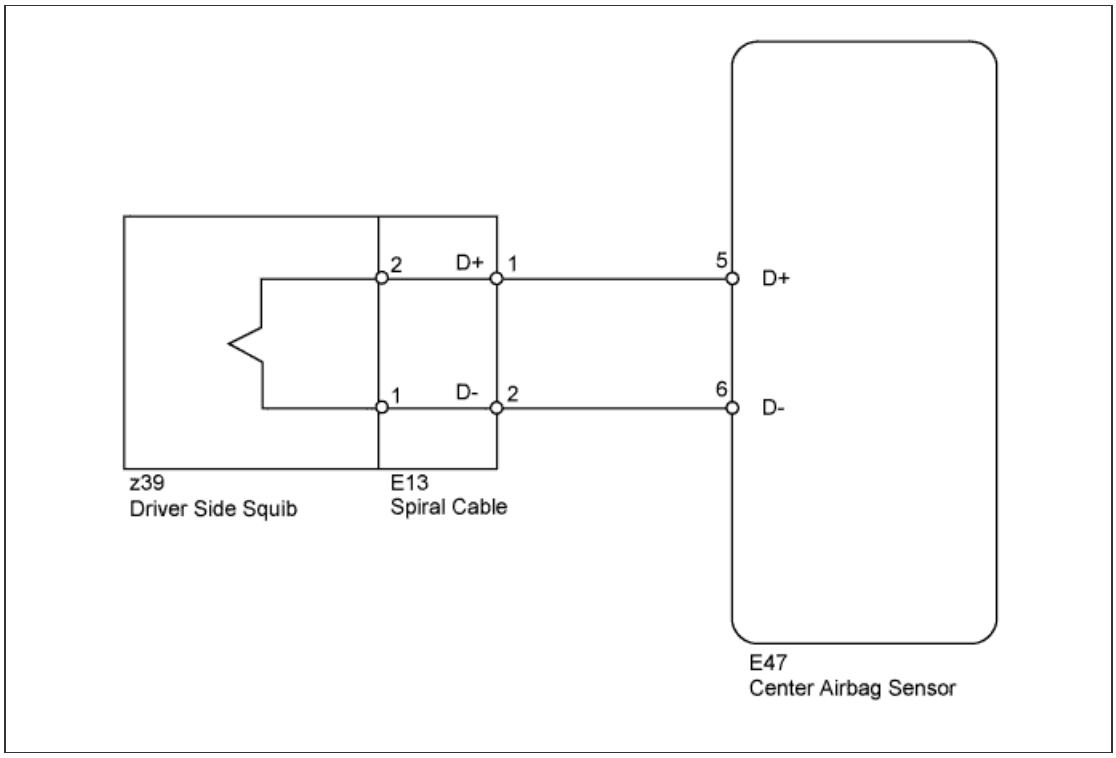

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB)

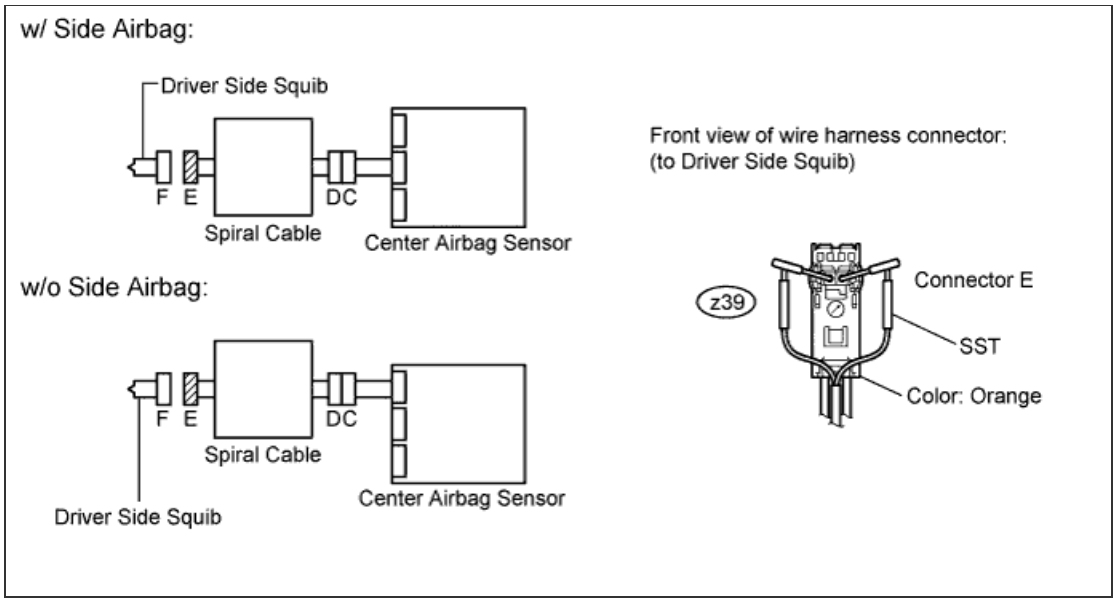

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib) for measurement, as this may lead to a serious injury due to airbag

deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB CIRCUIT

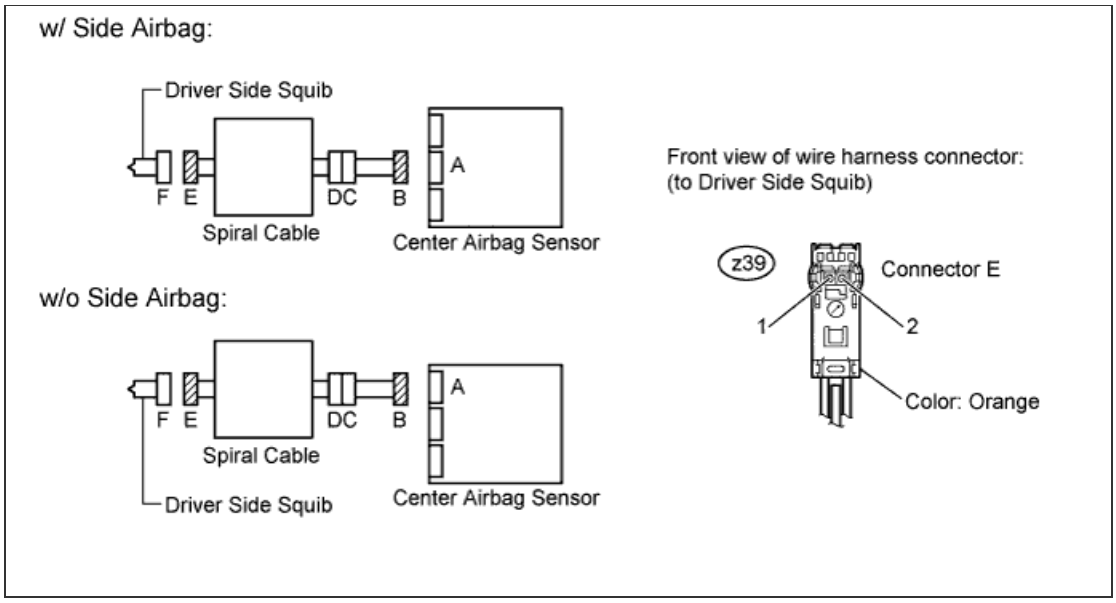

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z39-1 - Body ground	Engine switch on (IG)	Below 1 V
z39-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	1 MΩ or higher
z39-1 - Body ground	Always	1 MΩ or higher
z39-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

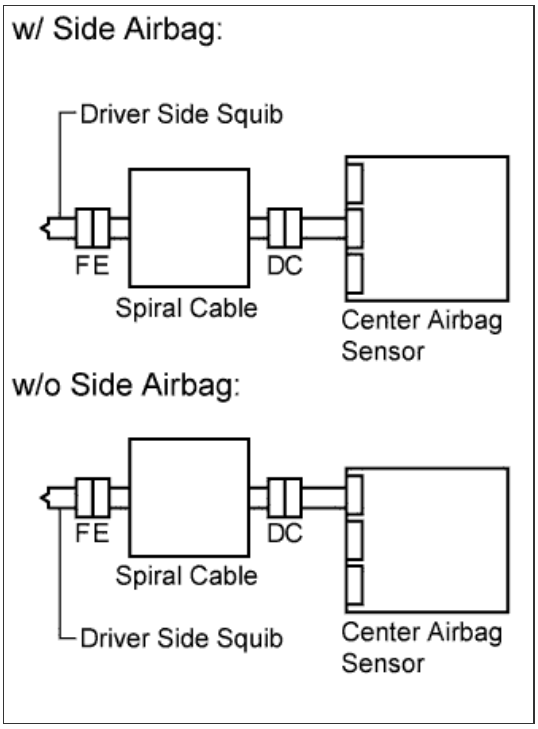


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

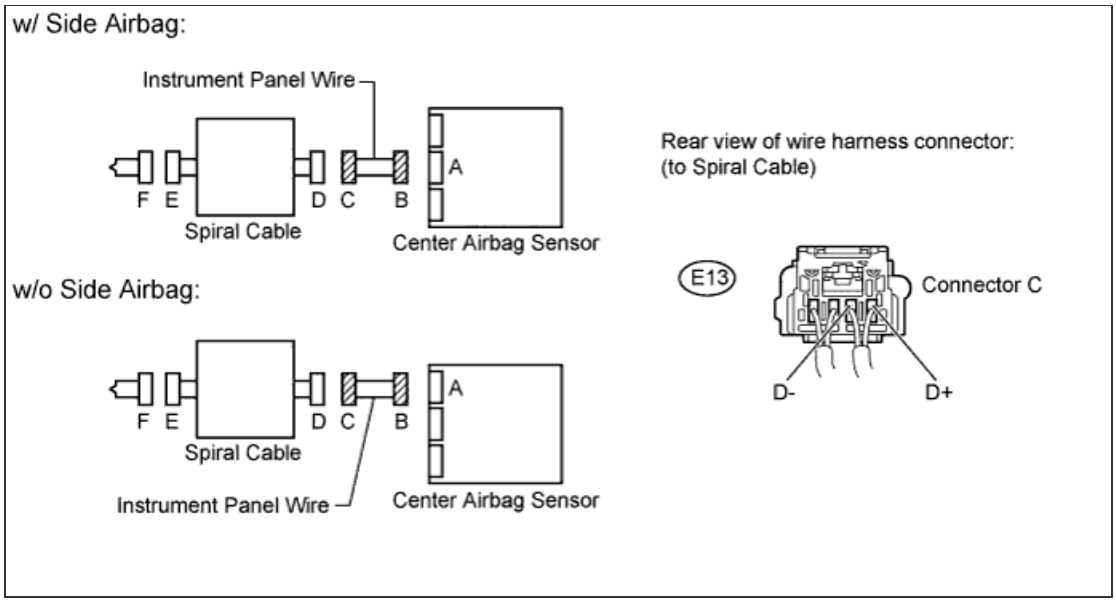

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-1 (D+) - Body ground	Engine switch on (IG)	Below 1 V
E13-2 (D-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	1 MΩ or higher
E13-1 (D+) - Body ground	Always	1 MΩ or higher
E13-2 (D-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK

REPLACE SPIRAL CABLE (Click here)

DTC B1865/65 Short in Front Passenger Side Knee Airbag Squib Circuit

DTC B1866/65 Open in Front Passenger Side Knee Airbag Squib Circuit

DTC B1867/65 Short to GND in Front Passenger Side Knee Airbag Squib Circuit

DTC B1868/65 Short to B+ in Front Passenger Side Knee Airbag Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side knee airbag squib circuit consists of the center airbag sensor and the front passenger side knee airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side knee airbag squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1865/65	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side knee airbag squib circuit during the primary check. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1866/65	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side knee airbag squib circuit for 2 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1867/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly
B1868/65	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side knee airbag squib circuit for 0.5 seconds. • A front passenger side knee airbag squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Front passenger side knee airbag assembly (Front passenger side knee squib) • Center airbag sensor assembly

WIRING DIAGRAM

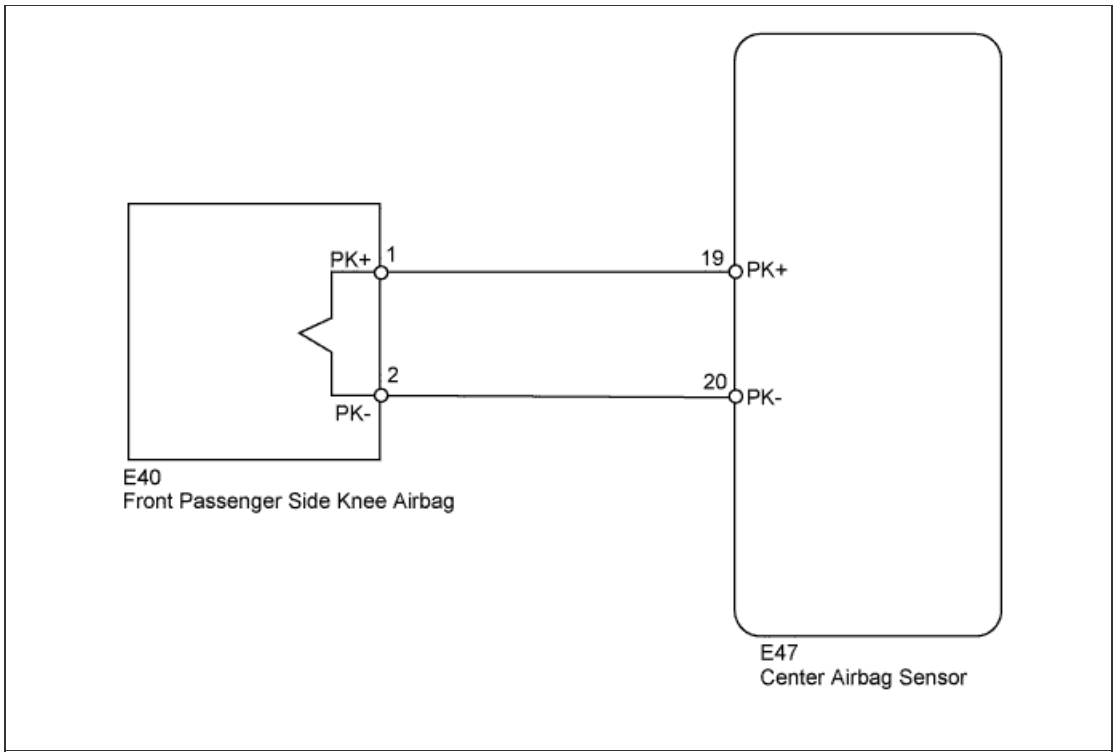

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER SIDE KNEE AIRBAG (FRONT PASSENGER SIDE KNEE SQUIB)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front passenger side knee airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front passenger side knee airbag (front passenger side knee squib) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

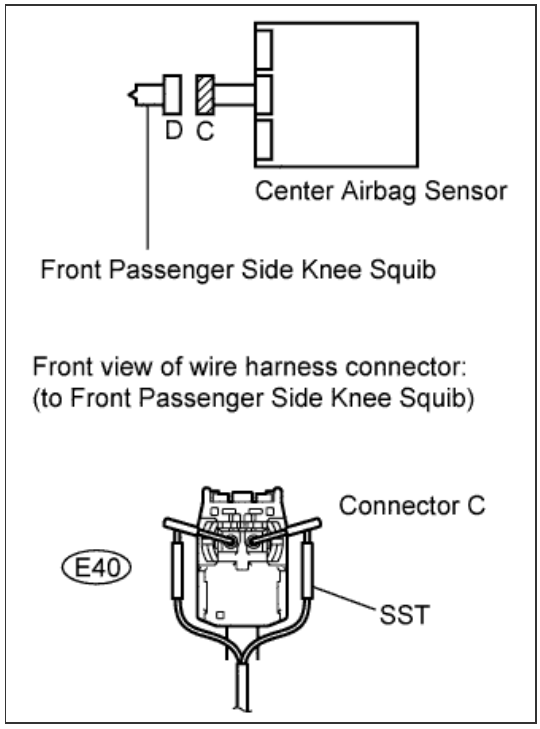

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the instrument panel wire connector (on the front passenger side knee airbag side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE

OK

3.CHECK INSTRUMENT PANEL WIRE (FRONT PASSENGER KNEE SQUIB CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E40-1 (PK+) - Body ground	Engine switch on (IG)	Below 1 V
E40-2 (PK-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E40-1 (PK+) - E40-2 (PK-)	Always	1 MΩ or higher
E40-1 (PK+) - Body ground	Always	1 MΩ or higher
E40-2 (PK-) - Body	Always	1 MΩ or higher

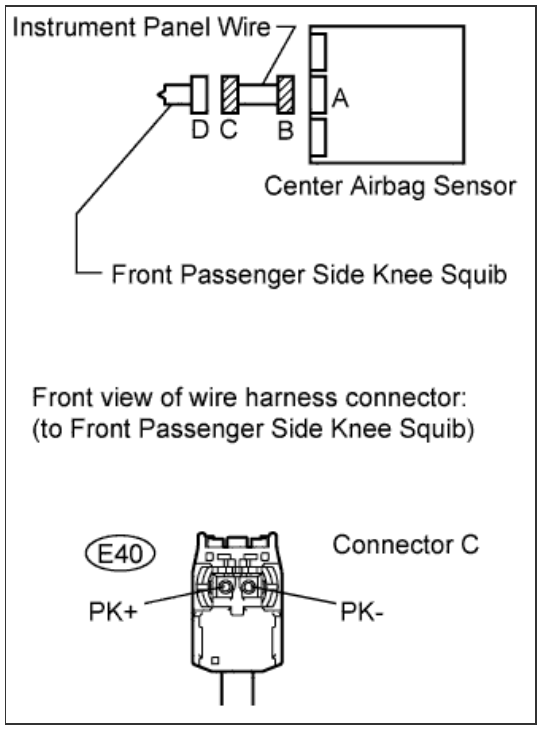

ground		

NG → REPLACE INSTRUMENT PANEL WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger side knee airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

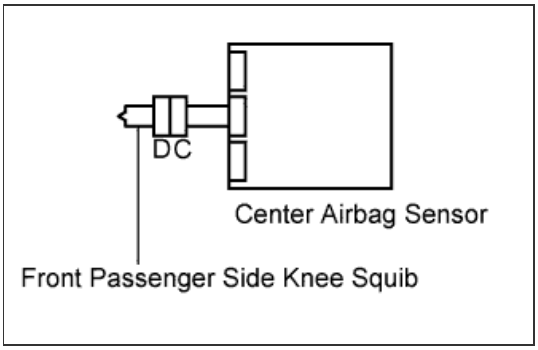

OK:

DTC B1865, B1866, B1867 or B1868 is not output.

HINT:

Codes other than DTC B1865, B1866, B1867 and B1868 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1800/51 Short in Driver Side Squib Circuit

DTC B1801/51 Open in Driver Side Squib Circuit

DTC B1802/51 Short to GND in Driver Side Squib Circuit

DTC B1803/51 Short to B+ in Driver Side Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side squib circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1800/51	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib circuit during the primary check. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1801/51	When one of the following conditions is met: • The A center airbag sensor receives an open circuit signal in the driver side squib circuit for 2 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1802/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1803/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly

WIRING DIAGRAM

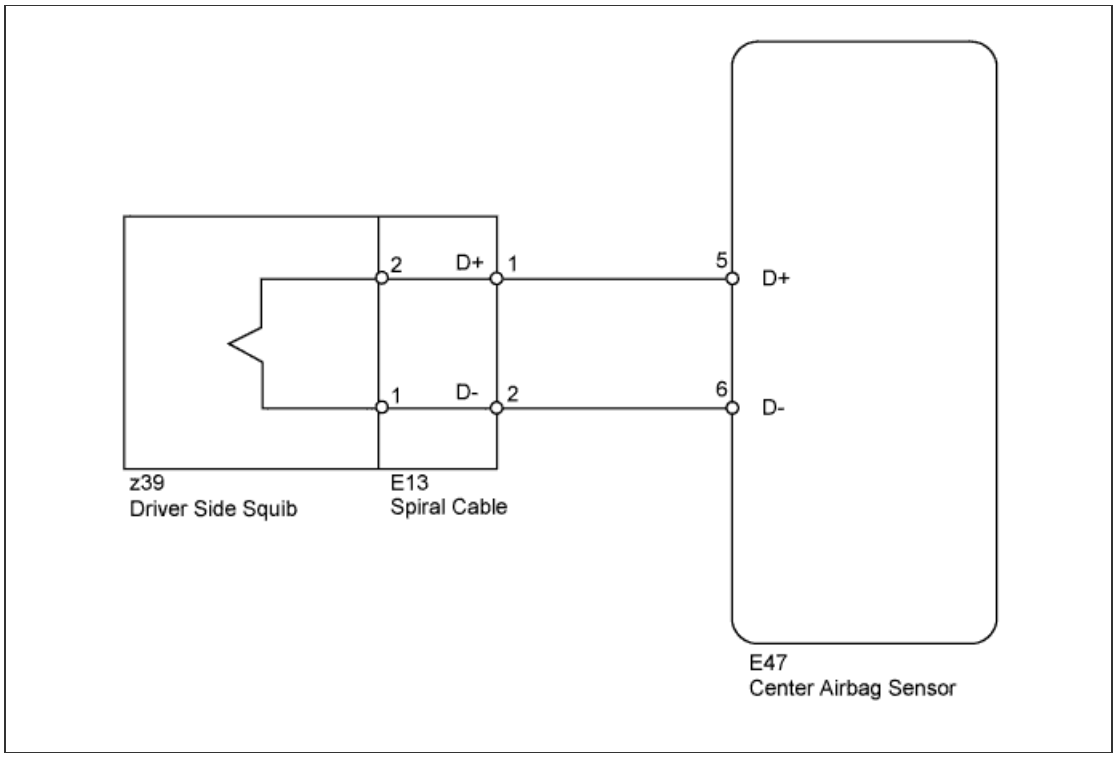

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB)

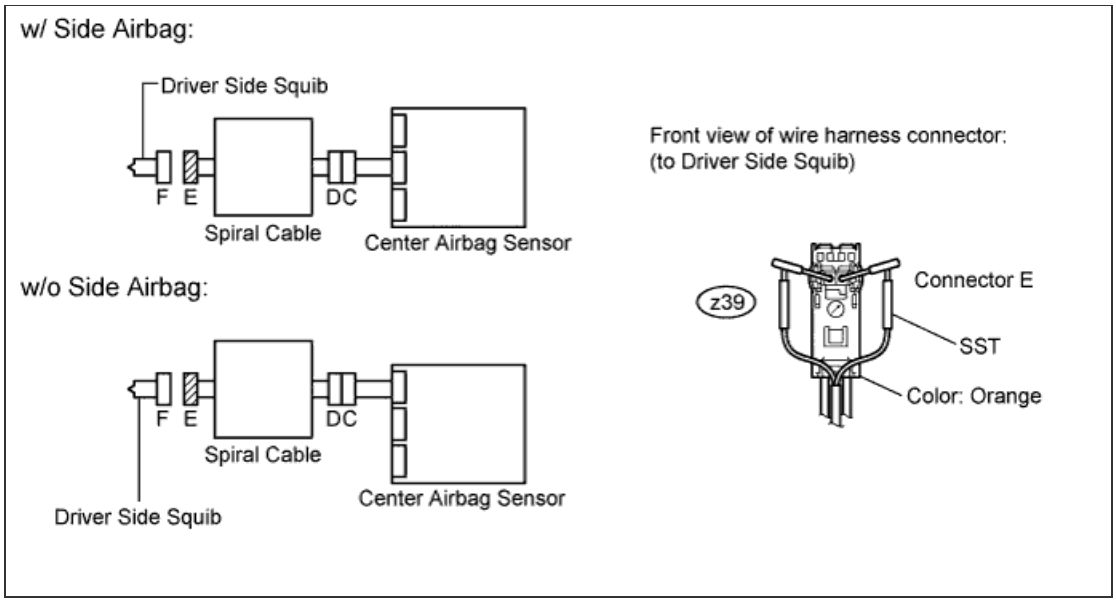

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib) for measurement, as this may lead to a serious injury due to airbag

deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB CIRCUIT

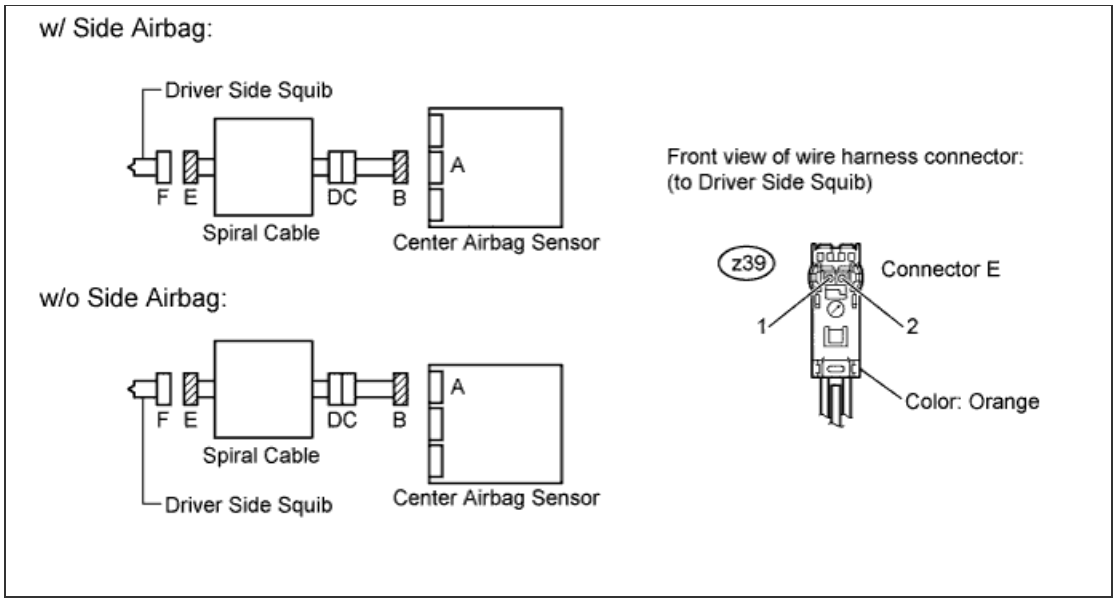

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z39-1 - Body ground	Engine switch on (IG)	Below 1 V
z39-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	1 MΩ or higher
z39-1 - Body ground	Always	1 MΩ or higher
z39-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

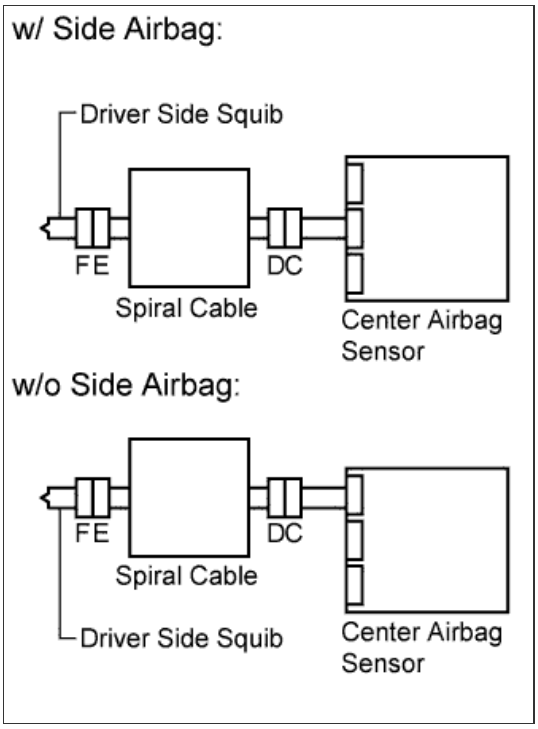


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

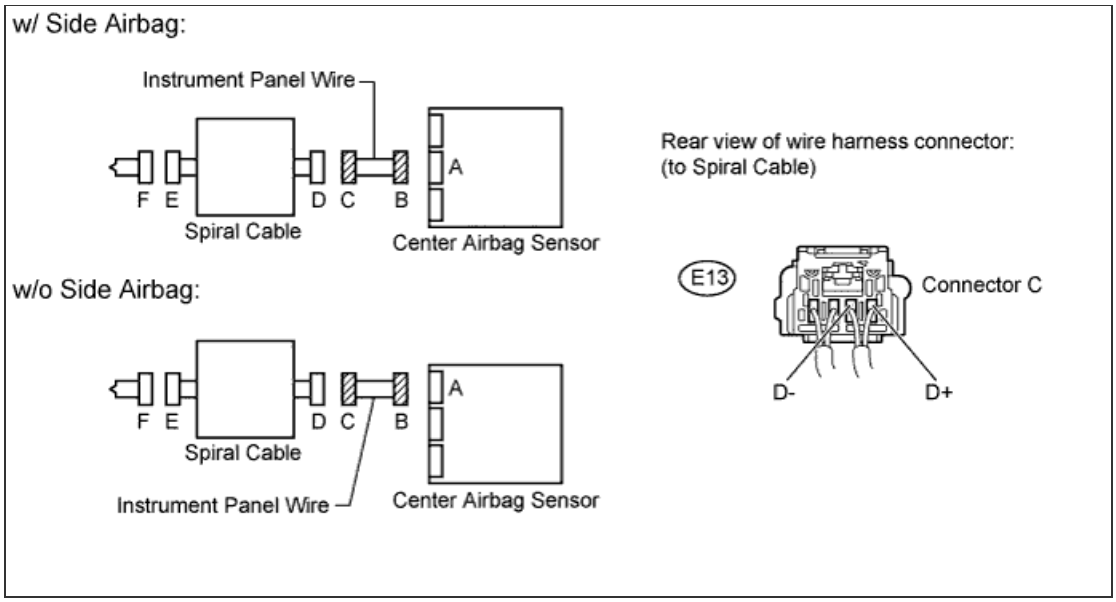

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-1 (D+) - Body ground	Engine switch on (IG)	Below 1 V
E13-2 (D-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	1 MΩ or higher
E13-1 (D+) - Body ground	Always	1 MΩ or higher
E13-2 (D-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK

REPLACE SPIRAL CABLE (Click here)

DTC B1900/73 Short in Front Pretensioner Squib RH Circuit

DTC B1901/73 Open in Front Pretensioner Squib RH Circuit

DTC B1902/73 Short to GND in Front Pretensioner Squib RH Circuit

DTC B1903/73 Short to B+ in Front Pretensioner Squib RH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib RH circuit consists of the center airbag sensor and the front seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1900/73	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib RH circuit during the primary check. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1901/73	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib RH circuit for 2 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1902/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1903/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

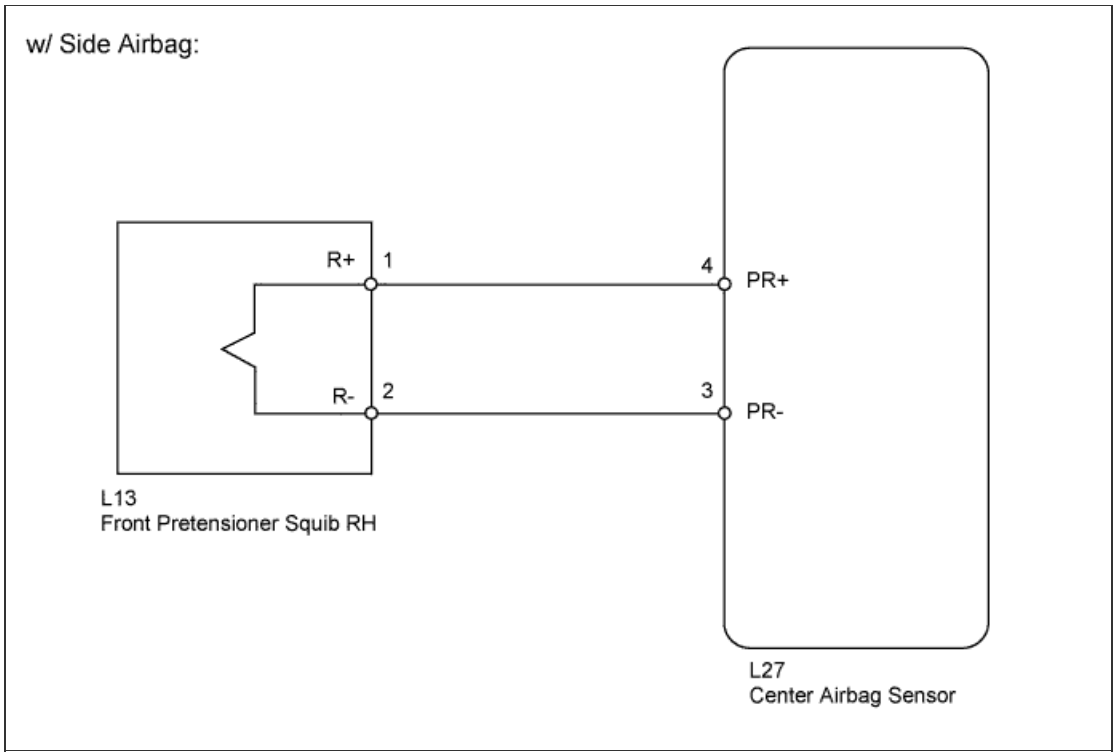

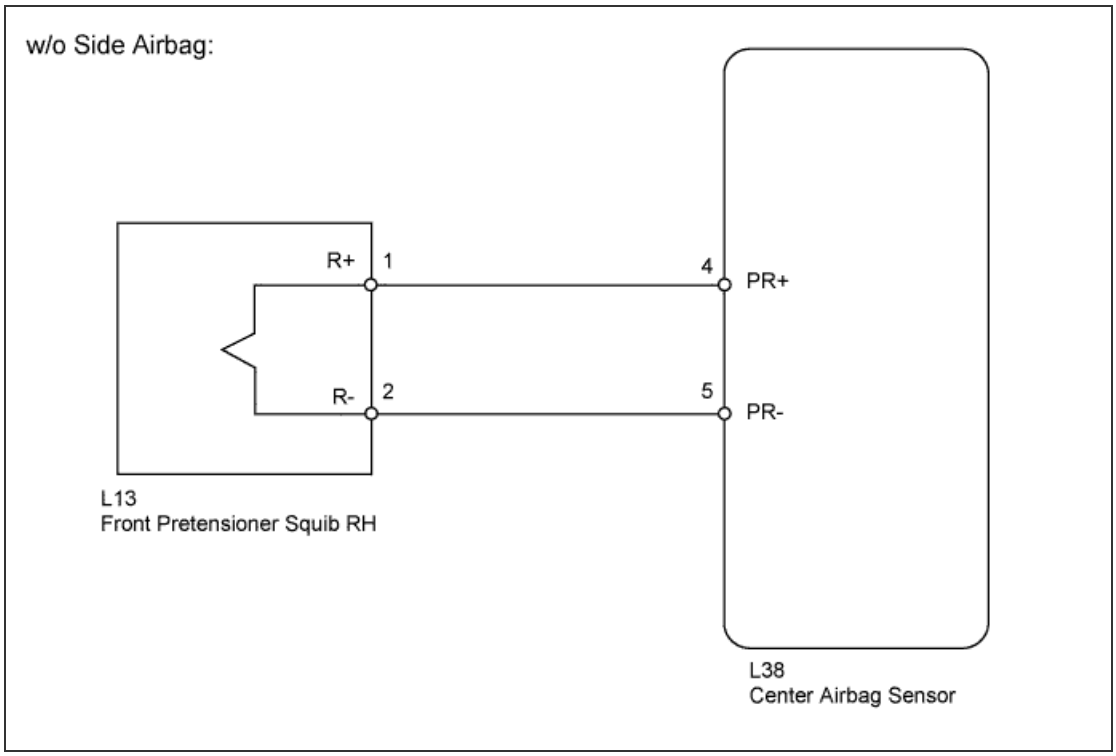

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT RH (FRONT PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the front seat outer belt RH (front pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

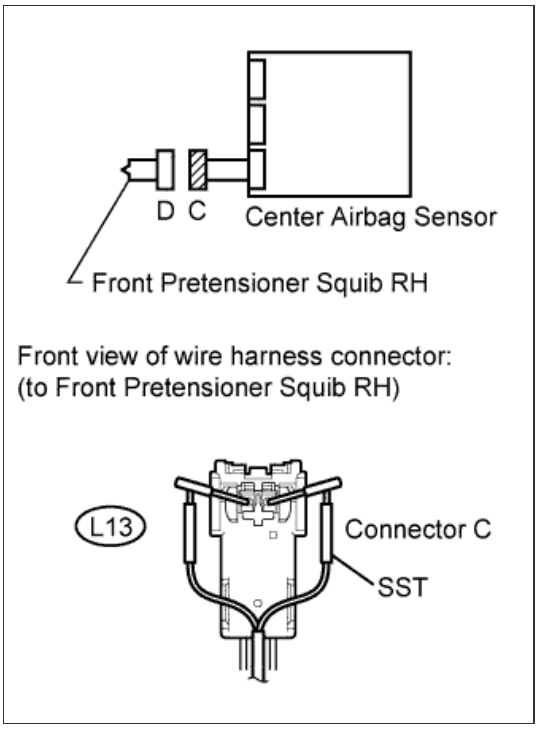

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the front seat outer belt RH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK →

3.CHECK NO. 2 FLOOR WIRE (FRONT PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L13-1 (R+) - Body ground	Engine switch on (IG)	Below 1 V

L13-2 (R-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	1 MΩ or higher
L13-1 (R+) - Body ground	Always	1 MΩ or higher
L13-2 (R-) - Body ground	Always	1 MΩ or higher

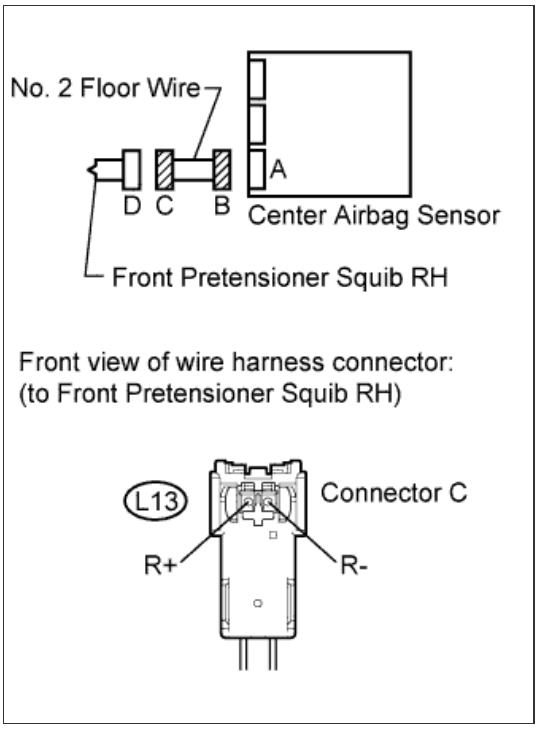

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

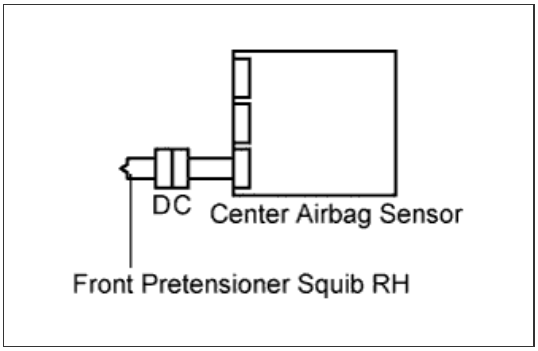

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1800/51 Short in Driver Side Squib Circuit

DTC B1801/51 Open in Driver Side Squib Circuit

DTC B1802/51 Short to GND in Driver Side Squib Circuit

DTC B1803/51 Short to B+ in Driver Side Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side squib circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1800/51	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib circuit during the primary check. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1801/51	When one of the following conditions is met: • The A center airbag sensor receives an open circuit signal in the driver side squib circuit for 2 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1802/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1803/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly

WIRING DIAGRAM

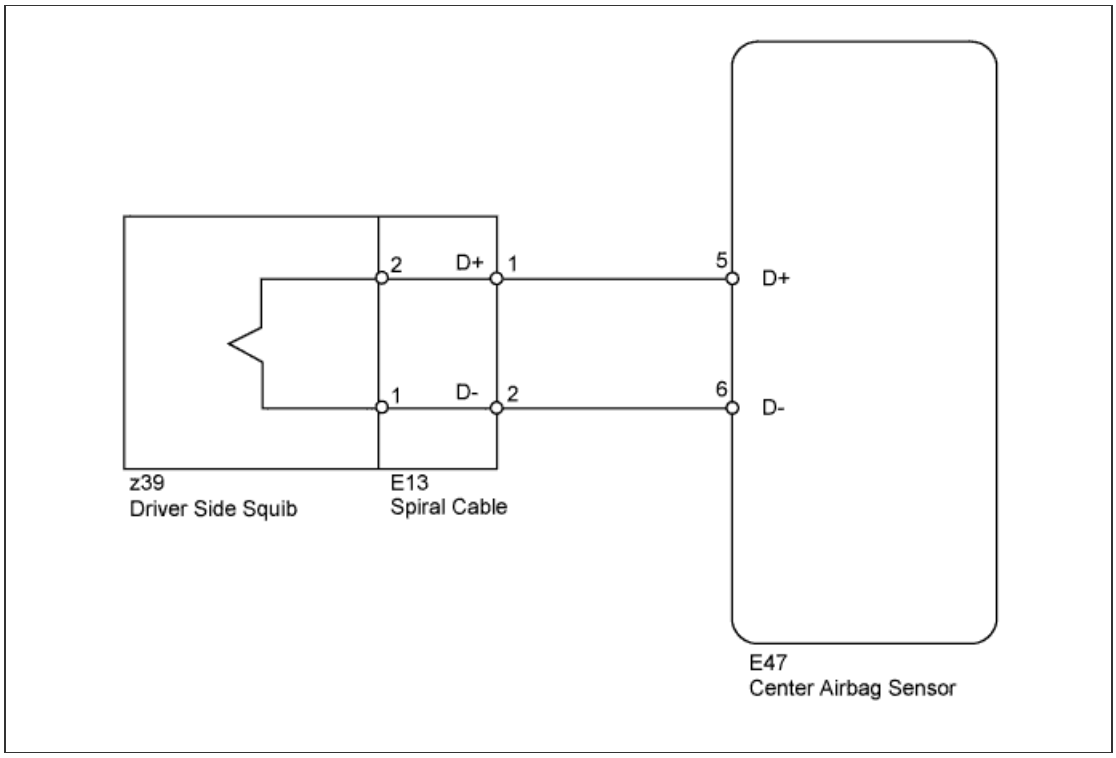

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB)

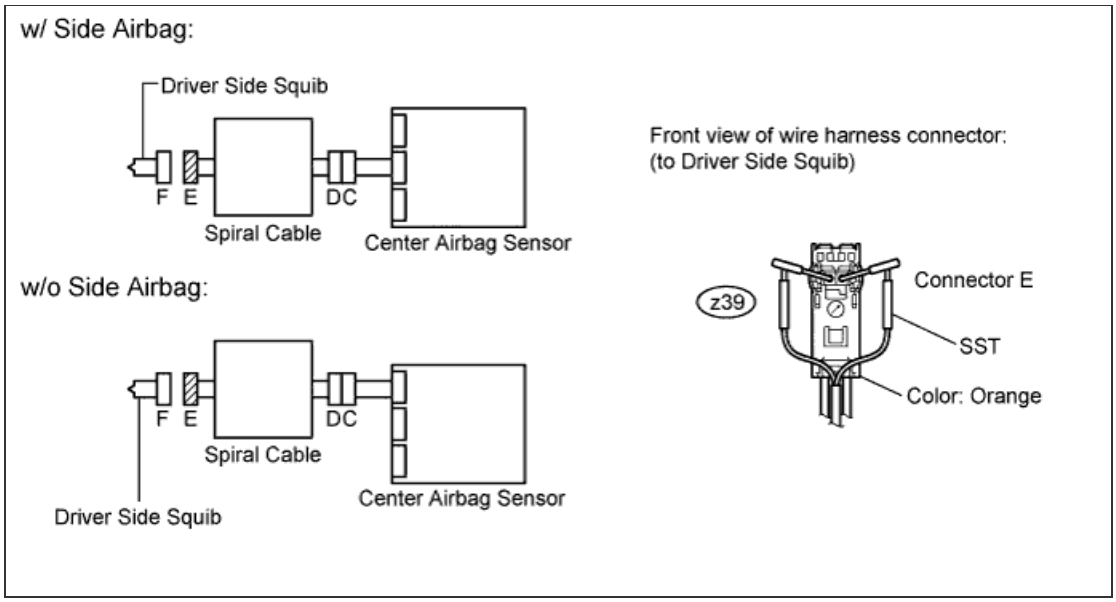

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib) for measurement, as this may lead to a serious injury due to airbag

deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB CIRCUIT

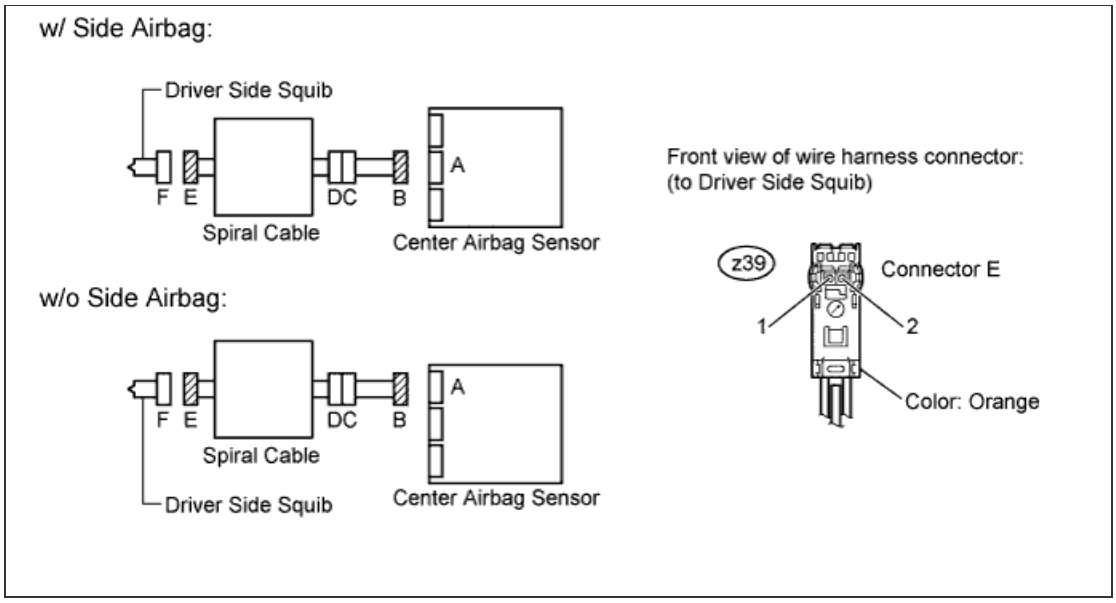

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z39-1 - Body ground	Engine switch on (IG)	Below 1 V
z39-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	1 MΩ or higher
z39-1 - Body ground	Always	1 MΩ or higher
z39-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

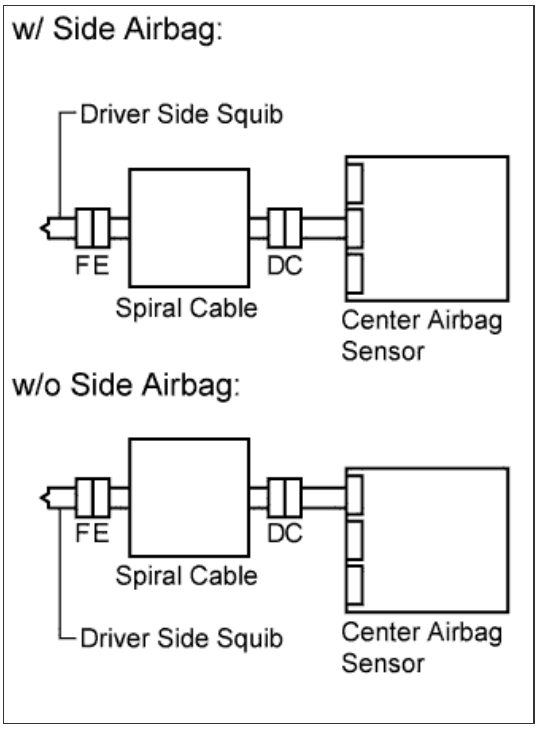


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

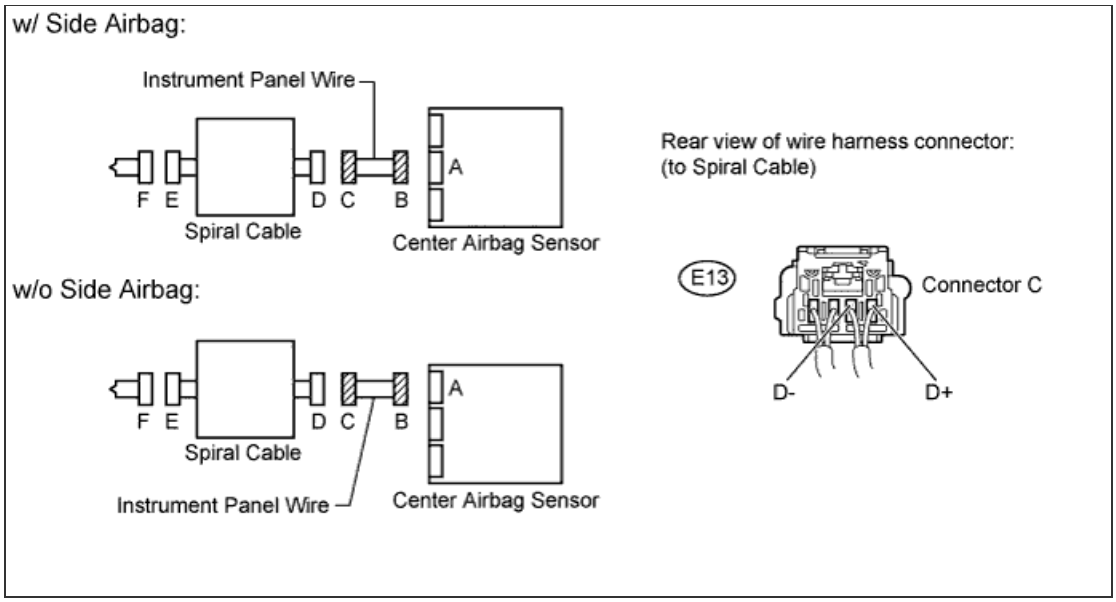

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-1 (D+) - Body ground	Engine switch on (IG)	Below 1 V
E13-2 (D-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	1 MΩ or higher
E13-1 (D+) - Body ground	Always	1 MΩ or higher
E13-2 (D-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK

REPLACE SPIRAL CABLE (Click here)

DTC B1900/73 Short in Front Pretensioner Squib RH Circuit

DTC B1901/73 Open in Front Pretensioner Squib RH Circuit

DTC B1902/73 Short to GND in Front Pretensioner Squib RH Circuit

DTC B1903/73 Short to B+ in Front Pretensioner Squib RH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib RH circuit consists of the center airbag sensor and the front seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1900/73	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib RH circuit during the primary check. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1901/73	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib RH circuit for 2 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1902/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1903/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

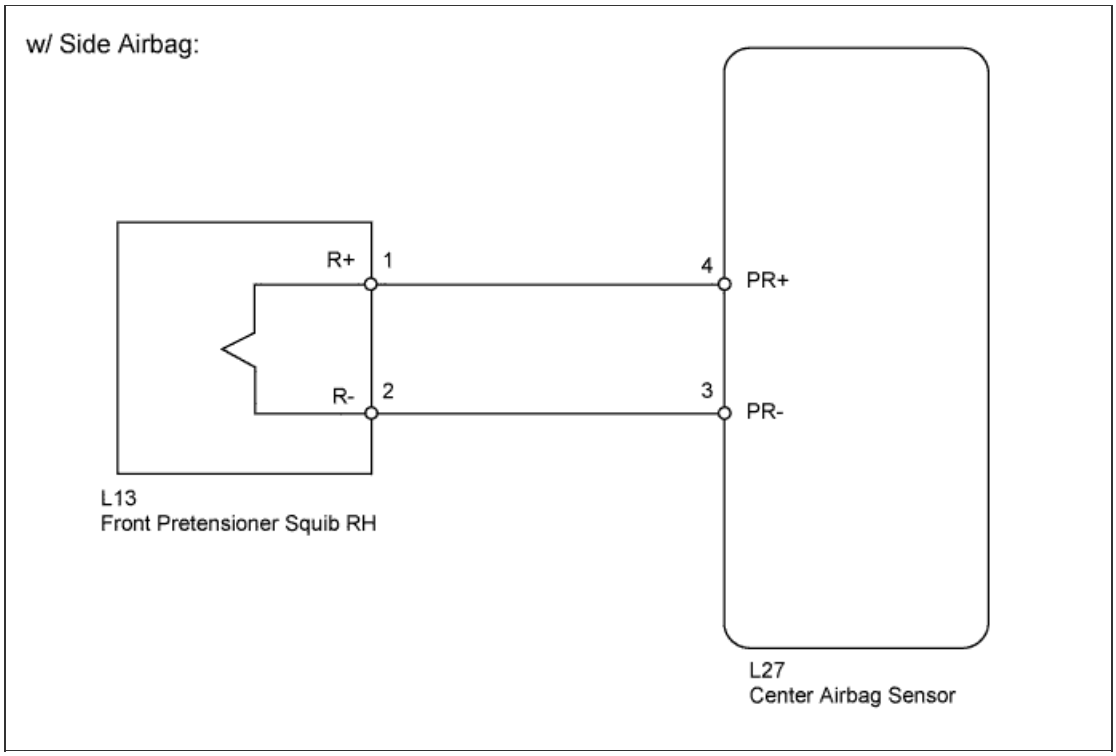

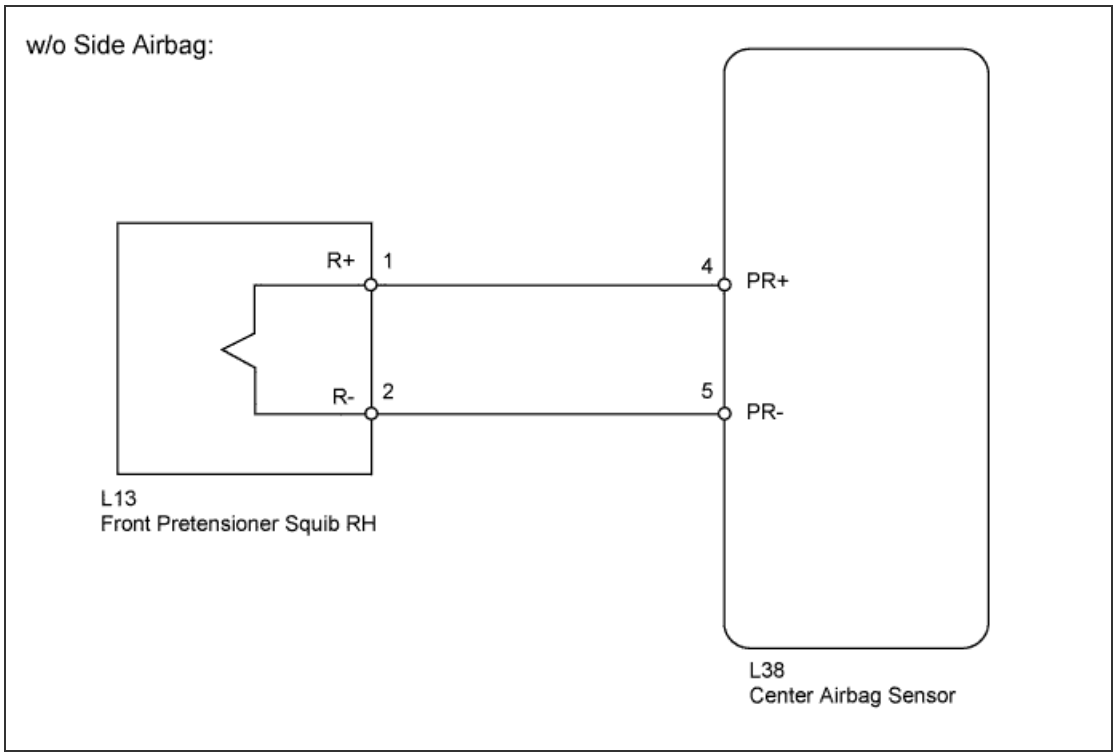

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT RH (FRONT PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the front seat outer belt RH (front pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

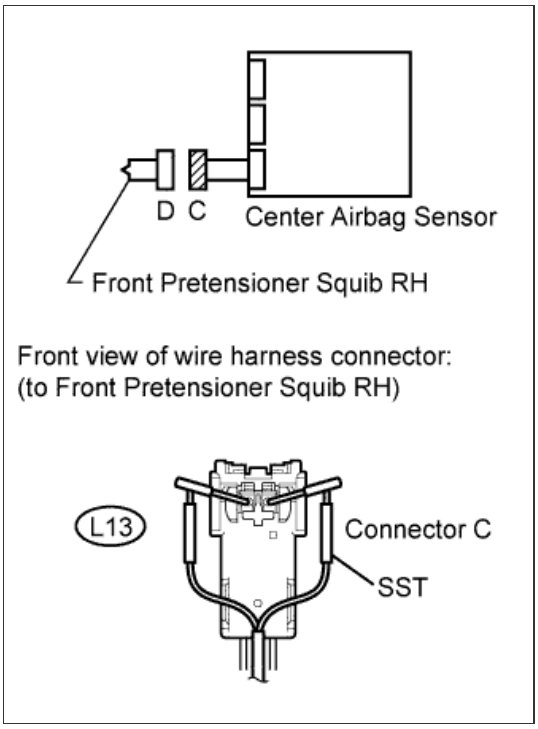

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the front seat outer belt RH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK →

3.CHECK NO. 2 FLOOR WIRE (FRONT PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L13-1 (R+) - Body ground	Engine switch on (IG)	Below 1 V

L13-2 (R-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	1 MΩ or higher
L13-1 (R+) - Body ground	Always	1 MΩ or higher
L13-2 (R-) - Body ground	Always	1 MΩ or higher

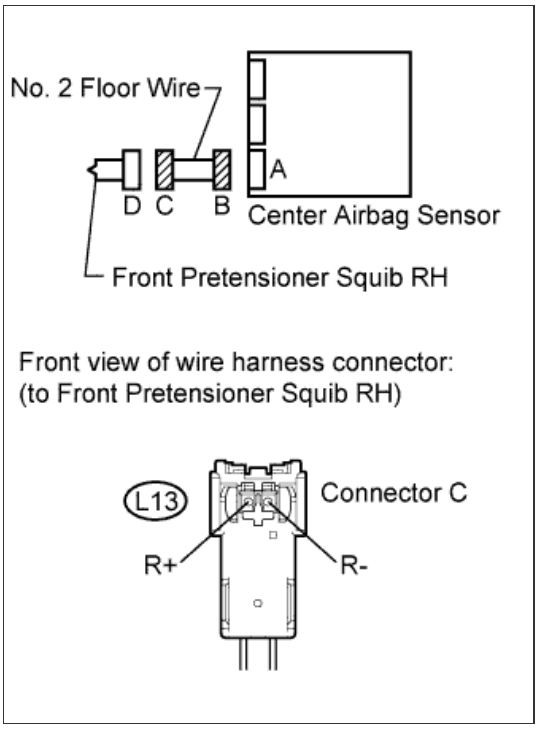

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

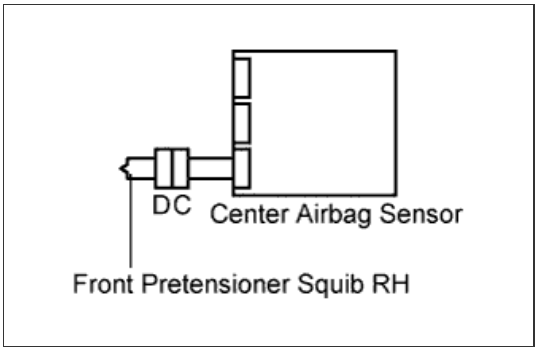

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1800/51 Short in Driver Side Squib Circuit

DTC B1801/51 Open in Driver Side Squib Circuit

DTC B1802/51 Short to GND in Driver Side Squib Circuit

DTC B1803/51 Short to B+ in Driver Side Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side squib circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1800/51	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib circuit during the primary check. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1801/51	When one of the following conditions is met: • The A center airbag sensor receives an open circuit signal in the driver side squib circuit for 2 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1802/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1803/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly

WIRING DIAGRAM

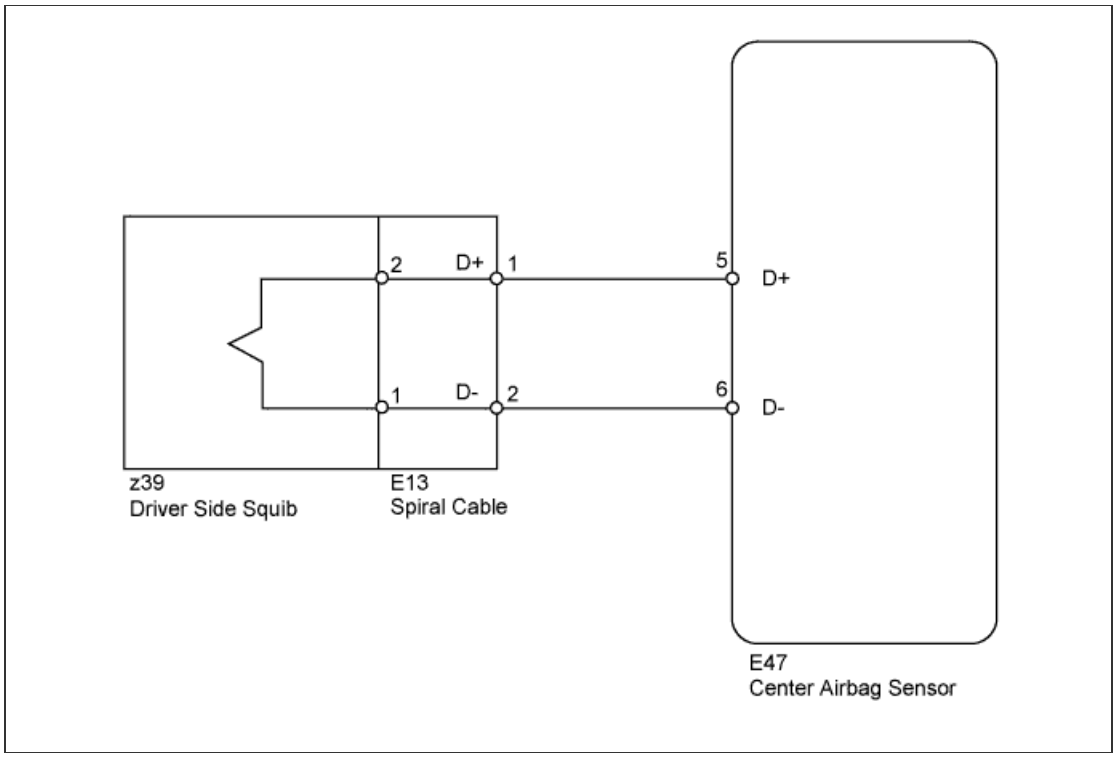

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB)

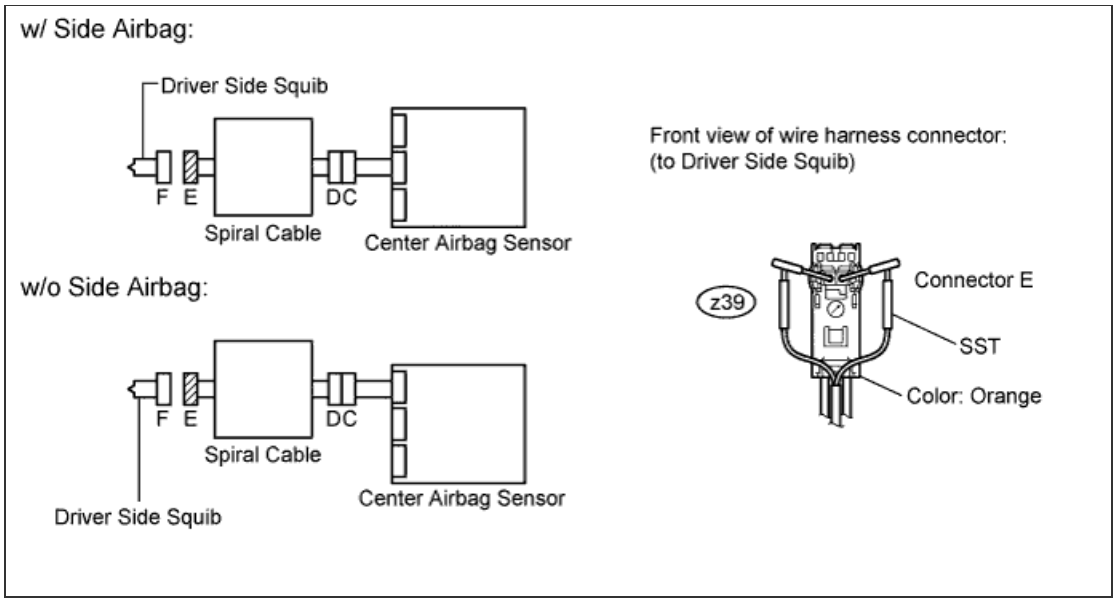

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib) for measurement, as this may lead to a serious injury due to airbag

deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB CIRCUIT

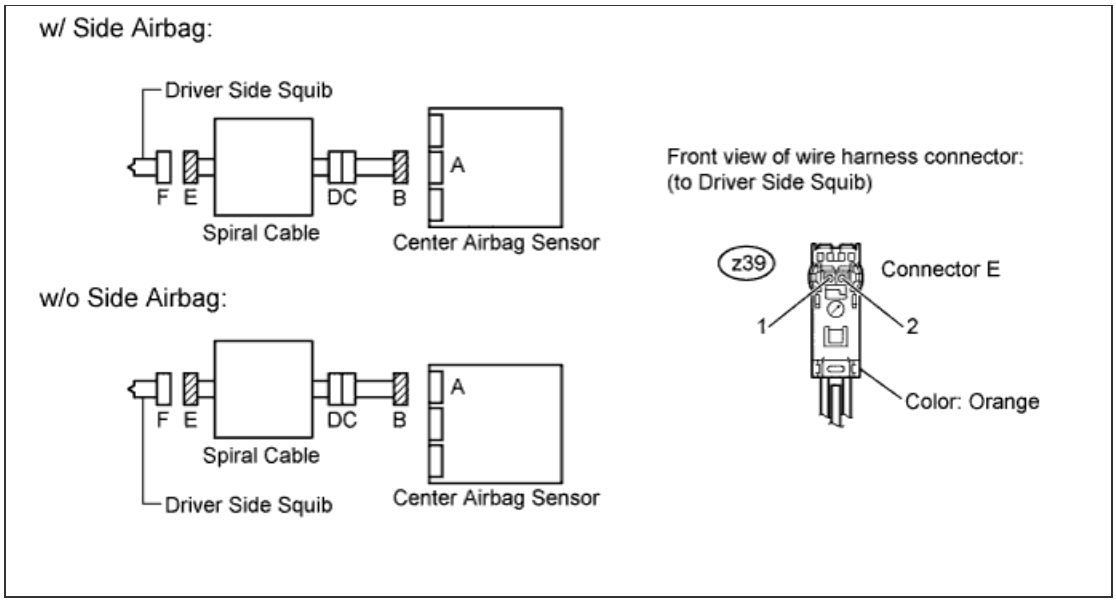

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z39-1 - Body ground	Engine switch on (IG)	Below 1 V
z39-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	1 MΩ or higher
z39-1 - Body ground	Always	1 MΩ or higher
z39-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

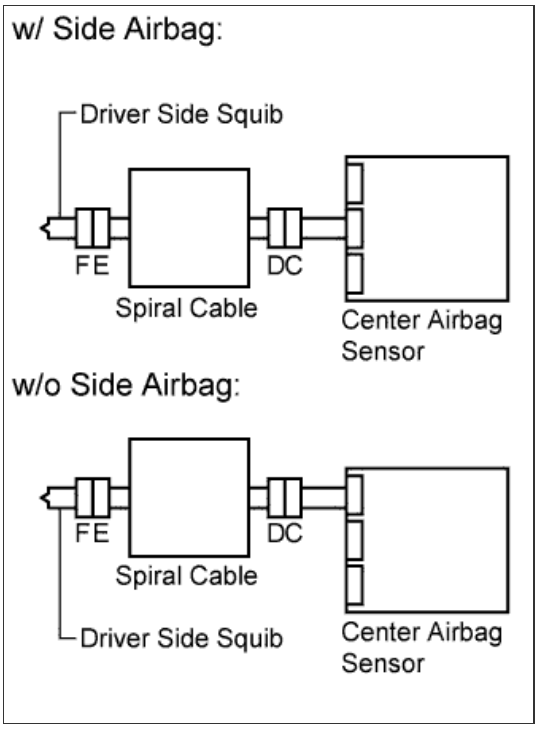


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

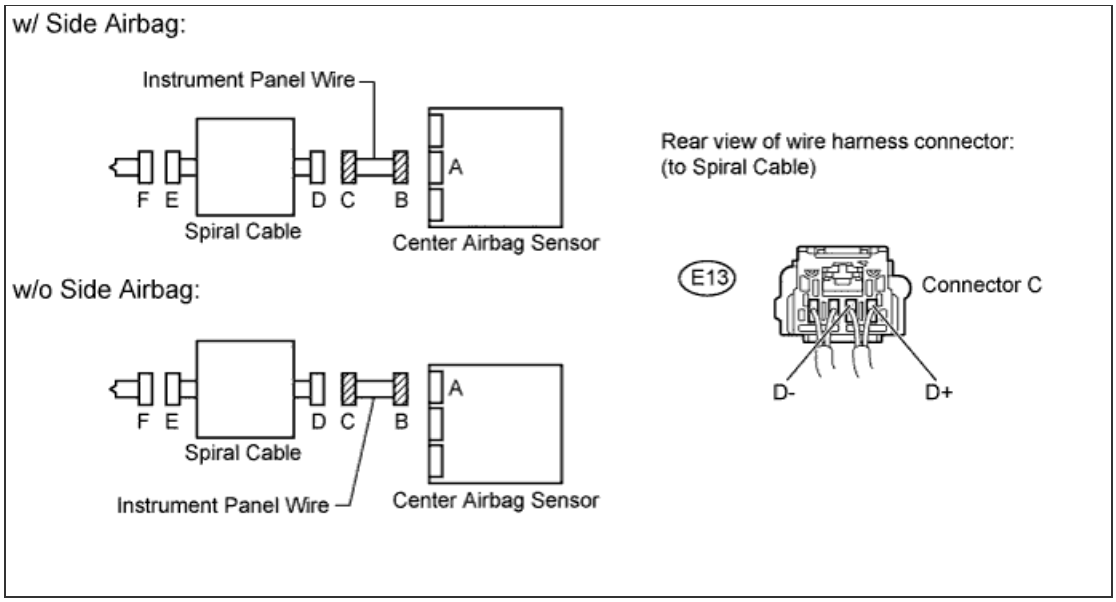

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-1 (D+) - Body ground	Engine switch on (IG)	Below 1 V
E13-2 (D-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	1 MΩ or higher
E13-1 (D+) - Body ground	Always	1 MΩ or higher
E13-2 (D-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK

REPLACE SPIRAL CABLE (Click here)

DTC B1900/73 Short in Front Pretensioner Squib RH Circuit

DTC B1901/73 Open in Front Pretensioner Squib RH Circuit

DTC B1902/73 Short to GND in Front Pretensioner Squib RH Circuit

DTC B1903/73 Short to B+ in Front Pretensioner Squib RH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib RH circuit consists of the center airbag sensor and the front seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1900/73	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib RH circuit during the primary check. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1901/73	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib RH circuit for 2 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1902/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1903/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

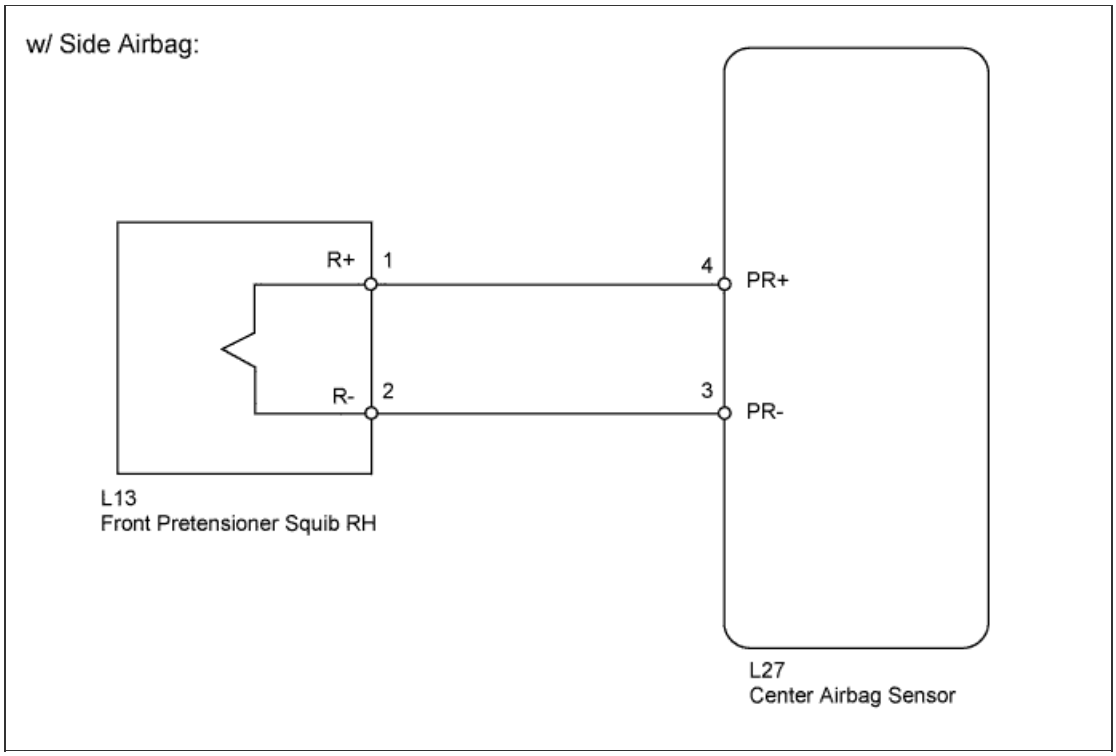

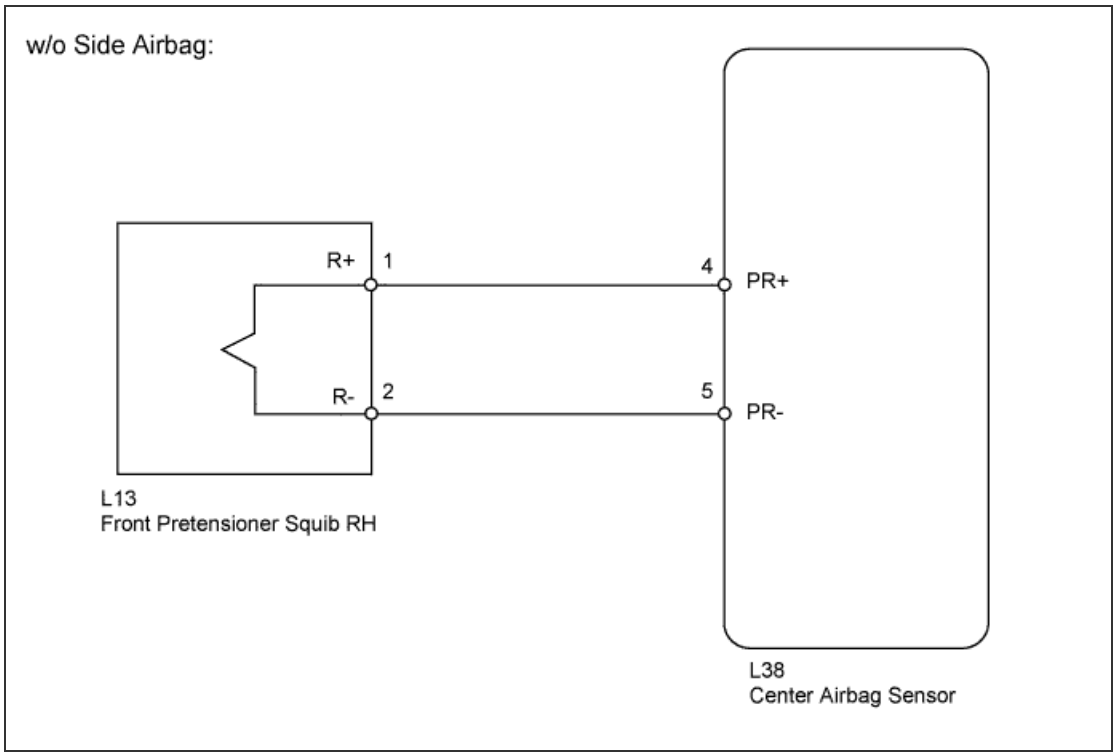

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT RH (FRONT PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the front seat outer belt RH (front pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

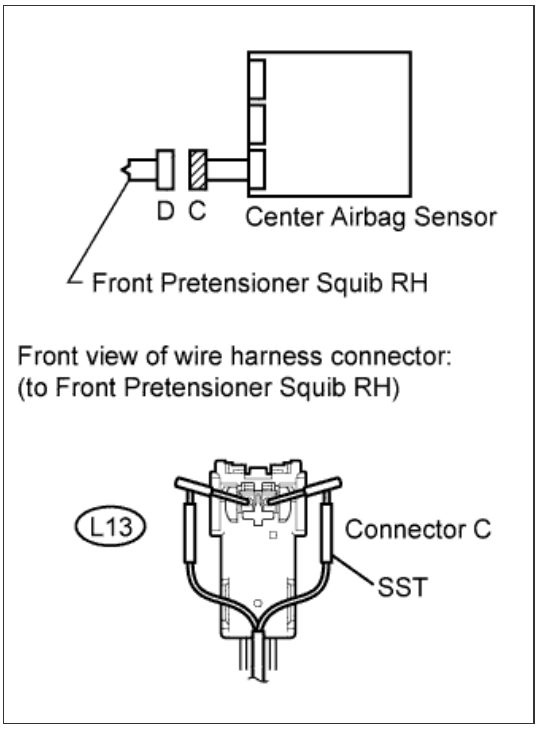

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the front seat outer belt RH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK →

3.CHECK NO. 2 FLOOR WIRE (FRONT PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L13-1 (R+) - Body ground	Engine switch on (IG)	Below 1 V

L13-2 (R-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	1 MΩ or higher
L13-1 (R+) - Body ground	Always	1 MΩ or higher
L13-2 (R-) - Body ground	Always	1 MΩ or higher

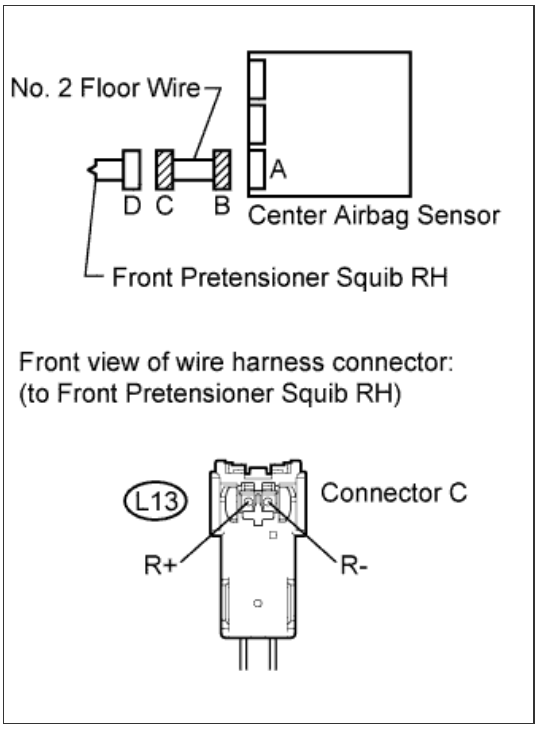

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

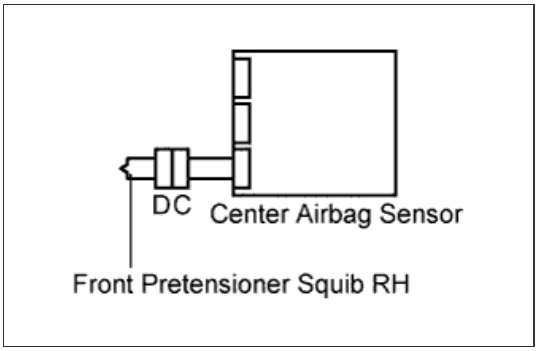

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1800/51 Short in Driver Side Squib Circuit

DTC B1801/51 Open in Driver Side Squib Circuit

DTC B1802/51 Short to GND in Driver Side Squib Circuit

DTC B1803/51 Short to B+ in Driver Side Squib Circuit


for Preparation Click here

DESCRIPTION

The driver side squib circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1800/51	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib circuit during the primary check. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1801/51	When one of the following conditions is met: • The A center airbag sensor receives an open circuit signal in the driver side squib circuit for 2 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1802/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly
B1803/51	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib circuit for 0.5 seconds. • A driver side squib malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib) • Center airbag sensor assembly

WIRING DIAGRAM

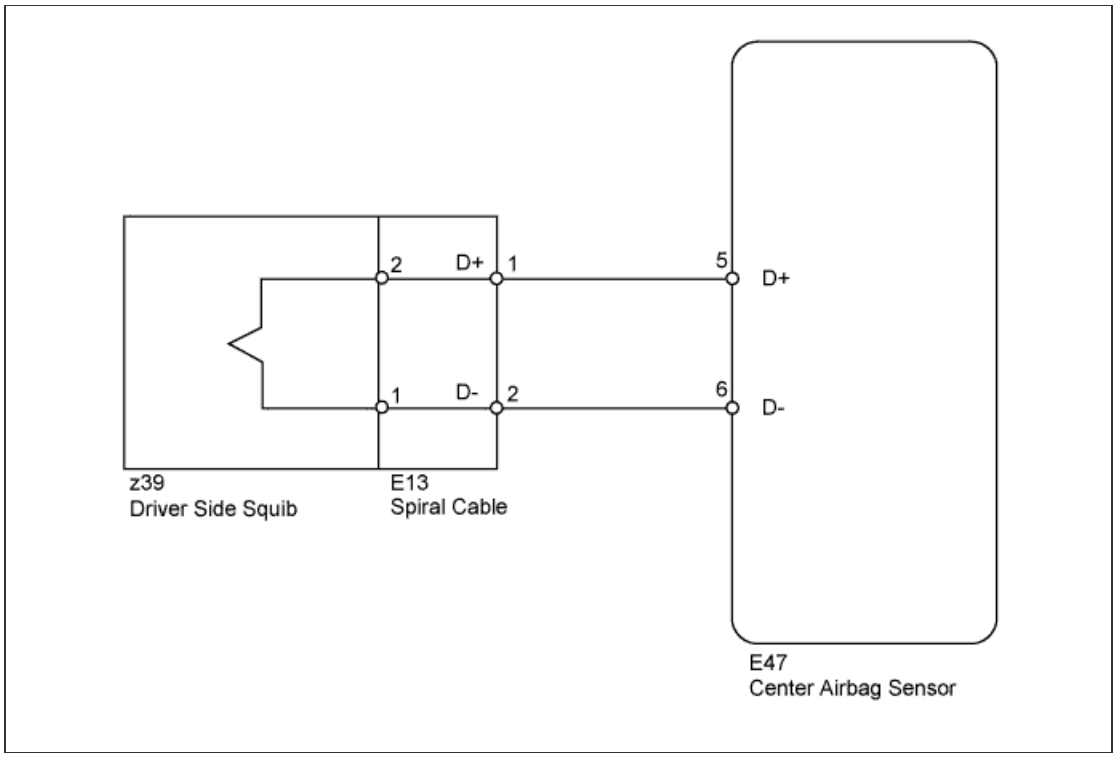

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB)

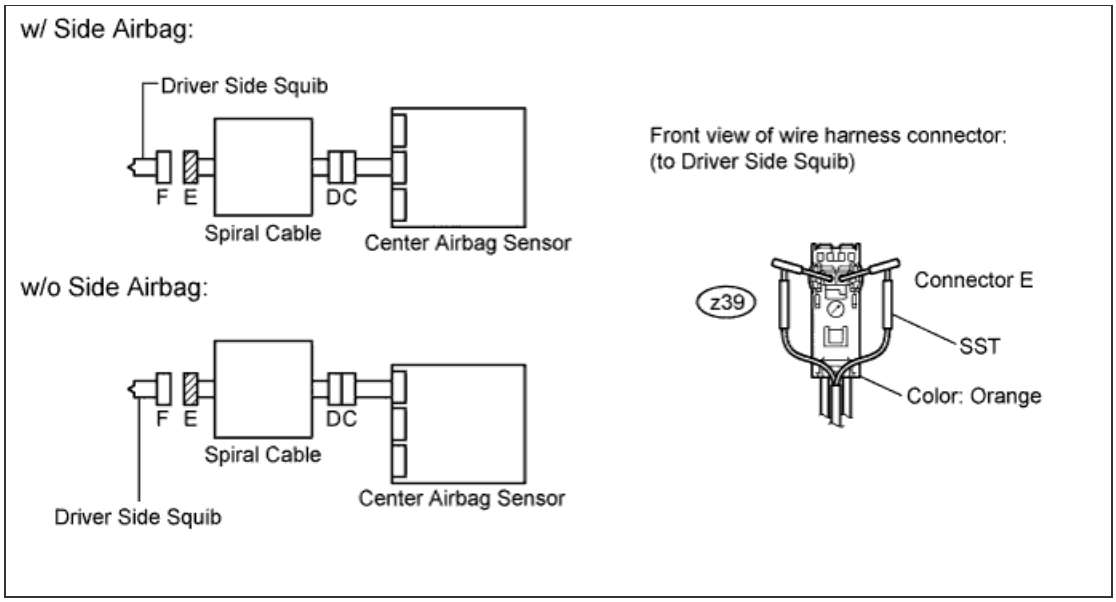

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib) for measurement, as this may lead to a serious injury due to airbag

deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB CIRCUIT

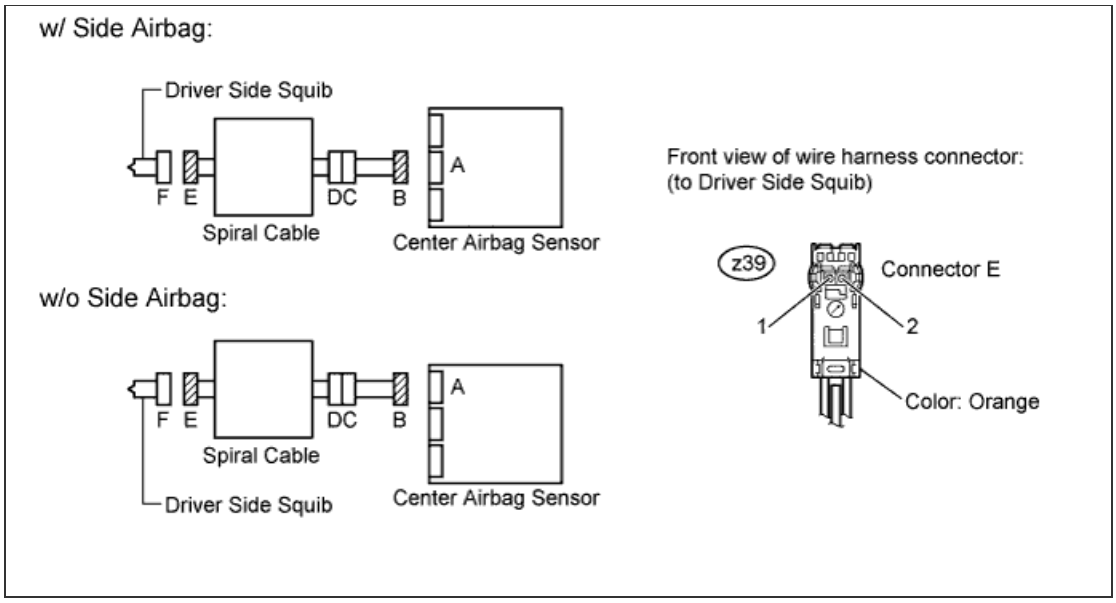

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z39-1 - Body ground	Engine switch on (IG)	Below 1 V
z39-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z39-1 - z39-2	Always	1 MΩ or higher
z39-1 - Body ground	Always	1 MΩ or higher
z39-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1800, B1801, B1802 or B1803 is not output.

HINT:

Codes other than DTC B1800, B1801, B1802 and B1803 may be output at this time, but they are not related to this check.

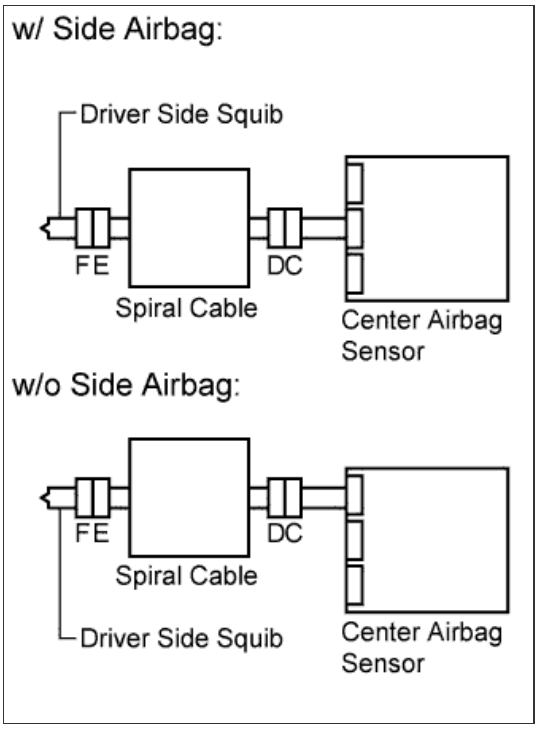


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

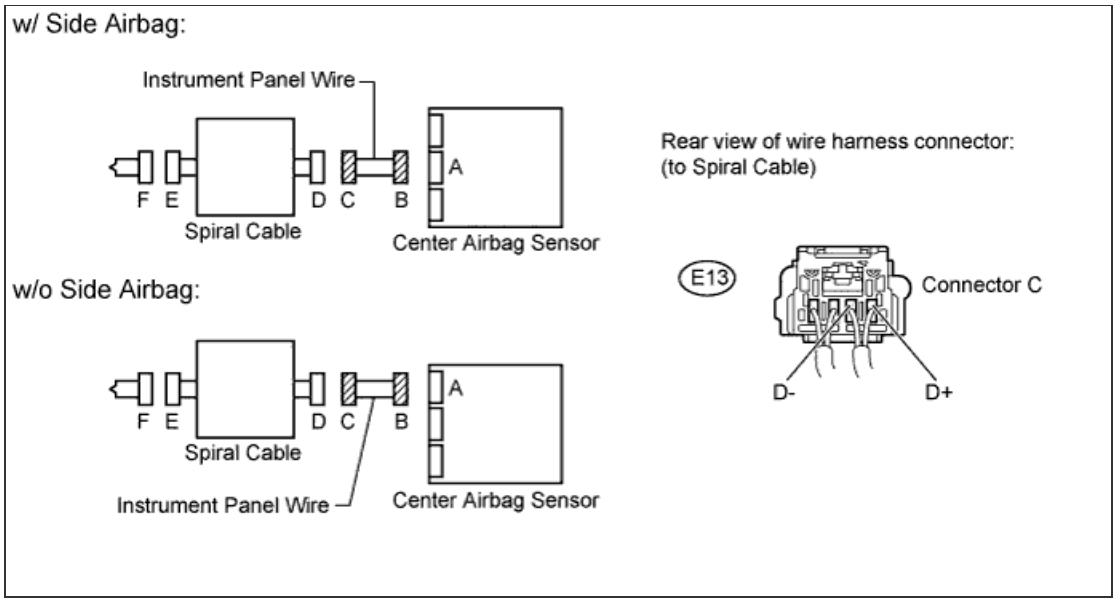

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-1 (D+) - Body ground	Engine switch on (IG)	Below 1 V
E13-2 (D-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 (D+) - E13-2 (D-)	Always	1 MΩ or higher
E13-1 (D+) - Body ground	Always	1 MΩ or higher
E13-2 (D-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK

REPLACE SPIRAL CABLE (Click here)

DTC B1900/73 Short in Front Pretensioner Squib RH Circuit

DTC B1901/73 Open in Front Pretensioner Squib RH Circuit

DTC B1902/73 Short to GND in Front Pretensioner Squib RH Circuit

DTC B1903/73 Short to B+ in Front Pretensioner Squib RH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib RH circuit consists of the center airbag sensor and the front seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1900/73	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib RH circuit during the primary check. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1901/73	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib RH circuit for 2 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1902/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1903/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

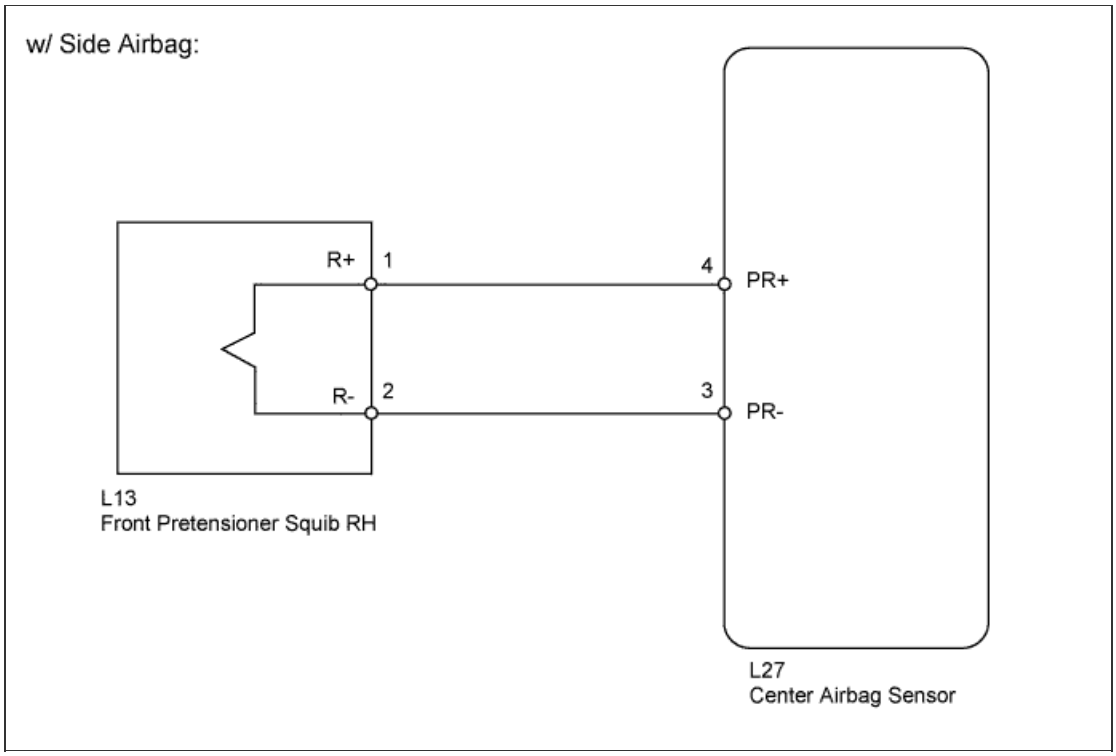

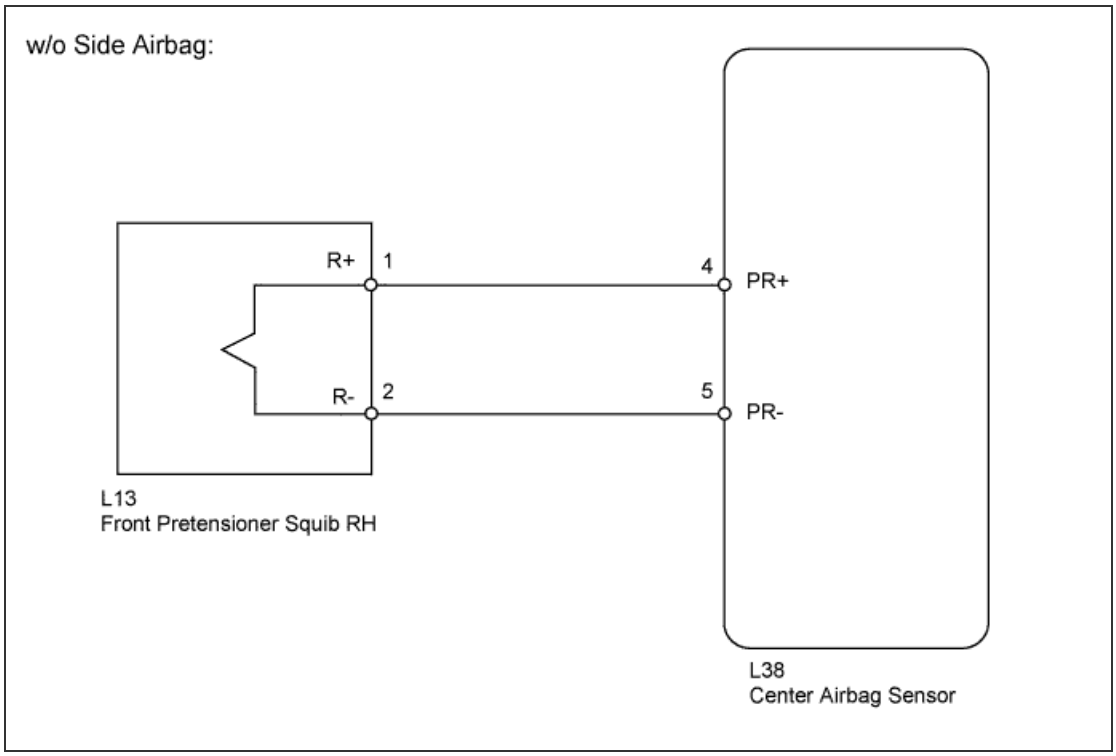

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT RH (FRONT PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the front seat outer belt RH (front pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

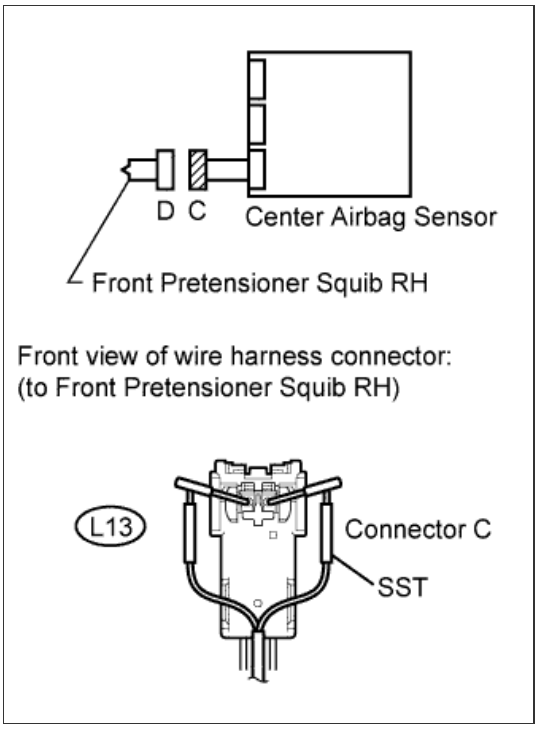

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the front seat outer belt RH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK →

3.CHECK NO. 2 FLOOR WIRE (FRONT PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L13-1 (R+) - Body ground	Engine switch on (IG)	Below 1 V

L13-2 (R-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	1 MΩ or higher
L13-1 (R+) - Body ground	Always	1 MΩ or higher
L13-2 (R-) - Body ground	Always	1 MΩ or higher

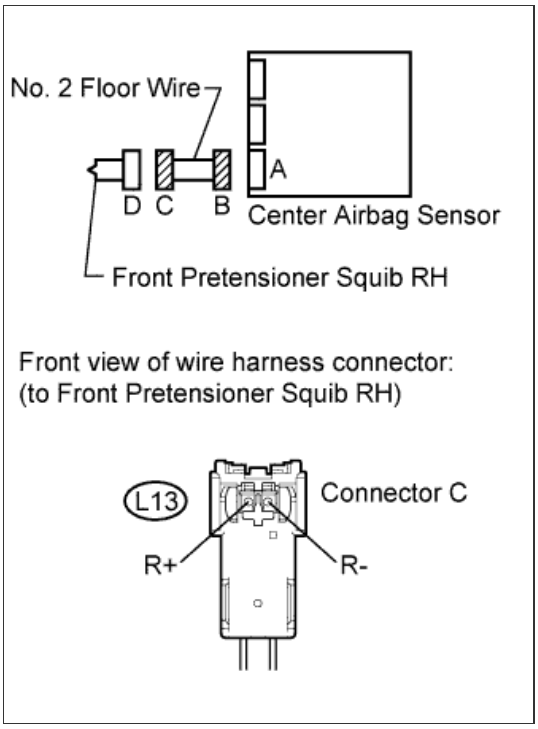

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

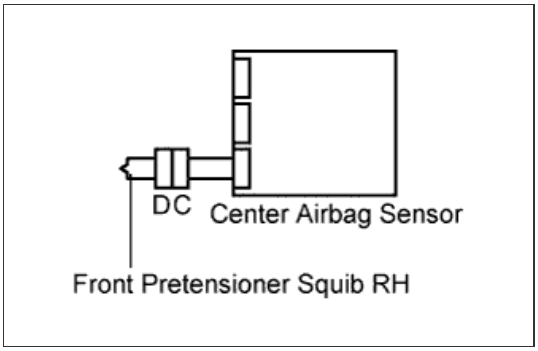

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1805/52 Short in Front Passenger Side Squib Circuit

DTC B1806/52 Open in Front Passenger Side Squib Circuit

DTC B1807/52 Short to GND in Front Passenger Side Squib Circuit

DTC B1808/52 Short to B+ in Front Passenger Side Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1805/52	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib circuit during the primary check. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1806/52	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib circuit for 2 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1807/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1808/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly

WIRING DIAGRAM

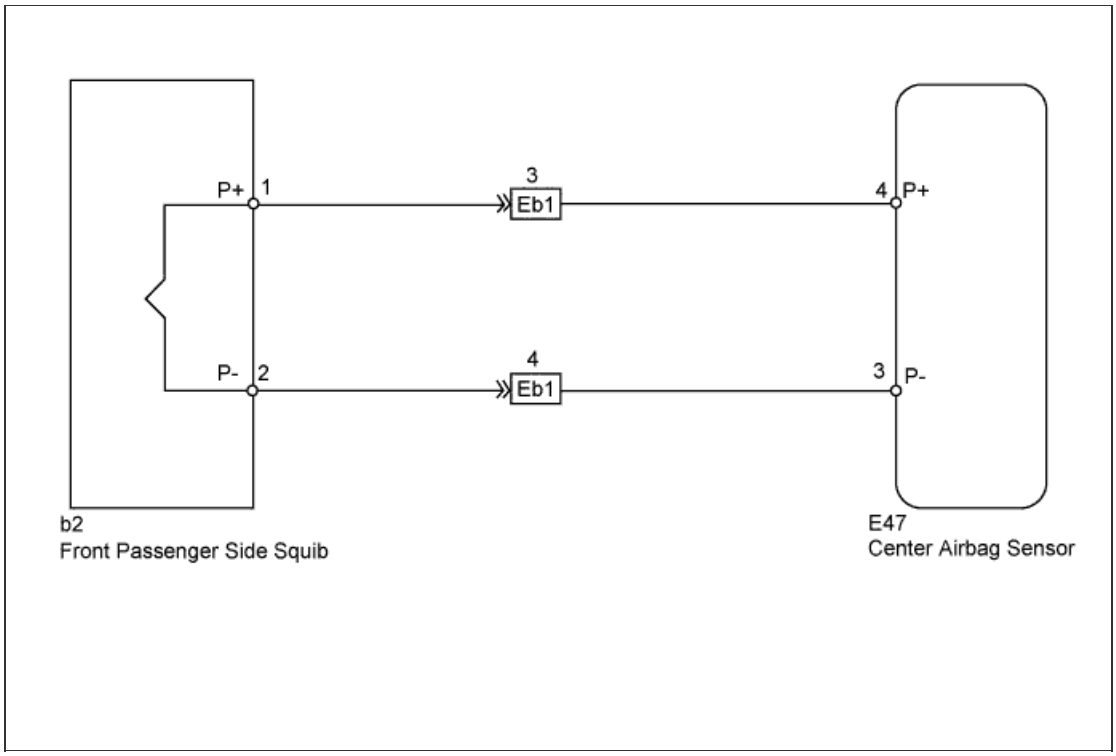

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB)

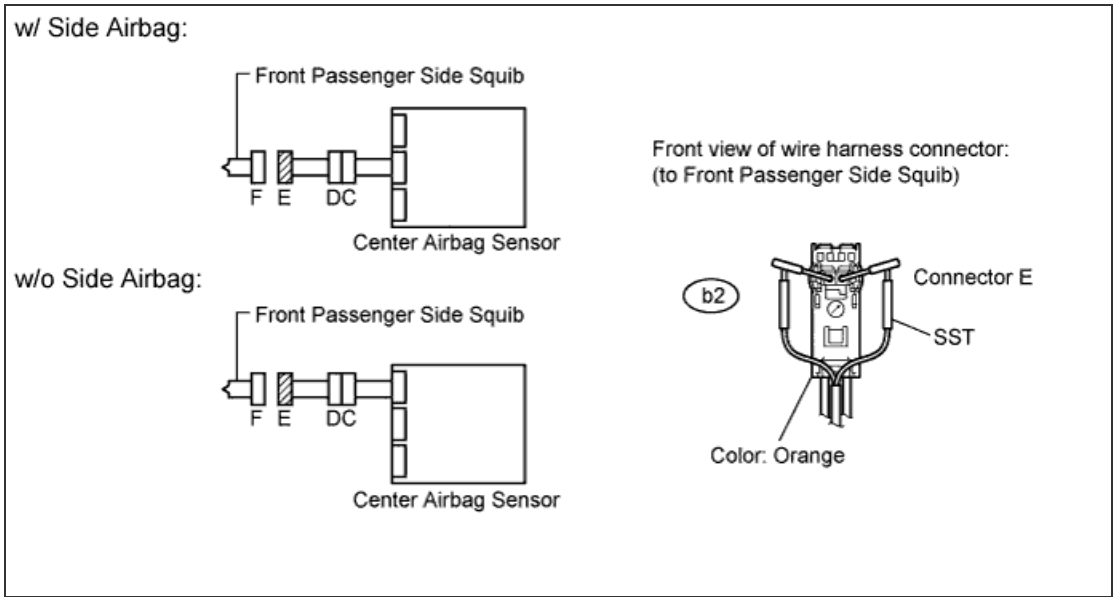

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib) for measurement, as this may lead to a serious injury

due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB CIRCUIT

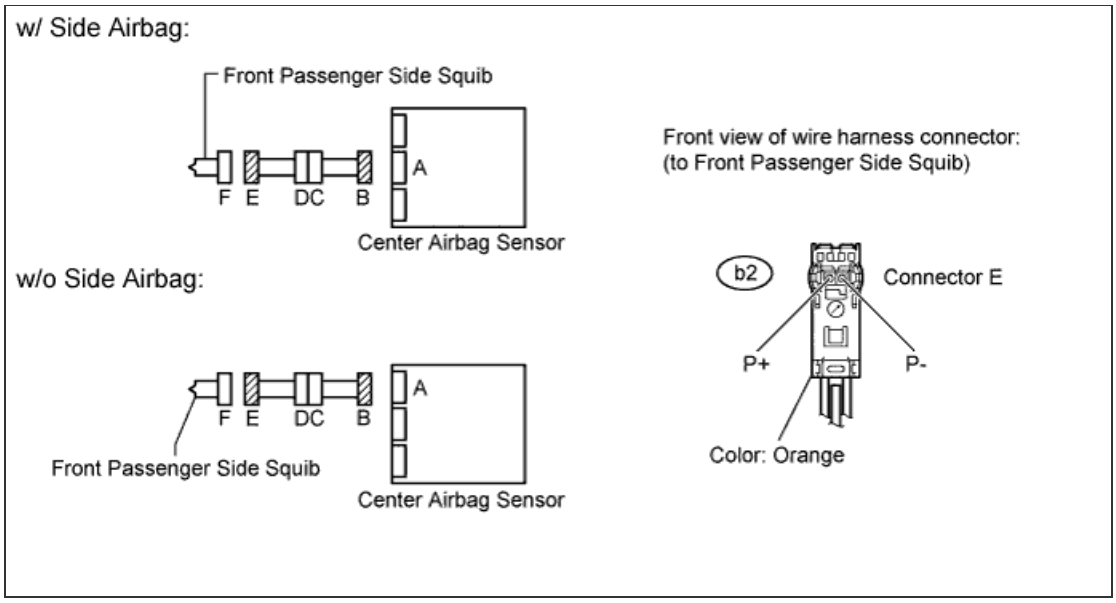

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b2-1 (P+) - Body ground	Engine switch on (IG)	Below 1 V
b2-2 (P-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	1 MΩ or higher
b2-1 (P+) - Body ground	Always	1 MΩ or higher
b2-2 (P-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

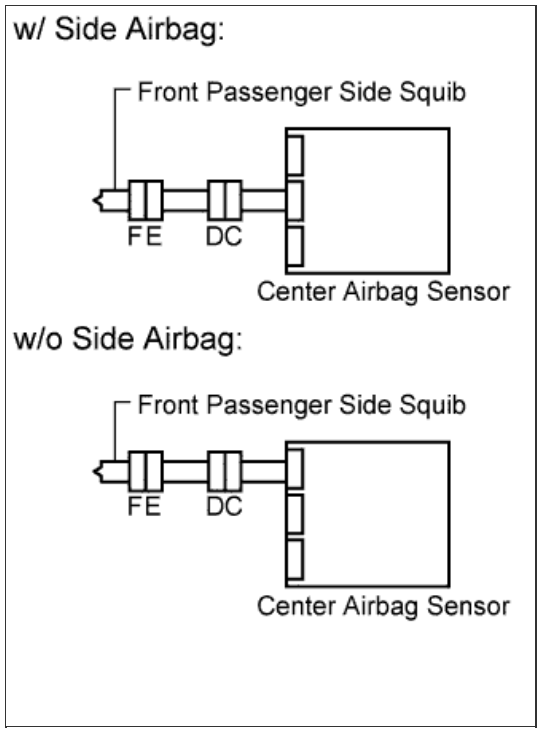


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

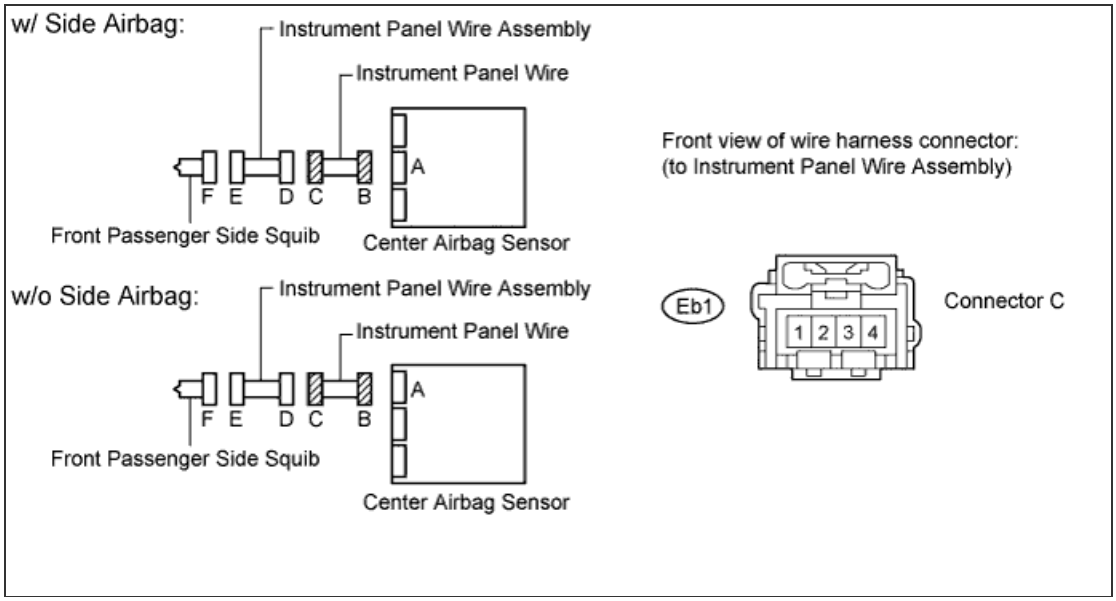

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-3 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-4 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	1 MΩ or higher
Eb1-3 - Body ground	Always	1 MΩ or higher
Eb1-4 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1900/73 Short in Front Pretensioner Squib RH Circuit

DTC B1901/73 Open in Front Pretensioner Squib RH Circuit

DTC B1902/73 Short to GND in Front Pretensioner Squib RH Circuit

DTC B1903/73 Short to B+ in Front Pretensioner Squib RH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib RH circuit consists of the center airbag sensor and the front seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1900/73	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib RH circuit during the primary check. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1901/73	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib RH circuit for 2 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1902/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1903/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

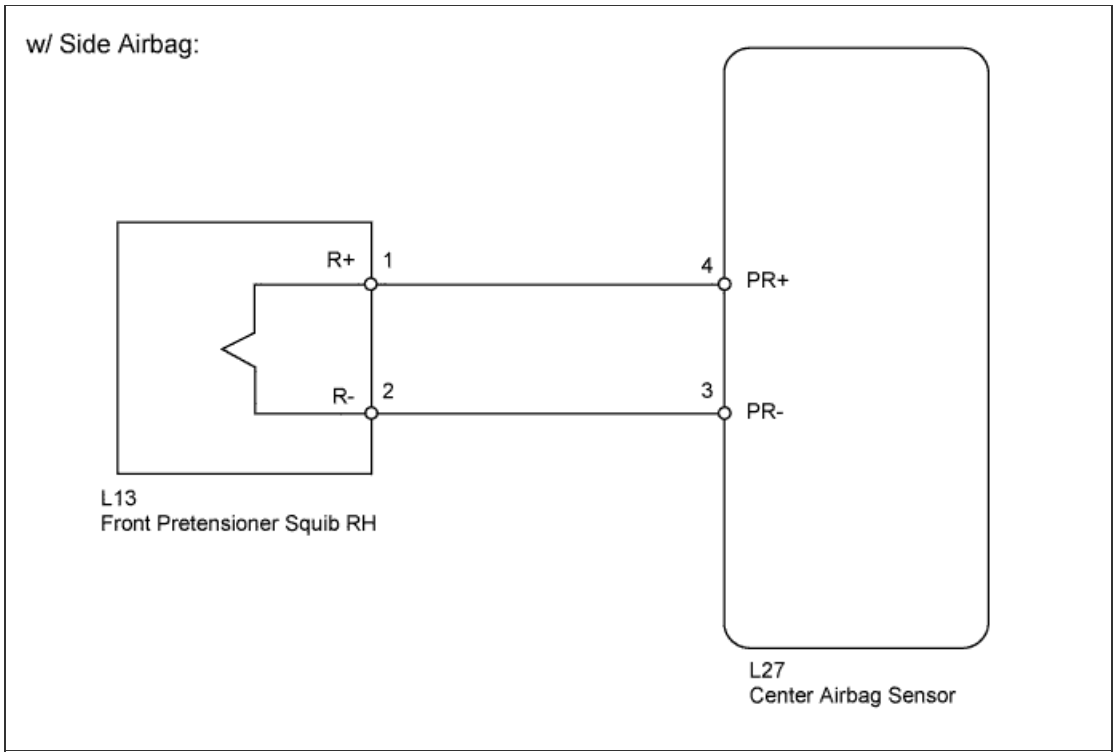

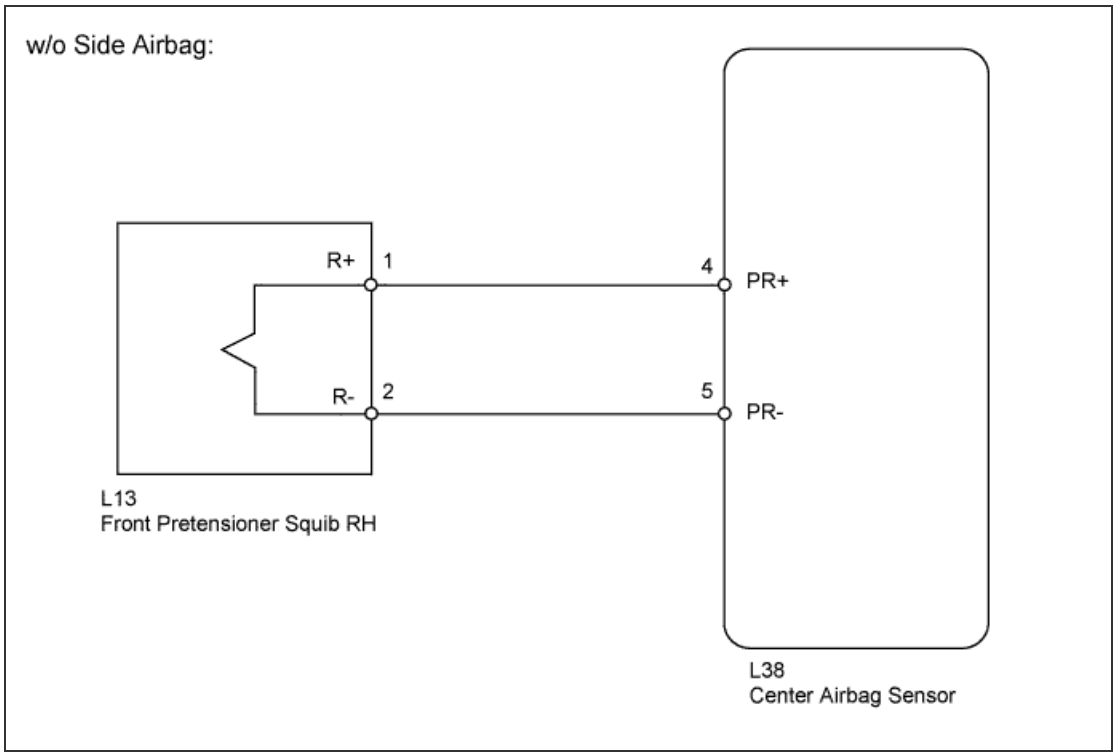

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT RH (FRONT PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the front seat outer belt RH (front pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

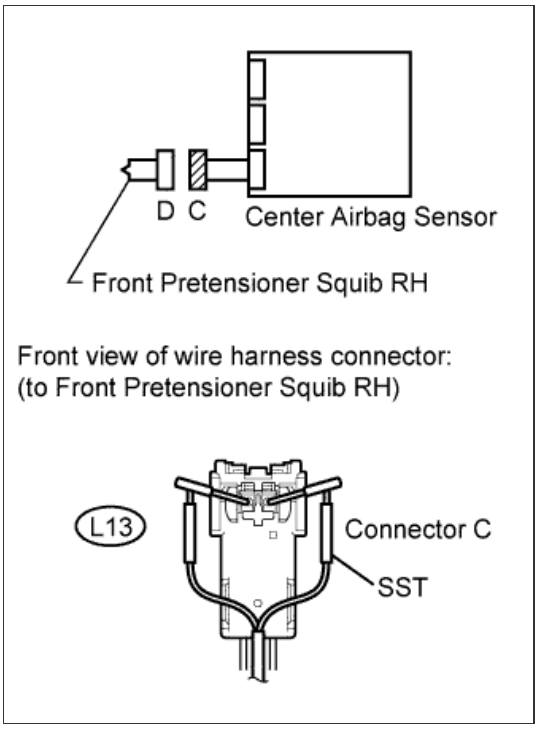

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the front seat outer belt RH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK →

3.CHECK NO. 2 FLOOR WIRE (FRONT PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L13-1 (R+) - Body ground	Engine switch on (IG)	Below 1 V

L13-2 (R-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	1 MΩ or higher
L13-1 (R+) - Body ground	Always	1 MΩ or higher
L13-2 (R-) - Body ground	Always	1 MΩ or higher

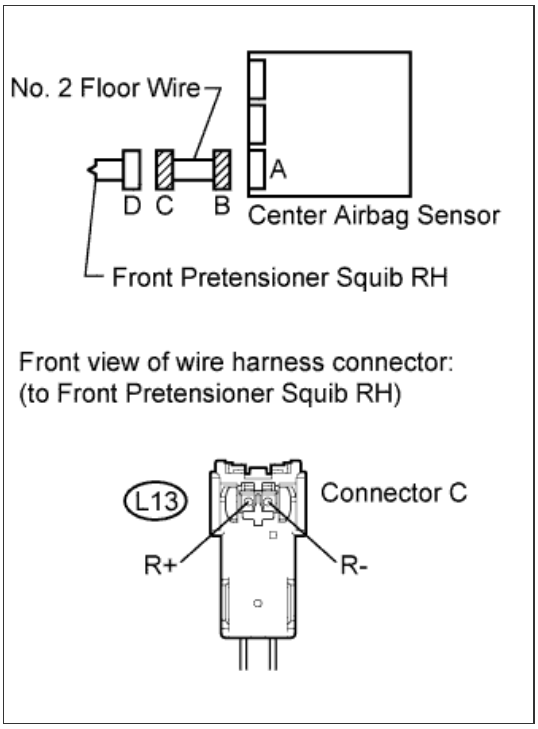

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

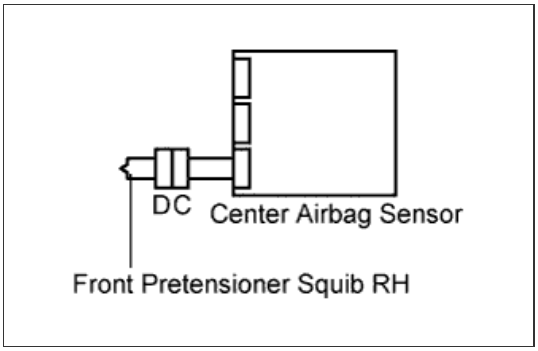

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1805/52 Short in Front Passenger Side Squib Circuit

DTC B1806/52 Open in Front Passenger Side Squib Circuit

DTC B1807/52 Short to GND in Front Passenger Side Squib Circuit

DTC B1808/52 Short to B+ in Front Passenger Side Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1805/52	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib circuit during the primary check. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1806/52	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib circuit for 2 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1807/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1808/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly

WIRING DIAGRAM

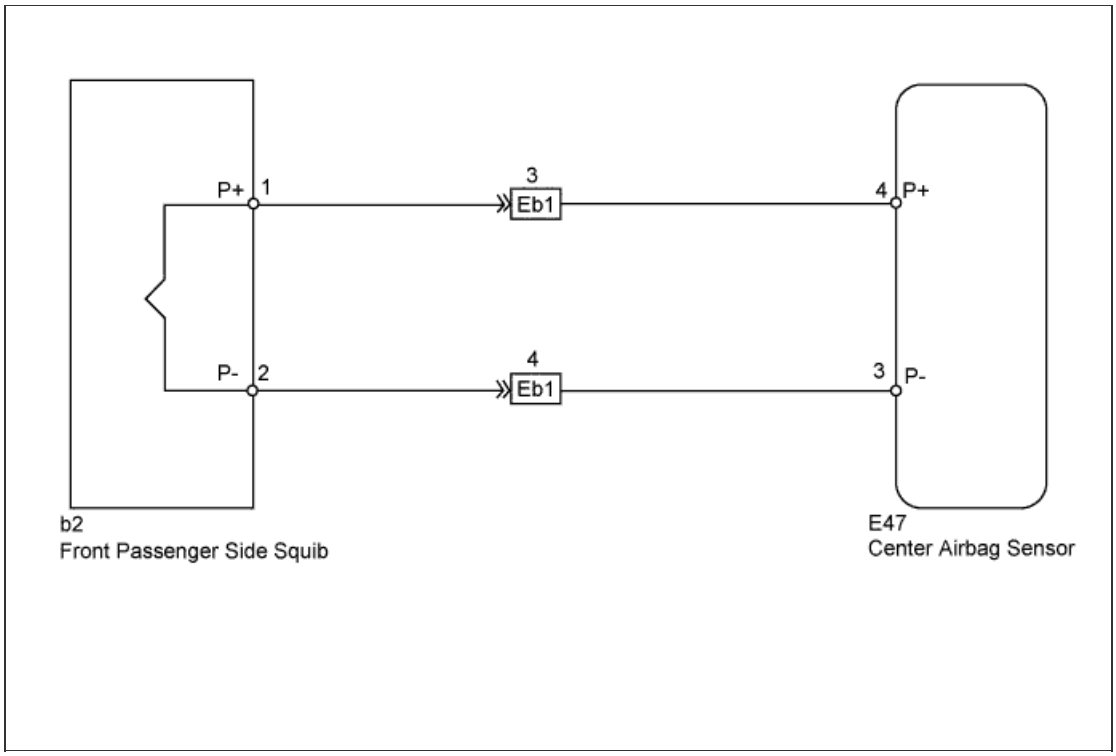

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB)

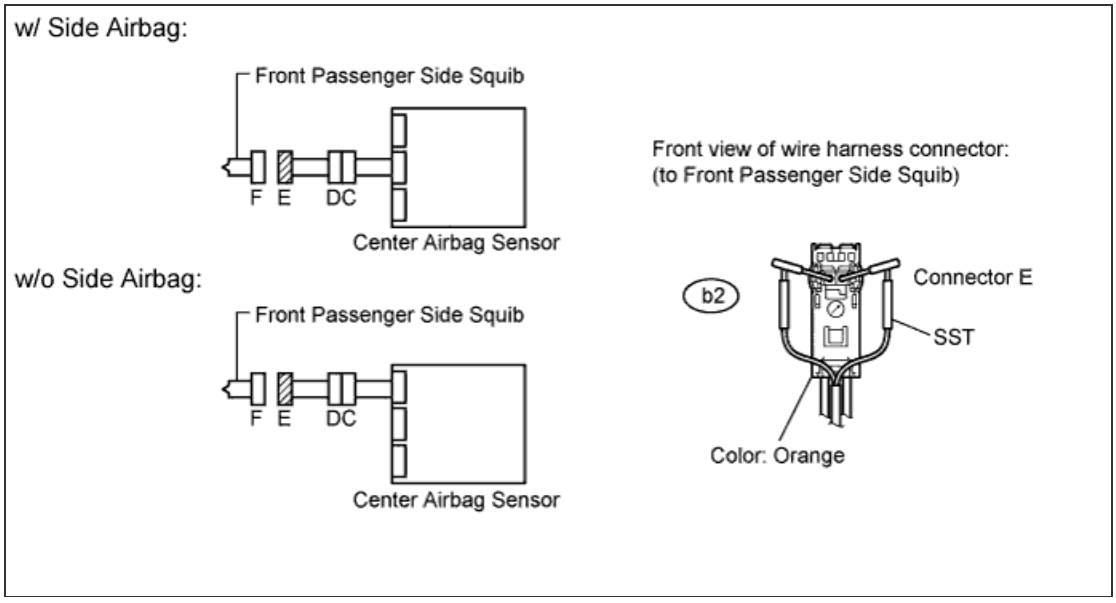

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib) for measurement, as this may lead to a serious injury

due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB CIRCUIT

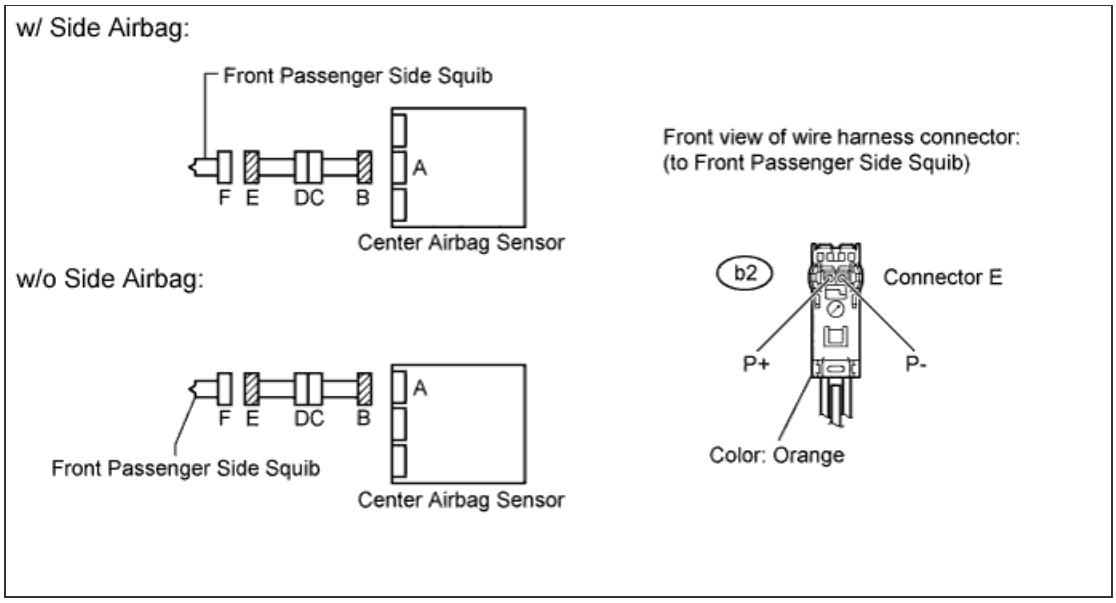

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b2-1 (P+) - Body ground	Engine switch on (IG)	Below 1 V
b2-2 (P-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	1 MΩ or higher
b2-1 (P+) - Body ground	Always	1 MΩ or higher
b2-2 (P-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

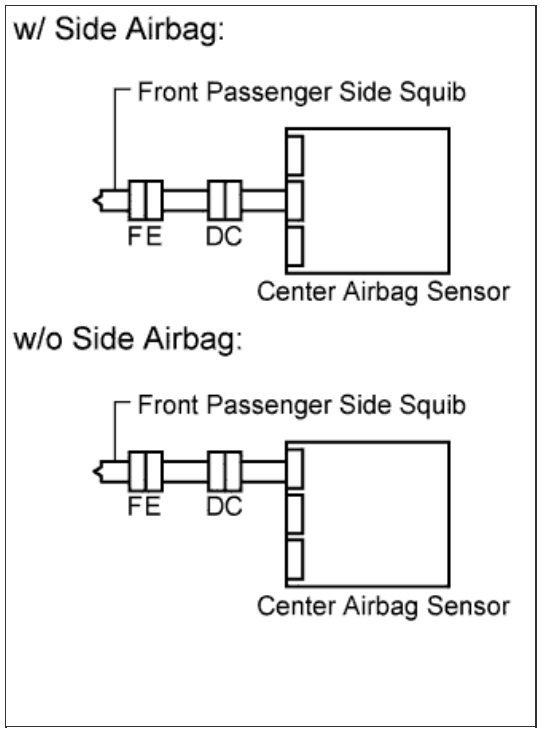


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

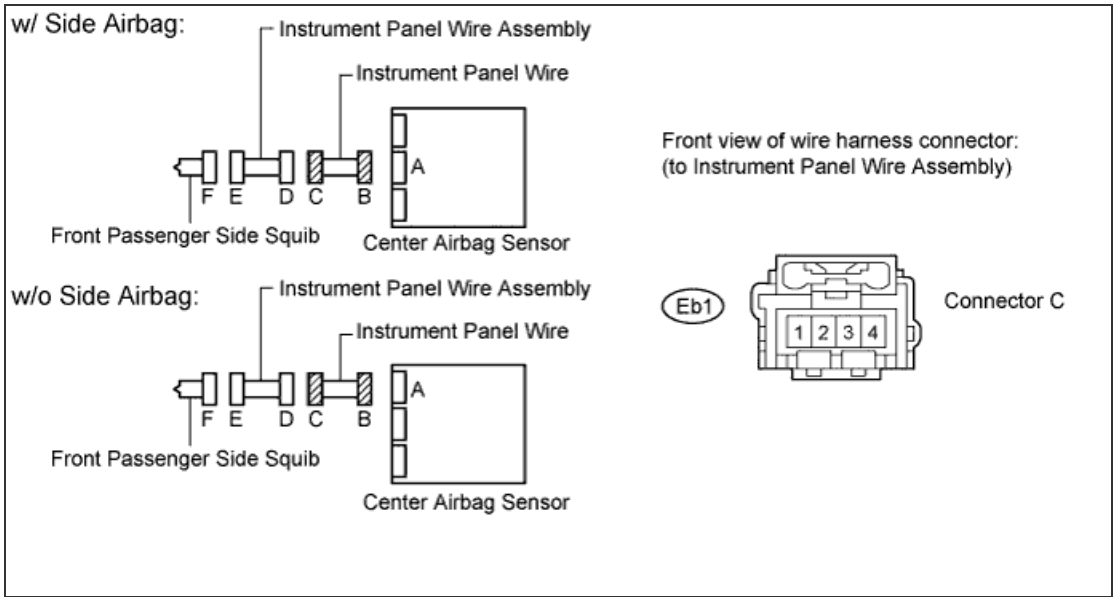

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-3 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-4 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	1 MΩ or higher
Eb1-3 - Body ground	Always	1 MΩ or higher
Eb1-4 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1900/73 Short in Front Pretensioner Squib RH Circuit

DTC B1901/73 Open in Front Pretensioner Squib RH Circuit

DTC B1902/73 Short to GND in Front Pretensioner Squib RH Circuit

DTC B1903/73 Short to B+ in Front Pretensioner Squib RH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib RH circuit consists of the center airbag sensor and the front seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1900/73	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib RH circuit during the primary check. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1901/73	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib RH circuit for 2 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1902/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1903/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

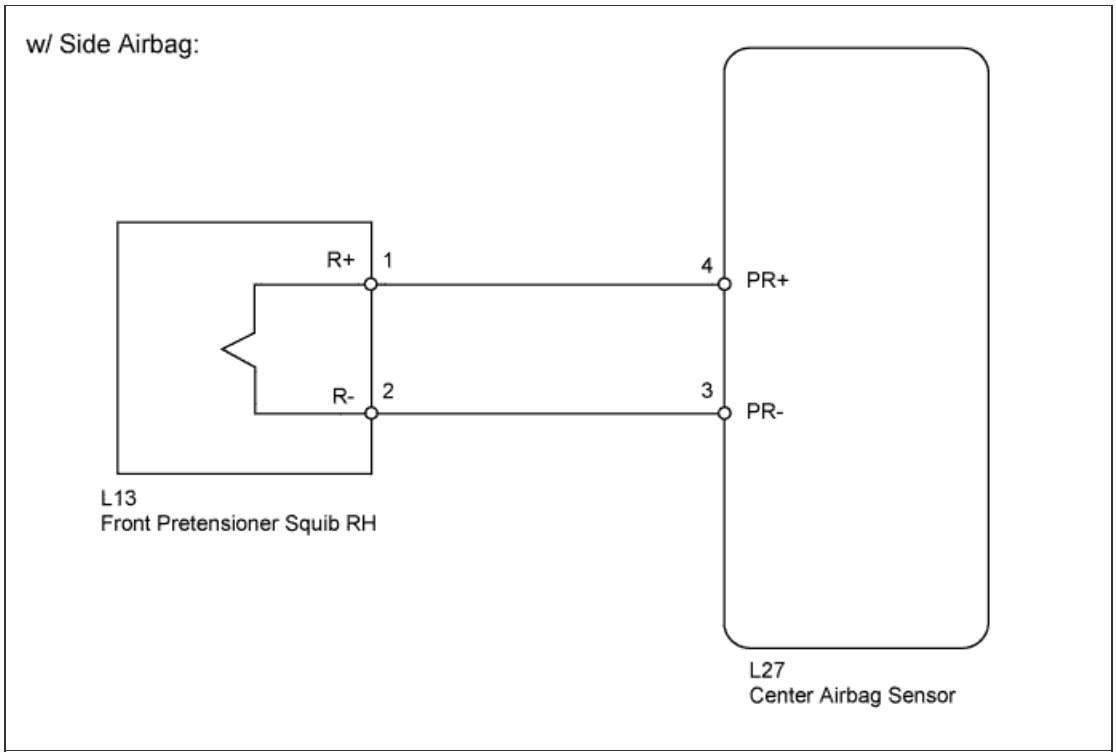

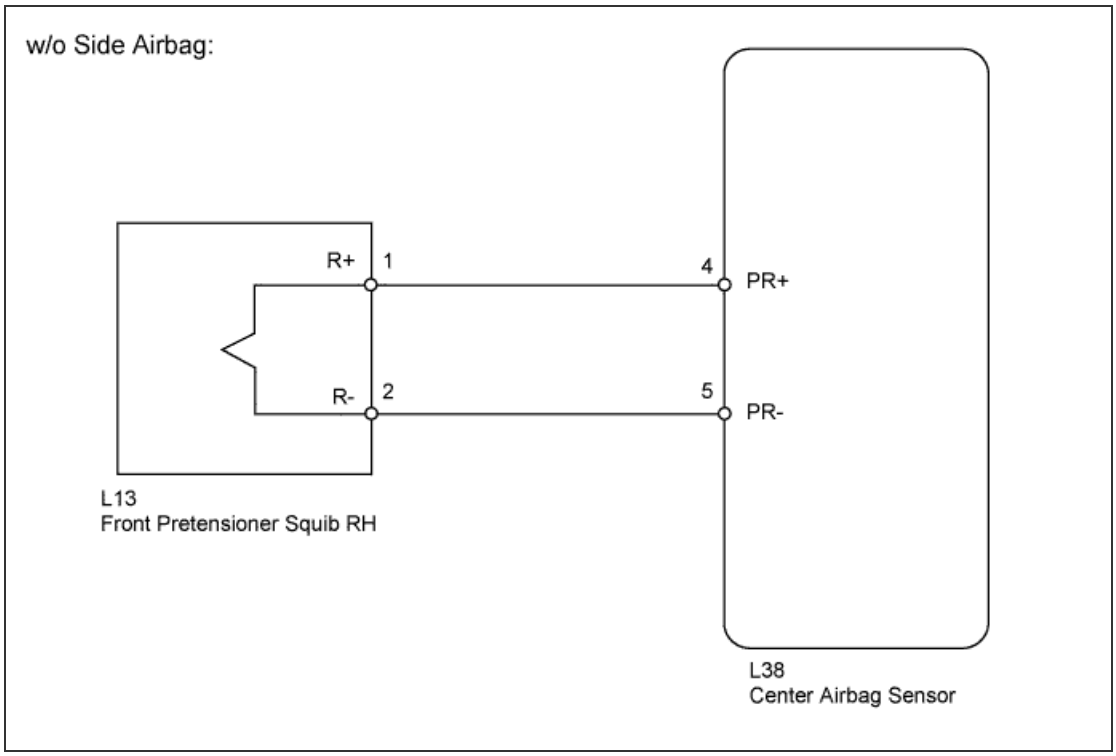

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT RH (FRONT PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the front seat outer belt RH (front pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

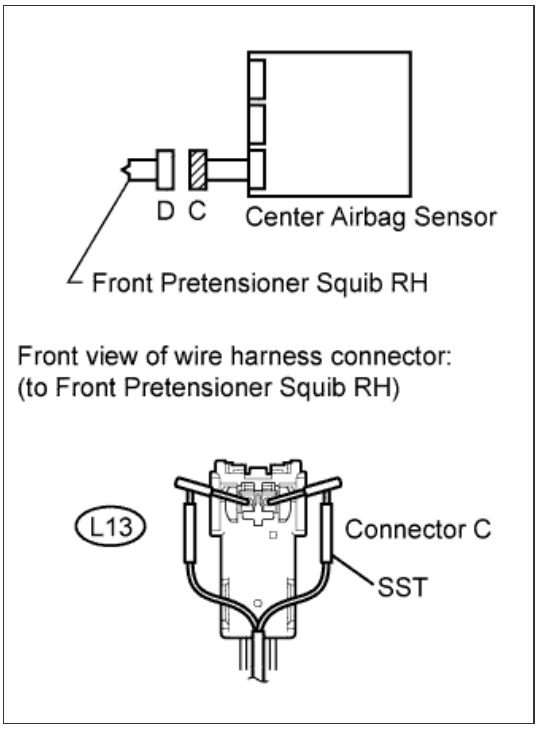

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the front seat outer belt RH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK →

3.CHECK NO. 2 FLOOR WIRE (FRONT PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L13-1 (R+) - Body ground	Engine switch on (IG)	Below 1 V

L13-2 (R-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	1 MΩ or higher
L13-1 (R+) - Body ground	Always	1 MΩ or higher
L13-2 (R-) - Body ground	Always	1 MΩ or higher

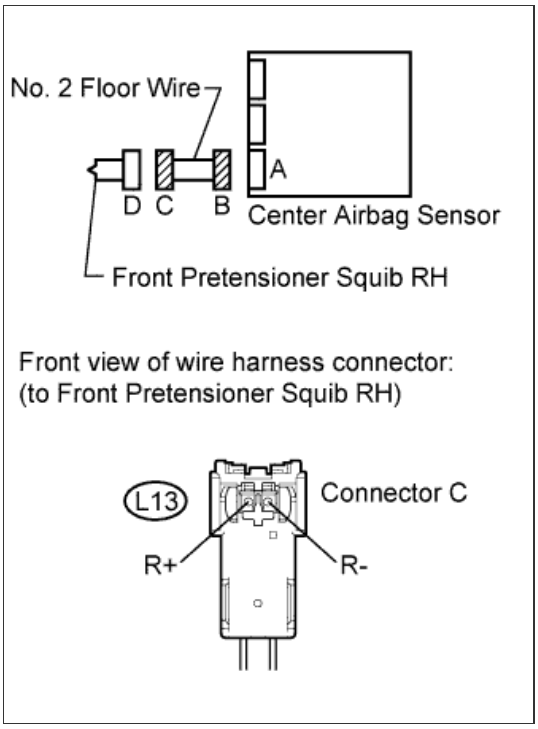

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

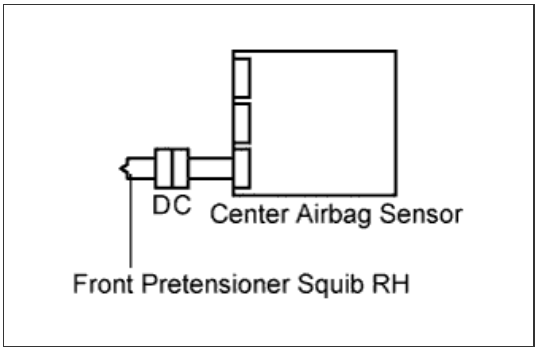

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1805/52 Short in Front Passenger Side Squib Circuit

DTC B1806/52 Open in Front Passenger Side Squib Circuit

DTC B1807/52 Short to GND in Front Passenger Side Squib Circuit

DTC B1808/52 Short to B+ in Front Passenger Side Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1805/52	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib circuit during the primary check. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1806/52	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib circuit for 2 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1807/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1808/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly

WIRING DIAGRAM

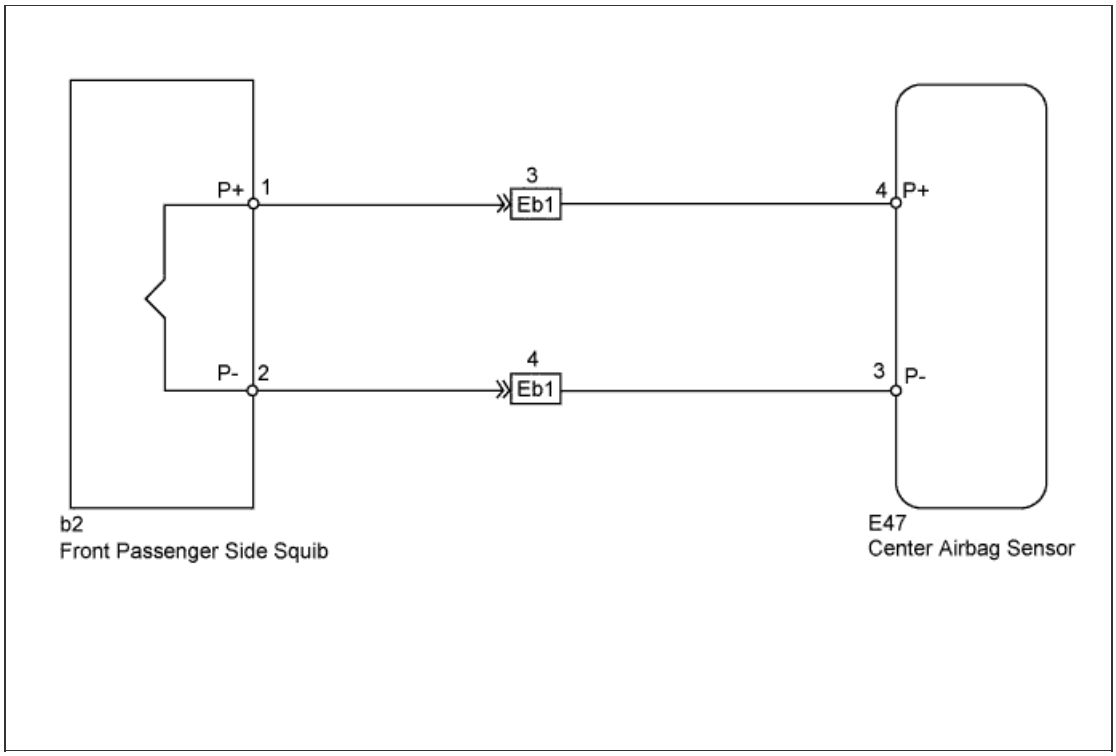

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB)

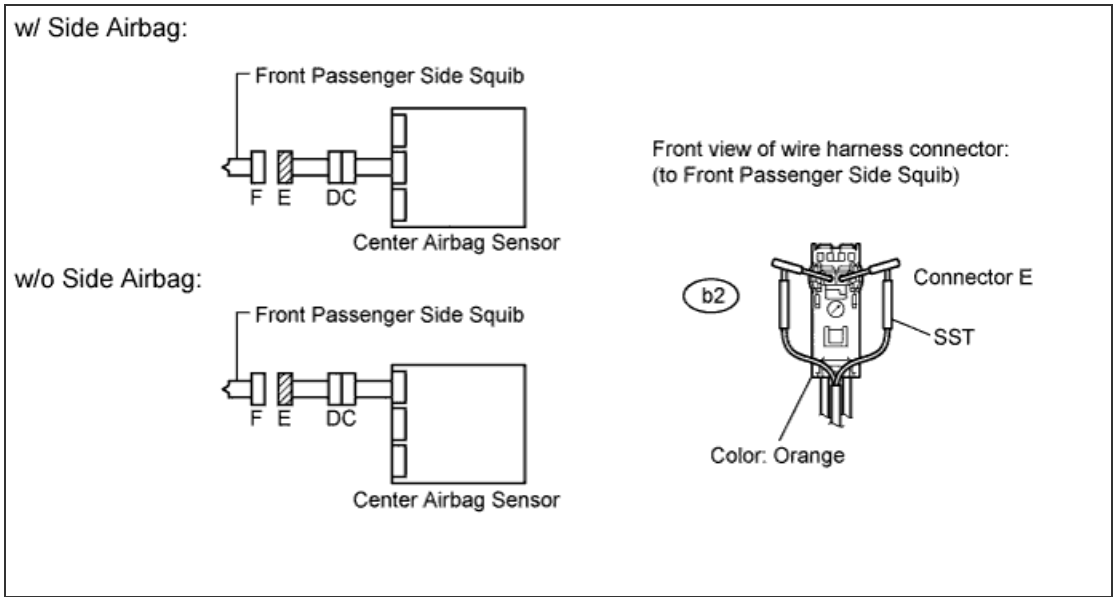

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib) for measurement, as this may lead to a serious injury

due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB CIRCUIT

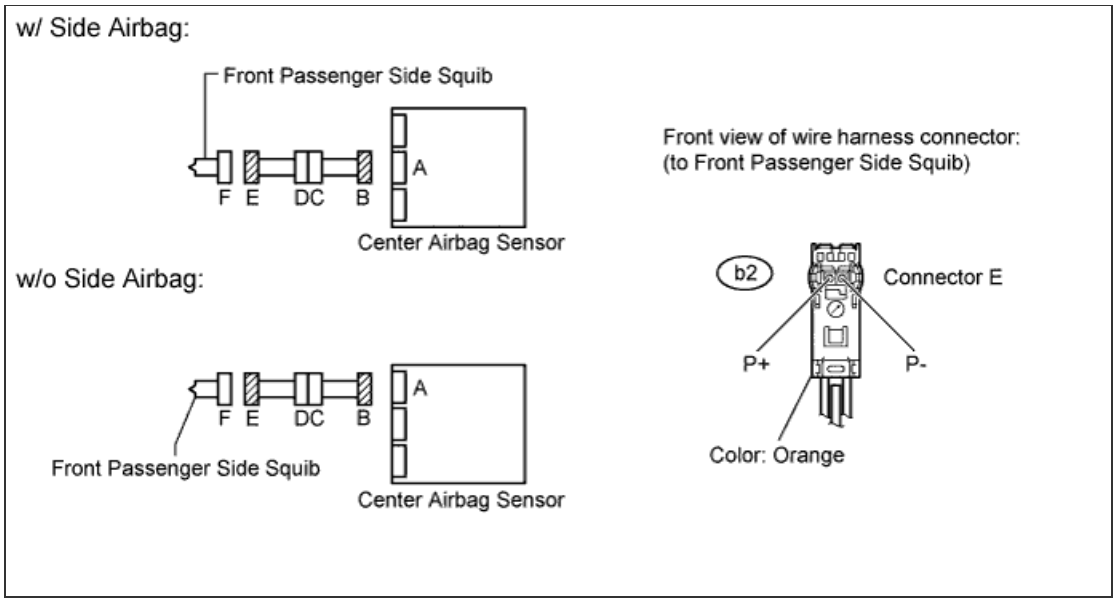

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b2-1 (P+) - Body ground	Engine switch on (IG)	Below 1 V
b2-2 (P-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	1 MΩ or higher
b2-1 (P+) - Body ground	Always	1 MΩ or higher
b2-2 (P-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

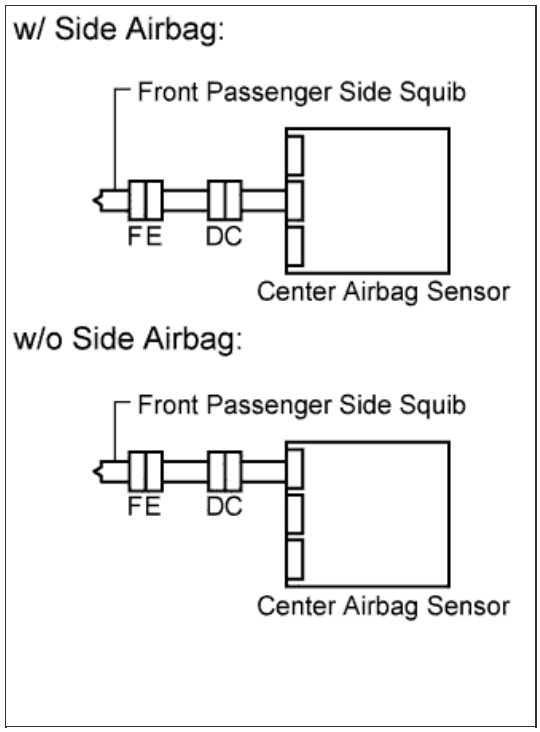


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

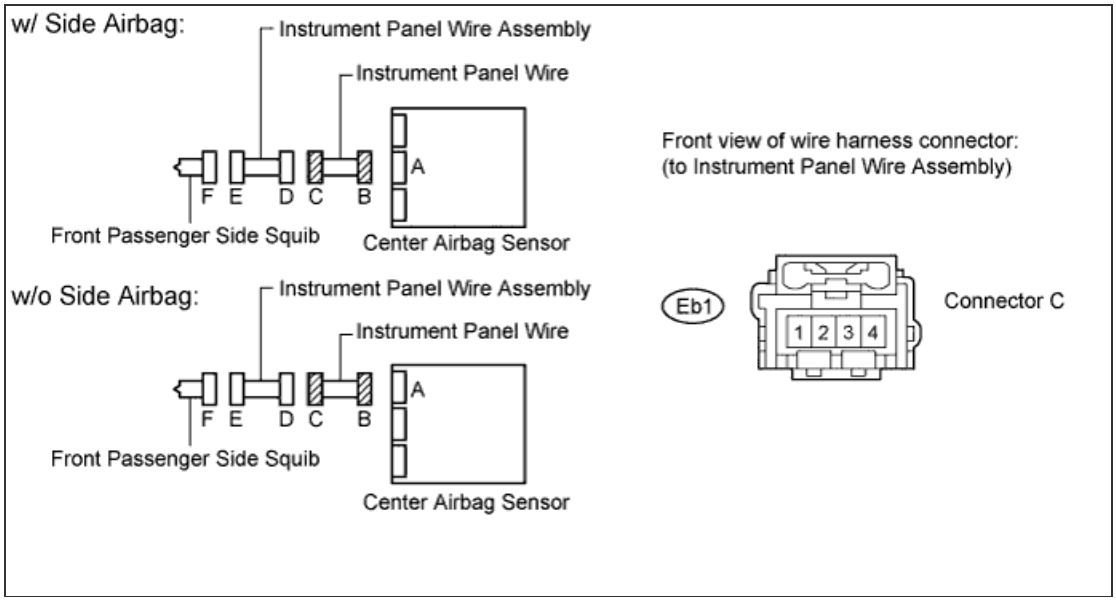

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-3 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-4 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	1 MΩ or higher
Eb1-3 - Body ground	Always	1 MΩ or higher
Eb1-4 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1900/73 Short in Front Pretensioner Squib RH Circuit

DTC B1901/73 Open in Front Pretensioner Squib RH Circuit

DTC B1902/73 Short to GND in Front Pretensioner Squib RH Circuit

DTC B1903/73 Short to B+ in Front Pretensioner Squib RH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib RH circuit consists of the center airbag sensor and the front seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1900/73	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib RH circuit during the primary check. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1901/73	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib RH circuit for 2 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1902/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1903/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

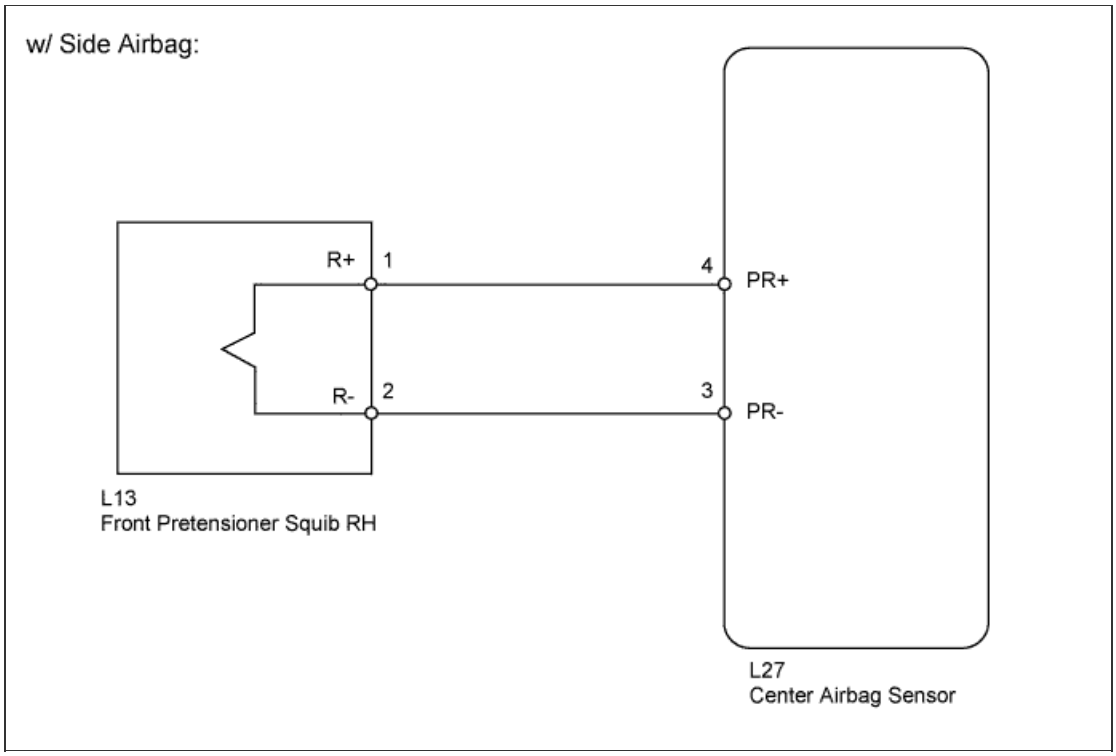

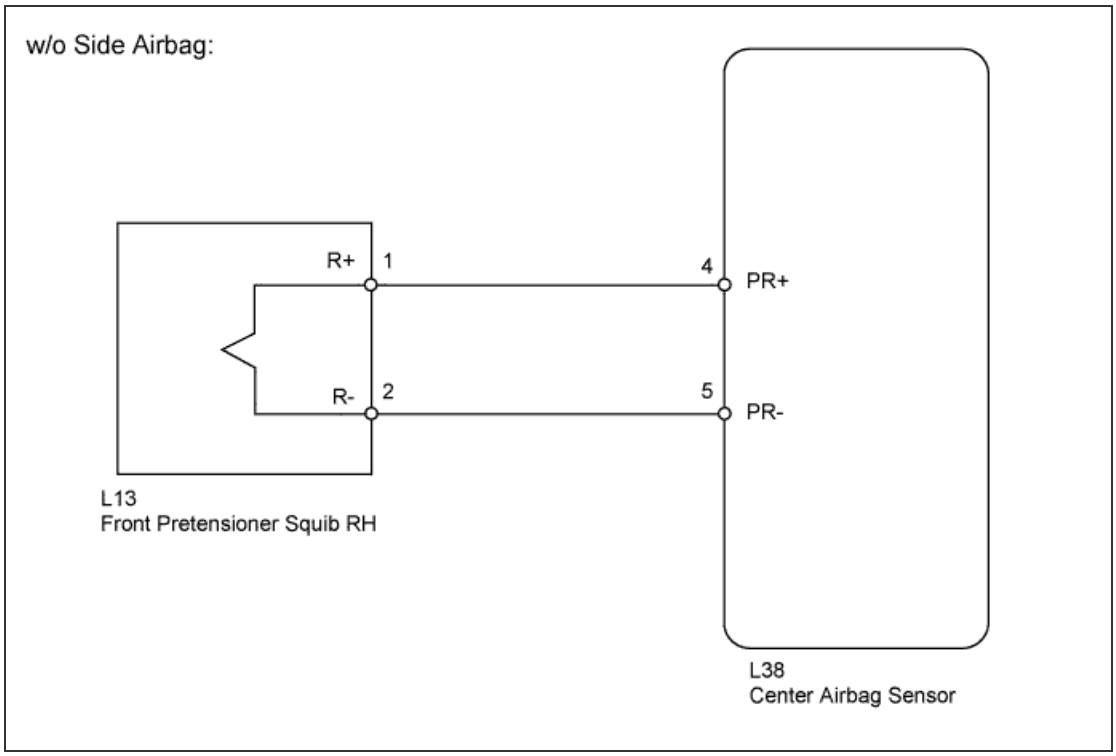

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT RH (FRONT PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the front seat outer belt RH (front pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

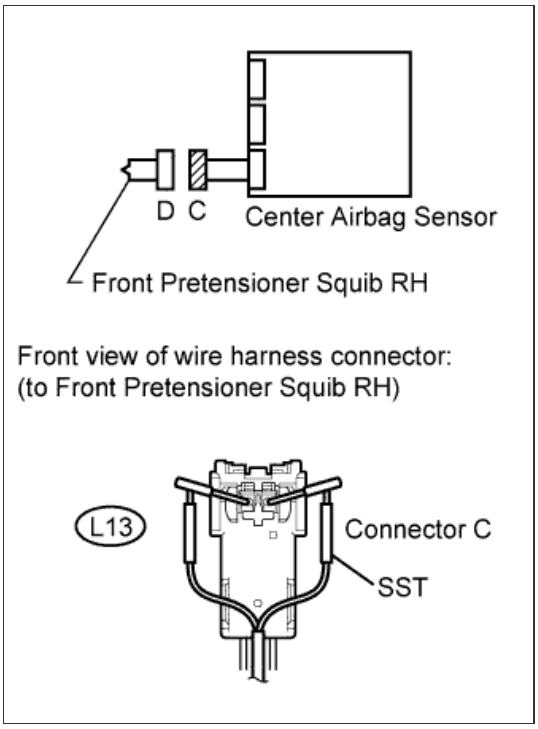

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the front seat outer belt RH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK →

3.CHECK NO. 2 FLOOR WIRE (FRONT PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L13-1 (R+) - Body ground	Engine switch on (IG)	Below 1 V

L13-2 (R-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	1 MΩ or higher
L13-1 (R+) - Body ground	Always	1 MΩ or higher
L13-2 (R-) - Body ground	Always	1 MΩ or higher

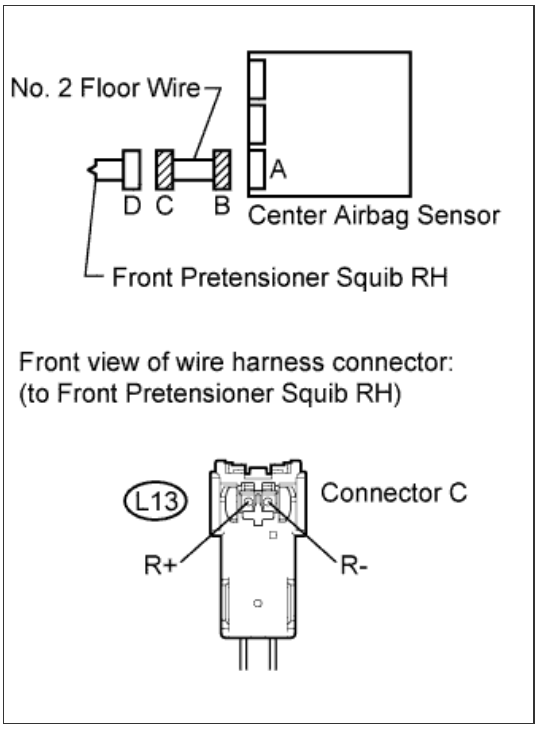

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

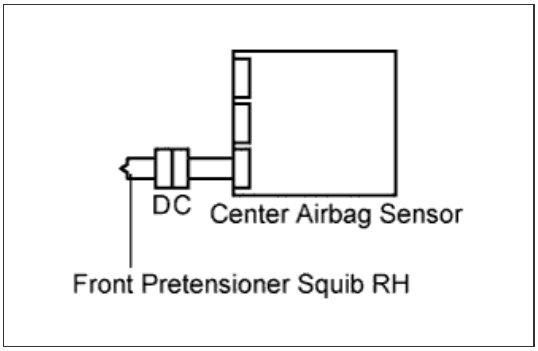

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1805/52 Short in Front Passenger Side Squib Circuit

DTC B1806/52 Open in Front Passenger Side Squib Circuit

DTC B1807/52 Short to GND in Front Passenger Side Squib Circuit

DTC B1808/52 Short to B+ in Front Passenger Side Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1805/52	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib circuit during the primary check. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1806/52	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib circuit for 2 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1807/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1808/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly

WIRING DIAGRAM

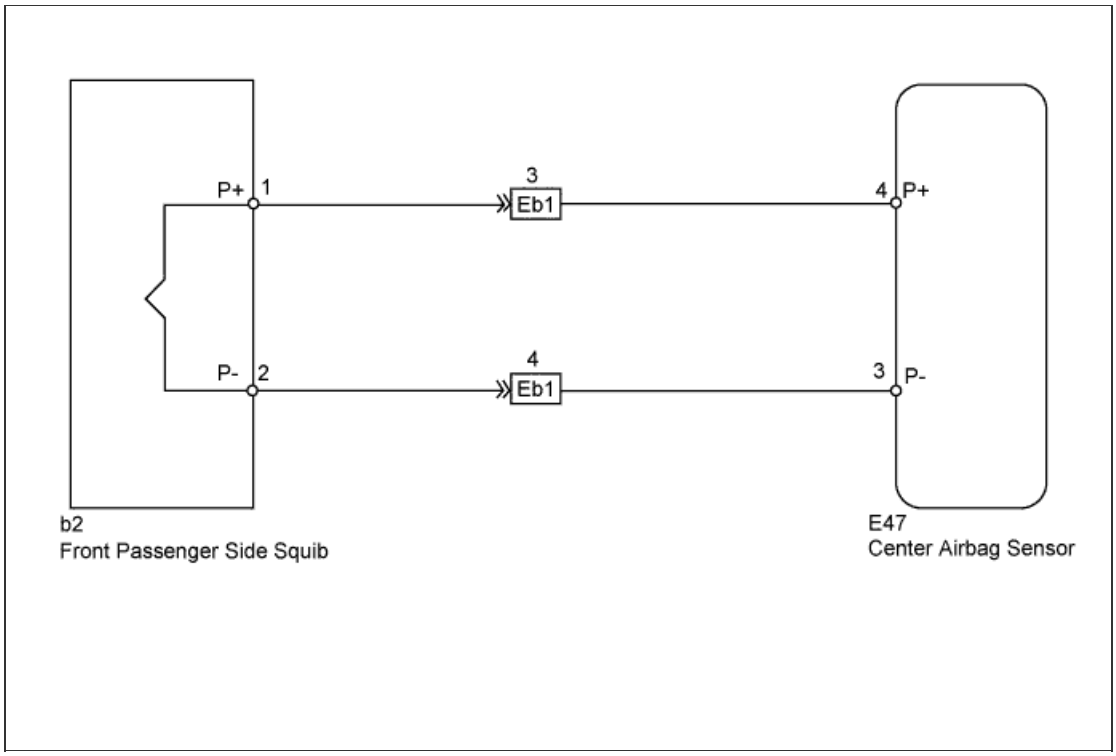

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB)

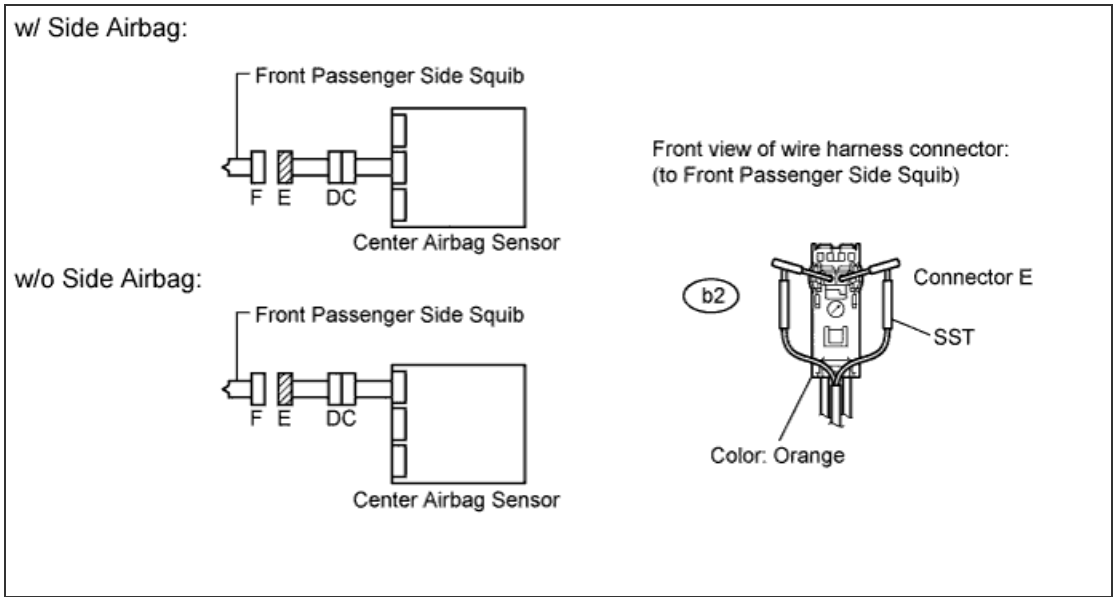

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib) for measurement, as this may lead to a serious injury

due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB CIRCUIT

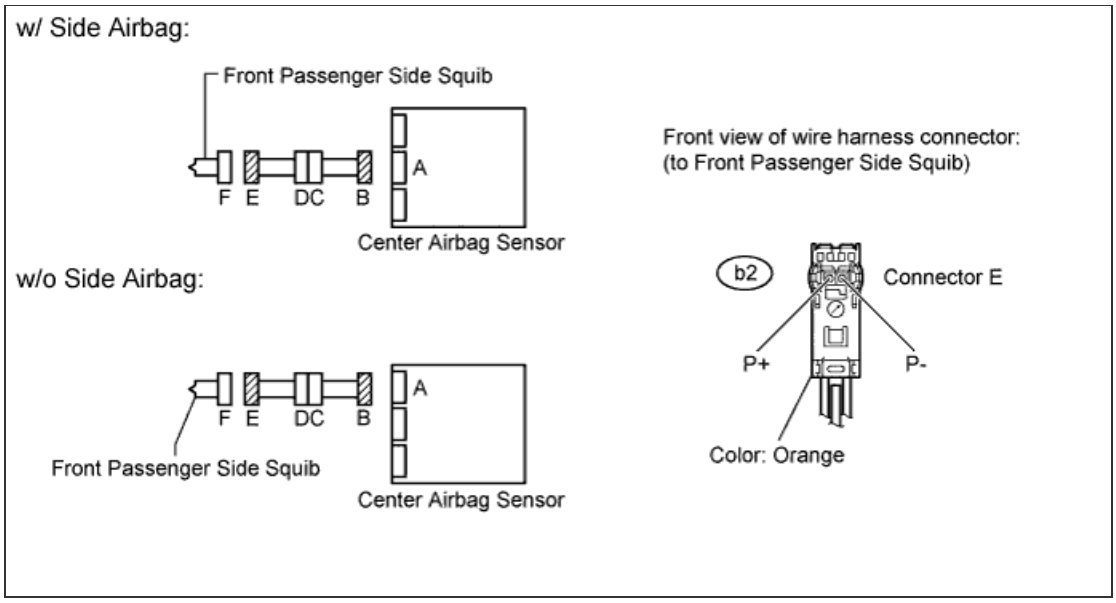

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b2-1 (P+) - Body ground	Engine switch on (IG)	Below 1 V
b2-2 (P-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	1 MΩ or higher
b2-1 (P+) - Body ground	Always	1 MΩ or higher
b2-2 (P-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

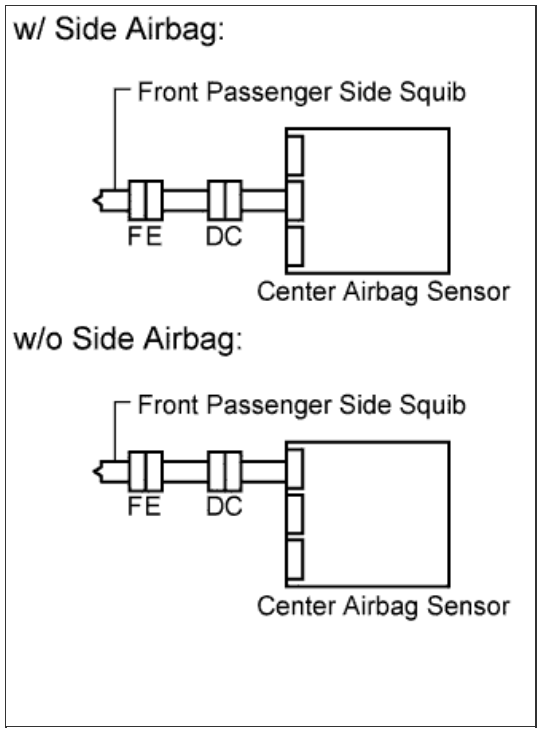


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

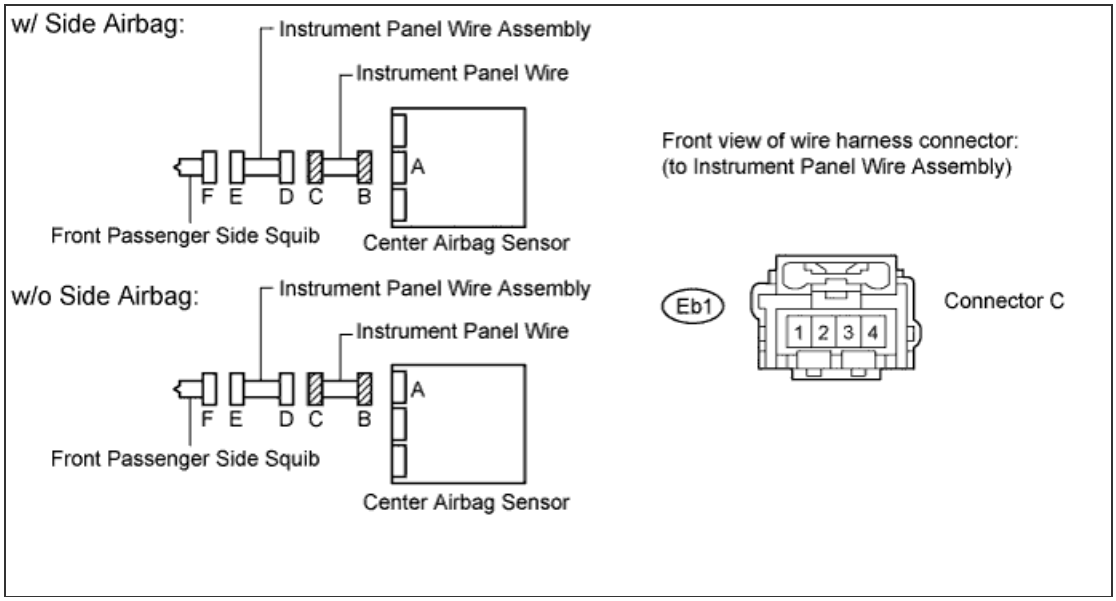

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-3 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-4 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	1 MΩ or higher
Eb1-3 - Body ground	Always	1 MΩ or higher
Eb1-4 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1900/73 Short in Front Pretensioner Squib RH Circuit

DTC B1901/73 Open in Front Pretensioner Squib RH Circuit

DTC B1902/73 Short to GND in Front Pretensioner Squib RH Circuit

DTC B1903/73 Short to B+ in Front Pretensioner Squib RH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib RH circuit consists of the center airbag sensor and the front seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1900/73	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib RH circuit during the primary check. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1901/73	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib RH circuit for 2 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1902/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly
B1903/73	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib RH circuit for 0.5 seconds. • A front pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat outer belt assembly RH (Front pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

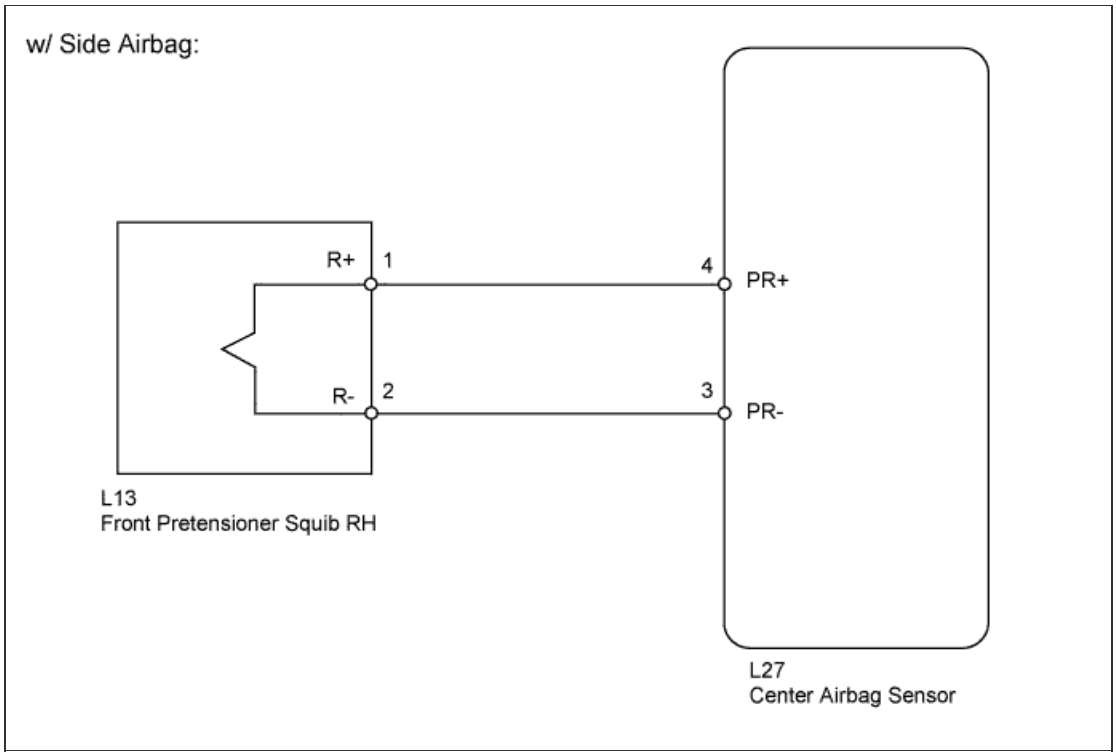

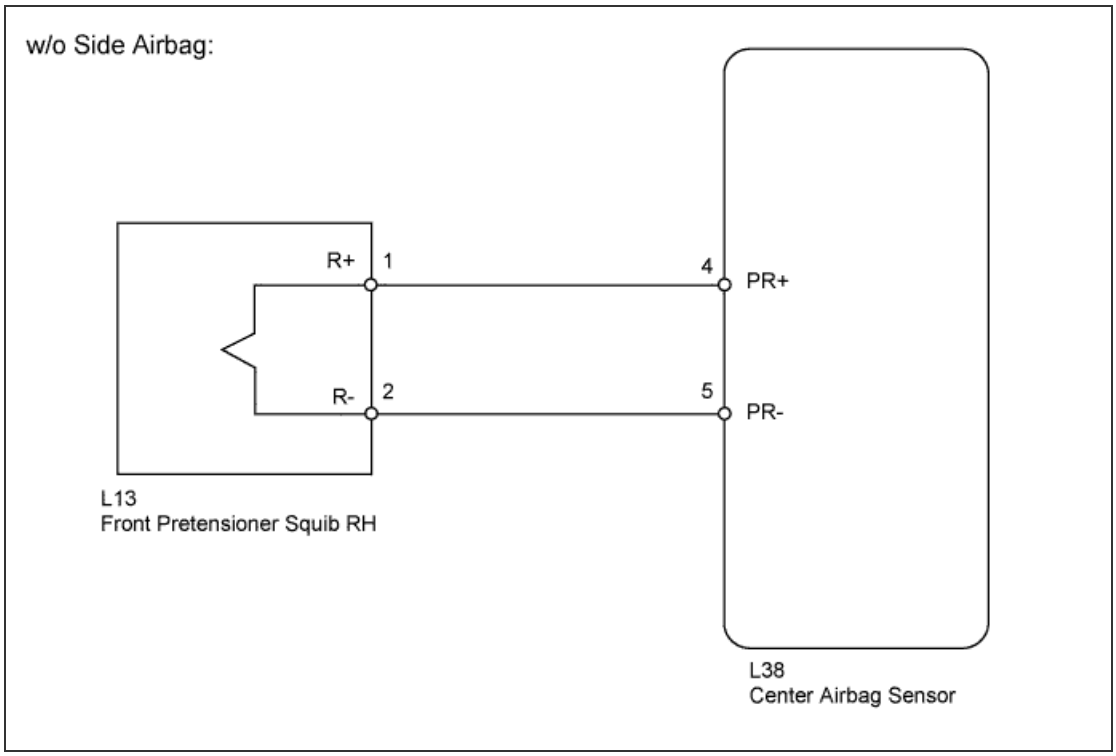

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT RH (FRONT PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.


CAUTION:

Never connect the tester to the front seat outer belt RH (front pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

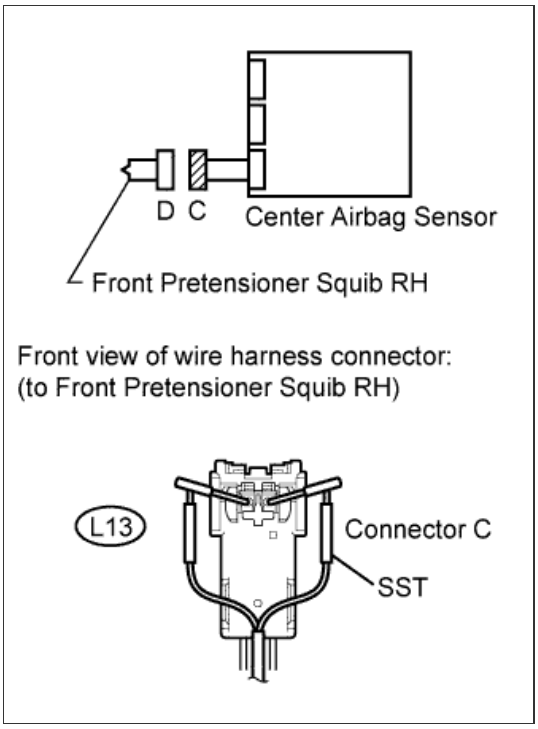

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the front seat outer belt RH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK →

3.CHECK NO. 2 FLOOR WIRE (FRONT PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L13-1 (R+) - Body ground	Engine switch on (IG)	Below 1 V

L13-2 (R-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L13-1 (R+) - L13-2 (R-)	Always	1 MΩ or higher
L13-1 (R+) - Body ground	Always	1 MΩ or higher
L13-2 (R-) - Body ground	Always	1 MΩ or higher

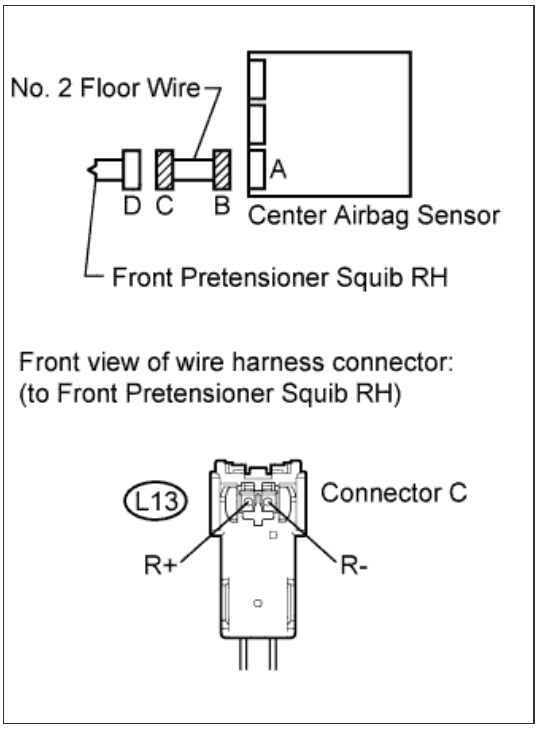

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

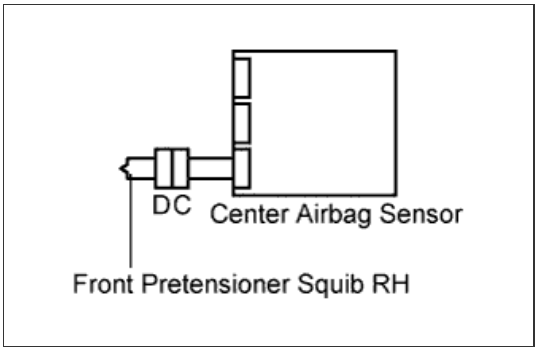

OK:
DTC B1900, B1901, B1902 or B1903 is not output.

HINT:

Codes other than DTC B1900, B1901, B1902 and B1903 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1805/52 Short in Front Passenger Side Squib Circuit

DTC B1806/52 Open in Front Passenger Side Squib Circuit

DTC B1807/52 Short to GND in Front Passenger Side Squib Circuit

DTC B1808/52 Short to B+ in Front Passenger Side Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1805/52	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib circuit during the primary check. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1806/52	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib circuit for 2 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1807/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1808/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly

WIRING DIAGRAM

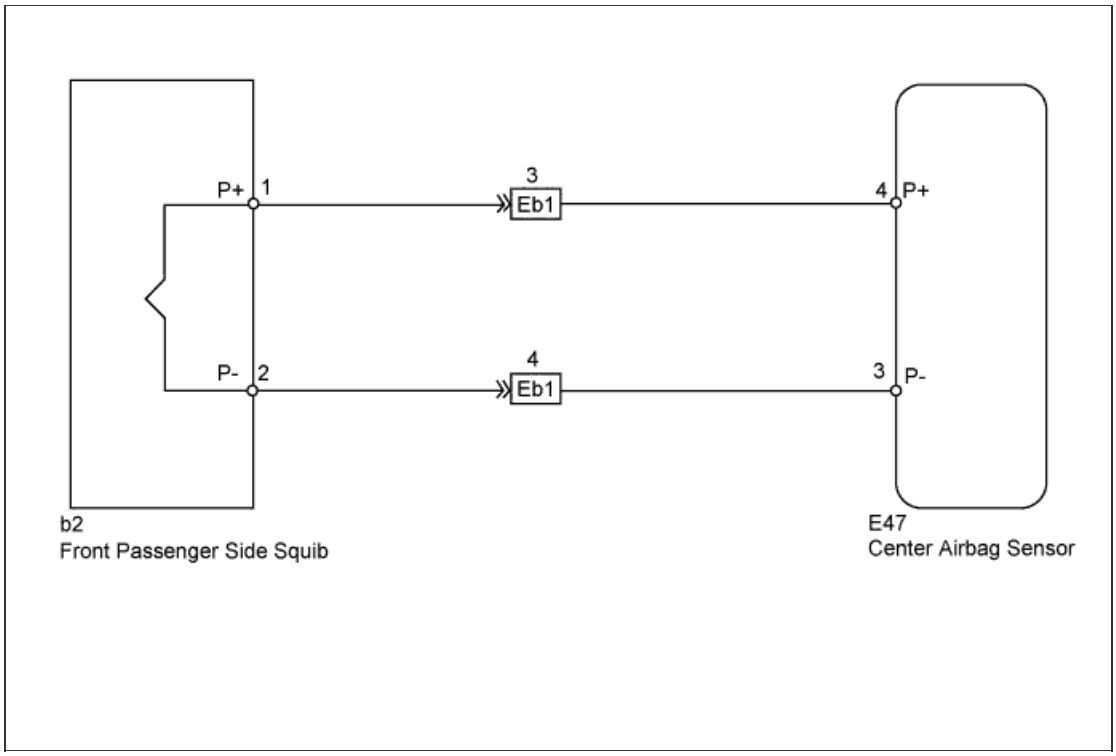

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB)

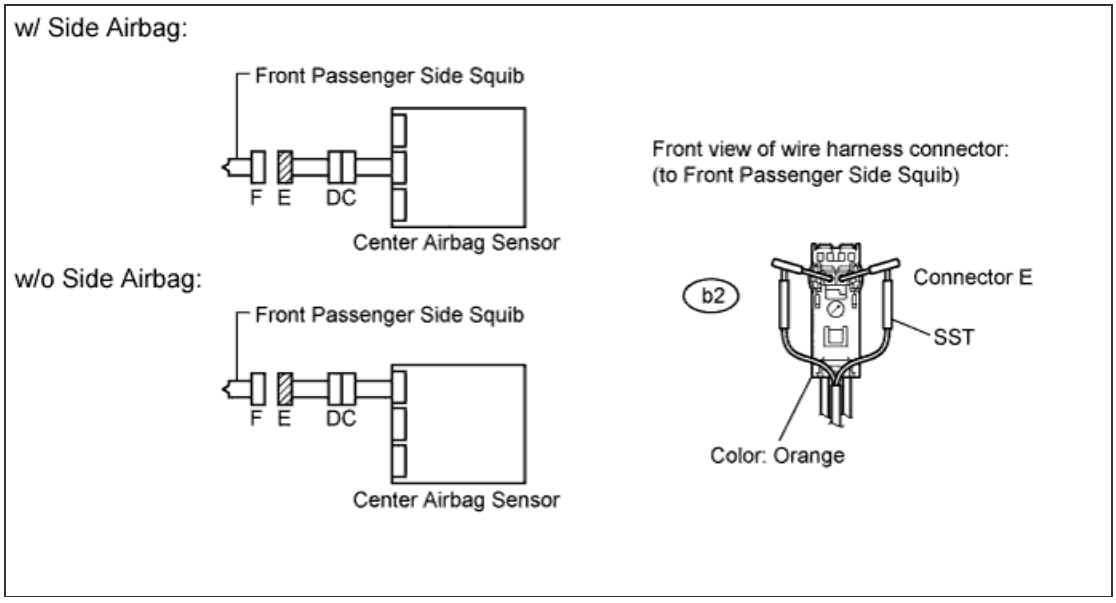

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib) for measurement, as this may lead to a serious injury

due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB CIRCUIT

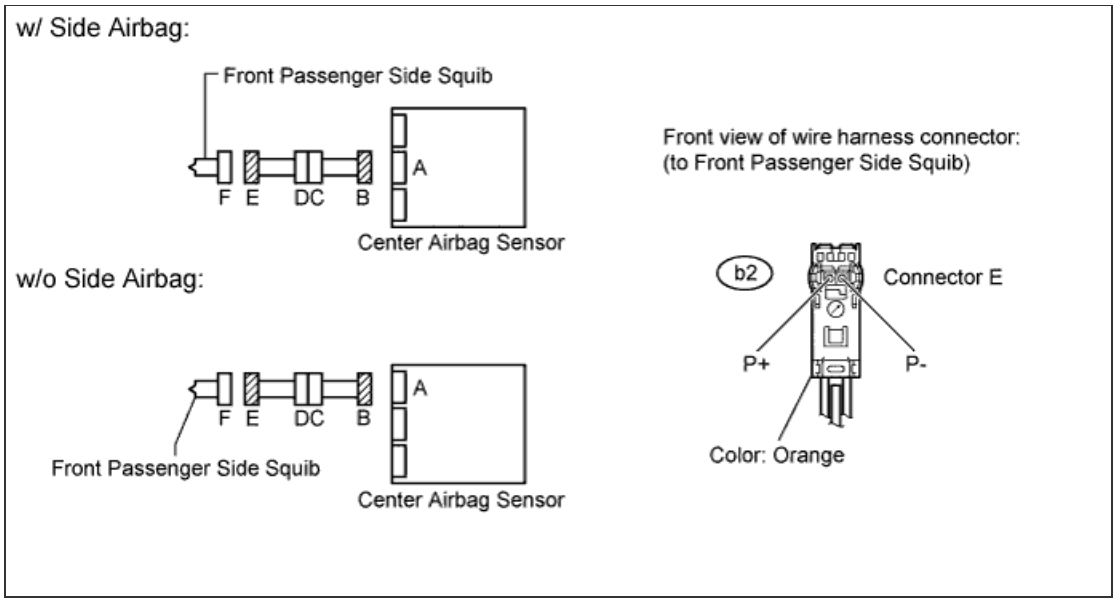

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b2-1 (P+) - Body ground	Engine switch on (IG)	Below 1 V
b2-2 (P-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	1 MΩ or higher
b2-1 (P+) - Body ground	Always	1 MΩ or higher
b2-2 (P-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

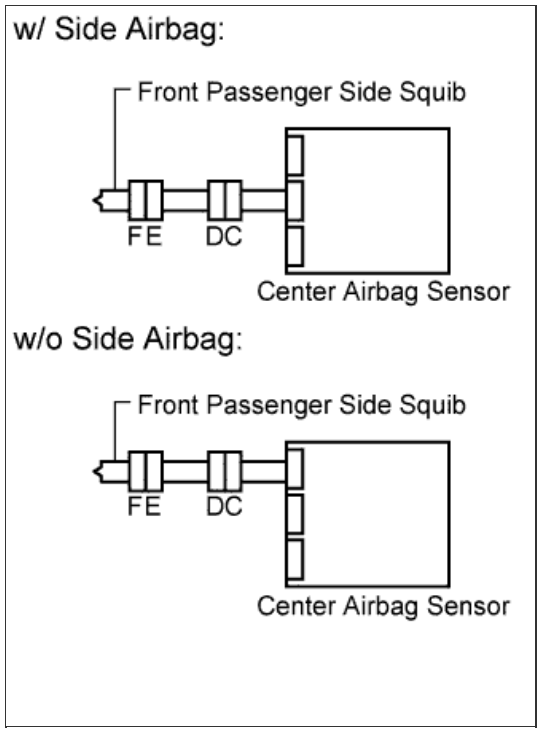


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

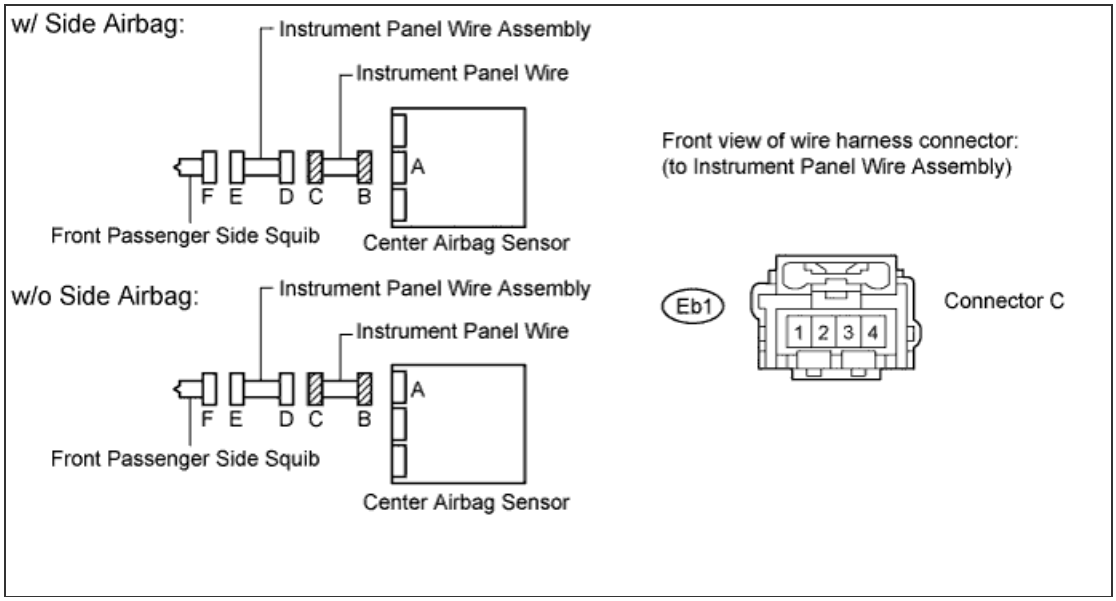

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-3 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-4 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	1 MΩ or higher
Eb1-3 - Body ground	Always	1 MΩ or higher
Eb1-4 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1905/74 Short in Front Pretensioner Squib LH Circuit

DTC B1906/74 Open in Front Pretensioner Squib LH Circuit

DTC B1907/74 Short to GND in Front Pretensioner Squib LH Circuit

DTC B1908/74 Short to B+ in Front Pretensioner Squib LH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib LH circuit consists of the center airbag sensor and the front seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1905/74	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib LH circuit during the primary check. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1906/74	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib LH circuit for 2 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1907/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1908/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

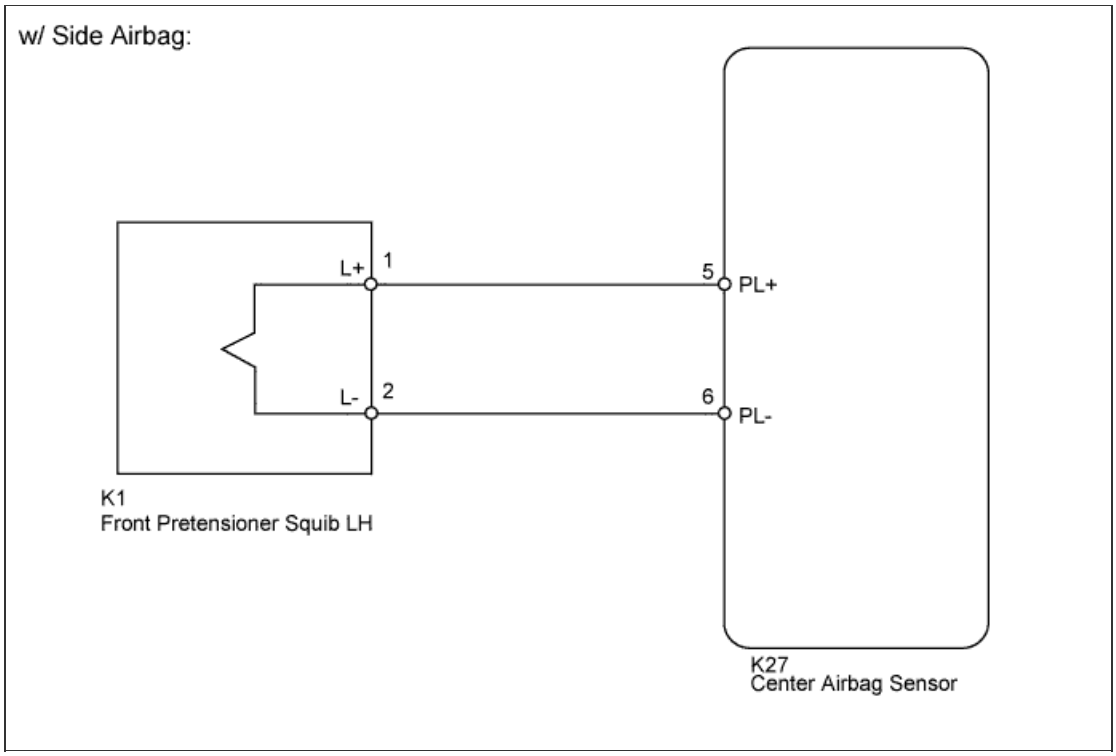

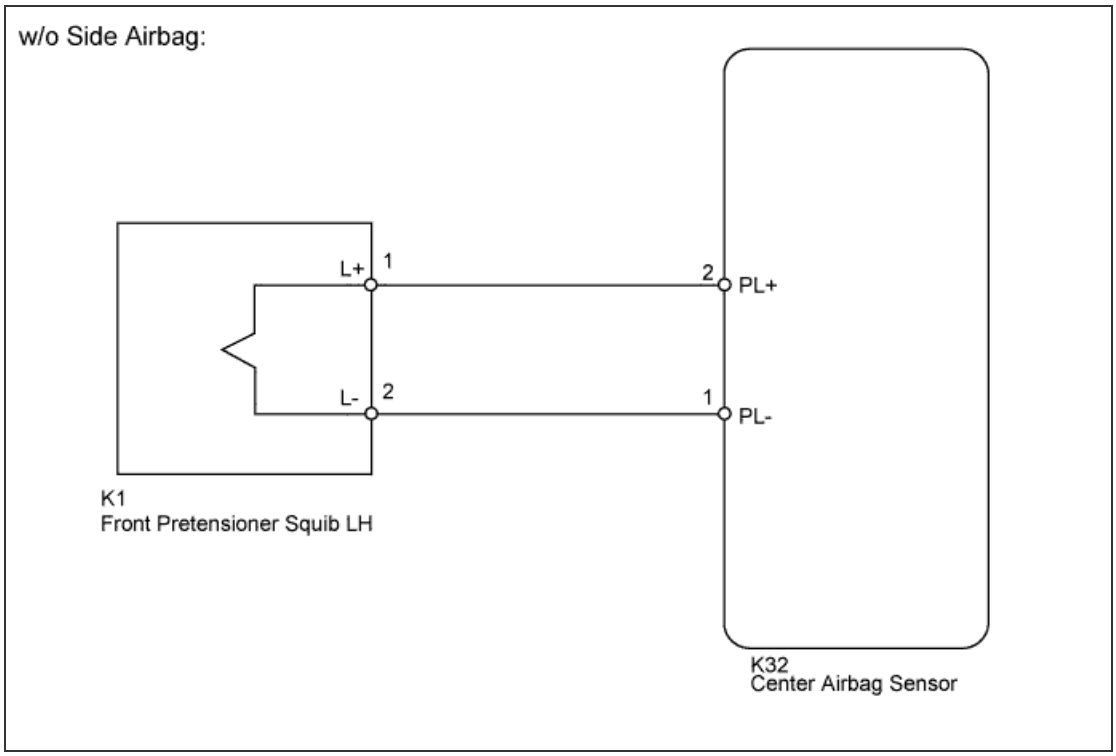

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT LH (FRONT PRETENSIONER SQUIB LH)

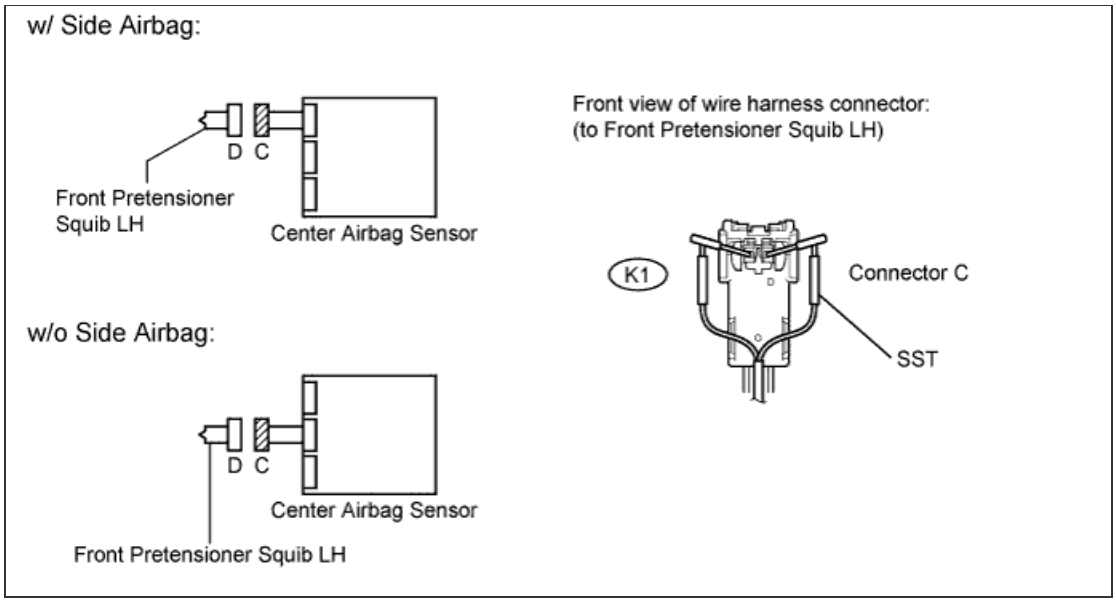

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the front seat outer belt LH (front pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.


d. Check that the floor wire connector (on the front seat outer belt LH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (FRONT PRETENSIONER SQUIB LH CIRCUIT)

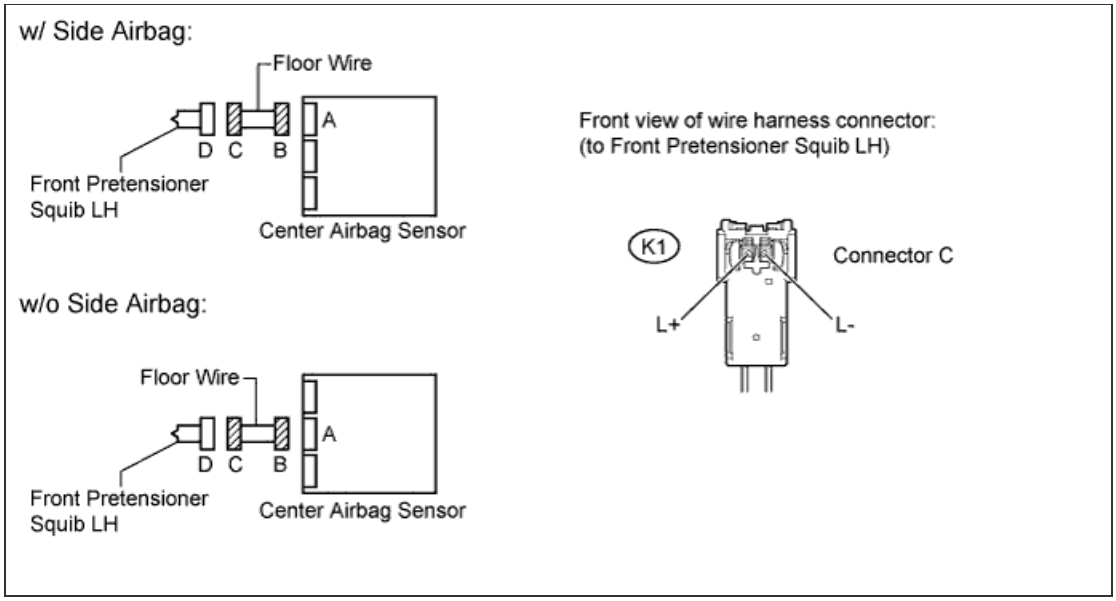

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K1-1 (L+) - Body ground	Engine switch on (IG)	Below 1 V
K1-2 (L-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	1 MΩ or higher
K1-1 (L+) - Body ground	Always	1 MΩ or higher
K1-2 (L-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

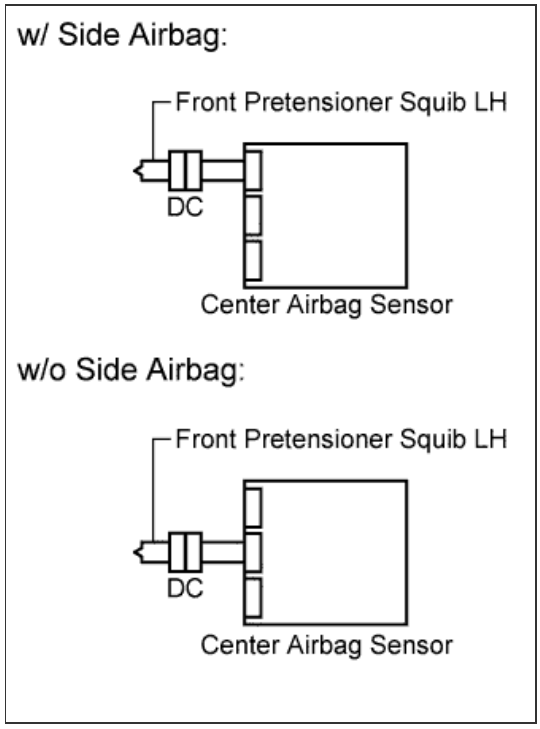

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1805/52 Short in Front Passenger Side Squib Circuit

DTC B1806/52 Open in Front Passenger Side Squib Circuit

DTC B1807/52 Short to GND in Front Passenger Side Squib Circuit

DTC B1808/52 Short to B+ in Front Passenger Side Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1805/52	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib circuit during the primary check. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1806/52	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib circuit for 2 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1807/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1808/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly

WIRING DIAGRAM

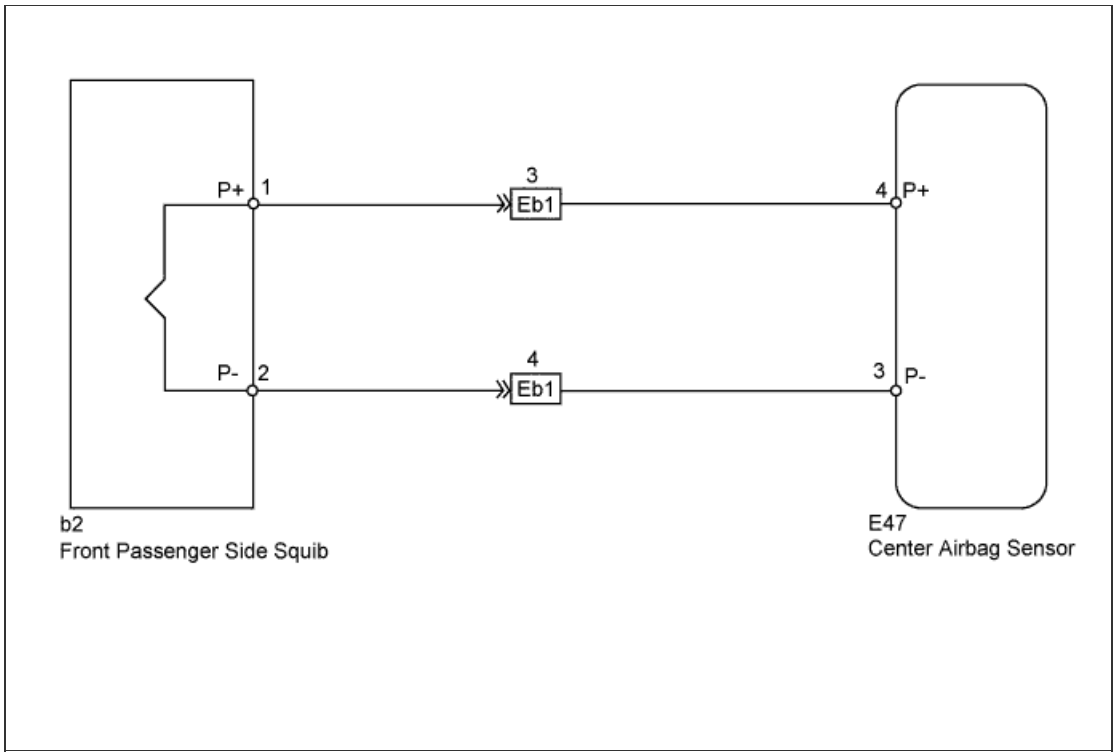

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB)

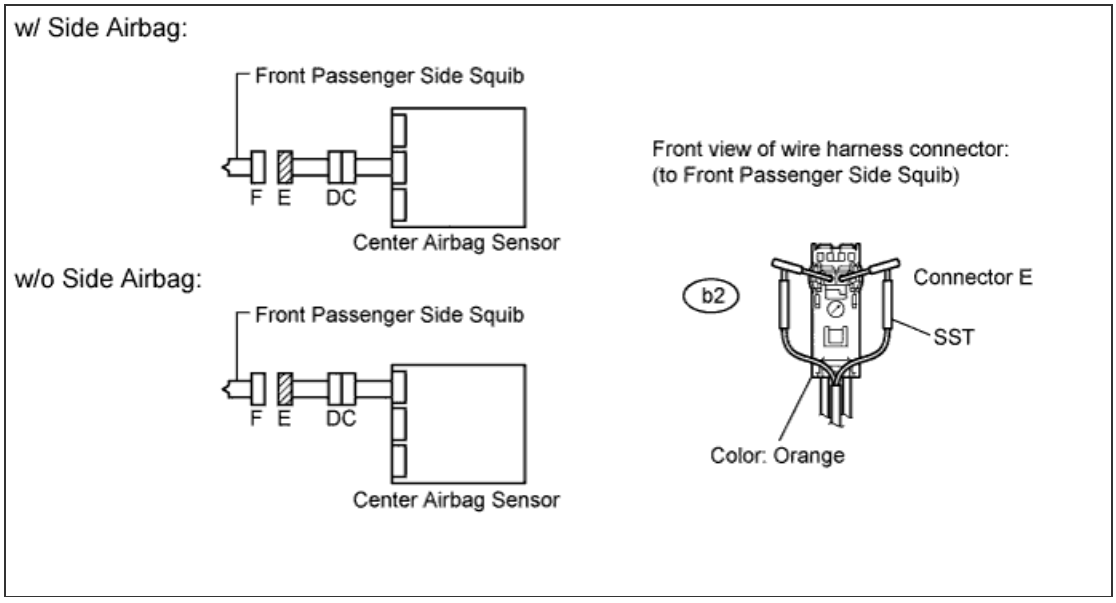

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib) for measurement, as this may lead to a serious injury

due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB CIRCUIT

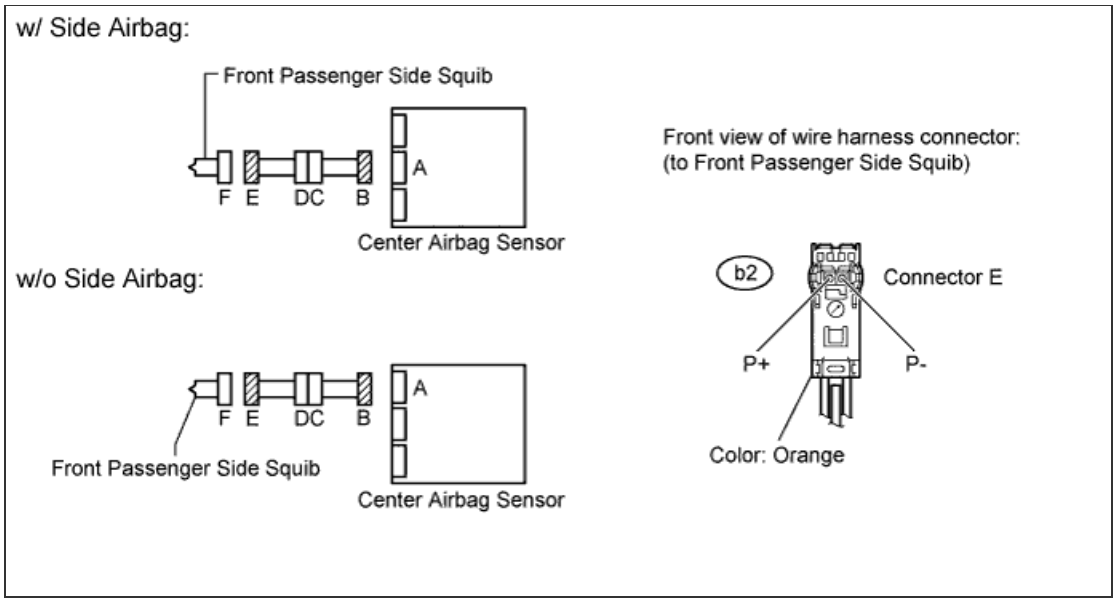

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b2-1 (P+) - Body ground	Engine switch on (IG)	Below 1 V
b2-2 (P-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	1 MΩ or higher
b2-1 (P+) - Body ground	Always	1 MΩ or higher
b2-2 (P-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

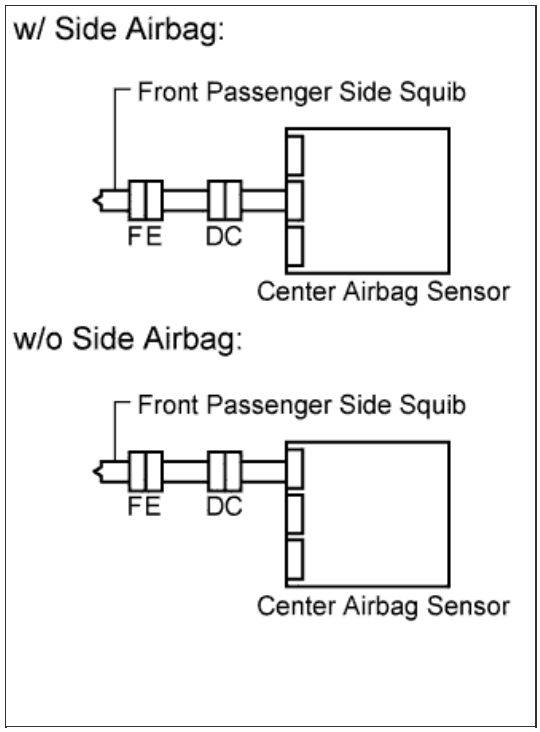


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

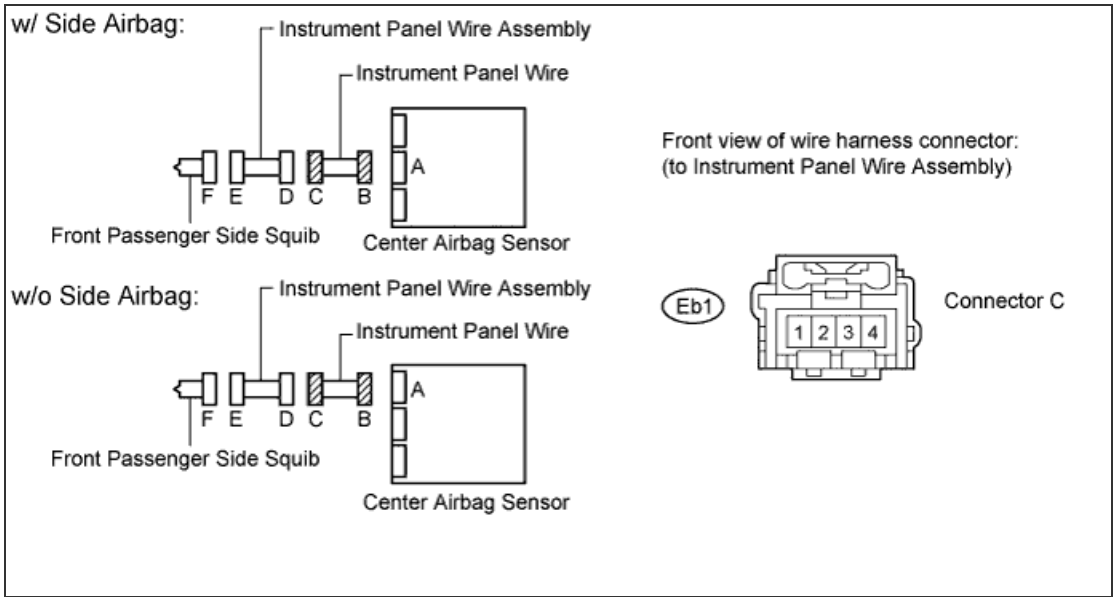

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-3 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-4 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	1 MΩ or higher
Eb1-3 - Body ground	Always	1 MΩ or higher
Eb1-4 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1905/74 Short in Front Pretensioner Squib LH Circuit

DTC B1906/74 Open in Front Pretensioner Squib LH Circuit

DTC B1907/74 Short to GND in Front Pretensioner Squib LH Circuit

DTC B1908/74 Short to B+ in Front Pretensioner Squib LH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib LH circuit consists of the center airbag sensor and the front seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1905/74	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib LH circuit during the primary check. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1906/74	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib LH circuit for 2 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1907/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1908/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

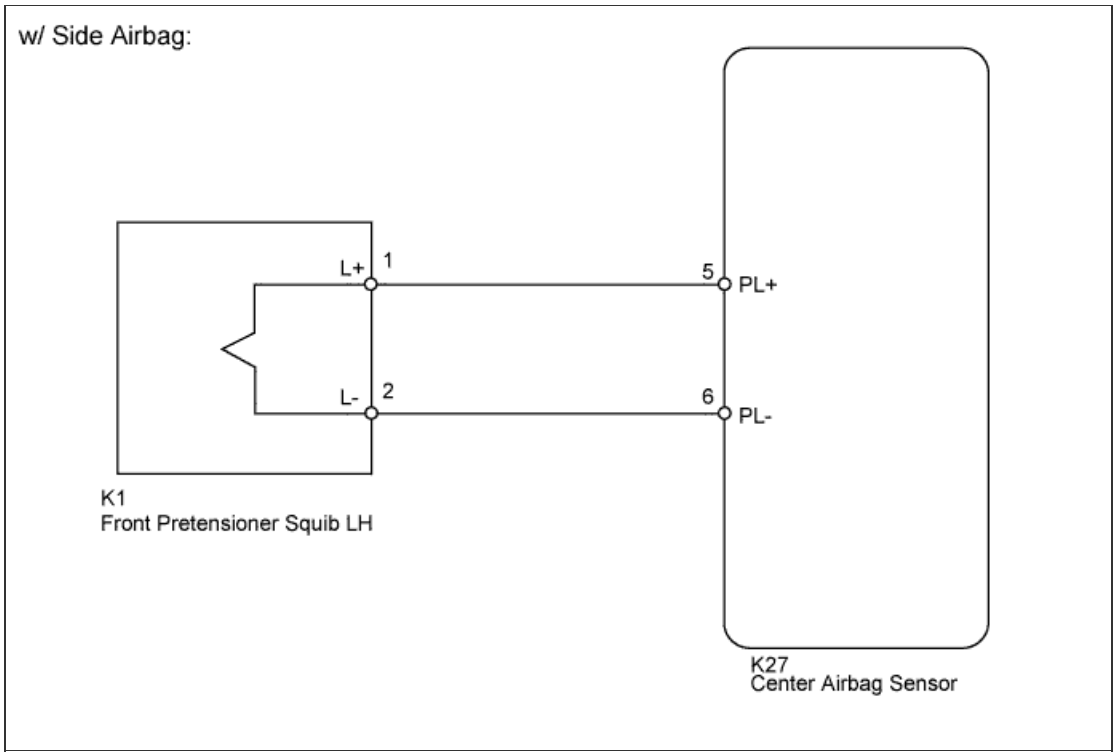

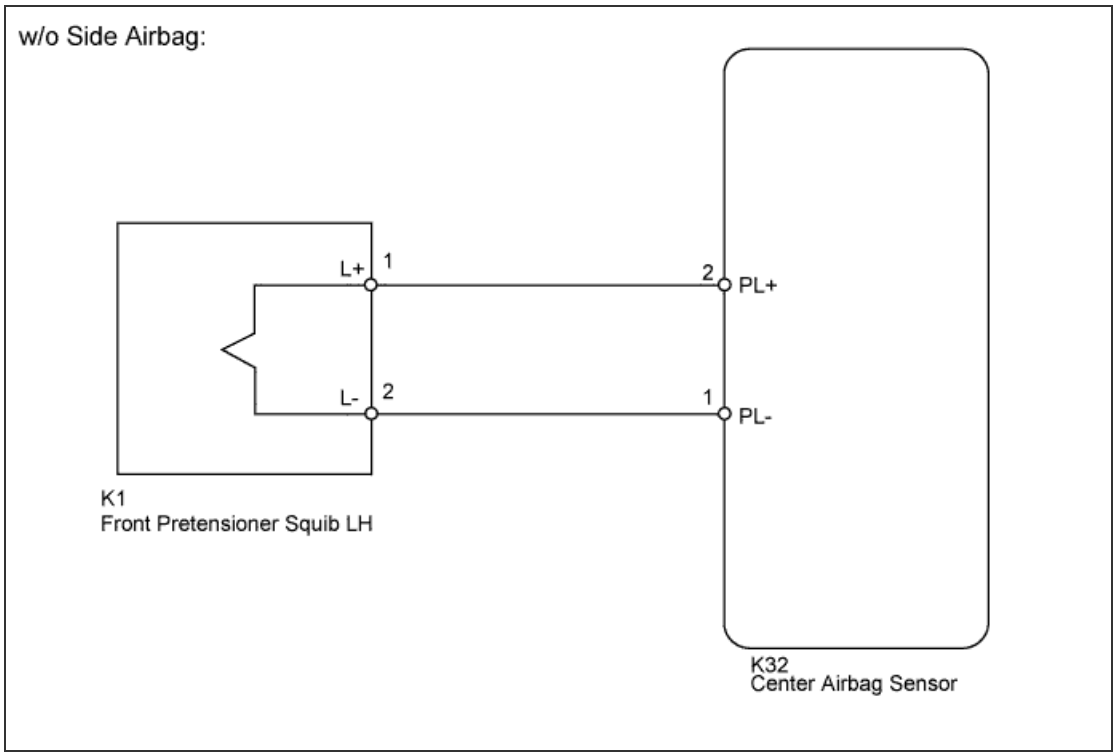

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT LH (FRONT PRETENSIONER SQUIB LH)

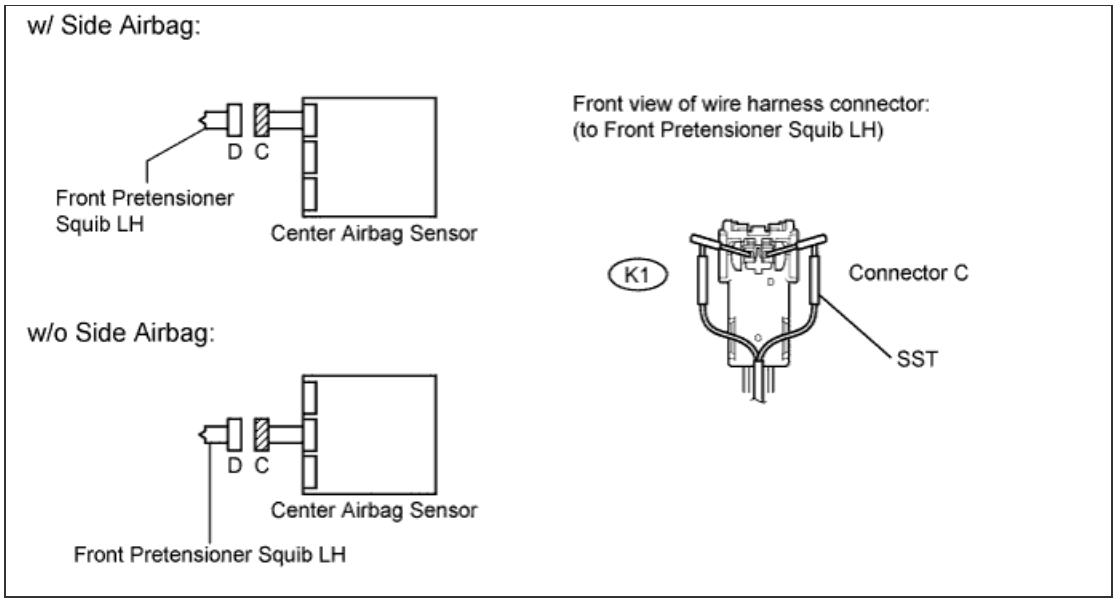

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the front seat outer belt LH (front pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.


d. Check that the floor wire connector (on the front seat outer belt LH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (FRONT PRETENSIONER SQUIB LH CIRCUIT)

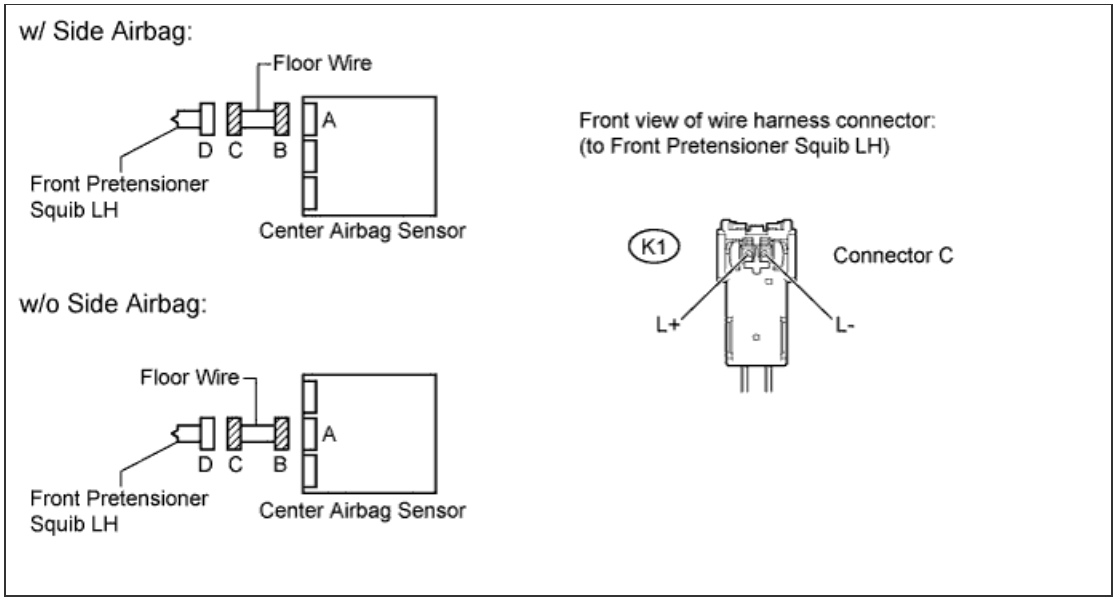

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K1-1 (L+) - Body ground	Engine switch on (IG)	Below 1 V
K1-2 (L-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	1 MΩ or higher
K1-1 (L+) - Body ground	Always	1 MΩ or higher
K1-2 (L-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

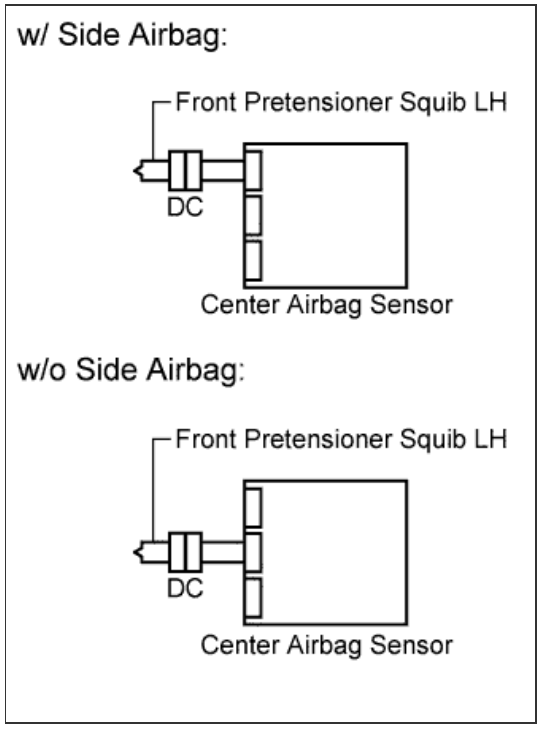

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1805/52 Short in Front Passenger Side Squib Circuit

DTC B1806/52 Open in Front Passenger Side Squib Circuit

DTC B1807/52 Short to GND in Front Passenger Side Squib Circuit

DTC B1808/52 Short to B+ in Front Passenger Side Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1805/52	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib circuit during the primary check. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1806/52	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib circuit for 2 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1807/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1808/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly

WIRING DIAGRAM

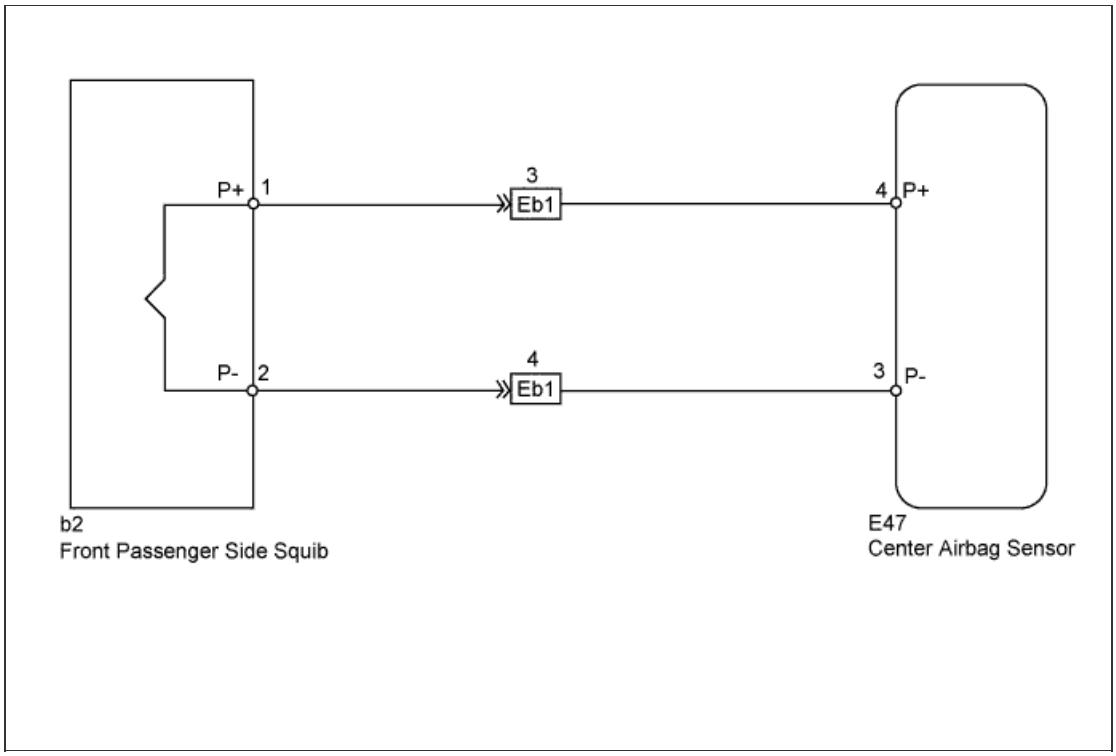

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB)

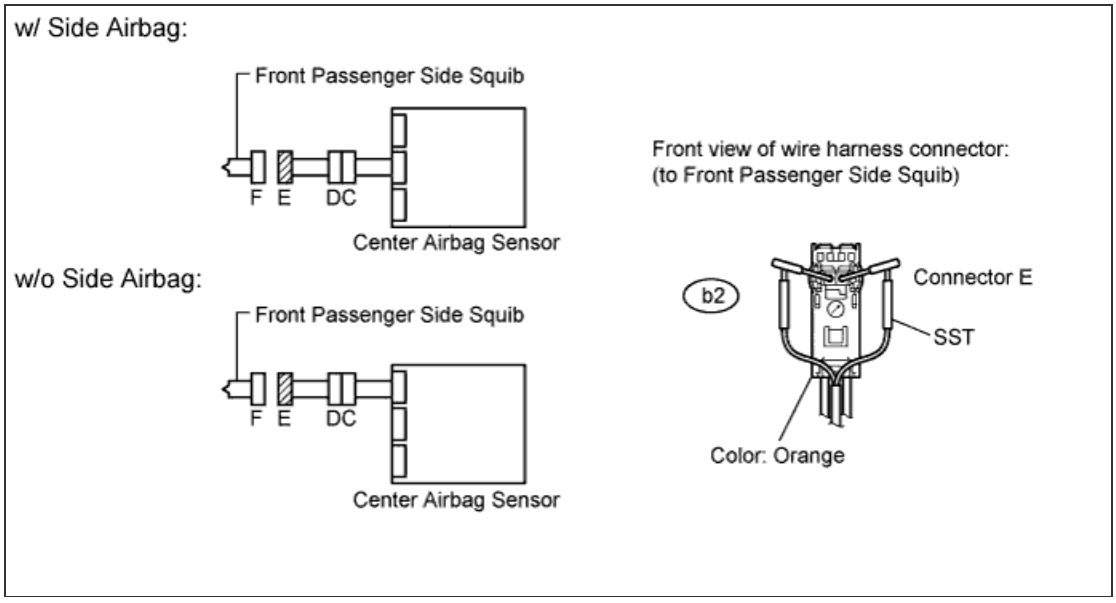

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib) for measurement, as this may lead to a serious injury

due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB CIRCUIT

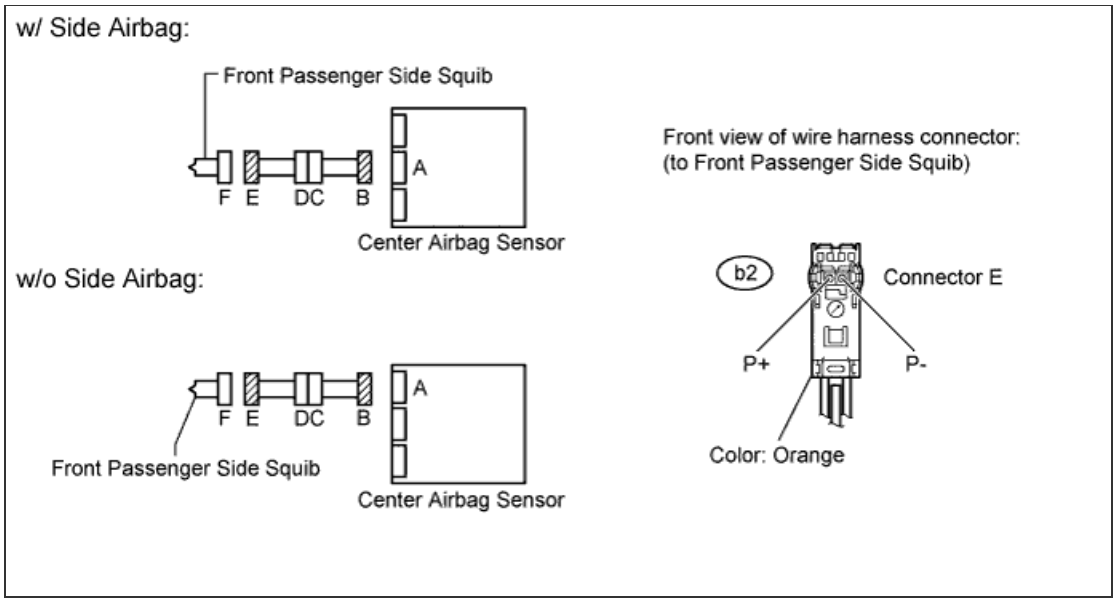

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b2-1 (P+) - Body ground	Engine switch on (IG)	Below 1 V
b2-2 (P-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	1 MΩ or higher
b2-1 (P+) - Body ground	Always	1 MΩ or higher
b2-2 (P-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

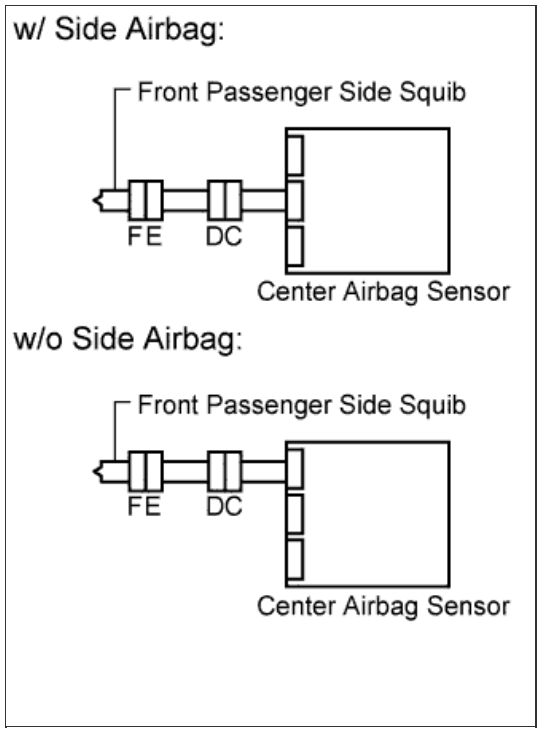


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

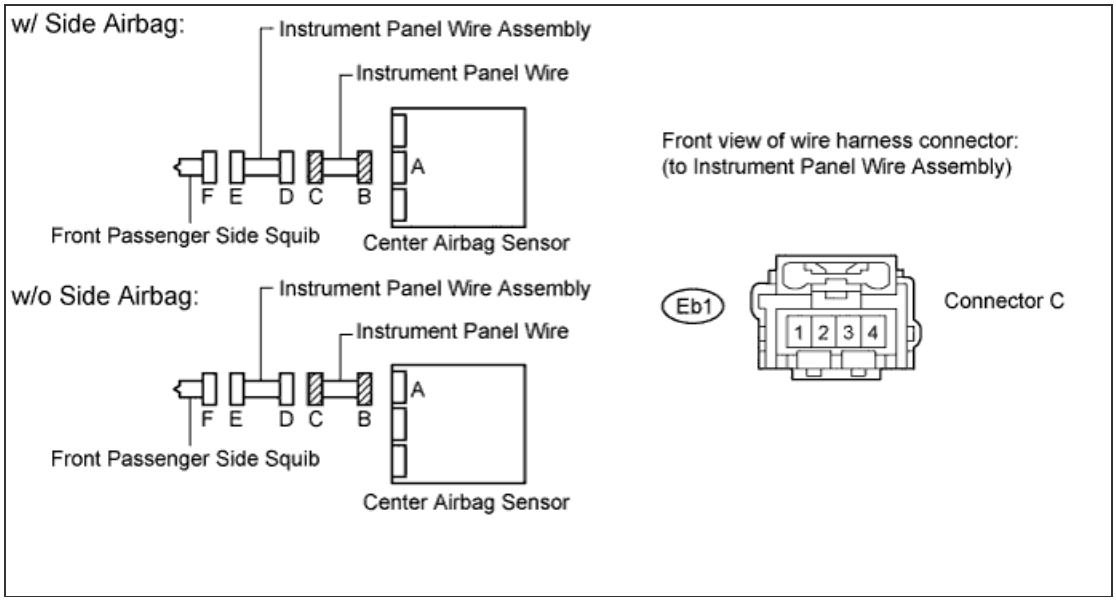

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-3 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-4 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	1 MΩ or higher
Eb1-3 - Body ground	Always	1 MΩ or higher
Eb1-4 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1905/74 Short in Front Pretensioner Squib LH Circuit

DTC B1906/74 Open in Front Pretensioner Squib LH Circuit

DTC B1907/74 Short to GND in Front Pretensioner Squib LH Circuit

DTC B1908/74 Short to B+ in Front Pretensioner Squib LH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib LH circuit consists of the center airbag sensor and the front seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1905/74	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib LH circuit during the primary check. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1906/74	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib LH circuit for 2 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1907/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1908/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

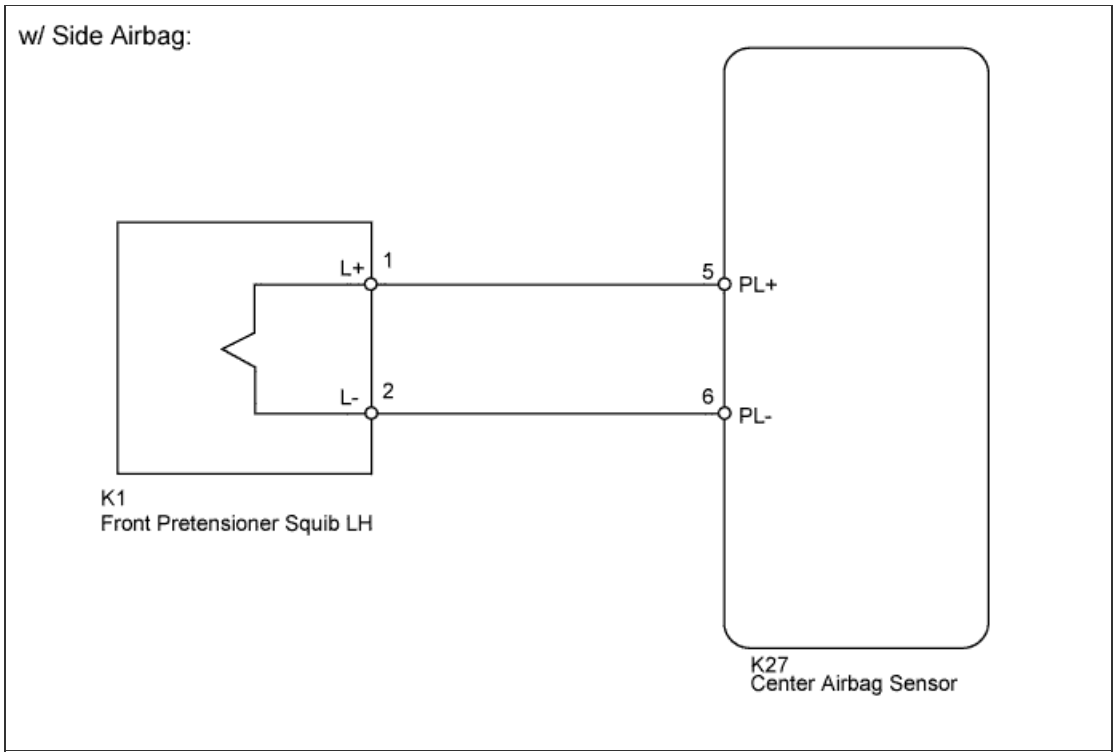

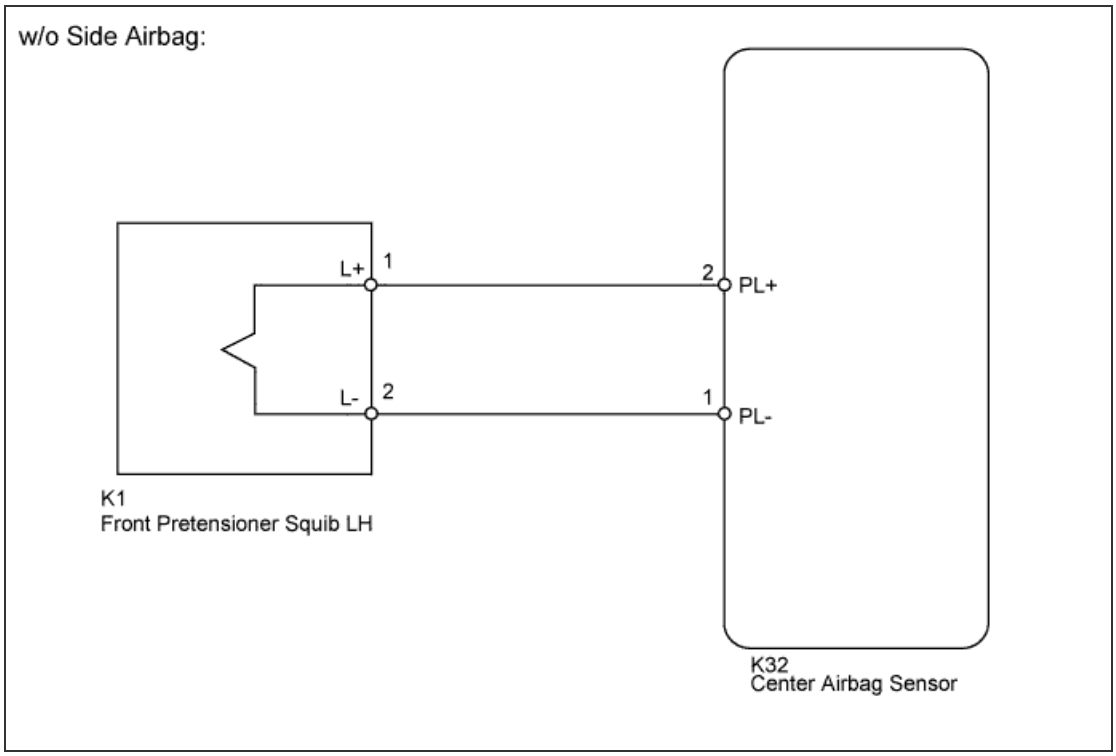

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT LH (FRONT PRETENSIONER SQUIB LH)

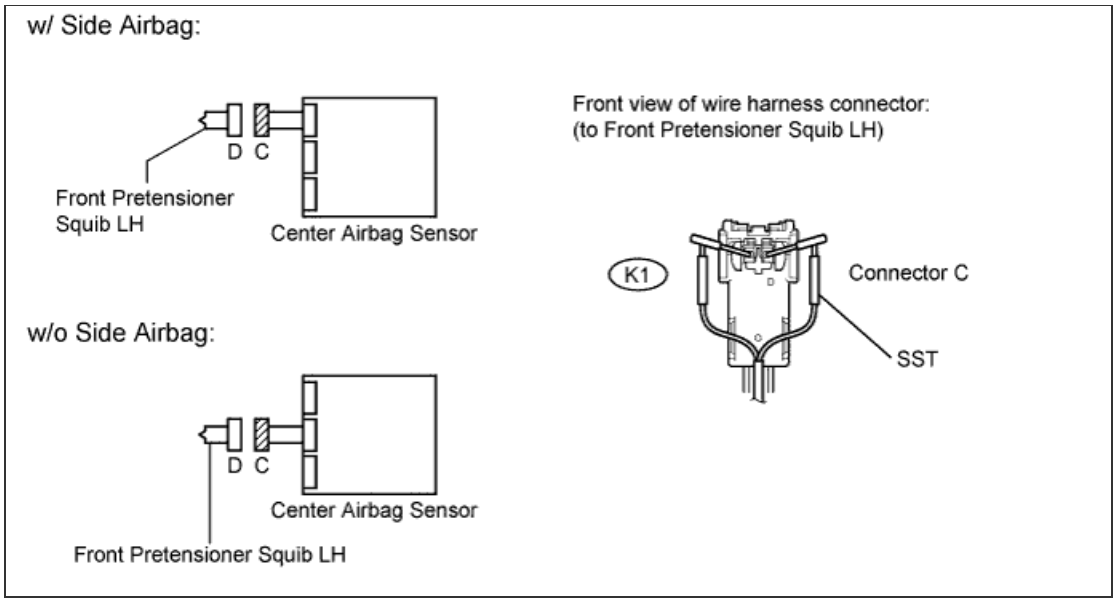

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the front seat outer belt LH (front pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.


d. Check that the floor wire connector (on the front seat outer belt LH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (FRONT PRETENSIONER SQUIB LH CIRCUIT)

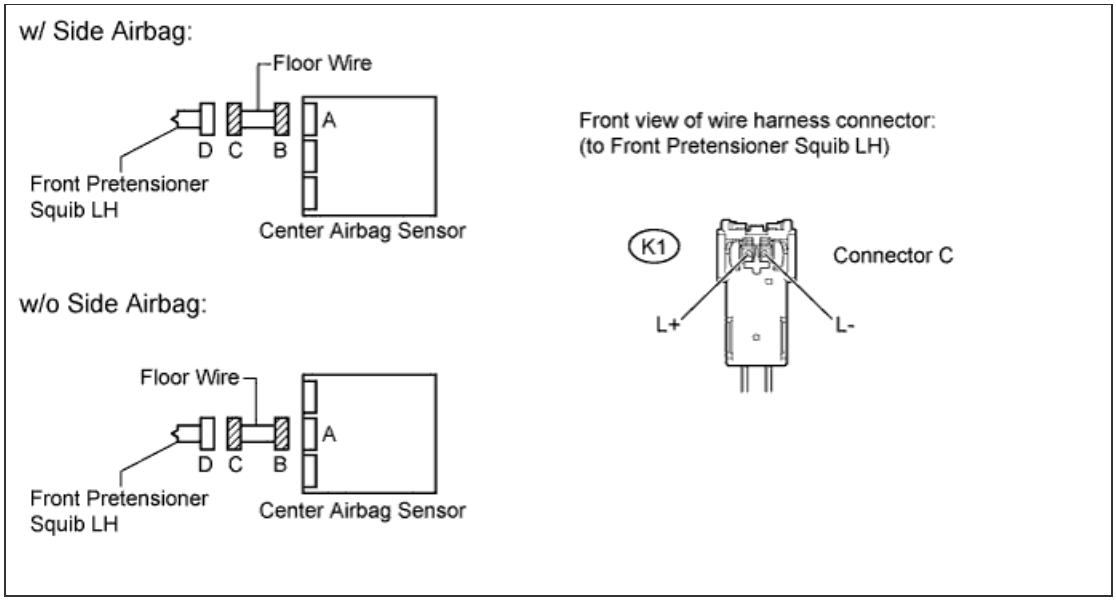

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K1-1 (L+) - Body ground	Engine switch on (IG)	Below 1 V
K1-2 (L-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	1 MΩ or higher
K1-1 (L+) - Body ground	Always	1 MΩ or higher
K1-2 (L-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

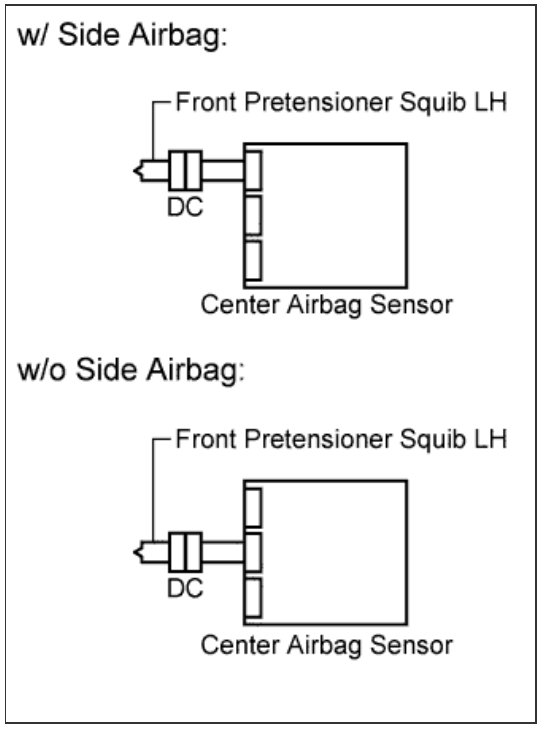

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1805/52 Short in Front Passenger Side Squib Circuit

DTC B1806/52 Open in Front Passenger Side Squib Circuit

DTC B1807/52 Short to GND in Front Passenger Side Squib Circuit

DTC B1808/52 Short to B+ in Front Passenger Side Squib Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1805/52	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib circuit during the primary check. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1806/52	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib circuit for 2 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1807/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly
B1808/52	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib circuit for 0.5 seconds. • A front passenger side squib malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib) • Center airbag sensor assembly

WIRING DIAGRAM

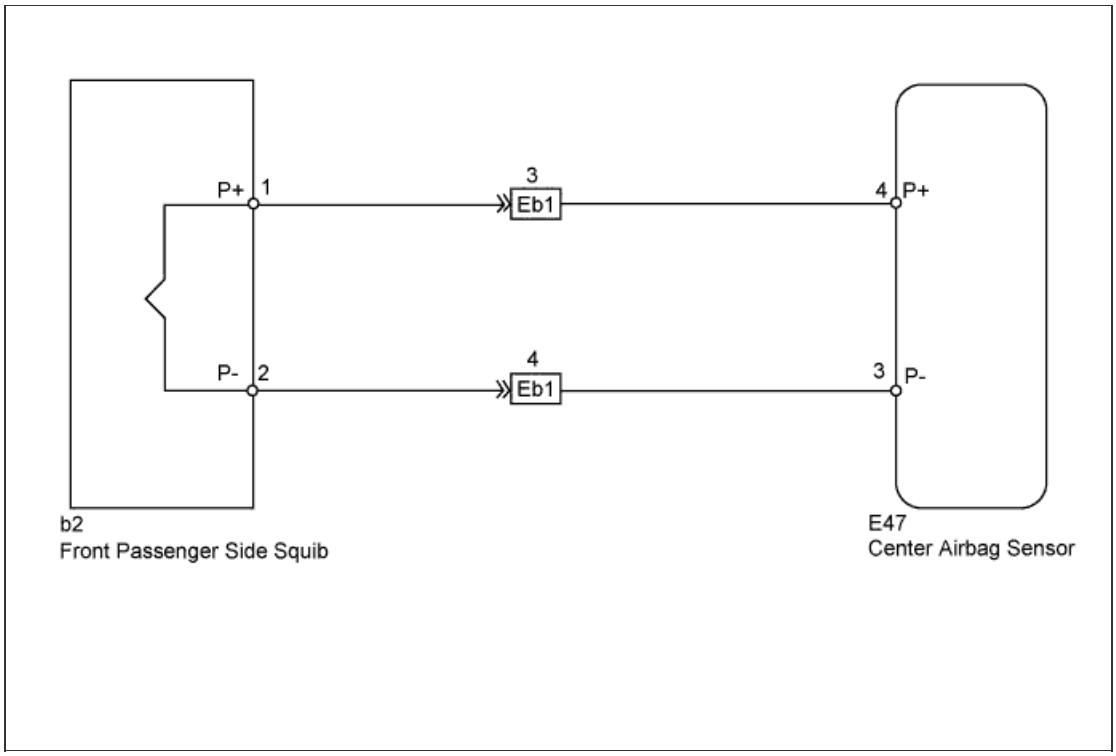

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB)

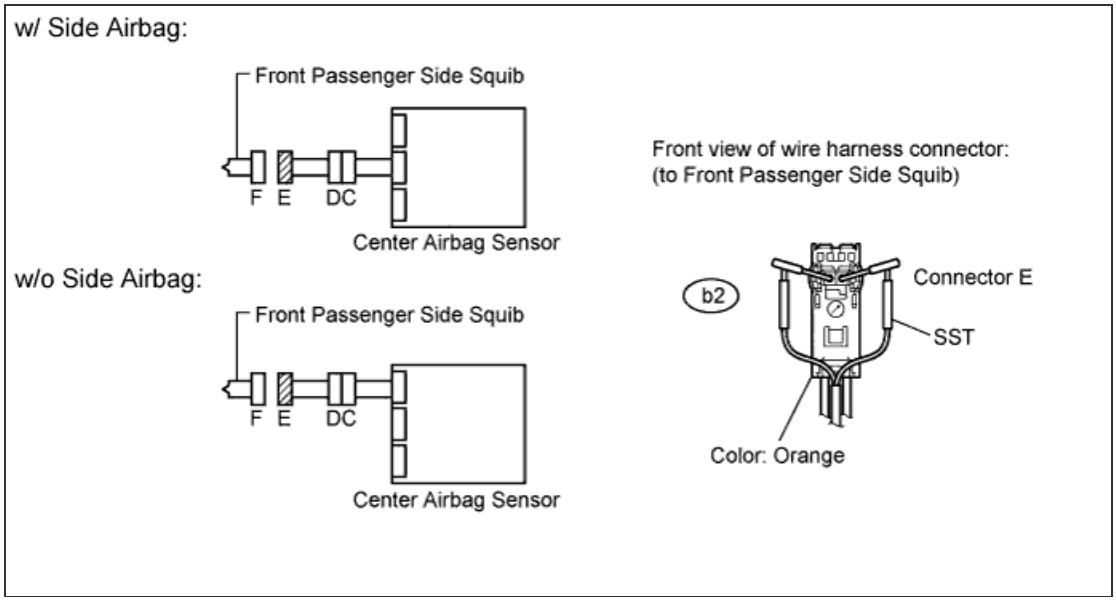

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (orange connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib) for measurement, as this may lead to a serious injury

due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB CIRCUIT

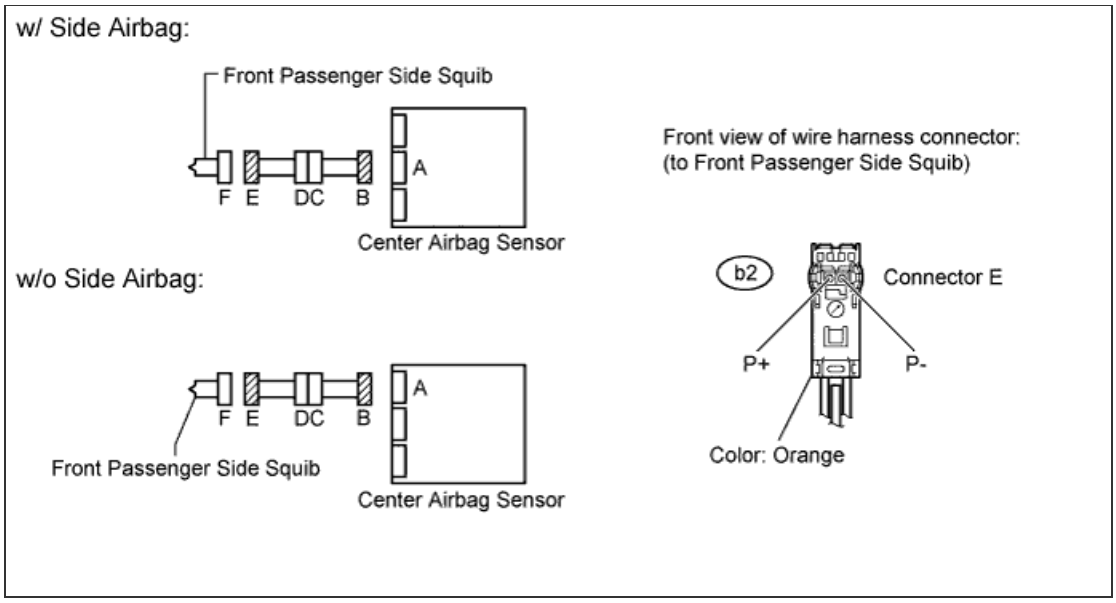

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b2-1 (P+) - Body ground	Engine switch on (IG)	Below 1 V
b2-2 (P-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b2-1 (P+) - b2-2 (P-)	Always	1 MΩ or higher
b2-1 (P+) - Body ground	Always	1 MΩ or higher
b2-2 (P-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1805, B1806, B1807 or B1808 is not output.

HINT:

Codes other than DTC B1805, B1806, B1807 and B1808 may be output at this time, but they are not related to this check.

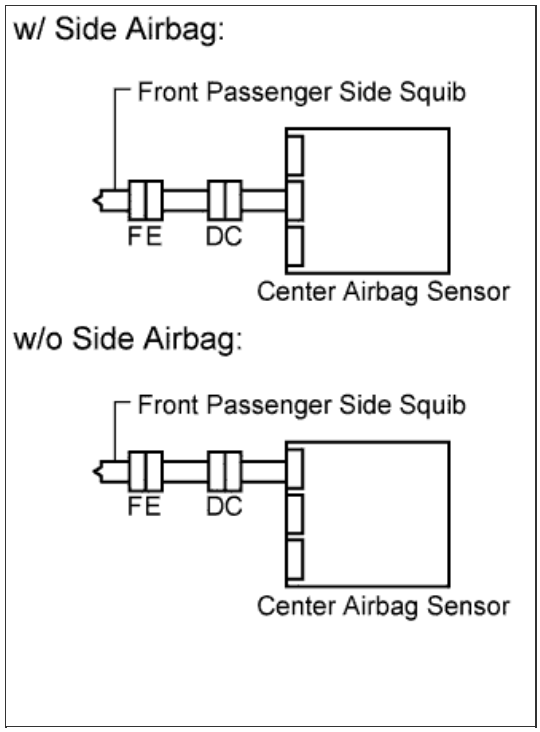


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

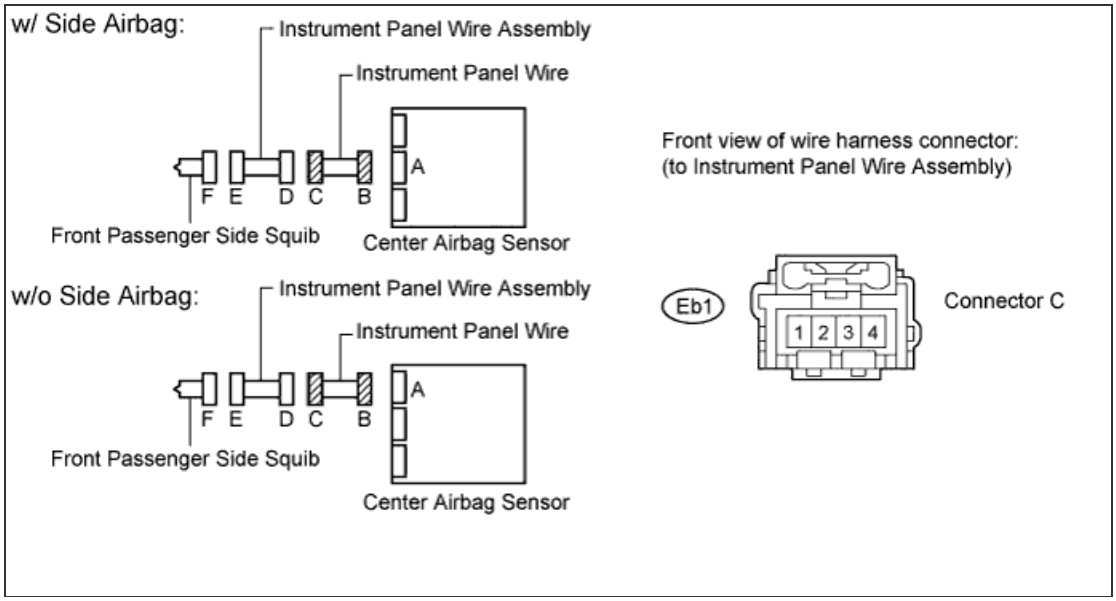

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-3 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-4 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-3 - Eb1-4	Always	1 MΩ or higher
Eb1-3 - Body ground	Always	1 MΩ or higher
Eb1-4 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1905/74 Short in Front Pretensioner Squib LH Circuit

DTC B1906/74 Open in Front Pretensioner Squib LH Circuit

DTC B1907/74 Short to GND in Front Pretensioner Squib LH Circuit

DTC B1908/74 Short to B+ in Front Pretensioner Squib LH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib LH circuit consists of the center airbag sensor and the front seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1905/74	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib LH circuit during the primary check. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1906/74	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib LH circuit for 2 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1907/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1908/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

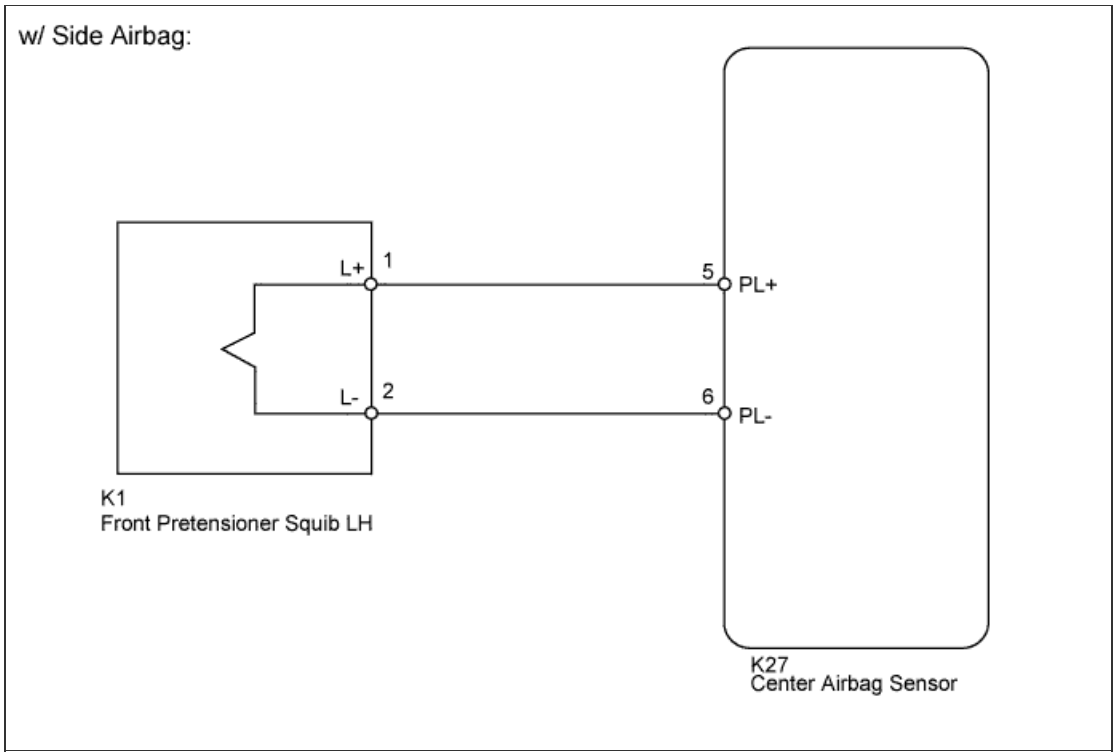

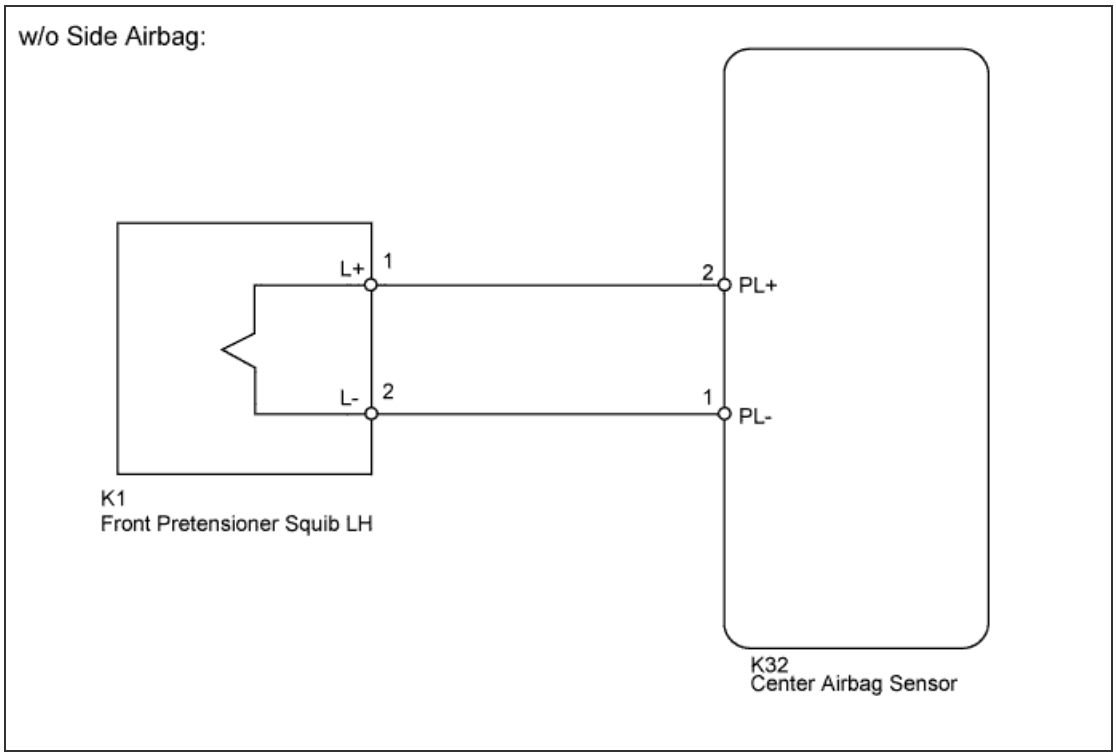

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT LH (FRONT PRETENSIONER SQUIB LH)

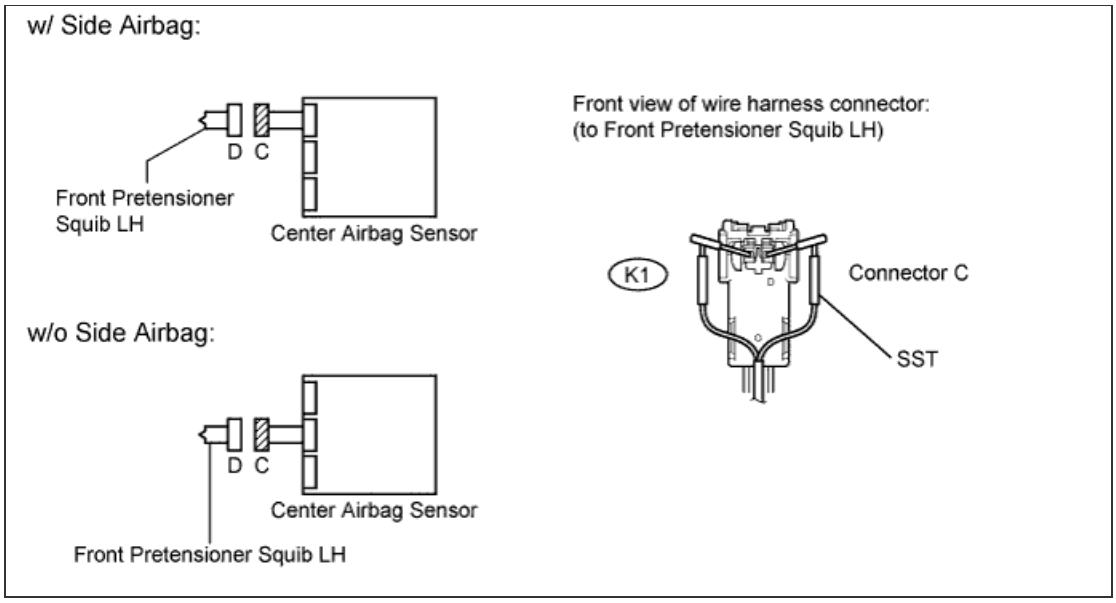

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the front seat outer belt LH (front pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.


d. Check that the floor wire connector (on the front seat outer belt LH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (FRONT PRETENSIONER SQUIB LH CIRCUIT)

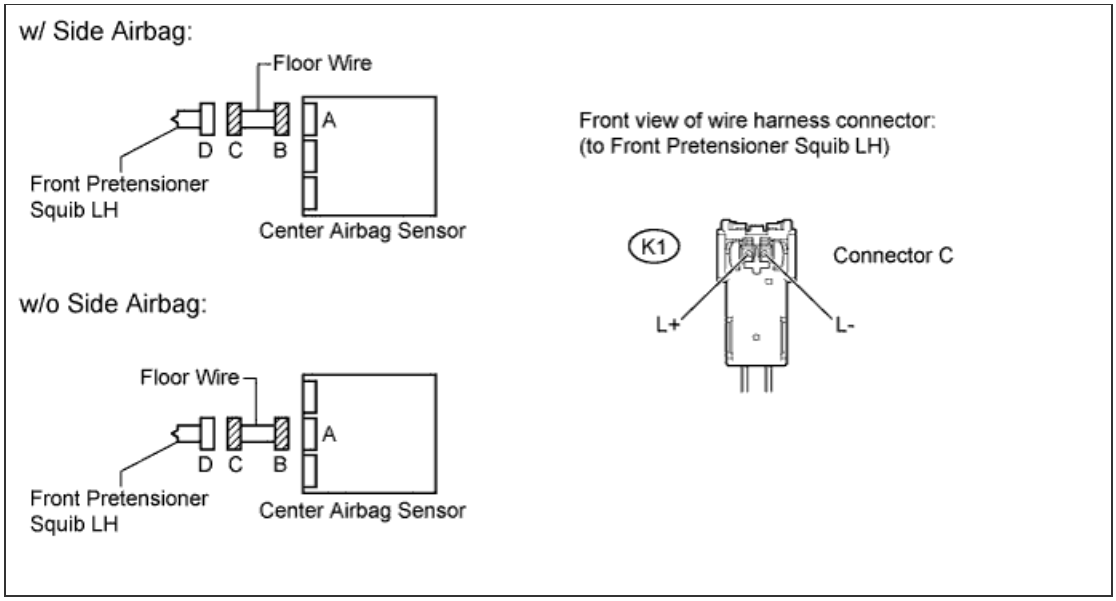

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K1-1 (L+) - Body ground	Engine switch on (IG)	Below 1 V
K1-2 (L-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	1 MΩ or higher
K1-1 (L+) - Body ground	Always	1 MΩ or higher
K1-2 (L-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

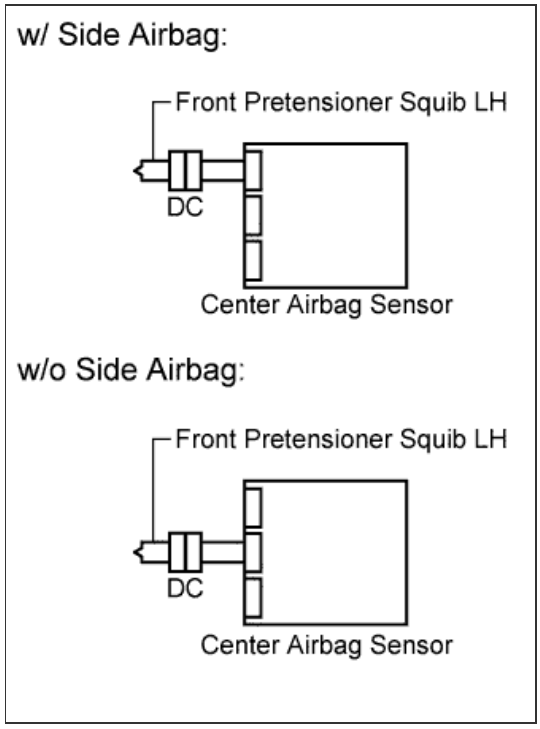

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1810/53 Short in Driver Side Squib 2nd Step Circuit

DTC B1811/53 Open in Driver Side Squib 2nd Step Circuit

DTC B1812/53 Short to GND in Driver Side Squib 2nd Step Circuit

DTC B1813/53 Short to B+ in Driver Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The driver side squib 2nd step circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1810/53	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib 2nd step circuit during the primary check. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1811/53	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side squib 2nd step circuit for 2 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1812/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1813/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

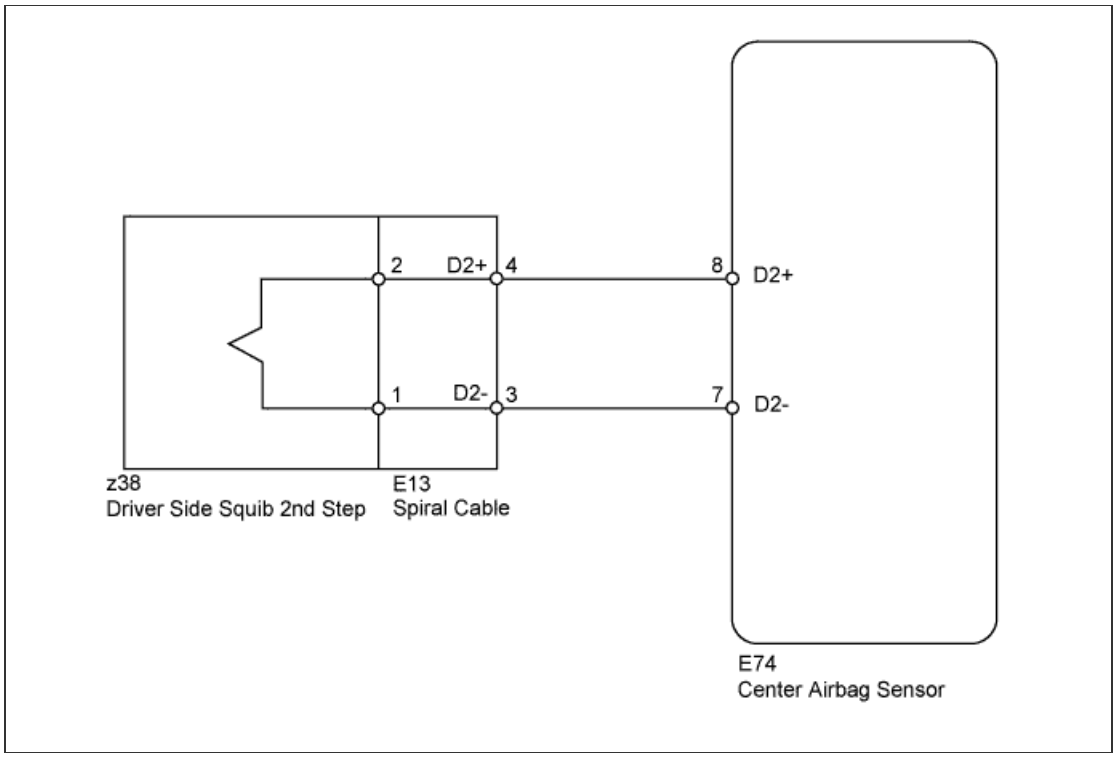

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB 2ND STEP)

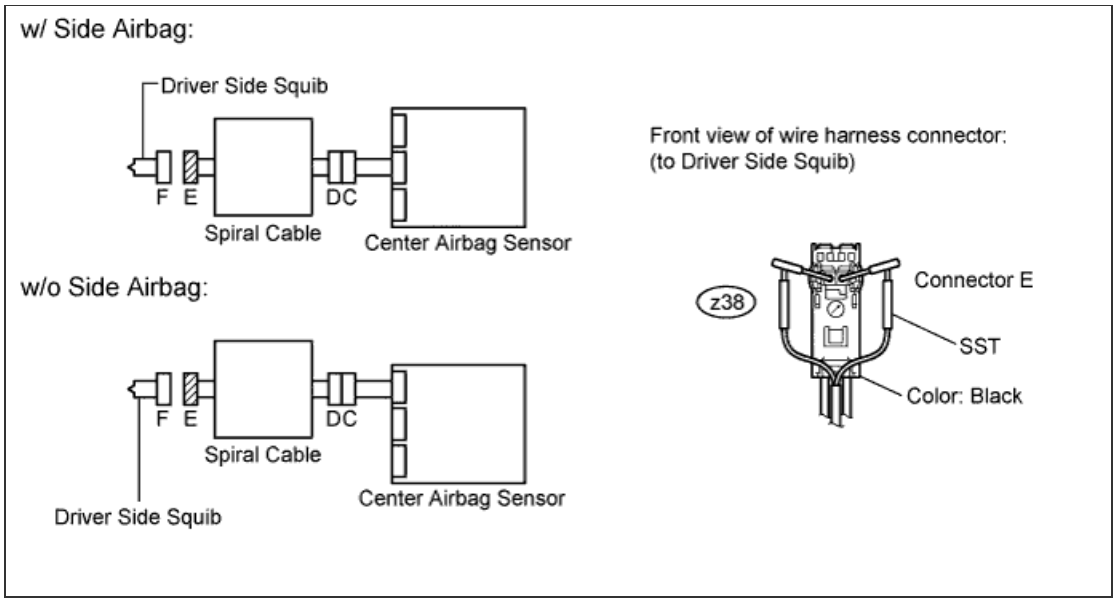

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib 2nd step) for measurement, as this may lead to a serious injury due to

airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB 2ND STEP CIRCUIT

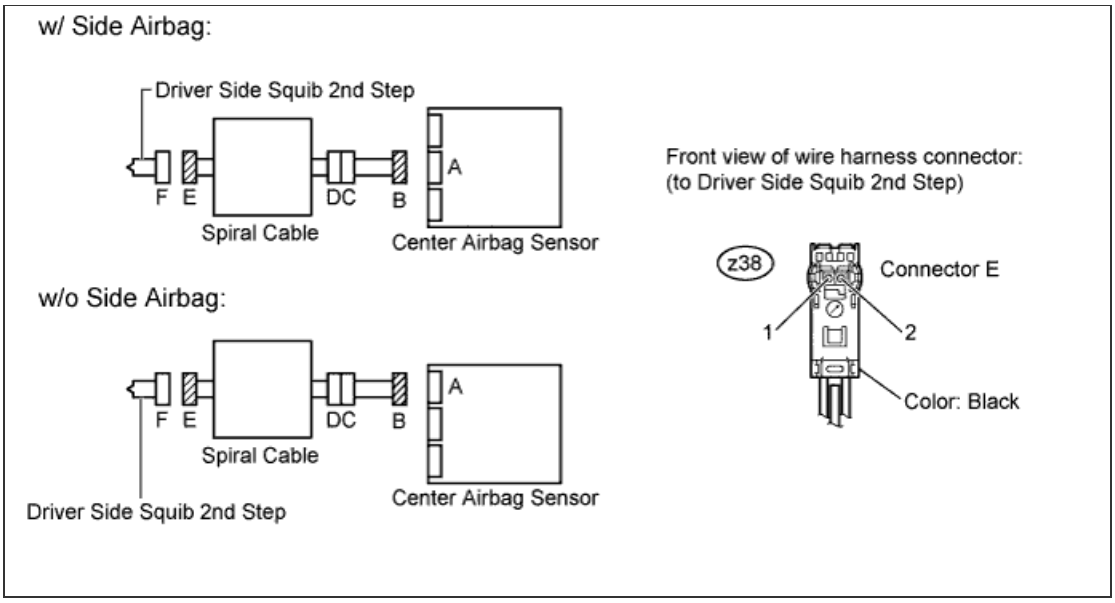

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z38-1 - Body ground	Engine switch on (IG)	Below 1 V
z38-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	1 MΩ or higher
z38-1 - Body ground	Always	1 MΩ or higher
z38-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

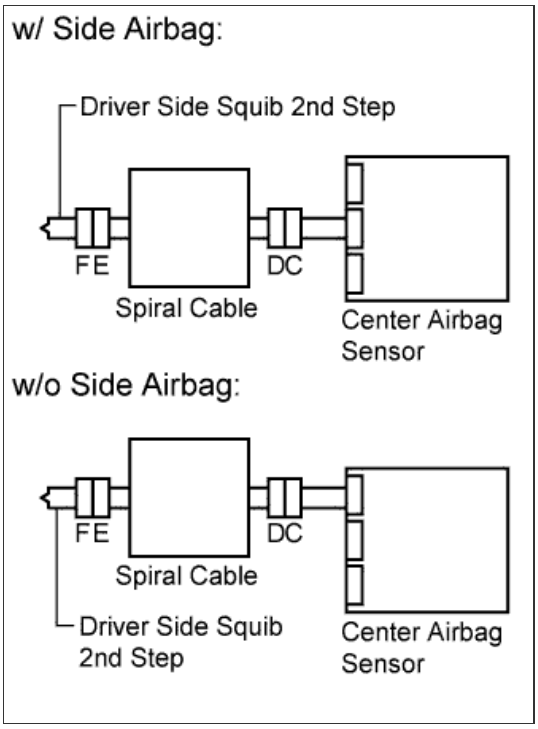


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

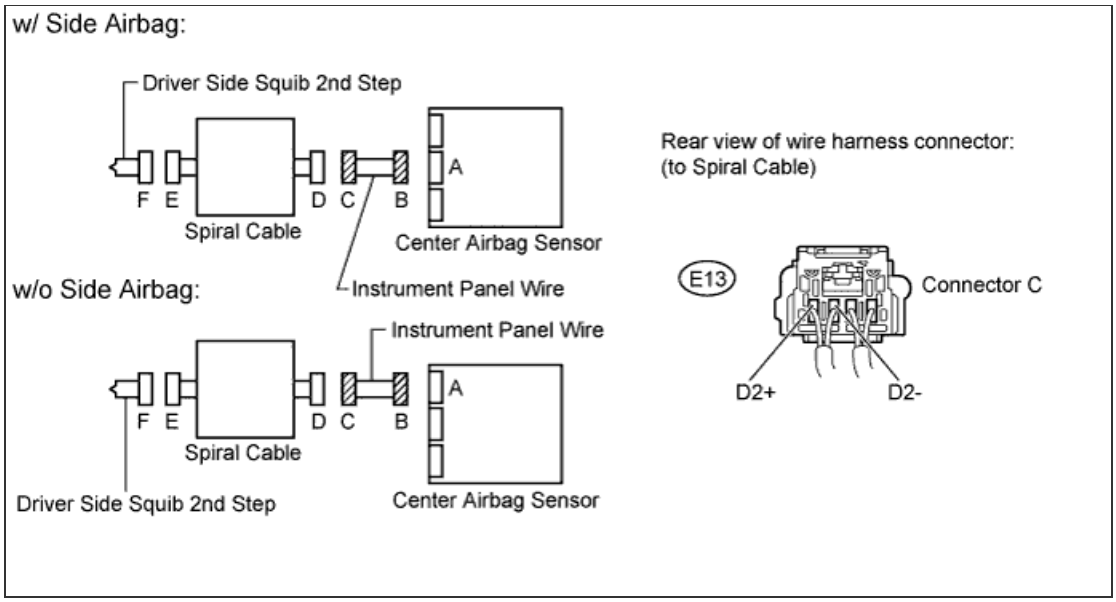

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-4 (D2+) - Body ground	Engine switch on (IG)	Below 1 V
E13-3 (D2-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	1 MΩ or higher
E13-4 (D2+) - Body ground	Always	1 MΩ or higher
E13-3 (D2-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE SPIRAL CABLE (Click here)

DTC B1905/74 Short in Front Pretensioner Squib LH Circuit

DTC B1906/74 Open in Front Pretensioner Squib LH Circuit

DTC B1907/74 Short to GND in Front Pretensioner Squib LH Circuit

DTC B1908/74 Short to B+ in Front Pretensioner Squib LH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib LH circuit consists of the center airbag sensor and the front seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1905/74	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib LH circuit during the primary check. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1906/74	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib LH circuit for 2 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1907/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1908/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

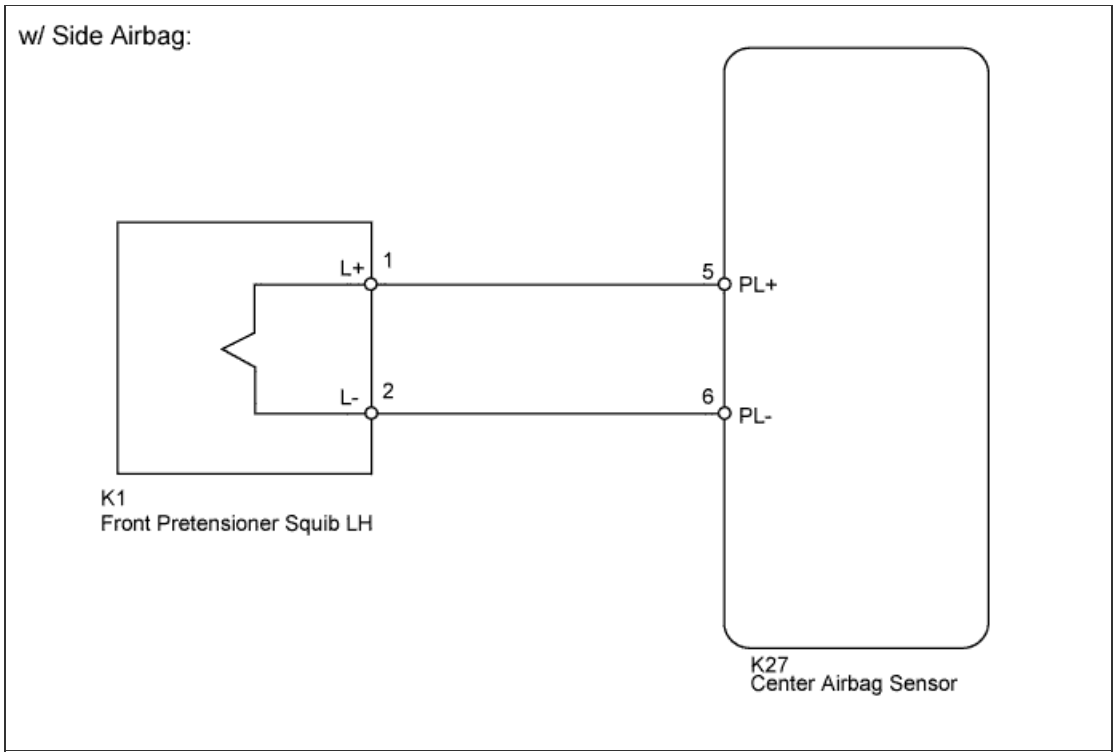

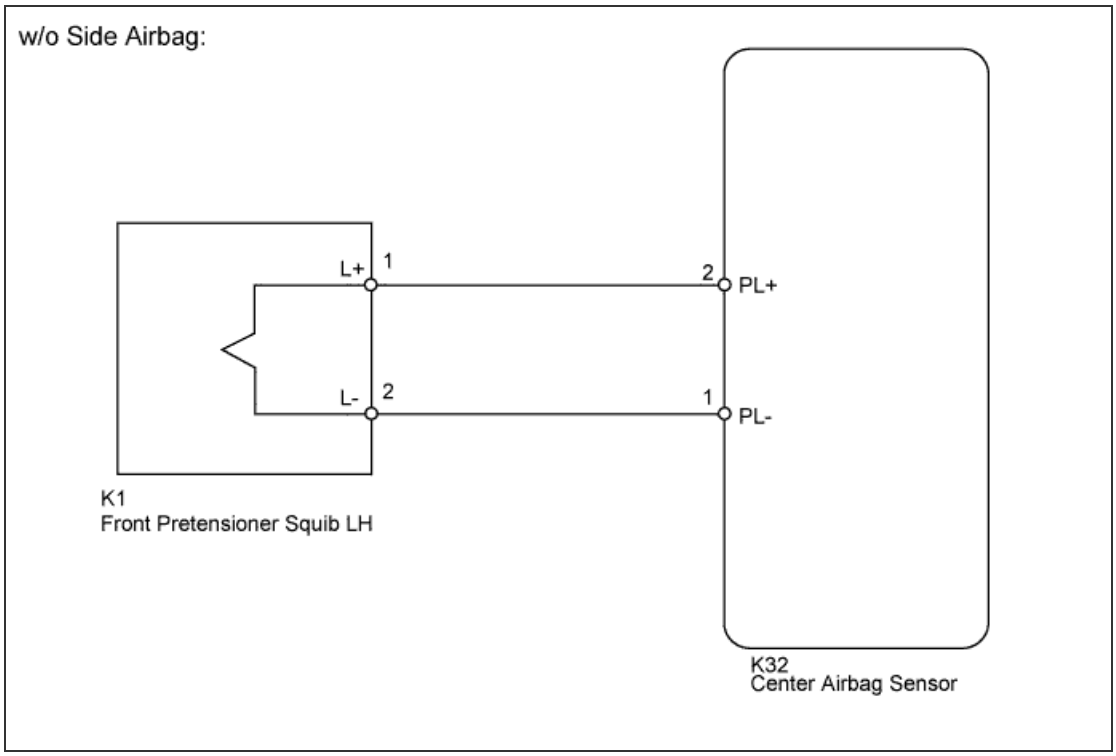

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT LH (FRONT PRETENSIONER SQUIB LH)

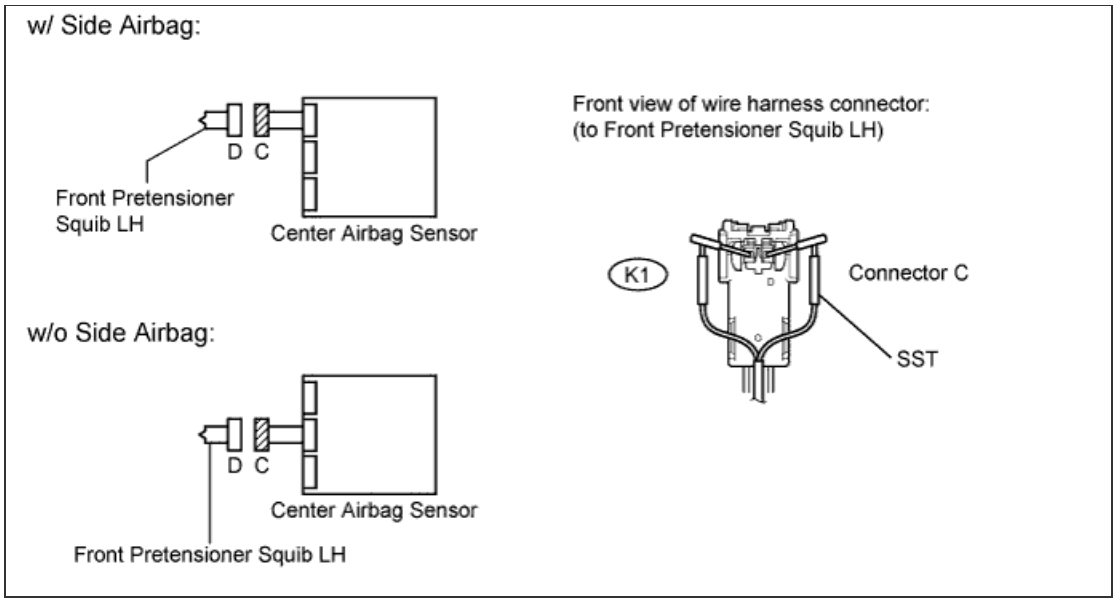

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the front seat outer belt LH (front pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.


d. Check that the floor wire connector (on the front seat outer belt LH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (FRONT PRETENSIONER SQUIB LH CIRCUIT)

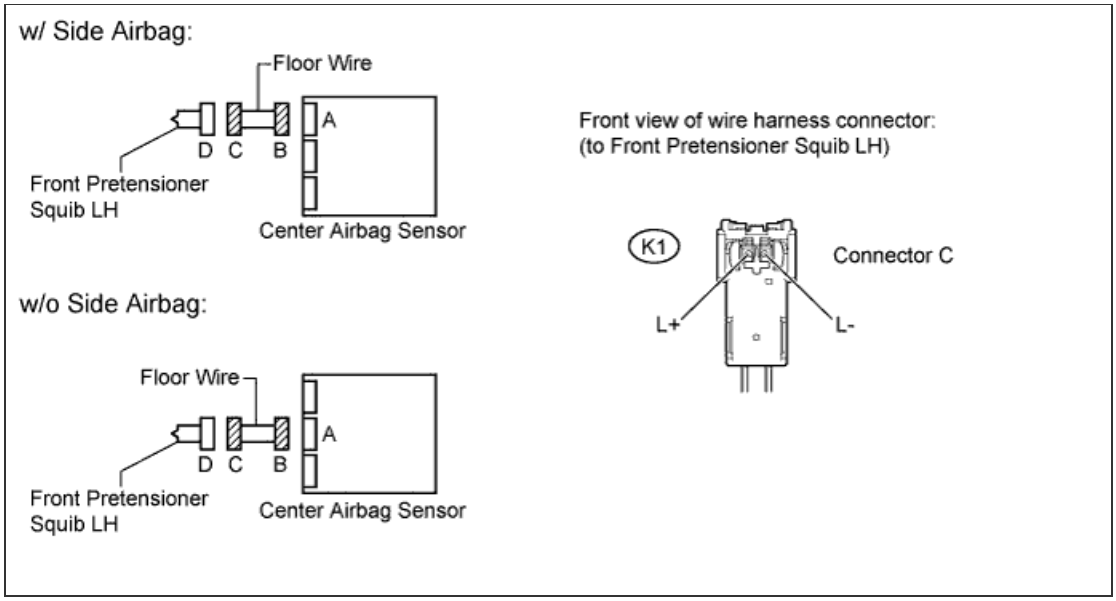

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K1-1 (L+) - Body ground	Engine switch on (IG)	Below 1 V
K1-2 (L-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	1 MΩ or higher
K1-1 (L+) - Body ground	Always	1 MΩ or higher
K1-2 (L-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

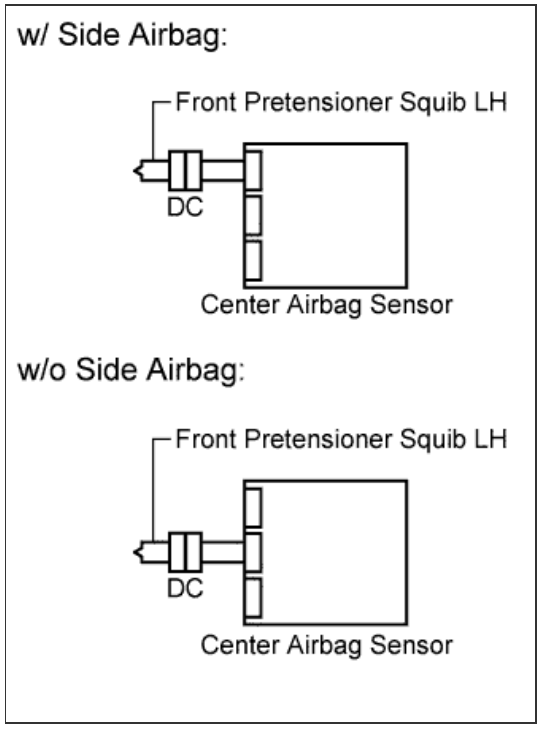

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1810/53 Short in Driver Side Squib 2nd Step Circuit

DTC B1811/53 Open in Driver Side Squib 2nd Step Circuit

DTC B1812/53 Short to GND in Driver Side Squib 2nd Step Circuit

DTC B1813/53 Short to B+ in Driver Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The driver side squib 2nd step circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1810/53	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib 2nd step circuit during the primary check. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1811/53	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side squib 2nd step circuit for 2 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1812/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1813/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

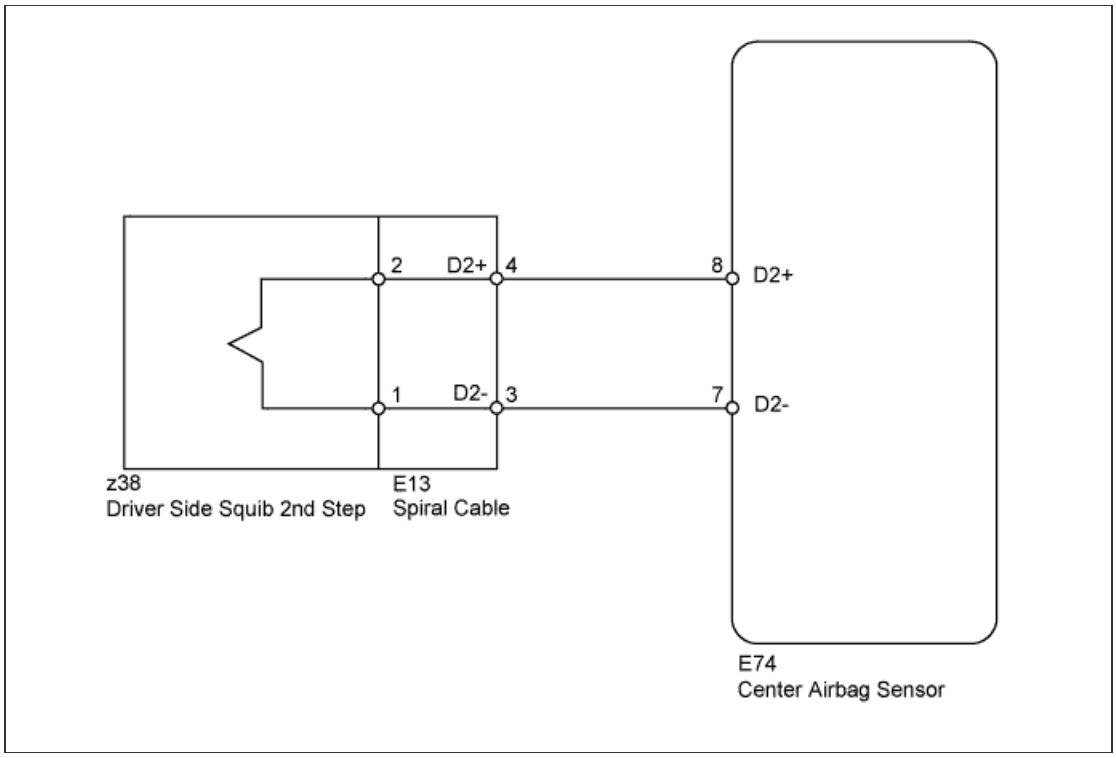

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB 2ND STEP)

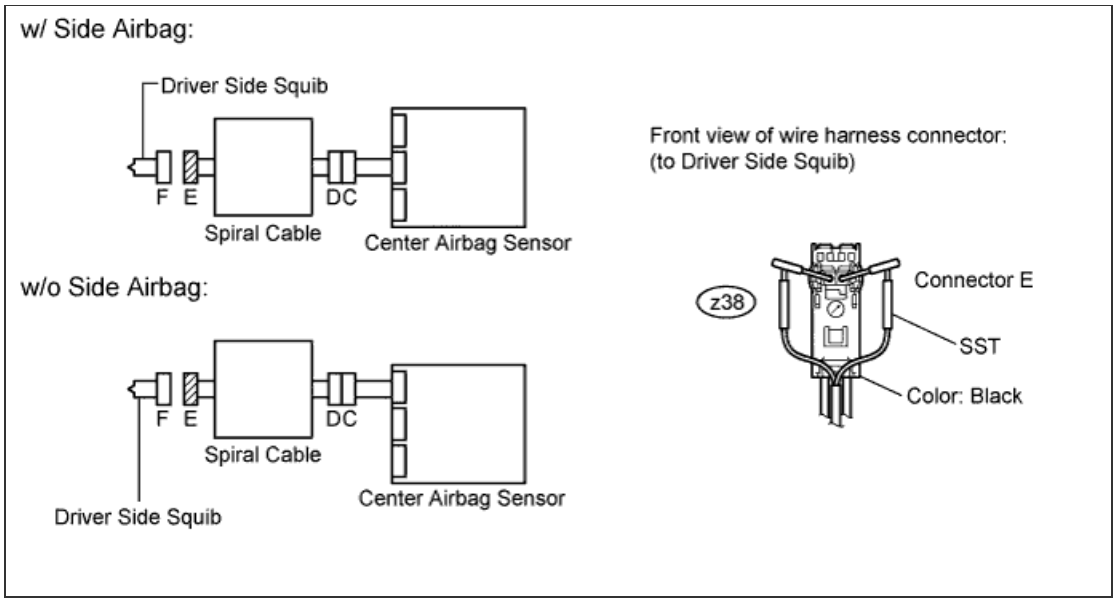

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib 2nd step) for measurement, as this may lead to a serious injury due to

airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB 2ND STEP CIRCUIT

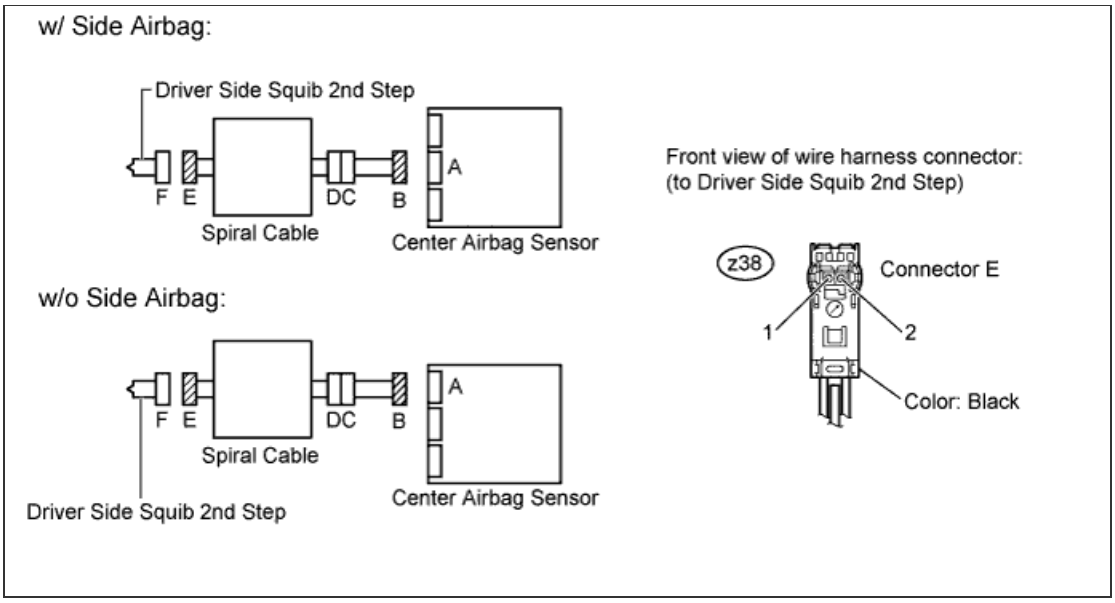

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z38-1 - Body ground	Engine switch on (IG)	Below 1 V
z38-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	1 MΩ or higher
z38-1 - Body ground	Always	1 MΩ or higher
z38-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

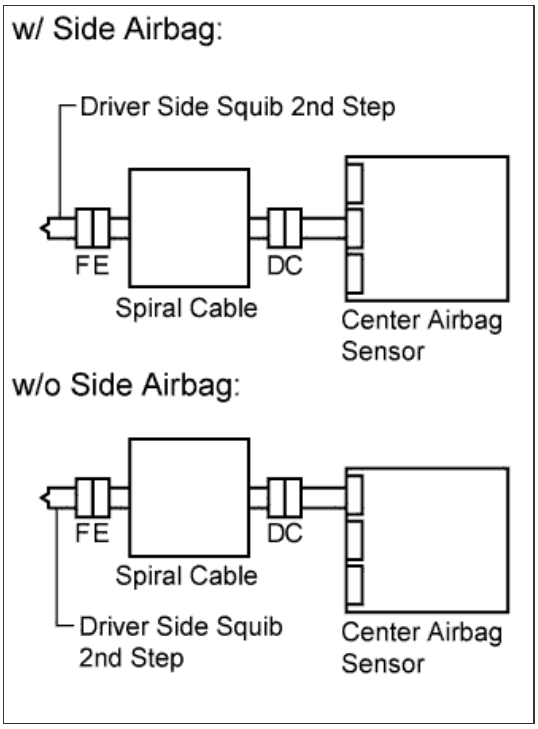


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

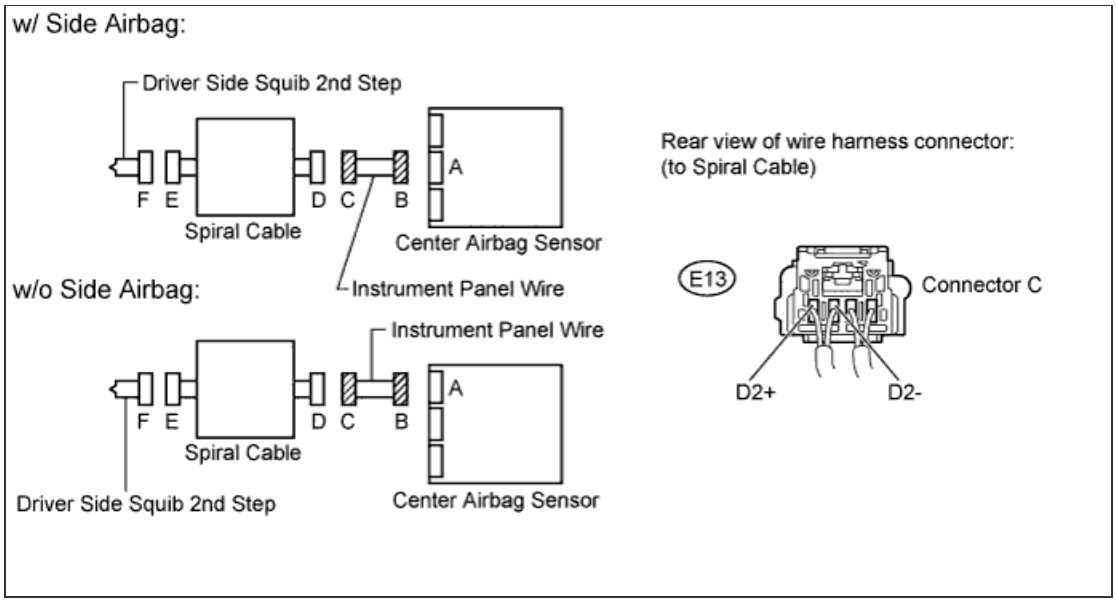

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-4 (D2+) - Body ground	Engine switch on (IG)	Below 1 V
E13-3 (D2-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	1 MΩ or higher
E13-4 (D2+) - Body ground	Always	1 MΩ or higher
E13-3 (D2-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE SPIRAL CABLE (Click here)

DTC B1905/74 Short in Front Pretensioner Squib LH Circuit

DTC B1906/74 Open in Front Pretensioner Squib LH Circuit

DTC B1907/74 Short to GND in Front Pretensioner Squib LH Circuit

DTC B1908/74 Short to B+ in Front Pretensioner Squib LH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib LH circuit consists of the center airbag sensor and the front seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1905/74	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib LH circuit during the primary check. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1906/74	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib LH circuit for 2 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1907/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1908/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

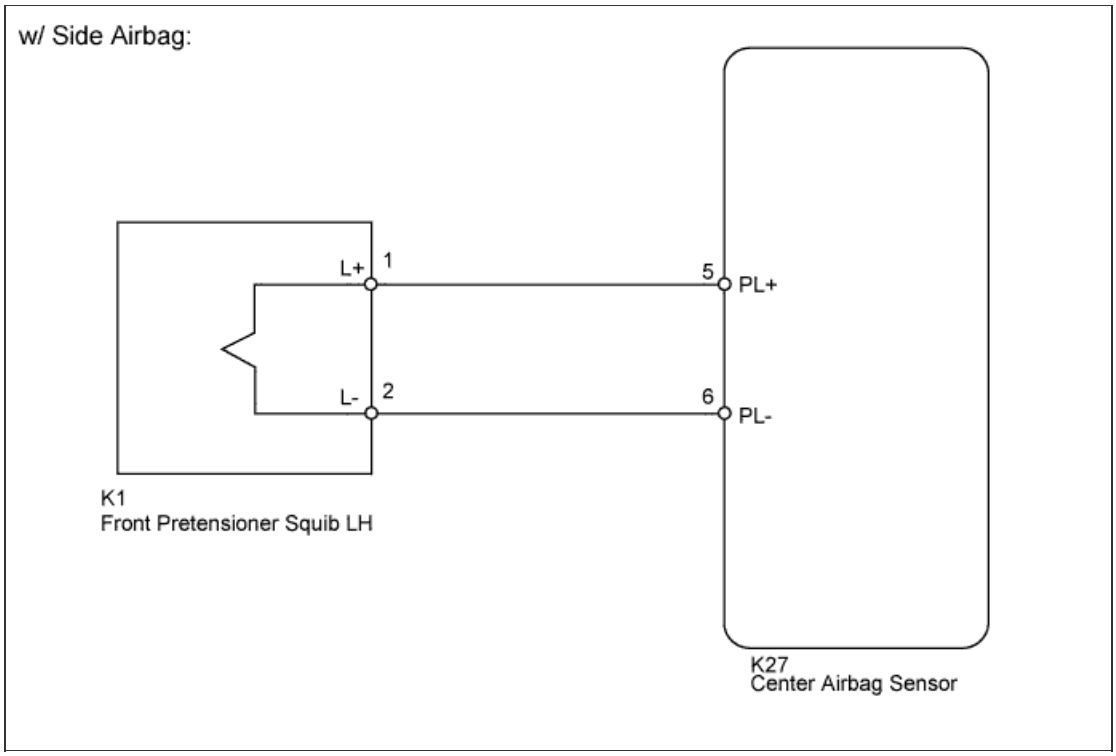

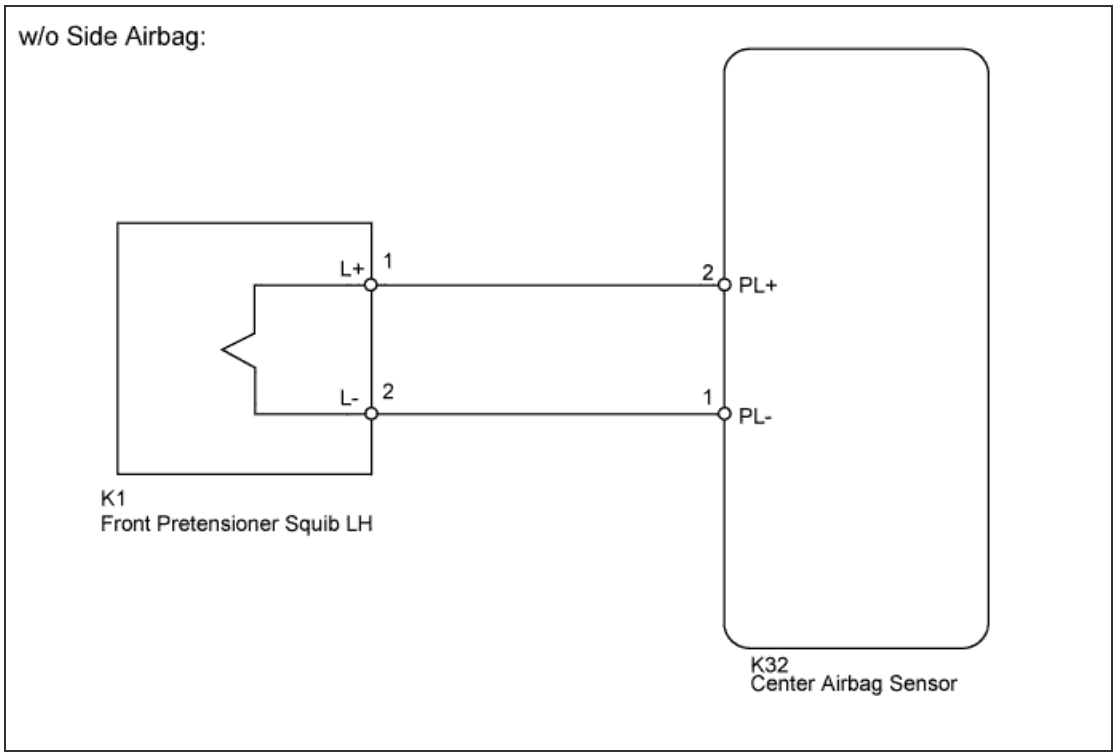

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT LH (FRONT PRETENSIONER SQUIB LH)

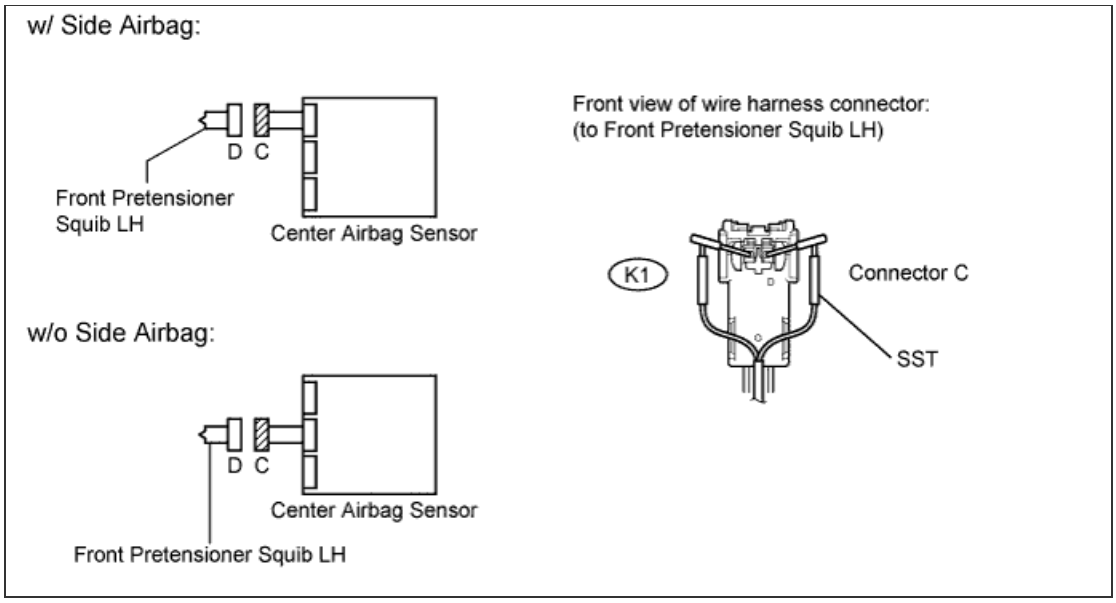

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the front seat outer belt LH (front pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.


d. Check that the floor wire connector (on the front seat outer belt LH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (FRONT PRETENSIONER SQUIB LH CIRCUIT)

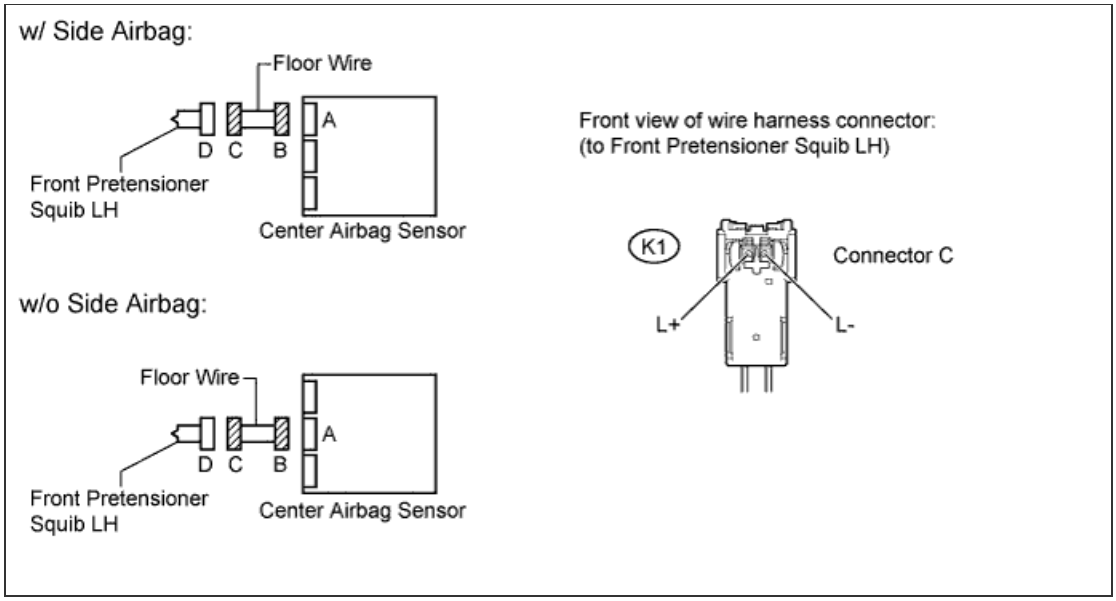

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K1-1 (L+) - Body ground	Engine switch on (IG)	Below 1 V
K1-2 (L-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	1 MΩ or higher
K1-1 (L+) - Body ground	Always	1 MΩ or higher
K1-2 (L-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

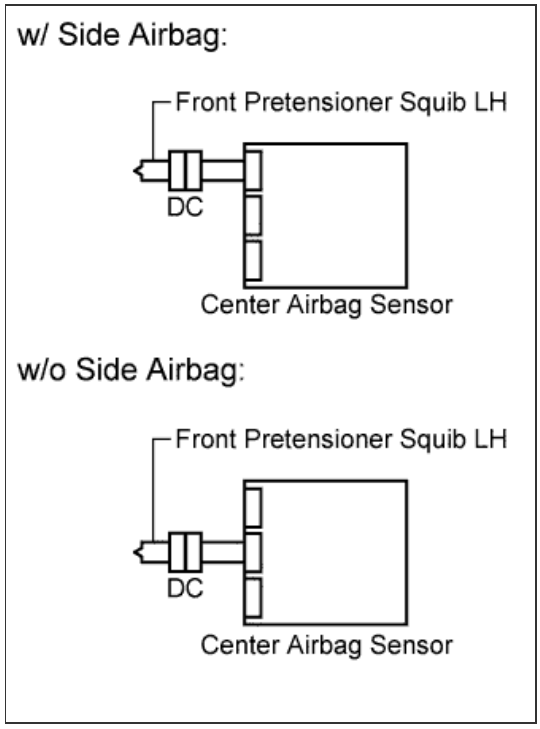

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1810/53 Short in Driver Side Squib 2nd Step Circuit

DTC B1811/53 Open in Driver Side Squib 2nd Step Circuit

DTC B1812/53 Short to GND in Driver Side Squib 2nd Step Circuit

DTC B1813/53 Short to B+ in Driver Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The driver side squib 2nd step circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1810/53	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib 2nd step circuit during the primary check. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1811/53	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side squib 2nd step circuit for 2 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1812/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1813/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

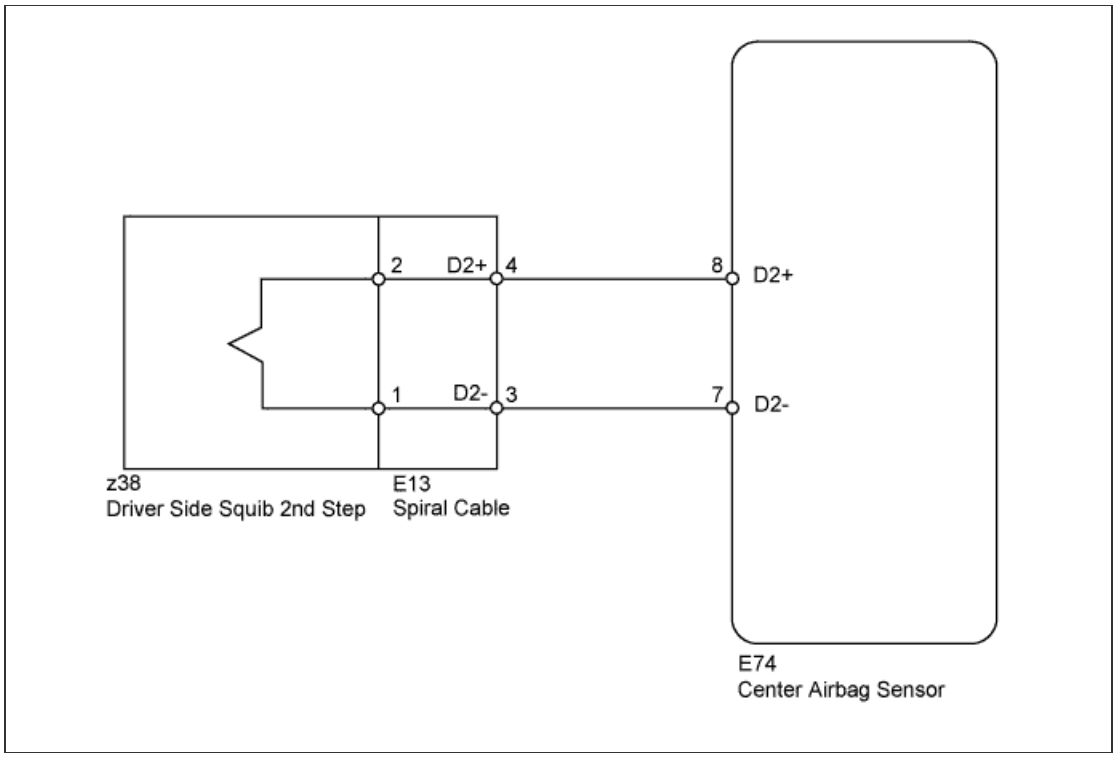

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB 2ND STEP)

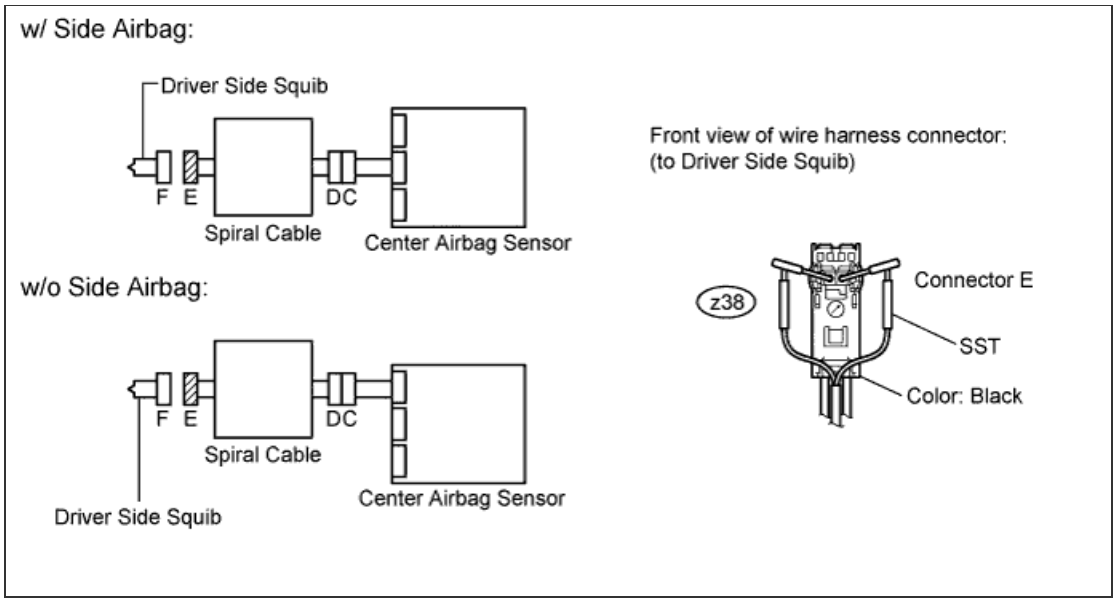

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib 2nd step) for measurement, as this may lead to a serious injury due to

airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB 2ND STEP CIRCUIT

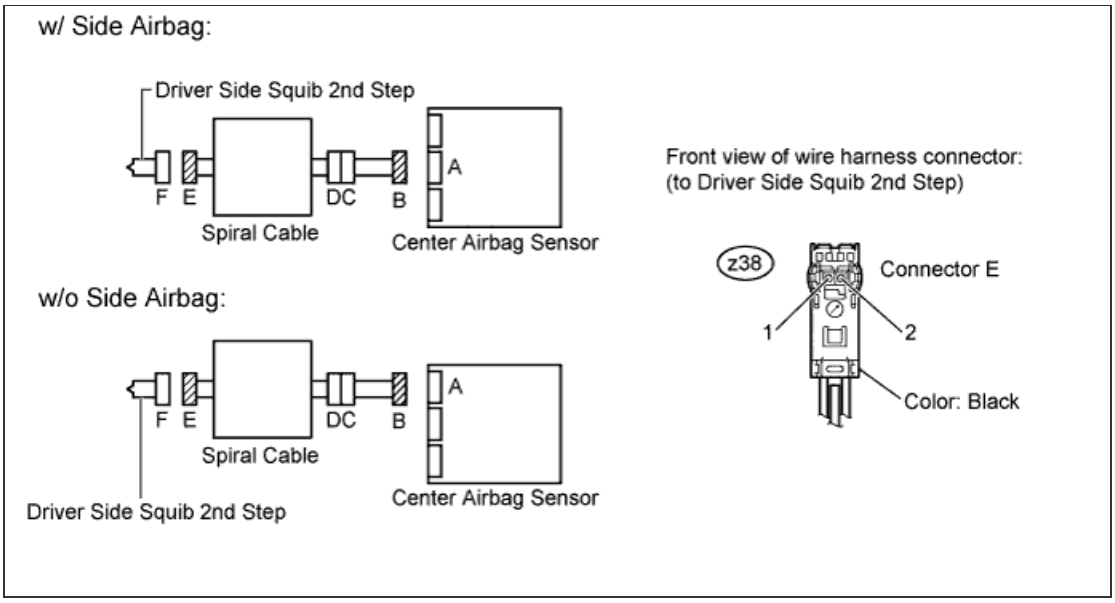

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z38-1 - Body ground	Engine switch on (IG)	Below 1 V
z38-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	1 MΩ or higher
z38-1 - Body ground	Always	1 MΩ or higher
z38-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

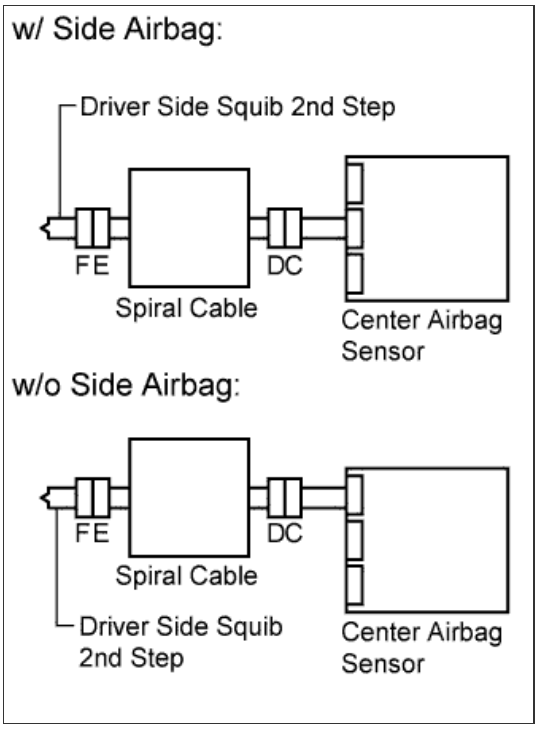


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

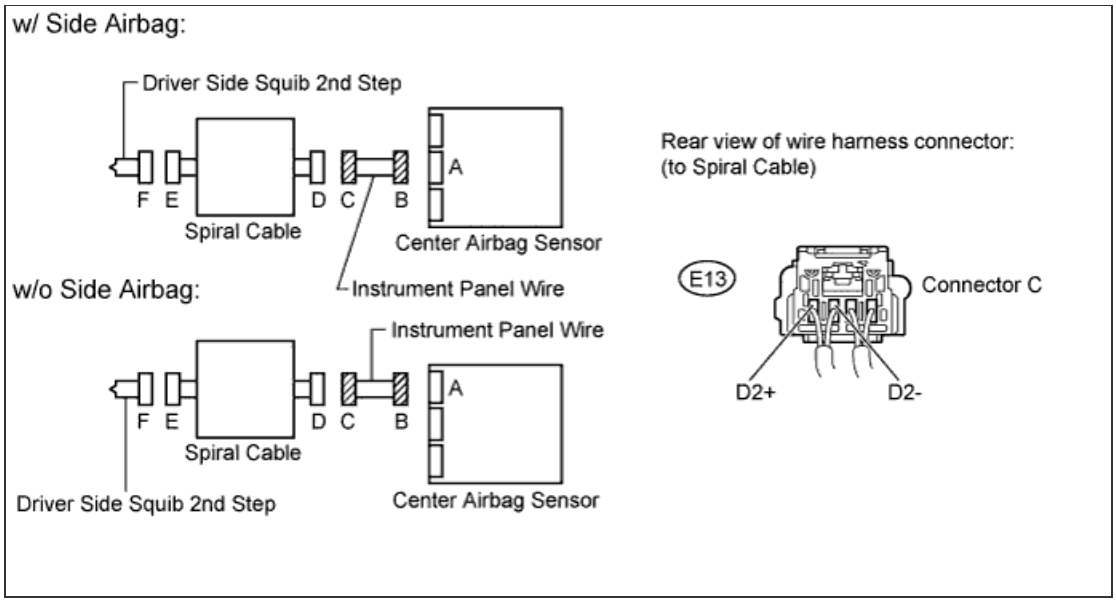

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-4 (D2+) - Body ground	Engine switch on (IG)	Below 1 V
E13-3 (D2-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	1 MΩ or higher
E13-4 (D2+) - Body ground	Always	1 MΩ or higher
E13-3 (D2-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE SPIRAL CABLE (Click here)

DTC B1905/74 Short in Front Pretensioner Squib LH Circuit

DTC B1906/74 Open in Front Pretensioner Squib LH Circuit

DTC B1907/74 Short to GND in Front Pretensioner Squib LH Circuit

DTC B1908/74 Short to B+ in Front Pretensioner Squib LH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib LH circuit consists of the center airbag sensor and the front seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1905/74	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib LH circuit during the primary check. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1906/74	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib LH circuit for 2 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1907/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1908/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

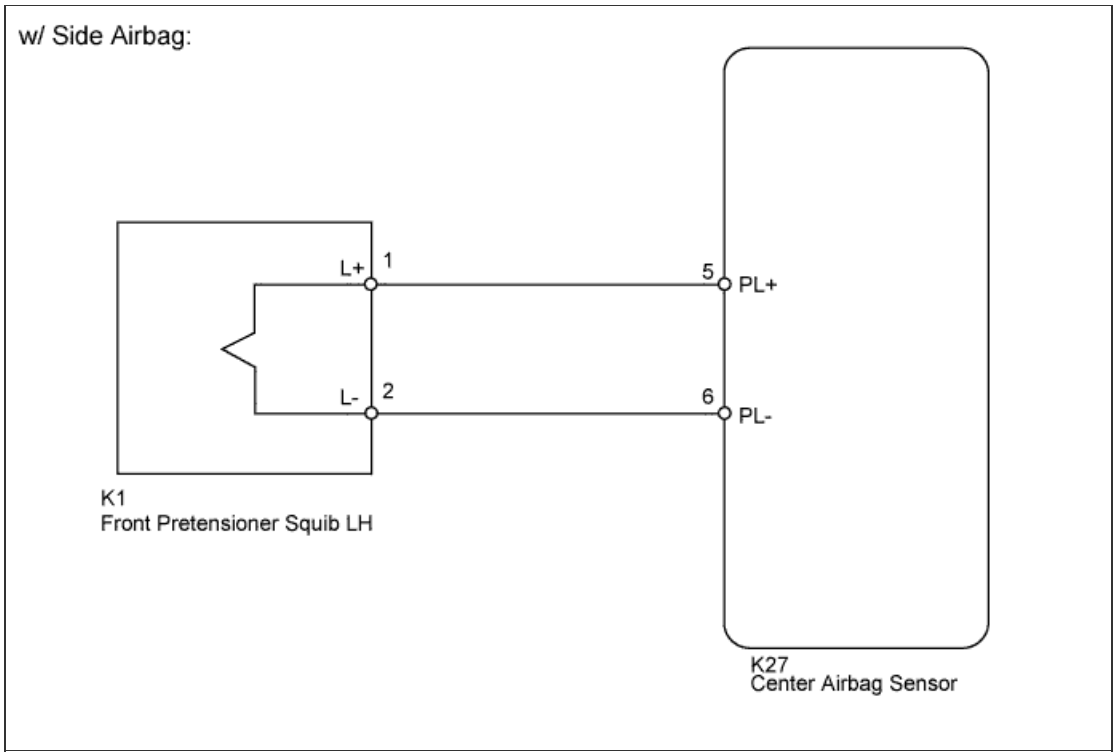

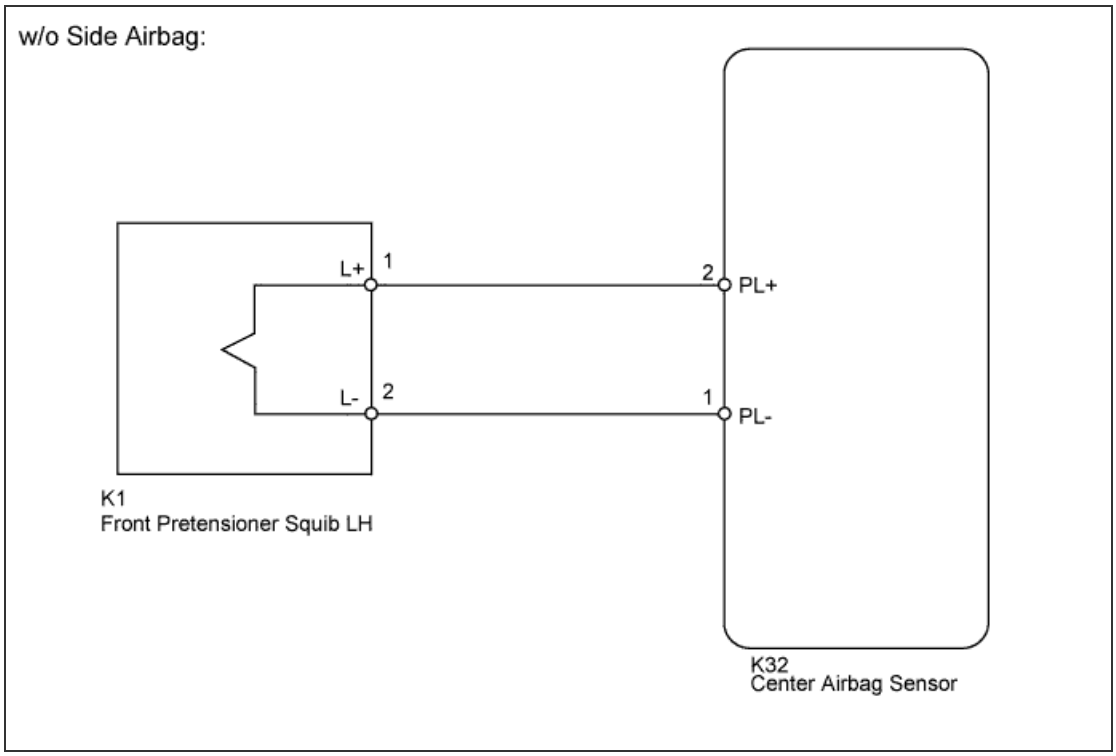

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT LH (FRONT PRETENSIONER SQUIB LH)

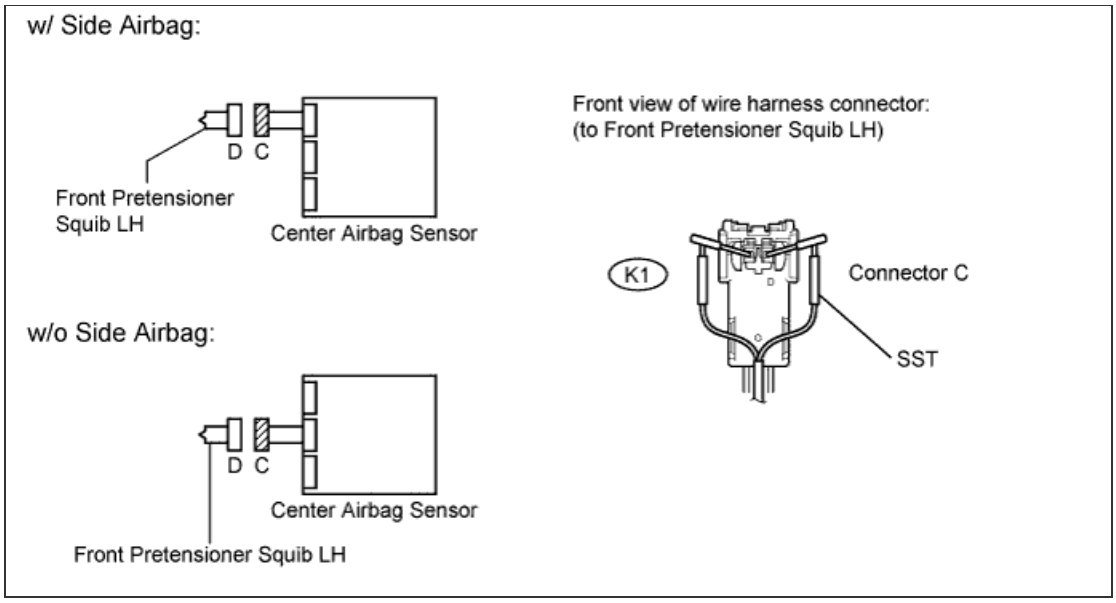

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the front seat outer belt LH (front pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.


d. Check that the floor wire connector (on the front seat outer belt LH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (FRONT PRETENSIONER SQUIB LH CIRCUIT)

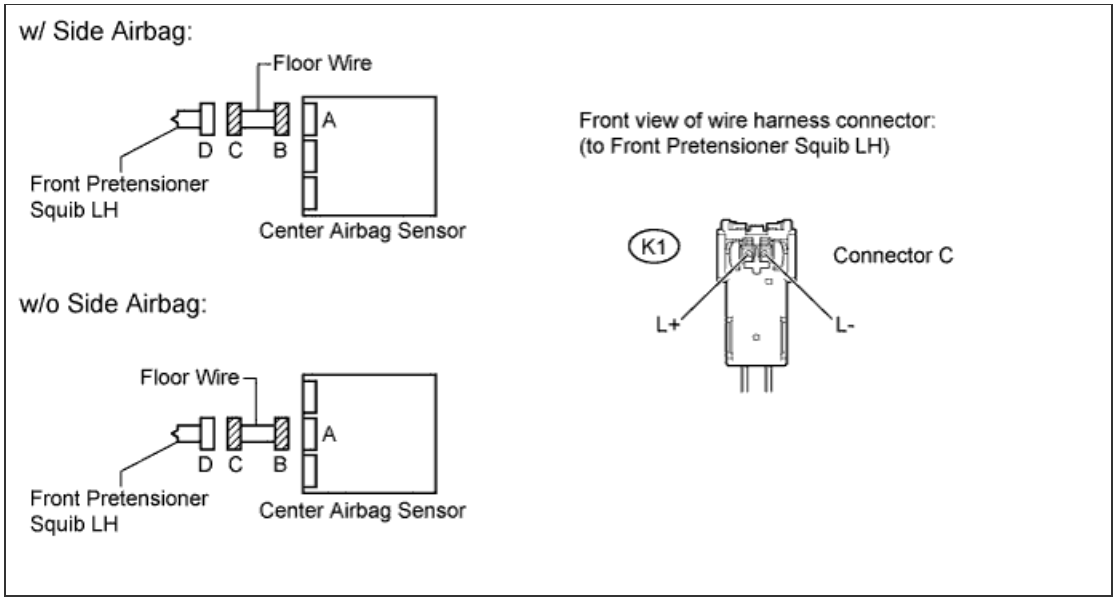

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K1-1 (L+) - Body ground	Engine switch on (IG)	Below 1 V
K1-2 (L-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	1 MΩ or higher
K1-1 (L+) - Body ground	Always	1 MΩ or higher
K1-2 (L-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

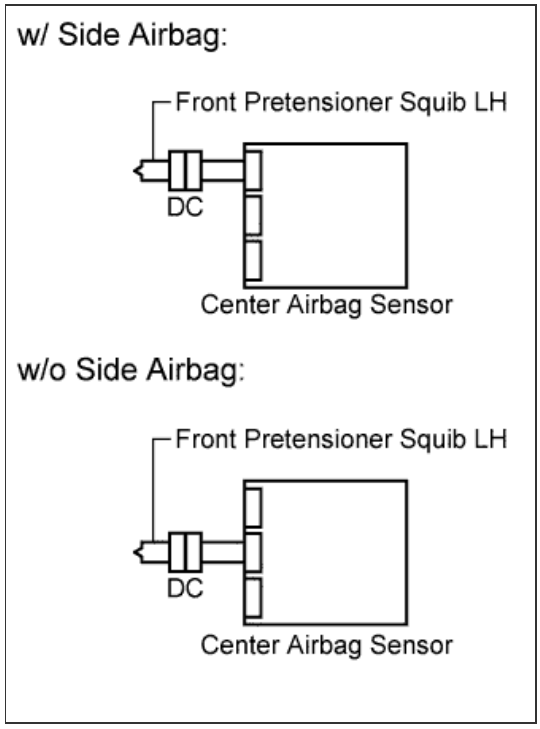

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1810/53 Short in Driver Side Squib 2nd Step Circuit

DTC B1811/53 Open in Driver Side Squib 2nd Step Circuit

DTC B1812/53 Short to GND in Driver Side Squib 2nd Step Circuit

DTC B1813/53 Short to B+ in Driver Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The driver side squib 2nd step circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1810/53	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib 2nd step circuit during the primary check. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1811/53	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side squib 2nd step circuit for 2 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1812/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1813/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

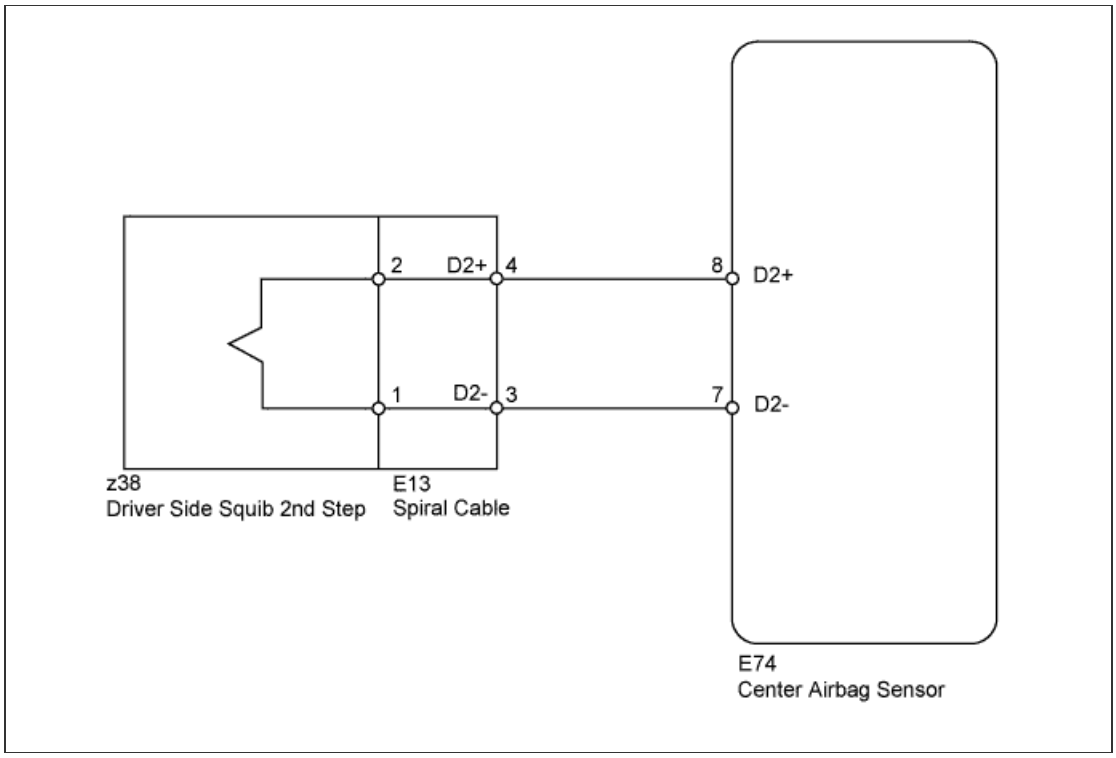

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB 2ND STEP)

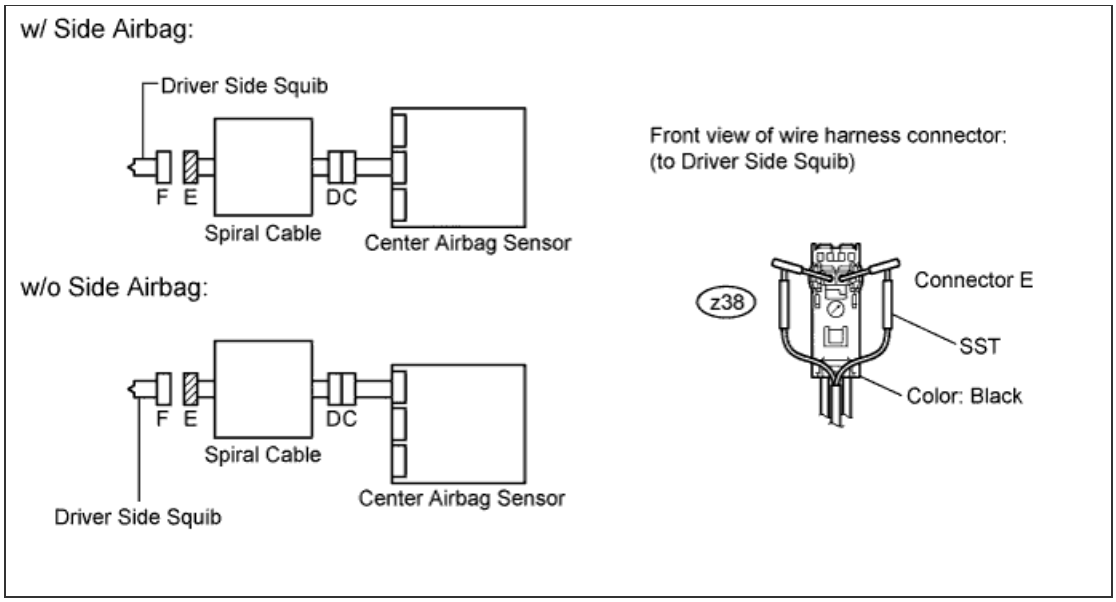

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib 2nd step) for measurement, as this may lead to a serious injury due to

airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB 2ND STEP CIRCUIT

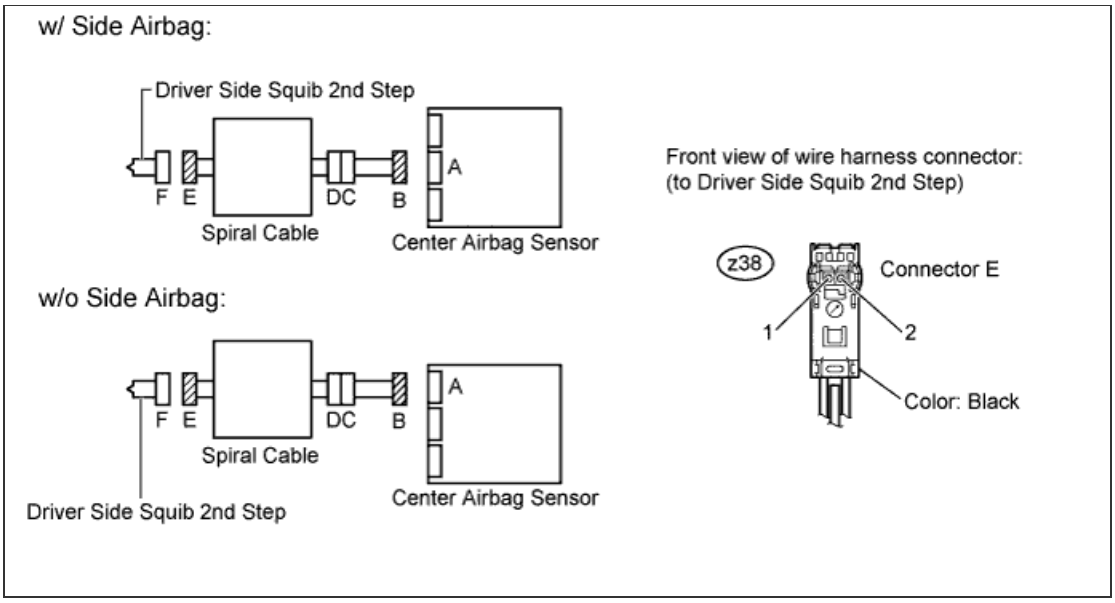

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z38-1 - Body ground	Engine switch on (IG)	Below 1 V
z38-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	1 MΩ or higher
z38-1 - Body ground	Always	1 MΩ or higher
z38-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

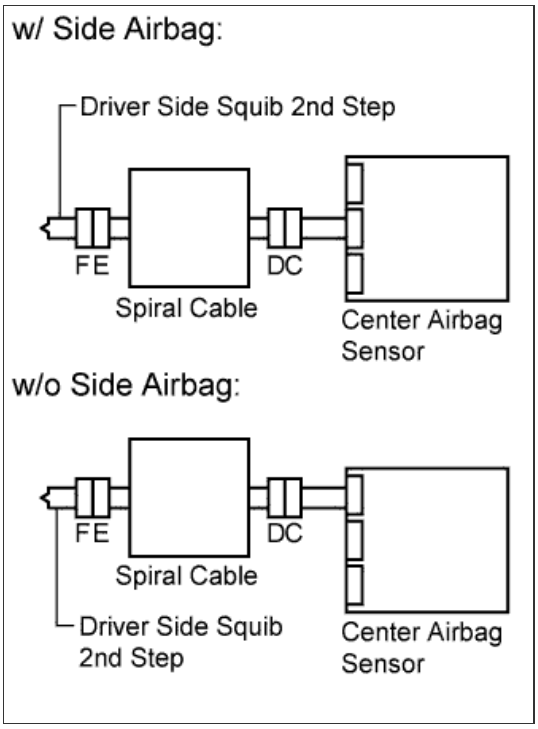


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

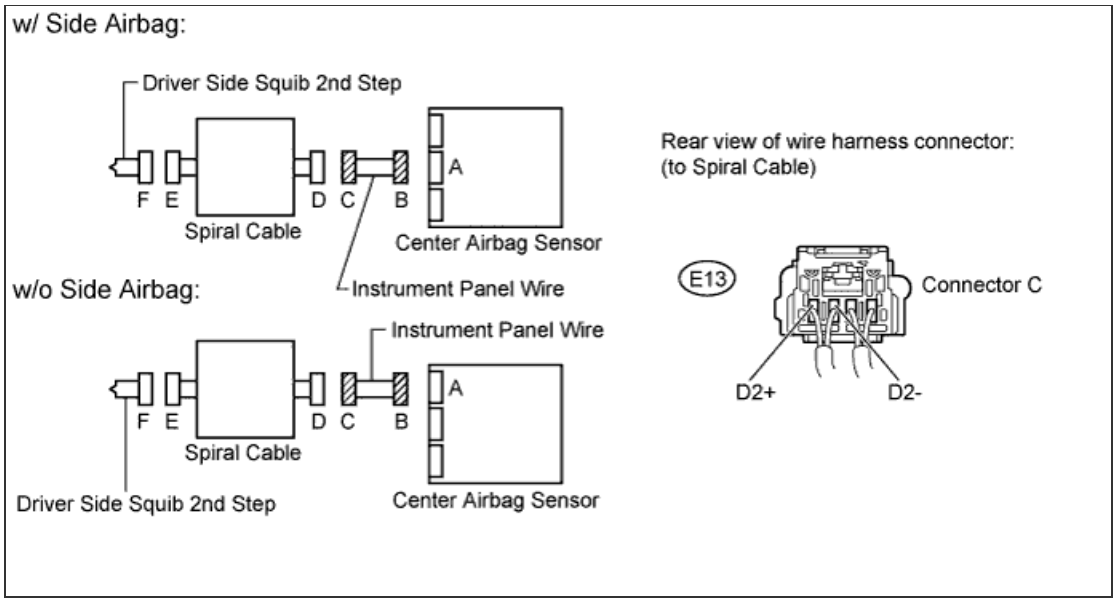

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-4 (D2+) - Body ground	Engine switch on (IG)	Below 1 V
E13-3 (D2-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	1 MΩ or higher
E13-4 (D2+) - Body ground	Always	1 MΩ or higher
E13-3 (D2-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE SPIRAL CABLE (Click here)

DTC B1905/74 Short in Front Pretensioner Squib LH Circuit

DTC B1906/74 Open in Front Pretensioner Squib LH Circuit

DTC B1907/74 Short to GND in Front Pretensioner Squib LH Circuit

DTC B1908/74 Short to B+ in Front Pretensioner Squib LH Circuit


for Preparation Click here


DESCRIPTION

The front pretensioner squib LH circuit consists of the center airbag sensor and the front seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1905/74	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front pretensioner squib LH circuit during the primary check. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1906/74	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front pretensioner squib LH circuit for 2 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1907/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly
B1908/74	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front pretensioner squib LH circuit for 0.5 seconds. • A front pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Front seat outer belt assembly LH (Front pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

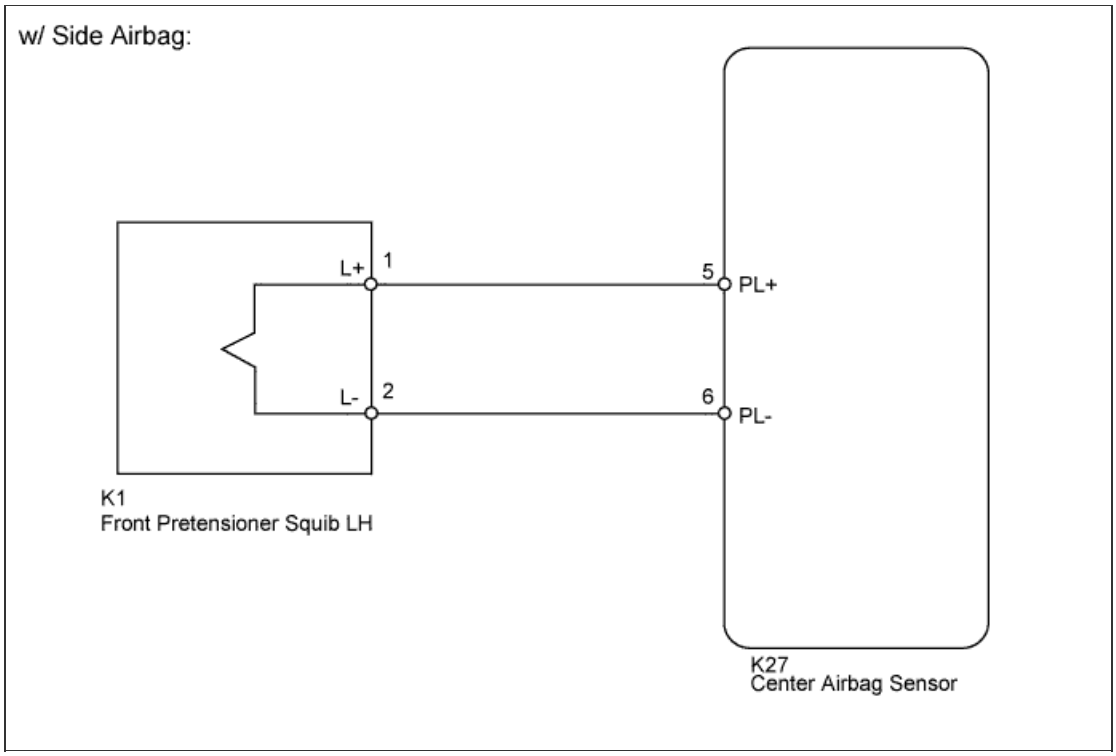

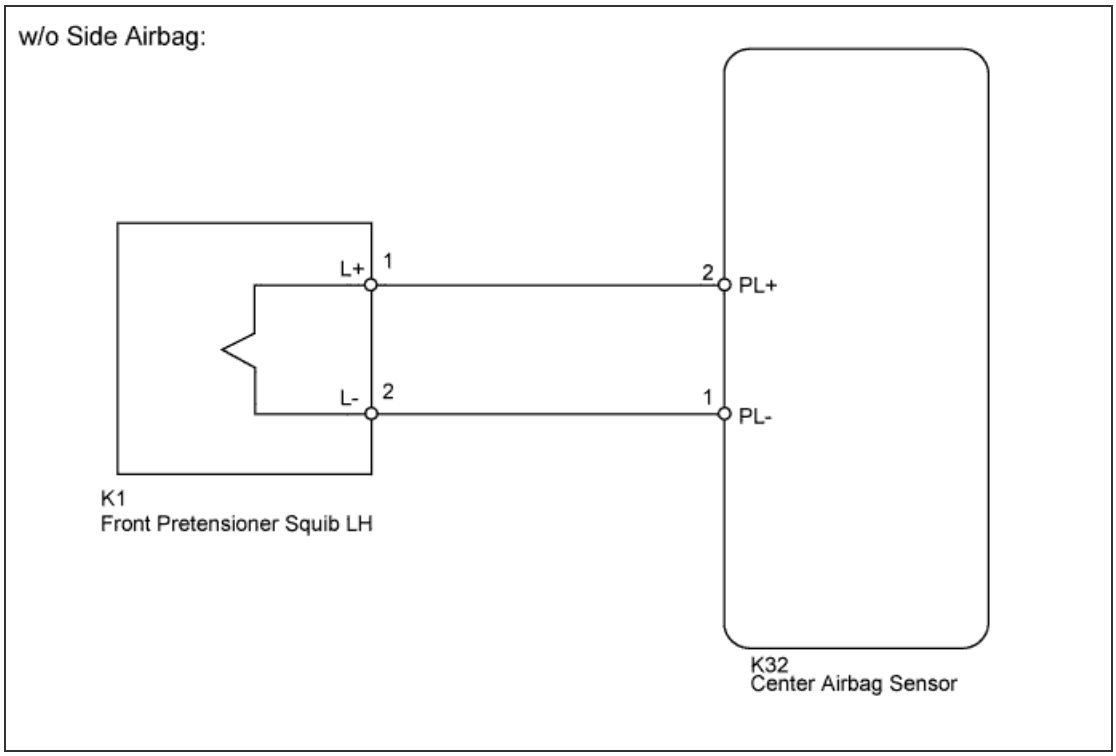

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT OUTER BELT LH (FRONT PRETENSIONER SQUIB LH)

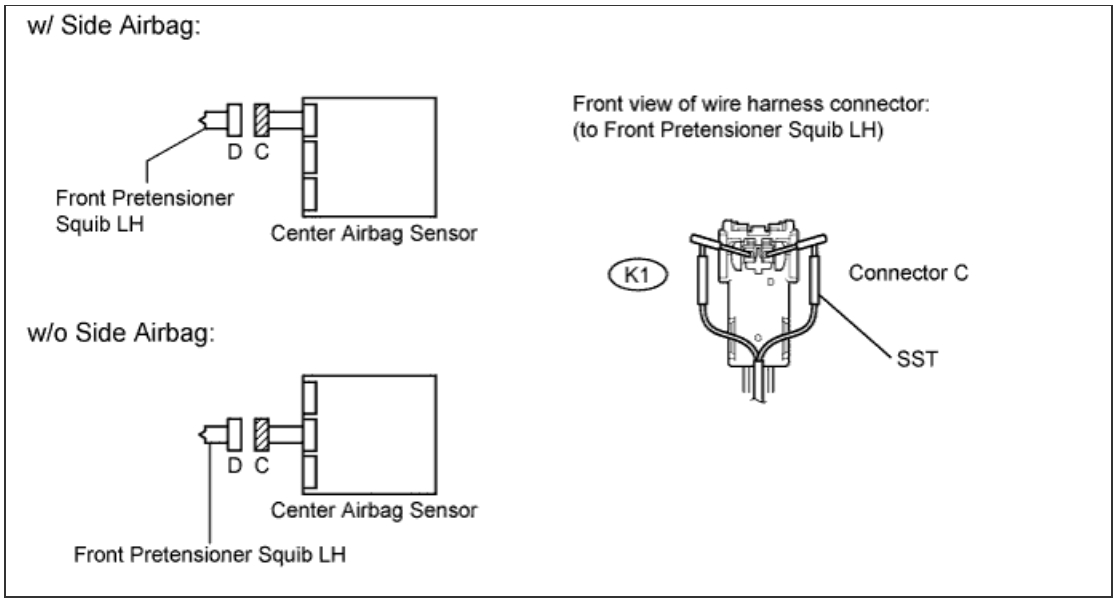

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front seat outer belt LH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the front seat outer belt LH (front pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.


d. Check that the floor wire connector (on the front seat outer belt LH side) is not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (FRONT PRETENSIONER SQUIB LH CIRCUIT)

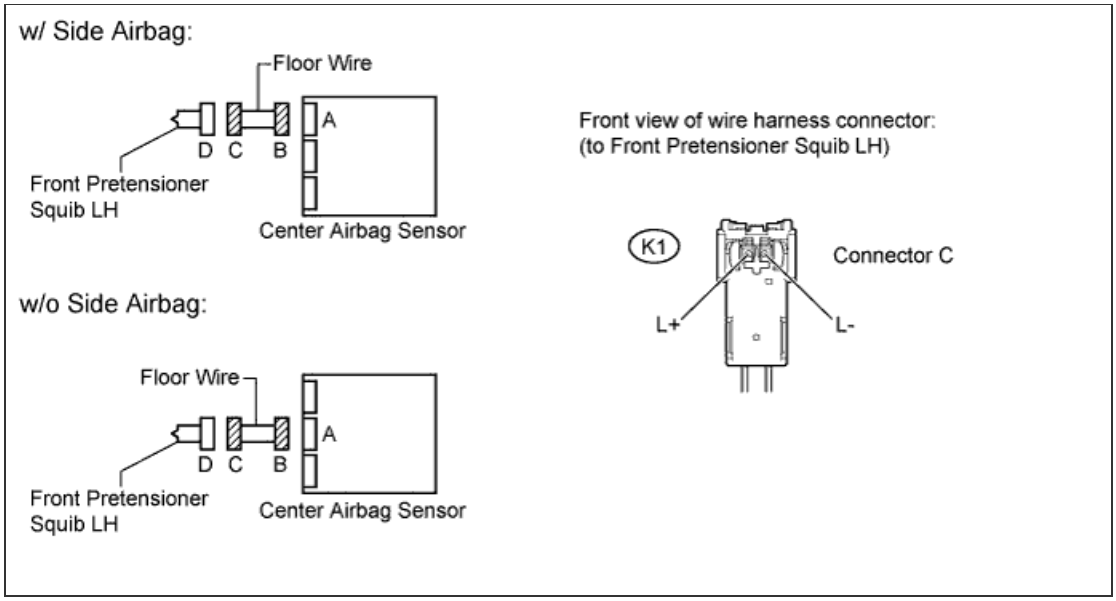

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K1-1 (L+) - Body ground	Engine switch on (IG)	Below 1 V
K1-2 (L-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K1-1 (L+) - K1-2 (L-)	Always	1 MΩ or higher
K1-1 (L+) - Body ground	Always	1 MΩ or higher
K1-2 (L-) - Body ground	Always	1 MΩ or higher

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1905, B1906, B1907 or B1908 is not output.

HINT:

Codes other than DTC B1905, B1906, B1907 and B1908 may be output at this time, but they are not related to this check.

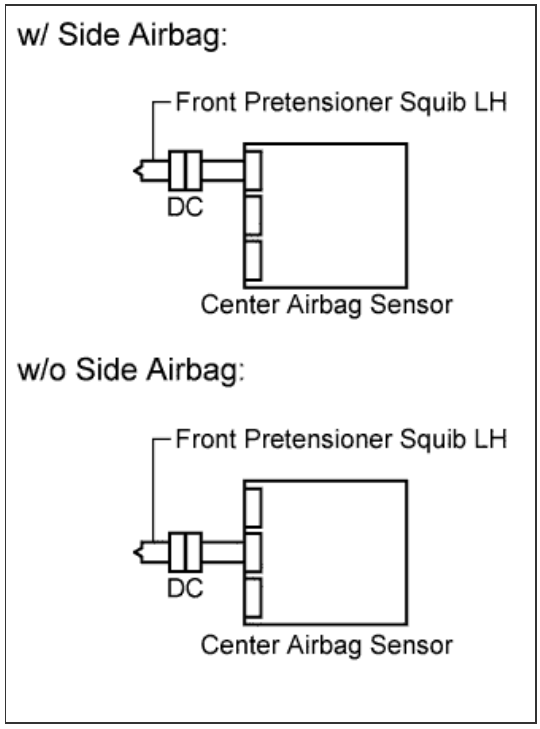

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1810/53 Short in Driver Side Squib 2nd Step Circuit

DTC B1811/53 Open in Driver Side Squib 2nd Step Circuit

DTC B1812/53 Short to GND in Driver Side Squib 2nd Step Circuit

DTC B1813/53 Short to B+ in Driver Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The driver side squib 2nd step circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1810/53	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib 2nd step circuit during the primary check. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1811/53	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side squib 2nd step circuit for 2 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1812/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1813/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

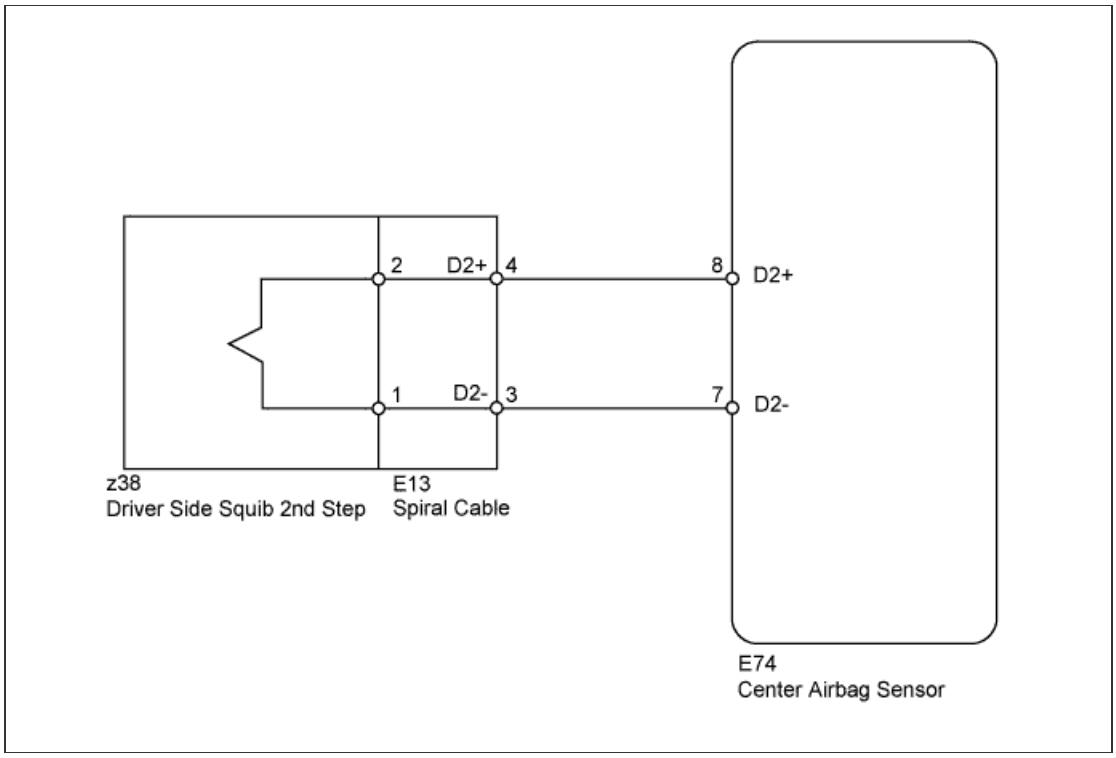

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB 2ND STEP)

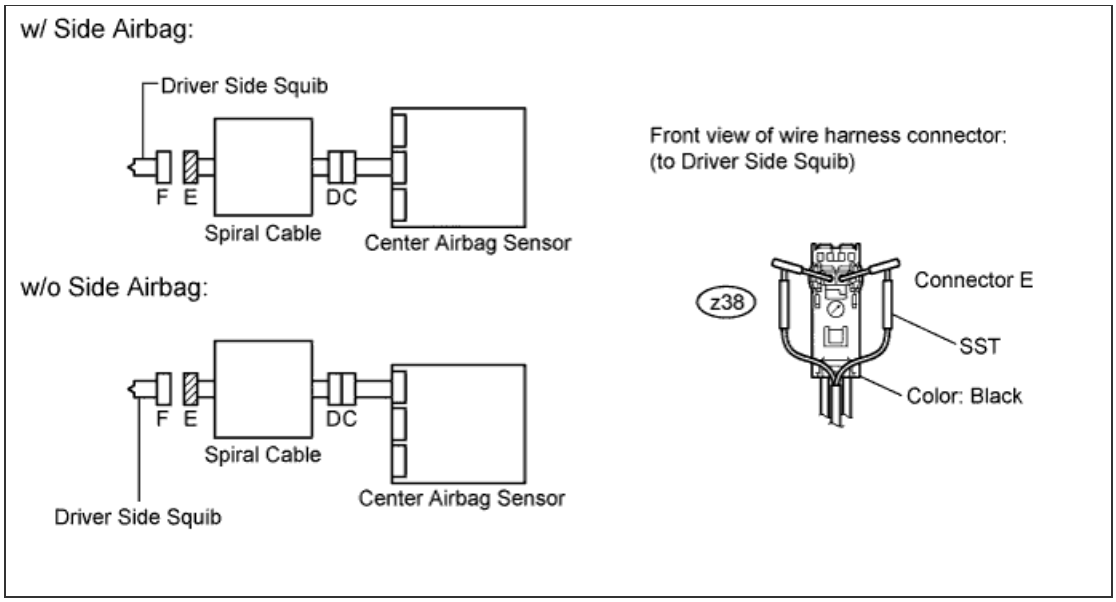

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib 2nd step) for measurement, as this may lead to a serious injury due to

airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB 2ND STEP CIRCUIT

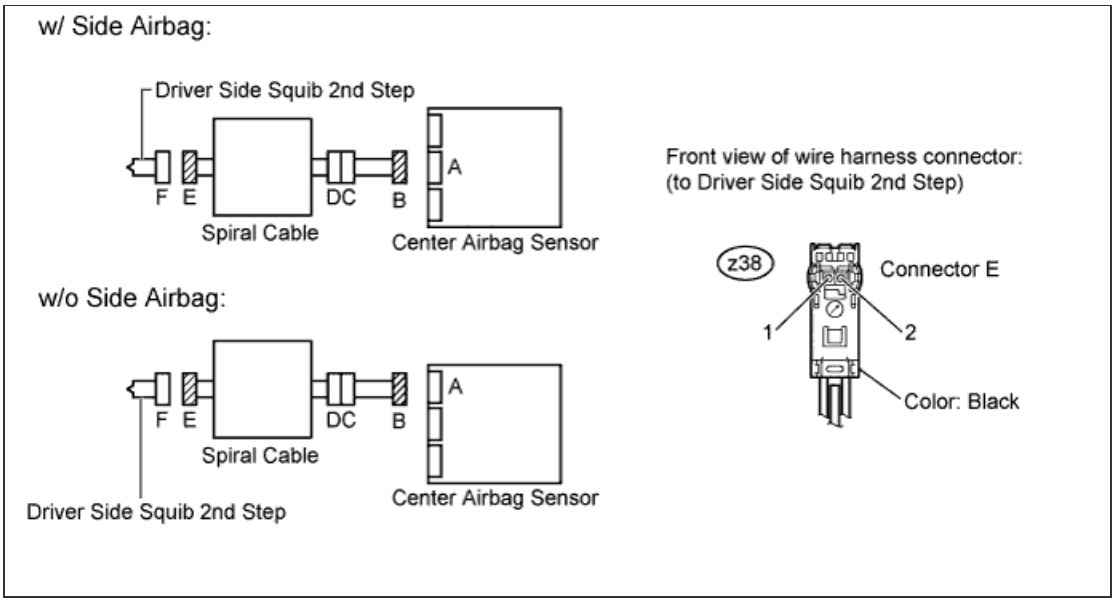

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z38-1 - Body ground	Engine switch on (IG)	Below 1 V
z38-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	1 MΩ or higher
z38-1 - Body ground	Always	1 MΩ or higher
z38-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

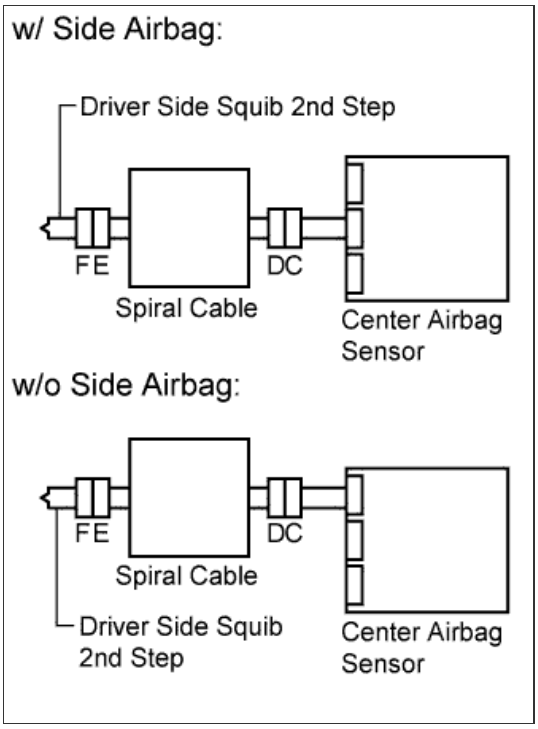


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

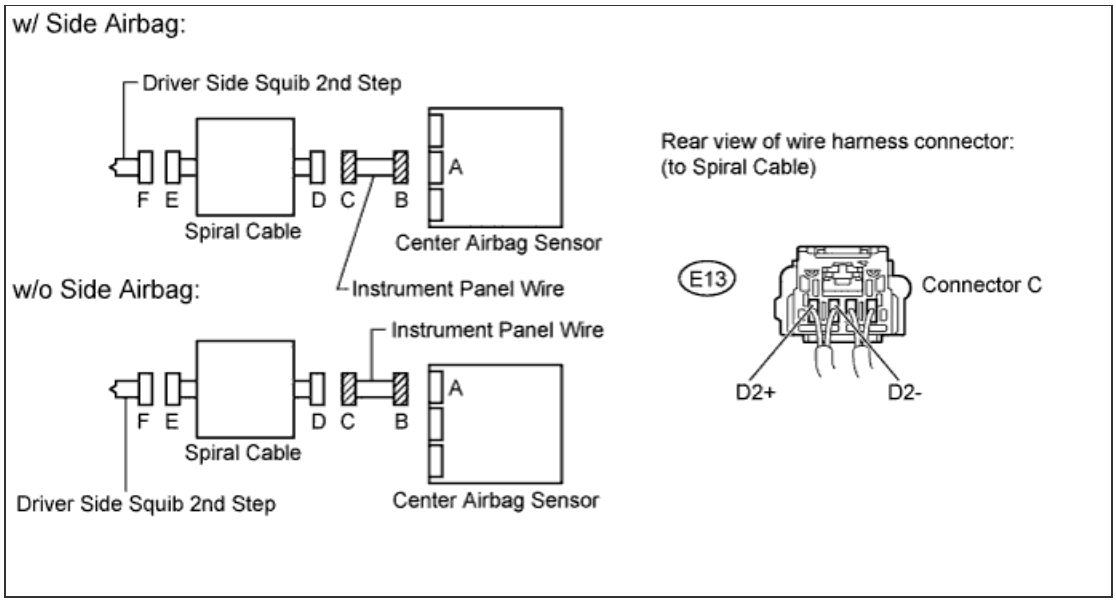

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-4 (D2+) - Body ground	Engine switch on (IG)	Below 1 V
E13-3 (D2-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	1 MΩ or higher
E13-4 (D2+) - Body ground	Always	1 MΩ or higher
E13-3 (D2-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE SPIRAL CABLE (Click here)

DTC B1920/77 Short in Rear Pretensioner Squib RH Circuit

DTC B1921/77 Open in Rear Pretensioner Squib RH Circuit

DTC B1922/77 Short to GND in Rear Pretensioner Squib RH Circuit

DTC B1923/77 Short to B+ in Rear Pretensioner Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib RH circuit consists of the center airbag sensor and the rear seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
Theses DTCs are stored when a malfunction is detected in the rear pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1920/77	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib RH circuit during the primary check. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1921/77	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib RH circuit for 2 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1922/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1923/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

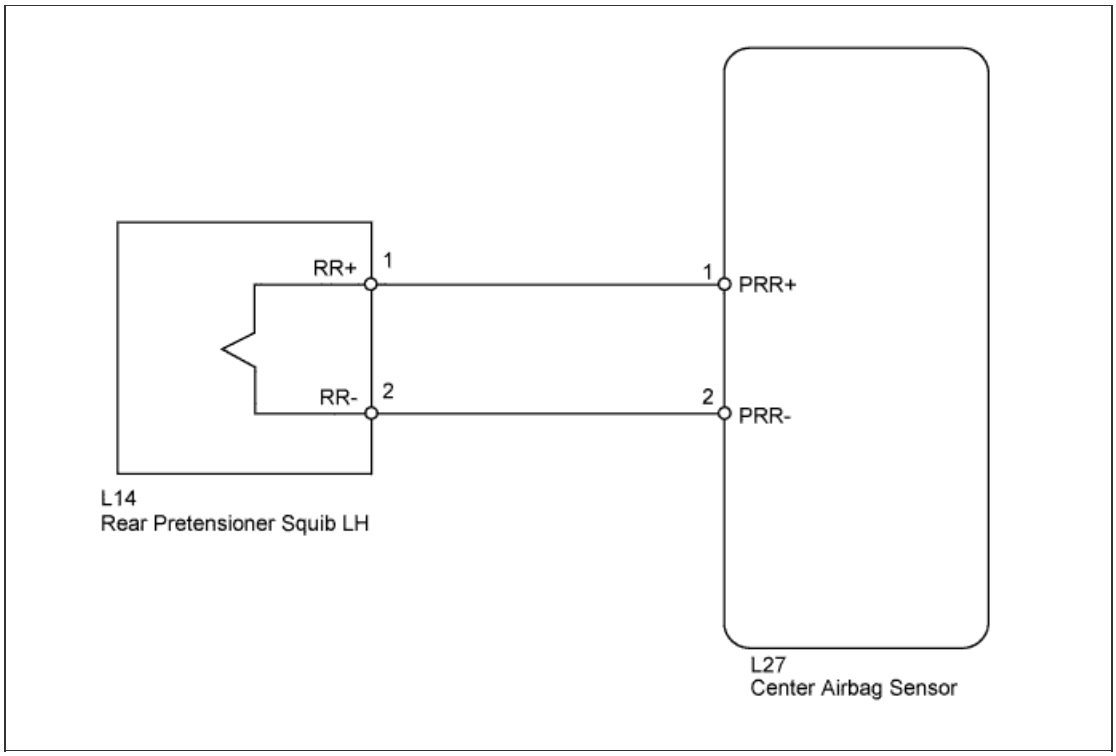

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT RH (REAR PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat outer belt RH (rear pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

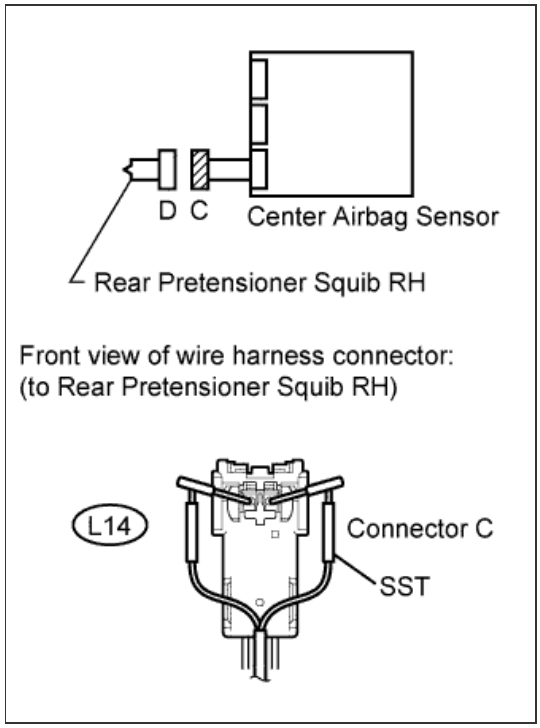

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs stored in the memory (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBL RH (Click here)

2.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the rear seat outer belt RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (REAR PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L14-1 (RR+) - Body ground	Engine switch on (IG)	Below 1 V
L14-2 (RR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	1 MΩ or higher
L14-1 (RR+) - Body ground	Always	1 MΩ or higher

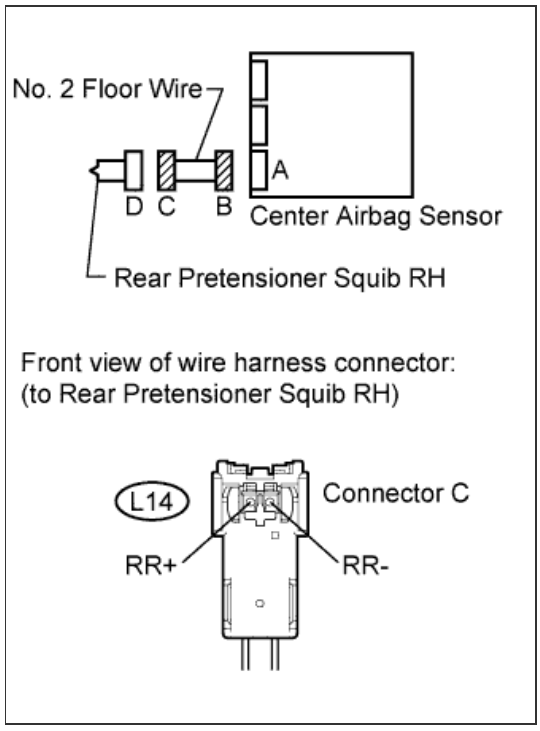

L14-2 (RR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

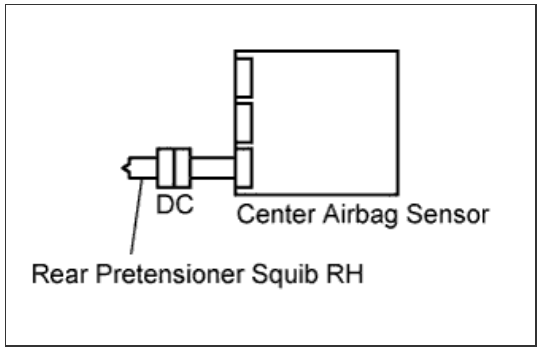

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBL (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1810/53 Short in Driver Side Squib 2nd Step Circuit

DTC B1811/53 Open in Driver Side Squib 2nd Step Circuit

DTC B1812/53 Short to GND in Driver Side Squib 2nd Step Circuit

DTC B1813/53 Short to B+ in Driver Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The driver side squib 2nd step circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1810/53	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib 2nd step circuit during the primary check. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1811/53	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side squib 2nd step circuit for 2 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1812/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1813/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

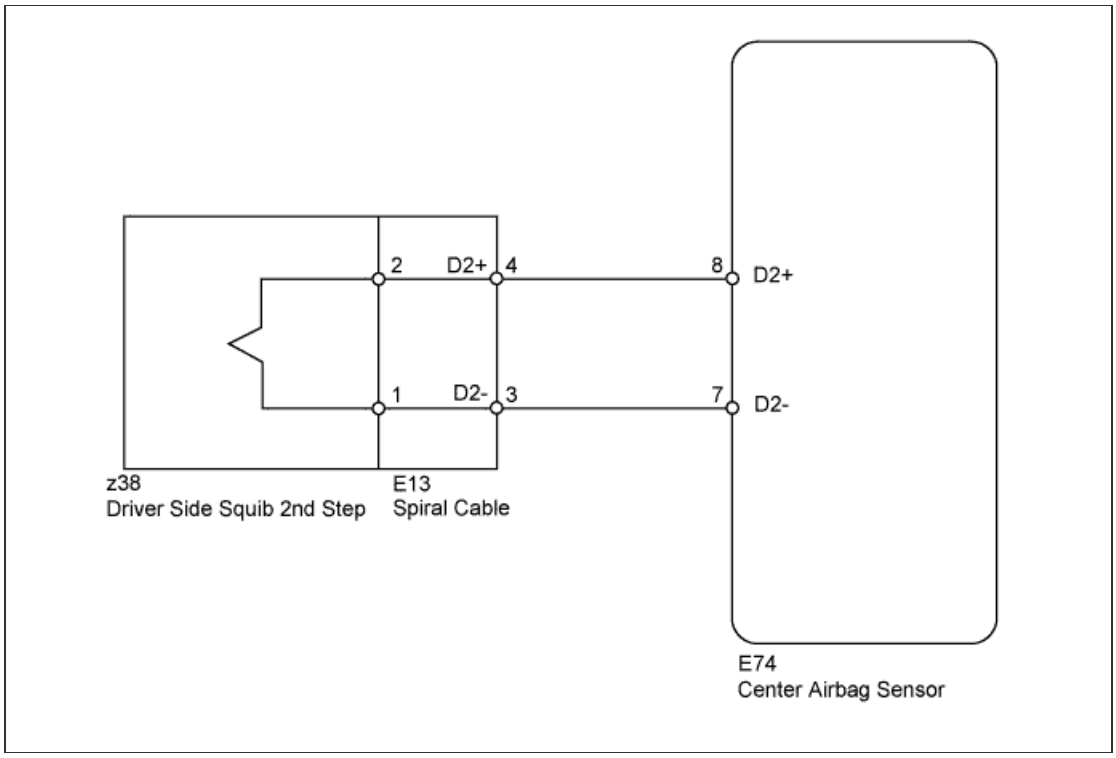

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB 2ND STEP)

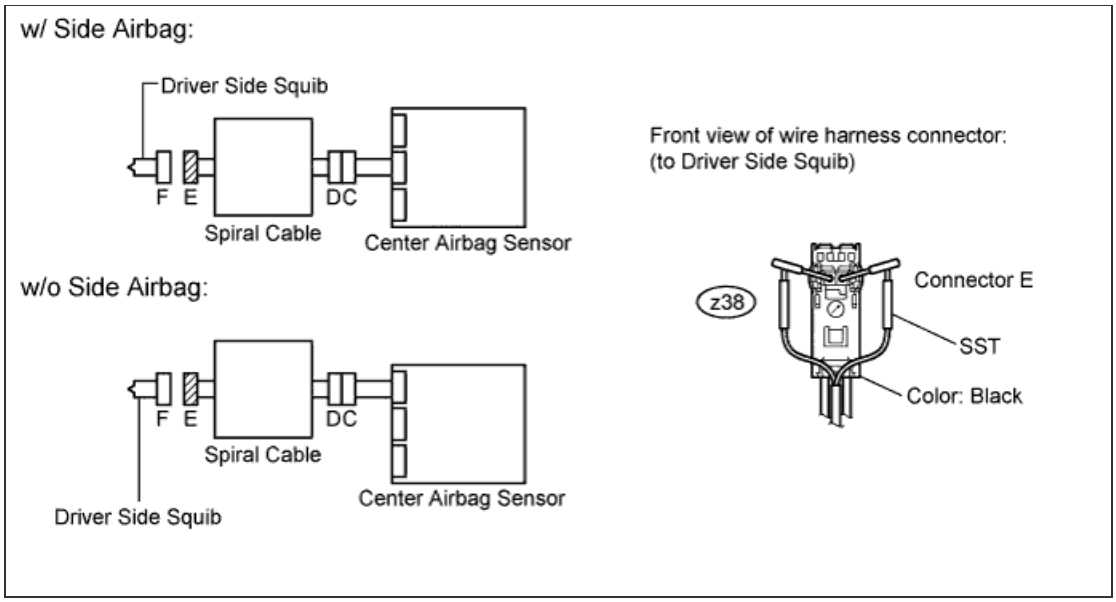

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib 2nd step) for measurement, as this may lead to a serious injury due to

airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB 2ND STEP CIRCUIT

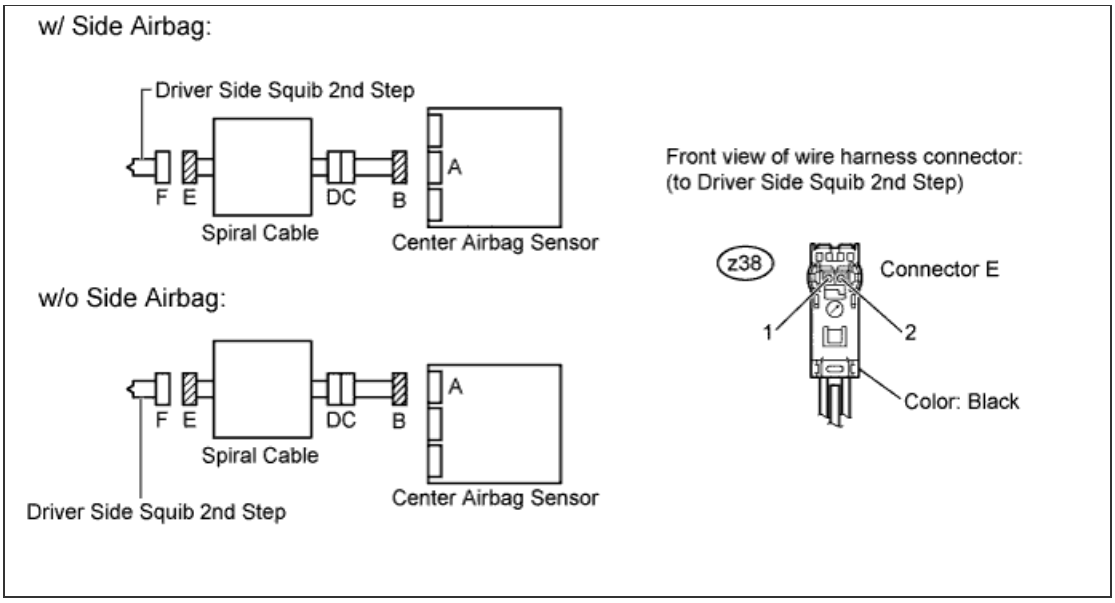

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z38-1 - Body ground	Engine switch on (IG)	Below 1 V
z38-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	1 MΩ or higher
z38-1 - Body ground	Always	1 MΩ or higher
z38-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

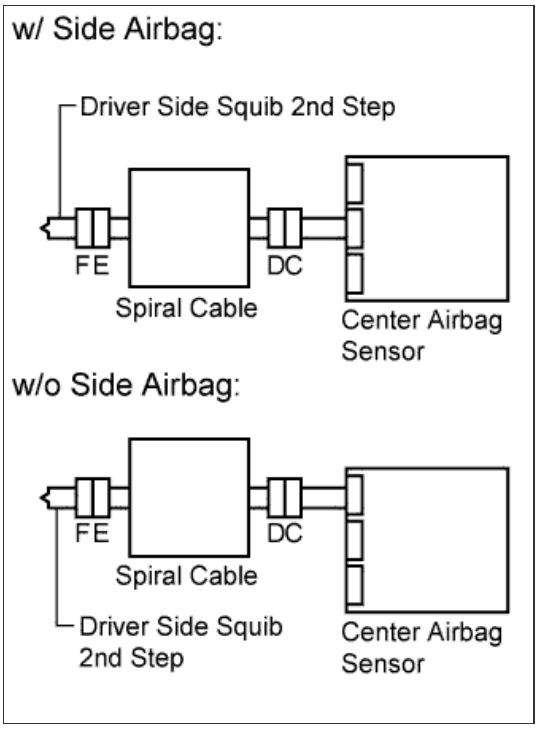


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

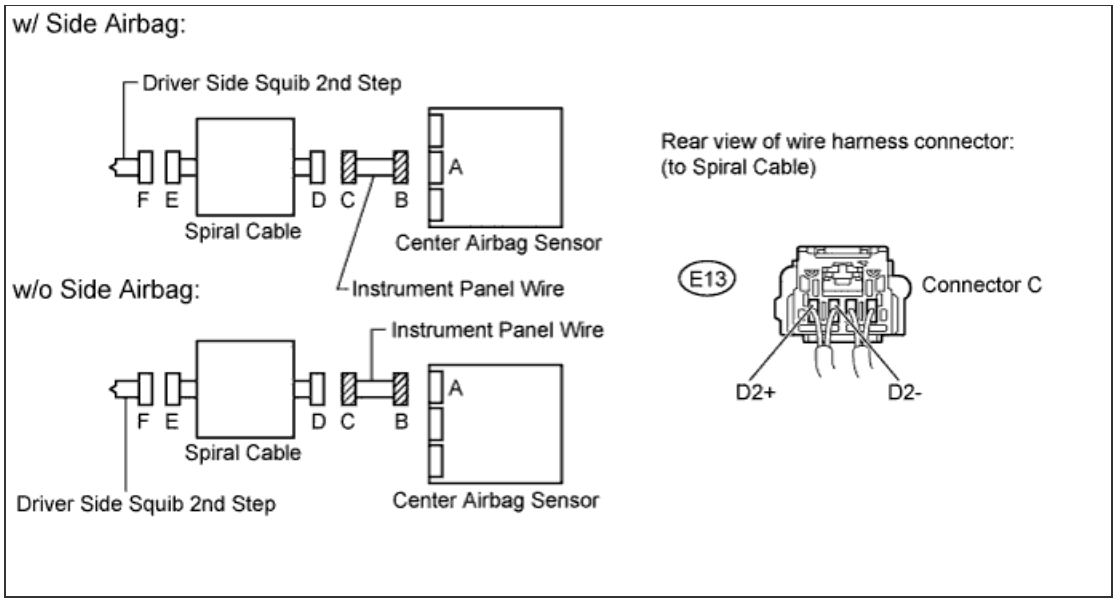

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-4 (D2+) - Body ground	Engine switch on (IG)	Below 1 V
E13-3 (D2-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	1 MΩ or higher
E13-4 (D2+) - Body ground	Always	1 MΩ or higher
E13-3 (D2-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE SPIRAL CABLE (Click here)

DTC B1920/77 Short in Rear Pretensioner Squib RH Circuit

DTC B1921/77 Open in Rear Pretensioner Squib RH Circuit

DTC B1922/77 Short to GND in Rear Pretensioner Squib RH Circuit

DTC B1923/77 Short to B+ in Rear Pretensioner Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib RH circuit consists of the center airbag sensor and the rear seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
Theses DTCs are stored when a malfunction is detected in the rear pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1920/77	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib RH circuit during the primary check. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1921/77	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib RH circuit for 2 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1922/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1923/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

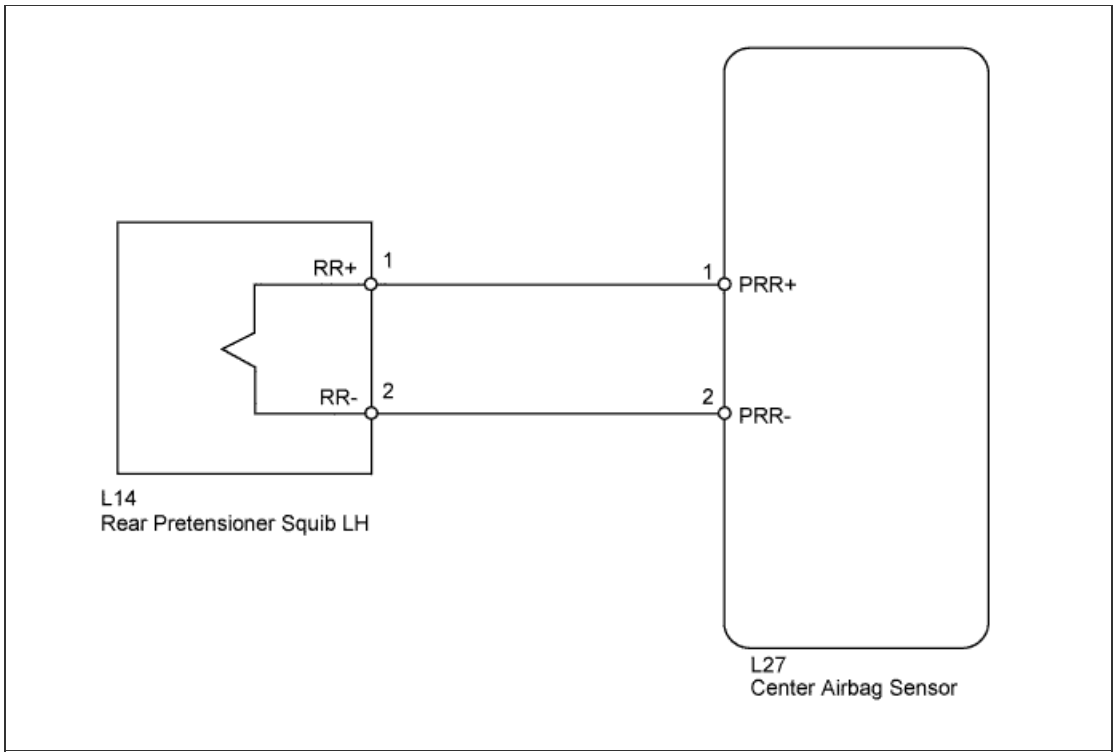

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT RH (REAR PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat outer belt RH (rear pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

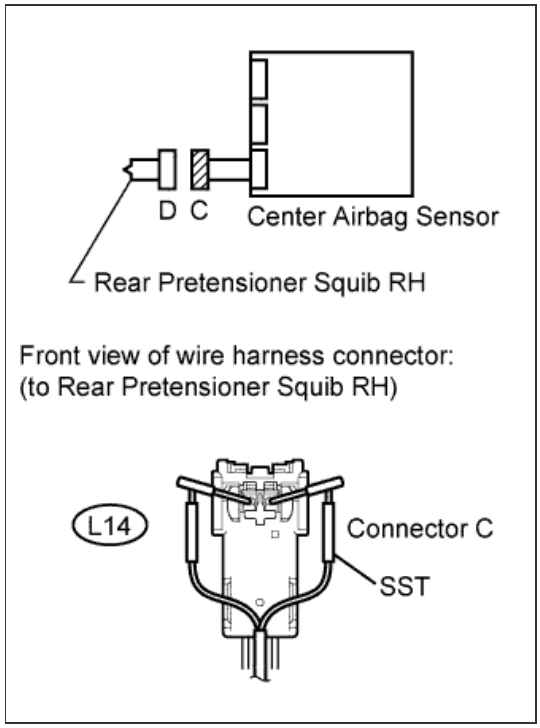

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs stored in the memory (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBL RH (Click here)

2.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the rear seat outer belt RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (REAR PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L14-1 (RR+) - Body ground	Engine switch on (IG)	Below 1 V
L14-2 (RR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	1 MΩ or higher
L14-1 (RR+) - Body ground	Always	1 MΩ or higher

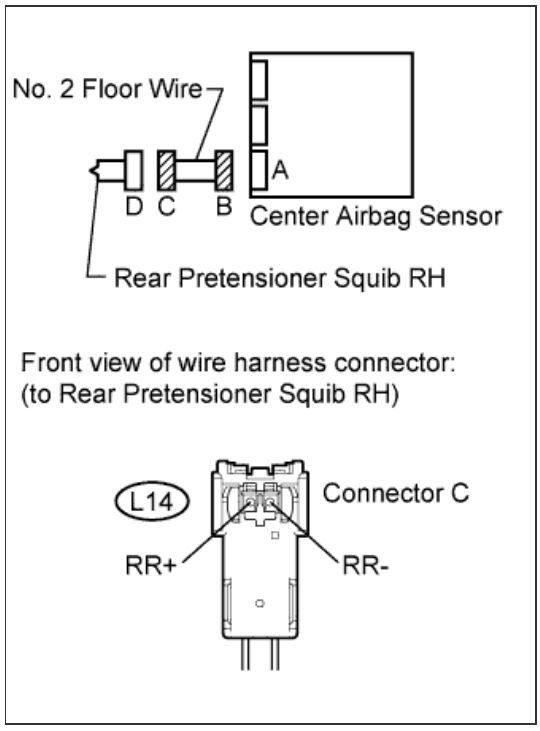

L14-2 (RR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

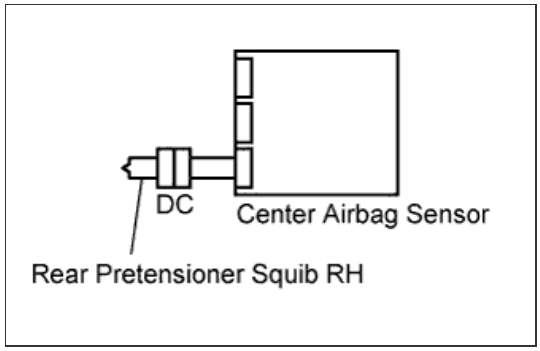

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBL (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1810/53 Short in Driver Side Squib 2nd Step Circuit

DTC B1811/53 Open in Driver Side Squib 2nd Step Circuit

DTC B1812/53 Short to GND in Driver Side Squib 2nd Step Circuit

DTC B1813/53 Short to B+ in Driver Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The driver side squib 2nd step circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1810/53	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib 2nd step circuit during the primary check. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1811/53	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side squib 2nd step circuit for 2 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1812/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1813/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

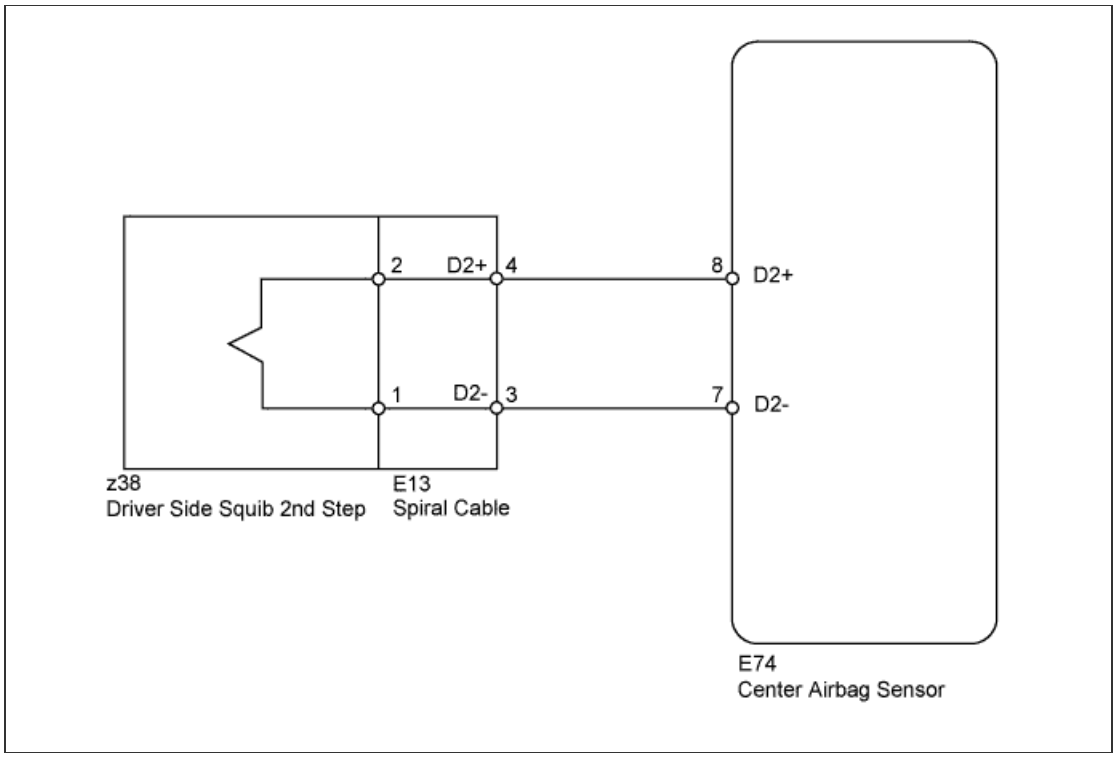

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB 2ND STEP)

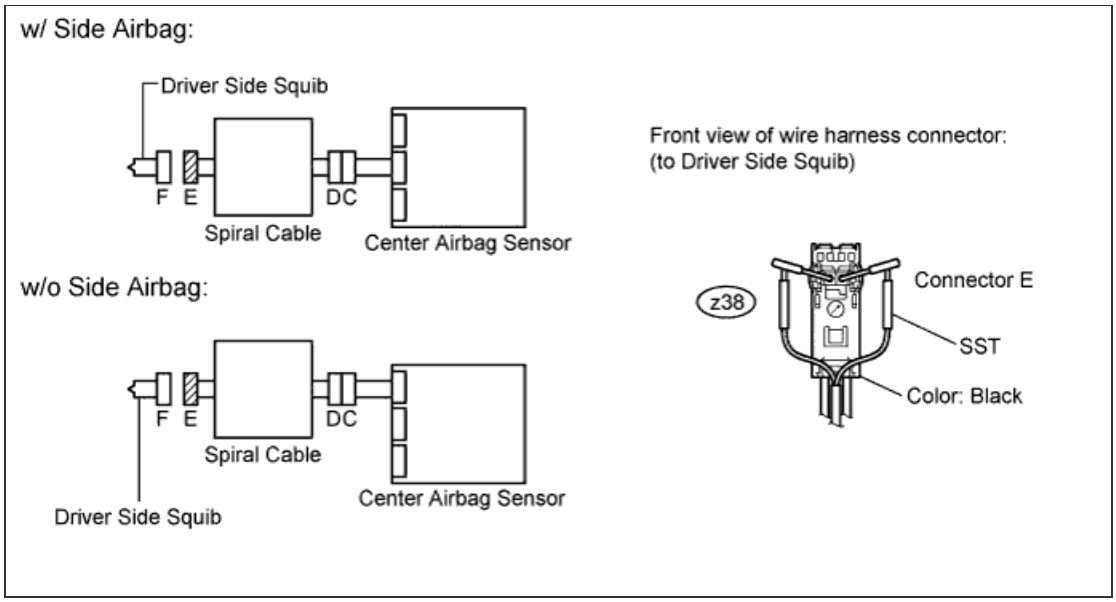

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib 2nd step) for measurement, as this may lead to a serious injury due to

airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB 2ND STEP CIRCUIT

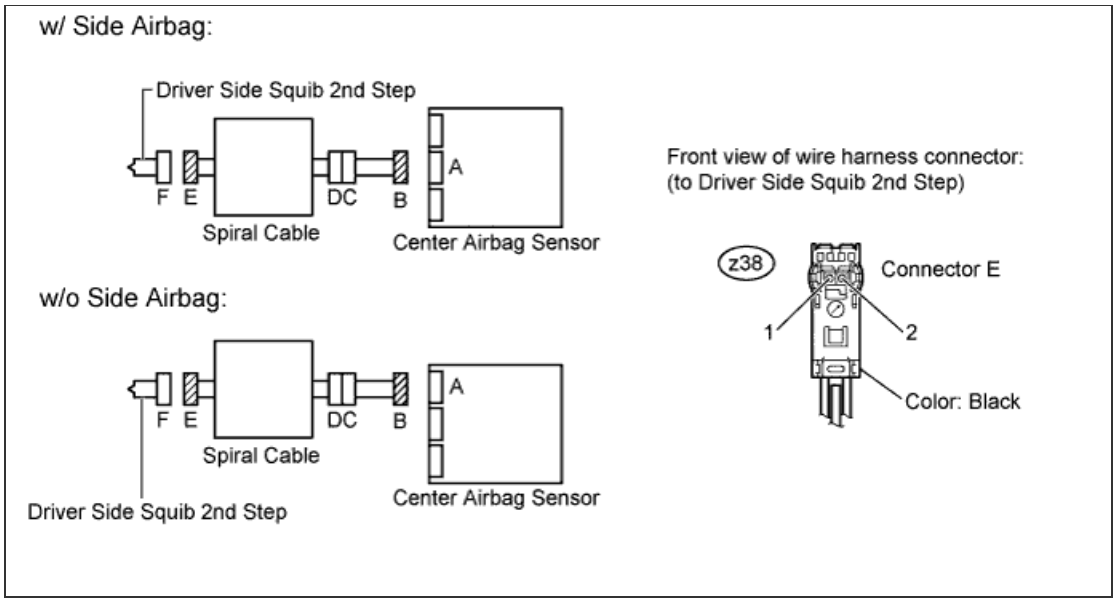

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z38-1 - Body ground	Engine switch on (IG)	Below 1 V
z38-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	1 MΩ or higher
z38-1 - Body ground	Always	1 MΩ or higher
z38-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

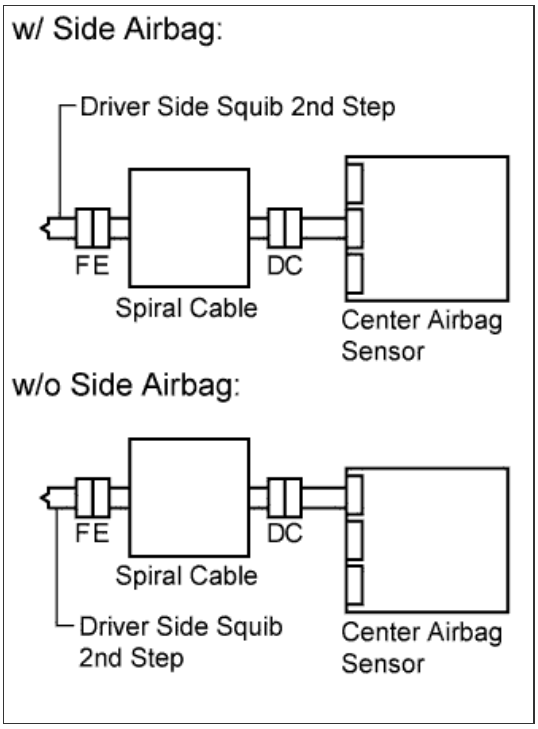


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

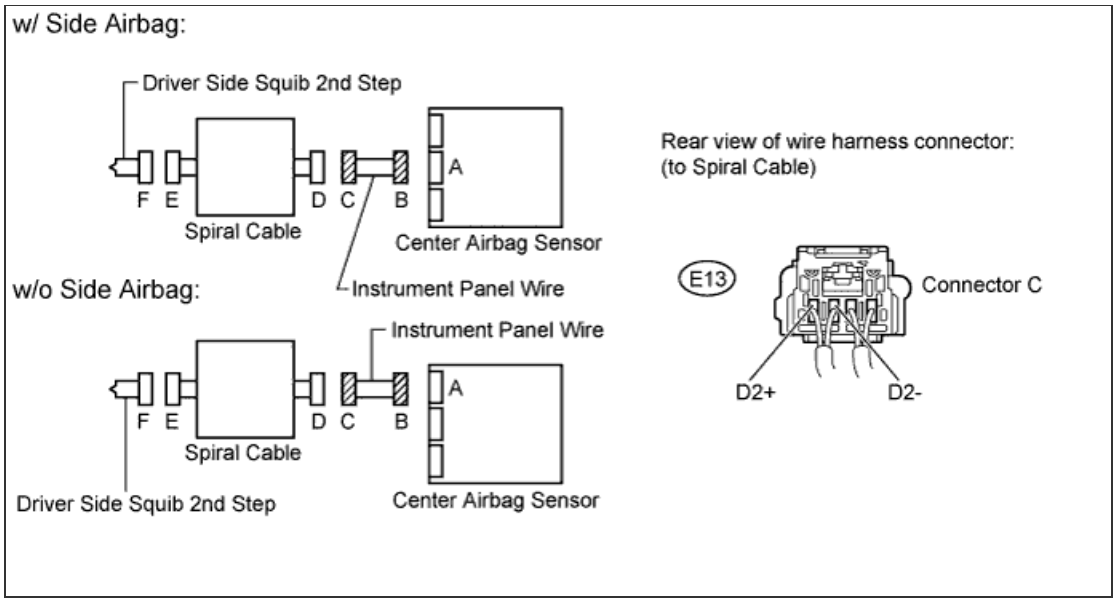

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-4 (D2+) - Body ground	Engine switch on (IG)	Below 1 V
E13-3 (D2-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	1 MΩ or higher
E13-4 (D2+) - Body ground	Always	1 MΩ or higher
E13-3 (D2-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE SPIRAL CABLE (Click here)

DTC B1920/77 Short in Rear Pretensioner Squib RH Circuit

DTC B1921/77 Open in Rear Pretensioner Squib RH Circuit

DTC B1922/77 Short to GND in Rear Pretensioner Squib RH Circuit

DTC B1923/77 Short to B+ in Rear Pretensioner Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib RH circuit consists of the center airbag sensor and the rear seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
Theses DTCs are stored when a malfunction is detected in the rear pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1920/77	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib RH circuit during the primary check. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1921/77	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib RH circuit for 2 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1922/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1923/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

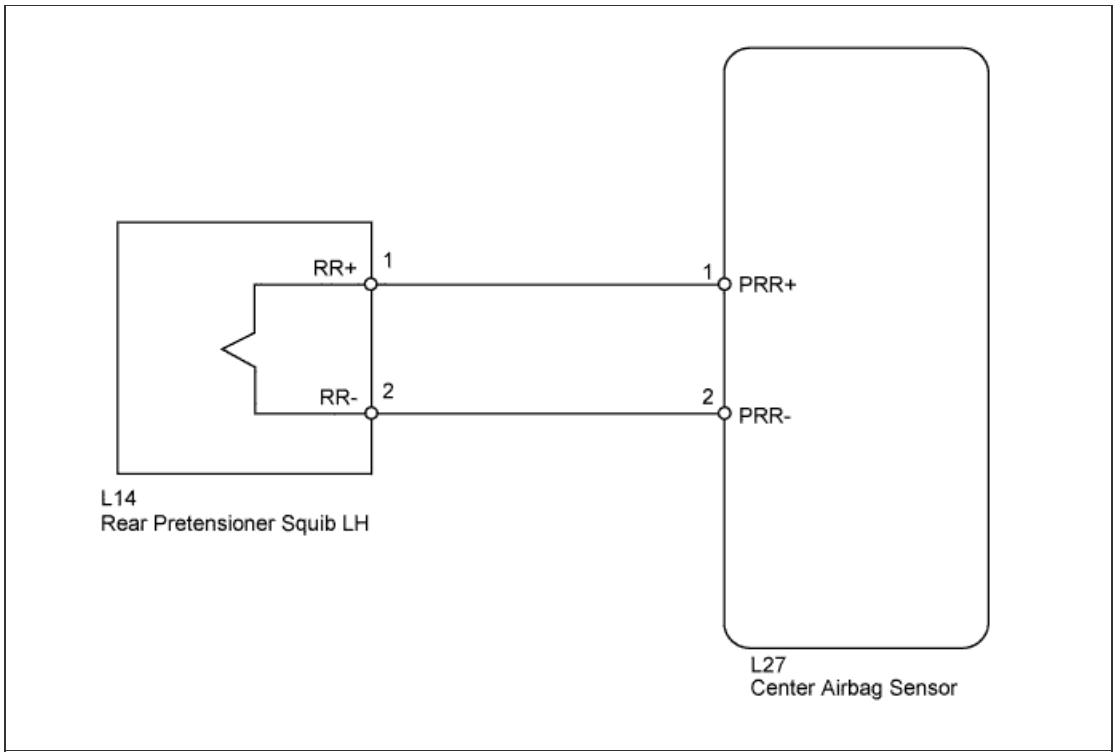

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT RH (REAR PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat outer belt RH (rear pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

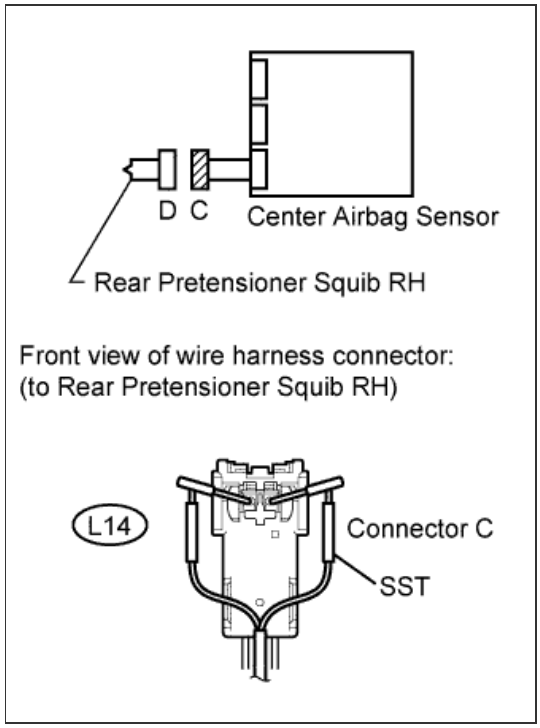

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs stored in the memory (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBL RH (Click here)

2.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the rear seat outer belt RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (REAR PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L14-1 (RR+) - Body ground	Engine switch on (IG)	Below 1 V
L14-2 (RR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	1 MΩ or higher
L14-1 (RR+) - Body ground	Always	1 MΩ or higher

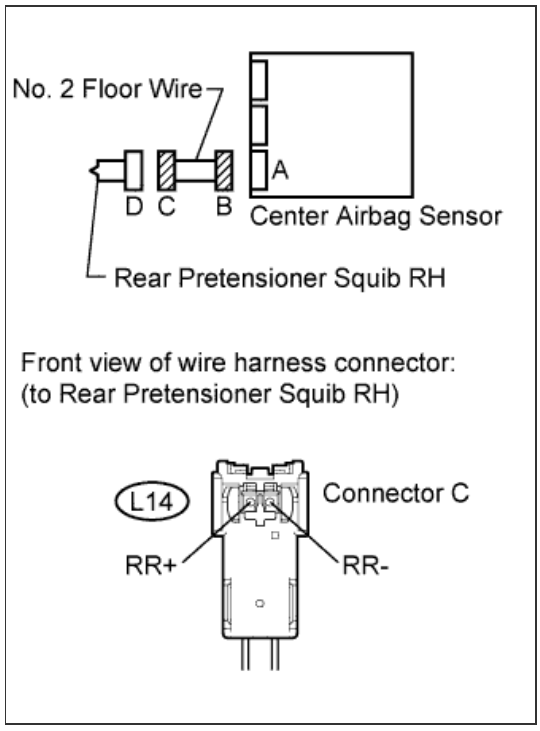

L14-2 (RR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

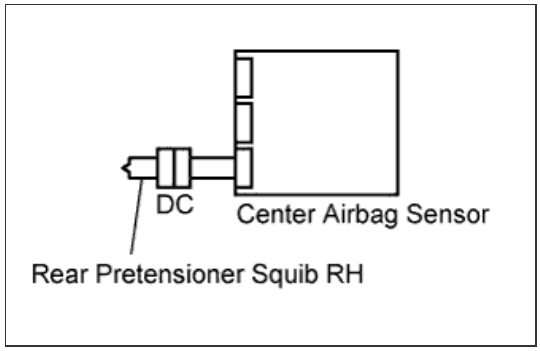

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBL (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1810/53 Short in Driver Side Squib 2nd Step Circuit

DTC B1811/53 Open in Driver Side Squib 2nd Step Circuit

DTC B1812/53 Short to GND in Driver Side Squib 2nd Step Circuit

DTC B1813/53 Short to B+ in Driver Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The driver side squib 2nd step circuit consists of the center airbag sensor, the spiral cable, and the steering pad.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the driver side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1810/53	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the driver side squib 2nd step circuit during the primary check. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1811/53	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the driver side squib 2nd step circuit for 2 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1812/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the driver side 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly
B1813/53	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the driver side squib 2nd step circuit for 0.5 seconds. • A driver side squib 2nd step malfunction. • A spiral cable malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Spiral cable • Steering pad (Driver side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

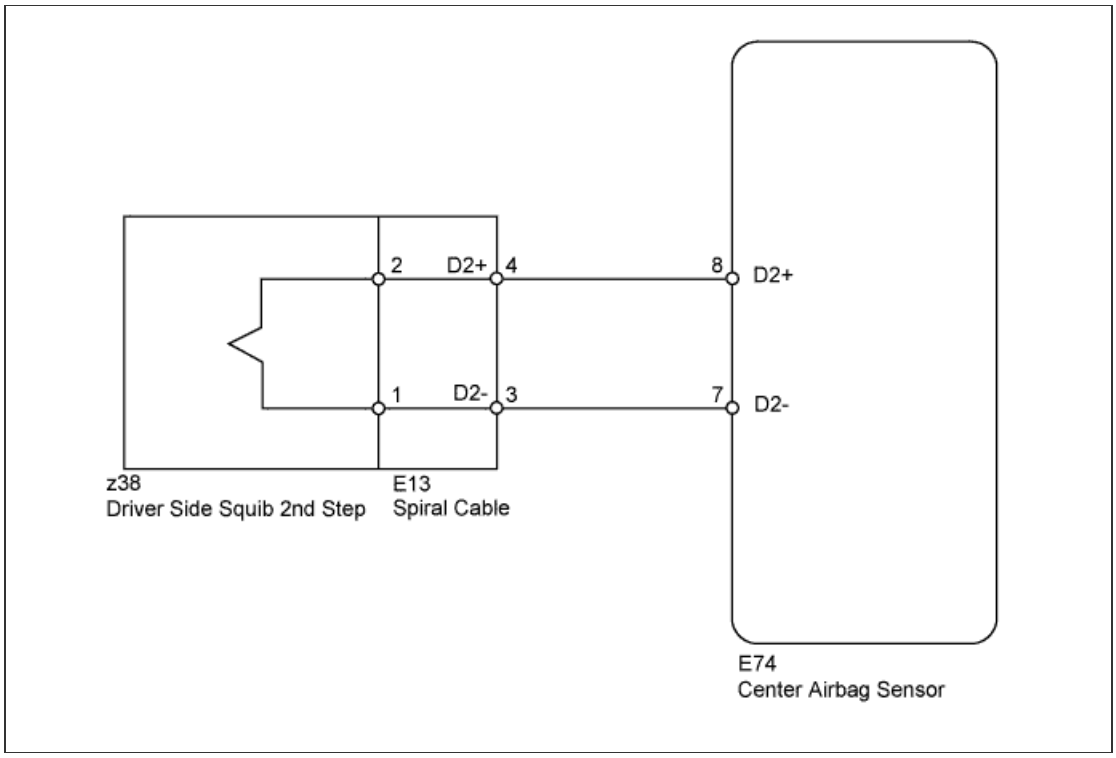

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK STEERING PAD (DRIVER SIDE SQUIB 2ND STEP)

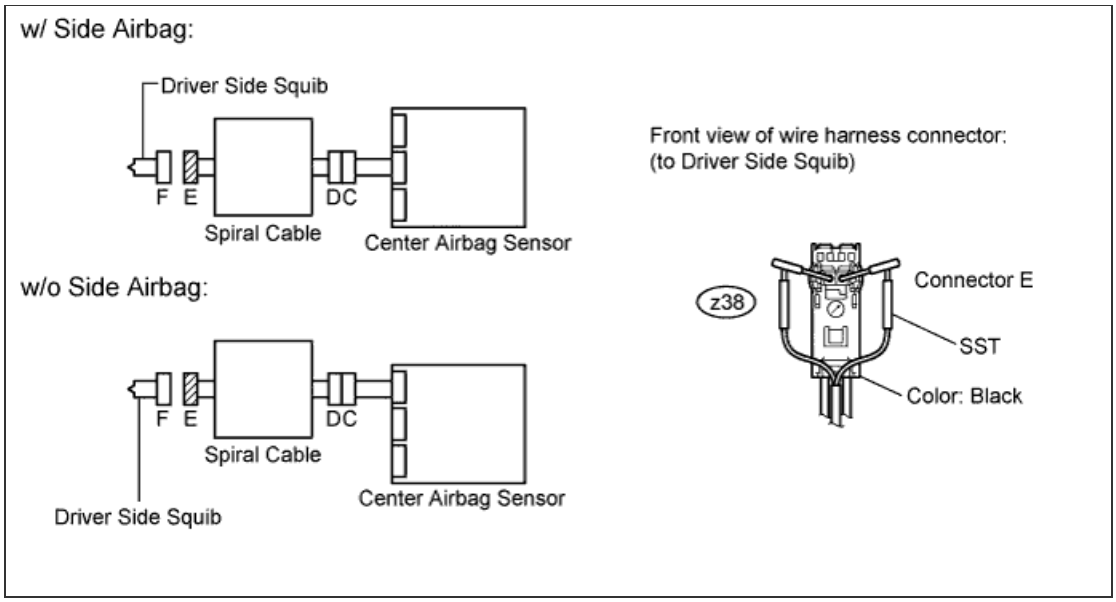

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the steering pad.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the steering pad (driver side squib 2nd step) for measurement, as this may lead to a serious injury due to

airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE STEERING PAD (**Click here**)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the spiral cable connectors (on the steering pad side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE SPIRAL CABLE (**Click here**)

OK →

3.CHECK DRIVER SIDE SQUIB 2ND STEP CIRCUIT

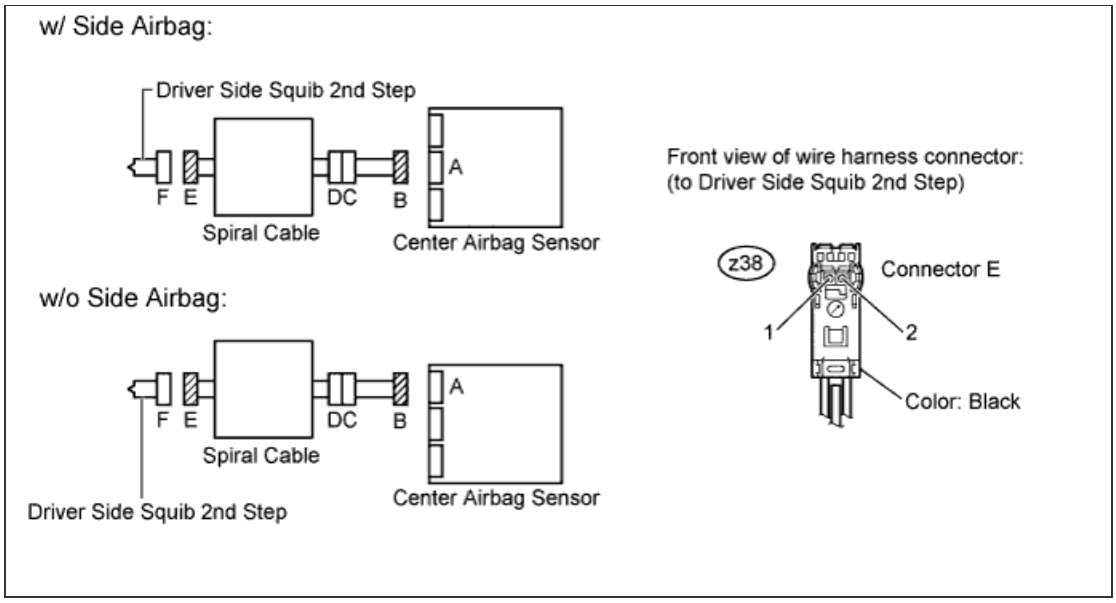

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z38-1 - Body ground	Engine switch on (IG)	Below 1 V
z38-2 - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z38-1 - z38-2	Always	1 MΩ or higher
z38-1 - Body ground	Always	1 MΩ or higher
z38-2 - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the steering pad and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1810, B1811, B1812 or B1813 is not output.

HINT:

Codes other than DTC B1810, B1811, B1812 and B1813 may be output at this time, but they are not related to this check.

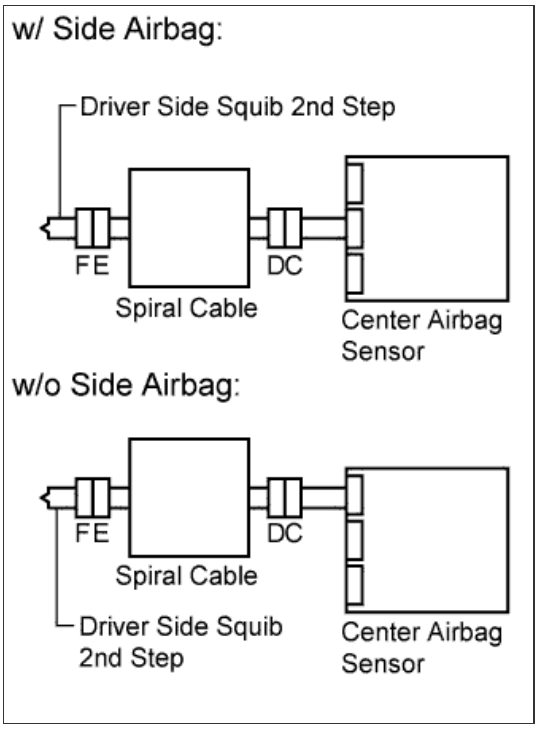


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - SPIRAL CABLE)

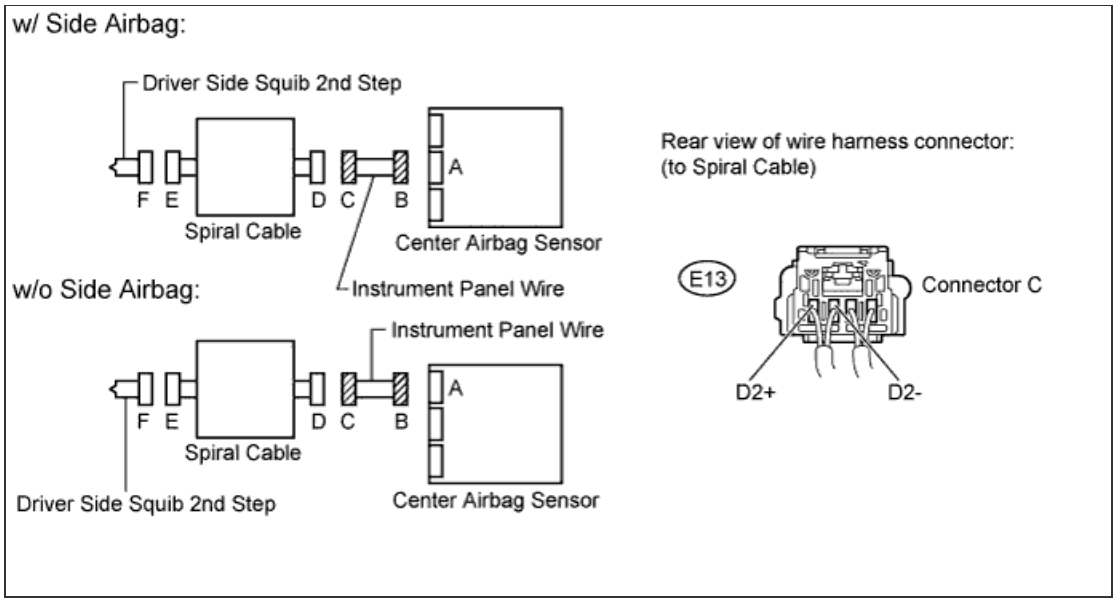

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the spiral cable.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E13-4 (D2+) - Body ground	Engine switch on (IG)	Below 1 V
E13-3 (D2-) - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-4 (D2+) - E13-3 (D2-)	Always	1 MΩ or higher
E13-4 (D2+) - Body ground	Always	1 MΩ or higher
E13-3 (D2-) - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE SPIRAL CABLE (Click here)

DTC B1920/77 Short in Rear Pretensioner Squib RH Circuit

DTC B1921/77 Open in Rear Pretensioner Squib RH Circuit

DTC B1922/77 Short to GND in Rear Pretensioner Squib RH Circuit

DTC B1923/77 Short to B+ in Rear Pretensioner Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib RH circuit consists of the center airbag sensor and the rear seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
Theses DTCs are stored when a malfunction is detected in the rear pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1920/77	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib RH circuit during the primary check. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1921/77	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib RH circuit for 2 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1922/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1923/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

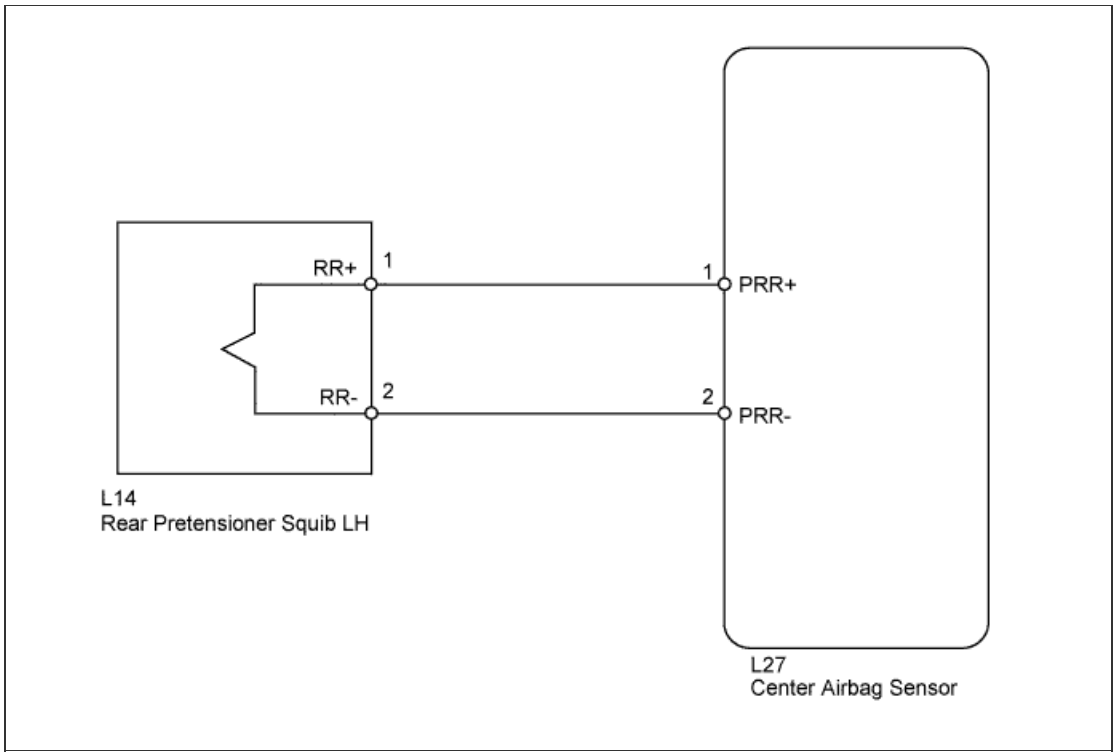

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT RH (REAR PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat outer belt RH (rear pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

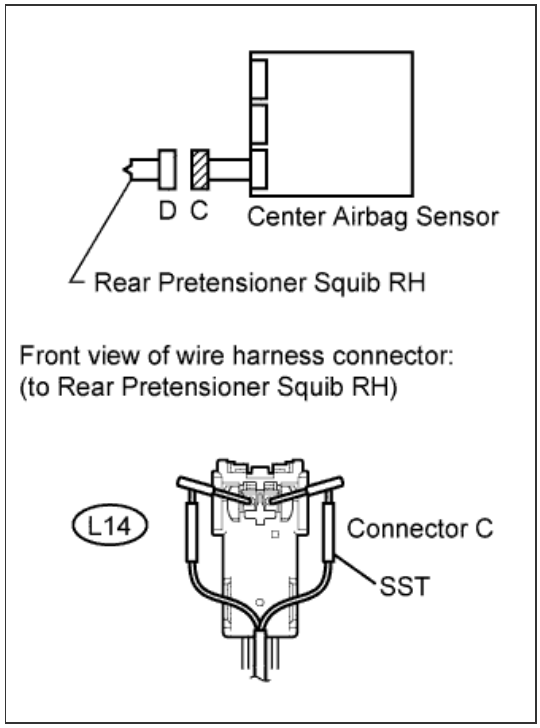

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs stored in the memory (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBL RH (Click here)

2.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the rear seat outer belt RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (REAR PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L14-1 (RR+) - Body ground	Engine switch on (IG)	Below 1 V
L14-2 (RR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	1 MΩ or higher
L14-1 (RR+) - Body ground	Always	1 MΩ or higher

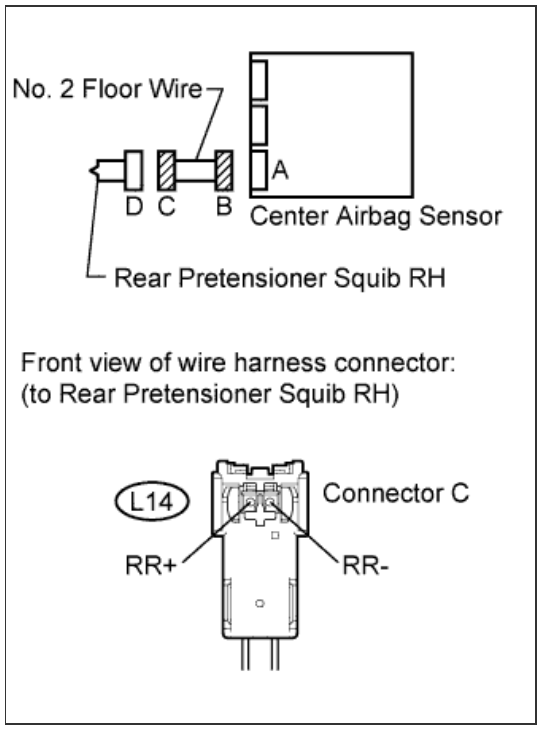

L14-2 (RR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

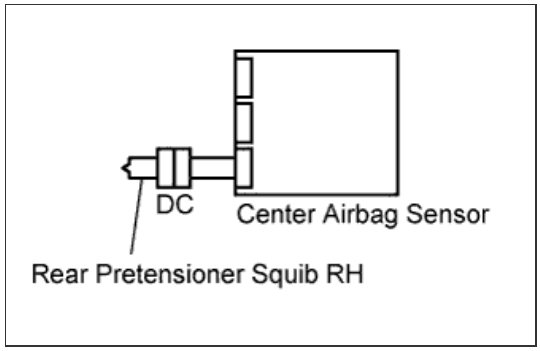

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBL (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1815/54 Short in Front Passenger Side Squib 2nd Step Circuit

DTC B1816/54 Open in Front Passenger Side Squib 2nd Step Circuit

DTC B1817/54 Short to GND in Front Passenger Side Squib 2nd Step Circuit

DTC B1818/54 Short to B+ in Front Passenger Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib 2nd step circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1815/54	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib 2nd step circuit during the primary check. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1816/54	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib 2nd step circuit for 2 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1817/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1818/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

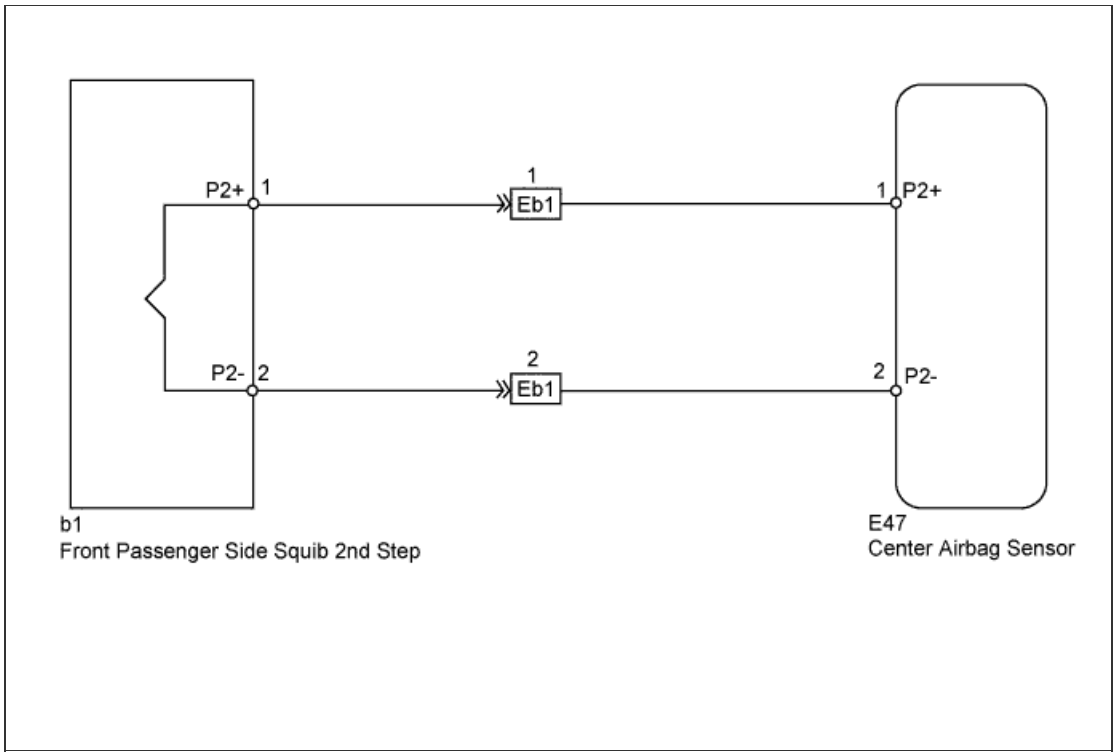

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB 2ND STEP)

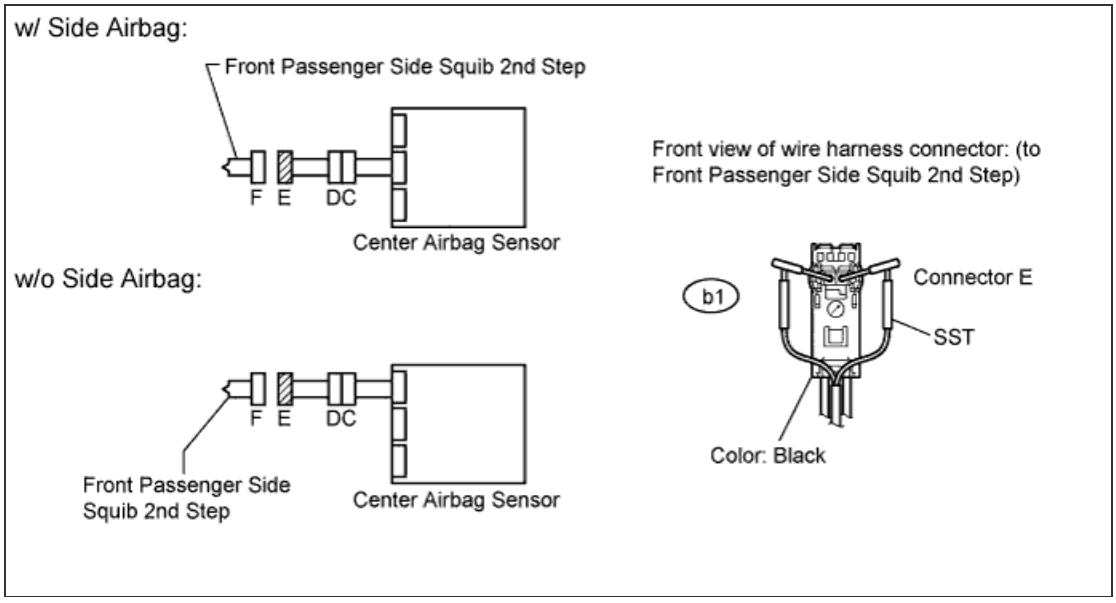

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib 2nd step) for measurement, as this may lead to a

serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB 2ND STEP CIRCUIT

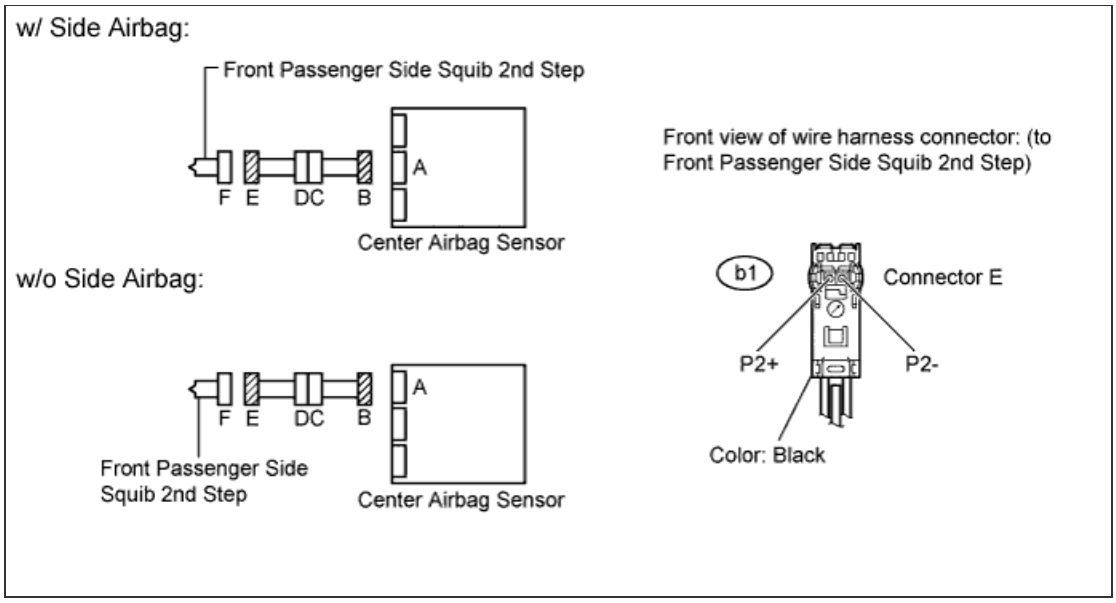

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b1-1 (P2+) - Body ground	Engine switch on (IG)	Below 1 V
b1-2 (P2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	1 MΩ or higher
b1-1 (P2+) - Body ground	Always	1 MΩ or higher
b1-2 (P2-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

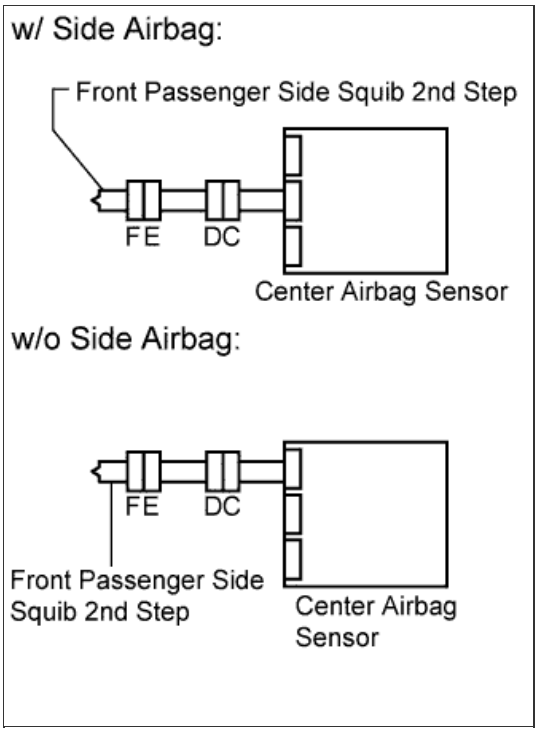


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

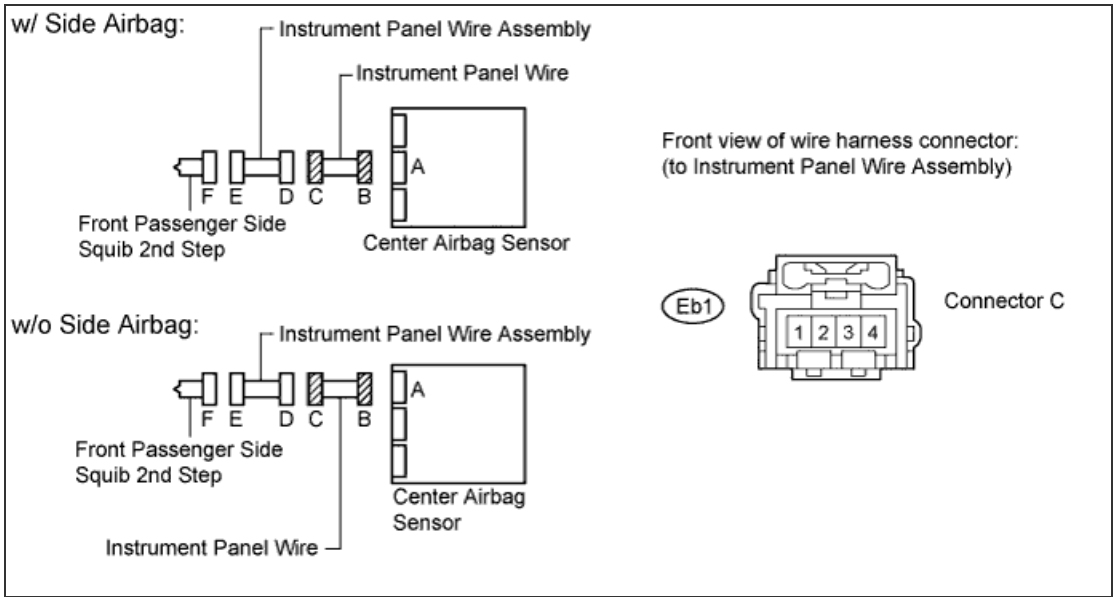

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-1 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-2 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	1 MΩ or higher
Eb1-1 - Body ground	Always	1 MΩ or higher
Eb1-2 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1920/77 Short in Rear Pretensioner Squib RH Circuit

DTC B1921/77 Open in Rear Pretensioner Squib RH Circuit

DTC B1922/77 Short to GND in Rear Pretensioner Squib RH Circuit

DTC B1923/77 Short to B+ in Rear Pretensioner Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib RH circuit consists of the center airbag sensor and the rear seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
Theses DTCs are stored when a malfunction is detected in the rear pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1920/77	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib RH circuit during the primary check. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1921/77	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib RH circuit for 2 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1922/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1923/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

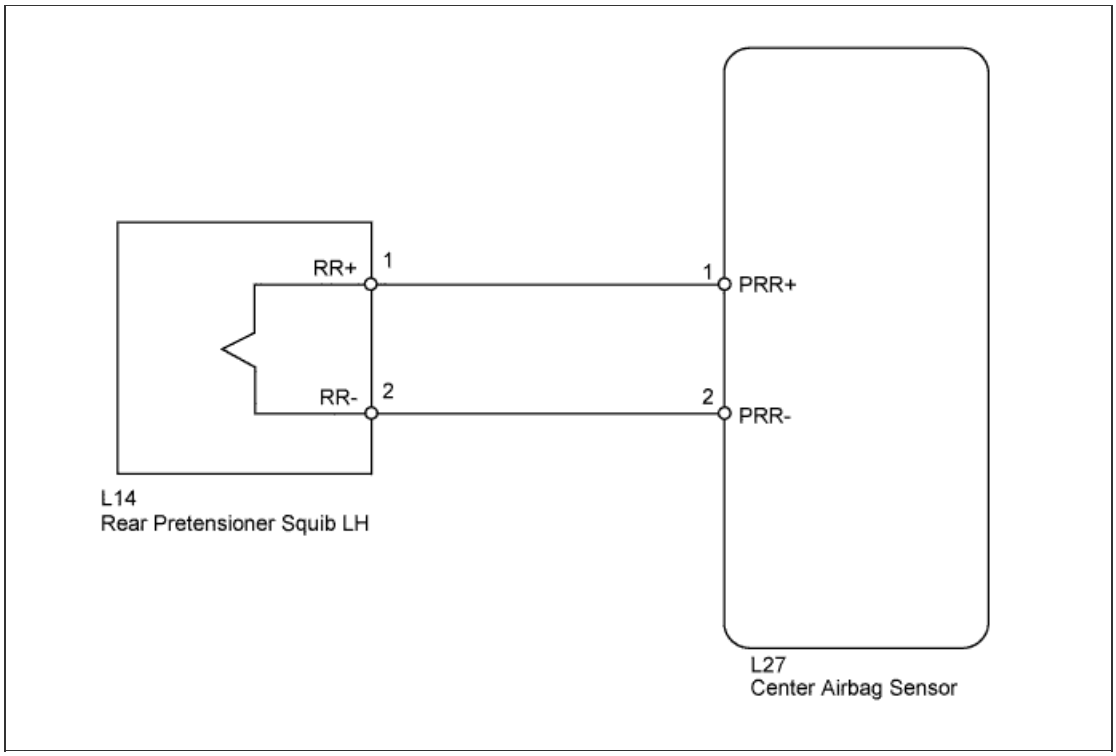

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT RH (REAR PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat outer belt RH (rear pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

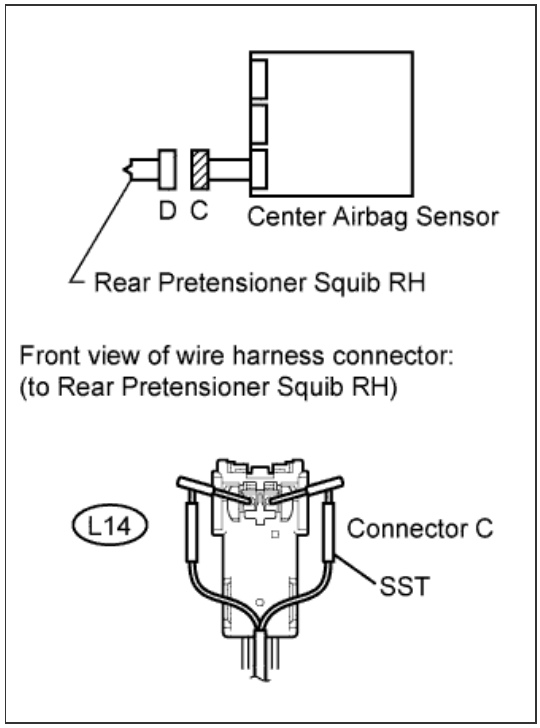

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs stored in the memory (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBL RH (Click here)

2.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the rear seat outer belt RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (REAR PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L14-1 (RR+) - Body ground	Engine switch on (IG)	Below 1 V
L14-2 (RR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	1 MΩ or higher
L14-1 (RR+) - Body ground	Always	1 MΩ or higher

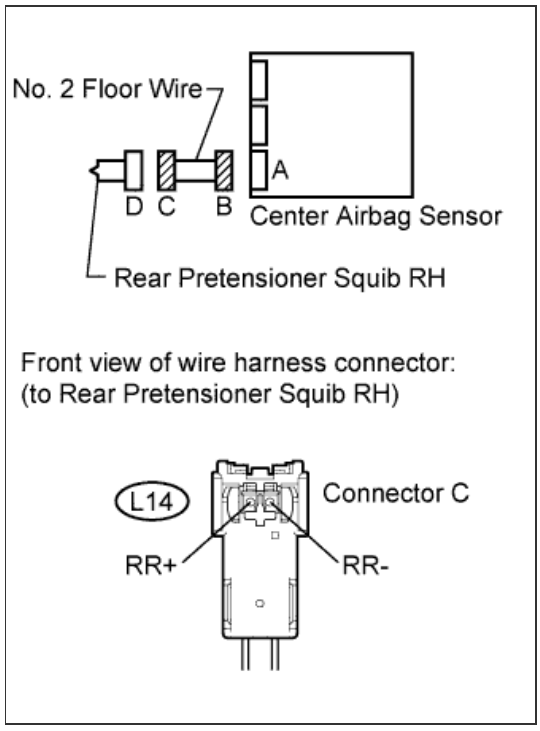

L14-2 (RR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

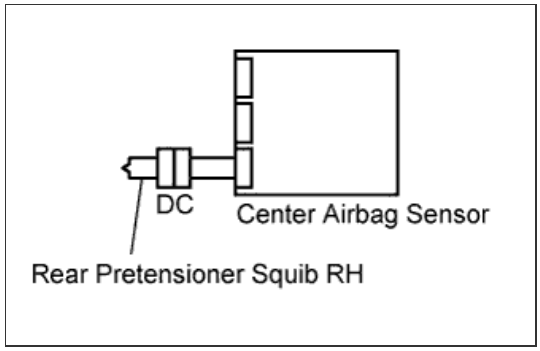

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBL (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1815/54 Short in Front Passenger Side Squib 2nd Step Circuit

DTC B1816/54 Open in Front Passenger Side Squib 2nd Step Circuit

DTC B1817/54 Short to GND in Front Passenger Side Squib 2nd Step Circuit

DTC B1818/54 Short to B+ in Front Passenger Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib 2nd step circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1815/54	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib 2nd step circuit during the primary check. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1816/54	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib 2nd step circuit for 2 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1817/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1818/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

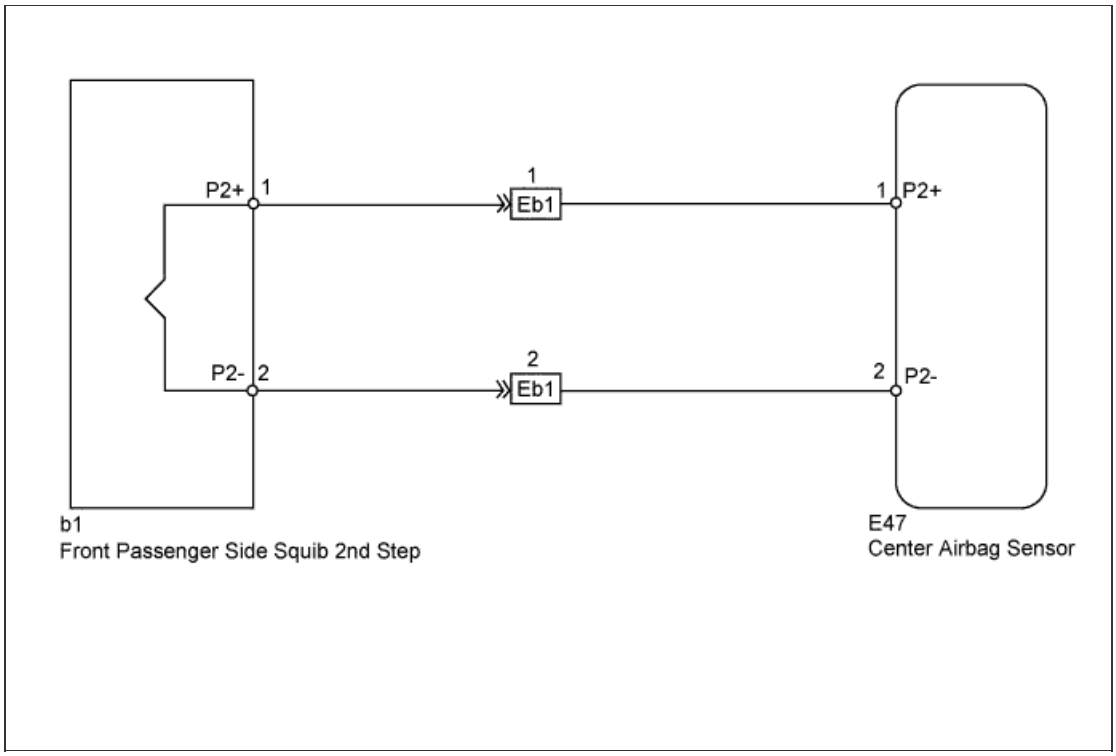

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB 2ND STEP)

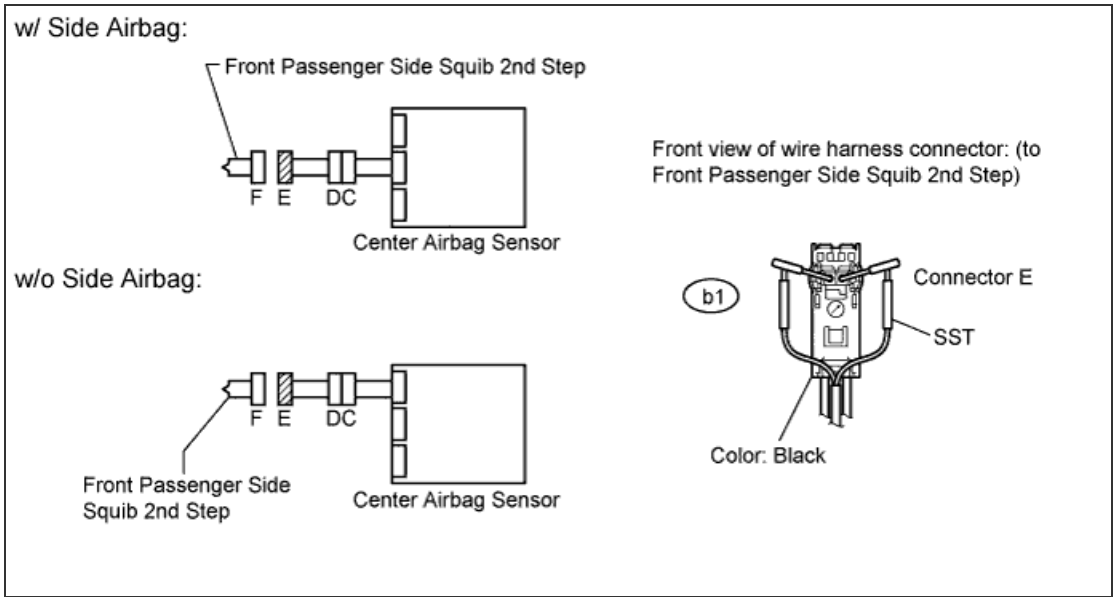

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib 2nd step) for measurement, as this may lead to a

serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB 2ND STEP CIRCUIT

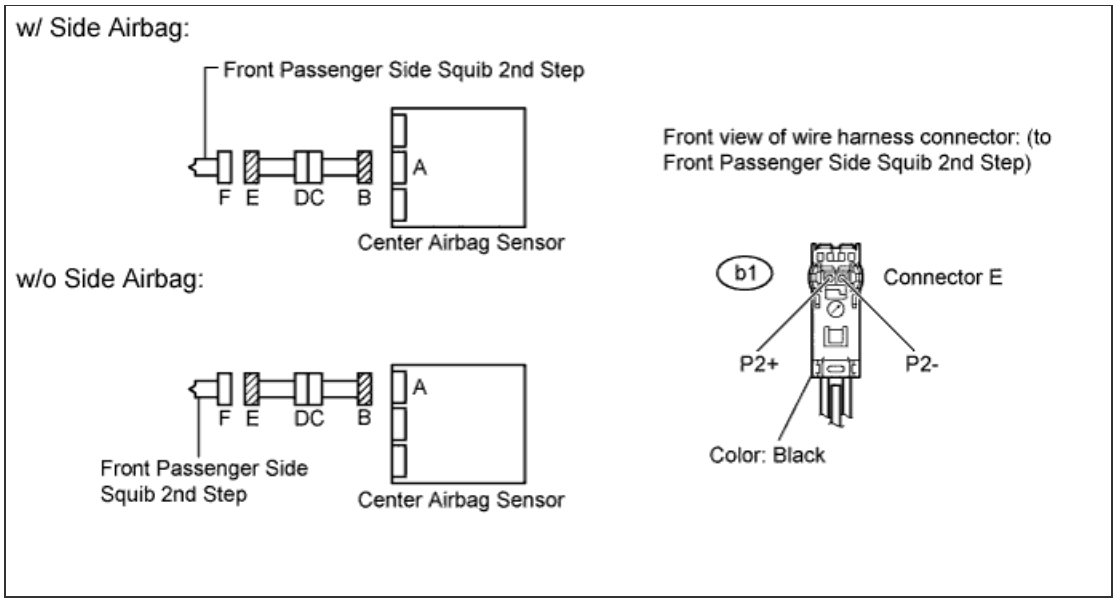

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b1-1 (P2+) - Body ground	Engine switch on (IG)	Below 1 V
b1-2 (P2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	1 MΩ or higher
b1-1 (P2+) - Body ground	Always	1 MΩ or higher
b1-2 (P2-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

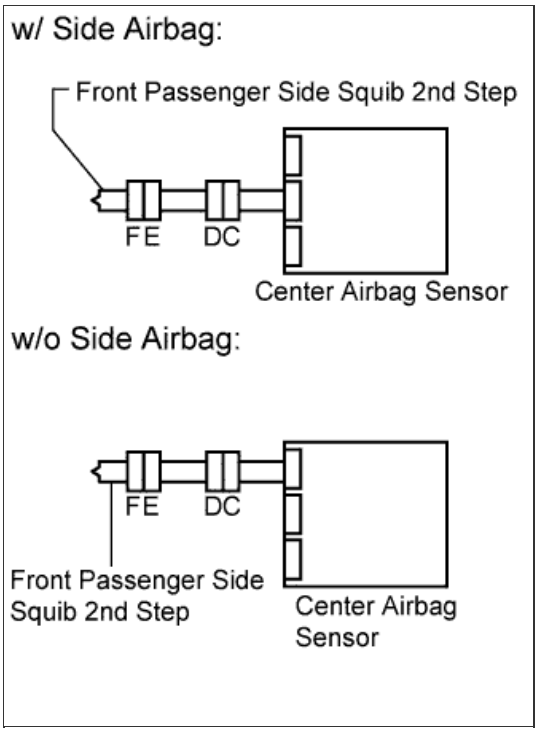


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

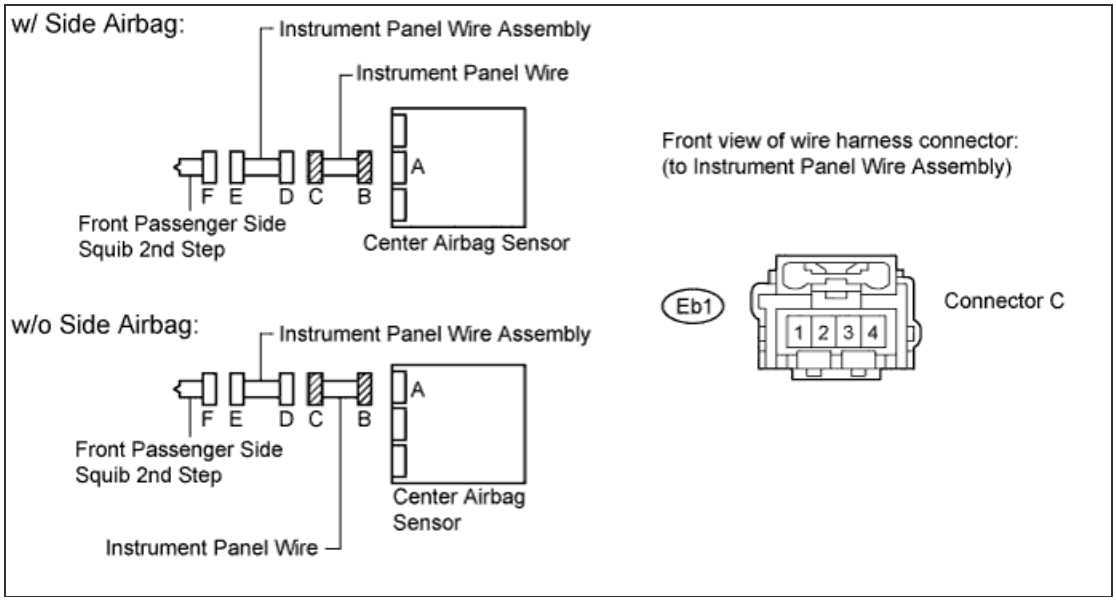

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-1 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-2 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	1 MΩ or higher
Eb1-1 - Body ground	Always	1 MΩ or higher
Eb1-2 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1920/77 Short in Rear Pretensioner Squib RH Circuit

DTC B1921/77 Open in Rear Pretensioner Squib RH Circuit

DTC B1922/77 Short to GND in Rear Pretensioner Squib RH Circuit

DTC B1923/77 Short to B+ in Rear Pretensioner Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib RH circuit consists of the center airbag sensor and the rear seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
Theses DTCs are stored when a malfunction is detected in the rear pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1920/77	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib RH circuit during the primary check. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1921/77	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib RH circuit for 2 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1922/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1923/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

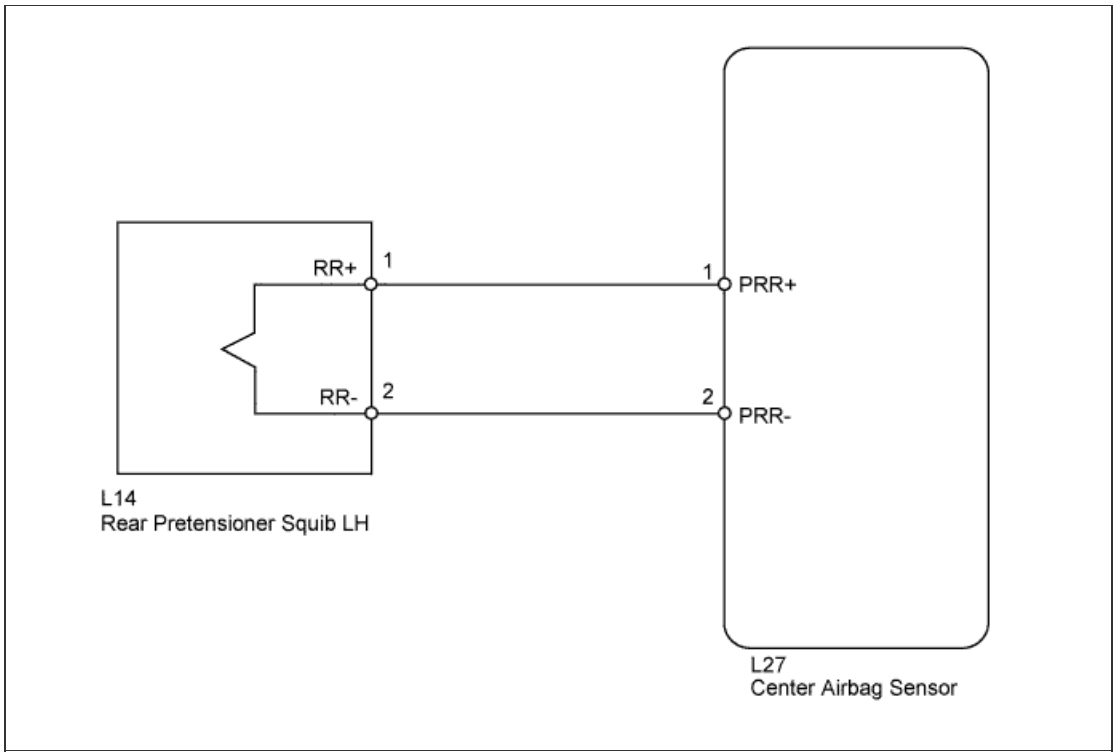

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT RH (REAR PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat outer belt RH (rear pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

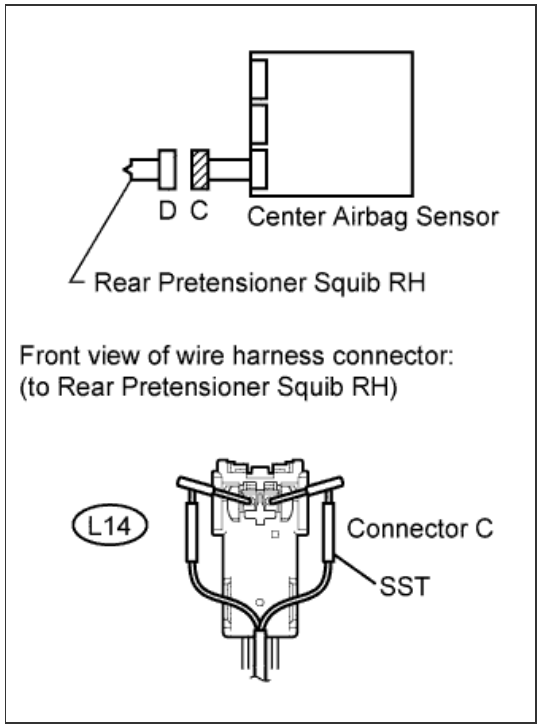

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs stored in the memory (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBL RH (Click here)

2.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the rear seat outer belt RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (REAR PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L14-1 (RR+) - Body ground	Engine switch on (IG)	Below 1 V
L14-2 (RR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	1 MΩ or higher
L14-1 (RR+) - Body ground	Always	1 MΩ or higher

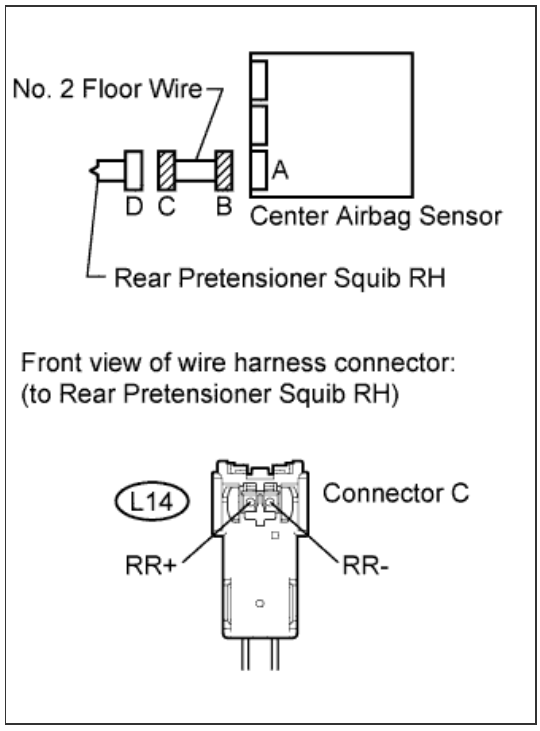

L14-2 (RR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

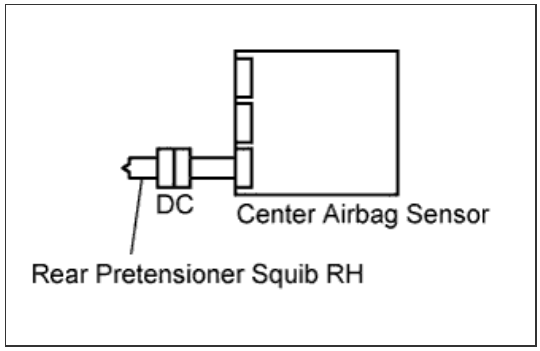

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBL (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1815/54 Short in Front Passenger Side Squib 2nd Step Circuit

DTC B1816/54 Open in Front Passenger Side Squib 2nd Step Circuit

DTC B1817/54 Short to GND in Front Passenger Side Squib 2nd Step Circuit

DTC B1818/54 Short to B+ in Front Passenger Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib 2nd step circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1815/54	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib 2nd step circuit during the primary check. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1816/54	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib 2nd step circuit for 2 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1817/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1818/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

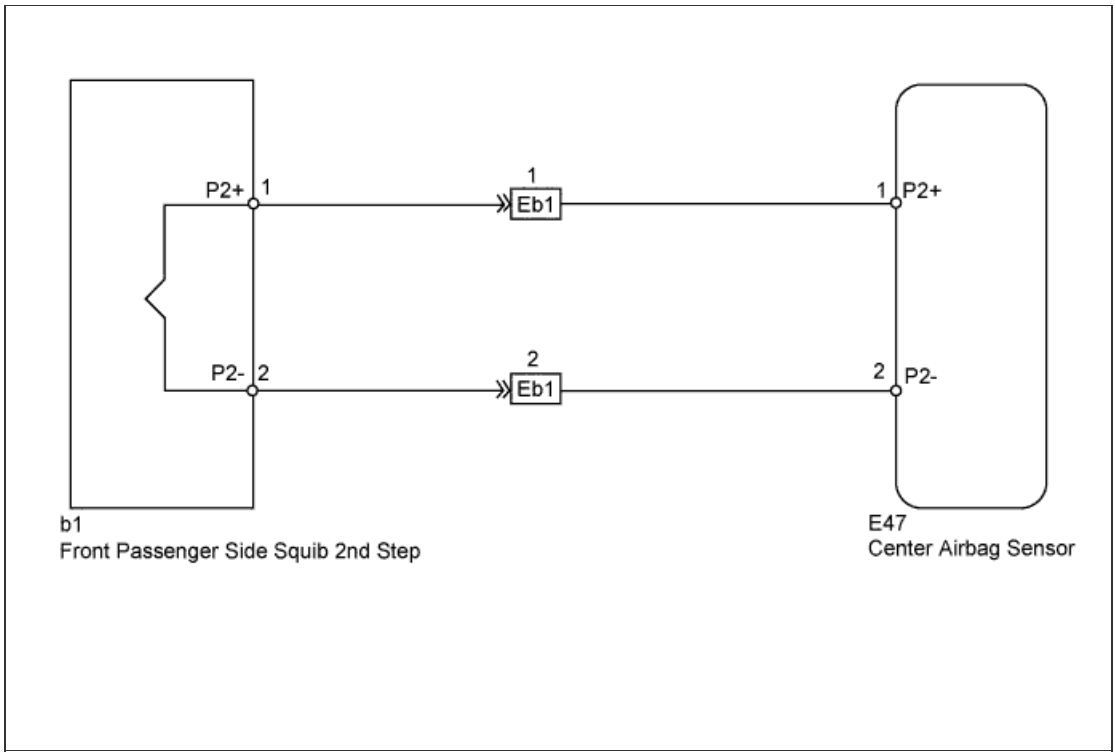

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB 2ND STEP)

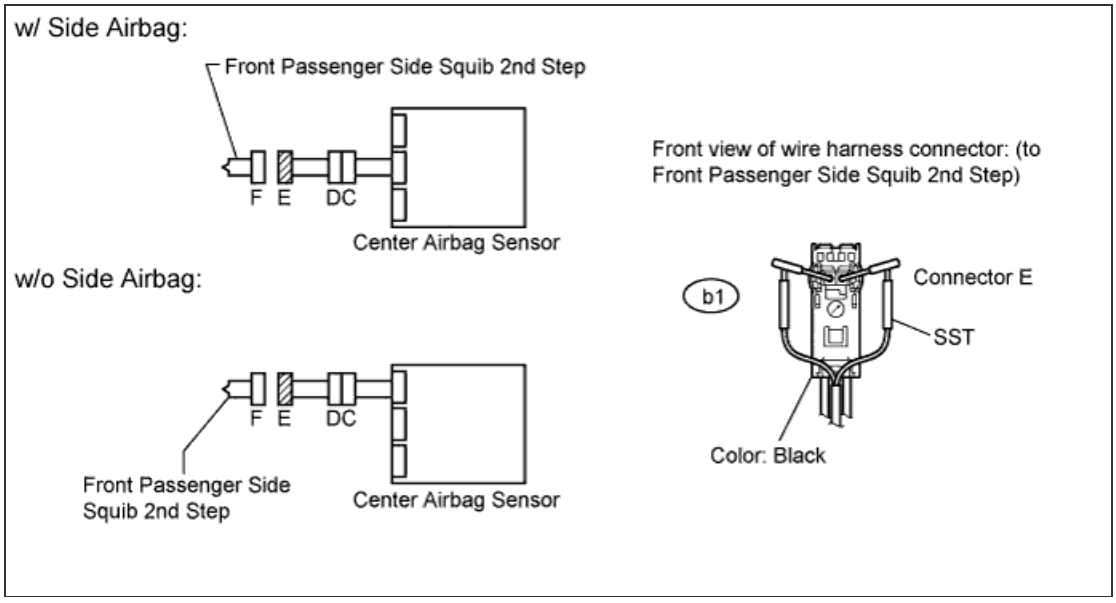

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib 2nd step) for measurement, as this may lead to a

serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB 2ND STEP CIRCUIT

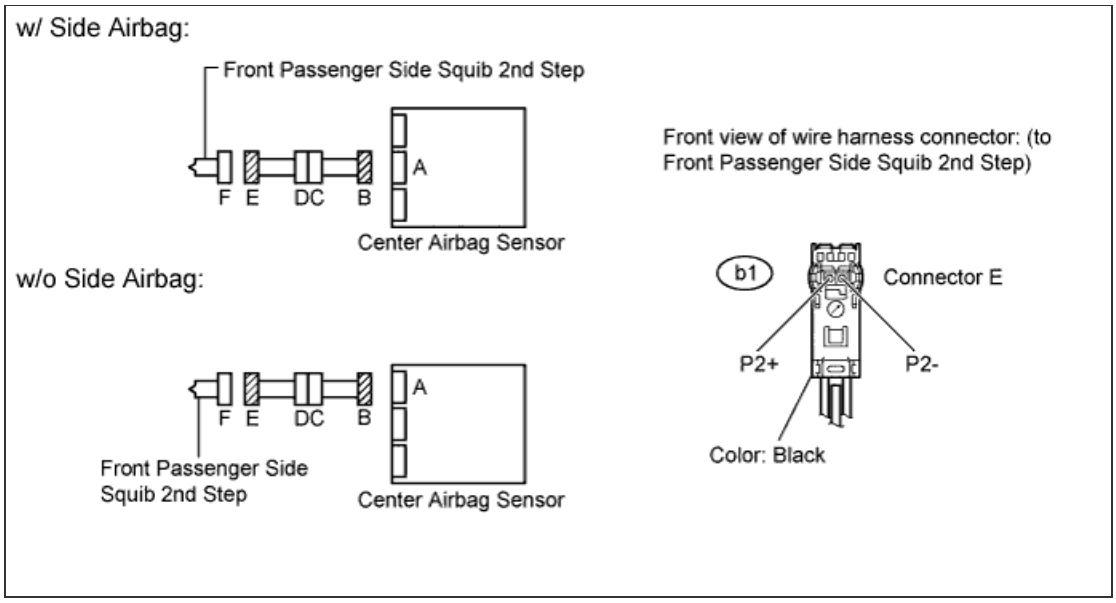

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b1-1 (P2+) - Body ground	Engine switch on (IG)	Below 1 V
b1-2 (P2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	1 MΩ or higher
b1-1 (P2+) - Body ground	Always	1 MΩ or higher
b1-2 (P2-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

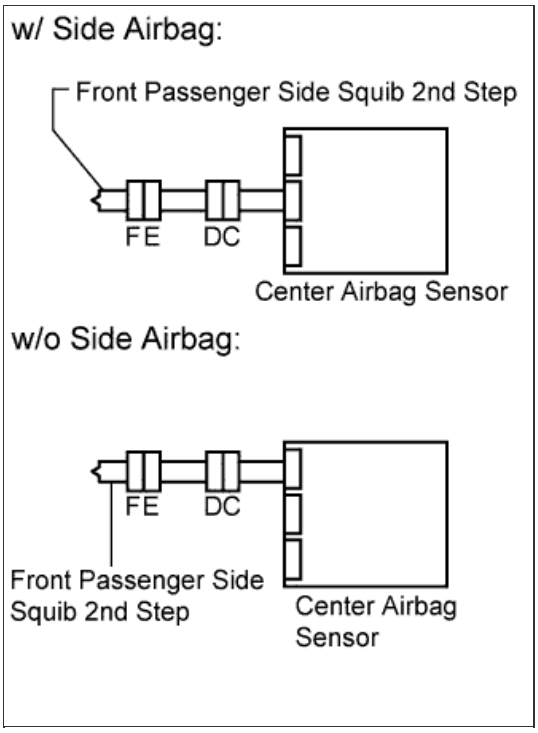


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

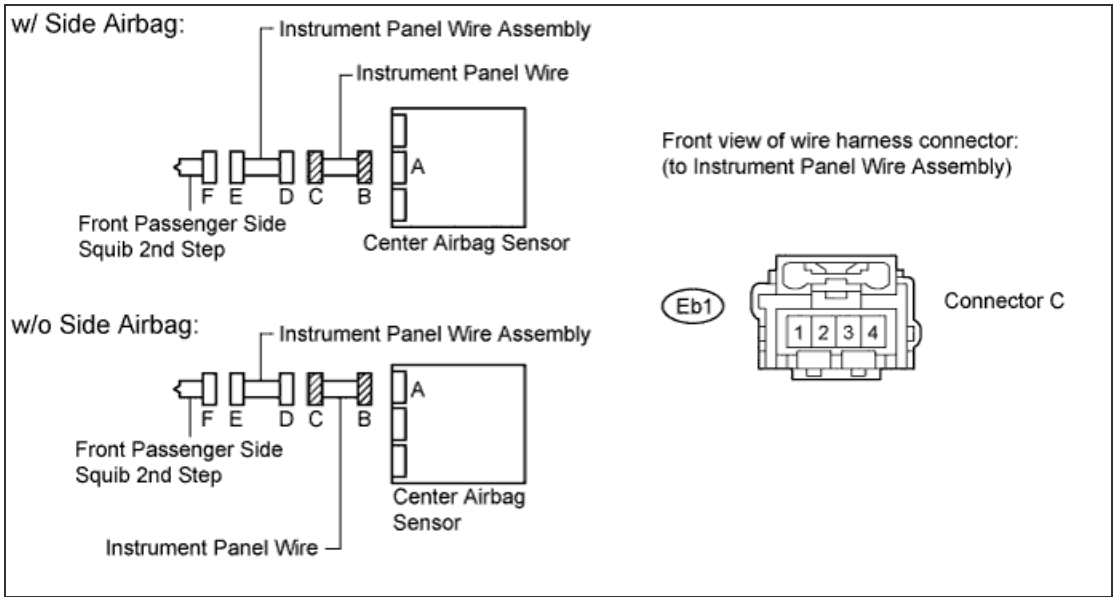

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-1 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-2 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	1 MΩ or higher
Eb1-1 - Body ground	Always	1 MΩ or higher
Eb1-2 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1920/77 Short in Rear Pretensioner Squib RH Circuit

DTC B1921/77 Open in Rear Pretensioner Squib RH Circuit

DTC B1922/77 Short to GND in Rear Pretensioner Squib RH Circuit

DTC B1923/77 Short to B+ in Rear Pretensioner Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib RH circuit consists of the center airbag sensor and the rear seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
Theses DTCs are stored when a malfunction is detected in the rear pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1920/77	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib RH circuit during the primary check. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1921/77	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib RH circuit for 2 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1922/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1923/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

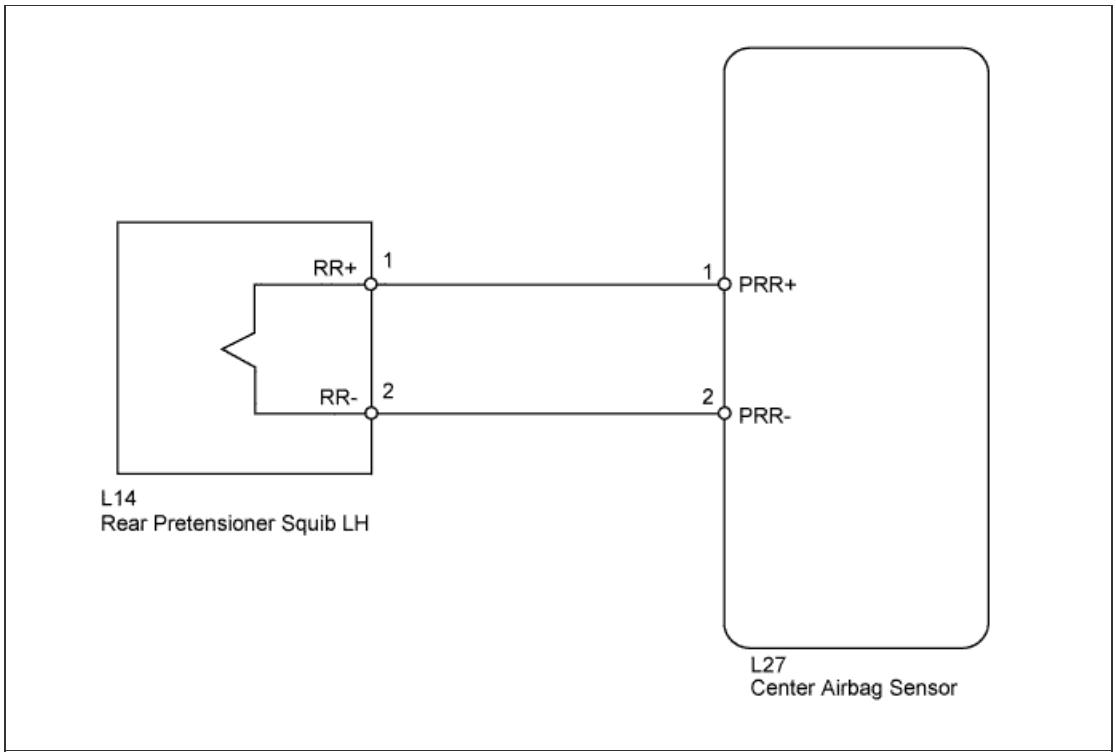

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT RH (REAR PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat outer belt RH (rear pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

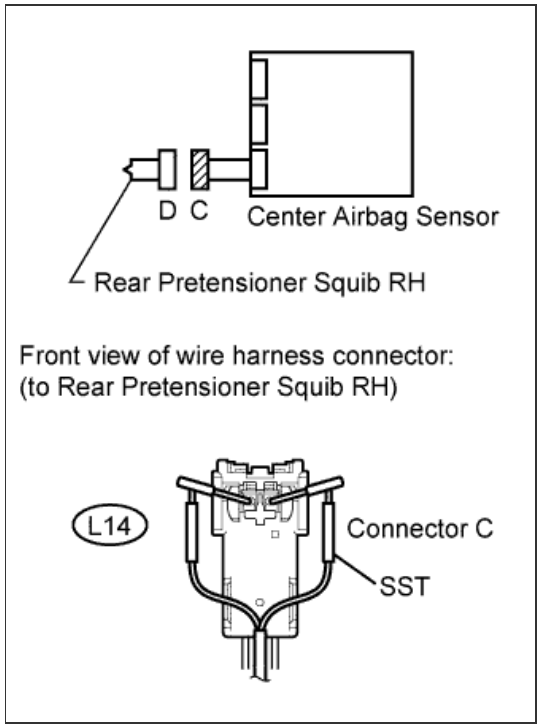

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs stored in the memory (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBL RH (Click here)

2.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the rear seat outer belt RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (REAR PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L14-1 (RR+) - Body ground	Engine switch on (IG)	Below 1 V
L14-2 (RR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	1 MΩ or higher
L14-1 (RR+) - Body ground	Always	1 MΩ or higher

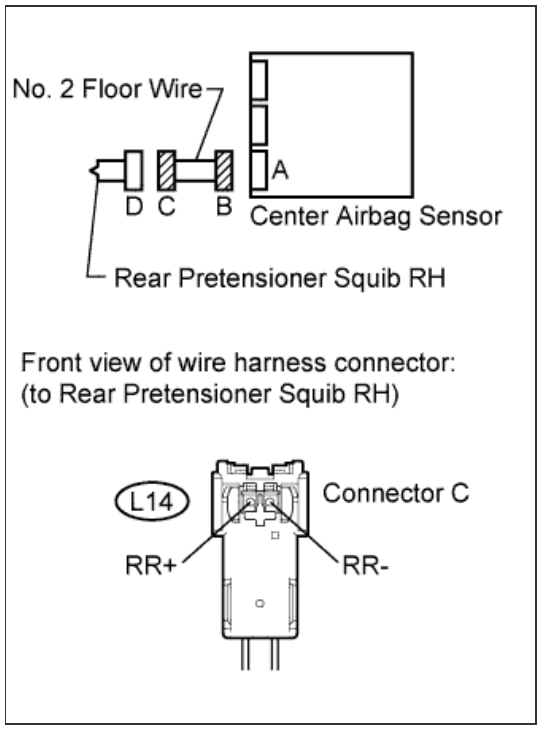

L14-2 (RR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

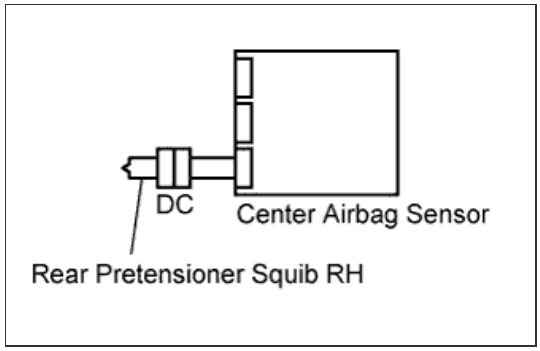

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBL (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1815/54 Short in Front Passenger Side Squib 2nd Step Circuit

DTC B1816/54 Open in Front Passenger Side Squib 2nd Step Circuit

DTC B1817/54 Short to GND in Front Passenger Side Squib 2nd Step Circuit

DTC B1818/54 Short to B+ in Front Passenger Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib 2nd step circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1815/54	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib 2nd step circuit during the primary check. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1816/54	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib 2nd step circuit for 2 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1817/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1818/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

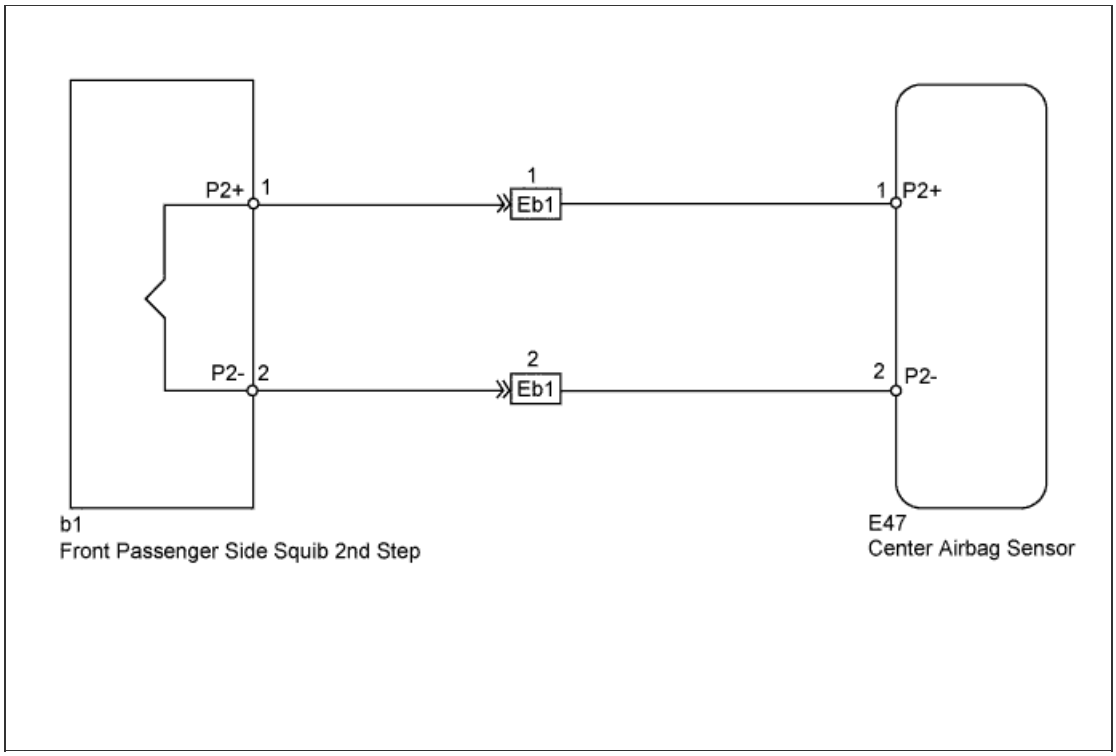

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB 2ND STEP)

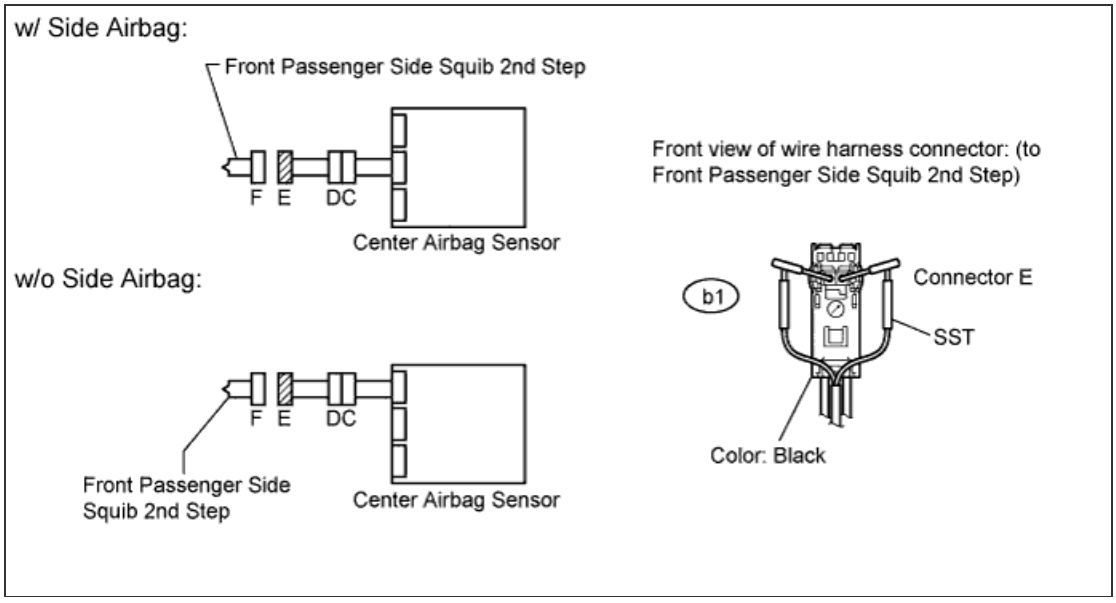

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib 2nd step) for measurement, as this may lead to a

serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB 2ND STEP CIRCUIT

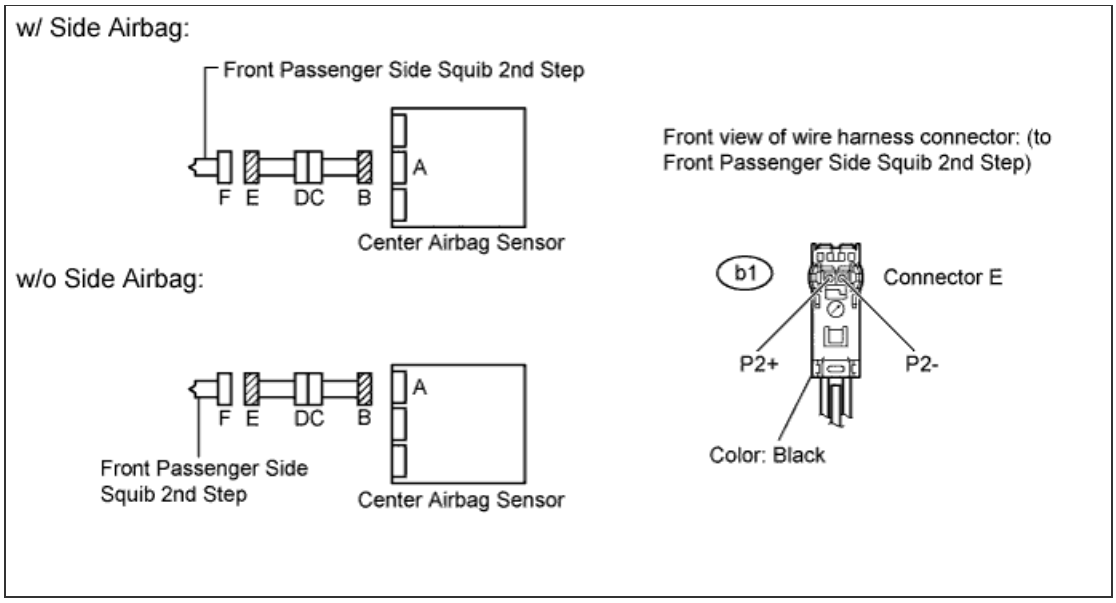

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b1-1 (P2+) - Body ground	Engine switch on (IG)	Below 1 V
b1-2 (P2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	1 MΩ or higher
b1-1 (P2+) - Body ground	Always	1 MΩ or higher
b1-2 (P2-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

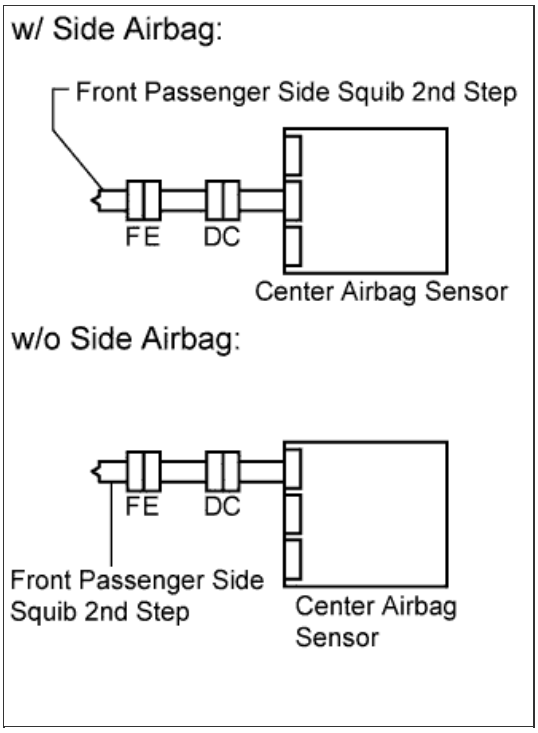


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

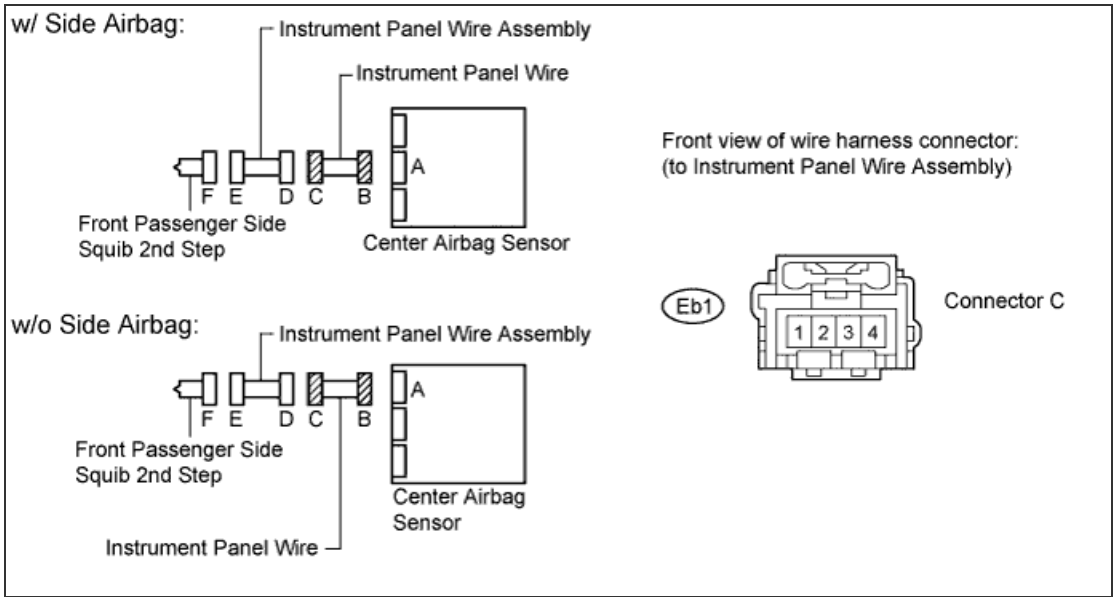

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-1 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-2 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	1 MΩ or higher
Eb1-1 - Body ground	Always	1 MΩ or higher
Eb1-2 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1920/77 Short in Rear Pretensioner Squib RH Circuit

DTC B1921/77 Open in Rear Pretensioner Squib RH Circuit

DTC B1922/77 Short to GND in Rear Pretensioner Squib RH Circuit

DTC B1923/77 Short to B+ in Rear Pretensioner Squib RH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib RH circuit consists of the center airbag sensor and the rear seat outer belt RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
Theses DTCs are stored when a malfunction is detected in the rear pretensioner squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1920/77	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib RH circuit during the primary check. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1921/77	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib RH circuit for 2 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1922/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly
B1923/77	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib RH circuit for 0.5 seconds. • A rear pretensioner squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Rear seat outer belt assembly RH (Rear pretensioner squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

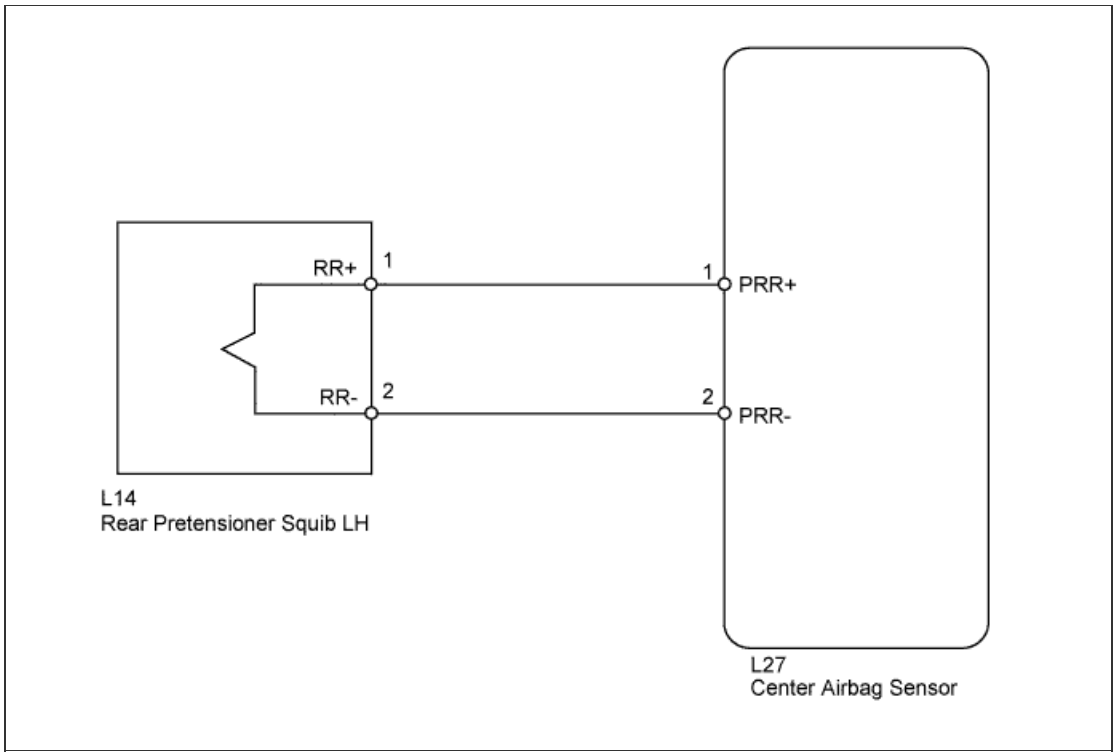

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT RH (REAR PRETENSIONER SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt RH.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the rear seat outer belt RH (rear pretensioner squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

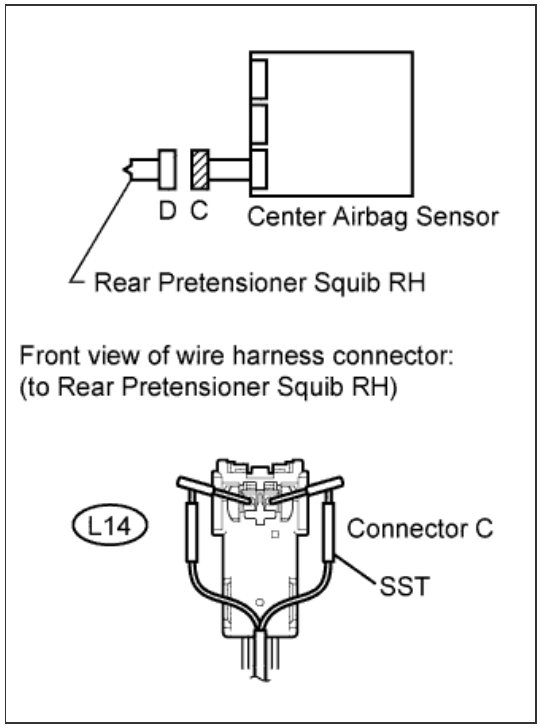

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs stored in the memory (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBL RH (Click here)

2.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the No. 2 floor wire connector (on the rear seat outer belt RH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not deformed or damaged.

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK NO. 2 FLOOR WIRE (REAR PRETENSIONER SQUIB RH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
L14-1 (RR+) - Body ground	Engine switch on (IG)	Below 1 V
L14-2 (RR-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
L14-1 (RR+) - L14-2 (RR-)	Always	1 MΩ or higher
L14-1 (RR+) - Body ground	Always	1 MΩ or higher

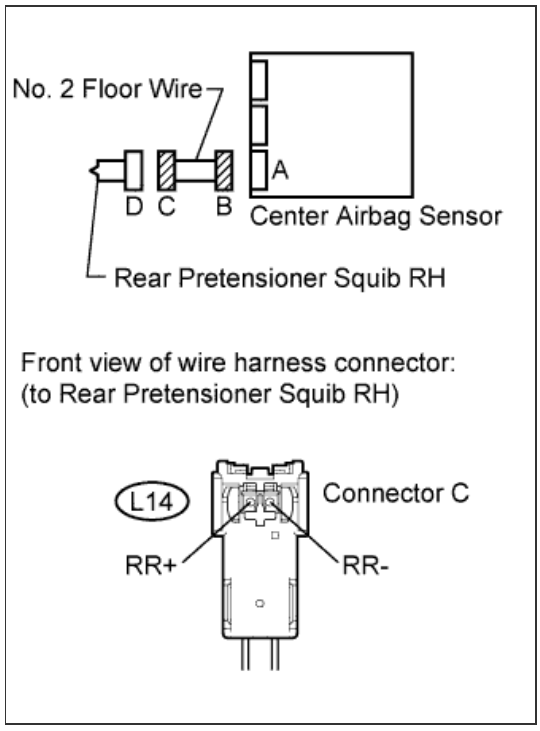

L14-2 (RR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 90 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs stored in the memory (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

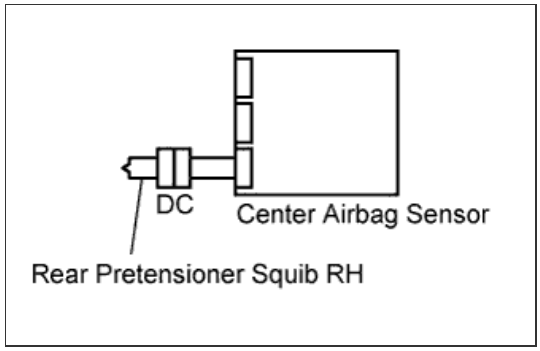

OK:

DTC B1920, B1921, B1922 or B1923 is not output.

HINT:

Codes other than DTC B1920, B1921, B1922 and B1923 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBL (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1815/54 Short in Front Passenger Side Squib 2nd Step Circuit

DTC B1816/54 Open in Front Passenger Side Squib 2nd Step Circuit

DTC B1817/54 Short to GND in Front Passenger Side Squib 2nd Step Circuit

DTC B1818/54 Short to B+ in Front Passenger Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib 2nd step circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1815/54	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib 2nd step circuit during the primary check. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1816/54	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib 2nd step circuit for 2 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1817/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1818/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

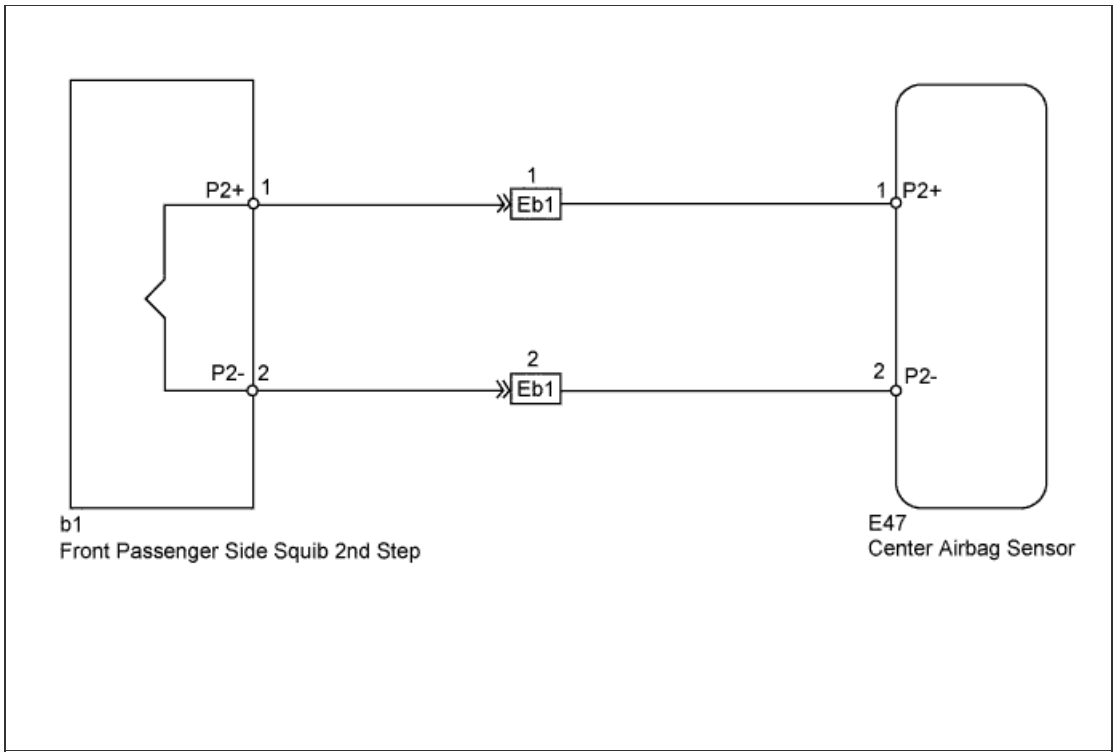

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB 2ND STEP)

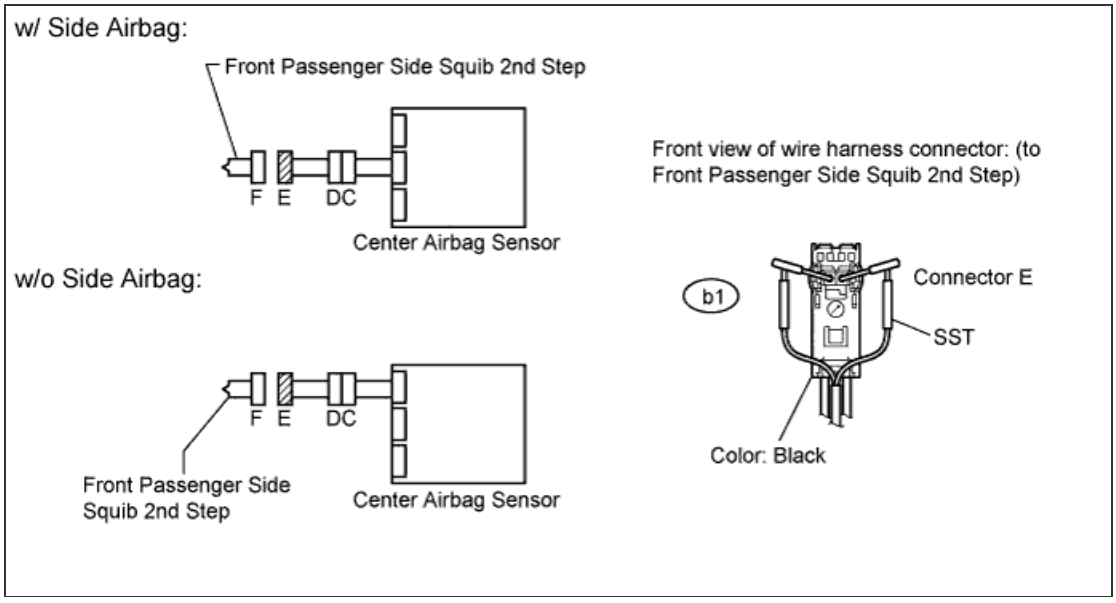

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib 2nd step) for measurement, as this may lead to a

serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB 2ND STEP CIRCUIT

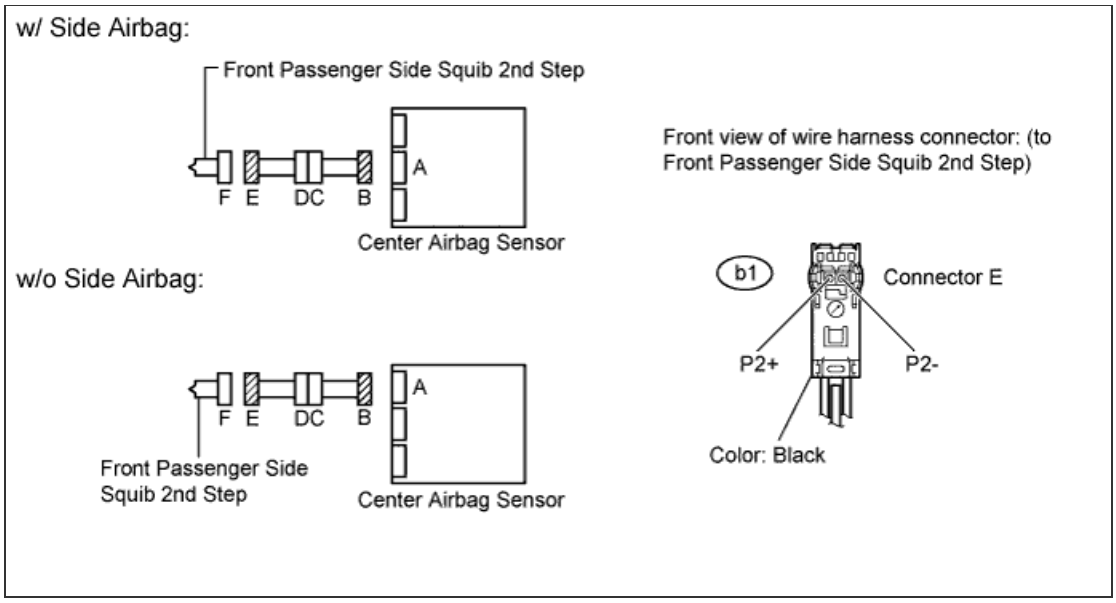

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b1-1 (P2+) - Body ground	Engine switch on (IG)	Below 1 V
b1-2 (P2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	1 MΩ or higher
b1-1 (P2+) - Body ground	Always	1 MΩ or higher
b1-2 (P2-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

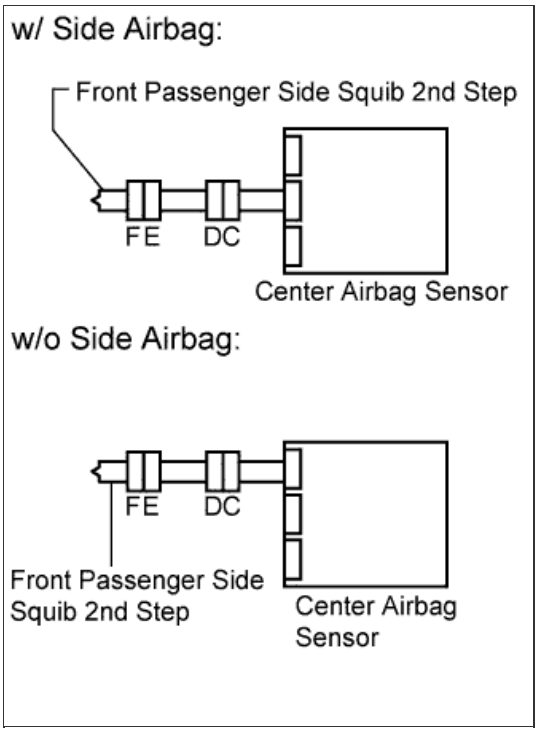


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

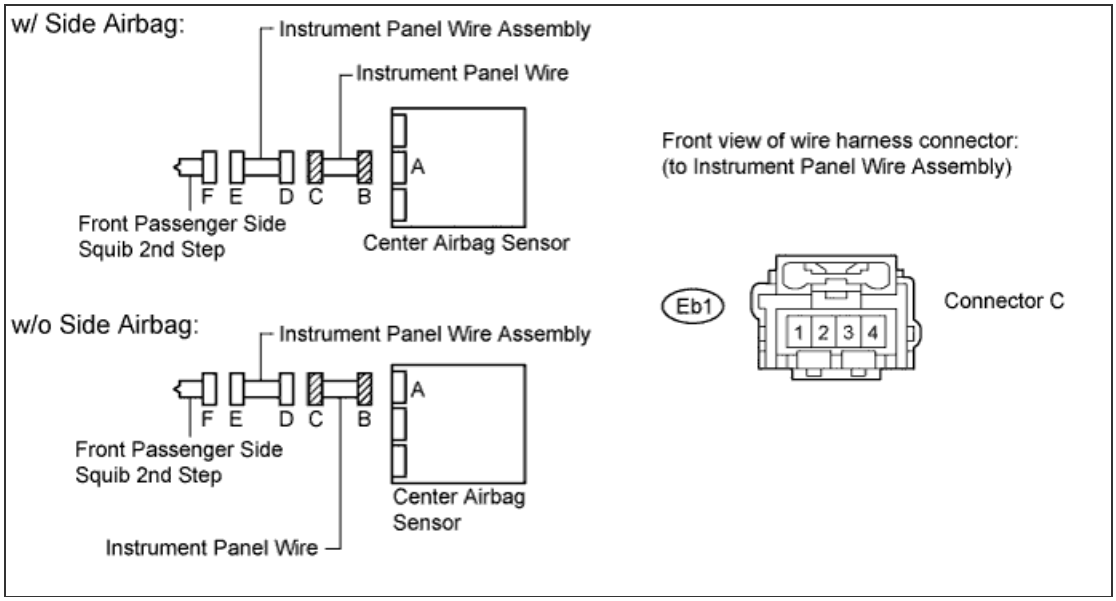

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-1 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-2 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	1 MΩ or higher
Eb1-1 - Body ground	Always	1 MΩ or higher
Eb1-2 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1925/78 Short in Rear Pretensioner Squib LH Circuit

DTC B1926/78 Open in Rear Pretensioner Squib LH Circuit

DTC B1927/78 Short to GND in Rear Pretensioner Squib LH Circuit

DTC B1928/78 Short to B+ in Rear Pretensioner Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib LH circuit consists of the center airbag sensor and the rear seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1925/78	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib LH circuit during the primary check. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1926/78	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib LH circuit for 2 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1927/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1928/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (rear pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

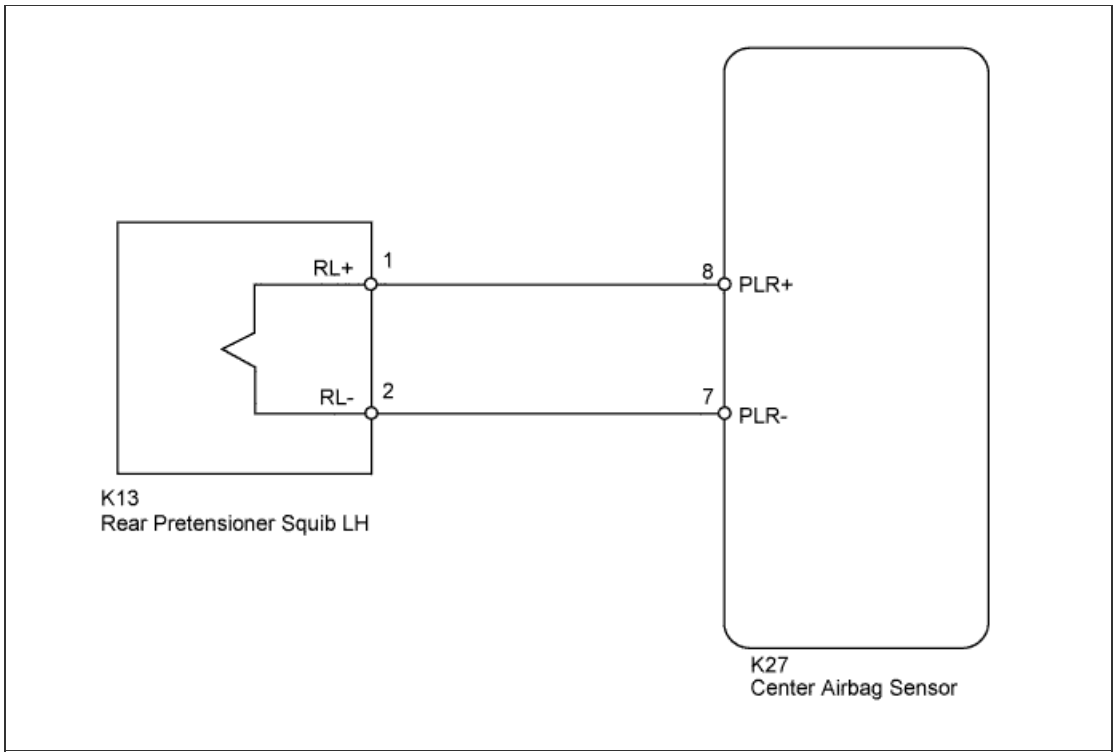

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT LH (REAR PRETENSIONER SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt LH.


d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the rear seat outer belt LH (rear pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

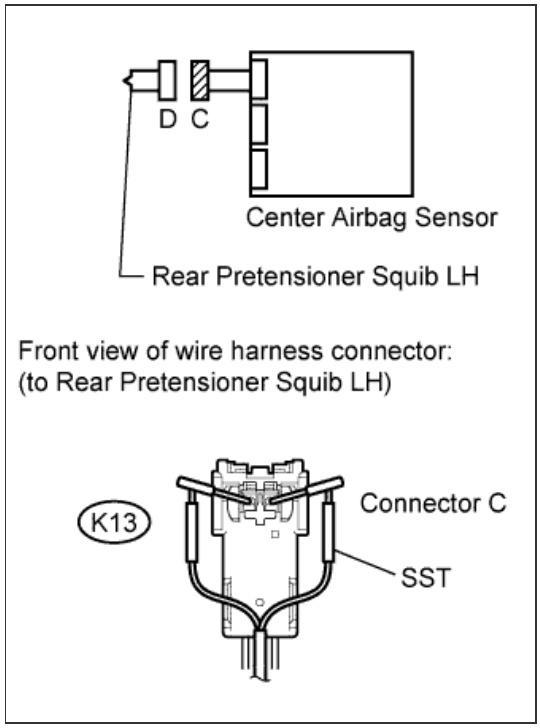

SST

09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 and B1928 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connector (on the rear seat outer belt LH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (REAR PRETENSIONER SQUIB LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K13-1 (RL+) - Body ground	Engine switch on (IG)	Below 1 V
K13-2 (RL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	1 MΩ or higher
K13-1 (RL+) - Body ground	Always	1 MΩ or higher
K13-2 (RL-) - Body ground	Always	1 MΩ or higher

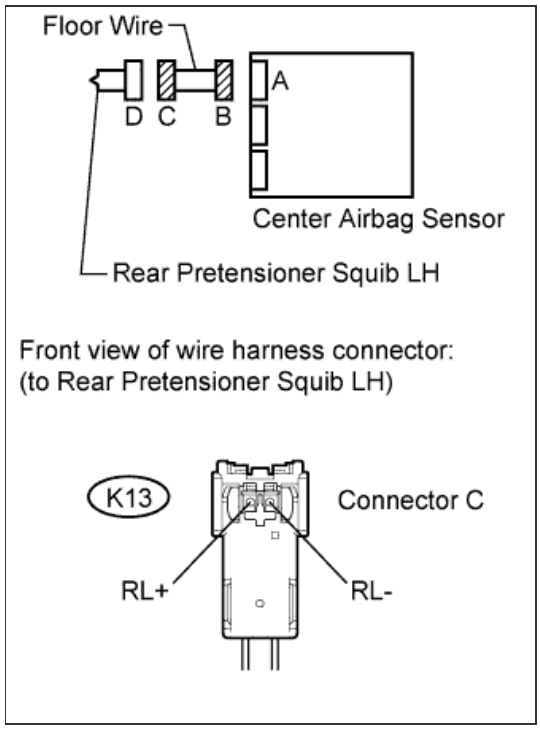

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

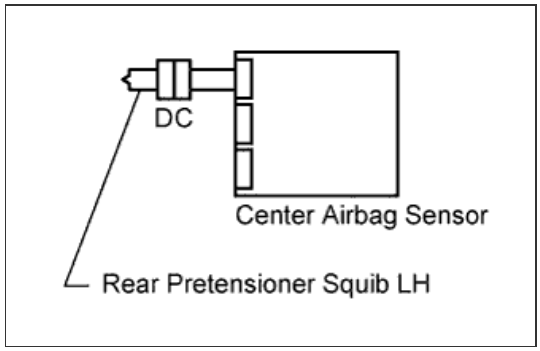

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 or B1928 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1815/54 Short in Front Passenger Side Squib 2nd Step Circuit

DTC B1816/54 Open in Front Passenger Side Squib 2nd Step Circuit

DTC B1817/54 Short to GND in Front Passenger Side Squib 2nd Step Circuit

DTC B1818/54 Short to B+ in Front Passenger Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib 2nd step circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1815/54	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib 2nd step circuit during the primary check. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1816/54	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib 2nd step circuit for 2 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1817/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1818/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

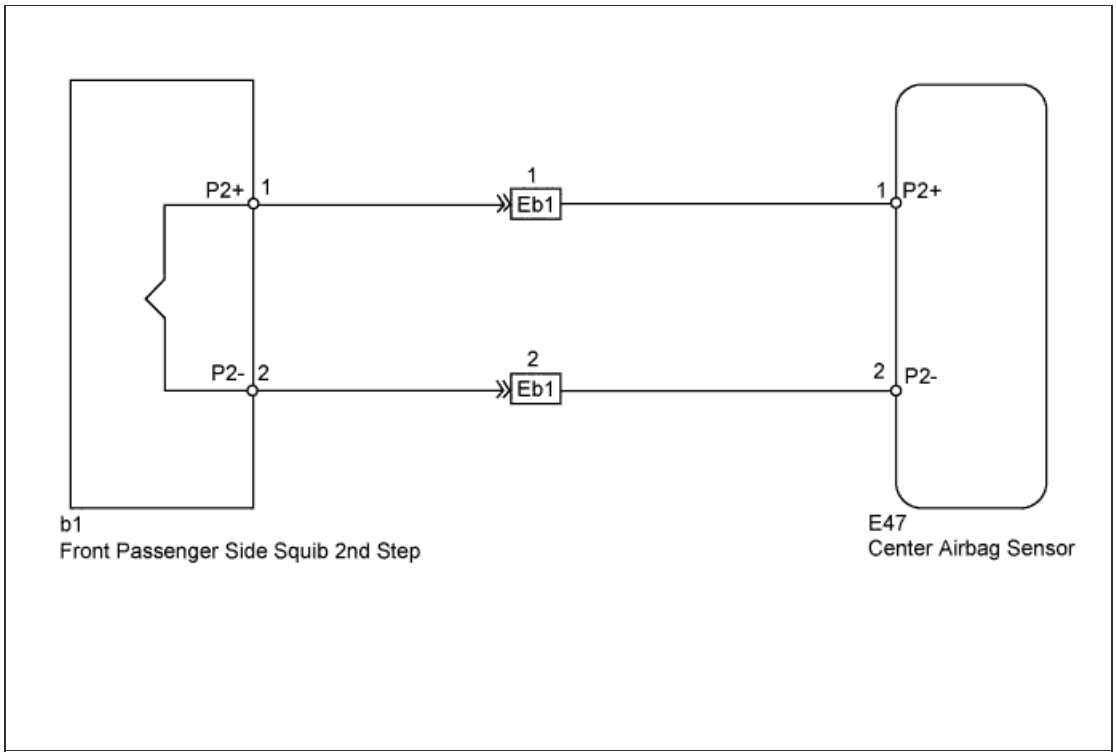

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB 2ND STEP)

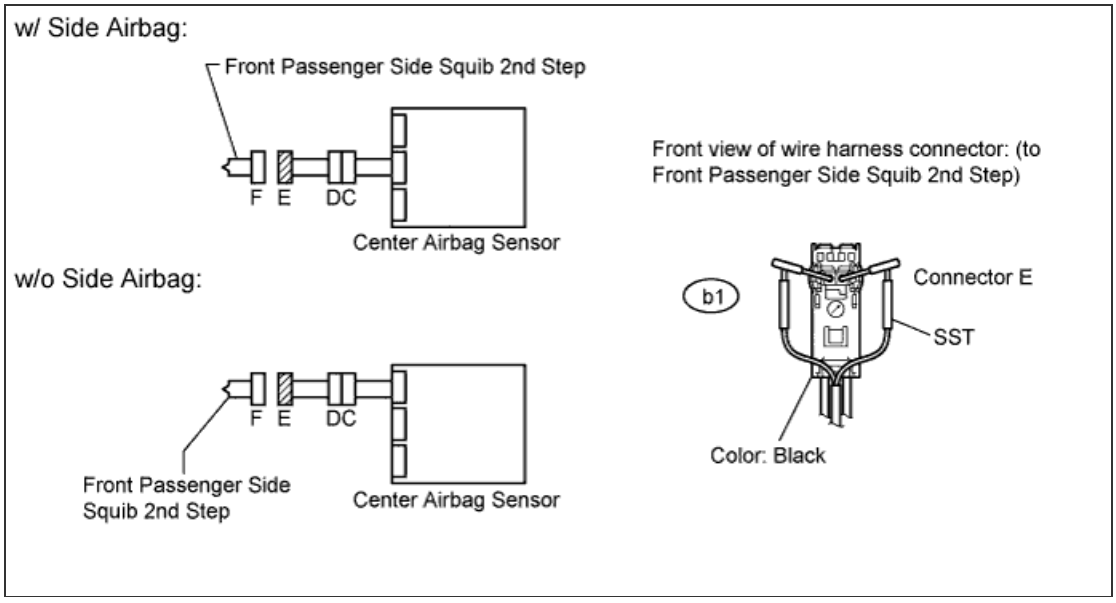

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib 2nd step) for measurement, as this may lead to a

serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB 2ND STEP CIRCUIT

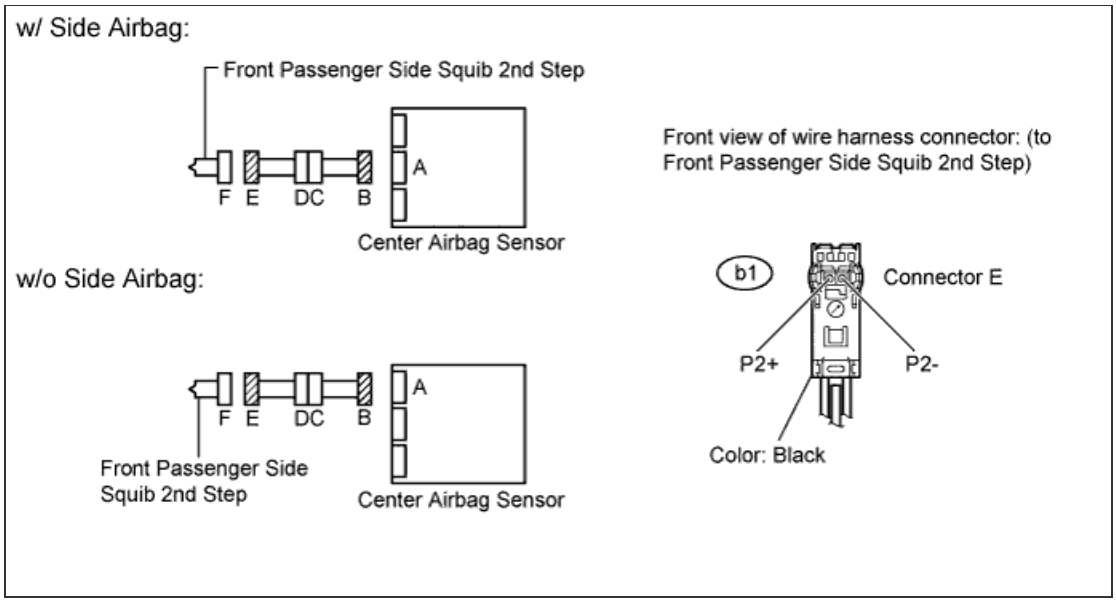

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b1-1 (P2+) - Body ground	Engine switch on (IG)	Below 1 V
b1-2 (P2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	1 MΩ or higher
b1-1 (P2+) - Body ground	Always	1 MΩ or higher
b1-2 (P2-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

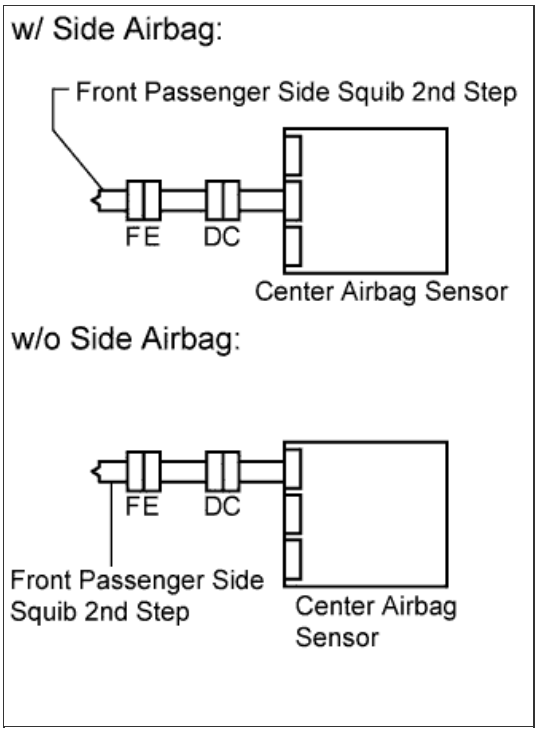


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

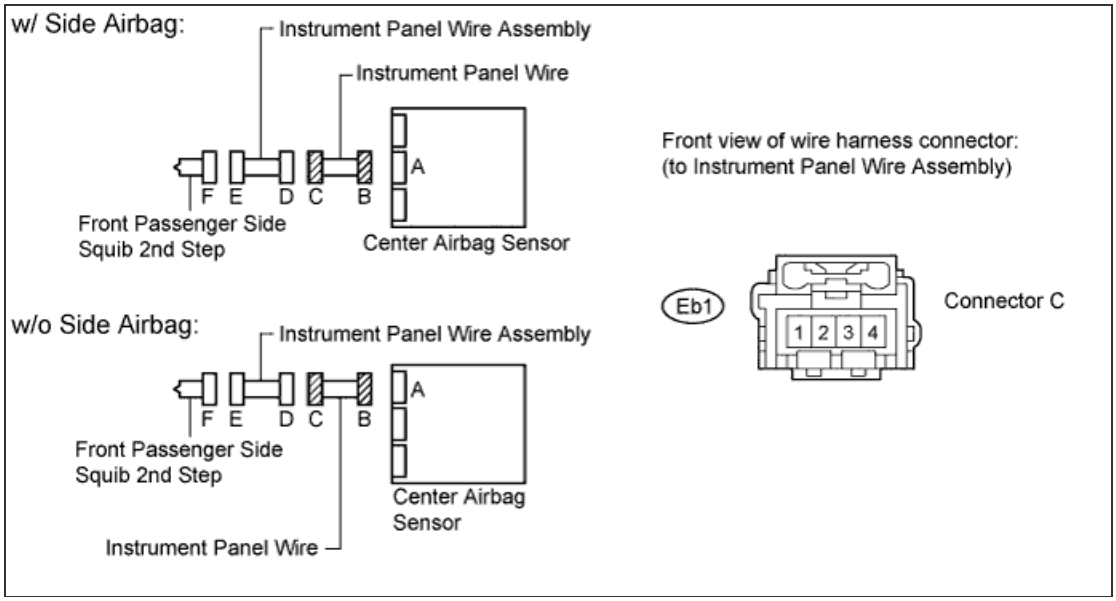

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-1 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-2 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	1 MΩ or higher
Eb1-1 - Body ground	Always	1 MΩ or higher
Eb1-2 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1925/78 Short in Rear Pretensioner Squib LH Circuit

DTC B1926/78 Open in Rear Pretensioner Squib LH Circuit

DTC B1927/78 Short to GND in Rear Pretensioner Squib LH Circuit

DTC B1928/78 Short to B+ in Rear Pretensioner Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib LH circuit consists of the center airbag sensor and the rear seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1925/78	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib LH circuit during the primary check. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1926/78	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib LH circuit for 2 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1927/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1928/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (rear pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

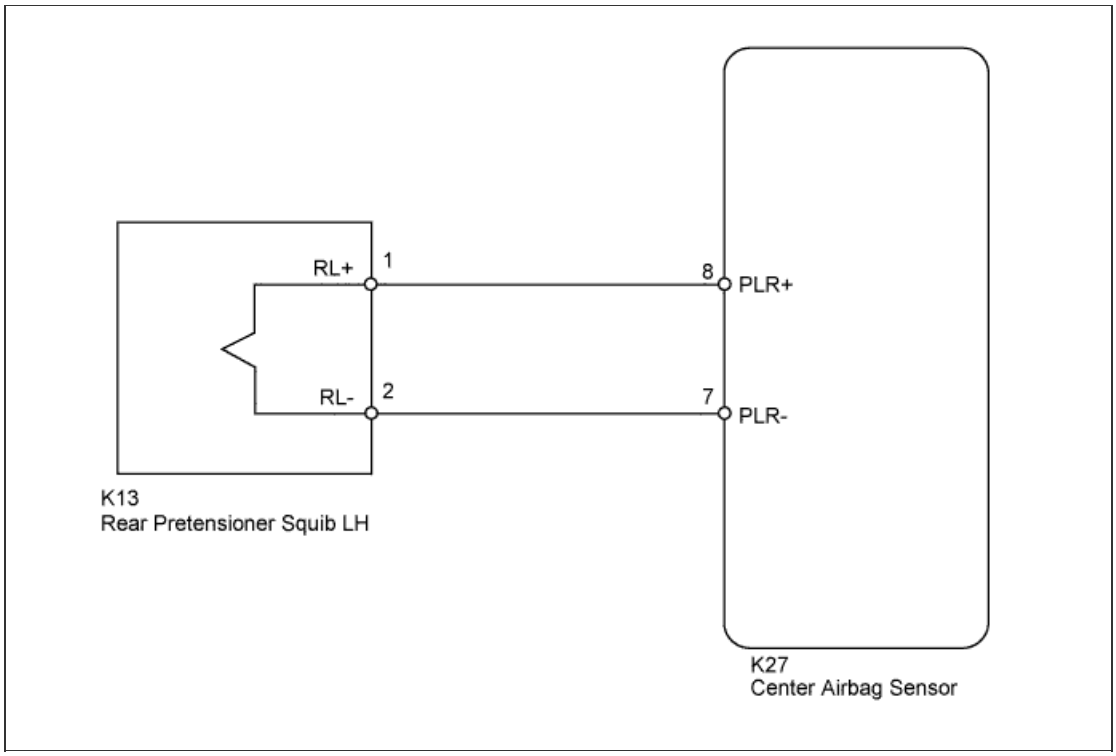

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT LH (REAR PRETENSIONER SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt LH.


d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the rear seat outer belt LH (rear pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

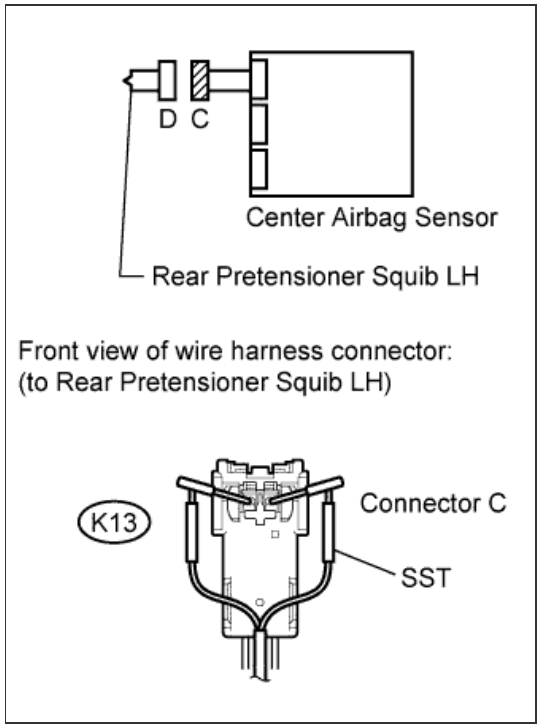

SST

09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 and B1928 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connector (on the rear seat outer belt LH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (REAR PRETENSIONER SQUIB LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K13-1 (RL+) - Body ground	Engine switch on (IG)	Below 1 V
K13-2 (RL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	1 MΩ or higher
K13-1 (RL+) - Body ground	Always	1 MΩ or higher
K13-2 (RL-) - Body ground	Always	1 MΩ or higher

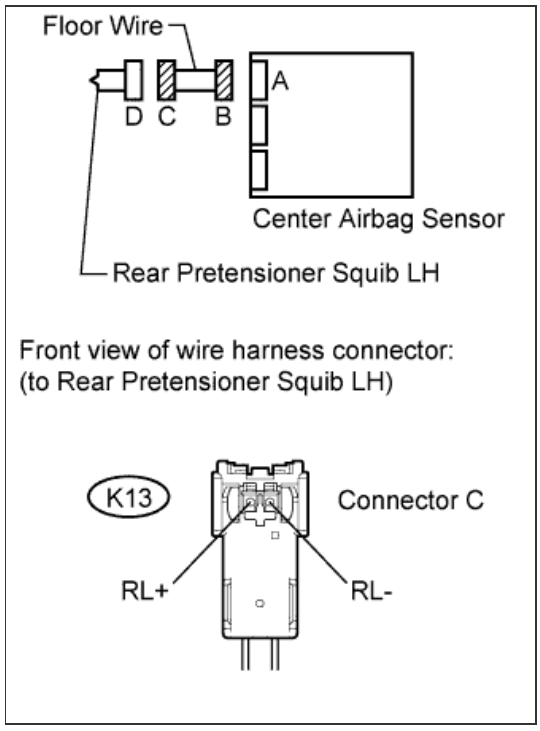

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

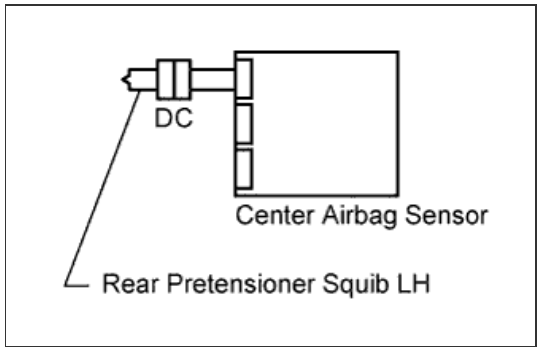

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 or B1928 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1815/54 Short in Front Passenger Side Squib 2nd Step Circuit

DTC B1816/54 Open in Front Passenger Side Squib 2nd Step Circuit

DTC B1817/54 Short to GND in Front Passenger Side Squib 2nd Step Circuit

DTC B1818/54 Short to B+ in Front Passenger Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib 2nd step circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1815/54	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib 2nd step circuit during the primary check. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1816/54	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib 2nd step circuit for 2 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1817/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1818/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

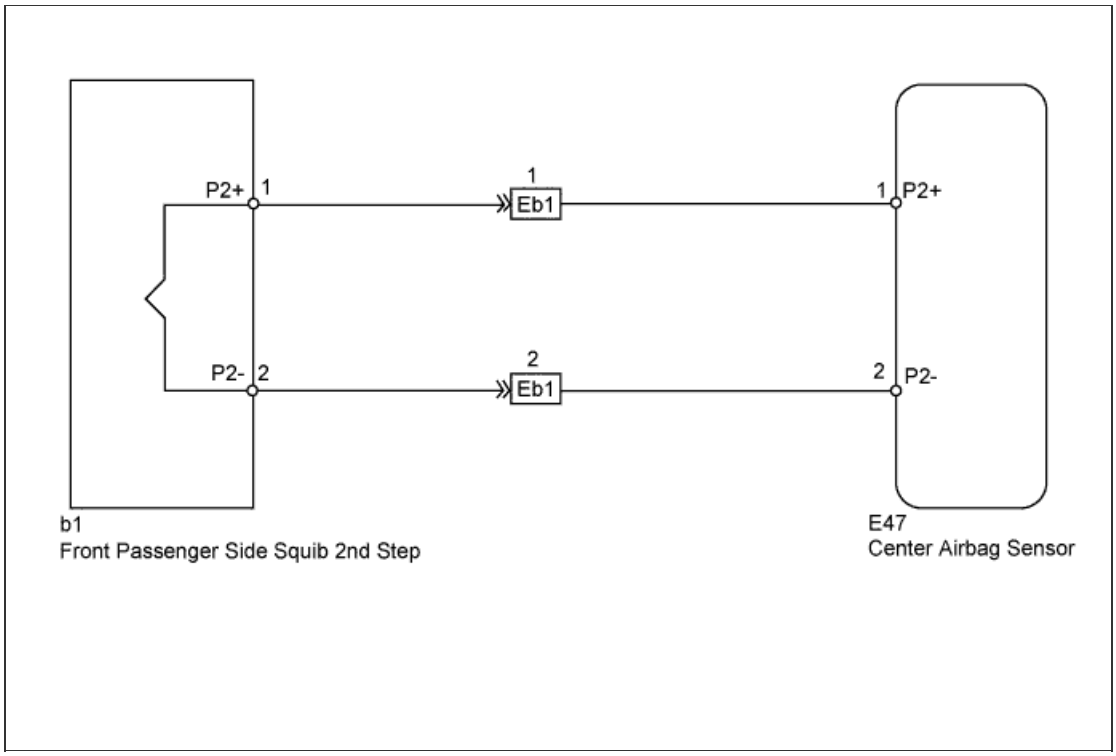

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB 2ND STEP)

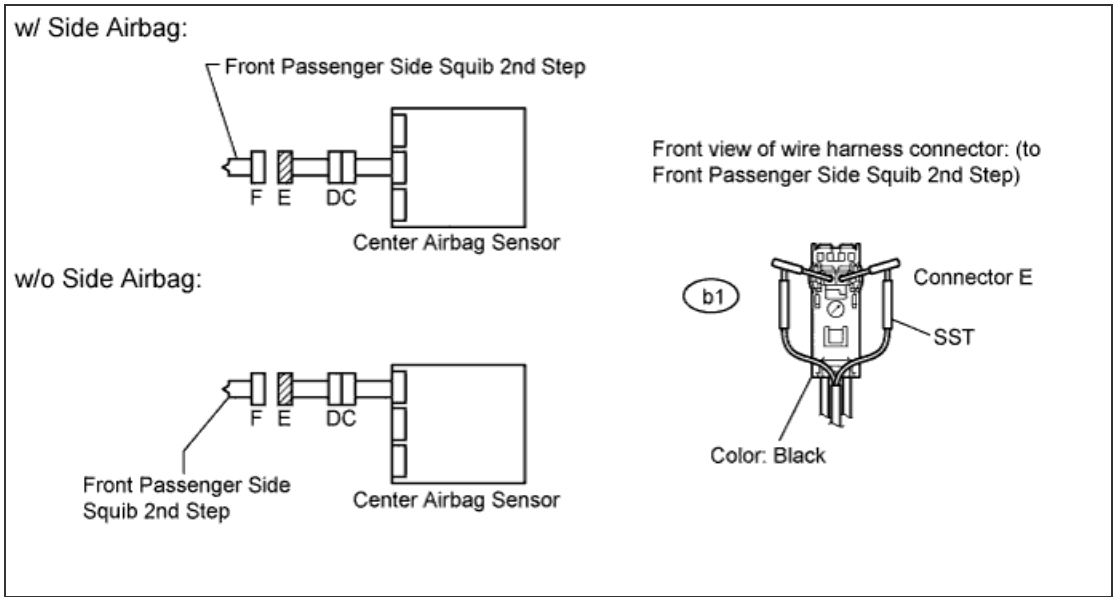

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib 2nd step) for measurement, as this may lead to a

serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB 2ND STEP CIRCUIT

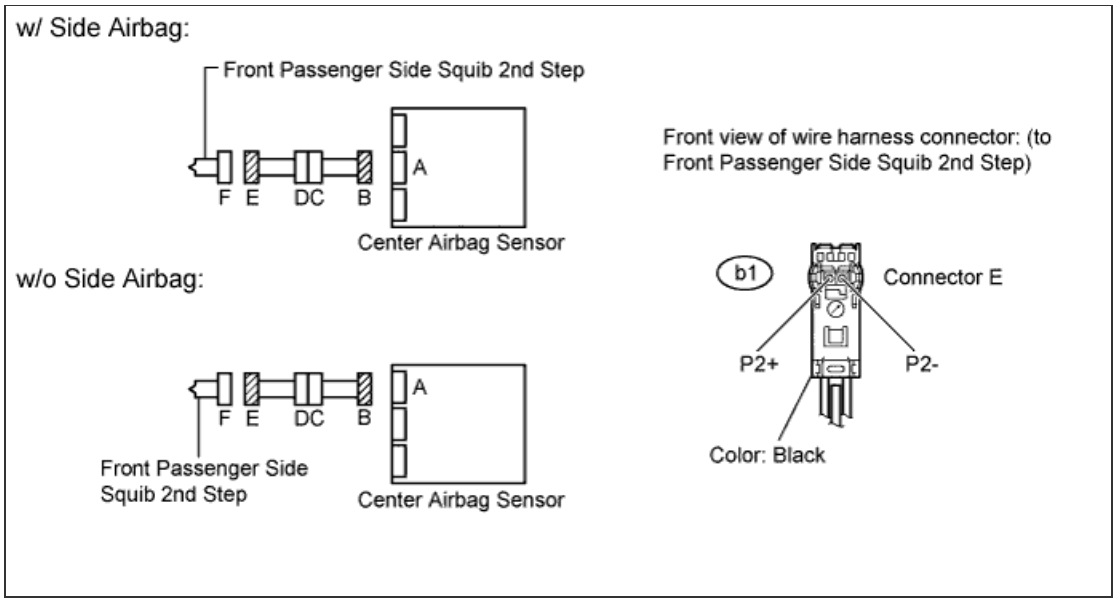

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b1-1 (P2+) - Body ground	Engine switch on (IG)	Below 1 V
b1-2 (P2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	1 MΩ or higher
b1-1 (P2+) - Body ground	Always	1 MΩ or higher
b1-2 (P2-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

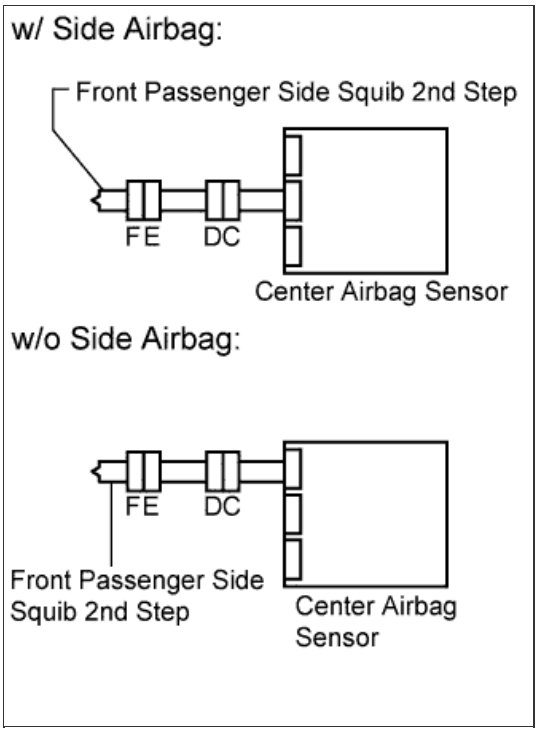


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

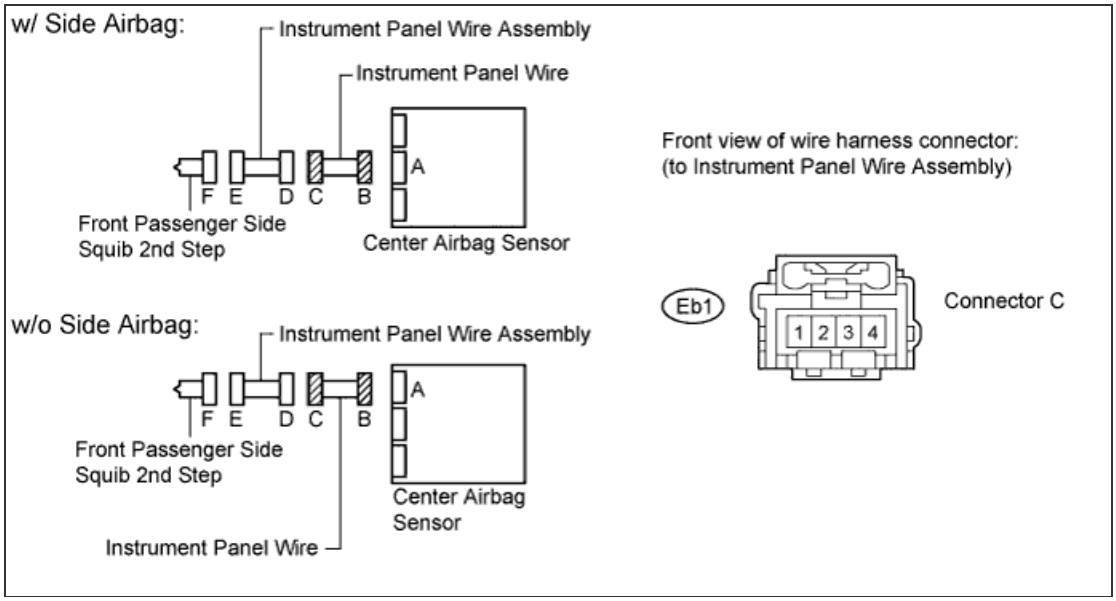

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-1 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-2 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	1 MΩ or higher
Eb1-1 - Body ground	Always	1 MΩ or higher
Eb1-2 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1925/78 Short in Rear Pretensioner Squib LH Circuit

DTC B1926/78 Open in Rear Pretensioner Squib LH Circuit

DTC B1927/78 Short to GND in Rear Pretensioner Squib LH Circuit

DTC B1928/78 Short to B+ in Rear Pretensioner Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib LH circuit consists of the center airbag sensor and the rear seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1925/78	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib LH circuit during the primary check. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1926/78	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib LH circuit for 2 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1927/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1928/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (rear pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

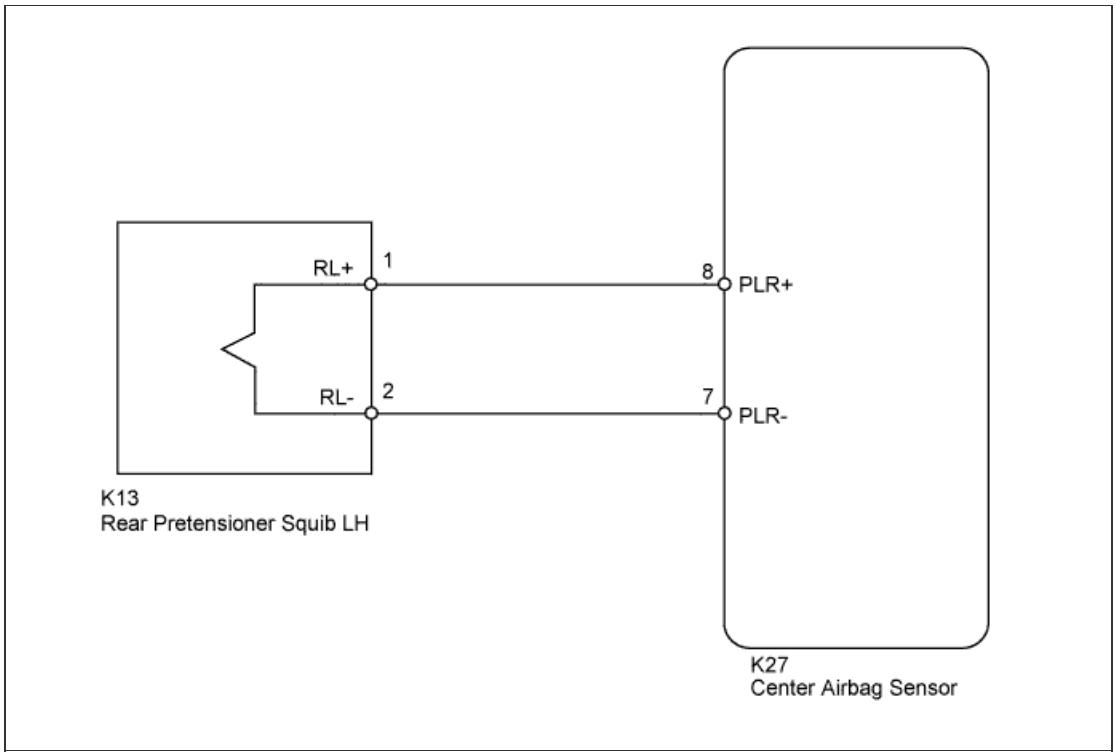

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT LH (REAR PRETENSIONER SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt LH.


d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the rear seat outer belt LH (rear pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

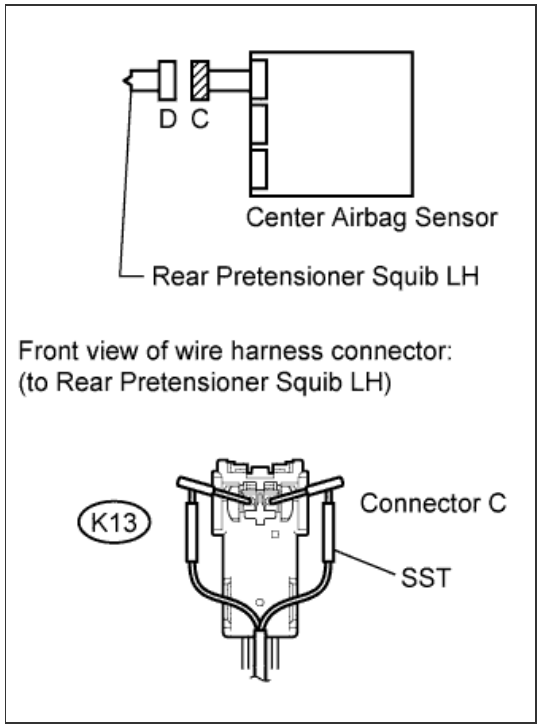

SST

09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 and B1928 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connector (on the rear seat outer belt LH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (REAR PRETENSIONER SQUIB LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K13-1 (RL+) - Body ground	Engine switch on (IG)	Below 1 V
K13-2 (RL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	1 MΩ or higher
K13-1 (RL+) - Body ground	Always	1 MΩ or higher
K13-2 (RL-) - Body ground	Always	1 MΩ or higher

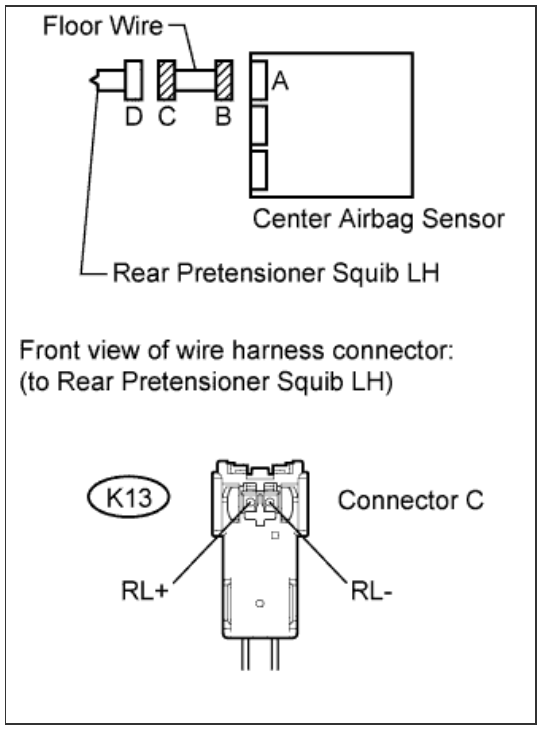

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

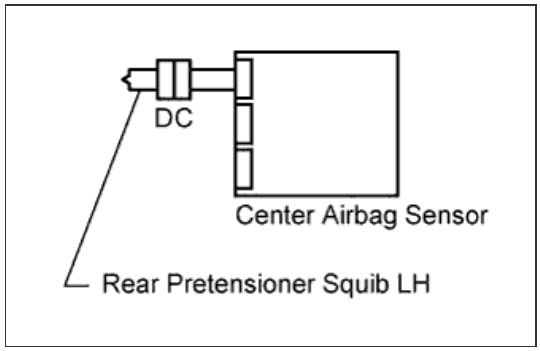

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 or B1928 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1815/54 Short in Front Passenger Side Squib 2nd Step Circuit

DTC B1816/54 Open in Front Passenger Side Squib 2nd Step Circuit

DTC B1817/54 Short to GND in Front Passenger Side Squib 2nd Step Circuit

DTC B1818/54 Short to B+ in Front Passenger Side Squib 2nd Step Circuit


for Preparation Click here

DESCRIPTION

The front passenger side squib 2nd step circuit consists of the center airbag sensor and the front passenger airbag.
The circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the front passenger side squib 2nd step circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1815/54	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the front passenger side squib 2nd step circuit during the primary check. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1816/54	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the front passenger side squib 2nd step circuit for 2 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1817/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly
B1818/54	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the front passenger side squib 2nd step circuit for 0.5 seconds. • A front passenger side squib 2nd step malfunction. • A center airbag sensor malfunction.	• Instrument panel wire • Instrument panel wire assembly • Front passenger airbag assembly (Front passenger side squib 2nd step) • Center airbag sensor assembly

WIRING DIAGRAM

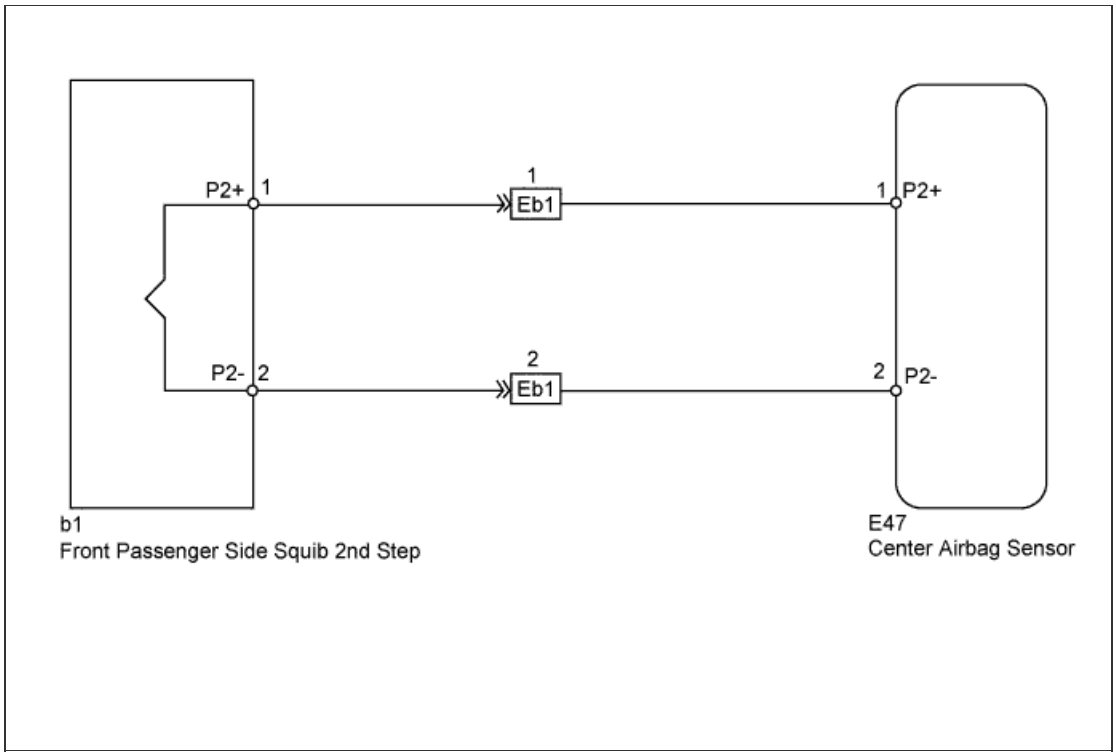

INSPECTION PROCEDURE


NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT PASSENGER AIRBAG (FRONT PASSENGER SIDE SQUIB 2ND STEP)

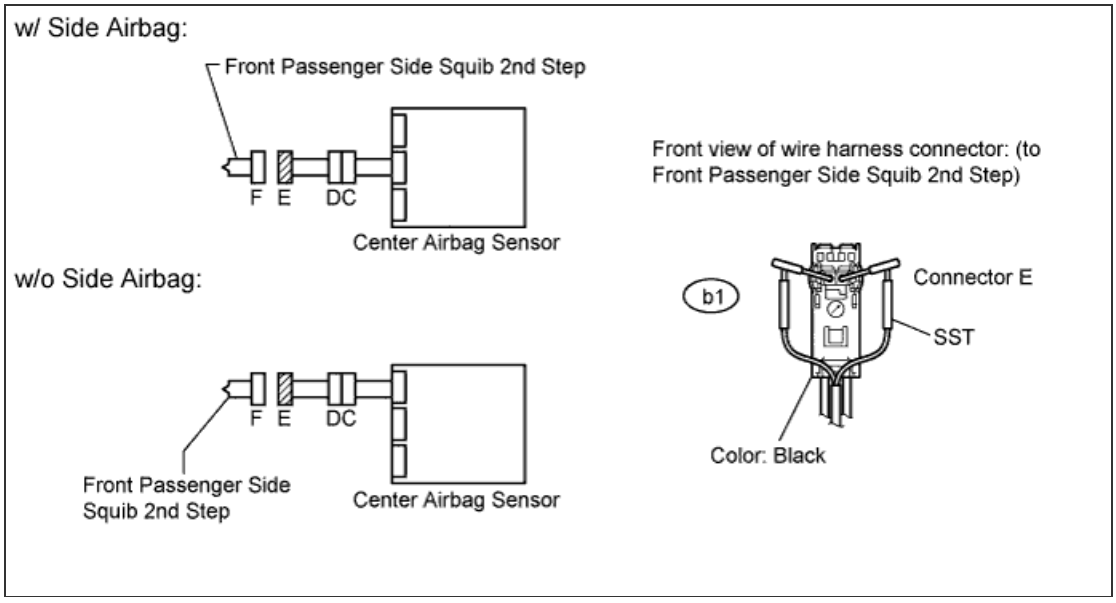

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the front passenger airbag.

d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector E (black connector).

CAUTION:

Never connect the tester to the front passenger airbag (front passenger side squib 2nd step) for measurement, as this may lead to a

serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST
09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:
DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK →

REPLACE FRONT PASSENGER AIRBAG ASSEMBLY (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector E.


d. Check that the instrument panel wire connectors (on the front passenger airbag side) are not damaged.

OK:
The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

OK →

3.CHECK FRONT PASSENGER SIDE SQUIB 2ND STEP CIRCUIT

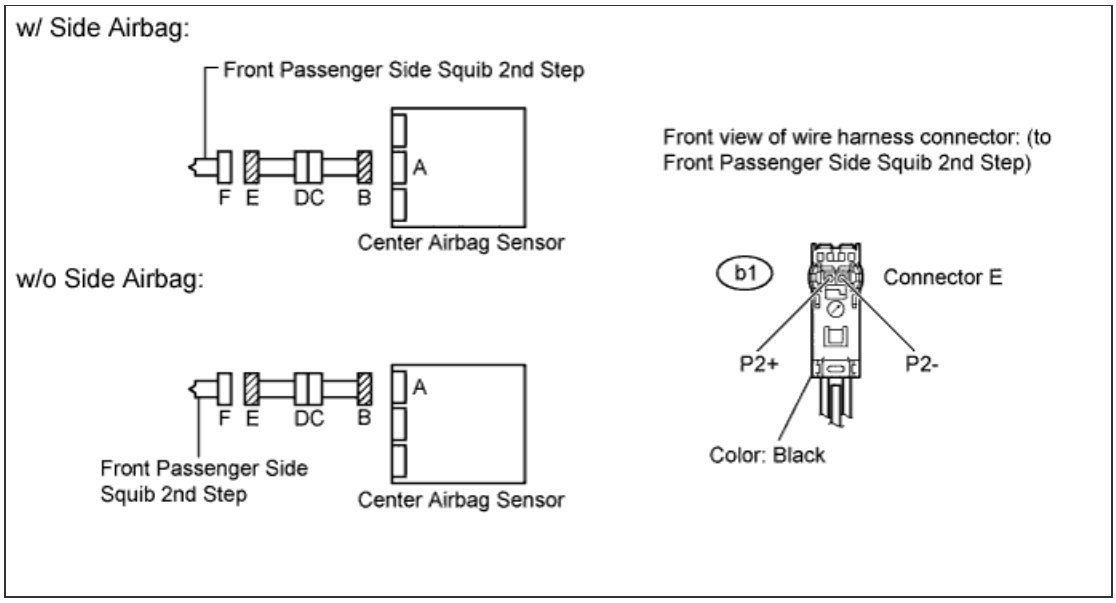

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
b1-1 (P2+) - Body ground	Engine switch on (IG)	Below 1 V
b1-2 (P2-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
b1-1 (P2+) - b1-2 (P2-)	Always	1 MΩ or higher
b1-1 (P2+) - Body ground	Always	1 MΩ or higher
b1-2 (P2-) - Body ground	Always	1 MΩ or higher

NG → Go to step 5

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front passenger airbag and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2

seconds.

c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.


g. Check for DTCs (Click here).

OK:

DTC B1815, B1816, B1817 or B1818 is not output.

HINT:

Codes other than DTC B1815, B1816, B1817 and B1818 may be output at this time, but they are not related to this check.

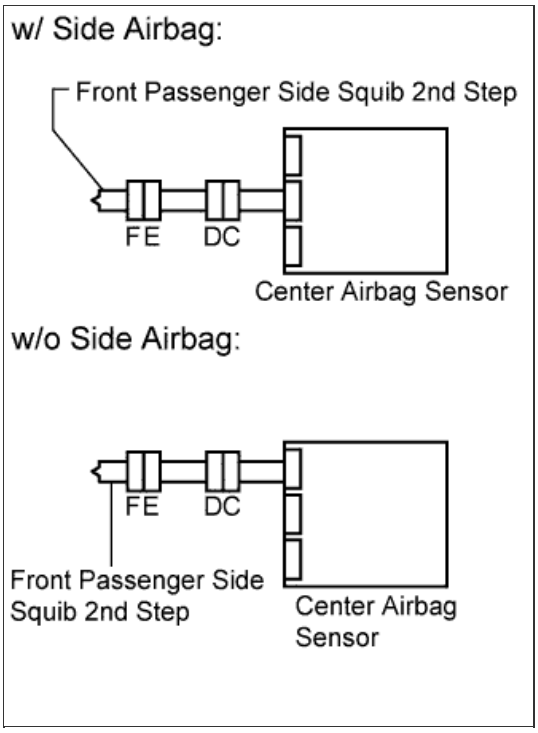


NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

5.CHECK INSTRUMENT PANEL WIRE (CENTER AIRBAG SENSOR - INSTRUMENT PANEL WIRE ASSEMBLY)

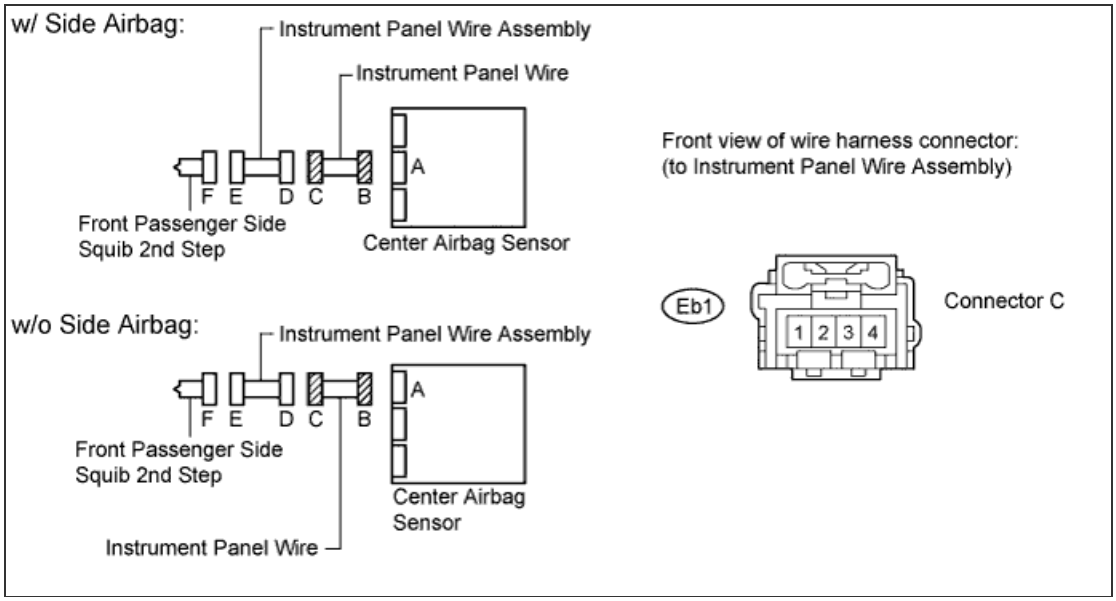

a. Restore the released activation prevention mechanism of connector B to its original condition.

b. Disconnect the instrument panel wire connector from the instrument panel wire assembly.

c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Eb1-1 - Body ground	Engine switch on (IG)	Below 1 V
Eb1-2 - Body ground	Engine switch on (IG)	Below 1 V

e. Turn the engine switch off.

f. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

g. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	Below 1 Ω

h. Release the activation prevention mechanism built into connector B (Click here).

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Eb1-1 - Eb1-2	Always	1 MΩ or higher
Eb1-1 - Body ground	Always	1 MΩ or higher
Eb1-2 - Body ground	Always	1 MΩ or higher

NG → REPLACE INSTRUMENT PANEL WIRE

OK → REPLACE INSTRUMENT PANEL WIRE ASSEMBLY

DTC B1925/78 Short in Rear Pretensioner Squib LH Circuit

DTC B1926/78 Open in Rear Pretensioner Squib LH Circuit

DTC B1927/78 Short to GND in Rear Pretensioner Squib LH Circuit

DTC B1928/78 Short to B+ in Rear Pretensioner Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib LH circuit consists of the center airbag sensor and the rear seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1925/78	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib LH circuit during the primary check. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1926/78	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib LH circuit for 2 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1927/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1928/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (rear pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

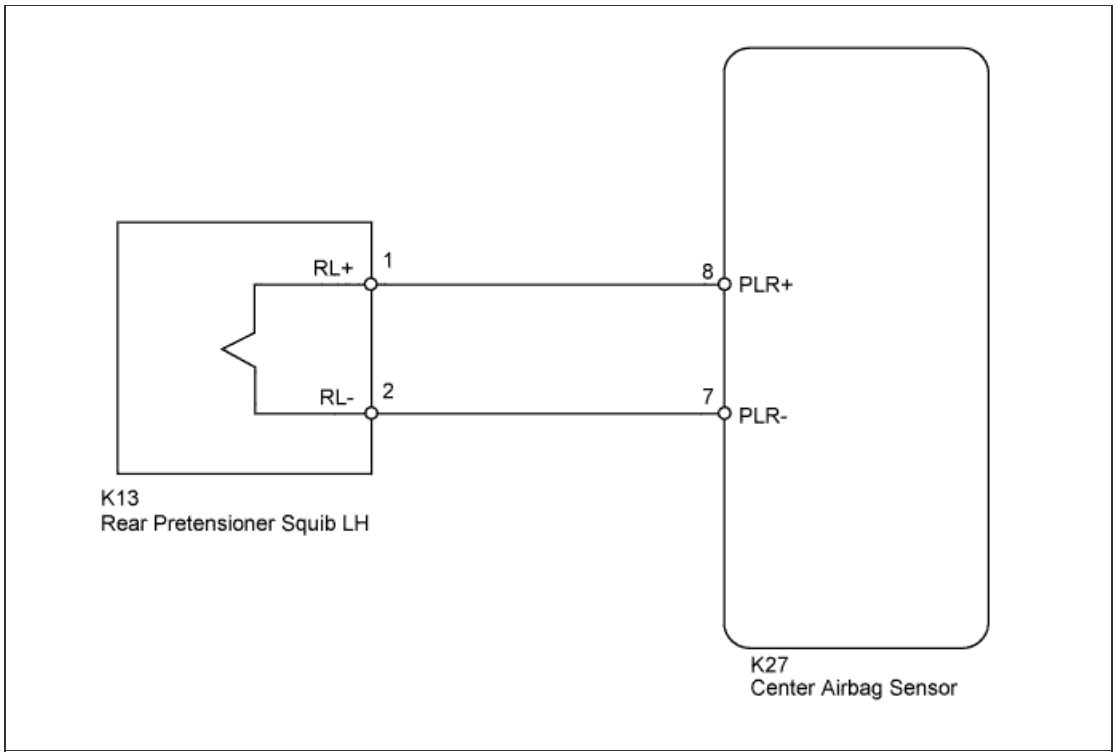

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT LH (REAR PRETENSIONER SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt LH.


d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the rear seat outer belt LH (rear pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

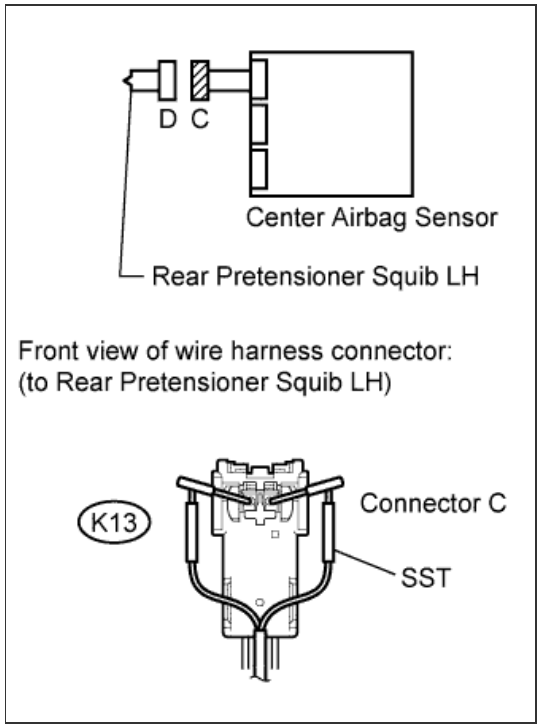

SST

09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 and B1928 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connector (on the rear seat outer belt LH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (REAR PRETENSIONER SQUIB LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K13-1 (RL+) - Body ground	Engine switch on (IG)	Below 1 V
K13-2 (RL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	1 MΩ or higher
K13-1 (RL+) - Body ground	Always	1 MΩ or higher
K13-2 (RL-) - Body ground	Always	1 MΩ or higher

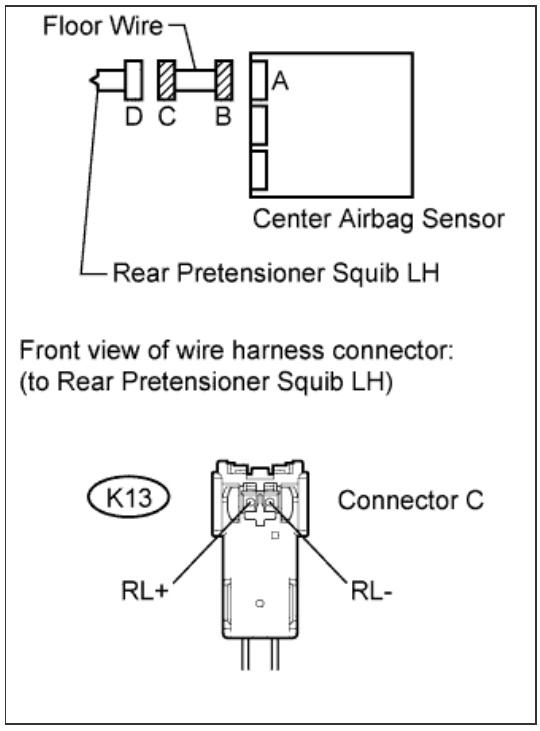

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

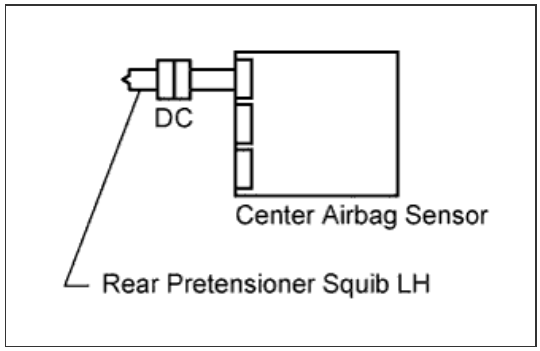

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 or B1928 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1820/55 Short in Side Squib RH Circuit

DTC B1821/55 Open in Side Squib RH Circuit

DTC B1822/55 Short to GND in Side Squib RH Circuit

DTC B1823/55 Short to B+ in Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The side squib RH circuit consists of the center airbag sensor and the front seat airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1820/55	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib RH circuit during the primary check. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1821/55	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib RH circuit for 2 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1822/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1823/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

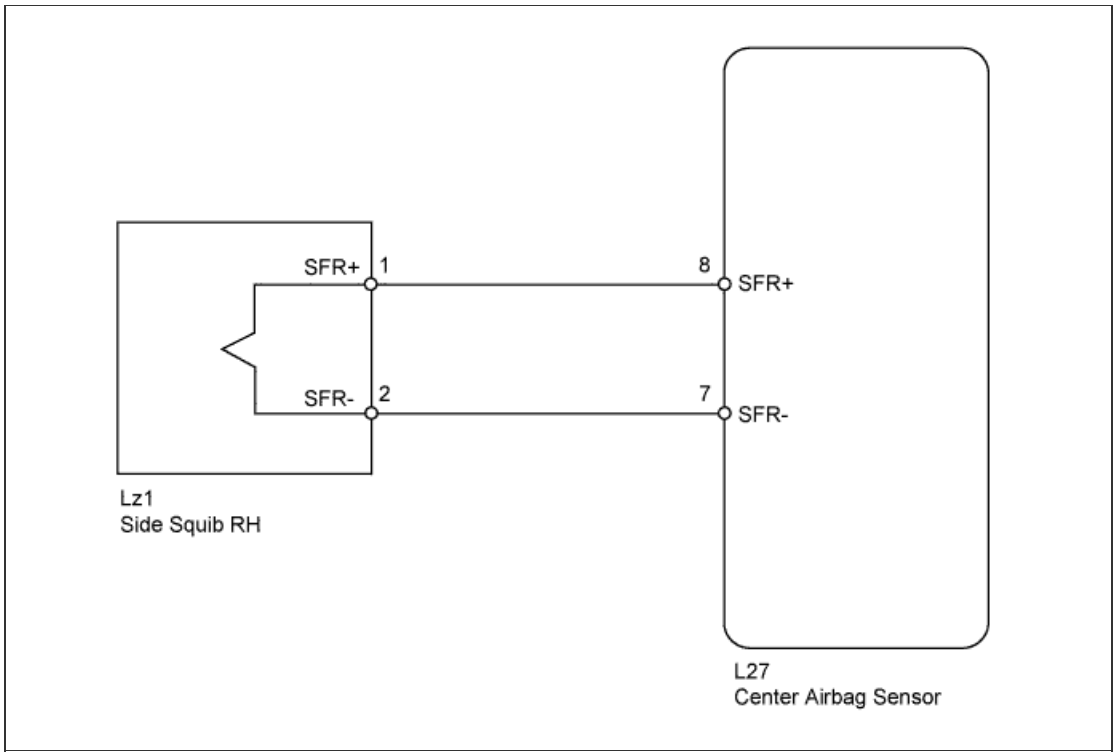

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG RH (SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag RH (side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

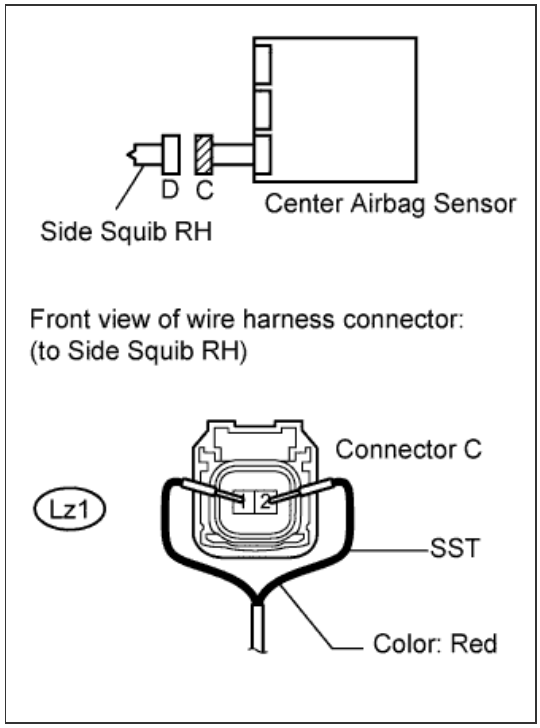

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B	REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)
C	Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

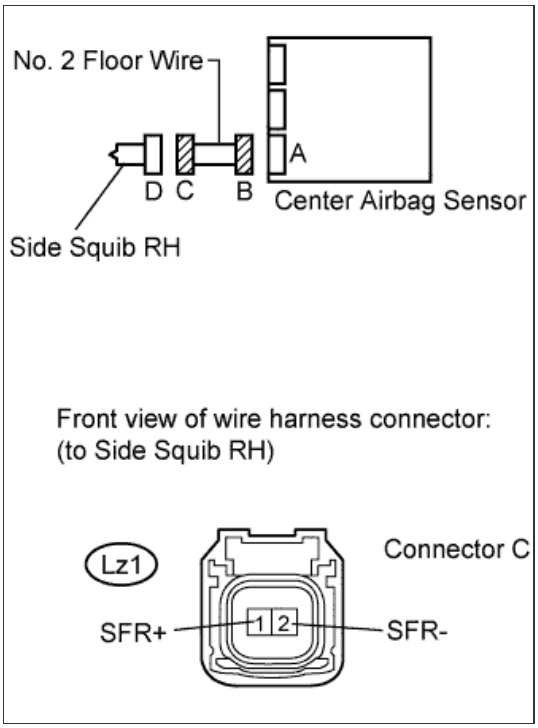

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz1-1 (SFR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz1-2 (SFR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	1 MΩ or higher
Lz1-1 (SFR+) - Body ground	Always	1 MΩ or higher
Lz1-2 (SFR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

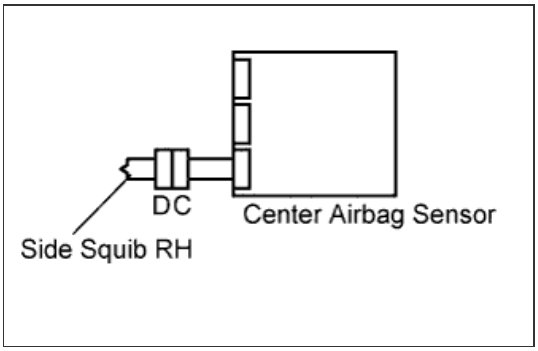

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1925/78 Short in Rear Pretensioner Squib LH Circuit

DTC B1926/78 Open in Rear Pretensioner Squib LH Circuit

DTC B1927/78 Short to GND in Rear Pretensioner Squib LH Circuit

DTC B1928/78 Short to B+ in Rear Pretensioner Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib LH circuit consists of the center airbag sensor and the rear seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1925/78	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib LH circuit during the primary check. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1926/78	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib LH circuit for 2 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1927/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1928/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (rear pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

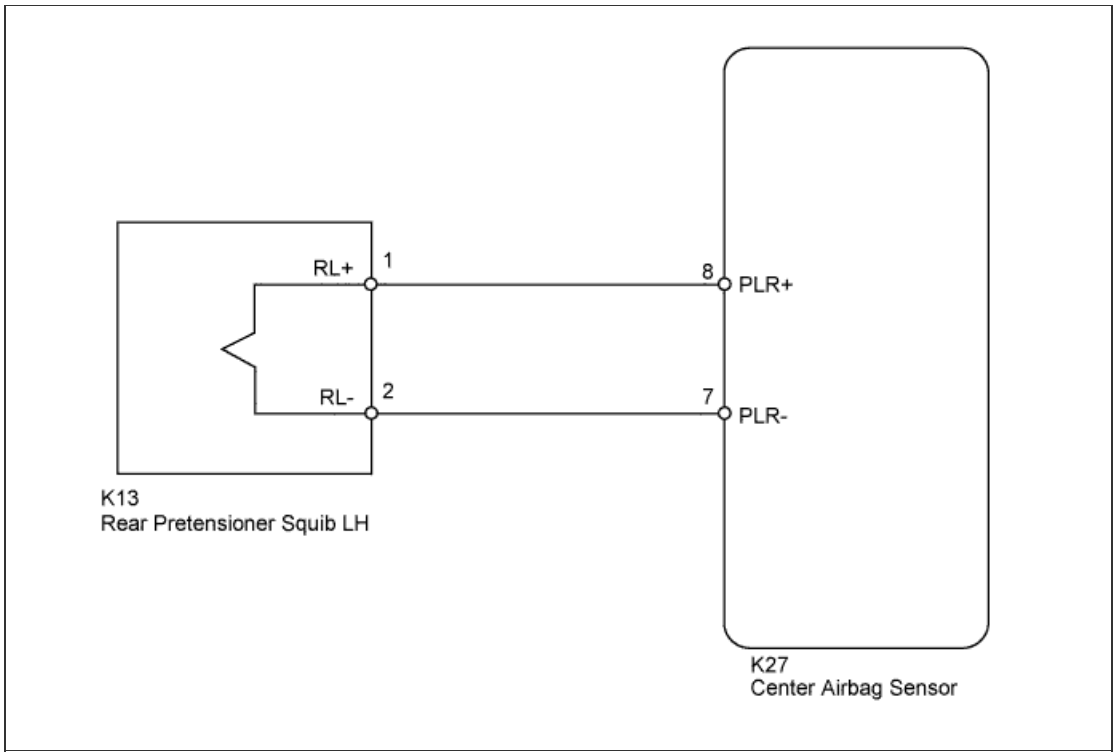

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT LH (REAR PRETENSIONER SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt LH.


d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the rear seat outer belt LH (rear pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

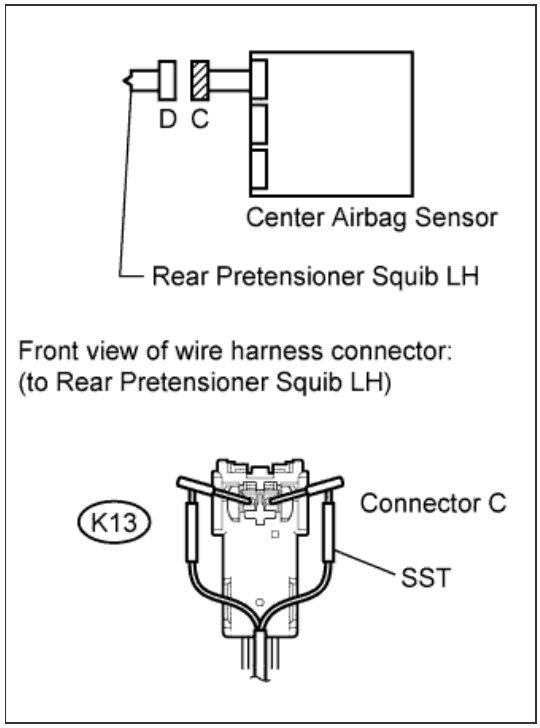

SST

09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 and B1928 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connector (on the rear seat outer belt LH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (REAR PRETENSIONER SQUIB LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K13-1 (RL+) - Body ground	Engine switch on (IG)	Below 1 V
K13-2 (RL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	1 MΩ or higher
K13-1 (RL+) - Body ground	Always	1 MΩ or higher
K13-2 (RL-) - Body ground	Always	1 MΩ or higher

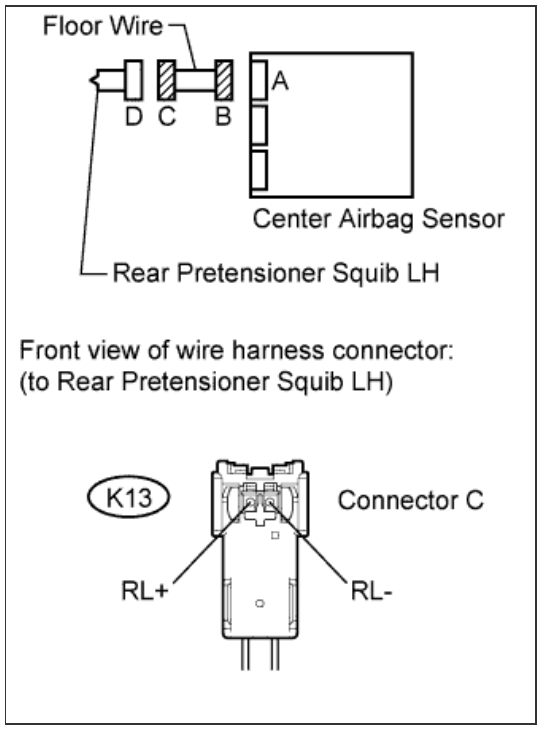

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

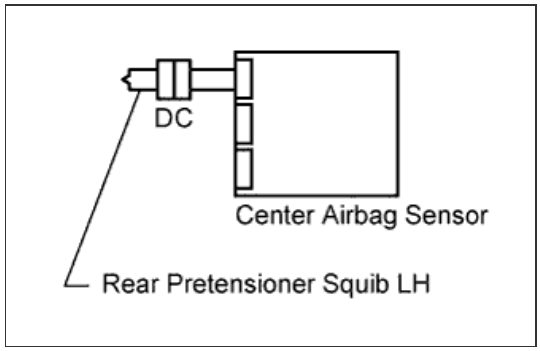

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 or B1928 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1820/55 Short in Side Squib RH Circuit

DTC B1821/55 Open in Side Squib RH Circuit

DTC B1822/55 Short to GND in Side Squib RH Circuit

DTC B1823/55 Short to B+ in Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The side squib RH circuit consists of the center airbag sensor and the front seat airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1820/55	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib RH circuit during the primary check. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1821/55	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib RH circuit for 2 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1822/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1823/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

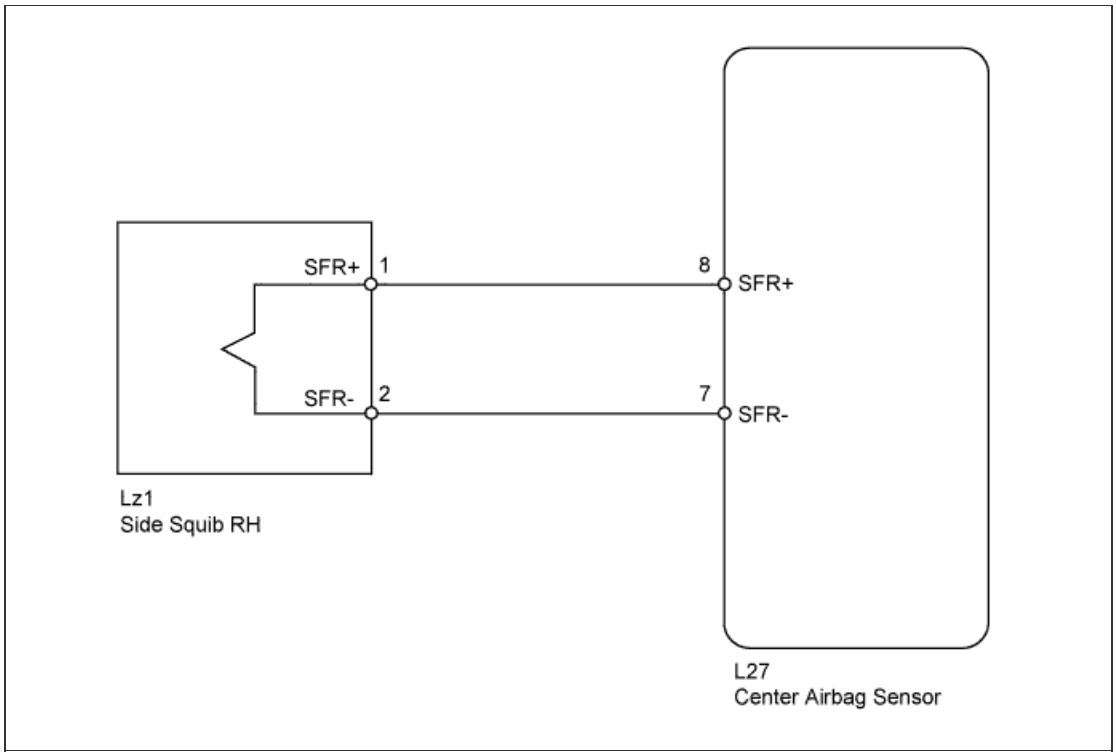

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG RH (SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag RH (side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

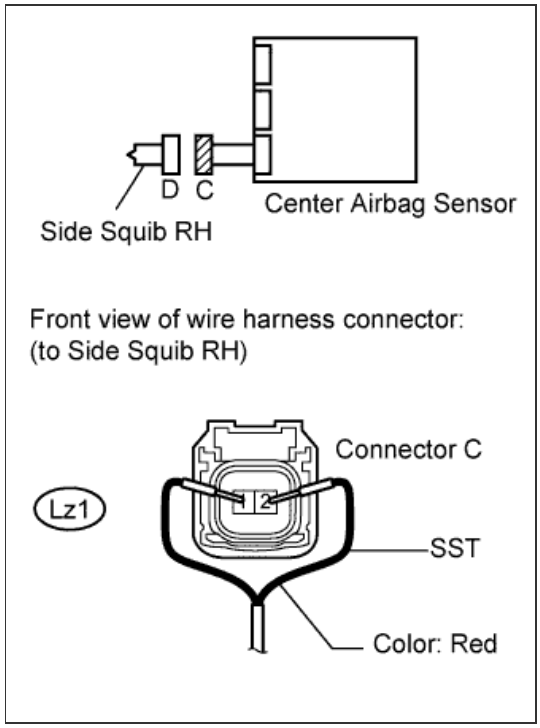

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B	REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)
C	Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

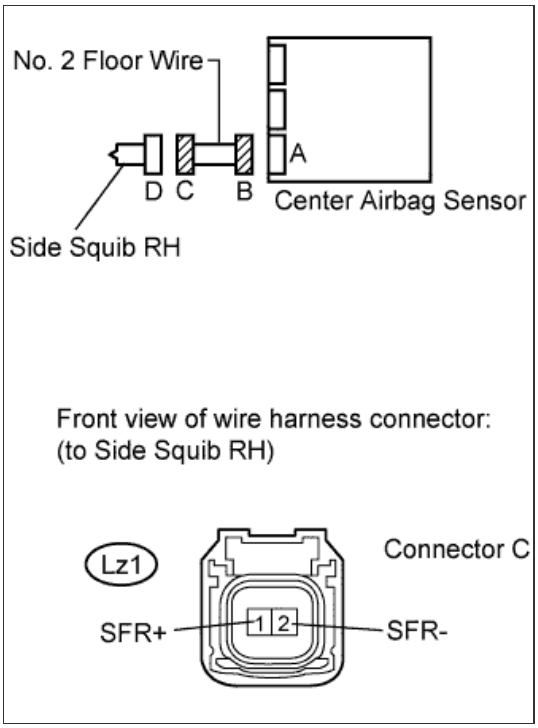

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz1-1 (SFR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz1-2 (SFR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	1 MΩ or higher
Lz1-1 (SFR+) - Body ground	Always	1 MΩ or higher
Lz1-2 (SFR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

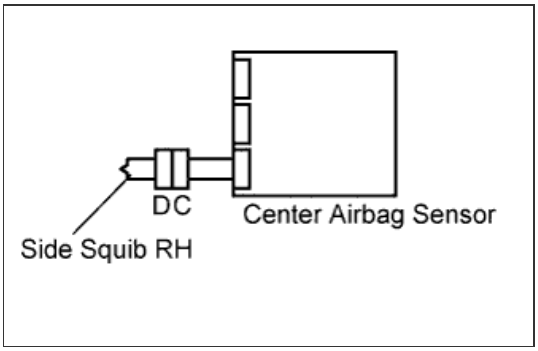

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1925/78 Short in Rear Pretensioner Squib LH Circuit

DTC B1926/78 Open in Rear Pretensioner Squib LH Circuit

DTC B1927/78 Short to GND in Rear Pretensioner Squib LH Circuit

DTC B1928/78 Short to B+ in Rear Pretensioner Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib LH circuit consists of the center airbag sensor and the rear seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1925/78	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib LH circuit during the primary check. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1926/78	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib LH circuit for 2 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1927/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1928/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (rear pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

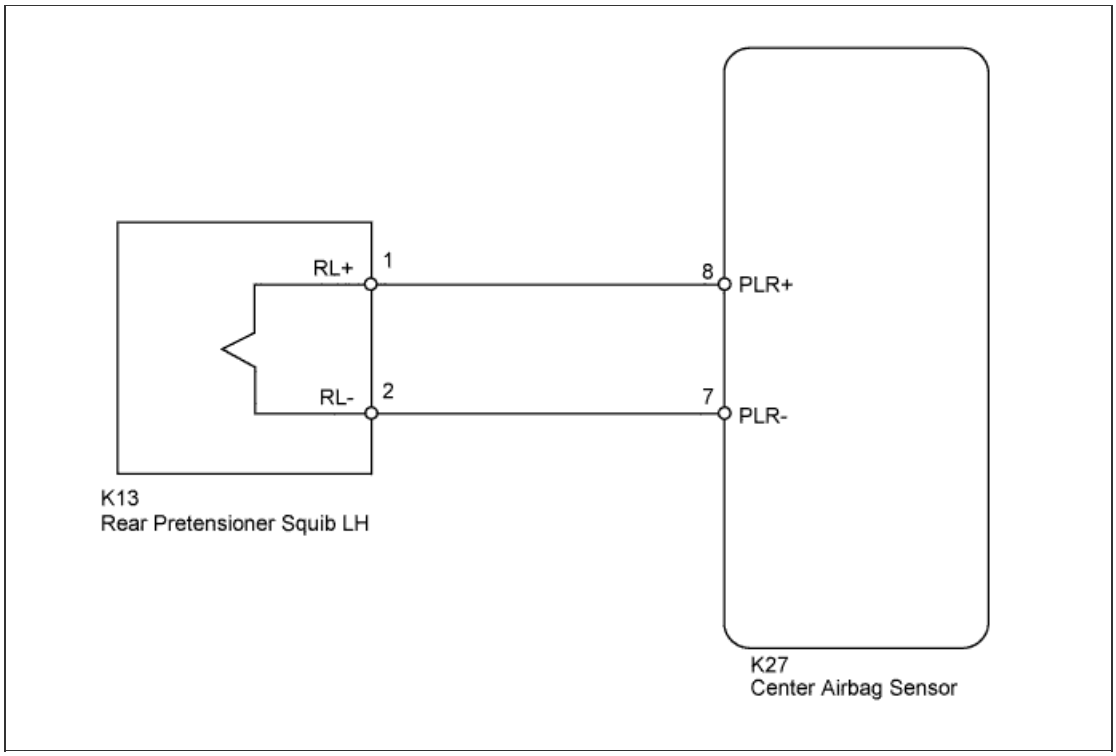

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT LH (REAR PRETENSIONER SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt LH.


d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the rear seat outer belt LH (rear pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

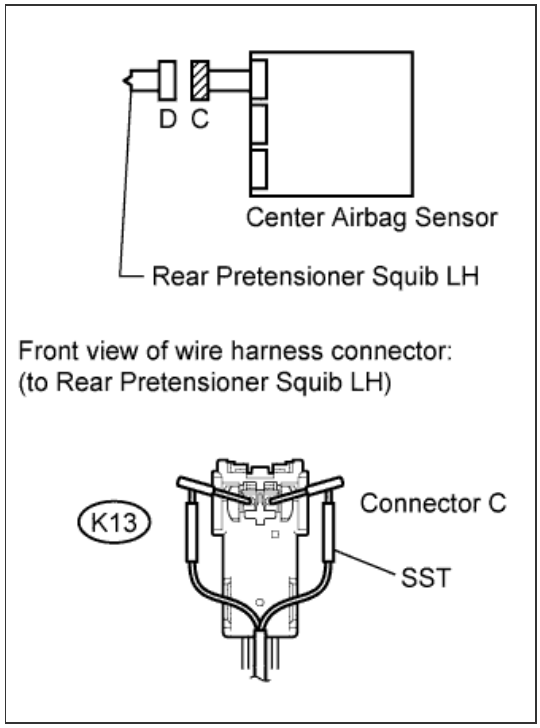

SST

09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 and B1928 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connector (on the rear seat outer belt LH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (REAR PRETENSIONER SQUIB LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K13-1 (RL+) - Body ground	Engine switch on (IG)	Below 1 V
K13-2 (RL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	1 MΩ or higher
K13-1 (RL+) - Body ground	Always	1 MΩ or higher
K13-2 (RL-) - Body ground	Always	1 MΩ or higher

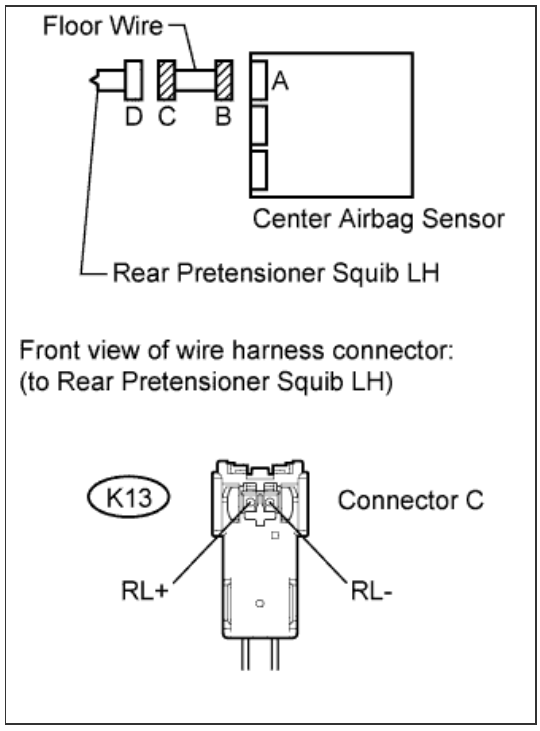

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

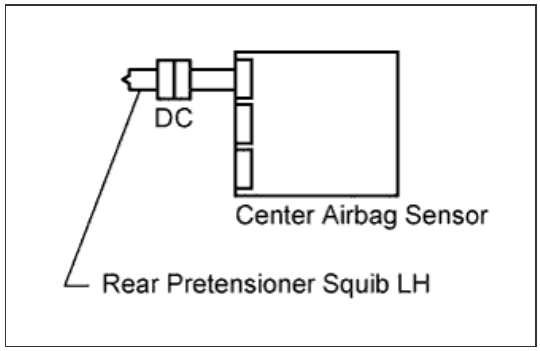

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 or B1928 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1820/55 Short in Side Squib RH Circuit

DTC B1821/55 Open in Side Squib RH Circuit

DTC B1822/55 Short to GND in Side Squib RH Circuit

DTC B1823/55 Short to B+ in Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The side squib RH circuit consists of the center airbag sensor and the front seat airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1820/55	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib RH circuit during the primary check. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1821/55	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib RH circuit for 2 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1822/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1823/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

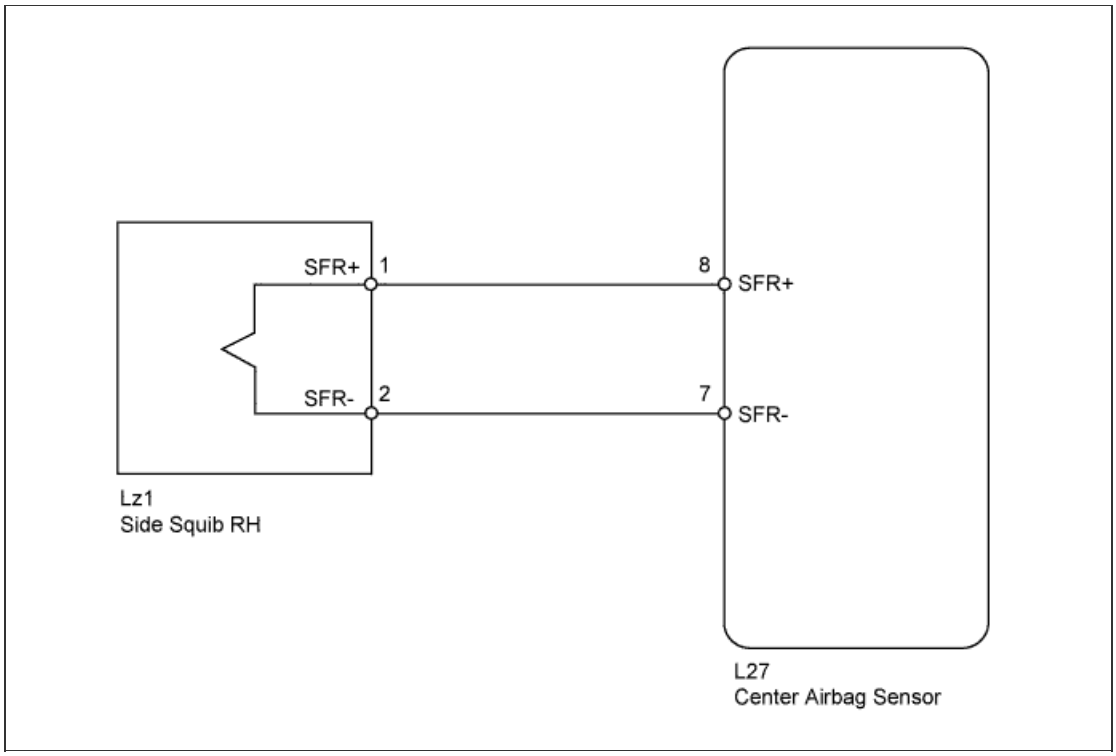

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG RH (SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag RH (side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

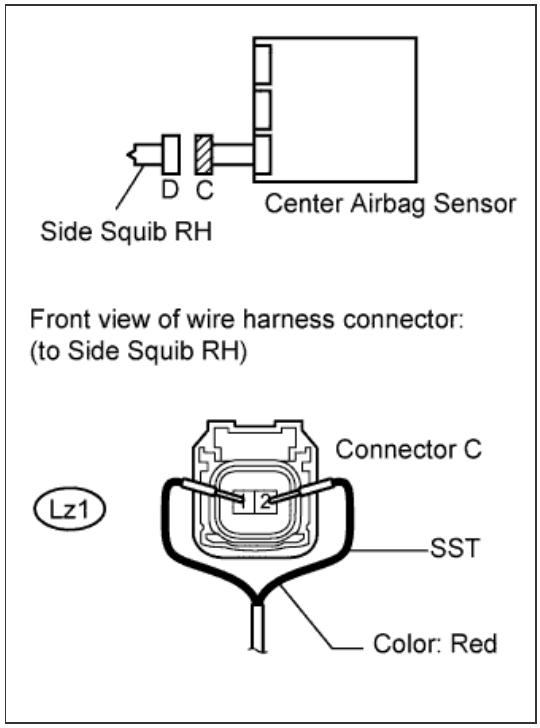

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B	REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)
C	Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

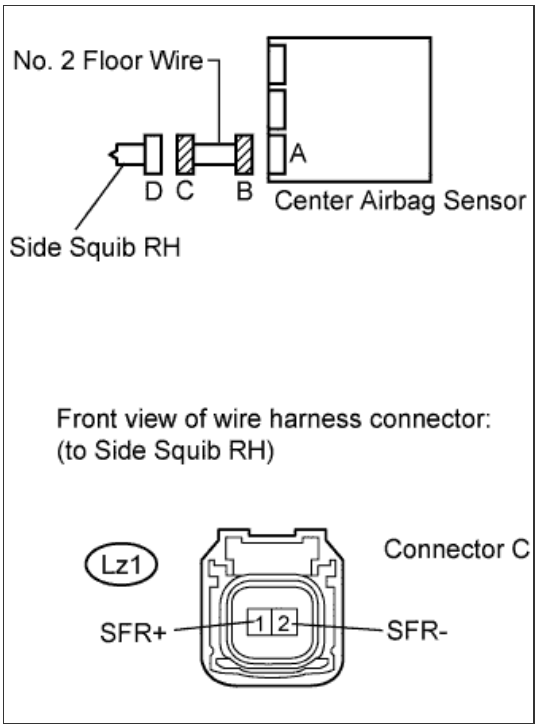

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz1-1 (SFR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz1-2 (SFR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	1 MΩ or higher
Lz1-1 (SFR+) - Body ground	Always	1 MΩ or higher
Lz1-2 (SFR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

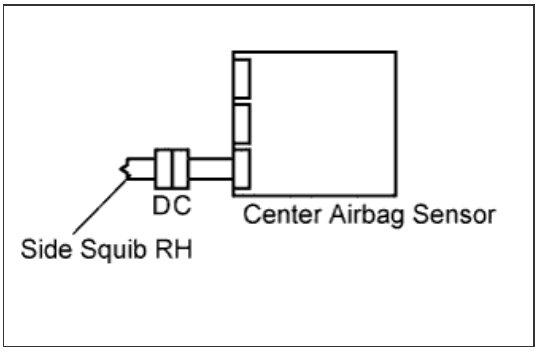

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1925/78 Short in Rear Pretensioner Squib LH Circuit

DTC B1926/78 Open in Rear Pretensioner Squib LH Circuit

DTC B1927/78 Short to GND in Rear Pretensioner Squib LH Circuit

DTC B1928/78 Short to B+ in Rear Pretensioner Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib LH circuit consists of the center airbag sensor and the rear seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1925/78	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib LH circuit during the primary check. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1926/78	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib LH circuit for 2 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1927/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1928/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (rear pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

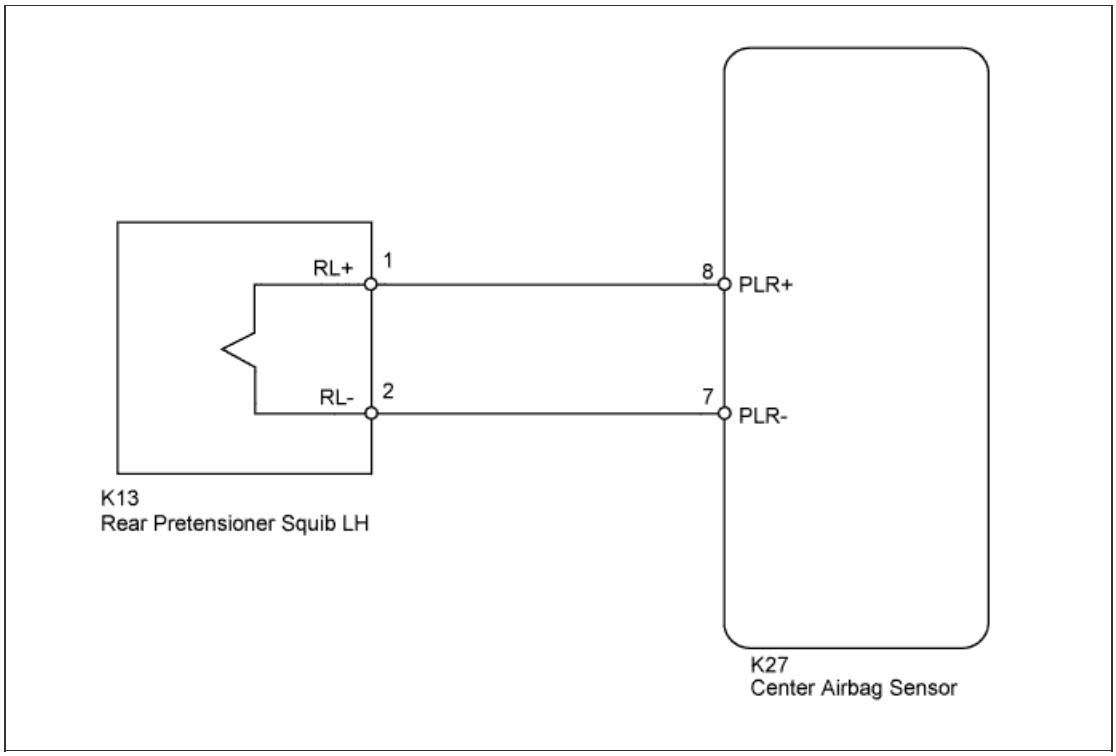

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT LH (REAR PRETENSIONER SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt LH.


d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the rear seat outer belt LH (rear pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

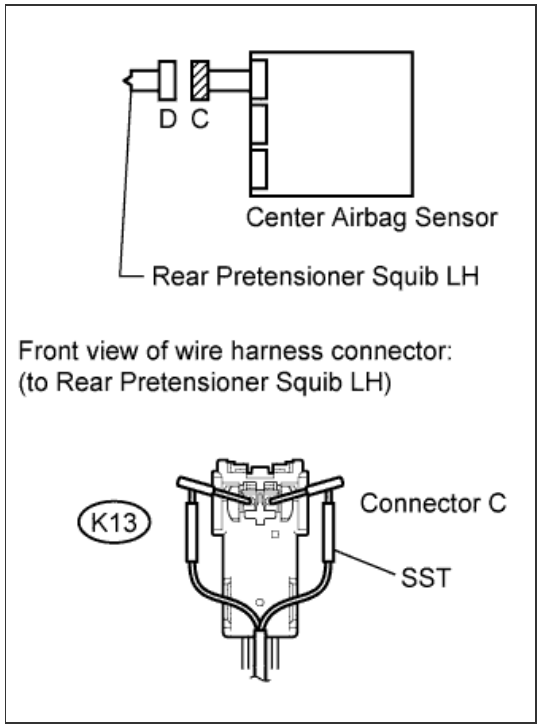

SST

09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 and B1928 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connector (on the rear seat outer belt LH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (REAR PRETENSIONER SQUIB LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K13-1 (RL+) - Body ground	Engine switch on (IG)	Below 1 V
K13-2 (RL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	1 MΩ or higher
K13-1 (RL+) - Body ground	Always	1 MΩ or higher
K13-2 (RL-) - Body ground	Always	1 MΩ or higher

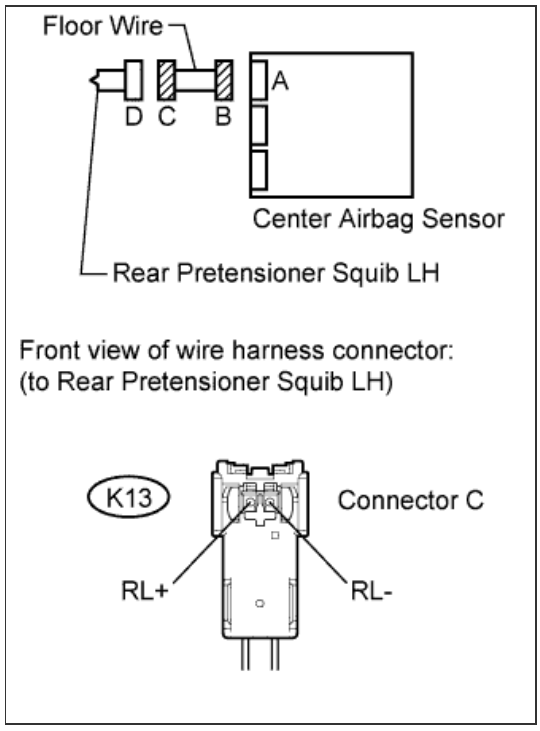

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

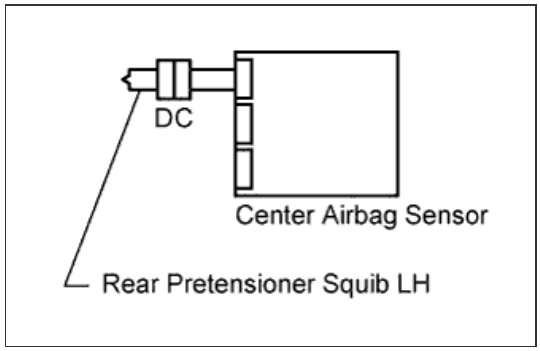

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 or B1928 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1820/55 Short in Side Squib RH Circuit

DTC B1821/55 Open in Side Squib RH Circuit

DTC B1822/55 Short to GND in Side Squib RH Circuit

DTC B1823/55 Short to B+ in Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The side squib RH circuit consists of the center airbag sensor and the front seat airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1820/55	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib RH circuit during the primary check. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1821/55	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib RH circuit for 2 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1822/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1823/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

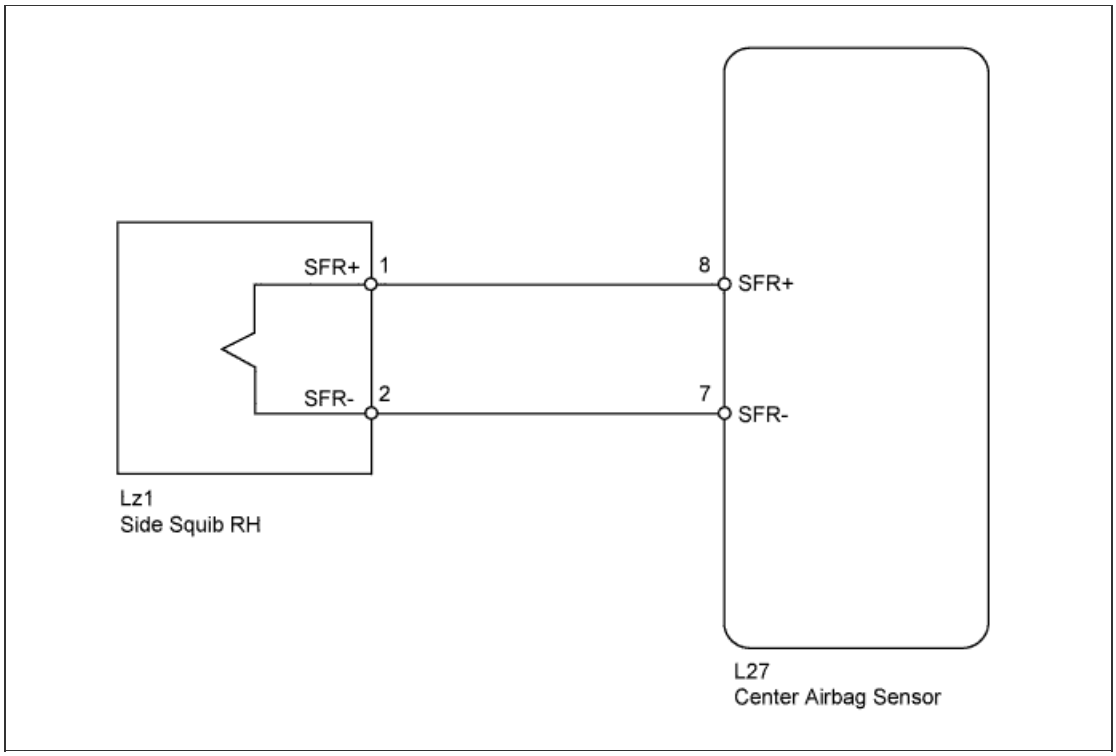

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG RH (SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag RH (side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

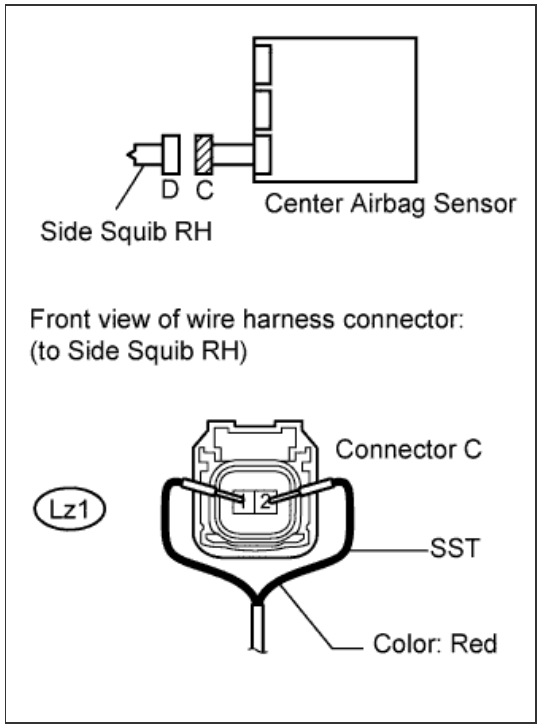

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B	REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)
C	Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

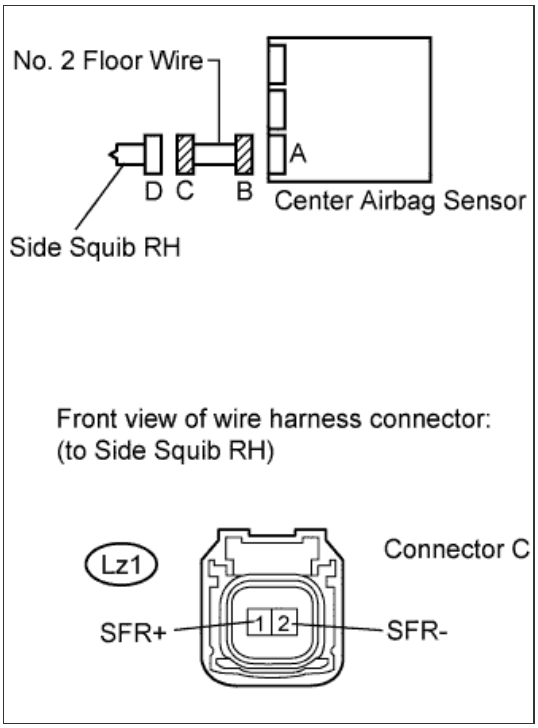

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz1-1 (SFR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz1-2 (SFR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	1 MΩ or higher
Lz1-1 (SFR+) - Body ground	Always	1 MΩ or higher
Lz1-2 (SFR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

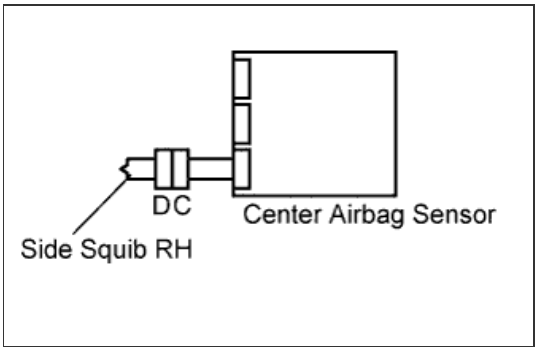

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B1925/78 Short in Rear Pretensioner Squib LH Circuit

DTC B1926/78 Open in Rear Pretensioner Squib LH Circuit

DTC B1927/78 Short to GND in Rear Pretensioner Squib LH Circuit

DTC B1928/78 Short to B+ in Rear Pretensioner Squib LH Circuit


for Preparation Click here

DESCRIPTION

The rear pretensioner squib LH circuit consists of the center airbag sensor and the rear seat outer belt LH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the rear pretensioner squib LH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1925/78	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the rear pretensioner squib LH circuit during the primary check. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1926/78	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the rear pretensioner squib LH circuit for 2 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1927/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (Rear pretensioner squib LH) • Center airbag sensor assembly
B1928/78	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the rear pretensioner squib LH circuit for 0.5 seconds. • A rear pretensioner squib LH malfunction. • A center airbag sensor malfunction.	• Floor wire • Rear seat outer belt assembly LH (rear pretensioner squib LH) • Center airbag sensor assembly

WIRING DIAGRAM

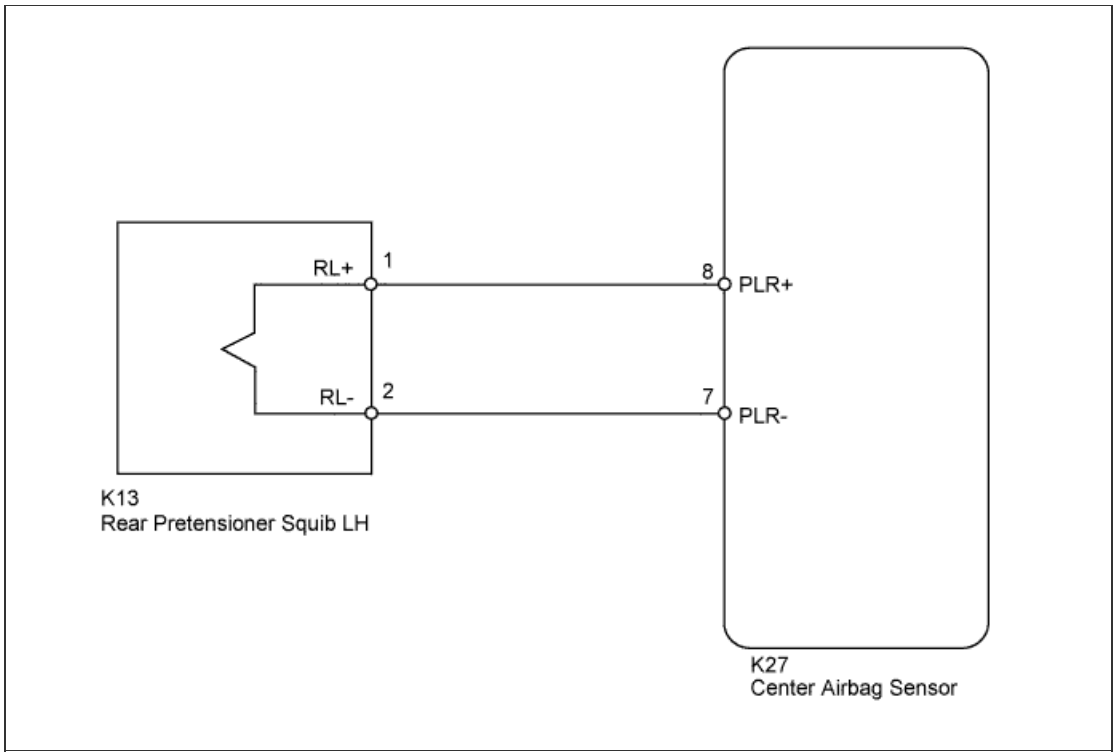

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK REAR SEAT OUTER BELT LH (REAR PRETENSIONER SQUIB LH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connectors from the rear seat outer belt LH.


d. Connect the white wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:

Never connect the tester to the rear seat outer belt LH (rear pretensioner squib LH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

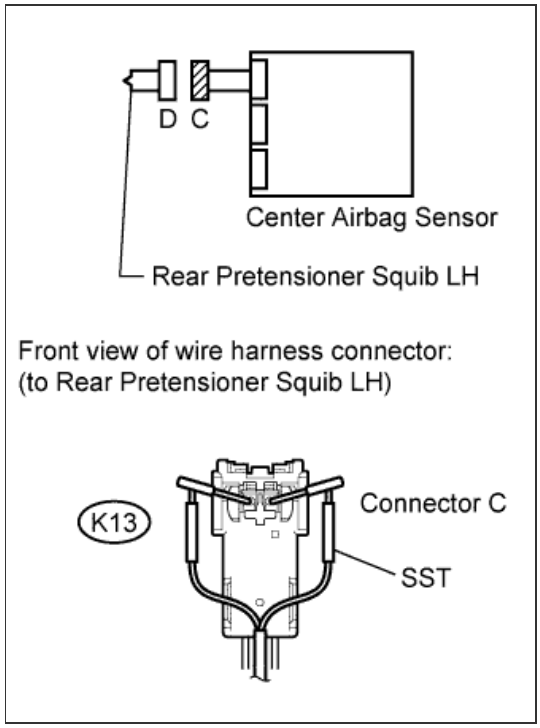

SST

09843-18061

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 and B1928 may be output at this time, but they are not related to this check.

NG → Go to step 2

OK

REPLACE REAR SEAT OUTER BELT ASSEMBLY LH (Click here)

2.CHECK CONNECTOR

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Check that the floor wire connector (on the rear seat outer belt LH side) is not damaged.

OK:

The lock button is not disengaged, and the claw of the lock is not damaged or deformed.

NG → REPLACE FLOOR WIRE

OK

3.CHECK FLOOR WIRE (REAR PRETENSIONER SQUIB LH CIRCUIT)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
K13-1 (RL+) - Body ground	Engine switch on (IG)	Below 1 V
K13-2 (RL-) - Body ground	Engine switch on (IG)	Below 1 V

d. Turn the engine switch off.

e. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

f. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	Below 1 Ω

g. Release the activation prevention mechanism built into connector B (Click here).

h. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
K13-1 (RL+) - K13-2 (RL-)	Always	1 MΩ or higher
K13-1 (RL+) - Body ground	Always	1 MΩ or higher
K13-2 (RL-) - Body ground	Always	1 MΩ or higher

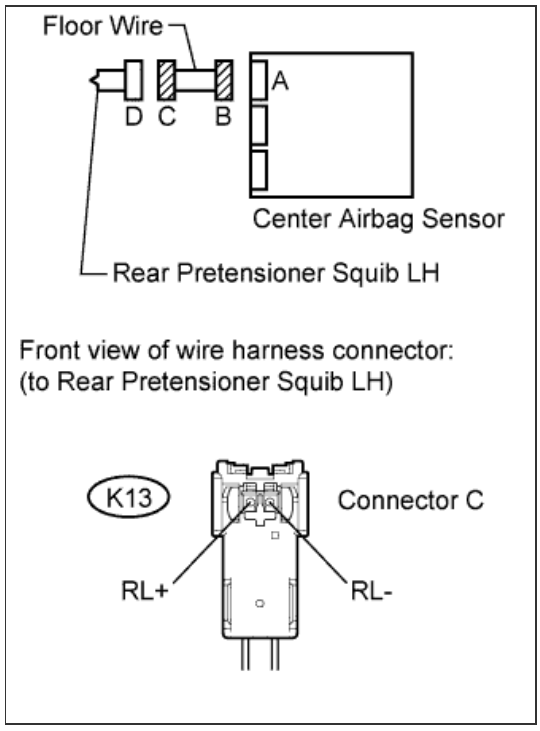

NG → REPLACE FLOOR WIRE

OK

4.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the rear seat outer belt LH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

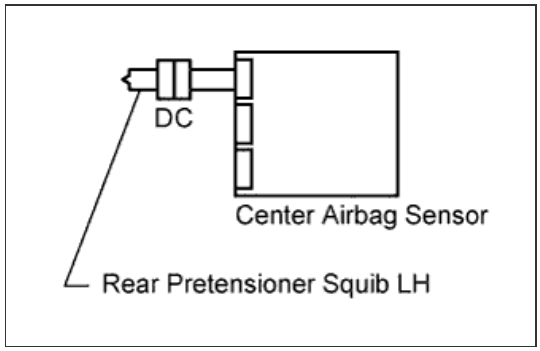

OK:

DTC B1925, B1926, B1927 or B1928 is not output.

HINT:

Codes other than DTC B1925, B1926, B1927 or B1928 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

OK

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1820/55 Short in Side Squib RH Circuit

DTC B1821/55 Open in Side Squib RH Circuit

DTC B1822/55 Short to GND in Side Squib RH Circuit

DTC B1823/55 Short to B+ in Side Squib RH Circuit


for Preparation Click here

DESCRIPTION

The side squib RH circuit consists of the center airbag sensor and the front seat airbag RH.
This circuit instructs the SRS to deploy when deployment conditions are met.
These DTCs are stored when a malfunction is detected in the side squib RH circuit.

DTC Code	DTC Detection Condition	Trouble Area
B1820/55	When one of the following conditions is met: • The center airbag sensor receives a line short circuit signal 5 times in the side squib RH circuit during the primary check. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1821/55	When one of the following conditions is met: • The center airbag sensor receives an open circuit signal in the side squib RH circuit for 2 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1822/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to ground signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly
B1823/55	When one of the following conditions is met: • The center airbag sensor receives a short circuit to B+ signal in the side squib RH circuit for 0.5 seconds. • A side squib RH malfunction. • A center airbag sensor malfunction.	• No. 2 floor wire • Front seat airbag assembly RH (Side squib RH) • Center airbag sensor assembly

WIRING DIAGRAM

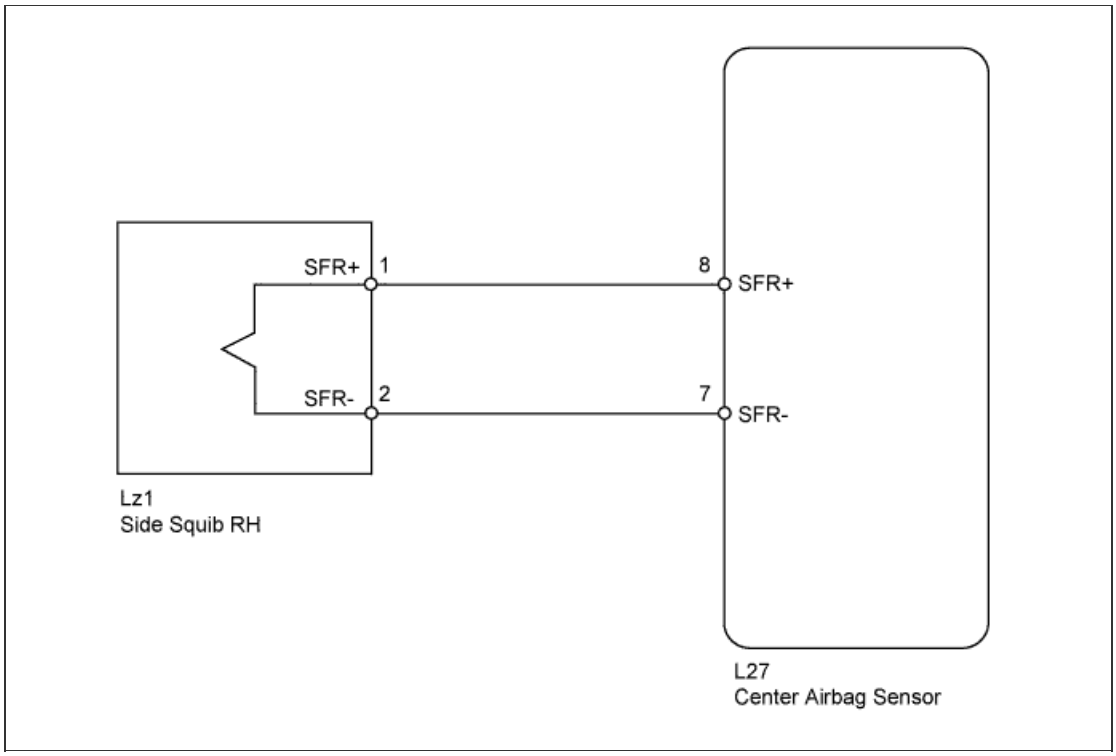

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

HINT:

To perform the simulation method, enter the check mode (signal check) with the intelligent tester (Click here), and then wiggle each connector of the airbag system or drive the vehicle on various type of road (Click here).

1.CHECK FRONT SEAT AIRBAG RH (SIDE SQUIB RH)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the connector from the front seat airbag RH.

d. Connect the red wire side of SST (resistance: 2.1 Ω) to connector C.

CAUTION:


Never connect the tester to the front seat airbag RH (side squib RH) for measurement, as this may lead to a serious injury due to airbag deployment.

NOTICE:

- **Do not forcibly insert SST into the terminals of the connector when connecting SST.**
- **Insert SST straight into the terminals of the connector.**

SST

09843-18061

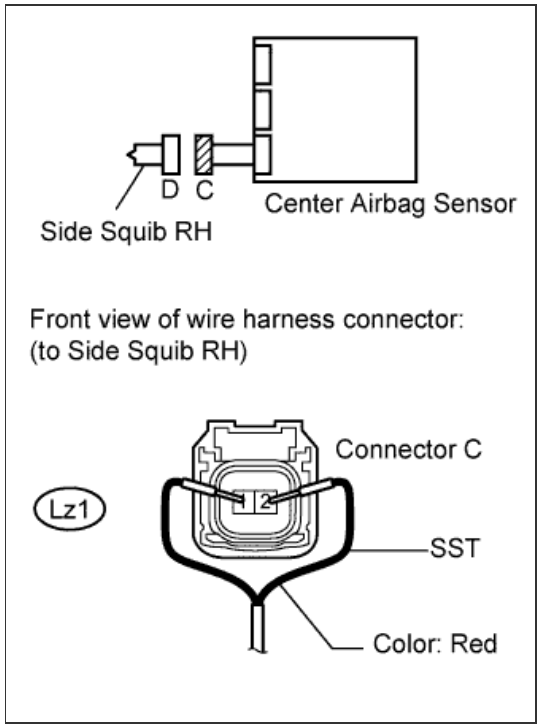

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Clear the DTCs (Click here).

h. Turn the engine switch off.

i. Turn the engine switch on (IG), and wait for at least 60 seconds.

j. Check for DTCs (Click here).

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

Result

Result	Proceed to
OK (for Manual Seat)	A
OK (for Power Seat)	B
NG	C

B	REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)
C	Go to step 2

A

REPLACE FRONT SEAT AIRBAG ASSEMBLY RH (Click here)

2.CHECK NO. 2 FLOOR WIRE (SIDE SQUIB RH CIRCUIT)

a. Turn the engine switch off.


b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect SST from connector C.

d. Disconnect the connectors from the center airbag sensor.

e. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

f. Measure the voltage according to the value(s) in the table below.

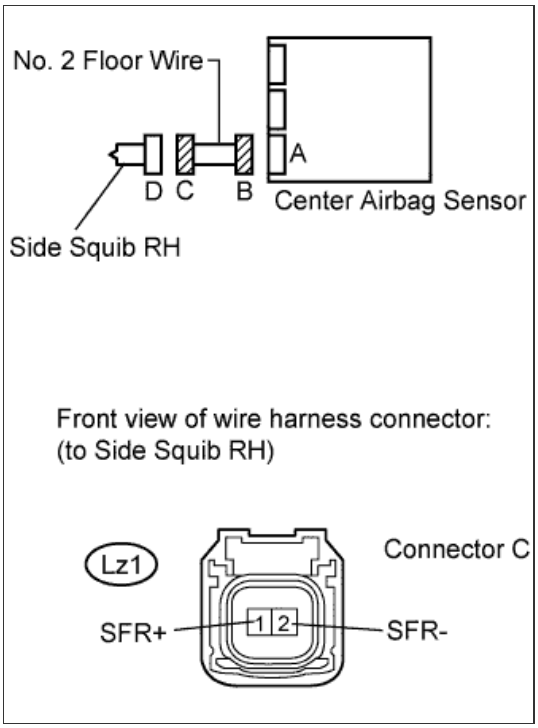

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
Lz1-1 (SFR+) - Body ground	Engine switch on (IG)	Below 1 V
Lz1-2 (SFR-) - Body ground	Engine switch on (IG)	Below 1 V

g. Turn the engine switch off.

h. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	Below 1 Ω

j. Release the activation prevention mechanism built into connector B (Click here).

k. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
Lz1-1 (SFR+) - Lz1-2 (SFR-)	Always	1 MΩ or higher
Lz1-1 (SFR+) - Body ground	Always	1 MΩ or higher
Lz1-2 (SFR-) - Body ground	Always	1 MΩ or higher

NG → REPLACE NO. 2 FLOOR WIRE

OK

3.CHECK CENTER AIRBAG SENSOR

a. Connect the connectors to the front seat airbag RH and the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG), and wait for at least 60 seconds.

d. Clear the DTCs (Click here).

e. Turn the engine switch off.

f. Turn the engine switch on (IG), and wait for at least 60 seconds.

g. Check for DTCs (Click here).

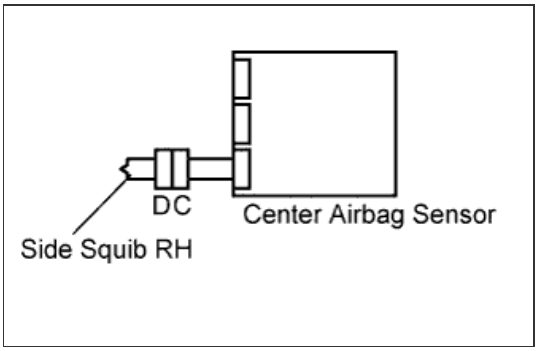

OK:

DTC B1820, B1821, B1822 or B1823 is not output.

HINT:

Codes other than DTC B1820, B1821, B1822 and B1823 may be output at this time, but they are not related to this check.

NG → REPLACE CENTER AIRBAG SENSOR ASSEMBLY (**Click here**)

OK


USE SIMULATION METHOD TO CHECK (**Click here**)

for Preparation Click here

DESCRIPTION

The SRS warning light is located on the combination meter.
When the SRS is normal, the SRS warning light comes on for approximately 6 seconds after the engine switch is turned from off to on (IG), and then goes off automatically.
If there is a malfunction in the SRS, the SRS warning light comes on to inform the driver of a problem.
When terminals TC and CG of the DLC3 are connected, DTCs are output by the blinking of the SRS warning light.
The SRS is equipped with a voltage-increase circuit (DC-DC converter) in the center airbag sensor in case the source voltage drops.
When the battery voltage drops, the voltage-increase circuit (DC-DC converter) functions to increase the voltage of the SRS to normal voltage.
A malfunction in this circuit is not recorded in the center airbag sensor. The SRS warning light automatically goes off when the source voltage returns to normal.
The signal to illuminate the SRS warning light is transmitted from the center airbag sensor to the combination meter through the CAN communication system.

WIRING DIAGRAM

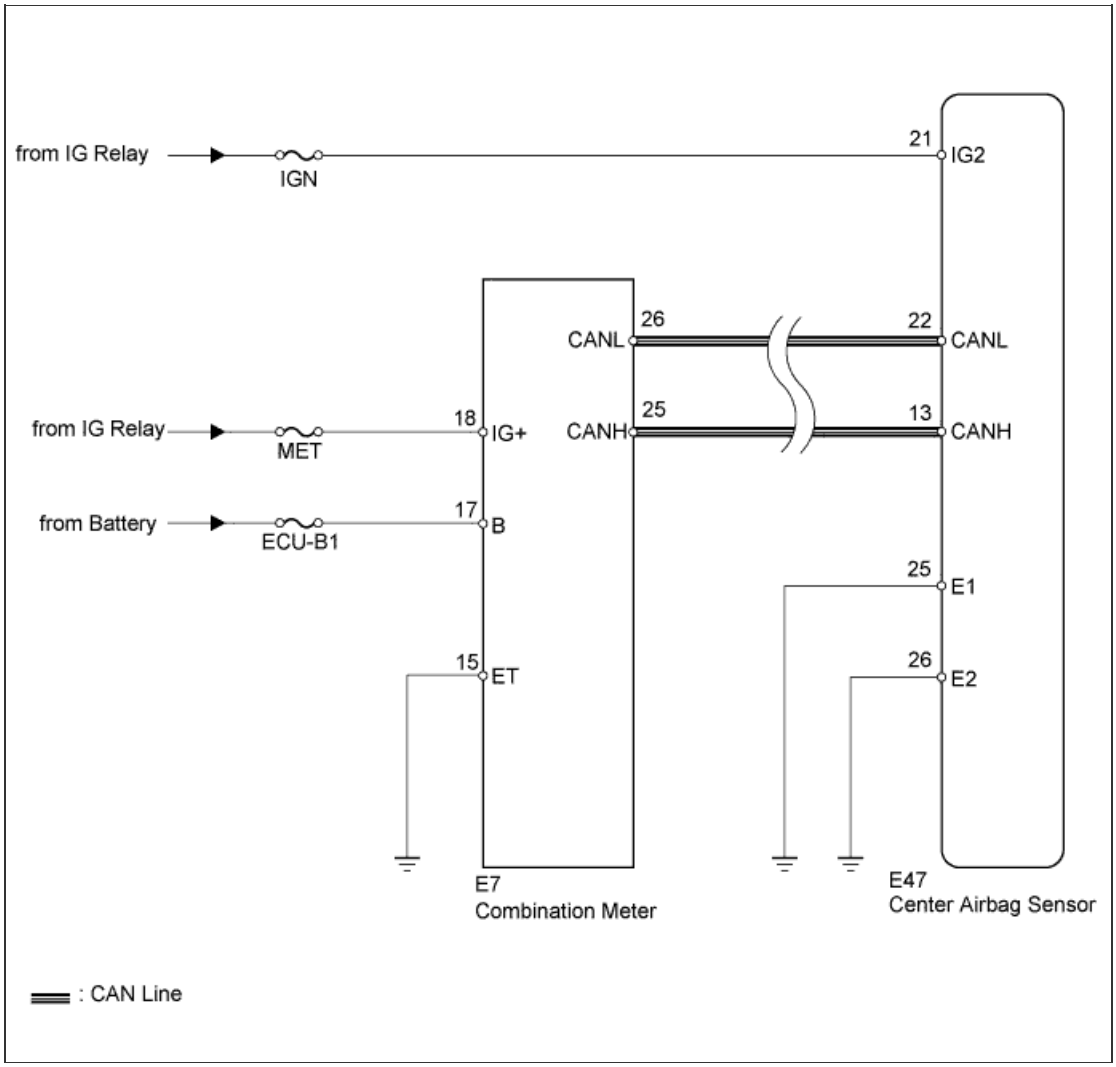

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CAN COMMUNICATION SYSTEM

a. Check if a CAN communication DTC is output.

Result

Result	Proceed to

DTC is not output	A
DTCs are output (for LHD)	B
DTCs are output (for RHD)	C

B → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

C → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

A

2.CHECK BATTERY

a. Measure the voltage of the battery.

Standard Voltage:
11 to 14 V

NG → REPLACE OR RECHARGE BATTERY (Click here)

OK

3.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and combination meter.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF CENTER AIRBAG SENSOR)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG).

d. Operate all the components of the electrical system (defogger, wipers, headlights, heater blower, etc.).

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E47-21 (IG2) - E47-25 (E1)	Engine switch on (IG)	11 to 14 V
E47-21 (IG2) - E47-26 (E2)	Engine switch on (IG)	11 to 14 V

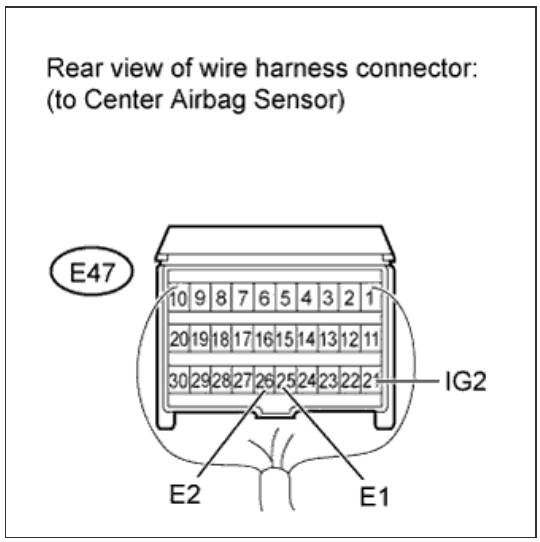

NG → REPLACE INSTRUMENT PANEL WIRE

OK

5.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF COMBINATION METER)

a. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

b. Disconnect the E7 connector from the combination meter.


c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E7-17 (B) - E7-15 (ET)	Always	11 to 14 V
E7-18 (IG+) - E7-17 (B)	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector:
(to Combination Meter)

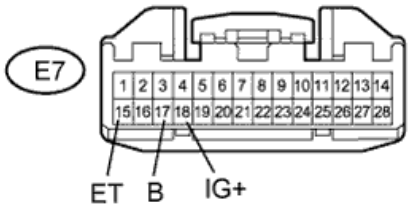

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.CHECK SRS WARNING LIGHT (SHORT TO GROUND)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connector to the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG).

f. Check the SRS warning light condition.

NOTICE:

Make sure that nobody is in the vehicle.

OK:

After the primary check period, the SRS warning light goes off for approximately 10 seconds and then remains on.

HINT:

The primary check period is approximately 6 seconds after the engine switch is turned on (IG).

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK


REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

The SRS warning light is located on the combination meter.
When the SRS is normal, the SRS warning light comes on for approximately 6 seconds after the engine switch is turned from off to on (IG), and then goes off automatically.
If there is a malfunction in the SRS, the SRS warning light comes on to inform the driver of a problem.
When terminals TC and CG of the DLC3 are connected, DTCs are output by the blinking of the SRS warning light.
The SRS is equipped with a voltage-increase circuit (DC-DC converter) in the center airbag sensor in case the source voltage drops.
When the battery voltage drops, the voltage-increase circuit (DC-DC converter) functions to increase the voltage of the SRS to normal voltage.
A malfunction in this circuit is not recorded in the center airbag sensor. The SRS warning light automatically goes off when the source voltage returns to normal.
The signal to illuminate the SRS warning light is transmitted from the center airbag sensor to the combination meter through the CAN communication system.

WIRING DIAGRAM

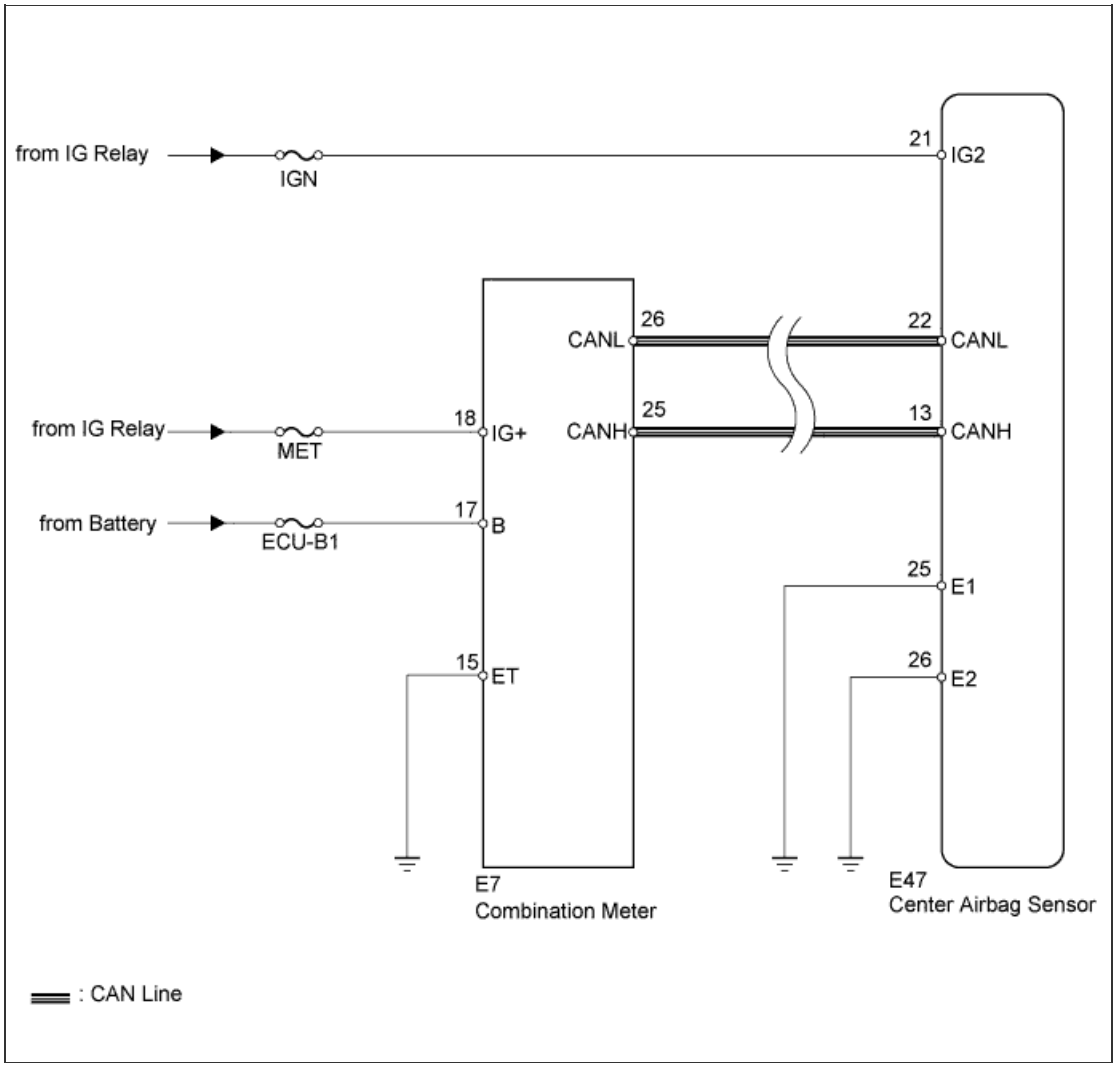

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CAN COMMUNICATION SYSTEM

a. Check if a CAN communication DTC is output.

Result

Result	Proceed to

DTC is not output	A
DTCs are output (for LHD)	B
DTCs are output (for RHD)	C

B → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

C → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

A

2.CHECK BATTERY

a. Measure the voltage of the battery.

Standard Voltage:
11 to 14 V

NG → REPLACE OR RECHARGE BATTERY (Click here)

OK

3.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and combination meter.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF CENTER AIRBAG SENSOR)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG).

d. Operate all the components of the electrical system (defogger, wipers, headlights, heater blower, etc.).

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E47-21 (IG2) - E47-25 (E1)	Engine switch on (IG)	11 to 14 V
E47-21 (IG2) - E47-26 (E2)	Engine switch on (IG)	11 to 14 V

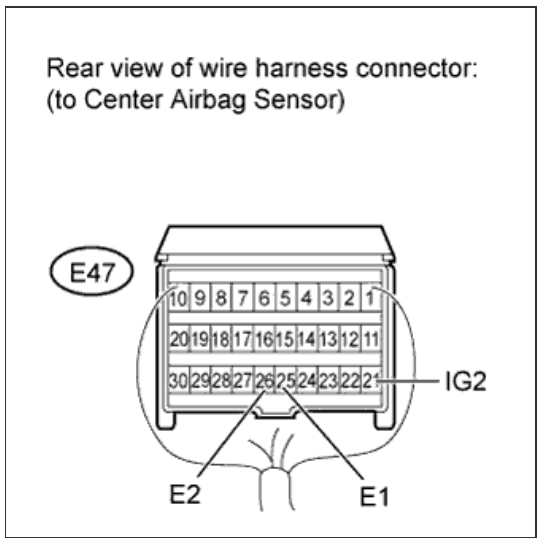

NG → REPLACE INSTRUMENT PANEL WIRE

OK

5.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF COMBINATION METER)

a. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

b. Disconnect the E7 connector from the combination meter.


c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E7-17 (B) - E7-15 (ET)	Always	11 to 14 V
E7-18 (IG+) - E7-17 (B)	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector:
(to Combination Meter)

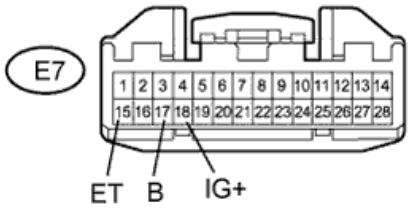

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.CHECK SRS WARNING LIGHT (SHORT TO GROUND)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connector to the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG).

f. Check the SRS warning light condition.

NOTICE:

Make sure that nobody is in the vehicle.

OK:

After the primary check period, the SRS warning light goes off for approximately 10 seconds and then remains on.

HINT:

The primary check period is approximately 6 seconds after the engine switch is turned on (IG).

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK


REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

The SRS warning light is located on the combination meter.
When the SRS is normal, the SRS warning light comes on for approximately 6 seconds after the engine switch is turned from off to on (IG), and then goes off automatically.
If there is a malfunction in the SRS, the SRS warning light comes on to inform the driver of a problem.
When terminals TC and CG of the DLC3 are connected, DTCs are output by the blinking of the SRS warning light.
The SRS is equipped with a voltage-increase circuit (DC-DC converter) in the center airbag sensor in case the source voltage drops.
When the battery voltage drops, the voltage-increase circuit (DC-DC converter) functions to increase the voltage of the SRS to normal voltage.
A malfunction in this circuit is not recorded in the center airbag sensor. The SRS warning light automatically goes off when the source voltage returns to normal.
The signal to illuminate the SRS warning light is transmitted from the center airbag sensor to the combination meter through the CAN communication system.

WIRING DIAGRAM

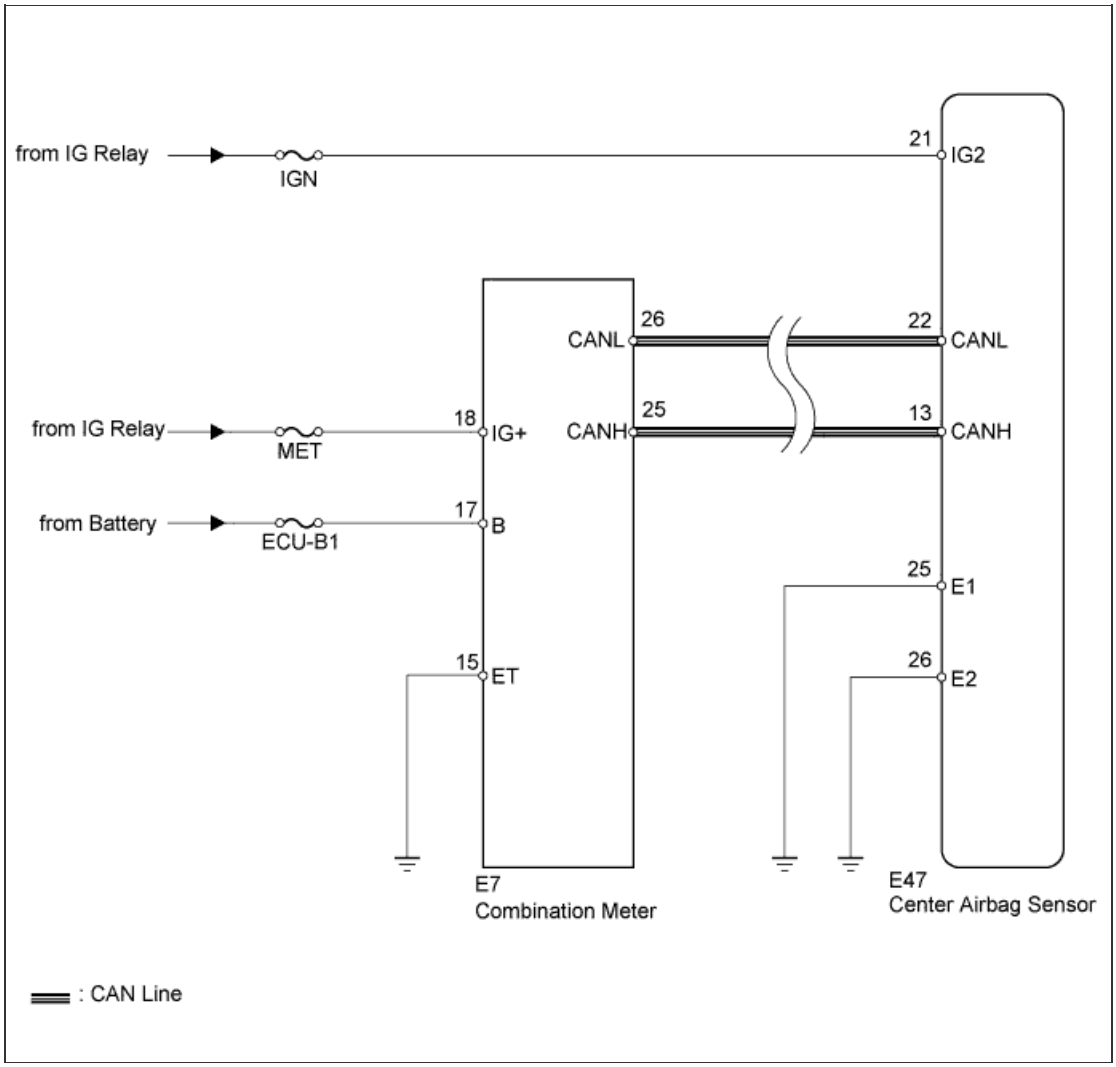

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CAN COMMUNICATION SYSTEM

a. Check if a CAN communication DTC is output.

Result

Result	Proceed to

DTC is not output	A
DTCs are output (for LHD)	B
DTCs are output (for RHD)	C

B → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

C → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

A

2.CHECK BATTERY

a. Measure the voltage of the battery.

Standard Voltage:
11 to 14 V

NG → REPLACE OR RECHARGE BATTERY (Click here)

OK

3.CHECK CONNECTORS

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the center airbag sensor and combination meter.

OK:
The connectors are properly connected.

NG → CONNECT CONNECTORS PROPERLY

OK

4.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF CENTER AIRBAG SENSOR)

a. Disconnect the connectors from the center airbag sensor.

b. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.


c. Turn the engine switch on (IG).

d. Operate all the components of the electrical system (defogger, wipers, headlights, heater blower, etc.).

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E47-21 (IG2) - E47-25 (E1)	Engine switch on (IG)	11 to 14 V
E47-21 (IG2) - E47-26 (E2)	Engine switch on (IG)	11 to 14 V

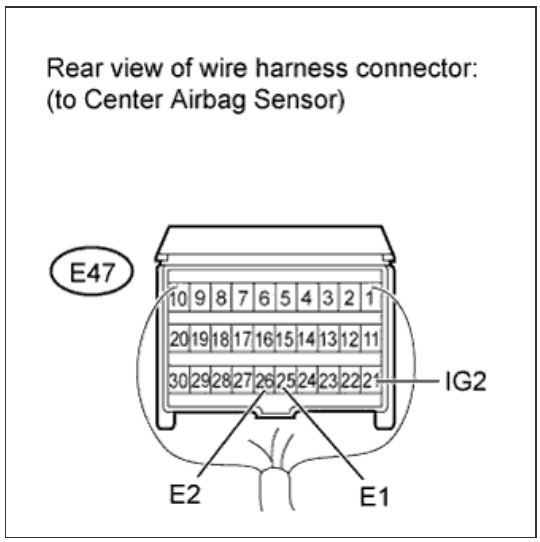

NG → REPLACE INSTRUMENT PANEL WIRE

OK

5.CHECK HARNESS AND CONNECTOR (SOURCE VOLTAGE OF COMBINATION METER)

a. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

b. Disconnect the E7 connector from the combination meter.


c. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E7-17 (B) - E7-15 (ET)	Always	11 to 14 V
E7-18 (IG+) - E7-17 (B)	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector:
(to Combination Meter)

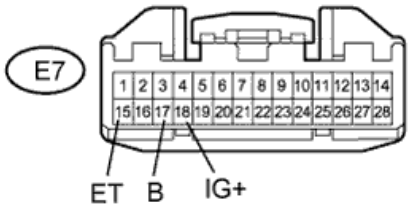

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.CHECK SRS WARNING LIGHT (SHORT TO GROUND)

a. Turn the engine switch off.

b. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connector to the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG).

f. Check the SRS warning light condition.

NOTICE:

Make sure that nobody is in the vehicle.

OK:

After the primary check period, the SRS warning light goes off for approximately 10 seconds and then remains on.

HINT:

The primary check period is approximately 6 seconds after the engine switch is turned on (IG).

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

Refer to "SRS Warning Light Remains ON" (Click here).

WIRING DIAGRAM

Refer to "SRS Warning Light Remains ON" (Click here).

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.C EC BATTERY

a. Measure the voltage of the battery.

Standard Voltage:
11 to 14 V

NG → REPLACE OR REC ARGE BATTERY

OK ↓

2.C EC ONNECTOR

a. Turn the engine switch off.

. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the combination meter.

OK:
The connectors are properl connected.

NG → CONNECT CONNECTOR PROPERLY

OK ↓

3.C EC ARNESS DA CONNECTOR (SOURCE OLTAGE O COMBINATION METER)

a. Turn the engine switch off.

. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the E7 connector from the combination meter.


d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E7-18 (IG+) - E7-17 (B)	Engine switch on (IG)	11 to 14 V
E7-17 (B) - E7-15 (ET)	Always	11 to 14 V

Front view of wire harness connector:
(to Combination Meter)

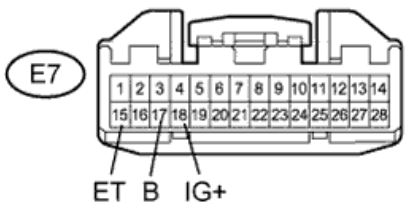

NG → REPAIR OR REPLACE ARNESS OR CONNECTOR

OK

4.C EC SRS WARNING LIGHT (SHORT TO GROUND)

a. Turn the engine switch off.

. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connector to the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG).

f. Check the SRS warning light condition.

NOTICE:

Make sure that nobody is in the vehicle.

OK:

After the primar check period the SRS warning light goes off for approximatel 1 seconds and then remains on.

HINT:

The primary check period is approximately 6 seconds after the engine switch is turned on (IG).

NG → GO TO METER GAUGE SYSTEM (Click here)

OK

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

Refer to "SRS Warning Light Remains ON" (Click here).

WIRING DIAGRAM

Refer to "SRS Warning Light Remains ON" (Click here).

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.C EC BATTERY

a. Measure the voltage of the battery.

Standard Voltage:
11 to 14 V

NG → REPLACE OR REC ARGE BATTERY

OK ↓

2.C EC ONNECTOR

a. Turn the engine switch off.

. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Check that the connectors are properly connected to the combination meter.

OK:
The connectors are properl connected.

NG → CONNECT CONNECTOR PROPERLY

OK ↓

3.C EC ARNESS DA CONNECTOR (SOURCE OLTAGE O COMBINATION METER)

a. Turn the engine switch off.

. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Disconnect the E7 connector from the combination meter.


d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E7-18 (IG+) - E7-17 (B)	Engine switch on (IG)	11 to 14 V
E7-17 (B) - E7-15 (ET)	Always	11 to 14 V

Front view of wire harness connector:
(to Combination Meter)

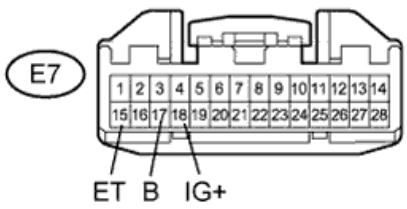

NG → REPAIR OR REPLACE ARNESS OR CONNECTOR

OK

4.C EC SRS WARNING LIGHT (SHORT TO GROUND)

a. Turn the engine switch off.

. Disconnect the cable from the negative (-) battery terminal, and wait for at least 90 seconds.

c. Connect the connector to the combination meter.

d. Connect the cable to the negative (-) battery terminal, and wait for at least 2 seconds.

e. Turn the engine switch on (IG).

f. Check the SRS warning light condition.

NOTICE:

Make sure that nobody is in the vehicle.

OK:

After the primar check period the SRS warning light goes off for approximatel 1 seconds and then remains on.

HINT:

The primary check period is approximately 6 seconds after the engine switch is turned on (IG).

NG → GO TO METER GAUGE SYSTEM (Click here)

OK

REPLACE CENTER AIRBAG SENSOR ASSEMBLY (Click here)

for Preparation Click here


DESCRIPTION


DTC output mode is set by connecting terminals TC and CG of the DLC3.
DTCs are output by the blinking of the SRS warning light.

HINT:

- **When each warning light stays blinking a ground short in the wiring of ter inal TC of the D C3 or an internal ground short in each ECU is suspected.**
- **A DTC output ode signal is trans itted through the CAN co unication syste to each ECU including the center airbag sensor. Thus when all syste s do not enter DTC output ode there ay be an ECM alfunction.**

WIRING DIAGRAM

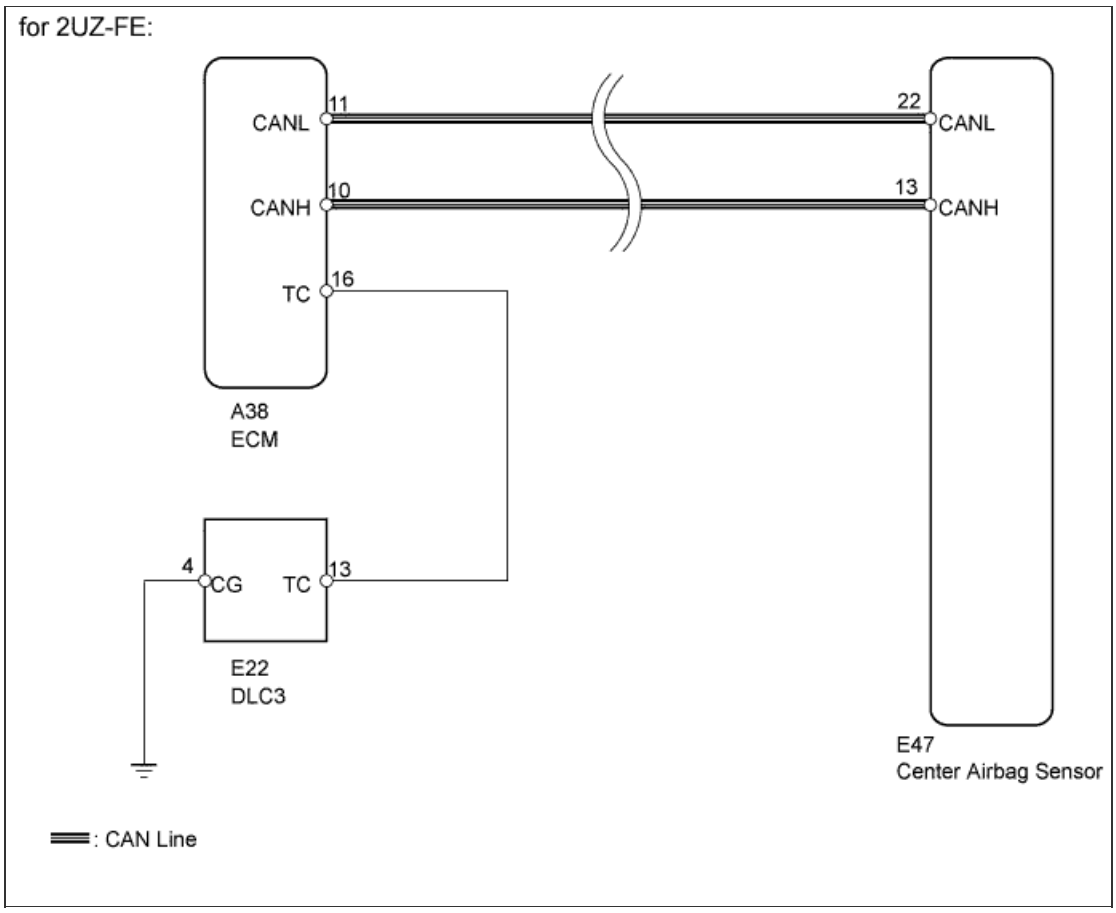

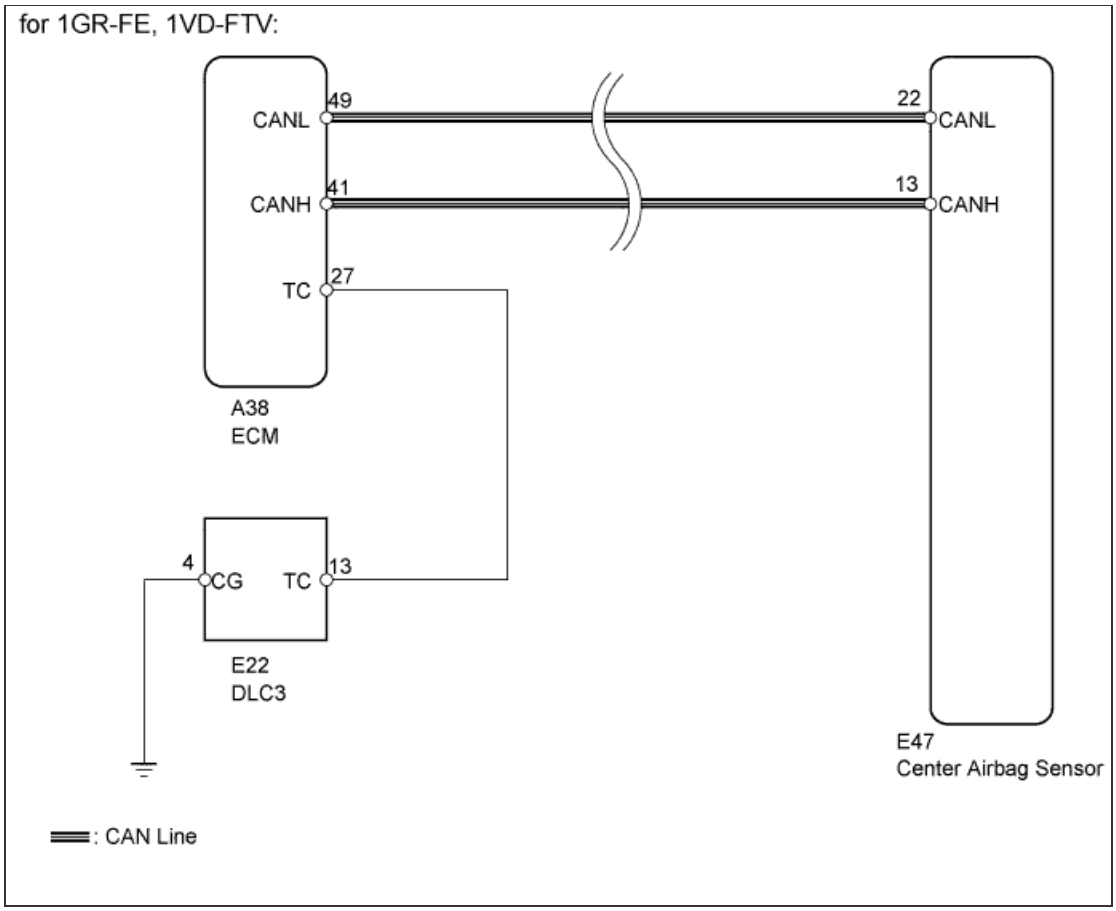

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CAN COMMUNICATION SYSTEM

a. Check if a CAN communication system DTC is output.

Result

Result	Proceed to
DTC is not output	A
DTC is output (for LHD)	B
DTC is output (for RHD)	C

B → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

C → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

A

2.CHECK HARNESS AND CONNECTOR (D C3 - ECM)

a. Turn the engine switch off.

b. Disconnect the A38 connector from the ECM.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

for 2U E:

Tester Connection	Condition	Specified Condition
E22-13 (TC) - A38-16 (TC)	Always	Below 1 Ω

for 1GR-FE D: T

Tester Connection	Condition	Specified Condition
E22-13 (TC) - A38-27 (TC)	Always	Below 1 Ω

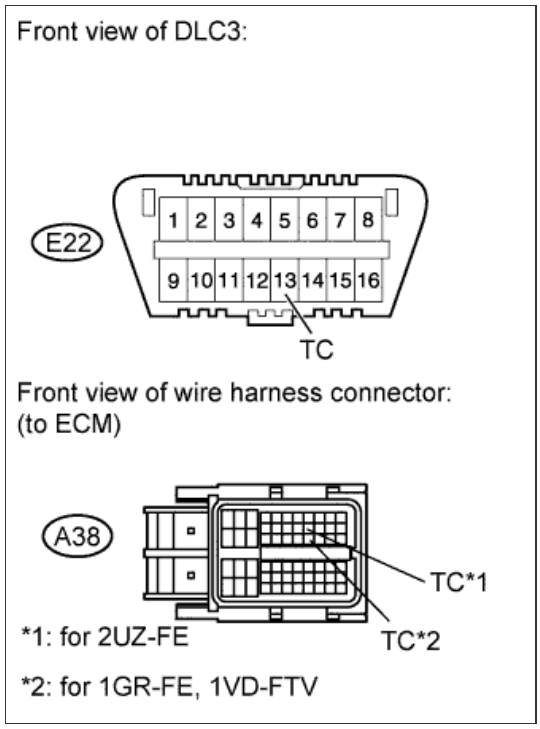

NG → REPAIR OR REP GE HARNESS OR CONNECTOR


OK

3.CHECK HARNESS AND CONNECTOR (D C3 - BODY GROUND)

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E22-4 (CG) - Body ground	Always	Below 1 Ω

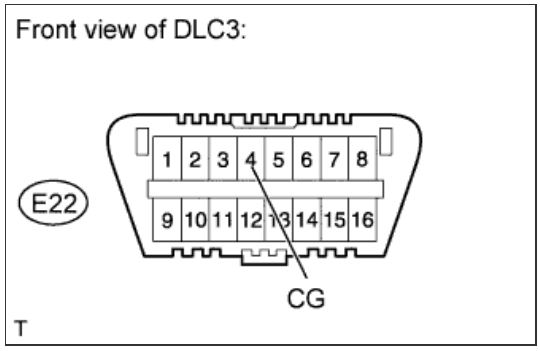

NG → REPAIR OR REP GE HARNESS OR CONNECTOR

OK

4.CHECK HARNESS AND CONNECTOR (TC OF ECM - BODY GROUND)

a. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

for 2U E:

Tester Connection	Condition	Specified Condition
A38-16 (TC) - Body ground	Always	1 MΩ or higher

for 1GR-FE D: T

Tester Connection	Condition	Specified Condition
A38-27 (TC) - Body ground	Always	1 MΩ or higher

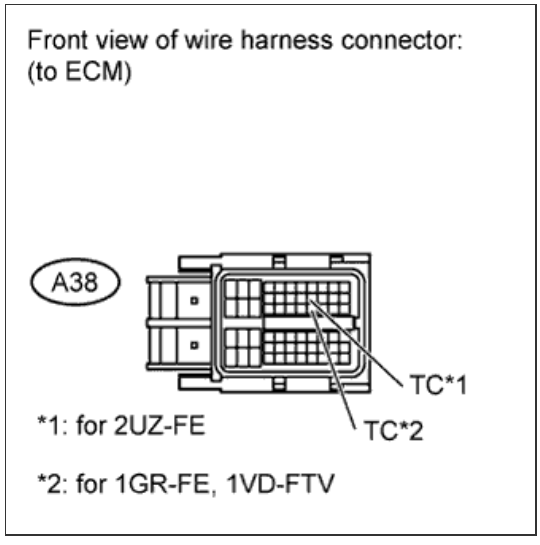

NG

REPAIR OR REP GE HARNESS OR CONNECTOR OR EACH ECU

OK

REP GE CENTER AIRBAG SENSOR ASSEMB Y(Click here)

for Preparation Click here


DESCRIPTION


DTC output mode is set by connecting terminals TC and CG of the DLC3.
DTCs are output by the blinking of the SRS warning light.

HINT:

- **When each warning light stays blinking a ground short in the wiring of ter inal TC of the D C3 or an internal ground short in each ECU is suspected.**
- **A DTC output ode signal is trans itted through the CAN co unication syste to each ECU including the center airbag sensor. Thus when all syste s do not enter DTC output ode there ay be an ECM alfunction.**

WIRING DIAGRAM

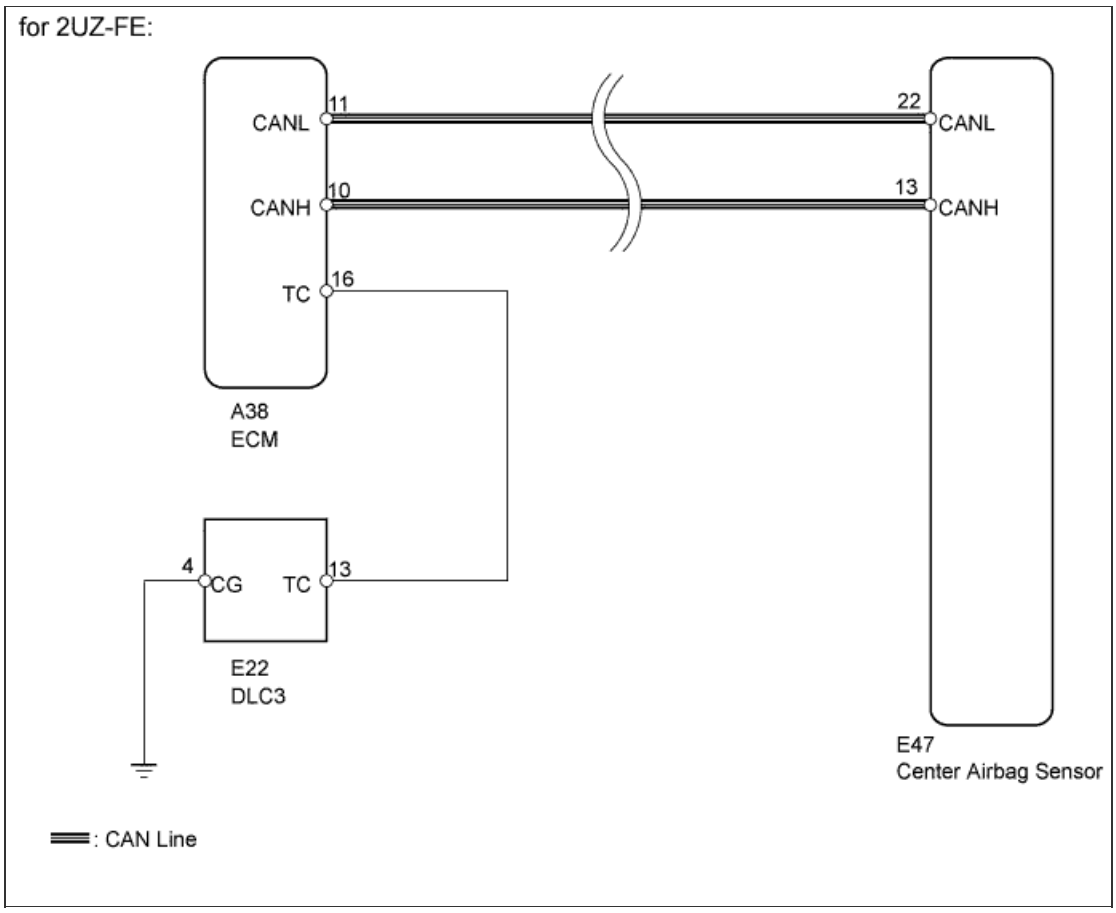

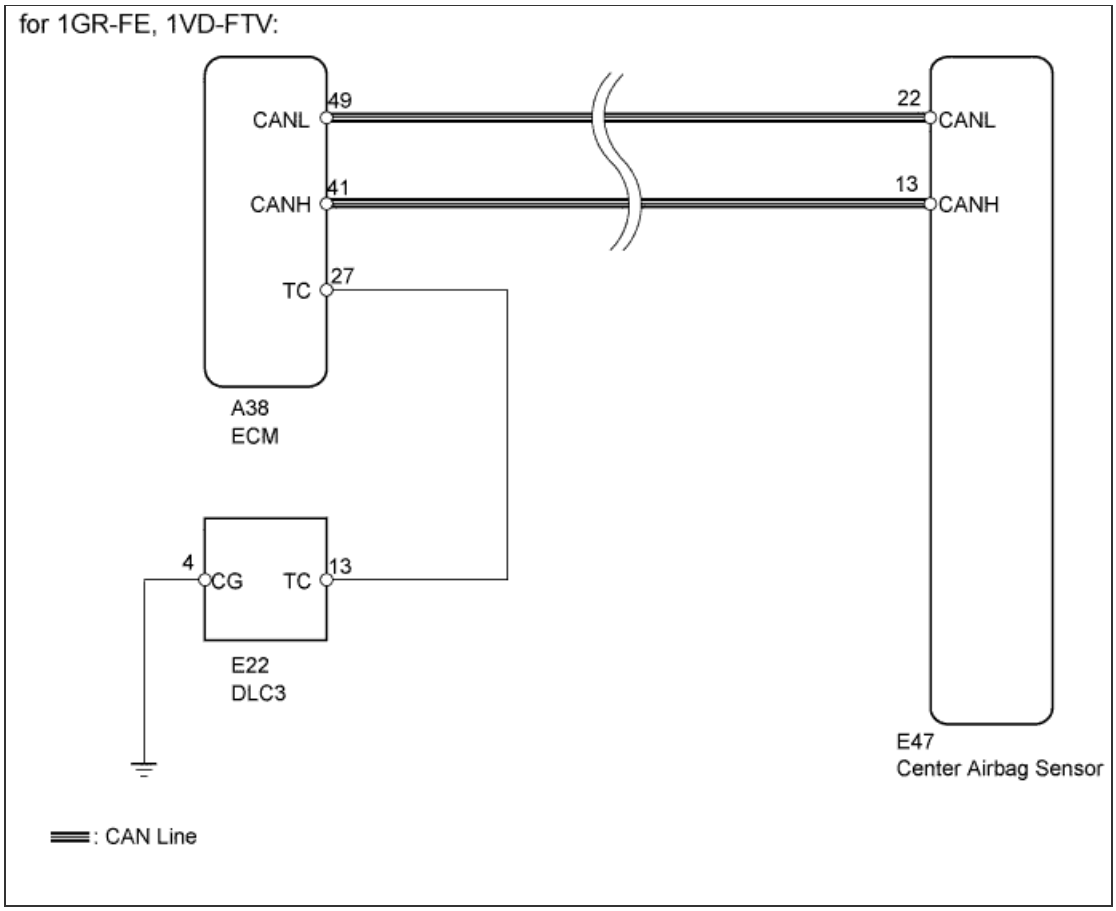

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CAN COMMUNICATION SYSTEM

a. Check if a CAN communication system DTC is output.

Result

Result	Proceed to
DTC is not output	A
DTC is output (for LHD)	B
DTC is output (for RHD)	C

B → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

C → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

A

2.CHECK HARNESS AND CONNECTOR (D C3 - ECM)

a. Turn the engine switch off.

b. Disconnect the A38 connector from the ECM.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

for 2U E:

Tester Connection	Condition	Specified Condition
E22-13 (TC) - A38-16 (TC)	Always	Below 1 Ω

for 1GR-FE D: T

Tester Connection	Condition	Specified Condition
E22-13 (TC) - A38-27 (TC)	Always	Below 1 Ω

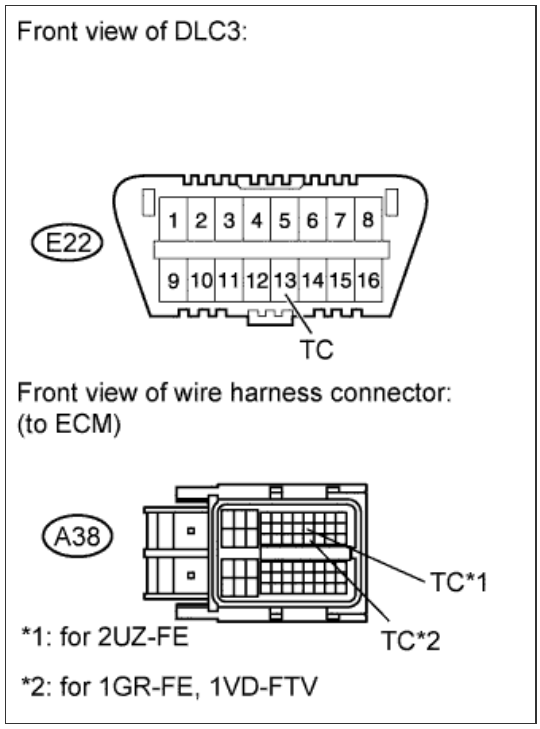

NG → REPAIR OR REP GE HARNESS OR CONNECTOR


OK

3.CHECK HARNESS AND CONNECTOR (D C3 - BODY GROUND)

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E22-4 (CG) - Body ground	Always	Below 1 Ω

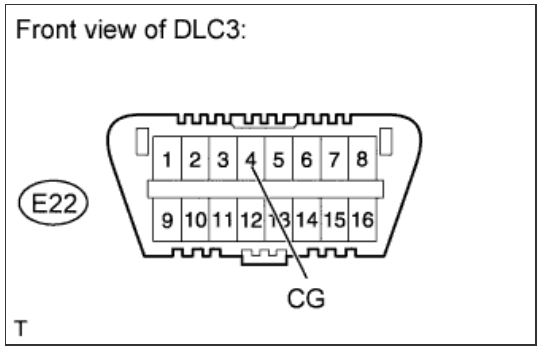

NG → REPAIR OR REP GE HARNESS OR CONNECTOR

OK

4.CHECK HARNESS AND CONNECTOR (TC OF ECM - BODY GROUND)

a. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

for 2U E:

Tester Connection	Condition	Specified Condition
A38-16 (TC) - Body ground	Always	1 MΩ or higher

for 1GR-FE D: T

Tester Connection	Condition	Specified Condition
A38-27 (TC) - Body ground	Always	1 MΩ or higher

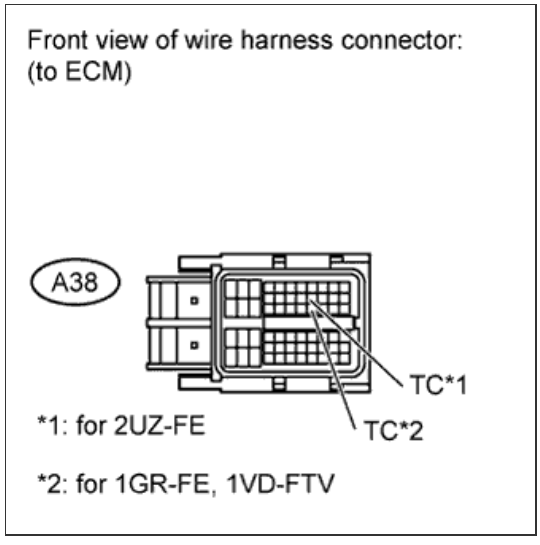

NG

REPAIR OR REP GE HARNESS OR CONNECTOR OR EACH ECU

OK

REP GE CENTER AIRBAG SENSOR ASSEMB Y(Click here)

for Preparation Click here


DESCRIPTION


DTC output mode is set by connecting terminals TC and CG of the DLC3.
DTCs are output by the blinking of the SRS warning light.

HINT:

- **When each warning light stays blinking a ground short in the wiring of ter inal TC of the D C3 or an internal ground short in each ECU is suspected.**
- **A DTC output ode signal is trans itted through the CAN co unication syste to each ECU including the center airbag sensor. Thus when all syste s do not enter DTC output ode there ay be an ECM alfunction.**

WIRING DIAGRAM

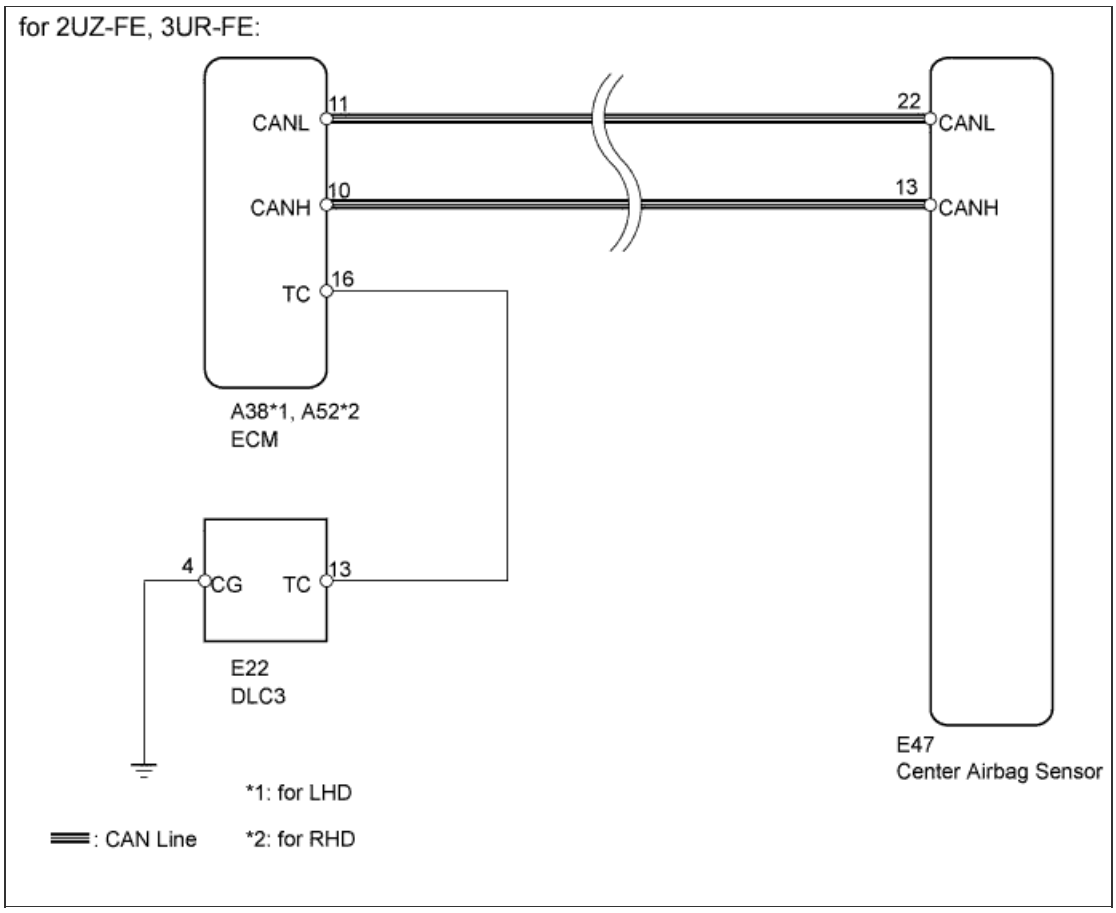

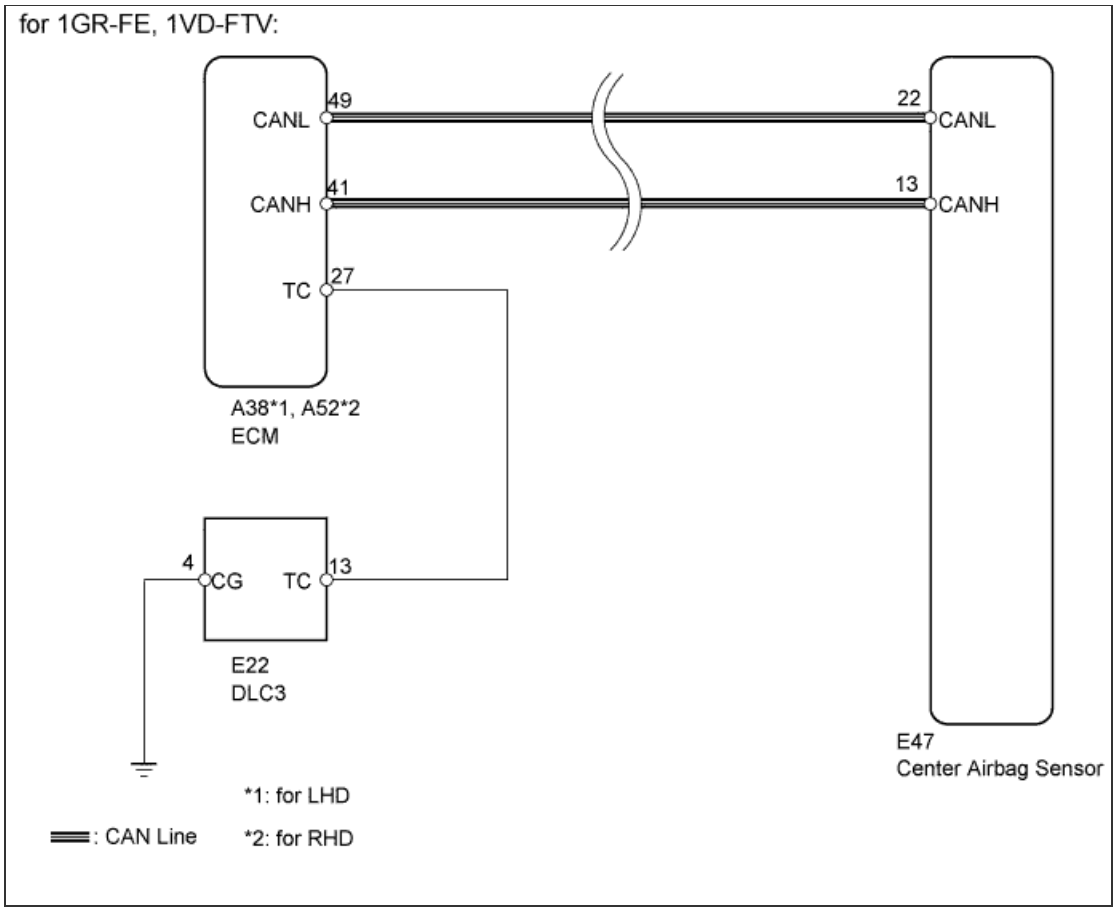

INSPECTION PROCEDURE

NOTICE:

When disconnecting the cable from the negative (-) battery terminal while performing repairs, some systems need to be initialized after the cable is reconnected (Click here).

1.CHECK CAN COMMUNICATION SYSTEM

a. Check if a CAN communication system DTC is output.

Result

Result	Proceed to
DTC is not output	A
DTC is output (for LHD)	B
DTC is output (for RHD)	C

B → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

C → REPAIR CIRCUITS INDICATED BY OUTPUT DTCS (Click here)

A

2.CHECK HARNESS AND CONNECTOR (D C3 - ECM)

a. Turn the engine switch off.

b. Disconnect the A38 connector from the ECM.

c. for LHD:

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

for 2U E	R	E

Tester Connection	Condition	Specified Condition
E22-13 (TC) - A38-16 (TC)	Always	Below 1 Ω

for 1GR-FE D: T

Tester Connection	Condition	Specified Condition
E22-13 (TC) - A38-27 (TC)	Always	Below 1 Ω

d. for RHD:

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

for 2U E R E

Tester Connection	Condition	Specified Condition
E22-13 (TC) - A52-16 (TC)	Always	Below 1 Ω

for 1GR-FE D: T

Tester Connection	Condition	Specified Condition
E22-13 (TC) - A52-27 (TC)	Always	Below 1 Ω

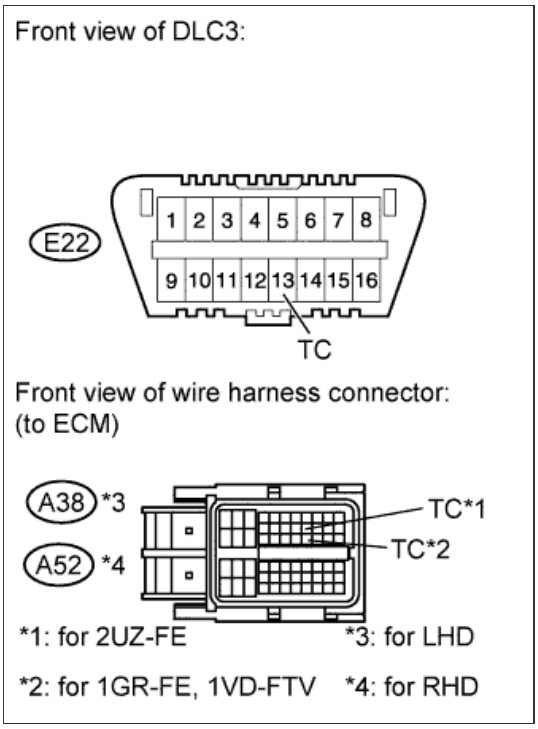

NG → REPAIR OR REP GE HARNESS OR CONNECTOR


OK

3.CHECK HARNESS AND CONNECTOR (D C3 - BODY GROUND)

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E22-4 (CG) - Body ground	Always	Below 1 Ω

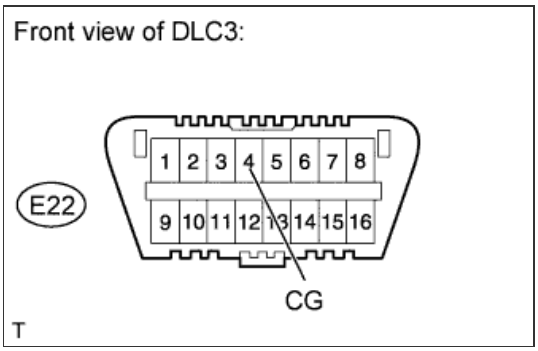

NG → REPAIR OR REP GE HARNESS OR CONNECTOR

OK

4.CHECK HARNESS AND CONNECTOR (TC OF ECM - BODY GROUND)

a. for LHD:

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

for 2U E R E

Tester Connection	Condition	Specified Condition
A38-16 (TC) - Body ground	Always	1 MΩ or higher

for 1GR-FE D: T

Tester Connection	Condition	Specified Condition
A38-27 (TC) - Body ground	Always	1 MΩ or higher

b. for RHD:

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


for 2U E R E

Tester Connection	Condition	Specified Condition
A52-16 (TC) - Body ground	Always	1 MΩ or higher

for 1GR-FE D: T

Tester Connection	Condition	Specified Condition
A52-27 (TC) - Body ground	Always	1 MΩ or higher

Front view of wire harness connector: (to ECM)

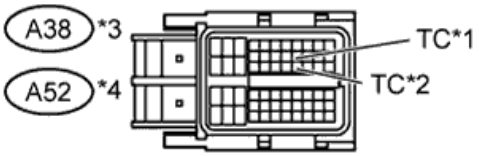


*1: for 2UZ-FE *3: for LHD


*2: for 1GR-FE, 1VD-FTV *4: for RHD

NG → REPAIR OR REP GE HARNESS OR CONNECTOR OR EACH ECU

OK → REP GE CENTER AIRBAG SENSOR ASSEMB Y(Click here)

for Preparation Click here

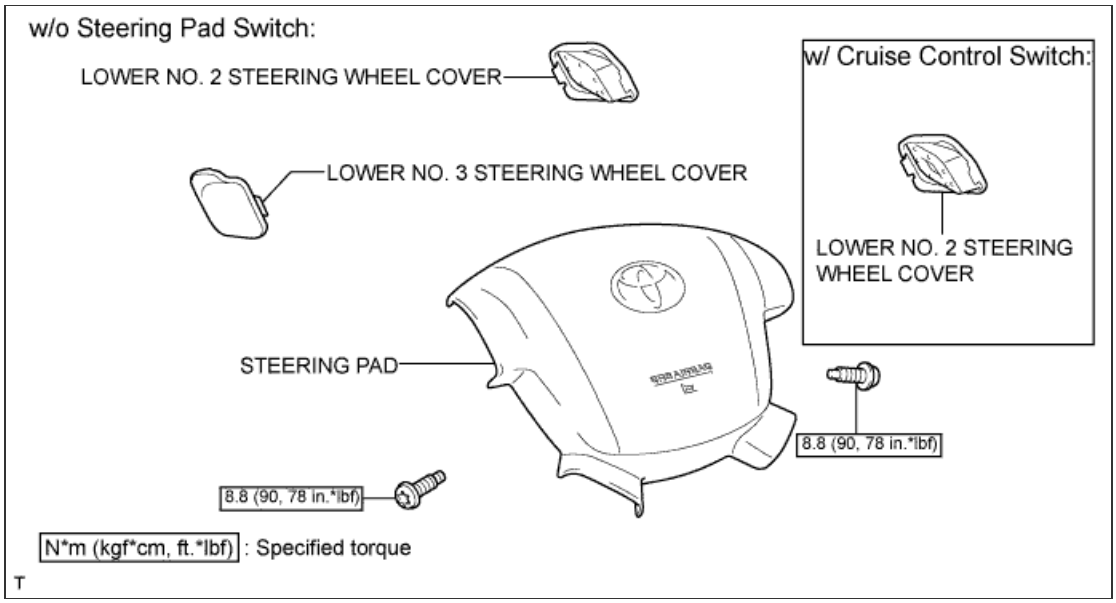

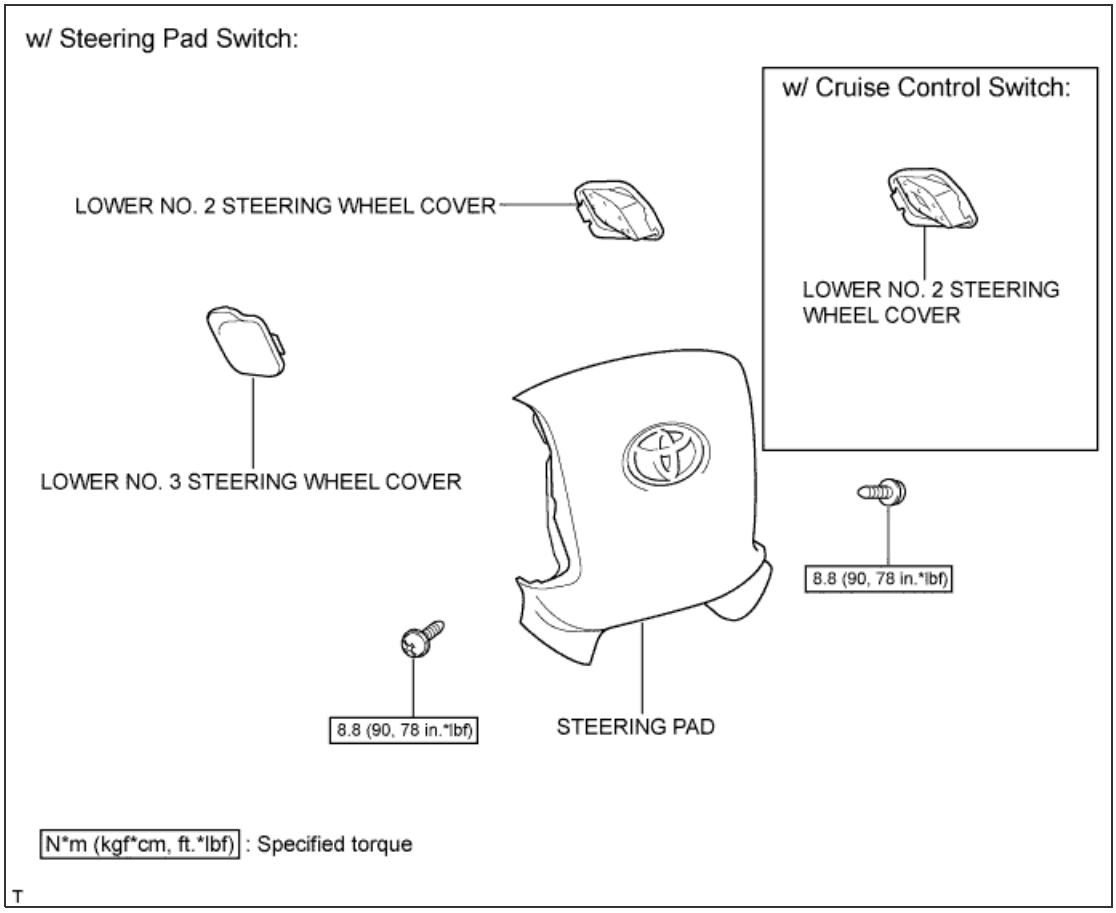


for Preparation Click here

1. CHECK STEERING PAD (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

b. With the steering pad installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the steering pad with a new one:
Cuts, minute cracks or marked discoloration on the steering pad top surface or in the grooved portion.

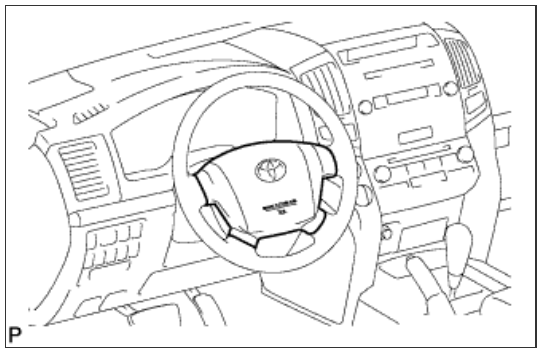

2. CHECK STEERING PAD (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)


a. Perform a diagnostic system check (Click here).

b. With the steering pad removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the steering pad or steering wheel with a new one:

- Cuts, minute cracks or marked discoloration on the steering pad top surface or in the grooved portion.
- Cracks or other damage to the connectors.
- Deformation of the steering pad contact plate.
- Deformation of the steering wheel.
- There should be no interference between the steering pad and steering wheel, and the clearance should be uniform all the way around when the new steering pad is installed on the steering wheel.

CAUTION:

For removal and installation procedures of the steering pad, be sure to follow the correct procedure.

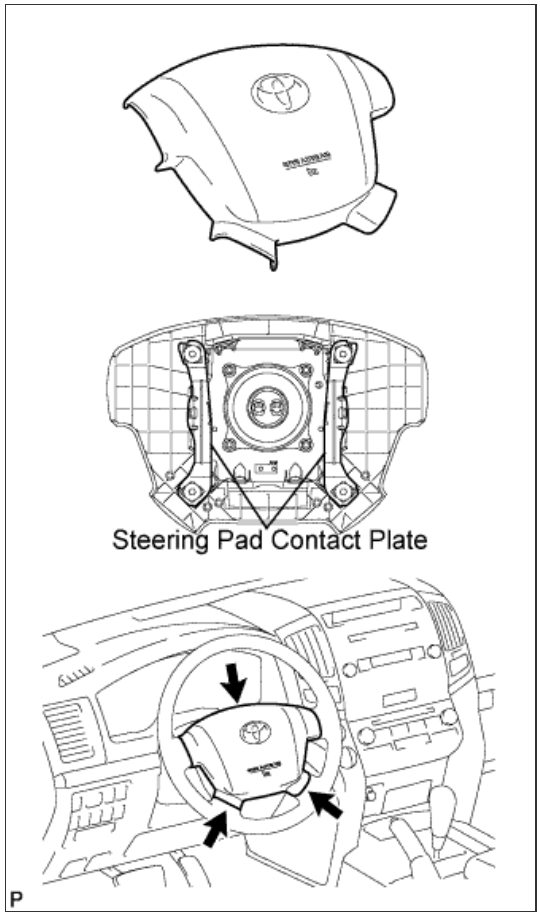

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


2. REMOVE LOWER NO. STEERING WHEEL COVER

a. Detach the 2 claws and remove the steering wheel cover.

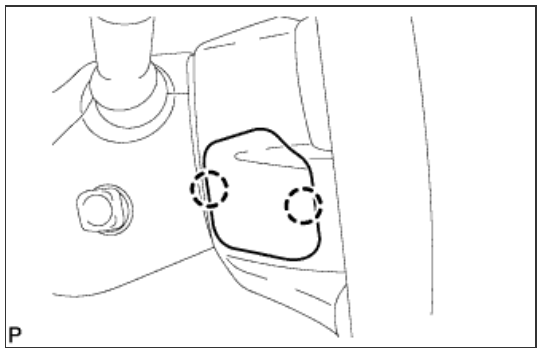

REMOVE LOWER NO. 2 STEERING WHEEL COVER


a. Detach the 2 claws and remove the steering wheel cover.

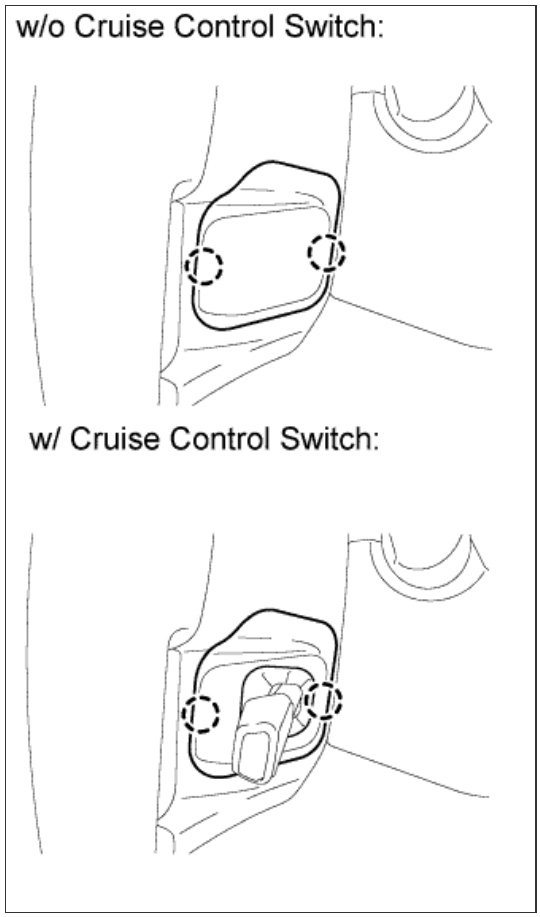


REMOVE STEERING PAD


a. Using a T30 R socket wrench, loosen the 2 screws ntil the groove along the screw circ mference catches on the screw case.

w/o Steering Pad Switch:

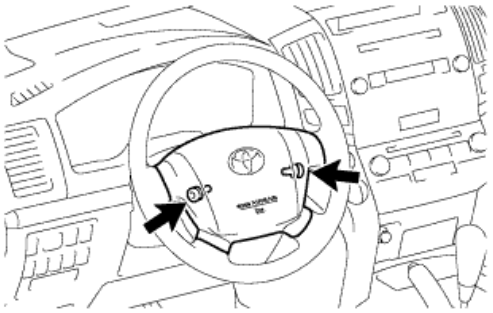

w/ Steering Pad Switch:

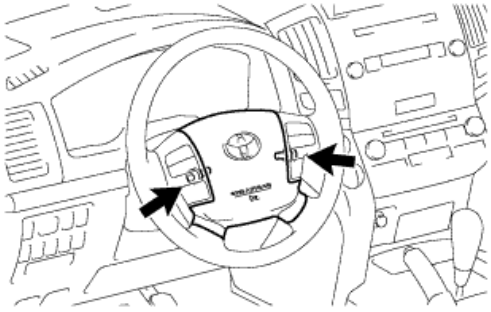

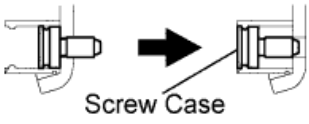

b. P lb the steering ad from the steering wheel, as shown in the ill stration. Then s rt the steering ad with one hand.

NOTICE:


When removing the steering ad, do not the airbag wire harness.

c. Disconnect the horn connector.

d. Disconnect the 2 connectors and remove the steering ad.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

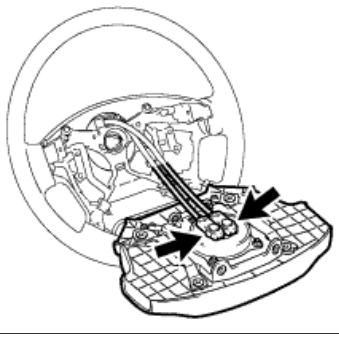

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


2. REMOVE LOWER NO. STEERING WHEEL COVER

a. Detach the 2 claws and remove the steering wheel cover.

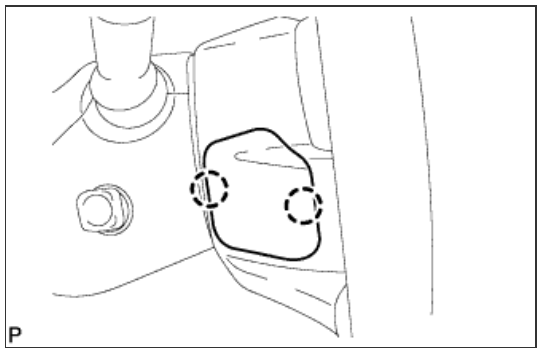

REMOVE LOWER NO. 2 STEERING WHEEL COVER


a. Detach the 2 claws and remove the steering wheel cover.

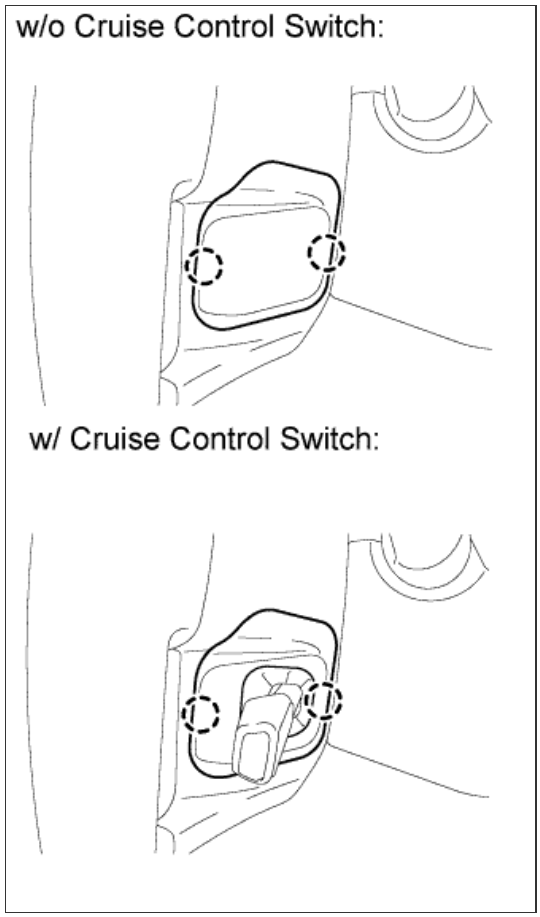


REMOVE STEERING PAD


a. Using a T30 socket wrench, loosen the 2 screws ntil the groove along the screw circ mference catches on the screw case.

w/o Steering Pad Switch:

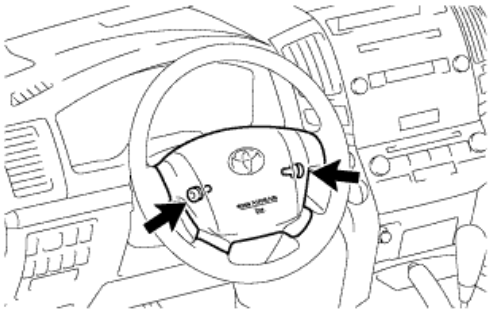

w/ Steering Pad Switch:

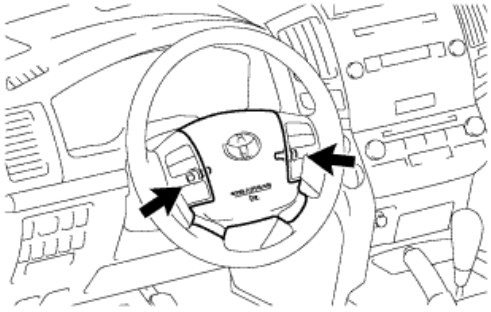

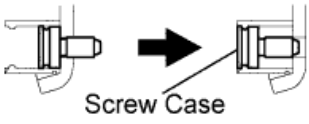

b. P lb the steering ad from the steering wheel, as shown in the ill stration. Then s rt the steering ad with one hand.

NOTICE:


When removing the steering ad, do not the airbag wire harness.

c. Disconnect the horn connector.

d. Disconnect the 2 connectors and remove the steering ad.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

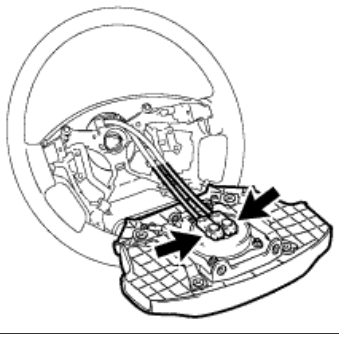

for Preparation Click here

1. INSTALL STEERING PAD

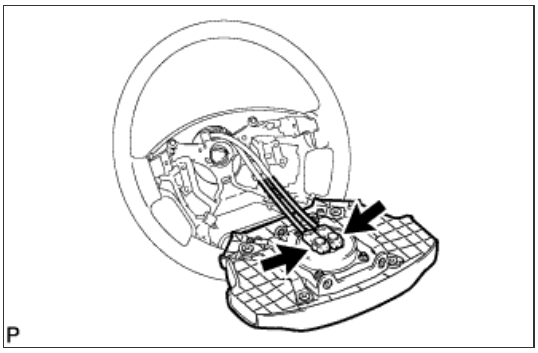

a. Support the steering pad with one hand.

b. Connect the 2 connectors to the steering pad.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.


c. Connect the horn connector.

d. Confirm that the circumference groove of the "TORX" screw fits in the screw case, and place the steering pad onto the steering wheel.

e. Using a T30 "TORX" socket wrench, tighten the 2 screws.

Torque:
8.8 N*m{ 90 kgf*cm , 78 in.*lbf }


2. INSTALL LOWER NO. 3 STEERING WHEEL COVER

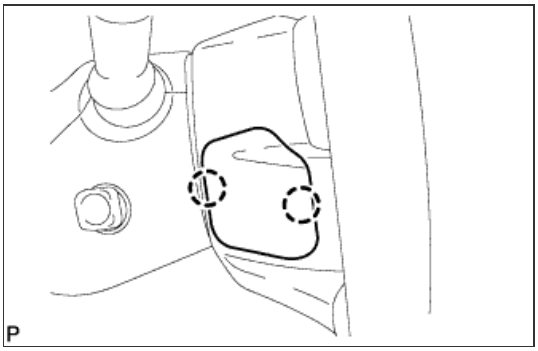

a. Attach the 2 claws to install the cover.

3. INSTALL LOWER NO. 2 STEERING WHEEL COVER

a. Attach the 2 claws to install the cover.

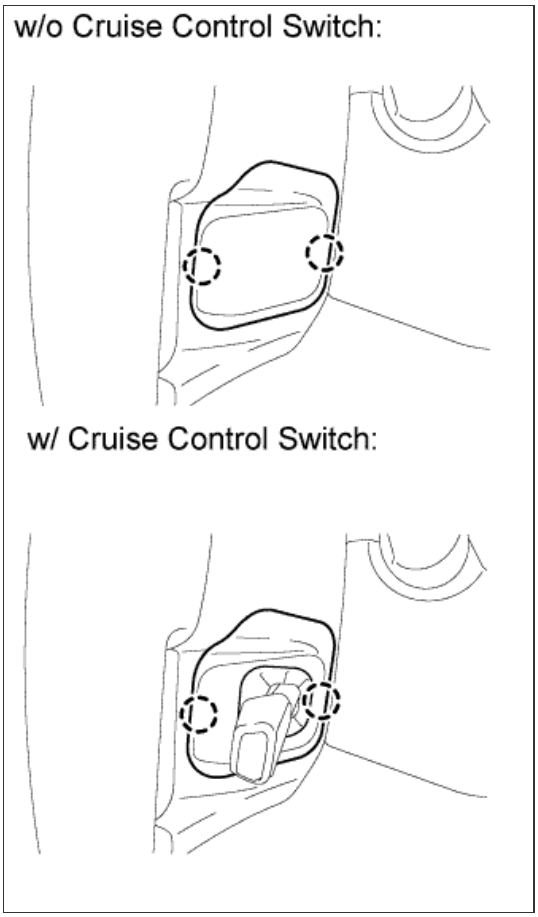

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

5. INSPECT STEERING PAD

a. With the steering pad installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the steering pad with a new one:
Cuts, minute cracks or marked discoloration on the steering pad top surface or in the grooved portion.

b. Make sure that the horn sounds.

HINT:


If the horn does not sound, inspect the horn system.

6. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

1. INSTALL STEERING PAD

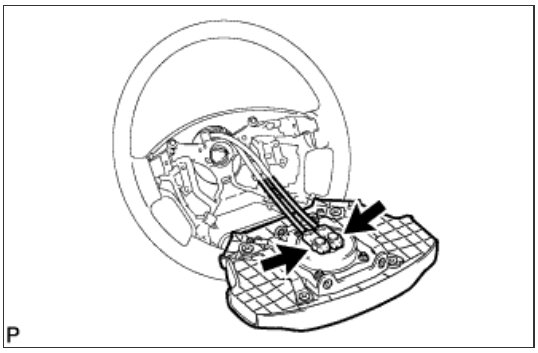

a. Support the steering pad with one hand.

b. Connect the 2 connectors to the steering pad.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.


c. Connect the horn connector.

d. Confirm that the circumference groove of the "TORX" screw fits in the screw case, and place the steering pad onto the steering wheel.

e. Using a T30 "TORX" socket wrench, tighten the 2 screws.

Torque:
8.8 N*m{ 90 kgf*cm , 78 in.*lbf }


2. INSTALL LOWER NO. 3 STEERING WHEEL COVER

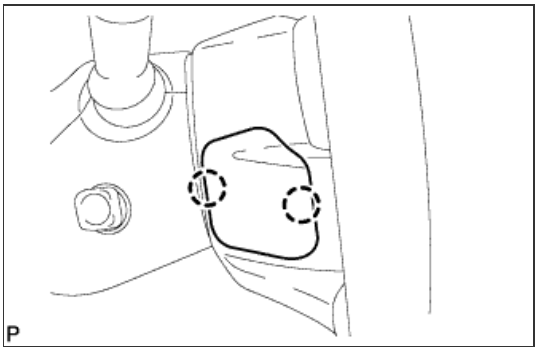

a. Attach the 2 claws to install the cover.

3. INSTALL LOWER NO. 2 STEERING WHEEL COVER

a. Attach the 2 claws to install the cover.

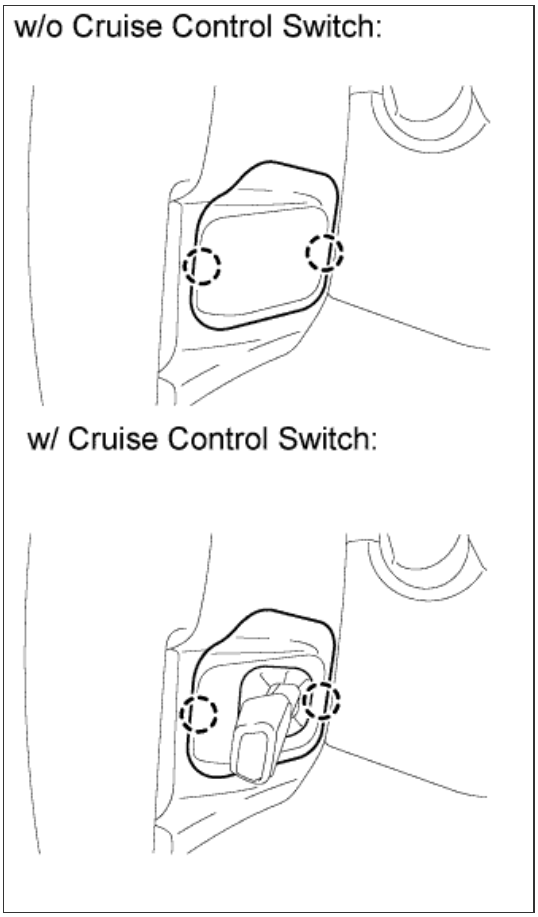

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

5. INSPECT STEERING PAD

a. With the steering pad installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the steering pad with a new one:
Cuts, minute cracks or marked discoloration on the steering pad top surface or in the grooved portion.

b. Make sure that the horn sounds.

HINT:

If the horn does not sound, inspect the horn system.

6. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a steering pad that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the steering pad.**
- **The steering pad becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a steering pad with a deployed airbag.**
- **Do not apply water, etc. to a steering pad with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF STEERING PAD (WHEN INSTALLED IN VEHICLE)

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST.


SST
09082-00700

CAUTION:

When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool).

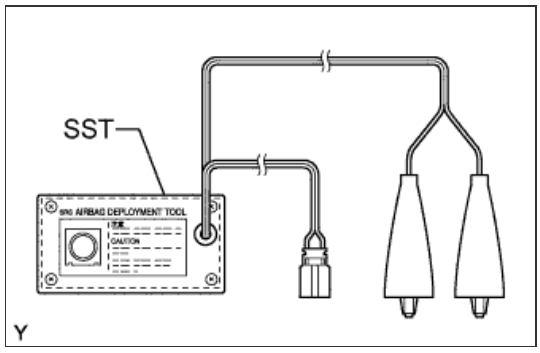

i. Connect SST to the battery. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

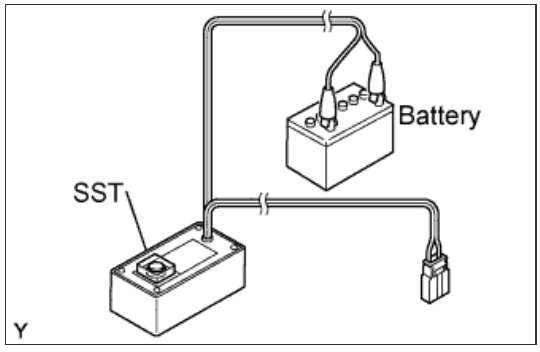


ii. Check the function of SST. Press SST activation switch, and check that the LED of SST activation switch comes on.

CAUTION:

- **Do not connect SST connector (yellow colored) to the airbag.**
- **If the LED comes on when the activation switch is not being pressed, SST malfunction is possible, so**

replace SST with a new one.

iii. Disconnect SST from the battery.

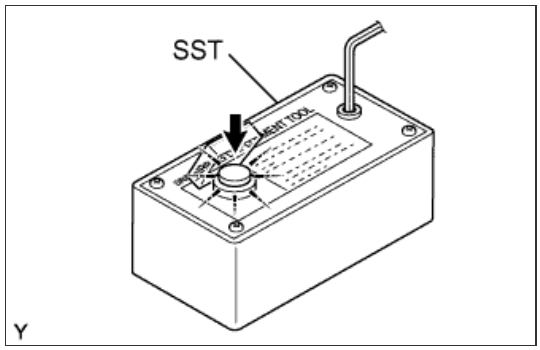

b. Read the precaution (Click here).

c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

d. Remove the steering column cover lower.

i. While turning the steering wheel to the right and left, remove the 3 screws and steering column cover lower.

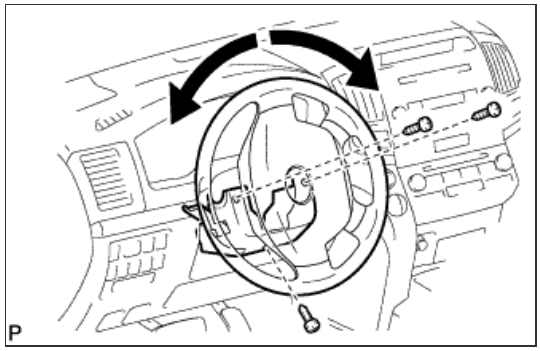

e. Install SST.


CAUTION:

Check that there is no looseness in the steering wheel assembly and steering pad.

i. Disconnect the airbag connector (yellow colored) from the spiral cable with steering sensor.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

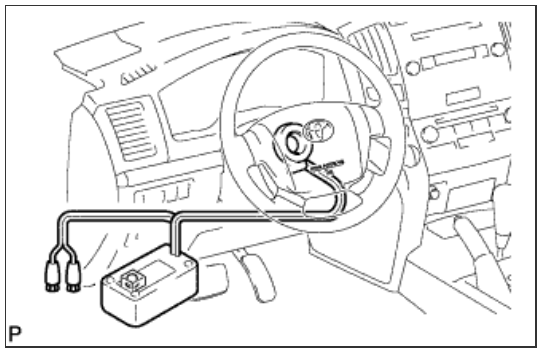

ii. Connect SST connector to the airbag connector of the spiral cable with steering sensor.

SST
09082-00780

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.


iii. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

iv. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the negative (-) terminal.

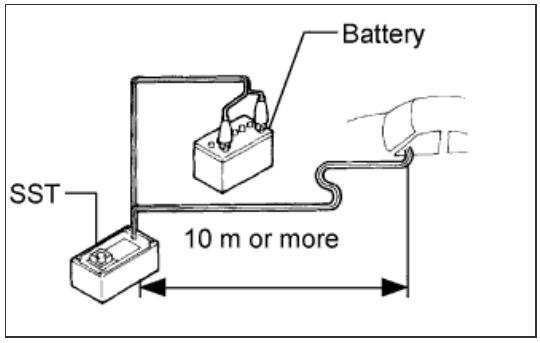

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The steering pad becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a steering pad with a deployed airbag.**
- **Do not apply water to a steering pad with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the LED of SST activation switch comes on.

2. DISPOSE OF STEERING PAD (WHEN NOT INSTALLED IN VEHICLE)

CAUTION:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:

Prepare a battery as the power source to deploy the airbag.


a. Check the function of SST.

SST
09082-00700

b. Remove the steering pad (Click here).

CAUTION:

- **When removing the steering pad, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the steering pad, keep the airbag deployment side facing upward.**

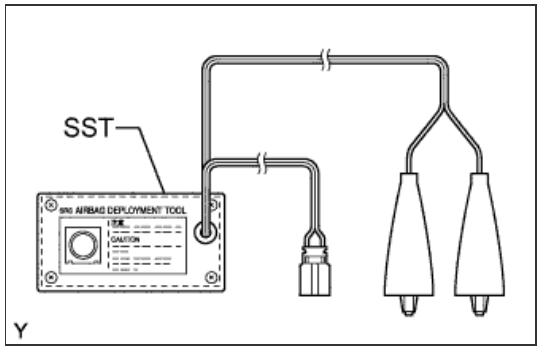


c. Using a service-purpose wire harness for the vehicle, tie down the steering pad to a disc wheel.

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2})

CAUTION:

If the wire harness is too thin or an alternative object is used to tie down the steering pad, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 in.^{2}).

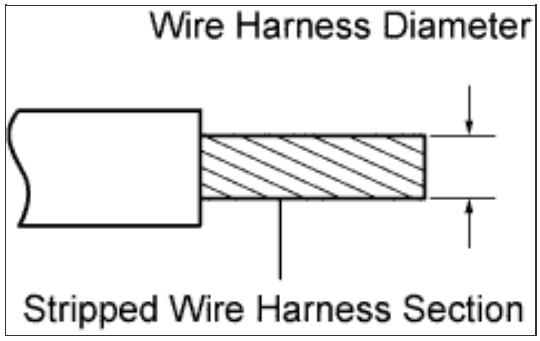

HINT:


To calculate the cross-sectional area of the stripped wire harness section: Area = 3.14 x (Diameter) ^{2} divided by 4

i. Install 2 bolts with washers into the 2 bolt holes on the steering pad.

Bolt:
L: 35.0 mm (1.38 in.)
M: 6.0 mm (0.236 in.)
Pitch: 1.0 mm (0.0393 in.)


NOTICE:

- **Tighten the bolts by hand until they become difficult to turn.**
- **Do not tighten the bolts excessively.**

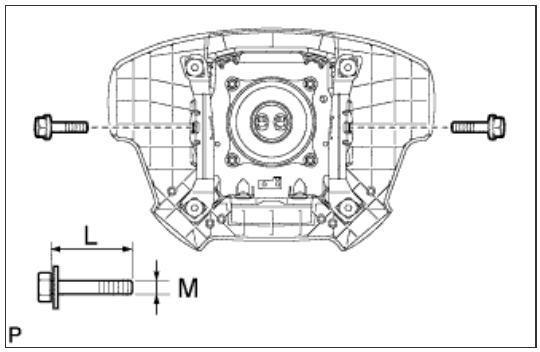

ii. After connecting SST to each other, connect them to the steering pad.


SST
09082-00820

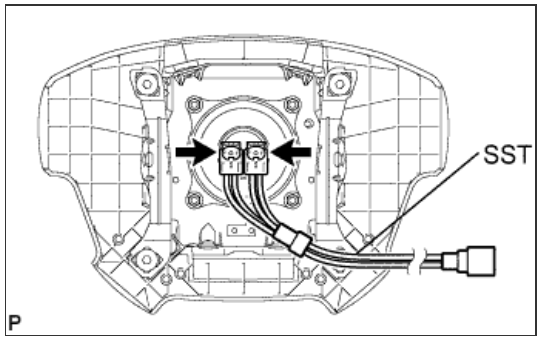

iii. Wind 3 wire harnesses at least 2 times each around the bolts installed on the left and right sides of the steering pad.

CAUTION:


- **Tightly wind the wire harnesses around the bolts so that there is no slack.**
- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the steering pad may become loose due to the shock when the airbag is deployed.**

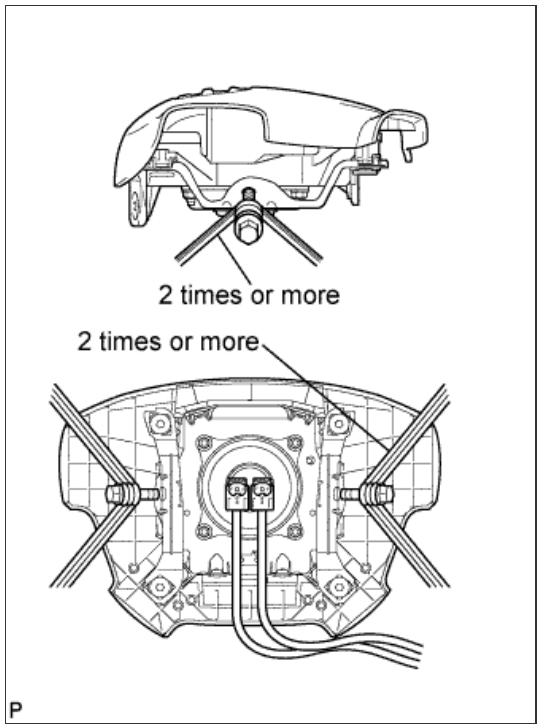

iv. Face the airbag deployment side of the steering pad upward. Separately tie the left and right sides of the steering pad to a disc wheel through the hub nut holes. Position SST connector so that it hangs downward through the hub hole of the disc wheel.

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the steering pad may become loose due to the shock when the airbag is deployed.**
- **Always tie down the steering pad with the airbag deployment side facing upward.**

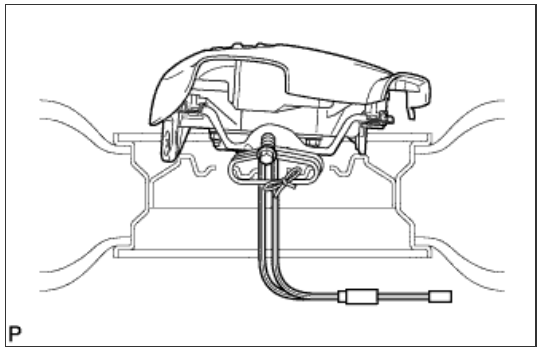


NOTICE:

As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.

d. Install SST.

CAUTION:

Place the disc wheel on level ground.

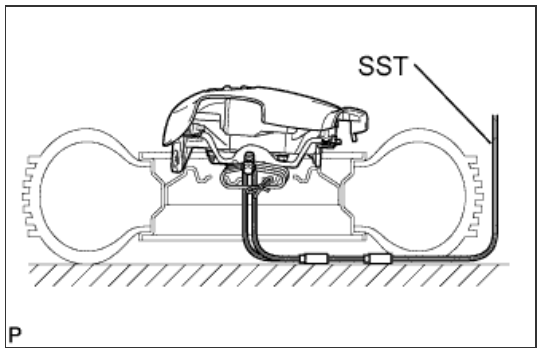


i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the disc wheel.

ii. Move SST at least 10 m (32.8 ft.) away from the steering pad tied down to the disc wheel.

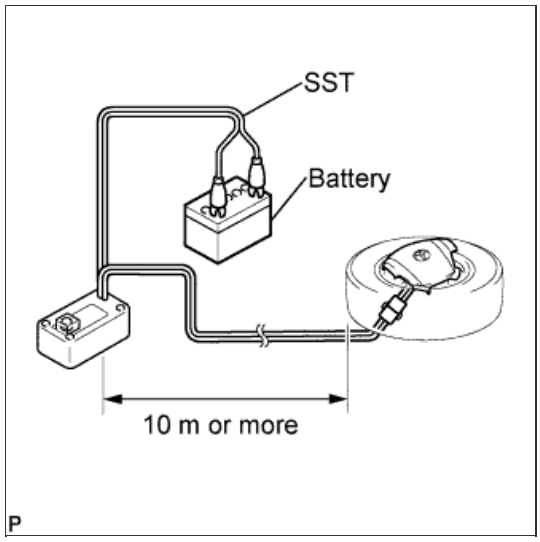


e. Cover the steering pad with a cardboard box or tires.

i. Covering method using a cardboard box: Cover the steering pad with the cardboard box and place weights on the cardboard box in 4 places with a total of at least 190 N (19 kgf, 41.8 lbf).

Cardboard box size:
Must exceed the following dimensions
X: 460 mm (18.1 in.)
Y: 650 mm (25.6 in.)

NOTICE:

- **When dimension Y of the cardboard box exceeds the diameter of the tire with disc wheel which the steering pad is tied to, X should be the following size. X = 460 mm (18.1 in.) + width of tire**
- **If a cardboard box which is smaller than the specified size is used, the cardboard box will be damaged by the shock from the airbag deployment.**

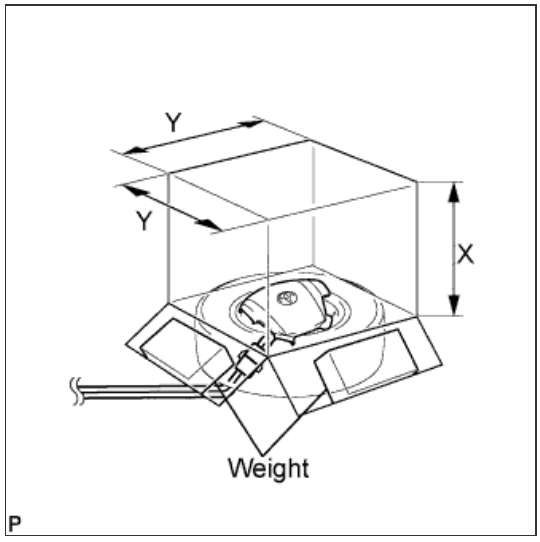

ii. Covering method using tires: Place at least 3 tires without disc wheels on the tire with disc wheel which the steering pad is tied to. Place another tire with disc wheel on them.


Tire size:
Must exceed the following dimensions
Width: 185 mm (7.28 in.)
Inner diameter: 360 mm (14.2 in.)

CAUTION:

Do not use tires with disc wheels e cept on the top and bottom.

NOTICE:


- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**
- **Do not place SST connector under the tire because it could be damaged.**

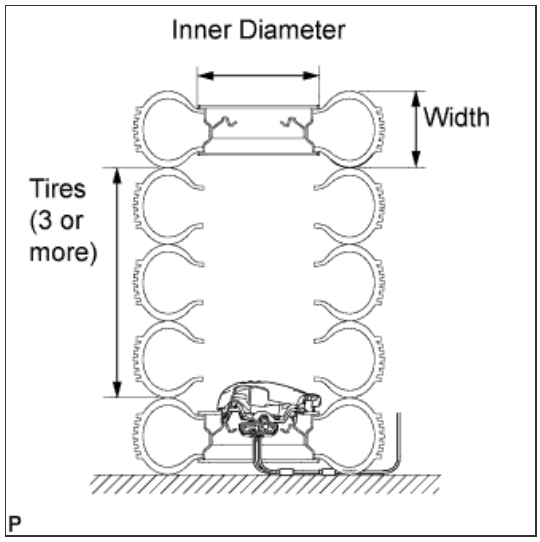

iii. Tie the tires together with 2 wire harnesses.

CAUTION:

Make sure that the wire harnesses are tight. Looseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

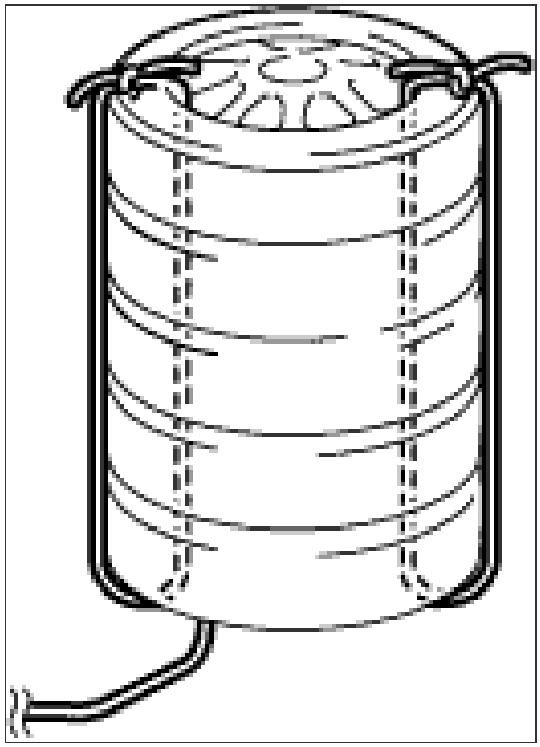

f. Deploy the airbag.

i. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the disc wheel which the steering pad is tied to.


iii. Press SST activation switch to deploy the airbag.

CAUTION:

When deploying the airbag, make sure that no one is near the tire.

HINT:


The airbag is deployed as the LED of SST activation switch comes on.

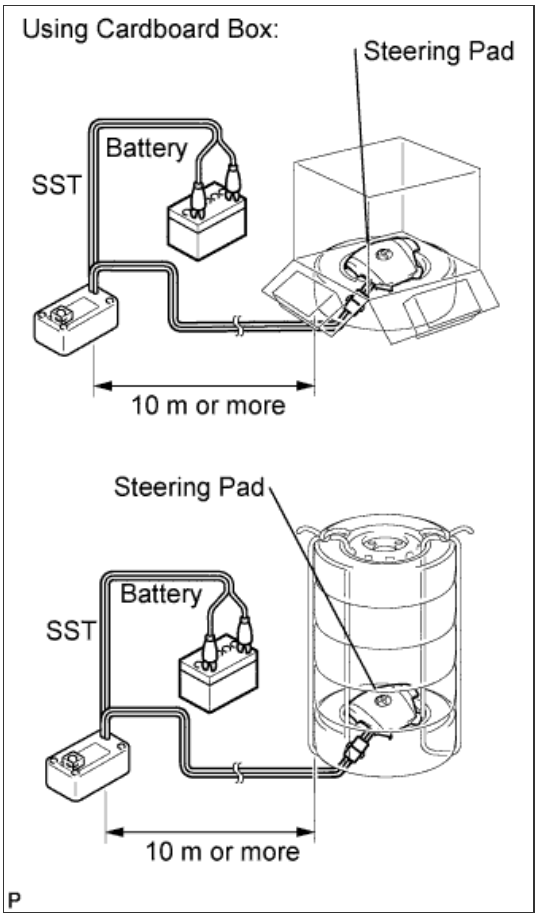

g. Dispose of the steering pad.

CAUTION:

- **The steering pad becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a steering pad with a deployed airbag.**
- **Do not apply water to a steering pad with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

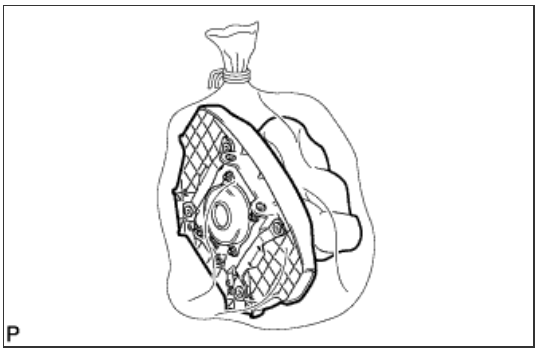

i. Remove the steering pad from the disc wheel.

ii. Place the steering pad in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a steering pad that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the steering pad.**
- **The steering pad becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a steering pad with a deployed airbag.**
- **Do not apply water, etc. to a steering pad with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF STEERING PAD (WHEN INSTALLED IN VEHICLE)

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST.


SST
09082-00700

CAUTION:

When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool).

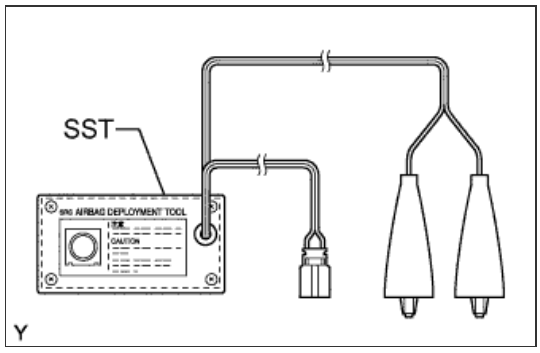

i. Connect SST to the battery. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

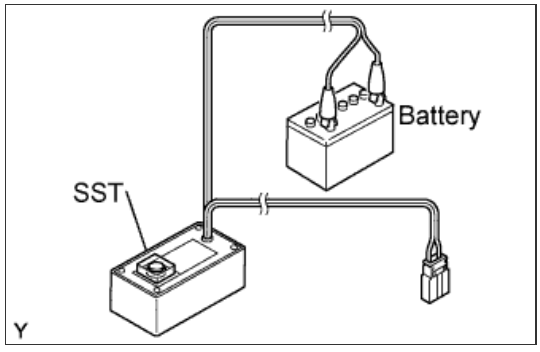


ii. Check the function of SST. Press SST activation switch, and check that the LED of SST activation switch comes on.

CAUTION:

- **Do not connect SST connector (yellow colored) to the airbag.**
- **If the LED comes on when the activation switch is not being pressed, SST malfunction is possible, so**

replace SST with a new one.

iii. Disconnect SST from the battery.

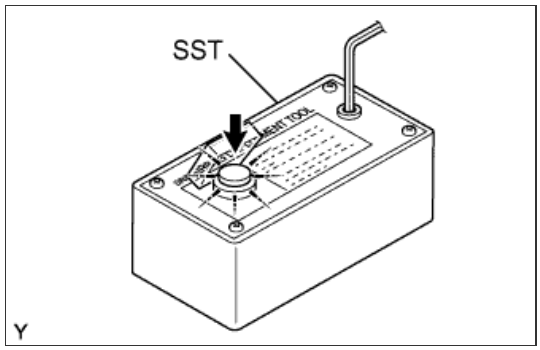

b. Read the precaution (Click here).

c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

d. Remove the steering column cover lower.

i. While turning the steering wheel to the right and left, remove the 3 screws and steering column cover lower.

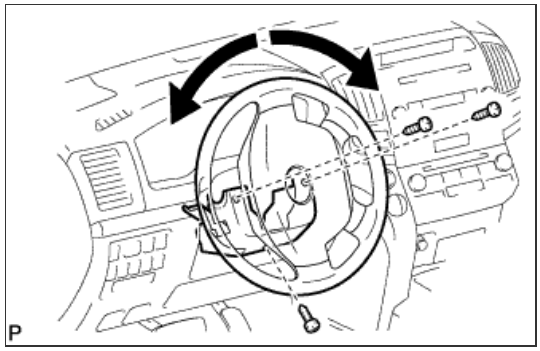

e. Install SST.


CAUTION:

Check that there is no looseness in the steering wheel assembly and steering pad.

i. Disconnect the airbag connector (yellow colored) from the spiral cable with steering sensor.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

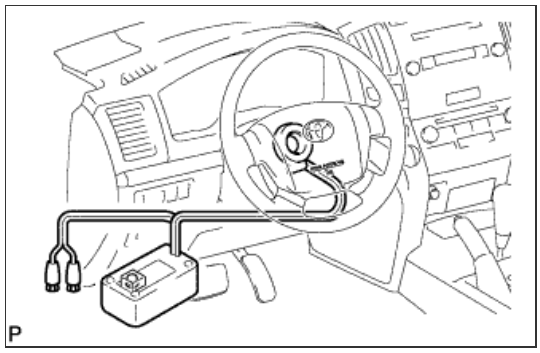

ii. Connect SST connector to the airbag connector of the spiral cable with steering sensor.

SST
09082-00780

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.


iii. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

iv. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the negative (-) terminal.

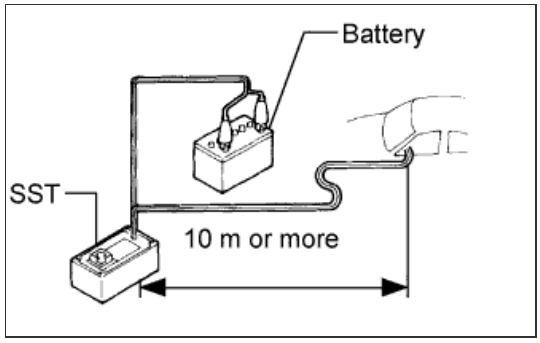

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The steering pad becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a steering pad with a deployed airbag.**
- **Do not apply water to a steering pad with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the LED of SST activation switch comes on.

2. DISPOSE OF STEERING PAD (WHEN NOT INSTALLED IN VEHICLE)

CAUTION:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:

Prepare a battery as the power source to deploy the airbag.


a. Check the function of SST.

SST
09082-00700

b. Remove the steering pad (Click here).

CAUTION:

- **When removing the steering pad, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the steering pad, keep the airbag deployment side facing upward.**

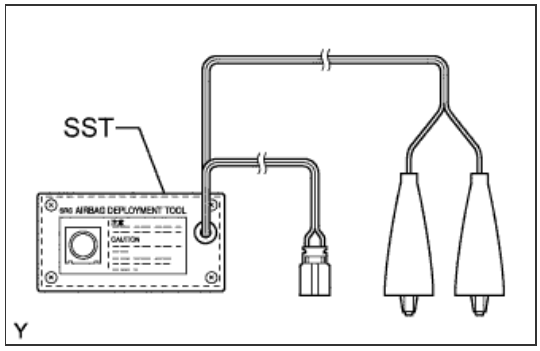


c. Using a service-purpose wire harness for the vehicle, tie down the steering pad to a disc wheel.

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2})

CAUTION:

If the wire harness is too thin or an alternative object is used to tie down the steering pad, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 in.^{2}).

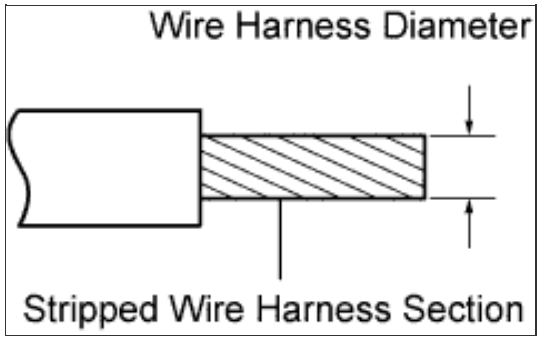

HINT:


To calculate the cross-sectional area of the stripped wire harness section: Area = 3.14 x (Diameter) ^{2} divided by 4

i. Install 2 bolts with washers into the 2 bolt holes on the steering pad.

Bolt:
L: 35.0 mm (1.38 in.)
M: 6.0 mm (0.236 in.)
Pitch: 1.0 mm (0.0393 in.)


NOTICE:

- **Tighten the bolts by hand until they become difficult to turn.**
- **Do not tighten the bolts excessively.**

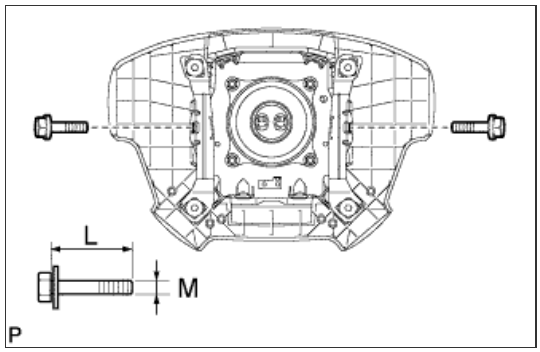

ii. After connecting SST to each other, connect them to the steering pad.


SST
09082-00820

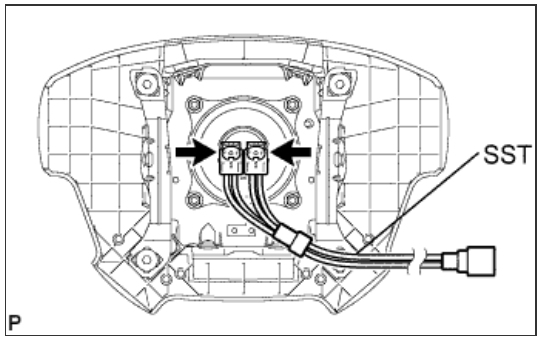

iii. Wind 3 wire harnesses at least 2 times each around the bolts installed on the left and right sides of the steering pad.

CAUTION:


- **Tightly wind the wire harnesses around the bolts so that there is no slack.**
- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the steering pad may become loose due to the shock when the airbag is deployed.**

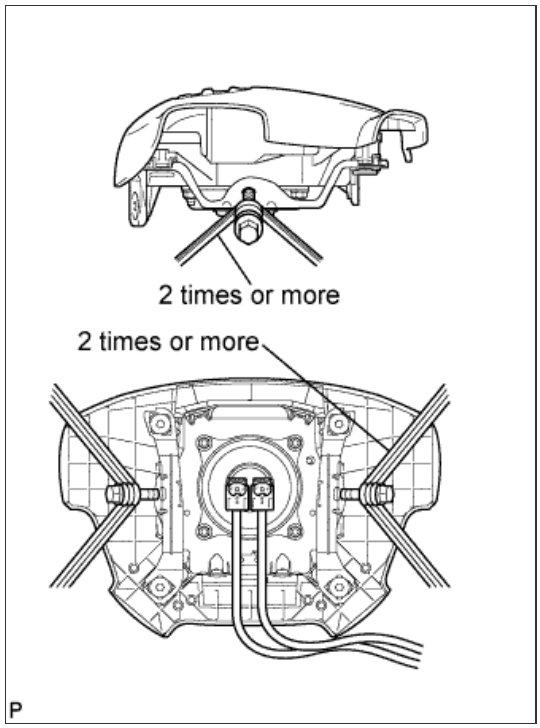

iv. Face the airbag deployment side of the steering pad upward. Separately tie the left and right sides of the steering pad to a disc wheel through the hub nut holes. Position SST connector so that it hangs downward through the hub hole of the disc wheel.

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the steering pad may become loose due to the shock when the airbag is deployed.**
- **Always tie down the steering pad with the airbag deployment side facing upward.**

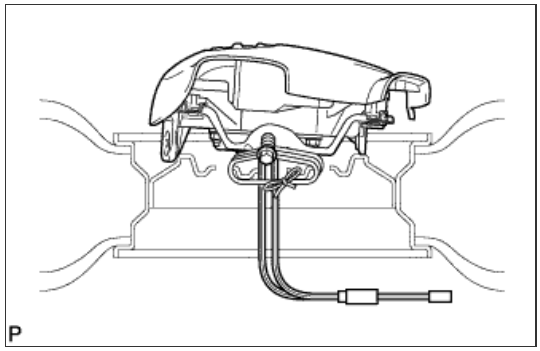


NOTICE:

As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.

d. Install SST.

CAUTION:

Place the disc wheel on level ground.

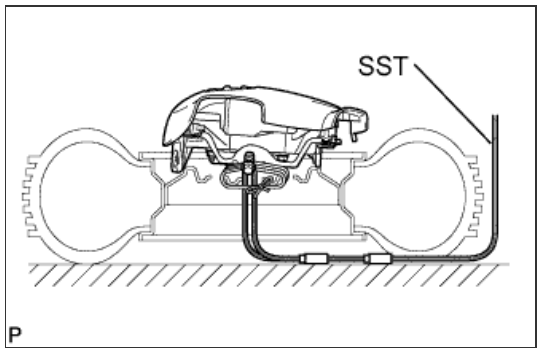


i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the disc wheel.

ii. Move SST at least 10 m (32.8 ft.) away from the steering pad tied down to the disc wheel.

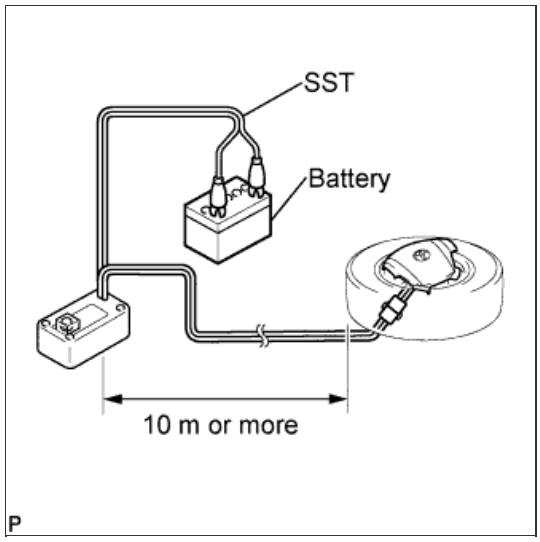


e. Cover the steering pad with a cardboard box or tires.

i. Covering method using a cardboard box: Cover the steering pad with the cardboard box and place weights on the cardboard box in 4 places with a total of at least 190 N (19 kgf, 41.8 lbf).

Cardboard box size:
Must exceed the following dimensions
X: 460 mm (18.1 in.)
Y: 650 mm (25.6 in.)

NOTICE:

- **When dimension Y of the cardboard box exceeds the diameter of the tire with disc wheel which the steering pad is tied to, X should be the following size. X = 460 mm (18.1 in.) + width of tire**
- **If a cardboard box which is smaller than the specified size is used, the cardboard box will be damaged by the shock from the airbag deployment.**

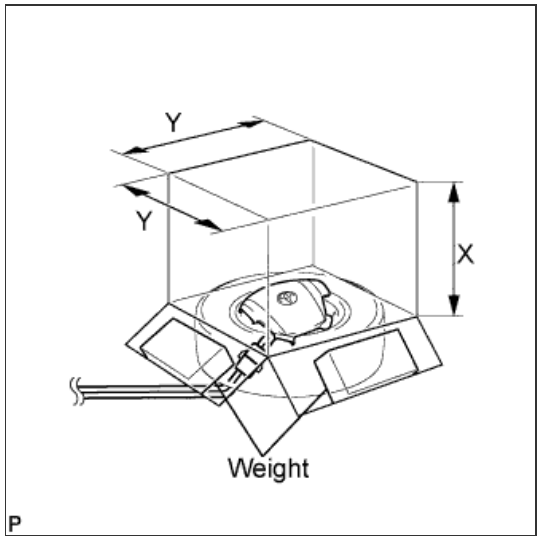

ii. Covering method using tires: Place at least 3 tires without disc wheels on the tire with disc wheel which the steering pad is tied to. Place another tire with disc wheel on them.


Tire size:
Must exceed the following dimensions
Width: 185 mm (7.28 in.)
Inner diameter: 360 mm (14.2 in.)

CAUTION:

Do not use tires with disc wheels e cept on the top and bottom.

NOTICE:


- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**
- **Do not place SST connector under the tire because it could be damaged.**

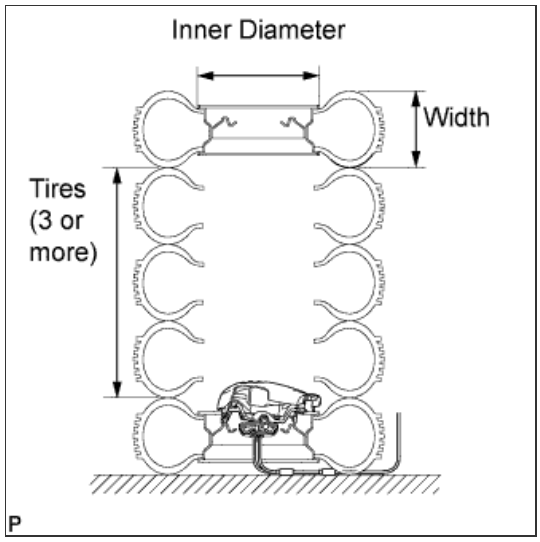

iii. Tie the tires together with 2 wire harnesses.

CAUTION:

Make sure that the wire harnesses are tight. Looseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

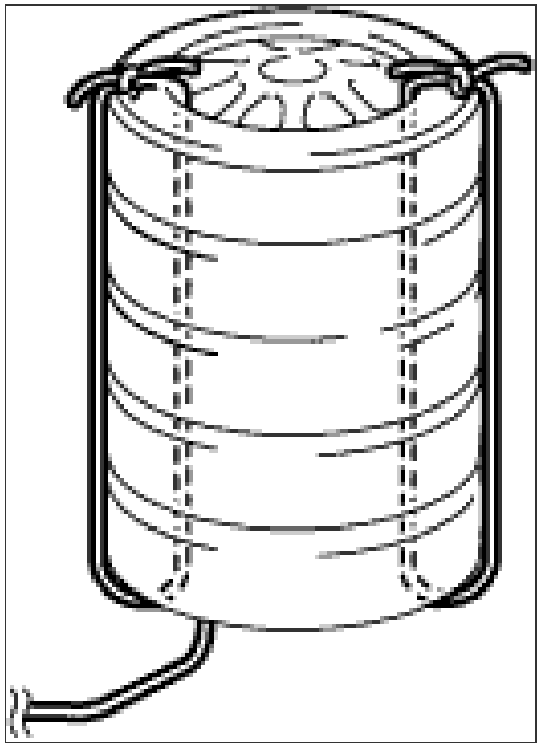

f. Deploy the airbag.

i. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the disc wheel which the steering pad is tied to.


iii. Press SST activation switch to deploy the airbag.

CAUTION:

When deploying the airbag, make sure that no one is near the tire.

HINT:


The airbag is deployed as the LED of SST activation switch comes on.

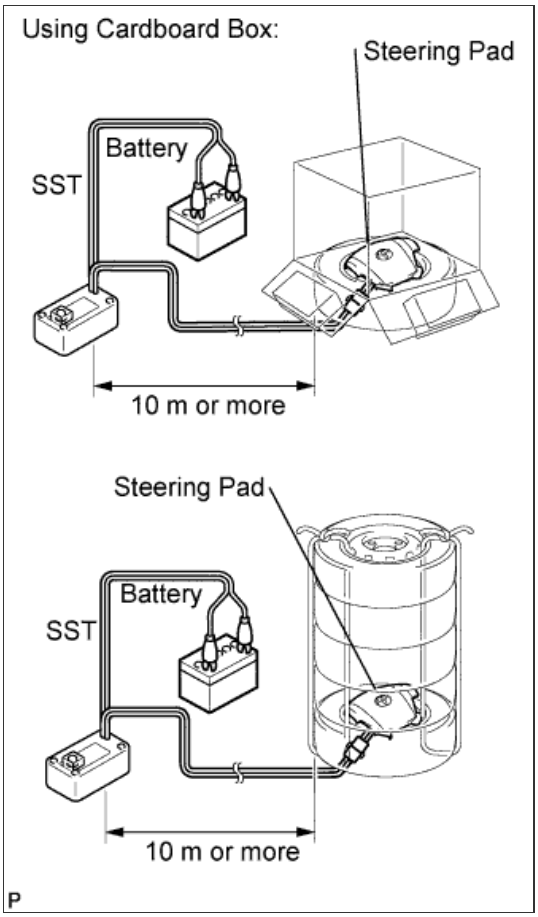

g. Dispose of the steering pad.

CAUTION:


- **The steering pad becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a steering pad with a deployed airbag.**
- **Do not apply water to a steering pad with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

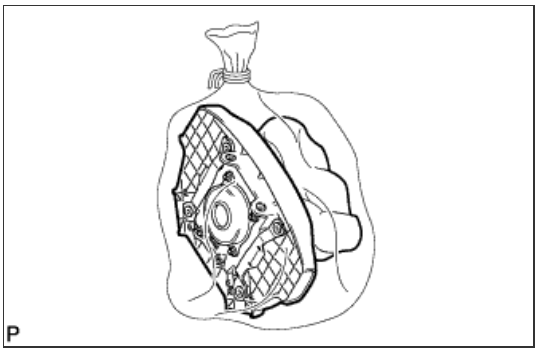



i. Remove the steering pad from the disc wheel.

ii. Place the steering pad in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation [Click here]

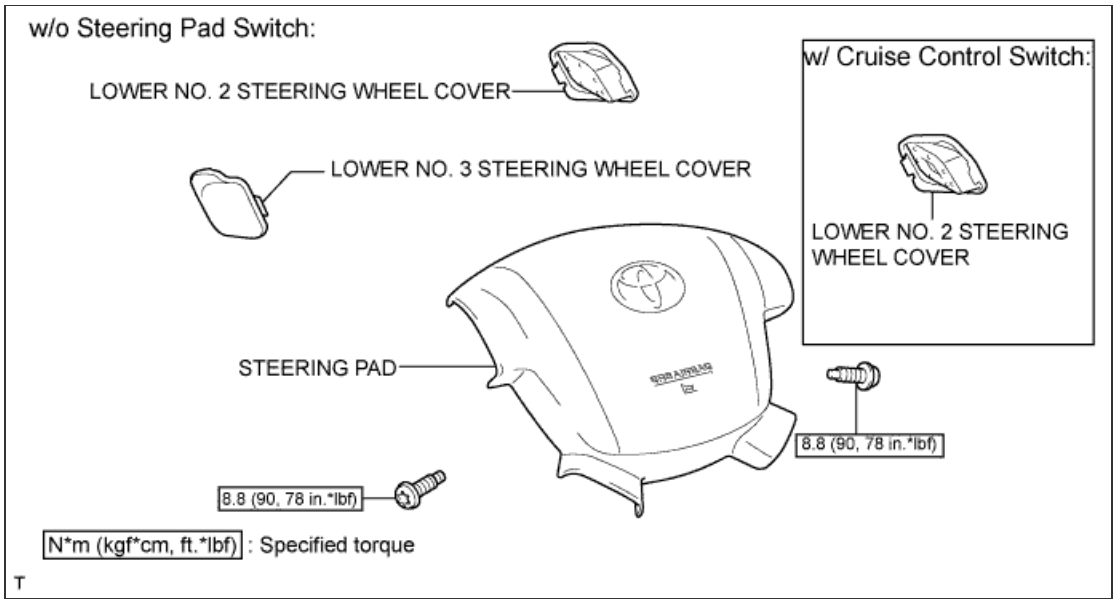

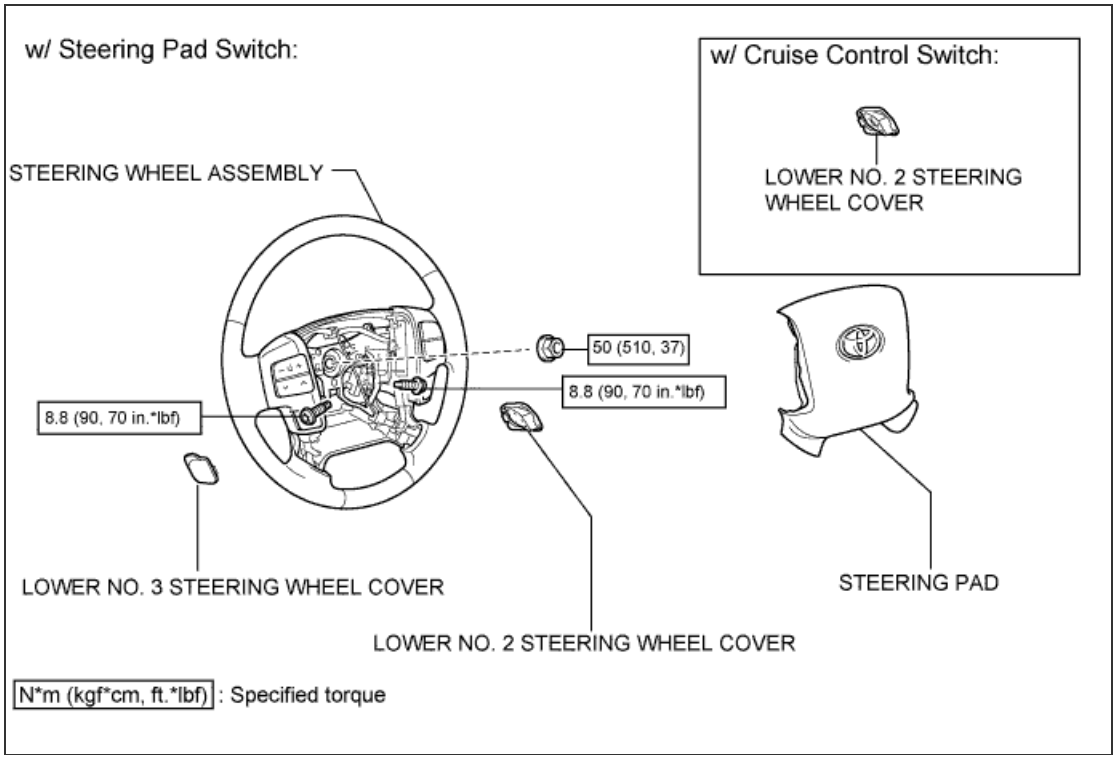

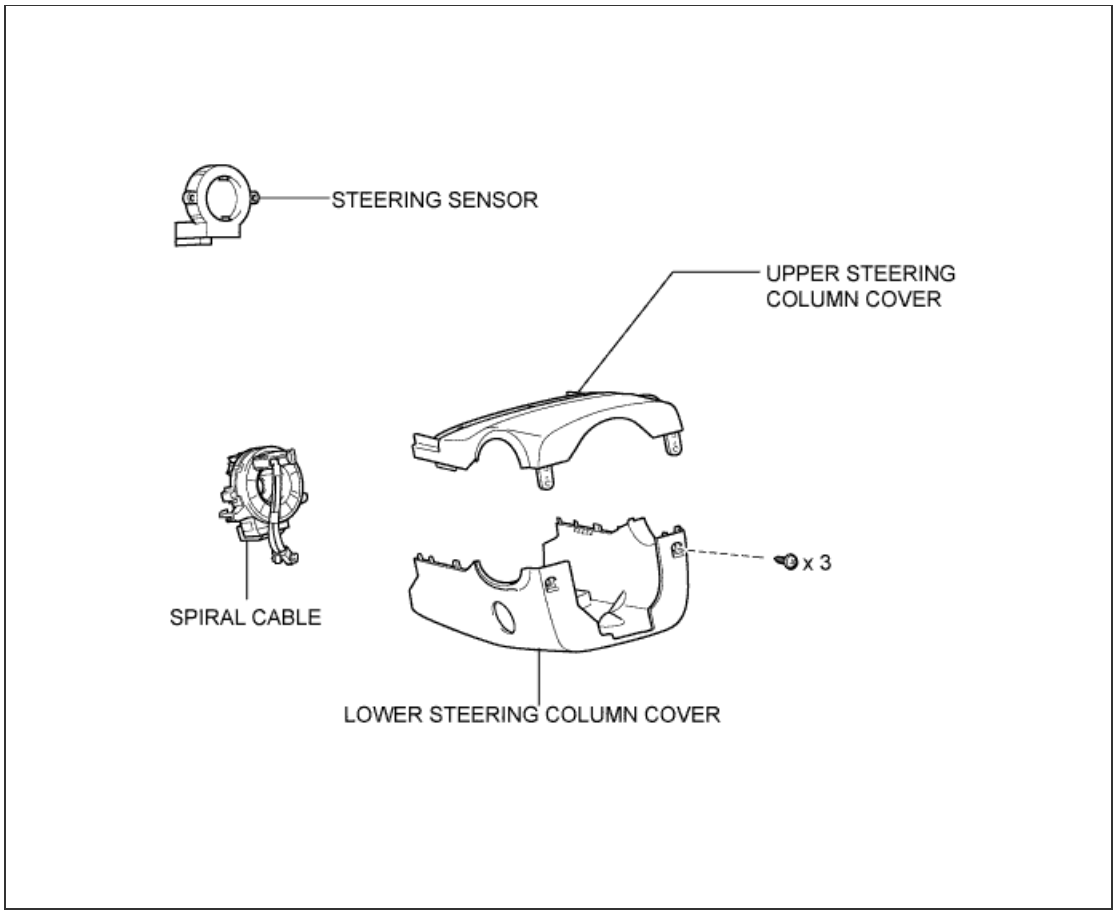
STEERING SENSOR
UPPER STEERING COLUMN COVER
SPIRAL CABLE
x 3
LOWER STEERING COLUMN COVER

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. PLACE FRONT WHEELS FACING STRAIGHT AHEAD


3. REMOVE LOWER NO. 3 STEERING WHEEL COVER

a. Detach the 2 claws and remove the steering wheel cover.

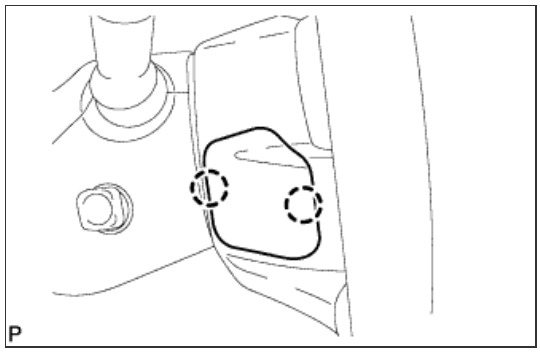

4. REMOVE LOWER NO. 2 STEERING WHEEL COVER


a. Detach the 2 claws and remove the steering wheel cover.

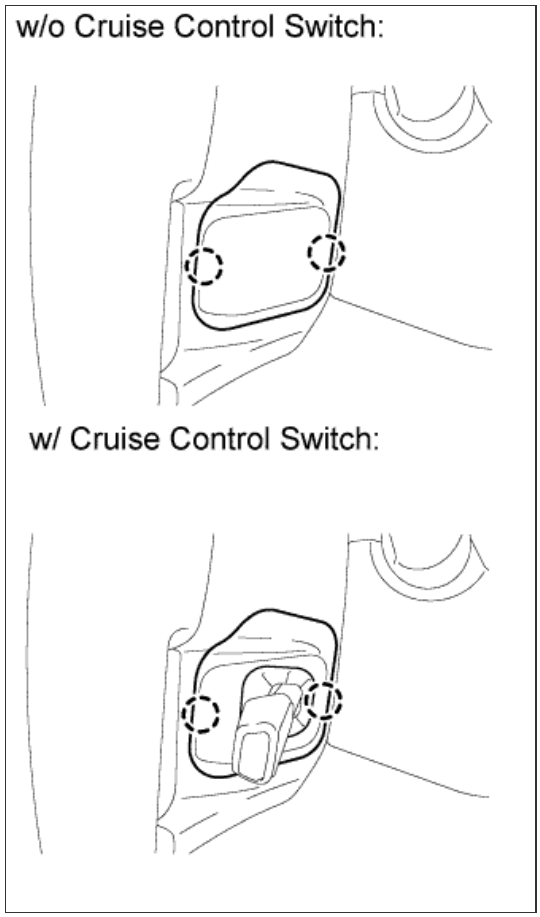


5. REMOVE STEERING PAD


a. Using a T30 socket wrench, loosen the 2 screws ntil the groove along the screw circ mference catches on the screw case.

w/o Steering Pad Switch:

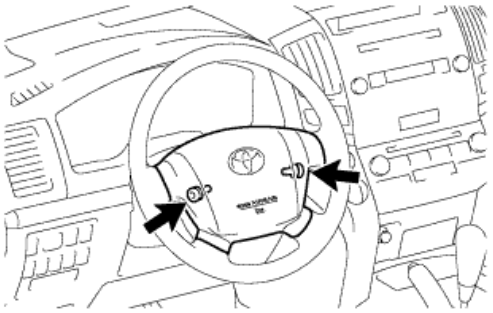

w/ Steering Pad Switch:

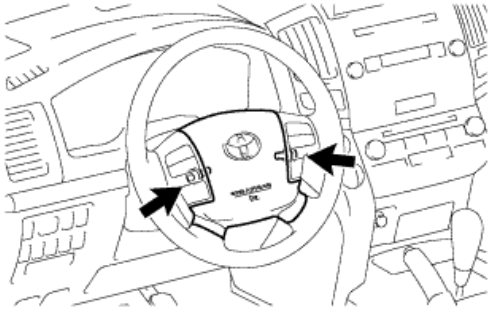

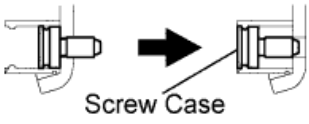

b. P lb the steering ad from the steering wheel, as shown in the ill stration. Then s rt the steering ad with one hand.

NOTICE:


When removing the steering ad, do not the airbag wire harness.

c. Disconnect the horn connector.

d. Disconnect the 2 connectors and remove the steering ad.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

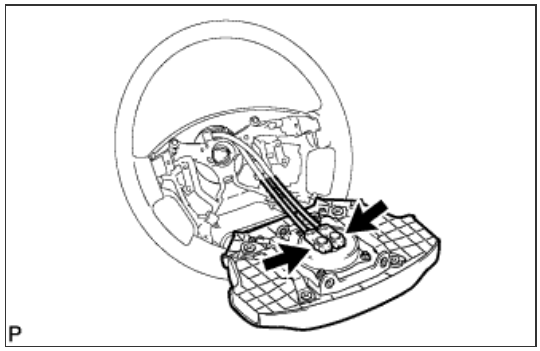

6. REMOVE STEERING WHEEL ASSEMBLY


a. Remove the steering wheel set n t

b. matchmarks on the steering wheel and main shaft.

c. Using SST, remove the steering wheel assembly.

SST

09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05011)

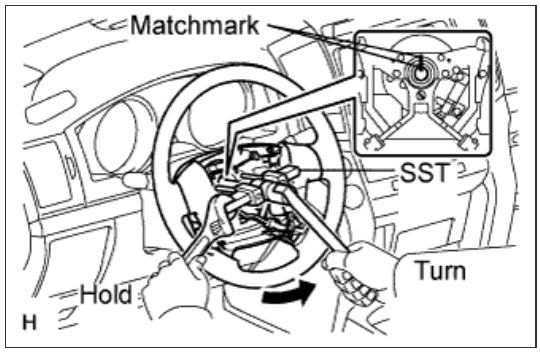


7. REMOVE LOWER STEERING COLUMN COVER

a. Remove the 3 screws.

b. Detach the 2 claws to remove the lower steering col mn cover.

NOTICE:


Do not damage the tilt and telesco ic switch.

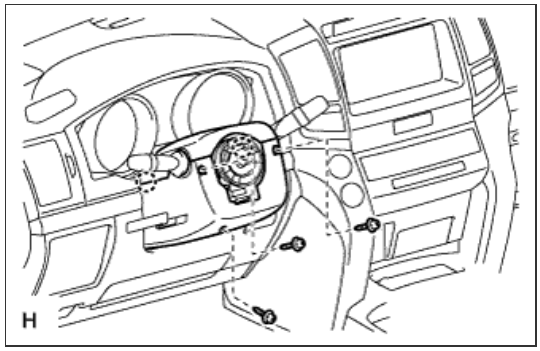

8. REMOVE UPPER STEERING COLUMN COVER

a. Detach the cli s.

b. Detach the claw to remove the er steering col mn cover.

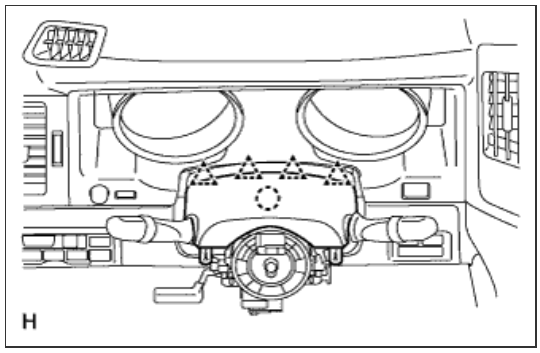


9. REMOVE SPIRAL CABLE

a. Disconnect the connectors from the s iral cable with steering sensor.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Detach the 3 claws and remove the s iral cable with steering sensor.

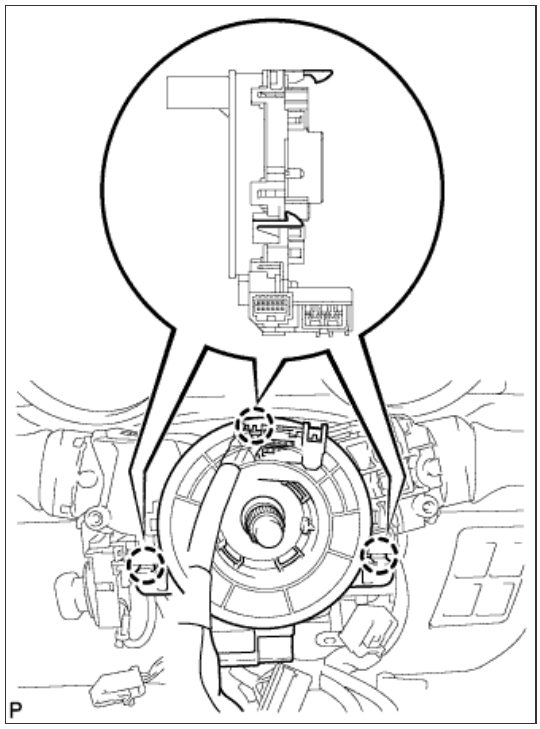

c. Detach the 6 claws and remove the s iral cable from the steering sensor.

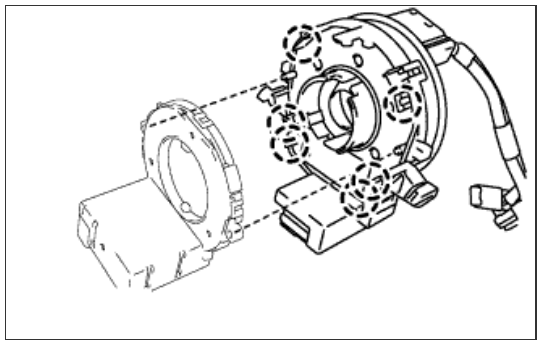

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. PLACE FRONT WHEELS FACING STRAIGHT AHEAD


3. REMOVE LOWER NO. 3 STEERING WHEEL COVER

a. Detach the 2 claws and remove the steering wheel cover.

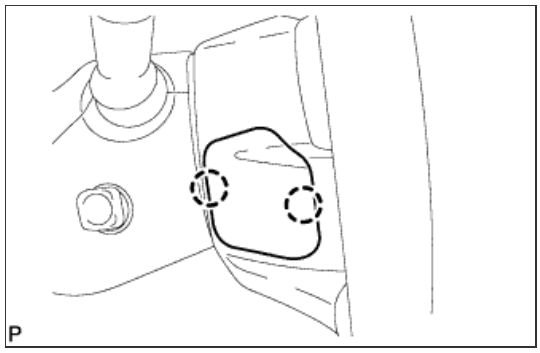

4. REMOVE LOWER NO. 2 STEERING WHEEL COVER


a. Detach the 2 claws and remove the steering wheel cover.

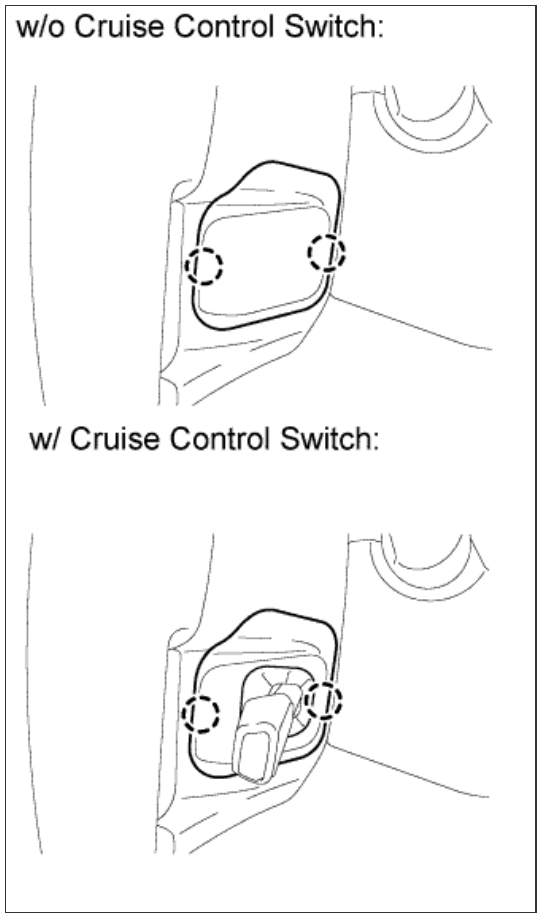


5. REMOVE STEERING PAD


a. Using a T30 socket wrench, loosen the 2 screws ntil the groove along the screw circ mference catches on the screw case.

w/o Steering Pad Switch:

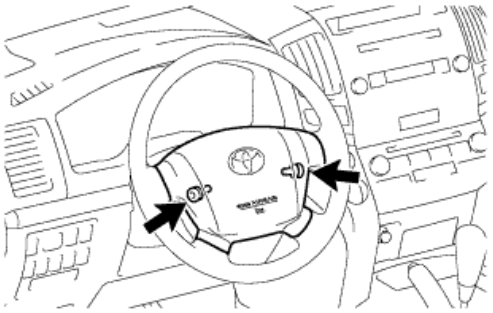


w/ Steering Pad Switch:

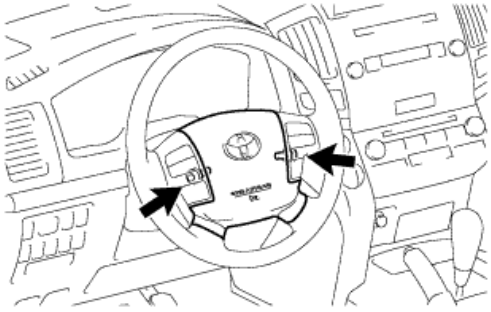

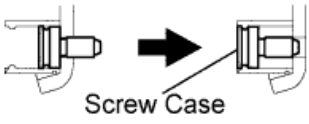

b. P lb the steering ad from the steering wheel, as shown in the ill stration. Then s rt the steering ad with one hand.

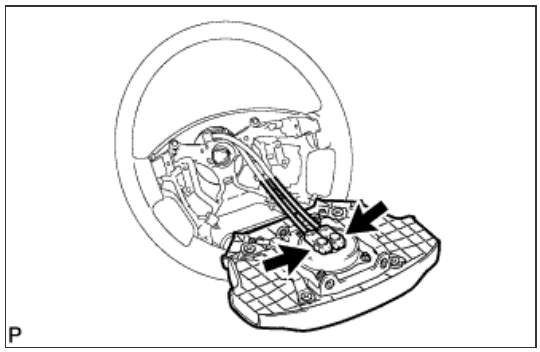

NOTICE:

When removing the steering ad, do not the airbag wire harness.

c. Disconnect the horn connector.

d. Disconnect the 2 connectors and remove the steering ad.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

6. REMOVE STEERING WHEEL ASSEMBLY


a. Remove the steering wheel set n t

b. matchmarks on the steering wheel and main shaft.

c. Using SST, remove the steering wheel assembly.

SST

09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05011)

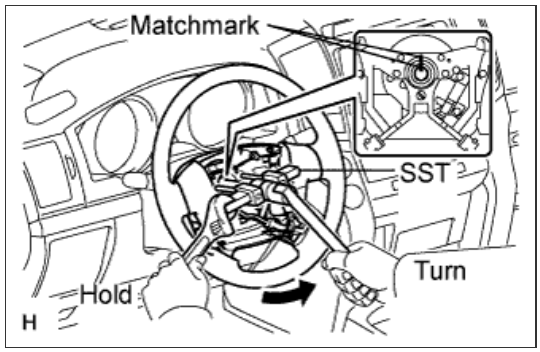


7. REMOVE LOWER STEERING COLUMN COVER

a. Remove the 3 screws.

b. Detach the 2 claws to remove the lower steering col mn cover.

NOTICE:


Do not damage the tilt and telesco ic switch.

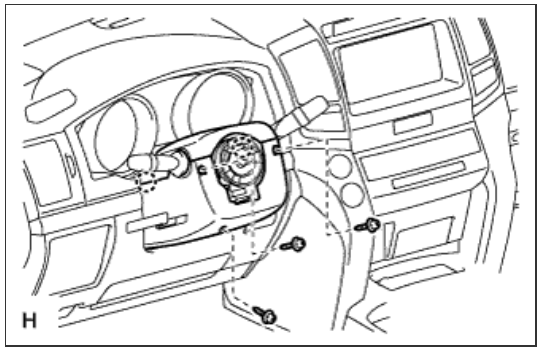

8. REMOVE UPPER STEERING COLUMN COVER

a. Detach the cli s.

b. Detach the claw to remove the er steering col mn cover.

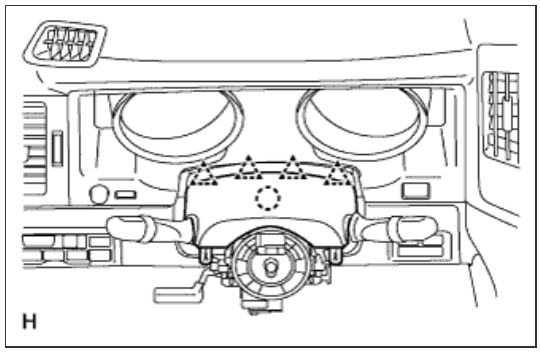


9. REMOVE SPIRAL CABLE

a. Disconnect the connectors from the s iral cable with steering sensor.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Detach the 3 claws and remove the s iral cable with steering sensor.

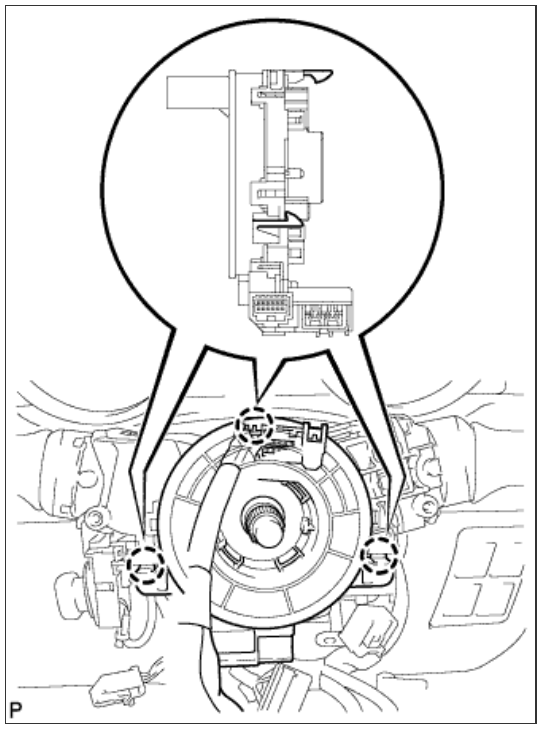

c. Detach the 6 claws and remove the s iral cable from the steering sensor.

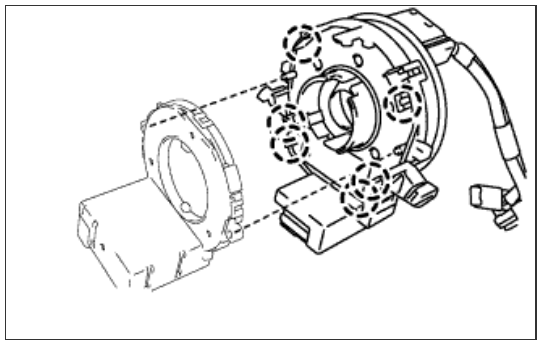


for Preparation Click here

1. INSPECT SPIRAL CABLE

a. If there are any defects as mentioned below, replace the spiral cable with a new one:
Scratches, cracks, dents or chips on the connector or the spiral cable.

b. Check the spiral cable.

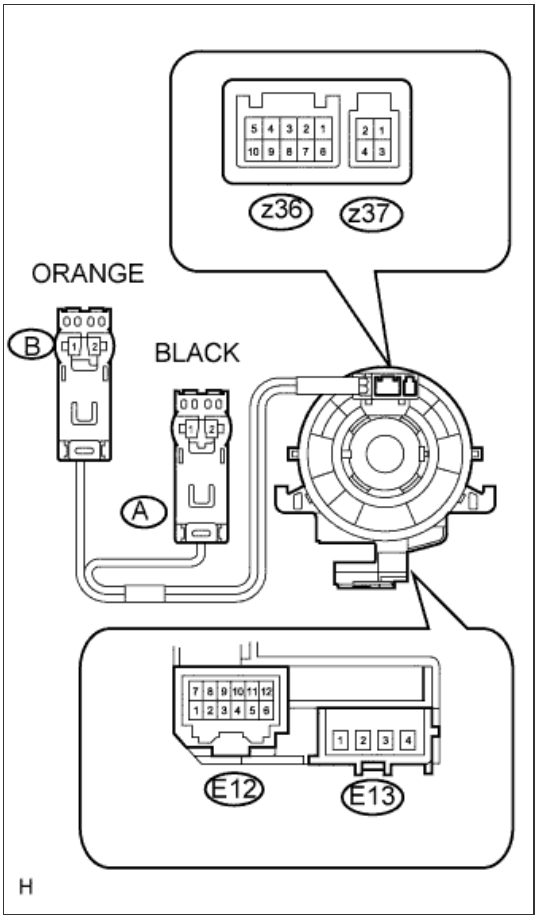

i. Set the spiral cable to the center position (Click here).

ii. Measure the resistance between each terminal of the spiral cable according to the table below.

iii. After setting the spiral cable to the center position, rotate the spiral cable 2.5 times clockwise, and measure the resistance as shown. Then rotate the spiral cable 5 times counterclockwise, and measure the resistance as shown.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 - B2	Always	Below 1 Ω
E13-2 - B1	Always	Below 1 Ω
E13-3 - A1	Always	Below 1 Ω
E13-4 - A2	Always	Below 1 Ω
E12-6 - z36-10	Always	Below 1 Ω
E12-5 - z36-9	Always	Below 1 Ω
E12-4 - z36-8	Always	Below 1 Ω
E12-3 - z36-7	Always	Below 1 Ω
E12-2 - z36-6	Always	Below 1 Ω
E12-2 - z37-4	Always	Below 1 Ω
E12-1 - z37-3	Always	Below 1 Ω
E12-12 - z36-5	Always	Below 1 Ω
E12-11 - z36-4	Always	Below 1 Ω
E12-10 - z36-3	Always	Below 1 Ω
E12-9 - z36-2	Always	Below 1 Ω
E12-8 - z36-1	Always	Below 1 Ω
E12-8 - z37-2	Always	Below 1 Ω
E12-7 - z37-1	Always	Below 1 Ω

iv. After setting the spiral cable to the center position, rotate the spiral cable 2.5 times clockwise. Then while rotating the spiral cable 5 times counterclockwise, measure the resistance as shown.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 - B2	Always	Below 1 Ω
E13-2 - B1	Always	Below 1 Ω
E13-3 - A1	Always	Below 1 Ω
E13-4 - A2	Always	Below 1 Ω
E12-6 - z36-10	Always	Below 1 Ω
E12-5 - z36-9	Always	Below 1 Ω
E12-4 - z36-8	Always	Below 1 Ω
E12-3 - z36-7	Always	Below 1 Ω
E12-2 - z36-6	Always	Below 1 Ω
E12-2 - z37-4	Always	Below 1 Ω

E12-1 - z37-3	Always	Below 1 Ω
E12-12 - z36-5	Always	Below 1 Ω
E12-11 - z36-4	Always	Below 1 Ω
E12-10 - z36-3	Always	Below 1 Ω
E12-9 - z36-2	Always	Below 1 Ω
E12-8 - z36-1	Always	Below 1 Ω
E12-8 - z37-2	Always	Below 1 Ω
E12-7 - z37-1	Always	Below 1 Ω

NOTICE:


As the spiral cable may break, do not rotate the spiral cable more than the specified amount.

for Preparation Click here

1. INSPECT SPIRAL CABLE

a. If there are any defects as mentioned below, replace the spiral cable with a new one:
Scratches, cracks, dents or chips on the connector or the spiral cable.

b. Check the spiral cable.

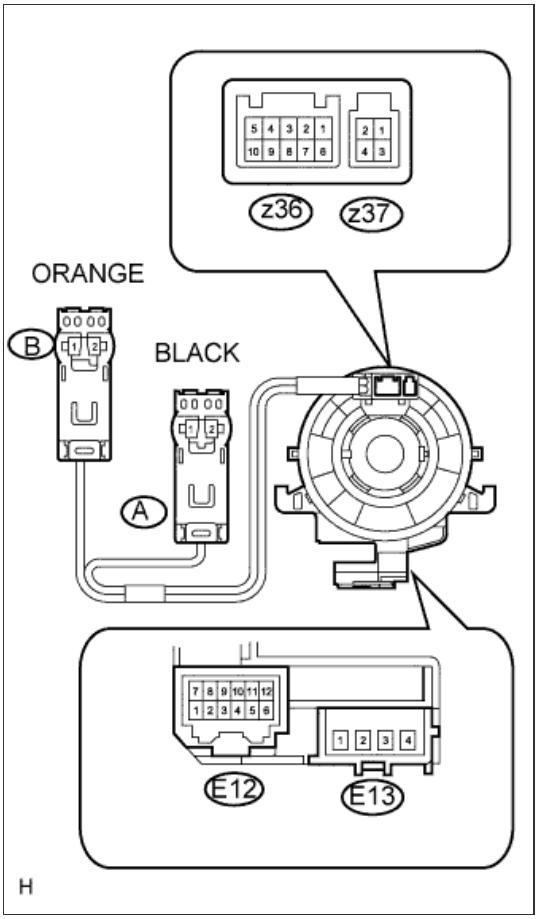

i. Set the spiral cable to the center position (Click here).

ii. Measure the resistance between each terminal of the spiral cable according to the table below.

iii. After setting the spiral cable to the center position, rotate the spiral cable 2.5 times clockwise, and measure the resistance as shown. Then rotate the spiral cable 5 times counterclockwise, and measure the resistance as shown.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 - B2	Always	Below 1 Ω
E13-2 - B1	Always	Below 1 Ω
E13-3 - A1	Always	Below 1 Ω
E13-4 - A2	Always	Below 1 Ω
E12-6 - z36-10	Always	Below 1 Ω
E12-5 - z36-9	Always	Below 1 Ω
E12-4 - z36-8	Always	Below 1 Ω
E12-3 - z36-7	Always	Below 1 Ω
E12-2 - z36-6	Always	Below 1 Ω
E12-2 - z37-4	Always	Below 1 Ω
E12-1 - z37-3	Always	Below 1 Ω
E12-12 - z36-5	Always	Below 1 Ω
E12-11 - z36-4	Always	Below 1 Ω
E12-10 - z36-3	Always	Below 1 Ω
E12-9 - z36-2	Always	Below 1 Ω
E12-8 - z36-1	Always	Below 1 Ω
E12-8 - z37-2	Always	Below 1 Ω
E12-7 - z37-1	Always	Below 1 Ω

iv. After setting the spiral cable to the center position, rotate the spiral cable 2.5 times clockwise. Then while rotating the spiral cable 5 times counterclockwise, measure the resistance as shown.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E13-1 - B2	Always	Below 1 Ω
E13-2 - B1	Always	Below 1 Ω
E13-3 - A1	Always	Below 1 Ω
E13-4 - A2	Always	Below 1 Ω
E12-6 - z36-10	Always	Below 1 Ω
E12-5 - z36-9	Always	Below 1 Ω
E12-4 - z36-8	Always	Below 1 Ω
E12-3 - z36-7	Always	Below 1 Ω
E12-2 - z36-6	Always	Below 1 Ω
E12-2 - z37-4	Always	Below 1 Ω

E12-1 - z37-3	Always	Below 1 Ω
E12-12 - z36-5	Always	Below 1 Ω
E12-11 - z36-4	Always	Below 1 Ω
E12-10 - z36-3	Always	Below 1 Ω
E12-9 - z36-2	Always	Below 1 Ω
E12-8 - z36-1	Always	Below 1 Ω
E12-8 - z37-2	Always	Below 1 Ω
E12-7 - z37-1	Always	Below 1 Ω

NOTICE:

As the spiral cable may break, do not rotate the spiral cable more than the specified amount.

for Preparation Click here

1. INSTALL SPIRAL CABLE

a. Align the pins on the spiral cable with the installation holes on the steering sensor.


b. Attach the 6 claws and install the spiral cable to the steering sensor.

c. Check that the front wheels are facing straight ahead.

d. Set the turn signal switch to the neutral position.

CAUTION:

If it is not in the neutral position, the pin of the turn signal switch may be snapped.

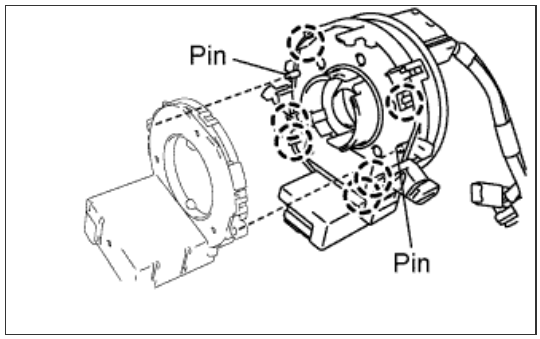

e. Attach the 3 claws to install the spiral cable with steering sensor.


CAUTION:

When replacing the spiral cable with a new one, remove the lock pin before installing the steering wheel assembly.

f. Connect the connectors to the spiral cable with steering sensor.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

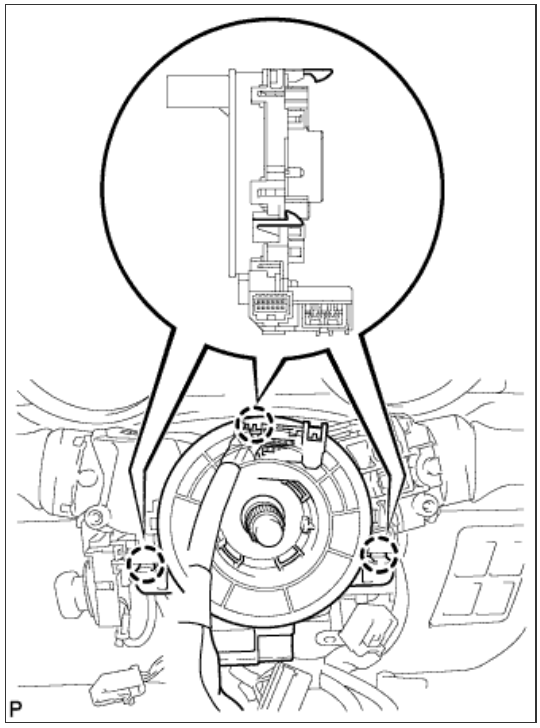

2. INSTALL UPPER STEERING COLUMN COVER

a. Attach the claw to install the upper steering column cover.

b. Attach the 4 clips to install the upper steering column cover onto the instrument cluster finish panel.

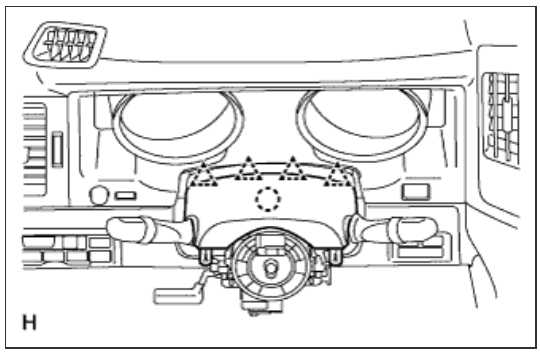

3. INSTALL LOWER STEERING COLUMN COVER


a. Attach the 2 claws to install the lower steering column cover.

NOTICE:

Do not damage the tilt and telescopic switch.

b. Install the 3 screws.

Torque:
2.0 N*m{ 20 kgf*cm , 18 in.*lbf }

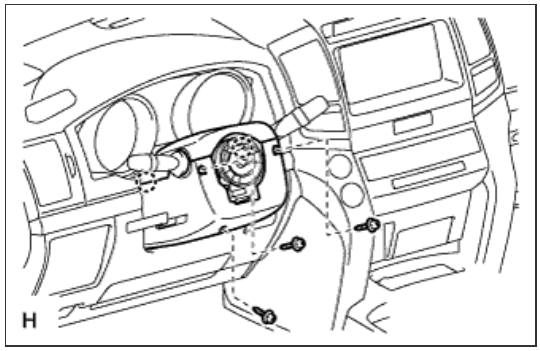

4. ADJUST SPIRAL CABLE

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Rotate the spiral cable with steering sensor counterclockwise slowly by hand until it feels firm.

CAUTION:

Do not turn the spiral cable with steering sensor by the airbag wire harness.

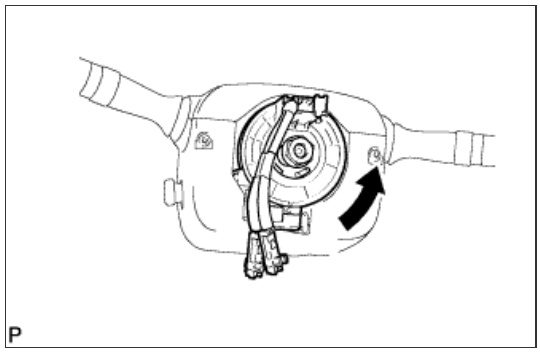


d. Rotate the spiral cable with steering sensor clockwise approximately 2.5 turns to align the marks.

CAUTION:

Do not turn the spiral cable with spiral sensor by the airbag wire harness.

HINT:

The spiral cable with steering sensor will rotate approximately 2.5 turns to both the left and right from the center.

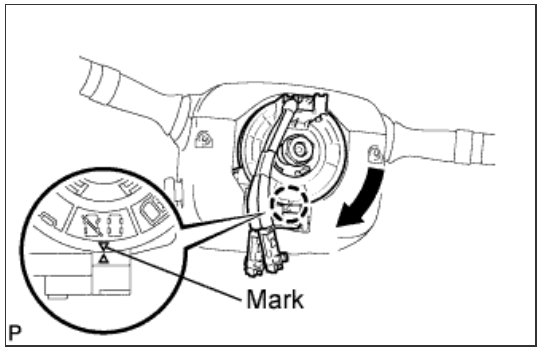


5. INSTALL STEERING WHEEL ASSEMBLY

a. Align the matchmarks on the steering wheel assembly and steering main shaft assembly.

b. Install the steering wheel assembly set nut.

Torque:
50 N*m{ 510 kgf*cm , 37 ft.*lbf }

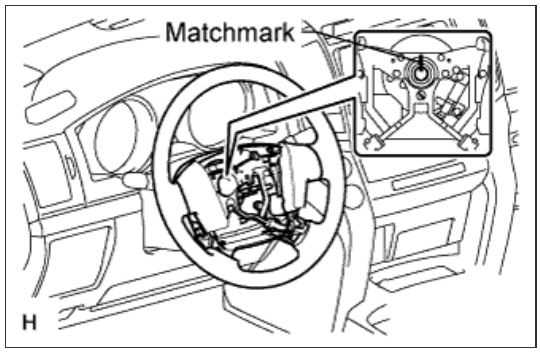

6. INSTALL STEERING PAD

a. Support the steering pad with one hand.

b. Connect the 2 connectors to the steering pad.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

c. Connect the horn connector.

d. Confirm that the circumference groove of the "TORX" screw fits in the screw case, and place the steering pad onto the steering wheel.


e. Using a T30 "TORX" socket wrench, tighten the 2 screws.

Torque:
8.8 N*m{ 90 kgf*cm , 78 in.*lbf }

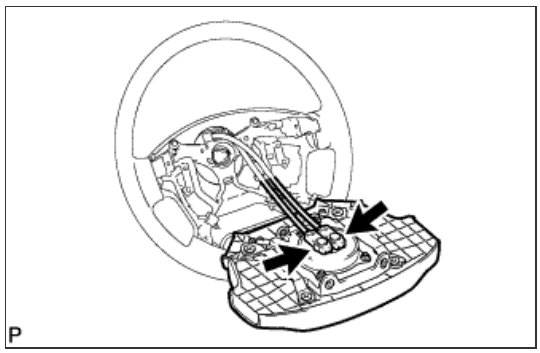


7. INSTALL LOWER NO. 3 STEERING WHEEL COVER

a. Attach the 2 claws to install the cover.

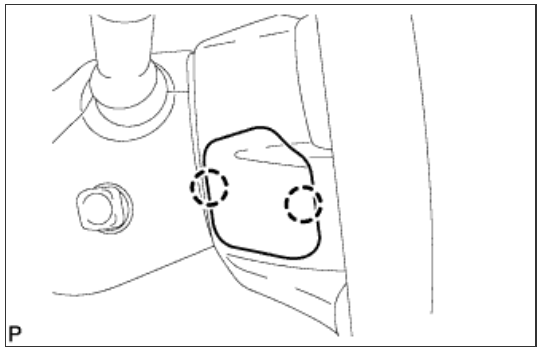

8. INSTALL LOWER NO. 2 STEERING WHEEL COVER

a. Attach the 2 claws to install the cover.

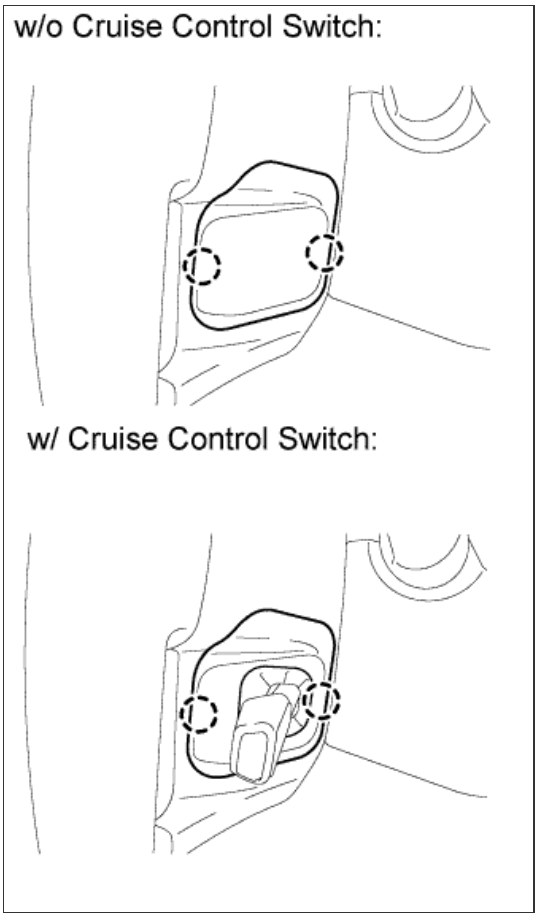

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

- hø disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. INSPECT STEERING PAD

a. With the steering pad installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the steering pad with a new one:
Cuts, minute cracks or marked discoloration on the steering pad top surface or in the grooved portion.

b. Make sure that the horn sounds.

HINT:

If the horn does not sound, inspect the horn system.

11. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

1. INSTALL SPIRAL CABLE

a. Align the pins on the spiral cable with the installation holes on the steering sensor.


b. Attach the 6 claws and install the spiral cable to the steering sensor.

c. Check that the front wheels are facing straight ahead.

d. Set the turn signal switch to the neutral position.

CAUTION:

If it is not in the neutral position, the pin of the turn signal switch may be snapped.

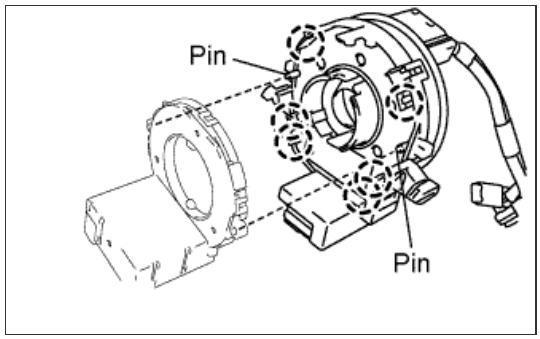

e. Attach the 3 claws to install the spiral cable with steering sensor.


CAUTION:

When replacing the spiral cable with a new one, remove the lock pin before installing the steering wheel assembly.

f. Connect the connectors to the spiral cable with steering sensor.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

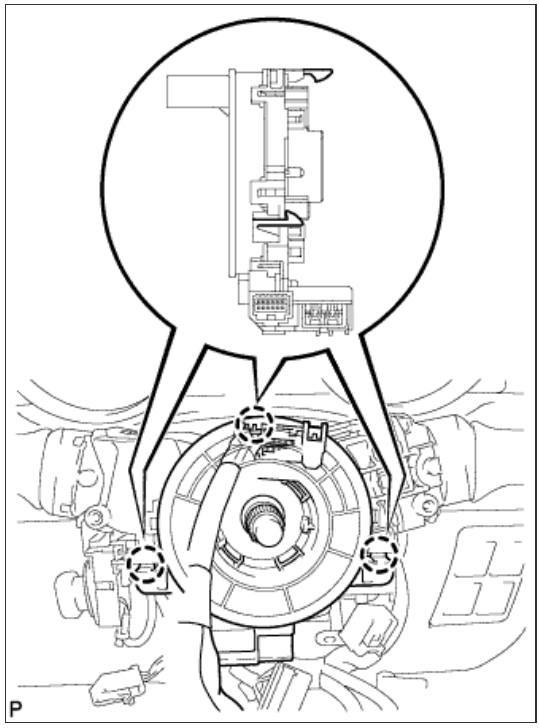

2. INSTALL UPPER STEERING COLUMN COVER

a. Attach the claw to install the upper steering column cover.

b. Attach the 4 clips to install the upper steering column cover onto the instrument cluster finish panel.

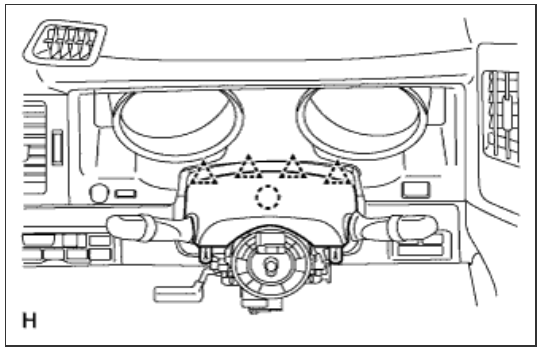

3. INSTALL LOWER STEERING COLUMN COVER


a. Attach the 2 claws to install the lower steering column cover.

NOTICE:

Do not damage the tilt and telescopic switch.

b. Install the 3 screws.

Torque:
2.0 N*m{ 20 kgf*cm , 18 in.*lbf }

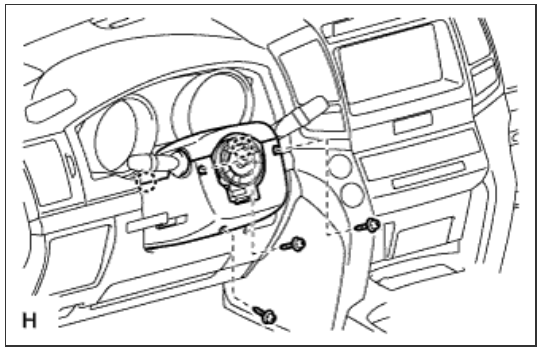

4. ADJUST SPIRAL CABLE

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Rotate the spiral cable with steering sensor counterclockwise slowly by hand until it feels firm.

CAUTION:

Do not turn the spiral cable with steering sensor by the airbag wire harness.

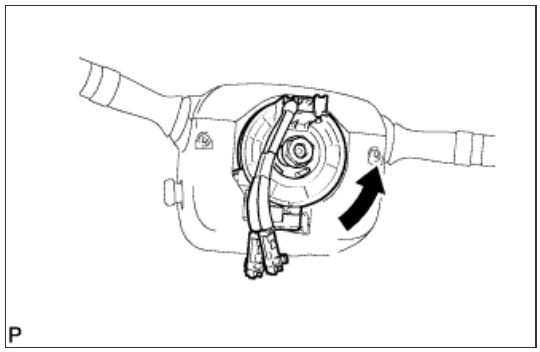


d. Rotate the spiral cable with steering sensor clockwise approximately 2.5 turns to align the marks.

CAUTION:

Do not turn the spiral cable with spiral sensor by the airbag wire harness.

HINT:

The spiral cable with steering sensor will rotate approximately 2.5 turns to both the left and right from the center.

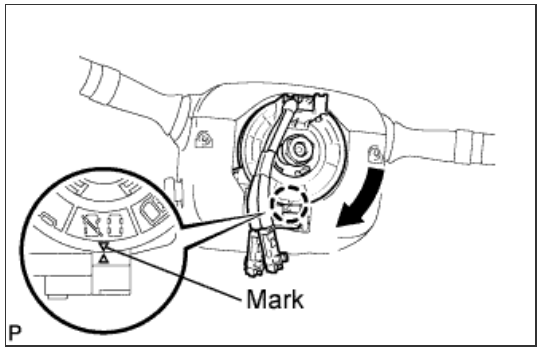


5. INSTALL STEERING WHEEL ASSEMBLY

a. Align the matchmarks on the steering wheel assembly and steering main shaft assembly.

b. Install the steering wheel assembly set nut.

Torque:
50 N*m{ 510 kgf*cm , 37 ft.*lbf }

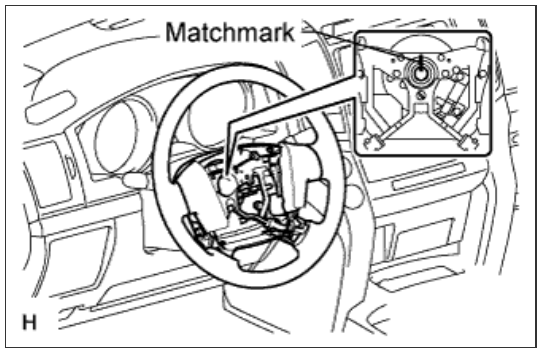

6. INSTALL STEERING PAD

a. Support the steering pad with one hand.

b. Connect the 2 connectors to the steering pad.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

c. Connect the horn connector.

d. Confirm that the circumference groove of the "TORX" screw fits in the screw case, and place the steering pad onto the steering wheel.


e. Using a T30 "TORX" socket wrench, tighten the 2 screws.

Torque:
8.8 N*m{ 90 kgf*cm , 78 in.*lbf }

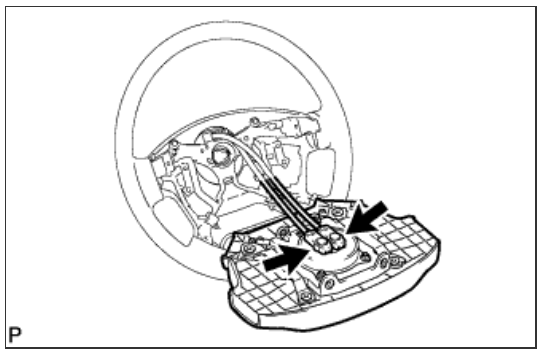


7. INSTALL LOWER NO. 3 STEERING WHEEL COVER

a. Attach the 2 claws to install the cover.

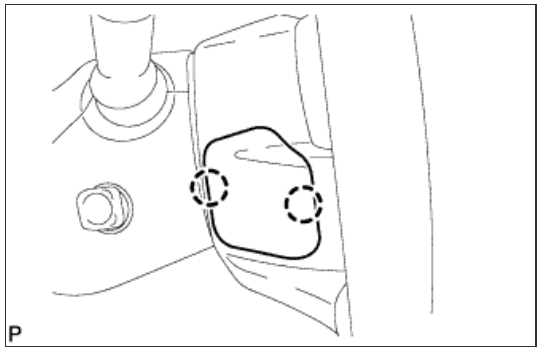

8. INSTALL LOWER NO. 2 STEERING WHEEL COVER

a. Attach the 2 claws to install the cover.

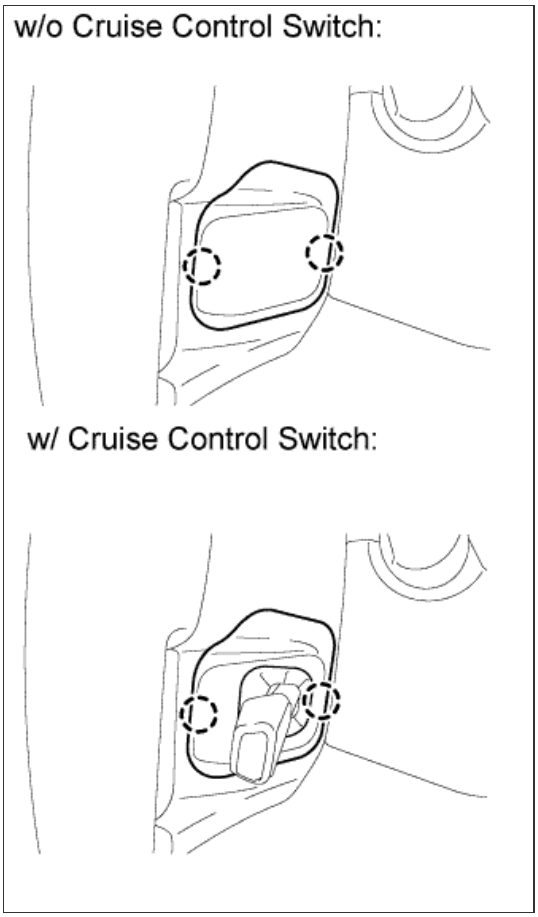

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

- hø disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. INSPECT STEERING PAD

a. With the steering pad installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the steering pad with a new one:
Cuts, minute cracks or marked discoloration on the steering pad top surface or in the grooved portion.

b. Make sure that the horn sounds.


HINT:

If the horn does not sound, inspect the horn system.

11. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

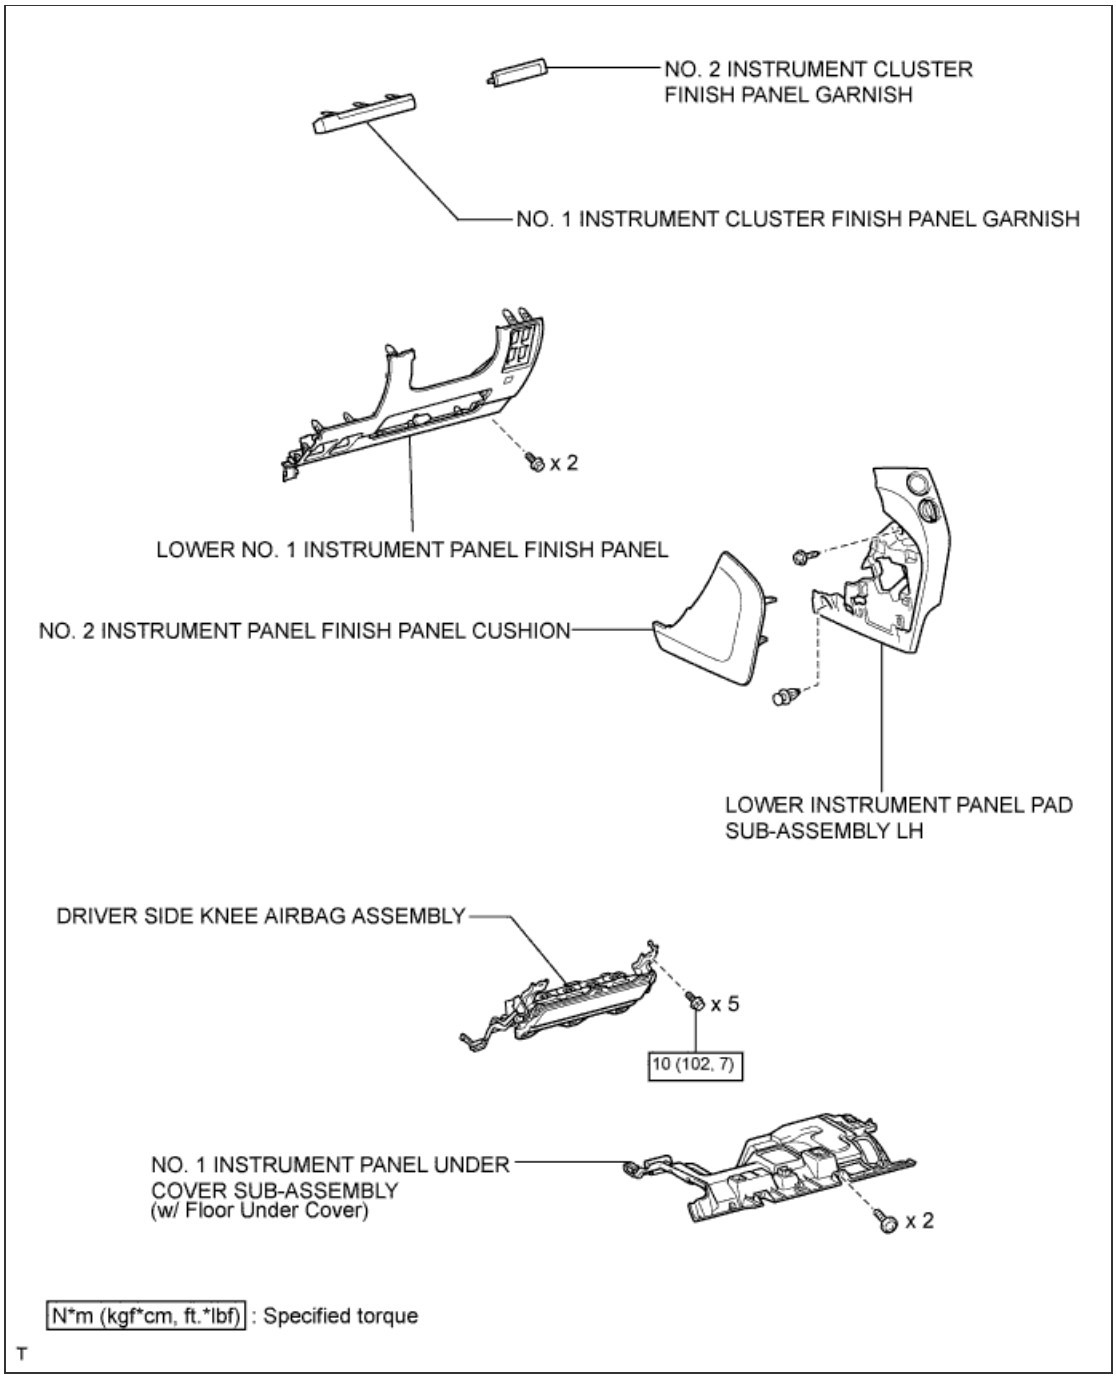


for Preparation Click here

1. CHECK DRIVER SIDE KNEE AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

b. With the driver side knee airbag installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the driver side knee airbag with a new one:
Cuts, minute cracks or marked discoloration on the driver side knee airbag.

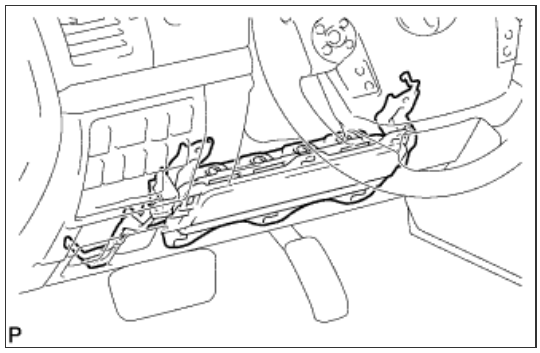

2. CHECK DRIVER SIDE KNEE AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)


a. Perform a diagnostic system check (Click here).

b. With the driver side knee airbag removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the driver side knee airbag with a new one:

- Cuts, minute cracks or marked discoloration on the driver side knee airbag.
- Cracks or other damage to the connector.
- Deformation or cracks on the instrument panel reinforcement.

NOTICE:

For removal and installation procedures of the driver side knee airbag, be sure to follow the correct procedure.

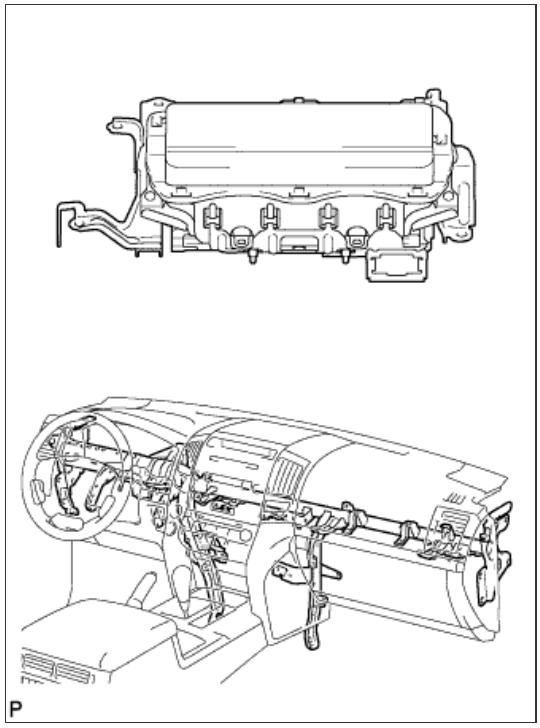

for Preparation Click here

HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

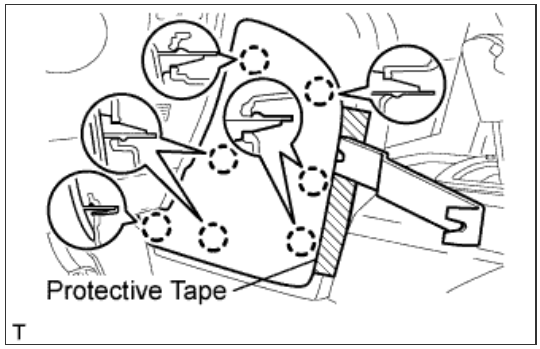


3. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

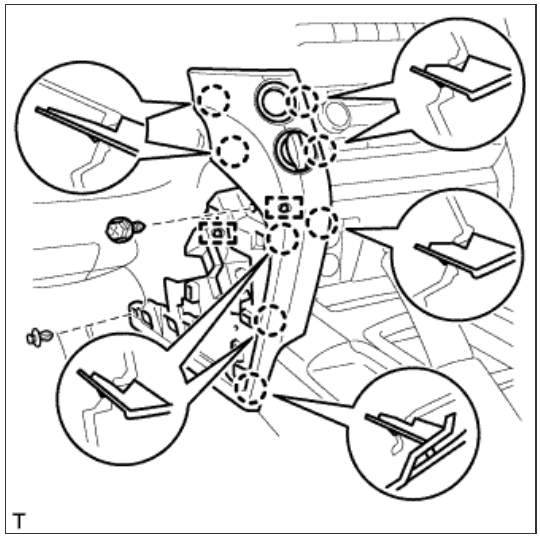

4. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

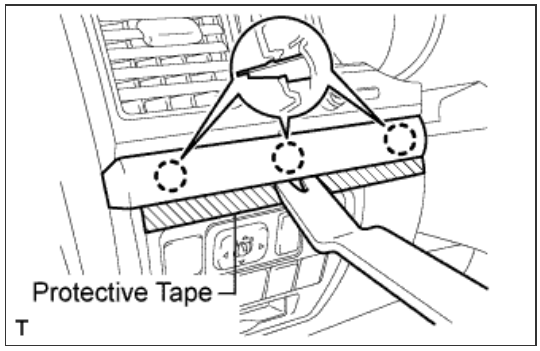

5. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

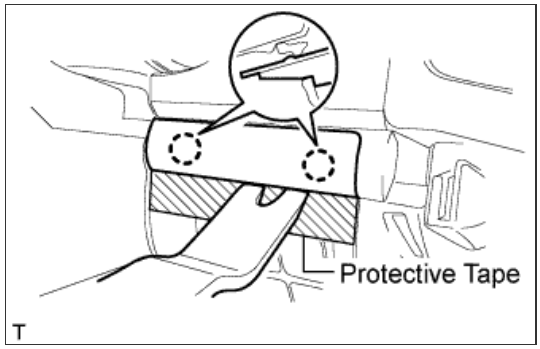


6. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.

c. Remove the under cover and disconnect the connectors.

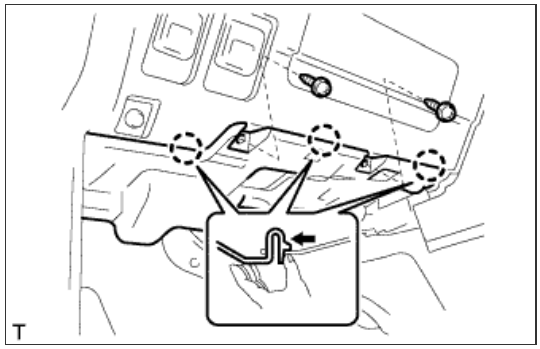


7. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

b. Open the hole cover.

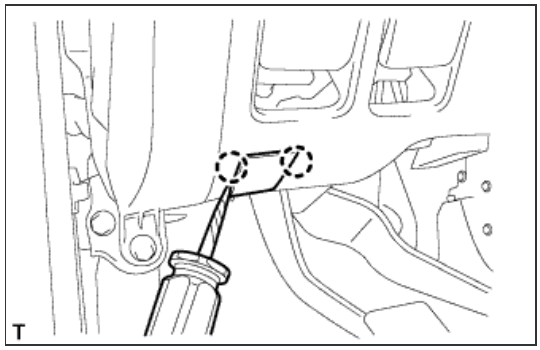


c. Remove the 2 bolts.

d. Detach the 14 claws.

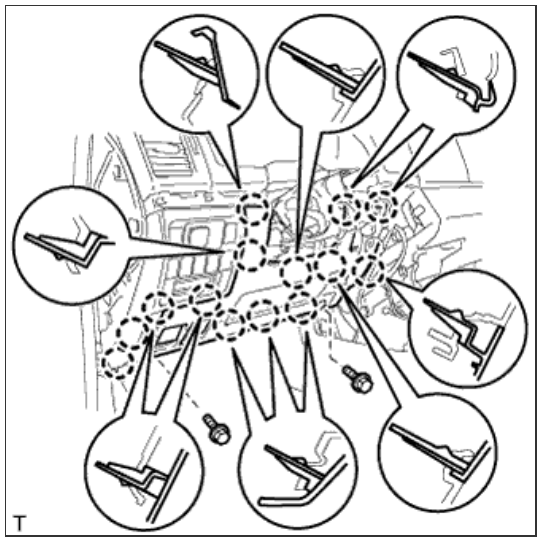


e. Detach the 2 claws and remove the sensor.

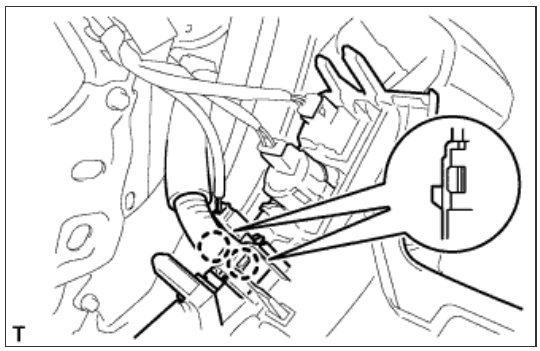

f. Detach the 2 claws and disconnect the 2 control cables.

g. Remove the finish panel and then disconnect the connectors.

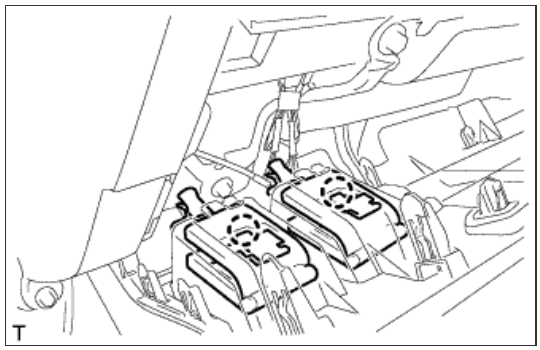

8. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY


a. Remove the 5 bolts and driver side knee airbag.

b. Disconnect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

for LHD:

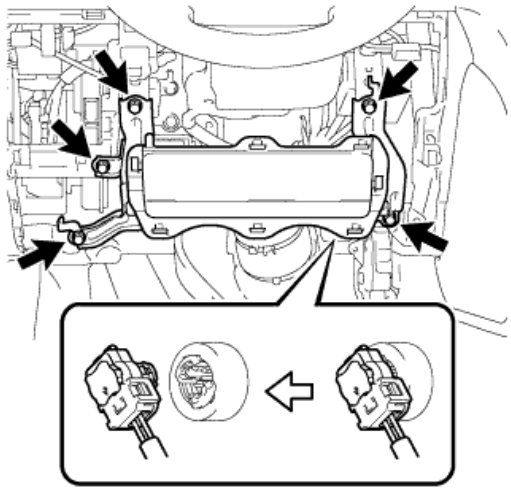

for RHD:

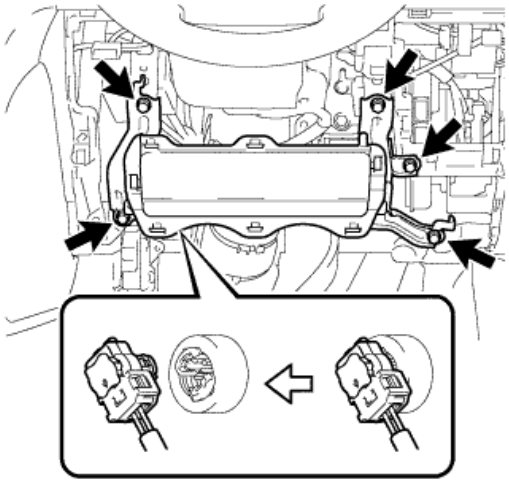

for Preparation Click here

HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

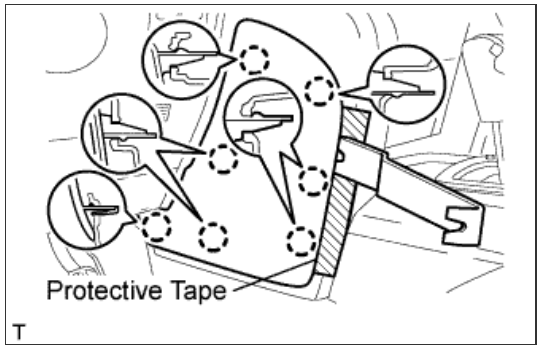


3. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

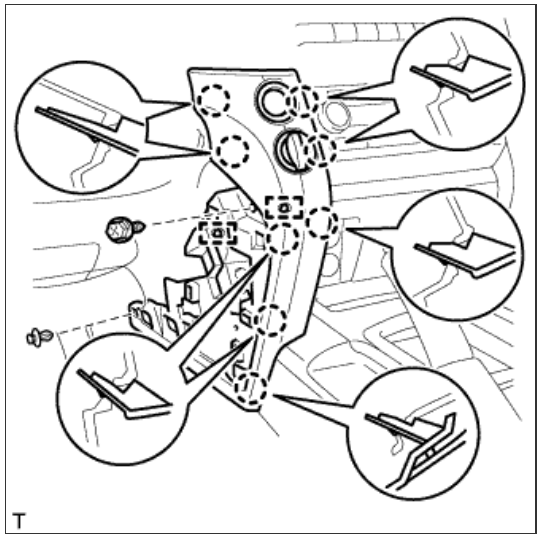

4. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

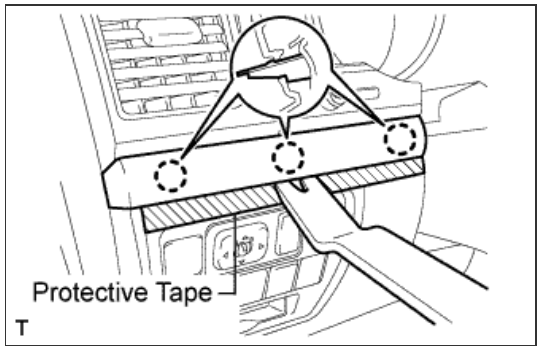

5. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

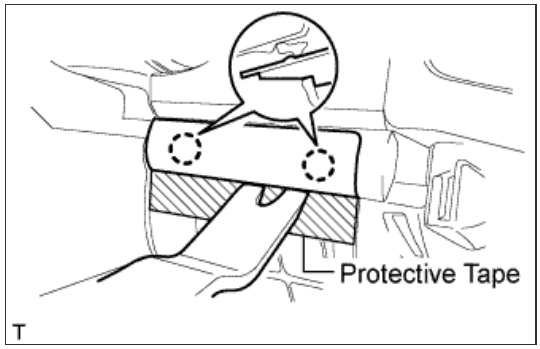


6. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.

c. Remove the under cover and disconnect the connectors.

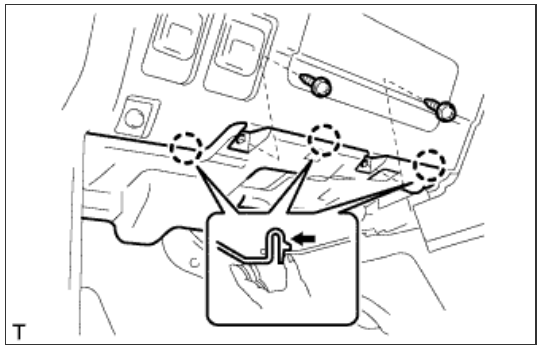


7. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

b. Open the hole cover.

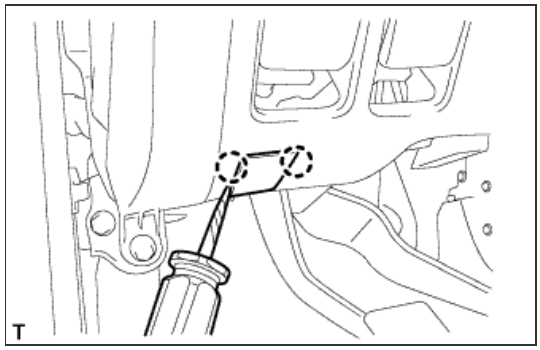


c. Remove the 2 bolts.

d. Detach the 14 claws.

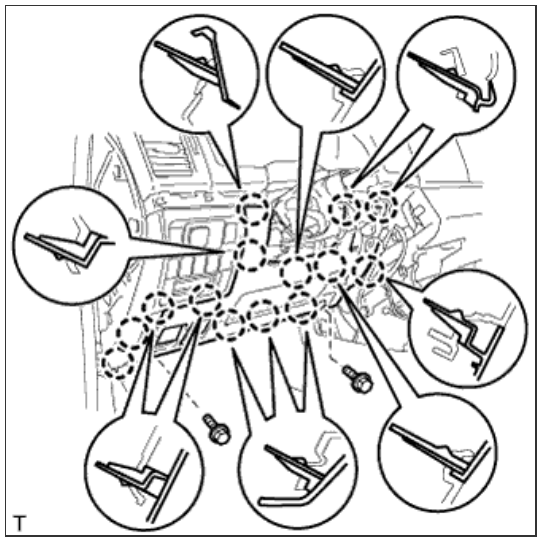


e. Detach the 2 claws and remove the sensor.

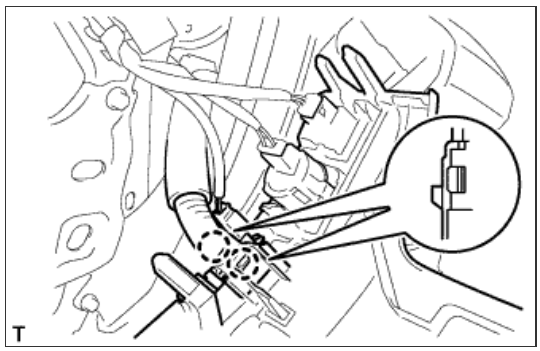

f. Detach the 2 claws and disconnect the 2 control cables.

g. Remove the finish panel and then disconnect the connectors.

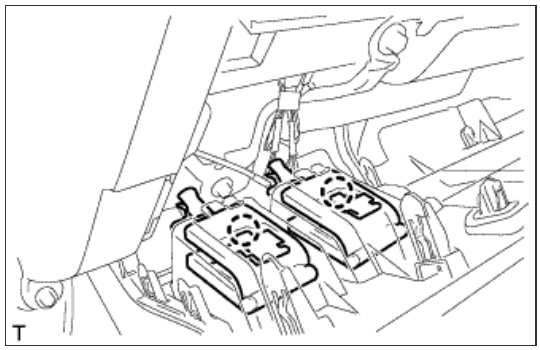

8. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY


a. Remove the 5 bolts and driver side knee airbag.

b. Disconnect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

for LHD:

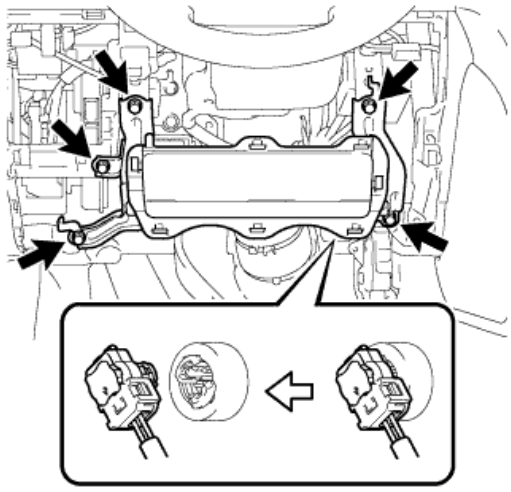

for RHD:

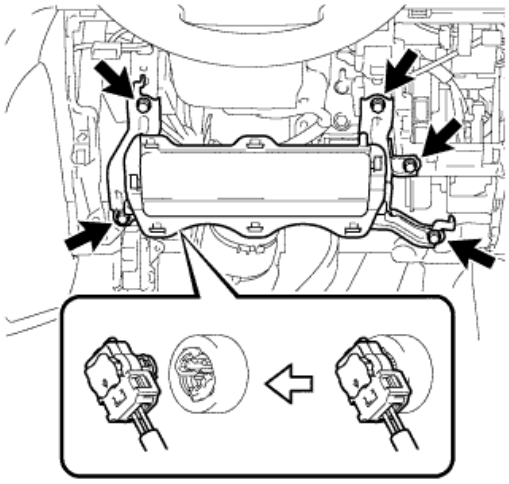

for Preparation Click here

HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**

1. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY


a. Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Install the driver side knee airbag with the 5 bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

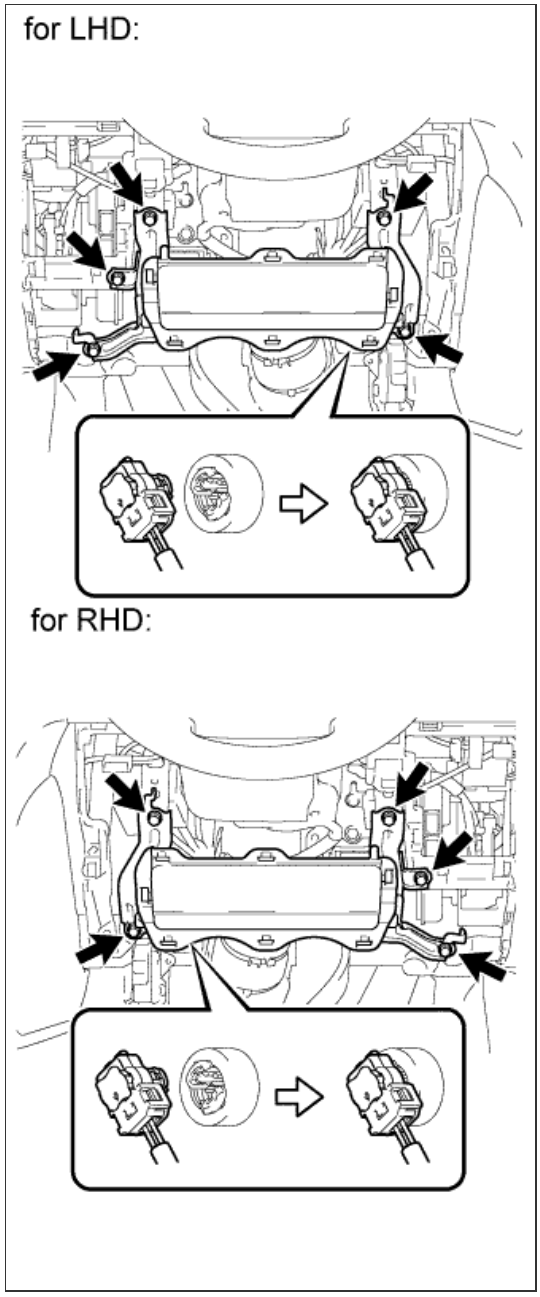


2. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

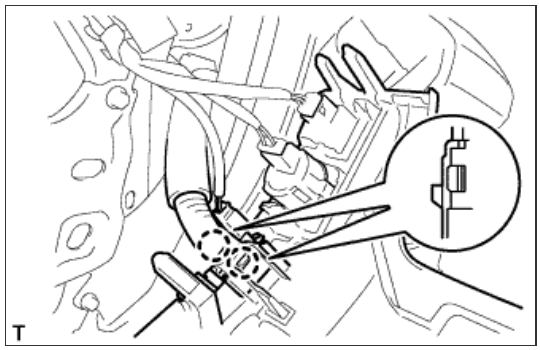


c. Attach the 2 claws to connect the 2 control cables.

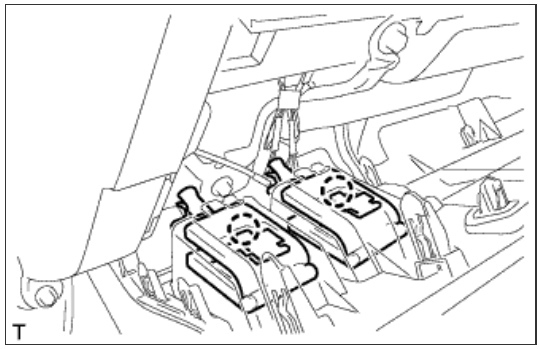


d. Attach the 14 claws to install the finish panel.

e. Install the 2 bolts.

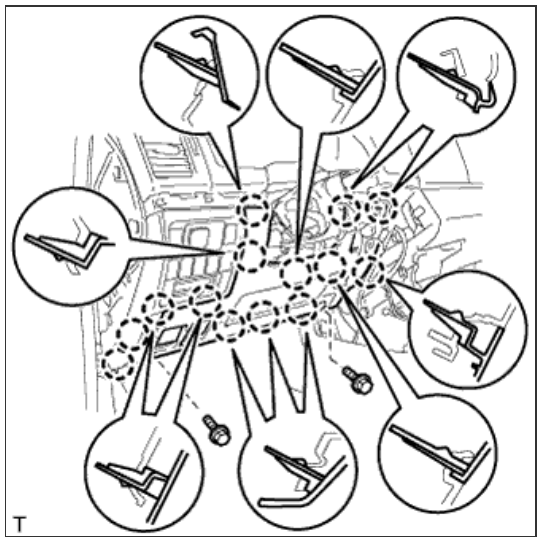

f. Attach the 2 claws to close the hole cover.

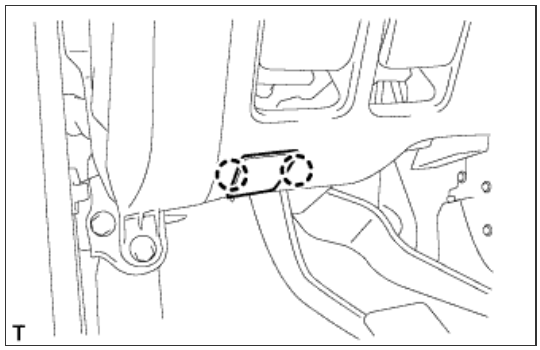


3. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.


b. Attach the 3 claws to install the under cover.

c. Install the 2 screws.

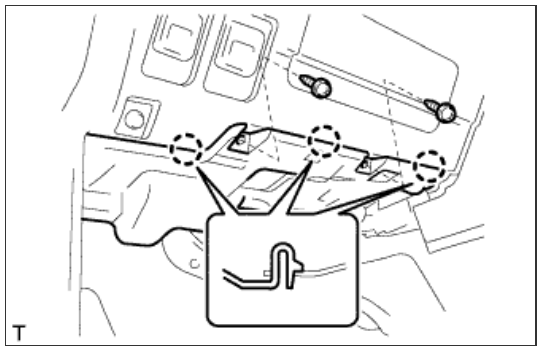


. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

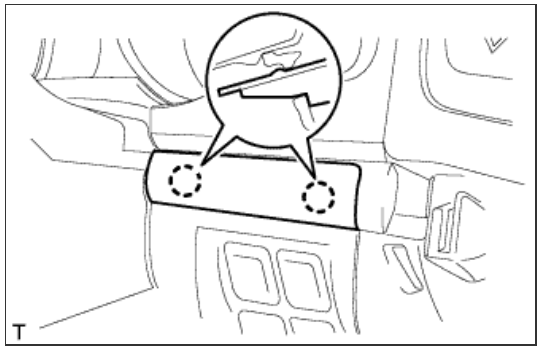

5. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

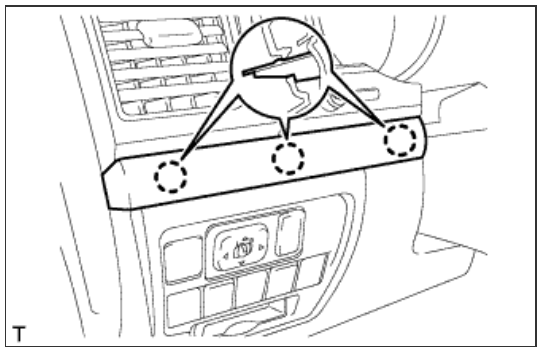


6. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

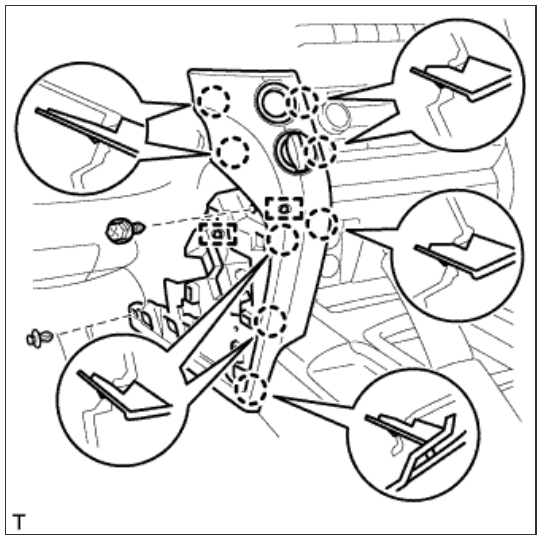

7. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

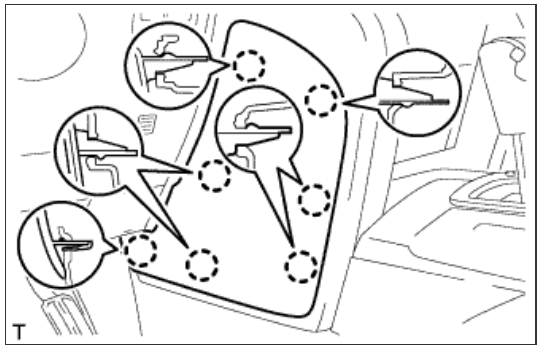

8. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

9. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**

1. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY


a. Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Install the driver side knee airbag with the 5 bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

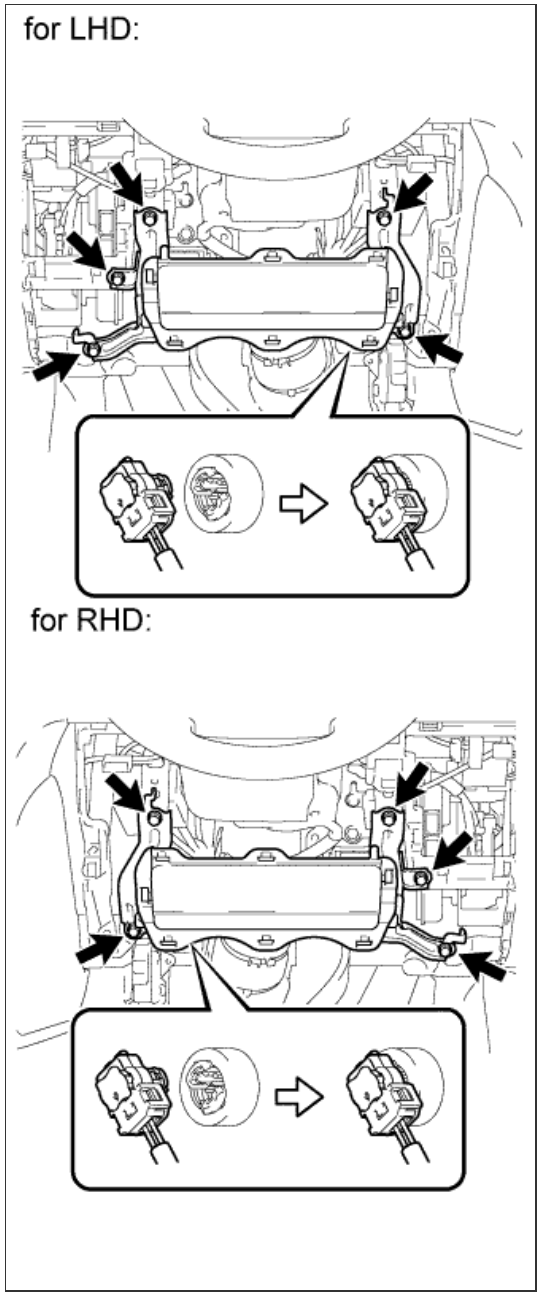


2. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

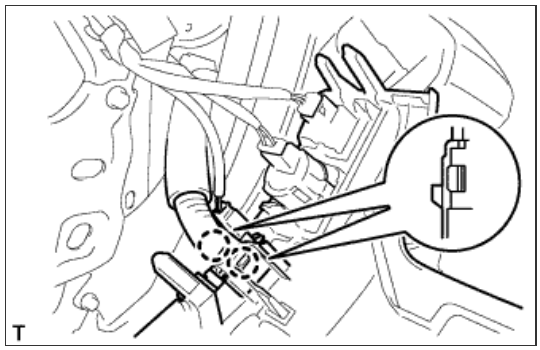


c. Attach the 2 claws to connect the 2 control cables.

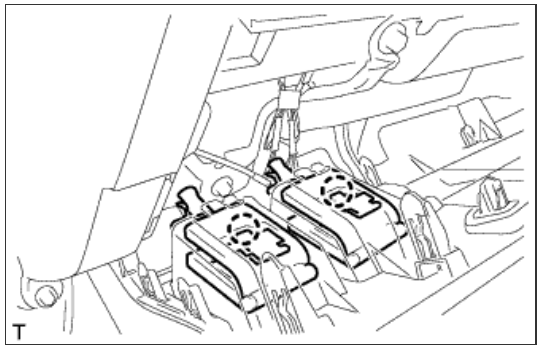


d. Attach the 14 claws to install the finish panel.

e. Install the 2 bolts.

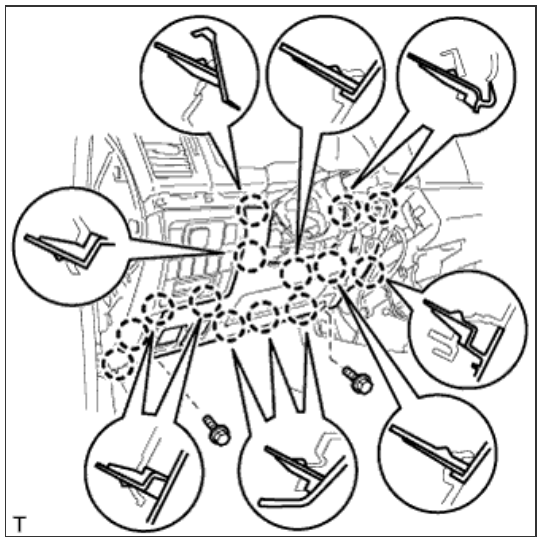

f. Attach the 2 claws to close the hole cover.

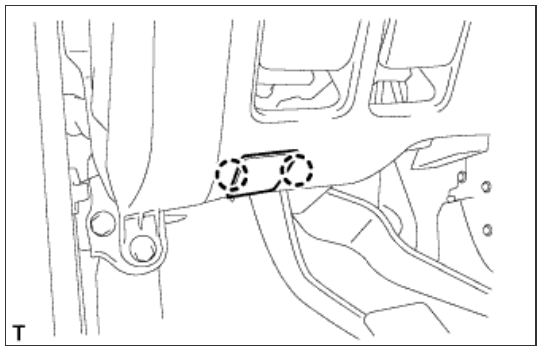


3. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.


b. Attach the 3 claws to install the under cover.

c. Install the 2 screws.

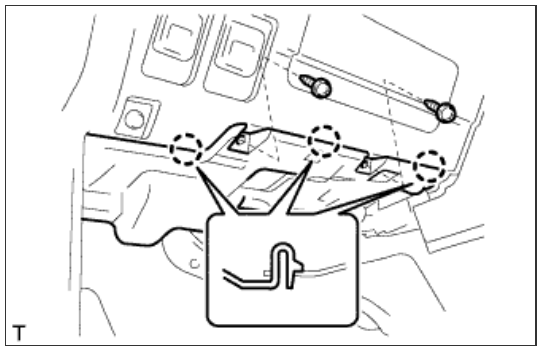


. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

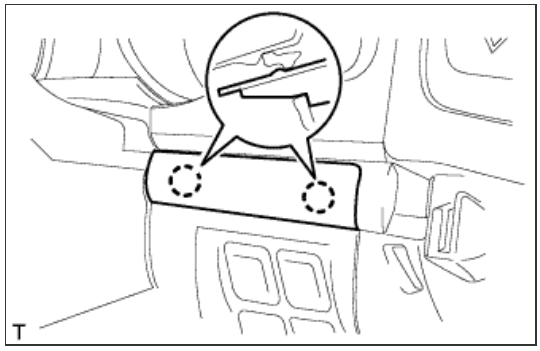

5. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

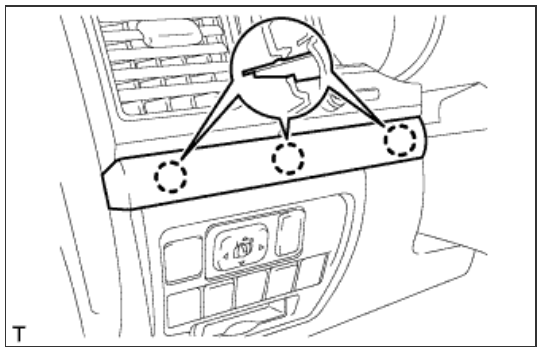


6. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

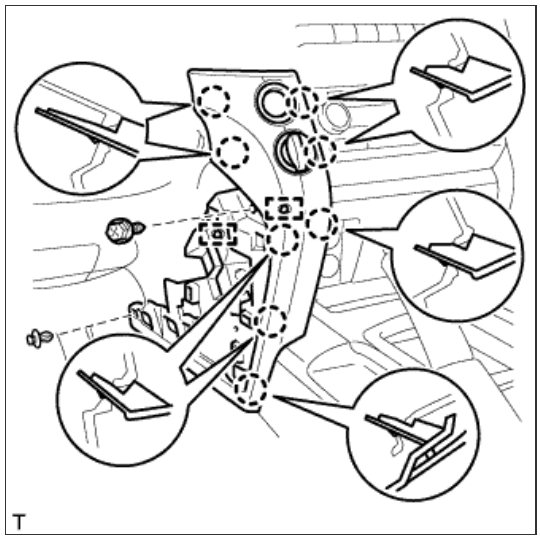

7. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

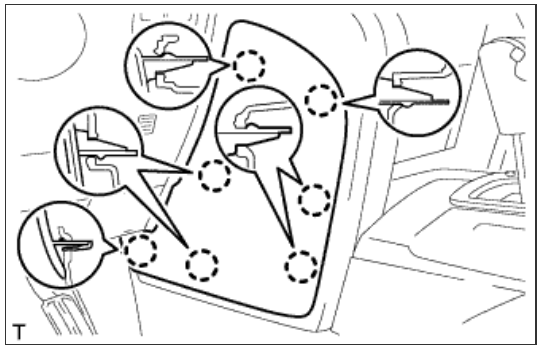

8. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

9. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a driver side knee airbag assembly that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the driver side knee airbag.**
- **The driver side knee airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a driver side knee airbag with a deployed airbag.**
- **Do not apply water to a driver side knee airbag assembly with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF DRIVER SIDE KNEE AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

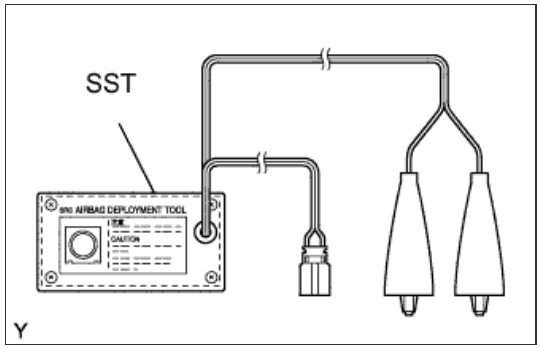

d. Remove the driver side knee airbag (Click here).


e. Install SST.

i. Connect SST connector to the driver side knee airbag.

SST
09082-00700
09082-00780

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

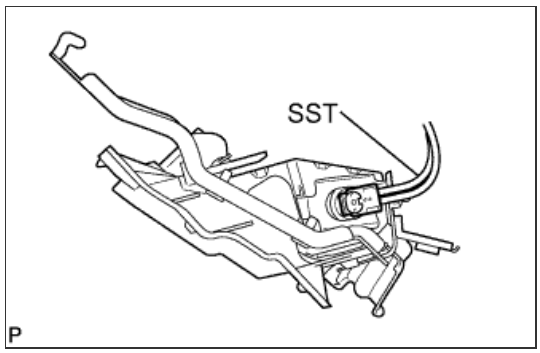

ii. Install the driver side knee airbag (Click here).

NOTICE:

Take care not to damage SST wire harness.


iii. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

iv. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

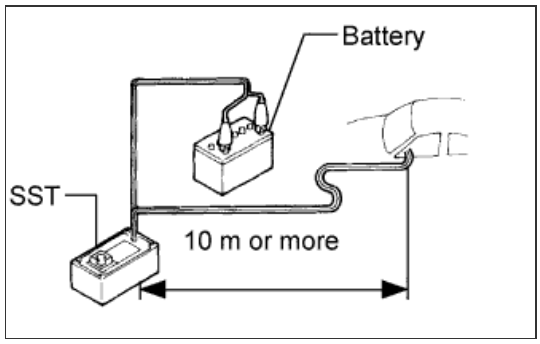

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The driver side knee airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a driver side knee airbag with a deployed airbag.**
- **Do not apply water to a driver side knee airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF DRIVER SIDE KNEE AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Remove the driver side knee airbag (Click here).

CAUTION:

- **When removing the driver side knee airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the driver side knee airbag, keep the airbag deployment side facing upward.**

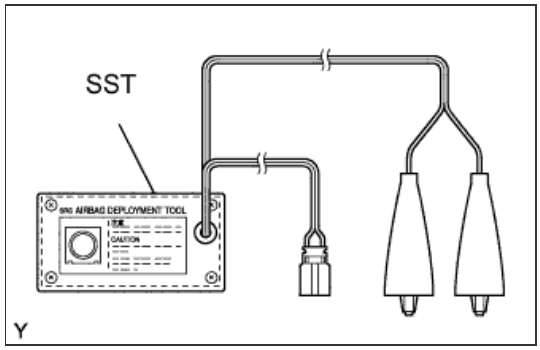


c. Using a service-purpose wire harness for the vehicle, tie down the driver side knee airbag to a tire.

Cross-sectional area of stripped wire harness section:
1.25 mm^2 or more (0.00192 $in.^2$ or more)

CAUTION:


If the wire harness is too thin or an alternative object is used to tie down the driver side knee airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 $in.^2$).

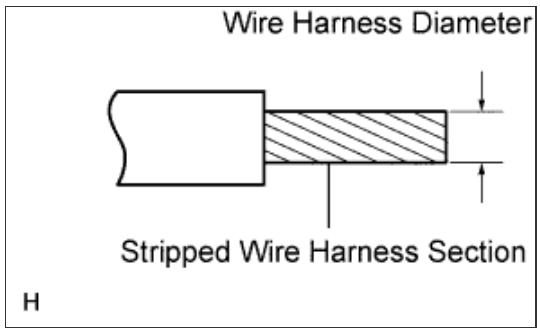

HINT:

To calculate the cross-sectional area of the stripped wire harness section Cross-sectional area 3.1 (Diameter) ^{2} divided by 4

i. Position the driver side knee airbag inside a tire with the airbag deployment side facing inside.

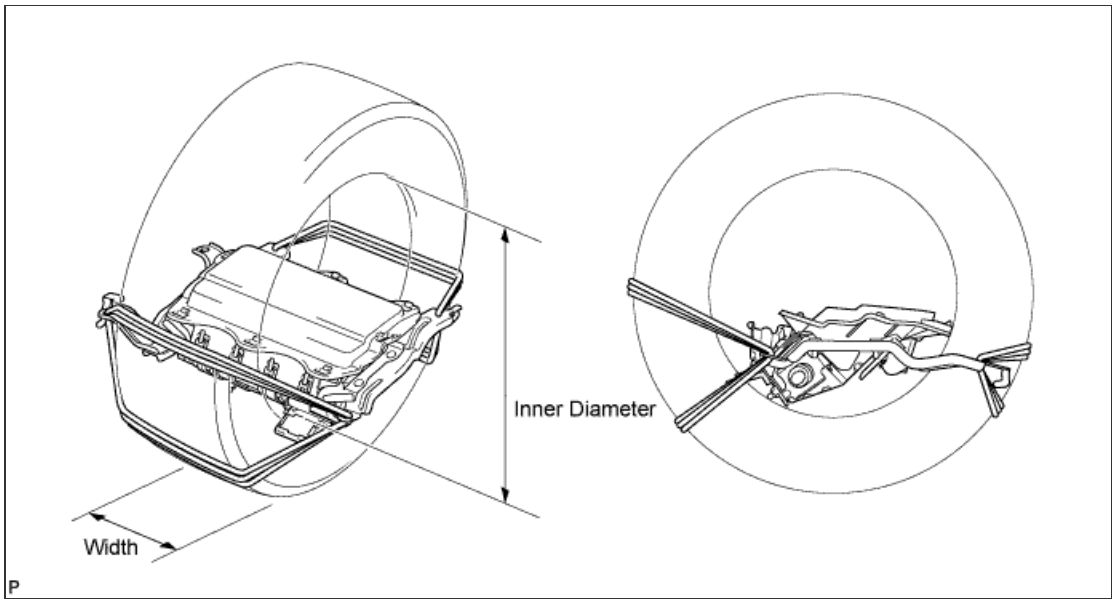

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

ii. Tie the driver side knee airbag to the tire with several wire harnesses.

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the driver side knee airbag may become loose due to the shock when the airbag is deployed.**
- **Always tie down the driver side knee airbag with the airbag deployment side facing inside the tire.**


NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.

d. Install SST.

i. Connect SST connector to the driver side knee airbag.


SST
09082-00780

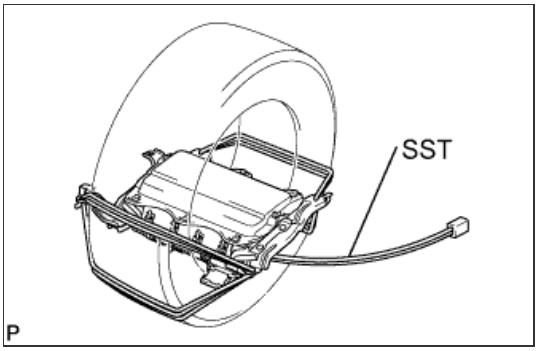

e. Place tires.

i. Place at least 2 tires under the tire which the driver side knee airbag is tied to.


ii. Place at least 2 tires over the tire which the driver side knee airbag is tied to. The top tire should have a disc wheel installed.

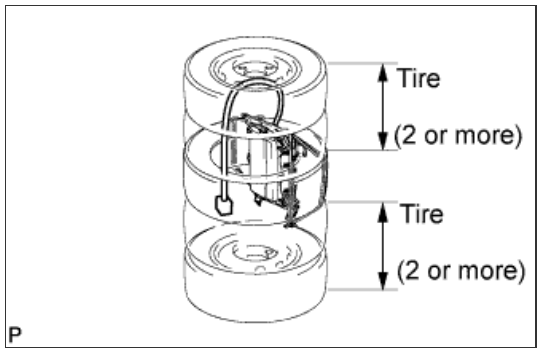

NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**


iii. Tie the tires together with 2 wire harnesses.

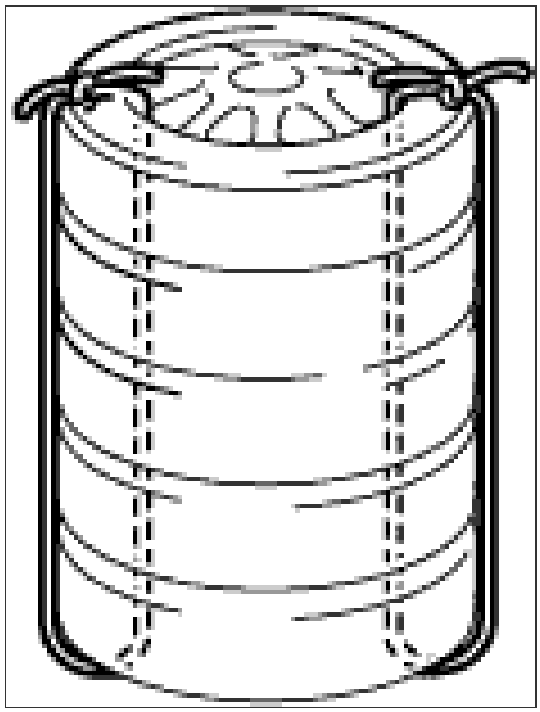

CAUTION:

Make sure that the wire harnesses are tight. ooseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

f. Install SST.

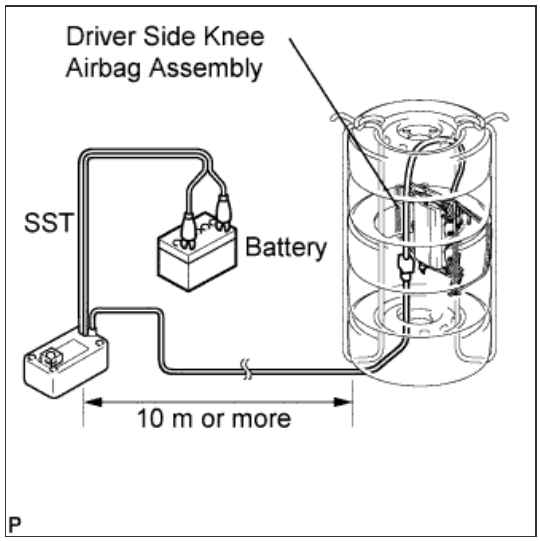

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the driver side knee airbag is tied to.

iii. Press SST activation switch to deploy the airbag.

CAUTION:

When deploying the airbag, make sure that no one is near the tire.


HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the driver side knee airbag.

CAUTION:

- **The driver side knee airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a driver side knee airbag with a deployed airbag.**
- **Do not apply water to a driver side knee airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

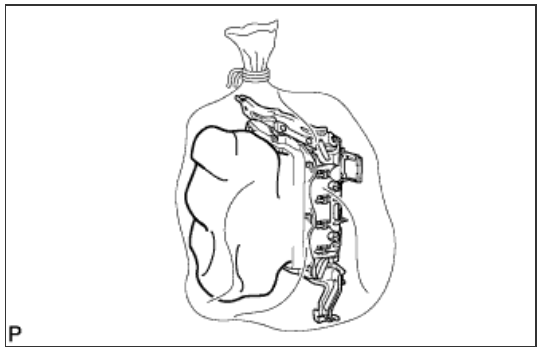

i. Remove the driver side knee airbag from the tire.

ii. Place the driver side knee airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a driver side knee airbag assembly that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the driver side knee airbag.**
- **The driver side knee airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a driver side knee airbag with a deployed airbag.**
- **Do not apply water to a driver side knee airbag assembly with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF DRIVER SIDE KNEE AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

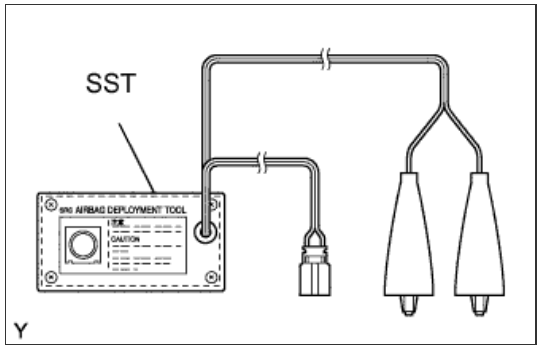

d. Remove the driver side knee airbag (Click here).


e. Install SST.

i. Connect SST connector to the driver side knee airbag.

SST
09082-00700
09082-00780

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

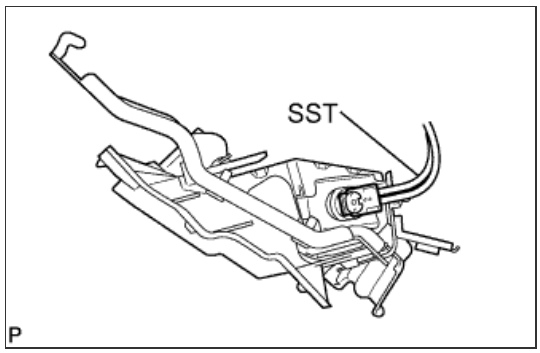

ii. Install the driver side knee airbag (Click here).

NOTICE:

Take care not to damage SST wire harness.


iii. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

iv. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

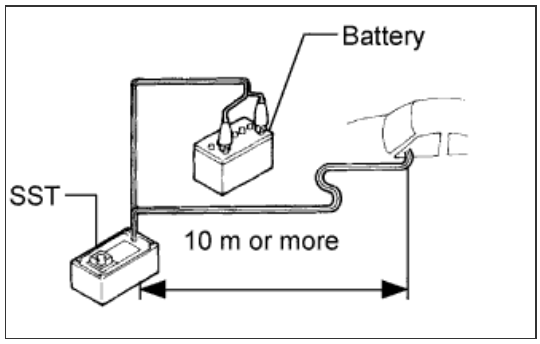

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The driver side knee airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a driver side knee airbag with a deployed airbag.**
- **Do not apply water to a driver side knee airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF DRIVER SIDE KNEE AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Remove the driver side knee airbag (Click here).

CAUTION:

- **When removing the driver side knee airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the driver side knee airbag, keep the airbag deployment side facing upward.**

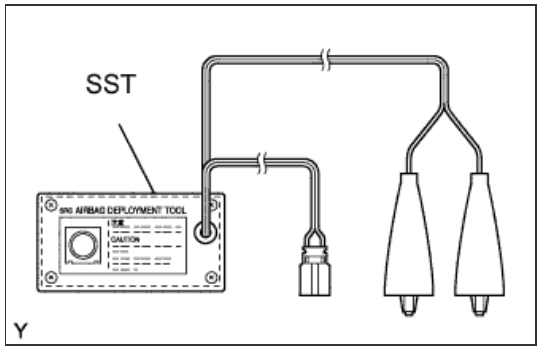


c. Using a service-purpose wire harness for the vehicle, tie down the driver side knee airbag to a tire.

Cross-sectional area of stripped wire harness section:
1.25 mm^2 or more (0.00192 $in.^2$ or more)

CAUTION:


If the wire harness is too thin or an alternative object is used to tie down the driver side knee airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 $in.^2$).

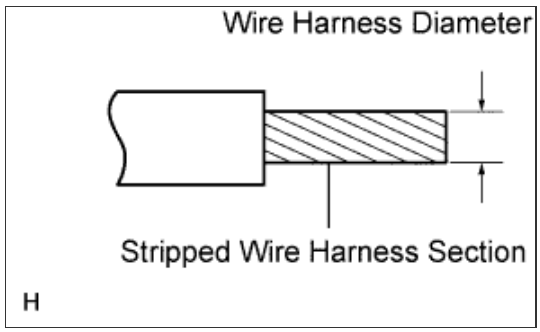

HINT:

To calculate the cross-sectional area of the stripped wire harness section Cross-sectional area 3.1 (Diameter) ^{2} divided by 4

i. Position the driver side knee airbag inside a tire with the airbag deployment side facing inside.

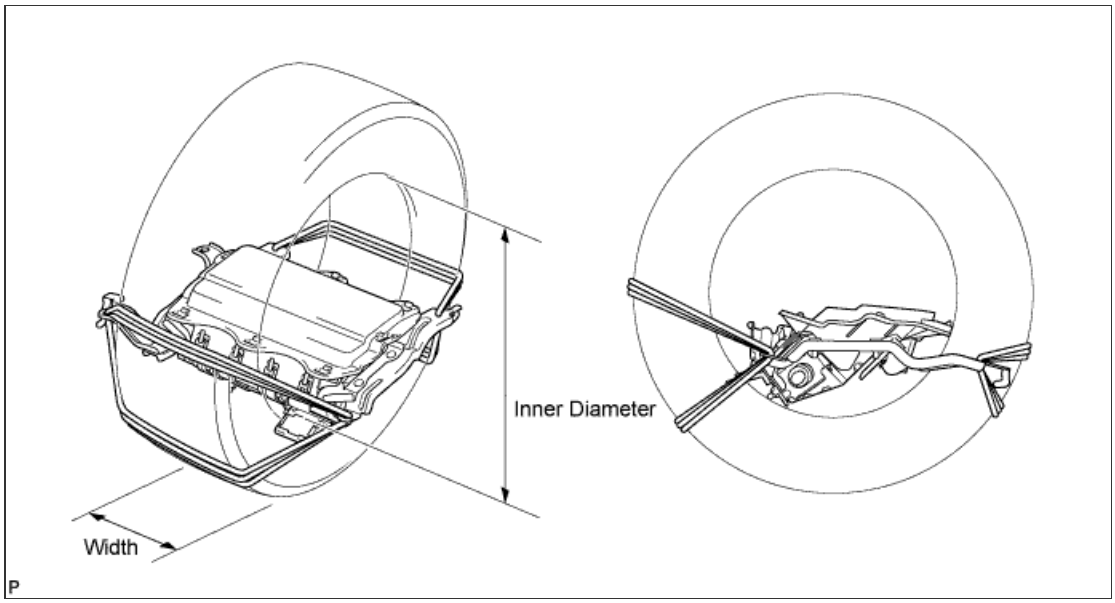

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

ii. Tie the driver side knee airbag to the tire with several wire harnesses.

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the driver side knee airbag may become loose due to the shock when the airbag is deployed.**
- **Always tie down the driver side knee airbag with the airbag deployment side facing inside the tire.**


NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.

d. Install SST.

i. Connect SST connector to the driver side knee airbag.


SST
09082-00780

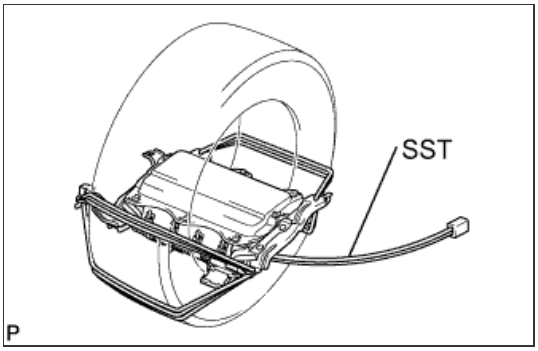

e. Place tires.

i. Place at least 2 tires under the tire which the driver side knee airbag is tied to.


ii. Place at least 2 tires over the tire which the driver side knee airbag is tied to. The top tire should have a disc wheel installed.

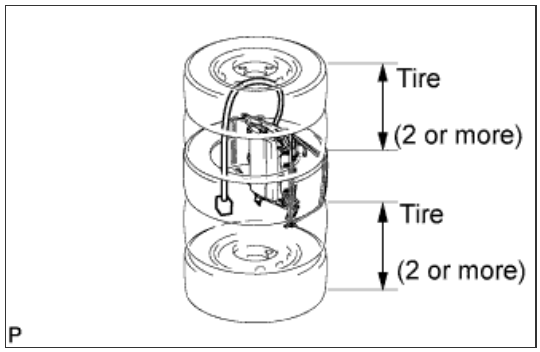

NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**


iii. Tie the tires together with 2 wire harnesses.

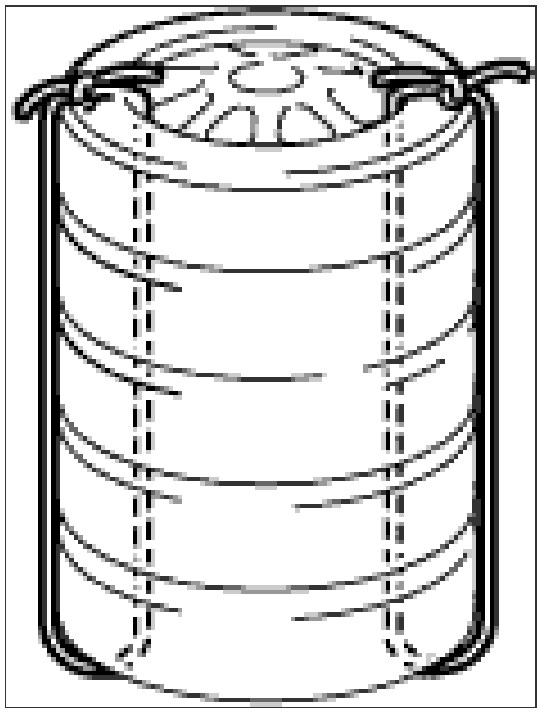

CAUTION:

Make sure that the wire harnesses are tight. ooseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

f. Install SST.

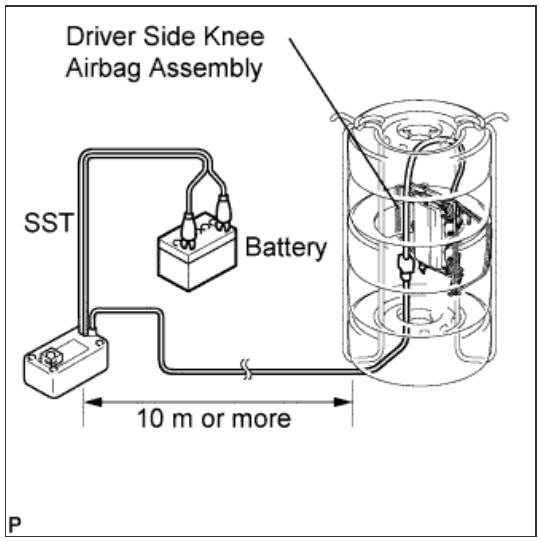

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the driver side knee airbag is tied to.

iii. Press SST activation switch to deploy the airbag.

CAUTION:

When deploying the airbag, make sure that no one is near the tire.


HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the driver side knee airbag.

CAUTION:


- **The driver side knee airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a driver side knee airbag with a deployed airbag.**
- **Do not apply water to a driver side knee airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

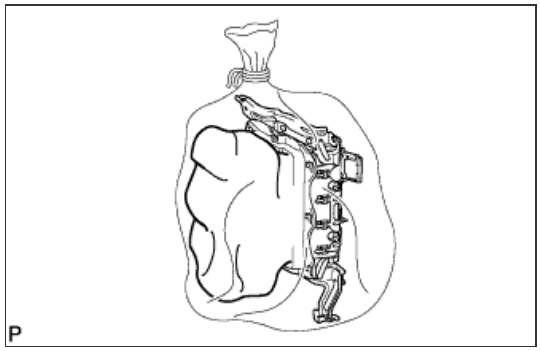

i. Remove the driver side knee airbag from the tire.

ii. Place the driver side knee airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

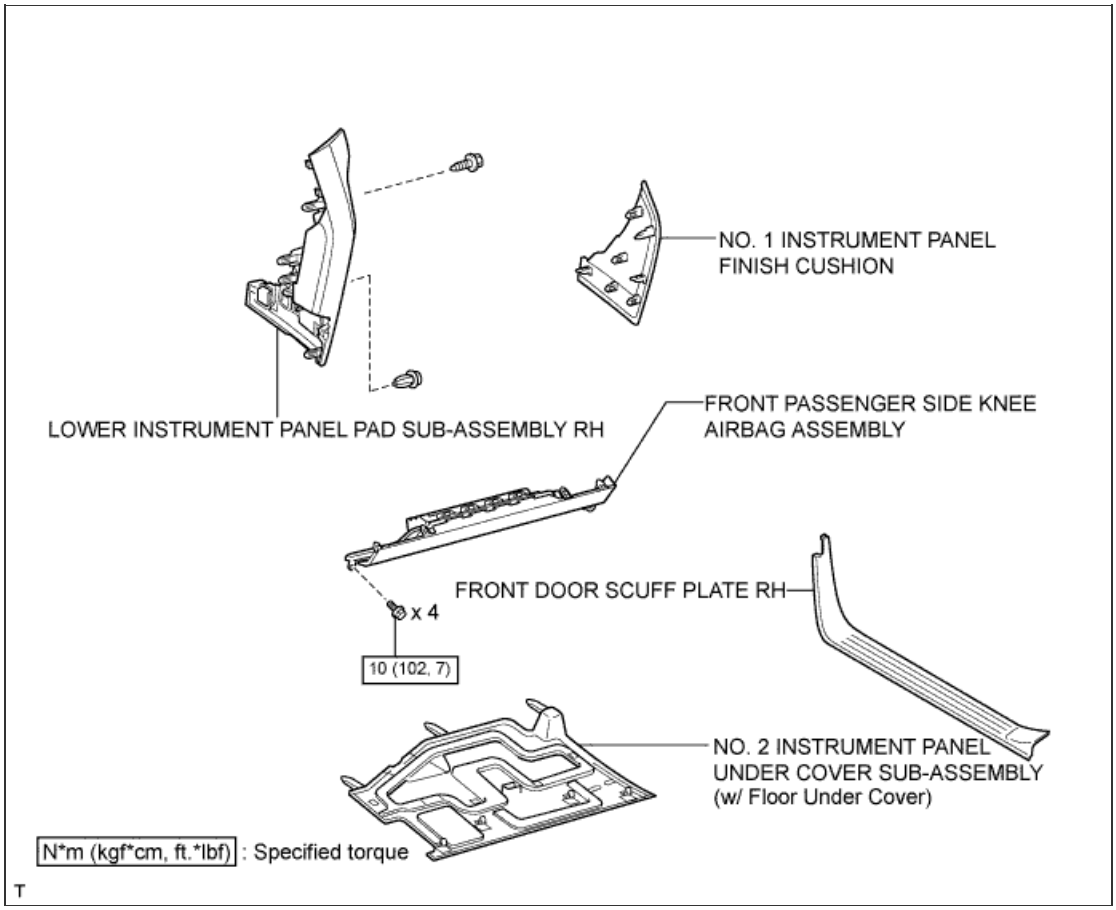


for Preparation Click here

1. CHECK FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

b. With the front passenger side knee airbag installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front passenger side knee airbag with a new one:
Cuts, minute cracks or marked discoloration on the front passenger side knee airbag.

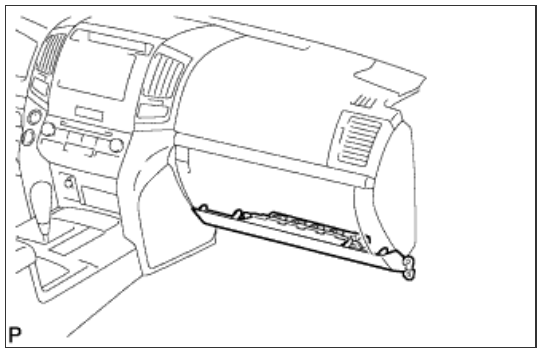

2. CHECK FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)


a. Perform a diagnostic system check (Click here).

b. With the front passenger side knee airbag removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front passenger side knee airbag with a new one:

- Cuts, minute cracks or marked discoloration on the front passenger side knee airbag.
- Cracks or other damage to the connector.
- Deformation or cracks on the instrument panel reinforcement.

NOTICE:

For removal and installation procedures of the front passenger side knee airbag, be sure to follow the correct procedure.

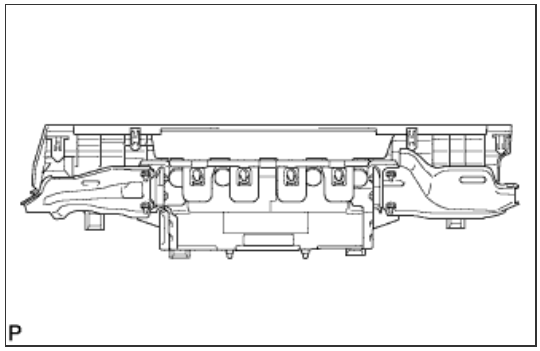

for Preparation Click here

HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same proced res described for the L side.

3. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the ill stration.

b. Using a mo ding remover, detach the 7 claws and remove the panel c shion.




4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

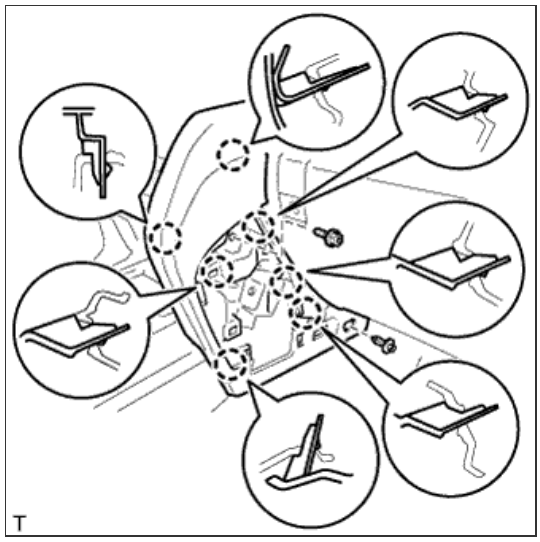

5. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Detach the 4 claws and remove the nder cover.

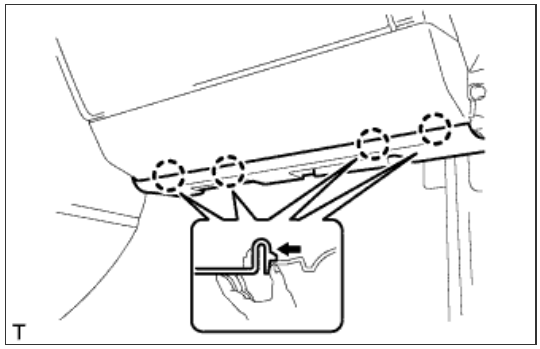

6. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY

a. Remove the 4 bolts.


b. Detach the 4 claws and remove the front passenger side knee airbag.

c. Disconnect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

for LHD:

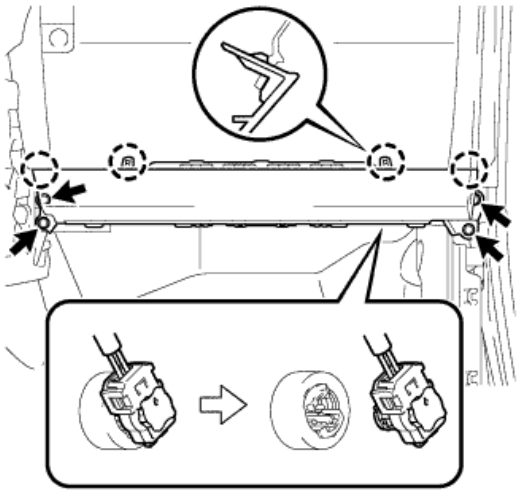

for RHD:

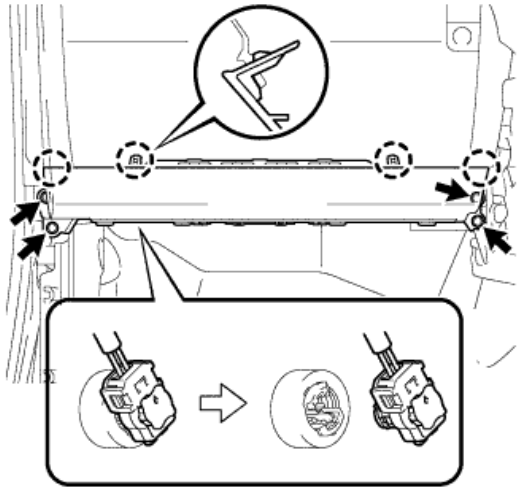

for Preparation Click here

HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Use the same proced res described for the L side.

3. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the ill stration.

b. Using a mo ding remover, detach the 7 claws and remove the panel c shion.




4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

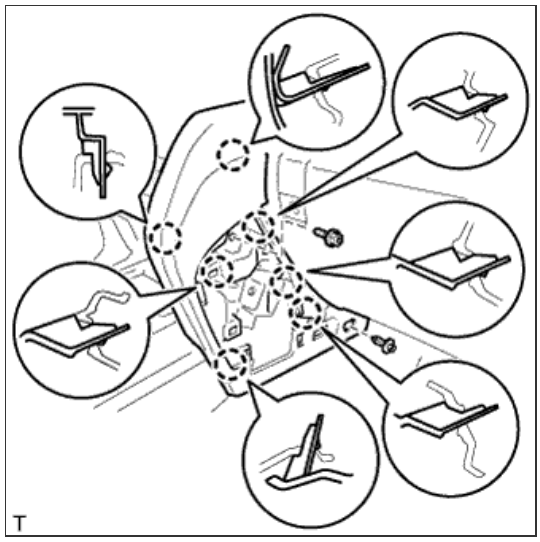

5. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Detach the 4 claws and remove the nder cover.

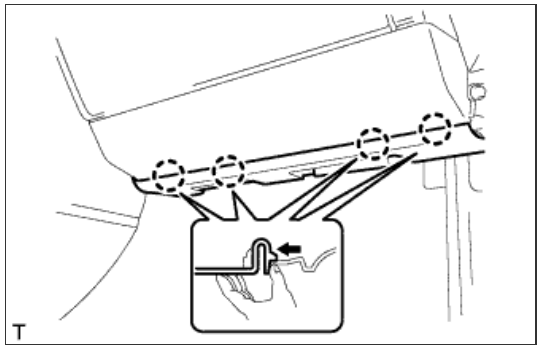

6. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY

a. Remove the 4 bolts.


b. Detach the 4 claws and remove the front passenger side knee airbag.

c. Disconnect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

for LHD:

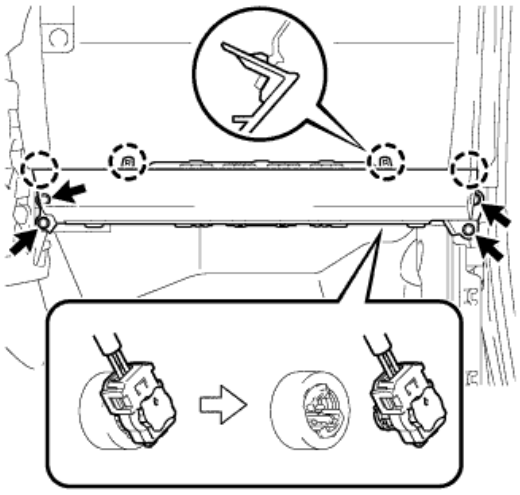

for RHD:

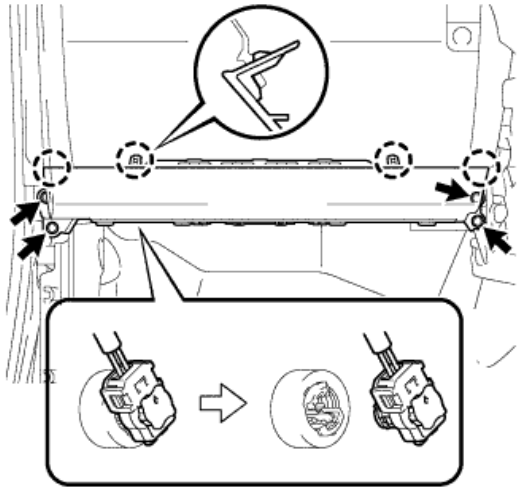

for Preparation Click here

HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**

1. INSTALL FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY

a. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Attach the claws to install the front passenger side knee airbag.


c. nstall the bolts.

Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

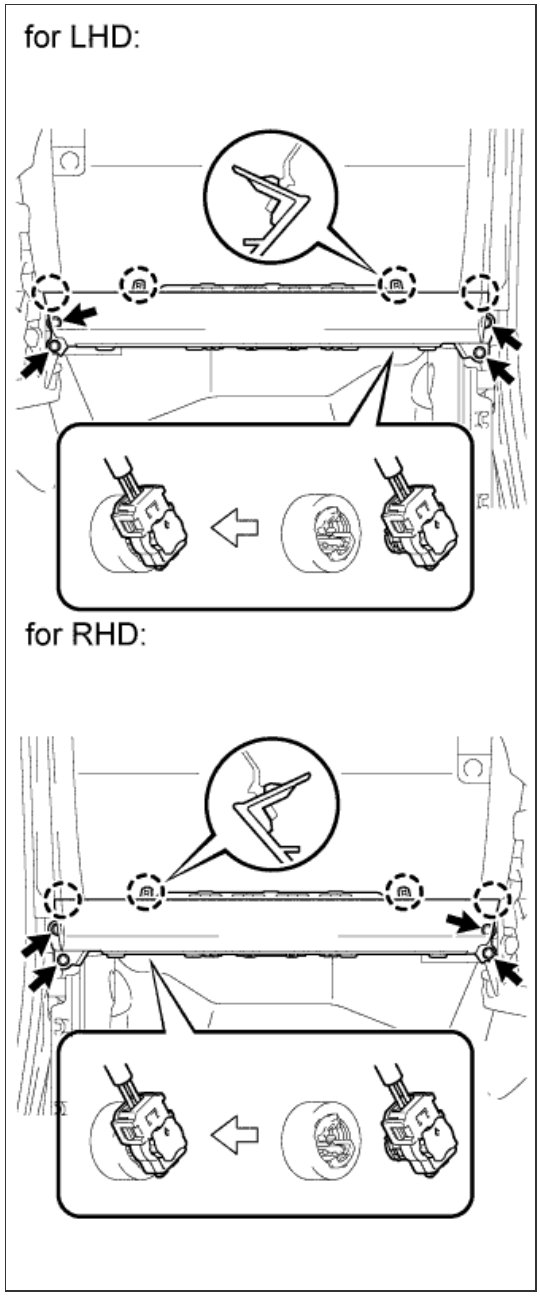

2. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Attach the claws to install the under cover.

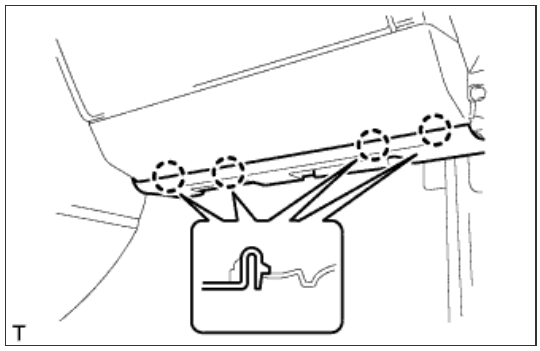


. INSTALL LO ER INSRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. nstall the screw.

c. nstall the clip.

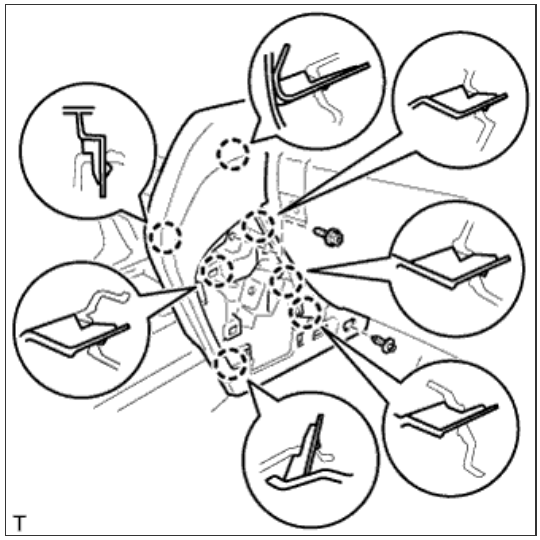

4. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

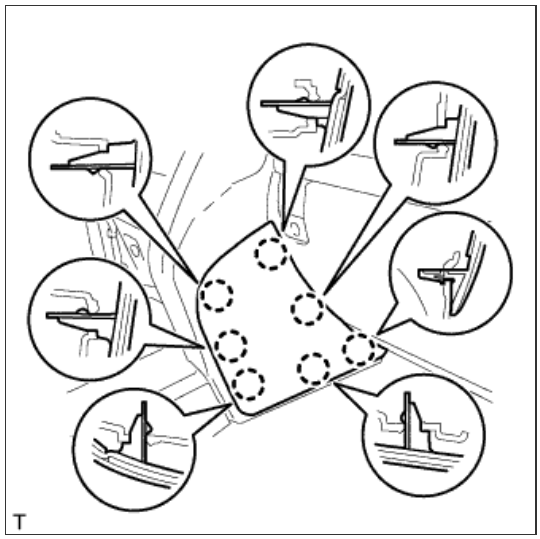

5. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the L ide.

. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initiali ed after the cable is reconnected (Click here).

7. CHECK SRS ARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**

1. INSTALL FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY

a. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Attach the claws to install the front passenger side knee airbag.


c. nstall the bolts.

Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

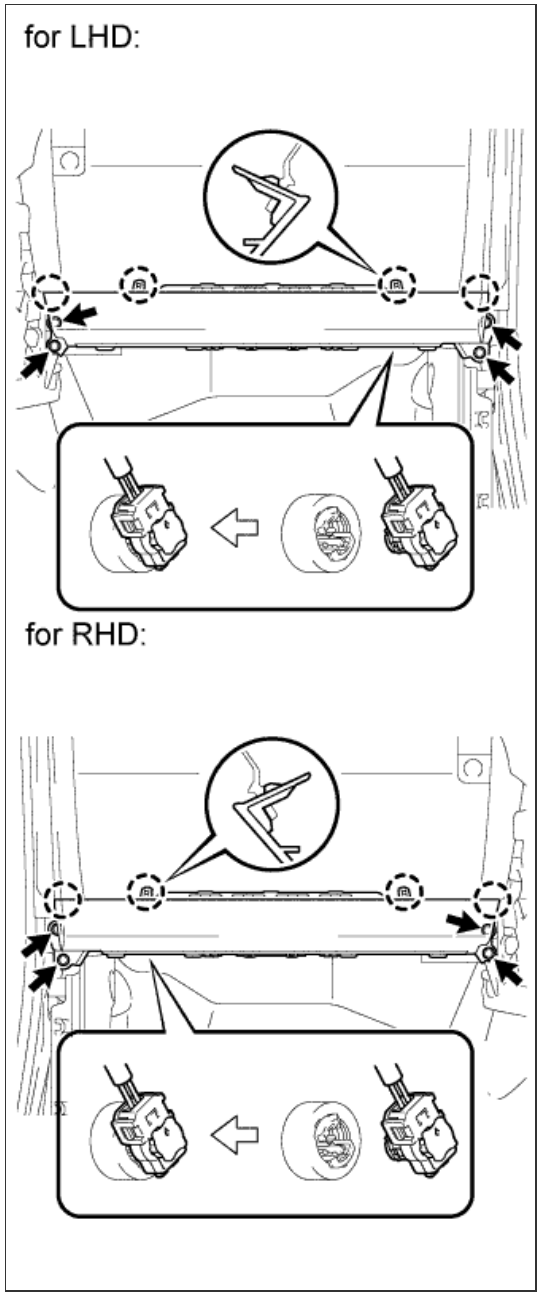

2. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Attach the claws to install the under cover.

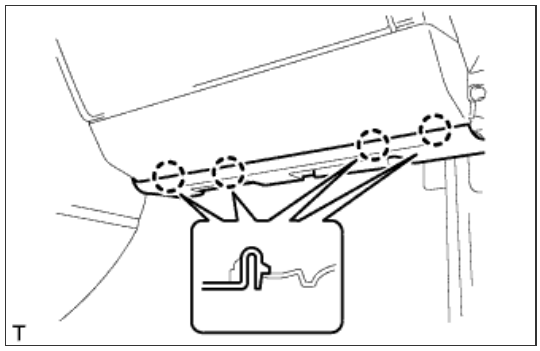


. INSTALL LO B INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. nstall the screw.

c. nstall the clip.

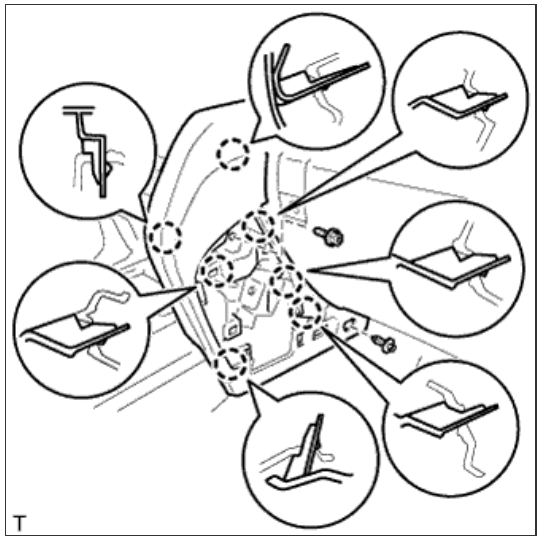

4. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

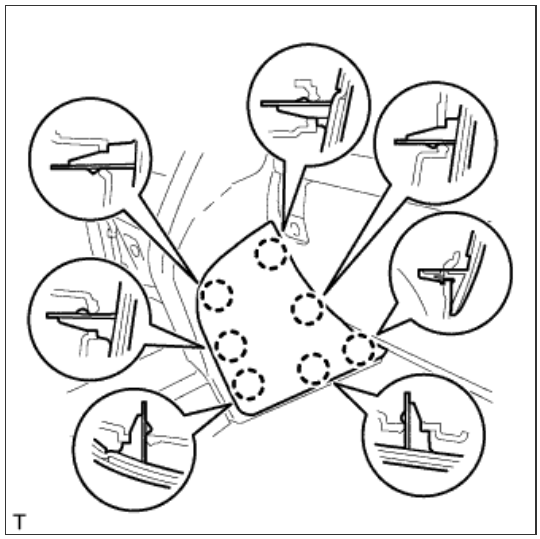

5. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the L ide.

. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initiali ed after the cable is reconnected (Click here).

7. CHECK SRS ARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a front passenger side knee airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the front passenger side knee airbag.**
- **The front passenger side knee airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger side knee airbag with a deployed airbag.**
- **Do not apply water to a front passenger side knee airbag assembly with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

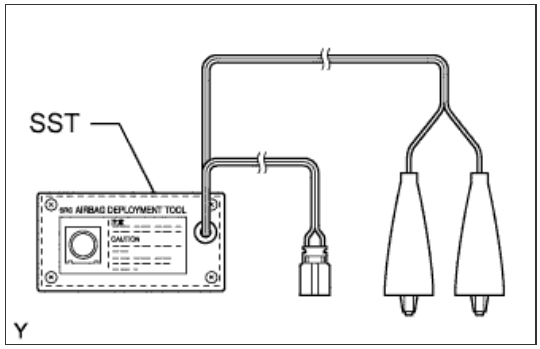

d. Remove the front passenger side knee airbag (Click here).


e. Install SST.

i. Connect SST connector to the front passenger side knee airbag.

SST
09082-00700
09082-00770

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

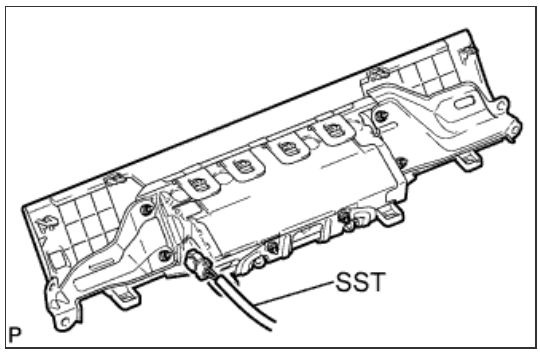

ii. Install the front passenger side knee airbag (Click here).

NOTICE:

Take care not to damage SST wire harness.


iii. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

iv. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

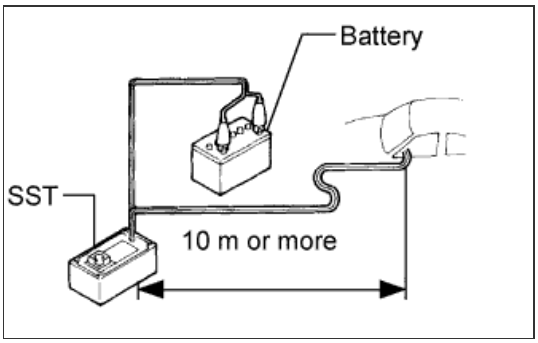

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The front passenger side knee airbag assembly becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger side knee airbag assembly with a deployed airbag.**
- **Do not apply water to a front passenger side knee airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Remove the front passenger side knee airbag (Click here).

CAUTION:

- **When removing the front passenger side knee airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the front passenger side knee airbag, keep the airbag deployment side facing upward.**

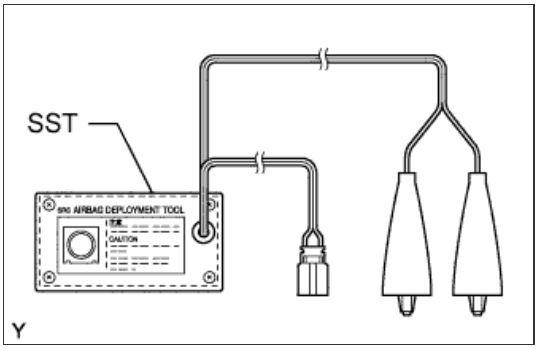

c. Using a service-purpose wire harness for the vehicle, tie down the front passenger side knee airbag to a tire.


Cross-sectional area of stripped wire harness section:
1.25 mm^2 or more (0.00192 $in.^2$ or more)

CAUTION:

If the wire harness is too thin or an alternative object is used to tie down the front passenger side knee airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 $in.^2$).


HINT:

To calculate the cross-sectional area of the stripped wire harness section
Cross-sectional area 3.1 (Diameter)^2 divided by 4

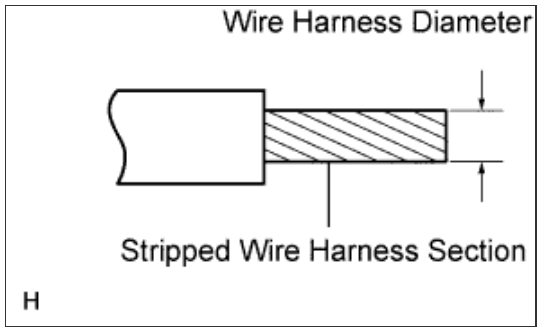

i. Position the front passenger side knee airbag inside a tire with the airbag deployment side facing inside.

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

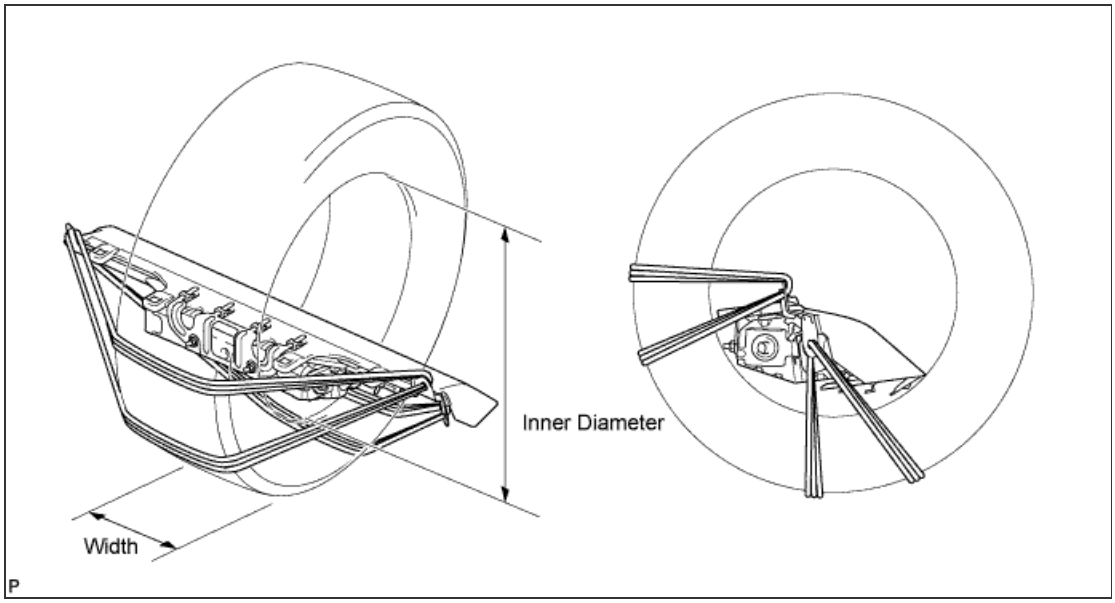

ii. Tie the front passenger side knee airbag to the tire with several wire harnesses.

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the front passenger side knee airbag may become loose due to the shock when the airbag is deployed.**
- **Always tie down the front passenger side knee airbag with the airbag deployment side facing inside the tire.**


NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.


d. Install SST.

i. Connect SST connector to the front passenger side knee airbag.

SST
09082-00770

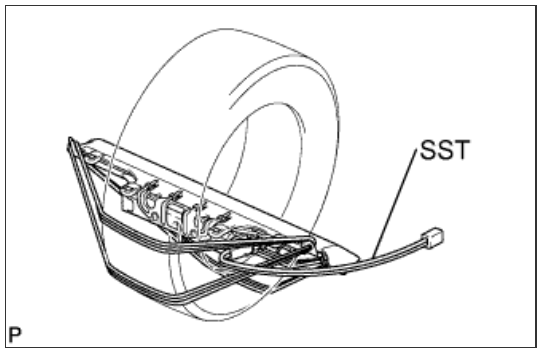

e. Place tires.

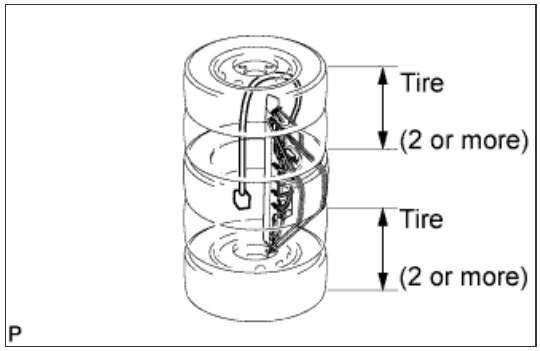


i. Place at least 2 tires under the tire which the front passenger side knee airbag is tied to.

ii. Place at least 2 tires over the tire which the front passenger side knee airbag is tied to. The top tire should have a disc wheel installed.

NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**


iii. Tie the tires together with 2 wire harnesses.

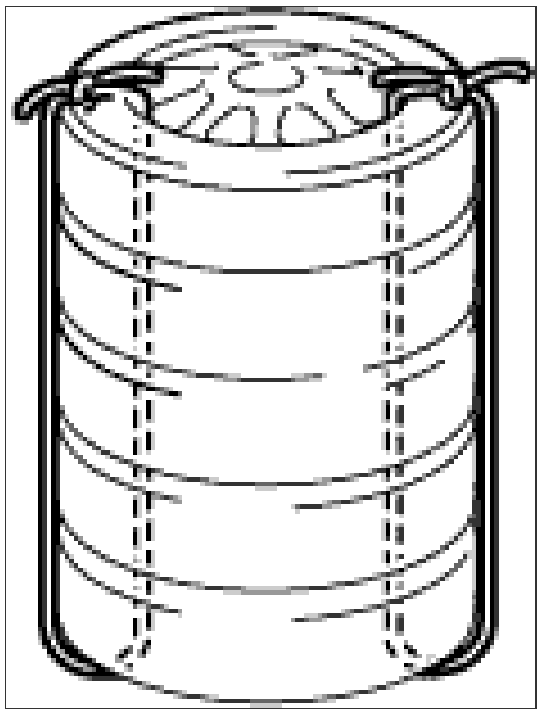

CAUTION:

Make sure that the wire harnesses are tight. ooseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

f. Install SST.

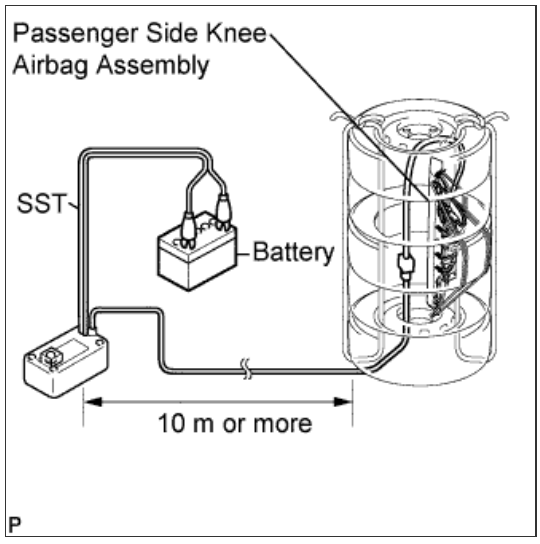

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the front passenger side knee airbag is tied to.

iii. Press SST activation switch to deploy the airbag.

CAUTION:

When deploying the airbag, make sure that no one is near the tire.


HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the front passenger side knee airbag.

CAUTION:

- **The front passenger side knee airbag assembly becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger side knee airbag with a deployed airbag.**
- **Do not apply water to a front passenger side knee airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

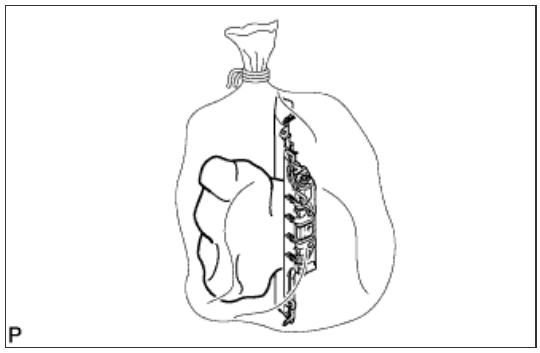

i. Remove the front passenger side knee airbag from the tire.

ii. Place the front passenger side knee airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a front passenger side knee airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the front passenger side knee airbag.**
- **The front passenger side knee airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger side knee airbag with a deployed airbag.**
- **Do not apply water to a front passenger side knee airbag assembly with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

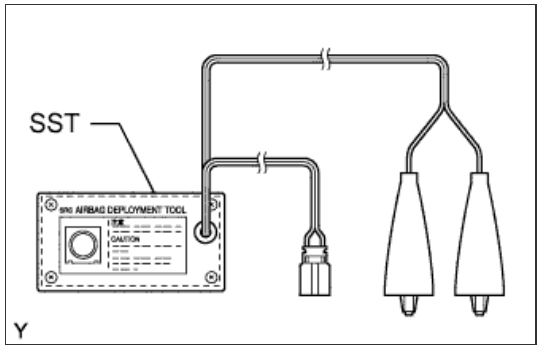

d. Remove the front passenger side knee airbag (Click here).


e. Install SST.

i. Connect SST connector to the front passenger side knee airbag.

SST
09082-00700
09082-00770

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

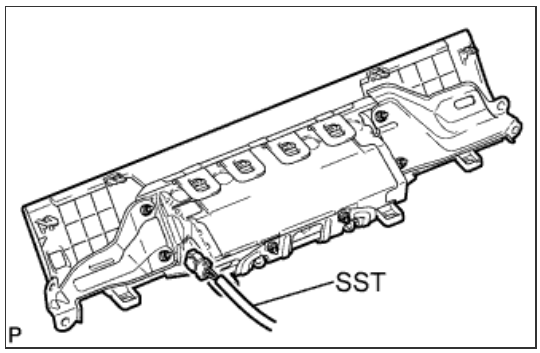

ii. Install the front passenger side knee airbag (Click here).

NOTICE:

Take care not to damage SST wire harness.


iii. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

iv. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

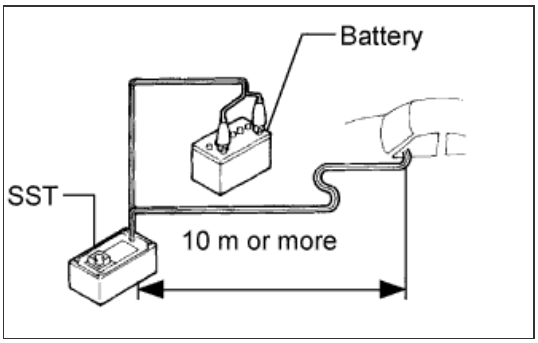

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The front passenger side knee airbag assembly becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger side knee airbag assembly with a deployed airbag.**
- **Do not apply water to a front passenger side knee airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Remove the front passenger side knee airbag (Click here).

CAUTION:

- **When removing the front passenger side knee airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the front passenger side knee airbag, keep the airbag deployment side facing upward.**

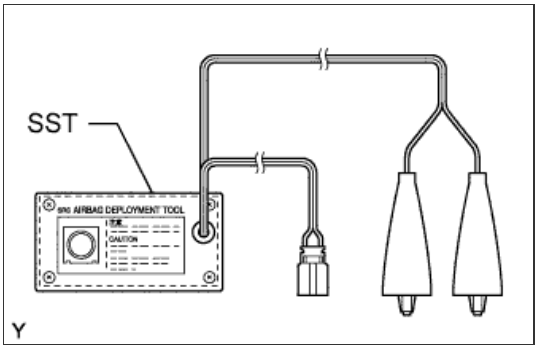

c. Using a service-purpose wire harness for the vehicle, tie down the front passenger side knee airbag to a tire.


Cross-sectional area of stripped wire harness section:
1.25 mm^2 or more (0.00192 $in.^2$ or more)

CAUTION:

If the wire harness is too thin or an alternative object is used to tie down the front passenger side knee airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 $in.^2$).


HINT:

To calculate the cross-sectional area of the stripped wire harness section
Cross-sectional area 3.1 (Diameter)^2 divided by 4

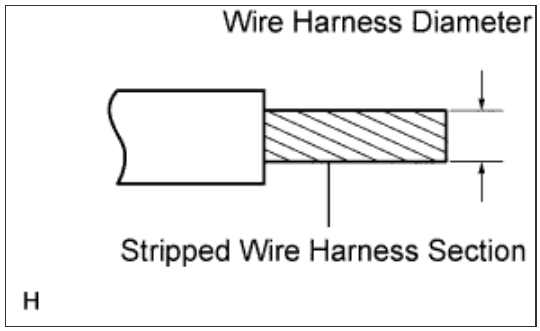

i. Position the front passenger side knee airbag inside a tire with the airbag deployment side facing inside.

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

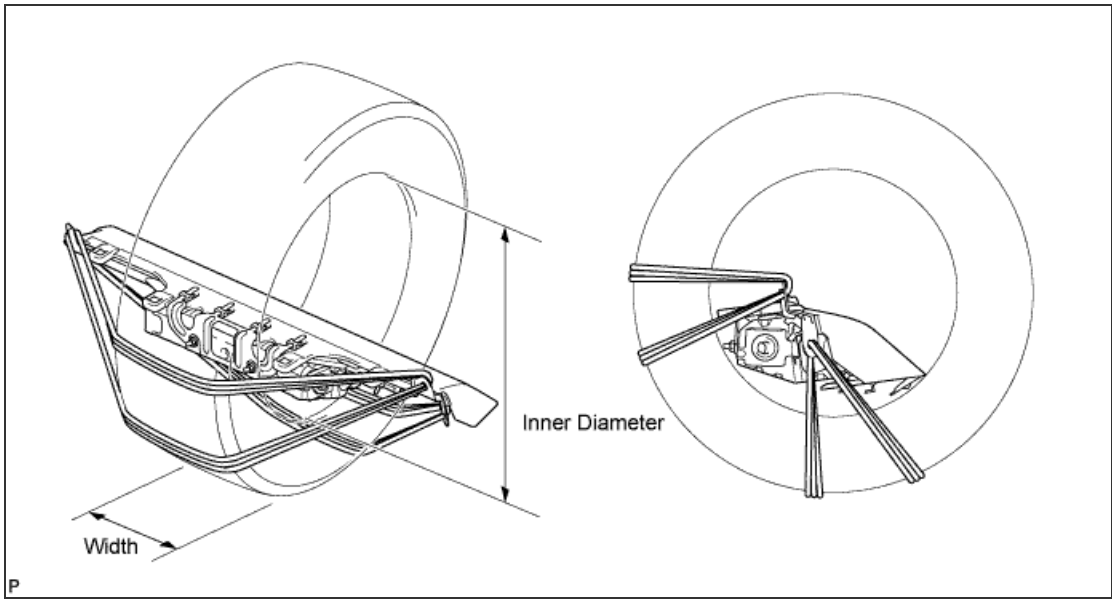

ii. Tie the front passenger side knee airbag to the tire with several wire harnesses.

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the front passenger side knee airbag may become loose due to the shock when the airbag is deployed.**
- **Always tie down the front passenger side knee airbag with the airbag deployment side facing inside the tire.**


NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.


d. Install SST.

i. Connect SST connector to the front passenger side knee airbag.

SST
09082-00770

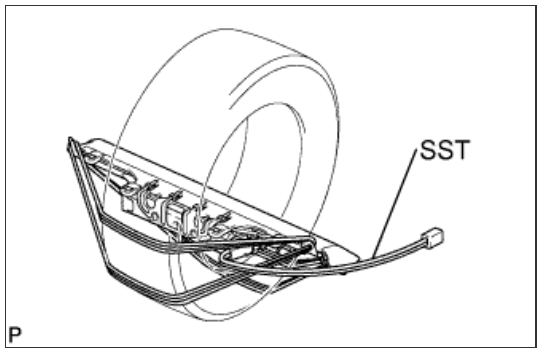

e. Place tires.

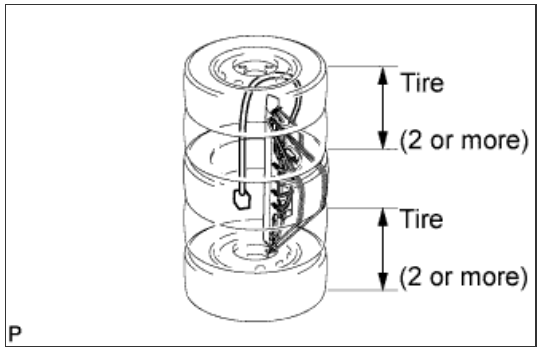


i. Place at least 2 tires under the tire which the front passenger side knee airbag is tied to.

ii. Place at least 2 tires over the tire which the front passenger side knee airbag is tied to. The top tire should have a disc wheel installed.

NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**


iii. Tie the tires together with 2 wire harnesses.

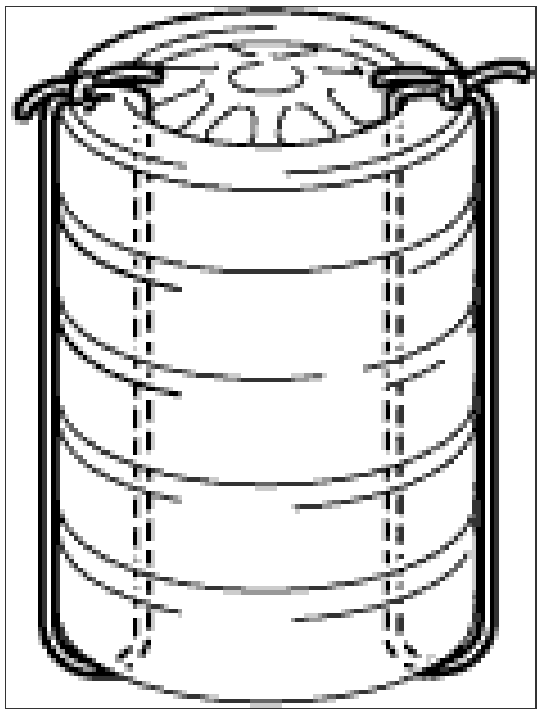

CAUTION:

Make sure that the wire harnesses are tight. ooseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

f. Install SST.

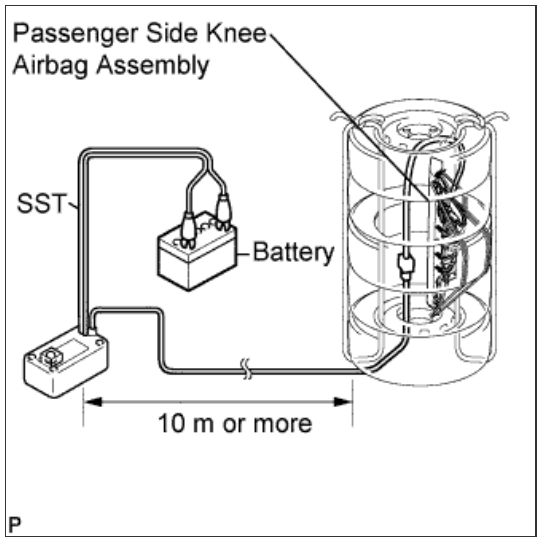

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the front passenger side knee airbag is tied to.

iii. Press SST activation switch to deploy the airbag.

CAUTION:

When deploying the airbag, make sure that no one is near the tire.


HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the front passenger side knee airbag.

CAUTION:


- **The front passenger side knee airbag assembly becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger side knee airbag with a deployed airbag.**
- **Do not apply water to a front passenger side knee airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

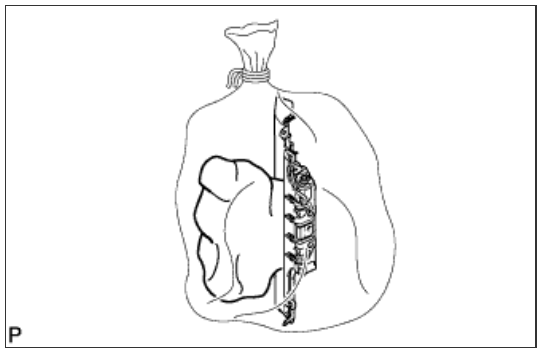

i. Remove the front passenger side knee airbag from the tire.

ii. Place the front passenger side knee airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation [Click here]

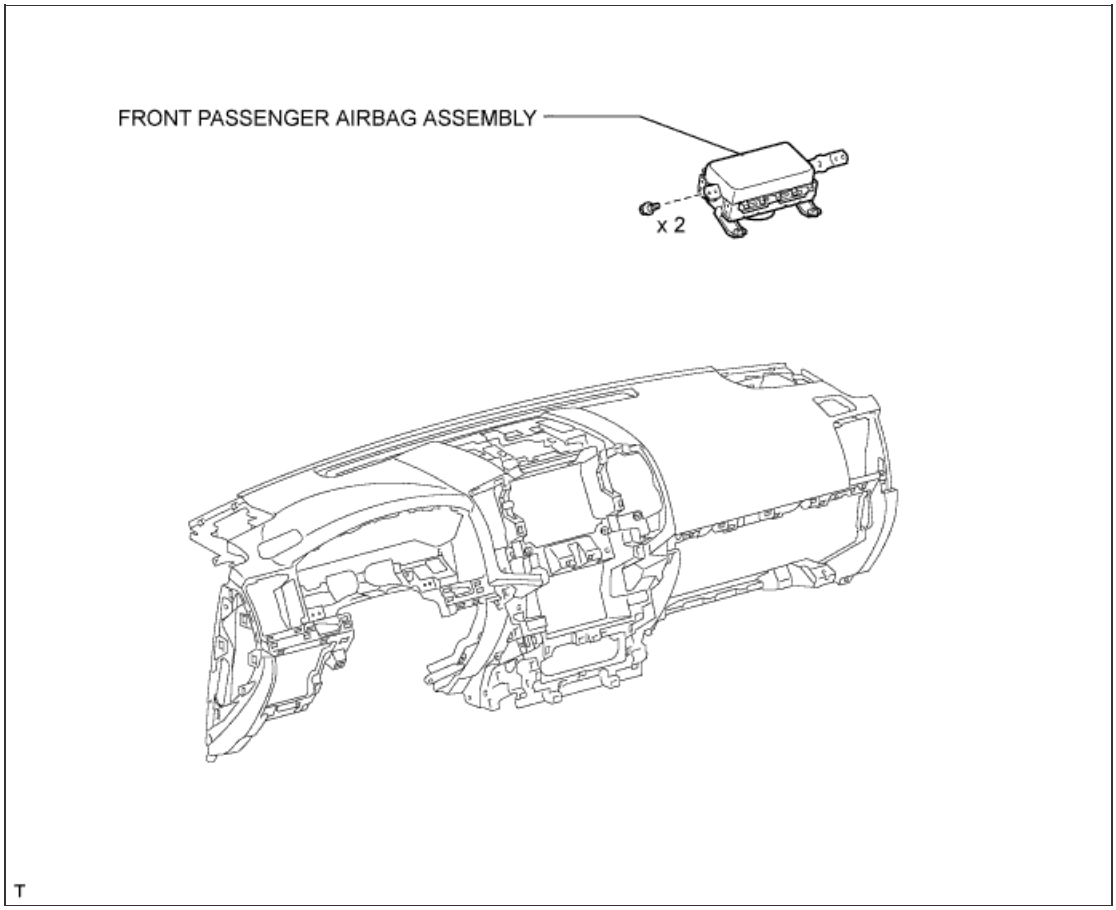


for Preparation Click here

1. CHECK FRONT PASSENGER AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION

a. Perform a diagnostic system check (Click here).

b. With the front passenger airbag installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the instrument panel with a new one:
Cuts, minute cracks or marked discoloration on the instrument panel around the front passenger airbag.

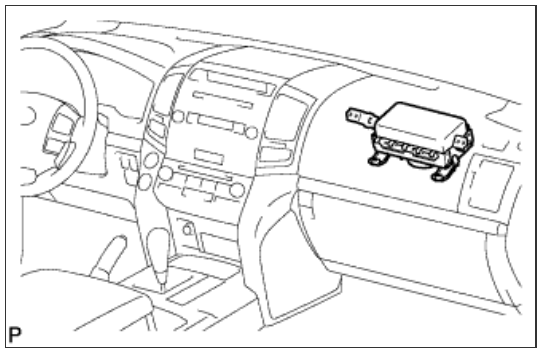

. CHECK FRONT PASSENGER AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED


a. Perform a diagnostic system check (Click here).

b. With the front passenger airbag removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front passenger airbag, instrument panel or instrument panel reinforcement with a new one:

- Cuts, minute cracks or marked discoloration on the front passenger airbag.
- Cracks or other damage to the connectors.
- Deformation or cracks on the instrument panel or instrument panel reinforcement.

NOTICE:

For removal and installation procedures of the front passenger airbag, be sure to follow the correct procedure.

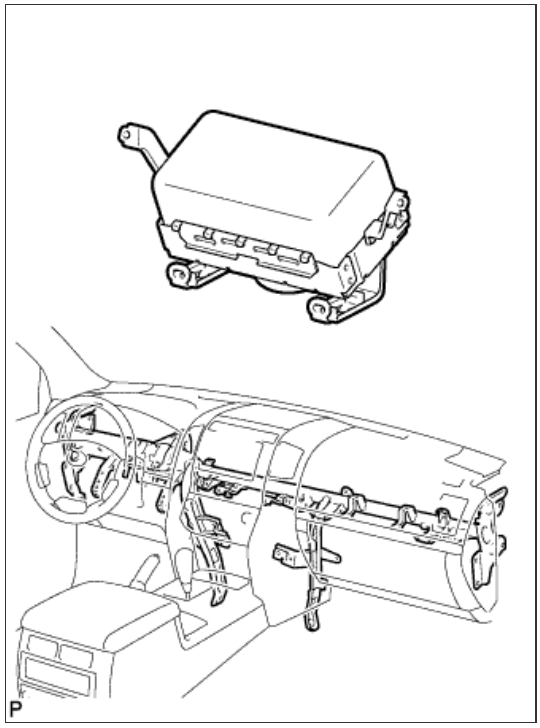

for Preparation Click here

HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

- **After the engine switch is turned off, the navigation system requires approximately 90 seconds to record various types of memory and settings. As a result, after turning the engine switch off, wait 90 seconds or more before disconnecting the cable from the negative (-) battery terminal.**
- **When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).**

2. REMOVE INSTRUMENT PANEL SAFETY PAD

a. Remove the instrument panel safety pad (Click here).


3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

a. Detach the claw and remove the wire.


b. Disconnect the 2 connectors and remove the instrument panel wire from the front passenger airbag.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

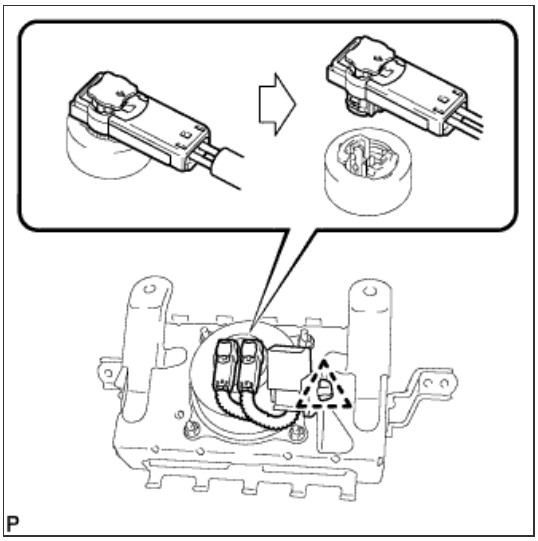


c. Remove the 2 screws.

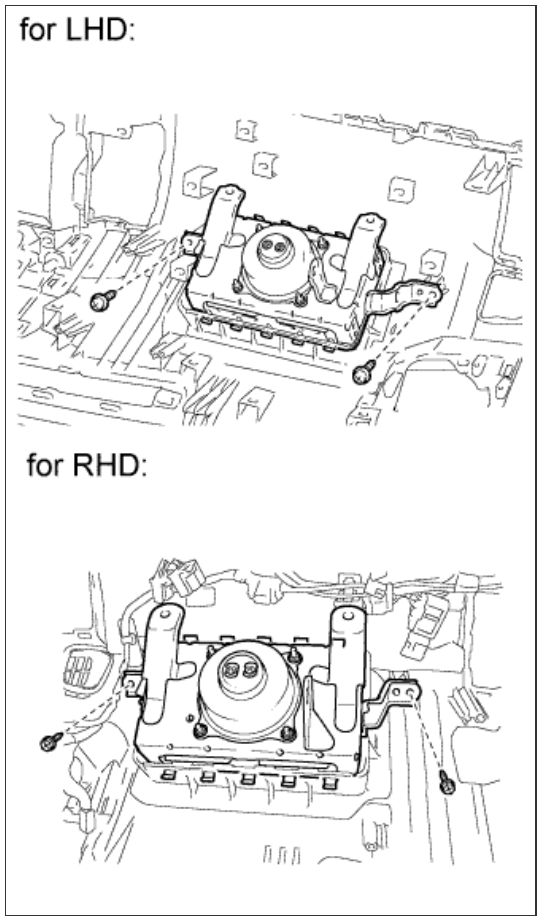

d. Detach the 5 hooks (A).

e. Detach the 5 hooks (B) and remove the front passenger airbag from the instrument panel.

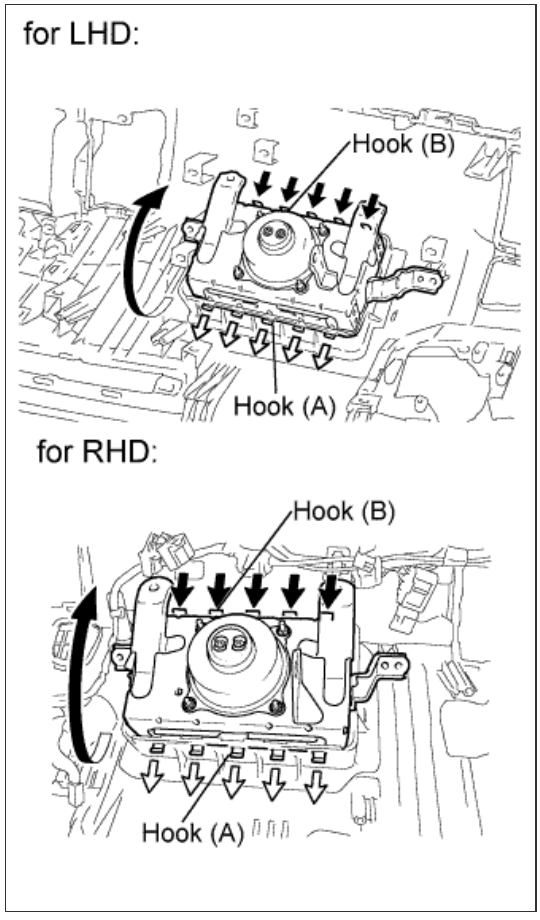

for Preparation Click here

HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

- **After the engine switch is turned off, the navigation system requires approximately 90 seconds to record various types of memory and settings. As a result, after turning the engine switch off, wait 90 seconds or more before disconnecting the cable from the negative (-) battery terminal.**
- **When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).**

2. REMOVE INSTRUMENT PANEL SAFETY PAD

a. Remove the instrument panel safety pad (Click here).


3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

a. Detach the claw and remove the wire.


b. Disconnect the 2 connectors and remove the instrument panel wire from the front passenger airbag.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

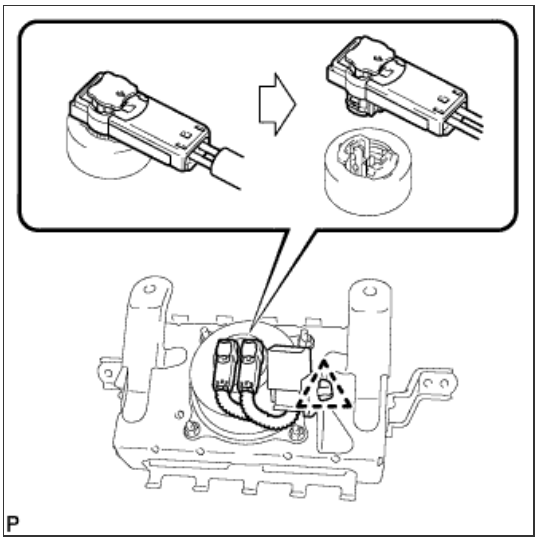


c. Remove the 2 screws.

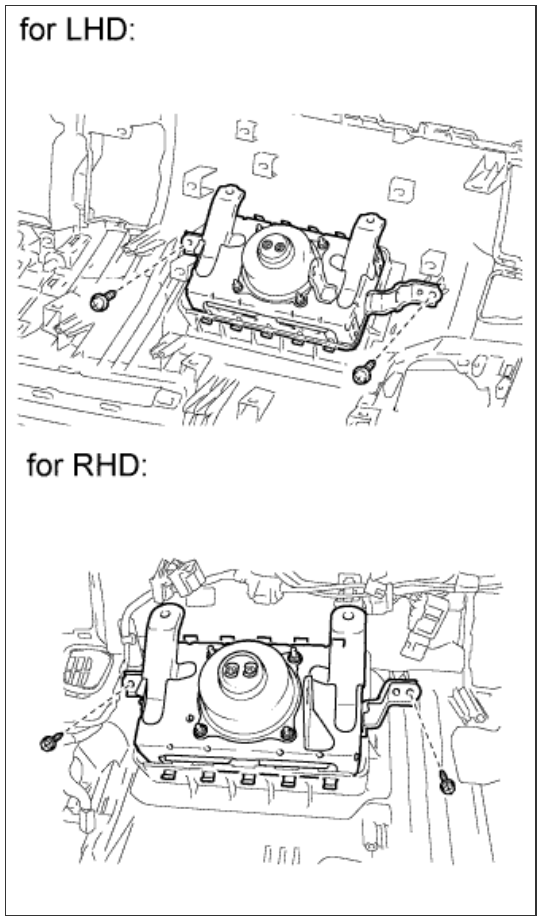

d. Detach the 5 hooks (A).

e. Detach the 5 hooks (B) and remove the front passenger airbag from the instrument panel.

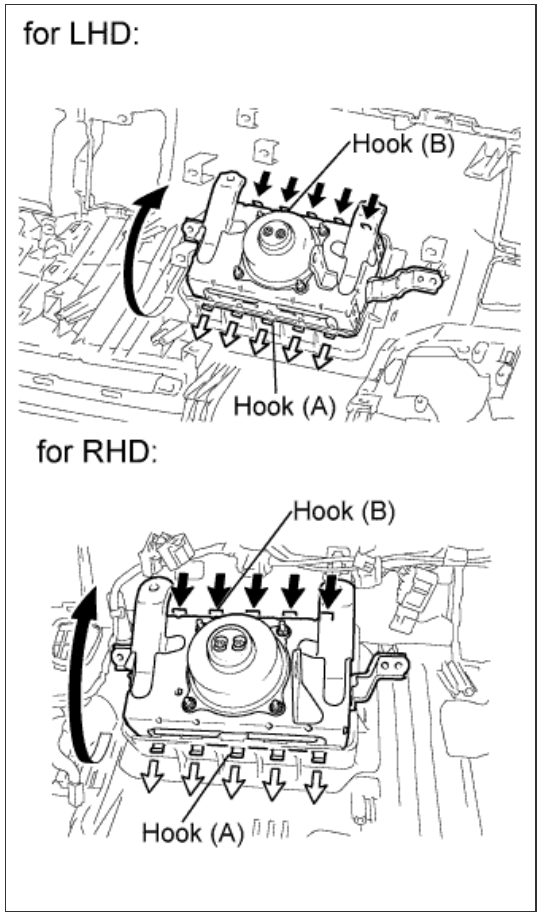

for Preparation Click here


HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**


INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

a. Attach the 5 hooks (A).

b. Attach the 5 hooks (B) to install the front passenger airbag on the instrument panel.

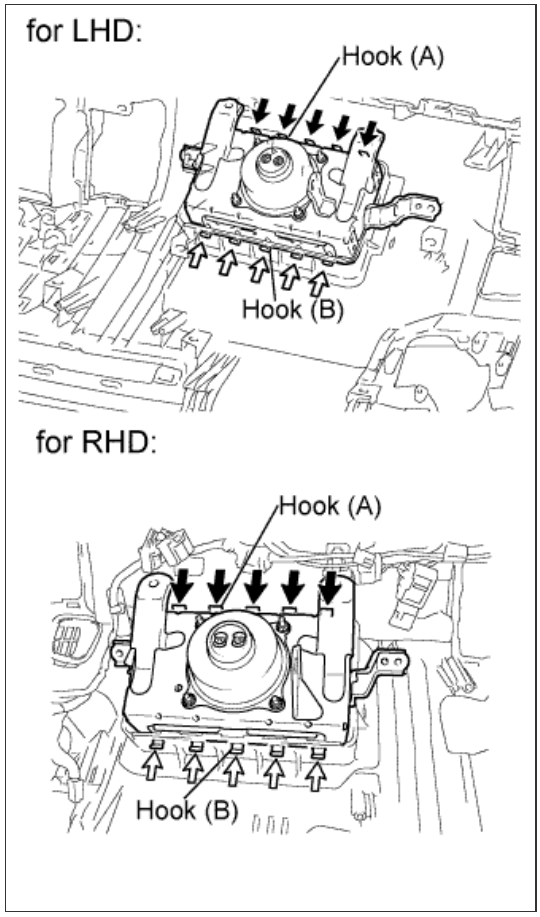

c. Install the 2 screws.

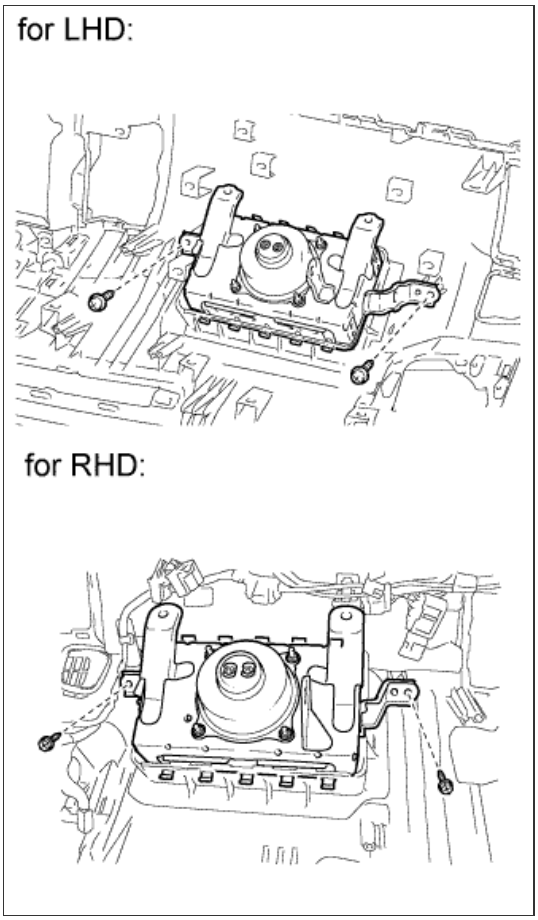


d. Connect the 2 connectors and install the instrument panel wire assembly to the front passenger airbag.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

e. Attach the claw and install the wire.

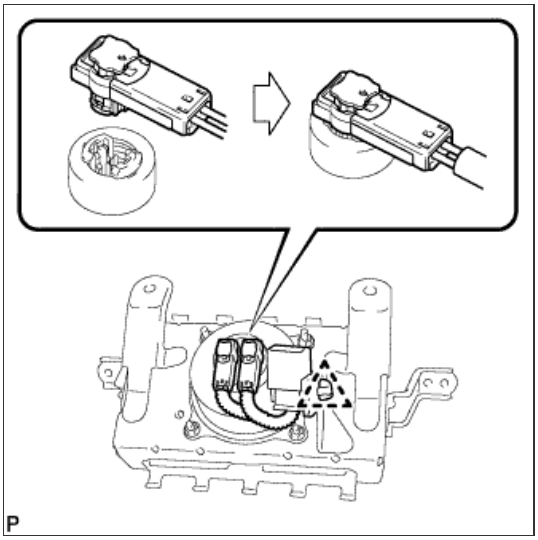

2. INSTALL INSTRUMENT PANEL SAFETY PAD

a. Install the instrument panel safety pad (Click here).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

4. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here


HINT:

- **Use the same procedures for the RHD and LHD.**
- **The procedures listed below are the LHD side.**


INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

a. Attach the 5 hooks (A).

b. Attach the 5 hooks (B) to install the front passenger airbag on the instrument panel.

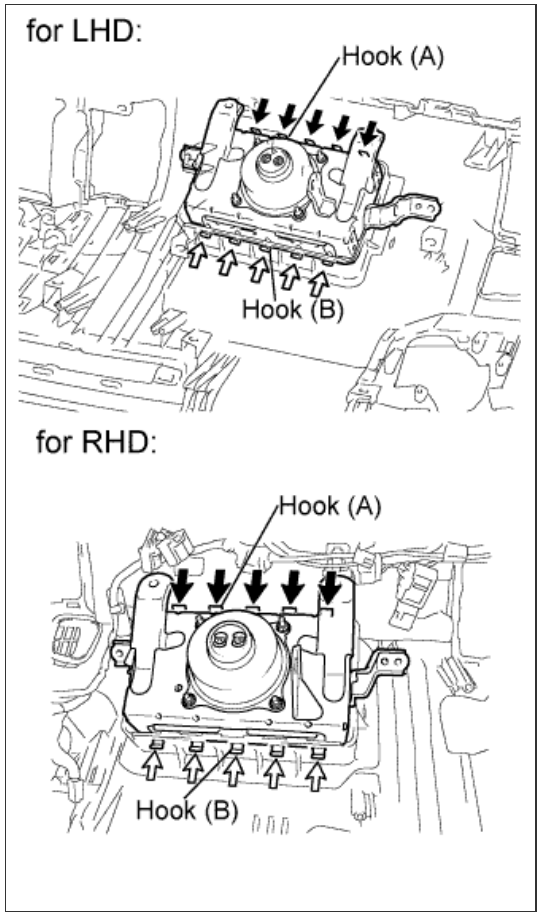

c. Install the 2 screws.

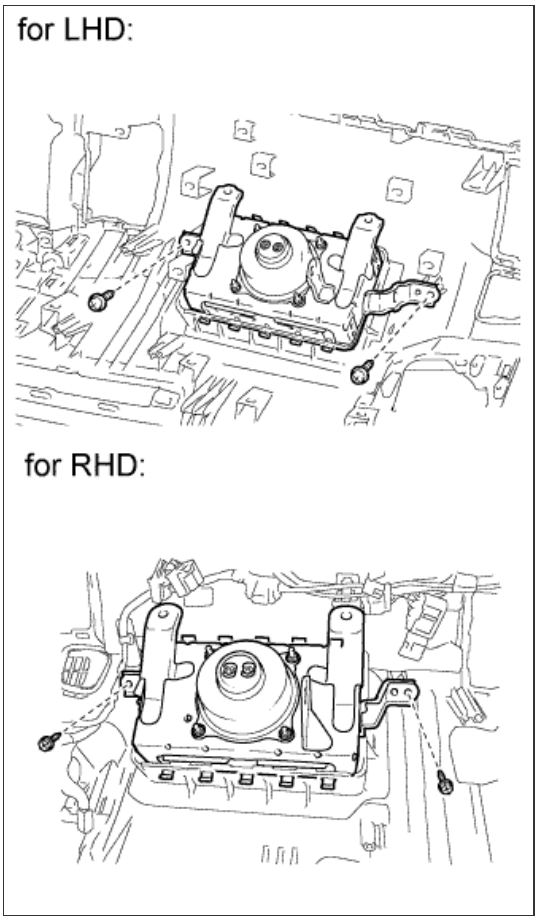


d. Connect the 2 connectors and install the instrument panel wire assembly to the front passenger airbag.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

e. Attach the claw and install the wire.

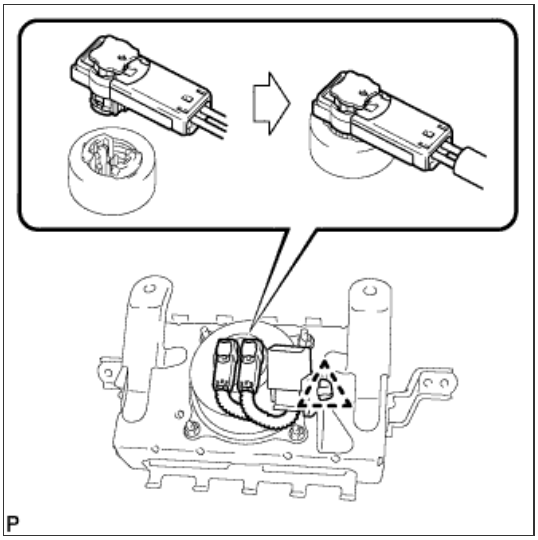

2. INSTALL INSTRUMENT PANEL SAFETY PAD

a. Install the instrument panel safety pad (Click here).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

4. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of DISTRIBUTOR.

CAUTION:

- **Never dispose of a front passenger airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the front passenger airbag.**
- **The front passenger airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger airbag with a deployed airbag.**
- **Do not apply water to a front passenger airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF FRONT PASSENGER AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

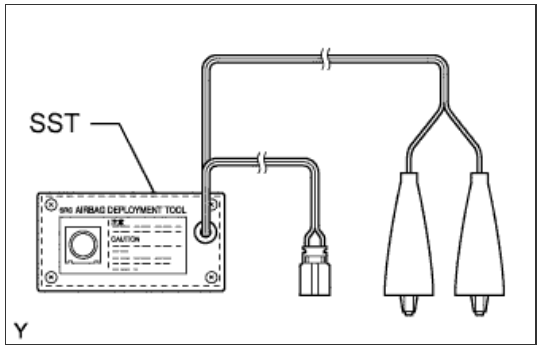

d. Remove the front passenger airbag (Click here).

e. Install SST.

i. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

ii. Connect SST connector to the instrument panel wire.

SST
09082-00700
09082-00780

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

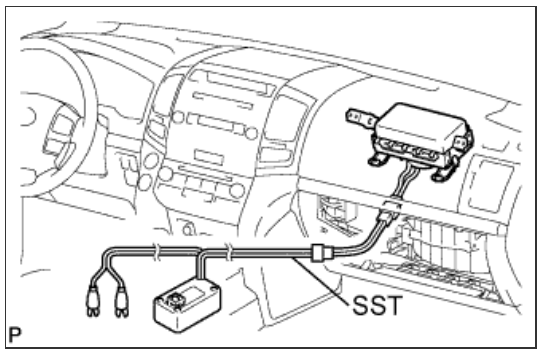


iii. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

iv. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the negative (-) terminal.

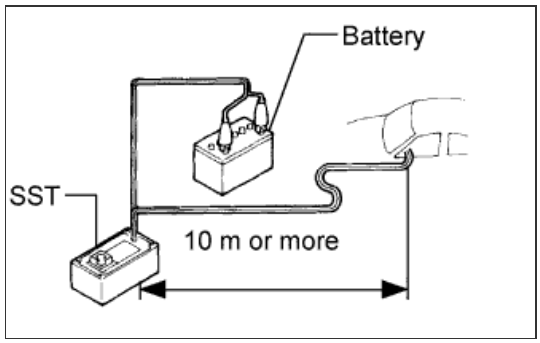

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The front passenger airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger airbag with a deployed airbag.**
- **Do not apply water to a front passenger airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF FRONT PASSENGER AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Remove the front passenger airbag (Click here).

CAUTION:

- **When removing the front passenger airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the front passenger airbag, keep the airbag deployment side facing upward.**

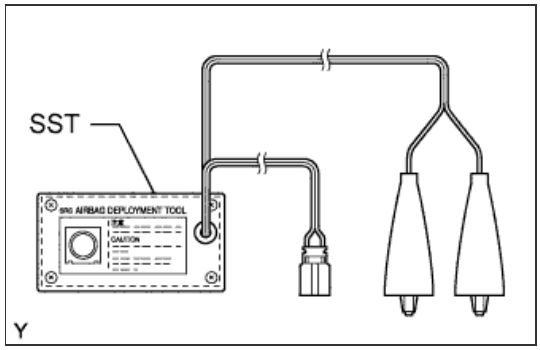


c. Install SST.


i. After connecting SST to each other, connect them to the front passenger airbag.

SST

09082-00802 (09082-10801, 09082-30801)

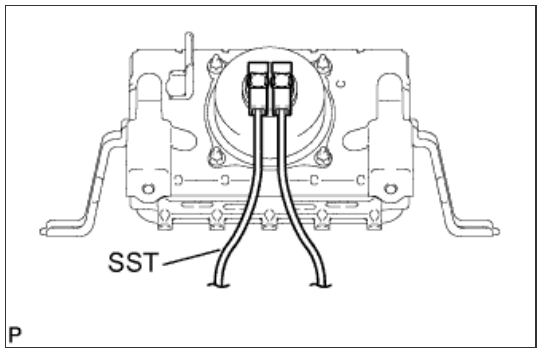

d. Using a service-purpose wire harness for the vehicle, tie down the front passenger airbag to a tire.

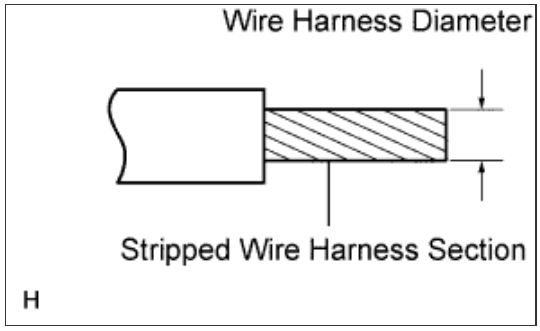

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2}) or more

CAUTION:


If the wire harness is too thin or an alternative object is used to tie down the front passenger airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.0019 in.^{2}).

HINT:

To calculate the cross-sectional area of the stripped wire harness section Cross-sectional area

rea 3.1 (Diameter)^2 divided by 4

i. Position the front passenger airbag inside a tire with the airbag deployment side facing inside.

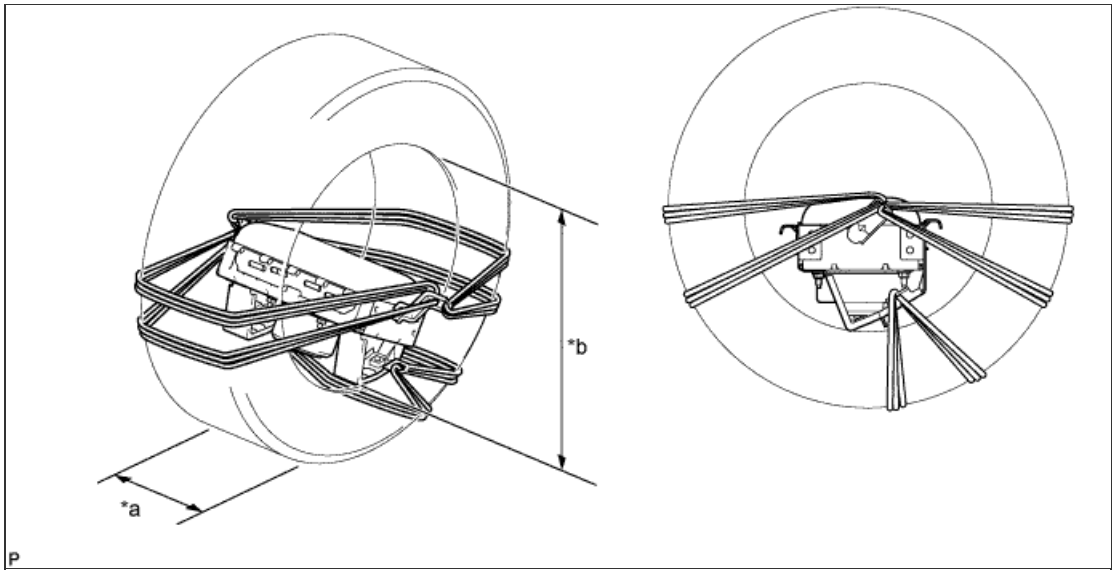

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

ii. Tie the front passenger airbag to the tire with several wire harnesses.


CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the front passenger airbag may become loose due to the shock when the airbag is deployed.**
- **Always tie down the front passenger airbag with the airbag deployment side facing inside the tire.**

NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.

e. Place tires.

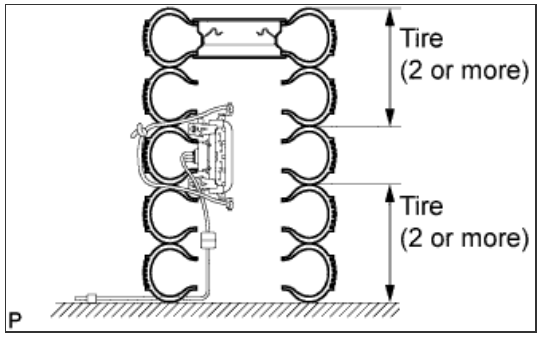


i. Place at least 2 tires under the tire which the front passenger airbag is tied to.

ii. Place at least 2 tires over the tire which the front passenger airbag is tied to. The top tire should have a disc wheel installed.

NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**


iii. Tie the tires together with 2 wire harnesses.

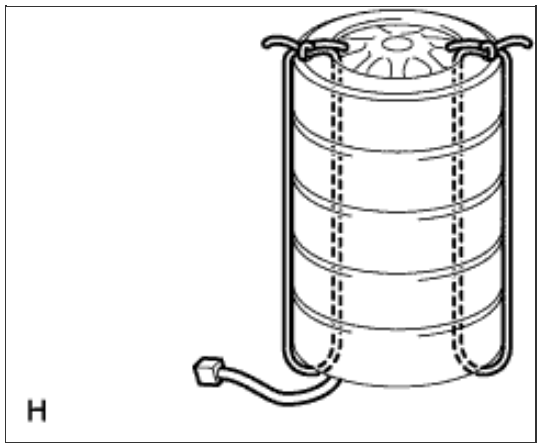

CAUTION:

Make sure that the wire harnesses are tight. ooseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

f. Install SST.

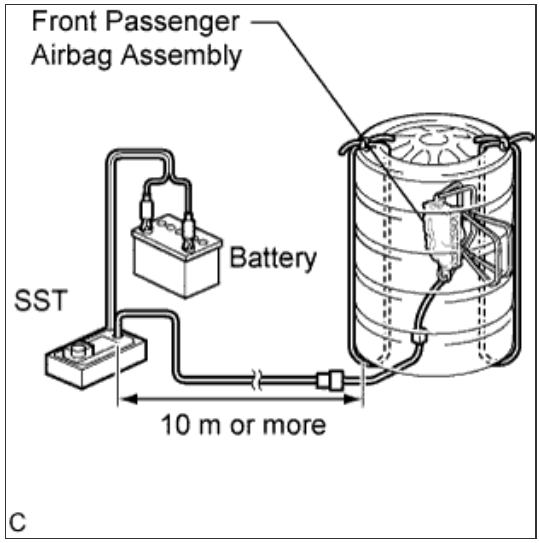

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the front passenger airbag is tied to.

iii. Press SST activation switch to deploy the airbag.


CAUTION:

When deploying the airbag, make sure that no one is near the tire.

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the front passenger airbag assembly.

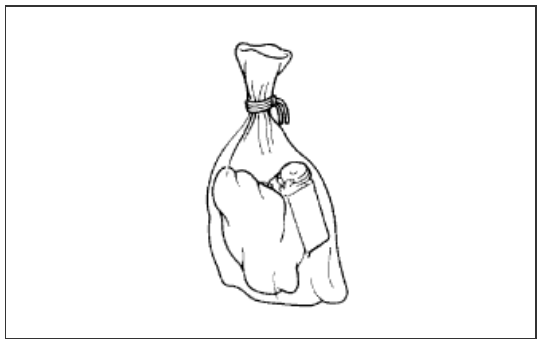

CAUTION:

- **The front passenger airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger airbag with a deployed airbag.**
- **Do not apply water to a front passenger airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

i. Remove the front passenger airbag from the tire.

ii. Place the front passenger airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of DISTRIBUTOR.

CAUTION:

- **Never dispose of a front passenger airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the front passenger airbag.**
- **The front passenger airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger airbag with a deployed airbag.**
- **Do not apply water to a front passenger airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF FRONT PASSENGER AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

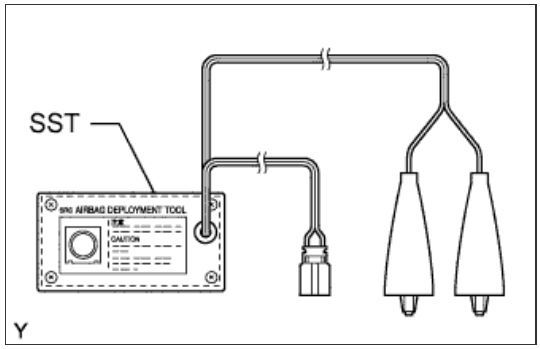

d. Remove the front passenger airbag (Click here).

e. Install SST.

i. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

ii. Connect SST connector to the instrument panel wire.

SST
09082-00700
09082-00780

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

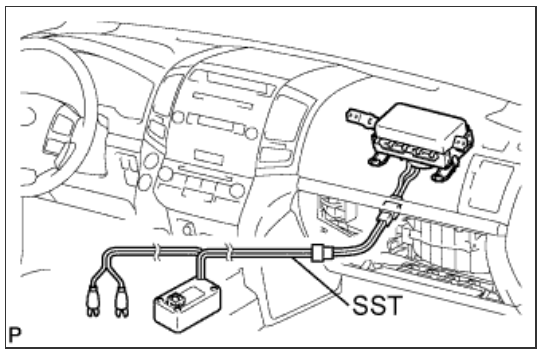


iii. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

iv. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the negative (-) terminal.

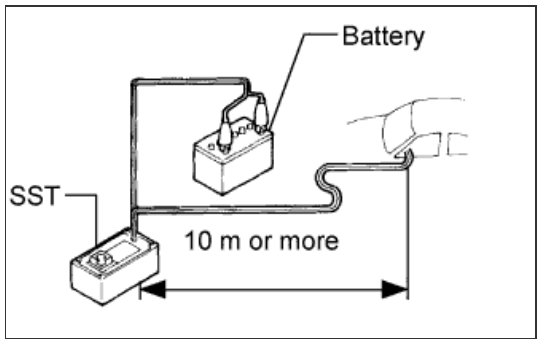

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The front passenger airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger airbag with a deployed airbag.**
- **Do not apply water to a front passenger airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF FRONT PASSENGER AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Remove the front passenger airbag (Click here).

CAUTION:

- **When removing the front passenger airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the front passenger airbag, keep the airbag deployment side facing upward.**

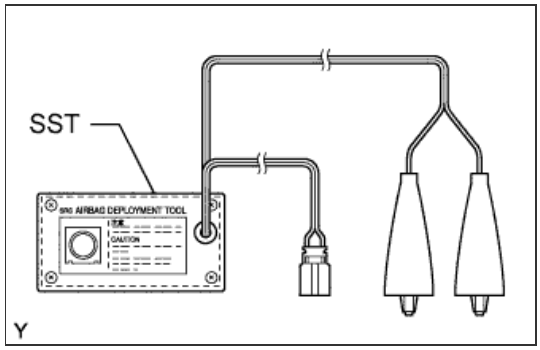


c. Install SST.


i. After connecting SST to each other, connect them to the front passenger airbag.

SST

09082-00802 (09082-10801, 09082-30801)

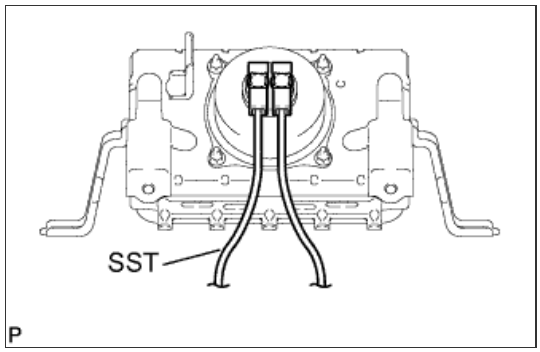

d. Using a service-purpose wire harness for the vehicle, tie down the front passenger airbag to a tire.

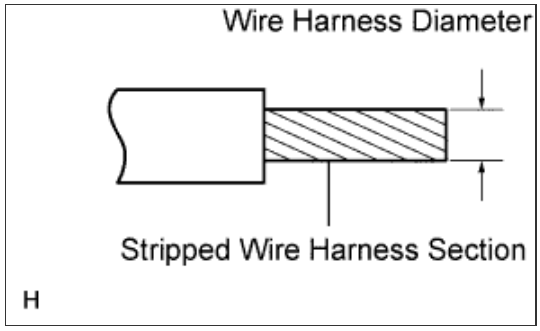

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2}) or more

CAUTION:


If the wire harness is too thin or an alternative object is used to tie down the front passenger airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.0019 in.^{2}).

HINT:

To calculate the cross-sectional area of the stripped wire harness section Cross-sectional area

rea 3.1 (Diameter)^2 divided by 4

i. Position the front passenger airbag inside a tire with the airbag deployment side facing inside.

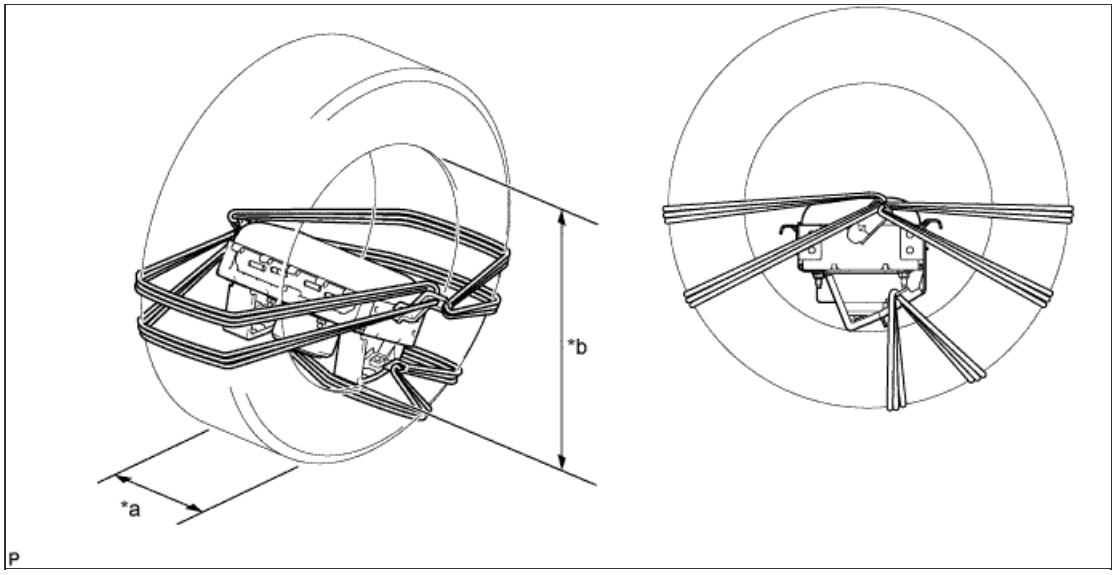

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

ii. Tie the front passenger airbag to the tire with several wire harnesses.


CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the front passenger airbag may become loose due to the shock when the airbag is deployed.**
- **Always tie down the front passenger airbag with the airbag deployment side facing inside the tire.**

NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.

e. Place tires.

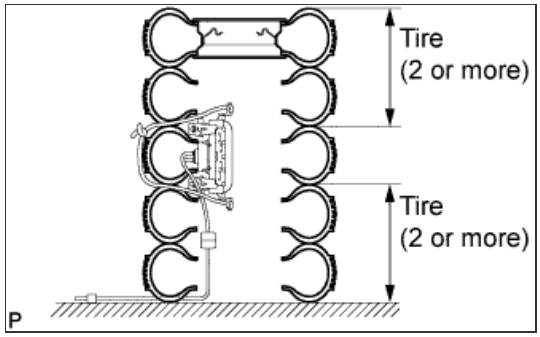


i. Place at least 2 tires under the tire which the front passenger airbag is tied to.

ii. Place at least 2 tires over the tire which the front passenger airbag is tied to. The top tire should have a disc wheel installed.

NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**


iii. Tie the tires together with 2 wire harnesses.

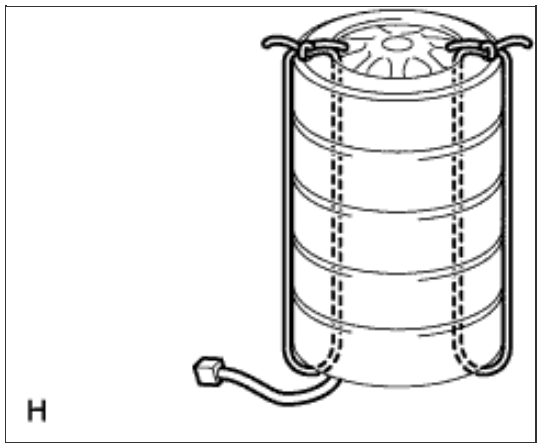

CAUTION:

Make sure that the wire harnesses are tight. ooseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

f. Install SST.

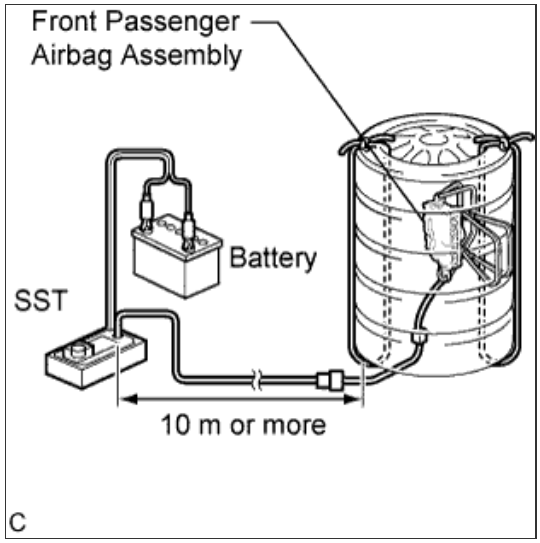

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the front passenger airbag is tied to.

iii. Press SST activation switch to deploy the airbag.


CAUTION:

When deploying the airbag, make sure that no one is near the tire.

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the front passenger airbag assembly.

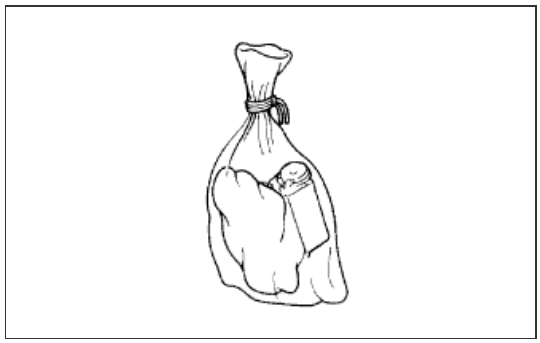


CAUTION:

- **The front passenger airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front passenger airbag with a deployed airbag.**
- **Do not apply water to a front passenger airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**


i. Remove the front passenger airbag from the tire.

ii. Place the front passenger airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

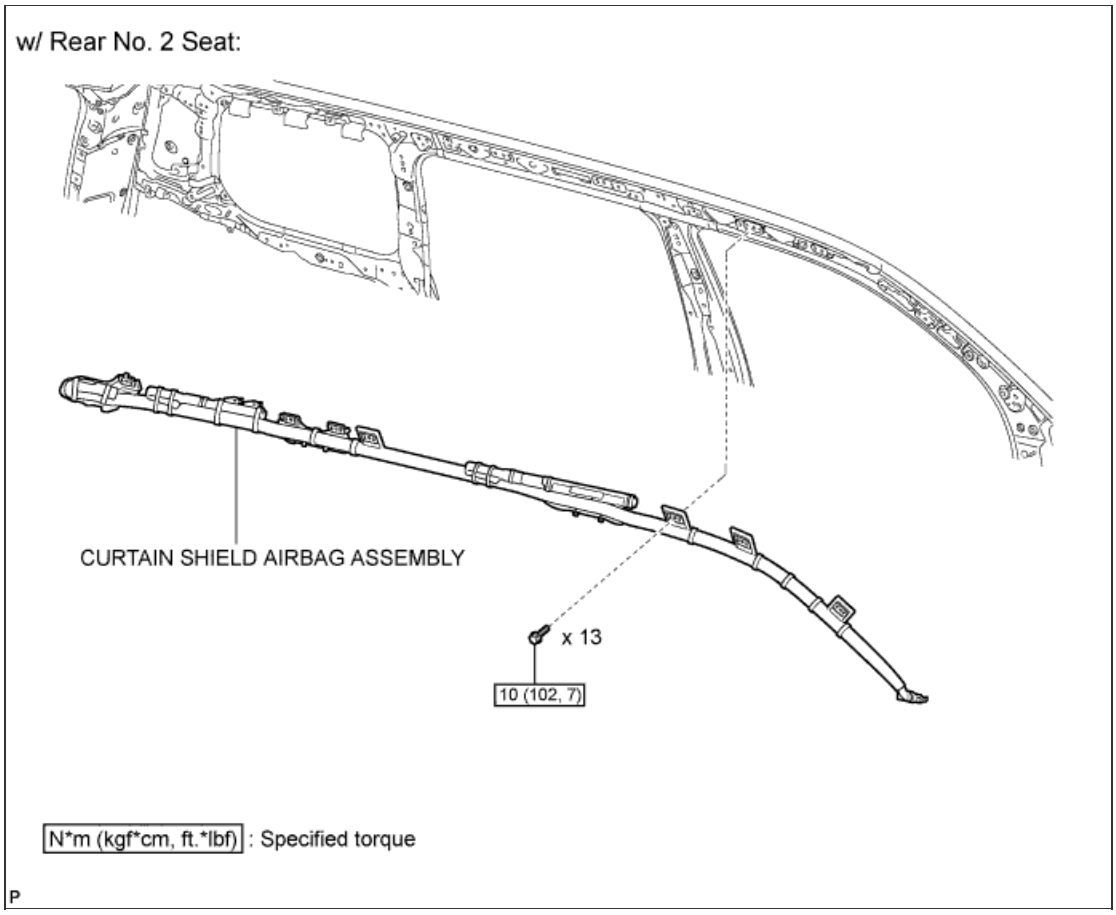

w/o Rear No. 2 Seat:

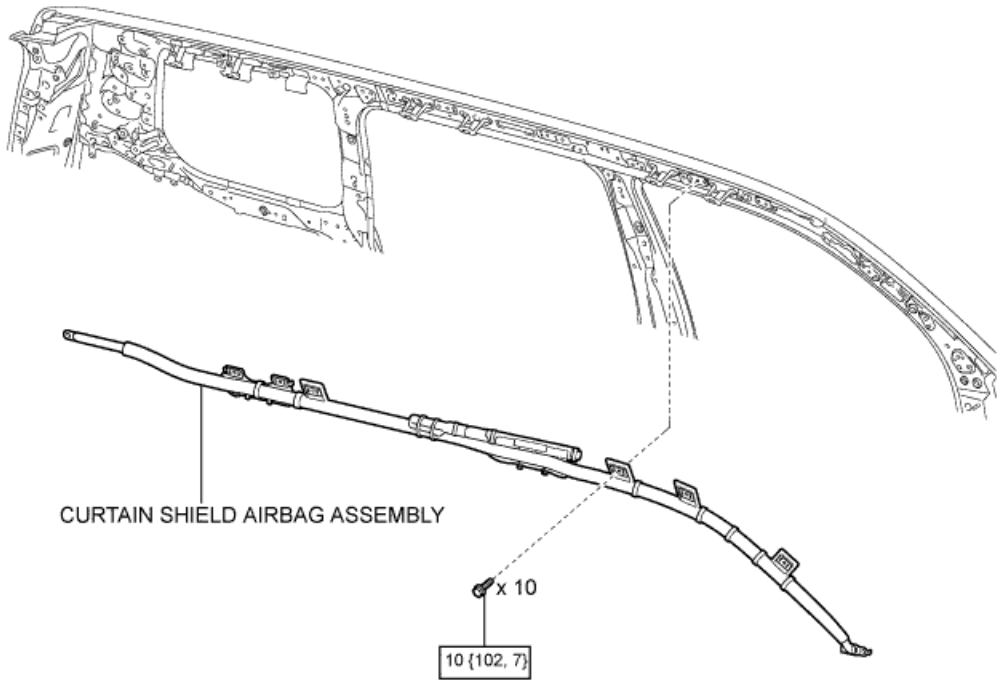

N*m (kgf*cm, ft.*lbf) : Specified torque


P

for Preparation Click here

1. CHECK VEHICLE NOT INVOLVED IN COLLISION

a. Perform a diagnostic system check (Click here).

b. With the curtain shield airbag installed on the vehicle, perform a visual check. If any of the defects mentioned below are present, replace the curtain shield airbag with a new one:
Cuts, minute cracks or marked discoloration on the curtain shield airbag.

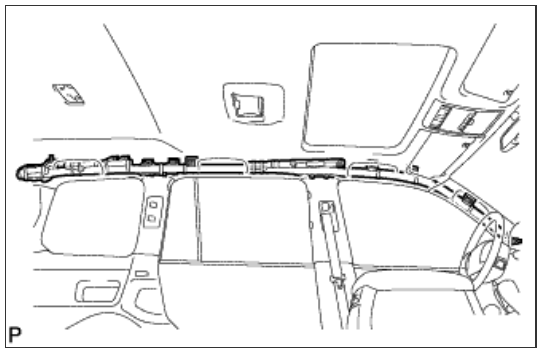

2. CHECK VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED


a. Perform a diagnostic system check (Click here).

b. With the curtain shield airbag removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the curtain shield airbag with a new one:

- Cuts, minute cracks or marked discoloration on the curtain shield airbag.
- Cracks or other damage to the connectors.

NOTICE

For removal and installation procedures of the curtain shield airbag, be sure to follow the correct procedure.

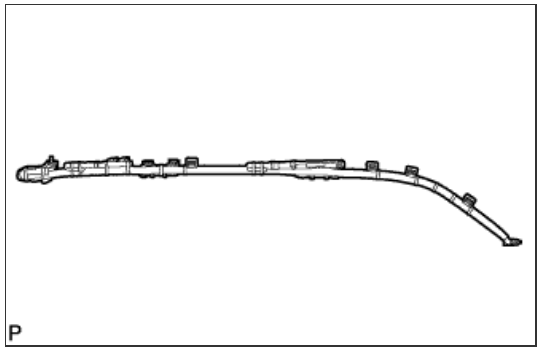

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)

a. Remove the roof headlining (Click here).

2. REMOVE ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)

a. Remove the roof headlining (Click here).


3. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY (w/ Rear No. 2 Seat)

a. Disconnect the connector.

NOTICE:


In handling the airbag connector, take care not to damage the airbag wire harness.

b. Remove the 13 bolts and curtain shield airbag.

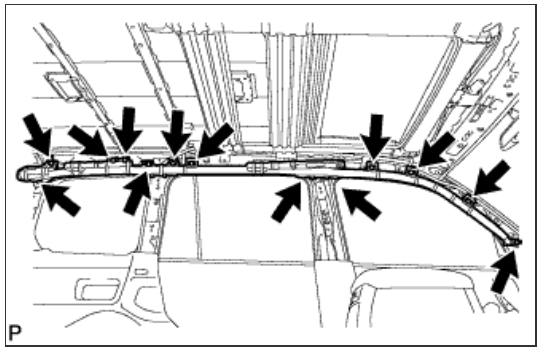

4. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY (w/o Rear No. 2 Seat)

a. Disconnect the connector.

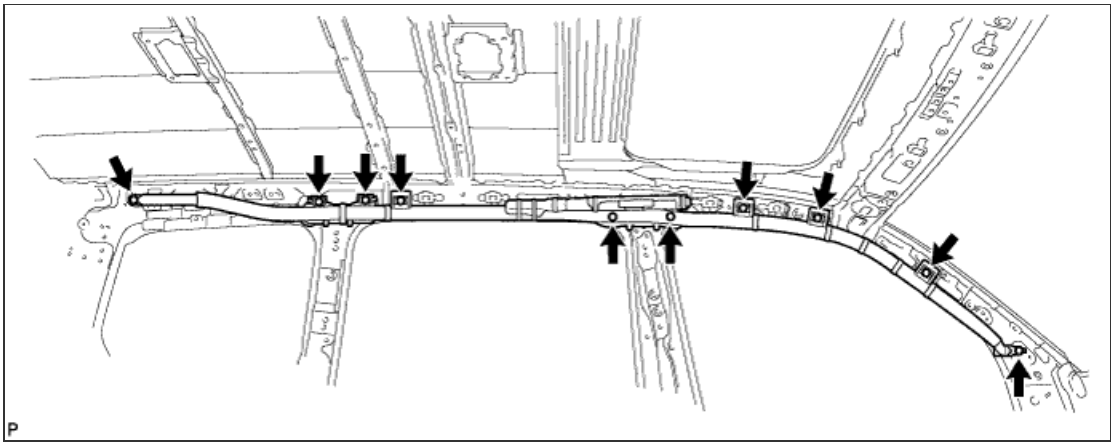

NOTICE:

In handling the airbag connector, take care not to damage the airbag wire harness.

b. Remove the 10 bolts and curtain shield airbag.

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)

a. Remove the roof headlining (Click here).

2. REMOVE ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)

a. Remove the roof headlining (Click here).


3. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY (w/ Rear No. 2 Seat)

a. Disconnect the connector.

NOTICE:


In handling the airbag connector, take care not to damage the airbag wire harness.

b. Remove the 13 bolts and curtain shield airbag.

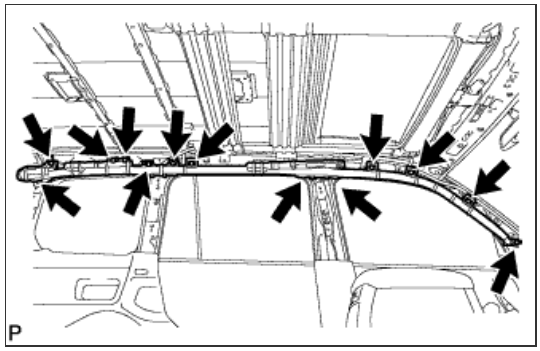

4. REMOVE CURTAIN SHIELD AIRBAG ASSEMBLY (w/o Rear No. 2 Seat)

a. Disconnect the connector.

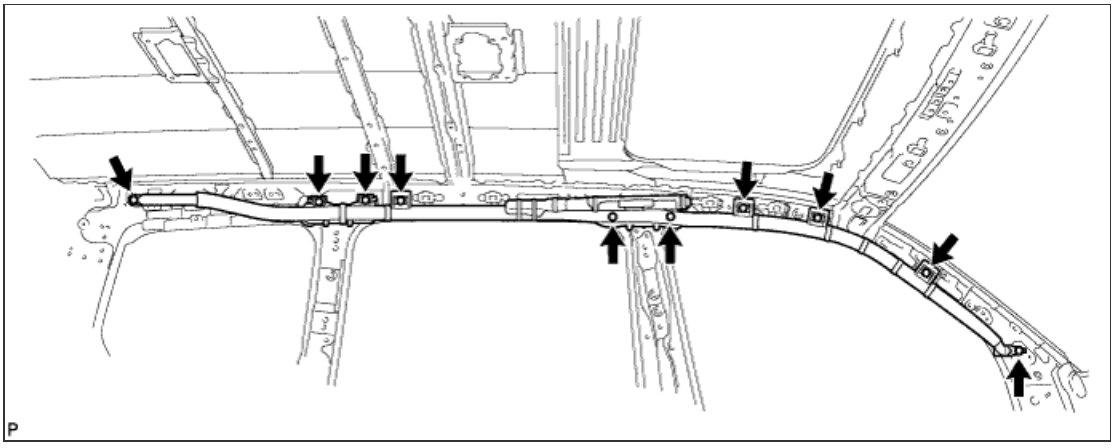

NOTICE:

In handling the airbag connector, take care not to damage the airbag wire harness.

b. Remove the 10 bolts and curtain shield airbag.

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**


1. INSTALL CURTAIN SHIELD AIRBAG ASSEMBLY (w/ Rear No. 2 Seat)

a. Install the curtain shield airbag with the 13 bolts.

Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

NOTICE:

Do not twist the curtain shield airbag when installing it.

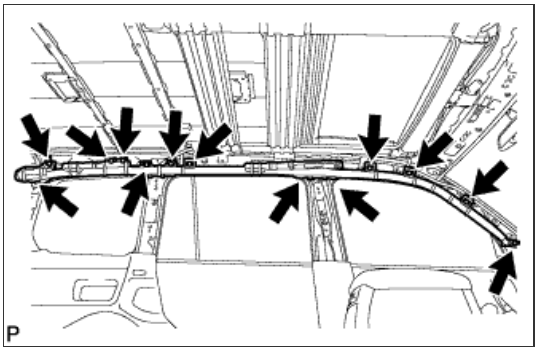


b. After installing the bolts, put the curtain shield airbag onto the bracket and close the dual lock fastener.

c. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

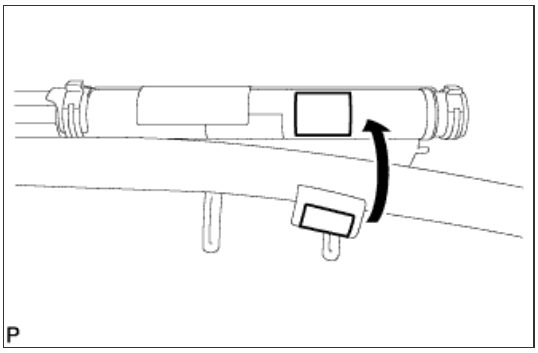

2. INSTALL CURTAIN SHIELD AIRBAG ASSEMBLY (w/o Rear No. 2 Seat)

a. Install the curtain shield airbag with the 10 bolts.

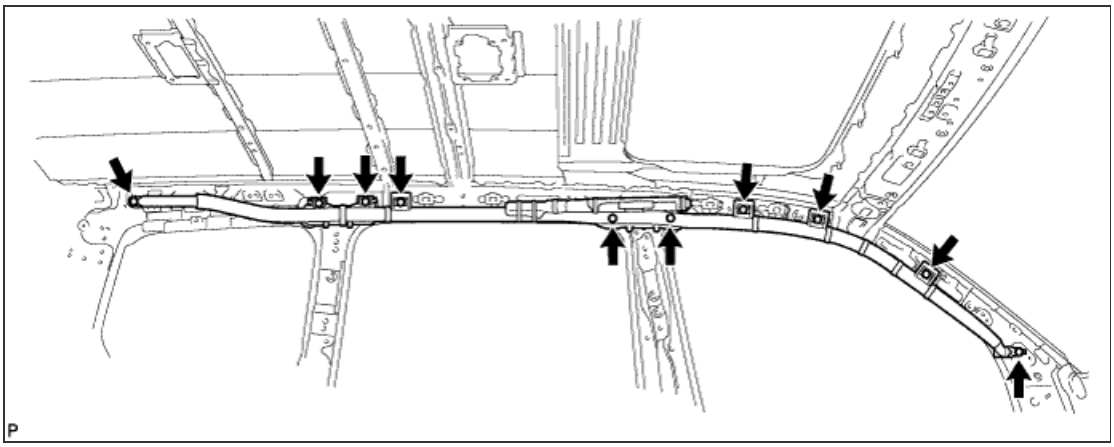

Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

NOTICE:

Do not twist the curtain shield airbag when installing it.

b. Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

3. INSTALL ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)

a. Install the roof headlining (Click here).

4. INSTALL ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)

a. Install the roof headlining (Click here).

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initiali ed after the cable is reconnected (Click here).

6. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**


1. INSTALL CURTAIN SHIELD AIRBAG ASSEMBLY (w/ Rear No. 2 Seat)

a. Install the curtain shield airbag with the 13 bolts.

Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

NOTICE:

Do not twist the curtain shield airbag when installing it.

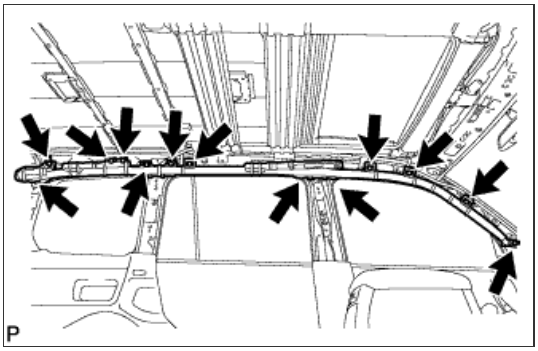


b. After installing the bolts, put the curtain shield airbag onto the bracket and close the dual lock fastener.

c. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

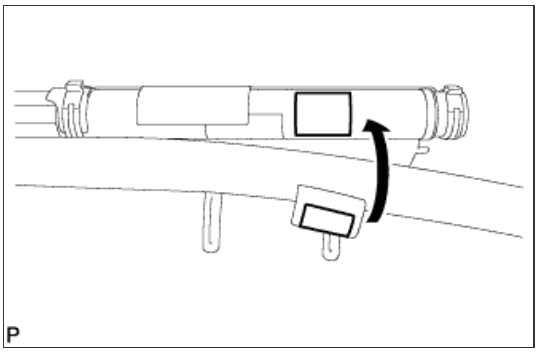

2. INSTALL CURTAIN SHIELD AIRBAG ASSEMBLY (w/o Rear No. 2 Seat)

a. Install the curtain shield airbag with the 10 bolts.

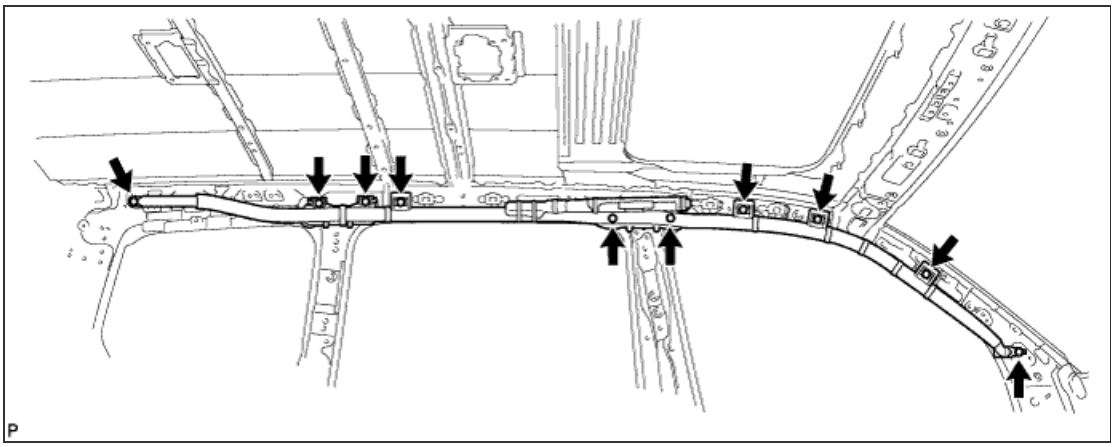

Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

NOTICE:

Do not twist the curtain shield airbag when installing it.

b. Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

3. INSTALL ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)

a. Install the roof headlining (Click here).

4. INSTALL ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)

a. Install the roof headlining (Click here).

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initiali ed after the cable is reconnected (Click here).

6. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a curtain shield airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the curtain shield airbag.**
- **The curtain shield airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a curtain shield airbag with a deployed airbag.**
- **Do not apply water to a curtain shield airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF CURTAIN SHIELD AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

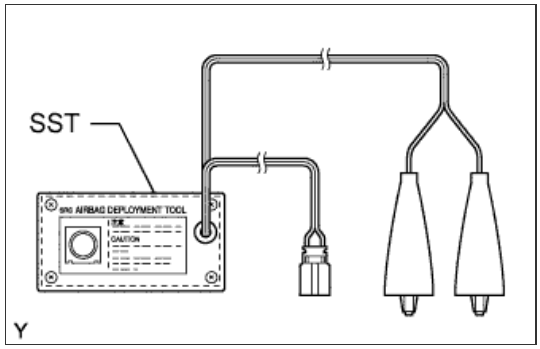

d. Remove the roof headlining (w/ Sliding Roof) (Click here).

e. Remove the roof headlining (w/o Sliding Roof) (Click here).

f. Install SST.

i. Disconnect the connector from the curtain shield airbag.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

ii. After connecting SST to each other, connect them to the curtain shield airbag.

SST

09082-00700
09082-00802 (09082-10801, 09082-40800)

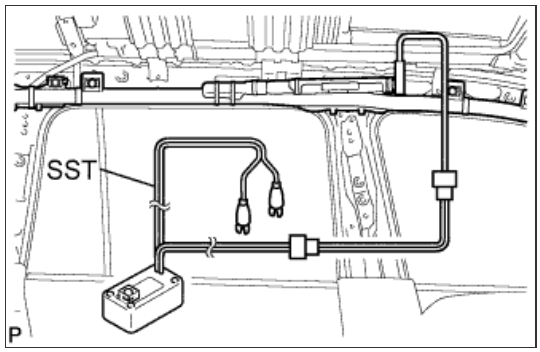

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.


iii. Move SST at least 10 m (.8 ft.) away from the vehicle rear side window.

iv. Maintaining enough clearance for SST wire harness in the rear side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and black clip of SST to the battery negative (-) terminal.

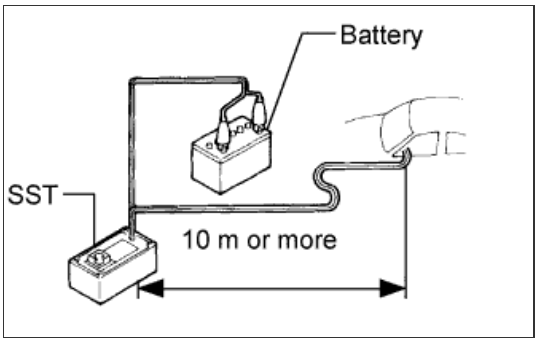

g. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The curtain shield airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a curtain shield airbag with a deployed airbag.**
- **Do not apply water to a curtain shield airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the LED of SST activation switch comes on.

2. DISPOSE OF CURTAIN SHIELD AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

CAUTION:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).


b. Remove the curtain shield airbag (Click here).

CAUTION:


When removing the curtain shield airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.

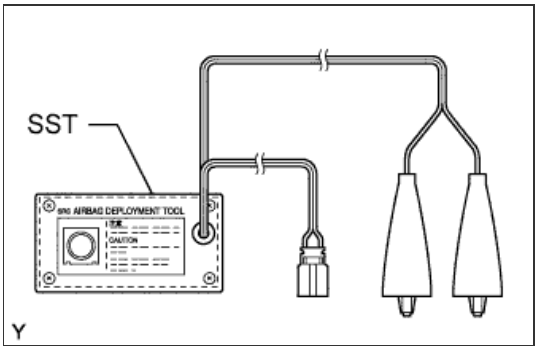

c. Cut off the deployment section of the curtain shield airbag.

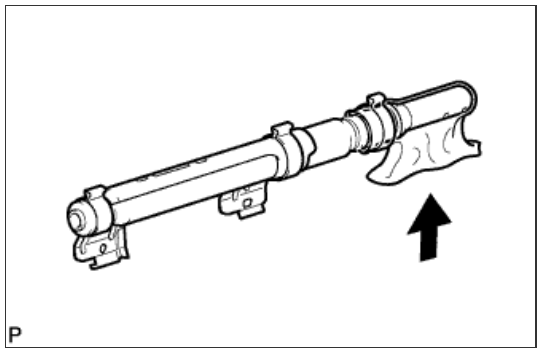

d. Using a service-purpose wire harness for the vehicle, tie down the curtain shield airbag to a tire.

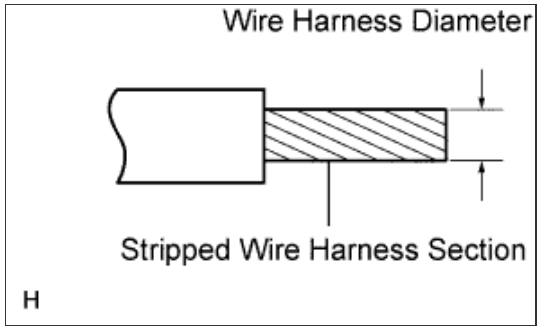

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2}) or more

CAUTION:


If the wire harness is too thin or an alternative object is used to tie down the curtain shield airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.2 mm^2 (0.00192 in.^{2}).

HINT:

To calculate the cross-sectional area of the stripped wire harness section

Cross-sectional area .14 (Diameter)^2 divided by 4

i. Position the curtain shield airbag inside a tire as shown in the illustration.

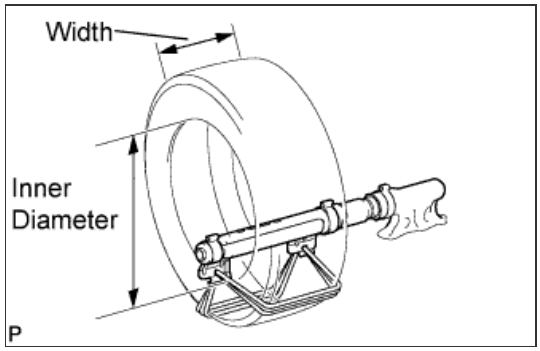

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

ii. Tie the curtain shield airbag to the tire with several wire harnesses.

CAUTION:

Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the curtain shield airbag may become loose due to the shock when the airbag is deployed.

NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.

e. Install SST.

i. After connecting SST to each other, connect them to the curtain shield airbag.

SST
09082-00802 (09082-10801, 09082-40800)


f. Place tires.

NOTICE:

Do not place the curtain shield airbag with the deployment direction facing the ground.

i. Place at least 2 tires under the tire which the curtain shield airbag is


tied to.

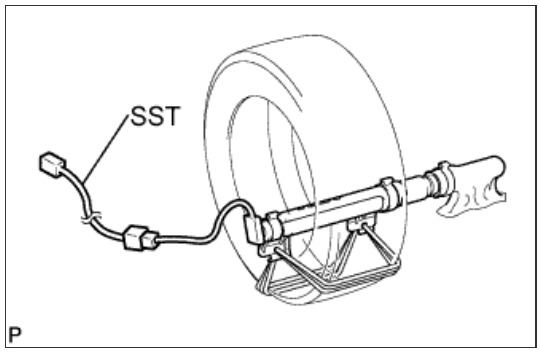

ii. Place at least 2 tires over the tire which the curtain shield airbag is tied to. The top tire should have a disc wheel installed.

NOTICE:


- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**

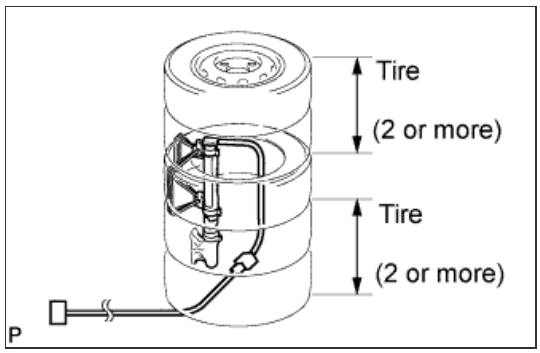

iii. Tie the tires together with 2 wire harnesses.

NOTICE:

Make sure that the wire harnesses are tight. Looseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

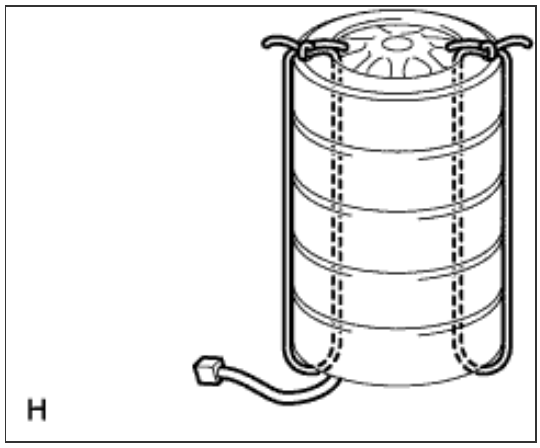


g. Install SST.

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

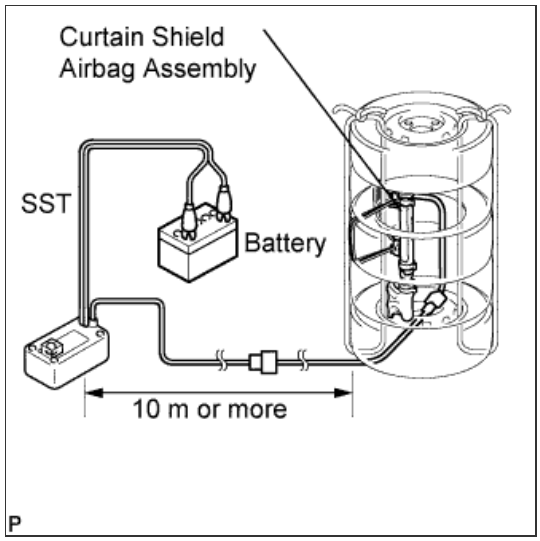

h. Deploy the airbag.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (.8 ft.) radius of the tire which the curtain shield airbag is tied to.

iii. Press SST activation switch to deploy the airbag.

CAUTION:

When deploying the airbag, make sure that no one is near the tire.


HINT:

The airbag is deployed as the LED of SST activation switch comes on.

i. Dispose of the curtain shield airbag.

CAUTION:

- **The curtain shield airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a curtain shield airbag with a deployed airbag.**
- **Do not apply water to a curtain shield airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

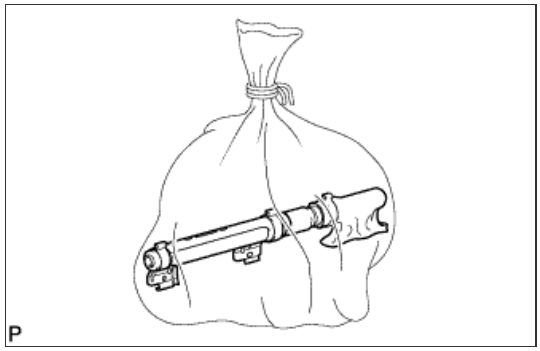

i. Remove the curtain shield airbag from the tire.

ii. Place the curtain shield airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a curtain shield airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the curtain shield airbag.**
- **The curtain shield airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a curtain shield airbag with a deployed airbag.**
- **Do not apply water to a curtain shield airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF CURTAIN SHIELD AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

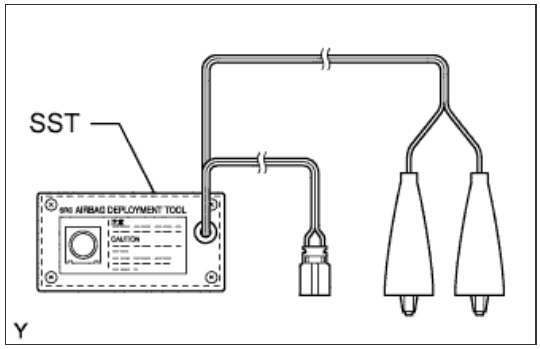

d. Remove the roof headlining (w/ Sliding Roof) (Click here).

e. Remove the roof headlining (w/o Sliding Roof) (Click here).

f. Install SST.

i. Disconnect the connector from the curtain shield airbag.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

ii. After connecting SST to each other, connect them to the curtain shield airbag.

SST

09082-00700
09082-00802 (09082-10801, 09082-40800)

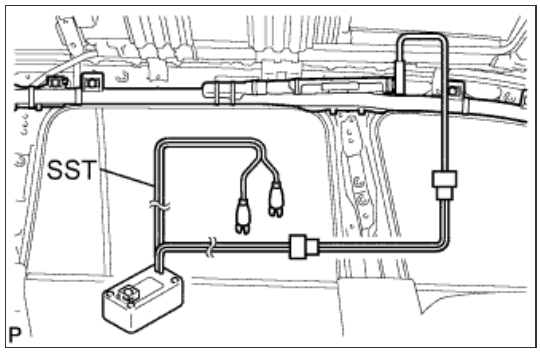

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.


iii. Move SST at least 10 m (.8 ft.) away from the vehicle rear side window.

iv. Maintaining enough clearance for SST wire harness in the rear side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and black clip of SST to the battery negative (-) terminal.

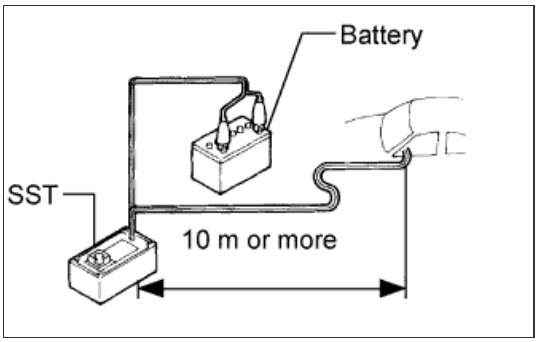

g. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The curtain shield airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a curtain shield airbag with a deployed airbag.**
- **Do not apply water to a curtain shield airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the LED of SST activation switch comes on.

2. DISPOSE OF CURTAIN SHIELD AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

CAUTION:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).


b. Remove the curtain shield airbag (Click here).

CAUTION:


When removing the curtain shield airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.

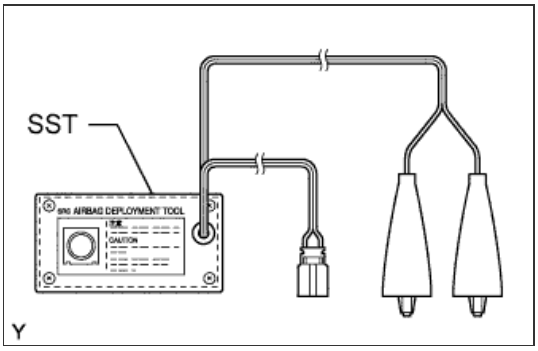

c. Cut off the deployment section of the curtain shield airbag.

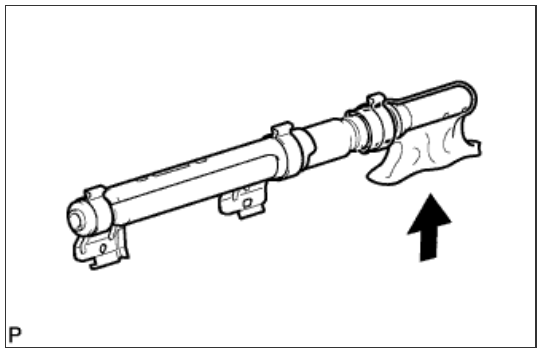

d. Using a service-purpose wire harness for the vehicle, tie down the curtain shield airbag to a tire.

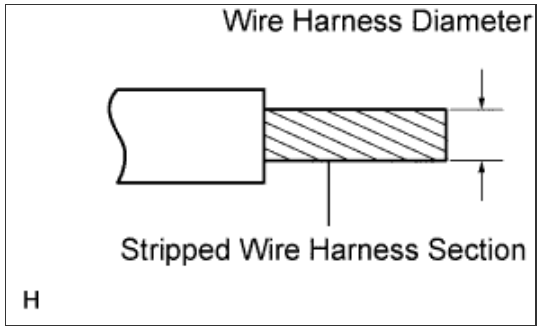

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2}) or more

CAUTION:


If the wire harness is too thin or an alternative object is used to tie down the curtain shield airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.2 mm^2 (0.00192 in.^{2}).

HINT:

To calculate the cross-sectional area of the stripped wire harness section

Cross-sectional area .14 (Diameter)^2 divided by 4

i. Position the curtain shield airbag inside a tire as shown in the illustration.

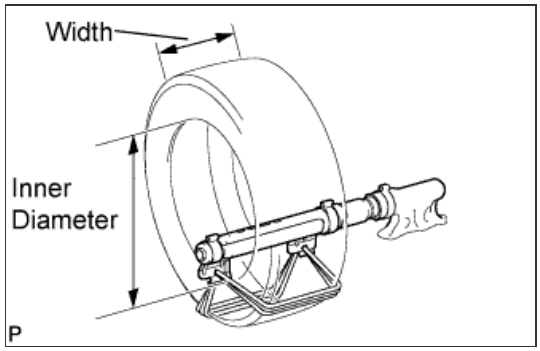

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

ii. Tie the curtain shield airbag to the tire with several wire harnesses.

CAUTION:

Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the curtain shield airbag may become loose due to the shock when the airbag is deployed.

NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.

e. Install SST.

i. After connecting SST to each other, connect them to the curtain shield airbag.

SST
09082-00802 (09082-10801, 09082-40800)


f. Place tires.

NOTICE:

Do not place the curtain shield airbag with the deployment direction facing the ground.

i. Place at least 2 tires under the tire which the curtain shield airbag is


tied to.

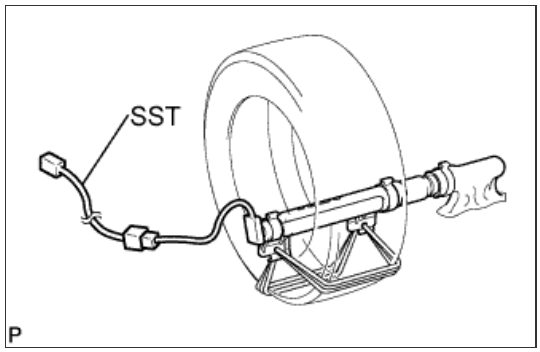

ii. Place at least 2 tires over the tire which the curtain shield airbag is tied to. The top tire should have a disc wheel installed.

NOTICE:


- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**

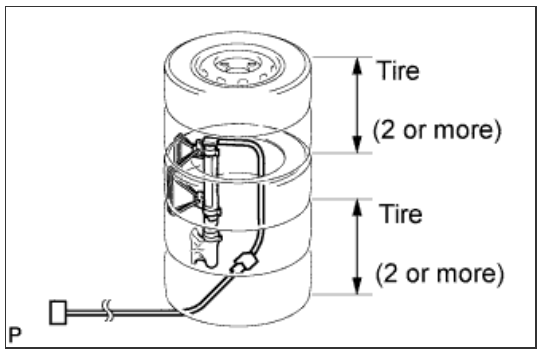

iii. Tie the tires together with 2 wire harnesses.

NOTICE:

Make sure that the wire harnesses are tight. Looseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

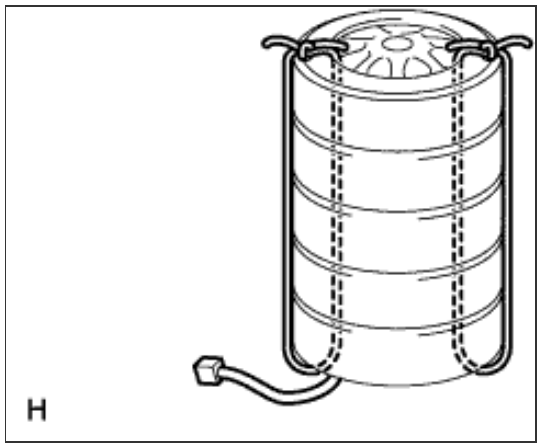


g. Install SST.

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

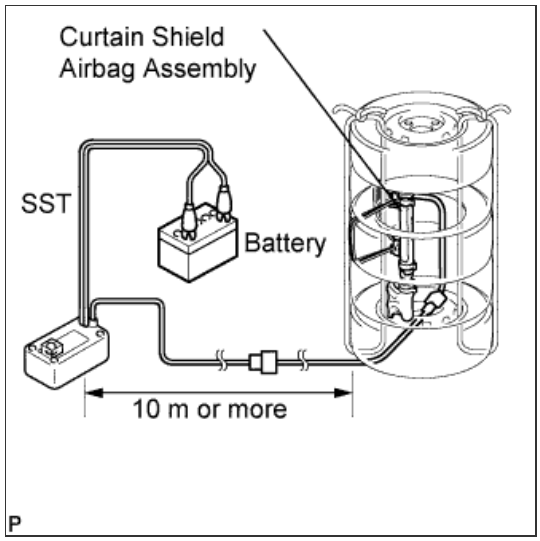

h. Deploy the airbag.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (.8 ft.) radius of the tire which the curtain shield airbag is tied to.

iii. Press SST activation switch to deploy the airbag.

CAUTION:

When deploying the airbag, make sure that no one is near the tire.


HINT:

The airbag is deployed as the LED of SST activation switch comes on.

i. Dispose of the curtain shield airbag.

CAUTION:


- **The curtain shield airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a curtain shield airbag with a deployed airbag.**
- **Do not apply water to a curtain shield airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

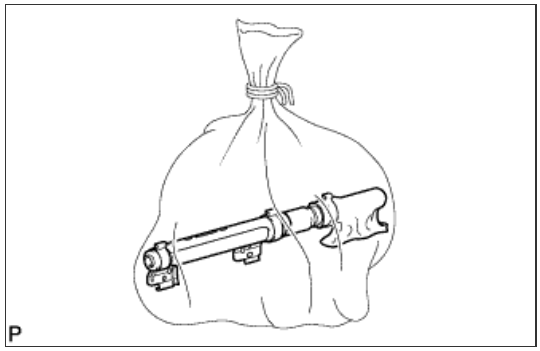


i. Remove the curtain shield airbag from the tire.

ii. Place the curtain shield airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

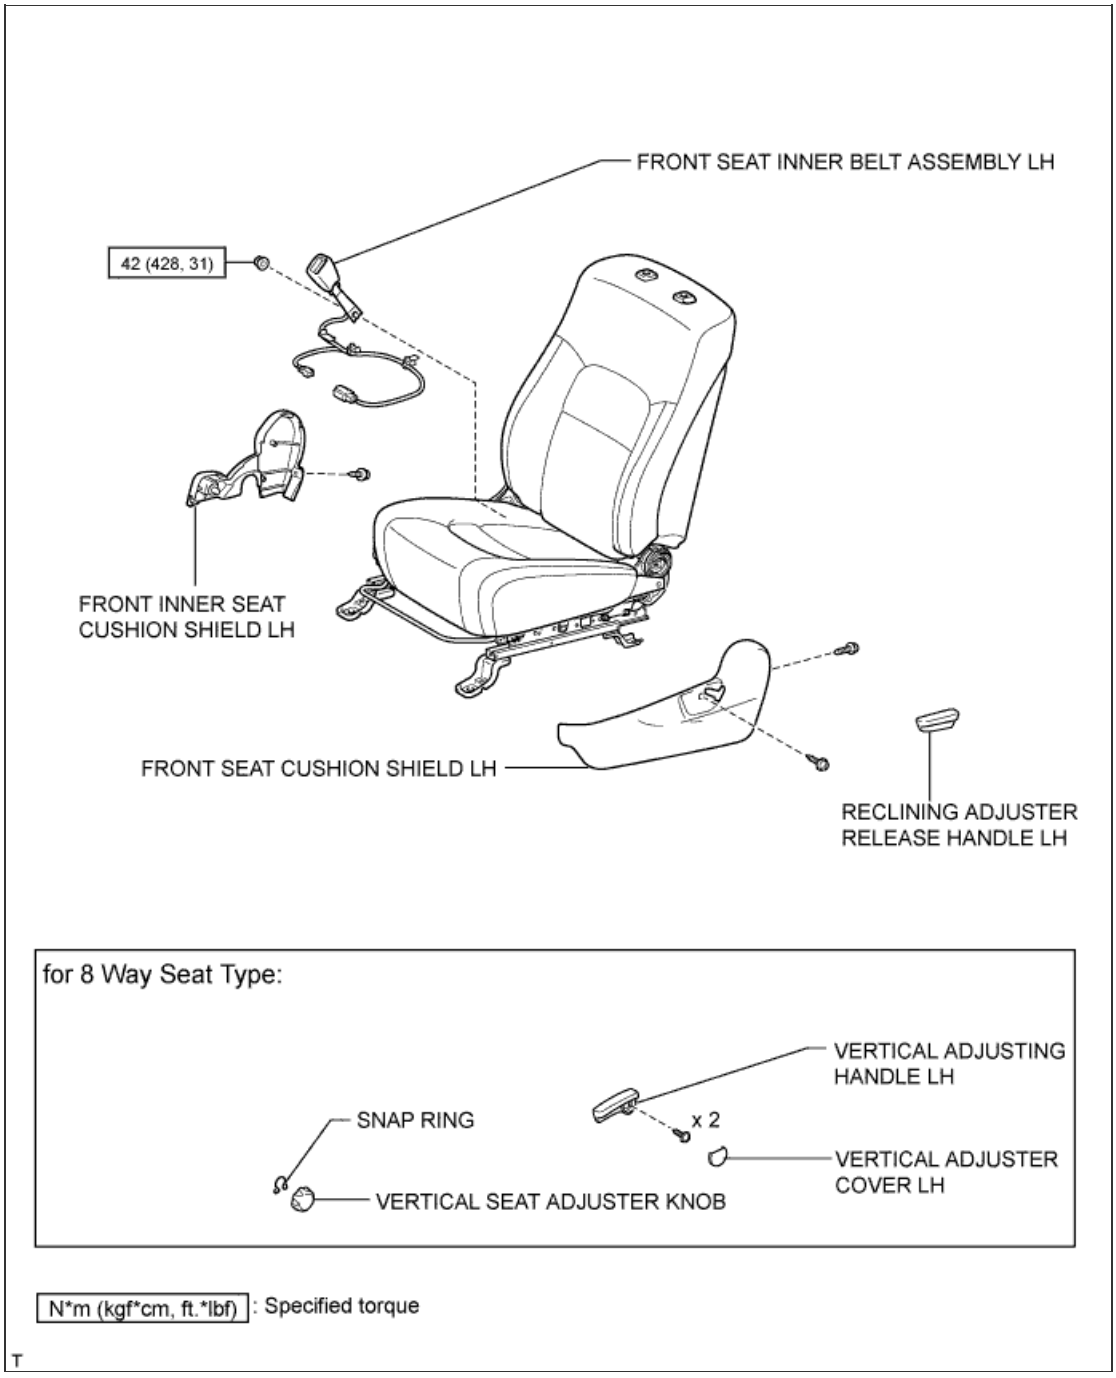

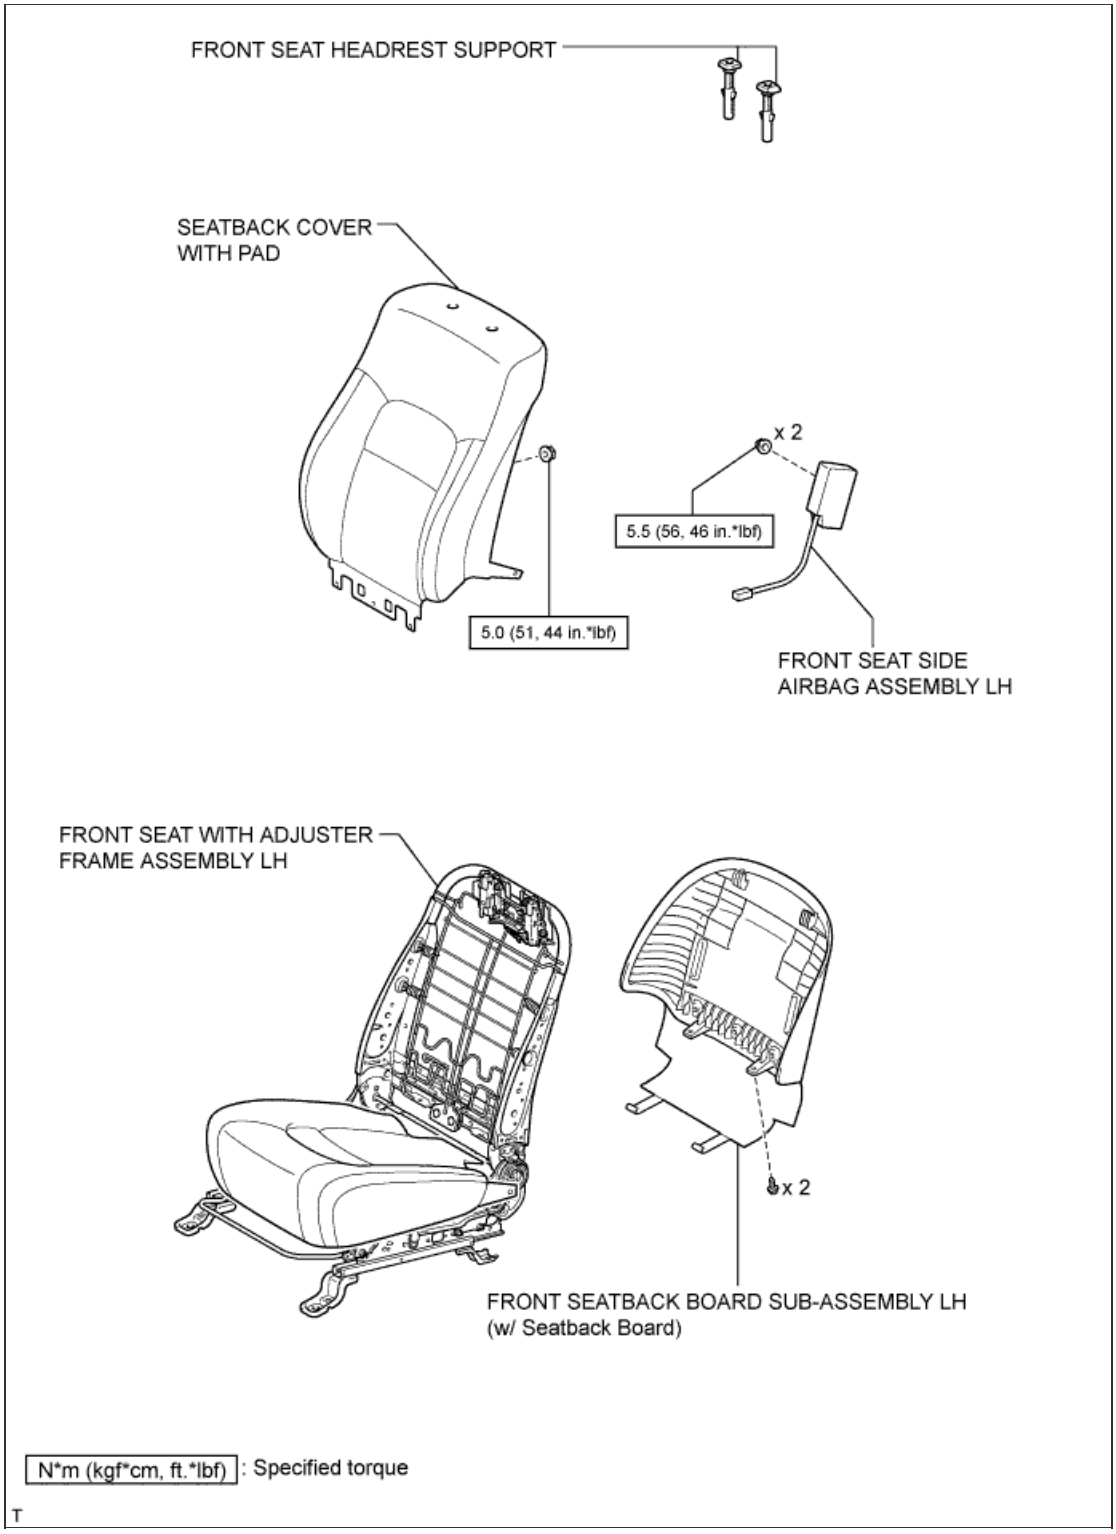

N*m (kgf*cm, ft.*lbf) : Specified torque


T

for Preparation Click here

1. CHECK FRONT SEAT SIDE AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

b. With the front seat side airbag installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front seat with a new one: Cuts, minute cracks or marked discoloration on the front seatback around the front seat side airbag.

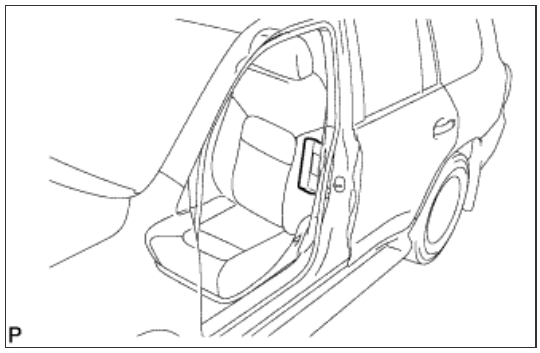


2. CHECK FRONT SEAT SIDE AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

a. Perform a diagnostic system check (Click here).

b. With the front seat side airbag removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front seat side airbag with a new one:

- Cuts, minute cracks or marked discoloration on the front seat side airbag.
- Cracks or other damage to the wire harness or connector.

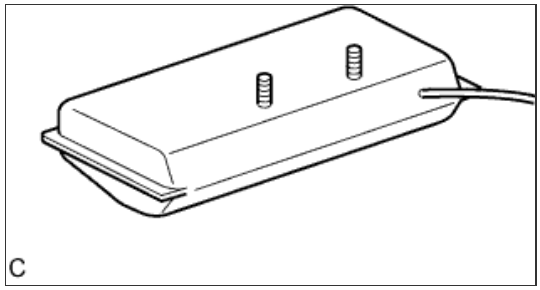

NOTICE:


For removal and installation procedures of the front seat side airbag, be sure to follow the correct procedure.

for Preparation Click here

1. CHECK FRONT SEAT SIDE AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

b. With the front seat side airbag installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front seat with a new one: Cuts, minute cracks or marked discoloration on the front seatback around the front seat side airbag.

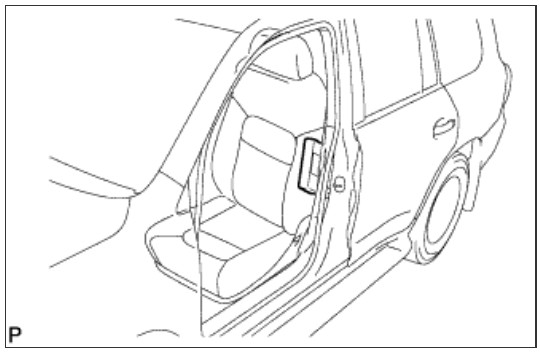


2. CHECK FRONT SEAT SIDE AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

a. Perform a diagnostic system check (Click here).

b. With the front seat side airbag removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front seat side airbag with a new one:

- Cuts, minute cracks or marked discoloration on the front seat side airbag.
- Cracks or other damage to the wire harness or connector.

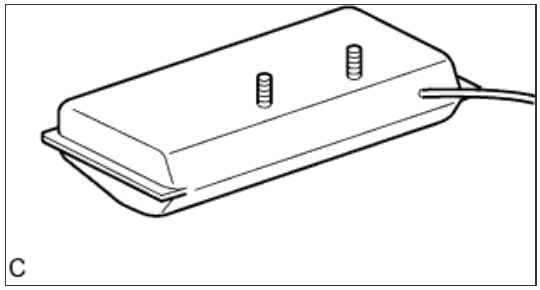

NOTICE:

For removal and installation procedures of the front seat side airbag, be sure to follow the correct procedure.

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH


a. Remove the front seat assembly LH (Click here).

2. REMOVE VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the vertical adjuster cover.


HINT:

Tape the screwdriver tip before use.

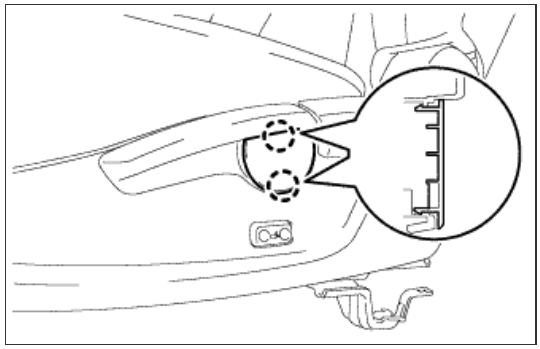


3. REMOVE VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Remove the 2 screws and vertical adjusting handle.

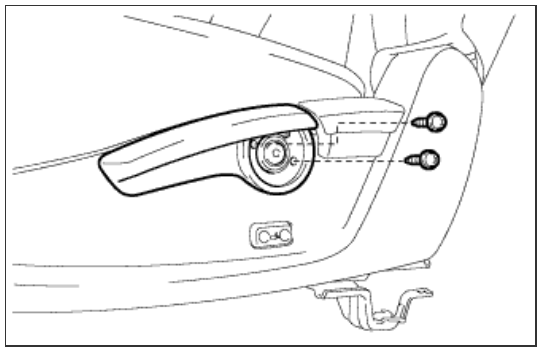

4. REMOVE VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)

a. Remove the snap ring and vertical seat adjuster knob.

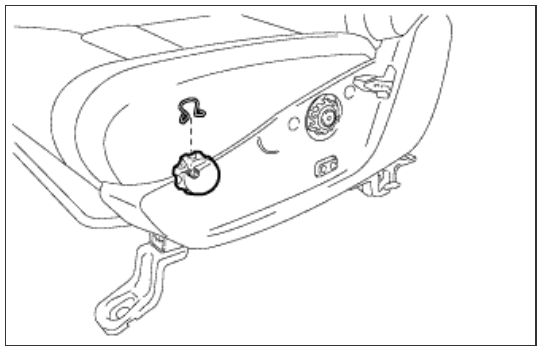


5. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

a. Lift the reclining adjuster release handle.

b. Using a screwdriver, detach the claw and remove the reclining adjuster release handle.


HINT:

Tape the screwdriver tip before use.

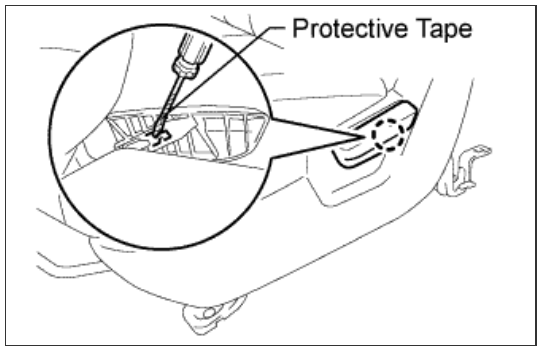


6. REMOVE FRONT SEAT CUSHION SHIELD LH

a. w/ Seatback Board:
Remove the 2 rubber bands from the hooks.

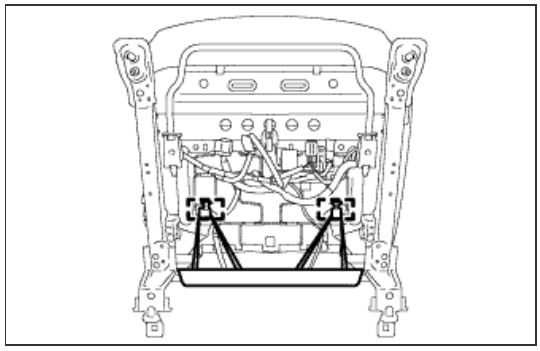


b. w/o Seatback Board:
Remove the 2 rubber bands from the hooks.

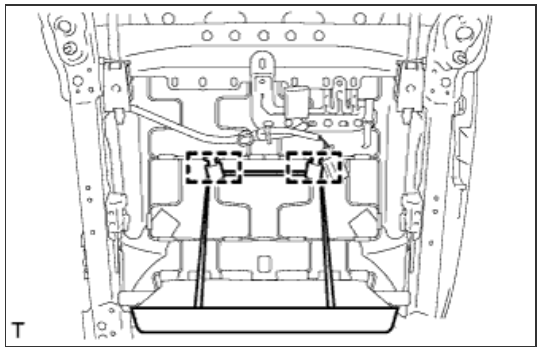

c. for 4 Way Seat Type:

i. Remove the 2 screws.


ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.

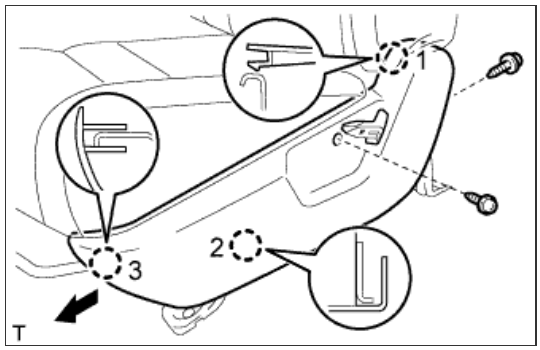

d. for 8 Way Seat Type:

i. Remove the 3 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.

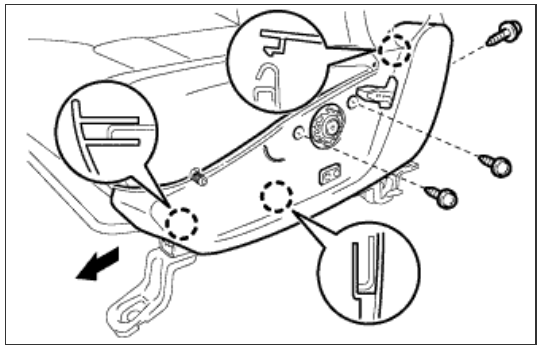


e. w/ Lumbar Support:
Disconnect the lumbar switch connector.

7. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

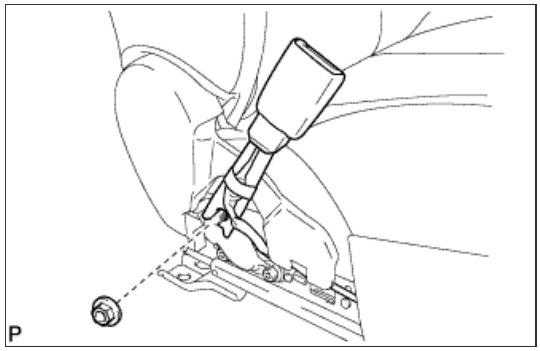

8. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the claw and clip, and then remove the cushion shield.

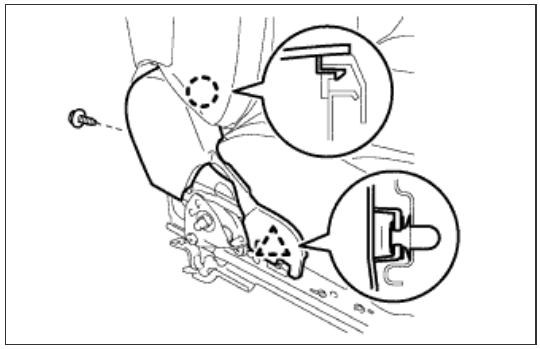

9. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

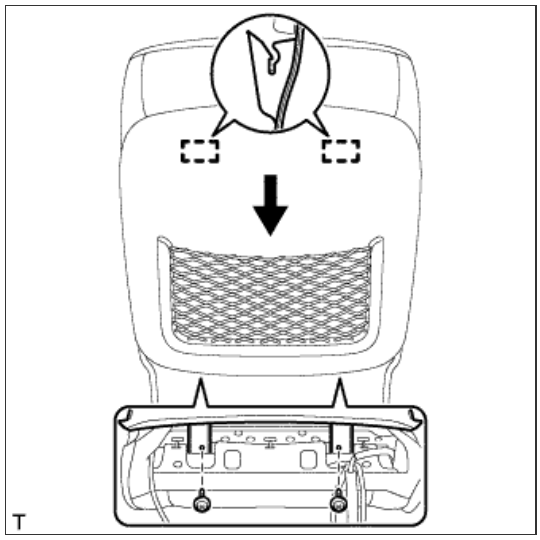

10. REMOVE FRONT SEAT HEADREST SUPPORT (w/ Active Headrest)


a. Detach the 4 claws and remove the 2 headrest supports.

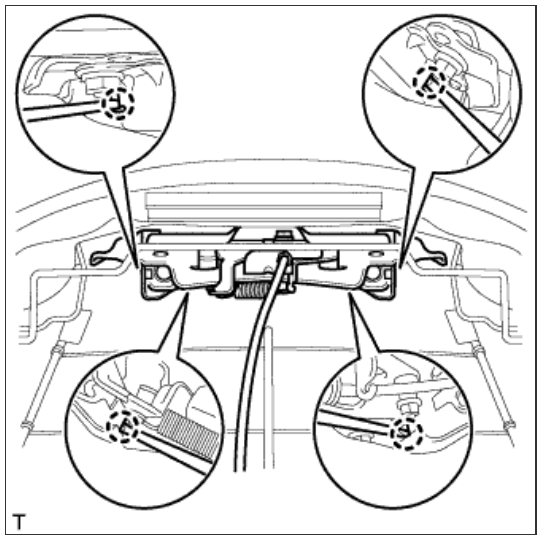


11. REMOVE SEATBACK COVER WITH PAD

a. w/ Seatback Board:

i. Remove the 3 hog rings and detach the 9 hooks.

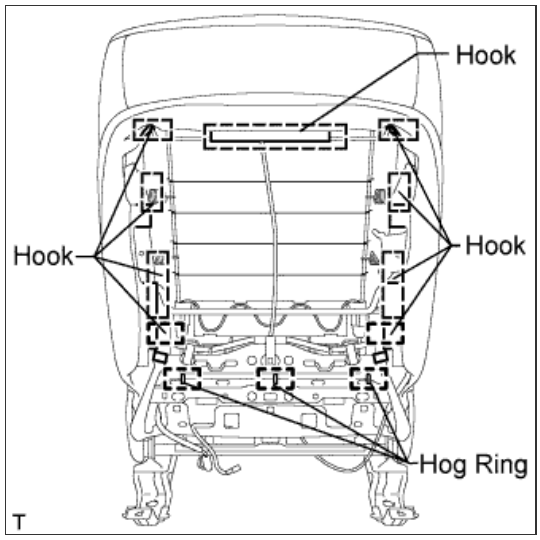


ii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

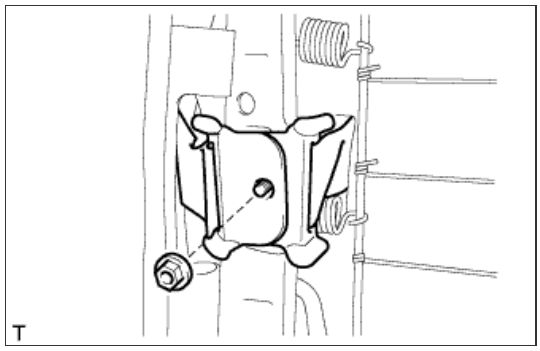


b. w/o Seatback Board:


i. Remove the 3 hog rings.

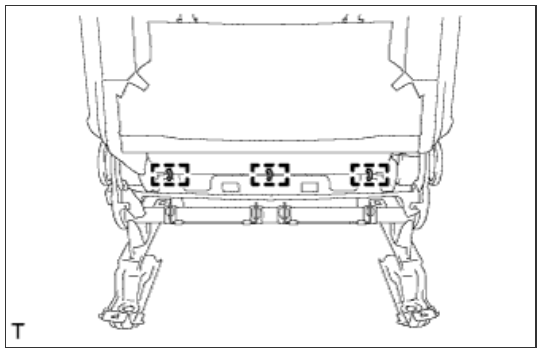


ii. Open the 2 fasteners, and then open the seatback cover.

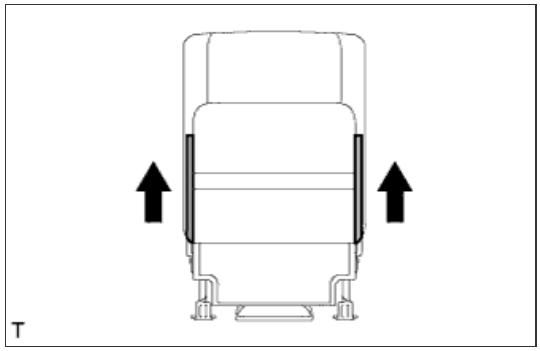

iii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

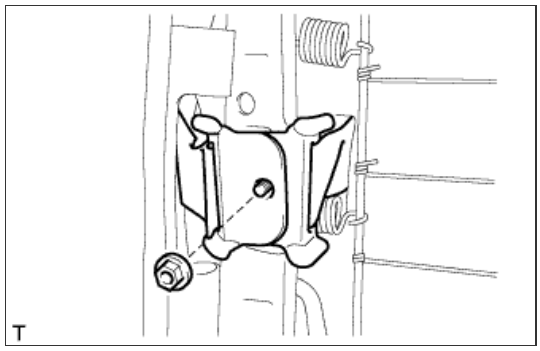


iv. Detach the 4 claws and remove the 2 headrest supports.

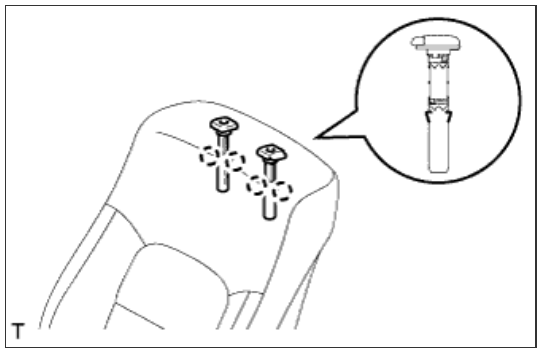

c. Remove the seatback cover with pad from the seatback frame.

12. REMOVE FRONT SEAT SIDE AIRBAG ASSEMBLY LH

a. Detach the 5 clamps and disconnect the wire harness.

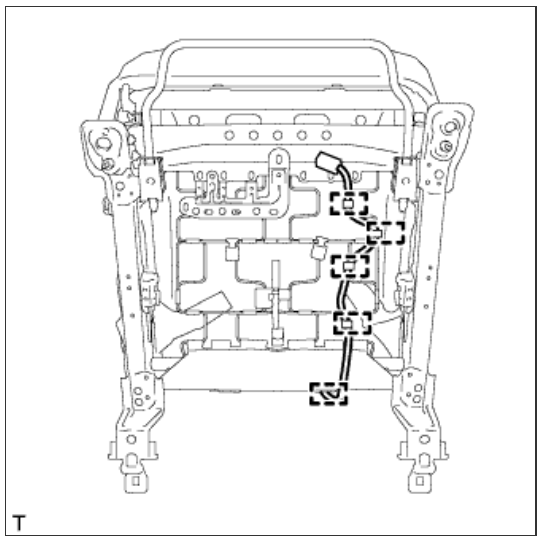


b. Detach the 2 clamps and disconnect the wire harness.

c. Remove the 2 nuts and front seat side airbag assembly LH.

CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.

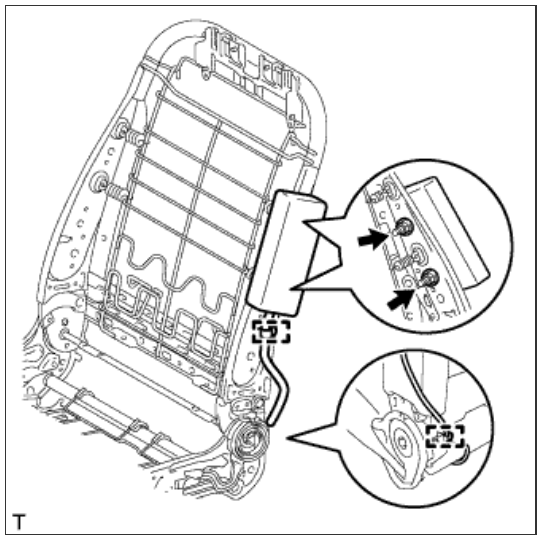
T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH


a. Remove the front seat assembly LH (Click here).

2. REMOVE VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the vertical adjuster cover.


HINT:

Tape the screwdriver tip before use.

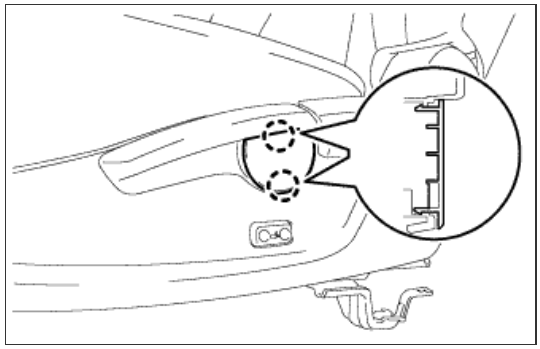


3. REMOVE VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Remove the 2 screws and vertical adjusting handle.

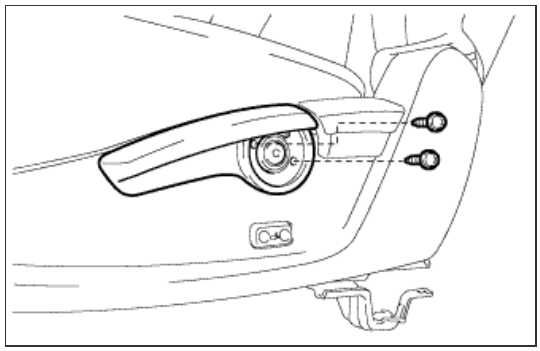

4. REMOVE VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)

a. Remove the snap ring and vertical seat adjuster knob.

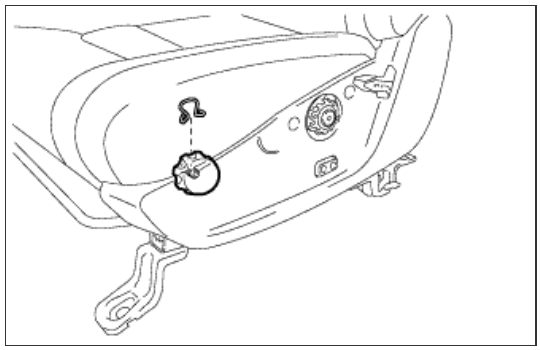


5. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

a. Lift the reclining adjuster release handle.

b. Using a screwdriver, detach the claw and remove the reclining adjuster release handle.


HINT:

Tape the screwdriver tip before use.

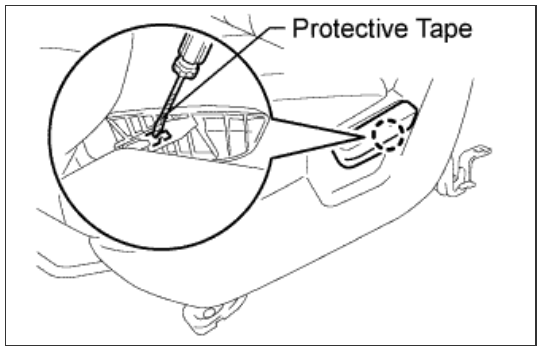


6. REMOVE FRONT SEAT CUSHION SHIELD LH

a. w/ Seatback Board:
Remove the 2 rubber bands from the hooks.

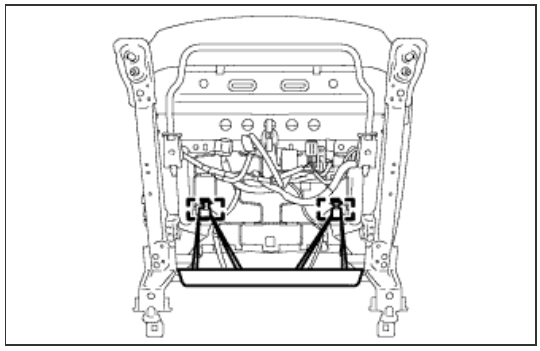


b. w/o Seatback Board:
Remove the 2 rubber bands from the hooks.

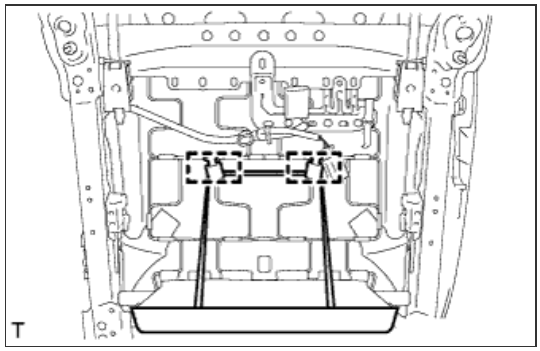

c. for 4 Way Seat Type:

i. Remove the 2 screws.


ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.

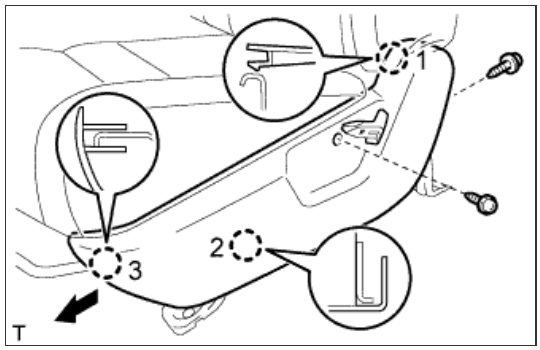

d. for 8 Way Seat Type:

i. Remove the 3 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.

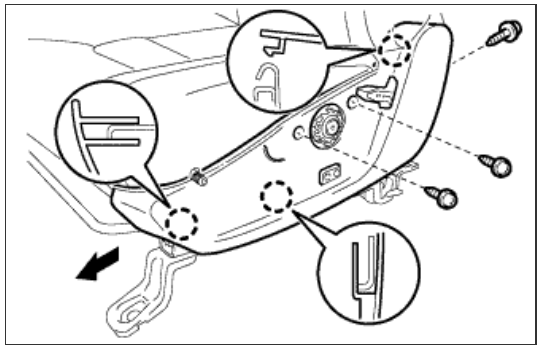


e. w/ Lumbar Support:
Disconnect the lumbar switch connector.

7. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

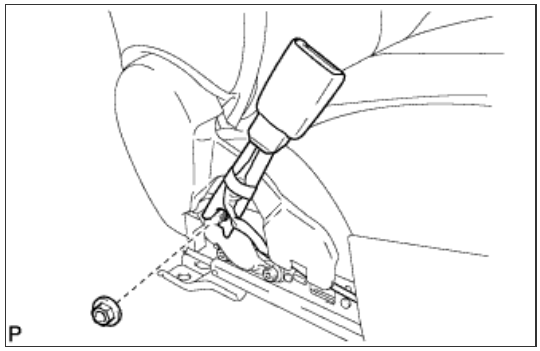

8. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the claw and clip, and then remove the cushion shield.

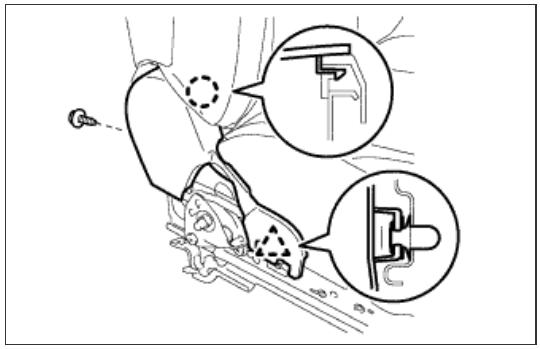

9. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

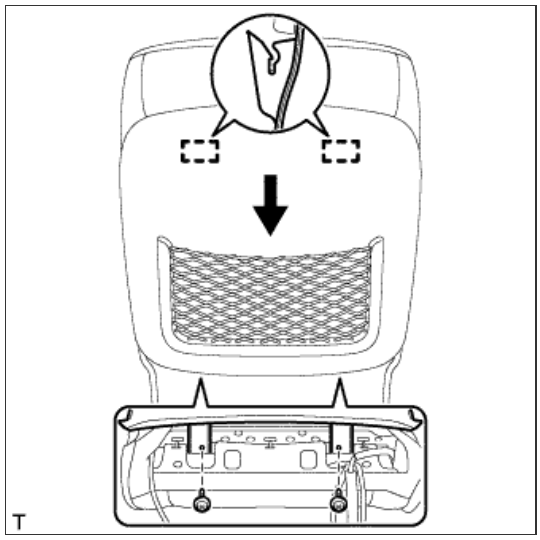

10. REMOVE FRONT SEAT HEADREST SUPPORT (w/ Active Headrest)


a. Detach the 4 claws and remove the 2 headrest supports.

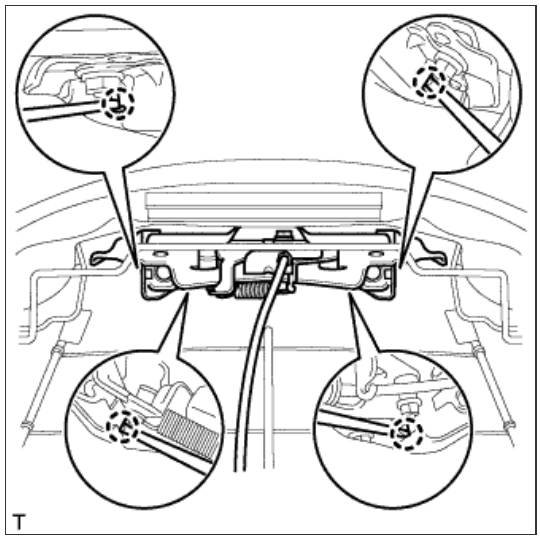


11. REMOVE SEATBACK COVER WITH PAD

a. w/ Seatback Board:

i. Remove the 3 hog rings and detach the 9 hooks.

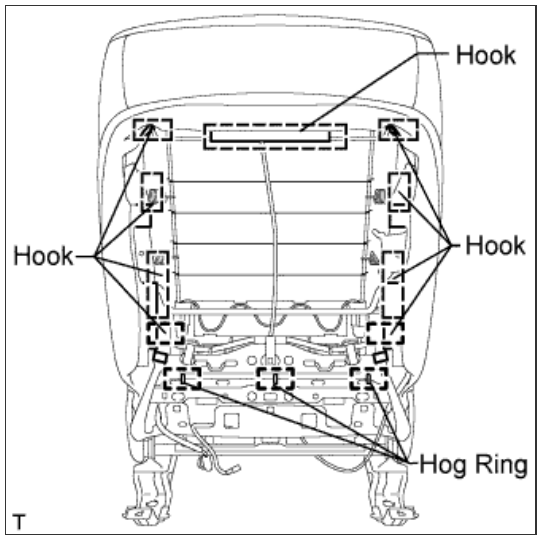


ii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

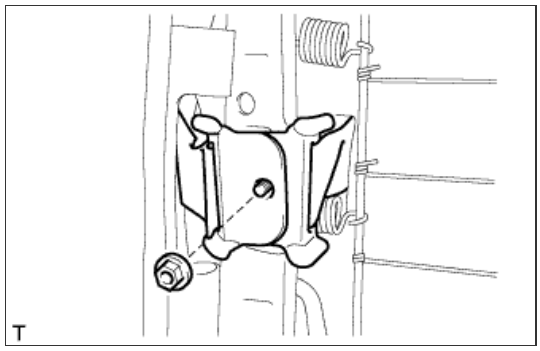


b. w/o Seatback Board:


i. Remove the 3 hog rings.

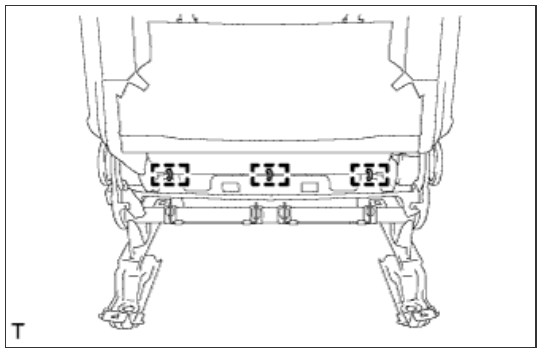


ii. Open the 2 fasteners, and then open the seatback cover.

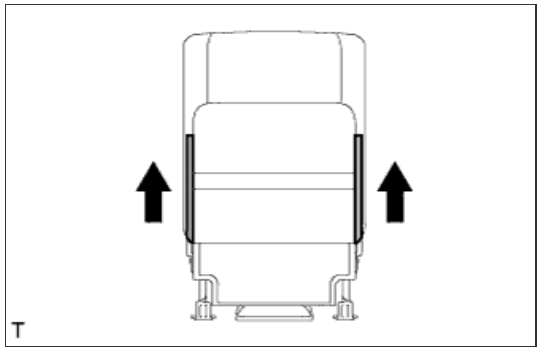

iii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

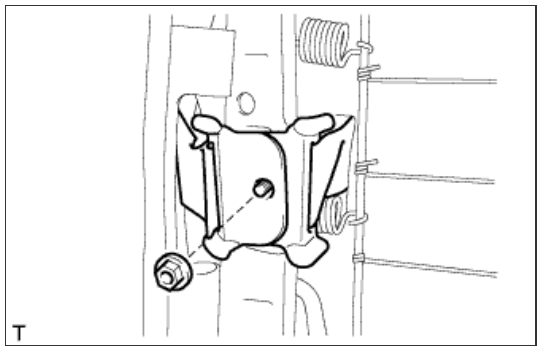


iv. Detach the 4 claws and remove the 2 headrest supports.

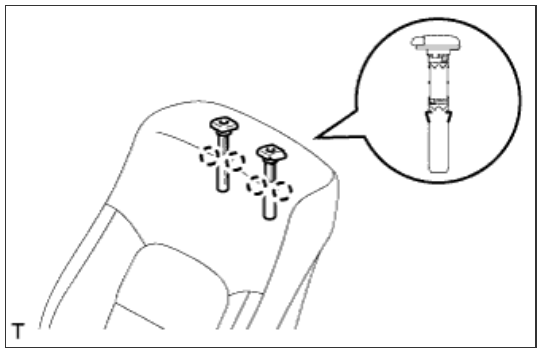

c. Remove the seatback cover with pad from the seatback frame.

12. REMOVE FRONT SEAT SIDE AIRBAG ASSEMBLY LH

a. Detach the 5 clamps and disconnect the wire harness.

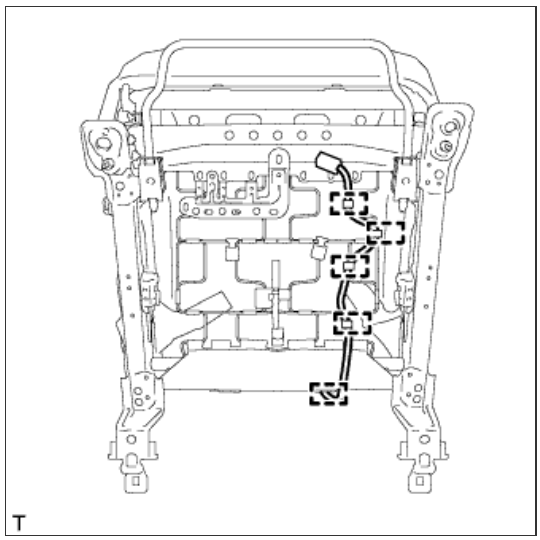


b. Detach the 2 clamps and disconnect the wire harness.

c. Remove the 2 nuts and front seat side airbag assembly LH.

CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.

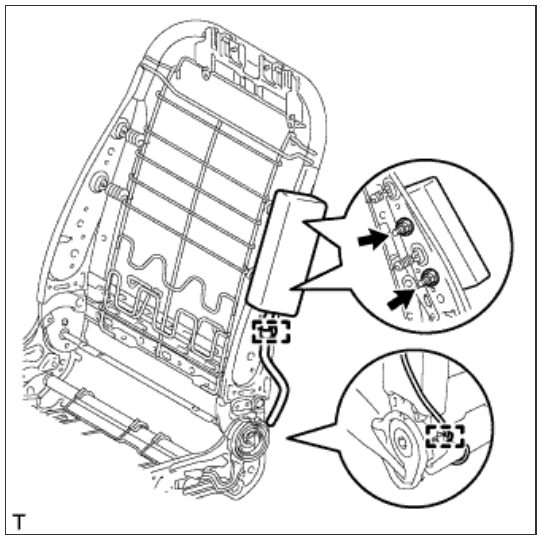
T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT SIDE AIRBAG ASSEMBLY LH


CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.


a. Install the front seat side airbag assembly with 2 nuts.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

b. Attach the 2 clamps to connect the wire harness.

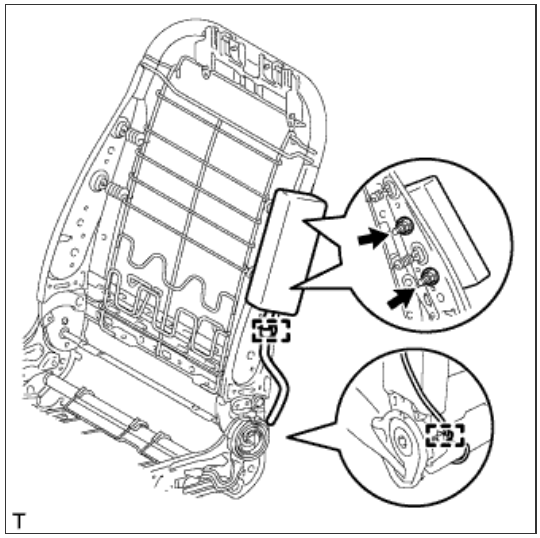

c. Attach the 5 clamps to connect the wire harness.

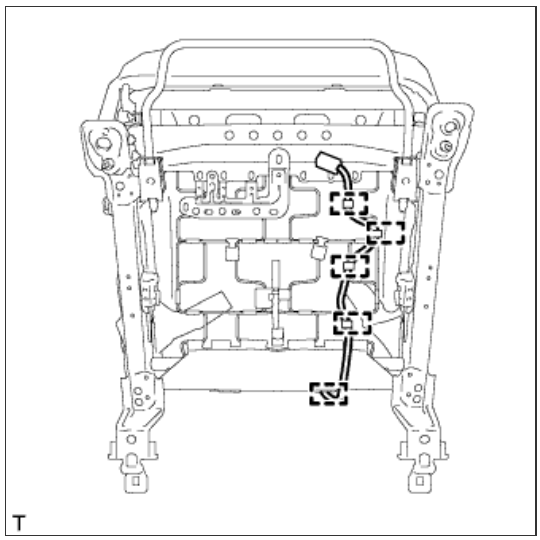

2. INSTALL SEATBAC COVER ITH PAD

a. Install the seatback cover with pad to the seatback frame.


b. w/ Seatback Board:

i. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

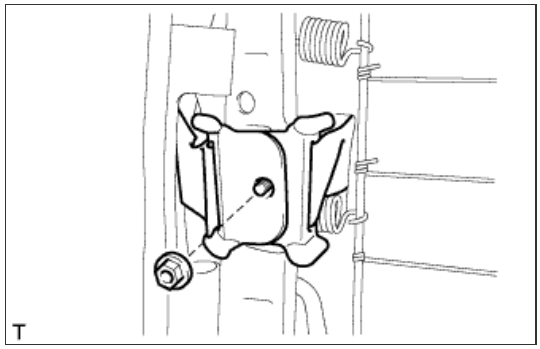


ii. Attach the hooks.

iii. Using hog ring pliers, install new hog rings to the seat frame.

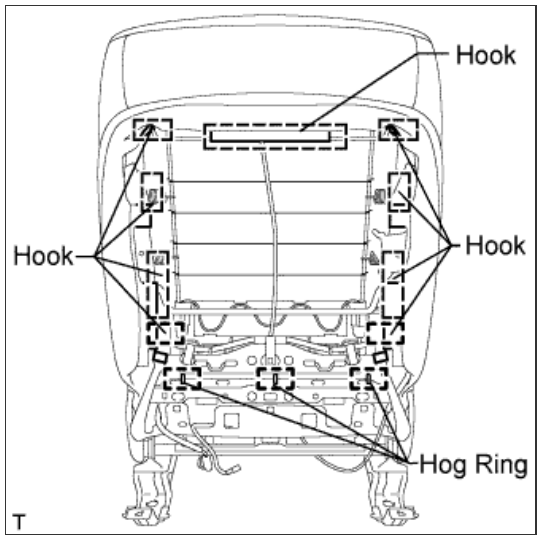

c. w/o Seatback Board:

i. Attach the 4 claws to install the 2 headrest supports.

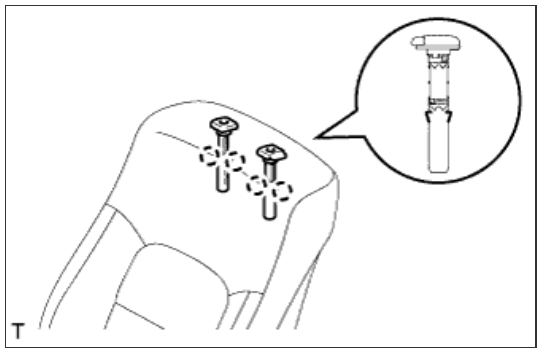


ii. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

CAUTION:


After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

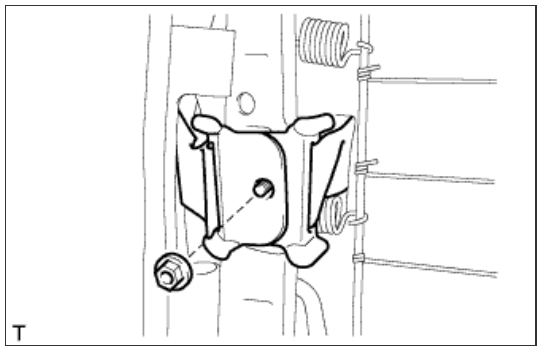

iii. Close the 2 fasteners, and then close the seatback cover.

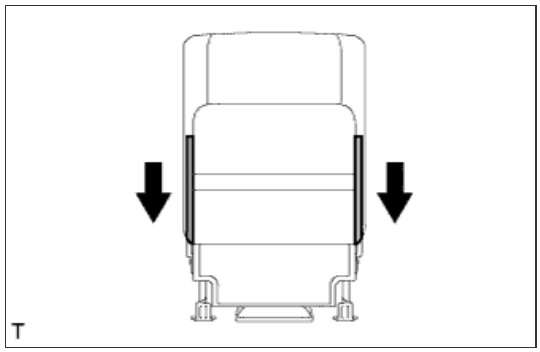

iv. Using hog ring pliers, install new hog rings to the seat frame.

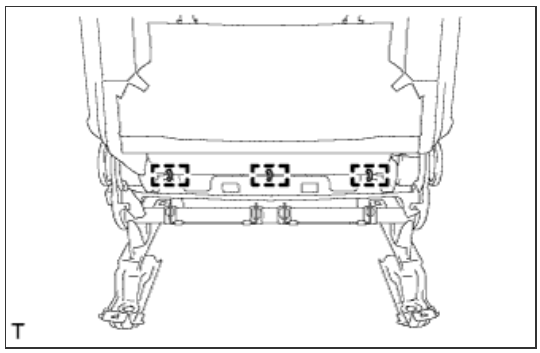


3. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the 4 claws to install the 2 headrest supports.

4. INSTALL FRONT SEATBAC BOARD SUB-ASSEMBLY LH

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.


b. Install the 2 screws.

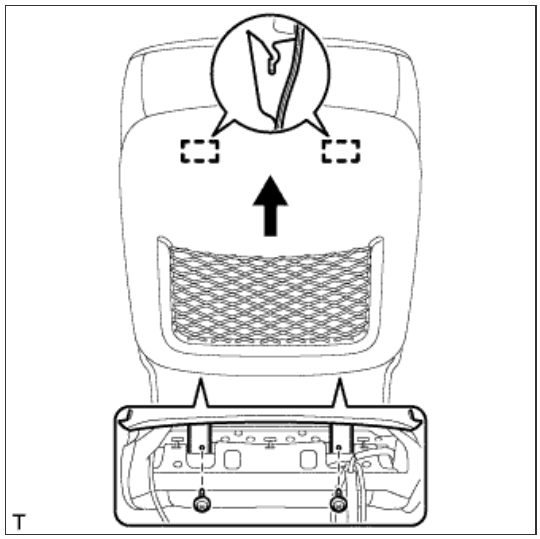

5. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the claw and clip to install the cushion shield.

b. Install the screw.

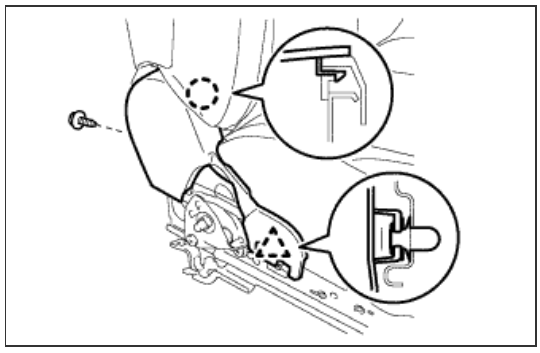

6. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding part of the front seat adjuster.

b. Connect the connectors and attach the clamps.

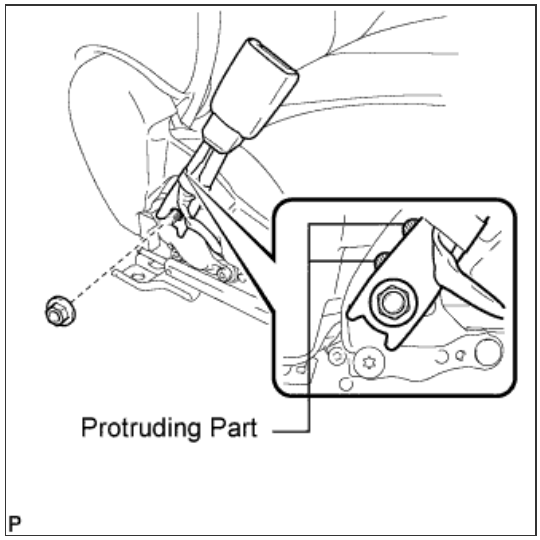


7. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for 4 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.

ii. Install the 2 screws.


b. w/ Lumbar Support:
Connect the lumbar switch connector.

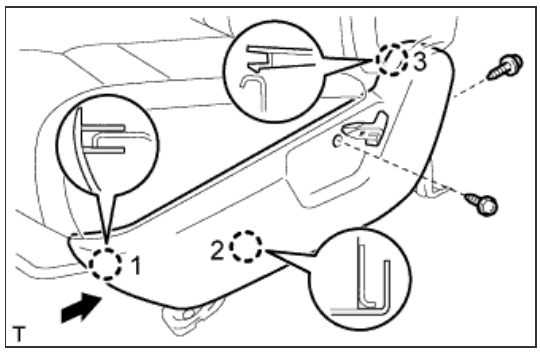


c. for 8 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.


ii. Install the 3 screws.

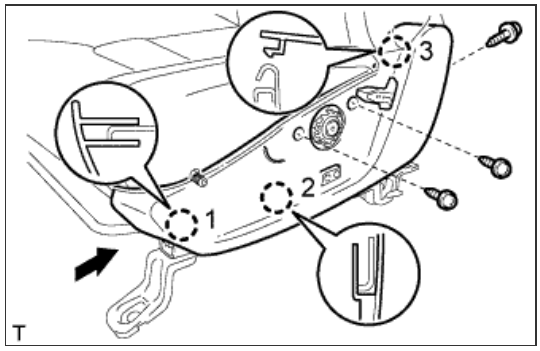

d. w/ Seatback Board:
Attach the 2 rubber bands to the hooks.

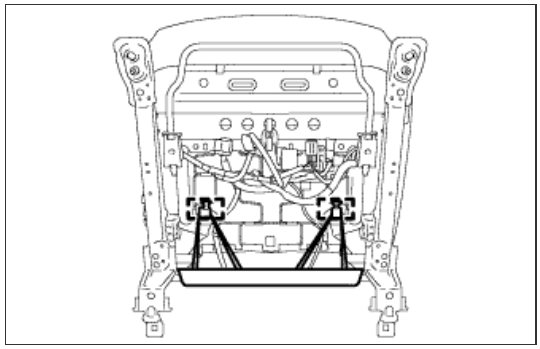


e. w/o Seatback Board:
Attach the 2 rubber bands to the hooks.

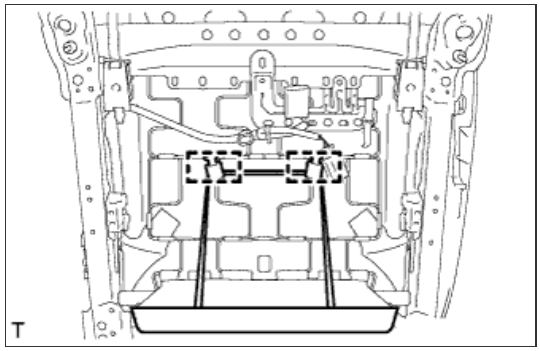

8. INSTALL RECLINING AD USTER RELEASE HANDLE LH


a. Attach the claw to install the reclining adjuster release handle.

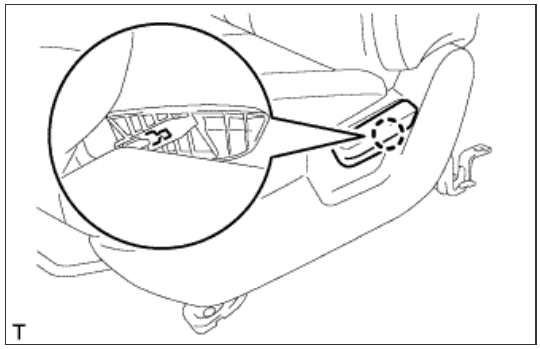

9. INSTALL VERTICAL SEAT AD USTER NOB (for 8 a Seat T pe)


a. Install the snap ring to the vertical seat adjuster knob.

b. Install the vertical seat adjuster knob to the front seat.

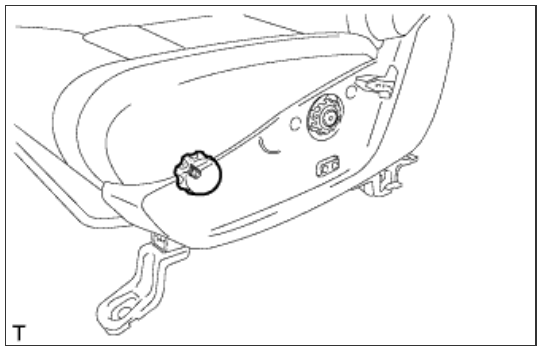


10. INSTALL VERTICAL AD USTING HANDLE LH (for 8 a Seat T pe)

a. Install the vertical adjusting handle with the 2 screws.

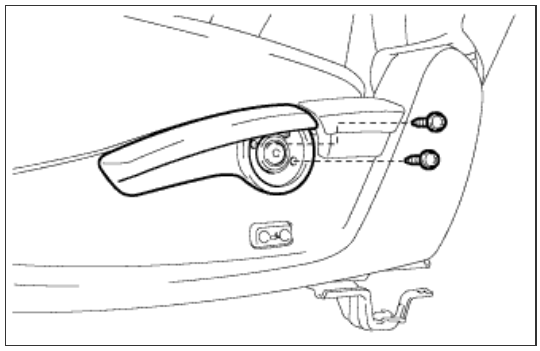

11. INSTALL VERTICAL AD USTER COVER LH (for 8 a Seat T pe)

a. Attach the 2 claws to install the vertical adjuster cover.

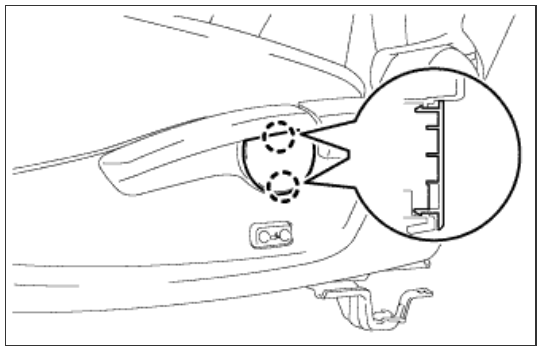

12. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly LH (Click here).

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT SIDE AIRBAG ASSEMBLY LH


CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.


a. Install the front seat side airbag assembly with 2 nuts.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

b. Attach the 2 clamps to connect the wire harness.

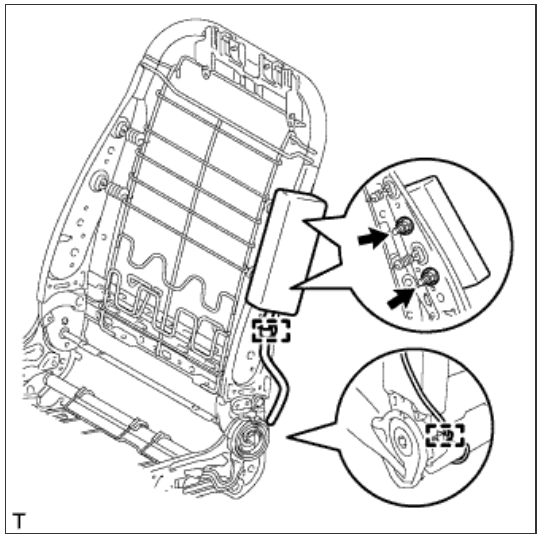

c. Attach the 5 clamps to connect the wire harness.

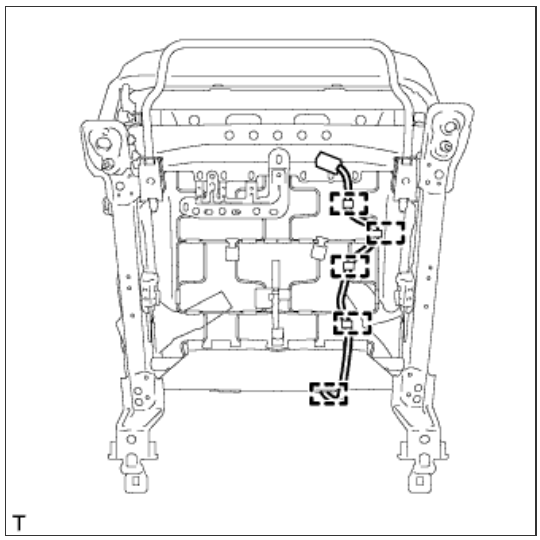

2. INSTALL SEATBAC COVER ITH PAD

a. Install the seatback cover with pad to the seatback frame.


b. w/ Seatback Board:

i. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

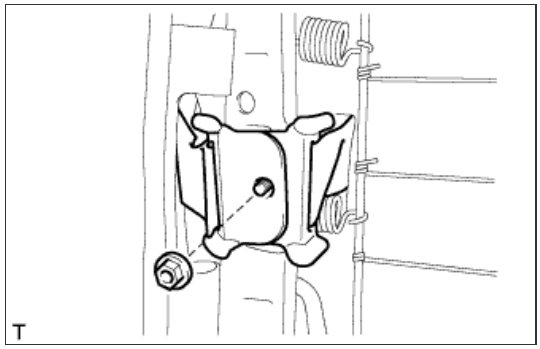


ii. Attach the hooks.

iii. Using hog ring pliers, install new hog rings to the seat frame.

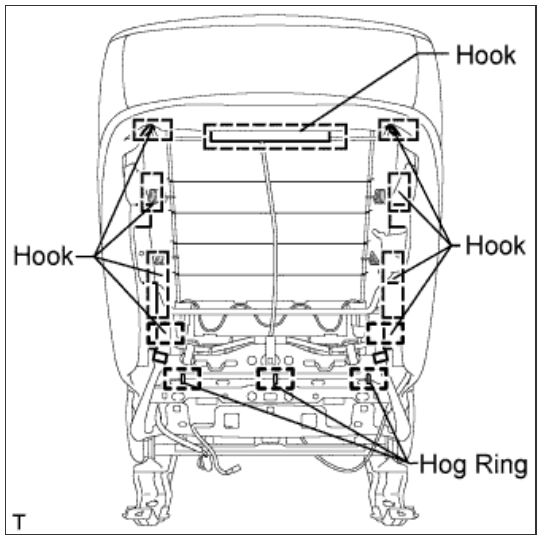

c. w/o Seatback Board:

i. Attach the 4 claws to install the 2 headrest supports.

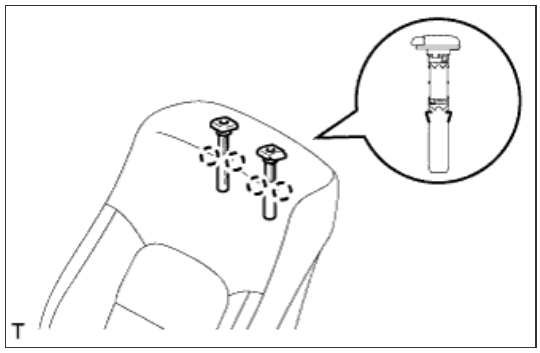


ii. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

CAUTION:


After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

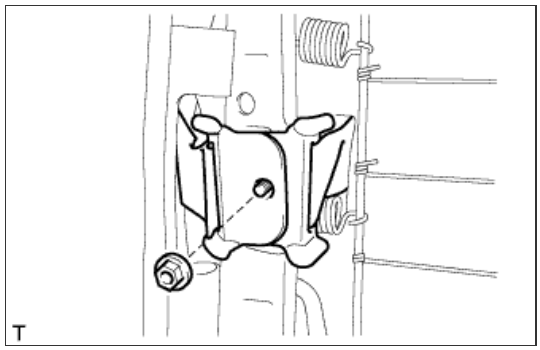

iii. Close the 2 fasteners, and then close the seatback cover.

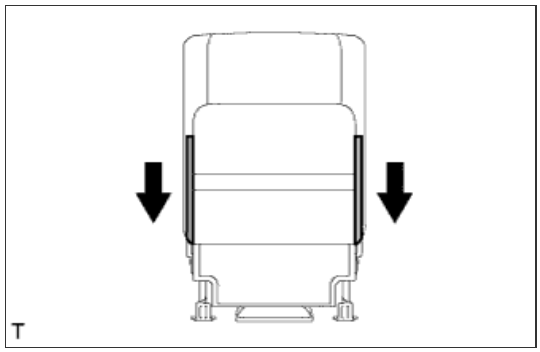

iv. Using hog ring pliers, install new hog rings to the seat frame.

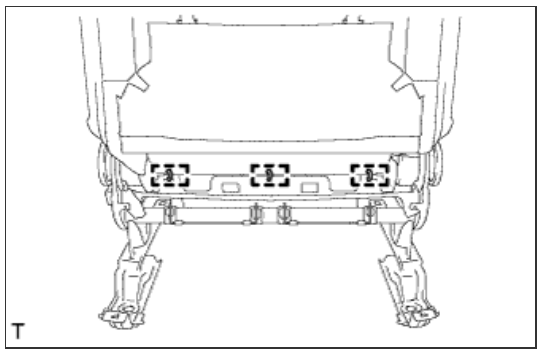


3. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the 4 claws to install the 2 headrest supports.

4. INSTALL FRONT SEATBAC BOARD SUB-ASSEMBLY LH

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.


b. Install the 2 screws.

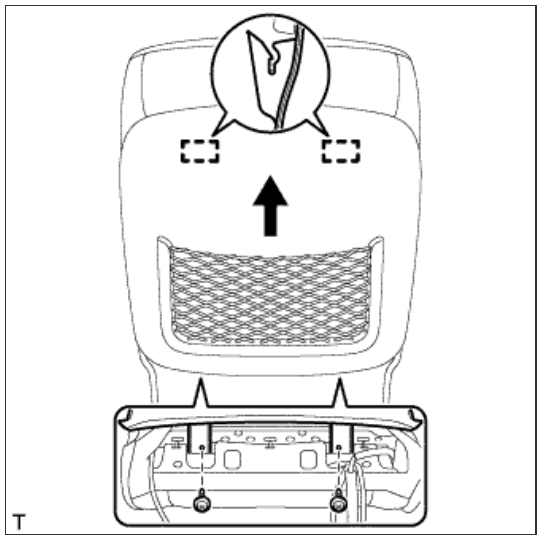

5. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the claw and clip to install the cushion shield.

b. Install the screw.

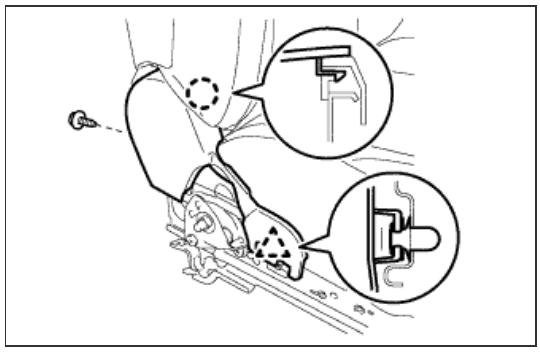

6. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding part of the front seat adjuster.

b. Connect the connectors and attach the clamps.

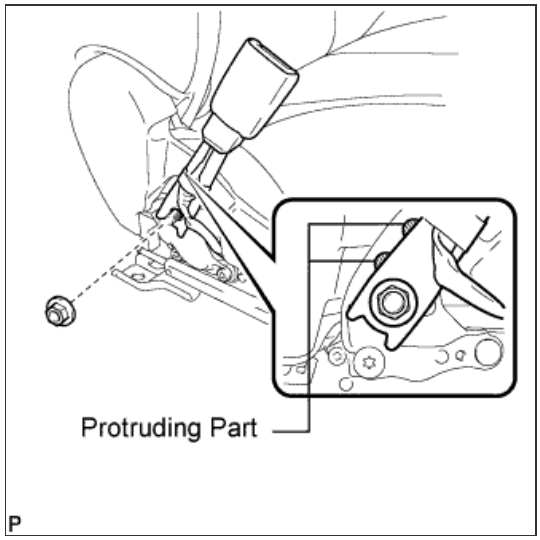


7. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for 4 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.

ii. Install the 2 screws.


b. w/ Lumbar Support:
Connect the lumbar switch connector.

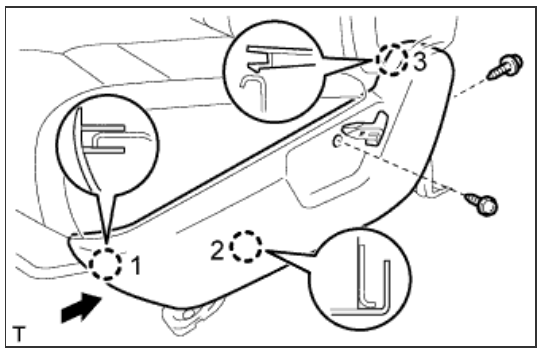


c. for 8 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.


ii. Install the 3 screws.

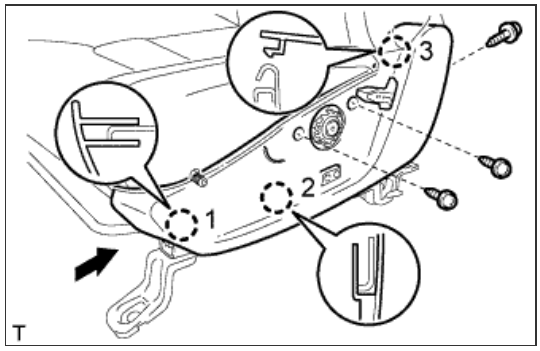

d. w/ Seatback Board:
Attach the 2 rubber bands to the hooks.

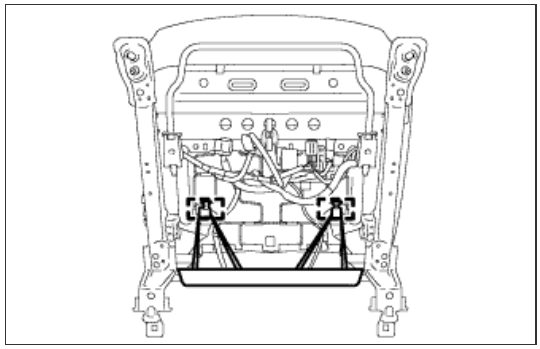


e. w/o Seatback Board:
Attach the 2 rubber bands to the hooks.

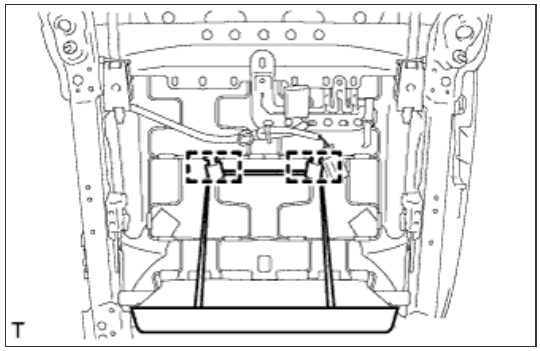

8. INSTALL RECLINING AD USTER RELEASE HANDLE LH


a. Attach the claw to install the reclining adjuster release handle.

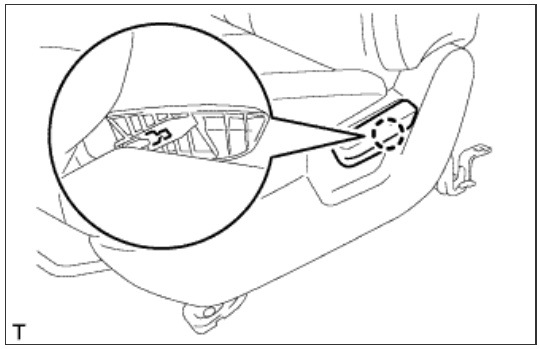

9. INSTALL VERTICAL SEAT AD USTER NOB (for 8 a Seat T pe)


a. Install the snap ring to the vertical seat adjuster knob.

b. Install the vertical seat adjuster knob to the front seat.

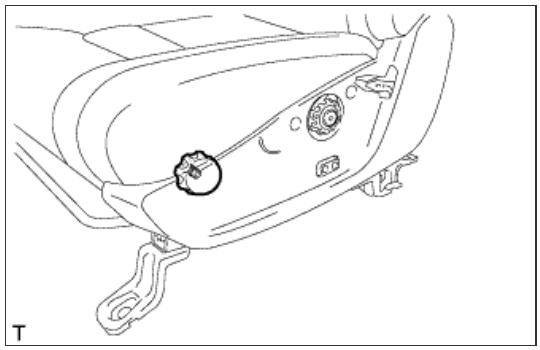


10. INSTALL VERTICAL AD USTING HANDLE LH (for 8 a Seat T pe)

a. Install the vertical adjusting handle with the 2 screws.

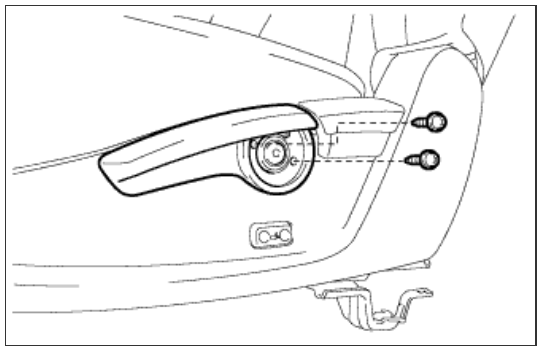

11. INSTALL VERTICAL AD USTER COVER LH (for 8 a Seat T pe)

a. Attach the 2 claws to install the vertical adjuster cover.

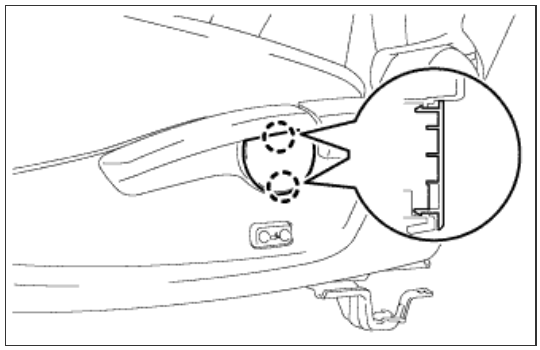

12. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly LH (Click here).

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a front seat side airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deplo ed, so perform the operation outdoors and where it will not create a nuisance to nearb residents.**
- **When deplo ing the airbag, alwa s use the specified SST (SRS Airbag Deplo ent Tool). Perform the operation in a place awa from electrical noise.**
- **When deplo ing the airbag, perform the operation at least 10 m (32.8 ft.) awa from the airbag.**
- **The front seat side airbag becomes extremel hot when the airbag is deplo ed, so do not touch it for at least 30 minutes after deplo ent.**
- **Use gloves and safet glasses when handling a front seat side airbag with a deplo ed airbag.**
- **Do not appl ater to a front seat side airbag with a deplo ed airbag.**
- **Alwa s wash our hands with water after completing the operation.**
- **An airbag or pretensioner ma be activated b static electricit To prevent this, be sure to touch a metal surface with bare hands to discharge static electricit before performing this procedure.**

1. DISPOSE OF FRONT SEAT SIDE AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

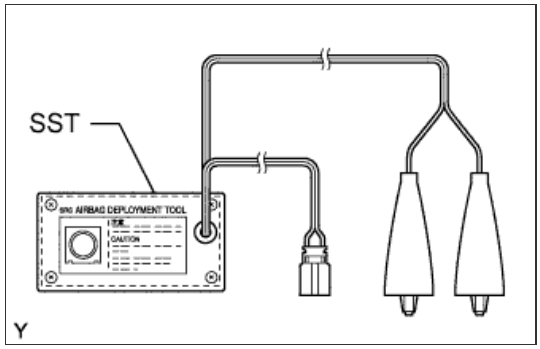

d. Remove the front seat (Click here).

HINT:

Keep the front seat in the cabin.

e. Install SST.

i. Disconnect the connector (yellow colored) from the front seat side airbag.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

ii. Connect SST connector to the front seat side airbag connector.

SST

09082-00700

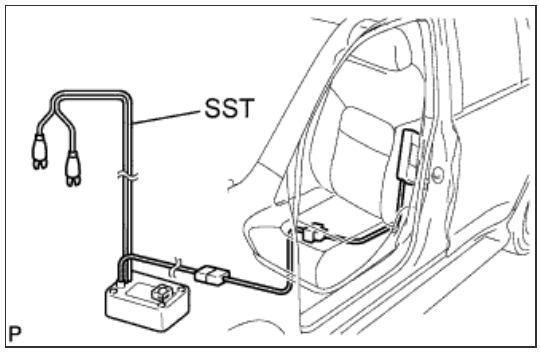

09082-00820

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

iii. Install the front seat (Click here).


iv. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

v. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

vi. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

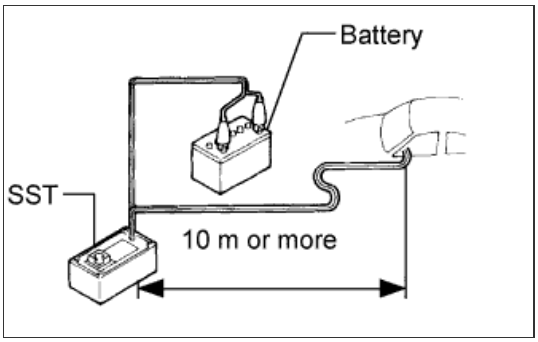

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deplo ing the airbag, make sure that no one is near the vehicle.**
- **The front seat side airbag becomes extremel bt when the airbag is deplo ed, so do not touch it for at least 30 minutes after deplo ent.**
- **Use gloves and safet glasses when handling a front seat side airbag with a deplo ed airbag.**
- **Do not appl ater to a front seat side airbag with a deplo ed airbag.**
- **Alwa s wash our hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF FRONT SEAT SIDE AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).


b. Remove the front seat side airbag.

i. Remove the front seat (Click here).

ii. Remove the 2 nuts and the front seat side airbag from the seatback.


CAUTION:

- **When removing the front seat side airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) batter terminal before starting work.**
- **When storing the front seat side airbag, keep the airbag deplo ent side facing upward.**

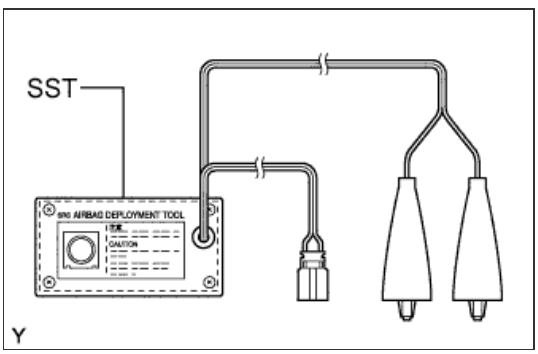

c. Using a service-purpose wire harness for the vehicle, tie down the front seat side airbag to a tire.

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2}) or more

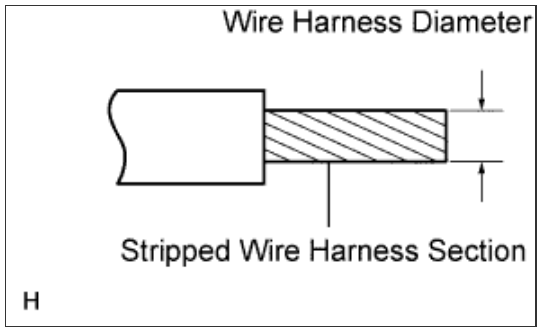

HINT:


To calculate the cross-sectional area of the stripped wire harness section:

Cross-sectional area 3.1 (Diameter)^2 divided by


CAUTION:

If the wire harness is too thin or an alternative ob ect is used to tie down the front seat side airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 in.^{2}).

i. Install the 2 nuts to the front seat side airbag.

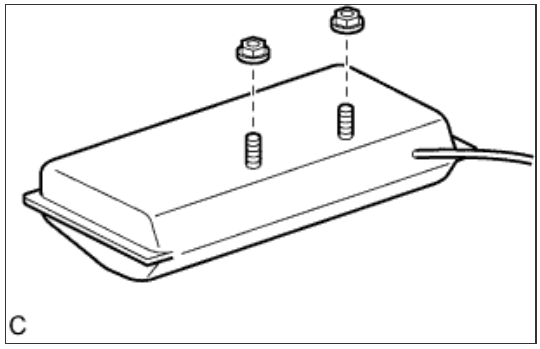


ii. Wind the wire harness around the stud bolts of the front seat side airbag as shown in the illustration.

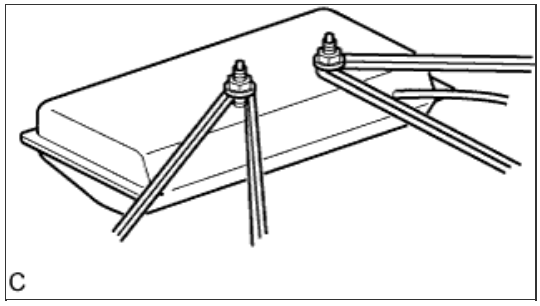

iii. Position the front seat side airbag inside a tire.

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

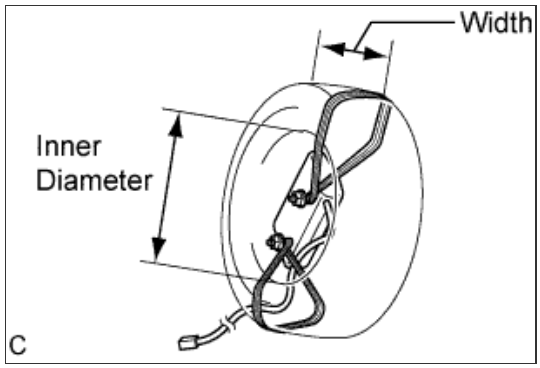

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the front seat side airbag ma become loose due to the shock when the airbag is deplo ed.**
- **Alwa s tie down the front seat side airbag with the airbag deplo ent direction facing inside the tire.**


NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.


d. Install SST.

i. Connect SST connector to the front seat side airbag connector.

SST
09082-00820

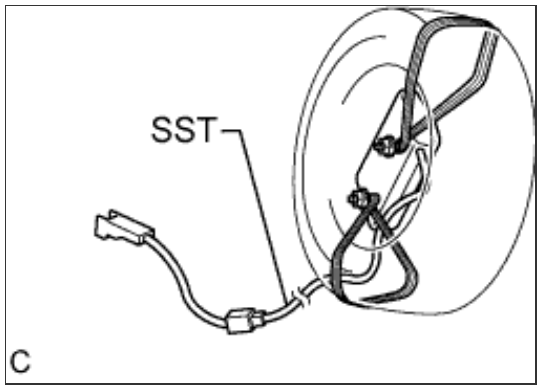

e. Place tires.

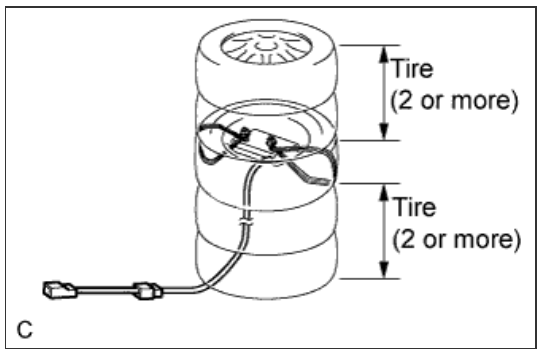


i. Place at least 2 tires under the tire which the front seat side airbag is tied to.

ii. Place at least 2 tires over the tire which the front seat side airbag is tied to. The top tire should have a disc wheel installed.

NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away**

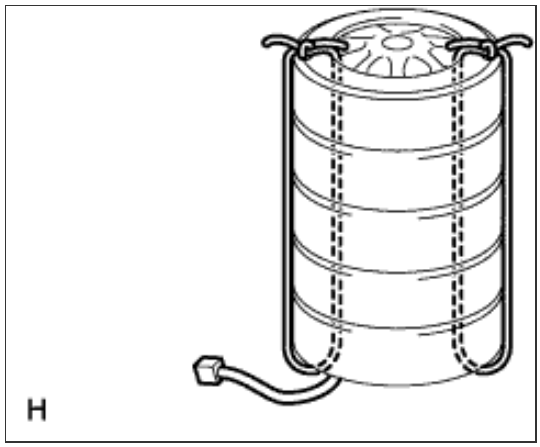


iii. Tie the tires together with 2 wire harnesses.

CAUTION:

Make sure that the wire harnesses are tight. Looseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

f. Install SST.

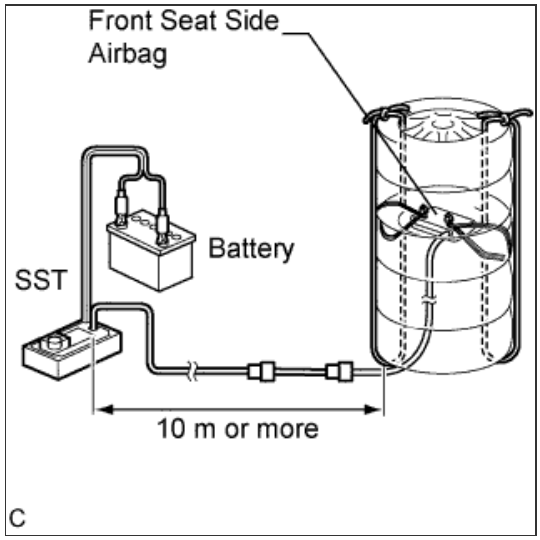

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the front seat side airbag is tied to.

iii. Press SST activation switch to deploy the airbag.


CAUTION:

When deploying the airbag, make sure that no one is near the tire.

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the front seat side airbag.

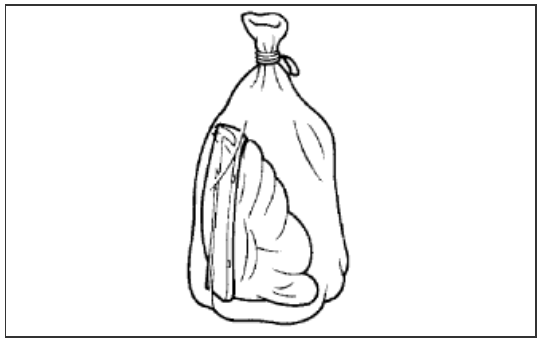

CAUTION:

- **The front seat side airbag becomes extremel bt when the airbag is deplo ed, so do not touch it for at least 30 minutes after deplo ent.**
- **Use gloves and safet glasses when handling a front seat side airbag with a deplo ed airbag.**
- **Do not appl ater to a front seat side airbag with a deplo ed airbag.**
- **Alwa s wash our hands with water after completing the operation.**

i. Remove the front seat side airbag from the tire.

ii. Place the front seat side airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a front seat side airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deplo ed, so perform the operation outdoors and where it will not create a nuisance to nearb residents.**
- **When deplo ing the airbag, alwa s use the specified SST (SRS Airbag Deplo ent Tool). Perform the operation in a place awa from electrical noise.**
- **When deplo ing the airbag, perform the operation at least 10 m (32.8 ft.) awa from the airbag.**
- **The front seat side airbag becomes extremel hot when the airbag is deplo ed, so do not touch it for at least 30 minutes after deplo ent.**
- **Use gloves and safet glasses when handling a front seat side airbag with a deplo ed airbag.**
- **Do not appl ater to a front seat side airbag with a deplo ed airbag.**
- **Alwa s wash our hands with water after completing the operation.**
- **An airbag or pretensioner ma be activated b static electricit To prevent this, be sure to touch a metal surface with bare hands to discharge static electricit before performing this procedure.**

1. DISPOSE OF FRONT SEAT SIDE AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

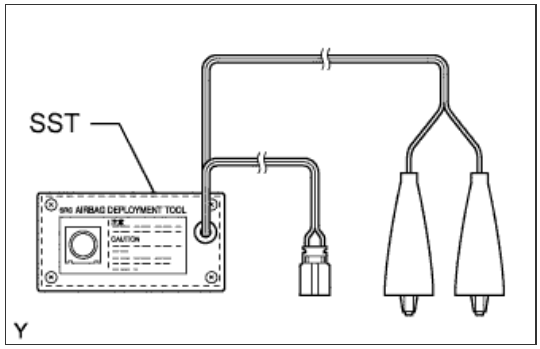

d. Remove the front seat (Click here).

HINT:

Keep the front seat in the cabin.

e. Install SST.

i. Disconnect the connector (yellow colored) from the front seat side airbag.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

ii. Connect SST connector to the front seat side airbag connector.

SST

09082-00700

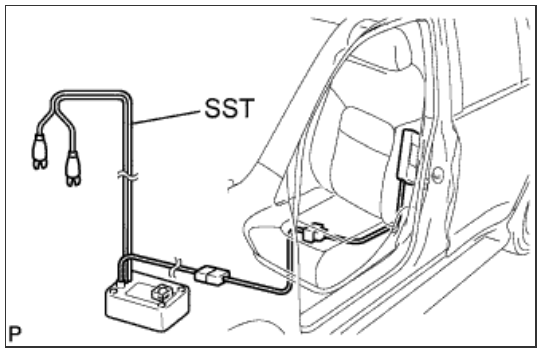

09082-00820

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

iii. Install the front seat (Click here).


iv. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

v. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

vi. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

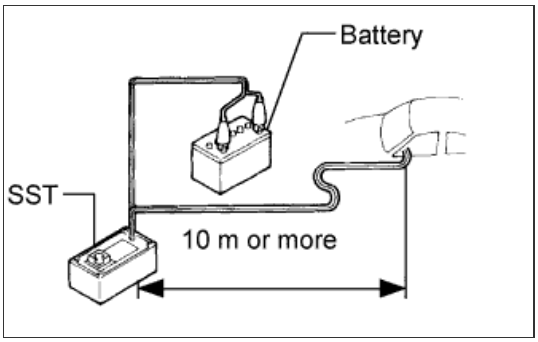

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deplo ing the airbag, make sure that no one is near the vehicle.**
- **The front seat side airbag becomes extremel bt when the airbag is deplo ed, so do not touch it for at least 30 minutes after deplo ent.**
- **Use gloves and safet glasses when handling a front seat side airbag with a deplo ed airbag.**
- **Do not appl ater to a front seat side airbag with a deplo ed airbag.**
- **Alwa s wash our hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF FRONT SEAT SIDE AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).


b. Remove the front seat side airbag.

i. Remove the front seat (Click here).

ii. Remove the 2 nuts and the front seat side airbag from the seatback.


CAUTION:

- **When removing the front seat side airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) batter terminal before starting work.**
- **When storing the front seat side airbag, keep the airbag deplo ent side facing upward.**

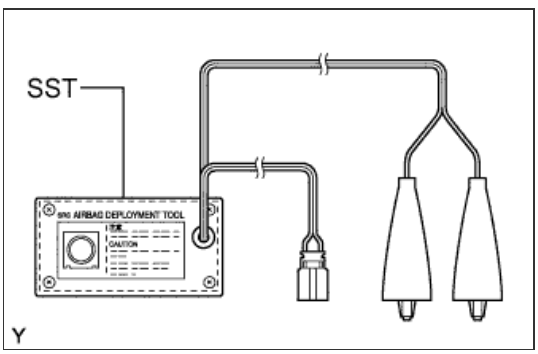

c. Using a service-purpose wire harness for the vehicle, tie down the front seat side airbag to a tire.

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2}) or more

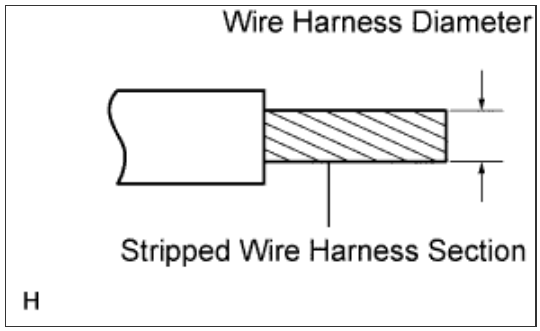

HINT:


To calculate the cross-sectional area of the stripped wire harness section:

Cross-sectional area 3.1 (Diameter)^2 divided by


CAUTION:

If the wire harness is too thin or an alternative ob ect is used to tie down the front seat side airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 in.^{2}).

i. Install the 2 nuts to the front seat side airbag.

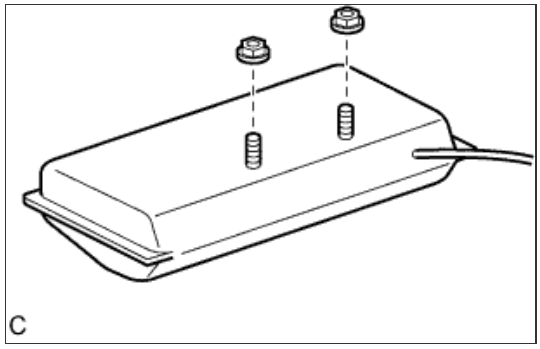


ii. Wind the wire harness around the stud bolts of the front seat side airbag as shown in the illustration.

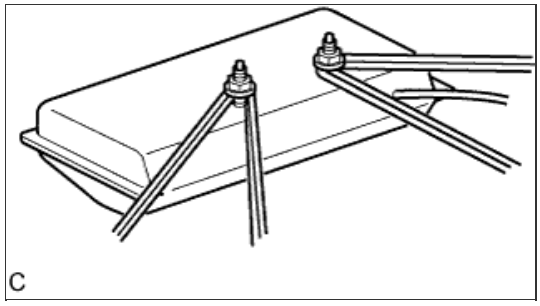

iii. Position the front seat side airbag inside a tire.

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

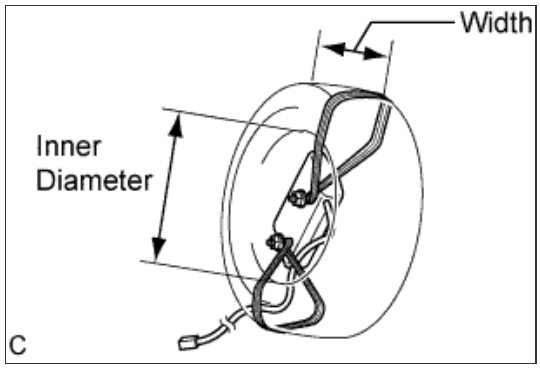

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the front seat side airbag ma become loose due to the shock when the airbag is deplo ed.**
- **Alwa s tie down the front seat side airbag with the airbag deplo ent direction facing inside the tire.**


NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.


d. Install SST.

i. Connect SST connector to the front seat side airbag connector.

SST
09082-00820

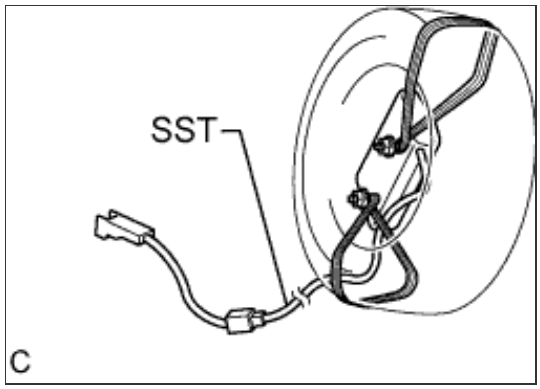

e. Place tires.

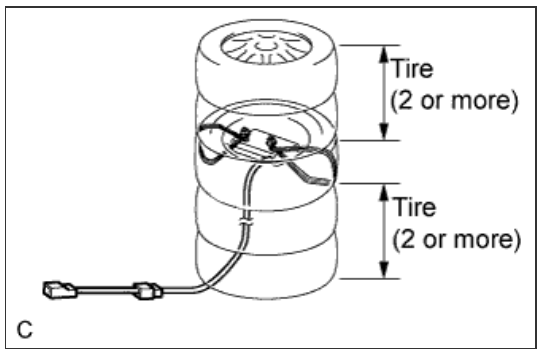


i. Place at least 2 tires under the tire which the front seat side airbag is tied to.

ii. Place at least 2 tires over the tire which the front seat side airbag is tied to. The top tire should have a disc wheel installed.

NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away**

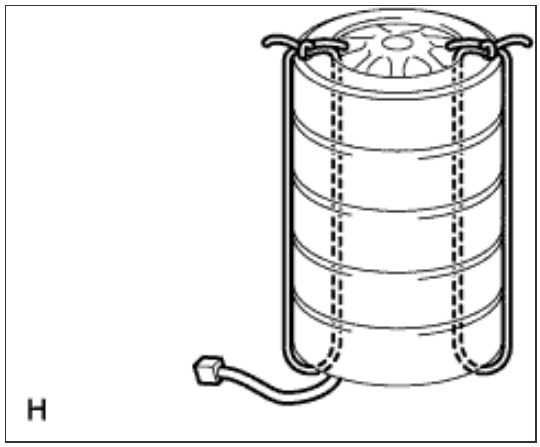


iii. Tie the tires together with 2 wire harnesses.

CAUTION:

Make sure that the wire harnesses are tight. Looseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

f. Install SST.

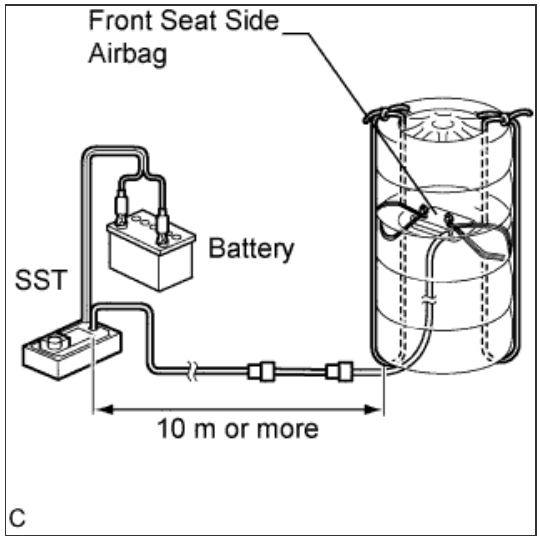

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the front seat side airbag is tied to.

iii. Press SST activation switch to deploy the airbag.


CAUTION:

When deploying the airbag, make sure that no one is near the tire.

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the front seat side airbag.

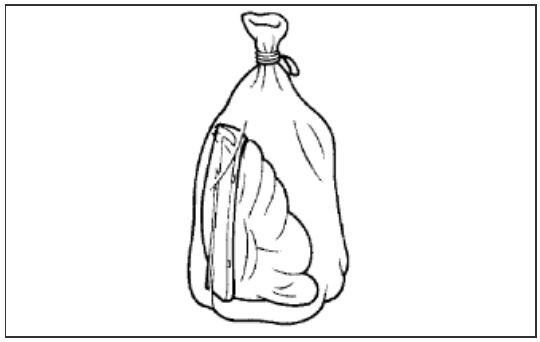


CAUTION:


- **The front seat side airbag becomes extremel bt when the airbag is deplo ed, so do not touch it for at least 30 minutes after deplo ent.**
- **Use gloves and safet glasses when handling a front seat side airbag with a deplo ed airbag.**
- **Do not appl ater to a front seat side airbag with a deplo ed airbag.**
- **Alwa s wash our hands with water after completing the operation.**

i. Remove the front seat side airbag from the tire.

ii. Place the front seat side airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

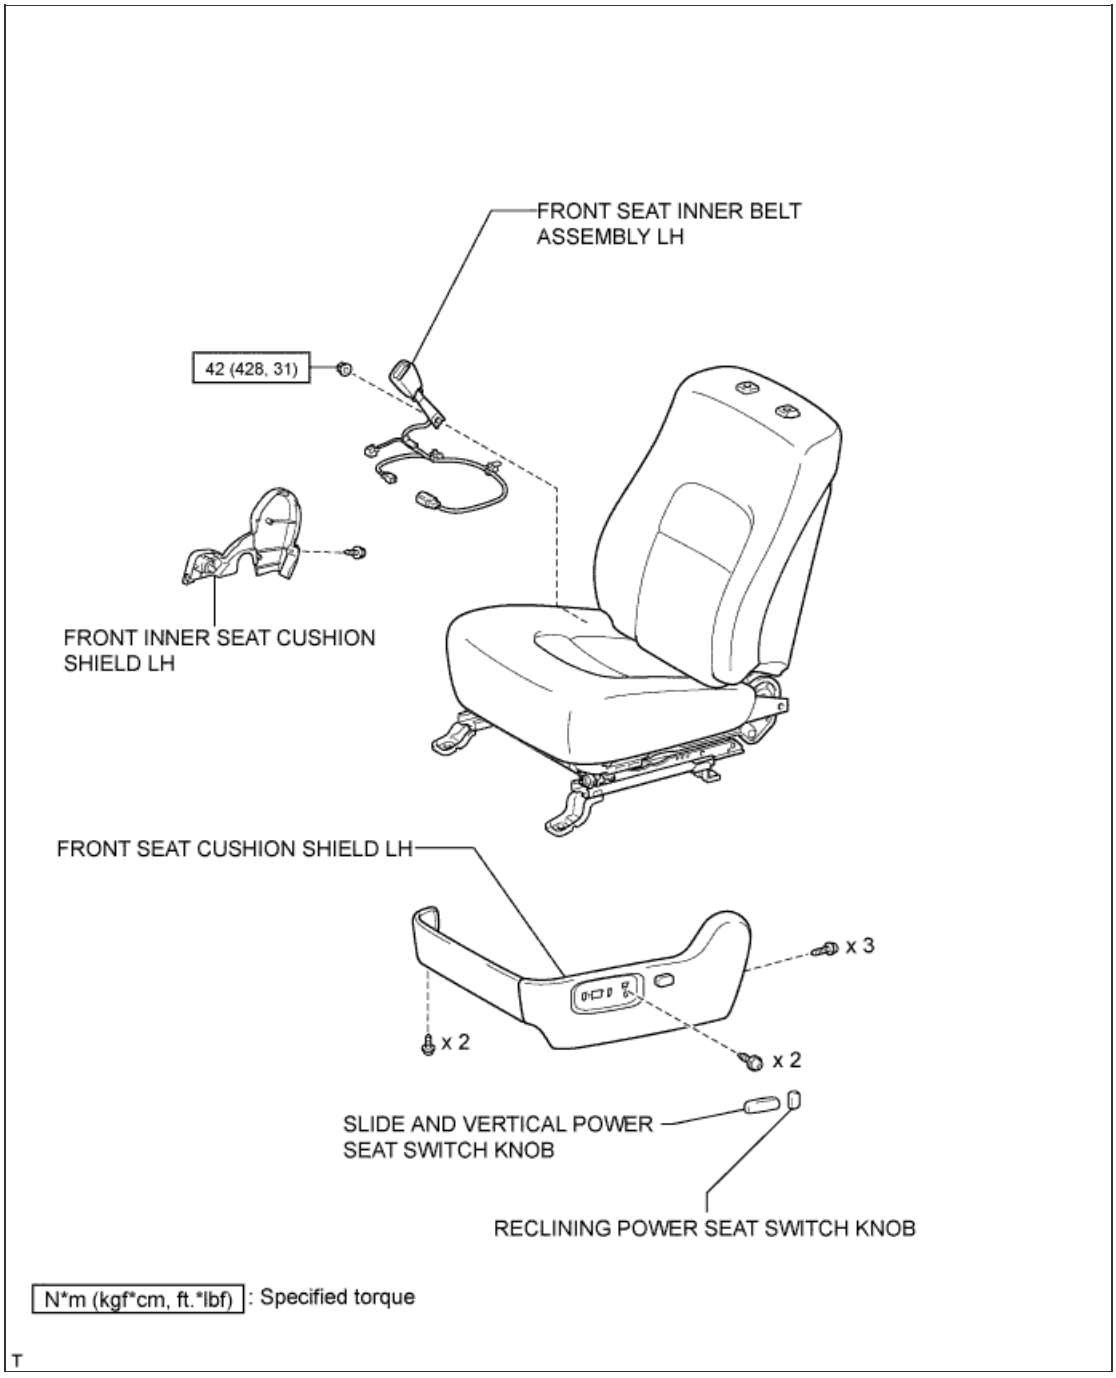

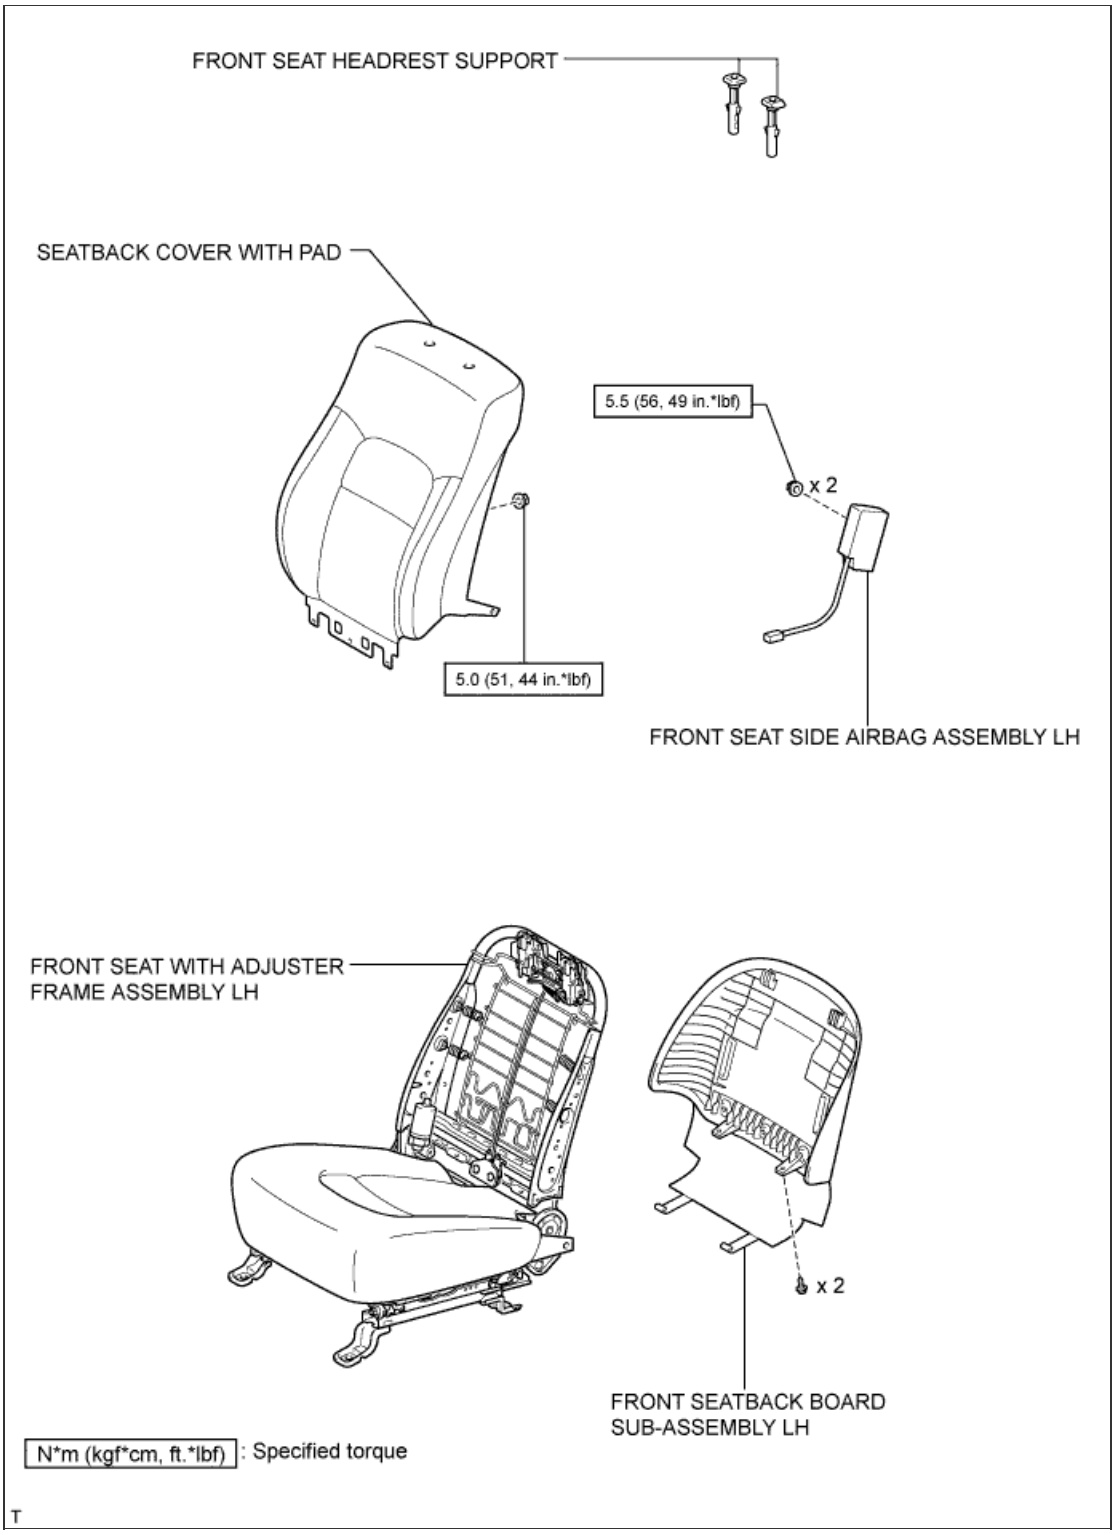

FRONT SEAT HEADREST SUPPORT
SEATBACK COVER WITH PAD
5.5 (56, 49 in.*lbf)
x 2
5.0 (51, 44 in.*lbf)
FRONT SEAT SIDE AIRBAG ASSEMBLY LH
FRONT SEAT WITH ADJUSTER FRAME ASSEMBLY LH
x 2
FRONT SEATBACK BOARD SUB-ASSEMBLY LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T

for Preparation Click here

1. CHECK FRONT SEAT SIDE AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

b. With the front seat side airbag installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front seat with a new one: Cuts, minute cracks or marked discoloration on the front seatback around the front seat side airbag.

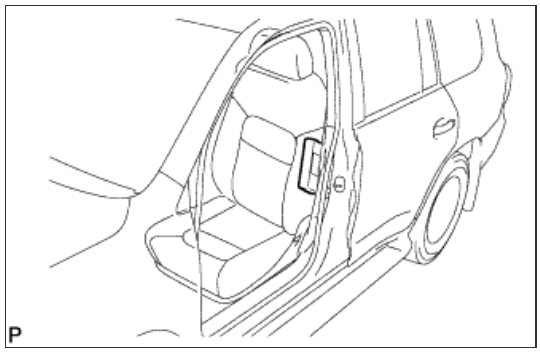


2. CHECK FRONT SEAT SIDE AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

a. Perform a diagnostic system check (Click here).

b. With the front seat side airbag removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front seat side airbag with a new one:

- Cuts, minute cracks or marked discoloration on the front seat side airbag.
- Cracks or other damage to the wire harness or connector.

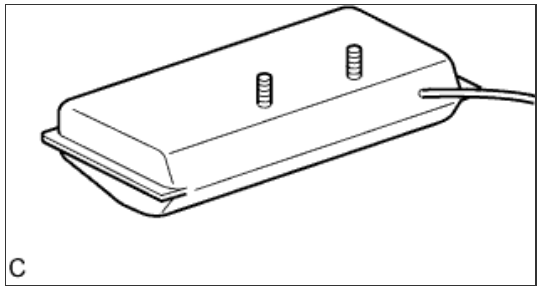

NOTICE:


For removal and installation procedures of the front seat side airbag, be sure to follow the correct procedure.

for Preparation Click here

1. CHECK FRONT SEAT SIDE AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

b. With the front seat side airbag installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front seat with a new one: Cuts, minute cracks or marked discoloration on the front seatback around the front seat side airbag.

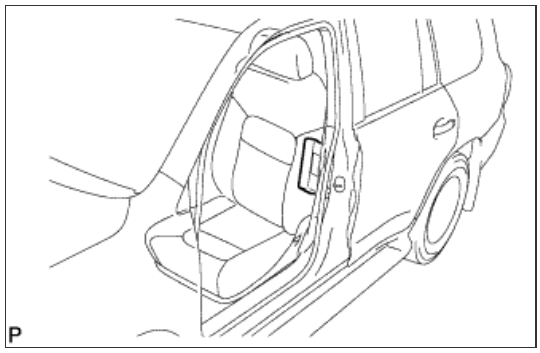


2. CHECK FRONT SEAT SIDE AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

a. Perform a diagnostic system check (Click here).

b. With the front seat side airbag removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front seat side airbag with a new one:

- Cuts, minute cracks or marked discoloration on the front seat side airbag.
- Cracks or other damage to the wire harness or connector.

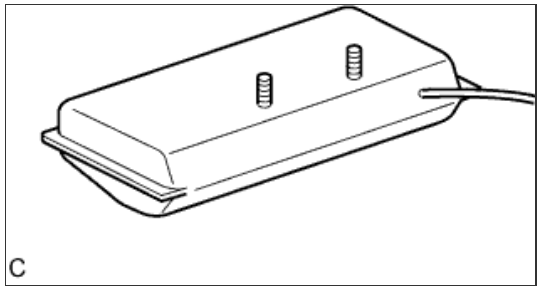

NOTICE:

For removal and installation procedures of the front seat side airbag, be sure to follow the correct procedure.

FRONT SEAT SIDE AIRBAG ASSEMBLY (for Power Seat) > REMOVAL

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly LH (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

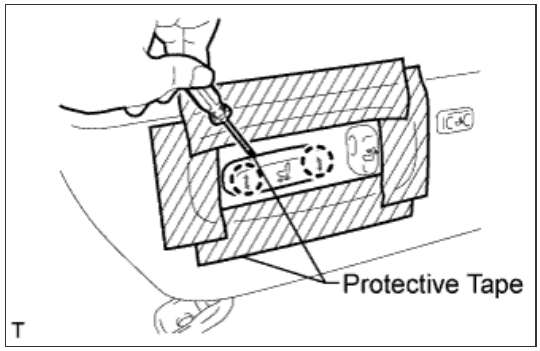


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

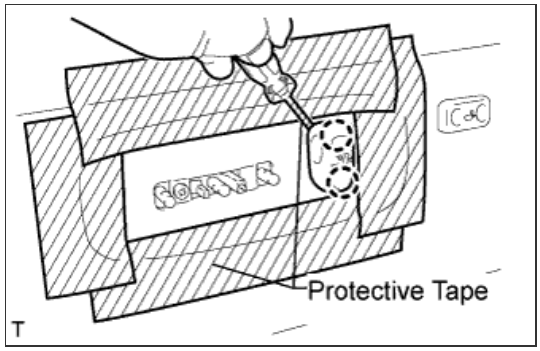

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

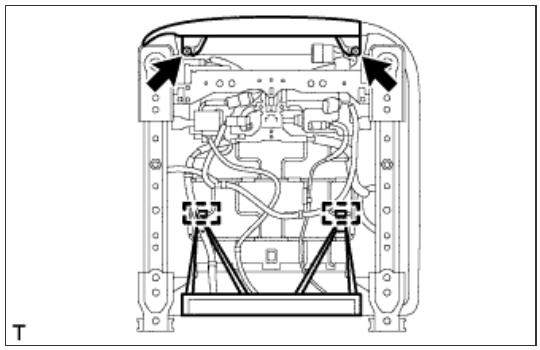

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side:
Disconnect the power seat lumbar switch connectors.

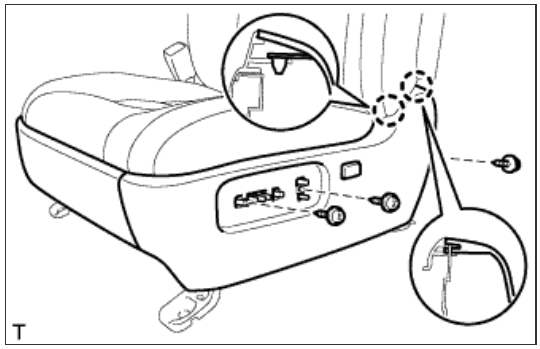

5. REMOVE FRONT INNER NO. 1 SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the claw and remove the cushion shield.

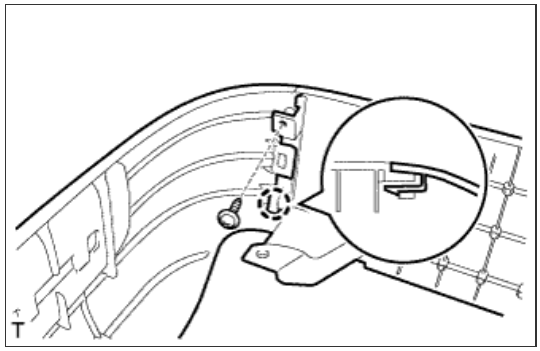

6. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

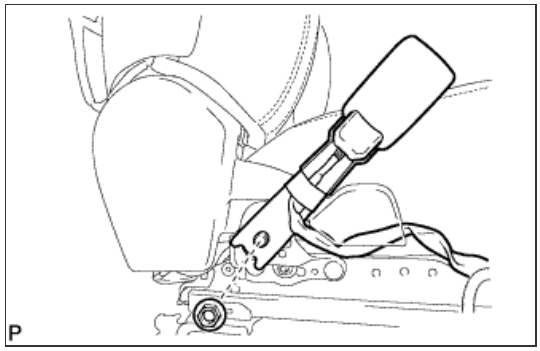

7. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the 2 claws and clip, and then remove the cushion shield.

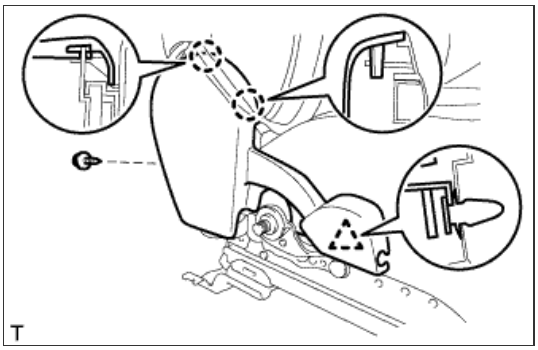

8. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

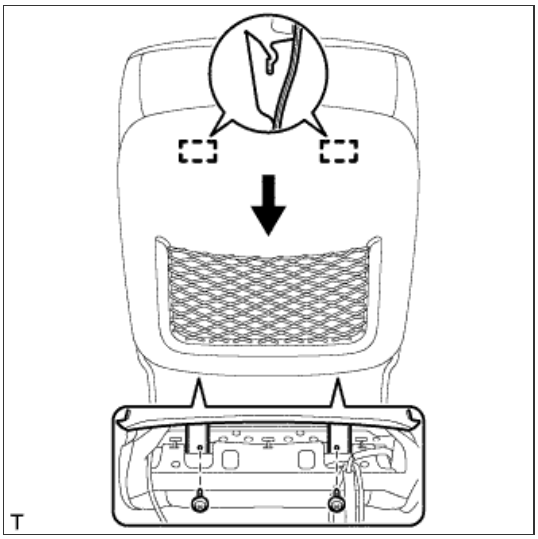


9. REMOVE FRONT SEAT HEADREST SUPPORT

a. Using a screwdriver, detach the 4 claws and remove the 2 headrest supports.

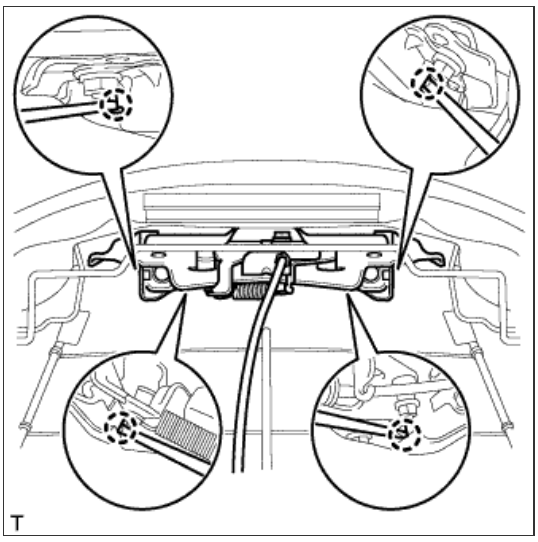


10. REMOVE SEATBACK COVER WITH PAD

a. Remove the 3 hog rings and detach the 9 hooks.

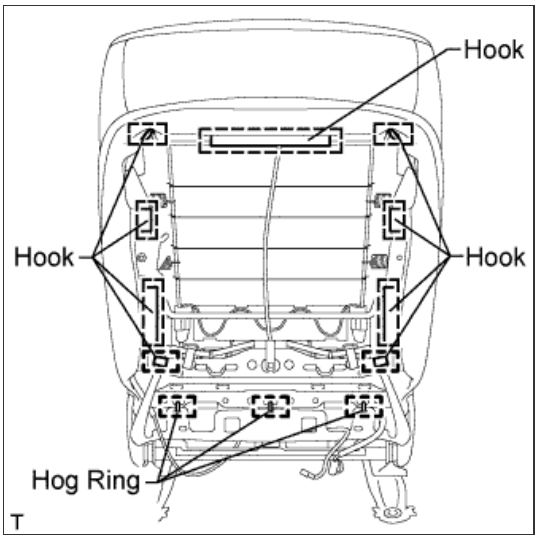


b. Remove the nut and seatback cover bracket from the seat frame.

c. Remove the seatback cover with pad.

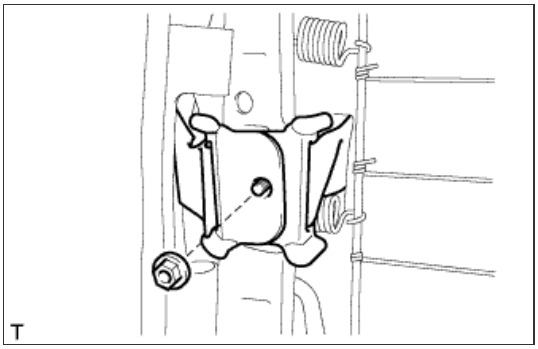

11. REMOVE FRONT SEAT SIDE AIRBAG ASSEMBLY LH

a. Detach the 5 clamps and disconnect the wire harness.

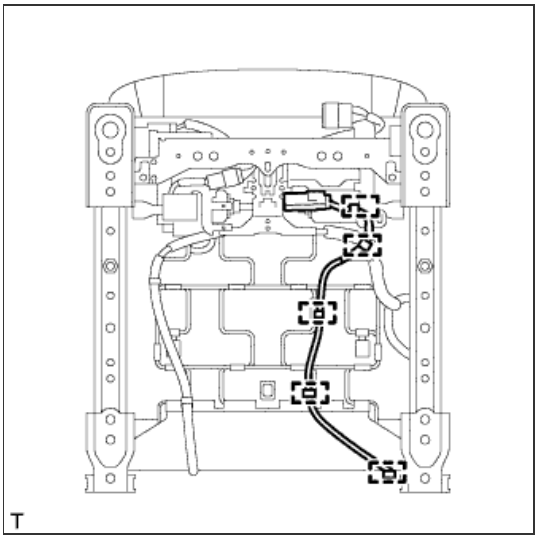


b. Detach the 2 clamps and disconnect the wire harness.

c. Remove the 2 nuts and front seat side airbag assembly LH.

CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.

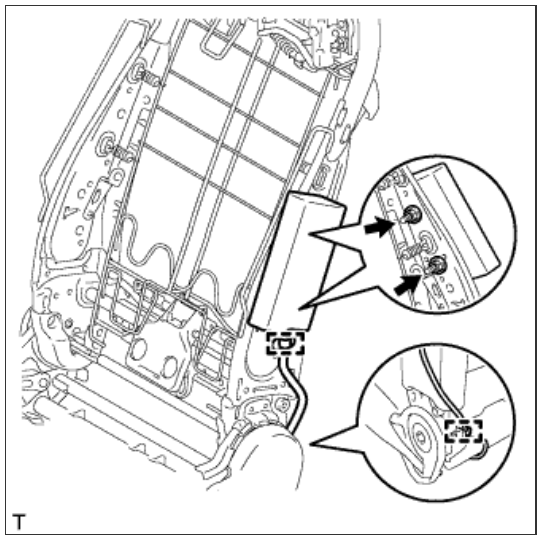
T

FRONT SEAT SIDE AIRBAG ASSEMBLY (for Power Seat) > REMOVAL

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly LH (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

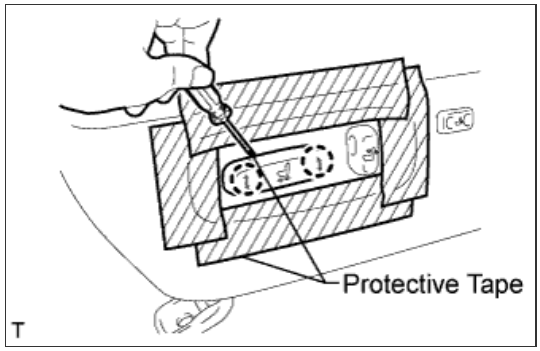


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

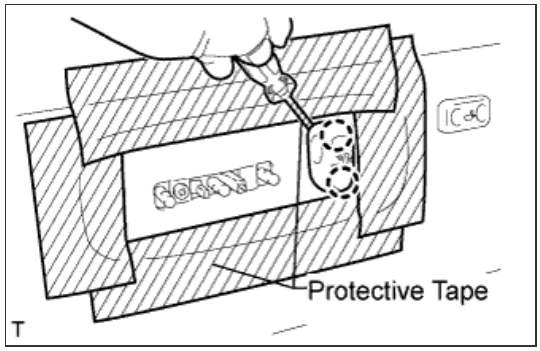

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

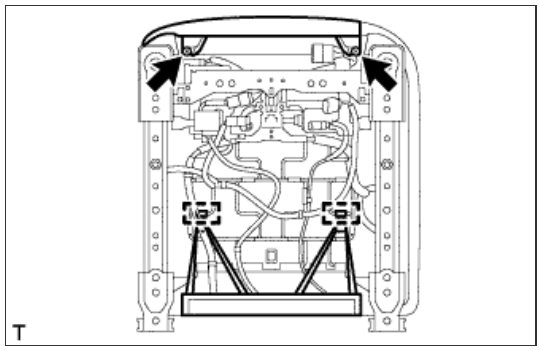

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side:
Disconnect the power seat lumbar switch connectors.

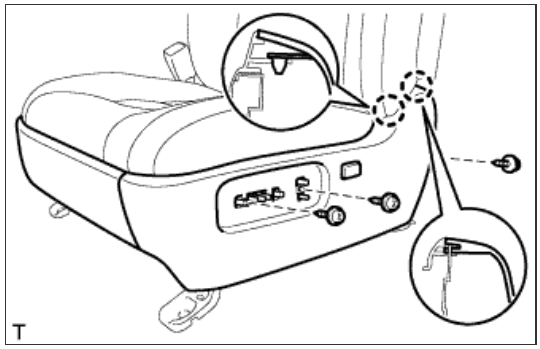

5. REMOVE FRONT INNER NO. 1 SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the claw and remove the cushion shield.

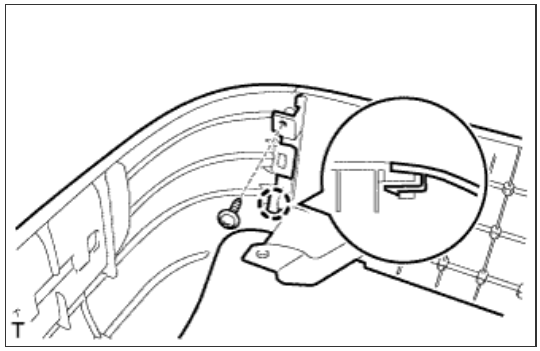

6. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

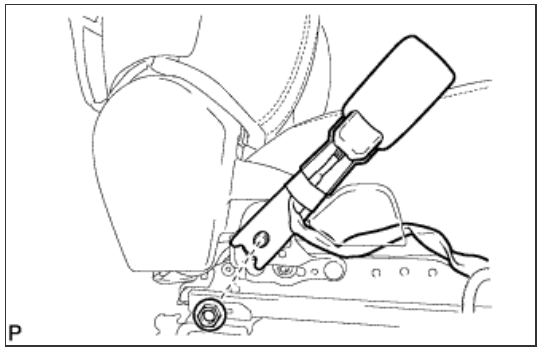

7. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the 2 claws and clip, and then remove the cushion shield.

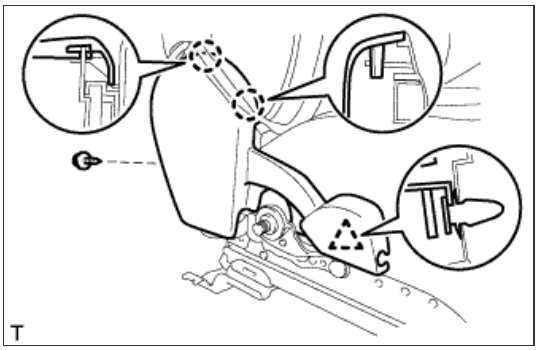

8. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

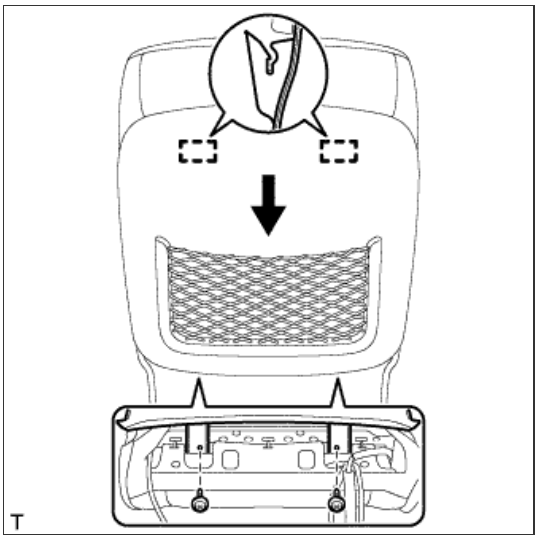


9. REMOVE FRONT SEAT HEADREST SUPPORT

a. Using a screwdriver, detach the 4 claws and remove the 2 headrest supports.

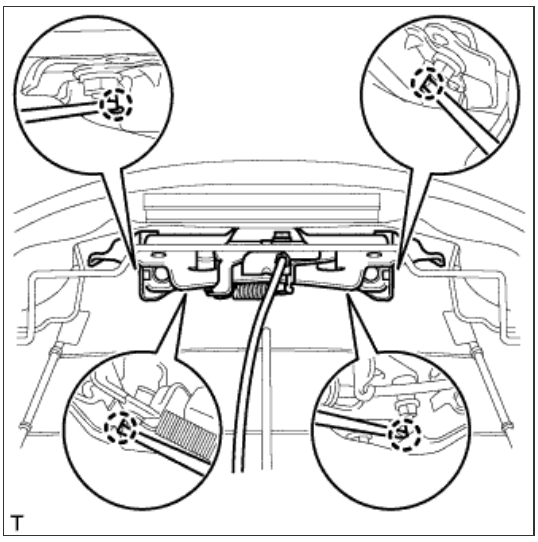


10. REMOVE SEATBACK COVER WITH PAD

a. Remove the 3 hog rings and detach the 9 hooks.

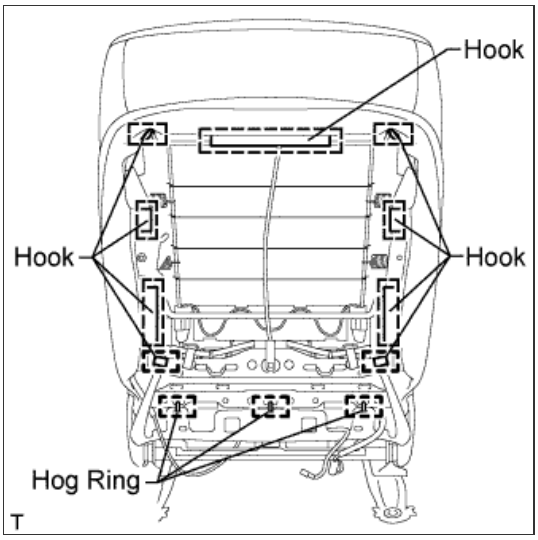


b. Remove the nut and seatback cover bracket from the seat frame.

c. Remove the seatback cover with pad.

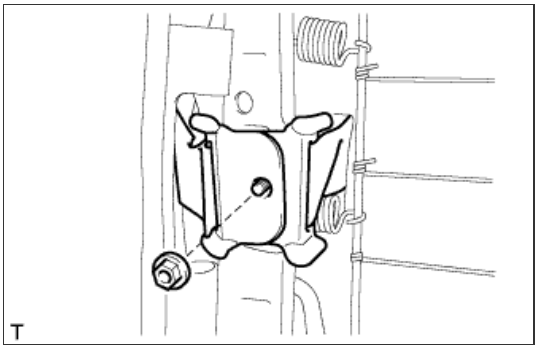

11. REMOVE FRONT SEAT SIDE AIRBAG ASSEMBLY LH

a. Detach the 5 clamps and disconnect the wire harness.

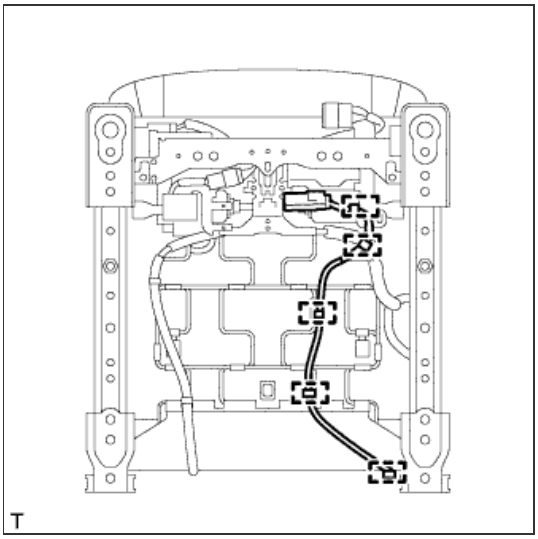


b. Detach the 2 clamps and disconnect the wire harness.

c. Remove the 2 nuts and front seat side airbag assembly LH.

CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.

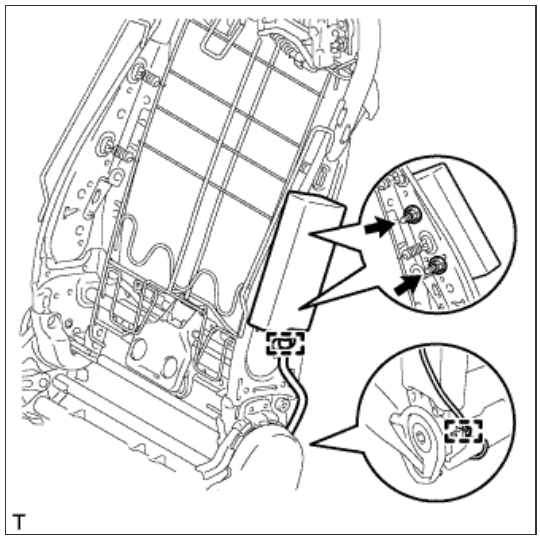
T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT SIDE AIRBAG ASSEMBLY LH


CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.


a. Install the front seat side airbag assembly with nuts.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

b. Attach the clamps to connect the wire harness.

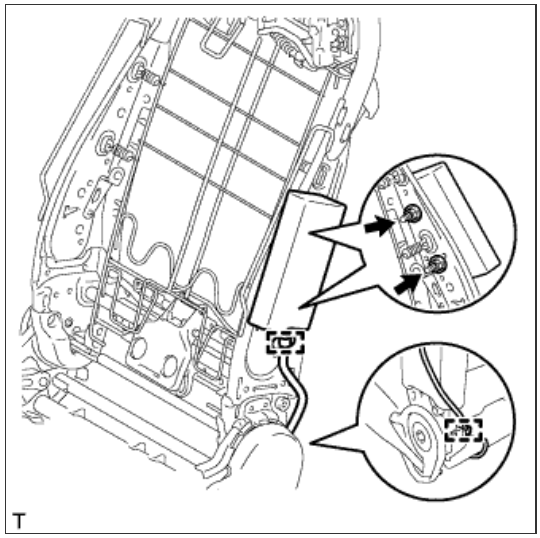

c. Attach the 5 clamps to connect the wire harness.

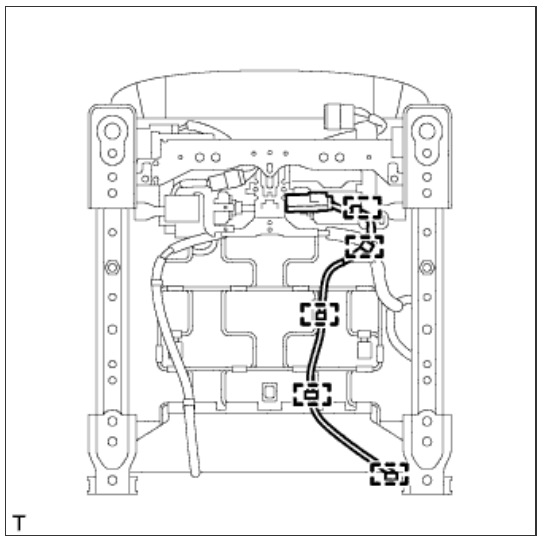

2. INSTALL SEATBAC COVER ITH PAD


a. Install the seatback cover with pad to the seatback frame.

b. Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

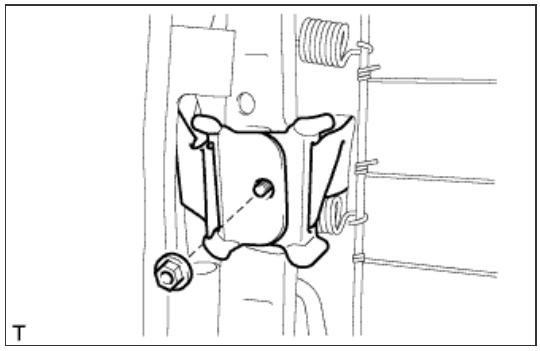

c. Attach the 9 hooks.

d. Using hog ring pliers, install 3 new hog rings to the seat frame.

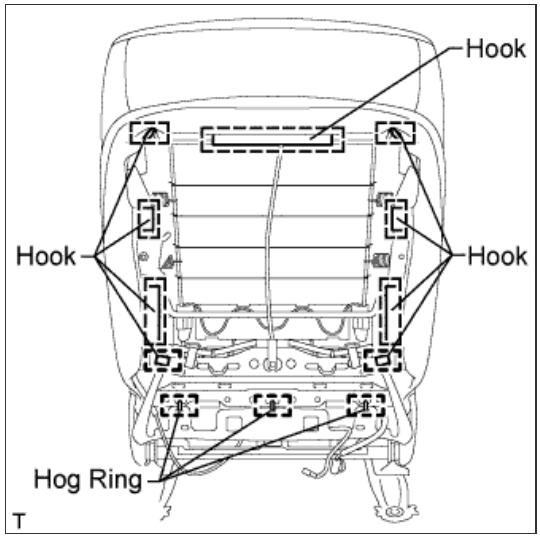


3. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the 4 claws to install the headrest supports.

4. INSTALL FRONT SEATBAC BOARD SUB-ASSEMBLY LH

a. Move the seatback board in the direction of the arrow to attach the hooks and install the seatback board.


b. Install the screws.

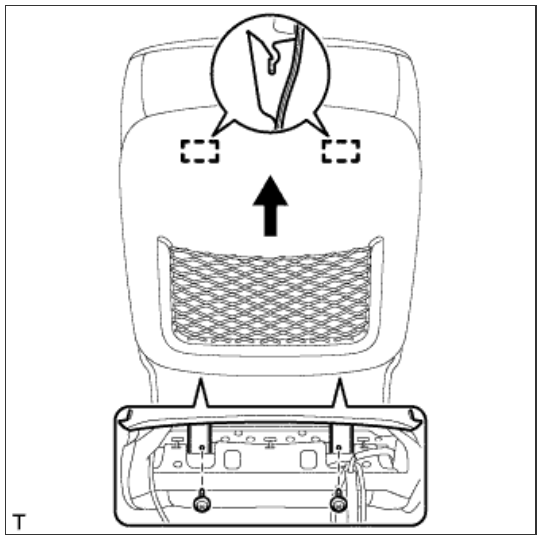

5. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the claws and clip to install the cushion shield.

b. Install the screw.

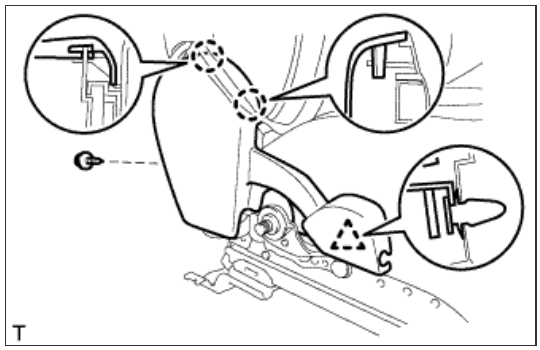

6. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.


b. Connect the connectors and attach the clamps.

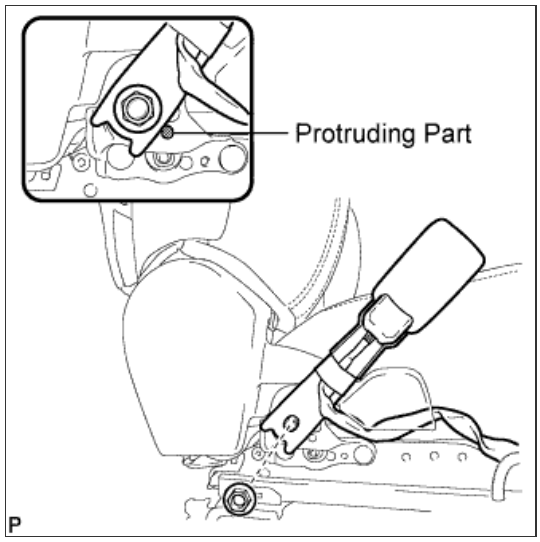

7. INSTALL FRONT INNER NO. 1 SEAT CUSHION SHIELD LH

a. Attach the claw to install the cushion shield.

b. Install the screw.

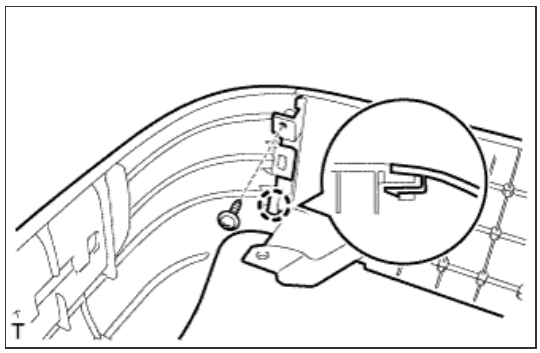


8. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


b. Attach the claws to install the cushion shield.

c. Install the 3 screws.

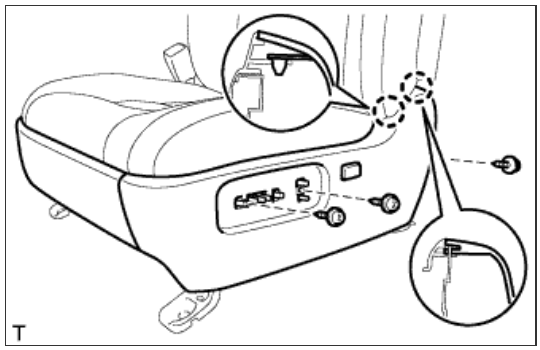


d. Install the screws.

e. Attach the rubber bands to the hooks.

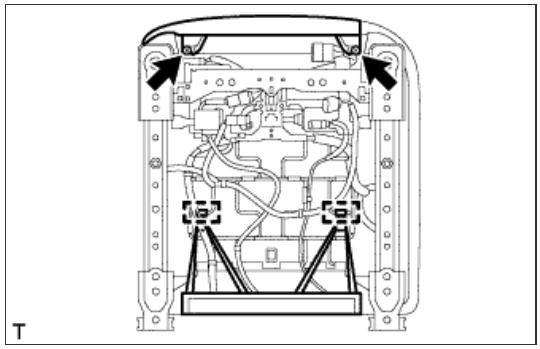


9. INSTALL RECLINING PO ER SEAT S ITCH NOB

a. Attach the claws to install the knob.

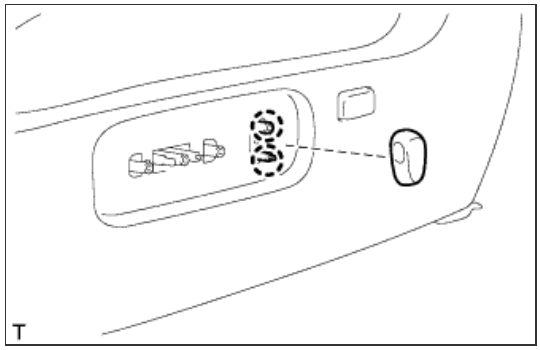

10. INSTALL SLIDE AND VERTICAL PO ER SEAT S ITCH NOB

a. Attach the claws to install the knob.

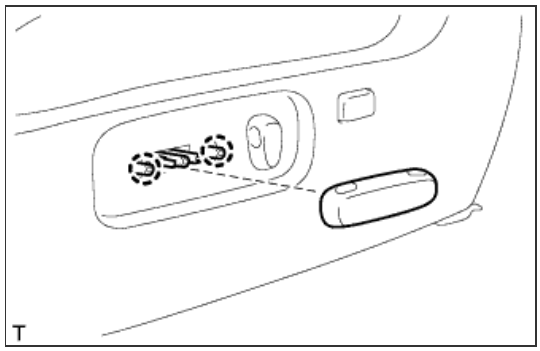

11. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly LH (Click here).

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT SIDE AIRBAG ASSEMBLY LH


CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.


a. Install the front seat side airbag assembly with nuts.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

b. Attach the clamps to connect the wire harness.

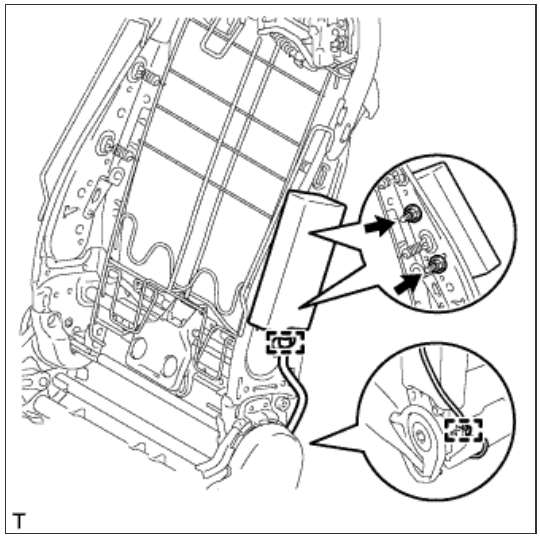

c. Attach the 5 clamps to connect the wire harness.

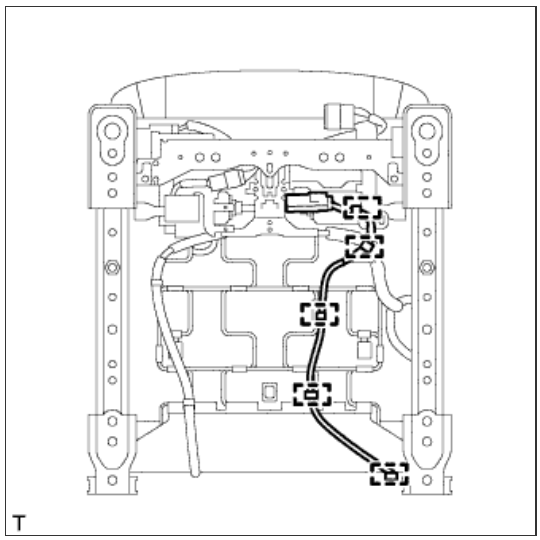

2. INSTALL SEATBAC COVER ITH PAD


a. Install the seatback cover with pad to the seatback frame.

b. Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

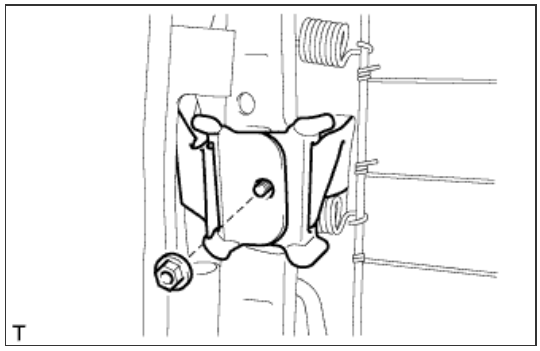

c. Attach the 9 hooks.

d. Using hog ring pliers, install 3 new hog rings to the seat frame.

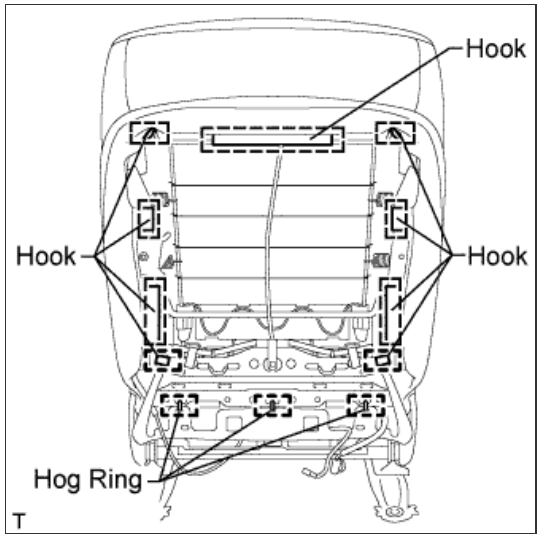


3. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the 4 claws to install the headrest supports.

4. INSTALL FRONT SEATBAC BOARD SUB-ASSEMBLY LH

a. Move the seatback board in the direction of the arrow to attach the hooks and install the seatback board.


b. Install the screws.

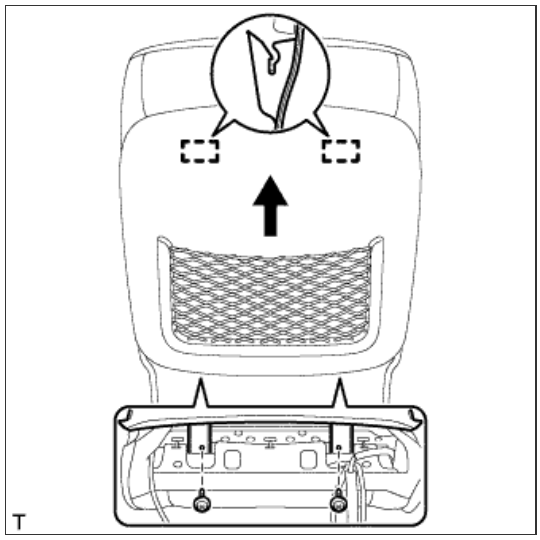

5. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the claws and clip to install the cushion shield.

b. Install the screw.

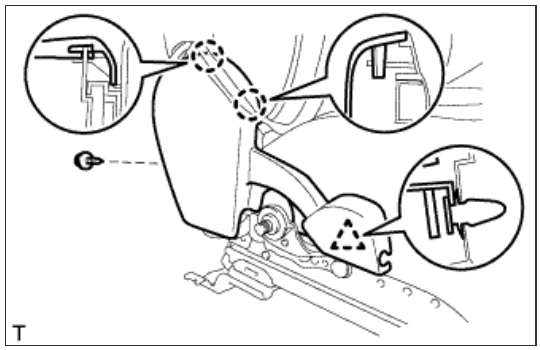

6. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.


b. Connect the connectors and attach the clamps.

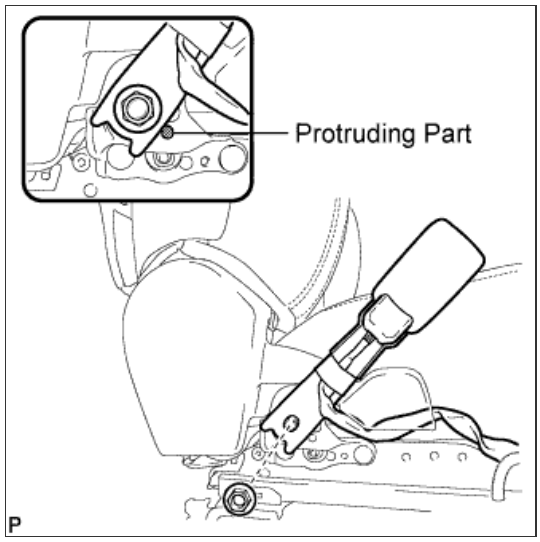

7. INSTALL FRONT INNER NO. 1 SEAT CUSHION SHIELD LH

a. Attach the claw to install the cushion shield.

b. Install the screw.

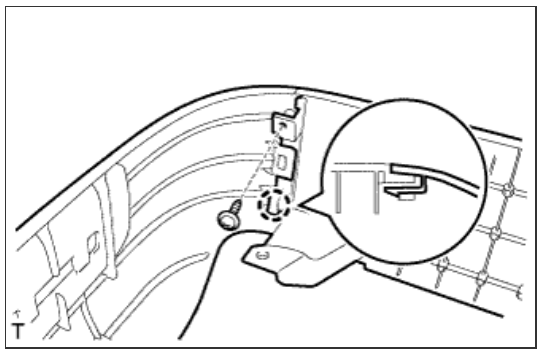


8. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


b. Attach the claws to install the cushion shield.

c. Install the 3 screws.

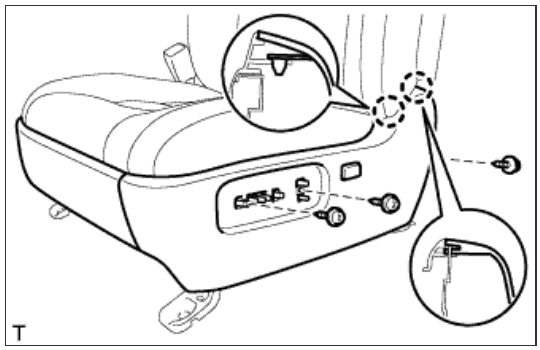


d. Install the screws.

e. Attach the rubber bands to the hooks.

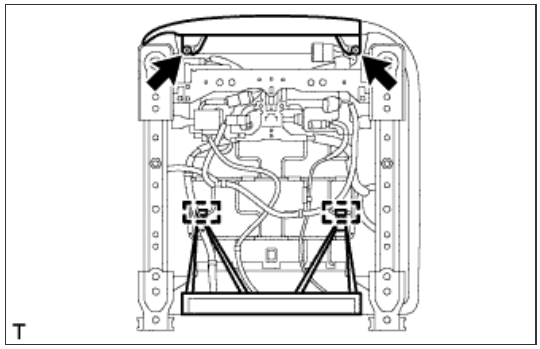


9. INSTALL RECLINING PO ER SEAT S ITCH NOB

a. Attach the claws to install the knob.

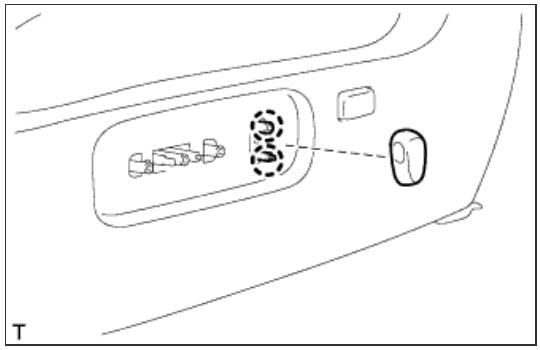

10. INSTALL SLIDE AND VERTICAL PO ER SEAT S ITCH NOB

a. Attach the claws to install the knob.

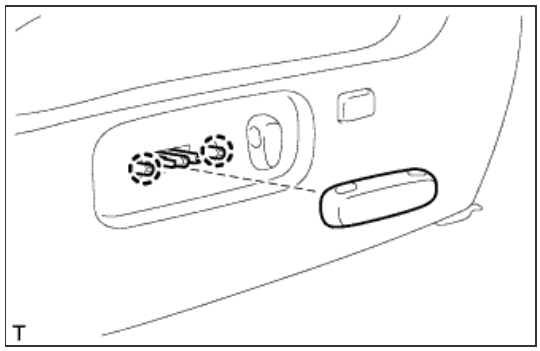

11. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly LH (Click here).

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a front seat side airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the airbag.**
- **The front seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front seat side airbag with a deployed airbag.**
- **Do not apply water to a front seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF FRONT SEAT SIDE AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

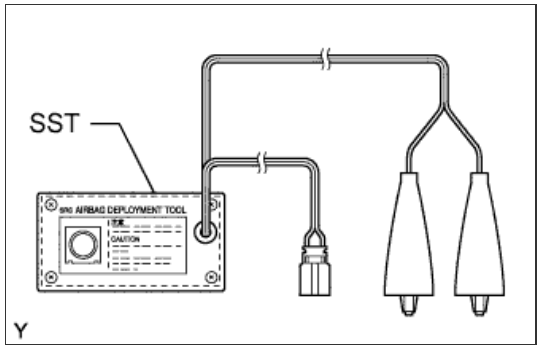

d. Remove the front seat (Click here).

HINT:

Keep the front seat in the cabin.

e. Install SST.

i. Disconnect the connector (yellow colored) from the front seat side airbag.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

ii. Connect SST connector to the front seat side airbag connector.

SST

09082-00700

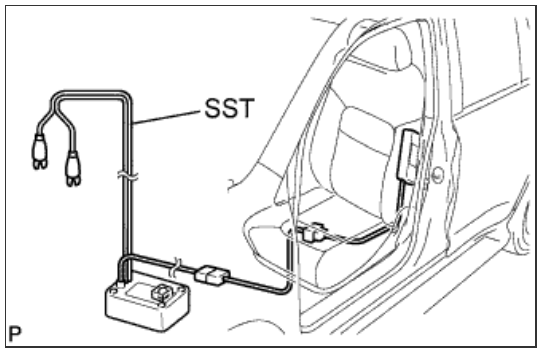

09082-00820

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

iii. Install the front seat (Click here).


iv. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

v. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

vi. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

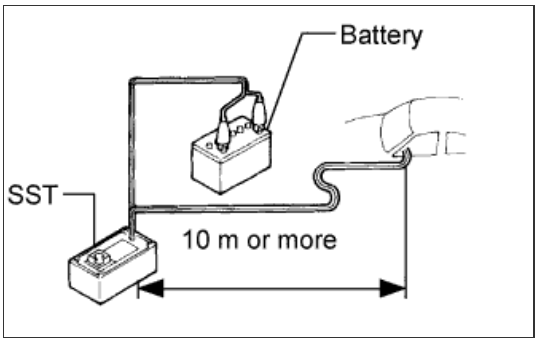

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The front seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front seat side airbag with a deployed airbag.**
- **Do not apply water to a front seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF FRONT SEAT SIDE AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Remove the front seat side airbag.

i. Remove the front seat (Click here).

ii. Remove the 2 nuts and the front seat side airbag from the seatback.

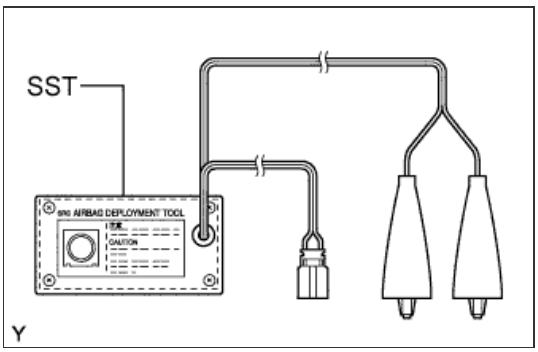


CAUTION:

- **When removing the front seat side airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the front seat side airbag, keep the airbag deployment side facing upward.**

c. Using a service-purpose wire harness for the vehicle, tie down the front seat side airbag to a tire.

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2}) or more

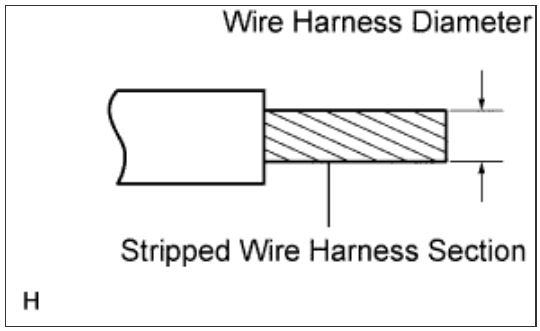

HINT:


To calculate the cross-sectional area of the stripped wire harness section:

Cross-sectional area 3.14 (Diameter)^2 divided by 4


CAUTION:

If the wire harness is too thin or an alternative ob ect is used to tie down the front seat side airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 in.^{2}).

i. Install the 2 nuts to the front seat side airbag.

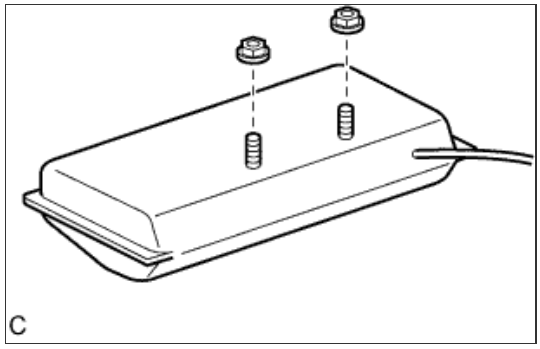


ii. Wind the wire harness around the stud bolts of the front seat side airbag as shown in the illustration.

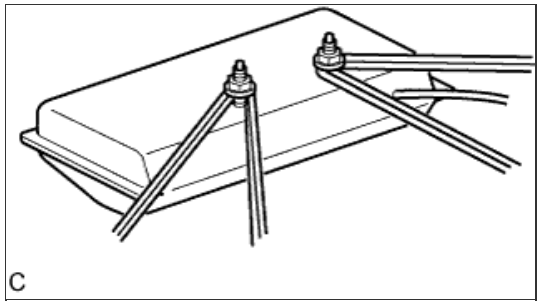

iii. Position the front seat side airbag inside a tire.

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

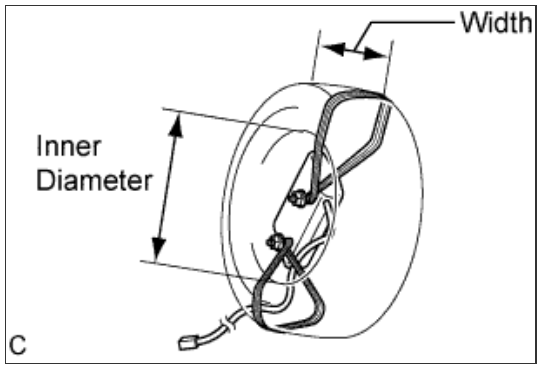

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the front seat side airbag may become loose due to the shock when the airbag is deployed.**
- **Always tie down the front seat side airbag with the airbag deployment direction facing inside the tire.**


NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.


d. Install SST.

i. Connect SST connector to the front seat side airbag connector.

SST
09082-00820

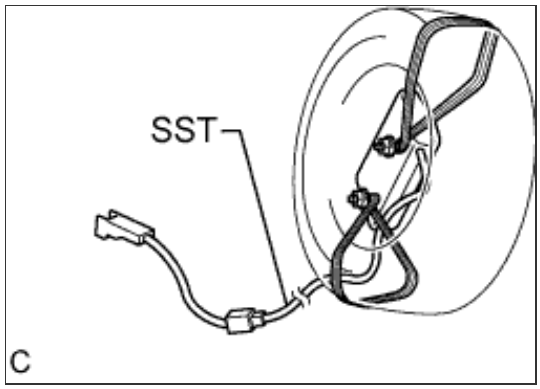

e. Place tires.

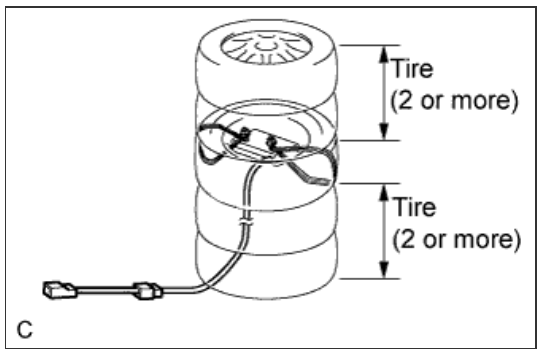

i. Place at least 2 tires under the tire which the front seat side airbag is tied to.

ii. Place at least 2 tires over the tire which the front seat side airbag is tied to. The top tire should have a disc wheel installed.


NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**


iii. Tie the tires together with 2 wire harnesses.

CAUTION:

Make sure that the wire harnesses are tight. ooseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

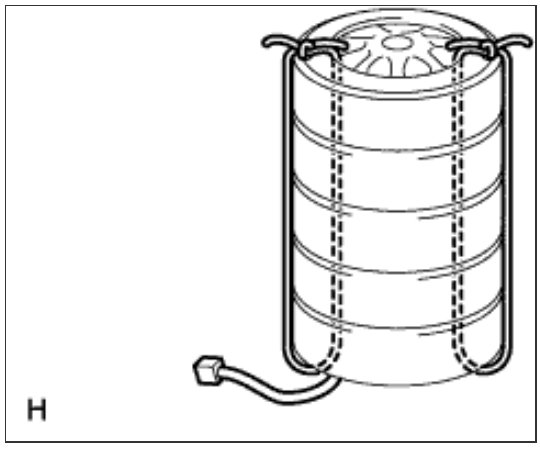

f. Install SST.

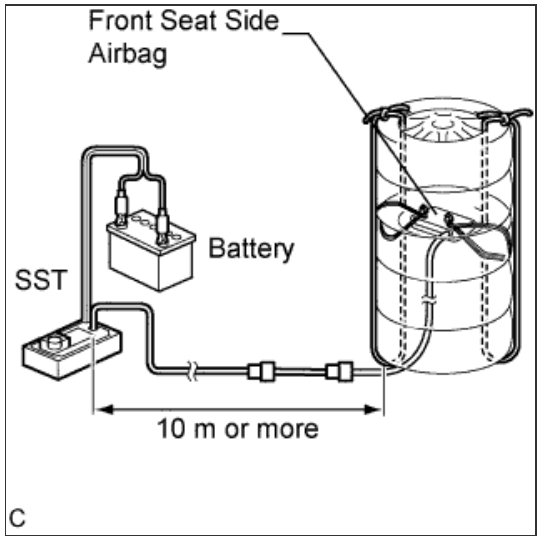

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the front seat side airbag is tied to.

iii. Press SST activation switch to deploy the airbag.


CAUTION:

When deploying the airbag, make sure that no one is near the tire.

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the front seat side airbag.

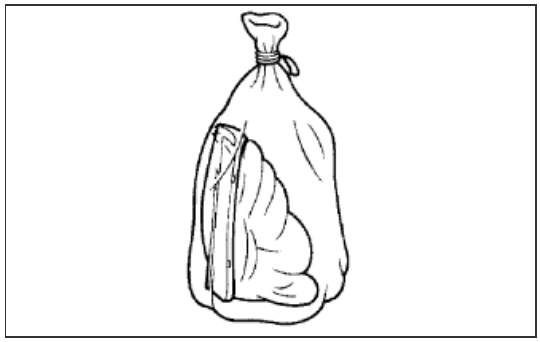

CAUTION:

- **The front seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front seat side airbag with a deployed airbag.**
- **Do not apply water to a front seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

i. Remove the front seat side airbag from the tire.

ii. Place the front seat side airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR..

CAUTION:

- **Never dispose of a front seat side airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the airbag.**
- **The front seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front seat side airbag with a deployed airbag.**
- **Do not apply water to a front seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF FRONT SEAT SIDE AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

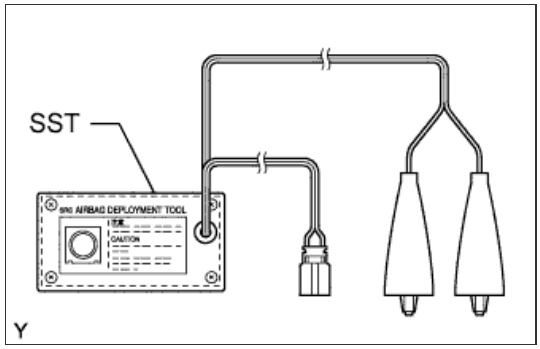

d. Remove the front seat (Click here).

HINT:

Keep the front seat in the cabin.

e. Install SST.

i. Disconnect the connector (yellow colored) from the front seat side airbag.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

ii. Connect SST connector to the front seat side airbag connector.

SST

09082-00700

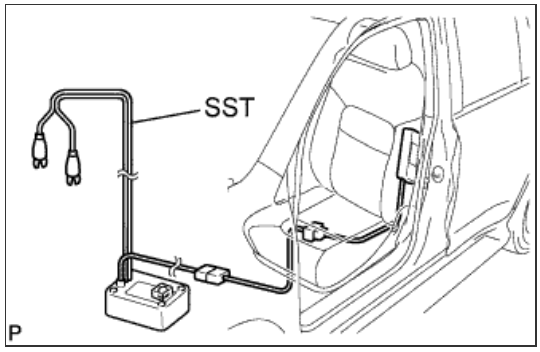

09082-00820

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

iii. Install the front seat (Click here).


iv. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

v. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

vi. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

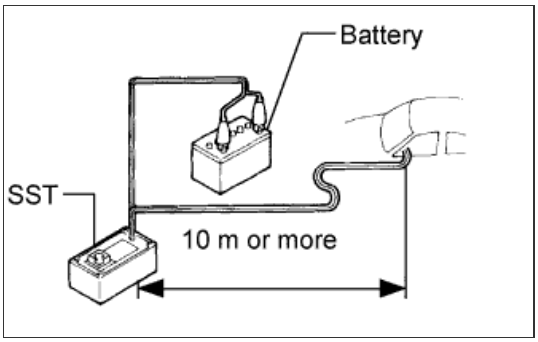

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The front seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front seat side airbag with a deployed airbag.**
- **Do not apply water to a front seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF FRONT SEAT SIDE AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Remove the front seat side airbag.

i. Remove the front seat (Click here).

ii. Remove the 2 nuts and the front seat side airbag from the seatback.

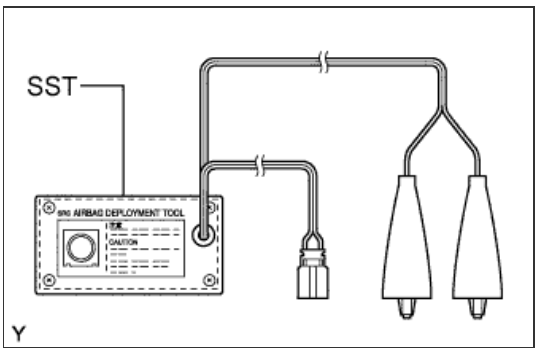


CAUTION:

- **When removing the front seat side airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the front seat side airbag, keep the airbag deployment side facing upward.**

c. Using a service-purpose wire harness for the vehicle, tie down the front seat side airbag to a tire.

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2}) or more

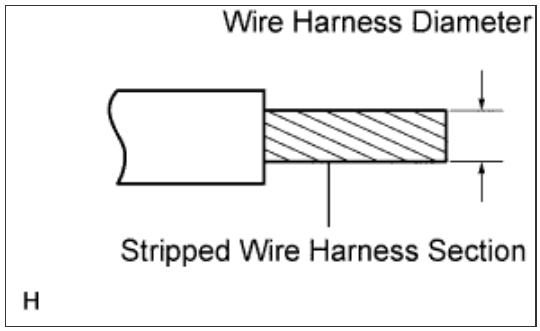

HINT:


To calculate the cross-sectional area of the stripped wire harness section:

Cross-sectional area 3.14 (Diameter)^2 divided by 4


CAUTION:

If the wire harness is too thin or an alternative ob ect is used to tie down the front seat side airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 in.^{2}).

i. Install the 2 nuts to the front seat side airbag.

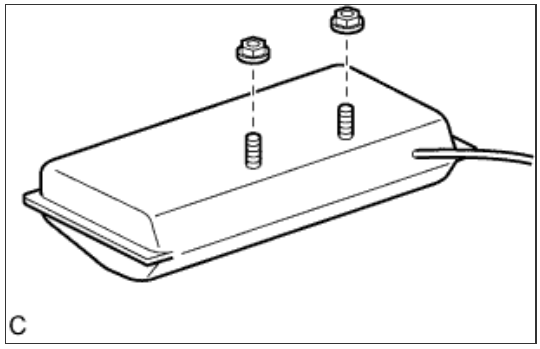


ii. Wind the wire harness around the stud bolts of the front seat side airbag as shown in the illustration.

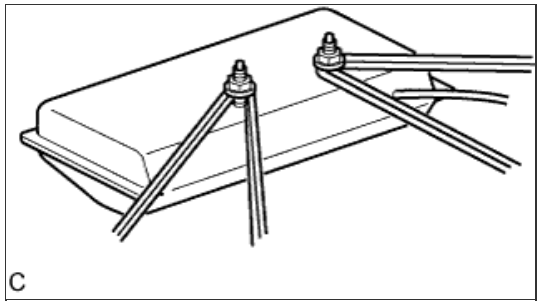

iii. Position the front seat side airbag inside a tire.

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

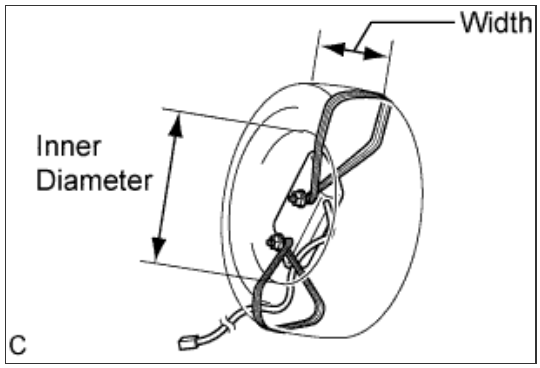

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the front seat side airbag may become loose due to the shock when the airbag is deployed.**
- **Always tie down the front seat side airbag with the airbag deployment direction facing inside the tire.**


NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.


d. Install SST.

i. Connect SST connector to the front seat side airbag connector.

SST
09082-00820

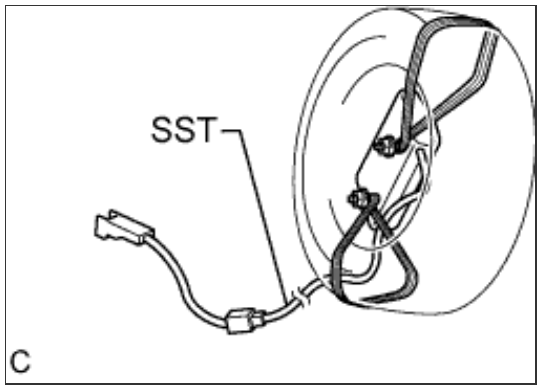

e. Place tires.

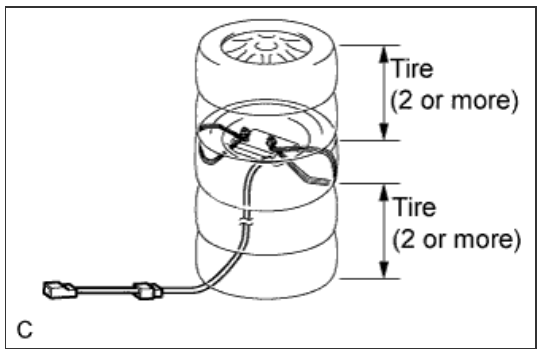

i. Place at least 2 tires under the tire which the front seat side airbag is tied to.

ii. Place at least 2 tires over the tire which the front seat side airbag is tied to. The top tire should have a disc wheel installed.


NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**


iii. Tie the tires together with 2 wire harnesses.

CAUTION:

Make sure that the wire harnesses are tight. ooseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

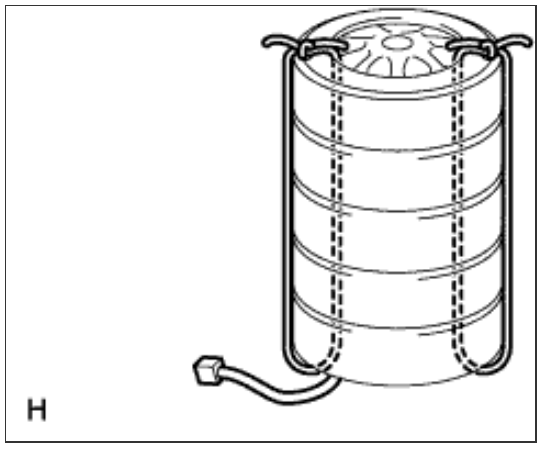

f. Install SST.

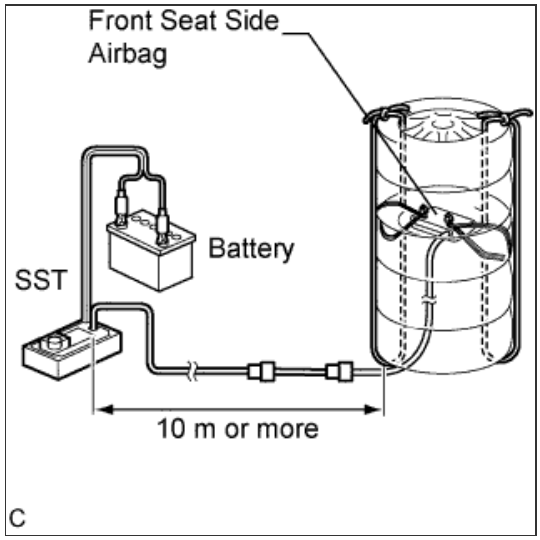

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the front seat side airbag is tied to.

iii. Press SST activation switch to deploy the airbag.


CAUTION:

When deploying the airbag, make sure that no one is near the tire.

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the front seat side airbag.

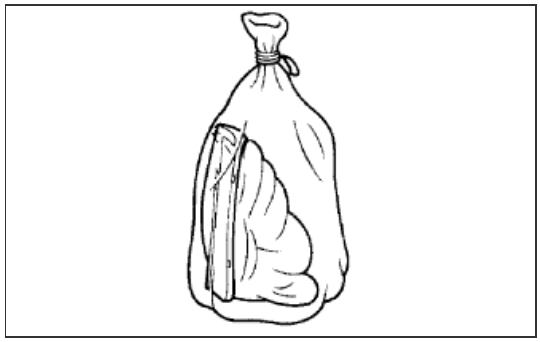

CAUTION:

- **The front seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a front seat side airbag with a deployed airbag.**
- **Do not apply water to a front seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

i. Remove the front seat side airbag from the tire.


ii. Place the front seat side airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

1. CHECK REAR SEAT SIDE AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

b. With the rear seat side airbag installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the rear seat with a new one: Cuts, minute cracks or marked discoloration on the rear seatback around the rear seat side airbag.

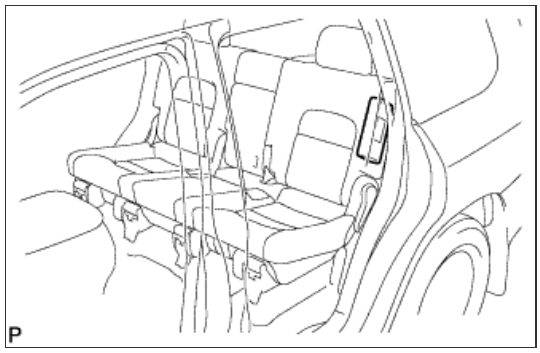


2. CHECK REAR SEAT SIDE AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

a. Perform a diagnostic system check (Click here).

b. With the rear seat side airbag removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the rear seat side airbag with a new one:

- Cuts, minute cracks or marked discoloration on the rear seat side airbag.
- Cracks or other damage to the wire harness or connector.

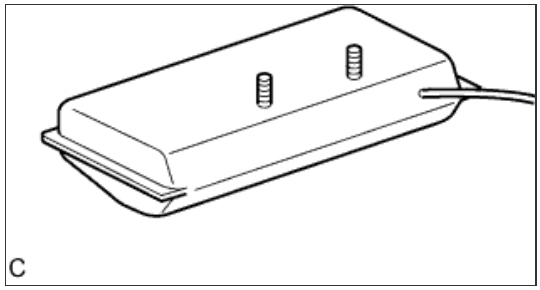

NOTICE:

For removal and installation procedures of the rear seat side airbag, be sure to follow the correct procedure.

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR.

CAUTION:

- **Never dispose of a rear seat side airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the airbag.**
- **The rear seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a rear seat side airbag with a deployed airbag.**
- **Do not apply water to a rear seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF REAR SEAT SIDE AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

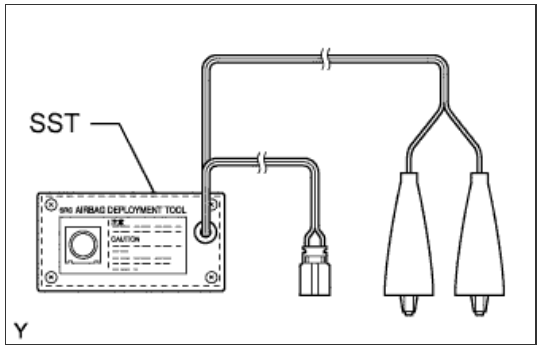

d. Remove the rear seat (Click here).

HINT:

Keep the rear seat in the cabin.

e. Install SST.

i. Disconnect the connector (yellow colored) from the rear seat side airbag.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

ii. Connect SST connector to the rear seat side airbag connector.

SST

09082-00700

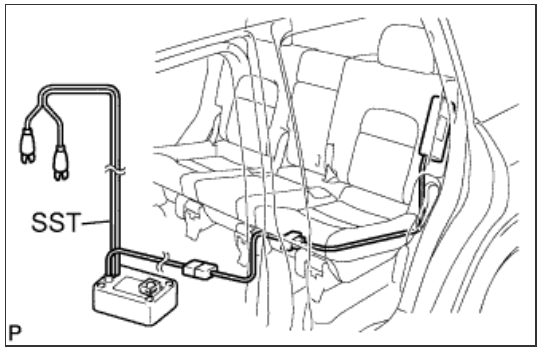

09082-00820

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

iii. Install the rear seat (Click here).


iv. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

v. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

vi. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

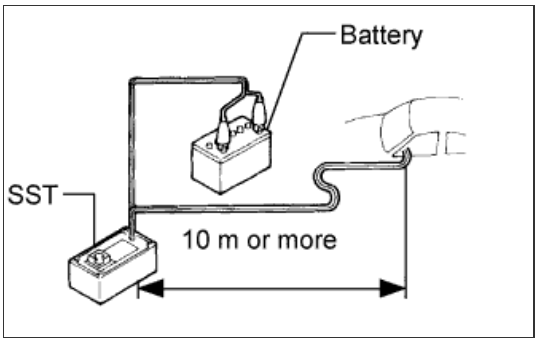

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The rear seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a rear seat side airbag with a deployed airbag.**
- **Do not apply water to a rear seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF REAR SEAT SIDE AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Remove the rear seat side airbag.

i. Remove the rear seat (Click here).

ii. Remove the 2 nuts and the rear seat side airbag from the seatback.

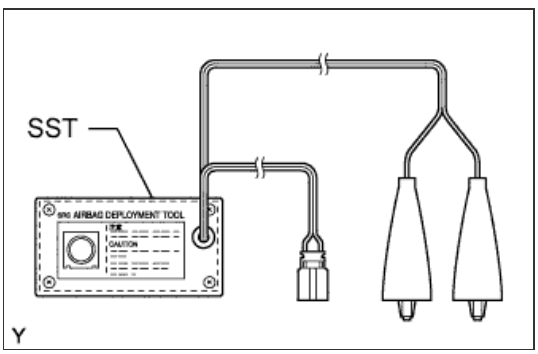


CAUTION:

- **When removing the rear seat airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the rear seat side airbag, keep the airbag deployment side facing upward.**

c. Using a service-purpose wire harness for the vehicle, tie down the rear seat side airbag to a tire.

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2}) or more

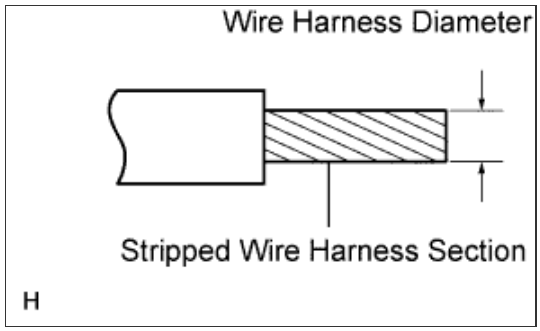

HINT:


To calculate the cross-sectional area of the stripped wire harness section:

Cross-sectional area 3.14 (Diameter)^2 divided by 4


CAUTION:

If the wire harness is too thin or an alternative ob ect is used to tie down the rear seat side airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 in.^{2}).

i. Install the 2 nuts to the rear seat side airbag.

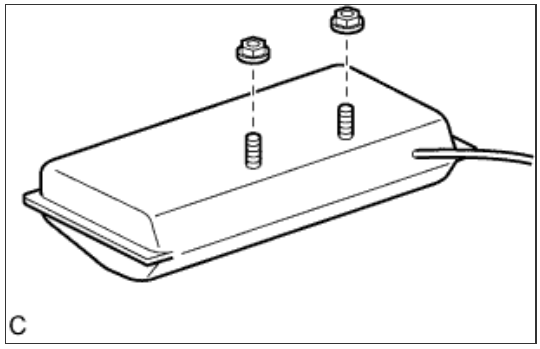


ii. Wind the wire harness around the stud bolts of the rear seat side airbag as shown in the illustration.

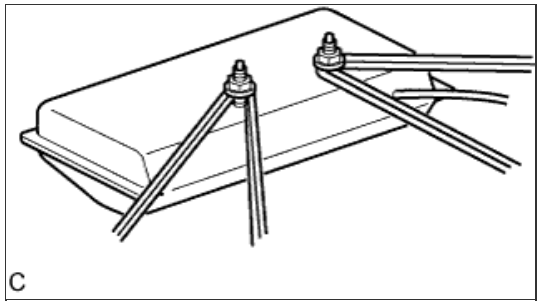

iii. Position the rear seat side airbag inside a tire.

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

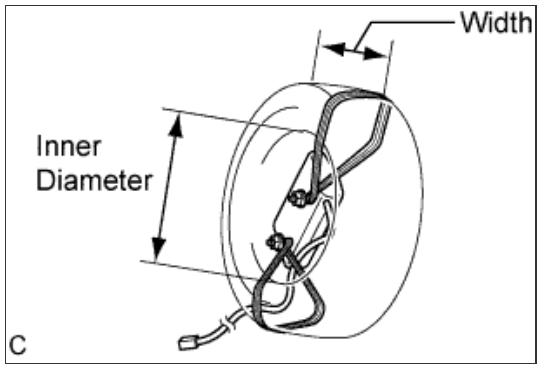

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the rear seat side airbag may become loose due to the shock when the airbag is deployed.**
- **Always tie down the rear seat side airbag with the airbag deployment direction facing inside the tire.**


NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.


d. Install SST.

i. Connect SST connector to the rear seat side airbag connector.

SST
09082-00820

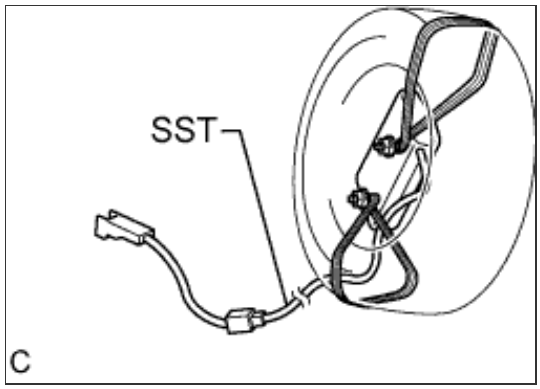

e. Place tires.

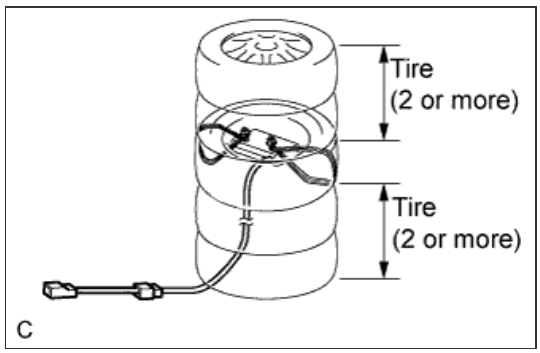

i. Place at least 2 tires under the tire which the rear seat side airbag is tied to.

ii. Place at least 2 tires over the tire which the rear seat side airbag is tied to. The top tire should have a disc wheel installed.


NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**


iii. Tie the tires together with 2 wire harnesses.

CAUTION:

Make sure that the wire harnesses are tight. ooseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

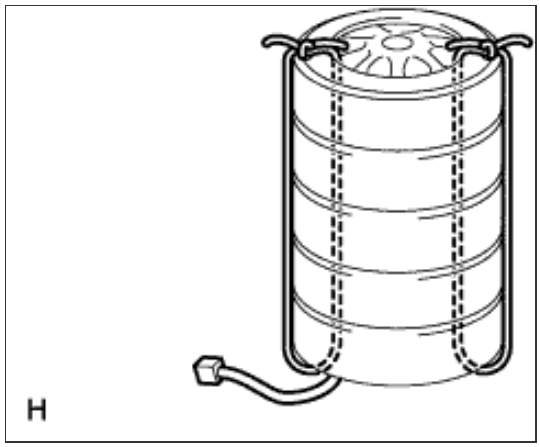

f. Install SST.

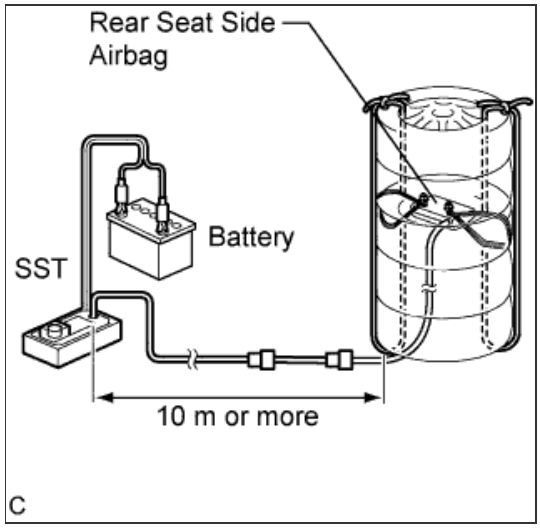

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the rear seat side airbag is tied to.

iii. Press SST activation switch to deploy the airbag.


CAUTION:

When deploying the airbag, make sure that no one is near the tire.

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the rear seat side airbag.

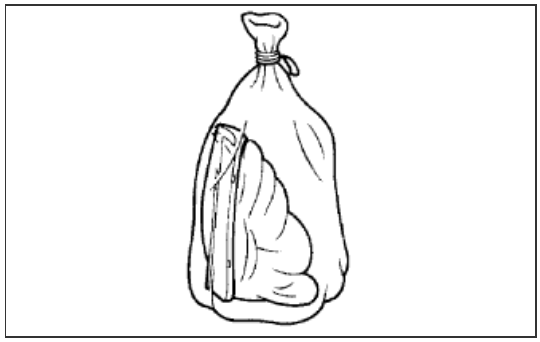

CAUTION:

- **The rear seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a rear seat side airbag with a deployed airbag.**
- **Do not apply water to a rear seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

i. Remove the rear seat side airbag from the tire.

ii. Place the rear seat side airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

HINT:

When scrapping a vehicle equipped with the SRS or disposing of the steering pad, be sure to deploy the airbag first in accordance with the procedure described below. If any abnormality occurs with the airbag deployment, contact the SERVICE DEPT. of the DISTRIBUTOR.

CAUTION:

- **Never dispose of a rear seat side airbag that has an unactivated airbag.**
- **The airbag produces an exploding sound when it is deployed, so perform the operation outdoors and where it will not create a nuisance to nearby residents.**
- **When deploying the airbag, always use the specified SST (SRS Airbag Deployment Tool). Perform the operation in a place away from electrical noise.**
- **When deploying the airbag, perform the operation at least 10 m (32.8 ft.) away from the airbag.**
- **The rear seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a rear seat side airbag with a deployed airbag.**
- **Do not apply water to a rear seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**
- **An airbag or pretensioner may be activated by static electricity. To prevent this, be sure to touch a metal surface with bare hands to discharge static electricity before performing this procedure.**

1. DISPOSE OF REAR SEAT SIDE AIRBAG ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:

Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Read the precaution (Click here).


c. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

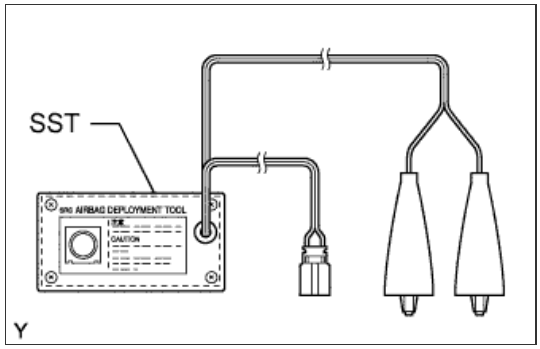

d. Remove the rear seat (Click here).

HINT:

Keep the rear seat in the cabin.

e. Install SST.

i. Disconnect the connector (yellow colored) from the rear seat side airbag.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

ii. Connect SST connector to the rear seat side airbag connector.

SST

09082-00700

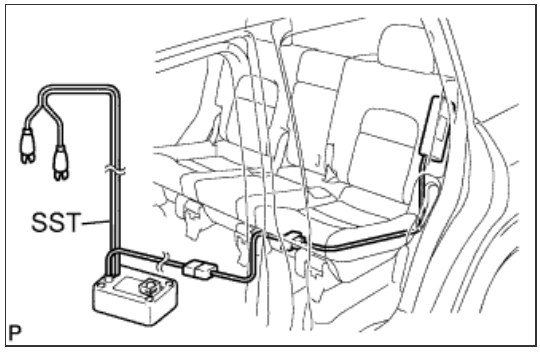

09082-00820

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

iii. Install the rear seat (Click here).


iv. Move SST at least 10 m (32.8 ft.) away from the vehicle front side window.

v. Maintaining enough clearance for SST wire harness in the front side window, close all doors and windows of the vehicle.

NOTICE:

Take care not to damage SST wire harness.

vi. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

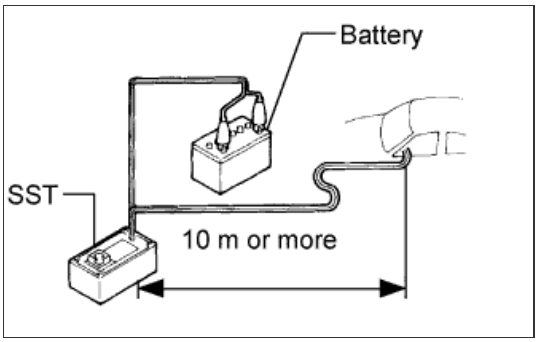

f. Deploy the airbag.

i. Check that no one is inside the vehicle or within a 10 m (32.8 ft.) radius of the vehicle.

ii. Press SST activation switch to deploy the airbag.

CAUTION:

- **When deploying the airbag, make sure that no one is near the vehicle.**
- **The rear seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a rear seat side airbag with a deployed airbag.**
- **Do not apply water to a rear seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

2. DISPOSE OF REAR SEAT SIDE AIRBAG ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedure detailed below when deploying the airbag.

HINT:


Prepare a battery as the power source to deploy the airbag.

a. Check the function of SST (Click here).

b. Remove the rear seat side airbag.

i. Remove the rear seat (Click here).

ii. Remove the 2 nuts and the rear seat side airbag from the seatback.

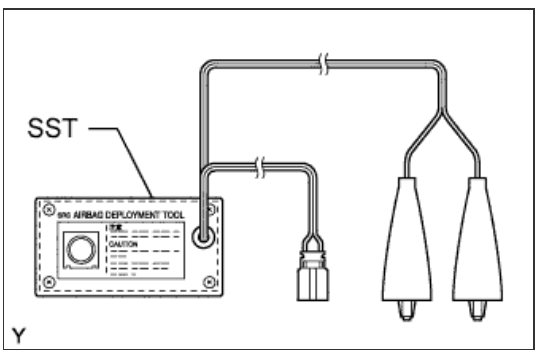


CAUTION:

- **When removing the rear seat airbag, wait at least 90 seconds after the engine switch is turned off and the cable is disconnected from the negative (-) battery terminal before starting work.**
- **When storing the rear seat side airbag, keep the airbag deployment side facing upward.**

c. Using a service-purpose wire harness for the vehicle, tie down the rear seat side airbag to a tire.

Cross-sectional area of stripped wire harness section:
1.25 mm^2 (0.00192 in.^{2}) or more

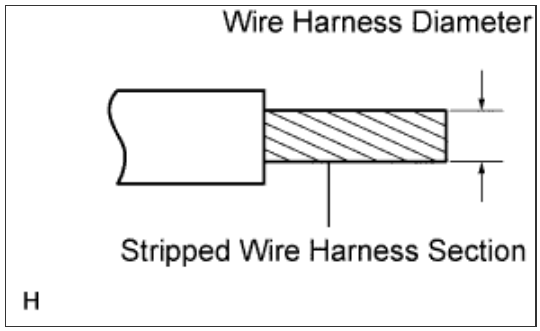

HINT:


To calculate the cross-sectional area of the stripped wire harness section:

Cross-sectional area 3.14 (Diameter)^2 divided by 4


CAUTION:

If the wire harness is too thin or an alternative ob ect is used to tie down the rear seat side airbag, it may be snapped by the shock when the airbag is deployed. Always use a wire harness for vehicle use with a cross-sectional area of at least 1.25 mm^2 (0.00192 in.^{2}).

i. Install the 2 nuts to the rear seat side airbag.

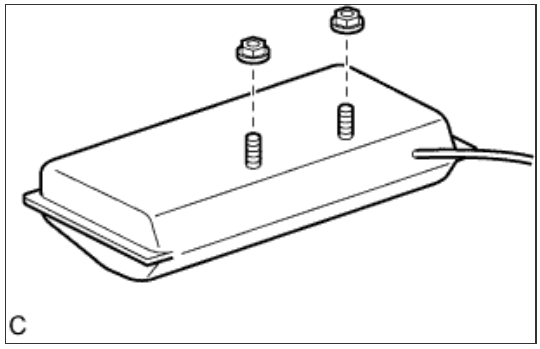


ii. Wind the wire harness around the stud bolts of the rear seat side airbag as shown in the illustration.

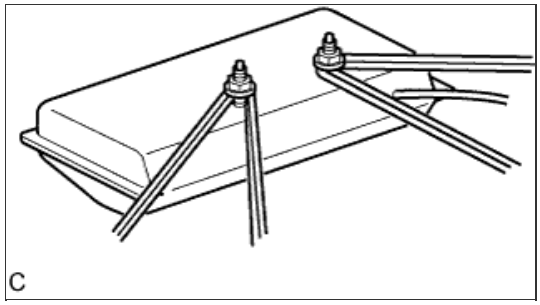

iii. Position the rear seat side airbag inside a tire.

Tire size:
Must exceed the following dimensions
Width:
185 mm (7.28 in.)
Inner diameter:
360 mm (14.2 in.)

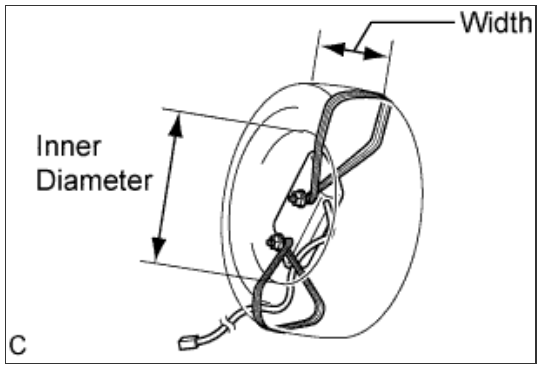

CAUTION:

- **Make sure that the wire harnesses are tight. If there is slack in the wire harnesses, the rear seat side airbag may become loose due to the shock when the airbag is deployed.**
- **Always tie down the rear seat side airbag with the airbag deployment direction facing inside the tire.**


NOTICE:

As the tire may be damaged by the airbag deployment, use a tire that you are planning to throw away.


d. Install SST.

i. Connect SST connector to the rear seat side airbag connector.

SST
09082-00820

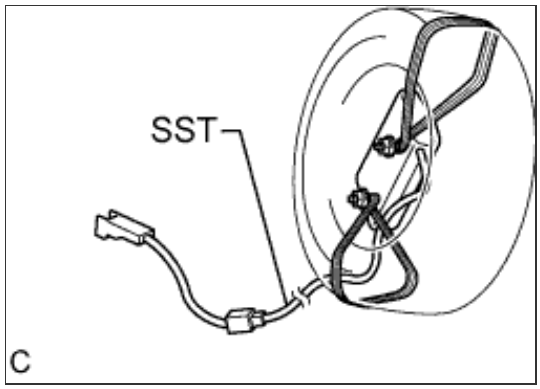

e. Place tires.

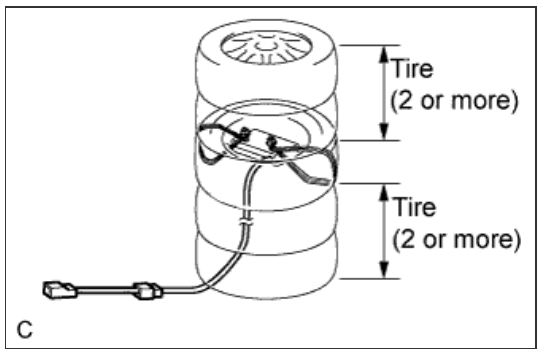

i. Place at least 2 tires under the tire which the rear seat side airbag is tied to.

ii. Place at least 2 tires over the tire which the rear seat side airbag is tied to. The top tire should have a disc wheel installed.


NOTICE:

- **Do not place SST connector under the tire because it could be damaged.**
- **As the disc wheel may be damaged by the airbag deployment, use a disc wheel that you are planning to throw away.**
- **As the tires may be damaged by the airbag deployment, use tires that you are planning to throw away.**


iii. Tie the tires together with 2 wire harnesses.

CAUTION:

Make sure that the wire harnesses are tight. ooseness in the wire harnesses results in the tires coming free due to the shock when the airbag is deployed.

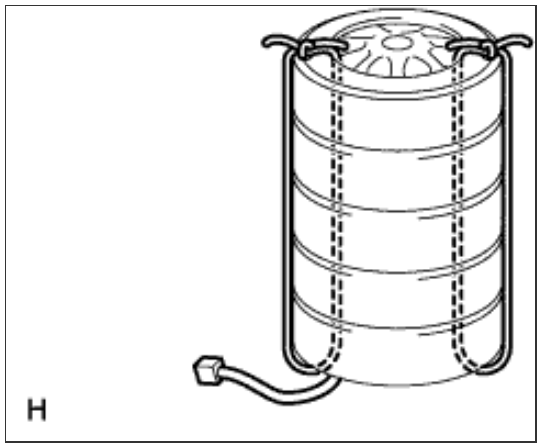

f. Install SST.

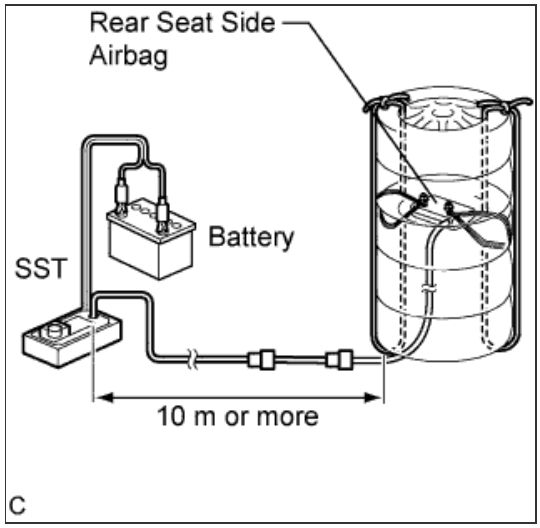

i. Connect SST connector.

SST
09082-00700

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock. Also, secure some slack for SST wire harness inside the tire.

g. Deploy the airbag.

i. Connect the red clip of SST to the battery positive (+) terminal and the black clip of SST to the battery negative (-) terminal.

ii. Check that no one is within a 10 m (32.8 ft.) radius of the tire which the rear seat side airbag is tied to.

iii. Press SST activation switch to deploy the airbag.


CAUTION:

When deploying the airbag, make sure that no one is near the tire.

HINT:

The airbag is deployed as the ED of SST activation switch comes on.

h. Dispose of the rear seat side airbag.

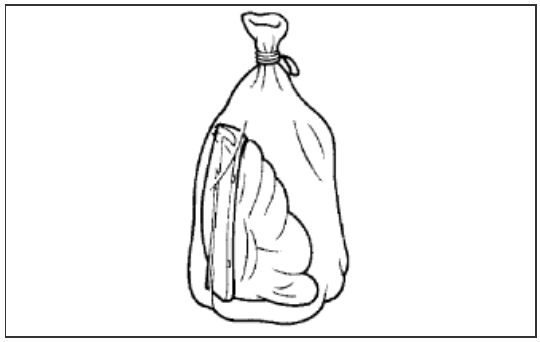


CAUTION:

- **The rear seat side airbag becomes extremely hot when the airbag is deployed, so do not touch it for at least 30 minutes after deployment.**
- **Use gloves and safety glasses when handling a rear seat side airbag with a deployed airbag.**
- **Do not apply water to a rear seat side airbag with a deployed airbag.**
- **Always wash your hands with water after completing the operation.**

i. Remove the rear seat side airbag from the tire.

ii. Place the rear seat side airbag in a plastic bag, tie it tightly and dispose of it in the same way as other general parts.

for Preparation Click here

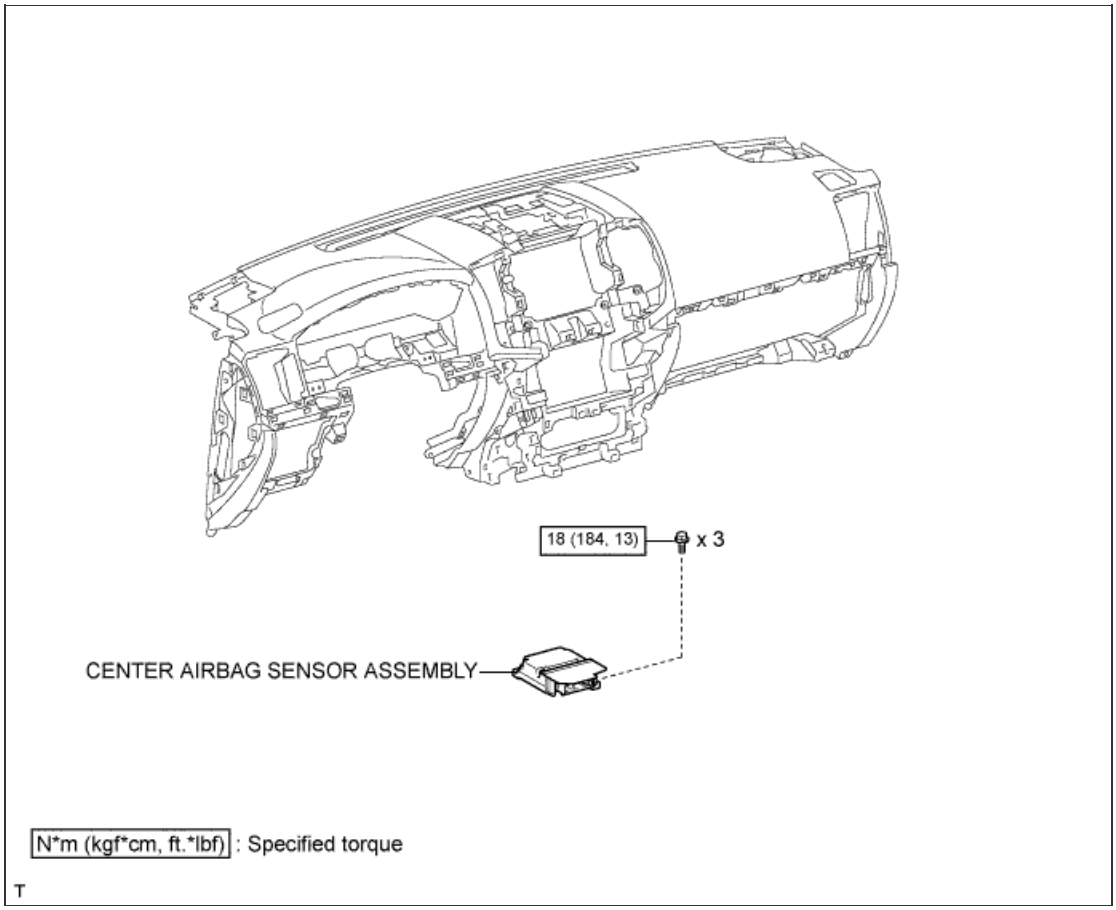

for Preparation Click here

1. CHECK CENTER AIRBAG SENSOR ASSEMBLY VEHICLE NOT INVOLVE IN COLLISION)

a. Perform a diagnostic system check (Click here).

2. CHECK CENTER AIRBAG SENSOR ASSEMBLY VEHICLE INVOLVE IN COLLISION AN AIRBAG HAS NOT EPLOYE

a. Perform a diagnostic system check (Click here).

3. CHECK CENTER AIRBAG SENSOR ASSEMBLY VEHICLE INVOLVE IN COLLISION AN AIRBAG IS EPLOYE

a. Replace the center airbag sensor.

CAUTION:

For removal and installation procedures of the center airbag sensor, be sure to follow the correct procedure.

HINT:

The center airbag sensor should be replaced after any of the airbags have deployed, as it has been sub ected to the impact.

CENTER AIRBAG SENSOR ASSEMBLY > REMOVAL

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


2. REMOVE FRONT AIR CONDITIONING UNIT

a. Remove the front air conditioning nit (Click here).

3. REMOVE CENTER AIRBAG SENSOR ASSEMBLY

a. Disconnect the holder (with connectors).

b. Remove the 3 bolts and airbag sensor.

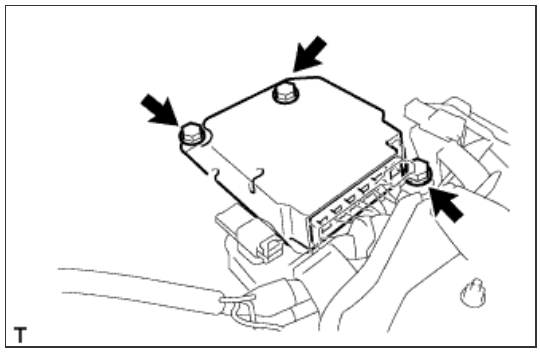

CENTER AIRBAG SENSOR ASSEMBLY > REMOVAL

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


2. REMOVE FRONT AIR CONDITIONING UNIT

a. Remove the front air conditioning nit (Click here).

3. REMOVE CENTER AIRBAG SENSOR ASSEMBLY


a. Disconnect the holder (with connectors).

b. Remove the 3 bolts and airbag sensor.

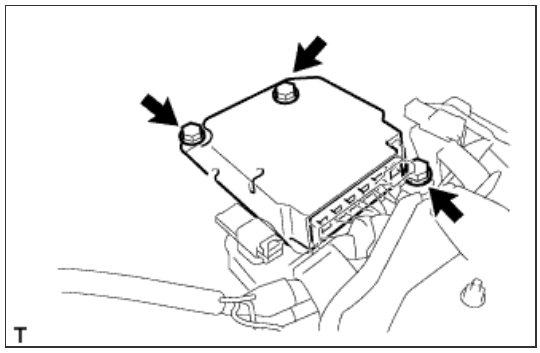

for Preparation Click here

1. INSTALL CENTER AIRBAG SENSOR ASSEMBLY

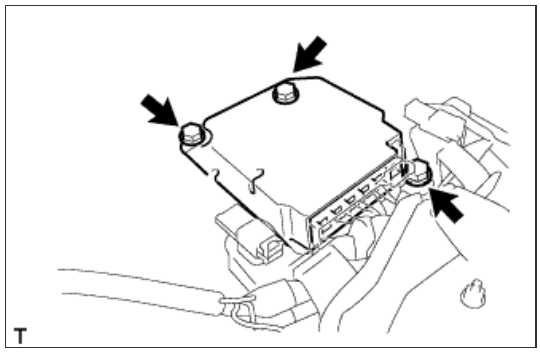

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (terminal.

CAUTION:

ait at least seconds after disconnecting the cable from the negative (battery terminal to disable the SRS system.

c. nstall the airbag sensor with the bolts.

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

NOTICE:

- **If the center airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the center airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

d. Check that there is no looseness in the installation parts of the center airbag sensor.

e. Connect the holder (with connectors).

f. Check that the waterproof sheet is properly set.

2. INSTALL FRONT AIR CONDITIONING UNIT

a. nstall the front air conditioning nit (Click here).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:


hen disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

4. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

1. INSTALL CENTER AIRBAG SENSOR ASSEMBLY

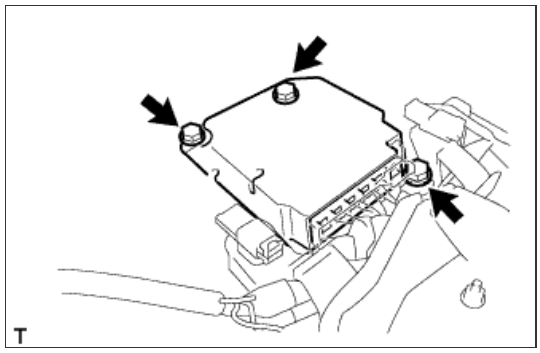

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (terminal.

CAUTION:

ait at least seconds after disconnecting the cable from the negative (battery terminal to disable the SRS system.

c. nstall the airbag sensor with the bolts.

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

NOTICE:

- **If the center airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the center airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

d. Check that there is no looseness in the installation parts of the center airbag sensor.

e. Connect the holder (with connectors).

f. Check that the waterproof sheet is properly set.

2. INSTALL FRONT AIR CONDITIONING UNIT

a. nstall the front air conditioning nit (Click here).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:

hen disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

4. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

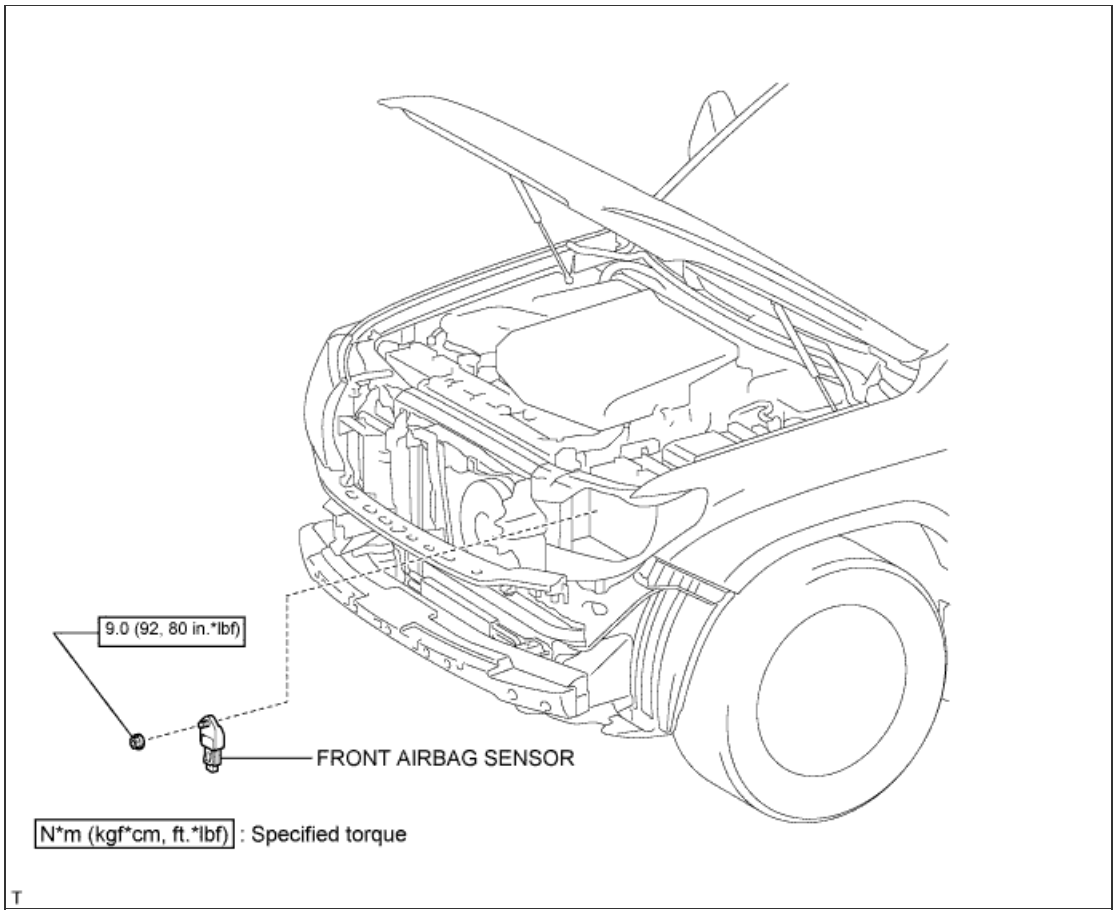

for Preparation Click here

1. CHECK FRONT AIRBAG SENSOR (VEHICLE NOT INVOLVE IN COLLISION)

a. Perform a diagnostic system check (Click here).

2. CHECK FRONT AIRBAG SENSOR (VEHICLE INVOLVE IN COLLISION AN AIRBAG HAS NOT EPLOYE

a. Perform a diagnostic system check (Click here).

b. When the front bumper of the vehicle or its area is damaged, check if there is any damage to the front airbag sensor. If the front airbag sensor has defects as mentioned below, replace it with a new one:

- Cracks, dents or chips on the sensor housing.
- Cracks or other damage to the connector.
- Peeling off of the label or damage to the serial number.

CAUTION:

For removal and installation procedures of the front airbag sensor, be sure to follow the correct procedure.

3. CHECK FRONT AIRBAG SENSOR (VEHICLE INVOLVE IN COLLISION AN AIRBAG IS EPLOYE

a. When airbags have deployed as the result of a collision, be certain to replace the front airbag sensor when it is in the damaged area (anywhere in need of repair). Furthermore, it is also necessary to replace the front airbag sensor in an undamaged area that has registered a ma or collision, or which e hibits any of the following abnormalities:

- Cracks, dents or chips on the sensor housing.
- Cracks or other damage to the connector.
- Peeling off of the label or damage to the serial number.

CAUTION:

For removal and installation procedures of the front airbag sensor, be sure to follow the correct procedure.

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


2. REMOVE HEADLIGHT ASSEMBLY

a. Remove the headlight assembly (Click here).

3. REMOVE FRONT AIRBAG SENSOR

a. Remove the n t and front airbag sensor from the body.

b. Disconnect the connector.

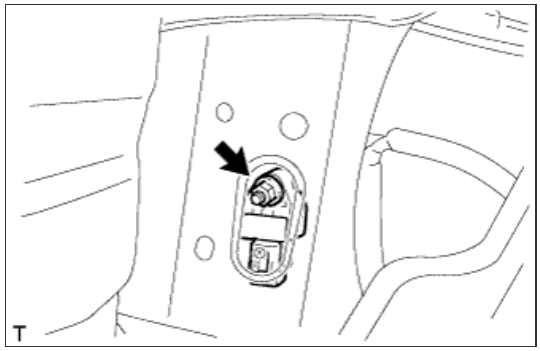

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


2. REMOVE HEADLIGHT ASSEMBLY

a. Remove the headlight assembly (Click here).

3. REMOVE FRONT AIRBAG SENSOR

a. Remove the n t and front airbag sensor from the body.

b. Disconnect the connector.

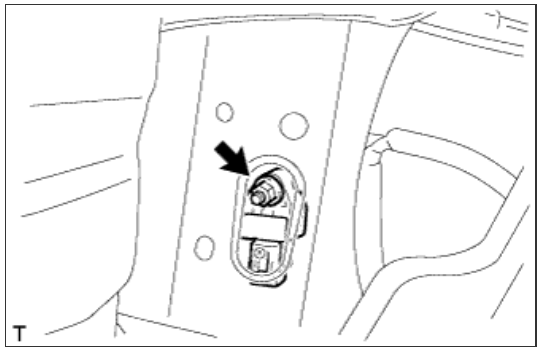


for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL FRONT AIRBAG SENSOR

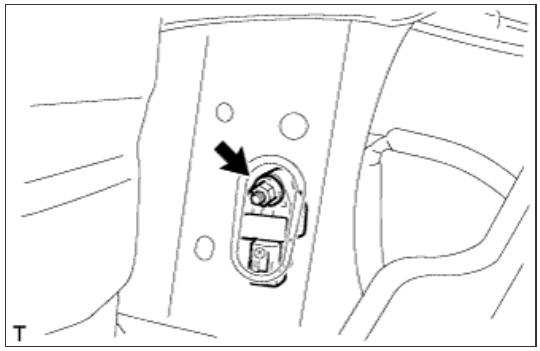

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (terminal.

CAUTION:

ait at least seconds after disconnecting the cable from the negative (battery terminal to disable the SRS system.

c. Connect the connector.

d. nstall the front airbag sensor with the n t.

Torque:
9.0 N*m{ 92 kgf*cm , 80 in.*lbf }

NOTICE:

- **If the front airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the front airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

e. Check that there is no looseness in the installation parts of the front airbag sensor.

2. INSTALL HEADLIGHT ASSEMBLY

a. nstall the headlight assembly (Click here).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

hen disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

4. CHECK SRS WARNING LIGHT


a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL FRONT AIRBAG SENSOR

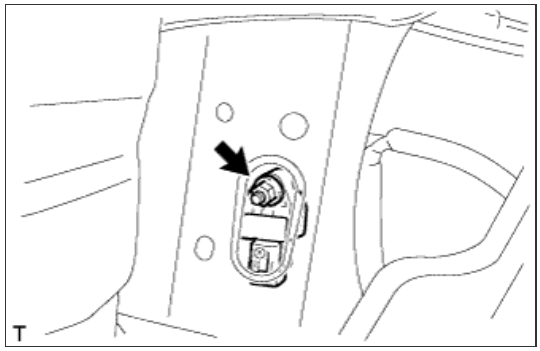

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (terminal.

CAUTION:

ait at least seconds after disconnecting the cable from the negative (battery terminal to disable the SRS system.

c. Connect the connector.

d. nstall the front airbag sensor with the n t.

Torque:
9.0 N*m{ 92 kgf*cm , 80 in.*lbf }

NOTICE:

- **If the front airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the front airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

e. Check that there is no looseness in the installation parts of the front airbag sensor.

2. INSTALL HEADLIGHT ASSEMBLY

a. nstall the headlight assembly (Click here).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:

hen disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

4. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

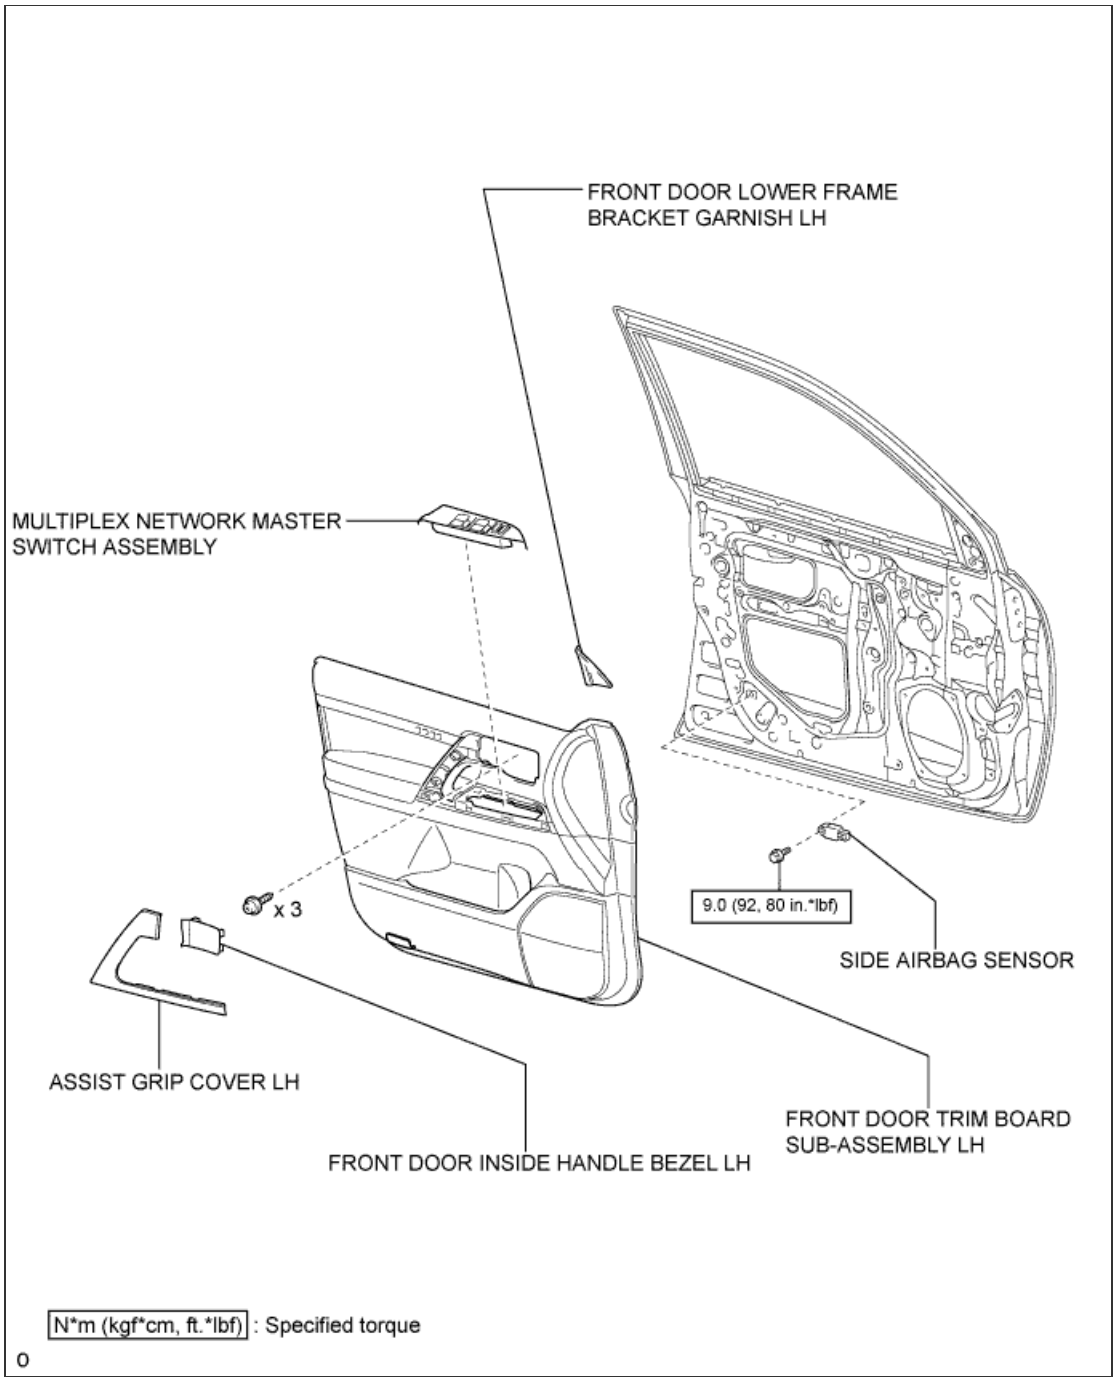

for Preparation Click here

1. CHECK SIDE AIRBAG SENSOR (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

2. CHECK SIDE AIRBAG SENSOR (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

a. Perform a diagnostic system check (Click here).

b. When the front door of the vehicle or its area is damaged, check if there is any damage to the side airbag sensor. If there are any defects as mentioned below, replace the side airbag sensor with a new one:

- Cracks, dents or chips on the sensor housing.
- Cracks or other damage to the connector.
- Peeling off of the label or damage to the serial number.

CAUTION:

For removal and installation procedures of the side airbag sensor, be sure to follow the correct procedure.

3. CHECK SIDE AIRBAG SENSOR (VEHICLE INVOLVED IN COLLISION AND AIRBAG IS DEPLOYED)

a. Replace the side airbag sensor.

CAUTION:

- **For removal and installation procedures of the side airbag sensor, be sure to follow the correct procedure.**
- **If the airbags have deployed, replace the side airbag sensor on the side in which the collision occurred. Replace both if necessary.**

for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH.**
- **The procedures listed below are the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH

a. Detach the clip and claw, remove the front lower door frame bracket garnish.

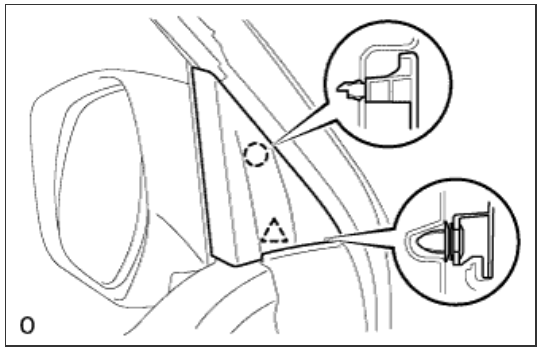


3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle bezel.


HINT:

Tape the screwdriver tip before use.

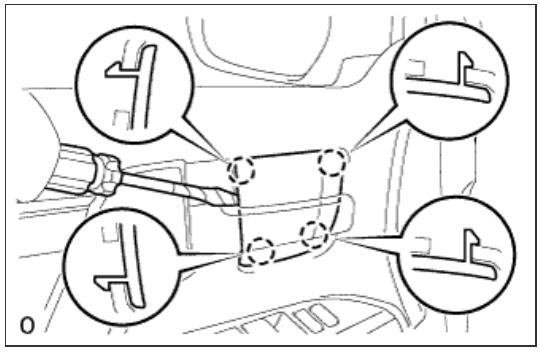


4. REMOVE MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY

a. Remove the 3 screws and multiplex network master switch.

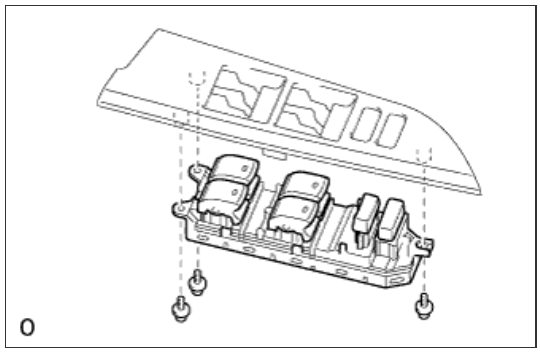

5. REMOVE ASSIST GRIP COVER LH

a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

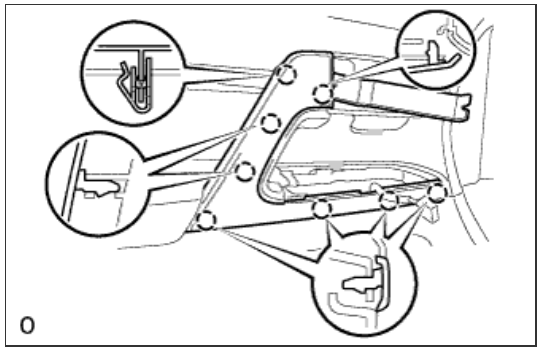


6. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 13 clips, 4 claws and trim board.

c. Disconnect the connector.

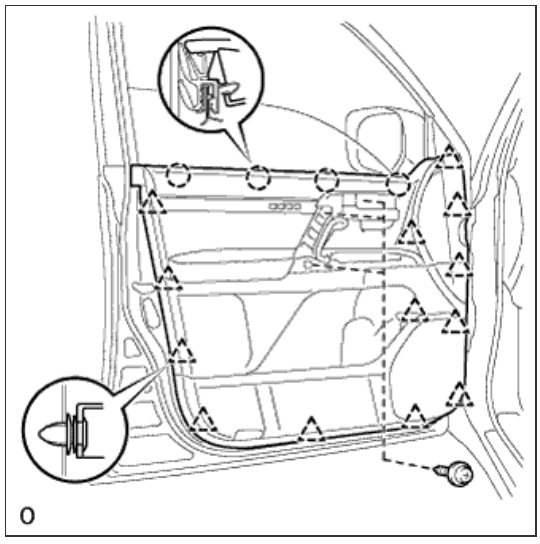


d. Disconnect the 2 cables from the inside handle.

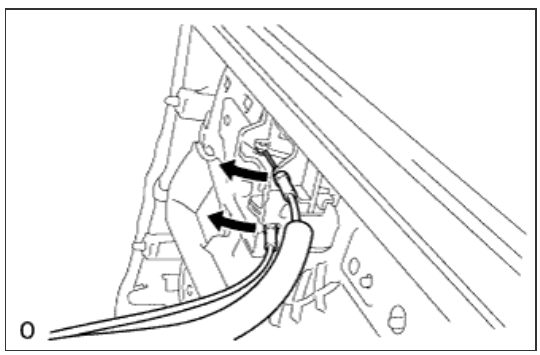

. REMOVE SIDE AIRBAG SENSOR

a. Disconnect the connector.

b. Remove the bolt and side airbag sensor.

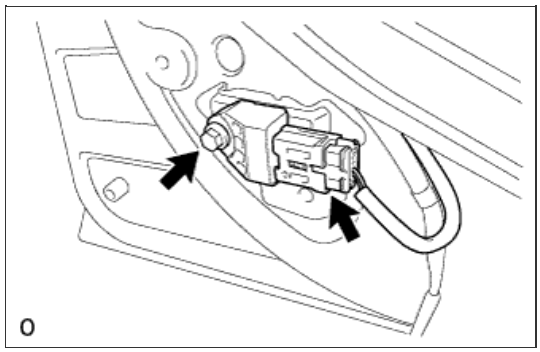

for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH.**
- **The procedures listed below are the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH

a. Detach the clip and claw, remove the front lower door frame bracket garnish.

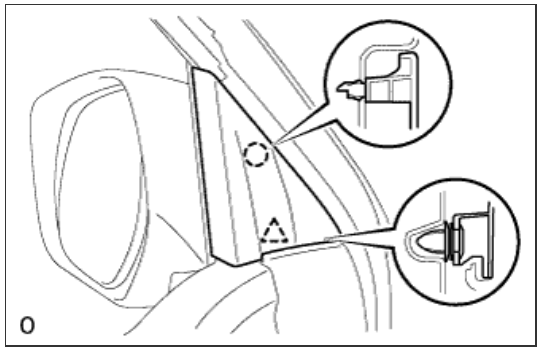


3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle bezel.


HINT:

Tape the screwdriver tip before use.

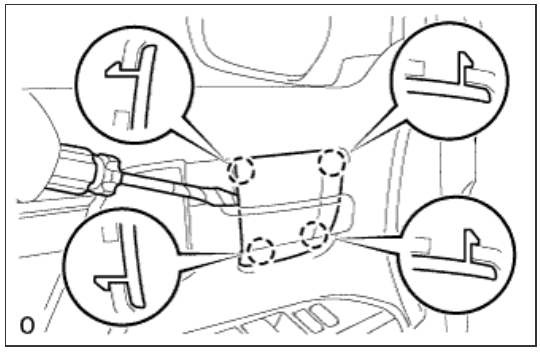


4. REMOVE MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY

a. Remove the 3 screws and master switch.

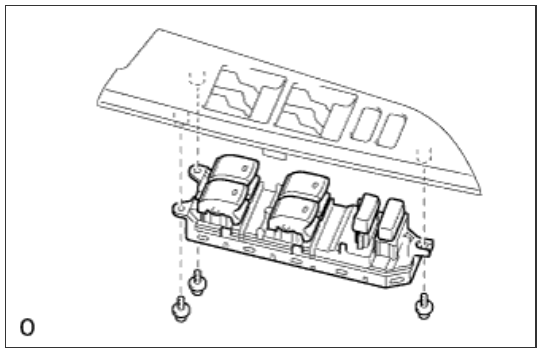

5. REMOVE ASSIST GRIP COVER LH

a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

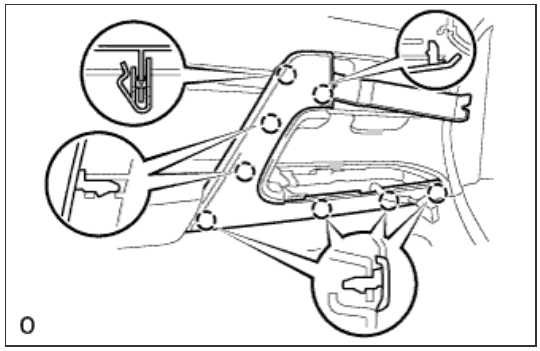


6. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 13 clips, 4 claws and trim board.

c. Disconnect the connector.

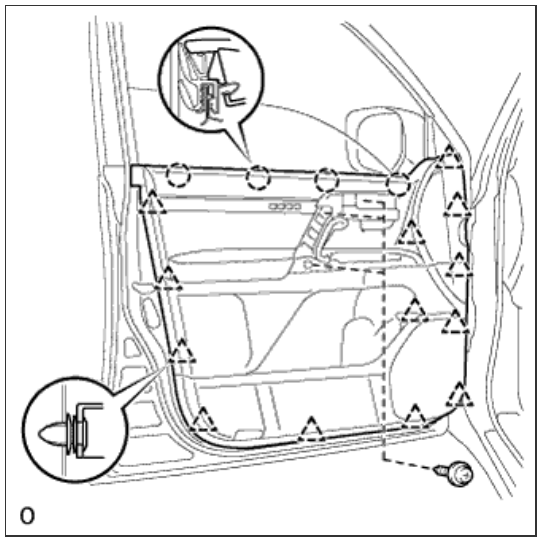


d. Disconnect the 2 cables from the inside handle.

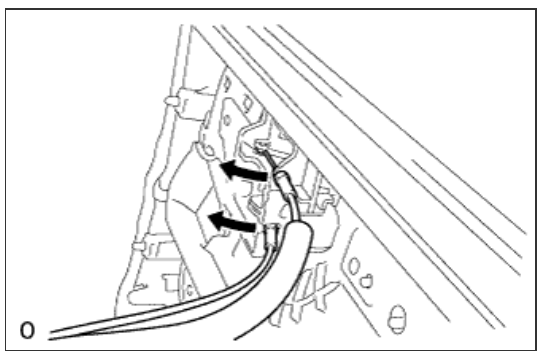

. REMOVE SIDE AIRBAG SENSOR

a. Disconnect the connector.

b. Remove the bolt and side airbag sensor.

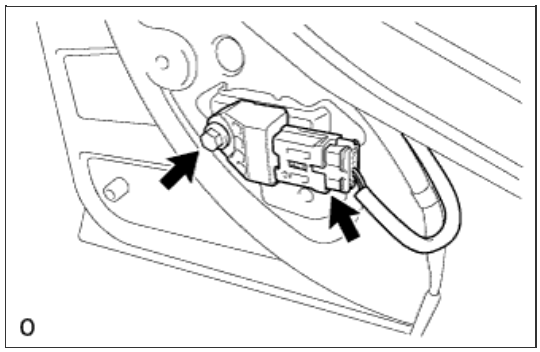

for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH.**
- **The procedures listed below are the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH

a. Detach the clip and claw, remove the front lower door frame bracket garnish.

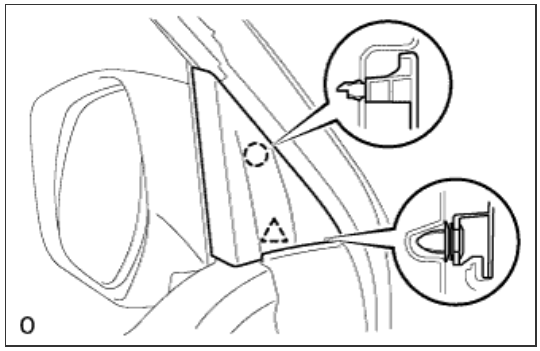


3. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle bezel.


HINT:

Tape the screwdriver tip before use.

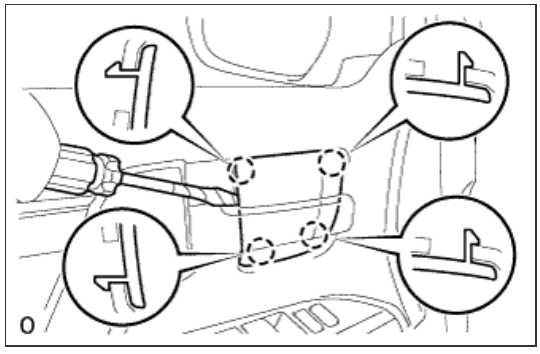


4. REMOVE MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY

a. Remove the 3 screws and master switch.

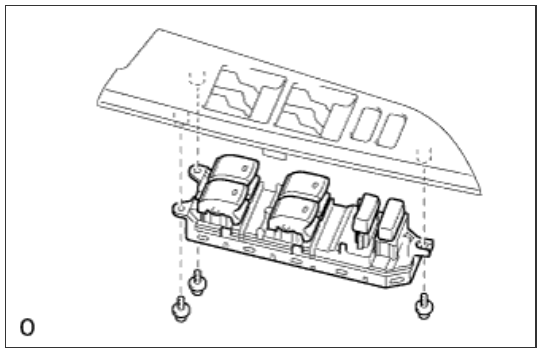

5. REMOVE ASSIST GRIP COVER LH

a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

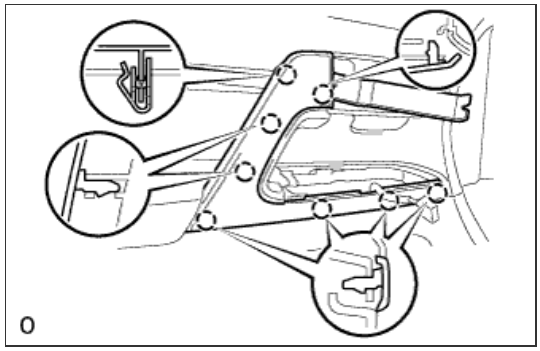


6. REMOVE FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 13 clips, 4 claws and trim board.

c. Disconnect the connector.

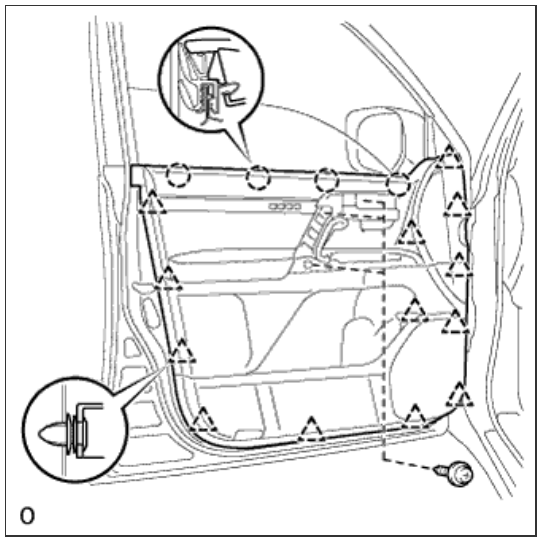


d. Disconnect the 2 cables from the inside handle.

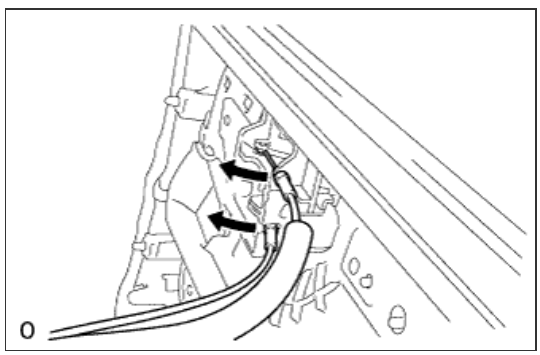

. REMOVE SIDE AIRBAG SENSOR

a. Disconnect the connector.

b. Remove the bolt and side airbag sensor.

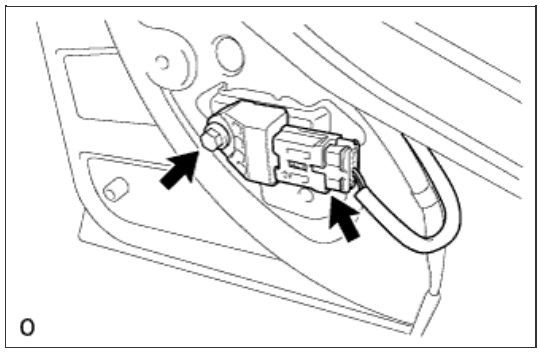

for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH.**
- **The procedures listed below are the LH side.**


1. INSTALL SIDE AIRBAG SENSOR

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

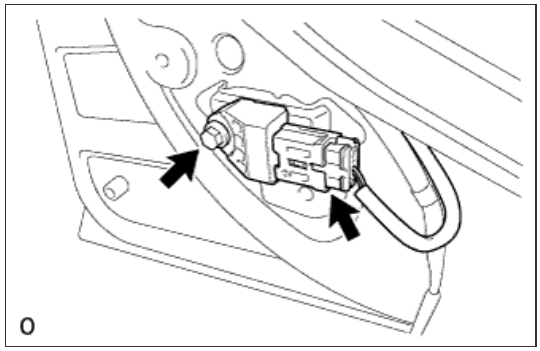

c. Install the side airbag sensor with the bolt.

Torque:
9.0 N*m{ 92 kgf*cm , 80 in.*lbf }

NOTICE:

- **If the side airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the side airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**


d. Check that there is no looseness in the installation parts of the side airbag sensor.

e. Connect the connector.

2. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

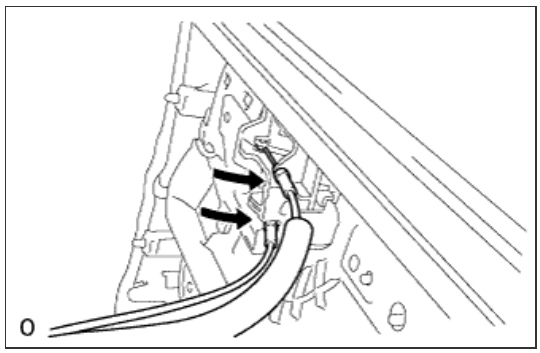


c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.

d. Install the 3 screws.

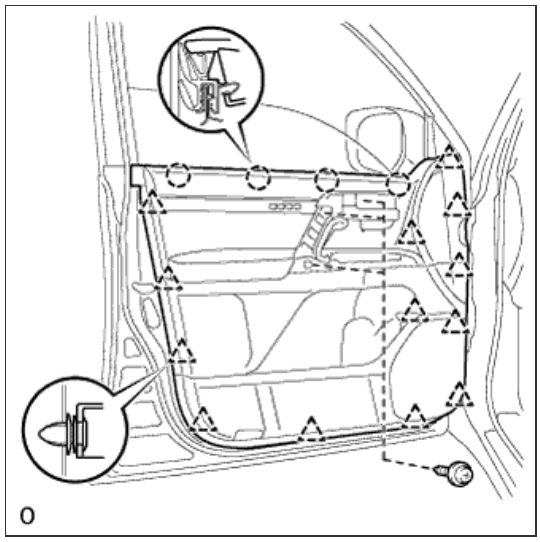


3. INSTALL ASSIST GRIP COVER LH

a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

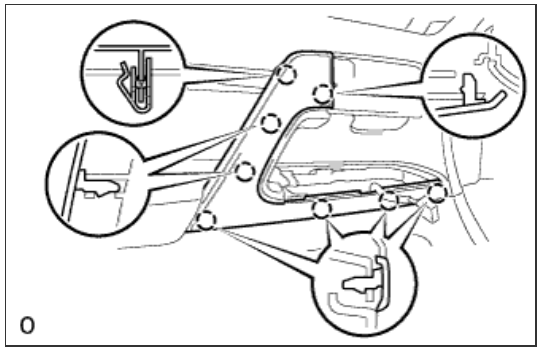


4. INSTALL MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY

a. Install the multiplex network master switch assembly with the 3 screws.

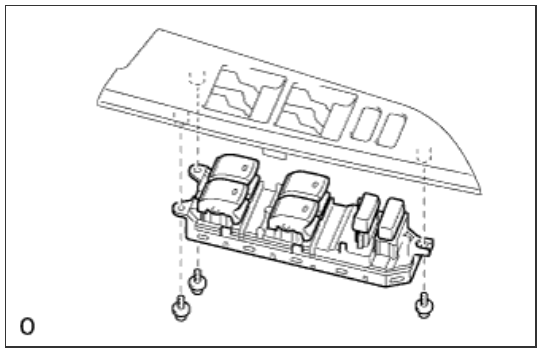


5. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH

a. Attach the 4 claws to install the bezel.

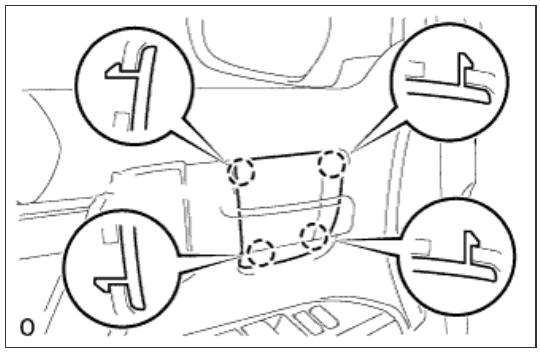

6. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

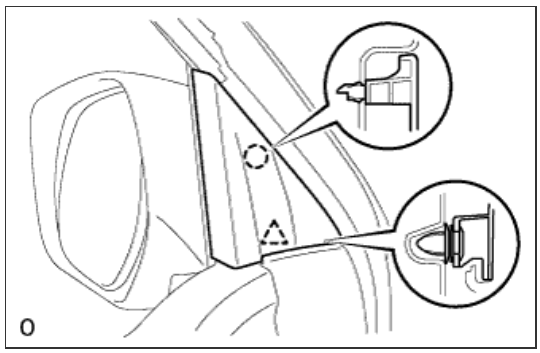

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

8. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH.**
- **The procedures listed below are the LH side.**


1. INSTALL SIDE AIRBAG SENSOR

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

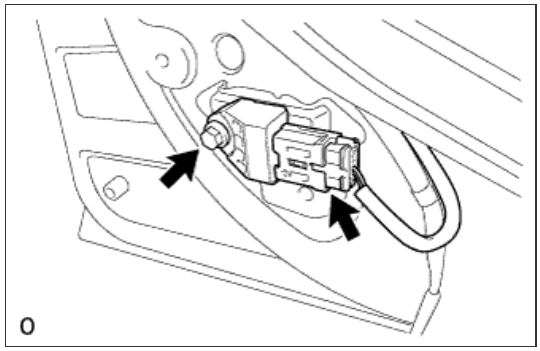

c. Install the side airbag sensor with the bolt.

Torque:
9.0 N*m{ 92 kgf*cm , 80 in.*lbf }

NOTICE:

- **If the side airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the side airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**


d. Check that there is no looseness in the installation parts of the side airbag sensor.

e. Connect the connector.

2. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

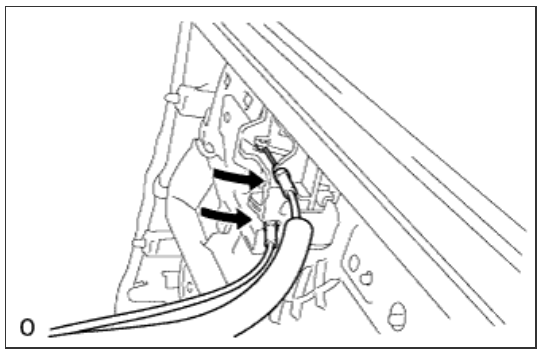


c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.

d. Install the 3 screws.

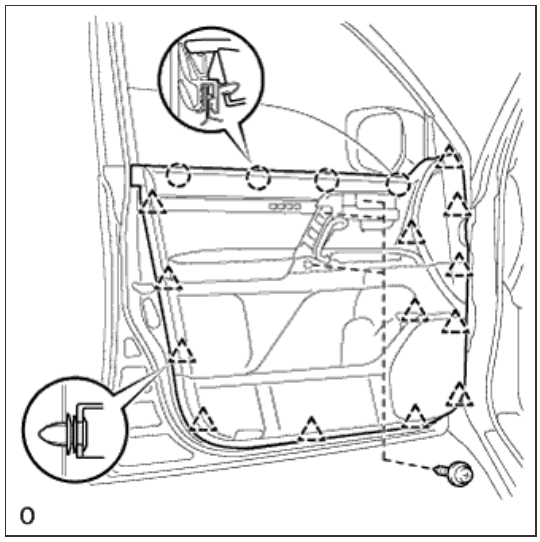


3. INSTALL ASSIST GRIP COVER LH

a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

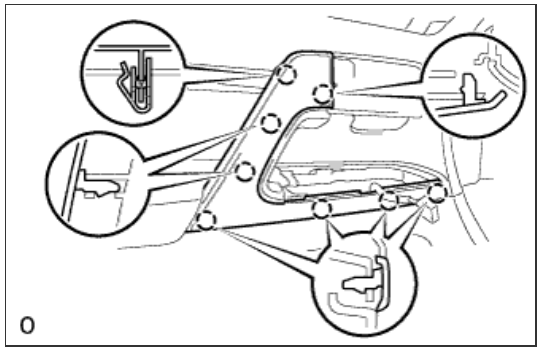


4. INSTALL MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY

a. Install the master switch with the 3 screws.

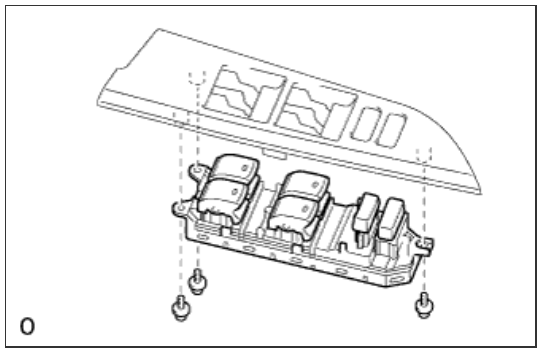


5. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH

a. Attach the 4 claws to install the bezel.

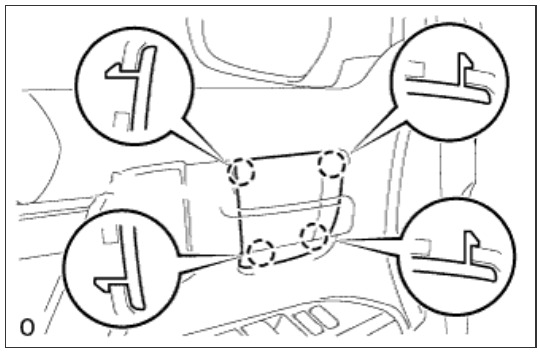

6. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

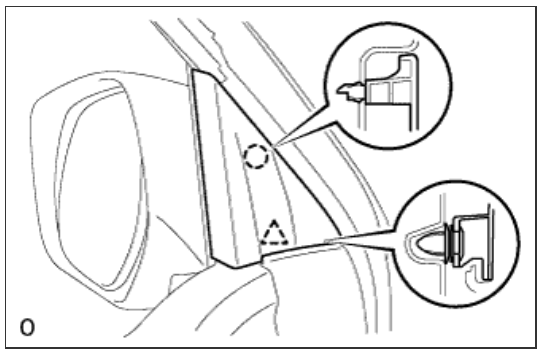

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

8. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH.**
- **The procedures listed below are the LH side.**


1. INSTALL SIDE AIRBAG SENSOR

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

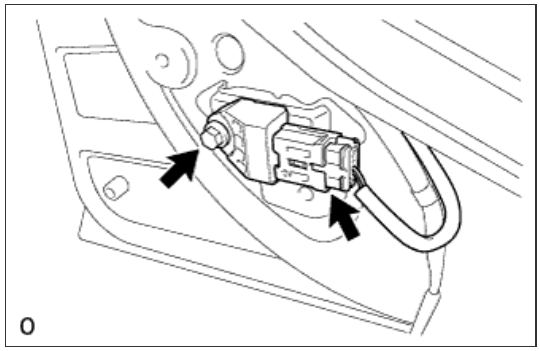

c. Install the side airbag sensor with the bolt.

Torque:
9.0 N*m{ 92 kgf*cm , 80 in.*lbf }

NOTICE:

- **If the side airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the side airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**


d. Check that there is no looseness in the installation parts of the side airbag sensor.

e. Connect the connector.

2. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

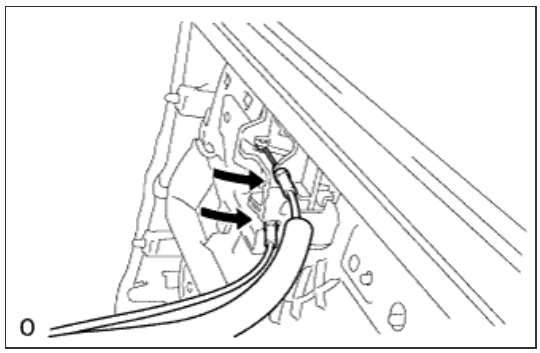


c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.

d. Install the 3 screws.

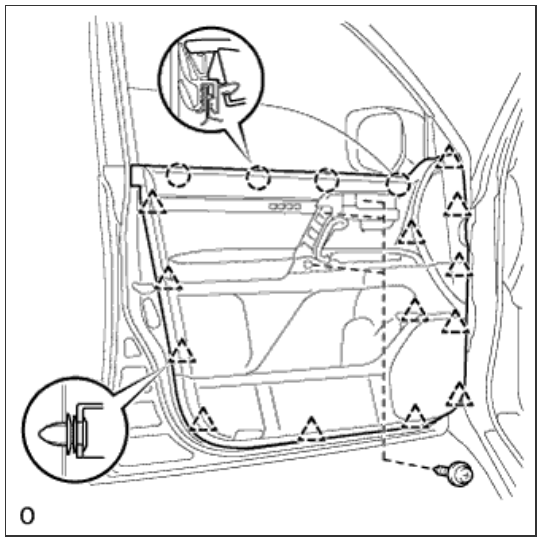


3. INSTALL ASSIST GRIP COVER LH

a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

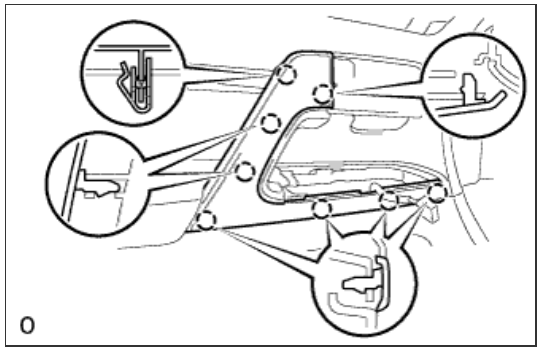


4. INSTALL MULTIPLEX NETWORK MASTER SWITCH ASSEMBLY

a. Install the master switch with the 3 screws.

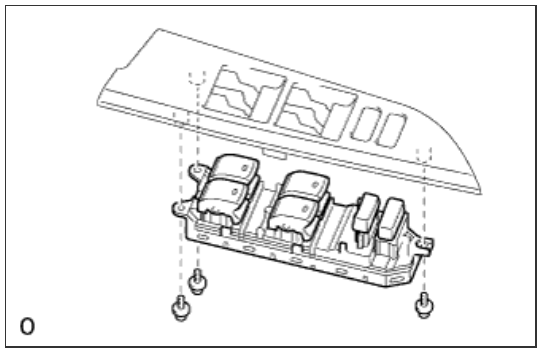


5. INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH

a. Attach the 4 claws to install the bezel.

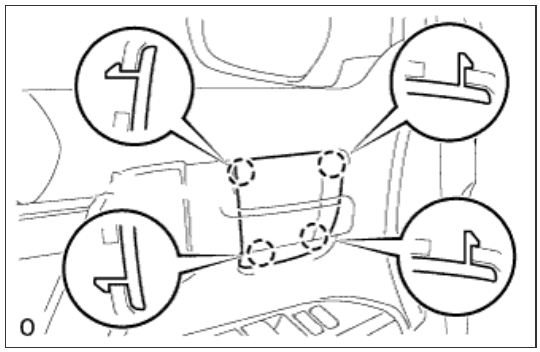

6. INSTALL FRONT DOOR LOWER FRAME BRACKET GARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

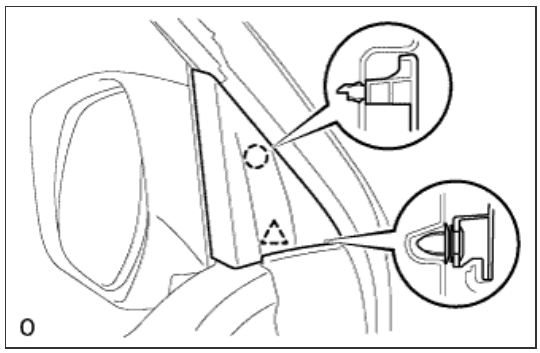

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

8. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

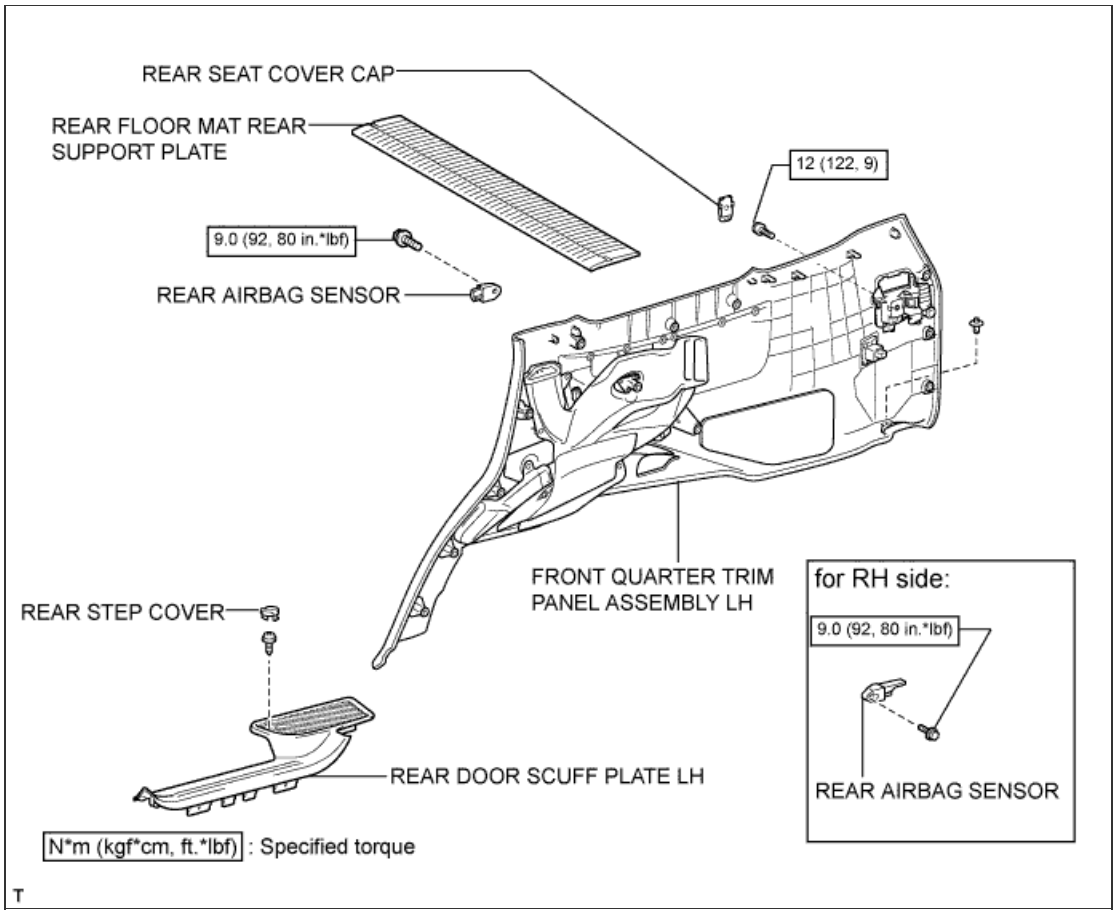

for Preparation Click here

1. CHECK REAR AIRBAG SENSOR (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

2. CHECK REAR AIRBAG SENSOR (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

a. Perform a diagnostic system check (Click here).

b. When the quarter panel of the vehicle or its area is damaged, check if there is any damage to the rear airbag sensor. If there are any defects as mentioned below, replace the rear airbag sensor with a new one

- Cracks, dents or chips on the sensor housing.
- Cracks or other damage to the connector.
- Peeling off of the label or damage to the serial number.

CAUTION:

For removal and installation procedures of the rear airbag sensor, be sure to follow the correct procedure.

3. CHECK REAR AIRBAG SENSOR (VEHICLE INVOLVED IN COLLISION AND AIRBAG IS DEPLOYED)

a. When airbags have deployed as the result of a collision, be certain to replace all rear airbag sensors in the damaged area (anywhere in need of repair). Furthermore, it is also necessary to replace any rear airbag sensor in undamaged areas that have registered a ma or collision, or which exhibit any of the following abnormalities

- Cracks, dents or chips on the sensor housing.
- Cracks or other damage to the connector.
- Peeling off of the label or damage to the serial number.

CAUTION:

For removal and installation procedures of the rear airbag sensor, be sure to follow the correct procedure.

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY LH


a. Remove the rear No. 2 seat assembly LH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Split Bench Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).


4. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE (w/ Sliding Roof)

a. Detach the 6 clips and remove the support plate.

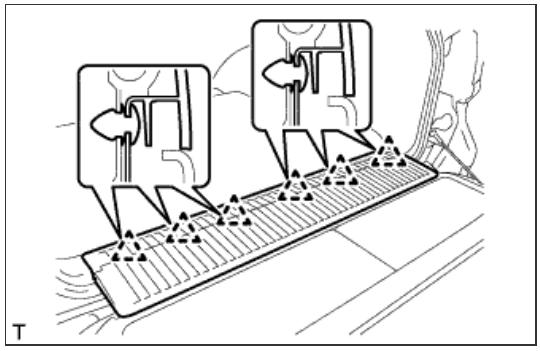

5. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE (w/o Sliding Roof)

a. Detach the 6 clips and remove the support plate.

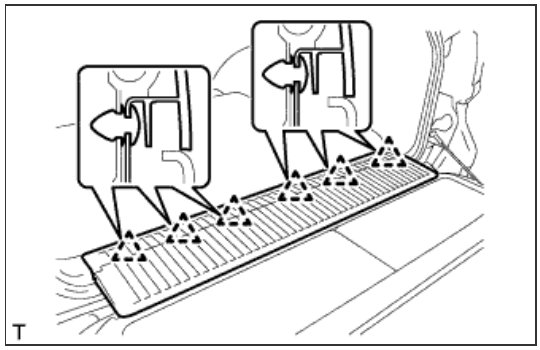


6. REMOVE REAR STEP COVER (w/ Sliding Roof)

HINT:

Use the same procedure to remove the step cover on the other side.

a. Detach the 2 claws and remove the step cover.

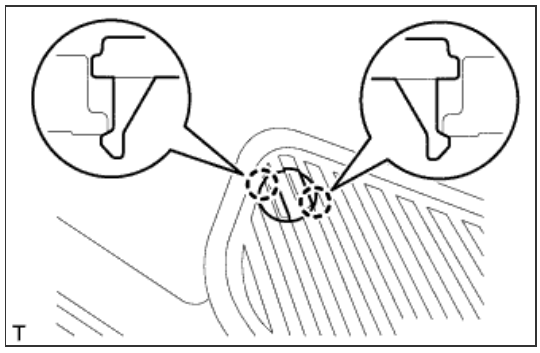


7. REMOVE REAR STEP COVER (w/o Sliding Roof)

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

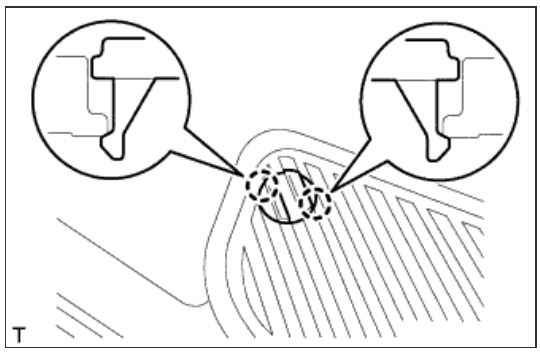

8. REMOVE REAR DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Remove the screw.


b. Detach the 3 claws and 4 clips, and remove the scuff plate.

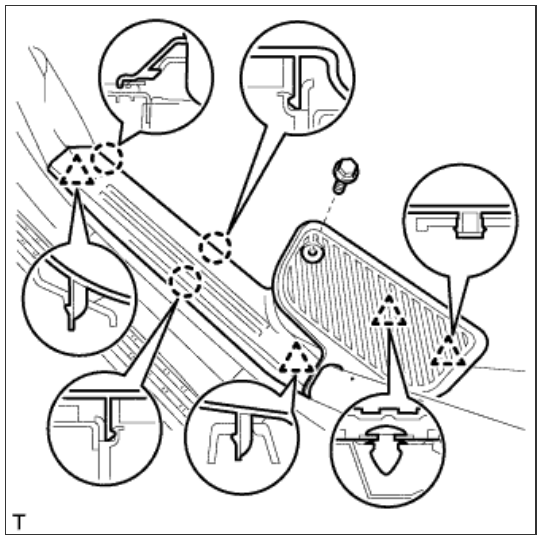

9. REMOVE REAR DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

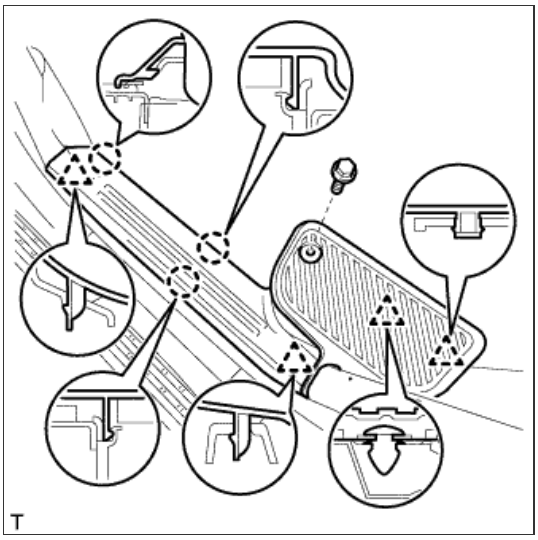

10. REMOVE REAR SEAT COVER CAP (w/ Sliding Roof)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

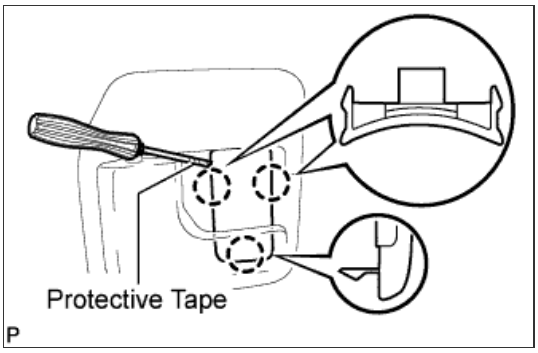

11. REMOVE REAR SEAT COVER CAP (w/o Sliding Roof)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.


HINT:

Tape the screwdriver tip before use.

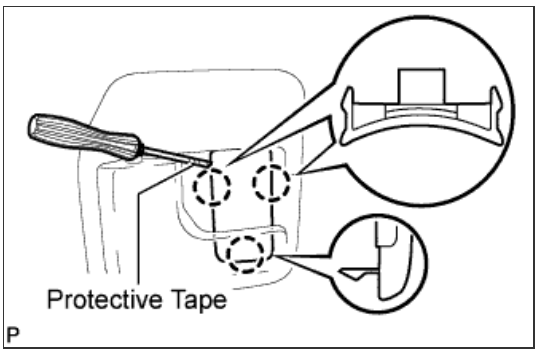


12. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/ Sliding Roof)

a. w/ Rear Heater:
Remove the 8 screws and duct.

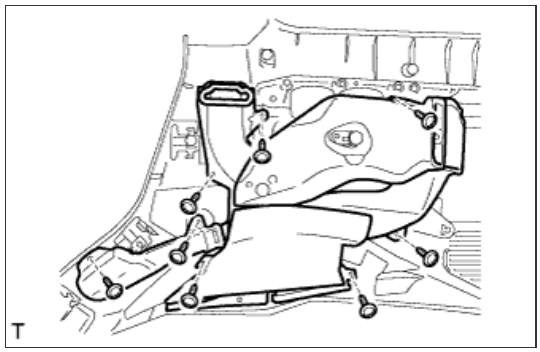


b. Remove the 7 screws.

c. Detach the 4 claws and remove the uarter trim cover.

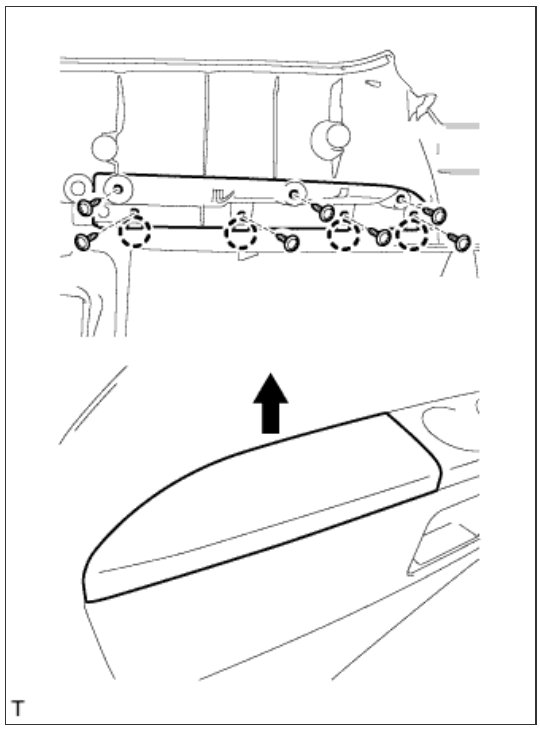


13. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/o Sliding Roof)

a. w/ Rear Heater:
Remove the 8 screws and duct.

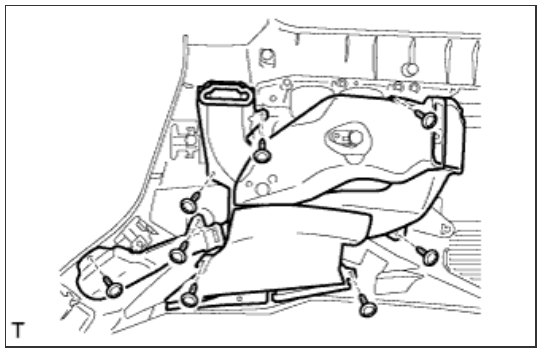

b. Remove the 7 screws.


c. Detach the 4 claws and remove the quarter trim cover.

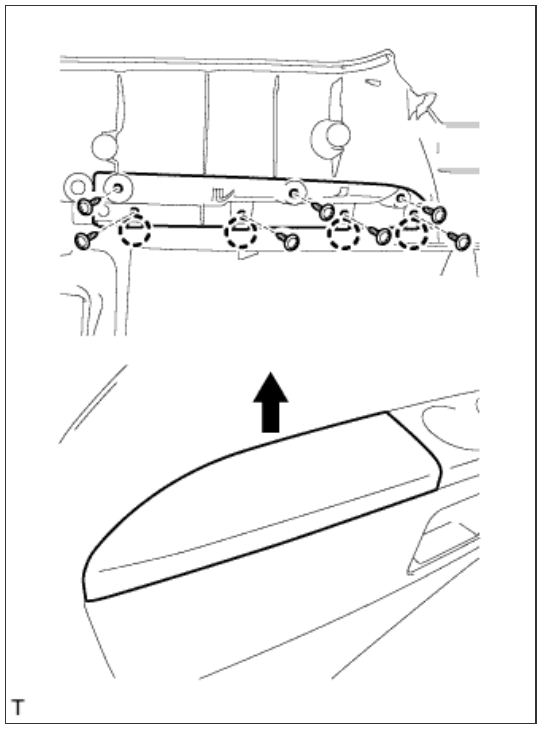

14. REMOVE REAR AIRBAG SENSOR

a. Remove the bolt and rear airbag sensor.

b. Disconnect the connector.

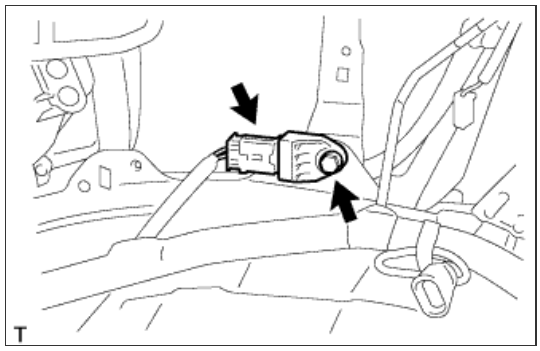

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY LH


a. Remove the rear No. 2 seat assembly LH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Split Bench Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).


4. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE (w/ Sliding Roof)

a. Detach the 6 clips and remove the support plate.

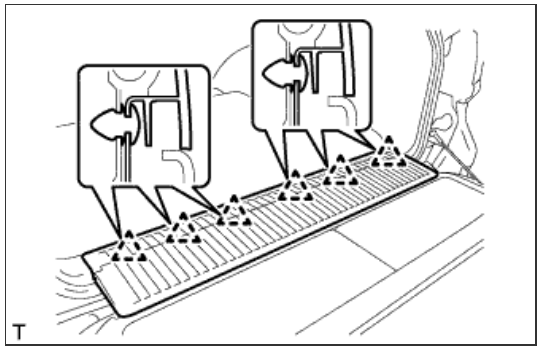

5. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE (w/o Sliding Roof)

a. Detach the 6 clips and remove the support plate.

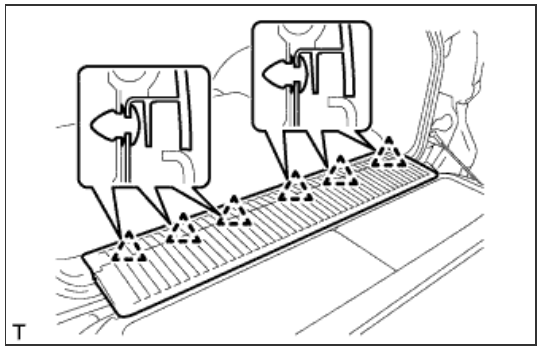


6. REMOVE REAR STEP COVER (w/ Sliding Roof)

HINT:

Use the same procedure to remove the step cover on the other side.

a. Detach the 2 claws and remove the step cover.

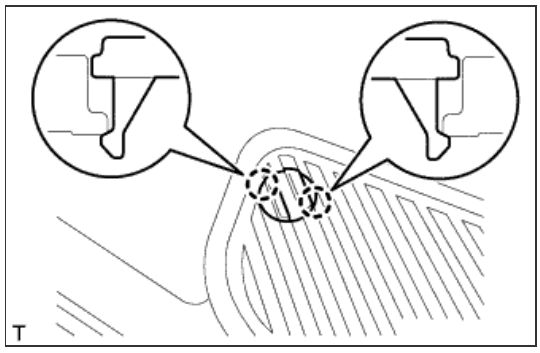


7. REMOVE REAR STEP COVER (w/o Sliding Roof)

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

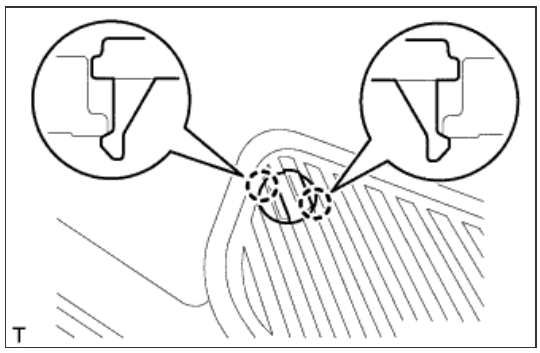

8. REMOVE REAR DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Remove the screw.


b. Detach the 3 claws and 4 clips, and remove the scuff plate.

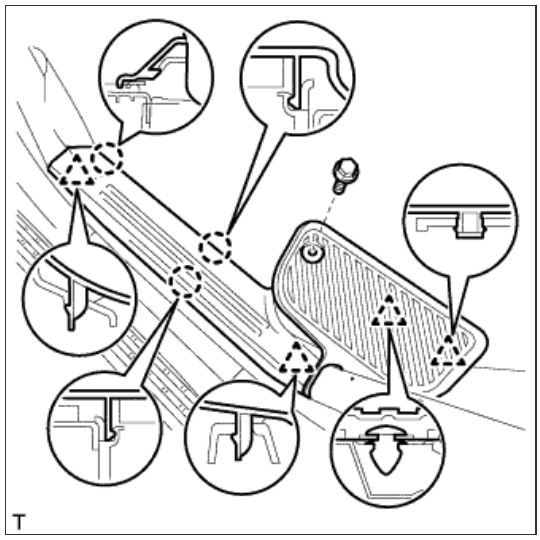

9. REMOVE REAR DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

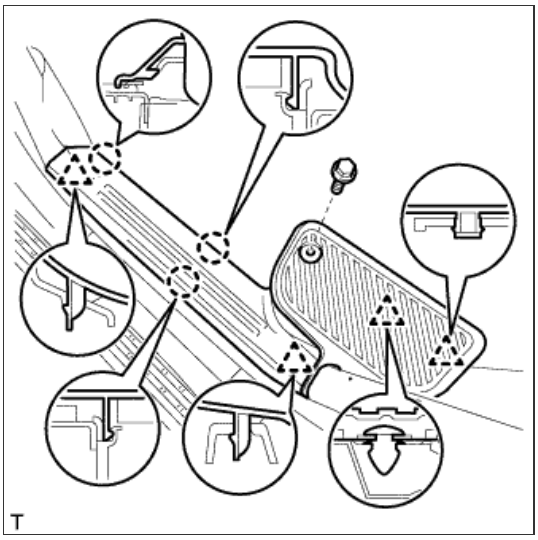

10. REMOVE REAR SEAT COVER CAP (w/ Sliding Roof)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

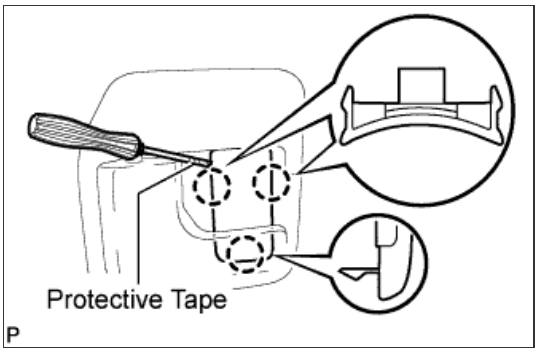

11. REMOVE REAR SEAT COVER CAP (w/o Sliding Roof)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.


HINT:

Tape the screwdriver tip before use.

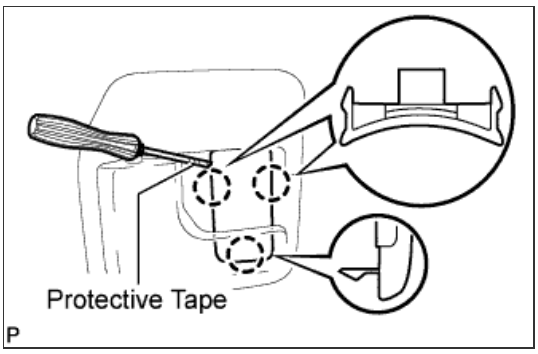


12. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/ Sliding Roof)

a. w/ Rear Heater:
Remove the 8 screws and duct.

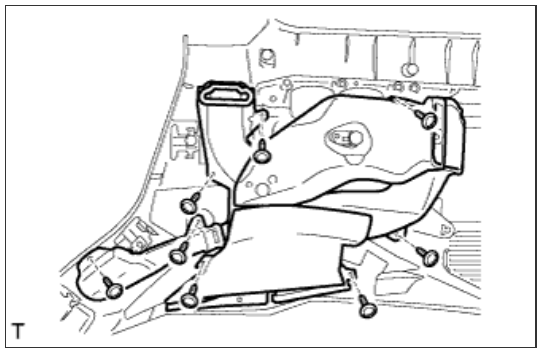


b. Remove the 7 screws.

c. Detach the 4 claws and remove the uarter trim cover.

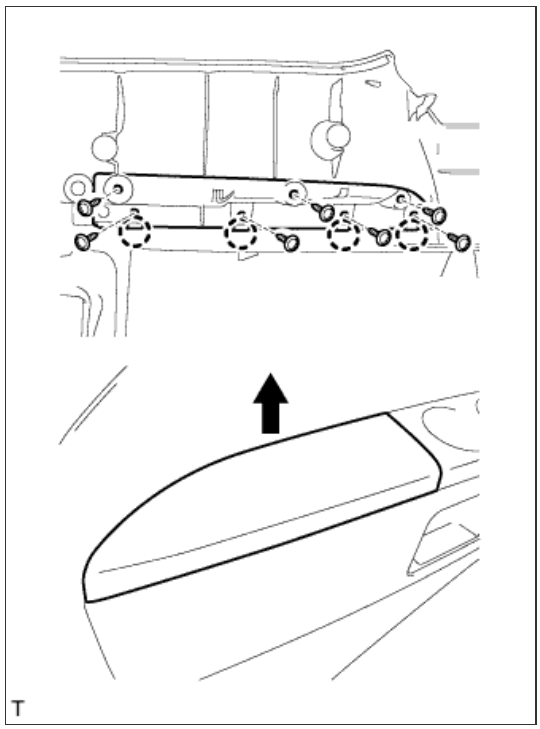


13. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/o Sliding Roof)

a. w/ Rear Heater:
Remove the 8 screws and duct.

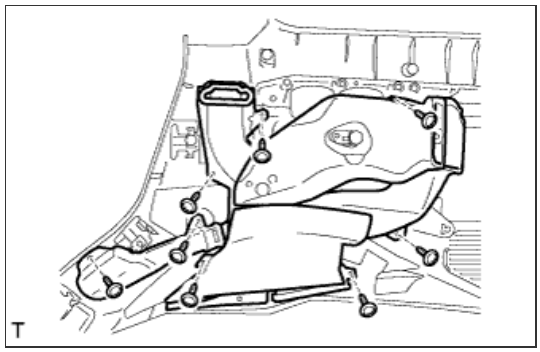

b. Remove the 7 screws.


c. Detach the 4 claws and remove the quarter trim cover.

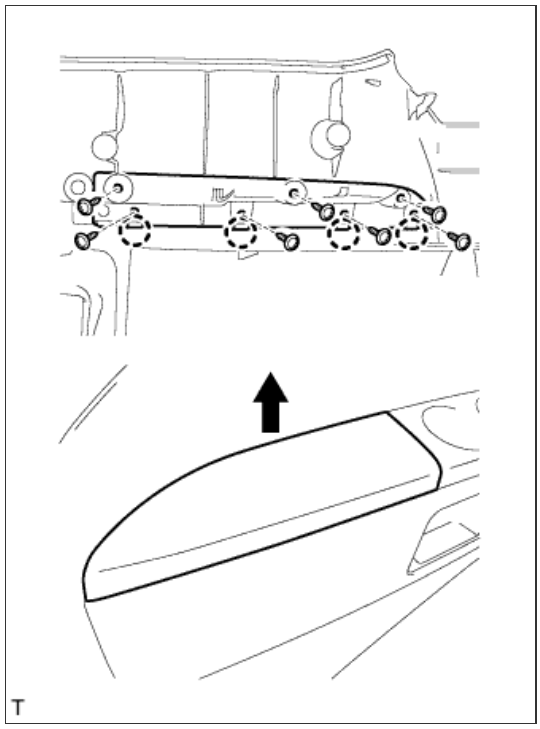

14. REMOVE REAR AIRBAG SENSOR

a. Remove the bolt and rear airbag sensor.

b. Disconnect the connector.

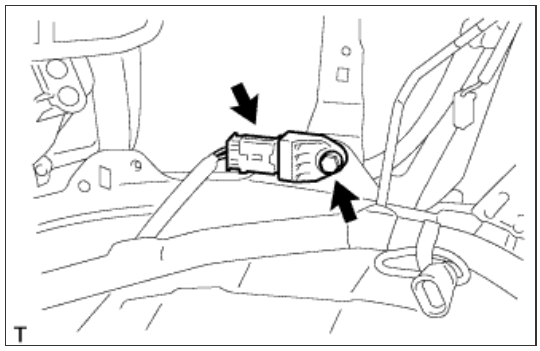

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY LH


a. Remove the rear No. 2 seat assembly LH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Split Bench Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).


4. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE (w/ Sliding Roof)

a. Detach the 6 clips and remove the support plate.

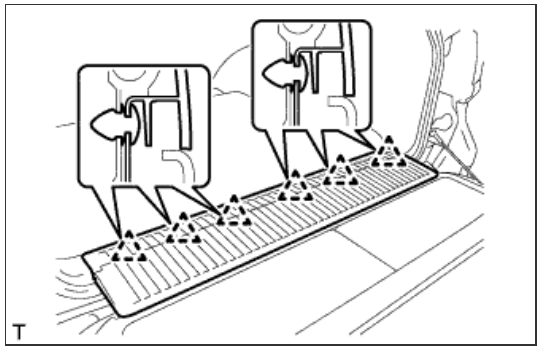

5. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE (w/o Sliding Roof)

a. Detach the 6 clips and remove the support plate.

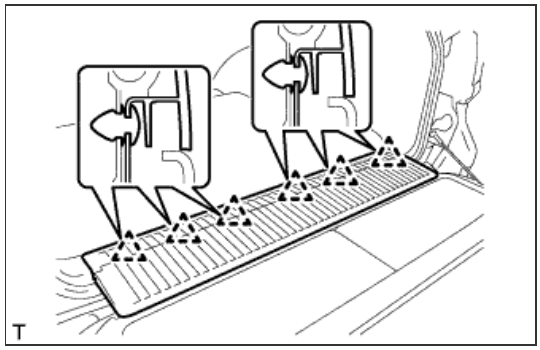


6. REMOVE REAR STEP COVER (w/ Sliding Roof)

HINT:

Use the same procedure to remove the step cover on the other side.

a. Detach the 2 claws and remove the step cover.

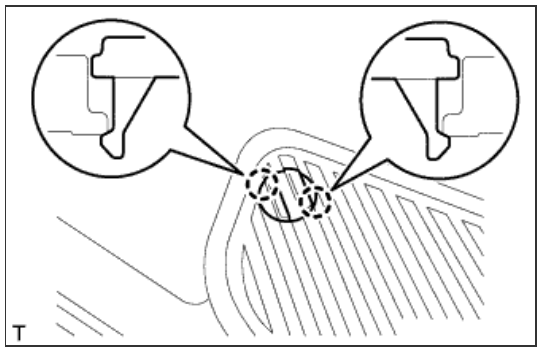


7. REMOVE REAR STEP COVER (w/o Sliding Roof)

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

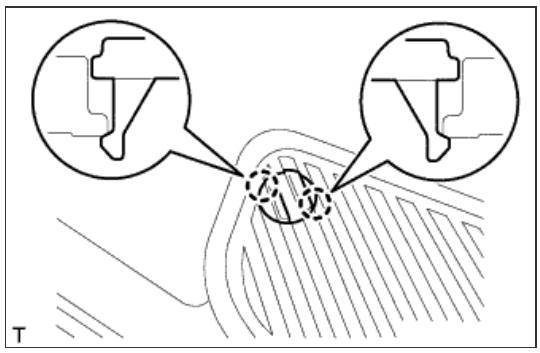

8. REMOVE REAR DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Remove the screw.


b. Detach the 3 claws and 4 clips, and remove the scuff plate.

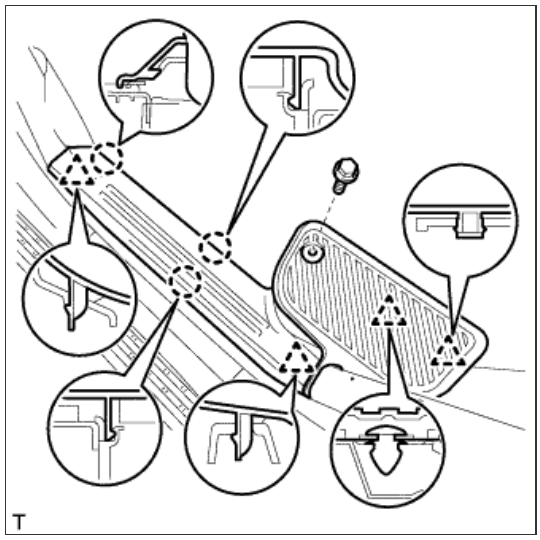

9. REMOVE REAR DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

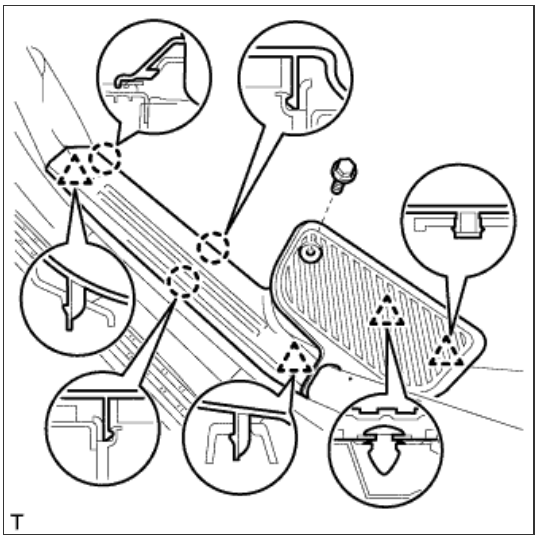

10. REMOVE REAR SEAT COVER CAP (w/ Sliding Roof)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

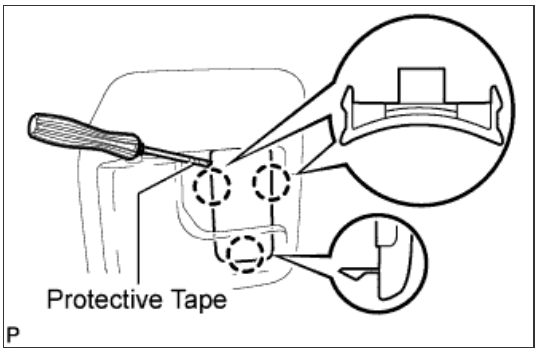

11. REMOVE REAR SEAT COVER CAP (w/o Sliding Roof)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


Tape the screwdriver tip before use.

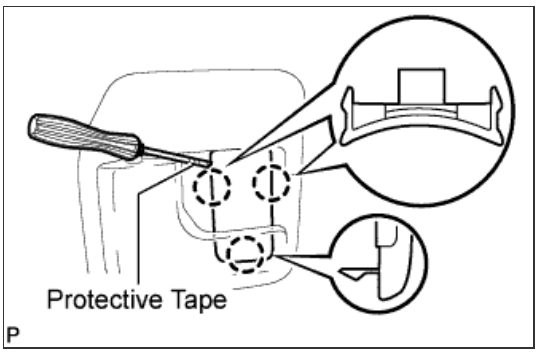


12. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/ Sliding Roof)

HINT:


When removing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

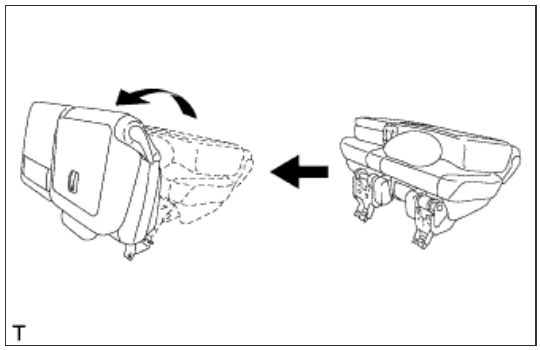


a. Detach the 3 claws and remove the cover.

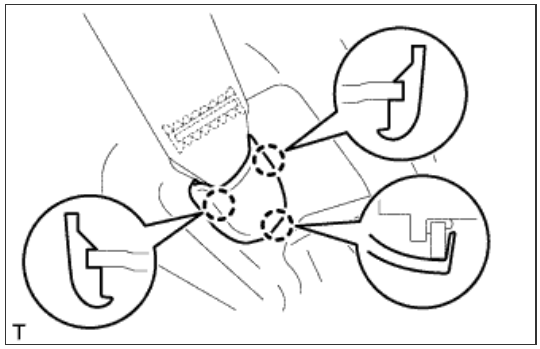

b. Remove the bolt and rear No. 1 seat belt anchor.

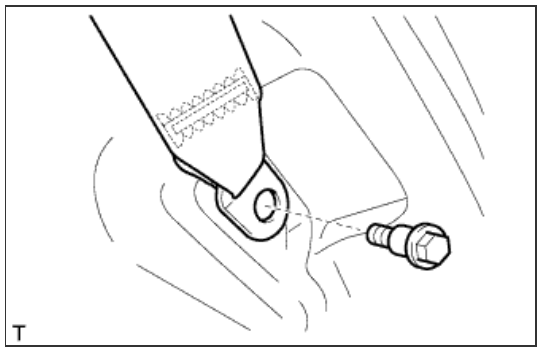

c. w/ Rear No. 2 Seat, except Face to Face Seat Type
Remove the bolt and rear No. 2 seat belt anchor.

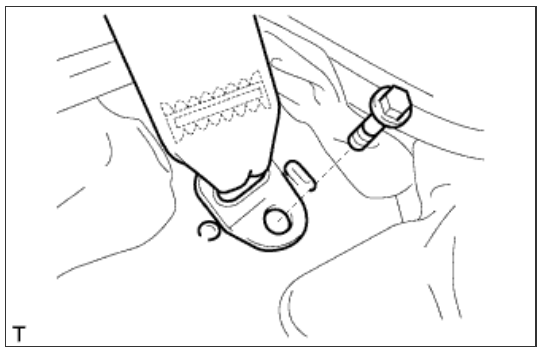


d. w/ Rear No. 2 Seat, except Face to Face Seat Type

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.


i .w/ Rear Air Conditioning System
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

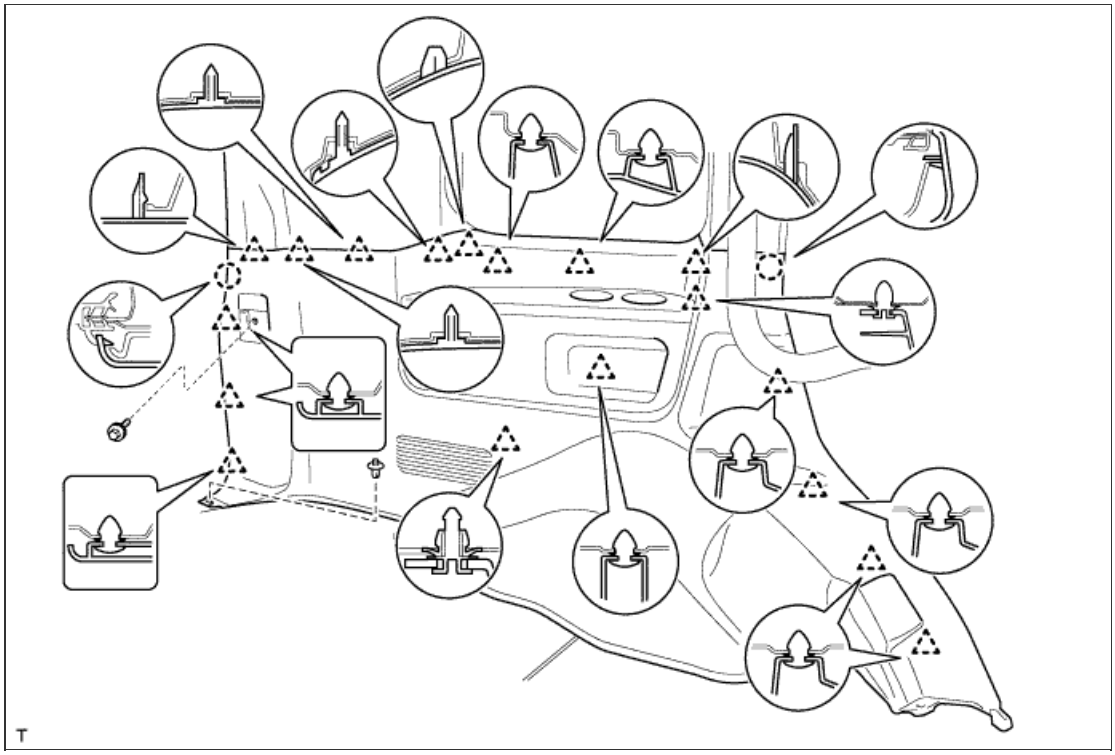

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

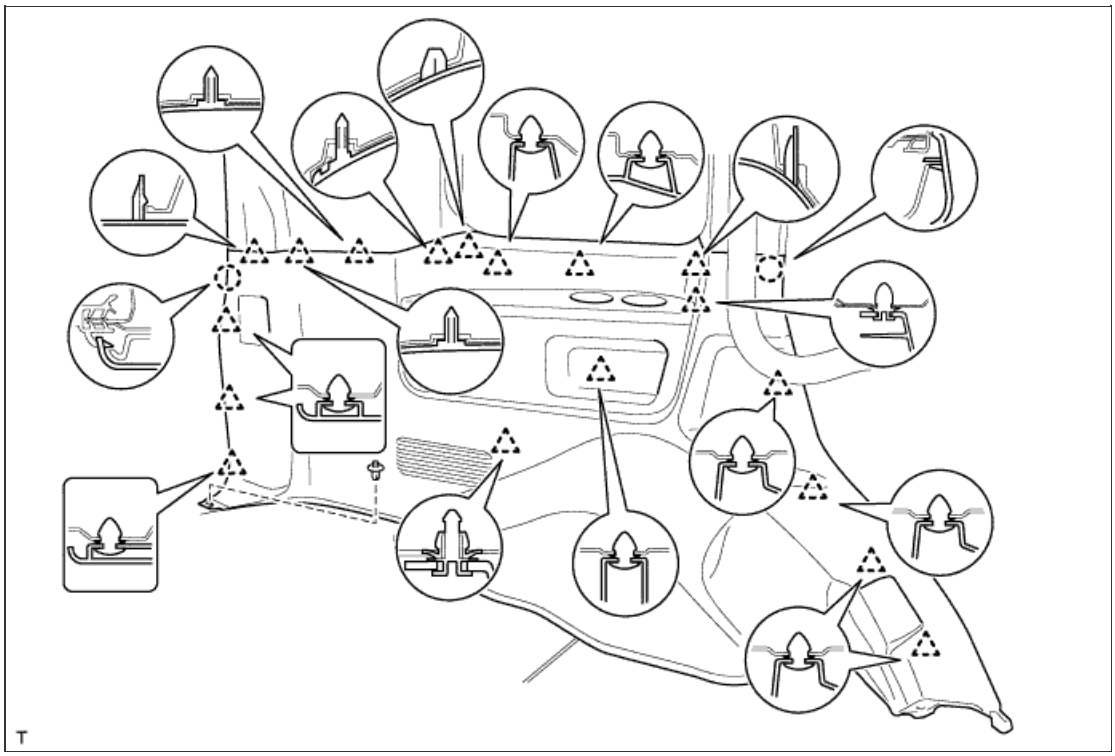


13. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/o Sliding Roof)

HINT:


When removing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

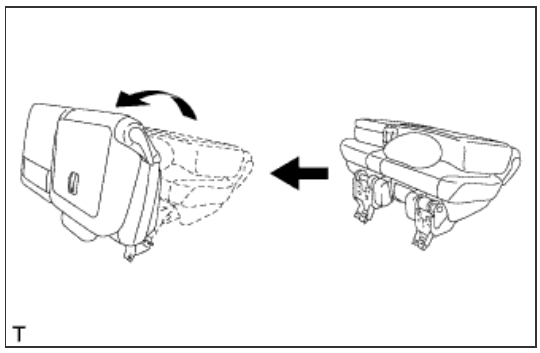


a. Detach the 3 claws and remove the cover.

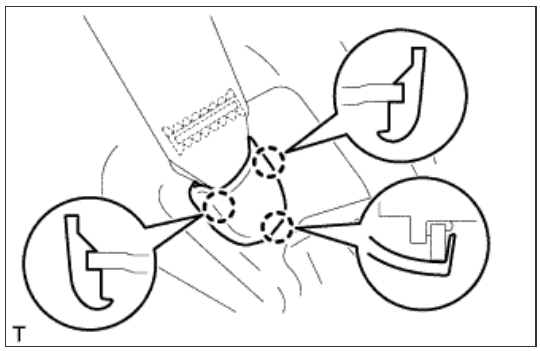

b. Remove the bolt and rear No. 1 seat belt anchor.

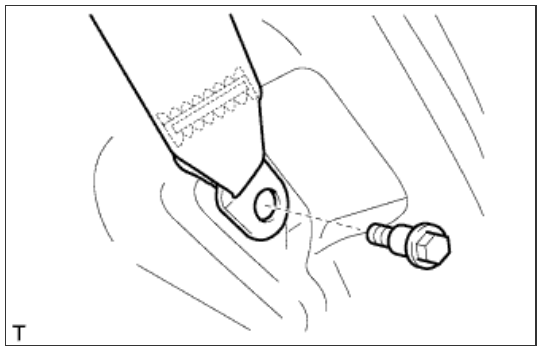

c. w/ Rear No. 2 Seat, except Face to Face Seat Type
Remove the bolt and rear No. 2 seat belt anchor.

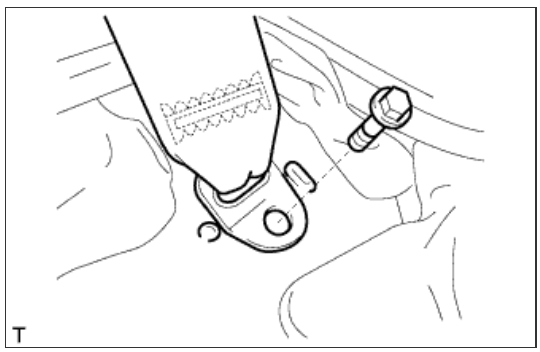

d. w/ Rear No. 2 Seat, except Face to Face Seat Type


i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.

i .w/ Rear Air Conditioning System


Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

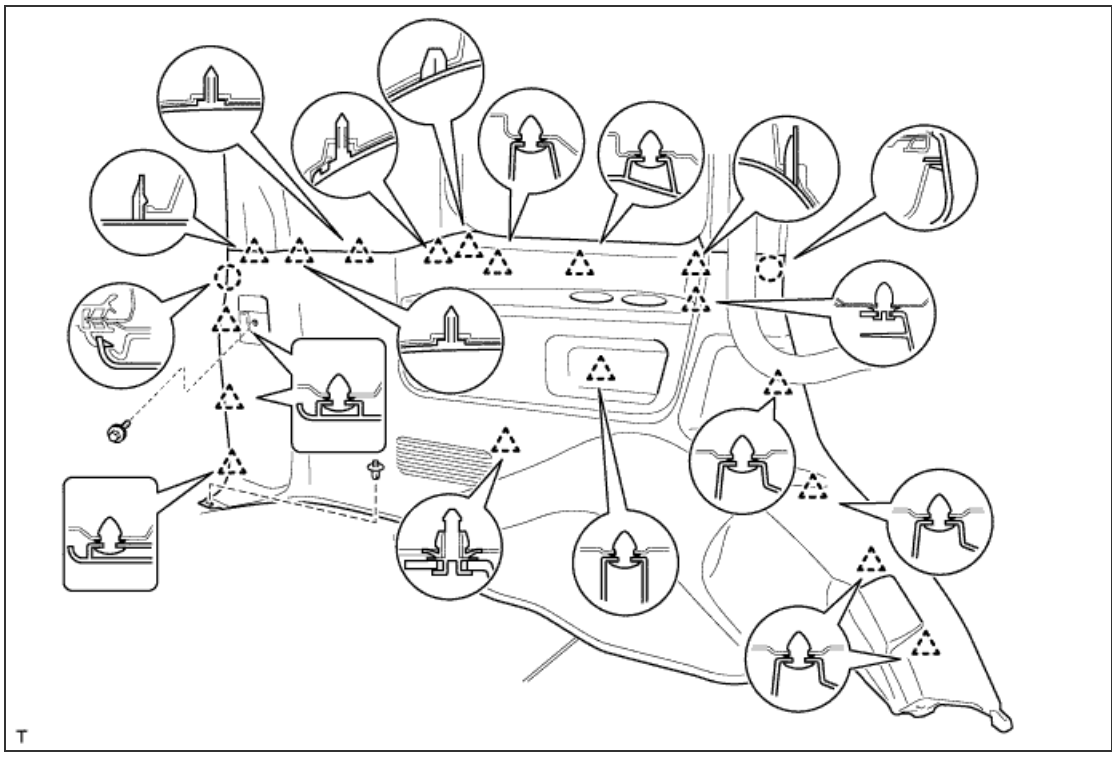

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

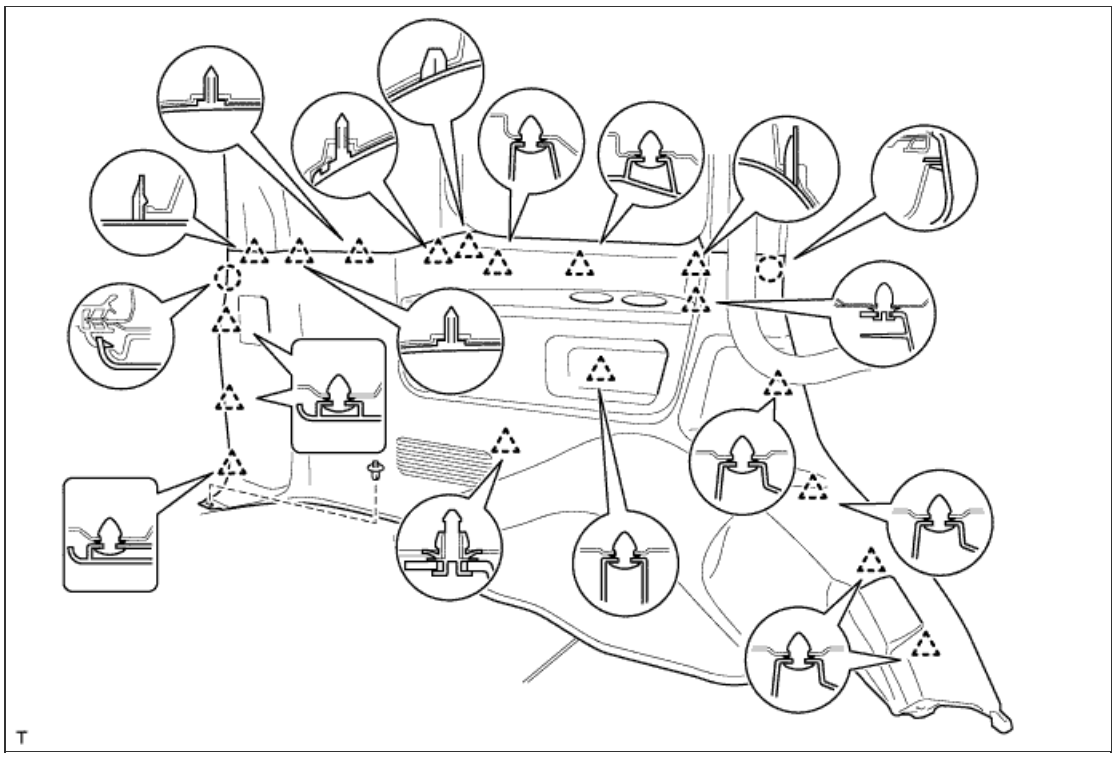

f. w/ Tonneau Cover

i. Remove the screw and clip.


ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

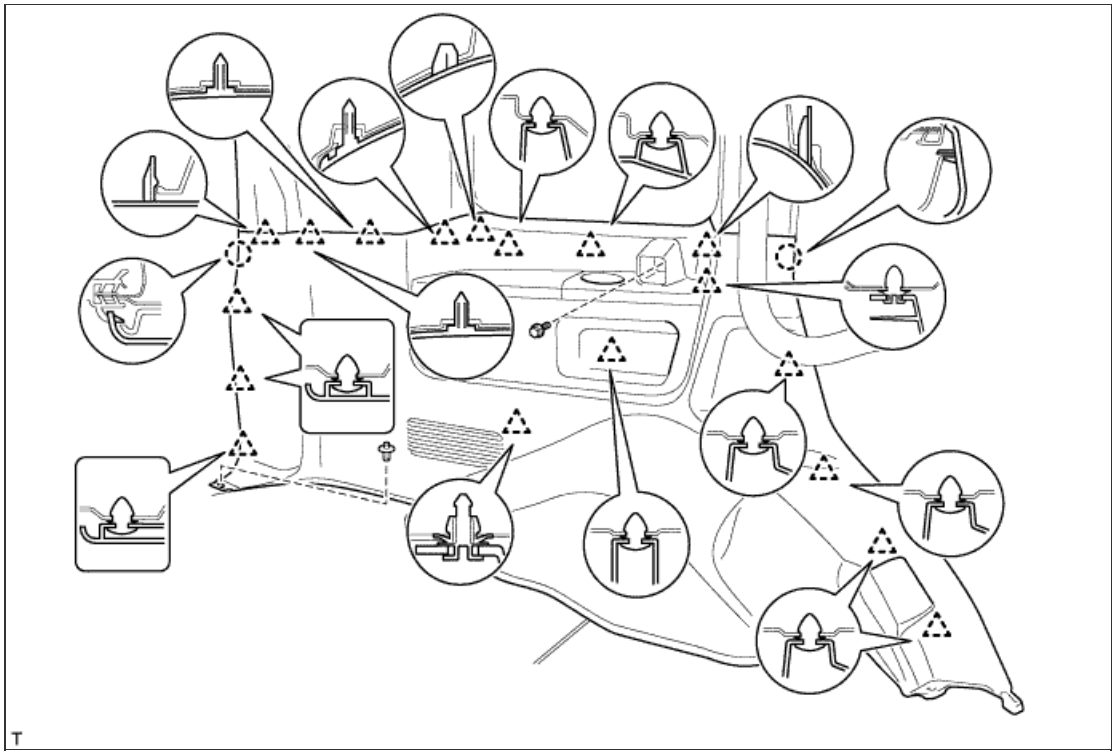

14. REMOVE REAR AIRBAG SENSOR

a. Remove the bolt and rear airbag sensor.

b. Disconnect the connector.

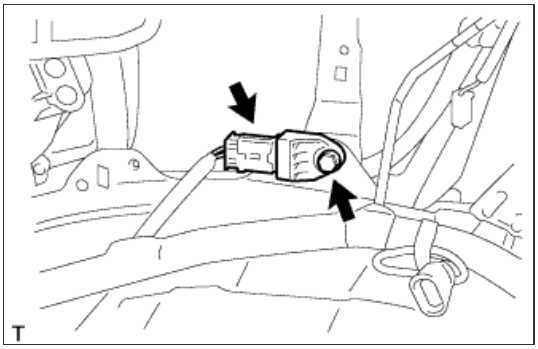


for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL REAR AIRBAG SENSOR

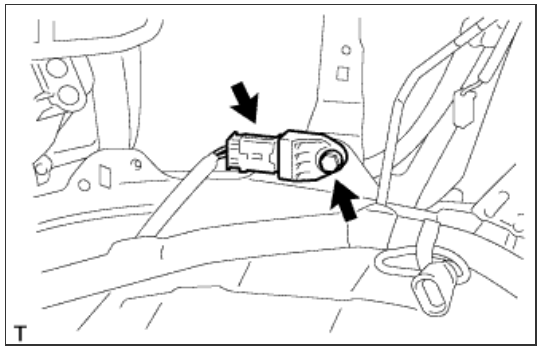

a. Check that the engine switch is turned off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Install the rear airbag sensor with the bolt.

Torque:
9.0 N*m{ 92 kgf*cm , 80 in.*lbf }


NOTICE:

- **If the rear airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the rear airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

d. Check that there is no looseness in the installation parts of the rear airbag sensor.

e. Connect the connector.


2. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/ Sliding Roof)

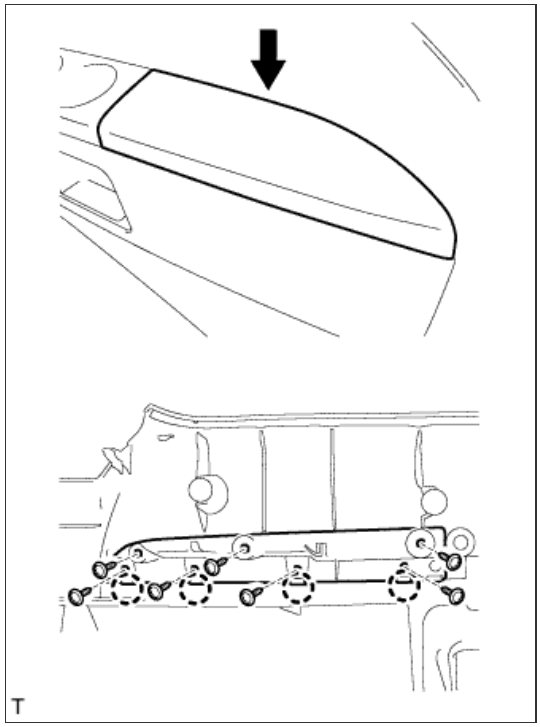

a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.


c. w/ Rear Heater:
Install the duct with the 8 screws.

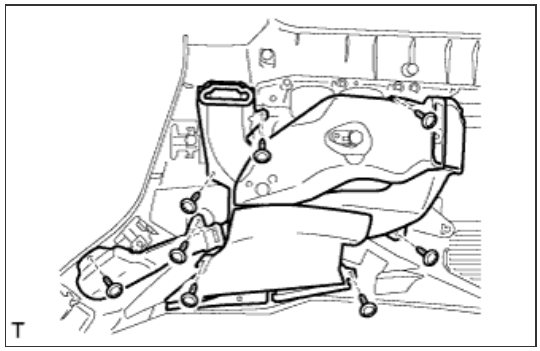


3. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/o Sliding Roof)

a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

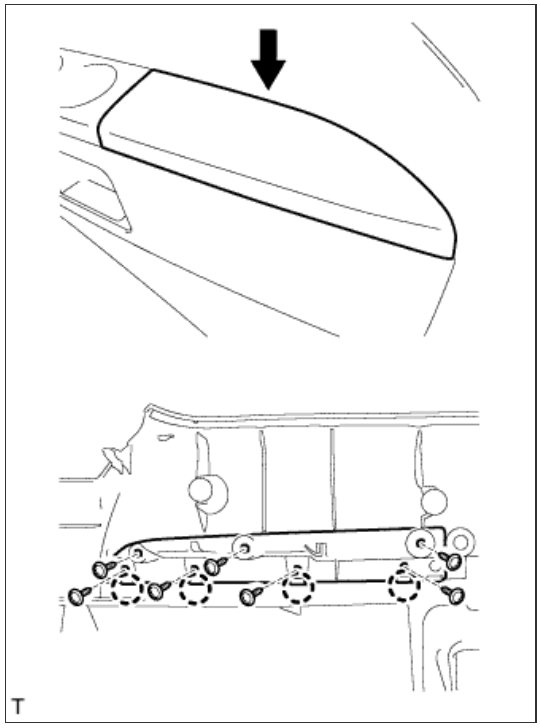

c. w/ Rear Heater:
Install the duct with the 8 screws.

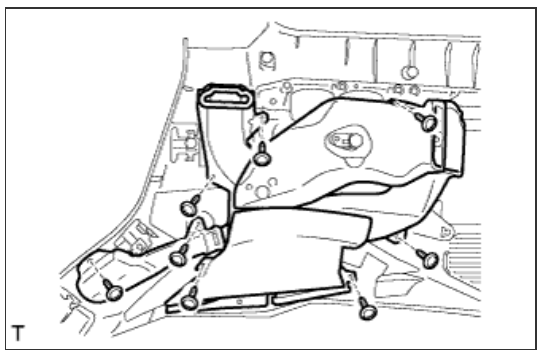


4. INSTALL REAR SEAT COVER CAP (w/ Sliding Roof)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

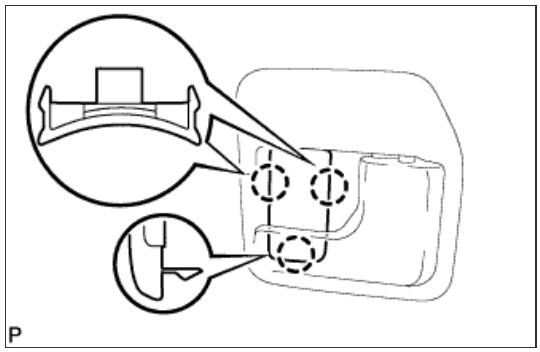


5. INSTALL REAR SEAT COVER CAP (w/o Sliding Roof)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.


a. Attach the 3 claws to install the rear seat cover cap.

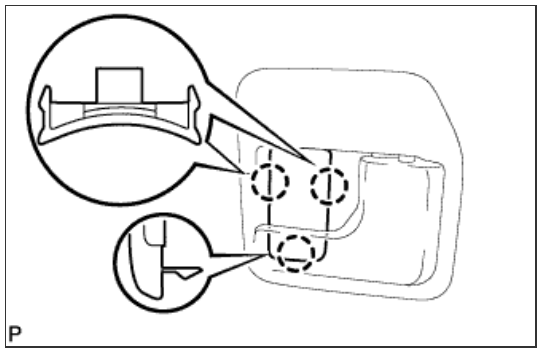

6. INSTALL REAR DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Attach the 3 claws and 4 clips to install the scuff plate.


b. Install the screw.

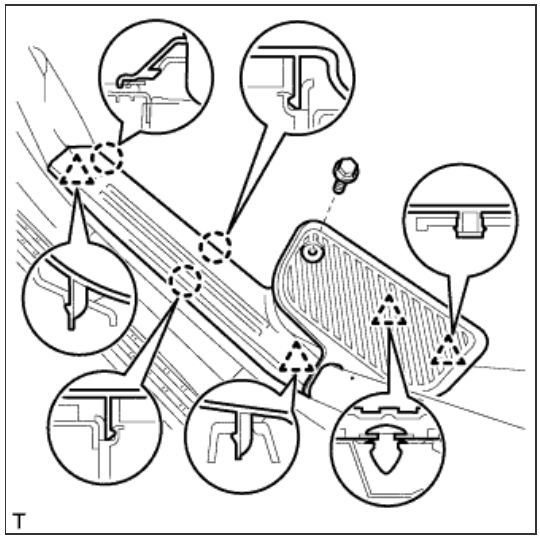

7. INSTALL REAR DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

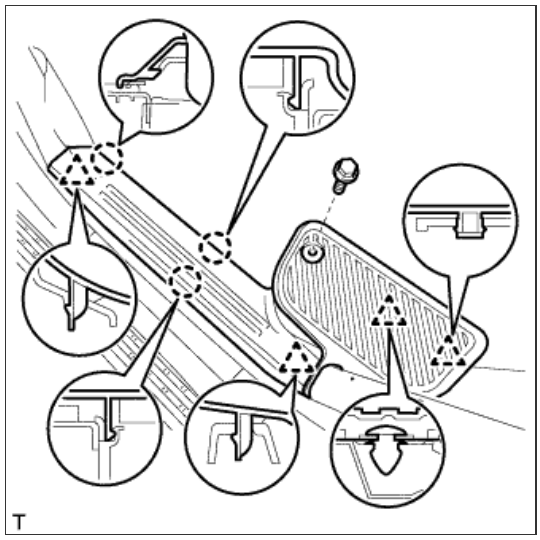


8. INSTALL REAR STEP COVER (w/ Sliding Roof)

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

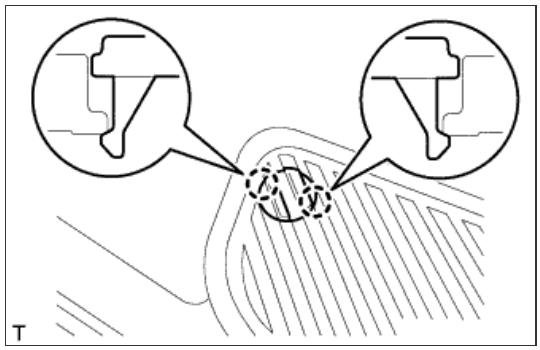


9. INSTALL REAR STEP COVER (w/o Sliding Roof)

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

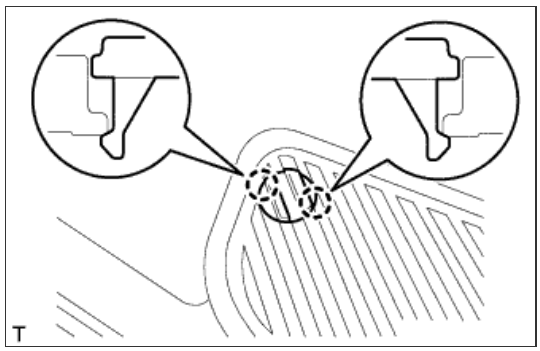


10. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE (w/ Sliding Roof)

a. Attach the 6 clips to install the support plate.

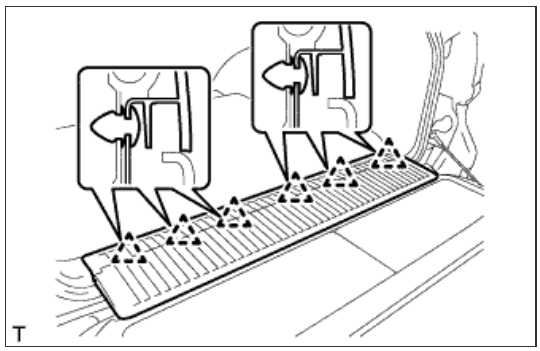

11. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the 6 clips to install the support plate.

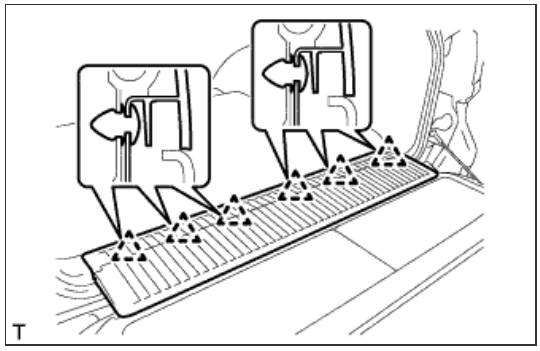

12. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Split Bench Seat Type)

a. Install the rear No. 2 seat assembly LH (Click here).

13. INSTALL REAR NO. 2 SEAT ASSEMBLY LH

a. Install the rear No. 2 seat assembly LH (Click here).

14. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

15. CHECK SRS WARNING LIGHT


a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL REAR AIRBAG SENSOR

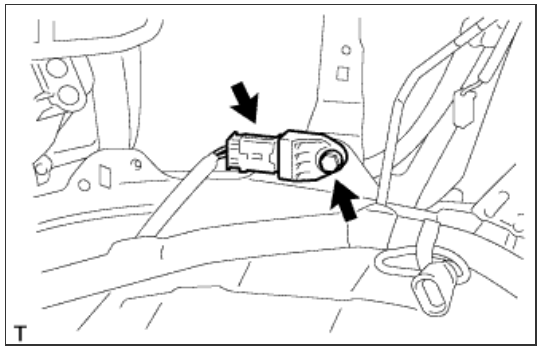

a. Check that the engine switch is turned off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Install the rear airbag sensor with the bolt.

Torque:
9.0 N*m{ 92 kgf*cm , 80 in.*lbf }


NOTICE:

- **If the rear airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the rear airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

d. Check that there is no looseness in the installation parts of the rear airbag sensor.

e. Connect the connector.


2. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/ Sliding Roof)

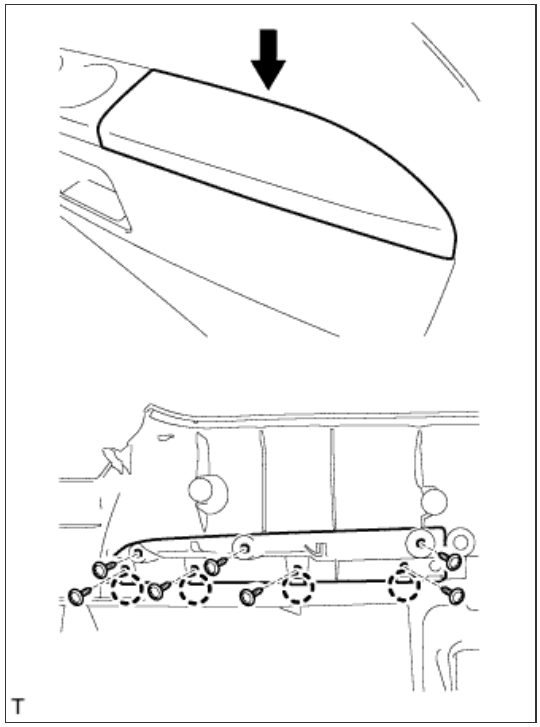

a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.


c. w/ Rear Heater:
Install the duct with the 8 screws.

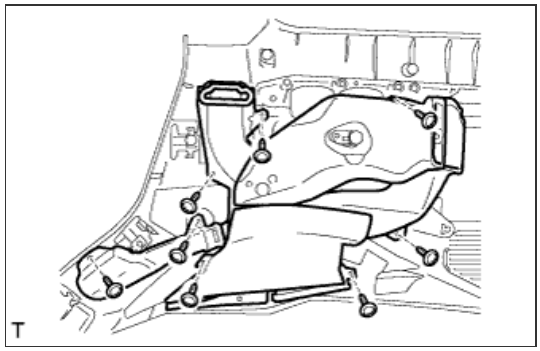


3. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/o Sliding Roof)

a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

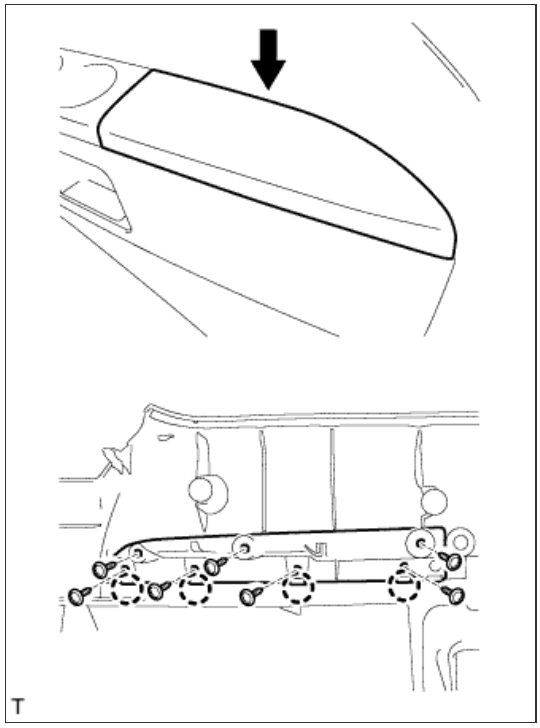

c. w/ Rear Heater:
Install the duct with the 8 screws.

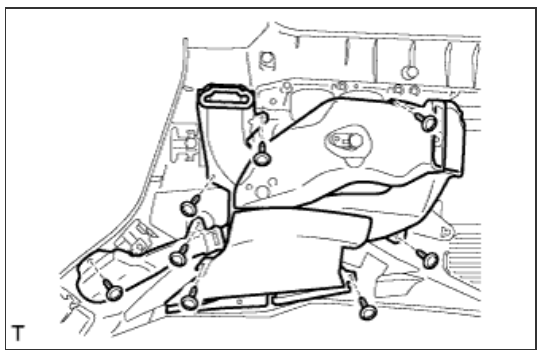


4. INSTALL REAR SEAT COVER CAP (w/ Sliding Roof)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

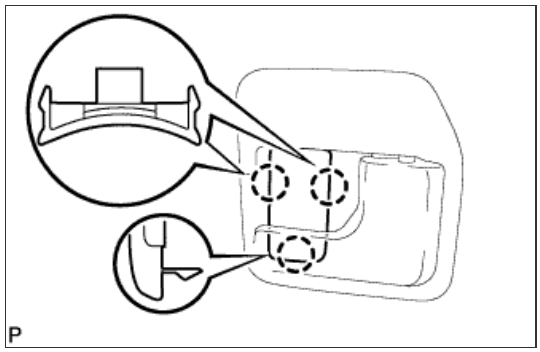


5. INSTALL REAR SEAT COVER CAP (w/o Sliding Roof)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.


a. Attach the 3 claws to install the rear seat cover cap.

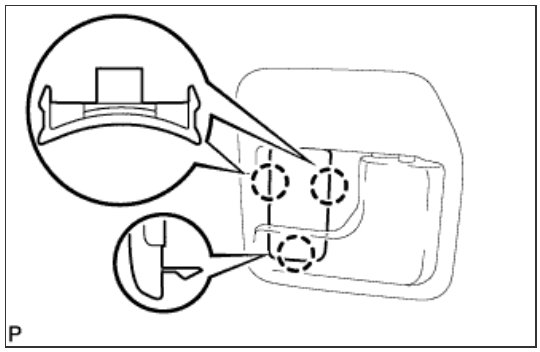

6. INSTALL REAR DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Attach the 3 claws and 4 clips to install the scuff plate.


b. Install the screw.

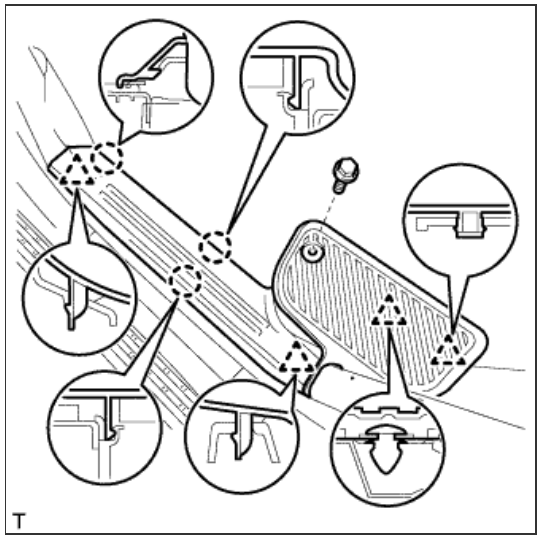

7. INSTALL REAR DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

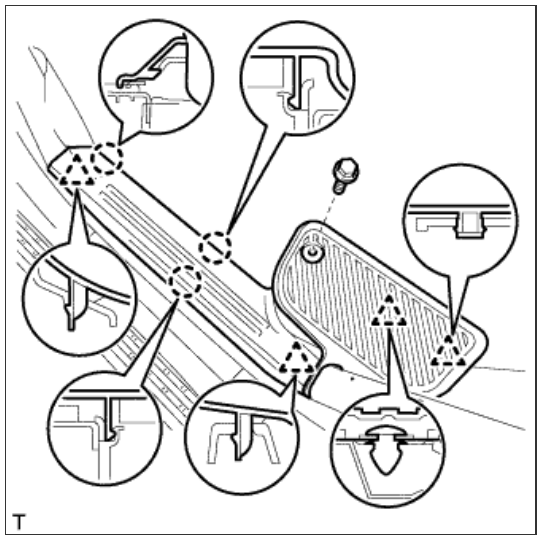


8. INSTALL REAR STEP COVER (w/ Sliding Roof)

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

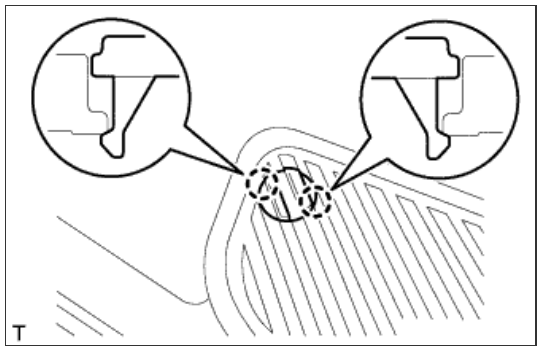


9. INSTALL REAR STEP COVER (w/o Sliding Roof)

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

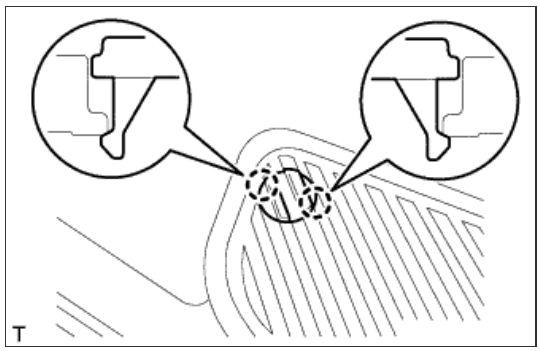


10. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE (w/ Sliding Roof)

a. Attach the 6 clips to install the support plate.

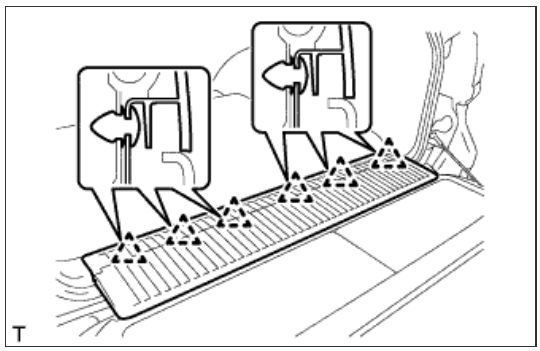

11. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the 6 clips to install the support plate.

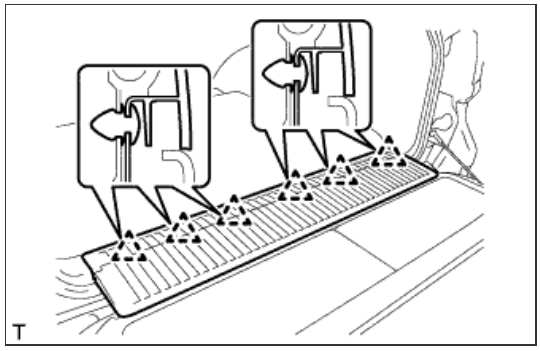

12. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Split Bench Seat Type)

a. Install the rear No. 2 seat assembly LH (Click here).

13. INSTALL REAR NO. 2 SEAT ASSEMBLY LH

a. Install the rear No. 2 seat assembly LH (Click here).

14. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

15. CHECK SRS WARNING LIGHT


a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. INSTALL REAR AIRBAG SENSOR

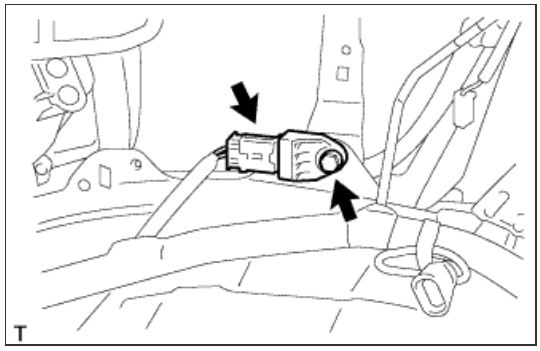

a. Check that the engine switch is turned off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Install the rear airbag sensor with the bolt.

Torque:
9.0 N*m{ 92 kgf*cm , 80 in.*lbf }

NOTICE:

- **If the rear airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the rear airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**


d. Check that there is no looseness in the installation parts of the rear airbag sensor.

e. Connect the connector.

2. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/ Sliding Roof)

HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

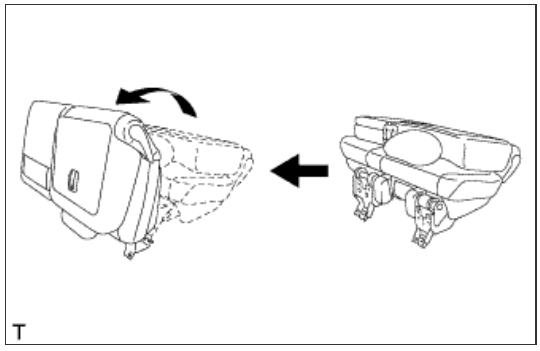

a. w/ Rear No. 2 Seat, except Face to Face Seat ype:


i. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

i . Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

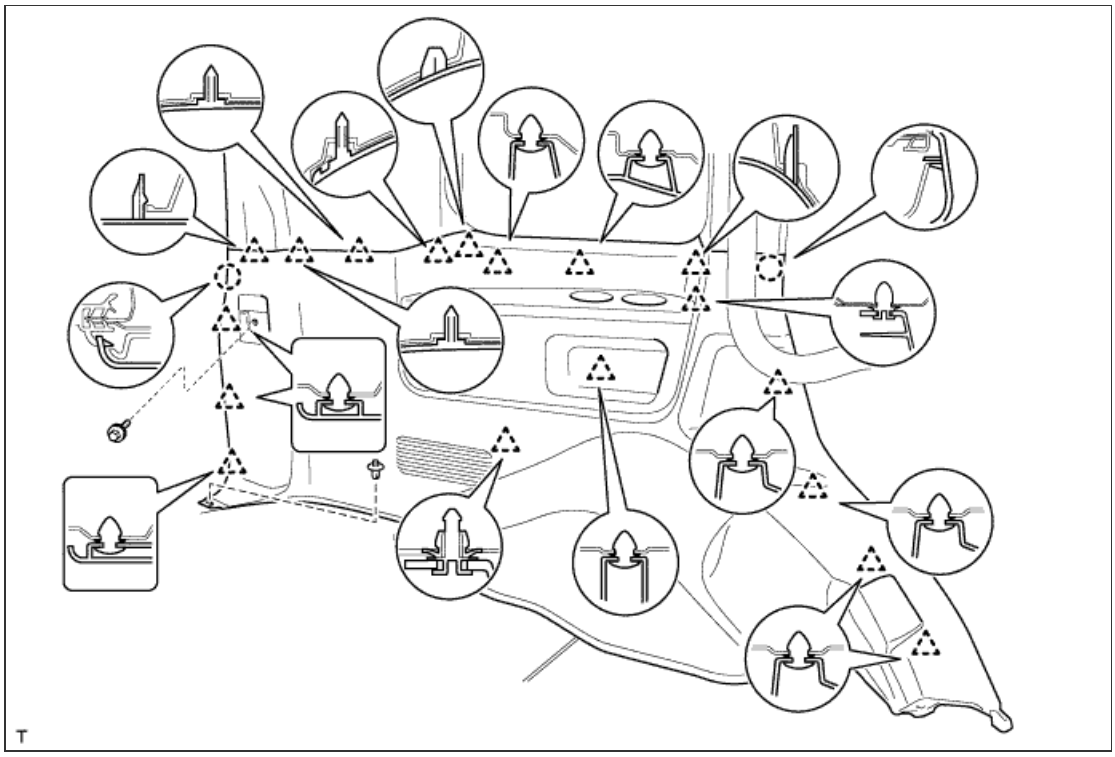

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the clip.

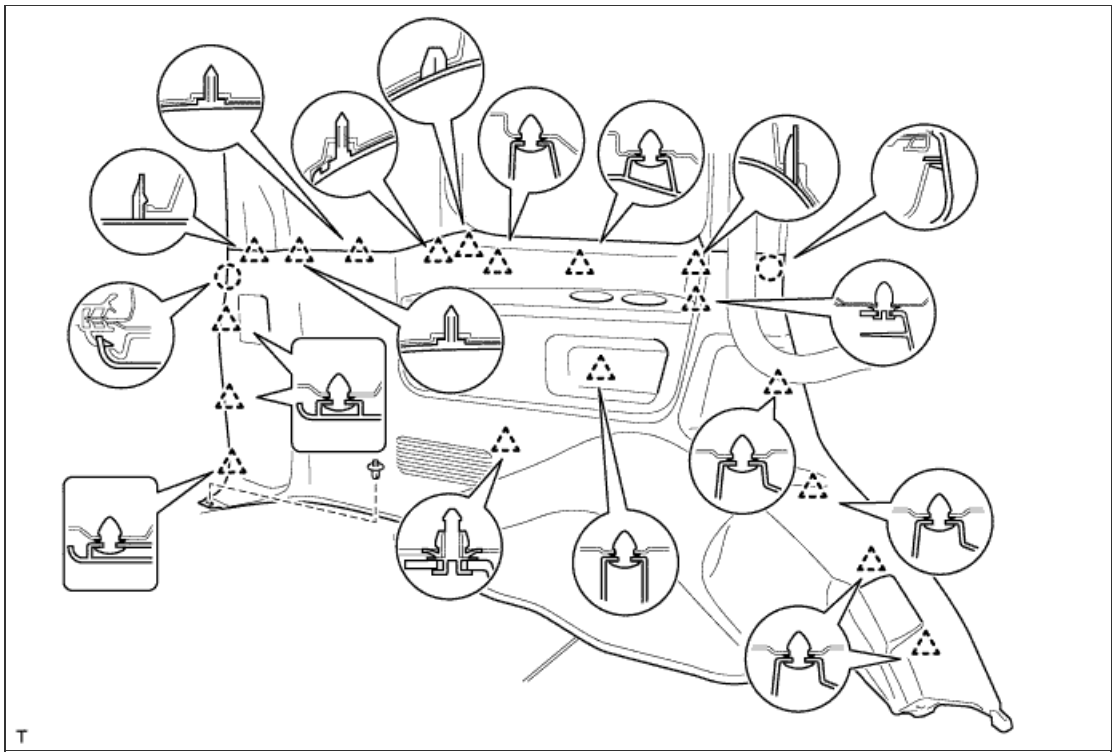


c. w/ Rear No. 2 Seat, except Face to Face Seat ype:
Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 1 ft.*lbf }


NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

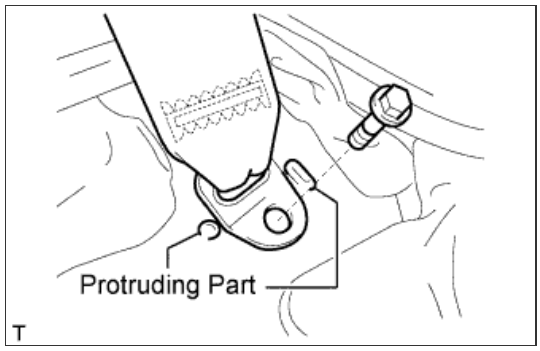


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 1 ft.*lbf }

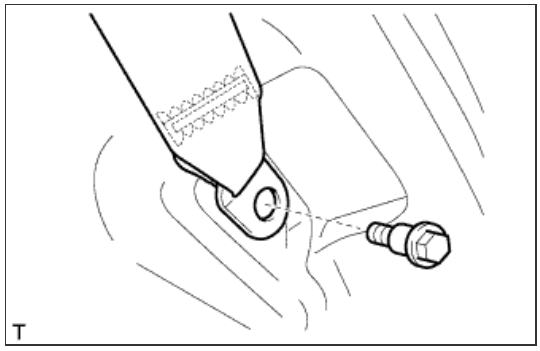

e. Attach the 3 claws to install the cover.

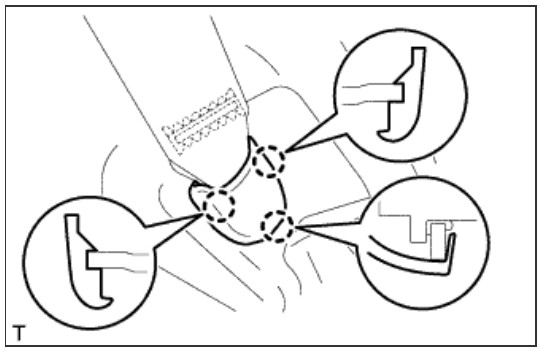


. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH (w/o Sliding Roof)

a. as the seat belt anchor through the quarter trim garnish.

b. Attach the clip and 2 guides to install the quarter trim garnish.

c. Install the screw.

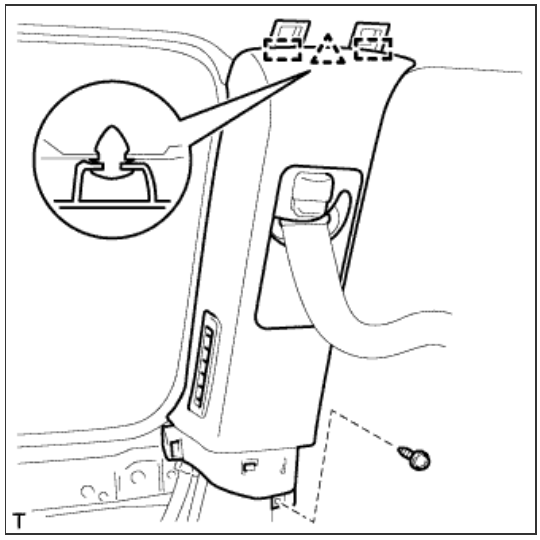


4. INSTALL REAR SEAT COVER CAP (w/ Sliding Roof)

HINT:

se the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

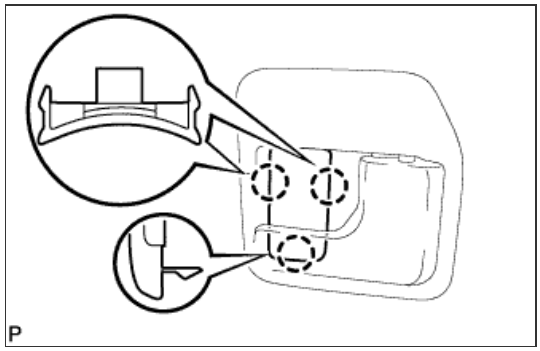


. INSTALL REAR SEAT COVER CAP (w/o Sliding Roof)

HINT:

se the same procedure to install the rear seat cover cap on the other side.


a. Attach the 3 claws to install the rear seat cover cap.

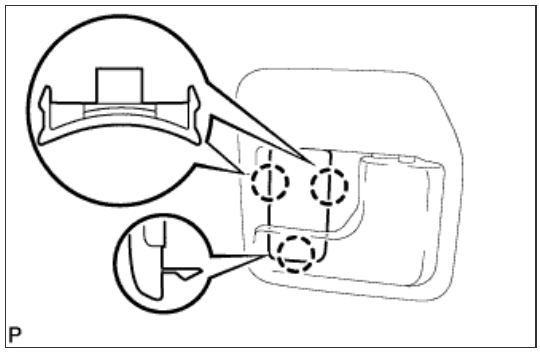

. INSTALL REAR OOR SCUFF PLATE LH (w/ Sliding Roof)

a. Attach the 3 claws and 4 clips to install the scuff plate.


b. Install the screw.

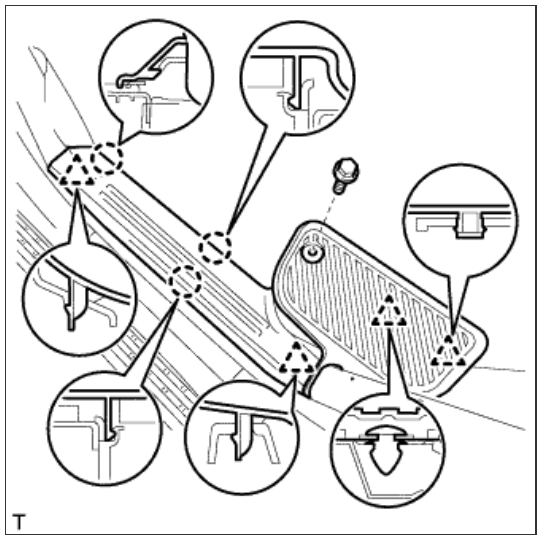

7. INSTALL REAR DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

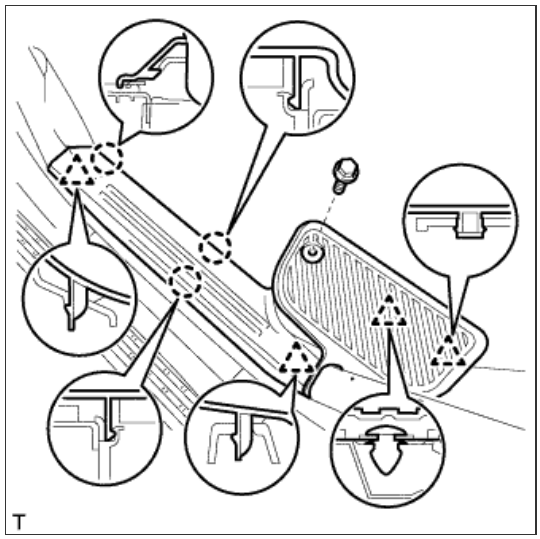


8. INSTALL REAR STEP COVER (w/ Sliding Roof)

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

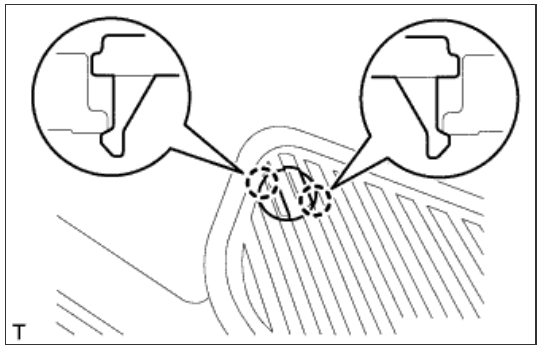


9. INSTALL REAR STEP COVER (w/o Sliding Roof)

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

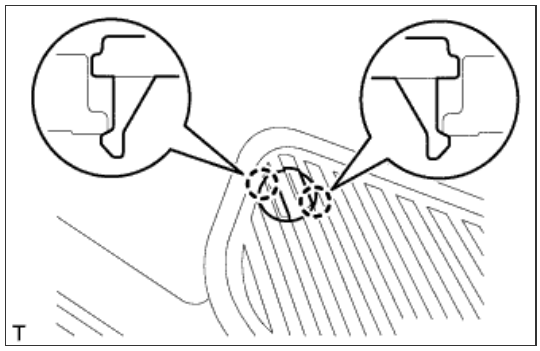


10. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE (w/ Sliding Roof)

a. Attach the 6 clips to install the support plate.

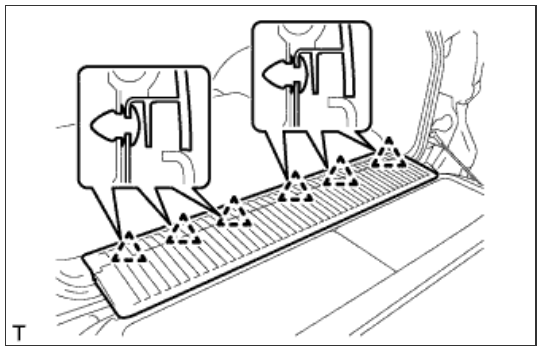

11. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE (w/o Sliding Roof)

a. Attach the 6 clips to install the support plate.

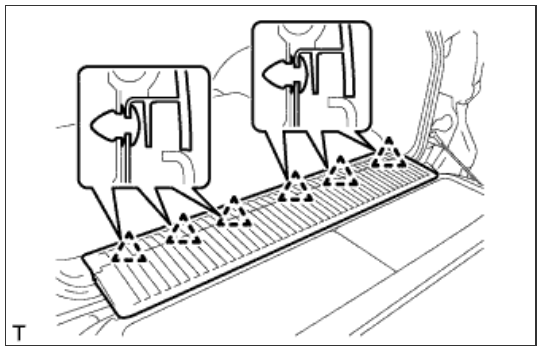

12. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Split Bench Seat Type)

a. Install the rear No. 2 seat assembly LH (Click here).

1 . INSTALL REAR NO. 2 SEAT ASSEMBLY LH

a. Install the rear No. 2 seat assembly LH (Click here).

14. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

1 . CHEC SRSWARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

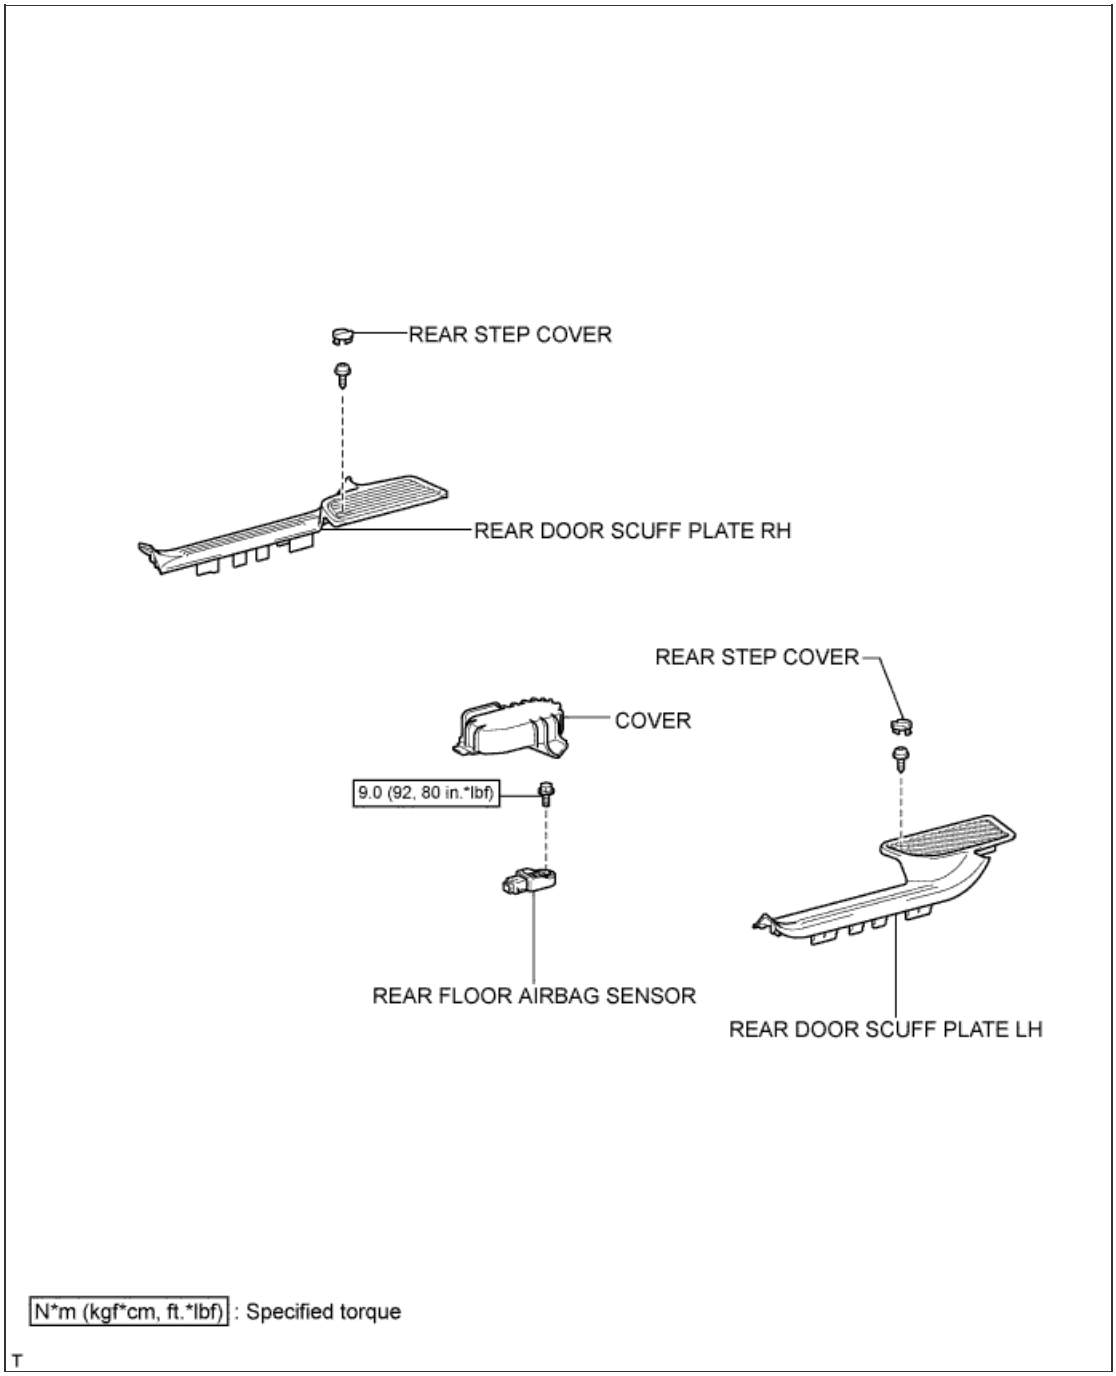

for Preparation Click here

1. CHECK REAR FLOOR AIRBAG SENSOR (VEHICLE NOT INVOLVE IN COLLISION)

a. Perform a diagnostic system check (Click here).

2. CHECK REAR FLOOR AIRBAG SENSOR (VEHICLE INVOLVE IN COLLISION AN AIRBAG HAS NOT EPLOYE

a. Perform a diagnostic system check (Click here).

b. When airbags have deployed as the result of a collision, be certain to replace the rear floor airbag sensor when it is in the damaged area (anywhere in need of repair). rthermore, it is also necessary to replace the rear floor airbag sensor in an undamaged area that has registered a major collision, or which exhibits any of the following abnormalities:

- Cracks, dents or chips on the sensor housing.
- Cracks or other damage to the connector.
- Peeling off of the label or damage to the serial number.

CAUTION:

or removal and installation procedures of the rear floor airbag sensor, be sure to follow the correct procedure.

3. CHECK REAR FLOOR AIRBAG SENSOR (VEHICLE INVOLVE IN COLLISION AN AIRBAG IS EPLOYE

a. When airbags have deployed as the result of a collision, be certain to replace the rear floor airbag sensor in the damaged area (anywhere in need of repair). rthermore, it is also necessary to replace the rear floor airbag sensor in a undamaged area that has registered a major collision, or which exhibits any of the following abnormalities:

- Cracks, dents or chips on the sensor housing.
- Cracks or other damage to the connector.
- Peeling off of the label or damage to the serial number.

CAUTION:

or removal and installation procedures of the rear floor airbag sensor, be sure to follow the correct procedure.

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR STEP COVER (w/ Sliding Roof)

HINT:

Use the same procedure to remove the step cover on the other side.

a. Detach the 2 cla s and remove the step cover.

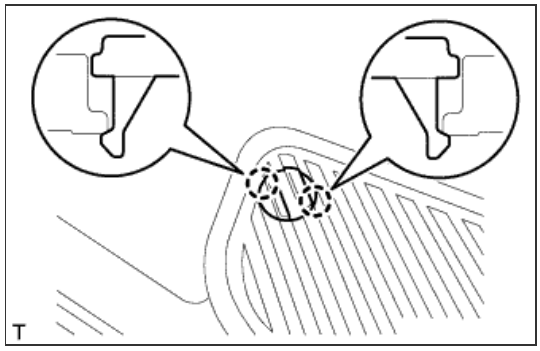


3. REMOVE REAR STEP COVER (w/o Sliding Roof)

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 cla s and remove the step cover.

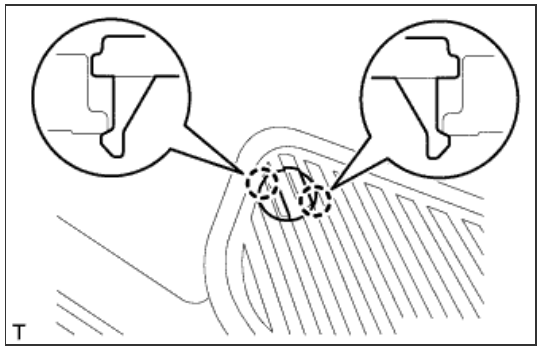

4. REMOVE REAR DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Remove the scre


b. etach the 3 cla s and 4 clips, and remove the scuff plate.

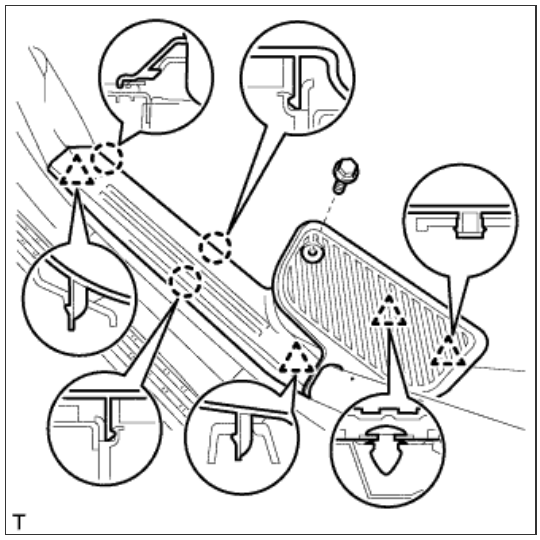

5. REMOVE REAR DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Remove the scre

b. etach the 3 cla s and 4 clips, and remove the scuff plate.

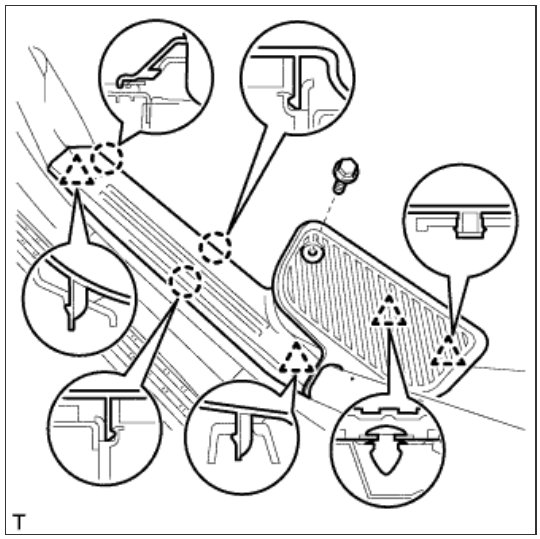

6. REMOVE REAR DOOR SCUFF PLATE RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

7. REMOVE REAR DOOR SCUFF PLATE RH (w/o Sliding Roof)


HINT:

Use the same procedures described for the LH side.

8. REMOVE REAR FLOOR AIRBAG SENSOR


a. Fold back the floor carpet.

b. Detach the clip and cla and remove the cover.

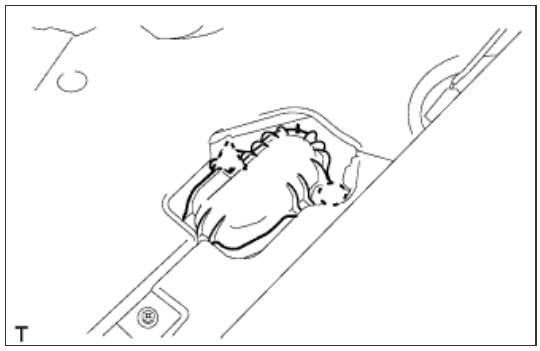

c. Remove the bolt and sensor.

d. Disconnect the connector.

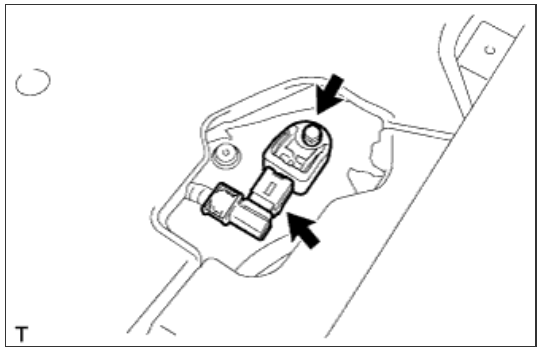

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR STEP COVER (w/ Sliding Roof)

HINT:

Use the same procedure to remove the step cover on the other side.

a. Detach the 2 cla s and remove the step cover.

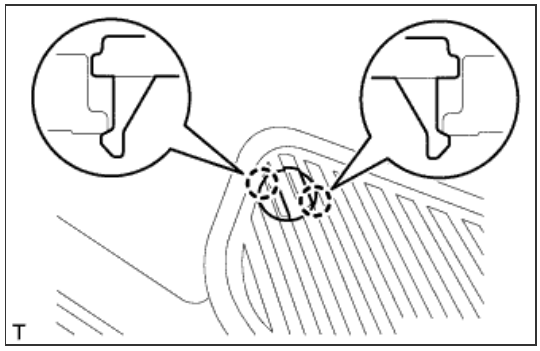


3. REMOVE REAR STEP COVER (w/o Sliding Roof)

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 cla s and remove the step cover.

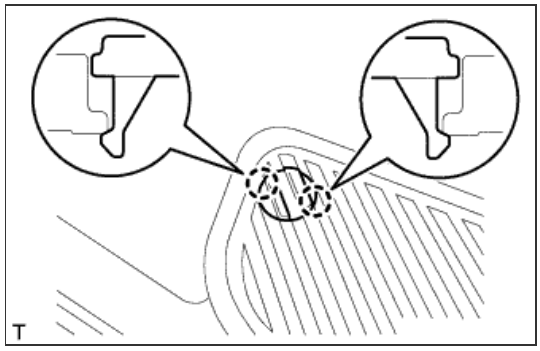

4. REMOVE REAR DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Remove the scre


b. etach the 3 cla s and 4 clips, and remove the scuff plate.

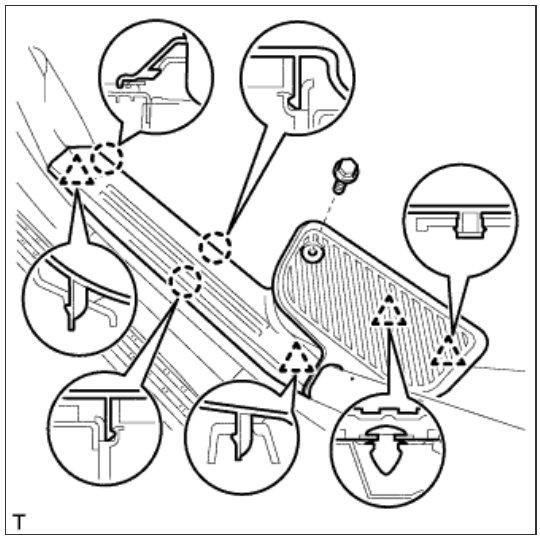

5. REMOVE REAR DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Remove the scre

b. etach the 3 cla s and 4 clips, and remove the scuff plate.

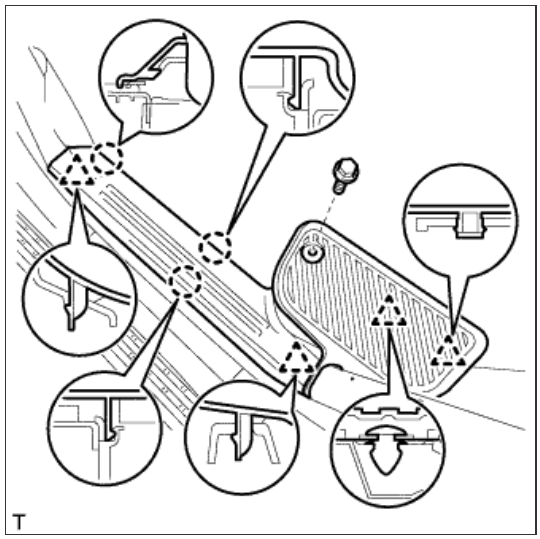

6. REMOVE REAR DOOR SCUFF PLATE RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

7. REMOVE REAR DOOR SCUFF PLATE RH (w/o Sliding Roof)


HINT:

Use the same procedures described for the LH side.

8. REMOVE REAR FLOOR AIRBAG SENSOR


a. Fold back the floor carpet.

b. Detach the clip and cla and remove the cover.

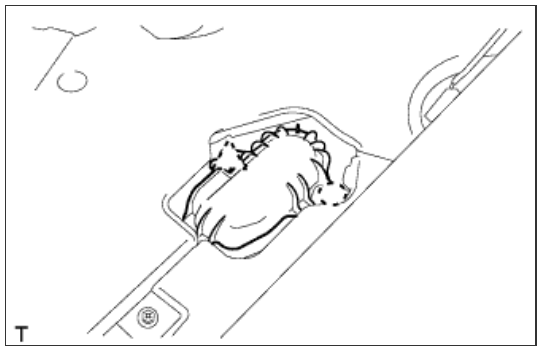

c. Remove the bolt and sensor.

d. Disconnect the connector.

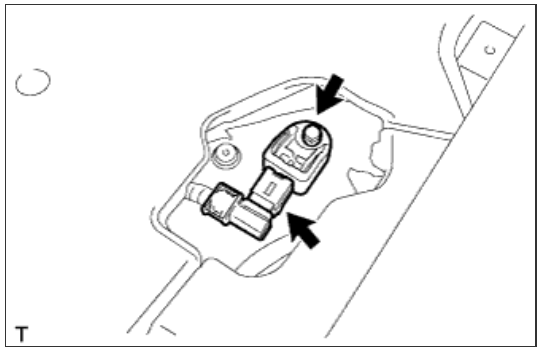

for Preparation Click here

1. INSTALL REAR FLOOR AIRBAG SENSOR

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Install the rear floor airbag sensor with the bolt.

Torque:
9.0 N*m{ 92 kgf*cm , 80 in.*lbf }

NOTICE:

- **If the rear floor airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the rear floor airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

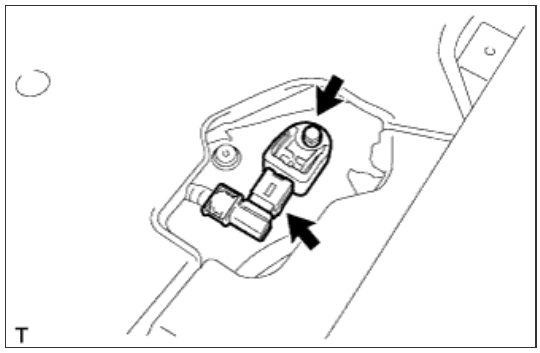


d. Check that there is no looseness in the installation parts of the rear floor airbag sensor.

e. Connect the connector.

f. Attach the clip, claw and cover.

g. Return the floor carpet to its original position.

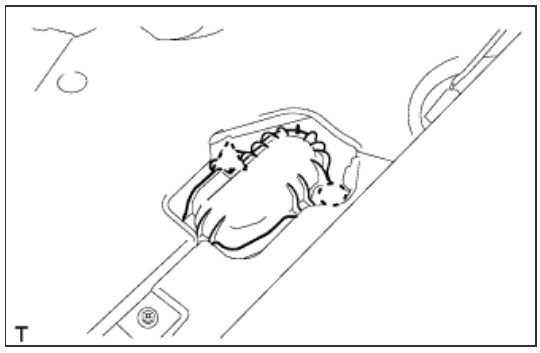

2. INSTALL REAR DOOR SCUFF PLATE RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

3. INSTALL REAR DOOR SCUFF PLATE RH (w/o Sliding Roof)


HINT:

Use the same procedures described for the LH side.

4. INSTALL REAR DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Attach the 3 claws and 4 clips to install the scuff plate.


b. Install the screw.

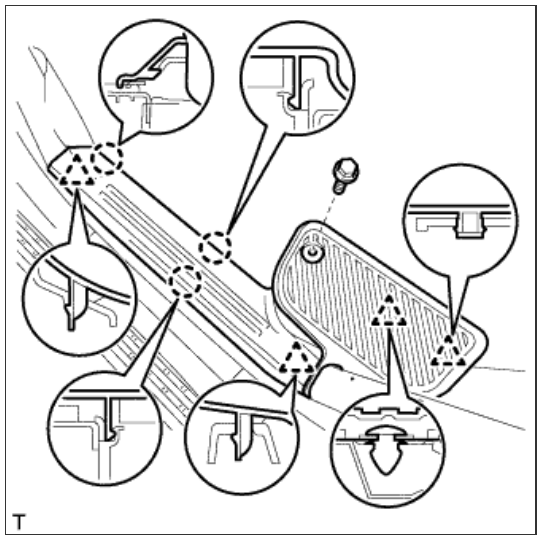

5. INSTALL REAR DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

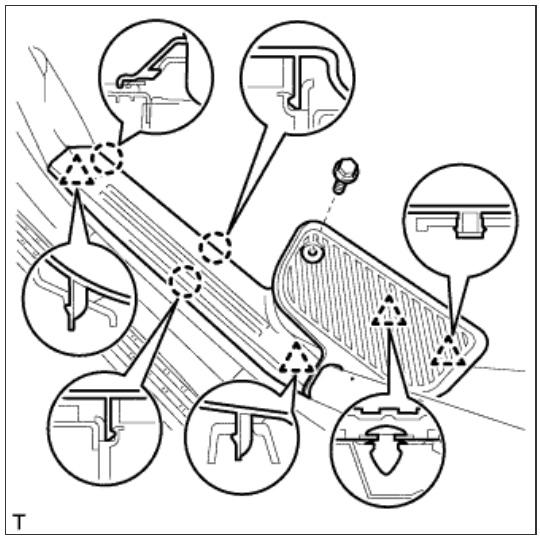


6. INSTALL REAR STEP COVER (w/ Sliding Roof)

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

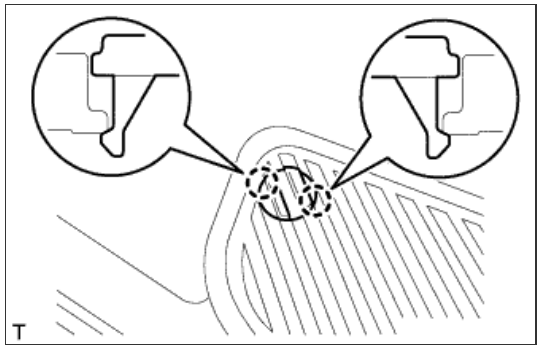


7. INSTALL REAR STEP COVER (w/o Sliding Roof)

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

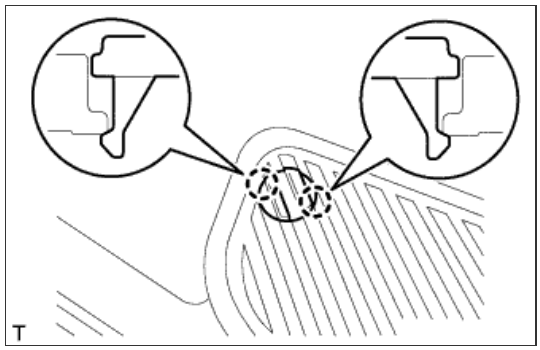

8. CONNECT CABLE TO NEGATIVE BATTERY TER INAL

NOTICE:

hen disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here)

9. CHEC SRS WARNING LIGHT

a. Check the SRS warning light (Click here)

for Preparation Click here

1. INSTALL REAR FLOOR AIRBAG SENSOR

a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Install the rear floor airbag sensor with the bolt.

Torque:
9.0 N*m{ 92 kgf*cm , 80 in.*lbf }

NOTICE:

- **If the rear floor airbag sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace it with a new one.**
- **When installing the rear floor airbag sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

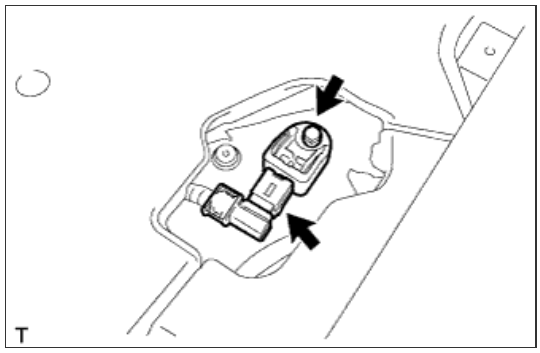


d. Check that there is no looseness in the installation parts of the rear floor airbag sensor.

e. Connect the connector.

f. Attach the clip, claw and cover.

g. Return the floor carpet to its original position.

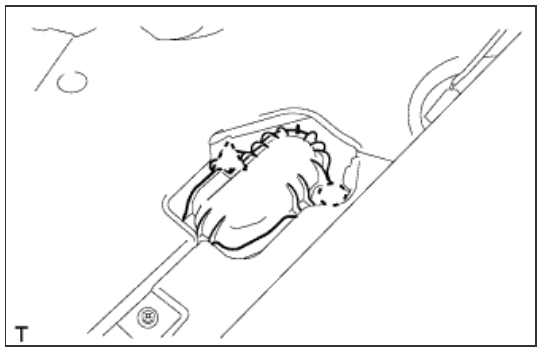

2. INSTALL REAR DOOR SCUFF PLATE RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

3. INSTALL REAR DOOR SCUFF PLATE RH (w/o Sliding Roof)


HINT:

Use the same procedures described for the LH side.

4. INSTALL REAR DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Attach the 3 claws and 4 clips to install the scuff plate.


b. Install the screw.

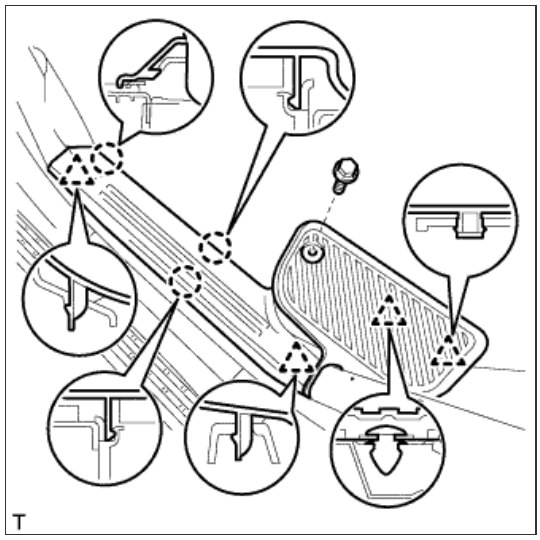

5. INSTALL REAR DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

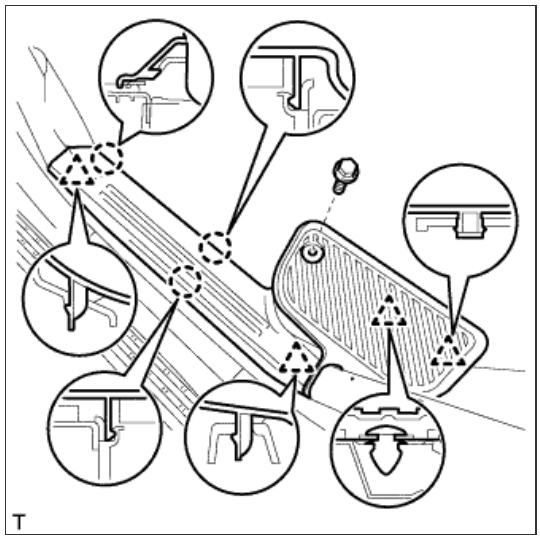


6. INSTALL REAR STEP COVER (w/ Sliding Roof)

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

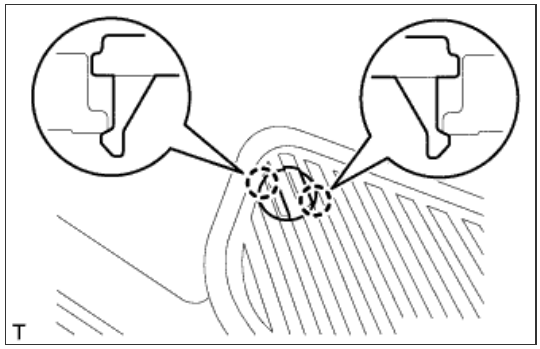


7. INSTALL REAR STEP COVER (w/o Sliding Roof)

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

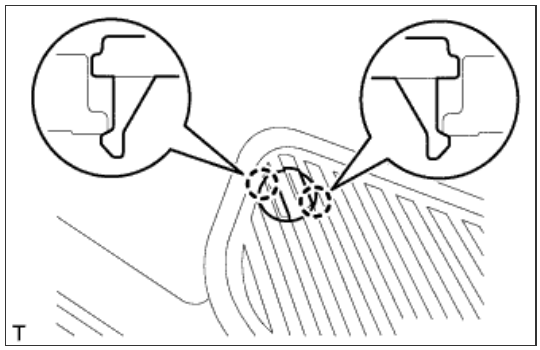

8. CONNECT CABLE TO NEGATIVE BATTERY TER INAL


NOTICE:

hen disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here)

9. CHEC SRS WARNING LIGHT

a. Check the SRS warning light (Click here)

for Preparation Click here

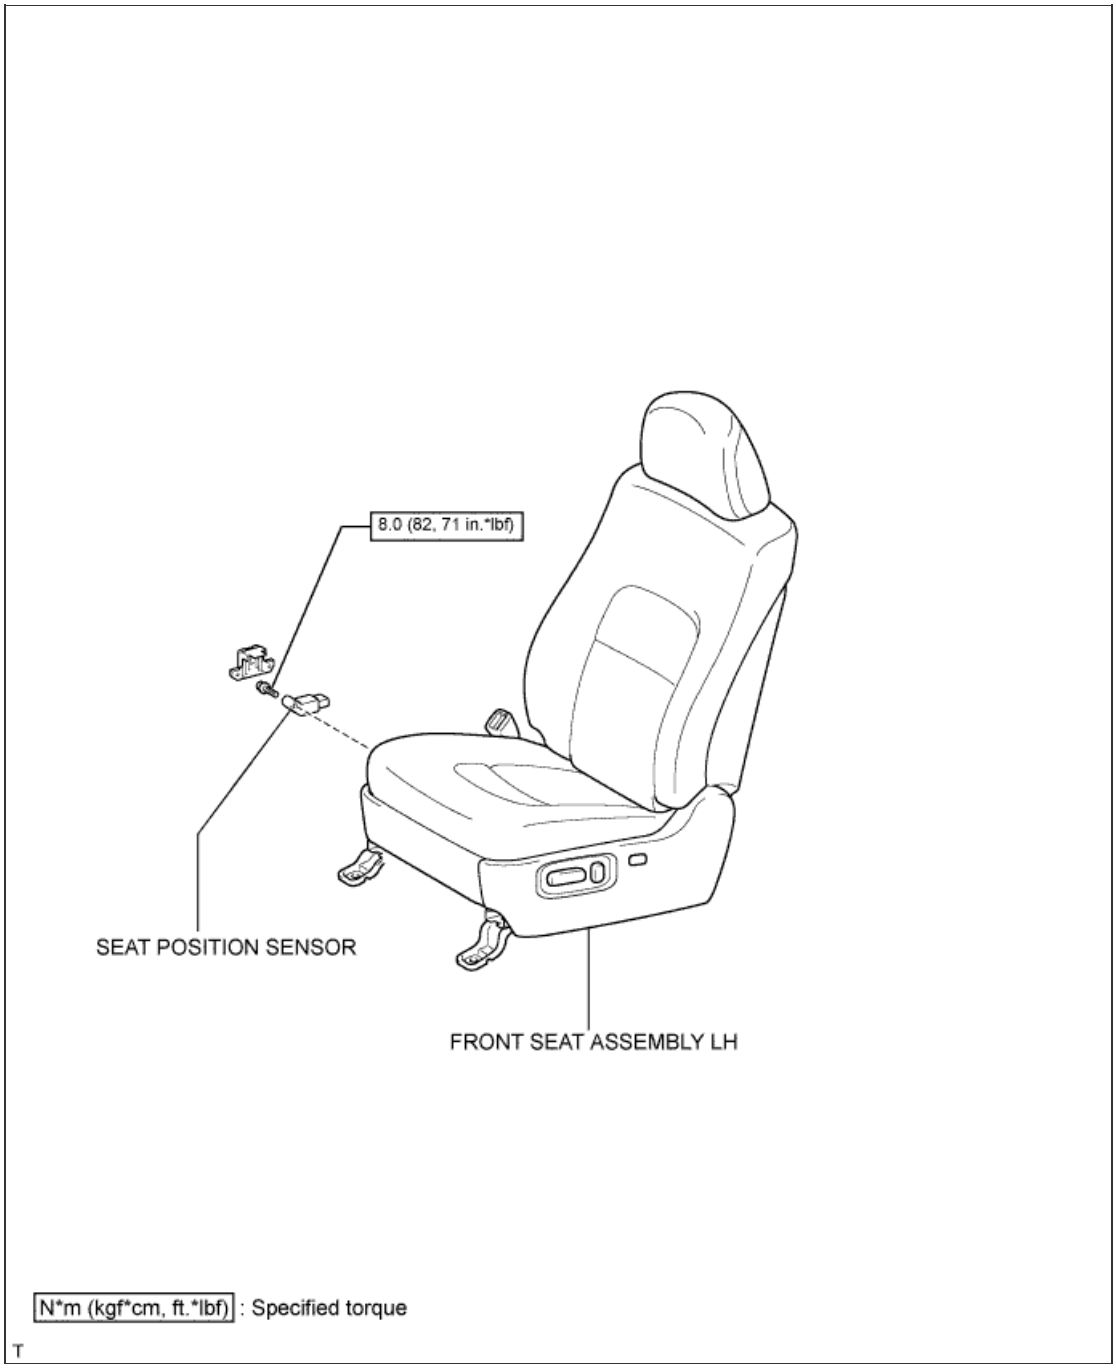

for Preparation Click here

1. CHECK SEAT POSITION SENSOR (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

2. CHECK SEAT POSITION SENSOR (VEHICLE INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

b. Even if the airbag was not deployed, check if there is any damage to the seat position sensor. If there are any defects as mentioned below, replace the seat position sensor with a new one:

- Cracks, dents or chips on the sensor housing.
- Cracks or other damage to the connector.

CAUTION:

For removal and installation procedures of the seat position sensor, be sure to follow the correct procedure.

for Preparation Click here

1. CHECK SEAT POSITION SENSOR (VEHICLE NOT INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

2. CHECK SEAT POSITION SENSOR (VEHICLE INVOLVED IN COLLISION)

a. Perform a diagnostic system check (Click here).

b. Even if the airbag was not deployed, check if there is any damage to the seat position sensor. If there are any defects as mentioned below, replace the seat position sensor with a new one:

- Cracks, dents or chips on the sensor housing.
- Cracks or other damage to the connector.

CAUTION:

For removal and installation procedures of the seat position sensor, be sure to follow the correct procedure.

for Preparation Click here


1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat (Click here).


2. REMOVE SEAT POSITION SENSOR

a. Using a T30 "TOR socket wrench, remove the screw and seat position sensor with sensor protector.

b. Disconnect the connector.

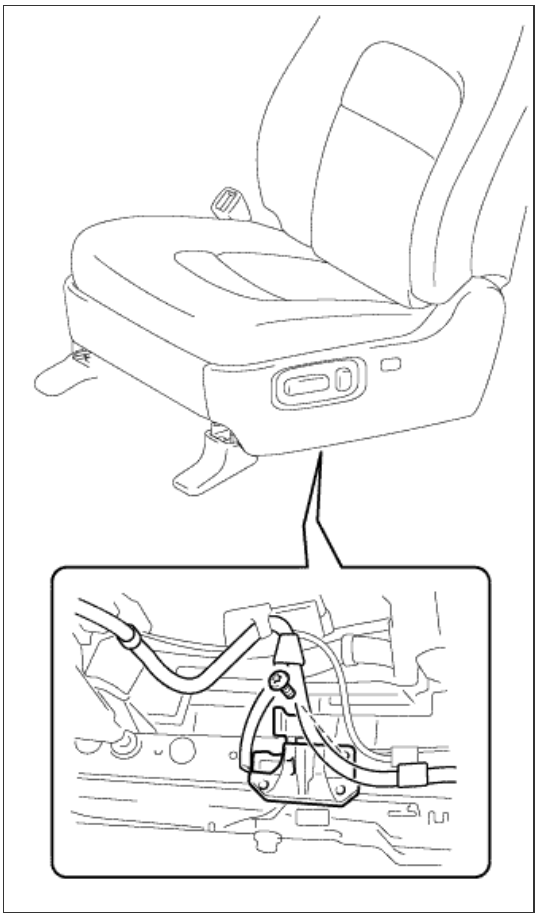

c. Remove the seat slide position sensor protector from the seat position sensor.

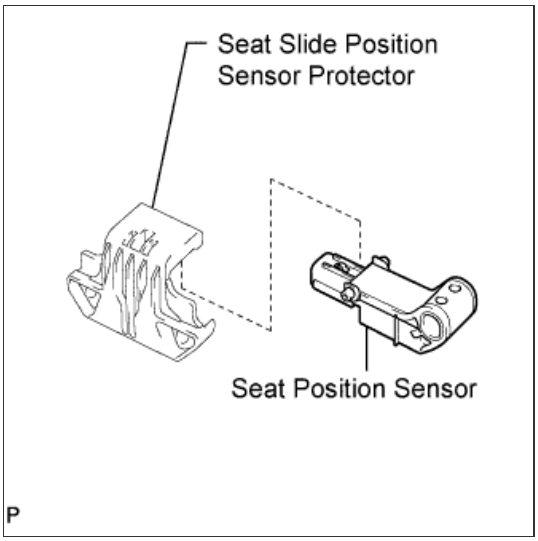

for Preparation Click here


1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat (Click here).


2. REMOVE SEAT POSITION SENSOR

a. Using a T30 "TOR socket wrench, remove the screw and seat position sensor with sensor protector.

b. Disconnect the connector.

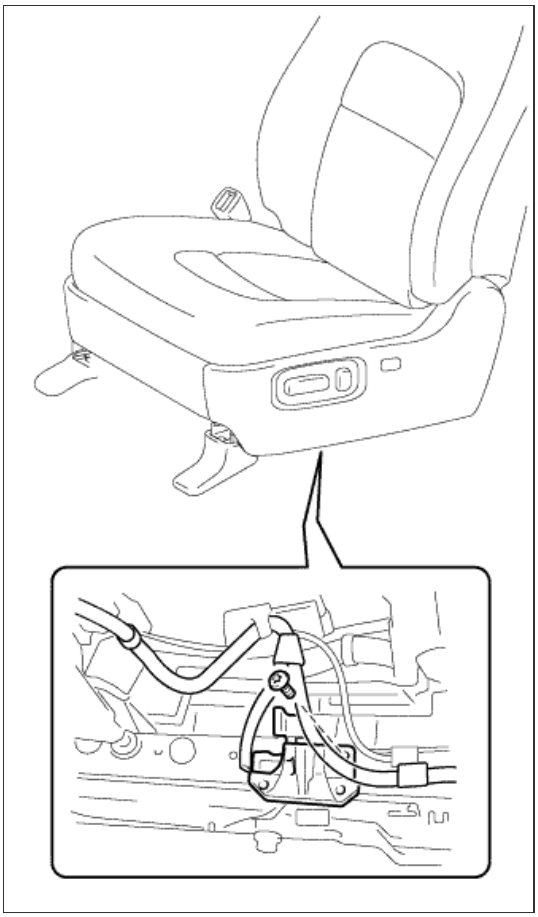

c. Remove the seat slide position sensor protector from the seat position sensor.

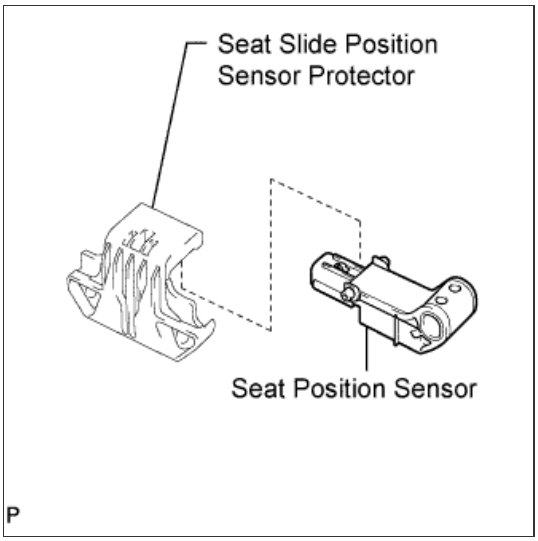

for Preparation Click here

1. INSTALL SEAT POSITION SENSOR


a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Using a 1.0 mm (0.0393 in.) feeler gauge, install the seat position sensor.

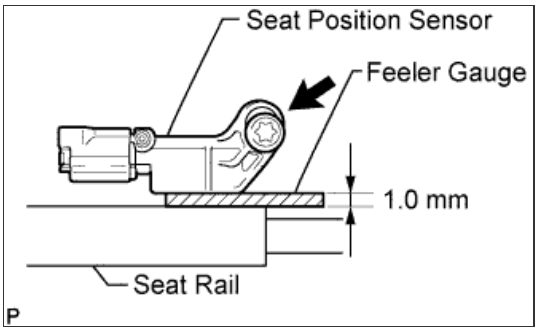

NOTICE:

- **If the seat position sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace the seat position sensor with a new one.**
- **When installing the seat position sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

HINT:

Be sure that the clearance between the seat position sensor and the seat rail is within 0.6 to 1.4 mm (0.0236 to 0.0551 in.).

d. Using a T30 R socket wrench, install the seat position sensor with the screw.

Torque:
8.0 N*m{ 82 kgf*cm , 71 in.*lbf }

e. Make sure that the clearance between the seat position sensor and the seat rail is within 0.6 to 1.4 mm (0.0236 to 0.0551 in.).

f. Check that there is no looseness in the installation parts of the seat position sensor.

g. Connect the connector.

h. Install the seat slide position sensor protector to the seat position sensor.

2. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat (Click here).

3. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

1. INSTALL SEAT POSITION SENSOR


a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Using a 1.0 mm (0.0393 in.) feeler gauge, install the seat position sensor.

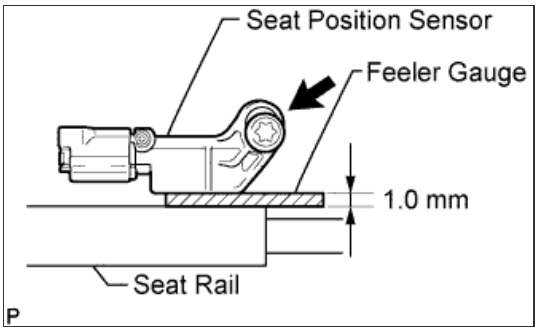

NOTICE:

- **If the seat position sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace the seat position sensor with a new one.**
- **When installing the seat position sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

HINT:

Be sure that the clearance between the seat position sensor and the seat rail is within 0.6 to 1.4 mm (0.0236 to 0.0551 in.).

d. Using a T30 R socket wrench, install the seat position sensor with the screw.

Torque:
8.0 N*m{ 82 kgf*cm , 71 in.*lbf }

e. Make sure that the clearance between the seat position sensor and the seat rail is within 0.6 to 1.4 mm (0.0236 to 0.0551 in.).

f. Check that there is no looseness in the installation parts of the seat position sensor.

g. Connect the connector.

h. Install the seat slide position sensor protector to the seat position sensor.


2. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat (Click here).

3. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation [Click here]

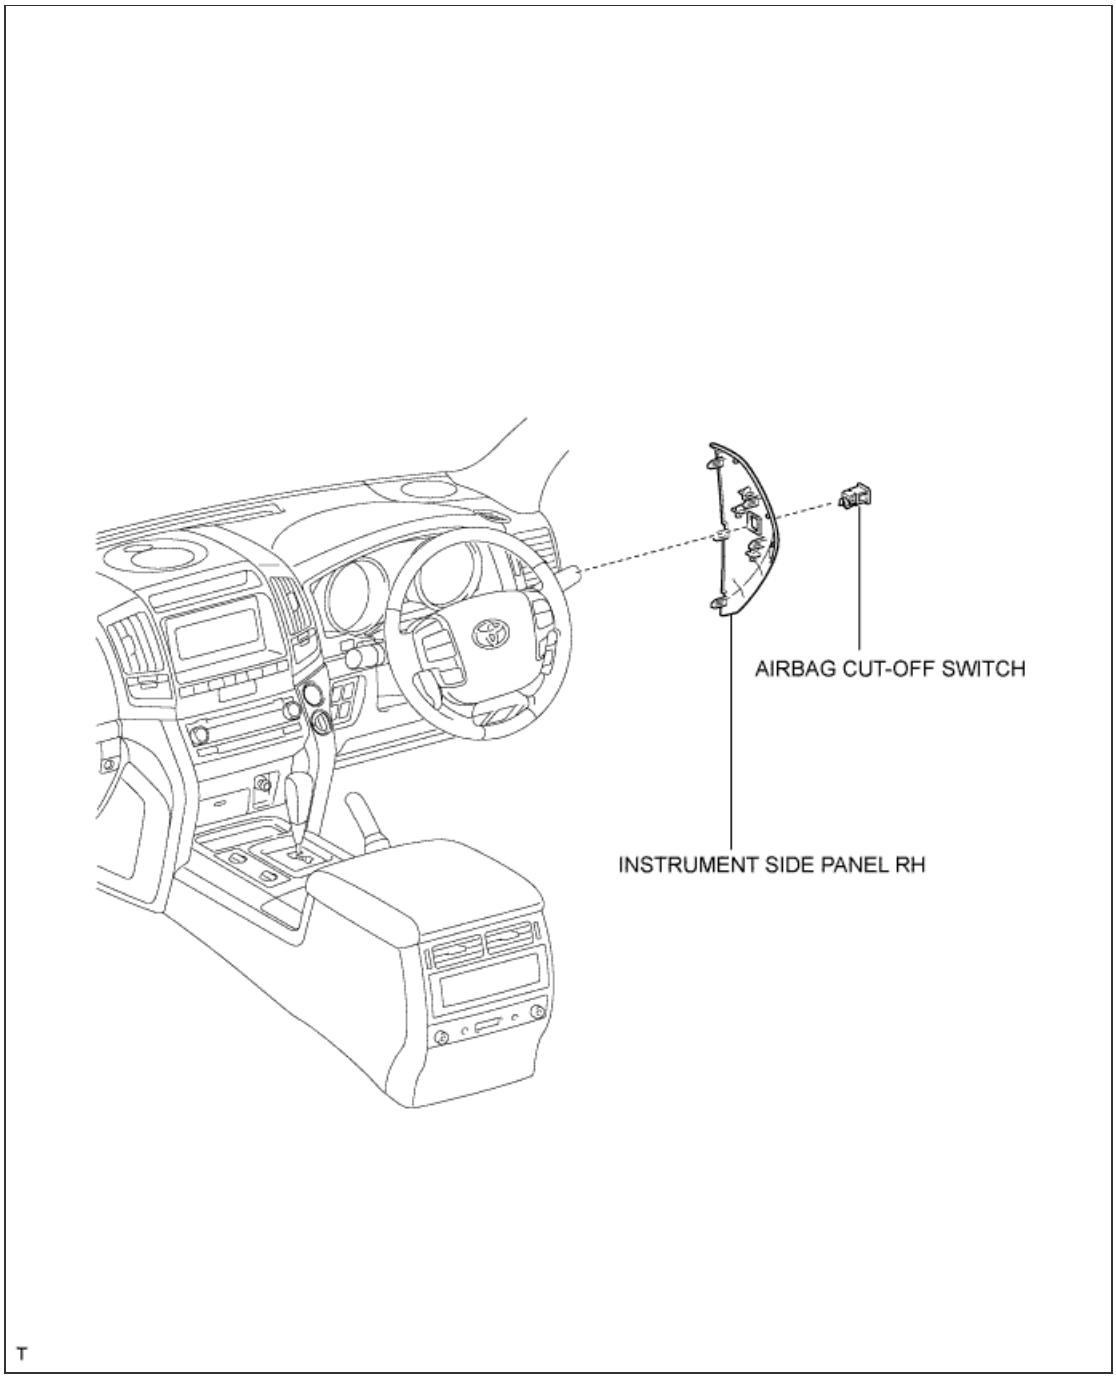

for Preparation Click here

1. ISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE INSTRUMENT SI E PANEL RH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 6 claws.

c. Remove the side panel and disconnect the connector.

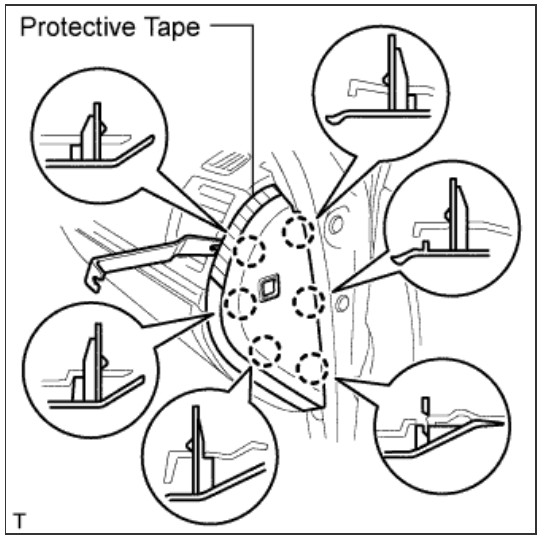

3. REMOVE AIRBAG CUT-OFF SWITCH

a. Detach the 2 claws and remove the airbag cut-off switch.

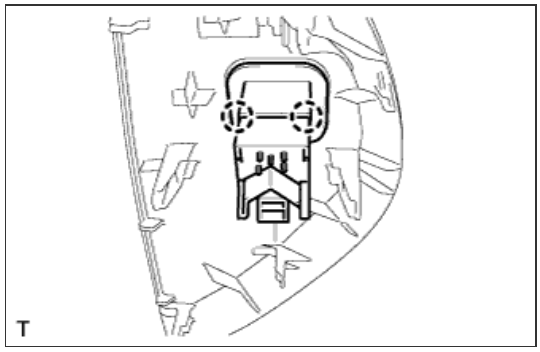

for Preparation Click here

1. ISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE INSTRUMENT SI E PANEL RH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 6 claws.

c. Remove the side panel and disconnect the connector.

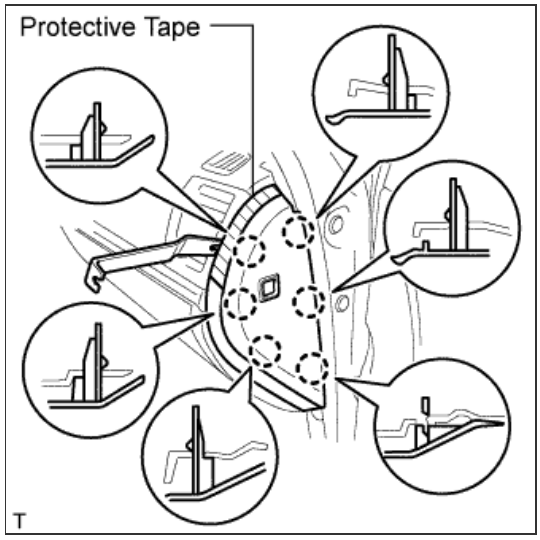

3. REMOVE AIRBAG CUT-OFF SWITCH

a. Detach the 2 claws and remove the airbag cut-off switch.

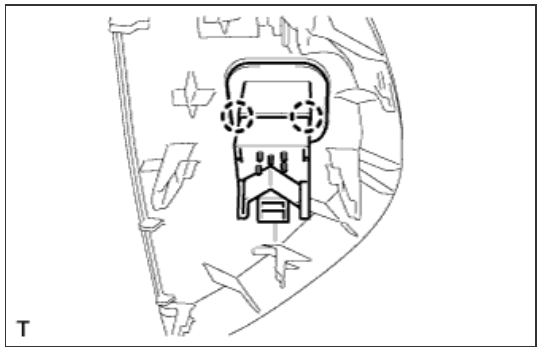


for Preparation Click here

1. INSPECT AIRBAG CUT-OFF SWITCH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Switch Condition	Specified Condition
1 (MSW-) - (MSW)	Off	400 Ω
1 (MSW-) - (MSW)	On	100 Ω

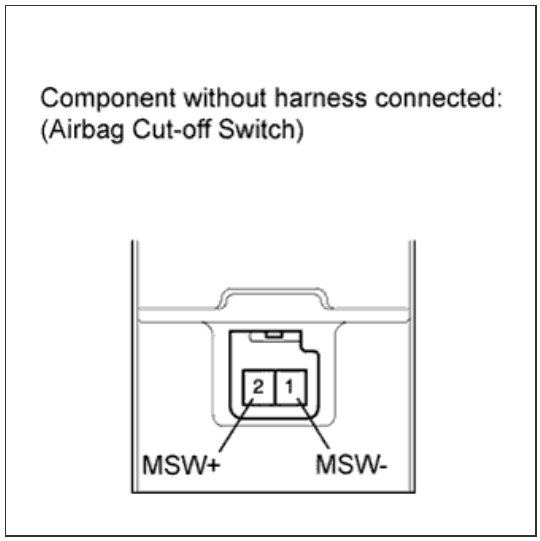

for Preparation Click here

1. INSTALL AIRBAG CUT-OFF SWITCH


a. Attach the 2 claws to install the switch.

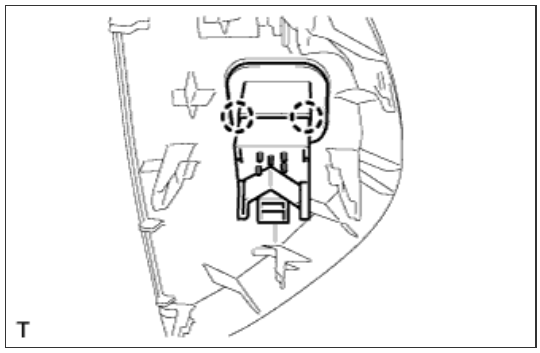

2. INSTALL INSTRUMENT SI PANEL RH

a. Connect the connector.

b. Attach the 6 claws to install the side panel.

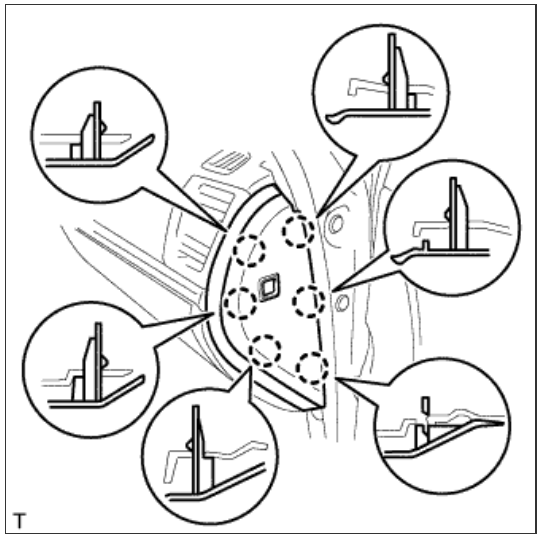

. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


4. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here


1. INSTALL AIRBAG CUT-OFF SWITCH

a. Attach the 2 claws to install the switch.

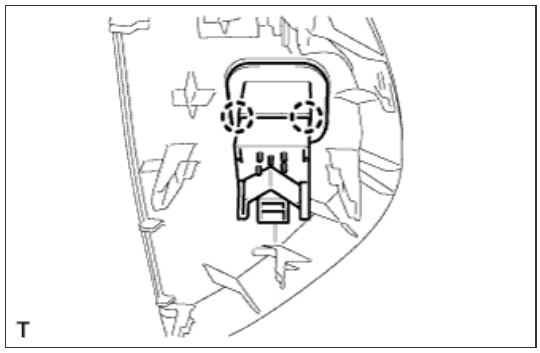

2. INSTALL INSTRUMENT SI PANEL RH

a. Attach the 7 claws and 4 clips to install the scuff plate.

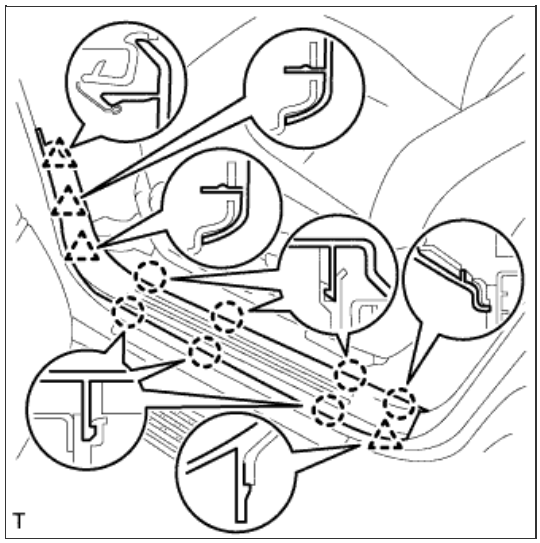

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

4. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

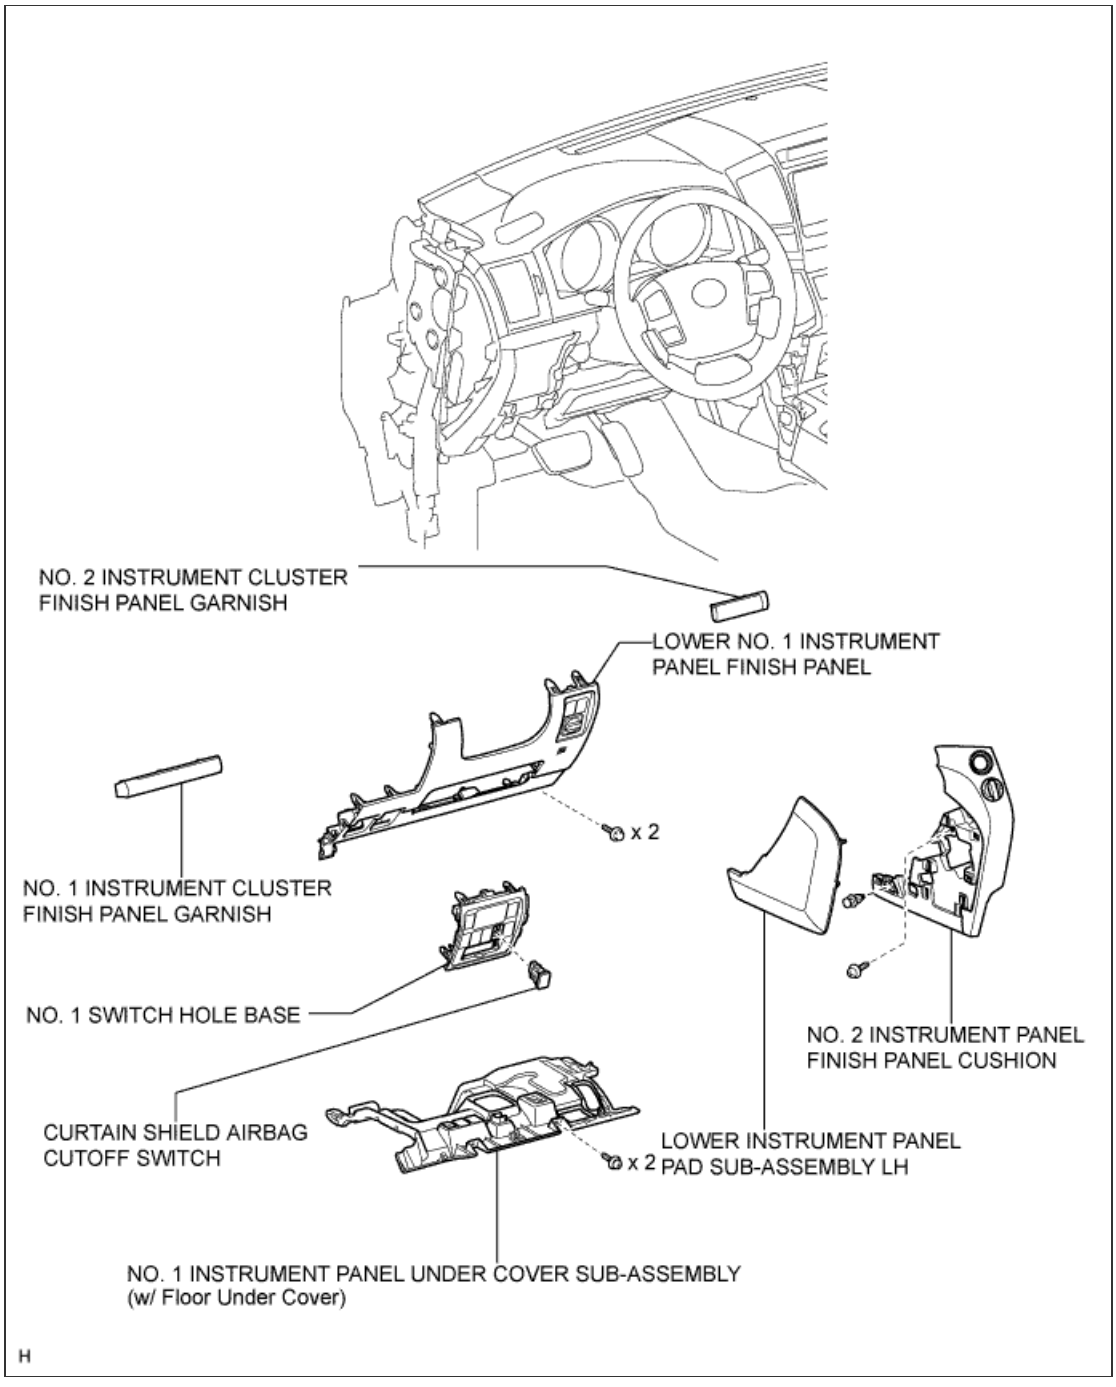

CURTAIN SHIELD AIRBAG CUTOFF SWITCH > REMOVAL

for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH.**
- **The procedures listed below are the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

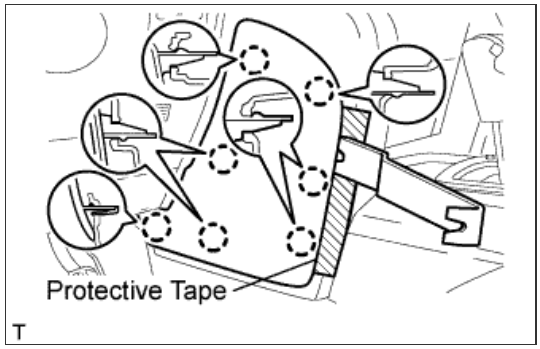


3. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

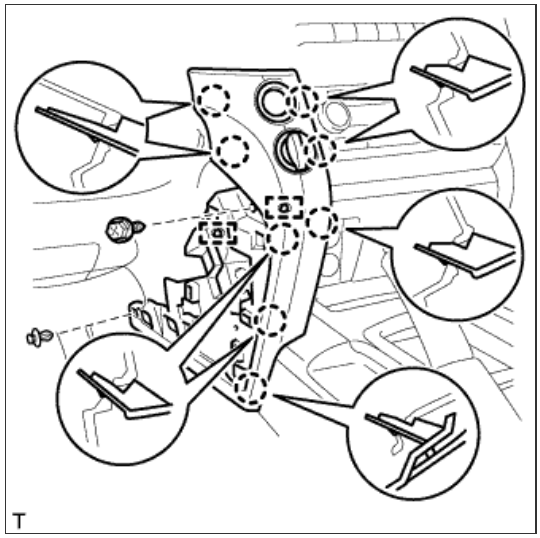

4. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

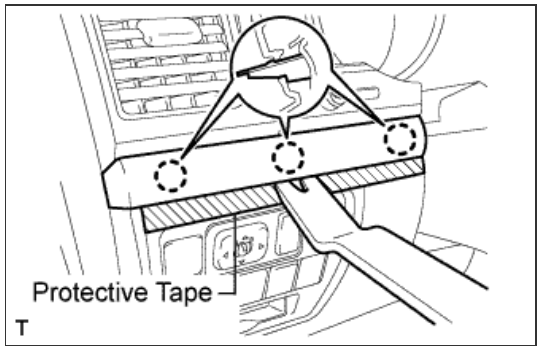

5. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

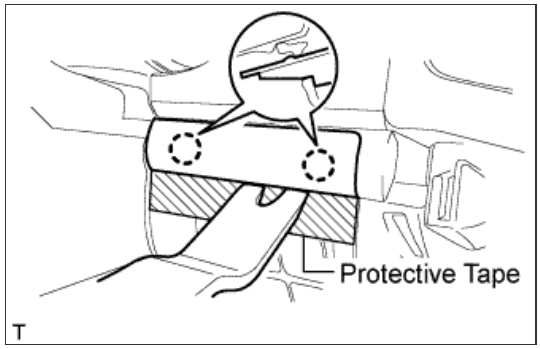


6. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.

c. Remove the under cover and disconnect the connectors.

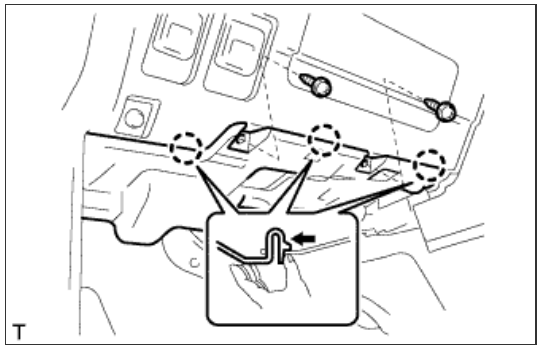


7. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

b. Open the hole cover.

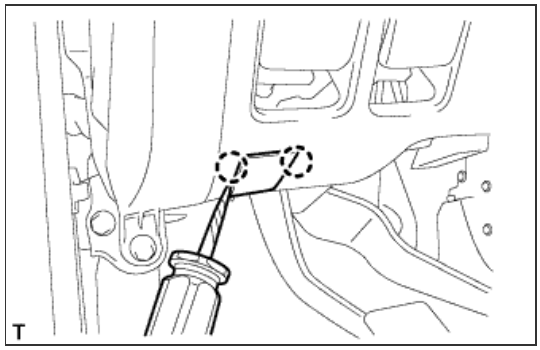


c. Remove the 2 bolts.

d. Detach the 1 claws.

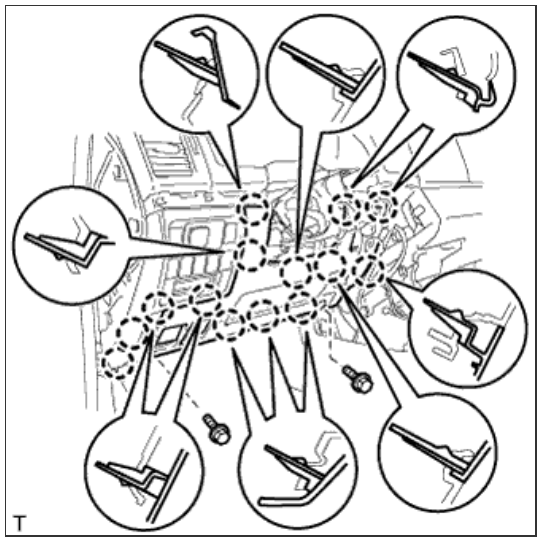


e. Detach the 2 claws and remove the sensor.

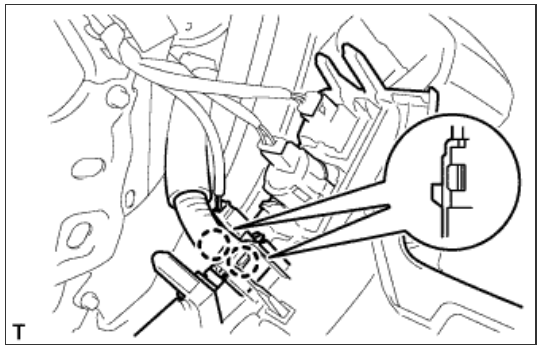

f. Detach the 2 claws and disconnect the 2 control cables.


g. Remove the finish panel and then disconnect the connectors.

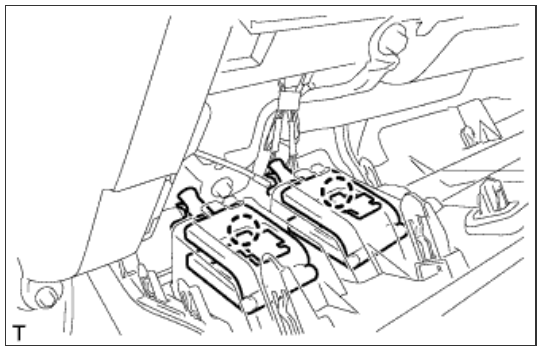

8. REMOVE NO. 1 SWITCH HOLE BASE

a. Detach the claws.


b. Remove the switch hole base and then disconnect the connectors.

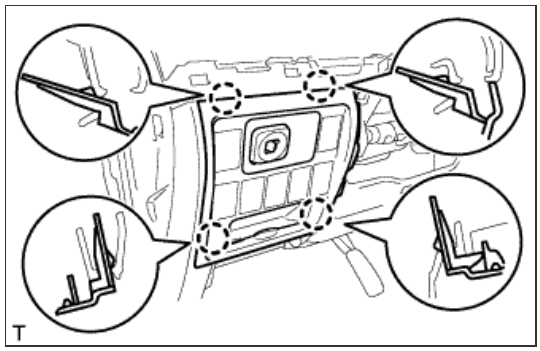

9. REMOVE CURTAIN SHIELD AIRBAG CUTOFF SWITCH

a. Detach the 2 claws and remove the switch.

a. Detach the 2 claws and remove the switch.

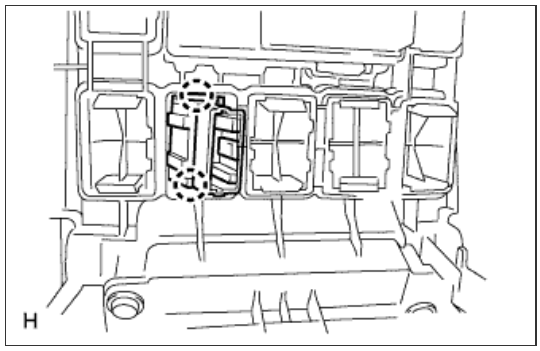

CURTAIN SHIELD AIRBAG CUTOFF SWITCH > REMOVAL

for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH.**
- **The procedures listed below are the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

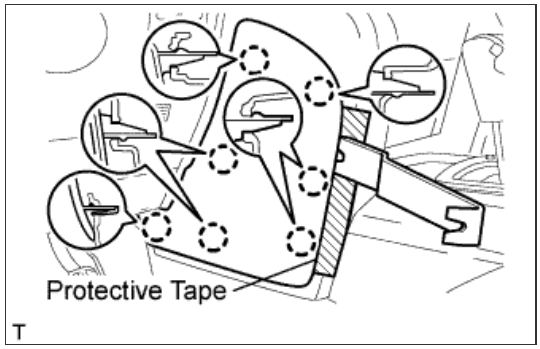


3. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

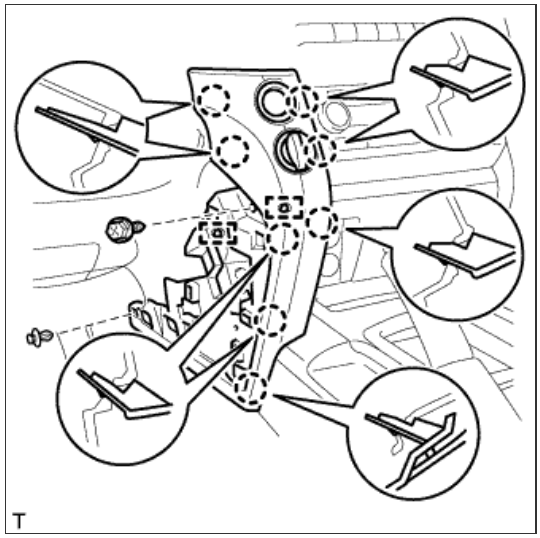

4. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

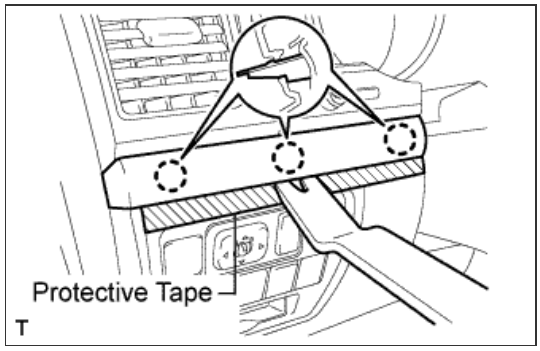

5. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

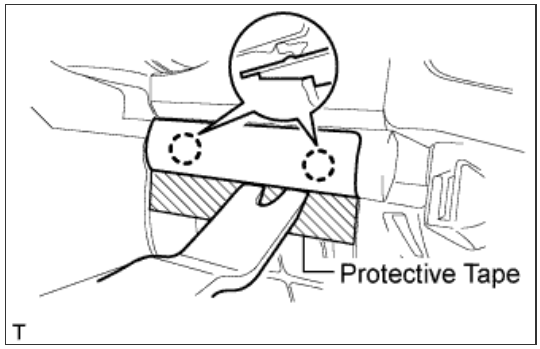


6. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.

c. Remove the under cover and disconnect the connectors.

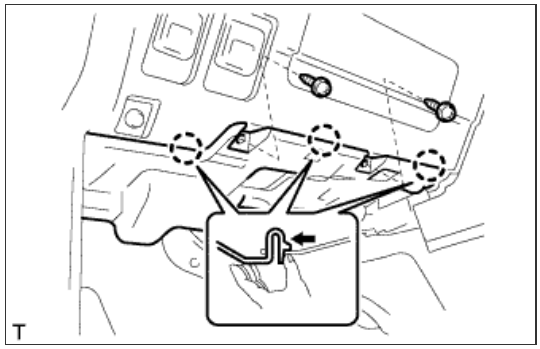


7. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

b. Open the hole cover.

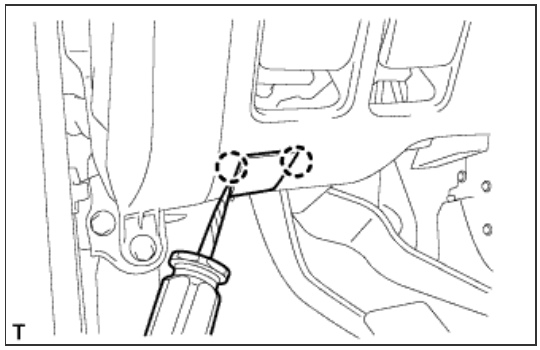


c. Remove the 2 bolts.

d. Detach the 1 claws.

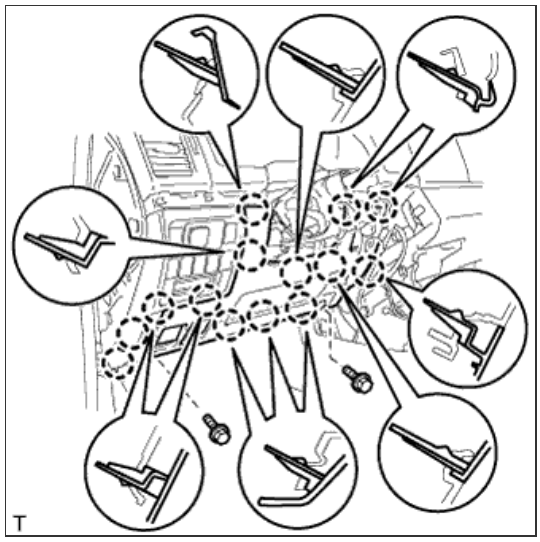


e. Detach the 2 claws and remove the sensor.

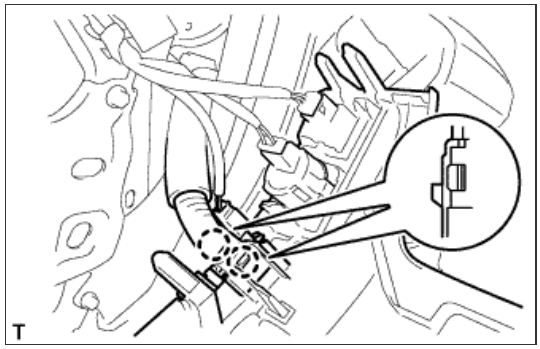

f. Detach the 2 claws and disconnect the 2 control cables.


g. Remove the finish panel and then disconnect the connectors.

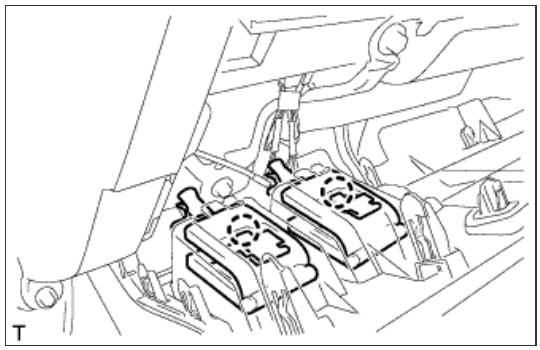

8. REMOVE NO. 1 SWITCH HOLE BASE

a. Detach the claws.


b. Remove the switch hole base and then disconnect the connectors.

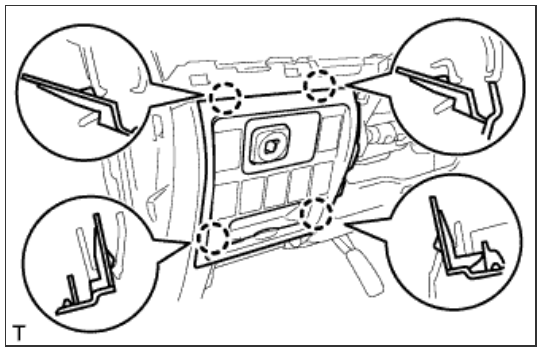

9. REMOVE CURTAIN SHIELD AIRBAG CUTOFF SWITCH

a. Detach the 2 claws and remove the switch.

a. Detach the 2 claws and remove the switch.

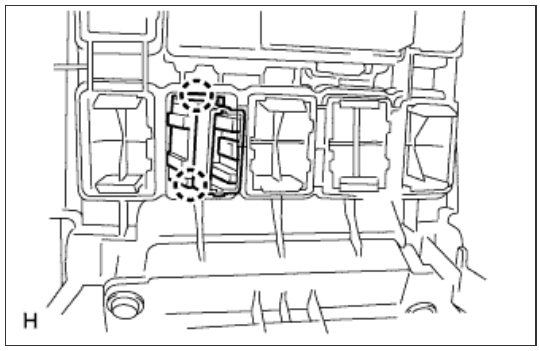

for Preparation Click here

1. INSPECT CURTAIN SHIELD AIRBAG CUTOFF SWITCH


a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
4 (SW) - 1 (E)	Switch is not pressed	Below 1 Ω
	Switch is pressed	10 kΩ or higher

If the result is not as specified, replace the switch.

Component without harness connected:
(Curtain Shield Airbag Cutoff Switch)

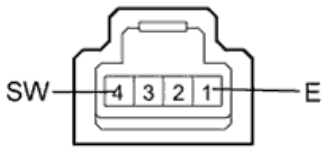


for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH.**
- **The procedures listed below are the LH side.**

1. INSTALL CURTAIN SHIELD AIRBAG CUTOFF SWITCH


a. Attach the 2 claws to install the switch.

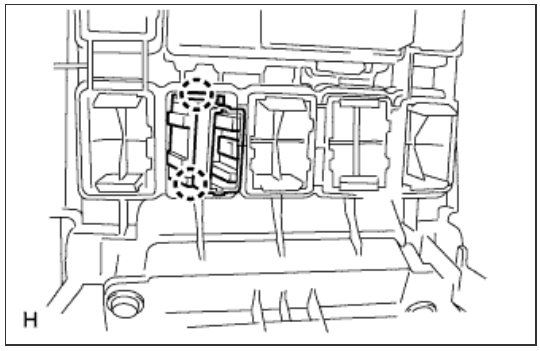

2. INSTALL NO. 1 SWITCH HOLE BASE

a. Connect the connectors.


b. Attach the 4 claws to install the switch hole base.

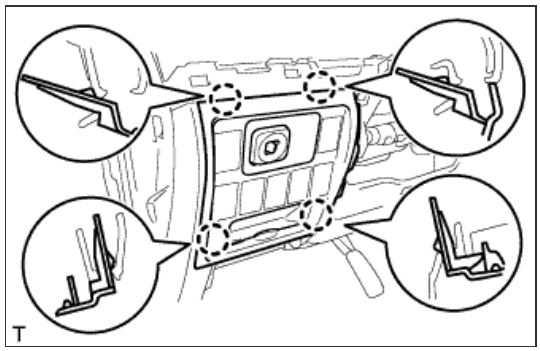


3. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

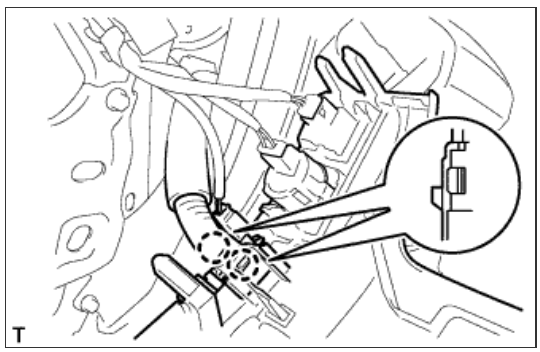


c. Attach the 2 claws to connect the 2 control cables.

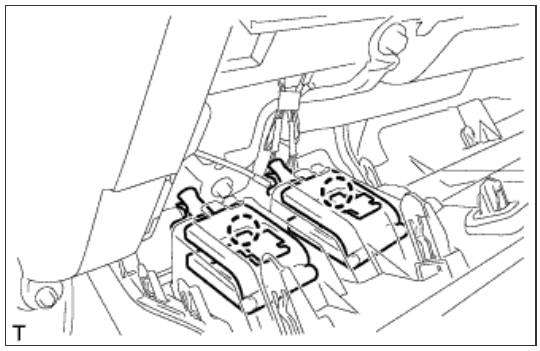


d. Attach the 14 claws to install the finish panel.

e. Install the 2 bolts.

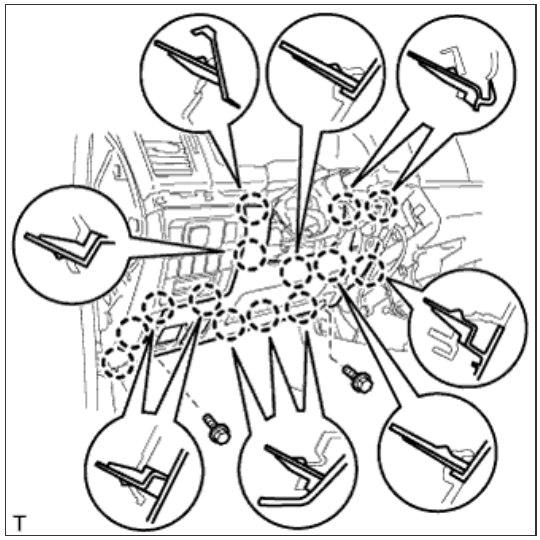

f. Attach the 2 claws to close the hole cover.

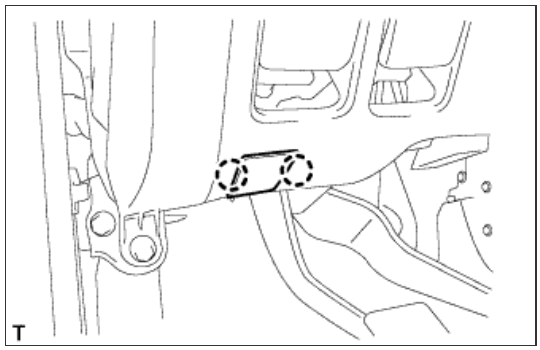


4. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.

b. Attach the 3 claws to install the under cover.


c. Install the 2 screws.

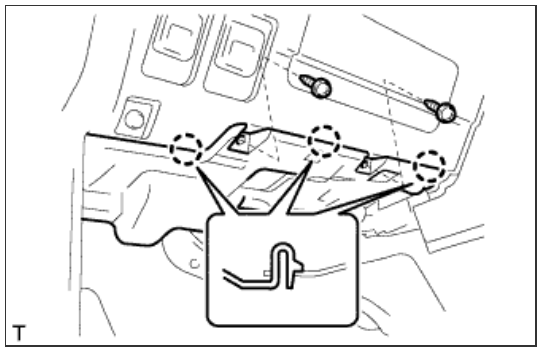

5. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Attach the 2 claws to install the panel garnish.

a. Attach the 2 claws to install the panel garnish.

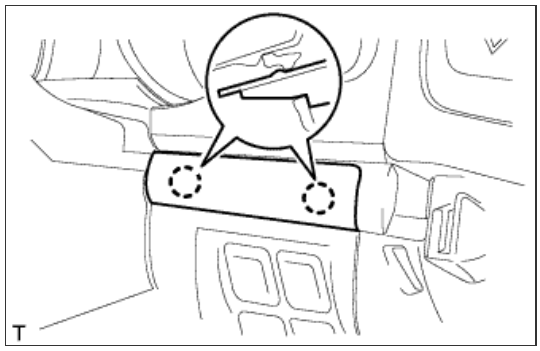

6. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

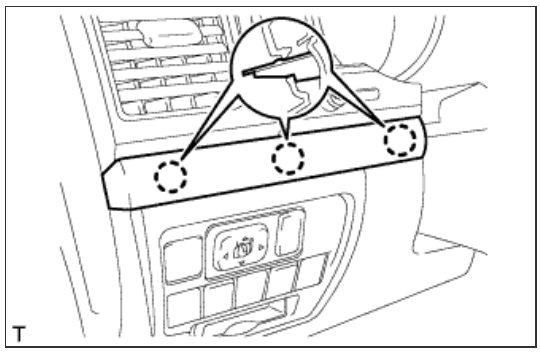


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

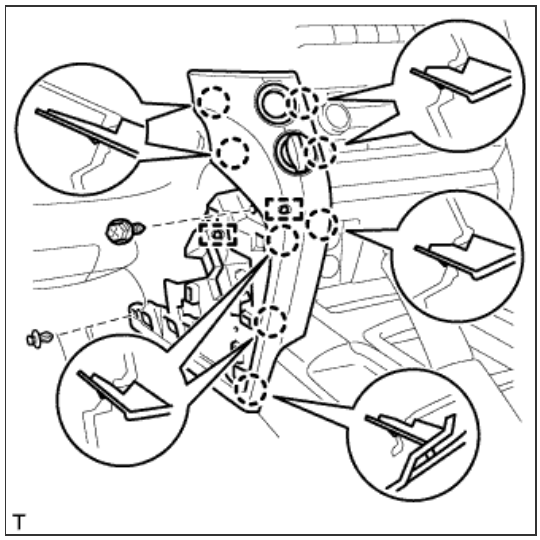

8. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

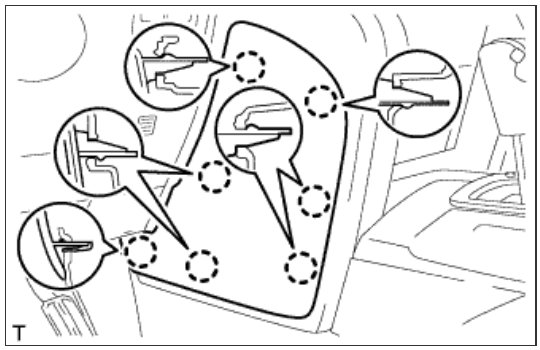

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. CHEC SRS WARNING LIGHT

a. Check the SRS warning light (Click here).


for Preparation Click here

HINT:

- **Use the same procedures for the RH and LH.**
- **The procedures listed below are the LH side.**

1. INSTALL CURTAIN SHIELD AIRBAG CUTOFF SWITCH


a. Attach the 2 claws to install the switch.

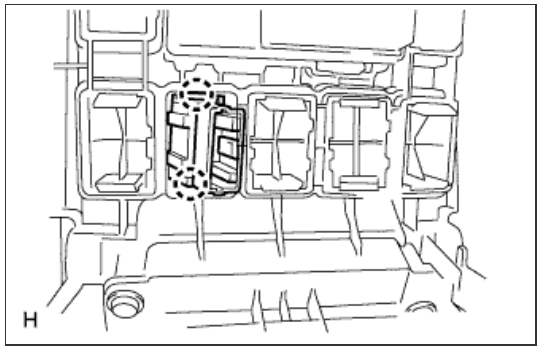

2. INSTALL NO. 1 SWITCH HOLE BASE

a. Connect the connectors.


b. Attach the 4 claws to install the switch hole base.

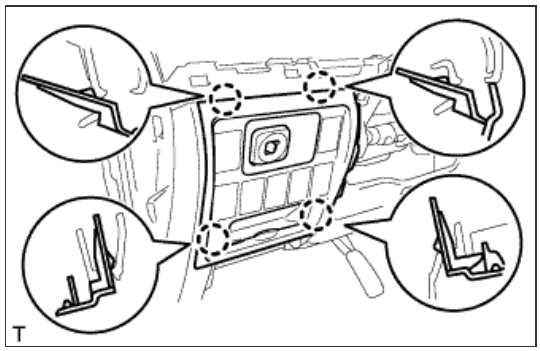


3. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

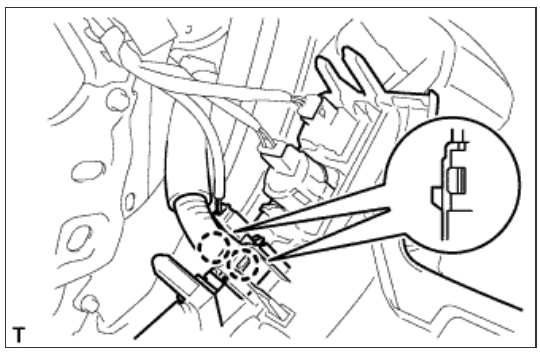


c. Attach the 2 claws to connect the 2 control cables.

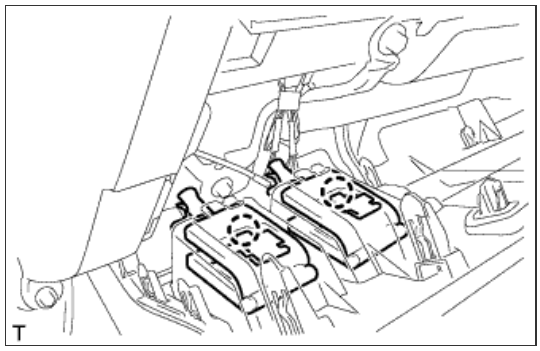


d. Attach the 14 claws to install the finish panel.

e. Install the 2 bolts.

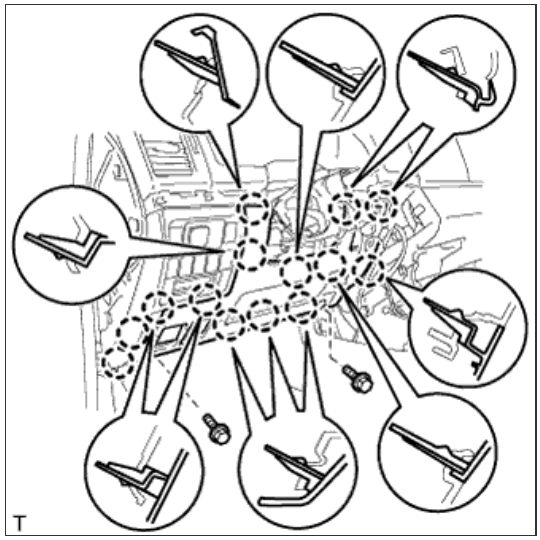

f. Attach the 2 claws to close the hole cover.

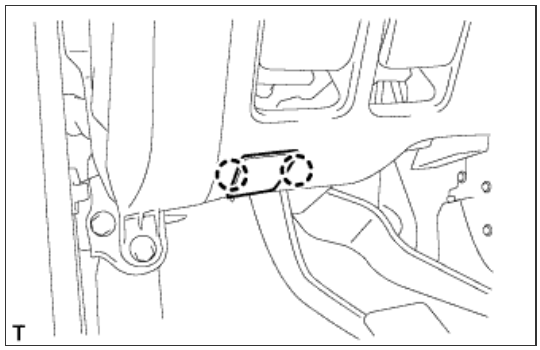


4. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.

b. Attach the 3 claws to install the under cover.


c. Install the 2 screws.

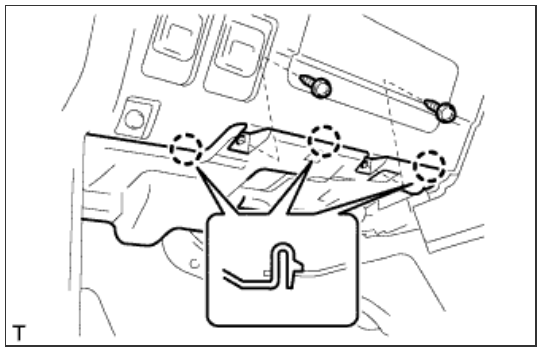

5. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Attach the 2 claws to install the panel garnish.

a. Attach the 2 claws to install the panel garnish.

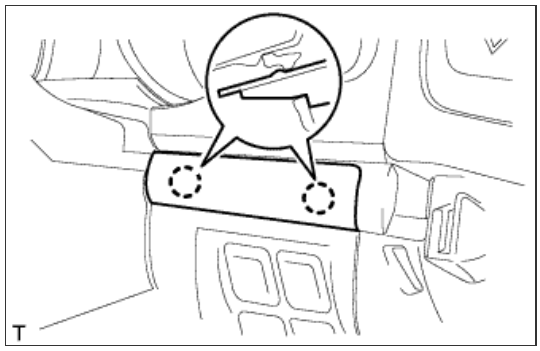

6. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

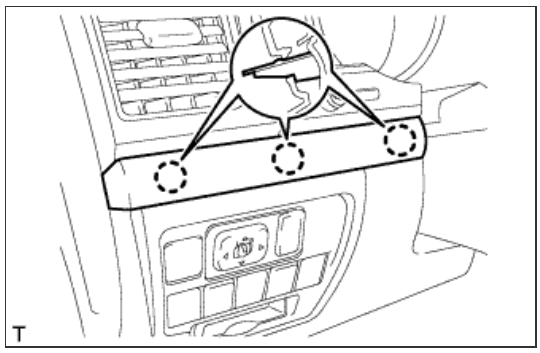


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

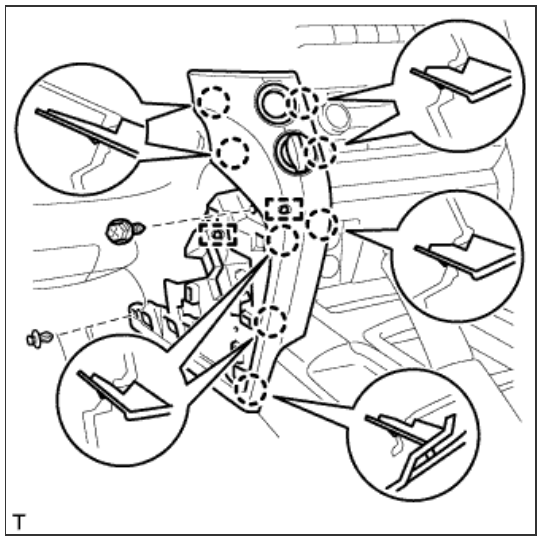

8. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

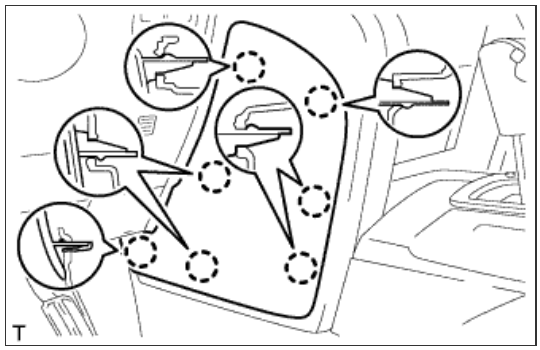

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. CHEC SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

1.TROUBLESHOOTING PRECAUTIONS

a. If a terminal contact point malfunction or part installation problem occurs, removal and reinstallation of the suspected part may return the system to normal. However, be aware that the normal condition may only be temporary.

b. Before disconnecting connectors or removing/installing parts, determine the malfunctioning area by checking and writing down the condition of the vehicle at the time of the malfunction (DTC outputs, etc.).


c. Be sure to check for DTCs related to other systems. The pre-crash safety system may be influenced by malfunctions in other systems.

2.HANDLING PRECAUTIONS


a. When removing and installing the ECUs, sensors, switches or other pre-crash safety system related parts, perform the following:

- Make sure the engine switch is off unless otherwise specified in the inspection procedures.
- After the removal/installation, check for DTCs and confirm that a normal system code is output.


for Preparation Click here

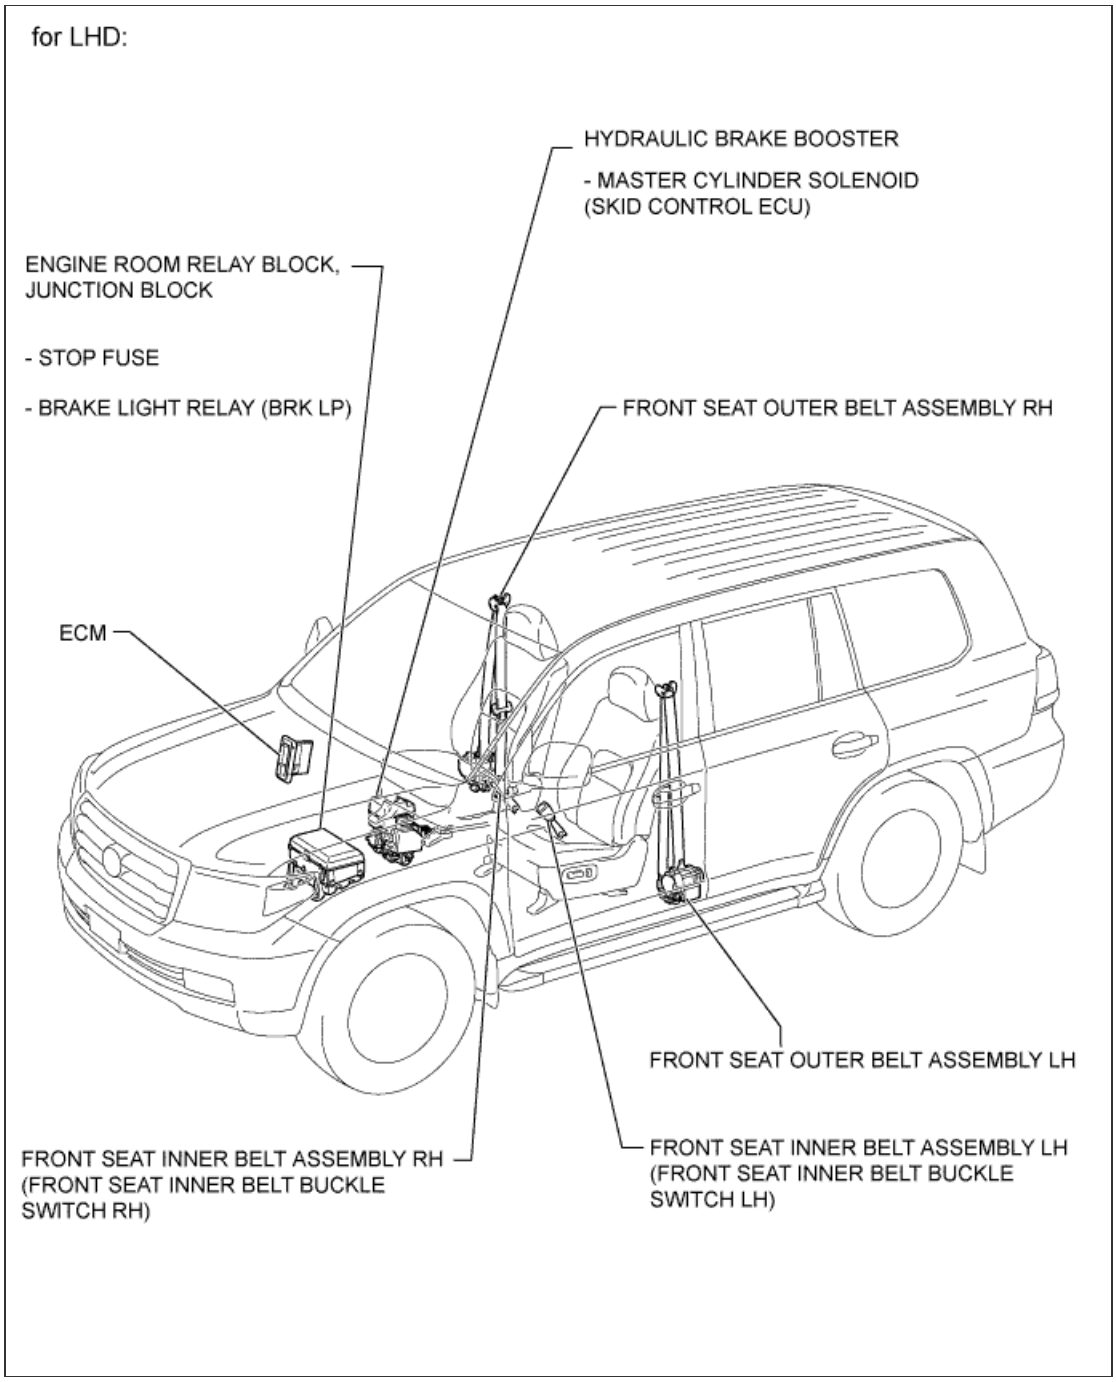


for RHD:

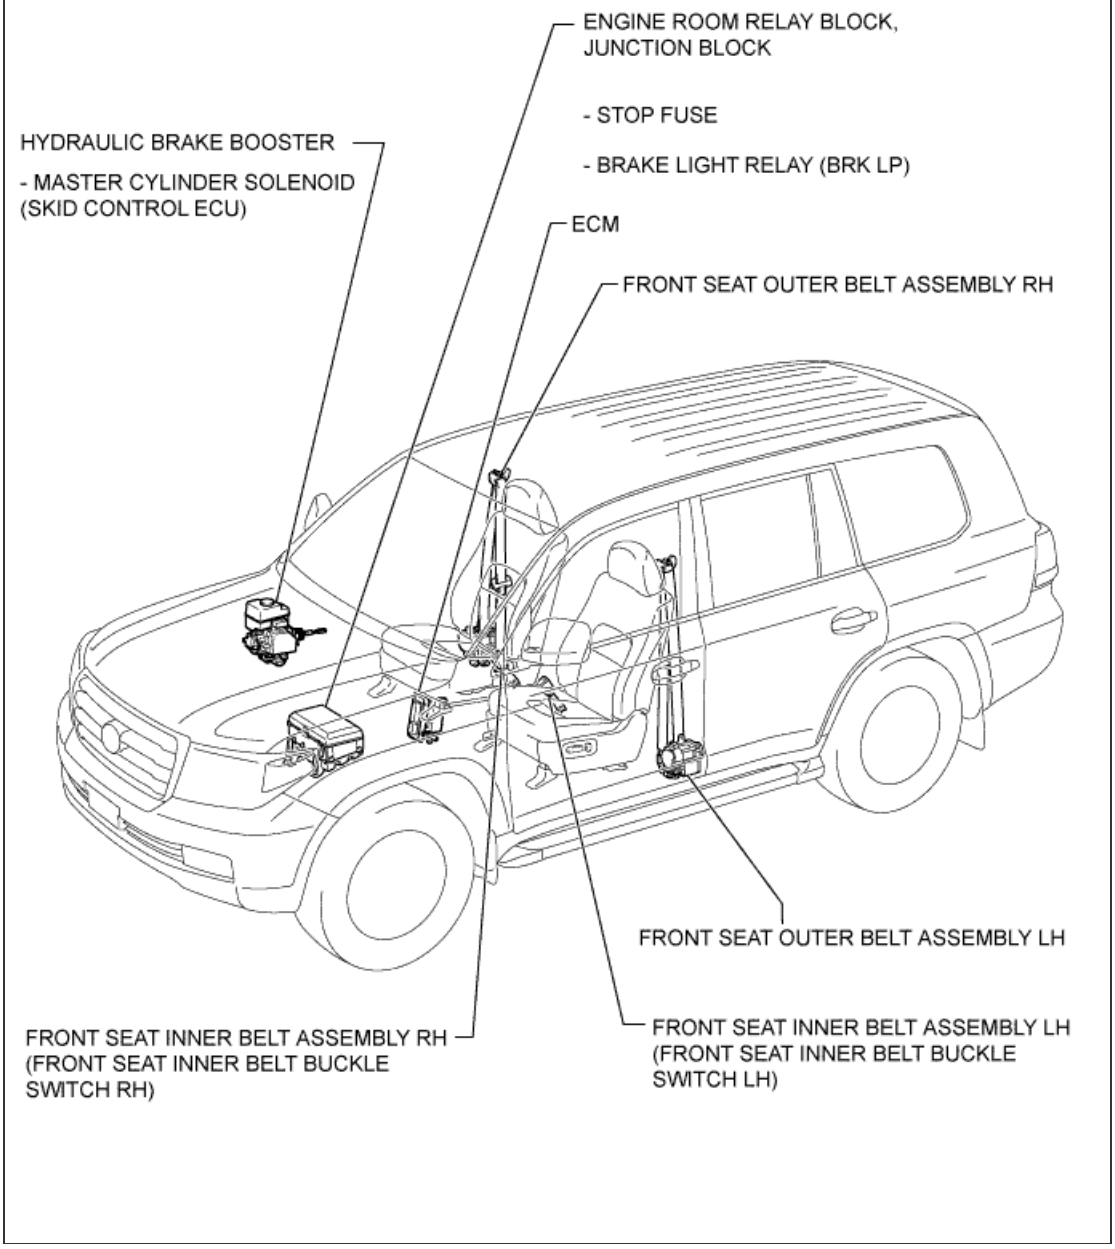
ENGINE ROOM RELAY BLOCK,
JUNCTION BLOCK
- STOP FUSE
- BRAKE LIGHT RELAY (BRK LP)
HYDRAULIC BRAKE BOOSTER
- MASTER CYLINDER SOLENOID
(SKID CONTROL ECU)
ECM
FRONT SEAT OUTER BELT ASSEMBLY RH
FRONT SEAT OUTER BELT ASSEMBLY LH
FRONT SEAT INNER BELT ASSEMBLY RH
(FRONT SEAT INNER BELT BUCKLE
SWITCH RH)
FRONT SEAT INNER BELT ASSEMBLY LH
(FRONT SEAT INNER BELT BUCKLE
SWITCH LH)


for LHD:

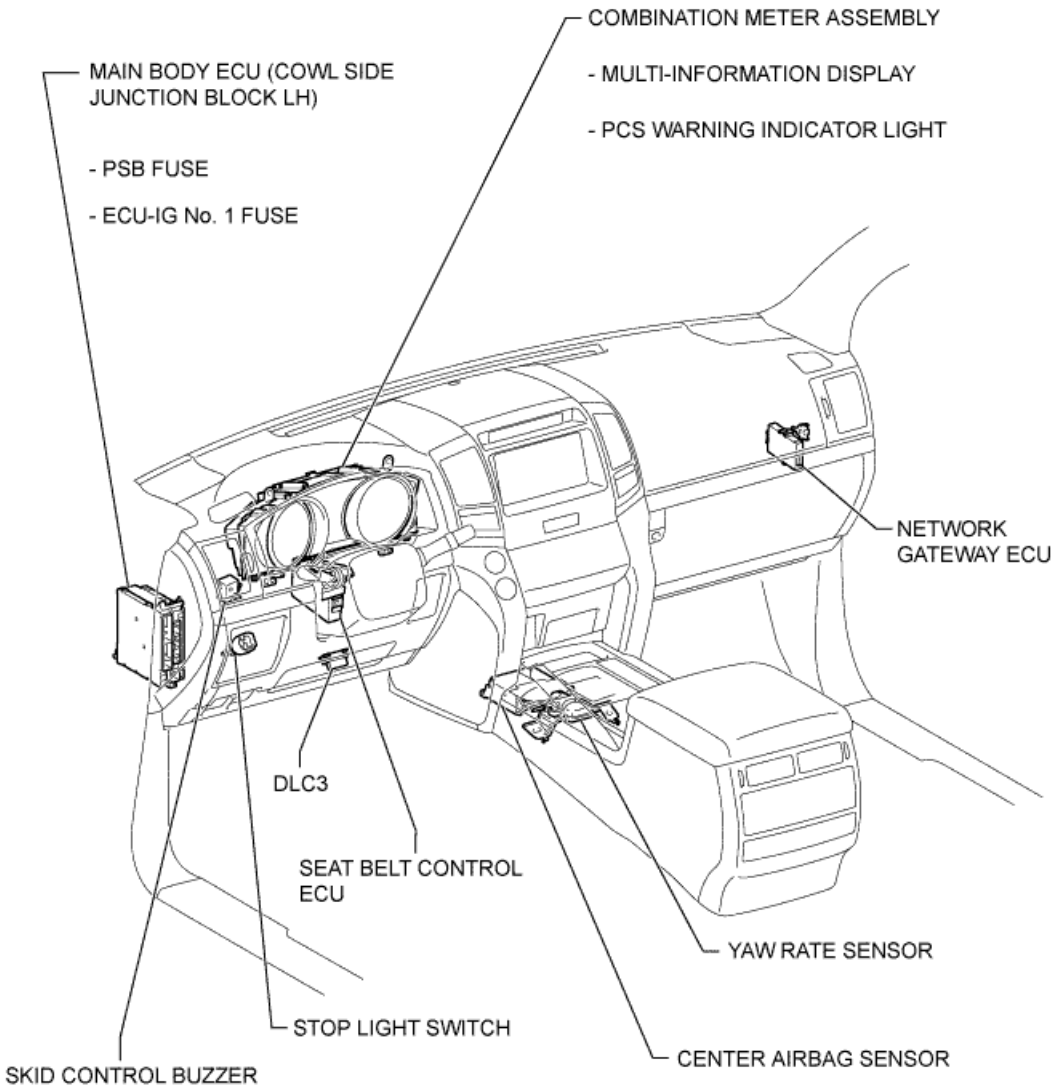
COMBINATION METER ASSEMBLY
- MULTI-INFORMATION DISPLAY
- PCS WARNING INDICATOR LIGHT
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
- PSB FUSE
- ECU-IG No. 1 FUSE
NETWORK GATEWAY ECU
DLC3
SEAT BELT CONTROL ECU
YAW RATE SENSOR
STOP LIGHT SWITCH
CENTER AIRBAG SENSOR
SKID CONTROL BUZZER

for RHD:

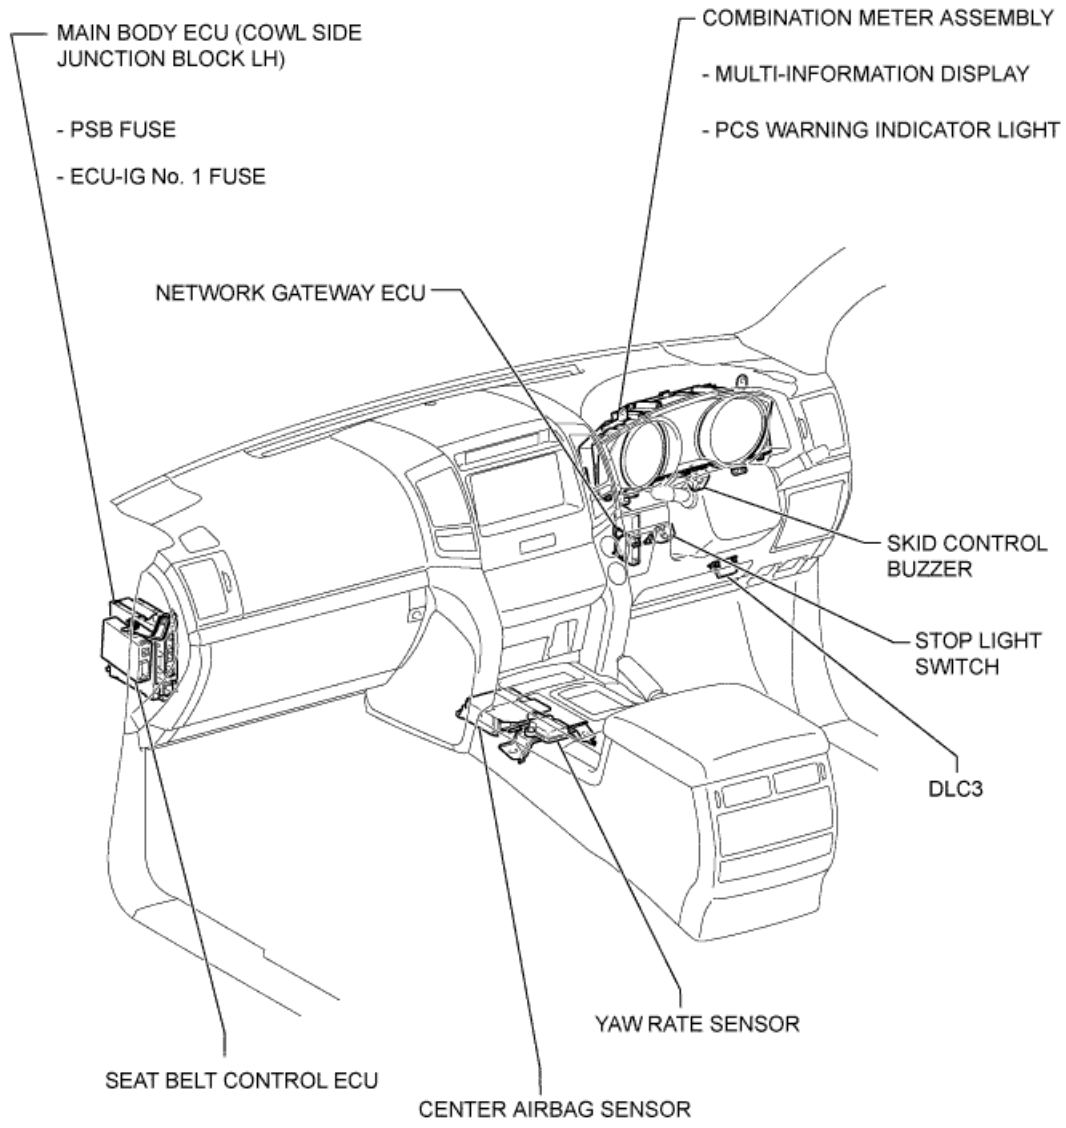
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
- PSB FUSE
- ECU-IG No. 1 FUSE
COMBINATION METER ASSEMBLY
- MULTI-INFORMATION DISPLAY
- PCS WARNING INDICATOR LIGHT
NETWORK GATEWAY ECU
SKID CONTROL BUZZER
STOP LIGHT SWITCH
DLC3
YAW RATE SENSOR
SEAT BELT CONTROL ECU
CENTER AIRBAG SENSOR

for Preparation Click here

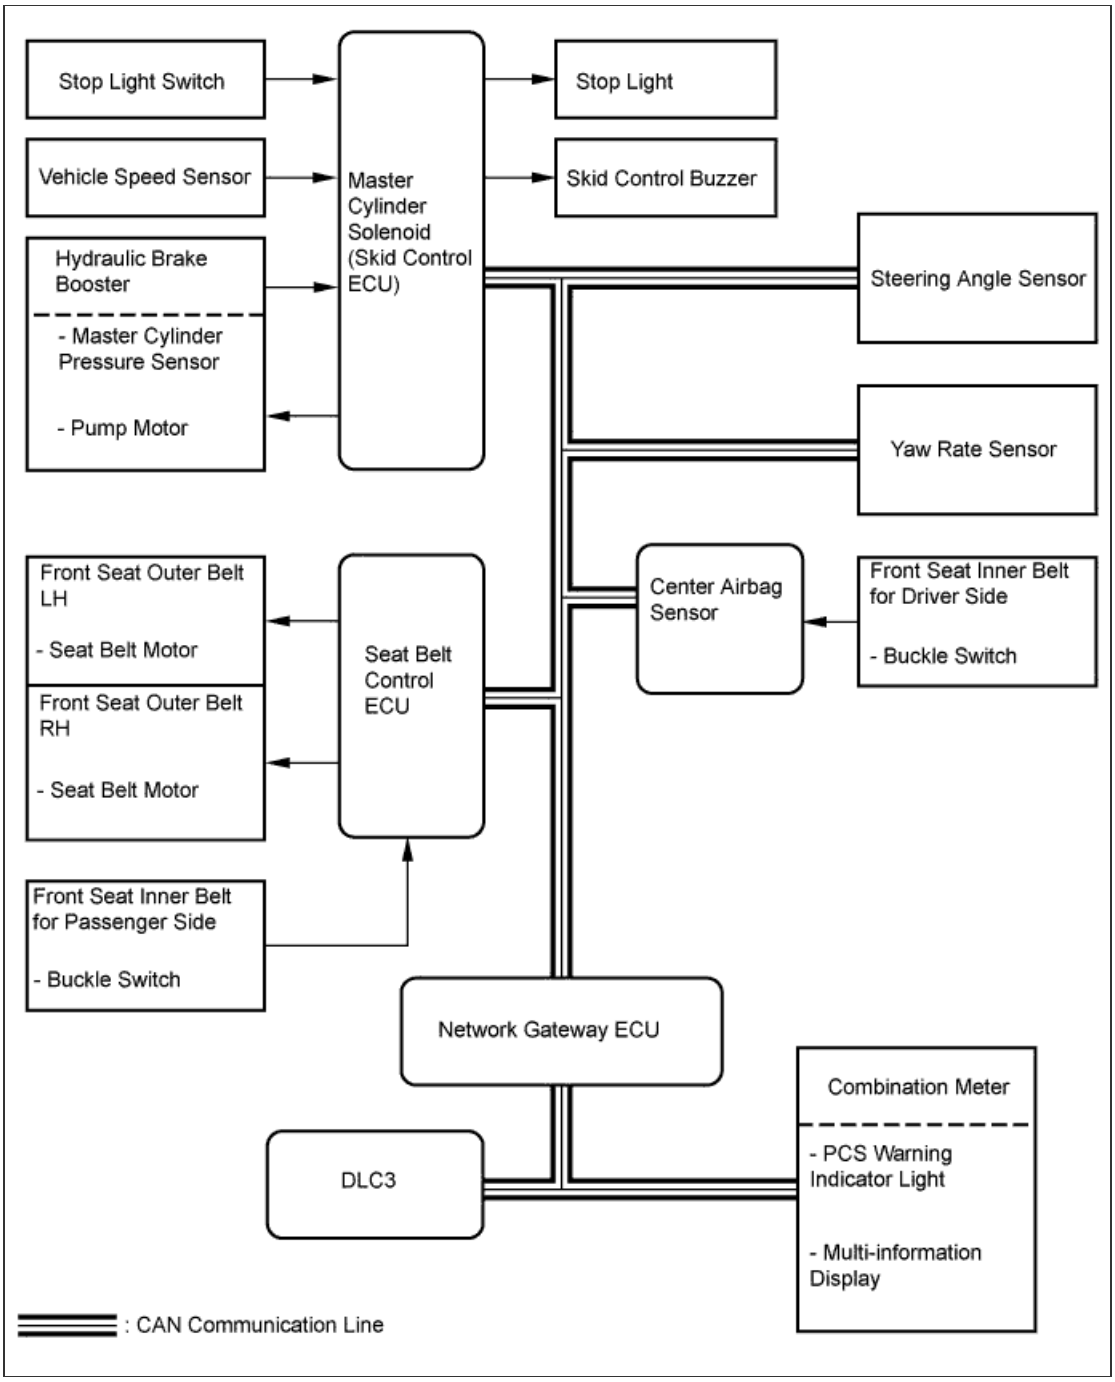

Communication Table

Transmitter	Receiver	Signal	Communication Line
Master Cylinder Solenoid (Skid Control ECU)	Seat Belt Control ECU	• Seat belt operation signal • Sudden braking signal • VSC control signal • Vehicle speed signal	CAN
Center Airbag Sensor	Seat Belt Control ECU	• Buckle switch malfunction signal • Driver seat belt buckle switch signal	CAN
Seat Belt Control ECU	Combination Meter	• Pre-crash safety system malfunction signal • Passenger seat belt buckle switch signal	CAN

for Preparation Click here

PRE-CRASH SAFETY SYSTEM

a. The pre-crash safety system optimizes and activates occupant protection equipment in an attempt to reduce injury in a collision.

OUTLINE OF PRE-CRASH SAFETY SYSTEM

Operating Condition	Control	Transmitting ECU	Receiving ECU	Part Operated
Operates when sudden braking occurs	Pre-crash safety seat belts	Master cylinder solenoid (skid control ECU)	Seat belt control ECU	Front seat outer belts

a. When operating as a result of sudden braking:

The master cylinder solenoid (skid control ECU) uses brake pressure information and other data to determine if the driver has suddenly applied the brakes. If so, the master cylinder solenoid (skid control ECU) sends a signal to the seat belt control ECU through CAN communication and the pre-crash safety seat belt activates.

OUTLINE OF PRE-CRASH SAFETY SEAT BELT CONTROL

a. Pre-crash safety seat belt operation conditions:

- The driver firmly depresses the brake pedal suddenly
- The driver oversteers or the vehicle is spinning

b. Pre-crash safety seat belt non-operation conditions:
If any of the following conditions are met, the pre-crash safety seat belt does not operate.

- The seat belts are not fastened
- The engine switch is off or on (ACC)
- The vehicle speed is approximately 30 km/h (18.6 mph) or less
- When the pre-crash safety seat belts are repeatedly operated and the seat belt control ECU overheats, seat belt operation is prohibited to protect the ECU

HINT:

The PCS warning indicator light in the combination meter will blink at this time.

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the pre-crash safety system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	
CAN DTC is output (for RHD)	C

B. GO TO CAN COMMUNICATION SYSTEM (**Click here**)

C. GO TO CAN COMMUNICATION SYSTEM (**Click here**)

A

4.CHECK INDICATOR

a. Check the indicator (Click here).

NEXT

5.CHECK FOR DTC*

a. Check for DTCs (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs (Click here).

Result

Result	Proceed to
DTC is not output	A
DTC is output	

B. GO TO DTC CHART (Click here)

A

6.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem ymptoms Table (Click here).

Result

Result	Proceed to
alt is not listed in problem symptoms table	A
alt is listed in problem symptoms table	

B. Go to step 8

A

7.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of CU (Click here).

b. Data List Active Test (Click here).

NEXT

8.ADJUST, REPAIR OR REPLACE

NEXT

9.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the pre-crash safety system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	
CAN DTC is output (for RHD)	C

B. GO TO CAN COMMUNICATION SYSTEM (**Click here**)

C. GO TO CAN COMMUNICATION SYSTEM (**Click here**)

A

4.CHECK INDICATOR

a. Check the indicator (Click here).

NEXT

5.CHECK FOR DTC*

a. Check for DTCs (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs (Click here).

Result

Result	Proceed to
DTC is not output	A
DTC is output	

B. GO TO DTC CHART (Click here)

A

6.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem ymptoms Table (Click here).

Result

Result	Proceed to
alt is not listed in problem symptoms table	A
alt is listed in problem symptoms table	

B. Go to step 8

A

7.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of CU (Click here).

b. Data List Active Test (Click here).

NEXT

8.ADJUST, REPAIR OR REPLACE

NEXT

9.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the pre-crash safety system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	
CAN DTC is output (for RHD)	C

B. GO TO CAN COMMUNICATION SYSTEM (**Click here**)

C. GO TO CAN COMMUNICATION SYSTEM (**Click here**)

A

4.CHECK INDICATOR

a. Check the indicator (Click here).

NEXT

5.CHECK FOR DTC*

a. Check for DTCs (Click here).

b. Clear the DTCs (Click here).

c. Recheck for DTCs (Click here).

Result

Result	Proceed to
DTC is not output	A
DTC is output	

B. GO TO DTC CHART (Click here)

A

6.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem ymptoms Table (Click here).

Result

Result	Proceed to
alt is not listed in problem symptoms table	A
alt is listed in problem symptoms table	

B. Go to step 8

A

7.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of CU (Click here).

b. Data List Active Test (Click here).

NEXT

8.ADJUST, REPAIR OR REPLACE

NEXT

9.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to this system before inspecting the suspected areas below.**

Pre-Crash Safety System

Symptom	Suspected Area	See page
Neither normal system code nor DTC is output	Power source circuit	Click here
System does not operate normally even when normal system code is output and DTCs are not output	Power source circuit	Click here

for Preparation Click here

HINT:


- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to this system before inspecting the suspected areas below.**

Pre-Crash Safety System

Symptom	Suspected Area	See page
Neither normal system code nor DTC is output	Power source circuit	Click here
System does not operate normally even when normal system code is output and DTCs are not output	Power source circuit	Click here

for Preparation Click here

CHECK SEAT BELT CONTROL ECU

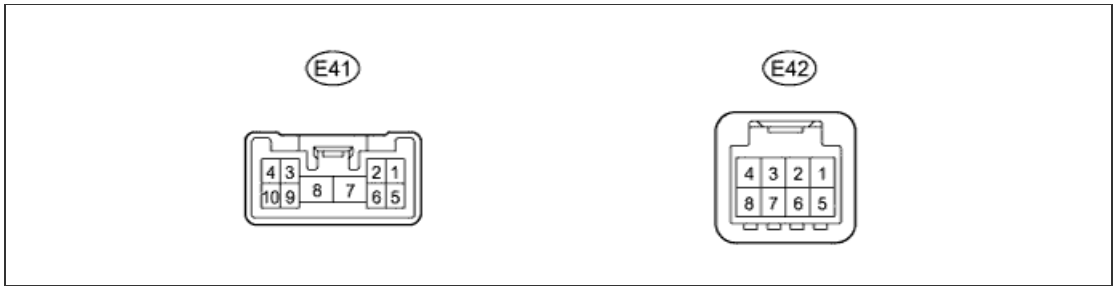

a. Measure the voltage and resistance according to the value(s) in the table below.

HINT:


Check from the rear of the connector while it is connected to the seat belt control ECU.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E41-2 (MOR) - E41- (PGND)	L - W-	assenger side seat belt motor power source line	Engine switch on ( )	4 to .
E41- (MOL) - E41- (PGND)	GR - W-	Driver side seat belt motor power source line	Engine switch on ( )	4 to .
E42- (1) - ody ground	G - ody ground	Seat belt control ECU power source line	Engine switch on ( )	11 to 14
E41-7 ( ) - ody ground	R - W-	Seat belt control ECU power source line	Always	11 to 14
E41-1 (MOR-) - ody ground	- ody ground	Passenger side seat belt motor ground line	Engine switch on ( )	4 to .
E41-4 (MOL-) - ody ground	W - ody ground	Driver side seat belt motor ground line	Engine switch on ( )	4 to .
E41- (P) - ody ground	G - ody ground	Passenger side buckle switch ground line	Always	elow 1 Ω
E41- (P) - E41- (PGND)	G - W-	assenger side buckle switch signal line	Engine switch on ( ) ront passenger side seat belt unfastened (uckle switch off)	Waveform 1
			Engine switch on ( ) ront passenger side seat belt fastened (uckle switchs on)	
E41- (PGND) - ody ground	W- - ody ground	Seat belt control ECU ground line	Always	elow 1 Ω

f the result is not as specified the seat belt control ECU may have a malfunction.

b. nspect using an oscilloscope.

i. Waveform 1 (Reference)

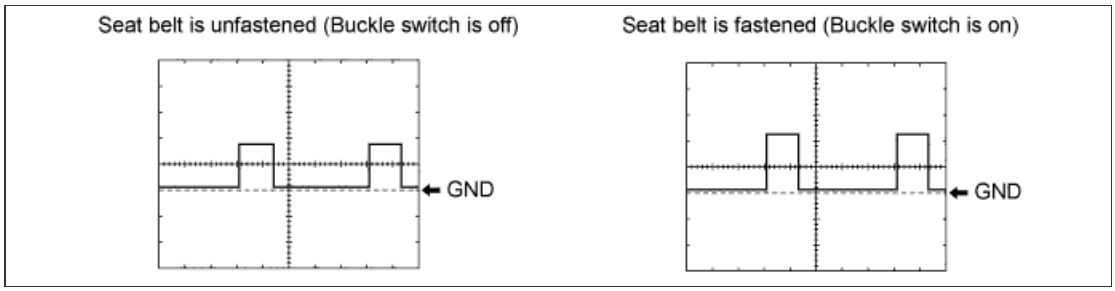

Terminal No. (Symbol)	E41- (P) - E41- (PGND)
Tool Setting	D . 2 ms. D .
Switch Condition	Engine switch on ( ) ront passenger side seat belt unfastened (uckle switch off)
	Engine switch on ( ) ront passenger side seat belt fastened (uckle switch on)

for Preparation Click here

INITIAL CHECK

a. The initial check occurs when the engine switch is off for more than 2 seconds, and then turned on (IG). The initial check consists of the pre-crash safety system diagnostic check which lasts approximately 3 seconds.


b. If a malfunction is detected during the initial check, the multi-information display displays "Check PCS System" or "PCS Not available now".

Warning Message	Detail	DTC	PCS Warning Indicator
Check PCS System	This message appears when the seat belt control ECU detects a system malfunction	DTC is output	ON
PCS Not available now	This message appears when the seat belt control ECU is in the fail-safe mode	DTC is not output	Blinking

CONSTANT CHECK

a. After completing the initial check, the pre-crash safety system will become operational. Then, the diagnosis circuit will perform a constant check to check that there is not a system malfunction.

b. If a malfunction is detected during the constant check, the multi-information display displays "Check PCS System" or "PCS Not available now".

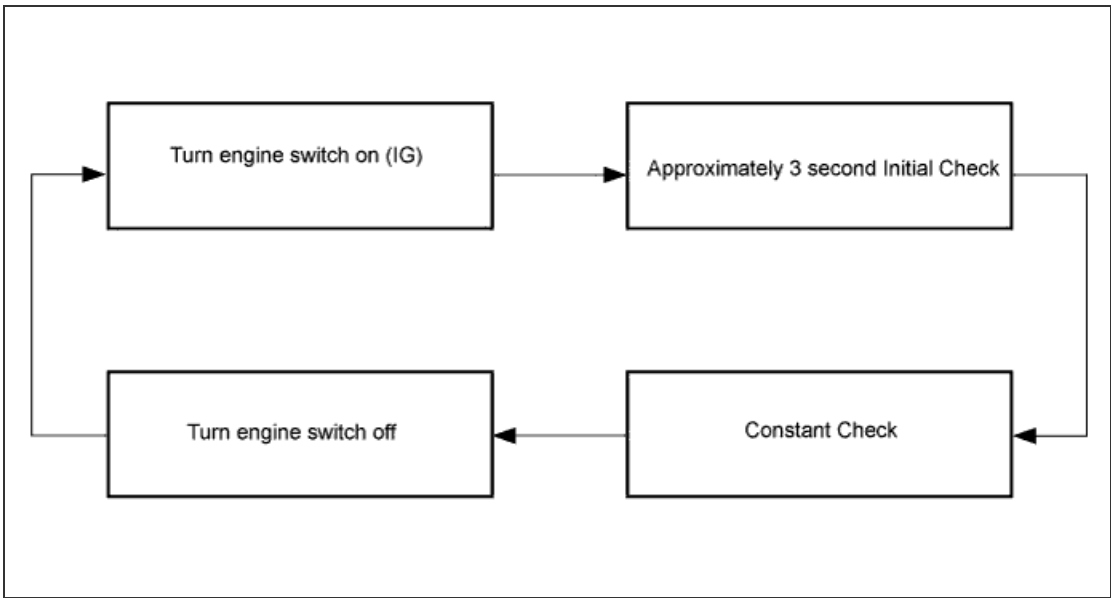

for Preparation Click here

CHECK DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Pre-Crash / Trouble Codes.

e. Read the DTCs.

CLEAR DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Pre-Crash / Trouble Codes.

e. Clear the DTCs.

for Preparation Click here

HINT:

The pre-crash safety system fail-safe function and details are indicated in the table below.

Cause	arning essage	Fail-safe Operation	Conditions to Return to ormal Condition
alfunction exists in part of pre-crash safety system	Check CS System or CS ot available now	epending on the malfunctioning part, the pre-crash seat belt or the brake assist system may stop operating.	Repair the malfunctioning part
Radiator grille is dirty	CS ot available now	epending on the amount of dirt on the radiator grille, the pre-crash seat belt or the brake assist system may stop operating.	Clean the radiator grille

The pre-crash seat belts operate only with sudden braking.

for Preparation Click here

READ DATA LIST

HINT:

Using the intelligent tester to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Pre-Crash / Data List.

e. According to the display on the intelligent tester, read the Data List.

Pre-Crash

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Driver Buckle SW	Driver side buckle switch status / UNSET, SET or NG	UNSET: Driver side seat belt unfastened SET: Driver side seat belt fastened NG: Indeterminate data	-
Passenger Buckle SW	Front passenger side buckle switch status / UNSET, SET or NG	UNSET: Passenger side seat belt unfastened SET: Passenger side seat belt fastened NG: Indeterminate data	-
Driver Belt Control	Seat belt control status of driver side seat / STOP, ON or ERROR	STOP: Control stopped ON: Controlled ERROR: Indeterminate data	Driver side seat belt is fastened
Passenger Belt Control	Seat belt control status of passenger side seat / STOP, ON or ERROR	STOP: Control stopped ON: Controlled ERROR: Indeterminate data	Passenger side seat belt is fastened
Number of Trouble Codes	Number of present trouble codes / Min.: 0, Ma .: 255	Number of DTCs present	-

PERFORM ACTIVE TEST

HINT:

Using the intelligent tester to perform Active Tests allows relays, VSVs, actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. Performing Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: All ECUs / (desired menu) / Active Test.

e. According to the display on the intelligent tester, perform the Active Test.

Pre-Crash

Tester Display	Test Part	Control Range	Diagnostic Note
Driver Seat Belt Motor	Driver side seat belt motor	OFF or ON	Driver side seat belt is fastened

Passenger Seat Belt Motor	Passenger side seat belt motor	OFF or ON	Passenger side seat belt is fastened
Driver and Passenger Seat Belt Motor	Driver and passenger side seat belt motors	OFF or ON	Driver and passenger side seat belts are fastened

ABS/VSC/TRAC

Tester Display	Test Part	Control Range	Diagnostic Note
Buzzer	Skid control buzzer sounds	OFF or ON	-

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Pre-Crash Safety System

DTC Code	Detection Item	Trouble Area	See page
B2000	Short to B+ in Seat Belt Motor RH Circuit	- Front seat outer belt RH - Harness or connector - Seat belt control ECU	Click here
B2001	Short to GND in Seat Belt Motor RH Circuit	- Front seat outer belt RH - Harness or connector - Seat belt control ECU	Click here
B2002	Open in Seat Belt Motor RH Circuit	- Front seat outer belt RH - Harness or connector - Seat belt control ECU	Click here
B2005	Short to B+ in Seat Belt Motor LH Circuit	- Front seat outer belt LH - Harness or connector - Seat belt control ECU	Click here
B2006	Short to GND in Seat Belt Motor LH Circuit	- Front seat outer belt LH - Harness or connector - Seat belt control ECU	Click here
B2007	Open in Seat Belt Motor LH Circuit	- Front seat outer belt LH - Harness or connector - Seat belt control ECU	Click here
B2015	Open in Right Side Upper MOS	Seat belt control ECU	Click here
B2016	Open in Right Side Lower MOS	Seat belt control ECU	Click here
B2020	Open in Left Side Upper MOS	Seat belt control ECU	Click here
B2021	Open in Left Side Lower MOS	Seat belt control ECU	Click here
B2025	Right Side Current Detection Circuit Malfunction Hi	Seat belt control ECU	Click here
B2026	Right Side Current Detection Circuit Malfunction Lo	Seat belt control ECU	Click here
B2027	Right Side Over-Current Malfunction	Seat belt control ECU	Click here
B20 0	Left Side Current Detection Circuit Malfunction Hi	Seat belt control ECU	Click here
B20 1	Left Side Current Detection Circuit Malfunction Lo	Seat belt control ECU	Click here
B20 2	Left Side Over-Current Malfunction	Seat belt control ECU	Click here
B20 5	Power Suppl Rela Adherence Malfunction	Seat belt control ECU	Click here
B20	ower Suppl Rela Malfunction Open	- Harness or connector - Fuse - Seat belt control ECU	Click here
B2040	EEPROM Malfunction	Seat belt control ECU	Click here
B2041	Fall of Raised Voltage	Seat belt control ECU	Click here
B204	Fall of B+ Voltage	Seat belt control ECU	Click here
B2047	Seat Belt Control ECU Inner Circuit Malfunction	Seat belt control ECU	Click here
B2060	ABS Malfunction	- CAN communication s stem - Vehicle stabilit ontrol s stem - Seat belt control ECU	Click here
B2070	VSC Buzzer	- Vehicle stabilit ontrol s stem - Seat belt control ECU	Click here
B2071	Stop Light Control Rela Malfunction	- CAN communication s stem - Vehicle stabilit ontrol s stem - Seat belt control ECU	Click here
B2074	Driver Side Seat Belt Buckle Switch Circuit Malfunction	- Front seat inner belt LH assembl - Center airbag sensor - Seat belt control ECU - CAN communication s stem	Click here
B2075	Passenger Side Seat Belt Buckle Switch Circuit Malfunction	- Harness or connector - Front seat inner belt dr passenger side - Seat belt control ECU	Click here
		- CAN communication s stem	

U0122	Lost Communication with Vehicle Stabilit Control Module	- Master c linder solenoid skid control ECU - Seat belt control ECU	Click here
U0151	Lost Communication with Airbag ECU	- CAN communication s stem - Center airbag sensor - Seat belt control ECU	Click here

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Pre-Crash Safety System

DTC Code	Detection Item	Trouble Area	See page
B2000	Short to B+ in Seat Belt Motor RH Circuit	- Front seat outer belt RH - Harness or connector - Seat belt control ECU	Click here
B2001	Short to GND in Seat Belt Motor RH Circuit	- Front seat outer belt RH - Harness or connector - Seat belt control ECU	Click here
B2002	Open in Seat Belt Motor RH Circuit	- Front seat outer belt RH - Harness or connector - Seat belt control ECU	Click here
B2005	Short to B+ in Seat Belt Motor LH Circuit	- Front seat outer belt LH - Harness or connector - Seat belt control ECU	Click here
B2006	Short to GND in Seat Belt Motor LH Circuit	- Front seat outer belt LH - Harness or connector - Seat belt control ECU	Click here
B2007	Open in Seat Belt Motor LH Circuit	- Front seat outer belt LH - Harness or connector - Seat belt control ECU	Click here
B2015	Open in Right Side Upper MOS	Seat belt control ECU	Click here
B2016	Open in Right Side Lower MOS	Seat belt control ECU	Click here
B2020	Open in Left Side Upper MOS	Seat belt control ECU	Click here
B2021	Open in Left Side Lower MOS	Seat belt control ECU	Click here
B2025	Right Side Current Detection Circuit Malfunction Hi	Seat belt control ECU	Click here
B2026	Right Side Current Detection Circuit Malfunction Lo	Seat belt control ECU	Click here
B2027	Right Side Over-Current Malfunction	Seat belt control ECU	Click here
B20 0	Left Side Current Detection Circuit Malfunction Hi	Seat belt control ECU	Click here
B20 1	Left Side Current Detection Circuit Malfunction Lo	Seat belt control ECU	Click here
B20 2	Left Side Over-Current Malfunction	Seat belt control ECU	Click here
B20 5	Power Suppl Rela Adherence Malfunction	Seat belt control ECU	Click here
B20	ower Suppl Rela Malfunction Open	- Harness or connector - Fuse - Seat belt control ECU	Click here
B2040	EEPROM Malfunction	Seat belt control ECU	Click here
B2041	Fall of Raised Voltage	Seat belt control ECU	Click here
B204	Fall of B+ Voltage	Seat belt control ECU	Click here
B2047	Seat Belt Control ECU Inner Circuit Malfunction	Seat belt control ECU	Click here
B2060	ABS Malfunction	- CAN communication s stem - Vehicle stabilit ontrol s stem - Seat belt control ECU	Click here
B2070	VSC Buzzer	- Vehicle stabilit ontrol s stem - Seat belt control ECU	Click here
B2071	Stop Light Control Rela Malfunction	- CAN communication s stem - Vehicle stabilit ontrol s stem - Seat belt control ECU	Click here
B2074	Driver Side Seat Belt Buckle Switch Circuit Malfunction	- Front seat inner belt LH assembl - Center airbag sensor - Seat belt control ECU - CAN communication s stem	Click here
B2075	Passenger Side Seat Belt Buckle Switch Circuit Malfunction	- Harness or connector - Front seat inner belt dr passenger side - Seat belt control ECU	Click here
		- CAN communication s stem	

U0122	Lost Communication with Vehicle Stabilit Control Module	- Master c linder solenoid skid control ECU - Seat belt control ECU	Click here
U0151	Lost Communication with Airbag ECU	- CAN communication s stem - Center airbag sensor - Seat belt control ECU	Click here

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Pre-Crash Safety System

DTC Code	Detection Item	Trouble Area	See page
B2000	Short to B+ in Seat Belt Motor RH Circuit	- Front seat outer belt RH - Harness or connector - Seat belt control ECU	Click here
B2001	Short to GND in Seat Belt Motor RH Circuit	- Front seat outer belt RH - Harness or connector - Seat belt control ECU	Click here
B2002	Open in Seat Belt Motor RH Circuit	- Front seat outer belt RH - Harness or connector - Seat belt control ECU	Click here
B2005	Short to B+ in Seat Belt Motor LH Circuit	- Front seat outer belt LH - Harness or connector - Seat belt control ECU	Click here
B2006	Short to GND in Seat Belt Motor LH Circuit	- Front seat outer belt LH - Harness or connector - Seat belt control ECU	Click here
B2007	Open in Seat Belt Motor LH Circuit	- Front seat outer belt LH - Harness or connector - Seat belt control ECU	Click here
B2015	Open in Right Side Upper MOS	Seat belt control ECU	Click here
B2016	Open in Right Side Lower MOS	Seat belt control ECU	Click here
B2020	Open in Left Side Upper MOS	Seat belt control ECU	Click here
B2021	Open in Left Side Lower MOS	Seat belt control ECU	Click here
B2025	Right Side Current Detection Circuit Malfunction Hi	Seat belt control ECU	Click here
B2026	Right Side Current Detection Circuit Malfunction Lo	Seat belt control ECU	Click here
B2027	Right Side Over-Current Malfunction	Seat belt control ECU	Click here
B20 0	Left Side Current Detection Circuit Malfunction Hi	Seat belt control ECU	Click here
B20 1	Left Side Current Detection Circuit Malfunction Lo	Seat belt control ECU	Click here
B20 2	Left Side Over-Current Malfunction	Seat belt control ECU	Click here
B20 5	Power Suppl Rela Adherence Malfunction	Seat belt control ECU	Click here
B20	ower Suppl Rela Malfunction Open	- Harness or connector - Fuse - Seat belt control ECU	Click here
B2040	EEPROM Malfunction	Seat belt control ECU	Click here
B2041	Fall of Raised Voltage	Seat belt control ECU	Click here
B204	Fall of B+ Voltage	Seat belt control ECU	Click here
B2047	Seat Belt Control ECU Inner Circuit Malfunction	Seat belt control ECU	Click here
B2060	ABS Malfunction	- CAN communication s stem - Vehicle stabilit ontrol s stem - Seat belt control ECU	Click here
B2070	VSC Buzzer	- Vehicle stabilit ontrol s stem - Seat belt control ECU	Click here
B2071	Stop Light Control Rela Malfunction	- CAN communication s stem - Vehicle stabilit ontrol s stem - Seat belt control ECU	Click here
B2074	Driver Side Seat Belt Buckle Switch Circuit Malfunction	- Front seat inner belt LH assembl - Center airbag sensor - Seat belt control ECU - CAN communication s stem	Click here
B2075	Passenger Side Seat Belt Buckle Switch Circuit Malfunction	- Harness or connector - Front seat inner belt dr passenger side - Seat belt control ECU	Click here
		- CAN communication s stem	

U0122	Lost Communication with Vehicle Stabilit Control Module	- Master c linder solenoid skid control ECU - Seat belt control ECU	Click here
U0151	Lost Communication with Airbag ECU	- CAN communication s stem - Center airbag sensor - Seat belt control ECU	Click here

DTC B2000 Short to B+ in Seat Belt Motor RH Circuit

DTC B2005 Short to B+ in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2000	• Short to B+ in the seat belt motor RH circuit continues for 1 second or more. • Short in the seat belt motor RH circuit.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B2005	• Short to B+ in the seat belt motor LH circuit continues for 1 second or more. • Short in the seat belt motor LH circuit.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

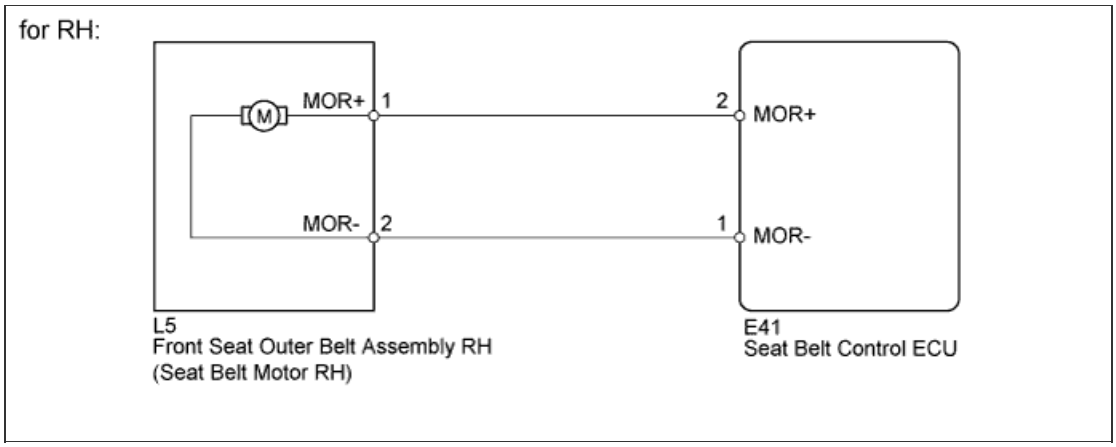

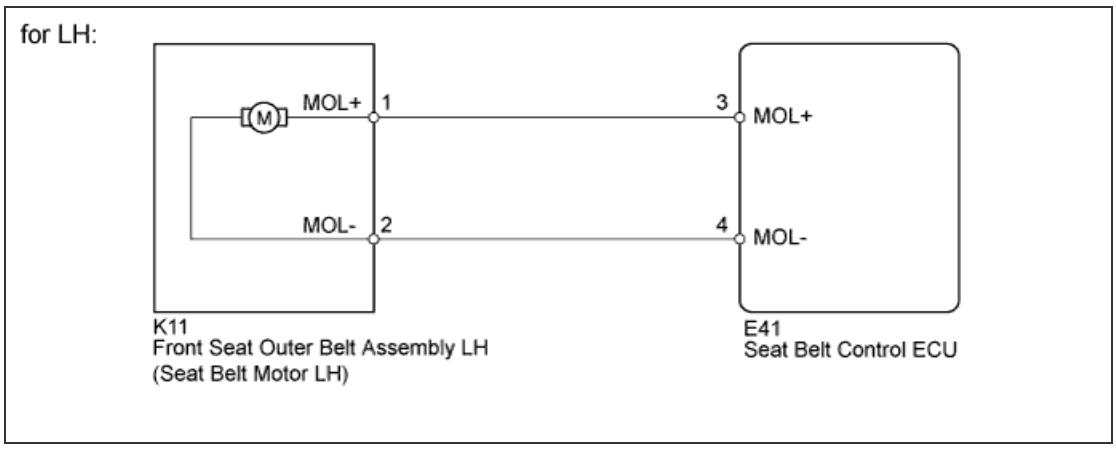

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follow the correct inspection procedure, as failure to follow the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.CHECK SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the voltage according to the value(s) in the table below.

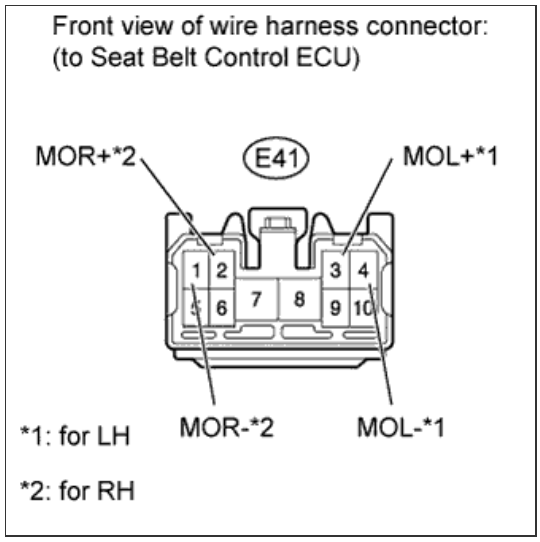

Standard Voltage:

for LH

Tester Connection	Switch Condition	Specified Condition
E41-3 (MOL+) - Body ground	Engine switch on (IG)	Below 1 V
E41-4 (MOL-) - Body ground		

for RH

Tester Connection	Switch Condition	Specified Condition
E41-1 (MOR-) - Body ground	Engine switch on (IG)	Below 1 V
E41-2 (MOR+) - Body ground		

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B	REPLACE SEAT BELT CONTROL ECU (Click here)
C	Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)


a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11*1 or L5*2 front seat outer belt connector.

HINT:

- ***1: for LH**
- ***2: for RH**

c. Measure the voltage according to the value(s) in the table below.

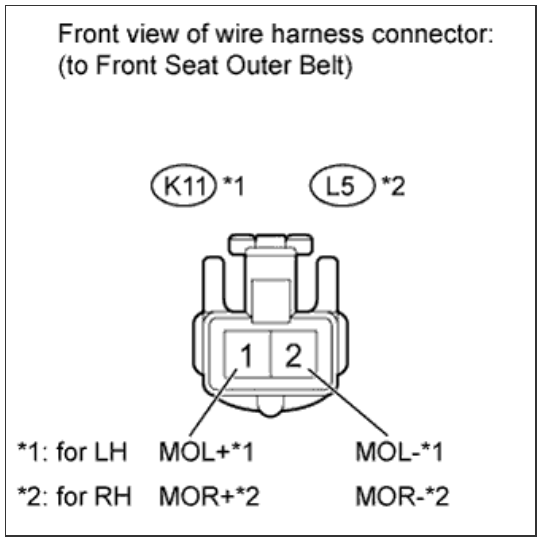

Standard Voltage :

for LH

Tester Connection	Switch Condition	Specified Condition
K11-1 (MOL+) - Body ground	Engine switch on (IG)	Below 1 V
K11-2 (MOL-) - Body ground		

for RH

Tester Connection	Switch Condition	Specified Condition
L5-1 (MOR+) - Body ground	Engine switch on (IG)	Below 1 V
L5-2 (MOR-) - Body ground		

Result

Result	Proceed to
OK (for DTC B2000)	A
OK (for DTC B2005)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2000 Short to B+ in Seat Belt Motor RH Circuit

DTC B2005 Short to B+ in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2000	• Short to B+ in the seat belt motor RH circuit continues for 1 second or more. • Short in the seat belt motor RH circuit.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B2005	• Short to B+ in the seat belt motor LH circuit continues for 1 second or more. • Short in the seat belt motor LH circuit.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

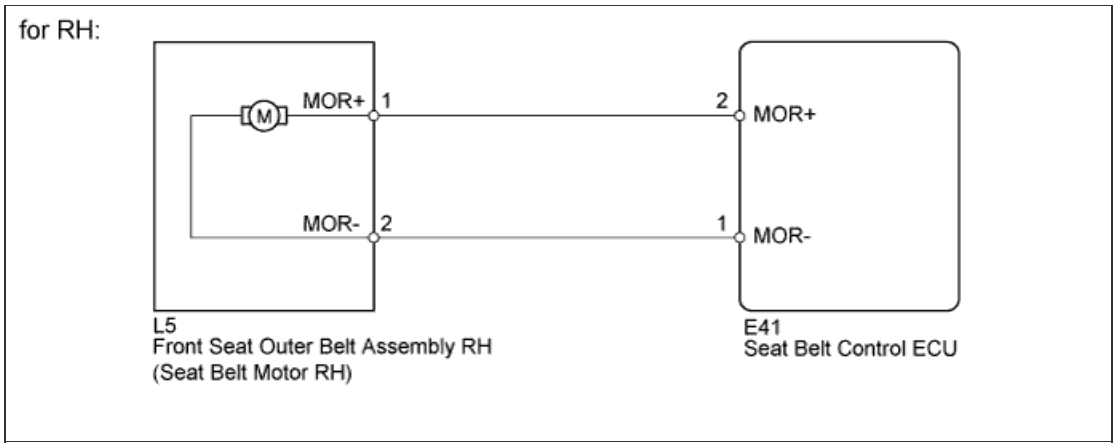

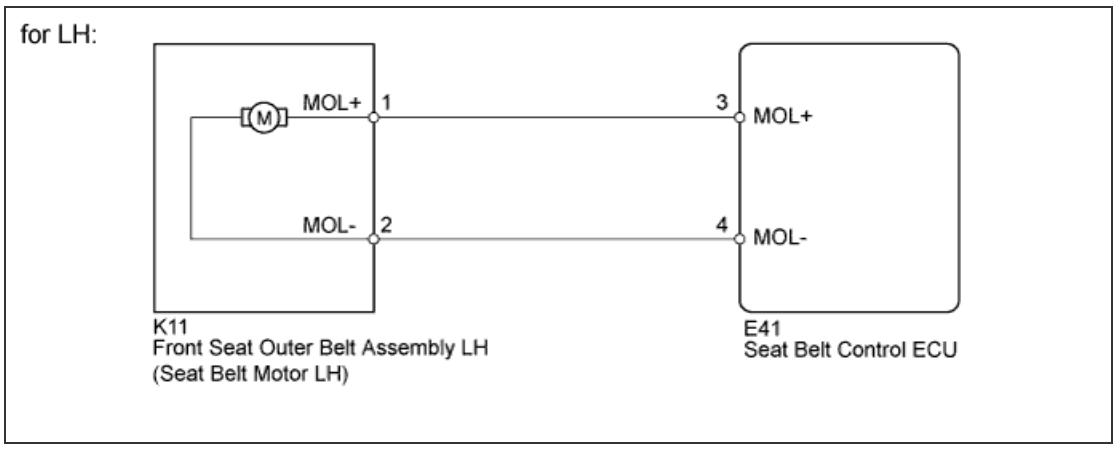

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follow the correct inspection procedure, as failure to follow the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.CHECK SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the voltage according to the value(s) in the table below.

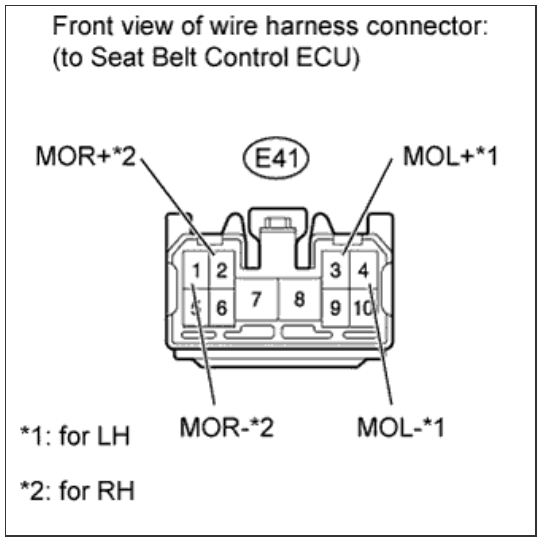

Standard Voltage:

for LH

Tester Connection	Switch Condition	Specified Condition
E41-3 (MOL+) - Body ground	Engine switch on (IG)	Below 1 V
E41-4 (MOL-) - Body ground		

for RH

Tester Connection	Switch Condition	Specified Condition
E41-1 (MOR-) - Body ground	Engine switch on (IG)	Below 1 V
E41-2 (MOR+) - Body ground		

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B	REPLACE SEAT BELT CONTROL ECU (Click here)
C	Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)


a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11*1 or L5*2 front seat outer belt connector.

HINT:

- ***1: for LH**
- ***2: for RH**

c. Measure the voltage according to the value(s) in the table below.

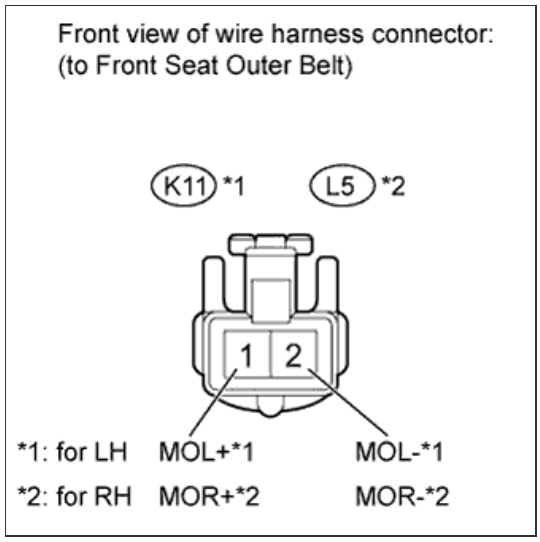

Standard Voltage :

for LH

Tester Connection	Switch Condition	Specified Condition
K11-1 (MOL+) - Body ground	Engine switch on (IG)	Below 1 V
K11-2 (MOL-) - Body ground		

for RH

Tester Connection	Switch Condition	Specified Condition
L5-1 (MOR+) - Body ground	Engine switch on (IG)	Below 1 V
L5-2 (MOR-) - Body ground		

Result

Result	Proceed to
OK (for DTC B2000)	A
OK (for DTC B2005)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2000 Short to B+ in Seat Belt Motor RH Circuit

DTC B2005 Short to B+ in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2000	• Short to B+ in the seat belt motor RH circuit continues for 1 second or more. • Short in the seat belt motor RH circuit.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B2005	• Short to B+ in the seat belt motor LH circuit continues for 1 second or more. • Short in the seat belt motor LH circuit.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

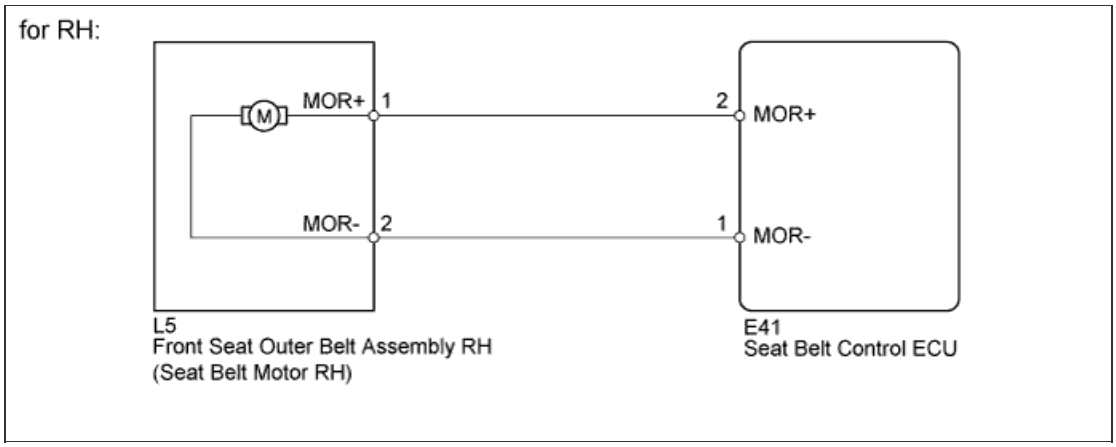

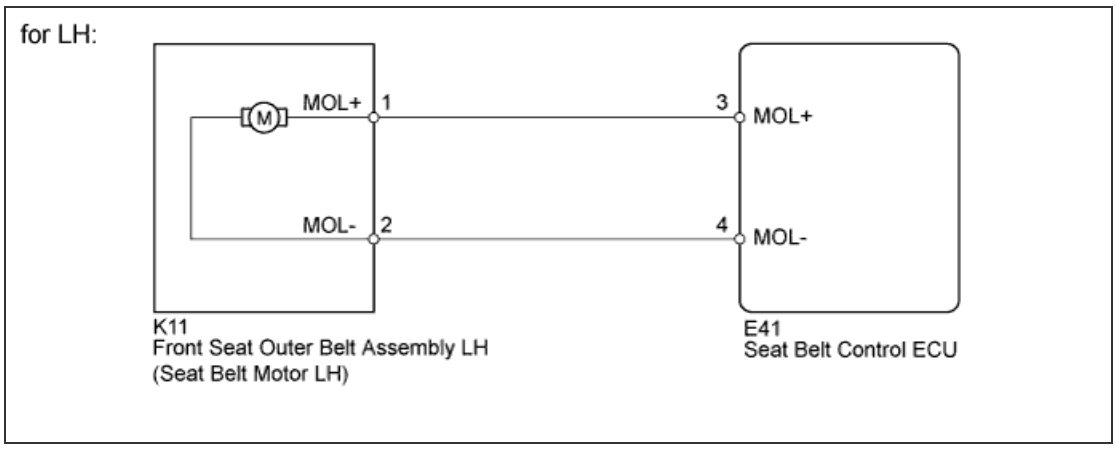

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follow the correct inspection procedure, as failure to follow the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.CHECK SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the voltage according to the value(s) in the table below.

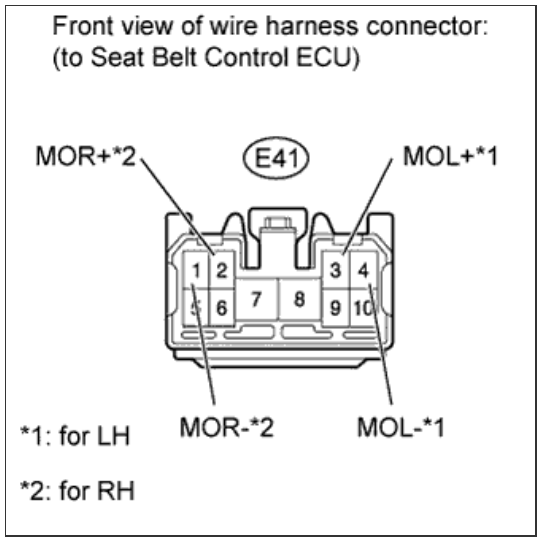

Standard Voltage:

for LH

Tester Connection	Switch Condition	Specified Condition
E41-3 (MOL+) - Body ground	Engine switch on (IG)	Below 1 V
E41-4 (MOL-) - Body ground		

for RH

Tester Connection	Switch Condition	Specified Condition
E41-1 (MOR-) - Body ground	Engine switch on (IG)	Below 1 V
E41-2 (MOR+) - Body ground		

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B	REPLACE SEAT BELT CONTROL ECU (Click here)
C	Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)


a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11*1 or L5*2 front seat outer belt connector.

HINT:

- ***1: for LH**
- ***2: for RH**

c. Measure the voltage according to the value(s) in the table below.

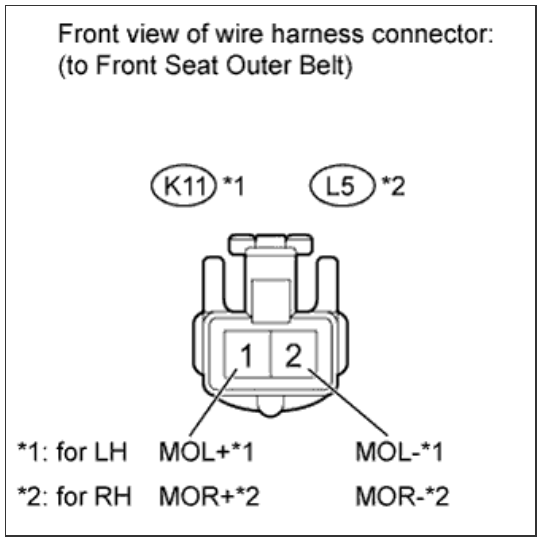

Standard Voltage :

for LH

Tester Connection	Switch Condition	Specified Condition
K11-1 (MOL+) - Body ground	Engine switch on (IG)	Below 1 V
K11-2 (MOL-) - Body ground		

for RH

Tester Connection	Switch Condition	Specified Condition
L5-1 (MOR+) - Body ground	Engine switch on (IG)	Below 1 V
L5-2 (MOR-) - Body ground		

Result

Result	Proceed to
OK (for DTC B2000)	A
OK (for DTC B2005)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2000 Short to B+ in Seat Belt Motor RH Circuit

DTC B2005 Short to B+ in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2000	• Short to B+ in the seat belt motor RH circuit continues for 1 second or more. • Short in the seat belt motor RH circuit.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B2005	• Short to B+ in the seat belt motor LH circuit continues for 1 second or more. • Short in the seat belt motor LH circuit.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

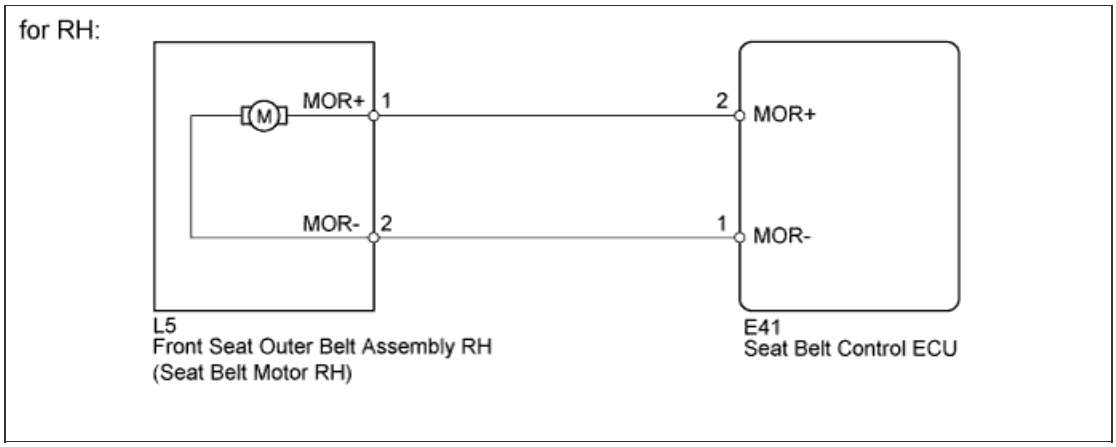

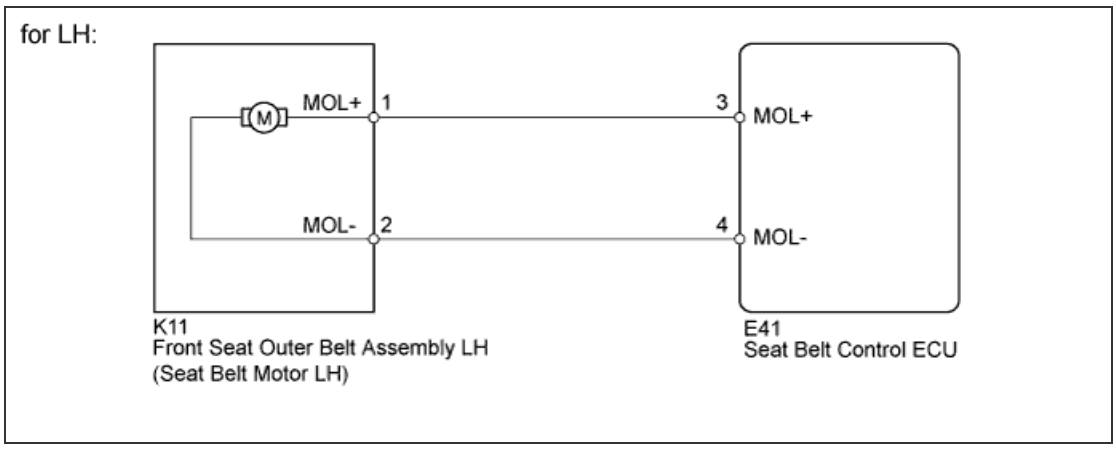

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follow the correct inspection procedure, as failure to follow the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.CHECK SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the voltage according to the value(s) in the table below.

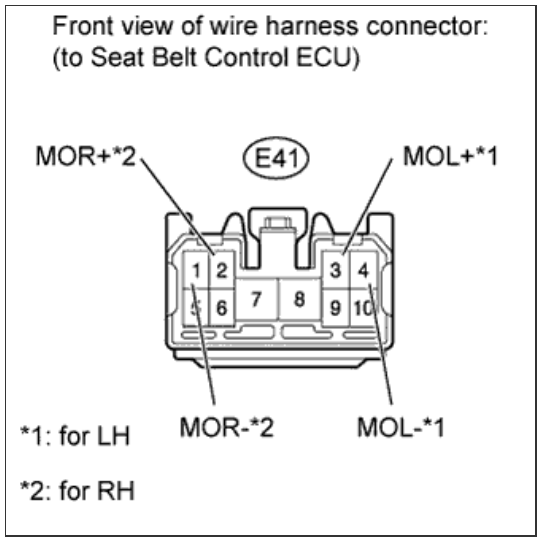

Standard Voltage:

for LH

Tester Connection	Switch Condition	Specified Condition
E41-3 (MOL+) - Body ground	Engine switch on (IG)	Below 1 V
E41-4 (MOL-) - Body ground		

for RH

Tester Connection	Switch Condition	Specified Condition
E41-1 (MOR-) - Body ground	Engine switch on (IG)	Below 1 V
E41-2 (MOR+) - Body ground		

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B	REPLACE SEAT BELT CONTROL ECU (Click here)
C	Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)


a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11*1 or L5*2 front seat outer belt connector.

HINT:

- ***1: for LH**
- ***2: for RH**

c. Measure the voltage according to the value(s) in the table below.

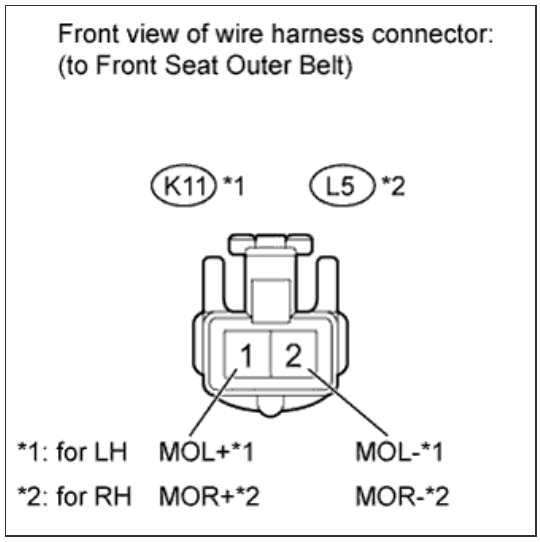

Standard Voltage :

for LH

Tester Connection	Switch Condition	Specified Condition
K11-1 (MOL+) - Body ground	Engine switch on (IG)	Below 1 V
K11-2 (MOL-) - Body ground		

for RH

Tester Connection	Switch Condition	Specified Condition
L5-1 (MOR+) - Body ground	Engine switch on (IG)	Below 1 V
L5-2 (MOR-) - Body ground		

Result

Result	Proceed to
OK (for DTC B2000)	A
OK (for DTC B2005)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2001 Short to GND in Seat Belt Motor RH Circuit

DTC B2006 Short to GND in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2001	• Short to ground in seat belt motor RH circuit continues for 1 second or more. • Short in seat belt motor RH circuit.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B2006	• Short to ground in seat belt motor LH circuit continues for 1 second or more. • Short in seat belt motor LH circuit.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

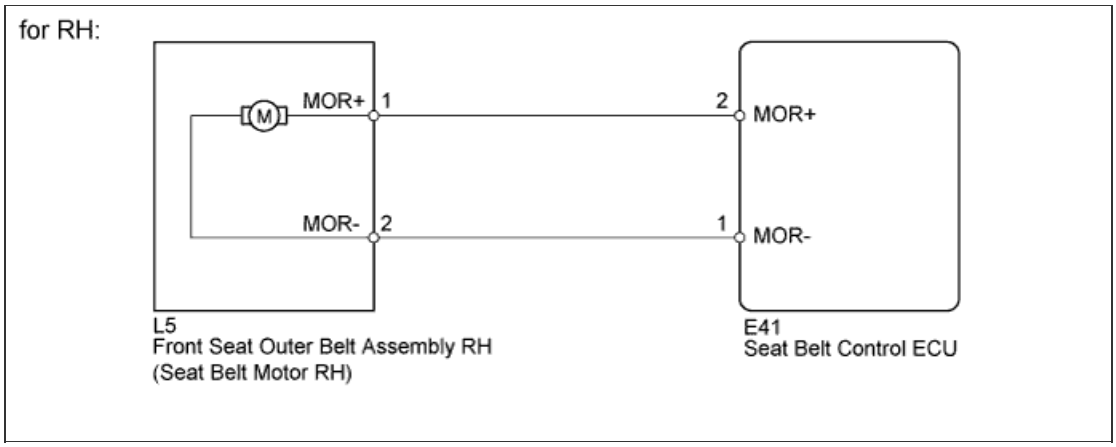

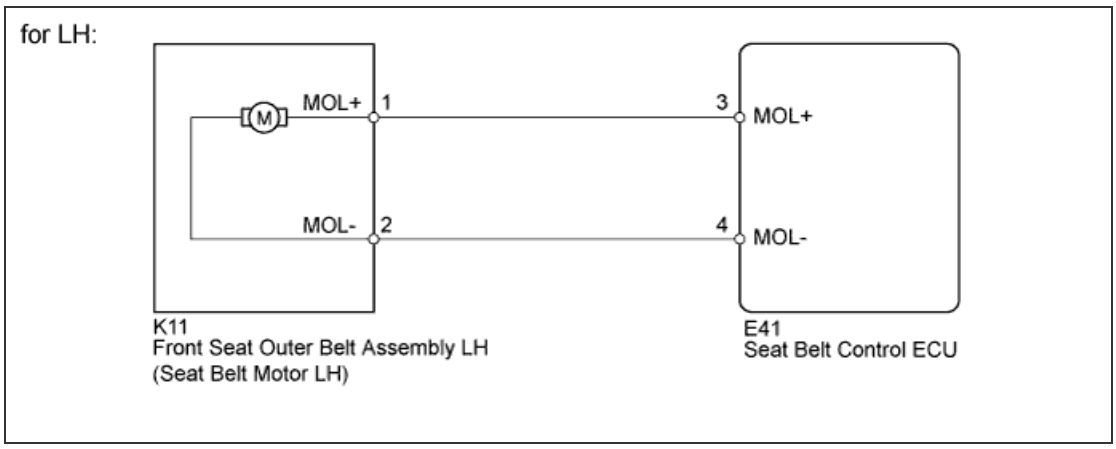

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follo the correct inspection procedure, as failure to follo the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.CHECK SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the resistance according to the value(s) in the table belo .

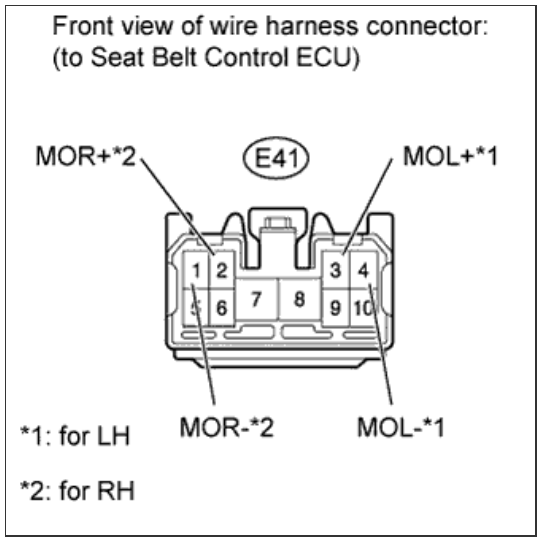

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - Body ground	Al ays	1 MΩ or higher
E41-4 (MOL-) - Body ground		

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - Body ground	Al ays	1 MΩ or higher
E41-2 (MOR+) - Body ground		

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B	REPLACE SEAT BELT CONTROL ECU (Click here)
C	Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)


a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11 1 or L5 2 front seat outer belt connector.

HINT:

- ***1: for LH**
- ***2: for RH**

c. Measure the resistance according to the value(s) in the table belo .

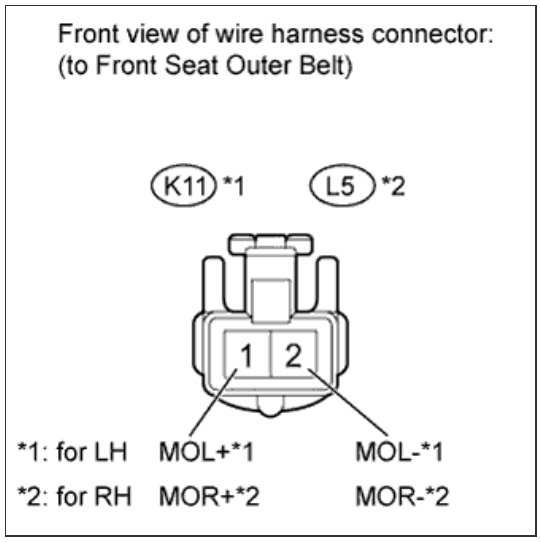

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
K11-1 (MOL+) - Body ground	Al ays	1 MΩ or higher
K11-2 (MOL-) - Body ground		

for RH

Tester Connection	Condition	Specified Condition
L5-1 (MOR+) - Body ground	Al ays	1 MΩ or higher
L5-2 (MOR-) - Body ground		

Result

Result	Proceed to
OK (for DTC B2001)	A
OK (for DTC B2006)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2001 Short to GND in Seat Belt Motor RH Circuit

DTC B2006 Short to GND in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2001	• Short to ground in seat belt motor RH circuit continues for 1 second or more. • Short in seat belt motor RH circuit.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B2006	• Short to ground in seat belt motor LH circuit continues for 1 second or more. • Short in seat belt motor LH circuit.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

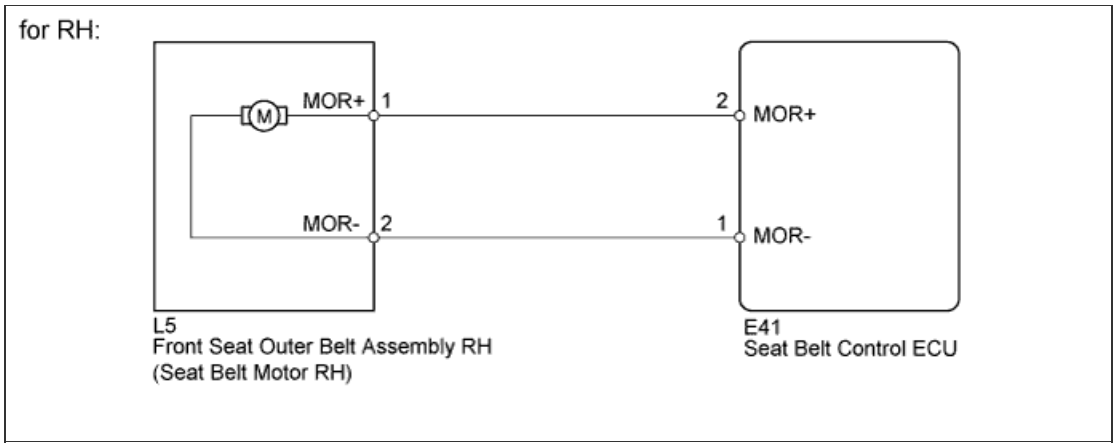

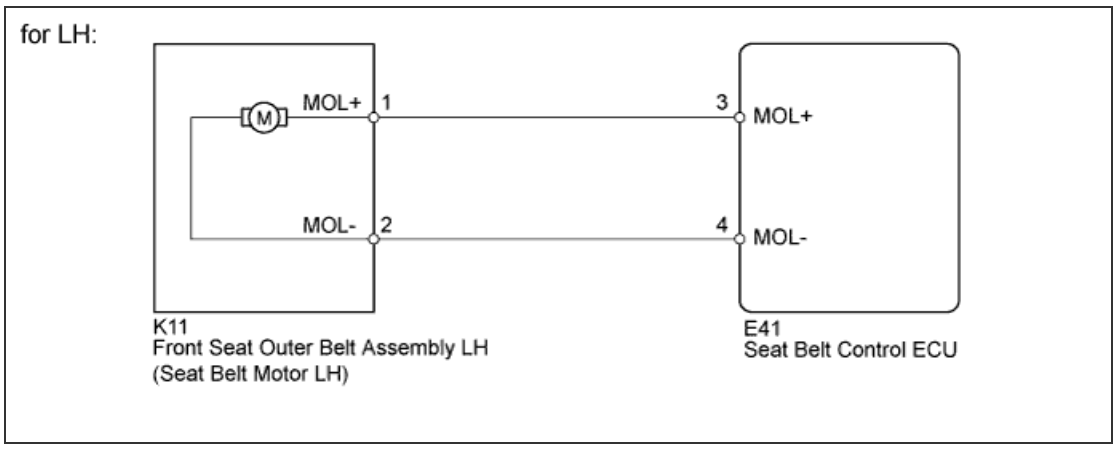

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follo the correct inspection procedure, as failure to follo the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.CHECK SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the resistance according to the value(s) in the table belo .

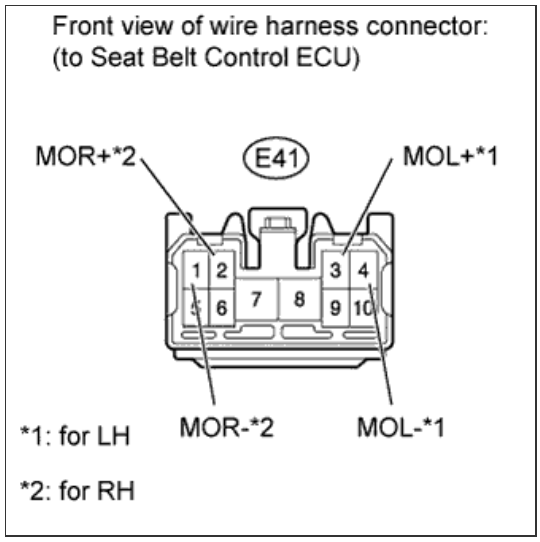

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - Body ground	Al ays	1 MΩ or higher
E41-4 (MOL-) - Body ground		

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - Body ground	Al ays	1 MΩ or higher
E41-2 (MOR+) - Body ground		

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B	REPLACE SEAT BELT CONTROL ECU (Click here)
C	Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)


a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11 1 or L5 2 front seat outer belt connector.

HINT:

- ***1: for LH**
- ***2: for RH**

c. Measure the resistance according to the value(s) in the table belo .

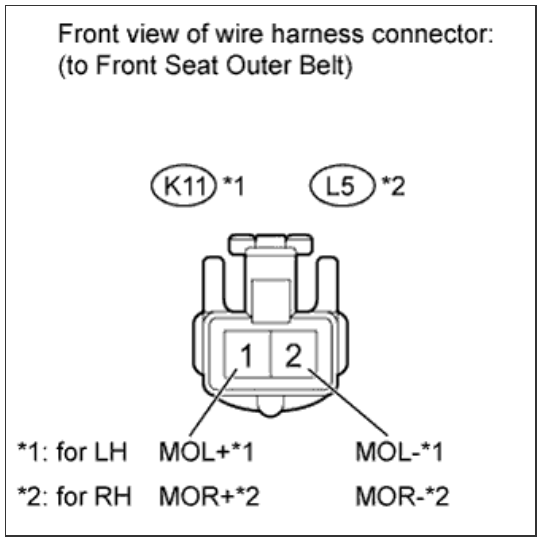

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
K11-1 (MOL+) - Body ground	Al ays	1 MΩ or higher
K11-2 (MOL-) - Body ground		

for RH

Tester Connection	Condition	Specified Condition
L5-1 (MOR+) - Body ground	Al ays	1 MΩ or higher
L5-2 (MOR-) - Body ground		

Result

Result	Proceed to
OK (for DTC B2001)	A
OK (for DTC B2006)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2001 Short to GND in Seat Belt Motor RH Circuit

DTC B2006 Short to GND in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2001	• Short to ground in seat belt motor RH circuit continues for 1 second or more. • Short in seat belt motor RH circuit.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B2006	• Short to ground in seat belt motor LH circuit continues for 1 second or more. • Short in seat belt motor LH circuit.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

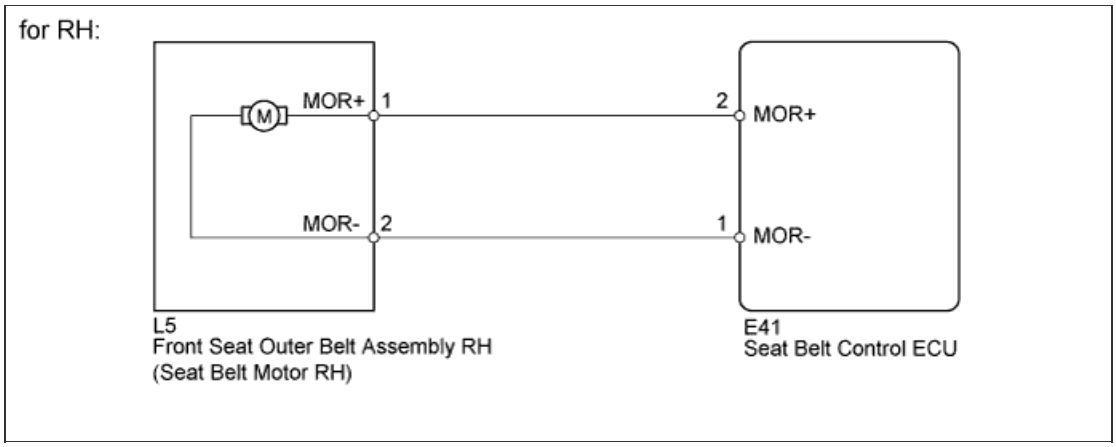

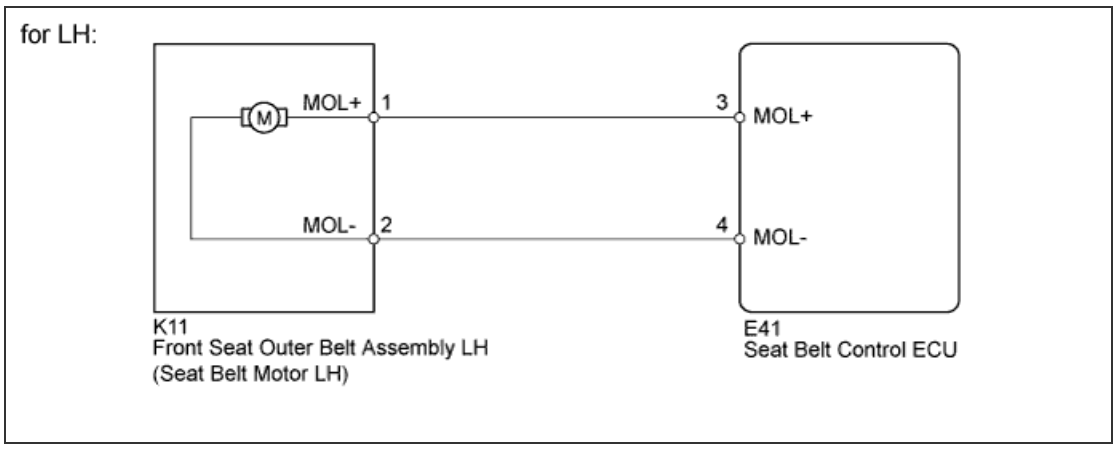

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follo the correct inspection procedure, as failure to follo the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.CHECK SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the resistance according to the value(s) in the table belo .

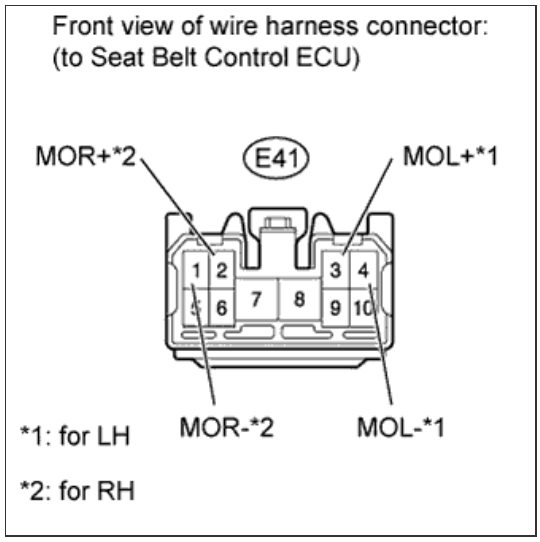

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - Body ground	Al ays	1 MΩ or higher
E41-4 (MOL-) - Body ground		

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - Body ground	Al ays	1 MΩ or higher
E41-2 (MOR+) - Body ground		

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B	REPLACE SEAT BELT CONTROL ECU (Click here)
C	Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)


a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11 1 or L5 2 front seat outer belt connector.

HINT:

- ***1: for LH**
- ***2: for RH**

c. Measure the resistance according to the value(s) in the table belo .

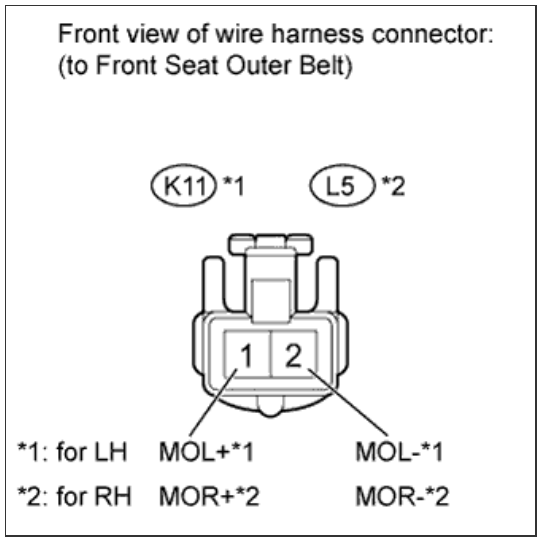

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
K11-1 (MOL+) - Body ground	Al ays	1 MΩ or higher
K11-2 (MOL-) - Body ground		

for RH

Tester Connection	Condition	Specified Condition
L5-1 (MOR+) - Body ground	Al ays	1 MΩ or higher
L5-2 (MOR-) - Body ground		

Result

Result	Proceed to
OK (for DTC B2001)	A
OK (for DTC B2006)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2001 Short to GND in Seat Belt Motor RH Circuit

DTC B2006 Short to GND in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2001	• Short to ground in seat belt motor RH circuit continues for 1 second or more. • Short in seat belt motor RH circuit.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B2006	• Short to ground in seat belt motor LH circuit continues for 1 second or more. • Short in seat belt motor LH circuit.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

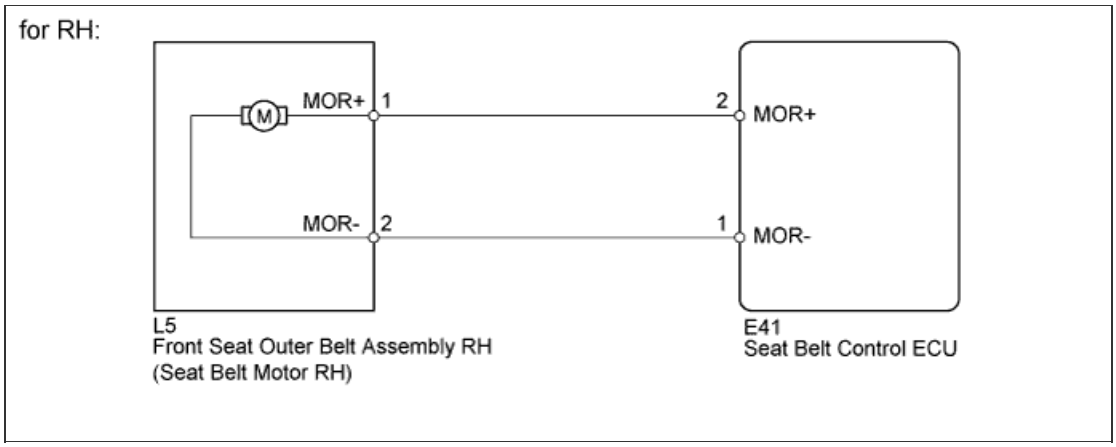

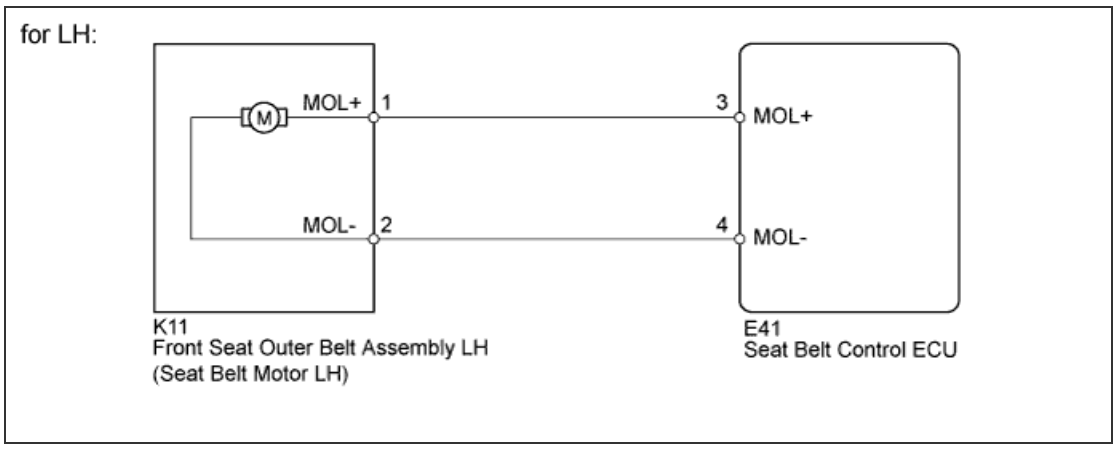

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follo the correct inspection procedure, as failure to follo the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.CHECK SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the resistance according to the value(s) in the table belo .

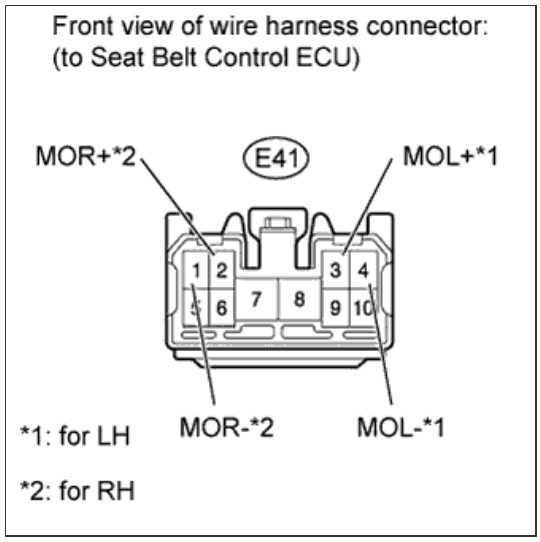

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - Body ground	Al ays	1 MΩ or higher
E41-4 (MOL-) - Body ground		

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - Body ground	Al ays	1 MΩ or higher
E41-2 (MOR+) - Body ground		

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B	REPLACE SEAT BELT CONTROL ECU (Click here)
C	Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)


a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11 1 or L5 2 front seat outer belt connector.

HINT:

- ***1: for LH**
- ***2: for RH**

c. Measure the resistance according to the value(s) in the table belo .

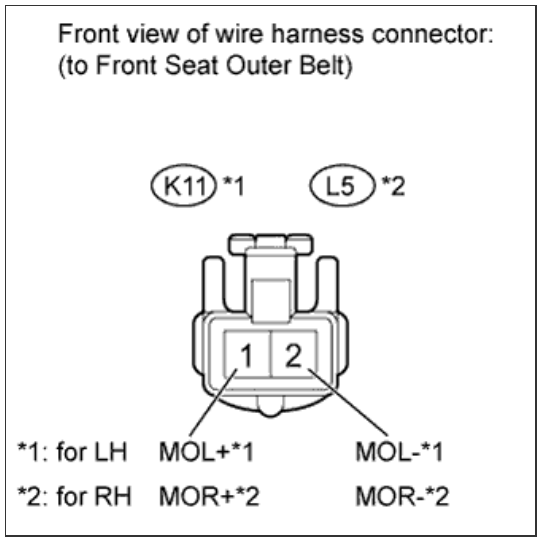

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
K11-1 (MOL+) - Body ground	Al ays	1 MΩ or higher
K11-2 (MOL-) - Body ground		

for RH

Tester Connection	Condition	Specified Condition
L5-1 (MOR+) - Body ground	Al ays	1 MΩ or higher
L5-2 (MOR-) - Body ground		

Result

Result	Proceed to
OK (for DTC B2001)	A
OK (for DTC B2006)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBLY LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBLY RH (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2002 Open in Seat Belt Motor RH Circuit

DTC B2007 Open in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2002	Open in the seat belt motor RH circuit continues for 1 second or more.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B200	Open in the seat belt motor LH circuit continues for 1 second or more.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

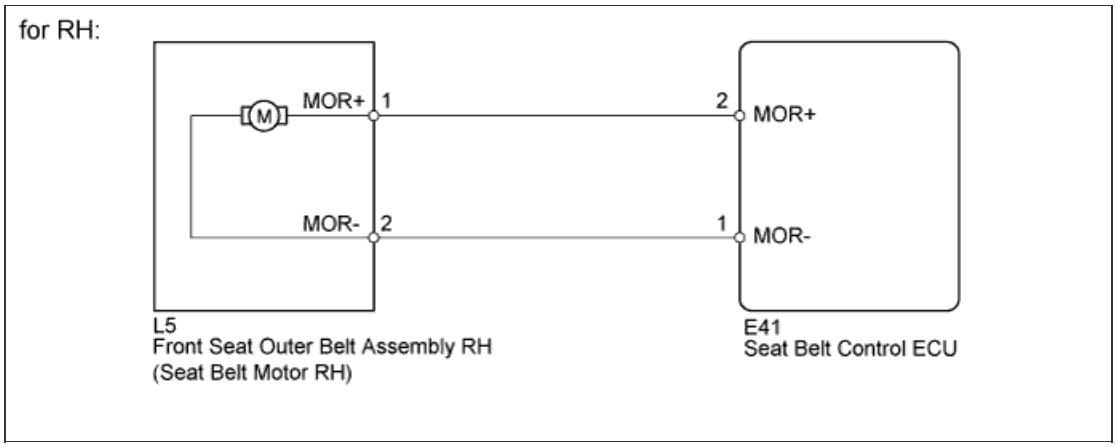

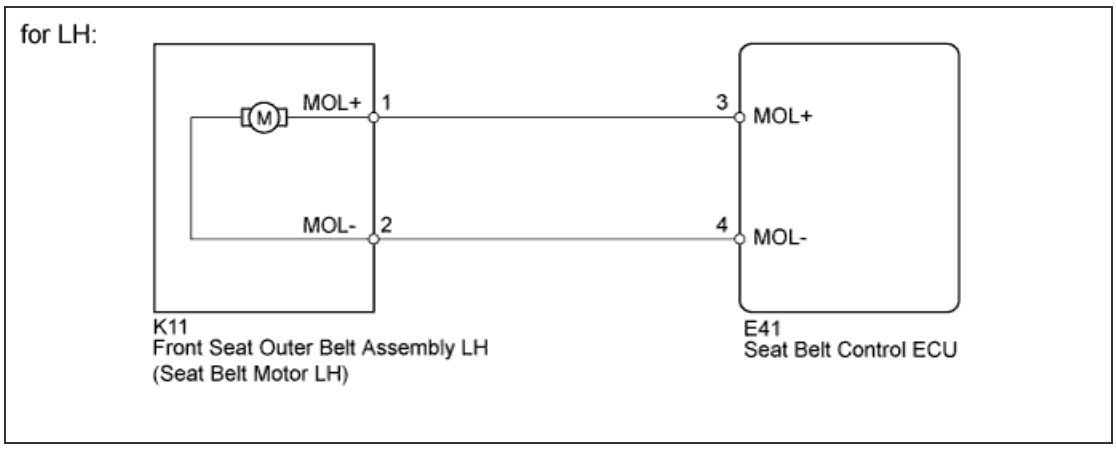

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follow the correct inspection procedure, as failure to follow the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.INSPECT SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the resistance according to the value(s) in the table below.

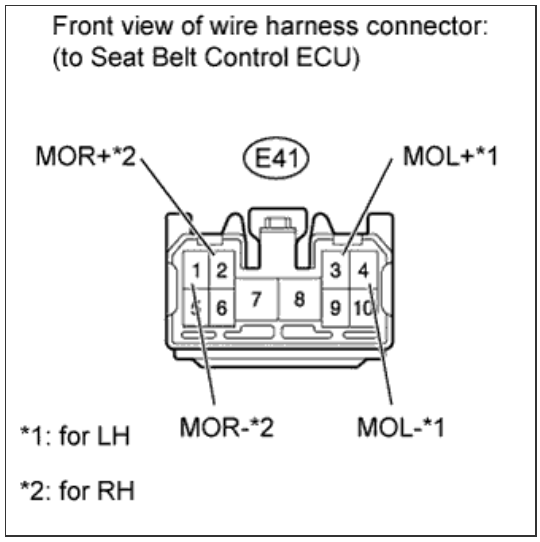

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - E41-4 (MOL-)	Always	Below 100 Ω

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - E41-2 (MOR+)	Always	Below 100 Ω

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)

a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11 1 or L5 2 front seat outer belt connector.

HINT:


- ***1: for LH**
- ***2: for RH**

c. Using a service wire, connect K11-1 1 and K11-2 1 or L5-1 2 and L5-2 2 of the connector on the front seat outer belt assembly.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector.

d. Measure the resistance according to the value(s) in the table below.

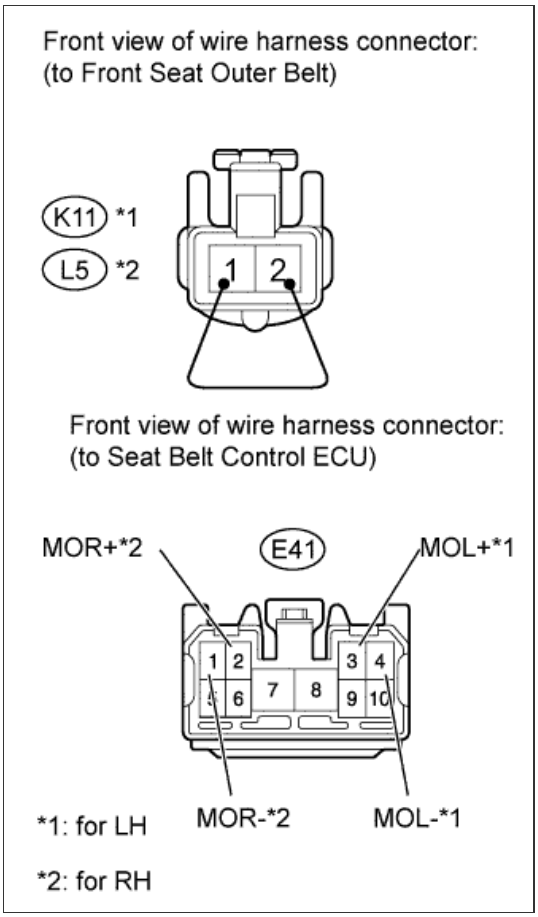

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - E41-4 (MOL-)	Always	Below 1 Ω

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - E41-2 (MOR+)	Always	Below 1 Ω

Result

Result	Proceed to
OK (for DTC B2002)	A
OK (for DTC B200)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBL LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBL RH (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2002 Open in Seat Belt Motor RH Circuit

DTC B2007 Open in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2002	Open in the seat belt motor RH circuit continues for 1 second or more.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B200	Open in the seat belt motor LH circuit continues for 1 second or more.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

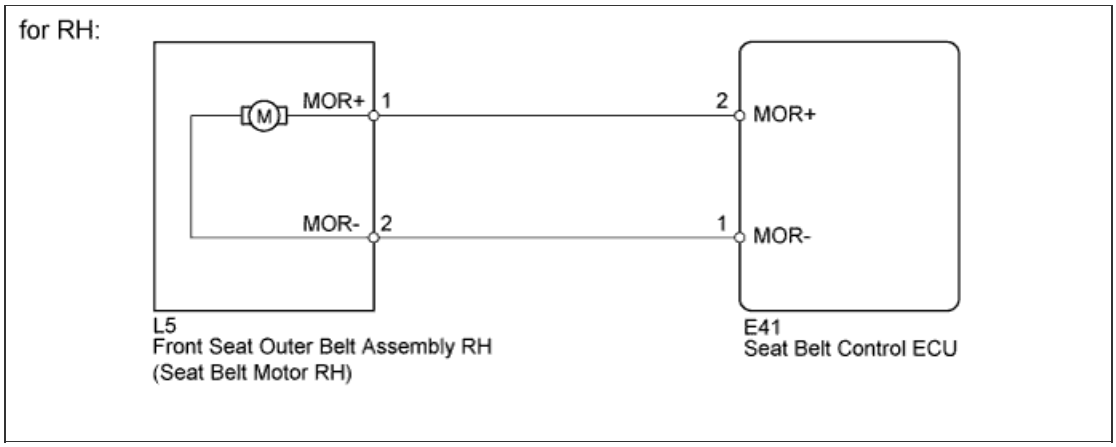

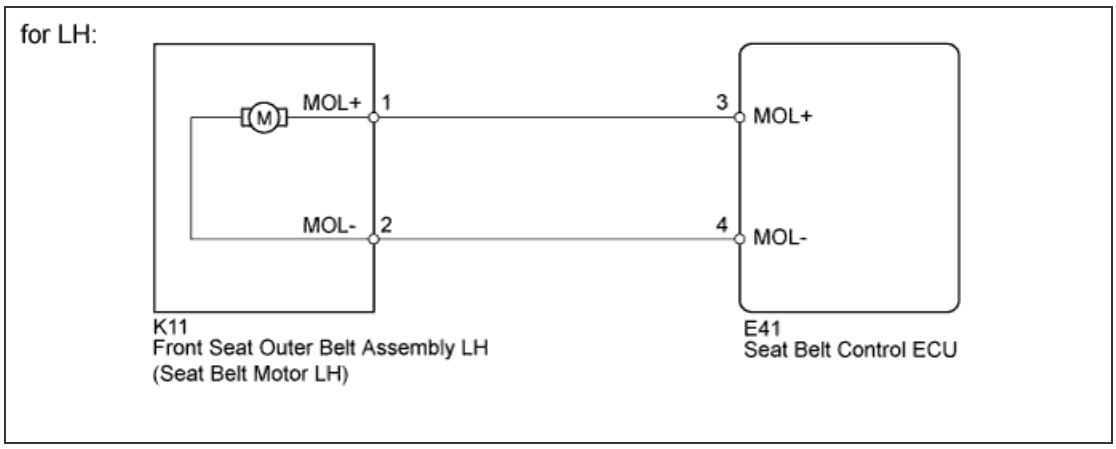

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follow the correct inspection procedure, as failure to follow the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.INSPECT SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the resistance according to the value(s) in the table below.

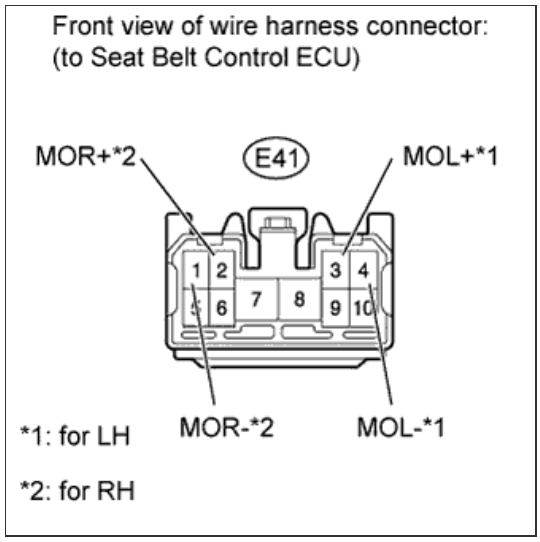

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - E41-4 (MOL-)	Always	Below 100 Ω

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - E41-2 (MOR+)	Always	Below 100 Ω

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)

a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11 1 or L5 2 front seat outer belt connector.

HINT:


- ***1: for LH**
- ***2: for RH**

c. Using a service wire, connect K11-1 1 and K11-2 1 or L5-1 2 and L5-2 2 of the connector on the front seat outer belt assembly.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector.

d. Measure the resistance according to the value(s) in the table below.

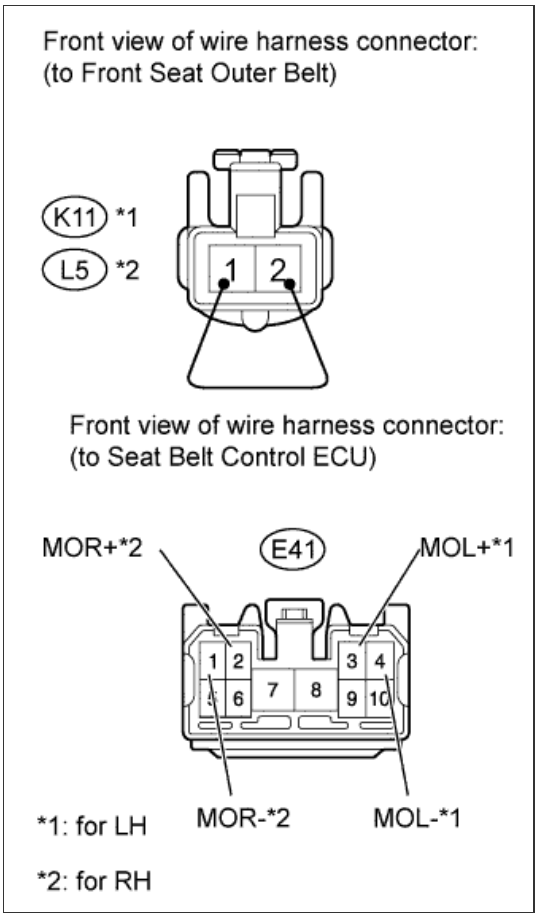

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - E41-4 (MOL-)	Always	Below 1 Ω

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - E41-2 (MOR+)	Always	Below 1 Ω

Result

Result	Proceed to
OK (for DTC B2002)	A
OK (for DTC B200)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBL LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBL RH (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2002 Open in Seat Belt Motor RH Circuit

DTC B2007 Open in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2002	Open in the seat belt motor RH circuit continues for 1 second or more.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B200	Open in the seat belt motor LH circuit continues for 1 second or more.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

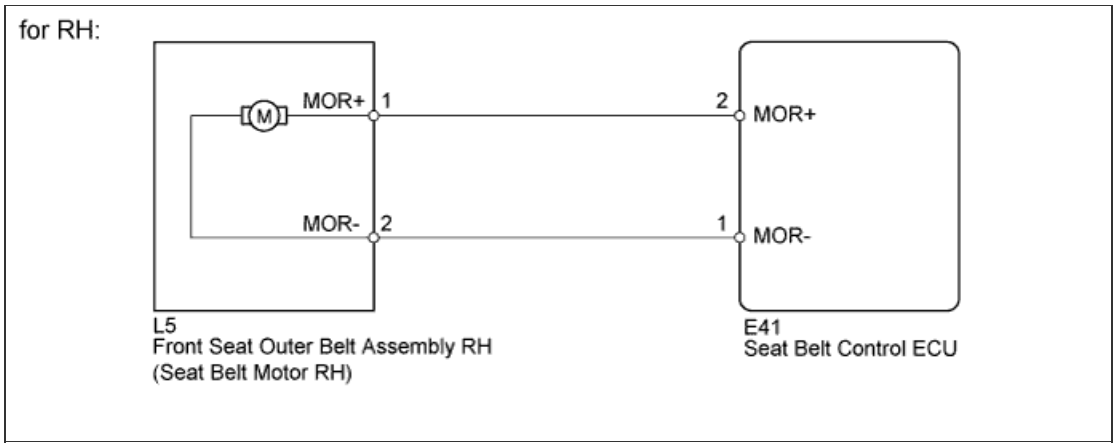

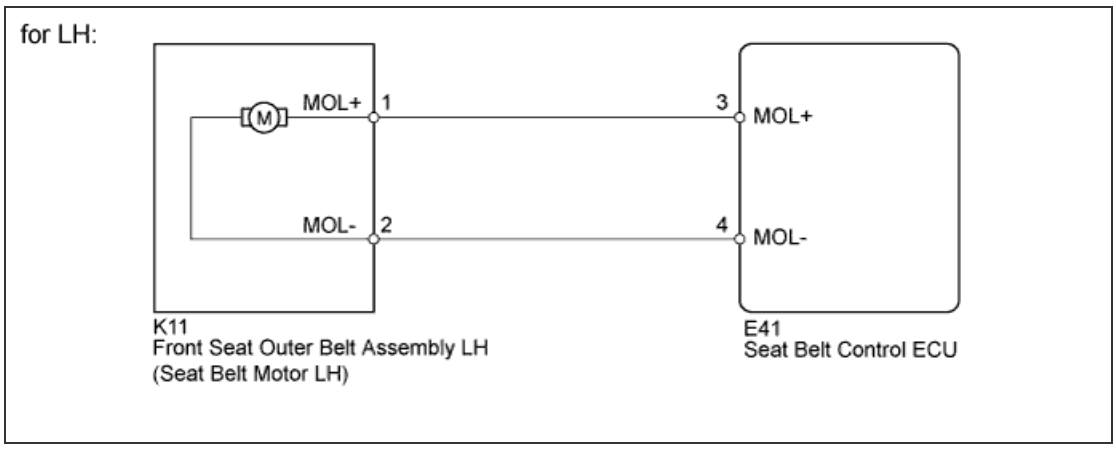

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follow the correct inspection procedure, as failure to follow the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.INSPECT SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the resistance according to the value(s) in the table below.

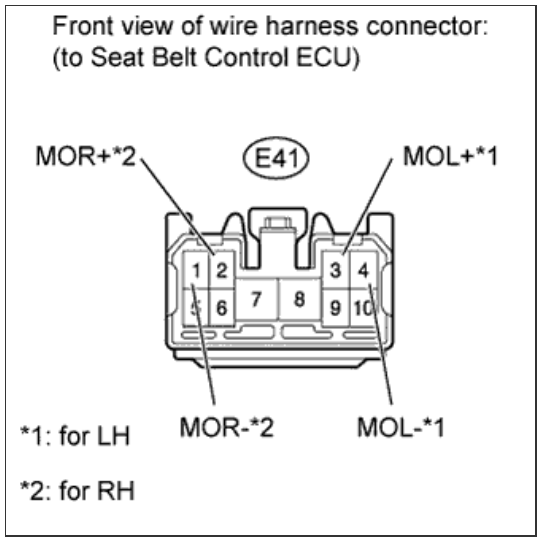

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - E41-4 (MOL-)	Always	Below 100 Ω

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - E41-2 (MOR+)	Always	Below 100 Ω

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)

a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11 1 or L5 2 front seat outer belt connector.

HINT:


- ***1: for LH**
- ***2: for RH**

c. Using a service wire, connect K11-1 1 and K11-2 1 or L5-1 2 and L5-2 2 of the connector on the front seat outer belt assembly.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector.

d. Measure the resistance according to the value(s) in the table below.

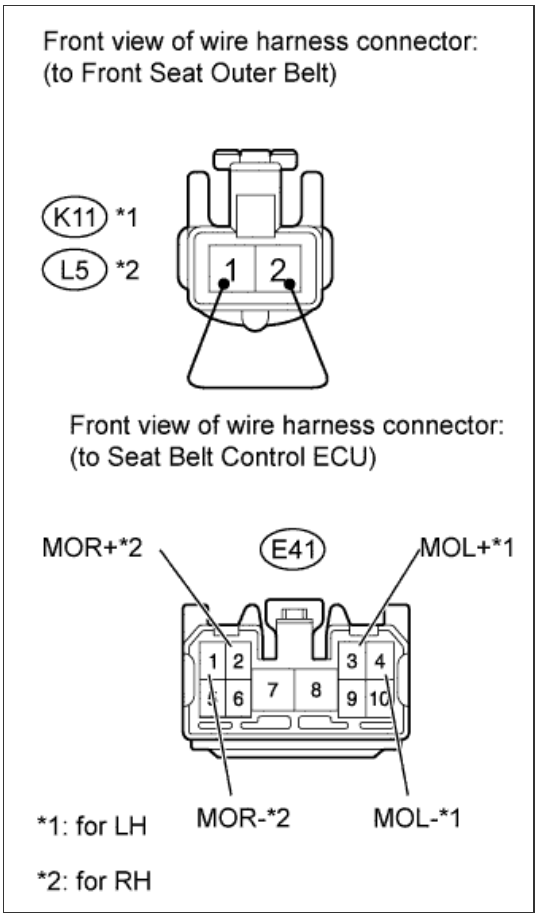

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - E41-4 (MOL-)	Always	Below 1 Ω

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - E41-2 (MOR+)	Always	Below 1 Ω

Result

Result	Proceed to
OK (for DTC B2002)	A
OK (for DTC B200)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBL LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBL RH (Click here)

DTC B2036 Power Supply Relay Malfunction Open


for Preparation Click here

DESCRIPTION

If the seat belt control ECU judges that there is a malfunction in its internal circuit as a result of self-diagnosis, or if the power source voltage (+B) is not input to the seat belt control ECU, this DTC will be stored.

DTC Code	DTC Detection Condition	Trouble Area
B2036	• Malfunction in seat belt control ECU • Power source voltage (+B) is not input to the seat belt control ECU.	• Harness or connector • Fuse • Seat belt control ECU

WIRING DIAGRAM

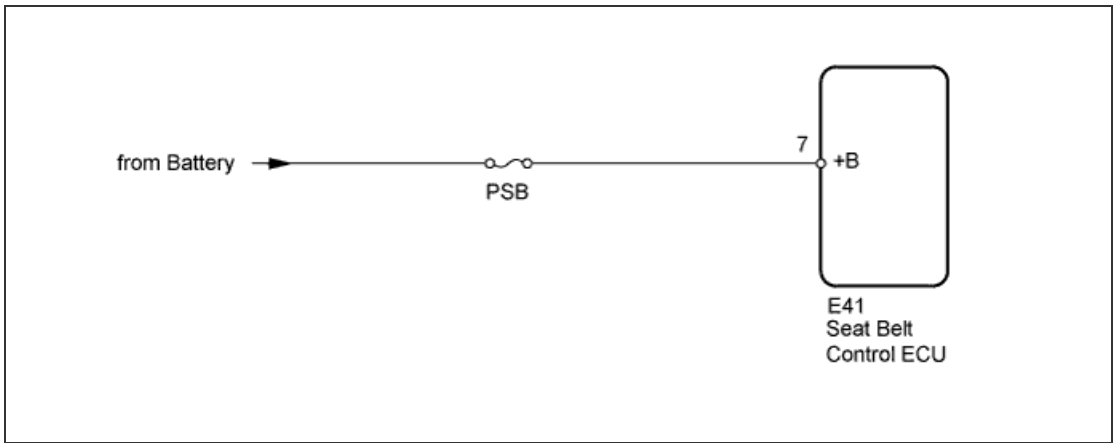

INSPECTION PROCEDURE

CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follow the correct inspection procedure, as failure to follow the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

NOTICE:

Inspect the fuses for circuits related to this system before performing the following inspection procedure.

1.INSPECT SEAT BELT CONTROL ECU (+B TERMINAL VOLTAGE)

a. Disconnect the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

b. Disconnect the E41 connector of the seat belt control ECU.

c. Connect the negative (-) battery terminal.


d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E41-7 (+B) - Body ground	Always	11 to 14 V

Result

Result	Proceed to
OK	

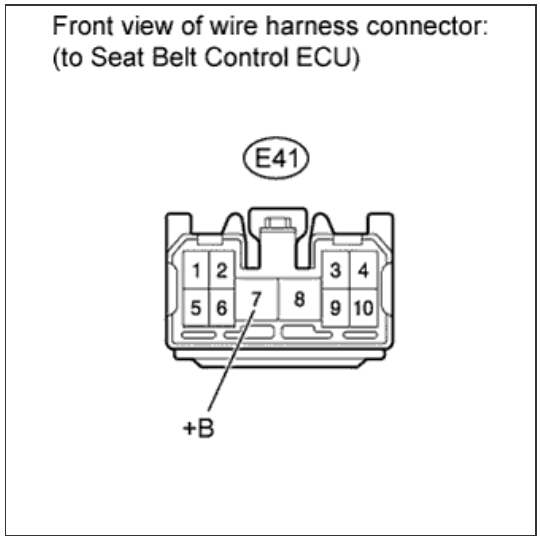

(for LHD)	A
OK (for LHD)	B
NG	C

e. Disconnect the negative (-) battery terminal.

f. Reconnect the E41 seat belt control ECU connector.

g. Connect the negative (-) battery terminal.

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A

REPLACE SEAT BELT CONTROL ECU (Click here)

DTC B2002 Open in Seat Belt Motor RH Circuit

DTC B2007 Open in Seat Belt Motor LH Circuit


for Preparation Click here


DESCRIPTION

The seat belt control ECU receives information from the master cylinder solenoid (skid control ECU) via the CAN communication line and tightens the seat belt by operating the motor in the front seat outer belt assembly RH or LH.

DTC Code	DTC Detection Condition	Trouble Area
B2002	Open in the seat belt motor RH circuit continues for 1 second or more.	• Front seat outer belt assembly RH • Harness or connector • Seat belt control ECU
B200	Open in the seat belt motor LH circuit continues for 1 second or more.	• Front seat outer belt assembly LH • Harness or connector • Seat belt control ECU

WIRING DIAGRAM

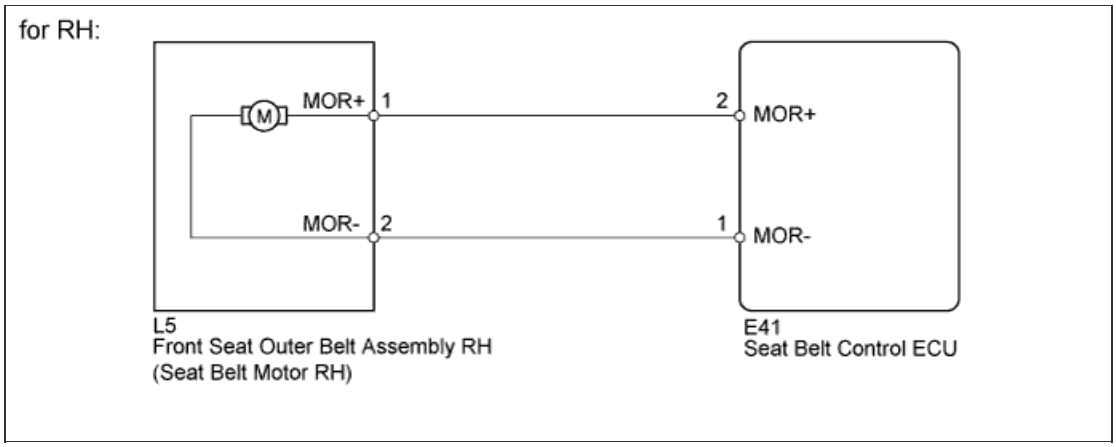

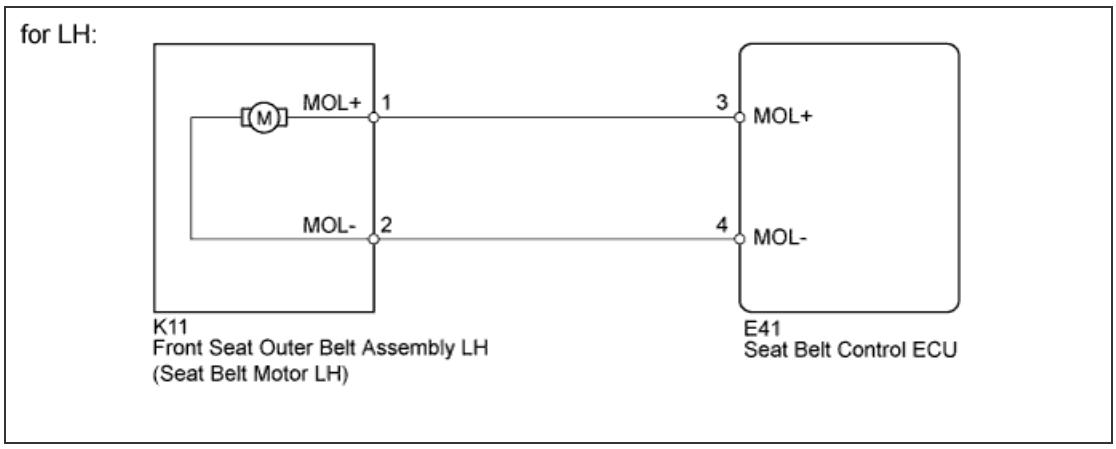

INSPECTION PROCEDURE


CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follow the correct inspection procedure, as failure to follow the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

1.INSPECT SEAT BELT CONTROL ECU

a. Disconnect the E41 seat belt control ECU connector.

b. Measure the resistance according to the value(s) in the table below.

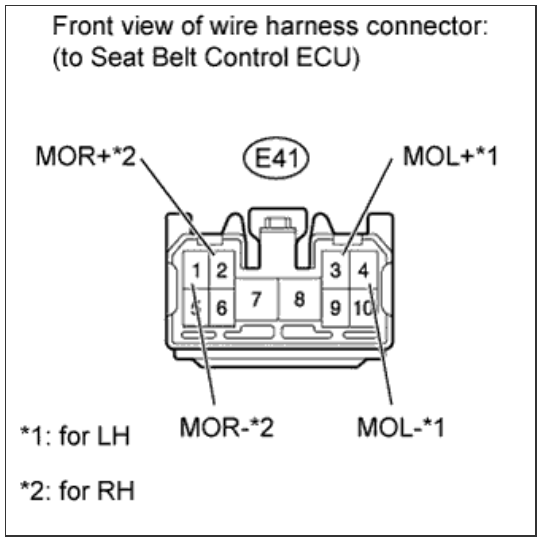

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - E41-4 (MOL-)	Always	Below 100 Ω

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - E41-2 (MOR+)	Always	Below 100 Ω

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → Go to step 2

A

REPLACE SEAT BELT CONTROL ECU (Click here)

2.CHECK HARNESS AND CONNECTOR (FRONT SEAT OUTER BELT - SEAT BELT CONTROL ECU)

a. Disconnect the E41 seat belt control ECU connector.

b. Disconnect the K11 1 or L5 2 front seat outer belt connector.

HINT:


- ***1: for LH**
- ***2: for RH**

c. Using a service wire, connect K11-1 1 and K11-2 1 or L5-1 2 and L5-2 2 of the connector on the front seat outer belt assembly.

NOTICE:

Do not forcibly insert the service wire into the terminals of the connector.

d. Measure the resistance according to the value(s) in the table below.

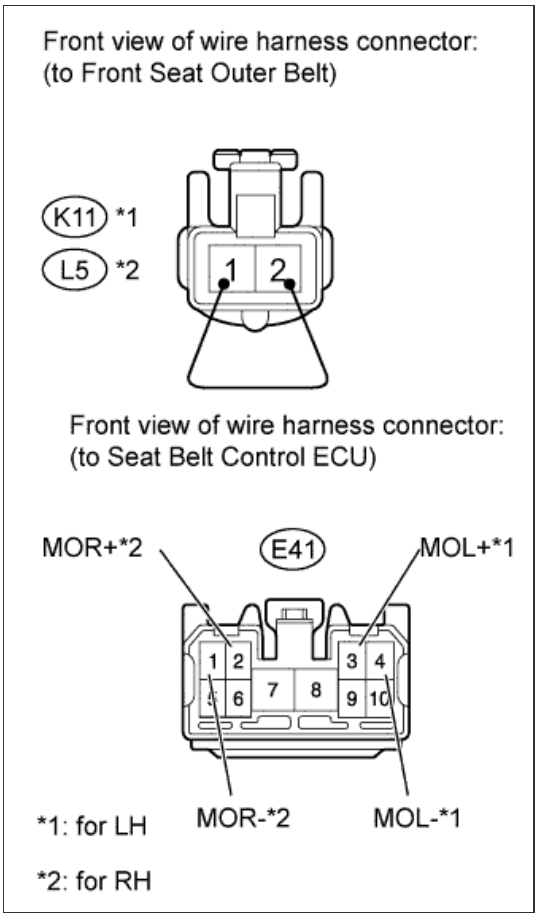

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
E41-3 (MOL+) - E41-4 (MOL-)	Always	Below 1 Ω

for RH

Tester Connection	Condition	Specified Condition
E41-1 (MOR-) - E41-2 (MOR+)	Always	Below 1 Ω

Result

Result	Proceed to
OK (for DTC B2002)	A
OK (for DTC B200)	B
NG	C

B → REPLACE FRONT SEAT OUTER BELT ASSEMBL LH (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A → REPLACE FRONT SEAT OUTER BELT ASSEMBL RH (Click here)

DTC B2036 Power Supply Relay Malfunction Open


for Preparation Click here

DESCRIPTION

If the seat belt control ECU judges that there is a malfunction in its internal circuit as a result of self-diagnosis, or if the power source voltage (+B) is not input to the seat belt control ECU, this DTC will be stored.

DTC Code	DTC Detection Condition	Trouble Area
B2036	• Malfunction in seat belt control ECU • Power source voltage (+B) is not input to the seat belt control ECU.	• Harness or connector • Fuse • Seat belt control ECU

WIRING DIAGRAM

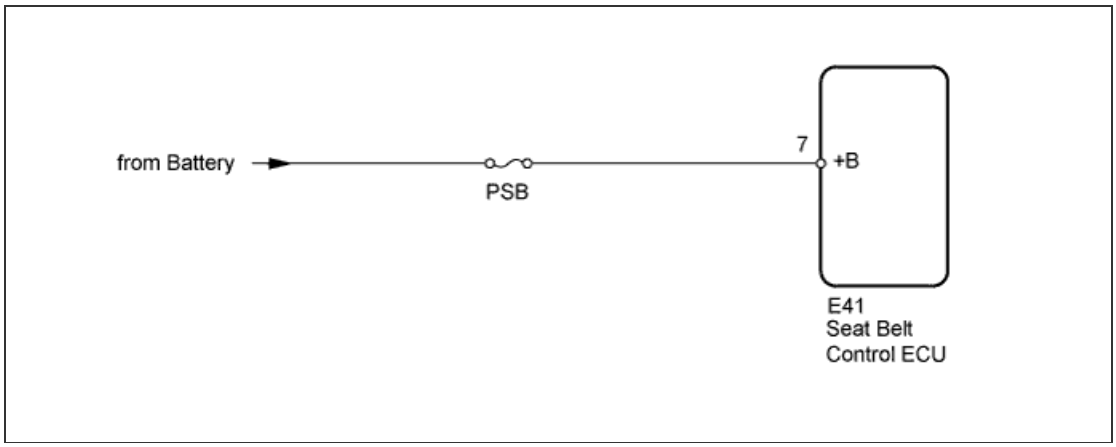

INSPECTION PROCEDURE

CAUTION:

The pretensioner is built into the front seat outer belt assembly. Be sure to follow the correct inspection procedure, as failure to follow the correct procedure (such as inspection of incorrect connectors) may deploy the pretensioner.

NOTICE:

Inspect the fuses for circuits related to this system before performing the following inspection procedure.

1.INSPECT SEAT BELT CONTROL ECU (+B TERMINAL VOLTAGE)

a. Disconnect the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

b. Disconnect the E41 connector of the seat belt control ECU.

c. Connect the negative (-) battery terminal.


d. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E41-7 (+B) - Body ground	Always	11 to 14 V

Result

Result	Proceed to
OK	

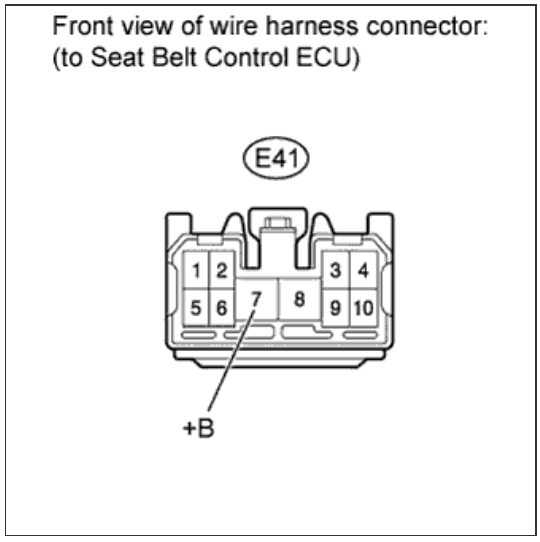

(for LHD)	A
OK (for LHD)	B
NG	C

e. Disconnect the negative (-) battery terminal.

f. Reconnect the E41 seat belt control ECU connector.

g. Connect the negative (-) battery terminal.

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A

REPLACE SEAT BELT CONTROL ECU (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2060 ABS Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction in the vehicle stability control system is detected. This circuit consists of the master cylinder solenoid (skid control ECU) and seat belt control ECU. Signals are sent from the master cylinder solenoid (skid control ECU) via the CAN communication line.

DTC Code	DTC Detection Condition	Trouble Area
B2060	Malfunction in the brake system is detected.	• CAN communication system • Vehicle stability control system • Seat belt control ECU

WIRING DIAGRAM

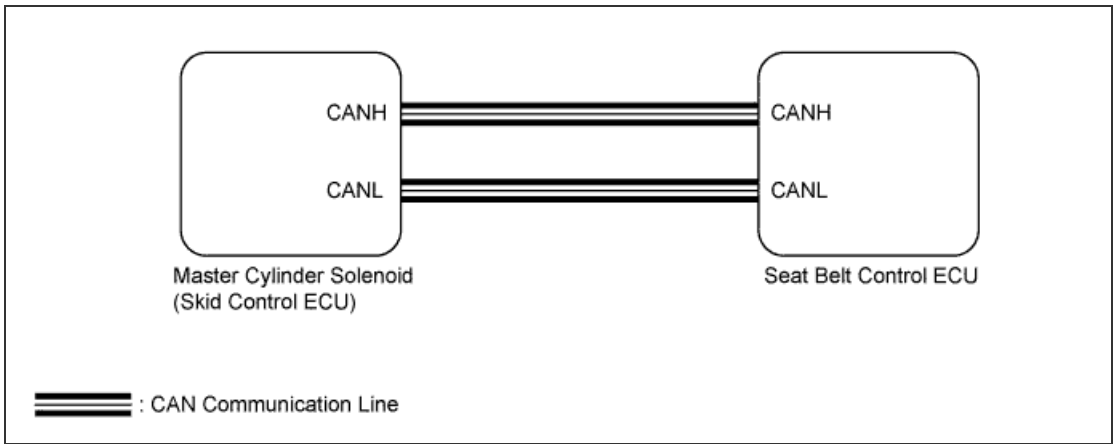

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC U0122 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

HINT:

DTC U0122 Lost Communication with Skid Control ECU

B → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

A

2.CHECK DTC (VEHICLE STABILITY CONTROL SYSTEM)

a. Using the intelligent tester, enter the following menus Chassis / ABS/VSC/TRAC / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

OK:
DTC is not output.

NG → GO TO VEHICLE STABILITY CONTROL SYSTEM (DTC CHART) (Click here)

OK

3.CHECK DTC (PRE-CRASH SA ETY SYSTEM)

a. Using the intelligent tester, enter the following menus Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to
OK (DTC B2060 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2060 ABS Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction in the vehicle stability control system is detected. This circuit consists of the master cylinder solenoid (skid control ECU) and seat belt control ECU. Signals are sent from the master cylinder solenoid (skid control ECU) via the CAN communication line.

DTC Code	DTC Detection Condition	Trouble Area
B2060	Malfunction in the brake system is detected.	• CAN communication system • Vehicle stability control system • Seat belt control ECU

WIRING DIAGRAM

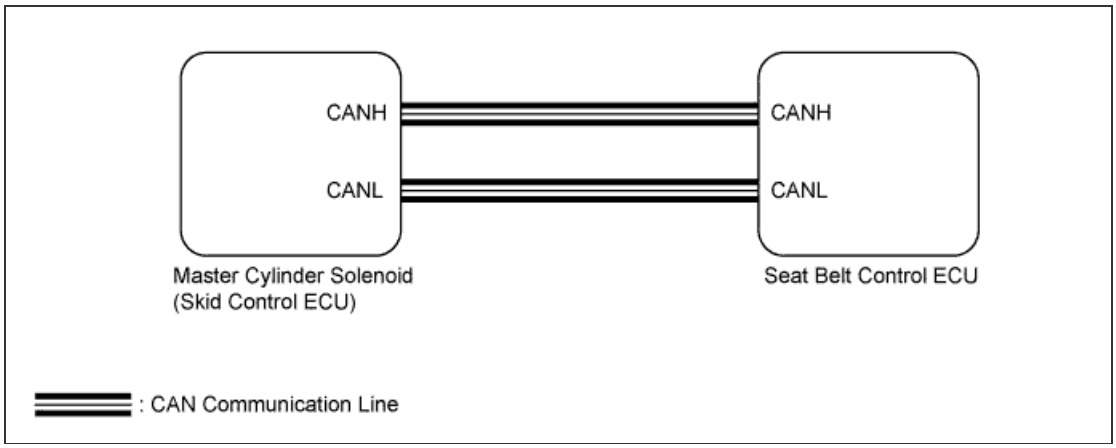

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC U0122 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

HINT:

DTC U0122 Lost Communication with Skid Control ECU

B → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

A

2.CHECK DTC (VEHICLE STABILITY CONTROL SYSTEM)

a. Using the intelligent tester, enter the following menus Chassis / ABS/VSC/TRAC / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

OK:
DTC is not output.

NG → GO TO VEHICLE STABILITY CONTROL SYSTEM (DTC CHART) (Click here)

OK

3.CHECK DTC (PRE-CRASH SA ETY SYSTEM)

a. Using the intelligent tester, enter the following menus Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to
OK (DTC B2060 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2060 ABS Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction in the vehicle stability control system is detected. This circuit consists of the master cylinder solenoid (skid control ECU) and seat belt control ECU. Signals are sent from the master cylinder solenoid (skid control ECU) via the CAN communication line.

DTC Code	DTC Detection Condition	Trouble Area
B2060	Malfunction in the brake system is detected.	• CAN communication system • Vehicle stability control system • Seat belt control ECU

WIRING DIAGRAM

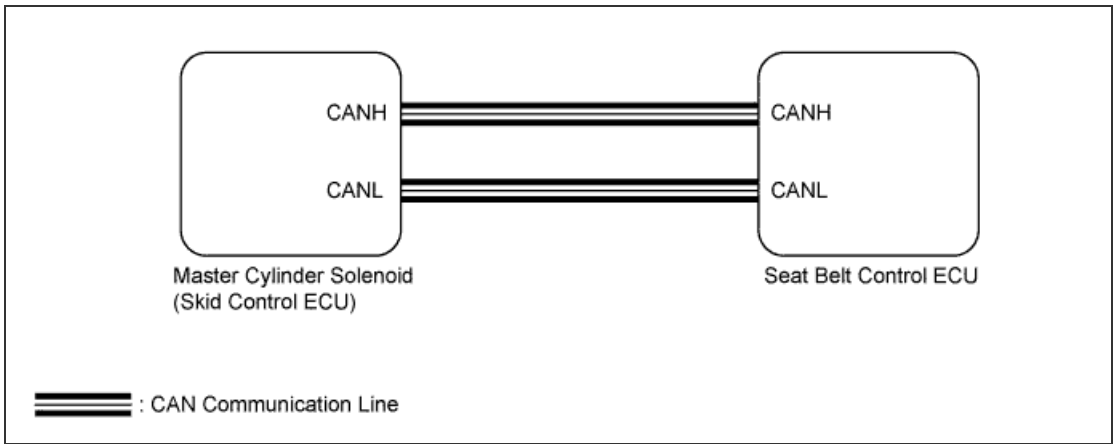

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC U0122 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

HINT:

DTC U0122 Lost Communication with Skid Control ECU

B → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

A

2.CHECK DTC (VEHICLE STABILITY CONTROL SYSTEM)

a. Using the intelligent tester, enter the following menus Chassis / ABS/VSC/TRAC / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

OK:
DTC is not output.

NG → GO TO VEHICLE STABILITY CONTROL SYSTEM (DTC CHART) (Click here)

OK

3.CHECK DTC (PRE-CRASH SA ETY SYSTEM)

a. Using the intelligent tester, enter the following menus Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to
OK (DTC B2060 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2070 VSC Buzzer

for Preparation Click here

DESCRIPTION

When the master cylinder solenoid (skid control ECU) detects a malfunction in the VSC warning buzzer circuit, a malfunction signal is sent to the seat belt control ECU, and this DTC is stored.

DTC Code	DTC Detection Condition	Trouble Area
B2070	While the engine switch is on (IG), the skid control ECU buzzer circuit malfunction signal is received by the seat belt control ECU.	• Vehicle stability control system • Seat belt control ECU

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (BUZZER)

a. Using the intelligent tester, enter the following menus: Chassis / ABS/VSC/TRAC / Active Test.

ABS/VSC/TRAC

Tester Display	Test Part	Control Range	Diagnostic Note
Buzzer	Skid control buzzer sounds	OFF or ON	-

OK:

Skid control buzzer sounds.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → GO TO VEHICLE STABILITY CONTROL SYSTEM (Skid Control Buzzer Circuit) (Click here)

A → REPLACE SEAT BELT CONTROL ECU (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2070 VSC Buzzer

for Preparation Click here

DESCRIPTION

When the master cylinder solenoid (skid control ECU) detects a malfunction in the VSC warning buzzer circuit, a malfunction signal is sent to the seat belt control ECU, and this DTC is stored.

DTC Code	DTC Detection Condition	Trouble Area
B2070	While the engine switch is on (IG), the skid control ECU buzzer circuit malfunction signal is received by the seat belt control ECU.	• Vehicle stability control system • Seat belt control ECU

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (BUZZER)

a. Using the intelligent tester, enter the following menus: Chassis / ABS/VSC/TRAC / Active Test.

ABS/VSC/TRAC

Tester Display	Test Part	Control Range	Diagnostic Note
Buzzer	Skid control buzzer sounds	OFF or ON	-

OK:

Skid control buzzer sounds.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → GO TO VEHICLE STABILITY CONTROL SYSTEM (Skid Control Buzzer Circuit) (Click here)

A → REPLACE SEAT BELT CONTROL ECU (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2071 Stop Light Control Relay Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction in the stop light operation relay circuit of the vehicle stability control system is detected. This circuit consists of the master cylinder solenoid (skid control ECU) and seat belt control ECU. Signals are sent from the master cylinder solenoid (skid control ECU) via the CAN communication line.

DTC Code	DTC Detection Condition	Trouble Area
B2071	Malfunction in the brake system is detected.	• CAN communication system • Vehicle stability control system • Seat belt control ECU

WIRING DIAGRAM

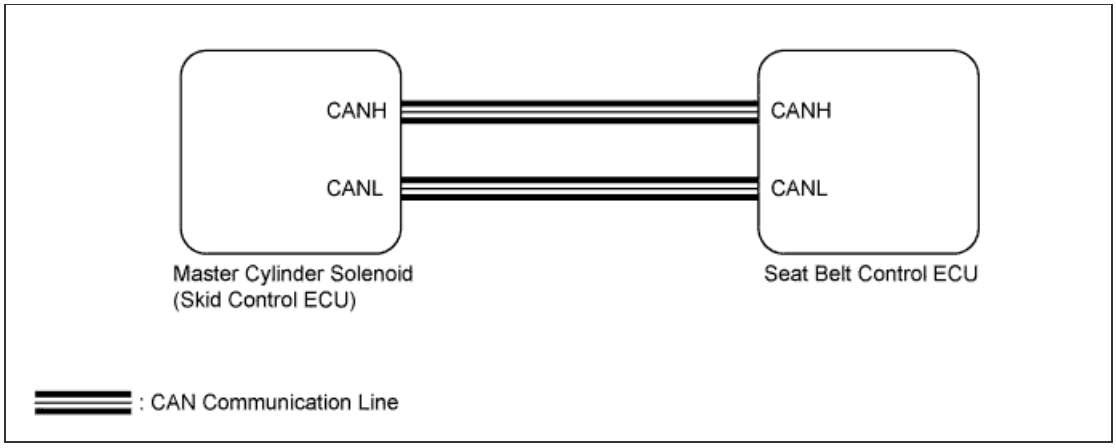

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC U0122 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

HINT:

DTC U0122 Lost Communication with Skid Control ECU

B → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

A

2.CHECK DTC (VEHICLE STABILITY CONTROL SYSTEM)

a. Using the intelligent tester, enter the following menus Chassis / ABS CSTRAC / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

OK:

DTC C1380 is not output.

HINT:

DTC C1380 Stop Light Control Relay Malfunction

NG → **GO TO VEHICLE STABILITY CONTROL SYSTEM (DTC C1380) (Click here)**

OK

3.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to
OK (DTC B2071 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

B → **REPLACE SEAT BELT CONTROL ECU (Click here)**

C → **REPLACE SEAT BELT CONTROL ECU (Click here)**

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2071 Stop Light Control Relay Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction in the stop light operation relay circuit of the vehicle stability control system is detected. This circuit consists of the master cylinder solenoid (skid control ECU) and seat belt control ECU. Signals are sent from the master cylinder solenoid (skid control ECU) via the CAN communication line.

DTC Code	DTC Detection Condition	Trouble Area
B2071	Malfunction in the brake system is detected.	• CAN communication system • Vehicle stability control system • Seat belt control ECU

WIRING DIAGRAM

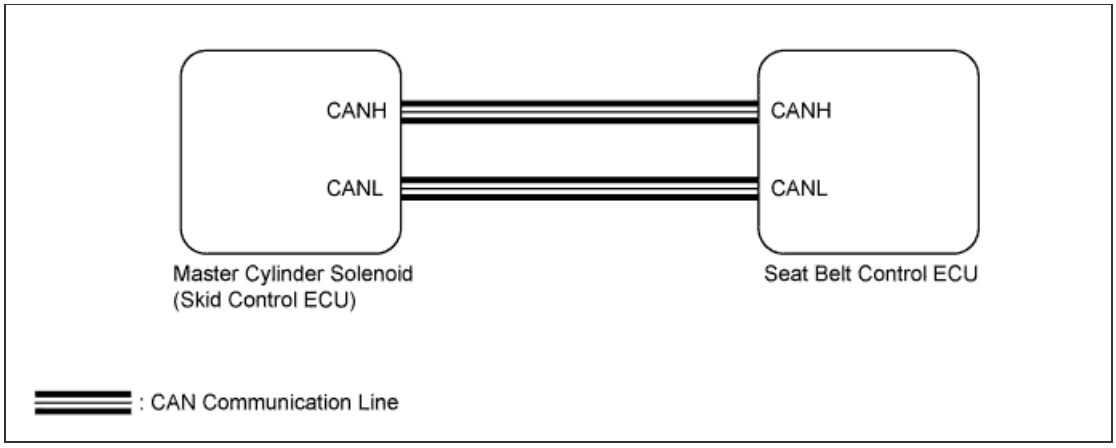

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC U0122 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

HINT:

DTC U0122 Lost Communication with Skid Control ECU

B → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

A

2.CHECK DTC (VEHICLE STABILITY CONTROL SYSTEM)

a. Using the intelligent tester, enter the following menus Chassis / ABS CSTRAC / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

OK:

DTC C1380 is not output.

HINT:

DTC C1380 Stop Light Control Relay Malfunction

NG → **GO TO VEHICLE STABILITY CONTROL SYSTEM (DTC C1380) (Click here)**

OK

3.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to
OK (DTC B2071 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

B → **REPLACE SEAT BELT CONTROL ECU (Click here)**

C → **REPLACE SEAT BELT CONTROL ECU (Click here)**

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2071 Stop Light Control Relay Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when a malfunction in the stop light operation relay circuit of the vehicle stability control system is detected. This circuit consists of the master cylinder solenoid (skid control ECU) and seat belt control ECU. Signals are sent from the master cylinder solenoid (skid control ECU) via the CAN communication line.

DTC Code	DTC Detection Condition	Trouble Area
B2071	Malfunction in the brake system is detected.	• CAN communication system • Vehicle stability control system • Seat belt control ECU

WIRING DIAGRAM

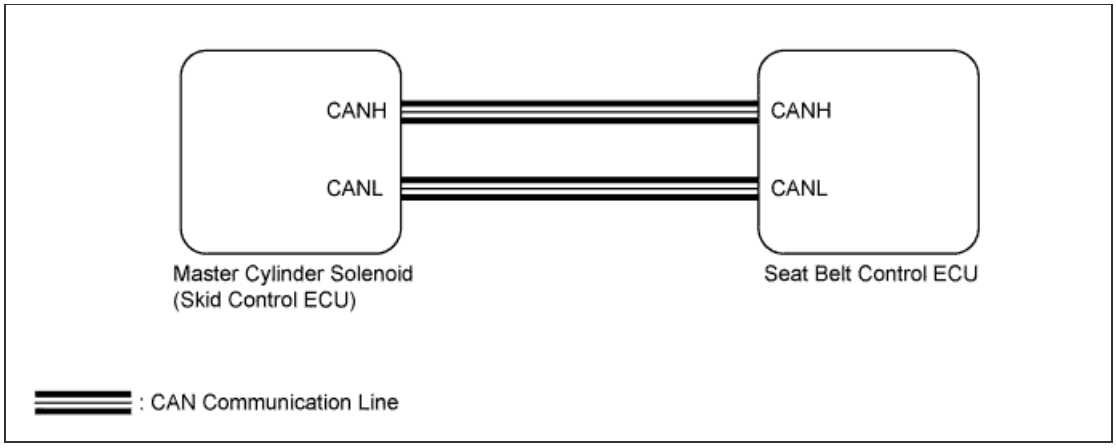

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC U0122 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

HINT:

DTC U0122 Lost Communication with Skid Control ECU

B → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (DTC U0122) (Click here)

A

2.CHECK DTC (VEHICLE STABILITY CONTROL SYSTEM)

a. Using the intelligent tester, enter the following menus Chassis / ABS CSTRAC / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

OK:

DTC C1380 is not output.

HINT:

DTC C1380 Stop Light Control Relay Malfunction

NG → **GO TO VEHICLE STABILITY CONTROL SYSTEM (DTC C1380) (Click here)**

OK

3.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to
OK (DTC B2071 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

B → **REPLACE SEAT BELT CONTROL ECU (Click here)**

C → **REPLACE SEAT BELT CONTROL ECU (Click here)**

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2074 Driver Side Seat Belt Buckle Switch Circuit Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when there is a malfunction in the front seat inner belt buckle switch circuit for the driver side. The seat belt control ECU receives buckle switch condition information from the center airbag sensor via the CAN communication line and controls the pre-crash safety system.
When DTC B2074 is stored, DTC B1655 is also output.

DTC Code	DTC Detection Condition	Trouble Area
B2074	Malfunction in the front seat inner belt (buckle switch) circuit.	• Front seat inner belt LH assembly • Center airbag sensor • Seat belt control ECU • CAN communication system

WIRING DIAGRAM

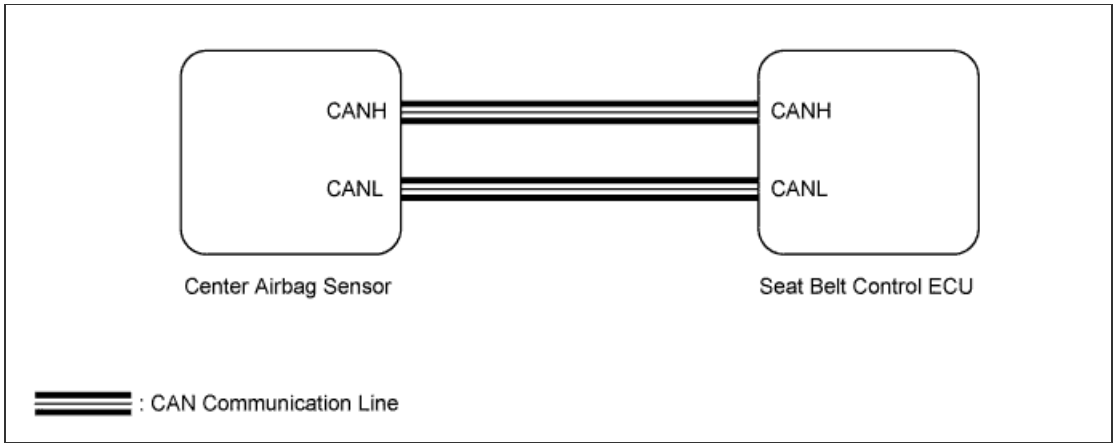

INSPECTION PROCEDURE

NOTICE:

f DTC B1655 is not cleared, DTC B2074 continues to be output.

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC U0151 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

HINT:

DTC U0151 Lost Communication with Airbag ECU

B → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (Click here)

A

2.CHECK DTC (AIRBAG SYSTEM)

a. Using the intelligent tester, enter the following menus Body SRS Airbag Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

OK:
DTC B1655 is not output.

HINT:

DTC B1655 Driver Side Seat Belt Buckle Switch Circuit Malfunction

NG → GO TO AIRBAG SYSTEM (DTC B1655) (**Click here**)

OK

3.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus Body Pre-Crash Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to
OK (DTC B2074 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE SEAT BELT CONTROL ECU (**Click here**)

C → REPLACE SEAT BELT CONTROL ECU (**Click here**)

A

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2074 Driver Side Seat Belt Buckle Switch Circuit Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when there is a malfunction in the front seat inner belt buckle switch circuit for the driver side. The seat belt control ECU receives buckle switch condition information from the center airbag sensor via the CAN communication line and controls the pre-crash safety system.
When DTC B2074 is stored, DTC B1655 is also output.

DTC Code	DTC Detection Condition	Trouble Area
B2074	Malfunction in the front seat inner belt (buckle switch) circuit.	• Front seat inner belt LH assembly • Center airbag sensor • Seat belt control ECU • CAN communication system

WIRING DIAGRAM

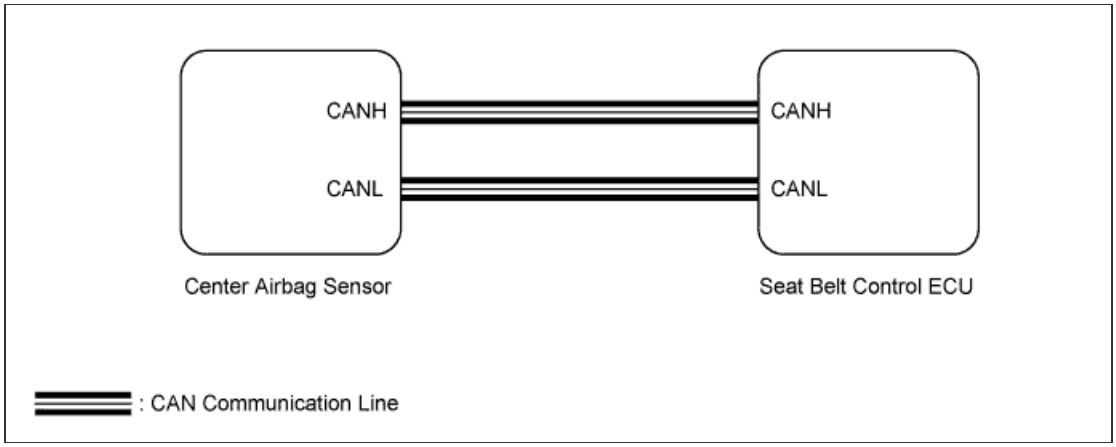

INSPECTION PROCEDURE

NOTICE:

f DTC B1655 is not cleared, DTC B2074 continues to be output.

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC U0151 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

HINT:

DTC U0151 Lost Communication with Airbag ECU

B → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (Click here)

A

2.CHECK DTC (AIRBAG SYSTEM)

a. Using the intelligent tester, enter the following menus Body SRS Airbag Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

OK:
DTC B1655 is not output.

HINT:

DTC B1655 Driver Side Seat Belt Buckle Switch Circuit Malfunction

NG → GO TO AIRBAG SYSTEM (DTC B1655) (**Click here**)

OK

3.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus Body Pre-Crash Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to
OK (DTC B2074 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE SEAT BELT CONTROL ECU (**Click here**)

C → REPLACE SEAT BELT CONTROL ECU (**Click here**)

A

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2074 Driver Side Seat Belt Buckle Switch Circuit Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when there is a malfunction in the front seat inner belt buckle switch circuit for the driver side. The seat belt control ECU receives buckle switch condition information from the center airbag sensor via the CAN communication line and controls the pre-crash safety system.
When DTC B2074 is stored, DTC B1655 is also output.

DTC Code	DTC Detection Condition	Trouble Area
B2074	Malfunction in the front seat inner belt (buckle switch) circuit.	• Front seat inner belt LH assembly • Center airbag sensor • Seat belt control ECU • CAN communication system

WIRING DIAGRAM

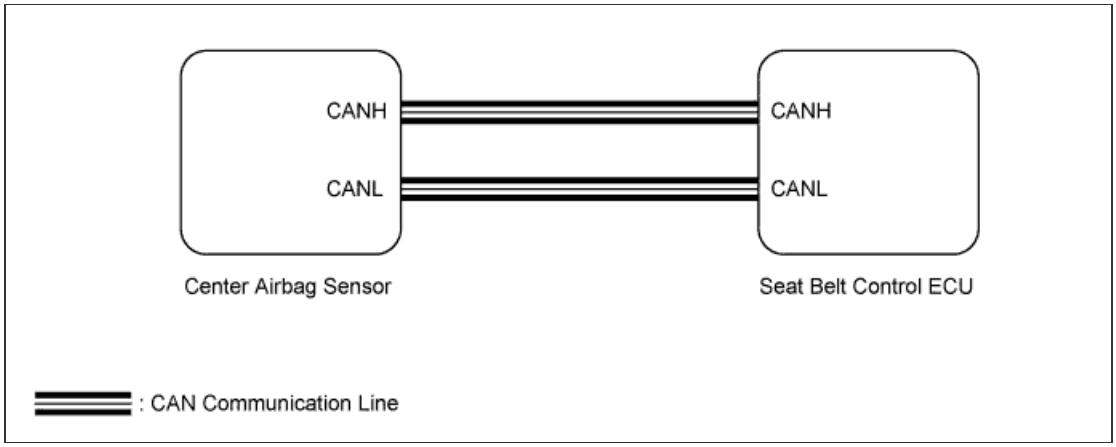

INSPECTION PROCEDURE

NOTICE:

f DTC B1655 is not cleared, DTC B2074 continues to be output.

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC U0151 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

HINT:

DTC U0151 Lost Communication with Airbag ECU

B → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (Click here)

A

2.CHECK DTC (AIRBAG SYSTEM)

a. Using the intelligent tester, enter the following menus Body SRS Airbag Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

OK:
DTC B1655 is not output.

HINT:

DTC B1655 Driver Side Seat Belt Buckle Switch Circuit Malfunction

NG → GO TO AIRBAG SYSTEM (DTC B1655) (**Click here**)

OK

3.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus Body Pre-Crash Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to
OK (DTC B2074 is not output)	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE SEAT BELT CONTROL ECU (**Click here**)

C → REPLACE SEAT BELT CONTROL ECU (**Click here**)

A

USE SIMULATION METHOD TO CHECK (**Click here**)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2075 Passenger Side Seat Belt Buckle Switch Circuit Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when there is a malfunction in the front seat inner belt buckle switch circuit for the passenger side.

DTC Code	DTC Detection Condition	Trouble Area
B2075	Malfunction in the front seat inner belt (buckle switch) circuit.	• Harness or connector • Front seat inner belt (for passenger side) • Seat belt control ECU

WIRING DIAGRAM

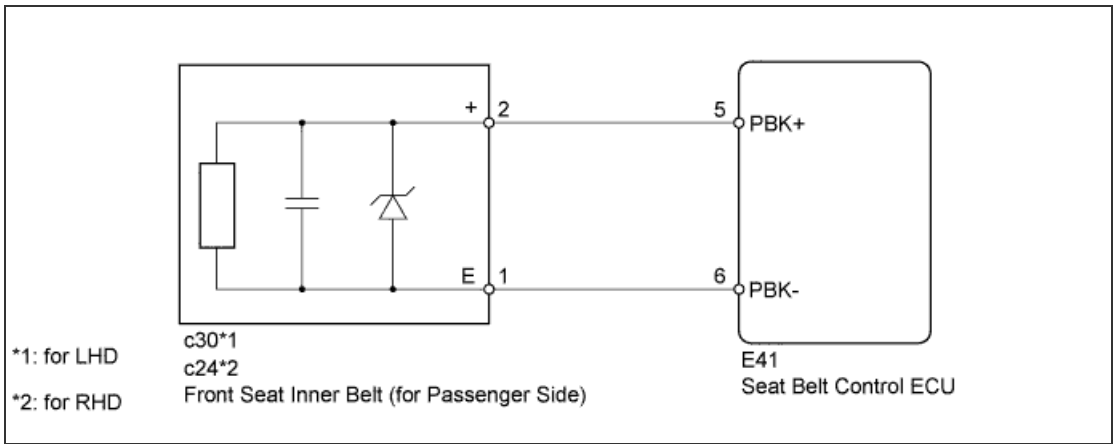

INSPECTION PROCEDURE

1.CHECK HARNESS AND CONNECTOR (FRONT SEAT INNER BELT - SEAT BELT CONTROL ECU)


a. Disconnect the c30*1 or c24*2 front seat inner belt connector.

HINT

- **1 for LHD**
- ***2 for RHD**

b. Disconnect the E41 seat belt control ECU connector.

c. Measure the resistance according to the value(s) in the table below.

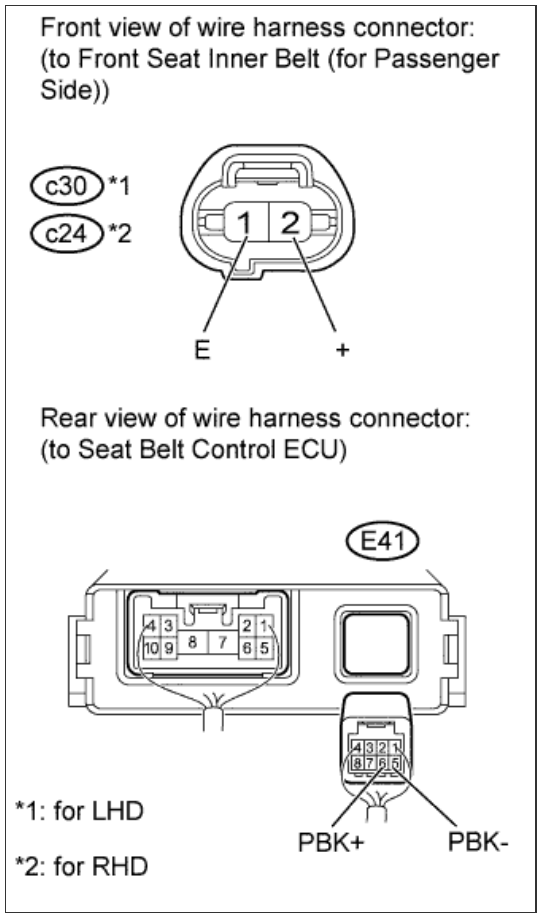

Standard Resistance

for LHD

Tester Connection	Condition	Specified Condition
c30-2 (+) - E41-5 (PBK+)	Always	Below 1 Ω
c30-1 (E) - E41-6 (PBK-)		
c30-2 (+) or E41-5 (PBK+) - Body ground		1 MΩ higher
c30-1 (E) or E41-6 (PBK-) - Body ground		

for RHD

Tester Connection	Condition	Specified Condition
c24-2 (+) - E41-5 (PBK+)	Always	Below 1 Ω
c24-1 (E) - E41-6 (PBK-)		
c24-2 (+) or E41-5 (PBK+) - Body ground		1 MΩ higher
c24-1 (E) or E41-6 (PBK-) - Body ground		

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2.CHECK SEAT BELT CONTROL ECU

a. Reconnect the E41 seat belt control ECU connector.

b. Disconnect the c30*1 or c24*2 front seat inner belt connector.

HINT

- *1 for LHD
- *2 for RHD


c. Use an oscilloscope to check the waveform of the seat belt control ECU between the connector terminals.

Measure ent Condition

Tester Connection	E41-5 (PBK+) - E41-6 (PBK-)
Tool Setting	5 V/DIV., 20 ms./DIV.
Switch Condition	Engine switch (IG) Front passenger side seat belt unfastened (Buckle switch off)
	Engine switch (IG) Front passenger side seat belt fastened (Buckle switch on)

OK

.5 to 5.5 V

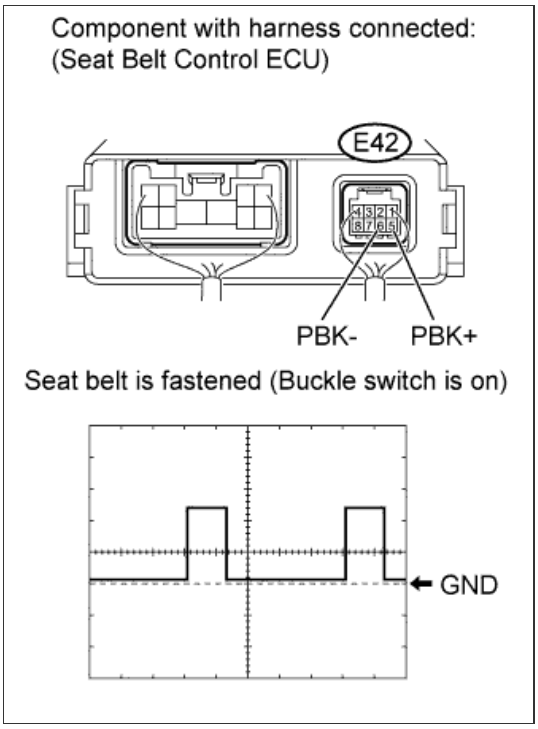

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE FRONT SEAT INNER BELT RH (for Passenger Side) (Click here)

D → REPLACE FRONT SEAT INNER BELT LH (for Passenger Side) (Click here)

A

REPLACE SEAT BELT CONTROL ECU (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2075 Passenger Side Seat Belt Buckle Switch Circuit Malfunction


for Preparation Click here

DESCRIPTION

This DTC is stored when there is a malfunction in the front seat inner belt buckle switch circuit for the passenger side.

DTC Code	DTC Detection Condition	Trouble Area
B2075	Malfunction in the front seat inner belt (buckle switch) circuit.	• Harness or connector • Front seat inner belt (for passenger side) • Seat belt control ECU

WIRING DIAGRAM

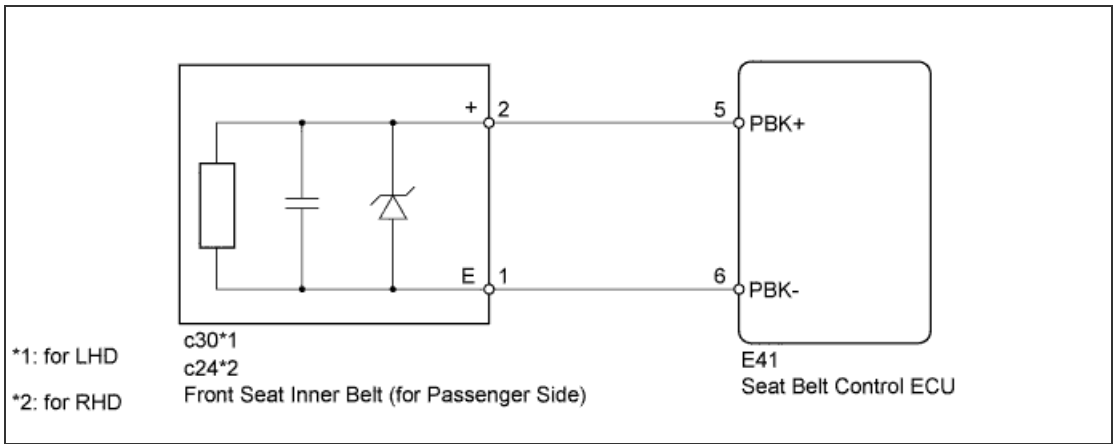

INSPECTION PROCEDURE

1.CHECK HARNESS AND CONNECTOR (FRONT SEAT INNER BELT - SEAT BELT CONTROL ECU)


a. Disconnect the c30*1 or c24*2 front seat inner belt connector.

HINT

- **1 for LHD**
- ***2 for RHD**

b. Disconnect the E41 seat belt control ECU connector.

c. Measure the resistance according to the value(s) in the table below.

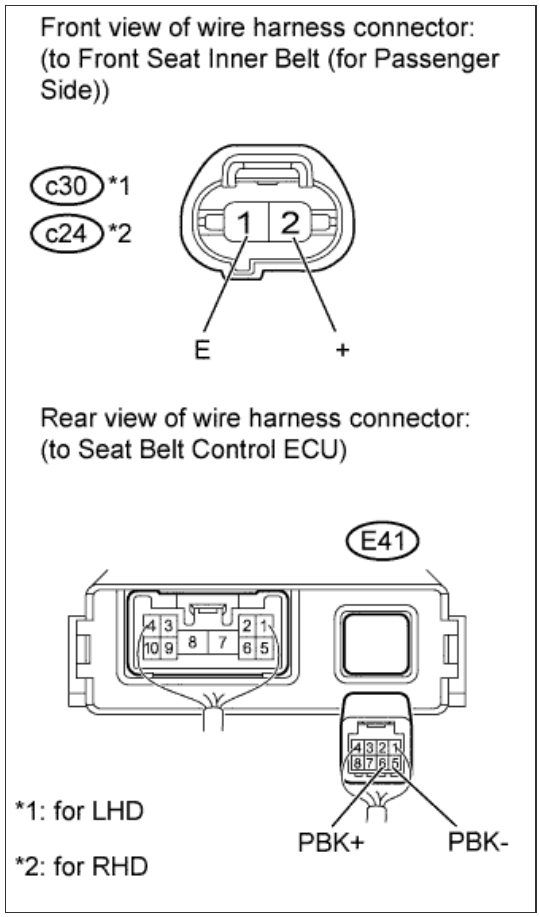

Standard Resistance

for LHD

Tester Connection	Condition	Specified Condition
c30-2 (+) - E41-5 (PBK+)	Always	Below 1 Ω
c30-1 (E) - E41-6 (PBK-)		
c30-2 (+) or E41-5 (PBK+) - Body ground		1 MΩ higher
c30-1 (E) or E41-6 (PBK-) - Body ground		

for RHD

Tester Connection	Condition	Specified Condition
c24-2 (+) - E41-5 (PBK+)	Always	Below 1 Ω
c24-1 (E) - E41-6 (PBK-)		
c24-2 (+) or E41-5 (PBK+) - Body ground		1 MΩ higher
c24-1 (E) or E41-6 (PBK-) - Body ground		

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

2.CHECK SEAT BELT CONTROL ECU

a. Reconnect the E41 seat belt control ECU connector.

b. Disconnect the c30*1 or c24*2 front seat inner belt connector.

HINT

- *1 for LHD
- *2 for RHD


c. Use an oscilloscope to check the waveform of the seat belt control ECU between the connector terminals.

Measure ent Condition

Tester Connection	E41-5 (PBK+) - E41-6 (PBK-)
Tool Setting	5 V/DIV., 20 ms./DIV.
Switch Condition	Engine switch (IG) Front passenger side seat belt unfastened (Buckle switch off)
	Engine switch (IG) Front passenger side seat belt fastened (Buckle switch on)

OK

.5 to 5.5 V

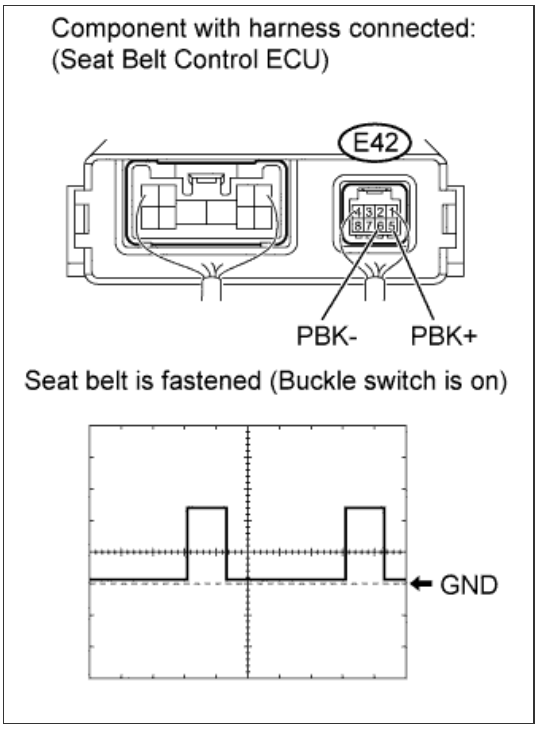

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE FRONT SEAT INNER BELT RH (for Passenger Side) (Click here)

D → REPLACE FRONT SEAT INNER BELT LH (for Passenger Side) (Click here)

A

REPLACE SEAT BELT CONTROL ECU (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC U0122 Lost Communication with Vehicle Stability Control Module

DTC U0151 Lost Communication with Airbag ECU

for Preparation Click here

DESCRIPTION

The seat belt control ECU receives signals from the master cylinder solenoid (skid control ECU) and the center airbag sensor via the CAN communication line.

DTC Code	DTC Detection Item	Inspection Area
U0122	Skid control ECU communication error.	• CAN communication system • Master cylinder solenoid (skid control ECU) • Seat belt control ECU
U0151	Center airbag sensor communication error.	• CAN communication system • Seat belt control ECU • Center airbag sensor

WIRING DIAGRAM

- Refer to DTC U0122 (CAN communication system for LHD) (Click here).
- Refer to DTC U0122 (CAN communication system for RHD) (Click here).

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC is not output)	A
N (for LHD)	
N (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

C → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC U0122 Lost Communication with Vehicle Stability Control Module

DTC U0151 Lost Communication with Airbag ECU

for Preparation Click here

DESCRIPTION

The seat belt control ECU receives signals from the master cylinder solenoid (skid control ECU) and the center airbag sensor via the CAN communication line.

DTC Code	DTC Detection Item	Inspection Area
U0122	Skid control ECU communication error.	• CAN communication system • Master cylinder solenoid (skid control ECU) • Seat belt control ECU
U0151	Center airbag sensor communication error.	• CAN communication system • Seat belt control ECU • Center airbag sensor

WIRING DIAGRAM

- Refer to DTC U0122 (CAN communication system for LHD) (Click here).
- Refer to DTC U0122 (CAN communication system for RHD) (Click here).

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC is not output)	A
N (for LHD)	
N (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

C → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC U0122 Lost Communication with Vehicle Stability Control Module

DTC U0151 Lost Communication with Airbag ECU

for Preparation Click here

DESCRIPTION

The seat belt control ECU receives signals from the master cylinder solenoid (skid control ECU) and the center airbag sensor via the CAN communication line.

DTC Code	DTC Detection Item	Inspection Area
U0122	Skid control ECU communication error.	• CAN communication system • Master cylinder solenoid (skid control ECU) • Seat belt control ECU
U0151	Center airbag sensor communication error.	• CAN communication system • Seat belt control ECU • Center airbag sensor

WIRING DIAGRAM

- Refer to DTC U0122 (CAN communication system for LHD) (Click here).
- Refer to DTC U0122 (CAN communication system for RHD) (Click here).

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC is not output)	A
N (for LHD)	
N (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

C → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC U0122 Lost Communication with Vehicle Stability Control Module

DTC U0151 Lost Communication with Airbag ECU

for Preparation Click here

DESCRIPTION

The seat belt control ECU receives signals from the master cylinder solenoid (skid control ECU) and the center airbag sensor via the CAN communication line.

DTC Code	DTC Detection Item	Inspection Area
U0122	Skid control ECU communication error.	• CAN communication system • Master cylinder solenoid (skid control ECU) • Seat belt control ECU
U0151	Center airbag sensor communication error.	• CAN communication system • Seat belt control ECU • Center airbag sensor

WIRING DIAGRAM

- Refer to DTC U0122 (CAN communication system for LHD) (Click here).
- Refer to DTC U0122 (CAN communication system for RHD) (Click here).

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC is not output)	A
N (for LHD)	
N (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

C → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC U0122 Lost Communication with Vehicle Stability Control Module

DTC U0151 Lost Communication with Airbag ECU

for Preparation Click here

DESCRIPTION

The seat belt control ECU receives signals from the master cylinder solenoid (skid control ECU) and the center airbag sensor via the CAN communication line.

DTC Code	DTC Detection Item	Inspection Area
U0122	Skid control ECU communication error.	• CAN communication system • Master cylinder solenoid (skid control ECU) • Seat belt control ECU
U0151	Center airbag sensor communication error.	• CAN communication system • Seat belt control ECU • Center airbag sensor

WIRING DIAGRAM

- Refer to DTC U0122 (CAN communication system for LHD) (Click here).
- Refer to DTC U0122 (CAN communication system for RHD) (Click here).

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC is not output)	A
N (for LHD)	
N (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

C → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC U0122 Lost Communication with Vehicle Stability Control Module

DTC U0151 Lost Communication with Airbag ECU

for Preparation Click here

DESCRIPTION

The seat belt control ECU receives signals from the master cylinder solenoid (skid control ECU) and the center airbag sensor via the CAN communication line.

DTC Code	DTC Detection Item	Inspection Area
U0122	Skid control ECU communication error.	• CAN communication system • Master cylinder solenoid (skid control ECU) • Seat belt control ECU
U0151	Center airbag sensor communication error.	• CAN communication system • Seat belt control ECU • Center airbag sensor

WIRING DIAGRAM

- Refer to DTC U0122 (CAN communication system for LHD) (Click here).
- Refer to DTC U0122 (CAN communication system for RHD) (Click here).

INSPECTION PROCEDURE

1.CHECK DTC (CAN COMMUNICATION SYSTEM)

a. Use the intelligent tester to check if the CAN communication system is functioning normally (Click here for LHD, Click here for RHD).

Result

Result	Proceed to
OK (DTC is not output)	A
N (for LHD)	
N (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

C → GO TO CAN COMMUNICATION SYSTEM (DIAGNOSIS SYSTEM) (**Click here**)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B2015 Open in Right Side Upper MOS

DTC B2016 Open in Right Side Lower MOS

DTC B2020 Open in Left Side Upper MOS

DTC B2021 Open in Left Side Lower MOS

DTC B2025 Right Side Current Detection Circuit Malfunction Hi

DTC B2026 Right Side Current Detection Circuit Malfunction Lo

DTC B2027 Right Side Over-Current Malfunction

DTC B2030 Left Side Current Detection Circuit Malfunction Hi

DTC B2031 Left Side Current Detection Circuit Malfunction Lo

DTC B2032 Left Side Over-Current Malfunction

DTC B2035 Power Supply Relay Adherence Malfunction

DTC B2040 EEPROM Malfunction

DTC B2041 Fall of Raised Voltage

DTC B2043 Fall of B+ Voltage

DTC B2047 Seat Belt Control ECU Inner Circuit Malfunction

for Preparation Click here

DESCRIPTION

The DTCs above are stored during the self diagnosis of the seat belt control ECU.

DTC Code	DTC Detection Condition	Trouble Area
B2015	Open in the right side upper MOS.	Seat belt control ECU
B2016	Open in the right side lower MOS.	Seat belt control ECU
B2020	Open in the left side upper MOS.	Seat belt control ECU
B2021	Open in the left side lower MOS.	Seat belt control ECU
B2025	Malfunction in the right side current detection HI circuit.	Seat belt control ECU
B2026	Malfunction in the right side current detection LO circuit.	Seat belt control ECU
B2027	Overcurrent in the right side circuit.	Seat belt control ECU
B2030	Malfunction in the left side current detection HI circuit.	Seat belt control ECU
B2031	Malfunction in the left side current detection LO circuit.	Seat belt control ECU
B2032	Overcurrent in the left side circuit.	Seat belt control ECU
B2035	Adherence malfunction in the power supply relay.	Seat belt control ECU
B2040	EEPROM malfunction.	Seat belt control ECU
B2041	Decline in raised voltage.	Seat belt control ECU
B2043	Decline in B+ voltage.	Seat belt control ECU
B2047	Malfunction in the inner circuit of the seat belt control ECU.	Seat belt control ECU

INSPECTION PROCEDURE

1.CHECK DTC (PRE-CRASH SAFETY SYSTEM)

a. Using the intelligent tester, enter the following menus: Body / Pre-Crash / Trouble Code.

b. Clear the DTCs (Click here).

c. Check for DTCs (Click here).

Result

Result	Proceed to

OK DTC is not output)	A
NG (for LHD)	B
NG (for RHD	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPLACE SEAT BELT CONTROL ECU (Click here)

A


USE SIMULATION METHOD TO CHECK (Click here)

for Preparation Click here

DESCRIPTION

This circuit supplies power to the seat belt control ECU when the engine switch is on (IG).

WIRING DIAGRAM

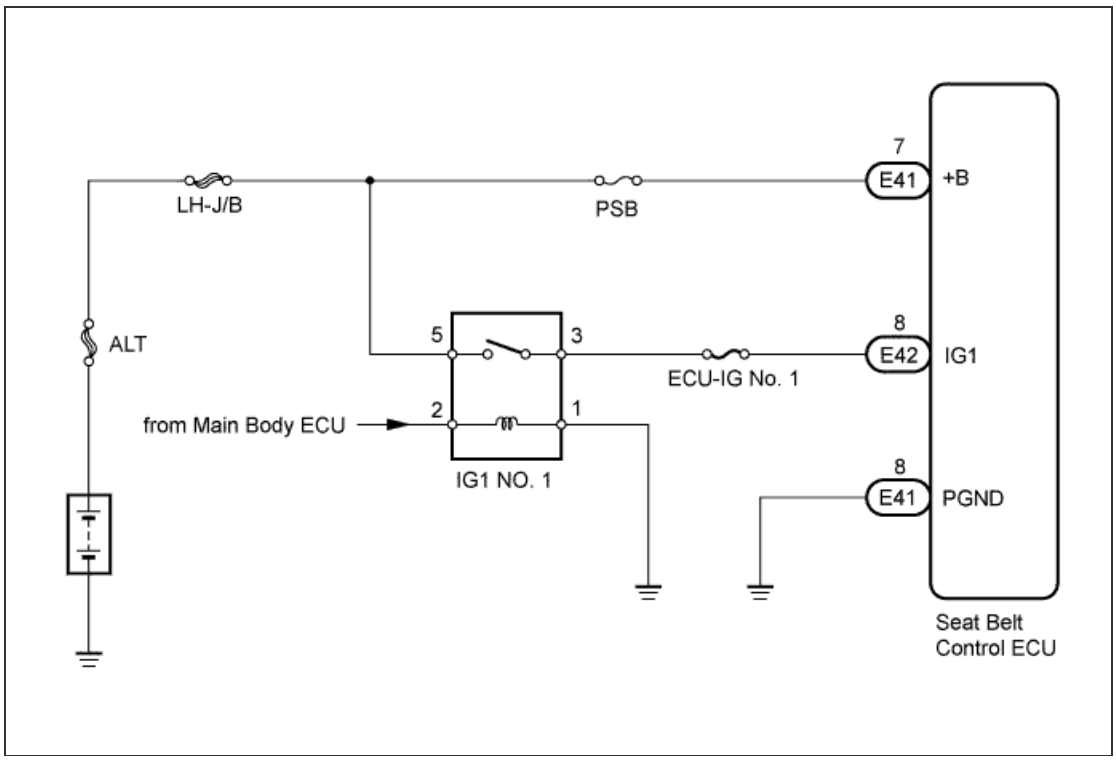

INSPECTION PROCEDURE

HINT:

Start the engine before inspection. Check the IG1 NO. 1 relay or battery if the starting system does not start.

1.INSPECT FUSE (ECU-IG No. 1, PSB)

a. Remove the ECU-IG No. 1 and PSB fuses from the main body ECU.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
ECU-IG No. 1 fuse	Always	Below 1 Ω
PSB fuse		

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (SEAT BELT CONTROL ECU - BATTERY AND BODY GROUND)

a. Disconnect the E41 and E42 seat belt control ECU connectors.

b. Measure the voltage according to the value(s) in the table below.


Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E42-8 (IG1) - Body ground	Engine switch on (IG)	11 to 14 V
	Engine switch off	Below 1 V
E41-7 (+B) - Body ground	Always	11 to 14 V

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E41-8 (PGND) - Body ground	Always	Below 1 Ω

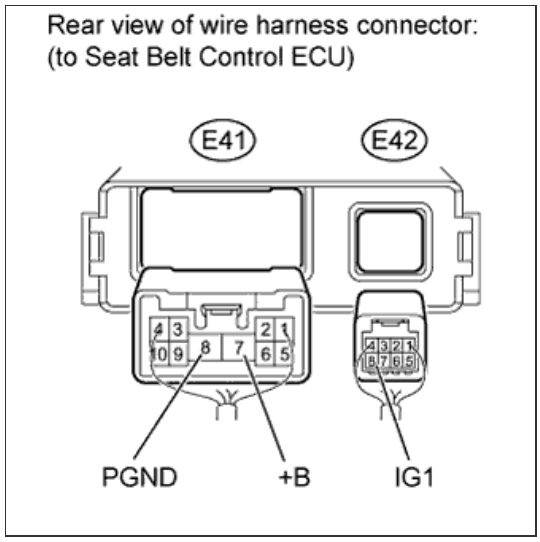

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A


REPLACE SEAT BELT CONTROL ECU (Click here)

for Preparation Click here

DESCRIPTION

This circuit supplies power to the seat belt control ECU when the engine switch is on (IG).

WIRING DIAGRAM

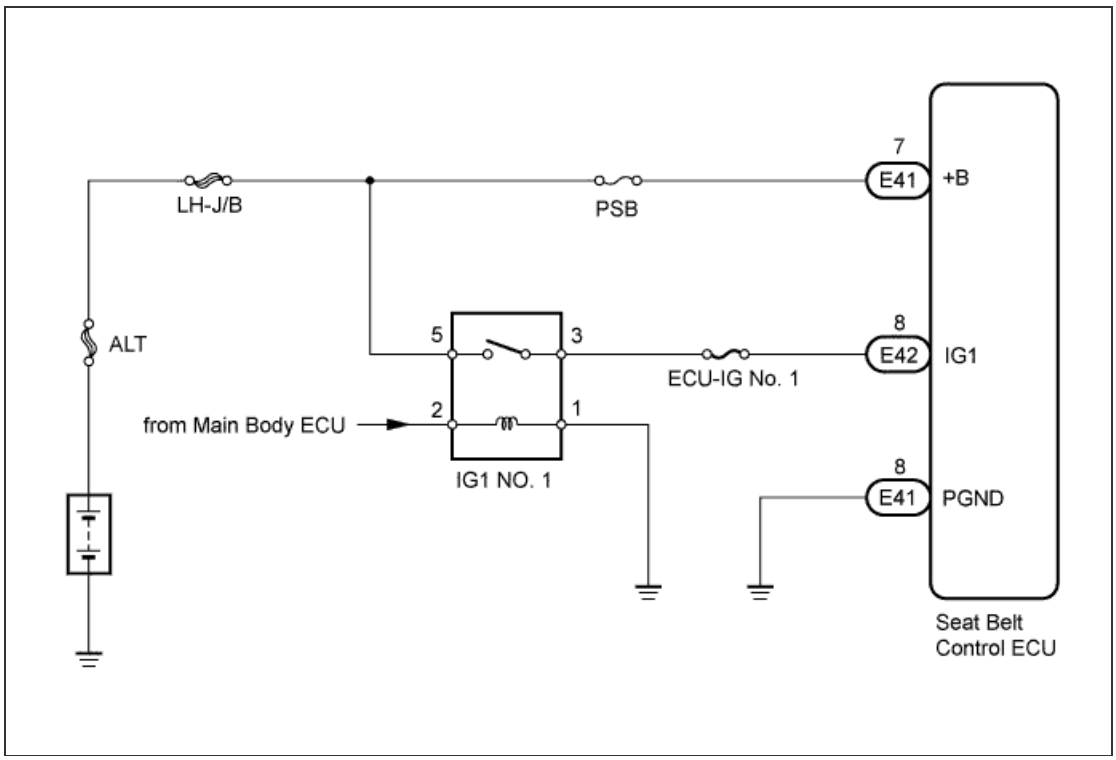

INSPECTION PROCEDURE

HINT:

Start the engine before inspection. Check the IG1 NO. 1 relay or battery if the starting system does not start.

1.INSPECT FUSE (ECU-IG No. 1, PSB)

a. Remove the ECU-IG No. 1 and PSB fuses from the main body ECU.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
ECU-IG No. 1 fuse	Always	Below 1 Ω
PSB fuse		

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (SEAT BELT CONTROL ECU - BATTERY AND BODY GROUND)

a. Disconnect the E41 and E42 seat belt control ECU connectors.

b. Measure the voltage according to the value(s) in the table below.


Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E42-8 (IG1) - Body ground	Engine switch on (IG)	11 to 14 V
	Engine switch off	Below 1 V
E41-7 (+B) - Body ground	Always	11 to 14 V

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E41-8 (PGND) - Body ground	Always	Below 1 Ω

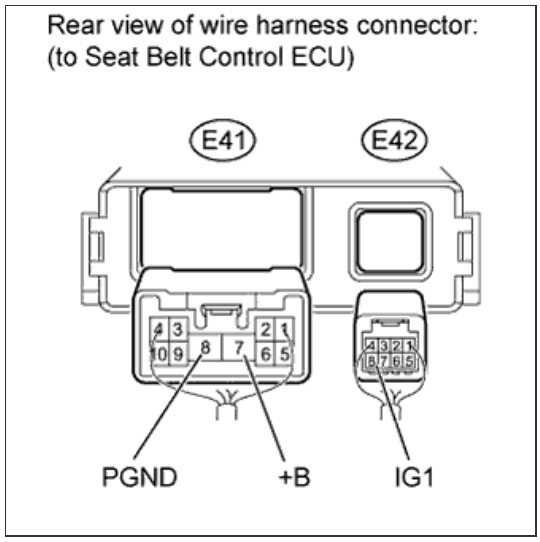

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C


B → REPLACE SEAT BELT CONTROL ECU (Click here)

C → REPAIR OR REPLACE HARNESS OR CONNECTOR

A

REPLACE SEAT BELT CONTROL ECU (Click here)

for Preparation Click here

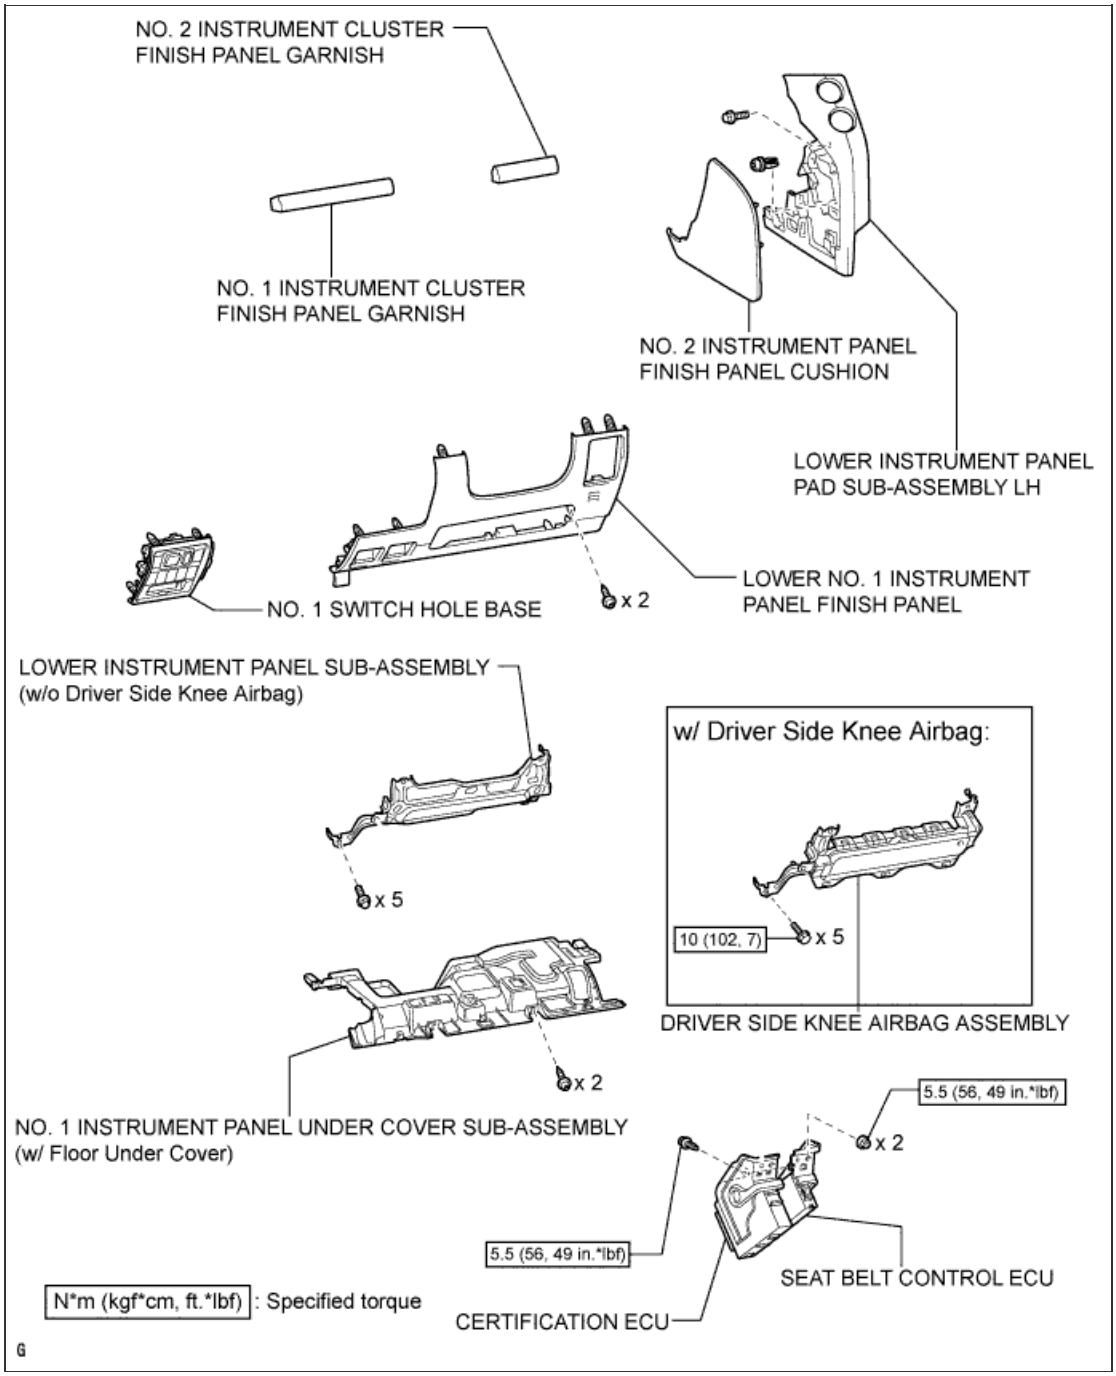

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (w/ Driver Side Knee Airbag)

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

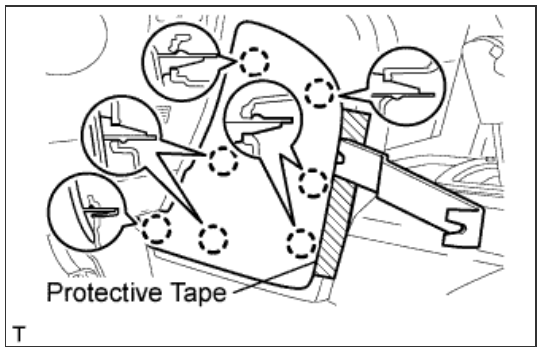


3. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

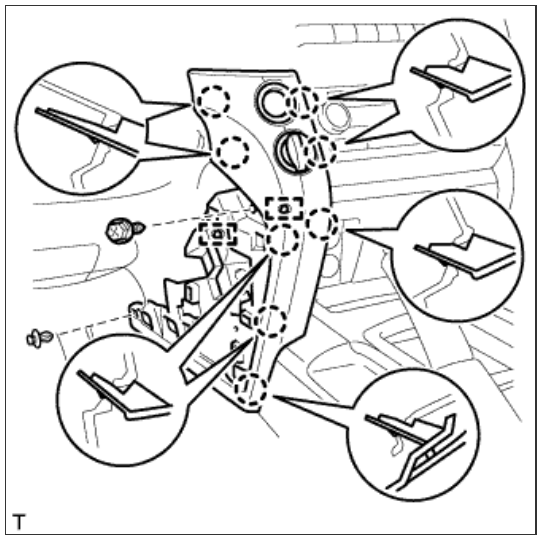

4. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

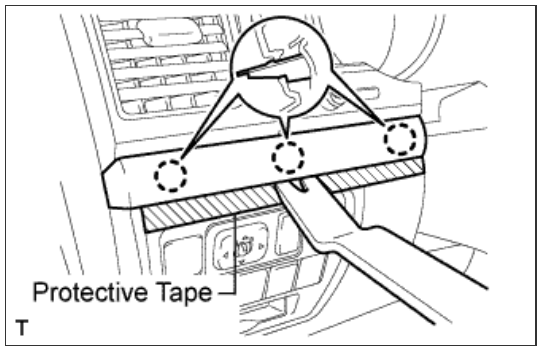

5. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

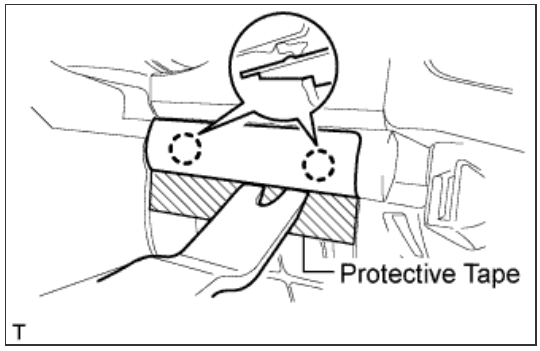


6. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.

c. Remove the under cover and disconnect the connectors.

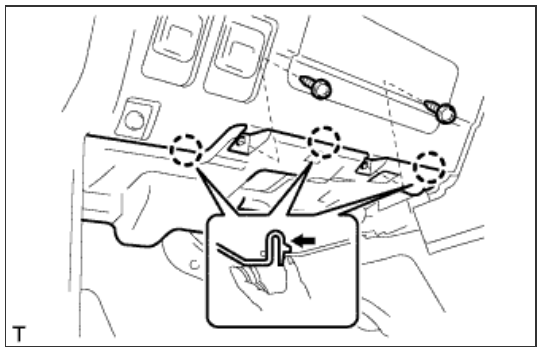


7. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)

a. Remove the 5 bolts and driver side knee airbag.

b. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

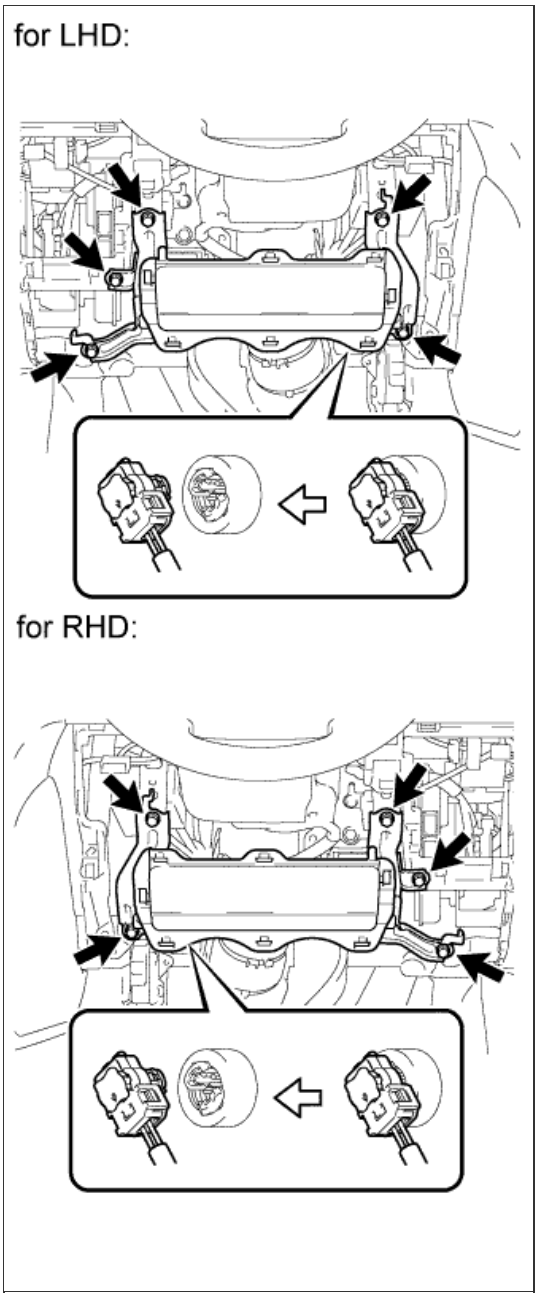

8. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)

a. Detach the 2 claws and disconnect the DLC3.


b. Remove the 5 bolts and instrument panel.

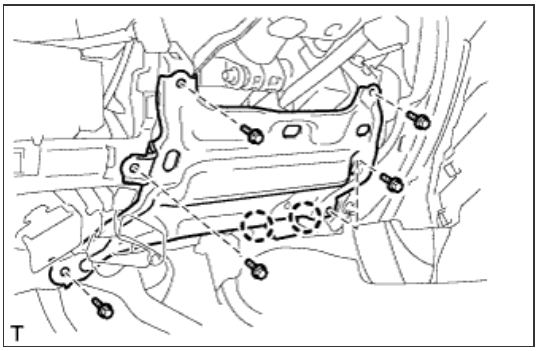

9. REMOVE NO. 1 SWITCH HOLE BASE

a. Detach the 4 claws.

b. Remove the switch hole base and then disconnect the connectors.

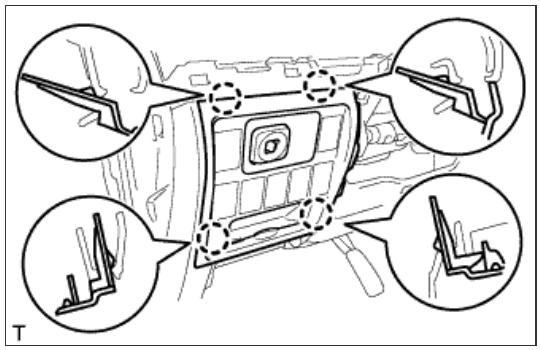


10. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

b. Open the hole cover.

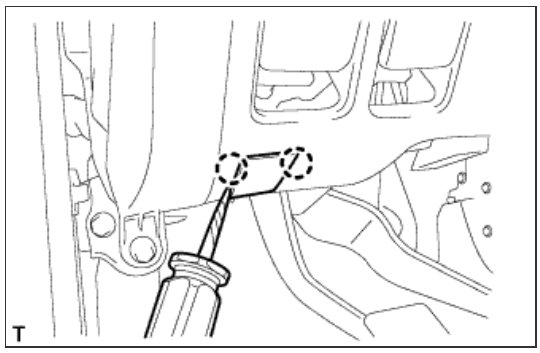


c. Remove the 2 bolts.

d. Detach the 14 claws.

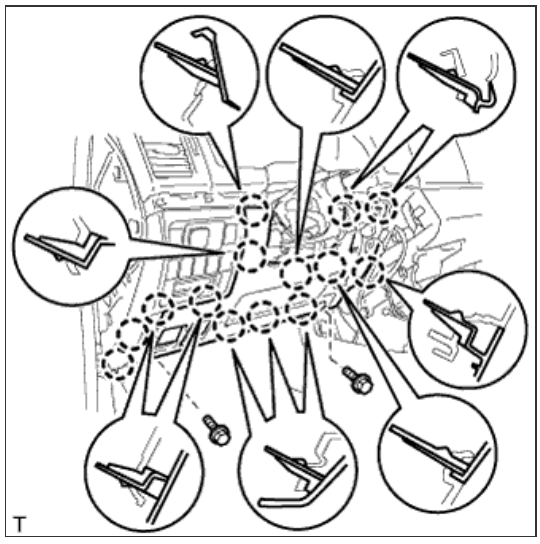


e. Detach the 2 claws and remove the sensor.

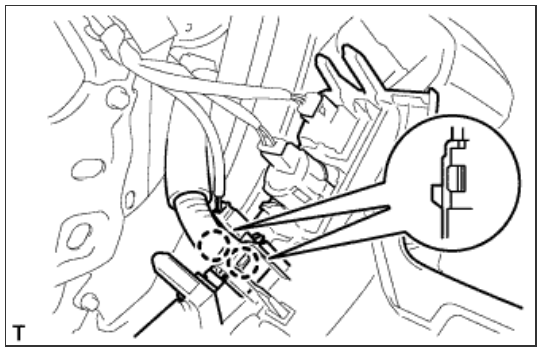

f. Detach the 2 claws and disconnect the 2 control cables.


g. Remove the finish panel and then disconnect the connectors.

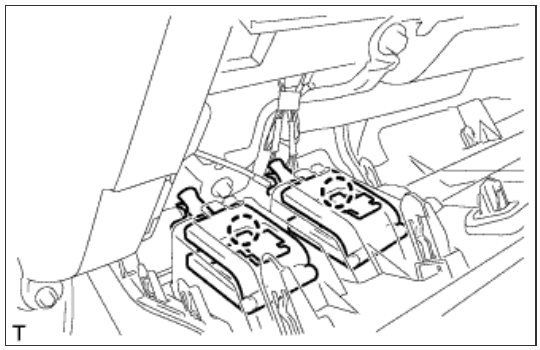


11. REMOVE SEAT BELT CONTROL ECU

a. Disconnect the 2 connectors.

b. Remove the 2 nuts and remove the seat belt control CU together with the certification CU.

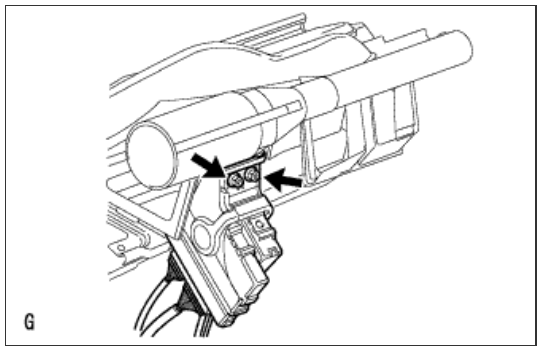

c. Remove the bolt and seat belt control CU from the certification CU.

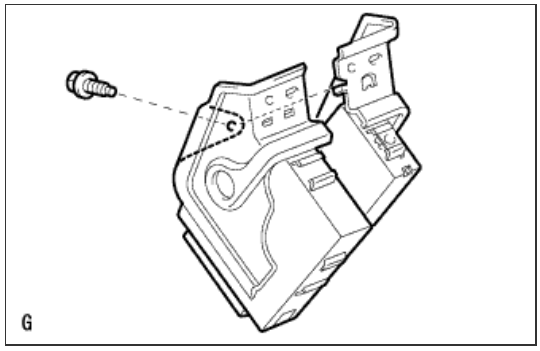

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (w/ Driver Side Knee Airbag)

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

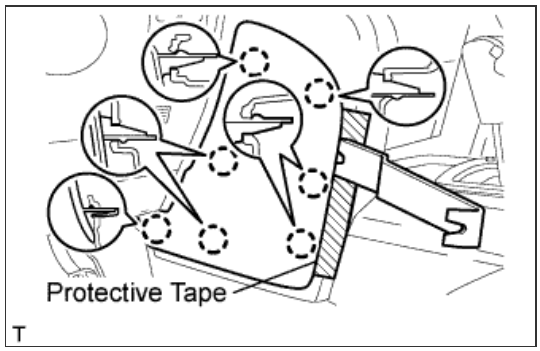


3. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

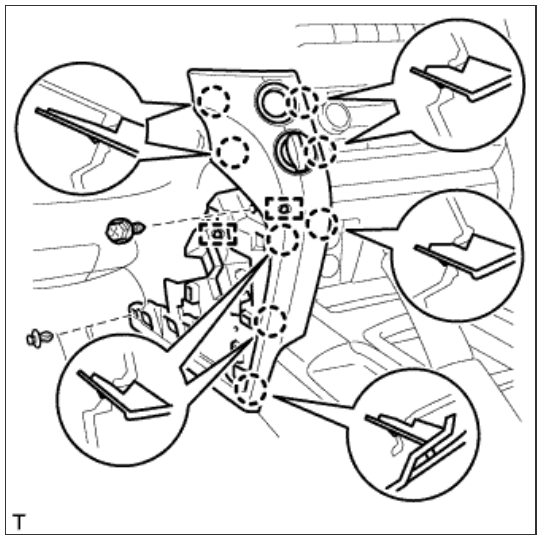

4. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

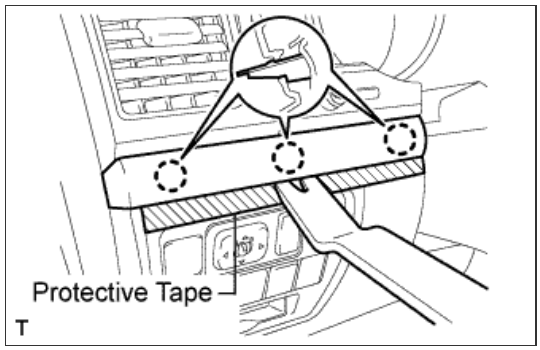

5. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

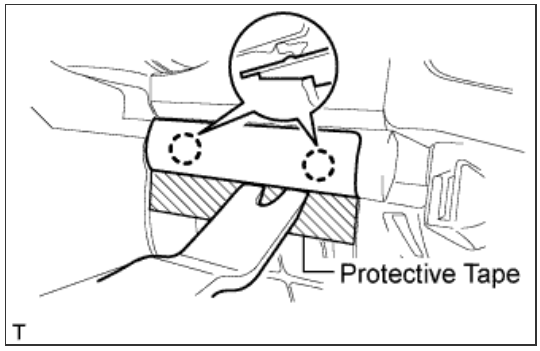


6. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.

c. Remove the under cover and disconnect the connectors.

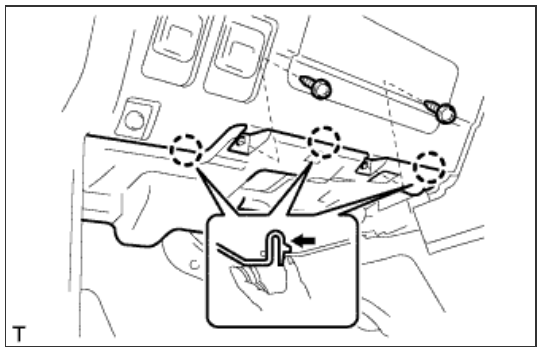


7. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)

a. Remove the 5 bolts and driver side knee airbag.

b. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

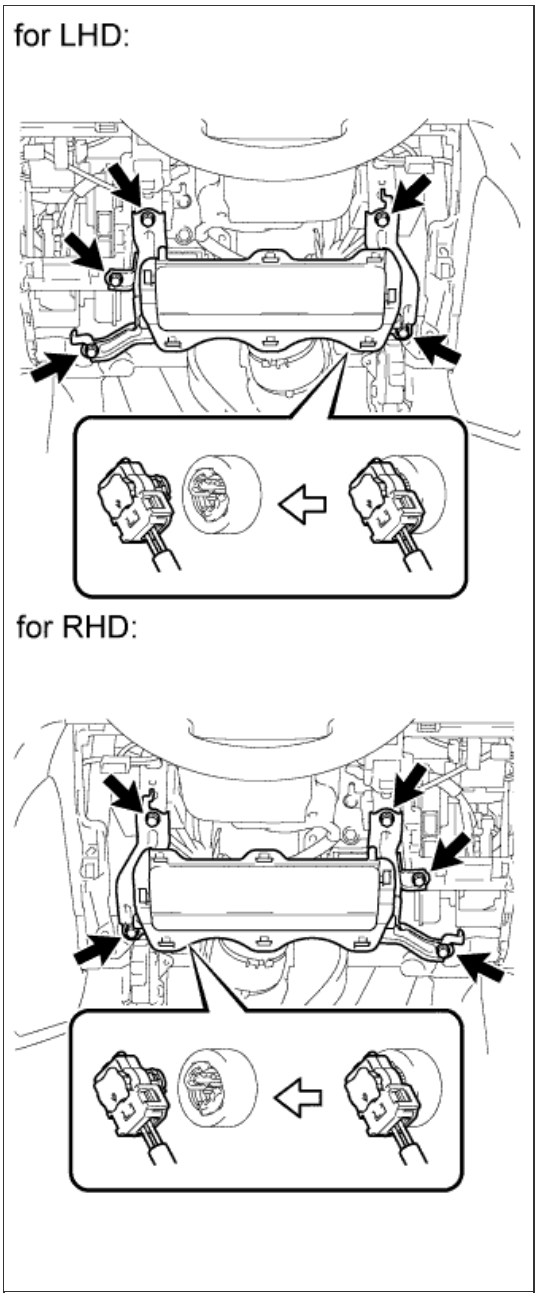

8. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)

a. Detach the 2 claws and disconnect the DLC3.


b. Remove the 5 bolts and instrument panel.

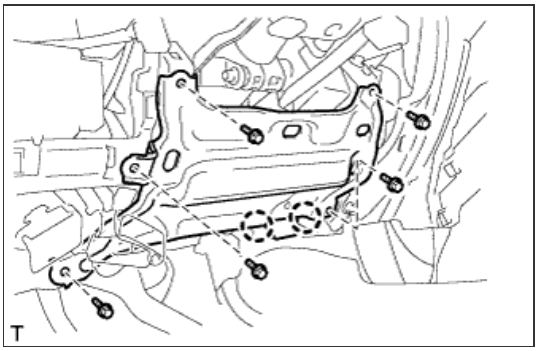

9. REMOVE NO. 1 SWITCH HOLE BASE

a. Detach the 4 claws.

b. Remove the switch hole base and then disconnect the connectors.

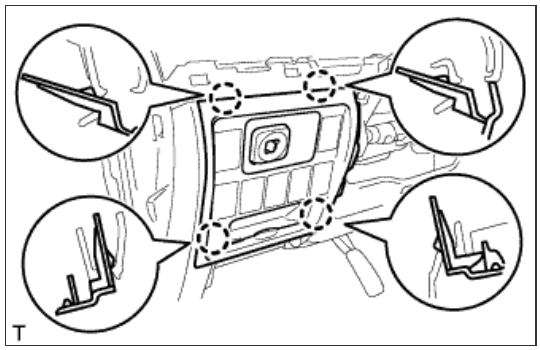


10. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

b. Open the hole cover.

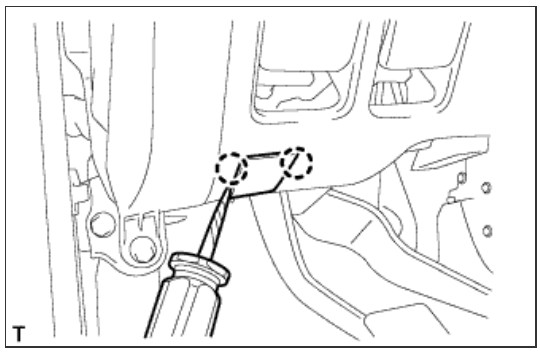


c. Remove the 2 bolts.

d. Detach the 14 claws.

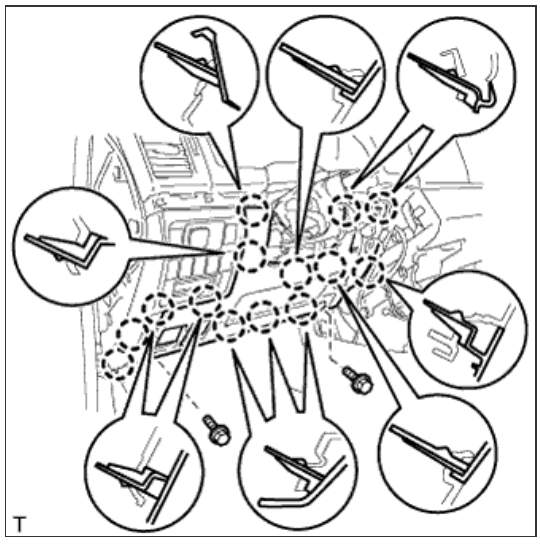


e. Detach the 2 claws and remove the sensor.

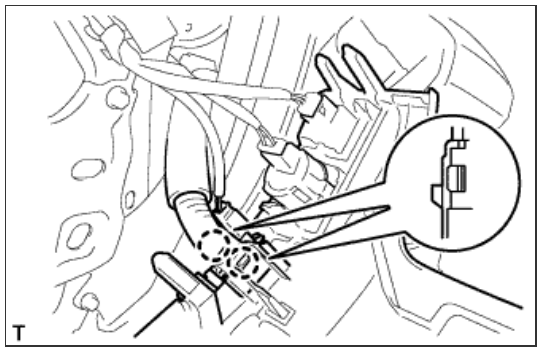

f. Detach the 2 claws and disconnect the 2 control cables.


g. Remove the finish panel and then disconnect the connectors.

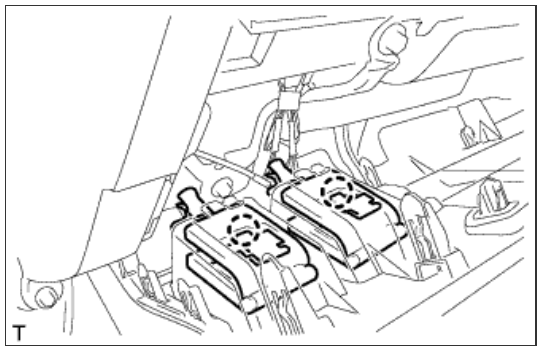


11. REMOVE SEAT BELT CONTROL ECU

a. Disconnect the 2 connectors.

b. Remove the 2 nuts and remove the seat belt control CU together with the certification CU.

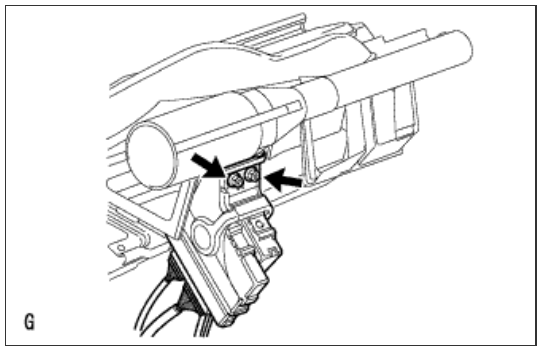

c. Remove the bolt and seat belt control CU from the certification CU.

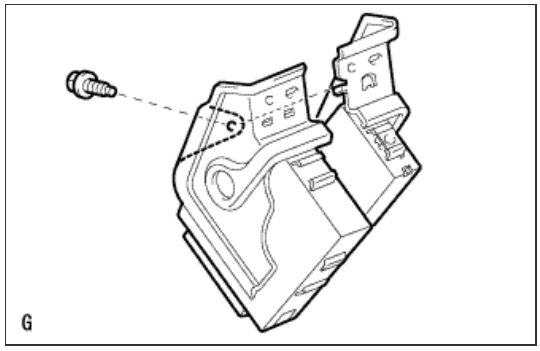


for Preparation Click here

1. INSTALL SEAT BELT CONTROL ECU

a. Install the seat belt control ECU to the certification ECU with the bolt.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

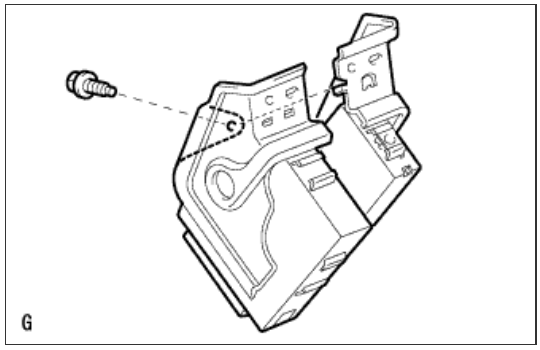

b. Install the seat belt control ECU together with the certification ECU with the 2 nuts.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }


c. Connect the 2 connectors.

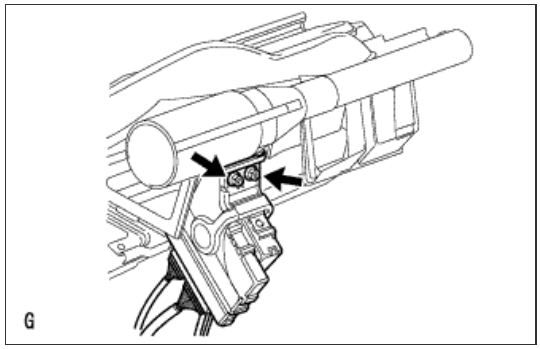


2. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

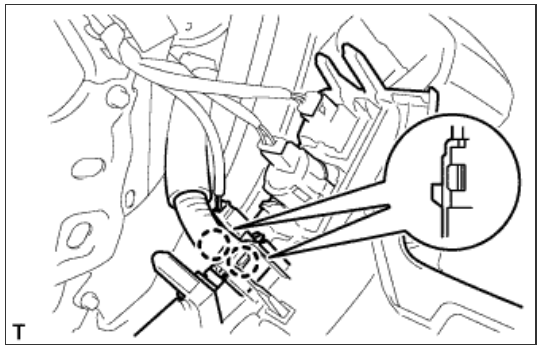


c. Attach the 2 claws to connect the 2 control cables.

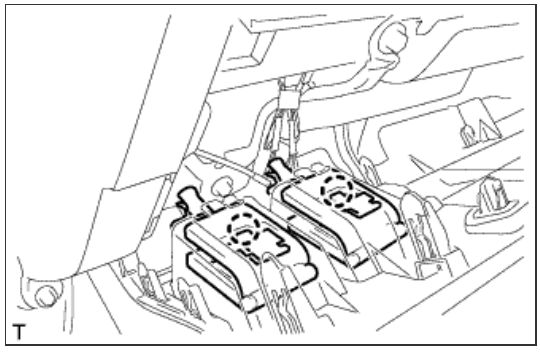


d. Attach the 14 claws to install the finish panel.

d. Attach the 11 claws to install the finish panel.

e. Install the 2 bolts.

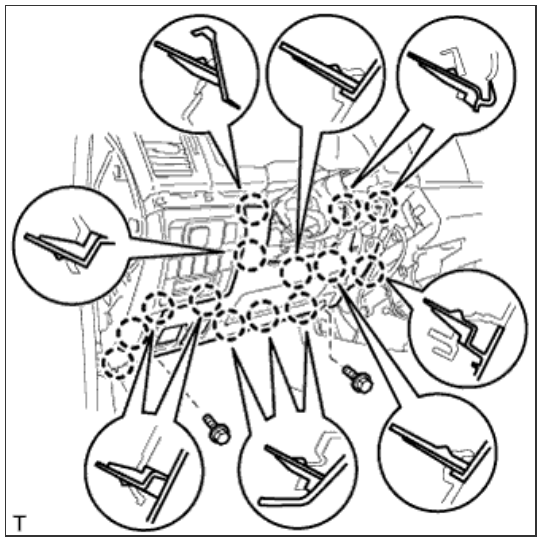


f. Attach the 2 claws to close the hole cover.

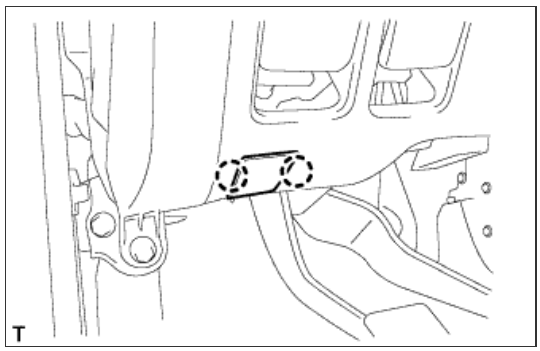

3. INSTALL NO. 1 SWITCH HOLE BASE

a. Connect the connectors.

b. Attach the 4 claws to install the switch hole base.

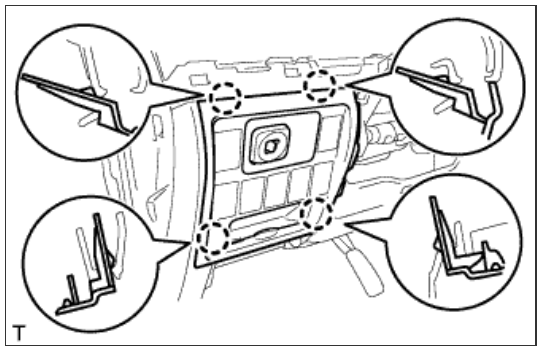

4. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)


a. Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Install the driver side knee airbag with the 5 bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

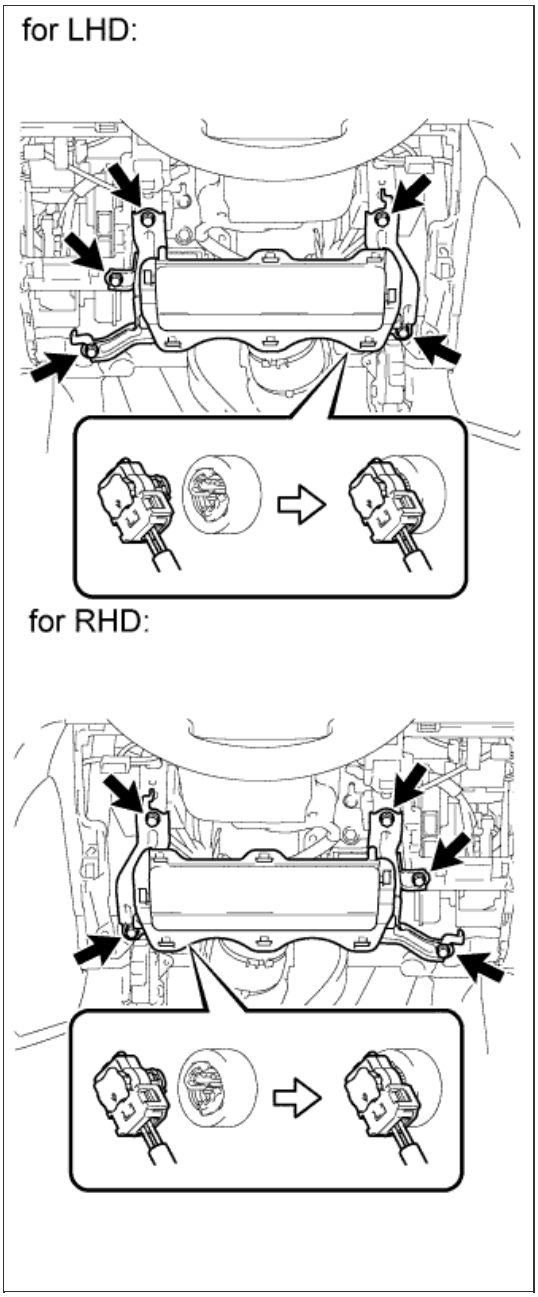

5. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)

a. Attach the 4 claws to install the instrument panel.

b. Install the 2 bolts.

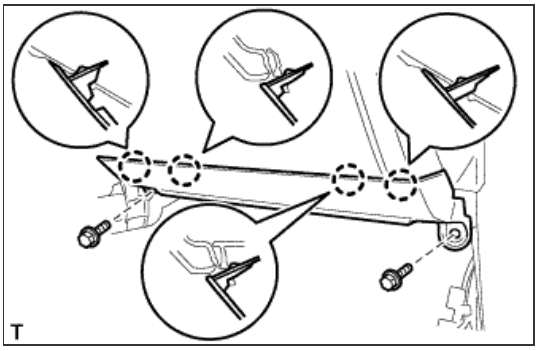


6. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.


b. Attach the 3 claws to install the under cover.

c. Install the 2 screws.

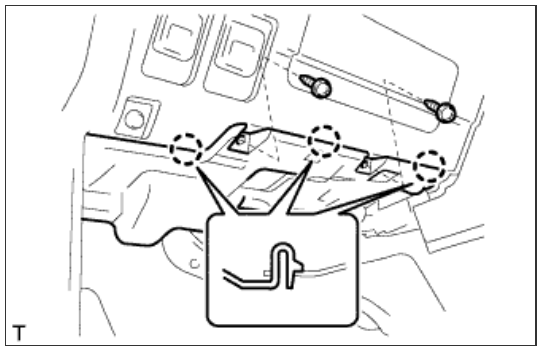


7. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

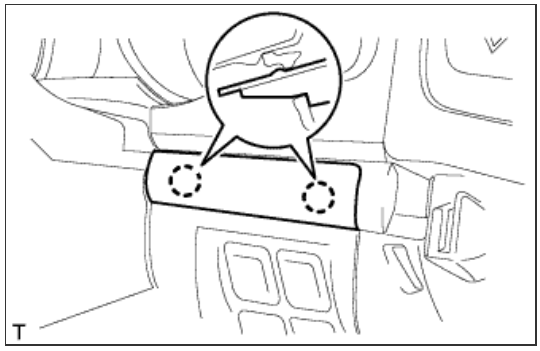

8. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

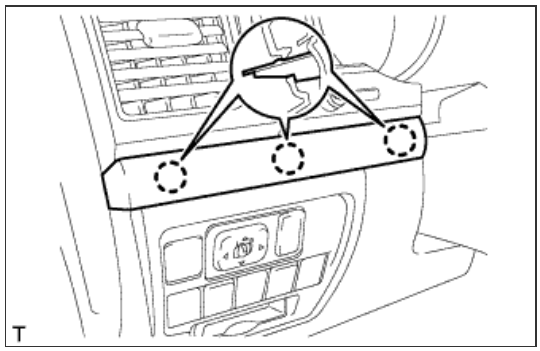


9. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

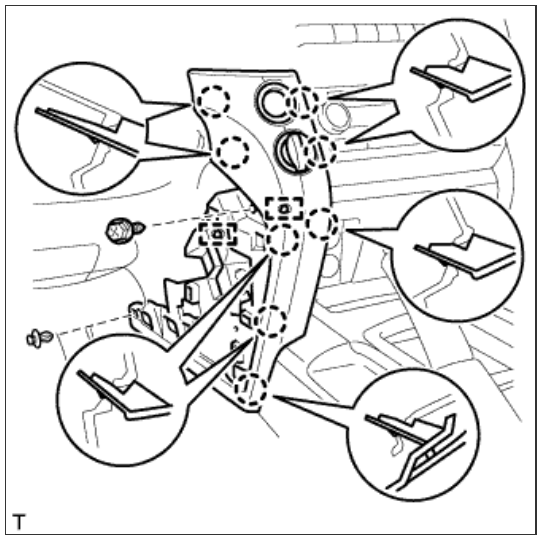

10. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

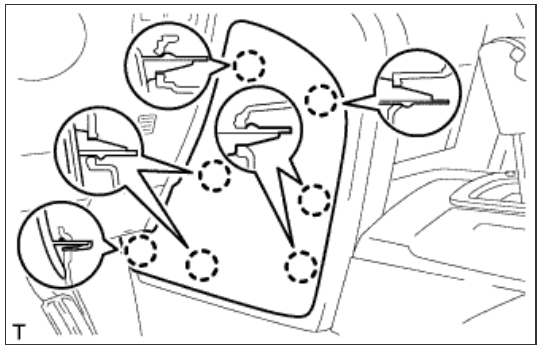

11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL (w/ Driver Side Knee Airbag)

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

12. CHECK SRS WARNING LIGHT (w/ Driver Side Knee Airbag)


a. Check the SRS warning light (Click here).

for Preparation Click here

1. INSTALL SEAT BELT CONTROL ECU

a. Install the seat belt control ECU to the certification ECU with the bolt.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

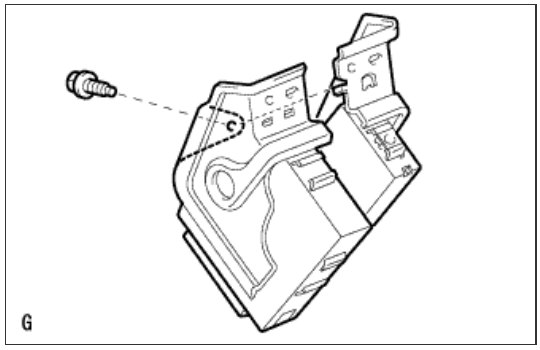

b. Install the seat belt control ECU together with the certification ECU with the 2 nuts.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }


c. Connect the 2 connectors.

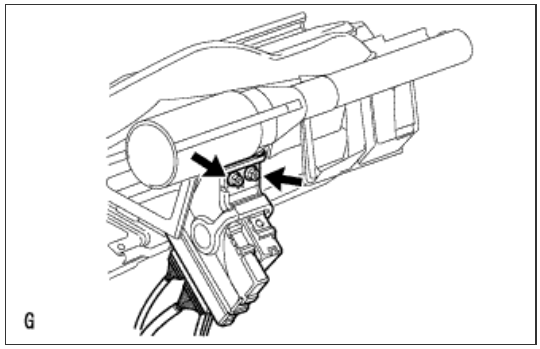


2. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

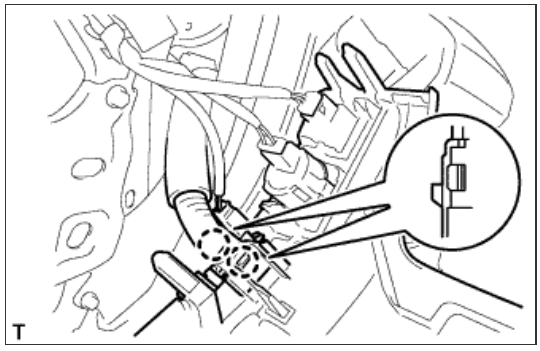


c. Attach the 2 claws to connect the 2 control cables.

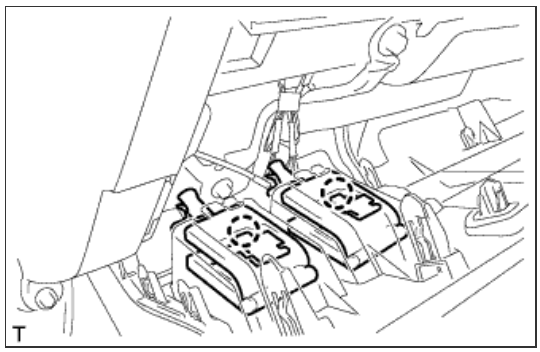


d. Attach the 14 claws to install the finish panel.

d. Attach the 11 claws to install the finish panel.

e. Install the 2 bolts.

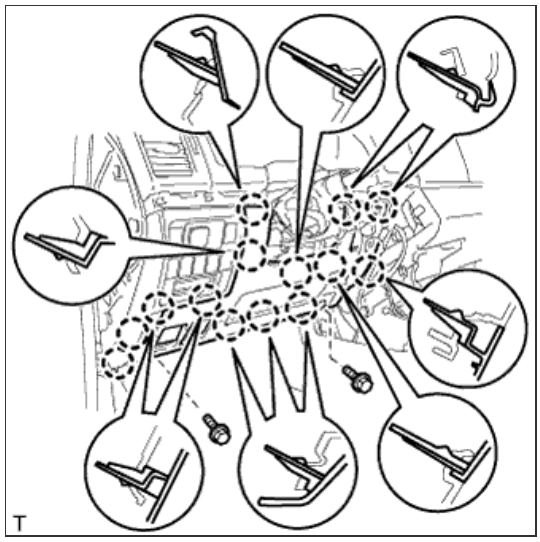


f. Attach the 2 claws to close the hole cover.

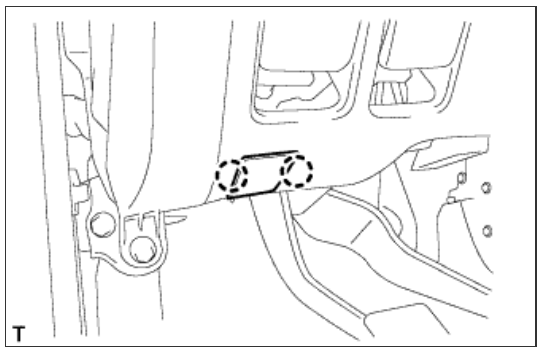

3. INSTALL NO. 1 SWITCH HOLE BASE

a. Connect the connectors.

b. Attach the 4 claws to install the switch hole base.

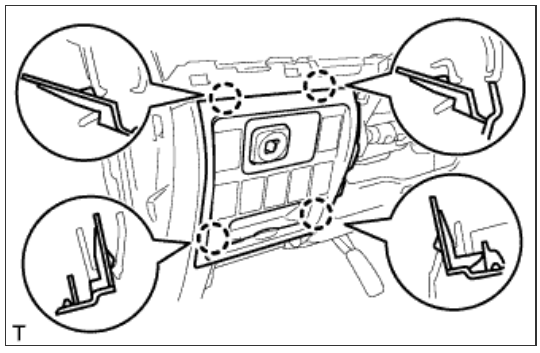

4. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)


a. Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Install the driver side knee airbag with the 5 bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

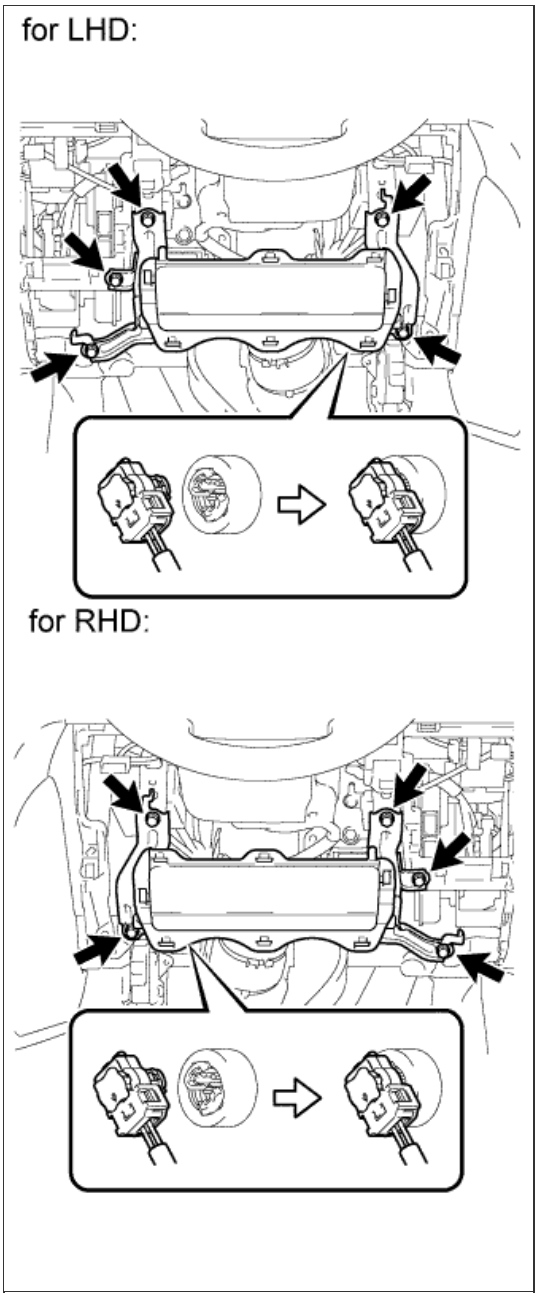

5. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)

a. Attach the 4 claws to install the instrument panel.

b. Install the 2 bolts.

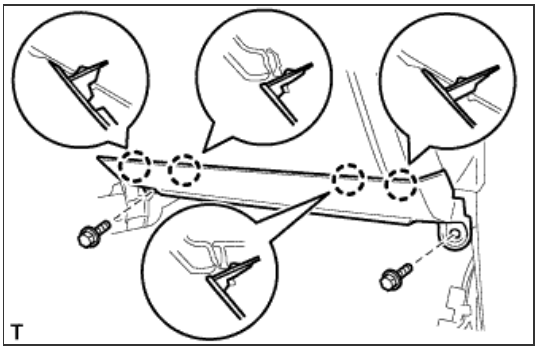


6. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.


b. Attach the 3 claws to install the under cover.

c. Install the 2 screws.

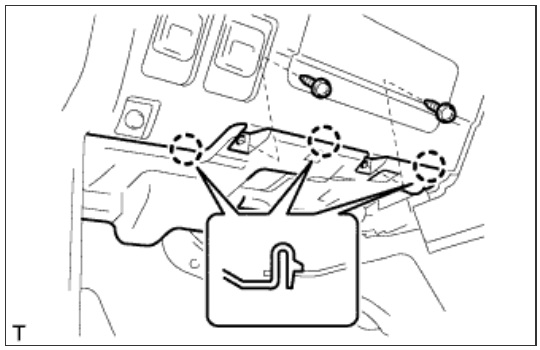


7. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

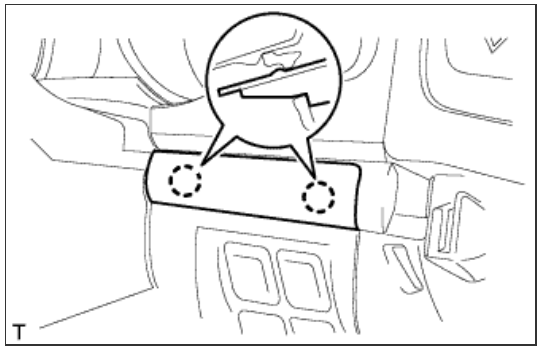

8. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

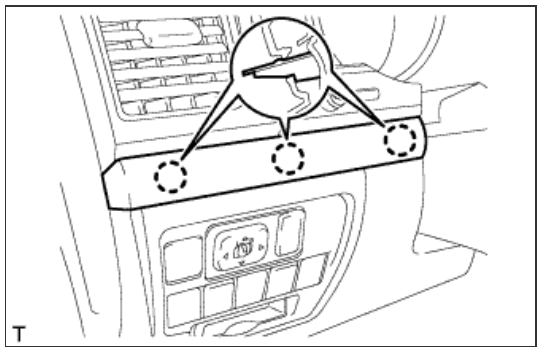


9. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

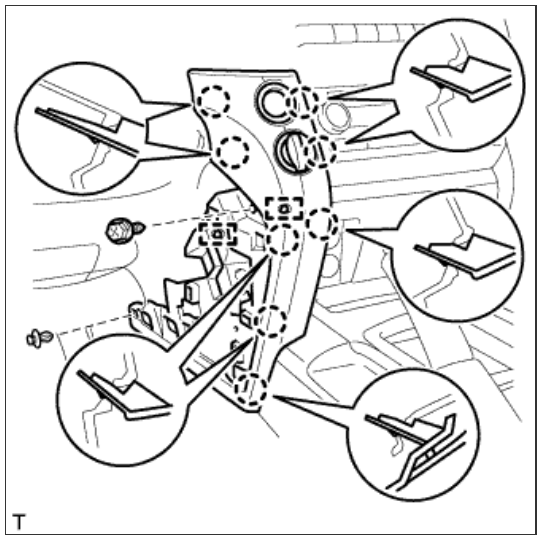

10. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

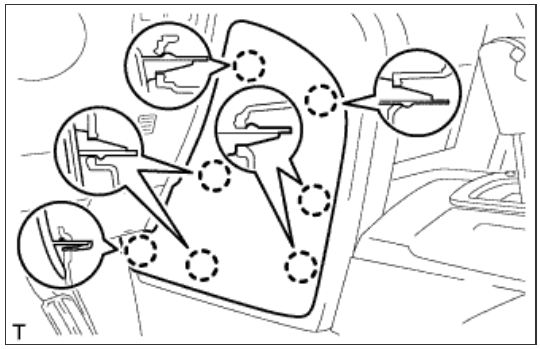

11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL (w/ Driver Side Knee Airbag)


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

12. CHECK SRS WARNING LIGHT (w/ Driver Side Knee Airbag)

a. Check the SRS warning light (Click here).

for Preparation Click here

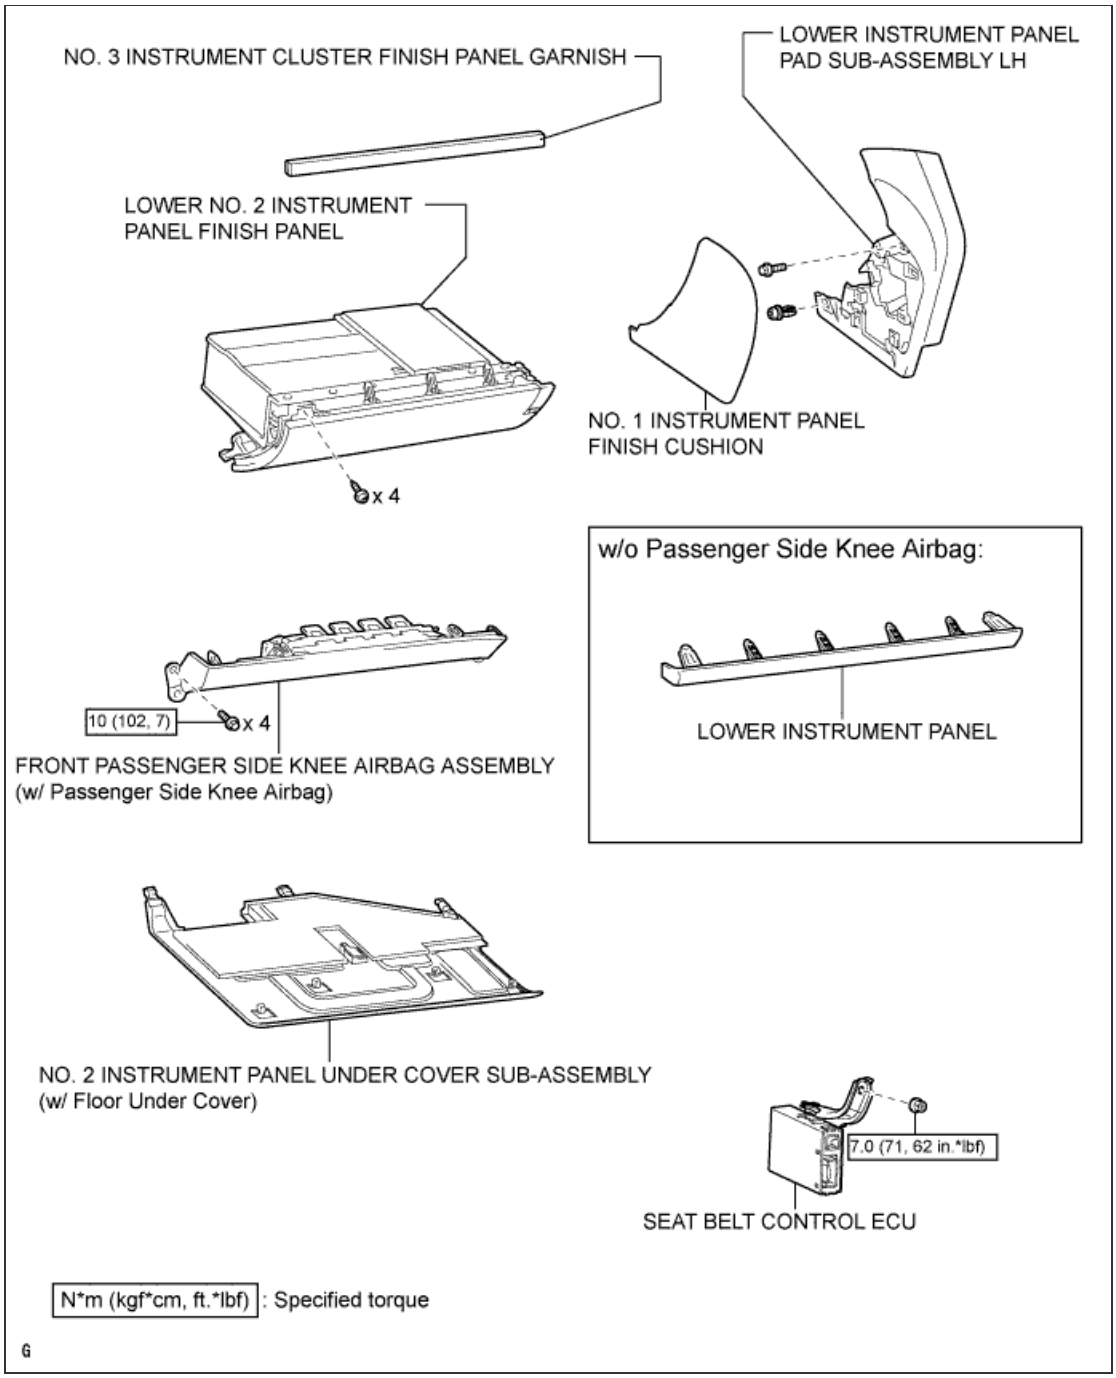

SEAT BELT CONTROL ECU (for RHD) > REMOVAL

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (w/ Passenger Side Knee Airbag)

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




3. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.


c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

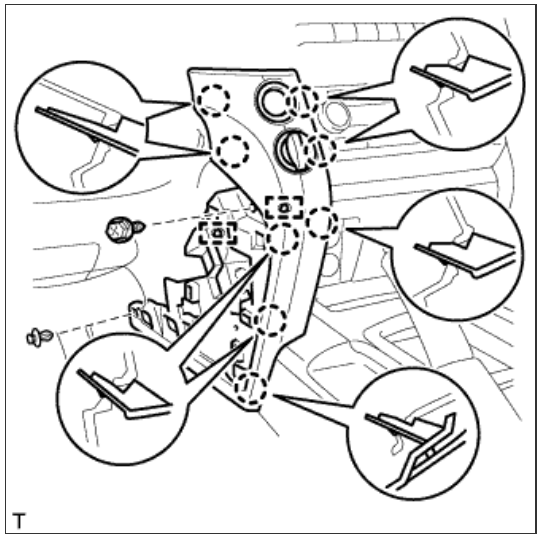

4. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Detach the 4 claws and remove the under cover.

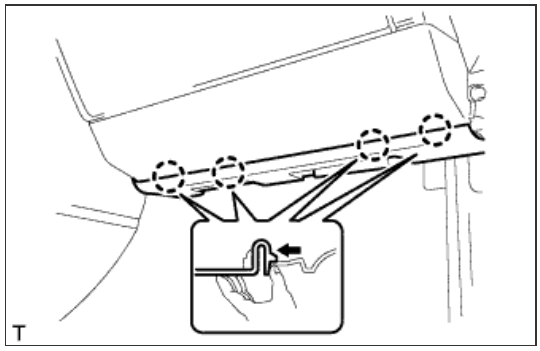

5. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)


a. Remove the 4 bolts.

b. Detach the 4 claws and remove the front passenger side knee airbag.

c. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

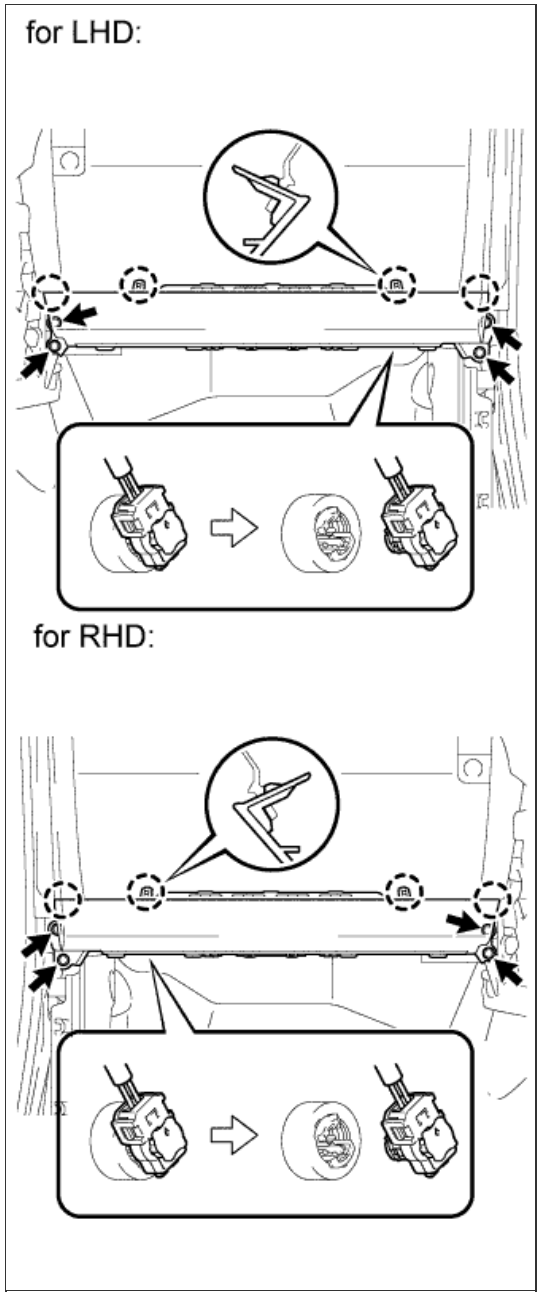

6. REMOVE LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Detach the 2 claws and disconnect the DLC3.


b. Remove the 5 bolts and instrument panel.

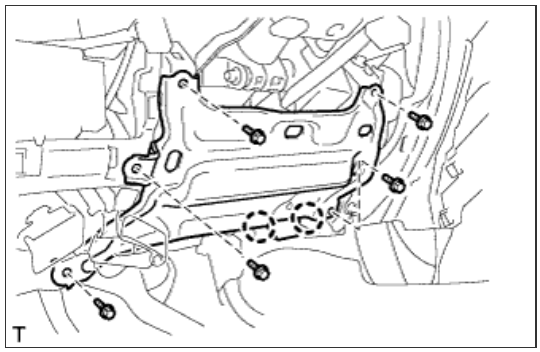

7. REMOVE NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws and remove the panel garnish.

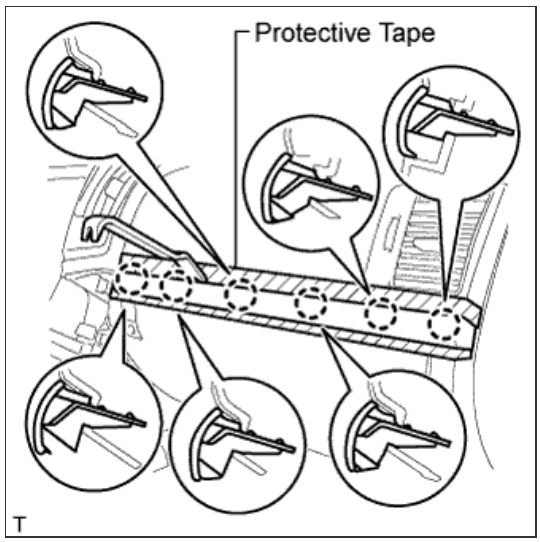


8. REMOVE LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Remove the 4 bolts.

b. Detach the 3 claws.


c. Remove the finish panel and then disconnect the connector.

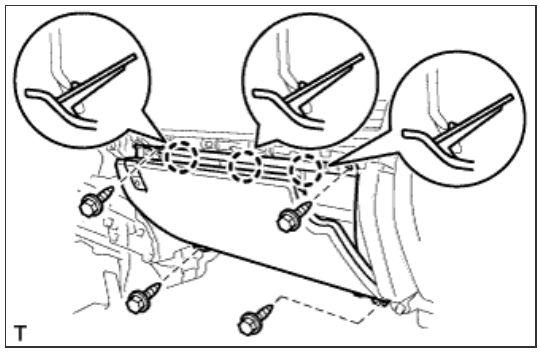

9. REMOVE SEAT BELT CONTROL ECU

a. Disconnect the 2 connectors.

b. Remove the nut and ECU.

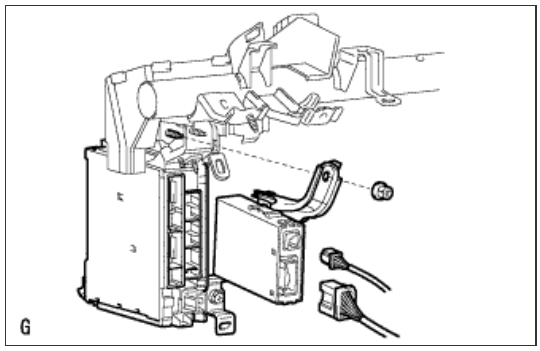
G

SEAT BELT CONTROL ECU (for RHD) > REMOVAL

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (w/ Passenger Side Knee Airbag)

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




3. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.


c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

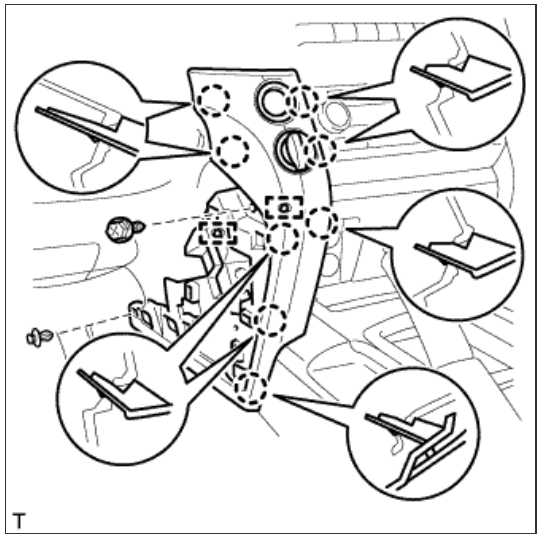

4. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Detach the 4 claws and remove the under cover.

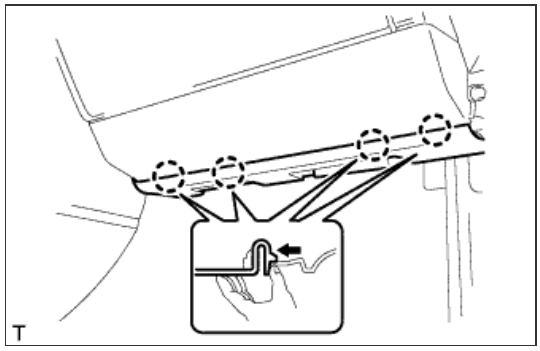

5. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)


a. Remove the 4 bolts.

b. Detach the 4 claws and remove the front passenger side knee airbag.

c. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

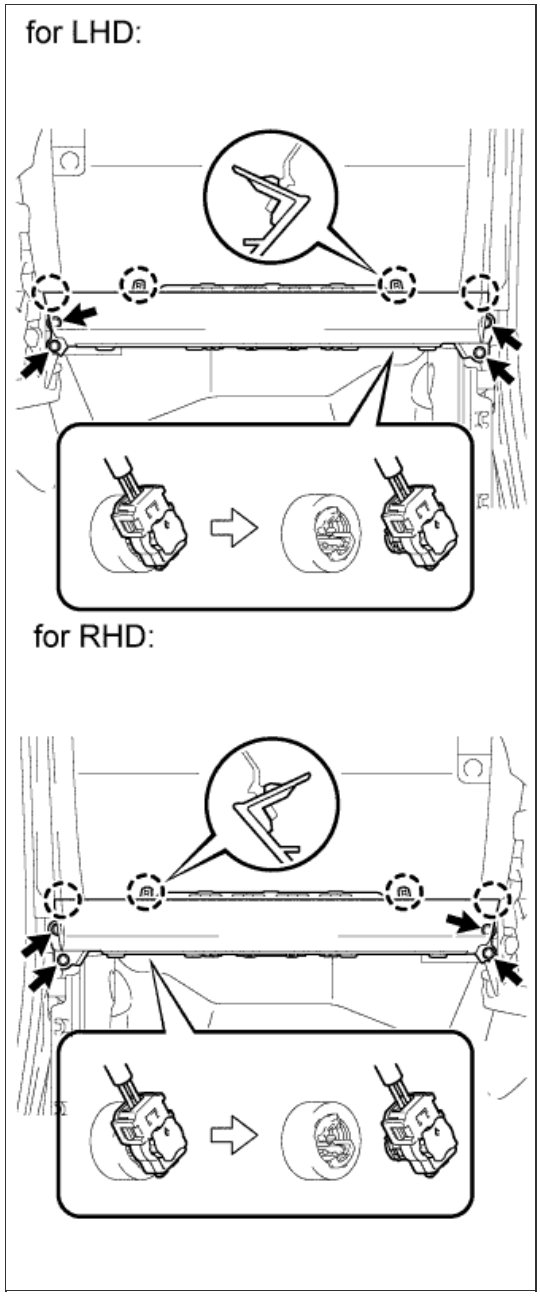

6. REMOVE LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Detach the 2 claws and disconnect the DLC3.


b. Remove the 5 bolts and instrument panel.

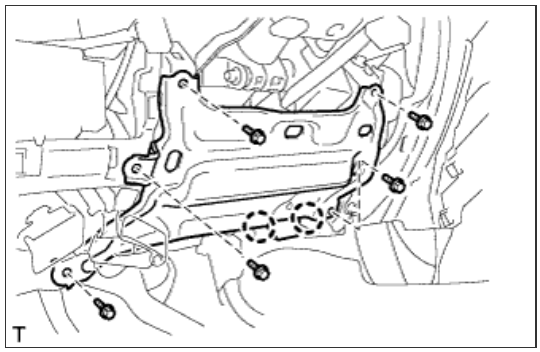

7. REMOVE NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws and remove the panel garnish.

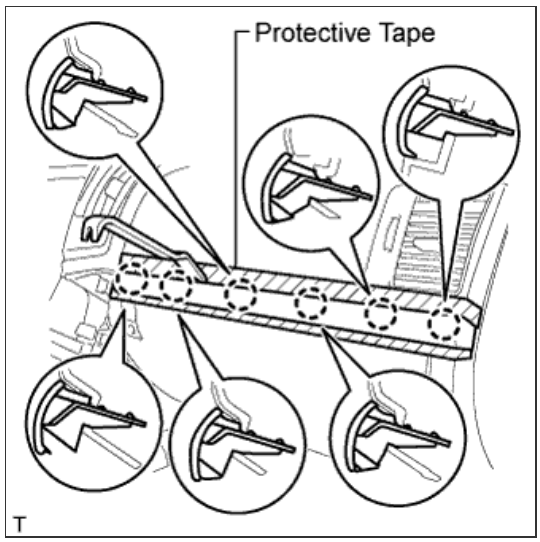


8. REMOVE LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Remove the 4 bolts.

b. Detach the 3 claws.


c. Remove the finish panel and then disconnect the connector.

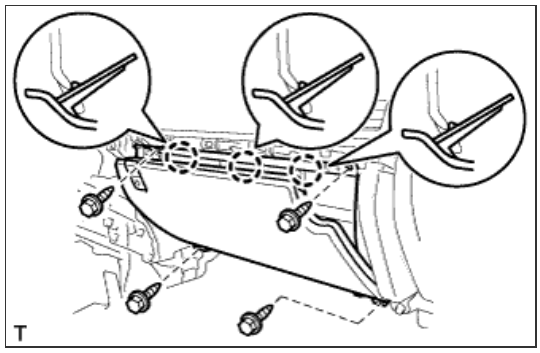

9. REMOVE SEAT BELT CONTROL ECU

a. Disconnect the 2 connectors.

b. Remove the nut and ECU.

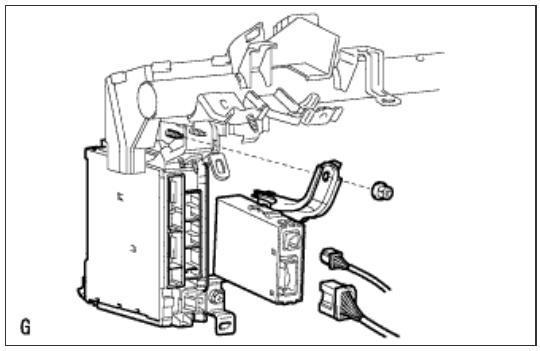
G


for Preparation Click here

1. INSTALL SEAT BELT CONTROL ECU

a. Install the ECU with the nut.

Torque:
7.0 N*m{ 71 kgf*cm , 62 in.*lbf }

b. Connect the 2 connectors.

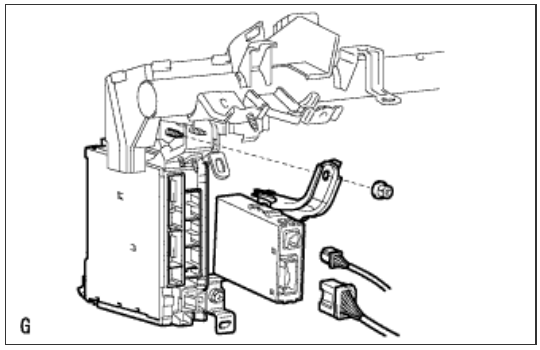


2. INSTALL LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Connect the connector.


b. Attach the 3 claws to install the finish panel.

c. Install the 4 bolts.

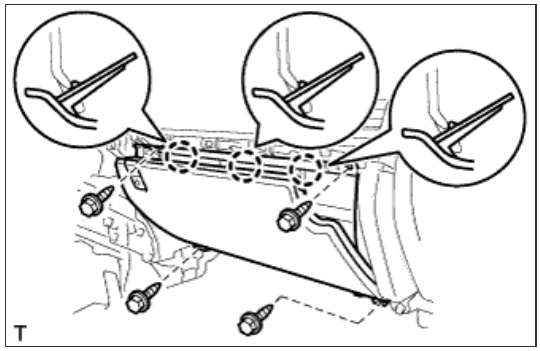

3. INSTALL NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 6 claws to install the panel garnish.

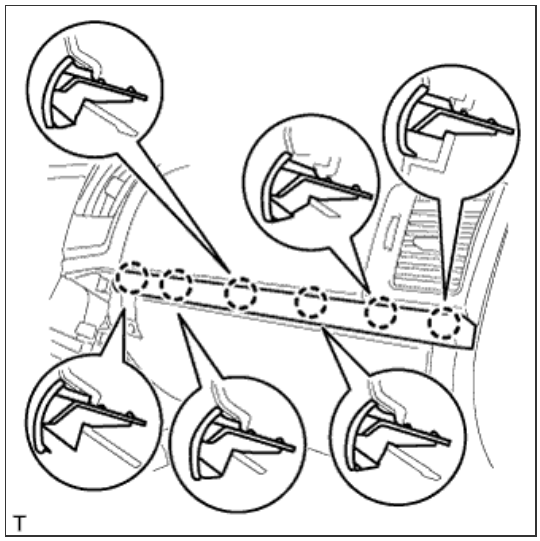

4. INSTALL FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)

a. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Attach the 4 claws to install the front passenger side knee airbag.

c. Install the 4 bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

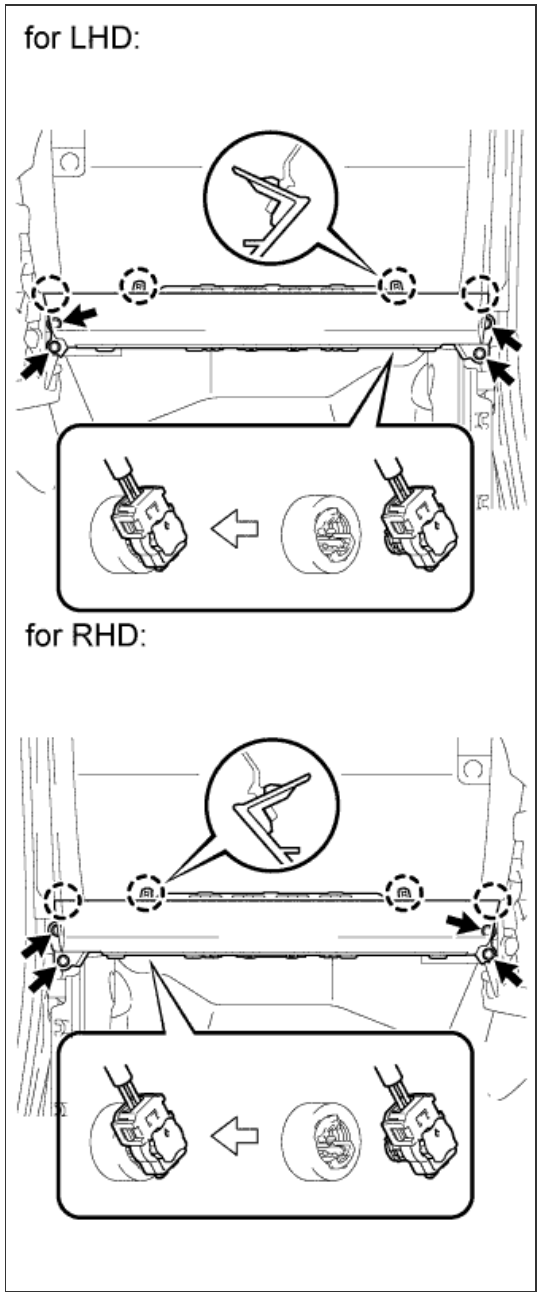

5. INSTALL LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)


a. Attach the 4 claws and connect the DLC3.

b. Install the instrument panel with the 5 bolts.

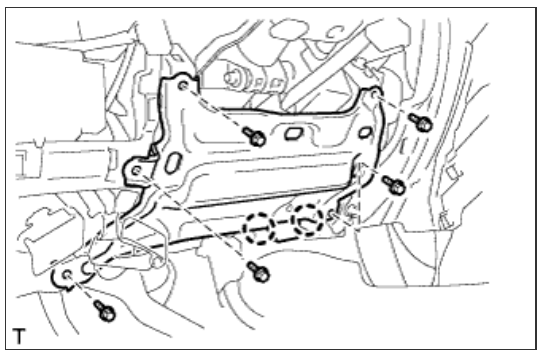

6. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Attach the 4 claws to install the under cover.

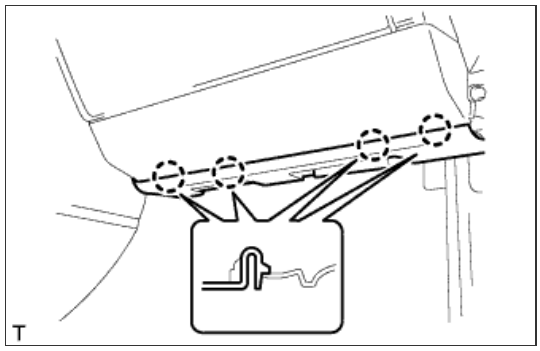


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

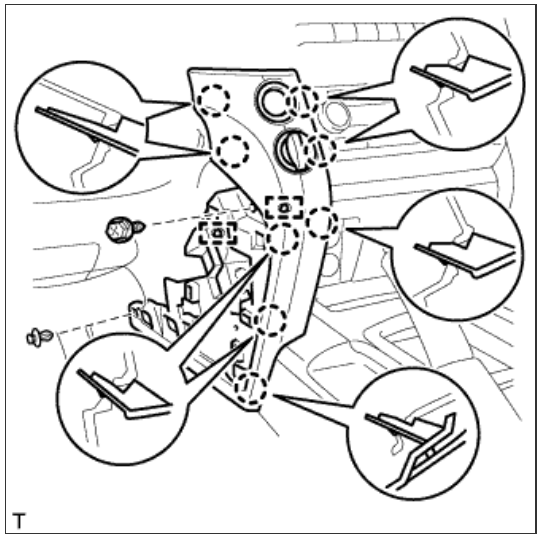

8. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

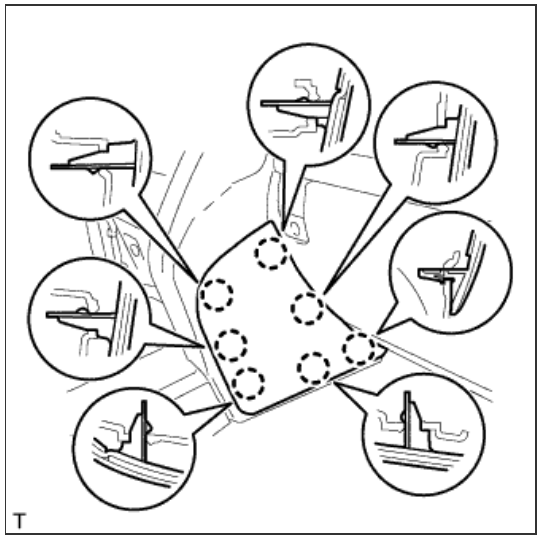

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL (w/ Passenger Side Knee Airbag)

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. CHECK SRS WARNING LIGHT (w/ Passenger Side Knee Airbag)

a. Check the SRS warning light (Click here).


for Preparation Click here

1. INSTALL SEAT BELT CONTROL ECU

a. Install the ECU with the nut.

Torque:
7.0 N*m{ 71 kgf*cm , 62 in.*lbf }

b. Connect the 2 connectors.

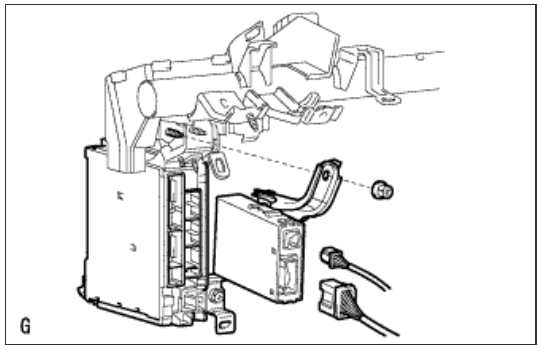


2. INSTALL LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Connect the connector.


b. Attach the 3 claws to install the finish panel.

c. Install the 4 bolts.

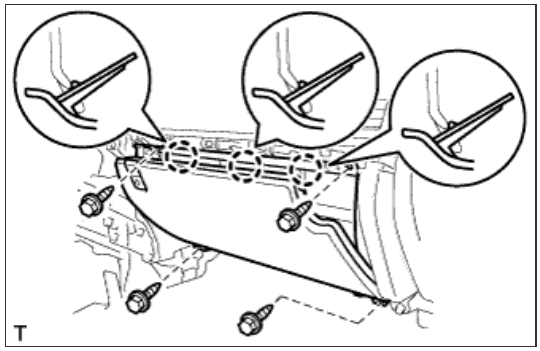

3. INSTALL NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 6 claws to install the panel garnish.

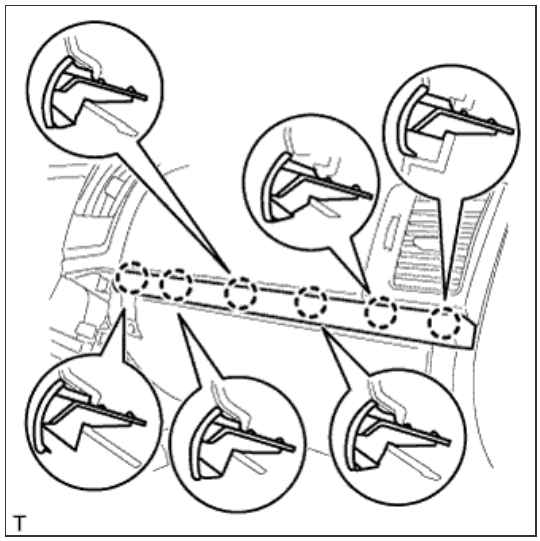

4. INSTALL FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)

a. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Attach the 4 claws to install the front passenger side knee airbag.

c. Install the 4 bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

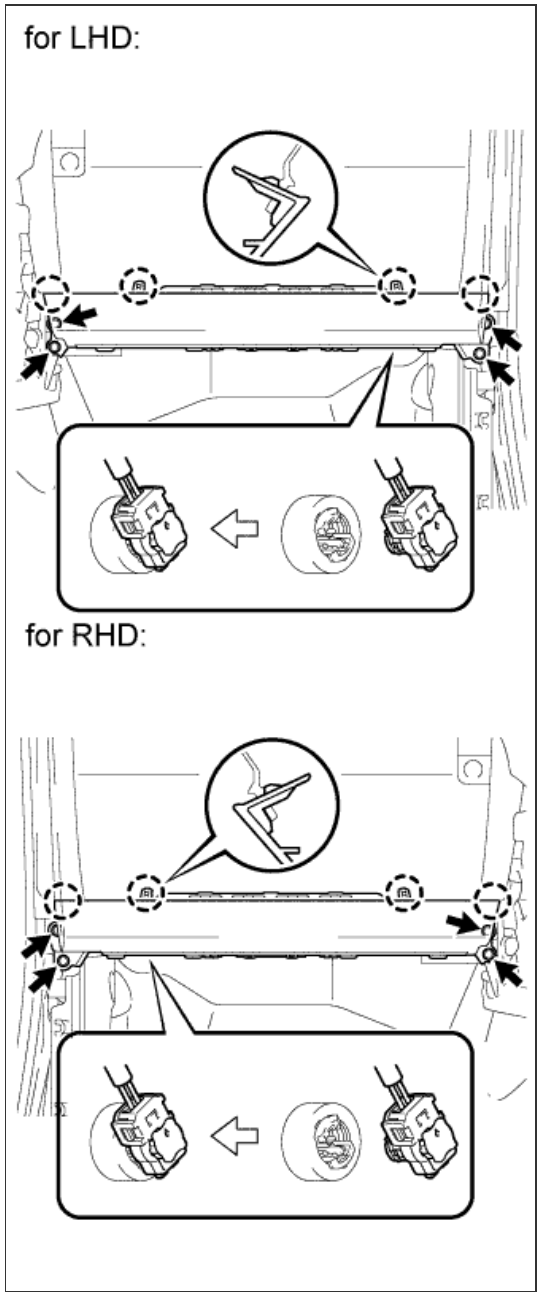

5. INSTALL LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)


a. Attach the 4 claws and connect the DLC3.

b. Install the instrument panel with the 5 bolts.

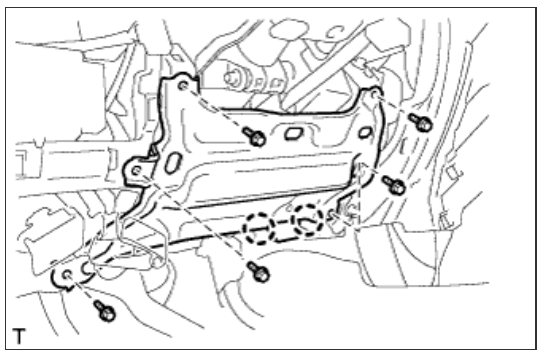

6. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Attach the 4 claws to install the under cover.

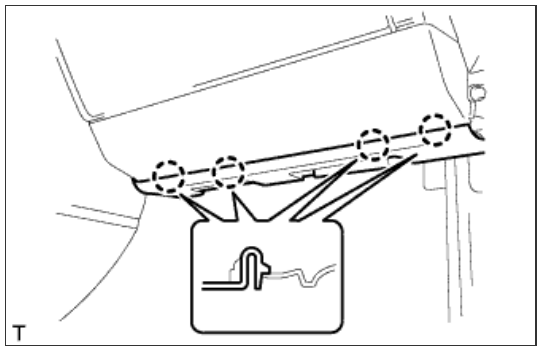


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

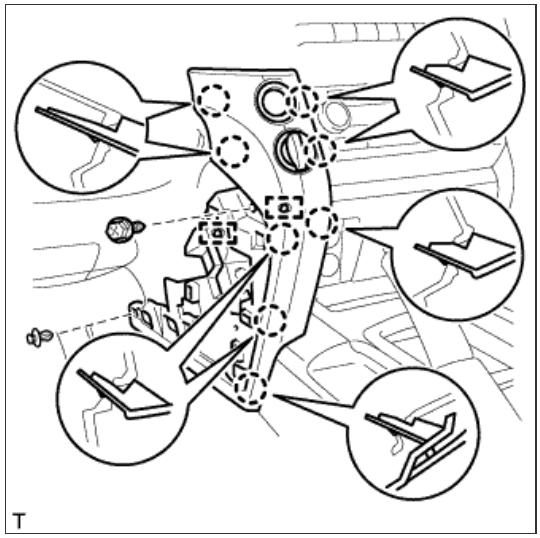

8. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

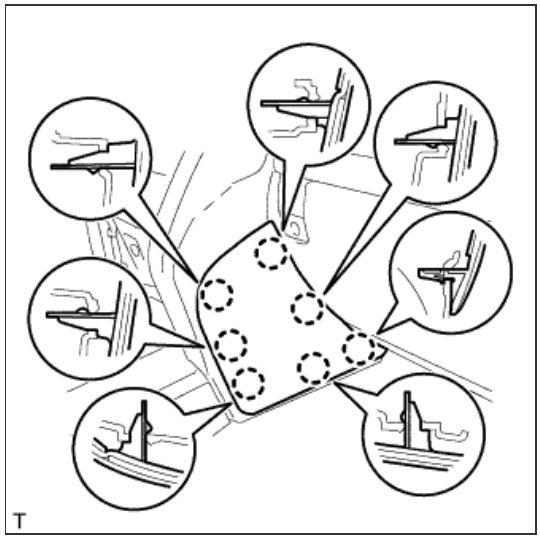

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL (w/ Passenger Side Knee Airbag)


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


10. CHECK SRS WARNING LIGHT (w/ Passenger Side Knee Airbag)

a. Check the SRS warning light (Click here).

for Preparation Click here

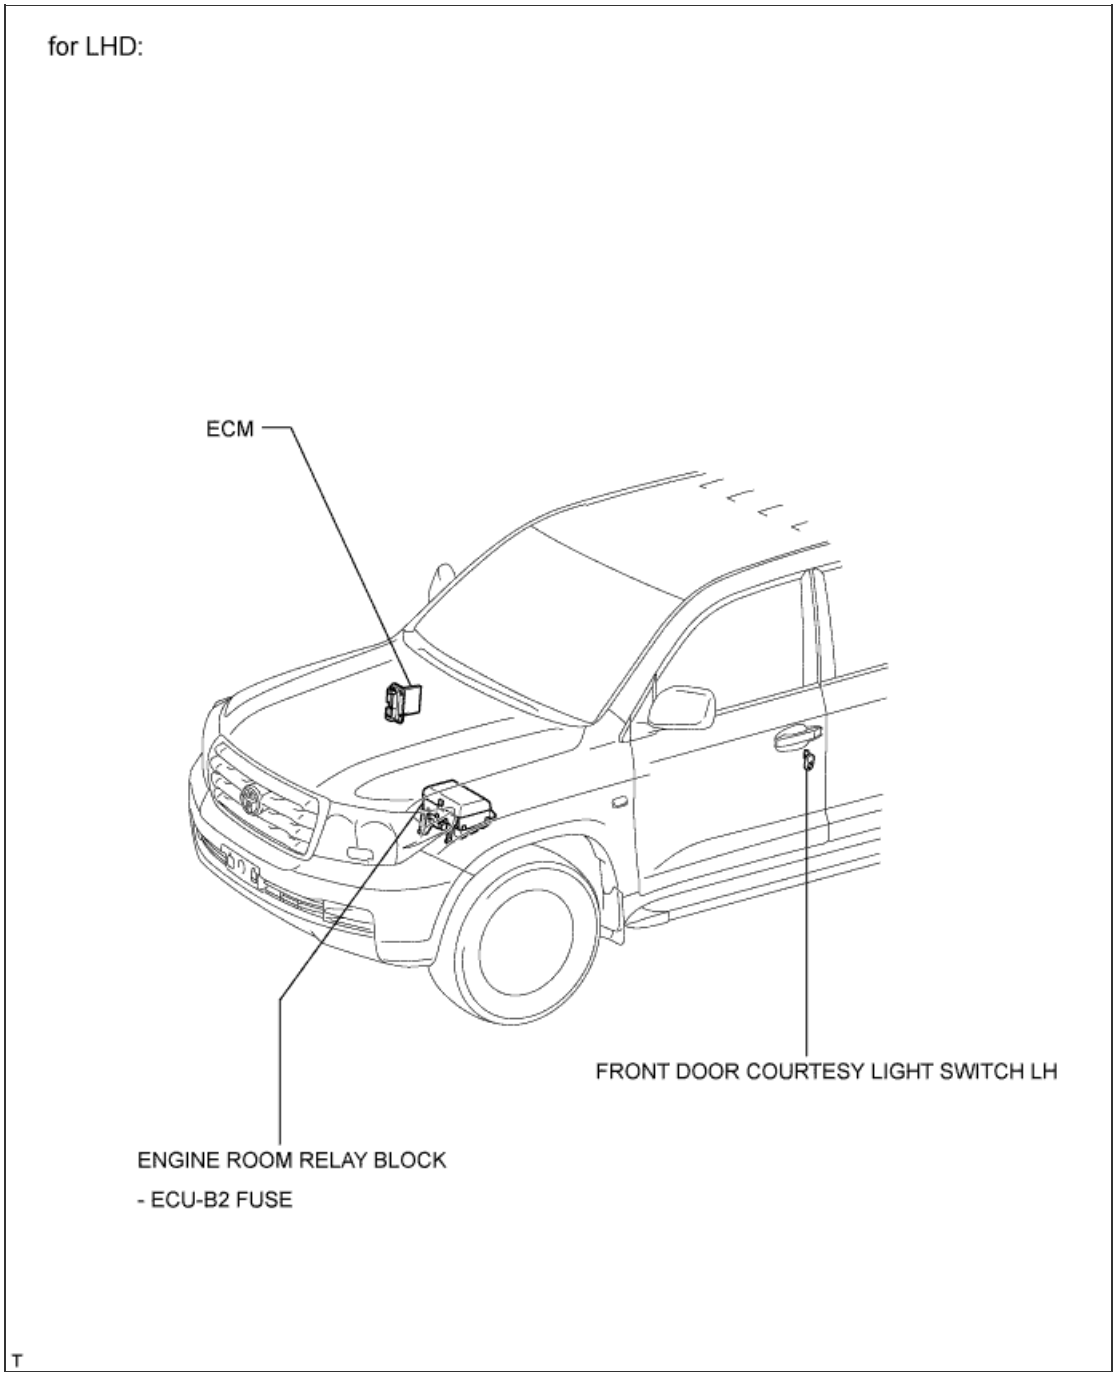


for RHD:

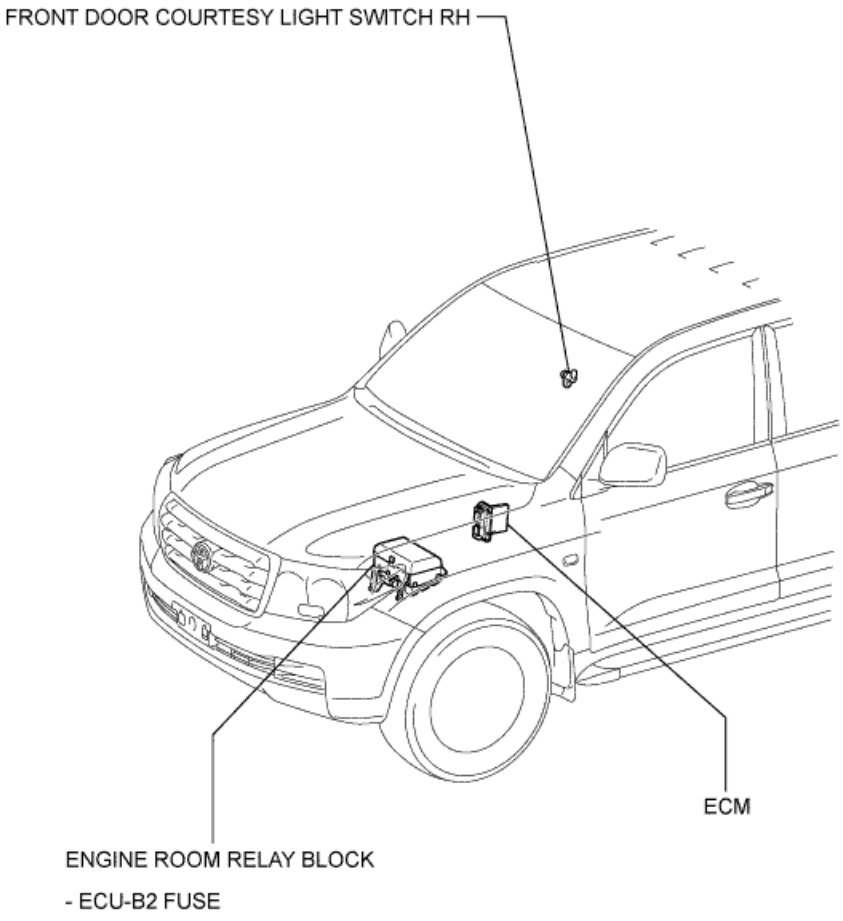
FRONT DOOR COURTESY LIGHT SWITCH RH
ECM
ENGINE ROOM RELAY BLOCK
- ECU-B2 FUSE


T

for LHD:

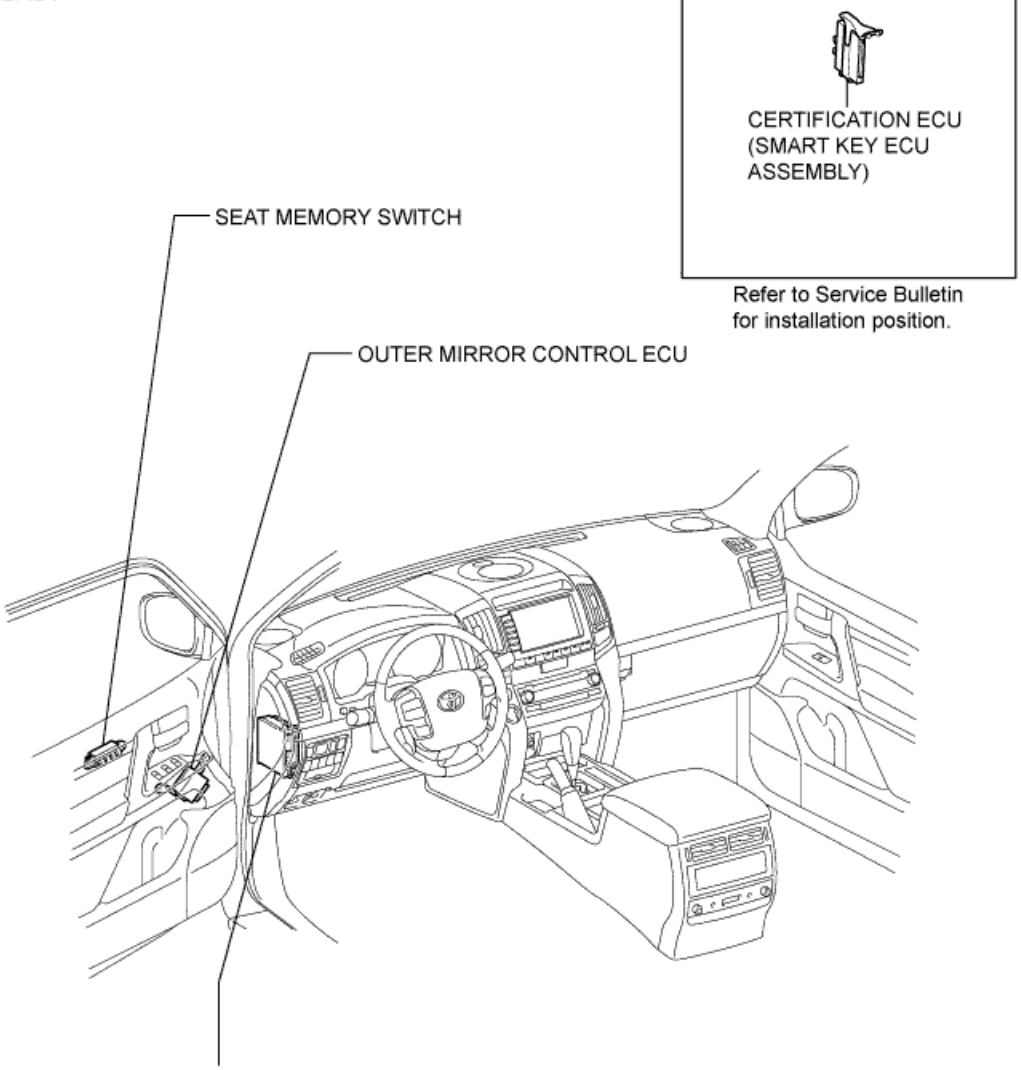

CERTIFICATION ECU
(SMART KEY ECU
ASSEMBLY)
Refer to Service Bulletin
for installation position.
SEAT MEMORY SWITCH
OUTER MIRROR CONTROL ECU
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
- FR P/SEAT LH FUSE
- FR P/SEAT RH FUSE


T

for RHD:

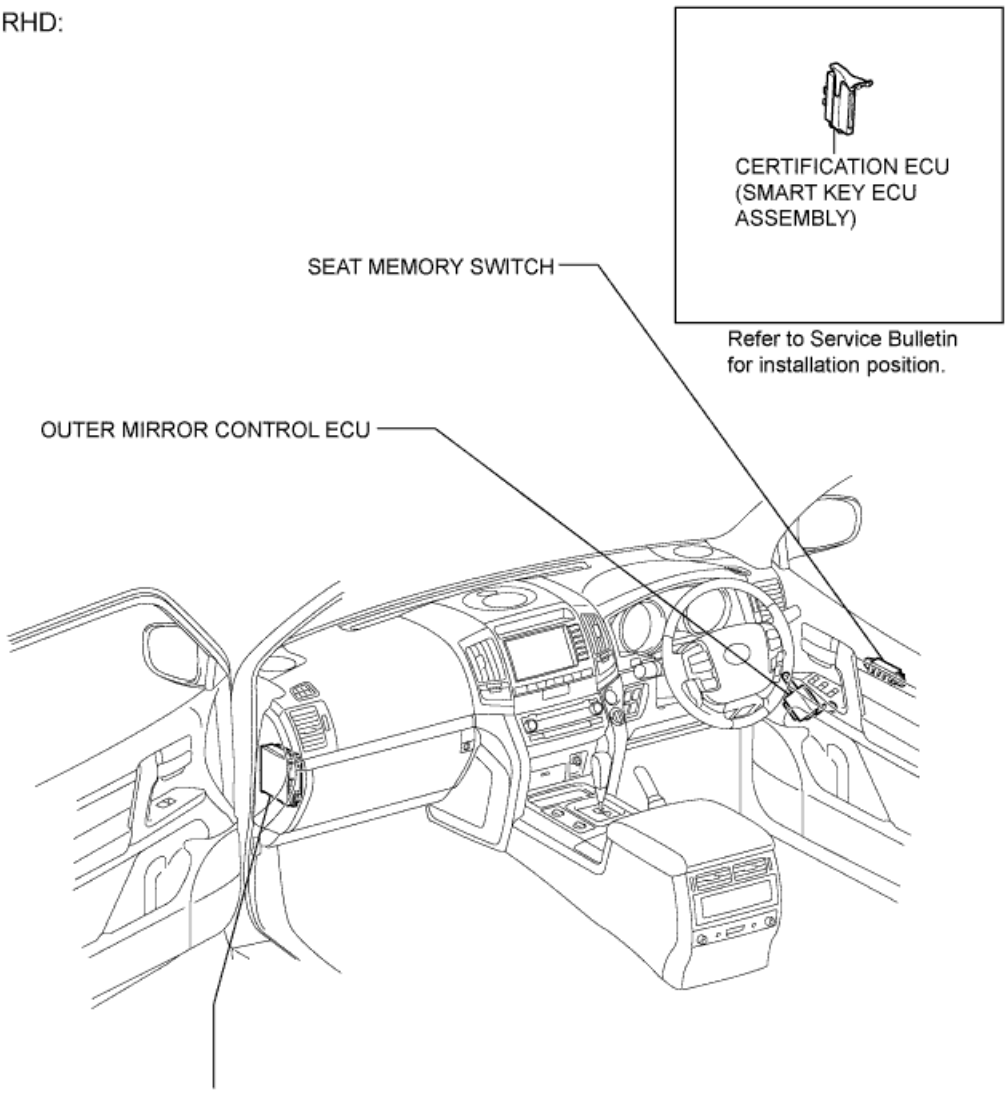

CERTIFICATION ECU
(SMART KEY ECU
ASSEMBLY)
SEAT MEMORY SWITCH
Refer to Service Bulletin
for installation position.
OUTER MIRROR CONTROL ECU
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
- FR P/SEAT LH FUSE
- FR P/SEAT RH FUSE

T

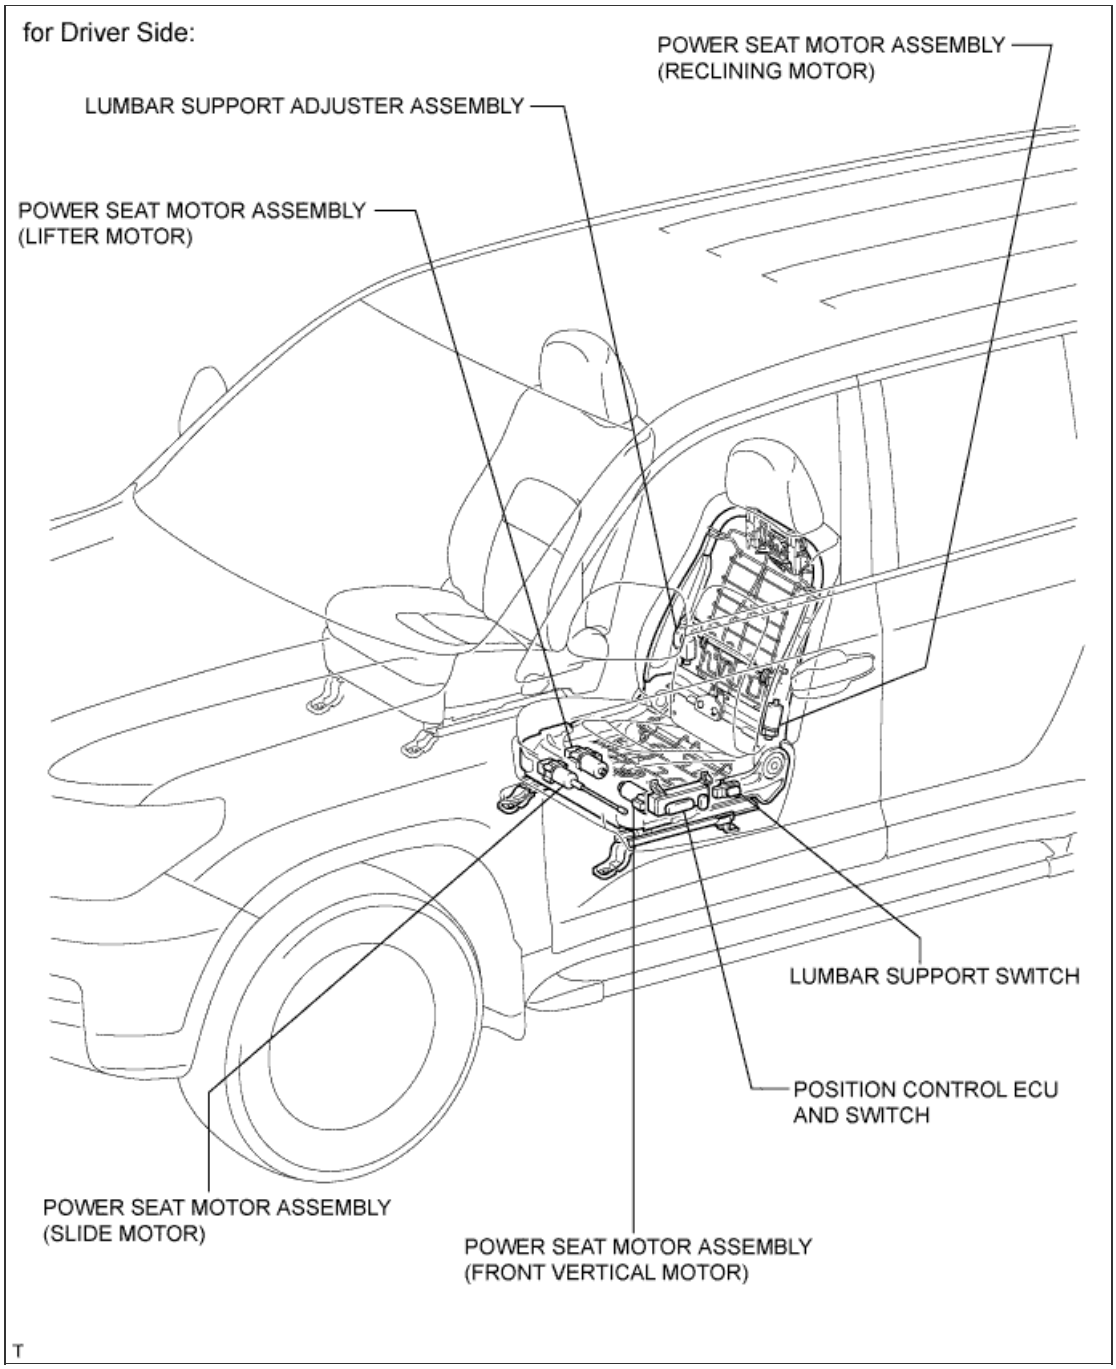
for Driver Side:
POWER SEAT MOTOR ASSEMBLY
(RECLINING MOTOR)
LUMBAR SUPPORT ADJUSTER ASSEMBLY
POWER SEAT MOTOR ASSEMBLY
(LIFTER MOTOR)
LUMBAR SUPPORT SWITCH
POSITION CONTROL ECU
AND SWITCH
POWER SEAT MOTOR ASSEMBLY
(SLIDE MOTOR)
POWER SEAT MOTOR ASSEMBLY
(FRONT VERTICAL MOTOR)
T

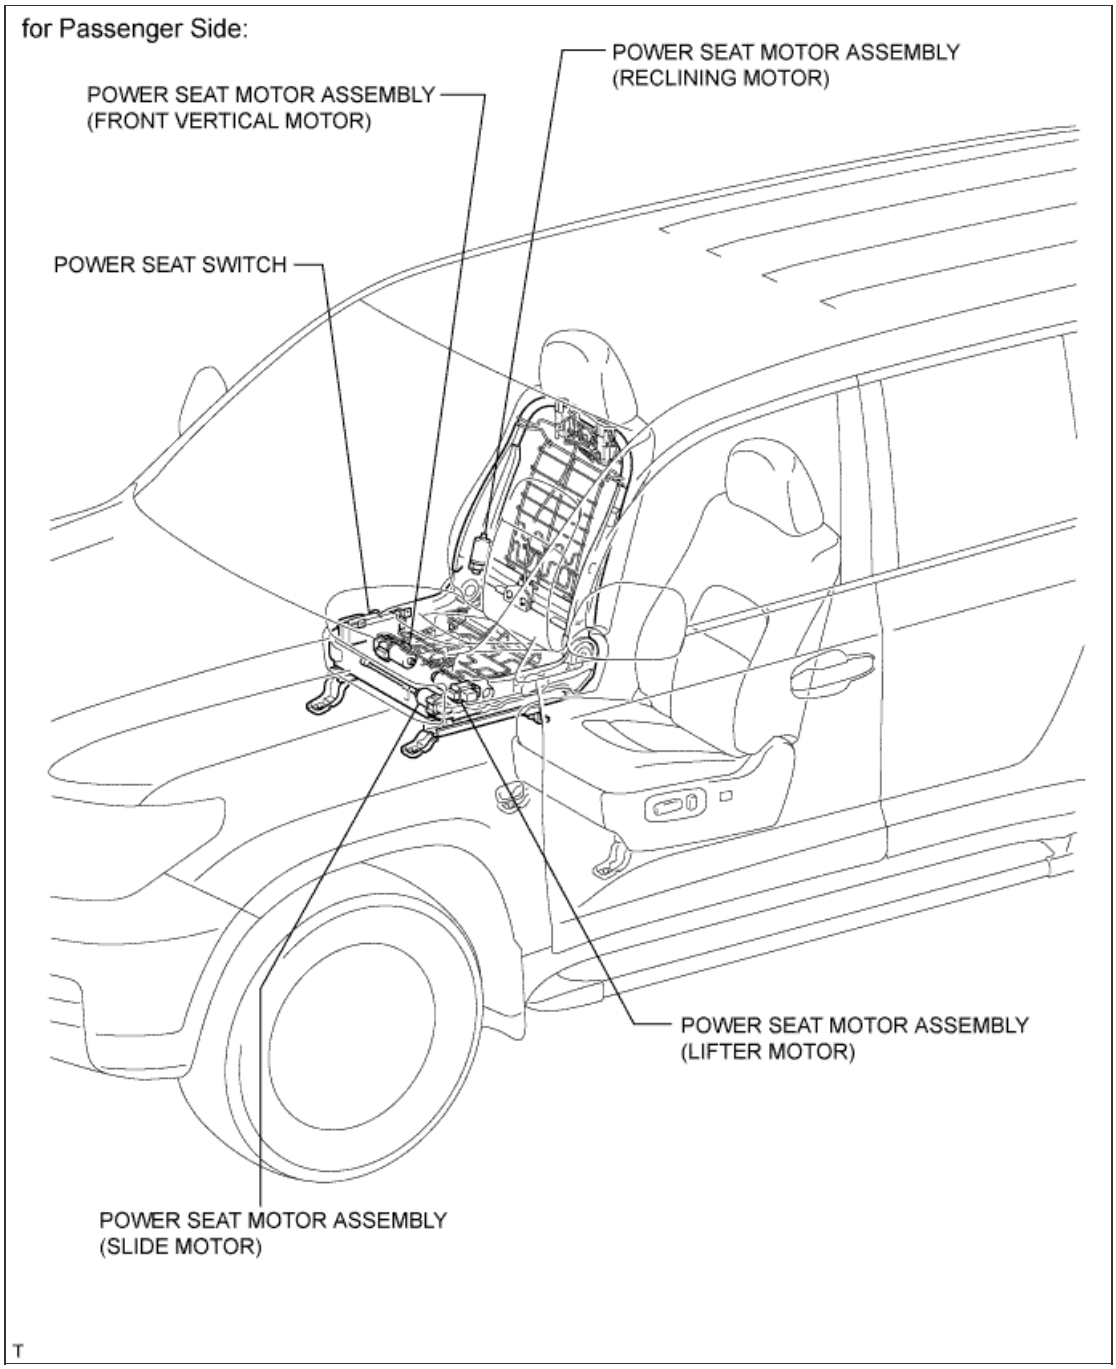
for Passenger Side:
POWER SEAT MOTOR ASSEMBLY
(RECLINING MOTOR)
POWER SEAT MOTOR ASSEMBLY
(FRONT VERTICAL MOTOR)
POWER SEAT SWITCH
POWER SEAT MOTOR ASSEMBLY
(LIFTER MOTOR)
POWER SEAT MOTOR ASSEMBLY
(SLIDE MOTOR)
T


for Preparation Cli re

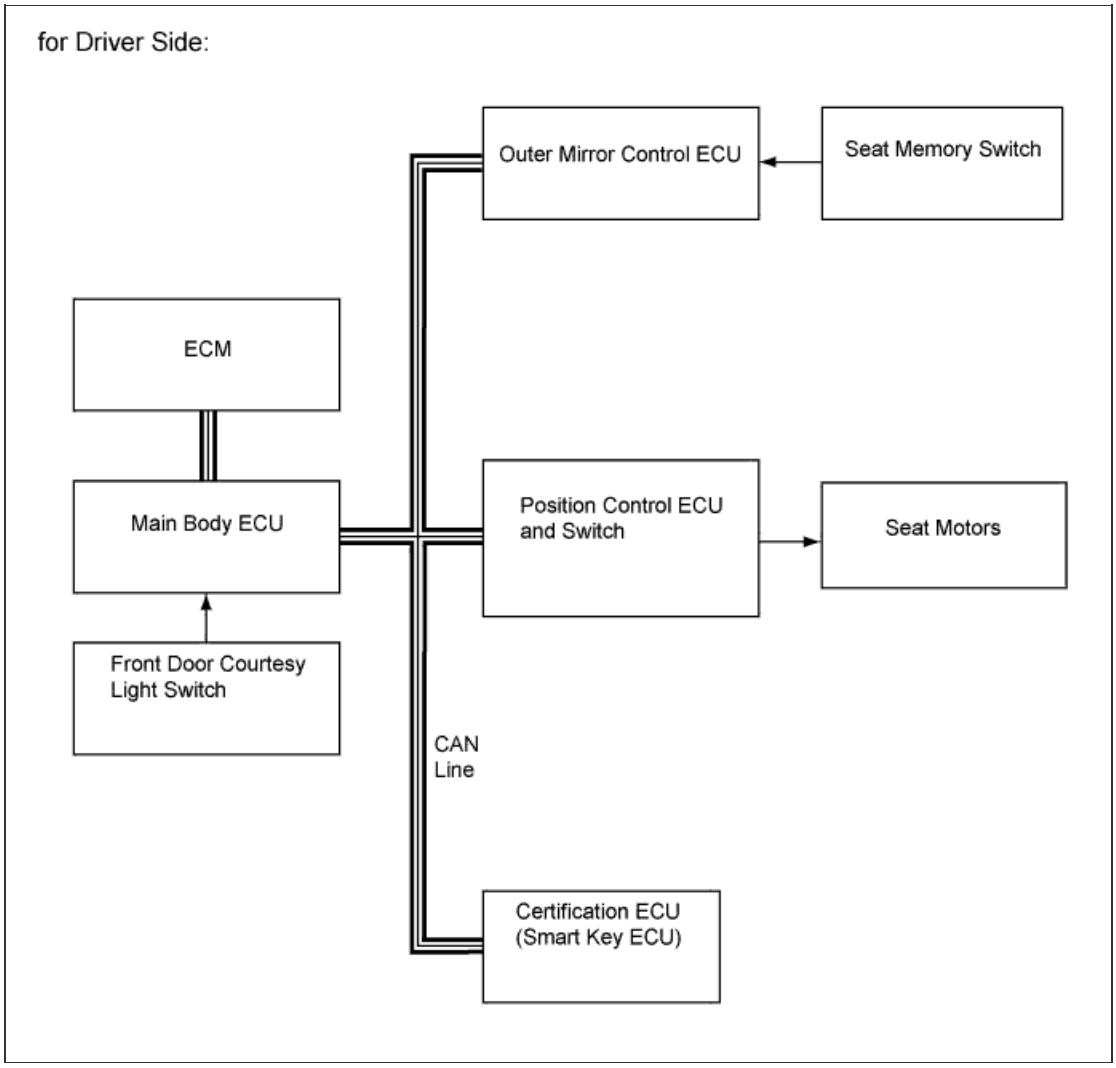

Co ni ation Table

Sender	Receiver	Signal	Line
ECM	Position Control ECU and Switch	Shift position signal	CAN
Outer Mirror Control ECU	Position Control ECU and Switch	• Seat memory switch 1 signal • Seat memory switch 2 signal • Seat memory switch 3 signal	CAN
Main Body ECU	Position Control ECU and Switch	Driver door courtesy light switch signal	CAN
Certification ECU (Smart Key ECU)	Position Control ECU and Switch	• Door lock/unlock signal • Key ID signal	CAN
Position Control ECU and Switch	Outer Mirror Control ECU	• Seat memory switch 1 command signal • Seat memory switch 2 command signal • Seat memory switch 3 command signal	CAN

for Passenger Side:

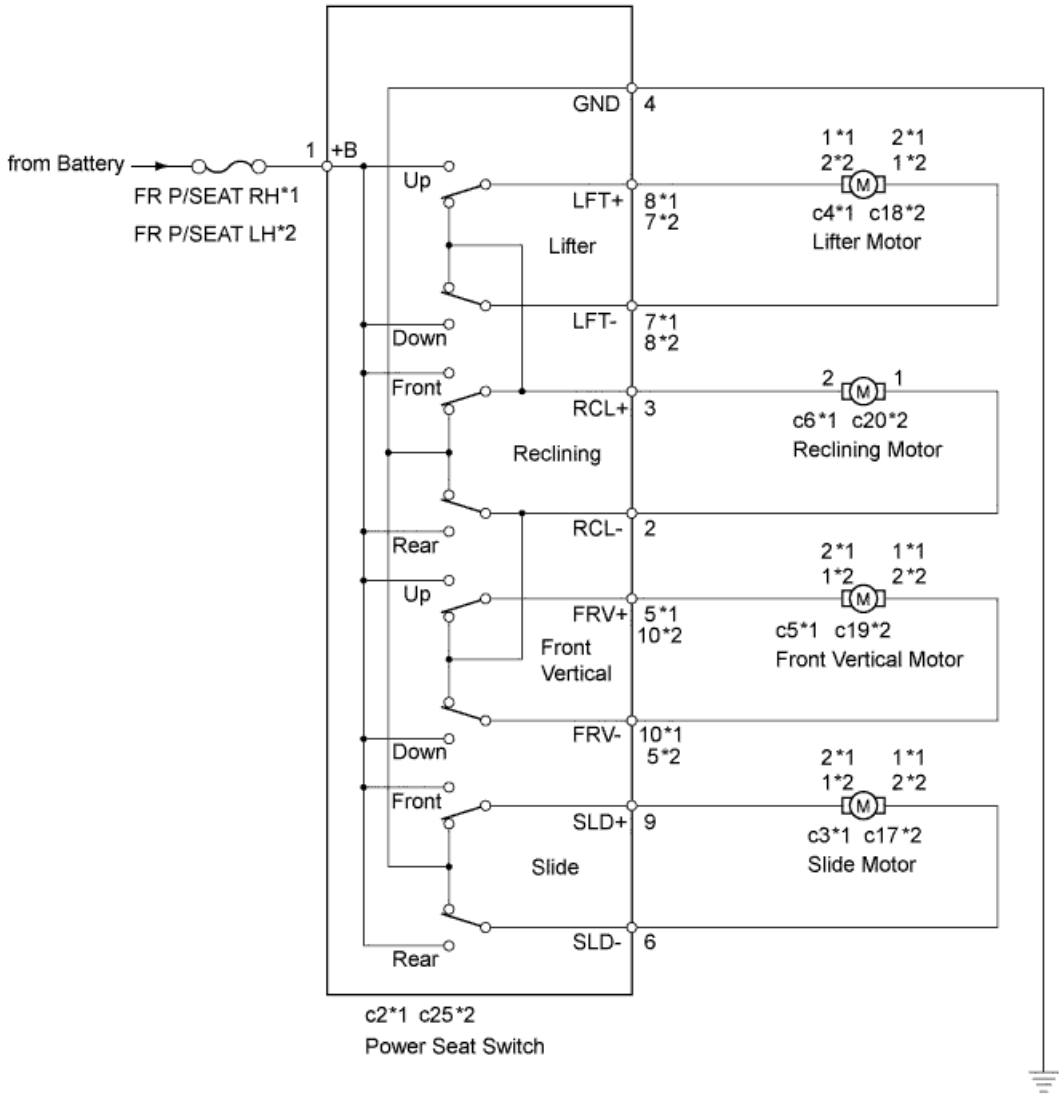

*1: for LHD

*2: for RHD

for Preparation Click here

FRONT POWER SEAT CONTROL SYSTEM DESCRIPTION

- The driver seat is equipped with slide, reclining, lifter, front vertical, and lumbar support adjustment functions.
- The passenger seat is equipped with slide, reclining, lifter, and front vertical adjustment functions.
- The memory call function uses the key ID code of the key to memorize and reproduce the appropriate driving position for each individual who possesses a master key or sub key.

FUNCTION OF MAIN COMPONENT

The following functions are available.

Component	Function
Seat slide motor	Receives signal from front power seat switch, and slides seat forward and rearward.
Seat reclining motor	Receives signal from front power seat switch, and tilts and reclines seat.
Seat front vertical motor	Receives signal from front power seat switch, and raises and lowers front of seat cushion.
Seat lifter motor	Receives signal from front power seat switch, and raises and lowers seat cushion.
Lumbar support adjuster motor	Activated based on signal from lumbar support switch. Adjusts lumbar support.
Seat position sensor	Is built into each seat adjuster and sends position data to front power seat switch so that it can detect seat positions at all times.
Seat control switch	Based on switches operated, seat adjuster signals are input into position control ECU and seat is adjusted accordingly.
Seat memory switch	When seat memory SET switch and seat memory switch are pressed simultaneously, signal is input to outer mirror control ECU and seat position is recorded. Then, when seat memory switch is pressed, signal is input to outer mirror control ECU and seat position changes according to memory.

SYSTEM OPERATION

The front power seat functions which can be adjusted with power seat motors and/or memorized are shown in the chart below.
For the driver side memory function, the seat memory switch operation is first transferred from the outer mirror control ECU to the position control ECU and switch via the CAN communication line. Then, either the seat position is stored in memory or a previously stored seat position is recalled.

Seat Adjustment Function	Driver Seat	Passenger Seat
Fore-and-Aft Slide	Power and memory	Power
Reclining	Power and memory	Power
Front Vertical Height	Power and memory	Power
Lifter	Power and memory	Power
Lumbar support	Power	-

for Preparation Click here

HINT:

- **Use the following procedures to troubleshoot the front power seat control system.**
- *: Use the intelligent tester.

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.INSPECT COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B. Go to CAN COMMUNICATION SYSTEM (for LHD) (Click here)

C. Go to CAN COMMUNICATION SYSTEM (for RHD) (Click here)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. Go to step 6

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Data List / Active Test (Click here)

b. Terminals of ECU (Click here)

c. Operation Check (Click here)

NEXT

6.REPAIR OR REPLACE

NEXT

7.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use the following procedures to troubleshoot the front power seat control system.**
- *: Use the intelligent tester.

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.INSPECT COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B. Go to CAN COMMUNICATION SYSTEM (for LHD) (Click here)

C. Go to CAN COMMUNICATION SYSTEM (for RHD) (Click here)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. Go to step 6

A

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Data List / Active Test (Click here)

b. Terminals of ECU (Click here)

c. Operation Check (Click here)

NEXT

6.REPAIR OR REPLACE

NEXT

7.CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use the following procedures to troubleshoot the front power seat control system.**
- ***: Use the intelligent tester.**

1. EHICLE BROUGHT TO WORKSHOP

NE T

.INSPECT BATTERY OLTAGE

Standard oltage:
11 to 1

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NE T

.INSPECT COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B. Go to CAN COMMUNICATION SYSTEM (for LHD) (Click here)

C. Go to CAN COMMUNICATION SYSTEM (for RHD) (Click here)

A

.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. Go to step 6

A

5.O ERALL ANALYSIS AND TROUBLESHOOTING*

a. Data List / Active Test (Click here)

b. Terminals of ECU (Click here)

c. Operation Check (Click here)

NE T

.REPAIR OR REPLACE

NE T

.CONFIRMATION TEST

NE T

END


for Preparation Click here

CHECK POWER SEAT FUNCTION

a. Check the basic functions.

i. Operate the power seat switches and check to make sure each seat function works:

- Sliding
- Front vertical
- Lifter
- Reclining
- Lumbar support (Driver seat only)

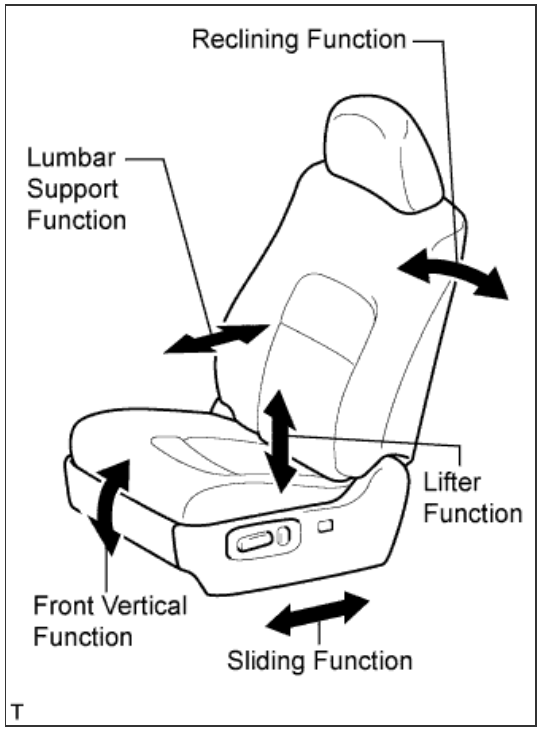

CHECK POWER SEAT MOTOR ASSEMBLY (SLIDING, FRONT VERTICAL, LIFTER, AND RECLINING FUNCTIONS)

a. Check the PTC operation inside the power seat motor.

HINT:

The resistance of the PTC thermistor increases when the power seat switch is held down even after the seat has been moved to the farthest possible position in one direction. If the resistance increases beyond a specified level, the current is shut off to prevent a short circuit.

NOTICE:

- **The inspection sho l e performed with the seat installed in the vehicle.**
- **Perform the 4 steps below to check the f ll range of motion for each power seat f nction.**

i. Choose a power seat function. Operate the power seat switch and move the seat to the farthest possible position in one direction. Keep the seat in that position for approximately 60 seconds.

ii. Operate the power seat switch again and continue to try to move the seat in the same direction as in the previous step. Measure the time until the current is shut off (motor operation sound will stop).

Standard:
4 to 90 seconds

iii. After the current is shut off, release the power seat switch and wait for approximately 60 seconds.

iv. Operate the same power seat switch and move the seat in the opposite direction. Check that the motor operates.

CHECK LUMBAR SUPPORT AD USTER ASSEMBLY

a. Check the PTC operation inside the power seat motor.

NOTICE:

The inspection should be performed with the seat installed in the vehicle.

i. Operate the lumbar support switch and move the lumbar support to either the foremost or rearmost position. Keep the seat in that

position for approximately 60 seconds.

ii. Operate the lumbar support switch again and continue to try to move the lumbar support in the same direction as in the previous step. Measure the time until the current is shut off (motor operation sound will stop).

Standard:
4 to 90 seconds

iii. After the current is shut off, release the lumbar support switch and wait for approximately 60 seconds.

iv. Operate the lumbar support switch and move the seat in the opposite direction. Check that the motor operates.

CHECK MEMORY AND SEAT RESTORING OPERATION

HINT:

The seat position will not be stored if the seat memory SET switch and 2 or more of the seat memory switches (for example, seat memory switch 1 and seat memory switch 2) are pressed simultaneously.

a. Turn the engine switch on (IG) and move the shift lever to P.

b. Move the seat to the foremost and uppermost position using the seat switch.

c. Check that the buzzer sounds for 0.5 seconds and the seat position is memorized when seat memory switch 1 is pressed while the seat memory SET switch is being pressed.

d. Move the seat from the foremost and uppermost position using the seat switch.

e. Check that the buzzer sounds for 0.5 seconds and the seat position is memorized when seat memory switch 2 is pressed while the seat memory SET switch is being pressed.

f. Move the seat to the rearmost and lowermost position using the seat switch.

g. Check that the buzzer sounds for 0.5 seconds and the seat position is memorized when seat memory switch 3 is pressed while the seat memory SET switch is being pressed.

h. Check that the buzzer sounds for 0.1 seconds and the seat automatically moves to the foremost and uppermost position (memorized position) when seat memory switch 1 of the seat memory switch is pressed.

i. Check that the buzzer sounds for 0.1 seconds and the seat automatically moves out of the foremost and uppermost position (memorized position) when seat memory switch 2 of the seat memory switch is pressed.

j. Check that the buzzer sounds for 0.1 seconds and the seat automatically moves to the rearmost and lowermost position (memorized position) when seat memory switch 3 of the seat memory switch is pressed.

k. After the engine switch is turned off and the driver side door is opened, check that the buzzer sounds for 0.1 seconds and the seat automatically moves to the memorized position when seat memory switch 1, seat memory switch 2 or seat memory switch 3 is pressed within 30 seconds.

l. Check that the following procedures clear the memorized seat positions of seat memory switch 1, seat memory switch 2 or seat memory switch 3: slide the seat fully forward or rearward; hold seat memory switch 1, seat memory switch 2 or seat memory switch 3; disconnect the cable from the negative (-) battery terminal; release seat memory switch 1, seat memory switch 2, or seat memory switch 3; and wait for 3 minutes.

CHECK MEMORY CALL FUNCTION

a. Automatic memory call function (automatic wireless memory call function)

i. With a transmitter key recognition code registered:
Perform a wireless door unlock operation and check that opening the driver side door causes: 1) the buzzer to sound for 0.1 seconds, and 2) the front seat, the steering wheel (tilt and telescopic), and outer mirror (RH and LH) to move automatically to the stored positions.

HINT:

- **The registered transmitter key recognition code is recalled a tomatically.**
- **If the front seats are not operated, the b er will not so nd.**

b. Memory registration (transmitter key recognition code registration)

i. With the engine switch off and the driver side door closed, press and hold seat memory switch 1, seat memory switch 2 or seat memory switch 3. The front power seat switch (position control ECU) will enter transmitter key recognition code registration mode to allow a key to be linked to a seat memory position.

ii. When the transmitter lock or unlock switch is pressed, check that the buzzer of the front power seat switch (position control ECU) sounds once (0.5 seconds).

c. Memory deletion (transmitter key recognition code memory deletion)

i. With the engine switch off and the driver side door closed, press and hold SET switch. The front power seat switch (position control ECU) will enter transmitter key recognition code deletion mode.

ii. When the transmitter lock or unlock switch is pressed, check that the buzzer of the front power seat switch (position control ECU) sounds twice (0.1 seconds each time).

MEMORY CALL EMERGENCY STOP FUNCTION

a. While a memory call function is operating, check that performing one of the following will stop the memory call operation: 1) press the seat memory SET switch, seat memory switch 1, seat memory switch 2 or seat memory switch 3, or 2) press the front power seat switch (position control ECU).


for Preparation Click here

CHECK POWER SEAT FUNCTION

a. Check the basic functions.

i. Operate the power seat switches and check to make sure each seat function works:

- Sliding (*1)
- Front vertical (*2)
- Lifter (*3)
- Reclining (*4)
- Lumbar support (Driver seat only) (*5)

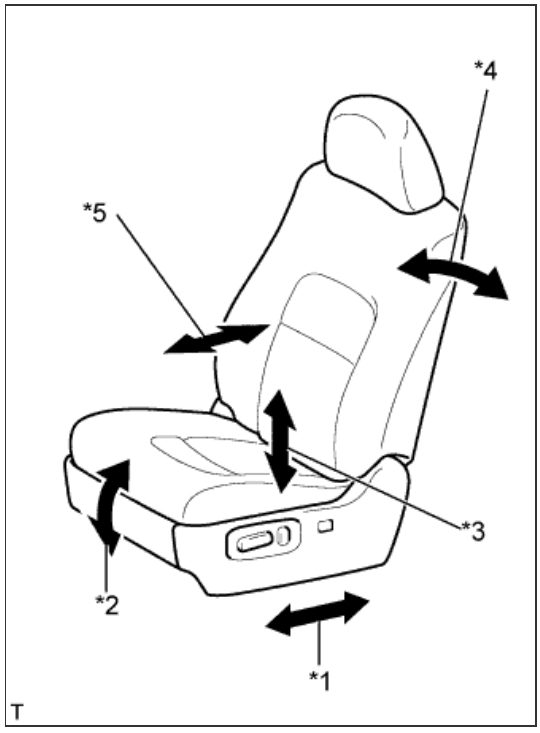

CHECK POWER SEAT MOTOR ASSEMBLY (SLIDING, FRONT VERTICAL, LIFTER, AND RECLINING FUNCTIONS)

a. Check the PTC operation inside the power seat motor.

HINT:

The resistance of the PTC thermistor increases when the power seat switch is held down even after the seat has been moved to the farthest possible position in one direction. If the resistance increases beyond a specified level, the current is shut off to prevent a short circuit.

NOTICE:

- **The inspection sho l e performed with the seat installed in the vehicle.**
- **Perform the 4 steps below to check the f ll range of motion for each power seat f nction.**

i. Choose a power seat function. Operate the power seat switch and move the seat to the farthest possible position in one direction. Keep the seat in that position for approximately 60 seconds.

ii. Operate the power seat switch again and continue to try to move the seat in the same direction as in the previous step. Measure the time until the current is shut off (motor operation sound will stop).

Standard:
4 to 90 seconds

iii. After the current is shut off, release the power seat switch and wait for approximately 60 seconds.

iv. Operate the same power seat switch and move the seat in the opposite direction. Check that the motor operates.

CHECK LUMBAR SUPPORT AD USTER ASSEMBLY

a. Check the PTC operation inside the power seat motor.

NOTICE:

The inspection should be performed with the seat installed in the vehicle.

i. Operate the lumbar support switch and move the lumbar support to either the foremost or rearmost position. Keep the seat in that

position for approximately 60 seconds.

ii. Operate the lumbar support switch again and continue to try to move the lumbar support in the same direction as in the previous step. Measure the time until the current is shut off (motor operation sound will stop).

Standard:
4 to 90 seconds

iii. After the current is shut off, release the lumbar support switch and wait for approximately 60 seconds.

iv. Operate the lumbar support switch and move the seat in the opposite direction. Check that the motor operates.

CHECK MEMORY AND SEAT RESTORING OPERATION

HINT:

The seat position will not be stored if the seat memory SET switch and 2 or more of the seat memory switches (for example, seat memory switch 1 and seat memory switch 2) are pressed simultaneously.

a. Turn the engine switch on (IG).

b. Move the seat to the foremost and uppermost position using the seat switch.

c. Check that the buzzer sounds for 0.5 seconds and the seat position is memorized when seat memory switch 1 is pressed within 3 seconds after the SET switch being pressed.

d. Move the seat from the foremost and uppermost position using the seat switch.

e. Check that the buzzer sounds for 0.5 seconds and the seat position is memorized when seat memory switch 2 is pressed within 3 seconds after the SET switch being pressed.

f. Move the seat to the rearmost and lowermost position using the seat switch.

g. Check that the buzzer sounds for 0.5 seconds and the seat position is memorized when seat memory switch 3 is pressed within 3 seconds after the SET switch being pressed.

h. Check that the buzzer sounds for 0.1 seconds and the seat automatically moves to the foremost and uppermost position (memorized position) when seat memory switch 1 of the seat memory switch is pressed.

i. Check that the buzzer sounds for 0.1 seconds and the seat automatically moves out of the foremost and uppermost position (memorized position) when seat memory switch 2 of the seat memory switch is pressed.

j. Check that the buzzer sounds for 0.1 seconds and the seat automatically moves to the rearmost and lowermost position (memorized position) when seat memory switch 3 of the seat memory switch is pressed.

k. Turn the engine switch off and open the driver door. Check that the buzzer sounds for 0.1 seconds and the seat automatically moves to the memorized position by pressing seat memory switch 1, seat memory switch 2 or seat memory switch 3 within 180 seconds after the engine switch is turned off.

l. Turn the engine switch off and close the driver door. Check that the buzzer sounds for 0.1 seconds and the seat automatically moves to the memorized position by pressing seat memory switch 1, seat memory switch 2 or seat memory switch 3 within 60 seconds after the engine switch is turned off.

m. Operate the front vertical function of the power seat switch to tilt the seat down 3 times; Within 10 seconds after operating the front vertical function of the power seat switch, operate the lifter function of the power seat switch to tilt up and the reclining function of the power seat switch to recline the seat simultaneously, and hold both switches for 10 seconds.

CHECK MEMORY CALL FUNCTION

a. Automatic memory call function (automatic wireless memory call function)

i. With a transmitter key recognition code registered:
Perform a wireless door unlock operation and check that opening the driver side door causes: 1) the buzzer to sound for 0.1 seconds, and 2) the front seat, the steering wheel (tilt and telescopic), and outer mirror (RH and LH) to move automatically to the stored positions.

HINT:

- **The registered transmitter key recognition code is recalled a tomatically.**
- **If the front seats are not operated, the b er will not so nd.**

b. Memory registration (transmitter key recognition code registration)

i. With the driver door closed, turn the engine switch from ON to OFF, then press and hold seat memory switch 1, seat memory switch 2 or seat memory switch 3. The front power seat switch (position control ECU) will enter transmitter key recognition code registration mode to allow a key to be linked to a seat memory position.

ii. hen the transmitter lock or unlock switch is pressed, check that the buzzer of the front power seat switch (position control ECU) sounds once (0.5 seconds).

c. Memory deletion (transmitter key recognition code memory deletion)

i. With the driver door closed, turn the engine switch from ON to OFF, then press and hold SET switch. The front power seat switch (position control ECU) will enter transmitter key recognition code deletion mode.

ii. When the transmitter lock or unlock switch is pressed, check that the buzzer of the front power seat switch (position control ECU) sounds twice (0.1 seconds each time).

MEMORY CALL EMERGENCY STOP FUNCTION

a. While a memory call function is operating, check that performing one of the following will stop the memory call operation: 1) press the seat memory SET switch, seat memory switch 1, seat memory switch 2 or seat memory switch 3, or 2) press the front power seat switch (position control ECU).

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to the system before inspecting the suspected areas below.**

Front Power Seat Control System (for river Side)

Symptom	Suspected Area	See page
Front power seat does not operate with front power seat switch.	Front ower Seat does not perate with Front ower Seat Switch	Click here
ne or more power seat motors do not operate.	ne or more ower Seat Motors do not perate	Click here
ower seat position is not memorized.	ower Seat osition is not Memorized	Click here
ower seat does not return to memorized position.	osition control ECU and switch	-
ireless transmitter memory function does not operate.	ireless Transmitter Memory Function does not perate	Click here
ireless-linked return function does not operate.	ireless-linked eturn Function does not perate	Click here

Front Power Seat Control System (for Passenger Side)

Symptom	Suspected Area	See page
Front power seat does not operate (slide, front vertical, lifter, reclining).	F E SA T fuse (for LHD)	-
	F P SEAT LH fuse (for	-
	Power seat switch	Click here
	Harness or connector	-
Only slide operation function does not operate.	Power seat switch	Click here
	Slide motor	Click here
	Harness or connector	-
Only front vertical operation function does not operate.	Power seat switch	Click here
	Front vertical motor	Click here
	Harness or connector	-
Only lifter operation function does not operate.	Power seat switch	Click here
	Lifter motor	Click here
	Harness or connector	-
Only reclining operation function does not operate.	Power seat switch	Click here
	Reclining motor	Click here
	Harness or connector	-

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to the system before inspecting the suspected areas below.**

Front Power Seat Control System (for river Side)


Symptom	Suspected Area	See page
Front power seat does not operate with front power seat switch.	Front Power Seat does not Operate with Front Power Seat Switch	Click here
One or more power seat motors do not operate.	One or more Power Seat Motors do not Operate	Click here
Power seat position is not memorized.	Power Seat Position is not Memorized	Click here
Power seat does not return to memorized position.	Position control ECU and switch	-
Wireless transmitter memory function does not operate.	Wireless Transmitter Memory Function does not Operate	Click here
Wireless-linked return function does not operate.	Wireless-linked Return Function does not Operate	Click here

Front Power Seat Control System (for Passenger Side)

Symptom	Suspected Area	See page
Front power seat does not operate (slide, front vertical, lifter, reclining).	FR P/SEAT RH fuse (for LHD)	-
	FR P/SEAT LH fuse (for RHD)	-
	Power seat switch	Click here
	Harness or connector	-
Only slide operation function does not operate.	Power seat switch	Click here
	Slide motor	Click here
	Harness or connector	-
Only front vertical operation function does not operate.	Power seat switch	Click here
	Front vertical motor	Click here
	Harness or connector	-
Only lifter operation function does not operate.	Power seat switch	Click here
	Lifter motor	Click here
	Harness or connector	-
Only reclining operation function does not operate.	Power seat switch	Click here
	Reclining motor	Click here
	Harness or connector	-

for Preparation Click here

CHECK POSITION CONTROL ECU AN SWITCH (for LH)

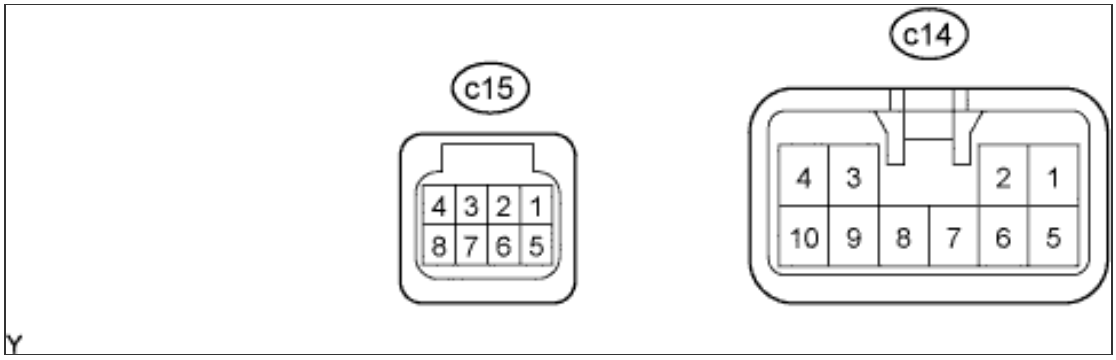

a. Disconnect the c14 and c15 switch connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
c14-1 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
c14-5 (+B) - c14-1 (GND)	L - W-B	Power source	Always	11 to 14 V
c15-4 (IG) - c14-1 (GND)	G - W-B	Engine switch signal	Engine switch off	Below 1 V
			Engine switch on (IG)	11 to 14 V
c15-8 (SYSB) - c14-1 (GND)	R - W-B	System power source	Always	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side.


c. Reconnect the c14 and c15 switch connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
c14-2 (SLD+) - c14-1 (GND)	B - W-B	Sliding motor signal (forward)	Slide switch off	Below 1 V
			Slide switch front on	11 to 14 V
c14-3 (SLD-) - c14-1 (GND)	P - W-B	Sliding motor signal (rearward)	Slide switch off	Below 1 V
			Slide switch rear on	11 to 14 V
c14-6 (FRV+) - c14-1 (GND)	R - W-B	Front vertical motor signal (upward)	Front vertical switch off	Below 1 V
			Front vertical switch up on	11 to 14 V
c14-4 (FRV-) - c14-1 (GND)	LG - W-B	Front vertical motor signal (downward)	Front vertical switch off	Below 1 V
			Front vertical switch down on	11 to 14 V
c14-7 (LFT+) - c14-1 (GND)	G - W-B	Lifter motor signal (upward)	Lifter switch off	Below 1 V
			Lifter switch up on	11 to 14 V
c14-9 (LFT-) - c14-1 (GND)	W - W-B	Lifter motor signal (downward)	Lifter switch off	Below 1 V
			Lifter switch down on	11 to 14 V
c14-8 (RCL+) - c14-1 (GND)	GR - W-B	Reclining motor signal (forward)	Reclining switch off	Below 1 V
			Reclining switch front on	11 to 14 V
c14-10 (RCL-) - c14-1 (GND)	Y - W-B	Reclining motor signal (rearward)	Reclining switch off	Below 1 V
			Reclining switch rear on	11 to 14 V

If the result is not as specified, the position control ECU and switch may have a malfunction.

CHECK POSITION CONTROL ECU AN SWITCH (for RH)

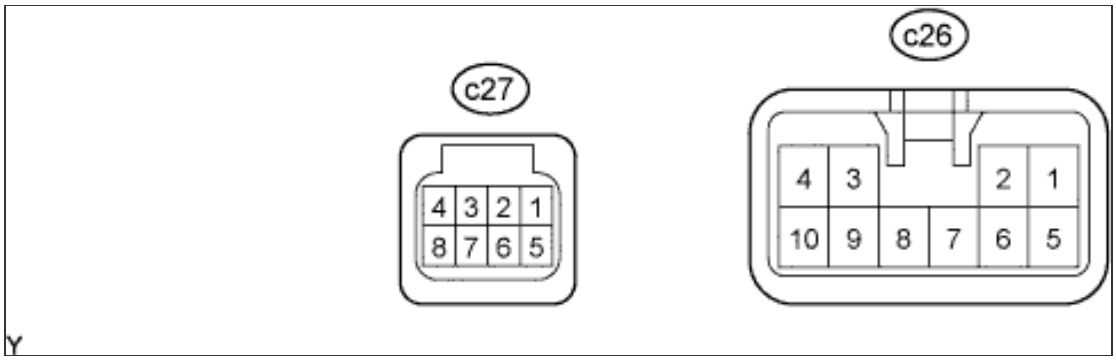

a. Disconnect the c2 and c27 switch connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
c2 -1 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
c26-5 (+B) - c26-1 (GND)	L - W-B	Power source	Always	11 to 14 V
c27-4 (IG) - c26-1 (GND)	G - W-B	Engine switch signal	Engine switch off	Below 1 V
			Engine switch on (IG)	11 to 14 V
c27-8 (SYSB) - c26-1 (GND)	R - W-B	System power source	Always	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side.


c. Reconnect the c26 and c27 switch connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
c26-2 (SLD+) - c26-1 (GND)	B - W-B	Sliding motor signal (forward)	Slide switch off	Below 1 V
			Slide switch front on	11 to 14 V
c26-3 (SLD-) - c26-1 (GND)	P - W-B	Sliding motor signal (rearward)	Slide switch off	Below 1 V
			Slide switch rear on	11 to 14 V
c26-6 (FRV+) - c26-1 (GND)	R - W-B	Front vertical motor signal (upward)	Front vertical switch off	Below 1 V
			Front vertical switch up on	11 to 14 V
c26-4 (FRV-) - c26-1 (GND)	LG - W-B	Front vertical motor signal (downward)	Front vertical switch off	Below 1 V
			Front vertical switch down on	11 to 14 V
c26-7 (LFT+) - c26-1 (GND)	G - W-B	Lifter motor signal (upward)	Lifter switch off	Below 1 V
			Lifter switch up on	11 to 14 V
c26-9 (LFT-) - c26-1 (GND)	W - W-B	Lifter motor signal (downward)	Lifter switch off	Below 1 V
			Lifter switch down on	11 to 14 V
c26-8 (RCL+) - c26-1 (GND)	GR - W-B	Reclining motor signal (forward)	Reclining switch off	Below 1 V
			Reclining switch front on	11 to 14 V
c26-10 (RCL-) - c26-1 (GND)	Y - W-B	Reclining motor signal (rearward)	Reclining switch off	Below 1 V
			Reclining switch rear on	11 to 14 V

If the result is not as specified, the position control ECU and switch may have a malfunction.

CHECK OUTER MIRROR CONTROL ECU (for LH)

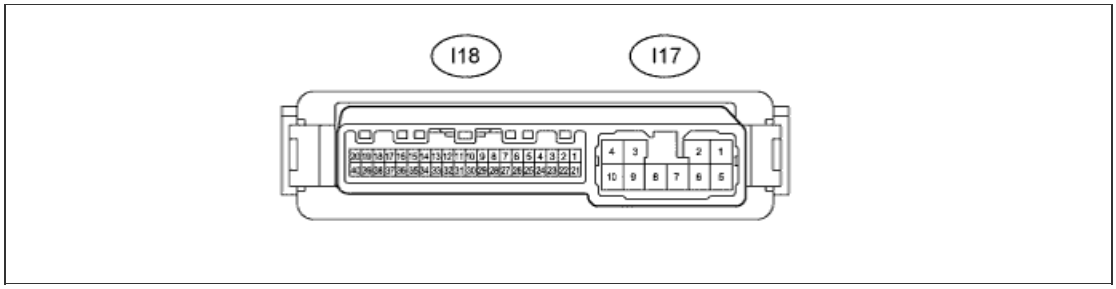

a. Disconnect the I17 and I18 ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
I18-10 (MSWE) - I17-9 (GND)	BR - W-B	Ground for seat memory switch	Always	Below 1 Ω
I17-9 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
I17-3 (B) - I17-9 (GND)	R - W-B	Battery (ECU power source)	Always	11 to 14 V
I17-4 (ACC) - I17-9 (GND)	GR - W-B	Engine switch (ACC) power source supply	Engine switch off	Below 1 V
			Engine switch on (ACC)	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side.


c. Reconnect the I17 and I18 ECU connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
I18-6 (M3) - I18-10 (MSWE)	B - BR	Seat memory switch 3 signal for seat memory switch	Seat memory switch 3 on	11 to 14 V
			Seat memory switch 3 off	Below 1 V
I18-7 (M2) - I18-10 (MSWE)	W - BR	Seat memory switch 2 signal for seat memory switch	Seat memory switch 2 on	11 to 14 V
			Seat memory switch 2 off	Below 1 V
I18-8 (M1) - I18-10 (MSWE)	G - BR	Seat memory switch 1 signal for seat memory switch	Seat memory switch 1 on	11 to 14 V
			Seat memory switch 1 off	Below 1 V
I18-9 (MM) - I18-10 (MSWE)	B - BR	Seat memory SET switch signal for seat memory switch	Seat memory SET switch on	11 to 14 V
			Seat memory SET switch off	Below 1 V

If the result is not as specified, the outer mirror control ECU may have a malfunction.

CHECK OUTER MIRROR CONTROL ECU (for RH)

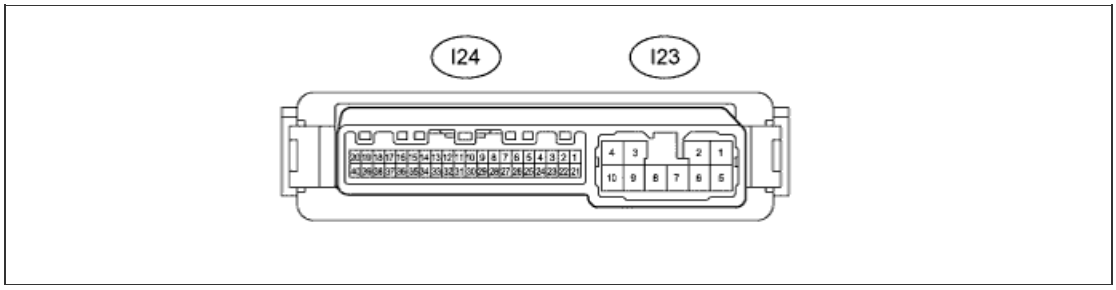

a. Disconnect the I23 and I24 ECU connectors.

b. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
I24-10 (MSWE) - I23-9 (GND)	BR - W-B	Ground for seat memory switch	Always	Below 1 Ω
I23-9 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
I23-3 (B) - I23-9 (GND)	R - W-B	Battery (ECU power source)	Always	11 to 14 V
I23-4 (ACC) - I23-9 (GND)	GR - W-B	Engine switch (ACC) power source supply	Engine switch off	Below 1 V
			Engine switch on (ACC)	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the I23 and I24 ECU connectors.

d. Measure the voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
I24-6 (M3) - I24-10 (MSWE)	B - BR	Seat memory switch 3 signal for seat memory switch	Seat memory switch 3 on	11 to 14 V
			Seat memory switch 3 off	Below 1 V
I24-7 (M2) - I24-10 (MSWE)	W - BR	Seat memory switch 2 signal for seat memory switch	Seat memory switch 2 on	11 to 14 V
			Seat memory switch 2 off	Below 1 V
I24-8 (M1) - I24-10 (MSWE)	G - BR	Seat memory switch 1 signal for seat memory switch	Seat memory switch 1 on	11 to 14 V
			Seat memory switch 1 off	Below 1 V
I24-9 (MM) - I24-10 (MSWE)	B - BR	Seat memory SET switch signal for seat memory switch	Seat memory SET switch on	11 to 14 V
			Seat memory SET switch off	Below 1 V

If the result is not as specified, the outer mirror control ECU may have a malfunction.

for Preparation Cli re

DATA LIST

HINT:

Using the intelligent tester to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Turn the engine switch off.

b. Connect the intelligent tester to the DLC3.

Turn the engine switch on (IG).

Turn the intelligent tester on.

e Enter the following menus: Body / (desired system) / Data List.

According to the display on the intelligent tester, read the Data List.

Mirror

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Driver Side SET Mem SW	Driver side seat memory SET switch / ON or OFF	ON: Driver side seat memory SET switch on OFF: Driver side seat memory SET switch off	-
Driver Side Memory SW 1	Driver side seat memory switch 1 / ON or OFF	ON: Driver side seat memory switch 1 on OFF: Driver side seat memory switch 1 off	-
Driver Side Memory SW 2	Driver side seat memory switch 2 / ON or OFF	ON: Driver side seat memory switch 2 on OFF: Driver side seat memory switch 2 off	-
Driver Side Memory SW 3	Driver side seat memory switch 3 / ON or OFF	ON: Driver side seat memory switch 3 on OFF: Driver side seat memory switch 3 off	-

Driver Seat

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Reclining Rear	Reclining switch signal (Rearward) / ON or OFF	ON: Reclining switch (Rearward) on OFF: Reclining switch (Rearward) off	-
Reclining Front	Reclining switch signal (Forward) / ON or OFF	ON: Reclining switch (Forward) on OFF: Reclining switch (Forward) off	-
Front ertical Down	Front vertical switch signal (Downward) / ON or OFF	ON: Front vertical switch (Downward) on OFF: Front vertical switch (Downward) off	-
Front ertical Up	Front vertical switch signal (Upward) / ON or OFF	ON: Front vertical switch (Upward) on OFF: Front vertical switch (Upward) off	-
Lifter Switch Down	Lifter switch signal (Downward) / ON or OFF	ON: Lifter switch (Downward) on OFF: Lifter switch (Downward) off	-
		ON: Lifter switch (Upward) on	

Lifter Switch Up	Lifter switch signal (Upward) / ON or OFF	OFF: Lifter switch (Upward) off	-
Slide Rear	Sliding switch signal (Rearward) / ON or OFF	ON: Sliding switch (Rearward) on OFF: Sliding switch (Rearward) off	-
Slide Front	Sliding switch signal (Forward) / ON or OFF	ON: Sliding switch (Forward) on OFF: Sliding switch (Forward) off	-
SET Switch	Seat memory SET switch signal / ON or OFF	ON: Seat memory SET switch on OFF: Seat memory SET switch off	-
M1 Switch	Seat memory switch 1 signal / ON or OFF	ON: Seat memory switch 1 on OFF: Seat memory switch 1 off	-
M2 Switch	Seat memory switch 2 signal / ON or OFF	ON: Seat memory switch 2 on OFF: Seat memory switch 2 off	-
M3 Switch	Seat memory switch 3 signal / ON or OFF	ON: Seat memory switch 3 on OFF: Seat memory switch 3 off	-
Seat Memory No1	Seat position memorized with seat memory switch 1 / Mem or Not Mem	Mem: Memorized Not Mem: Not memorized	-
Seat Memory No2	Seat position memorized with seat memory switch 2 / Mem or Not Mem	Mem: Memorized Not Mem: Not memorized	-
Seat Memory No3	Seat position memorized with seat memory switch 3 / Mem or Not Mem	Mem: Memorized Not Mem: Not memorized	-
Ignition Switch	Communication state of engine switch signal / ON or OFF	ON: Engine switch on (IG) signal is received OFF: Engine switch off signal is not received	-
Key Switch	Engine switch status (IG) / ON or OFF	ON: Engine switch on (IG) OFF: Engine switch off	-
Key Code Conf	Recognition code is registered / ON or OFF	ON: One more recognition codes registered OFF: No recognition code registered	-
D-Door Courtesy	Door courtesy switch signal / ON or OFF	ON: Driver side door open OFF: Driver side door closed	-
P Switch	Shift lever position P signal / ON or OFF	ON: Shift lever in P OFF: Shift lever not in P	-
Parking Brake SW	Parking brake switch status / ON or OFF	ON: Parking brake operated OFF: Parking brake released	-
ehicle Speed	ehicle speed data / Min.: 0 km/h (0 mph), Ma .: 255 km/h (158 mph)	Actual vehicle speed	-
Power oltage	Power supply for driver seat ECU / MIN: 0 , MA : 19.89	Within range from 11 to 14	-
Slide Position	Seat sliding position / MIN: 409 , MA :	Within range from 409 to	-
Reclining Position	Seatback position / MIN: 409 , MA :	Within range from 409 to	-
Front ertical Position	Seat front vertical position / MIN: 409 MA :	Within range from 409 to	-
Lifter Position	Seat lifter position / MIN: 409 MA :	Within range from 409 to	-
Slide Pos Mem No1	Seat sliding position memorized with seat memory switch 1 / MIN: 409 , MA :	Within range from 409 to	-
Reclining Pos Mem No1	Seatback position memorized with seat memory switch 1 / MIN: 409 , MA :	Within range from 409 to	-
Frnt rtcl Pos Mem No1	Front vertical position memorized with seat memory switch 1 / MIN: 409 , MA :	Within range from 409 to	-
Lifter Pos Mem No1	Lifter position memorized with seat memory switch 1 / MIN: 409 , MA :	Within range from 409 to	-
Slide Pos Mem No2	Seat sliding position memorized with seat memory switch 2 / MIN: 409 , MA :	Within range from 409 to	-
Reclining Pos Mem No2	Seatback position memorized with seat memory switch 2 / MIN: 409 , MA :	Within range from 409 to	-
Frnt rtcl Pos Mem No2	Front vertical position memorized with seat memory switch 2 / MIN: 409 , MA :	Within range from 409 to	-
Lifter Pos Mem No2	Lifter position memorized with seat memory switch 2 / MIN: 409 , MA :	Within range from 409 to	-
Slide Pos Mem	Seat sliding position memorized with seat memory switch 3 /		

No3	MIN: 409 , MA :	Within range from 409 to	-
Reclining Pos Mem No3	Seatback position memorized with seat memory switch 3 / MIN: 409 , MA :	Within range from 409 to	-
Frnt rtcl Pos Mem No3	Front vertical position memorized with seat memory switch 3 / MIN: 409 , MA :	Within range from 409 to	-
Lifter Pos Mem No3	Lifter position memorized with seat memory switch 3 / MIN: 409 , MA :	Within range from 409 to	-

ACTI E TEST

HINT:

Using the intelligent tester to perform Active Tests allows relays, S s, actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. Performing Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Turn the engine switch off.

b. Connect the intelligent tester to the DLC3.

Turn the engine switch on (IG).

Turn the intelligent tester on.

e Enter the following menus: Body / (desired system) / Active Test.

According to the display on the intelligent tester, perform the Active Test.

Driver Seat


Tester Display	Test Part	Control Range	Diagnostic Note
Seat Reclining	Seat reclining operation	Front / OFF / Rear	-
Front ertical Operation	Seat front vertical operation	Up / OFF / Down	-
Lifter Operation	Seat lifter operation	Up / OFF / Down	-
Seat Slide Operation	Seat sliding operation	Front / OFF / Rear	-
Buzzer	Buzzer operation	ON / OFF	-

for Preparation Click here

ESCRIPTION

When a signal is input into the position control ECU, the ECU manages the signals received from the front power seat switch LH, and operates each motor. When 2 or more signals are input, the motors only operate when the signals are from the slide switch and reclining switch.

WIRING AGRAM

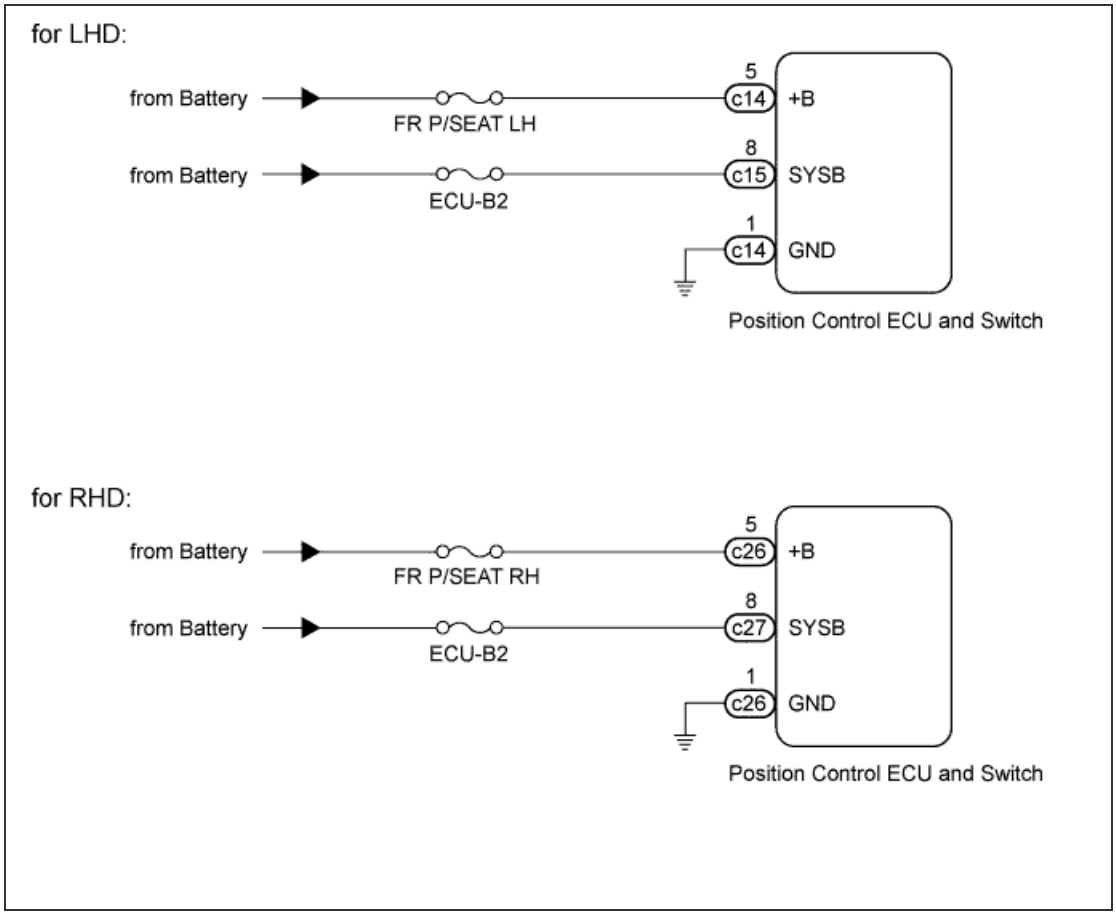

INSPECTION PROCE RE

1.INSPECT FUSE (FR P/SEAT LH, FR P/SEAT RH, ECU-B2)

a. Remove the FR P/SEAT LH*1, FR P/SEAT RH*2 and ECU-B2 fuses from the main ody ECU.

HINT:

*1: for LHD

*2: for RHD

b. Measure the resistance according to the value(s) in the ta le elow.

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
FR P/SEAT LH fuse	Always	Below 1 Ω
ECU-B2 fuse	Always	Below 1 Ω

for RH

Tester Connection	Condition	Specified Condition
FR P/SEAT RH fuse	Always	Below 1 Ω
ECU-B2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AN CONNECTOR (POSITION CONTROL ECU AN SWITCH - BATTERY AN BO YGROUN)


a. Disconnect the c14*1, c15*1 or c26*2, c27*2 switch connectors.

HINT:

*1: for LHD

*2: for RHD

b. Measure the voltage according to the value(s) in the ta le elow.

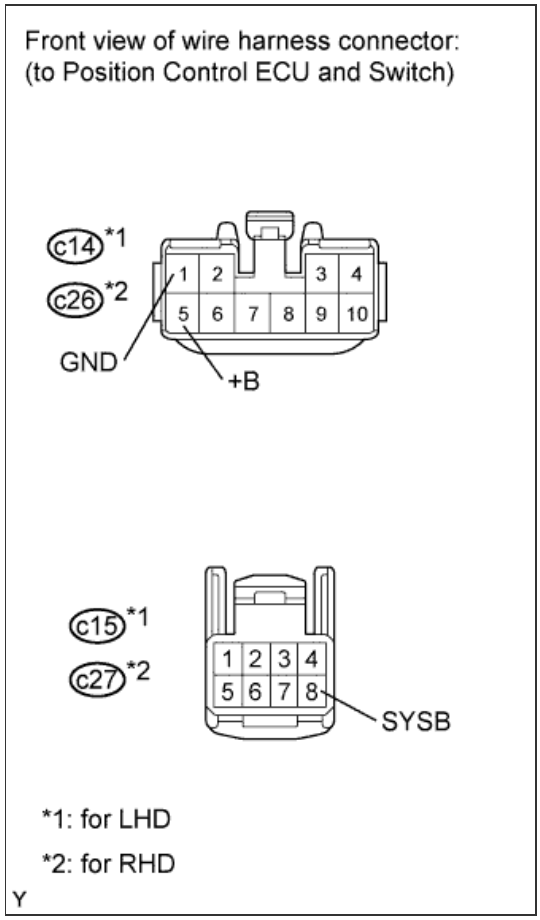

Standard Voltage:

for LH

Tester Connection	Condition	Specified Condition
c14-5 (+B) - Body ground	Always	11 to 14 V
c15- (S SB) - Body ground	Always	11 to 14 V

for RH

Tester Connection	Condition	Specified Condition
c26-5 (+B) - Body ground	Always	11 to 14 V
c27- (S SB) - Body ground	Always	11 to 14 V

c. Measure the resistance according to the value(s) in the ta le elow.

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
c14-1 (GND) - Body ground	Always	Below 1 Ω

for RH

Tester Connection	Condition	Specified Condition
c26-1 (GND) - Body ground	Always	Below 1 Ω

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE POSITION CONTROL ECU AN SWITCH (Click here)

for Preparation Click here

ESCRIPTION

When a signal is input into the position control ECU, the ECU manages the signals received from the front power seat switch LH, and operates each motor. When 2 or more signals are input, the motors only operate when the signals are from the slide switch and reclining switch.

WIRING AGRAM

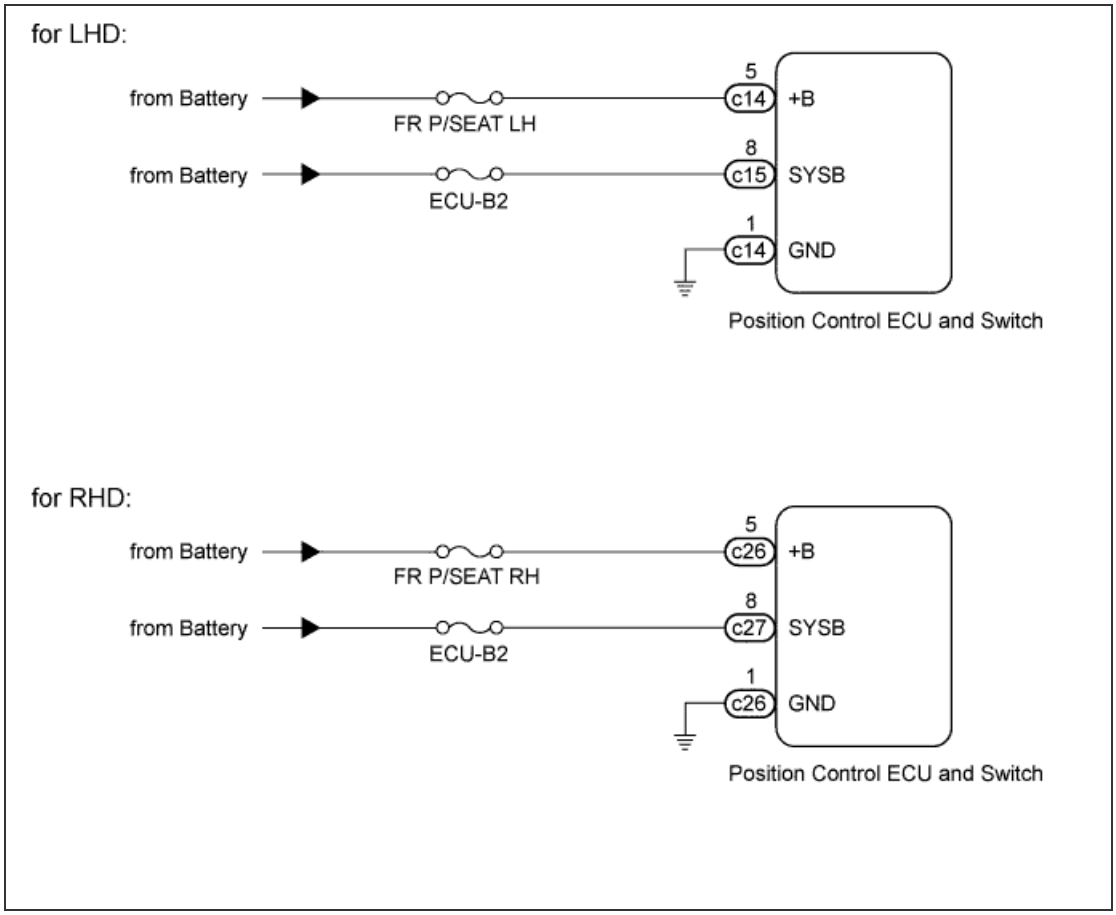

INSPECTION PROCE RE

1.INSPECT FUSE (FR P/SEAT LH, FR P/SEAT RH, ECU-B2)

a. Remove the FR P/SEAT LH*1, FR P/SEAT RH*2 and ECU-B2 fuses from the main ody ECU.

HINT:

*1: for LHD

*2: for RHD

b. Measure the resistance according to the value(s) in the ta le elow.

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
FR P/SEAT LH fuse	Always	Below 1 Ω
ECU-B2 fuse	Always	Below 1 Ω

for RH

Tester Connection	Condition	Specified Condition
FR P/SEAT RH fuse	Always	Below 1 Ω
ECU-B2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AN CONNECTOR (POSITION CONTROL ECU AN SWITCH - BATTERY AN BO YGROUN)


a. Disconnect the c14*1, c15*1 or c26*2, c27*2 switch connectors.

HINT:

*1: for LHD

*2: for RHD

b. Measure the voltage according to the value(s) in the ta le elow.

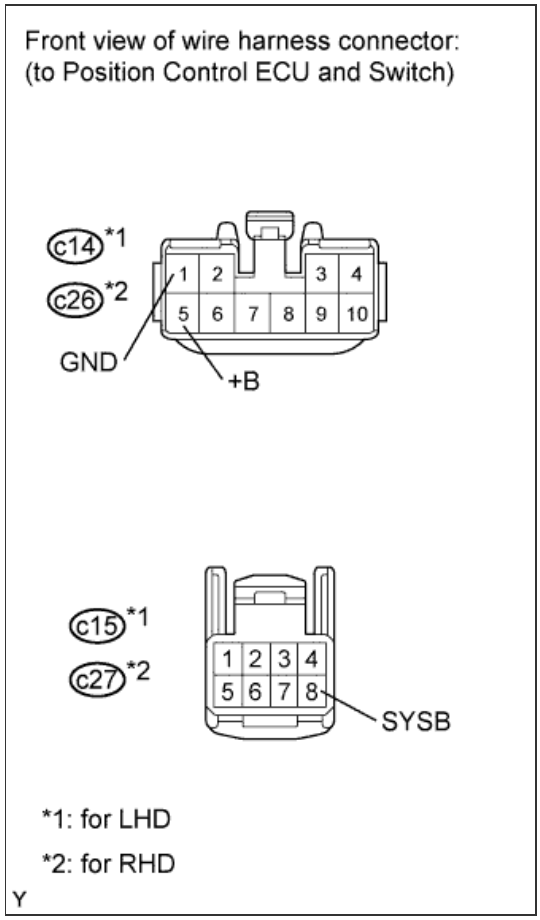

Standard Voltage:

for LH

Tester Connection	Condition	Specified Condition
c14-5 (+B) - Body ground	Always	11 to 14 V
c15- (S SB) - Body ground	Always	11 to 14 V

for RH

Tester Connection	Condition	Specified Condition
c26-5 (+B) - Body ground	Always	11 to 14 V
c27- (S SB) - Body ground	Always	11 to 14 V

c. Measure the resistance according to the value(s) in the ta le elow.

Standard Resistance:

for LH

Tester Connection	Condition	Specified Condition
c14-1 (GND) - Body ground	Always	Below 1 Ω

for RH

Tester Connection	Condition	Specified Condition
c26-1 (GND) - Body ground	Always	Below 1 Ω

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE POSITION CONTROL ECU AN SWITCH (Click here)

for Preparation Click here

DESCRIPTION

When the front power seat switch is operated, a command signal is sent to the position control ECU. The position control ECU then controls the appropriate seat motor as needed. The position control ECU is designed so that a malfunction of the seat memory system will not interfere with manual seat control.

WIRING DIAGRAM

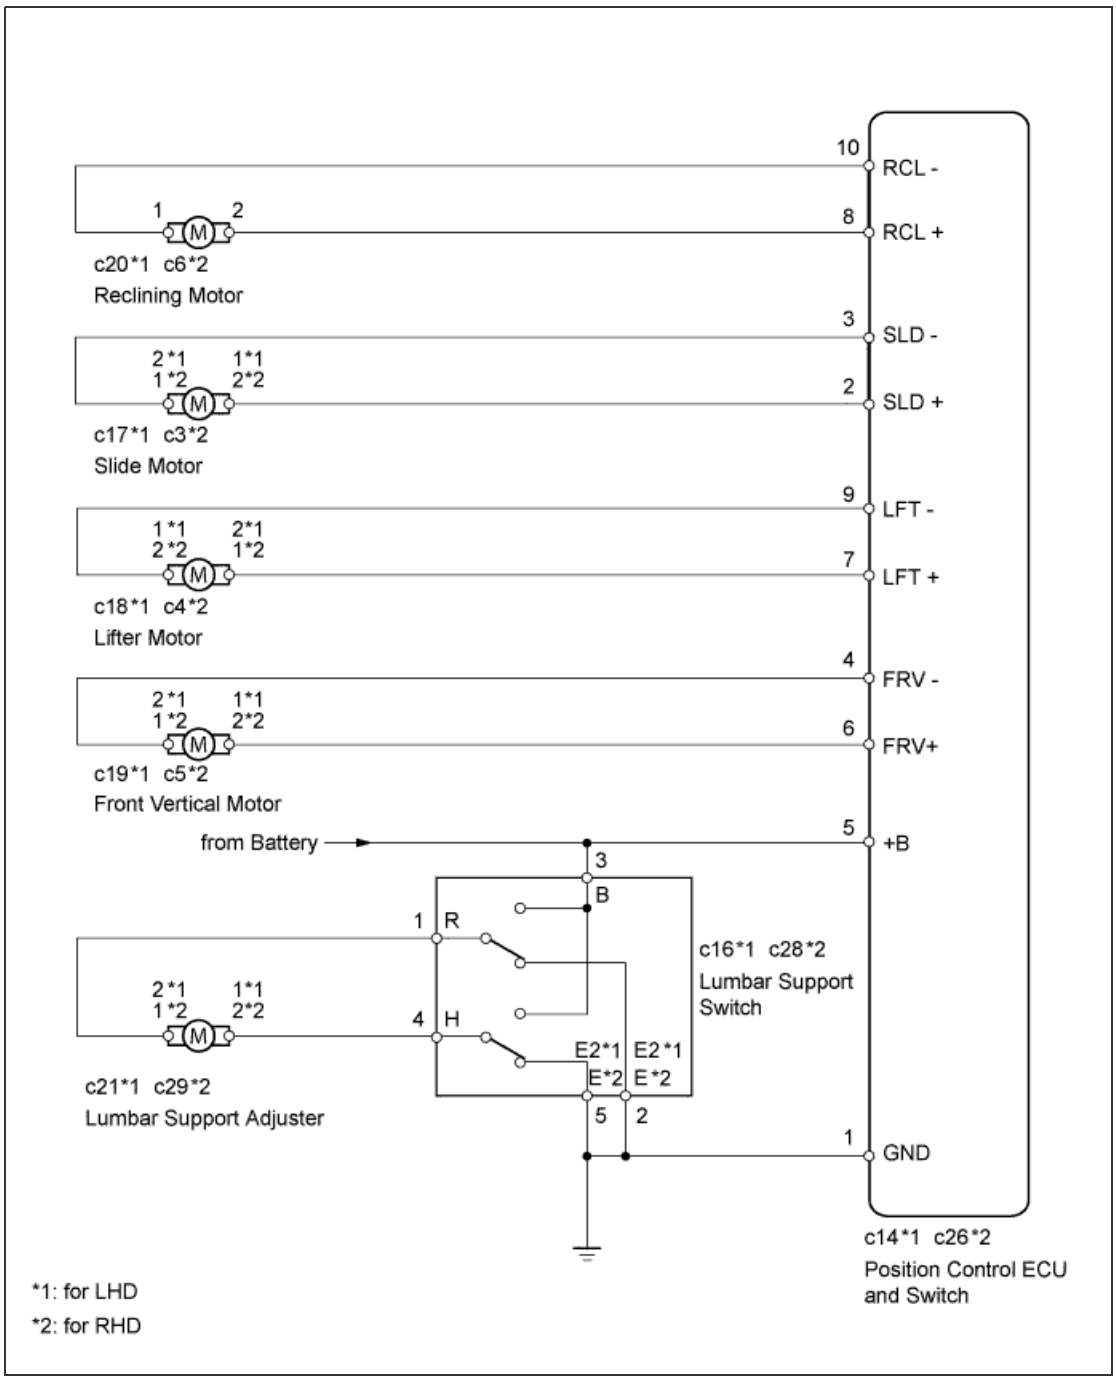

INSPECTION PROCEDURE

1.CHECK FRONT POWER SEAT OPERATION

a. Check that each function of the power seat operates normally by using the front power seat switches.

Result

Result	Proceed to

All front power seat switch operations are malfunctioning except lumbar support switch operation	A
Only lumbar support switch operation is malfunctioning	B

B → Go to step 6

A

2.READ VALUE USING INTELLIGENT TESTER (FRONT POWER SEAT SWITCH)

a. Using the intelligent tester, read the Data List.

Driver Seat

Item	Measurement Item/Display (Range)	Normal Condition	Diagnostic Note
Reclining Rear	Reclining switch signal (Rearward) / ON or OFF	ON: Reclining switch (Rearward) on OFF: Reclining switch (Rearward) off	-
Reclining Front	Reclining switch signal (Forward) / ON or OFF	ON: Reclining switch (Forward) on OFF: Reclining switch (Forward) off	-
Front Vertical Down	Front vertical switch signal (Downward) / ON or OFF	ON: Front vertical switch (Downward) on OFF: Front vertical switch (Downward) off	-
Front Vertical Up	Front vertical switch signal (Upward) / ON or OFF	ON: Front vertical switch (Upward) on OFF: Front vertical switch (Upward) off	-
Lifter Switch Down	Lifter switch signal (Downward) / ON or OFF	ON: Lifter switch (Downward) on OFF: Lifter switch (Downward) off	-
Lifter Switch Up	Lifter switch signal (Upward) / ON or OFF	ON: Lifter switch (Upward) on OFF: Lifter switch (Upward) off	-
Slide Rear	Sliding switch signal (Rearward) / ON or OFF	ON: Sliding switch (Rearward) on OFF: Sliding switch (Rearward) off	-
Slide Front	Sliding switch signal (Forward) / ON or OFF	ON: Sliding switch (Forward) on OFF: Sliding switch (Forward) off	-

OK:
On intelligent tester screen, each item changes between ON and OFF according to above chart.

NG → REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

OK

3.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (FRONT POWER SEAT MOTOR)

a. Using the intelligent tester, perform the Active Test.

Driver Seat

Tester Display	Test Part	Control Range	Diagnostic Note
Seat Reclining	Seat reclining operation	Front / OFF / Rear	-
Front Vertical Operation	Seat front vertical operation	Up / OFF / Down	-
Lifter Operation	Seat lifter operation	Up / OFF / Down	-
Seat Slide Operation	Seat sliding operation	Front / OFF / Rear	-

OK:
The power seat motors operate normally.

NG → Go to step 4

OK

REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

4.INSPECT FRONT SEAT ASSEMBLY (FRONT POWER SEAT MOTOR)


a. Remove the front seat assembly LH (for LHD) (Click here).

b. Remove the front seat assembly RH (for RHD) (Click here).

c. Check operation of the slide motor.

i. Check if the seat moves smoothly when the battery is connected to the slide motor connector terminals.

Component without harness connected:
(Slide Motor)

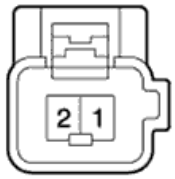

OK:

for LHD

Measurement Condition	Specified Condition
Battery positive (+) → 1 Battery negative (-) → 2	Forward
Battery positive (+) → 2 Battery negative (-) → 1	Rearward


for RHD

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Forward
Battery positive (+) → 1 Battery negative (-) → 2	Rearward

d. Check operation of the front vertical motor.

i. Check if the seat moves smoothly when the battery is connected to the front vertical motor connector terminals.

Component without harness connected:
(Front Vertical Motor)

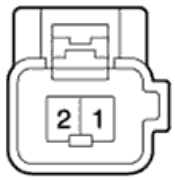

OK:

for LHD

Measurement Condition	Specified Condition
Battery positive (+) → 1 Battery negative (-) → 2	Upward
Battery positive (+) → 2 Battery negative (-) → 1	Downward


for RHD

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Upward
Battery positive (+) → 1 Battery negative (-) → 2	Downward

e. Check operation of the lifter motor.

i. Check if the seat moves smoothly when the battery is connected to the lifter motor connector terminals.

Component without harness connected:
(Lifter Motor)

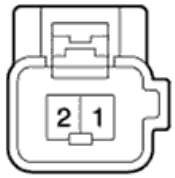

OK:

for LHD

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Upward
Battery positive (+) → 1 Battery negative (-) → 2	Downward


for RHD

Measurement Condition	Specified Condition
Battery positive (+) → 1 Battery negative (-) → 2	Upward
Battery positive (+) → 2 Battery negative (-) → 1	Downward

f. Check operation of the reclining motor.

i. Check if the seat moves smoothly when the battery is connected to the reclining motor connector terminals.

Component without harness connected:
(Reclining Motor)

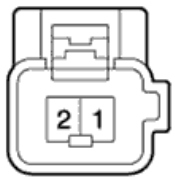

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Forward
Battery positive (+) → 1 Battery negative (-) → 2	Rearward

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B	REPLACE FRONT SEAT ASSEMBLY LH (Click here)
C	REPLACE FRONT SEAT ASSEMBLY RH

A

5.CHECK HARNESS AND CONNECTOR (POSITION CONTROL ECU AND SWITCH - POWER SEAT MOTOR)

a. Disconnect the c14 or c26 switch connector.

b. Disconnect the c1 , c1 , c19 , c2 or c , c4 , c , c6 motor connectors.


HINT:

: for LHD


: for RHD

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Position Control ECU and Switch)

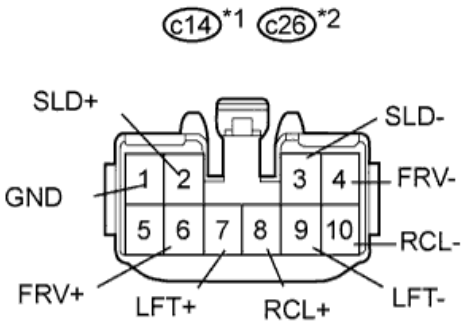

Front view of wire harness connector:
(to Power Seat Motor)

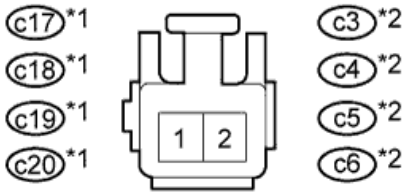

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD

Tester Connection	Condition	Specified Condition
c14-3 (SLD-) - c17-2	Always	Below 1 Ω
c14-2 (SLD+) - c17-1	Always	Below 1 Ω
c14-4 (FRV-) - c19-2	Always	Below 1 Ω
c14-6 (FRV+) - c19-1	Always	Below 1 Ω
c14-9 (LFT-) - c18-1	Always	Below 1 Ω
c14-7 (LFT+) - c18-2	Always	Below 1 Ω
c14-10 (RCL-) - c20-1	Always	Below 1 Ω
c14-8 (RCL+) - c20-2	Always	Below 1 Ω
c14-1 (GND) - Body ground	Always	Below 1 Ω
c14-3 (SLD-) or c17-2 - Body ground	Always	10 kΩ or higher
c14-2 (SLD+) or c17-1 - Body ground	Always	10 kΩ or higher
c14-4 (FRV-) or c19-2 - Body ground	Always	10 kΩ or higher
c14-6 (FRV+) or c19-1 - Body ground	Always	10 kΩ or higher
c14-9 (LFT-) or c18-1 - Body ground	Always	10 kΩ or higher

c14- (LFT) or c1 -2 - Body ground	Always	1 kΩ or higher
c14-1 (RCL-) or c2 -1 - Body ground	Always	1 kΩ or higher
c14- (RCL) or c2 -2 - Body ground	Always	1 kΩ or higher

for RHD

Tester Connection	Condition	Specified Condition
c26- (SLD-) - c -1	Always	Below 1 Ω
c26-2 (SLD) - c -2	Always	Below 1 Ω
c26-4 (FRV-) - c -1	Always	Below 1 Ω
c26-6 (FRV) - c -2	Always	Below 1 Ω
c26-9 (LFT-) - c4-2	Always	Below 1 Ω
c26- (LFT) - c4-1	Always	Below 1 Ω
c26-1 (RCL-) - c6-1	Always	Below 1 Ω
c26- (RCL) - c6-2	Always	Below 1 Ω
c26-1 (GND) - Body ground	Always	Below 1 Ω
c26- (SLD-) or c -1 - Body ground	Always	1 kΩ or higher
c26-2 (SLD) or c -2 - Body ground	Always	1 kΩ or higher
c26-4 (FRV-) or c -1 - Body ground	Always	1 kΩ or higher
c26-6 (FRV) or c -2 - Body ground	Always	1 kΩ or higher
c26-9 (LFT-) or c4-2 - Body ground	Always	1 kΩ or higher
c26- (LFT) or c4-1 - Body ground	Always	1 kΩ or higher
c26-1 (RCL-) or c6-1 - Body ground	Always	1 kΩ or higher
c26- (RCL) or c6-2 - Body ground	Always	1 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE POSITION CONTROL ECU AND SWITCH (**Click here**)


6.INSPECT LUMBAR SUPPORT SWITCH

a. Remove the lumbar support switch (Click here).

b. Measure the resistance according to the value(s) in the table below.


for LHD:

Component without harness connected:
(Lumbar Support Switch)

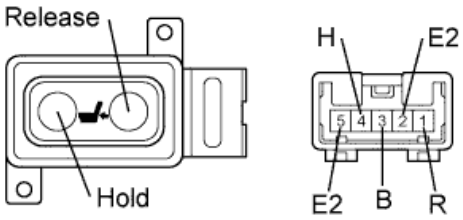

for RHD:

Component without harness connected:
(Lumbar Support Switch)

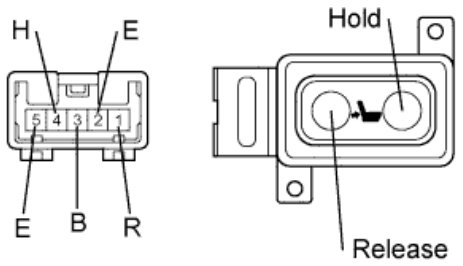

Standard Resistance:

for LHD

Tester Connection	Switch Condition	Specified Condition
(B) - 4 (H)	Hold	Below 1 Ω
1 (R) - 2 (E2)		
4 (H) - (E2)	Off	
1 (R) - 2 (E2)		
4 (H) - (E2)	Release	
1 (R) - (B)		

for RHD

Tester Connection	Switch Condition	Specified Condition
(B) - 4 (H)	Hold	Below 1 Ω
1 (R) - 2 (E)		
4 (H) - (E)	Off	
1 (R) - 2 (E)		
4 (H) - (E)	Release	
1 (R) - (B)		

NG → REPLACE LUMBAR SUPPORT SWITCH (Click here)


OK

7.INSPECT LUMBAR SUPPORT ADJUSTER ASSEMBLY

a. Remove the lumbar support adjuster (Click here).

b. Check operation of the lumbar support adjuster.

i. Check that the lumbar support adjuster moves smoothly when the battery is connected to the lumbar support adjuster motor connector terminals.

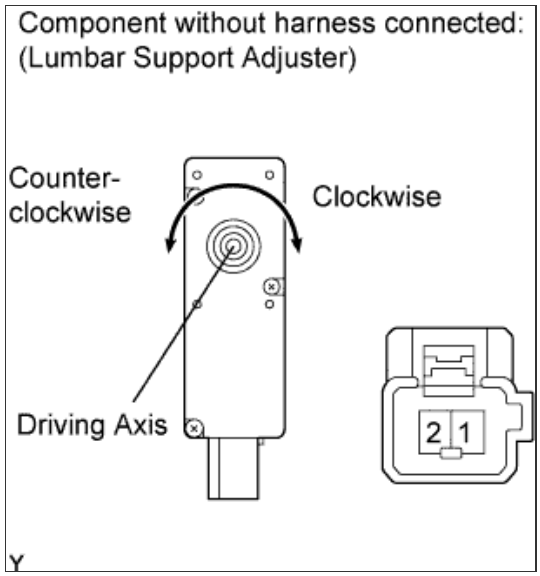

OK:

for LHD

Measurement Condition	Specified Condition
Battery positive (+) → 1 Battery negative (-) → 2	Clockwise
Battery positive (+) → 2 Battery negative (-) → 1	Counterclockwise

for RHD

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Clockwise
Battery positive (+) → 1 Battery negative (-) → 2	Counterclockwise

NG → REPLACE LUMBAR SUPPORT ADJUSTER ASSEMBLY (Click here)

OK

8.CHECK HARNESS AND CONNECTOR (LUMBAR SUPPORT SWITCH - BATTERY AND BODY GROUND)


a. Disconnect the c16*1 or c28*2 switch connector.

HINT:

*1: for LHD

*2: for RHD

b. Measure the voltage according to the value(s) in the table below.

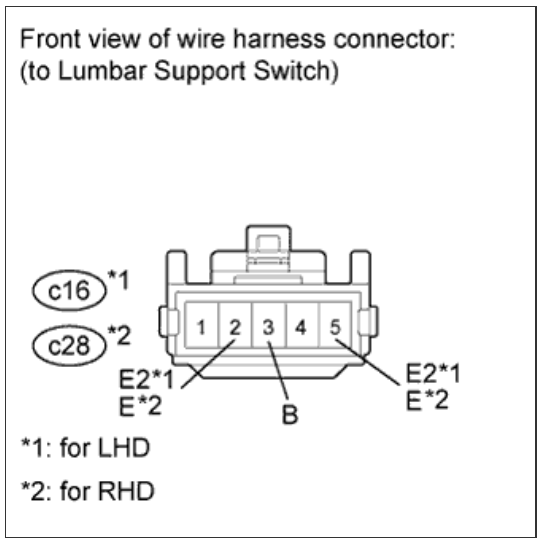

Standard Voltage:

for LHD

Tester Connection	Condition	Specified Condition
c16-3 (B) - Body ground	Always	11 to 14 V

for RHD

Tester Connection	Condition	Specified Condition
c2 - (B) - Body ground	Always	11 to 14 V

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

for LHD

Tester Connection	Condition	Specified Condition
c16-5 (E2) - Body ground	Always	Below 1 Ω
c16-2 (E2) - Body ground		

for RHD

Tester Connection	Condition	Specified Condition
c28-5 (E) - Body ground	Always	Below 1 Ω
c28-2 (E) - Body ground		

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPAIR OR REPLACE HARNESS OR CONNECTOR (LUMBAR SUPPORT SWITCH - LUMBAR SUPPORT ADJUSTER ASSEMBLY)

for Preparation Click here

DESCRIPTION

When the front power seat switch is operated, a command signal is sent to the position control ECU. The position control ECU then controls the appropriate seat motor as needed. The position control ECU is designed so that a malfunction of the seat memory system will not interfere with manual seat control.

WIRING DIAGRAM

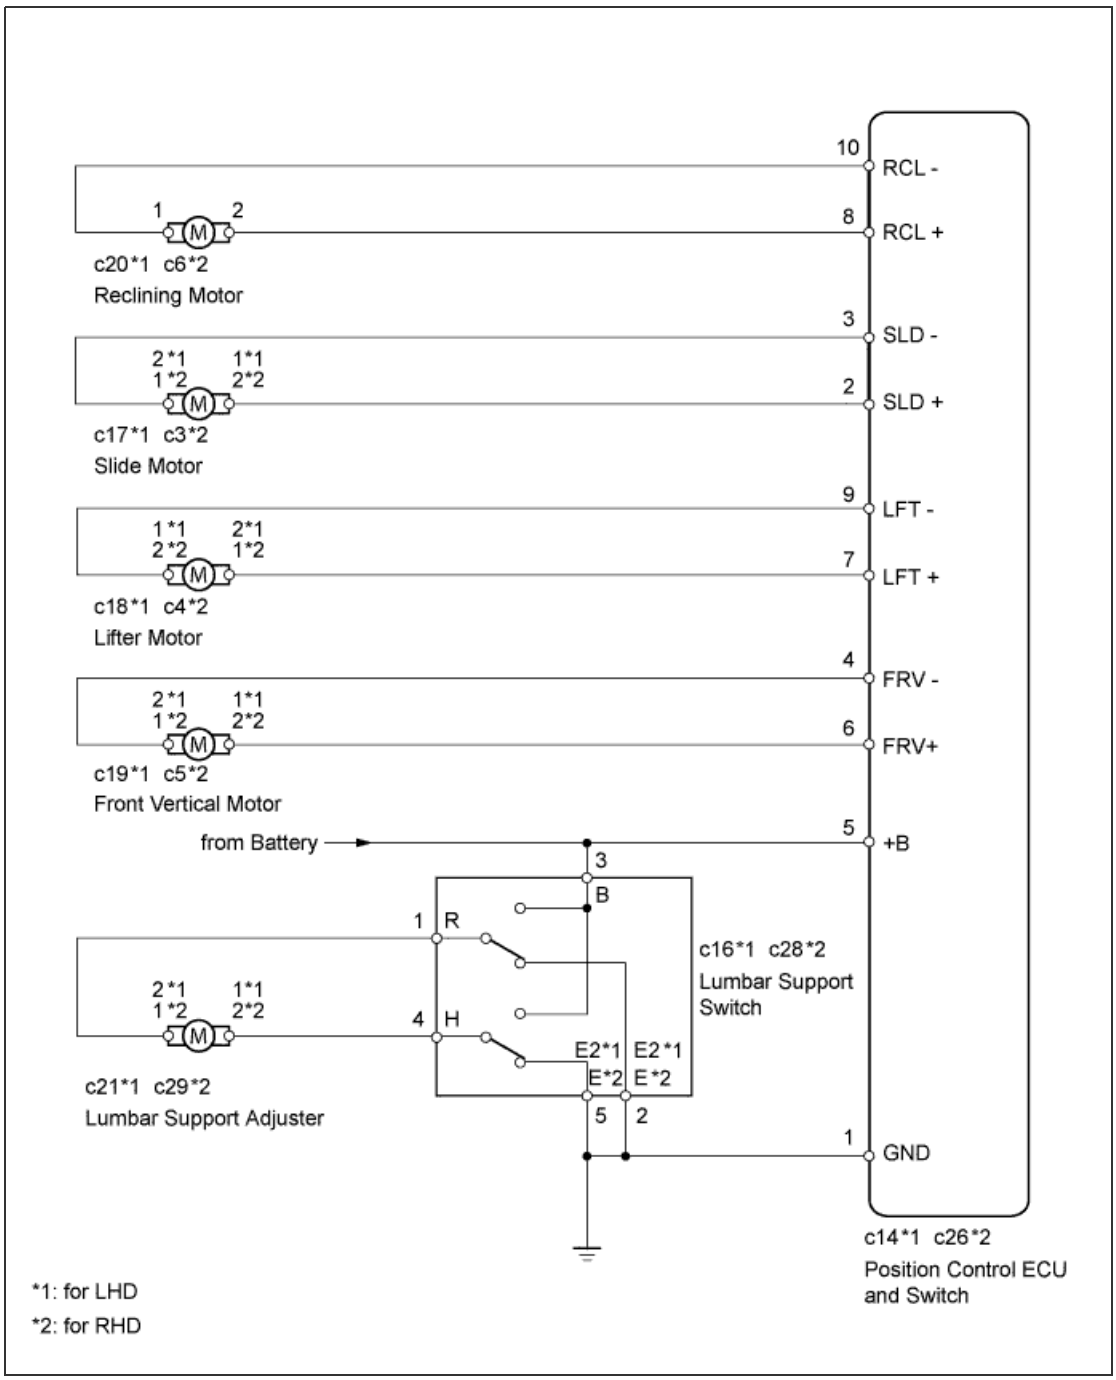

INSPECTION PROCEDURE

1.CHECK FRONT POWER SEAT OPERATION

a. Check that each function of the power seat operates normally by using the front power seat switches.

Result

Result	Proceed to

All front power seat switch operations are malfunctioning except lumbar support switch operation	A
Only lumbar support switch operation is malfunctioning	B

B → Go to step 6

A

2.READ VALUE USING INTELLIGENT TESTER (FRONT POWER SEAT SWITCH)

a. Using the intelligent tester, read the Data List.

Driver Seat

Item	Measurement Item/Display (Range)	Normal Condition	Diagnostic Note
Reclining Rear	Reclining switch signal (Rearward) / ON or OFF	ON: Reclining switch (Rearward) on OFF: Reclining switch (Rearward) off	-
Reclining Front	Reclining switch signal (Forward) / ON or OFF	ON: Reclining switch (Forward) on OFF: Reclining switch (Forward) off	-
Front Vertical Down	Front vertical switch signal (Downward) / ON or OFF	ON: Front vertical switch (Downward) on OFF: Front vertical switch (Downward) off	-
Front Vertical Up	Front vertical switch signal (Upward) / ON or OFF	ON: Front vertical switch (Upward) on OFF: Front vertical switch (Upward) off	-
Lifter Switch Down	Lifter switch signal (Downward) / ON or OFF	ON: Lifter switch (Downward) on OFF: Lifter switch (Downward) off	-
Lifter Switch Up	Lifter switch signal (Upward) / ON or OFF	ON: Lifter switch (Upward) on OFF: Lifter switch (Upward) off	-
Slide Rear	Sliding switch signal (Rearward) / ON or OFF	ON: Sliding switch (Rearward) on OFF: Sliding switch (Rearward) off	-
Slide Front	Sliding switch signal (Forward) / ON or OFF	ON: Sliding switch (Forward) on OFF: Sliding switch (Forward) off	-

OK:
On intelligent tester screen, each item changes between ON and OFF according to above chart.

NG → REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

OK

3.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (FRONT POWER SEAT MOTOR)

a. Using the intelligent tester, perform the Active Test.

Driver Seat

Tester Display	Test Part	Control Range	Diagnostic Note
Seat Reclining	Seat reclining operation	Front / OFF / Rear	-
Front Vertical Operation	Seat front vertical operation	Up / OFF / Down	-
Lifter Operation	Seat lifter operation	Up / OFF / Down	-
Seat Slide Operation	Seat sliding operation	Front / OFF / Rear	-

OK:
The power seat motors operate normally.

NG → Go to step 4

OK

REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

4.INSPECT FRONT SEAT ASSEMBLY (FRONT POWER SEAT MOTOR)


a. Remove the front seat assembly LH (for LHD) (Click here).

b. Remove the front seat assembly RH (for RHD) (Click here).

c. Check operation of the slide motor.

i. Check if the seat moves smoothly when the battery is connected to the slide motor connector terminals.

Component without harness connected:
(Slide Motor)

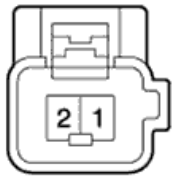

OK:

for LHD

Measurement Condition	Specified Condition
Battery positive (+) → 1 Battery negative (-) → 2	Forward
Battery positive (+) → 2 Battery negative (-) → 1	Rearward


for RHD

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Forward
Battery positive (+) → 1 Battery negative (-) → 2	Rearward

d. Check operation of the front vertical motor.

i. Check if the seat moves smoothly when the battery is connected to the front vertical motor connector terminals.

Component without harness connected:
(Front Vertical Motor)

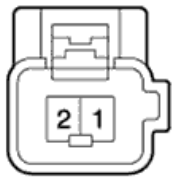

OK:

for LHD

Measurement Condition	Specified Condition
Battery positive (+) → 1 Battery negative (-) → 2	Upward
Battery positive (+) → 2 Battery negative (-) → 1	Downward


for RHD

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Upward
Battery positive (+) → 1 Battery negative (-) → 2	Downward

e. Check operation of the lifter motor.

i. Check if the seat moves smoothly when the battery is connected to the lifter motor connector terminals.

Component without harness connected:
(Lifter Motor)

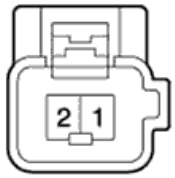

OK:

for LHD

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Upward
Battery positive (+) → 1 Battery negative (-) → 2	Downward


for RHD

Measurement Condition	Specified Condition
Battery positive (+) → 1 Battery negative (-) → 2	Upward
Battery positive (+) → 2 Battery negative (-) → 1	Downward

f. Check operation of the reclining motor.

i. Check if the seat moves smoothly when the battery is connected to the reclining motor connector terminals.

Component without harness connected:
(Reclining Motor)

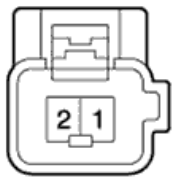

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Forward
Battery positive (+) → 1 Battery negative (-) → 2	Rearward

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B	REPLACE FRONT SEAT ASSEMBLY LH (Click here)
C	REPLACE FRONT SEAT ASSEMBLY RH

A

5.CHECK HARNESS AND CONNECTOR (POSITION CONTROL ECU AND SWITCH - POWER SEAT MOTOR)

a. Disconnect the c14 or c26 switch connector.

b. Disconnect the c1 , c1 , c19 , c2 or c , c4 , c , c6 motor connectors.


HINT:

: for LHD


: for RHD

c. Measure the resistance according to the value(s) in the table below.

Front view of wire harness connector:
(to Position Control ECU and Switch)

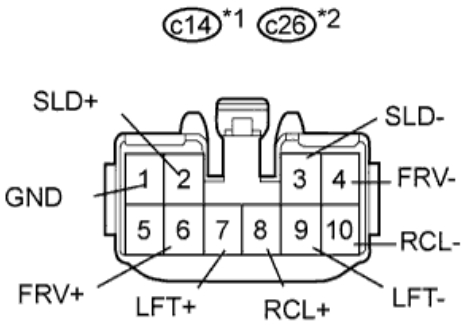

Front view of wire harness connector:
(to Power Seat Motor)

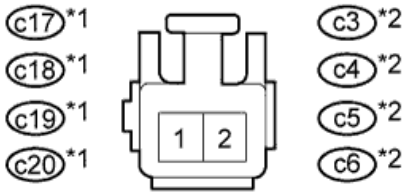

*1: for LHD

*2: for RHD

Standard Resistance:

for LHD

Tester Connection	Condition	Specified Condition
c14-3 (SLD-) - c17-2	Always	Below 1 Ω
c14-2 (SLD+) - c17-1	Always	Below 1 Ω
c14-4 (FRV-) - c19-2	Always	Below 1 Ω
c14-6 (FRV+) - c19-1	Always	Below 1 Ω
c14-9 (LFT-) - c18-1	Always	Below 1 Ω
c14-7 (LFT+) - c18-2	Always	Below 1 Ω
c14-10 (RCL-) - c20-1	Always	Below 1 Ω
c14-8 (RCL+) - c20-2	Always	Below 1 Ω
c14-1 (GND) - Body ground	Always	Below 1 Ω
c14-3 (SLD-) or c17-2 - Body ground	Always	10 kΩ or higher
c14-2 (SLD+) or c17-1 - Body ground	Always	10 kΩ or higher
c14-4 (FRV-) or c19-2 - Body ground	Always	10 kΩ or higher
c14-6 (FRV+) or c19-1 - Body ground	Always	10 kΩ or higher
c14-9 (LFT-) or c18-1 - Body ground	Always	10 kΩ or higher

c14- (LFT) or c1 -2 - Body ground	Always	1 kΩ or higher
c14-1 (RCL-) or c2 -1 - Body ground	Always	1 kΩ or higher
c14- (RCL) or c2 -2 - Body ground	Always	1 kΩ or higher

for RHD

Tester Connection	Condition	Specified Condition
c26- (SLD-) - c -1	Always	Below 1 Ω
c26-2 (SLD) - c -2	Always	Below 1 Ω
c26-4 (FRV-) - c -1	Always	Below 1 Ω
c26-6 (FRV) - c -2	Always	Below 1 Ω
c26-9 (LFT-) - c4-2	Always	Below 1 Ω
c26- (LFT) - c4-1	Always	Below 1 Ω
c26-1 (RCL-) - c6-1	Always	Below 1 Ω
c26- (RCL) - c6-2	Always	Below 1 Ω
c26-1 (GND) - Body ground	Always	Below 1 Ω
c26- (SLD-) or c -1 - Body ground	Always	1 kΩ or higher
c26-2 (SLD) or c -2 - Body ground	Always	1 kΩ or higher
c26-4 (FRV-) or c -1 - Body ground	Always	1 kΩ or higher
c26-6 (FRV) or c -2 - Body ground	Always	1 kΩ or higher
c26-9 (LFT-) or c4-2 - Body ground	Always	1 kΩ or higher
c26- (LFT) or c4-1 - Body ground	Always	1 kΩ or higher
c26-1 (RCL-) or c6-1 - Body ground	Always	1 kΩ or higher
c26- (RCL) or c6-2 - Body ground	Always	1 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE POSITION CONTROL ECU AND SWITCH (**Click here**)


6.INSPECT LUMBAR SUPPORT SWITCH

a. Remove the lumbar support switch (Click here).

b. Measure the resistance according to the value(s) in the table below.


for LHD:

Component without harness connected:
(Lumbar Support Switch)

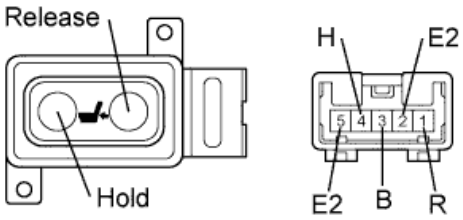

for RHD:

Component without harness connected:
(Lumbar Support Switch)

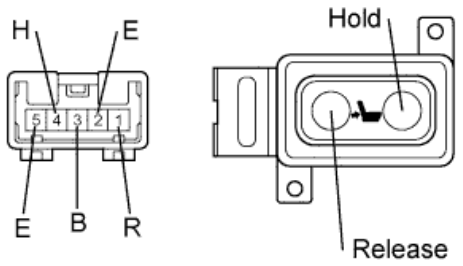

Standard Resistance:

for LHD

Tester Connection	Switch Condition	Specified Condition
(B) - 4 (H)	Hold	Below 1 Ω
1 (R) - 2 (E2)		
4 (H) - (E2)	Off	
1 (R) - 2 (E2)		
4 (H) - (E2)	Release	
1 (R) - (B)		

for RHD

Tester Connection	Switch Condition	Specified Condition
(B) - 4 (H)	Hold	Below 1 Ω
1 (R) - 2 (E)		
4 (H) - (E)	Off	
1 (R) - 2 (E)		
4 (H) - (E)	Release	
1 (R) - (B)		

NG → REPLACE LUMBAR SUPPORT SWITCH (Click here)


OK

7.INSPECT LUMBAR SUPPORT ADJUSTER ASSEMBLY

a. Remove the lumbar support adjuster (Click here).

b. Check operation of the lumbar support adjuster.

i. Check that the lumbar support adjuster moves smoothly when the battery is connected to the lumbar support adjuster motor connector terminals.

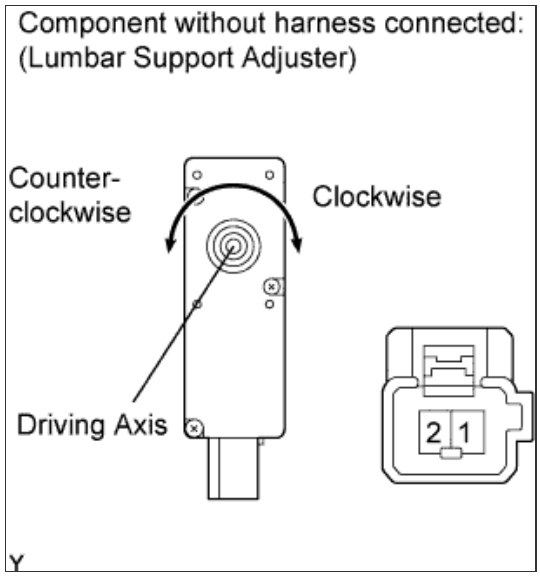

OK:

for LHD

Measurement Condition	Specified Condition
Battery positive (+) → 1 Battery negative (-) → 2	Clockwise
Battery positive (+) → 2 Battery negative (-) → 1	Counterclockwise

for RHD

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Clockwise
Battery positive (+) → 1 Battery negative (-) → 2	Counterclockwise

NG → REPLACE LUMBAR SUPPORT ADJUSTER ASSEMBLY (Click here)

OK

8.CHECK HARNESS AND CONNECTOR (LUMBAR SUPPORT SWITCH - BATTERY AND BODY GROUND)


a. Disconnect the c16*1 or c28*2 switch connector.

HINT:

*1: for LHD

*2: for RHD

b. Measure the voltage according to the value(s) in the table below.

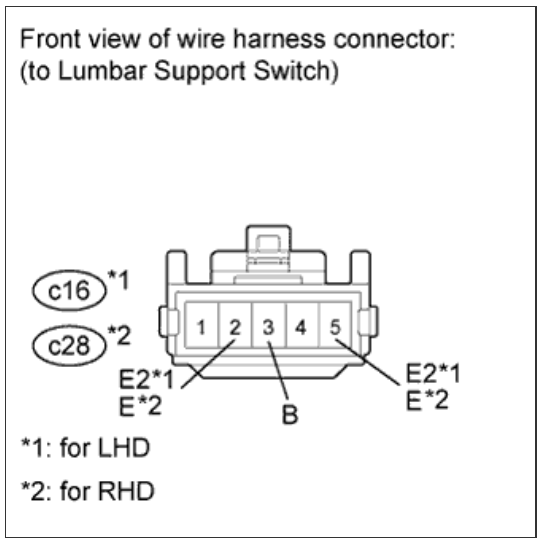

Standard Voltage:

for LHD

Tester Connection	Condition	Specified Condition
c16-3 (B) - Body ground	Always	11 to 14 V

for RHD

Tester Connection	Condition	Specified Condition
c2 - (B) - Body ground	Always	11 to 14 V

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

for LHD

Tester Connection	Condition	Specified Condition
c16-5 (E2) - Body ground	Always	Below 1 Ω
c16-2 (E2) - Body ground		

for RHD

Tester Connection	Condition	Specified Condition
c28-5 (E) - Body ground	Always	Below 1 Ω
c28-2 (E) - Body ground		

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPAIR OR REPLACE HARNESS OR CONNECTOR (LUMBAR SUPPORT SWITCH - LUMBAR SUPPORT ADJUSTER ASSEMBLY)

for Preparation Click here

DESCRIPTION

When the seat memory SET switch and a seat memory switch (seat memory switch 1, seat memory switch 2 or seat memory switch 3) are pressed simultaneously, the outer mirror control ECU commands the position control ECU and switch through CAN communication to record each position value.

WIRING DIAGRAM

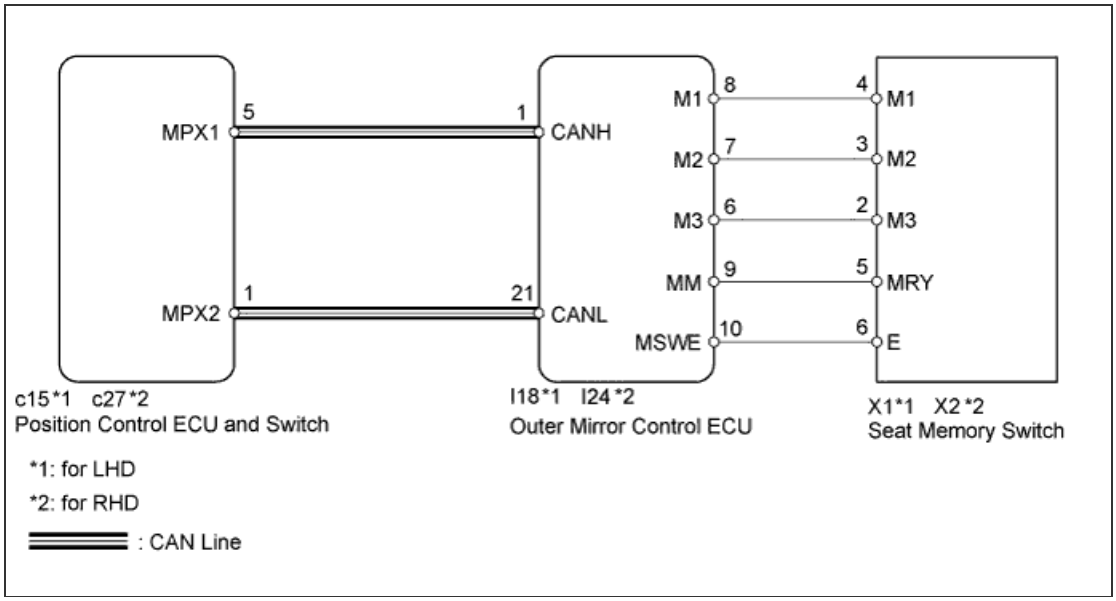

INSPECTION PROCEDURE

NOTICE:

First perform the communication function inspections in How to Proceed with Troubleshooting to confirm that there are no CAN communication malfunctions before troubleshooting this symptom.

1.CHECK FRONT POWER SEAT CONTROL FUNCTION

a. Check that each function of the power seat operates normally by using the front power seat switches.

OK:
Each function of power seat operates normally by using seat switches.

NG → GO TO PROBLEM SYMPTOMS TABLE (Click here)

OK

2.CHECK SEAT MEMORY SWITCH FUNCTION

a. Perform a memory operation properly. Check that the buzzer sounds to indicate the completion of the memory operation.

NOTICE:

- **The seat position will not be recorded if the seat memory SET switch and 2 or more of the seat memory switches (for example, seat memory switch 1 and seat memory switch 2) are pressed simultaneously.**
- **If a memorizing operation has failed, release all switches. The seat memory function does not operate unless the switches are released.**

OK:
Seat memory switch function operates normally.

NG → Go to step 3

OK

END

3.CHECK COMBINATION METER FUNCTION

a. When the engine switch is on (IG) and the shift lever is in P, check that the combination meter shows that the shift lever is in P.

OK:
Meter shows that shift lever is in P.

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK

4.READ VALUE USING INTELLIGENT TESTER (SEAT MEMORY SWITCH)

a. Check the Data List for proper functioning of the seat memory switch.

Driver Seat

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
SET Switch	Seat memory SET switch signal / ON or OFF	ON: Seat memory SET switch on OFF: Seat memory SET switch off	-
M1 Switch	Seat memory switch 1 signal / ON or OFF	ON: Seat memory switch 1 on OFF: Seat memory switch 1 off	-
M2 Switch	Seat memory switch 2 signal / ON or OFF	ON: Seat memory switch 2 on OFF: Seat memory switch 2 off	-
M3 Switch	Seat memory switch 3 signal / ON or OFF	ON: Seat memory switch 3 on OFF: Seat memory switch 3 off	-

OK:
On intelligent tester screen, each item changes between ON and OFF according to above chart.

NG → Go to step 5

OK

REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

5.INSPECT SEAT MEMORY SWITCH


a. Remove the seat memory switch (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
4 (M1) - 6 (E)	Seat memory switch 1 pressed	Below 1 Ω
3 (M2) - 6 (E)	Seat memory switch 2 pressed	Below 1 Ω
2 (M3) - 6 (E)	Seat memory switch 3 pressed	Below 1 Ω
5 (MRY) - 6 (E)	Seat memory SET switch pressed	Below 1 Ω

Component without harness connected:
(Seat Memory Switch)

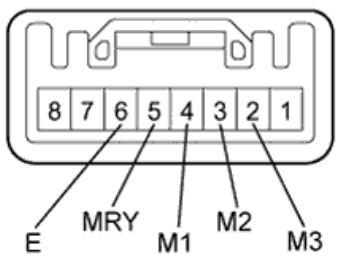

NG → REPLACE SEAT MEMORY SWITCH (Click here)

OK

6.CHECK HARNESS AND CONNECTOR (OUTER MIRROR CONTROL ECU - SEAT MEMORY SWITCH)

a. Disconnect the I18*1 or I24*2 ECU connector.


b. Disconnect the X1*1 or X2*2 switch connector.

HINT:

*1: for LHD

*2: for RHD

c. Measure the resistance according to the value(s) in the table below.

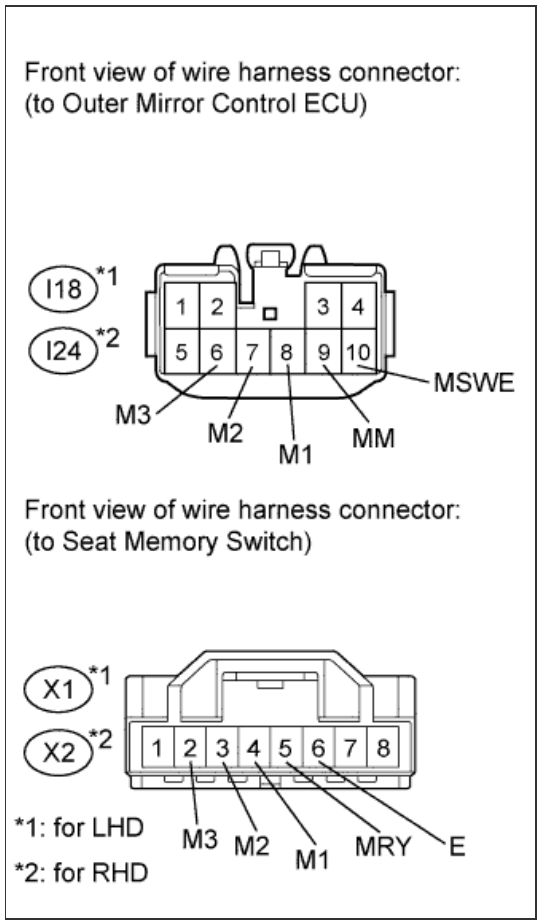

Standard Resistance:

for LHD

Tester Connection	Condition	Specified Condition
I18-8 (M1) - X1-4 (M1)	Always	Below 1 Ω
I18-7 (M2) - X1-3 (M2)	Always	Below 1 Ω
I18-6 (M3) - X1-2 (M3)	Always	Below 1 Ω
I18-9 (MM) - X1-5 (MRY)	Always	Below 1 Ω
I18-10 (MSWE) - X1-6 (E)	Always	Below 1 Ω
I18-8 (M1) - Body ground	Always	10 kΩ or higher
I18-7 (M2) - Body ground	Always	10 kΩ or higher
I18-6 (M3) - Body ground	Always	10 kΩ or higher
I18-9 (MM) - Body ground	Always	10 kΩ or higher
I18-10 (MSWE) - Body ground	Always	10 kΩ or higher

for RHD

Tester Connection	Condition	Specified Condition
I24-8 (M1) - X2-4 (M1)	Always	Below 1 Ω
I24-7 (M2) - X2-3 (M2)	Always	Below 1 Ω
I24-6 (M3) - X2-2 (M3)	Always	Below 1 Ω
I24-9 (MM) - X2-5 (MRY)	Always	Below 1 Ω
I24-10 (MSWE) - X2-6 (E)	Always	Below 1 Ω
I24-8 (M1) - Body ground	Always	10 kΩ or higher
I24-7 (M2) - Body ground	Always	10 kΩ or higher
I24-6 (M3) - Body ground	Always	10 kΩ or higher
I24-9 (MM) - Body ground	Always	10 kΩ or higher
I24-10 (MSWE) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK OUTER MIRROR CONTROL ECU (OPERATION)

a. After replacing the outer mirror control ECU, check that the front power seat control functions operate normally using the front seat switches and seat memory switch.

OK:

Front power seat control functions operate normally.

NG → REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

OK


END (REPLACE OUTER MIRROR CONTROL ECU) (Click here)

for Preparation Click here

DESCRIPTION

When the seat memory SET switch and a seat memory switch (seat memory switch 1, seat memory switch 2 or seat memory switch 3) are pressed simultaneously, the outer mirror control ECU commands the position control ECU and switch through CAN communication to record each position value.

WIRING DIAGRAM

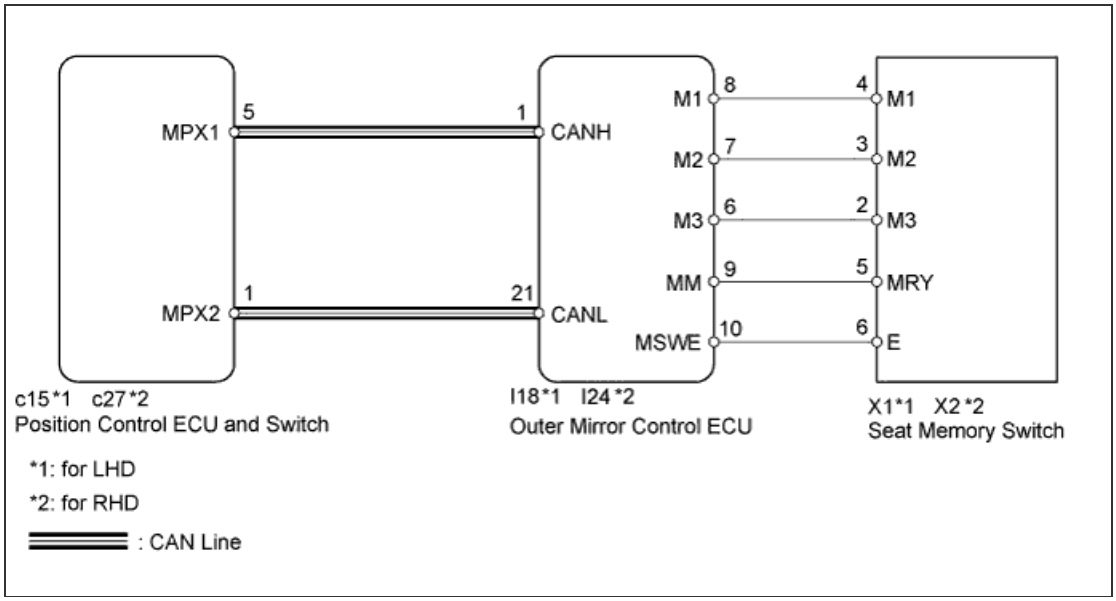

INSPECTION PROCEDURE

NOTICE:

First perform the communication function inspections in How to Proceed with Troubleshooting to confirm that there are no CAN communication malfunctions before troubleshooting this symptom.

1.CHECK FRONT POWER SEAT CONTROL FUNCTION

a. Check that each function of the power seat operates normally by using the front power seat switches.

OK:
Each function of power seat operates normally by using seat switches.

NG → GO TO PROBLEM SYMPTOMS TABLE (Click here)

OK

2.CHECK SEAT MEMORY SWITCH FUNCTION

a. Perform a memory operation properly. Check that the buzzer sounds to indicate the completion of the memory operation.

NOTICE:

- **The seat position will not be recorded if the seat memory SET switch and 2 or more of the seat memory switches (for example, seat memory switch 1 and seat memory switch 2) are pressed simultaneously.**
- **If a memorizing operation has failed, release all switches. The seat memory function does not operate unless the switches are released.**

OK:
Seat memory switch function operates normally.

NG → Go to step 3

OK

END

3.CHECK COMBINATION METER FUNCTION

a. When the engine switch is on (IG) and the shift lever is in P, check that the combination meter shows that the shift lever is in P.

OK:
Meter shows that shift lever is in P.

NG → GO TO METER / GAUGE SYSTEM (Click here)

OK

4.READ VALUE USING INTELLIGENT TESTER (SEAT MEMORY SWITCH)

a. Check the Data List for proper functioning of the seat memory switch.

Driver Seat

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
SET Switch	Seat memory SET switch signal / ON or OFF	ON: Seat memory SET switch on OFF: Seat memory SET switch off	-
M1 Switch	Seat memory switch 1 signal / ON or OFF	ON: Seat memory switch 1 on OFF: Seat memory switch 1 off	-
M2 Switch	Seat memory switch 2 signal / ON or OFF	ON: Seat memory switch 2 on OFF: Seat memory switch 2 off	-
M3 Switch	Seat memory switch 3 signal / ON or OFF	ON: Seat memory switch 3 on OFF: Seat memory switch 3 off	-

OK:
On intelligent tester screen, each item changes between ON and OFF according to above chart.

NG → Go to step 5

OK

REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

5.INSPECT SEAT MEMORY SWITCH


a. Remove the seat memory switch (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
4 (M1) - 6 (E)	Seat memory switch 1 pressed	Below 1 Ω
3 (M2) - 6 (E)	Seat memory switch 2 pressed	Below 1 Ω
2 (M3) - 6 (E)	Seat memory switch 3 pressed	Below 1 Ω
5 (MRY) - 6 (E)	Seat memory SET switch pressed	Below 1 Ω

Component without harness connected:
(Seat Memory Switch)

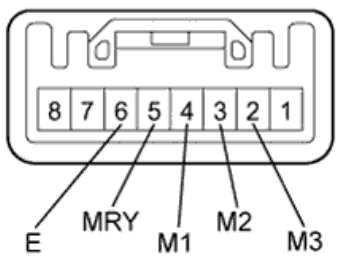

NG → REPLACE SEAT MEMORY SWITCH (Click here)

OK

6.CHECK HARNESS AND CONNECTOR (OUTER MIRROR CONTROL ECU - SEAT MEMORY SWITCH)

a. Disconnect the I18*1 or I24*2 ECU connector.


b. Disconnect the X1*1 or X2*2 switch connector.

HINT:

*1: for LHD

*2: for RHD

c. Measure the resistance according to the value(s) in the table below.

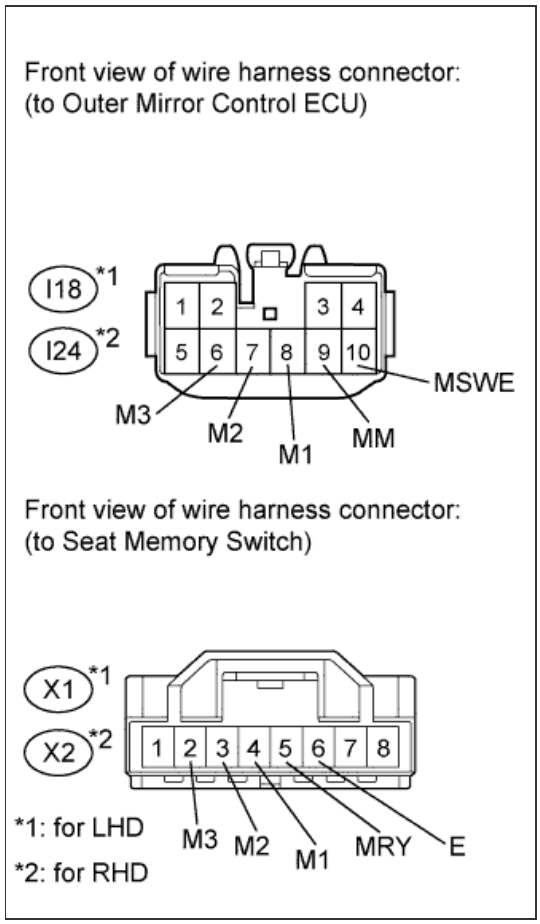

Standard Resistance:

for LHD

Tester Connection	Condition	Specified Condition
I18-8 (M1) - X1-4 (M1)	Always	Below 1 Ω
I18-7 (M2) - X1-3 (M2)	Always	Below 1 Ω
I18-6 (M3) - X1-2 (M3)	Always	Below 1 Ω
I18-9 (MM) - X1-5 (MRY)	Always	Below 1 Ω
I18-10 (MSWE) - X1-6 (E)	Always	Below 1 Ω
I18-8 (M1) - Body ground	Always	10 kΩ or higher
I18-7 (M2) - Body ground	Always	10 kΩ or higher
I18-6 (M3) - Body ground	Always	10 kΩ or higher
I18-9 (MM) - Body ground	Always	10 kΩ or higher
I18-10 (MSWE) - Body ground	Always	10 kΩ or higher

for RHD

Tester Connection	Condition	Specified Condition
I24-8 (M1) - X2-4 (M1)	Always	Below 1 Ω
I24-7 (M2) - X2-3 (M2)	Always	Below 1 Ω
I24-6 (M3) - X2-2 (M3)	Always	Below 1 Ω
I24-9 (MM) - X2-5 (MRY)	Always	Below 1 Ω
I24-10 (MSWE) - X2-6 (E)	Always	Below 1 Ω
I24-8 (M1) - Body ground	Always	10 kΩ or higher
I24-7 (M2) - Body ground	Always	10 kΩ or higher
I24-6 (M3) - Body ground	Always	10 kΩ or higher
I24-9 (MM) - Body ground	Always	10 kΩ or higher
I24-10 (MSWE) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK OUTER MIRROR CONTROL ECU (OPERATION)

a. After replacing the outer mirror control ECU, check that the front power seat control functions operate normally using the front seat switches and seat memory switch.

OK:

Front power seat control functions operate normally.

NG → REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

OK

END (REPLACE OUTER MIRROR CONTROL ECU) (Click here)

for Preparation Click here

DESCRIPTION

With the engine switch off and the driver door closed, press the transmitter lock or unlock switch while holding a seat memory switch (seat memory switch 1, seat memory switch 2 or seat memory switch 3). Doing so will register the transmitter recognition code into the seat memory switch that was pressed. After the registration is complete, the answer-back buzzer sounds.

INSPECTION PROCEDURE

1.CHECK WIRELESS DOOR LOCK CONTROL FUNCTIONS

a. Using the standard operation procedure, check that the wireless door lock/unlock operates normally.

OK:
Wireless door lock/unlock operates normally.

HINT:

The standard operating procedure is as follows:

Hold the transmitter approximately 1 m (3.28 ft.) from the driver door outside handle. Press and hold the transmitter lock or unlock switch for 1 second.

NG → GO TO WIRELESS DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.CHECK POWER DOOR LOCK CONTROL FUNCTION

a. Using the standard operation procedure, check that the power door lock/unlock operates normally.

OK:
Power door lock/unlock operates normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

3.CHECK SEAT MEMORY SWITCH FUNCTION (SEAT POSITION MEMORY FUNCTION)

a. Perform a memory operation properly. Check that the buzzer sounds to indicate the completion of the memory operation.

NOTICE:

- **The seat position will not be recorded if the seat memory SET switch and 2 or more of the seat memory switches (for example, seat memory switch 1 and seat memory switch 2) are pressed simultaneously.**
- **If a memorizing operation has failed, release all switches. The seat memory function does not operate unless the switches are released.**

OK:
Seat memory switch function operates normally.

NG → GO TO PRO LEM SYMPTOMS TA LE (Click here)

OK

4.CHECK MEMORY CALL FUNCTION (REGISTER RECOGNITION CODE)

a. While pressing the seat memory switch 1, seat memory switch 2 or seat memory switch 3, press the transmitter lock or unlock switch. Then check that the buzzer sounds normally.

OK:
uzzer sounds normally.

NG → REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

OK

END

for Preparation Click here

DESCRIPTION

With the engine switch off and the driver door closed, press the transmitter lock or unlock switch while holding a seat memory switch (seat memory switch 1, seat memory switch 2 or seat memory switch 3). Doing so will register the transmitter recognition code into the seat memory switch that was pressed. After the registration is complete, the answer-back buzzer sounds.

INSPECTION PROCEDURE

1.CHECK WIRELESS DOOR LOCK CONTROL FUNCTIONS

a. Using the standard operation procedure, check that the wireless door lock/unlock operates normally.

OK:
Wireless door lock/unlock operates normally.

HINT:

The standard operating procedure is as follows:

Hold the transmitter approximately 1 m (3.28 ft.) from the driver door outside handle. Press and hold the transmitter lock or unlock switch for 1 second.

NG → GO TO WIRELESS DOOR LOCK CONTROL SYSTEM (Click here)

OK

2.CHECK POWER DOOR LOCK CONTROL FUNCTION

a. Using the standard operation procedure, check that the power door lock/unlock operates normally.

OK:
Power door lock/unlock operates normally.

NG → GO TO POWER DOOR LOCK CONTROL SYSTEM (Click here)

OK

3.CHECK SEAT MEMORY SWITCH FUNCTION (SEAT POSITION MEMORY FUNCTION)

a. Perform a memory operation properly. Check that the buzzer sounds to indicate the completion of the memory operation.

NOTICE:

- **The seat position will not be recorded if the seat memory SET switch and 2 or more of the seat memory switches (for example, seat memory switch 1 and seat memory switch 2) are pressed simultaneously.**
- **If a memorizing operation has failed, release all switches. The seat memory function does not operate unless the switches are released.**

OK:
Seat memory switch function operates normally.

NG → GO TO PRO LEM SYMPTOMS TA LE (Click here)

OK

4.CHECK MEMORY CALL FUNCTION (REGISTER RECOGNITION CODE)

a. While pressing the seat memory switch 1, seat memory switch 2 or seat memory switch 3, press the transmitter lock or unlock switch. Then check that the buzzer sounds normally.

OK:
uzzer sounds normally.

NG → REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

OK

END

for Preparation Click here

DESCRIPTION

When a door is unlocked, the certification ECU (smart key ECU) sends a door unlock signal and key signal to the position control ECU and switch. When the position control ECU and switch receives the door unlock signal, it stores the key When the driver door is opened, the memory call and memory command information of the stored key is sent to each driving position related control ECU. Each control ECU receives the memory commands and performs the memory call operation according to predetermined control timing values.

INSPECTION PROCEDURE

1.CHECK ENTRY UNLOCK FUNCTION AND WIRELESS UNLOCK FUNCTION

a. Check that the driver side door unlocks when holding the driver side door outside handle, or when pressing the transmitter unlock switch.

OK:
Driver side door unlocks normally.

NG → GO TO ENTRY AND START SYSTEM OR WIRELESS DOOR LOCK CONTROL SYSTEM

OK

2.CHECK POWER SEAT CONTROL FUNCTION

a. Manually operate the driver seat power seat switches, and check if the seat operates normally.

OK:
Seat operates normally through manual operation.

NG → GO TO PROBLEM SYMPTOMS TABLE (Click here)

OK

3.CHECK SEAT MEMORY SWITCH FUNCTION (SEAT POSITION MEMORY FUNCTION)

a. Perform a memory operation properly. Check that the buzzer sounds to indicate the completion of the memory operation.

NOTICE:

- **The seat position will not be recorded if the seat memory SET switch and 2 or more of the seat memory switches (for example, seat memory switch 1 and seat memory switch 2) are pressed simultaneously.**
- **If a memorizing operation has failed, release all switches. The seat memory function does not operate unless the switches are released.**

OK:
Seat memory switch function operates normally.

NG → GO TO PROBLEM SYMPTOMS TABLE (Click here)

OK

4.CHECK SEAT MEMORY SWITCH FUNCTION (SEAT RESTORING OPERATION)

a. Press the seat memory switch 1, seat memory switch 2 or seat memory switch 3 and check that the seat moves to a recorded position.

OK:
Seat moves to recorded position.

NG → GO TO PROBLEM SYMPTOMS TABLE (Click here)

OK

5.CHECK MEMORY CALL FUNCTION (REGISTER RECOGNITION CODE)

a. While pressing the seat memory switch 1, seat memory switch 2 or seat memory switch 3, press the transmitter lock or unlock switch. Then check that the buzzer sounds normally.

OK:
Buzzer sounds normally.

NG → GO TO PROBLEM SYMPTOMS TABLE (Click here)

OK

6.CHECK MEMORY CALL FUNCTION (SEAT MEMORY CALL)

a. With a recognition code stored in memory, open the driver door by performing an entry unlock operation or by pressing the transmitter unlock switch. Check that the driver side power seat moves to the memorized position.

OK:
Driver side power seat moves to the memorized position.

NG → REPLACE POSITION CONTROL ECU AND SWITCH (Click here)

OK

END

for Preparation Click here

DESCRIPTION

When a door is unlocked, the certification ECU (smart key ECU) sends a door unlock signal and key signal to the position control ECU and switch. When the position control ECU and switch receives the door unlock signal, it stores the key When the driver door is opened, the memory call and memory command information of the stored key is sent to each driving position related control ECU. Each control ECU receives the memory commands and performs the memory call operation according to predetermined control timing values.

INSPECTION PROCEDURE

1.CHECK ENTRY UNLOCK FUNCTION AND WIRELESS UNLOCK FUNCTION

a. Check that the driver side door unlocks when holding the driver side door outside handle, or when pressing the transmitter unlock switch.

OK:
Driver side door unlocks normally.

NG → GO TO ENTRY AND START SYSTEM OR WIRELESS DOOR LOCK CONTROL SYSTEM

OK

2.CHECK POWER SEAT CONTROL FUNCTION

a. Manually operate the driver seat power seat switches, and check if the seat operates normally.

OK:
Seat operates normally through manual operation.

NG → GO TO PROBLEM SYMPTOMS TABLE (Click here)

OK

3.CHECK SEAT MEMORY SWITCH FUNCTION (SEAT POSITION MEMORY FUNCTION)

a. Perform a memory operation properly. Check that the buzzer sounds to indicate the completion of the memory operation.

NOTICE:

- **The seat position will not be recorded if the seat memory SET switch and 2 or more of the seat memory switches (for example, seat memory switch 1 and seat memory switch 2) are pressed simultaneously.**
- **If a memorizing operation has failed, release all switches. The seat memory function does not operate unless the switches are released.**

OK:
Seat memory switch function operates normally.

NG → GO TO PROBLEM SYMPTOMS TABLE (Click here)

OK

4.CHECK SEAT MEMORY SWITCH FUNCTION (SEAT RESTORING OPERATION)

a. Press the seat memory switch 1, seat memory switch 2 or seat memory switch 3 and check that the seat moves to a recorded position.

OK:
Seat moves to recorded position.

NG → GO TO PROBLEM SYMPTOMS TABLE (Click here)

OK

5.CHECK MEMORY CALL FUNCTION (REGISTER RECOGNITION CODE)

a. While pressing the seat memory switch 1, seat memory switch 2 or seat memory switch 3, press the transmitter lock or unlock switch. Then check that the buzzer sounds normally.

OK:
Buzzer sounds normally.

NG → GO TO PROBLEM SYMPTOMS TABLE (Click here)

OK

6.CHECK MEMORY CALL FUNCTION (SEAT MEMORY CALL)

a. With a recognition code stored in memory, open the driver door by performing an entry unlock operation or by pressing the transmitter unlock switch. Check that the driver side power seat moves to the memorized position.


OK:
Driver side power seat moves to the memorized position.

NG → REPLACE POSITION CONTROL ECU AND SWITCH (Click here)


OK

END


for Preparation Click here

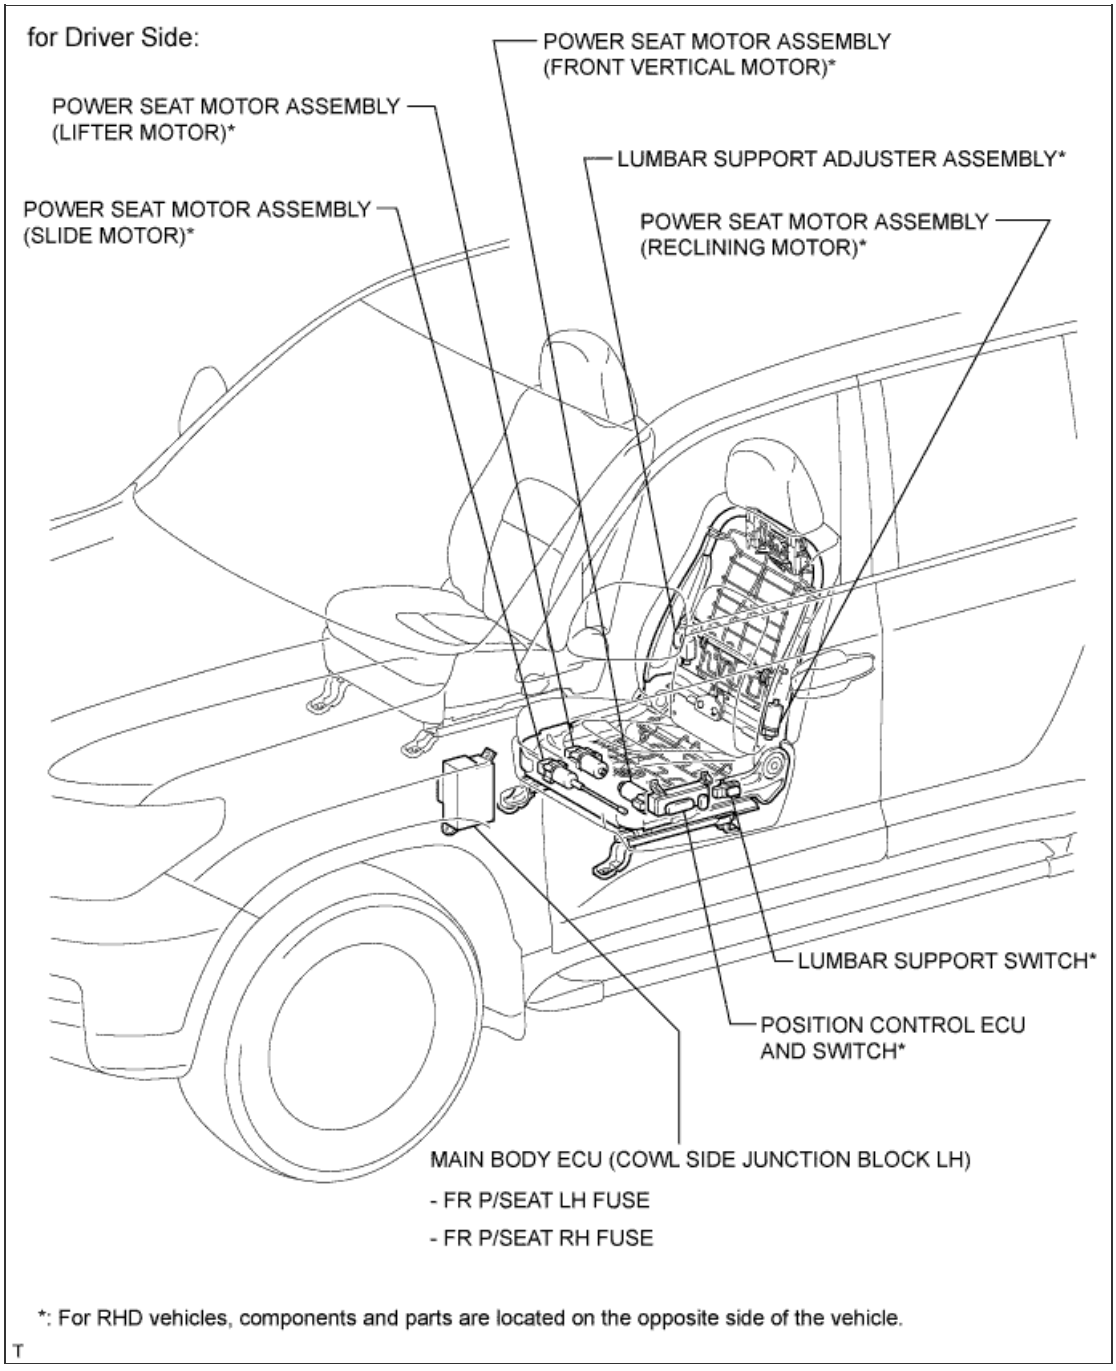


T

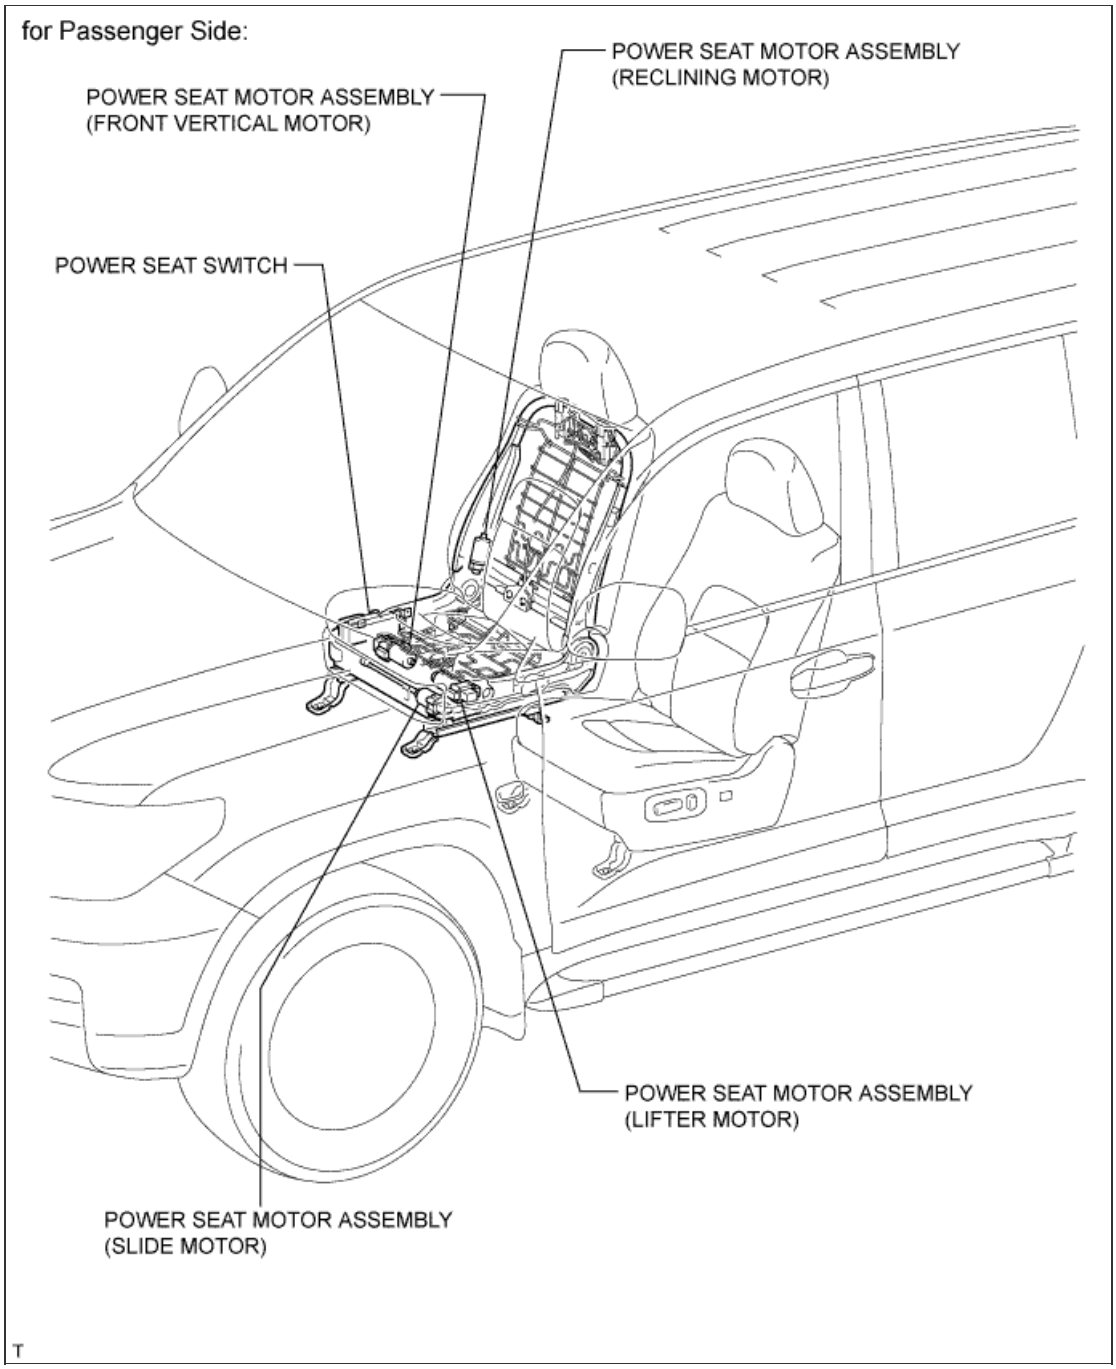
for Passenger Side:
POWER SEAT MOTOR ASSEMBLY
(RECLINING MOTOR)
POWER SEAT MOTOR ASSEMBLY
(FRONT VERTICAL MOTOR)
POWER SEAT SWITCH
POWER SEAT MOTOR ASSEMBLY
(LIFTER MOTOR)
POWER SEAT MOTOR ASSEMBLY
(SLIDE MOTOR)
T

for Preparation Cli ere

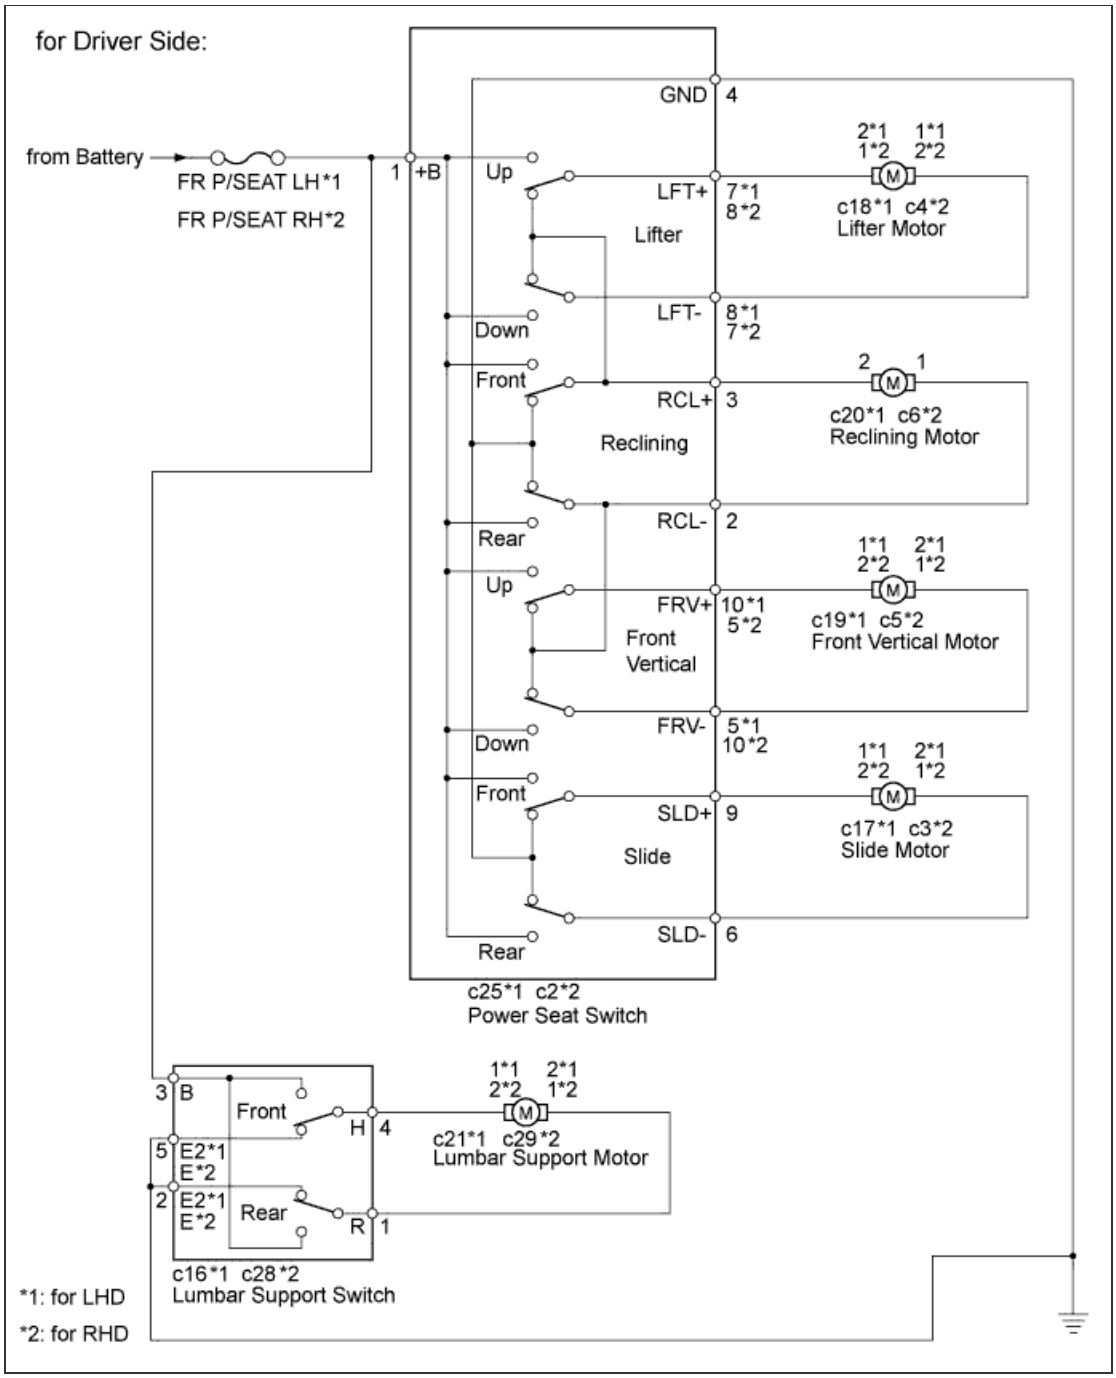

for Passenger Side:

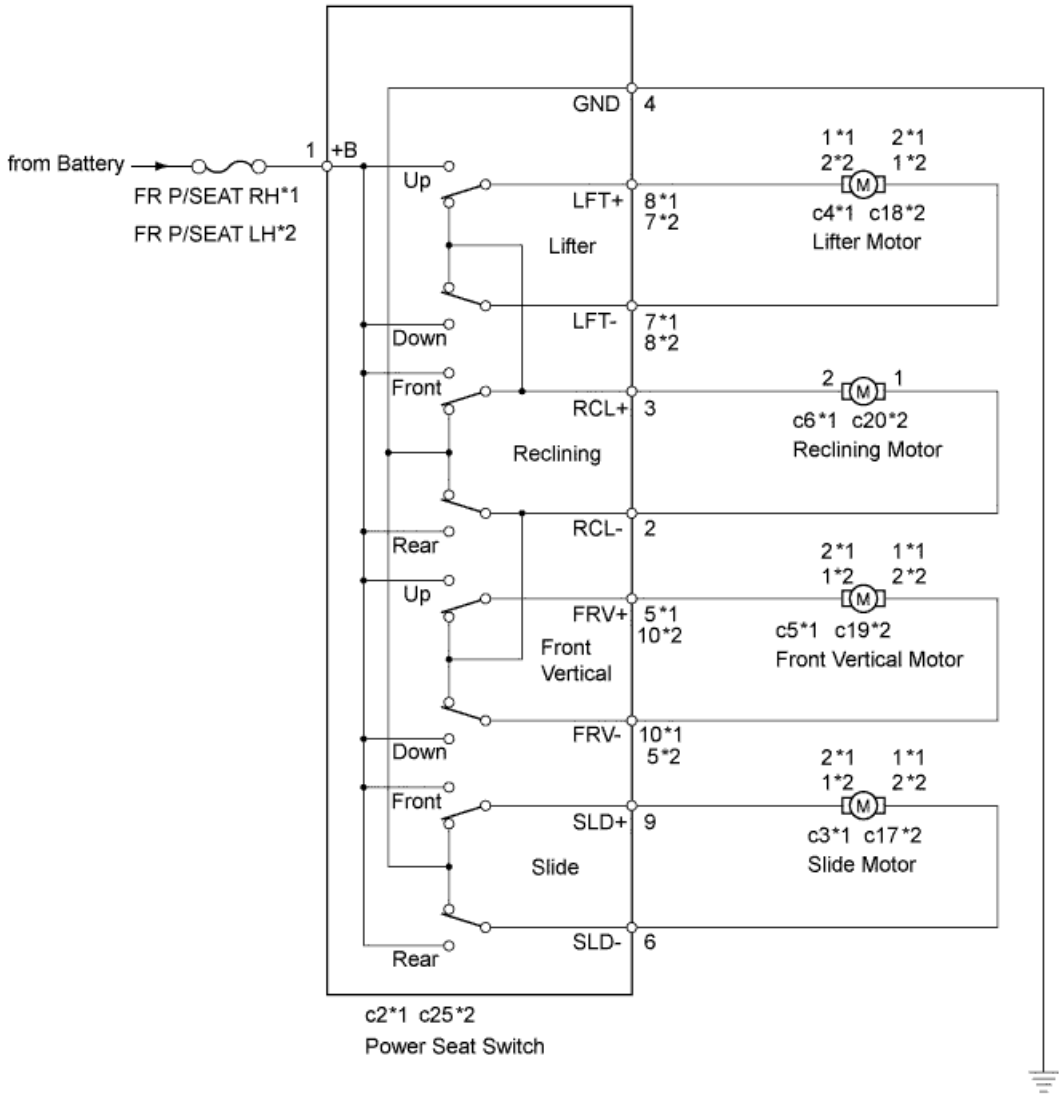

*1: for LHD

*2: for RHD


for Preparation Click here

CHECK POWER SEAT FUNCTION

a. Check the basic functions.

i. Operate the power seat switches and check to make sure each seat function works:

- Sliding
- Front vertical
- Lifter
- Reclining
- Lumbar support (driver seat only)

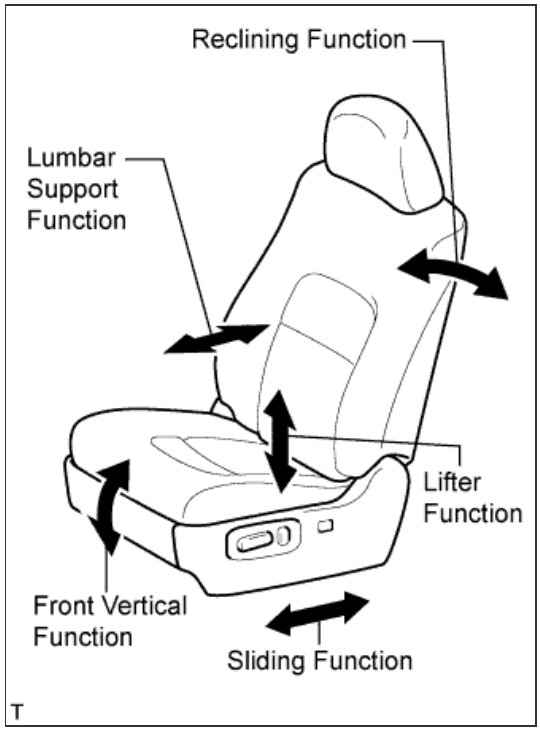

CHECK POWER SEAT MOTOR ASSEMBLY (SLIDING, FRONT VERTICAL, LIFTER, AND RECLINING FUNCTIONS)

a. Check the PTC operation inside the power seat motor.

HINT:

The resistance of the PTC thermistor increases when the power seat switch is held down even after the seat has been moved to the farthest possible position in one direction. If the resistance increases beyond a specified level, the current is shut off to prevent a short circuit.

NOTICE:

- **The inspection should be performed with the seat installed in the vehicle.**
- **Perform the 4 steps below to check the full range of motion for each power seat function.**

i. Choose a power seat function. Operate the power seat switch and move the seat to the farthest possible position in one direction. Keep the seat in that position for approximately 60 seconds.

ii. Operate the power seat switch again and continue to try to move the seat in the same direction as in the previous step. Measure the time until the current is shut off (motor operation sound will stop).

Standard:
4 to 90 seconds

iii. After the current is shut off, release the power seat switch and wait for approximately 60 seconds.

iv. Operate the same power seat switch and move the seat in the opposite direction. Check that the motor operates.

CHECK LUMBAR SUPPORT ADJUSTER ASSEMBLY

a. Check the PTC operation inside the power seat motor.

NOTICE:

The inspection should be performed with the seat installed in the vehicle.

i. Operate the lumbar support switch and move the lumbar support to either the foremost or rearmost position. Keep the seat in that

position for approximately 60 seconds.

ii. Operate the lumbar support switch again and continue to try to move the lumbar support in the same direction as in the previous step. Measure the time until the current is shut off (motor operation sound will stop).

Standard:
4 to 90 seconds

iii. After the current is shut off, release the lumbar support switch and wait for approximately 60 seconds.

iv. Operate the lumbar support switch and move the seat in the opposite direction. Check that the motor operates.

for Preparation Click here


HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to the system before inspecting the suspected areas below.**


Front Power Seat Control System


Symptom	Suspected Area	See page
Front power seat does not operate (slide, front vertical, lifter, reclining).	FR SEAT L fuse (for L Side)	-
	FR SEAT R fuse (for R Side)	-
	ower seat switc	lick ere
	arness or connector	-
Only slide operation function does not operate.	ower seat switc	lick ere
	Slide motor	Click ere
	arness or connector	-
Only front vertical operation function does not operate.	ower seat switc	lick ere
	Front vertical motor	Click ere
	arness or connector	-
Only lifter operation function does not operate.	ower seat switc	lick ere
	Lifter motor	Click ere
	arness or connector	-
Only reclining operation function does not operate.	ower seat switc	lick ere
	Reclining motor	Click ere
	arness or connector	-
Only lumbar support operation function does not operate (driver seat only).	Lumbar support switc	lick ere
	Lumbar support ad uster	Click ere
	arness or connector	-

for Preparation Click here

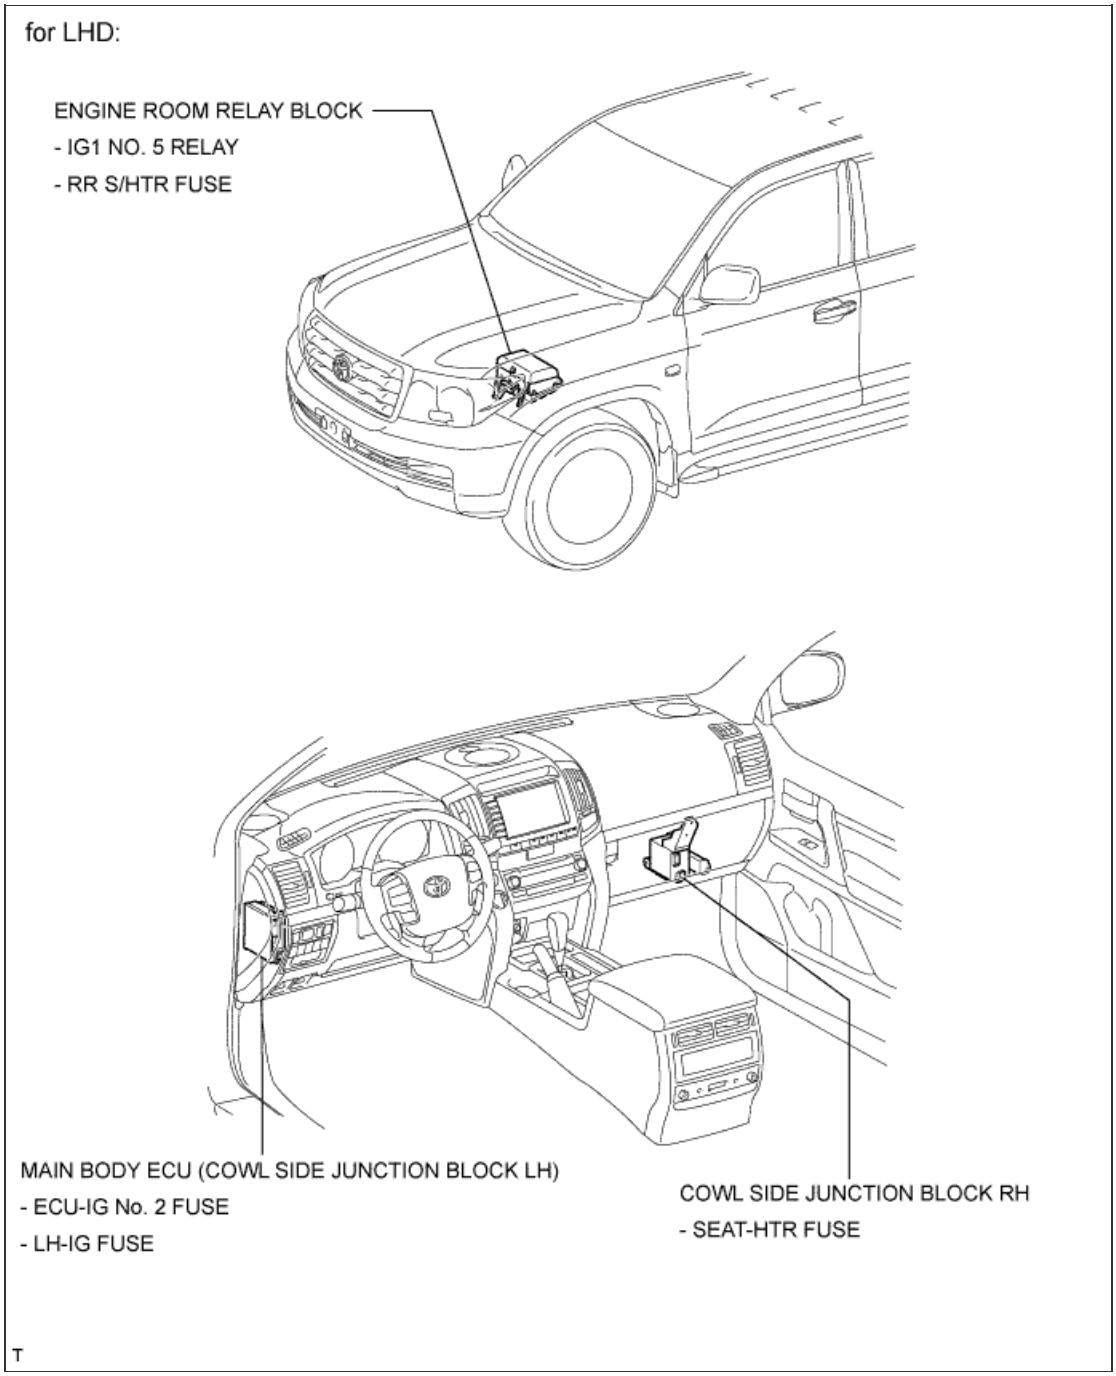



for RHD:

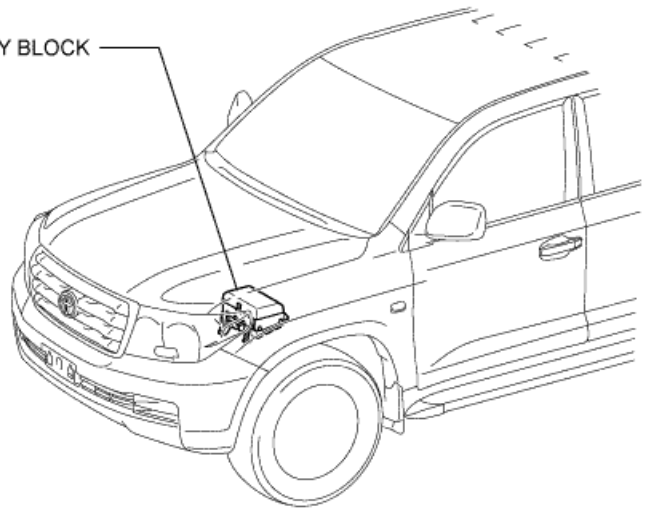
ENGINE ROOM RELAY BLOCK
- IG1 NO. 5 RELAY
- RR S/HTR FUSE

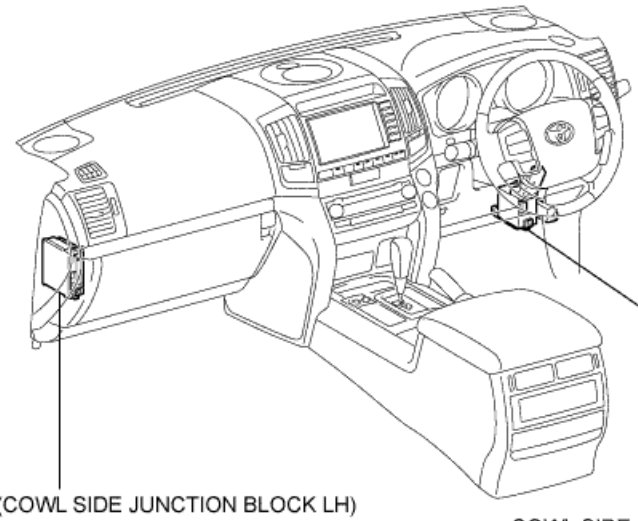

MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
- ECU-IG No. 2 FUSE
- LH-IG FUSE
COWL SIDE JUNCTION BLOCK RH
- SEAT-HTR FUSE


T

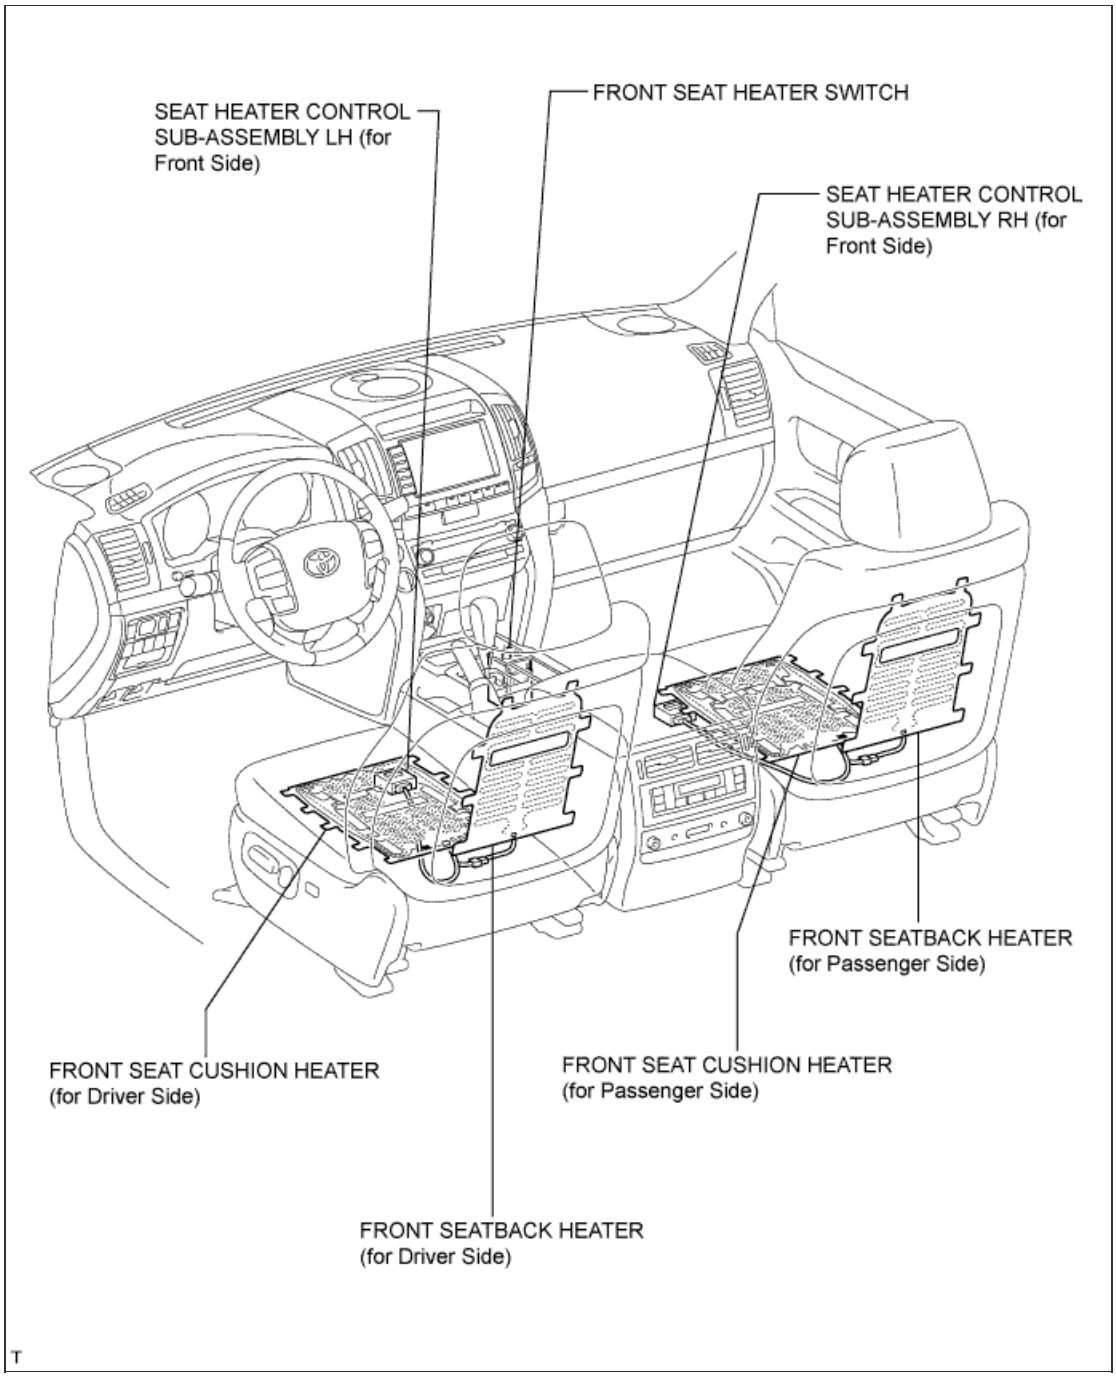
SEAT HEATER CONTROL SUB-ASSEMBLY LH (for Front Side)
FRONT SEAT HEATER SWITCH
SEAT HEATER CONTROL SUB-ASSEMBLY RH (for Front Side)
FRONT SEATBACK HEATER (for Passenger Side)
FRONT SEAT CUSHION HEATER (for Driver Side)
FRONT SEAT CUSHION HEATER (for Passenger Side)
FRONT SEATBACK HEATER (for Driver Side)
T

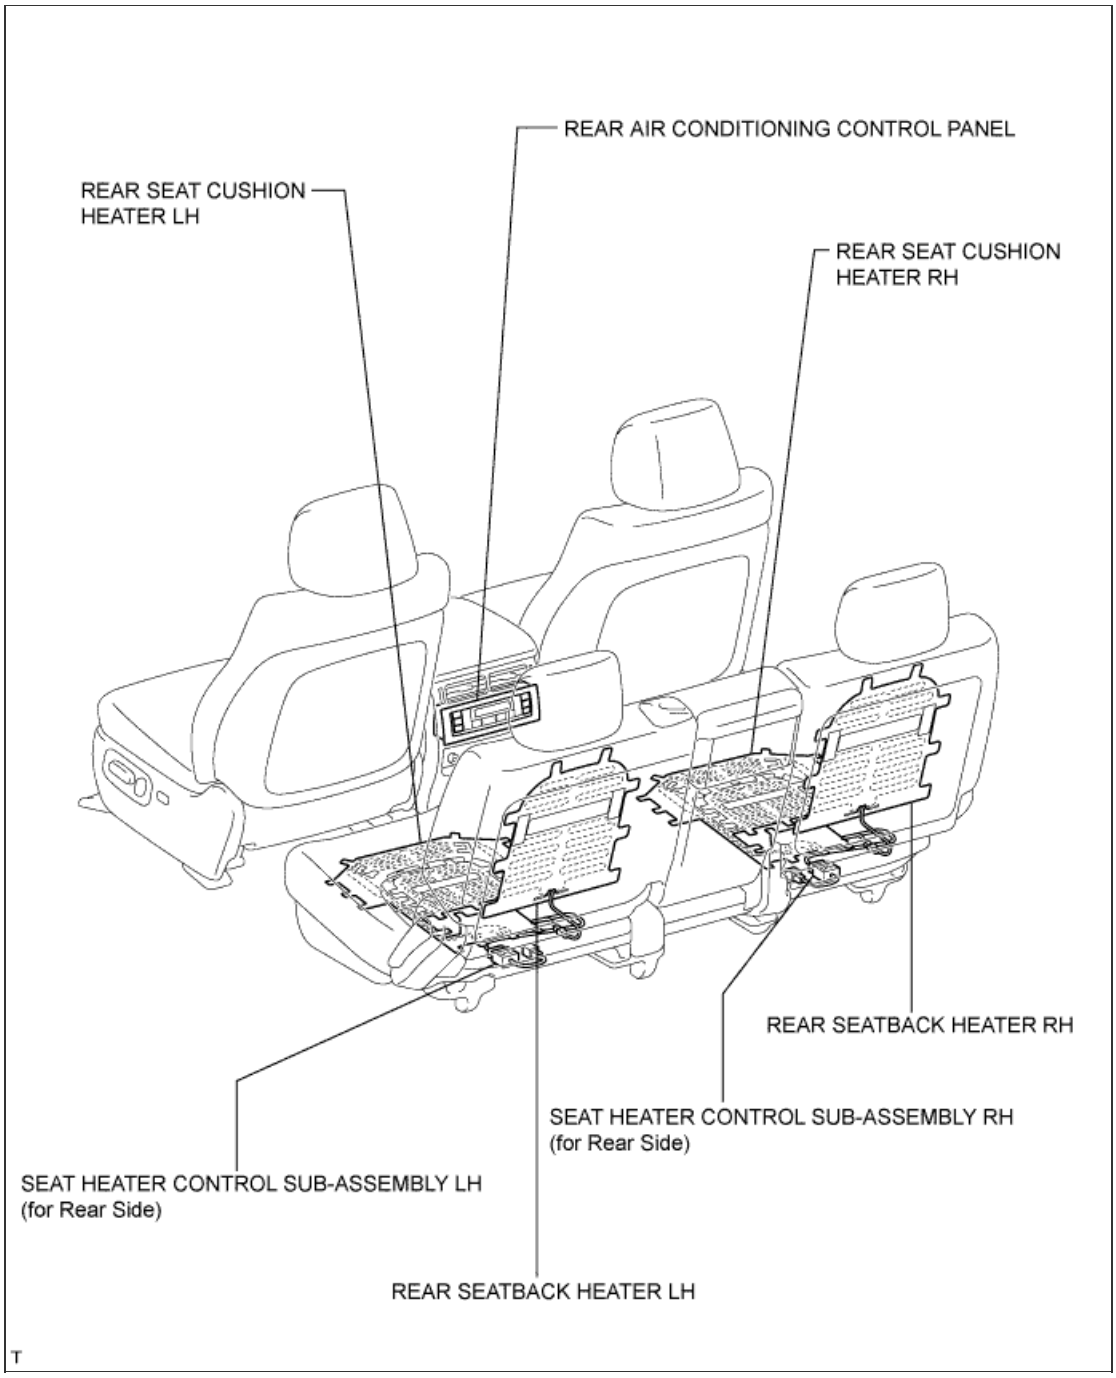
REAR AIR CONDITIONING CONTROL PANEL
REAR SEAT CUSHION HEATER LH
REAR SEAT CUSHION HEATER RH
REAR SEATBACK HEATER RH
SEAT HEATER CONTROL SUB-ASSEMBLY RH (for Rear Side)
SEAT HEATER CONTROL SUB-ASSEMBLY LH (for Rear Side)
REAR SEATBACK HEATER LH
T

for Preparation Click here

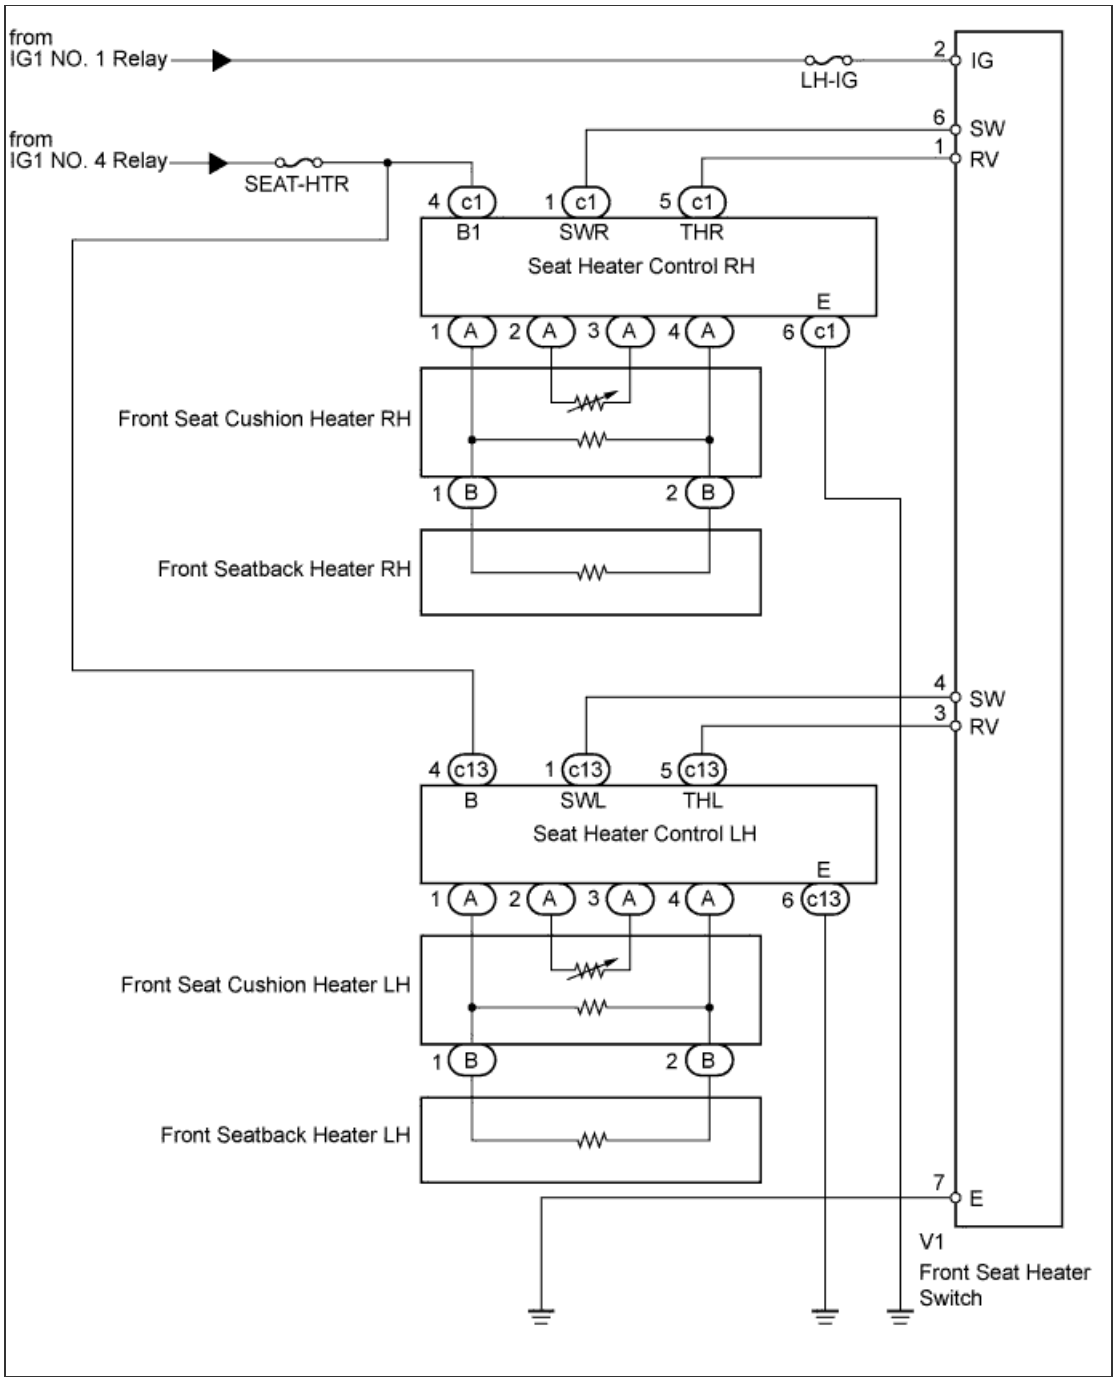

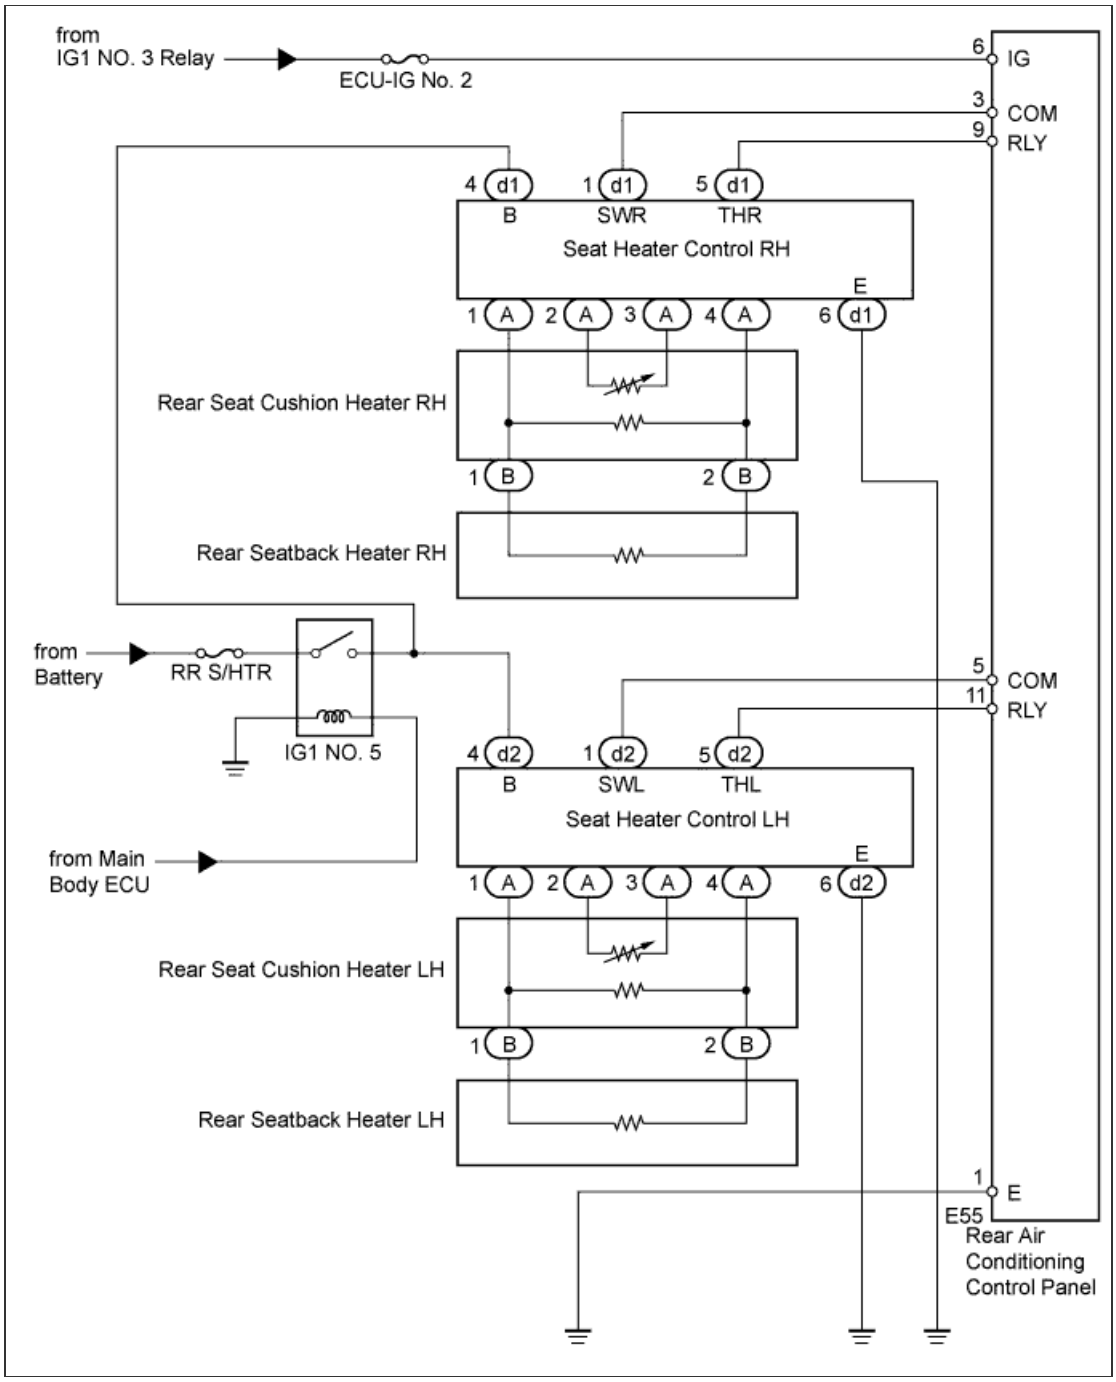
from
IG1 NO. 3 Relay
ECU-IG No. 2
6
IG
3
COM
9
RLY
4 d1
B
1 d1
SWR
5 d1
THR
Seat Heater Control RH
E
1 A
2 A
3 A
4 A
6 d1
Rear Seat Cushion Heater RH
1 B
2 B
Rear Seatback Heater RH
from
Battery
RR S/HTR
IG1 NO. 5
5
COM
11
RLY
4 d2
B
1 d2
SWL
5 d2
THL
Seat Heater Control LH
from Main
Body ECU
E
1 A
2 A
3 A
4 A
6 d2
Rear Seat Cushion Heater LH
1 B
2 B
Rear Seatback Heater LH
1
E
E55
Rear Air
Conditioning
Control Panel

for Preparation Click here

GENERAL

a. By operating the seat heater switch which is located in the console box, the temperature can be controlled within the range of 30 to 40°C (86 to 104°F).

b. Whether the seat heater is on or off can be determined by checking if the seat heater switch indicator light is on or off.

c. The seat heaters of both seats are controlled by the seat heater controls, which are located under the respective seat.

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Seat Heater System


Symptom	Suspected Area	See page
Both Front Seat Heater does not Operate	LH-IG fuse	-
	SEAT-HTR fuse	-
	Front seat heater switch	Click here
	Harness or connector	-
Front Seat Heater LH does not Operate	Seat heater control LH	Click here
	Front seat heater switch	Click here
	Front seat cushion heater LH	Click here
	Front seatback heater LH	Click here
	Harness or connector	-
Front Seat Heater RH does not Operate	Seat heater control RH	Click here
	Front seat heater switch	Click here
	Front seat cushion heater RH	Click here
	Front seatback heater RH	Click here
	Harness or connector	-
Both Rear Seat Heater does not Operate	ECU-IG No. 2 fuse	-
	RR S/HTR fuse	-
	IG1 NO. 5 relay	-
	Rear seat heater switch	-
	Harness or connector	-
Rear Seat Heater LH does not Operate	Seat heater control LH	-
	Rear seat heater switch	-
	Rear seat cushion heater LH (for 60/40 Split Seat Type 40 Side	Click here
	Rear seat cushion heater LH (for 60/40 Split Seat Type 60 Side	Click here
	Rear seatback heater LH (for 60/40 Split Seat Type 40 Side	Click here
	Rear seatback heater LH (for 60/40 Split Seat Type 60 Side	Click here
	Harness or connector	-
Rear Seat Heater RH does not Operate	Seat heater control RH	-
	Rear seat heater switch	-
	Rear seat cushion heater RH (for 60/40 Split Seat Type 40 Side	Click here
	Rear seat cushion heater RH (for 60/40 Split Seat Type 60 Side	Click here
	Rear seatback heater RH (for 60/40 Split Seat Type 40 Side	Click here
	Rear seatback heater RH (for 60/40 Split Seat Type 60 Side	Click here
	Harness or connector	-

for Preparation Click here

1. INSPECT SEAT HEATER CONTROL SUB-ASSEMBLY (for Front Side)

a. Disconnect the c13 and c1 heater control connectors.

b. Measure the resistance according to the value(s) in the table below.

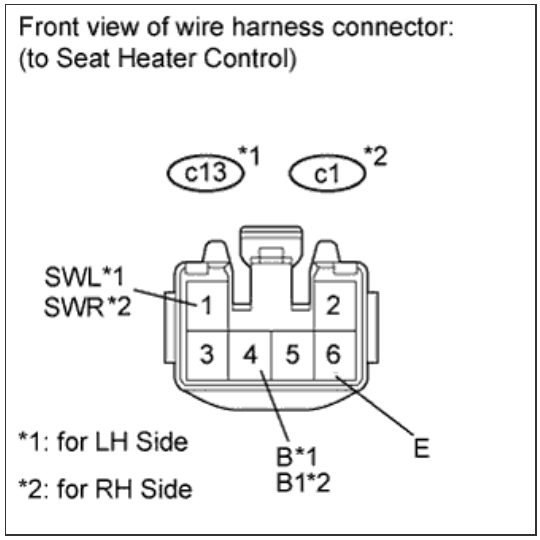

Standard Resistance:

for LH Side

Tester Connection	Specified Condition
c13-6 (E) - Body ground	Below 1 Ω

for RH Side

Tester Connection	Specified Condition
c1-6 (E) - Body ground	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

for LH Side

Tester Connection	Switch Condition	Specified Condition
c13-1 (SWL) - c13-6 (E)	Engine switch on (IG), seat heater switch off	Below 1 V
	Engine switch on (IG), seat heater switch on	11 to 14 V
c13-4 (B) - c13-6 (E)	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V


for RH Side

Tester Connection	Switch Condition	Specified Condition
c1-1 (SWR) - c1-6 (E)	Engine switch on (IG), seat heater switch off	Below 1 V
	Engine switch on (IG), seat heater switch on	11 to 14 V
c1-4 (B1) - c1-6 (E)	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

If the result is not as specified, there may be a malfunction on the wire harness side.

d. Connect the c13 and c1 heater control connectors.

e. Measure the voltage according to the value(s) in the table below.

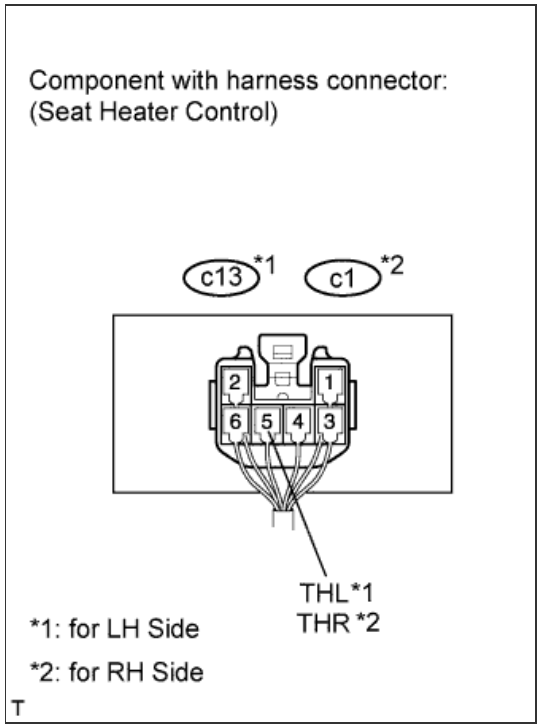

Standard Voltage:

for LH Side


Tester Connection	Switch Condition	Specified Condition
c13-5 (THL) - Body ground	Engine switch on (IG), seat heater switch on, volume Min→ Max	Gradual increase from below 1 V to 11 to 14 V


for RH Side

Tester Connection	Switch Condition	Specified Condition
c1-5 (THR) - Body ground	Engine switch on (IG), seat heater switch on, volume Min → Max	Gradual increase from below 1 V to 11 to 14 V


If the result is not as specified, the seat heater control may have a malfunction.

for Preparation Click here

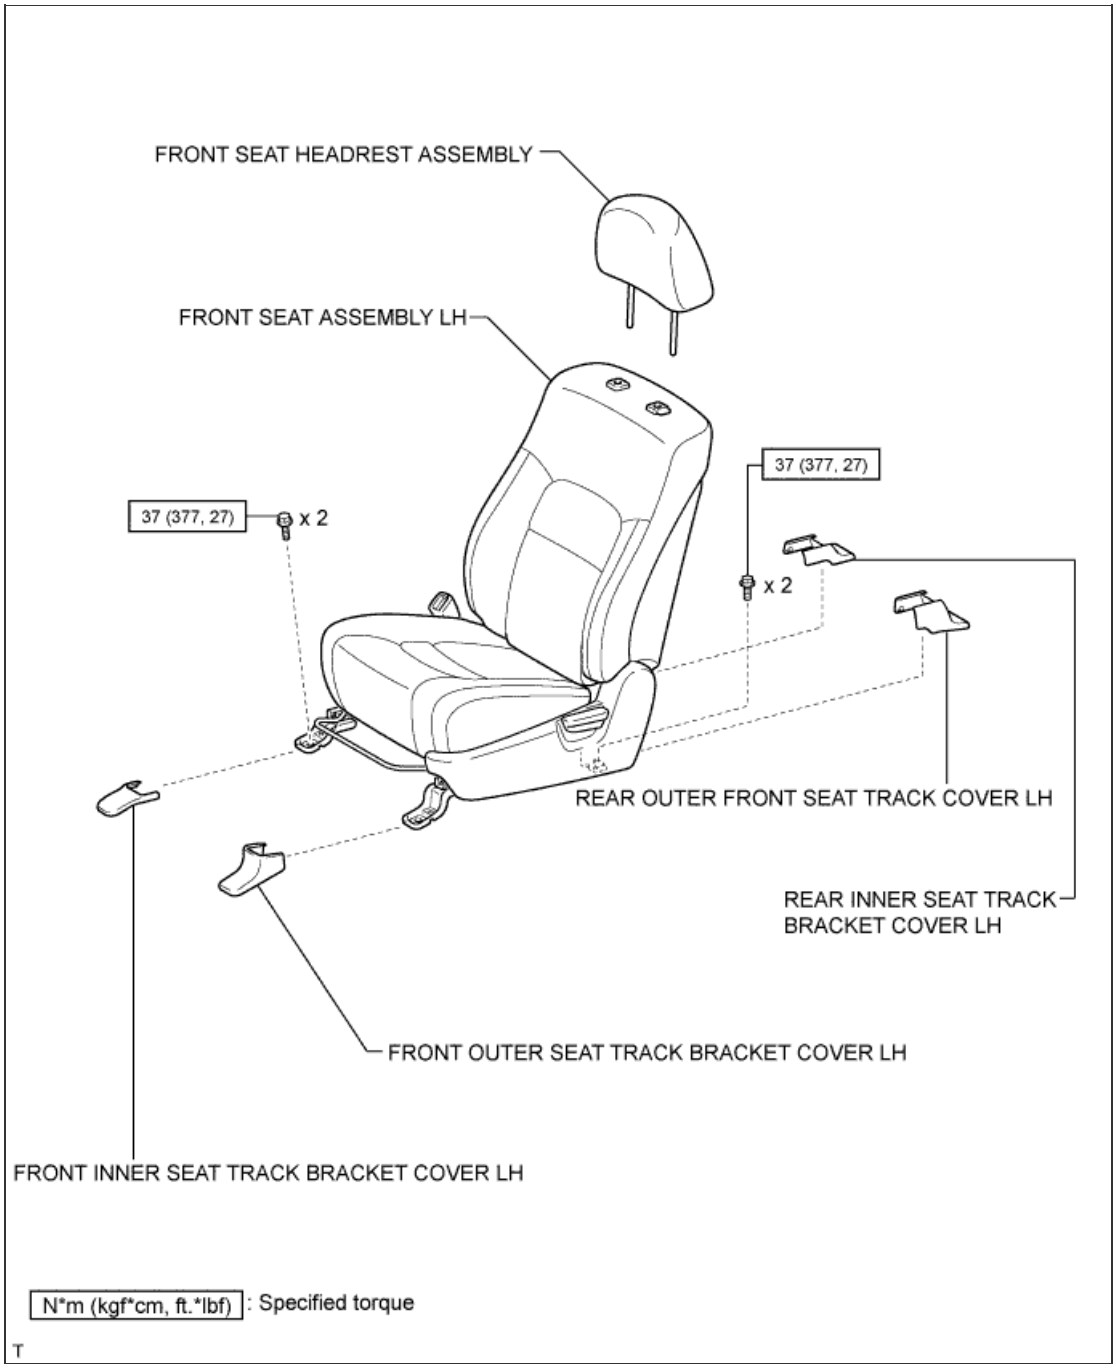


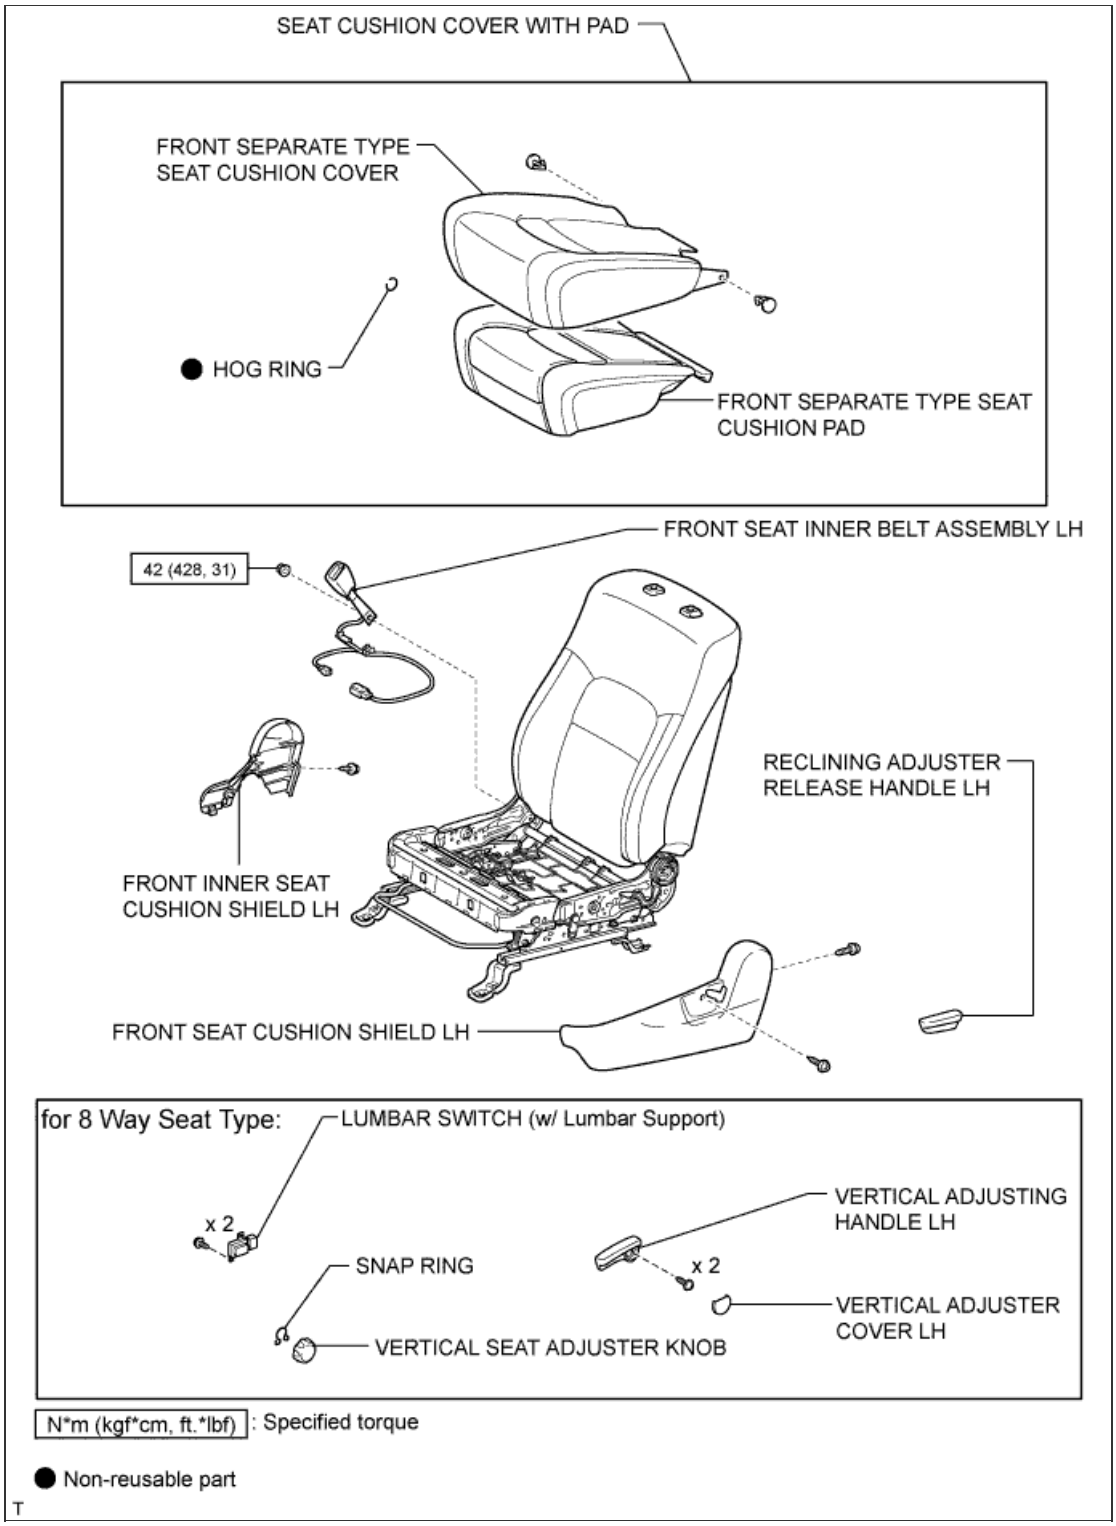
SEAT CUSHION COVER WITH PAD
FRONT SEPARATE TYPE SEAT CUSHION COVER
HOG RING
FRONT SEPARATE TYPE SEAT CUSHION PAD
FRONT SEAT INNER BELT ASSEMBLY LH
42 (428, 31)
RECLINING ADJUSTER RELEASE HANDLE LH
FRONT INNER SEAT CUSHION SHIELD LH
FRONT SEAT CUSHION SHIELD LH
for 8 Way Seat Type:
LUMBAR SWITCH (w/ Lumbar Support)
x 2
VERTICAL ADJUSTING HANDLE LH
SNAP RING
x 2
VERTICAL ADJUSTER COVER LH
VERTICAL SEAT ADJUSTER KNOB
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part


T

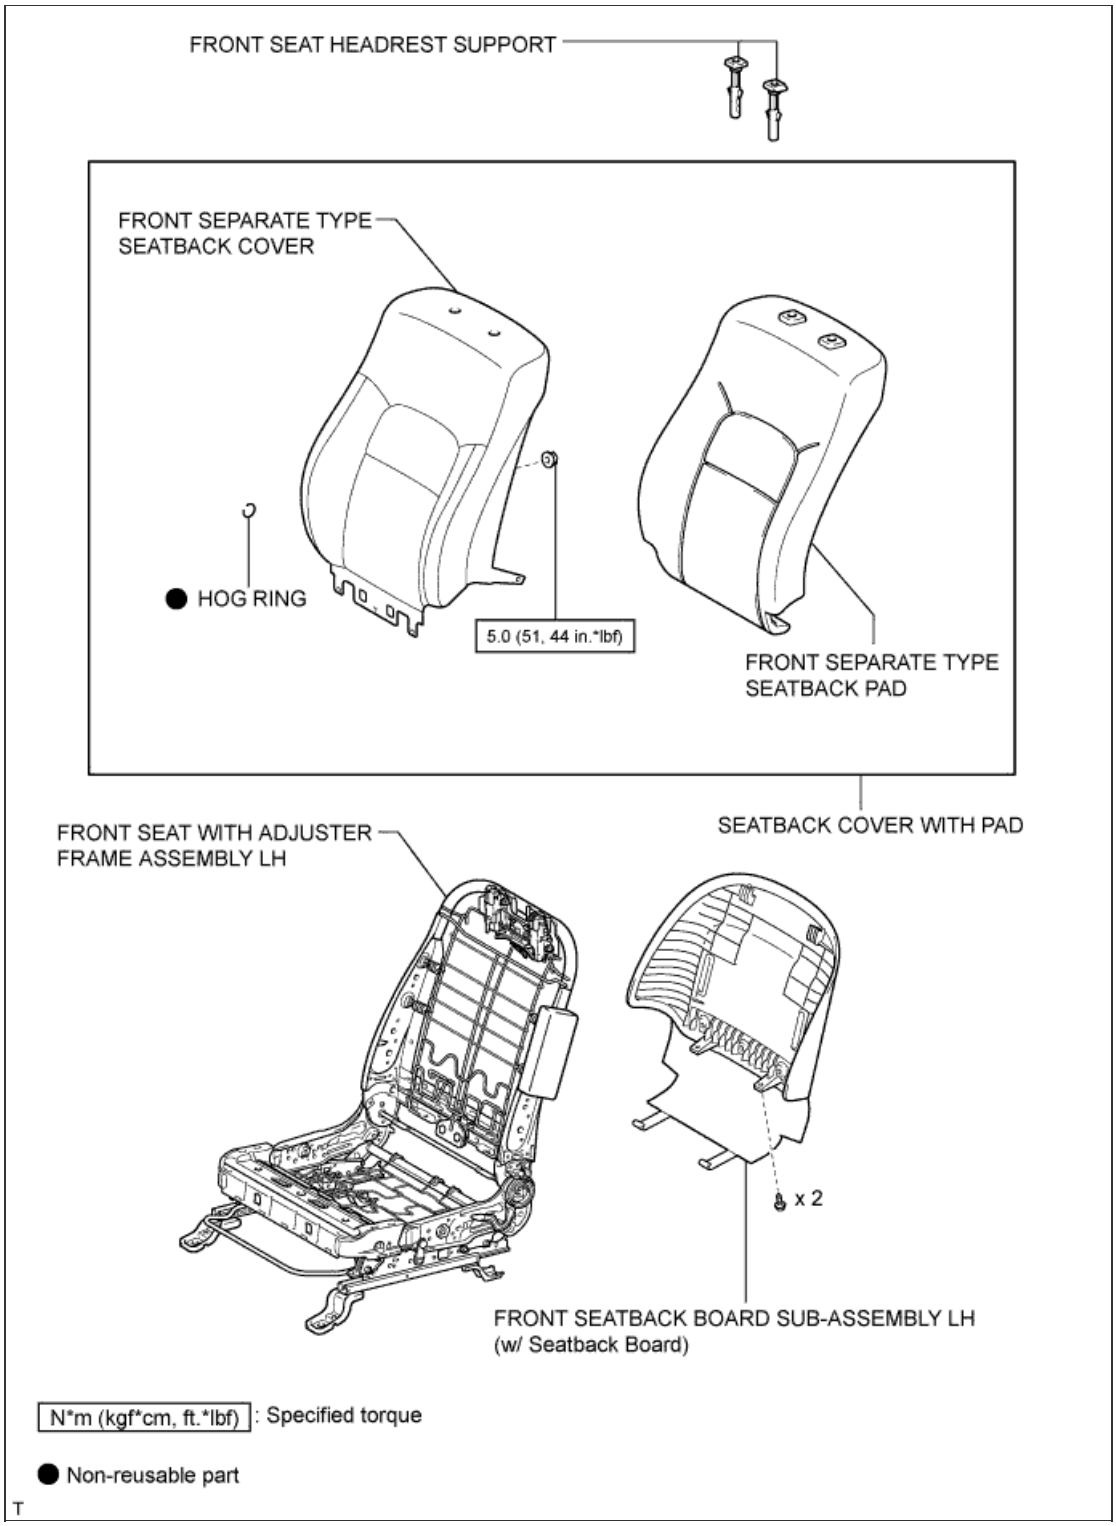
FRONT SEAT HEADREST SUPPORT
FRONT SEPARATE TYPE SEATBACK COVER
HOG RING
5.0 (51, 44 in.*lbf)
FRONT SEPARATE TYPE SEATBACK PAD
SEATBACK COVER WITH PAD
FRONT SEAT WITH ADJUSTER FRAME ASSEMBLY LH
x 2
FRONT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part

T

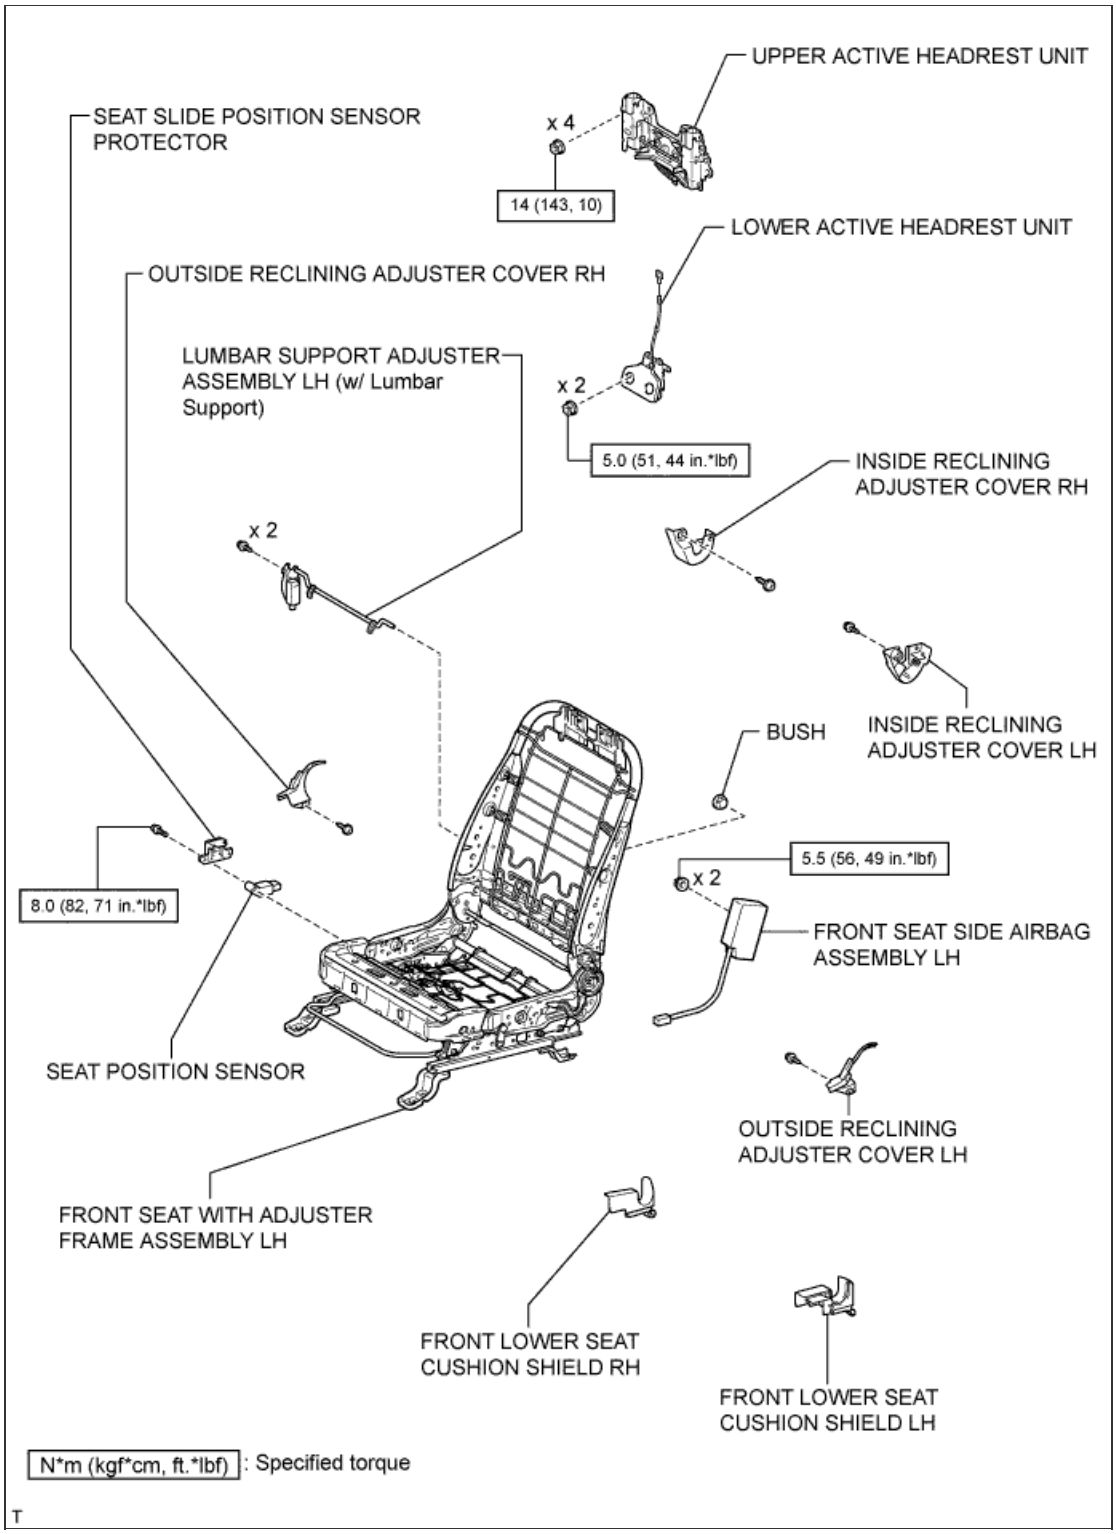

UPPER ACTIVE HEADREST UNIT
SEAT SLIDE POSITION SENSOR PROTECTOR
x 4
14 (143, 10)
LOWER ACTIVE HEADREST UNIT
OUTSIDE RECLINING ADJUSTER COVER RH
LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (w/ Lumbar Support)
x 2
5.0 (51, 44 in.*lbf)
INSIDE RECLINING ADJUSTER COVER RH
x 2
INSIDE RECLINING ADJUSTER COVER LH
BUSH
5.5 (56, 49 in.*lbf)
x 2
8.0 (82, 71 in.*lbf)
FRONT SEAT SIDE AIRBAG ASSEMBLY LH
SEAT POSITION SENSOR
OUTSIDE RECLINING ADJUSTER COVER LH
FRONT SEAT WITH ADJUSTER FRAME ASSEMBLY LH
FRONT LOWER SEAT CUSHION SHIELD RH
FRONT LOWER SEAT CUSHION SHIELD LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T

for 4 Way Seat Type:

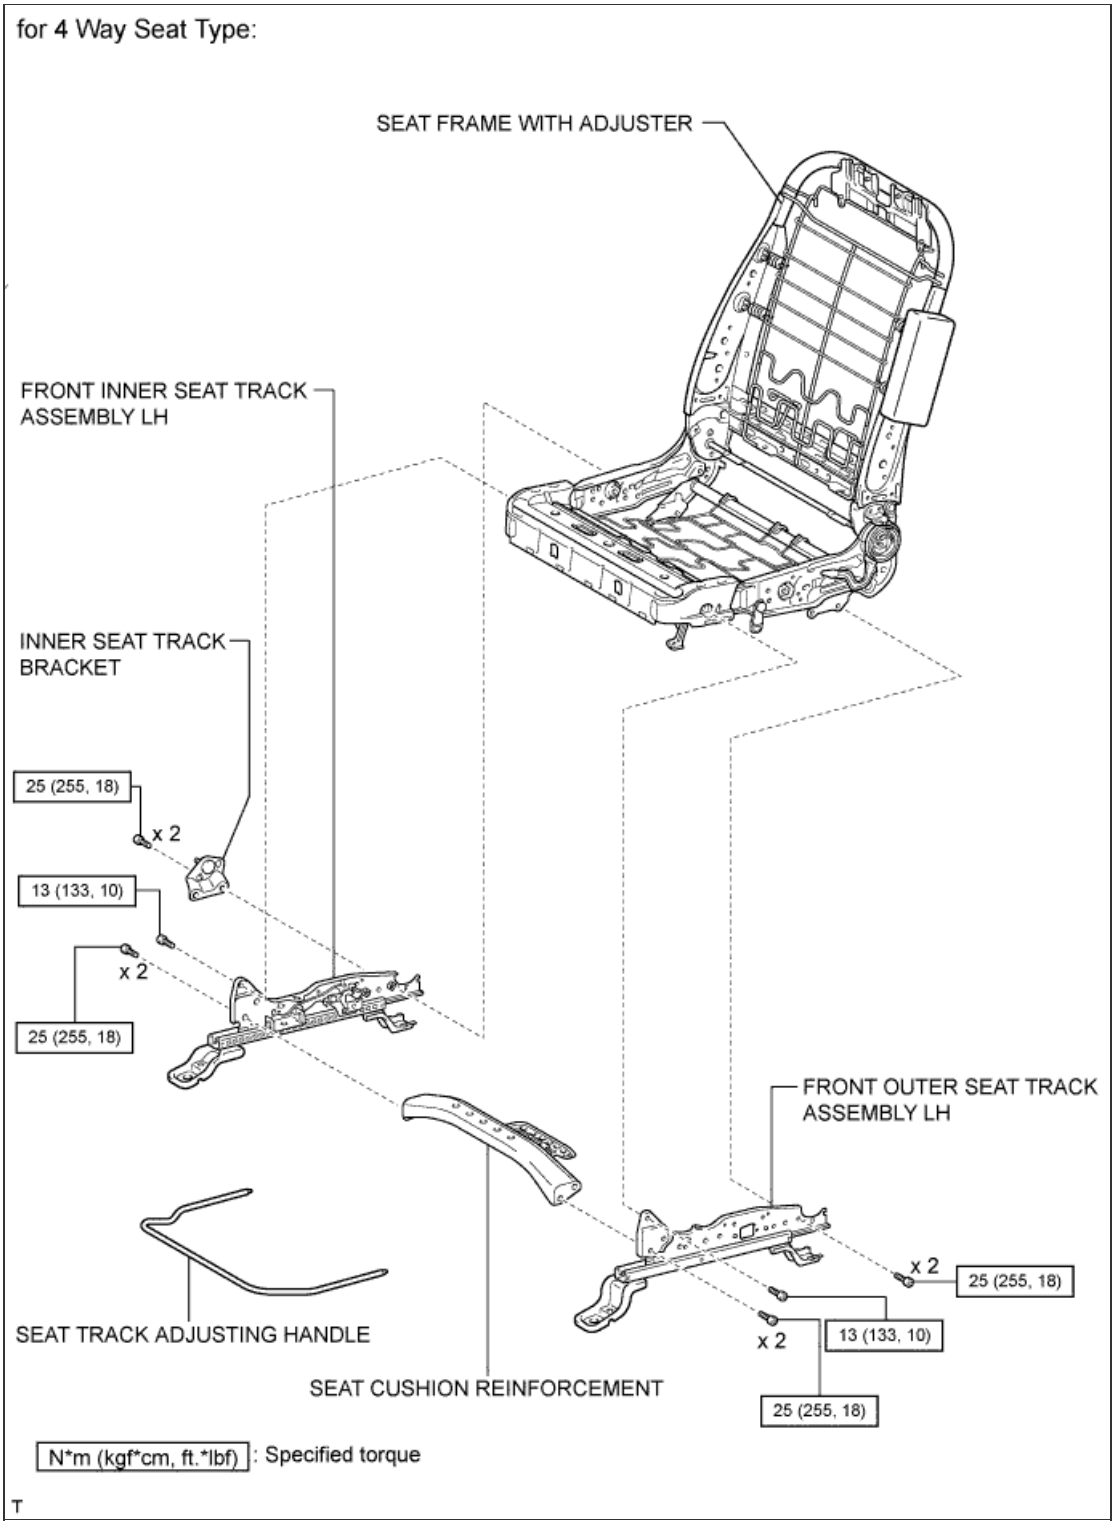

T

for 8 Way Seat Type:

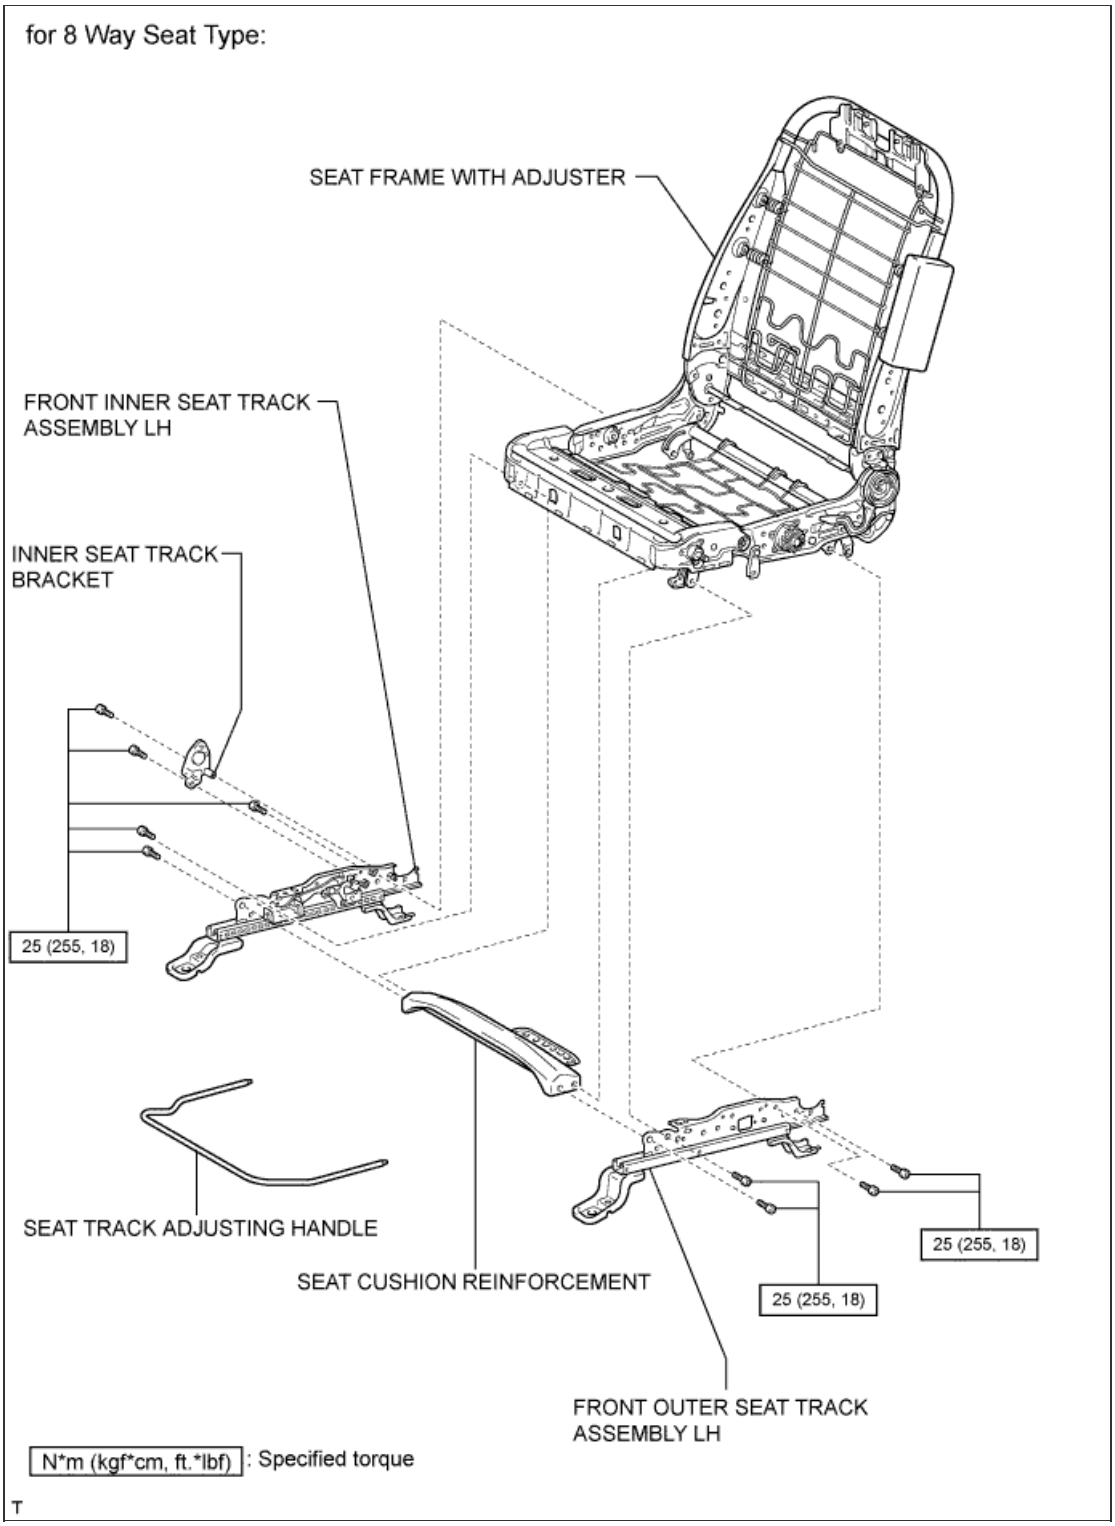

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT HEADREST ASSEMBLY


2. REMOVE REAR OUTER FRONT SEAT TRACK COVER LH

a. Operate the seat track adjusting handle to move the seat to the foremost position.

b. Using a screwdriver, detach the 3 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

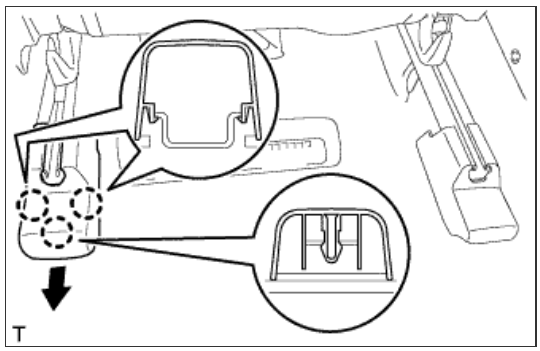


3. REMOVE REAR INNER SEAT TRACK BRACKET COVER LH

a. Using a screwdriver, detach the 3 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

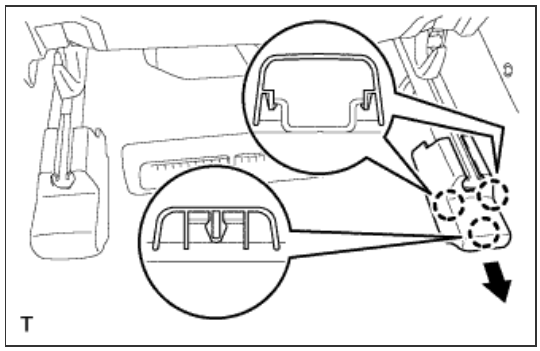


4. REMOVE FRONT OUTER SEAT TRACK BRACKET COVER LH

a. Operate the seat track adjusting handle to move the seat to the rearmost position.

b. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

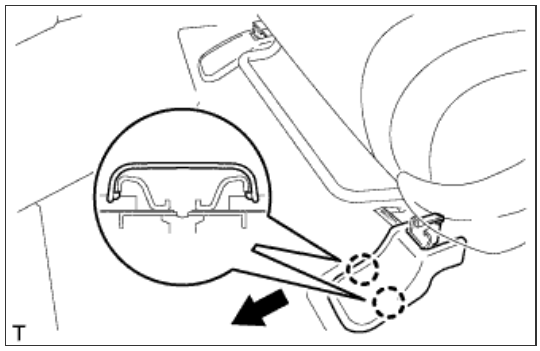


5. REMOVE FRONT INNER SEAT TRACK BRACKET COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

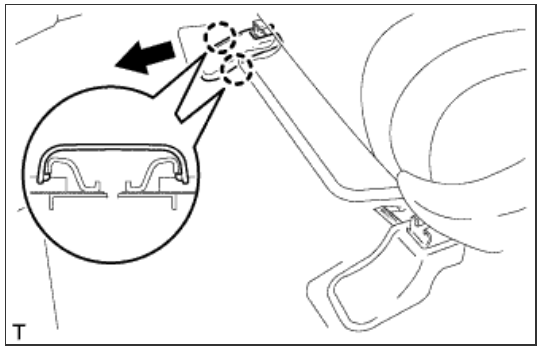

6. REMOVE FRONT SEAT ASSEMBLY LH

a. Disable the Autoaway/Return function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:


Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.

b. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully retract and tilt up the steering column assembly.

c. Turn the engine switch off.

d. Remove the 2 bolts.

e. Operate the seat track adjusting handle to move the seat to the foremost position.

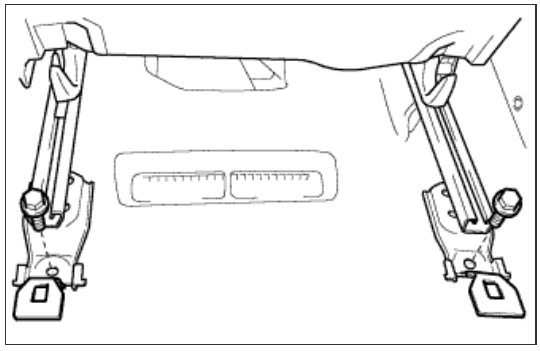

f. Remove the 2 bolts.

g. Operate the seat track adjusting handle to move the seat to the center position, and operate the reclining adjusting handle and move the seatback to the upright position.

h. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

i. Disconnect the connectors under the seat.

j. Remove the front seat assembly.

NOTICE:

Be careful not to damage the vehicle body.

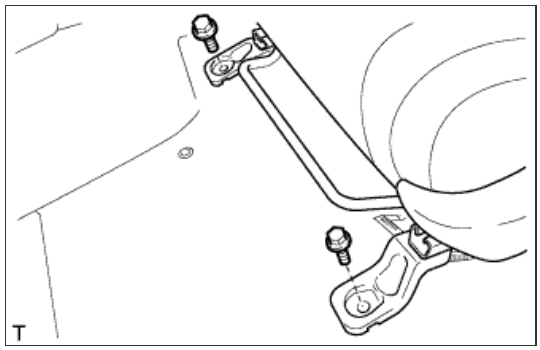

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT HEADREST ASSEMBLY


2. REMOVE REAR OUTER FRONT SEAT TRACK COVER LH

a. Operate the seat track adjusting handle to move the seat to the foremost position.

b. Using a screwdriver, detach the 3 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

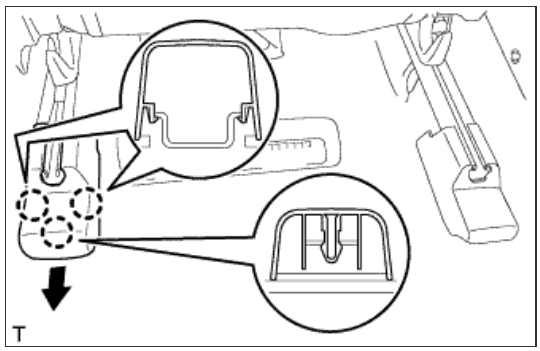


3. REMOVE REAR INNER SEAT TRACK BRACKET COVER LH

a. Using a screwdriver, detach the 3 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

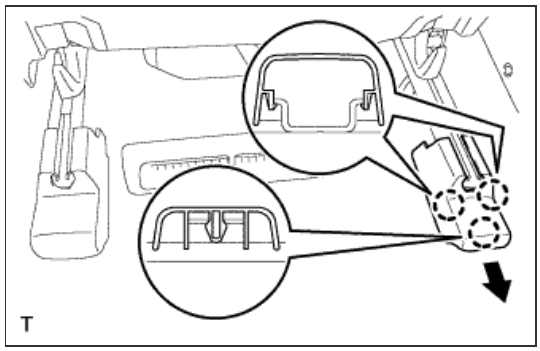


4. REMOVE FRONT OUTER SEAT TRACK BRACKET COVER LH

a. Operate the seat track adjusting handle to move the seat to the rearmost position.

b. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

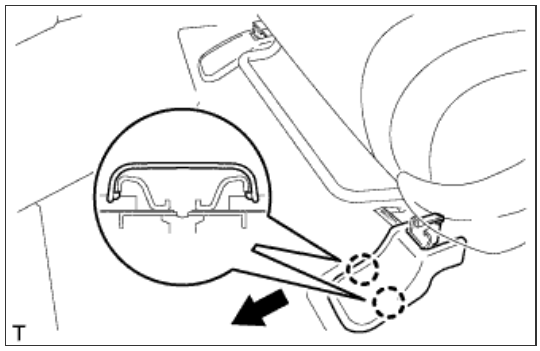


5. REMOVE FRONT INNER SEAT TRACK BRACKET COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

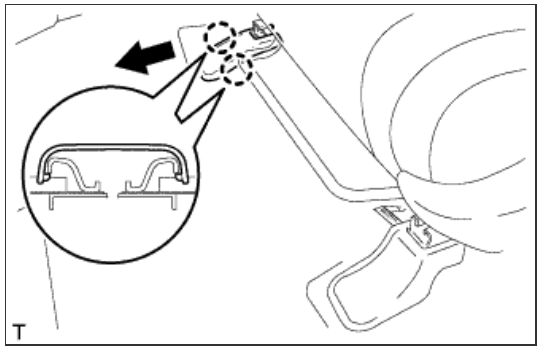

6. REMOVE FRONT SEAT ASSEMBLY LH

a. Disable the Autoaway/Return function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:


Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.

b. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully retract and tilt up the steering column assembly.

c. Turn the engine switch off.

d. Remove the 2 bolts.

e. Operate the seat track adjusting handle to move the seat to the foremost position.

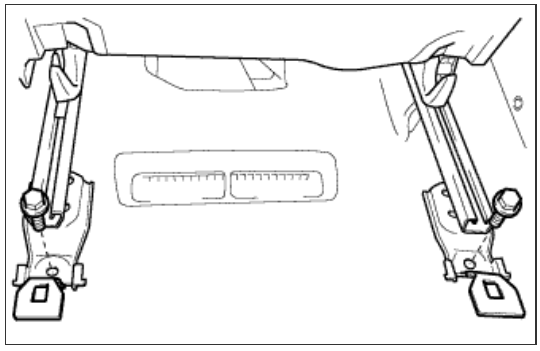

f. Remove the 2 bolts.

g. Operate the seat track adjusting handle to move the seat to the center position, and operate the reclining adjusting handle and move the seatback to the upright position.

h. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

i. Disconnect the connectors under the seat.

j. Remove the front seat assembly.

NOTICE:

Be careful not to damage the vehicle body.

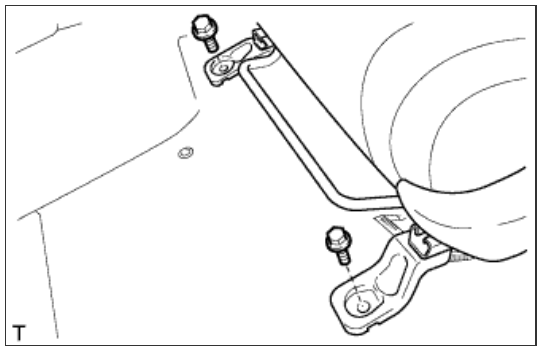

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:


- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the vertical adjuster cover.


HINT:

Tape the screwdriver tip before use.

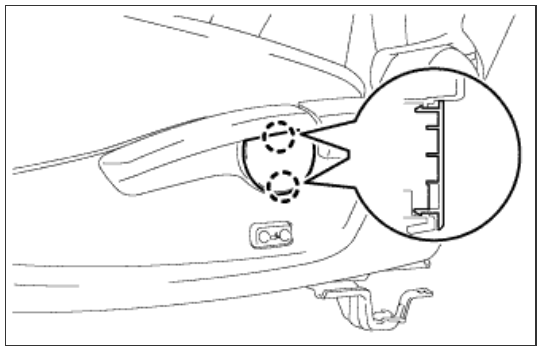


2. REMOVE VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Remove the 2 screws and vertical adjusting handle.

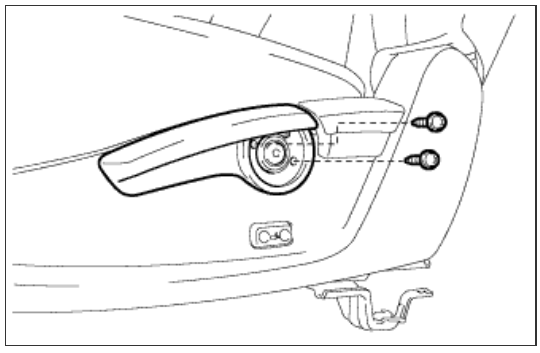

3. REMOVE VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)

a. Remove the snap ring and vertical seat adjuster knob.

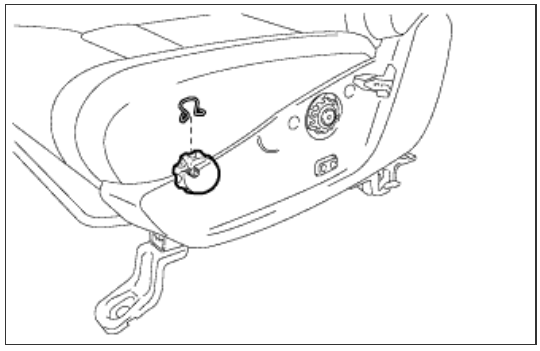


4. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

a. Lift the reclining adjuster release handle.

b. Using a screwdriver, detach the claw and remove the reclining adjuster release handle.


HINT:

Tape the screwdriver tip before use.

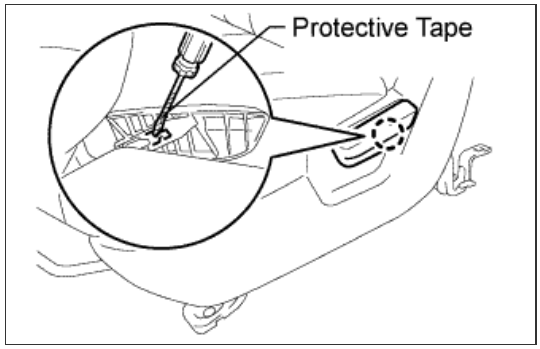


5. REMOVE FRONT SEAT CUSHION SHIELD LH

a. w/ Seatback Board:
Remove the 2 rubber bands from the hooks.

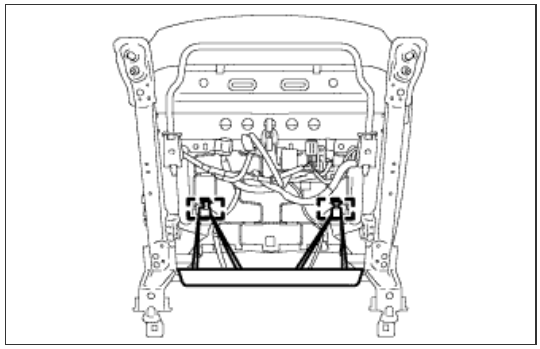


b. w/o Seatback Board:
Remove the 2 rubber bands from the hooks.

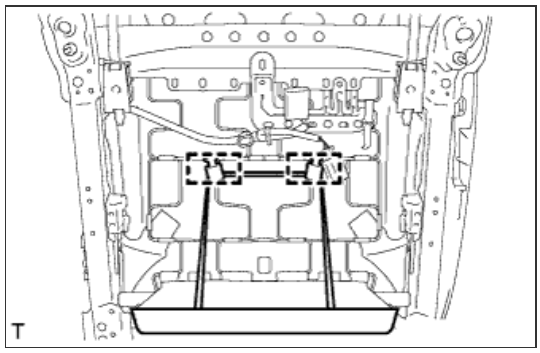

c. for 4 Way Seat Type:

i. Remove the 2 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.

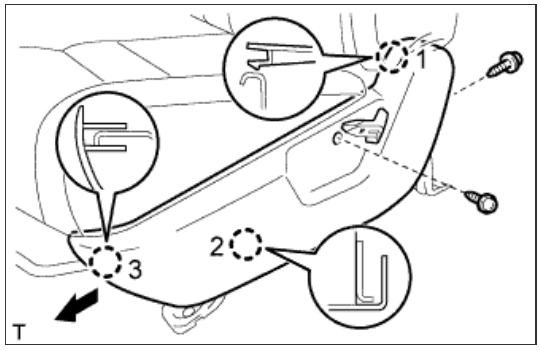


d. for 8 Way Seat Type:

i. Remove the 3 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.


e. w/ Lumbar Support:

Disconnect the lumbar switch connector.

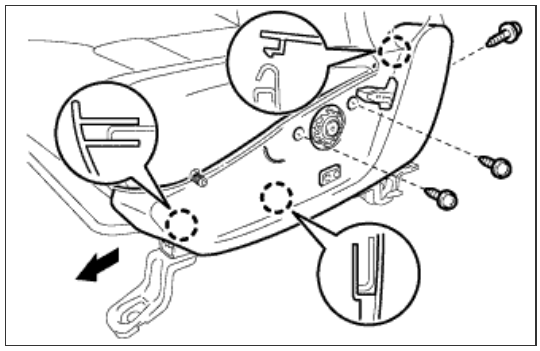

6. REMOVE LUMBAR SWITCH (w/ Lumbar support)


a. Remove the 2 screws and switch.

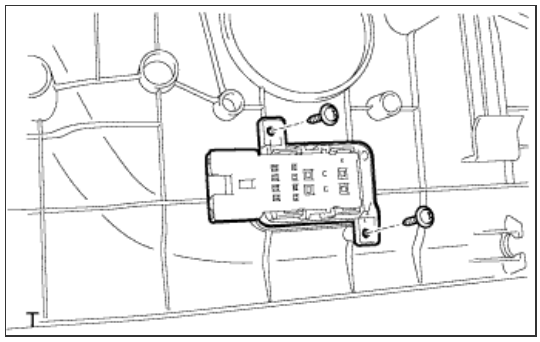

7. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

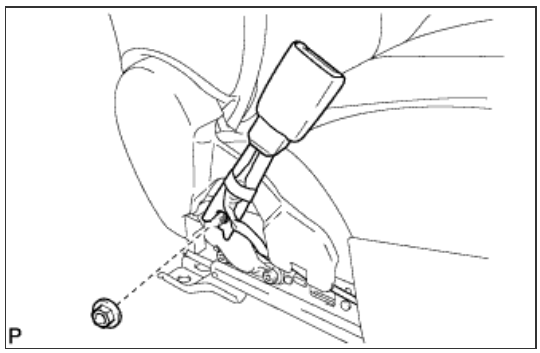

8. REMOVE FRONT INNER SEAT CUSHION SHIELD LH


a. Remove the screw.

b. Detach the claw and clip, and then remove the cushion shield.

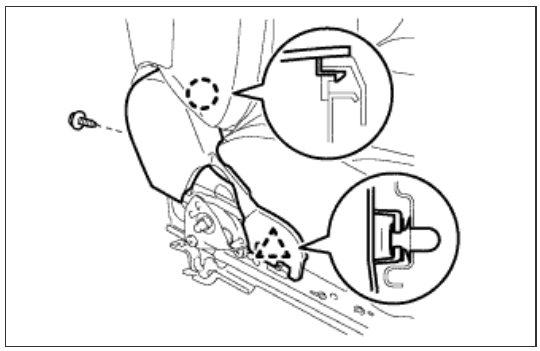


9. REMOVE SEAT CUSHION COVER WITH PAD

a. Using a clip remover, remove the 2 clips.

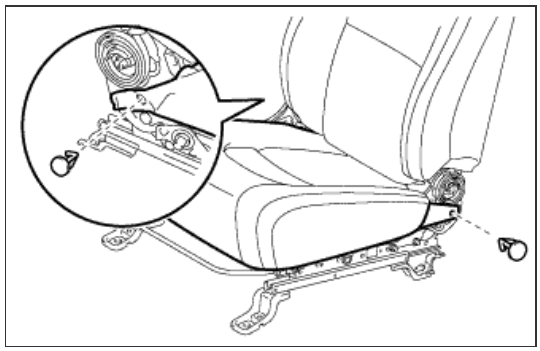


b. Detach the wire harness clamp.

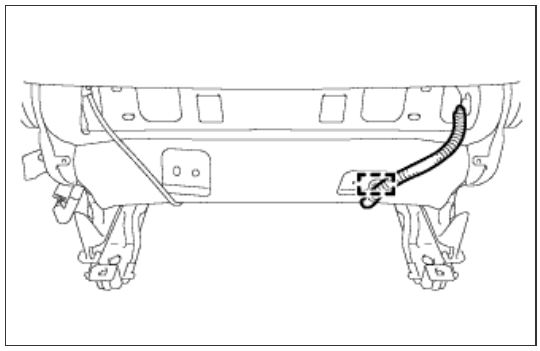

c. for Front Passenger Side:


i. Disconnect the seat belt warning sensor connector.

ii. Detach the 2 clamps and remove the seat belt warning sensor connector.

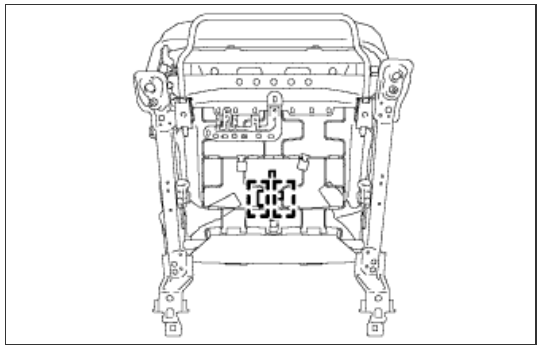


d. Bend the 2 seat frame claws upward.

e. Detach the hooks and remove the seat cushion cover with pad.

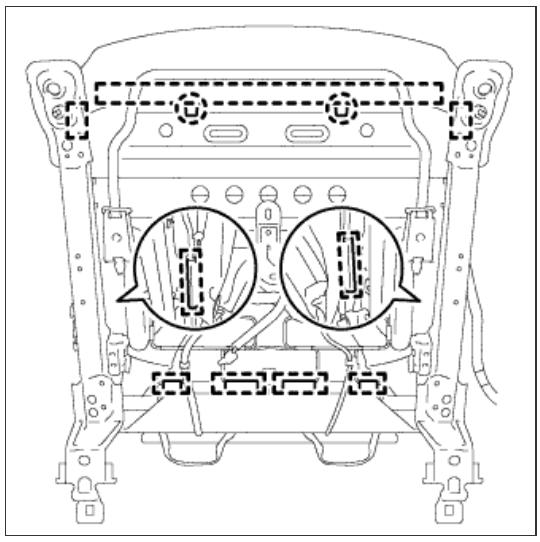

10. REMOVE FRONT SEPARATE TYPE SEAT CUSHION COVER


a. Remove the hog rings and front seat cushion cover.

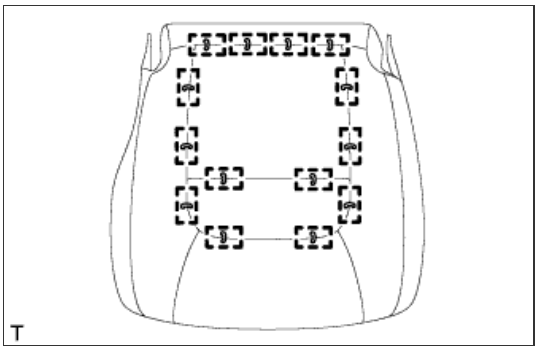

11. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

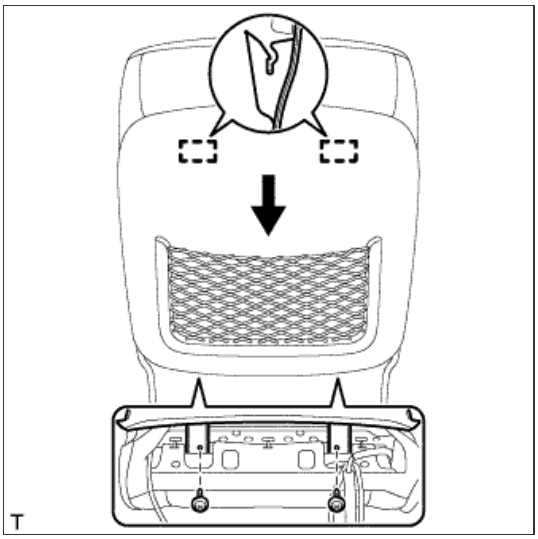

12. REMOVE FRONT SEAT HEADREST SUPPORT (w/ Active Headrest)


a. Detach the 4 claws and remove the 2 headrest supports.

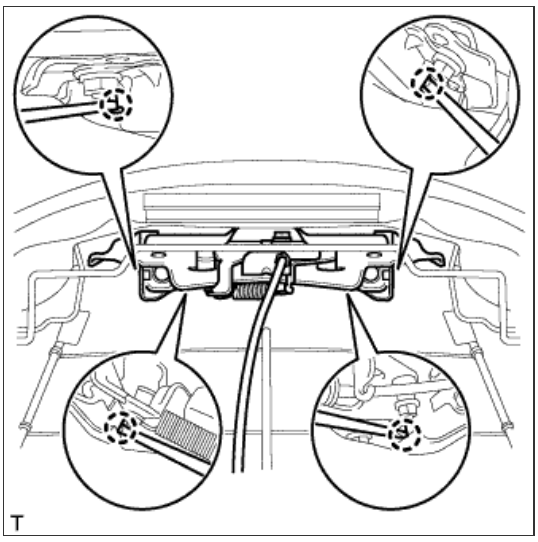


13. REMOVE SEATBACK COVER WITH PAD

a. w/ Seatback Board:

i. Remove the 3 hog rings and detach the 9 hooks.

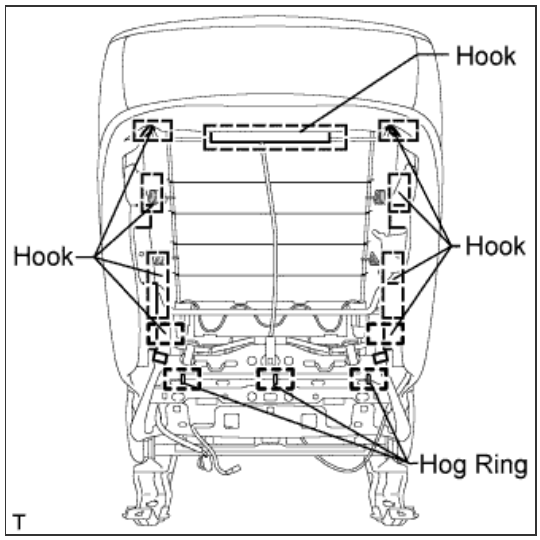


ii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

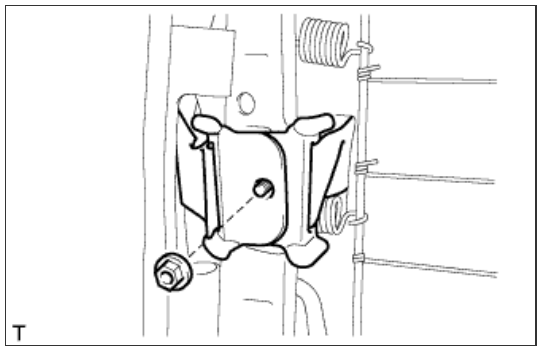


b. w/o Seatback Board:


i. Remove the 3 hog rings.

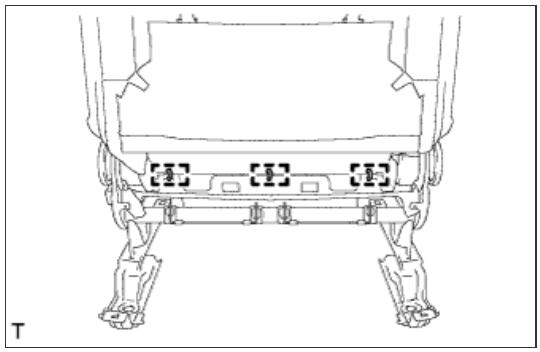

ii. Open the 2 fasteners, and then open the seatback cover.

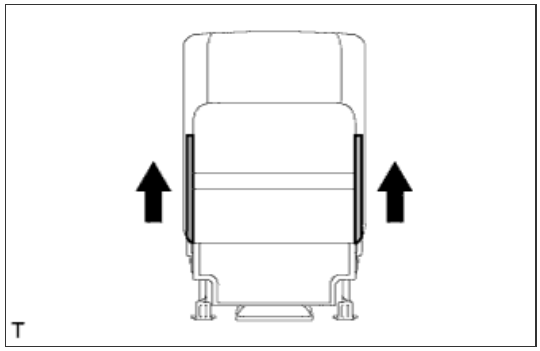


iii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

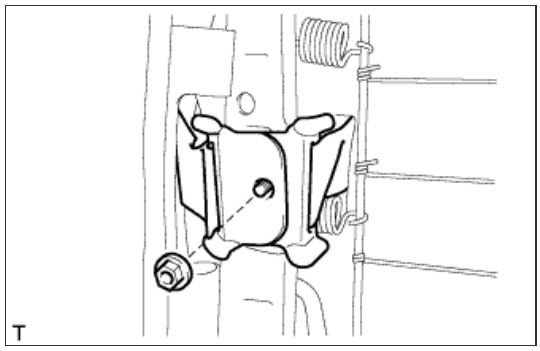


iv. Detach the 4 claws and remove the 2 headrest supports.

c. Remove the seatback cover with pad from the seatback frame.

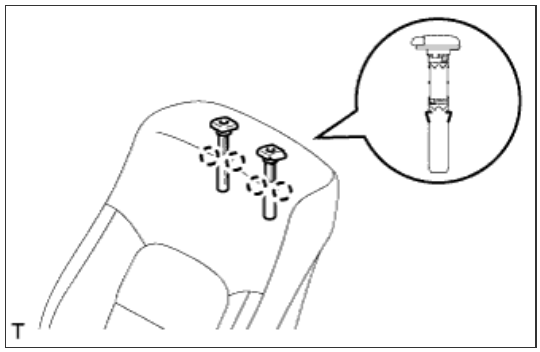


14. REMOVE FRONT SEPARATE TYPE SEATBACK COVER

a. w/ Front Seat Side Airbag:
Disconnect the seatback cover bracket from the seatback pad.

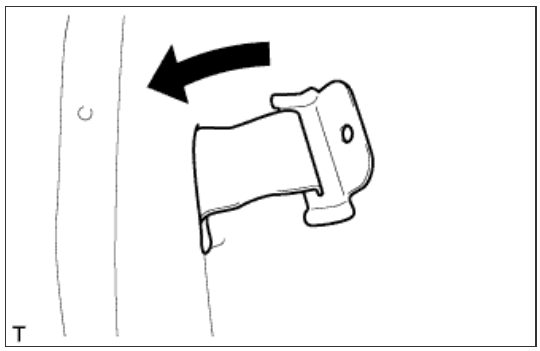

b. Remove the hog rings.

c. Detach the fastening tape and remove the seatback cover.

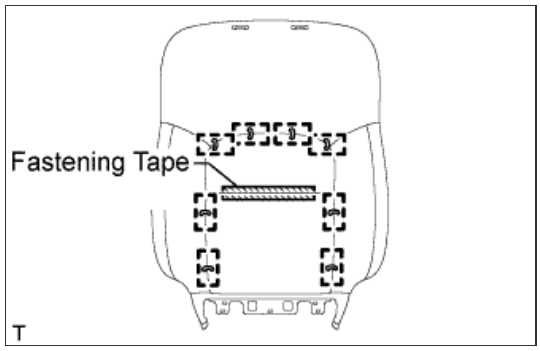


15. REMOVE INSIDE RECLINING ADJUSTER COVER LH

a. Detach the wire harness clamp.

b. Remove the screw.

c. Detach the claw and remove the reclining adjuster cover.

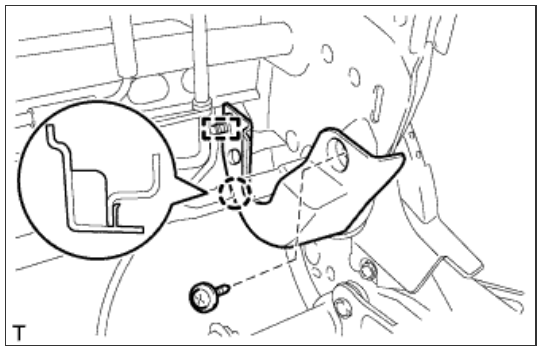

16. REMOVE INSIDE RECLINING ADJUSTER COVER RH


a. Detach the wire harness clamp.

b. Remove the screw.

c. Detach the claw and remove the reclining adjuster cover.

17. REMOVE OUTSIDE RECLINING ADJUSTER COVER LH

a. Remove the screw and reclining adjuster cover.

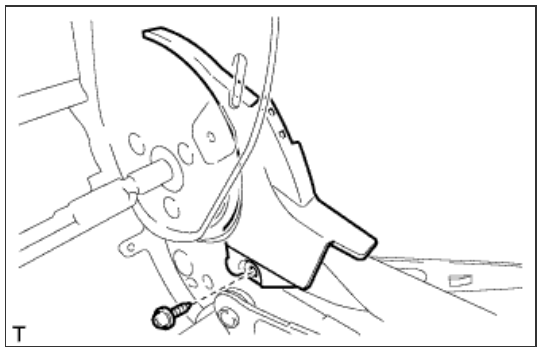


18. REMOVE OUTSIDE RECLINING ADJUSTER COVER RH

a. Remove the screw and reclining adjuster cover.

19. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (w/Lumbar Support)


a. Remove the 4 springs.

b. Detach the 4 hooks and remove the seatback spring.

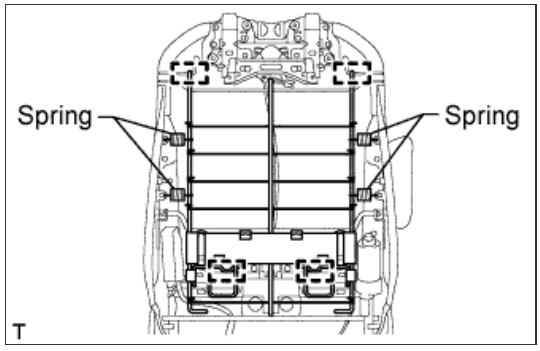


c. Disconnect the lumbar support adjuster connector.

d. Remove the 2 screws and lumbar support adjuster.

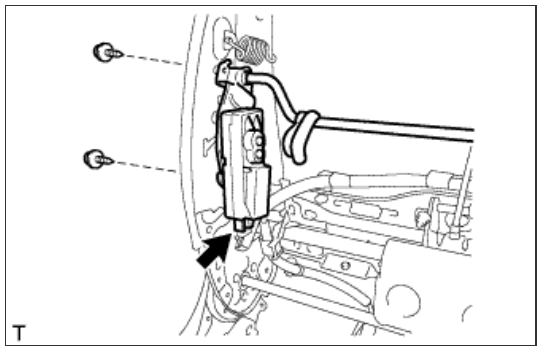


e. Detach the 3 claws and remove the bush from the seat frame.

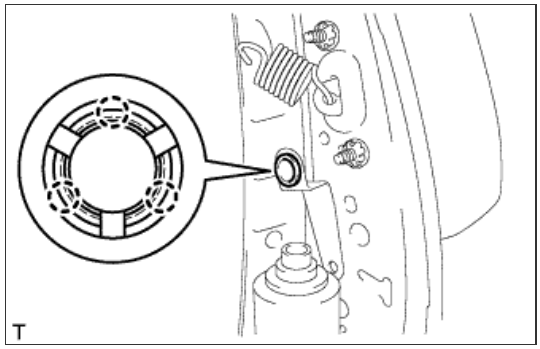


20. REMOVE LOWER ACTIVE HEADREST UNIT (w/ Active Headrest)

a. Remove the 6 nuts, and then remove the lower active headrest unit together with the upper active headrest unit.

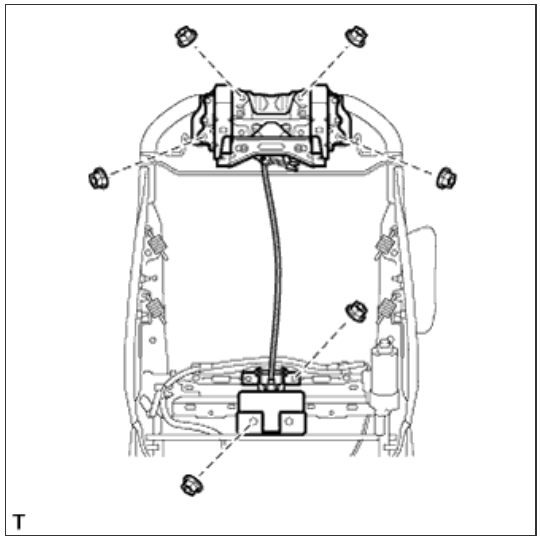


21. REMOVE UPPER ACTIVE HEADREST UNIT (w/ Active Headrest)

a. Remove the nut and cable clamp to remove the upper active headrest unit from the lower active headrest unit.

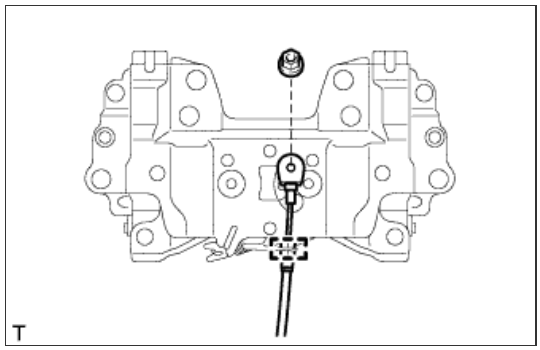

22. REMOVE FRONT LOWER SEAT CUSHION SHIELD LH

a. Detach the claw and remove the lower seat cushion shield.

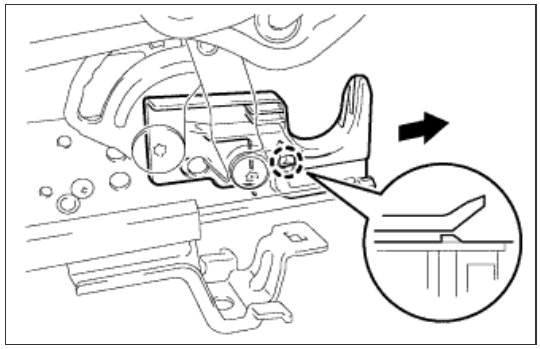


23. REMOVE FRONT LOWER SEAT CUSHION SHIELD RH

a. Detach the claw and remove the lower seat cushion shield.


24. REMOVE SEAT POSITION SENSOR

a. Using a T30 TOR socket wrench, remove the screw and seat position sensor with sensor protector.

b. Disconnect the connector.

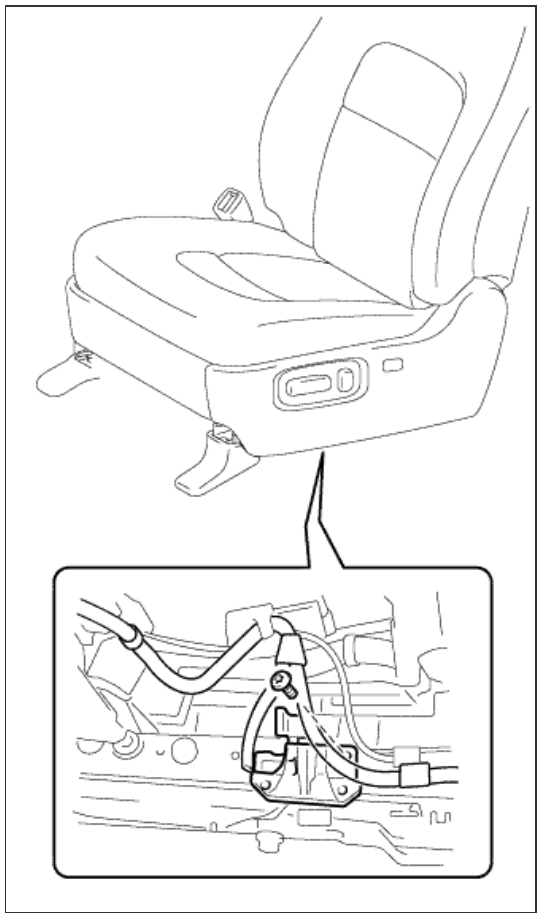


c. Remove the seat slide position sensor protector from the seat position sensor.

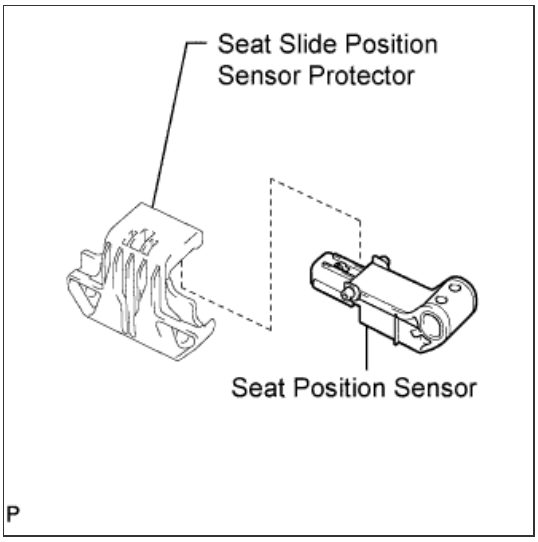

25. REMOVE FRONT SEAT SIDE AIRBAG ASSEMBLY LH

a. Detach the 5 clamps and disconnect the wire harness.

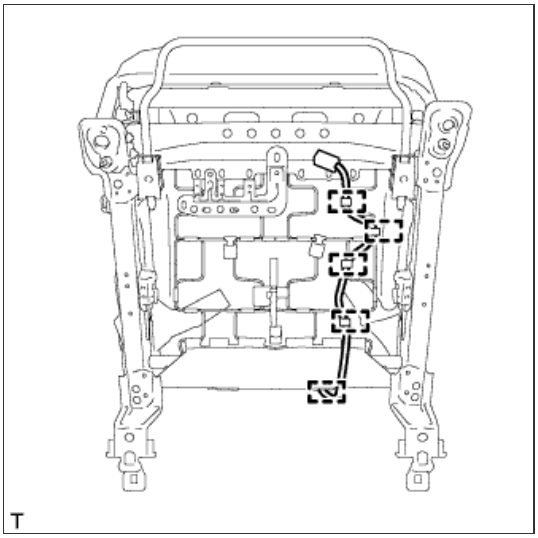


b. Detach the 2 clamps and disconnect the wire harness.

c. Remove the 2 nuts and front seat side airbag assembly L .

CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.

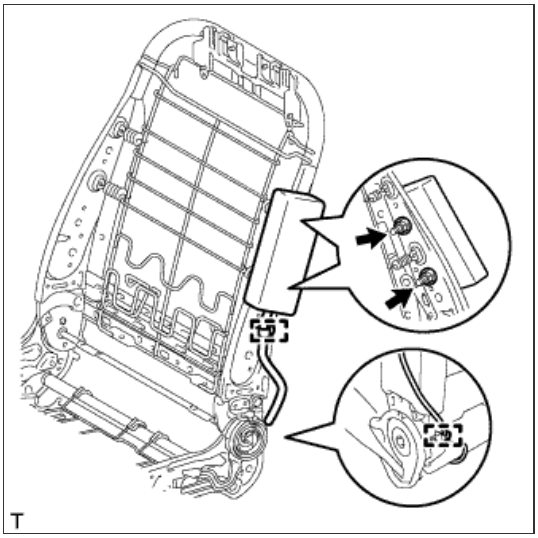


26. REMOVE FRONT SEAT WIRE LH


27. REMOVE FRONT INNER SEAT TRACK ASSEMBLY LH

a. for 4 Way Seat Type:


i. Using a T40 TOR socket, remove the 2 bolts and inner seat track bracket.

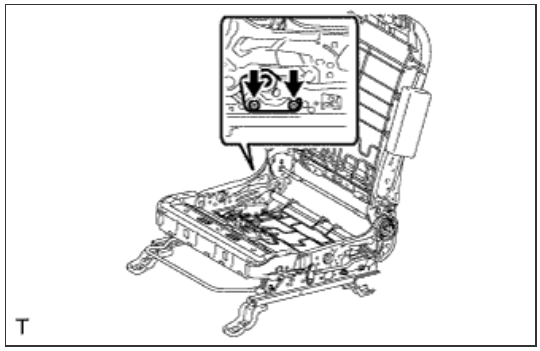

ii. Using a T40 TOR socket, remove the 4 bolts and seat frame with adjuster.

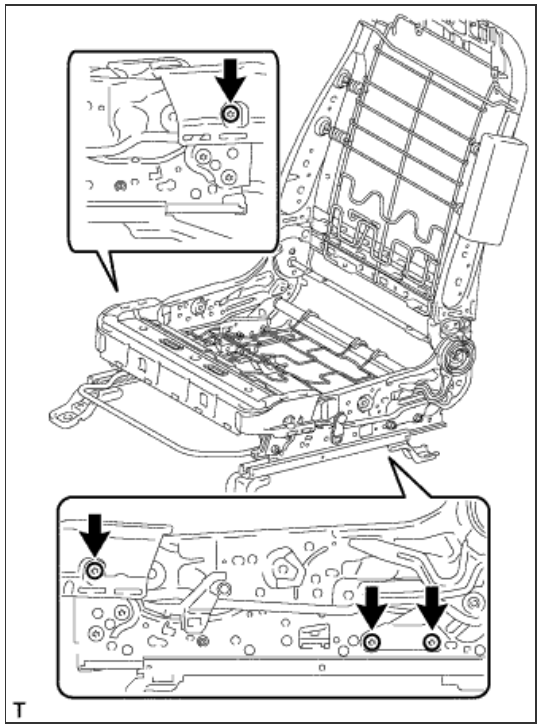


iii. Using a T40 TOR socket, remove the 4 bolts and reinforcement.

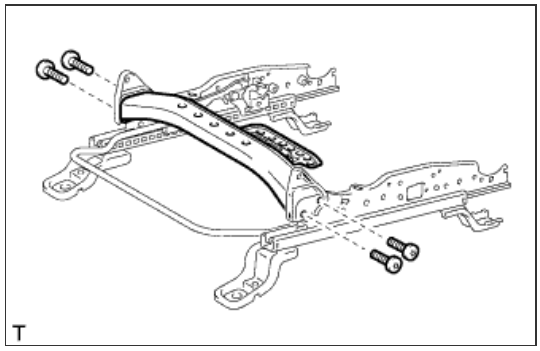


b. for 8 Way Seat Type:

i. Remove the 2 springs.


ii. Using a T40 TOR socket, remove the 3 bolts and inner seat track bracket.

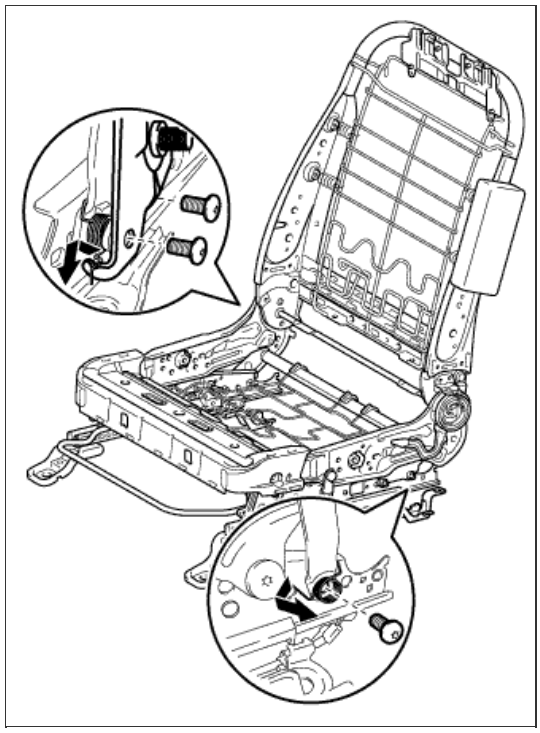


iii. Using a T40 TOR socket, remove the 4 bolts and seat frame with adjuster.

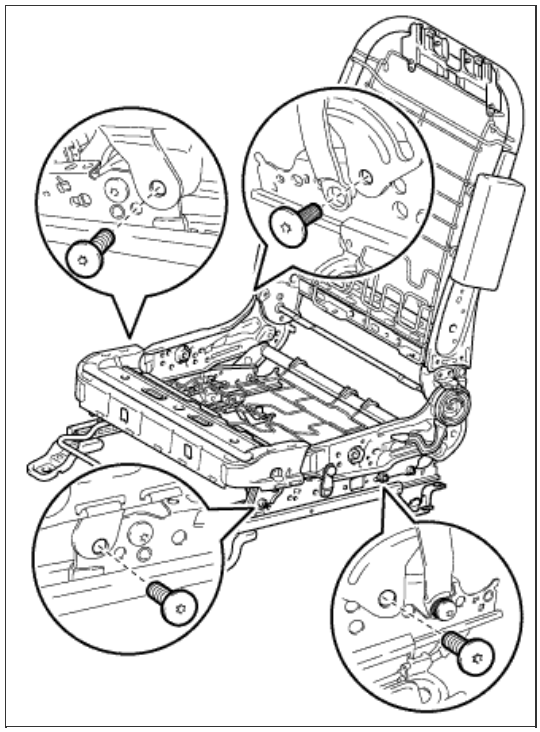

iv. Using a T40 TOR socket, remove the 2 bolts and reinforcement.

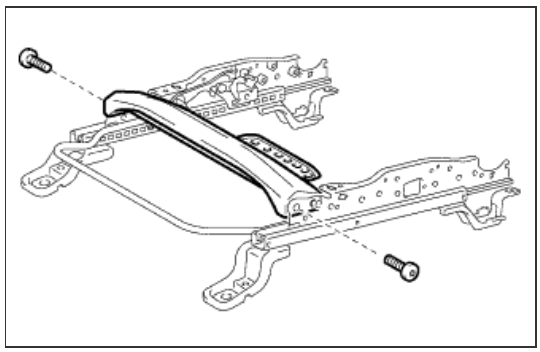

c. Using a screwdriver, detach the 2 springs and remove the seat track adjusting handle as shown in the illustration.

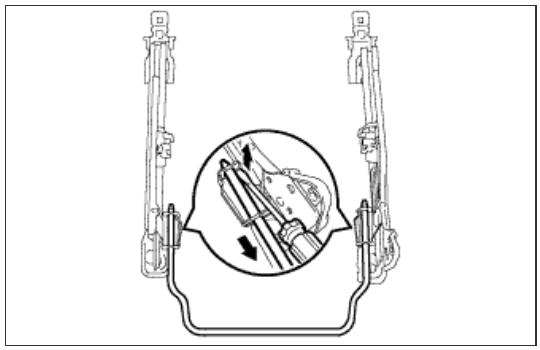

28. REMOVE FRONT OUTER SEAT TRACK ASSEMBLY LH

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:


- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the vertical adjuster cover.


HINT:

Tape the screwdriver tip before use.

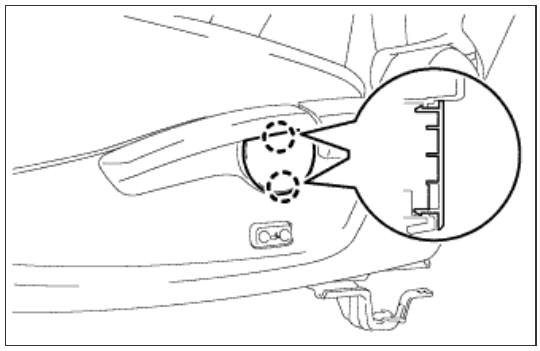


2. REMOVE VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Remove the 2 screws and vertical adjusting handle.

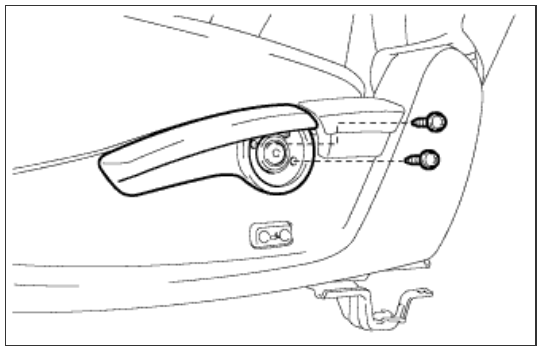

3. REMOVE VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)

a. Remove the snap ring and vertical seat adjuster knob.

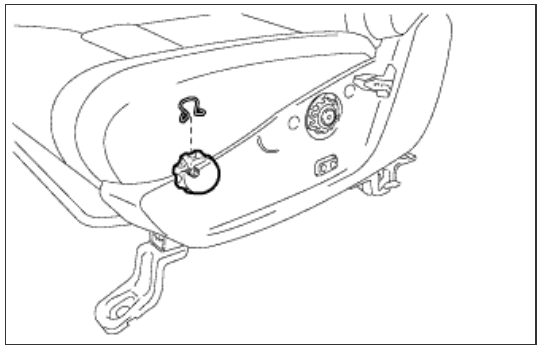


4. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

a. Lift the reclining adjuster release handle.

b. Using a screwdriver, detach the claw and remove the reclining adjuster release handle.


HINT:

Tape the screwdriver tip before use.

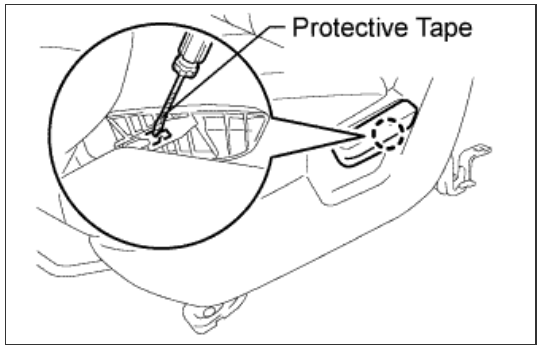


5. REMOVE FRONT SEAT CUSHION SHIELD LH

a. w/ Seatback Board:
Remove the 2 rubber bands from the hooks.

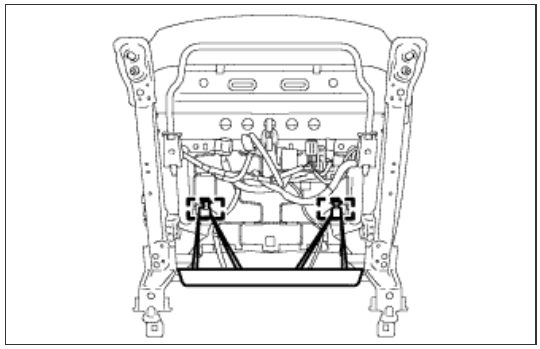


b. w/o Seatback Board:
Remove the 2 rubber bands from the hooks.

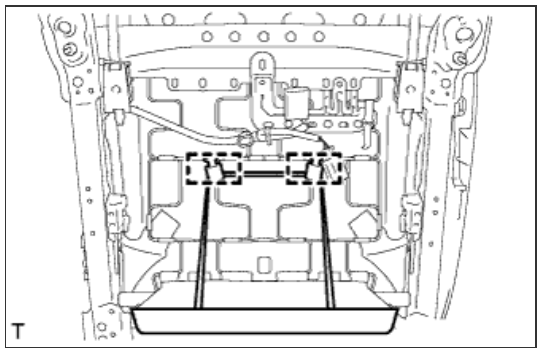

c. for 4 Way Seat Type:

i. Remove the 2 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.

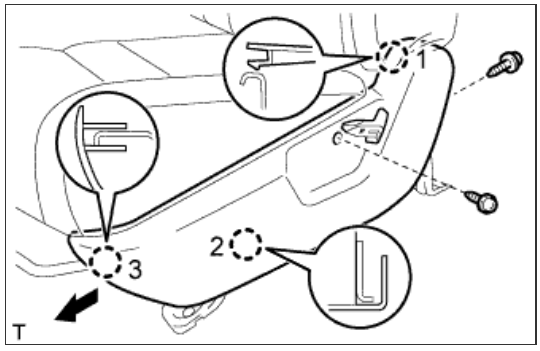


d. for 8 Way Seat Type:

i. Remove the 3 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.


e. w/ Lumbar Support:

Disconnect the lumbar switch connector.

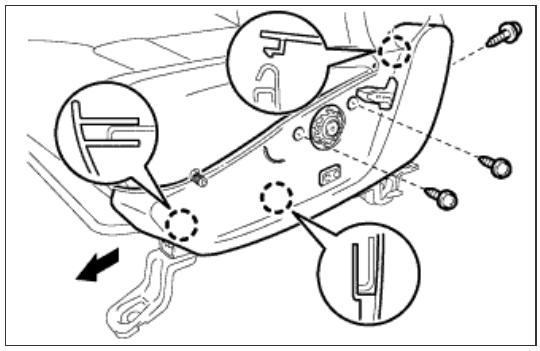

6. REMOVE LUMBAR SWITCH (w/ Lumbar support)


a. Remove the 2 screws and switch.

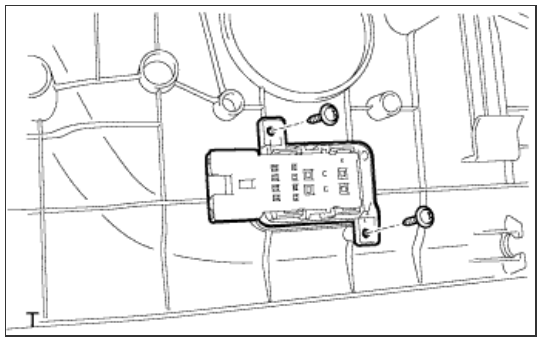

7. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

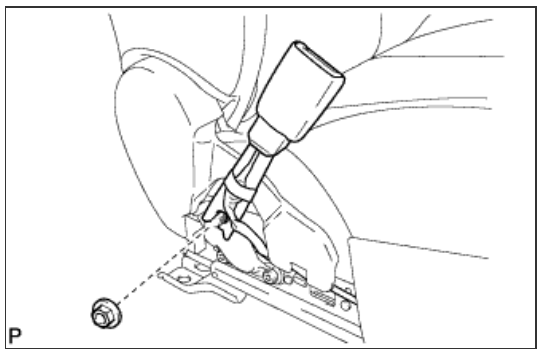

8. REMOVE FRONT INNER SEAT CUSHION SHIELD LH


a. Remove the screw.

b. Detach the claw and clip, and then remove the cushion shield.

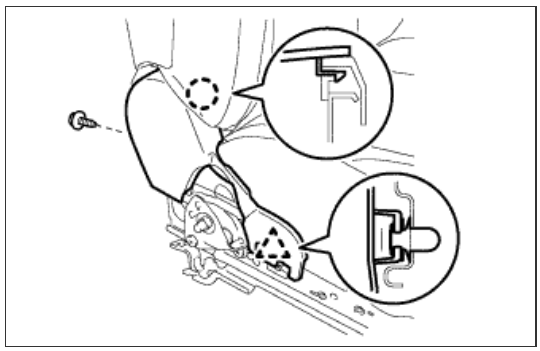


9. REMOVE SEAT CUSHION COVER WITH PAD

a. Using a clip remover, remove the 2 clips.

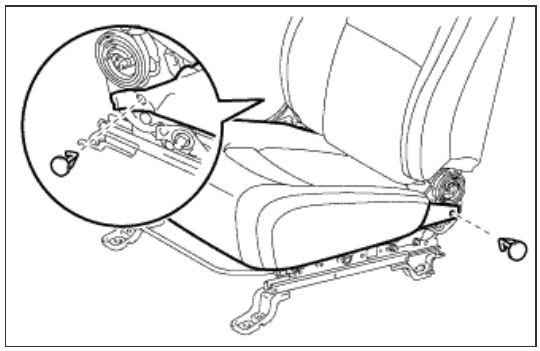


b. Detach the wire harness clamp.

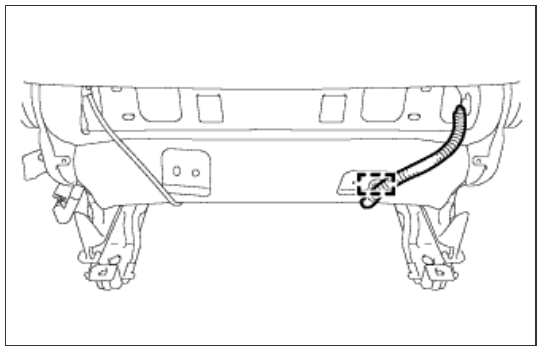

c. for Front Passenger Side:


i. Disconnect the seat belt warning sensor connector.

ii. Detach the 2 clamps and remove the seat belt warning sensor connector.

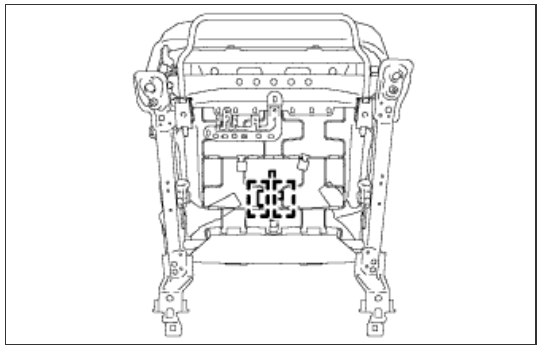


d. Bend the 2 seat frame claws upward.

e. Detach the hooks and remove the seat cushion cover with pad.

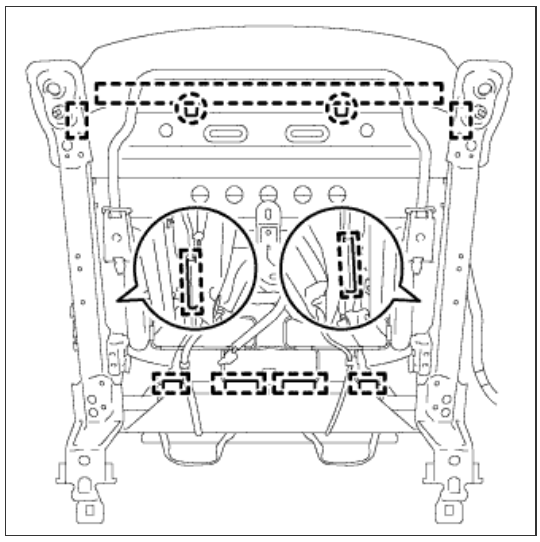

10. REMOVE FRONT SEPARATE TYPE SEAT CUSHION COVER


a. Remove the hog rings and front seat cushion cover.

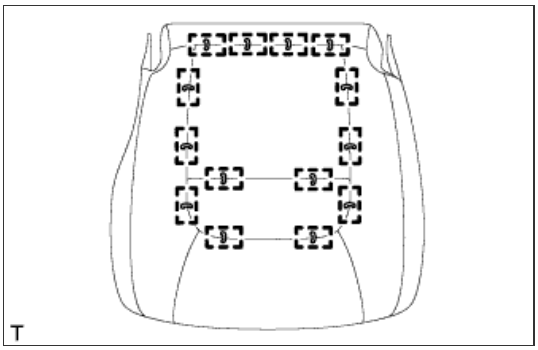

11. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

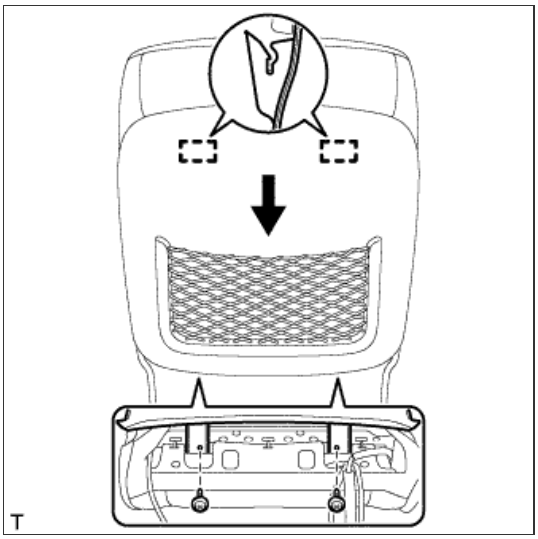

12. REMOVE FRONT SEAT HEADREST SUPPORT (w/ Active Headrest)


a. Detach the 4 claws and remove the 2 headrest supports.

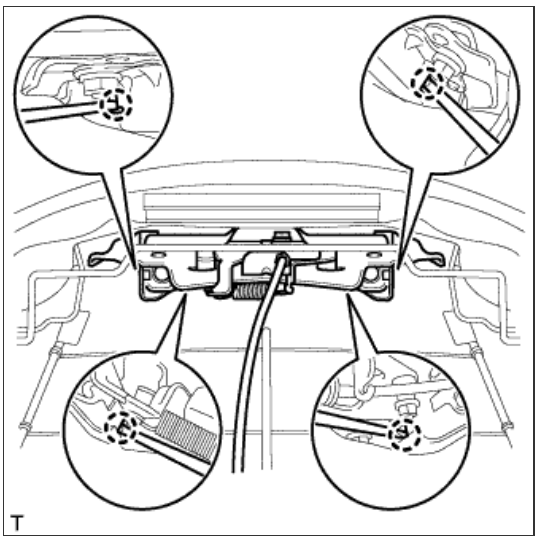


13. REMOVE SEATBACK COVER WITH PAD

a. w/ Seatback Board:

i. Remove the 3 hog rings and detach the 9 hooks.

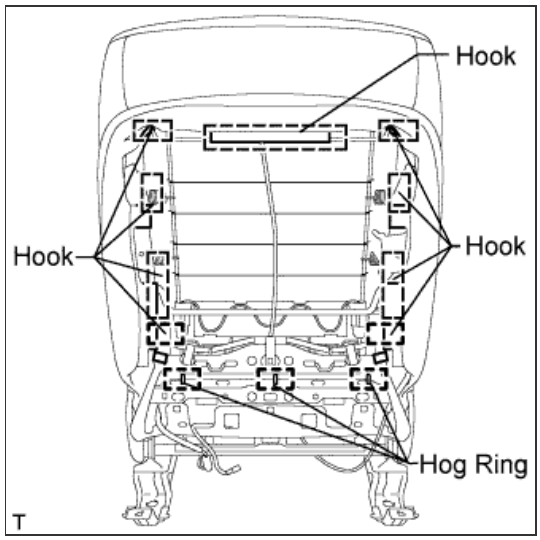


ii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

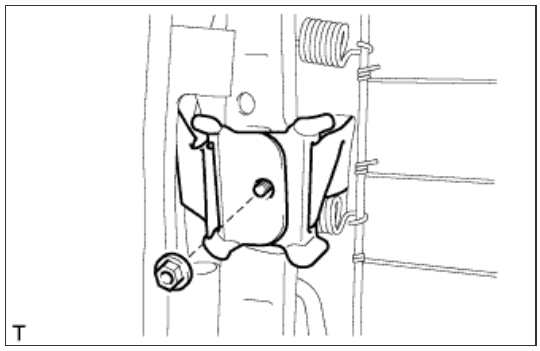


b. w/o Seatback Board:


i. Remove the 3 hog rings.

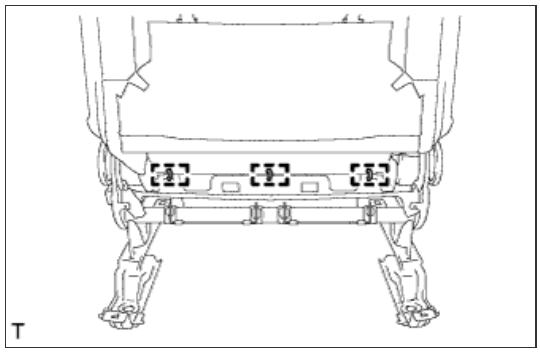

ii. Open the 2 fasteners, and then open the seatback cover.

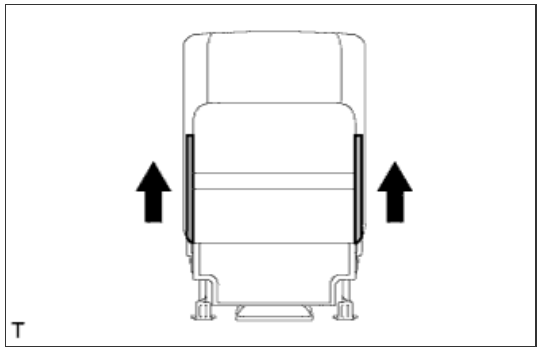


iii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

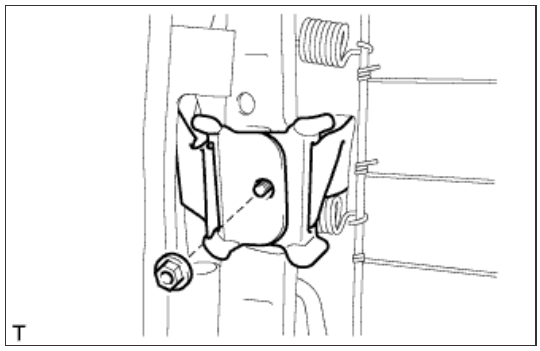


iv. Detach the 4 claws and remove the 2 headrest supports.

c. Remove the seatback cover with pad from the seatback frame.

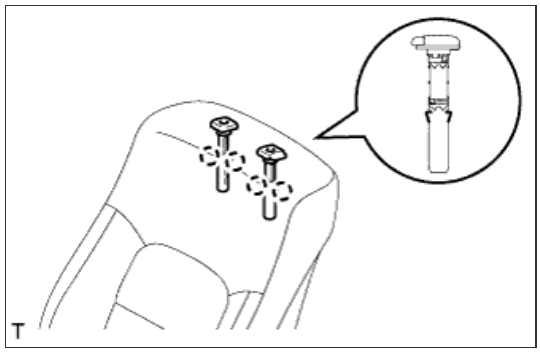


14. REMOVE FRONT SEPARATE TYPE SEATBACK COVER

a. w/ Front Seat Side Airbag:
Disconnect the seatback cover bracket from the seatback pad.

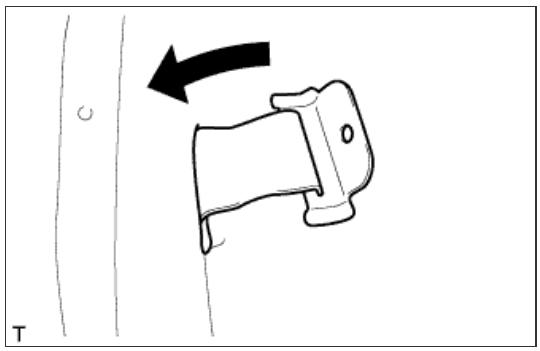

b. Remove the hog rings.

c. Detach the fastening tape and remove the seatback cover.

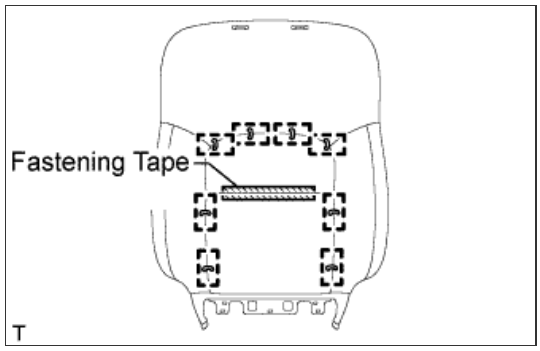


15. REMOVE INSIDE RECLINING ADJUSTER COVER LH

a. Detach the wire harness clamp.

b. Remove the screw.

c. Detach the claw and remove the reclining adjuster cover.

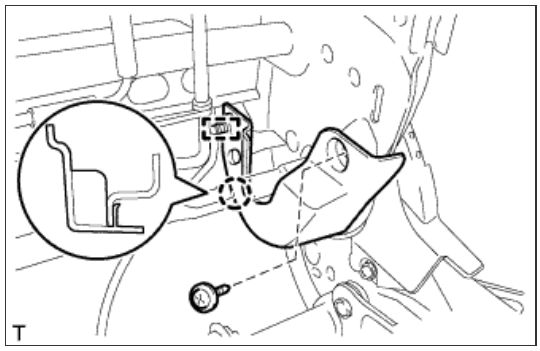

16. REMOVE INSIDE RECLINING ADJUSTER COVER RH


a. Detach the wire harness clamp.

b. Remove the screw.

c. Detach the claw and remove the reclining adjuster cover.

17. REMOVE OUTSIDE RECLINING ADJUSTER COVER LH

a. Remove the screw and reclining adjuster cover.

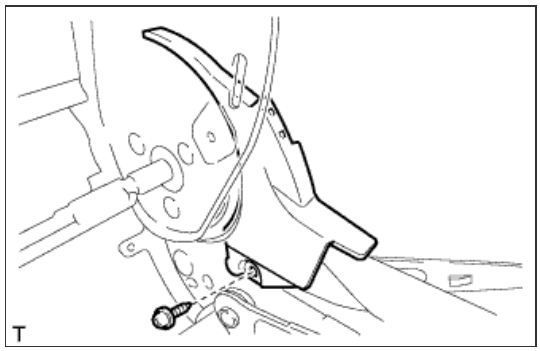


18. REMOVE OUTSIDE RECLINING ADJUSTER COVER RH

a. Remove the screw and reclining adjuster cover.

19. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (w/Lumbar Support)


a. Remove the 4 springs.

b. Detach the 4 hooks and remove the seatback spring.

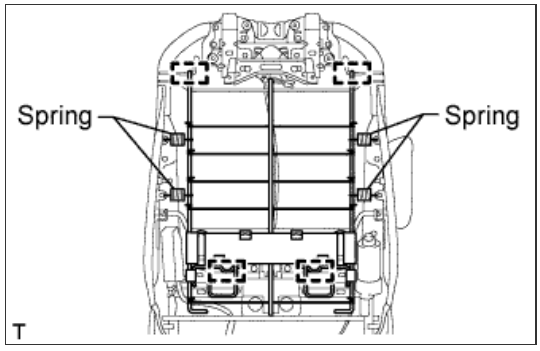


c. Disconnect the lumbar support adjuster connector.

d. Remove the 2 screws and lumbar support adjuster.

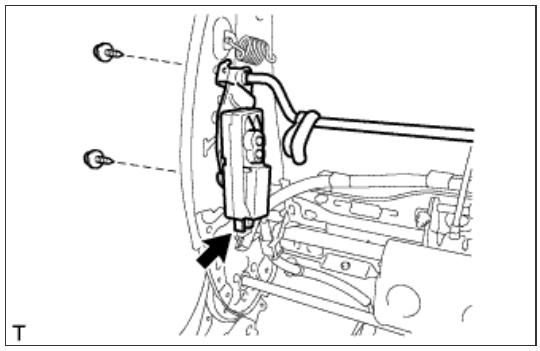


e. Detach the 3 claws and remove the bush from the seat frame.

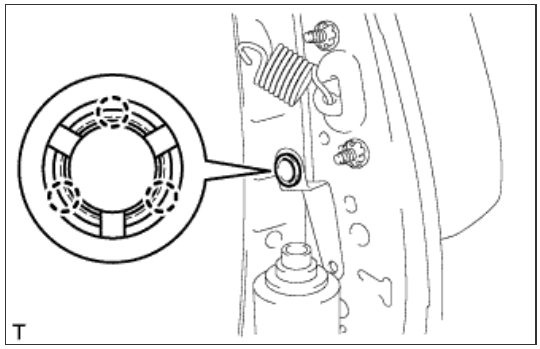


20. REMOVE LOWER ACTIVE HEADREST UNIT (w/ Active Headrest)

a. Remove the 6 nuts, and then remove the lower active headrest unit together with the upper active headrest unit.

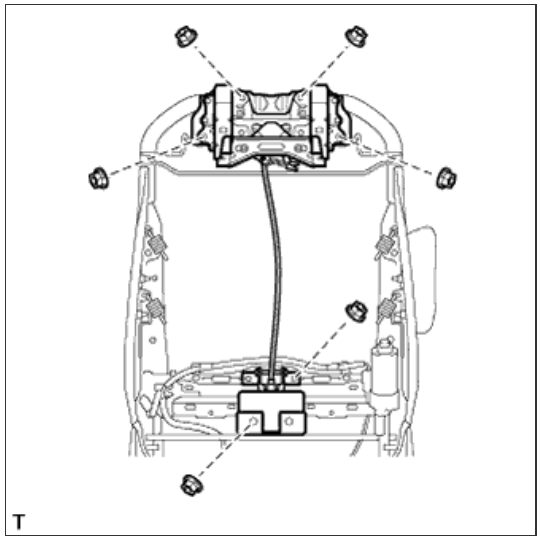


21. REMOVE UPPER ACTIVE HEADREST UNIT (w/ Active Headrest)

a. Remove the nut and cable clamp to remove the upper active headrest unit from the lower active headrest unit.

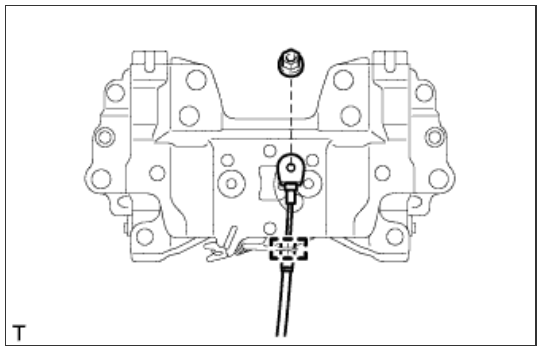

22. REMOVE FRONT LOWER SEAT CUSHION SHIELD LH

a. Detach the claw and remove the lower seat cushion shield.

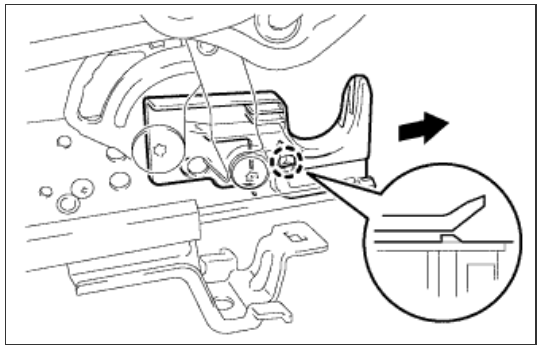


23. REMOVE FRONT LOWER SEAT CUSHION SHIELD RH

a. Detach the claw and remove the lower seat cushion shield.


24. REMOVE SEAT POSITION SENSOR

a. Using a T30 TOR socket wrench, remove the screw and seat position sensor with sensor protector.

b. Disconnect the connector.

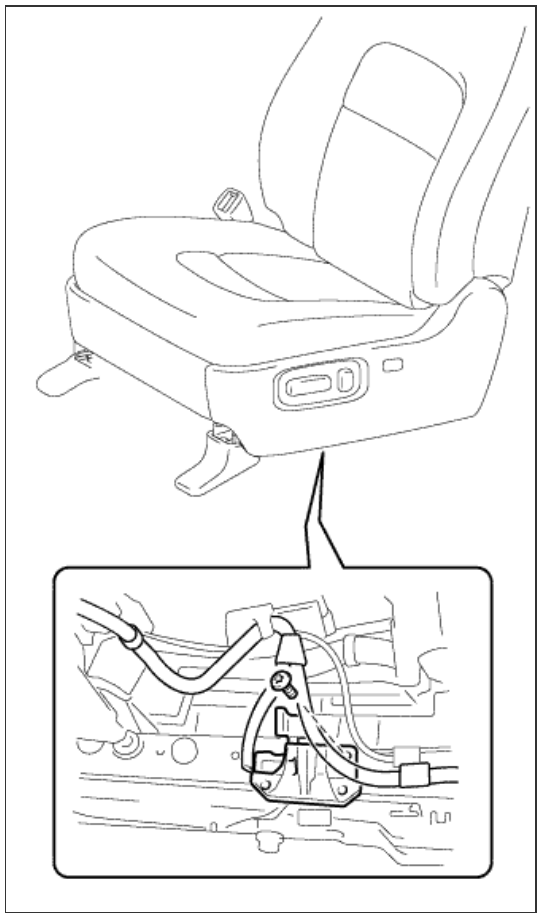


c. Remove the seat slide position sensor protector from the seat position sensor.

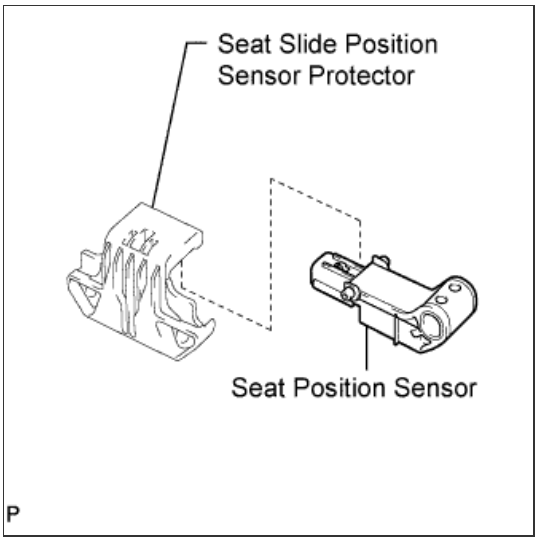

25. REMOVE FRONT SEAT SIDE AIRBAG ASSEMBLY LH

a. Detach the 5 clamps and disconnect the wire harness.

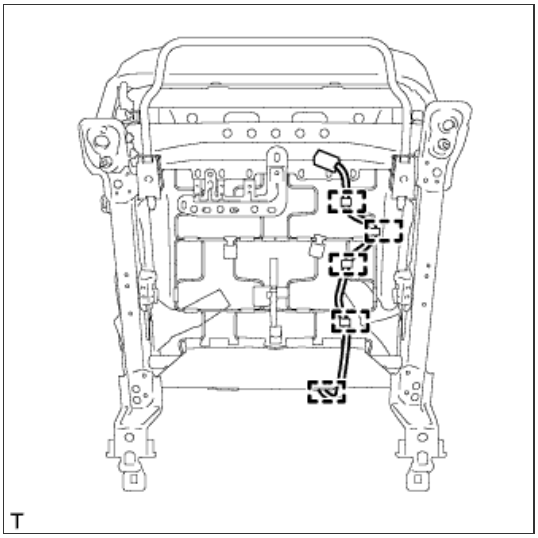


b. Detach the 2 clamps and disconnect the wire harness.

c. Remove the 2 nuts and front seat side airbag assembly L .

CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.

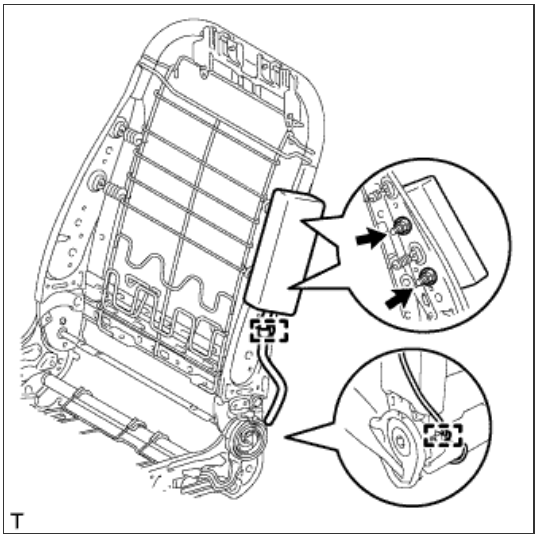


26. REMOVE FRONT SEAT WIRE LH


27. REMOVE FRONT INNER SEAT TRACK ASSEMBLY LH

a. for 4 Way Seat Type:


i. Using a T40 TOR socket, remove the 2 bolts and inner seat track bracket.

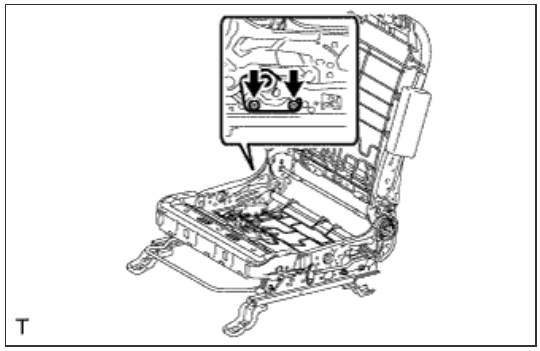

ii. Using a T40 TOR socket, remove the 4 bolts and seat frame with adjuster.

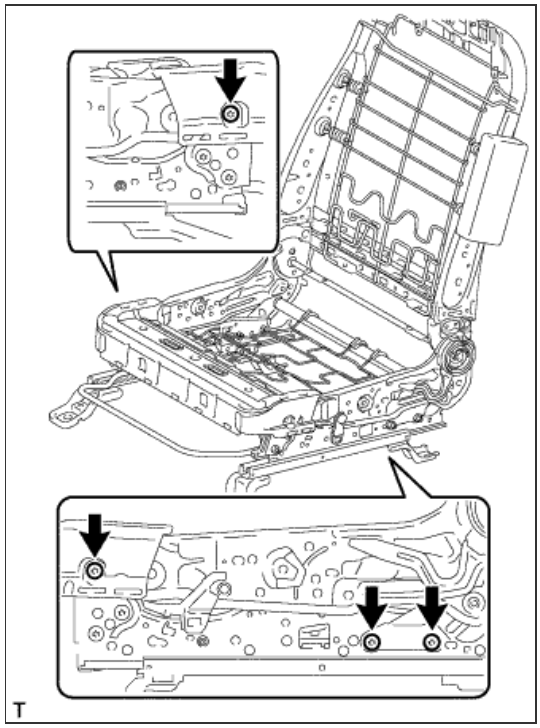


iii. Using a T40 TOR socket, remove the 4 bolts and reinforcement.

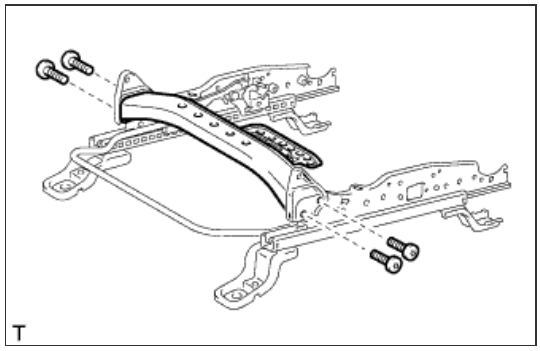


b. for 8 Way Seat Type:

i. Remove the 2 springs.


ii. Using a T40 TOR socket, remove the 3 bolts and inner seat track bracket.

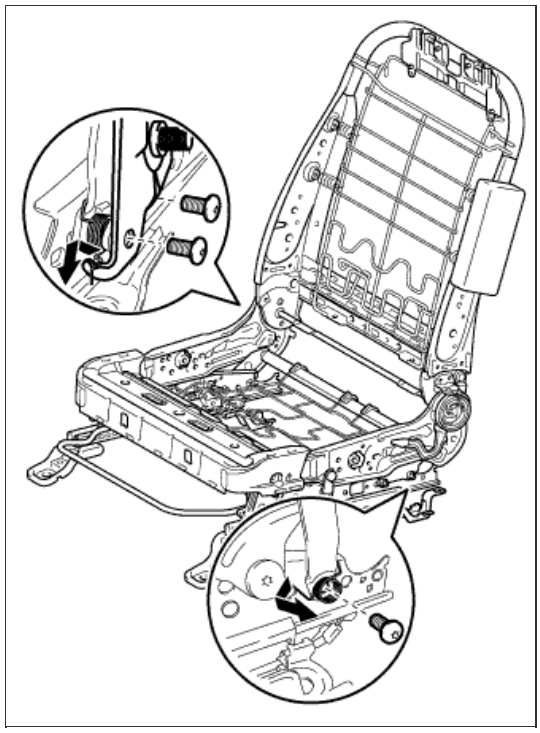


iii. Using a T40 TOR socket, remove the 4 bolts and seat frame with adjuster.

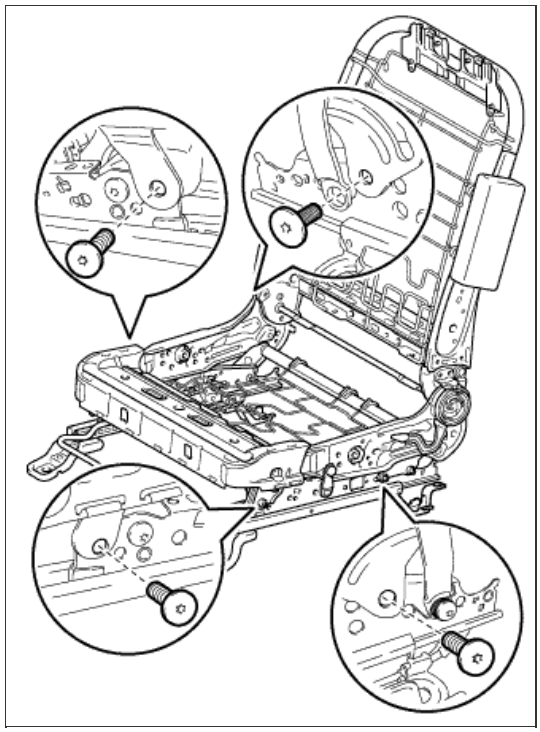

iv. Using a T40 TOR socket, remove the 2 bolts and reinforcement.

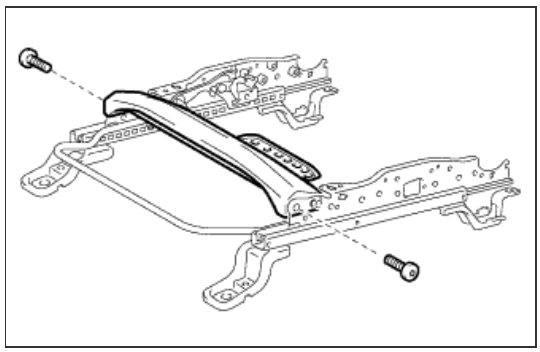

c. Using a screwdriver, detach the 2 springs and remove the seat track adjusting handle as shown in the illustration.

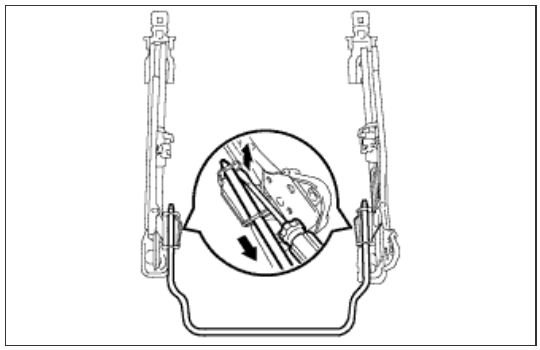

28. REMOVE FRONT OUTER SEAT TRACK ASSEMBLY LH

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT OUTER SEAT TRACK ASSEMBLY LH

2. INSTALL FRONT INNER SEAT TRACK ASSEMBLY LH


a. Attach the 2 springs to install the seat track adjusting handle as shown in the illustration.

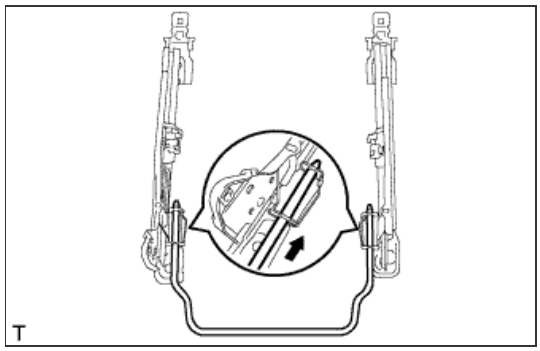


b. for 4 Way Seat Type:

i. Using a T40 "TORX" socket, install the reinforcement with the 4 bolts.

Torque:
25 N*m{ 255 kgf*cm , 18 ft.*lbf }

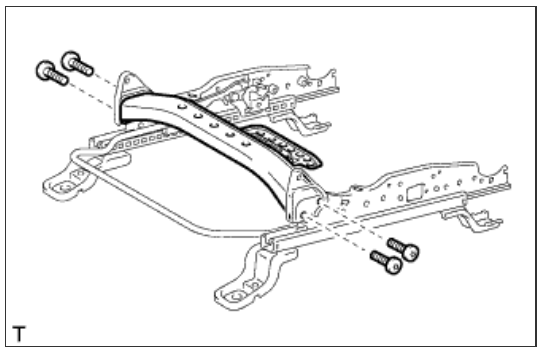


ii. Temporarily install the seat frame with adjuster with 4 bolts.

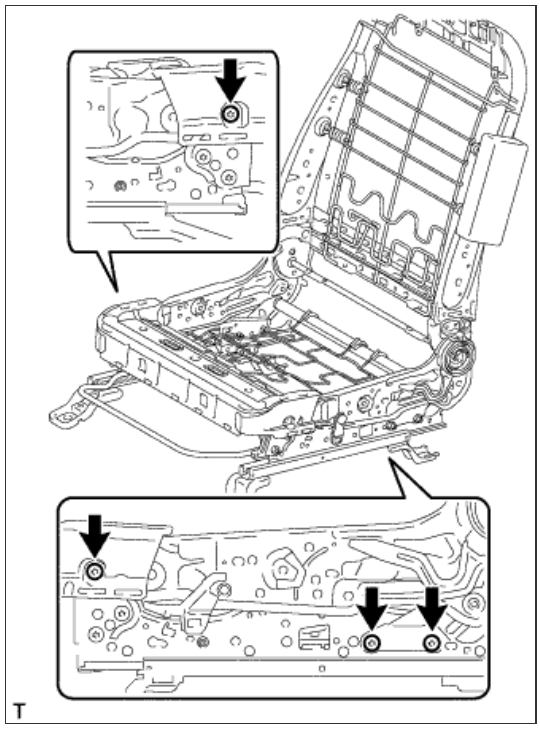

iii. Temporarily install the inner seat track bracket with 2 bolts.

iv. Using a T40 "TORX" socket, tighten the 6 bolts.

Torque:
25 N*m{ 255 kgf*cm , 18 ft.*lbf }
Bolt A:
13 N*m{ 133 kgf*cm , 10 ft.*lbf }

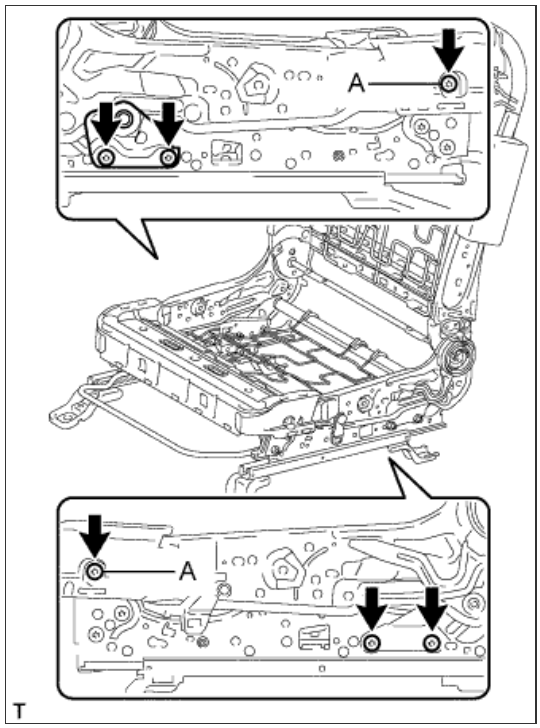

c. for 8 Way Seat Type:


i. Using a T40 "TORX" socket, install the reinforcement with the 2 bolts.

Torque:
25 N*m{ 255 kgf*cm , 18 ft.*lbf }

ii. Temporarily install the seat frame with adjuster with the 4 bolts.

iii. Using a T40 "TORX" socket, tighten the 4 bolts.


Torque:
25 N*m{ 255 kgf*cm , 18 ft.*lbf }

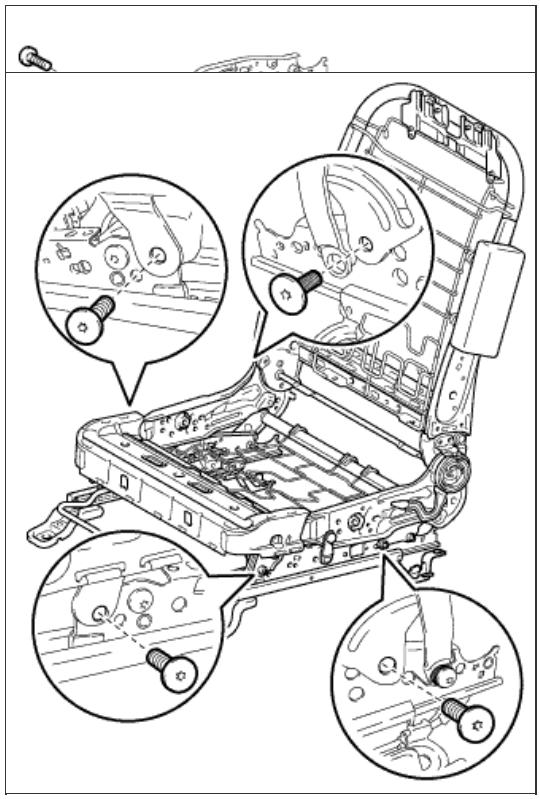

iv. Using a T40 "TORX" socket, install the inner seat track bracket with the 3 bolts.

Torque:
25 N*m{ 255 kgf*cm , 18 ft.*lbf }

v. Install the 2 springs.

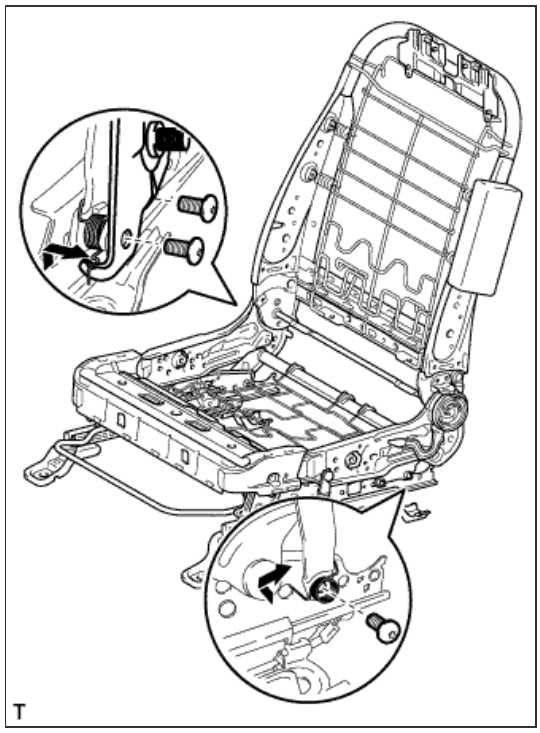

3. INSTALL FRONT SEAT WIRE LH

4. INSTALL FRONT SEAT SIDE AIRBAG ASSEMBLY LH


CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.


a. Install the front seat side airbag assembly with 2 nuts.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

b. Attach the 2 clamps to connect the wire harness.

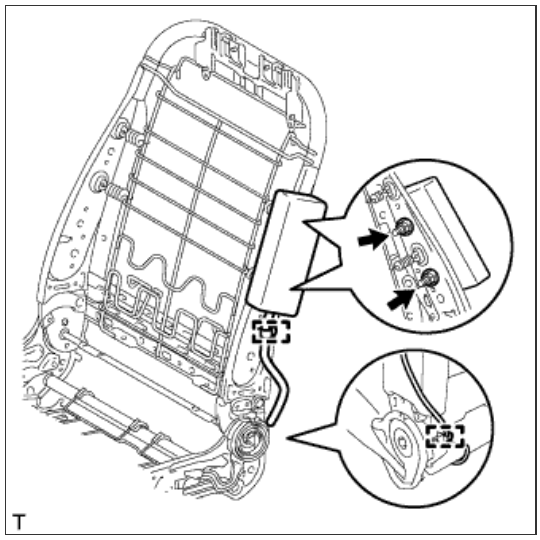

c. Attach the 5 clamps to connect the wire harness.

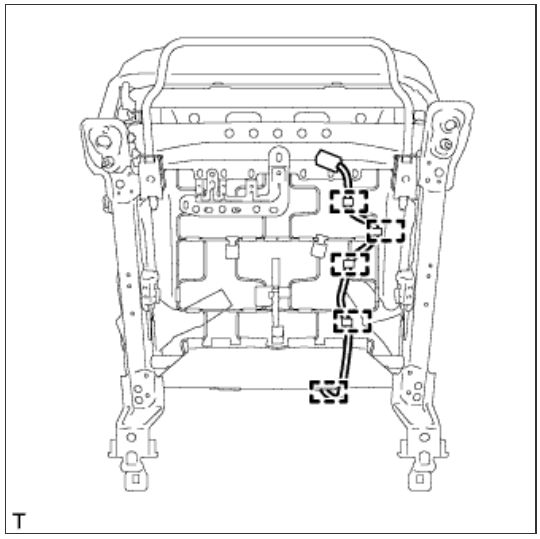

5. INSTALL SEAT POSITION SENSOR

a. heck that the engine switch is off.

b. heck that the cable is disconnected from the battery negative (- terminal.


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (- battery terminal to disable the SRS system.

c. Using a 1.0 mm (0.0393 in. feeler gauge, install the seat position sensor.

NOTICE:

- **If the seat position sensor has been dropped, or there are an cracks, dents or other defects in the case or connector, replace the seat position sensor with a new one.**
- **When installing the seat position sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

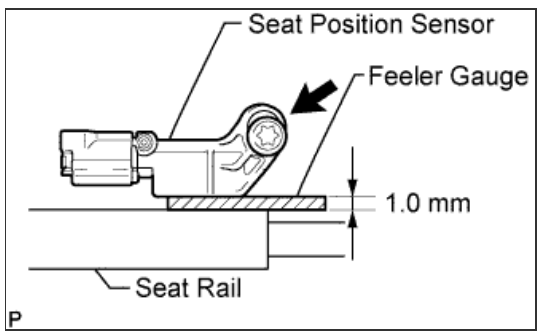

HINT:

Be sure that the clearance between the seat position sensor and the seat rail is within 0.6 to 1.4 mm (0.02 6 to 0.0551 in. .

d. Using a T30 "TORX" socket wrench, install the seat position sensor with the screw.

Torque:
8.0 N*m{ 82 kgf*cm , 71 in.*lbf }

e. Make sure that the clearance between the seat position sensor and the seat rail is within 0.6 to 1.4 mm (0.02 6 to 0.0551 in. .


f. heck that there is no looseness in the installation parts of the seat position sensor.

g. onnect the connector.

h. Install the seat slide position sensor protector to the seat position sensor.

6. INSTALL FRONT LOWER SEAT CUSHION SHIELD RH

a. Attach the claw to install the lower seat cushion shield.

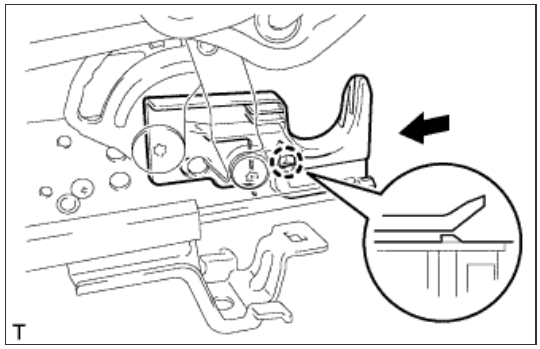


7. INSTALL FRONT LOWER SEAT CUSHION SHIELD LH

a. Attach the claw to install the lower seat cushion shield.

8. INSTALL UPPER ACTIVE HEADREST UNIT (w/ Active Headrest)

a. Install the upper active headrest unit to the lower active headrest unit with the cable clamp and nut.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

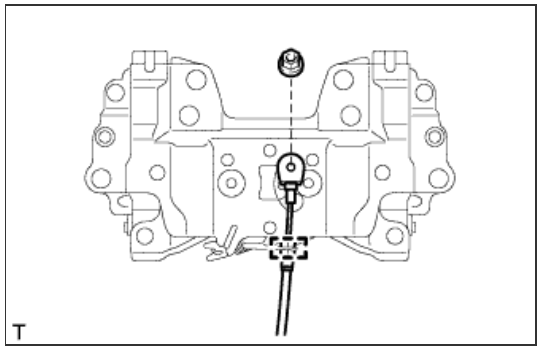

9. INSTALL LOWER ACTIVE HEADREST UNIT (w/ Active Headrest)


a. Install the lower active headrest unit together with the upper active headrest unit with the 6 nuts.

Torque:
Upper active headrest unit:
14 N*m{ 143 kgf*cm , 10 ft.*lbf }
Lower active headrest unit:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

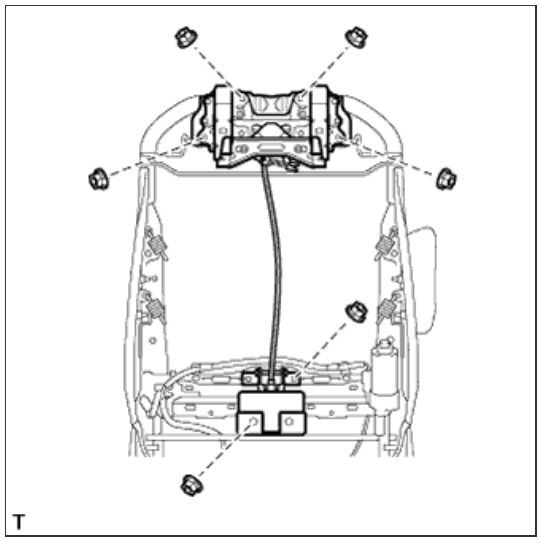


10. INSTALL LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (w/Lumbar Support)

a. Attach the 3 claws to install the bush.

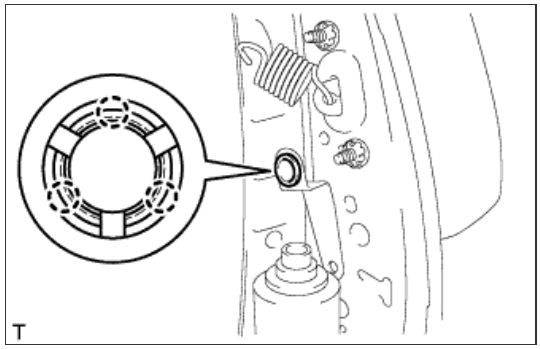


b. Install the lumbar support adjuster with the 2 screws.

c. onnect the lumbar support adjuster connector.

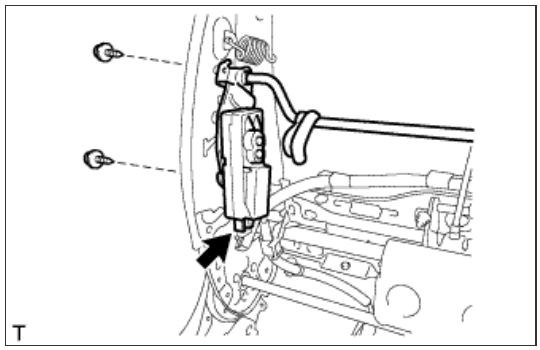


d. Attach the 4 hooks to install the seatback spring.

e. Install the 4 springs.

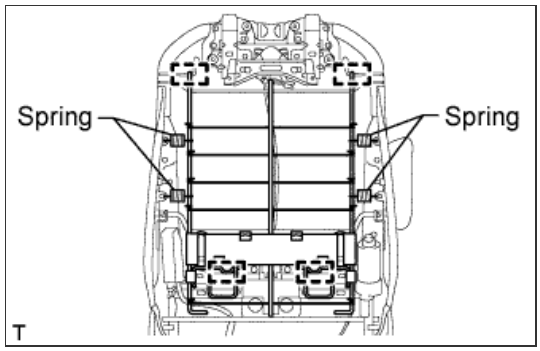

11. INSTALL OUTSIDE RECLINING ADJUSTER COVER RH

a. Install the outside reclining adjuster cover with the screw.

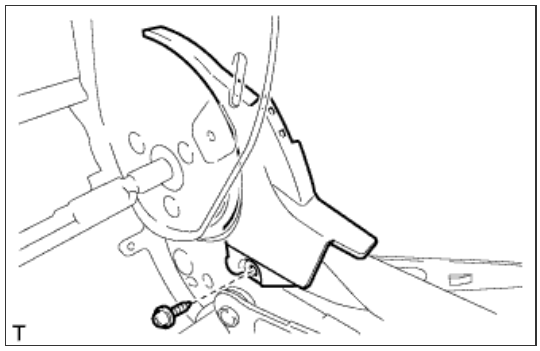

12. INSTALL OUTSIDE RECLINING ADJUSTER COVER LH


a. Install the outside reclining adjuster cover with the screw.

13. INSTALL INSIDE RECLINING ADJUSTER COVER RH

a. Attach the claw to install the inside reclining adjuster cover.

b. Install the screw.

c. Attach the wire harness clamp.

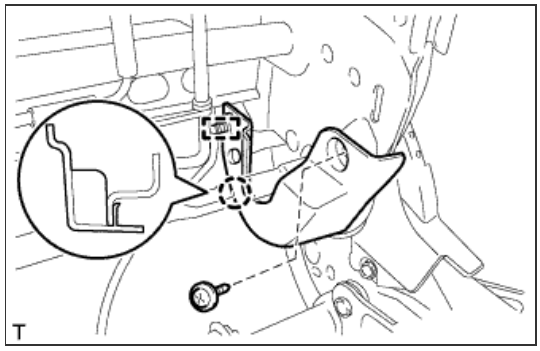

14. INSTALL INSIDE RECLINING ADJUSTER COVER LH

a. Attach the claw to install the inside reclining adjuster cover.

b. Install the screw.

c. Attach the wire harness clamp.


15. INSTALL FRONT SEPARATE TYPE SEATBACK COVER

a. Attach the fastening tape to install the seatback cover.


b. Using hog ring pliers, install new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

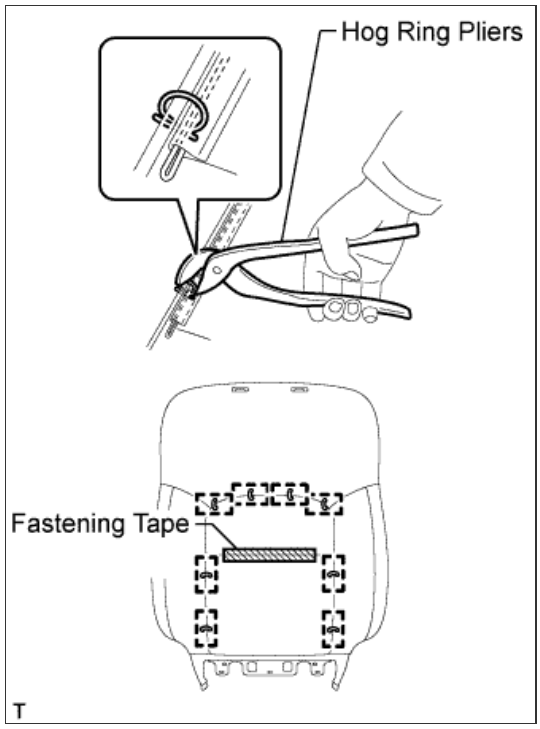

c. w/ Front Seat Side Airbag:
onnect the seatback cover bracket to the seatback pad.

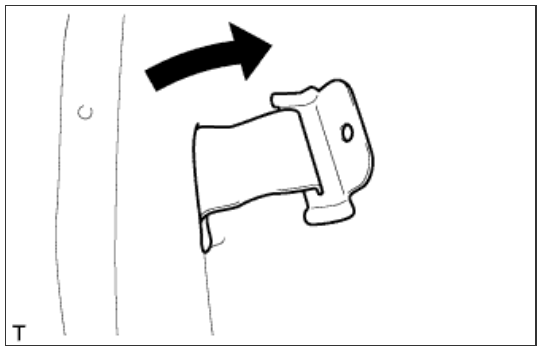

16. INSTALL SEATBACK COVER WITH PAD

a. Install the seatback cover with pad to the seatback frame.


b. w/ Seatback Board:

i. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

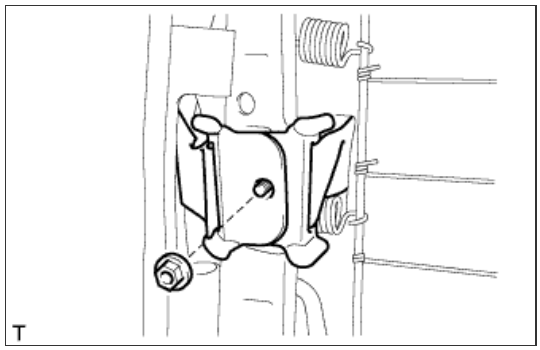


ii. Attach the hooks.

iii. Using hog ring pliers, install new hog rings to the seat frame.

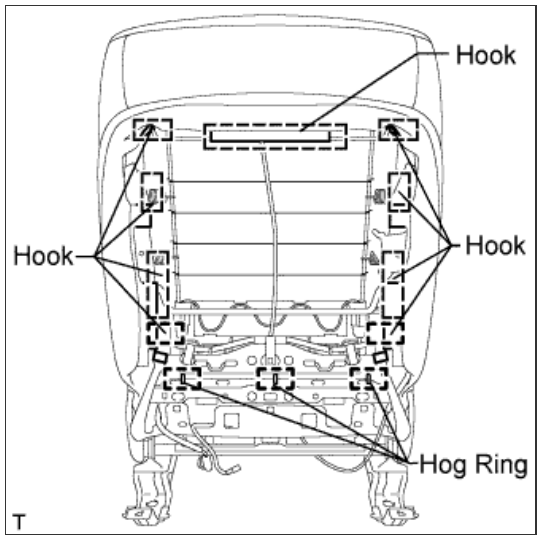

c. w/o Seatback Board:

i. Attach the 4 claws to install the 2 headrest supports.

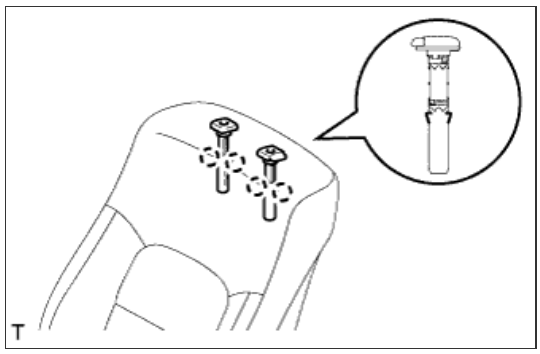


ii. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

CAUTION:


After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

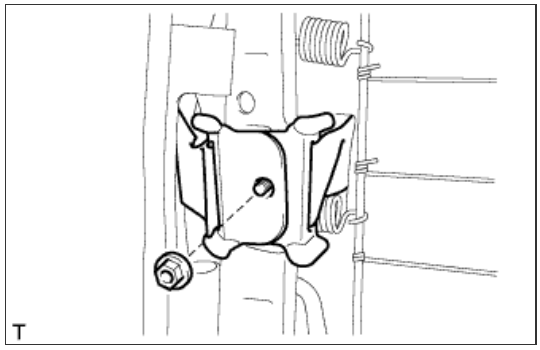

iii. lose the 2 fasteners, and then close the seatback cover.

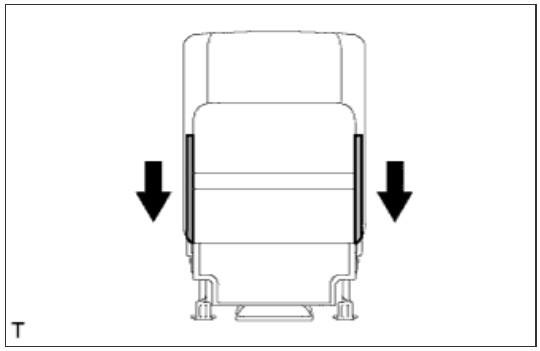

iv. Using hog ring pliers, install new hog rings to the seat frame.

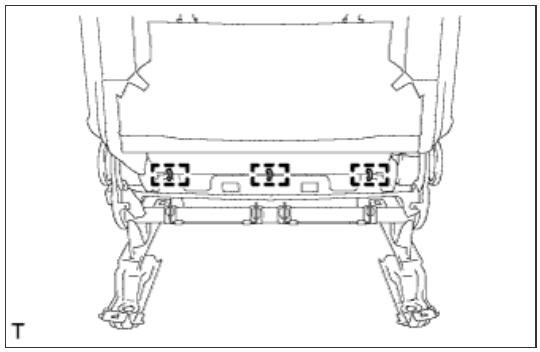


17. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the 4 claws to install the 2 headrest supports.

18. INSTALL FRONT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.

b. Install the 2 screws.

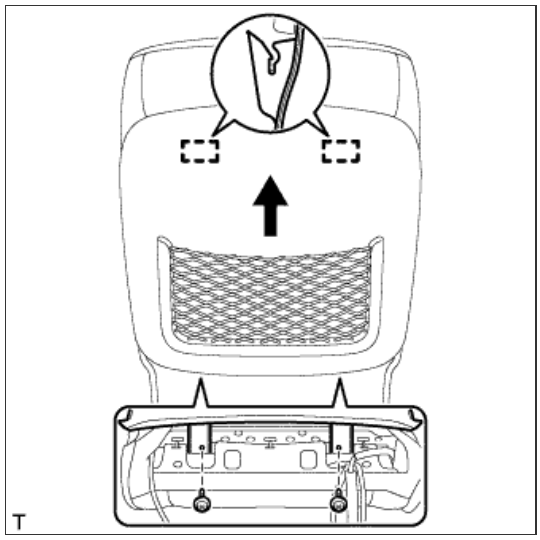


19. INSTALL FRONT SEPARATE TYPE SEAT CUSHION COVER

a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

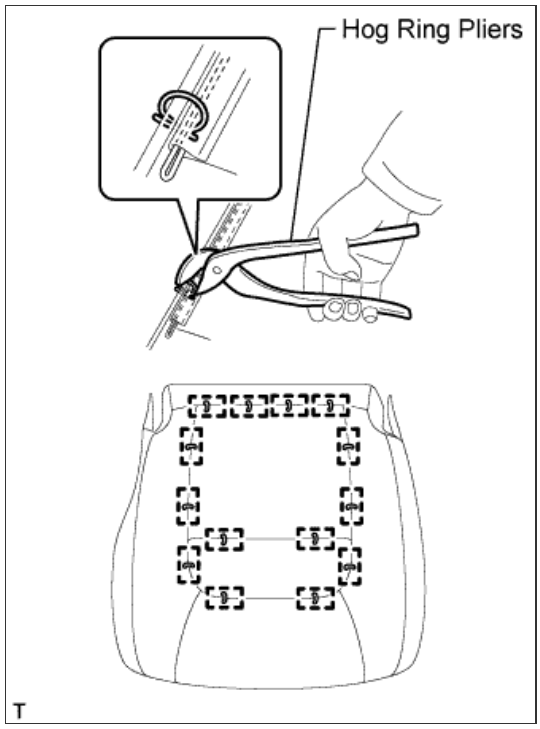


20. INSTALL SEAT CUSHION COVER WITH PAD

a. Attach the hooks to install the seat cushion cover with pad.

b. Bend the 2 seat frame claws downward.

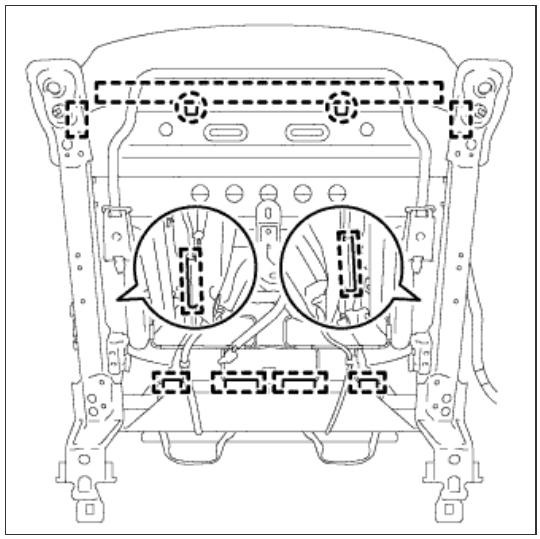


c. for Front Passenger Side:

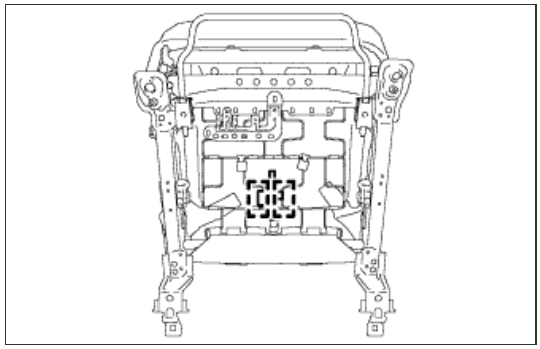


i. Attach the 2 clamps to install the seat belt warning sensor connector.

ii. onnect the seat belt warning sensor connector.

d. Attach the wire harness clamp.

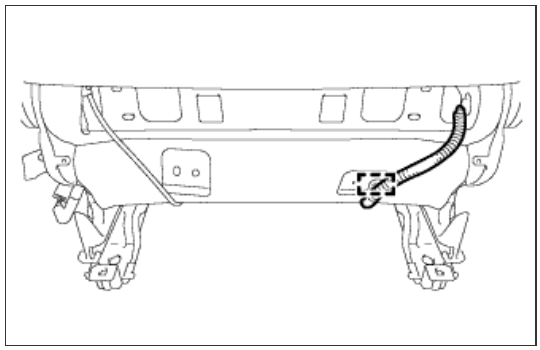


e. Install the 2 clips.

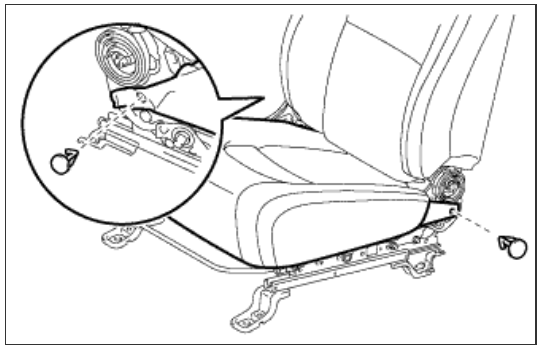

21. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the claw and clip to install the cushion shield.

b. Install the screw.

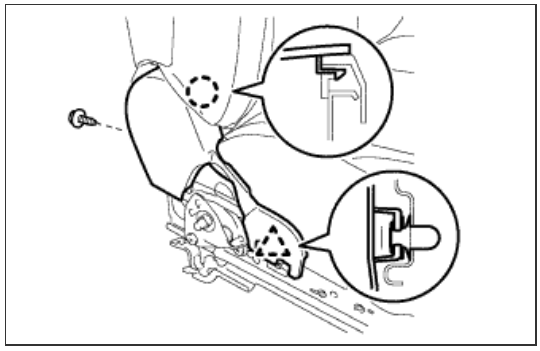

22. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding part of the front seat adjuster.

b. onnect the connectors and attach the clamps.

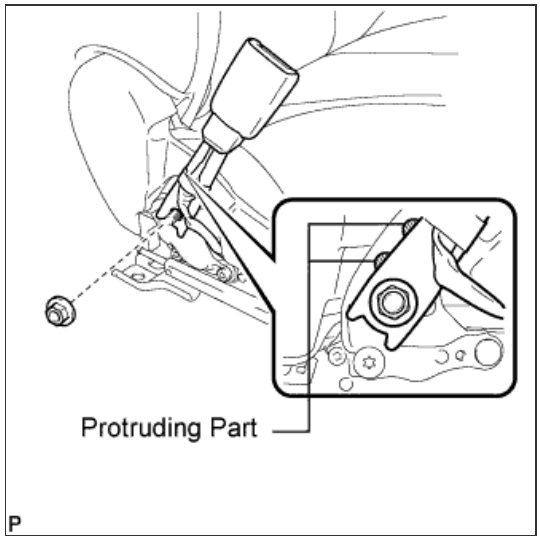

23. INSTALL LUMBAR SWITCH (w/ Lumbar Support)

a. Install the lumbar switch with the 2 screws.

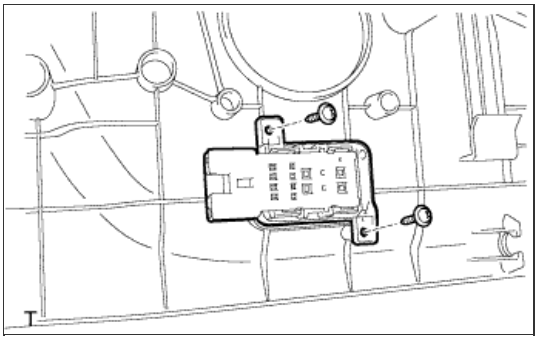


24. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for 4 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.

ii. Install the 2 screws.


b. w/ Lumbar Support:
onnect the lumbar switch connector.

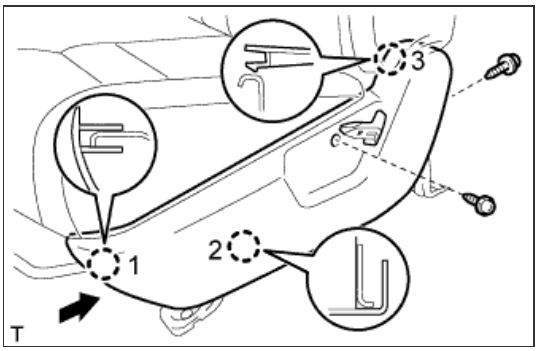


c. for 8 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.


ii. Install the 3 screws.

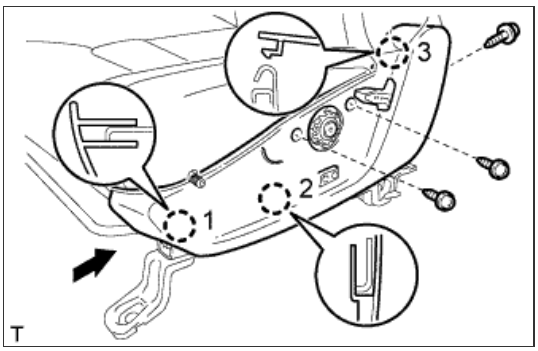

d. w/ Seatback Board:
Attach the 2 rubber bands to the hooks.

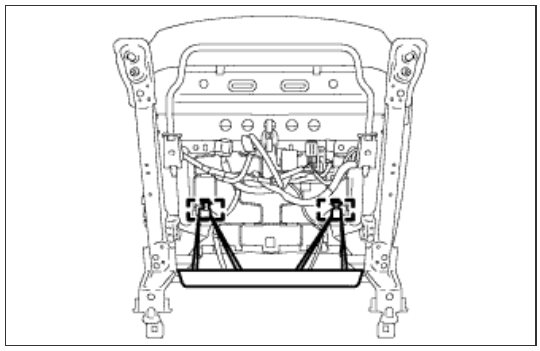


e. w/o Seatback Board:
Attach the 2 rubber bands to the hooks.

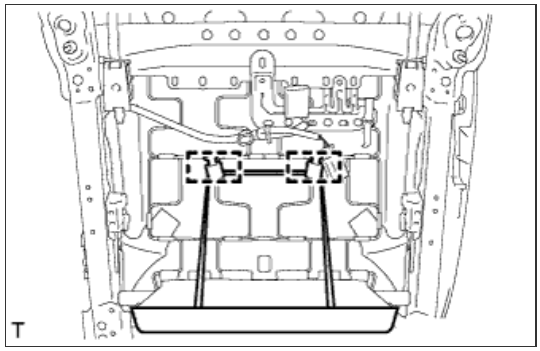

25. INSTALL RECLININ ADJUSTER RELEASE HANDLE LH


a. Attach the claw to install the reclining adjuster release handle.

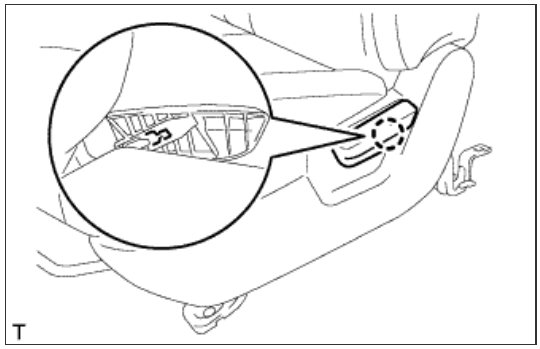

26. INSTALL VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)


a. Install the snap ring to the vertical seat adjuster knob.

b. Install the vertical seat adjuster knob to the front seat.

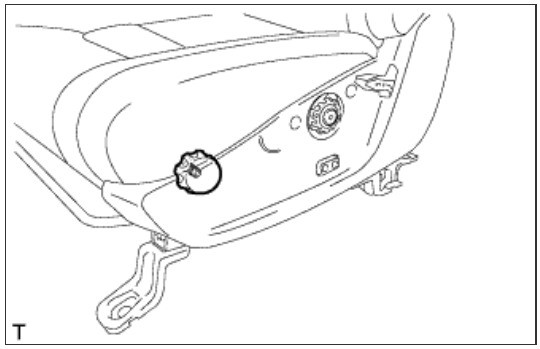


27. INSTALL VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Install the vertical adjusting handle with the 2 screws.

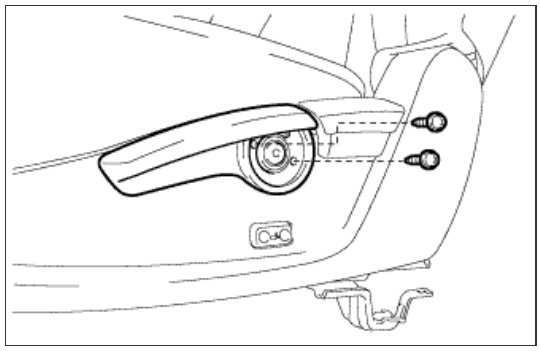

28. INSTALL VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Attach the 2 claws to install the vertical adjuster cover.

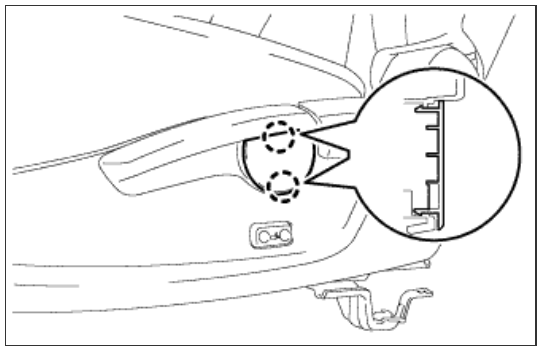

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT OUTER SEAT TRACK ASSEMBLY LH

2. INSTALL FRONT INNER SEAT TRACK ASSEMBLY LH


a. Attach the 2 springs to install the seat track adjusting handle as shown in the illustration.

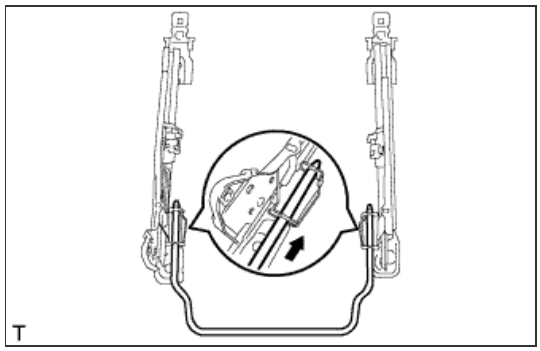


b. for 4 Way Seat Type:

i. Using a T40 "TORX" socket, install the reinforcement with the 4 bolts.

Torque:
25 N*m{ 255 kgf*cm , 18 ft.*lbf }

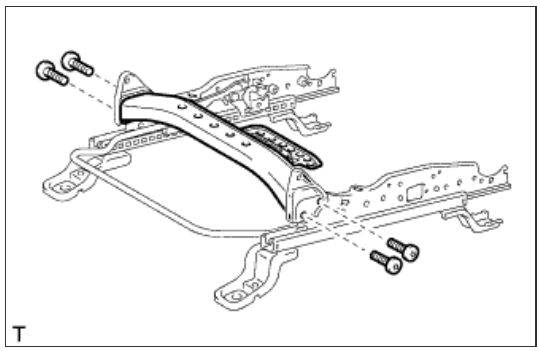


ii. Temporarily install the seat frame with adjuster with 4 bolts.

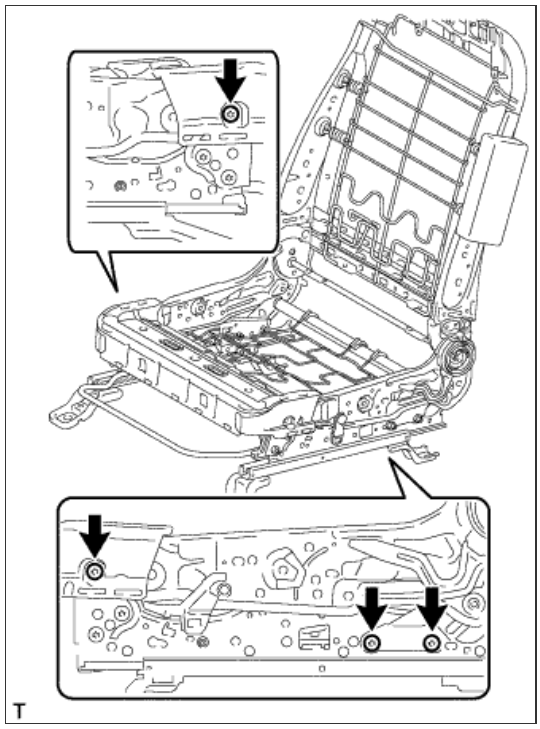

iii. Temporarily install the inner seat track bracket with 2 bolts.

iv. Using a T40 "TORX" socket, tighten the 6 bolts.

Torque:
25 N*m{ 255 kgf*cm , 18 ft.*lbf }
Bolt A:
13 N*m{ 133 kgf*cm , 10 ft.*lbf }

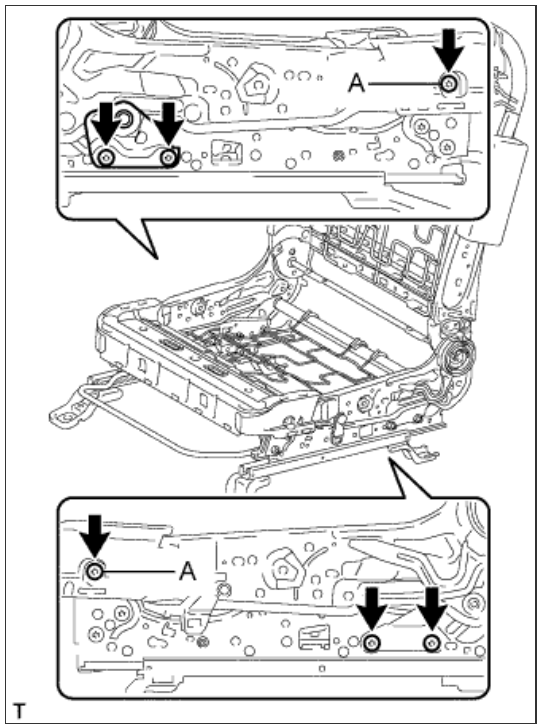

c. for 8 Way Seat Type:


i. Using a T40 "TORX" socket, install the reinforcement with the 2 bolts.

Torque:
25 N*m{ 255 kgf*cm , 18 ft.*lbf }

ii. Temporarily install the seat frame with adjuster with the 4 bolts.

iii. Using a T40 "TORX" socket, tighten the 4 bolts.


Torque:
25 N*m{ 255 kgf*cm , 18 ft.*lbf }

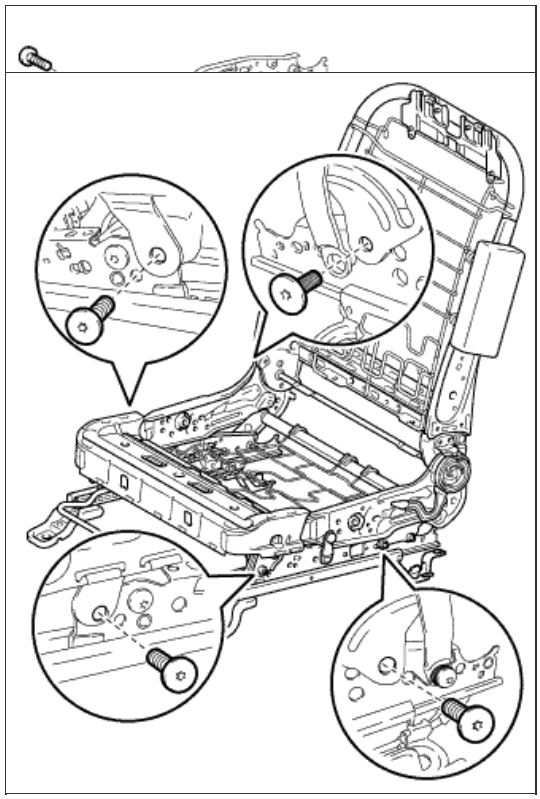

iv. Using a T40 "TORX" socket, install the inner seat track bracket with the 3 bolts.

Torque:
25 N*m{ 255 kgf*cm , 18 ft.*lbf }

v. Install the 2 springs.

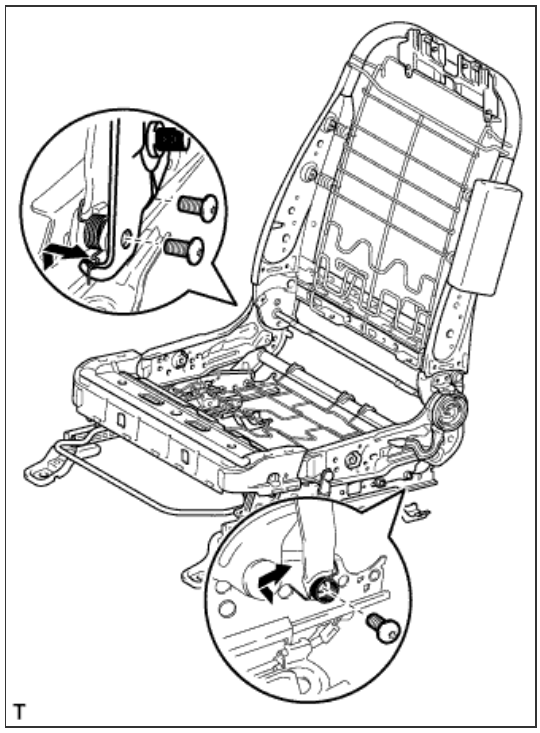

3. INSTALL FRONT SEAT WIRE LH

4. INSTALL FRONT SEAT SIDE AIRBAG ASSEMBLY LH


CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.


a. Install the front seat side airbag assembly with 2 nuts.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

b. Attach the 2 clamps to connect the wire harness.

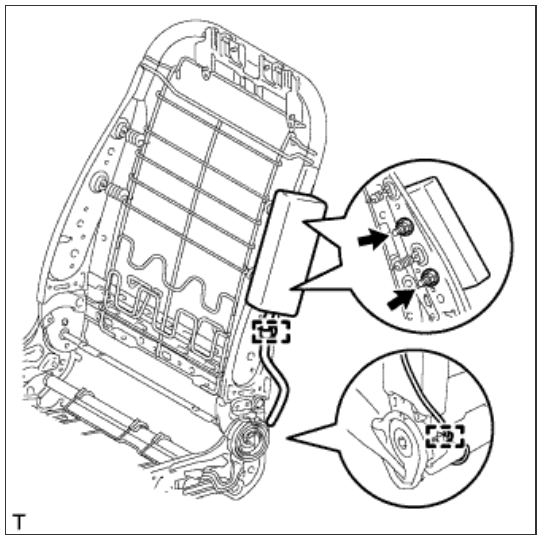

c. Attach the 5 clamps to connect the wire harness.

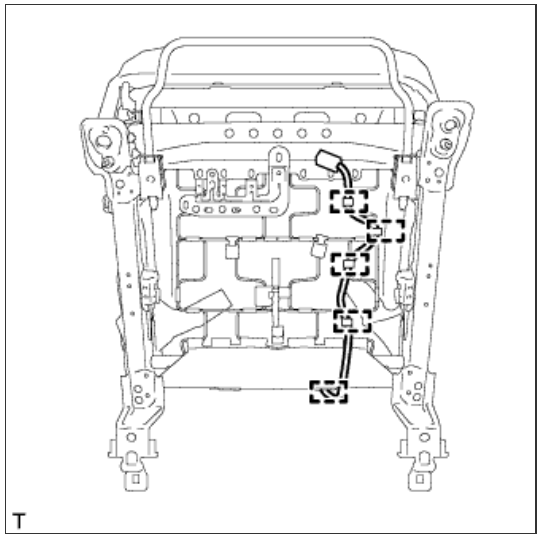

5. INSTALL SEAT POSITION SENSOR

a. heck that the engine switch is off.

b. heck that the cable is disconnected from the battery negative (- terminal.


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (- battery terminal to disable the SRS system.

c. Using a 1.0 mm (0.0393 in. feeler gauge, install the seat position sensor.

NOTICE:

- **If the seat position sensor has been dropped, or there are an cracks, dents or other defects in the case or connector, replace the seat position sensor with a new one.**
- **When installing the seat position sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

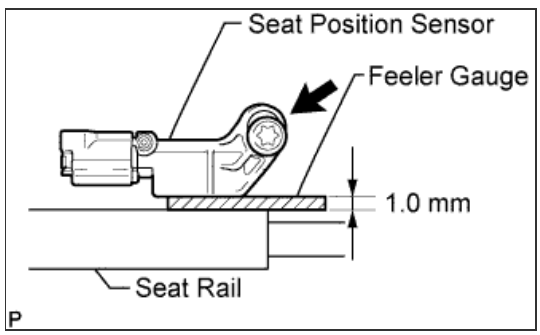

HINT:

Be sure that the clearance between the seat position sensor and the seat rail is within 0.6 to 1.4 mm (0.02 6 to 0.0551 in. .

d. Using a T30 "TORX" socket wrench, install the seat position sensor with the screw.

Torque:
8.0 N*m{ 82 kgf*cm , 71 in.*lbf }

e. Make sure that the clearance between the seat position sensor and the seat rail is within 0.6 to 1.4 mm (0.02 6 to 0.0551 in. .


f. heck that there is no looseness in the installation parts of the seat position sensor.

g. onnect the connector.

h. Install the seat slide position sensor protector to the seat position sensor.

6. INSTALL FRONT LOWER SEAT CUSHION SHIELD RH

a. Attach the claw to install the lower seat cushion shield.

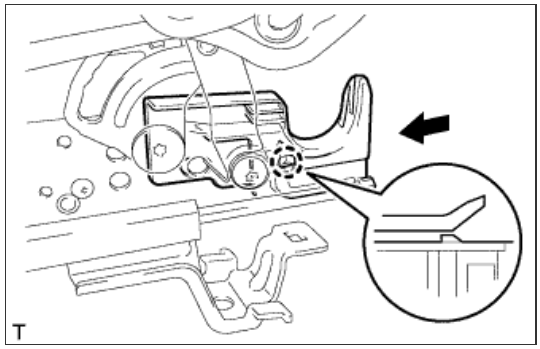


7. INSTALL FRONT LOWER SEAT CUSHION SHIELD LH

a. Attach the claw to install the lower seat cushion shield.

8. INSTALL UPPER ACTIVE HEADREST UNIT (w/ Active Headrest)

a. Install the upper active headrest unit to the lower active headrest unit with the cable clamp and nut.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

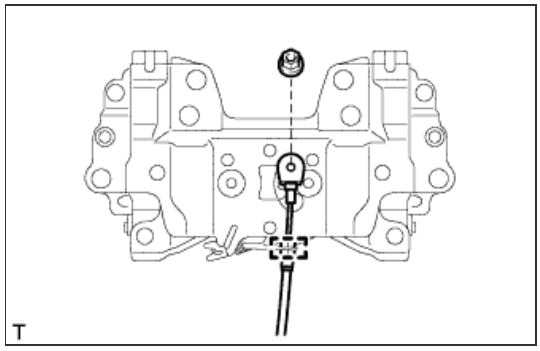

9. INSTALL LOWER ACTIVE HEADREST UNIT (w/ Active Headrest)


a. Install the lower active headrest unit together with the upper active headrest unit with the 6 nuts.

Torque:
Upper active headrest unit:
14 N*m{ 143 kgf*cm , 10 ft.*lbf }
Lower active headrest unit:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

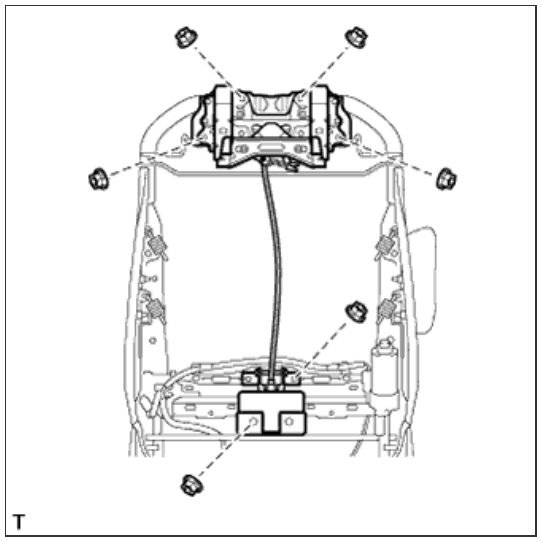


10. INSTALL LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (w/Lumbar Support)

a. Attach the 3 claws to install the bush.

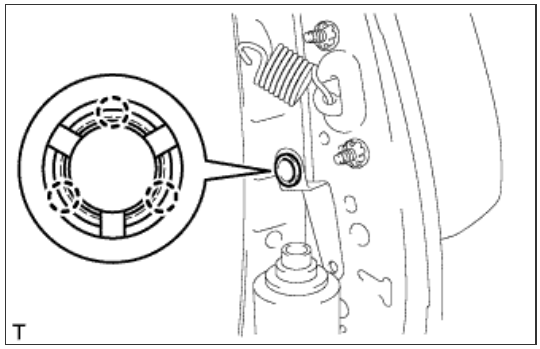


b. Install the lumbar support adjuster with the 2 screws.

c. onnect the lumbar support adjuster connector.

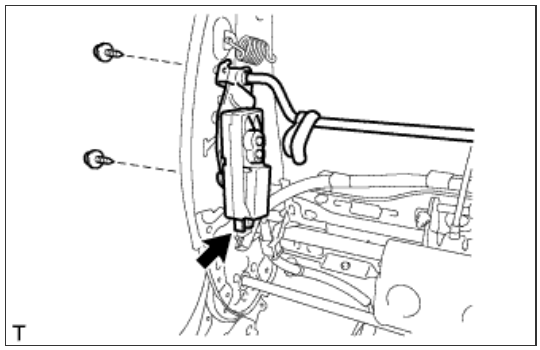


d. Attach the 4 hooks to install the seatback spring.

e. Install the 4 springs.

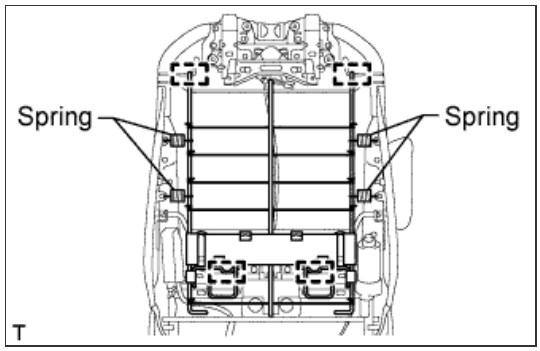

11. INSTALL OUTSIDE RECLINING ADJUSTER COVER RH

a. Install the outside reclining adjuster cover with the screw.

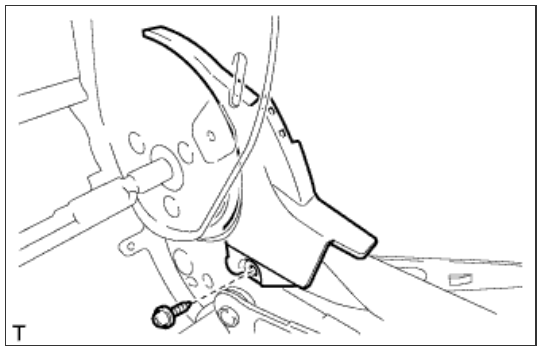

12. INSTALL OUTSIDE RECLINING ADJUSTER COVER LH


a. Install the outside reclining adjuster cover with the screw.

13. INSTALL INSIDE RECLINING ADJUSTER COVER RH

a. Attach the claw to install the inside reclining adjuster cover.

b. Install the screw.

c. Attach the wire harness clamp.

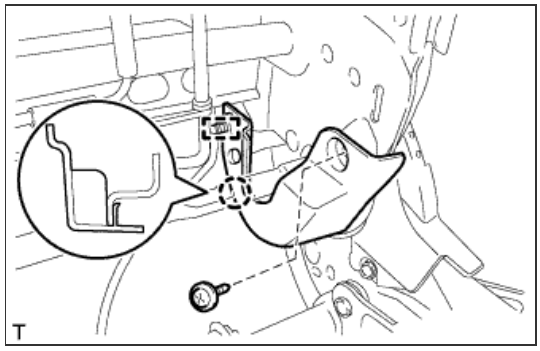

14. INSTALL INSIDE RECLINING ADJUSTER COVER LH

a. Attach the claw to install the inside reclining adjuster cover.

b. Install the screw.

c. Attach the wire harness clamp.


15. INSTALL FRONT SEPARATE TYPE SEATBACK COVER

a. Attach the fastening tape to install the seatback cover.


b. Using hog ring pliers, install new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

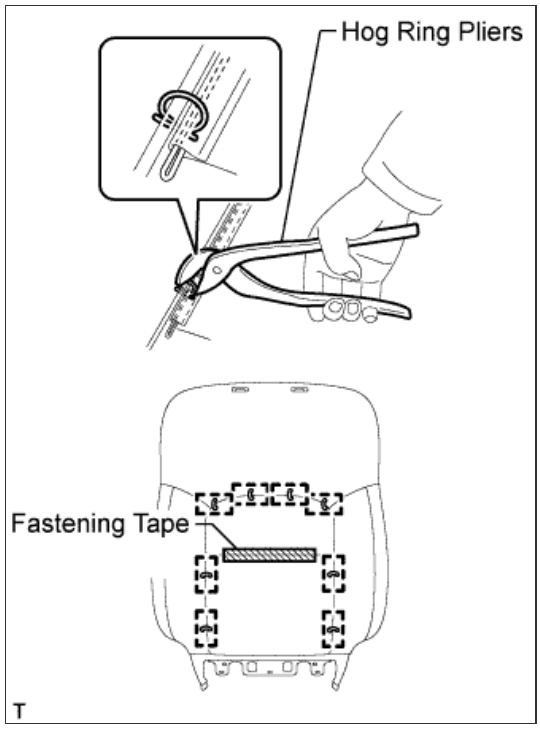

c. w/ Front Seat Side Airbag:
onnect the seatback cover bracket to the seatback pad.

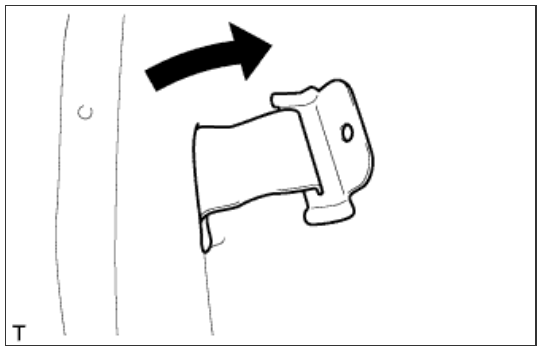

16. INSTALL SEATBACK COVER WITH PAD

a. Install the seatback cover with pad to the seatback frame.


b. w/ Seatback Board:

i. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

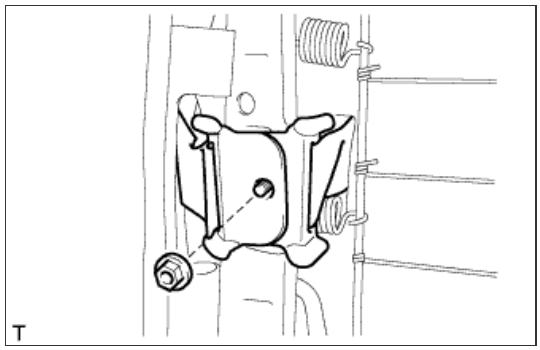


ii. Attach the hooks.

iii. Using hog ring pliers, install new hog rings to the seat frame.

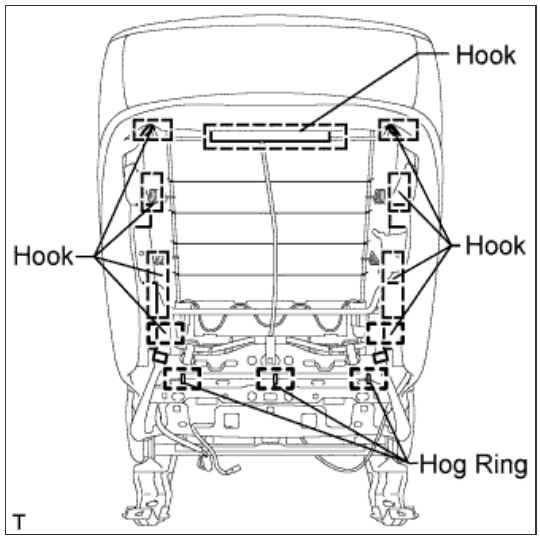

c. w/o Seatback Board:

i. Attach the 4 claws to install the 2 headrest supports.

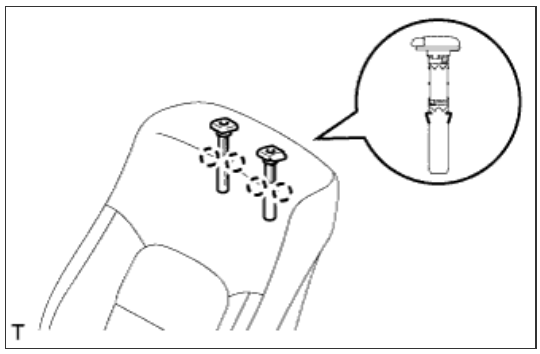


ii. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

CAUTION:


After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

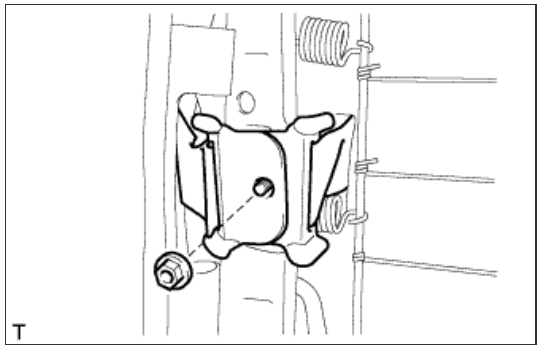

iii. lose the 2 fasteners, and then close the seatback cover.

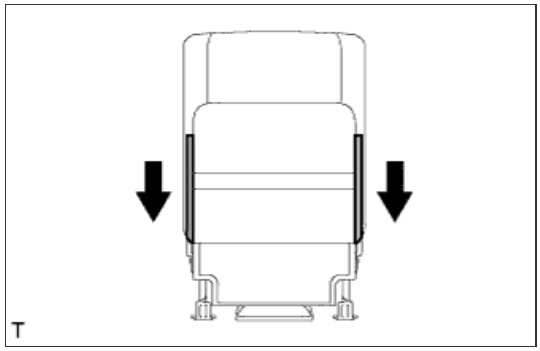

iv. Using hog ring pliers, install new hog rings to the seat frame.

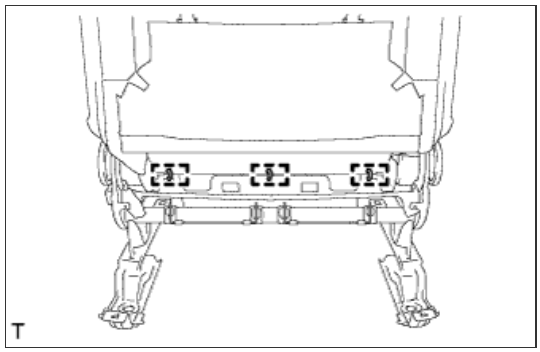


17. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the 4 claws to install the 2 headrest supports.

18. INSTALL FRONT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.

b. Install the 2 screws.

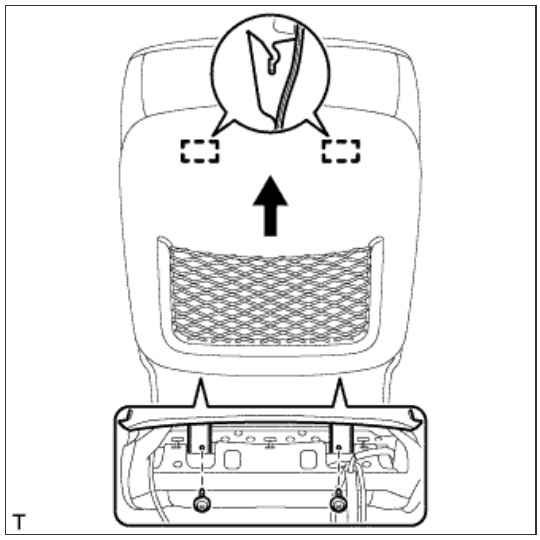


19. INSTALL FRONT SEPARATE TYPE SEAT CUSHION COVER

a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

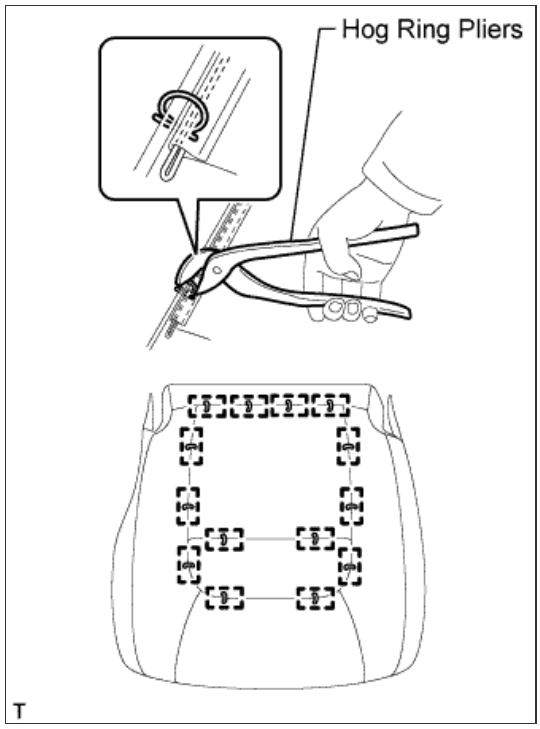


20. INSTALL SEAT CUSHION COVER WITH PAD

a. Attach the hooks to install the seat cushion cover with pad.

b. Bend the 2 seat frame claws downward.

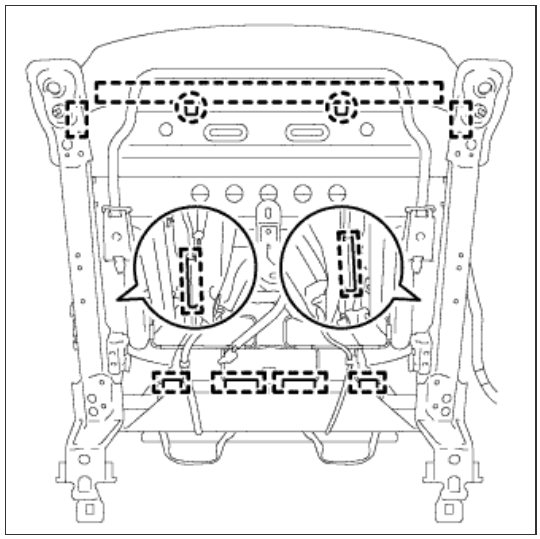


c. for Front Passenger Side:

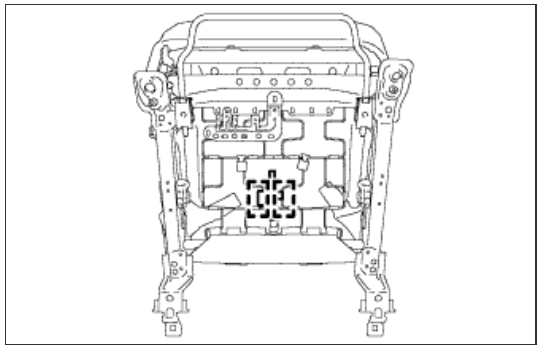


i. Attach the 2 clamps to install the seat belt warning sensor connector.

ii. onnect the seat belt warning sensor connector.

d. Attach the wire harness clamp.

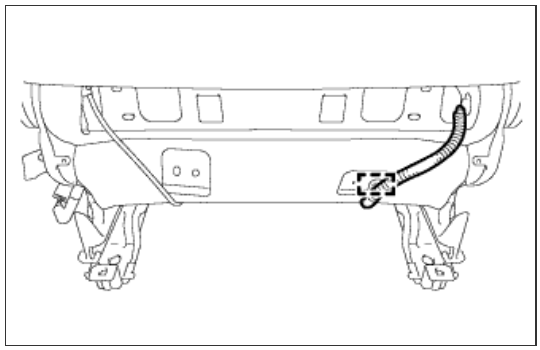


e. Install the 2 clips.

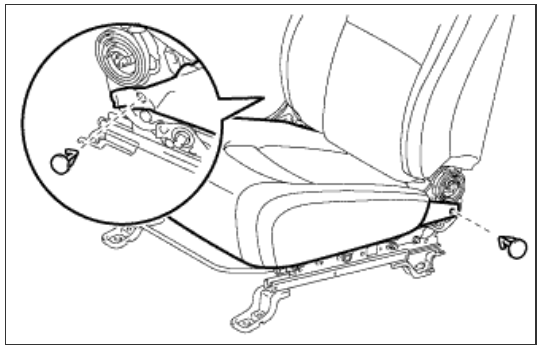

21. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the claw and clip to install the cushion shield.

b. Install the screw.

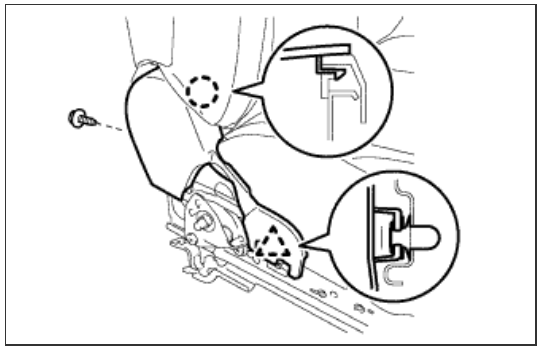

22. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding part of the front seat adjuster.

b. onnect the connectors and attach the clamps.

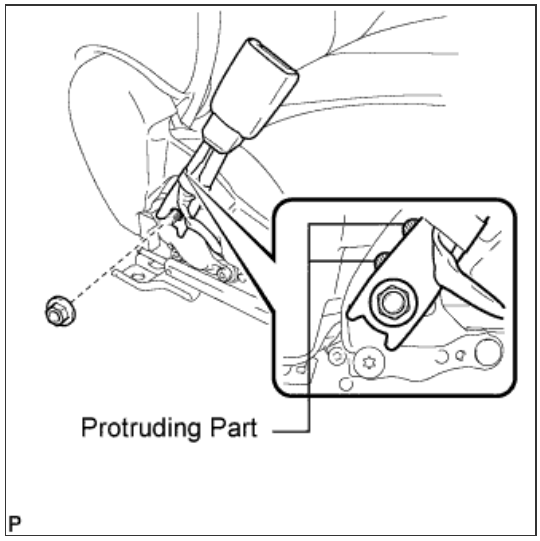

23. INSTALL LUMBAR SWITCH (w/ Lumbar Support)

a. Install the lumbar switch with the 2 screws.

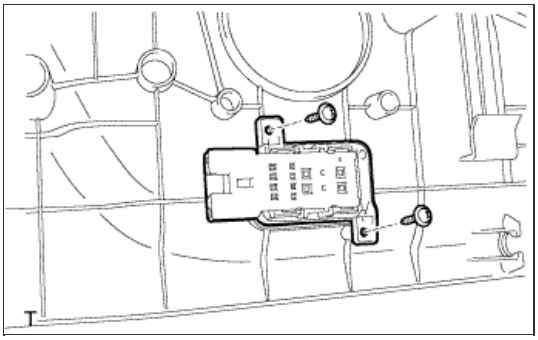


24. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for 4 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.

ii. Install the 2 screws.


b. w/ Lumbar Support:
onnect the lumbar switch connector.

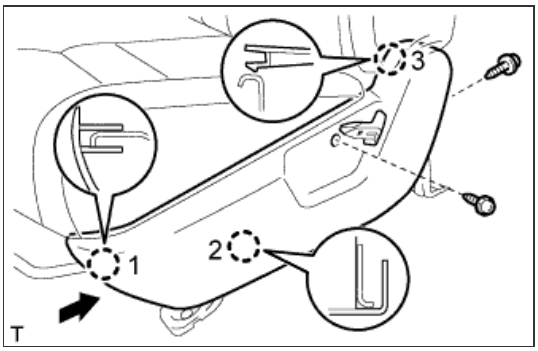


c. for 8 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.


ii. Install the 3 screws.

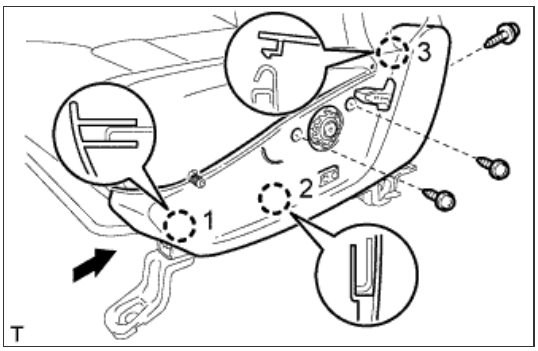

d. w/ Seatback Board:
Attach the 2 rubber bands to the hooks.

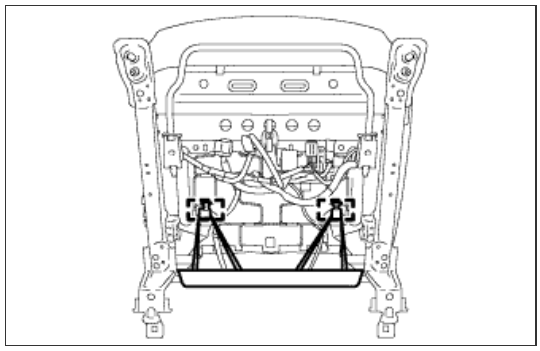


e. w/o Seatback Board:
Attach the 2 rubber bands to the hooks.

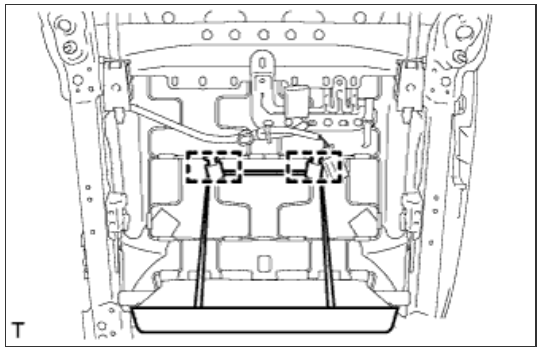

25. INSTALL RECLININ ADJUSTER RELEASE HANDLE LH


a. Attach the claw to install the reclining adjuster release handle.

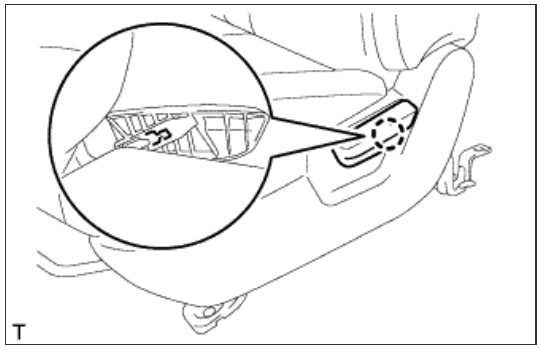

26. INSTALL VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)


a. Install the snap ring to the vertical seat adjuster knob.

b. Install the vertical seat adjuster knob to the front seat.

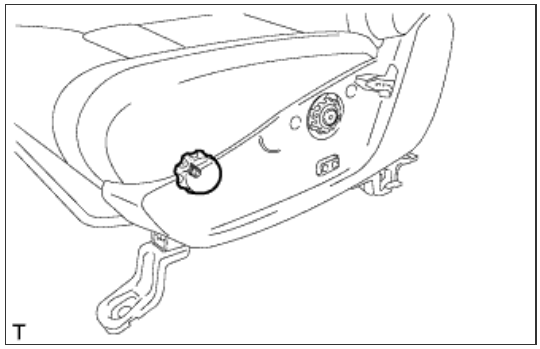


27. INSTALL VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Install the vertical adjusting handle with the 2 screws.

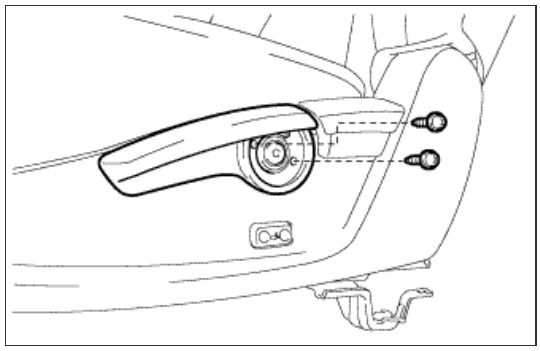

28. INSTALL VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Attach the 2 claws to install the vertical adjuster cover.

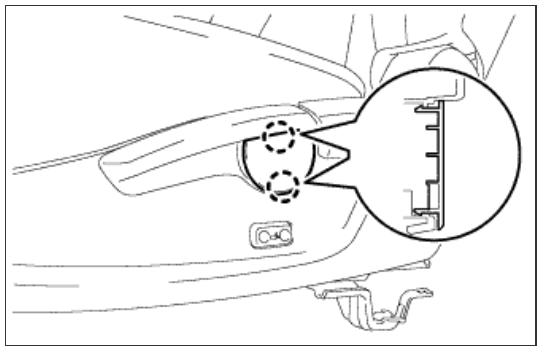

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT ASSEMBLY LH

a. Place the front seat assembly in the cabin.

NOTICE:

Be careful not to damage the vehicle body.


b. Connect the seat wire connectors under the seat.

c. Temporarily install the front seat assembly with the 4 bolts.

d. Operate the seat track adjusting handle to move the seat to the rearmost position.

e. Tighten the bolts in the order indicated in the illustration.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

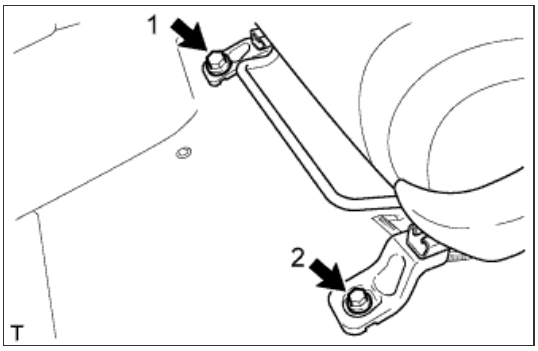

f. Operate the seat track adjusting handle to move the seat to the foremost position.


g. Tighten the bolts in the order indicated in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

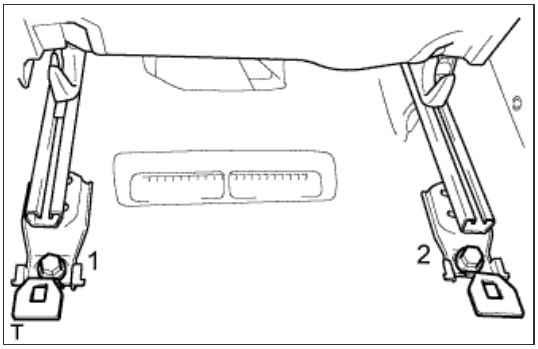


2. INSTALL REAR INNER SEAT TRACK BRACKET COVER LH

a. Attach the 3 claws to install the seat track cover.

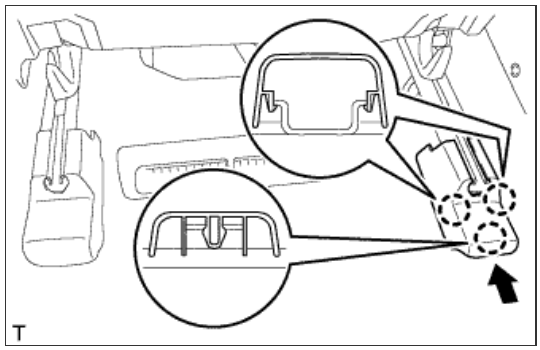


3. INSTALL REAR OUTER FRONT SEAT TRACK COVER LH

a. Attach the 3 claws to install the seat track cover.

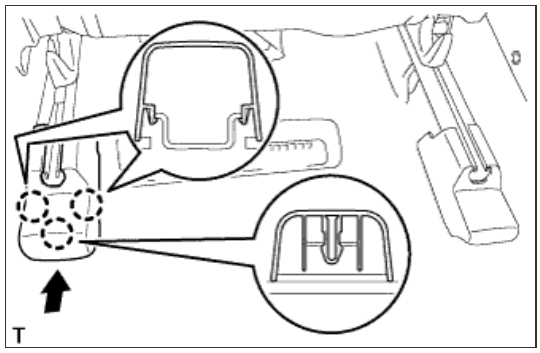


4. INSTALL FRONT INNER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the seat track bracket cover.

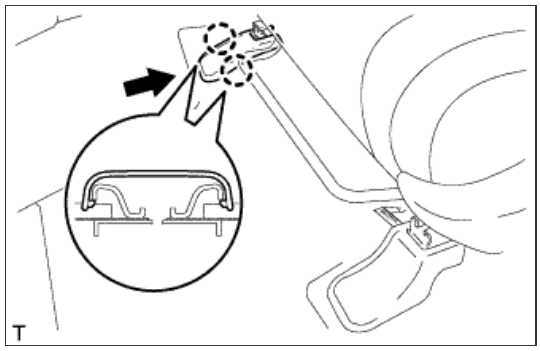

5. INSTALL FRONT OUTER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the seat track bracket cover.

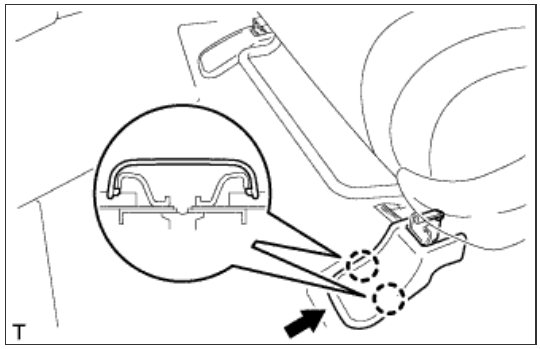

6. INSTALL FRONT SEAT HEADREST ASSEMBLY

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

a. Connect the cable to the negative (-) battery terminal.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

b. Restore the Autoaway/Return function setting to the previous condition by changing the customize parameter (Click here).

8. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

9. INSPECT FRONT SEAT ASSEMBLY

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT ASSEMBLY LH

a. Place the front seat assembly in the cabin.

NOTICE:

Be careful not to damage the vehicle body.


b. Connect the seat wire connectors under the seat.

c. Temporarily install the front seat assembly with the 4 bolts.

d. Operate the seat track adjusting handle to move the seat to the rearmost position.

e. Tighten the bolts in the order indicated in the illustration.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

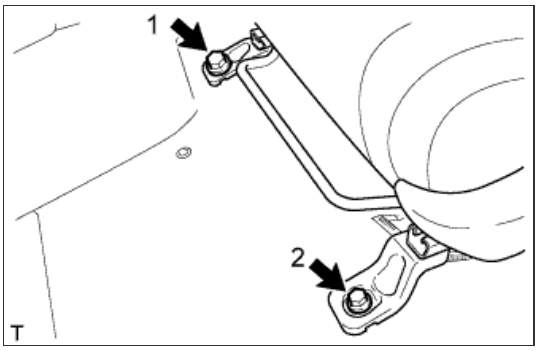

f. Operate the seat track adjusting handle to move the seat to the foremost position.


g. Tighten the bolts in the order indicated in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

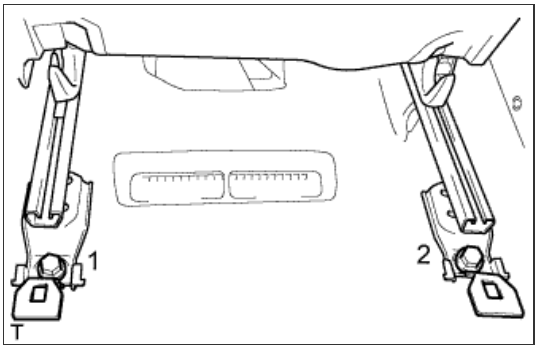


2. INSTALL REAR INNER SEAT TRACK BRACKET COVER LH

a. Attach the 3 claws to install the seat track cover.

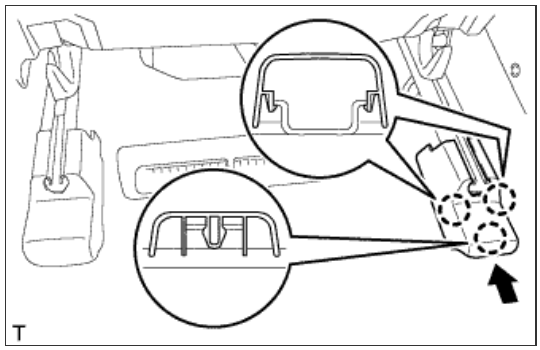


3. INSTALL REAR OUTER FRONT SEAT TRACK COVER LH

a. Attach the 3 claws to install the seat track cover.

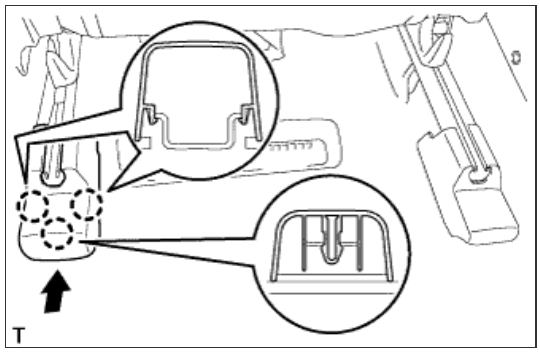


4. INSTALL FRONT INNER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the seat track bracket cover.

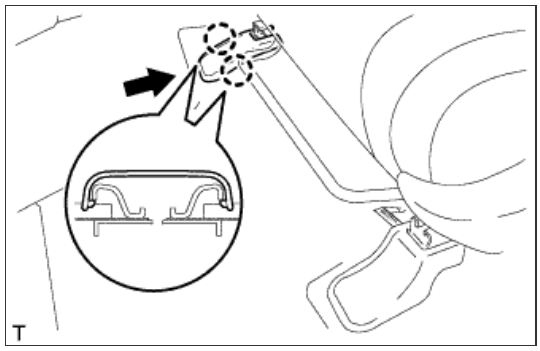

5. INSTALL FRONT OUTER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the seat track bracket cover.

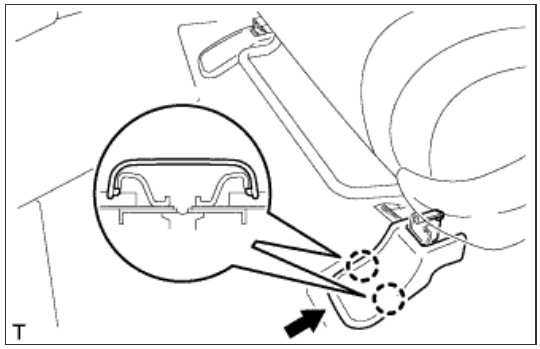

6. INSTALL FRONT SEAT HEADREST ASSEMBLY

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

a. Connect the cable to the negative (-) battery terminal.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


b. Restore the Autoaway/Return function setting to the previous condition by changing the customize parameter (Click here).


8. CHECK SRS WARNING LIGHT


a. Check the SRS warning light (Click here).

9. INSPECT FRONT SEAT ASSEMBLY


for Preparation Click here

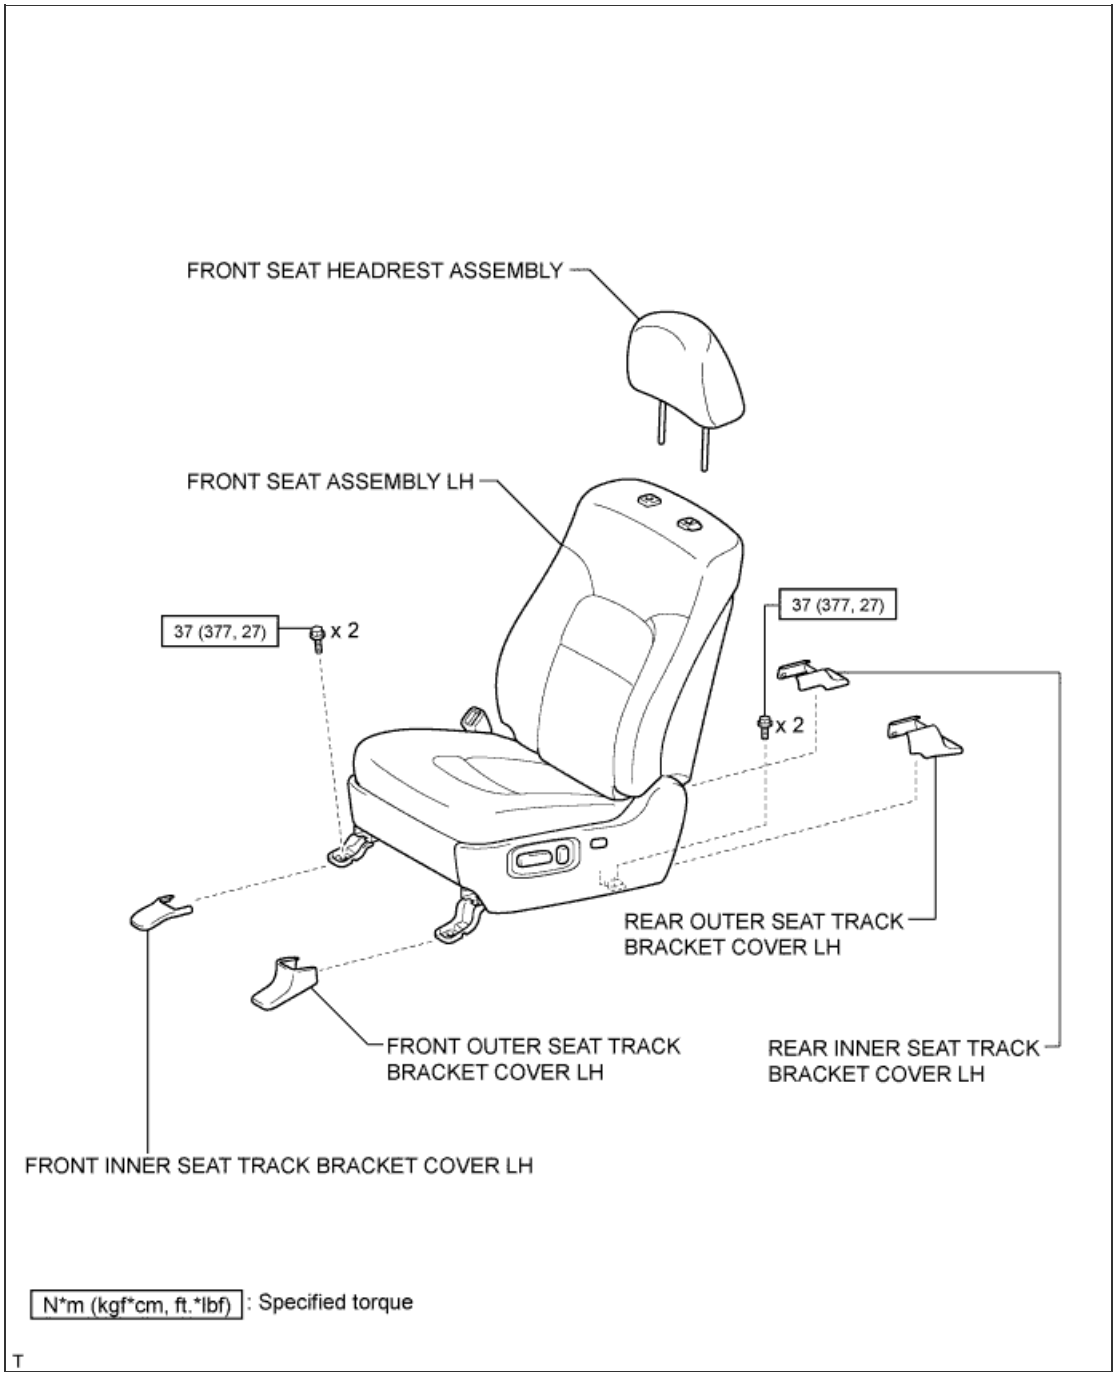

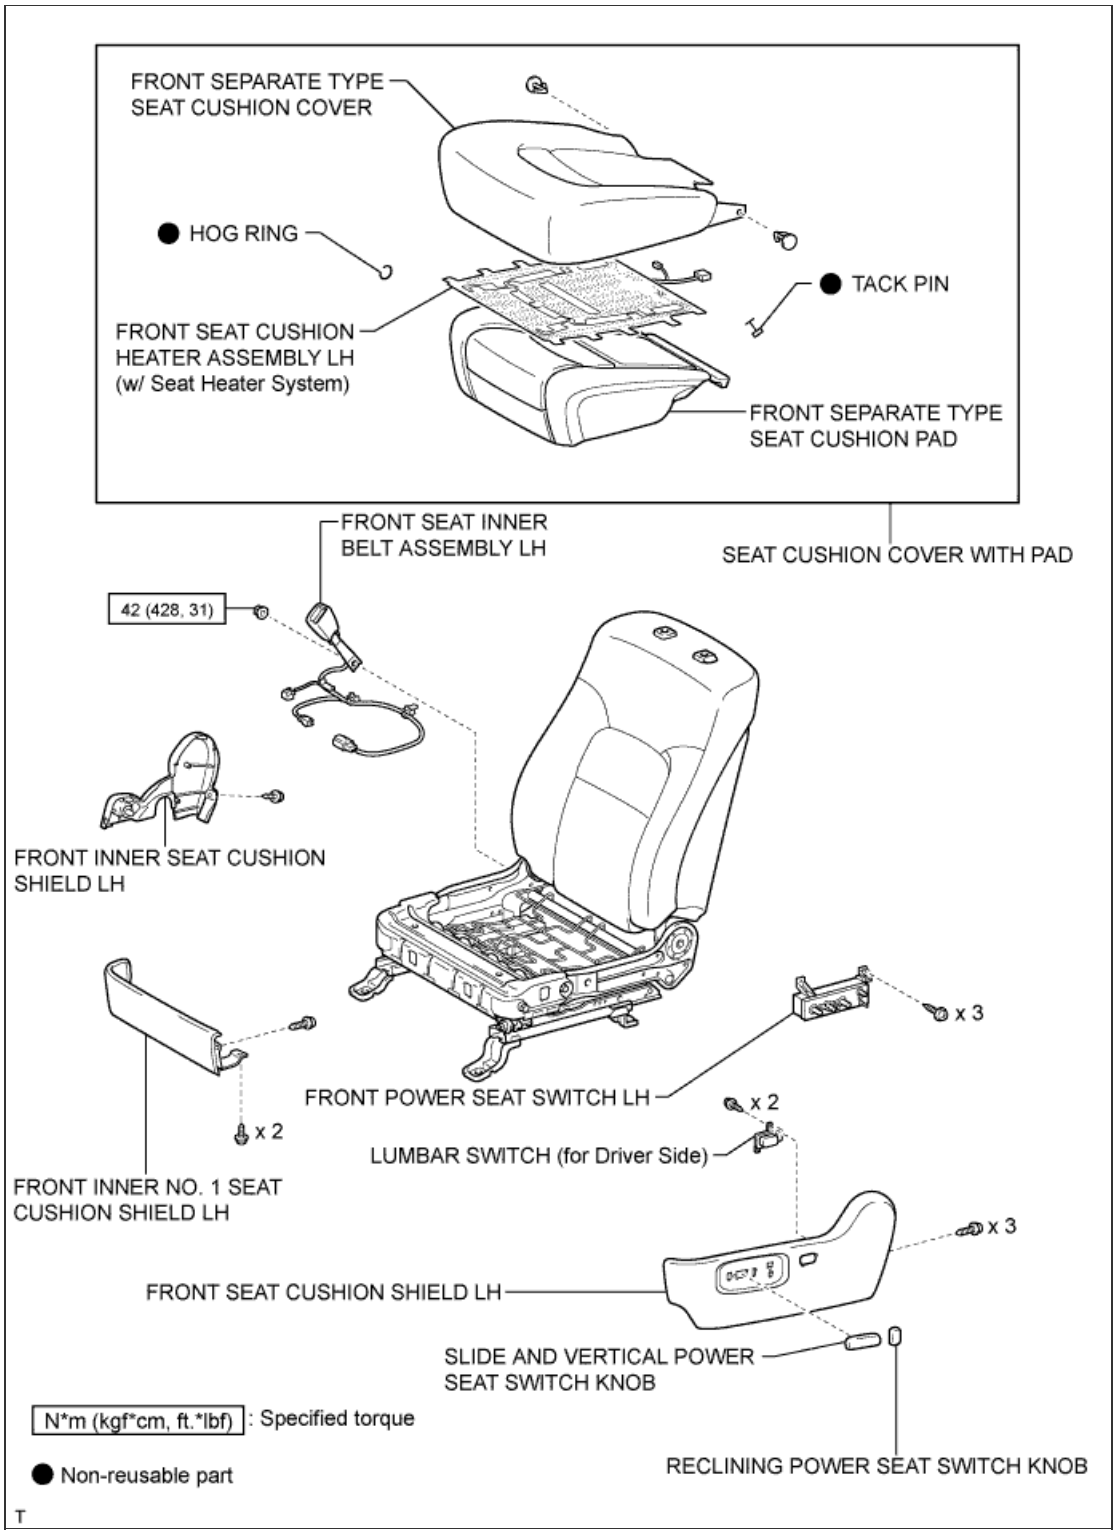
FRONT SEPARATE TYPE SEAT CUSHION COVER
HOG RING
TACK PIN
FRONT SEAT CUSHION HEATER ASSEMBLY LH (w/ Seat Heater System)
FRONT SEPARATE TYPE SEAT CUSHION PAD
FRONT SEAT INNER BELT ASSEMBLY LH
SEAT CUSHION COVER WITH PAD
42 (428, 31)
FRONT INNER SEAT CUSHION SHIELD LH
x 3
FRONT POWER SEAT SWITCH LH
x 2
x 2
LUMBAR SWITCH (for Driver Side)
FRONT INNER NO. 1 SEAT CUSHION SHIELD LH
x 3
FRONT SEAT CUSHION SHIELD LH
SLIDE AND VERTICAL POWER SEAT SWITCH KNOB
N*m (kgf*cm, ft.*lbf) : Specified torque
RECLINING POWER SEAT SWITCH KNOB
Non-reusable part
T

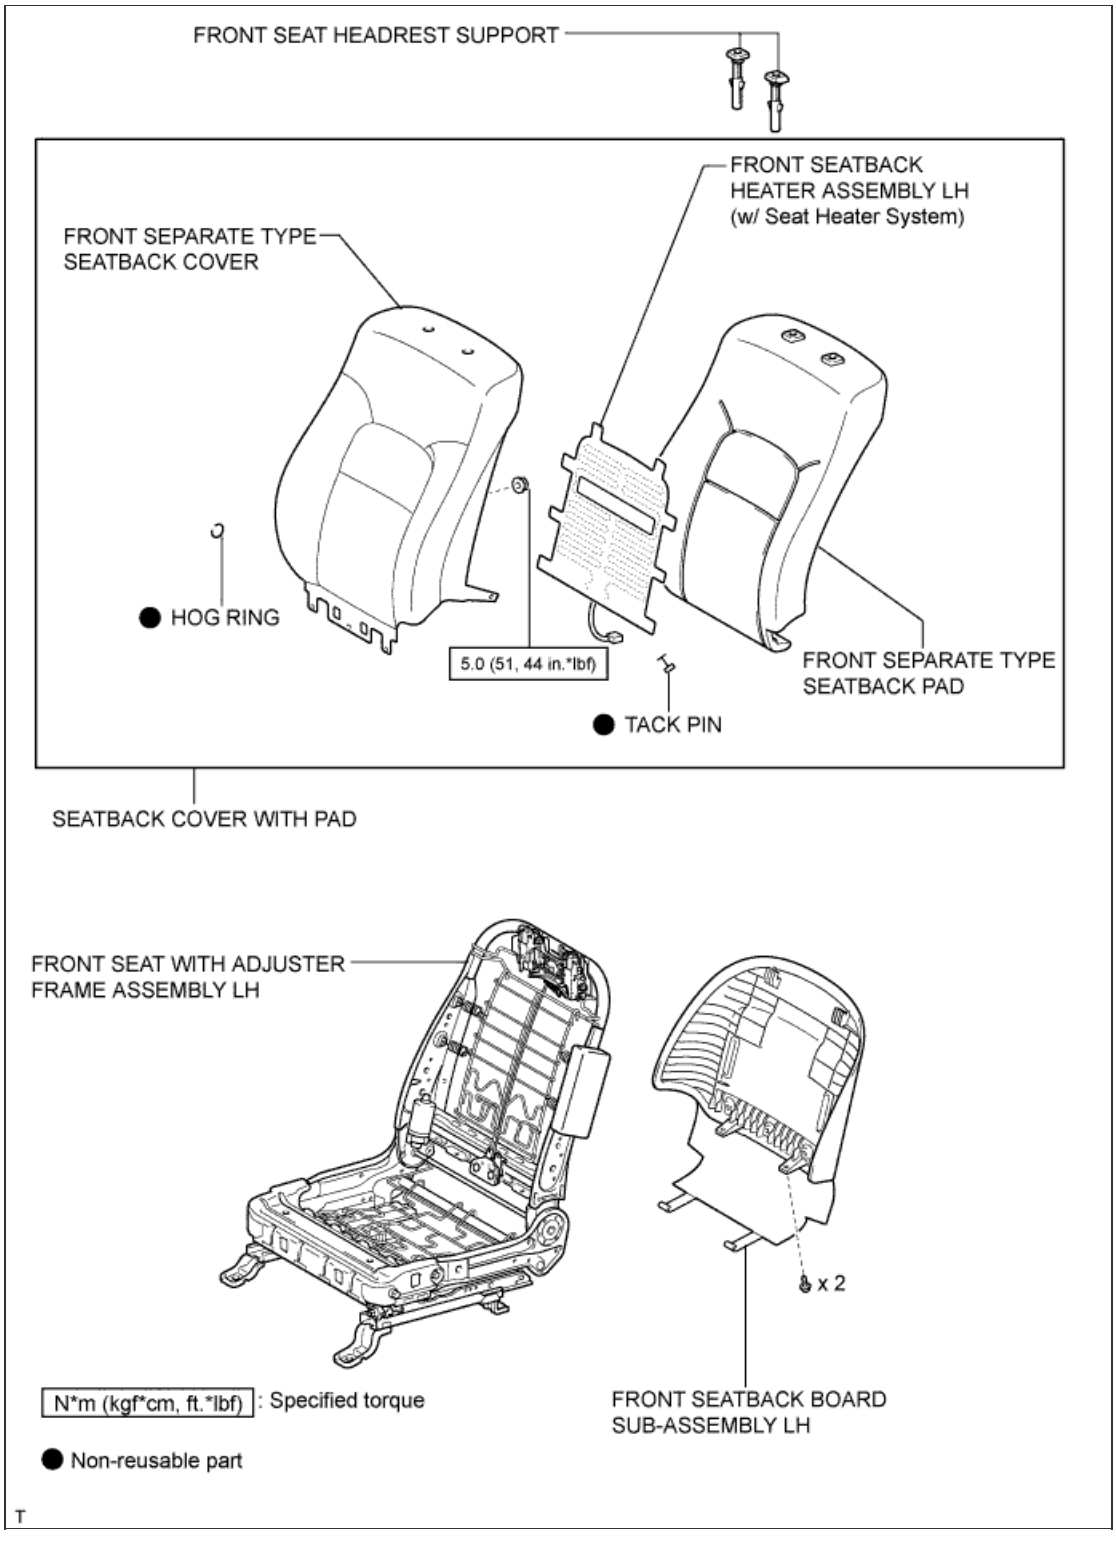
FRONT SEAT HEADREST SUPPORT
FRONT SEATBACK
HEATER ASSEMBLY LH
(w/ Seat Heater System)
FRONT SEPARATE TYPE
SEATBACK COVER
HOG RING
5.0 (51, 44 in.*lbf)
TACK PIN
FRONT SEPARATE TYPE
SEATBACK PAD
SEATBACK COVER WITH PAD
FRONT SEAT WITH ADJUSTER
FRAME ASSEMBLY LH
x 2
N*m (kgf*cm, ft.*lbf) : Specified torque
FRONT SEATBACK BOARD
SUB-ASSEMBLY LH
Non-reusable part

T

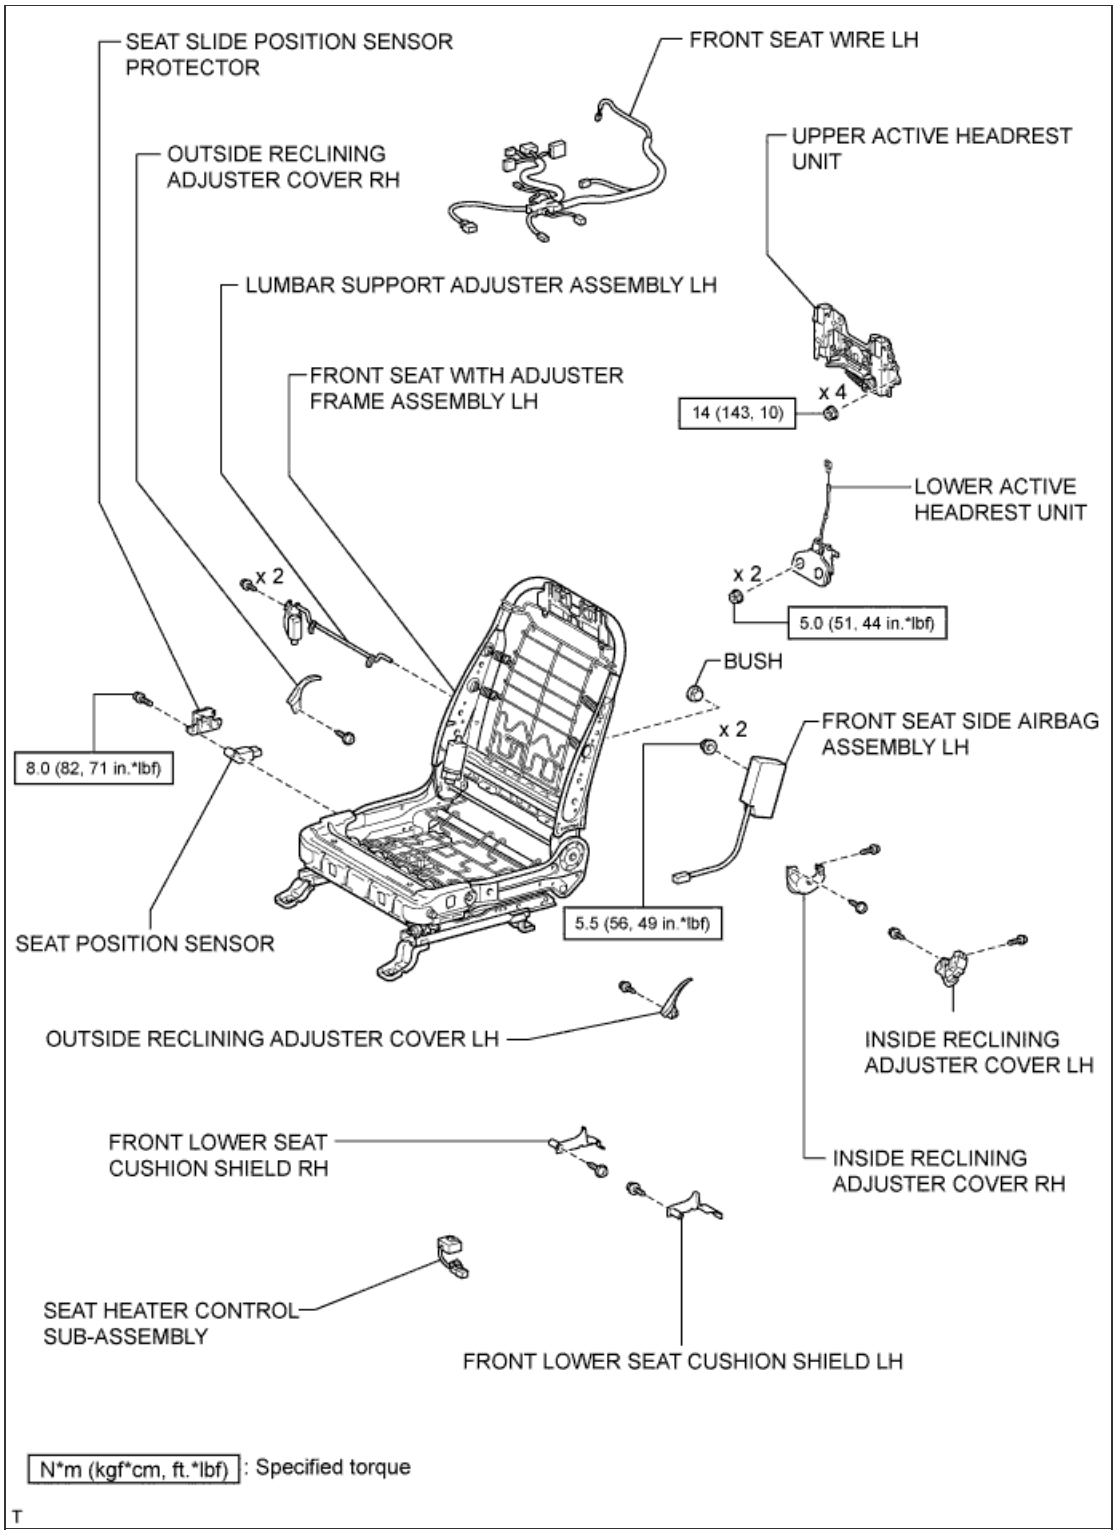
SEAT SLIDE POSITION SENSOR PROTECTOR
FRONT SEAT WIRE LH
OUTSIDE RECLINING ADJUSTER COVER RH
UPPER ACTIVE HEADREST UNIT
LUMBAR SUPPORT ADJUSTER ASSEMBLY LH
FRONT SEAT WITH ADJUSTER FRAME ASSEMBLY LH
x 4
14 (143, 10)
LOWER ACTIVE HEADREST UNIT
x 2
x 2
5.0 (51, 44 in.*lbf)
BUSH
8.0 (82, 71 in.*lbf)
x 2
FRONT SEAT SIDE AIRBAG ASSEMBLY LH
5.5 (56, 49 in.*lbf)
SEAT POSITION SENSOR
OUTSIDE RECLINING ADJUSTER COVER LH
INSIDE RECLINING ADJUSTER COVER LH
FRONT LOWER SEAT CUSHION SHIELD RH
INSIDE RECLINING ADJUSTER COVER RH
SEAT HEATER CONTROL SUB-ASSEMBLY
FRONT LOWER SEAT CUSHION SHIELD LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT HEADREST ASSEMBLY


2. REMOVE REAR OUTER SEAT TRACK BRACKET COVER LH

a. Operate the power seat switch (slide switch) to move the seat to the foremost position.

b. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

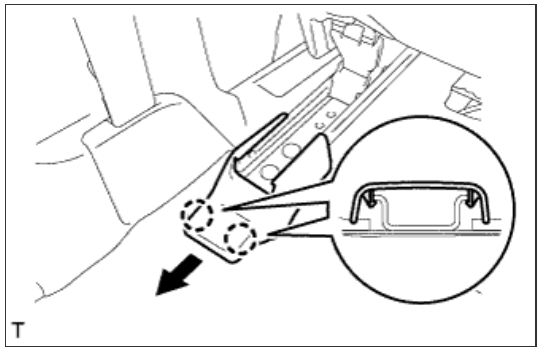


3. REMOVE REAR INNER SEAT TRACK BRACKET COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

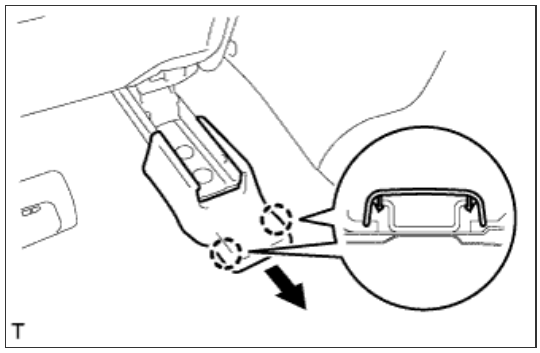


4. REMOVE FRONT OUTER SEAT TRACK BRACKET COVER LH

a. Operate the power seat switch (slide switch) to move the seat to the rearmost position.

b. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

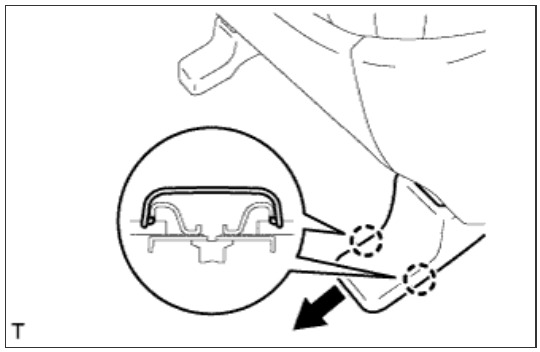


5. REMOVE FRONT INNER SEAT TRACK BRACKET COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

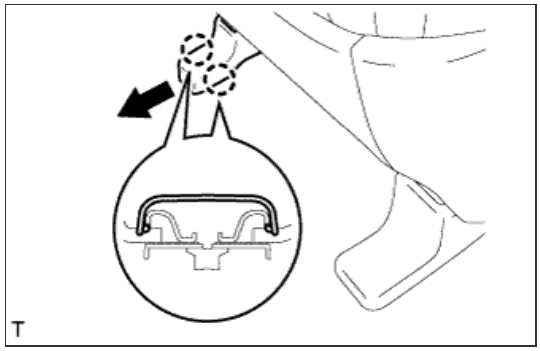

6. REMOVE FRONT SEAT ASSEMBLY LH

a. Disable the Autoaway/Return function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:


Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.

b. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully retract and tilt up the steering column assembly.

c. Turn the engine switch off.

d. Remove the 2 bolts.

e. Operate the power seat switch (slide switch) to move the seat to the foremost position.

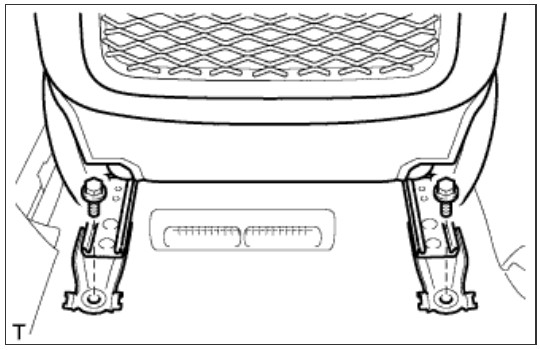

f. Remove the 2 bolts.

g. Operate the power seat switch (slide switch) and move the seat to the center position, and operate the power seat switch (reclining switch) and move the seatback to the upright position.

h. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

i. Disconnect the connectors under the seat.

j. Remove the front seat assembly.

NOTICE:

Be careful not to damage the vehicle body.

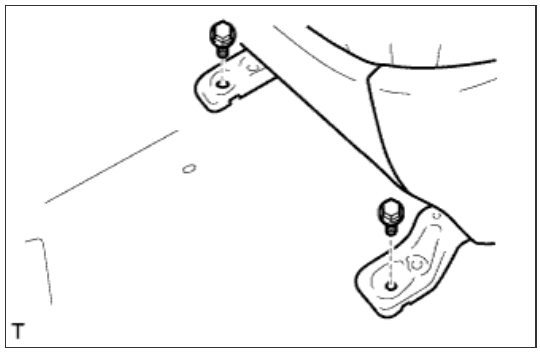

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT HEADREST ASSEMBLY


2. REMOVE REAR OUTER SEAT TRACK BRACKET COVER LH

a. Operate the power seat switch (slide switch) to move the seat to the foremost position.

b. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

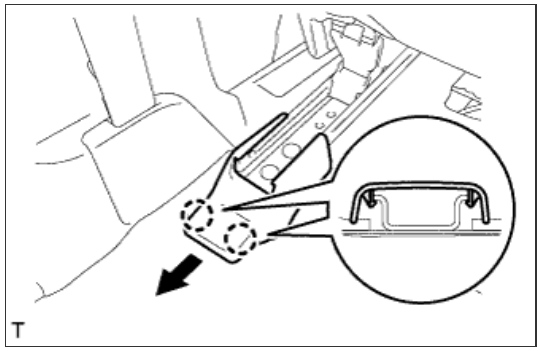


3. REMOVE REAR INNER SEAT TRACK BRACKET COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

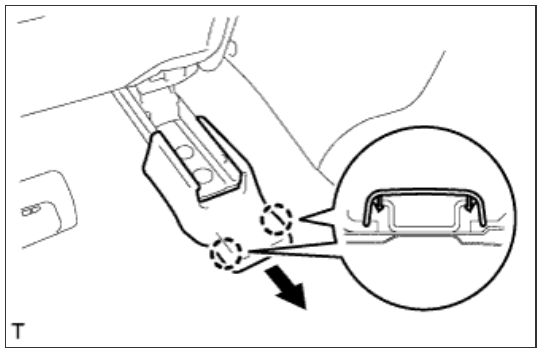


4. REMOVE FRONT OUTER SEAT TRACK BRACKET COVER LH

a. Operate the power seat switch (slide switch) to move the seat to the rearmost position.

b. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

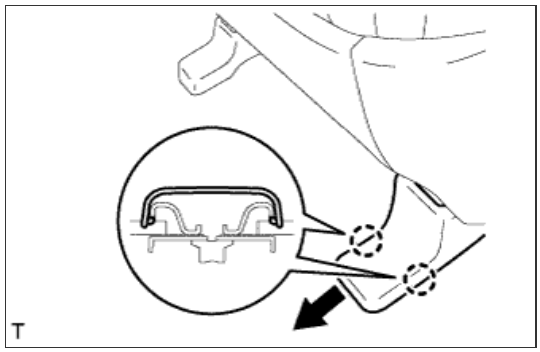


5. REMOVE FRONT INNER SEAT TRACK BRACKET COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

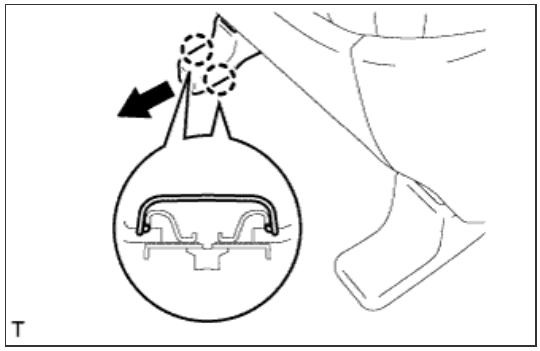

6. REMOVE FRONT SEAT ASSEMBLY LH

a. Disable the Autoaway/Return function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:


Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.

b. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully retract and tilt up the steering column assembly.

c. Turn the engine switch off.

d. Remove the 2 bolts.

e. Operate the power seat switch (slide switch) to move the seat to the foremost position.

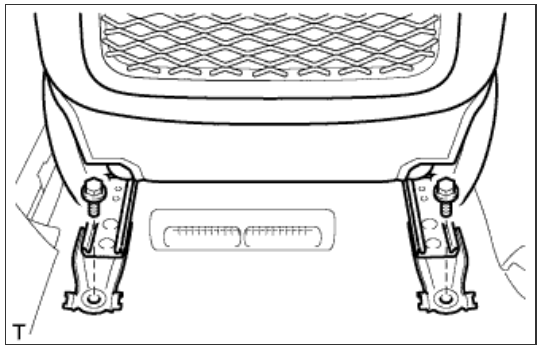

f. Remove the 2 bolts.

g. Operate the power seat switch (slide switch) and move the seat to the center position, and operate the power seat switch (reclining switch) and move the seatback to the upright position.

h. Disconnect the cable from the negative (-) battery terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

i. Disconnect the connectors under the seat.

j. Remove the front seat assembly.

NOTICE:

Be careful not to damage the vehicle body.

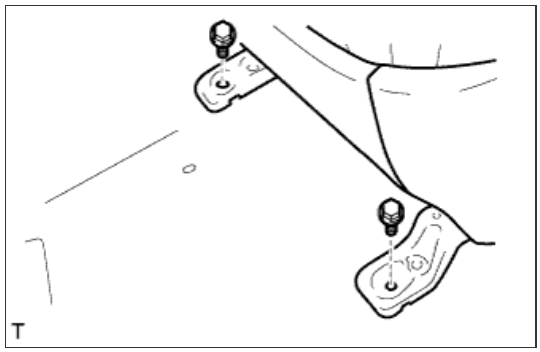

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**


1. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

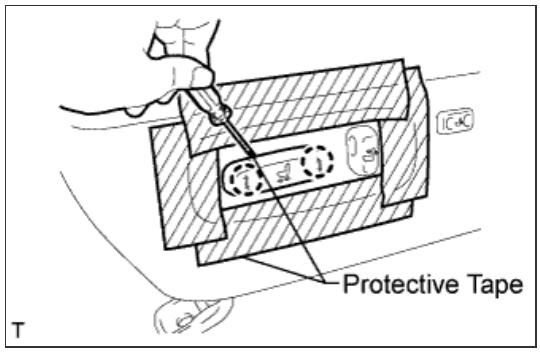


2. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

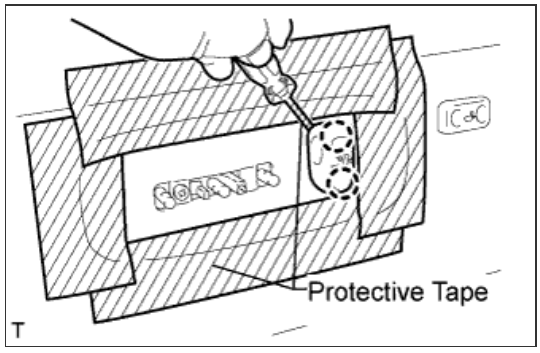

3. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

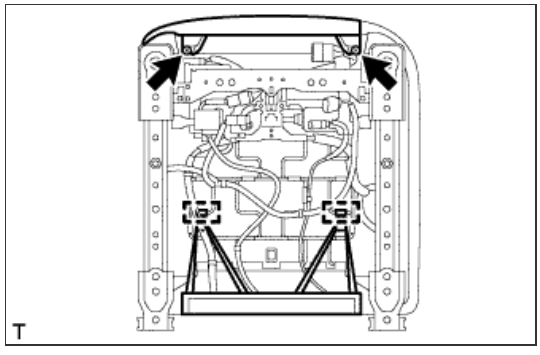

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side:
Disconnect the power seat lumbar switch connectors.

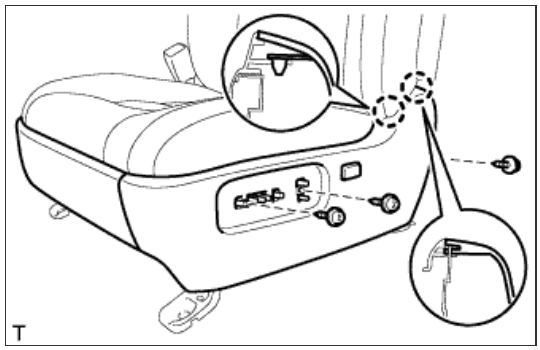

4. REMOVE FRONT INNER NO. 1 SEAT CUSHION SHIELD LH


a. Remove the screw.

b. Detach the claw and remove the cushion shield.

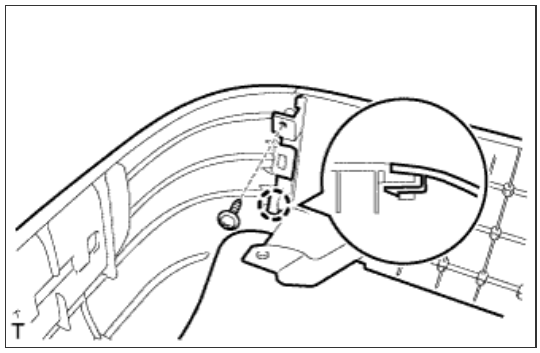

5. REMOVE LUMBAR SWITCH (for Driver Side)


a. Remove the 2 screws and switch.

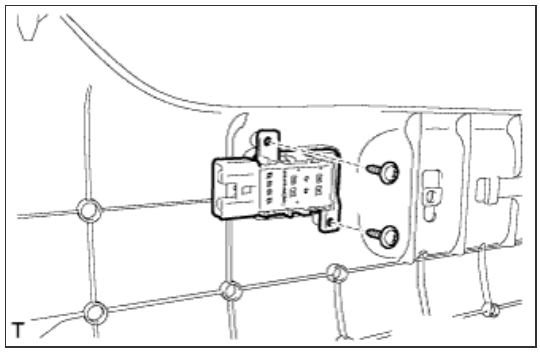

6. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

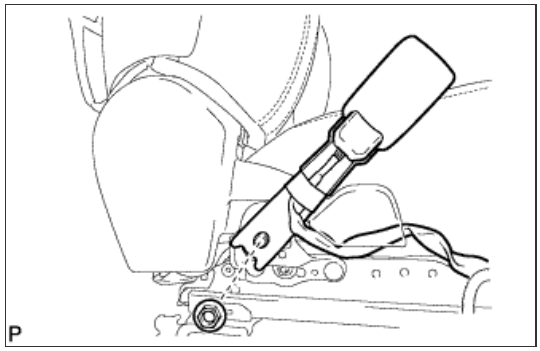

7. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.

b. Detach the 2 claws and clip, and then remove the cushion shield.

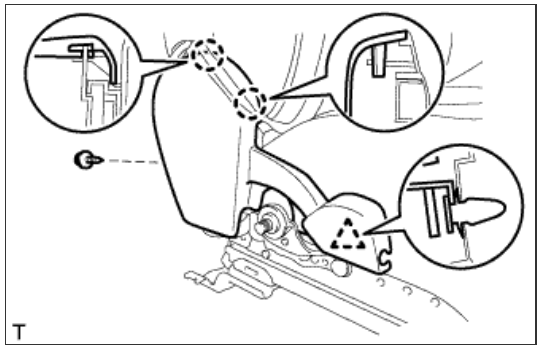


8. REMOVE FRONT POWER SEAT SWITCH LH

a. w/ Seat Position Memory System:
Disconnect the 2 connectors.


b. w/o Seat Position Memory System:
Disconnect the connector.

c. Remove the 3 screws and switch.

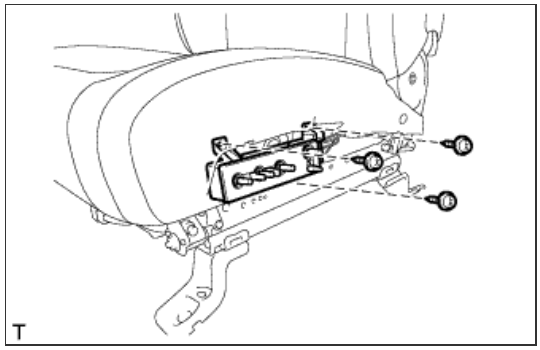


9. REMOVE SEAT CUSHION COVER WITH PAD


a. Using a clip remover, remove the 2 clips.

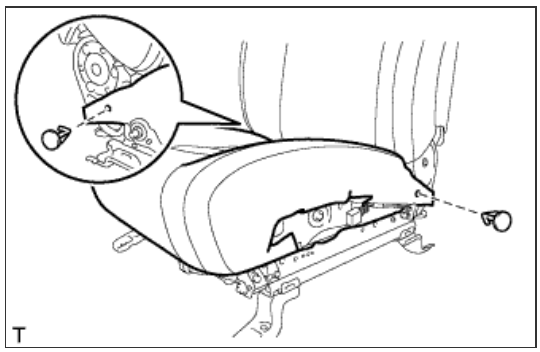


b. Disconnect the seat heater connector and detach the 2 wire harness clamps.

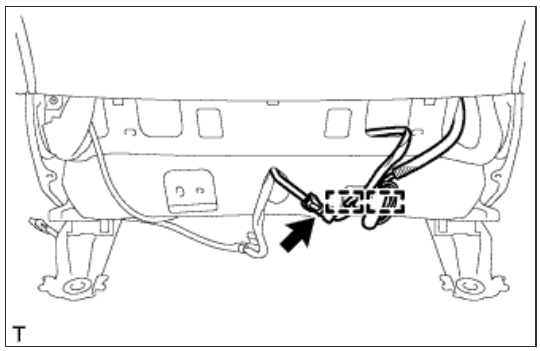

c. Disconnect the seat heater control connector and detach the wire harness clamp.

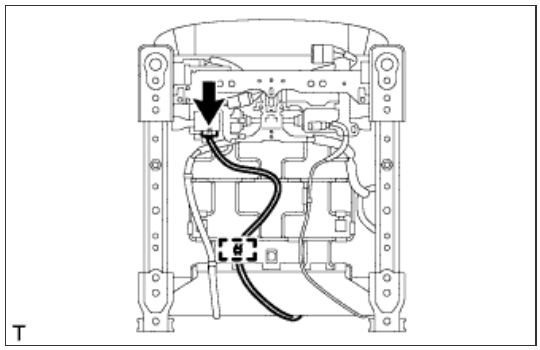

d. for Front Passenger Side:

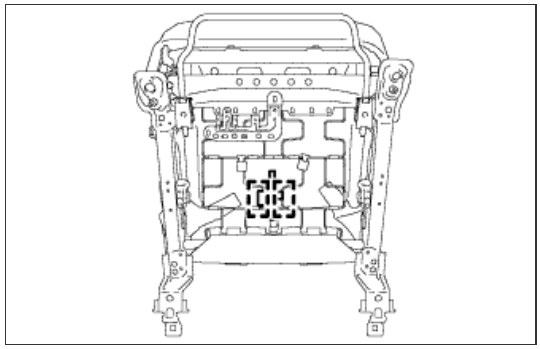


i. Disconnect the seat belt warning sensor connector.

ii. Detach the 2 clamps and remove the seat belt warning sensor connector.


e. Bend the 2 seat frame claws upward.

f. Detach the hooks and remove the seat cushion cover with pad.

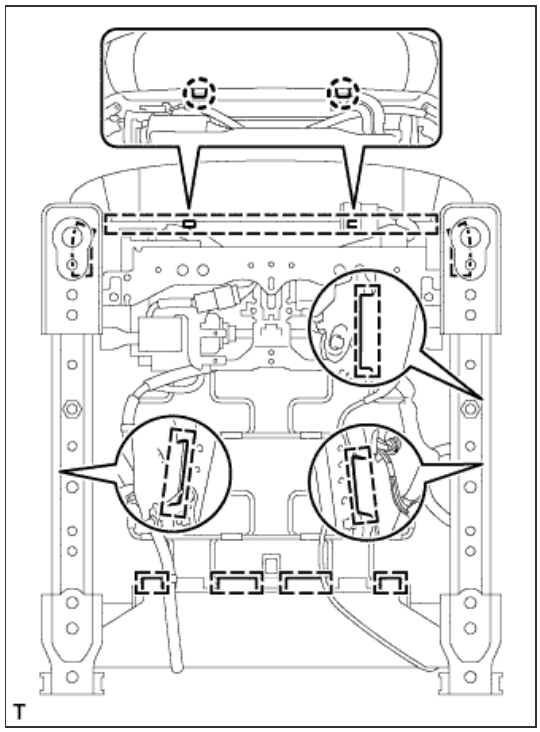


10. REMOVE FRONT SEPARATE TYPE SEAT CUSHION COVER

a. Remove the hog rings and front seat cushion cover.

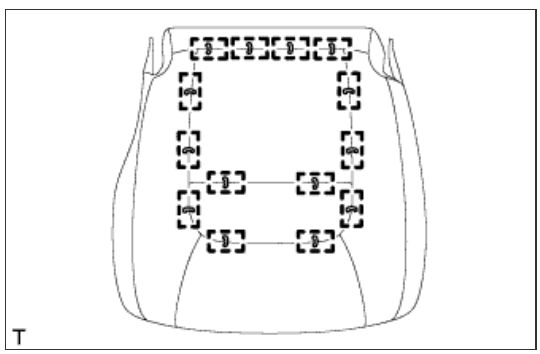

11. REMOVE FRONT SEAT CUSHION HEATER ASSEMBLY LH (w/ Seat Heater System)


a. Cut off the tack pins which fasten the seat heater to the seat cushion cover, and then remove the seat cushion heater from the seat cushion cover.

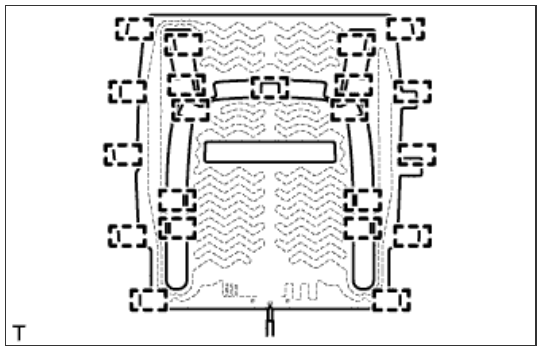

12. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

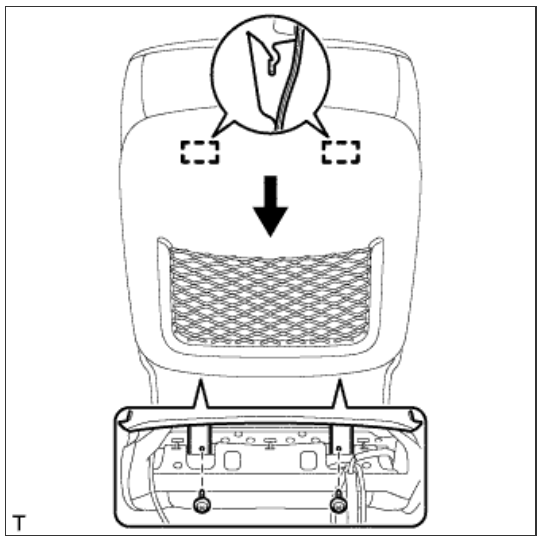


13. REMOVE FRONT SEAT HEADREST SUPPORT

a. Using a screwdriver, detach the 4 claws and remove the 2 headrest supports.

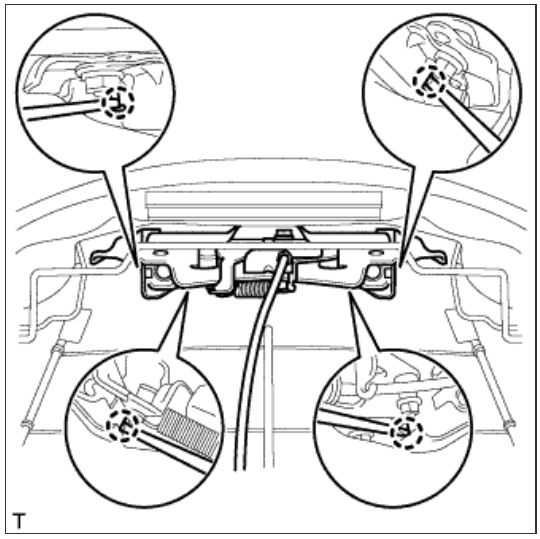


14. REMOVE SEATBACK COVER WITH PAD

a. Remove the 3 hog rings and detach the 9 hooks.

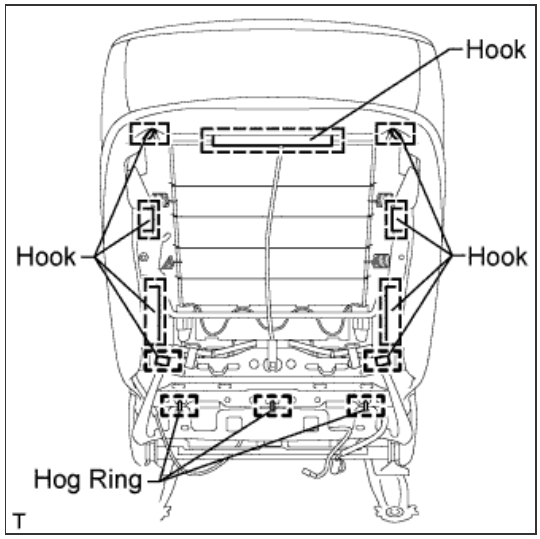


b. Remove the nut and seatback cover bracket from the seat frame.

c. Remove the seatback cover with pad.

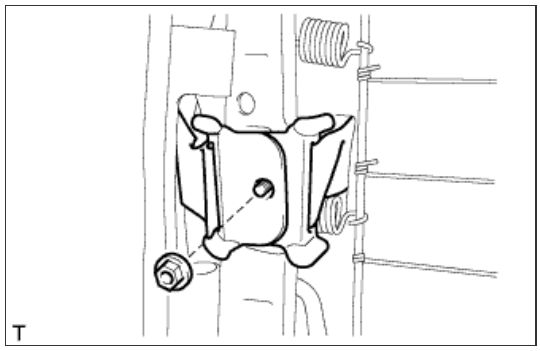


15. REMOVE FRONT SEPARATE TYPE SEATBACK COVER

a. Disconnect the seatback cover bracket from the seatback pad.

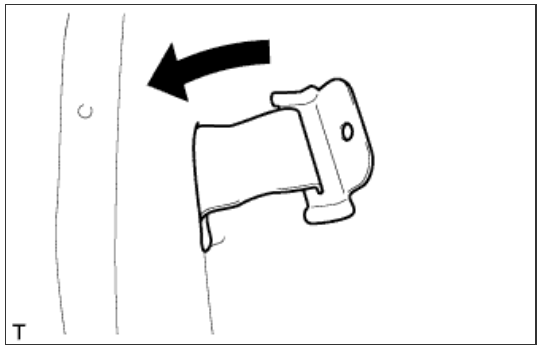


b. Remove the hog rings.

c. Detach the fastening tape and remove the seatback cover.

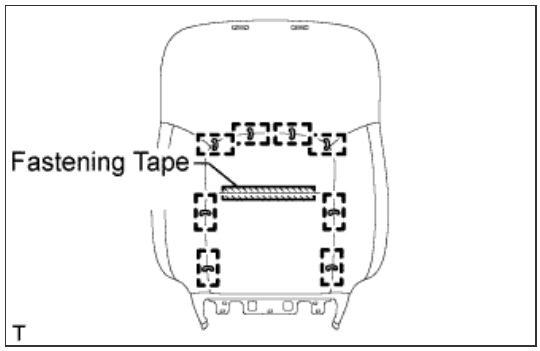

16. REMOVE FRONT SEATBACK HEATER ASSEMBLY LH (w/ Seat Heater System)

a. Cut off the tack pins which fasten the seatback heater to the seatback cover, and then remove the seatback heater from the seatback cover.

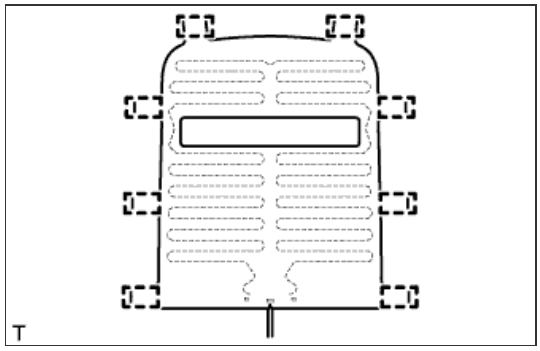


17. REMOVE INSIDE RECLINING ADJUSTER COVER LH

a. Detach the wire harness clamp.

b. Remove the 2 screws.

c. Detach the claw and remove the cover.

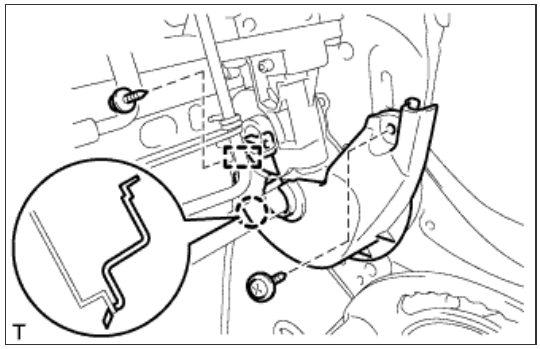

18. REMOVE INSIDE RECLINING ADJUSTER COVER RH


a. Detach the wire harness clamp.

b. Remove the 2 screws.

c. Detach the claw and remove the cover.

19. REMOVE OUTSIDE RECLINING ADJUSTER COVER LH

a. Remove the screw and detach the claw, and then remove the reclining adjuster cover.

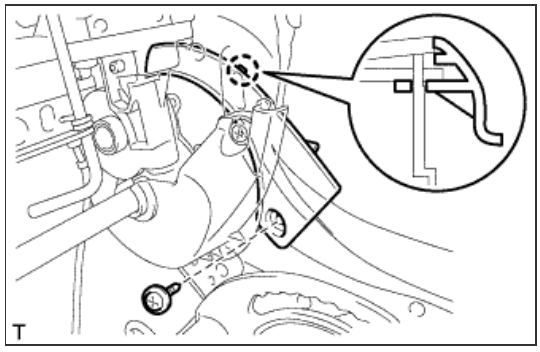

20. REMOVE OUTSIDE RECLINING ADJUSTER COVER RH


a. Remove the screw and detach the claw, and then remove the reclining adjuster cover.

21. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (for Driver Side)

a. Remove the 4 springs.


a. Remove the 4 springs.

b. Detach the 4 hooks and remove the seatback spring.

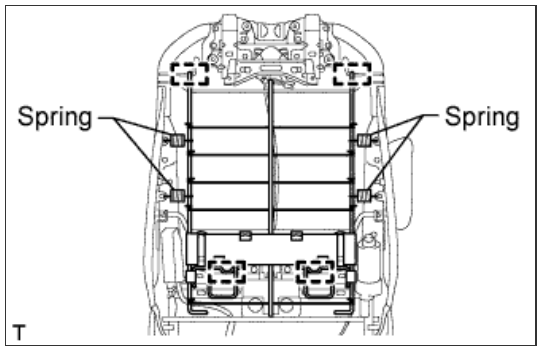


c. Disconnect the lumbar support adjuster connector.

d. Remove the 2 screws and lumbar support adjuster.

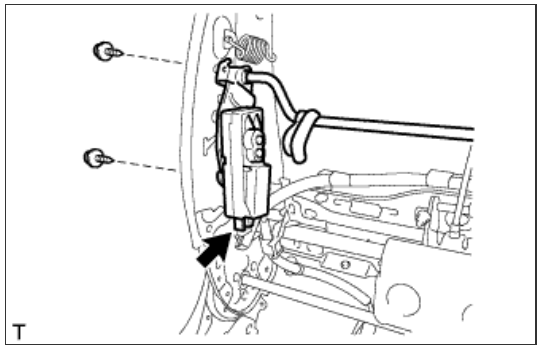


e. Detach the 3 claws and remove the bush from the seat frame.

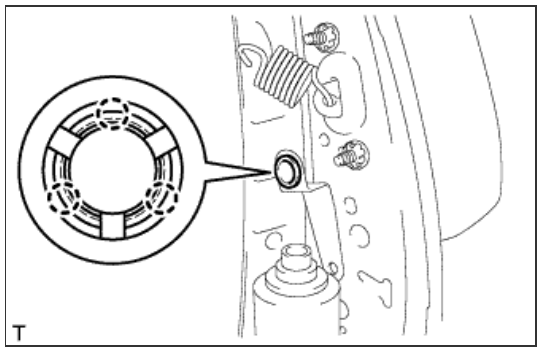

22. REMOVE LOWER ACTIVE HEADREST UNIT


a. Remove the 6 nuts, and then remove the lower active headrest unit together with the upper active headrest unit.

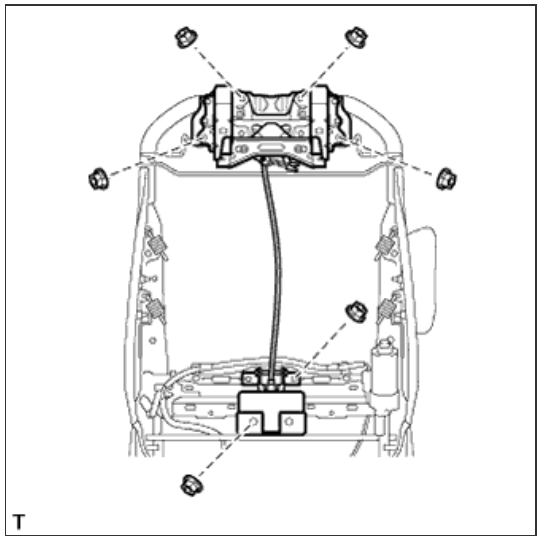

23. REMOVE UPPER ACTIVE HEADREST UNIT

a. Remove the nut and cable clamp to remove the upper active headrest unit from


the lower active headrest unit.

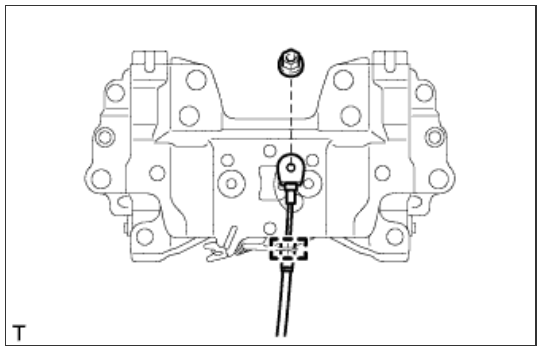

24. REMOVE FRONT LOWER SEAT CUSHION SHIELD LH

a. Remove the screw.

b. Detach the hook and remove the lower cushion shield.

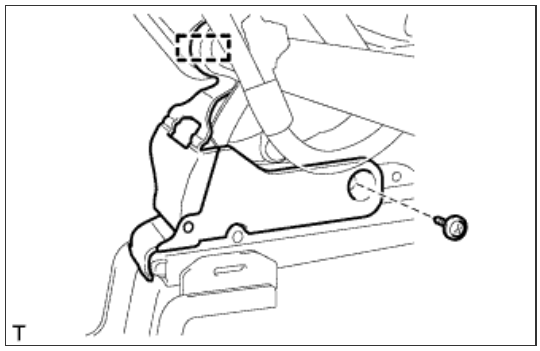

25. REMOVE FRONT LOWER SEAT CUSHION SHIELD RH


a. Remove the screw.

b. Detach the hook and remove the lower cushion shield.

26. REMOVE SEAT HEATER CONTROL SUB-ASSEMBLY (w/ Seat Heater System)

a. Disconnect the seat heater control connector and detach the clamp.


b. Using a screwdriver, detach the claw and remove the seat heater control.

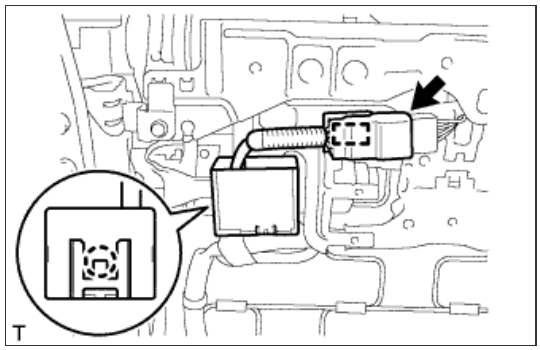


27. REMOVE SEAT POSITION SENSOR

a. Using a T30 "TORX" socket wrench, remove the screw and seat position sensor with sensor protector.

b. Disconnect the connector.

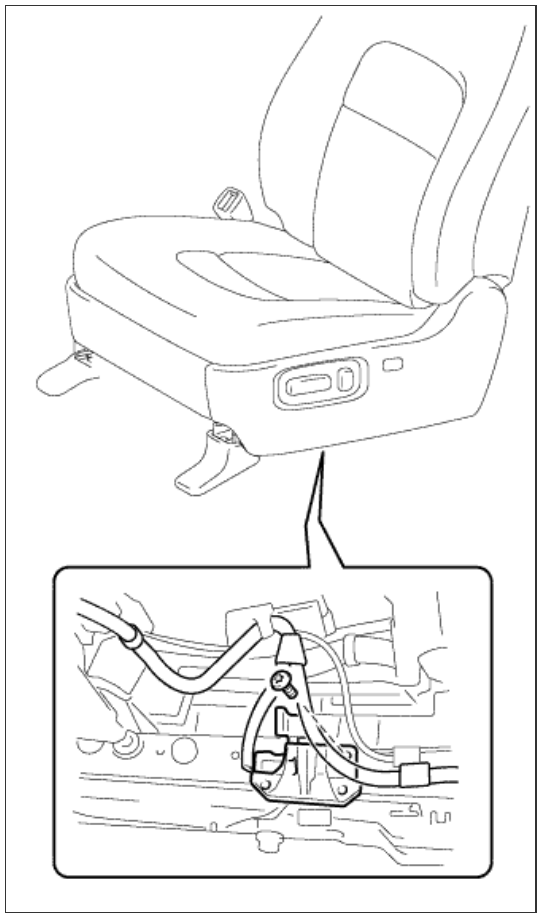


c. Remove the seat slide position sensor protector from the seat position sensor.

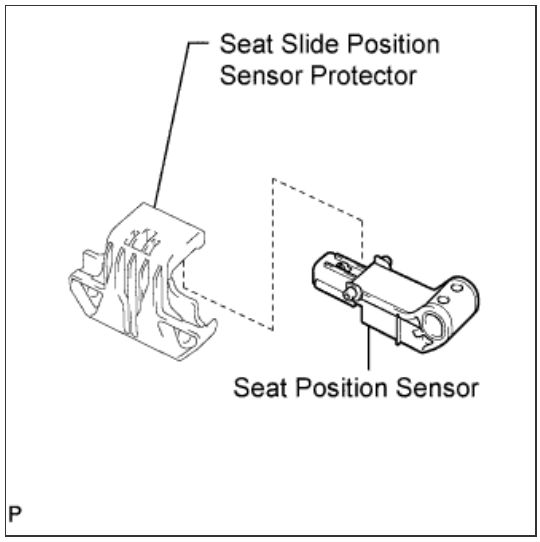

28. REMOVE FRONT SEAT SIDE AIRBAG ASSEMBLY LH

a. Detach the 5 clamps and disconnect the wire harness.

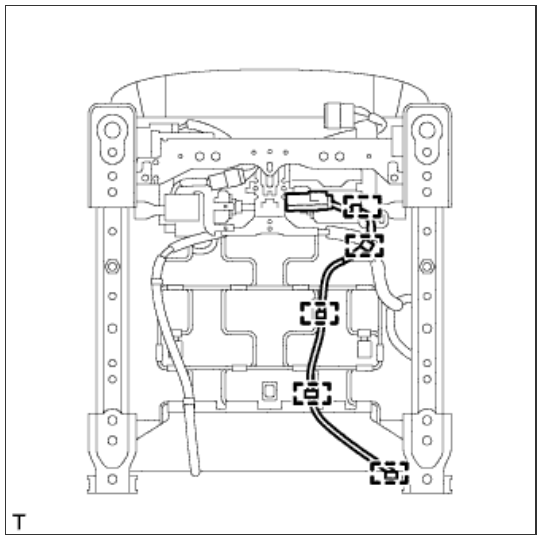


b. Detach the 2 clamps and disconnect the wire harness.

c. Remove the 2 nuts and front seat side airbag assembly .

CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.

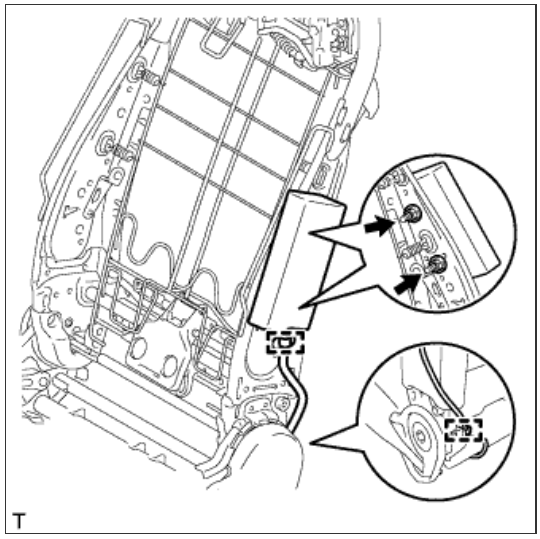

29. REMOVE FRONT SEAT WIRE LH

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**


1. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

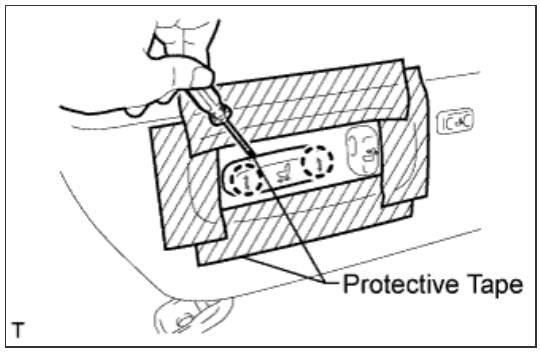


2. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

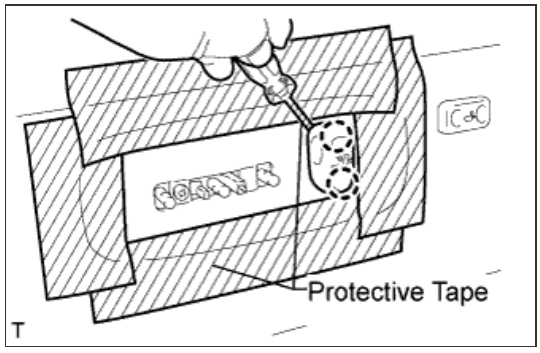

3. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

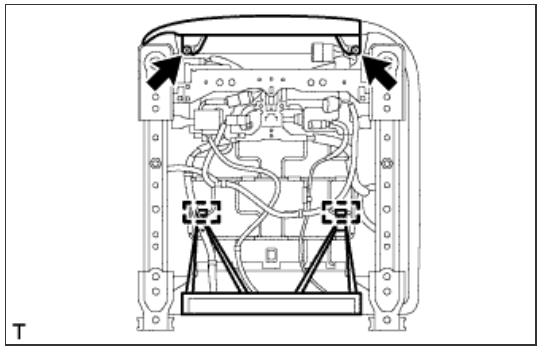

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side:
Disconnect the power seat lumbar switch connectors.

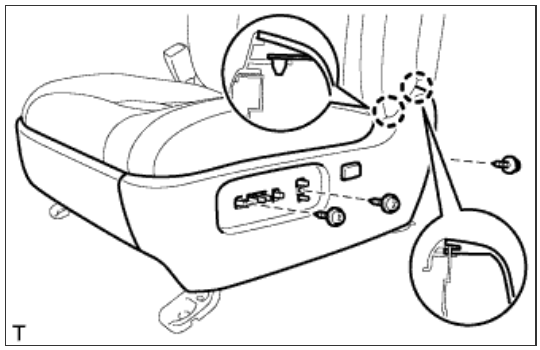

4. REMOVE FRONT INNER NO. 1 SEAT CUSHION SHIELD LH


a. Remove the screw.

b. Detach the claw and remove the cushion shield.

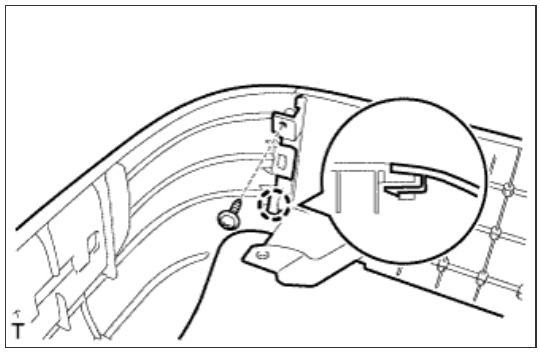

5. REMOVE LUMBAR SWITCH (for Driver Side)


a. Remove the 2 screws and switch.

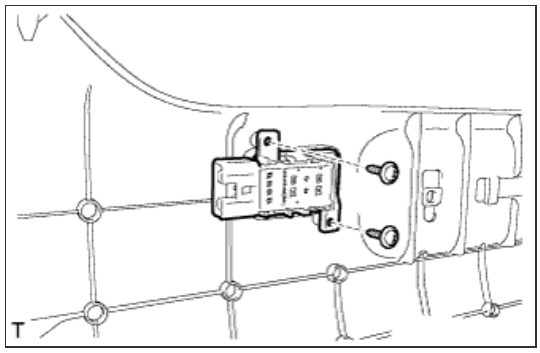

6. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

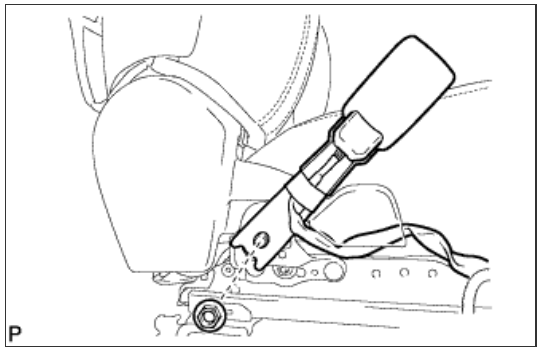

7. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.

b. Detach the 2 claws and clip, and then remove the cushion shield.

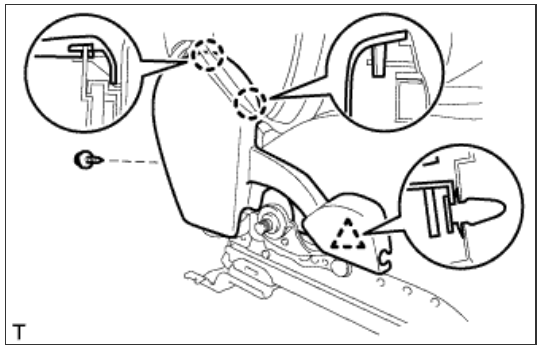


8. REMOVE FRONT POWER SEAT SWITCH LH

a. w/ Seat Position Memory System:
Disconnect the 2 connectors.


b. w/o Seat Position Memory System:
Disconnect the connector.

c. Remove the 3 screws and switch.

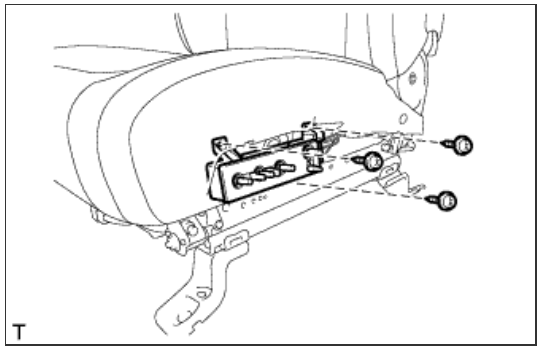


9. REMOVE SEAT CUSHION COVER WITH PAD


a. Using a clip remover, remove the 2 clips.

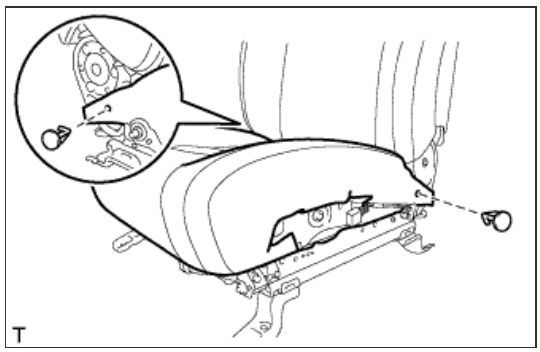


b. Disconnect the seat heater connector and detach the 2 wire harness clamps.

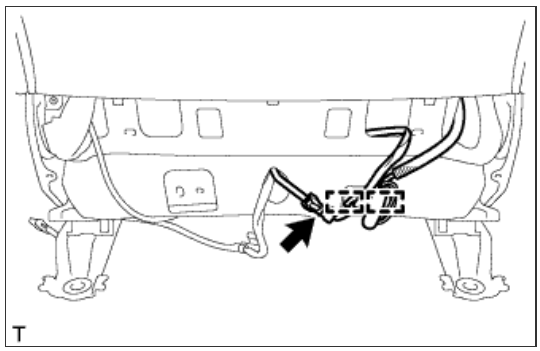

c. Disconnect the seat heater control connector and detach the wire harness clamp.

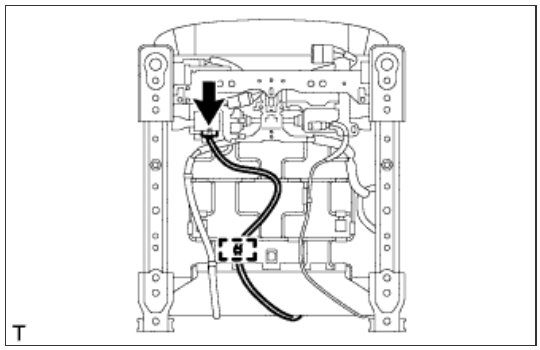

d. for Front Passenger Side:

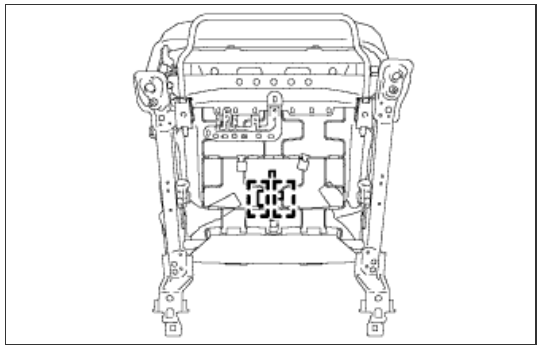


i. Disconnect the seat belt warning sensor connector.

ii. Detach the 2 clamps and remove the seat belt warning sensor connector.


e. Bend the 2 seat frame claws upward.

f. Detach the hooks and remove the seat cushion cover with pad.

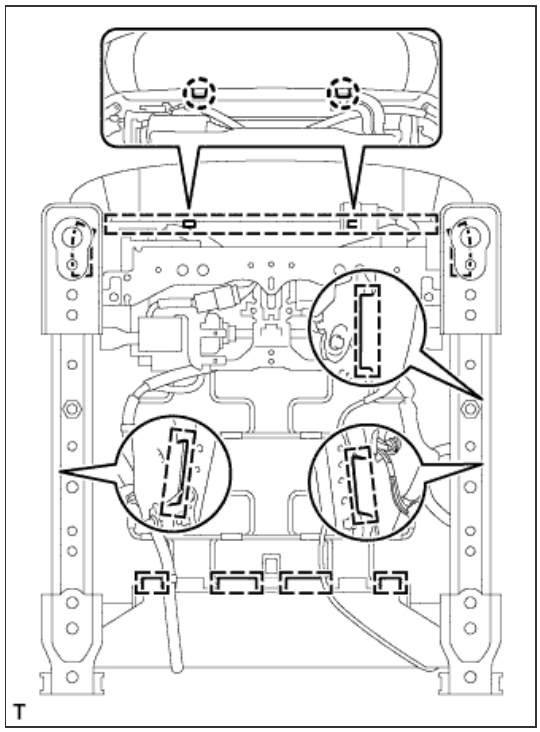


10. REMOVE FRONT SEPARATE TYPE SEAT CUSHION COVER

a. Remove the hog rings and front seat cushion cover.

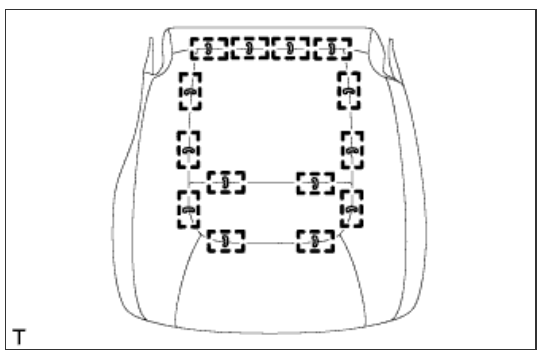

11. REMOVE FRONT SEAT CUSHION HEATER ASSEMBLY LH (w/ Seat Heater System)


a. Cut off the tack pins which fasten the seat heater to the seat cushion cover, and then remove the seat cushion heater from the seat cushion cover.

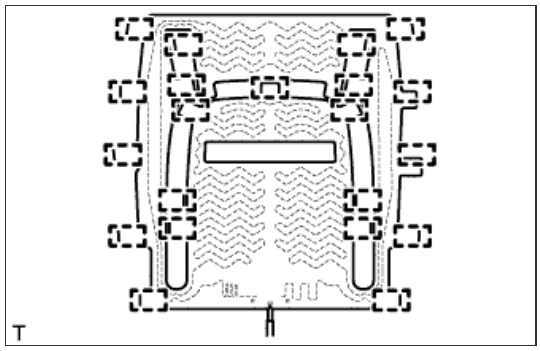

12. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

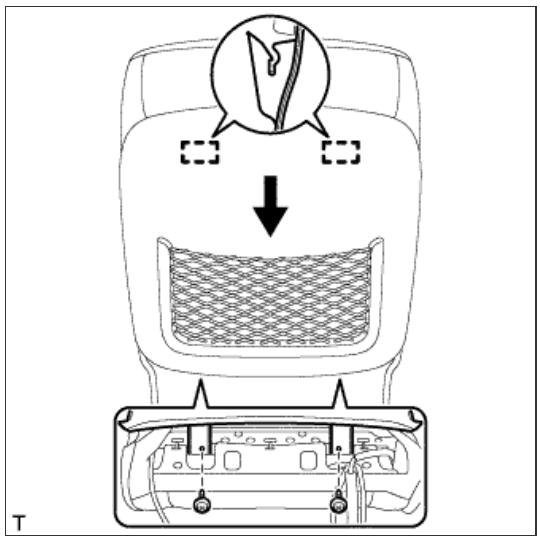


13. REMOVE FRONT SEAT HEADREST SUPPORT

a. Using a screwdriver, detach the 4 claws and remove the 2 headrest supports.

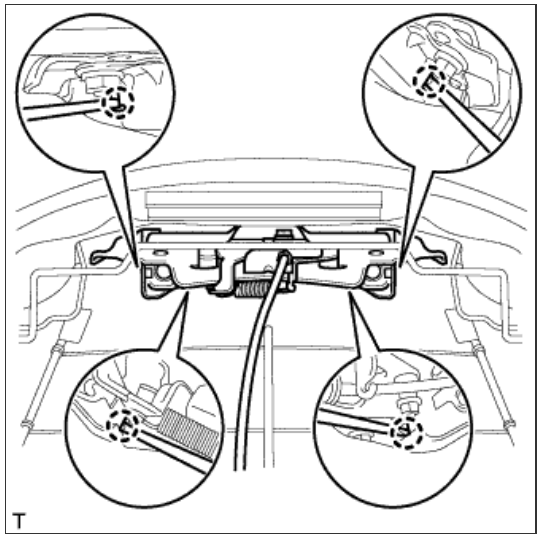


14. REMOVE SEATBACK COVER WITH PAD

a. Remove the 3 hog rings and detach the 9 hooks.

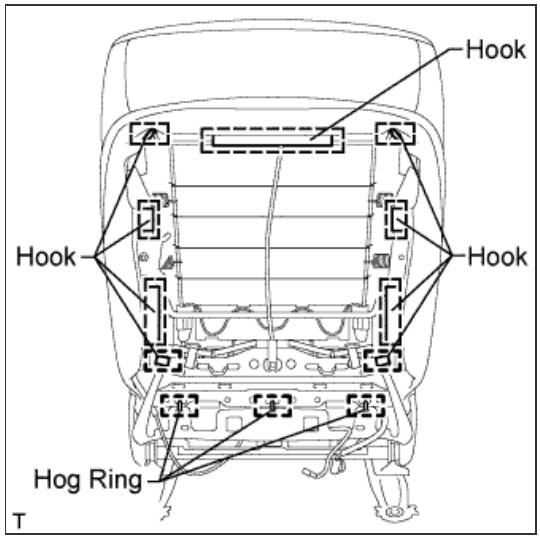


b. Remove the nut and seatback cover bracket from the seat frame.

c. Remove the seatback cover with pad.

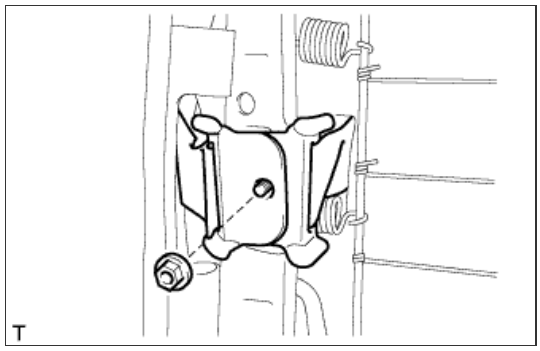


15. REMOVE FRONT SEPARATE TYPE SEATBACK COVER

a. Disconnect the seatback cover bracket from the seatback pad.

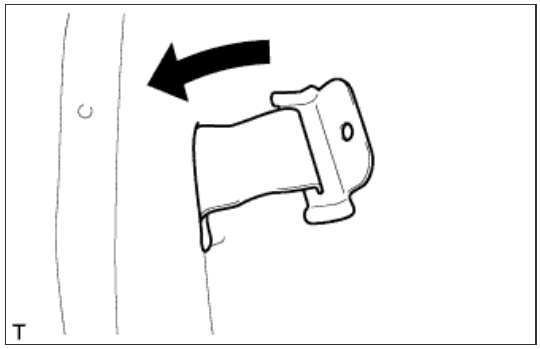


b. Remove the hog rings.

c. Detach the fastening tape and remove the seatback cover.

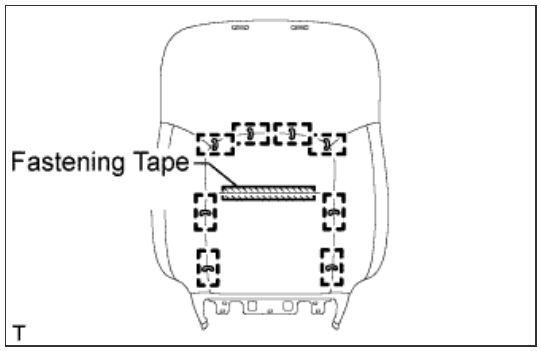

16. REMOVE FRONT SEATBACK HEATER ASSEMBLY LH (w/ Seat Heater System)

a. Cut off the tack pins which fasten the seatback heater to the seatback cover, and then remove the seatback heater from the seatback cover.

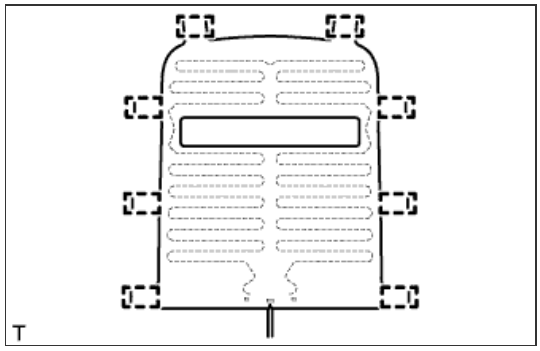


17. REMOVE INSIDE RECLINING ADJUSTER COVER LH

a. Detach the wire harness clamp.

b. Remove the 2 screws.

c. Detach the claw and remove the cover.

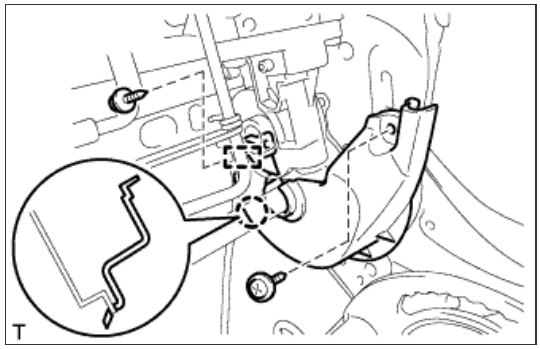

18. REMOVE INSIDE RECLINING ADJUSTER COVER RH


a. Detach the wire harness clamp.

b. Remove the 2 screws.

c. Detach the claw and remove the cover.

19. REMOVE OUTSIDE RECLINING ADJUSTER COVER LH

a. Remove the screw and detach the claw, and then remove the reclining adjuster cover.

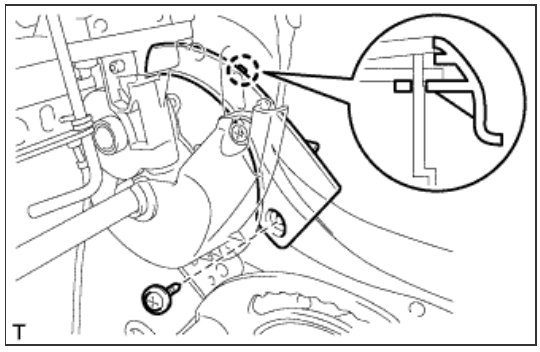

20. REMOVE OUTSIDE RECLINING ADJUSTER COVER RH


a. Remove the screw and detach the claw, and then remove the reclining adjuster cover.

21. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (for Driver Side)

a. Remove the 4 springs.


a. Remove the 4 springs.

b. Detach the 4 hooks and remove the seatback spring.

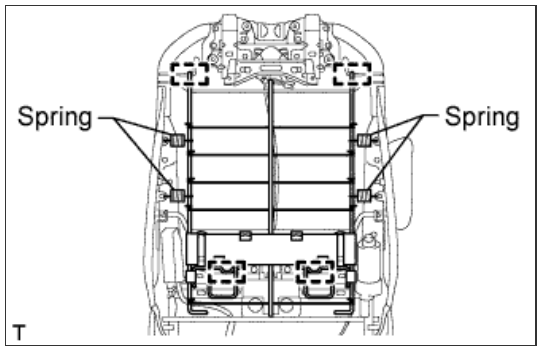


c. Disconnect the lumbar support adjuster connector.

d. Remove the 2 screws and lumbar support adjuster.

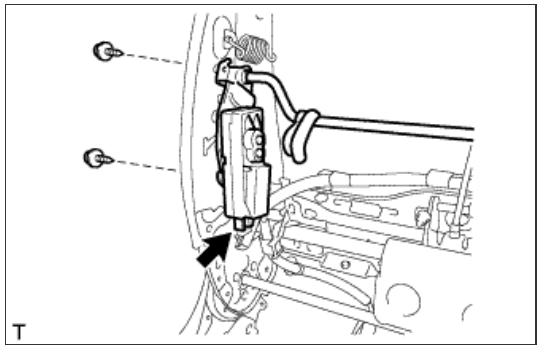


e. Detach the 3 claws and remove the bush from the seat frame.

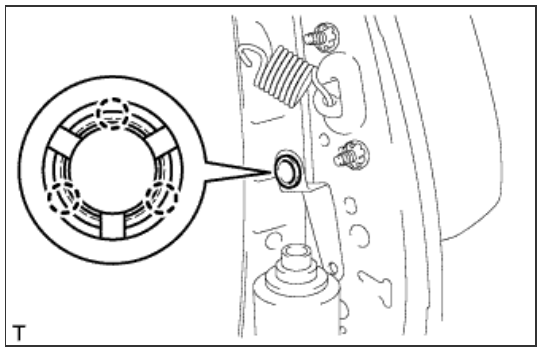

22. REMOVE LOWER ACTIVE HEADREST UNIT


a. Remove the 6 nuts, and then remove the lower active headrest unit together with the upper active headrest unit.

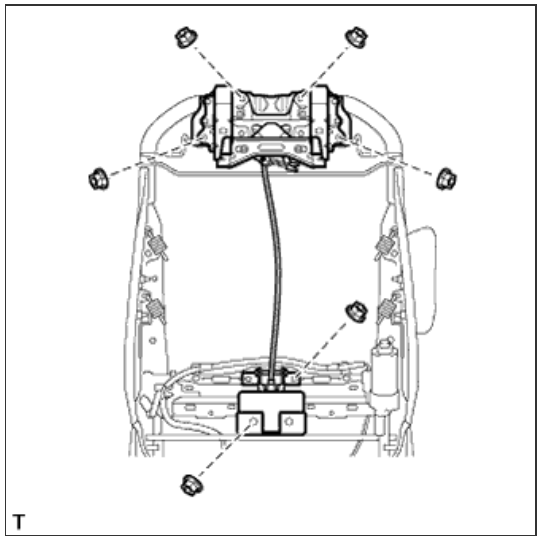

23. REMOVE UPPER ACTIVE HEADREST UNIT

a. Remove the nut and cable clamp to remove the upper active headrest unit from


the lower active headrest unit.

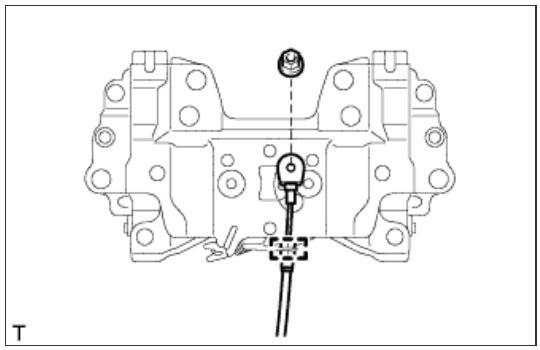

24. REMOVE FRONT LOWER SEAT CUSHION SHIELD LH

a. Remove the screw.

b. Detach the hook and remove the lower cushion shield.

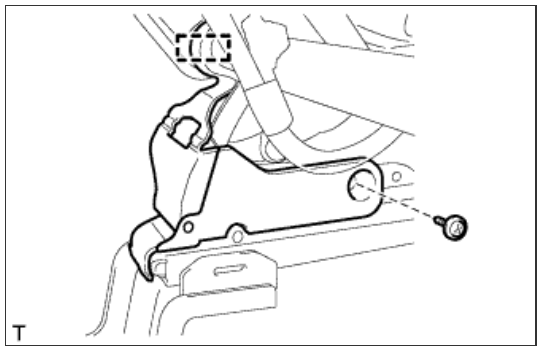

25. REMOVE FRONT LOWER SEAT CUSHION SHIELD RH


a. Remove the screw.

b. Detach the hook and remove the lower cushion shield.

26. REMOVE SEAT HEATER CONTROL SUB-ASSEMBLY (w/ Seat Heater System)

a. Disconnect the seat heater control connector and detach the clamp.


b. Using a screwdriver, detach the claw and remove the seat heater control.

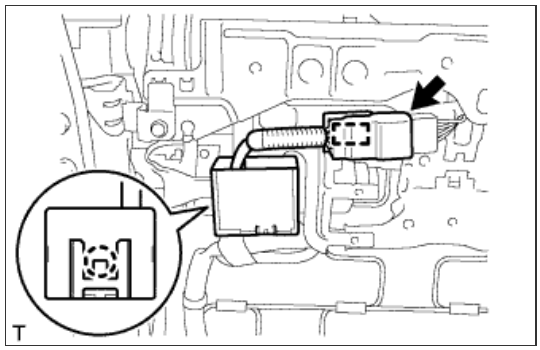


27. REMOVE SEAT POSITION SENSOR

a. Using a T30 "TORX" socket wrench, remove the screw and seat position sensor with sensor protector.

b. Disconnect the connector.

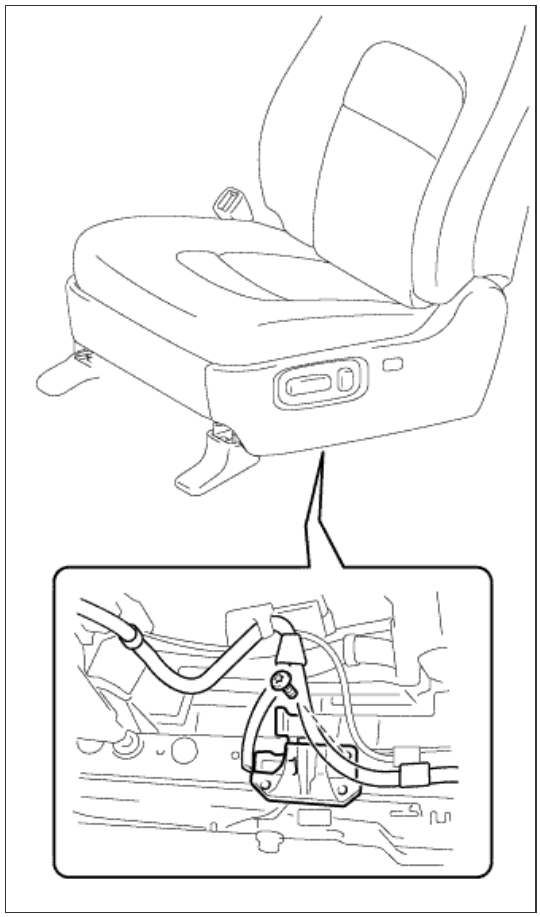


c. Remove the seat slide position sensor protector from the seat position sensor.

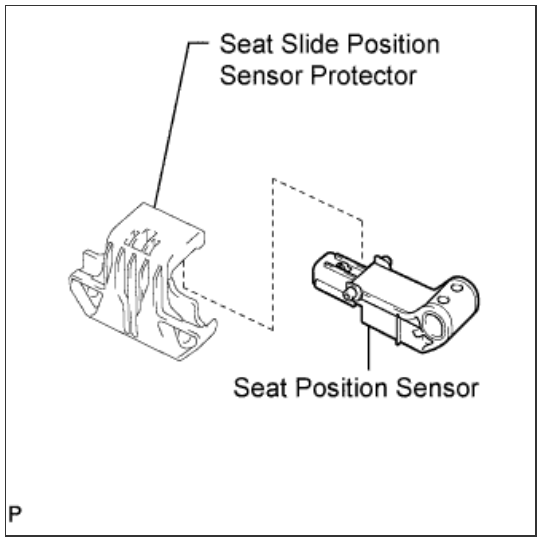

28. REMOVE FRONT SEAT SIDE AIRBAG ASSEMBLY LH

a. Detach the 5 clamps and disconnect the wire harness.

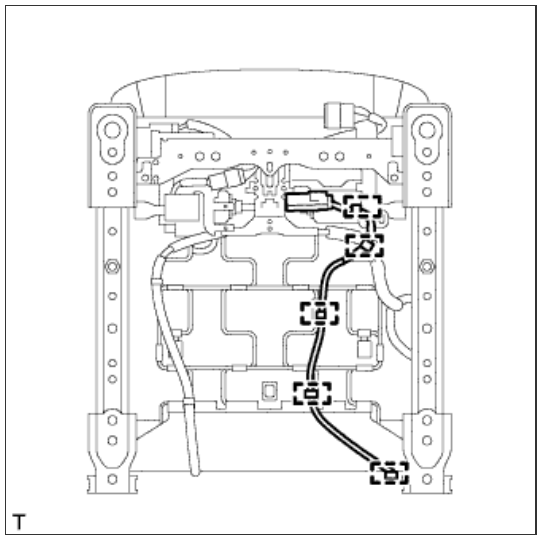


b. Detach the 2 clamps and disconnect the wire harness.

c. Remove the 2 nuts and front seat side airbag assembly .

CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.

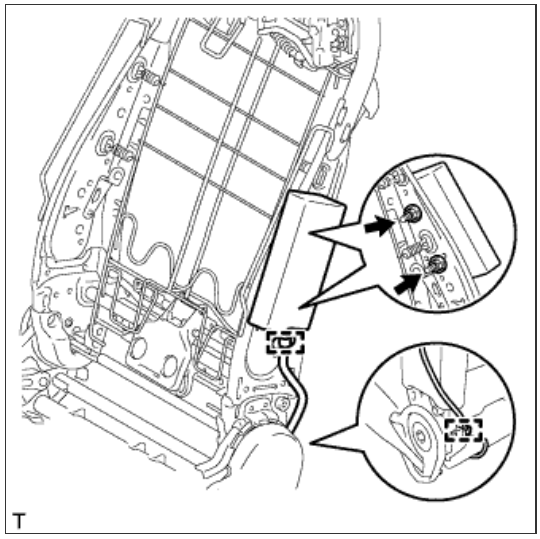

29. REMOVE FRONT SEAT WIRE LH

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT WIRE LH

2. INSTALL FRONT SEAT SIDE AIRBAG ASSEMBLY LH


CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.


a. Install the front seat side airbag assembly with 2 nuts.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

b. Attach the 2 clamps to connect the wire harness.

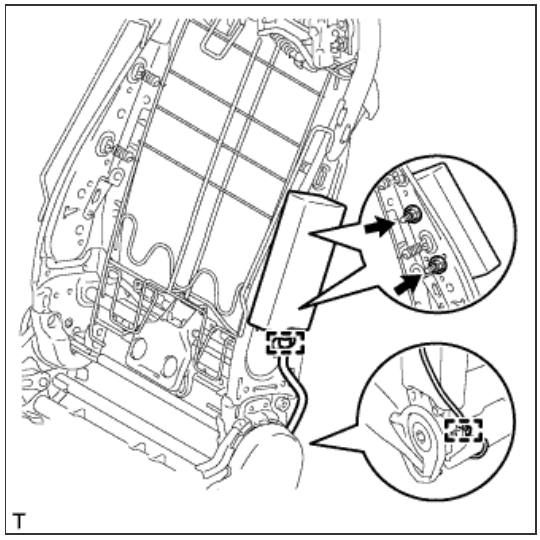

c. Attach the 5 clamps to connect the wire harness.

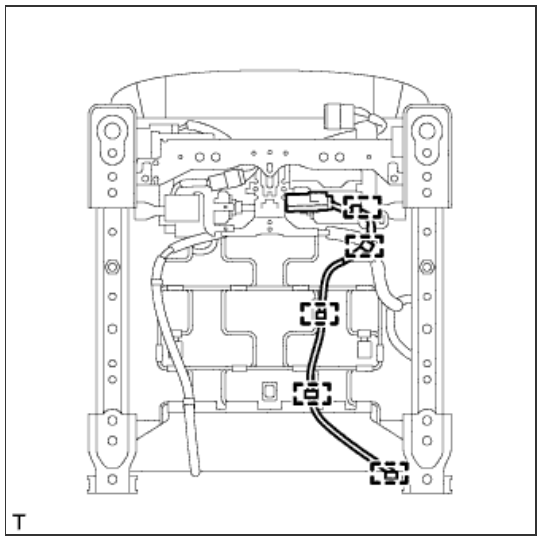

3. INSTALL SEAT POSITION SENSOR


a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Using a .0 mm (0.0393 in.) feeler gauge, install the seat position sensor.

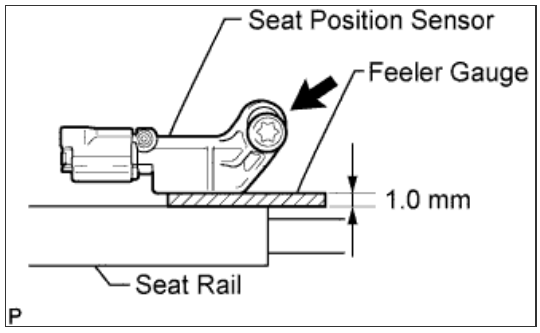

NOTICE:

- **If the seat position sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace the seat position sensor with a new one.**
- **When installing the seat position sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

HINT:

Be sure that the clearance between the seat position sensor and the seat rail is within 0.6 to .4 mm (0.0236 to 0.055 in.).

d. Using a T30 R socket wrench, install the seat position sensor with the screw.

Torque:
8.0 N*m{ 82 kgf*cm , 71 in.*lbf }

e. Make sure that the clearance between the seat position sensor and the seat rail is within 0.6 to .4 mm (0.0236 to 0.055 in.).

f. Check that there is no looseness in the installation parts of the seat position sensor.


g. Connect the connector.

h. Install the seat slide position sensor protector to the seat position sensor.

4. INSTALL SEAT HEATER CONTROL SUB-ASSEMBLY (w 3eat Heater System)

a. Attach the claw to install the seat heater control.


b. Attach the clamp and connect the seat heater control connector.

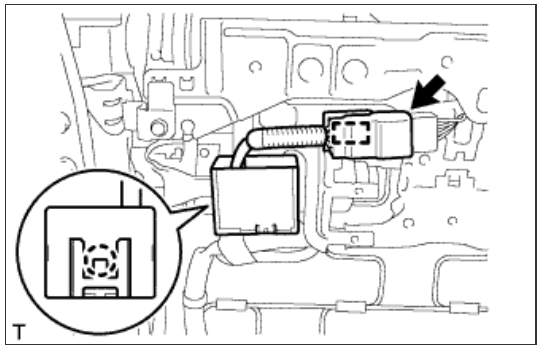

5. INSTALL FRONT LOWER SEAT CUSHION SHIELD RH

a. Attach the hook to install the lower cushion shield.

b. Install the screw.

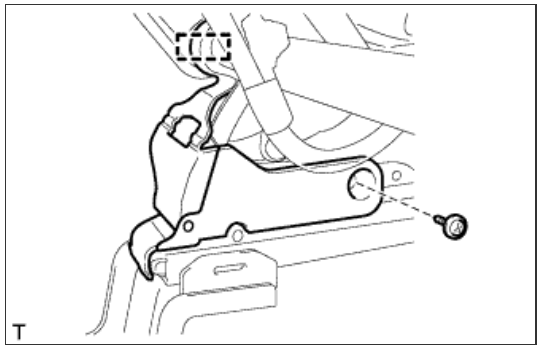

6. INSTALL FRONT LOWER SEAT CUSHION SHIELD LH


a. Attach the hook to install the lower cushion shield.

b. Install the screw.

7. INSTALL UPPER ACTI E HEADREST UNIT

a. Install the upper active headrest unit to the lower active headrest unit with the cable clamp and nut.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

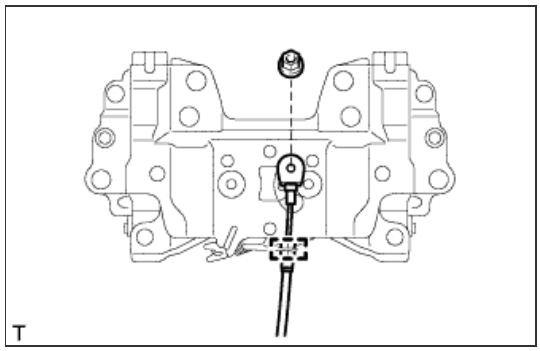

8. INSTALL LOWER ACTI E HEADREST UNIT


a. Install the lower active headrest unit together with the upper active headrest unit with the 6 nuts.

Torque:
Upper active headrest unit:
14 N*m{ 143 kgf*cm , 10 ft.*lbf }
Lower active headrest unit:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

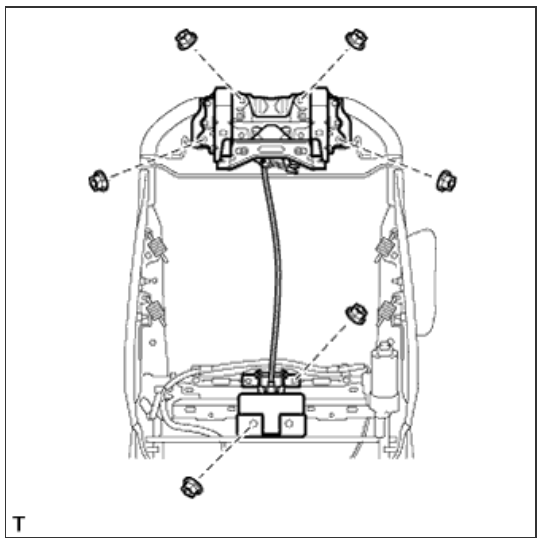


9. INSTALL LUMBAR SUPPORT AD USTER ASSEMBLY LH (for Driver Side)

a. Attach the 3 claws to install the bush.

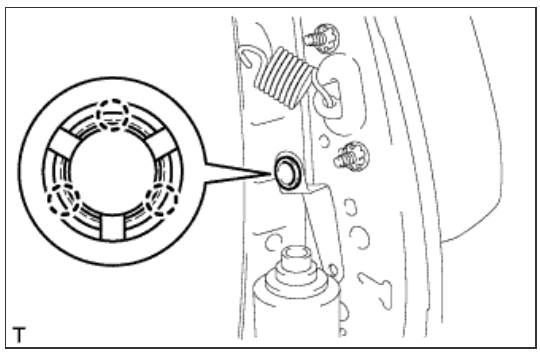


b. Install the lumbar support adjuster with the 2 screws.

c. Connect the lumbar support adjuster connector.

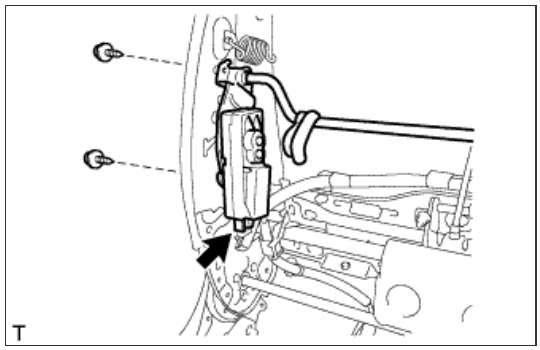

d. Attach the 4 hooks to install the seatback spring.


e. Install the 4 springs.

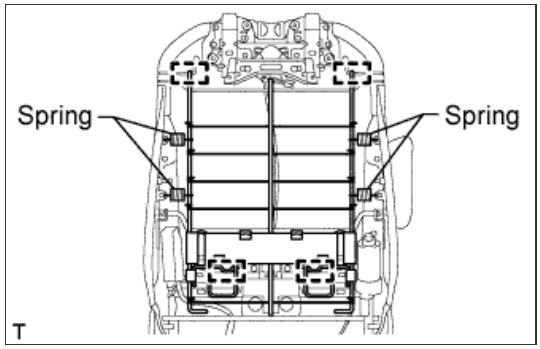

10. INSTALL OUTSIDE RECLINING AD USTER CO ER RH

a. Attach the claw to install the reclining adjuster cover.

b. Install the screw.

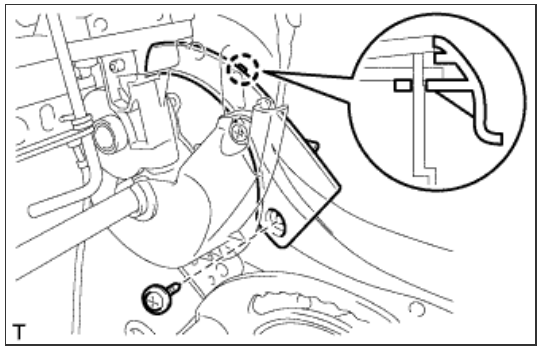

11. INSTALL OUTSIDE RECLINING AD USTER CO ER LH

a. Attach the claw to install the reclining adjuster cover.


b. Install the screw.

12. INSTALL INSIDE RECLINING AD USTER CO ER RH

a. Attach the claw to install the cover.

b. Install the 2 screws.

c. Attach the wire harness clamp.

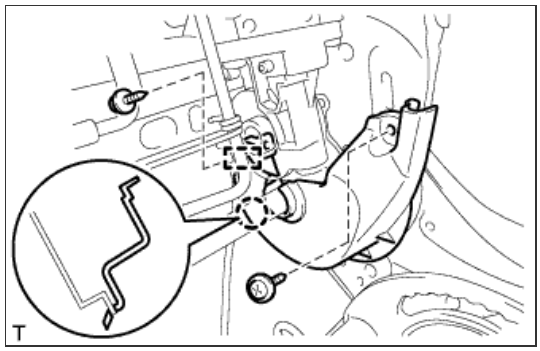

13. INSTALL INSIDE RECLINING AD USTER CO ER LH

a. Attach the claw to install the cover.


b. Install the 2 screws.

c. Attach the wire harness clamp.

14. INSTALL FRONT SEATBAC HEATER ASSEMBLY LH (w Sat Heater System)

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

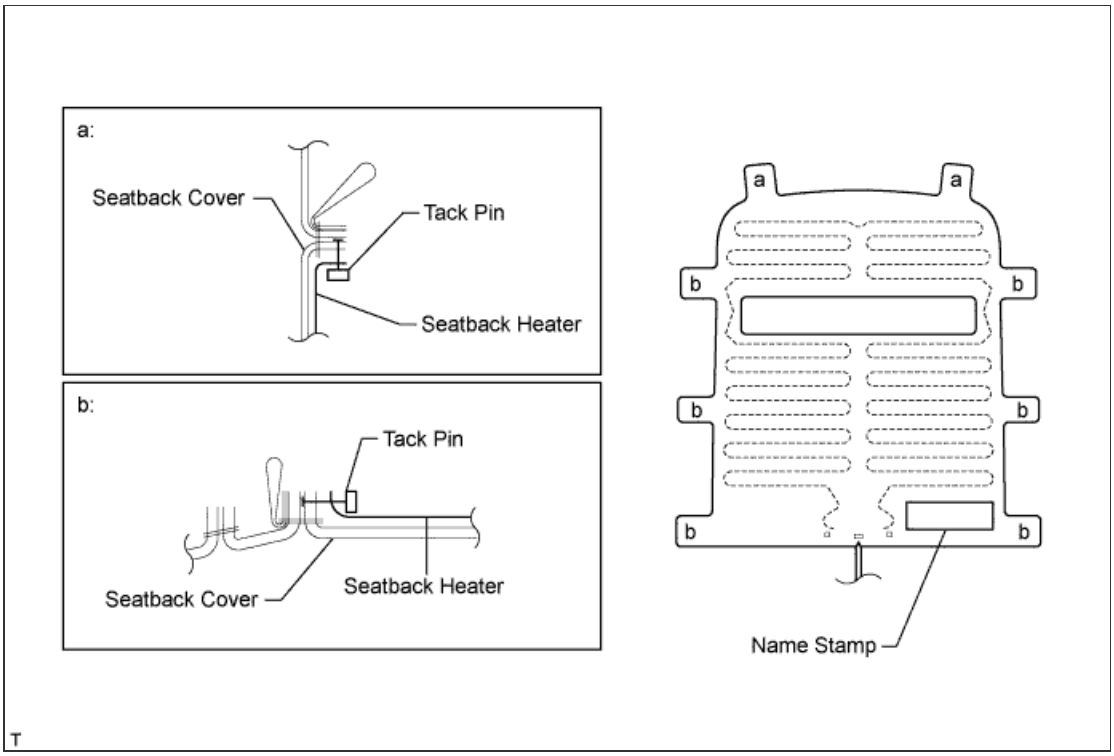


15. INSTALL FRONT SEPARATE TYPE SEATBAC CO ER

a. Attach the fastening tape to install the seatback cover with new hog rings.


b. Using hog ring pliers, install the seatback cover

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

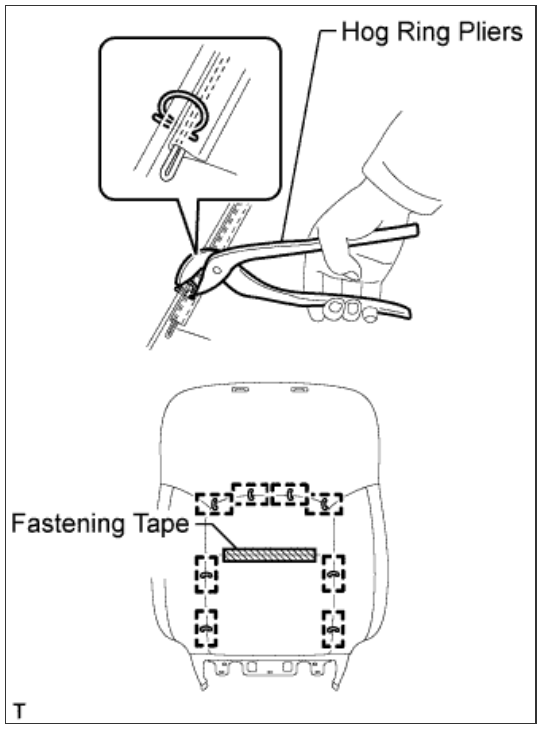

c. Connect the seatback cover bracket to the seatback pad.

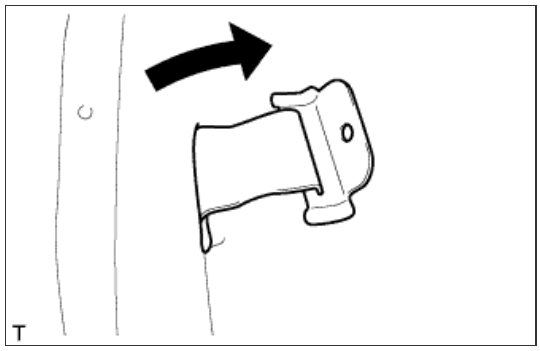

16. INSTALL SEATBAC CO ER WITH PAD


a. Install the seatback cover with pad to the seatback frame.

b. Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

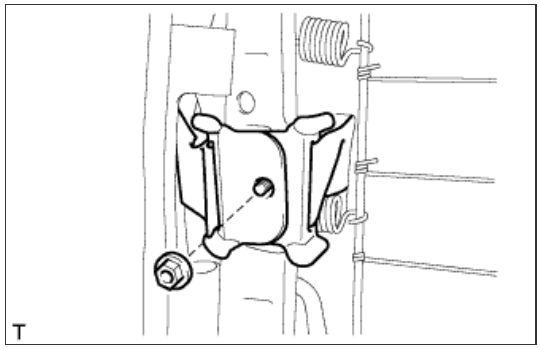

c. Attach the 9 hooks.

d. Using hog ring pliers, install 3 new hog rings to the seat frame.

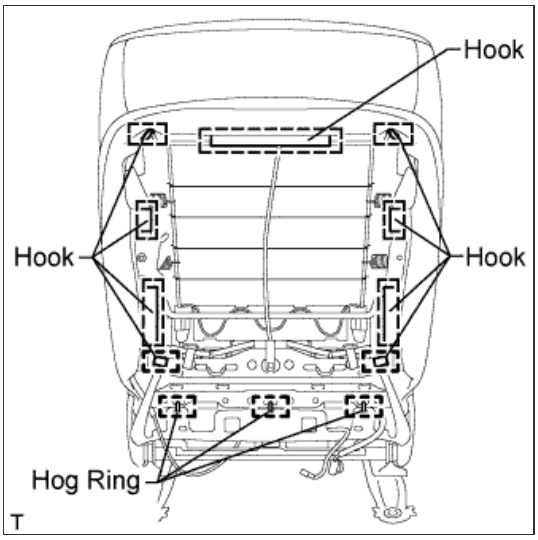


17. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the 4 claws to install the 2 headrest supports.

18. INSTALL FRONT SEATBAC BOARD SUB-ASSEMBLY LH

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.


b. Install the 2 screws.

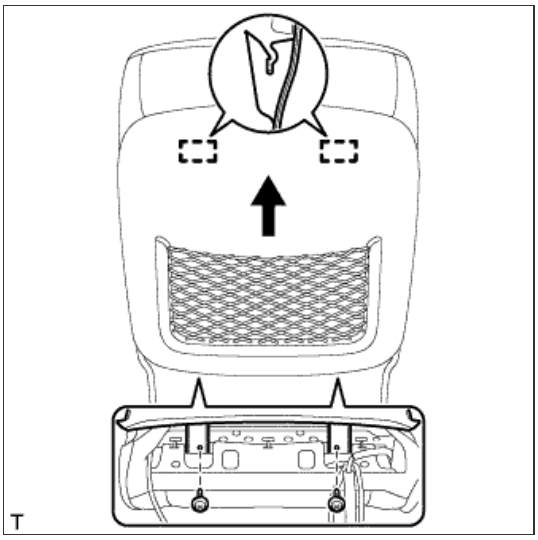

19. INSTALL FRONT SEAT CUSHION HEATER ASSEMBLY LH (w Seat Heater System)

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

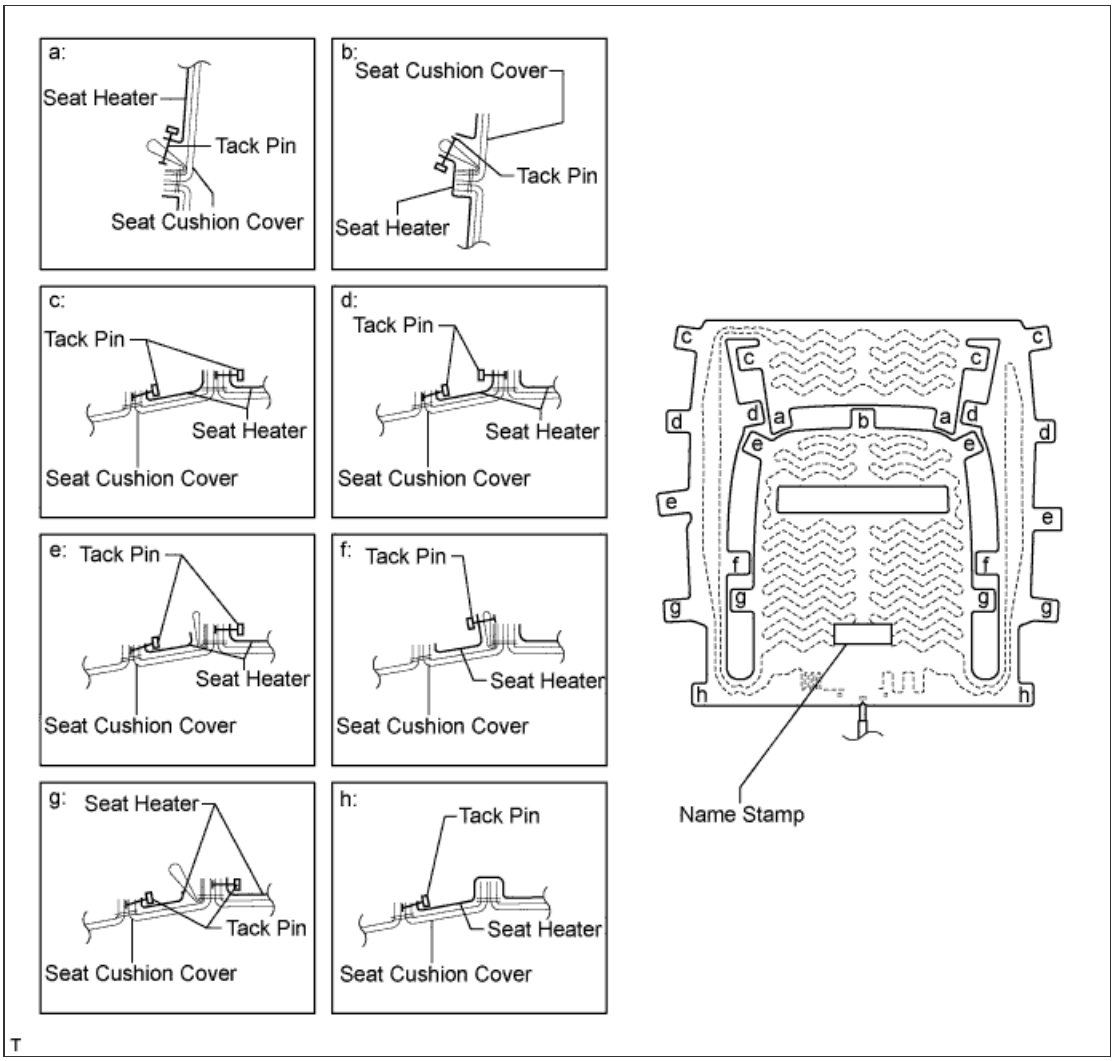


20. INSTALL FRONT SEPARATE TYPE SEAT CUSHION CO ER

a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

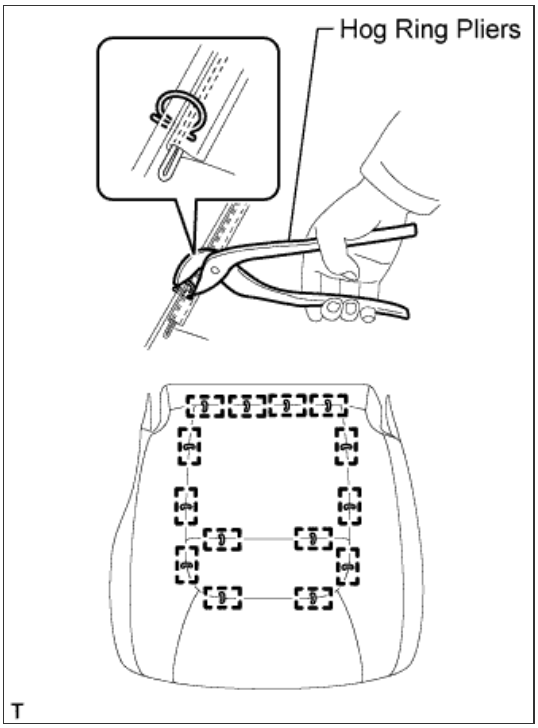


21. INSTALL SEAT CUSHION CO ER WITH PAD

a. Attach the hooks to install the seat cushion cover with pad.

b. Bend the 2 seat frame claws downward.

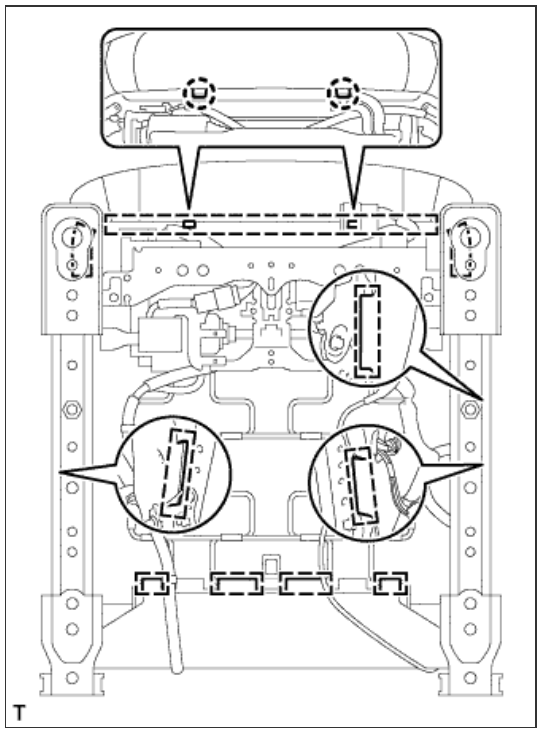


c. Connect the seat heater control connector and attach the wire harness clamp.

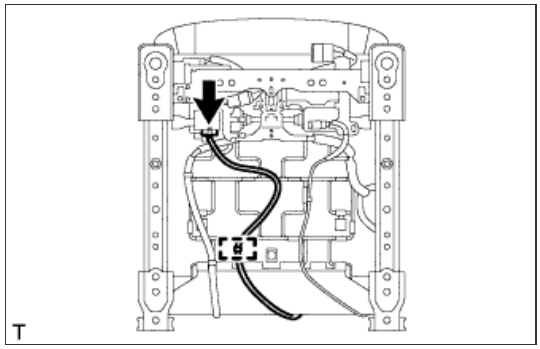


d. for Front Passenger Side

i. Attach the 2 clamps to install the seat belt warning sensor connector.


ii. Connect the seat belt warning sensor connector.

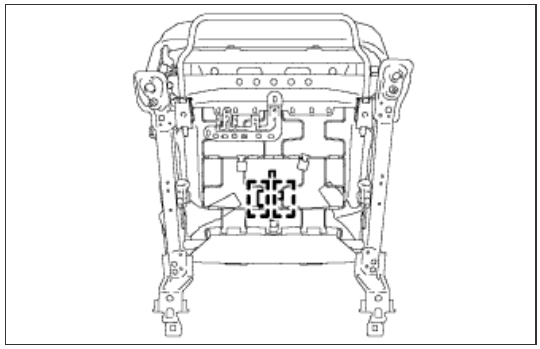

e. Connect the seat heater connector and attach the 2 wire harness clamps.

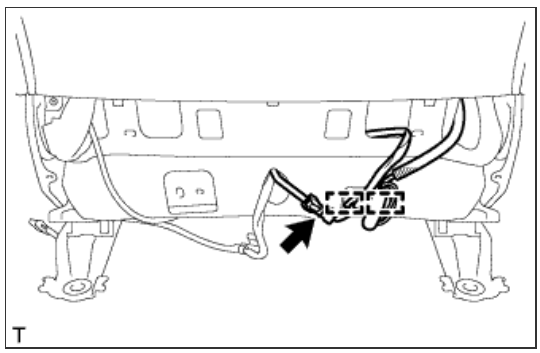

f. Install the 2 clips.

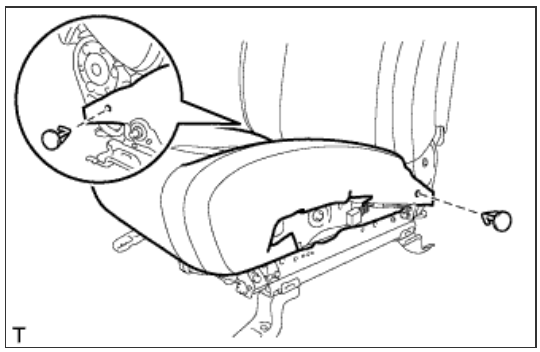


22. INSTALL FRONT POWER SEAT SWITCH LH

a. Install the switch with the 3 screws.

b. w Seat Position Memory System
Connect the 2 connectors.


c. w o Seat Position Memory System
Connect the connector.

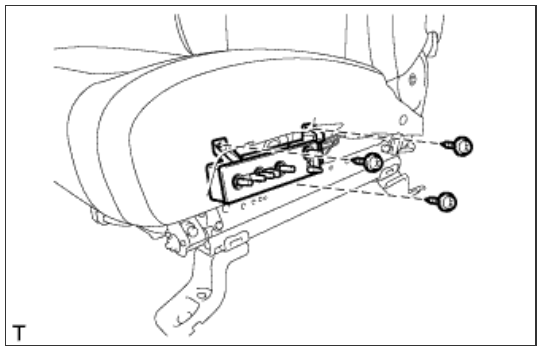

23. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the 2 claws and clip to install the cushion shield.

b. Install the screw.

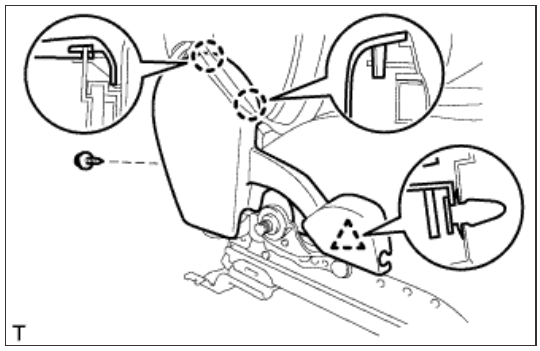

24. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.

b. Connect the connectors and attach the clamps.

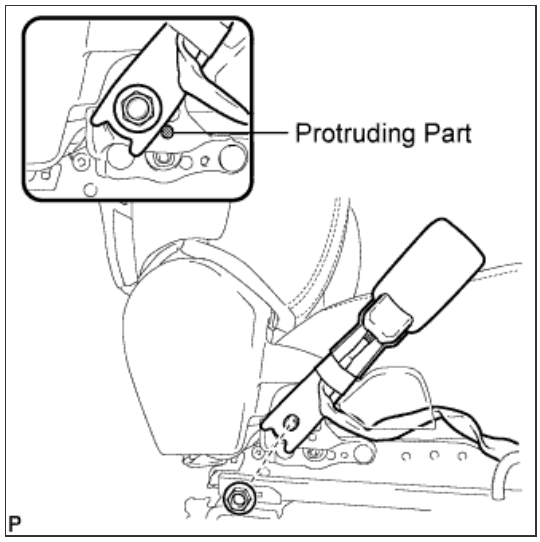

25. INSTALL LUMBAR SWITCH (for Driver Side)


a. Install the lumbar switch with the 2 screws.

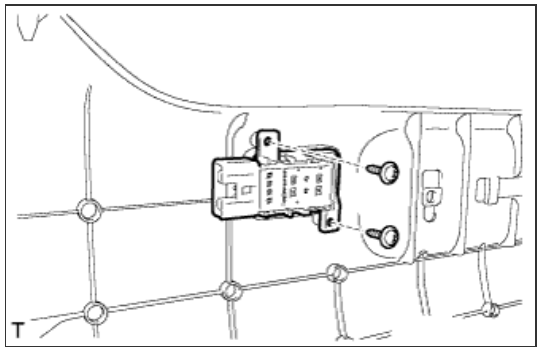

26. INSTALL FRONT INNER NO. 1 SEAT CUSHION SHIELD LH

a. Attach the claw to install the cushion shield.

b. Install the screw.

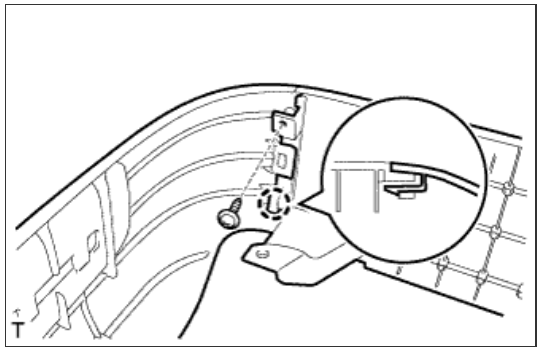


27. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side
Connect the lumbar switch connectors.


b. Attach the 2 claws to install the cushion shield.

c. Install the 3 screws.

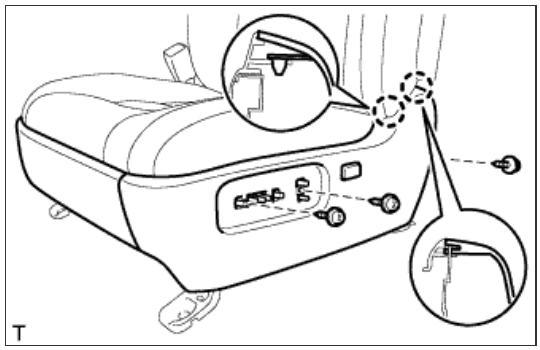


d. Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

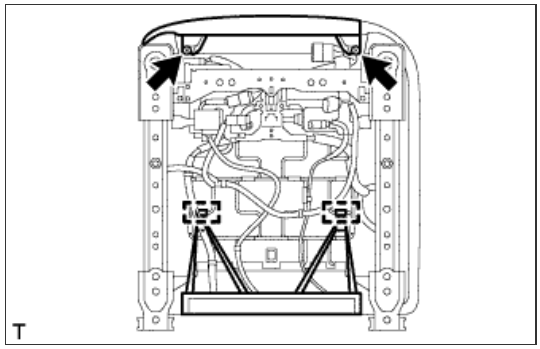


28. INSTALL RECLINING POWER SEAT SWITCH NOB

a. Attach the 2 claws to install the knob.

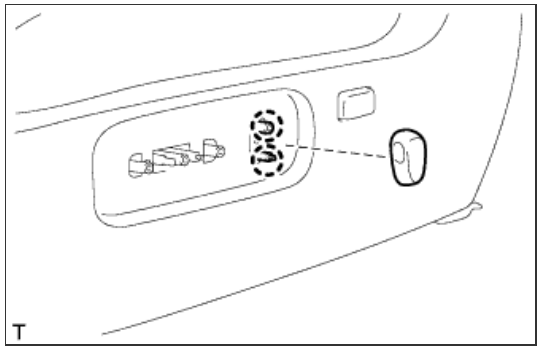

29. INSTALL SLIDE AND ERTICAL POWER SEAT SWITCH NOB

a. Attach the 2 claws to install the knob.

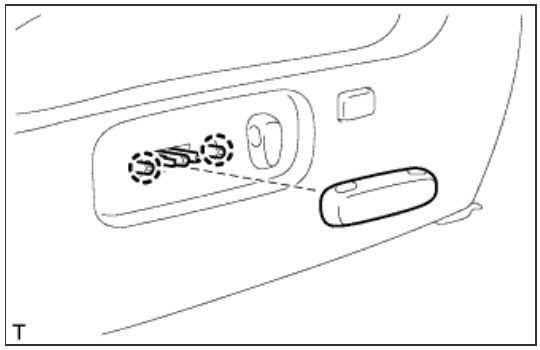

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT WIRE LH

2. INSTALL FRONT SEAT SIDE AIRBAG ASSEMBLY LH


CAUTION:

Make sure that the seat frame assembly is not deformed. If it is, replace it with a new one.


a. Install the front seat side airbag assembly with 2 nuts.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

b. Attach the 2 clamps to connect the wire harness.

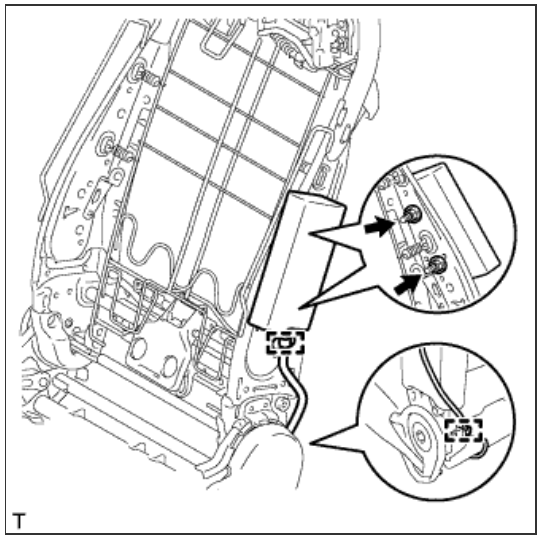

c. Attach the 5 clamps to connect the wire harness.

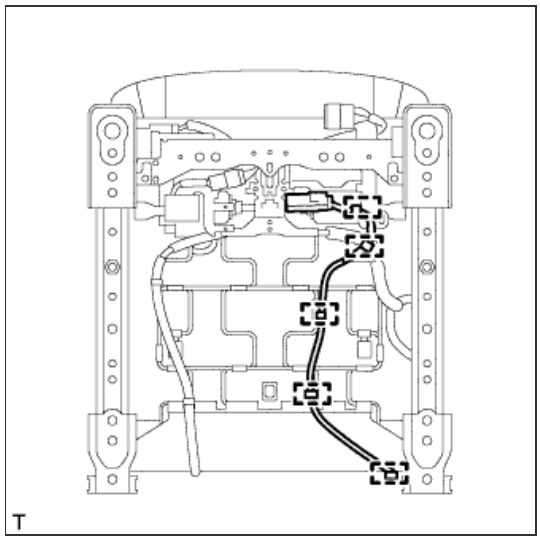

3. INSTALL SEAT POSITION SENSOR


a. Check that the engine switch is off.

b. Check that the cable is disconnected from the battery negative (-) terminal.

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

c. Using a .0 mm (0.0393 in.) feeler gauge, install the seat position sensor.

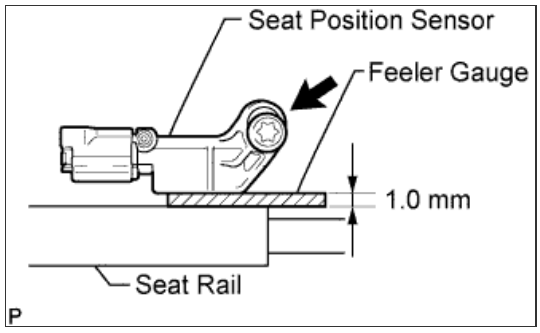

NOTICE:

- **If the seat position sensor has been dropped, or there are any cracks, dents or other defects in the case or connector, replace the seat position sensor with a new one.**
- **When installing the seat position sensor, be careful that the SRS wiring does not interfere with other parts and that it is not pinched between other parts.**

HINT:

Be sure that the clearance between the seat position sensor and the seat rail is within 0.6 to .4 mm (0.0236 to 0.055 in.).

d. Using a T30 R socket wrench, install the seat position sensor with the screw.

Torque:
8.0 N*m{ 82 kgf*cm , 71 in.*lbf }

e. Make sure that the clearance between the seat position sensor and the seat rail is within 0.6 to .4 mm (0.0236 to 0.055 in.).

f. Check that there is no looseness in the installation parts of the seat position sensor.


g. Connect the connector.

h. Install the seat slide position sensor protector to the seat position sensor.

4. INSTALL SEAT HEATER CONTROL SUB-ASSEMBLY (w 3eat Heater System)

a. Attach the claw to install the seat heater control.


b. Attach the clamp and connect the seat heater control connector.

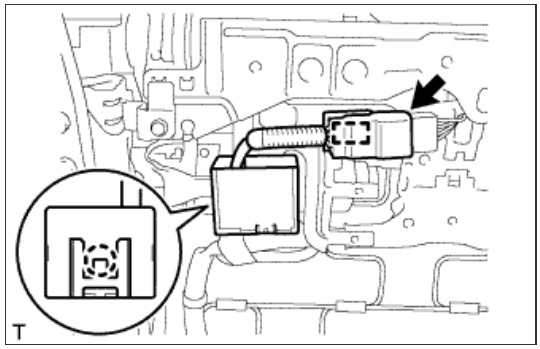

5. INSTALL FRONT LOWER SEAT CUSHION SHIELD RH

a. Attach the hook to install the lower cushion shield.

b. Install the screw.

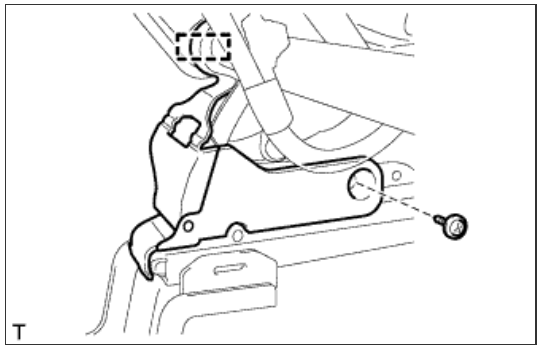

6. INSTALL FRONT LOWER SEAT CUSHION SHIELD LH


a. Attach the hook to install the lower cushion shield.

b. Install the screw.

7. INSTALL UPPER ACTI E HEADREST UNIT

a. Install the upper active headrest unit to the lower active headrest unit with the cable clamp and nut.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

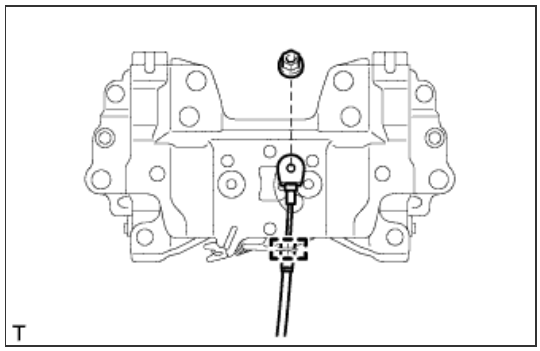

8. INSTALL LOWER ACTI E HEADREST UNIT


a. Install the lower active headrest unit together with the upper active headrest unit with the 6 nuts.

Torque:
Upper active headrest unit:
14 N*m{ 143 kgf*cm , 10 ft.*lbf }
Lower active headrest unit:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

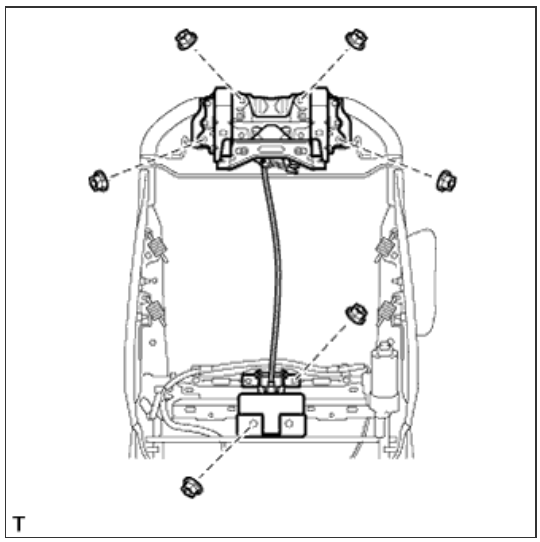


9. INSTALL LUMBAR SUPPORT AD USTER ASSEMBLY LH (for Driver Side)

a. Attach the 3 claws to install the bush.

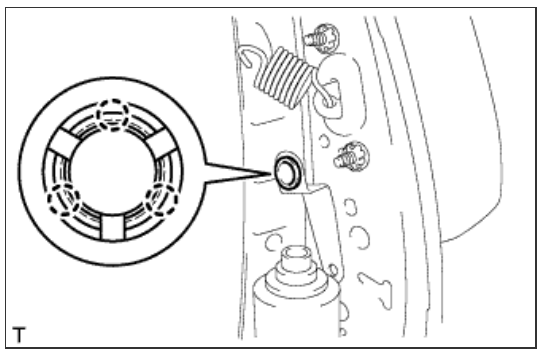


b. Install the lumbar support adjuster with the 2 screws.

c. Connect the lumbar support adjuster connector.

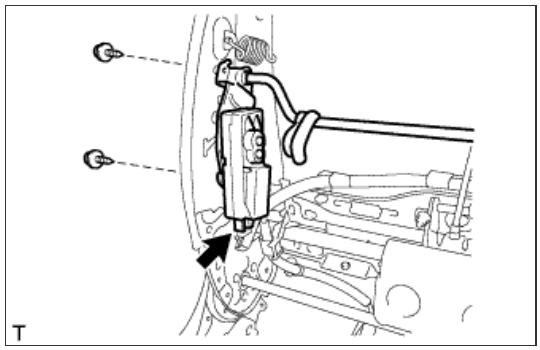

d. Attach the 4 hooks to install the seatback spring.


e. Install the 4 springs.

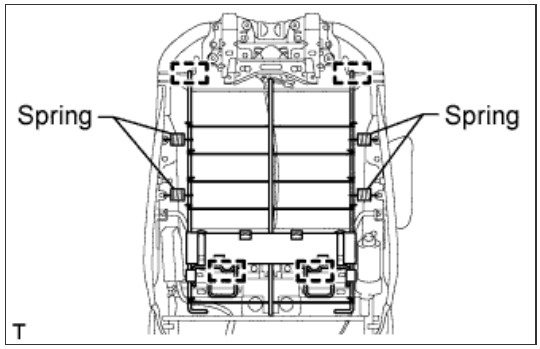

10. INSTALL OUTSIDE RECLINING AD USTER CO ER RH

a. Attach the claw to install the reclining adjuster cover.

b. Install the screw.

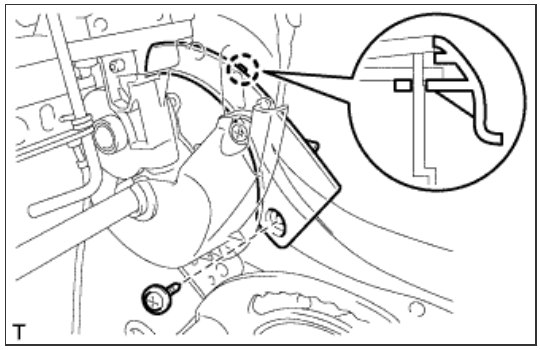

11. INSTALL OUTSIDE RECLINING AD USTER CO ER LH

a. Attach the claw to install the reclining adjuster cover.


b. Install the screw.

12. INSTALL INSIDE RECLINING AD USTER CO ER RH

a. Attach the claw to install the cover.

b. Install the 2 screws.

c. Attach the wire harness clamp.

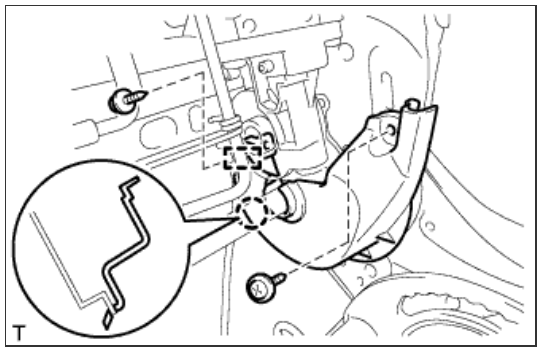

13. INSTALL INSIDE RECLINING AD USTER CO ER LH

a. Attach the claw to install the cover.


b. Install the 2 screws.

c. Attach the wire harness clamp.

14. INSTALL FRONT SEATBAC HEATER ASSEMBLY LH (w Sat Heater System)

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

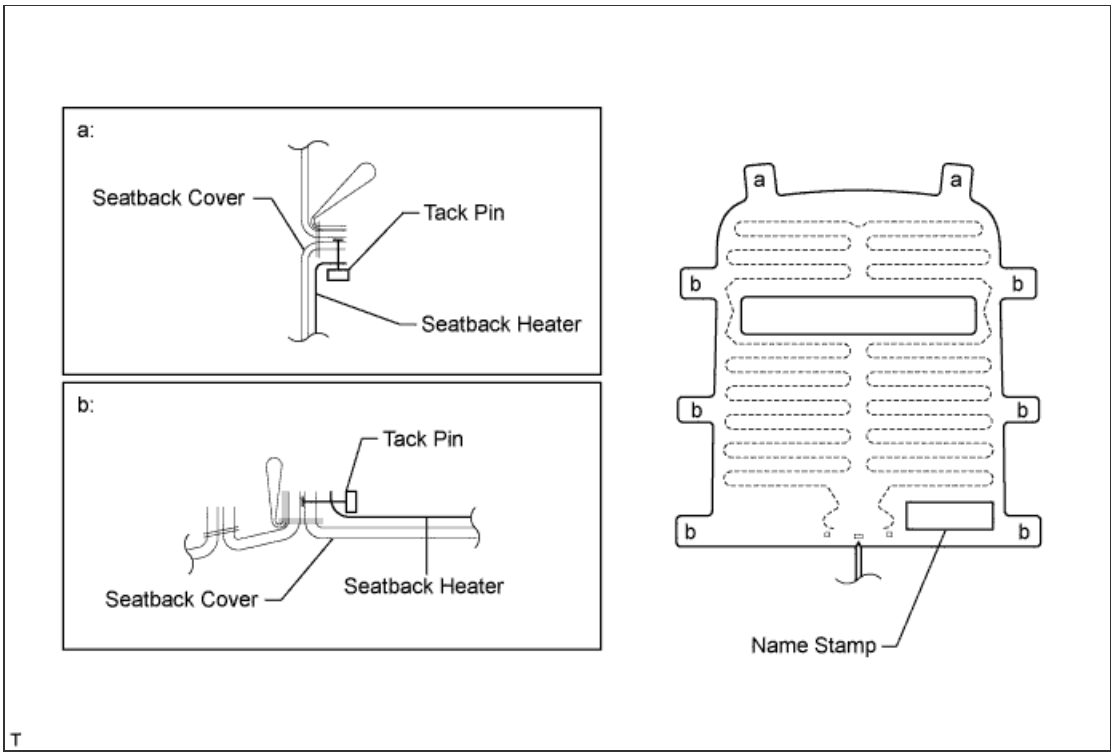


15. INSTALL FRONT SEPARATE TYPE SEATBAC CO ER

a. Attach the fastening tape to install the seatback cover with new hog rings.


b. Using hog ring pliers, install the seatback cover

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

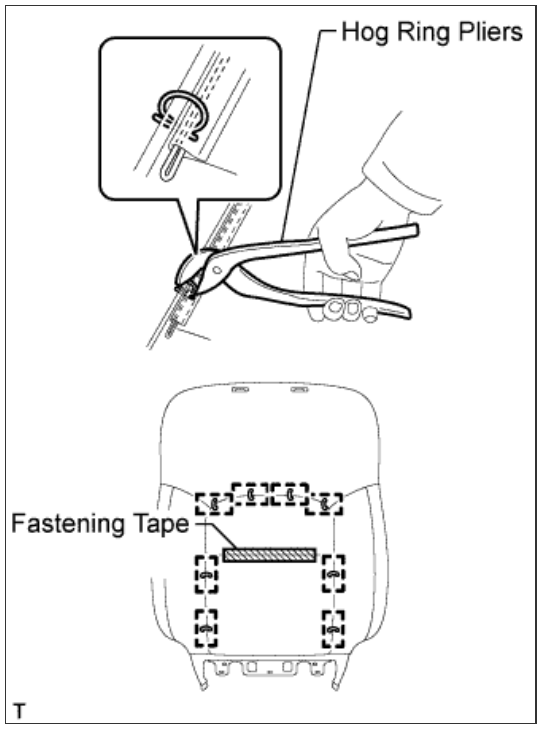

c. Connect the seatback cover bracket to the seatback pad.

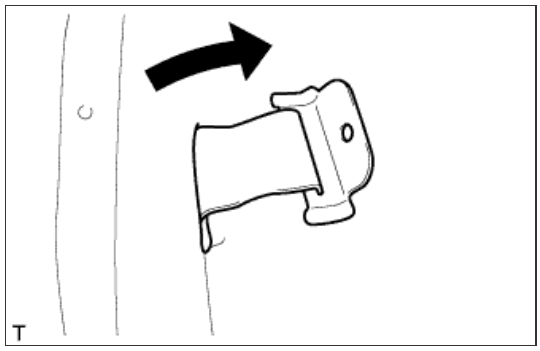

16. INSTALL SEATBAC CO ER WITH PAD


a. Install the seatback cover with pad to the seatback frame.

b. Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

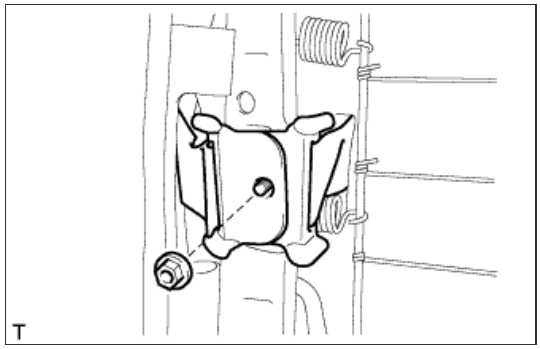

c. Attach the 9 hooks.

d. Using hog ring pliers, install 3 new hog rings to the seat frame.

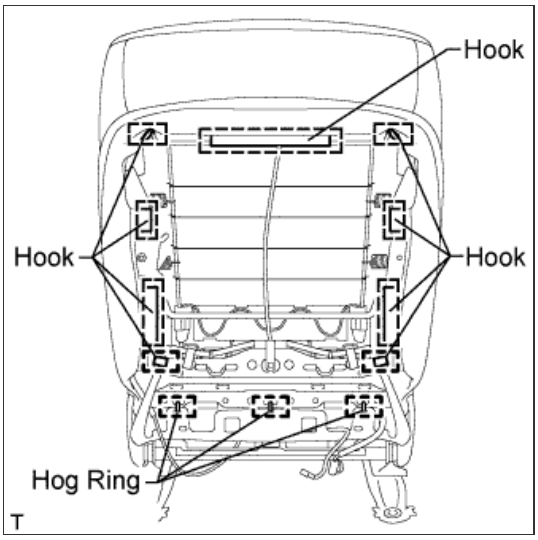


17. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the 4 claws to install the 2 headrest supports.

18. INSTALL FRONT SEATBAC BOARD SUB-ASSEMBLY LH

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.


b. Install the 2 screws.

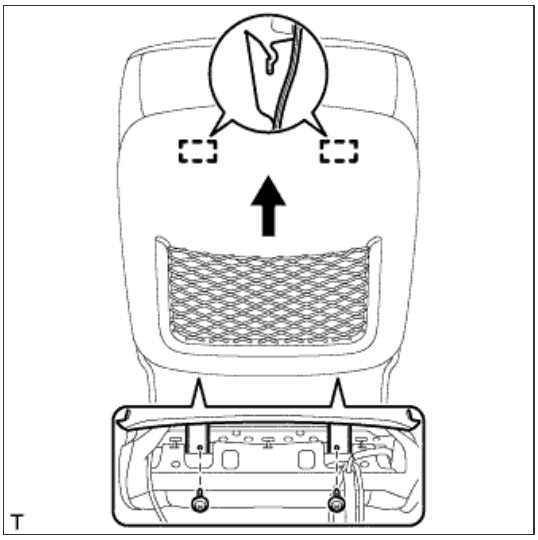

19. INSTALL FRONT SEAT CUSHION HEATER ASSEMBLY LH (w Seat Heater System)

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

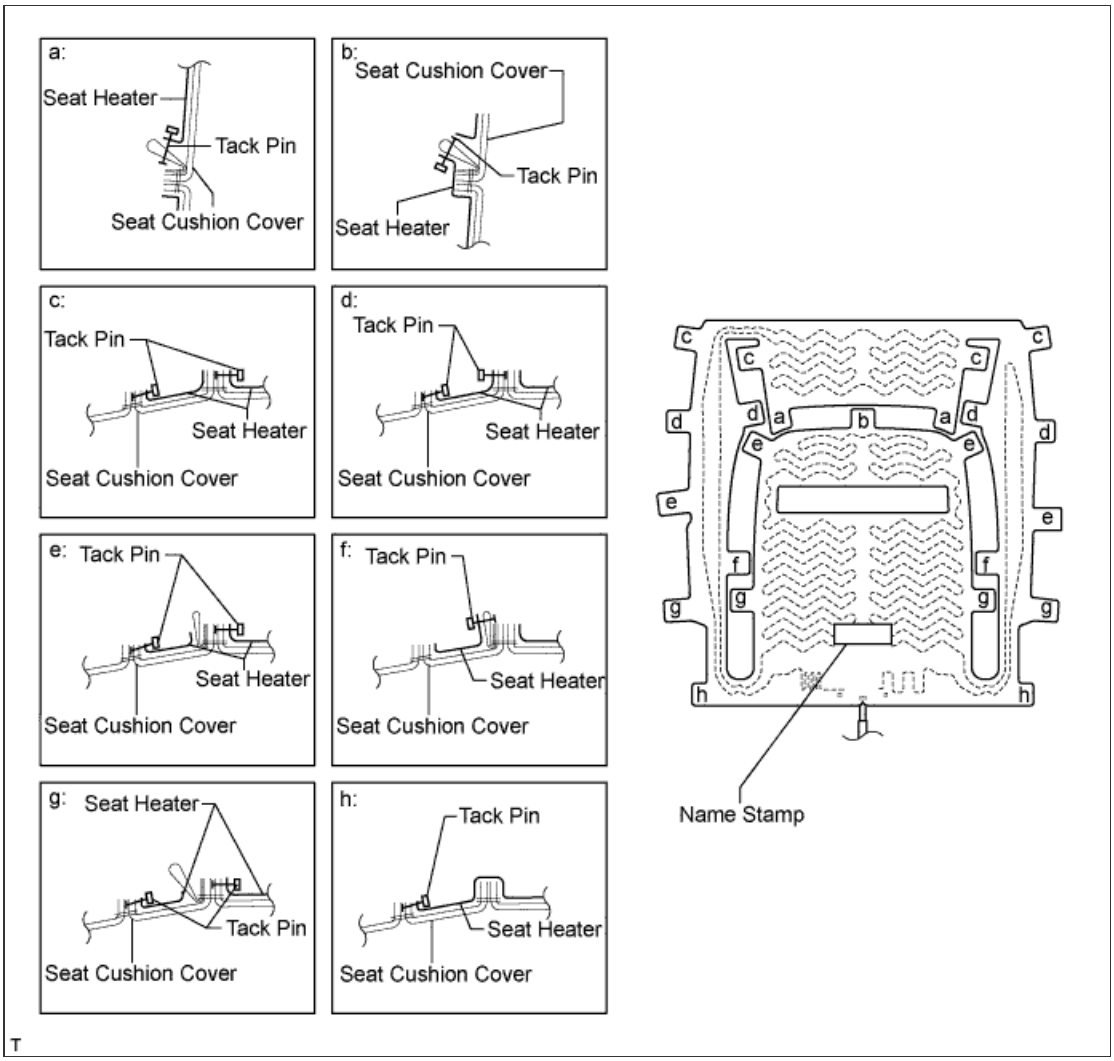


20. INSTALL FRONT SEPARATE TYPE SEAT CUSHION CO ER

a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

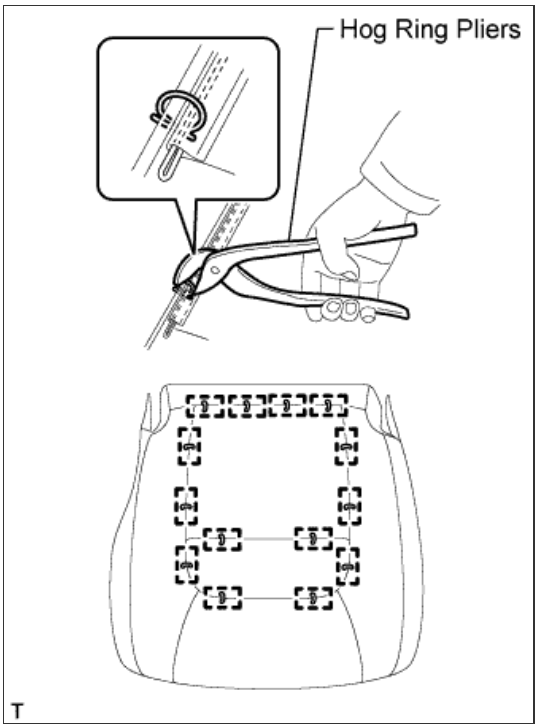


21. INSTALL SEAT CUSHION CO ER WITH PAD

a. Attach the hooks to install the seat cushion cover with pad.

b. Bend the 2 seat frame claws downward.

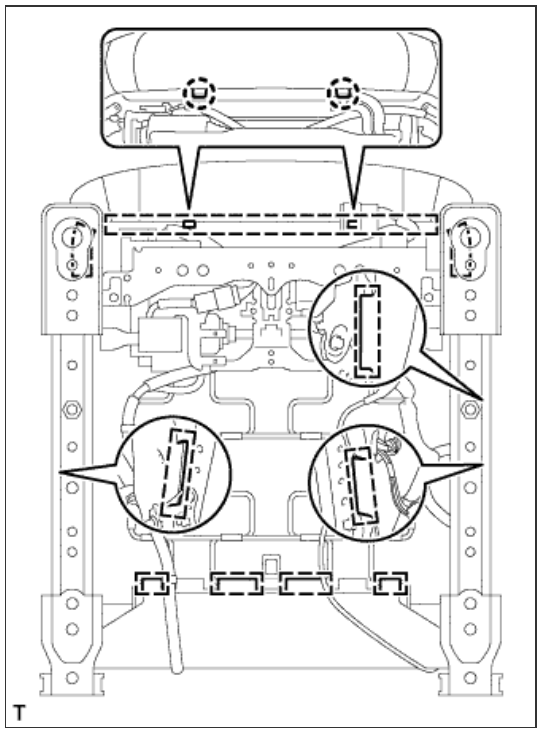


c. Connect the seat heater control connector and attach the wire harness clamp.

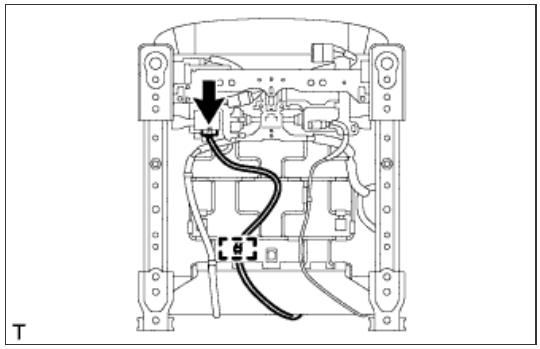


d. for Front Passenger Side

i. Attach the 2 clamps to install the seat belt warning sensor connector.


ii. Connect the seat belt warning sensor connector.

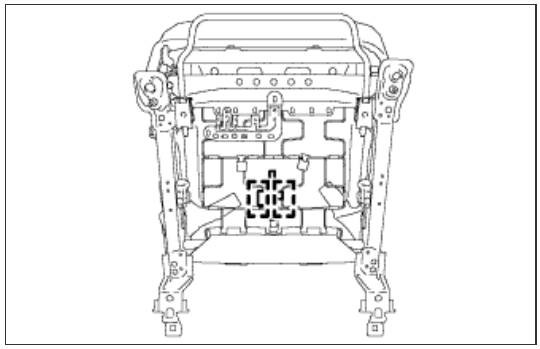

e. Connect the seat heater connector and attach the 2 wire harness clamps.

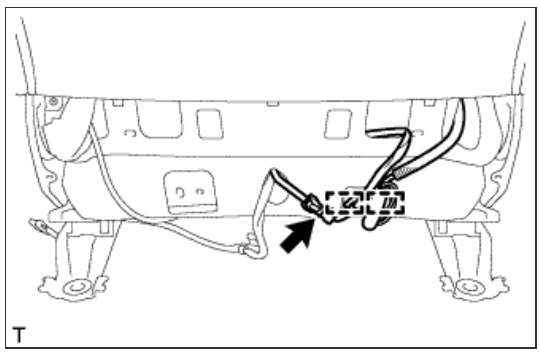

f. Install the 2 clips.

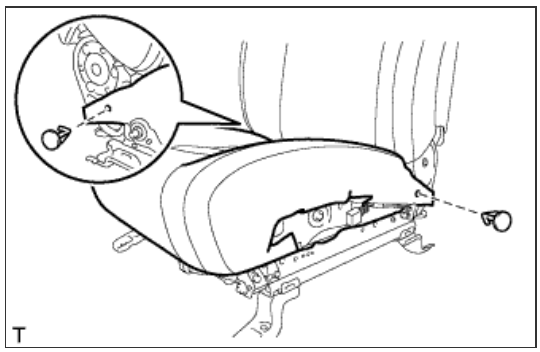


22. INSTALL FRONT POWER SEAT SWITCH LH

a. Install the switch with the 3 screws.

b. w Seat Position Memory System
Connect the 2 connectors.


c. w o Seat Position Memory System
Connect the connector.

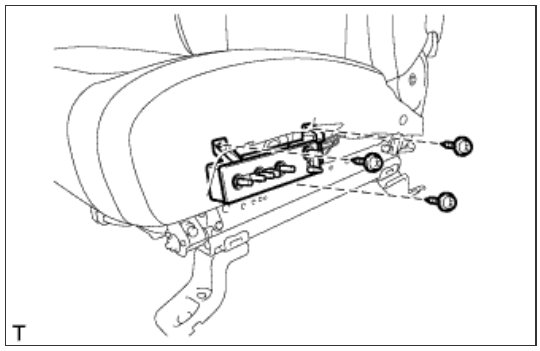

23. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the 2 claws and clip to install the cushion shield.

b. Install the screw.

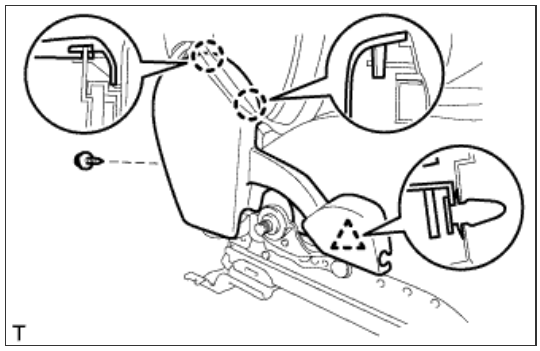

24. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.

b. Connect the connectors and attach the clamps.

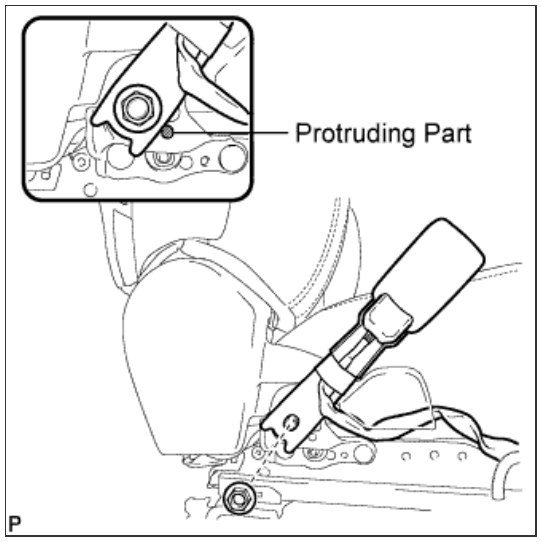

25. INSTALL LUMBAR SWITCH (for Driver Side)


a. Install the lumbar switch with the 2 screws.

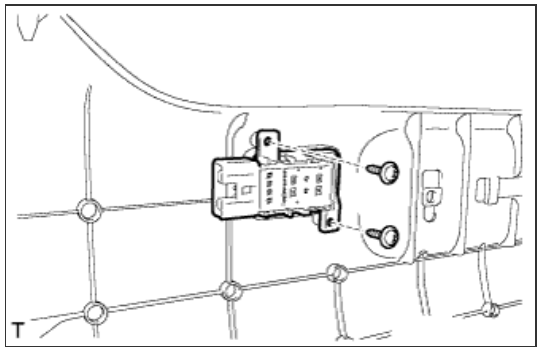

26. INSTALL FRONT INNER NO. 1 SEAT CUSHION SHIELD LH

a. Attach the claw to install the cushion shield.

b. Install the screw.

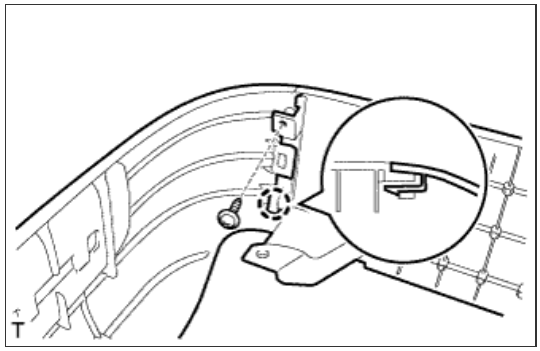


27. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side
Connect the lumbar switch connectors.


b. Attach the 2 claws to install the cushion shield.

c. Install the 3 screws.

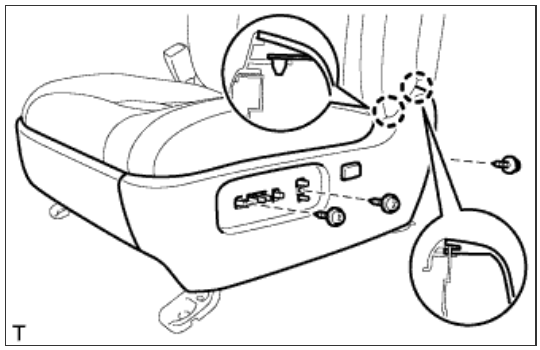


d. Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

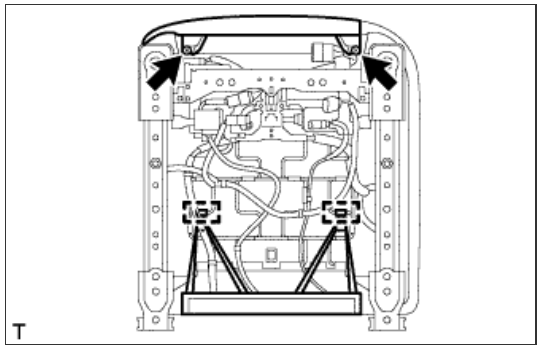


28. INSTALL RECLINING POWER SEAT SWITCH NOB

a. Attach the 2 claws to install the knob.

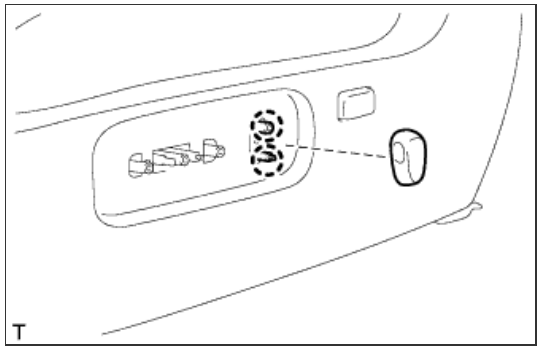

29. INSTALL SLIDE AND ERTICAL POWER SEAT SWITCH NOB

a. Attach the 2 claws to install the knob.

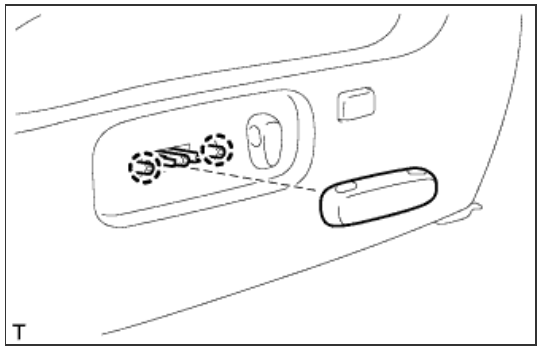

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT ASSEMBLY LH

a. Place the front seat assembly in the cabin.

NOTICE:

Be careful not to damage the vehicle body.

b. Connect the seat wire connectors under the seat.

c. Connect the cable to the negative (-) battery terminal.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

d. Temporarily install the front seat assembly with the 4 bolts.

e. Operate the power seat switch (slide switch) to move the seat to the rearmost position.

f. Tighten the bolts in the order shown in the illustration.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

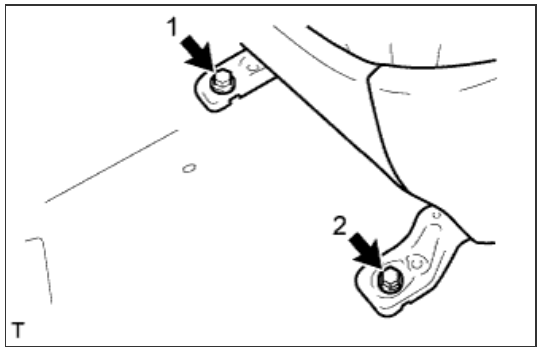

g. Operate the power seat switch (slide switch) to move the seat to the foremost position.


h. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

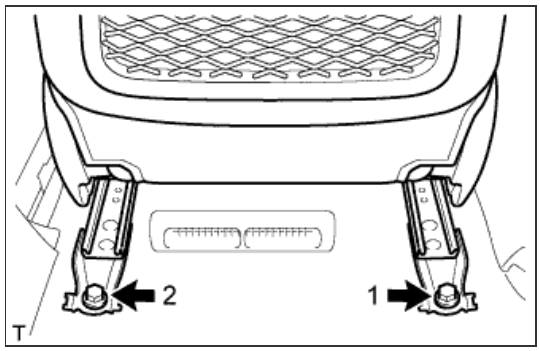


2. INSTALL REAR INNER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the cover.

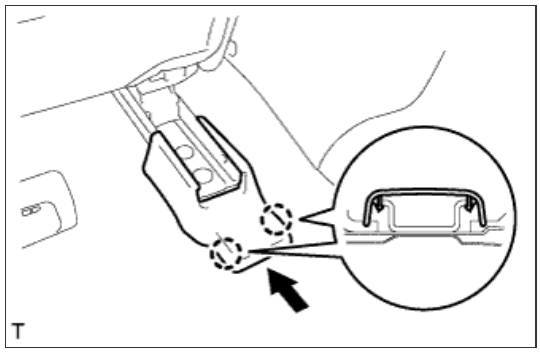


3. INSTALL REAR OUTER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the cover.

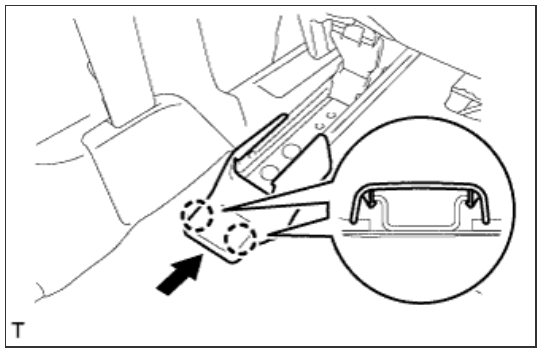

4. INSTALL FRONT INNER SEAT TRACK BRACKET COVER LH


a. Attach the 2 claws to install the cover.

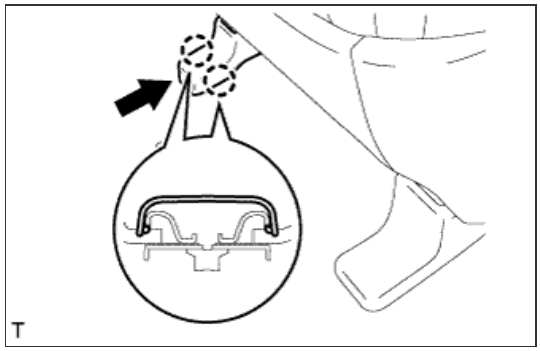

5. INSTALL FRONT OUTER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the cover.

b. Restore the Autoaway/Return function setting to the previous condition by changing the customize parameter (Click here).

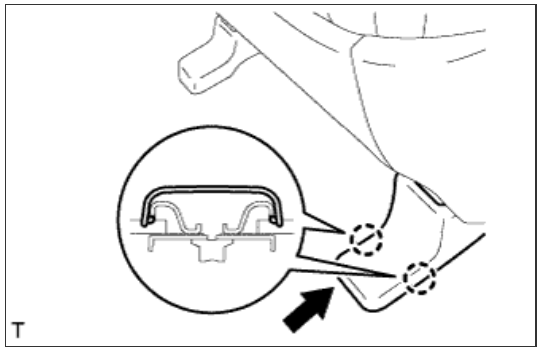

6. INSTALL FRONT SEAT HEADREST ASSEMBLY

7. CHECK SRS ARNING LIGHT

a. Check the SRS warning light (Click here).

8. INSPECT FRONT SEAT ASSEMBLY

a. w/ Seat Position Memory System:
Check the power seat operation (Click here).

b. w/o Seat Position Memory System:
Check the power seat operation (Click here).

c. w/ Seat Heater System:
Check the seat heater operation.

i. Turn the engine switch on ( ).

ii. Turn the seat heater switch on.

iii. Wait 5 minutes or more and confirm that the seat surface becomes warm.

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT ASSEMBLY LH

a. Place the front seat assembly in the cabin.

NOTICE:

Be careful not to damage the vehicle body.

b. Connect the seat wire connectors under the seat.

c. Connect the cable to the negative (-) battery terminal.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

d. Temporarily install the front seat assembly with the 4 bolts.

e. Operate the power seat switch (slide switch) to move the seat to the rearmost position.

f. Tighten the bolts in the order shown in the illustration.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

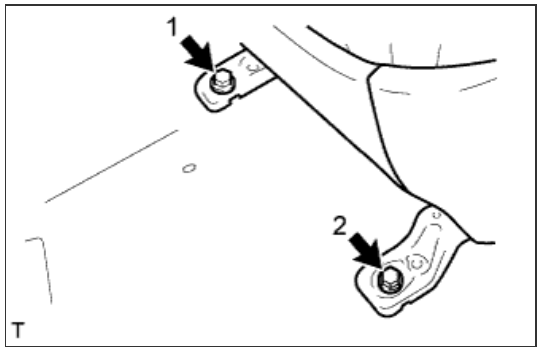

g. Operate the power seat switch (slide switch) to move the seat to the foremost position.


h. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

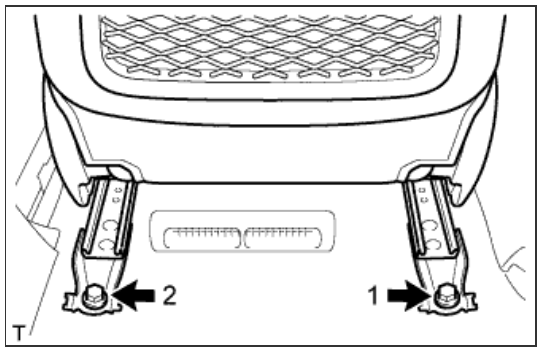


2. INSTALL REAR INNER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the cover.

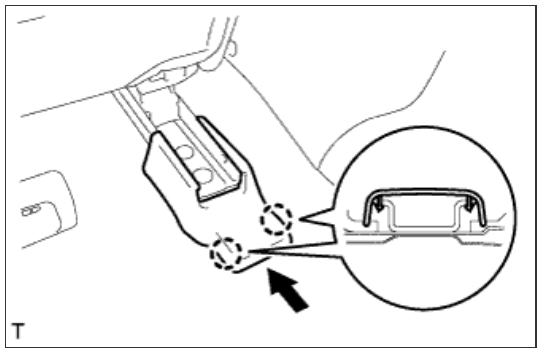


3. INSTALL REAR OUTER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the cover.

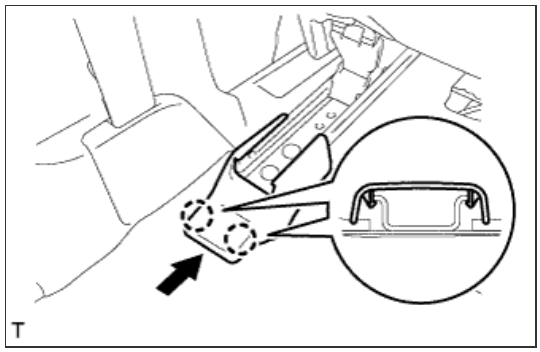

4. INSTALL FRONT INNER SEAT TRACK BRACKET COVER LH


a. Attach the 2 claws to install the cover.

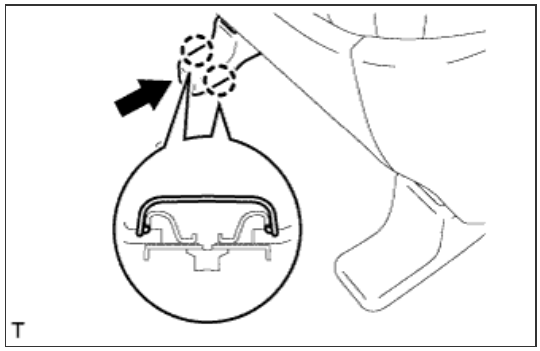

5. INSTALL FRONT OUTER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the cover.

b. Restore the Autoaway/Return function setting to the previous condition by changing the customize parameter (Click here).

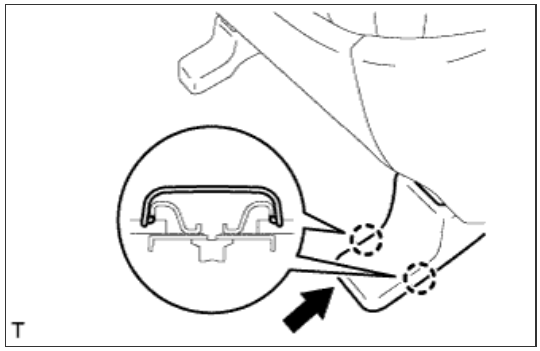

6. INSTALL FRONT SEAT HEADREST ASSEMBLY

7. CHECK SRS ARNING LIGHT

a. Check the SRS warning light (Click here).

8. INSPECT FRONT SEAT ASSEMBLY

a. w/ Seat Position Memory System:
Check the power seat operation (Click here).

b. w/o Seat Position Memory System:
Check the power seat operation (Click here).

c. w/ Seat Heater System:
Check the seat heater operation.

i. Turn the engine switch on ( ).

ii. Turn the seat heater switch on.

iii. Wait 5 minutes or more and confirm that the seat surface becomes warm.

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT ASSEMBLY LH

a. Place the front seat assembly in the cabin.

NOTICE:

Be careful not to damage the vehicle body.

b. Connect the seat wire connectors under the seat.

c. Connect the cable to the negative (-) battery terminal.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

d. Temporarily install the front seat assembly with the 4 bolts.

e. Operate the power seat switch (slide switch) to move the seat to the rearmost position.

f. Tighten the bolts in the order shown in the illustration.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

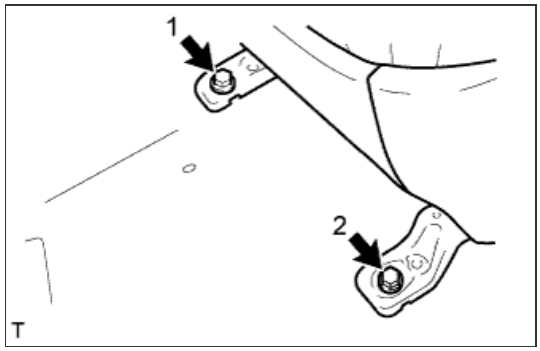

g. Operate the power seat switch (slide switch) to move the seat to the foremost position.


h. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

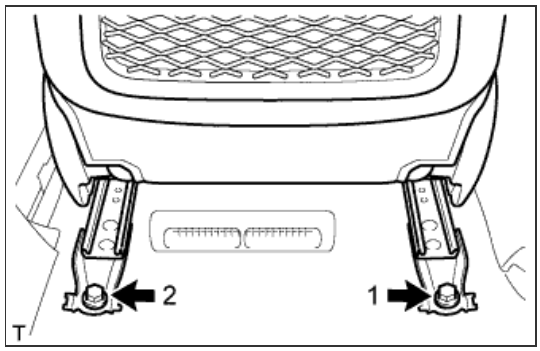


2. INSTALL REAR INNER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the cover.

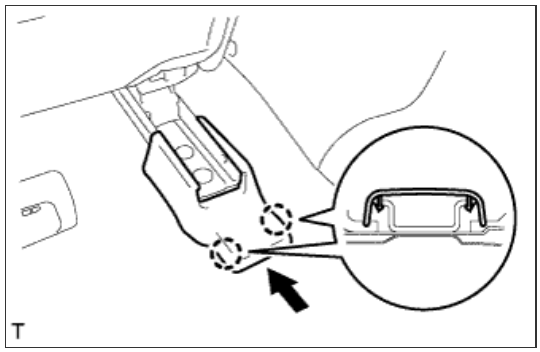


3. INSTALL REAR OUTER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the cover.

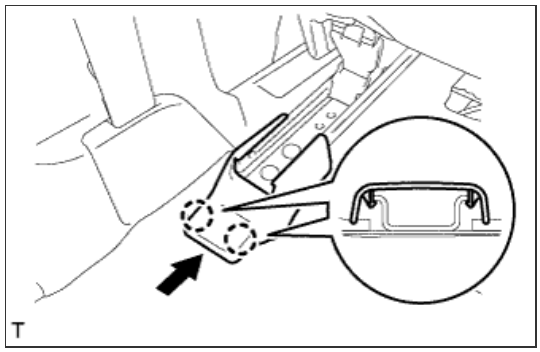

4. INSTALL FRONT INNER SEAT TRACK BRACKET COVER LH


a. Attach the 2 claws to install the cover.

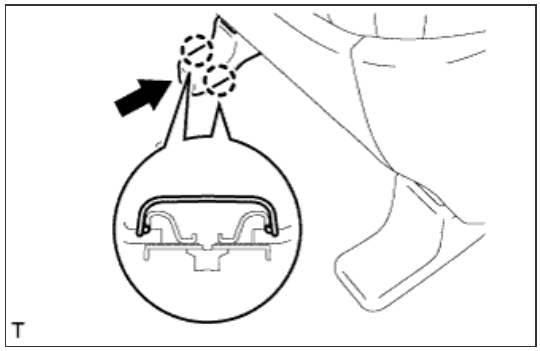

5. INSTALL FRONT OUTER SEAT TRACK BRACKET COVER LH

a. Attach the 2 claws to install the cover.

b. Restore the Autoaway/Return function setting to the previous condition by changing the customize parameter (Click here).

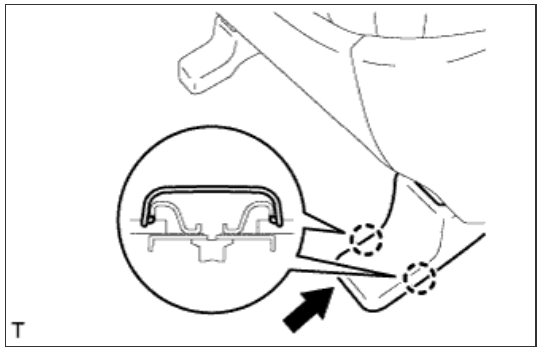

6. INSTALL FRONT SEAT HEADREST ASSEMBLY

7. CHECK SRS ARNING LIGHT

a. Check the SRS warning light (Click here).

8. INSPECT FRONT SEAT ASSEMBLY

a. w/ Seat Position Memory System:
Check the power seat operation (Click here).

b. w/o Seat Position Memory System:
Check the power seat operation (Click here).


c. w/ Seat Heater System:
Check the seat heater operation.


i. Turn the engine switch on ( ).


ii. Turn the seat heater switch on.


iii. Wait 5 minutes or more and confirm that the seat surface becomes warm.


for Preparation Click here

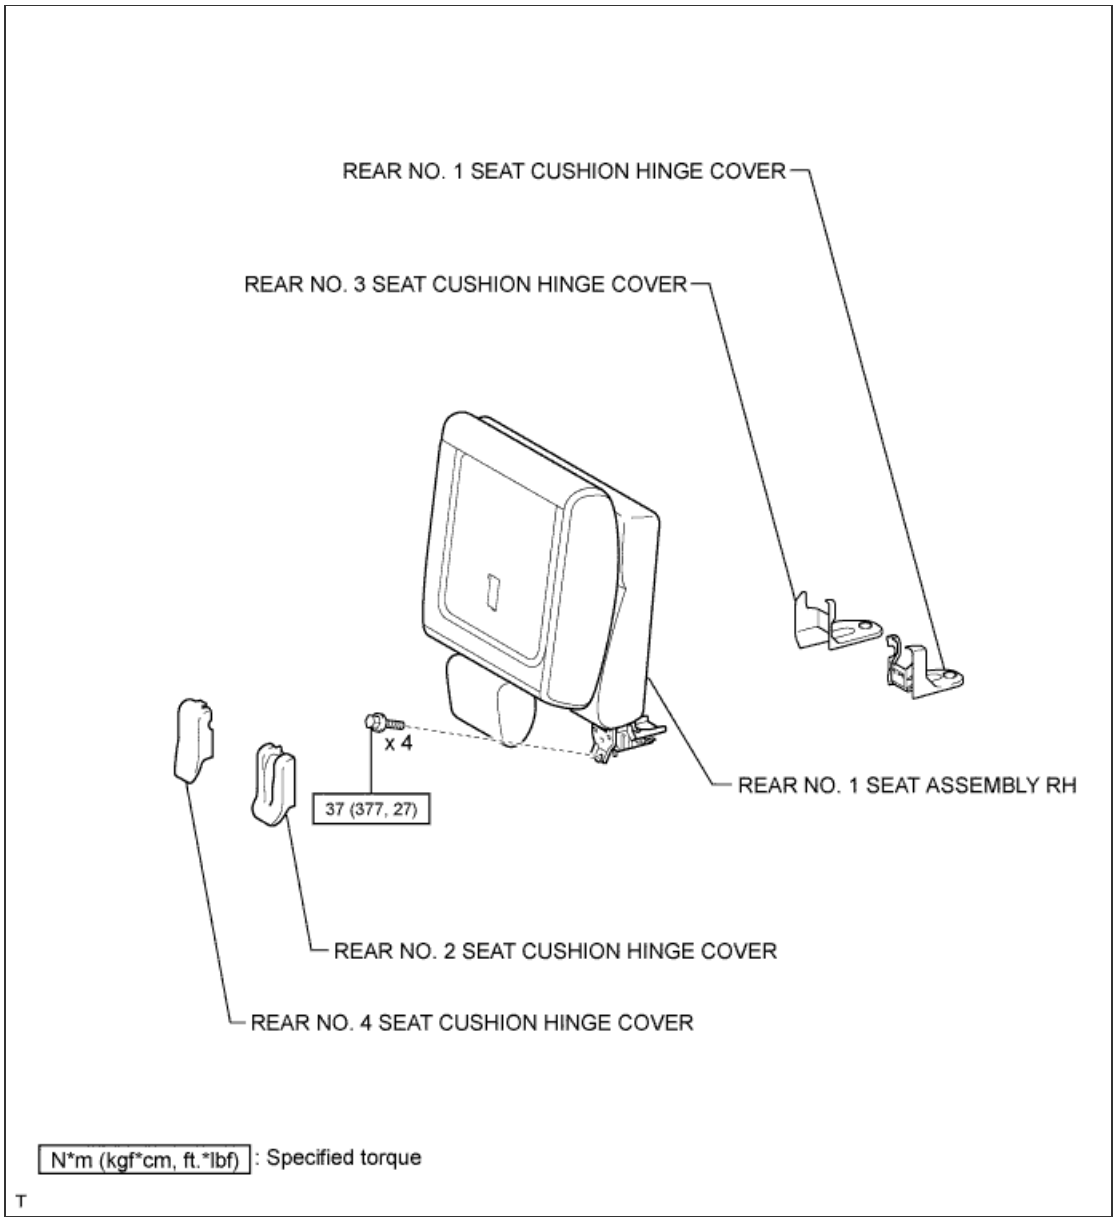


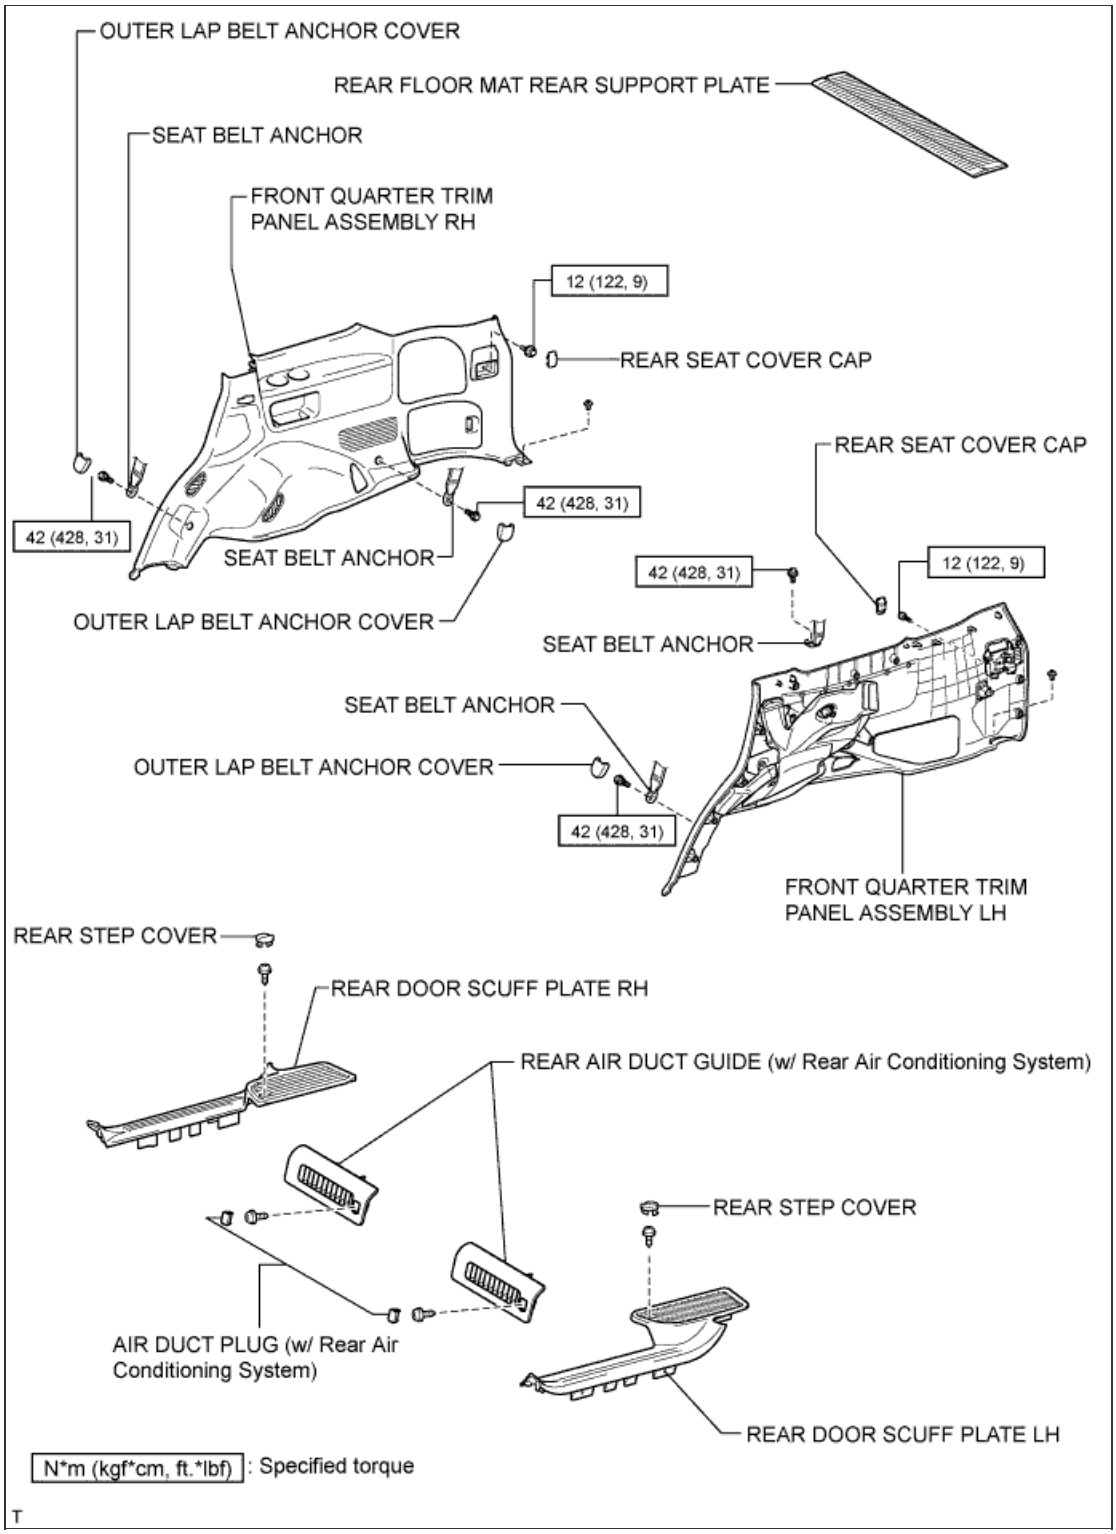

OUTER LAP BELT ANCHOR COVER
REAR FLOOR MAT REAR SUPPORT PLATE
SEAT BELT ANCHOR
FRONT QUARTER TRIM PANEL ASSEMBLY RH
12 (122, 9)
REAR SEAT COVER CAP
42 (428, 31)
42 (428, 31)
SEAT BELT ANCHOR
OUTER LAP BELT ANCHOR COVER
REAR SEAT COVER CAP
42 (428, 31)
12 (122, 9)
SEAT BELT ANCHOR
SEAT BELT ANCHOR
OUTER LAP BELT ANCHOR COVER
42 (428, 31)
FRONT QUARTER TRIM PANEL ASSEMBLY LH
REAR STEP COVER
REAR DOOR SCUFF PLATE RH
REAR AIR DUCT GUIDE (w/ Rear Air Conditioning System)
REAR STEP COVER
AIR DUCT PLUG (w/ Rear Air Conditioning System)
REAR DOOR SCUFF PLATE LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T

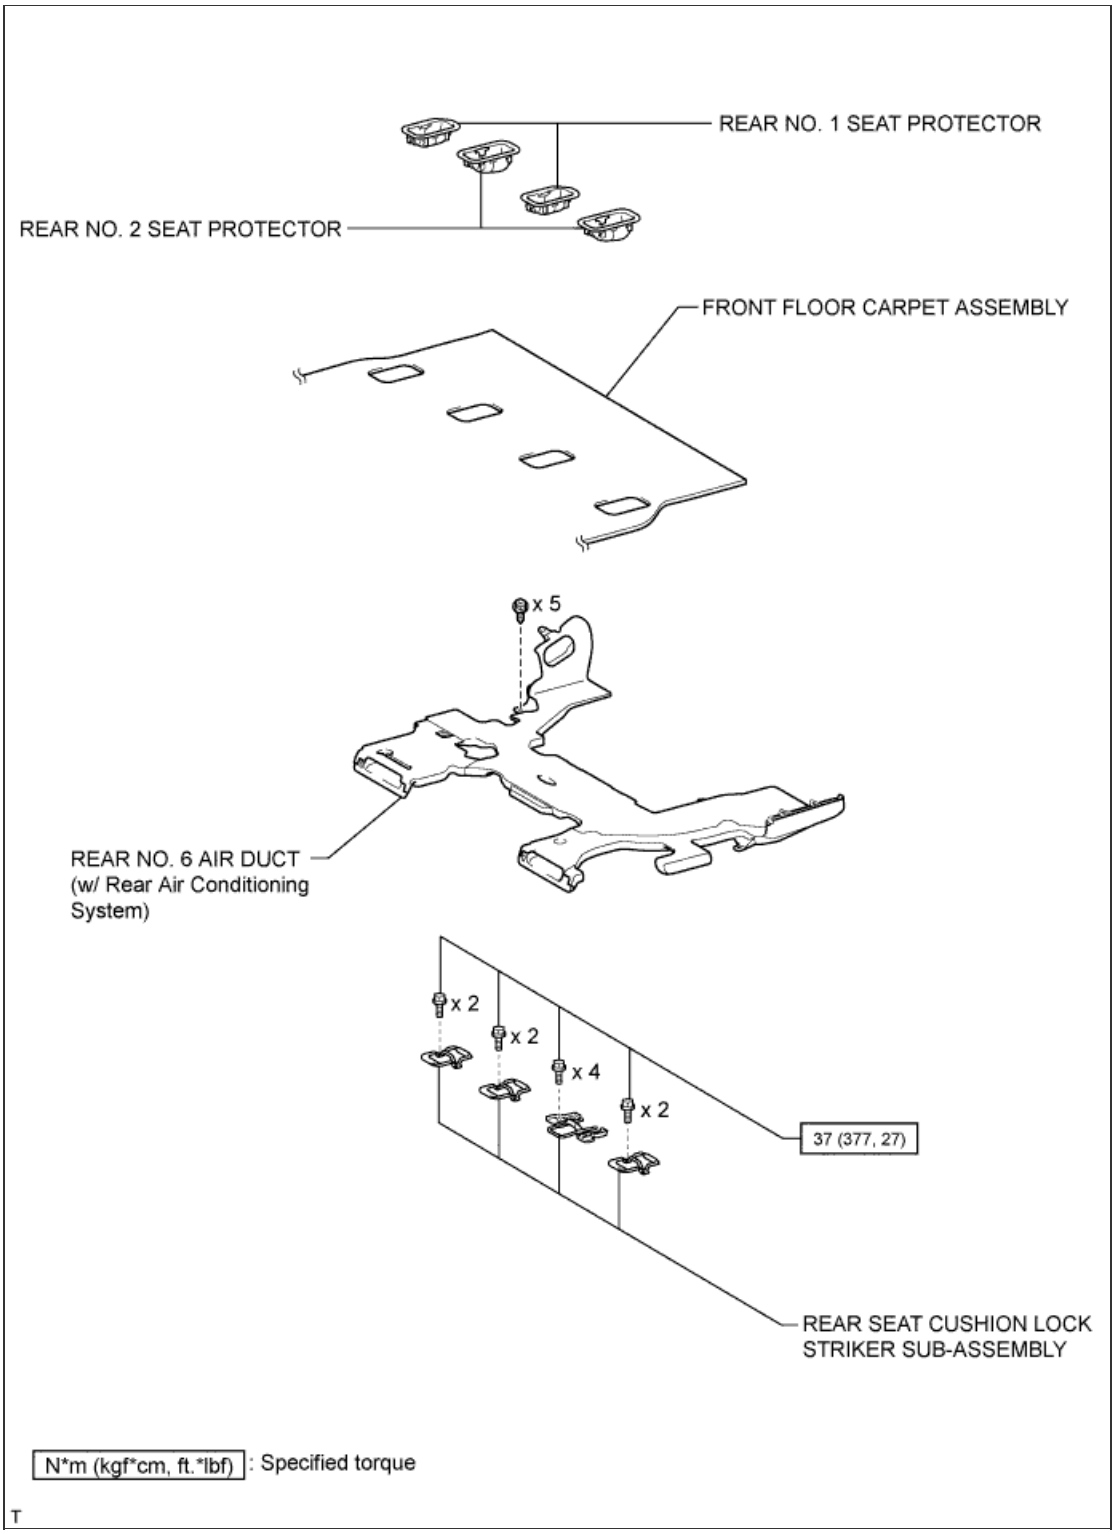
REAR NO. 1 SEAT PROTECTOR
REAR NO. 2 SEAT PROTECTOR
FRONT FLOOR CARPET ASSEMBLY
x 5
REAR NO. 6 AIR DUCT
(w/ Rear Air Conditioning
System)
x 2
x 2
x 4
x 2
37 (377, 27)
REAR SEAT CUSHION LOCK
STRIKER SUB-ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
T

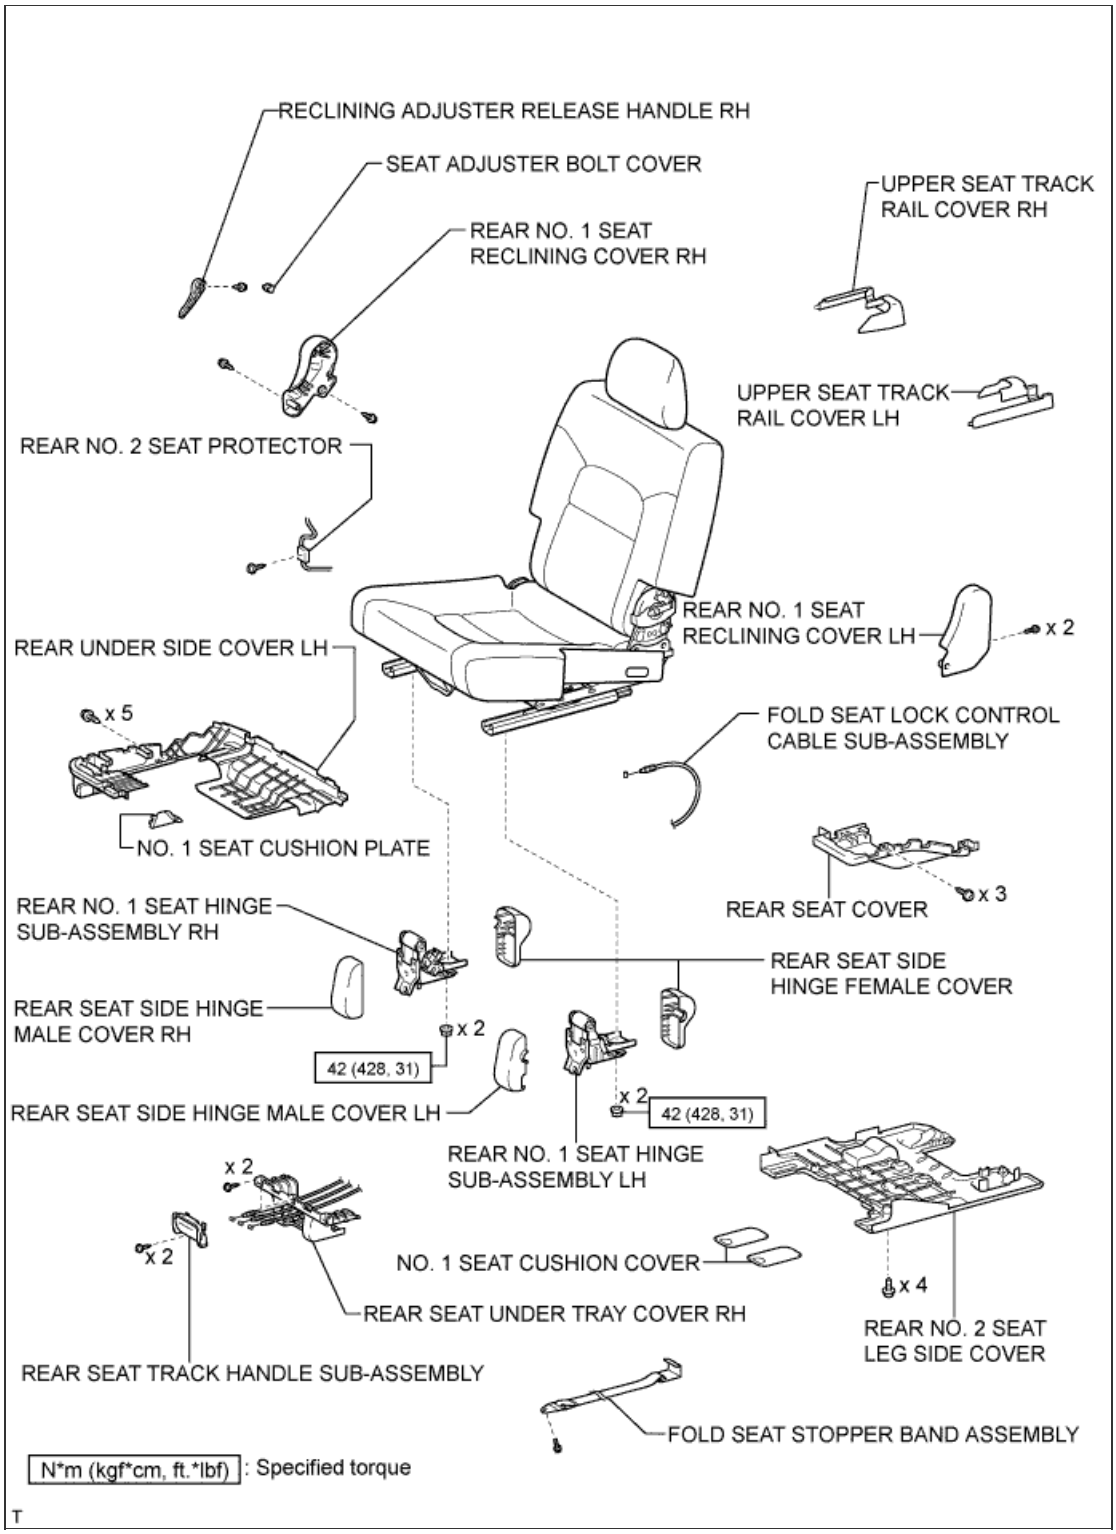
RECLINING ADJUSTER RELEASE HANDLE RH
SEAT ADJUSTER BOLT COVER
REAR NO. 1 SEAT RECLINING COVER RH
UPPER SEAT TRACK RAIL COVER RH
UPPER SEAT TRACK RAIL COVER LH
REAR NO. 2 SEAT PROTECTOR
REAR NO. 1 SEAT RECLINING COVER LH
x 2
REAR UNDER SIDE COVER LH
x 5
FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY
NO. 1 SEAT CUSHION PLATE
REAR SEAT COVER
x 3
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH
REAR SEAT SIDE HINGE FEMALE COVER
REAR SEAT SIDE HINGE MALE COVER RH
x 2
42 (428, 31)
REAR SEAT SIDE HINGE MALE COVER LH
x 2
42 (428, 31)
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH
x 2
x 2
NO. 1 SEAT CUSHION COVER
x 4
REAR SEAT UNDER TRAY COVER RH
REAR NO. 2 SEAT LEG SIDE COVER
REAR SEAT TRACK HANDLE SUB-ASSEMBLY
FOLD SEAT STOPPER BAND ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
T

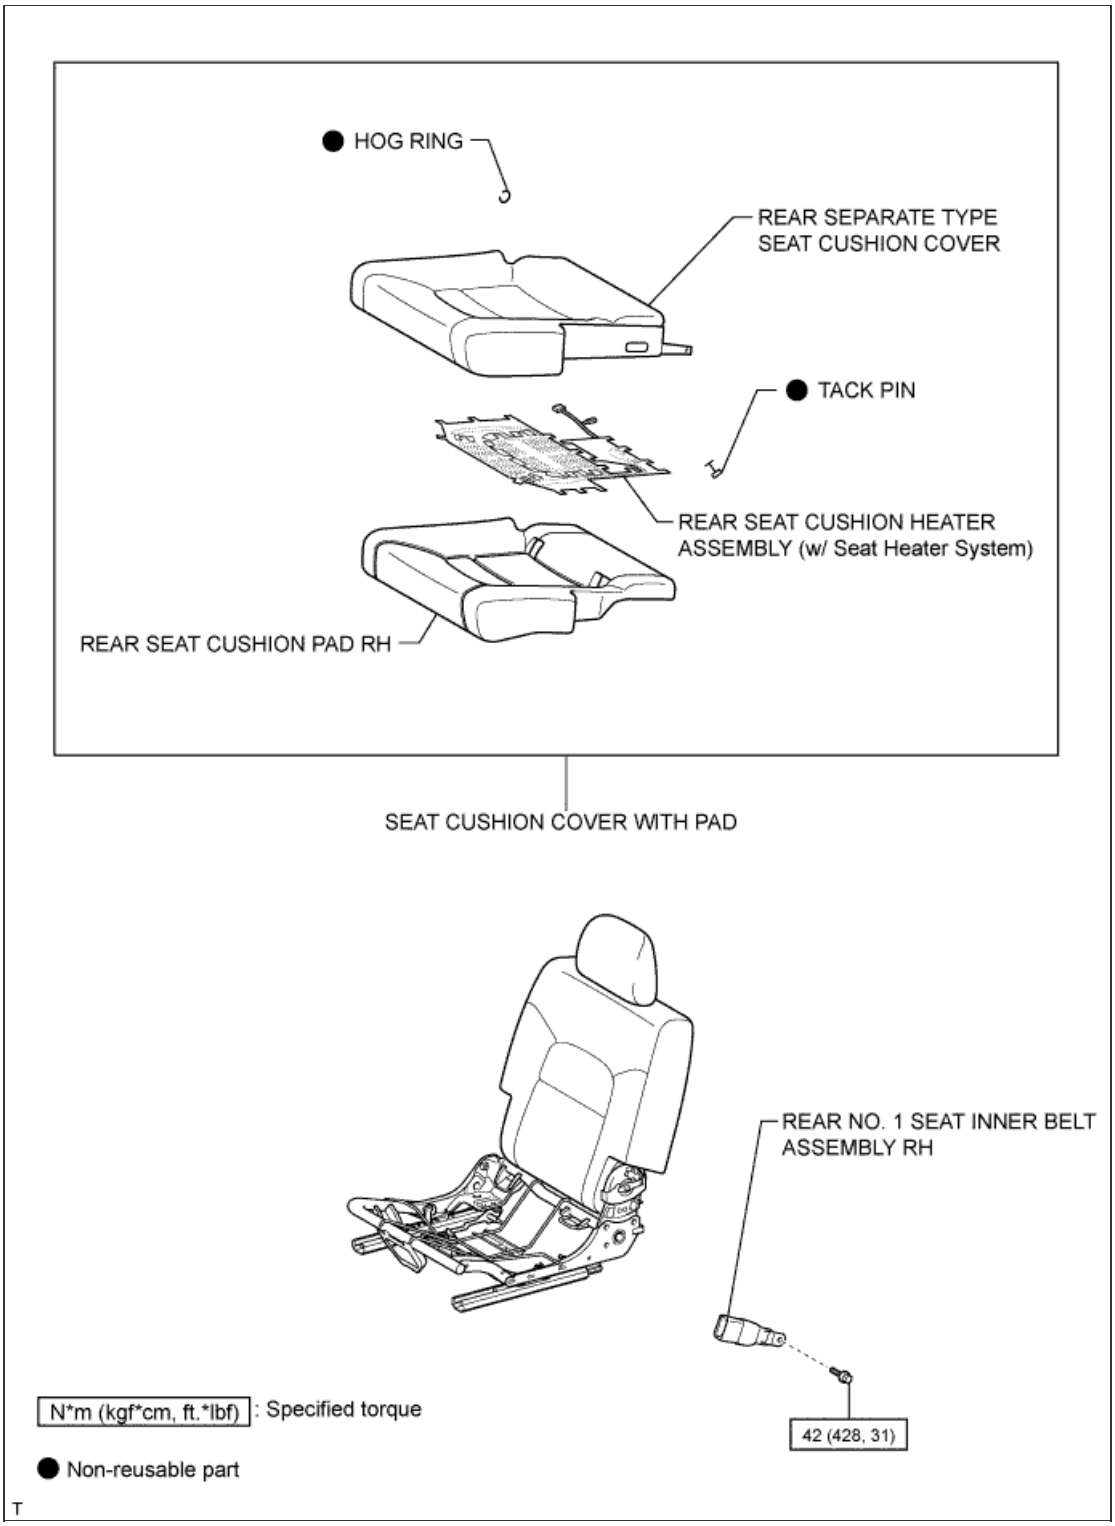
HOG RING
REAR SEPARATE TYPE SEAT CUSHION COVER
TACK PIN
REAR SEAT CUSHION HEATER ASSEMBLY (w/ Seat Heater System)
REAR SEAT CUSHION PAD RH
SEAT CUSHION COVER WITH PAD
REAR NO. 1 SEAT INNER BELT ASSEMBLY RH
42 (428, 31)
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
T

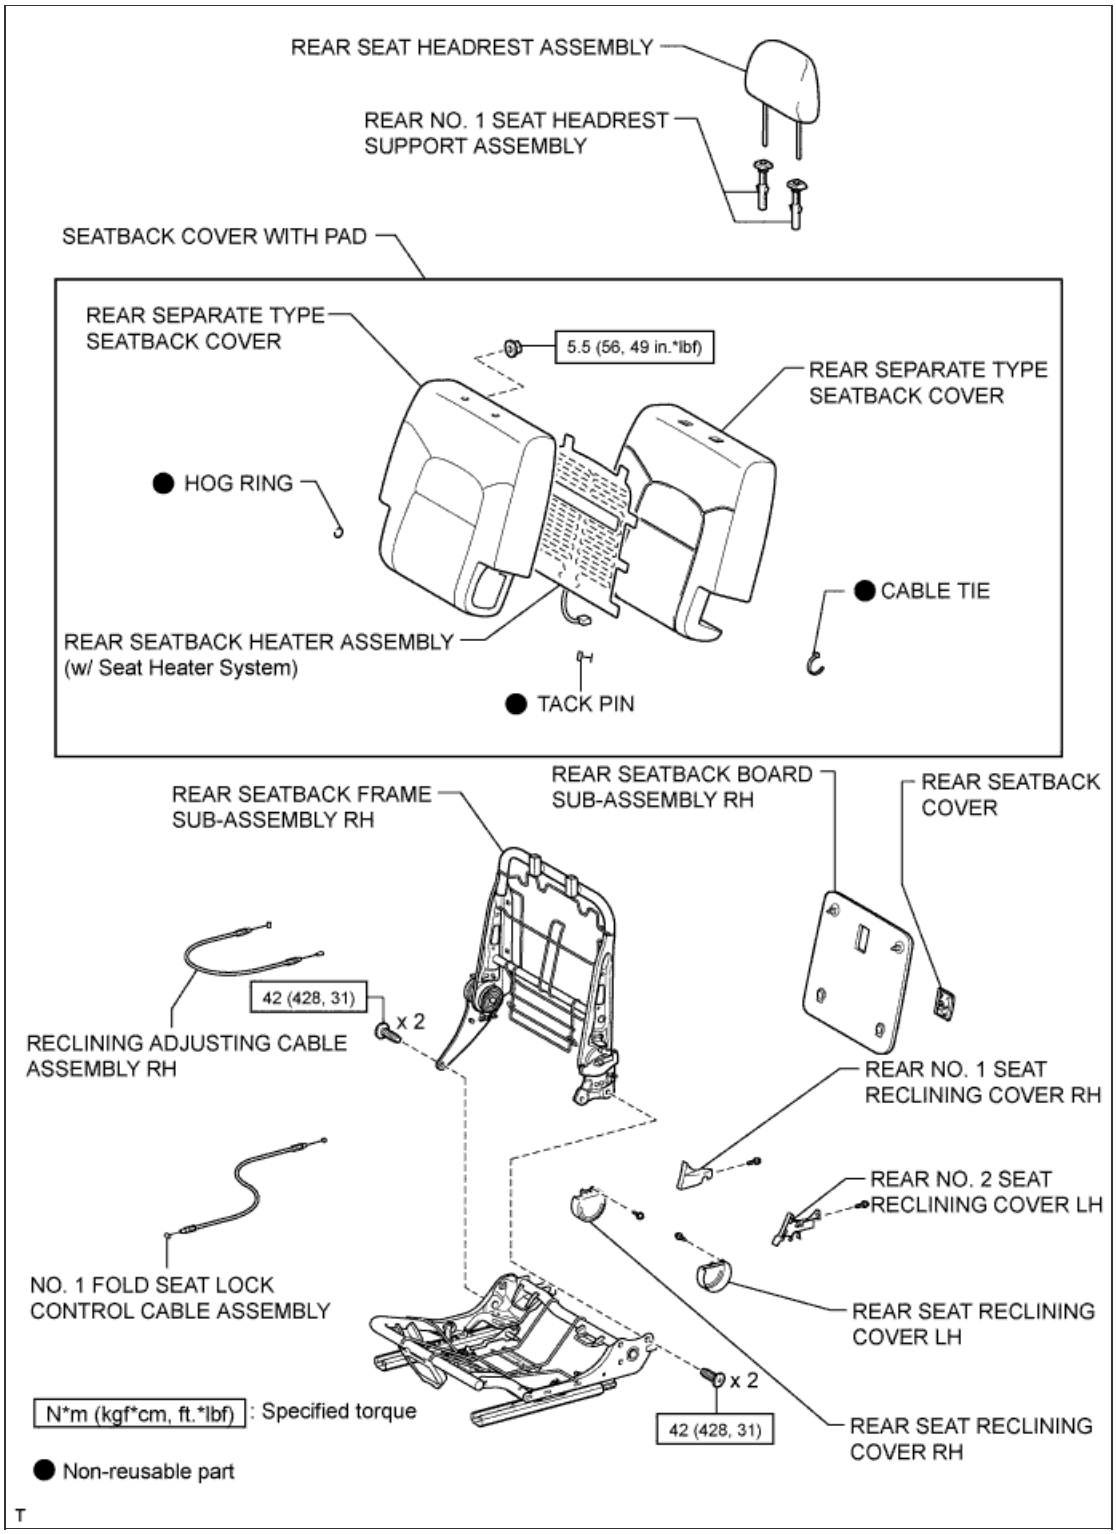
REAR SEAT HEADREST ASSEMBLY
REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY
SEATBACK COVER WITH PAD
REAR SEPARATE TYPE SEATBACK COVER
5.5 (56, 49 in.*lbf)
REAR SEPARATE TYPE SEATBACK COVER
HOG RING
CABLE TIE
REAR SEATBACK HEATER ASSEMBLY (w/ Seat Heater System)
TACK PIN
REAR SEATBACK FRAME SUB-ASSEMBLY RH
REAR SEATBACK BOARD SUB-ASSEMBLY RH
REAR SEATBACK COVER
42 (428, 31)
x 2
RECLINING ADJUSTING CABLE ASSEMBLY RH
REAR NO. 1 SEAT RECLINING COVER RH
REAR NO. 2 SEAT RECLINING COVER LH
NO. 1 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY
REAR SEAT RECLINING COVER LH
x 2
42 (428, 31)
REAR SEAT RECLINING COVER RH
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
T

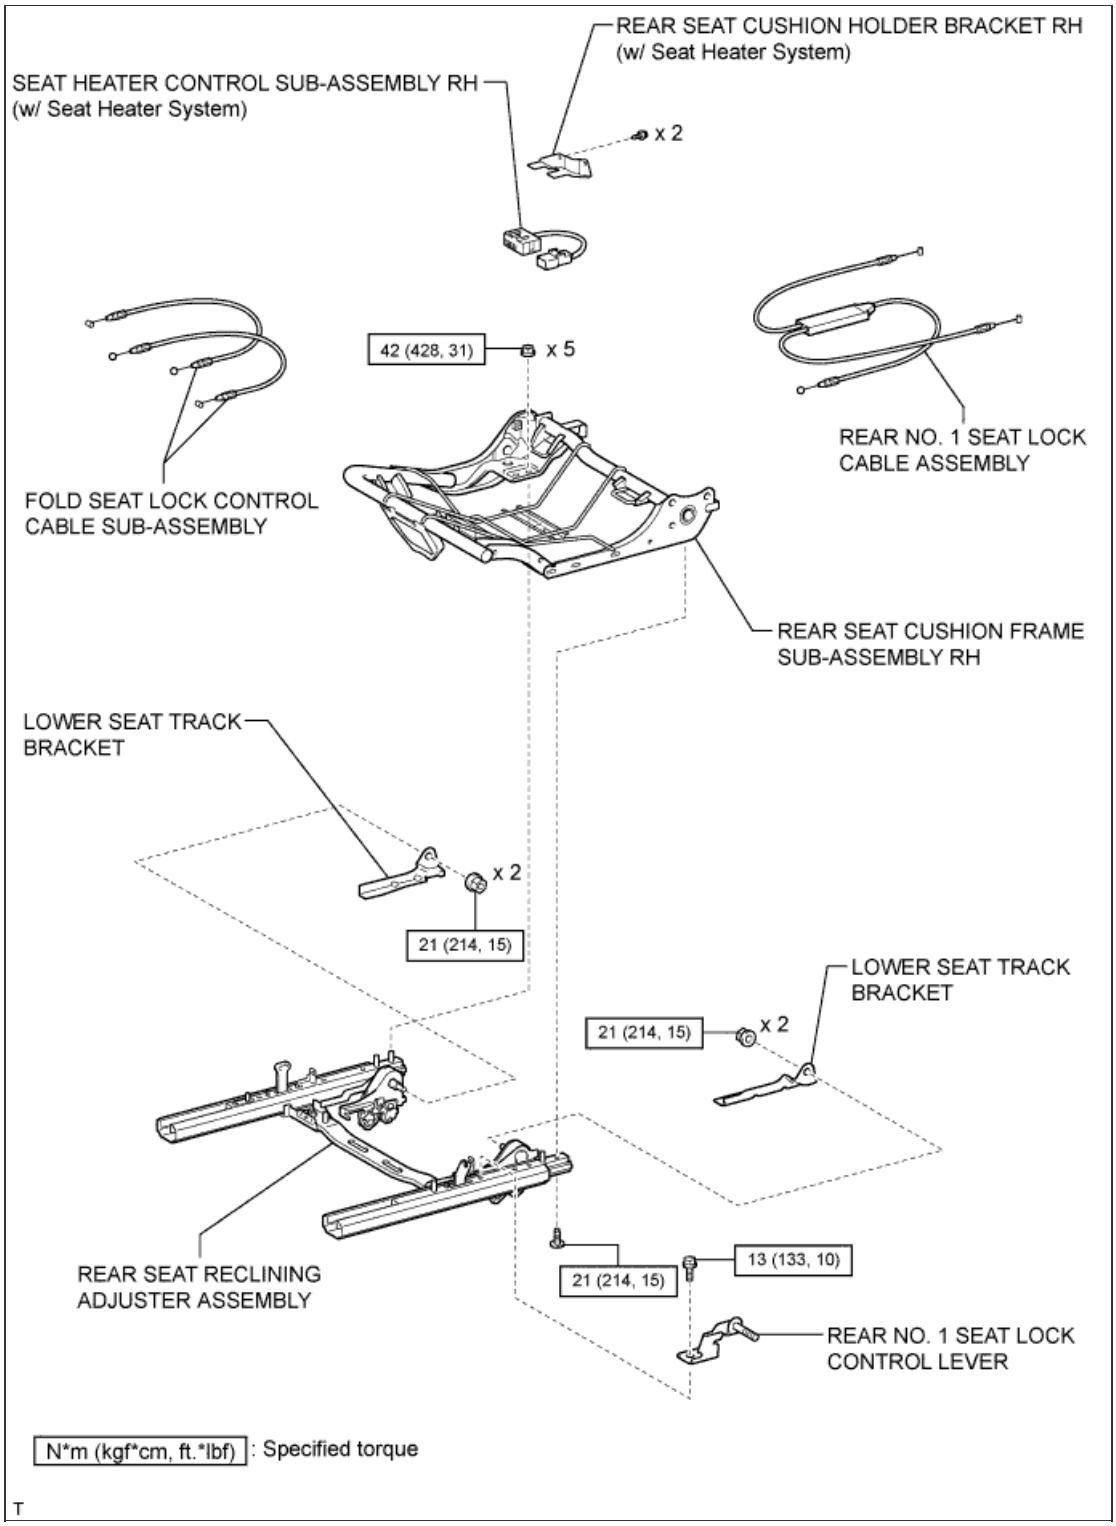
REAR SEAT CUSHION HOLDER BRACKET RH
(w/ Seat Heater System)
SEAT HEATER CONTROL SUB-ASSEMBLY RH
(w/ Seat Heater System)
x 2
42 (428, 31)
x 5
REAR NO. 1 SEAT LOCK
CABLE ASSEMBLY
FOLD SEAT LOCK CONTROL
CABLE SUB-ASSEMBLY
REAR SEAT CUSHION FRAME
SUB-ASSEMBLY RH
LOWER SEAT TRACK
BRACKET
x 2
21 (214, 15)
LOWER SEAT TRACK
BRACKET
21 (214, 15)
x 2
REAR SEAT RECLINING
ADJUSTER ASSEMBLY
21 (214, 15)
13 (133, 10)
REAR NO. 1 SEAT LOCK
CONTROL LEVER
N*m (kgf*cm, ft.*lbf) : Specified torque
T

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 6 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

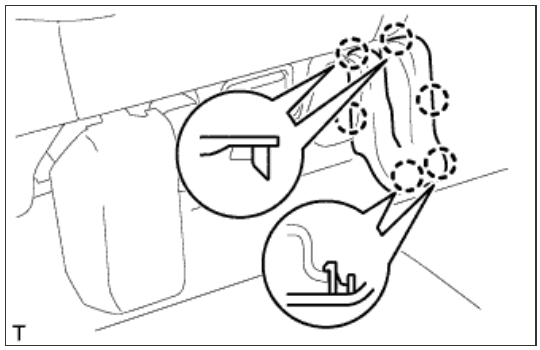


3. REMOVE REAR NO. 4 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 6 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

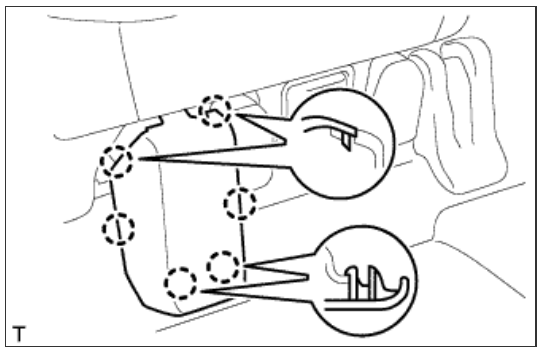

4. REMOVE REAR NO. 1 SEAT CUSHION HINGE COVER


a. Operate the reclining adjuster release handle to move the seat into the position shown in the illustration.

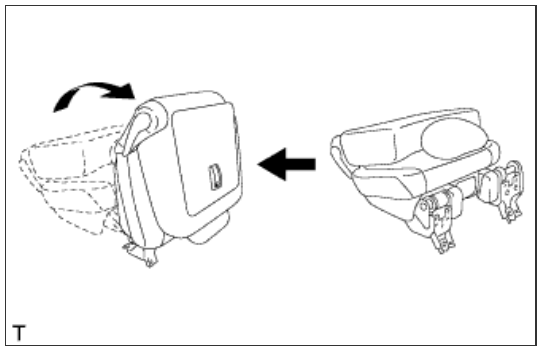

b. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:

Tape the screwdriver tip before use.

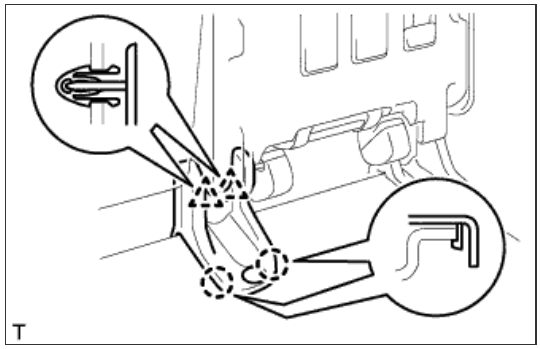


5. REMOVE REAR NO. 3 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:


Tape the screwdriver tip before use.

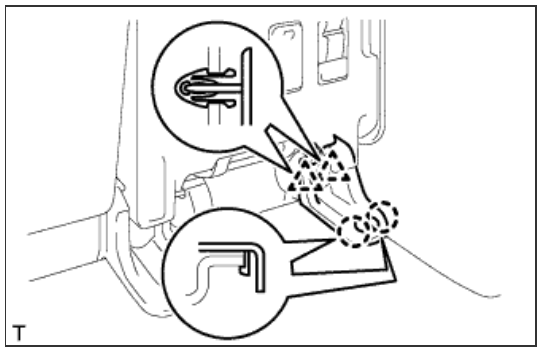

6. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. w/ Rear Seat Side Airbag:
Disconnect the connector.


b. w/ Seat Heater System:
Disconnect the connector.

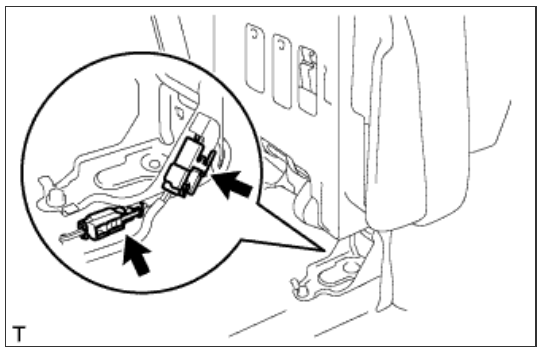

c. Remove the 4 bolts and seat assembly.

NOTICE:

e careful not to damage the vehicle body.

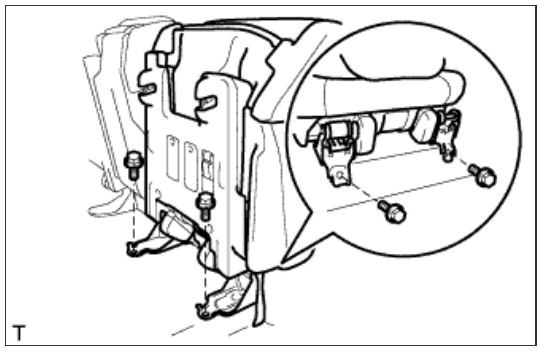


7. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. Remove the rear No. 1 seat assembly H (Click here).


8. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

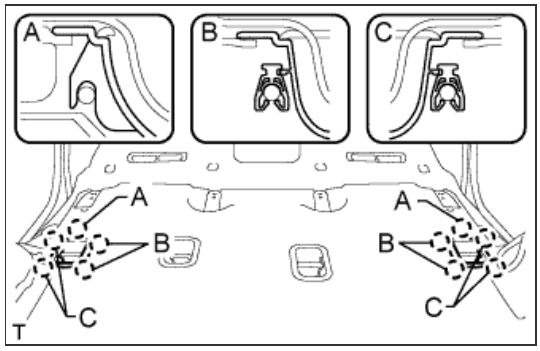

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

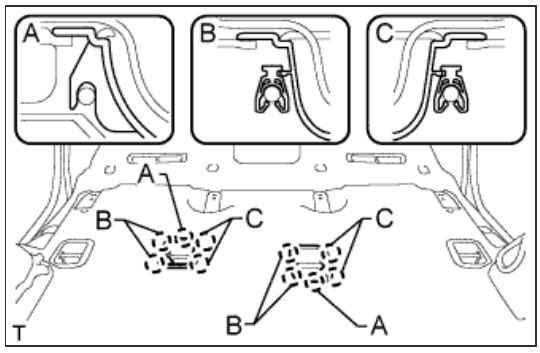


10. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

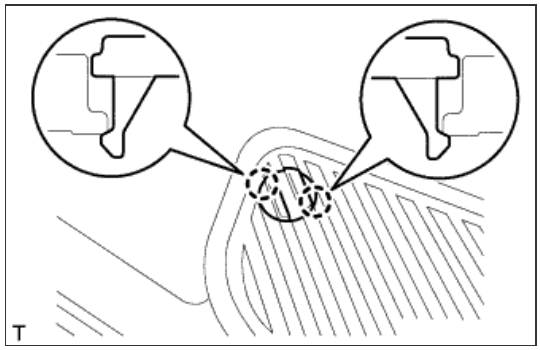

11. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

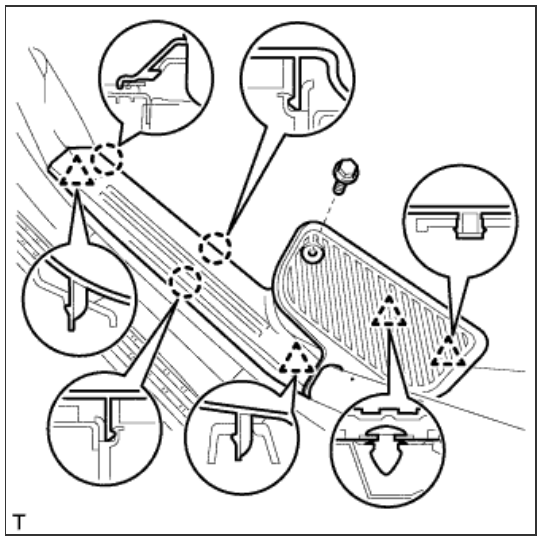

12. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the H side.


13. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. for Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

14. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

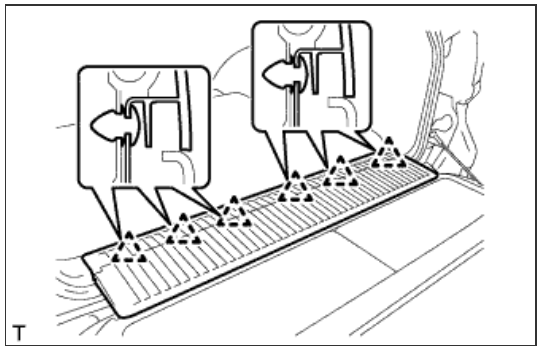

15. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

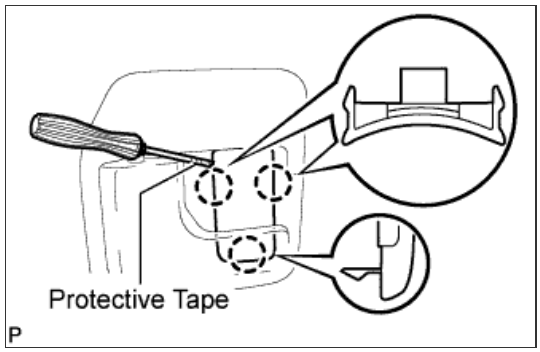

16. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly H (Click here).

b. w/o Sliding Roof:
Remove the front uarter trim panel assembly H (Click here).

17. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).

18. REMOVE AIR DUCT PLUG (w/ Rear Air Conditioning System)

a. Detach the 2 claws and remove the plug.

HINT:

Use the same procedures for both sides.

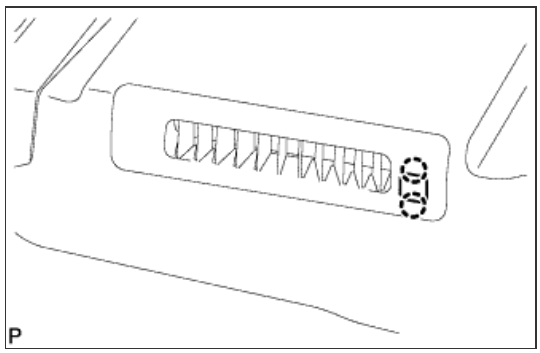


19. REMOVE REAR AIR DUCT GUIDE (w/ Rear Air Conditioning System)

a. Remove the screw.

b. Detach the claw and remove the guide.

HINT:

Use the same procedures for both sides.

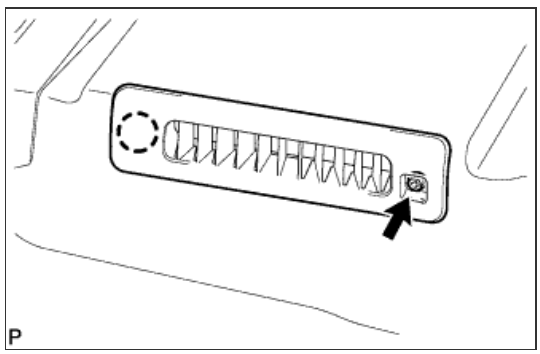


20. REMOVE FRONT FLOOR CARPET ASSEMBLY

a. Fold back the floor carpet.

HINT:


Fold back the carpet until it is possible to remove the rear No. 6 air duct.

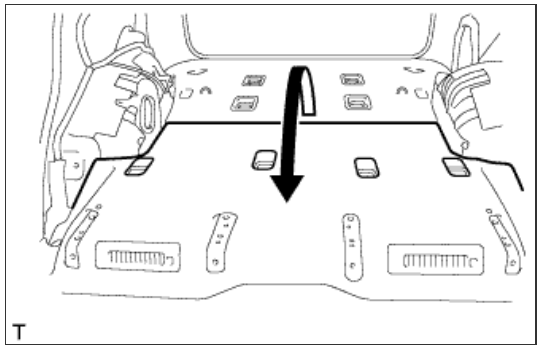

21. REMOVE REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)


a. Disconnect the 2 connectors.

b. Remove the screws and duct.

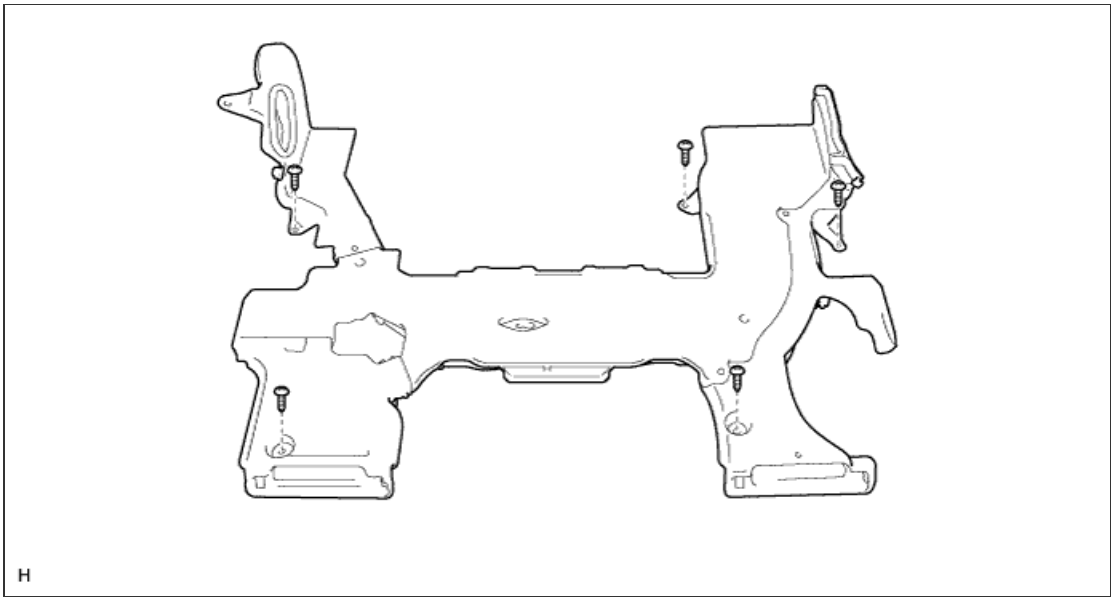

22. REMOVE REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

a. Remove the 10 bolts and 4 lock strikers.

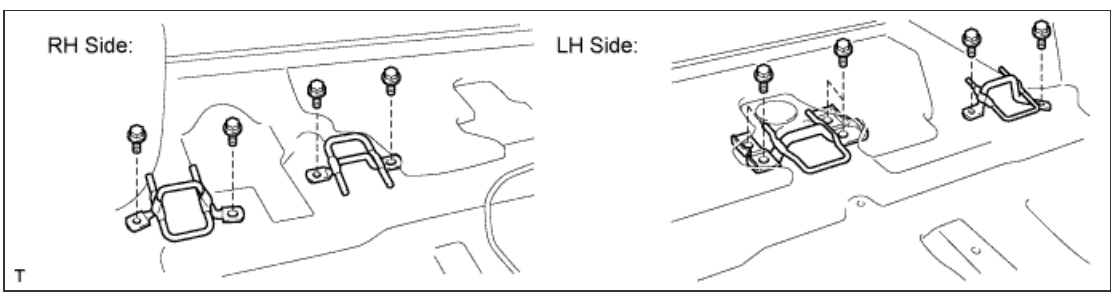

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 6 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

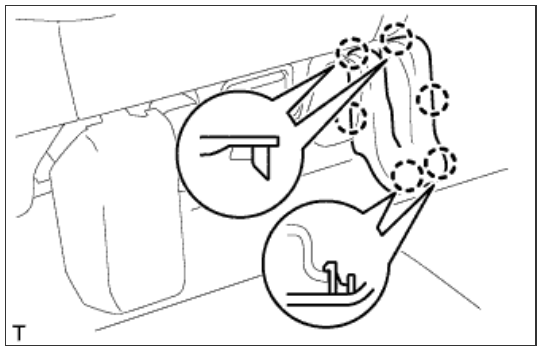


3. REMOVE REAR NO. 4 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 6 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

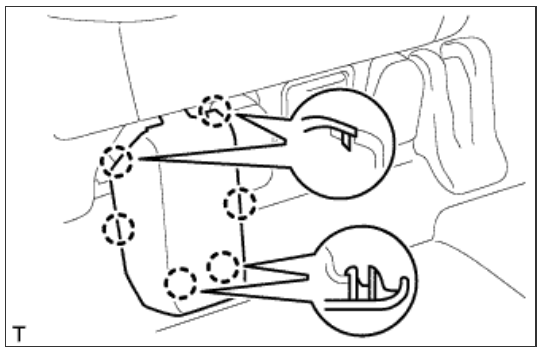

4. REMOVE REAR NO. 1 SEAT CUSHION HINGE COVER


a. Operate the reclining adjuster release handle to move the seat into the position shown in the illustration.

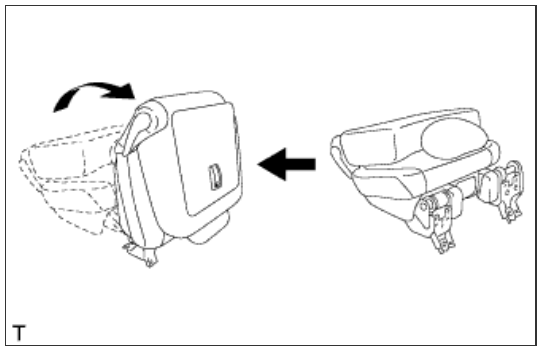

b. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:

Tape the screwdriver tip before use.

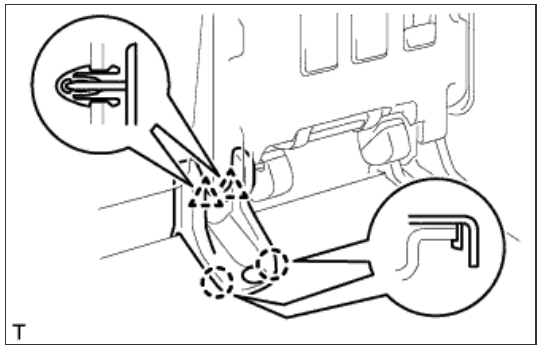


5. REMOVE REAR NO. 3 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:


Tape the screwdriver tip before use.

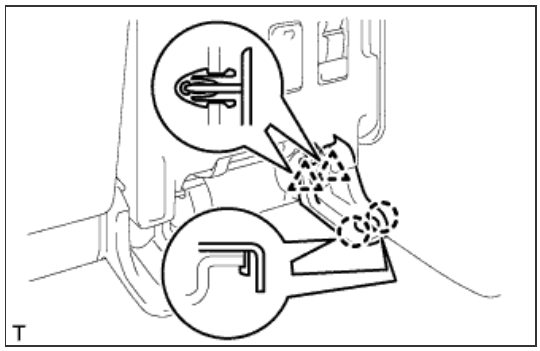

6. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. w/ Rear Seat Side Airbag:
Disconnect the connector.


b. w/ Seat Heater System:
Disconnect the connector.

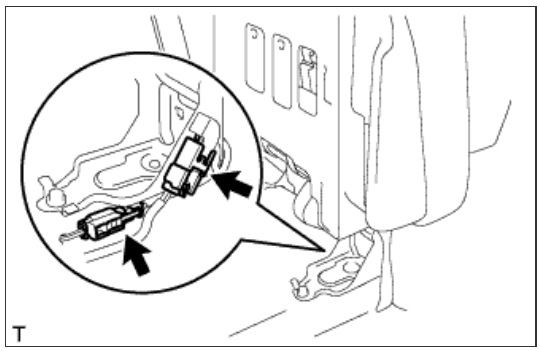

c. Remove the 4 bolts and seat assembly.

NOTICE:

e careful not to damage the vehicle body.

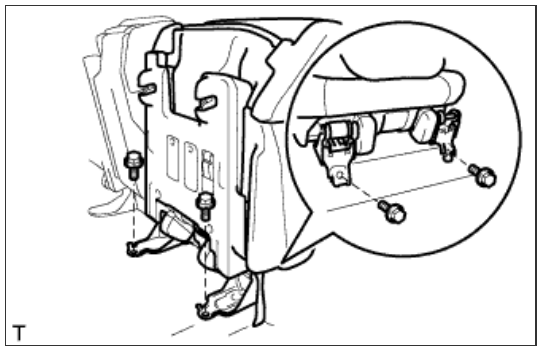


7. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. Remove the rear No. 1 seat assembly H (Click here).


8. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

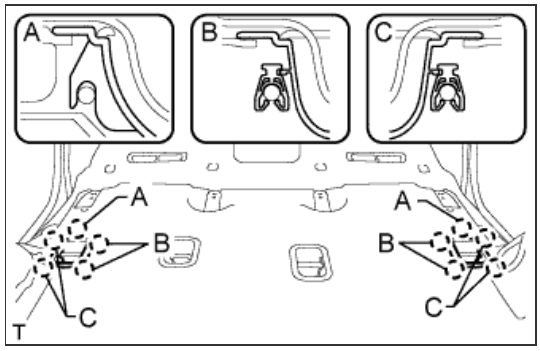

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

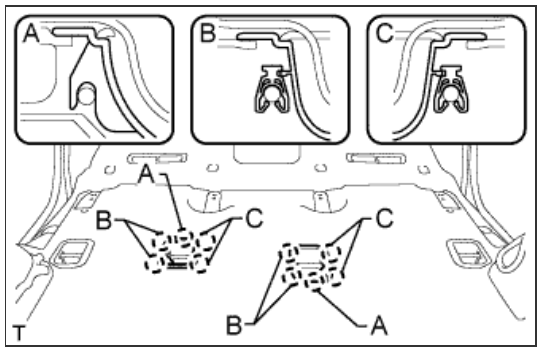


10. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

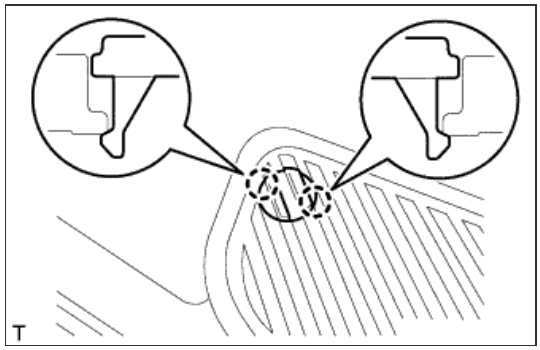

11. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

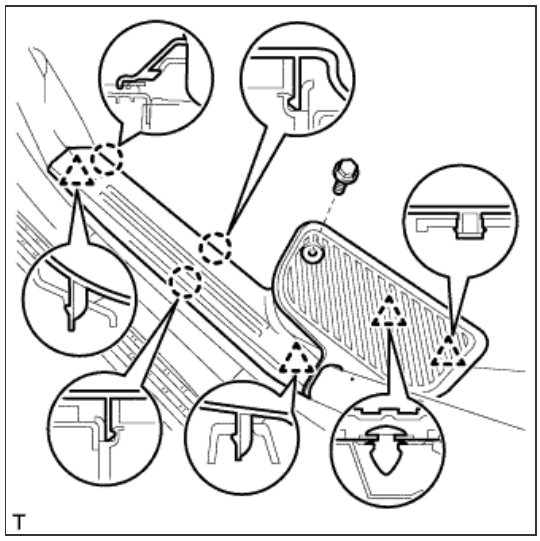

12. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the H side.


13. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. for Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

14. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

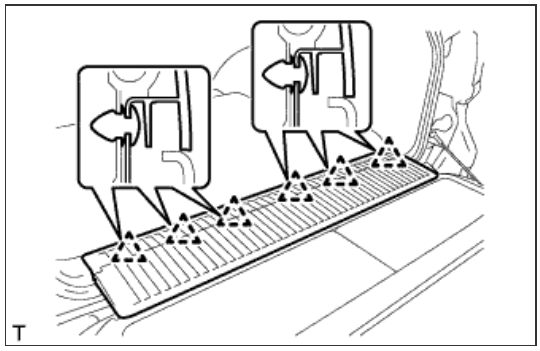

15. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

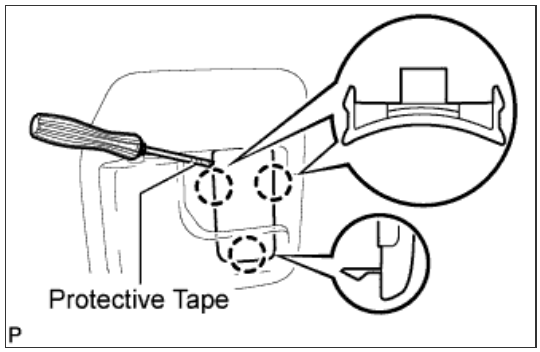

16. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly H (Click here).

b. w/o Sliding Roof:
Remove the front uarter trim panel assembly H (Click here).

17. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).

18. REMOVE AIR DUCT PLUG (w/ Rear Air Conditioning System)

a. Detach the 2 claws and remove the plug.

HINT:

Use the same procedures for both sides.

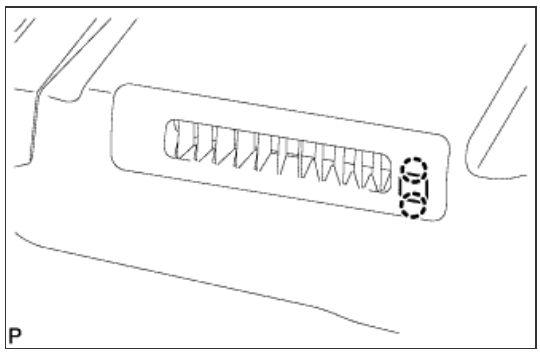


19. REMOVE REAR AIR DUCT GUIDE (w/ Rear Air Conditioning System)

a. Remove the screw.

b. Detach the claw and remove the guide.

HINT:

Use the same procedures for both sides.

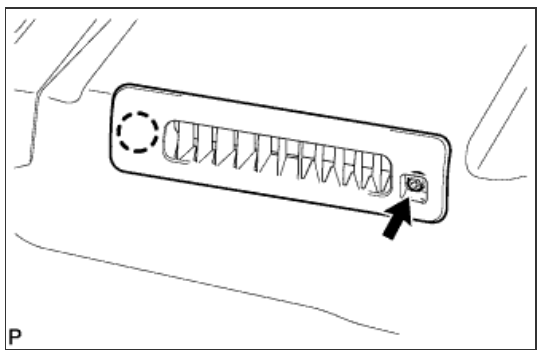


20. REMOVE FRONT FLOOR CARPET ASSEMBLY

a. Fold back the floor carpet.

HINT:


Fold back the carpet until it is possible to remove the rear No. 6 air duct.

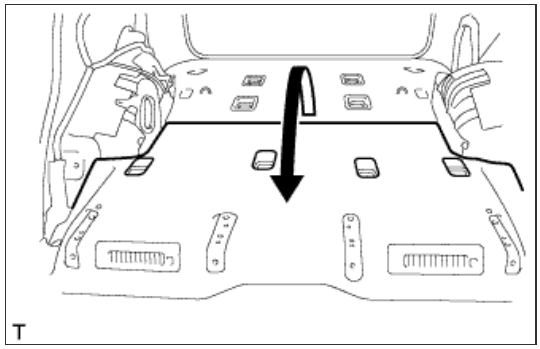

21. REMOVE REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)


a. Disconnect the 2 connectors.

b. Remove the screws and duct.

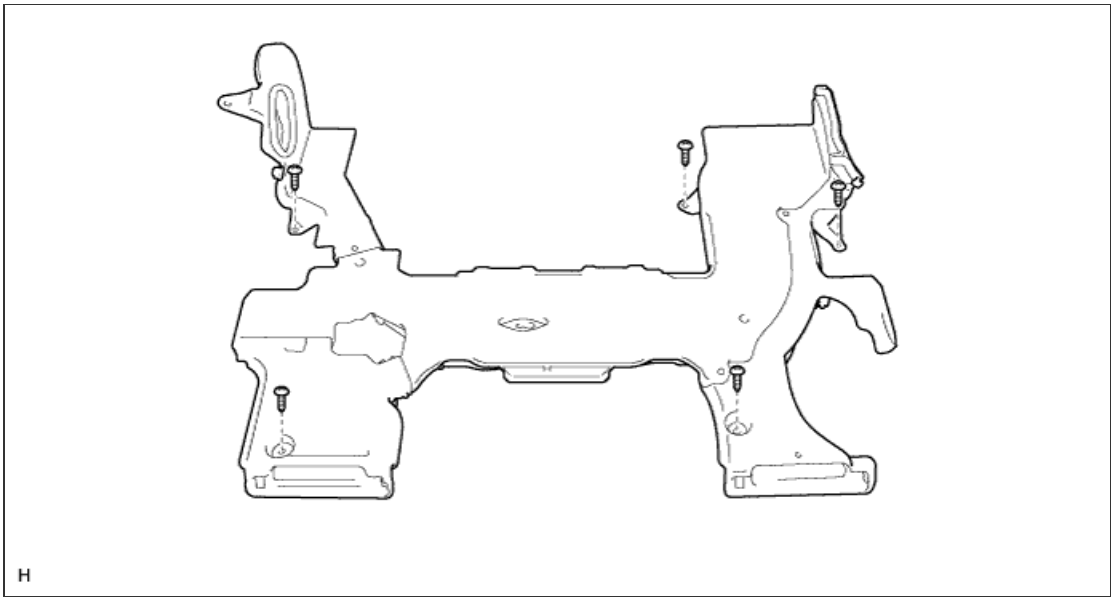

22. REMOVE REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

a. Remove the 10 bolts and 4 lock strikers.

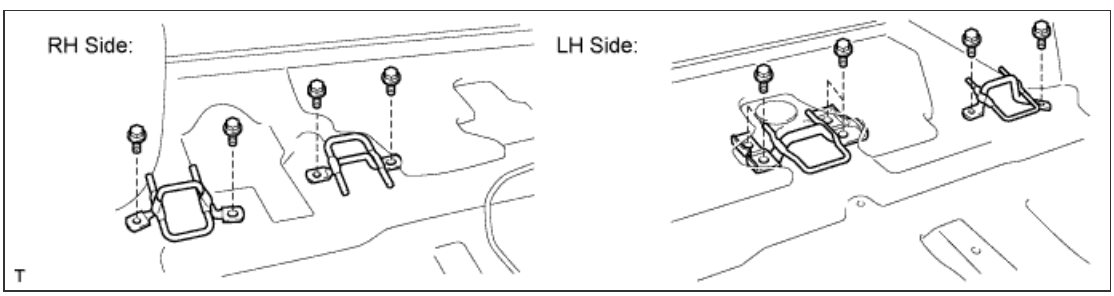

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 6 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

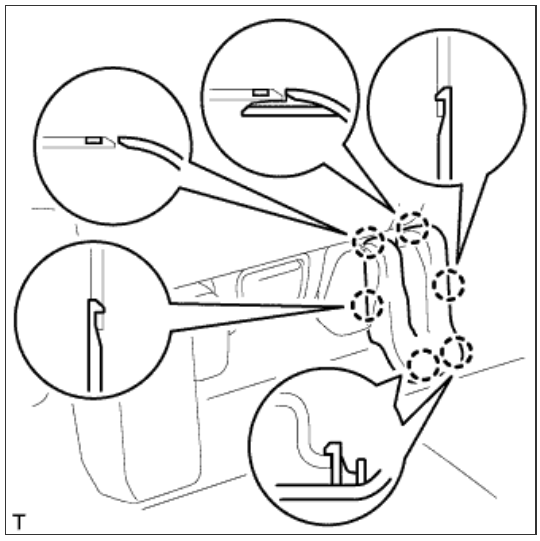


3. REMOVE REAR NO. 4 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 7 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

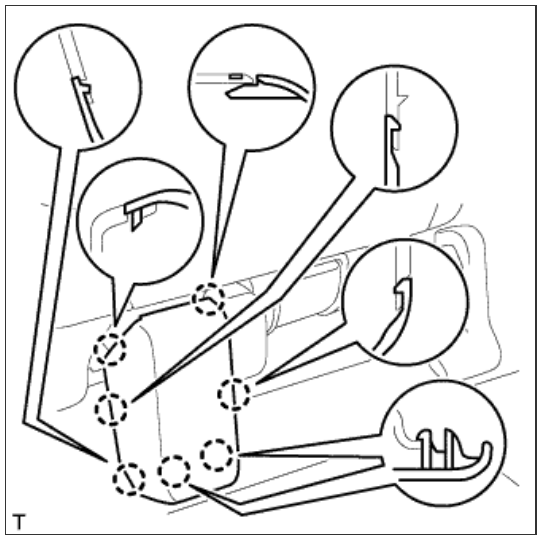

4. REMOVE REAR NO. 1 SEAT CUSHION HINGE COVER


a. Operate the reclining ad uster release handle to move the seat into the position shown in the illustration.

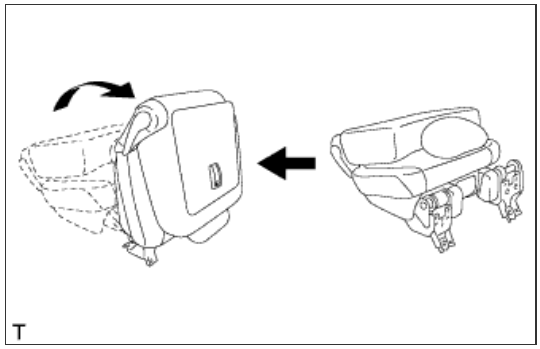

b. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:

Tape the screwdriver tip before use.

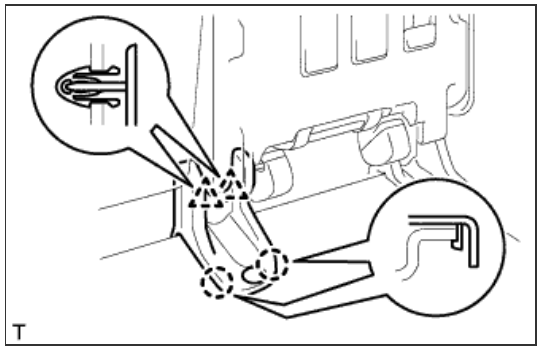


5. REMOVE REAR NO. 3 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:


Tape the screwdriver tip before use.

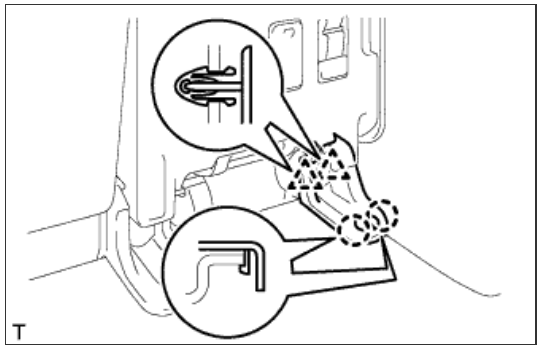

6. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. w/ Rear Seat Side Airbag:
Disconnect the connector.


b. w/ Seat Heater System:
Disconnect the connector.

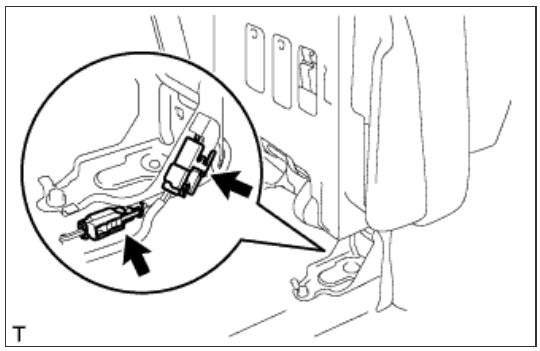

c. Remove the 4 bolts and seat assembly.

NOTICE:

Be careful not to damage the vehicle body.

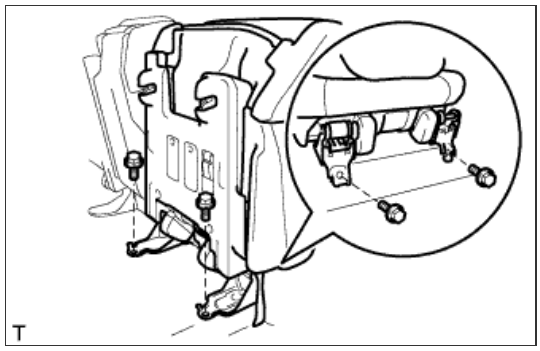


7. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. Remove the rear o. 1 seat assembly (Click here).


8. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

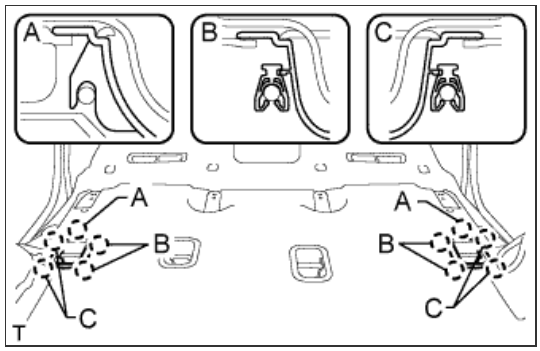

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

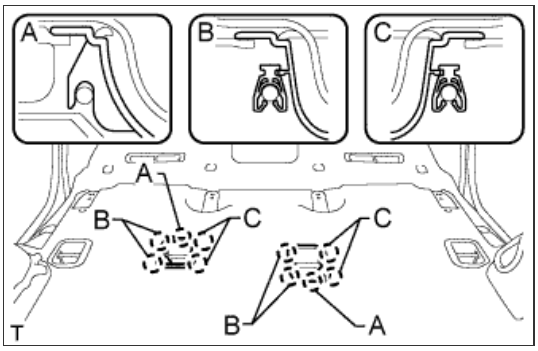


10. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

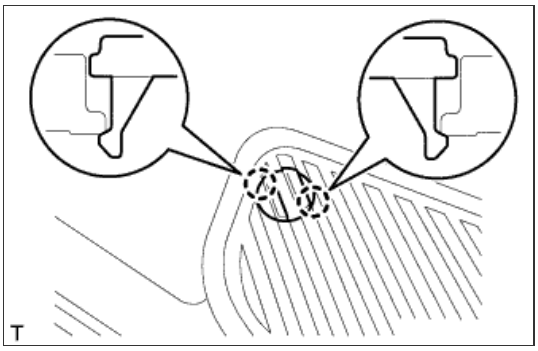

11. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

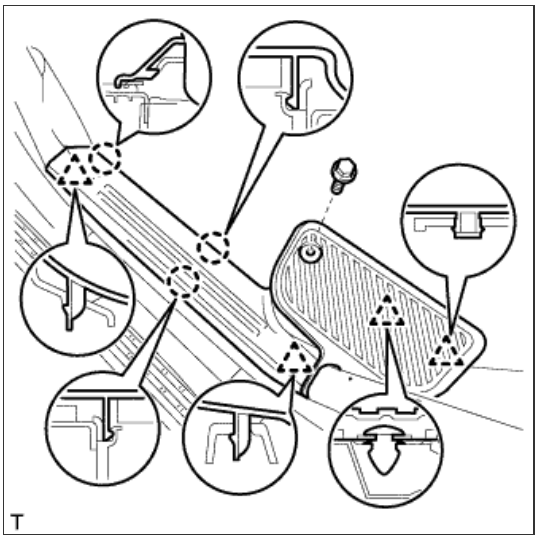

12. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the side.


13. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. for Face to Face Seat Type:
Remove the rear o. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear o. 2 seat assembly (Click here).

14. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

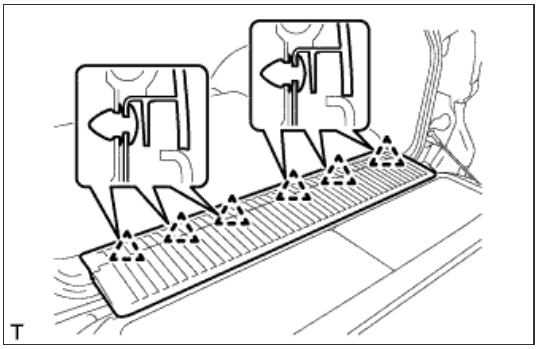

15. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

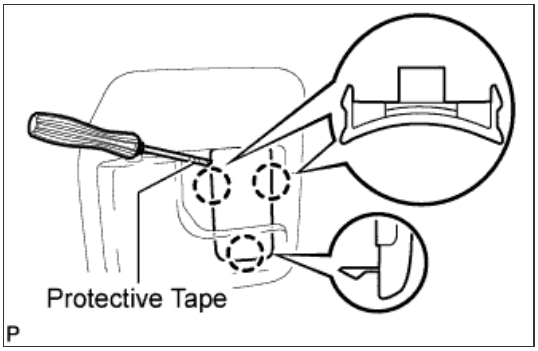

16. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly (Click here).

b. w/o Sliding Roof:
Remove the front uarter trim panel assembly (Click here).

17. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).

18. REMOVE AIR DUCT PLUG (w/ Rear Air Conditioning System)

a. Detach the 2 claws and remove the plug.

HINT:

Use the same procedures for both sides.

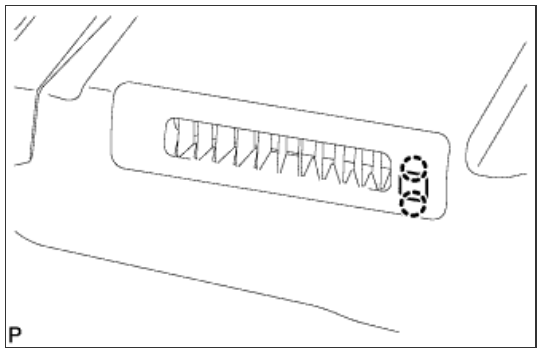


19. REMOVE REAR AIR DUCT GUIDE (w/ Rear Air Conditioning System)

a. Remove the screw.

b. Detach the claw and remove the guide.

HINT:

Use the same procedures for both sides.

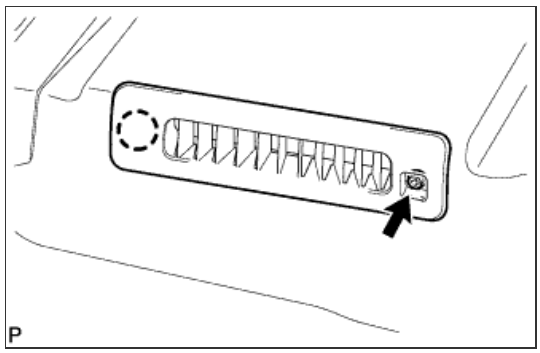


20. REMOVE FRONT FLOOR CARPET ASSEMBLY

a. Fold back the floor carpet.

HINT:


Fold back the carpet until it is possible to remove the rear o. 6 air duct.

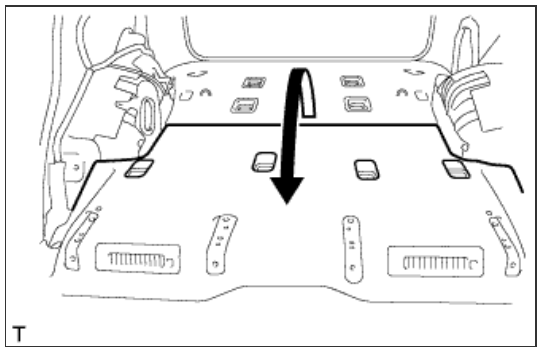

21. REMOVE REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)


a. Disconnect the 2 connectors.

b. Remove the 5 screws and duct.

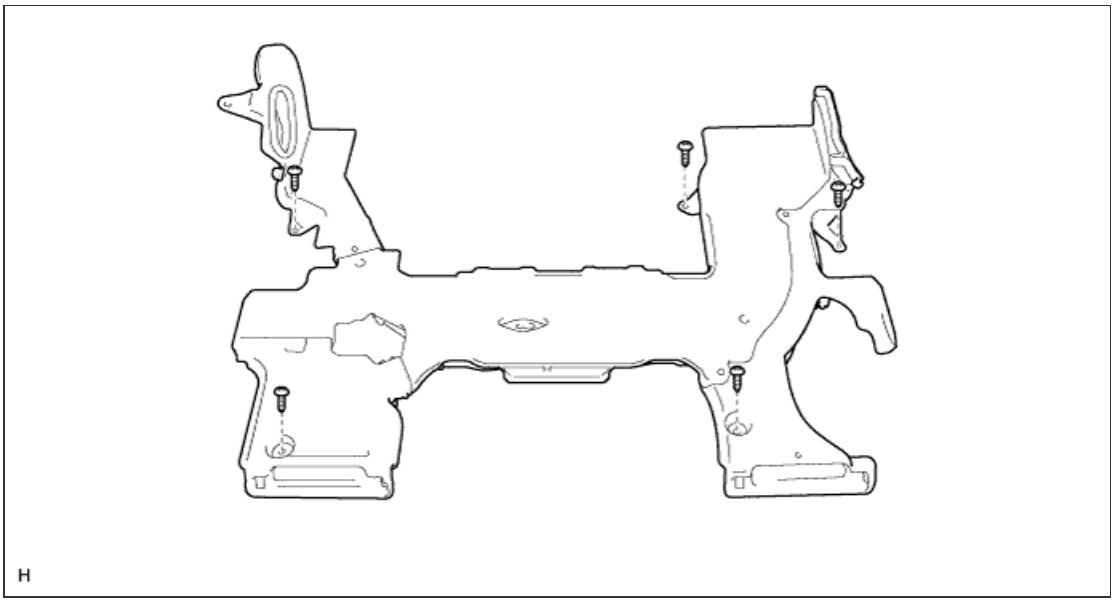

22. REMOVE REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

a. Remove the 10 bolts and 4 lock strikers.

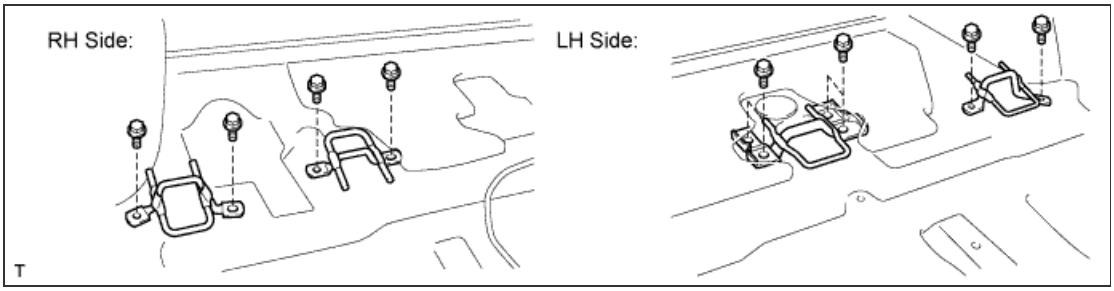

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:


- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

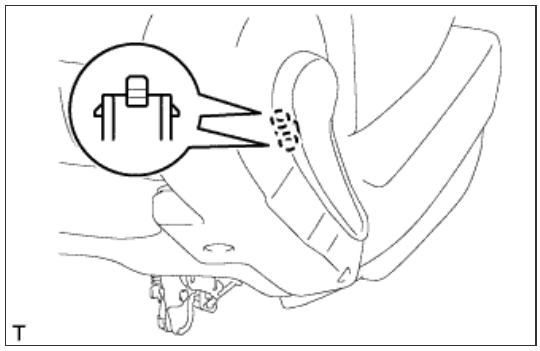

2. REMOVE RECLINING ADJUSTER RELEASE HANDLE RH


a. Remove the screw and release handle.

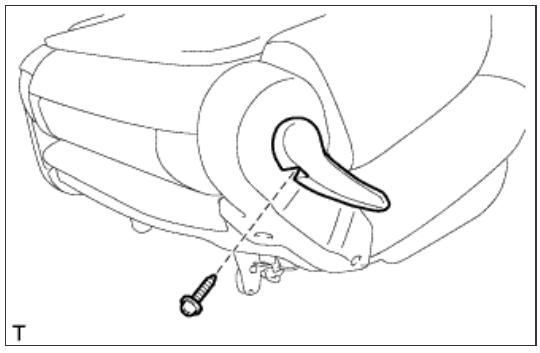

3. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.


b. Detach the claws in the order shown in the illustration, and then remove the cover.

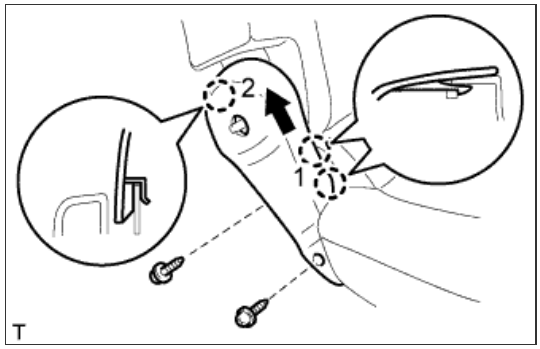

4. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

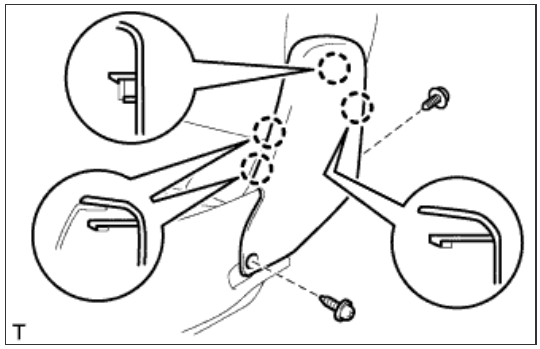


5. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

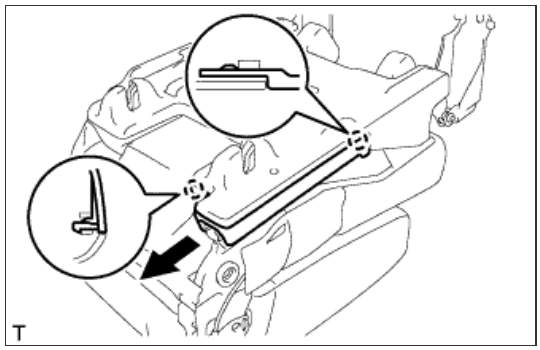


6. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

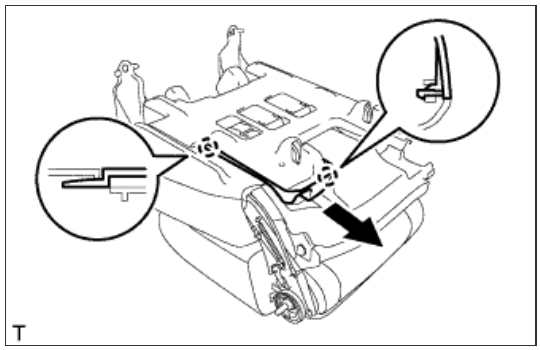


7. REMOVE NO. 1 SEAT CUSHION COVER

a. Detach the 4 claws and remove the 2 covers.

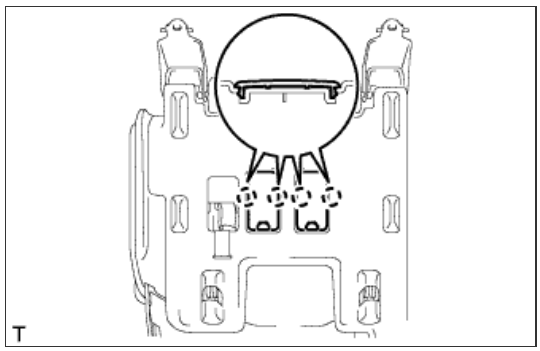


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the claws.

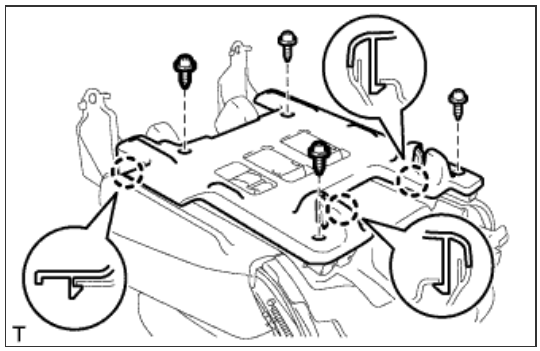

b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

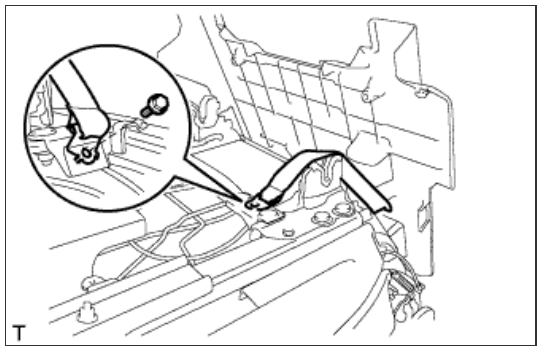

9. REMOVE FOLD SEAT STOPPER BAND ASSEMBLY


a. Remove the fold seat stopper band from the seat leg side cover.

10. REMOVE REAR SEAT SIDE HINGE FEMALE COVER

a. Using a screwdriver, detach the 6 claws and remove the 2 covers.


HINT:

Tape the screwdriver tip before use.

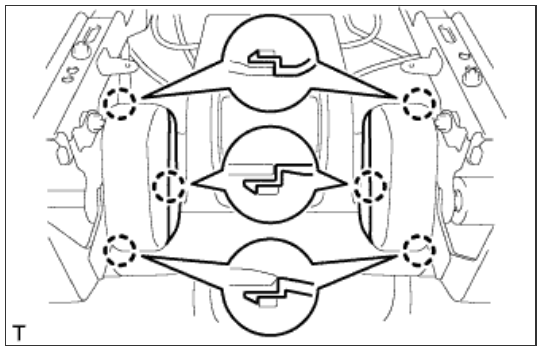

11. REMOVE REAR SEAT SIDE HINGE MALE COVER LH

a. Detach the clip and remove the cover.

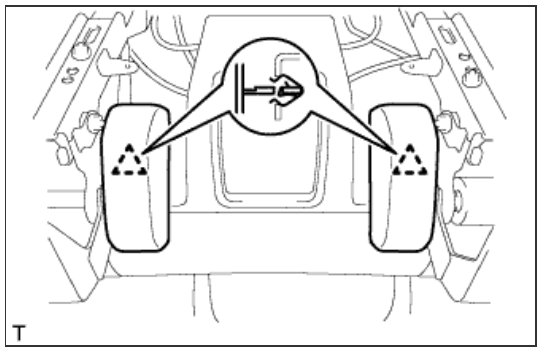


12. REMOVE REAR SEAT SIDE HINGE MALE COVER RH

a. Detach the clip and remove the cover.

13. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

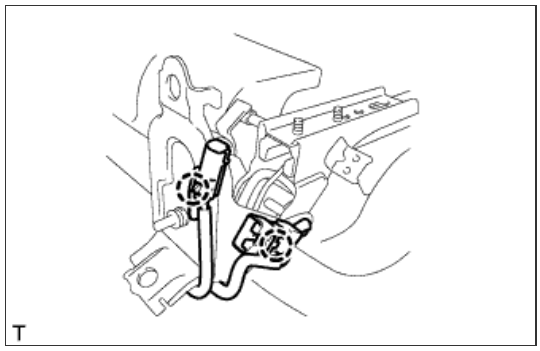

c. Using a clip remover, remove the clip.


d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove the wire harness.

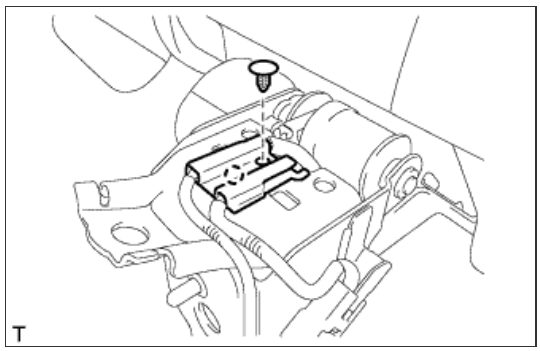

14. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Remove the 2 nuts and hinge.

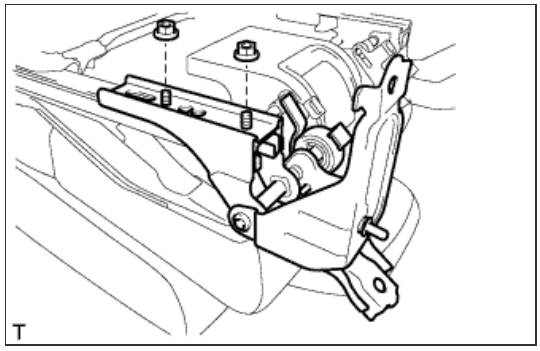


15. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

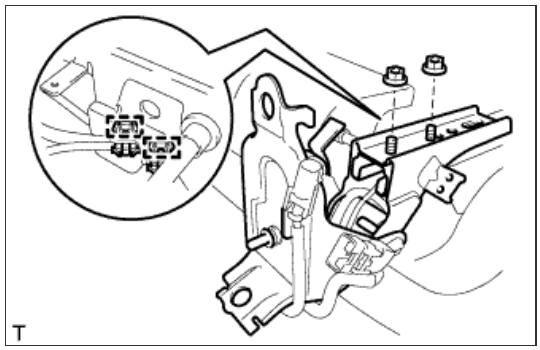


d. Detach the cable clamp and disconnect the cable.

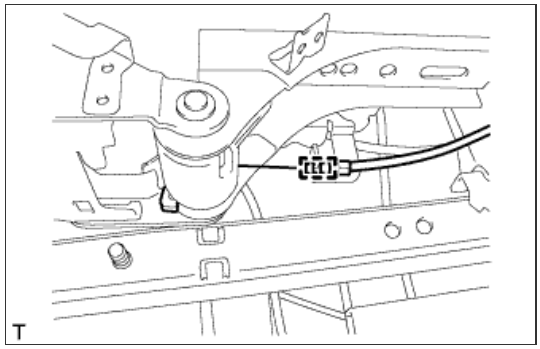


16. REMOVE REAR SEAT COVER

a. Detach the 12 claws.

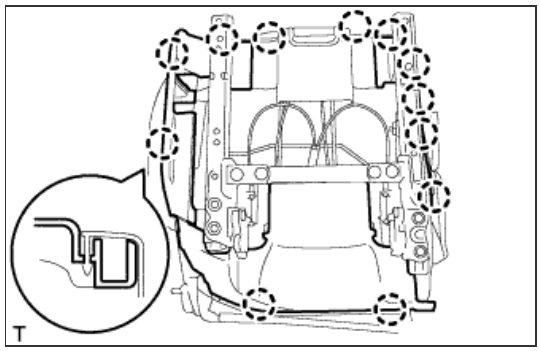

b. Remove the screws.


c. Detach the 2 claws and remove the cover.

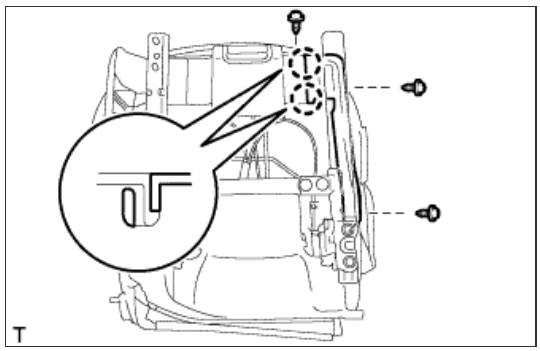

17. REMOVE REAR UNDER SIDE COVER LH


a. Remove the 5 screws.

b. Detach the clip and 2 claws, and remove the cover.

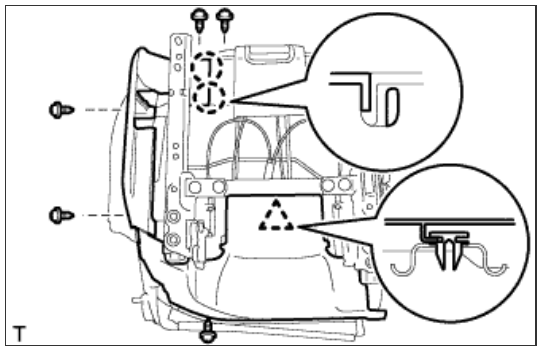

18. REMOVE NO. 1 SEAT CUSHION PLATE


a. Detach the claws and remove the seat cushion plate.

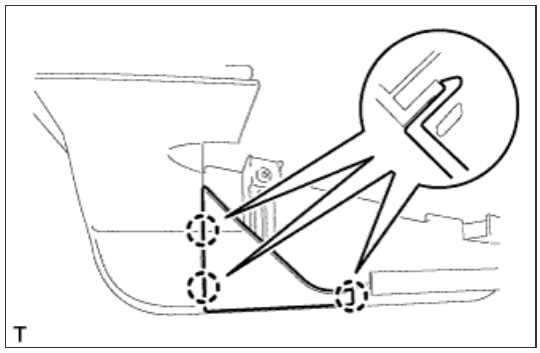

19. REMOVE REAR SEAT UNDER TRAY COVER RH


a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

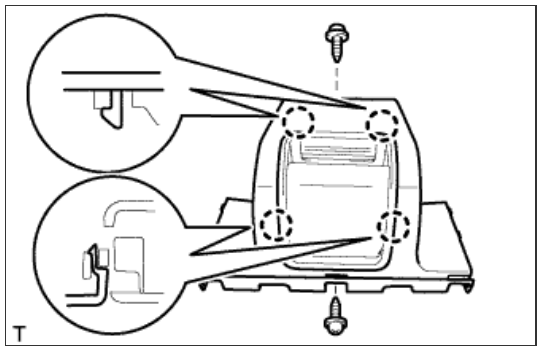


20. REMOVE REAR SEAT TRACK HANDLE SUB-ASSEMBLY


a. Remove the 2 screws and seat track handle.

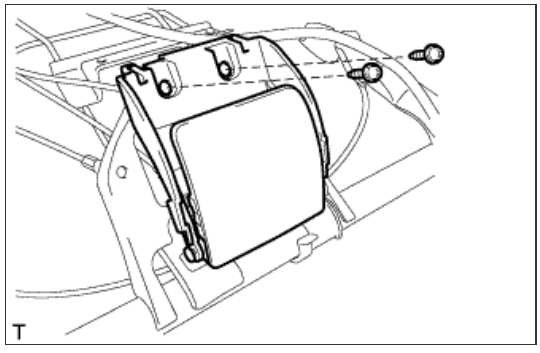

b. Detach the 2 cable clamps and disconnect the 2 cables.

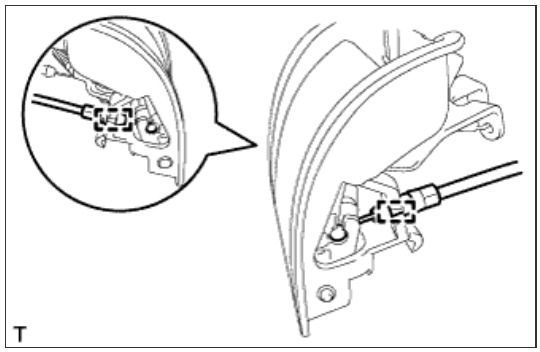

c. Detach the cable clamp and disconnect the cable.

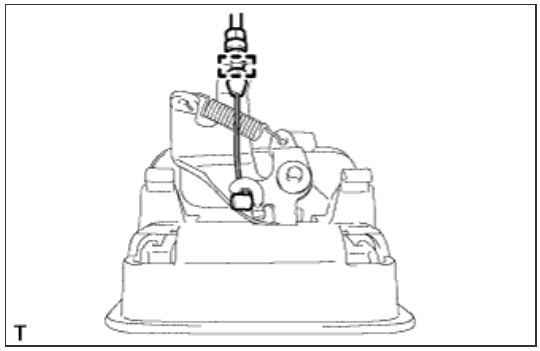

21. REMOVE FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY

22. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.

ii. Remove the side airbag wire harness through the hole in the seat cushion.


b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

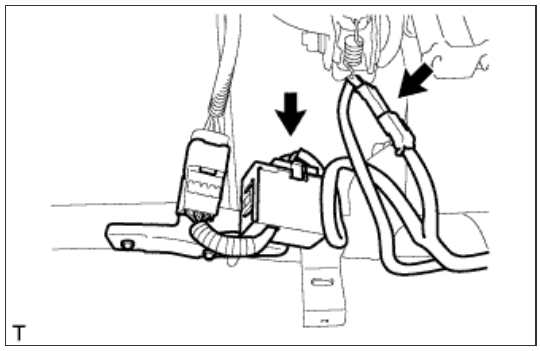


ii. Remove the seatback heater wire harness through the hole in the seat cushion.

c. Remove the seat cushion cover with pad.

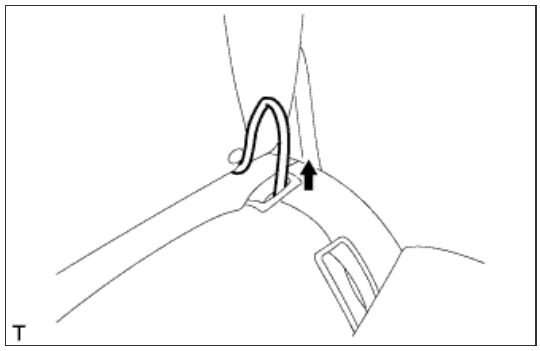


23. REMOVE REAR SEPARATE TYPE SEAT CUSHION COVER

a. Detach the pieces of fastening tape.

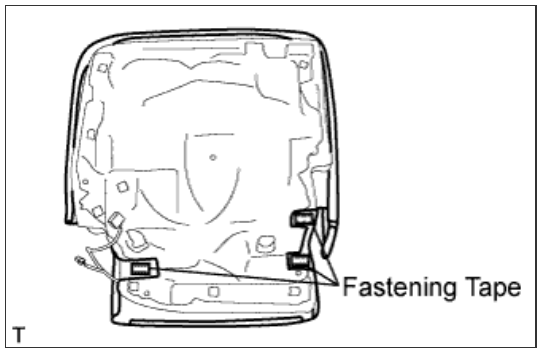


b. Remove the hog rings and cover.

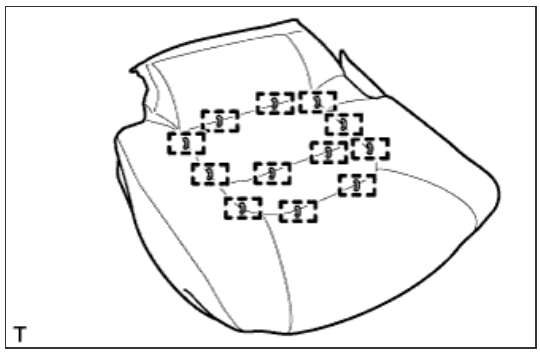

24. REMOVE REAR SEAT CUSHION HEATER ASSEMBLY (w/ Seat Heater System)

a. Cut off the tack pins which fasten the seat heater to the seat cushion cover, and then remove the seat cushion heater from the seat cushion cover.

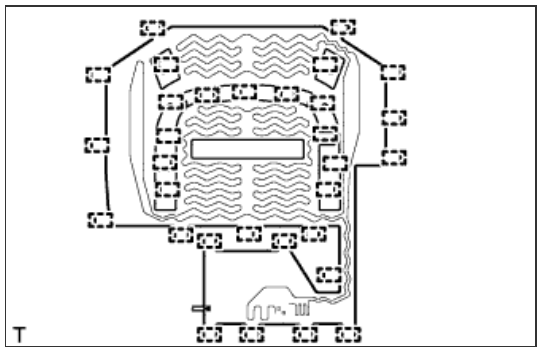


25. REMOVE REAR SEATBACK COVER

a. Using a screwdriver, detach the 4 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

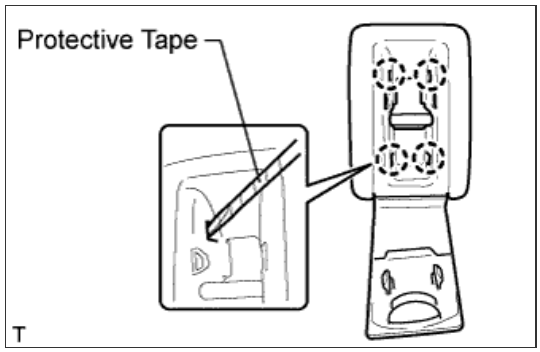

26. REMOVE REAR SEATBACK BOARD SUB-ASSEMBLY RH

a. Detach the 2 claws on the top of the board.


b. Pull up the board to detach the 2 claws on the bottom of the board and remove it.

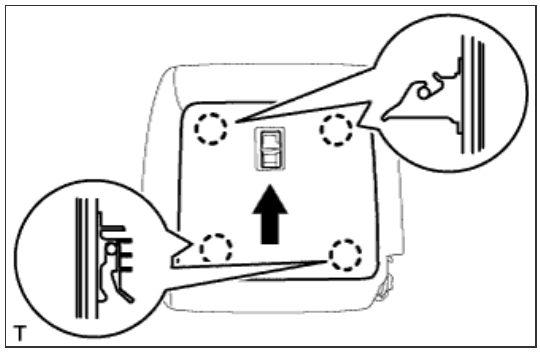

27. REMOVE REAR SEAT HEADREST ASSEMBLY


28. REMOVE REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. Detach the 4 claws and remove the 2 supports.

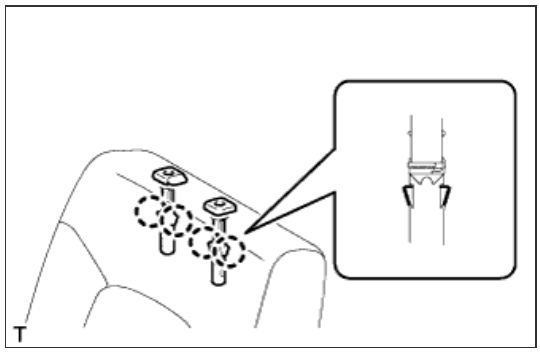

29. REMOVE SEATBACK COVER WITH PAD


a. Remove the hog rings.

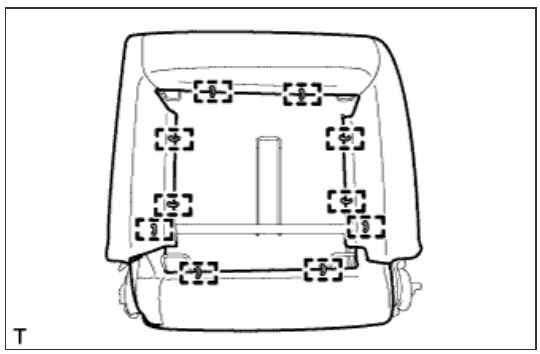

b. w/ Rear Seat Side Airbag:


i. Remove the cap nut and seatback cover bracket from the seat frame.

ii. Remove the side airbag wire harness through the hole in the seatback.

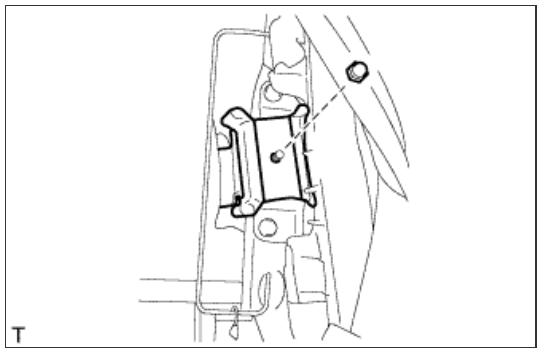


c. w/ Seat Heater System:

i. Cut the cable tie and disconnect the seatback heater wire harness.

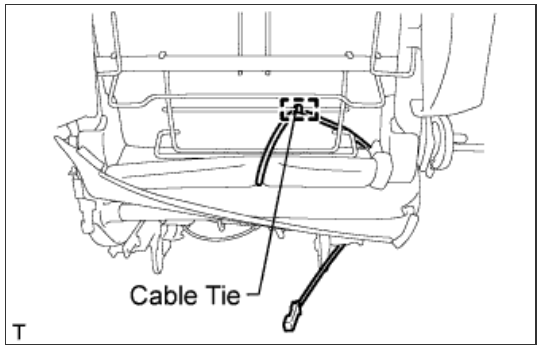


ii. Remove the seatback heater wire harness through the hole in the seatback.

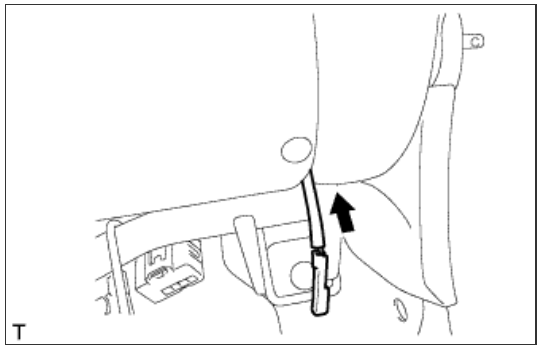


d. Remove the seatback cover with pad.

30. REMOVE REAR SEPARATE TYPE SEATBACK COVER

a. w/ Rear Seat Side Airbag:
Disconnect the seatback cover bracket from the seatback pad.

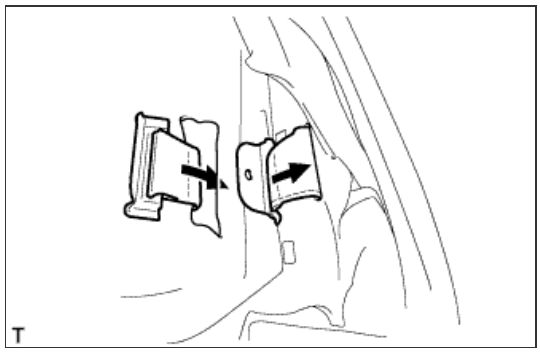


b. Remove the hog rings and rear seatback cover.

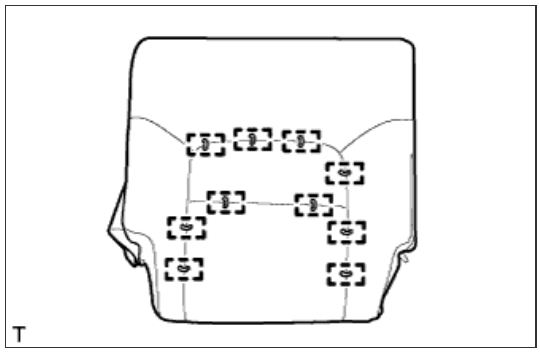

31. REMOVE REAR SEATBACK HEATER ASSEMBLY (w/ Seat Heater System)


a. Cut off the tack pins which fasten the seatback heater to the seatback cover, and then remove the seatback heater from the seatback cover.

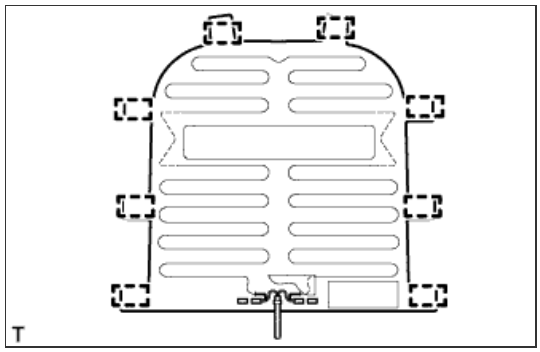

32. REMOVE REAR SEAT RECLINING COVER LH

a. Remove the screw.

b. Detach the claw and remove the cover.

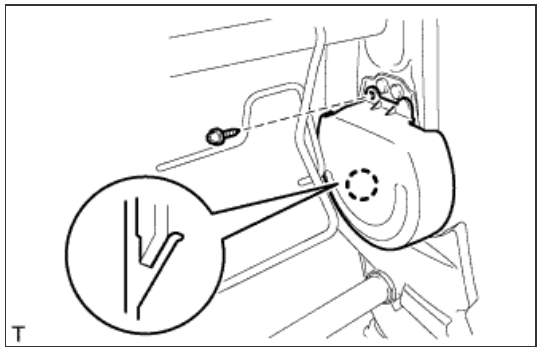

33. REMOVE REAR SEAT RECLINING COVER RH


a. Remove the screw.

b. Detach the claw and remove the cover.

34. REMOVE REAR NO. 2 SEAT RECLINING COVER LH

a. Remove the screw.


b. Detach the clamp and remove the cover.

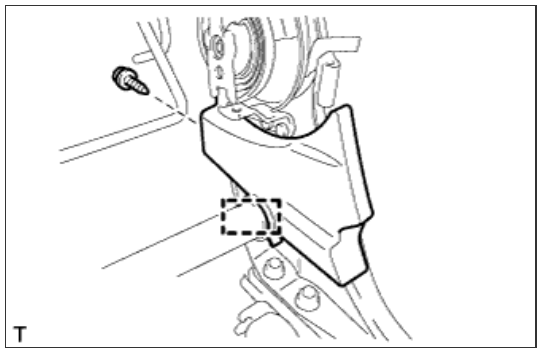

35. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the screw.


b. Detach the claw and remove the cover.

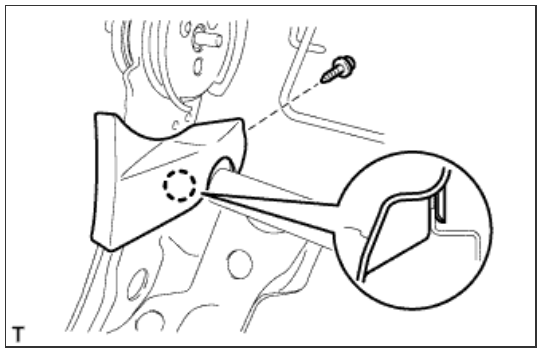

36. REMOVE RECLINING ADJUSTING CABLE ASSEMBLY RH

a. Detach the 2 cable clamps and disconnect the cable.


b. Detach the clamp and remove the adjusting cable.

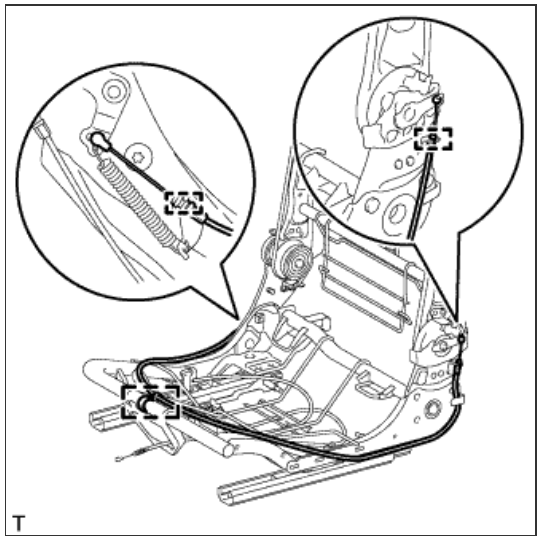

37. REMOVE NO. 1 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Detach the 2 cable clamps and disconnect the cable.


b. Detach the clamp and remove the lock control cable.

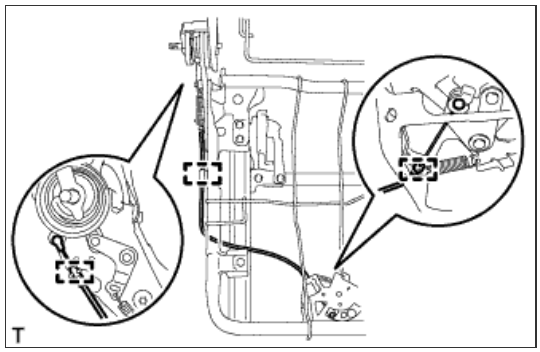

38. REMOVE REAR SEATBACK FRAME SUB-ASSEMBLY RH

a. Using a T40 "TORX" socket, remove the 4 bolts.


b. Remove the seatback frame.

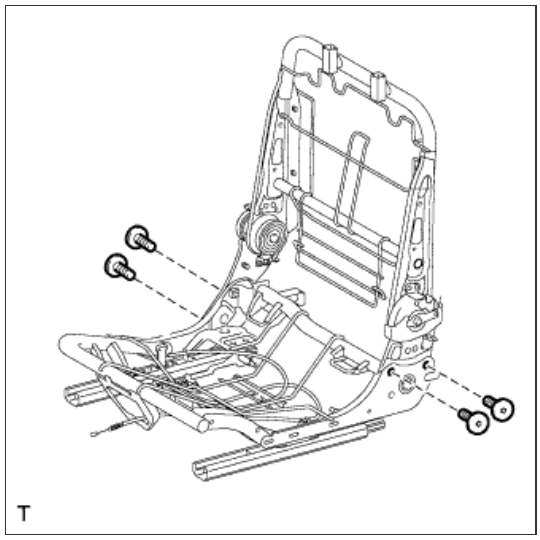

39. REMOVE FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY


a. Detach the 2 cable clamps and disconnect the 2 cables.

b. Remove the 2 fold seat lock control cables.

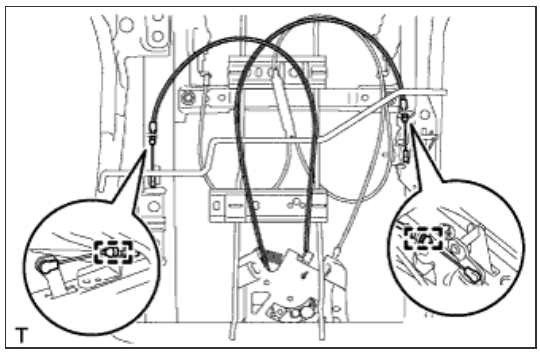


40. REMOVE REAR NO. 1 SEAT LOCK CABLE ASSEMBLY

a. Remove the 2 nuts and lower seat track bracket.

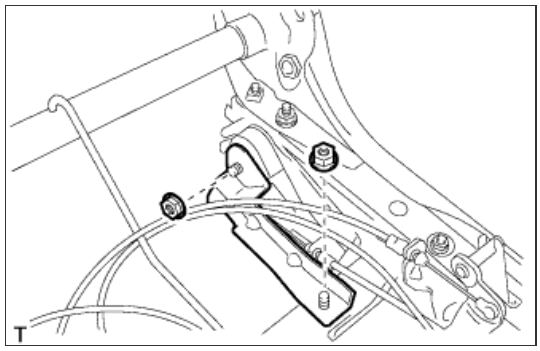


b. Remove the 2 nuts and lower seat track bracket.

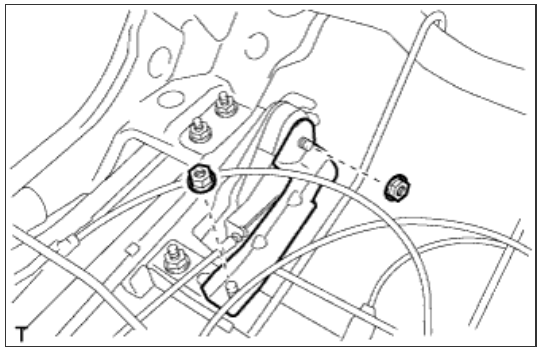

c. Detach the cable clamps and disconnect the cables.


d. Detach the clamp and remove the seat lock cable.

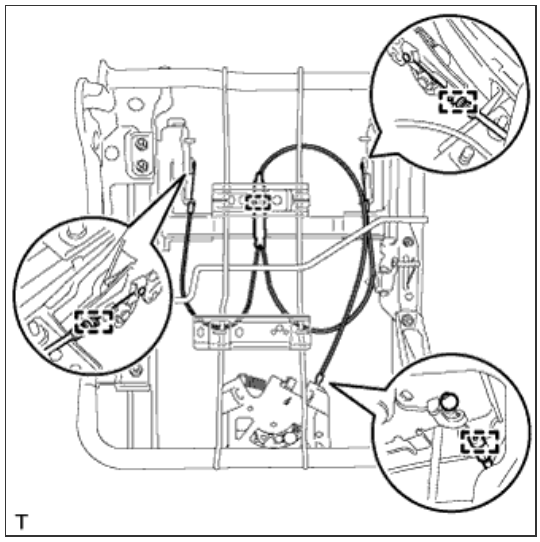

41. REMOVE REAR SEAT CUSHION HOLDER BRACKET RH (w/ Seat Heater System)


a. Disconnect the seat wire connector.

b. Remove the 2 screws and holder bracket.

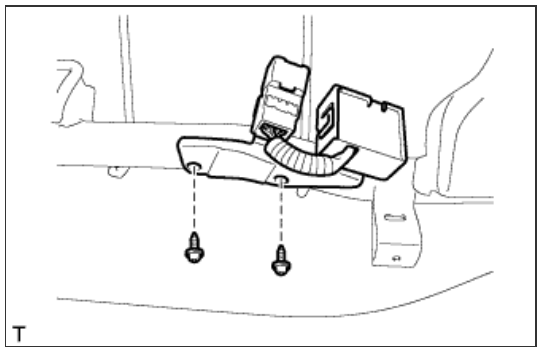


42. REMOVE SEAT HEATER CONTROL SUB-ASSEMBLY RH (w/ Seat Heater System)

a. Detach the 2 claws and remove the seat heater control.

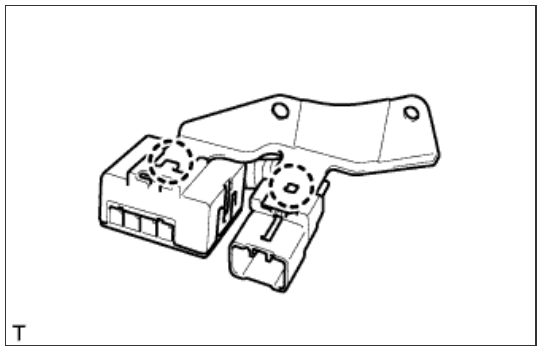

43. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY RH


a. Remove the bolt and belt.

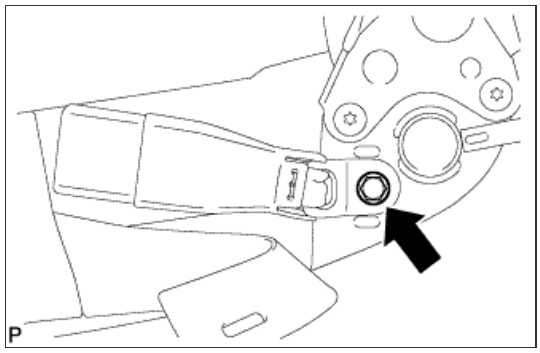

44. REMOVE REAR SEAT CUSHION FRAME SUB-ASSEMBLY RH


a. Using a T40 "TORX" socket, remove the bolt.

b. Remove the 5 nuts and seat cushion frame.

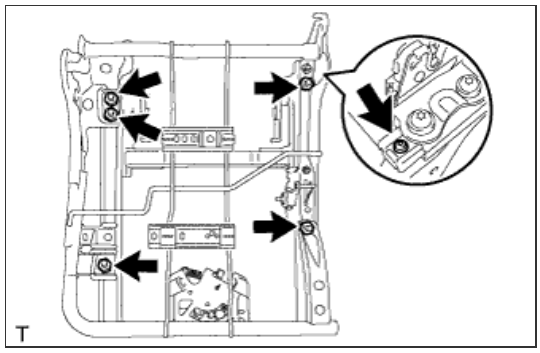

45. REMOVE REAR NO. 1 SEAT LOCK CONTROL LEVER

a. Remove the bolt and lock control lever.

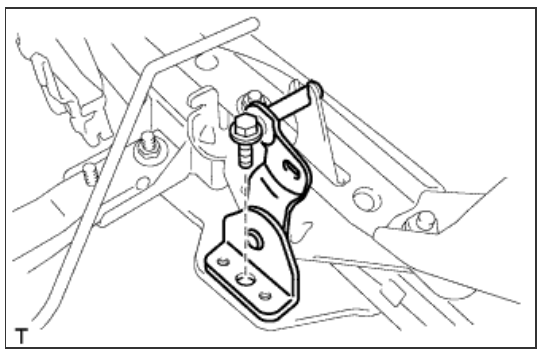

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR NO. 1 SEAT LOCK CONTROL LEVER

a. Install the lock control lever with the bolt.

Torque:
13 N*m{ 133 kgf*cm , 10 ft.*lbf }

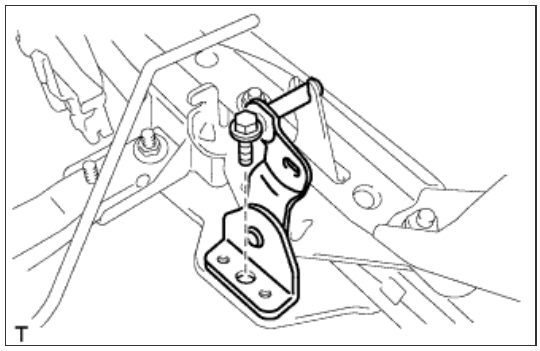

2. INSTALL REAR SEAT CUSHION FRAME SUB-ASSEMBLY RH


a. Temporarily install the seat cushion frame with the 5 nuts and bolt.

b. Tighten the 5 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. Using a T40 "T socket, tighten the bolt.

Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

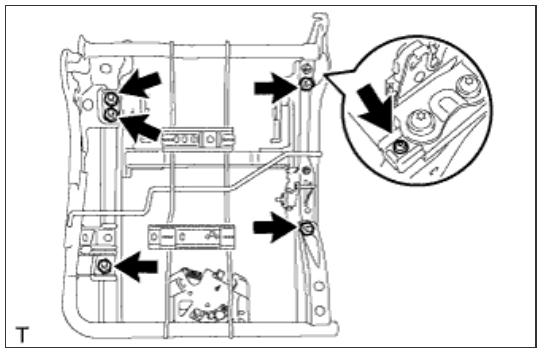


3. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY RH

a. Install the belt with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }


NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

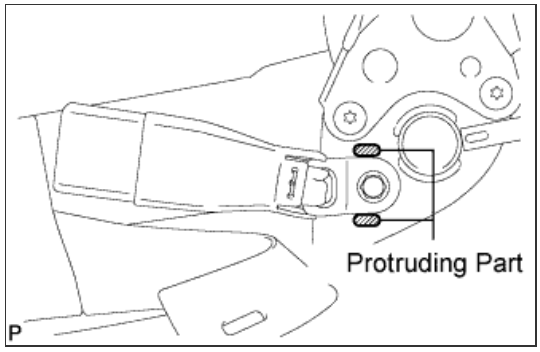

4. INSTALL SEAT HEATER CONTROL SUB-ASSEMBLY RH (w/ Seat Heater System)


a. Attach the 2 claws to install the seat heater control.

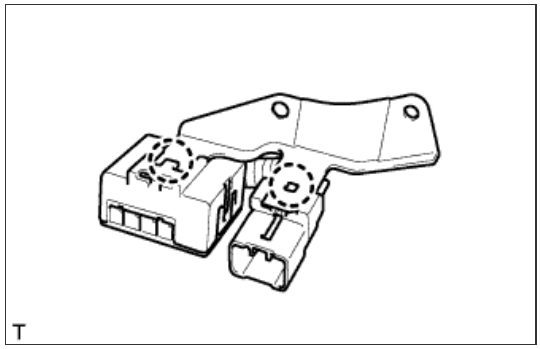

5. INSTALL REAR SEAT CUSHION HOLDER BRACKET RH (w/ Seat Heater System)

a. Install the holder bracket with the 2 screws.


b. Connect the seat wire connector.

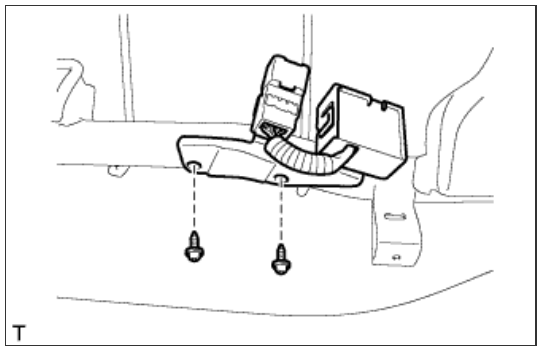

6. INSTALL REAR NO. 1 SEAT LOCK CABLE ASSEMBLY


a. Attach the clamp to install the seat lock cable.

b. Attach the 3 cable clamps to connect the 3 cables.

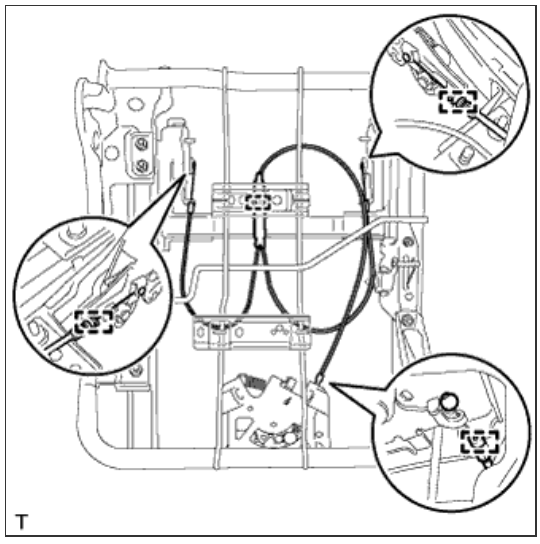


c. Install the lower seat track bracket with the 2 nuts.

Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

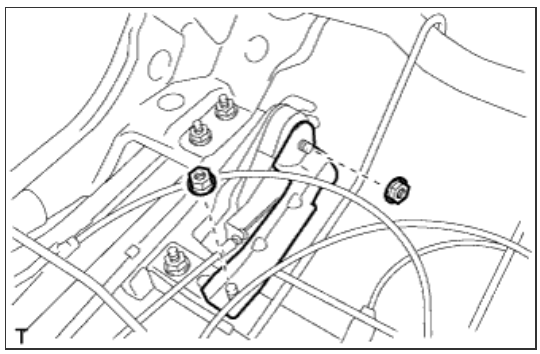

d. Install the lower seat track bracket with the 2 nuts.


Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

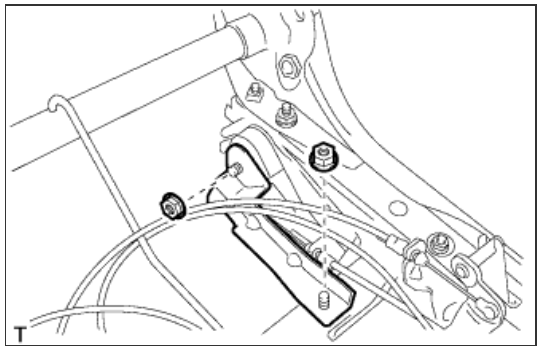

7. INSTALL FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY

a. Install the 2 fold seat lock control cables.

b. Attach the 2 cable clamps to connect the 2 cables.

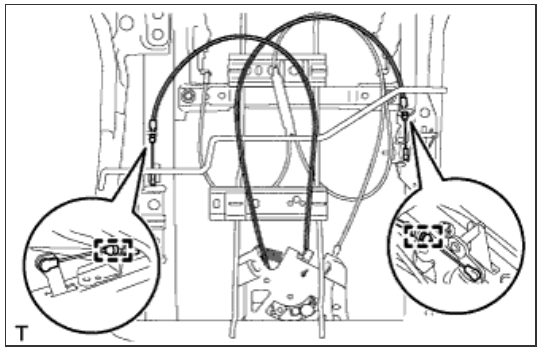


8. INSTALL REAR SEATBACK FRAME SUB-ASSEMBLY RH

a. Temporarily install the seatback frame with the 4 bolts.

b. Using a T40 "T socket, tighten the 4 bolts.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

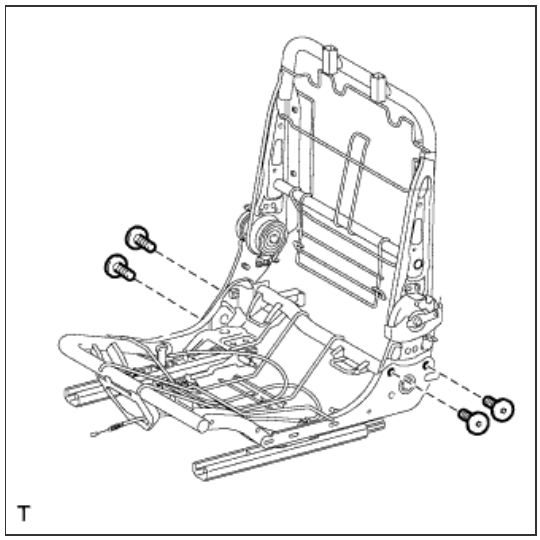

9. INSTALL NO. 1 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Attach the clamp to install the lock control cable.


b. Attach the 2 cable clamps to connect the cable.

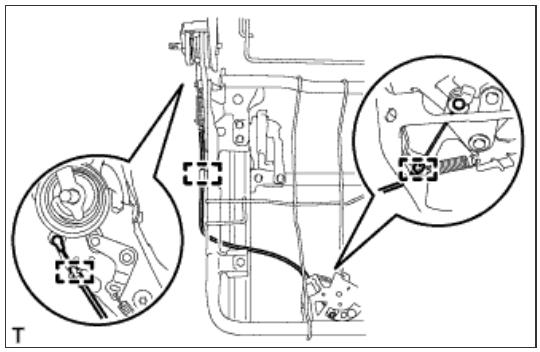

10. INSTALL RECLINING ADJUSTING CABLE ASSEMBLY RH

a. Attach the clamp to install the adjusting cable.


b. Attach the 2 cable clamps to connect the cable.

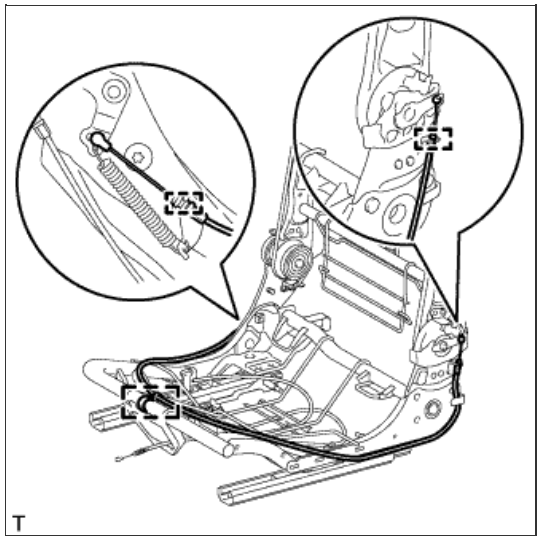

11. INSTALL REAR NO. 1 SEAT RECLINING COVER RH

a. Attach the claw to install the cover.


b. Install the screw.

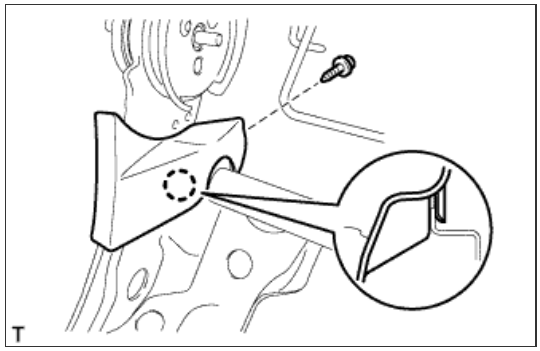

12. INSTALL REAR NO. 2 SEAT RECLINING COVER LH

a. Attach the clamp to install the cover.


b. Install the screw.

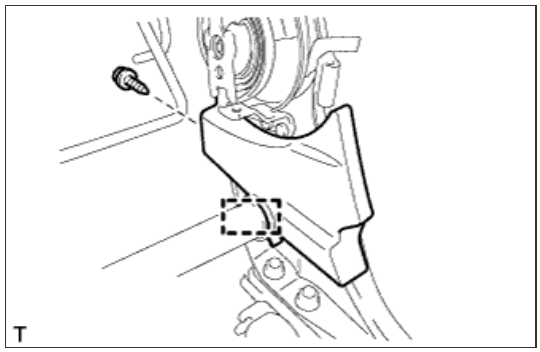

13. INSTALL REAR SEAT RECLINING COVER RH

a. Attach the claw to install the cover.

b. Install the screw.

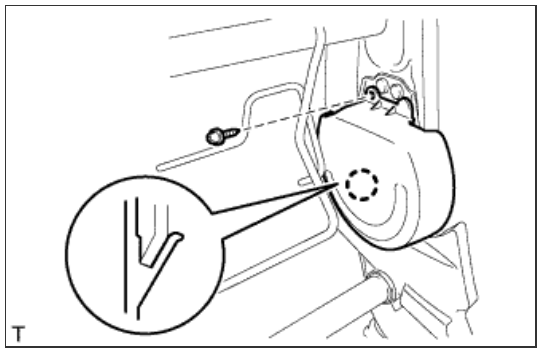

14. INSTALL REAR SEAT RECLINING COVER LH


a. Attach the claw to install the cover.

b. Install the screw.

15. INSTALL REAR SEATBACK HEATER ASSEMBLY (w/ Seat Heater System)

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

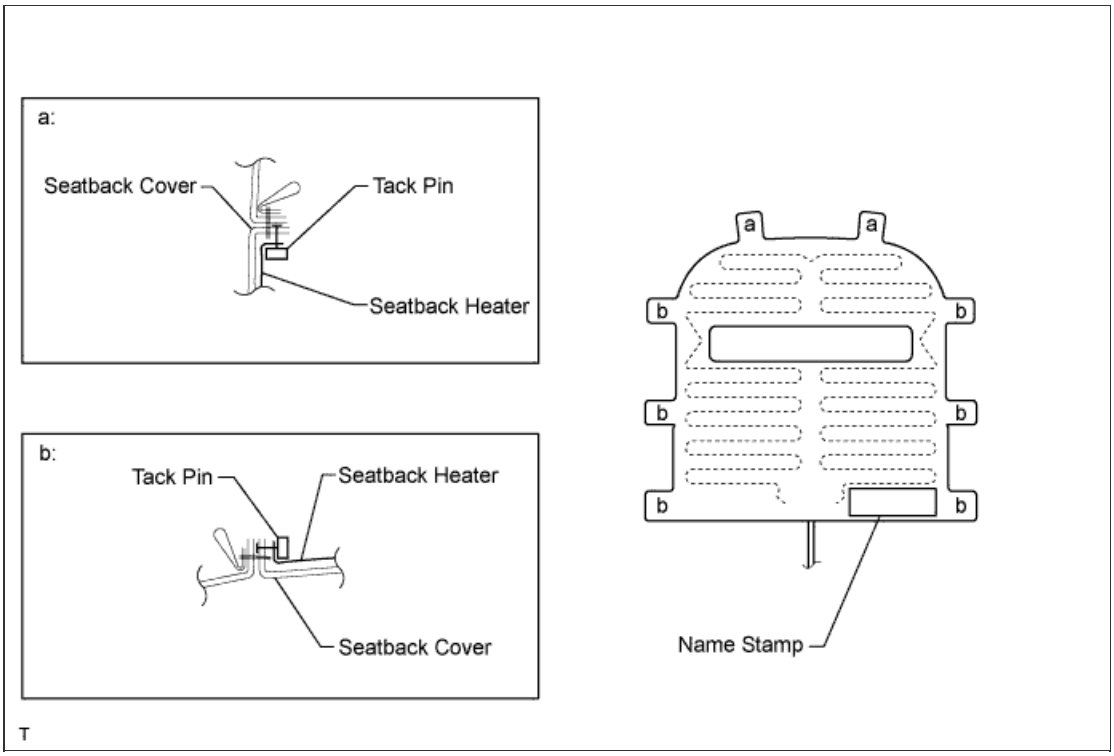


16. INSTALL REAR SEPARATE TYPE SEATBACK COVER

a. Using hog ring pliers, install the seatback cover with new hog rings.


NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

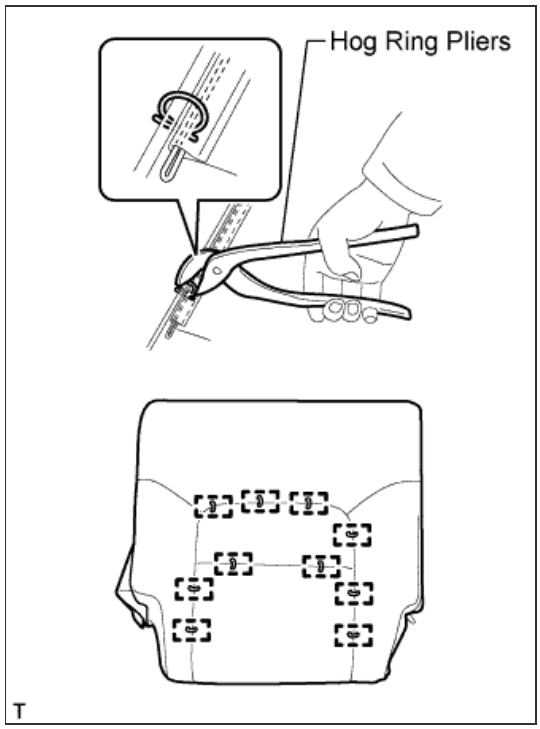

b. w/ ear Seat Side Airbag

onnect the seatback cover bracket to the seatback pad.

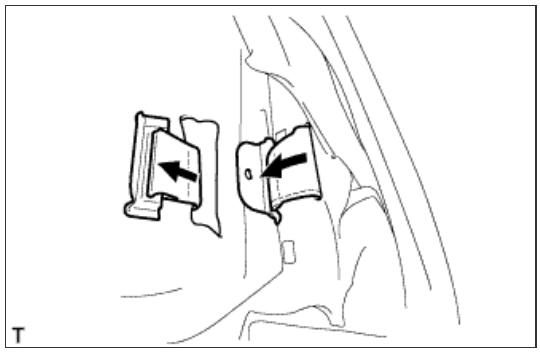


17. INSTALL SEATBACK COVER WITH PAD

a. Install the seatback cover with pad.


b. w/ ear Seat Side Airbag
as the side airbag wire harness through the hole in the seatback.

c. w/ Seat Heater System

i. as the seatback heater wire harness through the hole in the seatback.

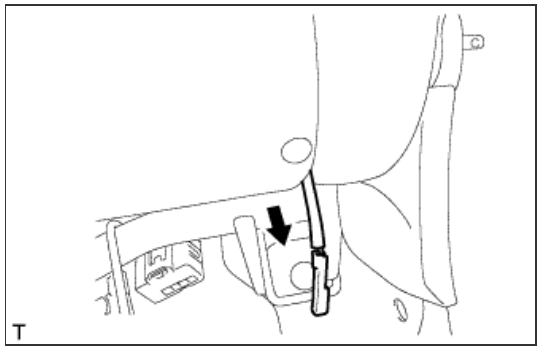

ii. Connect the seatback heater wire harness and install a new cable tie.

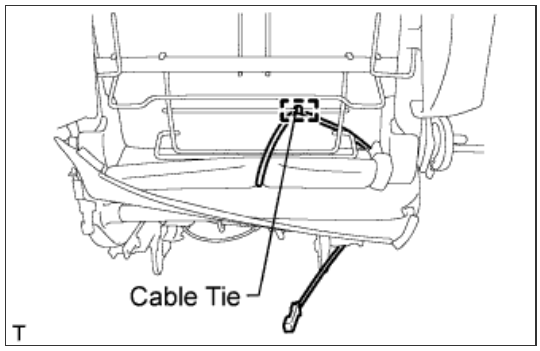


d. w/ ear Seat Side Airbag
Install the seatback cover bracket to the seat frame with the cap nut.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

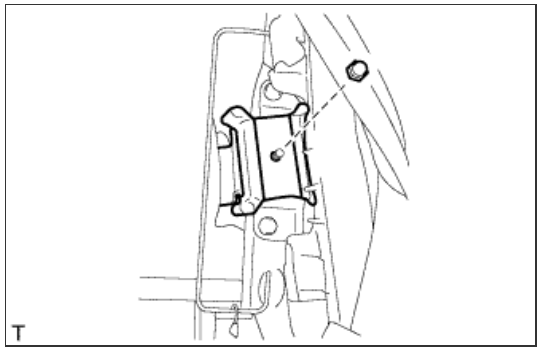


e. Using hog ring pliers, install new hog rings to the seatback frame.

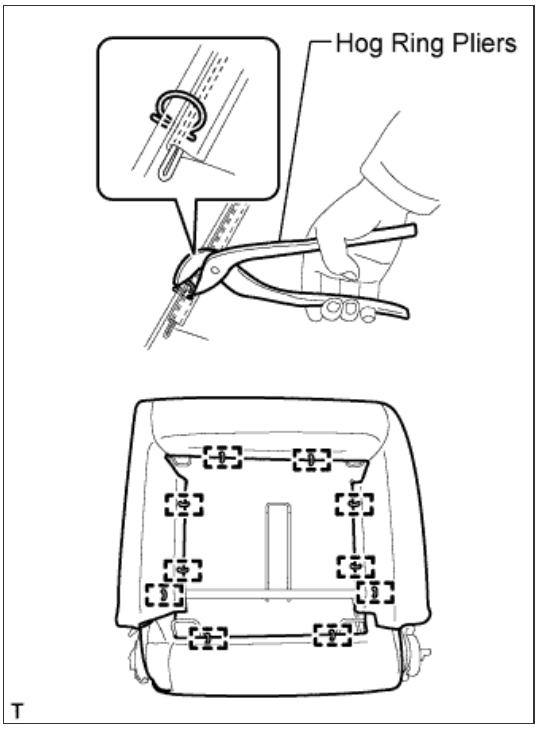

18. INSTALL REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. Attach the 4 claws to install the 2 supports.

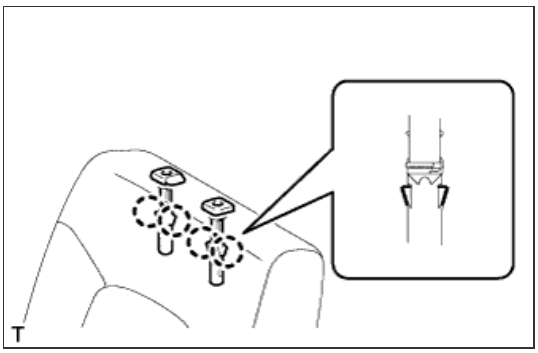


19. INSTALL REAR SEAT HEADREST ASSEMBLY

20. INSTALL REAR SEATBACK BOARD SUB-ASSEMBLY RH


a. Push the board down to attach the 2 claws on the bottom.

b. Attach the 2 claws on the top of the board to install it.

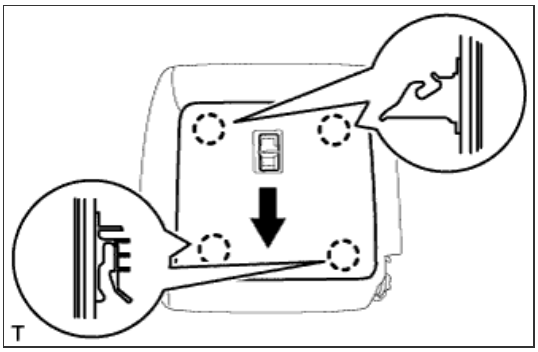

21. INSTALL REAR SEATBACK COVER


a. Attach the 4 claws to install the cover.

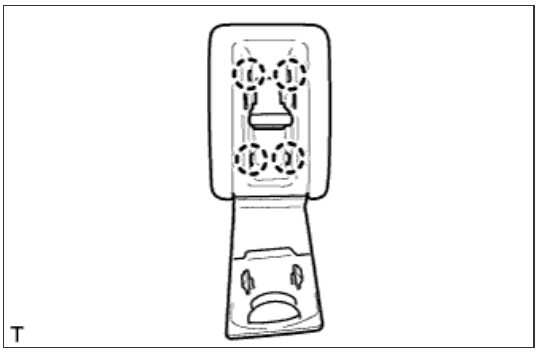

22. INSTALL REAR SEAT CUSHION HEATER ASSEMBLY (w/ Seat Heater System)

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

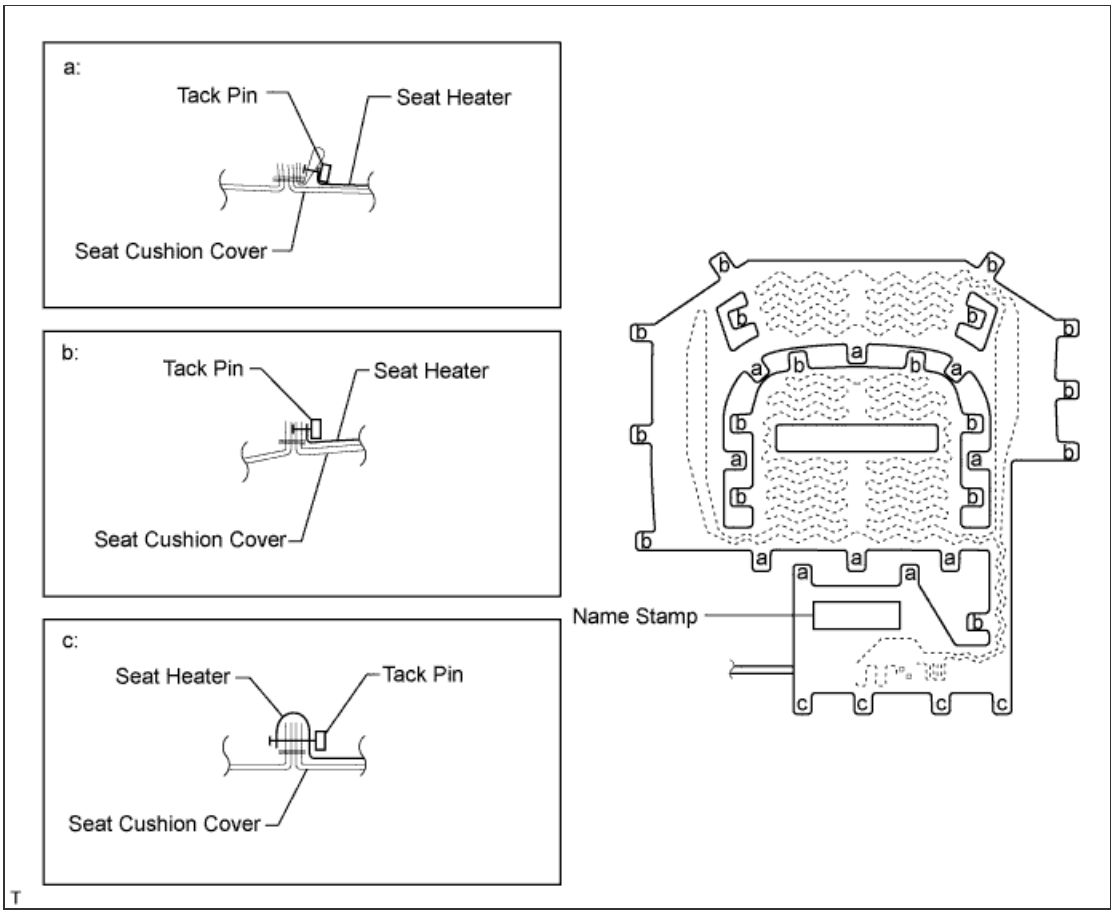


23. INSTALL REAR SEPARATE TYPE SEAT CUSHION COVER


a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

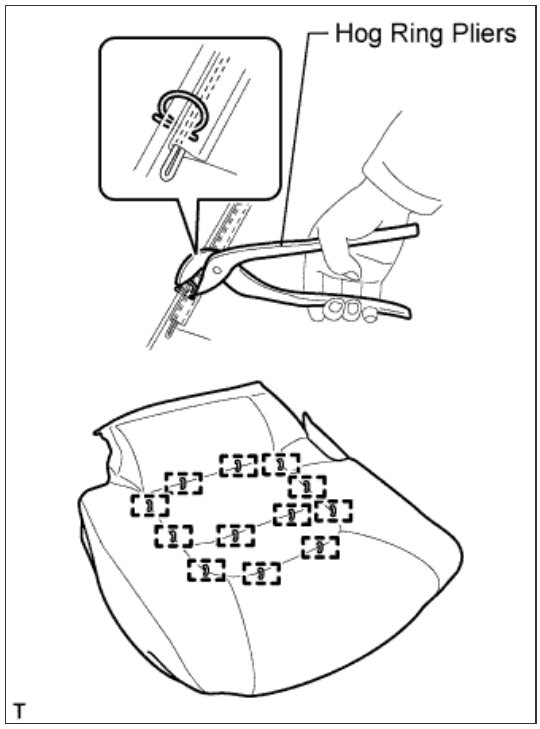

b. Attach the 3 pieces of fastening tape.

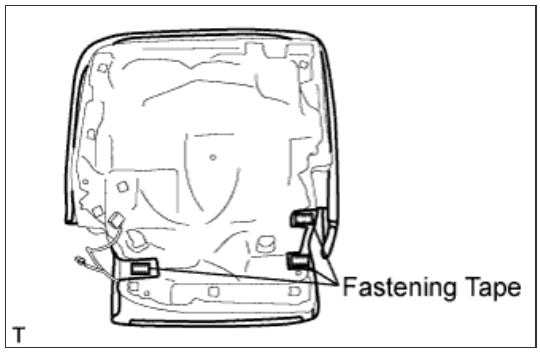


24. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.

b. w/ ear Seat Side Airbag
as the side airbag wire harness through the hole in the seat cushion.


c. w/ Seat Heater System

i. as the seatback heater wire harness through the hole in the seat cushion.

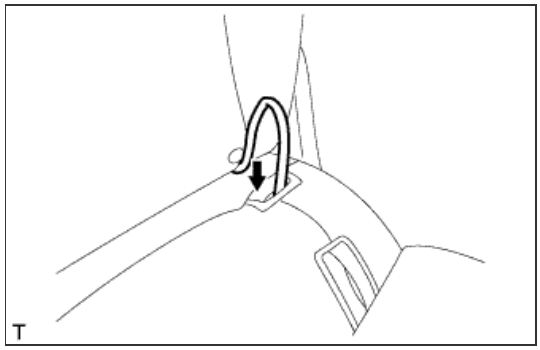

ii. Connect the 2 seat heater connectors.


d. w/ ear Seat Side Airbag
ttah the side airbag wire harness clamps.

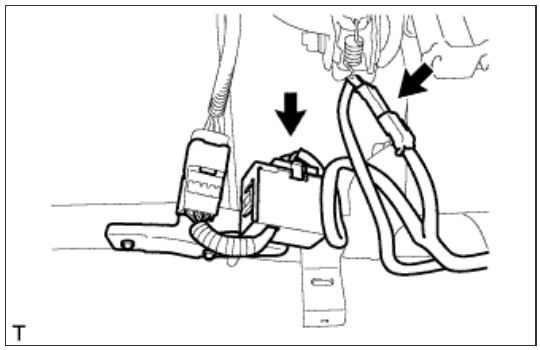


25. INSTALL FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY

26. INSTALL REAR SEAT TRACK HANDLE SUB-ASSEMBLY


a. Attach the cable clamp to connect the cable.

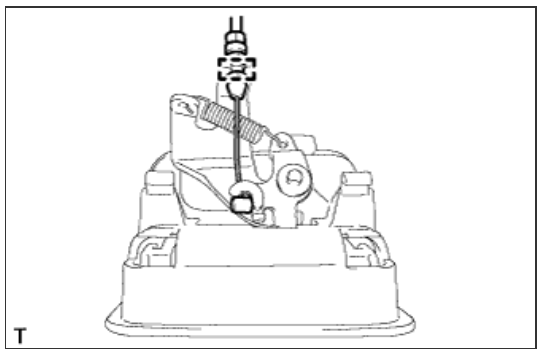

b. Attach the 2 cable clamps to connect the 2 cables.

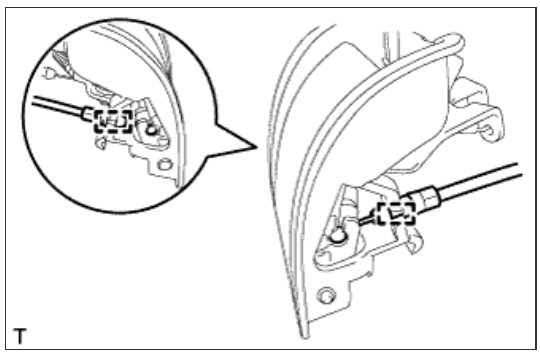


c. Install the seat track handle with the 2 screws.

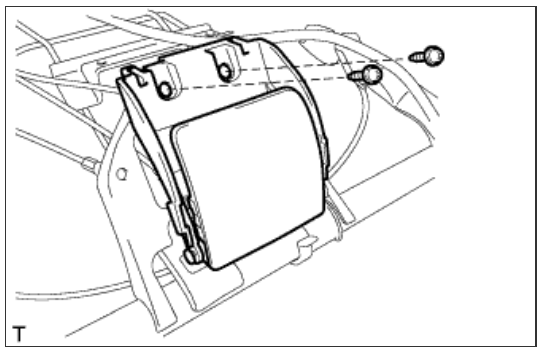

27. INSTALL REAR SEAT UNDER TRAY COVER RH


a. Attach the 4 claws to install the cover.

b. Install the 2 screws.

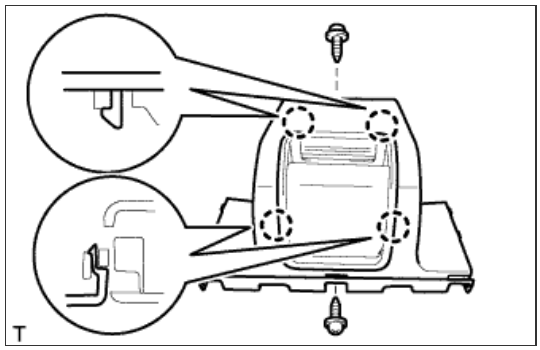

28. INSTALL NO. 1 SEAT CUSHION PLATE


a. Attach the 3 claws to install the seat cushion plate.

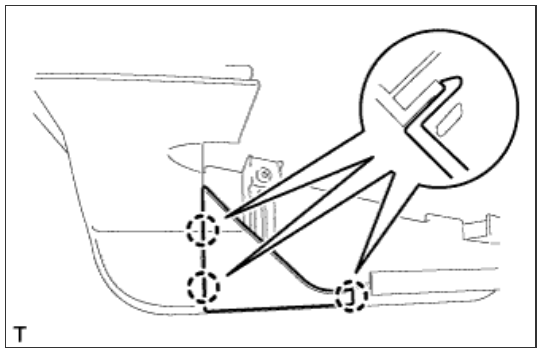

29. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and clip to install the cover.


b. Install the 5 screws.

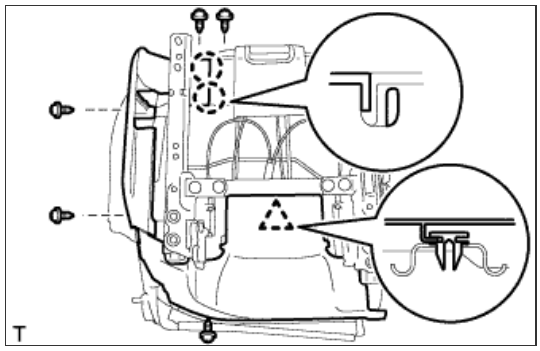


30. INSTALL REAR SEAT COVER

a. Attach the 2 claws to install the cover.

b. Install the 3 screws.

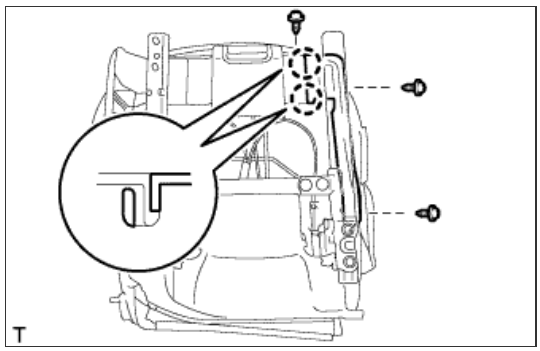


c. Attach the 12 claws.

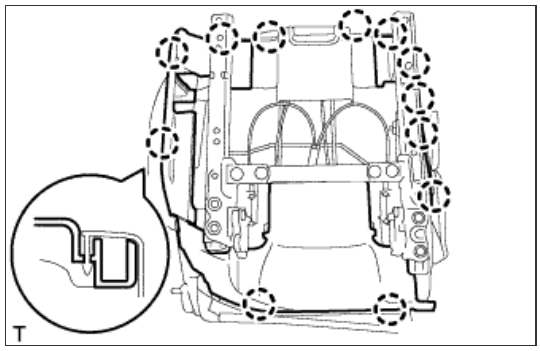

31. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Attach the cable clamp to connect the cable.

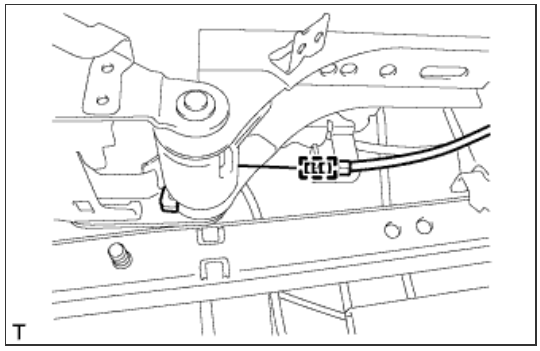


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.


d. w/ Seat Heater System:
Attach the wire harness clamp.

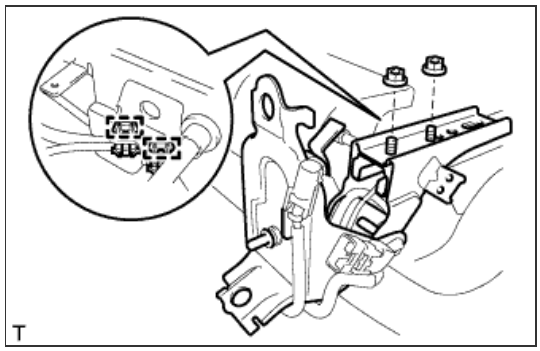

32. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

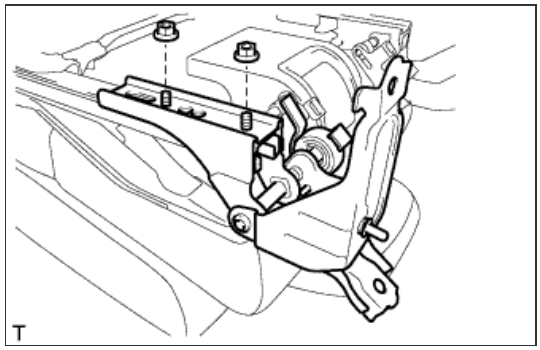


33. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach the 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

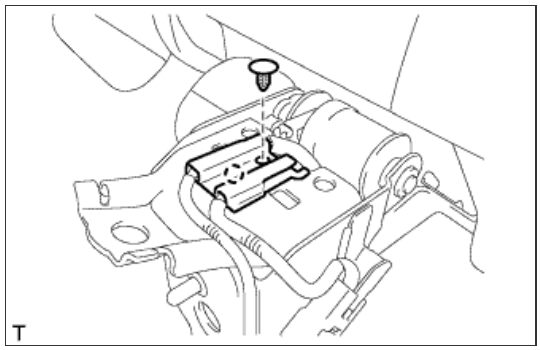


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

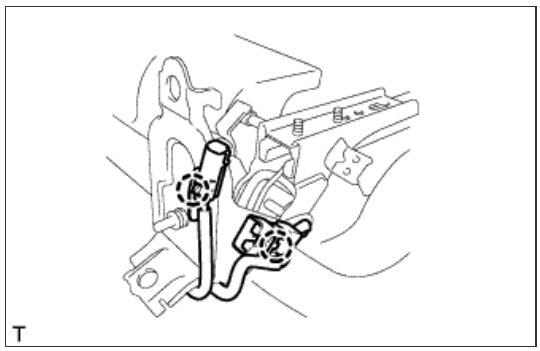

34. INSTALL REAR SEAT SIDE HINGE MALE COVER RH

a. Attach the clip to install the cover.

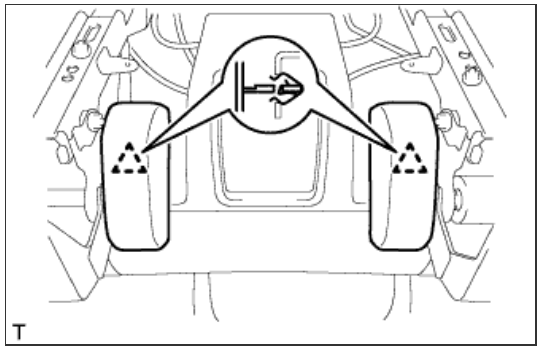


35. INSTALL REAR SEAT SIDE HINGE MALE COVER LH

a. Attach the clip to install the cover.

36. INSTALL REAR SEAT SIDE HINGE FEMALE COVER

a. Attach the 6 claws to install the 2 covers.

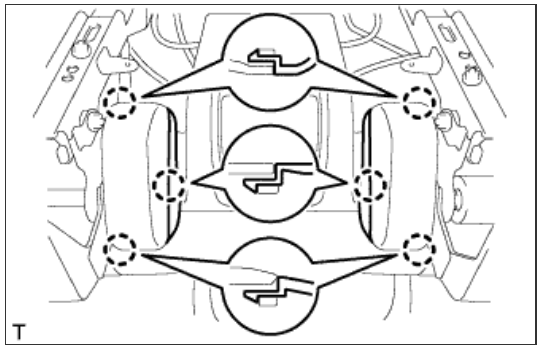


37. INSTALL FOLD SEAT STOPPER BAND ASSEMBLY

a. Install the fold seat stopper band to the seat leg side cover.


38. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

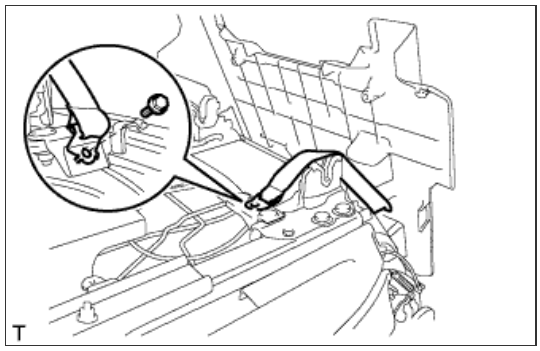


b. Attach the 3 claws to install the seat leg side cover.

c. Install the 4 screws.

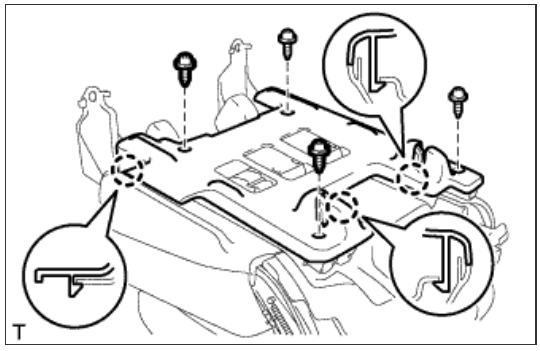


39. INSTALL NO. 1 SEAT CUSHION COVER

a. Attach the 4 claws to install the 2 covers.

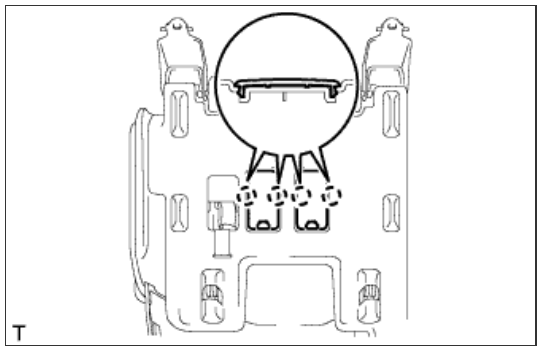


40. INSTALL UPPER SEAT TRACK RAIL COVER RH

a. Attach the 2 claws to install the cover.

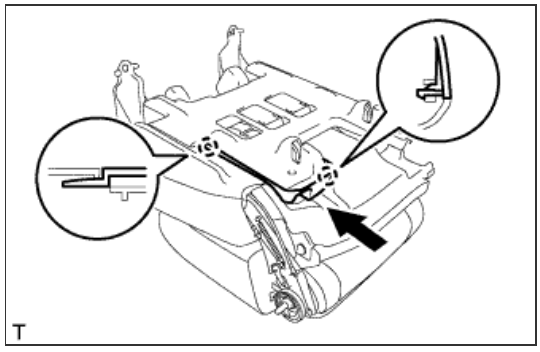

41. INSTALL UPPER SEAT TRACK RAIL COVER LH


a. Attach the 2 claws to install the cover.

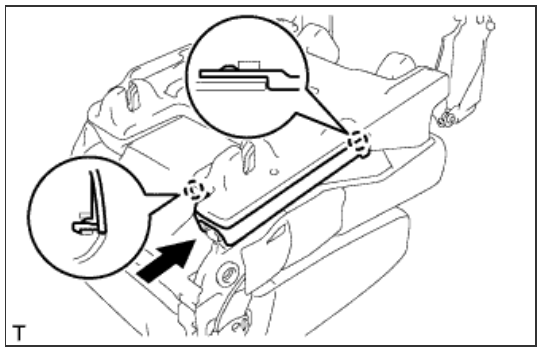

42. INSTALL REAR NO. 1 SEAT RECLINING COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

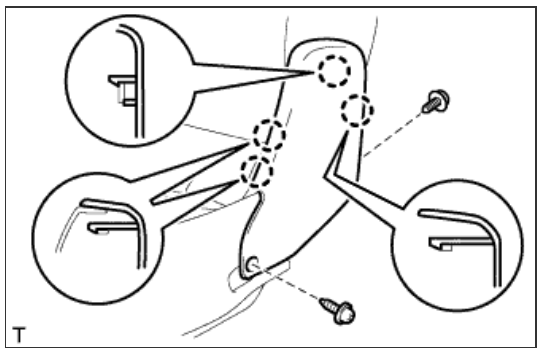

43. INSTALL REAR NO. 1 SEAT RECLINING COVER RH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

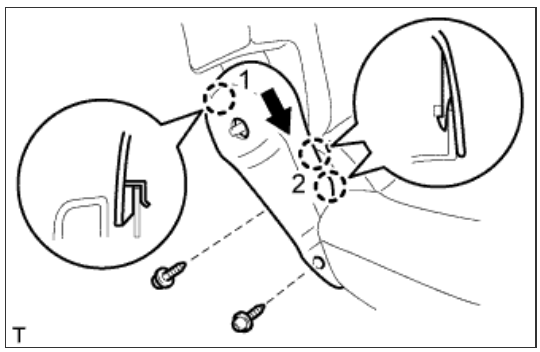


44. INSTALL RECLINING ADJUSTER RELEASE HANDLE RH

a. Install the release handle with the screw.

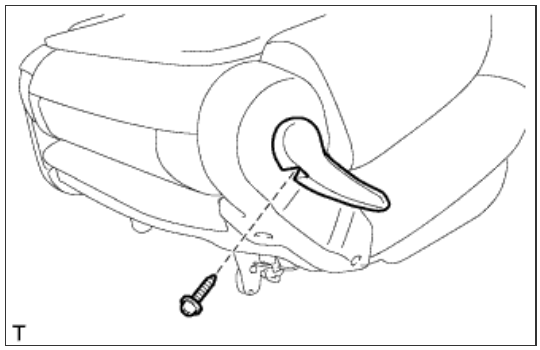

45. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

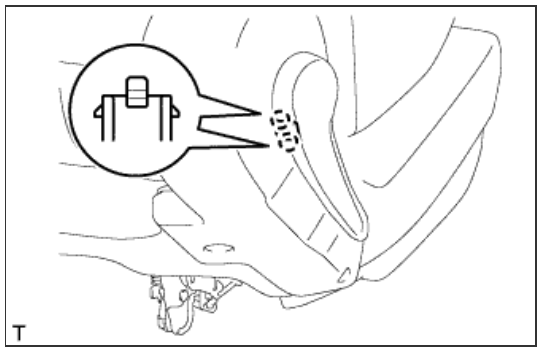

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

a. Install the 4 strikers with the 10 bolts.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

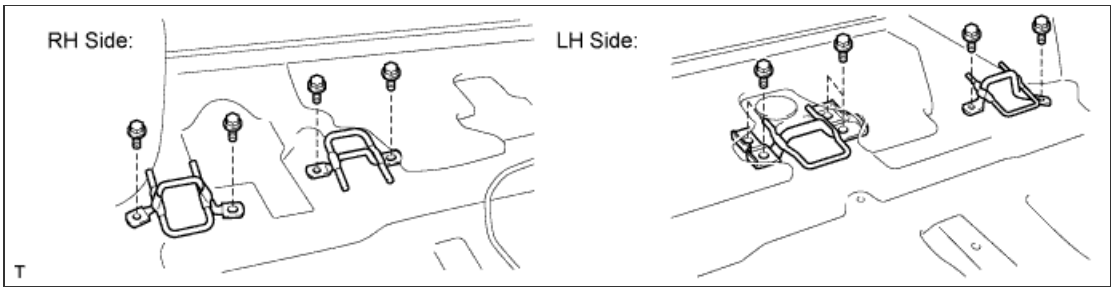

2. INSTALL REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)

a. Install the duct with the 5 screws.

b. Connect the 2 connectors.

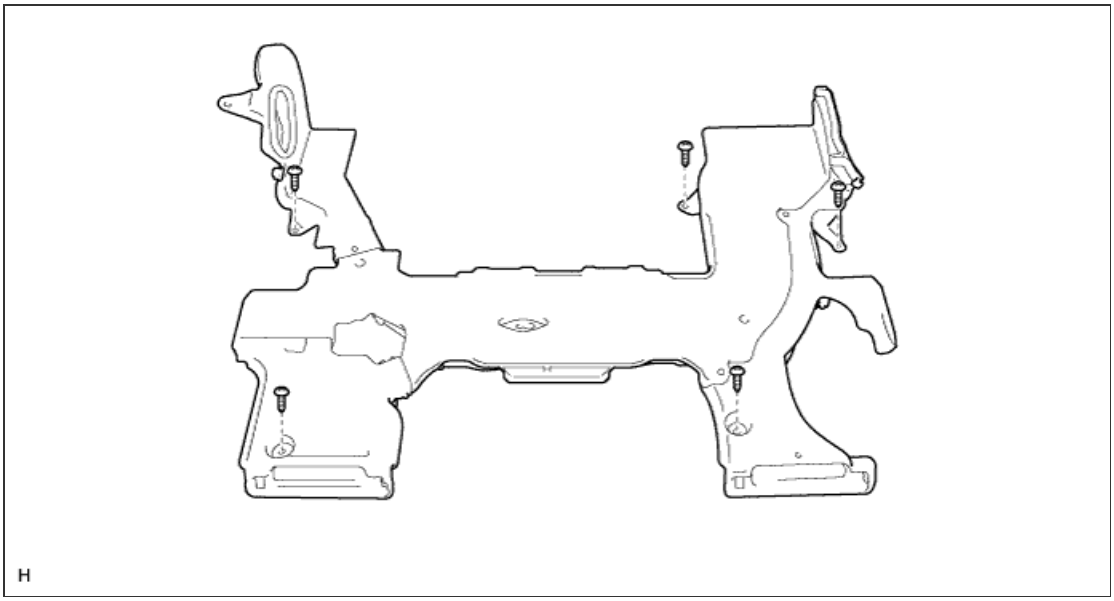

3. INSTALL RONT LOOR CARPET ASSEMBLY

a. Install the floor carpet.


4. INSTALL REAR AIR DUCT UIDE (w/ Rear Air Conditioning System)

a. Attach the claw to install the guide.

b. Install the screw.

HINT:

Use the same procedures for both sides.

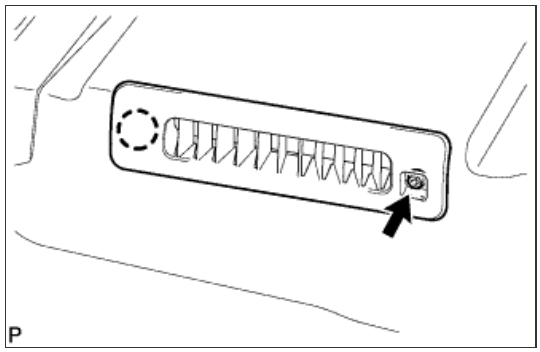


5. INSTALL AIR DUCT PLU (w/ Rear Air Conditioning System)

a. Attach the 2 claws to install the plug.

HINT:

Use the same procedures for both sides.

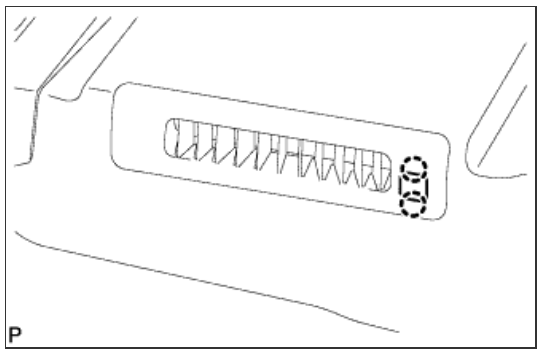

6. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

7. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).

8. INSTALL REAR SEAT CO ER CAP (w/ Rear No. 2 Seat, except ae to ae Seat Type)

HINT:


Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

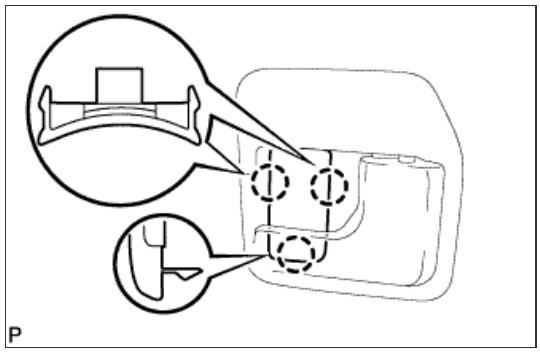

9. INSTALL REAR LOOR MAT REAR SUPPORT PLATE

a. Attach the clips to install the support plate.

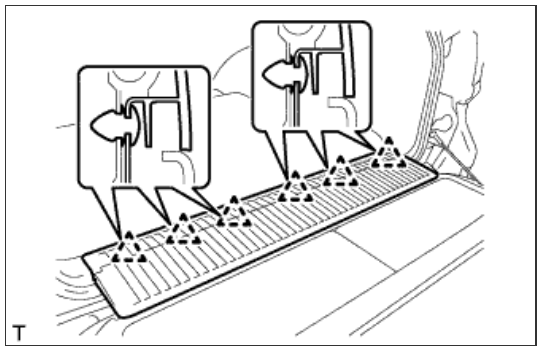

10. INSTALL REAR NO. 2 SEAT ASSEMBLY


a. for Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

b. e cept Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

11. INSTALL REAR DOOR SCU PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

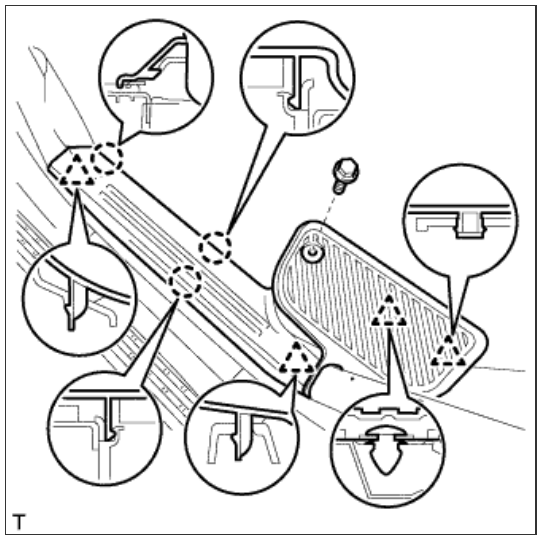

12. INSTALL REAR DOOR SCU PLATE RH

HINT:


Use the same procedures described for the LH side.

13. INSTALL REAR STEP CO ER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

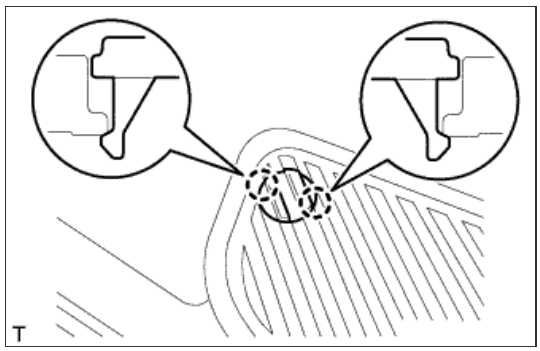


14. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

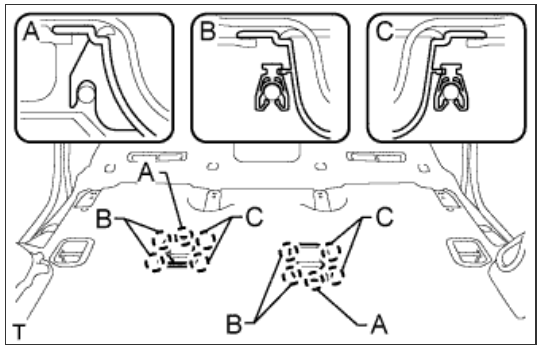

15. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

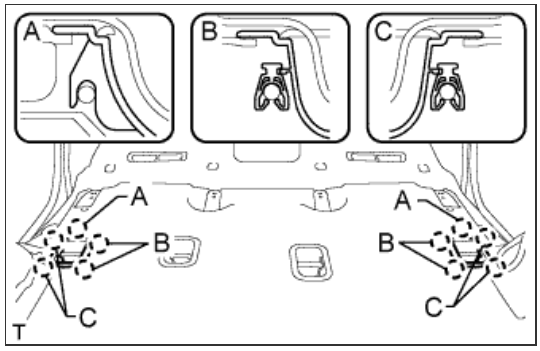

16. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly LH (Click here).

17. INSTALL REAR NO. 1 SEAT ASSEMBLY RH


a. Temporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

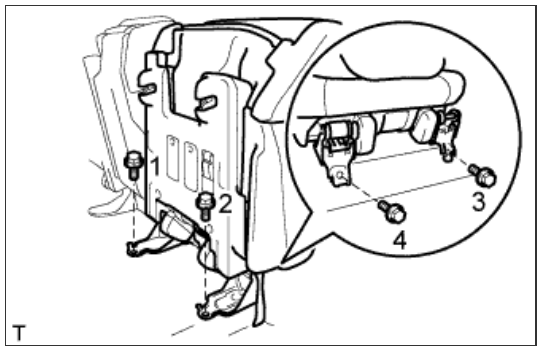


c. w/ Rear Seat Side Airbag:
Connect the connector.

d. w/ Seat Heater System:
Connect the connector.

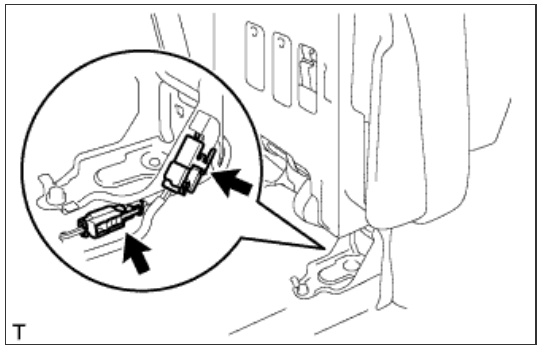


18. INSTALL REAR NO. 3 SEAT CUSHION HIN E CO ER

a. Attach the 2 clips and 2 claws to install the cover.

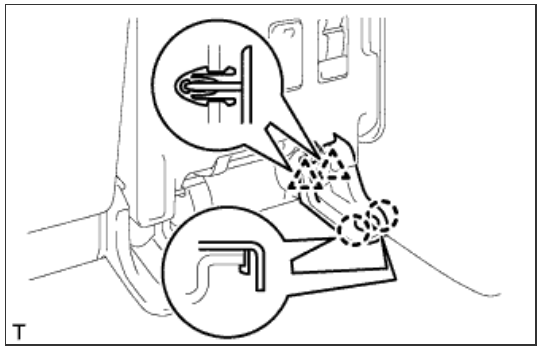

19. INSTALL REAR NO. 1 SEAT CUSHION HIN E CO ER


a. Attach the 2 clips and 2 claws to install the cover.

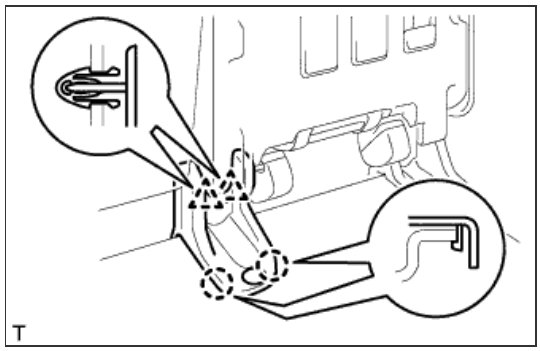

20. INSTALL REAR NO. 4 SEAT CUSHION HIN E CO ER


a. Return the seat to the upright position.

b. Attach the claws to install the cover.

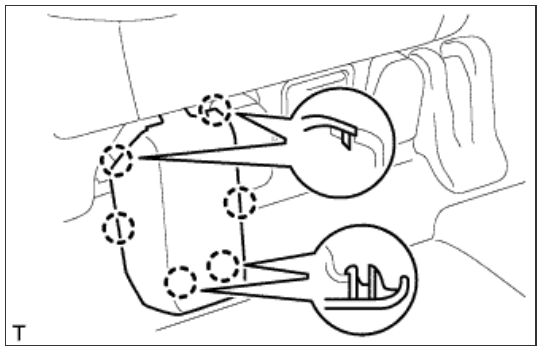

21. INSTALL REAR NO. 2 SEAT CUSHION HINGE COVER

a. Attach the claws to install the cover.

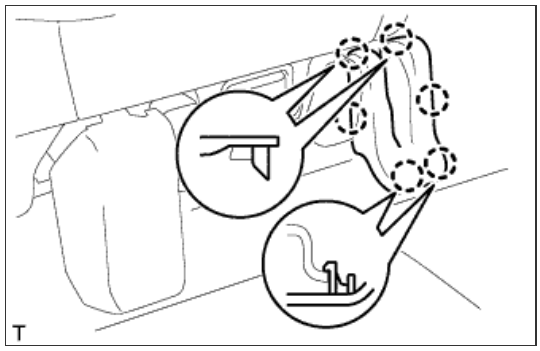

22. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

23. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

24. INSPECT REAR NO. 1 SEAT ASSEMBLY RH

a. w/ Seat Heater System:
Check the seat heater operation.

i. Turn the engine switch on (IG).

ii. Turn the seat heater switch on.

iii. Wait 5 minutes or more and confirm that the seat surface becomes warm.

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

a. Install the 4 strikers with the 10 bolts.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

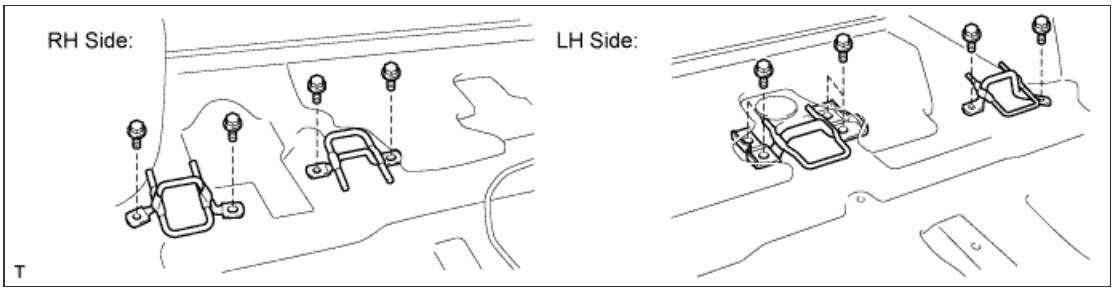

2. INSTALL REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)

a. Install the duct with the 5 screws.

b. Connect the 2 connectors.

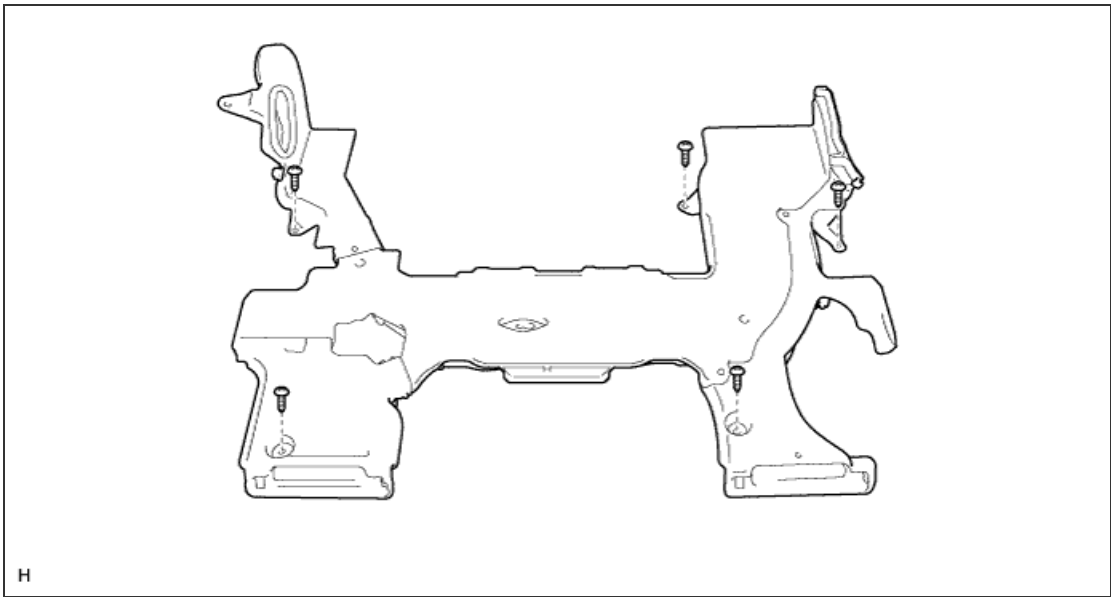

3. INSTALL RONT LOOR CARPET ASSEMBLY

a. Install the floor carpet.


4. INSTALL REAR AIR DUCT UIDE (w/ Rear Air Conditioning System)

a. Attach the claw to install the guide.

b. Install the screw.

HINT:

Use the same procedures for both sides.

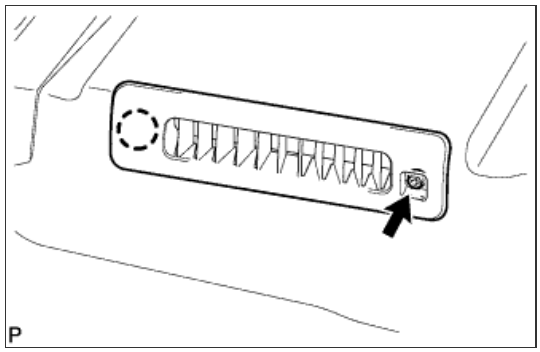


5. INSTALL AIR DUCT PLU (w/ Rear Air Conditioning System)

a. Attach the 2 claws to install the plug.

HINT:

Use the same procedures for both sides.

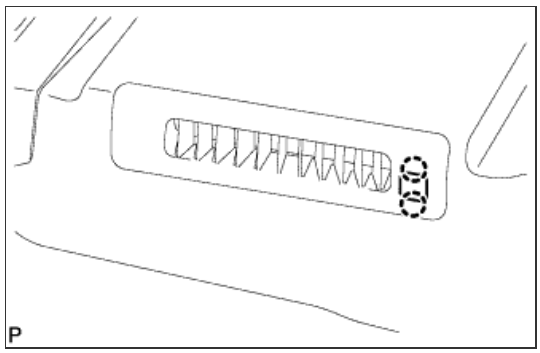

6. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

7. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).

8. INSTALL REAR SEAT CO ER CAP (w/ Rear No. 2 Seat, except ae to ae Seat Type)

HINT:


Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

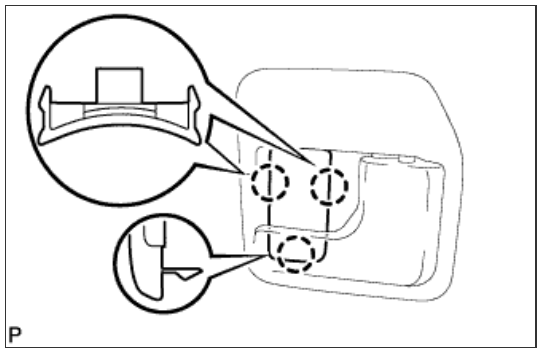

9. INSTALL REAR LOOR MAT REAR SUPPORT PLATE

a. Attach the clips to install the support plate.

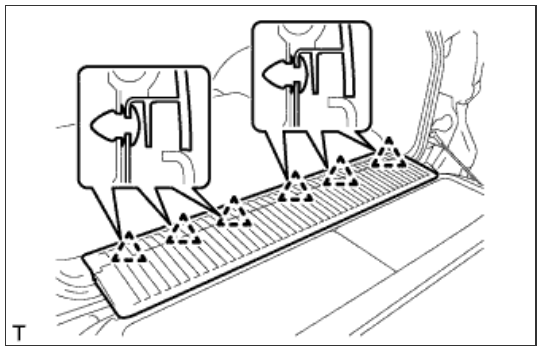

10. INSTALL REAR NO. 2 SEAT ASSEMBLY


a. for Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

b. e cept Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

11. INSTALL REAR DOOR SCU PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

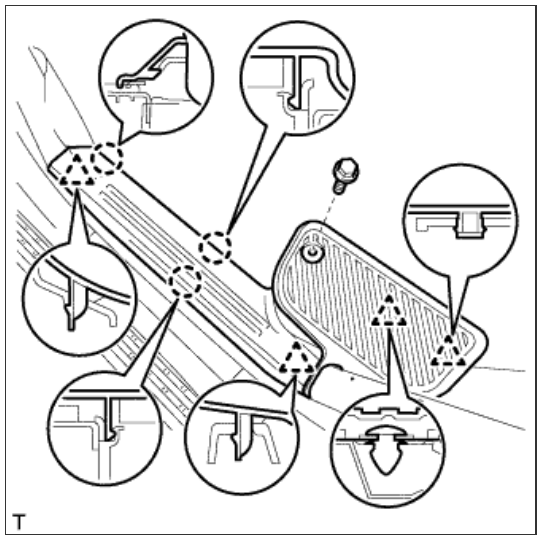

12. INSTALL REAR DOOR SCU PLATE RH

HINT:


Use the same procedures described for the LH side.

13. INSTALL REAR STEP CO ER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

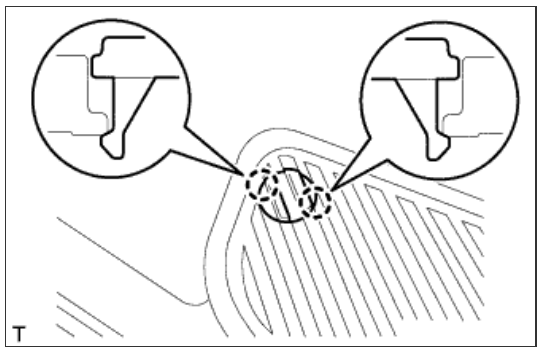


14. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

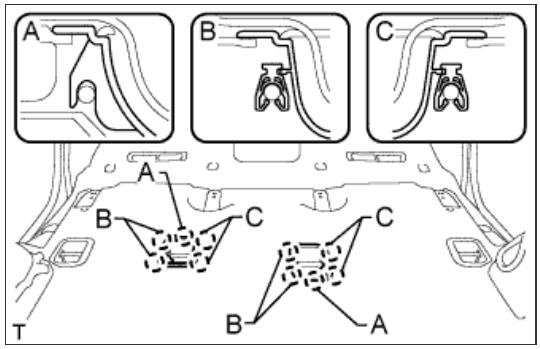

15. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

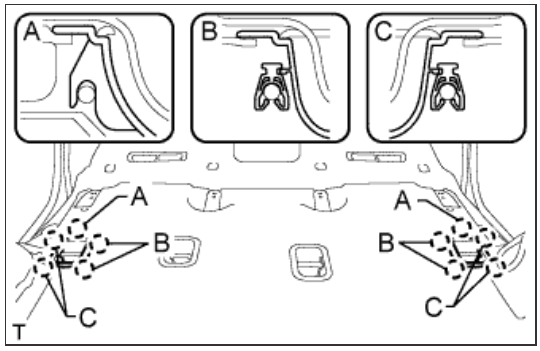

16. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly LH (Click here).

17. INSTALL REAR NO. 1 SEAT ASSEMBLY RH


a. Temporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

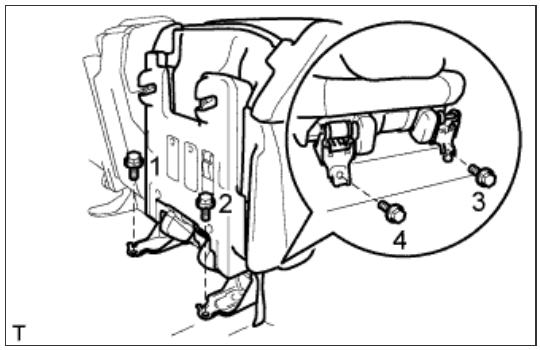


c. w/ Rear Seat Side Airbag:
Connect the connector.

d. w/ Seat Heater System:
Connect the connector.

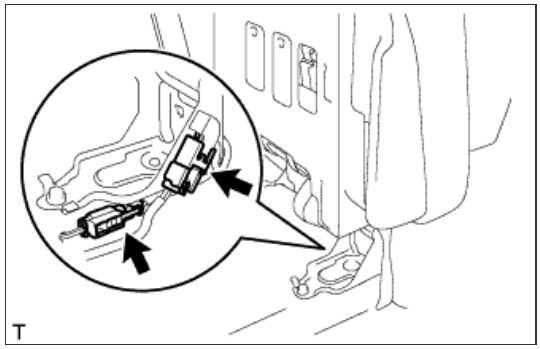


18. INSTALL REAR NO. 3 SEAT CUSHION HIN E CO ER

a. Attach the 2 clips and 2 claws to install the cover.

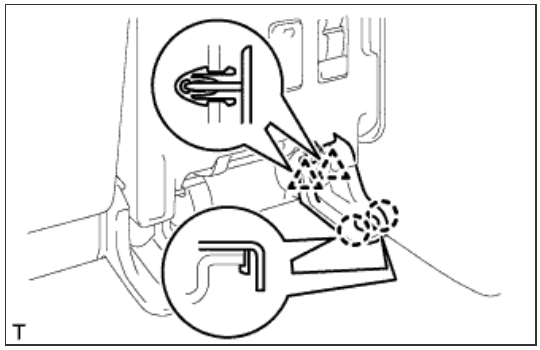

19. INSTALL REAR NO. 1 SEAT CUSHION HIN E CO ER


a. Attach the 2 clips and 2 claws to install the cover.

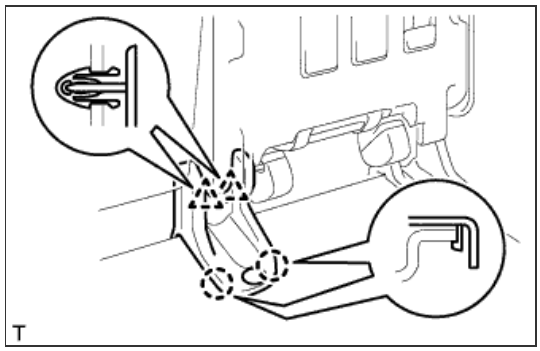

20. INSTALL REAR NO. 4 SEAT CUSHION HIN E CO ER


a. Return the seat to the upright position.

b. Attach the claws to install the cover.

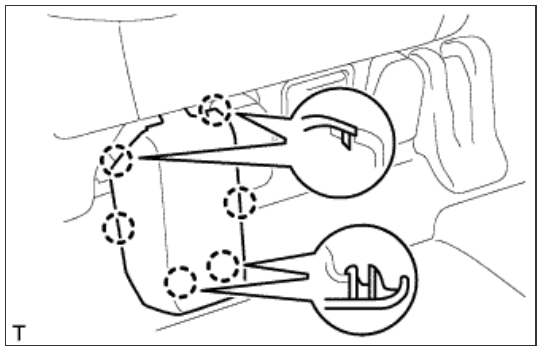

21. INSTALL REAR NO. 2 SEAT CUSHION HINGE COVER

a. Attach the claws to install the cover.

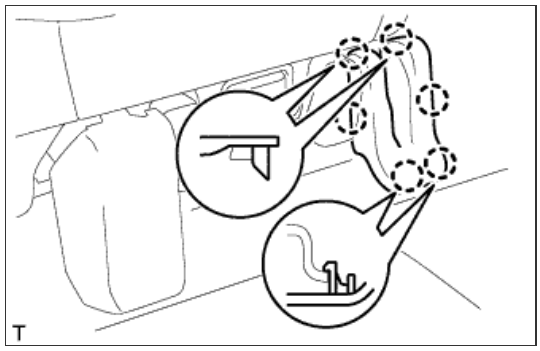

22. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

23. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

24. INSPECT REAR NO. 1 SEAT ASSEMBLY RH

a. w/ Seat Heater System:
Check the seat heater operation.

i. Turn the engine switch on (IG).

ii. Turn the seat heater switch on.

iii. Wait 5 minutes or more and confirm that the seat surface becomes warm.

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

a. Install the 4 strikers with the 10 bolts.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

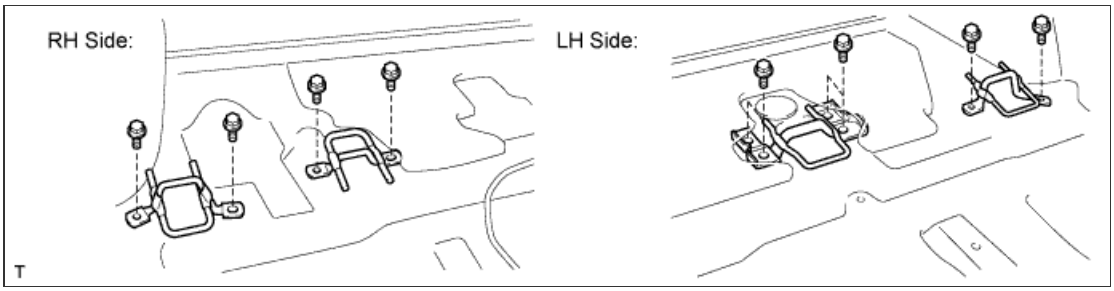

2. INSTALL REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)

a. Install the duct with the 5 screws.

b. Connect the 2 connectors.

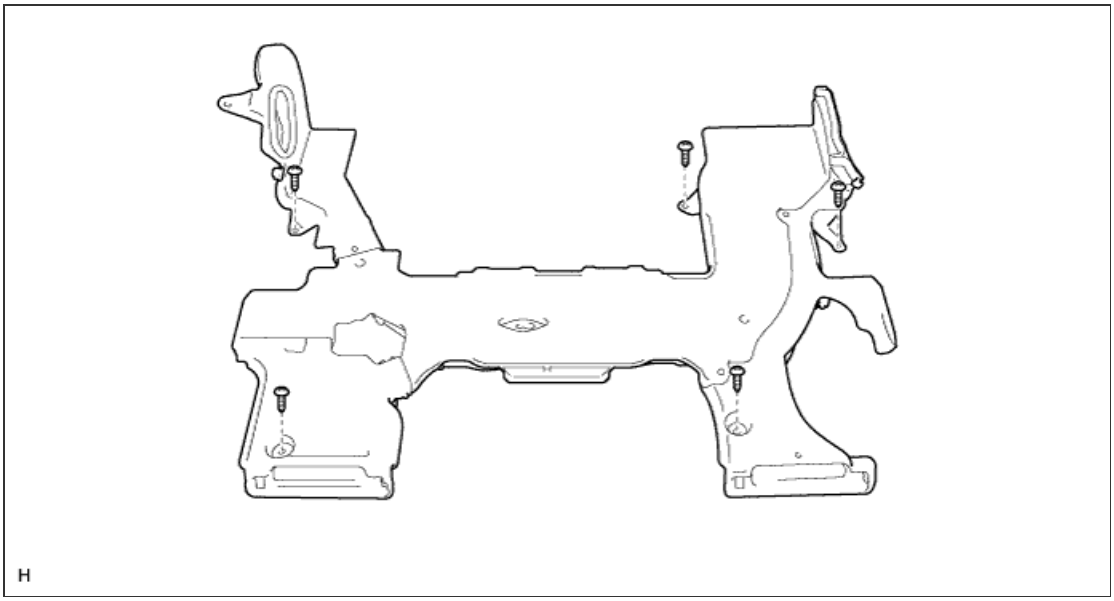

3. INSTALL RONT LOOR CARPET ASSEMBLY

a. Install the floor carpet.


4. INSTALL REAR AIR DUCT UIDE (w/ Rear Air Conditioning System)

a. Attach the claw to install the guide.

b. Install the screw.

HINT:

Use the same procedures for both sides.

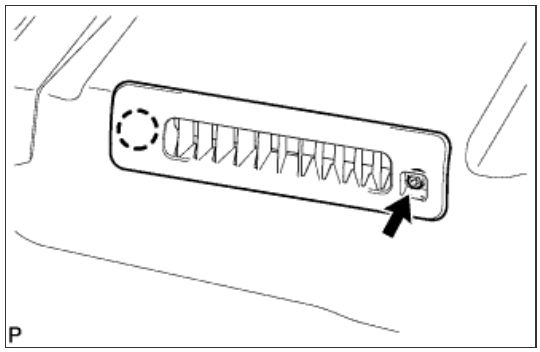


5. INSTALL AIR DUCT PLU (w/ Rear Air Conditioning System)

a. Attach the 2 claws to install the plug.

HINT:

Use the same procedures for both sides.

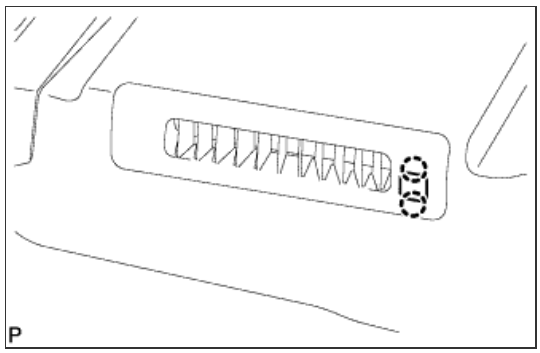

6. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

7. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).

8. INSTALL REAR SEAT CO ER CAP (w/ Rear No. 2 Seat, except ae to ae Seat Type)

HINT:


Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

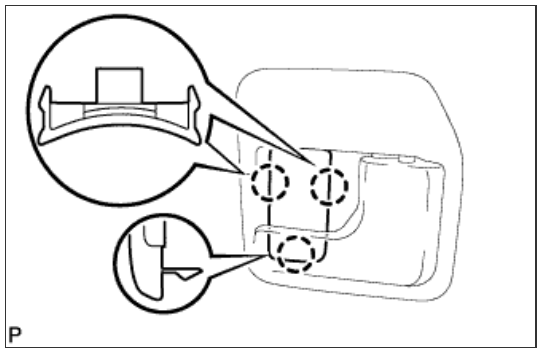

9. INSTALL REAR LOOR MAT REAR SUPPORT PLATE

a. Attach the clips to install the support plate.

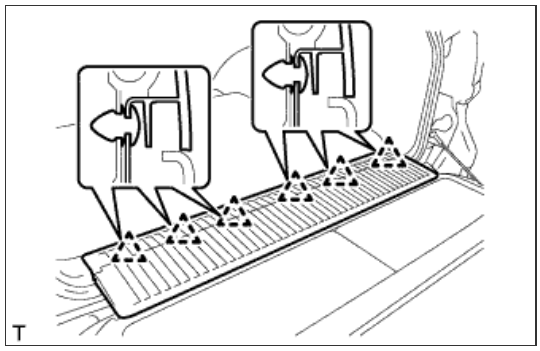

10. INSTALL REAR NO. 2 SEAT ASSEMBLY


a. for Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

b. e cept Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

11. INSTALL REAR DOOR SCU PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

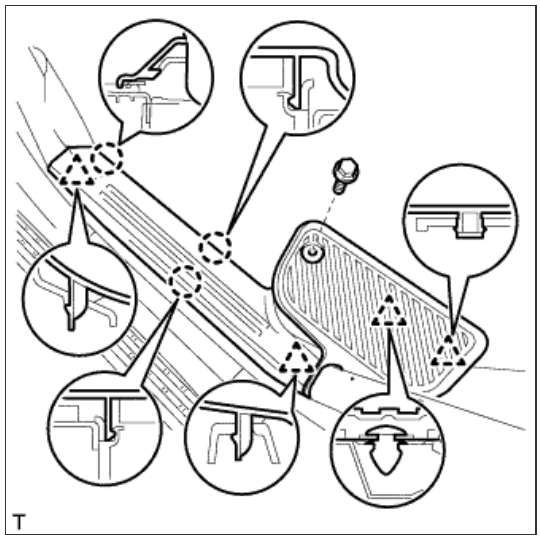

12. INSTALL REAR DOOR SCU PLATE RH

HINT:


Use the same procedures described for the LH side.

13. INSTALL REAR STEP CO ER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

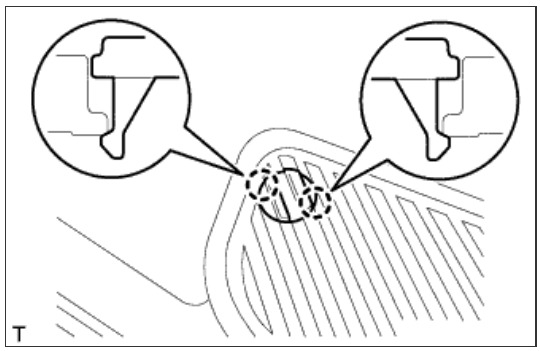


14. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

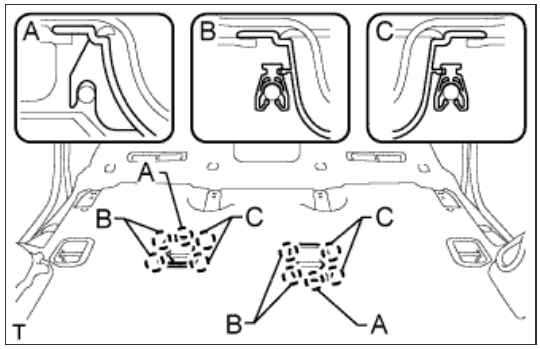

15. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

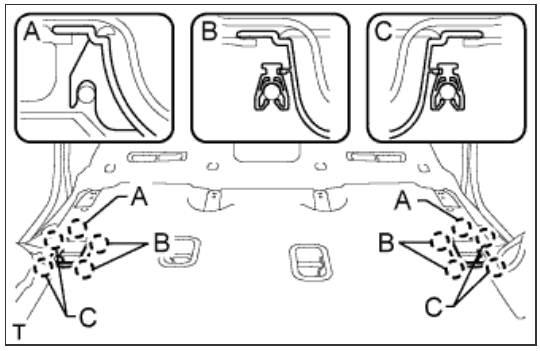

16. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly LH (Click here).

17. INSTALL REAR NO. 1 SEAT ASSEMBLY RH


a. Temporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

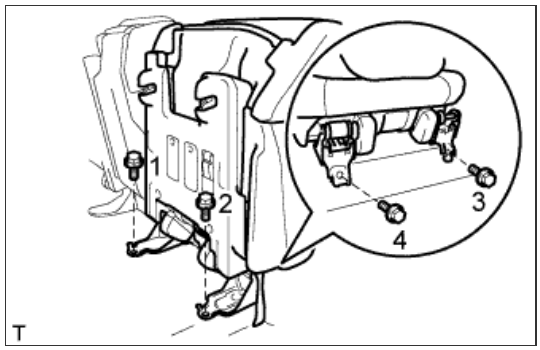


c. w/ Rear Seat Side Airbag:
Connect the connector.

d. w/ Seat Heater System:
Connect the connector.

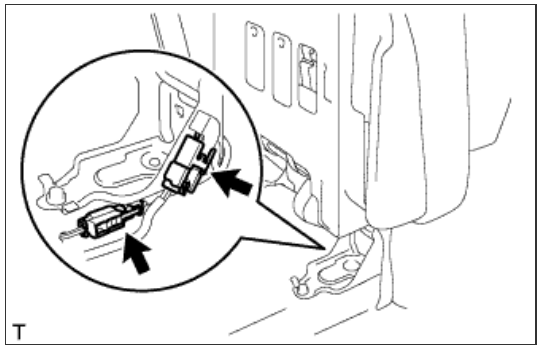


18. INSTALL REAR NO. 3 SEAT CUSHION HIN E CO ER

a. Attach the 2 clips and 2 claws to install the cover.

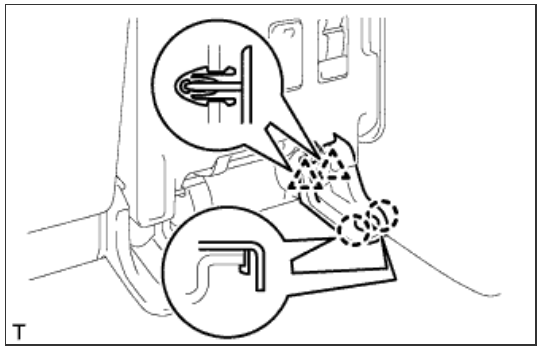

19. INSTALL REAR NO. 1 SEAT CUSHION HIN E CO ER


a. Attach the 2 clips and 2 claws to install the cover.

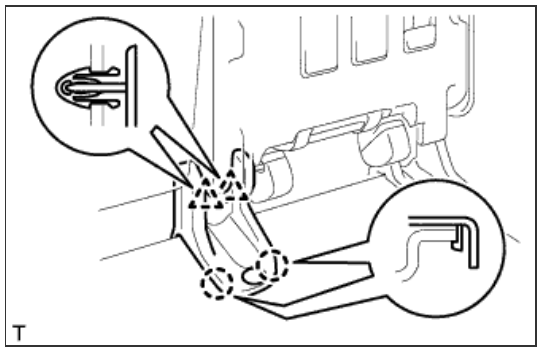

20. INSTALL REAR NO. 4 SEAT CUSHION HIN E CO ER


a. Return the seat to the upright position.

b. Attach the 7 claws to install the cover.

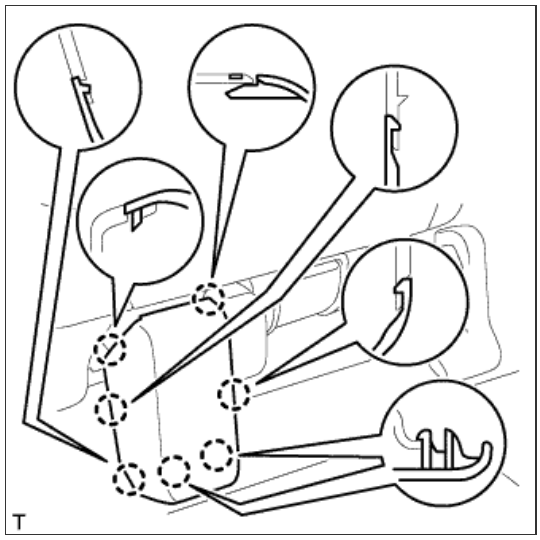

21. INSTALL REAR NO. 2 SEAT CUSHION HIN E CO ER

a. Attach the claws to install the cover.

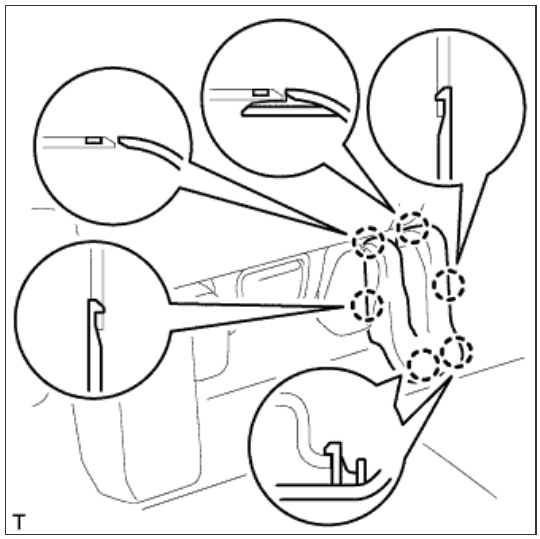

22. CONNECT CABLE TO NE ATI E BATTERY TERMINAL

NOTICE:

In disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

23. CHECK SRS ARNN LI HT

a. Check the SRS warning light (Click here).

24. INSPECT REAR NO. 1 SEAT ASSEMBLY RH


a. w/ Seat Heater System:
Check the seat heater operation.


i. Turn the engine switch on (IG).


ii. Turn the seat heater switch on.


iii. ai5 minutes or more and confirm that the seat surface becomes warm.


for Preparation Click here

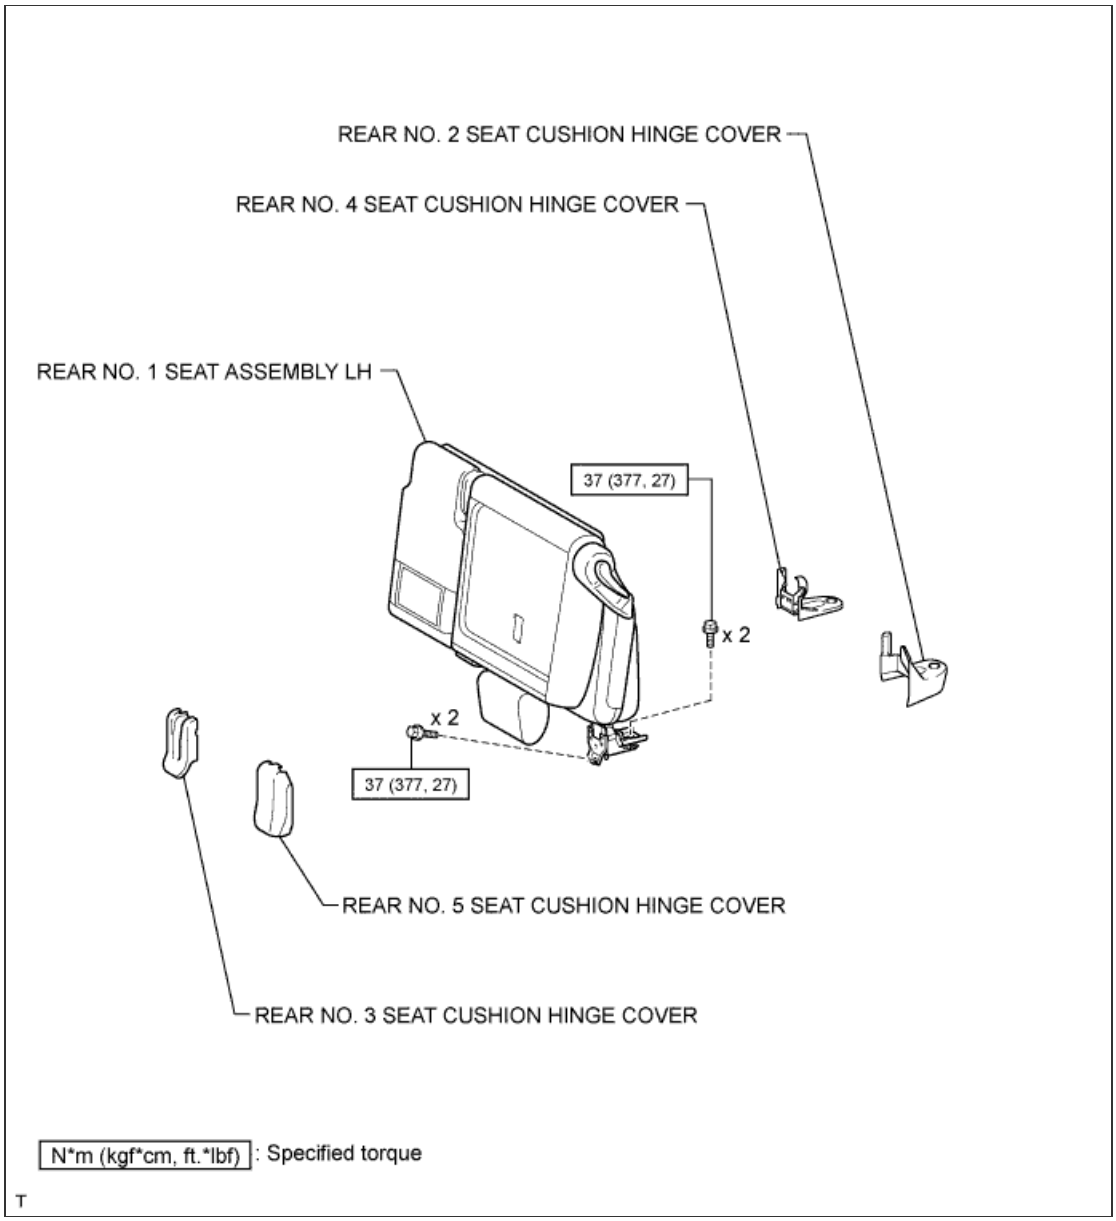

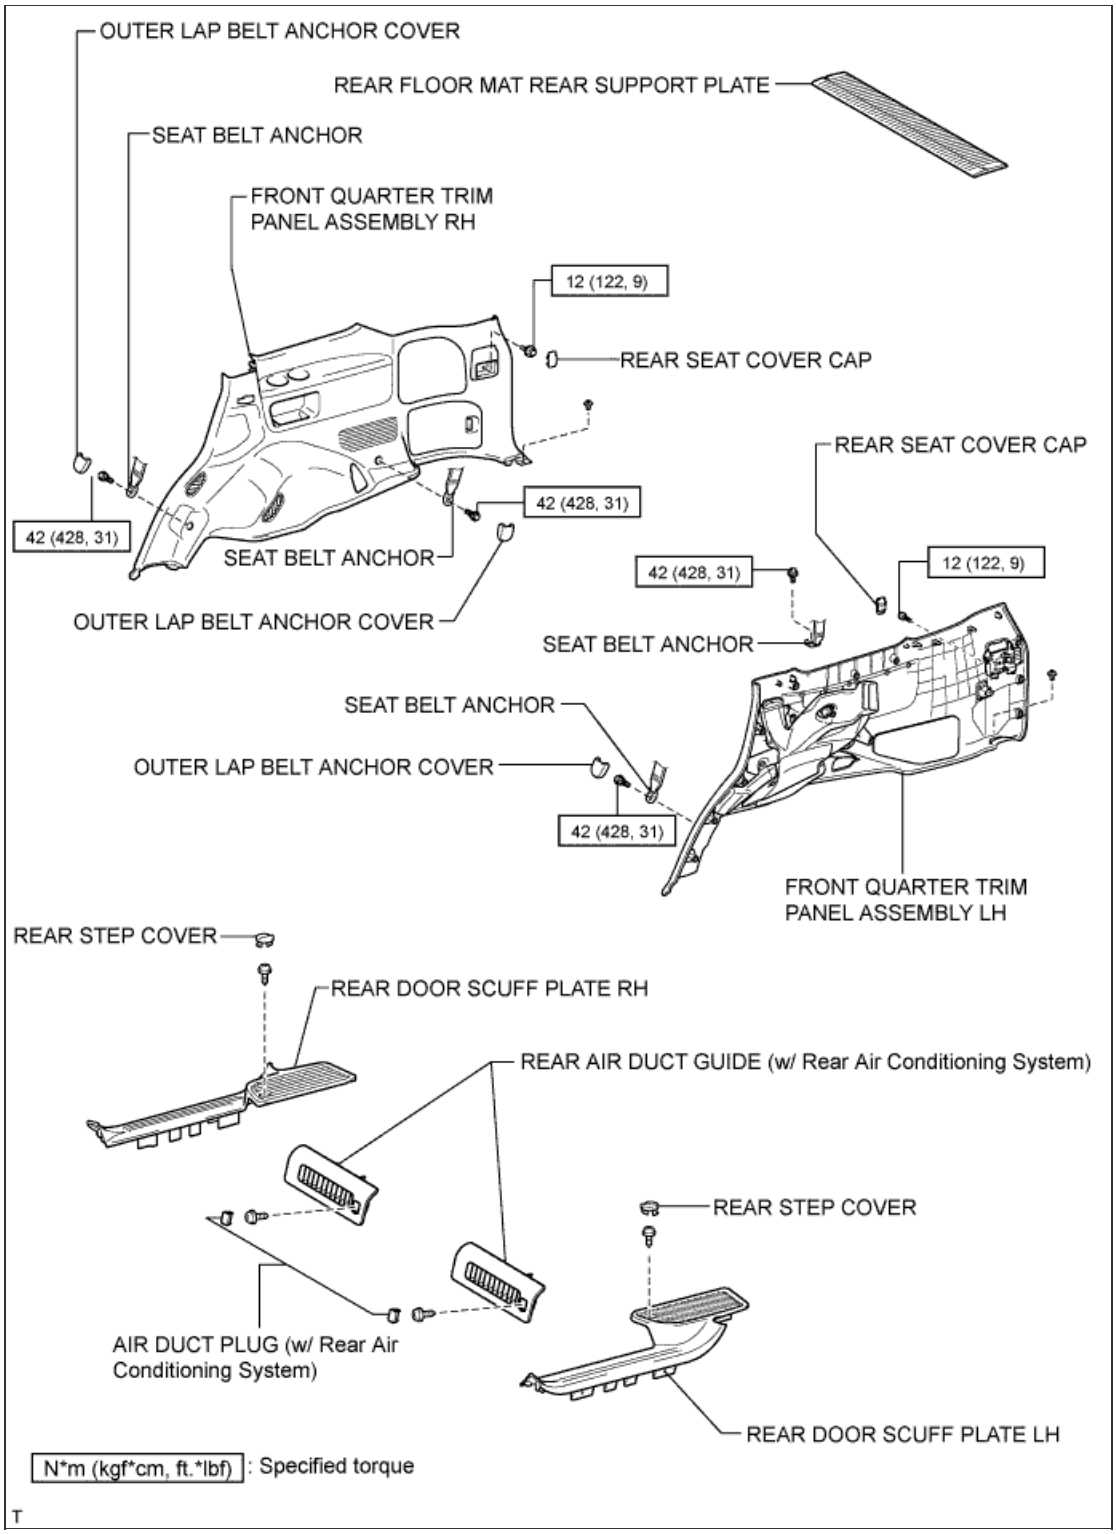

OUTER LAP BELT ANCHOR COVER
REAR FLOOR MAT REAR SUPPORT PLATE
SEAT BELT ANCHOR
FRONT QUARTER TRIM PANEL ASSEMBLY RH
12 (122, 9)
REAR SEAT COVER CAP
42 (428, 31)
42 (428, 31)
SEAT BELT ANCHOR
OUTER LAP BELT ANCHOR COVER
REAR SEAT COVER CAP
42 (428, 31)
12 (122, 9)
SEAT BELT ANCHOR
SEAT BELT ANCHOR
OUTER LAP BELT ANCHOR COVER
42 (428, 31)
FRONT QUARTER TRIM PANEL ASSEMBLY LH
REAR STEP COVER
REAR DOOR SCUFF PLATE RH
REAR AIR DUCT GUIDE (w/ Rear Air Conditioning System)
REAR STEP COVER
AIR DUCT PLUG (w/ Rear Air Conditioning System)
REAR DOOR SCUFF PLATE LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T

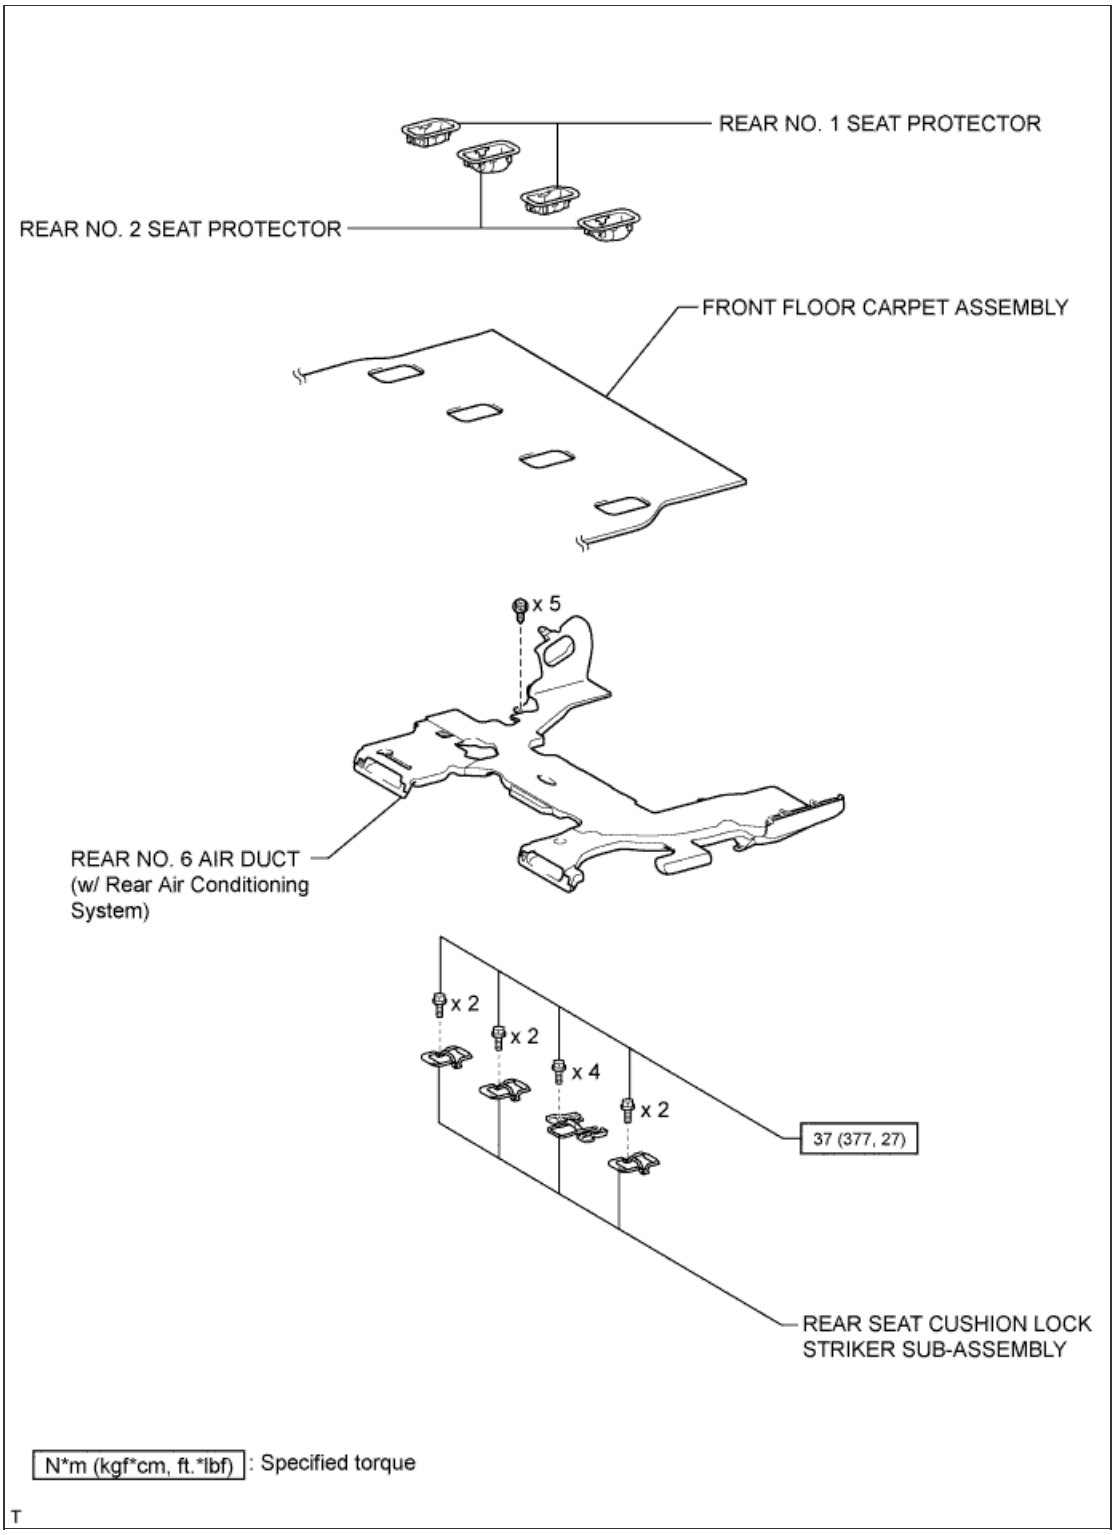

REAR NO. 1 SEAT PROTECTOR
REAR NO. 2 SEAT PROTECTOR
FRONT FLOOR CARPET ASSEMBLY
x 5
REAR NO. 6 AIR DUCT
(w/ Rear Air Conditioning
System)
x 2
x 2
x 4
x 2
37 (377, 27)
REAR SEAT CUSHION LOCK
STRIKER SUB-ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
T

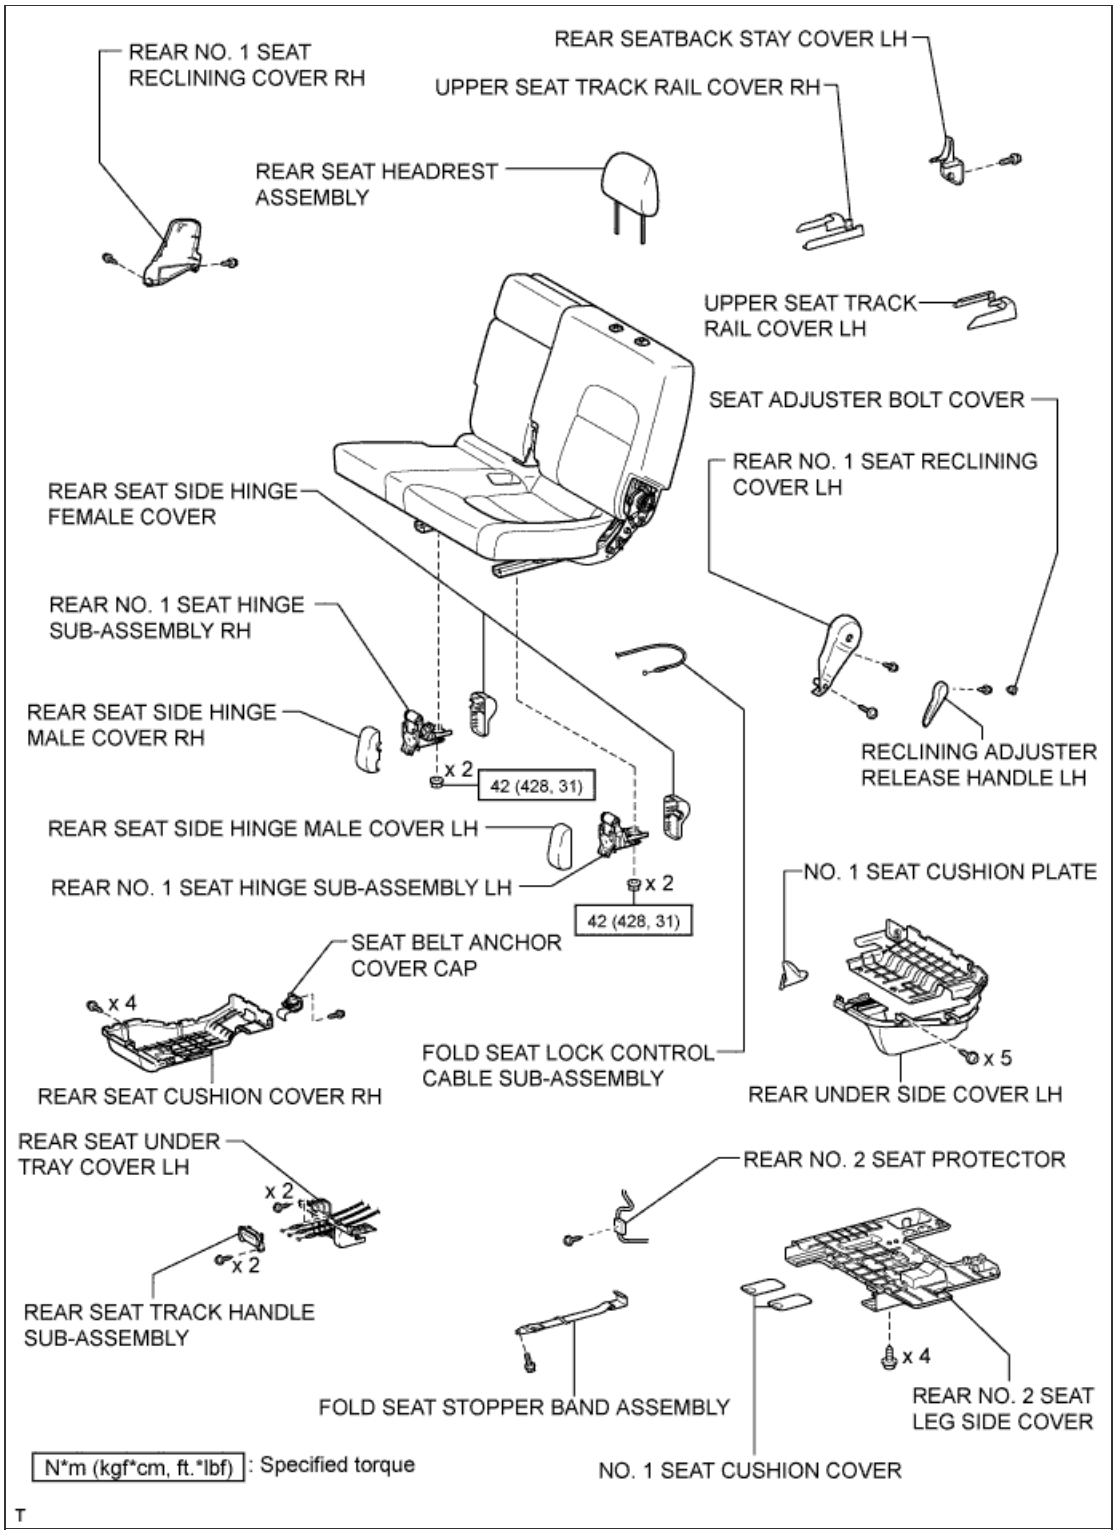

REAR NO. 1 SEAT RECLINING COVER RH
REAR SEATBACK STAY COVER LH
UPPER SEAT TRACK RAIL COVER RH
REAR SEAT HEADREST ASSEMBLY
UPPER SEAT TRACK RAIL COVER LH
SEAT ADJUSTER BOLT COVER
REAR NO. 1 SEAT RECLINING COVER LH
REAR SEAT SIDE HINGE FEMALE COVER
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH
REAR SEAT SIDE HINGE MALE COVER RH
x 2
42 (428, 31)
RECLINING ADJUSTER RELEASE HANDLE LH
REAR SEAT SIDE HINGE MALE COVER LH
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH
x 2
42 (428, 31)
NO. 1 SEAT CUSHION PLATE
SEAT BELT ANCHOR COVER CAP
x 4
x 5
FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY
REAR SEAT CUSHION COVER RH
REAR UNDER SIDE COVER LH
REAR SEAT UNDER TRAY COVER LH
x 2
x 2
REAR NO. 2 SEAT PROTECTOR
REAR SEAT TRACK HANDLE SUB-ASSEMBLY
x 4
FOLD SEAT STOPPER BAND ASSEMBLY
REAR NO. 2 SEAT LEG SIDE COVER
N*m (kgf*cm, ft.*lbf) : Specified torque
NO. 1 SEAT CUSHION COVER
T

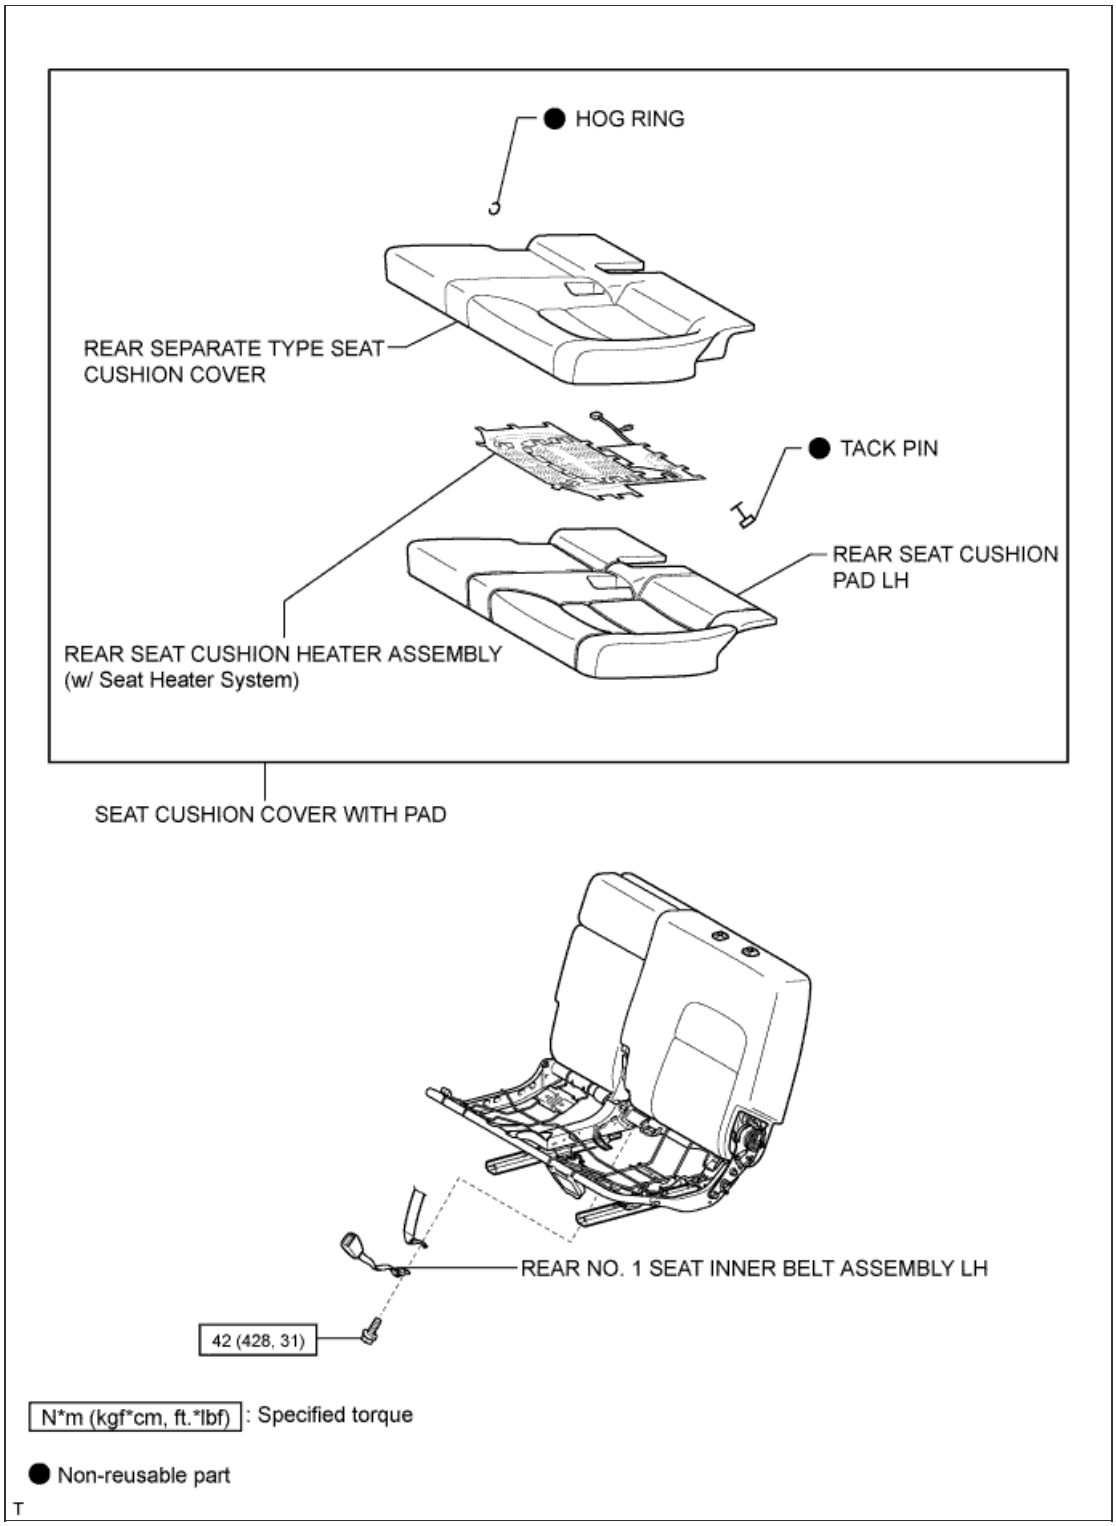
HOG RING
REAR SEPARATE TYPE SEAT CUSHION COVER
TACK PIN
REAR SEAT CUSHION PAD LH
REAR SEAT CUSHION HEATER ASSEMBLY (w/ Seat Heater System)
SEAT CUSHION COVER WITH PAD
REAR NO. 1 SEAT INNER BELT ASSEMBLY LH
42 (428, 31)
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part

T

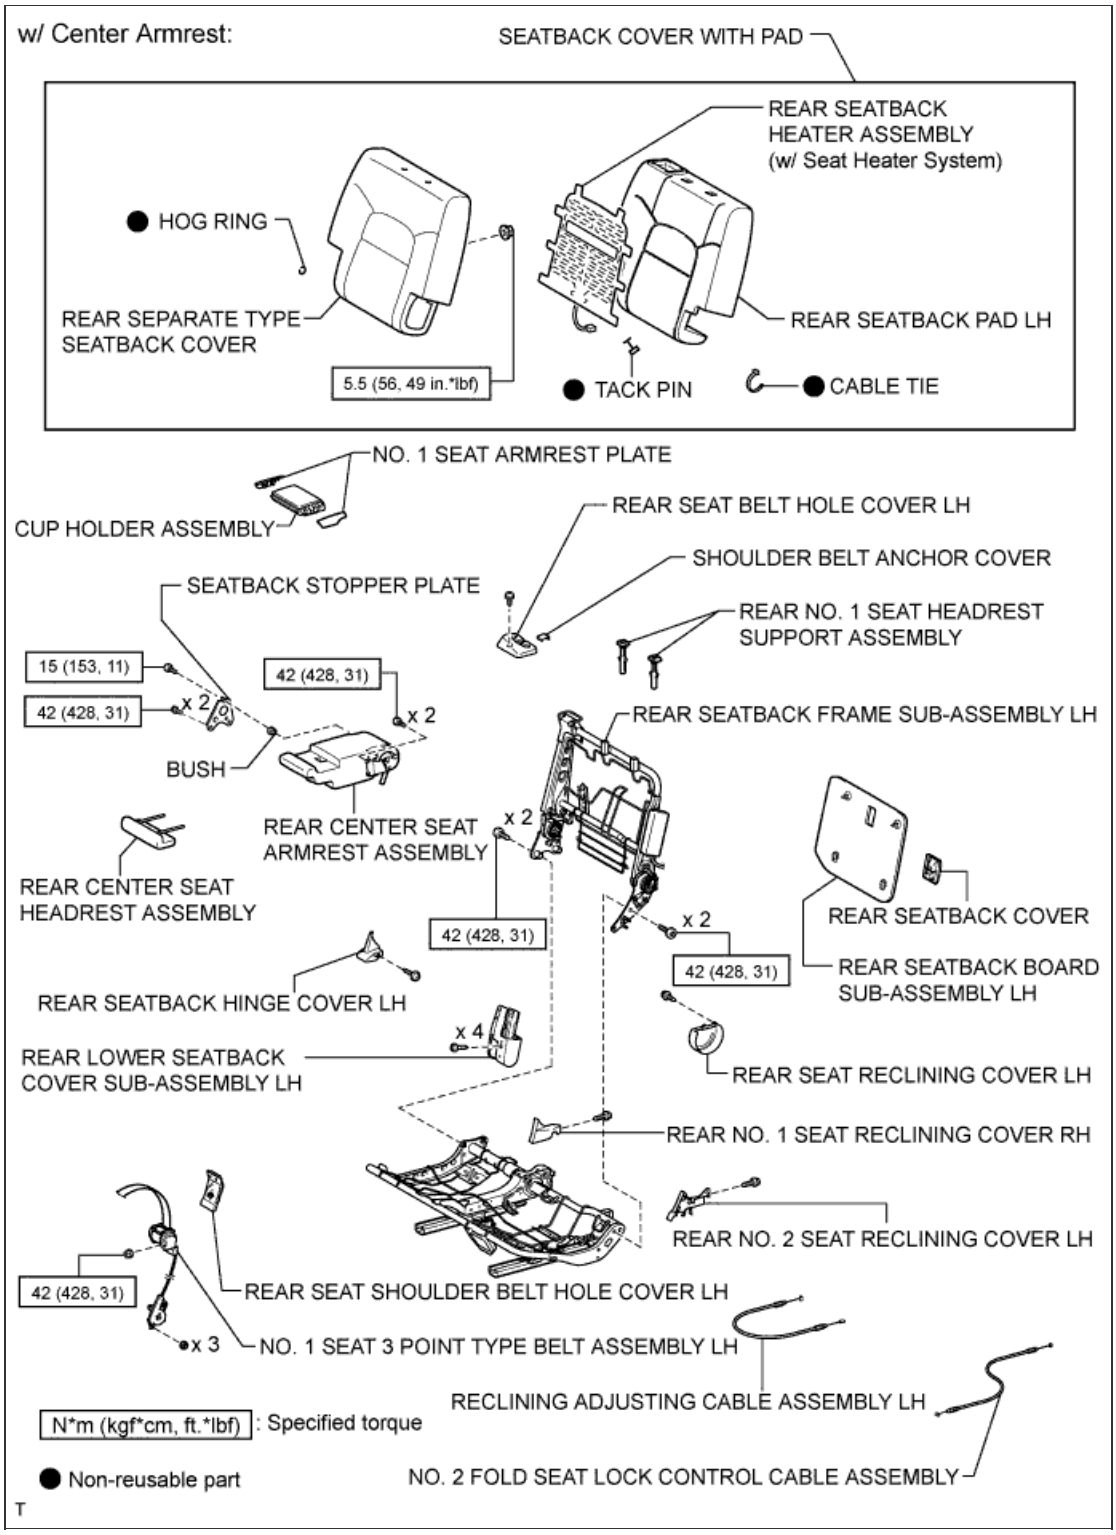
w/ Center Armrest:
SEATBACK COVER WITH PAD
REAR SEATBACK HEATER ASSEMBLY (w/ Seat Heater System)
HOG RING
REAR SEPARATE TYPE SEATBACK COVER
5.5 (56, 49 in.*lbf)
REAR SEATBACK PAD LH
TACK PIN
CABLE TIE
NO. 1 SEAT ARMREST PLATE
CUP HOLDER ASSEMBLY
REAR SEAT BELT HOLE COVER LH
SHOULDER BELT ANCHOR COVER
SEATBACK STOPPER PLATE
REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY
15 (153, 11)
42 (428, 31)
x 2
42 (428, 31)
x 2
BUSH
REAR SEATBACK FRAME SUB-ASSEMBLY LH
REAR CENTER SEAT ARMREST ASSEMBLY
x 2
REAR CENTER SEAT HEADREST ASSEMBLY
42 (428, 31)
x 2
42 (428, 31)
REAR SEATBACK COVER
REAR SEATBACK BOARD SUB-ASSEMBLY LH
REAR SEATBACK HINGE COVER LH
x 4
REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH
REAR SEAT RECLINING COVER LH
REAR NO. 1 SEAT RECLINING COVER RH
REAR NO. 2 SEAT RECLINING COVER LH
42 (428, 31)
REAR SEAT SHOULDER BELT HOLE COVER LH
x 3
NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH
RECLINING ADJUSTING CABLE ASSEMBLY LH
N*m (kgf*cm, ft.*lbf) : Specified torque
NO. 2 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY
Non-reusable part
T

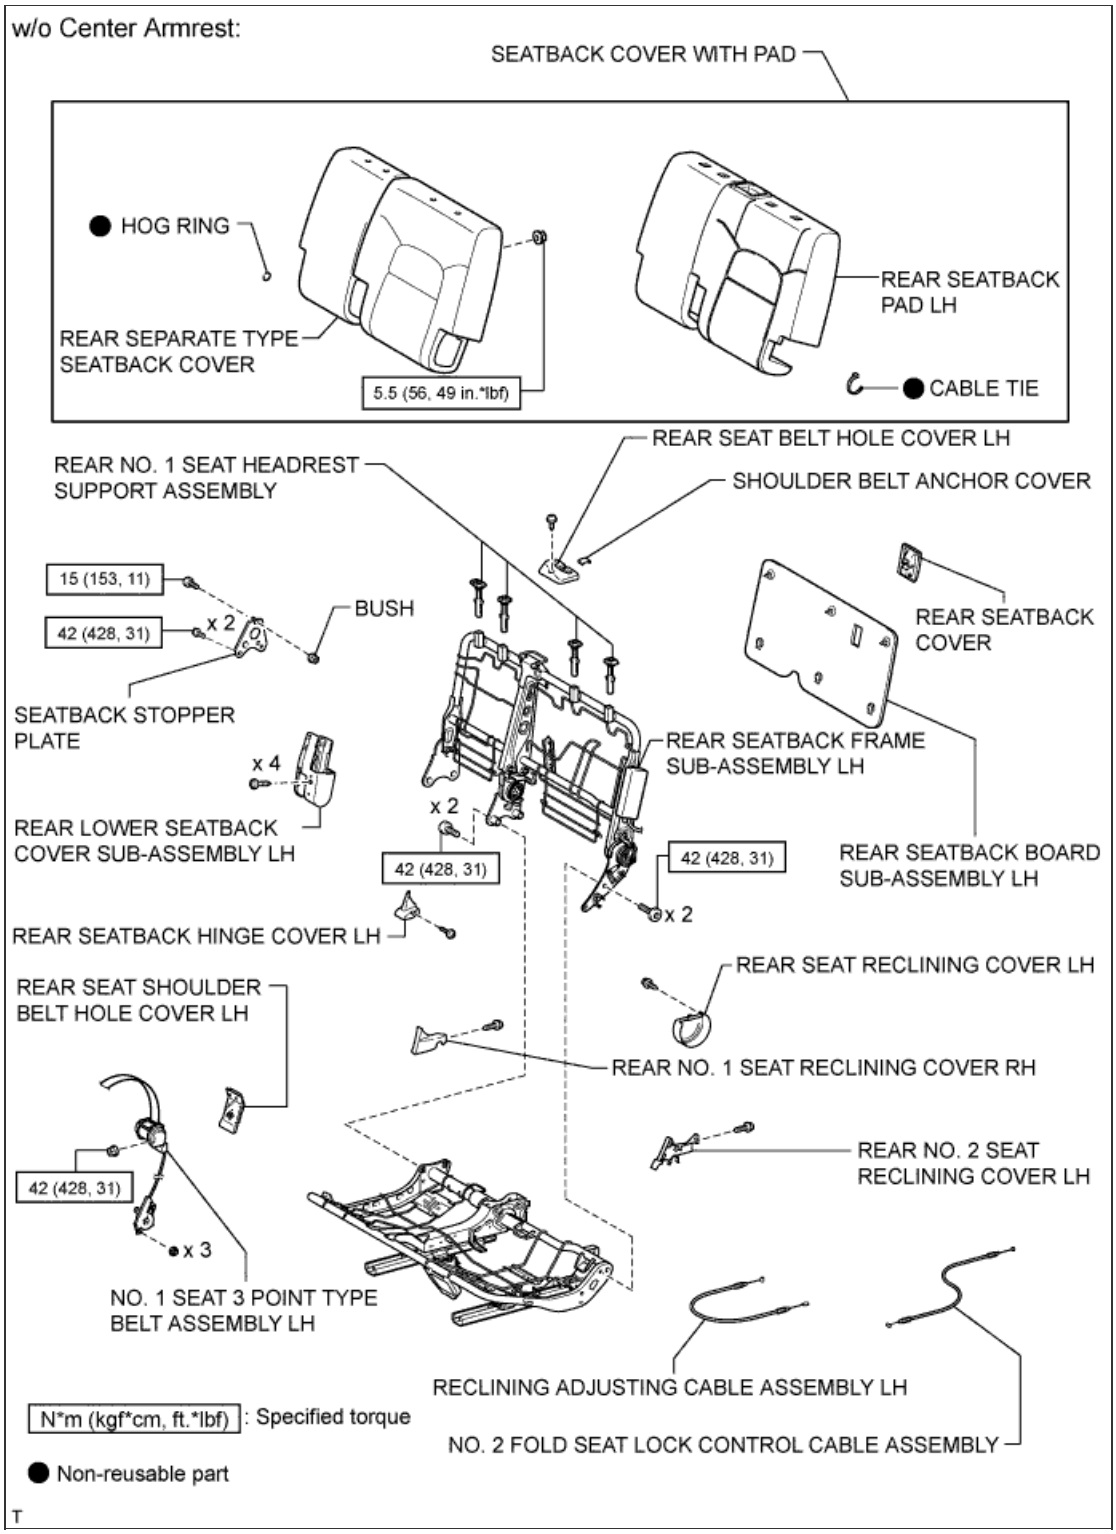
w/o Center Armrest:
SEATBACK COVER WITH PAD
HOG RING
REAR SEPARATE TYPE SEATBACK COVER
5.5 (56, 49 in.*lbf)
REAR SEATBACK PAD LH
CABLE TIE
REAR SEAT BELT HOLE COVER LH
REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY
SHOULDER BELT ANCHOR COVER
15 (153, 11)
42 (428, 31)
x 2
BUSH
SEATBACK STOPPER PLATE
REAR SEATBACK COVER
x 4
REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH
REAR SEATBACK FRAME SUB-ASSEMBLY LH
x 2
42 (428, 31)
42 (428, 31)
x 2
REAR SEATBACK BOARD SUB-ASSEMBLY LH
REAR SEATBACK HINGE COVER LH
REAR SEAT RECLINING COVER LH
REAR SEAT SHOULDER BELT HOLE COVER LH
REAR NO. 1 SEAT RECLINING COVER RH
REAR NO. 2 SEAT RECLINING COVER LH
42 (428, 31)
x 3
NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH
RECLINING ADJUSTING CABLE ASSEMBLY LH
NO. 2 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
T

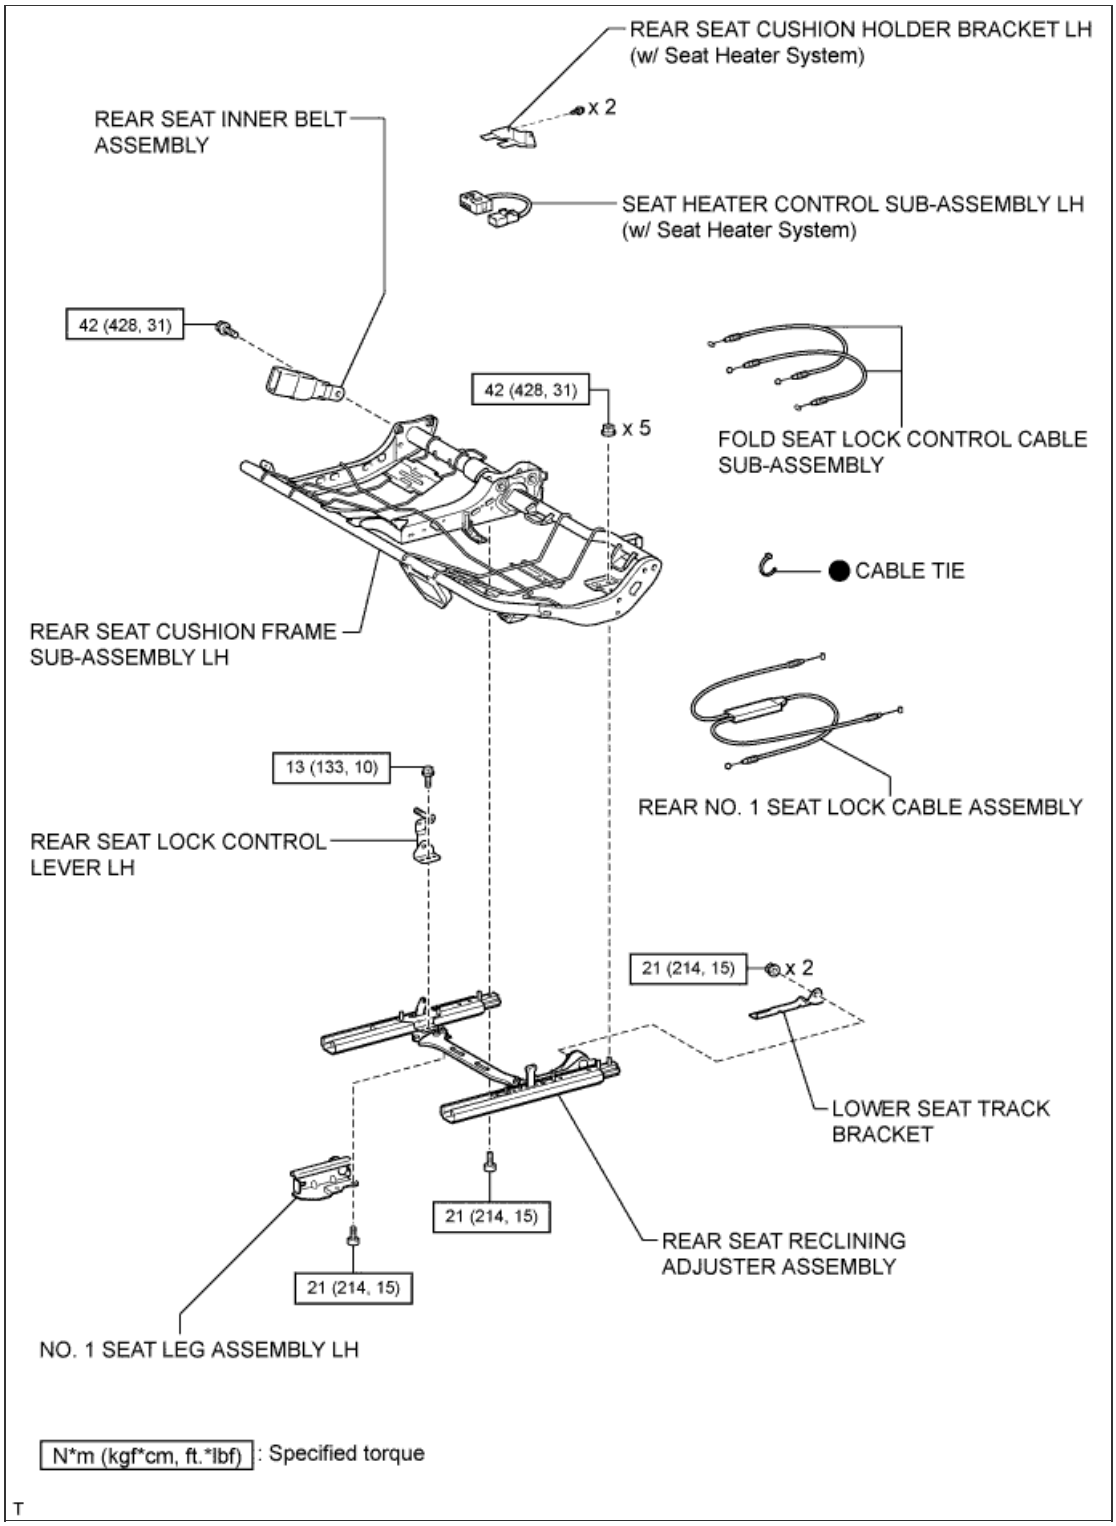
REAR SEAT CUSHION HOLDER BRACKET LH
(w/ Seat Heater System)
x 2
REAR SEAT INNER BELT
ASSEMBLY
SEAT HEATER CONTROL SUB-ASSEMBLY LH
(w/ Seat Heater System)
42 (428, 31)
42 (428, 31)
x 5
FOLD SEAT LOCK CONTROL CABLE
SUB-ASSEMBLY
CABLE TIE
REAR SEAT CUSHION FRAME
SUB-ASSEMBLY LH
13 (133, 10)
REAR NO. 1 SEAT LOCK CABLE ASSEMBLY
REAR SEAT LOCK CONTROL
LEVER LH
21 (214, 15)
x 2
LOWER SEAT TRACK
BRACKET
21 (214, 15)
REAR SEAT RECLINING
ADJUSTER ASSEMBLY
21 (214, 15)
NO. 1 SEAT LEG ASSEMBLY LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 3 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 6 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

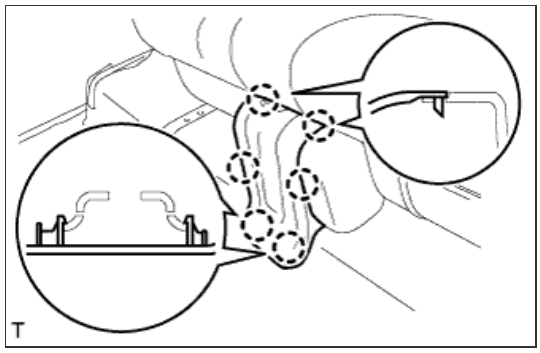


3. REMOVE REAR NO. 5 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 6 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

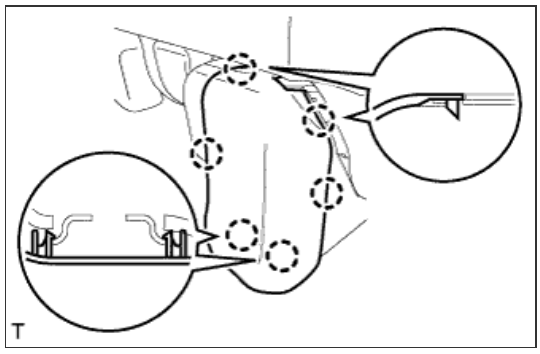

4. REMOVE REAR NO. 2 SEAT CUSHION HINGE COVER


a. Operate the reclining adjuster release handle to move the seat into the position shown in the illustration.

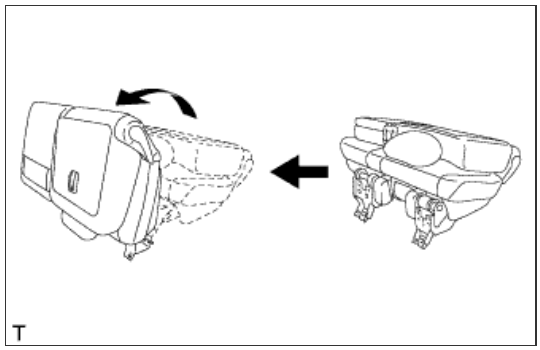

b. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:

Tape the screwdriver tip before use.

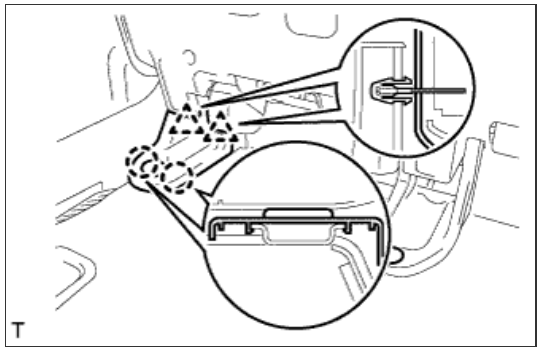


5. REMOVE REAR NO. 4 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:


Tape the screwdriver tip before use.

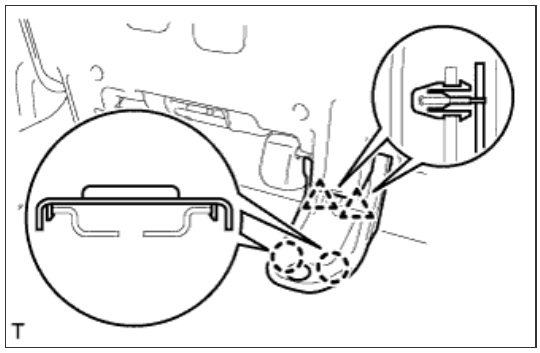

6. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. w/ Rear Seat Side Airbag:
Disconnect the connector.


b. w/ Seat Heater System:
Disconnect the connector.

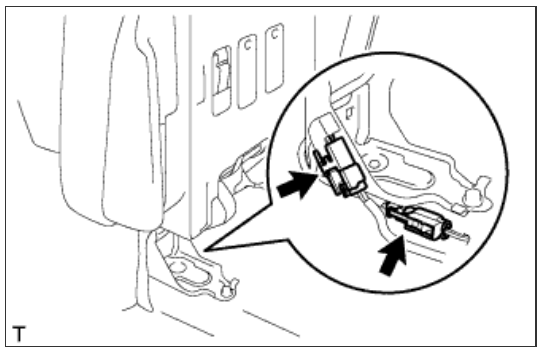

c. Remove the 4 bolts and seat assembly.

NOTICE:

e careful not to damage the vehicle body.

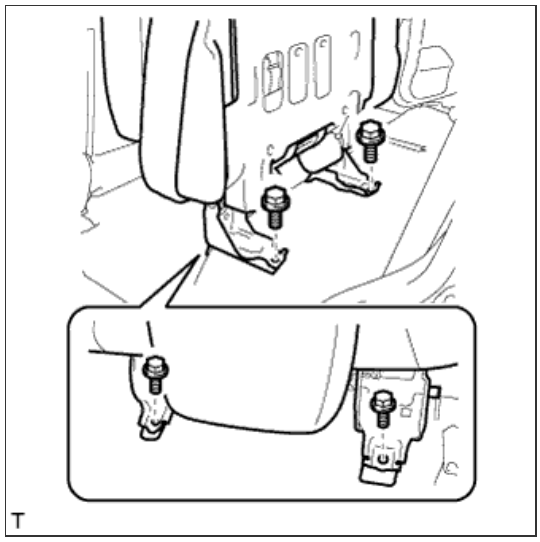


7. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. Remove the rear No. 1 seat assembly RH (Click here).


8. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

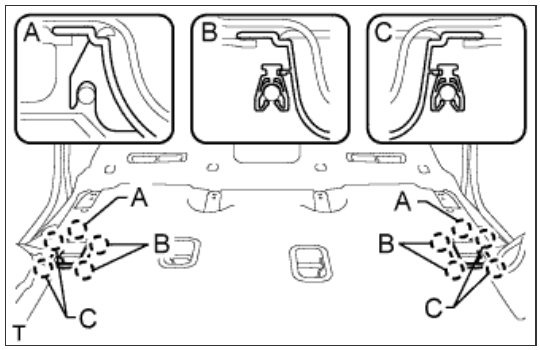

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

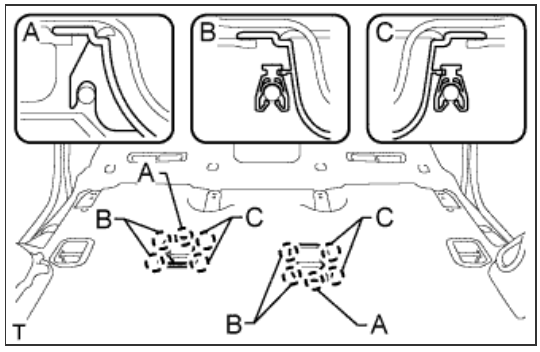


10. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

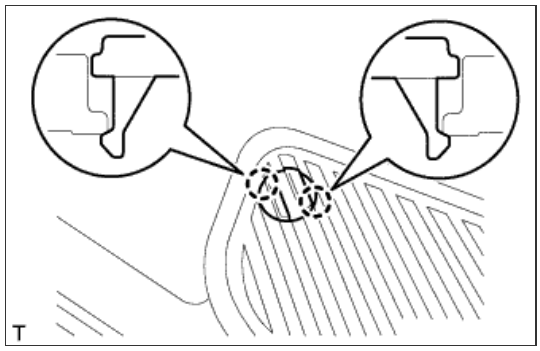

11. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the claws and 4 clips, and remove the scuff plate.

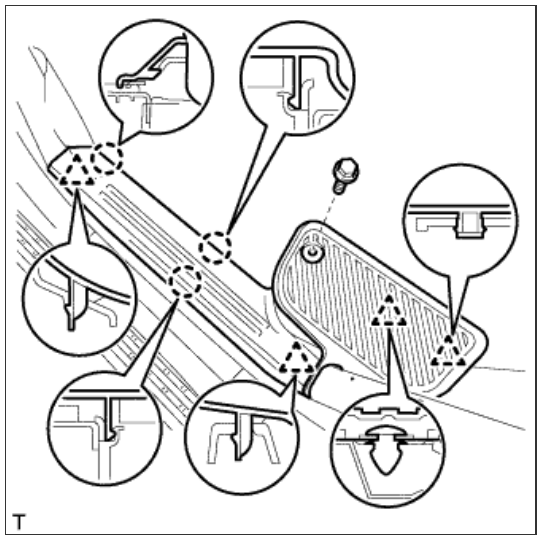

12. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the H side.


13. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. for Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

14. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

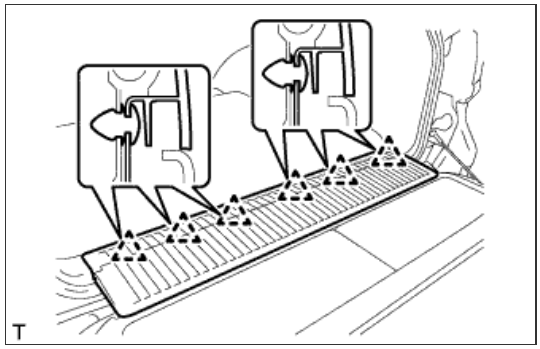

15. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

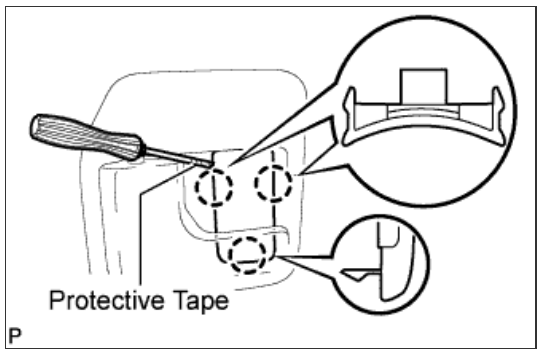

16. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly H (Click here).

b. w/o Sliding Roof:
Remove the front uarter trim panel assembly H (Click here).

17. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).

18. REMOVE AIR DUCT PLUG (w/ Rear Air Conditioning System)

a. Detach the 2 claws and remove the plug.

HINT:

Use the same procedures for both sides.

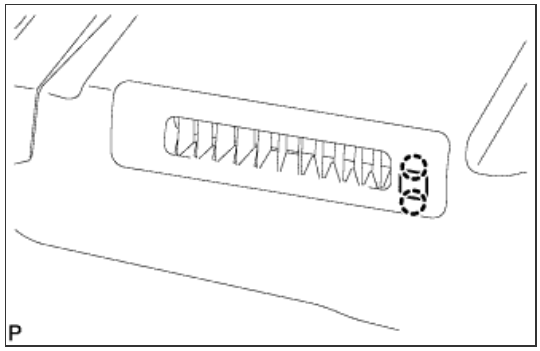


19. REMOVE REAR AIR DUCT GUIDE (w/ Rear Air Conditioning System)

a. Remove the screw.

b. Detach the claw and remove the guide.

HINT:

Use the same procedures for both sides.

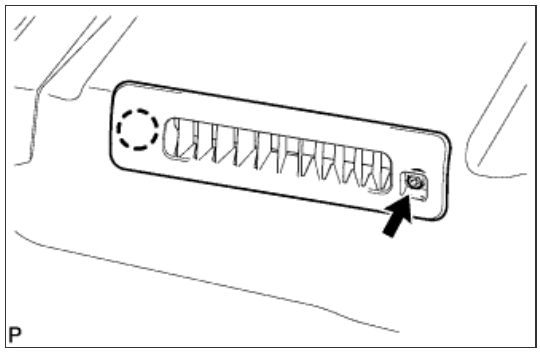


20. REMOVE FRONT FLOOR CARPET ASSEMBLY

a. Fold back the floor carpet.

HINT:


Fold back the carpet until it is possible to remove the rear No. 6 air duct.

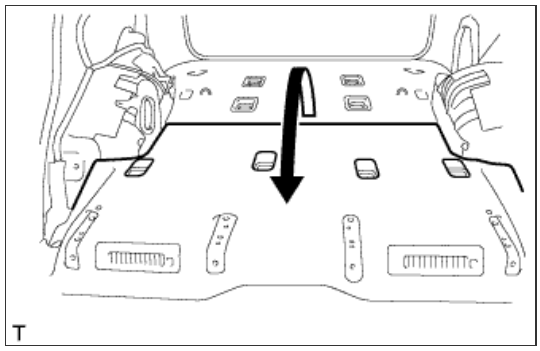


21. REMOVE REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)

a. Disconnect the 2 connectors.

b. Remove the screws and duct.

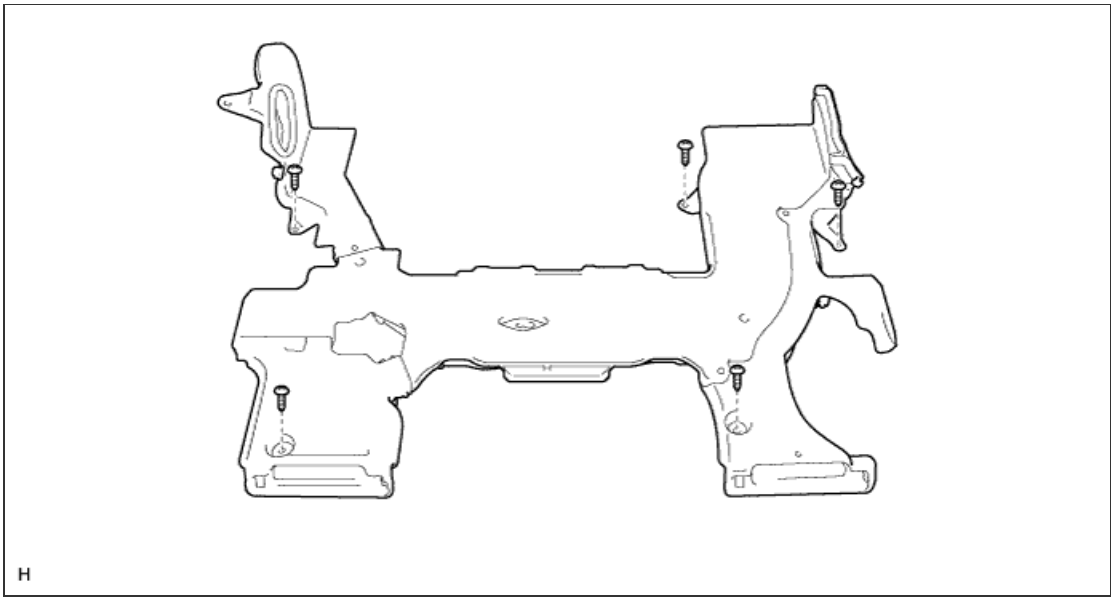

22. REMOVE REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

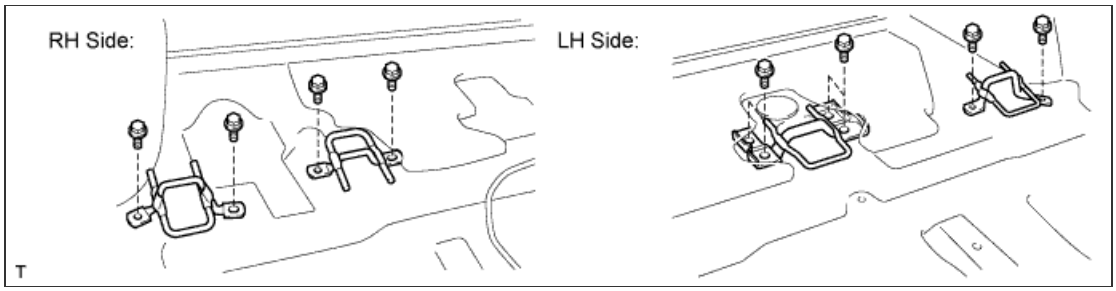

a. Remove the 10 bolts and 4 lock strikers.

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 3 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 6 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

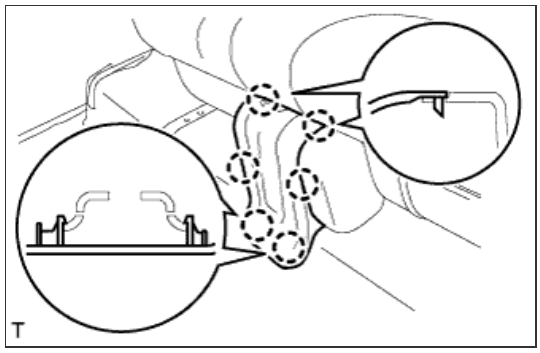


3. REMOVE REAR NO. 5 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 6 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

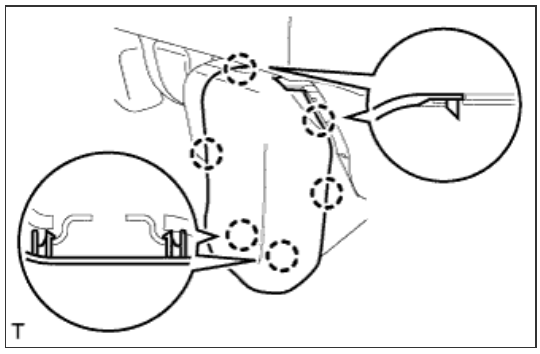

4. REMOVE REAR NO. 2 SEAT CUSHION HINGE COVER


a. Operate the reclining adjuster release handle to move the seat into the position shown in the illustration.

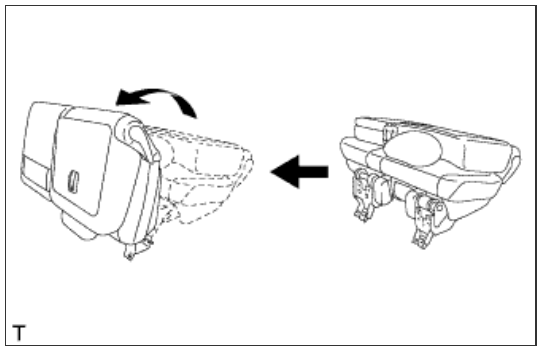

b. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:

Tape the screwdriver tip before use.

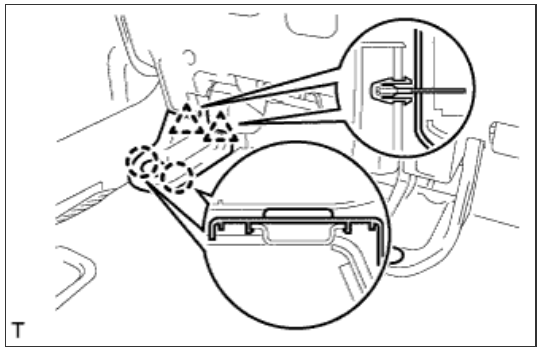


5. REMOVE REAR NO. 4 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:


Tape the screwdriver tip before use.

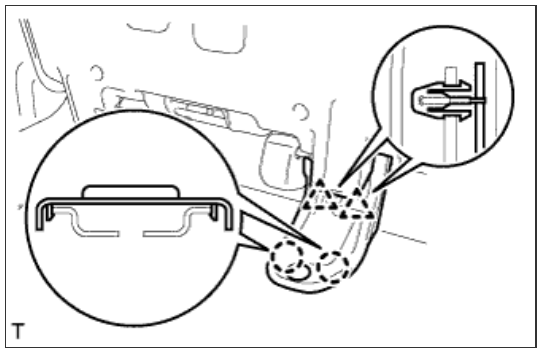

6. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. w/ Rear Seat Side Airbag:
Disconnect the connector.


b. w/ Seat Heater System:
Disconnect the connector.

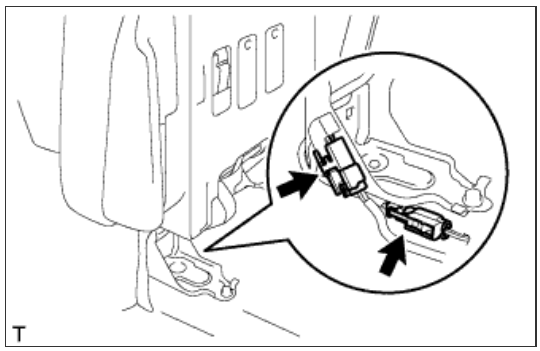

c. Remove the 4 bolts and seat assembly.

NOTICE:

e careful not to damage the vehicle body.

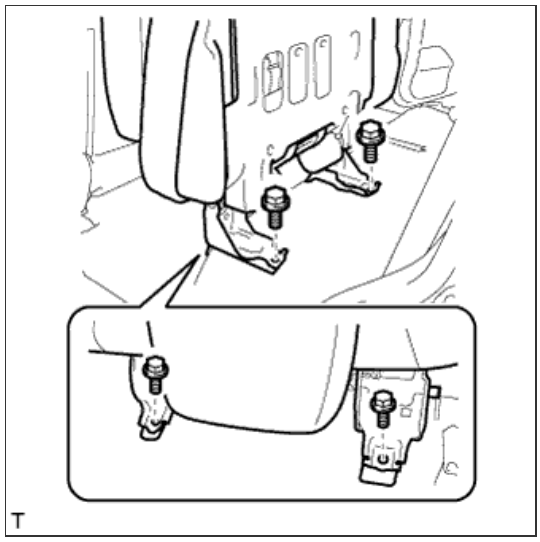


7. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. Remove the rear No. 1 seat assembly RH (Click here).


8. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

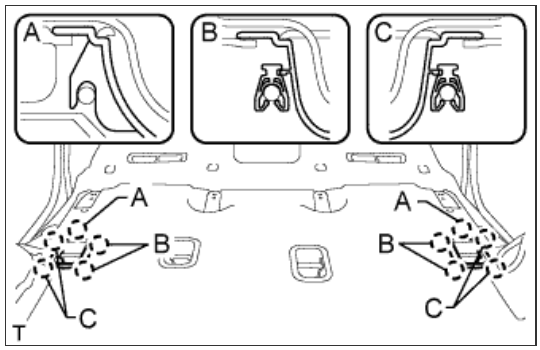

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

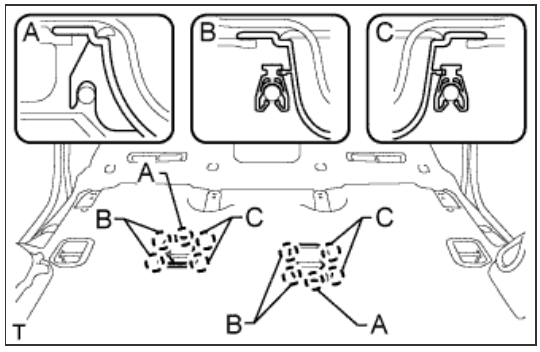


10. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

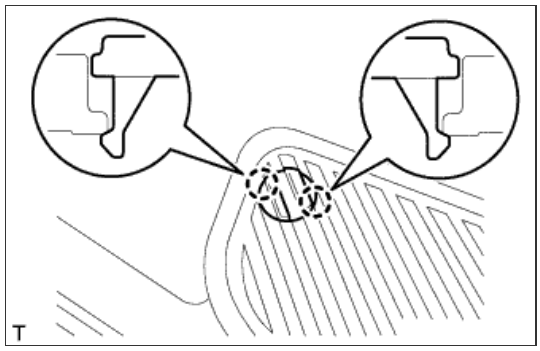

11. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the claws and 4 clips, and remove the scuff plate.

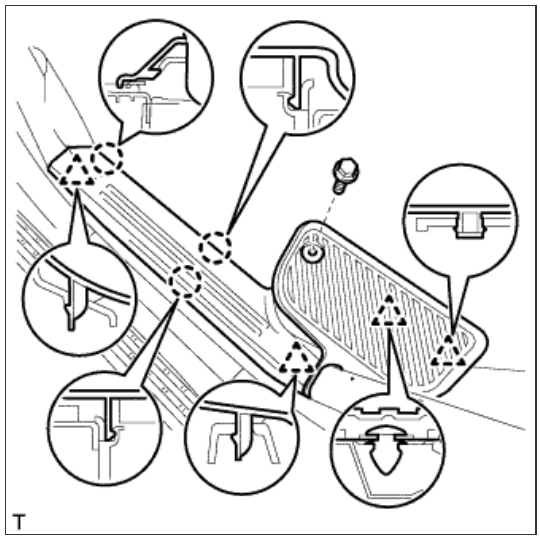

12. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the H side.


13. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. for Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

14. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

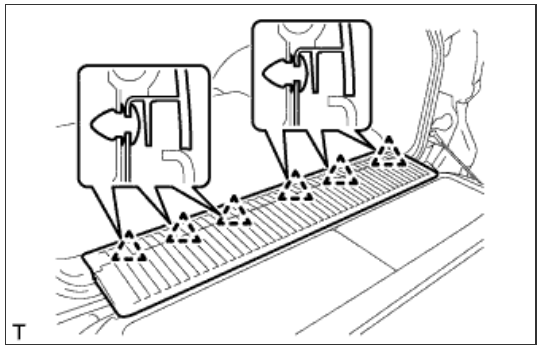

15. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

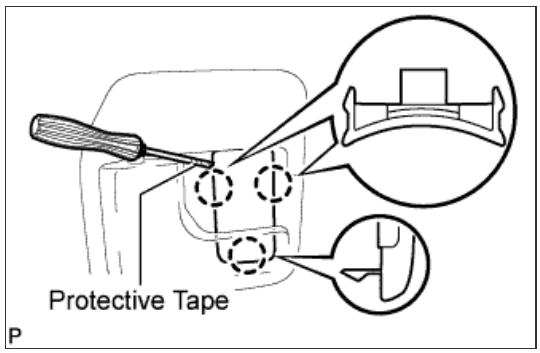

16. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly H (Click here).

b. w/o Sliding Roof:
Remove the front uarter trim panel assembly H (Click here).

17. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).

18. REMOVE AIR DUCT PLUG (w/ Rear Air Conditioning System)

a. Detach the 2 claws and remove the plug.

HINT:

Use the same procedures for both sides.

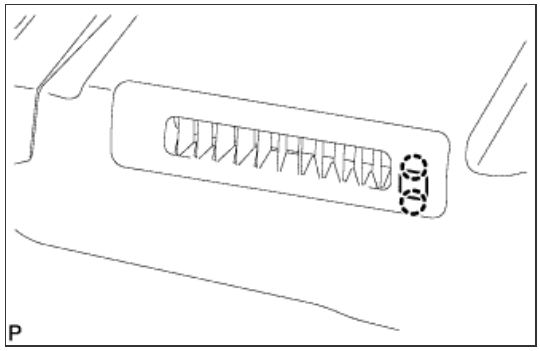


19. REMOVE REAR AIR DUCT GUIDE (w/ Rear Air Conditioning System)

a. Remove the screw.

b. Detach the claw and remove the guide.

HINT:

Use the same procedures for both sides.

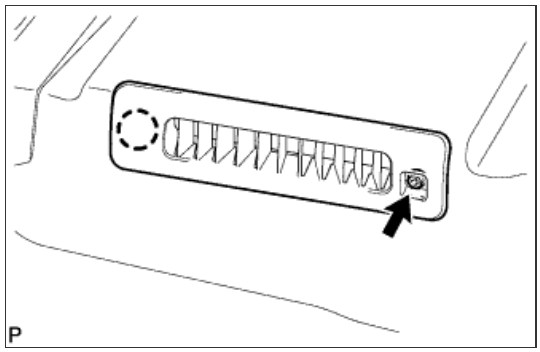


20. REMOVE FRONT FLOOR CARPET ASSEMBLY

a. Fold back the floor carpet.

HINT:


Fold back the carpet until it is possible to remove the rear No. 6 air duct.

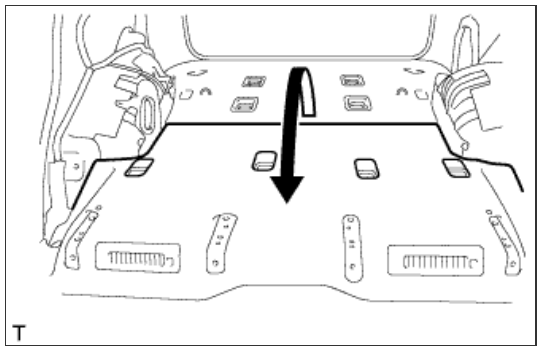


21. REMOVE REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)

a. Disconnect the 2 connectors.

b. Remove the screws and duct.

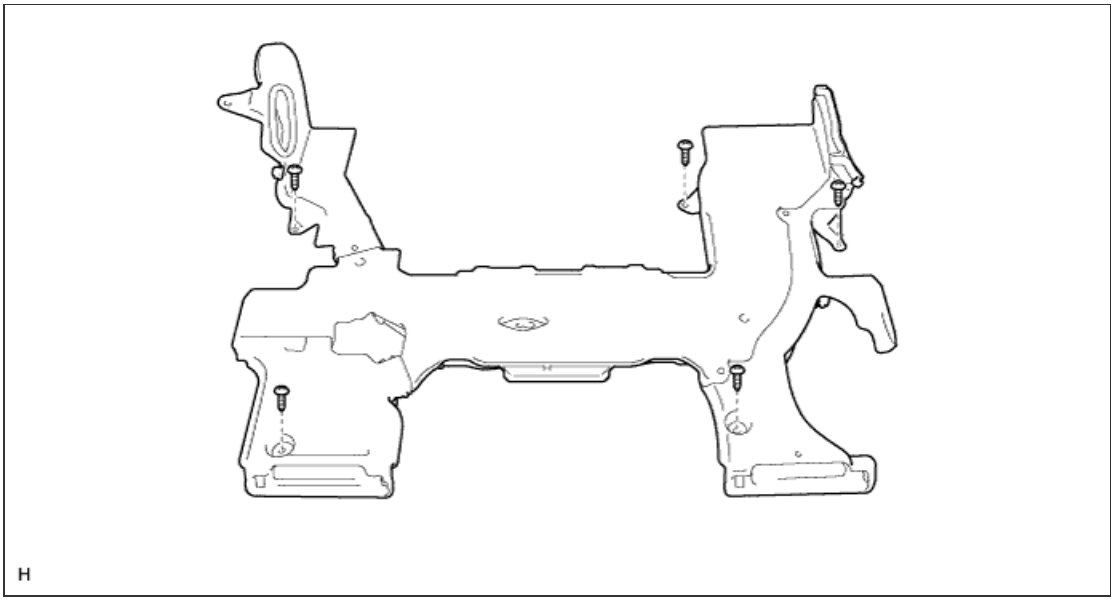

22. REMOVE REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

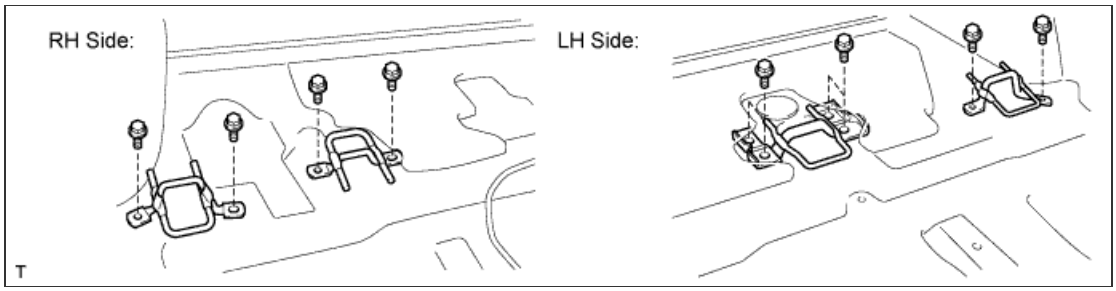

a. Remove the 10 bolts and 4 lock strikers.

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 3 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 6 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

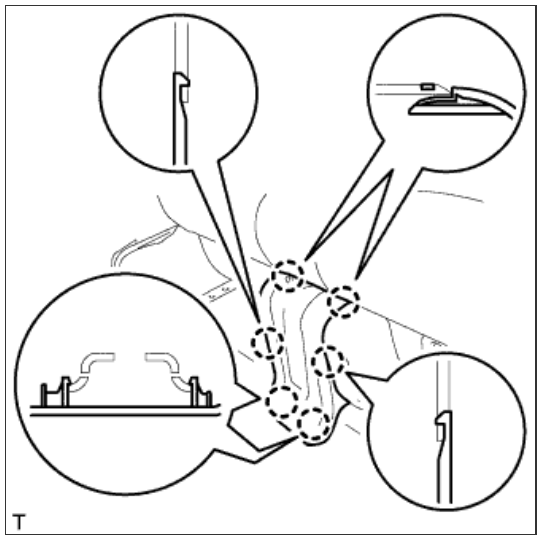


3. REMOVE REAR NO. 5 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 7 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

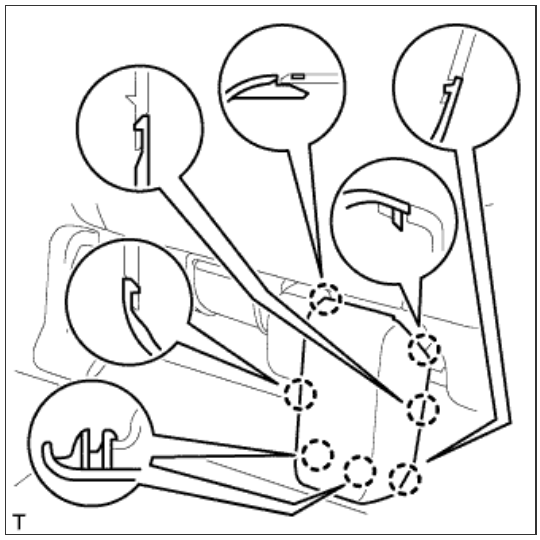

4. REMOVE REAR NO. 2 SEAT CUSHION HINGE COVER


a. Operate the reclining ad uster release handle to move the seat into the position shown in the illustration.

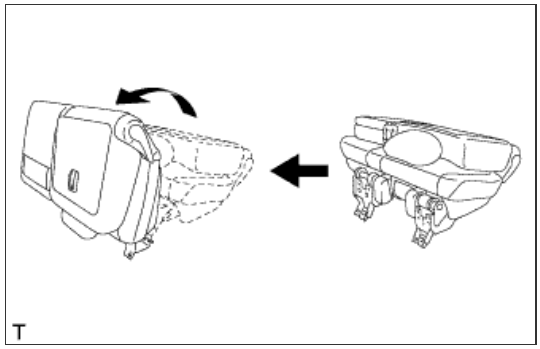

b. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:

Tape the screwdriver tip before use.

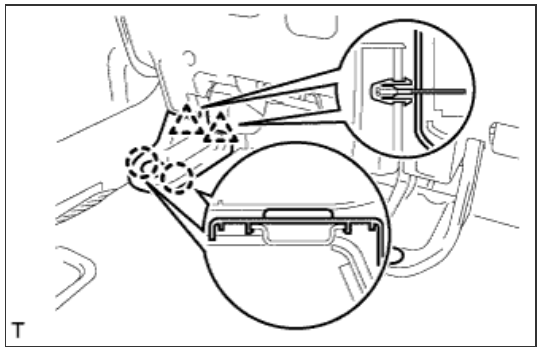


5. REMOVE REAR NO. 4 SEAT CUSHION HINGE COVER

a. Using a screwdriver, detach the 2 claws and 2 clips, and remove the cover.

HINT:


Tape the screwdriver tip before use.

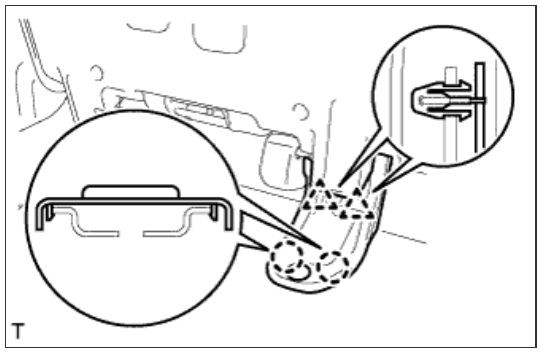

6. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. w/ Rear Seat Side Airbag:
Disconnect the connector.


b. w/ Seat Heater System:
Disconnect the connector.

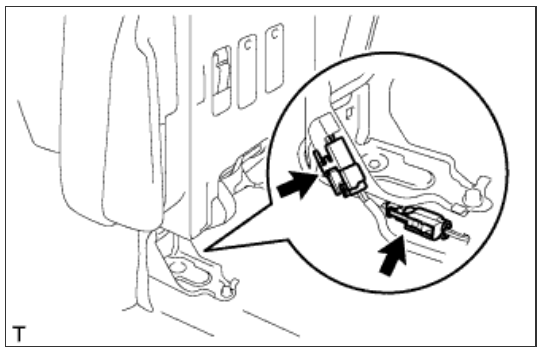

c. Remove the 4 bolts and seat assembly.

NOTICE:

Be careful not to damage the vehicle body.

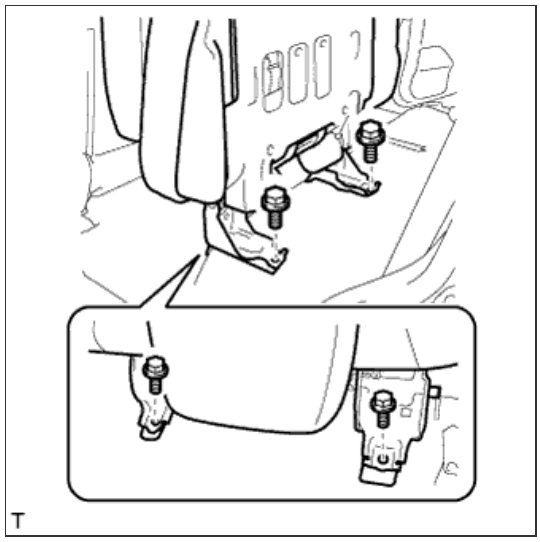


7. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. Remove the rear o. 1 seat assembly RH (Click here).


8. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

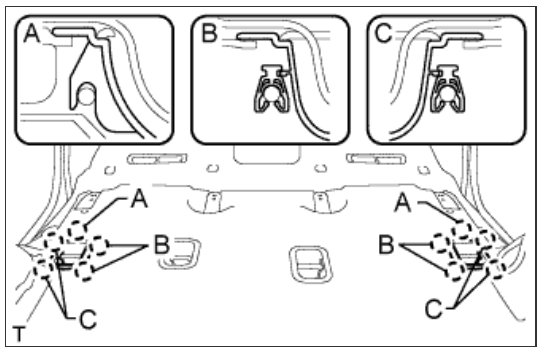

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

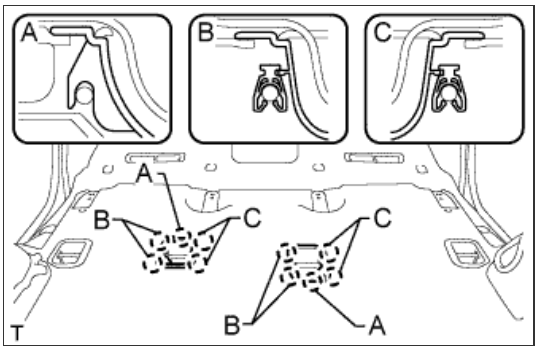


10. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

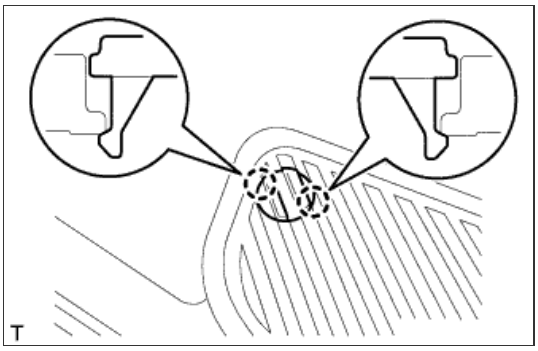

11. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

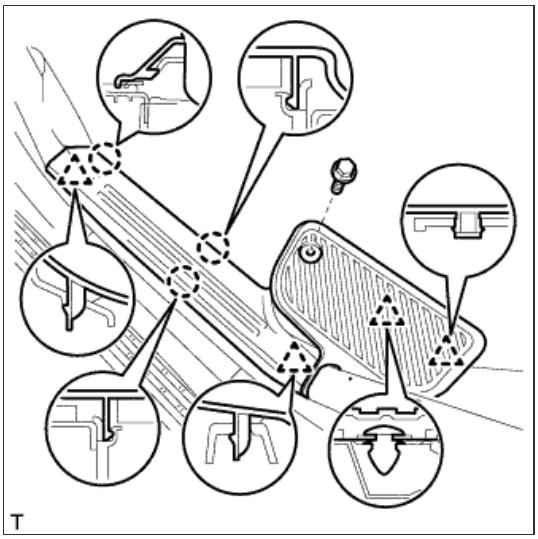

12. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the side.


13. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. for Face to Face Seat Type:
Remove the rear o. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear o. 2 seat assembly (Click here).

14. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

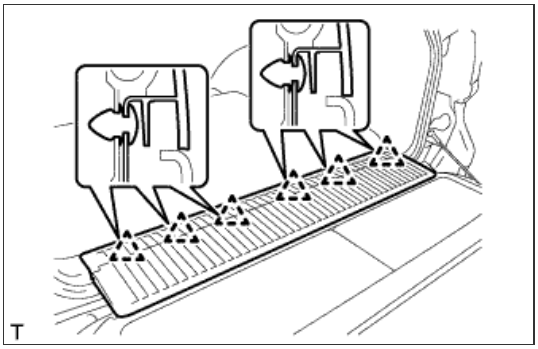

15. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

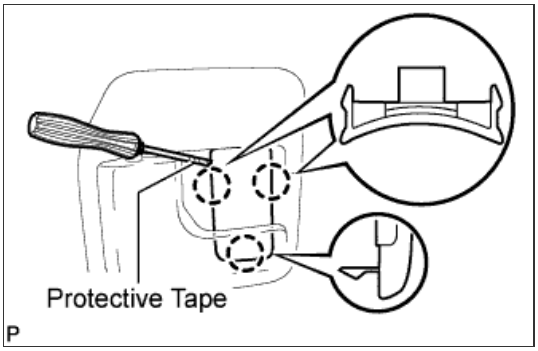

16. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly (Click here).

b. w/o Sliding Roof:
Remove the front uarter trim panel assembly (Click here).

17. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Remove the front uarter trim panel assembly RH (Click here).

18. REMOVE AIR DUCT PLUG (w/ Rear Air Conditioning System)

a. Detach the 2 claws and remove the plug.

HINT:

Use the same procedures for both sides.

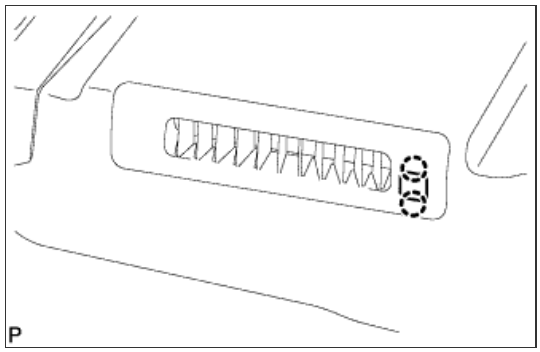


19. REMOVE REAR AIR DUCT GUIDE (w/ Rear Air Conditioning System)

a. Remove the screw.

b. Detach the claw and remove the guide.

HINT:

Use the same procedures for both sides.

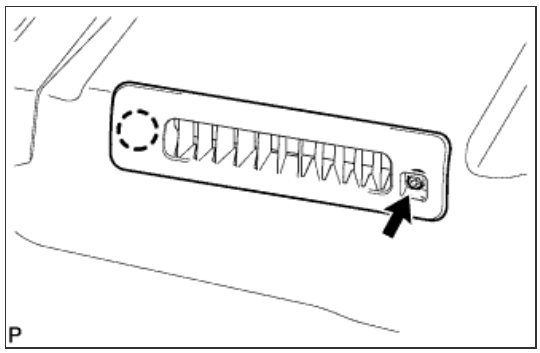


20. REMOVE FRONT FLOOR CARPET ASSEMBLY

a. Fold back the floor carpet.

HINT:


Fold back the carpet until it is possible to remove the rear o. 6 air duct.

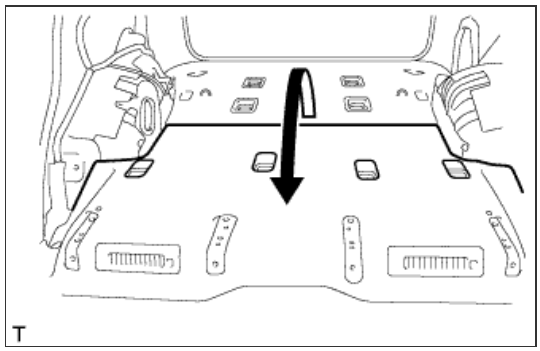


21. REMOVE REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)

a. Disconnect the 2 connectors.

b. Remove the 5 screws and duct.

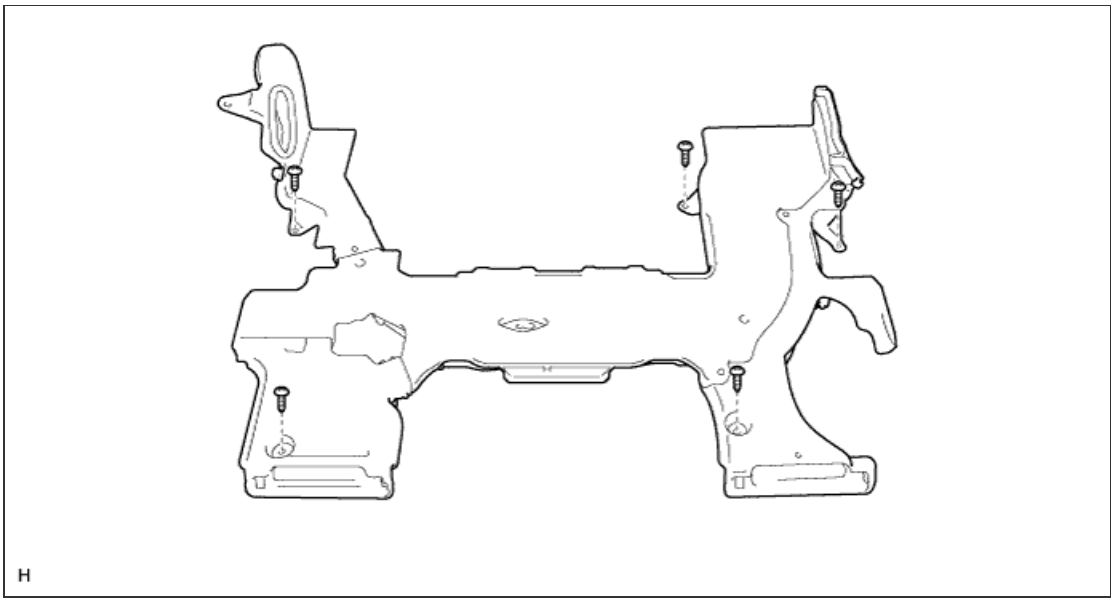

22. REMOVE REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

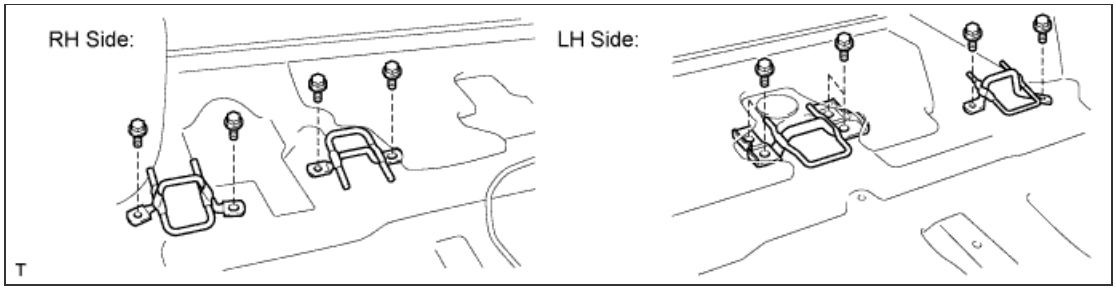

a. Remove the 10 bolts and 4 lock strikers.

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:


- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

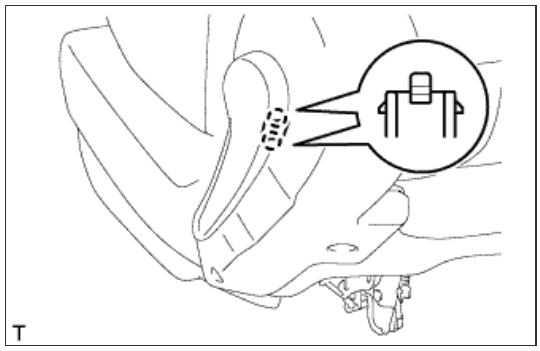

2. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

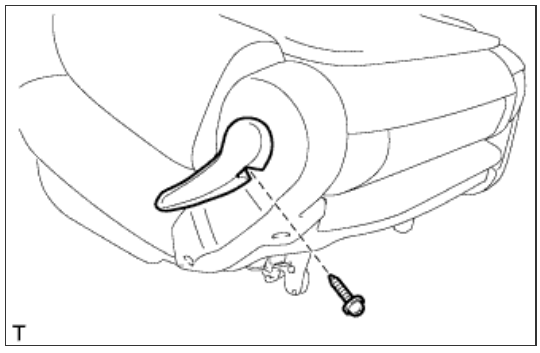

3. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.


b. Detach the claws in the order shown in the illustration, and then remove the cover.

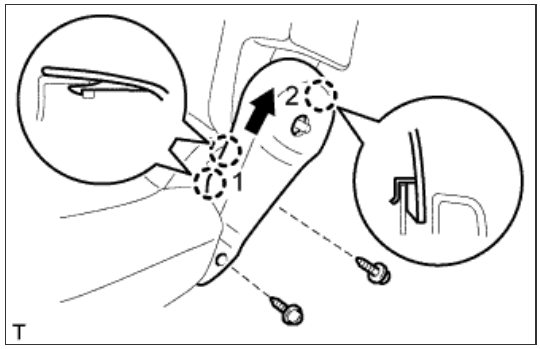

4. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

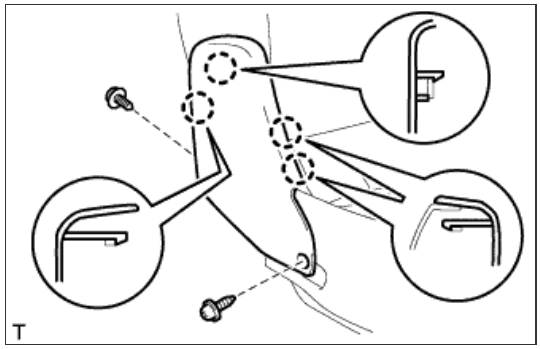


5. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

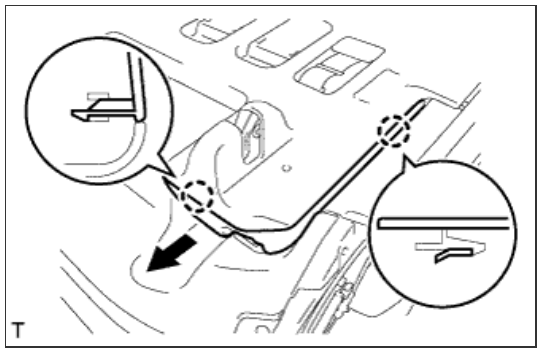


6. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

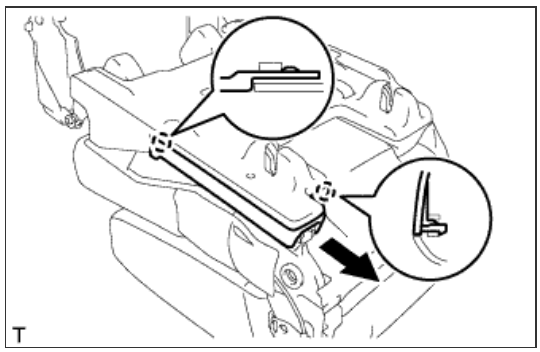


7. REMOVE NO. 1 SEAT CUSHION COVER

a. Detach the 4 claws and remove the 2 covers.

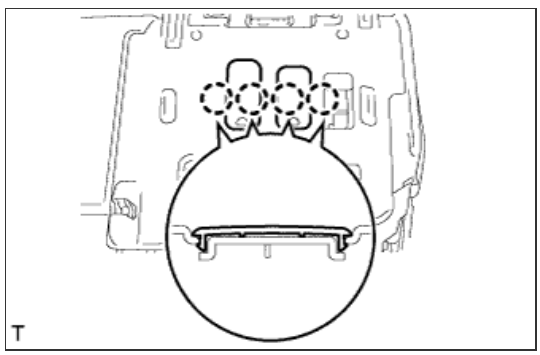


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 4 claws.

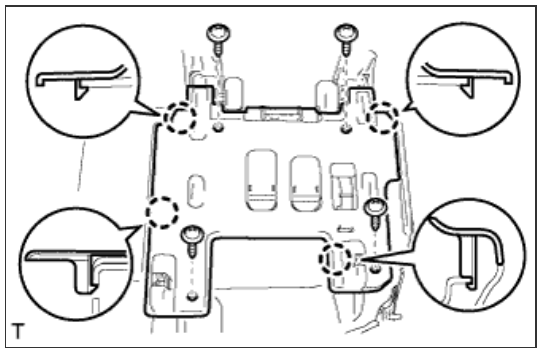

b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

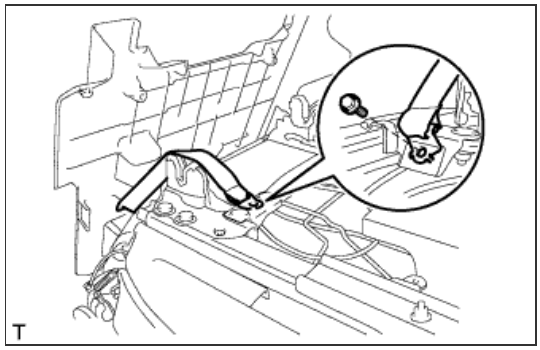

9. REMOVE FOLD SEAT STOPPER BAND ASSEMBLY


a. Remove the fold seat stopper band from the seat leg side cover.

10. REMOVE REAR SEAT SIDE HINGE FEMALE COVER

a. Using a screwdriver, detach the 6 claws and remove the 2 covers.


HINT:

Tape the screwdriver tip before use.

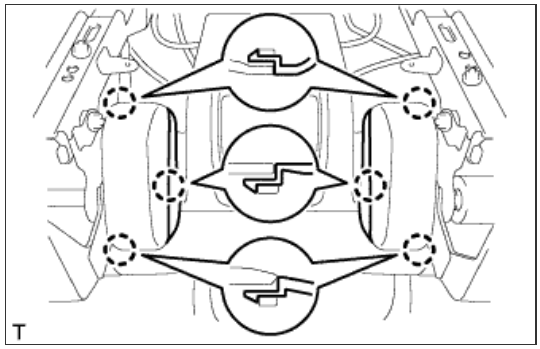

11. REMOVE REAR SEAT SIDE HINGE MALE COVER LH

a. Detach the clip and remove the cover.

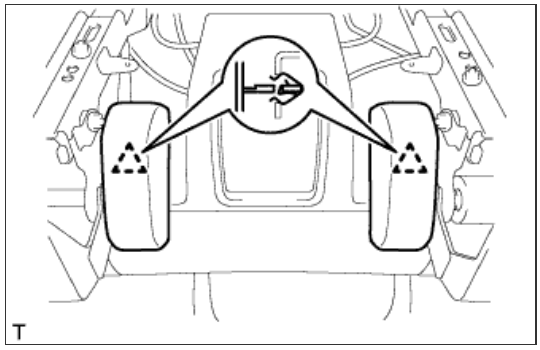


12. REMOVE REAR SEAT SIDE HINGE MALE COVER RH

a. Detach the clip and remove the cover.

13. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

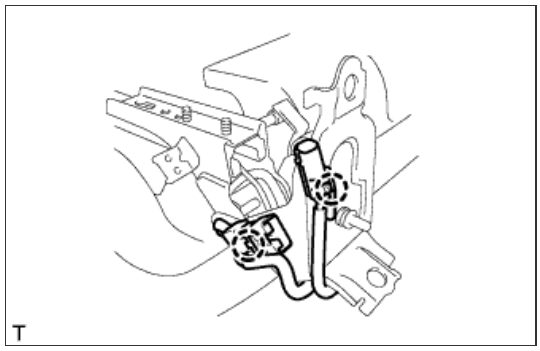

c. Using a clip remover, remove the clip.

d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove wire harness.

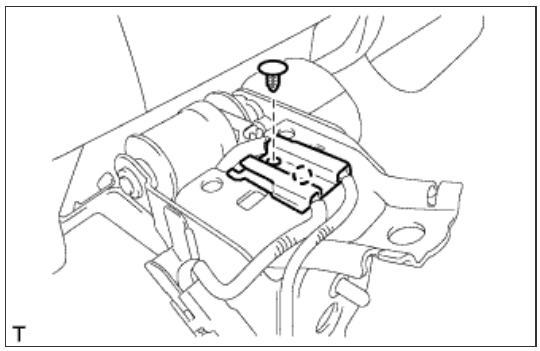


14. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

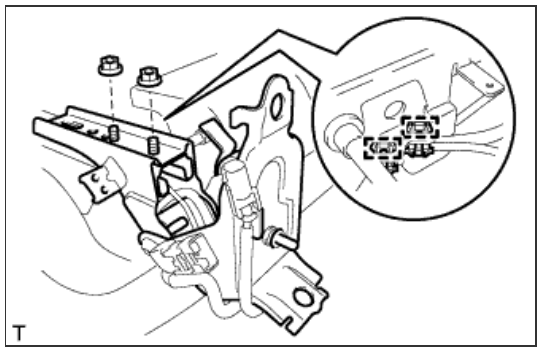


d. Detach the cable clamp and disconnect the cable.

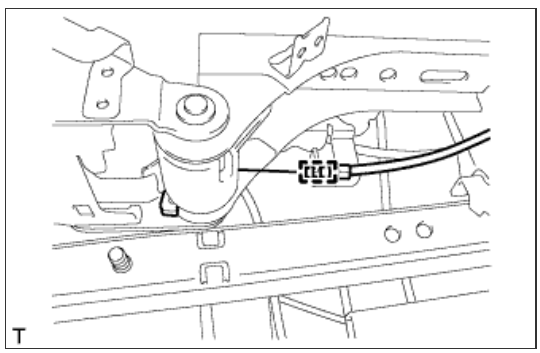


15. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Remove the 2 nuts and hinge.

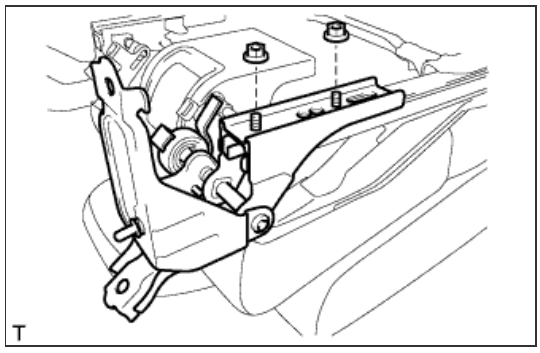


16. REMOVE SEAT BELT ANCHOR COVER CAP

a. Detach the claw and open the cap.

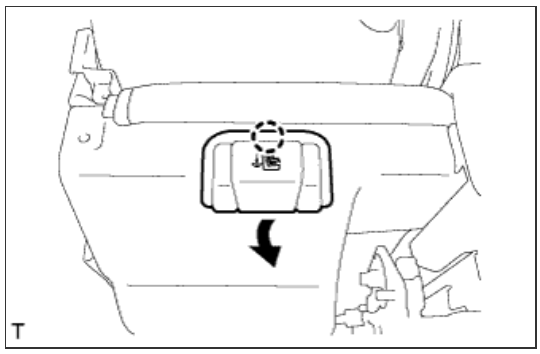


b. Remove the screw and anchor cover cap.

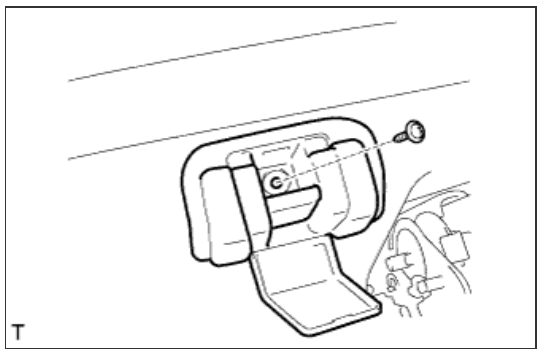

17. REMOVE REAR SEATBACK STAY COVER LH


a. Remove the screw.

b. Detach the 2 claws and remove the cover.

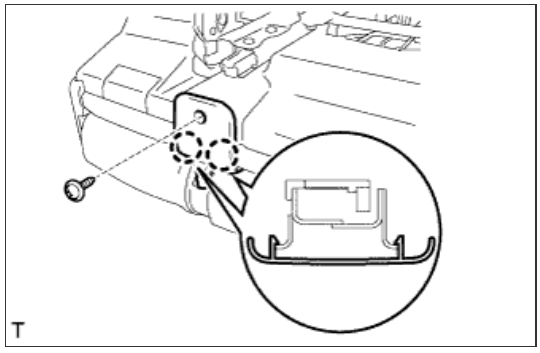


18. REMOVE REAR UNDER SIDE COVER LH

a. Detach the 10 claws.

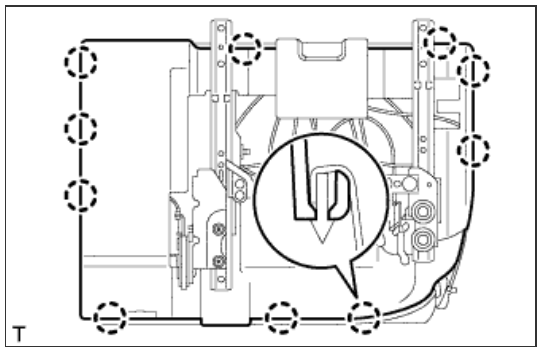


b. Remove the 5 screws.

c. Detach the 2 clips and 2 claws, and remove the cover.

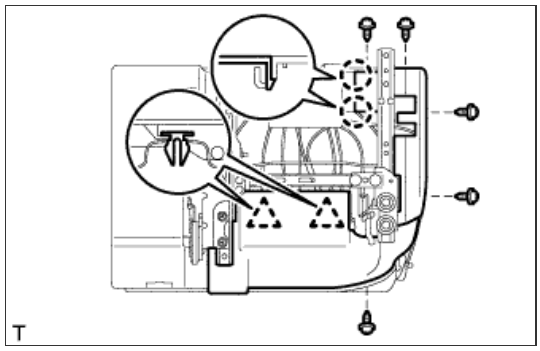

19. REMOVE NO. 1 SEAT CUSHION PLATE


a. Detach the claws and remove the seat cushion plate.

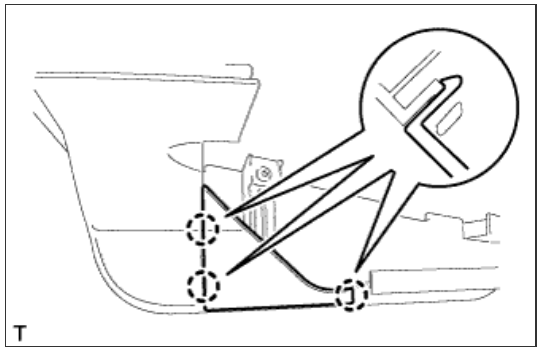

20. REMOVE REAR SEAT CUSHION COVER RH

a. Remove the 4 screws.


b. Detach the 2 claws and remove the cover.

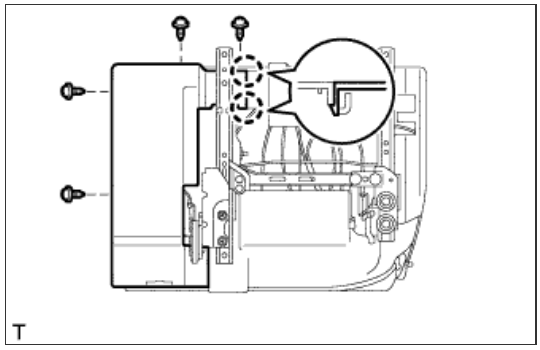

21. REMOVE REAR SEAT UNDER TRAY COVER LH


a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

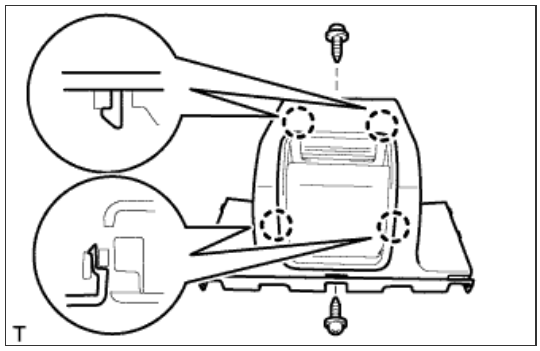


22. REMOVE REAR SEAT TRACK HANDLE SUB-ASSEMBLY


a. Remove the 2 screws and seat track handle.

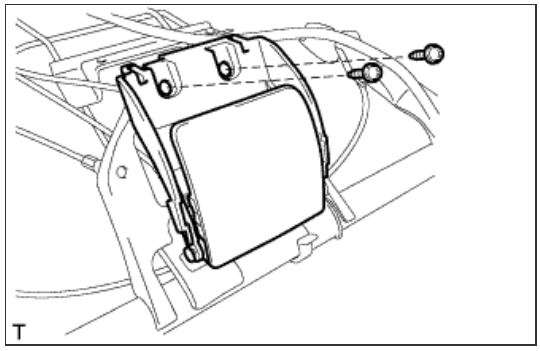

b. Detach the 2 cable clamps and disconnect the 2 cables.

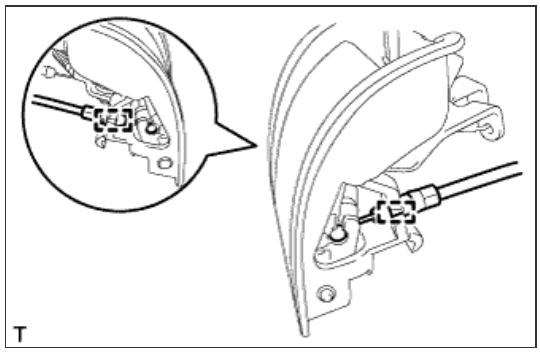

c. Detach the cable clamp and disconnect the cable.

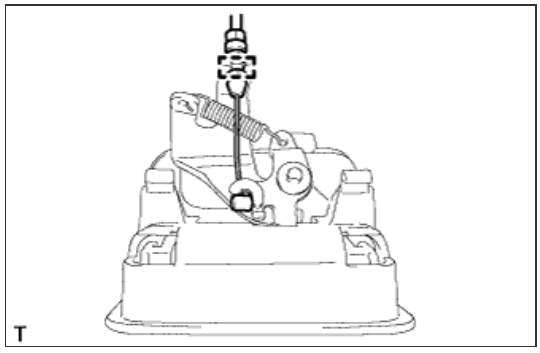


23. REMOVE FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY

24. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Remove the bolt and belt.


HINT:

The No. 1 seat point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, it becomes disconnected when the bolt is removed.

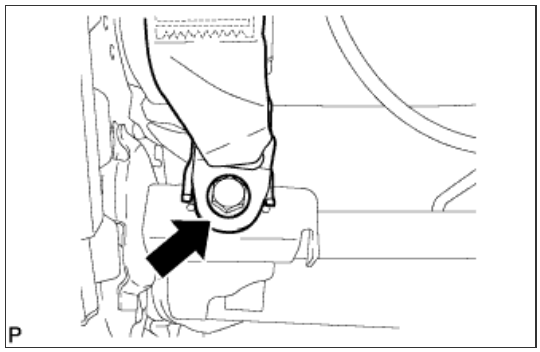

25. DISCONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Disconnect the belt anchor.

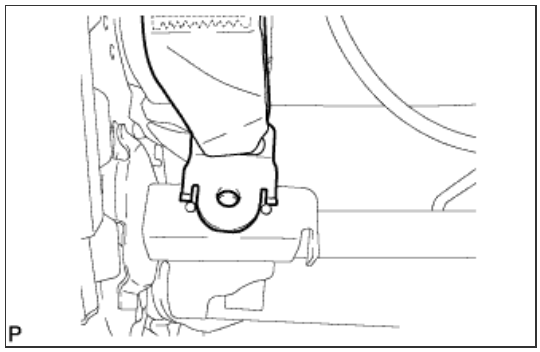

26. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.

ii. Remove the side airbag wire harness through the hole in the seat cushion.


b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

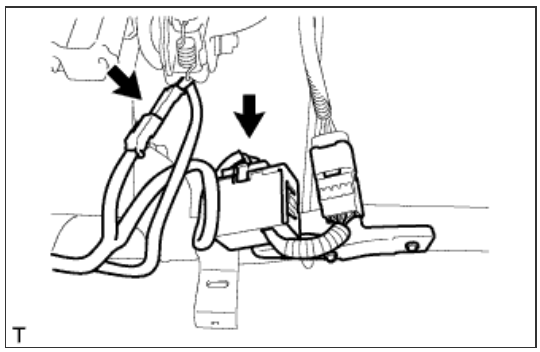


ii. Remove the seatback heater wire harness through the hole in the seat cushion.

c. Remove the seat cushion cover with pad.

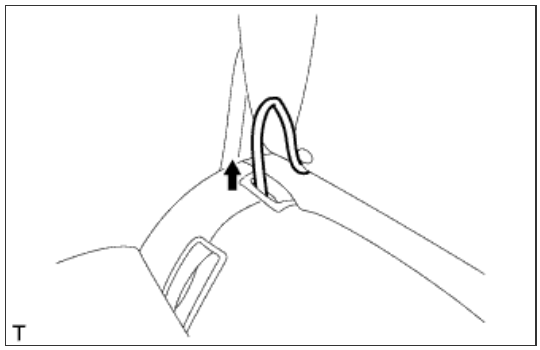


27. REMOVE REAR SEPARATE TYPE SEAT CUSHION COVER

a. Detach the pieces of fastening tape.

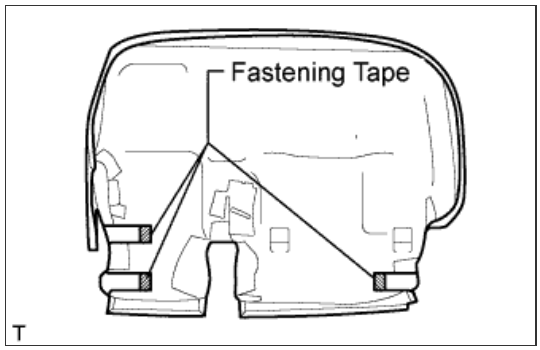


b. Remove the hog rings and cover.

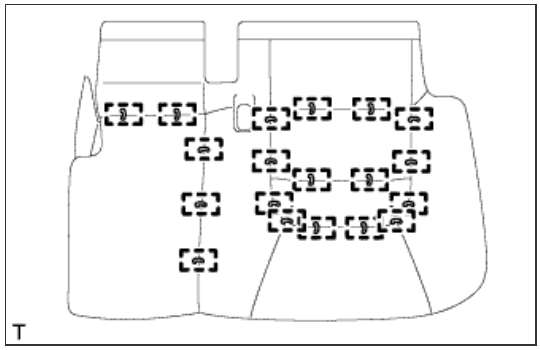

28. REMOVE REAR SEAT CUSHION HEATER ASSEMBLY (w/ Seat Heater System)

a. ut off the tack pins which fasten the seat heater to the seat cushion cover, and then remove the seat cushion heater from the seat cushion cover.

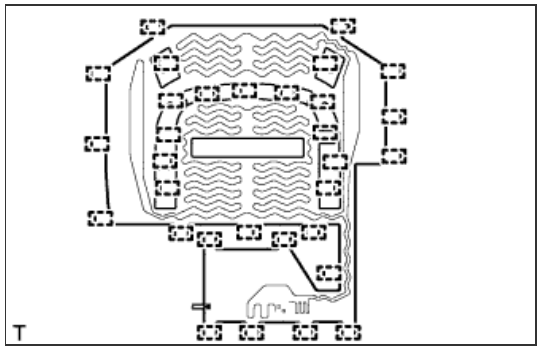


29. REMOVE REAR SEATBACK COVER

a. Using a screwdriver, detach the 4 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

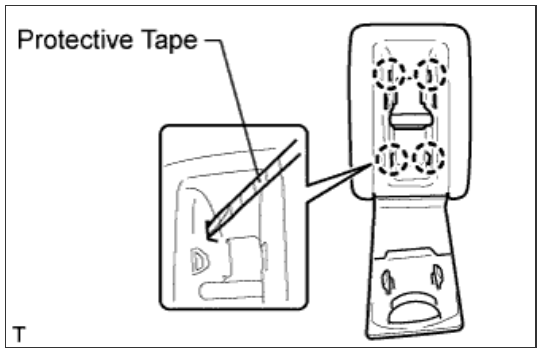


30. REMOVE REAR SEATBACK BOARD SUB-ASSEMBLY LH

a. w/ enter Armrest:

i. Detach the 2 claws on the top of the board.


ii. ull up the board to detach the 2 claws on the bottom of the board and remove it.

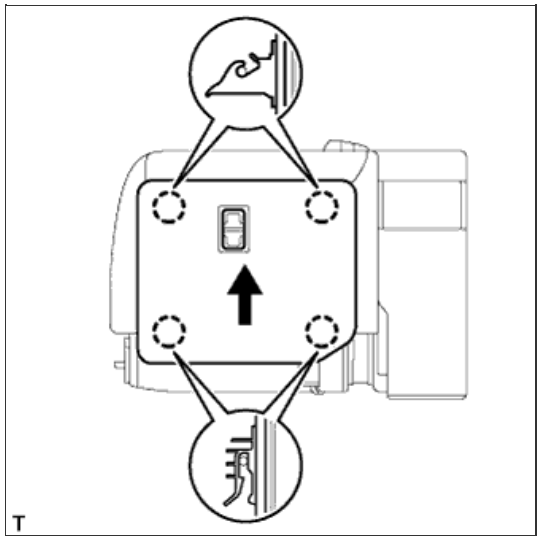

b. w/o enter Armrest:

i. Detach the claws on the top of the board.


ii. ull up the board to detach the claws on the bottom of the board and remove it.

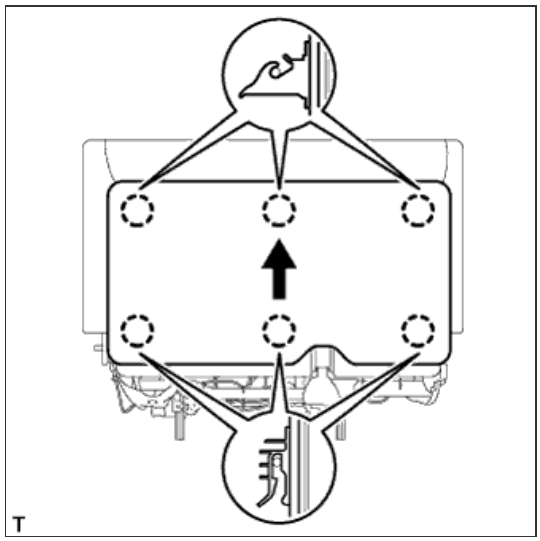


31. REMOVE REAR SEAT HEADREST ASSEMBLY

32. REMOVE REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ enter Armrest:
Detach the 4 claws and remove the 2 supports.

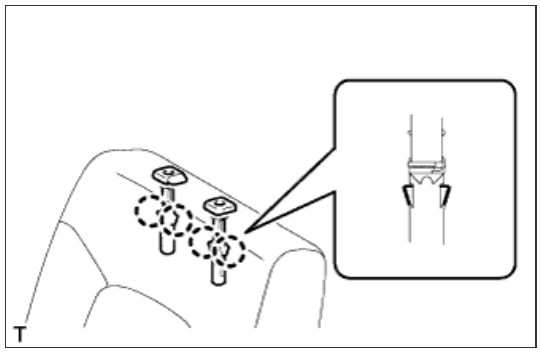

b. w/o enter Armrest:
Detach the 8 claws and remove the 4 supports.

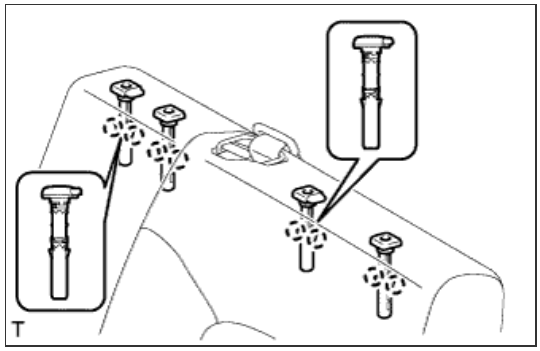


33. REMOVE SHOULDER BELT ANCHOR COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

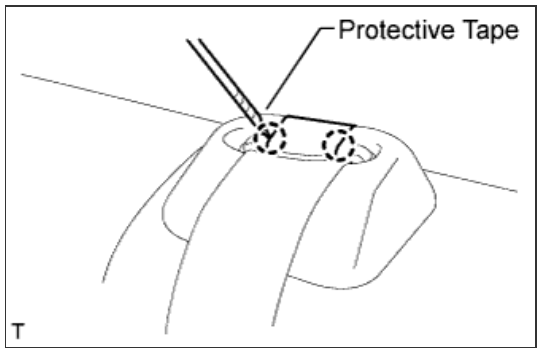

34. REMOVE REAR SEAT BELT HOLE COVER LH


a. Remove the screw.

b. Detach the 4 claws and remove the cover.

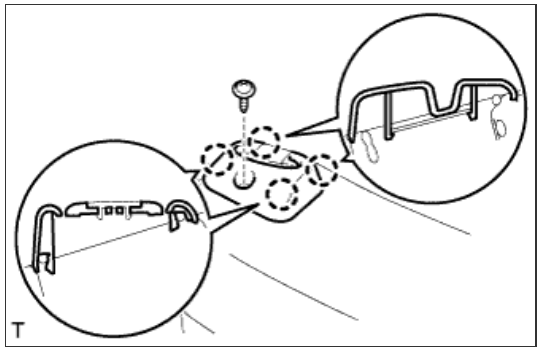

35. REMOVE SEATBACK COVER WITH PAD


a. w/ enter Armrest:
Remove the hog rings.

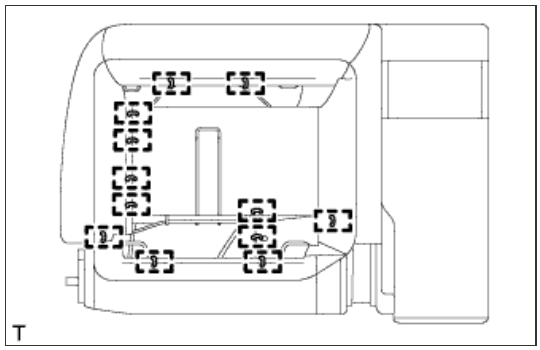

b. w/o enter Armrest:

i. Remove the hog rings.


ii. Detach the hook.

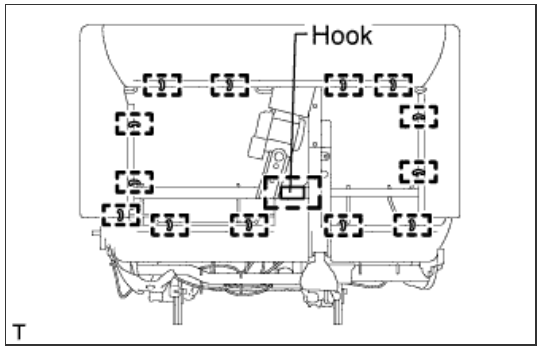

c. w/ Rear Seat Side Airbag:


i. Remove the cap nut and seatback cover bracket from the seat frame.

ii. Remove the side airbag wire harness through the hole in the seatback.

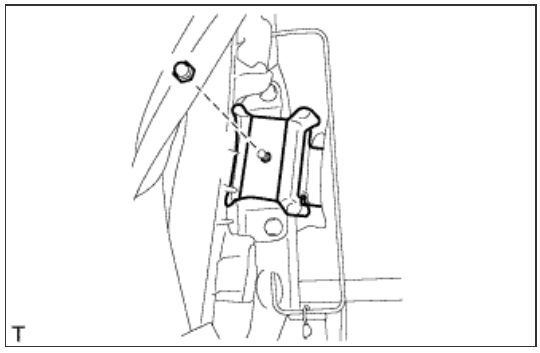


d. w/ Seat Heater System:


i. ut the cable tie and disconnect the seatback heater wire harness.

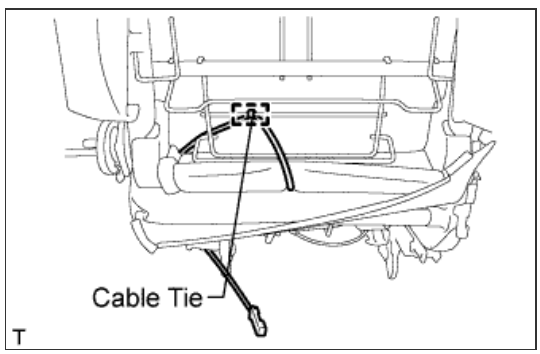

ii. Remove the seatback heater wire harness through the hole in the seatback.

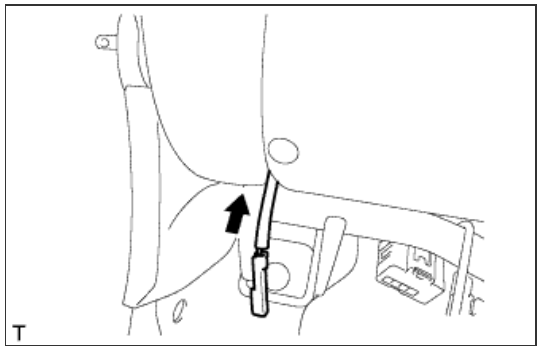


e. w/ enter Armrest:
ull the seat belt into the inside of the seat.

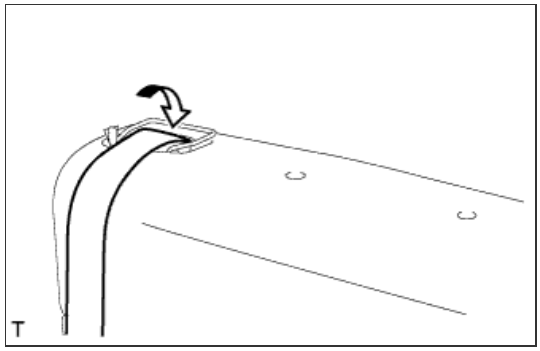


f. w/o enter Armrest:
ull the seat belt into the inside of the seat.

g. Remove the seatback cover with pad.

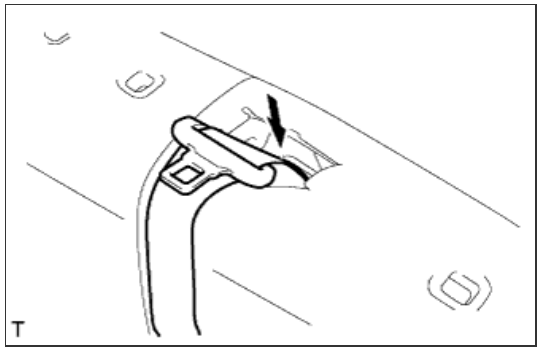


36. REMOVE REAR SEPARATE TYPE SEATBACK COVER


a. w/ Rear Seat Side Airbag:
Disconnect the seatback cover bracket from the seatback pad.

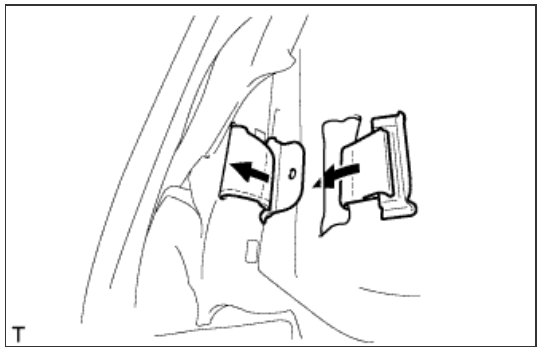

b. w/ enter Armrest:
Remove the hog rings and rear seatback cover.

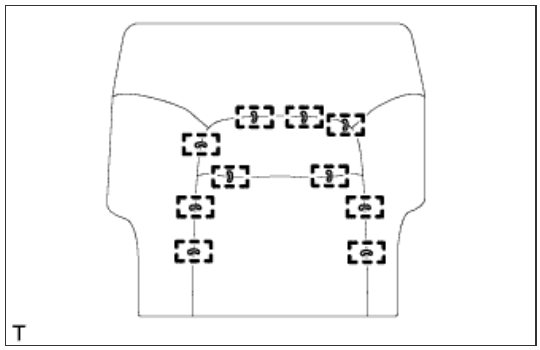


c. w/o enter Armrest:
Remove the hog rings and rear seatback cover.

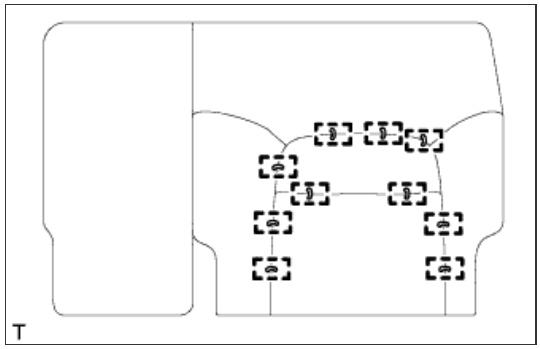

37. REMOVE REAR SEATBACK HEATER ASSEMBLY (w/ Seat Heater System)

a. ut off the tack pins which fasten the seatback heater to the seatback cover, and then remove the seatback heater from the seatback cover.

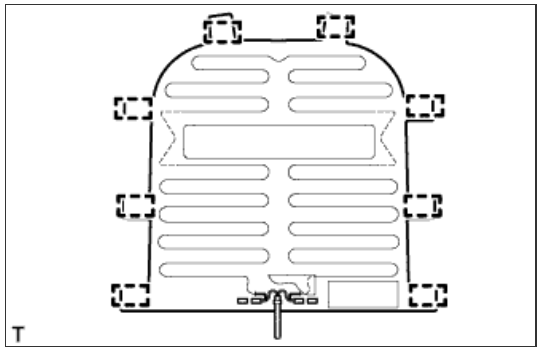


38. REMOVE SEATBACK STOPPER PLATE

a. w/ enter Armrest:

i. Using a T40 TOR socket, remove the 2 bolts.

ii. Remove the bolt and stopper plate.

iii. Remove the bush from the stopper plate.

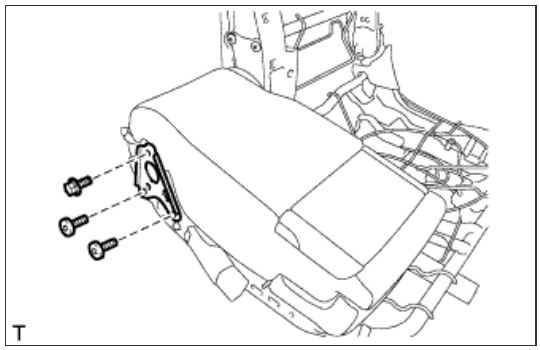


b. w/o enter Armrest:

i. Using a T40 TOR socket, remove the 2 bolts.


ii. Remove the bolt and stopper plate.

iii. Remove the bush from the stopper plate.

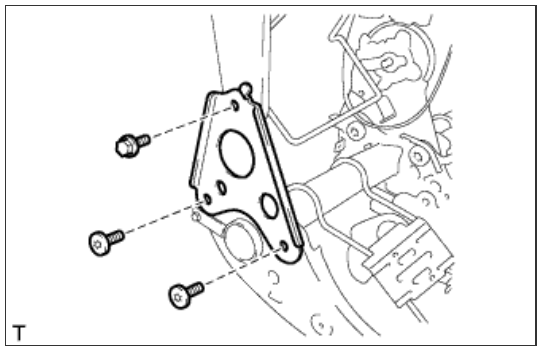

39. REMOVE REAR CENTER SEAT ARMREST ASSEMBLY (w/ Center Armrest)


a. Using a T40 TOR socket, remove the 2 bolts and center seat armrest.

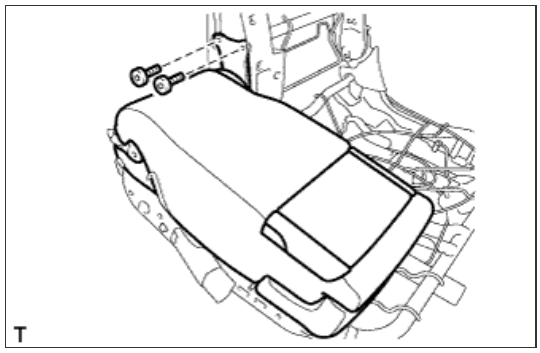

40. REMOVE REAR CENTER SEAT HEADREST ASSEMBLY (w/ Center Armrest)


41. REMOVE NO. 1 SEAT ARMREST PLATE (w/ Center Armrest)

a. Using a moulding remover, detach the 4 clips and 2 claws, and then remove the 2 armrest plates.

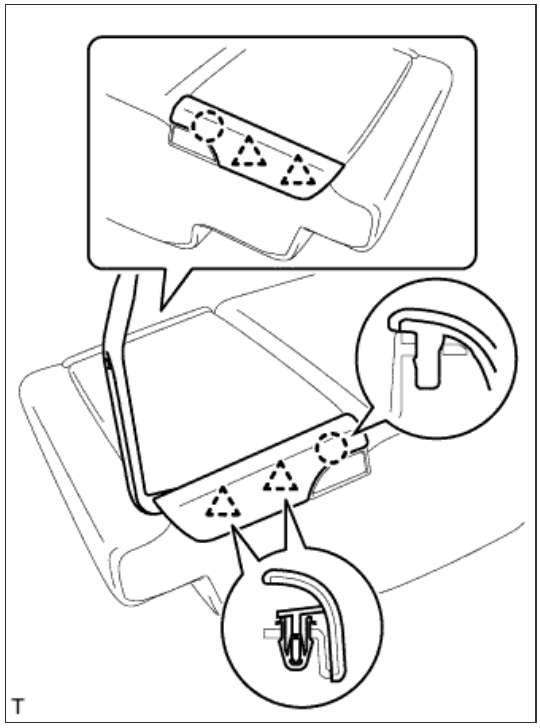


42. REMOVE CUP HOLDER ASSEMBLY (w/ Center Armrest)

a. Remove the 2 screws.

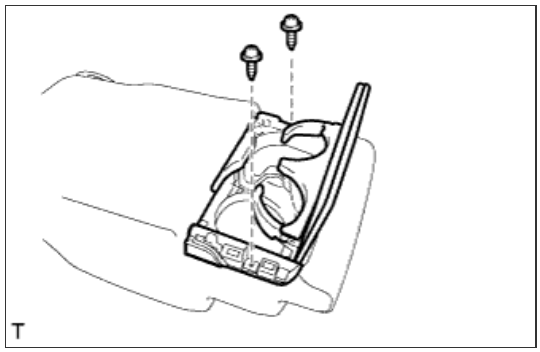


b. Using a moulding remover, detach the 2 clips and remove the cup holder.

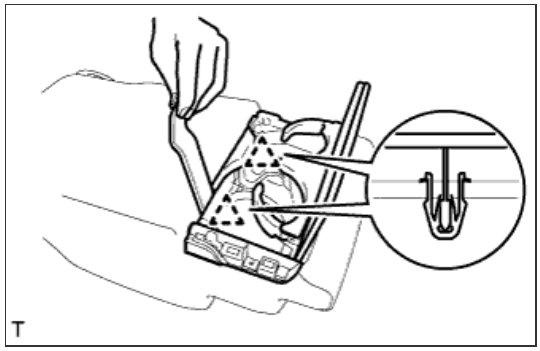

43. REMOVE REAR SEAT RECLINING COVER LH

a. Remove the screw.


b. Detach the claw and remove the cover.

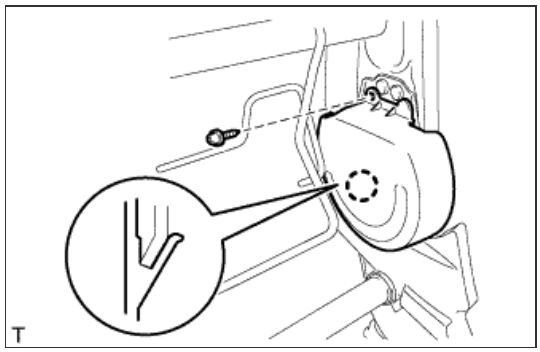

44. REMOVE REAR NO. 2 SEAT RECLINING COVER LH

a. Remove the screw.


b. Detach the clamp and remove the cover.

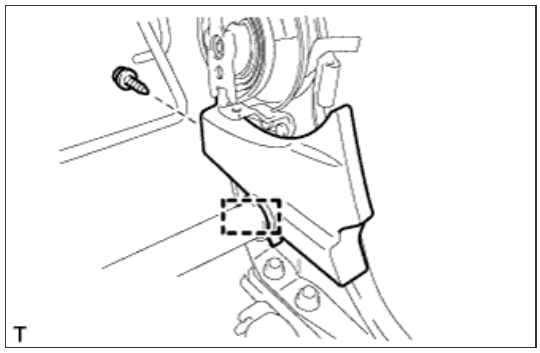

45. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the screw.


b. Detach the claw and remove the cover.

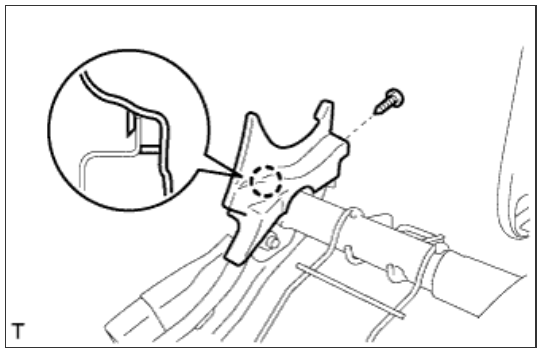

46. REMOVE REAR SEATBACK HINGE COVER LH

a. Remove the screw.


b. Detach the claw and remove the cover.

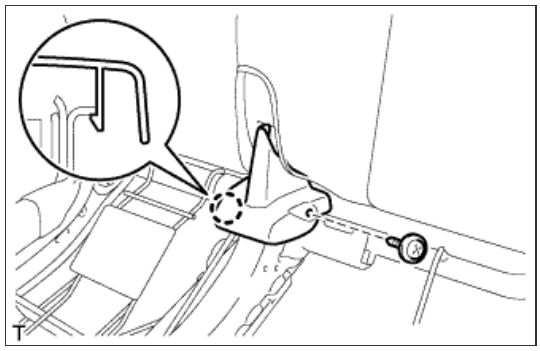

47. REMOVE REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH


a. Remove the 4 screws.

b. Detach the 4 claws and remove the cover.

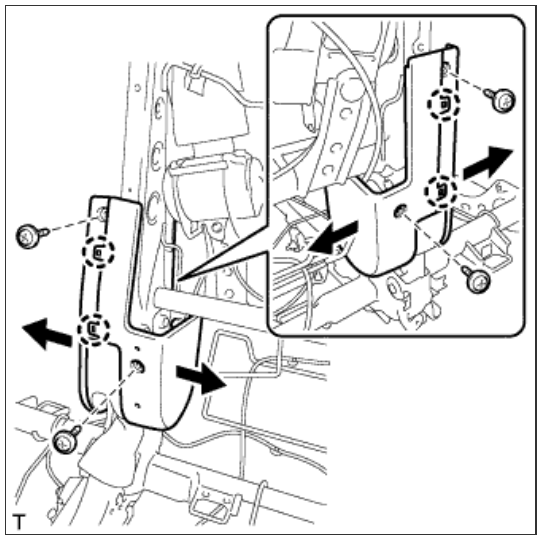

48. REMOVE REAR SEAT SHOULDER BELT HOLE COVER LH


a. Using a screwdriver, detach the claws and remove the shoulder belt hole cover.

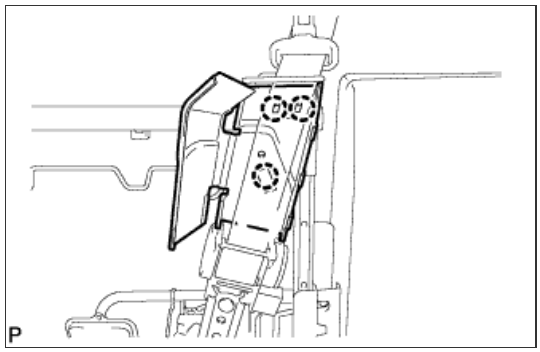

49. REMOVE NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Remove the nuts and belt sensor.


b. Remove the nut and then remove the outer belt.

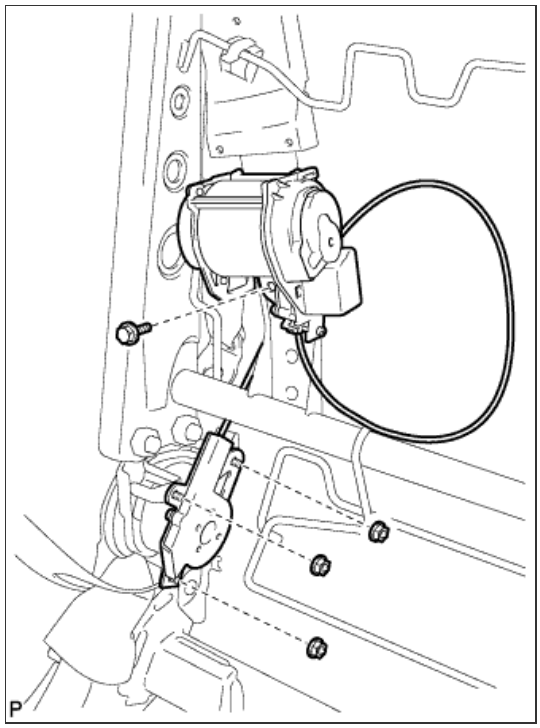

50. REMOVE RECLINING ADJUSTING CABLE ASSEMBLY LH

a. Detach the 2 cable clamps and disconnect the cable.


b. Detach the clamp and remove the adjusting cable.

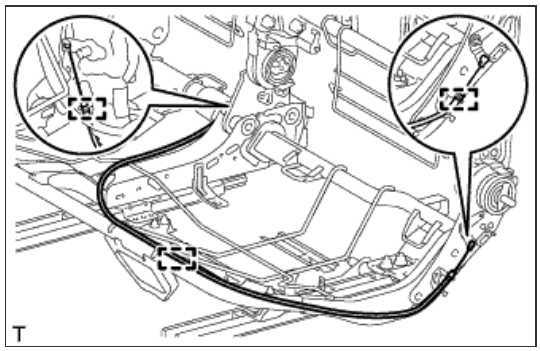

51. REMOVE NO. 2 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Detach the 2 cable clamps and disconnect the cable.

b. Detach the clamp and remove the lock control cable.

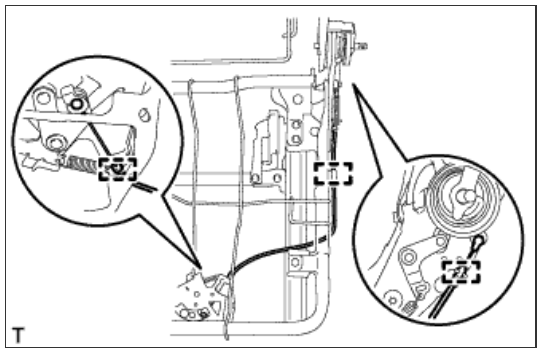


52. REMOVE REAR SEATBACK FRAME SUB-ASSEMBLY LH


a. LH Side:
Using a T40 TOR socket, remove the 2 bolts.

b. RH Side:
Using a T55 TOR socket, remove the 2 bolts.

c. Remove the seatback frame sub assembly.

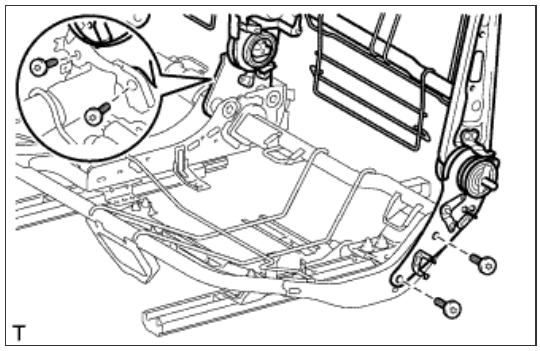


d. Remove the lower seatback cover.

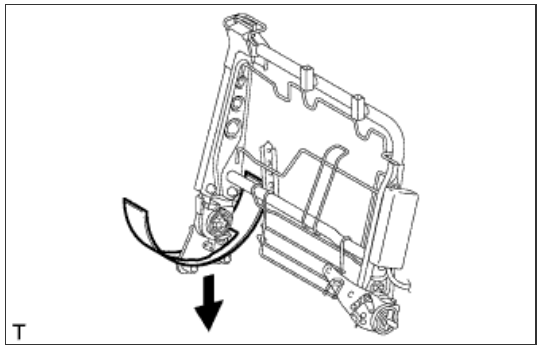

53. REMOVE FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY


a. Detach the 2 cable clamps and disconnect the 2 cables.

b. Remove the 2 fold seat lock cables.

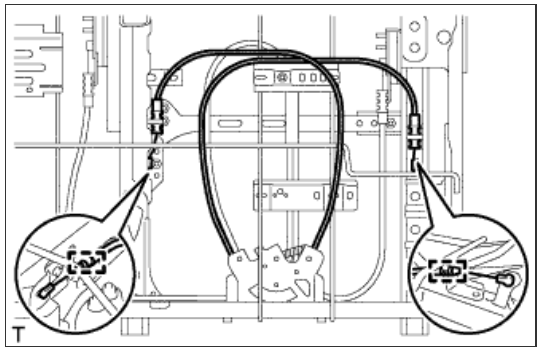

54. REMOVE REAR NO. 1 SEAT LOCK CABLE ASSEMBLY


a. Remove the 2 nuts and lower seat track bracket.

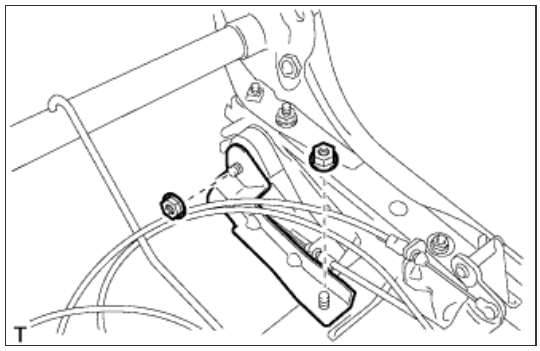

b. ut the cable tie and disconnect the cable.

c. Detach the cable clamps and disconnect the cables.


d. Detach the clamp and remove the seat lock cable.

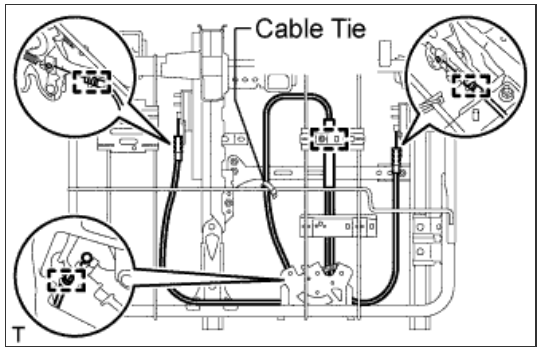

55. REMOVE REAR SEAT CUSHION HOLDER BRACKET LH (w/ Seat Heater System)


a. Disconnect the seat wire connector.

b. Remove the 2 screws and holder bracket.

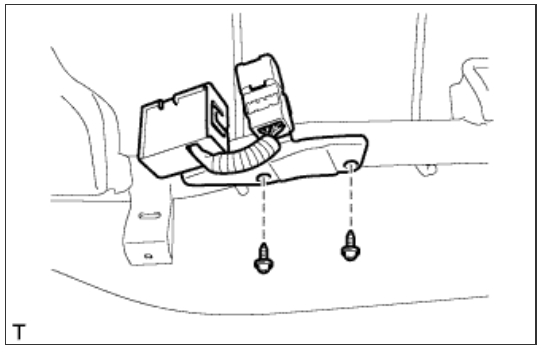


56. REMOVE SEAT HEATER CONTROL SUB-ASSEMBLY LH (w/ Seat Heater System)

a. Detach the 2 claws and remove the seat heater control.

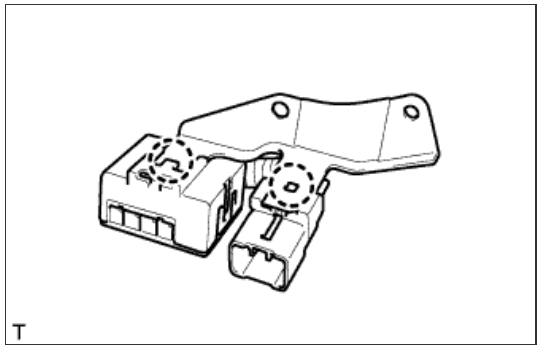


57. REMOVE REAR SEAT INNER BELT ASSEMBLY

a. Remove the bolt and belt.

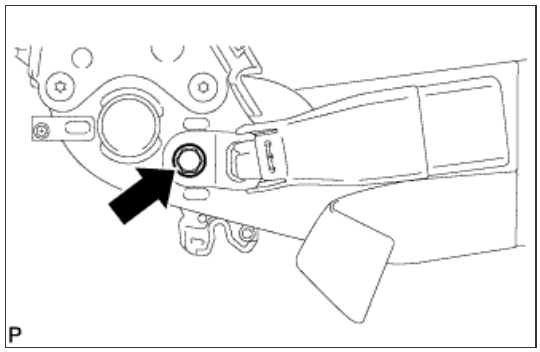

58. REMOVE NO. 1 SEAT LEG ASSEMBLY LH


a. Using a T40 TOR socket, remove the 2 bolts and seat leg assembly.

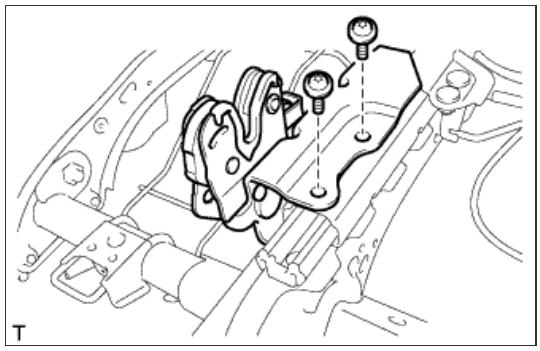

59. REMOVE REAR SEAT CUSHION FRAME SUB-ASSEMBLY LH


a. Using a T40 TOR socket, remove the bolt.

b. Remove the 5 nuts and seat cushion frame.

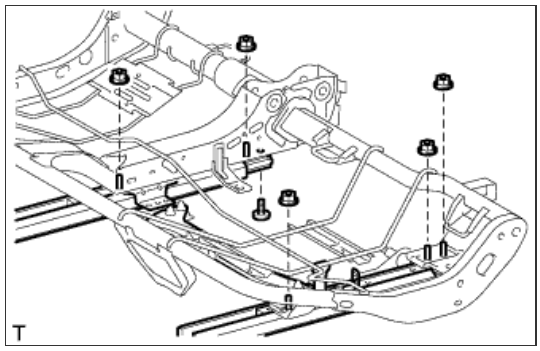

60. REMOVE REAR SEAT LOCK CONTROL LEVER LH

a. Remove the bolt and lock control lever.

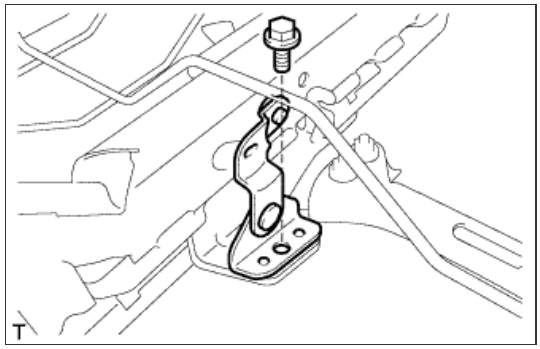

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:


- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

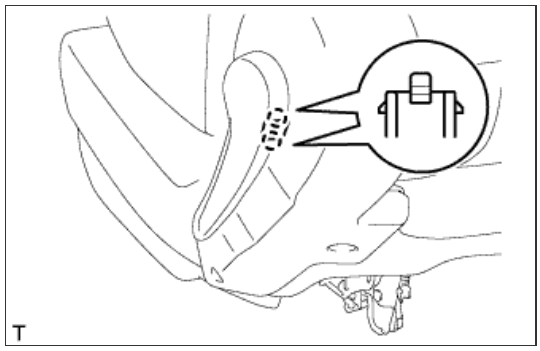

2. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

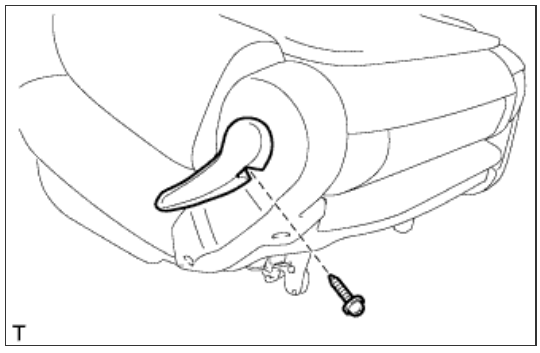

3. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.


b. Detach the claws in the order shown in the illustration, and then remove the cover.

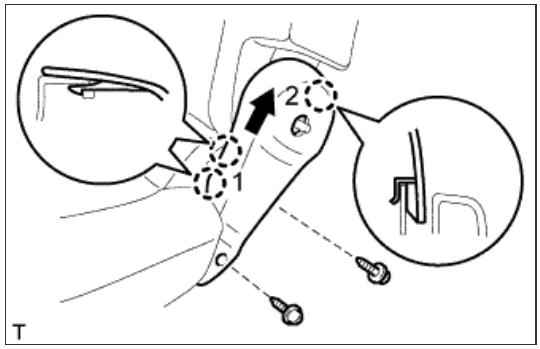

4. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

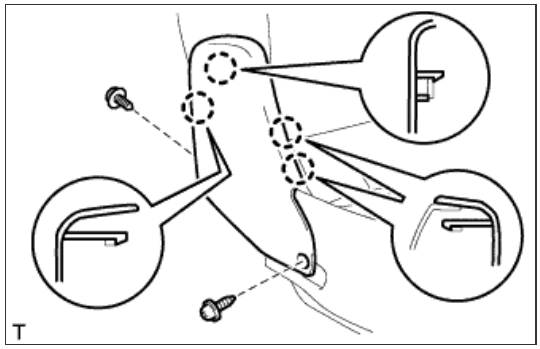


5. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

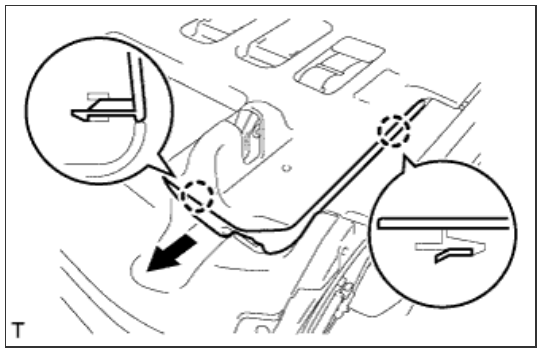


6. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

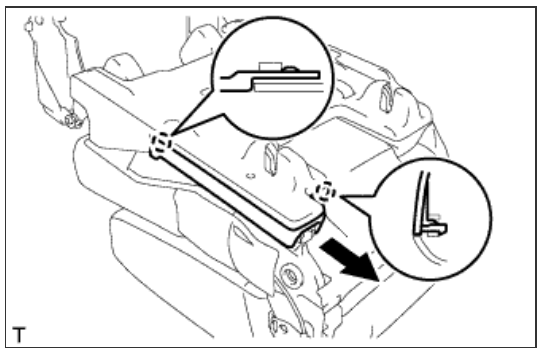


7. REMOVE NO. 1 SEAT CUSHION COVER

a. Detach the 4 claws and remove the 2 covers.

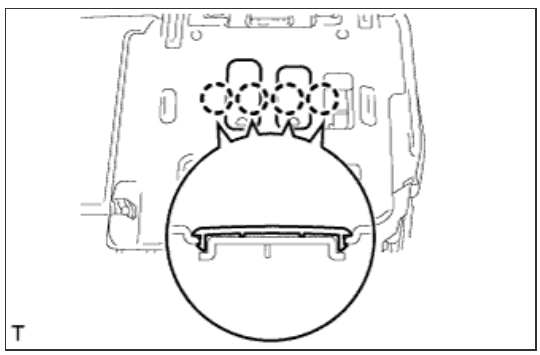


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 4 claws.

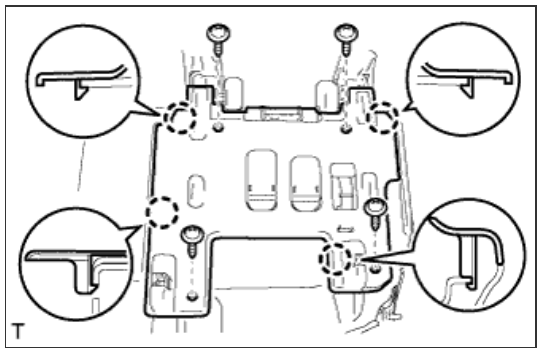

b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

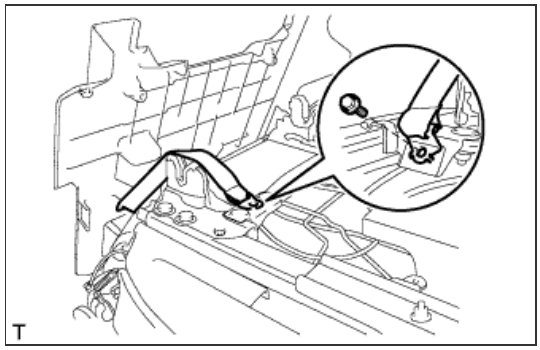

9. REMOVE FOLD SEAT STOPPER BAND ASSEMBLY


a. Remove the fold seat stopper band from the seat leg side cover.

10. REMOVE REAR SEAT SIDE HINGE FEMALE COVER

a. Using a screwdriver, detach the 6 claws and remove the 2 covers.


HINT:

Tape the screwdriver tip before use.

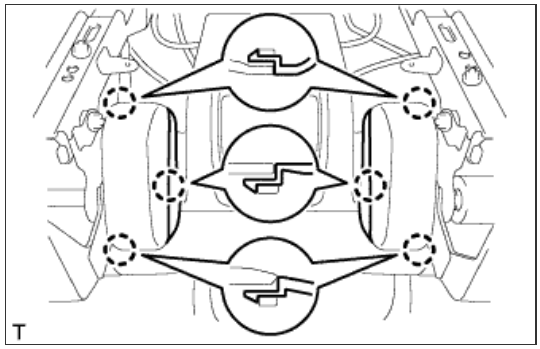

11. REMOVE REAR SEAT SIDE HINGE MALE COVER LH

a. Detach the clip and remove the cover.

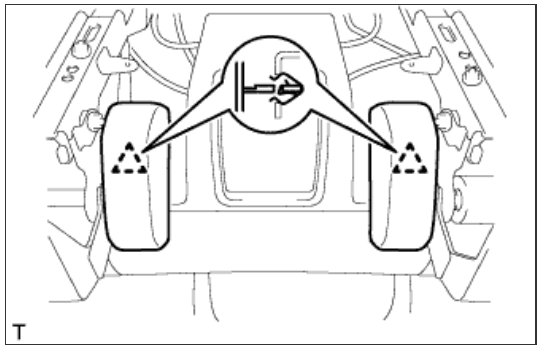


12. REMOVE REAR SEAT SIDE HINGE MALE COVER RH

a. Detach the clip and remove the cover.

13. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

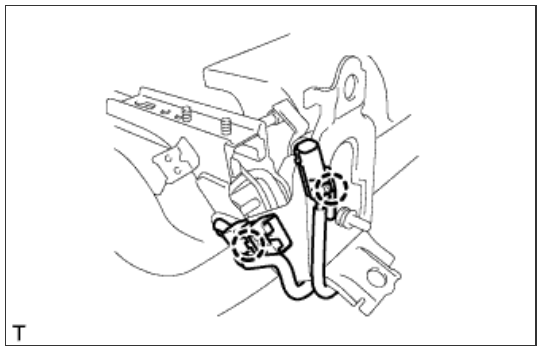

c. Using a clip remover, remove the clip.

d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove wire harness.

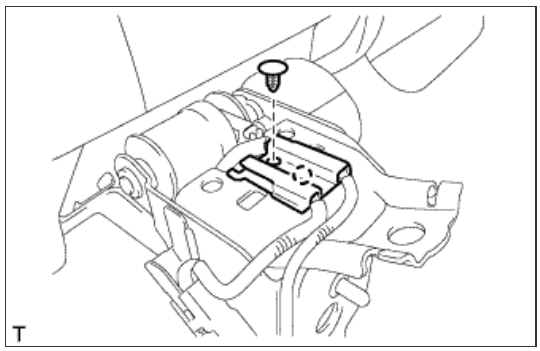


14. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

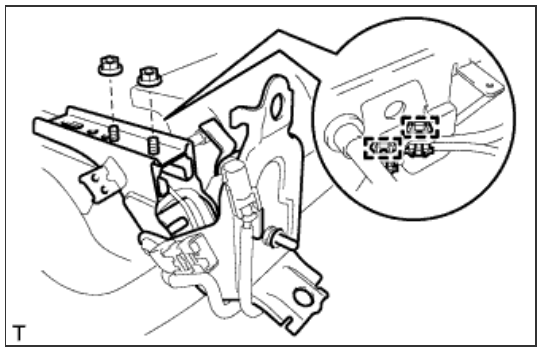


d. Detach the cable clamp and disconnect the cable.

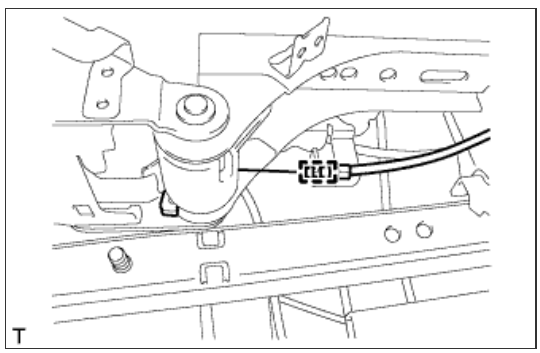


15. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Remove the 2 nuts and hinge.

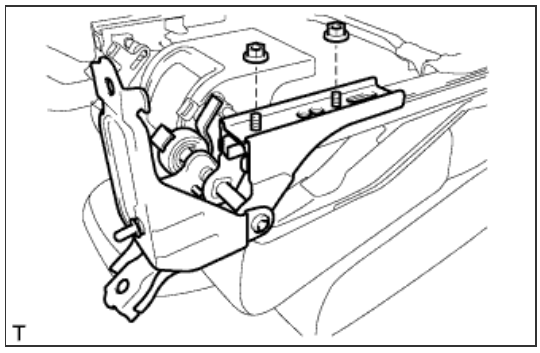


16. REMOVE SEAT BELT ANCHOR COVER CAP

a. Detach the claw and open the cap.

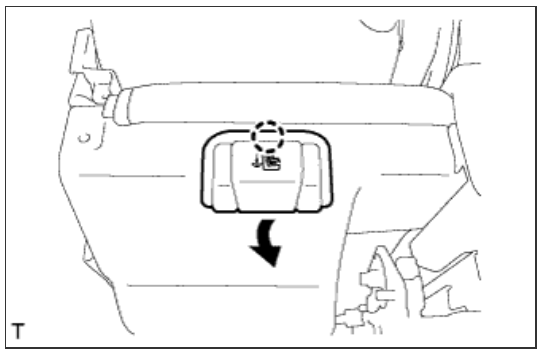


b. Remove the screw and anchor cover cap.

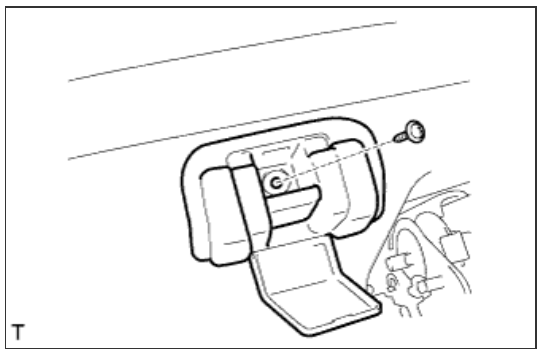

17. REMOVE REAR SEATBACK STAY COVER LH


a. Remove the screw.

b. Detach the 2 claws and remove the cover.

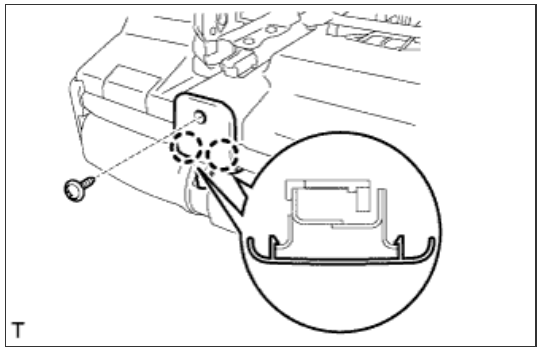


18. REMOVE REAR UNDER SIDE COVER LH

a. Detach the 10 claws.

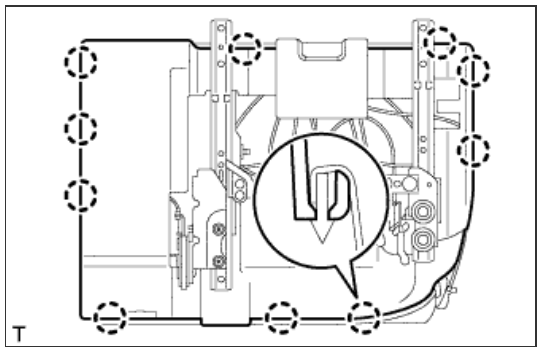


b. Remove the 5 screws.

c. Detach the 2 clips and 2 claws, and remove the cover.

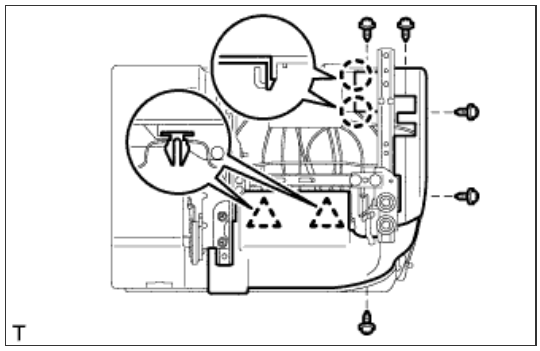

19. REMOVE NO. 1 SEAT CUSHION PLATE


a. Detach the claws and remove the seat cushion plate.

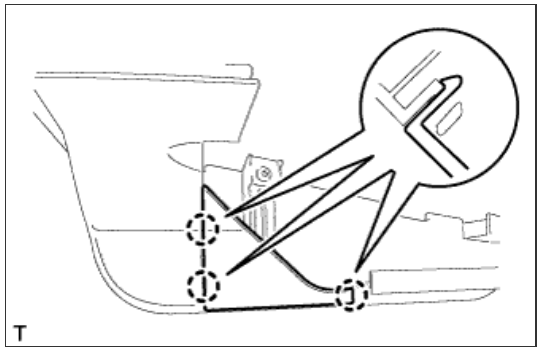

20. REMOVE REAR SEAT CUSHION COVER RH

a. Remove the 4 screws.


b. Detach the 2 claws and remove the cover.

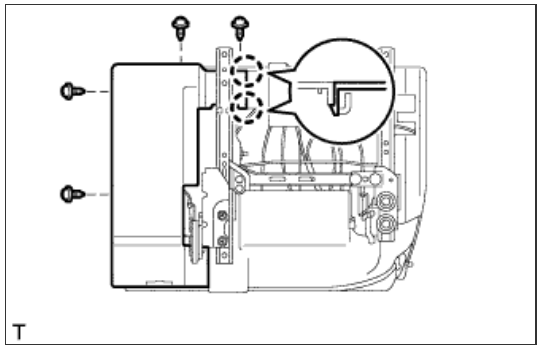

21. REMOVE REAR SEAT UNDER TRAY COVER LH


a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

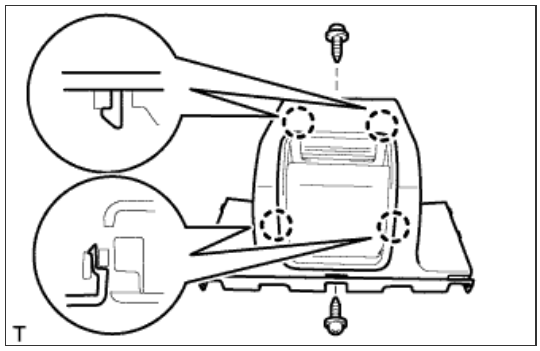


22. REMOVE REAR SEAT TRACK HANDLE SUB-ASSEMBLY


a. Remove the 2 screws and seat track handle.

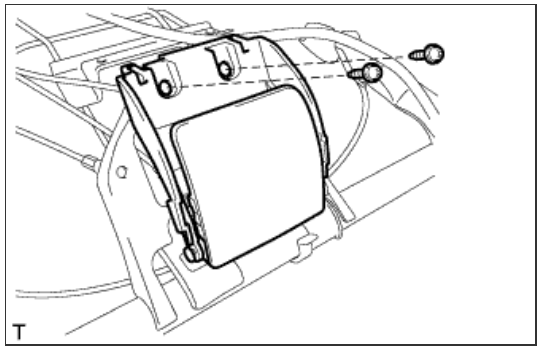

b. Detach the 2 cable clamps and disconnect the 2 cables.

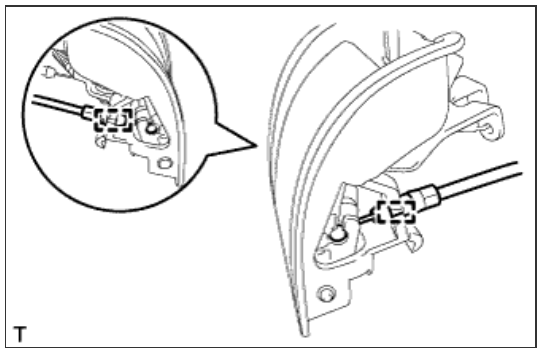

c. Detach the cable clamp and disconnect the cable.

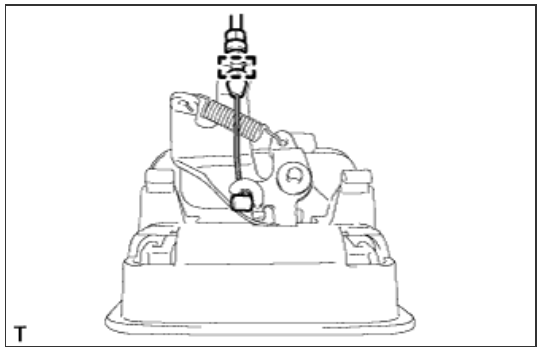


23. REMOVE FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY

24. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Remove the bolt and belt.


HINT:

The No. 1 seat point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, it becomes disconnected when the bolt is removed.

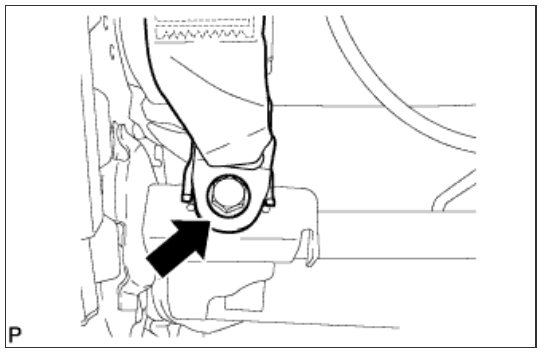

25. DISCONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Disconnect the belt anchor.

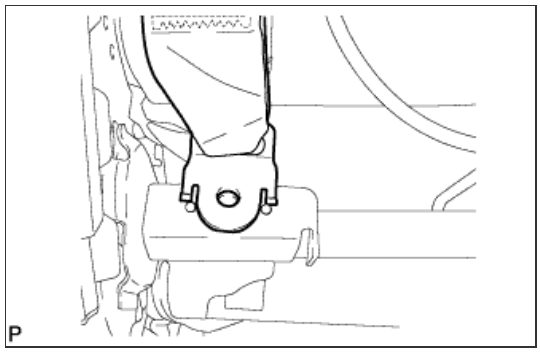

26. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.

ii. Remove the side airbag wire harness through the hole in the seat cushion.


b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

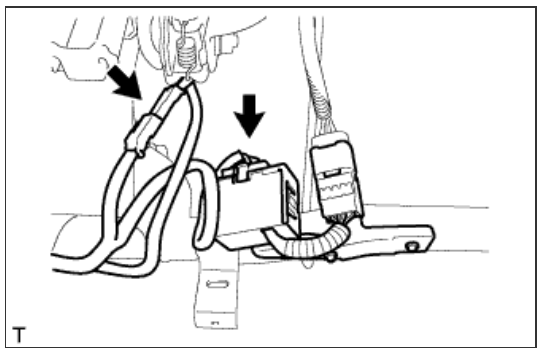


ii. Remove the seatback heater wire harness through the hole in the seat cushion.

c. Remove the seat cushion cover with pad.

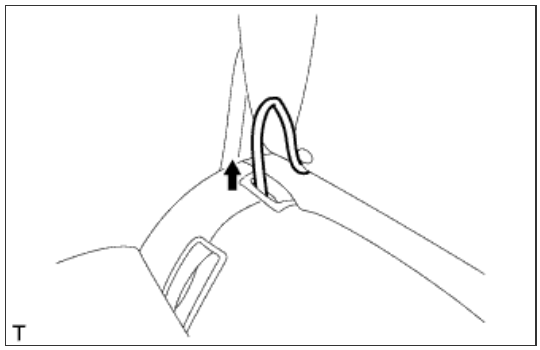


27. REMOVE REAR SEPARATE TYPE SEAT CUSHION COVER

a. Detach the pieces of fastening tape.

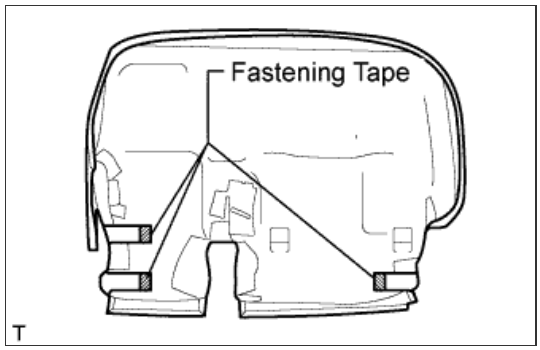


b. Remove the hog rings and cover.

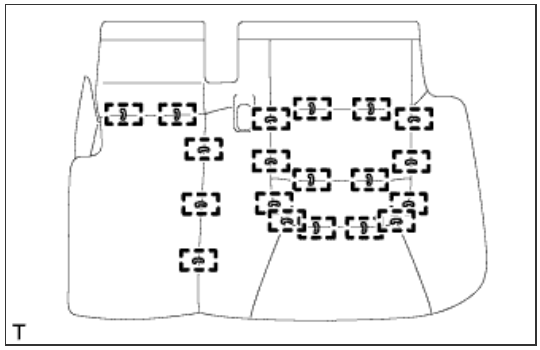

28. REMOVE REAR SEAT CUSHION HEATER ASSEMBLY (w/ Seat Heater System)

a. ut off the tack pins which fasten the seat heater to the seat cushion cover, and then remove the seat cushion heater from the seat cushion cover.

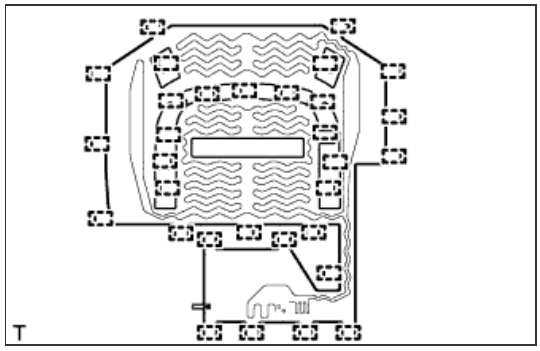


29. REMOVE REAR SEATBACK COVER

a. Using a screwdriver, detach the 4 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

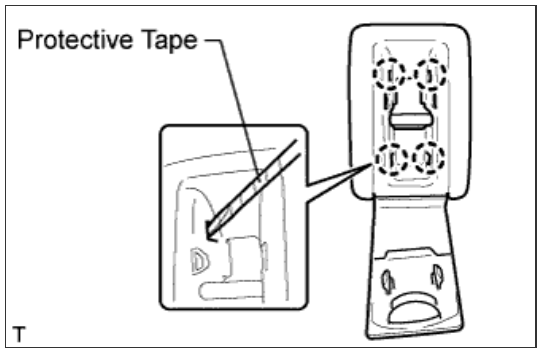


30. REMOVE REAR SEATBACK BOARD SUB-ASSEMBLY LH

a. w/ enter Armrest:

i. Detach the 2 claws on the top of the board.


ii. ull up the board to detach the 2 claws on the bottom of the board and remove it.

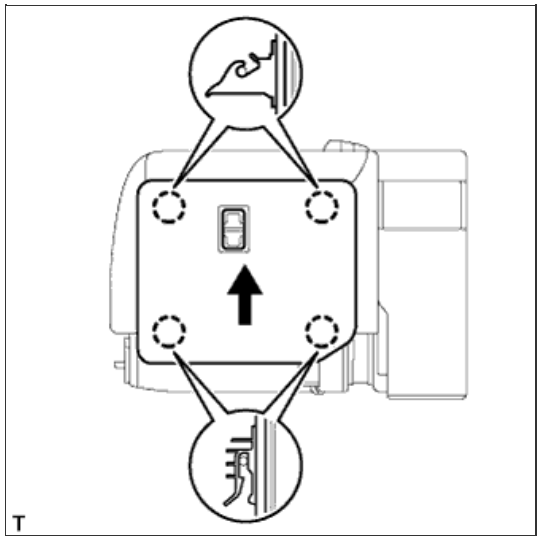

b. w/o enter Armrest:

i. Detach the claws on the top of the board.


ii. ull up the board to detach the claws on the bottom of the board and remove it.

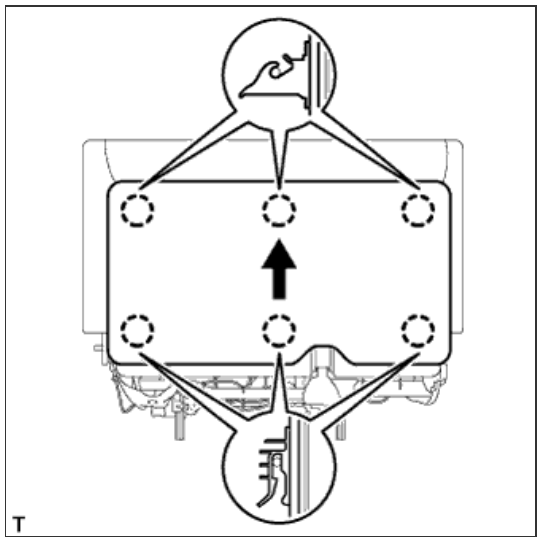


31. REMOVE REAR SEAT HEADREST ASSEMBLY

32. REMOVE REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ enter Armrest:
Detach the 4 claws and remove the 2 supports.

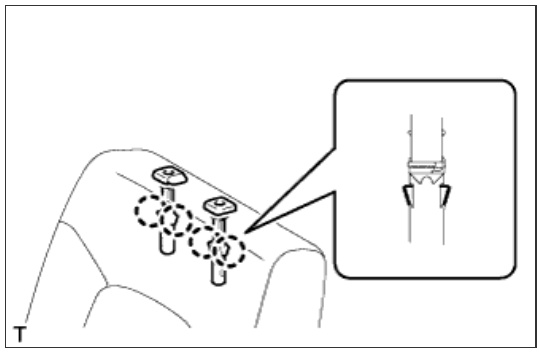

b. w/o enter Armrest:
Detach the 8 claws and remove the 4 supports.

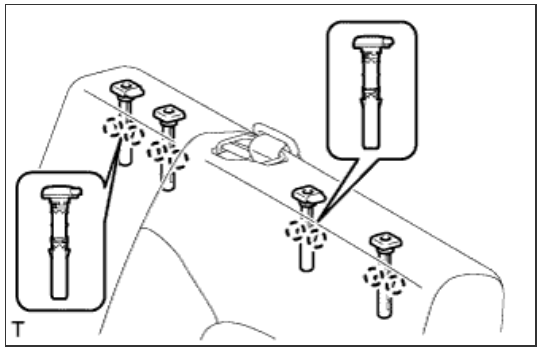


33. REMOVE SHOULDER BELT ANCHOR COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

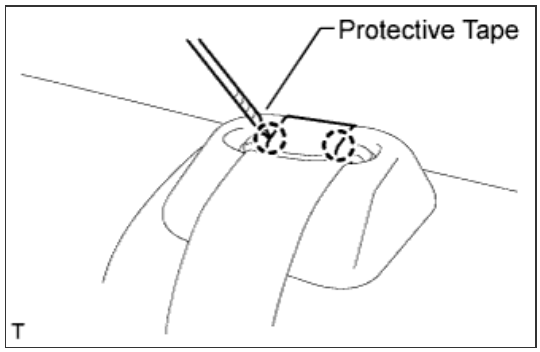

34. REMOVE REAR SEAT BELT HOLE COVER LH


a. Remove the screw.

b. Detach the 4 claws and remove the cover.

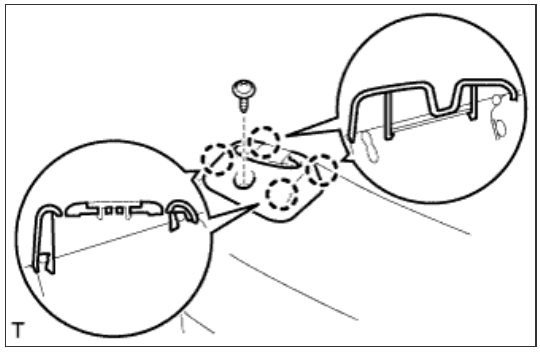


35. REMOVE SEATBACK COVER WITH PAD

a. w/ enter Armrest:
Remove the hog rings.

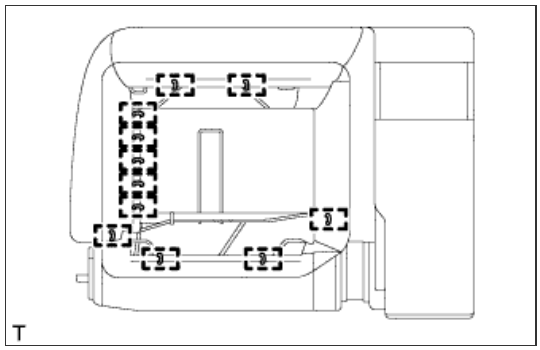


b. w/o enter Armrest:
Remove the hog rings.

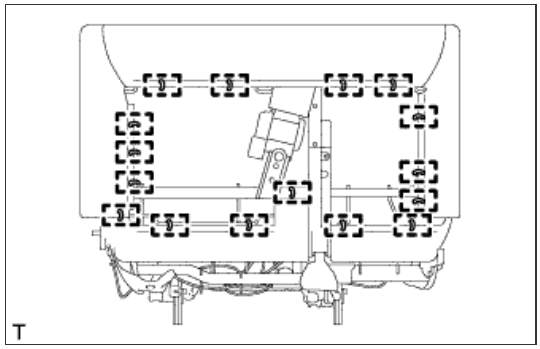

c. w/ Rear Seat Side Airbag:


i. Remove the cap nut and seatback cover bracket from the seat frame.

ii. Remove the side airbag wire harness through the hole in the seatback.

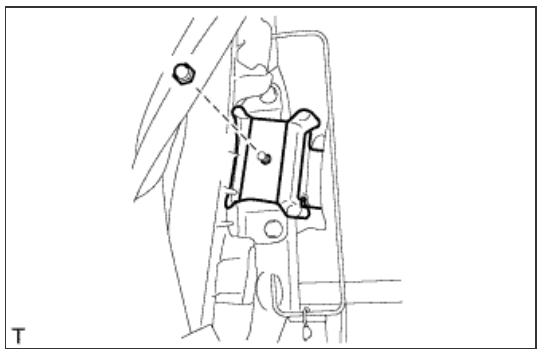


d. w/ Seat Heater System:


i. ut the cable tie and disconnect the seatback heater wire harness.

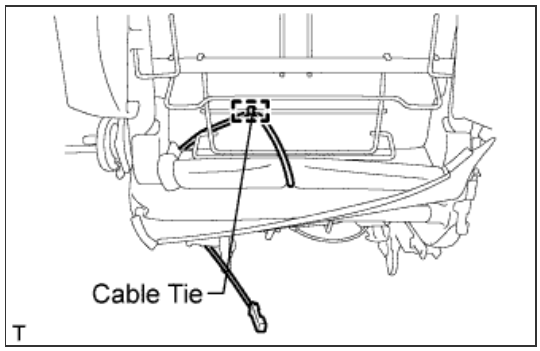

ii. Remove the seatback heater wire harness through the hole in the seatback.

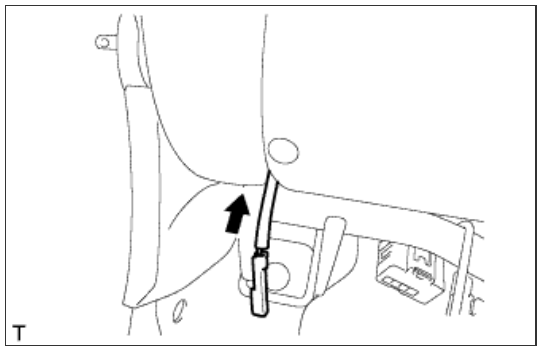


e. w/ enter Armrest:
ull the seat belt into the inside of the seat.

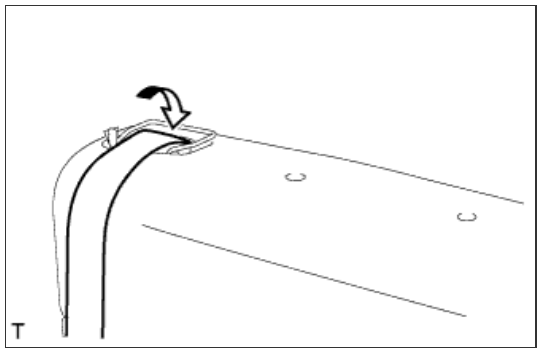


f. w/o enter Armrest:
ull the seat belt into the inside of the seat.

g. Remove the seatback cover with pad.

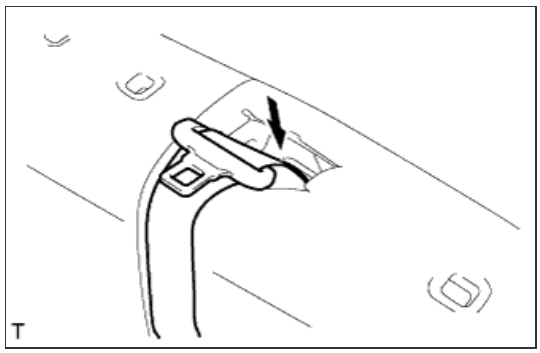


36. REMOVE REAR SEPARATE TYPE SEATBACK COVER


a. w/ Rear Seat Side Airbag:
Disconnect the seatback cover bracket from the seatback pad.

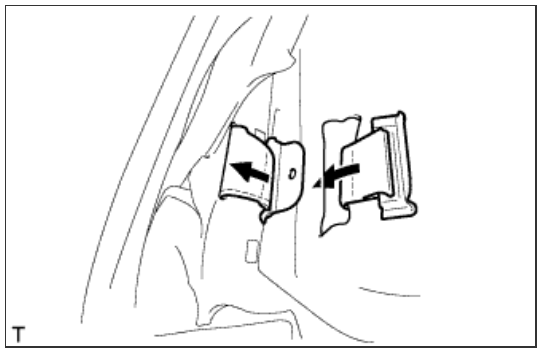

b. w/ enter Armrest:
Remove the hog rings and rear seatback cover.

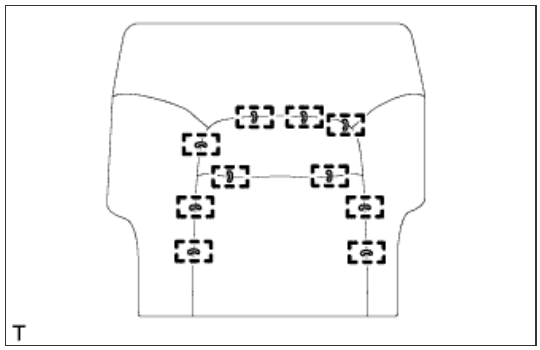


c. w/o enter Armrest:
Remove the hog rings and rear seatback cover.

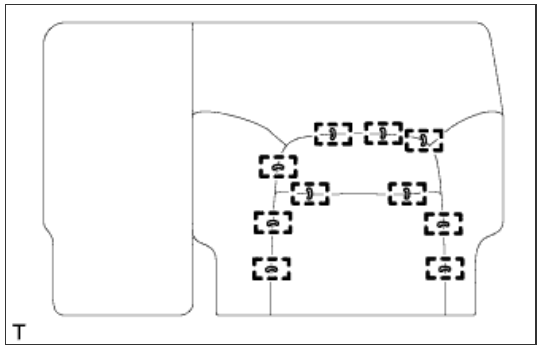

37. REMOVE REAR SEATBACK HEATER ASSEMBLY (w/ Seat Heater System)

a. ut off the tack pins which fasten the seatback heater to the seatback cover, and then remove the seatback heater from the seatback cover.

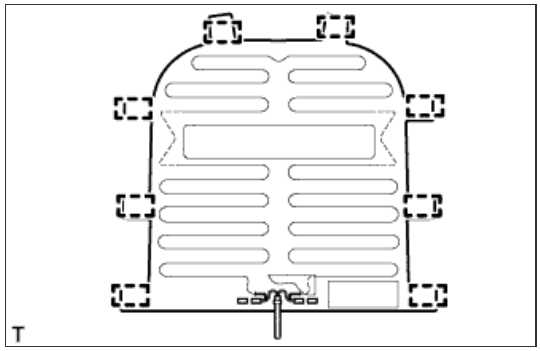


38. REMOVE SEATBACK STOPPER PLATE

a. w/ enter Armrest:

i. Using a T40 TOR socket, remove the 2 bolts.

ii. Remove the bolt and stopper plate.

iii. Remove the bush from the stopper plate.

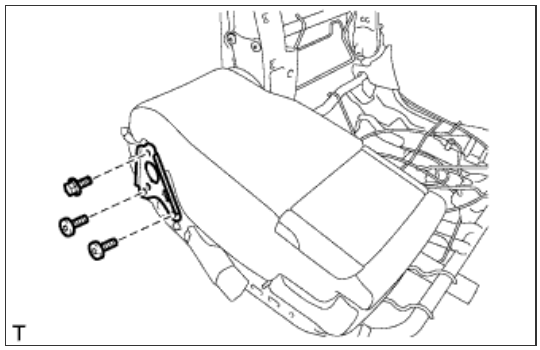


b. w/o enter Armrest:

i. Using a T40 TOR socket, remove the 2 bolts.


ii. Remove the bolt and stopper plate.

iii. Remove the bush from the stopper plate.

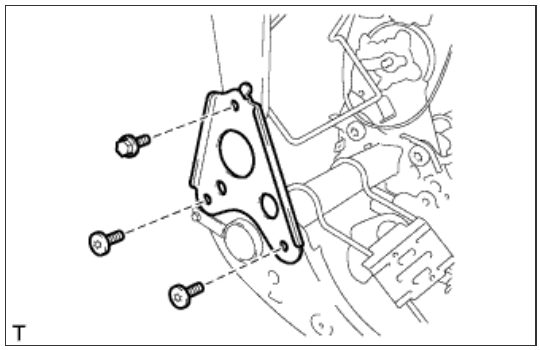

39. REMOVE REAR CENTER SEAT ARMREST ASSEMBLY (w/ Center Armrest)


a. Using a T40 TOR socket, remove the 2 bolts and center seat armrest.

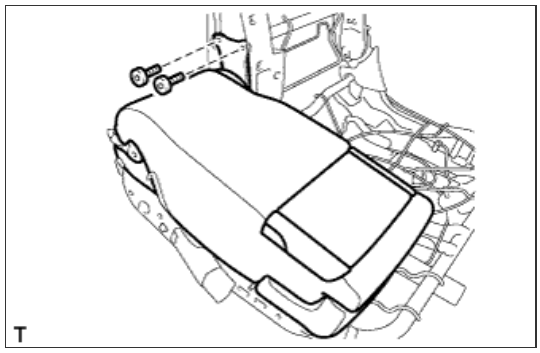

40. REMOVE REAR CENTER SEAT HEADREST ASSEMBLY (w/ Center Armrest)


41. REMOVE NO. 1 SEAT ARMREST PLATE (w/ Center Armrest)

a. Using a moulding remover, detach the 4 clips and 2 claws, and then remove the 2 armrest plates.

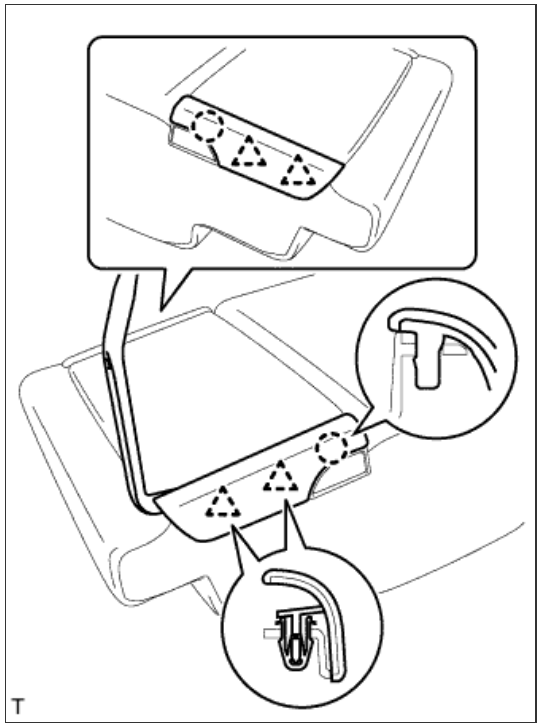


42. REMOVE CUP HOLDER ASSEMBLY (w/ Center Armrest)

a. Remove the 2 screws.

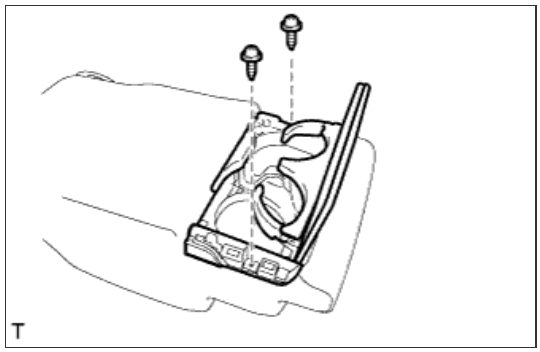


b. Using a moulding remover, detach the 2 clips and remove the cup holder.

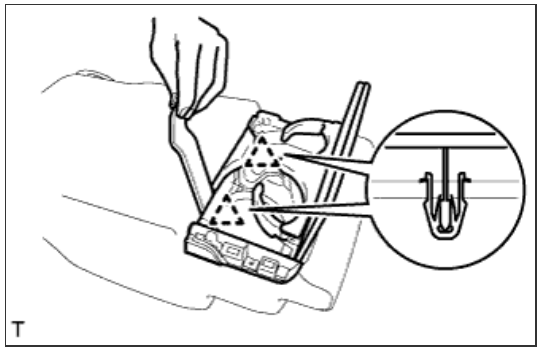

43. REMOVE REAR SEAT RECLINING COVER LH

a. Remove the screw.


b. Detach the claw and remove the cover.

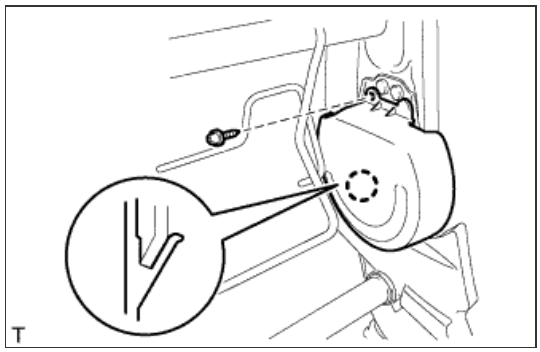

44. REMOVE REAR NO. 2 SEAT RECLINING COVER LH

a. Remove the screw.


b. Detach the clamp and remove the cover.

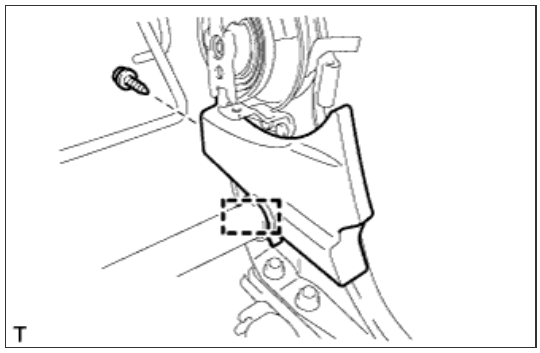

45. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the screw.


b. Detach the claw and remove the cover.

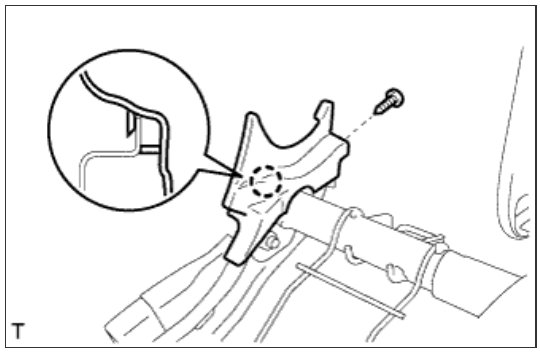

46. REMOVE REAR SEATBACK HINGE COVER LH

a. Remove the screw.


b. Detach the claw and remove the cover.

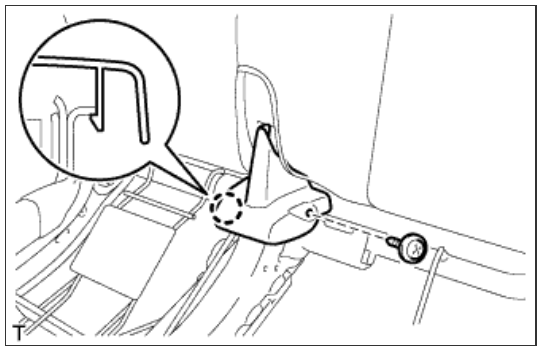

47. REMOVE REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH


a. Remove the 4 screws.

b. Detach the 4 claws and remove the cover.

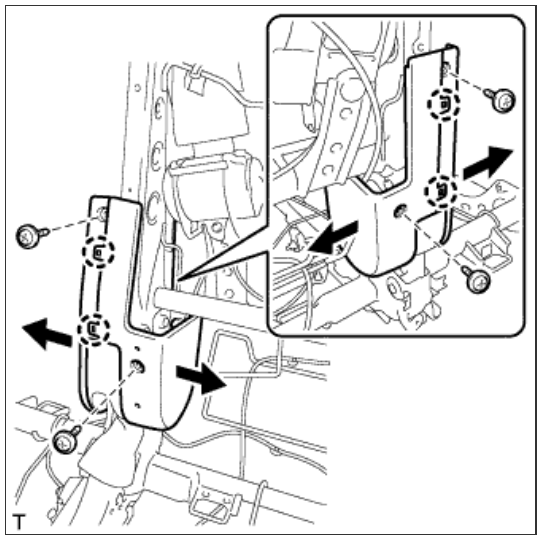

48. REMOVE REAR SEAT SHOULDER BELT HOLE COVER LH


a. Using a screwdriver, detach the claws and remove the shoulder belt hole cover.

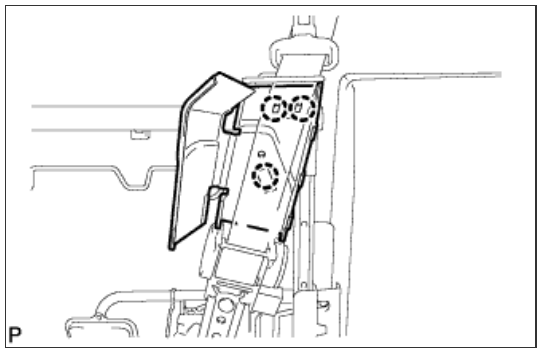

49. REMOVE NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Remove the nuts and belt sensor.


b. Remove the nut and then remove the outer belt.

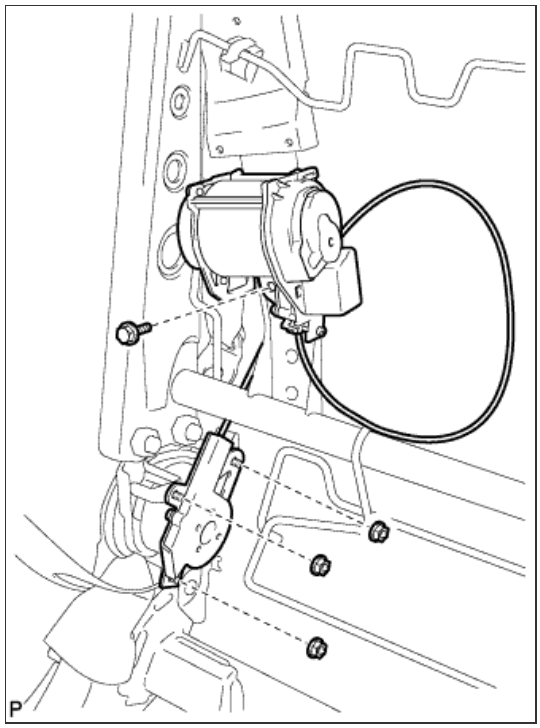

50. REMOVE RECLINING ADJUSTING CABLE ASSEMBLY LH

a. Detach the 2 cable clamps and disconnect the cable.


b. Detach the clamp and remove the adjusting cable.

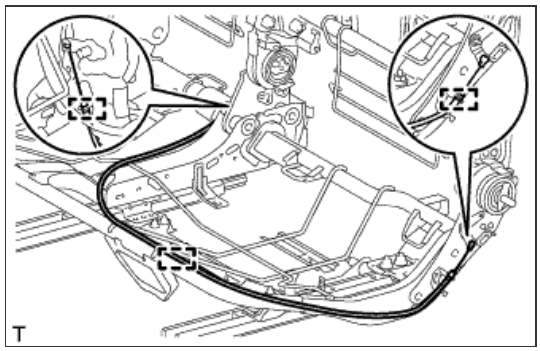

51. REMOVE NO. 2 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Detach the 2 cable clamps and disconnect the cable.

b. Detach the clamp and remove the lock control cable.

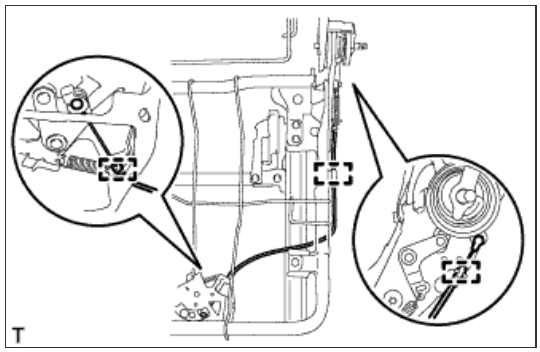


52. REMOVE REAR SEATBACK FRAME SUB-ASSEMBLY LH


a. LH Side:
Using a T40 TOR socket, remove the 2 bolts.

b. RH Side:
Using a T55 TOR socket, remove the 2 bolts.

c. Remove the seatback frame sub assembly.

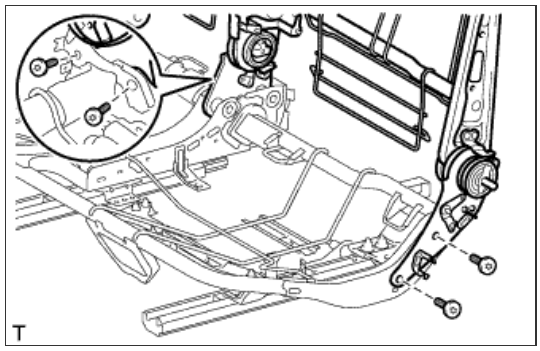


d. Remove the lower seatback cover.

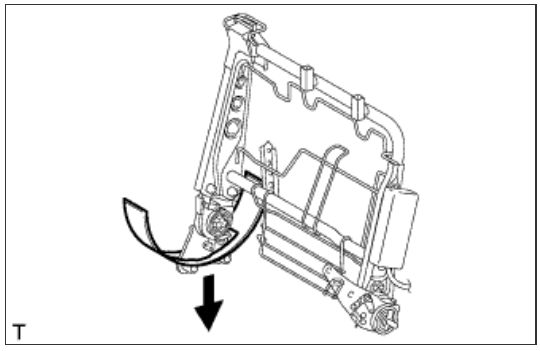

53. REMOVE FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY


a. Detach the 2 cable clamps and disconnect the 2 cables.

b. Remove the 2 fold seat lock cables.

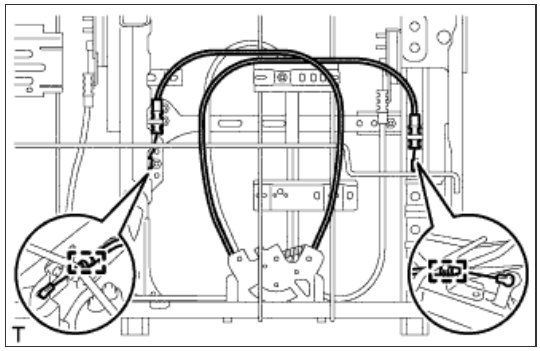

54. REMOVE REAR NO. 1 SEAT LOCK CABLE ASSEMBLY


a. Remove the 2 nuts and lower seat track bracket.

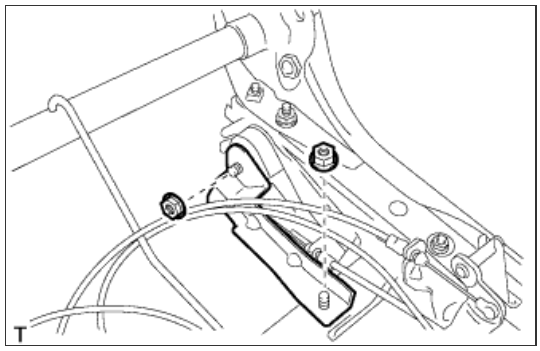

b. ut the cable tie and disconnect the cable.

c. Detach the cable clamps and disconnect the cables.


d. Detach the clamp and remove the seat lock cable.

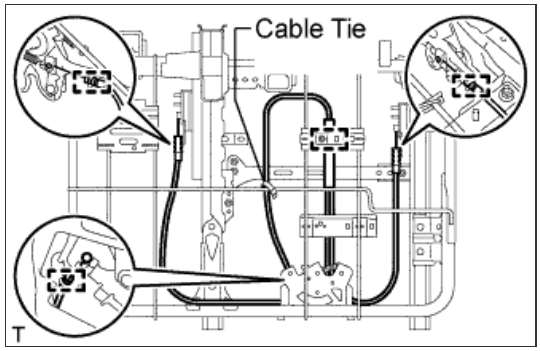

55. REMOVE REAR SEAT CUSHION HOLDER BRACKET LH (w/ Seat Heater System)


a. Disconnect the seat wire connector.

b. Remove the 2 screws and holder bracket.

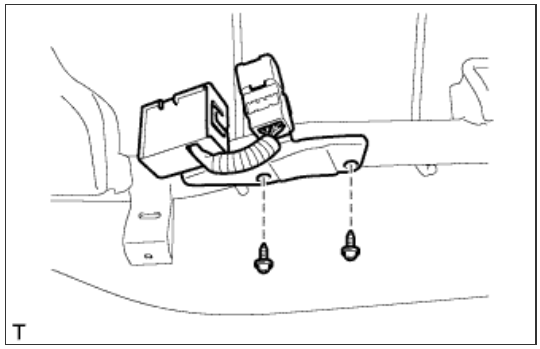


56. REMOVE SEAT HEATER CONTROL SUB-ASSEMBLY LH (w/ Seat Heater System)

a. Detach the 2 claws and remove the seat heater control.

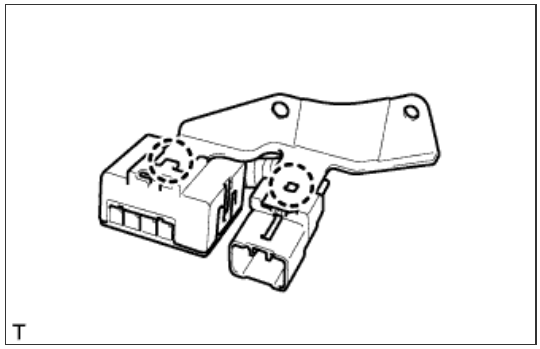


57. REMOVE REAR SEAT INNER BELT ASSEMBLY

a. Remove the bolt and belt.

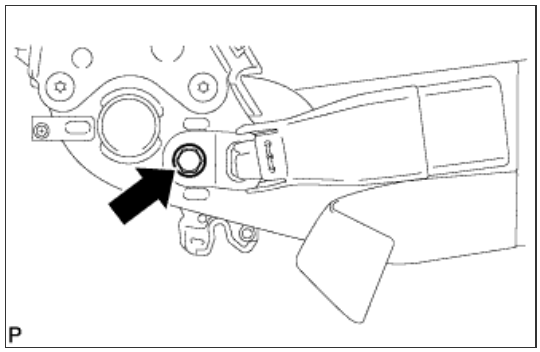

58. REMOVE NO. 1 SEAT LEG ASSEMBLY LH


a. Using a T40 TOR socket, remove the 2 bolts and seat leg assembly.

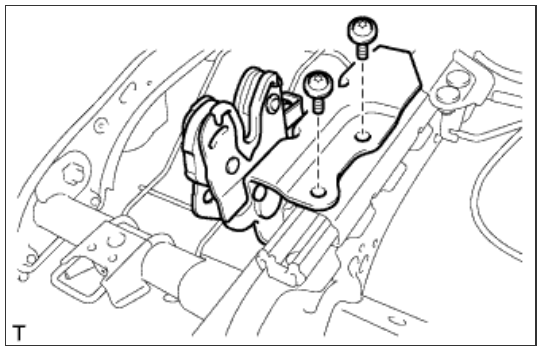

59. REMOVE REAR SEAT CUSHION FRAME SUB-ASSEMBLY LH


a. Using a T40 TOR socket, remove the bolt.

b. Remove the 5 nuts and seat cushion frame.

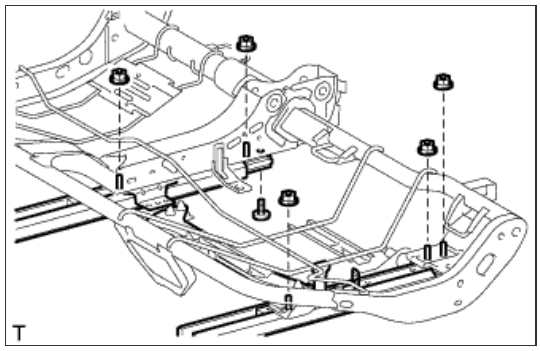

60. REMOVE REAR SEAT LOCK CONTROL LEVER LH

a. Remove the bolt and lock control lever.

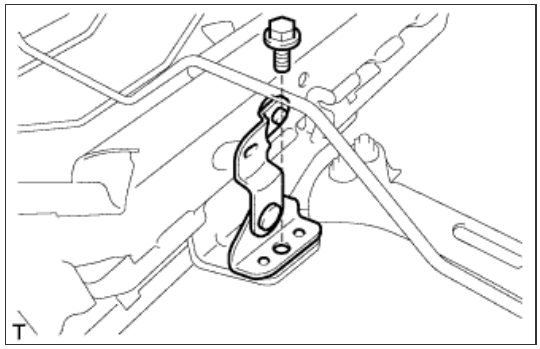

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT LOCK CONTROL LEVER LH

a. Install the lock control lever with the bolt.

Torque:
13 N*m{ 133 kgf*cm , 10 ft.*lbf }

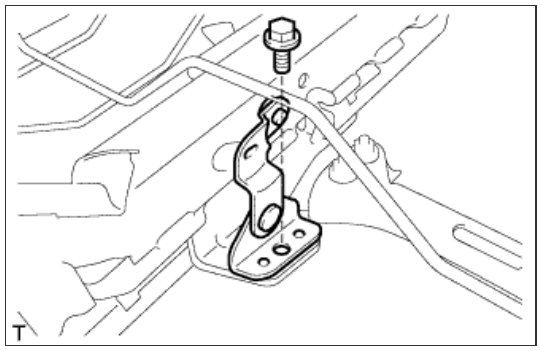

2. INSTALL REAR SEAT CUSHION FRAME SUB-ASSEMBLY LH


a. Temporarily install the seat cushion frame with the 5 nuts and bolt.

b. Tighten the 5 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. Using a T40 "TORX" socket, tighten the bolt.


Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

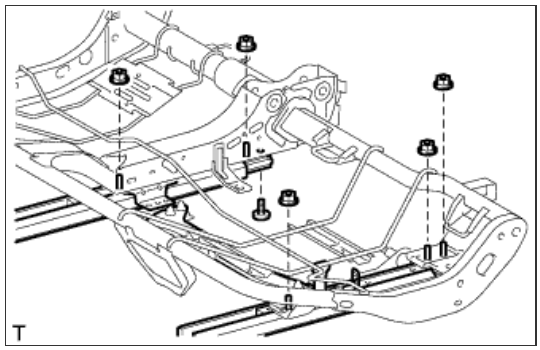

3. INSTALL NO. 1 SEAT LE ASSEMBLY LH

a. Using a T40 "TORX" socket, install the seat leg assembly with the 2 bolts.

Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

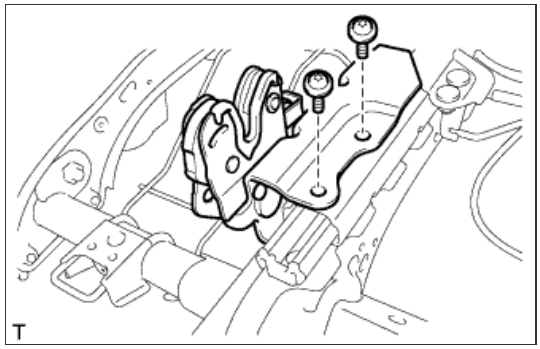


4. INSTALL REAR SEAT INNER BELT ASSEMBLY

a. Install the seat belt with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }


NOTICE:

The anchor part of the seat belt must not overlap the protruding part.

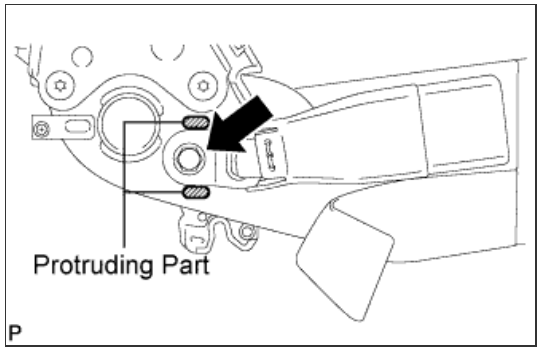

5. INSTALL SEAT HEATER CONTROL SUB-ASSEMBLY LH (w/ Seat Heater System)


a. Attach the 2 claws to install the seat heater control.

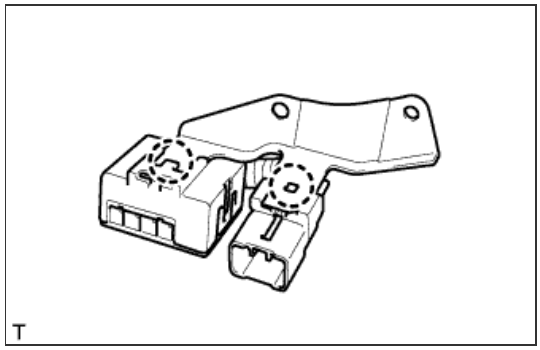

6. INSTALL REAR SEAT CUSHION HOLDER BRACKET LH (w/ Seat Heater System)

a. Install the holder bracket with the 2 screws.

b. onnect the seat wire connector.

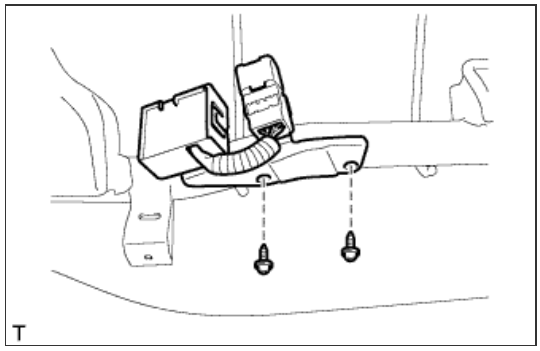


7. INSTALL REAR NO. 1 SEAT LOCK CABLE ASSEMBLY

a. Attach the clamp to install the seat lock cable.


b. Attach the 3 cable clamps to connect the 3 cables.

c. onnect the cable and install a new cable tie.

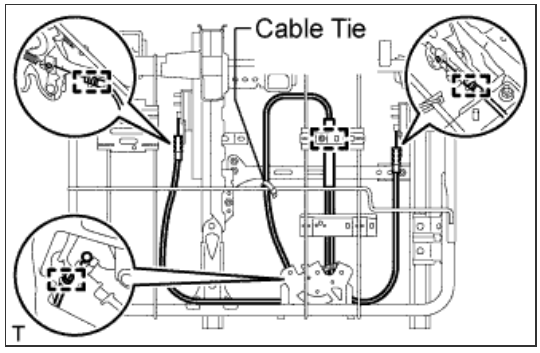

d. Install the lower seat track bracket with the 2 nuts.


Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

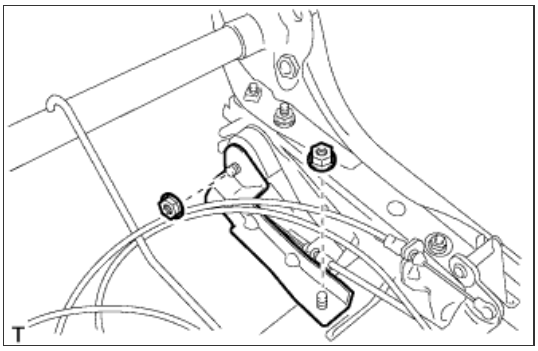

8. INSTALL FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY


a. Install the 2 fold seat lock control cables.

b. Attach the 2 cable clamps to connect the 2 cables.

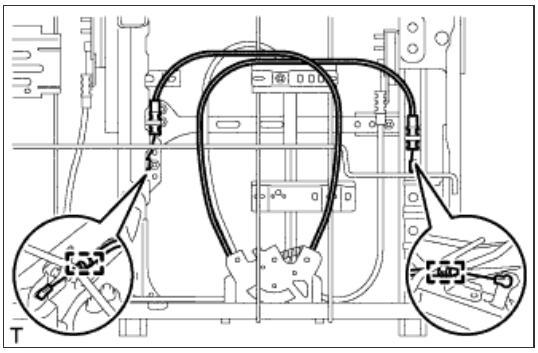

9. INSTALL REAR SEATBACK FRAME SUB-ASSEMBLY LH

a. Install the lower seatback cover.

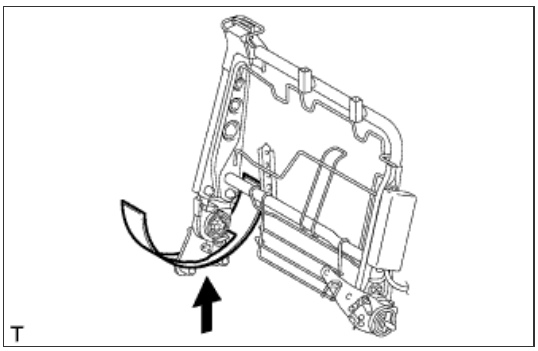


b. Temporarily install the seatback frame with the 4 bolts.

c. LH Side:
Using a T40 "TORX" socket, tighten the 2 bolts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

d. RH Side:
Using a T55 "TORX" socket, tighten the 2 bolts.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

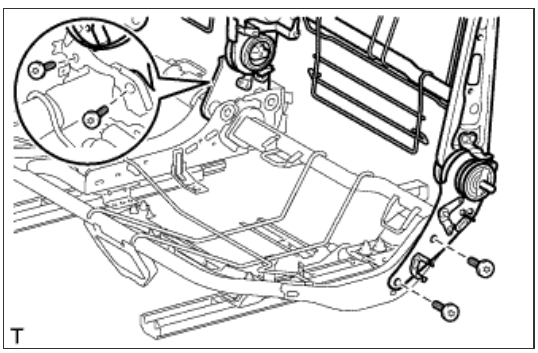

10. INSTALL NO. 2 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Attach the clamp to install the lock control cable.


b. Attach the 2 cable clamps to connect the cable.

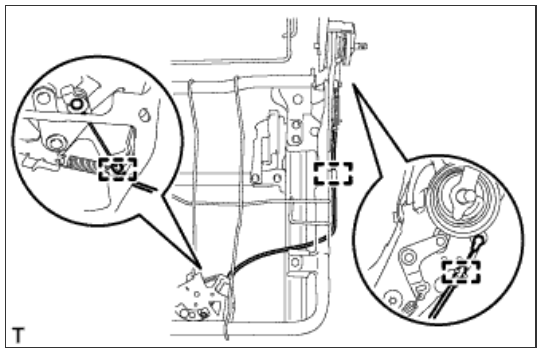

11. INSTALL RECLININ ADJUSTIN CABLE ASSEMBLY LH

a. Attach the clamp to install the adjusting cable.

b. Attach the 2 cable clamps to connect the cable.

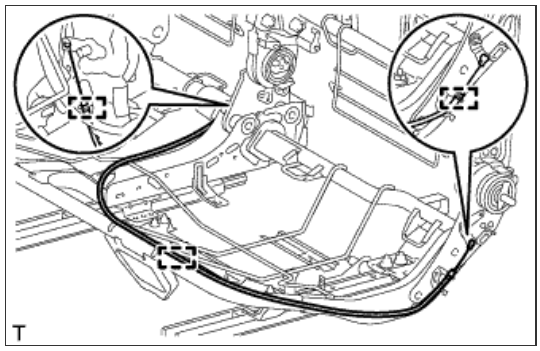


12. INSTALL NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Install the belt with the nut labeled A.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

b. Install the belt sensor with the 3 nuts labeled B.

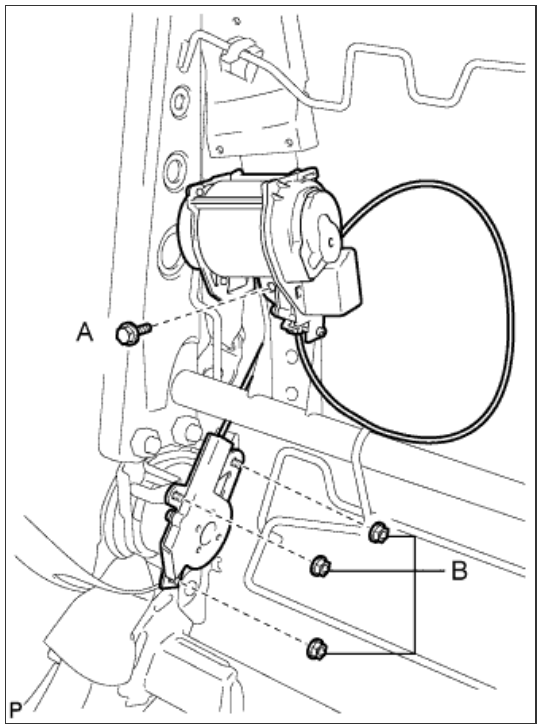


13. INSTALL REAR SEAT SHOULDER BELT HOLE COVER LH

a. Install the seat belt as shown in the illustration.

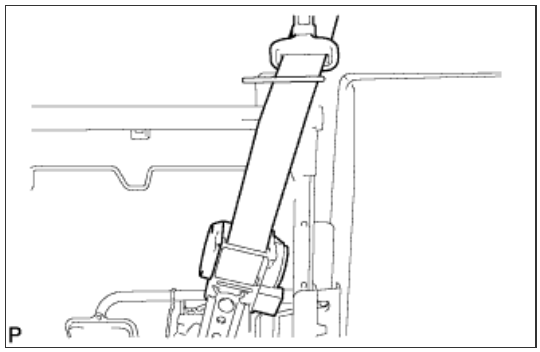


b. Attach the 3 claws to install the shoulder belt hole cover.

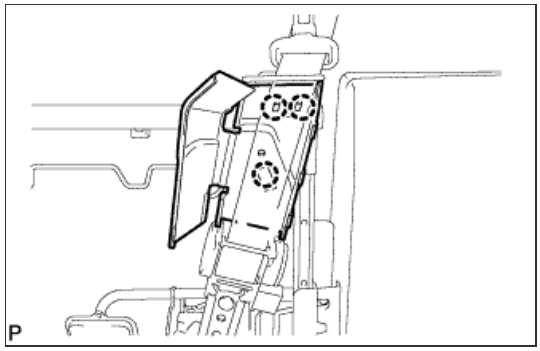

14. INSTALL REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the cover.


b. Install the 4 screws.

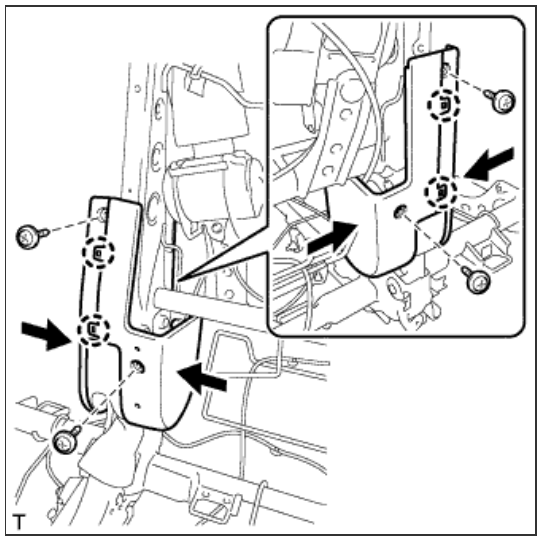

15. INSTALL REAR SEATBACK HIN E COVER LH

a. Attach the claw to install the cover.


b. Install the screw.

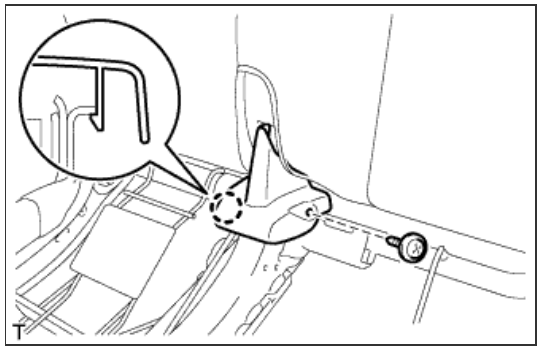

16. INSTALL REAR NO. 1 SEAT RECLININ COVER RH

a. Attach the claw to install the cover.


b. Install the screw.

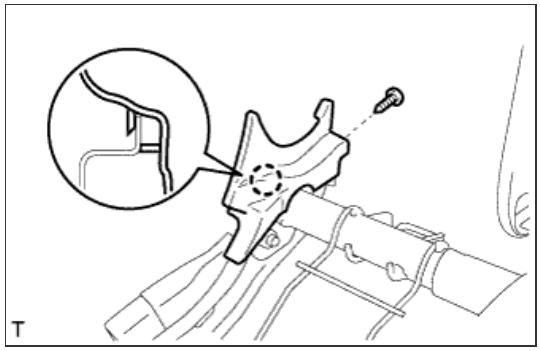

17. INSTALL REAR NO. 2 SEAT RECLININ COVER LH

a. Attach the clamp to install the cover.


b. Install the screw.

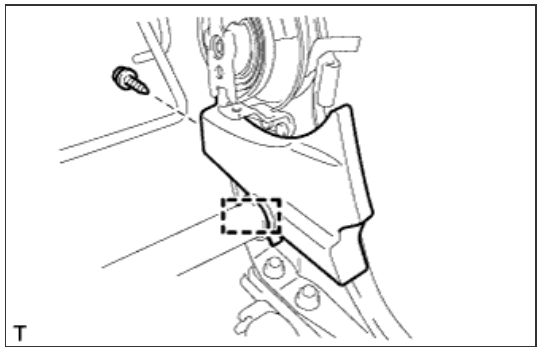

18. INSTALL REAR SEAT RECLININ COVER LH


a. Attach the claw to install the cover.

b. Install the screw.

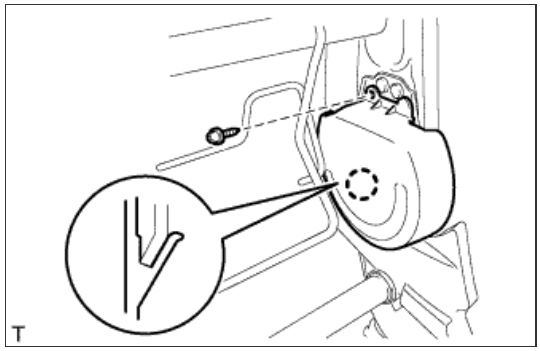


19. INSTALL CUP HOLDER ASSEMBLY (w/ Center Armrest)

a. Attach the 2 clips to install the cup holder.

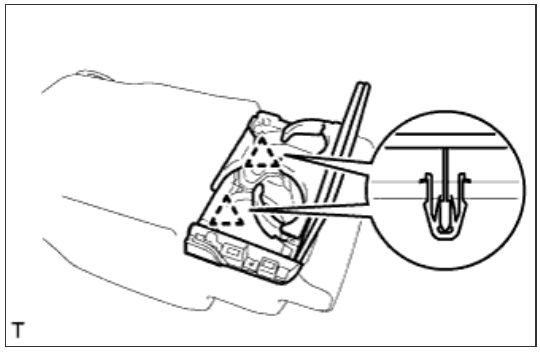


b. Install the 2 screws.

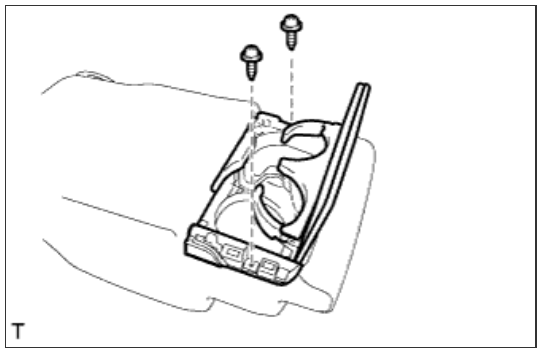

20. INSTALL NO. 1 SEAT ARMREST PLATE (w/ Center Armrest)

a. Attach the 2 claws and 4 clips to install the 2 armrest plates.

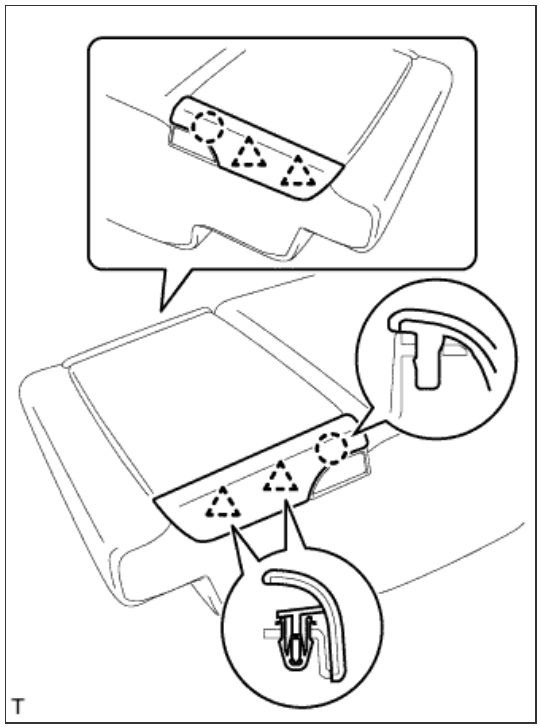


21. INSTALL REAR CENTER SEAT HEADREST ASSEMBLY (w/ Center Armrest)

22. INSTALL REAR CENTER SEAT ARMREST ASSEMBLY (w/ Center Armrest)

a. Using a T40 "TORX" socket, install the center seat armrest with the 2 bolts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

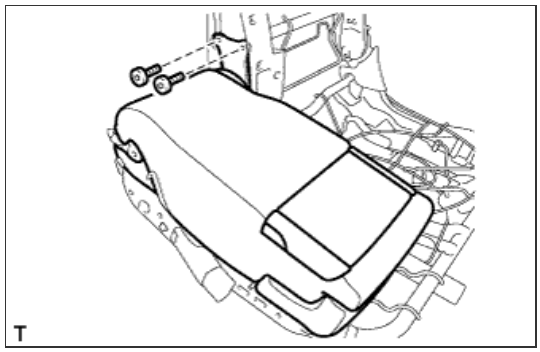

23. INSTALL SEATBACK STOPPER PLATE

a. w/ enter Armrest:

i. Install the bush to the stopper plate.


ii. Temporarily install the stopper plate with the 3 bolts.

iii. Using a T40 "TORX" socket, tighten the 2 bolts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

iv. Tighten the bolt.

Torque:
15 N*m{ 153 kgf*cm , 11 ft.*lbf }

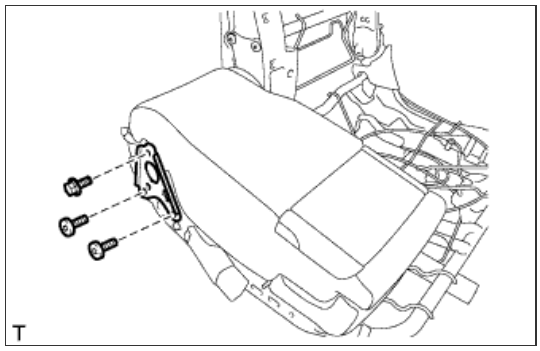

b. w/o enter Armrest:

i. Install the bush to the stopper plate.


ii. Temporarily install the stopper plate with the 3 bolts.

iii. Using a T40 "TORX" socket, tighten the 2 bolts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

iv. Tighten the bolt.


Torque:
15 N*m{ 153 kgf*cm , 11 ft.*lbf }

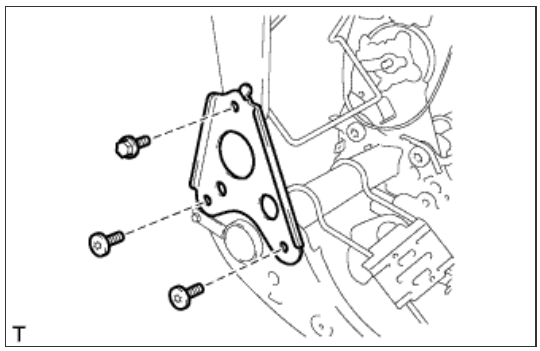

24. INSTALL REAR SEATBACK HEATER ASSEMBLY (w/ Seat Heater System)

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

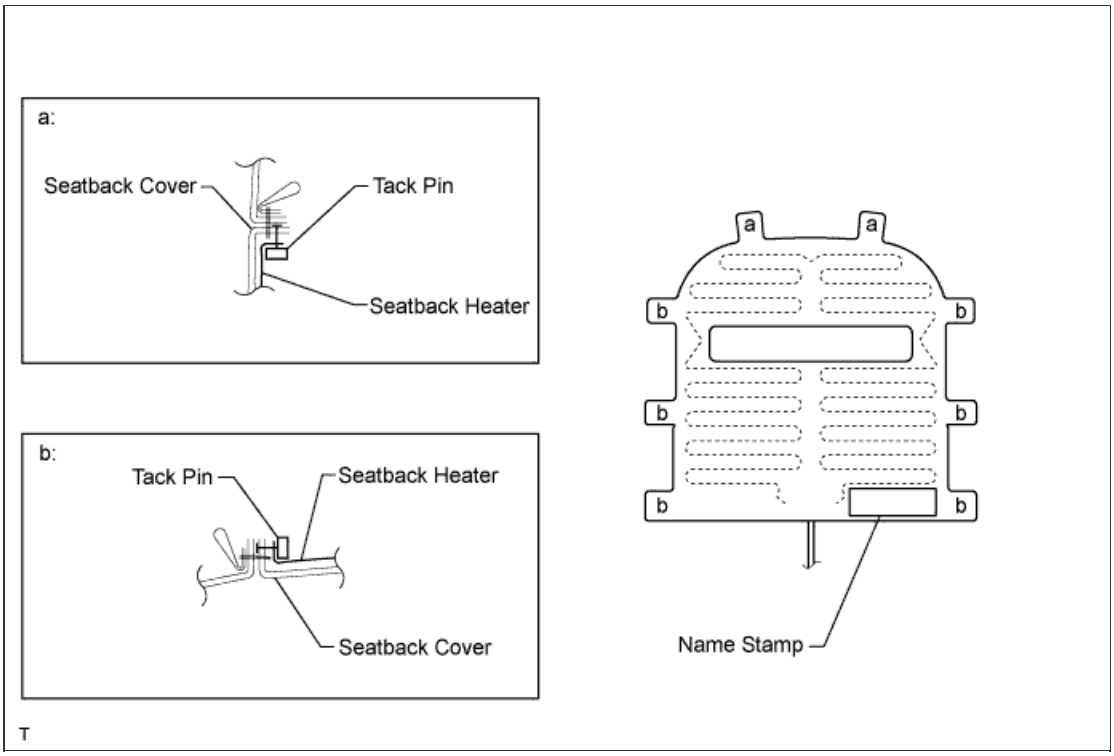


25. INSTALL REAR SEPARATE TYPE SEATBACK COVER

a. w/ enter Armrest:
Using hog ring pliers, install the seatback cover with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

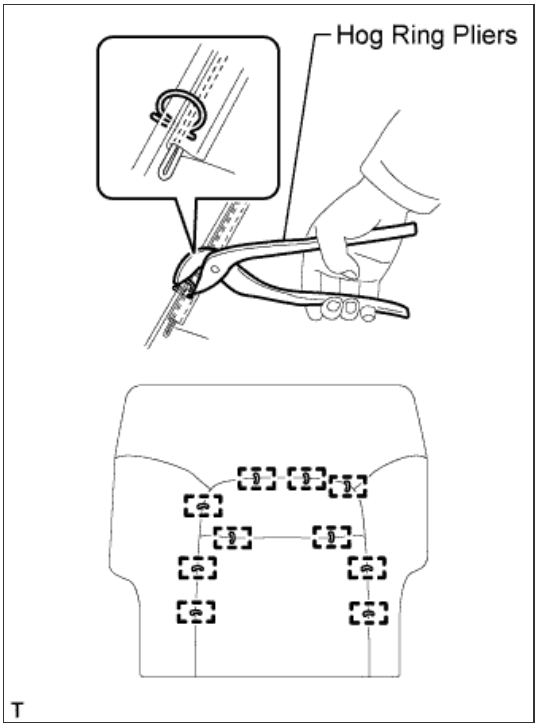


b. w/o enter Armrest:
Using hog ring pliers, install the seatback cover with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

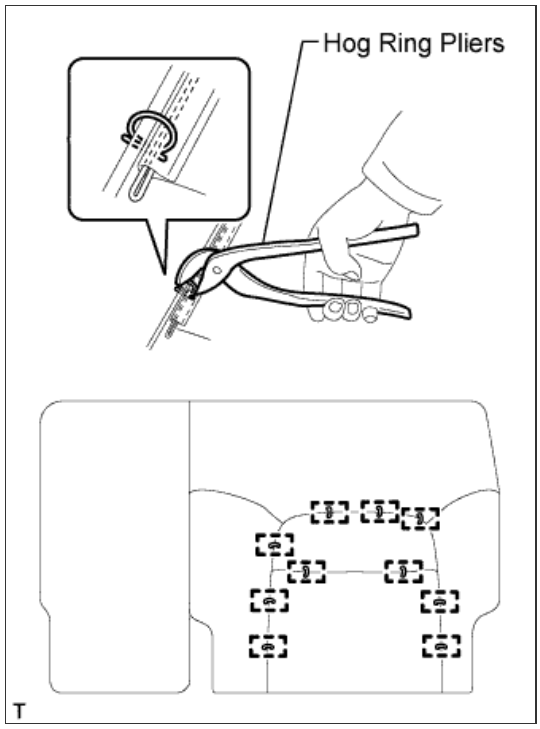


c. w/ Rear Seat Side Airbag:
onnect the seatback cover bracket to the seatback pad.

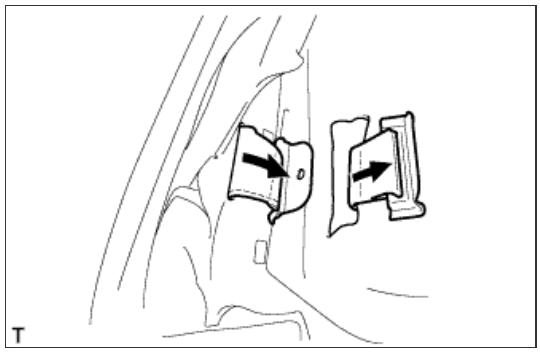

26. INSTALL SEATBACK COVER WITH PAD


a. Install the seatback cover with pad.

b. w/ enter Armrest:
ull out the seat belt.

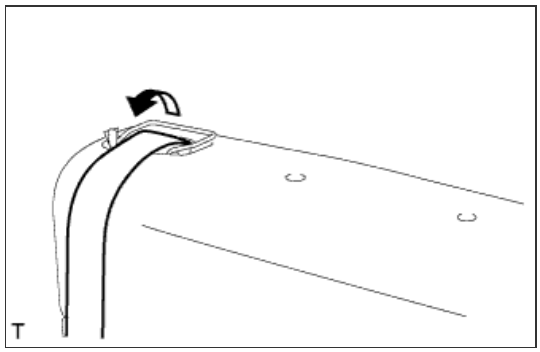


c. w/o enter Armrest:
ull out the seat belt.

d. w/ Rear Seat Side Airbag:
ass the side airbag wire harness through the hole in the seatback.

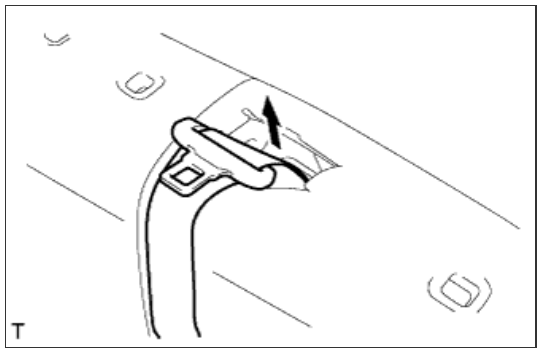


e. w/ Seat Heater System:
ass the seatback heater wire harness through the hole in the seatback.

i.

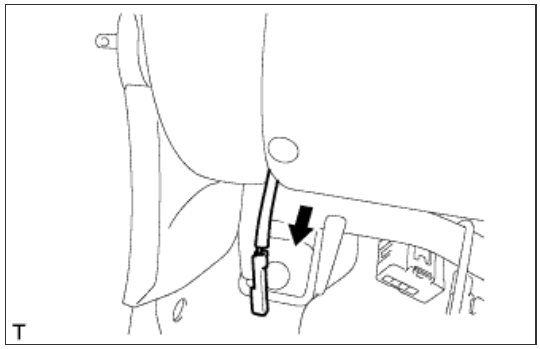

ii. onnect the seatback heater wire harness and install a new cable tie.

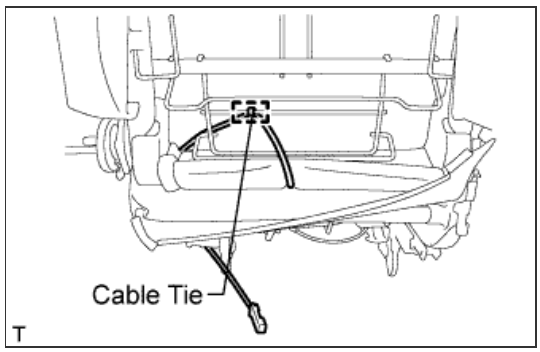


f. w/ Rear Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the cap nut.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

NOTICE:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

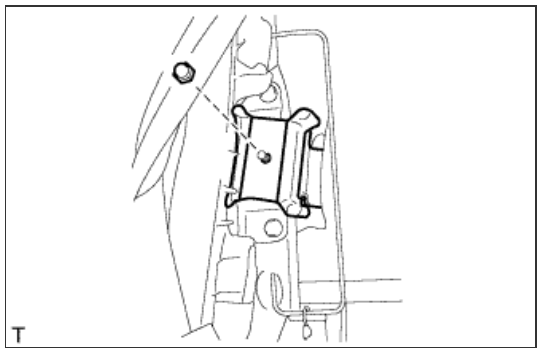


g. w/ enter Armrest:
Using hog ring pliers, install new hog rings to the seatback frame.

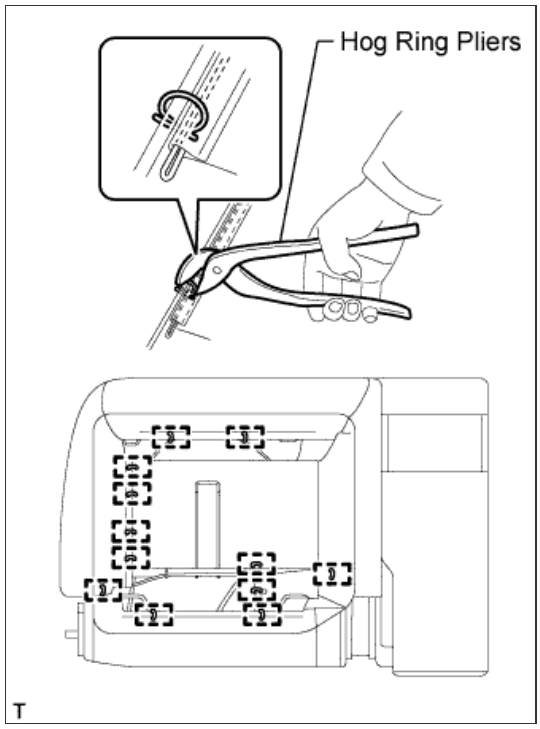

h. w/o enter Armrest:

i. Using hog ring pliers, install new hog rings to the seatback frame.


ii. Attach the hook.

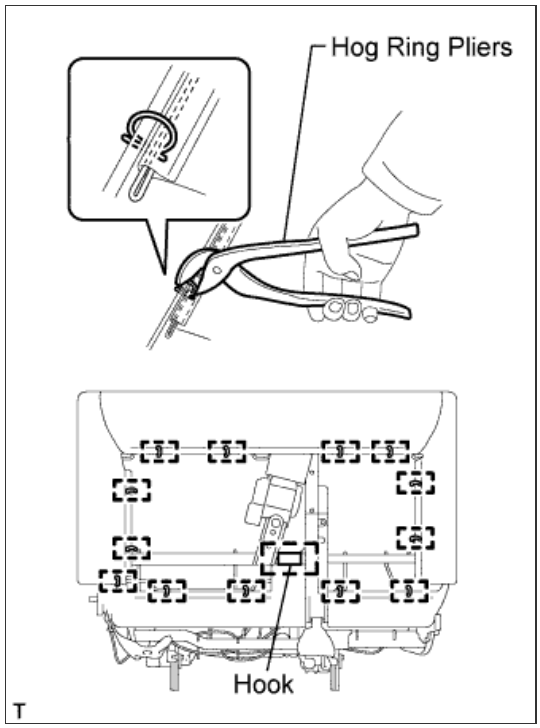

27. INSTALL REAR SEAT SHOULDER BELT HOLE COVER LH


a. Attach the 4 claws to install the cover.

b. Install the screw.

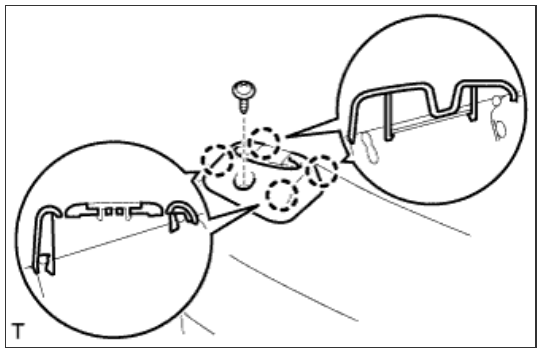


28. INSTALL SHOULDER BELT ANCHOR COVER

a. Attach the 2 claws to install the cover.

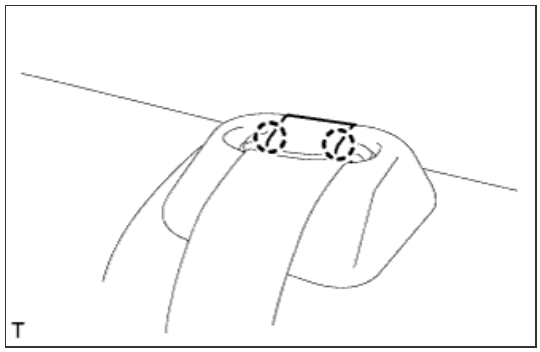


29. INSTALL REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ enter Armrest:
Attach the 4 claws to install the 2 supports.

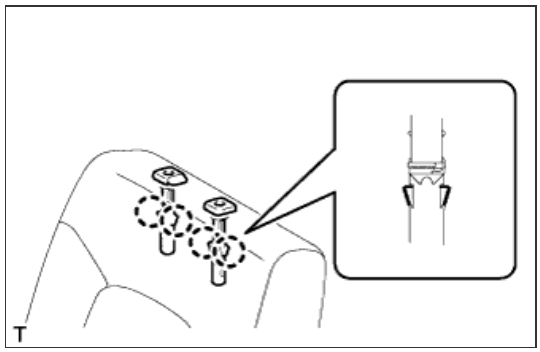

b. w/o enter Armrest:
Attach the 8 claws to install the 4 supports.

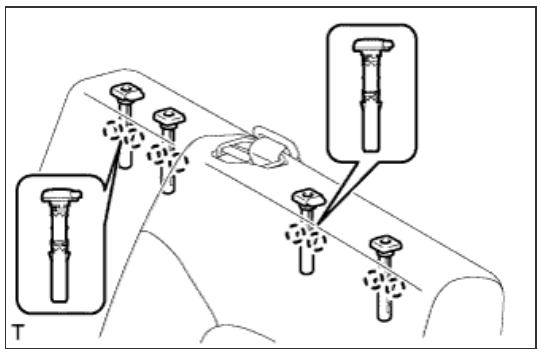


30. INSTALL REAR SEAT HEADREST ASSEMBLY

31. INSTALL REAR SEATBACK BOARD SUB-ASSEMBLY LH

a. w/ enter Armrest:

i. ush the board down to attach the 2 claws on the bottom.


ii. Attach the 2 claws on the top of the board to install it.

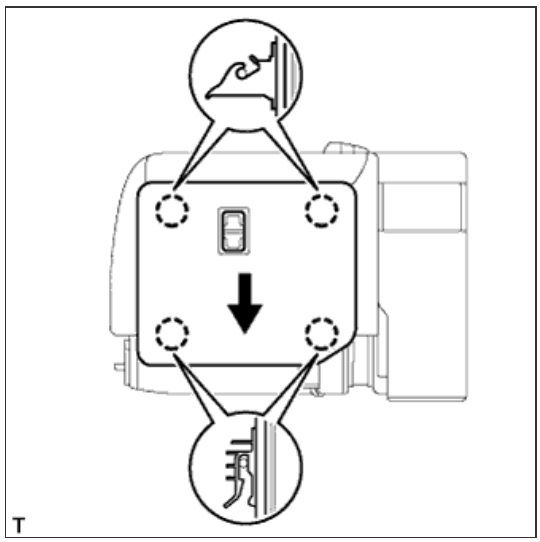

b. w/o enter Armrest:


i. ush the board down to attach the 3 claws on the bottom.

ii. Attach the 3 claws on the top of the board to install it.

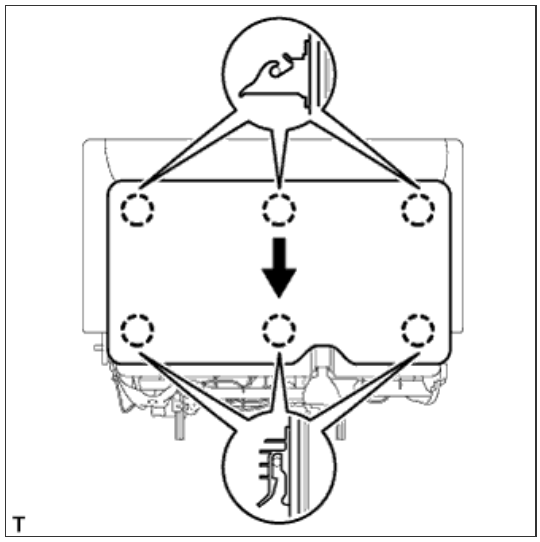

32. INSTALL REAR SEATBACK COVER


a. Attach the 4 claws to install the cover.

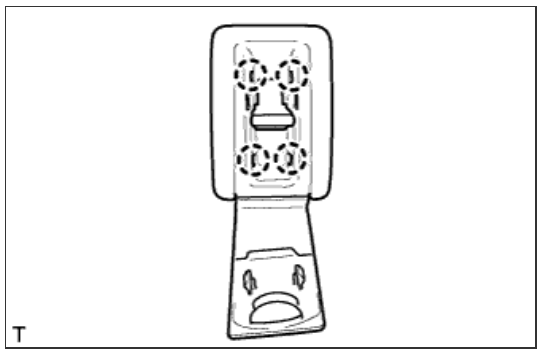

33. INSTALL REAR SEAT CUSHION HEATER ASSEMBLY (w/ Seat Heater System)

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

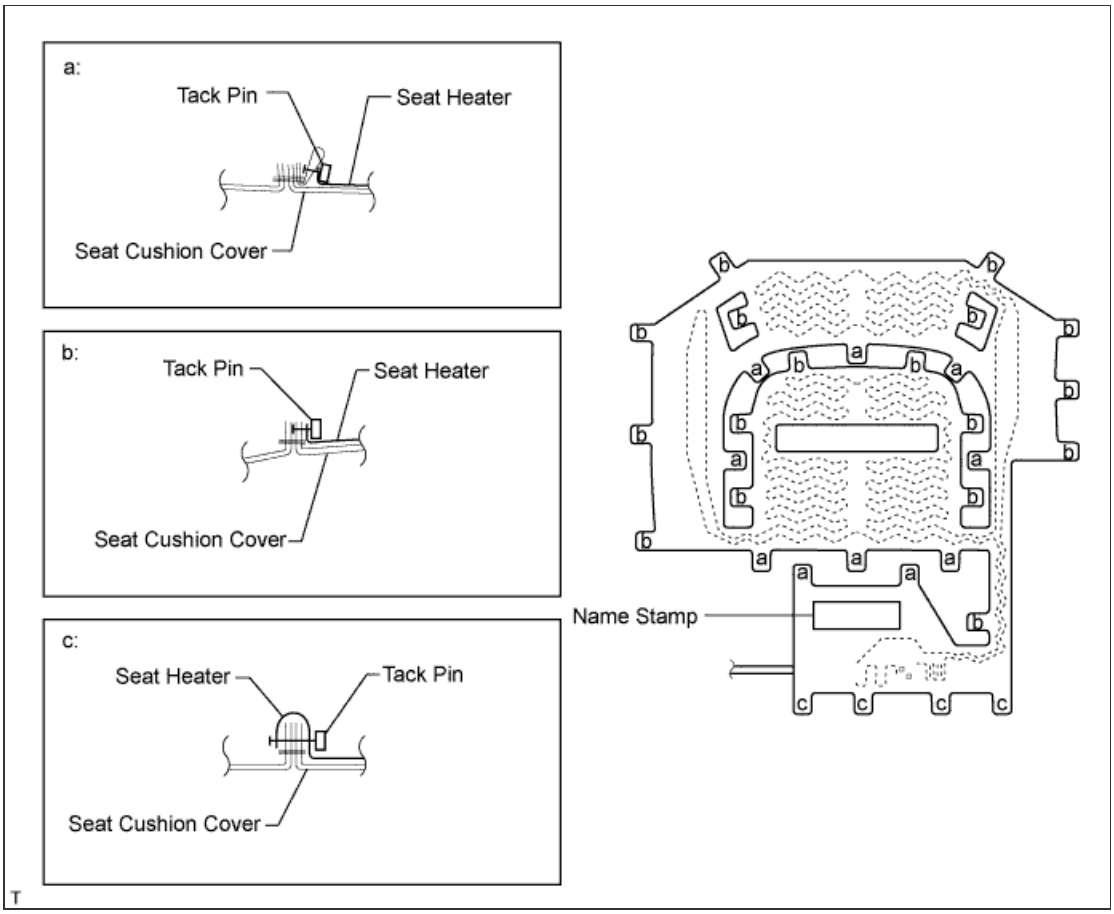


34. INSTALL REAR SEPARATE TYPE SEAT CUSHION COVER


a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

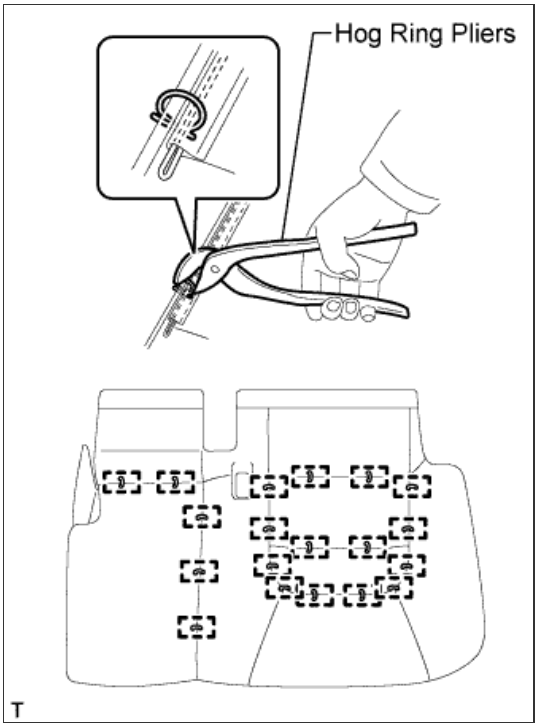

b. Attach the 3 pieces of fastening tape.

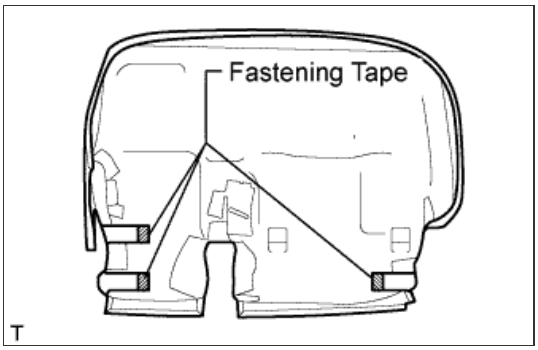


35. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.


b. w/ Rear Seat Side Airbag:
ass the side airbag wire harness through the hole in the seat cushion.

c. w/ Seat Heater System:

i. ass the seatback heater wire harness through the hole in the seat cushion.

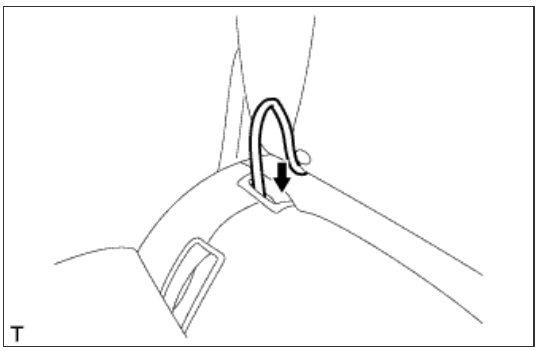

ii. onnect the 2 seat heater connectors.

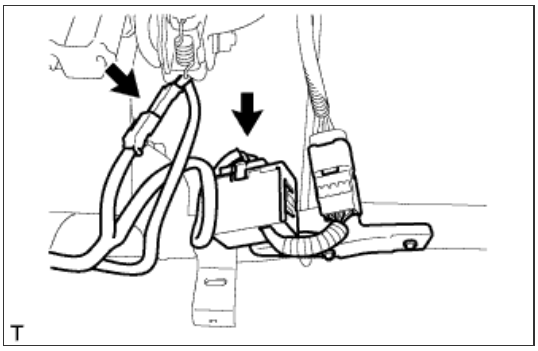


d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

36. CONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. onnect the belt anchor.

NOTICE:

o not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

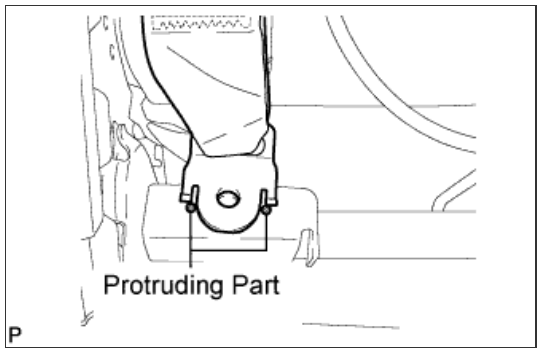

37. INSTALL REAR NO. 1 SEAT BELT INNER ASSEMBLY LH

a. Install the belt with the bolt.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

o not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

HINT:


The No. 1 seat 3 point type belt anchor is fi ed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, connect it when installing the rear No. 1 seat inner belt LH.

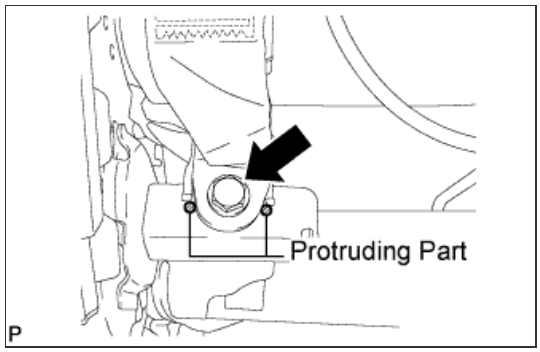


38. INSTALL FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY

39. INSTALL REAR SEAT TRACK HANDLE SUB-ASSEMBLY


a. Attach the cable clamp to connect the cable.

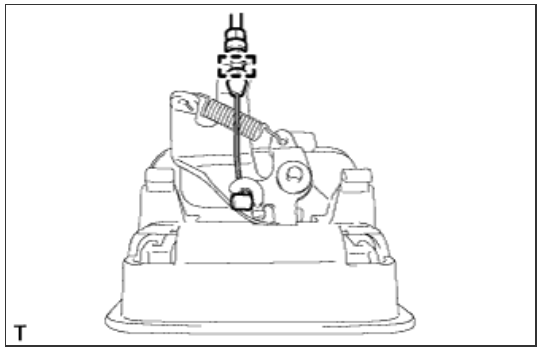

b. Attach the 2 cable clamps to connect the 2 cables.

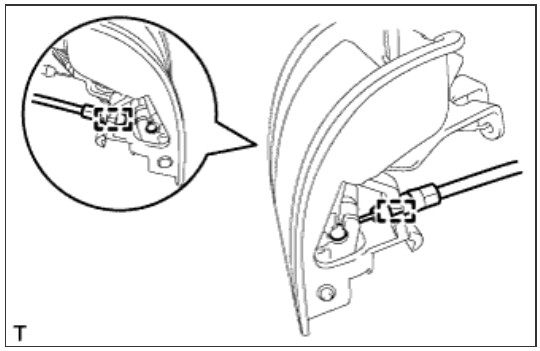


c. Install the seat track handle with the 2 screws.

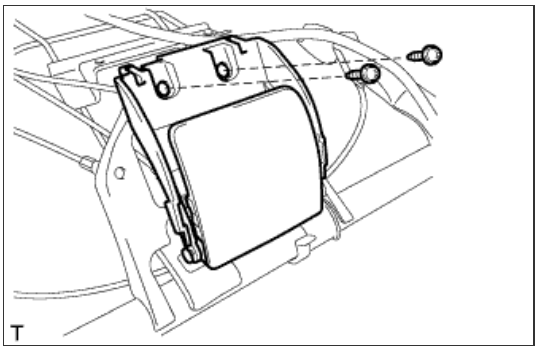

40. INSTALL REAR SEAT UNDER TRAY COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

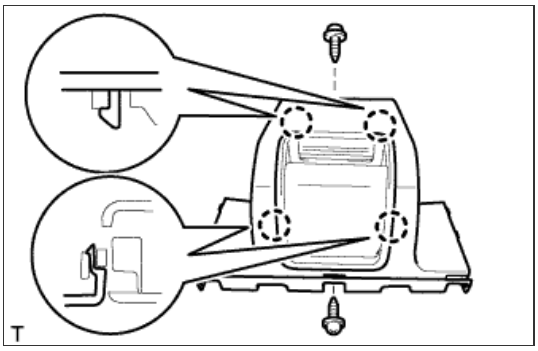

41. INSTALL REAR SEAT CUSHION COVER RH


a. Attach the 2 claws to install the cover.

b. Install the 4 screws.

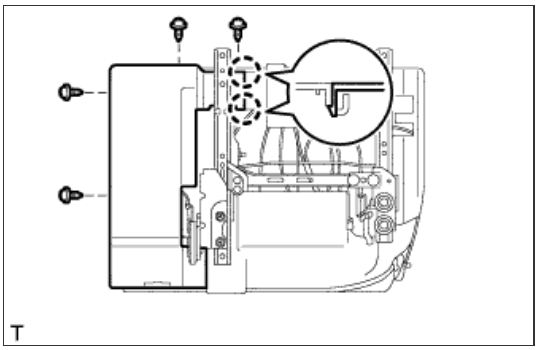

42. INSTALL NO. 1 SEAT CUSHION PLATE


a. Attach the 3 claws to install the seat cushion plate.

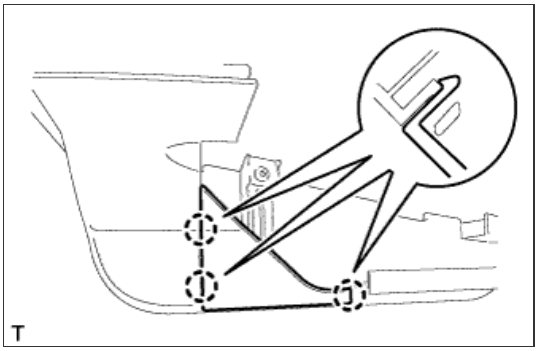


43. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and 2 clips to install the cover.

b. Install the 5 screws.

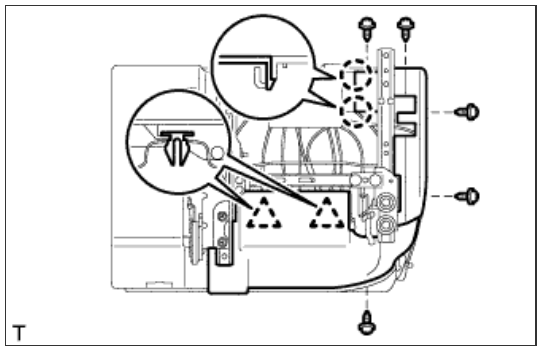


c. Attach the 10 claws.

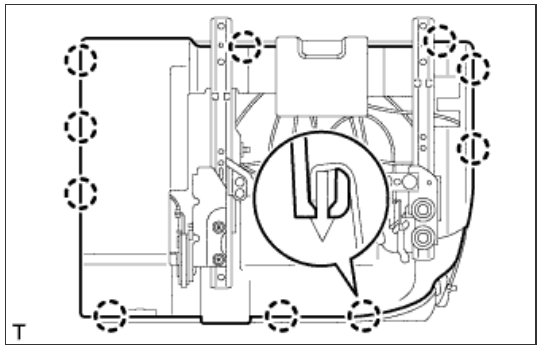

44. INSTALL REAR SEATBACK STAY COVER LH


a. Attach the 2 claws to install the cover.

b. Install the screw.

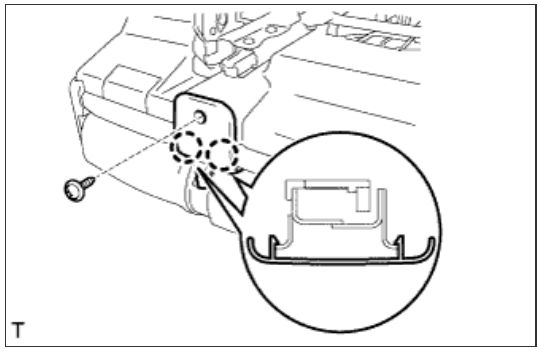


45. INSTALL SEAT BELT ANCHOR COVER CAP

a. Install the anchor cover cap with the screw.

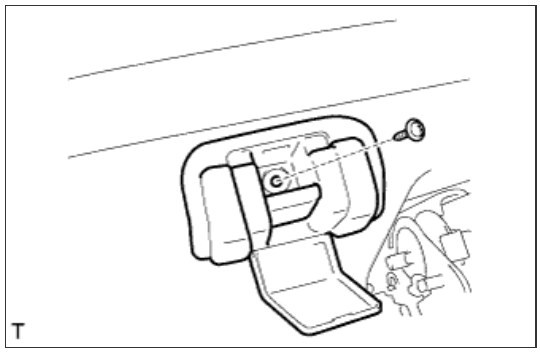


b. Attach the claw to close the cap.

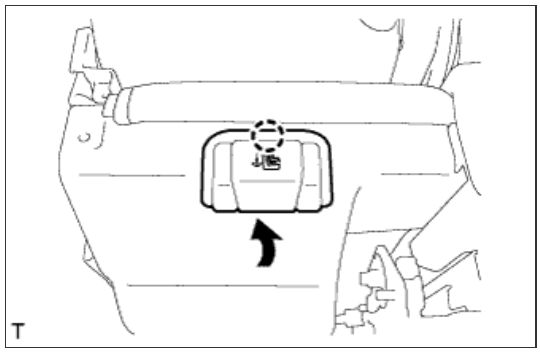

46. INSTALL REAR NO. 1 SEAT HIN E SUB-ASSEMBLY RH


a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

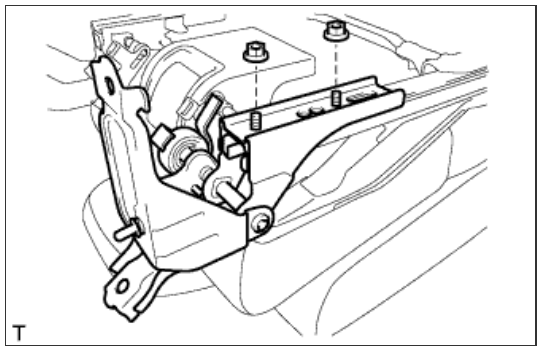

47. INSTALL REAR NO. 1 SEAT HIN E SUB-ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

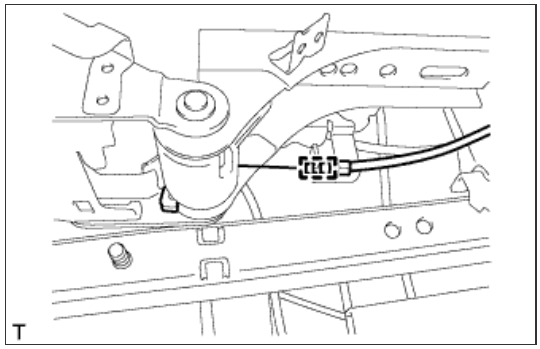


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.

d. w/ Seat Heater System:
Attach the wire harness clamp.

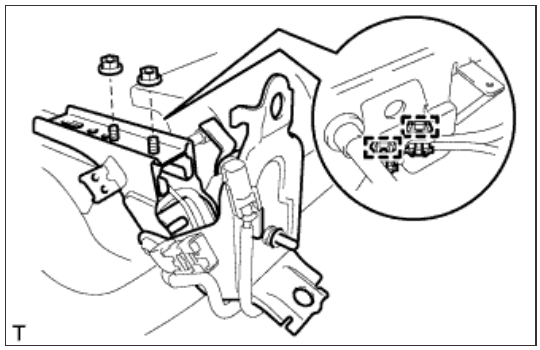


48. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

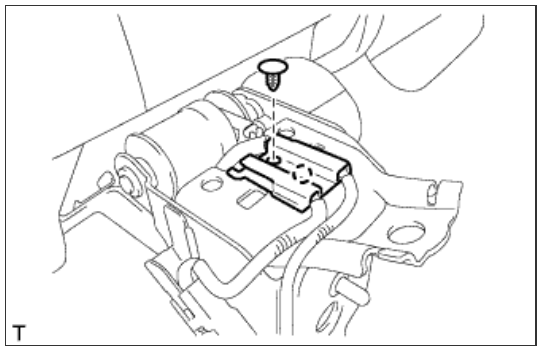


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

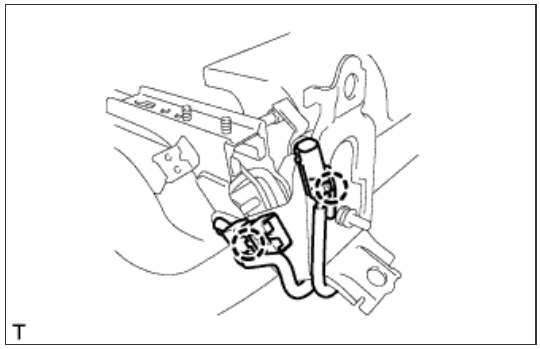

49. INSTALL REAR SEAT SIDE HIN E MALE COVER RH

a. Attach the clip to install the cover.

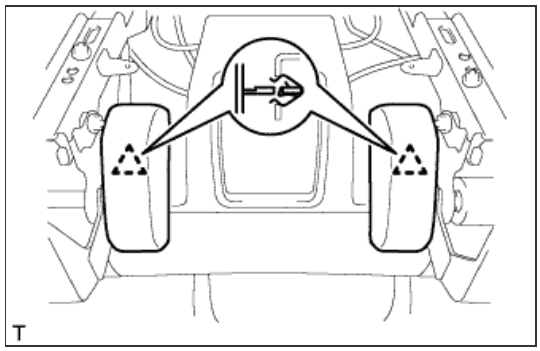


50. INSTALL REAR SEAT SIDE HIN E MALE COVER LH

a. Attach the clip to install the cover.

51. INSTALL REAR SEAT SIDE HIN E FEMALE COVER

a. Attach the 6 claws to install the 2 covers.

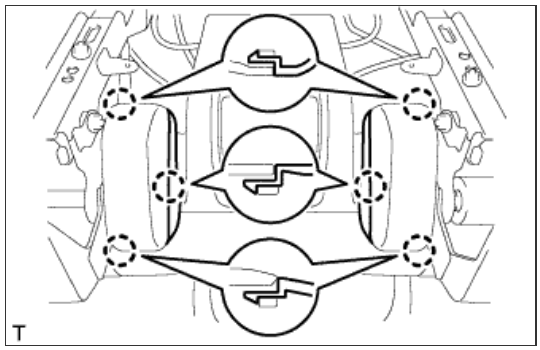


52. REMOVE FOLD SEAT STOPPER BAND ASSEMBLY

a. Install the fold seat stopper band to the seat leg side cover.


53. INSTALL REAR NO. 2 SEAT LE SIDE COVER

a. ass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

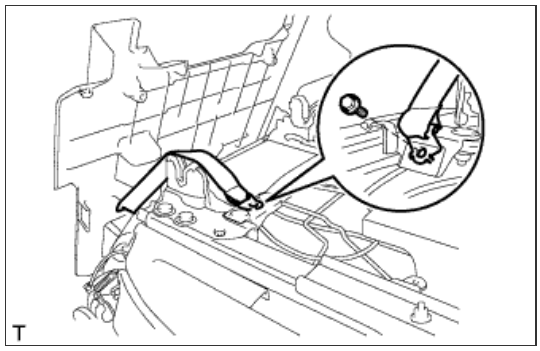


b. Attach the 4 claws to install the seat leg side cover.

c. Install the 4 screws.

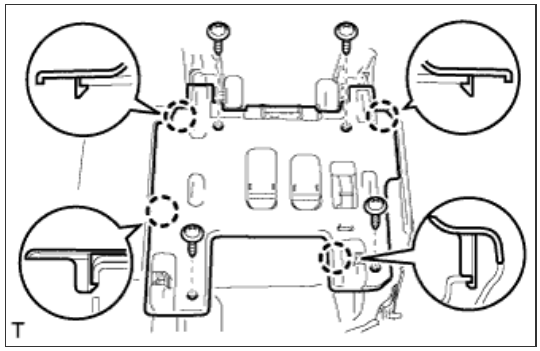


54. INSTALL NO. 1 SEAT CUSHION COVER

a. Attach the 4 claws to install the 2 covers.

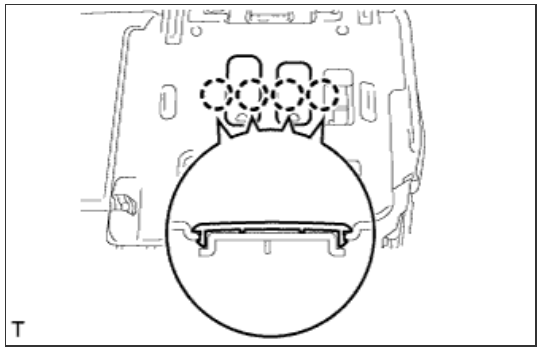


55. INSTALL UPPER SEAT TRACK RAIL COVER RH

a. Attach the 2 claws to install the cover.

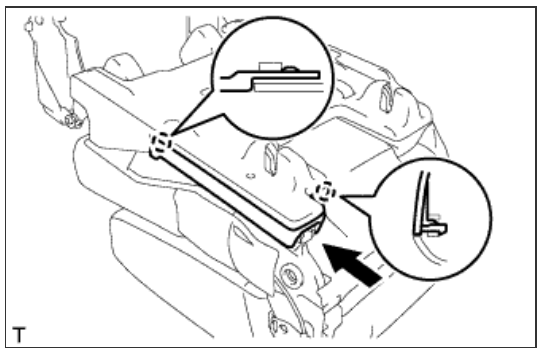

56. INSTALL UPPER SEAT TRACK RAIL COVER LH


a. Attach the 2 claws to install the cover.

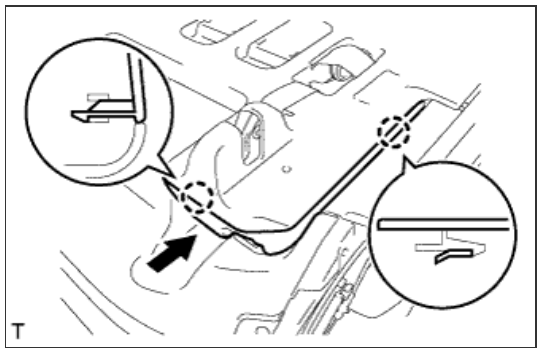

57. INSTALL REAR NO. 1 SEAT RECLININ COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

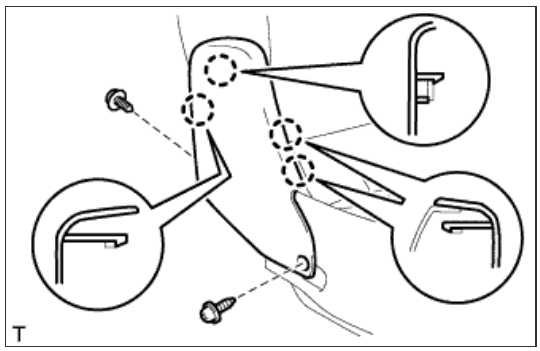

58. INSTALL REAR NO. 1 SEAT RECLININ COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

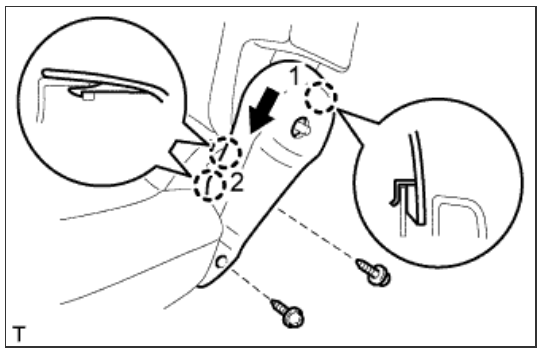


59. INSTALL RECLININ ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

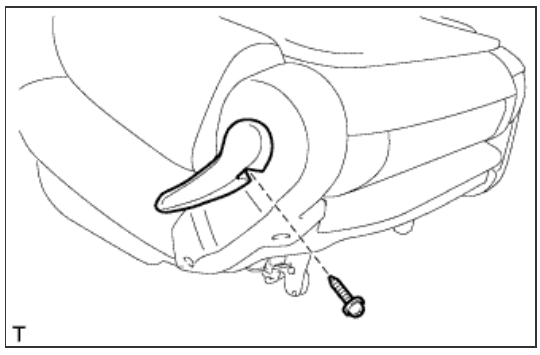

60. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

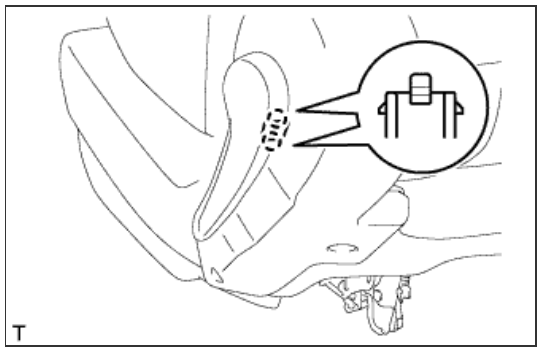

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT LOCK CONTROL LEVER LH

a. Install the lock control lever with the bolt.

Torque:
13 N*m{ 133 kgf*cm , 10 ft.*lbf }

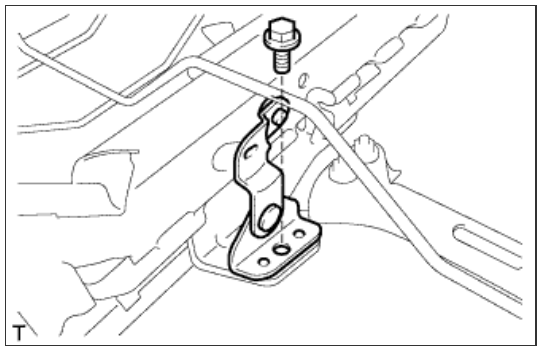

2. INSTALL REAR SEAT CUSHION FRAME SUB-ASSEMBLY LH


a. Temporarily install the seat cushion frame with the 5 nuts and bolt.

b. Tighten the 5 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. Using a T40 "TORX" socket, tighten the bolt.


Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

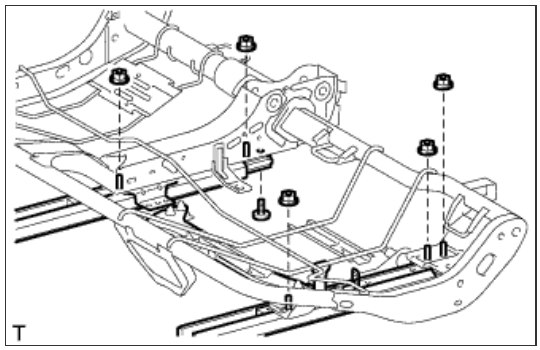

3. INSTALL NO. 1 SEAT LE ASSEMBLY LH

a. Using a T40 "TORX" socket, install the seat leg assembly with the 2 bolts.

Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

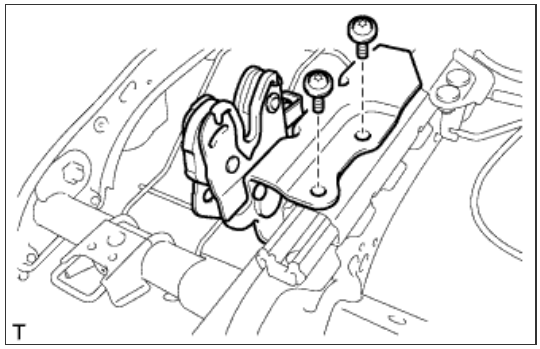


4. INSTALL REAR SEAT INNER BELT ASSEMBLY

a. Install the seat belt with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }


NOTICE:

The anchor part of the seat belt must not overlap the protruding part.

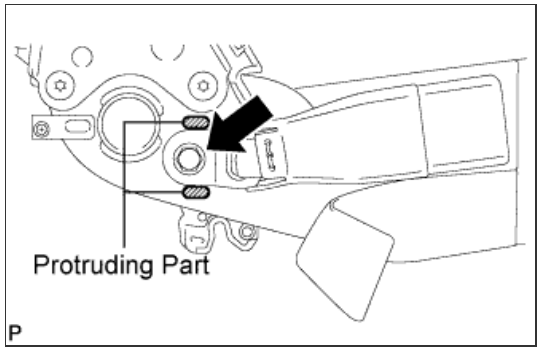

5. INSTALL SEAT HEATER CONTROL SUB-ASSEMBLY LH (w/ Seat Heater System)


a. Attach the 2 claws to install the seat heater control.

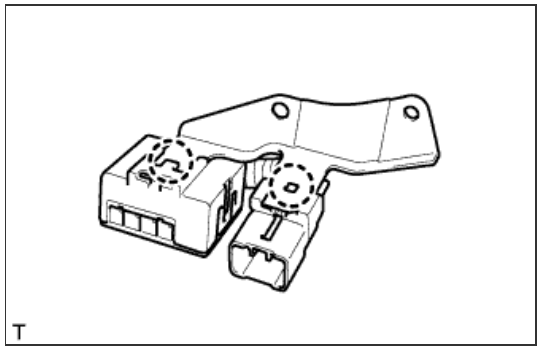

6. INSTALL REAR SEAT CUSHION HOLDER BRACKET LH (w/ Seat Heater System)

a. Install the holder bracket with the 2 screws.

b. onnect the seat wire connector.

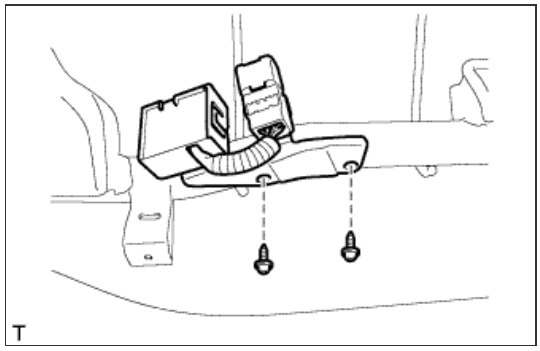


7. INSTALL REAR NO. 1 SEAT LOCK CABLE ASSEMBLY

a. Attach the clamp to install the seat lock cable.


b. Attach the 3 cable clamps to connect the 3 cables.

c. onnect the cable and install a new cable tie.

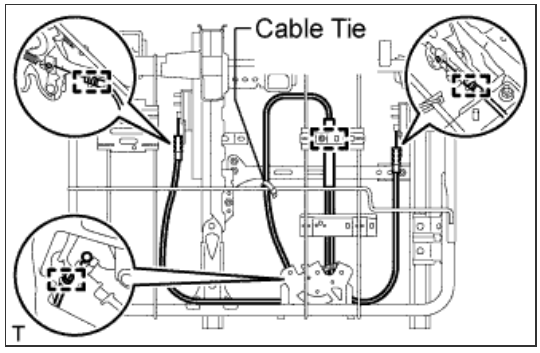

d. Install the lower seat track bracket with the 2 nuts.


Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

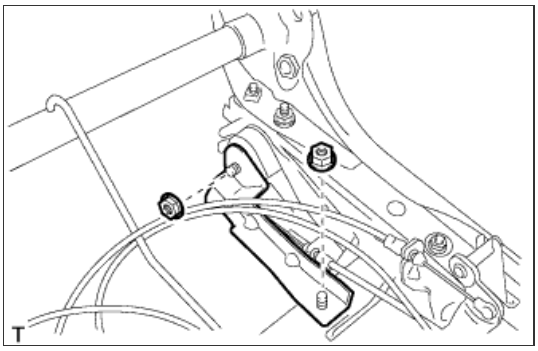

8. INSTALL FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY


a. Install the 2 fold seat lock control cables.

b. Attach the 2 cable clamps to connect the 2 cables.

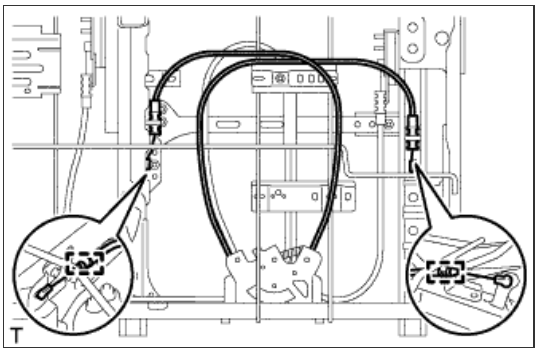

9. INSTALL REAR SEATBACK FRAME SUB-ASSEMBLY LH

a. Install the lower seatback cover.

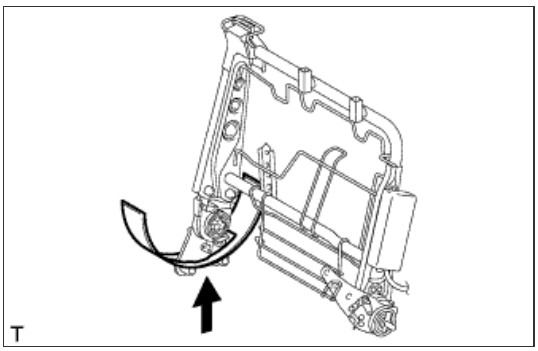


b. Temporarily install the seatback frame with the 4 bolts.

c. LH Side:
Using a T40 "TORX" socket, tighten the 2 bolts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

d. RH Side:
Using a T55 "TORX" socket, tighten the 2 bolts.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

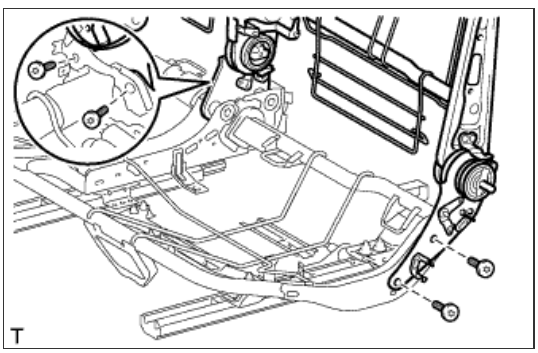

10. INSTALL NO. 2 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Attach the clamp to install the lock control cable.


b. Attach the 2 cable clamps to connect the cable.

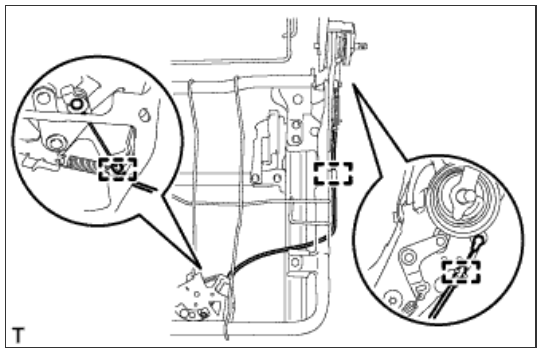

11. INSTALL RECLININ ADJUSTIN CABLE ASSEMBLY LH

a. Attach the clamp to install the adjusting cable.

b. Attach the 2 cable clamps to connect the cable.

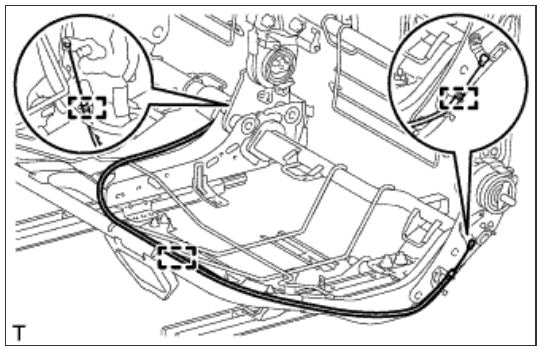


12. INSTALL NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Install the belt with the nut labeled A.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

b. Install the belt sensor with the 3 nuts labeled B.

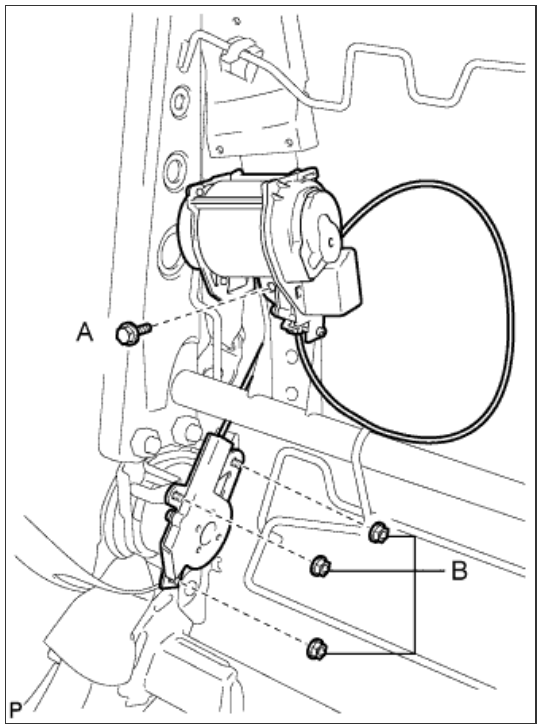


13. INSTALL REAR SEAT SHOULDER BELT HOLE COVER LH

a. Install the seat belt as shown in the illustration.

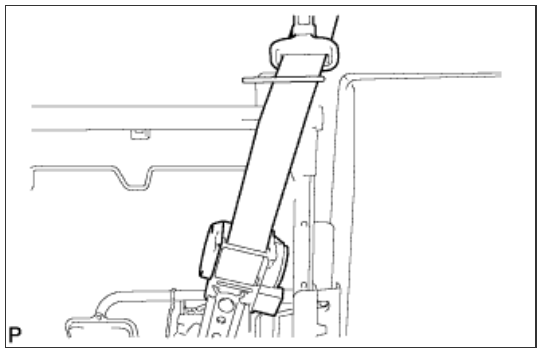


b. Attach the 3 claws to install the shoulder belt hole cover.

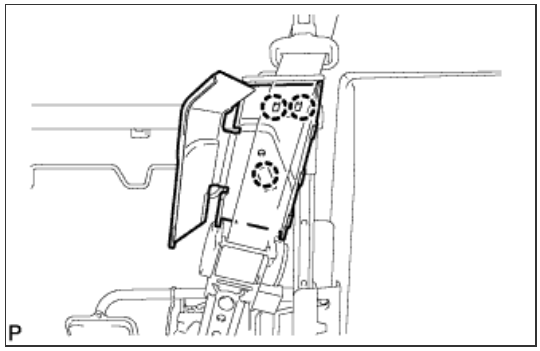

14. INSTALL REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the cover.


b. Install the 4 screws.

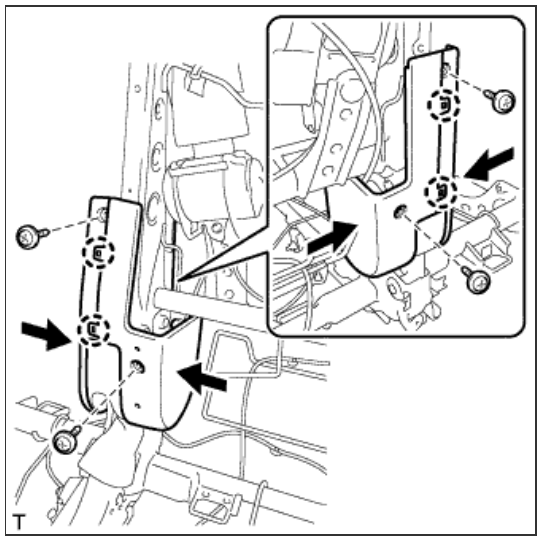

15. INSTALL REAR SEATBACK HIN E COVER LH

a. Attach the claw to install the cover.


b. Install the screw.

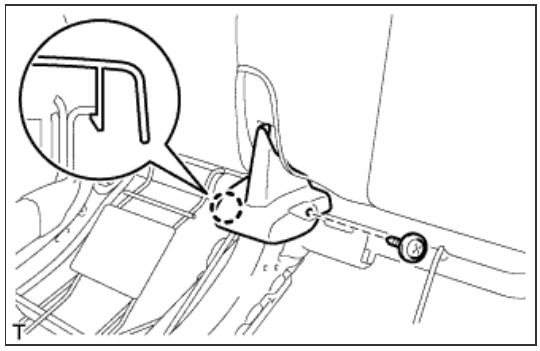

16. INSTALL REAR NO. 1 SEAT RECLININ COVER RH

a. Attach the claw to install the cover.


b. Install the screw.

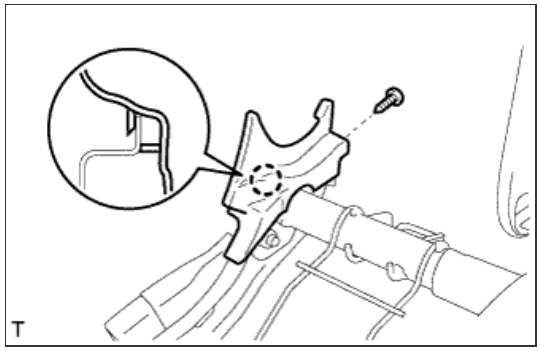

17. INSTALL REAR NO. 2 SEAT RECLININ COVER LH

a. Attach the clamp to install the cover.


b. Install the screw.

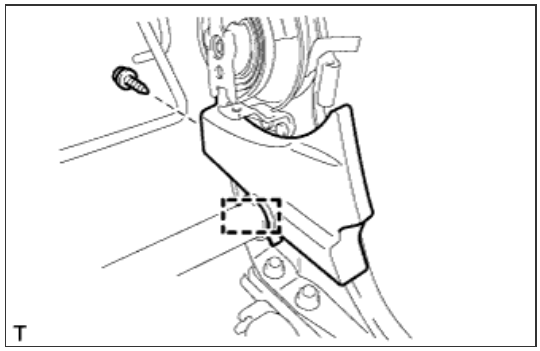

18. INSTALL REAR SEAT RECLININ COVER LH


a. Attach the claw to install the cover.

b. Install the screw.

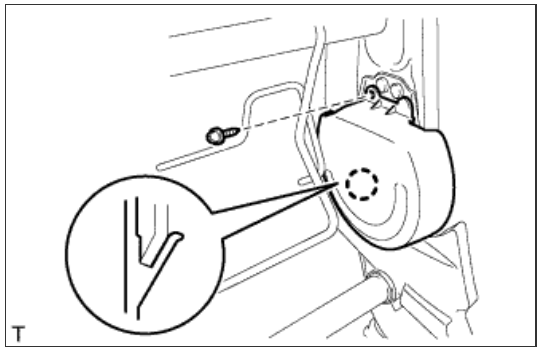


19. INSTALL CUP HOLDER ASSEMBLY (w/ Center Armrest)

a. Attach the 2 clips to install the cup holder.

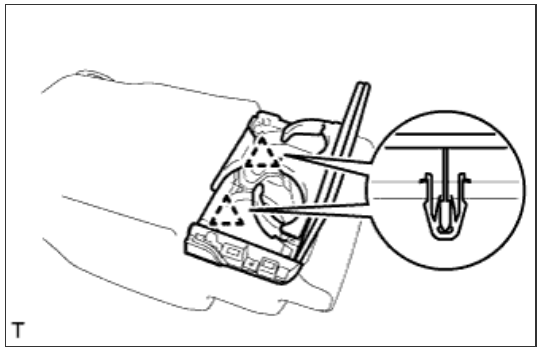


b. Install the 2 screws.

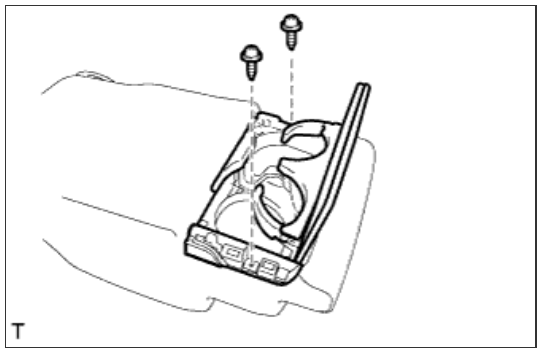

20. INSTALL NO. 1 SEAT ARMREST PLATE (w/ Center Armrest)

a. Attach the 2 claws and 4 clips to install the 2 armrest plates.

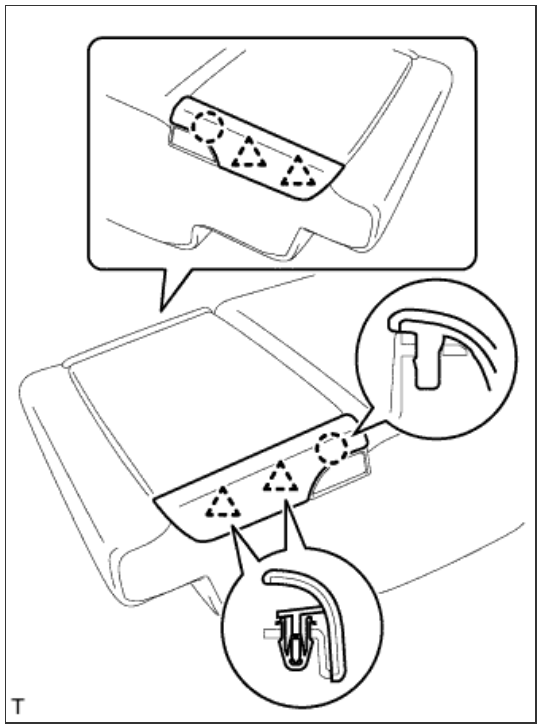


21. INSTALL REAR CENTER SEAT HEADREST ASSEMBLY (w/ Center Armrest)

22. INSTALL REAR CENTER SEAT ARMREST ASSEMBLY (w/ Center Armrest)

a. Using a T40 "TORX" socket, install the center seat armrest with the 2 bolts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

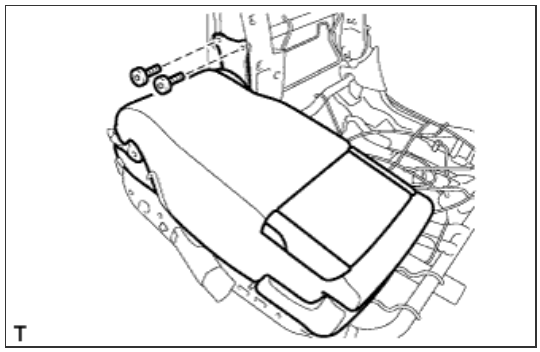

23. INSTALL SEATBACK STOPPER PLATE

a. w/ enter Armrest:

i. Install the bush to the stopper plate.


ii. Temporarily install the stopper plate with the 3 bolts.

iii. Using a T40 "TORX" socket, tighten the 2 bolts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

iv. Tighten the bolt.

Torque:
15 N*m{ 153 kgf*cm , 11 ft.*lbf }

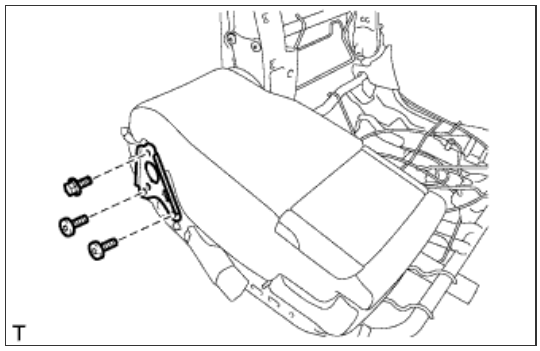

b. w/o enter Armrest:

i. Install the bush to the stopper plate.


ii. Temporarily install the stopper plate with the 3 bolts.

iii. Using a T40 "TORX" socket, tighten the 2 bolts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

iv. Tighten the bolt.


Torque:
15 N*m{ 153 kgf*cm , 11 ft.*lbf }

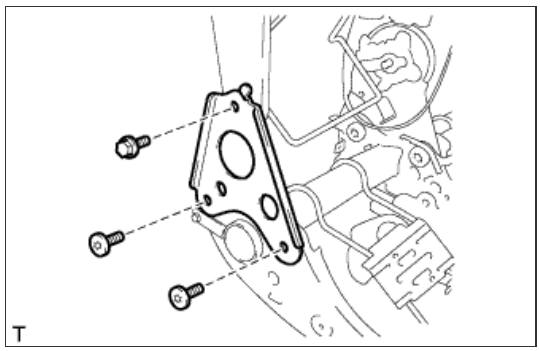

24. INSTALL REAR SEATBACK HEATER ASSEMBLY (w/ Seat Heater System)

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

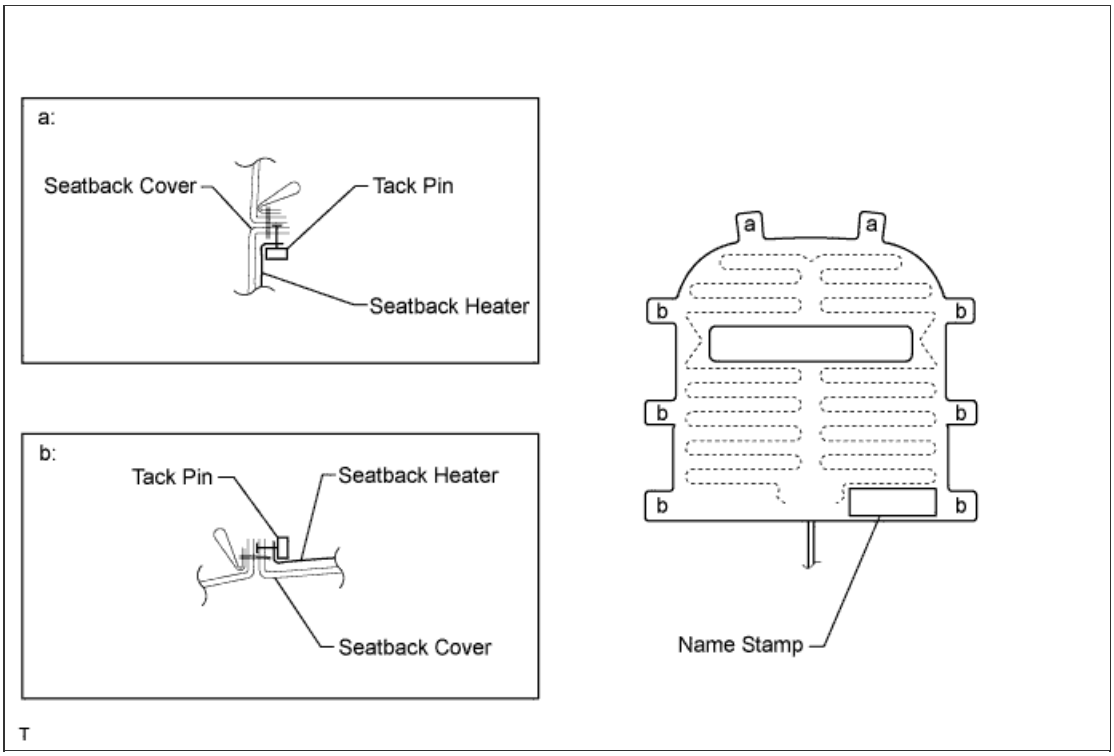


25. INSTALL REAR SEPARATE TYPE SEATBACK COVER

a. w/ enter Armrest:
Using hog ring pliers, install the seatback cover with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

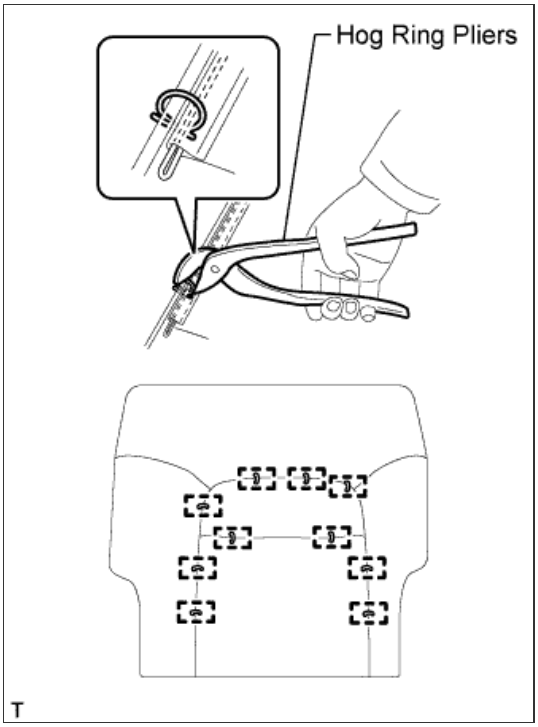


b. w/o enter Armrest:
Using hog ring pliers, install the seatback cover with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

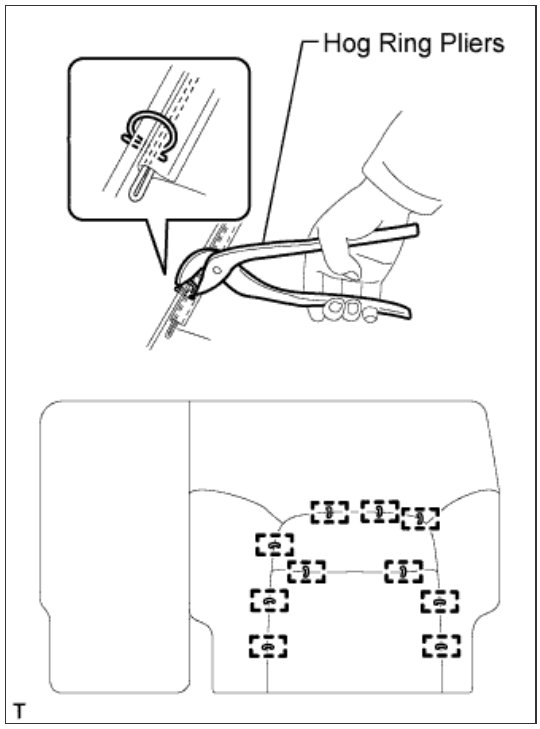


c. w/ Rear Seat Side Airbag:
onnect the seatback cover bracket to the seatback pad.

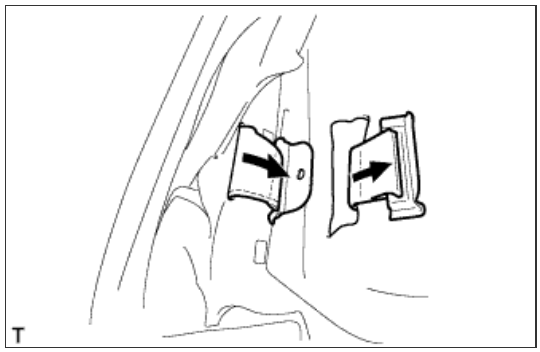

26. INSTALL SEATBACK COVER WITH PAD


a. Install the seatback cover with pad.

b. w/ enter Armrest:
ull out the seat belt.

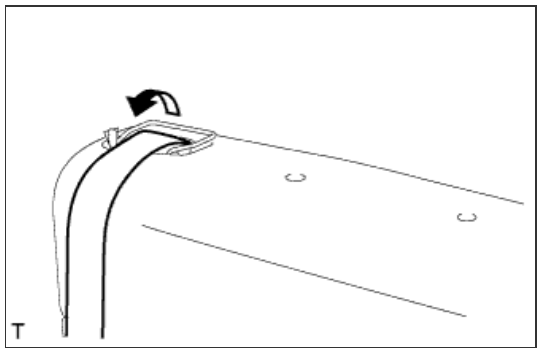


c. w/o enter Armrest:
ull out the seat belt.

d. w/ Rear Seat Side Airbag:
ass the side airbag wire harness through the hole in the seatback.

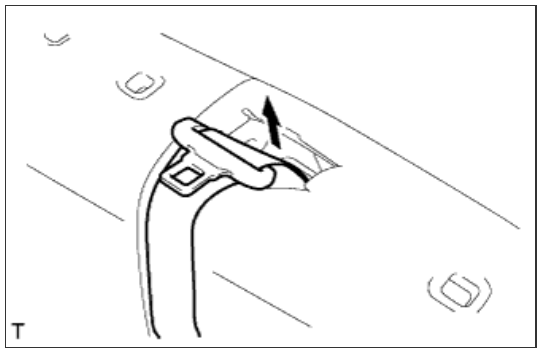


e. w/ Seat Heater System:
ass the seatback heater wire harness through the hole in the seatback.

i.

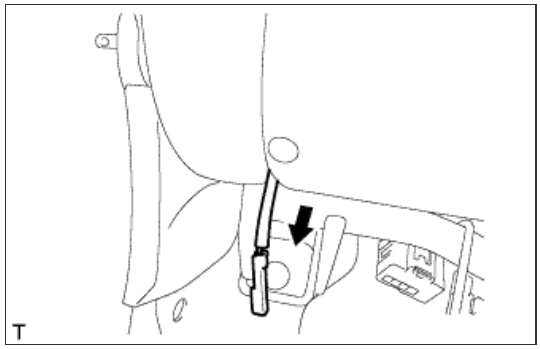

ii. onnect the seatback heater wire harness and install a new cable tie.

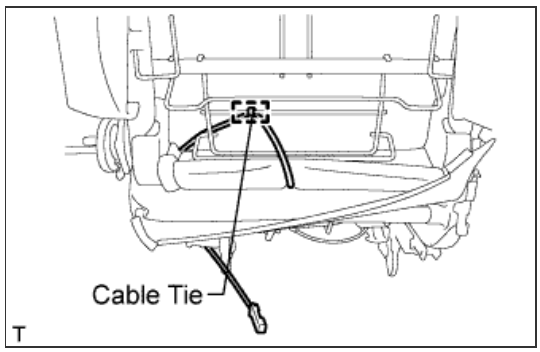


f. w/ Rear Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the cap nut.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

NOTICE:


After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

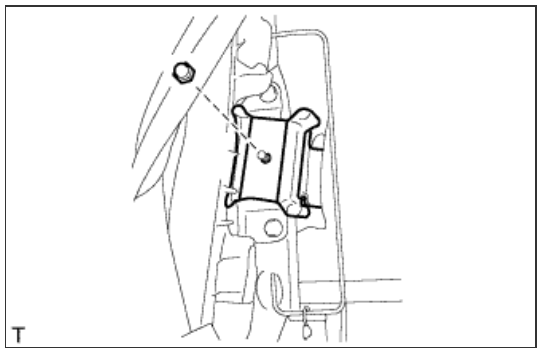

g. w/ enter Armrest:
Using hog ring pliers, install new hog rings to the seatback frame.

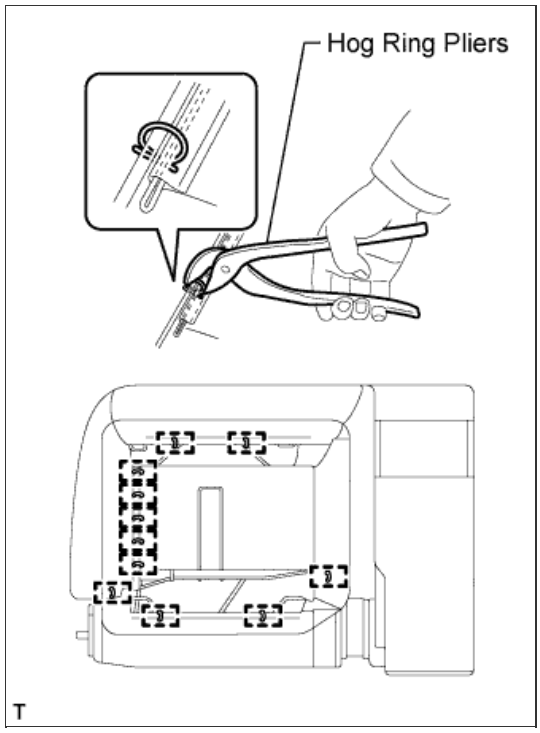


h. w/o enter Armrest:
Using hog ring pliers, install new hog rings to the seatback frame.

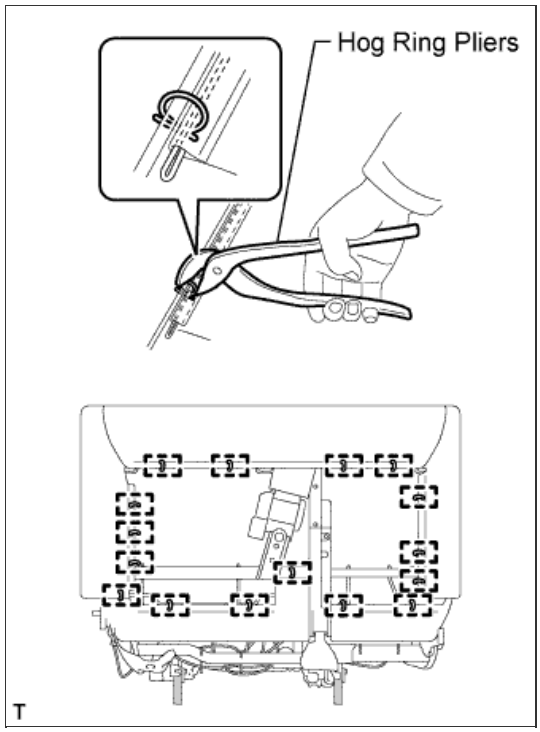

27. INSTALL REAR SEAT SHOULDER BELT HOLE COVER LH


a. Attach the 4 claws to install the cover.

b. Install the screw.

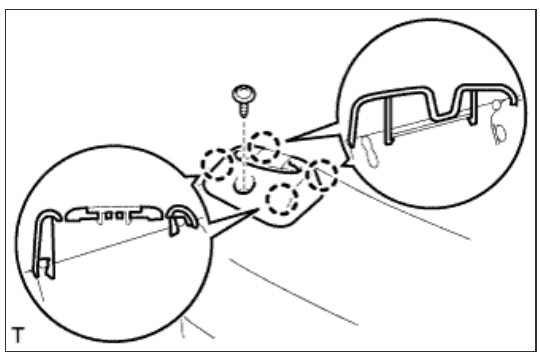


28. INSTALL SHOULDER BELT ANCHOR COVER

a. Attach the 2 claws to install the cover.

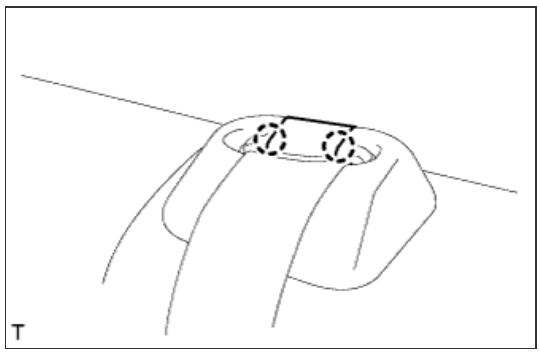


29. INSTALL REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ enter Armrest:
Attach the 4 claws to install the 2 supports.

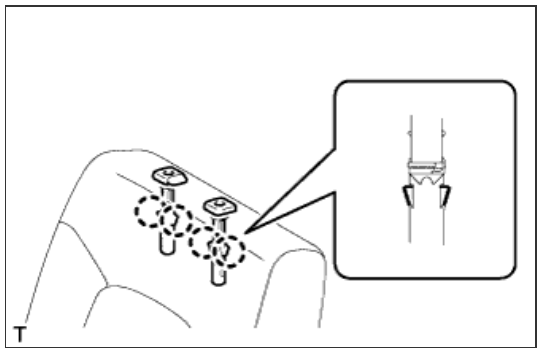

b. w/o enter Armrest:
Attach the 8 claws to install the 4 supports.

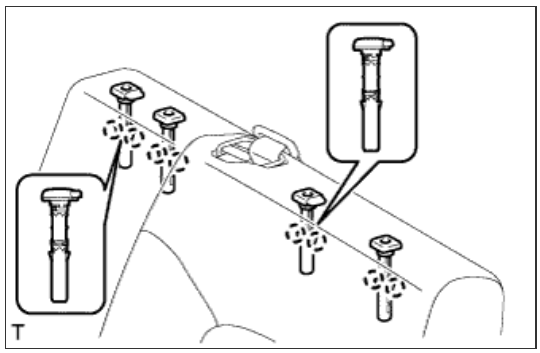


30. INSTALL REAR SEAT HEADREST ASSEMBLY

31. INSTALL REAR SEATBACK BOARD SUB-ASSEMBLY LH

a. w/ enter Armrest:

i. ush the board down to attach the 2 claws on the bottom.


ii. Attach the 2 claws on the top of the board to install it.

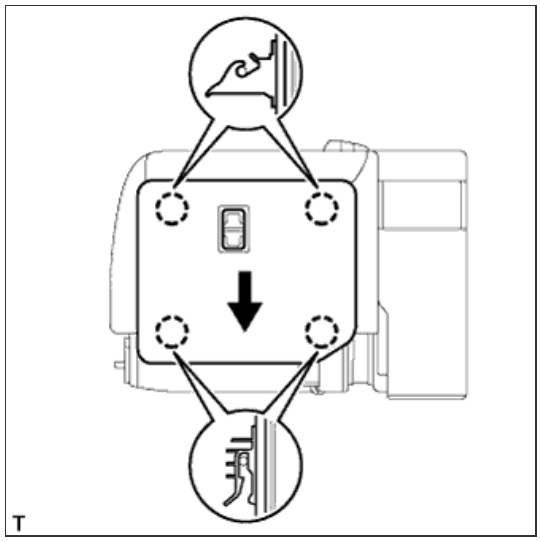

b. w/o enter Armrest:


i. ush the board down to attach the 3 claws on the bottom.

ii. Attach the 3 claws on the top of the board to install it.

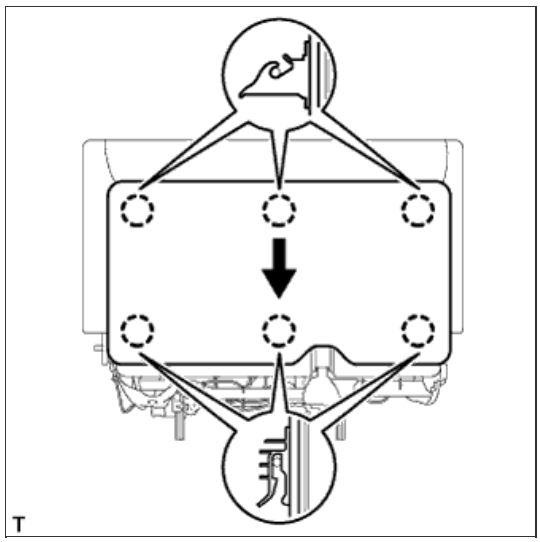

32. INSTALL REAR SEATBACK COVER


a. Attach the 4 claws to install the cover.

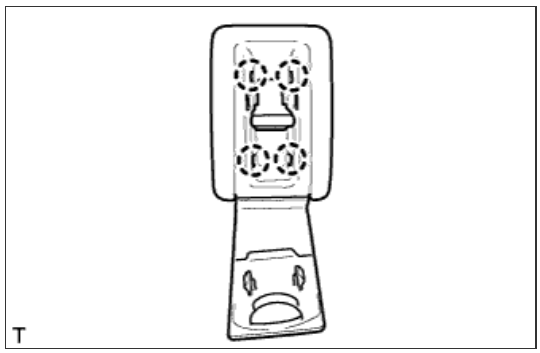

33. INSTALL REAR SEAT CUSHION HEATER ASSEMBLY (w/ Seat Heater System)

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

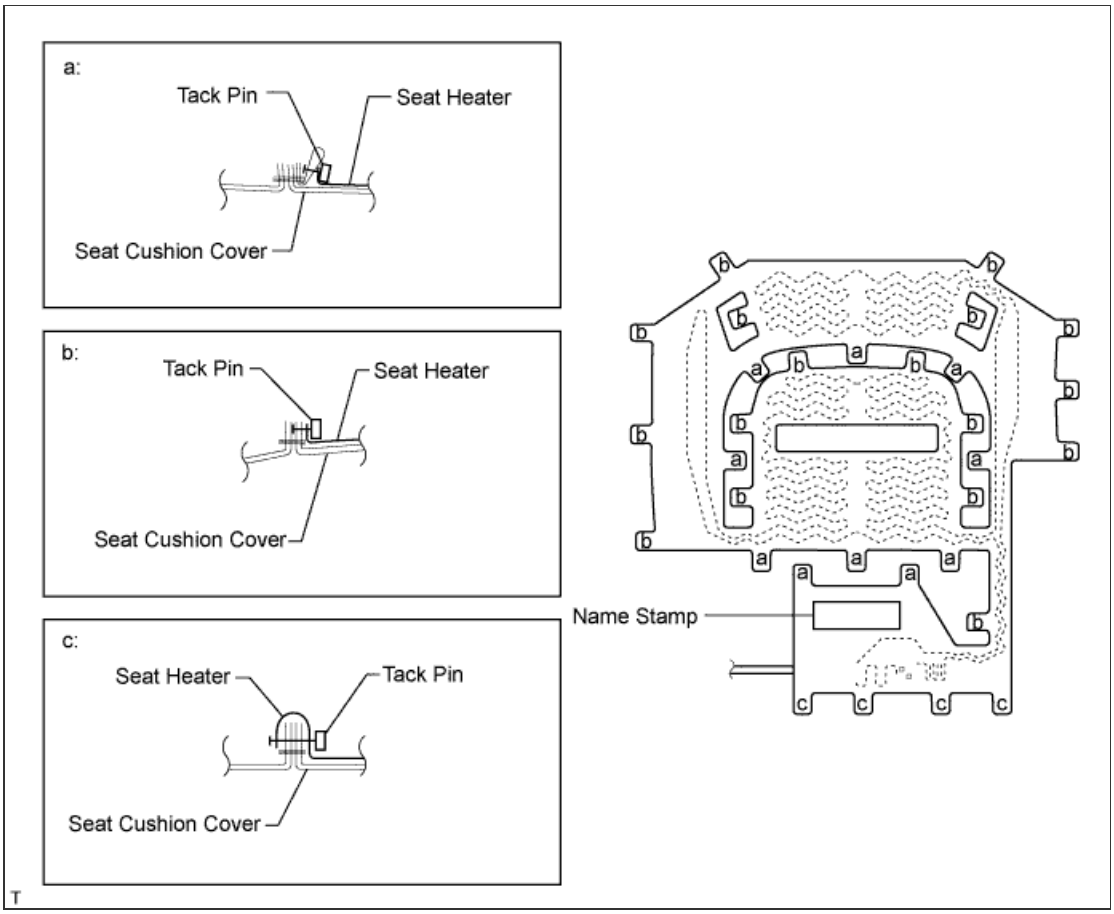


34. INSTALL REAR SEPARATE TYPE SEAT CUSHION COVER


a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

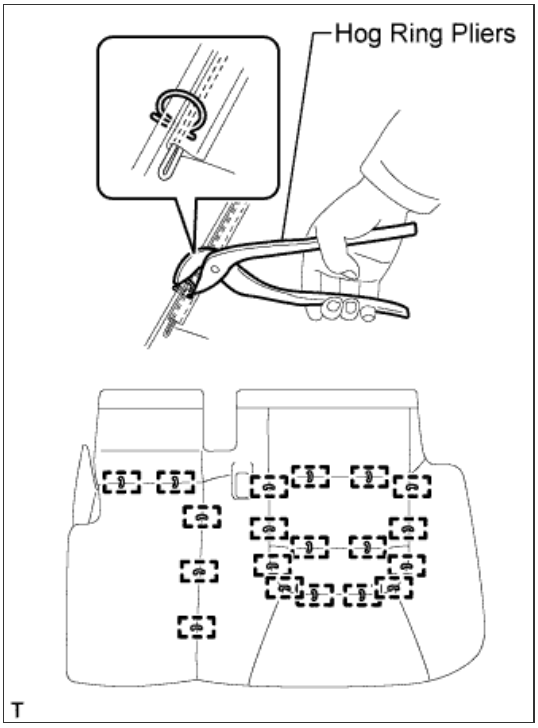

b. Attach the 3 pieces of fastening tape.

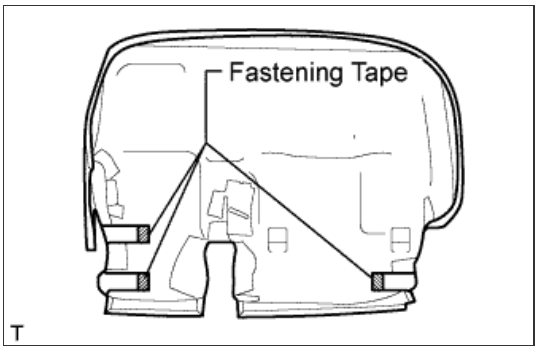


35. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.


b. w/ Rear Seat Side Airbag:
ass the side airbag wire harness through the hole in the seat cushion.

c. w/ Seat Heater System:

i. ass the seatback heater wire harness through the hole in the seat cushion.

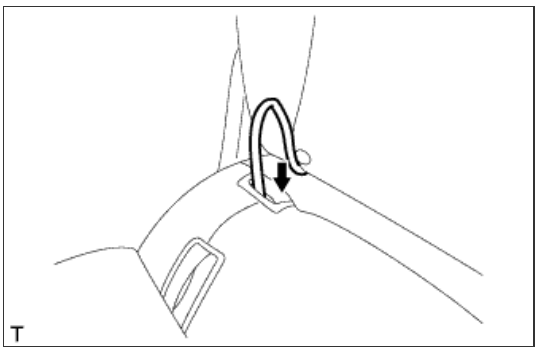

ii. onnect the 2 seat heater connectors.

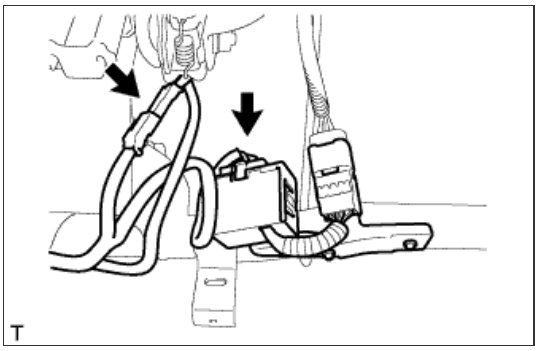


d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

36. CONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. onnect the belt anchor.

NOTICE:

o not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

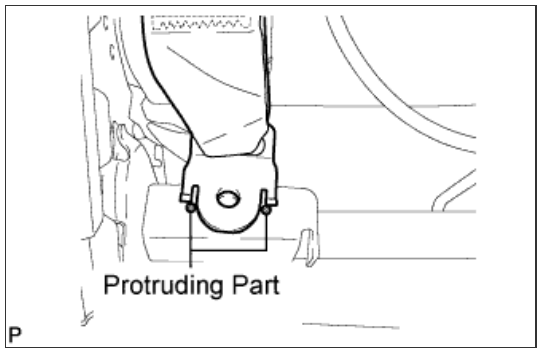

37. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Install the belt with the bolt.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

o not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

HINT:


The No. 1 seat 3 point type belt anchor is fi ed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, connect it when installing the rear No. 1 seat inner belt LH.

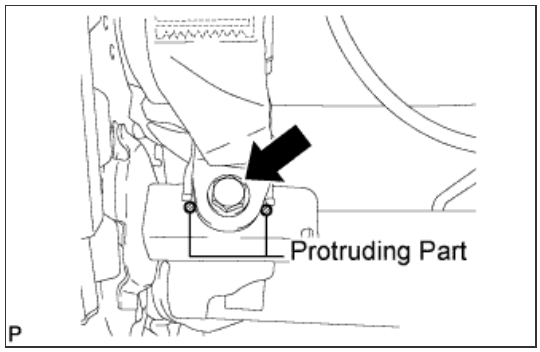


38. INSTALL FOLD SEAT LOCK CONTROL CABLE SUB-ASSEMBLY

39. INSTALL REAR SEAT TRACK HANDLE SUB-ASSEMBLY


a. Attach the cable clamp to connect the cable.

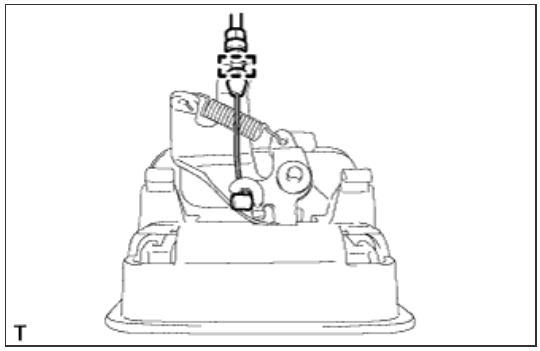

b. Attach the 2 cable clamps to connect the 2 cables.

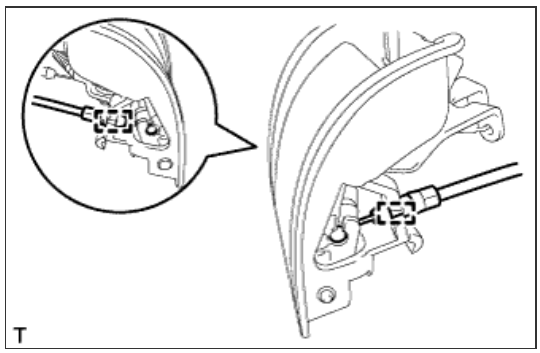


c. Install the seat track handle with the 2 screws.

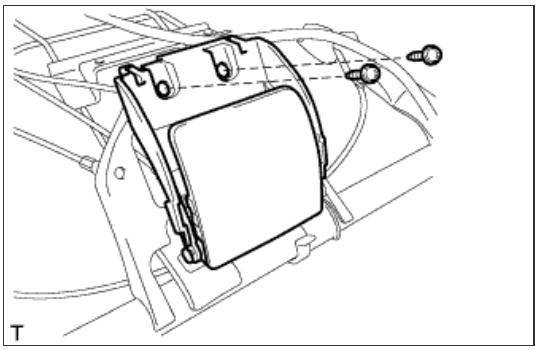

40. INSTALL REAR SEAT UNDER TRAY COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

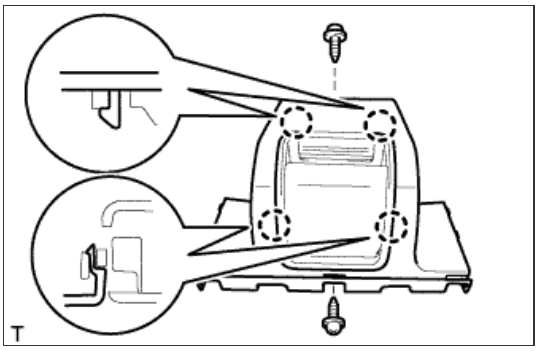

41. INSTALL REAR SEAT CUSHION COVER RH


a. Attach the 2 claws to install the cover.

b. Install the 4 screws.

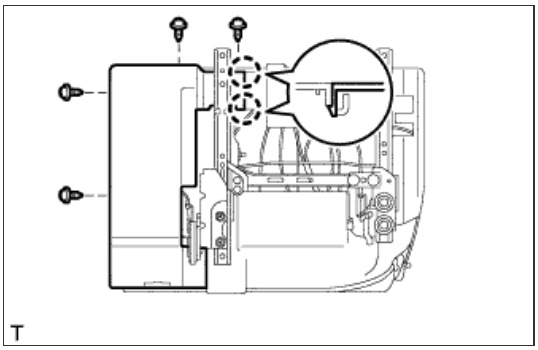

42. INSTALL NO. 1 SEAT CUSHION PLATE


a. Attach the 3 claws to install the seat cushion plate.

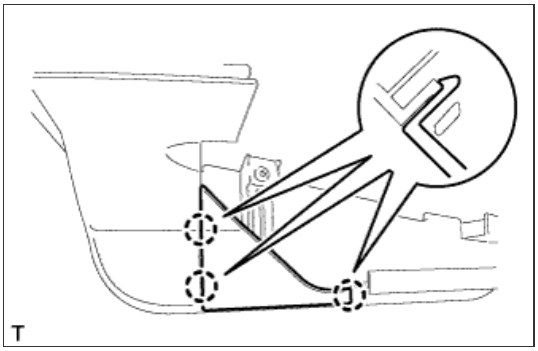


43. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and 2 clips to install the cover.

b. Install the 5 screws.

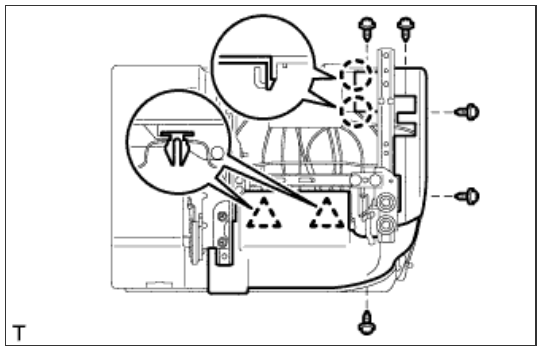


c. Attach the 10 claws.

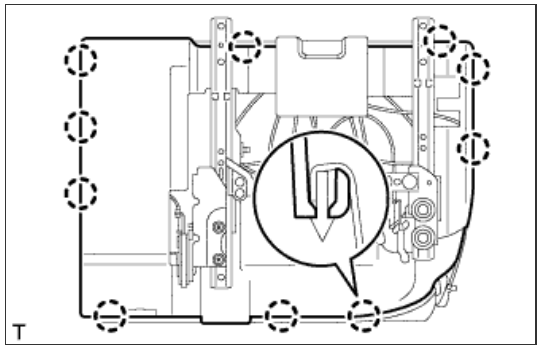

44. INSTALL REAR SEATBACK STAY COVER LH


a. Attach the 2 claws to install the cover.

b. Install the screw.

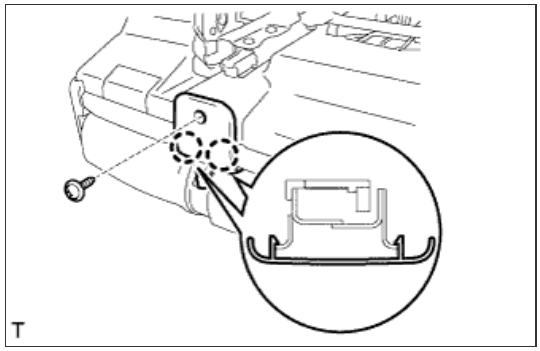


45. INSTALL SEAT BELT ANCHOR COVER CAP

a. Install the anchor cover cap with the screw.

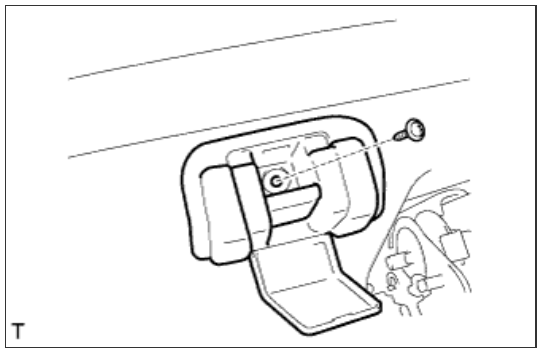


b. Attach the claw to close the cap.

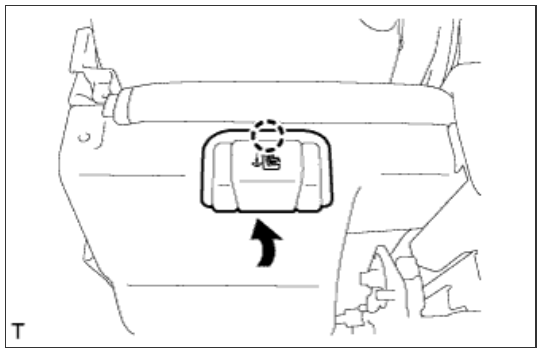

46. INSTALL REAR NO. 1 SEAT HIN E SUB-ASSEMBLY RH


a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

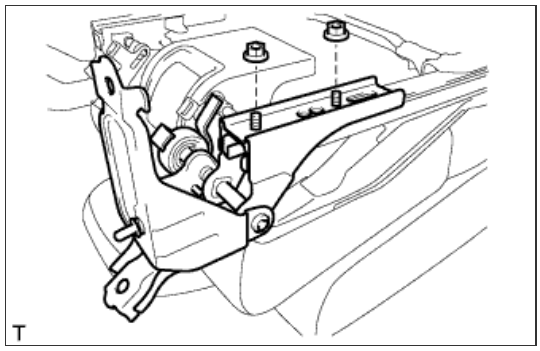

47. INSTALL REAR NO. 1 SEAT HIN E SUB-ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

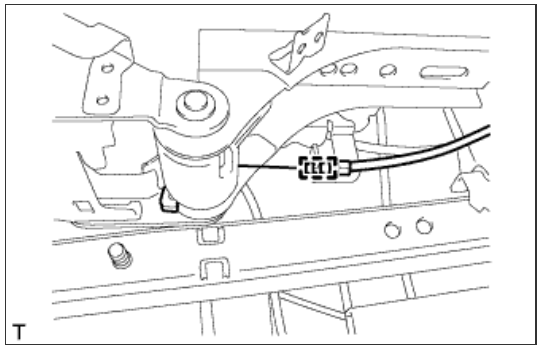


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.

d. w/ Seat Heater System:
Attach the wire harness clamp.

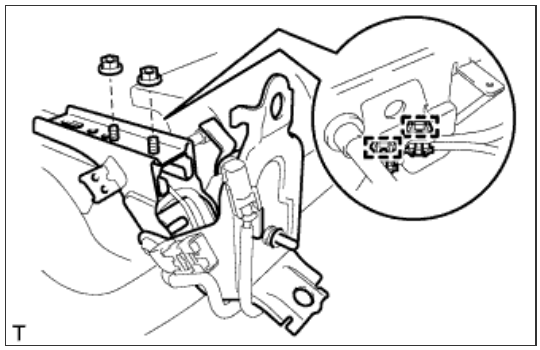


48. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

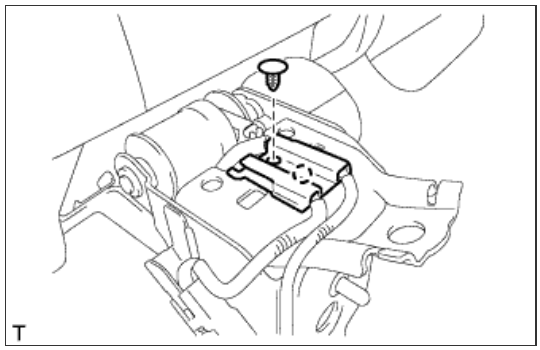


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

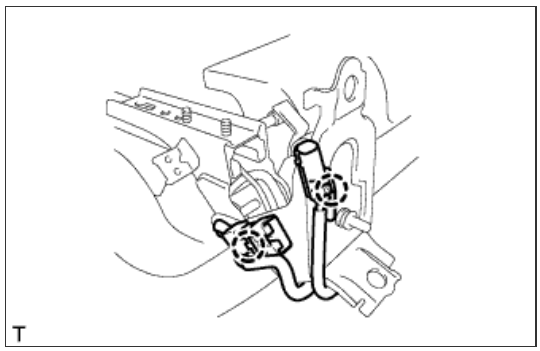

49. INSTALL REAR SEAT SIDE HIN E MALE COVER RH

a. Attach the clip to install the cover.

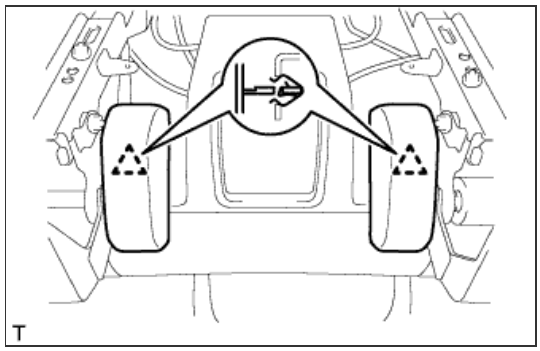


50. INSTALL REAR SEAT SIDE HIN E MALE COVER LH

a. Attach the clip to install the cover.

51. INSTALL REAR SEAT SIDE HIN E FEMALE COVER

a. Attach the 6 claws to install the 2 covers.

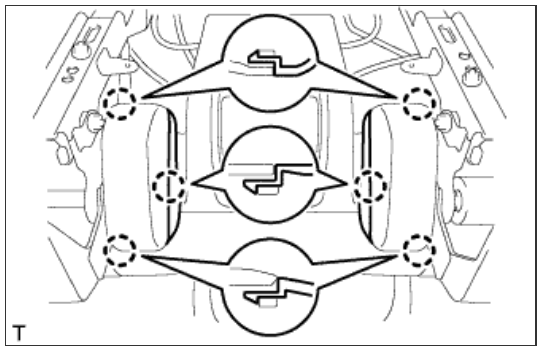


52. INSTALL FOLD SEAT STOPPER BAND ASSEMBLY

a. Install the fold seat stopper band to the seat leg side cover.


53. INSTALL REAR NO. 2 SEAT LE SIDE COVER

a. ass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

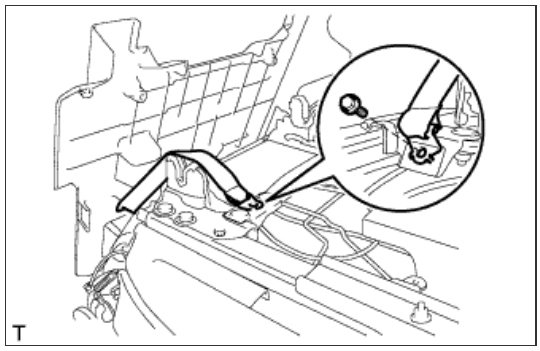


b. Attach the 4 claws to install the seat leg side cover.

c. Install the 4 screws.

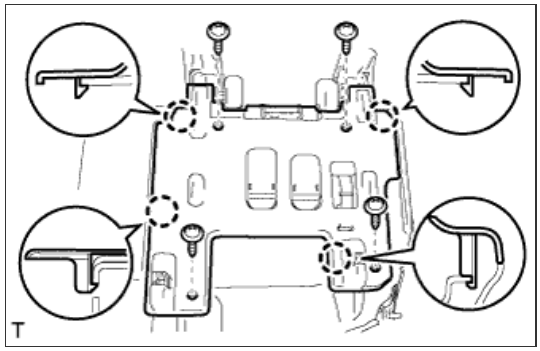


54. INSTALL NO. 1 SEAT CUSHION COVER

a. Attach the 4 claws to install the 2 covers.

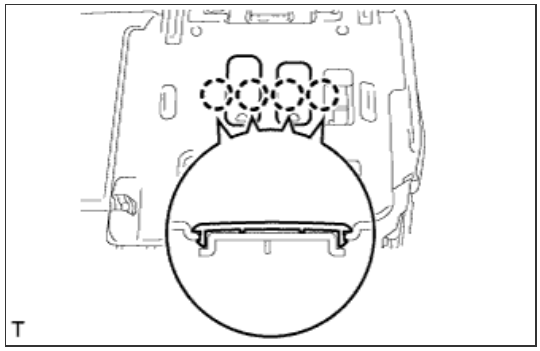


55. INSTALL UPPER SEAT TRACK RAIL COVER RH

a. Attach the 2 claws to install the cover.

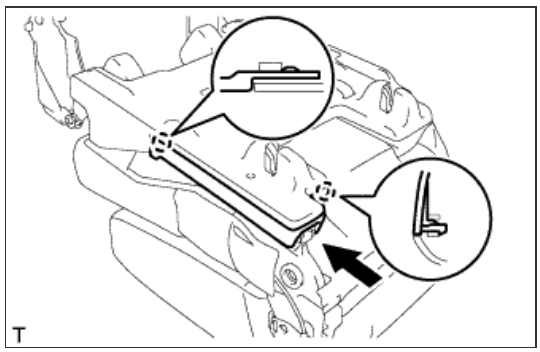

56. INSTALL UPPER SEAT TRACK RAIL COVER LH


a. Attach the 2 claws to install the cover.

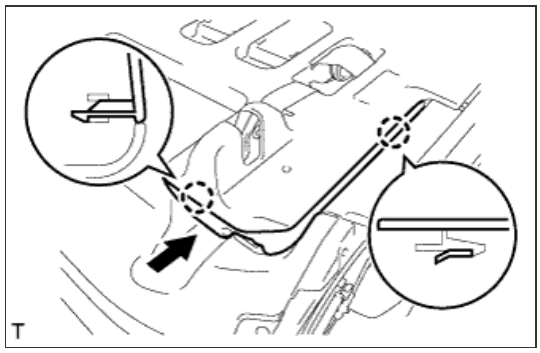

57. INSTALL REAR NO. 1 SEAT RECLININ COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

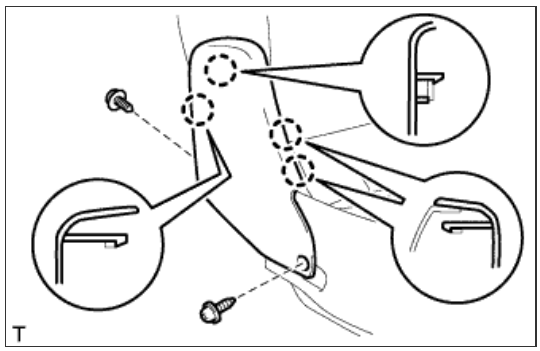

58. INSTALL REAR NO. 1 SEAT RECLININ COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

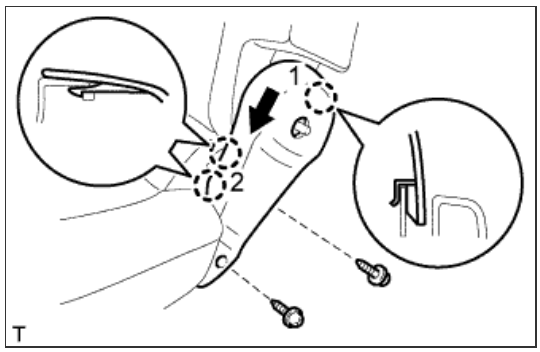


59. INSTALL RECLININ ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

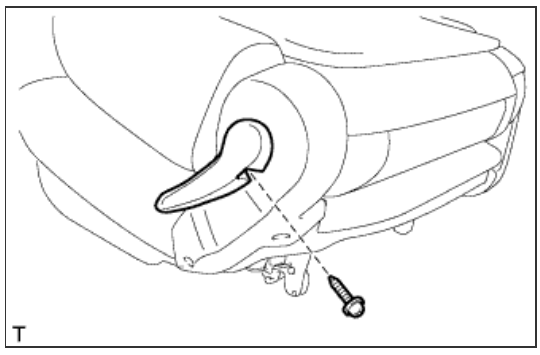

60. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

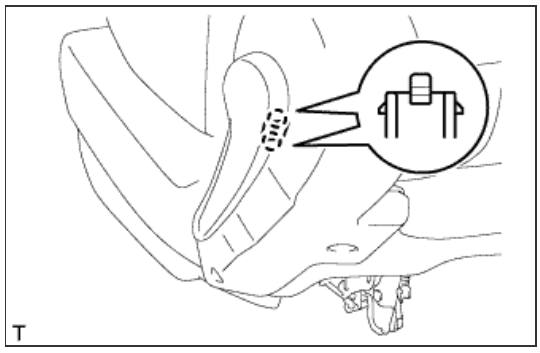

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

a. Install the 4 lock strikers with the bolts.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

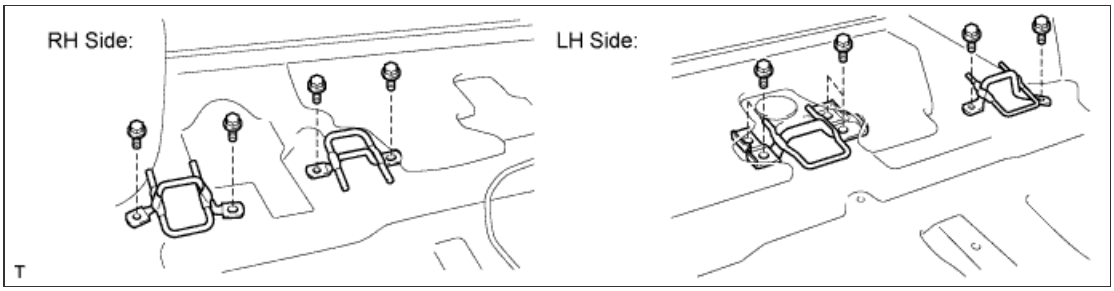

2. INSTALL REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)

a. Install the duct with the 5 screws.

b. Connect the 2 connectors.

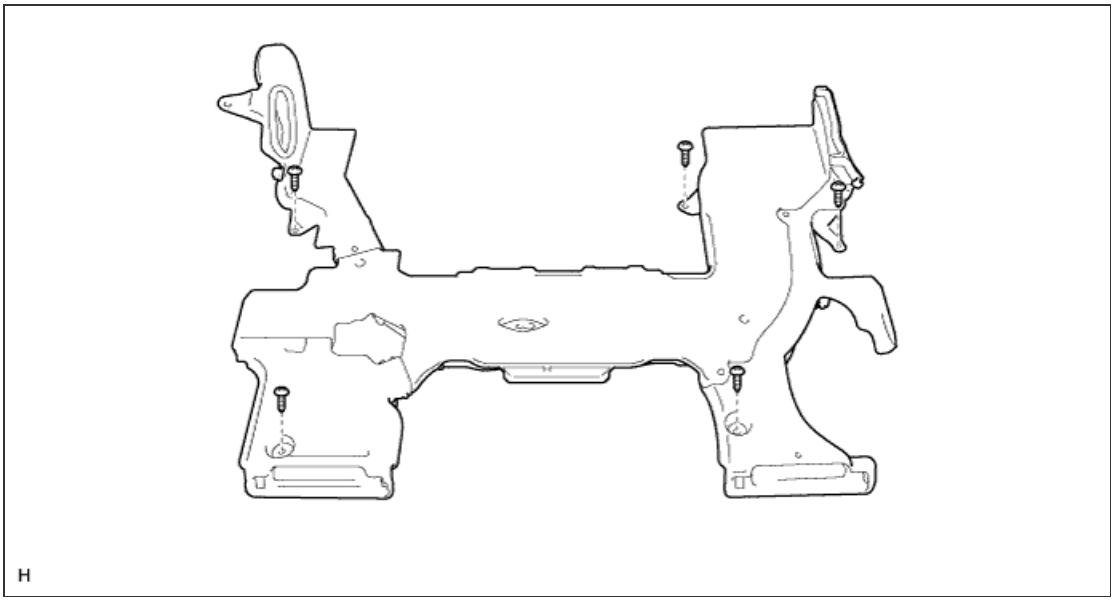

3. INSTALL RONT LOOR CARPET ASSEMBLY

a. Install the floor carpet.


4. INSTALL REAR AIR DUCT UIDE (w/ Rear Air Conditioning System)

a. Attach the claw to install the guide.

b. Install the screw.

HINT:

Use the same procedures for both sides.

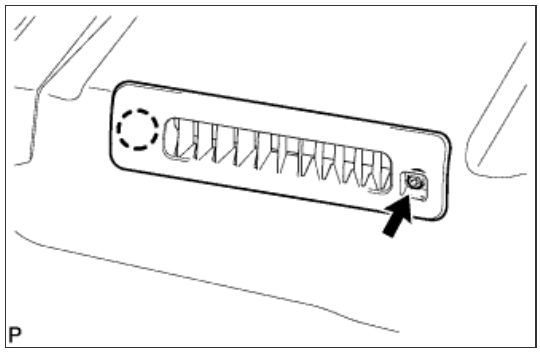


5. INSTALL AIR DUCT PLU (w/ Rear Air Conditioning System)

a. Attach the 2 claws to install the plug.

HINT:

Use the same procedures for both sides.

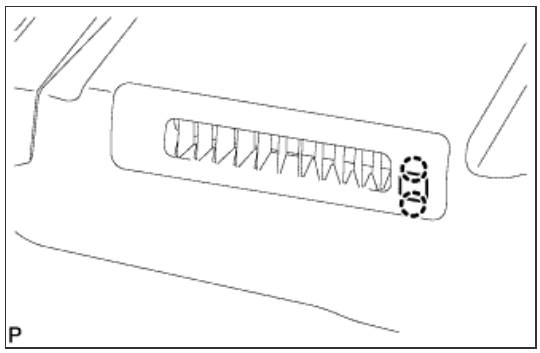

6. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

7. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).

8. INSTALL REAR SEAT CO ER CAP (w/ Rear No. 2 Seat, except ae to ae Seat Type)

HINT:


Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

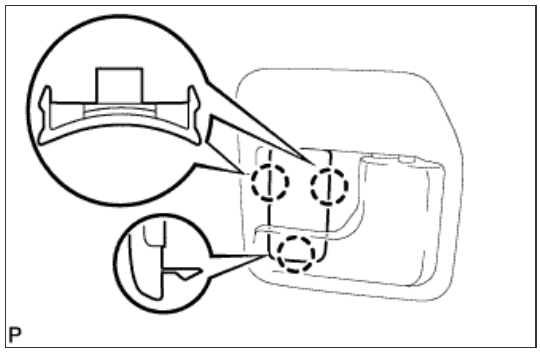

9. INSTALL REAR LOOR MAT REAR SUPPORT PLATE

a. Attach the clips to install the support plate.

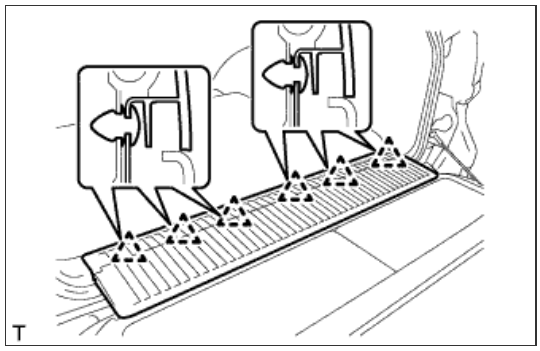

10. INSTALL REAR NO. 2 SEAT ASSEMBLY


a. for Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

b. e cept Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

11. INSTALL REAR DOOR SCU PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

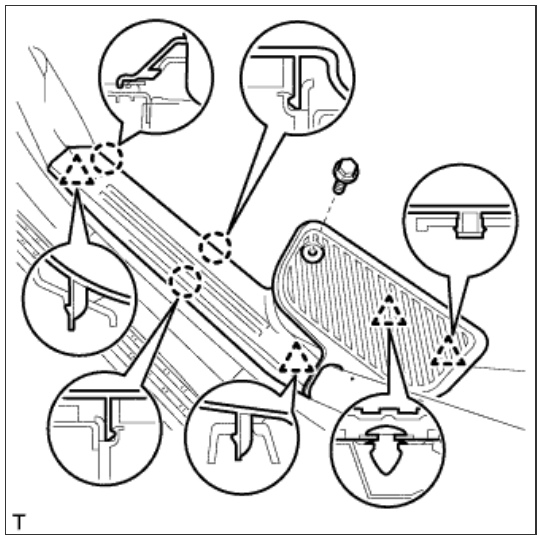

12. INSTALL REAR DOOR SCU PLATE RH

HINT:


Use the same procedures described for the LH side.

13. INSTALL REAR STEP CO ER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

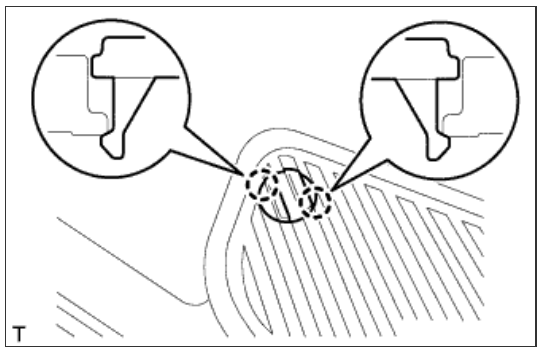


14. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the claws to install the 2 seat protectors.

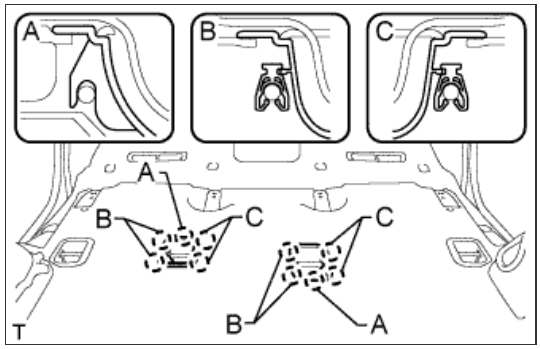

15. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the claws to install the 2 seat protectors.

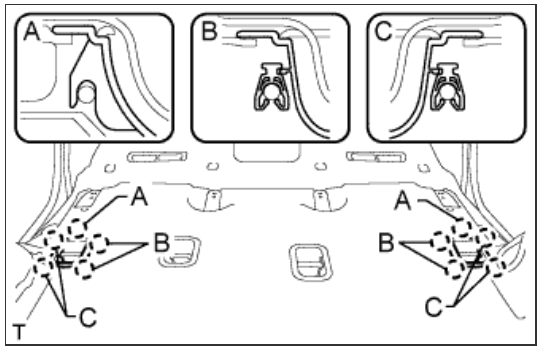

16. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. Install the rear o. seat assembly RH (Click here).

17. INSTALL REAR NO. 1 SEAT ASSEMBLY LH


a. Temporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

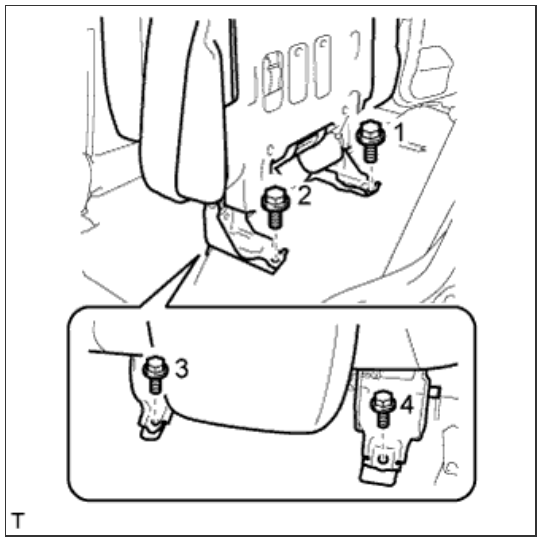


c. w/ Rear Seat Side Airbag:
Connect the connector.

d. w/ Seat Heater System:
Connect the connector.

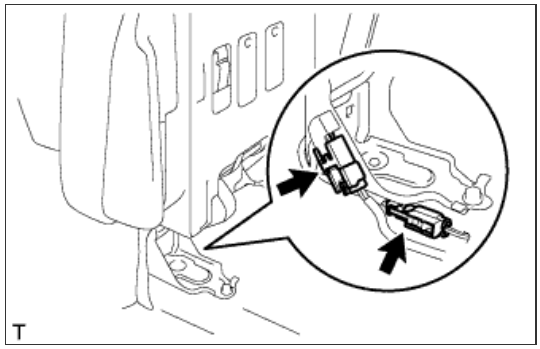


18. INSTALL REAR NO. 4 SEAT CUSHION HIN E CO ER

a. Attach the 2 clips and 2 claws to install the cover.

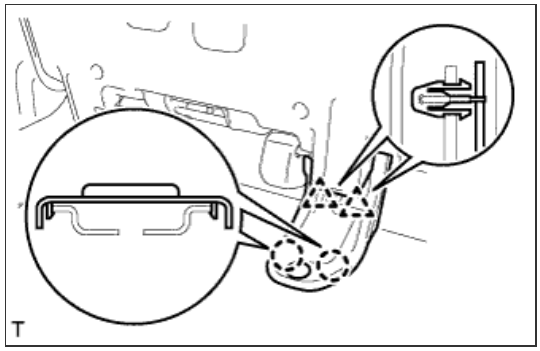

19. INSTALL REAR NO. 2 SEAT CUSHION HIN E CO ER


a. Attach the 2 clips and 2 claws to install the cover.

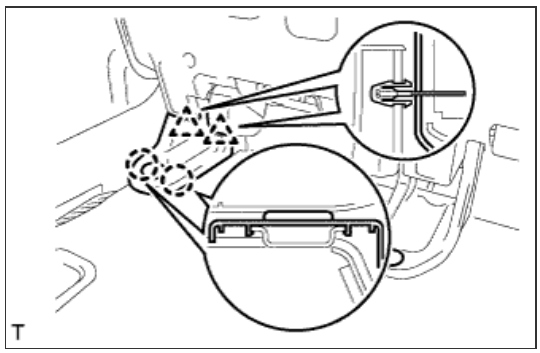

20. INSTALL REAR NO. 5 SEAT CUSHION HIN E CO ER


a. Return the seat to the upright position.

b. Attach the claws to install the cover.

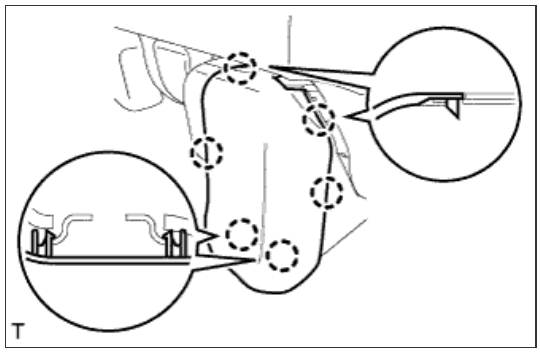

21. INSTALL REAR NO. 3 SEAT CUSHION HIN E CO ER

a. Attach the claws to install the cover.

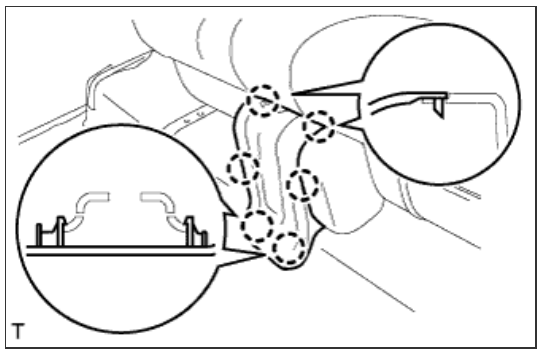

22. CONNECT CABLE TO NE ATI E BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

23. CHECK SRS ARIN LI HT

a. Check the SRS warning light (Click here).

24. INSPECT REAR NO. 1 SEAT ASSEMBLY LH

a. w/ Seat Heater System:
Check the seat heater operation.

i. Turn the engine switch on (IG).

ii. Turn the seat heater switch on.

iii. Wait 5 minutes or more and confirm that the seat surface becomes warm.

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

a. Install the 4 lock strikers with the bolts.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

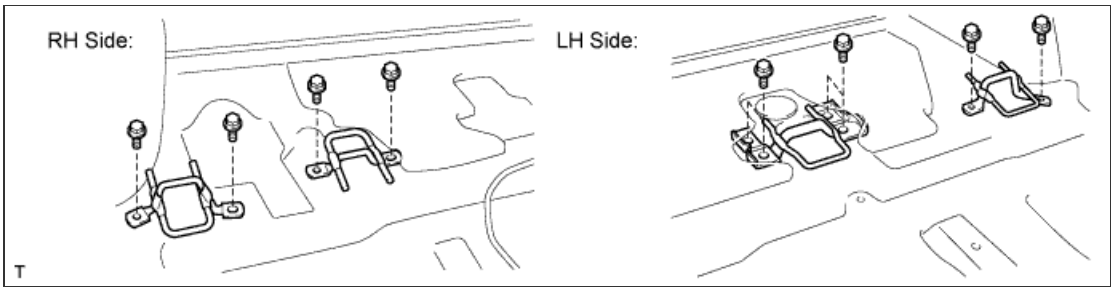

2. INSTALL REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)

a. Install the duct with the 5 screws.

b. Connect the 2 connectors.

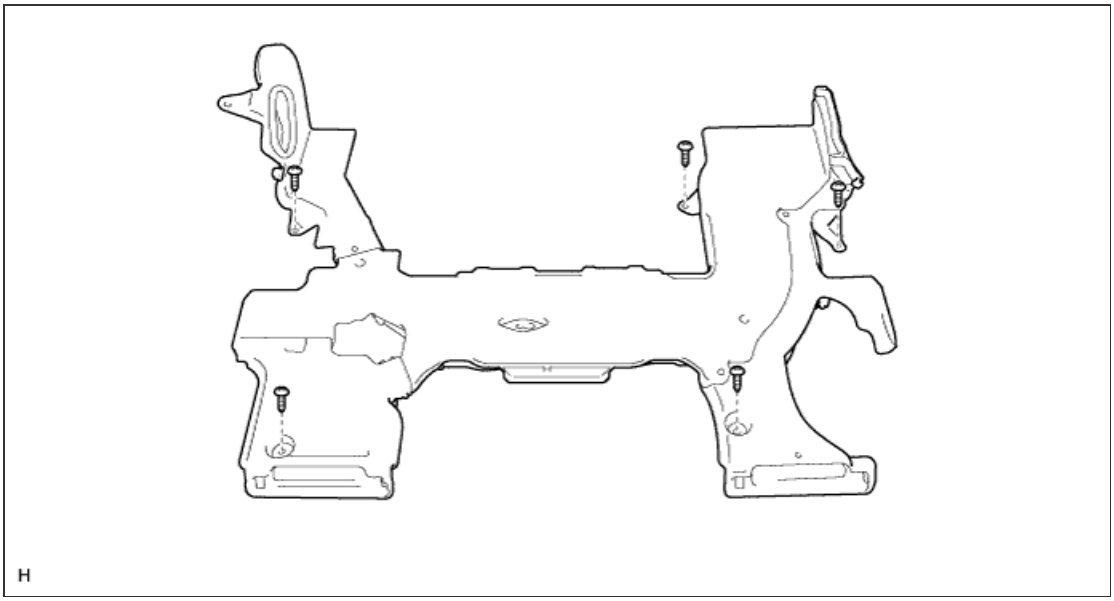

3. INSTALL RONT LOOR CARPET ASSEMBLY

a. Install the floor carpet.


4. INSTALL REAR AIR DUCT UIDE (w/ Rear Air Conditioning System)

a. Attach the claw to install the guide.

b. Install the screw.

HINT:

Use the same procedures for both sides.

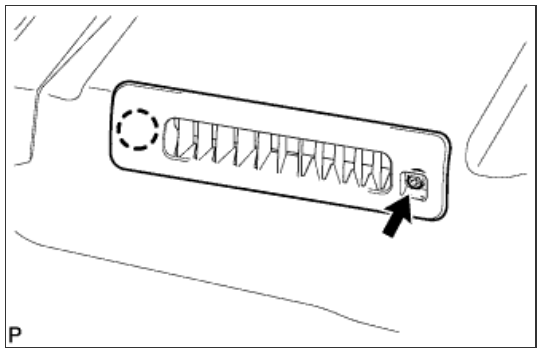


5. INSTALL AIR DUCT PLU (w/ Rear Air Conditioning System)

a. Attach the 2 claws to install the plug.

HINT:

Use the same procedures for both sides.

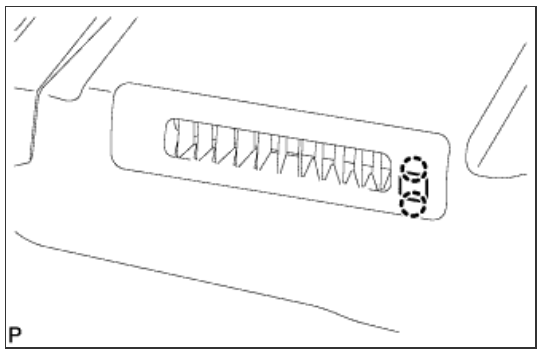

6. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

7. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).

8. INSTALL REAR SEAT CO ER CAP (w/ Rear No. 2 Seat, except ae to ae Seat Type)

HINT:


Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

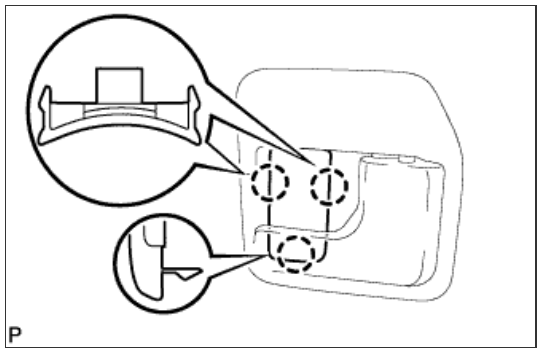

9. INSTALL REAR LOOR MAT REAR SUPPORT PLATE

a. Attach the clips to install the support plate.

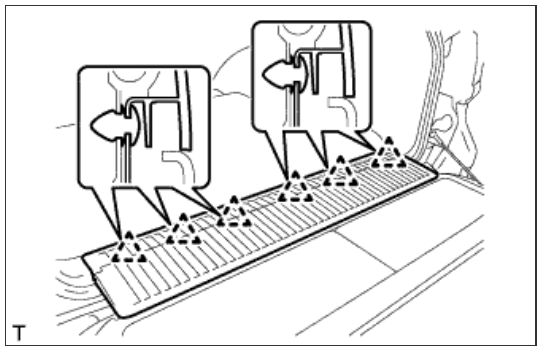

10. INSTALL REAR NO. 2 SEAT ASSEMBLY


a. for Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

b. e cept Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

11. INSTALL REAR DOOR SCU PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

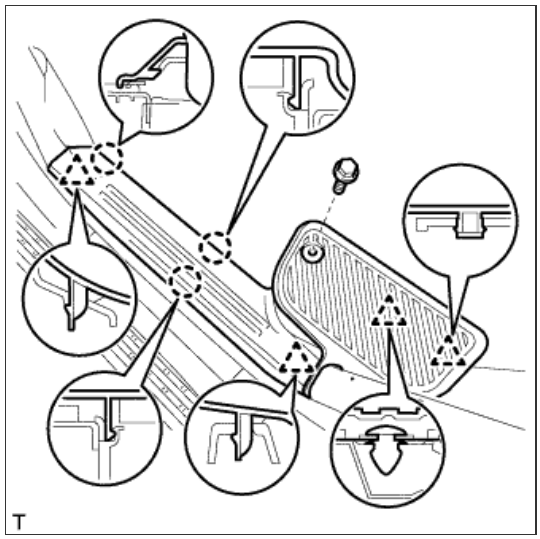

12. INSTALL REAR DOOR SCU PLATE RH

HINT:


Use the same procedures described for the LH side.

13. INSTALL REAR STEP CO ER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

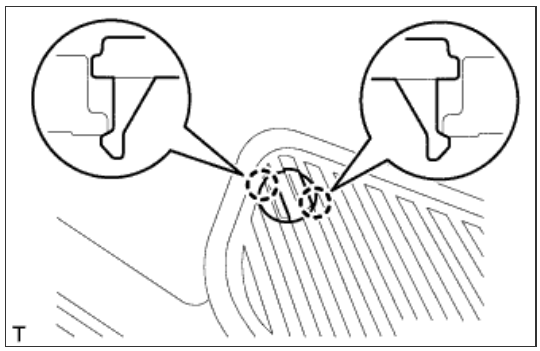


14. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the claws to install the 2 seat protectors.

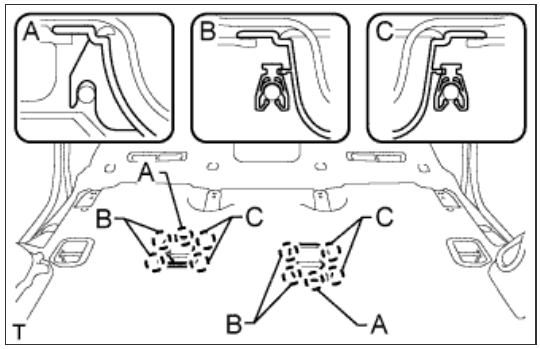

15. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the claws to install the 2 seat protectors.

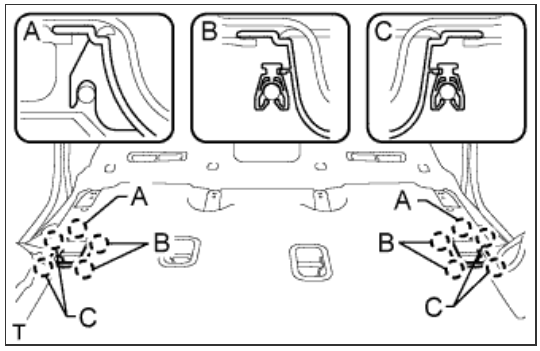

16. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. Install the rear o. seat assembly RH (Click here).

17. INSTALL REAR NO. 1 SEAT ASSEMBLY LH


a. Temporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

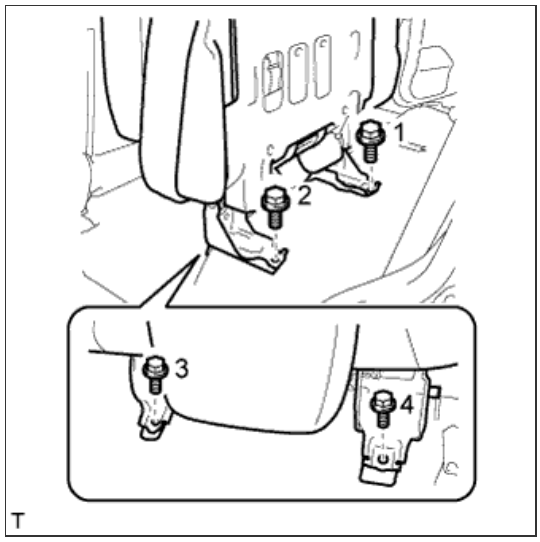


c. w/ Rear Seat Side Airbag:
Connect the connector.

d. w/ Seat Heater System:
Connect the connector.

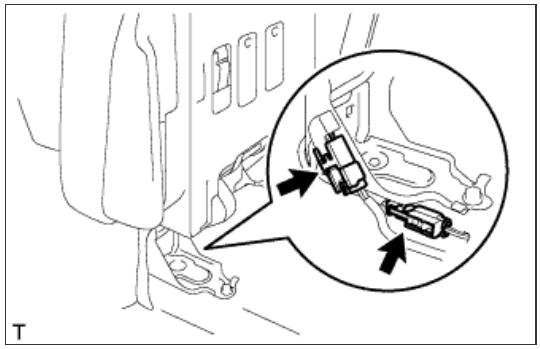


18. INSTALL REAR NO. 4 SEAT CUSHION HIN E CO ER

a. Attach the 2 clips and 2 claws to install the cover.

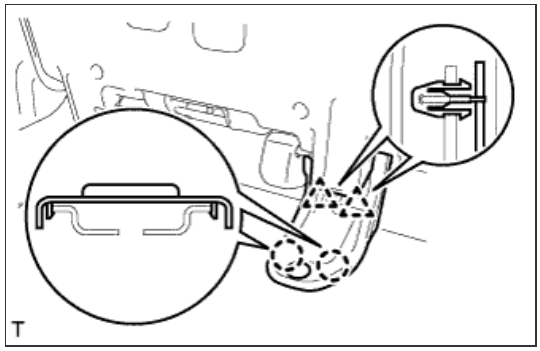

19. INSTALL REAR NO. 2 SEAT CUSHION HIN E CO ER


a. Attach the 2 clips and 2 claws to install the cover.

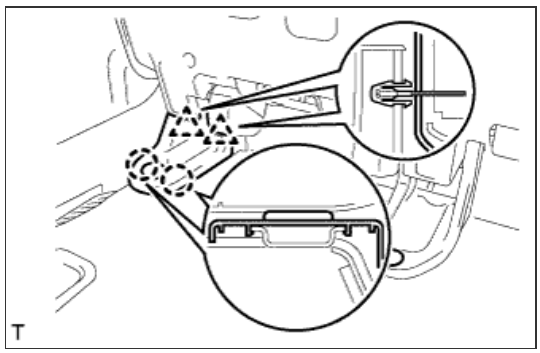

20. INSTALL REAR NO. 5 SEAT CUSHION HIN E CO ER


a. Return the seat to the upright position.

b. Attach the claws to install the cover.

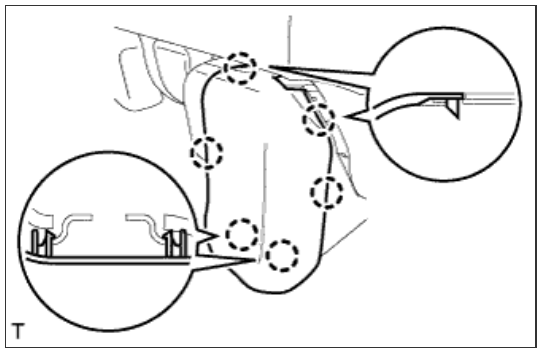

21. INSTALL REAR NO. 3 SEAT CUSHION HIN E CO ER

a. Attach the claws to install the cover.

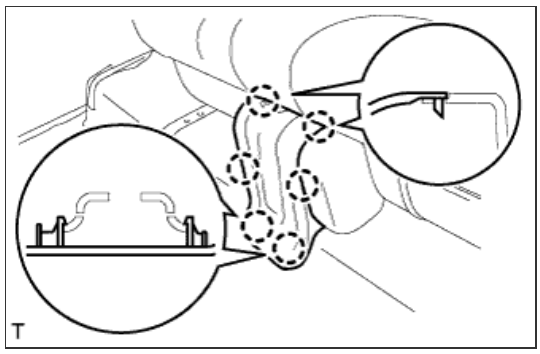

22. CONNECT CABLE TO NE ATI E BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

23. CHECK SRS ARIN LI HT

a. Check the SRS warning light (Click here).

24. INSPECT REAR NO. 1 SEAT ASSEMBLY LH

a. w/ Seat Heater System:
Check the seat heater operation.

i. Turn the engine switch on (IG).

ii. Turn the seat heater switch on.

iii. Wait 5 minutes or more and confirm that the seat surface becomes warm.

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT CUSHION LOCK STRIKER SUB-ASSEMBLY

a. Install the 4 lock strikers with the bolts.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

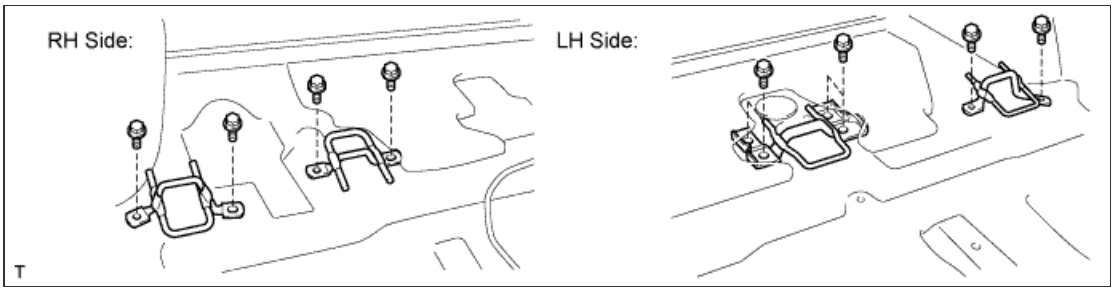

2. INSTALL REAR NO. 6 AIR DUCT (w/ Rear Air Conditioning System)

a. Install the duct with the 5 screws.

b. Connect the 2 connectors.

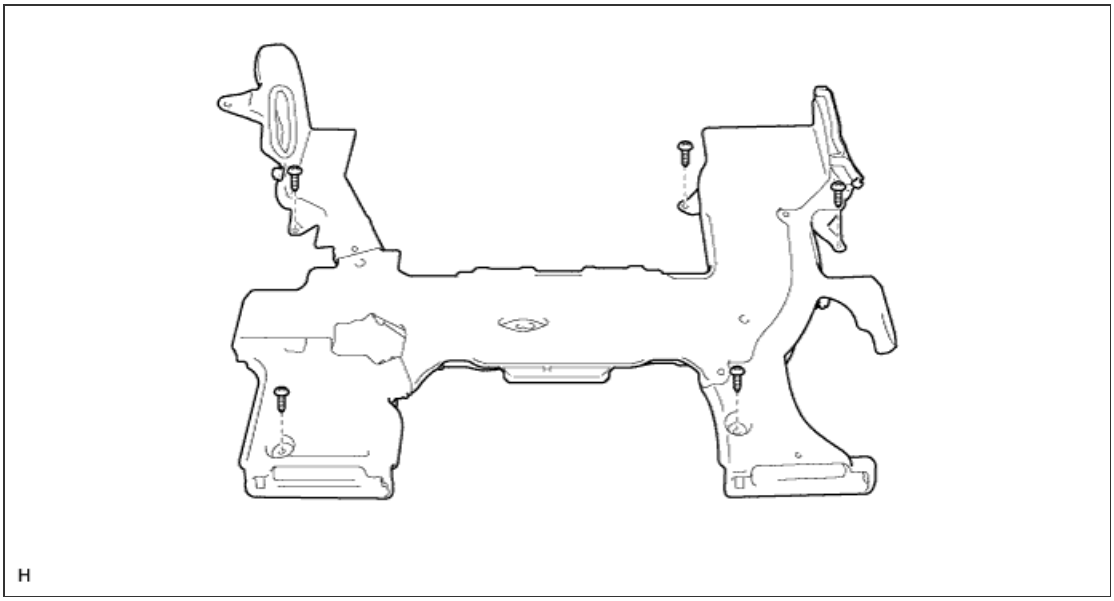

3. INSTALL RONT LOOR CARPET ASSEMBLY

a. Install the floor carpet.


4. INSTALL REAR AIR DUCT UIDE (w/ Rear Air Conditioning System)

a. Attach the claw to install the guide.

b. Install the screw.

HINT:

Use the same procedures for both sides.

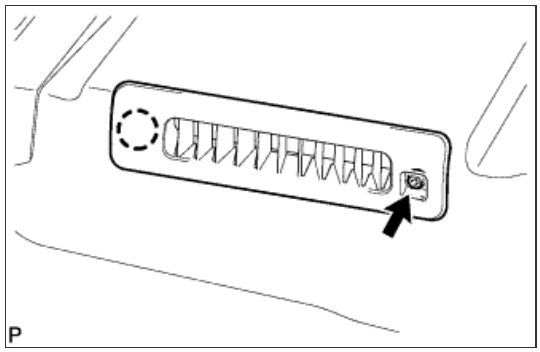


5. INSTALL AIR DUCT PLU (w/ Rear Air Conditioning System)

a. Attach the 2 claws to install the plug.

HINT:

Use the same procedures for both sides.

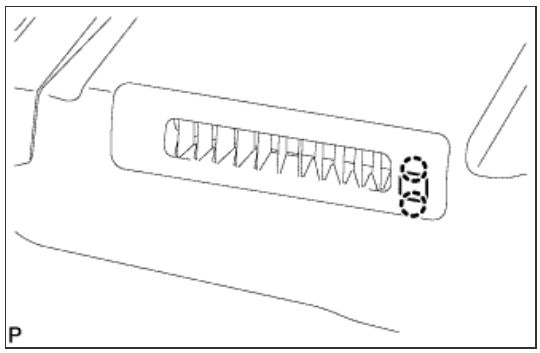

6. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

7. INSTALL RONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).


b. w/o Sliding Roof:
Install the front quarter trim panel assembly RH (Click here).

8. INSTALL REAR SEAT CO ER CAP (w/ Rear No. 2 Seat, except ae to ae Seat Type)

HINT:


Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

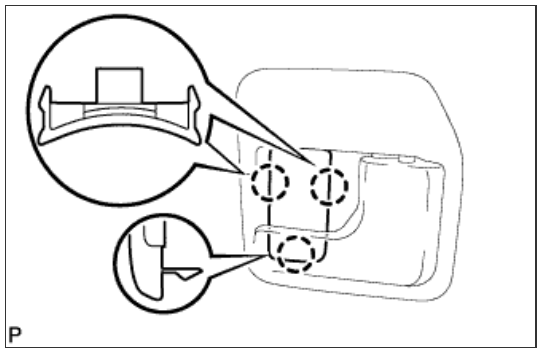

9. INSTALL REAR LOOR MAT REAR SUPPORT PLATE

a. Attach the clips to install the support plate.

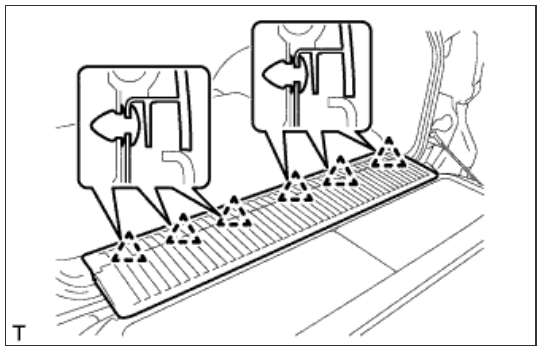

10. INSTALL REAR NO. 2 SEAT ASSEMBLY


a. for Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

b. e cept Face to Face Seat Type:
Install the rear o. 2 seat assembly (Click here).

11. INSTALL REAR DOOR SCU PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

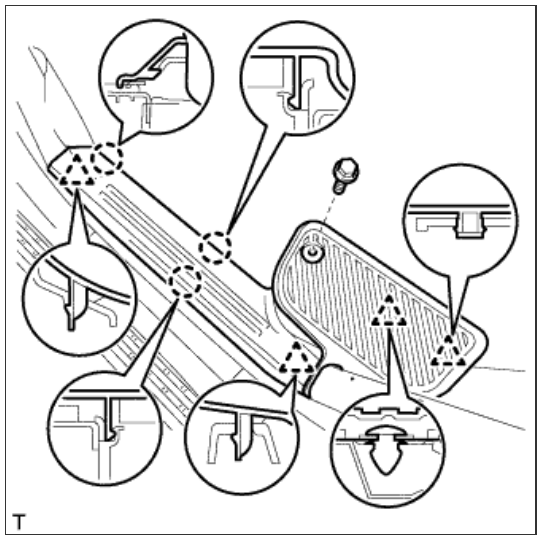

12. INSTALL REAR DOOR SCU PLATE RH

HINT:


Use the same procedures described for the LH side.

13. INSTALL REAR STEP CO ER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

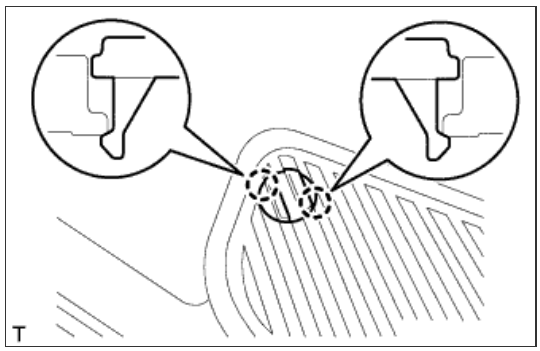


14. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the claws to install the 2 seat protectors.

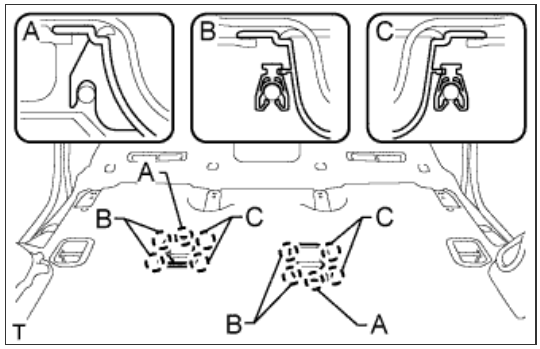

15. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the claws to install the 2 seat protectors.

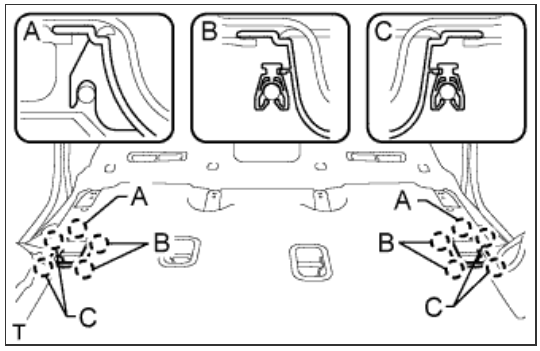

16. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. Install the rear o. seat assembly RH (Click here).

17. INSTALL REAR NO. 1 SEAT ASSEMBLY LH


a. Temporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

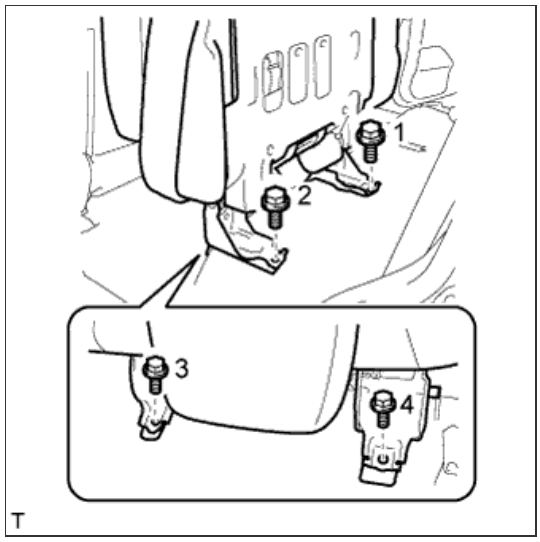


c. w/ Rear Seat Side Airbag:
Connect the connector.

d. w/ Seat Heater System:
Connect the connector.

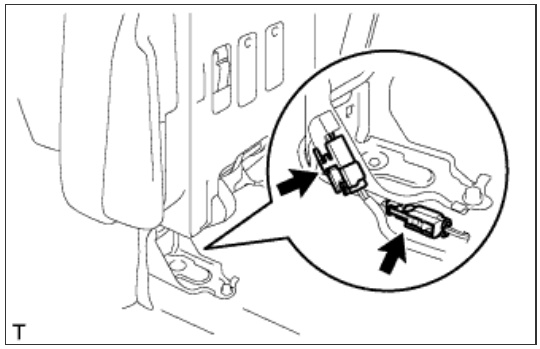


18. INSTALL REAR NO. 4 SEAT CUSHION HIN E CO ER

a. Attach the 2 clips and 2 claws to install the cover.

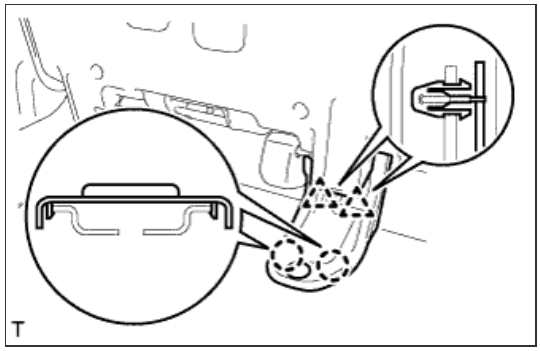

19. INSTALL REAR NO. 2 SEAT CUSHION HIN E CO ER


a. Attach the 2 clips and 2 claws to install the cover.

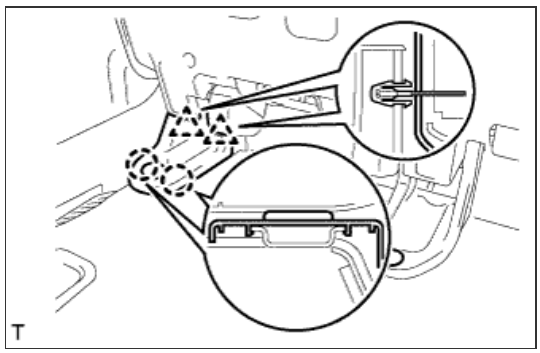

20. INSTALL REAR NO. 5 SEAT CUSHION HIN E CO ER


a. Return the seat to the upright position.

b. Attach the 7 claws to install the cover.

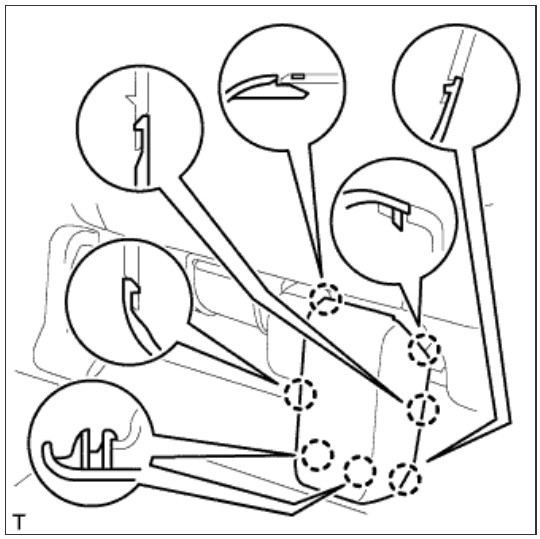

21. INSTALL REAR NO. 3 SEAT CUSHION HIN E CO ER

a. Attach the claws to install the cover.

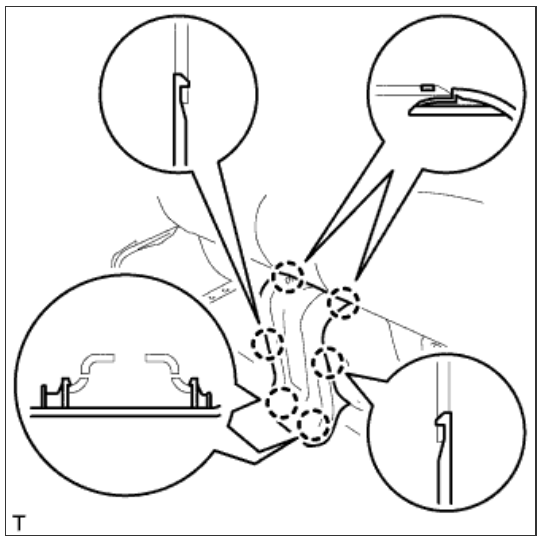

22. CONNECT CABLE TO NE ATI E BATTERY TERMINAL

NOTICE:

hn disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

23. CHECK SRS ARIN LI HT

a. Check the SRS warning light (Click here).

24. INSPECT REAR NO. 1 SEAT ASSEMBLY LH


a. w/ Seat Heater System:
Check the seat heater operation.


i. Turn the engine switch on (IG).

ii. Turn the seat heater switch on.

iii. at 5 minutes or more and confirm that the seat surface becomes warm.

for Preparation Click here

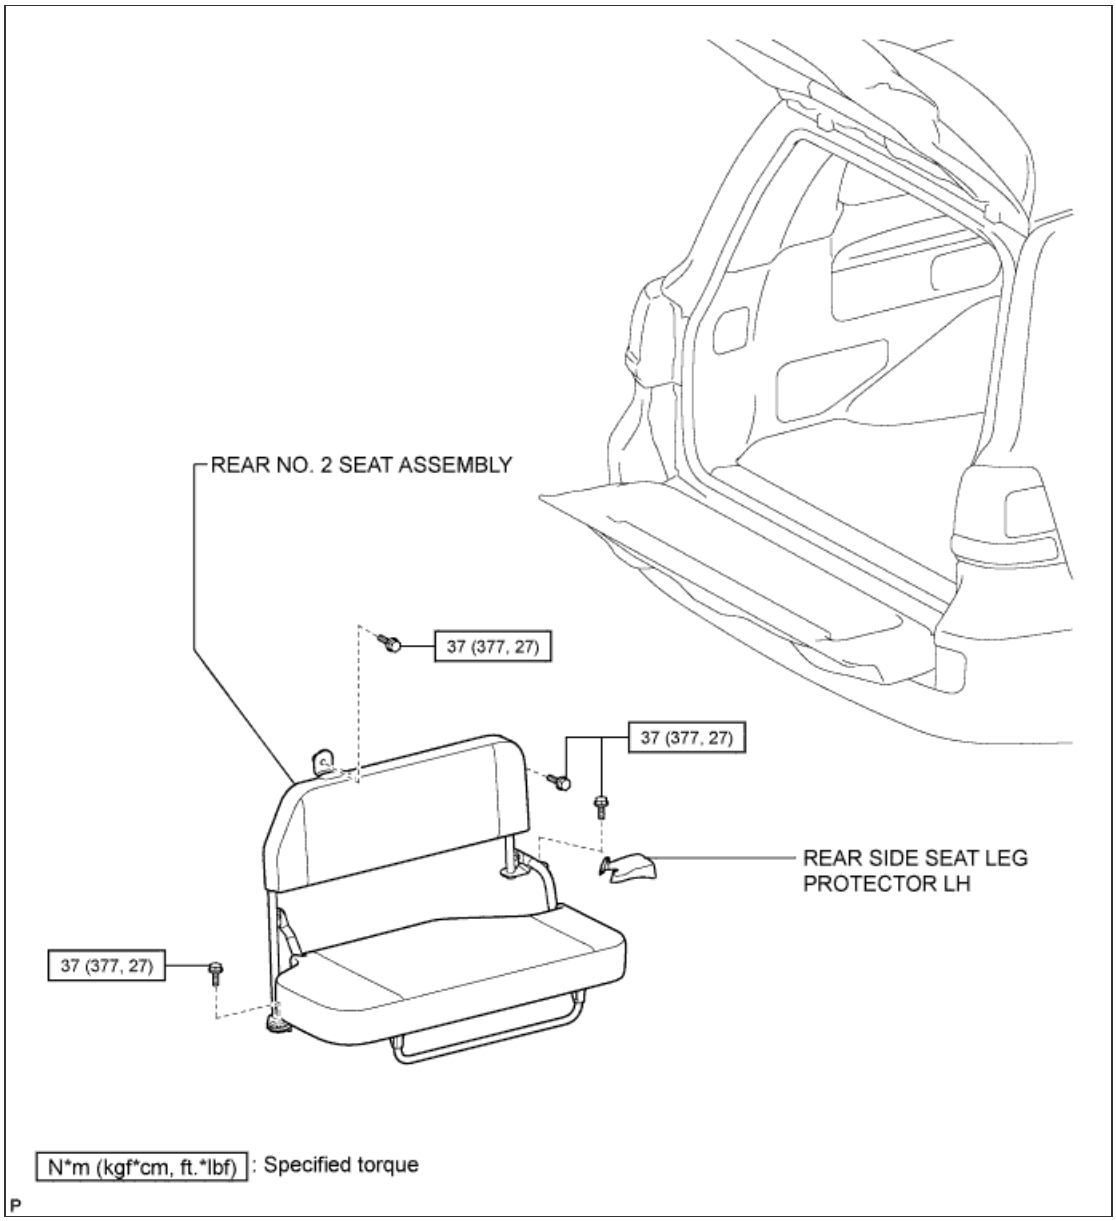

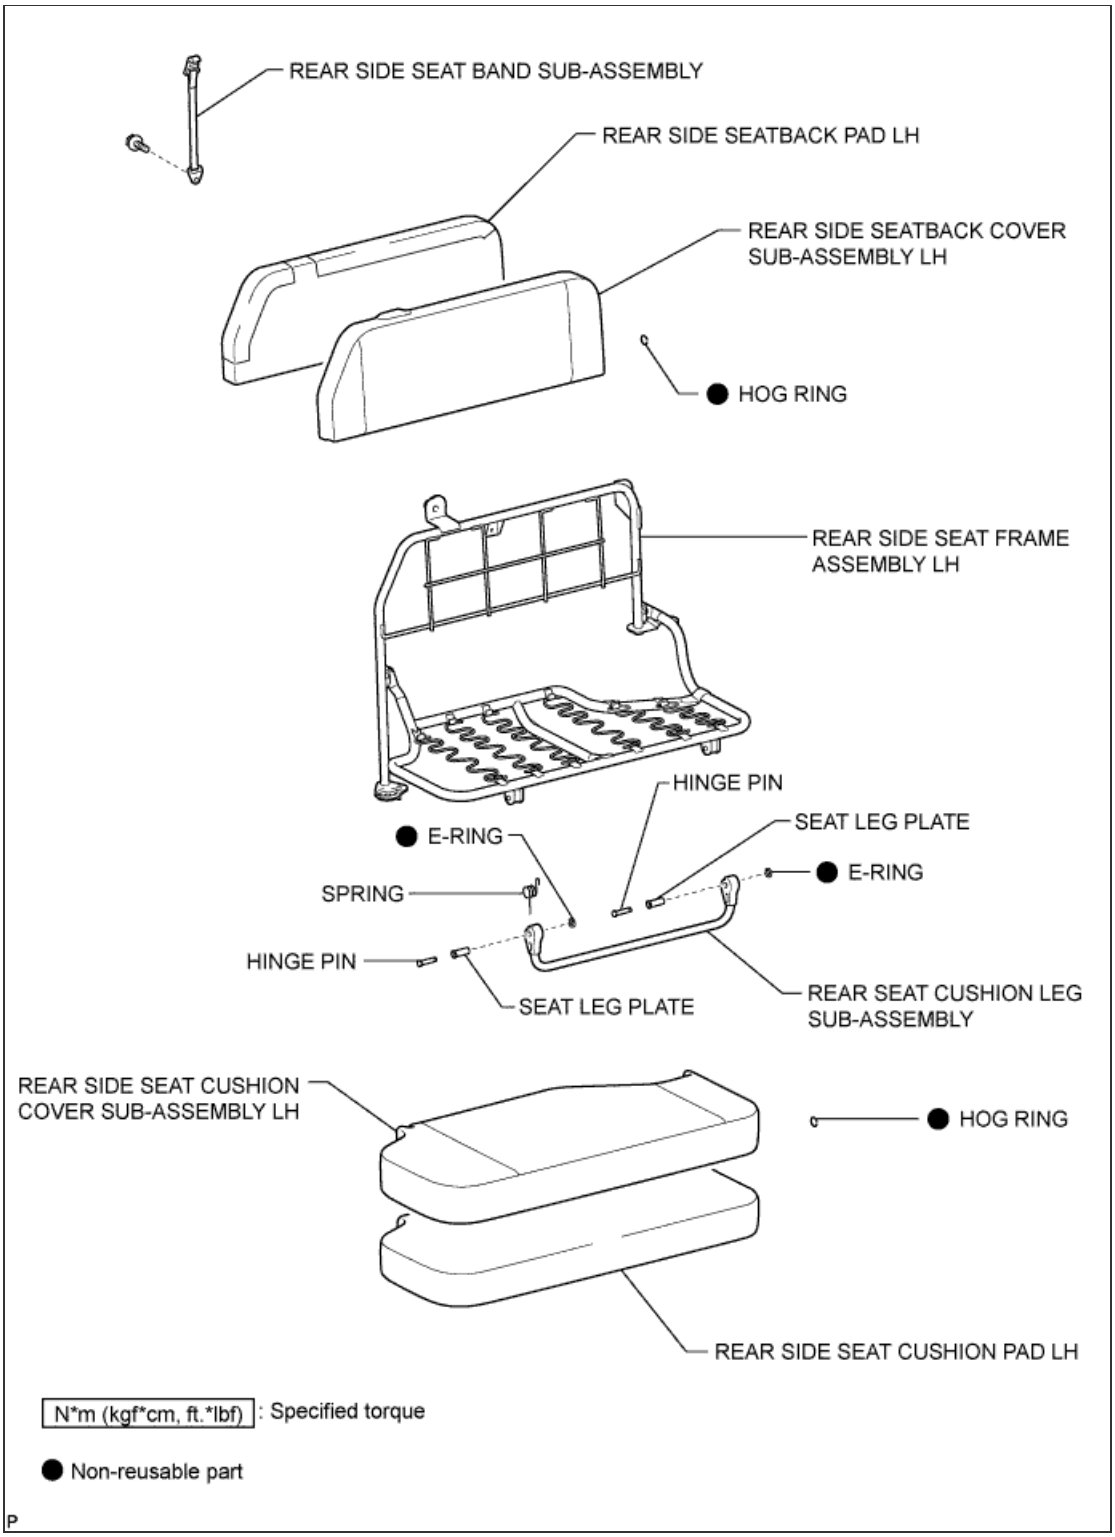

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

P

for Preparation Click ee

HINT


- te e ame proce re for LH an RH e cle .
- T proce re li te to are for LH e cle .

. REMOVE REAR SI SEAT LE PROTECTOR LH

a. Using a screwdriver, detach the 2 claws and remove the protector.


HINT

Tape the screwdriver tip before use.

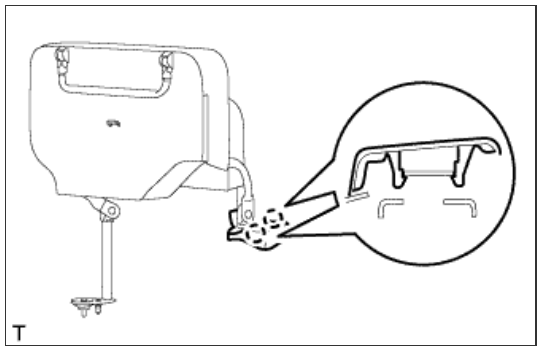

2. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. Remove the 4 bolts and rear No. 2 seat.

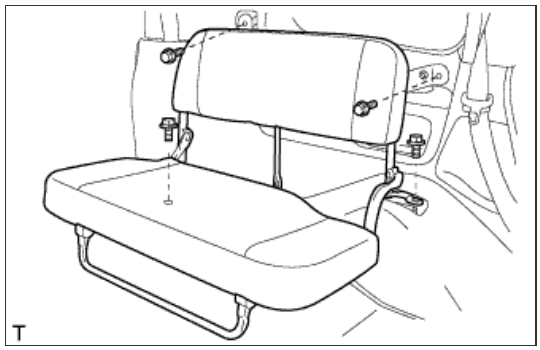

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR SEAT CUSHION LEG SUB-ASSEMBLY

a. Using a screwdriver, remove the 2 E rings.


b. Remove the 2 hinge pins.

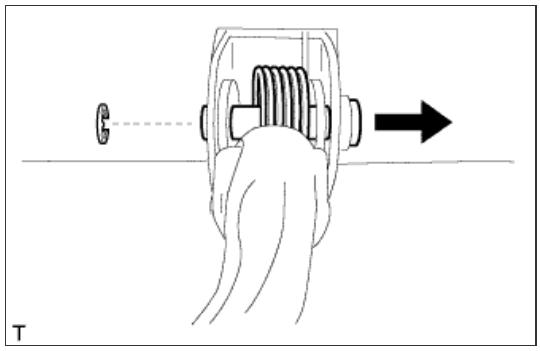

c. Remove the 2 seat leg plates.


d. Remove the seat cushion leg with the spring.

e. Remove the spring from the seat cushion leg.

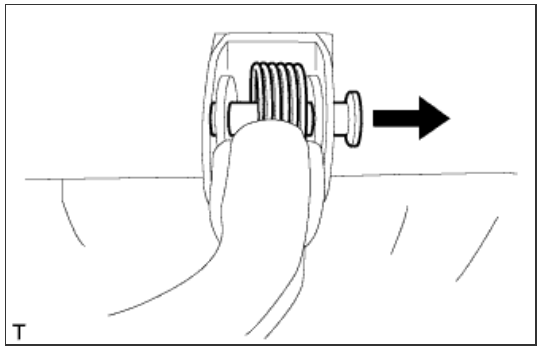


2. REMOVE REAR SIDE SEAT CUSHION COVER SUB-ASSEMBLY LH

a. Remove the hog rings.

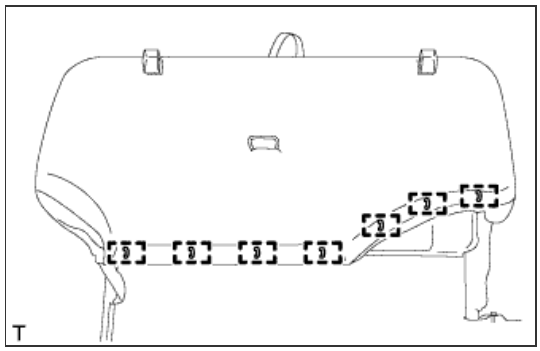

b. Open the 2 fasteners, and then remove the seat cushion cover.

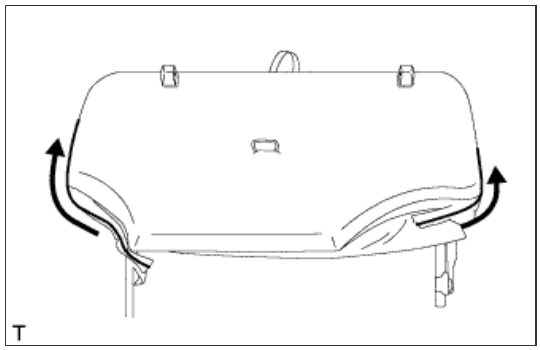


3. REMOVE REAR SIDE SEAT CUSHION PAD LH

4. REMOVE REAR SIDE SEATBACK COVER SUB-ASSEMBLY LH

a. Remove the hog rings.


b. ass the side seat band into the seatback cover.

c. Remove the seatback cover.

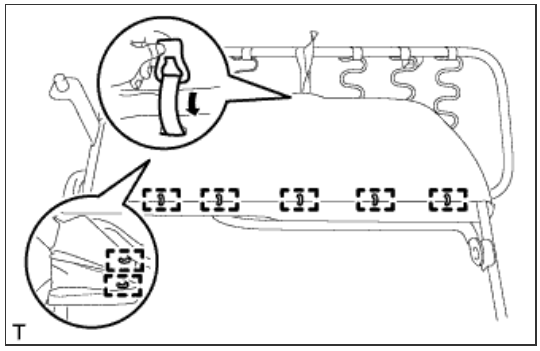


5. REMOVE REAR SIDE SEAT BAND SUB-ASSEMBLY

a. Remove the screw and seat band.

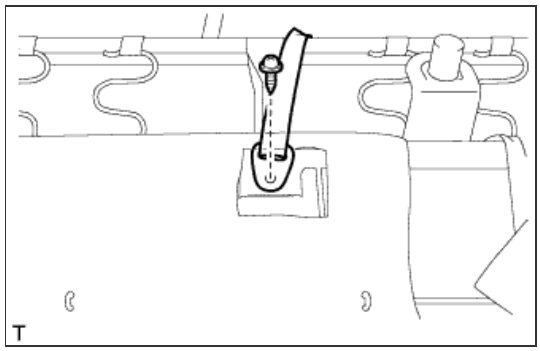

6. REMOVE REAR SIDE SEATBACK PAD LH

a. Remove the hog rings and seatback pad.

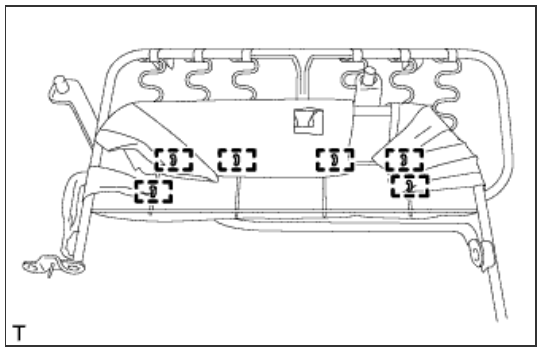


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**


1. INSTALL REAR SIDE SEATBACK PAD LH

a. Using hog ring pliers, install the seatback pad with new hog rings.

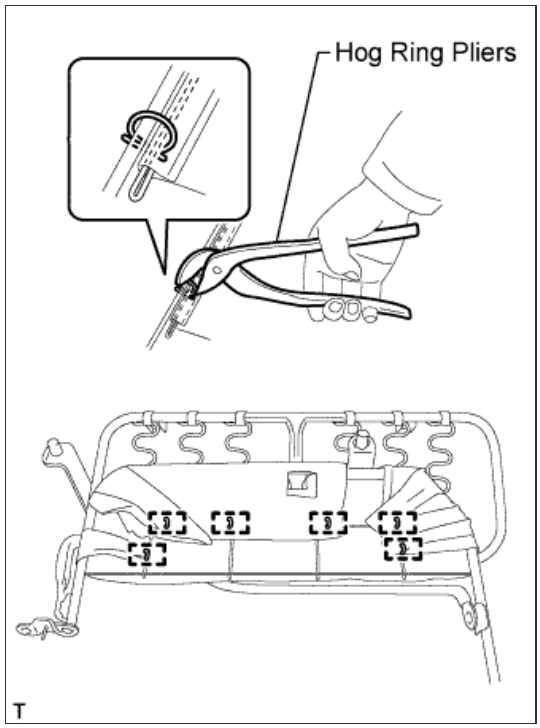

2. INSTALL REAR SIDE SEAT BAND SUB-ASSEMBLY

a. Install the seat band with the screw.

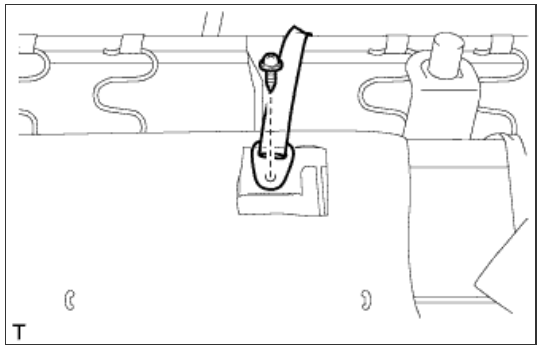

3. INSTALL REAR SIDE SEATBACK COVER SUB-ASSEMBLY LH


a. Install the seatback cover.

b. Pull out the seat band.

c. Using hog ring pliers, install new hog rings to the seatback cover.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

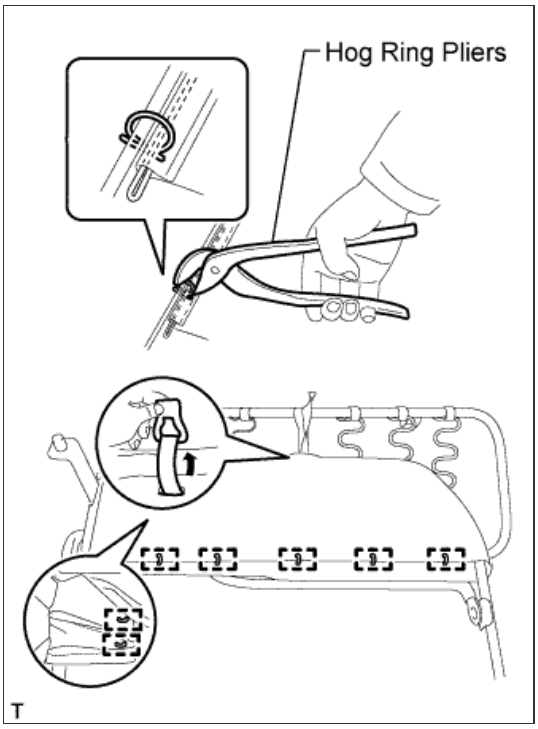


. INSTALL REAR SIDE SEAT CUSHION PAD LH

. INSTALL REAR SIDE SEAT CUSHION COVER SUB-ASSEMBLY LH

a. Install the seat cushion cover.


b. Close the 2 fasteners, and then close the cushion cover.

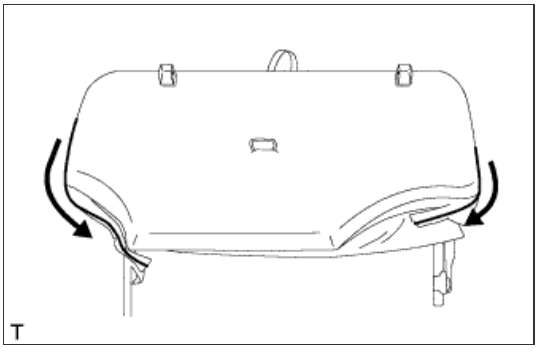

c. Using hog ring pliers, install new hog rings to the seat cushion cover.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

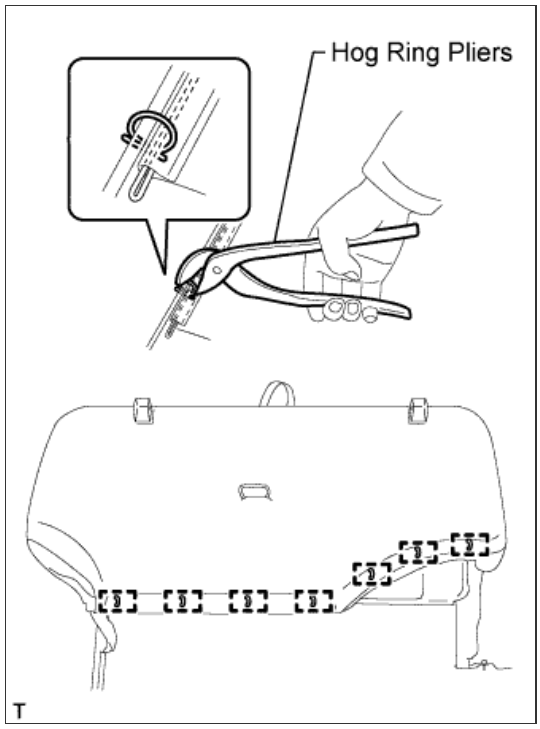


6. INSTALL REAR SEAT CUSHION LE SUB-ASSEMBLY


a. Install the spring to the seat cushion leg.

b. Install the seat cushion leg.

c. Install the 2 seat leg plates.

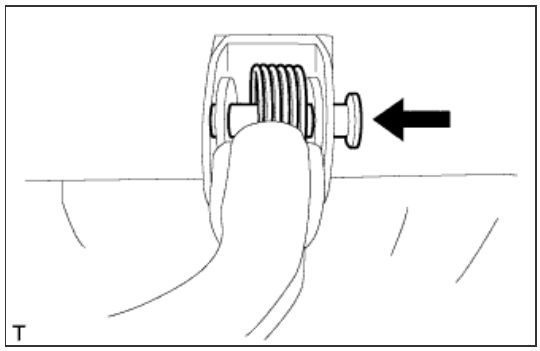

d. Install the 2 hinge pins and 2 new E-rings.

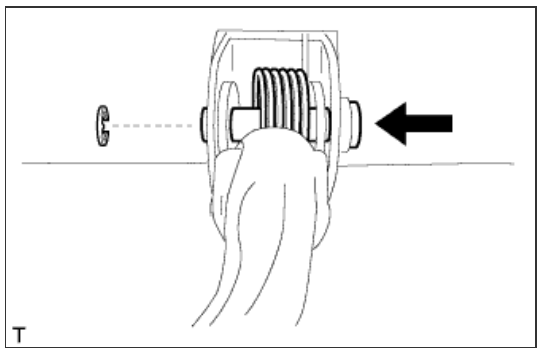

for Preparation Click here

HINT:


- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR NO. 2 SEAT ASSEMBLY

a. Temporarily install e ear o. eat ith e olts.


b. Tighten e olts in e order own in e illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

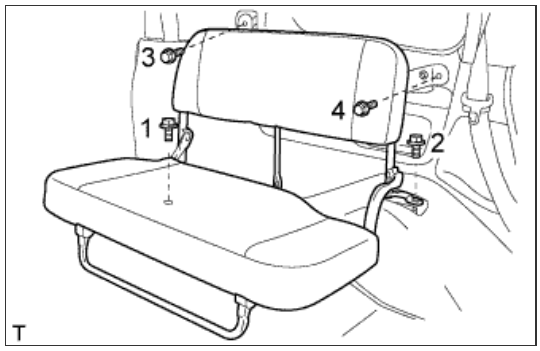



2. INSTALL REAR SIDE SEAT LEG PROTECTOR LH


a. Atta e laws o install e prote or.

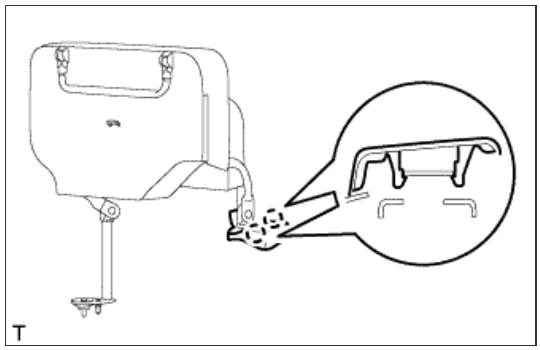



for Preparation Click here

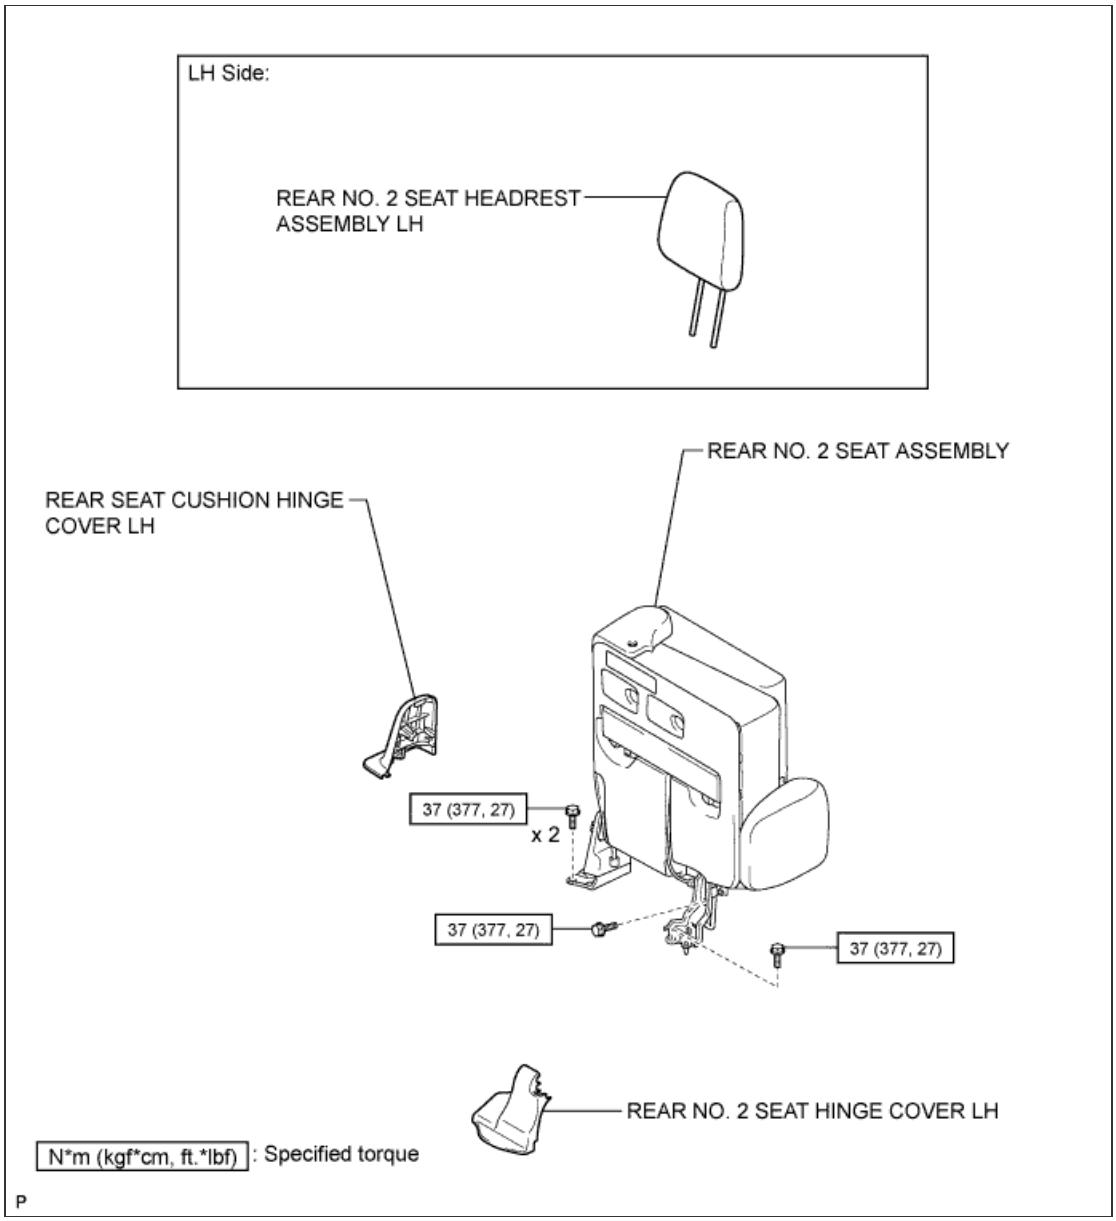

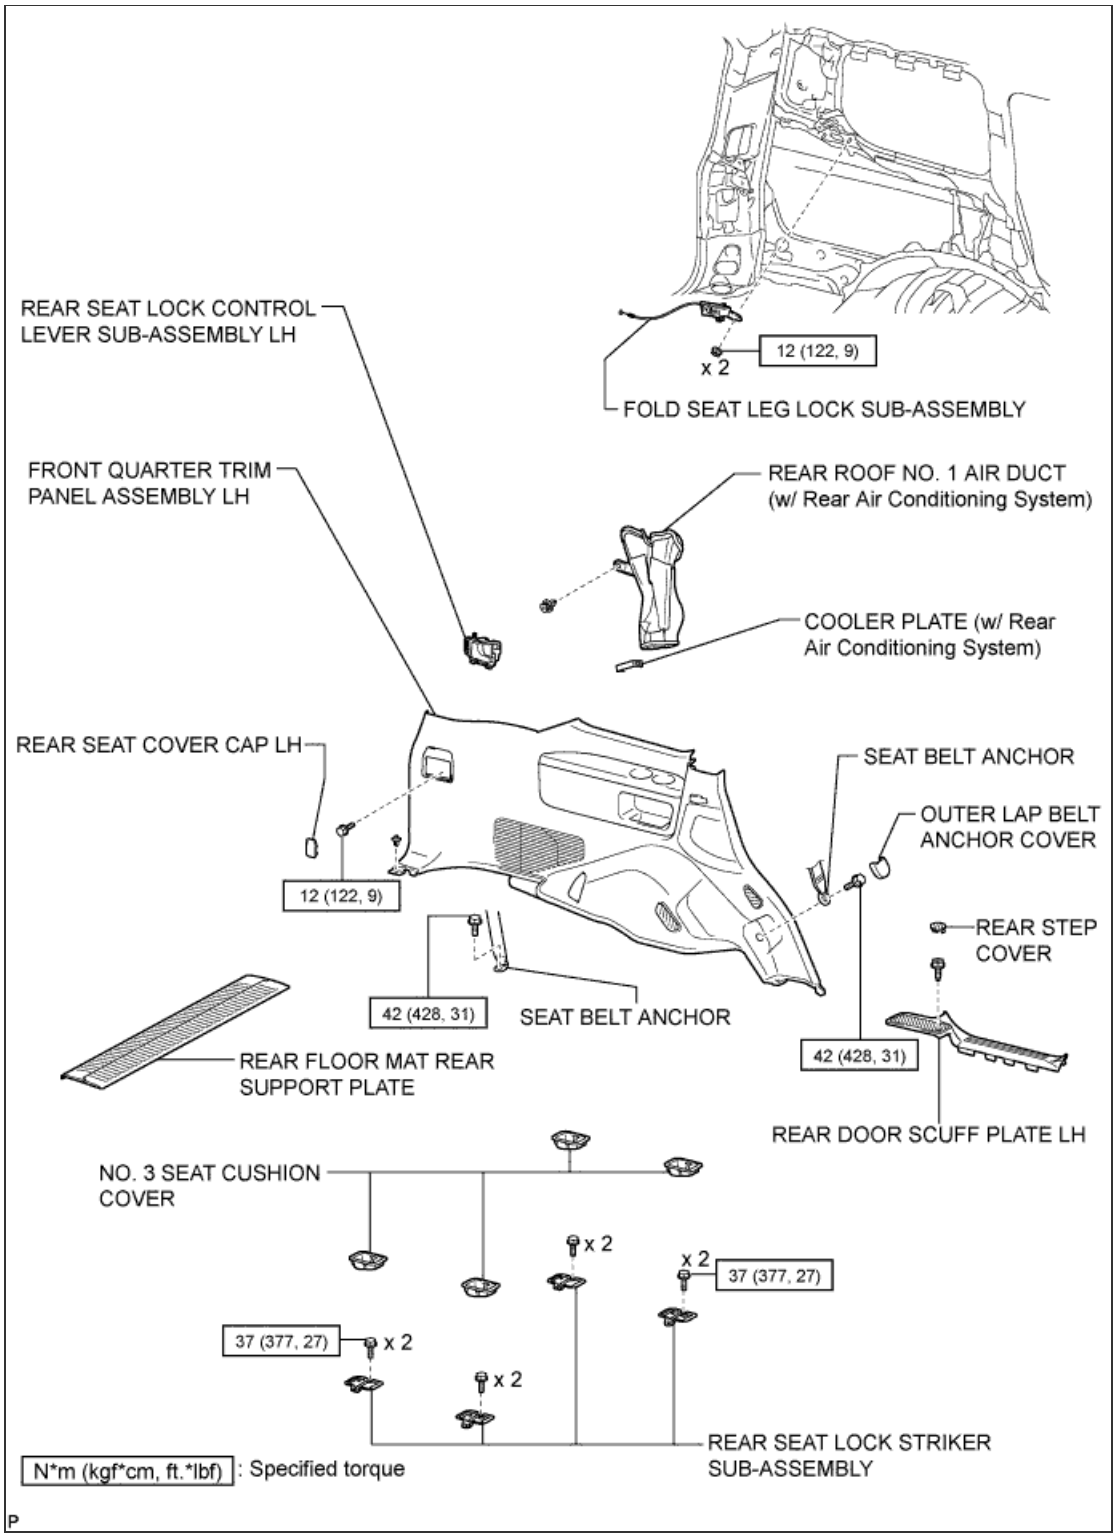

REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH
12 (122, 9)
x 2
FOLD SEAT LEG LOCK SUB-ASSEMBLY
FRONT QUARTER TRIM PANEL ASSEMBLY LH
REAR ROOF NO. 1 AIR DUCT (w/ Rear Air Conditioning System)
COOLER PLATE (w/ Rear Air Conditioning System)
REAR SEAT COVER CAP LH
SEAT BELT ANCHOR
OUTER LAP BELT ANCHOR COVER
12 (122, 9)
REAR STEP COVER
42 (428, 31)
SEAT BELT ANCHOR
42 (428, 31)
REAR FLOOR MAT REAR SUPPORT PLATE
REAR DOOR SCUFF PLATE LH
NO. 3 SEAT CUSHION COVER
x 2
x 2
37 (377, 27)
37 (377, 27)
x 2
x 2
REAR SEAT LOCK STRIKER SUB-ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
P

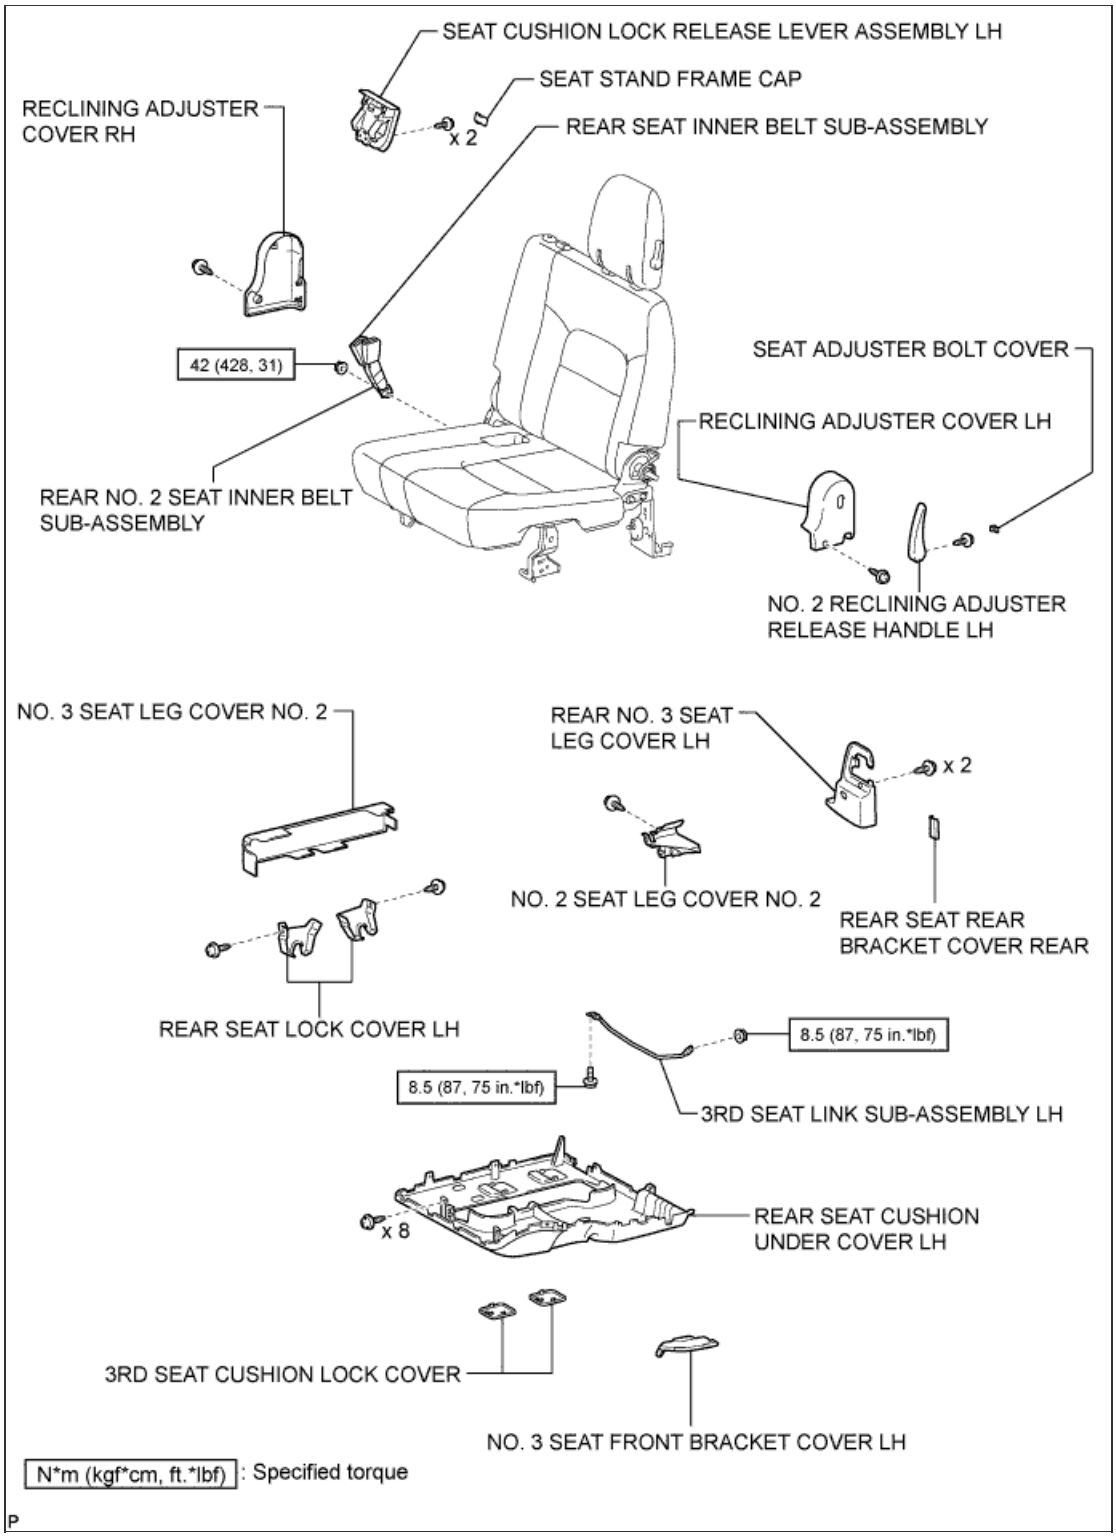

SEAT CUSHION LOCK RELEASE LEVER ASSEMBLY LH
SEAT STAND FRAME CAP
x 2
RECLINING ADJUSTER COVER RH
REAR SEAT INNER BELT SUB-ASSEMBLY
42 (428, 31)
SEAT ADJUSTER BOLT COVER
RECLINING ADJUSTER COVER LH
REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY
NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH
NO. 3 SEAT LEG COVER NO. 2
REAR NO. 3 SEAT LEG COVER LH
x 2
NO. 2 SEAT LEG COVER NO. 2
REAR SEAT REAR BRACKET COVER REAR
REAR SEAT LOCK COVER LH
8.5 (87, 75 in.*lbf)
8.5 (87, 75 in.*lbf)
3RD SEAT LINK SUB-ASSEMBLY LH
x 8
REAR SEAT CUSHION UNDER COVER LH
3RD SEAT CUSHION LOCK COVER
NO. 3 SEAT FRONT BRACKET COVER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
P

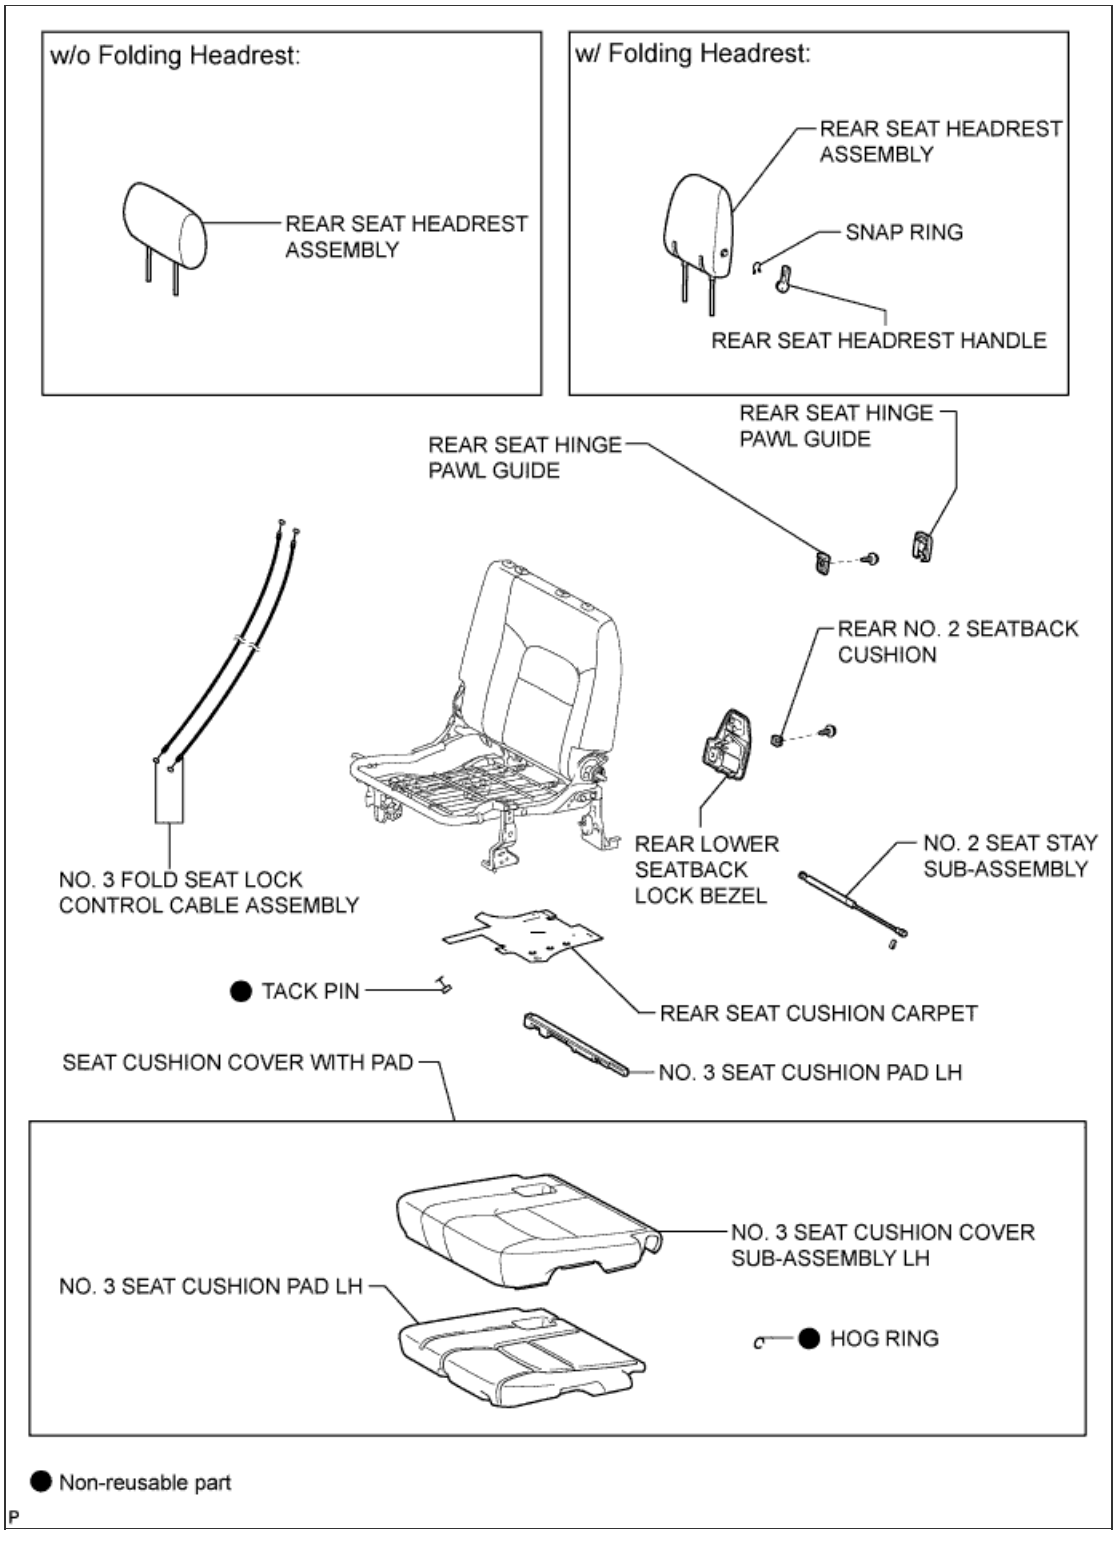

w/o Folding Headrest:
REAR SEAT HEADREST ASSEMBLY
w/ Folding Headrest:
REAR SEAT HEADREST ASSEMBLY
SNAP RING
REAR SEAT HEADREST HANDLE
REAR SEAT HINGE PAWL GUIDE
REAR SEAT HINGE PAWL GUIDE
REAR NO. 2 SEATBACK CUSHION
NO. 3 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY
REAR LOWER SEATBACK LOCK BEZEL
NO. 2 SEAT STAY SUB-ASSEMBLY
TACK PIN
REAR SEAT CUSHION CARPET
NO. 3 SEAT CUSHION PAD LH
SEAT CUSHION COVER WITH PAD
NO. 3 SEAT CUSHION COVER SUB-ASSEMBLY LH
NO. 3 SEAT CUSHION PAD LH
HOG RING
Non-reusable part
P

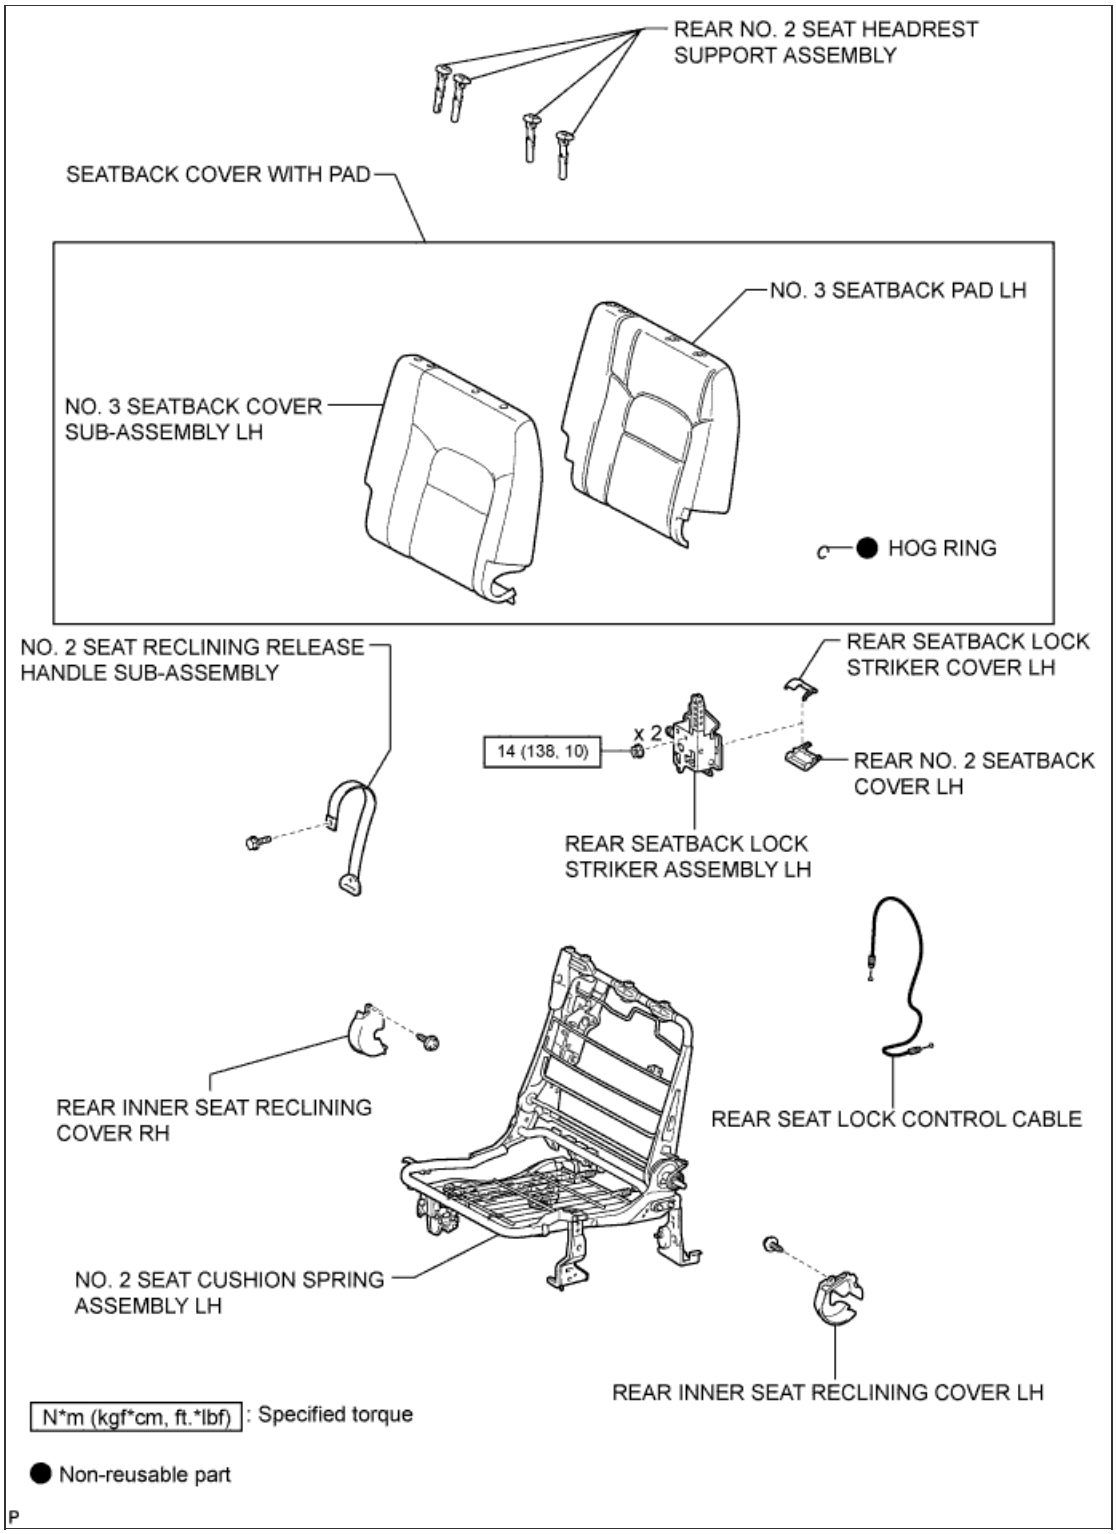

REAR NO. 2 SEAT HEADREST SUPPORT ASSEMBLY
SEATBACK COVER WITH PAD
NO. 3 SEATBACK PAD LH
NO. 3 SEATBACK COVER SUB-ASSEMBLY LH
HOG RING
NO. 2 SEAT RECLINING RELEASE HANDLE SUB-ASSEMBLY
REAR SEATBACK LOCK STRIKER COVER LH
14 (138, 10)
x 2
REAR NO. 2 SEATBACK COVER LH
REAR SEATBACK LOCK STRIKER ASSEMBLY LH
REAR INNER SEAT RECLINING COVER RH
REAR SEAT LOCK CONTROL CABLE
NO. 2 SEAT CUSHION SPRING ASSEMBLY LH
REAR INNER SEAT RECLINING COVER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
P


for Preparation [Click here]

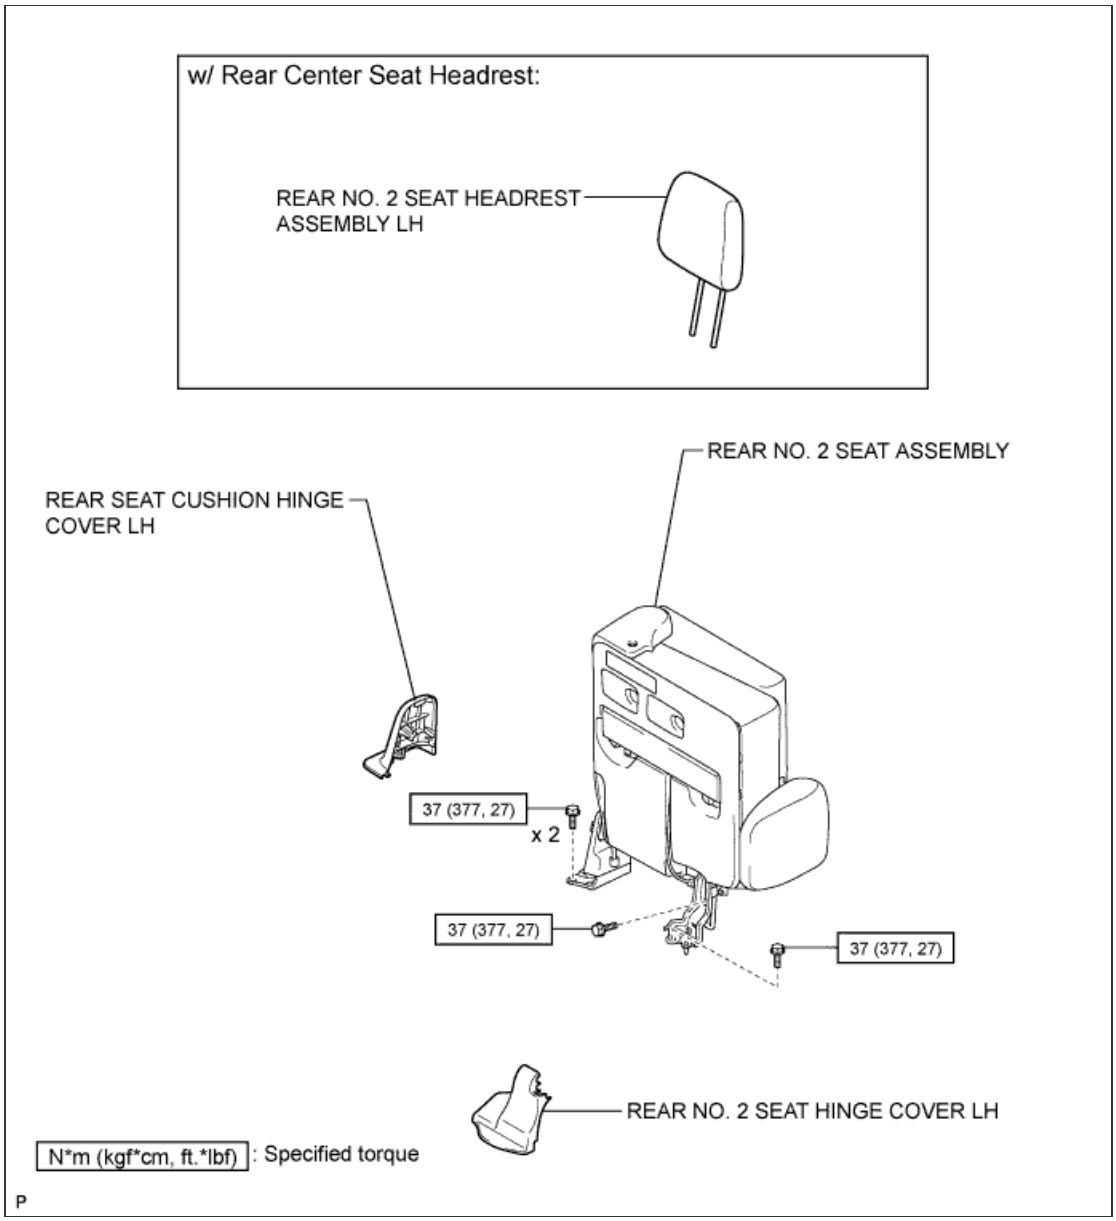

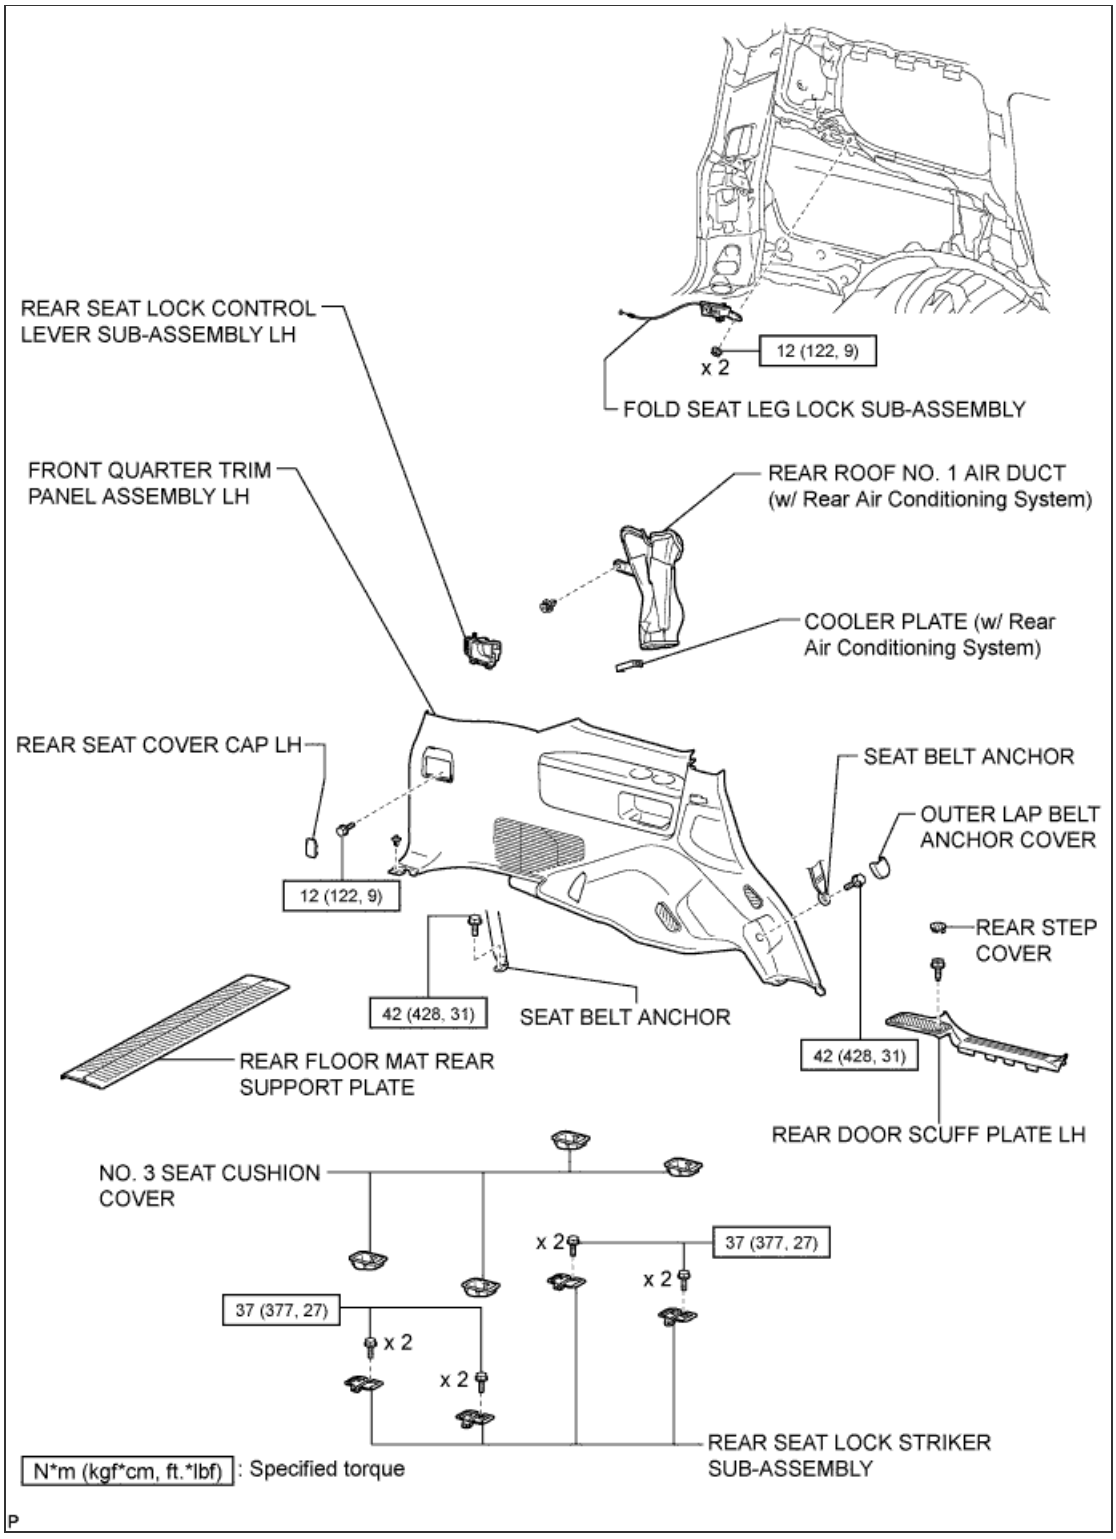

REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH
12 (122, 9)
x 2
FOLD SEAT LEG LOCK SUB-ASSEMBLY
FRONT QUARTER TRIM PANEL ASSEMBLY LH
REAR ROOF NO. 1 AIR DUCT (w/ Rear Air Conditioning System)
COOLER PLATE (w/ Rear Air Conditioning System)
REAR SEAT COVER CAP LH
SEAT BELT ANCHOR
OUTER LAP BELT ANCHOR COVER
12 (122, 9)
REAR STEP COVER
42 (428, 31)
SEAT BELT ANCHOR
42 (428, 31)
REAR FLOOR MAT REAR SUPPORT PLATE
REAR DOOR SCUFF PLATE LH
NO. 3 SEAT CUSHION COVER
x 2
37 (377, 27)
x 2
37 (377, 27)
x 2
x 2
REAR SEAT LOCK STRIKER SUB-ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
P

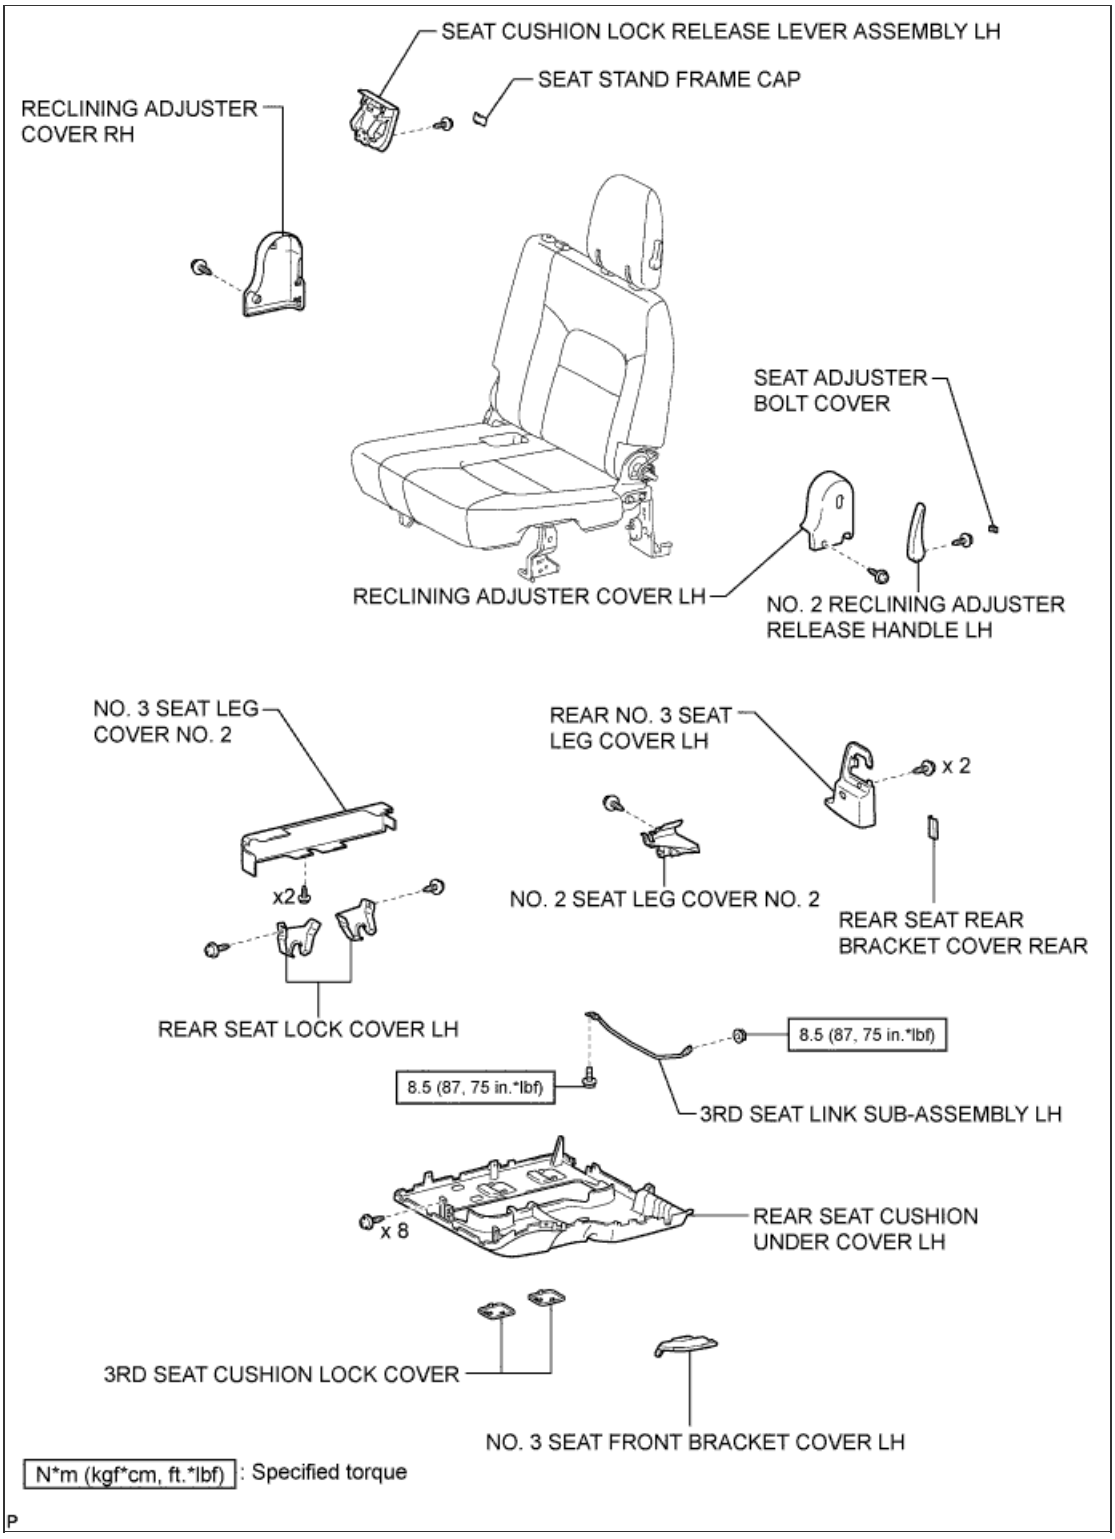
SEAT CUSHION LOCK RELEASE LEVER ASSEMBLY LH
SEAT STAND FRAME CAP
RECLINING ADJUSTER COVER RH
SEAT ADJUSTER BOLT COVER
RECLINING ADJUSTER COVER LH
NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH
NO. 3 SEAT LEG COVER NO. 2
x2
REAR SEAT LOCK COVER LH
REAR NO. 3 SEAT LEG COVER LH
x 2
NO. 2 SEAT LEG COVER NO. 2
REAR SEAT REAR BRACKET COVER REAR
8.5 (87, 75 in.*lbf)
8.5 (87, 75 in.*lbf)
3RD SEAT LINK SUB-ASSEMBLY LH
x 8
REAR SEAT CUSHION UNDER COVER LH
3RD SEAT CUSHION LOCK COVER
NO. 3 SEAT FRONT BRACKET COVER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
P

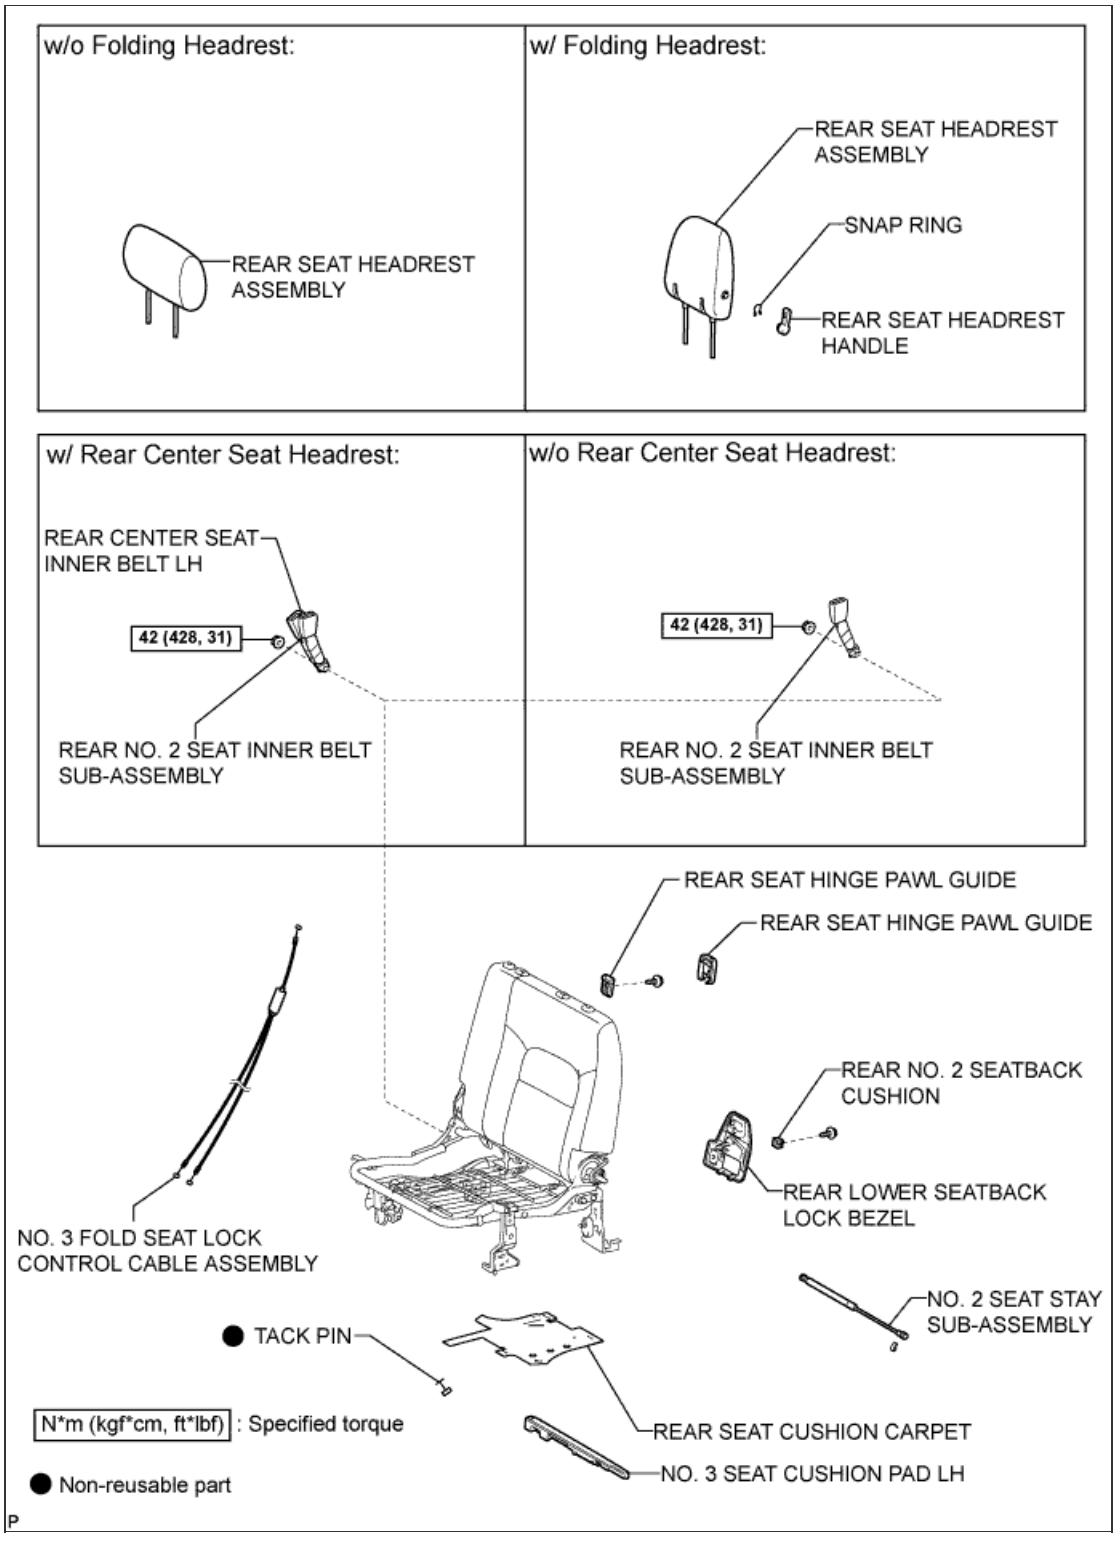

w/o Folding Headrest:
REAR SEAT HEADREST ASSEMBLY
w/ Folding Headrest:
REAR SEAT HEADREST ASSEMBLY
SNAP RING
REAR SEAT HEADREST HANDLE
w/ Rear Center Seat Headrest:
REAR CENTER SEAT INNER BELT LH
42 (428, 31)
REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY
w/o Rear Center Seat Headrest:
42 (428, 31)
REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY
REAR SEAT HINGE PAWL GUIDE
REAR SEAT HINGE PAWL GUIDE
REAR NO. 2 SEATBACK CUSHION
REAR LOWER SEATBACK LOCK BEZEL
NO. 3 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY
NO. 2 SEAT STAY SUB-ASSEMBLY
TACK PIN
N*m (kgf*cm, ft*lbf) : Specified torque
REAR SEAT CUSHION CARPET
NO. 3 SEAT CUSHION PAD LH
Non-reusable part
P

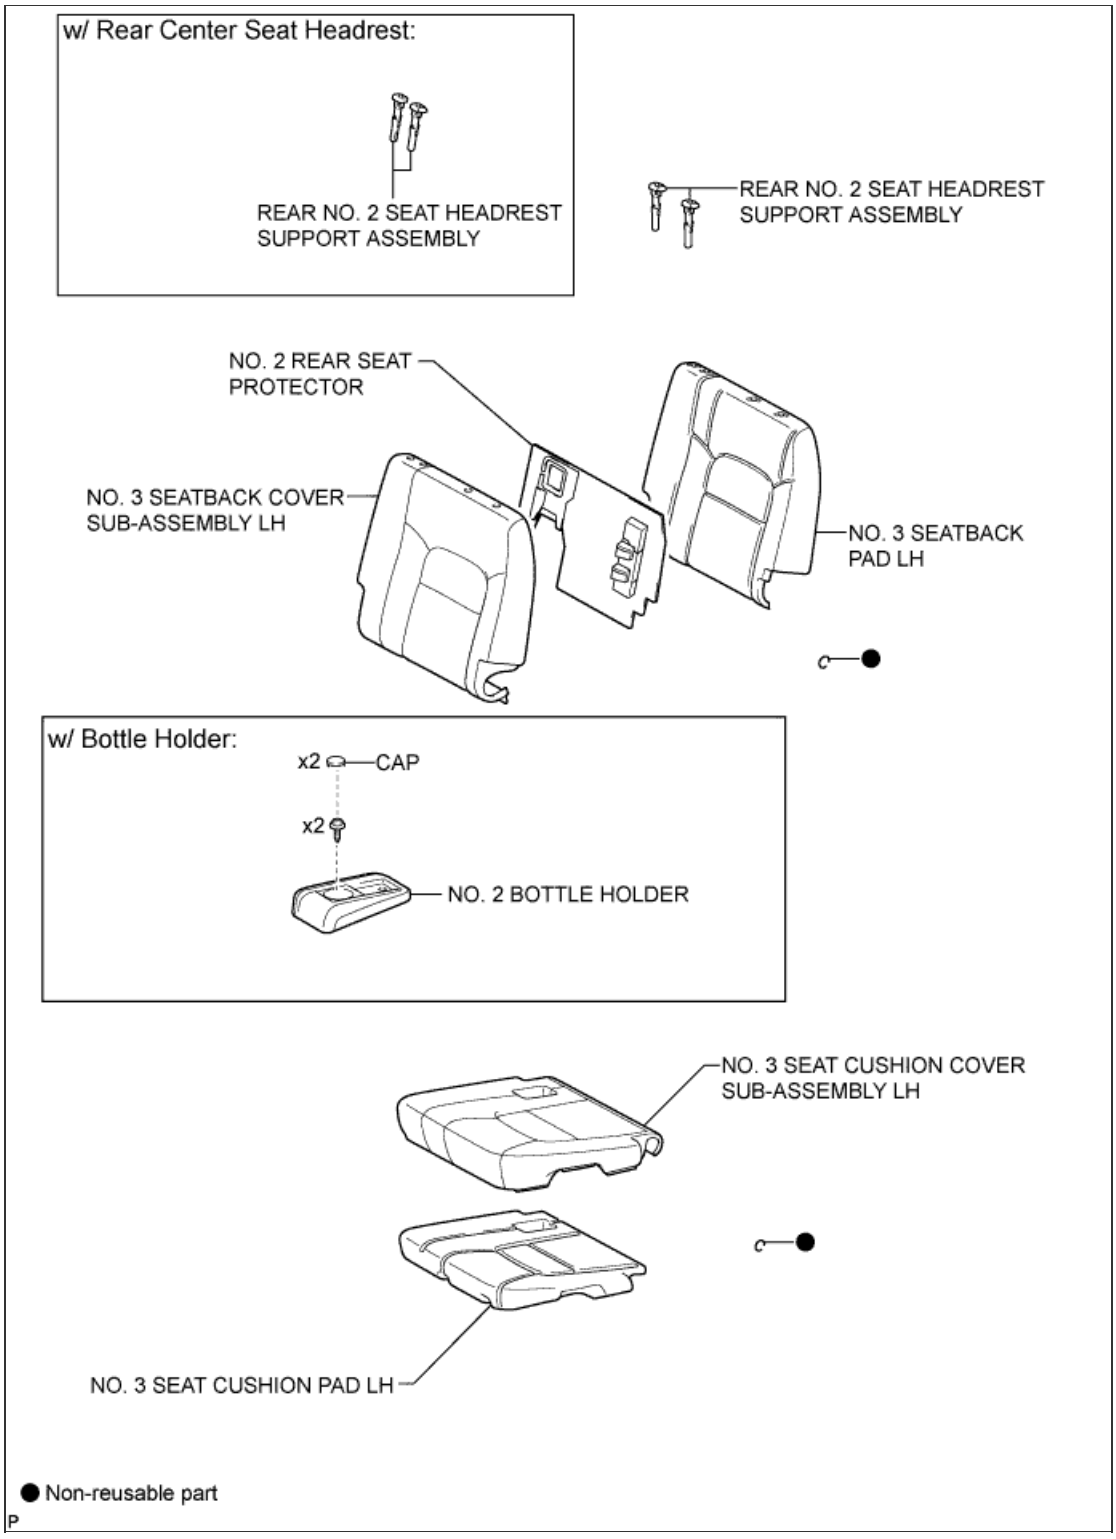

w/ Rear Center Seat Headrest:
REAR NO. 2 SEAT HEADREST SUPPORT ASSEMBLY
REAR NO. 2 SEAT HEADREST SUPPORT ASSEMBLY
NO. 2 REAR SEAT PROTECTOR
NO. 3 SEATBACK COVER SUB-ASSEMBLY LH
NO. 3 SEATBACK PAD LH
w/ Bottle Holder:
x2
CAP
x2
NO. 2 BOTTLE HOLDER
NO. 3 SEAT CUSHION COVER SUB-ASSEMBLY LH
NO. 3 SEAT CUSHION PAD LH
● Non-reusable part


P

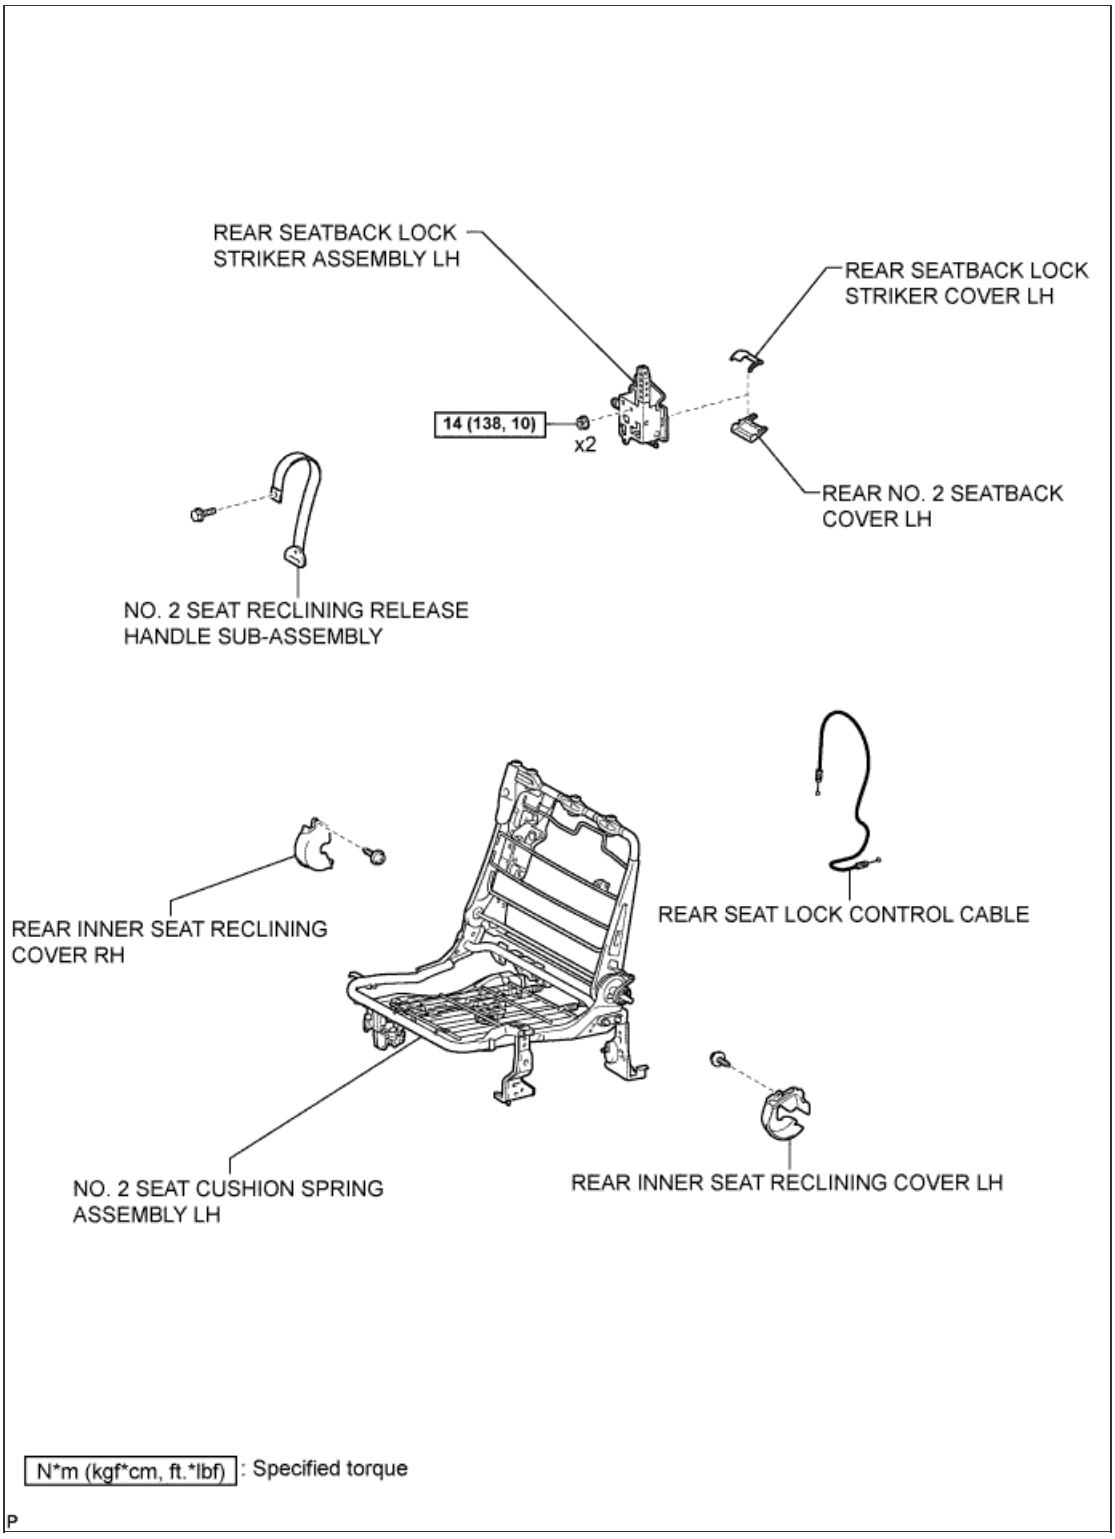

REAR SEATBACK LOCK STRIKER ASSEMBLY LH
REAR SEATBACK LOCK STRIKER COVER LH
14 (138, 10)
x2
REAR NO. 2 SEATBACK COVER LH
NO. 2 SEAT RECLINING RELEASE HANDLE SUB-ASSEMBLY
REAR INNER SEAT RECLINING COVER RH
REAR SEAT LOCK CONTROL CABLE
NO. 2 SEAT CUSHION SPRING ASSEMBLY LH
REAR INNER SEAT RECLINING COVER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
P


for Preparation [Click here]

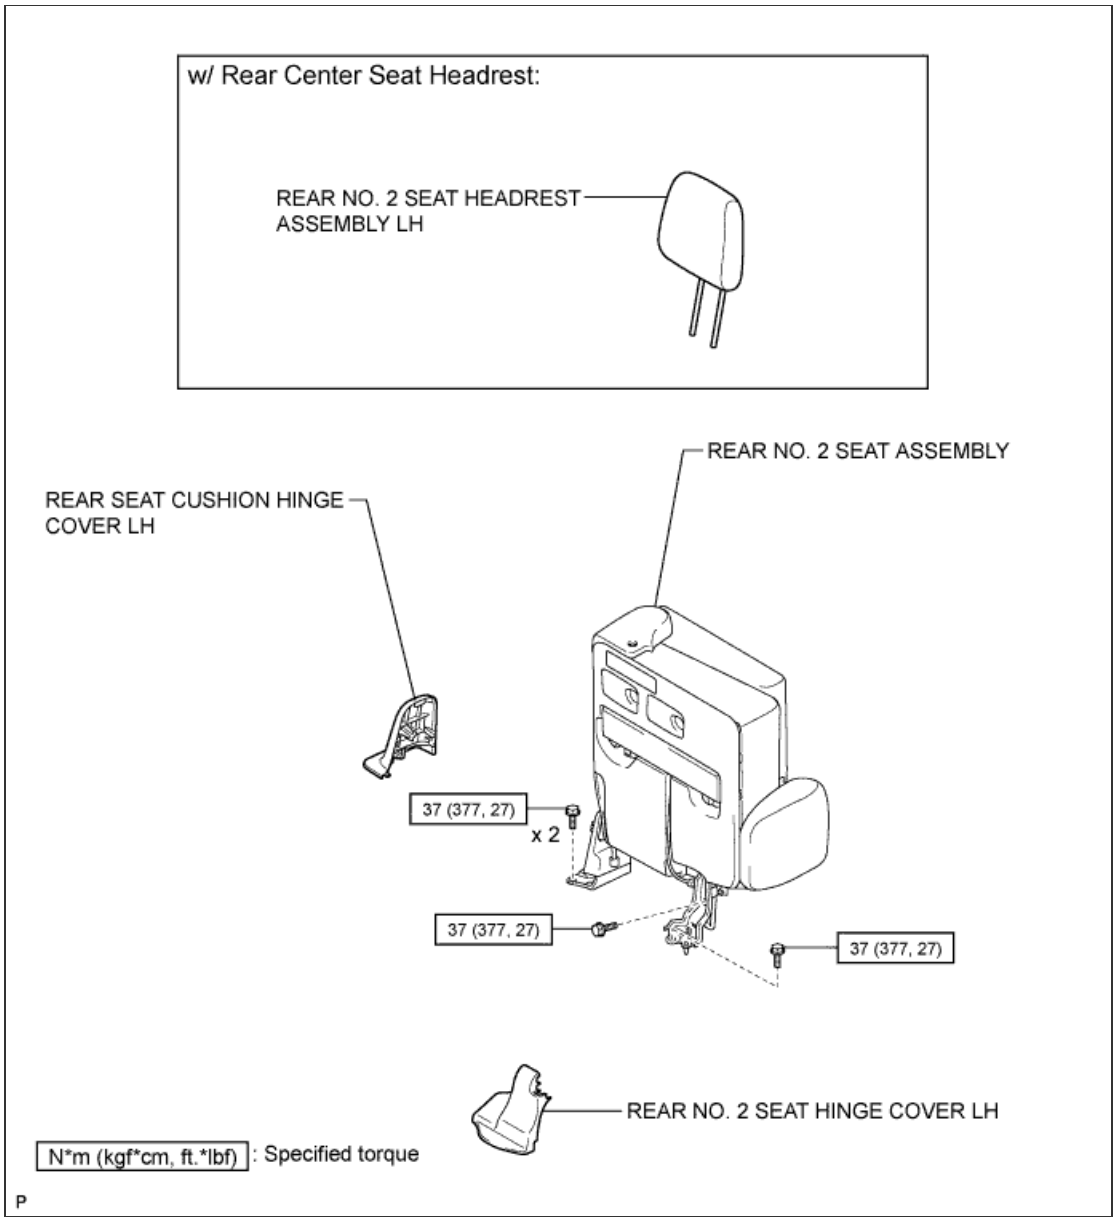


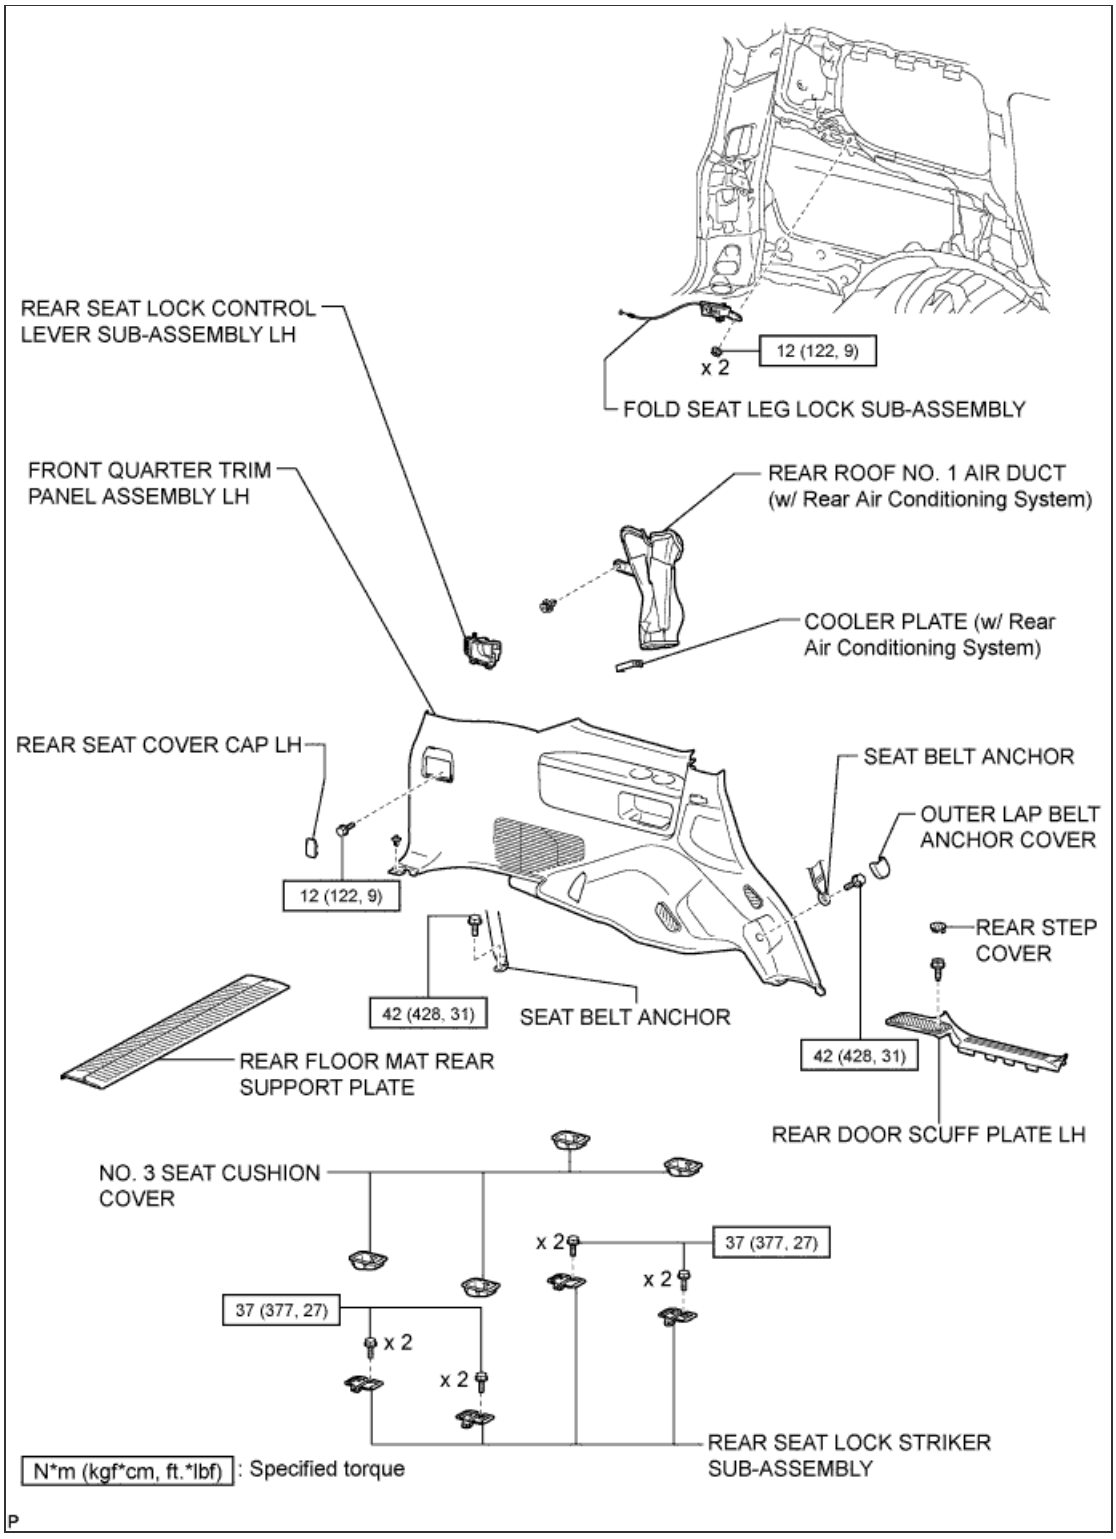
REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH
12 (122, 9)
x 2
FOLD SEAT LEG LOCK SUB-ASSEMBLY
FRONT QUARTER TRIM PANEL ASSEMBLY LH
REAR ROOF NO. 1 AIR DUCT (w/ Rear Air Conditioning System)
COOLER PLATE (w/ Rear Air Conditioning System)
REAR SEAT COVER CAP LH
SEAT BELT ANCHOR
OUTER LAP BELT ANCHOR COVER
12 (122, 9)
REAR STEP COVER
42 (428, 31)
SEAT BELT ANCHOR
42 (428, 31)
REAR FLOOR MAT REAR SUPPORT PLATE
REAR DOOR SCUFF PLATE LH
NO. 3 SEAT CUSHION COVER
x 2
37 (377, 27)
x 2
37 (377, 27)
x 2
x 2
REAR SEAT LOCK STRIKER SUB-ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
P

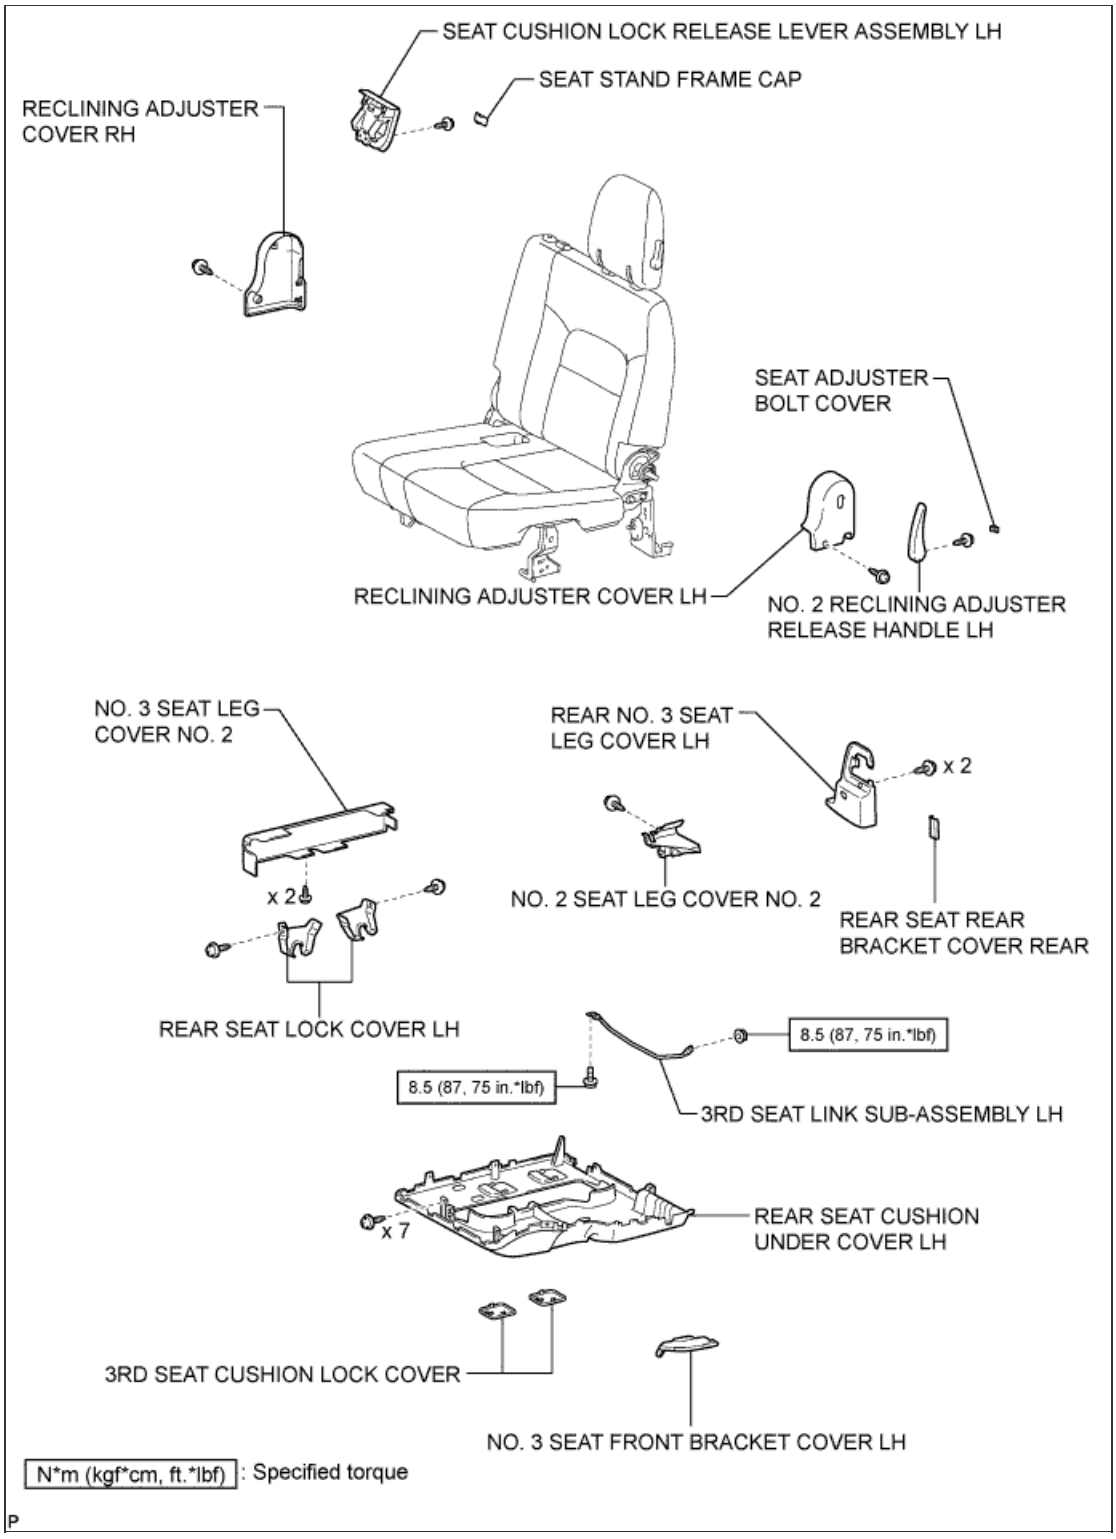
SEAT CUSHION LOCK RELEASE LEVER ASSEMBLY LH
SEAT STAND FRAME CAP
RECLINING ADJUSTER COVER RH
SEAT ADJUSTER BOLT COVER
RECLINING ADJUSTER COVER LH
NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH
NO. 3 SEAT LEG COVER NO. 2
x 2
REAR SEAT LOCK COVER LH
REAR NO. 3 SEAT LEG COVER LH
x 2
NO. 2 SEAT LEG COVER NO. 2
REAR SEAT REAR BRACKET COVER REAR
8.5 (87, 75 in.*lbf)
8.5 (87, 75 in.*lbf)
3RD SEAT LINK SUB-ASSEMBLY LH
x 7
REAR SEAT CUSHION UNDER COVER LH
3RD SEAT CUSHION LOCK COVER
NO. 3 SEAT FRONT BRACKET COVER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
P

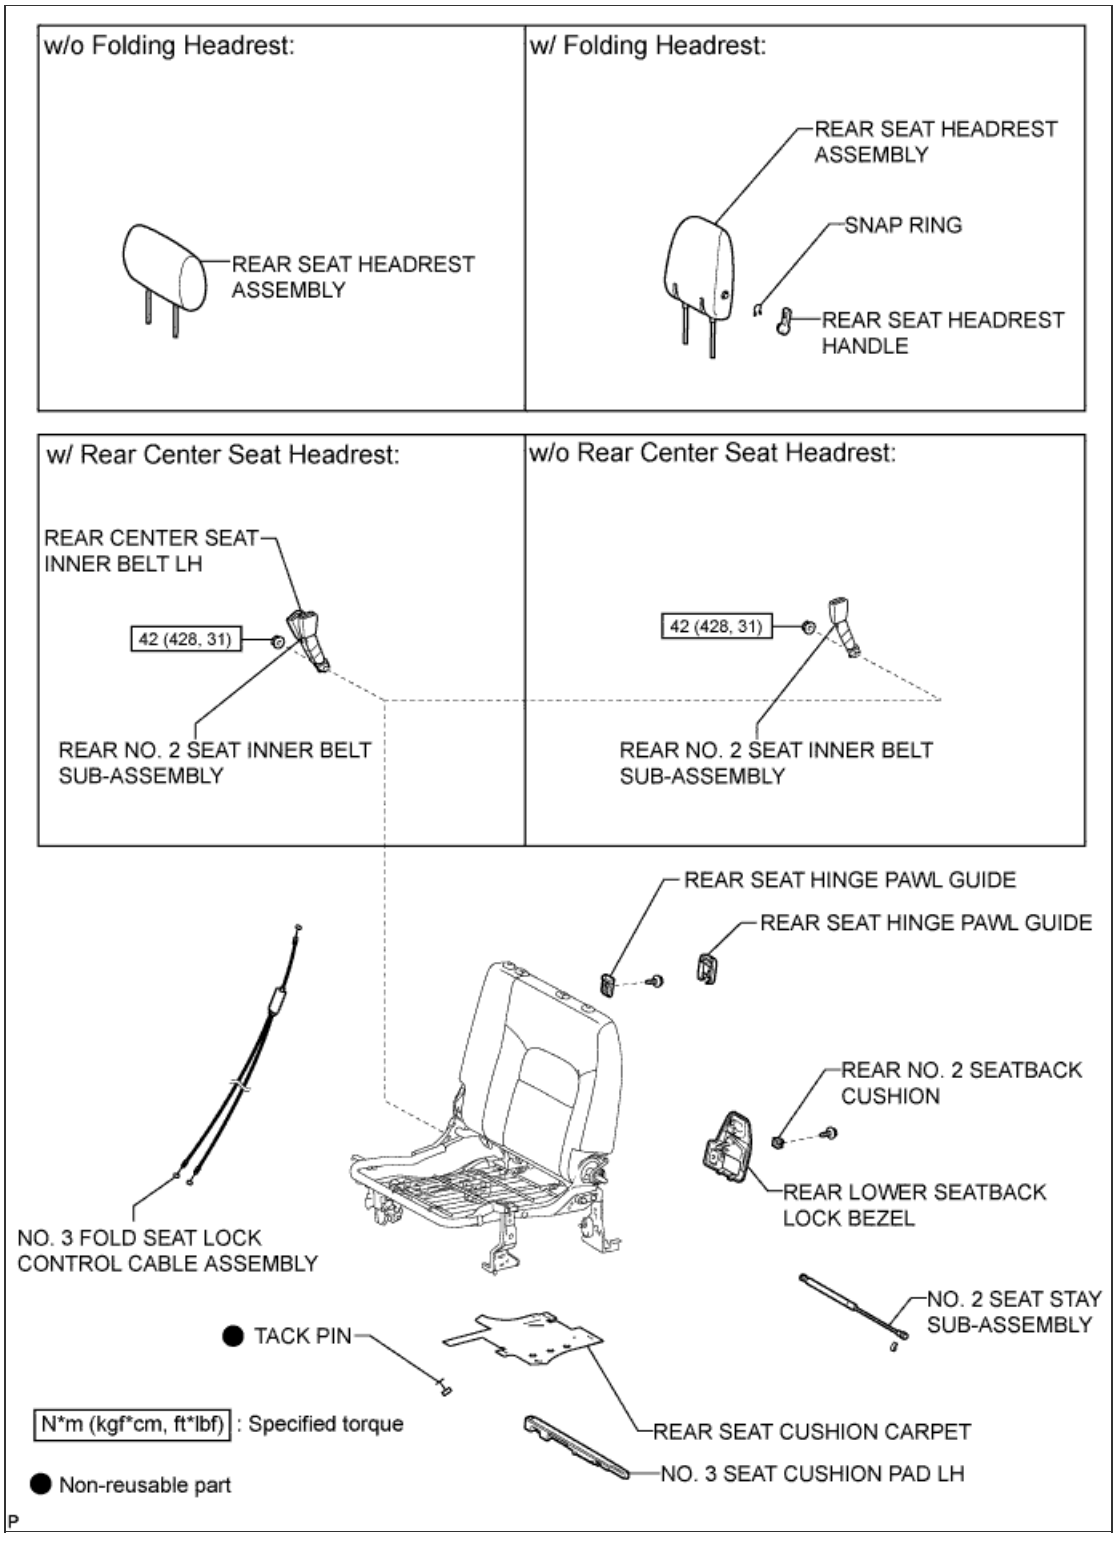
w/o Folding Headrest:
REAR SEAT HEADREST ASSEMBLY
w/ Folding Headrest:
REAR SEAT HEADREST ASSEMBLY
SNAP RING
REAR SEAT HEADREST HANDLE
w/ Rear Center Seat Headrest:
REAR CENTER SEAT INNER BELT LH
42 (428, 31)
REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY
w/o Rear Center Seat Headrest:
42 (428, 31)
REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY
REAR SEAT HINGE PAWL GUIDE
REAR SEAT HINGE PAWL GUIDE
REAR NO. 2 SEATBACK CUSHION
REAR LOWER SEATBACK LOCK BEZEL
NO. 3 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY
NO. 2 SEAT STAY SUB-ASSEMBLY
TACK PIN
N*m (kgf*cm, ft*lbf) : Specified torque
REAR SEAT CUSHION CARPET
NO. 3 SEAT CUSHION PAD LH
Non-reusable part
P

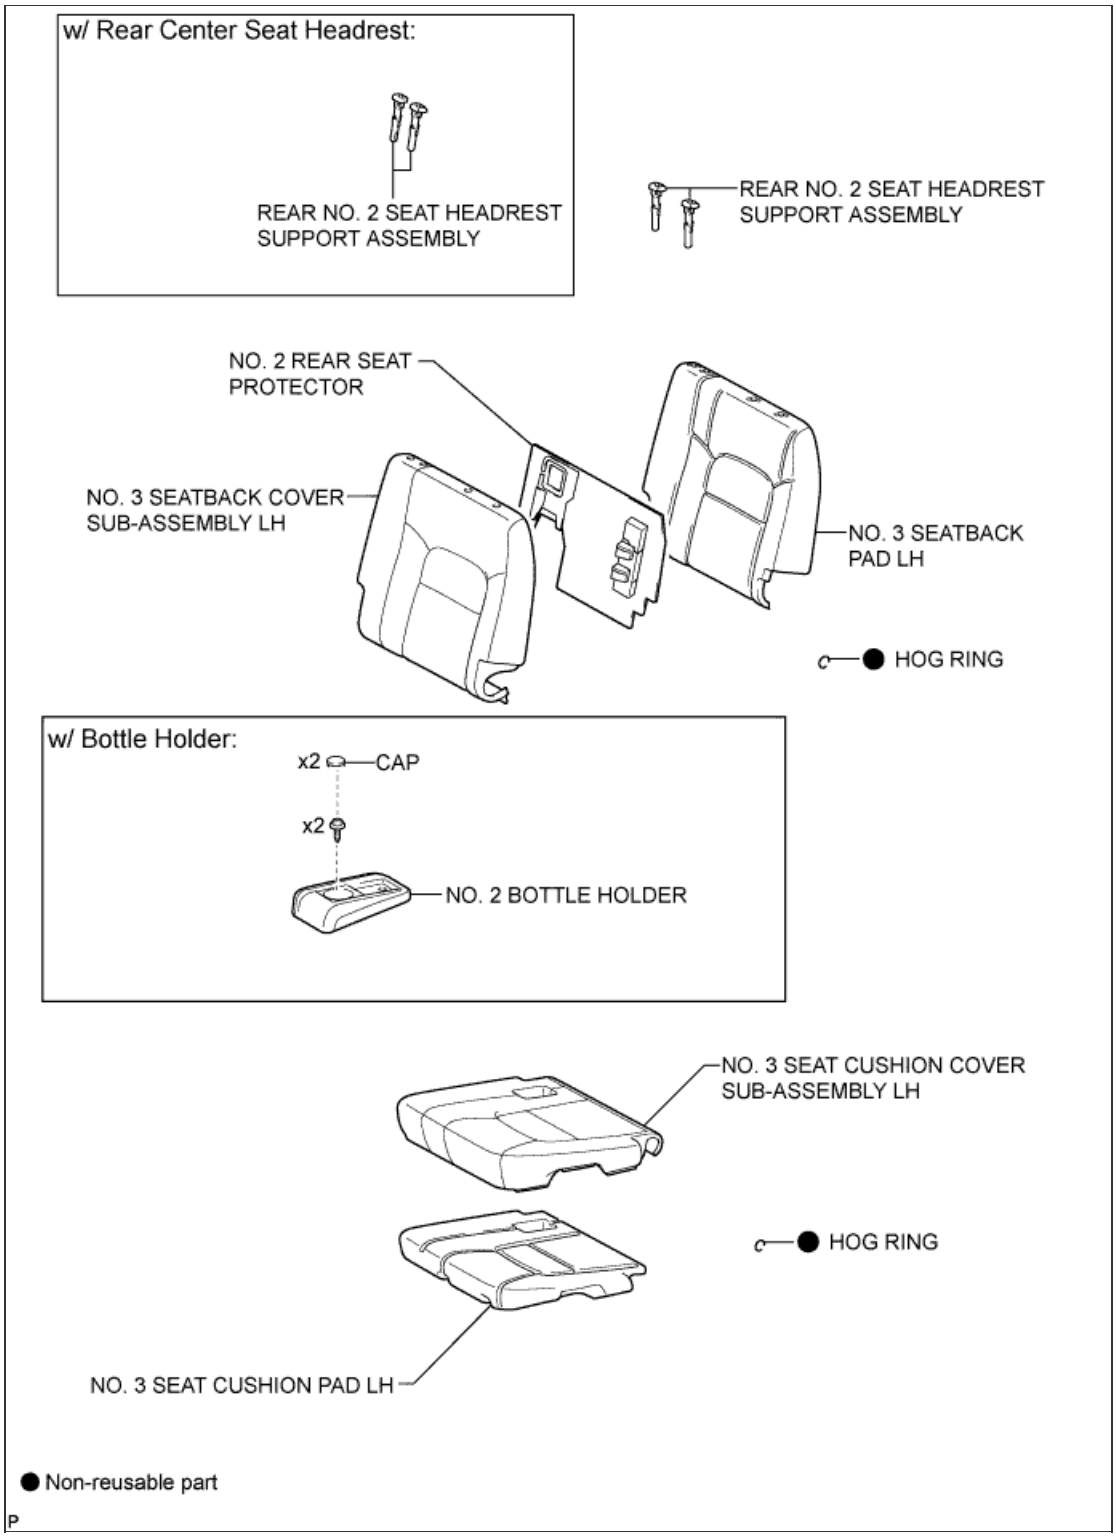
w/ Rear Center Seat Headrest:
REAR NO. 2 SEAT HEADREST SUPPORT ASSEMBLY
REAR NO. 2 SEAT HEADREST SUPPORT ASSEMBLY
NO. 2 REAR SEAT PROTECTOR
NO. 3 SEATBACK COVER SUB-ASSEMBLY LH
NO. 3 SEATBACK PAD LH
HOG RING
w/ Bottle Holder:
x2
CAP
x2
NO. 2 BOTTLE HOLDER
NO. 3 SEAT CUSHION COVER SUB-ASSEMBLY LH
HOG RING
NO. 3 SEAT CUSHION PAD LH
Non-reusable part
P

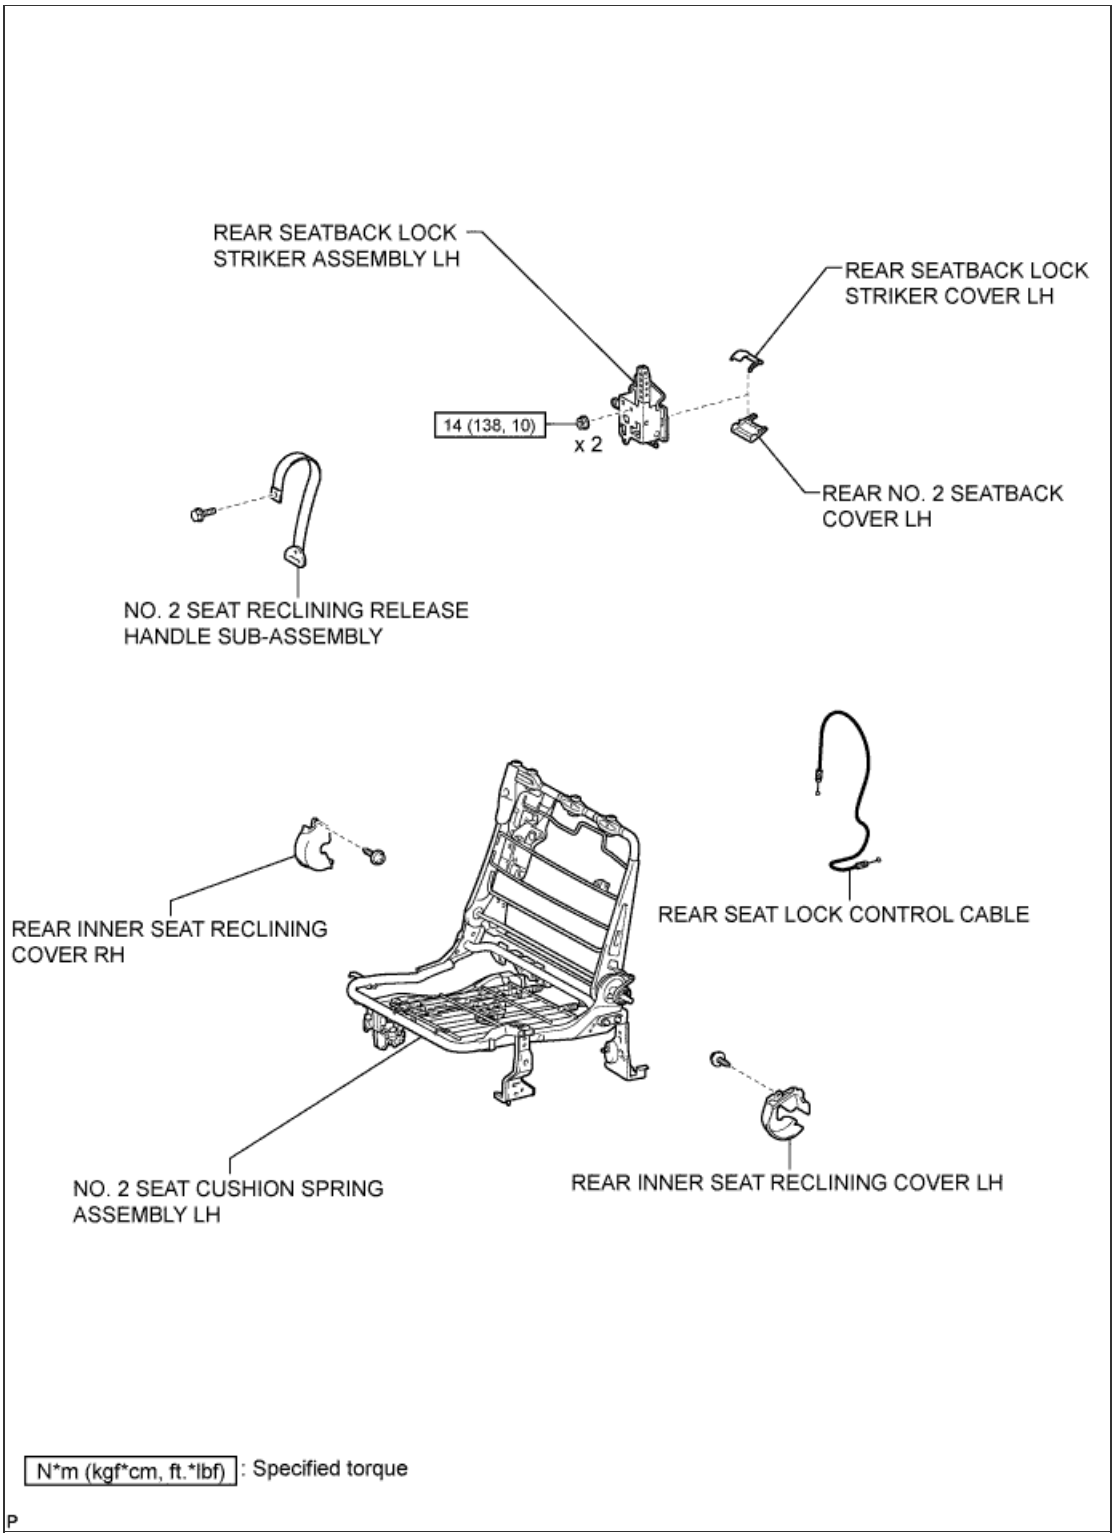
REAR SEATBACK LOCK STRIKER ASSEMBLY LH
REAR SEATBACK LOCK STRIKER COVER LH
14 (138, 10)
x 2
REAR NO. 2 SEATBACK COVER LH
NO. 2 SEAT RECLINING RELEASE HANDLE SUB-ASSEMBLY
REAR INNER SEAT RECLINING COVER RH
REAR SEAT LOCK CONTROL CABLE
NO. 2 SEAT CUSHION SPRING ASSEMBLY LH
REAR INNER SEAT RECLINING COVER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
P

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**


1. REMOVE REAR NO. 2 SEAT HEADREST ASSEMBLY LH

2. REMOVE REAR SEAT CUSHION HINGE COVER LH


a. Operate the rear seat headrest handle and lower the headrest.

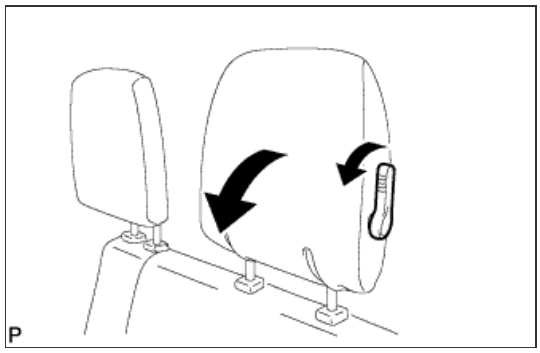

b. Operate the reclining ad ster release handle and fold down the seat.

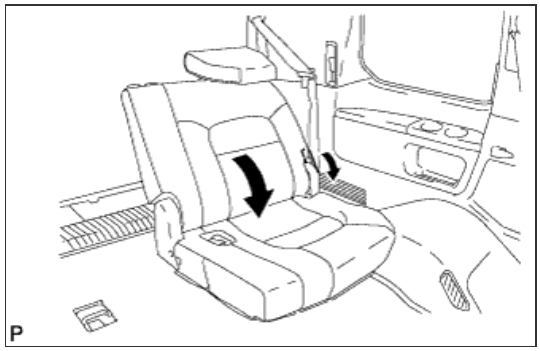


c. Operate the seat cushion lock release lever and move the seat to the storage position.

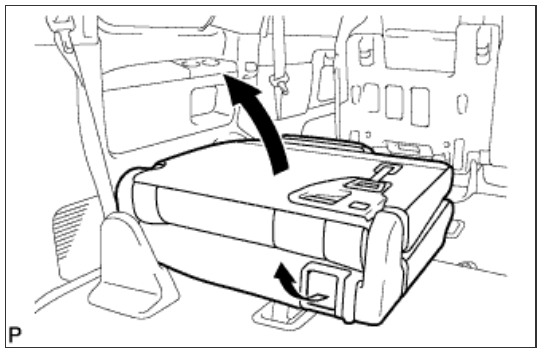

d. Using a screwdriver, detach the 3 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

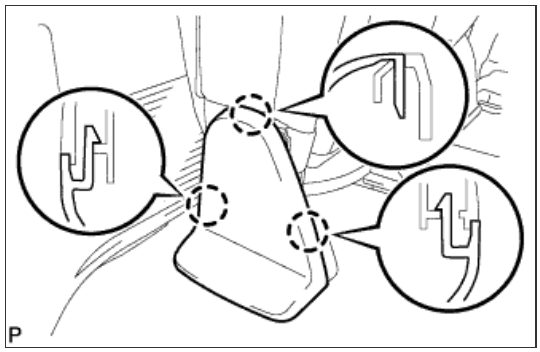

3. REMOVE REAR NO. 2 SEAT HINGE COVER LH

a. Detach the 2 claws and clip, and then remove the cover.

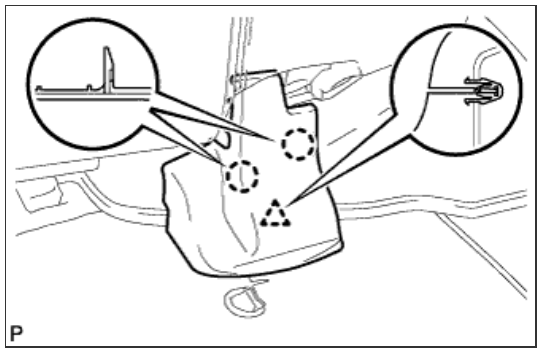


4. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. Remove the 4 bolts and seat assembly.

NOTICE:

Be careful not to damage the vehicle body.

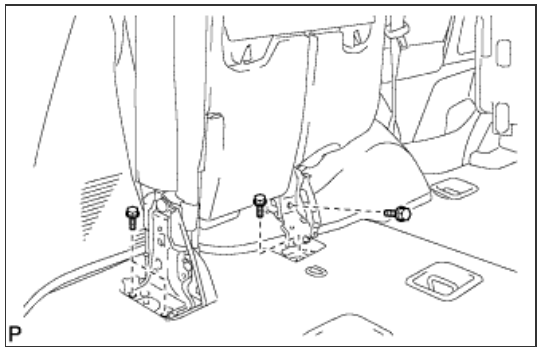


5. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

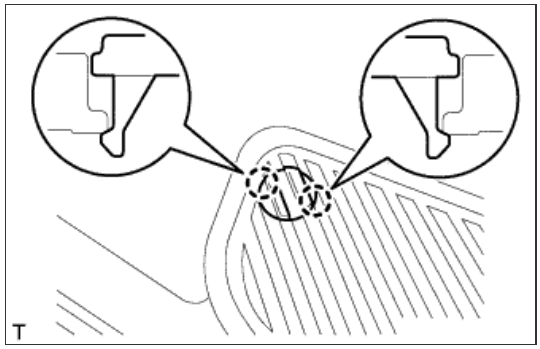

6. INSTALL REAR DOOR SCUFF PLATE LH


a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

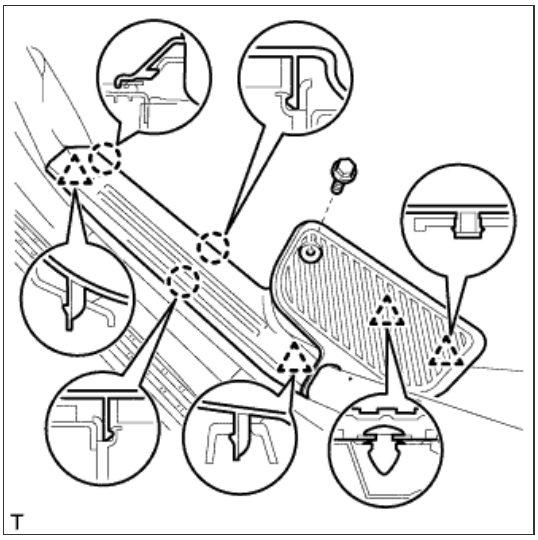

7. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

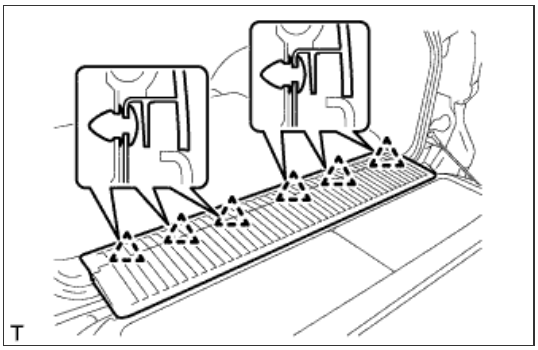

8. REMOVE REAR SEAT COVER CAP


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

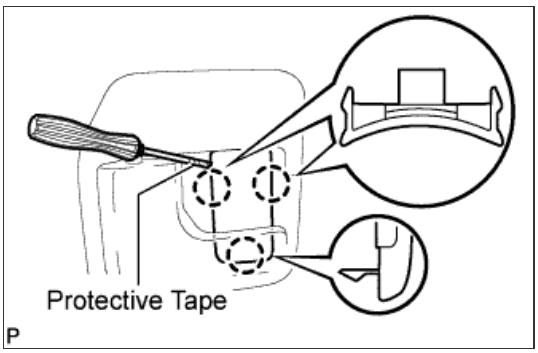

9. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front quarter trim panel assembly LH (Click here).


b. w/o Sliding Roof:
Remove the front quarter trim panel assembly LH (Click here).

10. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH


a. Detach the 4 claws and remove the seat lock control lever.

11. REMOVE REAR ROOF NO. 1 AIR DUCT (w/ Rear Air Conditioning System)

a. Detach the 2 claws and remove the cooler plate.

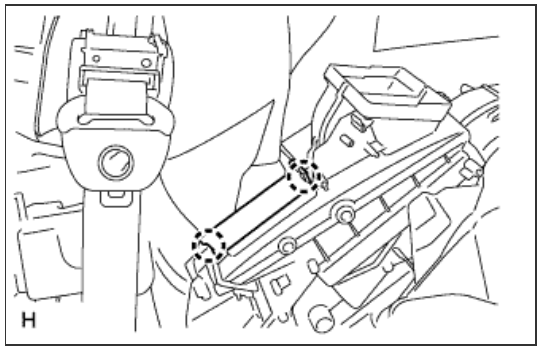


b. Remove the clip and duct.

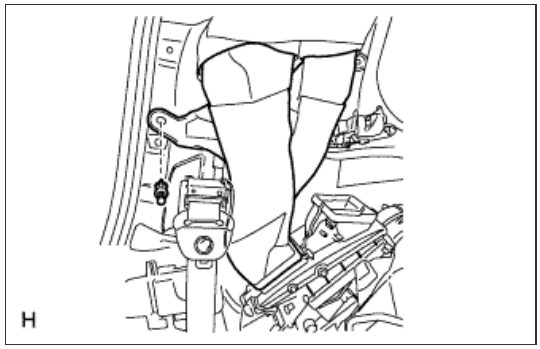

12. REMOVE FOLD SEAT LEG LOCK SUB-ASSEMBLY


a. Detach the 2 cable clamps.

b. Remove the 2 nuts and fold seat leg lock.

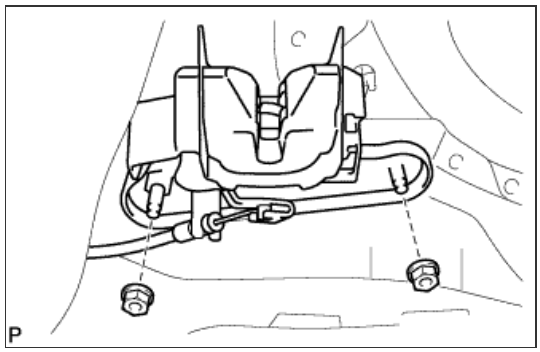

13. REMOVE NO. 3 SEAT CUSHION COVER


a. Detach the 4 clips and 16 claws, and then remove the 4 seat cushion covers.

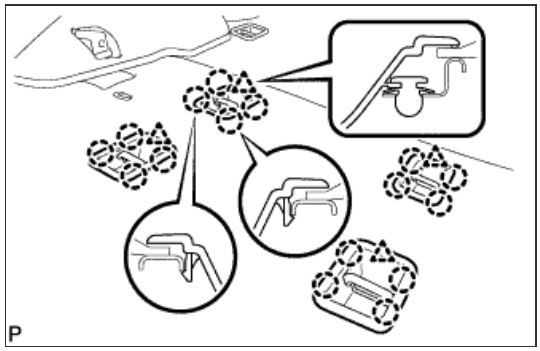

14. REMOVE REAR SEAT LOCK STRIKER SUB-ASSEMBLY

a. Fold back the floor carpet.

b. Remove the 8 bolts and 4 seat lock strikers.

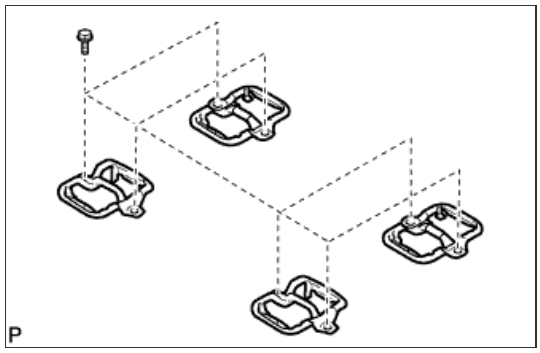

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**


1. REMOVE REAR NO. 2 SEAT HEADREST ASSEMBLY LH (w/ Rear Center Seat Headrest)

2. REMOVE REAR SEAT CUSHION HINGE COVER LH


a. Operate the rear seat headrest handle and lower the headrest.

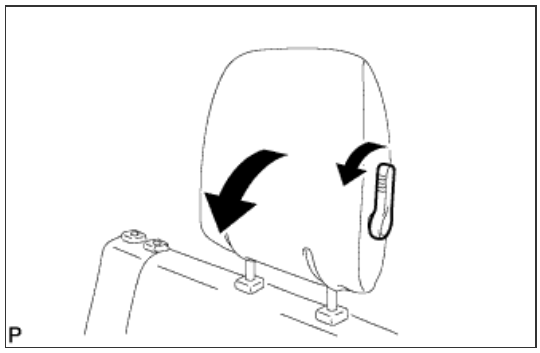

b. Operate the reclining ad ster release handle and fold down the seat.

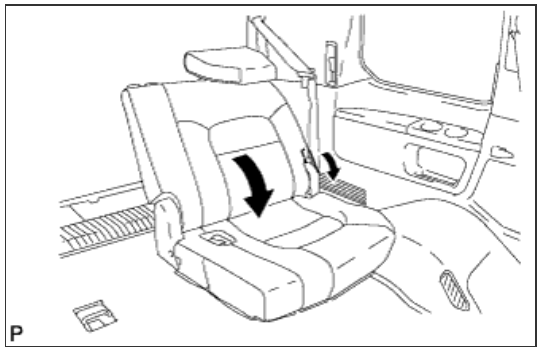


c. Operate the seat cushion lock release lever and move the seat to the storage position.

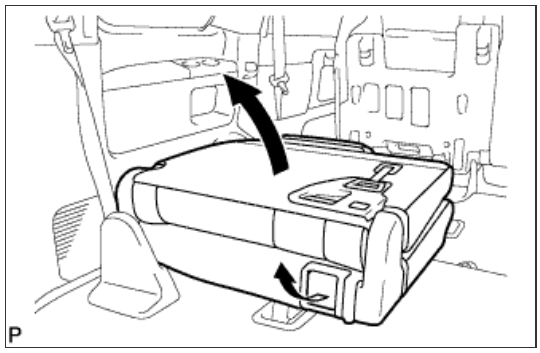

d. Using a screwdriver, detach the 3 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

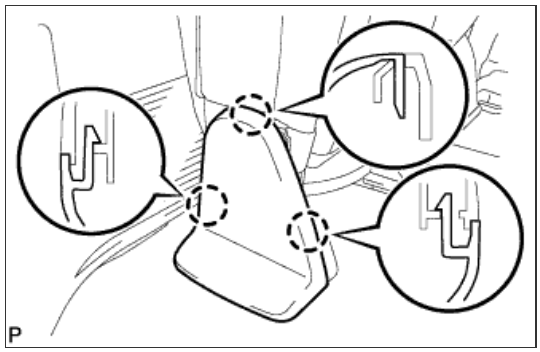

3. REMOVE REAR NO. 2 SEAT HINGE COVER LH

a. Detach the 2 claws and clip, and then remove the cover.

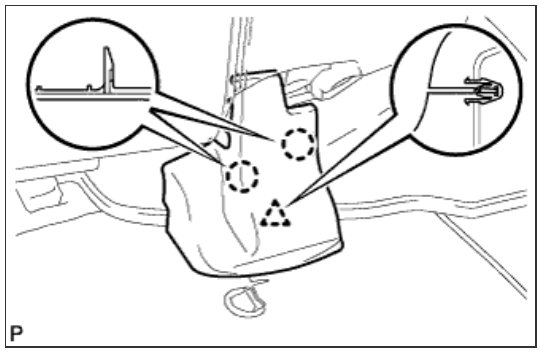


4. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. Remove the 4 bolts and seat assembly.

NOTICE:

Be careful not to damage the vehicle body.

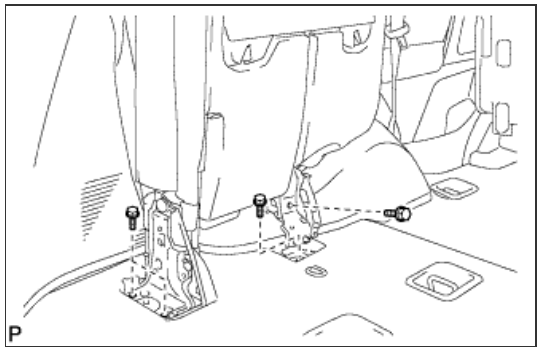


5. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

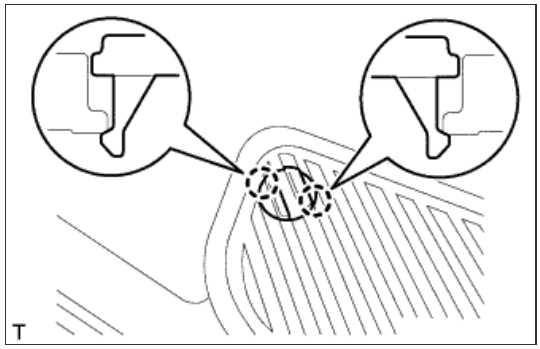

6. INSTALL REAR DOOR SCUFF PLATE LH


a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

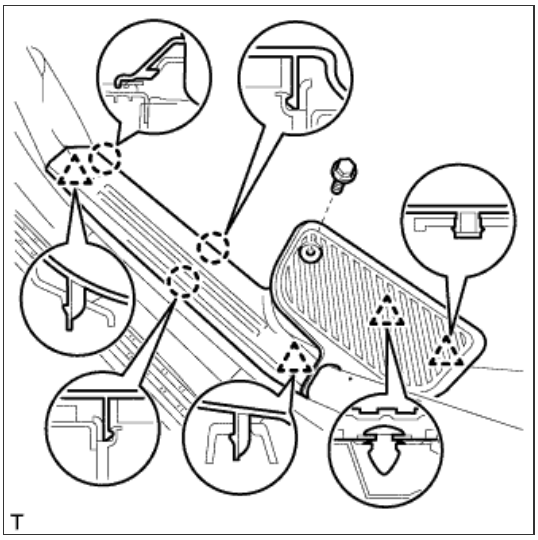

7. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

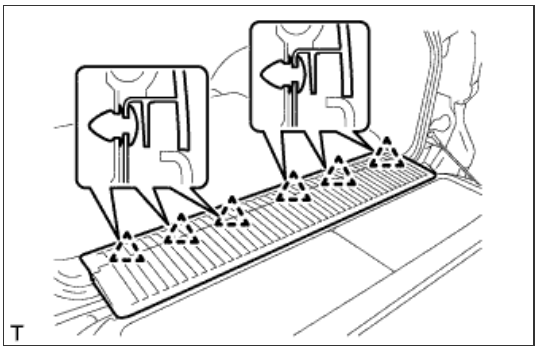

8. REMOVE REAR SEAT COVER CAP


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:

Tape the screwdriver tip before use.

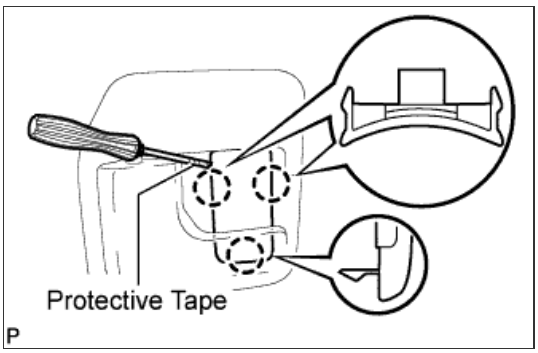

9. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front quarter trim panel assembly LH (Click here).


b. w/o Sliding Roof:
Remove the front quarter trim panel assembly LH (Click here).

10. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH


a. Detach the 4 claws and remove the seat lock control lever.

11. REMOVE REAR ROOF NO. 1 AIR DUCT (w/ Rear Air Conditioning System)

a. Detach the 2 claws and remove the cooler plate.

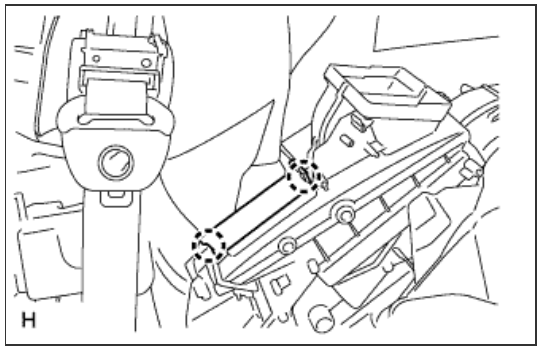


b. Remove the clip and duct.

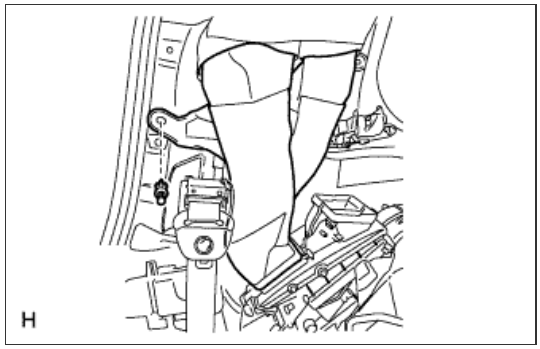

12. REMOVE FOLD SEAT LEG LOCK SUB-ASSEMBLY


a. Detach the 2 cable clamps.

b. Remove the 2 nuts and fold seat leg lock.

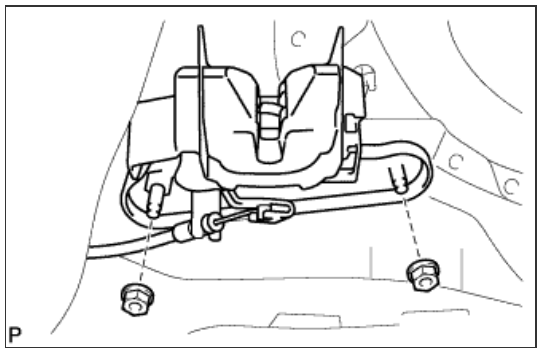

13. REMOVE NO. 3 SEAT CUSHION COVER


a. Detach the 4 clips and 16 claws, and then remove the 4 seat cushion covers.

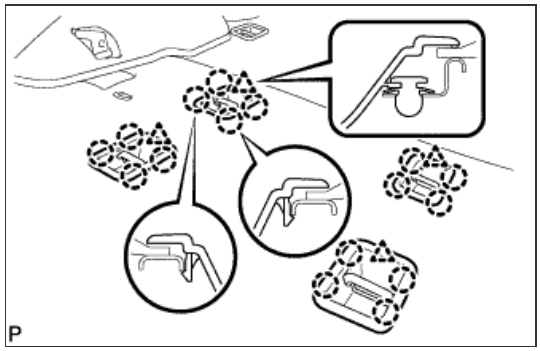

14. REMOVE REAR SEAT LOCK STRIKER SUB-ASSEMBLY

a. Fold back the floor carpet.

b. Remove the 8 bolts and 4 seat lock strikers.

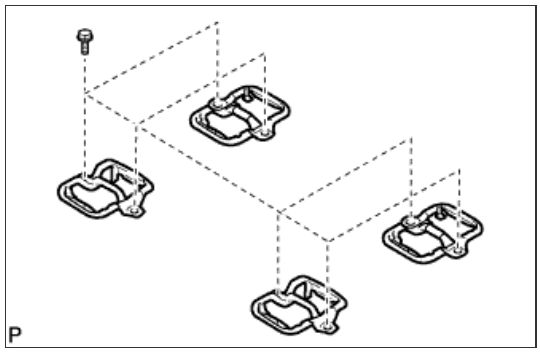

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:


- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

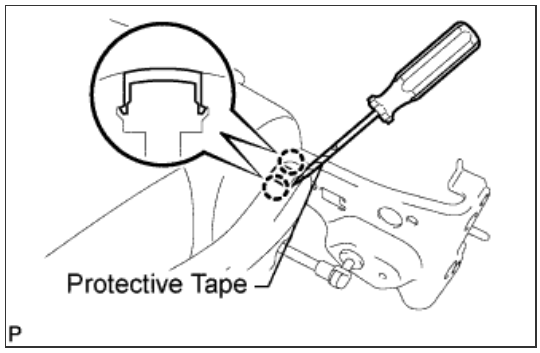

2. REMOVE NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

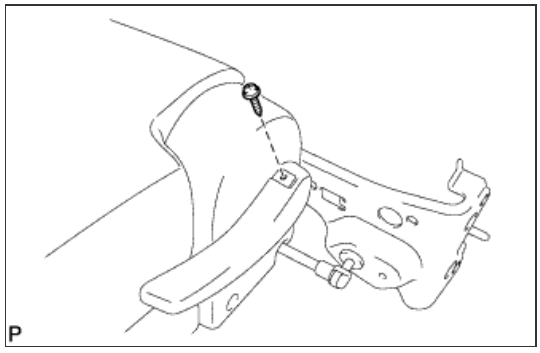

3. REMOVE RECLINING ADJUSTER COVER LH

a. Remove the screw.


b. Detach the claws in the order shown in the illustration, and then remove the cover.

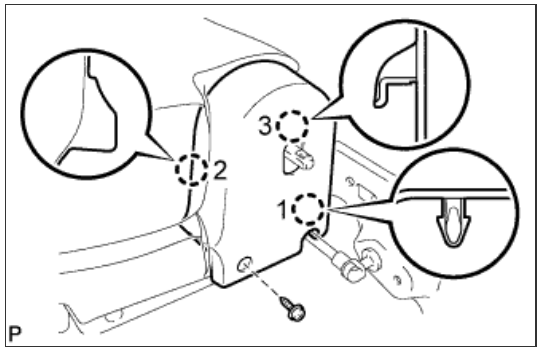

4. REMOVE RECLINING ADJUSTER COVER RH

a. Remove the screw.

b. Detach the 5 claws in the order shown in the illustration, and then remove the cover.

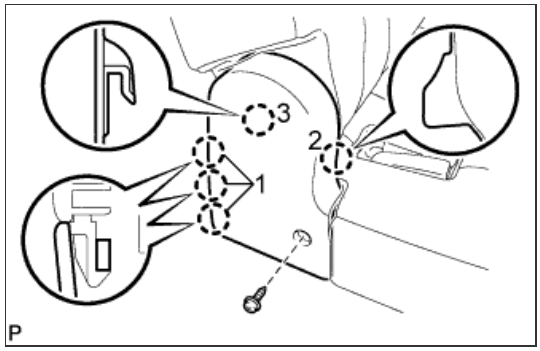


5. REMOVE REAR SEAT REAR BRACKET COVER REAR

a. Detach the 2 claws and cover.


6. REMOVE REAR NO. 3 SEAT LEG COVER LH

a. Using a screwdriver, remove the spring of the seat stay ball-joint.

b. Disconnect the seat stay.

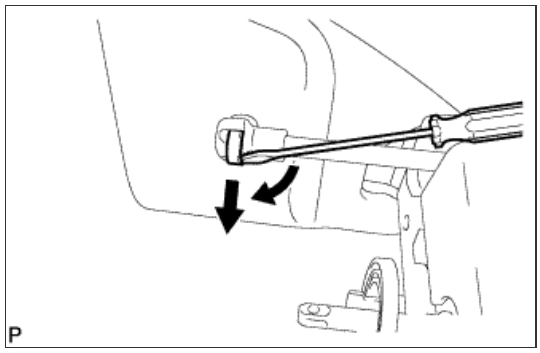


c. Remove the 2 screws and cover.

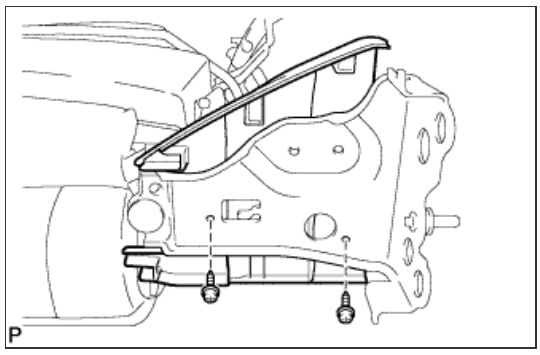


7. REMOVE NO. 2 SEAT LEG COVER NO. 2

a. Remove the screw and seat leg cover.

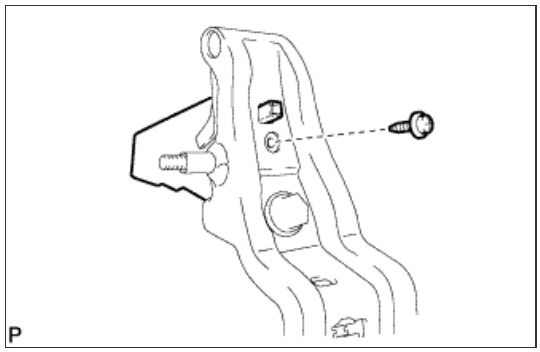


8. REMOVE 3RD SEAT LINK SUB-ASSEMBLY LH

a. Remove the bolt, nut and seat link.

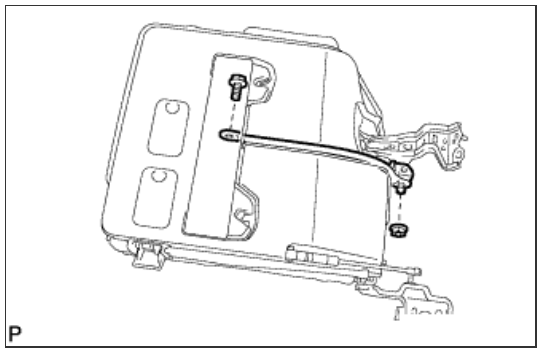


9. REMOVE 3RD SEAT CUSHION LOCK COVER

a. Detach the 4 claws and remove the 2 covers.

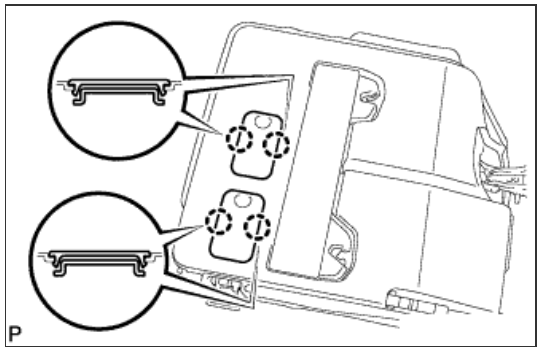


10. REMOVE REAR SEAT CUSHION UNDER COVER LH

a. Detach the 16 claws.

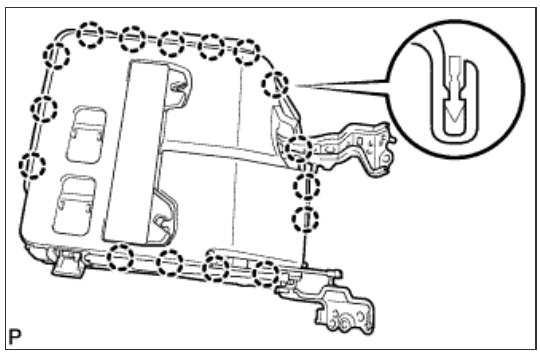


b. Remove the 8 screws and cover.

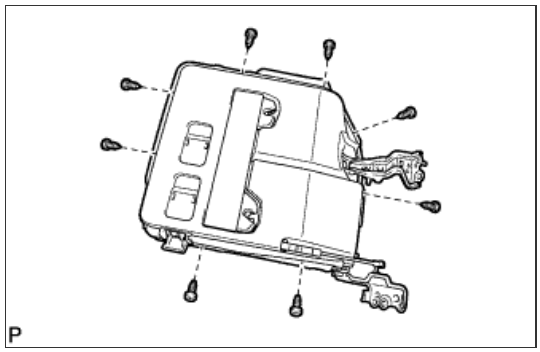

11. REMOVE NO. 3 SEAT FRONT BRACKET COVER LH


a. Detach the 4 claws and remove the cover.

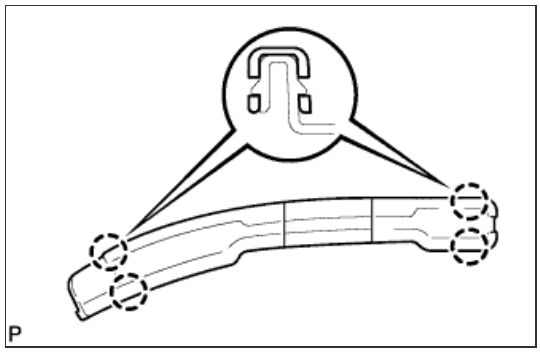

12. REMOVE NO. 3 SEAT LEG COVER NO. 2

a. Remove the 2 screws.


b. Detach the 4 claws and remove the cover.

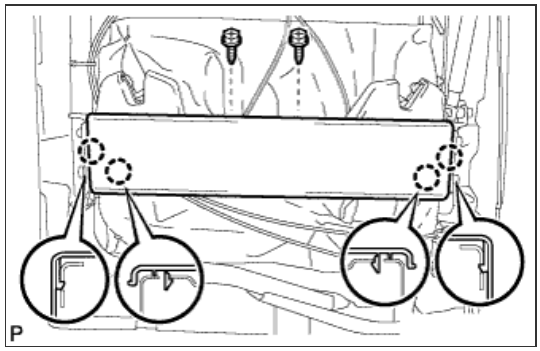

13. REMOVE REAR SEAT LOCK COVER LH

a. Remove the 2 screws.

b. Detach the 2 clamps and remove the 2 covers.

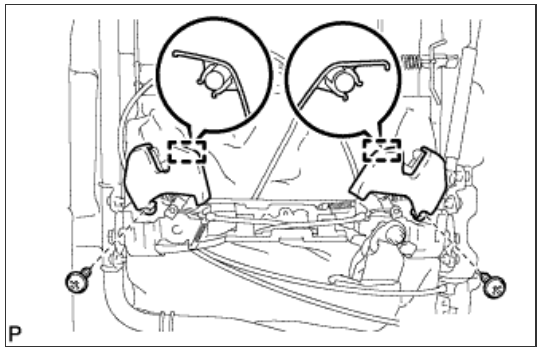


14. REMOVE SEAT STAND FRAME CAP

a. Using a screwdriver, detach the 2 claws and remove the stand frame cap.

HINT:


Tape the screwdriver tip before use.

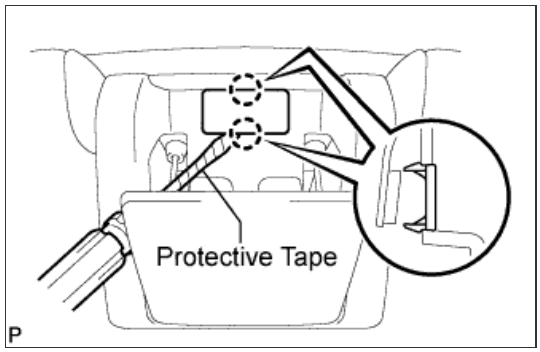


15. REMOVE SEAT CUSHION LOCK RELEASE LEVER ASSEMBLY LH

a. Remove the 2 screws.

b. Detach the claw and remove the release lever.

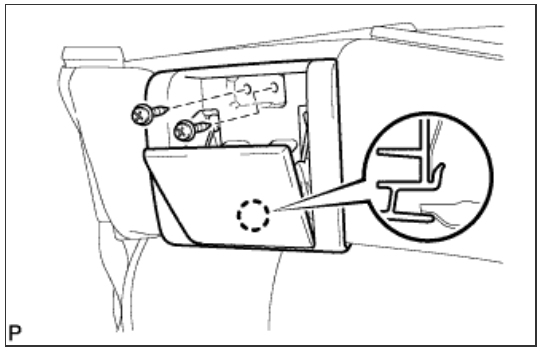

c. Detach the 2 cable clamps and disconnect the 2 cables.

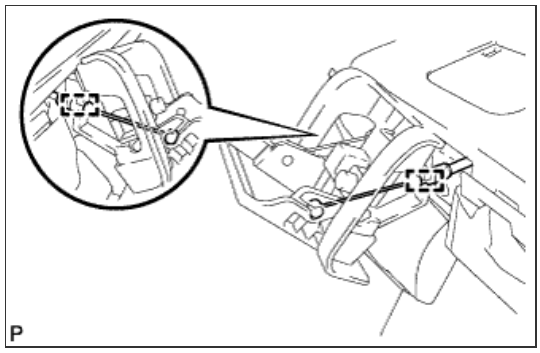


16. REMOVE REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Remove the nut and belt.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, it becomes disconnected when the nut is removed.

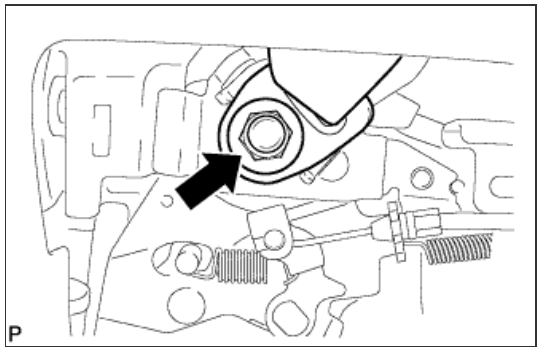


17. REMOVE REAR SEAT OUTER BELT SUB-ASSEMBLY (for RH Side)


a. Remove the nut and belt.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, it becomes disconnected when the nut is removed.

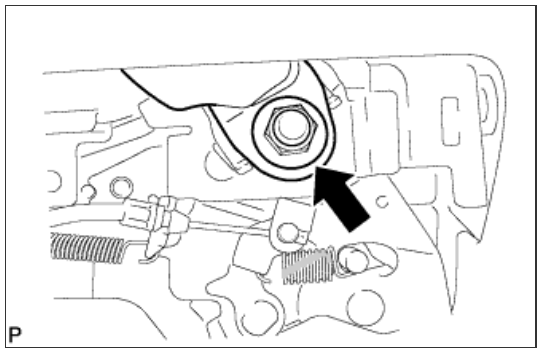


18. REMOVE REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

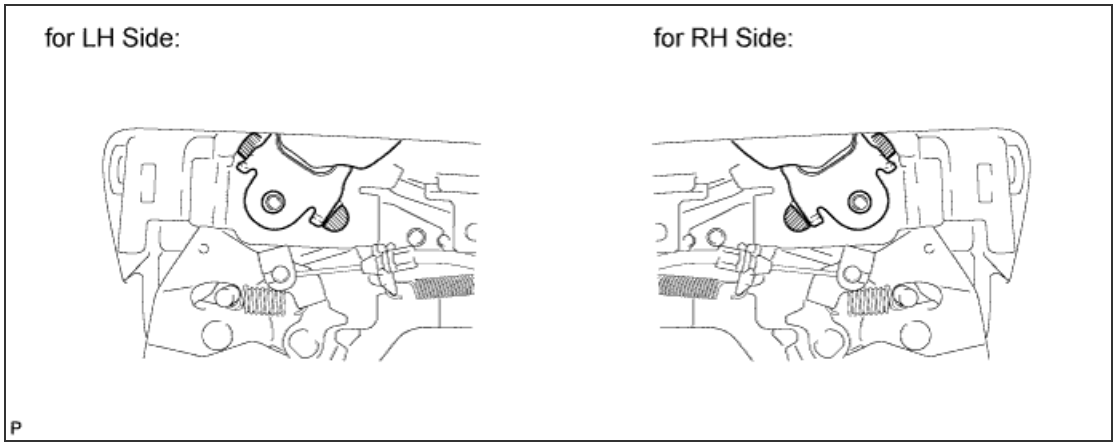

a. Remove the 2 belts.

19. REMOVE REAR SEAT CUSHION CARPET

a. Cut off the tack pins which fasten the seat cushion carpet to the seat cushion pad, and then remove the seat cushion carpet from the seat cushion pad.

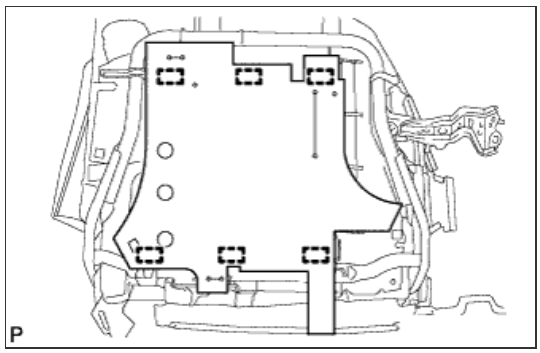


20. REMOVE SEAT CUSHION COVER WITH PAD

21. REMOVE NO. 3 SEAT CUSHION PAD LH

22. REMOVE NO. 3 SEAT CUSHION COVER SUB-ASSEMBLY LH


a. Remove the hog rings.

b. Detach the fastening tape and remove the seatback cover.

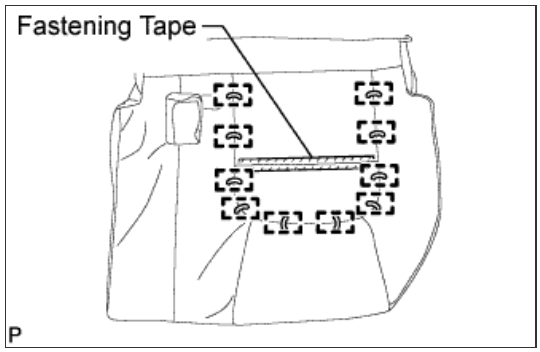


23. REMOVE NO. 2 SEAT STAY SUB-ASSEMBLY

a. Remove the bolt and seat stay.

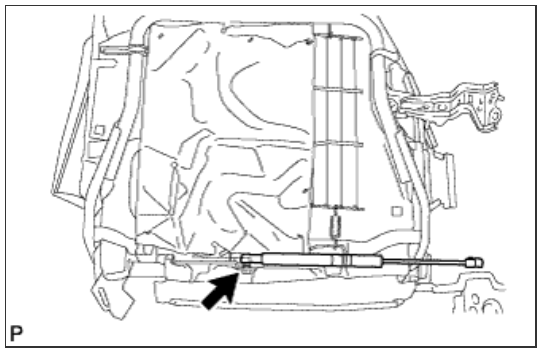


24. REMOVE NO. 3 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Detach the 2 cable clamps and disconnect the 2 cables.

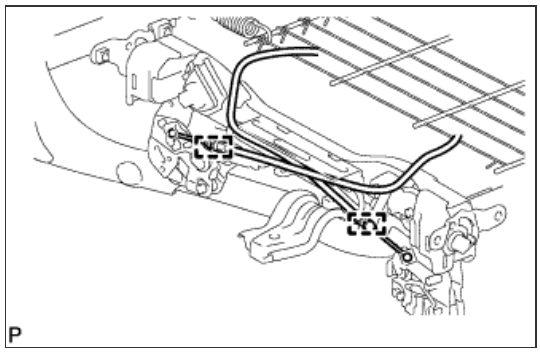


b. Detach the 2 clamps and remove the 2 cables.

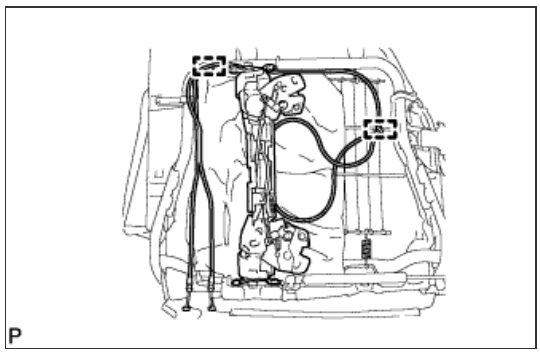


25. REMOVE REAR NO. 2 SEATBACK CUSHION

a. Remove the screw and seatback cushion.

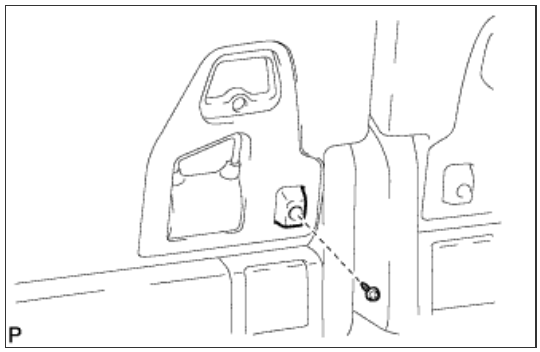


26. REMOVE REAR LOWER SEATBACK LOCK BEZEL

a. Detach the claws and clip, and then remove the seatback lock bezel.

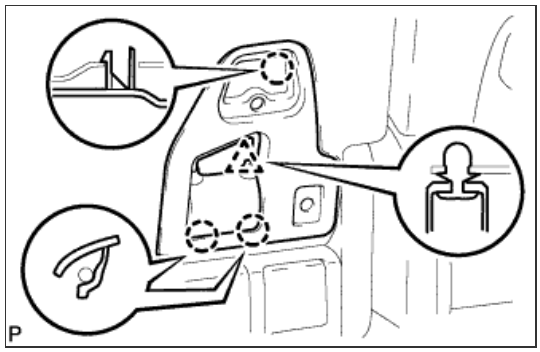


27. REMOVE REAR SEAT HINGE PAWL GUIDE

a. Detach the 5 claws and remove the guide.

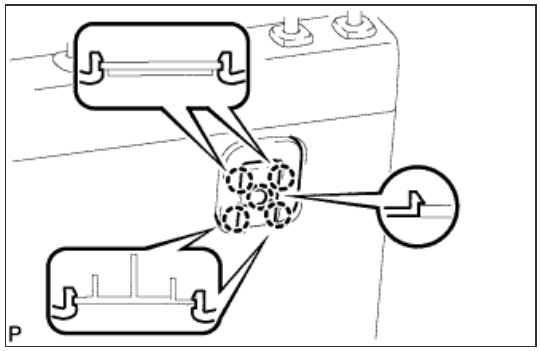

28. REMOVE REAR SEAT HINGE PAWL GUIDE

a. Remove the screw and guide.

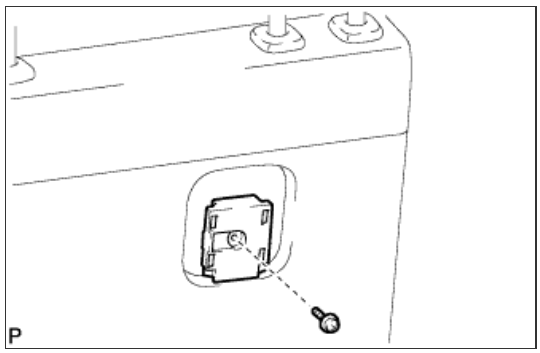


29. REMOVE REAR SEAT HEADREST ASSEMBLY (w/ Folding Headrest)

a. While releasing the lock inside the headrest support with a screwdriver, remove the headrest.

HINT:


Tape the screwdriver tip before use.

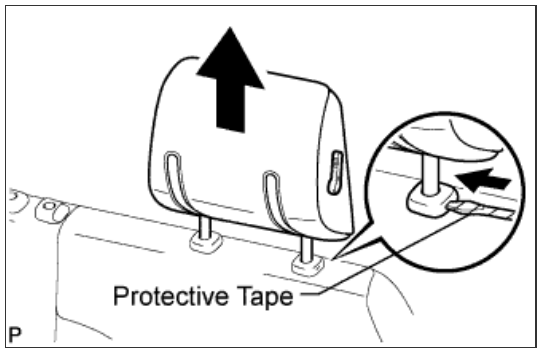

30. REMOVE REAR SEAT HEADREST ASSEMBLY (w/o Folding Headrest)

31. REMOVE REAR SEAT HEADREST HANDLE


a. Remove the snap ring and headrest handle.

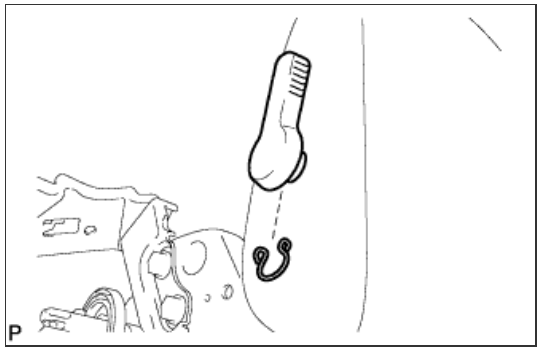


32. REMOVE SEATBACK COVER WITH PAD

a. Side

i. pen the fastener.

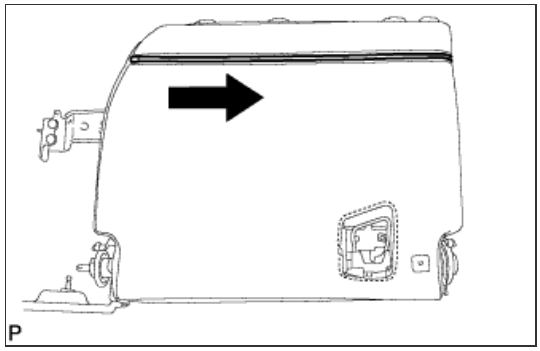


ii. Detach the 2 hooks.

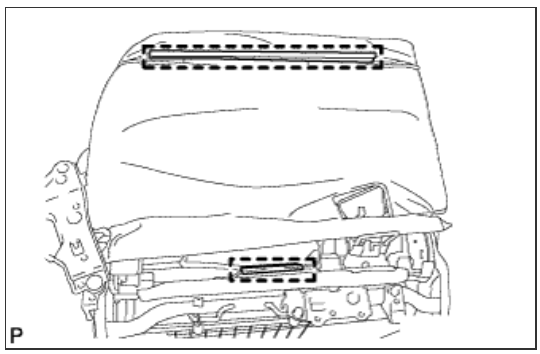


iii. Pull out the center headrest storage bag.

iv. Remove the rear seat protector.

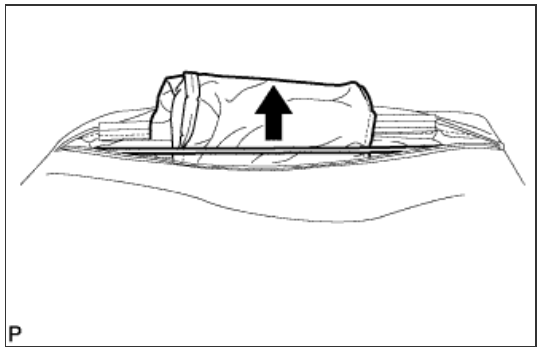


v. Detach the 8 claws and remove the 4 headrest supports.

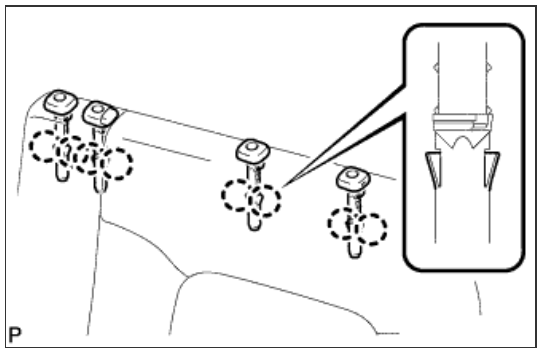


b. RH Side

i. Detach the hook.


ii. Remove the rear seat protector.

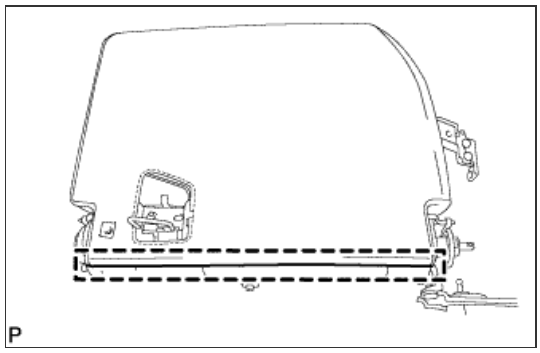

iii. Detach the 4 claws and remove the 2 headrest supports.

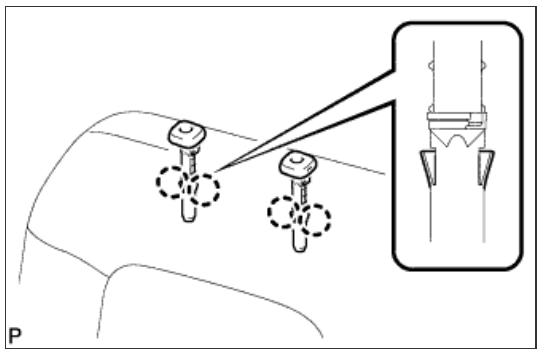


c. Remove the hog ring and seatback cover with pad.

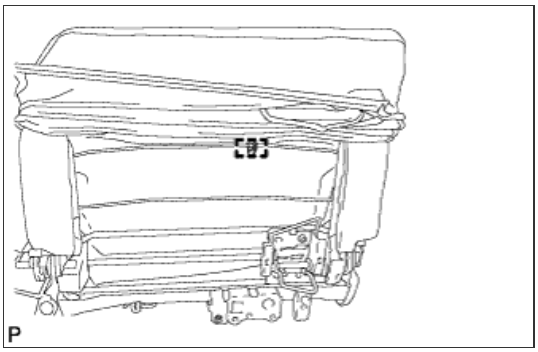

33. REMOVE NO. 3 SEATBACK COVER SUB-ASSEMBLY LH


a. Remove the hog rings and seatback cover.

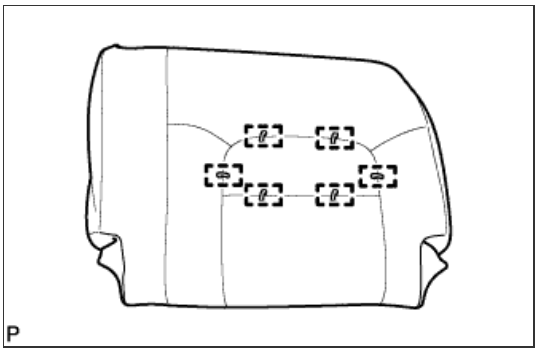

34. REMOVE REAR INNER SEAT RECLINING COVER LH

a. Remove the screw.

b. Detach the claw and remove the cover.

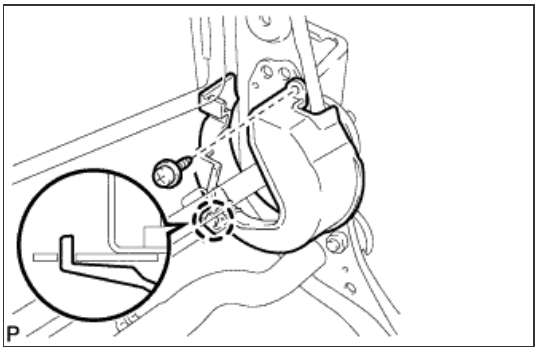

35. REMOVE REAR INNER SEAT RECLINING COVER RH


a. Remove the screw.

b. Detach the claw and remove the cover.

36. REMOVE REAR SEAT LOCK CONTROL CABLE


a. Detach the 2 cable clamps and disconnect the 2 cables.

b. Detach the 2 clamps and remove the lock control cable.

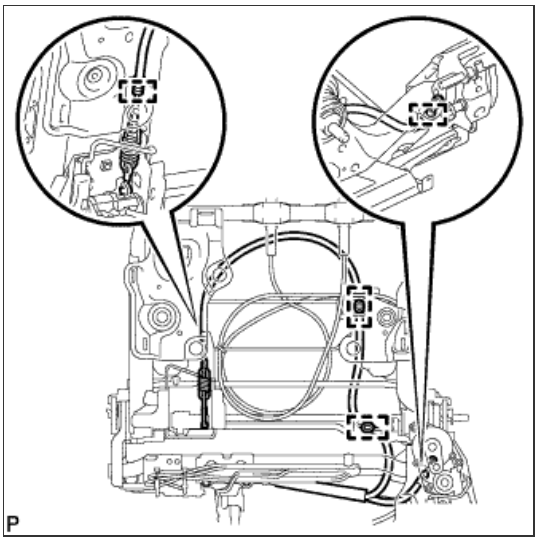

37. REMOVE REAR SEATBACK LOCK STRIKER ASSEMBLY LH

a. Remove the 2 nuts and lock striker.

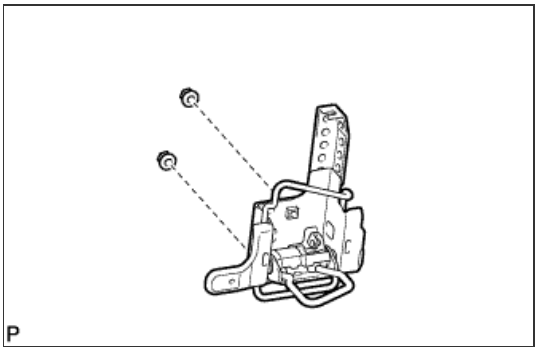

38. REMOVE REAR NO. 2 SEATBACK COVER LH

a. Detach the claws and remove the cover.

39. REMOVE REAR SEATBACK LOCK STRIKER COVER LH

a. Detach the 2 clamps and remove the cover.

40. REMOVE NO. 2 SEAT RECLINING RELEASE HANDLE SUB-ASSEMBLY

a. Remove the bolt and release handle.

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE SEAT ADJUSTER BOLT COVER


a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

	rotective Tape

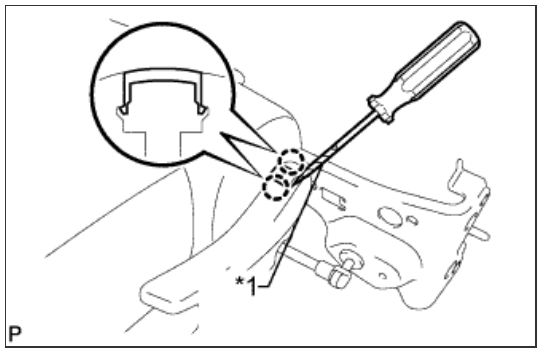

2. REMOVE NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

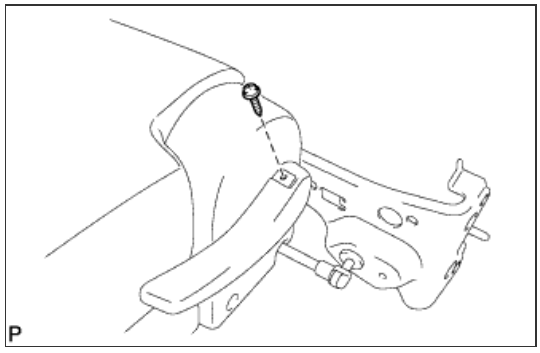

3. REMOVE RECLINING ADJUSTER COVER LH

a. Remove the screw.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

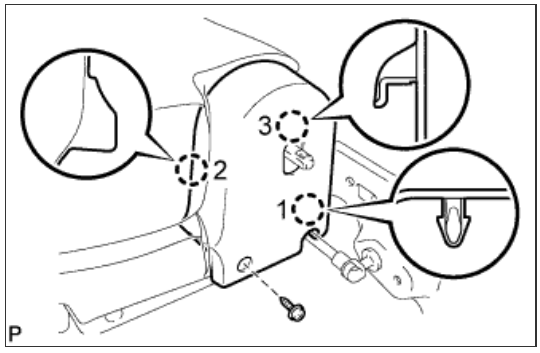

4. REMOVE RECLINING ADJUSTER COVER RH

a. Remove the screw.

b. Detach the 5 claws in the order shown in the illustration, and then remove the cover.

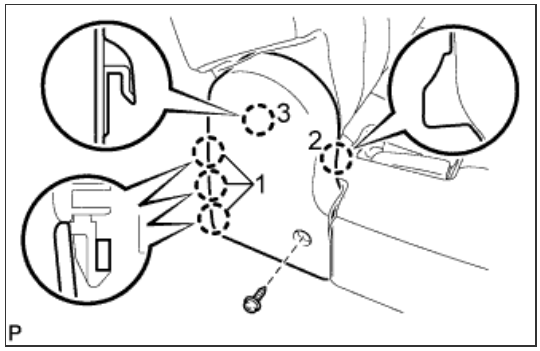


5. REMOVE REAR SEAT REAR BRACKET COVER REAR

a. Detach the 2 claws and cover.


6. REMOVE REAR NO. 3 SEAT LEG COVER LH

a. Using a screwdriver, remove the spring of the seat stay ball-joint.

b. Disconnect the seat stay.

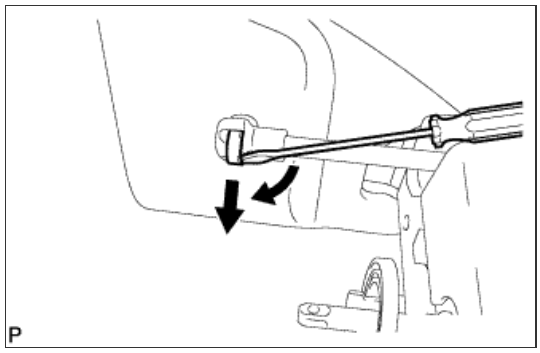


c. Remove the 2 screws and cover.

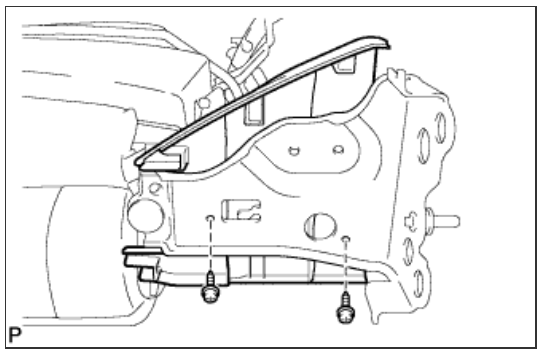


7. REMOVE NO. 2 SEAT LEG COVER NO. 2

a. Remove the screw and seat leg cover.

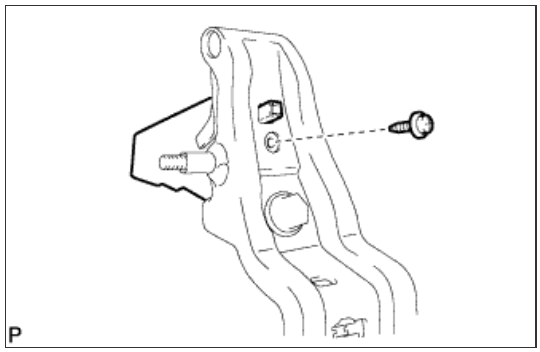


8. REMOVE 3RD SEAT LINK SUB-ASSEMBLY LH

a. Remove the bolt, nut and seat link.

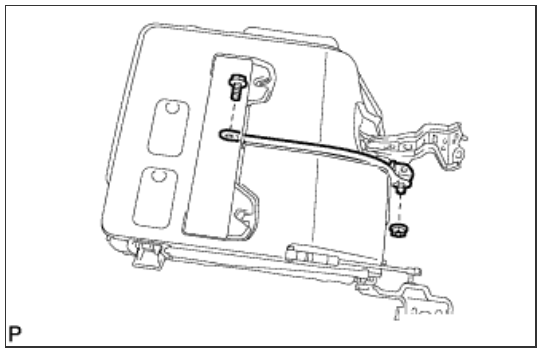


9. REMOVE 3RD SEAT CUSHION LOCK COVER

a. Detach the 4 claws and remove the 2 covers.

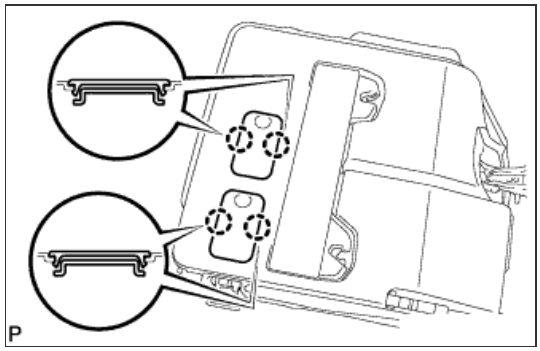


10. REMOVE REAR SEAT CUSHION UNDER COVER LH

a. Detach the 16 claws.

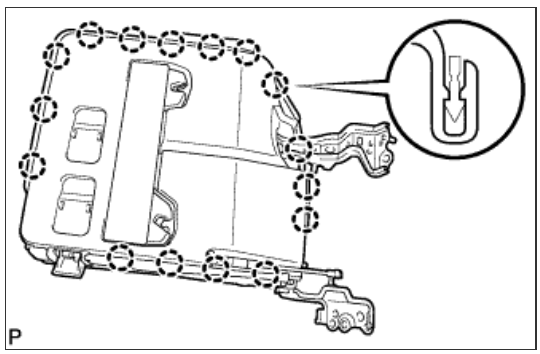


b. Remove the 8 screws and cover.

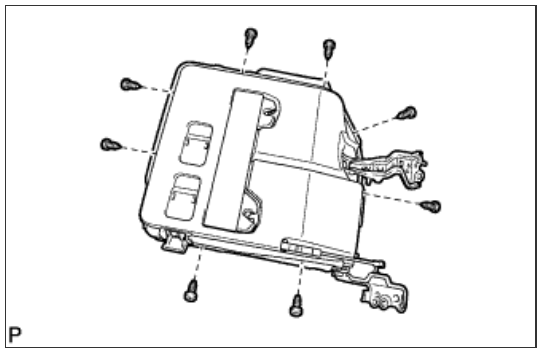

11. REMOVE NO. 3 SEAT FRONT BRACKET COVER LH


a. Detach the 4 claws and remove the cover.

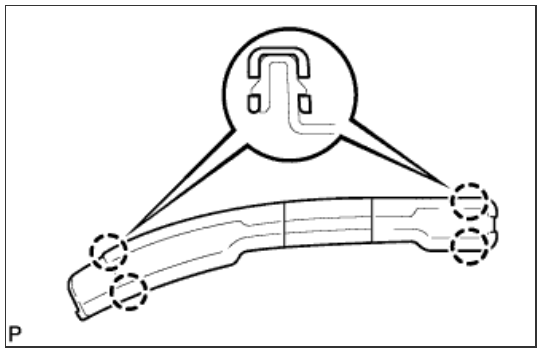

12. REMOVE NO. 3 SEAT LEG COVER NO. 2

a. Remove the 2 screws.


b. Detach the 4 claws and remove the cover.

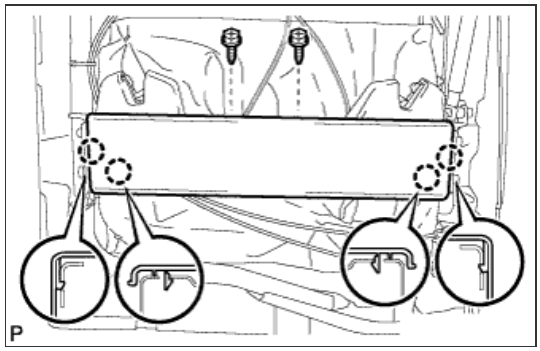

13. REMOVE REAR SEAT LOCK COVER LH

a. Remove the 2 screws.

b. Detach the 2 clamps and remove the 2 covers.

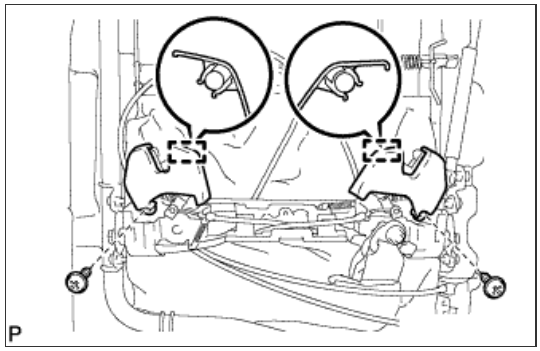

14. REMOVE SEAT STAND FRAME CAP


a. Using a screwdriver, detach the 2 claws and remove the stand frame cap.

HINT:

Tape the screwdriver tip before use.

Text in Illustration


	rotective Tape

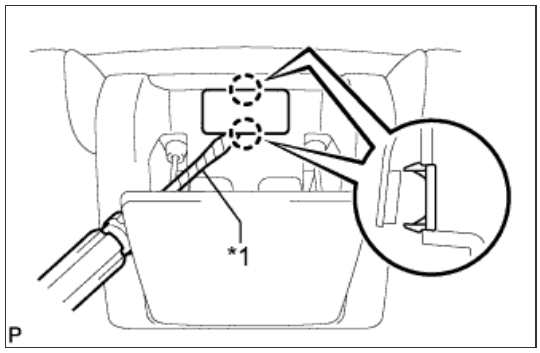


15. REMOVE SEAT CUSHION LOCK RELEASE LEVER ASSEMBLY LH

a. Remove the screw.

b. Detach the claw and remove the release lever.

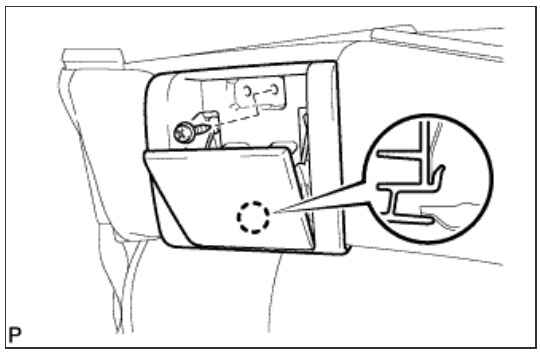

c. Detach the cable clamp and disconnect the cable.

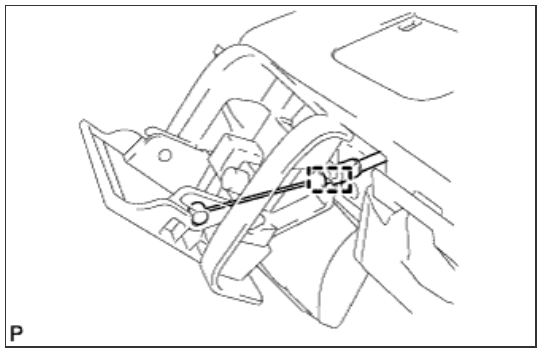


16. REMOVE REAR CENTER SEAT INNER BELT LH (w/ Rear Center Seat Headrest)

a. Remove the nut and belt.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, it becomes disconnected when the nut is removed.

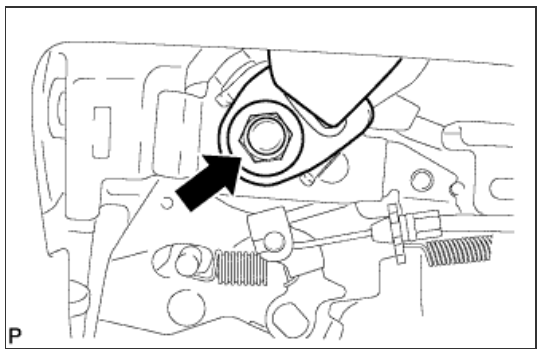


17. REMOVE REAR CENTER SEAT INNER BELT RH (w/ Rear Center Seat Headrest)

a. Remove the nut and belt.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, it becomes disconnected when the nut is removed.

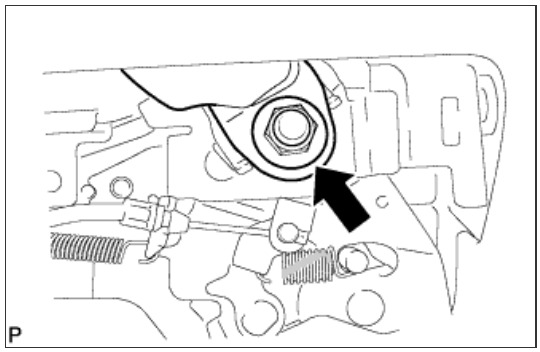


18. REMOVE REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Remove the nut and belt.


HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, it becomes disconnected when the nut is removed.

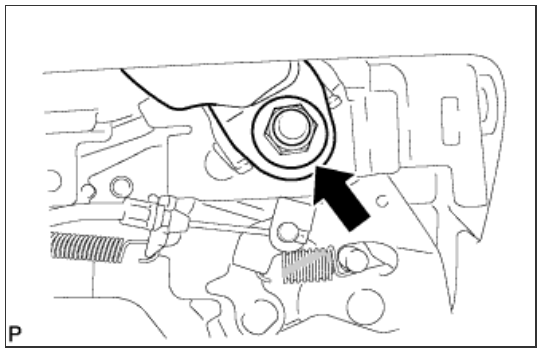


19. REMOVE REAR SEAT CUSHION CARPET

a. Cut off the tack pins which fasten the seat cushion carpet to the seat cushion pad, and then remove the seat cushion carpet from the seat cushion pad.

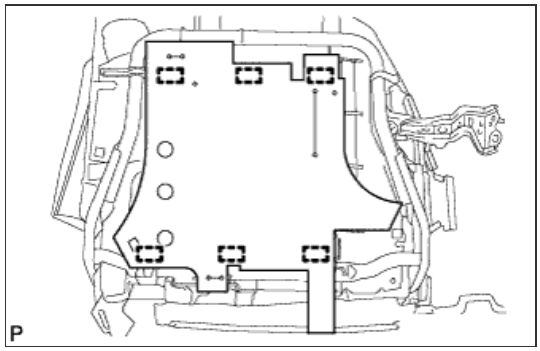


20. REMOVE CAP

a. Detach the 4 claws and remove the 2 caps.

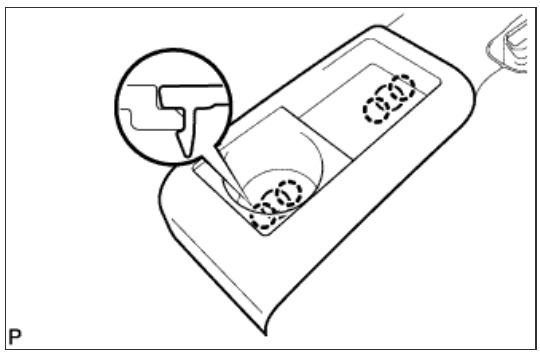

21. REMOVE NO. 2 BOTTLE HOLDER

a. Remove the 2 screws and No. 2 bottle holder.

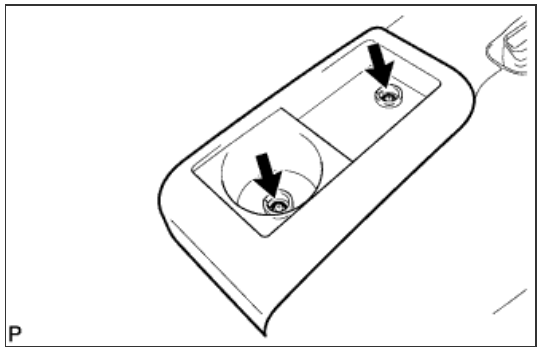

22. REMOVE SEAT CUSHION COVER WITH PAD

23. REMOVE NO. 3 SEAT CUSHION PAD LH

24. REMOVE NO. 3 SEAT CUSHION COVER SUB-ASSEMBLY LH


a. w/o Bottle Holder:

i. Remove the hog rings.

ii. Detach the fastening tape and remove the seat cushion cover.

Text in Illustration

	astening Tape

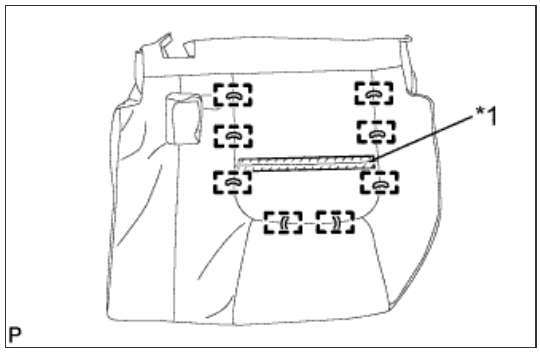


b. w/ Bottle Holder:

i. Remove the hog rings.

ii. Detach the 3 fastening tapes and remove the seat cushion cover.


Text in Illustration

	astening Tape

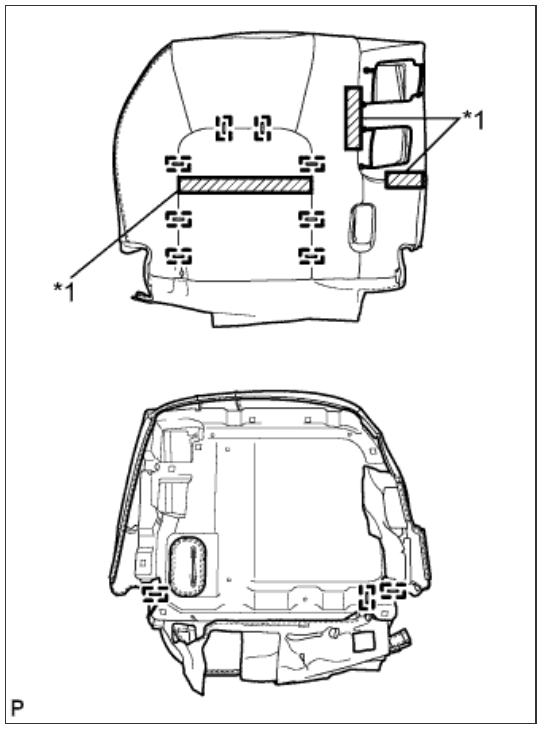


25. REMOVE NO. 2 SEAT STAY SUB-ASSEMBLY

a. Remove the bolt and seat stay.

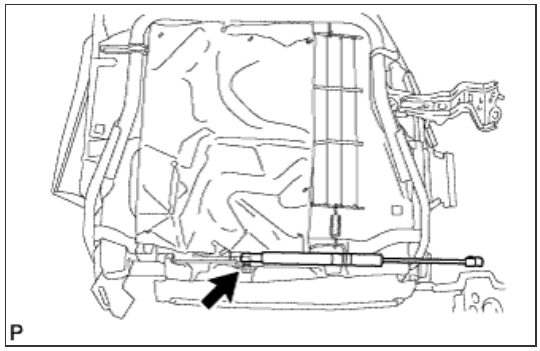


26. REMOVE NO. 3 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Detach the 2 cable clamps and disconnect the 2 cables.

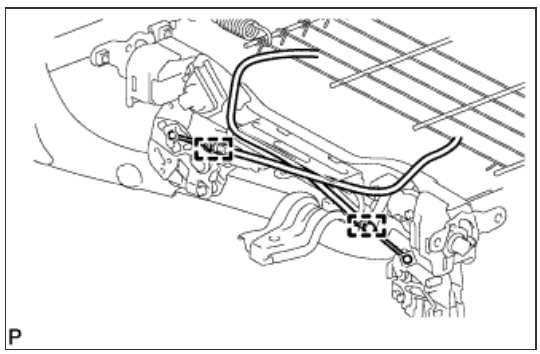


b. Detach the 2 clamps and remove the cable.

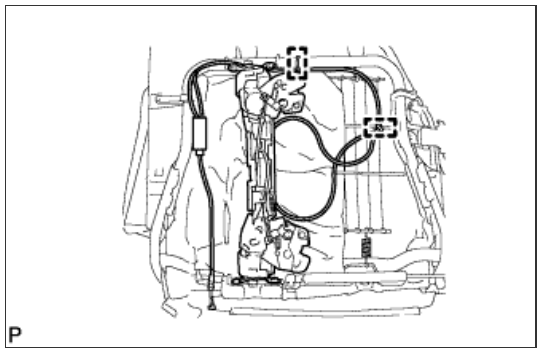


27. REMOVE REAR NO. 2 SEATBACK CUSHION

a. Remove the screw and seatback cushion.

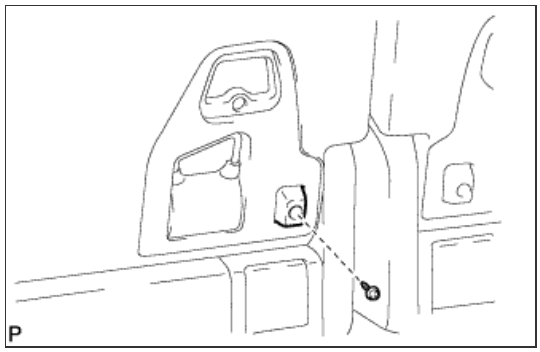


28. REMOVE REAR LOWER SEATBACK LOCK BE EL

a. Detach the 3 claws and clip, and then remove the seatback lock bezel.

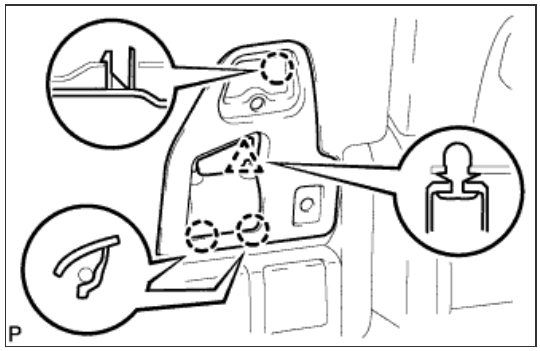


29. REMOVE REAR SEAT HINGE PAWL GUIDE

a. Detach the 5 claws and remove the guide.

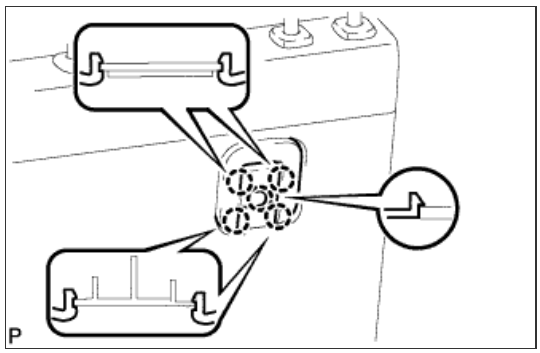

30. REMOVE REAR SEAT HINGE PAWL GUIDE

a. Remove the screw and guide.

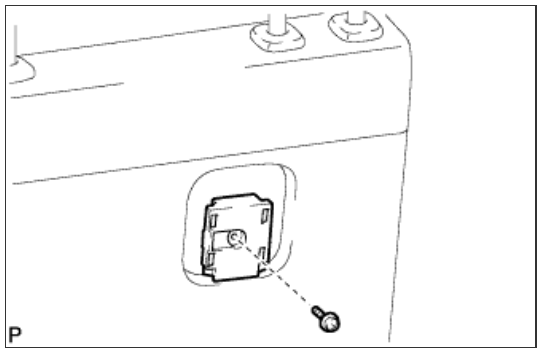

31. REMOVE REAR SEAT HEADREST ASSEMBLY (w/ Folding Headrest)


a. While releasing the lock inside the headrest support with a screwdriver, remove the headrest.

HINT:

Tape the screwdriver tip before use.

Text in Illustration


	rotective Tape

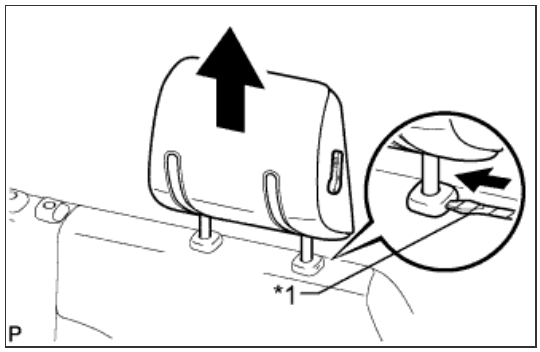

32. REMOVE REAR SEAT HEADREST ASSEMBLY (w/o Folding Headrest)

33. REMOVE REAR SEAT HEADREST HANDLE

a. Remove the snap ring and headrest handle.

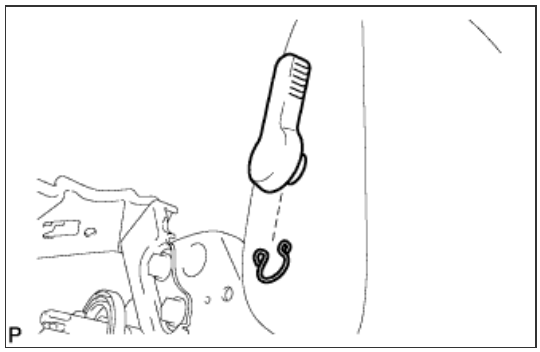


34. REMOVE SEATBACK COVER WITH PAD


a. Side:

i. w/ Rear Center Headrest:


1. Open the fastener.

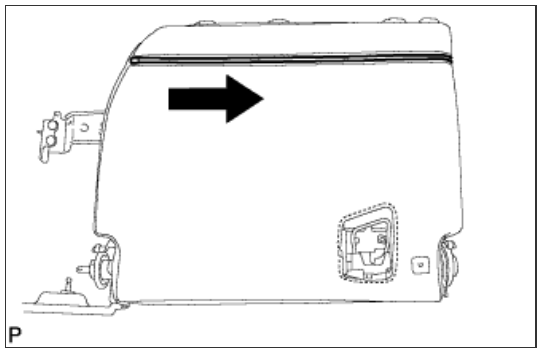

2. Detach the 2 hooks.

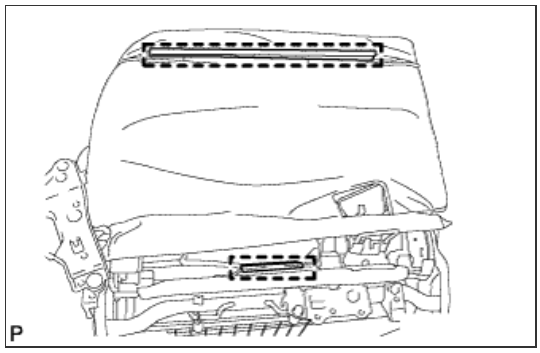


3. Pull out the center headrest storage bag.
4. Remove the rear seat protector.

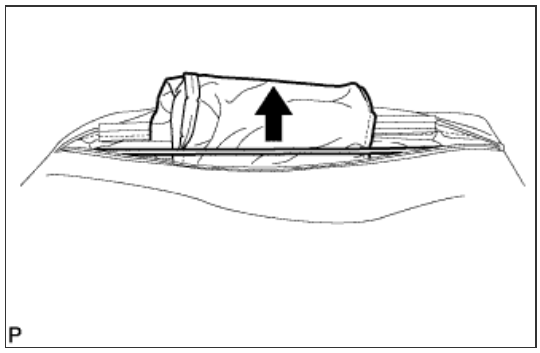


5. Detach the 8 claws and remove the 4 headrest supports.


ii. w/o Rear Center Headrest:

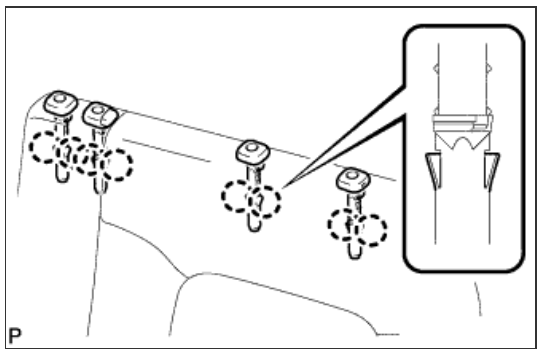

1. Detach the hook.
2. Remove the rear seat protector.

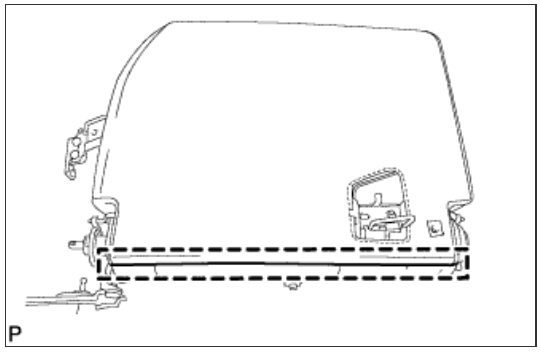


3. Detach the 4 claws and remove the 2 headrest supports.

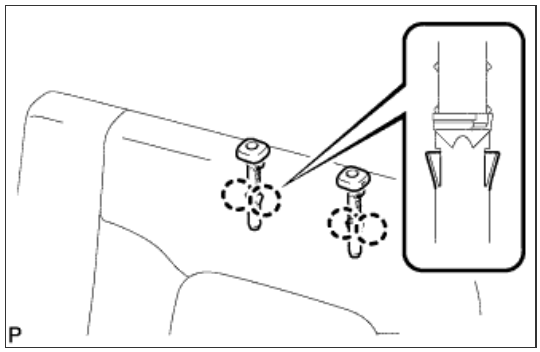


b. RH Side:

i. Detach the hook.


ii. Remove the rear seat protector.

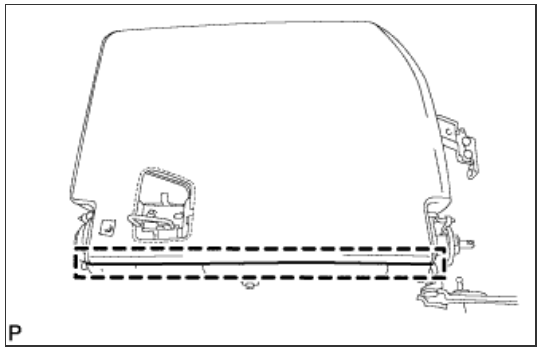

iii. Detach the 4 claws and remove the 2 headrest supports.

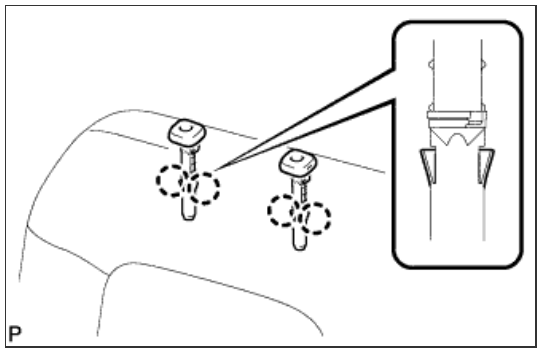


c. Remove the hog ring and seatback cover with pad.

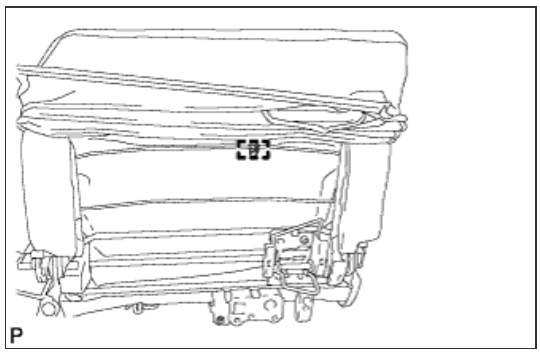

35. REMOVE NO. 3 SEATBACK COVER SUB-ASSEMBLY LH


a. Remove the hog rings and seatback cover.

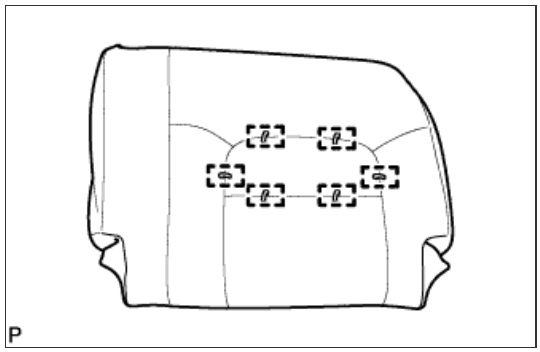

36. REMOVE REAR INNER SEAT RECLINING COVER LH

a. Remove the screw.

b. Detach the claw and remove the cover.

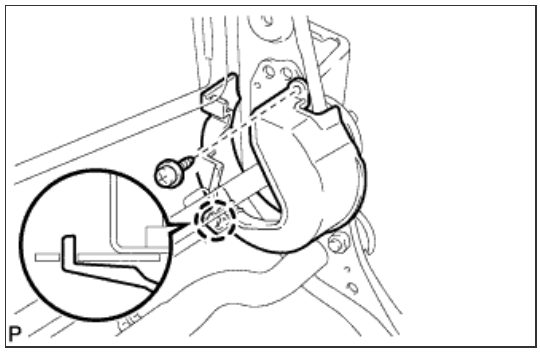

37. REMOVE REAR INNER SEAT RECLINING COVER RH


a. Remove the screw.

b. Detach the claw and remove the cover.

38. REMOVE REAR SEAT LOCK CONTROL CABLE


a. Detach the 2 cable clamps and disconnect the 2 cables.

b. Detach the 2 clamps and remove the lock control cable.

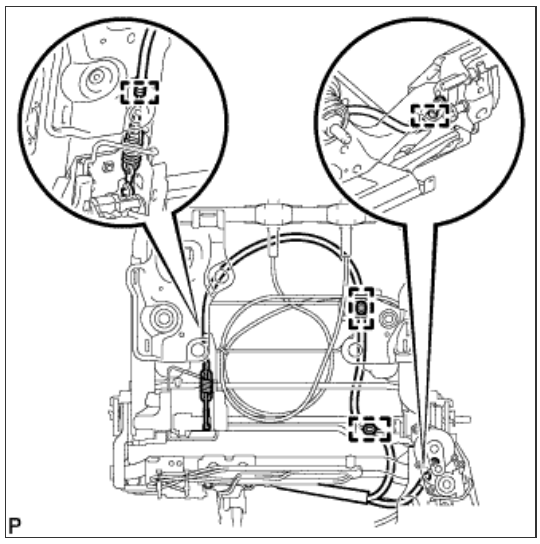

39. REMOVE REAR SEATBACK LOCK STRIKER ASSEMBLY LH

a. Remove the 2 nuts and lock striker.

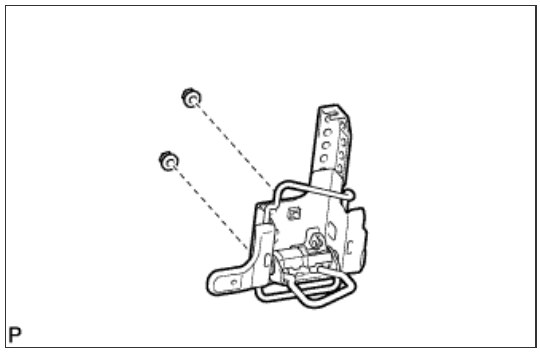

40. REMOVE REAR NO. 2 SEATBACK COVER LH

a. Detach the 3 claws and remove the cover.

41. REMOVE REAR SEATBACK LOCK STRIKER COVER LH

a. Detach the 2 clamps and remove the cover.

42. REMOVE NO. 2 SEAT RECLINING RELEASE HANDLE SUB-ASSEMBLY

a. Remove the bolt and release handle.

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE SEAT ADJUSTER BOLT COVER


a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

	rotective Tape

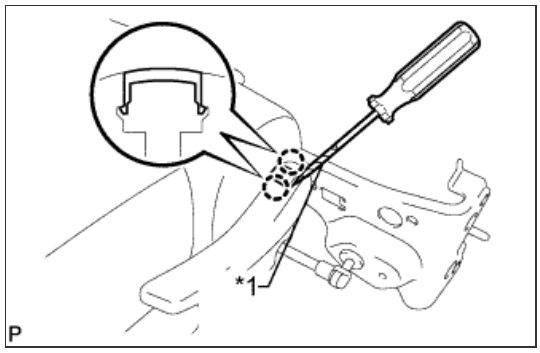

2. REMOVE NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

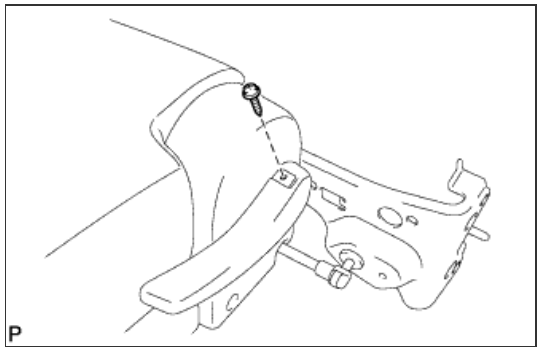

3. REMOVE RECLINING ADJUSTER COVER LH

a. Remove the screw.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

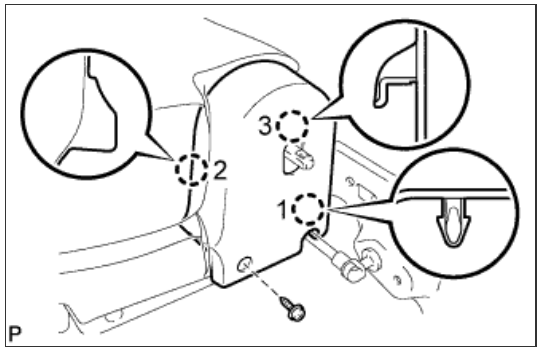

4. REMOVE RECLINING ADJUSTER COVER RH

a. Remove the screw.

b. Detach the 5 claws in the order shown in the illustration, and then remove the cover.

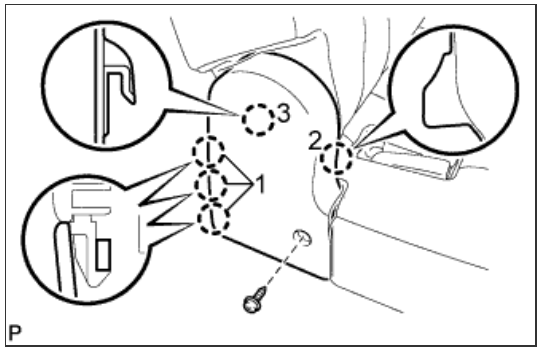


5. REMOVE REAR SEAT REAR BRACKET COVER REAR

a. Detach the 2 claws and cover.


6. REMOVE REAR NO. 3 SEAT LEG COVER LH

a. Using a screwdriver, remove the spring of the seat stay ball-joint.

b. Disconnect the seat stay.

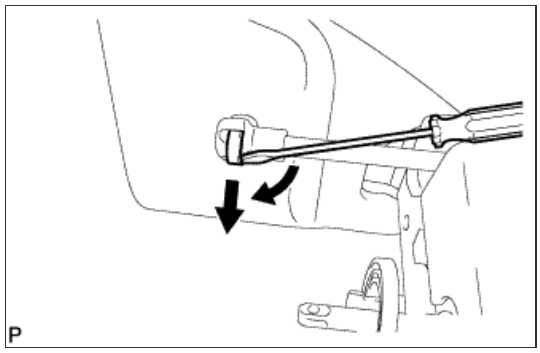


c. Remove the 2 screws and cover.

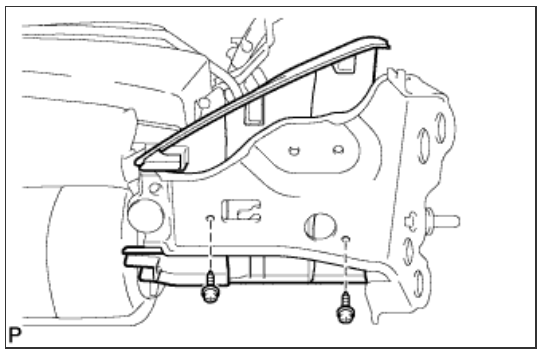


7. REMOVE NO. 2 SEAT LEG COVER NO. 2

a. Remove the screw and seat leg cover.

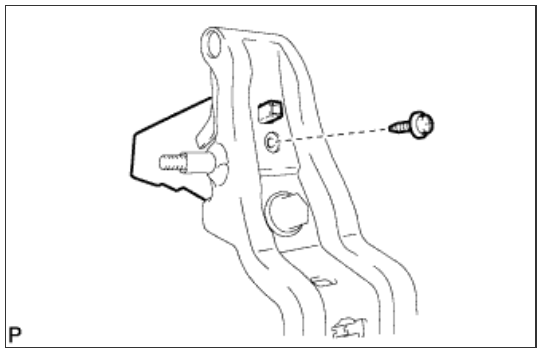


8. REMOVE 3RD SEAT LINK SUB-ASSEMBLY LH

a. Remove the bolt, nut and seat link.

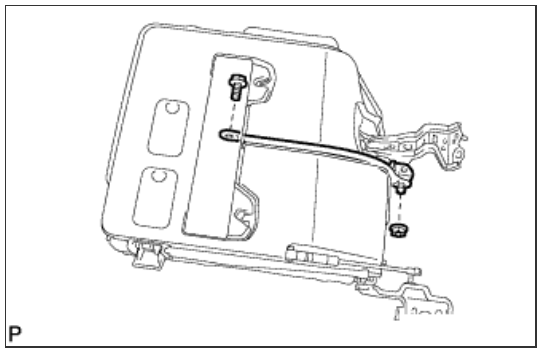


9. REMOVE 3RD SEAT CUSHION LOCK COVER

a. Detach the 4 claws and remove the 2 covers.

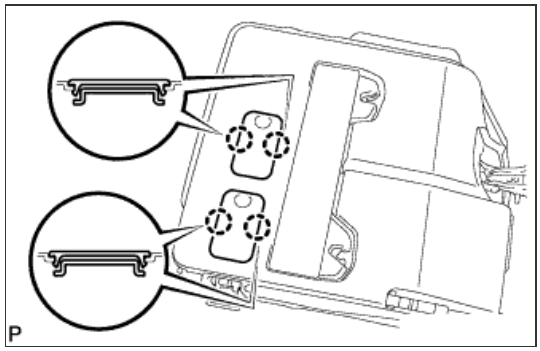


10. REMOVE REAR SEAT CUSHION UNDER COVER LH

a. Detach the 16 claws.

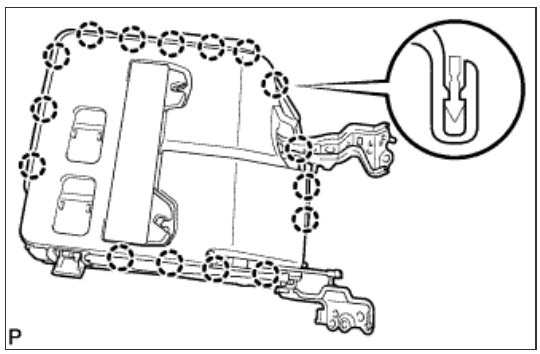


b. Remove the screws and cover.

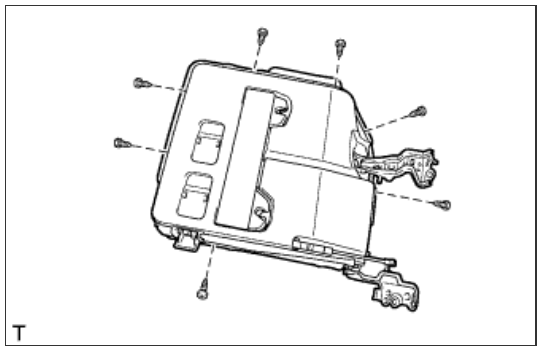

11. REMOVE NO. 3 SEAT FRONT BRACKET COVER LH


a. Detach the 4 claws and remove the cover.

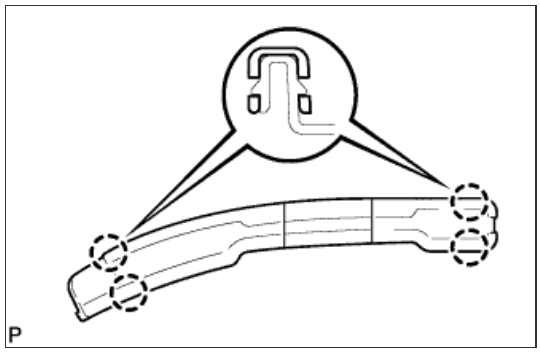

12. REMOVE NO. 3 SEAT LEG COVER NO. 2

a. Remove the 2 screws.


b. Detach the 4 claws and remove the cover.

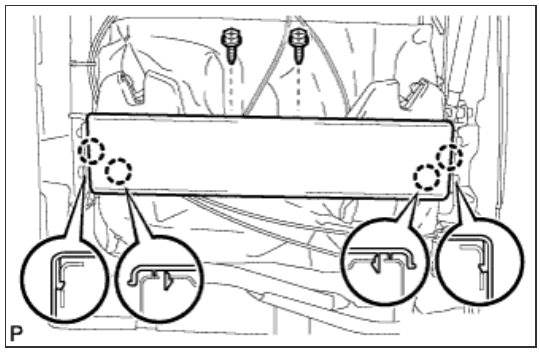

13. REMOVE REAR SEAT LOCK COVER LH

a. Remove the 2 screws.

b. Detach the 2 clamps and remove the 2 covers.

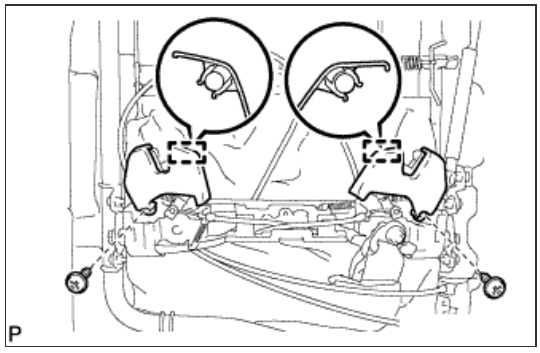

14. REMOVE SEAT STAND FRAME CAP


a. Using a screwdriver, detach the 2 claws and remove the stand frame cap.

HINT:

Tape the screwdriver tip before use.

Text in Illustration


	rotective Tape

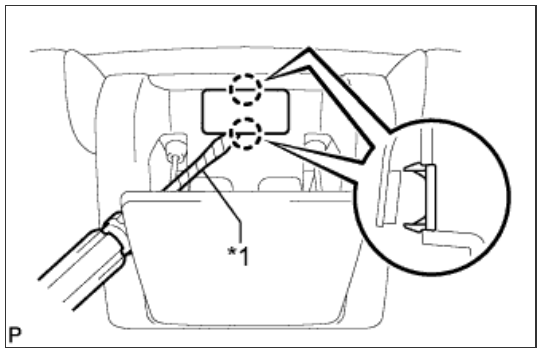


15. REMOVE SEAT CUSHION LOCK RELEASE LEVER ASSEMBLY LH

a. Remove the screw.

b. Detach the claw and remove the release lever.

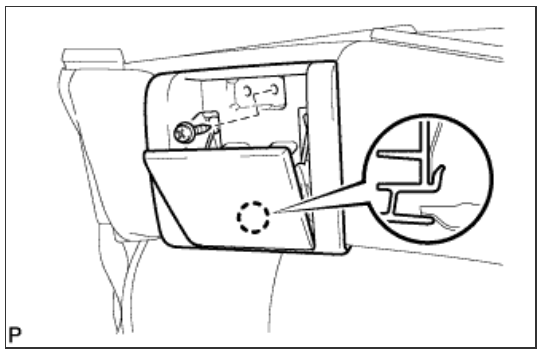

c. Detach the cable clamp and disconnect the cable.

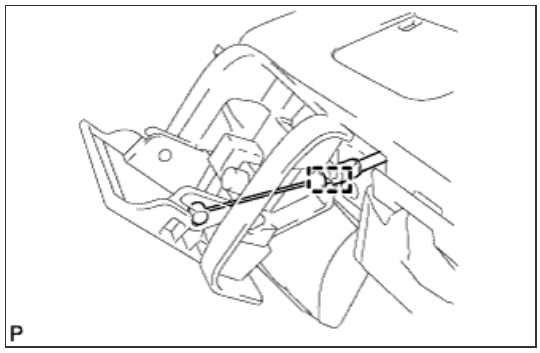


16. REMOVE REAR CENTER SEAT INNER BELT LH (w/ Rear Center Seat Headrest)

a. Remove the nut and belt.


HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, it becomes disconnected when the nut is removed.

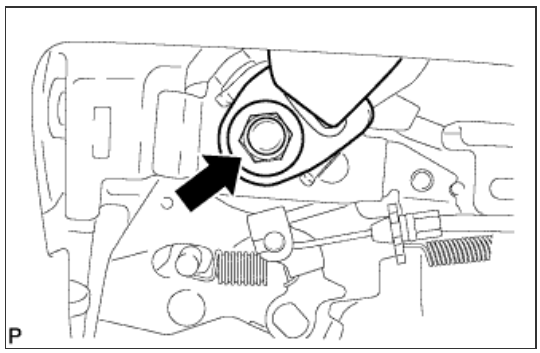

17. REMOVE REAR CENTER SEAT INNER BELT RH (w/ Rear Center Seat Headrest)

a. Remove the belt.

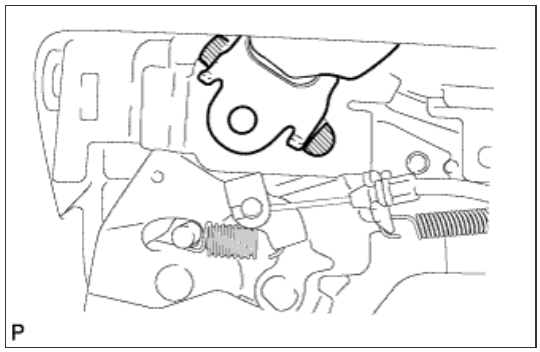


18. REMOVE REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Remove the nut and belt.


HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, it becomes disconnected when the nut is removed.

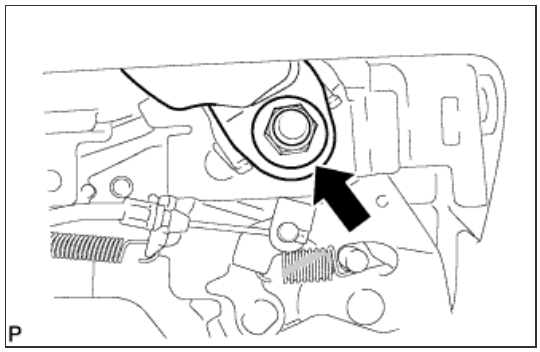


19. REMOVE REAR SEAT CUSHION CARPET

a. Cut off the tack pins which fasten the seat cushion carpet to the seat cushion pad, and then remove the seat cushion carpet from the seat cushion pad.

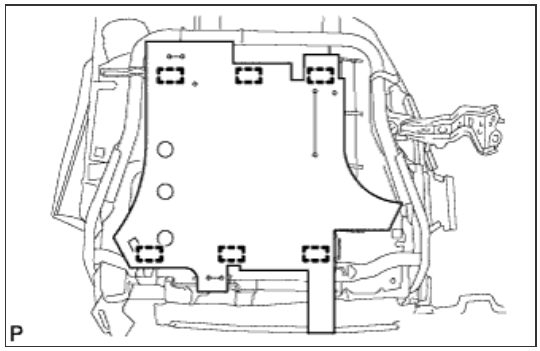


20. REMOVE CAP

a. Detach the 4 claws and remove the 2 caps.

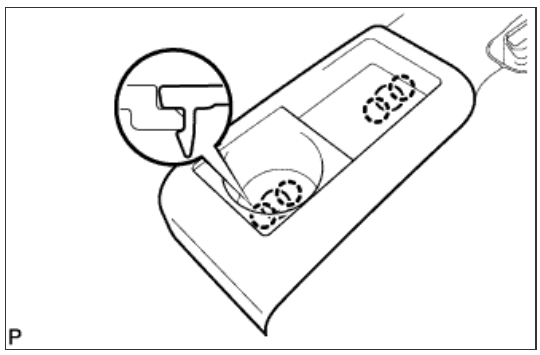

21. REMOVE NO. 2 BOTTLE HOLDER

a. Remove the 2 screws and No. 2 bottle holder.

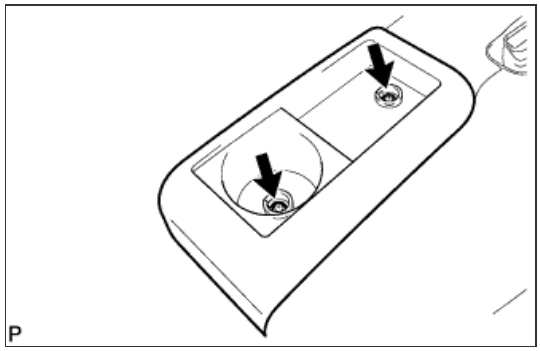

22. REMOVE SEAT CUSHION COVER WITH PAD

23. REMOVE NO. 3 SEAT CUSHION PAD LH

24. REMOVE NO. 3 SEAT CUSHION COVER SUB-ASSEMBLY LH


a. w/o Bottle Holder:

i. Remove the hog rings.

ii. Detach the fastening tape and remove the seat cushion cover.

Text in Illustration

	astening Tape

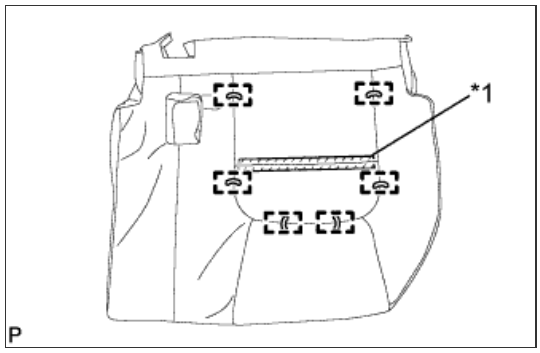


b. w/ Bottle Holder:

i. Remove the hog rings.

ii. Detach the 3 fastening tapes and remove the seat cushion cover.


Text in Illustration

	astening Tape

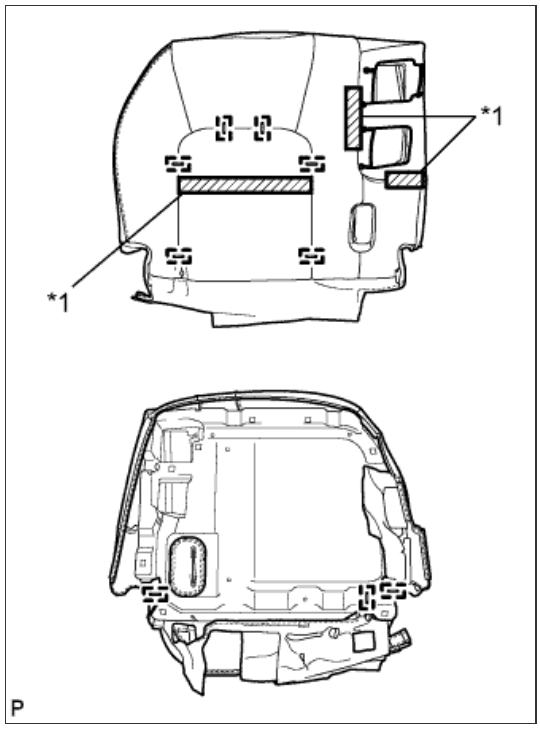


25. REMOVE NO. 2 SEAT STAY SUB-ASSEMBLY

a. Remove the bolt and seat stay.

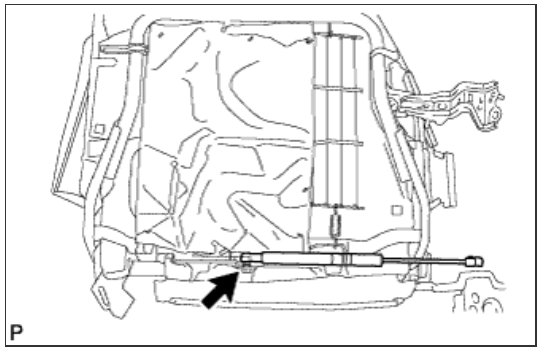


26. REMOVE NO. 3 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Detach the 2 cable clamps and disconnect the 2 cables.

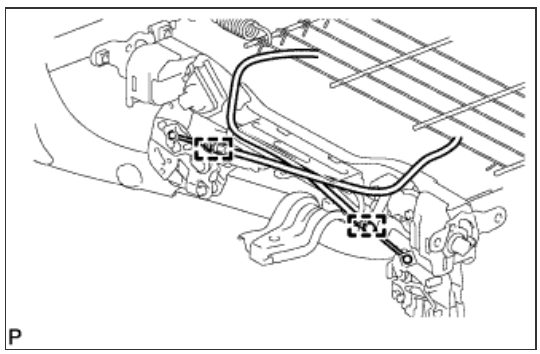


b. Detach the 2 clamps and remove the cable.

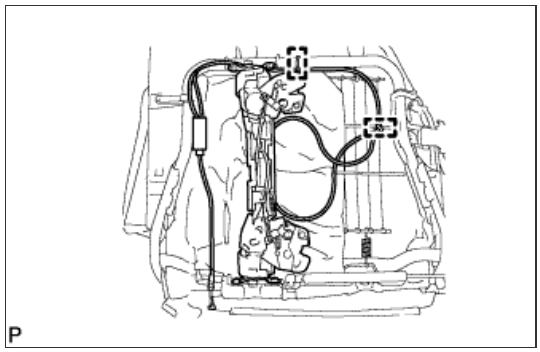


27. REMOVE REAR NO. 2 SEATBACK CUSHION

a. Remove the screw and seatback cushion.

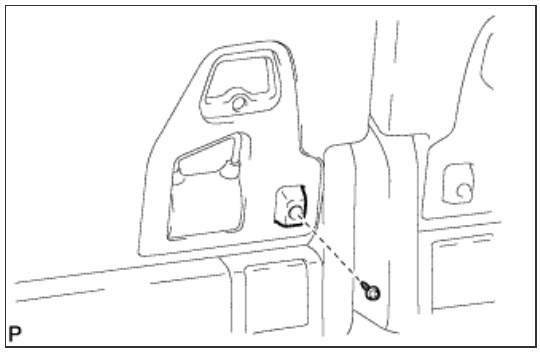


28. REMOVE REAR LOWER SEATBACK LOCK BE EL

a. Detach the 3 claws and clip, and then remove the seatback lock bezel.

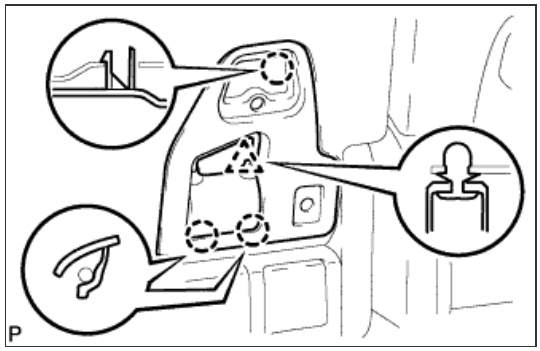


29. REMOVE REAR SEAT HINGE PAWL GUIDE

a. Detach the 5 claws and remove the guide.

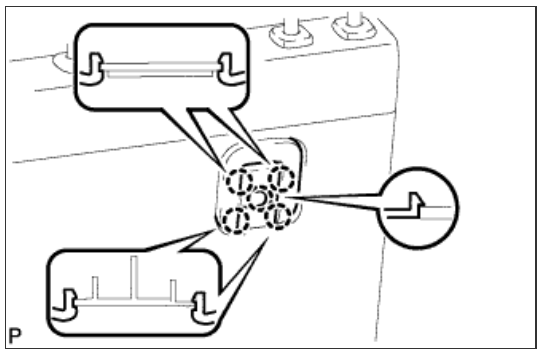

30. REMOVE REAR SEAT HINGE PAWL GUIDE

a. Remove the screw and guide.

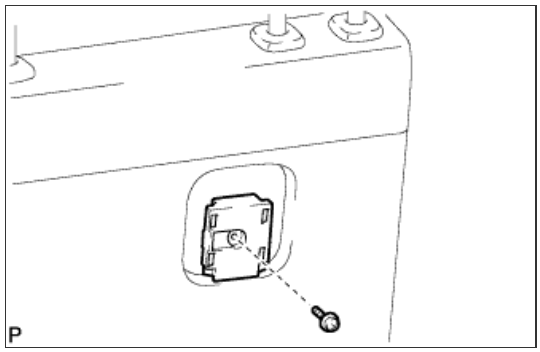

31. REMOVE REAR SEAT HEADREST ASSEMBLY (w/ Folding Headrest)


a. While releasing the lock inside the headrest support with a screwdriver, remove the headrest.

HINT:

Tape the screwdriver tip before use.

Text in Illustration


	rotective Tape

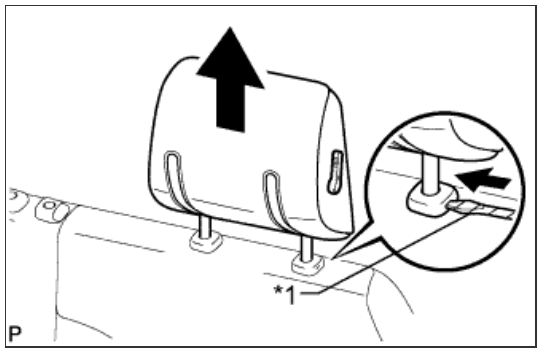

32. REMOVE REAR SEAT HEADREST ASSEMBLY (w/o Folding Headrest)

33. REMOVE REAR SEAT HEADREST HANDLE

a. Remove the snap ring and headrest handle.

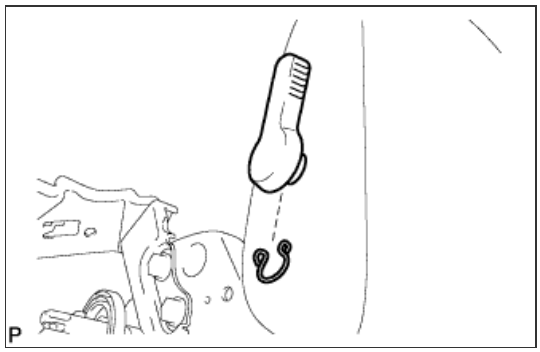


34. REMOVE SEATBACK COVER WITH PAD


a. Side:

i. w/ Rear Center Headrest:


1. Open the fastener.

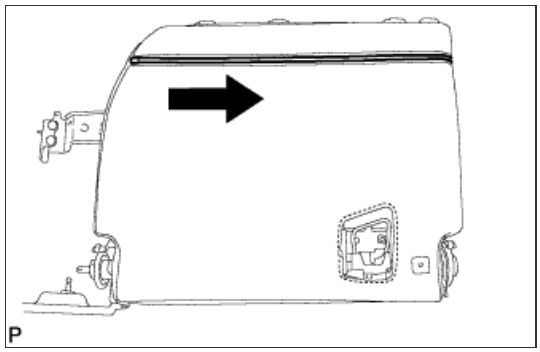

2. Detach the 2 hooks.

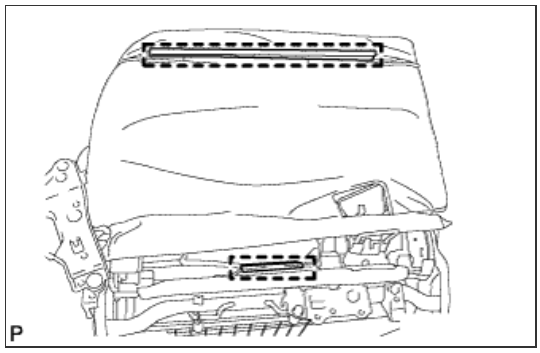


3. Pull out the center headrest storage bag.
4. Remove the rear seat protector.

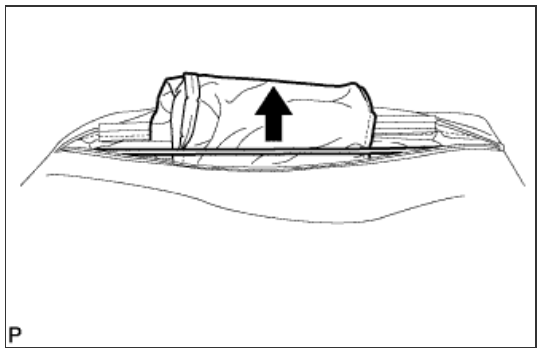


5. Detach the claws and remove the 4 headrest supports.


ii. w/o Rear Center Headrest:

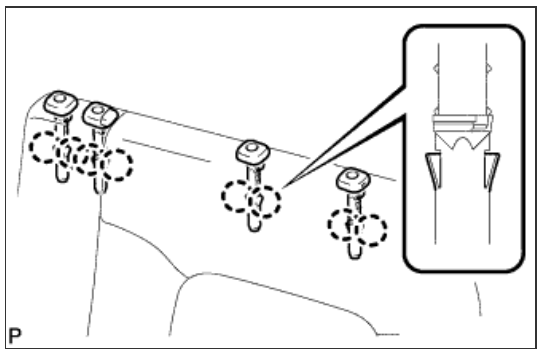

1. Detach the hook.
2. Remove the rear seat protector.

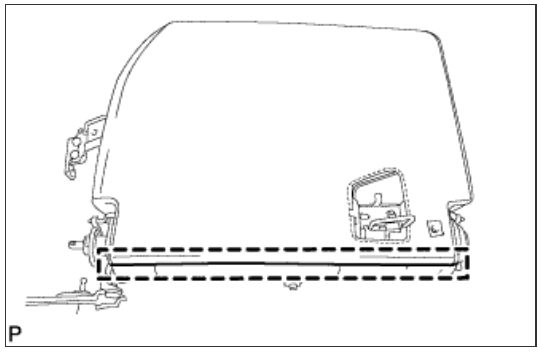


3. Detach the 4 claws and remove the 2 headrest supports.

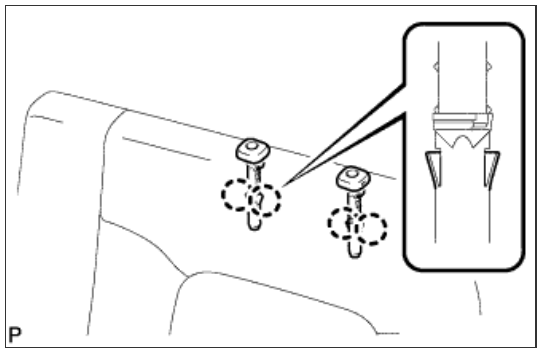


b. RH Side:

i. Detach the hook.


ii. Remove the rear seat protector.

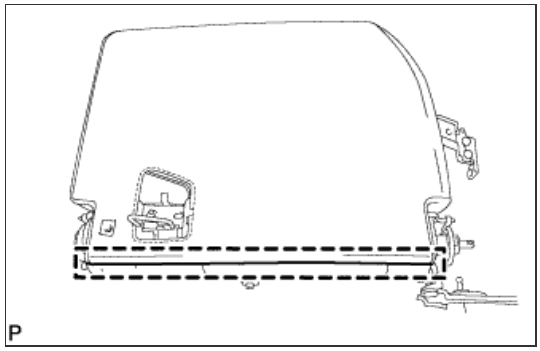

iii. Detach the 4 claws and remove the 2 headrest supports.

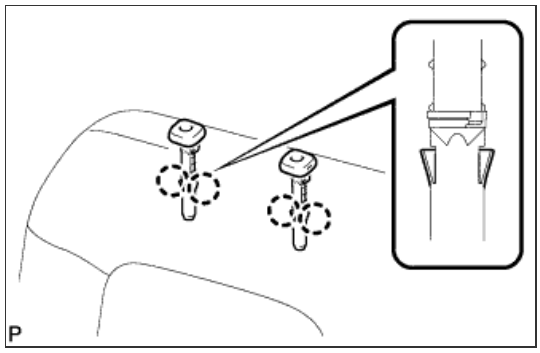


c. Remove the hog ring and seatback cover with pad.

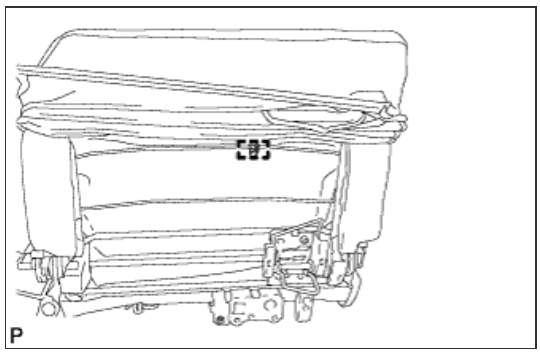

35. REMOVE NO. 3 SEATBACK COVER SUB-ASSEMBLY LH


a. Remove the hog rings and seatback cover.

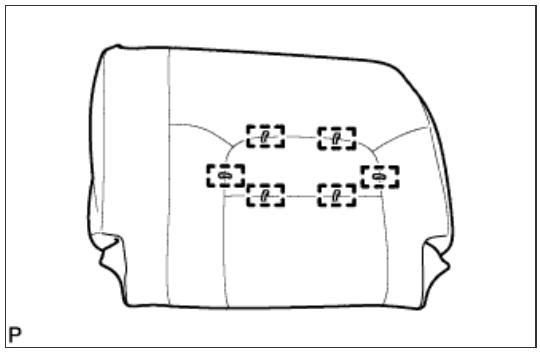

36. REMOVE REAR INNER SEAT RECLINING COVER LH

a. Remove the screw.

b. Detach the claw and remove the cover.

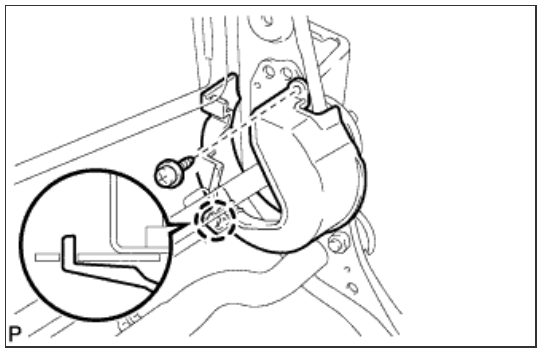

37. REMOVE REAR INNER SEAT RECLINING COVER RH


a. Remove the screw.

b. Detach the claw and remove the cover.

38. REMOVE REAR SEAT LOCK CONTROL CABLE


a. Detach the 2 cable clamps and disconnect the 2 cables.

b. Detach the 2 clamps and remove the lock control cable.

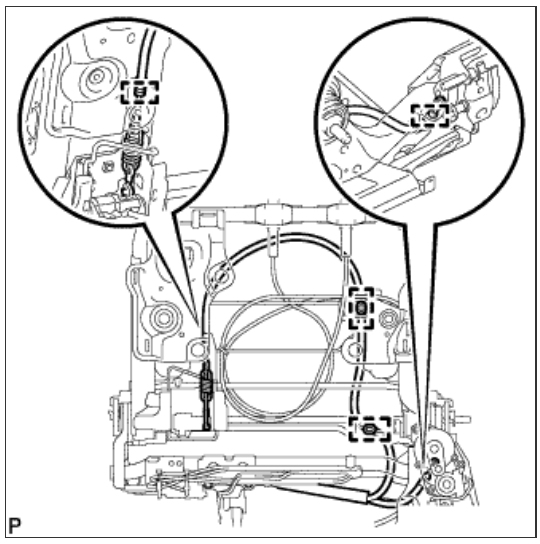

39. REMOVE REAR SEATBACK LOCK STRIKER ASSEMBLY LH

a. Remove the 2 nuts and lock striker.

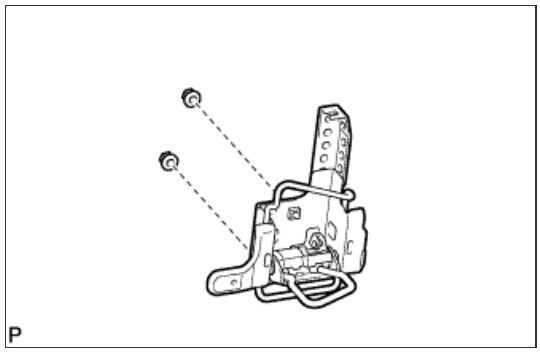

40. REMOVE REAR NO. 2 SEATBACK COVER LH

a. Detach the 3 claws and remove the cover.

41. REMOVE REAR SEATBACK LOCK STRIKER COVER LH

a. Detach the 2 clamps and remove the cover.

42. REMOVE NO. 2 SEAT RECLINING RELEASE HANDLE SUB-ASSEMBLY

a. Remove the bolt and release handle.

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL NO. 2 SEAT RECLINING RELEASE HANDLE SUB-ASSEMBLY

a. Install the release handle with the bolt.

2. INSTALL REAR SEATBACK LOCK STRIKER COVER LH

a. Attach the 2 clamps to install the cover.


3. INSTALL REAR NO. 2 SEATBACK COVER LH

a. Attach the 3 claws to install the cover.

4. INSTALL REAR SEATBACK LOCK STRIKER ASSEMBLY LH

a. Install the lock striker with the 2 nuts.


Torque:
14 N*m{ 138 kgf*cm , 10 ft.*lbf }

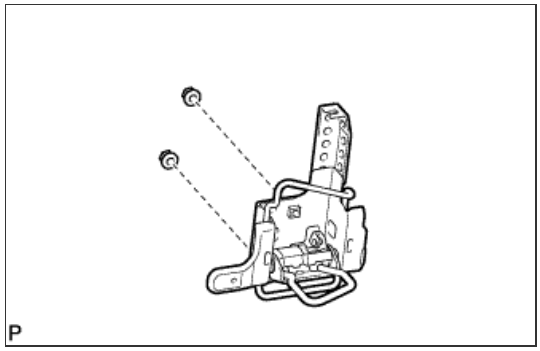

5. INSTALL REAR SEAT LOCK CONTROL CABLE

a. Attach the 2 clamps to install the lock control cable.


b. Attach the 2 cable clamps to connect the 2 cables.

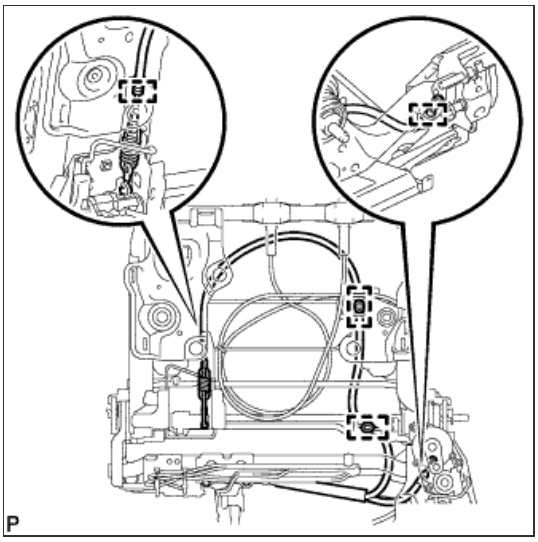

6. INSTALL REAR INNER SEAT RECLINING COVER RH

a. Attach the claw to install the cover.

b. Install the screw.

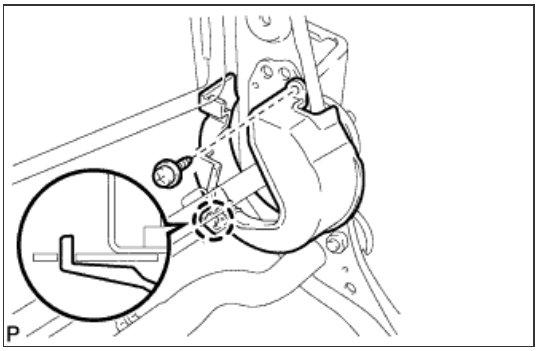

7. INSTALL REAR INNER SEAT RECLINING COVER LH

a. Attach the claw to install the cover.


b. Install the screw.

8. INSTALL NO. 3 SEATBACK COVER SUB-ASSEMBLY LH

a. Using hog ring pliers, install the seatback cover to the seatback pad with new hog rings.


NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

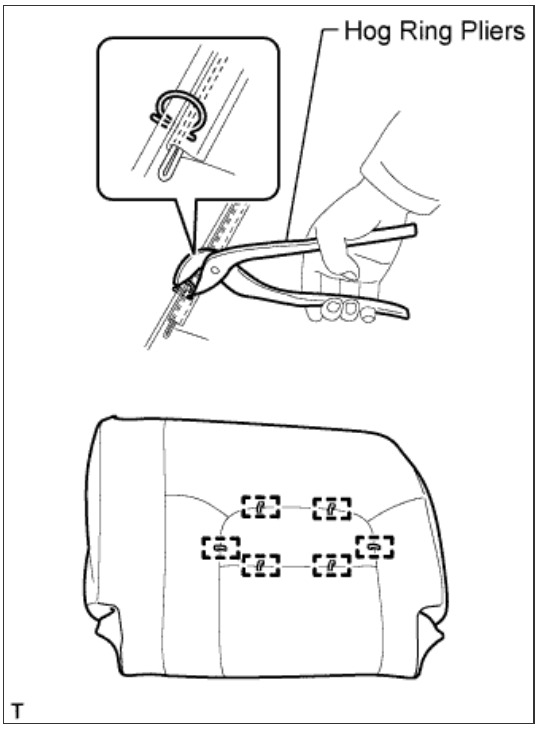

9. INSTALL SEATBACK COVER WITH PAD


a. Using hog ring pliers, install the seatback cover with pad to the seatback frame with a new hog rings.

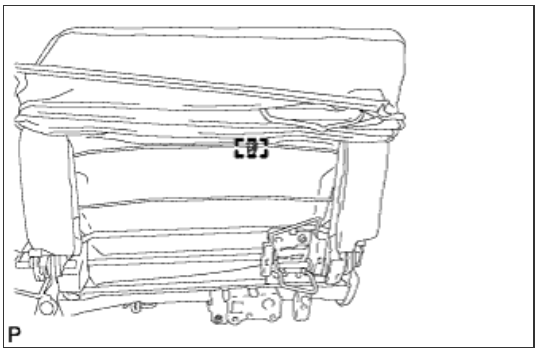


b. LH Side:

i. Attach the 8 claws to install the 4 headrest supports.


ii. Install the rear seat protector.

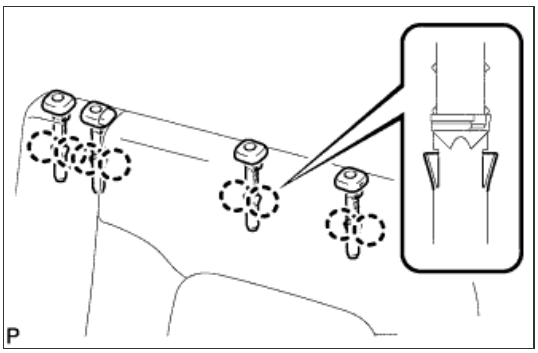


iii. Insert the center headrest storage bag.

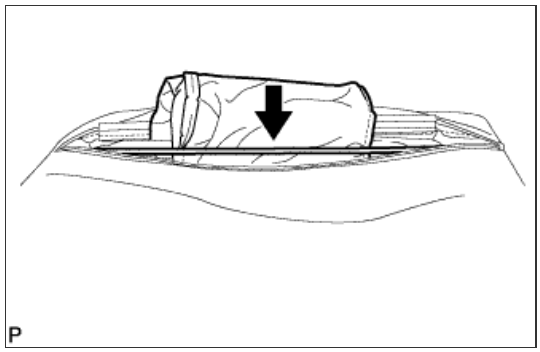

iv. Attach the 2 hooks.

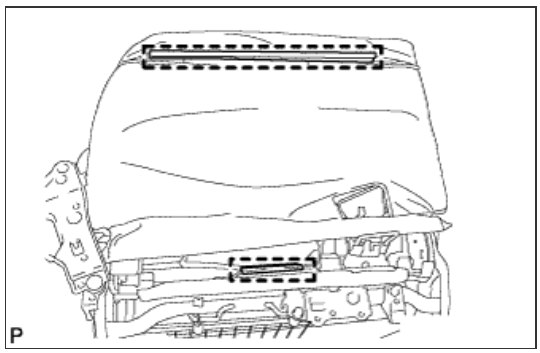


v. Close the fastener.

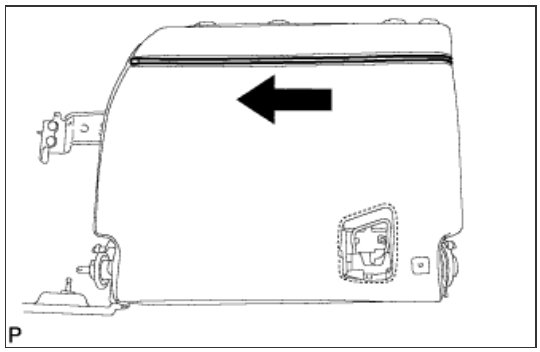


c. RH Side:

i. Attach the 4 claws to install the 2 headrest supports.

ii. Install the rear seat protector.

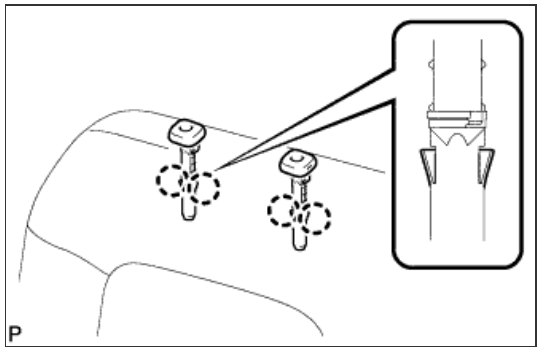


iii. Attach the hook.

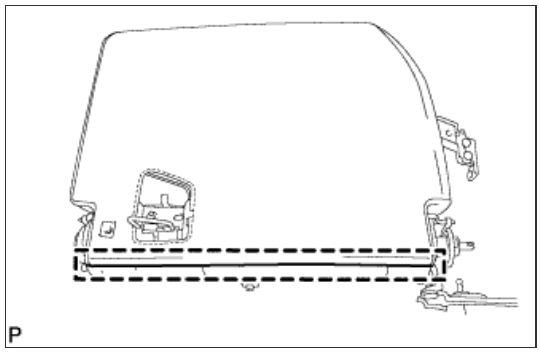

10. INSTALL REAR SEAT HEADREST HANDLE

a. Install the snap ring to the headrest handle.

b. Install the headrest handle to the headrest.

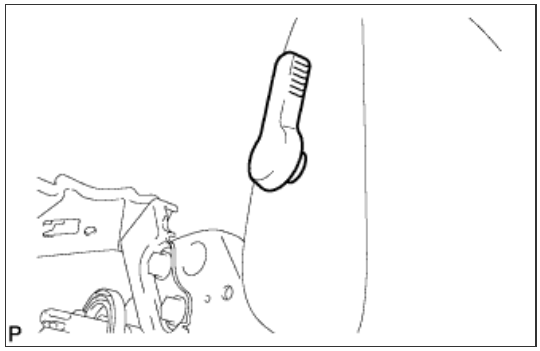


11. INSTALL REAR SEAT HEADREST ASSEMBLY (w/ Folding Headrest)

a. While releasing the lock inside the headrest support with a screwdriver, install the headrest.

HINT:


Tape the screwdriver tip before use.

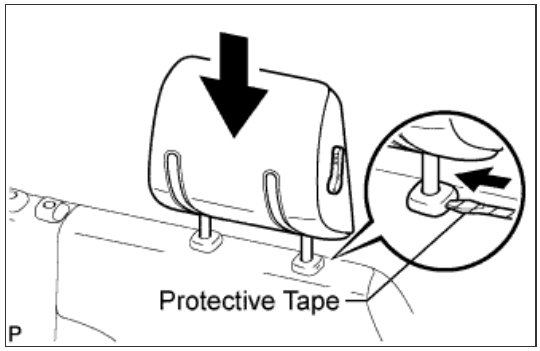

12. INSTALL REAR SEAT HEADREST ASSEMBLY (w/o Folding Headrest)


13. INSTALL REAR SEAT HINGE PAWL GUIDE

a. Install the guide with the screw.

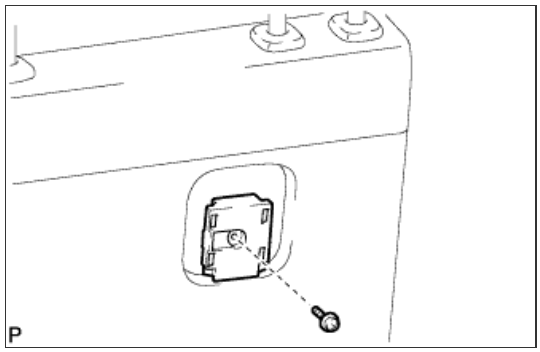


14. INSTALL REAR SEAT HINGE PAWL GUIDE

a. Attach the 5 claws to install the guide.

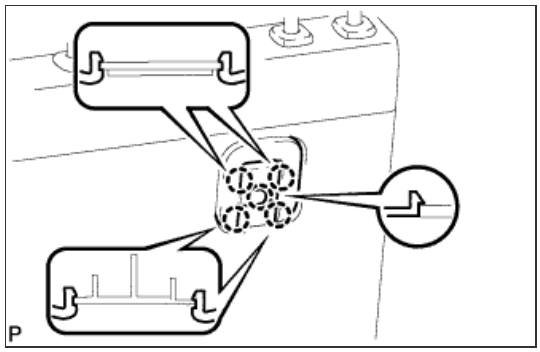


15. INSTALL REAR LOWER SEATBACK LOCK BEZEL

a. Attach the 3 claws and clip to install the seatback lock bezel.

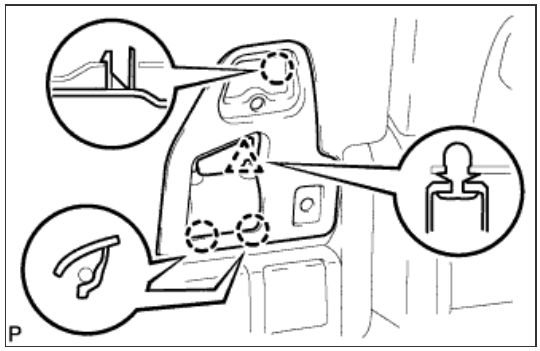


16. INSTALL REAR NO. 2 SEATBACK CUSHION

a. Install the seatback cushion with the screw.

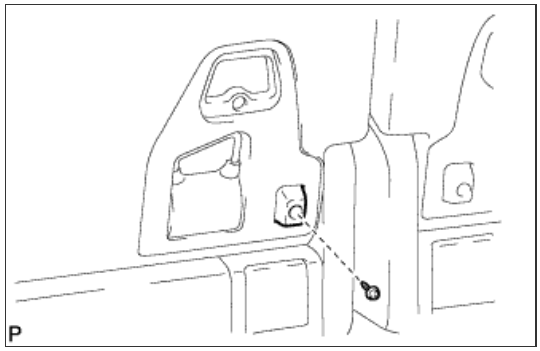


17. INSTALL NO. 3 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Attach the 2 clamps to install the 2 cables.

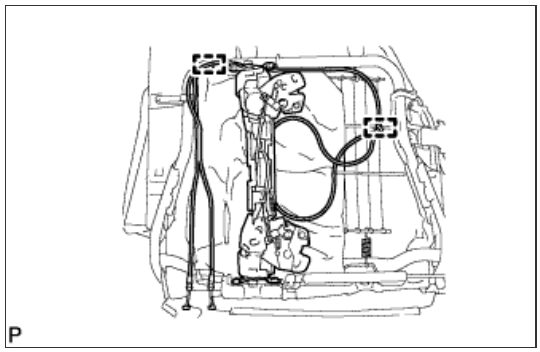


b. Attach the 2 cable clamps to connect the 2 cables.

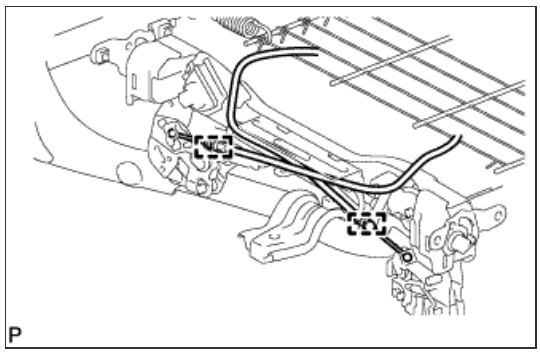

18. INSTALL NO. 2 SEAT STAY SUB-ASSEMBLY

a. Install the seat stay with the bolt.

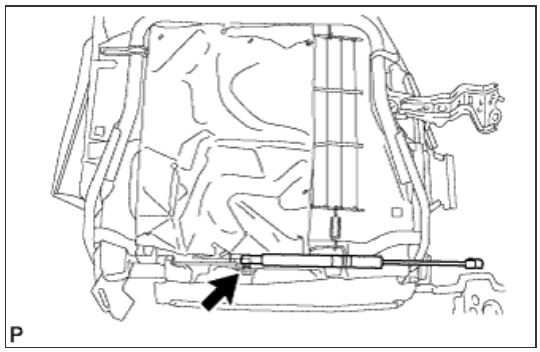


19. INSTALL NO. 3 SEAT CUSHION COVER SUB-ASSEMBLY LH

a. Attach the fastening tape to install the seatback cover.

b. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

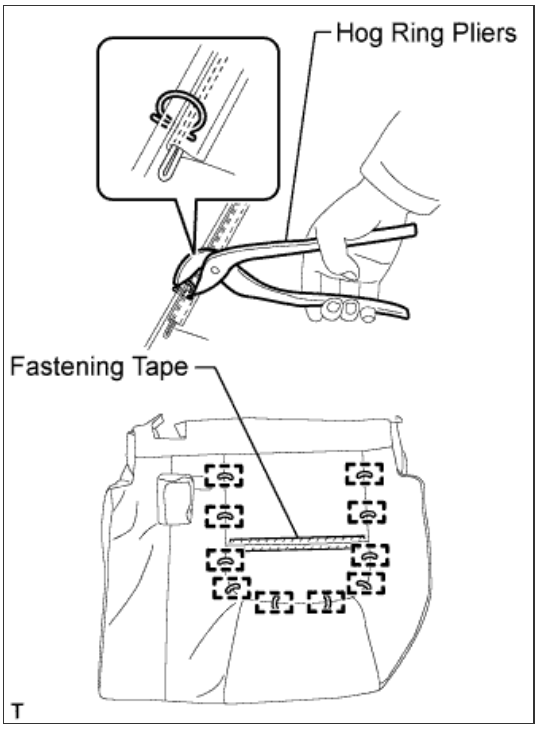


20. INSTALL NO. 3 SEAT CUSHION PAD LH

21. INSTALL SEAT CUSHION COVER WITH PAD


22. INSTALL REAR SEAT CUSHION CARPET

a. Install the seat cushion carpet with new tack pins.

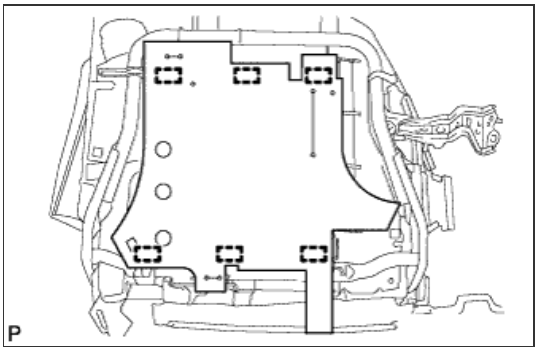

23. INSTALL REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Install the 2 belts.

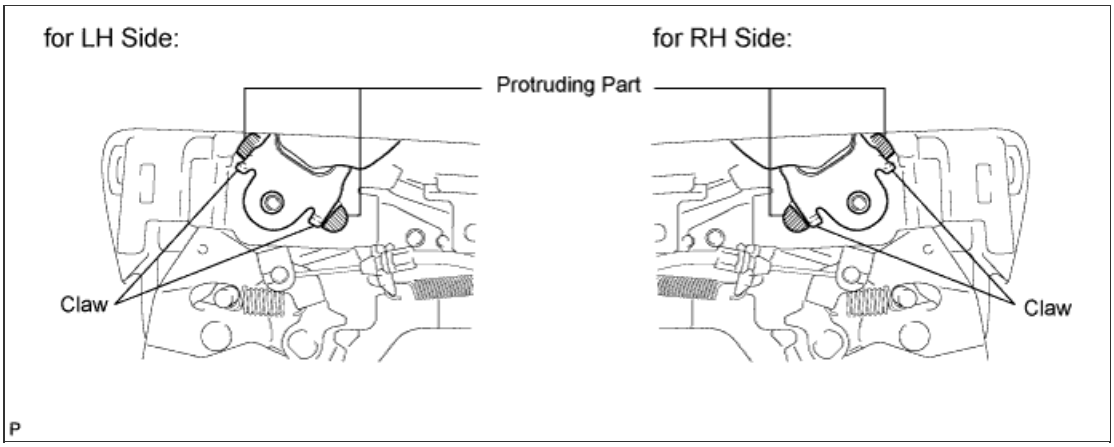

NOTICE:

- **Make sure the claws are facing away from the seat.**
- **Do not overlap the anchor part of the seat belt and protruding parts of the seat.**

24. INSTALL REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, connect it when installing the rear seat inner belt.

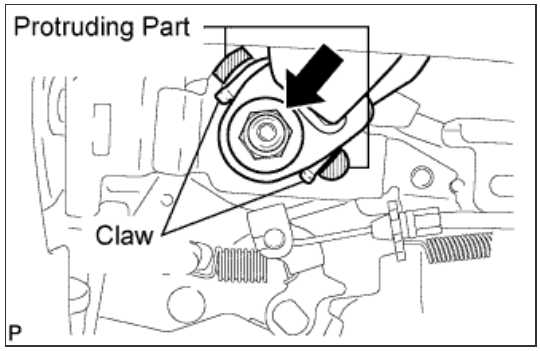

25. INSTALL REAR SEAT OUTER BELT SUB-ASSEMBLY (for RH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.


HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, connect it when installing the rear seat outer belt.

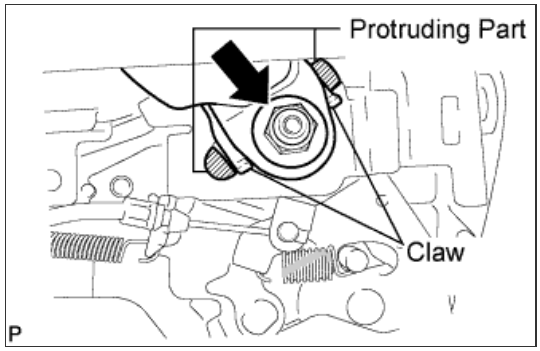


26. INSTALL SEAT CUSHION LOCK RELEASE LEVER ASSEMBLY LH

a. Attach the 2 cable clamps to connect the 2 cables.

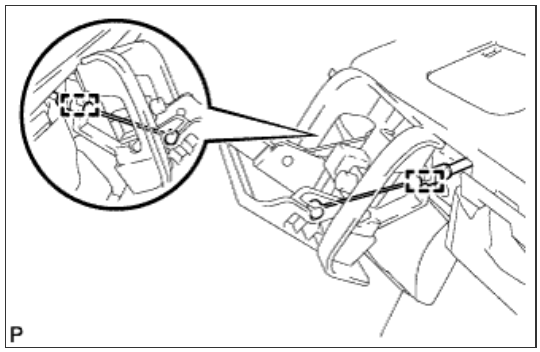


b. Attach the claw to install the release lever.

c. Install the 2 screws.

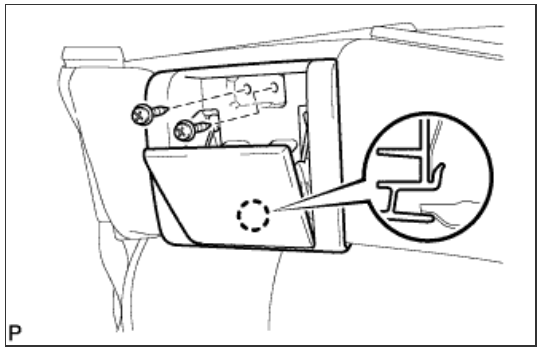

27. INSTALL SEAT STAND FRAME CAP


a. Attach the 2 claws to install the stand frame cap.

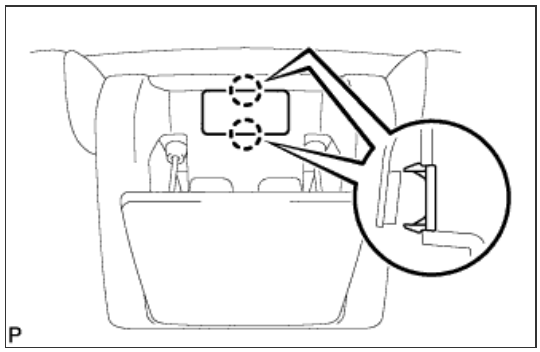

28. INSTALL REAR SEAT LOCK COVER LH

a. Attach the 2 clamps to install the cover.


b. Install the 2 screws.

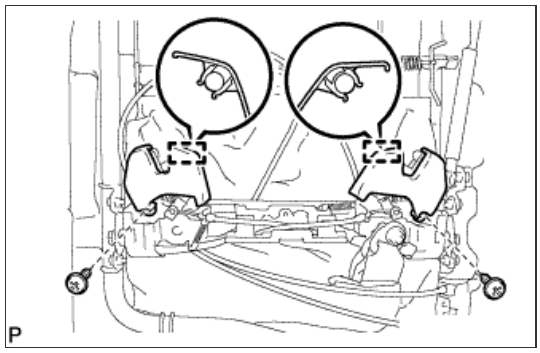

29. INSTALL NO. 3 SEAT LEG COVER NO. 2


a. Attach the 4 claws to install the cover.

b. Install the 2 screws.

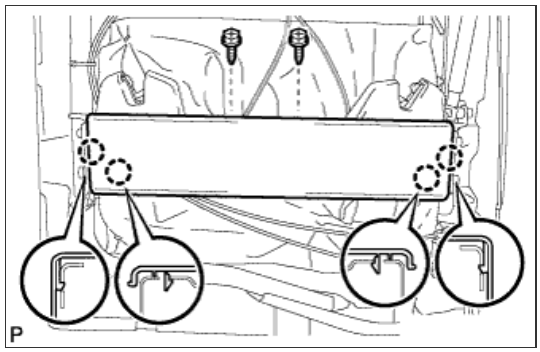


30. INSTALL NO. 3 SEAT FRONT BRACKET COVER LH

a. Attach the 4 claws to install the cover.

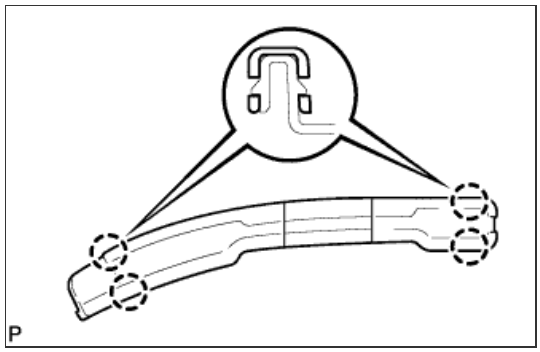


31. INSTALL REAR SEAT CUSHION UNDER COVER LH

a. Install the cover with the 8 screws.

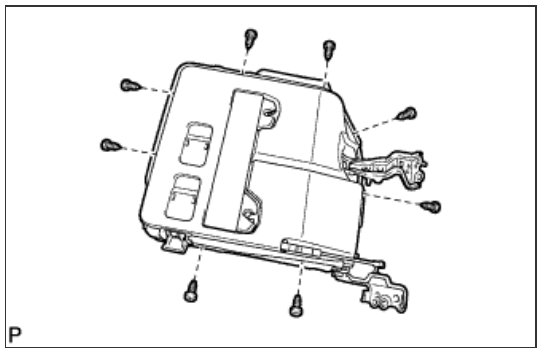


b. Attach the 16 claws.

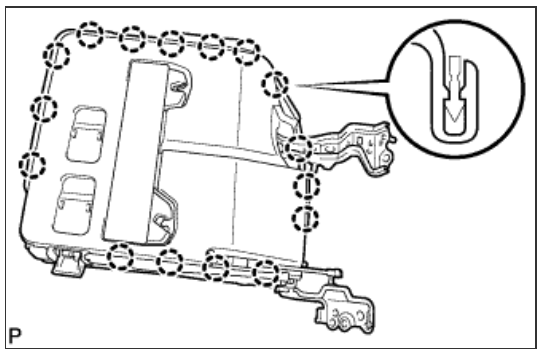

32. INSTALL 3RD SEAT CUSHION LOCK COVER


a. Attach the 4 claws to install the 2 covers.

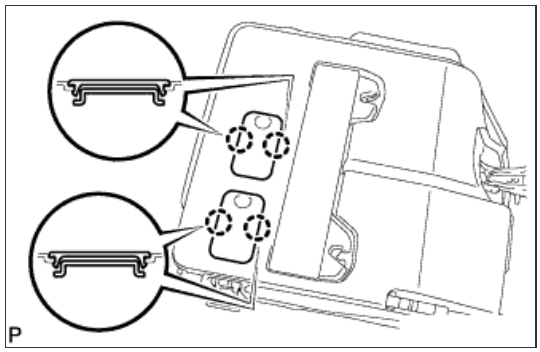

33. INSTALL 3RD SEAT LINK SUB-ASSEMBLY LH


a. Install the seat link with the bolt and nut.

Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

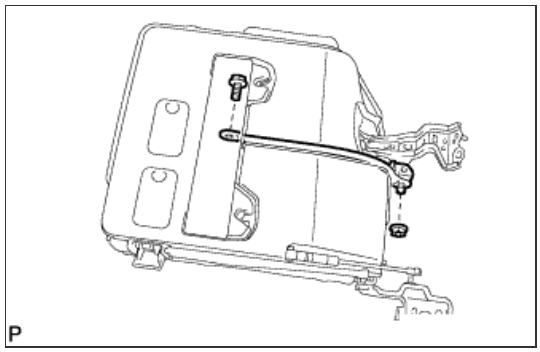


34. INSTALL NO. 2 SEAT LEG COVER NO. 2

a. Install the seat leg cover with the screw.

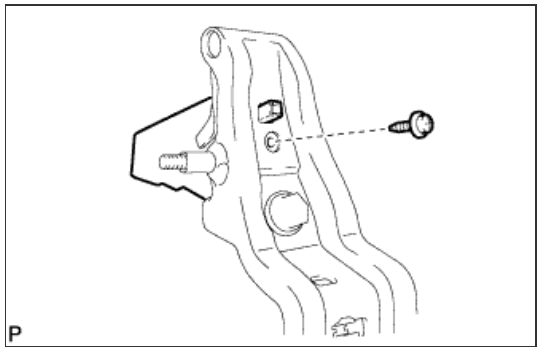


35. INSTALL REAR NO. 3 SEAT LEG COVER LH

a. Install the seat leg cover with the 2 screws.

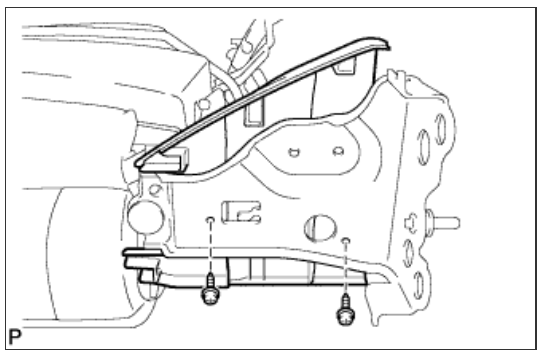

b. Install the spring of the seat stay ball-joint.

c. Connect the seat stay to the seat frame.

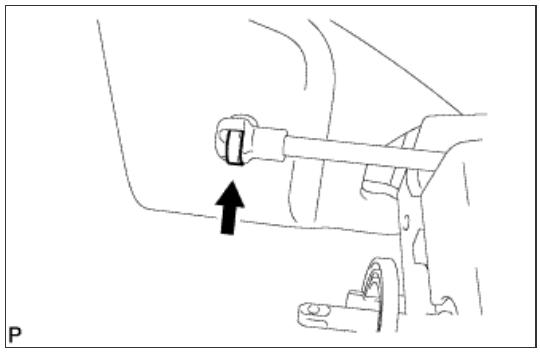


36. INSTALL REAR SEAT REAR BRACKET COVER REAR

a. Attach the 2 claws to install the cover.

37. INSTALL RECLINING ADJUSTER COVER RH

a. Attach the 5 claws in the order shown in the illustration to install the cover.


b. Install the screw.

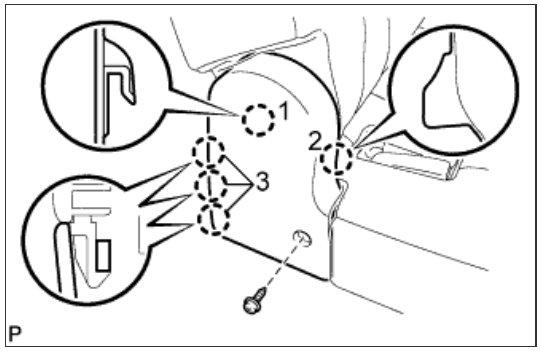

38. INSTALL RECLINING ADJUSTER COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the screw.

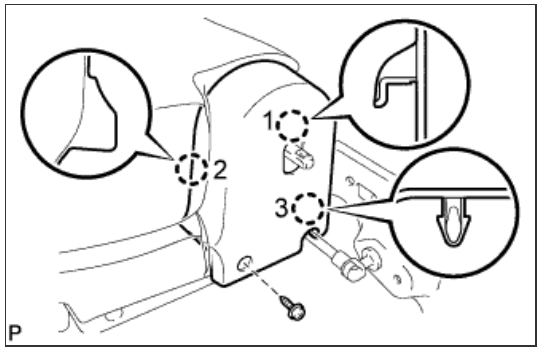


39. INSTALL NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

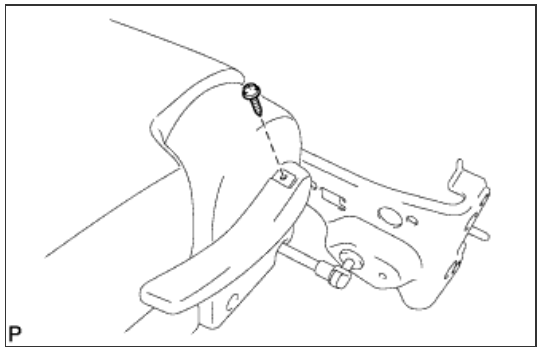

40. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

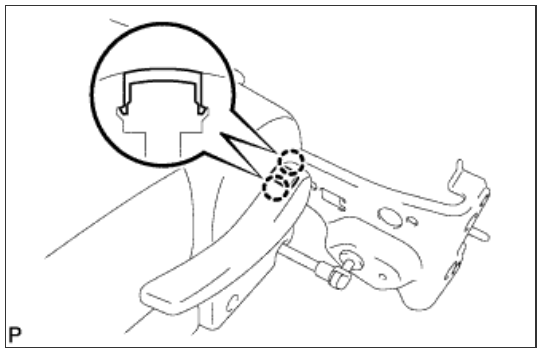

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL NO. 2 SEAT RECLINING RELEASE HANDLE SUB-ASSEMBLY

a. Install the release handle with the bolt.

2. INSTALL REAR SEATBACK LOCK STRIKER COVER LH

a. Attach the 2 clamps to install the cover.


3. INSTALL REAR NO. 2 SEATBACK COVER LH

a. Attach the 3 claws to install the cover.

4. INSTALL REAR SEATBACK LOCK STRIKER ASSEMBLY LH

a. Install the lock striker with the 2 nuts.


Torque:
14 N*m{ 138 kgf*cm , 10 ft.*lbf }

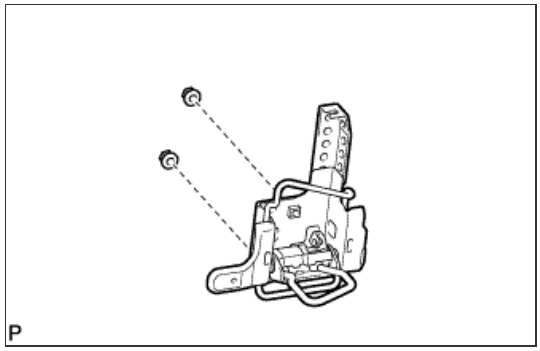

5. INSTALL REAR SEAT LOCK CONTROL CABLE

a. Attach the 2 clamps to install the lock control cable.


b. Attach the 2 cable clamps to connect the 2 cables.

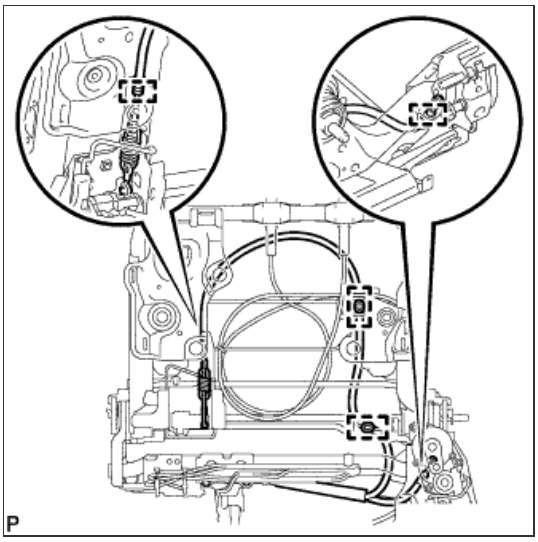

6. INSTALL REAR INNER SEAT RECLINING COVER RH

a. Attach the claw to install the cover.

b. Install the screw.

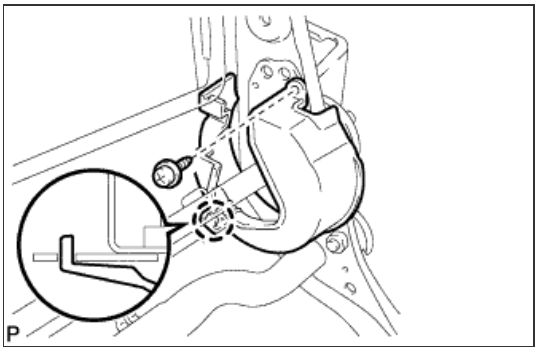

7. INSTALL REAR INNER SEAT RECLINING COVER LH

a. Attach the claw to install the cover.

b. Install the screw.

8. INSTALL NO. 3 SEATBACK COVER SUB-ASSEMBLY LH


a. Using hog ring pliers, install the seatback cover to the seatback pad with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

Text in Illustration

	og Ring Pliers

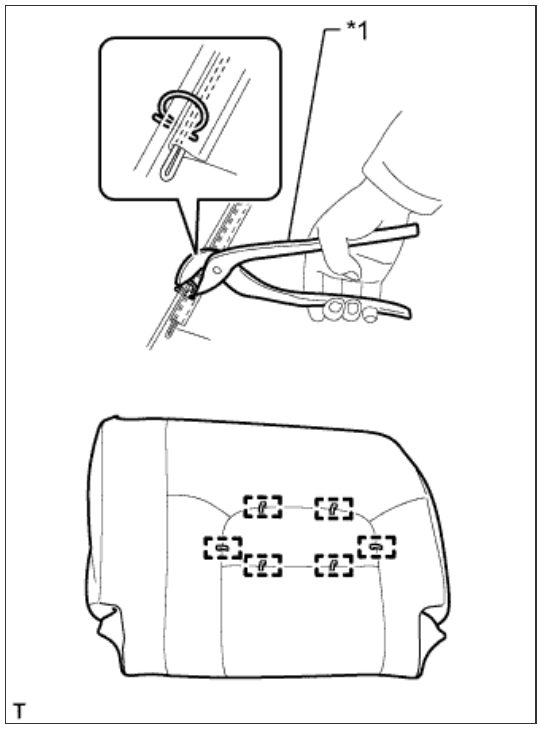


9. INSTALL SEATBACK COVER WITH PAD


a. Using hog ring pliers, install the seatback cover with pad to the seatback frame with a new hog rings.

b. LH Side:


i. w/ Rear Center Seat Headrest:

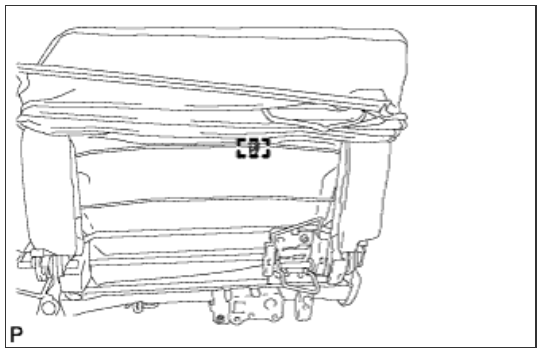


1. Attach the claws to install the 4 headrest supports.
2. Install the rear seat protector.

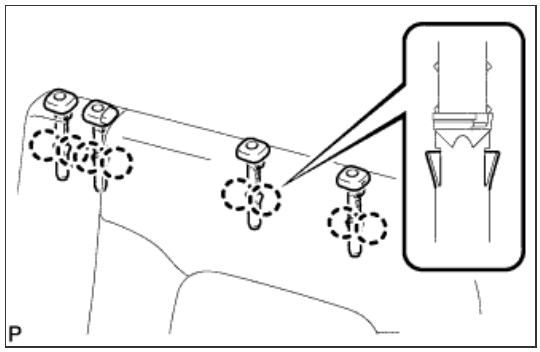

3. Insert the center headrest storage bag.

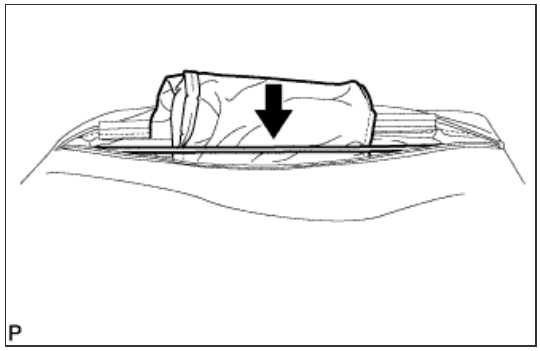


4. Attach the 2 hooks.

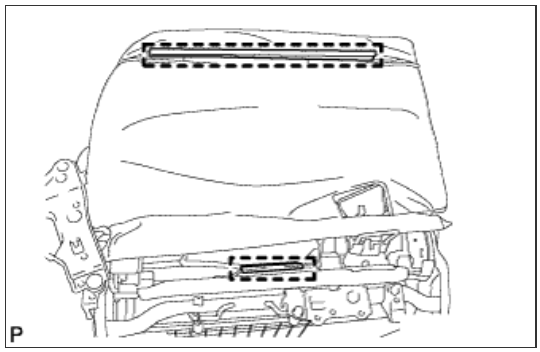


5. Close the fastener.


ii. w/o Rear Center Seat Headrest:

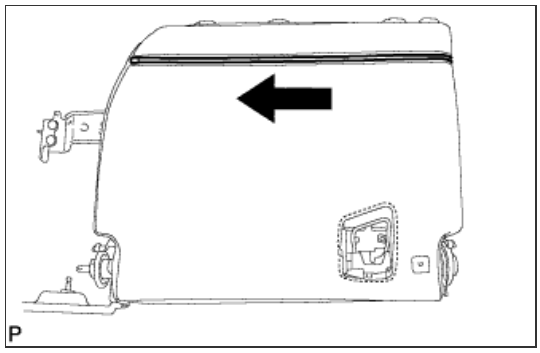

1. Attach the 4 claws to install the 2 headrest supports.
2. Install the rear seat protector.

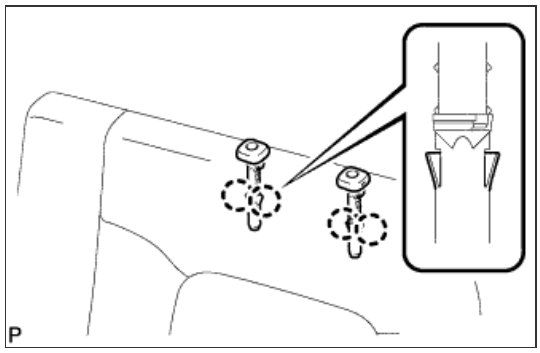


3. Attach the hook.

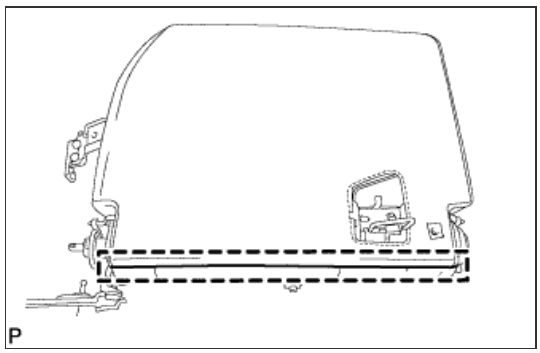


c. RH Side:

i. Attach the 4 claws to install the 2 headrest supports.

ii. Install the rear seat protector.

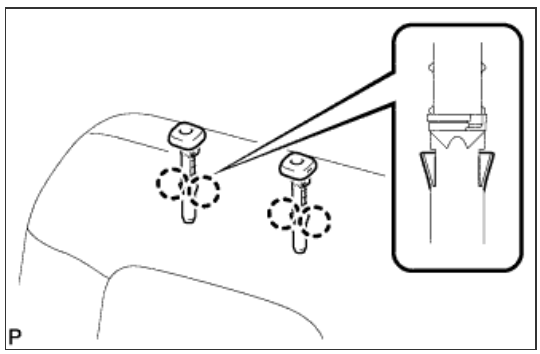


iii. Attach the hook.

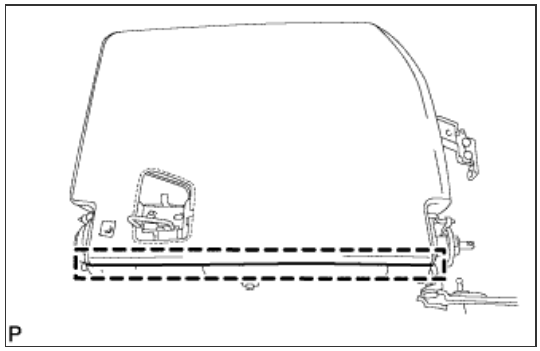

10. INSTALL REAR SEAT HEADREST HANDLE

a. Install the snap ring to the headrest handle.

b. Install the headrest handle to the headrest.

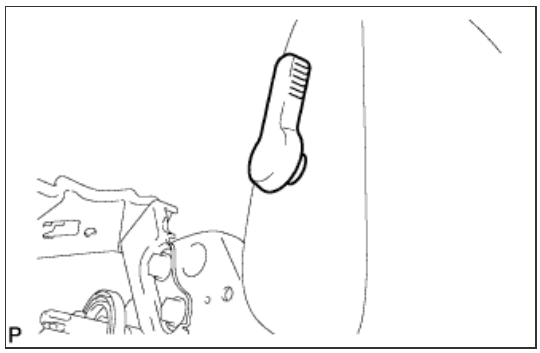

11. INSTALL REAR SEAT HEADREST ASSEMBLY (w/ Folding Headrest)


a. While releasing the lock inside the headrest support with a screwdriver, install the headrest.

HINT:

Tape the screwdriver tip before use.

Text in Illustration


	rotective Tape

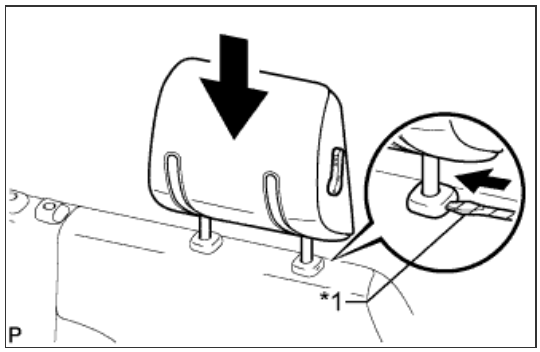

12. INSTALL REAR SEAT HEADREST ASSEMBLY (w/o Folding Headrest)


13. INSTALL REAR SEAT HINGE PAWL GUIDE

a. Install the guide with the screw.

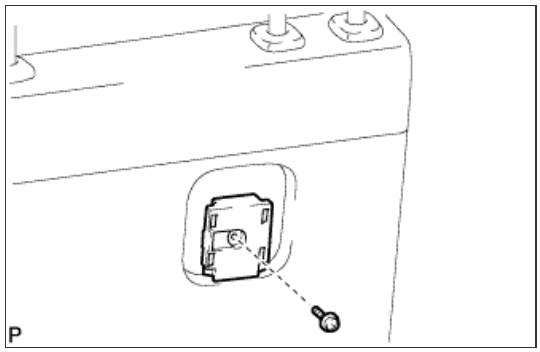


14. INSTALL REAR SEAT HINGE PAWL GUIDE

a. Attach the 5 claws to install the guide.

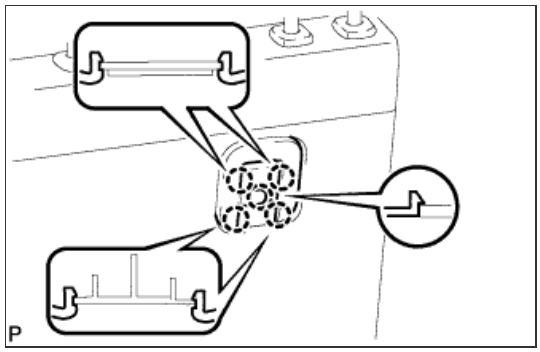


15. INSTALL REAR LOWER SEATBACK LOCK BEZEL

a. Attach the 3 claws and clip to install the seatback lock be el.

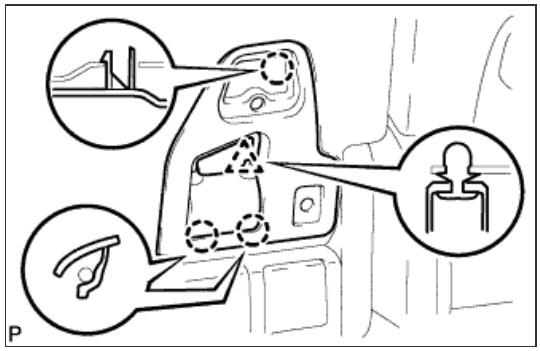


16. INSTALL REAR NO. 2 SEATBACK CUSHION

a. Install the seatback cushion with the screw.

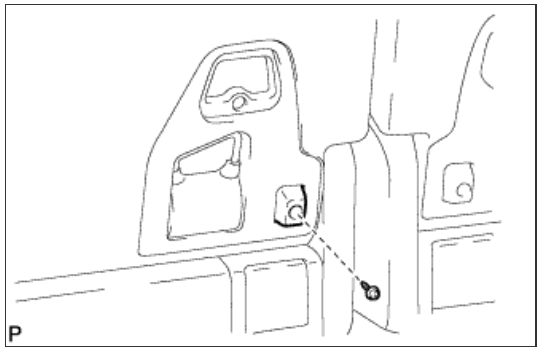


17. INSTALL NO. 3 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Attach the 2 clamps to install the 2 cables.

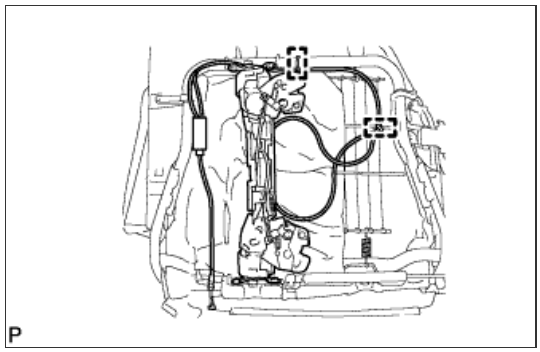


b. Attach the 2 cable clamps to connect the 2 cables.

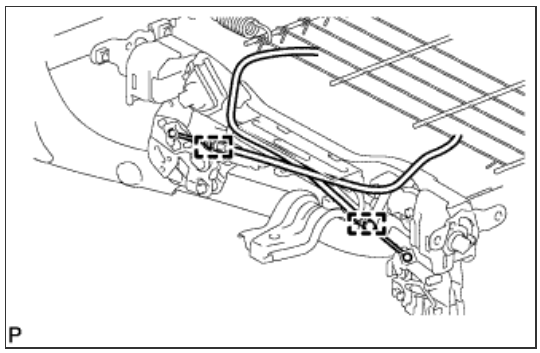

18. INSTALL NO. 2 SEAT STAY SUB-ASSEMBLY

a. Install the seat stay with the bolt.

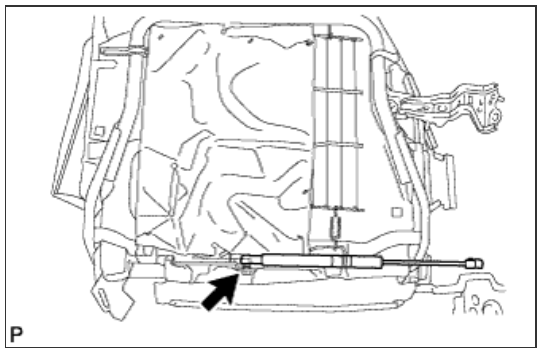

19. INSTALL NO. 3 SEAT CUSHION COVER SUB-ASSEMBLY LH

a. w/o Bottle Holder:

i. Attach the fastening tape to install the seatback cover.


ii. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

Text in Illustration

	og Ring Pliers
	astening Tape

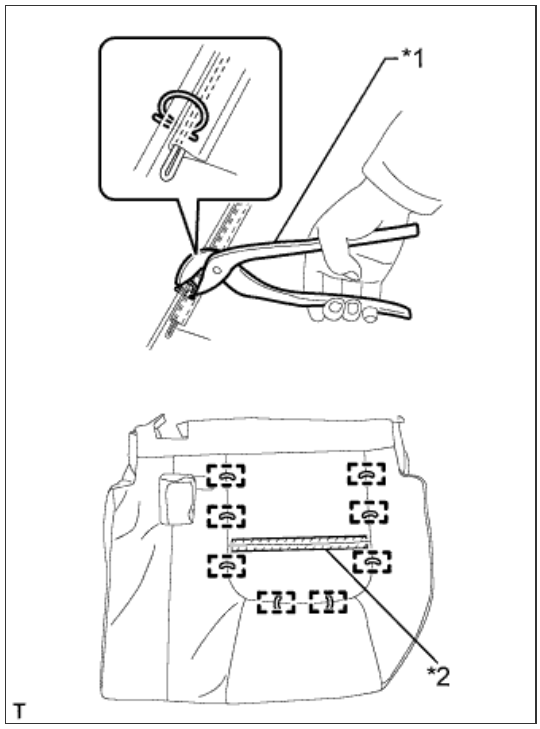

b. w/ Bottle Holder:

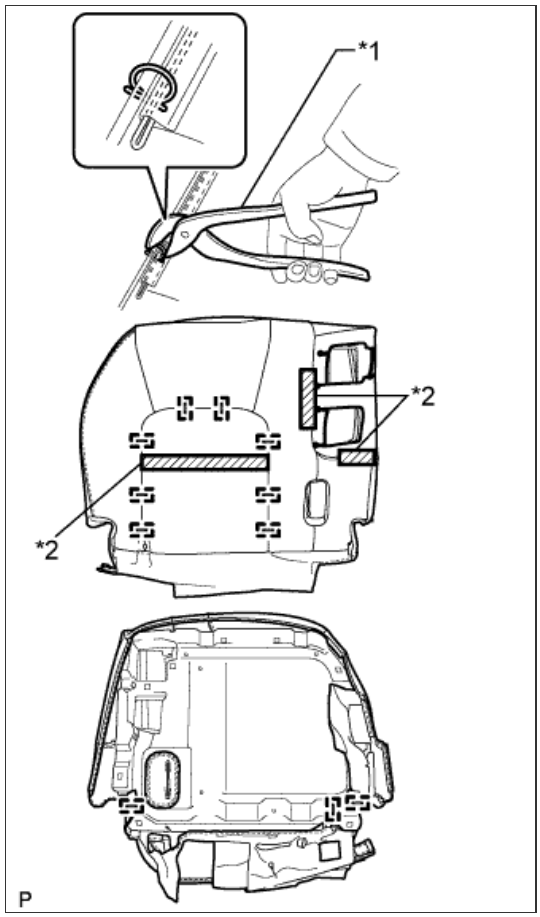

i. Attach the 3 fastening tapes to install the seatback cover.

ii. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

Text in Illustration


	og Ring Pliers
	astening Tape

20. INSTALL NO. 3 SEAT CUSHION PAD LH

21. INSTALL SEAT CUSHION COVER WITH PAD


22. INSTALL NO. 2 BOTTLE HOLDER

a. Install the o. 2 bottle holder with the 2 screws.

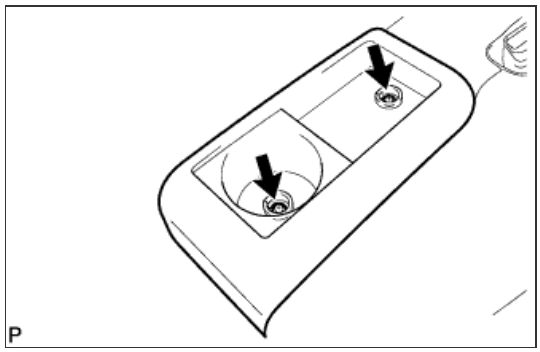


23. INSTALL CAP

a. Attach the 4 claws to install the 2 caps.

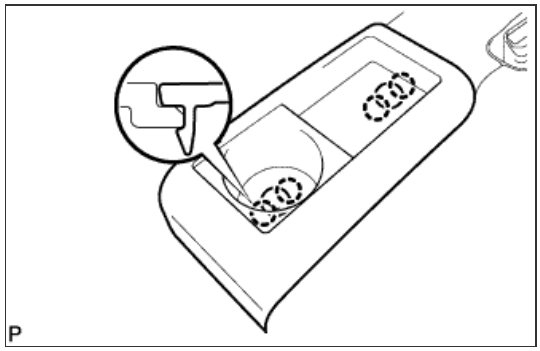


24. INSTALL REAR SEAT CUSHION CARPET

a. Install the seat cushion carpet with new tack pins.

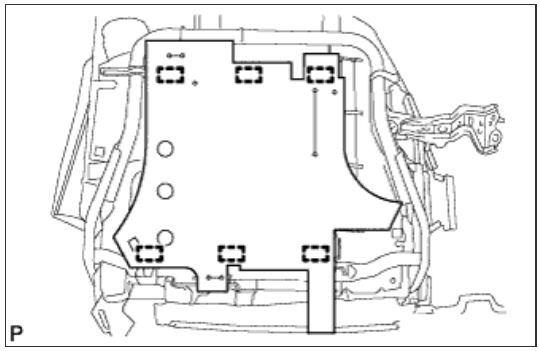

25. INSTALL REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Install the 2 belts.

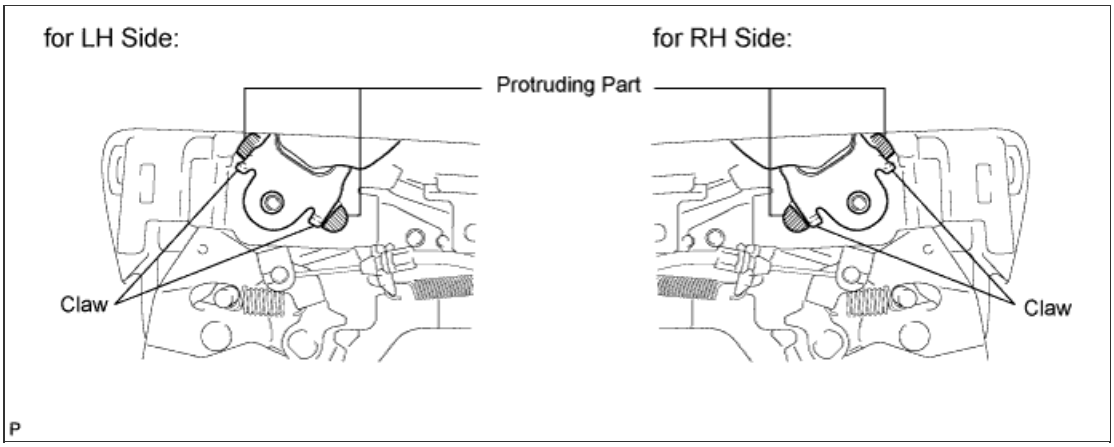

NOTICE:

- **Make sure the claws are facing away from the seat.**
- **Do not overlap the anchor part of the seat belt and protruding parts of the seat.**

26. INSTALL REAR CENTER SEAT INNER BELT LH (w/ Rear Center Seat Headrest)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

o not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:

The rear o. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, connect it when installing the rear seat inner belt.

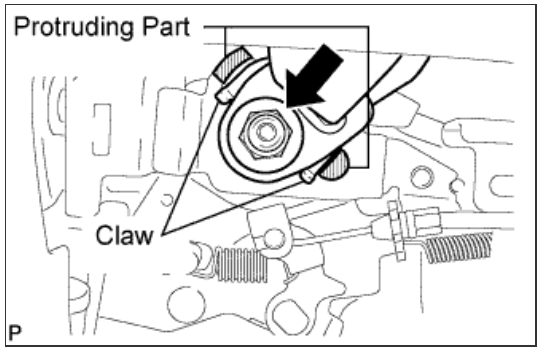

27. INSTALL REAR CENTER SEAT INNER BELT RH (w/ Rear Center Seat Headrest)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

o not overlap the anchor part of the seat belt and protruding parts of the seat.


HINT:

The rear o. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, connect it when installing the rear seat outer belt.

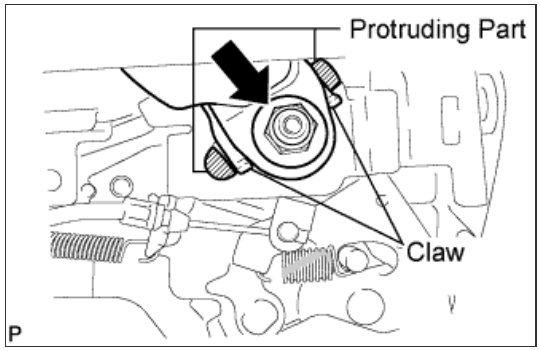


28. INSTALL SEAT CUSHION LOCK RELEASE LEVER ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

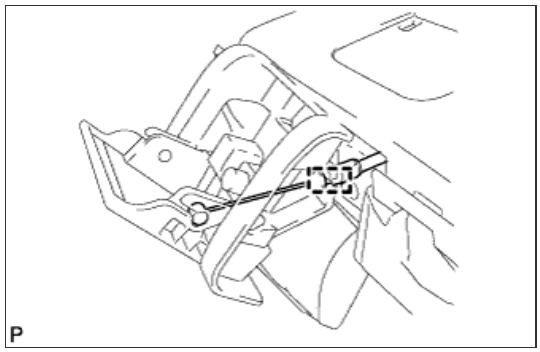


b. Attach the claw to install the release lever.

c. Install the screw.

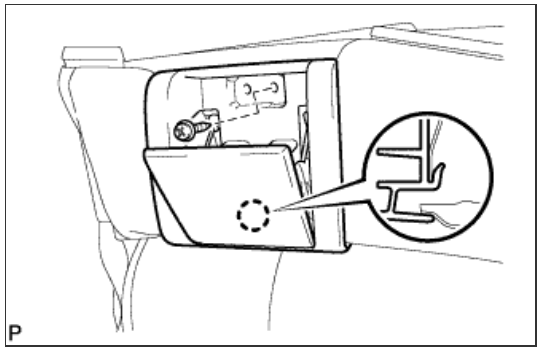

29. INSTALL SEAT STAND FRAME CAP


a. Attach the 2 claws to install the stand frame cap.

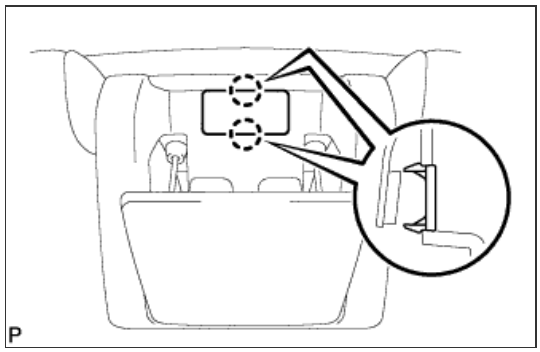

30. INSTALL REAR SEAT LOCK COVER LH

a. Attach the 2 clamps to install the cover.


b. Install the 2 screws.

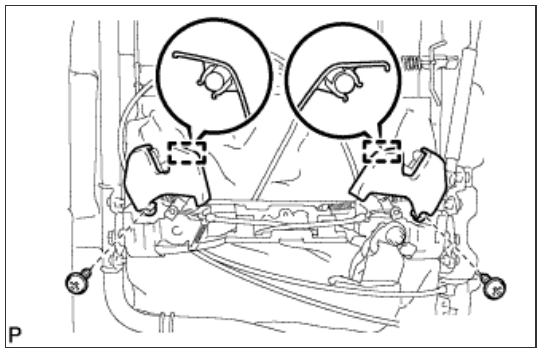

31. INSTALL NO. 3 SEAT LEG COVER NO. 2


a. Attach the 4 claws to install the cover.

b. Install the 2 screws.

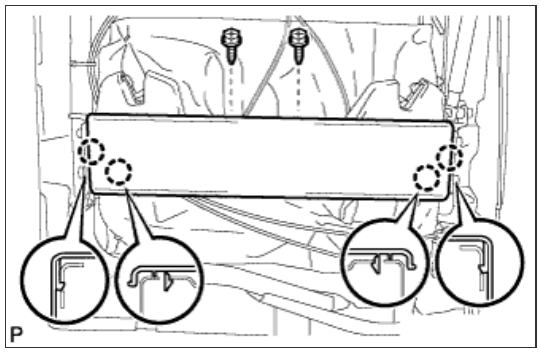


32. INSTALL NO. 3 SEAT FRONT BRACKET COVER LH

a. Attach the 4 claws to install the cover.

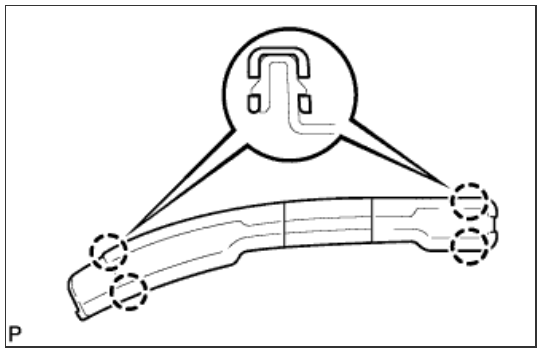


33. INSTALL REAR SEAT CUSHION UNDER COVER LH

a. Install the cover with the screws.

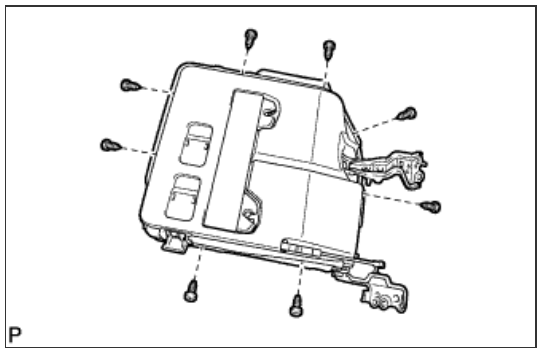


b. Attach the 16 claws.

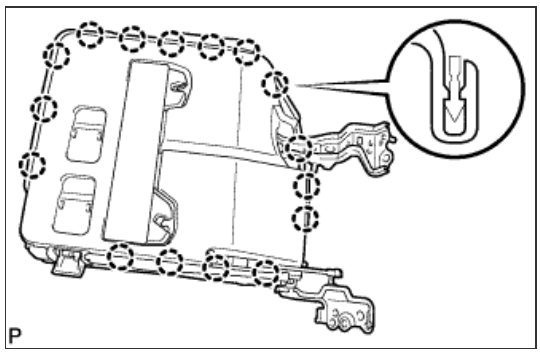

34. INSTALL 3RD SEAT CUSHION LOCK COVER


a. Attach the 4 claws to install the 2 covers.

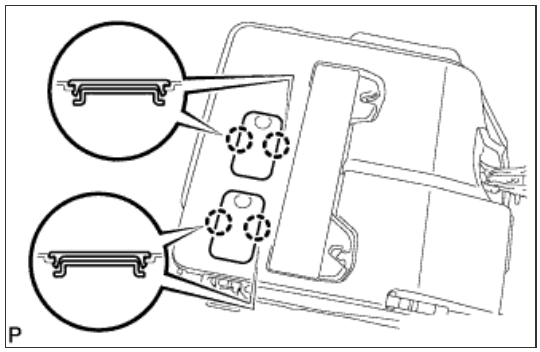

35. INSTALL 3RD SEAT LINK SUB-ASSEMBLY LH


a. Install the seat link with the bolt and nut.

Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

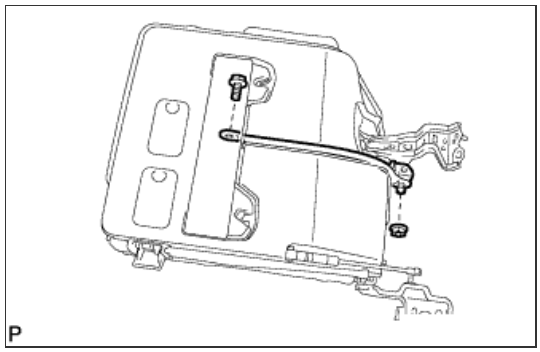


36. INSTALL NO. 2 SEAT LEG COVER NO. 2

a. Install the seat leg cover with the screw.

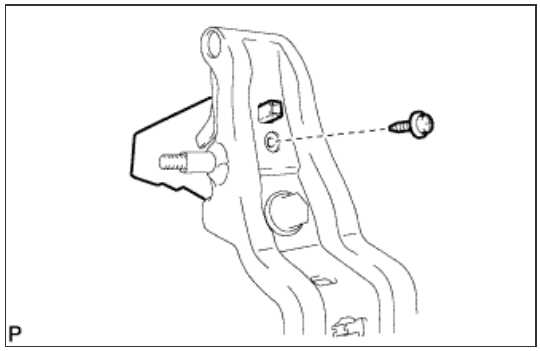


37. INSTALL REAR NO. 3 SEAT LEG COVER LH

a. Install the seat leg cover with the 2 screws.

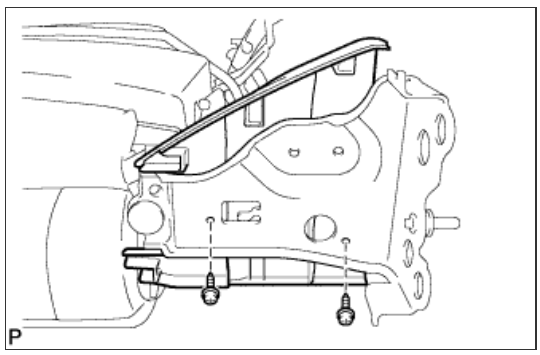

b. Install the spring of the seat stay ball-joint.

c. Connect the seat stay to the seat frame.

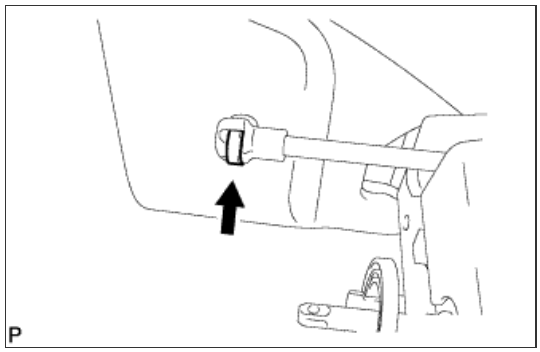


38. INSTALL REAR SEAT REAR BRACKET COVER REAR

a. Attach the 2 claws to install the cover.

39. INSTALL RECLINING ADJUSTER COVER RH

a. Attach the 5 claws in the order shown in the illustration to install the cover.


b. Install the screw.

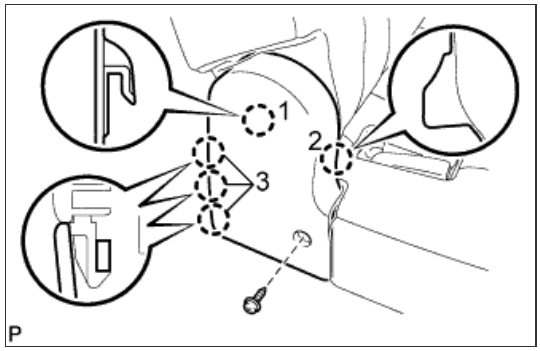

40. INSTALL RECLINING ADJUSTER COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the screw.

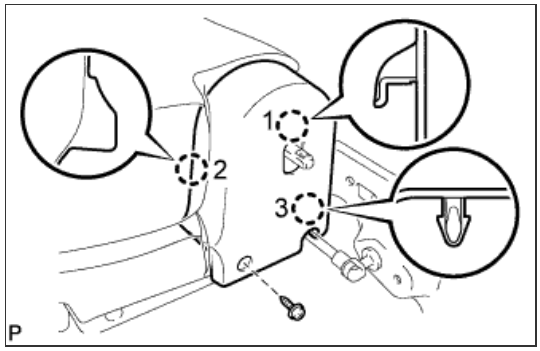


41. INSTALL NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

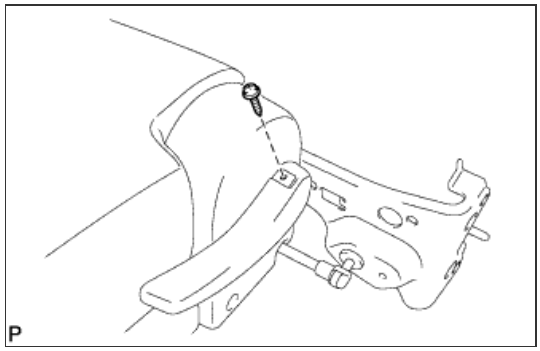

42. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

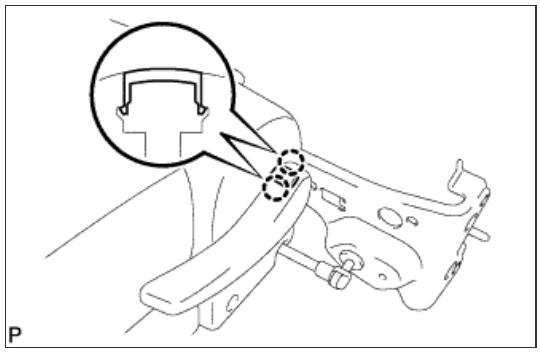

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL NO. 2 SEAT RECLINING RELEASE HANDLE SUB-ASSEMBLY

a. Install the release handle with the bolt.

2. INSTALL REAR SEATBACK LOCK STRIKER COVER LH

a. Attach the 2 clamps to install the cover.


3. INSTALL REAR NO. 2 SEATBACK COVER LH

a. Attach the 3 claws to install the cover.

4. INSTALL REAR SEATBACK LOCK STRIKER ASSEMBLY LH

a. Install the lock striker with the 2 nuts.


Torque:
14 N*m{ 138 kgf*cm , 10 ft.*lbf }

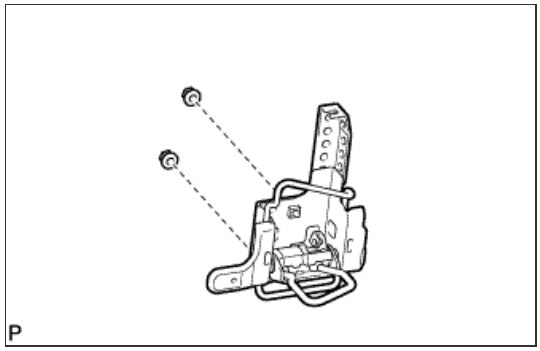

5. INSTALL REAR SEAT LOCK CONTROL CABLE

a. Attach the 2 clamps to install the lock control cable.


b. Attach the 2 cable clamps to connect the 2 cables.

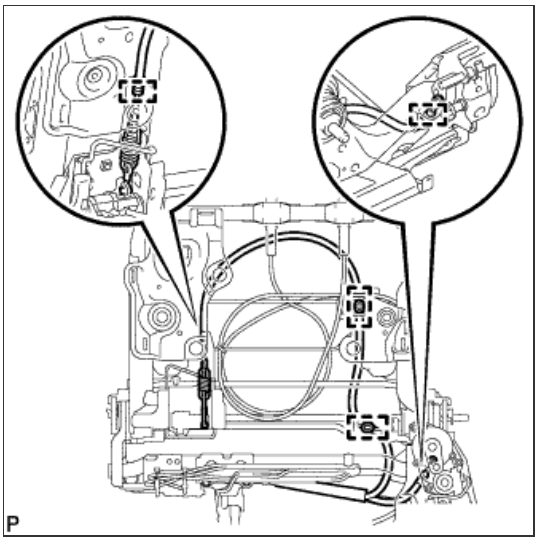

6. INSTALL REAR INNER SEAT RECLINING COVER RH

a. Attach the claw to install the cover.

b. Install the screw.

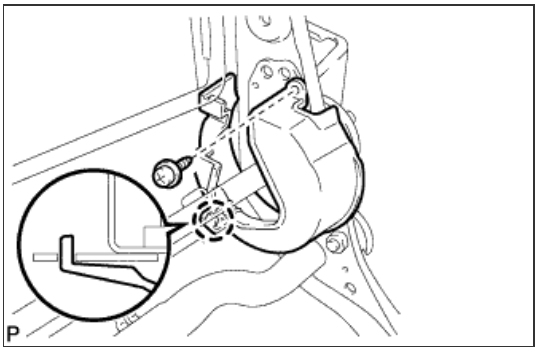

7. INSTALL REAR INNER SEAT RECLINING COVER LH

a. Attach the claw to install the cover.

b. Install the screw.

8. INSTALL NO. 3 SEATBACK COVER SUB-ASSEMBLY LH


a. Using hog ring pliers, install the seatback cover to the seatback pad with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

Text in Illustration

	og Ring Pliers

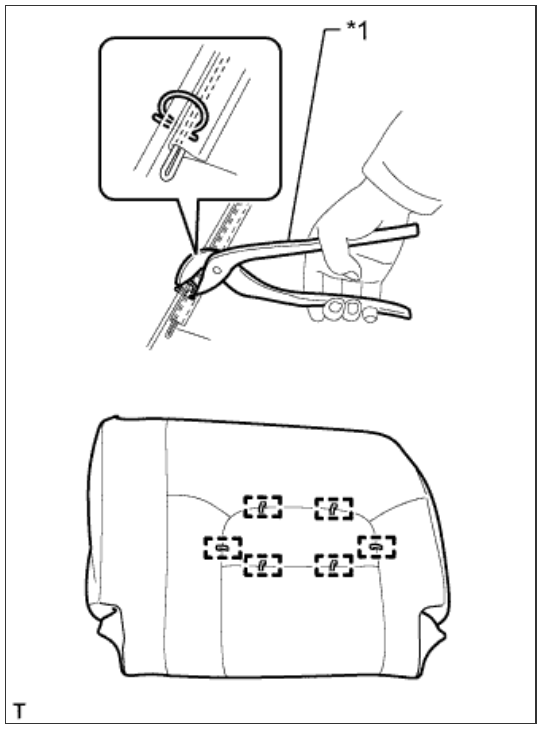


9. INSTALL SEATBACK COVER WITH PAD


a. Using hog ring pliers, install the seatback cover with pad to the seatback frame with a new hog rings.

b. LH Side:


i. w/ Rear Center Seat Headrest:

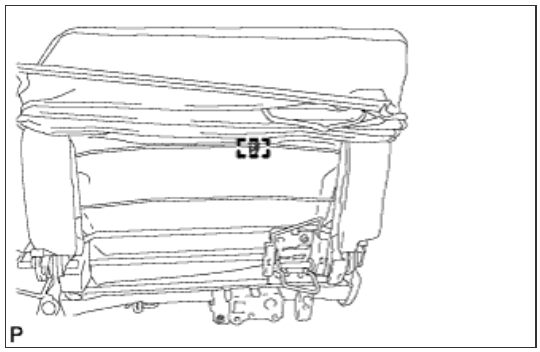


1. Attach the claws to install the 4 headrest supports.
2. Install the rear seat protector.

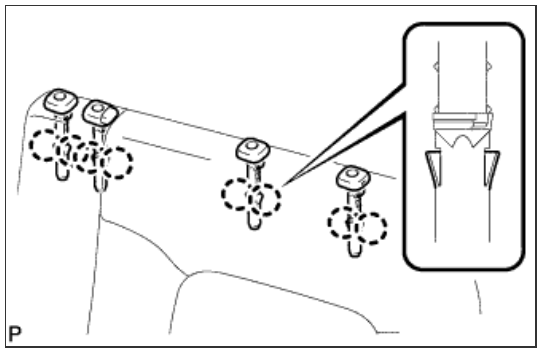

3. Insert the center headrest storage bag.

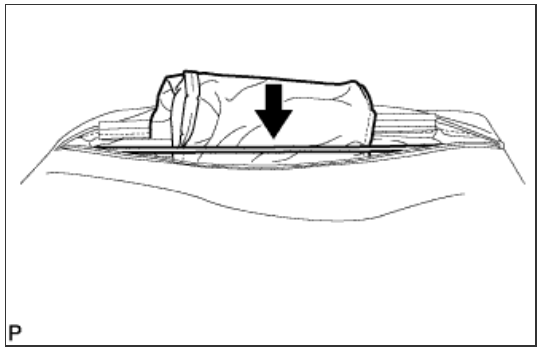


4. Attach the 2 hooks.

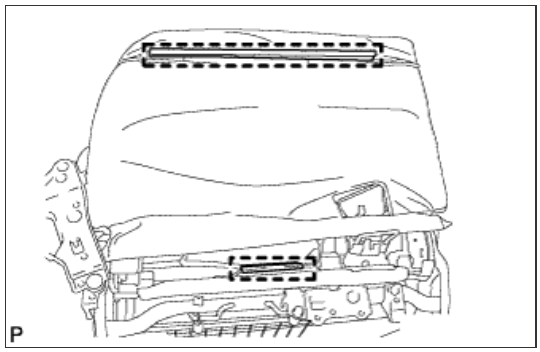


5. Close the fastener.


ii. w/o Rear Center Seat Headrest:

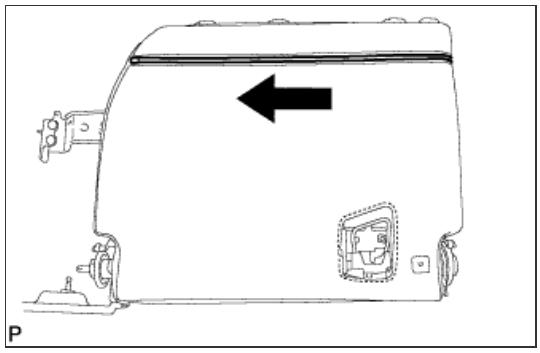

1. Attach the 4 claws to install the 2 headrest supports.
2. Install the rear seat protector.

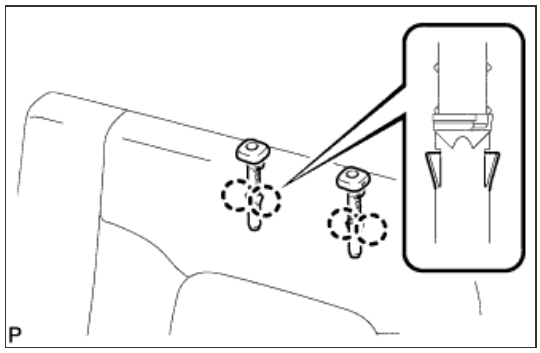


3. Attach the hook.

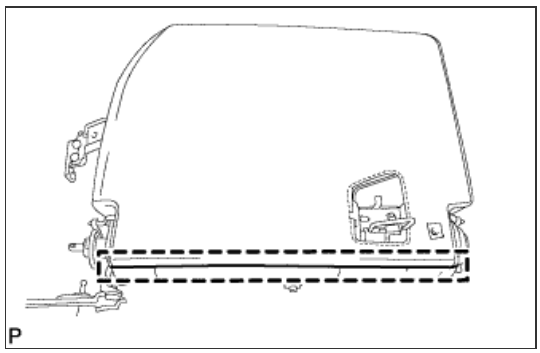


c. RH Side:

i. Attach the 4 claws to install the 2 headrest supports.

ii. Install the rear seat protector.

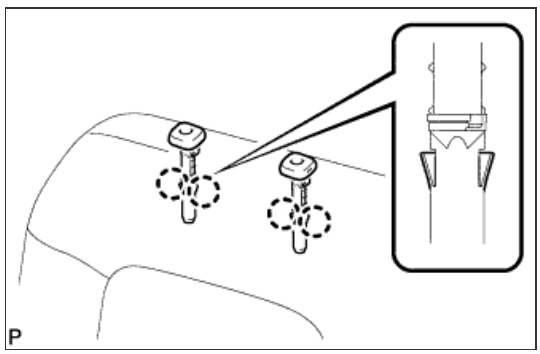


iii. Attach the hook.

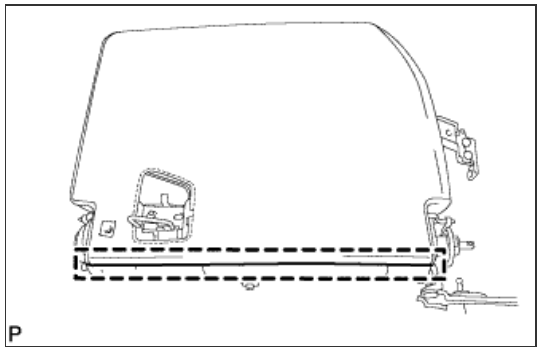

10. INSTALL REAR SEAT HEADREST HANDLE

a. Install the snap ring to the headrest handle.

b. Install the headrest handle to the headrest.

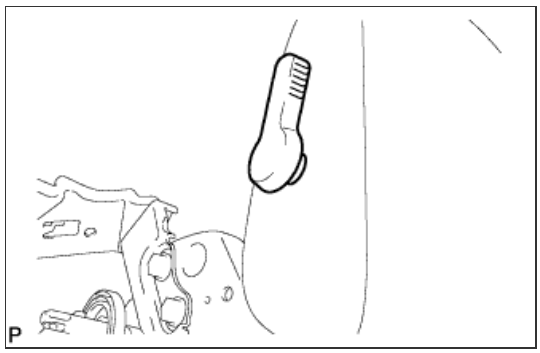

11. INSTALL REAR SEAT HEADREST ASSEMBLY (w/ Folding Headrest)


a. While releasing the lock inside the headrest support with a screwdriver, install the headrest.

HINT:

Tape the screwdriver tip before use.

Text in Illustration


	rotective Tape

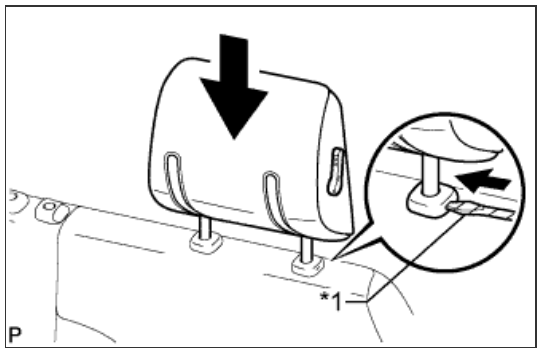

12. INSTALL REAR SEAT HEADREST ASSEMBLY (w/o Folding Headrest)


13. INSTALL REAR SEAT HINGE PAWL GUIDE

a. Install the guide with the screw.

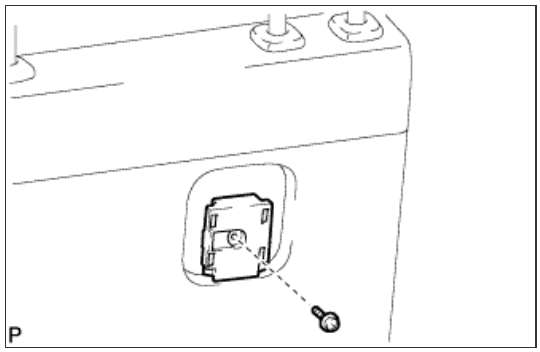


14. INSTALL REAR SEAT HINGE PAWL GUIDE

a. Attach the 5 claws to install the guide.

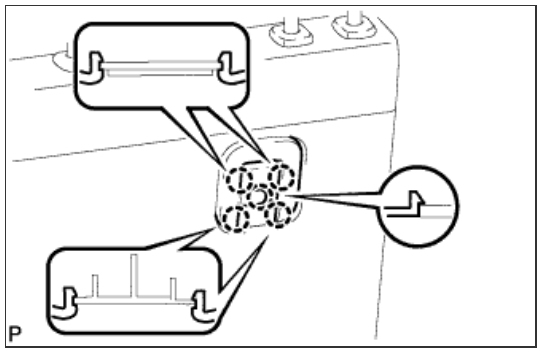


15. INSTALL REAR LOWER SEATBACK LOCK BEZEL

a. Attach the 3 claws and clip to install the seatback lock be el.

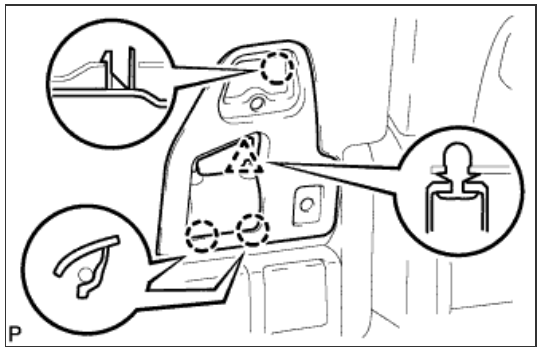


16. INSTALL REAR NO. 2 SEATBACK CUSHION

a. Install the seatback cushion with the screw.

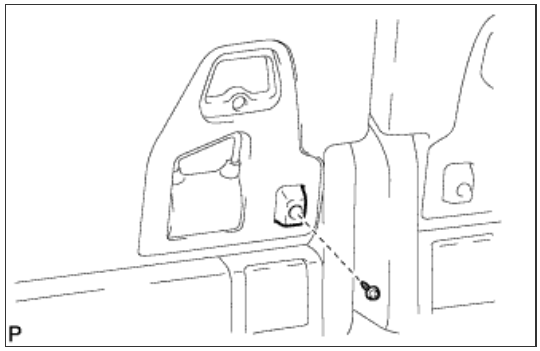


17. INSTALL NO. 3 FOLD SEAT LOCK CONTROL CABLE ASSEMBLY

a. Attach the 2 clamps to install the 2 cables.

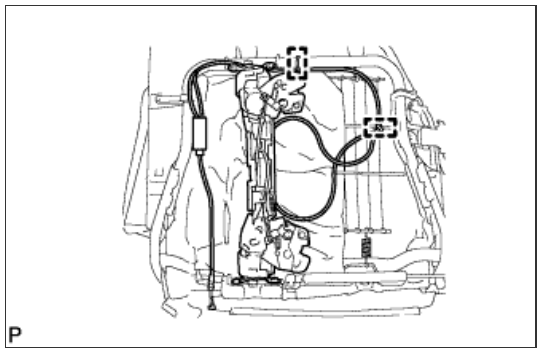


b. Attach the 2 cable clamps to connect the 2 cables.

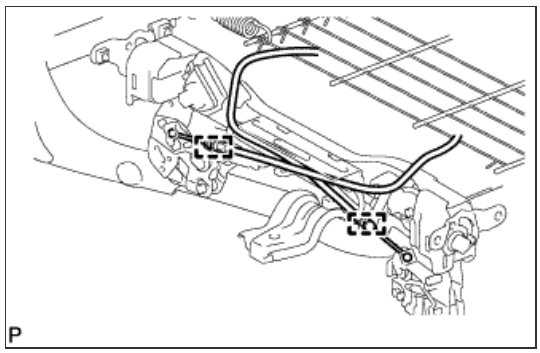

18. INSTALL NO. 2 SEAT STAY SUB-ASSEMBLY

a. Install the seat stay with the bolt.

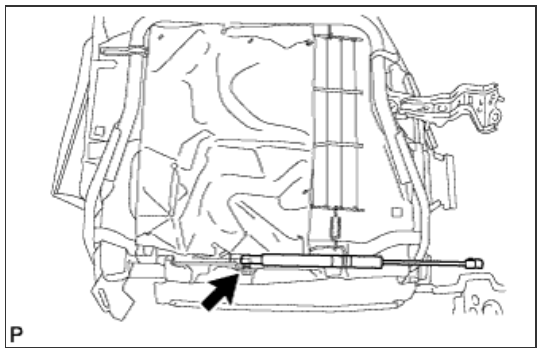

19. INSTALL NO. 3 SEAT CUSHION COVER SUB-ASSEMBLY LH

a. w/o Bottle Holder:

i. Attach the fastening tape to install the seatback cover.


ii. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

Text in Illustration

	og Ring Pliers
	astening Tape

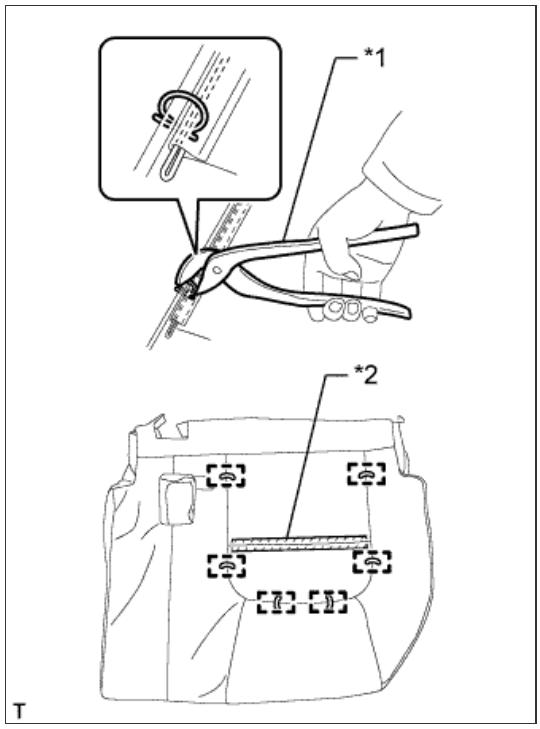

b. w/ Bottle Holder:

i. Attach the 3 fastening tapes to install the seatback cover.


ii. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

Text in Illustration

	og Ring Pliers
	astening Tape

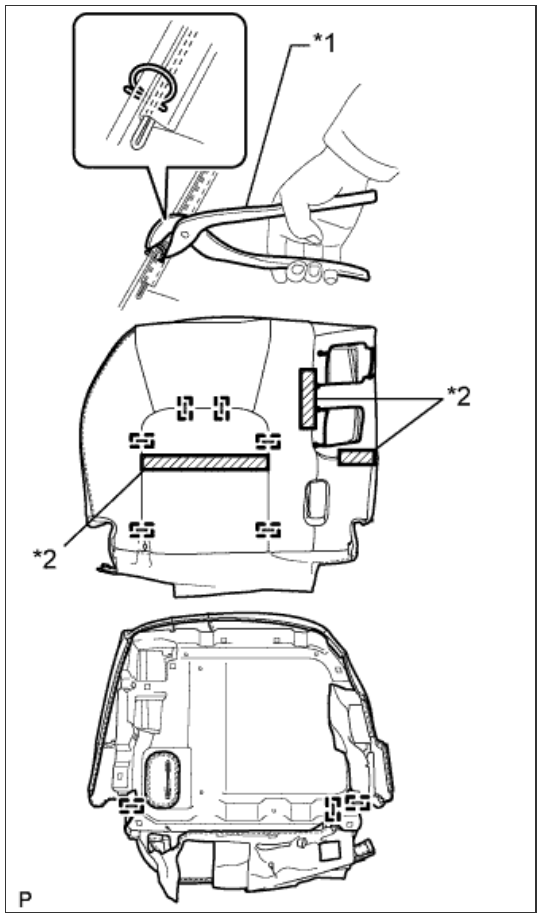


20. INSTALL NO. 3 SEAT CUSHION PAD LH

21. INSTALL SEAT CUSHION COVER WITH PAD


22. INSTALL NO. 2 BOTTLE HOLDER

a. Install the o. 2 bottle holder with the 2 screws.

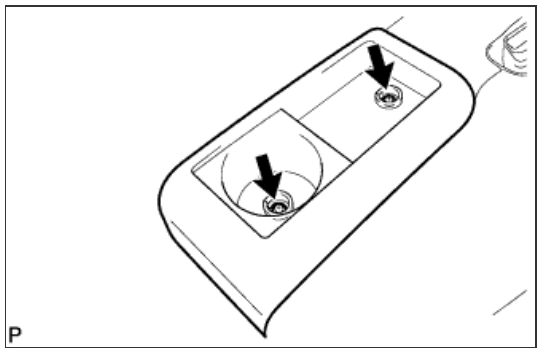


23. INSTALL CAP

a. Attach the 4 claws to install the 2 caps.

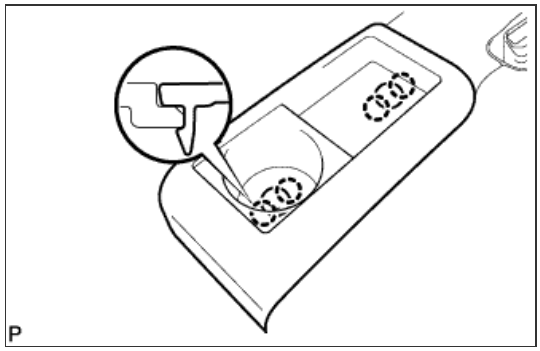


24. INSTALL REAR SEAT CUSHION CARPET

a. Install the seat cushion carpet with new tack pins.

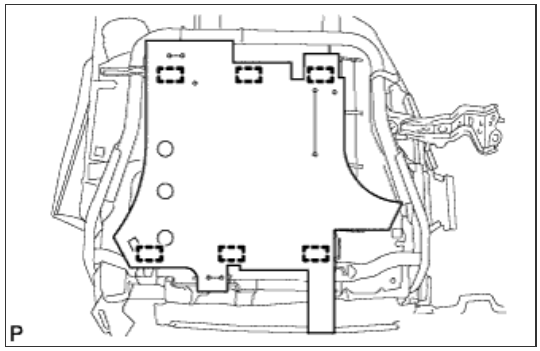

25. INSTALL REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Install the 2 belts.

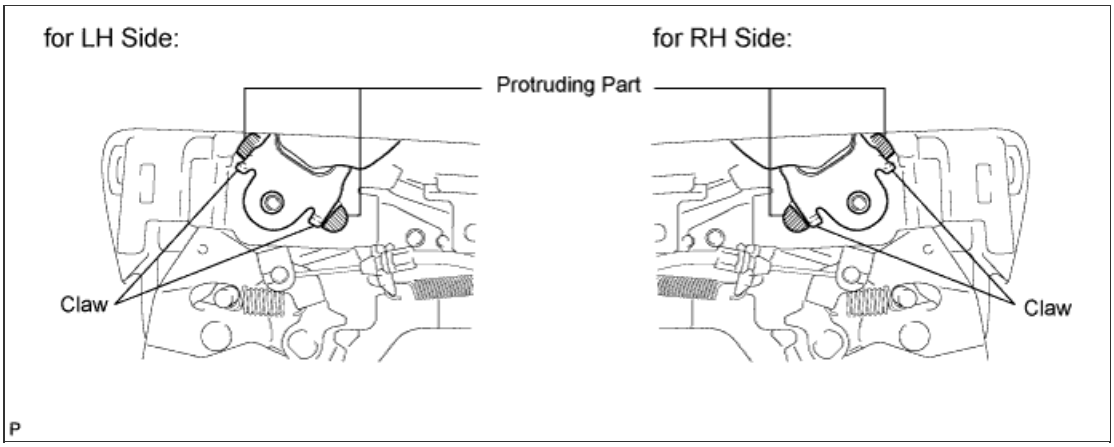

NOTICE:

- **Make sure the claws are facing away from the seat.**
- **Do not overlap the anchor part of the seat belt and protruding parts of the seat.**

26. INSTALL REAR CENTER SEAT INNER BELT LH (w/ Rear Center Seat Headrest)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

o not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:

The rear o. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, connect it when installing the rear seat inner belt.

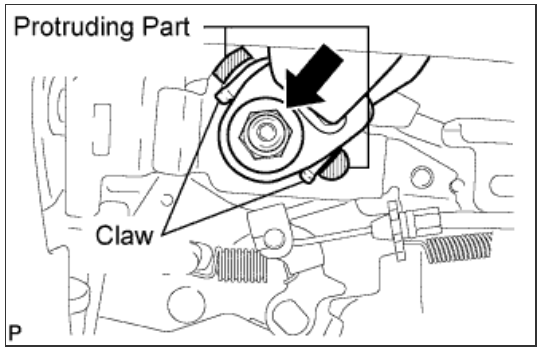

27. INSTALL REAR CENTER SEAT INNER BELT RH (w/ Rear Center Seat Headrest)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

o not overlap the anchor part of the seat belt and protruding parts of the seat.


HINT:

The rear o. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, connect it when installing the rear seat outer belt.

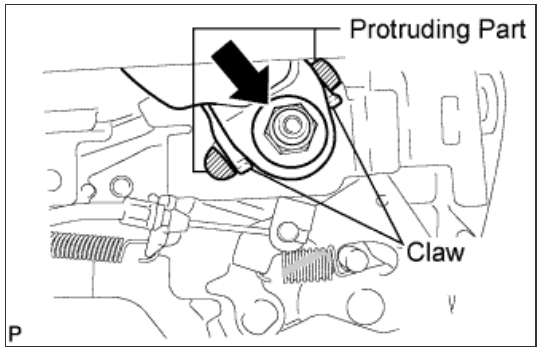


28. INSTALL SEAT CUSHION LOCK RELEASE LEVER ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

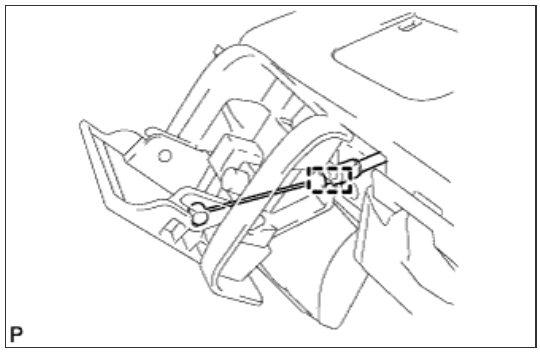


b. Attach the claw to install the release lever.

c. Install the screw.

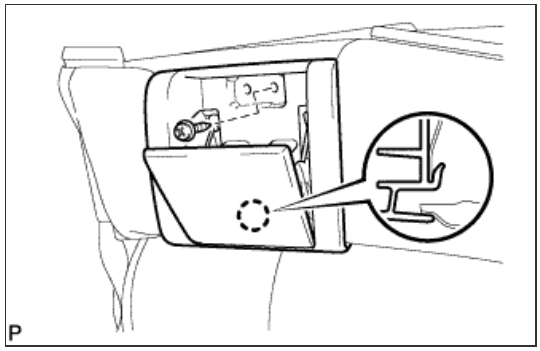

29. INSTALL SEAT STAND FRAME CAP


a. Attach the 2 claws to install the stand frame cap.

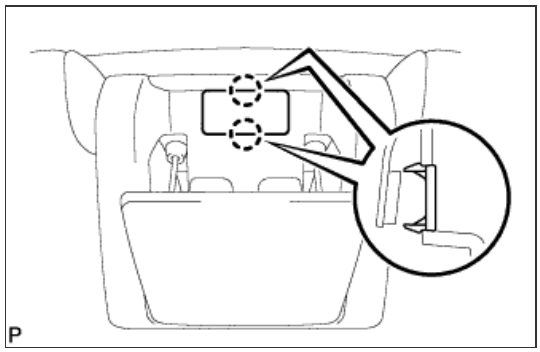

30. INSTALL REAR SEAT LOCK COVER LH

a. Attach the 2 clamps to install the cover.


b. Install the 2 screws.

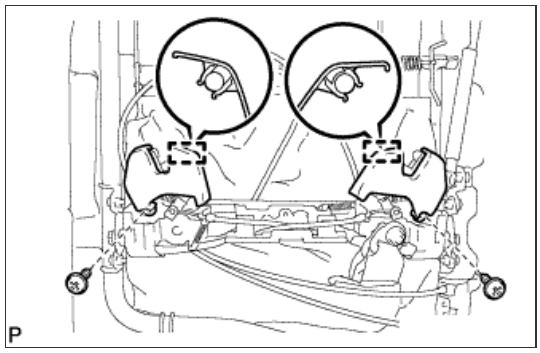

31. INSTALL NO. 3 SEAT LEG COVER NO. 2


a. Attach the 4 claws to install the cover.

b. Install the 2 screws.

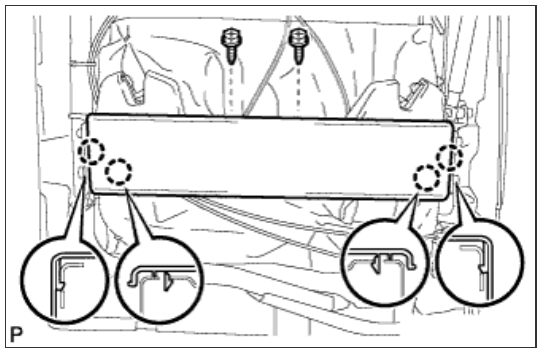


32. INSTALL NO. 3 SEAT FRONT BRACKET COVER LH

a. Attach the 4 claws to install the cover.

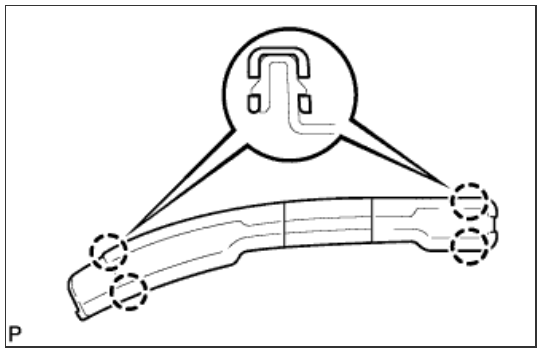


33. INSTALL REAR SEAT CUSHION UNDER COVER LH

a. Install the cover with the 7 screws.

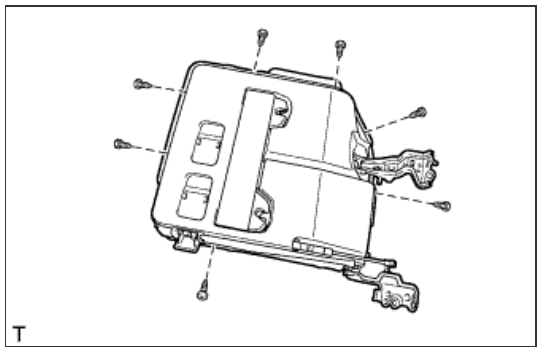


b. Attach the 16 claws.

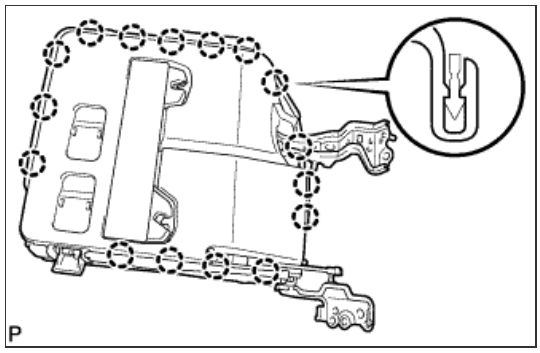

34. INSTALL 3RD SEAT CUSHION LOCK COVER


a. Attach the 4 claws to install the 2 covers.

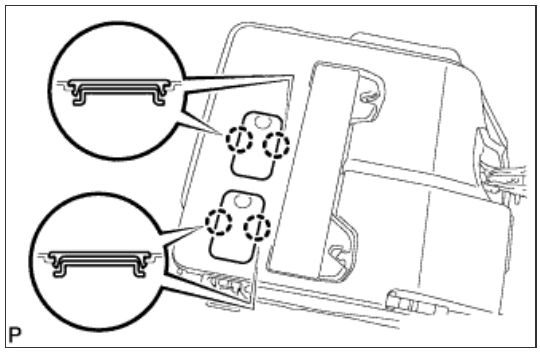

35. INSTALL 3RD SEAT LINK SUB-ASSEMBLY LH


a. Install the seat link with the bolt and nut.

Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

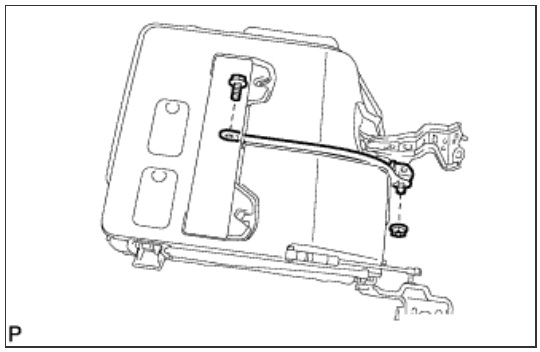


36. INSTALL NO. 2 SEAT LEG COVER NO. 2

a. Install the seat leg cover with the screw.

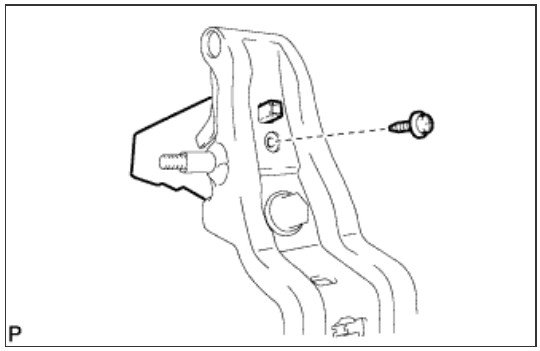


37. INSTALL REAR NO. 3 SEAT LEG COVER LH

a. Install the seat leg cover with the 2 screws.

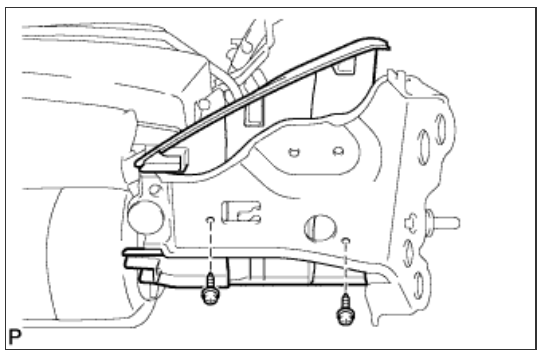

b. Install the spring of the seat stay ball-joint.

c. Connect the seat stay to the seat frame.

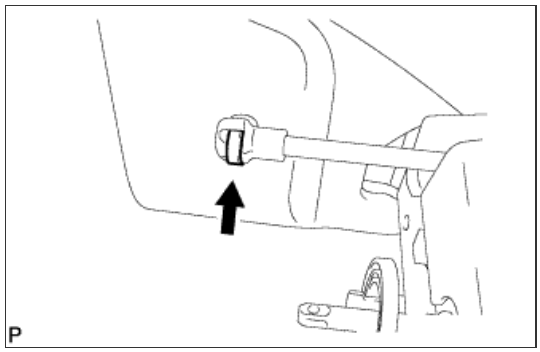


38. INSTALL REAR SEAT REAR BRACKET COVER REAR

a. Attach the 2 claws to install the cover.

39. INSTALL RECLINING ADJUSTER COVER RH

a. Attach the 5 claws in the order shown in the illustration to install the cover.


b. Install the screw.

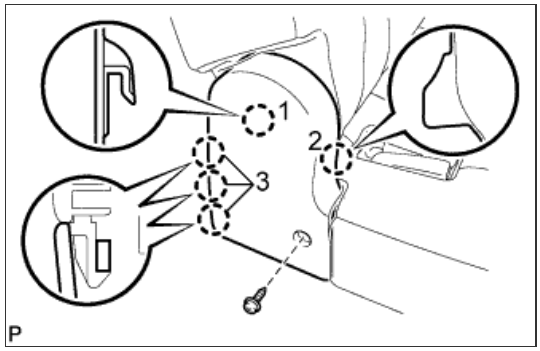

40. INSTALL RECLINING ADJUSTER COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the screw.

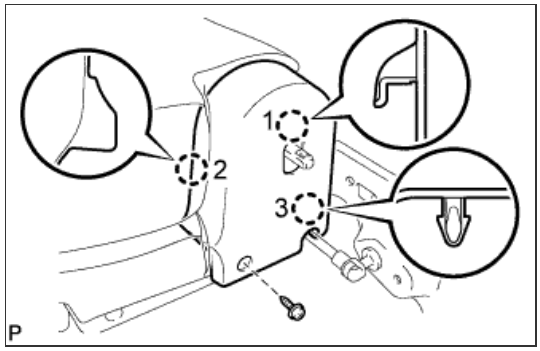


41. INSTALL NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

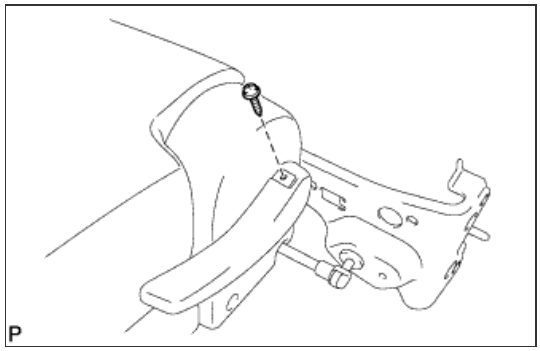

42. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

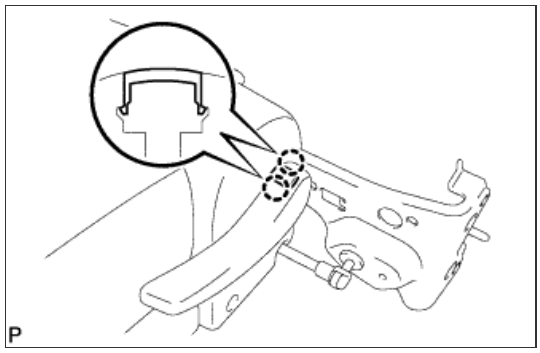

for Preparation Click here

HINT:


- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT LOCK STRIKER SUB-ASSEMBLY

a. Install the 4 seat lock strikers with bolts.


Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

b. Return the floor carpet to its original position.

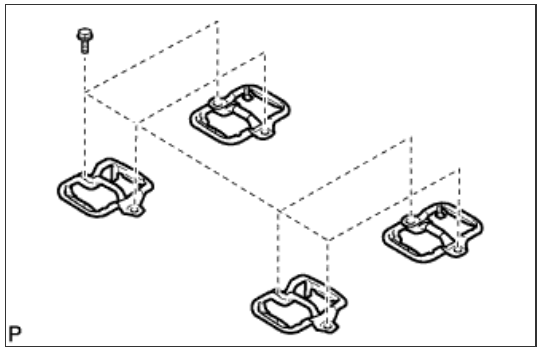

2. INSTALL NO. 3 SEAT CUSHION COVER

a. Attach the claws and 4 clips to install the 4 seat cushion covers.

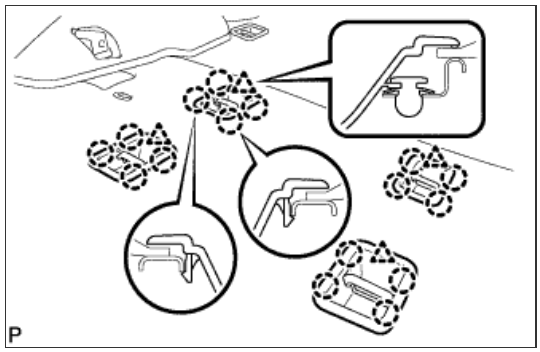


3. INSTALL FOLD SEAT LEG LOCK SUB-ASSEMBLY

a. Install the fold seat leg lock with the 2 nuts.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

b. Attach the 2 cable clamps.

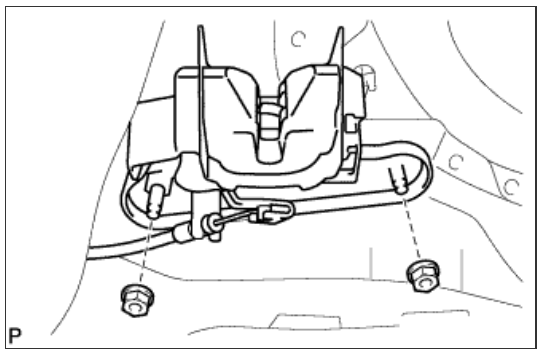


4. INSTALL REAR ROOF NO. 1 AIR DUCT (w/ Rear Air Conditioning System)

a. Install the duct with the clip.

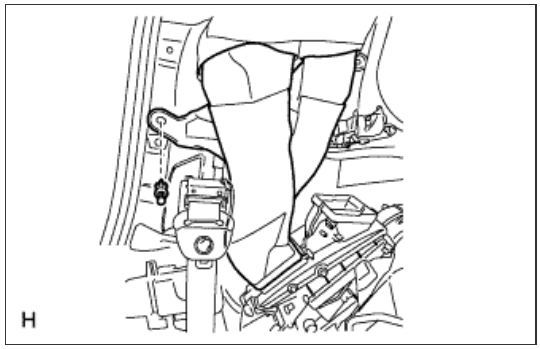

b. Attach the 2 claws to install the cooler plate.

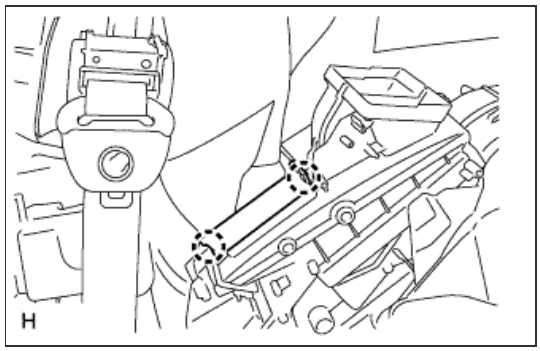

INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the seat lock control lever.

INSTALL FRONT UARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).


b. w/o Sliding Roof:
Install the front quarter trim panel assembly LH (Click here).

7. INSTALL REAR SEAT COVER CAP

HINT:


Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

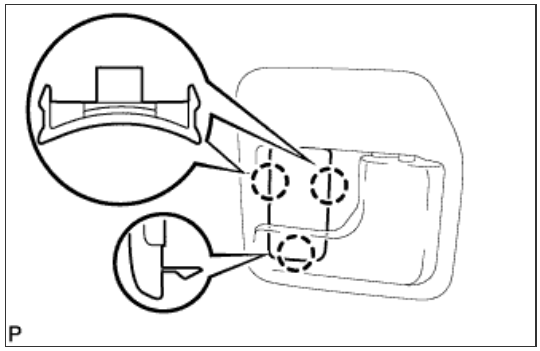

8. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE


a. Attach the 6 clips to install the support plate.

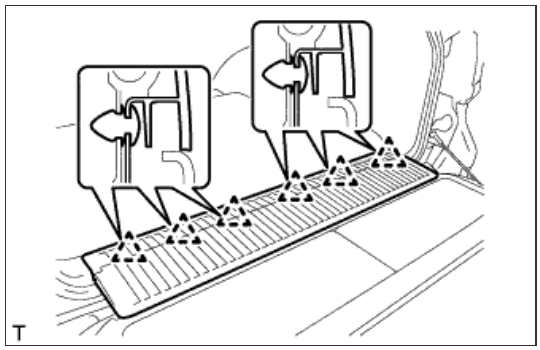

9. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

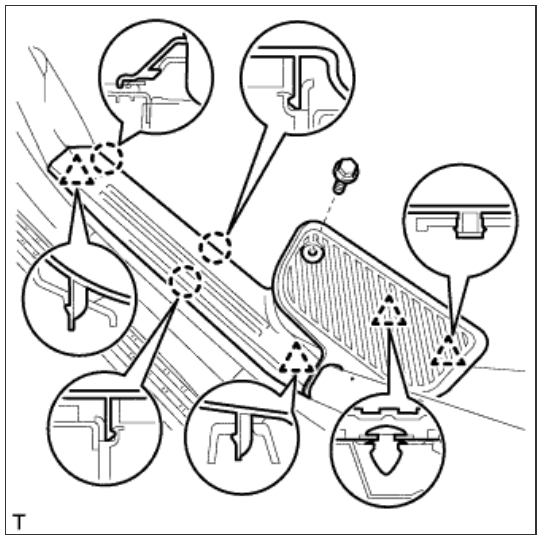


10. INSTALL REAR STEP COVER

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

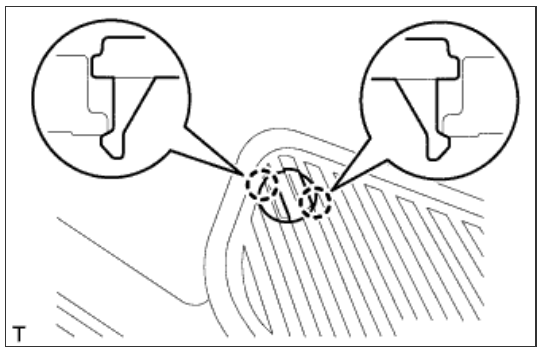

11. INSTALL REAR NO. 2 SEAT ASSEMBLY

a. Temporarily install the seat assembly with the 4 bolts.


NOTICE:

Be careful not to damage the vehicle body.

b. Tighten the bolts in the order shown in the illustration.


Torque:

37 N*m{ 377 kgf*cm , 27 ft.*lbf }

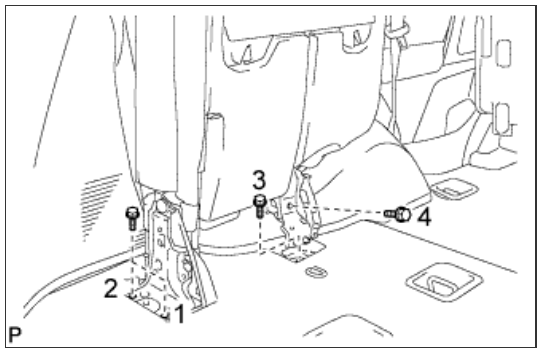

12. INSTALL REAR NO. 2 SEAT HINGE COVER LH


a. Attach the clip and 2 claws to install the cover.

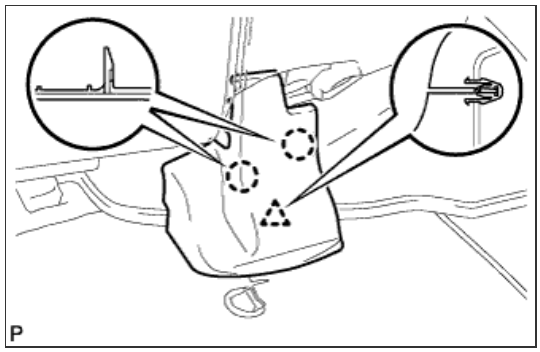

13. INSTALL REAR SEAT CUSHION HINGE COVER LH

a. Attach the 3 claws to install the cover.

b. Return the seat to the upright position.

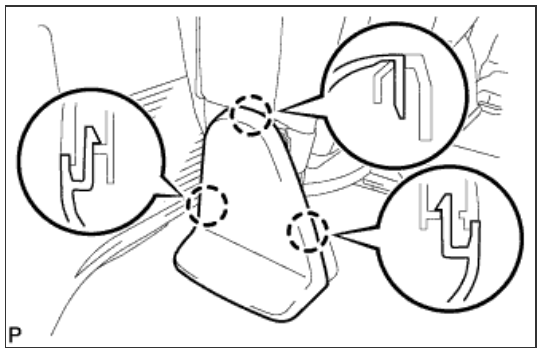

14. INSTALL REAR NO. 2 SEAT HEADREST ASSEMBLY LH

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT LOCK STRIKER SUB-ASSEMBLY

a. Install the 4 seat lock strikers with bolts.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

b. Return the floor carpet to its original position.

2. INSTALL NO. 3 SEAT CUSHION COVER

a. Attach the 16 claws and 4 clips to install the 4 seat cushion covers.

3. INSTALL FOLD SEAT LEG LOCK SUB-ASSEMBLY


a. Install the fold seat leg lock with the 2 nuts.

Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }


b. Attach the 2 cable clamps.

4. INSTALL REAR ROOF NO. 1 AIR DUCT (w/ Rear Air Conditioning System)

a. Install the duct with the clip.

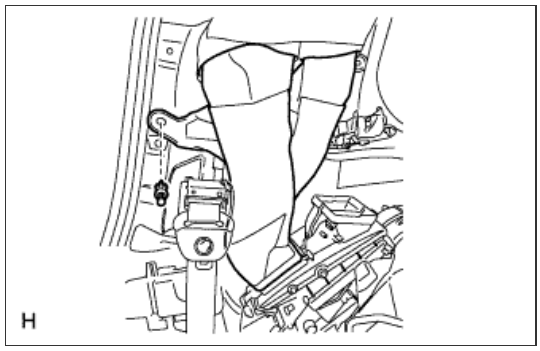

b. Attach the 2 claws to install the cooler plate.

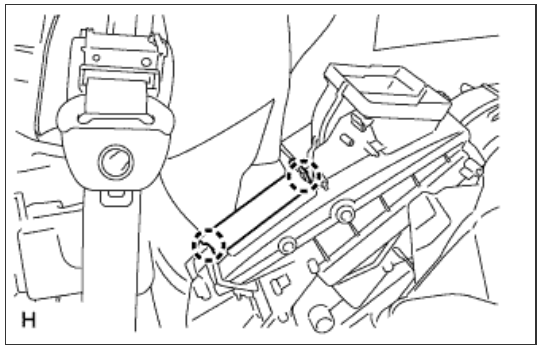

INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the seat lock control lever.

INSTALL FRONT UARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel assembly LH (lick here).


b. w/o Sliding Roof:
Install the front quarter trim panel assembly LH (lick here).

7. INSTALL REAR SEAT COVER CAP

HINT:


Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

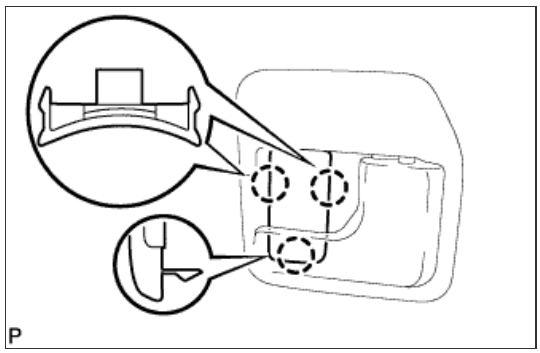

8. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE


a. Attach the 6 clips to install the support plate.

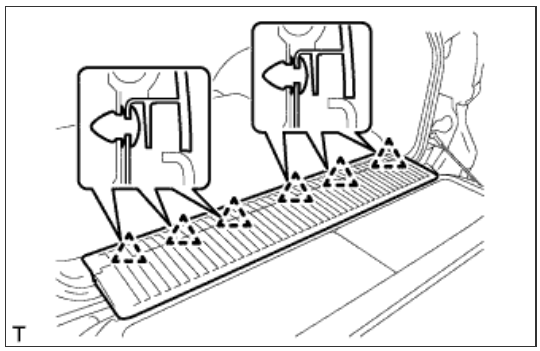

9. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

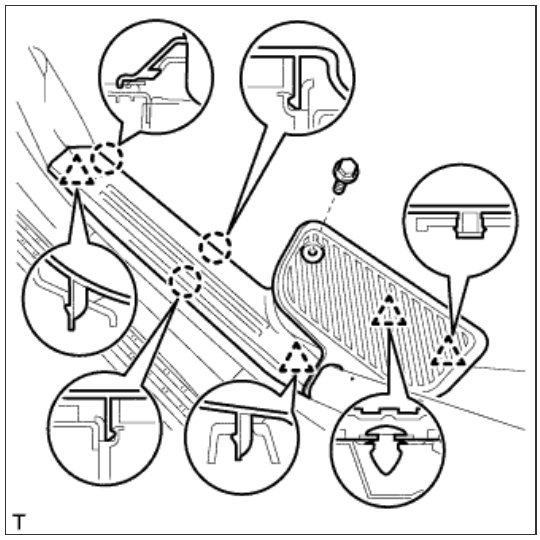


10. INSTALL REAR STEP COVER

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

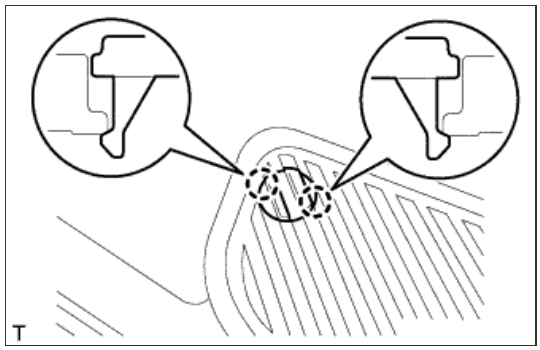

11. INSTALL REAR NO. 2 SEAT ASSEMBLY


a. emporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.

b. ighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

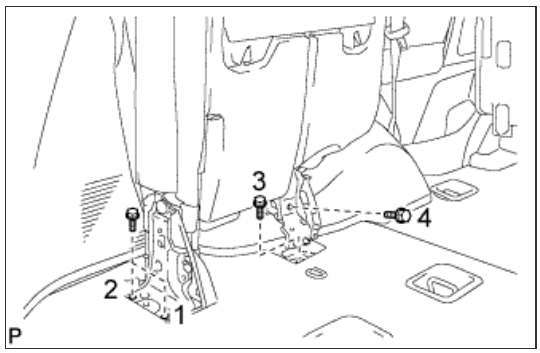

12. INSTALL REAR NO. 2 SEAT HINGE COVER LH

a. Attach the clip and 2 claws to install the cover.

13. INSTALL REAR SEAT CUSHION HINGE COVER LH

a. Attach the 3 claws to install the cover.

b. Return the seat to the upright position.

14. INSTALL REAR NO. 2 SEAT HEADREST ASSEMBLY LH (w/ Rear Center Seat Headrest)

for Preparation Click here


HINT:

- **Use the same procedures for the LH side and RH side**
- **The procedures listed below are for the LH side.**

1. DISPOSE OF NO. 2 SEAT STAY SUB-ASSEMBLY

a. Horizontally fix the seat stay in a vise with the piston-rod pulled out.

b. Wear safety glasses. Gradually cut a part between A and B shown in the illustration using a metal saw and gradually release the gas.

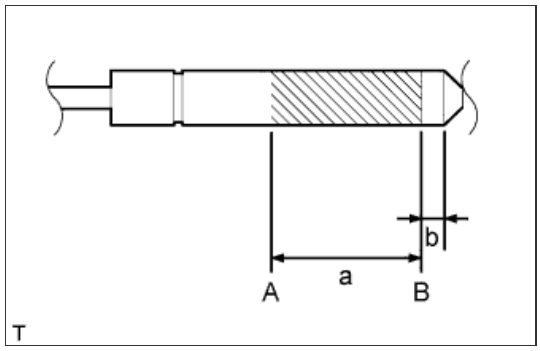

Standard:

Area	Specified Condition
a	80 mm (3.15 in.)
b	10 mm (0.394 in.)

CAUTION:


As metal debris may be blown outward by the gas, you must:

- **Wear protective glasses.**
- **Cover the area being cut.**

NOTICE:

The gas inside the seat stay is colorless, odorless and harmless. There is a possibility that metal debris could scatter, so cover the part with a piece of cloth or other material.

for Preparation Click here

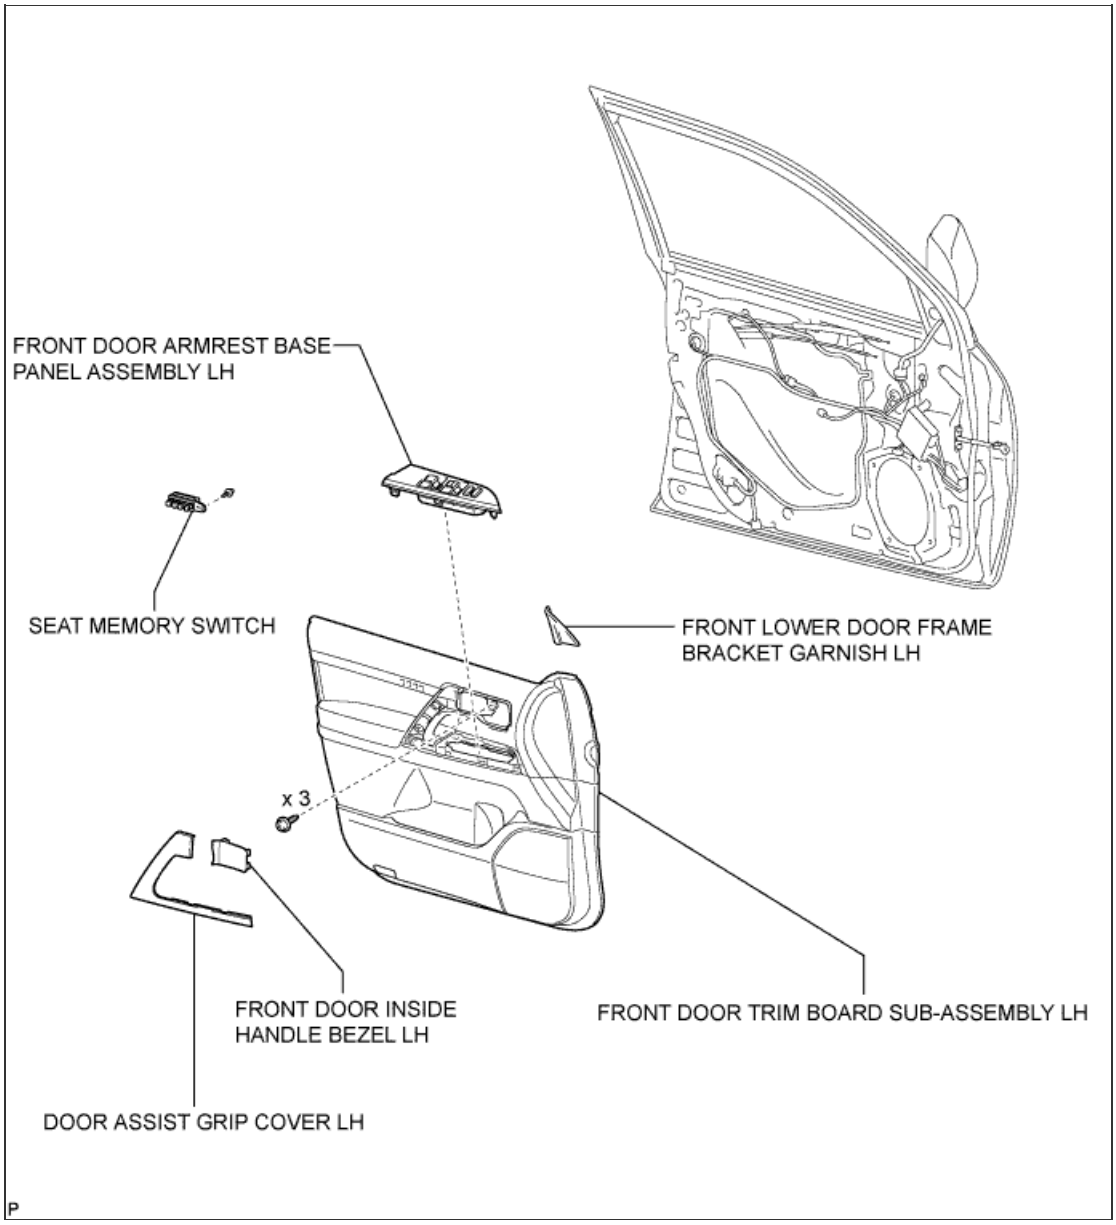


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Detach the clip and claw, remove the front lower door frame bracket garnish.

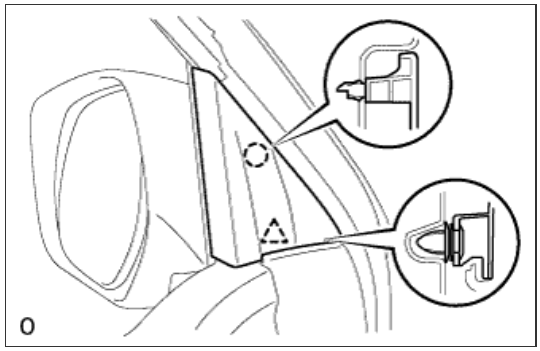


2. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle be el.

HINT:


Tape the screwdriver tip before use.

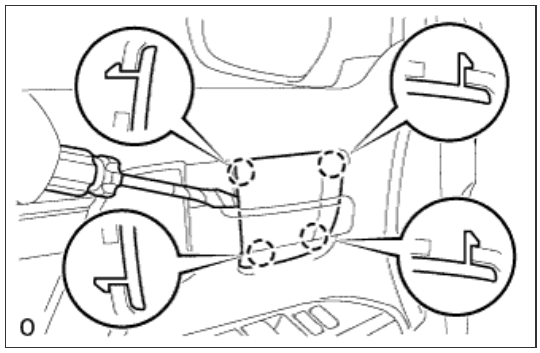

3. REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Using a moulding remover, detach the 5 claws.

b. Disconnect the connector and remove the front door armrest base panel and multiple network master switch.

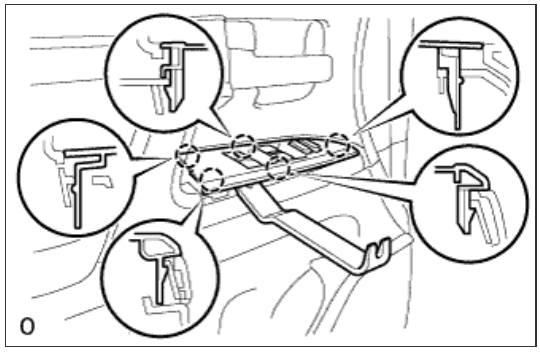

. REMOVE DOOR ASSIST GRIP COVER LH

a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

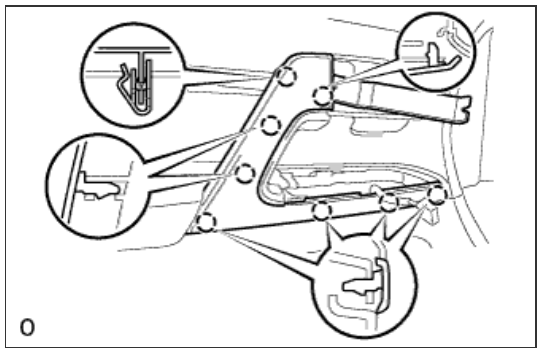


. REMOVE FRONT DOOR TRIM BOARD SUB ASSEMBLY LH


a. Remove the 3 screws.

b. Remove the 13 clips, 4 claws and trim board.

c. Disconnect the connector.

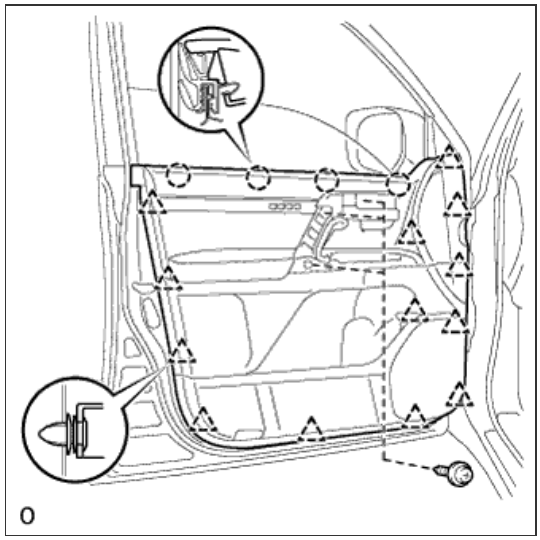


d. Disconnect the 2 cables from the inside handle.

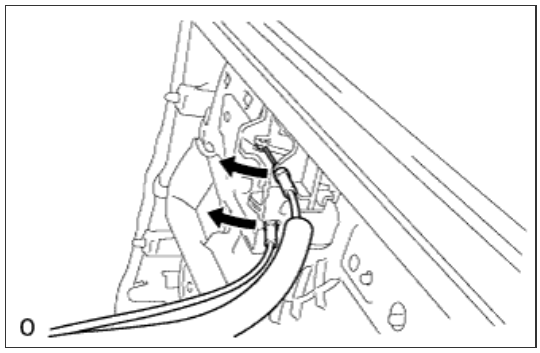

. REMOVE SEAT MEMORY SWITCH

a. Disconnect the connector.

b. Remove the screw and seat memory switch.

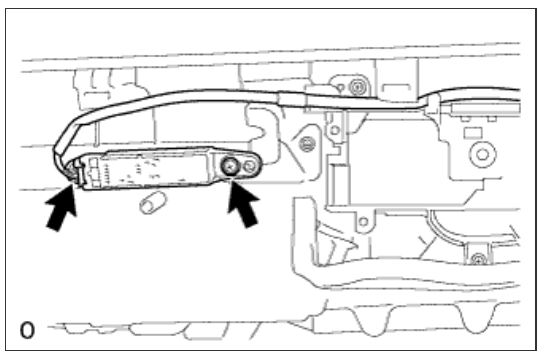


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Detach the clip and claw, remove the front lower door frame bracket garnish.

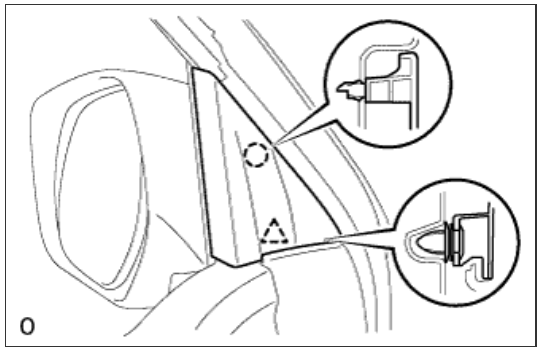


2. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle be el.

HINT:


Tape the screwdriver tip before use.

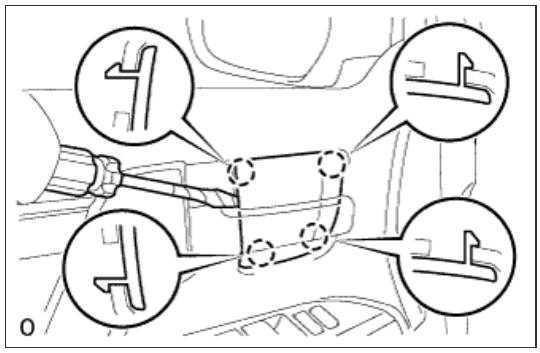

3. REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Using a moulding remover, detach the 5 claws.

b. Disconnect the connector and remove the armrest base panel.

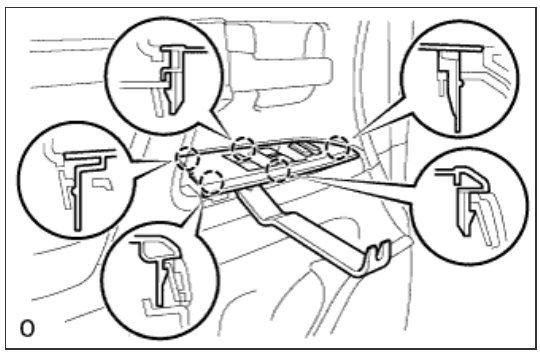

. REMOVE DOOR ASSIST GRIP COVER LH

a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

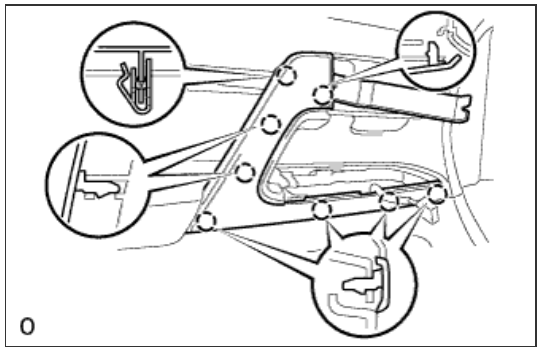


. REMOVE FRONT DOOR TRIM BOARD SUB ASSEMBLY LH


a. Remove the screws.

b. Remove the 1 clips, 4 claws and trim board.

c. Disconnect the connector.

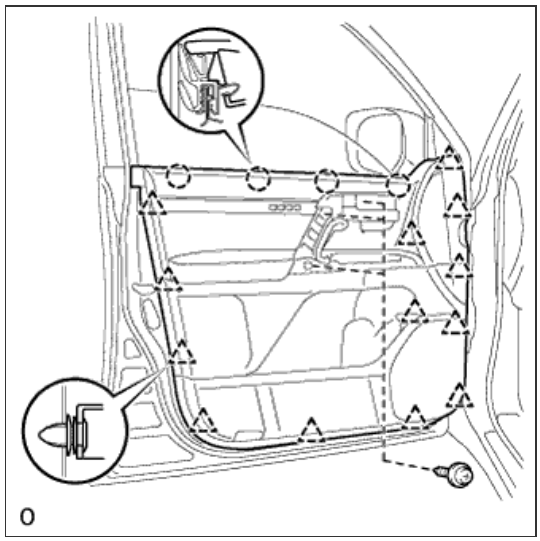


d. Disconnect the 2 cables from the inside handle.

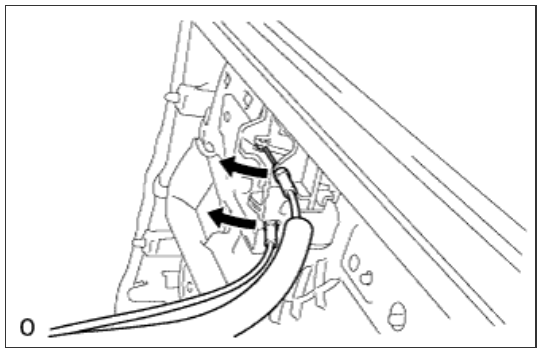

. REMOVE SEAT MEMORY SWITCH

a. Disconnect the connector.

b. Remove the screw and seat memory switch.

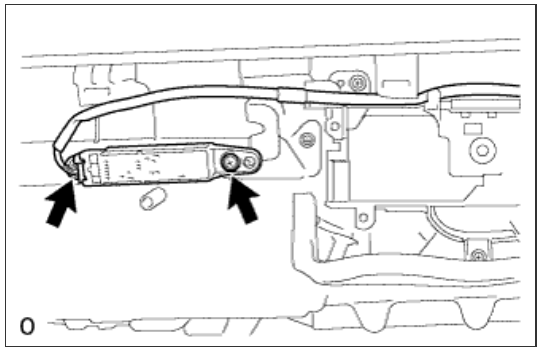


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Detach the clip and claw, remove the front lower door frame bracket garnish.

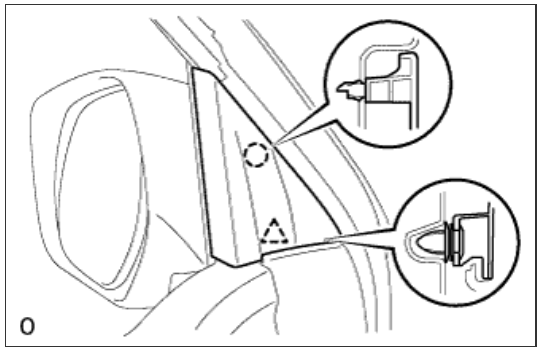


2. REMOVE FRONT DOOR INSIDE HANDLE BEZEL LH

a. Using a screwdriver, detach the 4 claws and remove the inside handle be el.

HINT:


Tape the screwdriver tip before use.

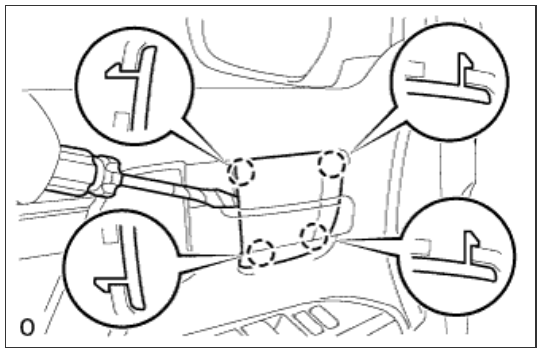

3. REMOVE FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Using a moulding remover, detach the 5 claws.

b. Disconnect the connector and remove the armrest base panel.

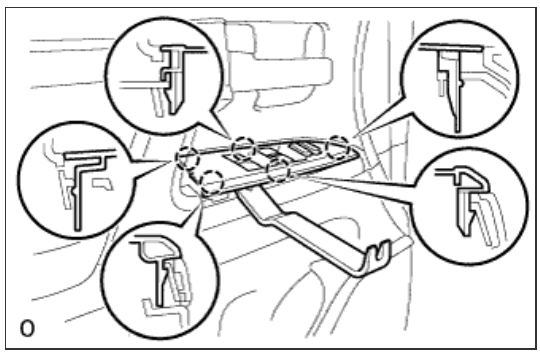

. REMOVE DOOR ASSIST GRIP COVER LH

a. Using a moulding remover, detach the 8 claws and remove the door assist grip cover.

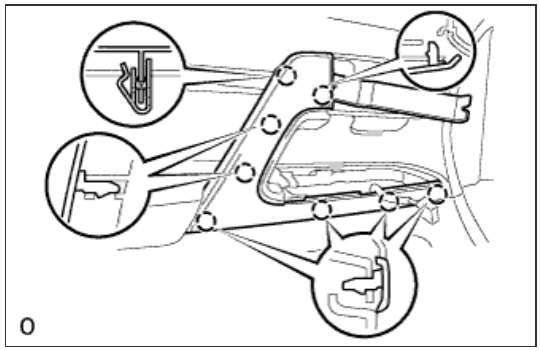


. REMOVE FRONT DOOR TRIM BOARD SUB ASSEMBLY LH


a. Remove the screws.

b. Remove the 1 clips, 4 claws and trim board.

c. Disconnect the connector.

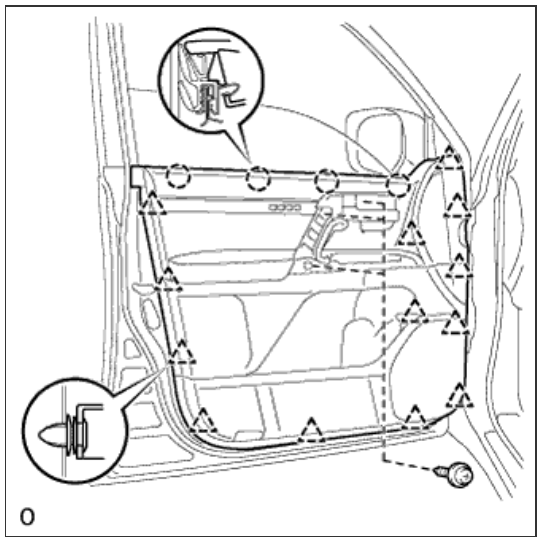


d. Disconnect the 2 cables from the inside handle.

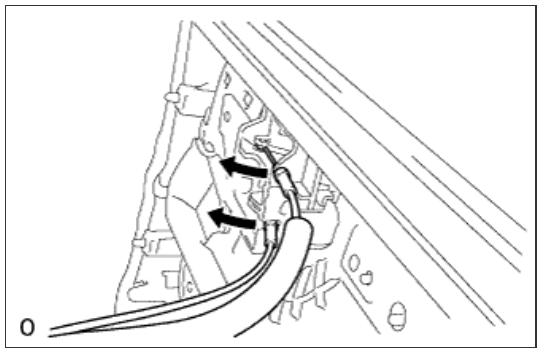

. REMOVE SEAT MEMORY SWITCH

a. Disconnect the connector.

b. Remove the screw and seat memory switch.

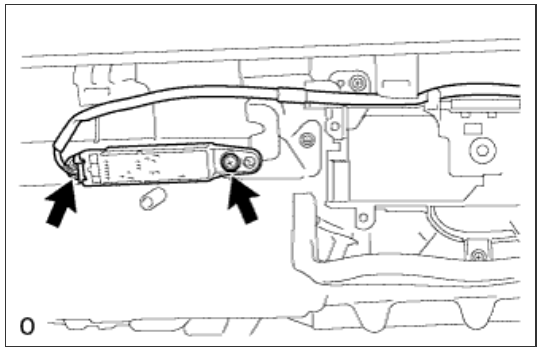

for Preparation Click here


INSPECT SEAT MEMORY SWITCH

a Measure the resistance according to the value(s) in the table below.

Stan ar Resistance

Tester Connection	Switch Condition	Specified Condition
(M1) - 6 (E)	1 switch pressed	Below 1 Ω
3 (M2) - 6 (E)	2 switch pressed	
2 (M3) - 6 (E)	3 switch pressed	
5 (MR - 6 (E)	SET switch pressed	

If the result is not as specified, replace the seat e ory switch.

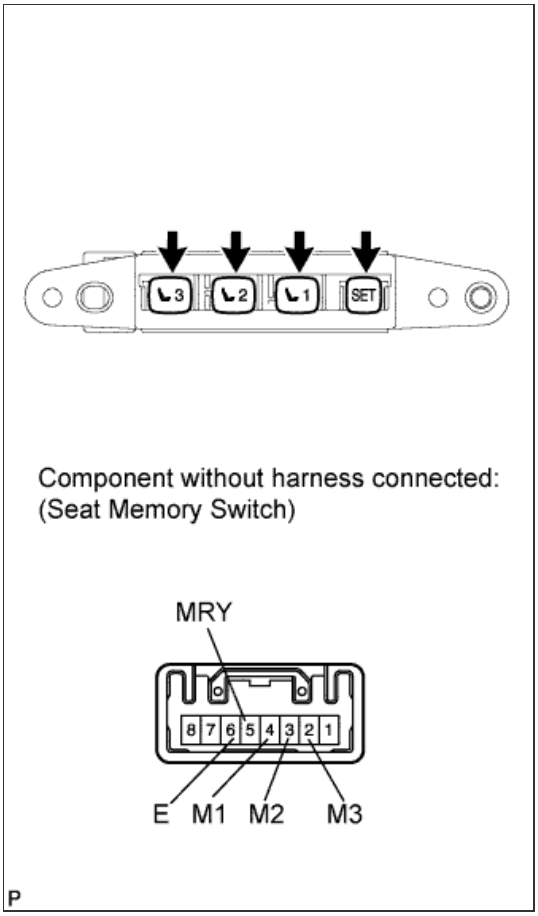

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL SEAT MEMORY SWITCH

a. Install the seat memory switch the screw.


b. Connect the connector.

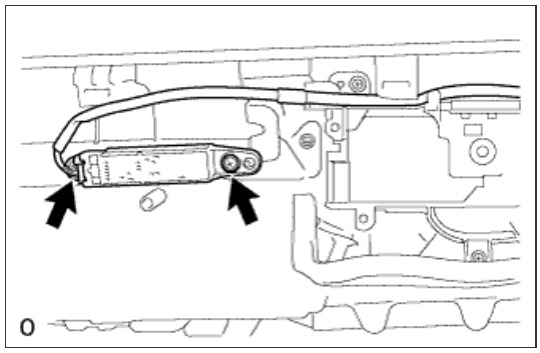

2. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

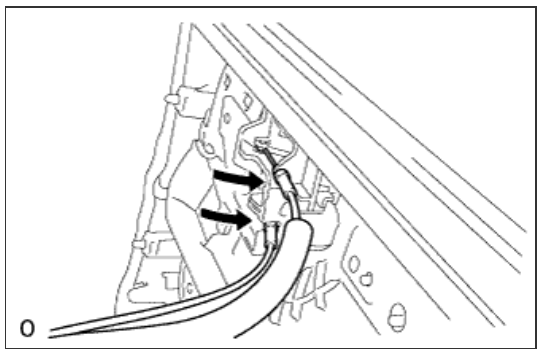


c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.

d. Install the 3 screws.

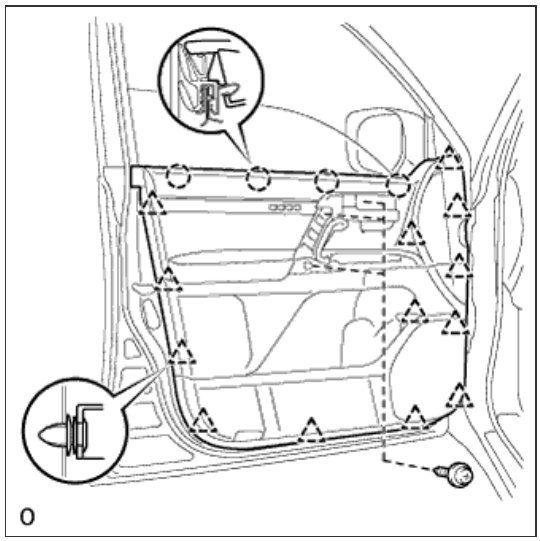

3. INSTALL DOOR ASSIST GRIP COVER LH


a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

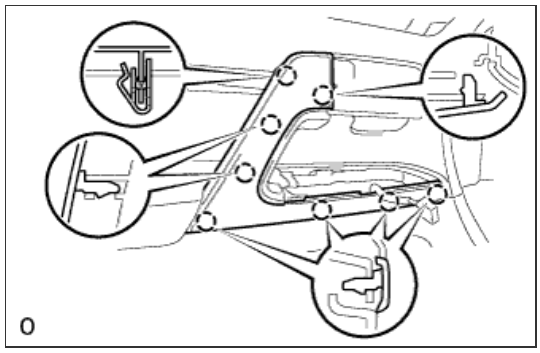

4. INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Connect the connector.

b. Attach the 5 claws and install the front door armrest base panel.

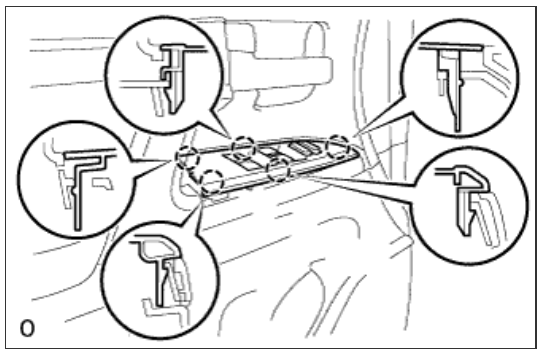


INSTALL FRONT DOOR INSIDE HANDLE BE EL LH

a. Attach the 4 claws to install the bezel.

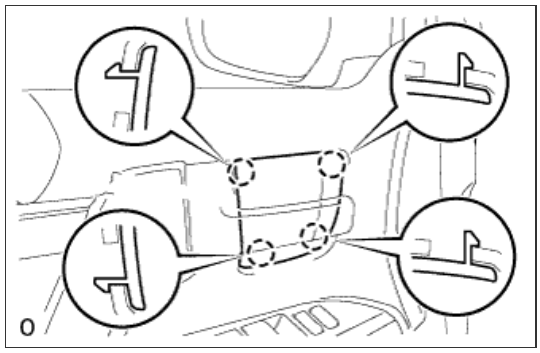

6. INSTALL FRONT LOWER DOOR FRAME BRAC ET GARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

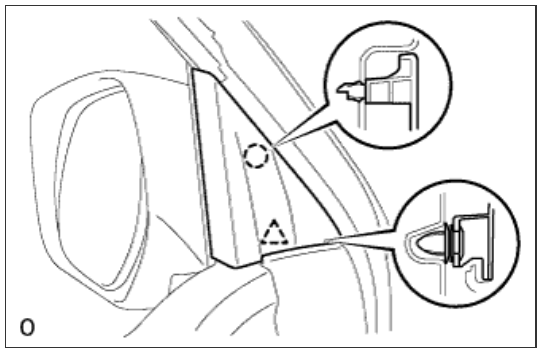
0

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL SEAT MEMORY SWITCH

a. Install the seat memory switch the screw.


b. Connect the connector.

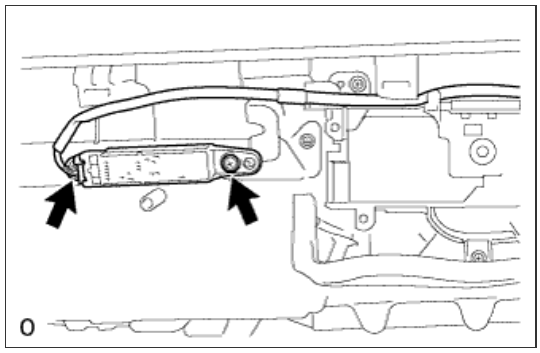

2. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

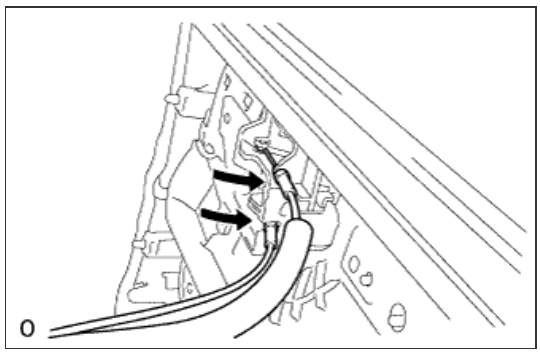


c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.

d. Install the 3 screws.

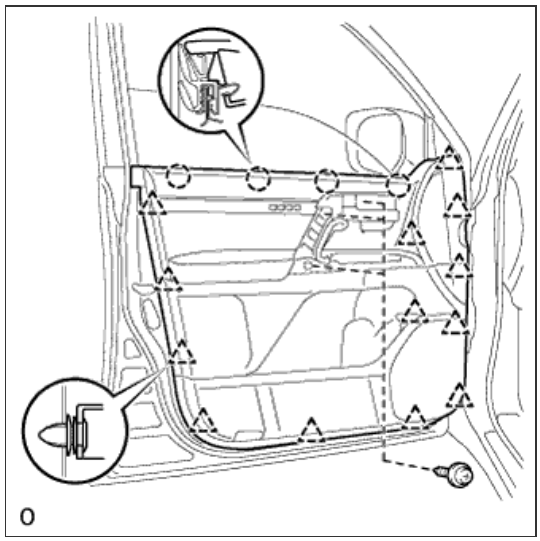

3. INSTALL DOOR ASSIST GRIP COVER LH


a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

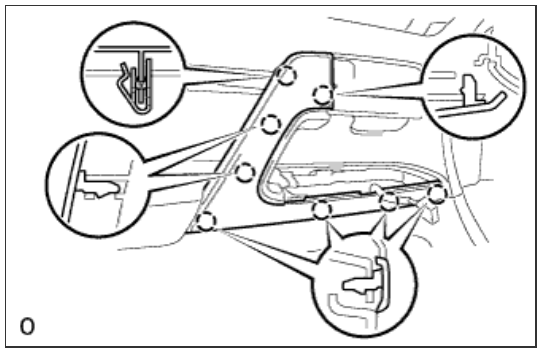

4. INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Connect the connector.

b. Attach the 5 claws to install the armrest base panel.

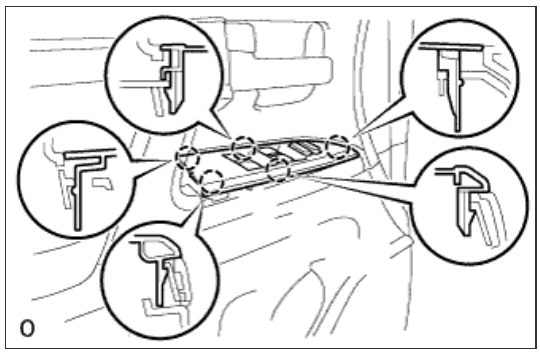


INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH

a. Attach the 4 claws to install the bezel.

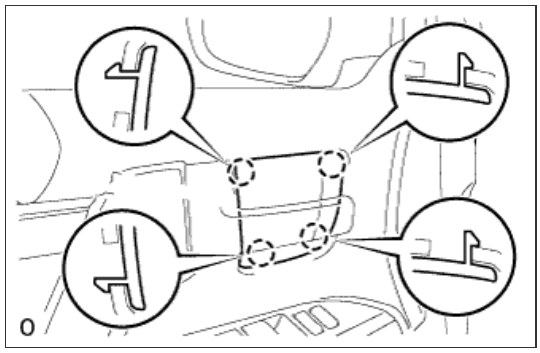

6. INSTALL FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

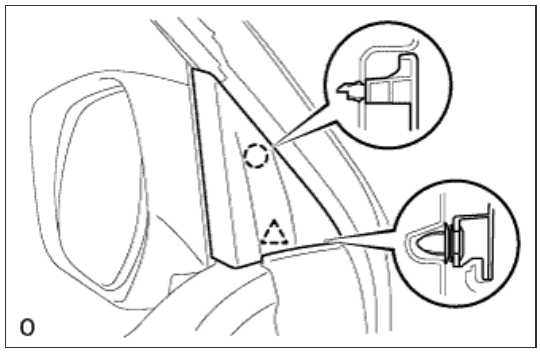
0

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL SEAT MEMORY SWITCH

a. Install the seat memory switch the screw.


b. Connect the connector.

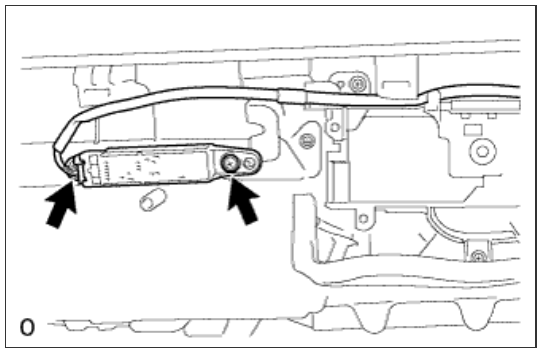

2. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY LH


a. Connect the connector.

b. Connect the front door lock remote control cable and front door inside locking cable to the front door inside handle sub-assembly.

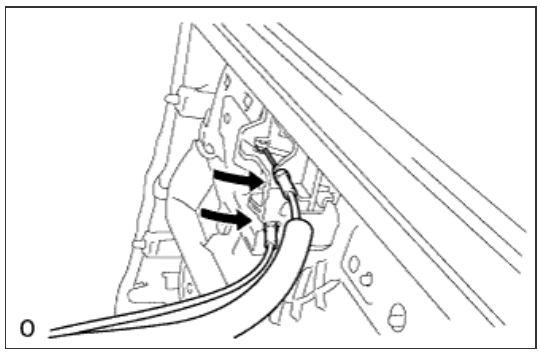


c. Attach the 4 claws and 13 clips to install the front door trim board sub-assembly.

d. Install the 3 screws.

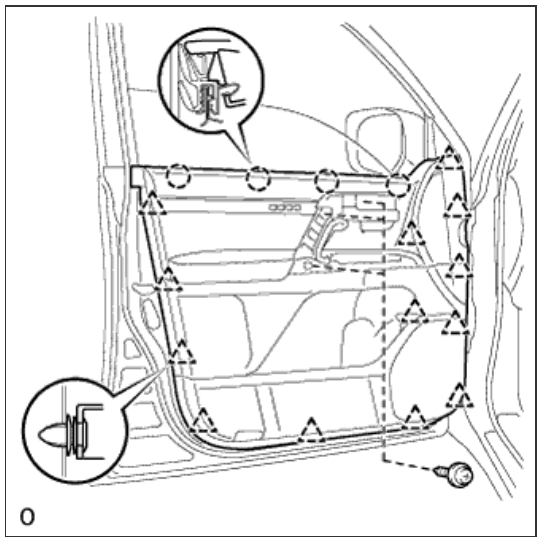

3. INSTALL DOOR ASSIST GRIP COVER LH


a. Attach the 8 claws to install the door assist grip cover to the door trim panel.

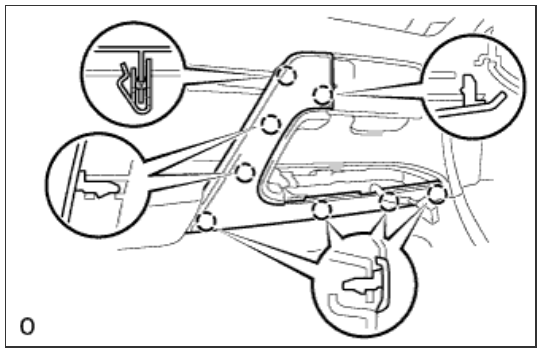

4. INSTALL FRONT DOOR ARMREST BASE PANEL ASSEMBLY LH


a. Connect the connector.

b. Attach the 5 claws to install the armrest base panel.

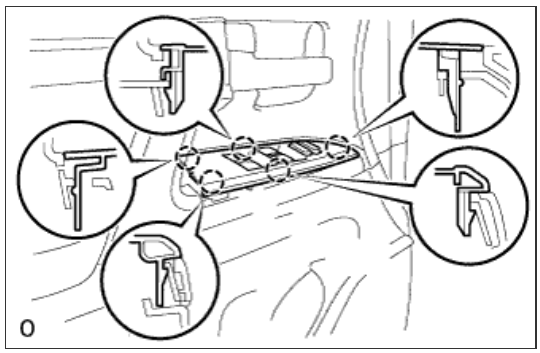


INSTALL FRONT DOOR INSIDE HANDLE BEZEL LH

a. Attach the 4 claws to install the bezel.

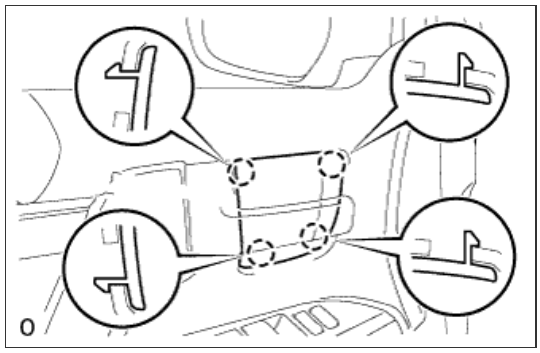



6. INSTALL FRONT LOWER DOOR FRAME BRACKET GARNISH LH

a. Attach the clip and claw, and install the front door lower frame bracket garnish.

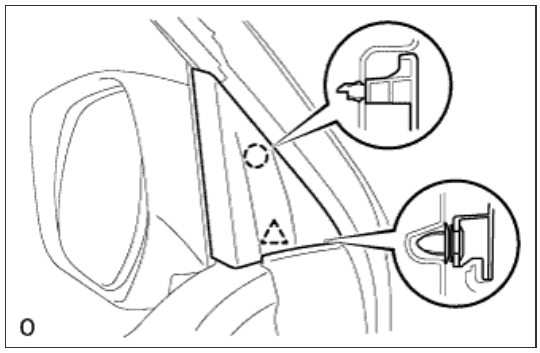
0

for Preparation Click ere

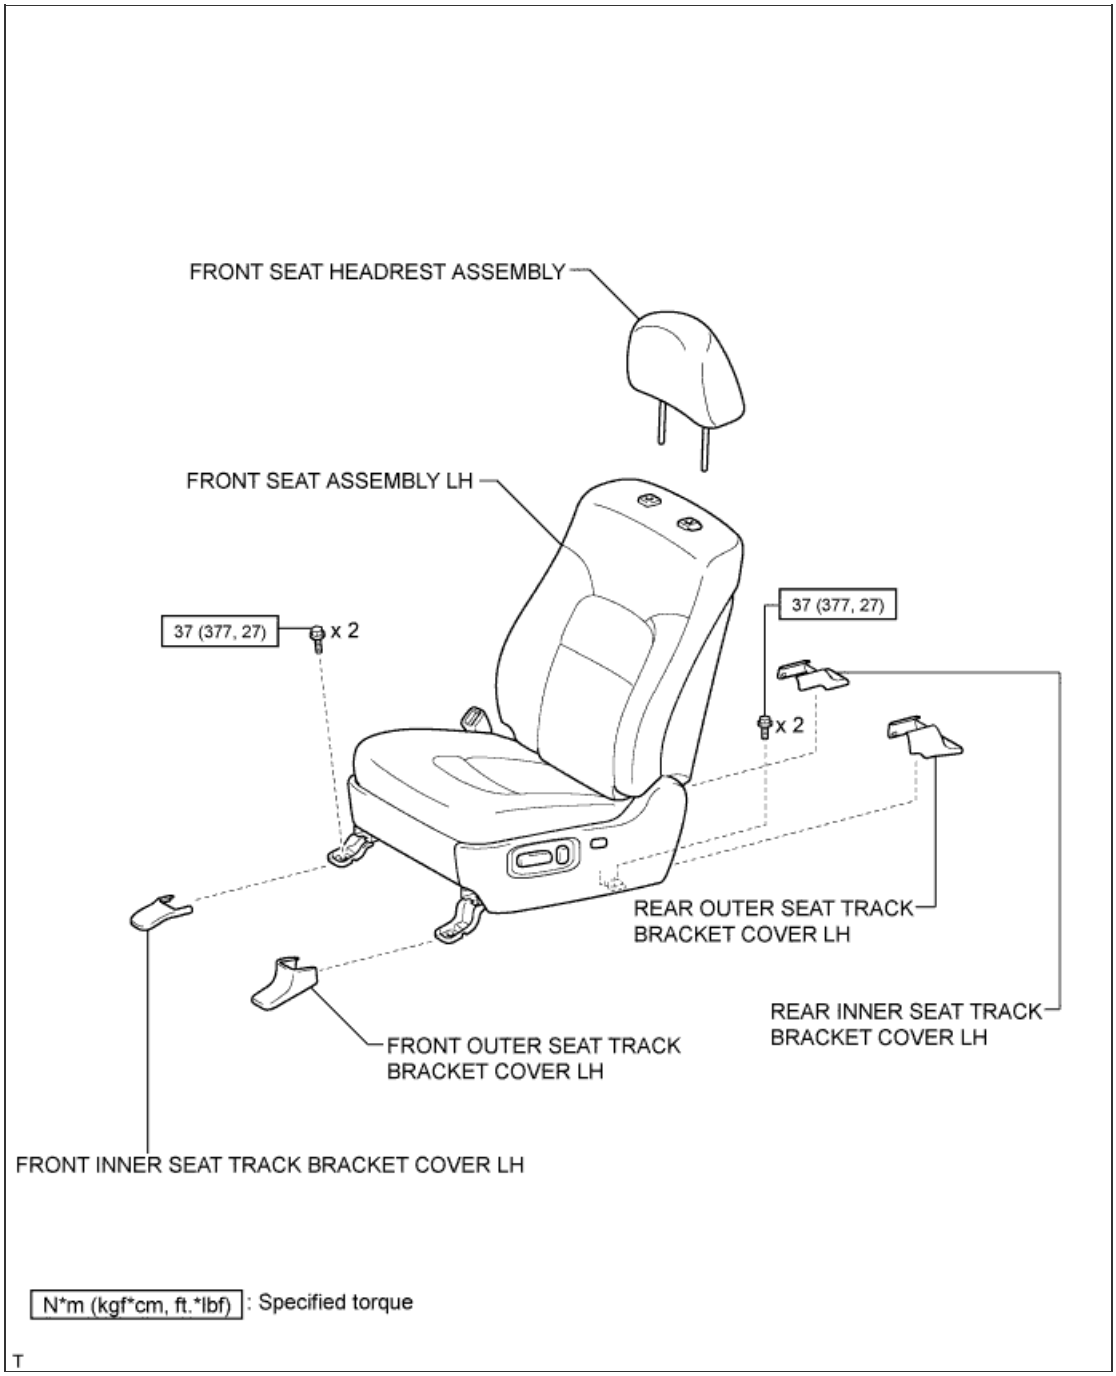

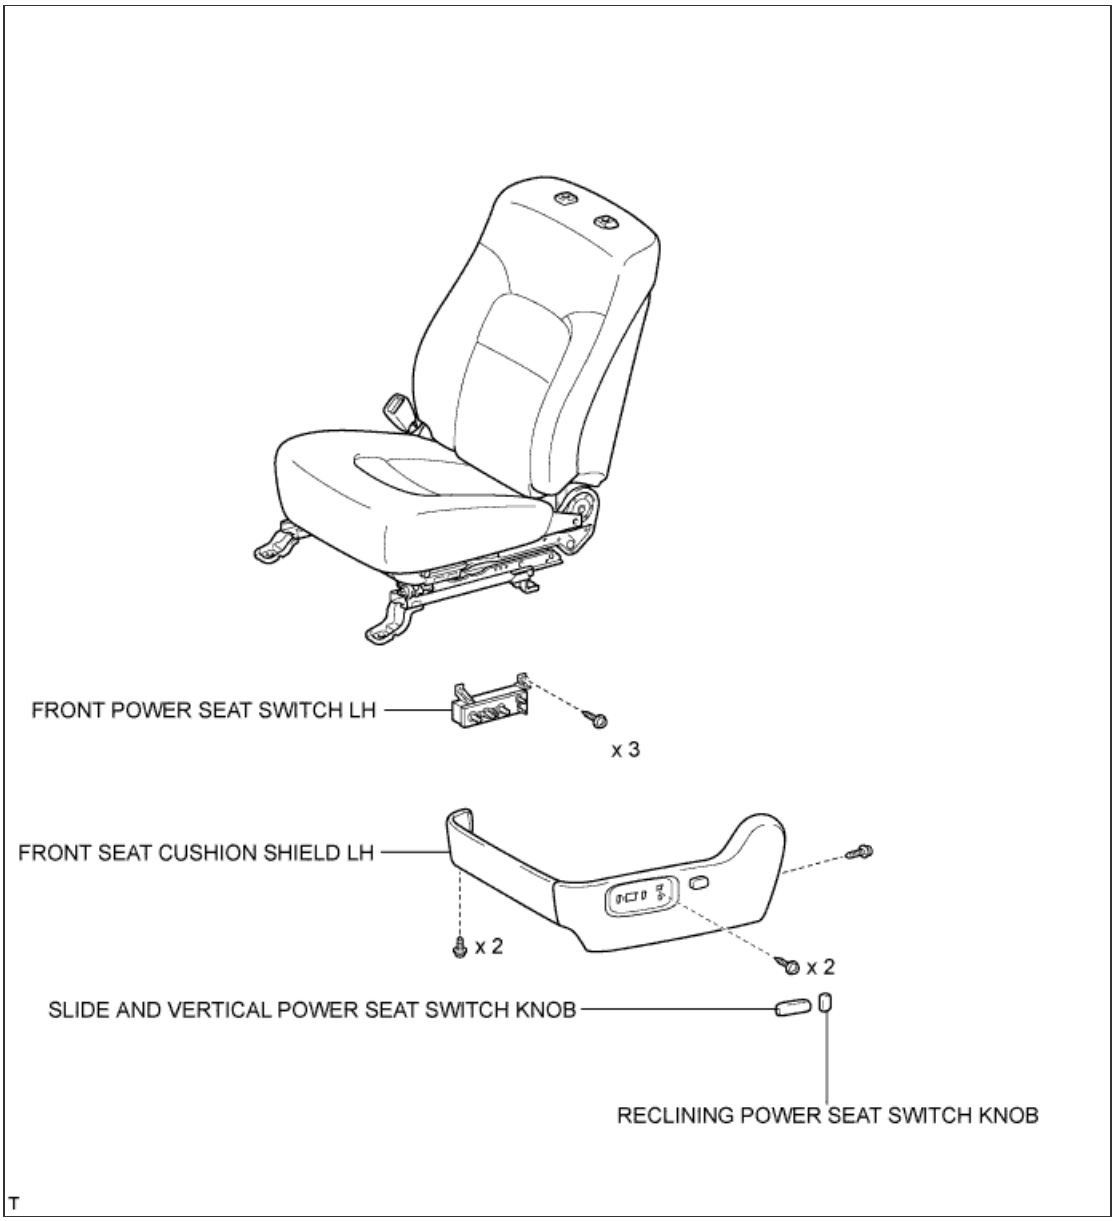
FRONT POWER SEAT SWITCH LH
x 3
FRONT SEAT CUSHION SHIELD LH
x 2
x 2
SLIDE AND VERTICAL POWER SEAT SWITCH KNOB
RECLINING POWER SEAT SWITCH KNOB
T

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

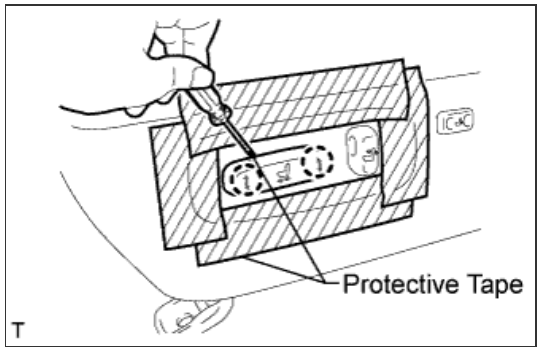


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

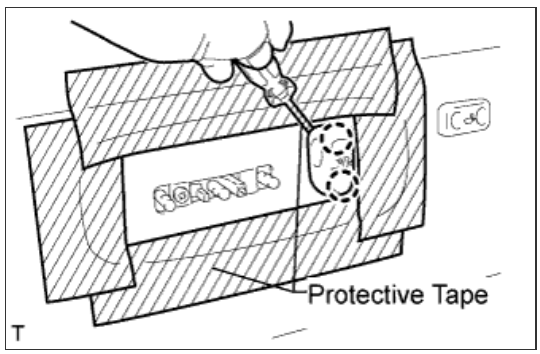

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

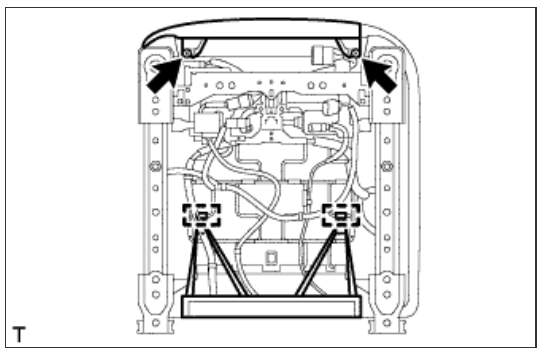

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side
isconnect the power seat lumbar switch connectors.

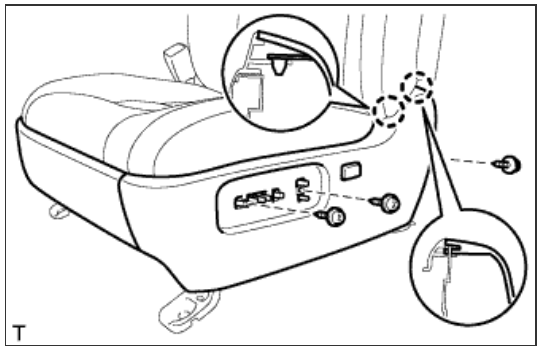

REMOVE RO TPOWER SEAT SWITCH LH

a. Disconnect the switch connector.

b. Remove the 3 screws and switch.

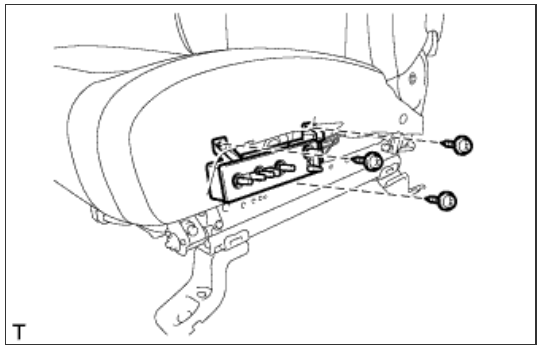

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

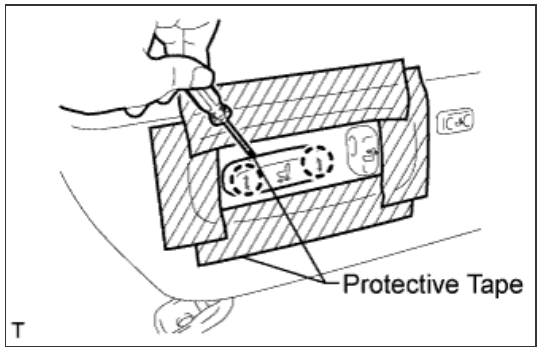


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

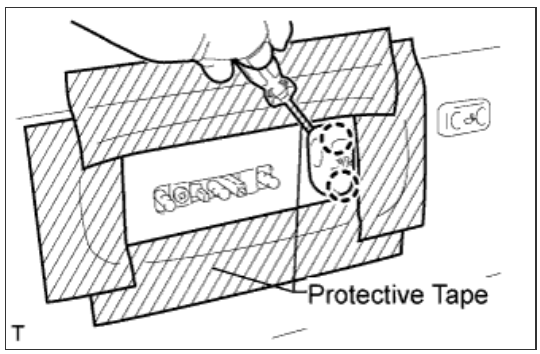

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

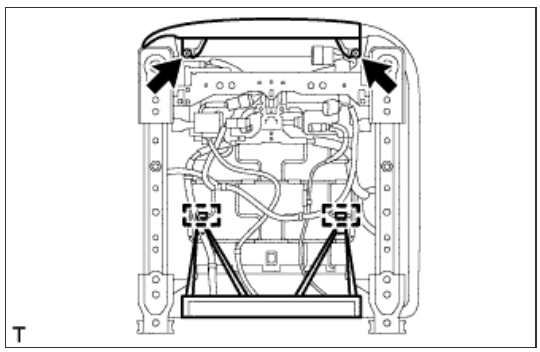

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side
isconnect the power seat lumbar switch connectors.

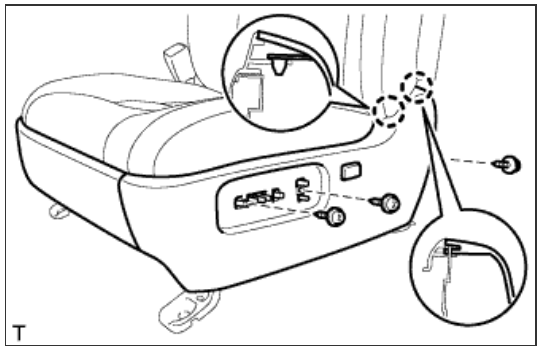

REMOVE RO TPOWER SEAT SWITCH LH

a. Disconnect the switch connector.


b. Remove the 3 screws and switch.

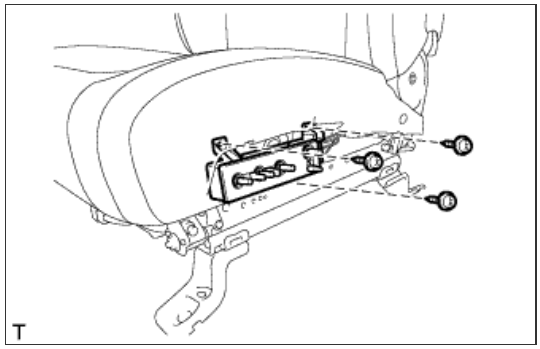

for Preparation Click here

1. INSPECT FRONT POWER SEAT SWITCH LH

a. Measure the resistance according to the value(s) in the table below.

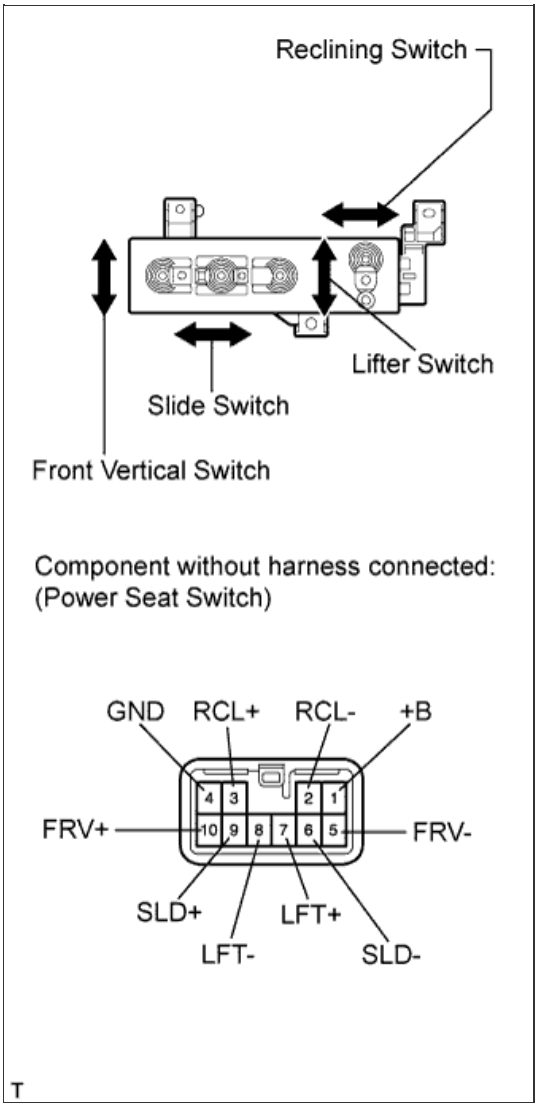

Standard Resistance:

Slide Switch:

Tester Connection	Switch Condition	Specified Condition
9 (S - 1 (	r t	Below 1 Ω
6 (S - 4 (GND)		
9 (S - 4 (GND)	Off	
6 (S - 4 (GND)		
9 (S - 4 (GND)	Rear	
6 (S - 1 (		

Front Vertical Switch:

ester Connection	Switch Condition	Specified Condition
10 (FRV - 1 (		
(FRV-) - 4 (GND)		
10 (FRV - 4 (GND)	Off	

5 (FRV-) - 4 (GND)		Below 1 Ω
10 (FRV - 4 (GND)	Down	
5 (FRV-) - 1 (		

Lifter Switch:

ester Connection	Switch Condition	Specified Condition
7 (- 1 (		elow 1 Ω
8 (- 4 (GND)		
7 (- 4 (GND)	Off	
8 (- 4 (GND)		
7 (- 4 (GND)	Down	
8 (- 1 (		


Reclining Switch:

ester Connection	Switch Condition	Specified Condition
3 (RC - 1 (	r t	Below 1 Ω
2 (RC - 4 (GND)		
3 (RC - 4 (GND)	Off	
2 (RC - 4 (GND)		
3 (RC - 4 (GND)	Rear	
2 (RC - 1 (		

the result is not as specified, replace the front power seat switch.

2. INSPECT FRONT POWER SEAT SWITCH RH

a. Measure the resistance according to the value(s) in the table below.

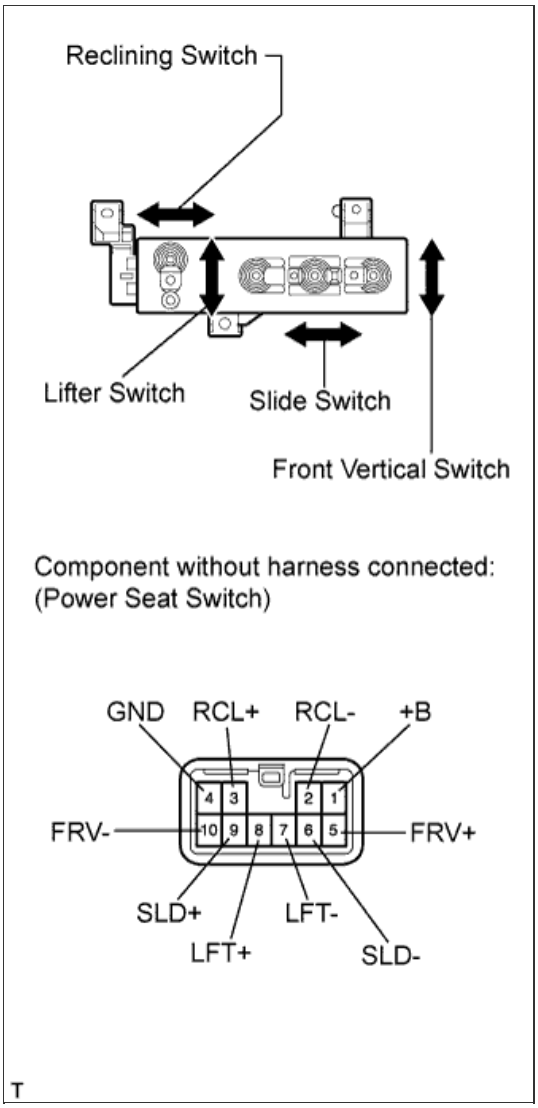

Standard Resistance:

Slide Switch:

Tester Connection	Switch Condition	Specified Condition
9 (S - 1 (	r t	Below 1 Ω
6 (S - 4 (GND)		
9 (S - 4 (GND)	Off	
6 (S - 4 (GND)		
9 (S - 4 (GND)	Rear	
6 (S - 1 (		

Front Vertical Switch:

ester Connection	Switch Condition	Specified Condition
5 (FRV - 1 (		elow 1 Ω
10 (FRV-) - 4 (GND)		
5 (FRV - 4 (GND)	Off	
10 (FRV-) - 4 (GND)		
5 (FRV - 4 (GND)	Down	
10 (FRV-) - 1 (		

Lifter Switch:

ester Connection	Switch Condition	Specified Condition
8 (- 1 (		

7 (- 4 (GND)		Below 1 Ω
8 (- 4 (GND)	Off	
7 (- 4 (GND)		
8 (- 4 (GND)	Down	
7 (- 1 (		

Reclining Switch:

ester Connection	Switch Condition	Specified Condition
3 (RC - 1 (	r t	Below 1 Ω
2 (RC - 4 (GND)		
3 (RC - 4 (GND)	Off	
2 (RC - 4 (GND)		
3 (RC - 4 (GND)	Rear	
2 (RC - 1 (		

the result is not as specified, replace the front power seat switch.

for Preparation Click here


HINT:

- **Use the same proce res for the LHD an RHD.**
- **The proce res liste elow are for the LHD.**

INSTALL RONT POWER SEAT SWITCH LH

a. Install the switch with the screws.

Connect the switch connector.

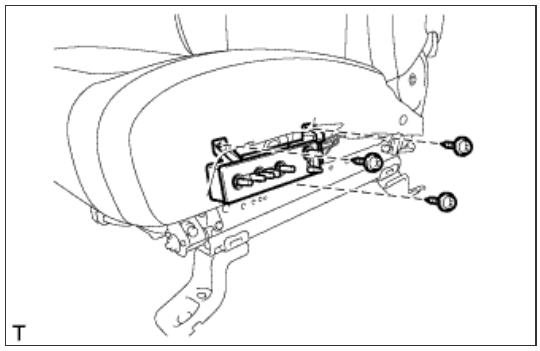


INSTALL RONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


Attach the 2 claws to install the cushion shield.

c. Install the screws.

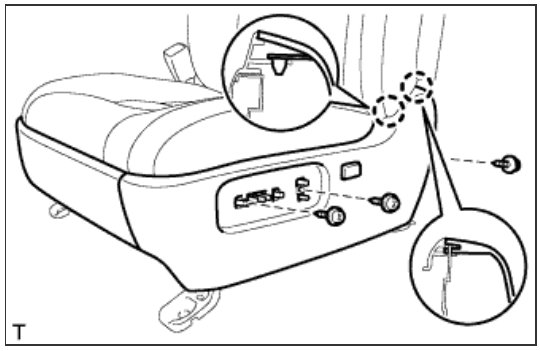


Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

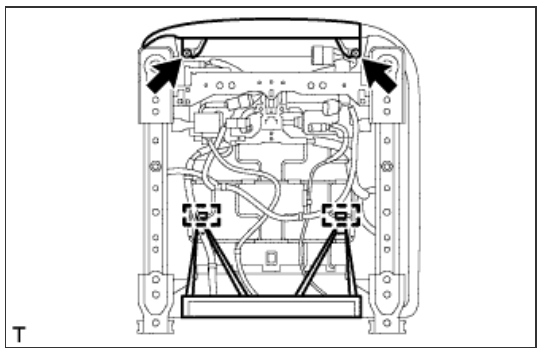


INSTALL RECLININ POWER SEAT SWITCH KNO

a. Attach the 2 claws to install the knob.

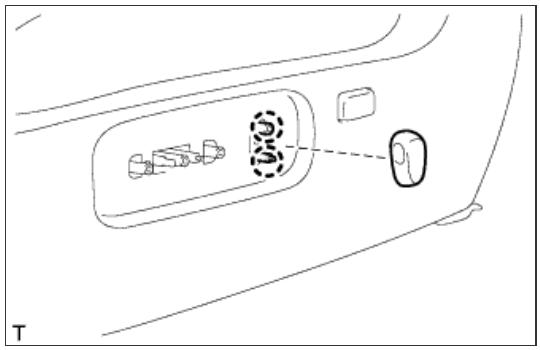

INSTALL SLIDE AND ERTICAL POWER SEAT SWITCH KNO

a. Attach the 2 claws to install the knob.

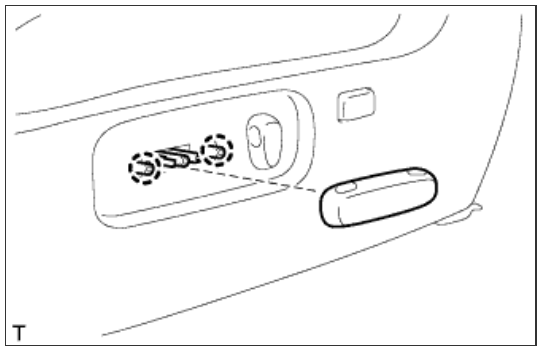

INSTALL RONT SEAT ASSEM L LH

a. Install the front seat assembly (Click here).

for Preparation Click here


HINT:

- **Use the same proce res for the LHD an RHD.**
- **The proce res liste elow are for the LHD.**

INSTALL RONT POWER SEAT SWITCH LH

a. Install the switch with the screws.

Connect the switch connector.

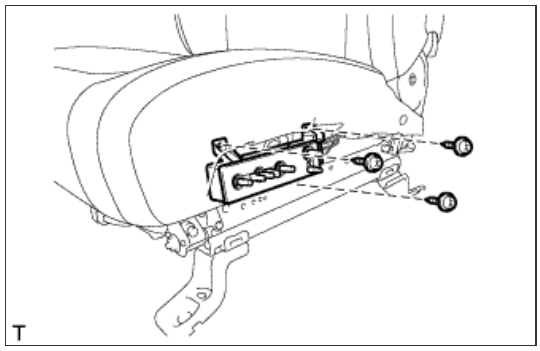


INSTALL RONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


Attach the 2 claws to install the cushion shield.

c. Install the screws.

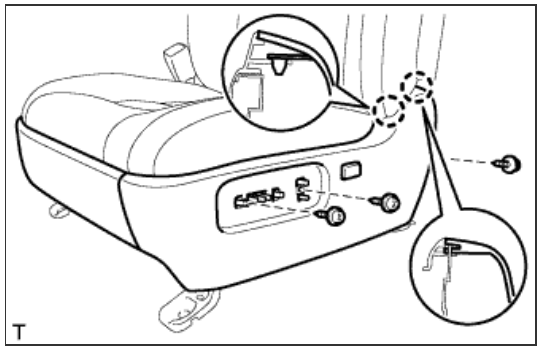


Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

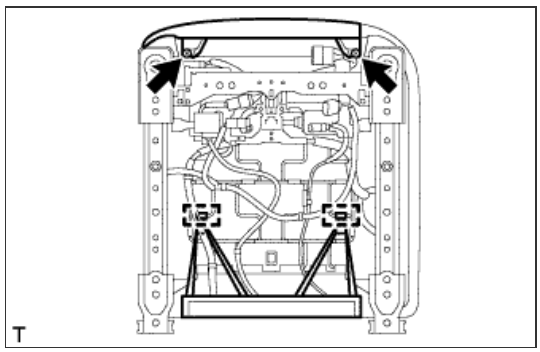


INSTALL RECLININ POWER SEAT SWITCH KNO

a. Attach the 2 claws to install the knob.

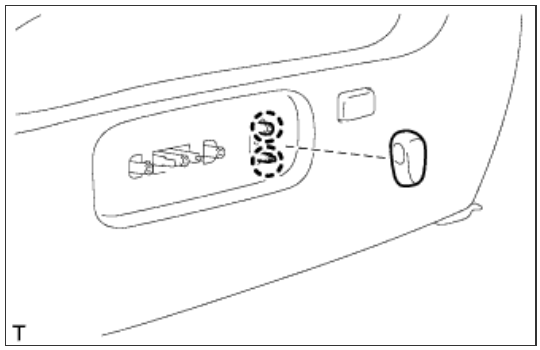

INSTALL SLIDE AND ERTICAL POWER SEAT SWITCH KNO

a. Attach the 2 claws to install the knob.

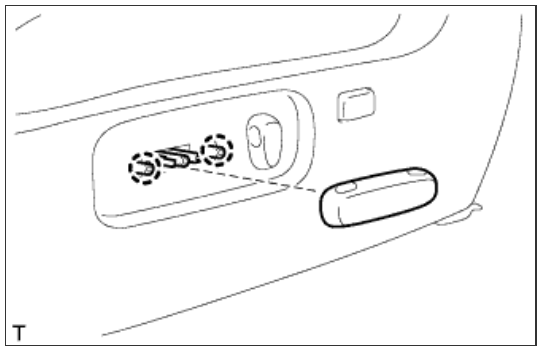

INSTALL RONT SEAT ASSEM L LH

a. Install the front seat assembly (Click here).

for Preparation Cli ere

INSPECT POWER SEAT MOTOR ASSEMBLY

a Check the PTC operation inside the power seat motor.

HINT

The resistance of the PTC thermistor increases when the power seat switch is held down even after the power seat has been moved to the maximum in one direction. If the resistance increases beyond a specified level, current is cut to prevent a short circuit.

NOTICE

- T e inspe ibn s o ld be perfor ed wit te seat installed in t e e i le
- Perfor te 4 steps below for each power seat f n ibn

i Choose a power seat function. Operate the power seat switch and move the seat as much as possible in one direction. Keep the seat in that position for approximately 60 seconds.


ii Operate the power seat switch a and continue to try to move the seat in the same direction as in the previous step. easure the amount of time elapsed before current is automatically cut (the sound of the motor has stopped).


Standard
d 9 e onds

iii After current has been cut, release the power seat switch and wait for approximately 60 seconds.

i Operate the same power seat switch and move the seat in the opposite direction. Check that the motor operates.

for Preparation Click here

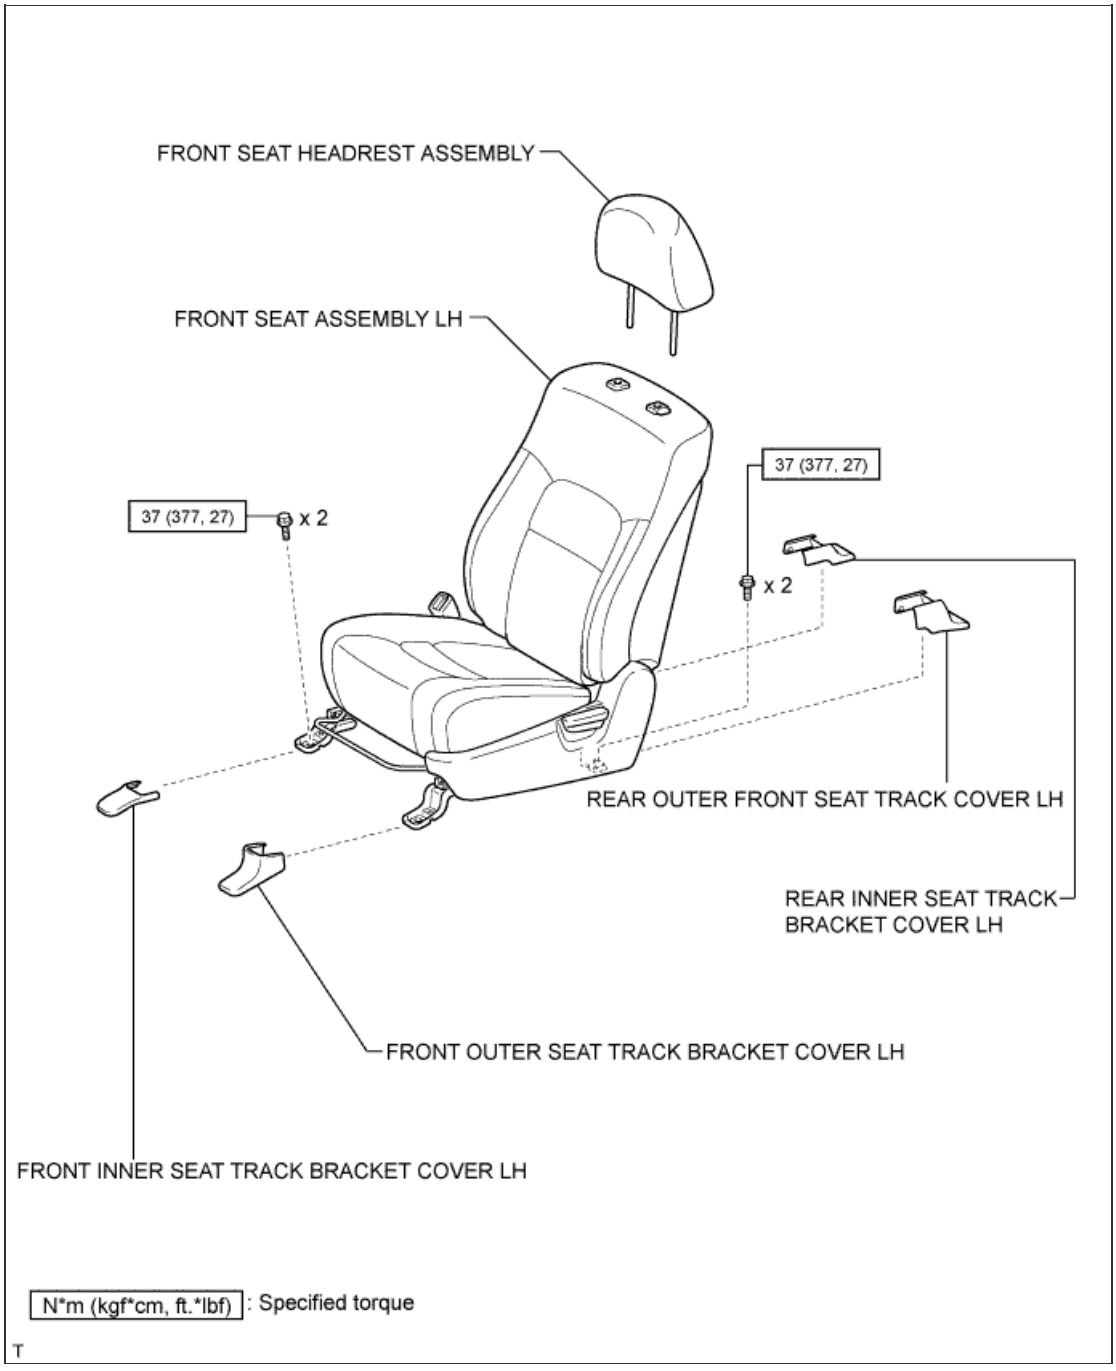

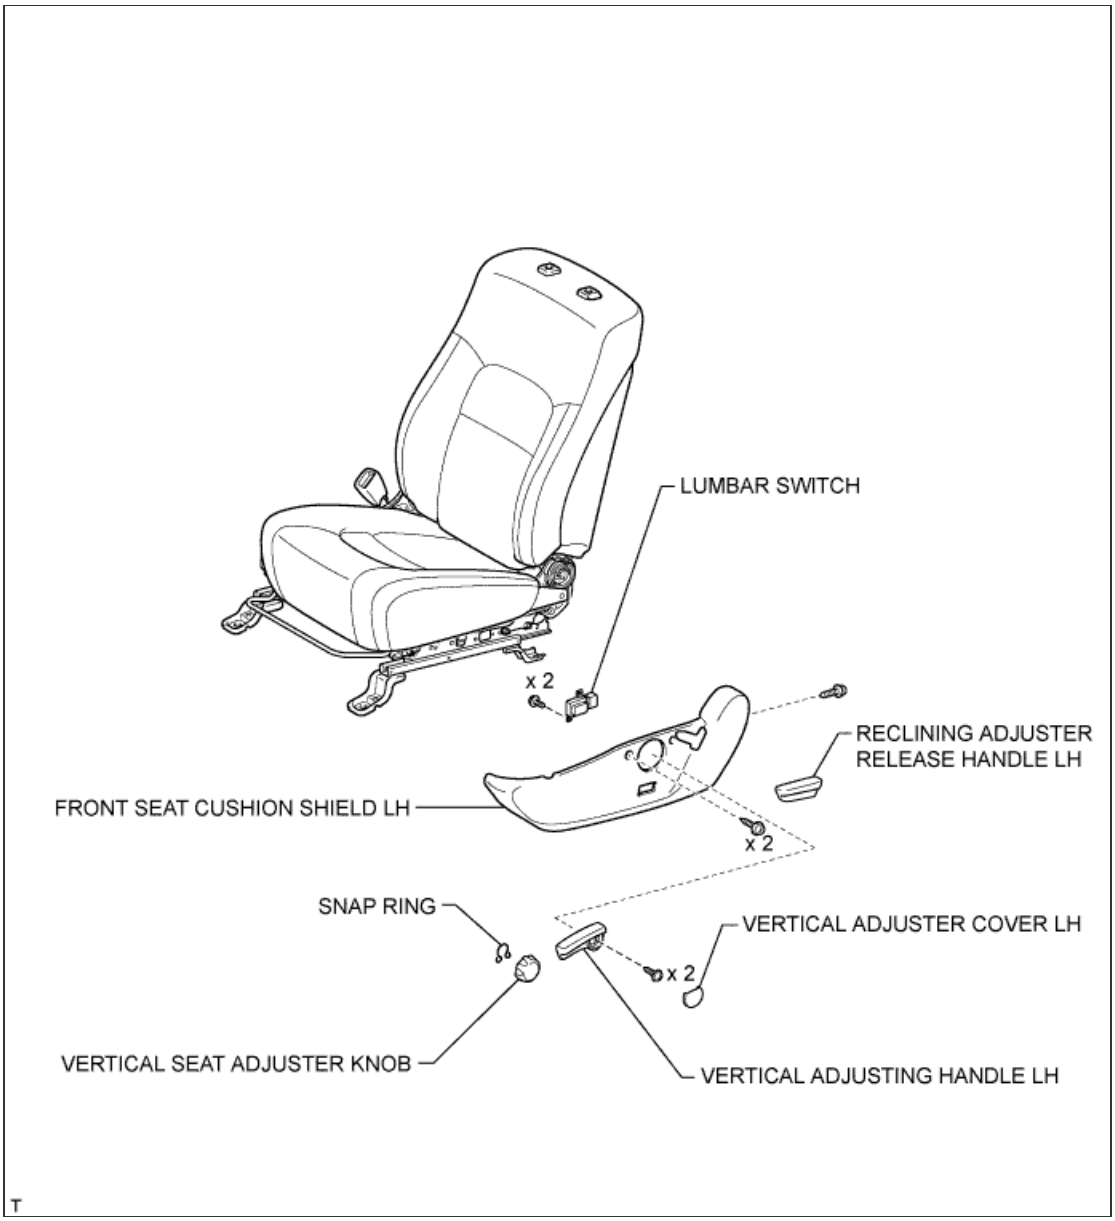
LUMBAR SWITCH
x 2
RECLINING ADJUSTER
RELEASE HANDLE LH
FRONT SEAT CUSHION SHIELD LH
x 2
SNAP RING
VERTICAL ADJUSTER COVER LH
x 2
VERTICAL SEAT ADJUSTER KNOB
VERTICAL ADJUSTING HANDLE LH
T

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH


a. Remove the front seat assembly (Click here).

2. REMOVE VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the vertical ad ter cover.


HINT:

Tape the screwdriver tip before use.

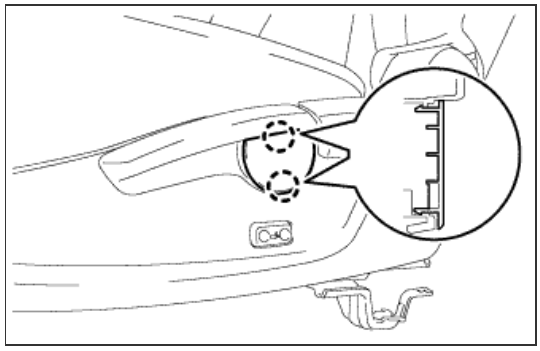


3. REMOVE VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Remove the 2 screws and vertical ad ting handle.

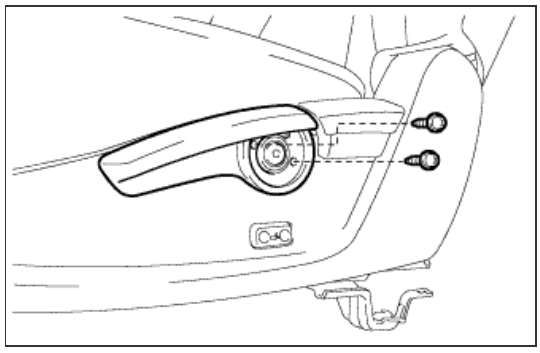

4. REMOVE VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)

a. Remove the snap ring and vertical seat ad ter knob.

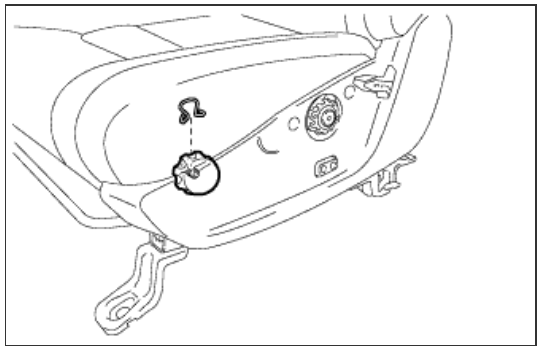


5. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

a. Lift the reclining ad ter release handle.

b. Using a screwdriver, detach the claw and remove the reclining ad ter release handle.


HINT:

Tape the screwdriver tip before use.

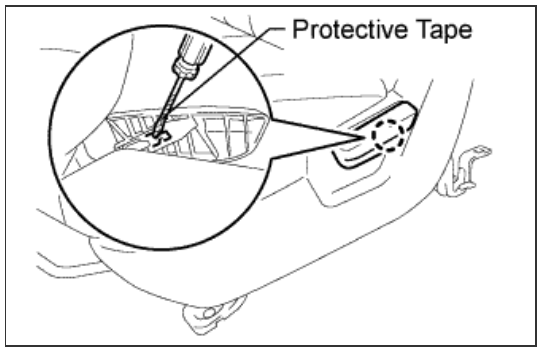


6. REMOVE FRONT SEAT CUSHION SHIELD LH

a. w/ Seatback Board:
Remove the 2 rubber bands from the hooks.

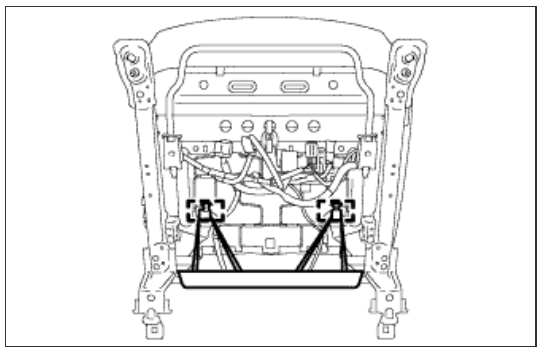


b. w/o Seatback Board:
Remove the 2 rubber bands from the hooks.

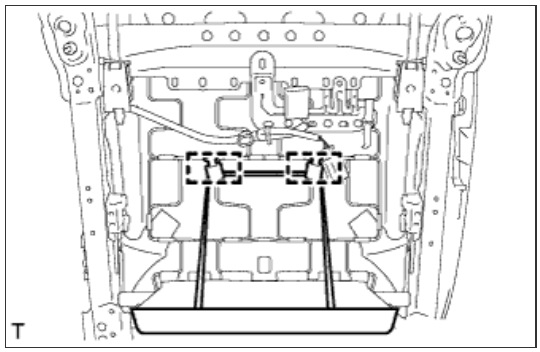

c. for 4 Way Seat Type:

i. Remove the 2 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.

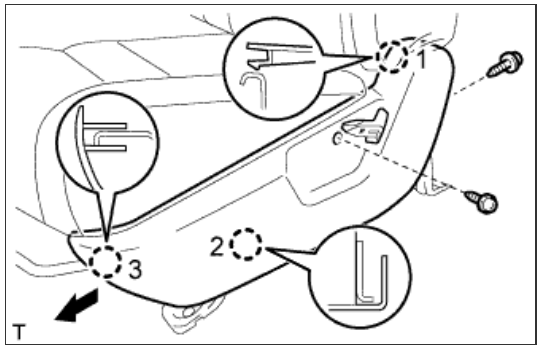


d. for Way Seat Type:

i. Remove the 3 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then


remove the cushion shield.

e. w/ Lumbar Support:
Disconnect the lumbar switch connector.

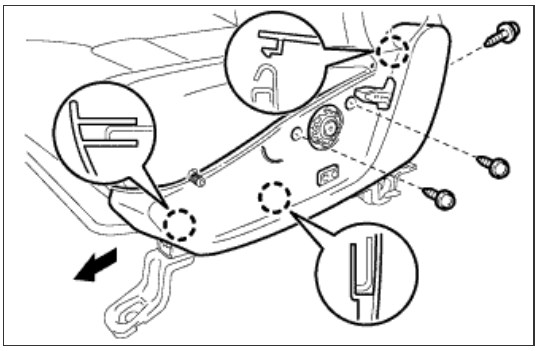

7. REMOVE LUMBAR SWITCH (w/ Lumbar Support)

a. Remove the 2 screws and switch.

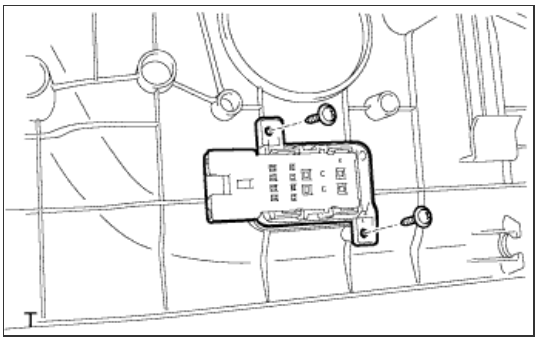

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH


a. Remove the front seat assembly (Click here).

2. REMOVE VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the vertical ad ter cover.


HINT:

Tape the screwdriver tip before use.

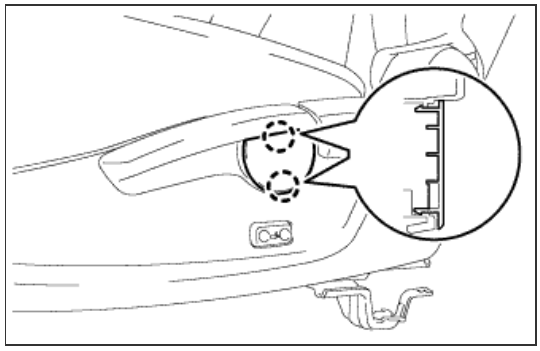


3. REMOVE VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Remove the 2 screws and vertical ad ting handle.

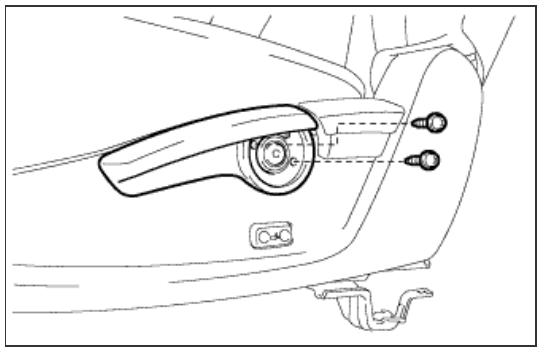

4. REMOVE VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)

a. Remove the snap ring and vertical seat ad ter knob.

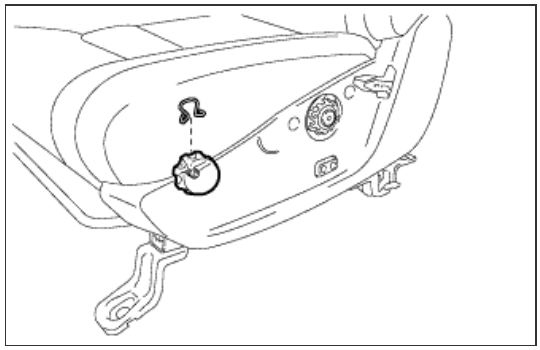


5. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

a. Lift the reclining ad ter release handle.

b. Using a screwdriver, detach the claw and remove the reclining ad ter release handle.


HINT:

Tape the screwdriver tip before use.

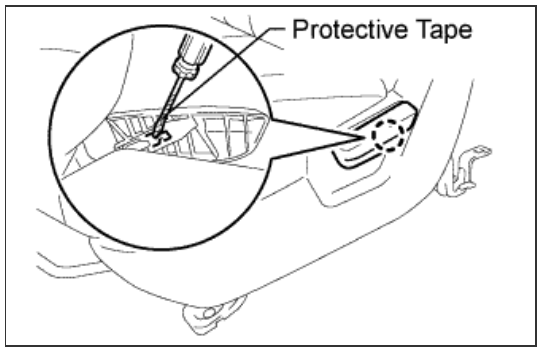


6. REMOVE FRONT SEAT CUSHION SHIELD LH

a. w/ Seatback Board:
Remove the 2 rubber bands from the hooks.

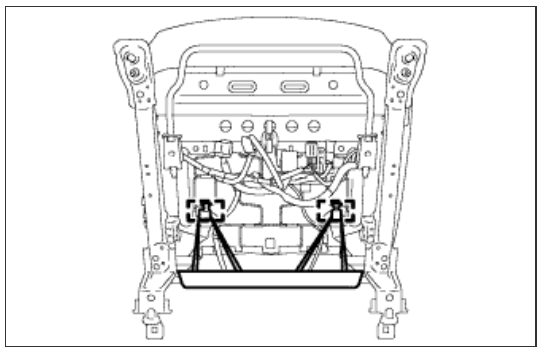


b. w/o Seatback Board:
Remove the 2 rubber bands from the hooks.

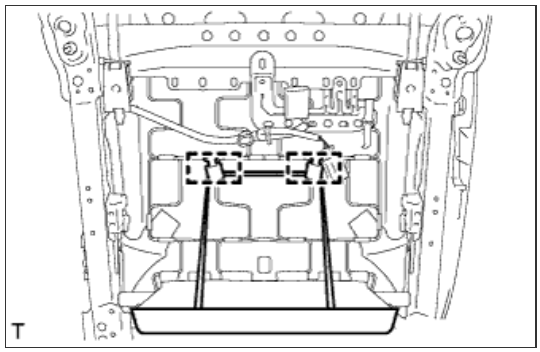

c. for 4 Way Seat Type:

i. Remove the 2 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.

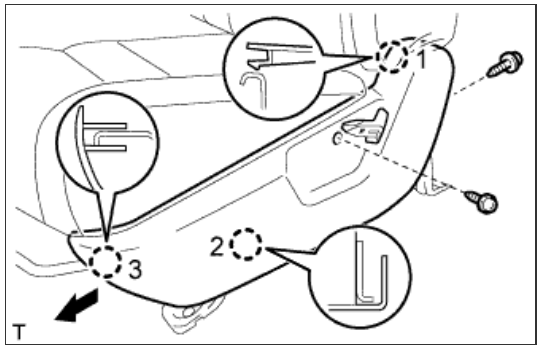


d. for Way Seat Type:

i. Remove the 3 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then


remove the cushion shield.

e. w/ Lumbar Support:
Disconnect the lumbar switch connector.

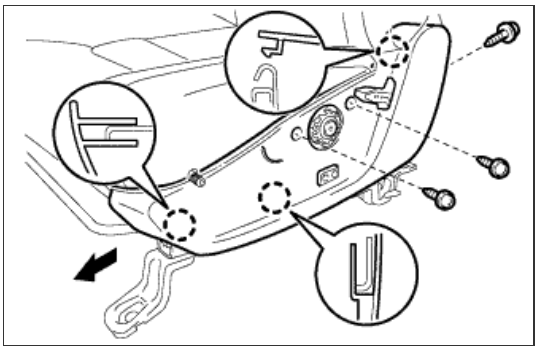

7. REMOVE LUMBAR SWITCH (w/ Lumbar Support)

a. Remove the 2 screws and switch.

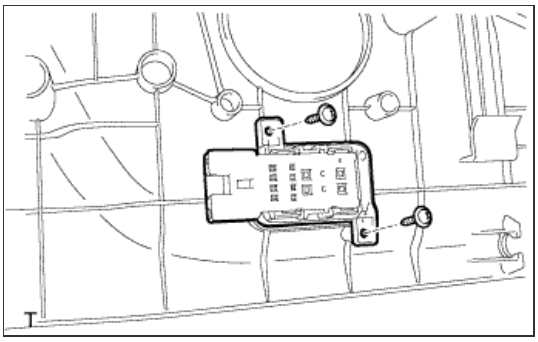

for Preparation Click here


1. INSPECT LUMBAR SWITCH LH (for LH)

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
3 (B) - 4 (H)	Hold	Below 1 Ω
1 (R) - 2 (E2)		
1 (R) - 2 (E2)	Off	
4 (H) - 5 (E2)		
1 (R) - 3 (B)	Release	
4 (H) - 5 (E2)		

If the result is not as specified, replace the lu bar switch.

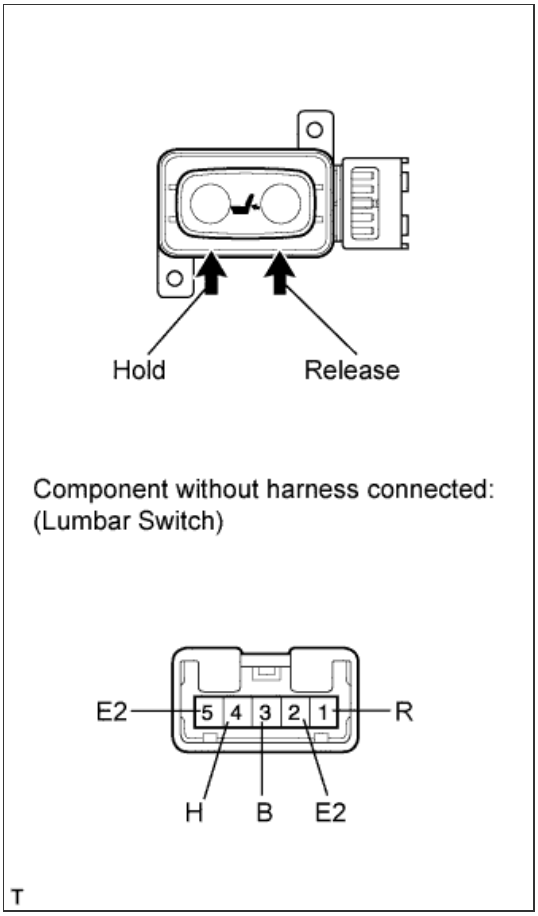


2. INSPECT LUMBAR SWITCH RH (for RH)

a. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
3 (B) - 4 (H)	Hold	Below 1 Ω
1 (R) - 2 (E)		
1 (R) - 2 (E)	Off	
4 (H) - 5 (E)		
1 (R) - 3 (B)	Release	
4 (H) - 5 (E)		

If the result is not as specified, replace the lu bar switch.

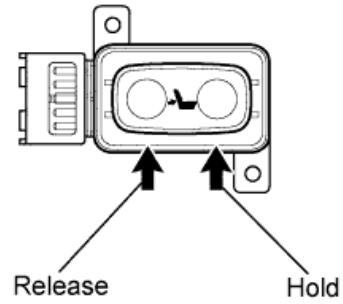

Component without harness connected:
(Lumbar Switch)

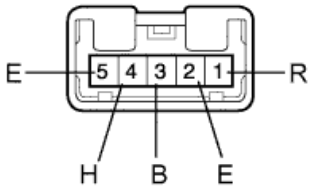

T


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL LUMBAR SWITCH (w/ Lumbar Support)

a. Install the switch with the screws.

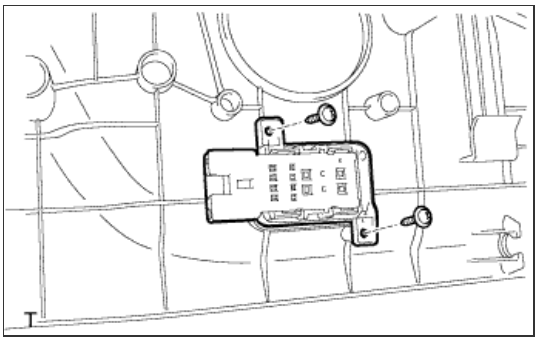


2. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for ay Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.

ii. Install the screws.

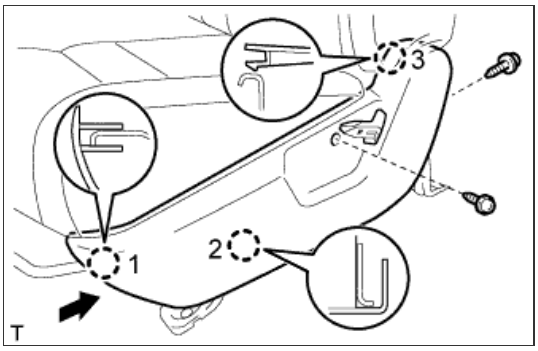


b. w/ ar Support:
Connect the lumbar switch connector.


c. for 8 ay Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.


ii. Install the 3 screws.

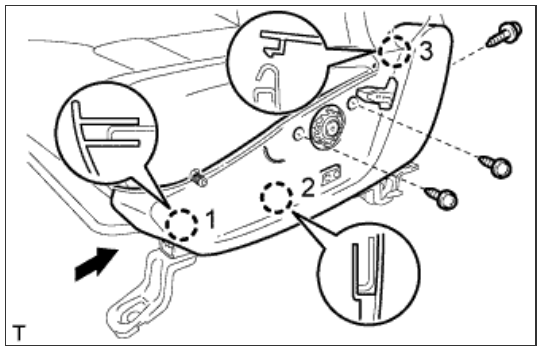

d. w/ Seatback Board:
Attach the rubber bands to the hooks.

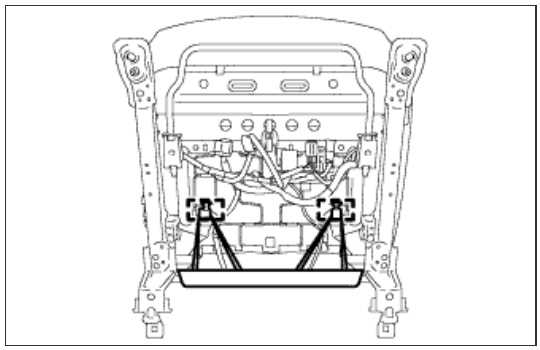


e. w/o Seatback Board:
Attach the rubber bands to the hooks.

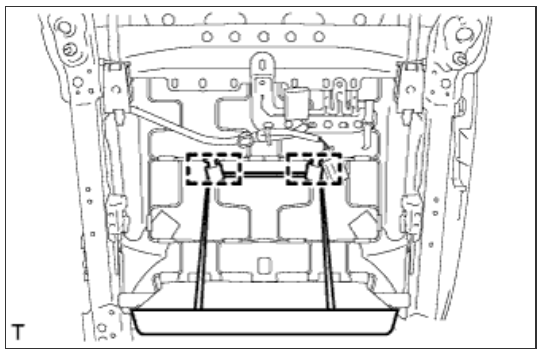

3. INSTALL RECLINING ADJUSTER RELEASE HANDLE LH


a. Attach the claw to install the reclining ad ster release handle.

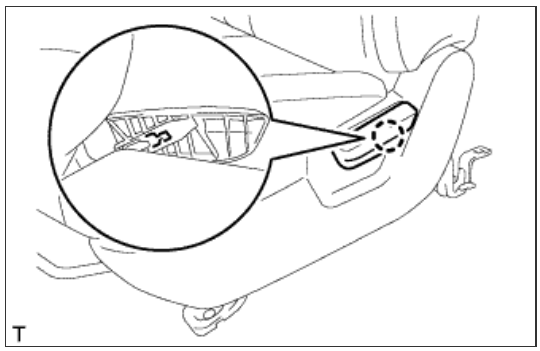

4. INSTALL VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)


a. Install the snap ring to the vertical seat ad ster knob.

b. Install the vertical seat ad ster knob to the front seat.

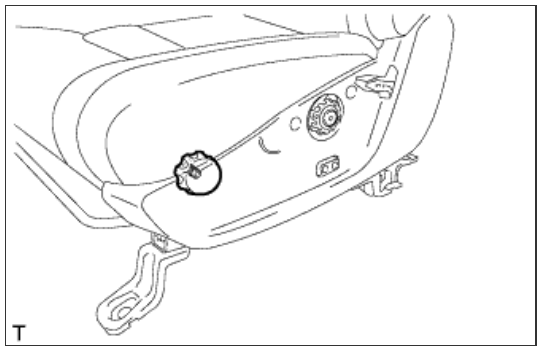


5. INSTALL VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Install the vertical ad sting handle with the screws.

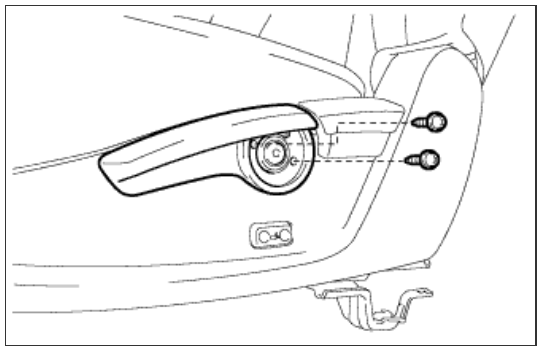

6. INSTALL VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Attach the claws to install the vertical ad ster cover.

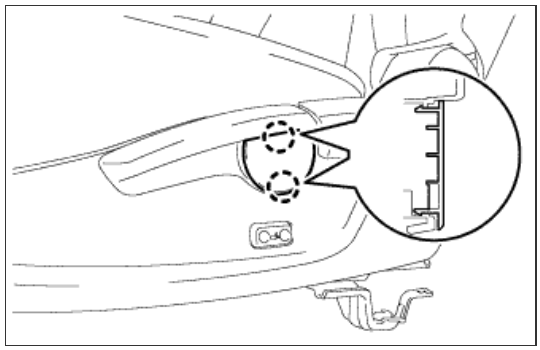

7. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL LUMBAR SWITCH (w/ Lumbar Support)

a. Install the switch with the screws.

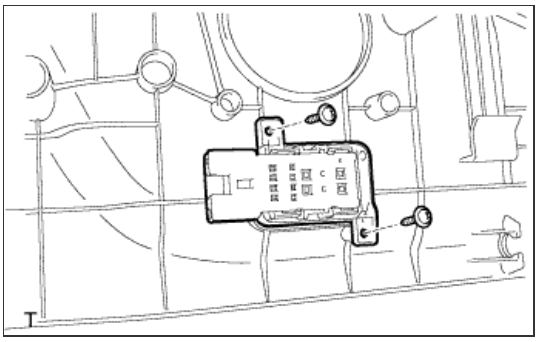


2. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for ay Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.

ii. Install the screws.

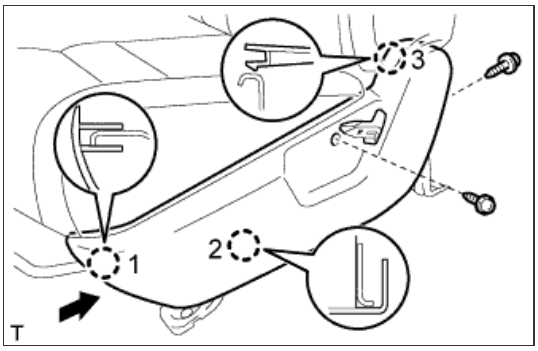


b. w/ ar Support:
Connect the lumbar switch connector.


c. for 8 ay Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.


ii. Install the 3 screws.

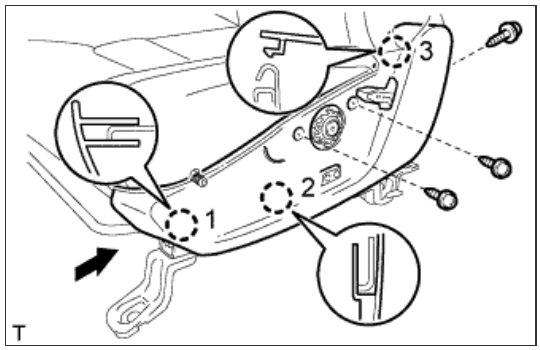

d. w/ Seatback Board:
Attach the rubber bands to the hooks.

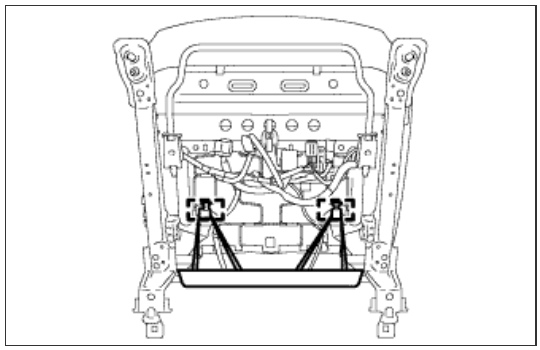


e. w/o Seatback Board:
Attach the rubber bands to the hooks.

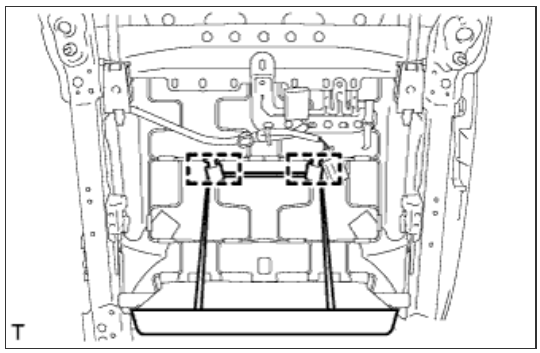

3. INSTALL RECLINING ADJUSTER RELEASE HANDLE LH


a. Attach the claw to install the reclining ad ster release handle.

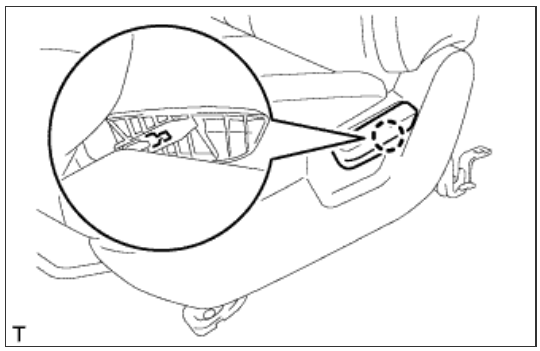

4. INSTALL VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)


a. Install the snap ring to the vertical seat ad ster knob.

b. Install the vertical seat ad ster knob to the front seat.

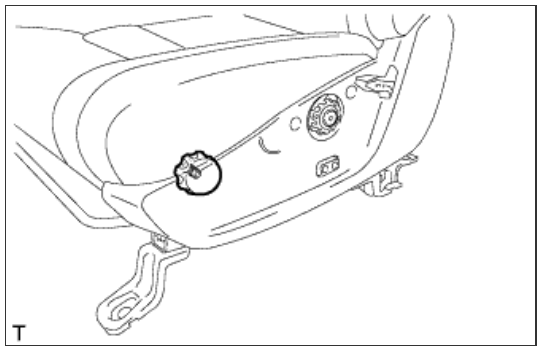


5. INSTALL VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Install the vertical ad sting handle with the screws.

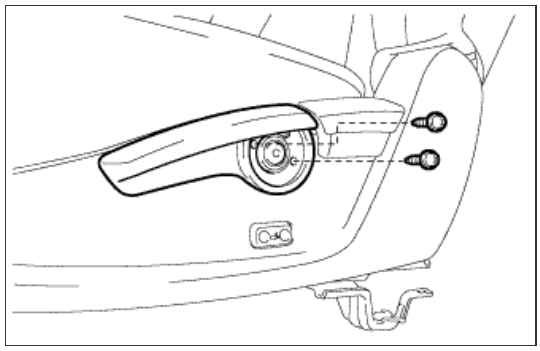

6. INSTALL VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)


a. Attach the claws to install the vertical ad ster cover.

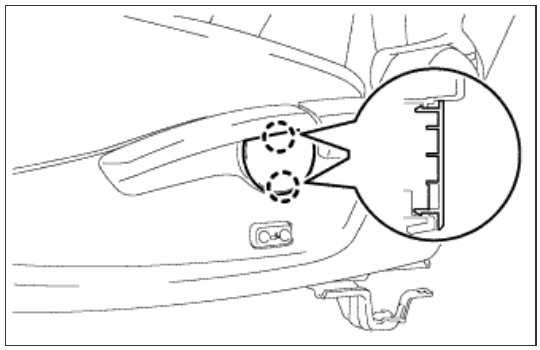


7. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).

for Preparation Click here

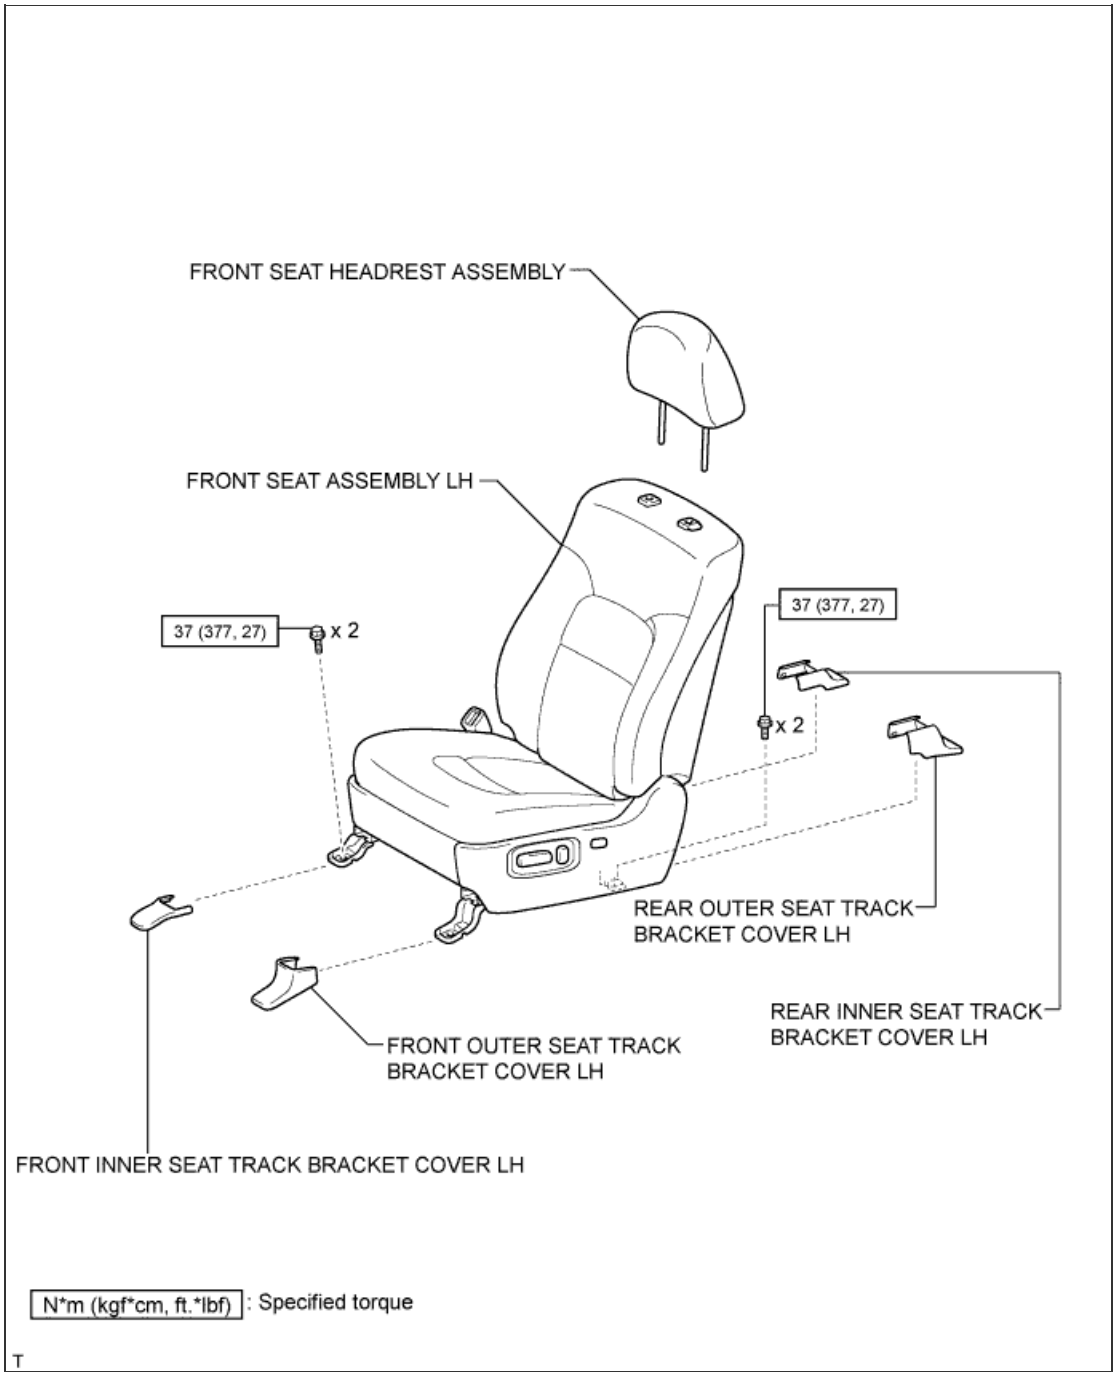

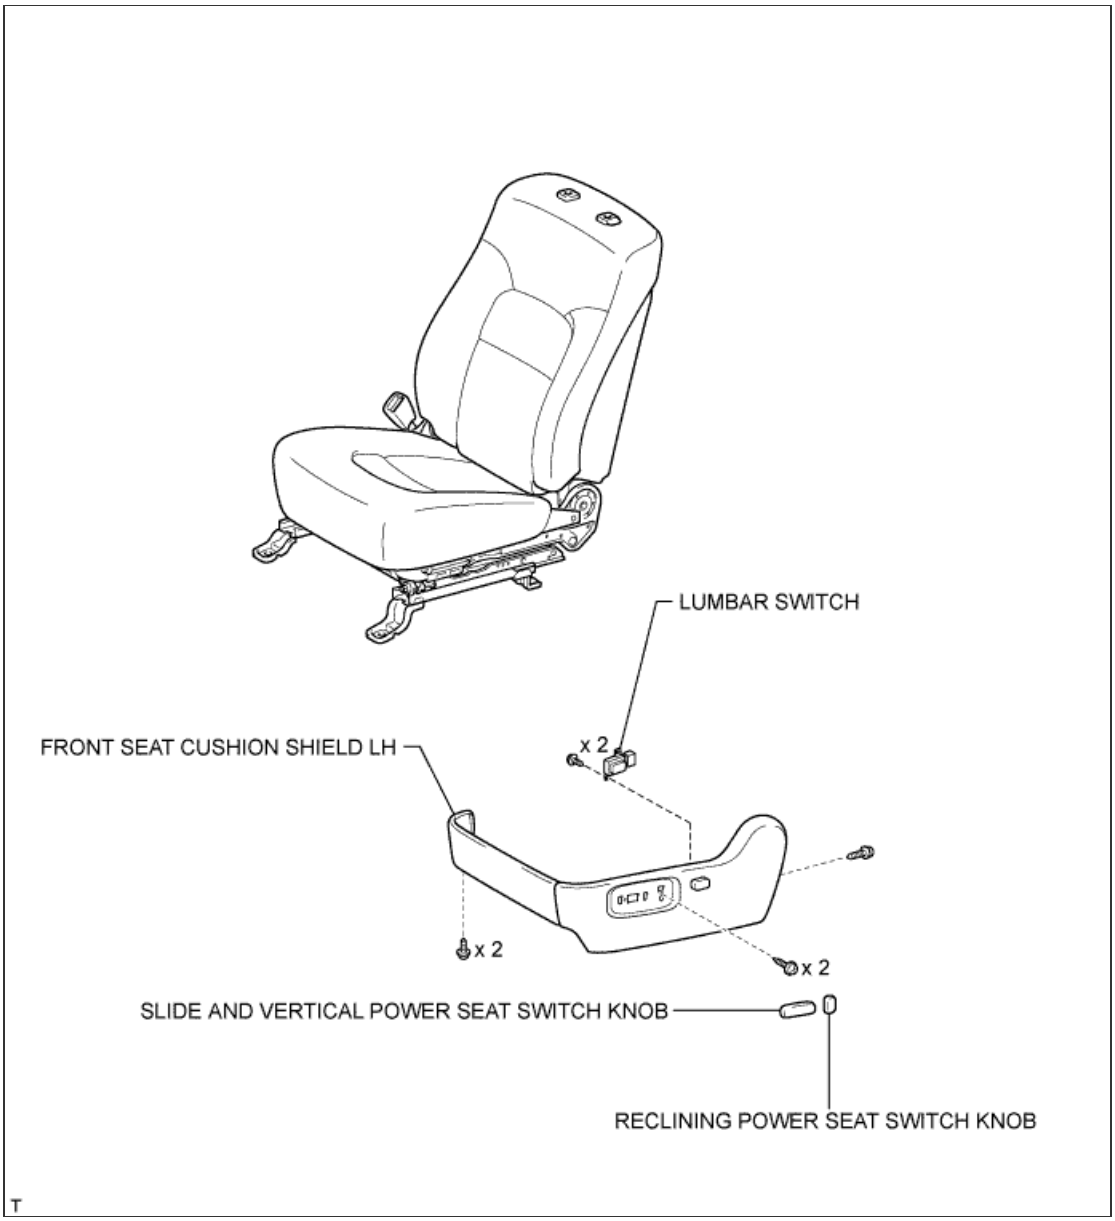
LUMBAR SWITCH
FRONT SEAT CUSHION SHIELD LH
x 2
x 2
x 2
SLIDE AND VERTICAL POWER SEAT SWITCH KNOB
RECLINING POWER SEAT SWITCH KNOB
T

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

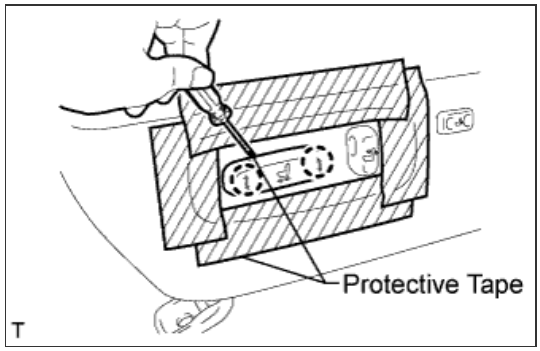


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

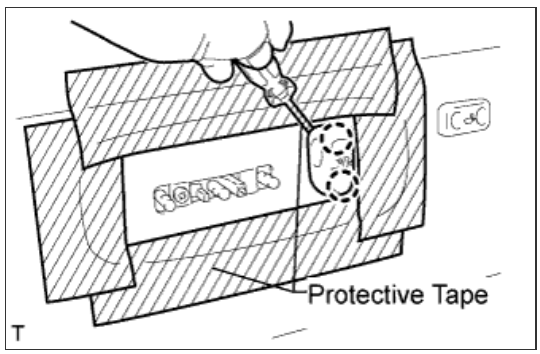

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

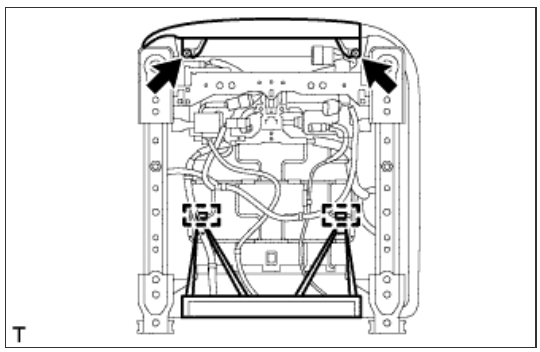

c. Remove the 3 screws.


d. Detach the 2 claws and remove the cushion shield.

e. for Driver Side
onnect the power seat lumbar switch connectors.

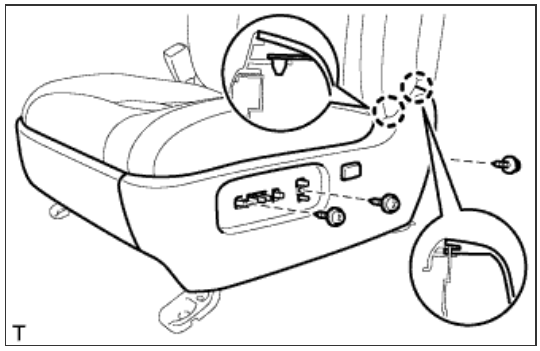

5. REMOVE LUMBAR SWITCH (for Driver Side)

a. Remove the 2 screws and switch.

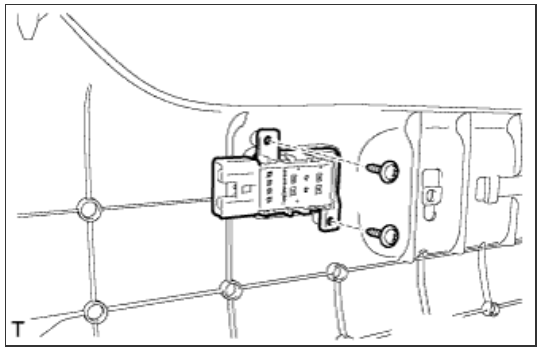

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

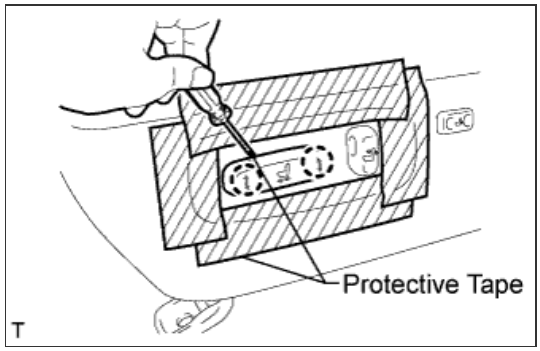


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

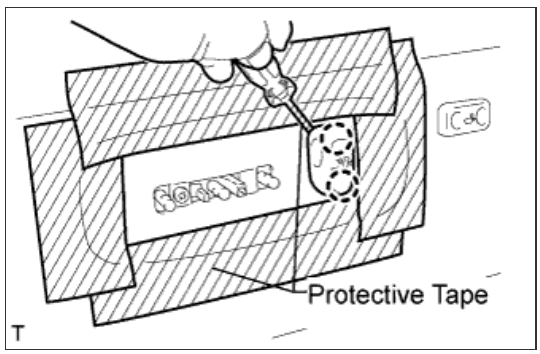

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

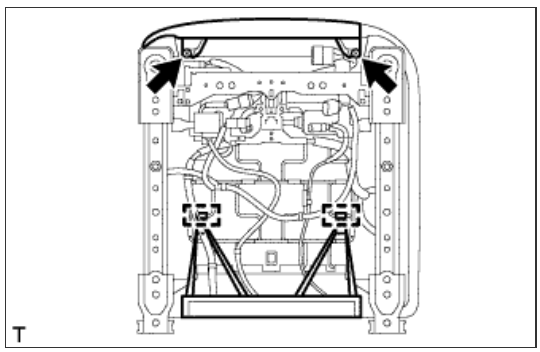

c. Remove the 3 screws.


d. Detach the 2 claws and remove the cushion shield.

e. for Driver Side
onnect the power seat lumbar switch connectors.

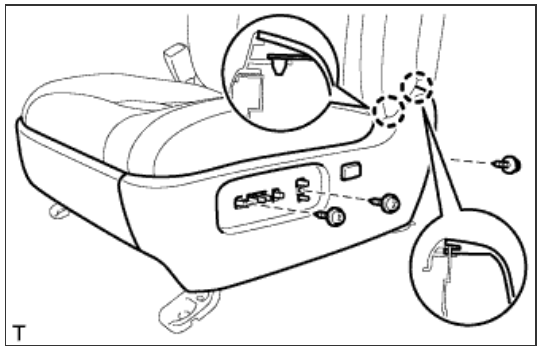

5. REMOVE LUMBAR SWITCH (for Driver Side)

a. Remove the 2 screws and switch.

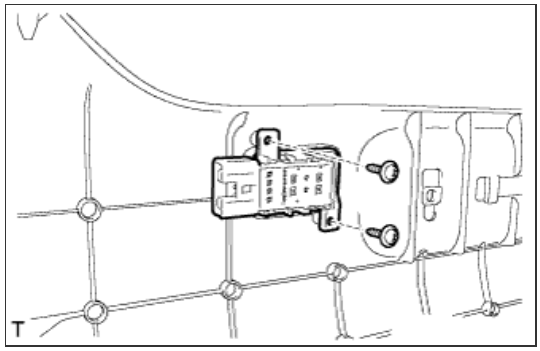

for Preparation Click here


1. INSPECT LUMBAR SWITCH LH (for LH)

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
3 (B) - 4 (H)	Hold	Below 1 Ω
1 (R) - 2 (E2)		
1 (R) - 2 (E2)	Off	
4 (H) - 5 (E2)		
1 (R) - 3 (B)	Release	
4 (H) - 5 (E2)		

If the result is not as specified, replace the lu bar switch.

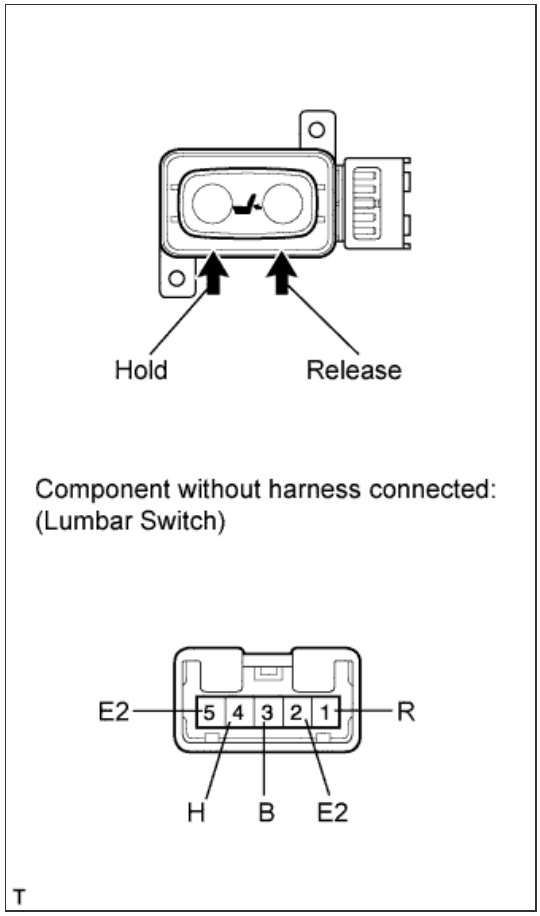


2. INSPECT LUMBAR SWITCH RH (for RH)

a. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
3 (B) - 4 (H)	Hold	Below 1 Ω
1 (R) - 2 (E)		
1 (R) - 2 (E)	Off	
4 (H) - 5 (E)		
1 (R) - 3 (B)	Release	
4 (H) - 5 (E)		

If the result is not as specified, replace the lu bar switch.

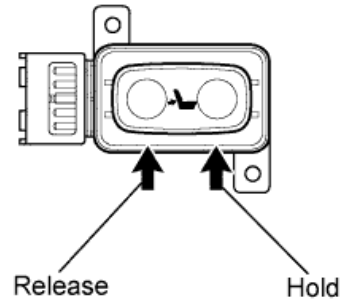

Component without harness connected:
(Lumbar Switch)

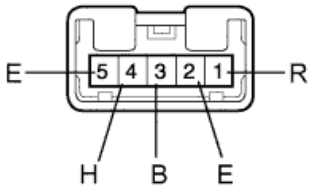

T


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL LUMBAR SWITCH (for Driver Side)

a. Install the switch with the 2 screws.

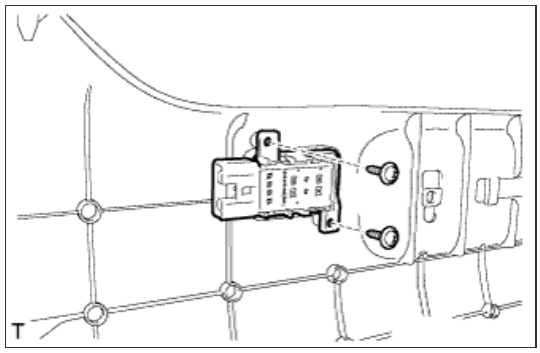


2. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


b. Attach the 2 claws to install the cushion shield.

c. Install the 3 screws.

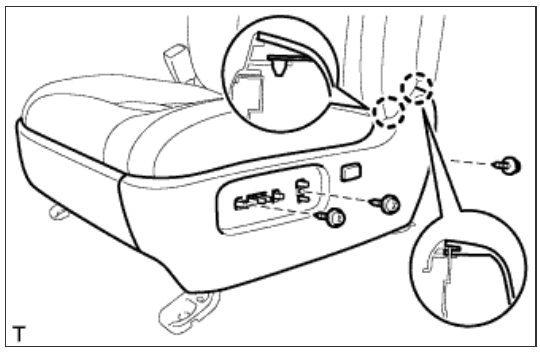


d. Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

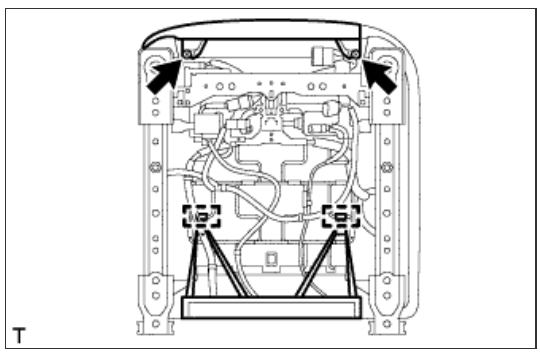


3. INSTALL RECLINING POWER SEAT SWITCH KNOB

a. Attach the 2 claws to install the knob.

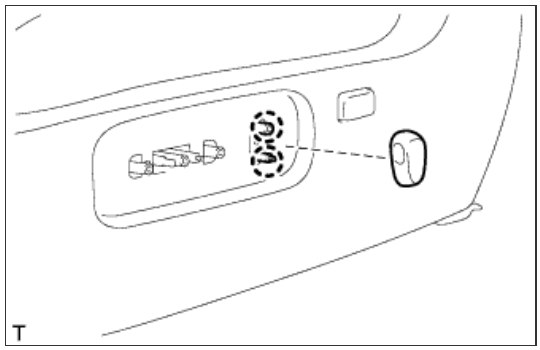

4. INSTALL SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Attach the 2 claws to install the knob.

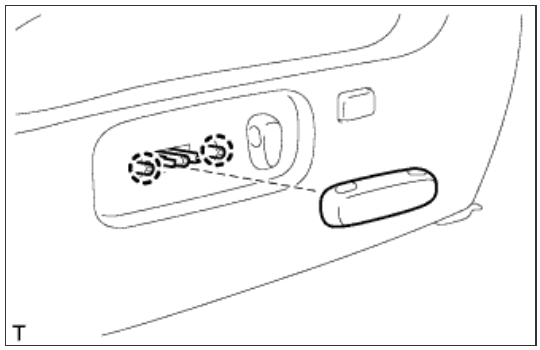

5. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL LUMBAR SWITCH (for Driver Side)

a. Install the switch with the 2 screws.

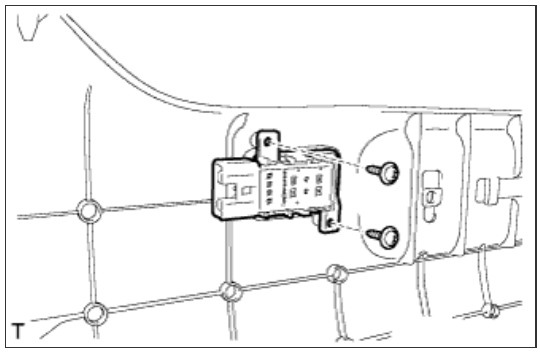


2. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


b. Attach the 2 claws to install the cushion shield.

c. Install the 3 screws.

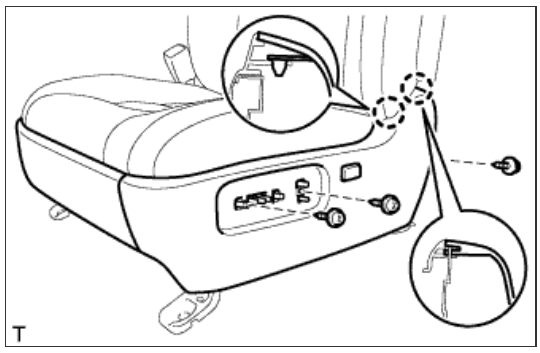


d. Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

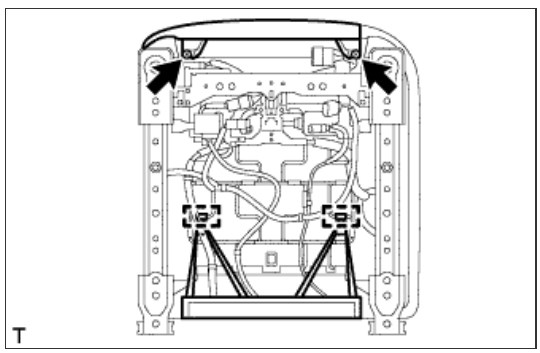


3. INSTALL RECLINING POWER SEAT SWITCH KNOB

a. Attach the 2 claws to install the knob.

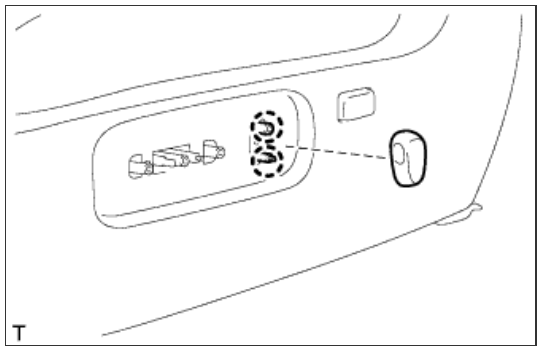

4. INSTALL SLIDE AND VERTICAL POWER SEAT SWITCH KNOB


a. Attach the 2 claws to install the knob.

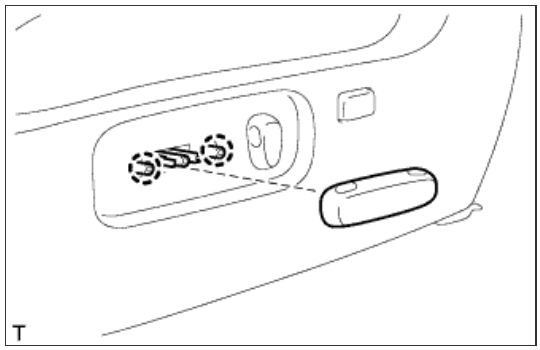


5. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).

for Preparation Click here

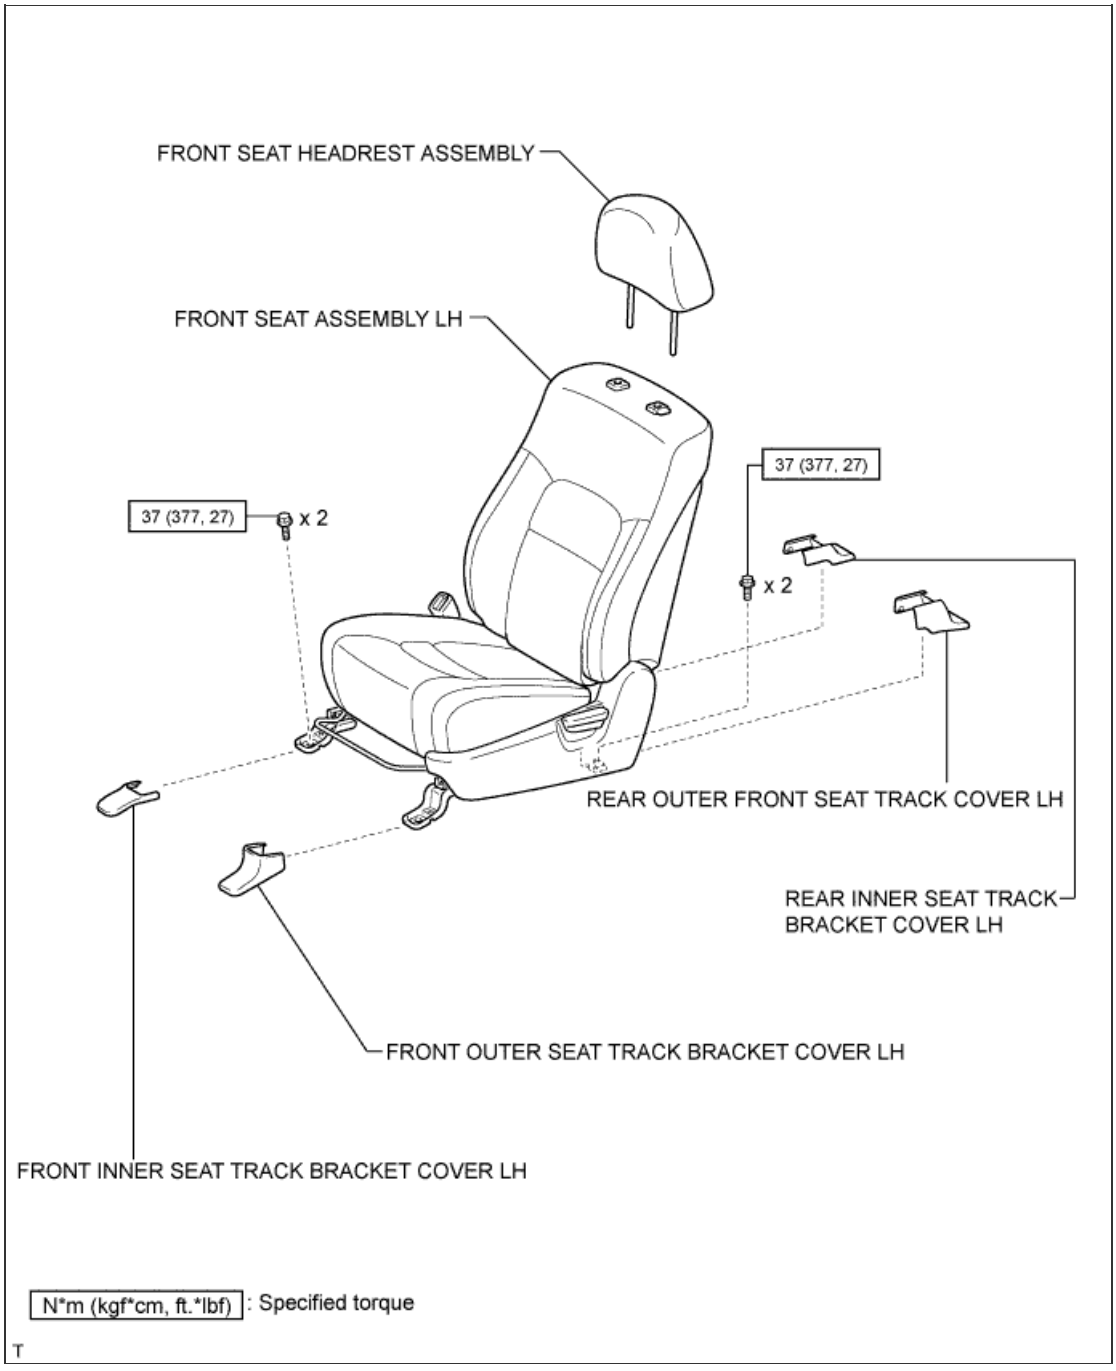

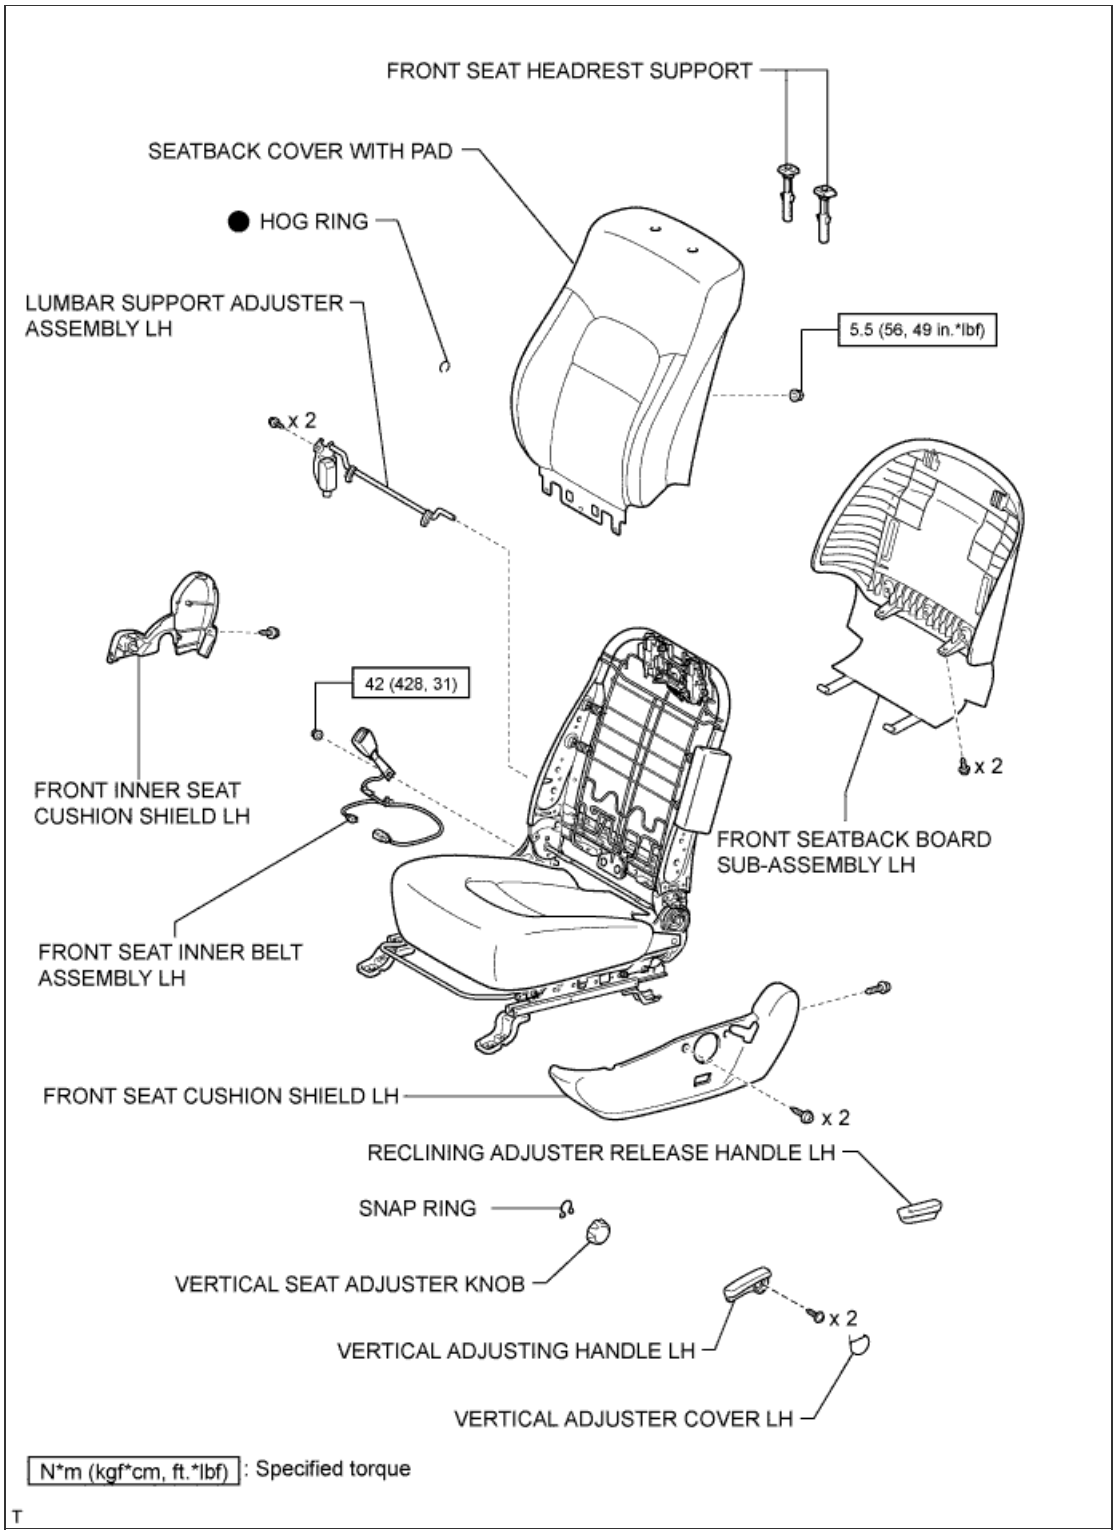
FRONT SEAT HEADREST SUPPORT
SEATBACK COVER WITH PAD
HOG RING
LUMBAR SUPPORT ADJUSTER ASSEMBLY LH
5.5 (56, 49 in.*lbf)
x 2
x 2
42 (428, 31)
FRONT INNER SEAT CUSHION SHIELD LH
FRONT SEATBACK BOARD SUB-ASSEMBLY LH
FRONT SEAT INNER BELT ASSEMBLY LH
FRONT SEAT CUSHION SHIELD LH
x 2
RECLINING ADJUSTER RELEASE HANDLE LH
SNAP RING
VERTICAL SEAT ADJUSTER KNOB
x 2
VERTICAL ADJUSTING HANDLE LH
VERTICAL ADJUSTER COVER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH


a. Remove the front seat assembly (Click here).

2. REMOVE VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the vertical ad ter cover.


HINT:

Tape the screwdriver tip before use.

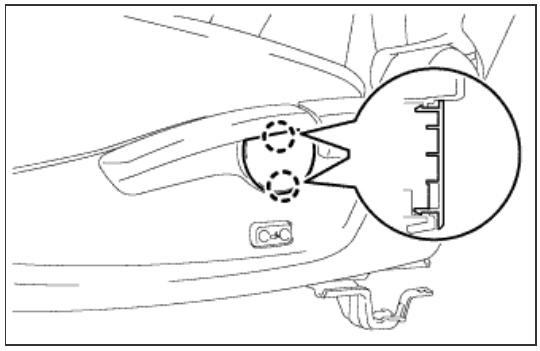


3. REMOVE VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Remove the 2 screws and vertical ad ting handle.

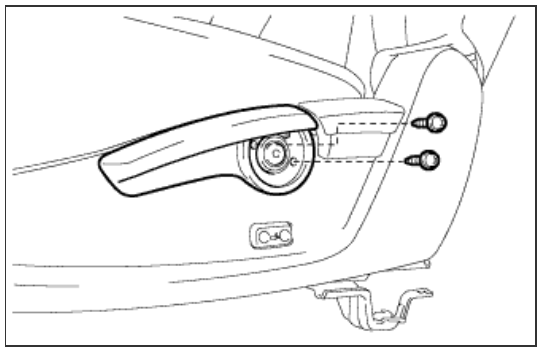

4. REMOVE VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)

a. Remove the snap ring and vertical seat ad ter knob.

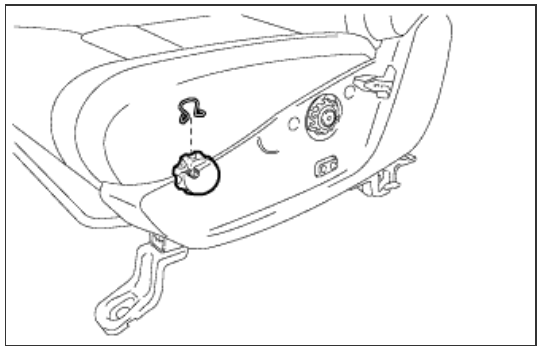


5. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

a. Lift the reclining ad ter release handle.

b. Using a screwdriver, detach the claw and remove the reclining ad ter release handle.


HINT:

Tape the screwdriver tip before use.

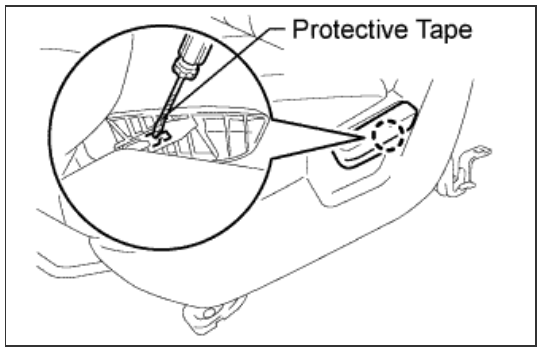


6. REMOVE FRONT SEAT CUSHION SHIELD LH

a. w/ Seatback Board:
Remove the 2 rubber bands from the hooks.

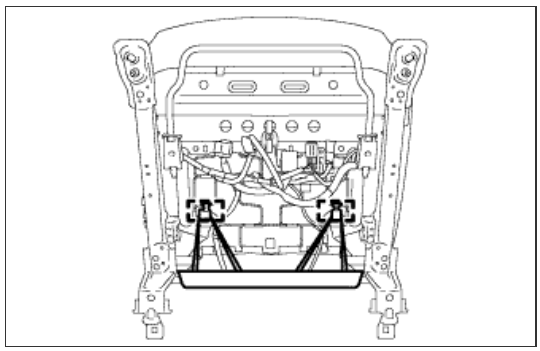


b. w/o Seatback Board:
Remove the 2 rubber bands from the hooks.

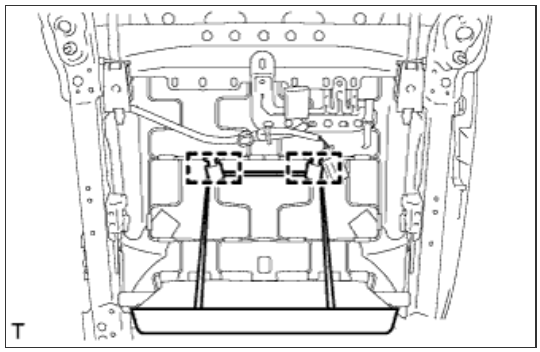

c. for 4 Way Seat Type:

i. Remove the 2 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.

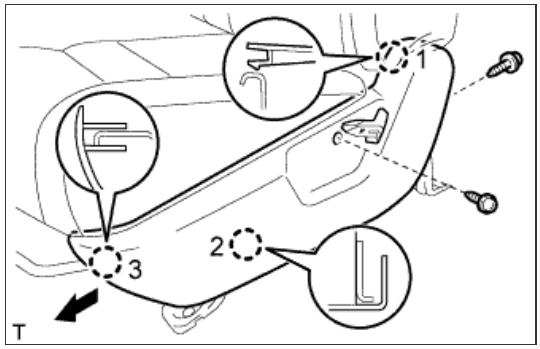


d. for Way Seat Type:

i. Remove the 3 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then

remove the cushion shield.


e. w/ Lumbar Support:
Disconnect the lumbar switch connector.

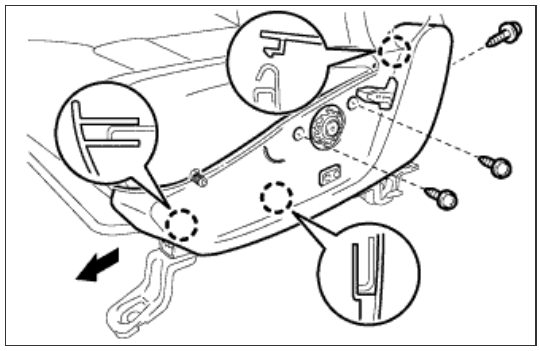

7. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

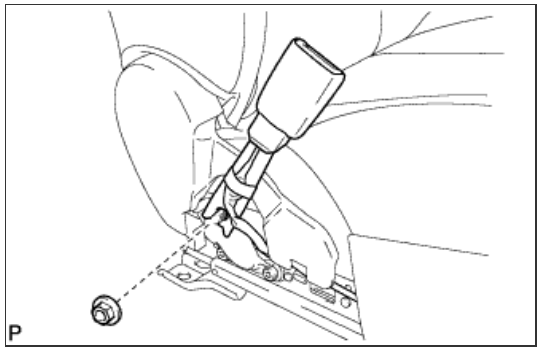

8. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the claw and clip, and then remove the cushion shield.

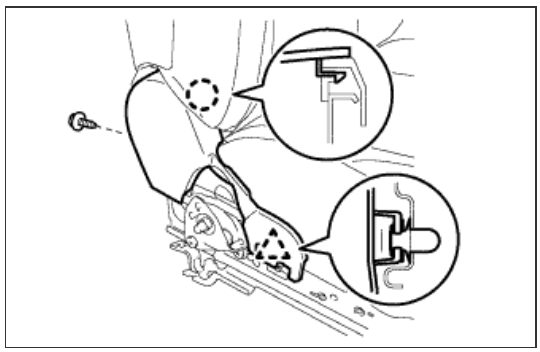

9. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

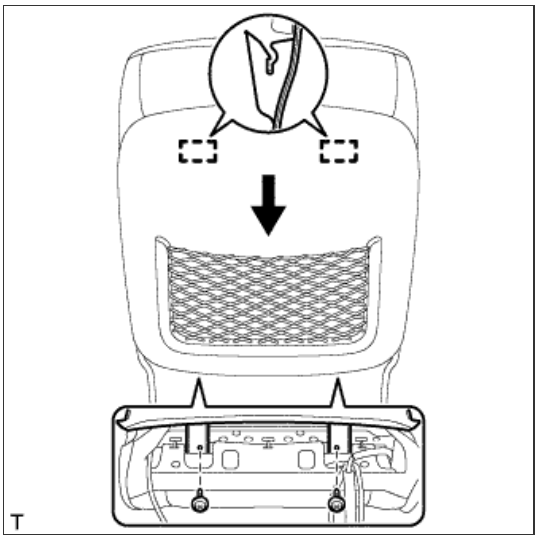

10. REMOVE FRONT SEAT HEADREST SUPPORT (w/ Active Headrest)


a. Detach the 4 claws and remove the 2 headrest supports.

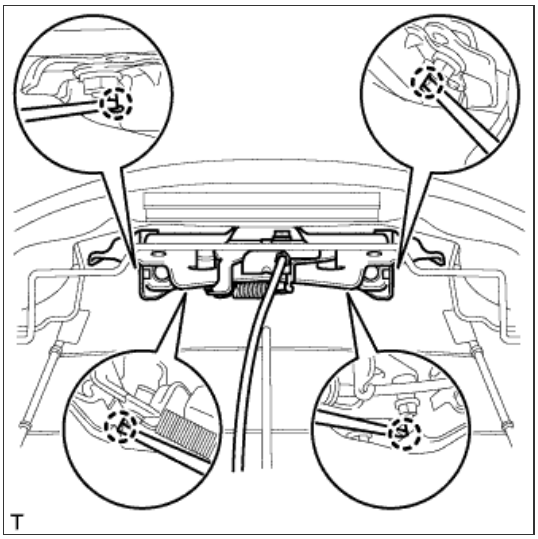


11. REMOVE SEATBACK COVER WITH PAD

a. w/ Seatback Board:

i. Remove the 3 hog rings and detach the 9 hooks.

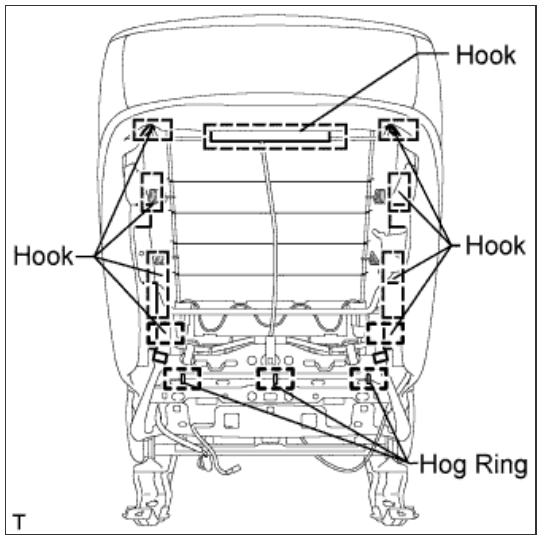


ii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

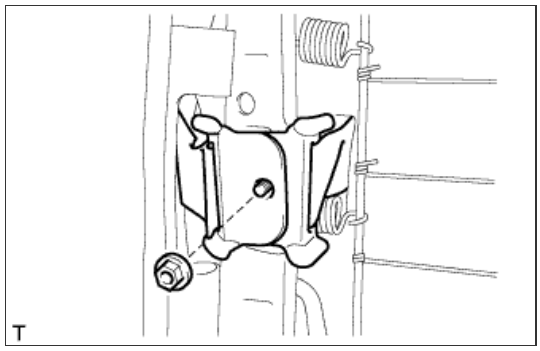


b. w/o Seatback Board:


i. Remove the 3 hog rings.

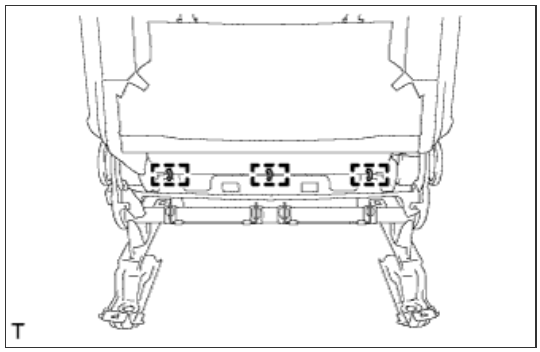

ii. Open the 2 fasteners, and then open the seatback cover.

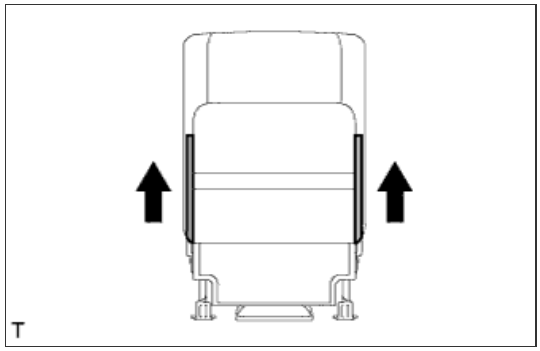


iii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

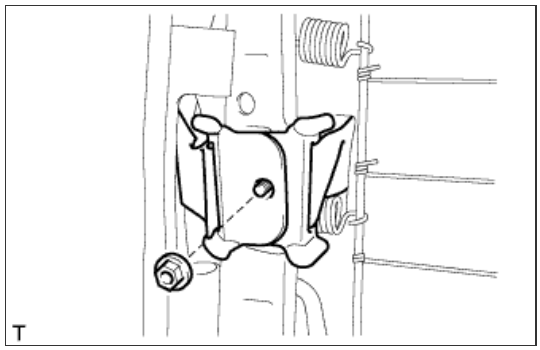

iv. Detach the 4 claws and remove the 2 headrest supports.


c. Remove the seatback cover with pad from the seatback frame.

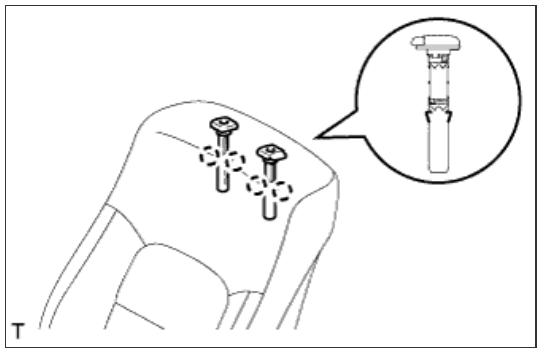

12. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (w/ Lumbar Support)


a. Remove the 4 springs.

b. Detach the 4 hooks and remove the seatback spring.

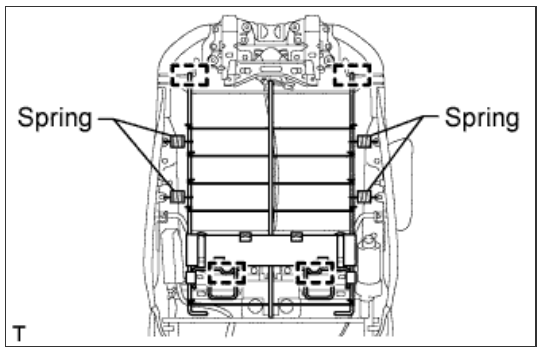

c. Disconnect the lumbar support ad ter connector.

d. Remove the 2 screws and lumbar support ad ter.

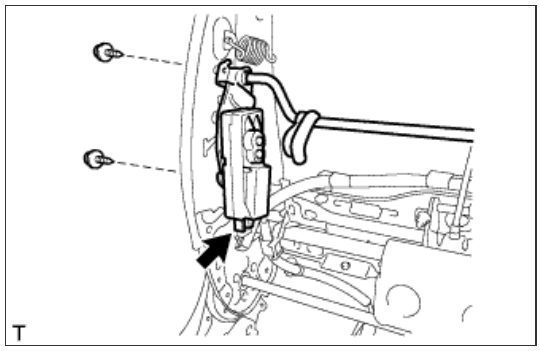

for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH


a. Remove the front seat assembly (Click here).

2. REMOVE VERTICAL ADJUSTER COVER LH (for 8 Way Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the vertical ad ter cover.


HINT:

Tape the screwdriver tip before use.

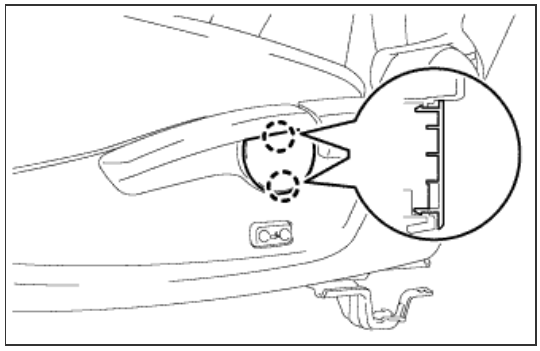


3. REMOVE VERTICAL ADJUSTING HANDLE LH (for 8 Way Seat Type)

a. Remove the 2 screws and vertical ad ting handle.

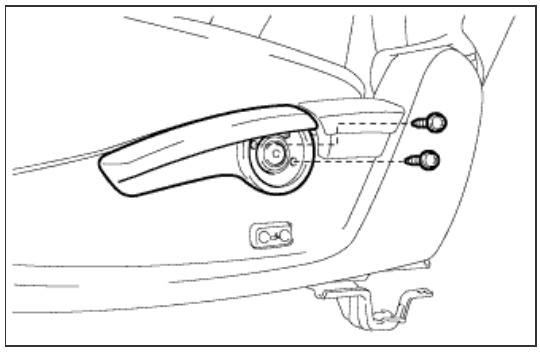

4. REMOVE VERTICAL SEAT ADJUSTER KNOB (for 8 Way Seat Type)

a. Remove the snap ring and vertical seat ad ter knob.

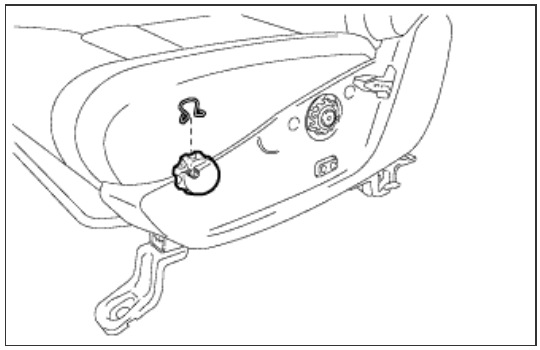


5. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH

a. Lift the reclining ad ter release handle.

b. Using a screwdriver, detach the claw and remove the reclining ad ter release handle.


HINT:

Tape the screwdriver tip before use.

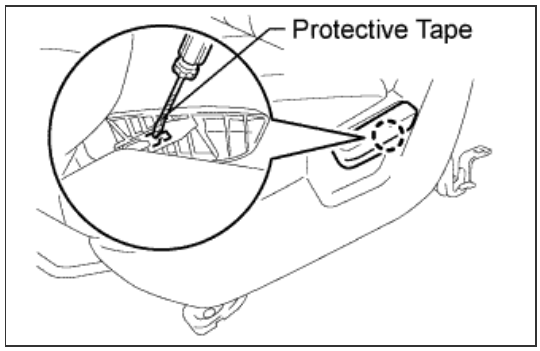


6. REMOVE FRONT SEAT CUSHION SHIELD LH

a. w/ Seatback Board:
Remove the 2 rubber bands from the hooks.

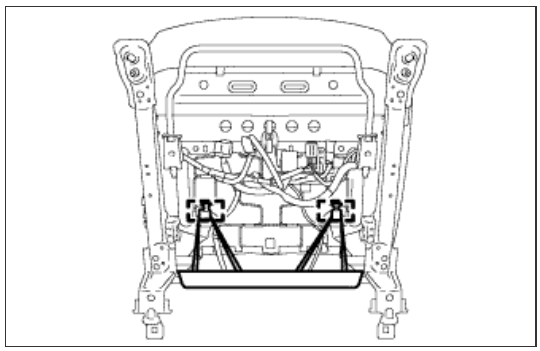


b. w/o Seatback Board:
Remove the 2 rubber bands from the hooks.

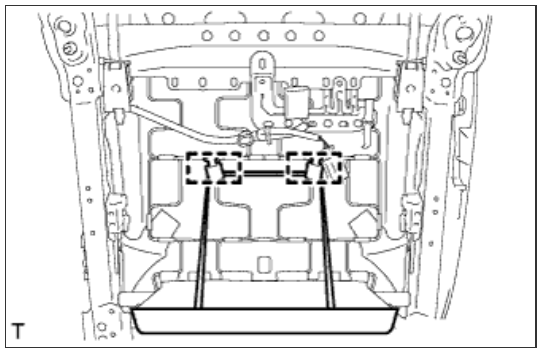

c. for 4 Way Seat Type:

i. Remove the 2 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then remove the cushion shield.

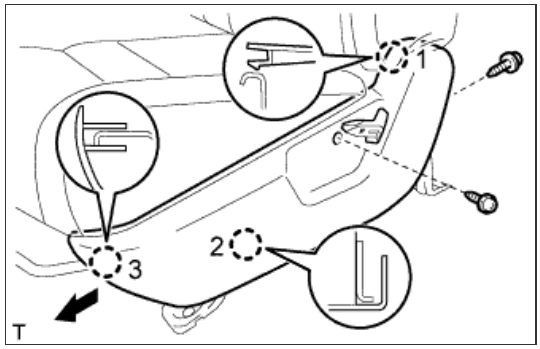


d. for Way Seat Type:

i. Remove the 3 screws.

ii. Detach the 3 claws in the order shown in the illustration, and then

remove the cushion shield.


e. w/ Lumbar Support:
Disconnect the lumbar switch connector.

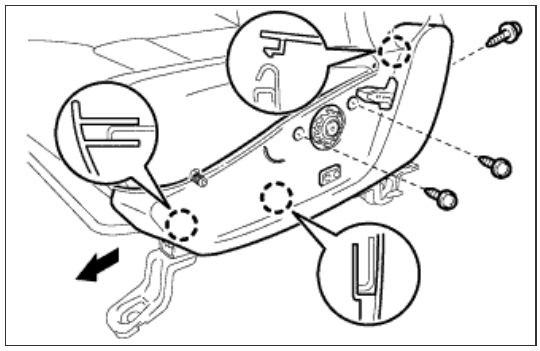

7. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

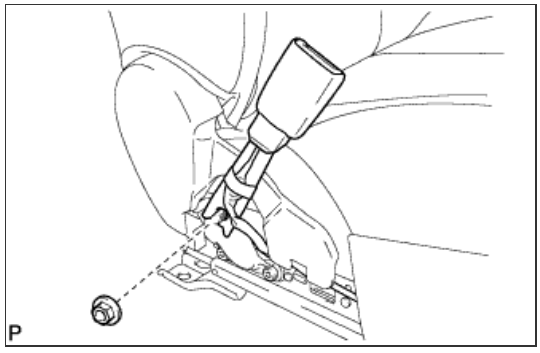

8. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the claw and clip, and then remove the cushion shield.

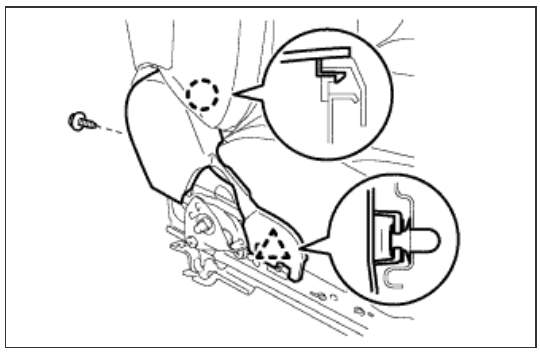

9. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

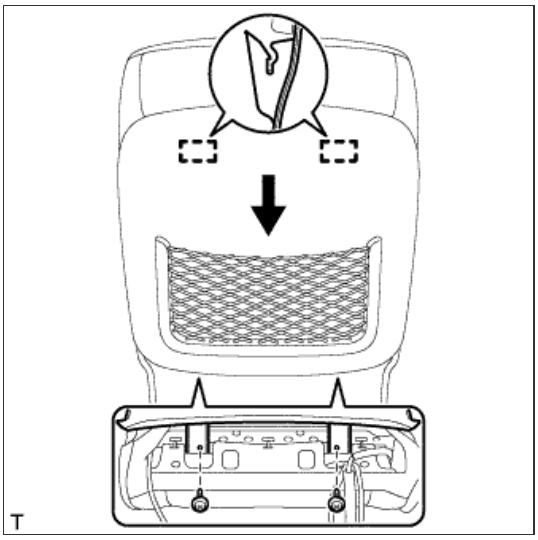

10. REMOVE FRONT SEAT HEADREST SUPPORT (w/ Active Headrest)


a. Detach the 4 claws and remove the 2 headrest supports.

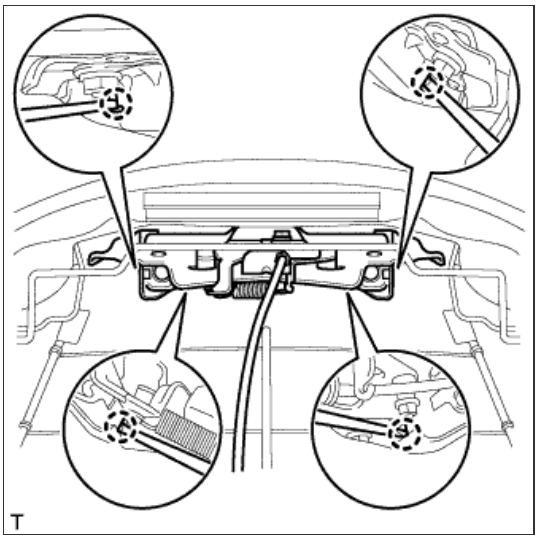


11. REMOVE SEATBACK COVER WITH PAD

a. w/ Seatback Board:

i. Remove the 3 hog rings and detach the 9 hooks.

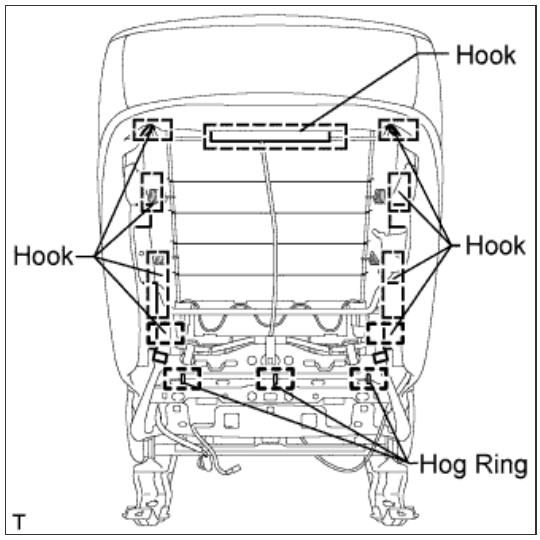


ii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

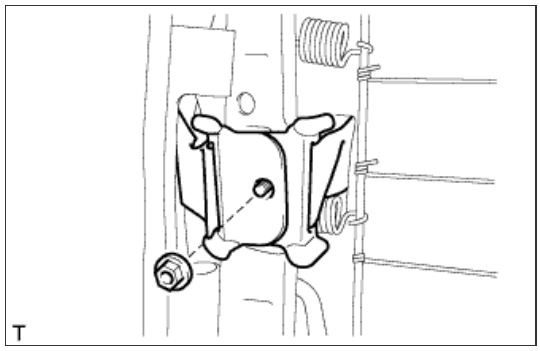


b. w/o Seatback Board:


i. Remove the 3 hog rings.

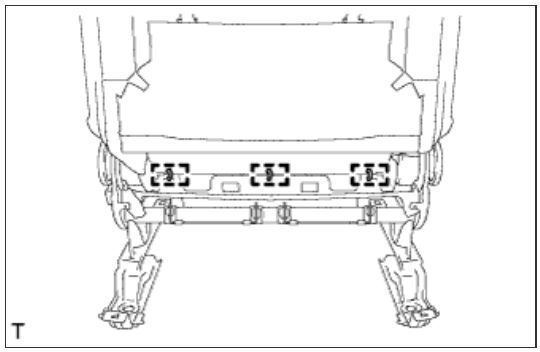

ii. Open the 2 fasteners, and then open the seatback cover.

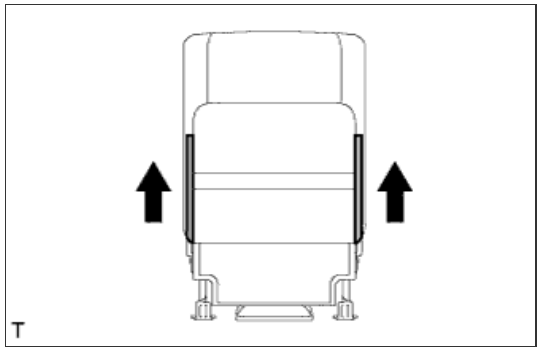


iii. w/ Front Seat Side Airbag:
Remove the nut and seatback cover bracket from the seat frame.

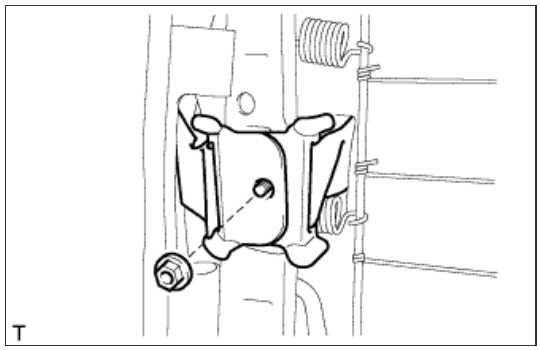

iv. Detach the 4 claws and remove the 2 headrest supports.


c. Remove the seatback cover with pad from the seatback frame.

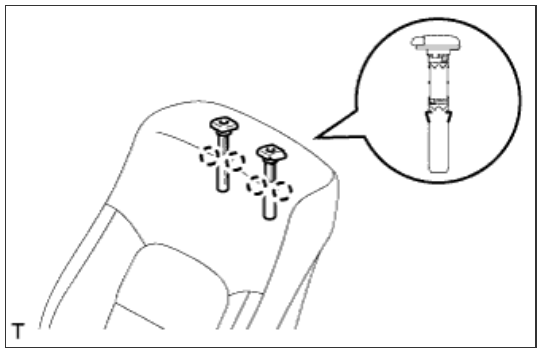

12. REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (w/ Lumbar Support)


a. Remove the 4 springs.

b. Detach the 4 hooks and remove the seatback spring.

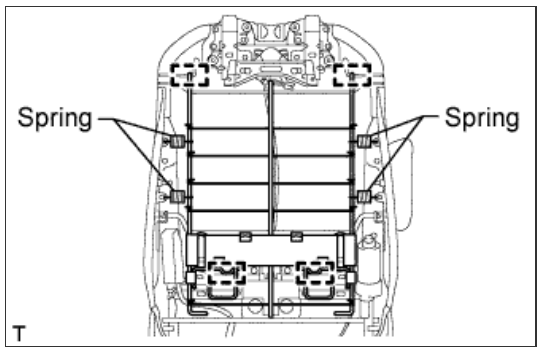

c. Disconnect the lumbar support ad ter connector.

d. Remove the 2 screws and lumbar support ad ter.

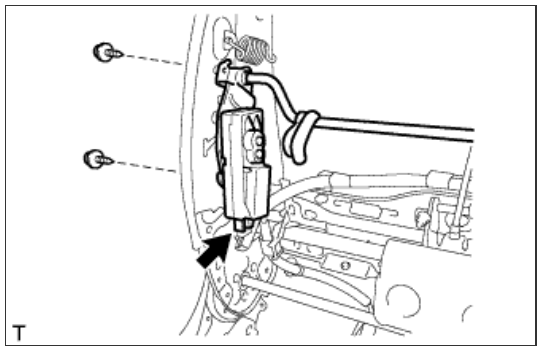

for Preparation Click here

1. INSPECT LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (for LHD)


a. Check the operation of the lumbar support adjuster.

i. Check if the lumbar support adjuster moves smoothly when the battery is connected to the lumbar support adjuster motor connector terminals.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 1 Battery negative (-) → 2	Hold
Battery positive (+) → 2 Battery negative (-) → 1	Release

If the result is not as specified, replace the lumbar support adjuster assembly.

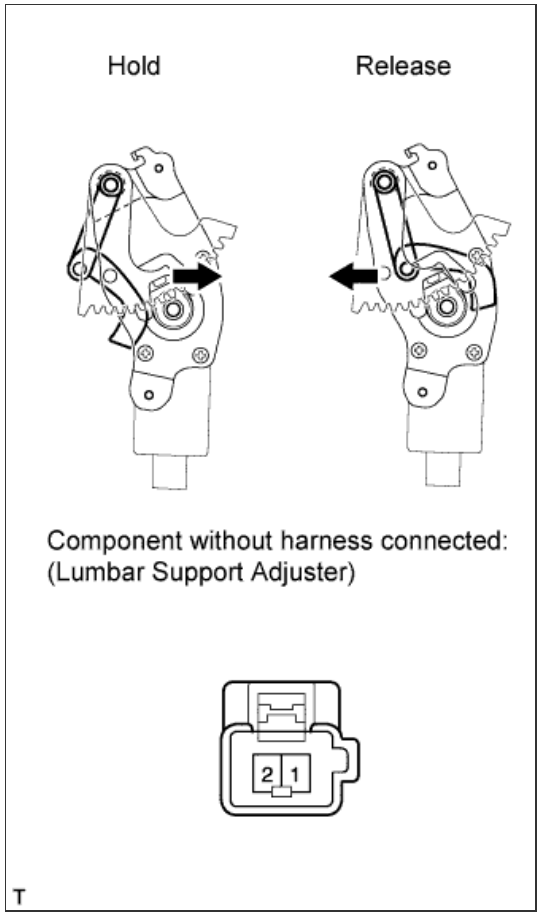

2. INSPECT LUMBAR SUPPORT ADJUSTER ASSEMBLY RH (for RHD)


a. Check the operation of the lumbar support adjuster.

i. Check if the lumbar support adjuster moves smoothly when the battery is connected to the lumbar support adjuster motor connector terminals.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Hold
Battery positive (+) → 1 Battery negative (-) → 2	Release

If the result is not as specified, replace the lumbar support adjuster assembly.

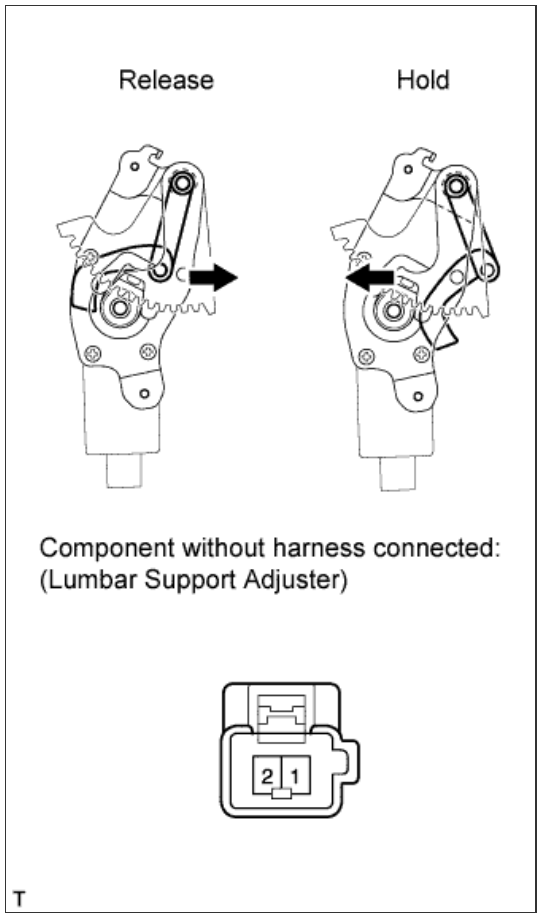
Release
Hold
Component without harness connected:
(Lumbar Support Adjuster)
2
1
T

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (w/ Lumbar support)


a. Install the lu ar support ad uster with the screws.

b. Connect the lu ar support ad uster connector.

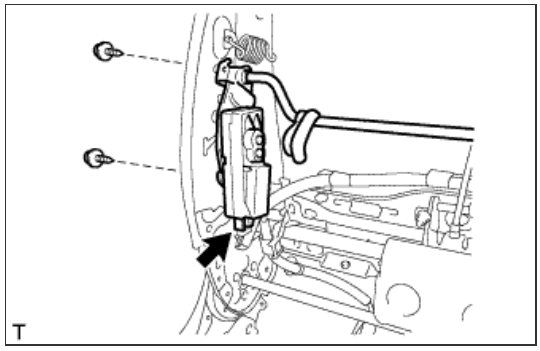

c. Attach the 4 hooks to install the seatback spring.

d. Install the 4 springs.

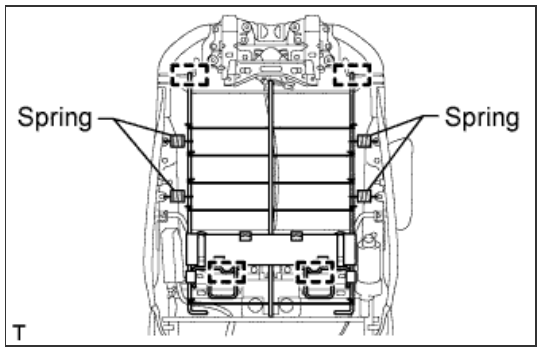

2. INSTALL SEATBACK COVER WITH PAD

a. Install the seatback cover with pad to the seatback fra e.

b. w/ Seatback Board

i. Front Seat Side Airbag


Install the seatback cover bracket to the seat frame with the nut.

Torque:

5.0 N*m{ 51 kgf*cm , 44 in.*lbf


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

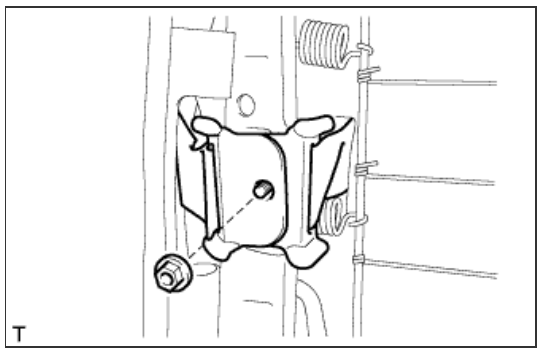


ii. Attach the hooks.

iii. Using hog ring pliers, install new hog rings to the seat frame.

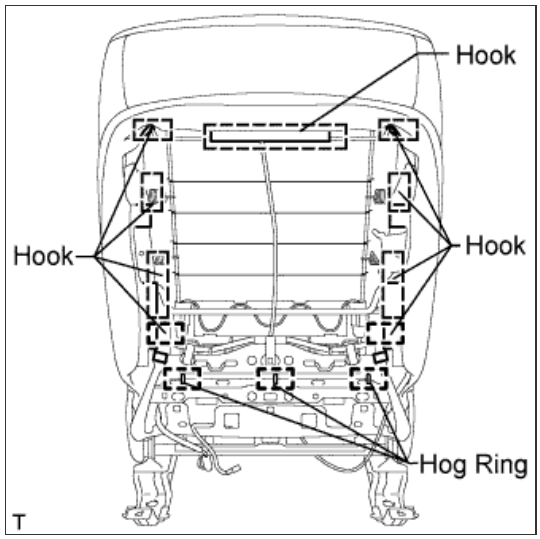

c. w/o Seatback Board:

i. Attach the 4 claws to install the 2 headrest supports.

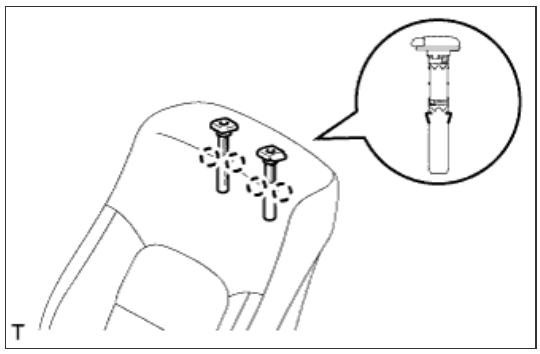


ii. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf

CAUTION:


After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

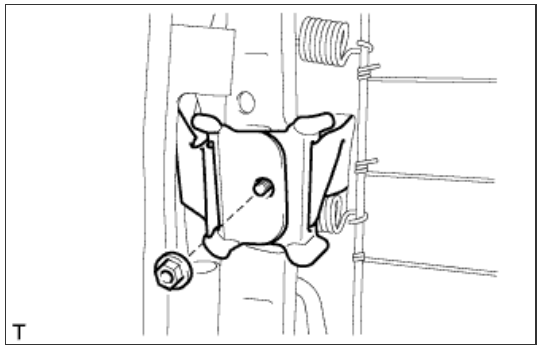

iii. Close the 2 fasteners, and then close the seatback cover.

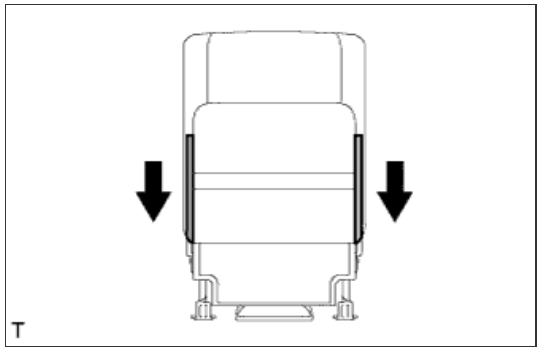

iv. Using hog ring pliers, install new hog rings to the seat frame.

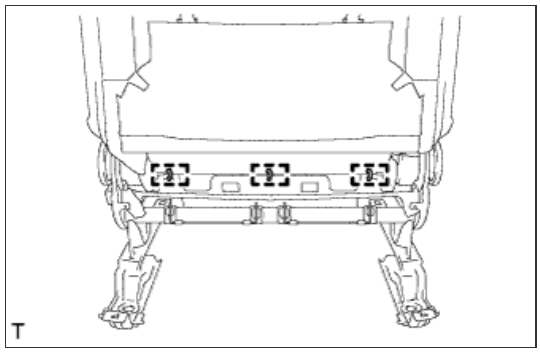


. INSTALL KNT SEAT HEADREST SUPPORT (w/ Active Headrest)

a. Attach the 4 claws to install the 2 headrest supports.

4. INSTALL KNT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.


b. Install the 2 screws.

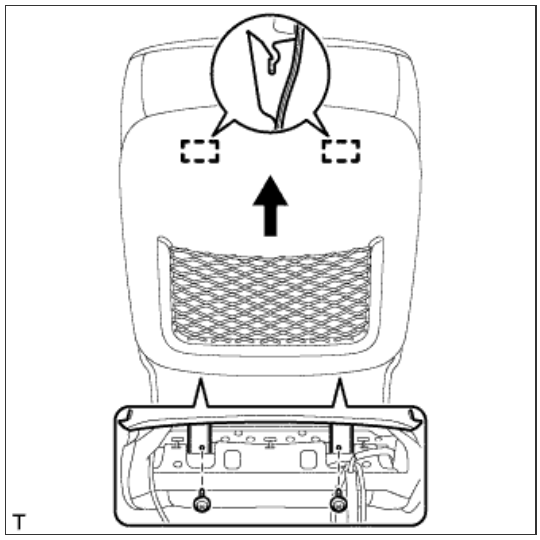

5. INSTALL KNT INNER SEAT CUSHION SHIELD LH

a. Attach the claw and clip to install the cushion shield.

b. Install the screw.

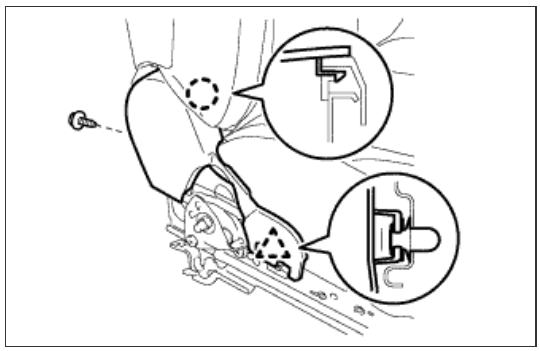

6. INSTALL KNT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 42 kgf*cm , 1 ft.*lbf

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding part of the front seat adjuster.

b. Connect the connectors and attach the clamps.

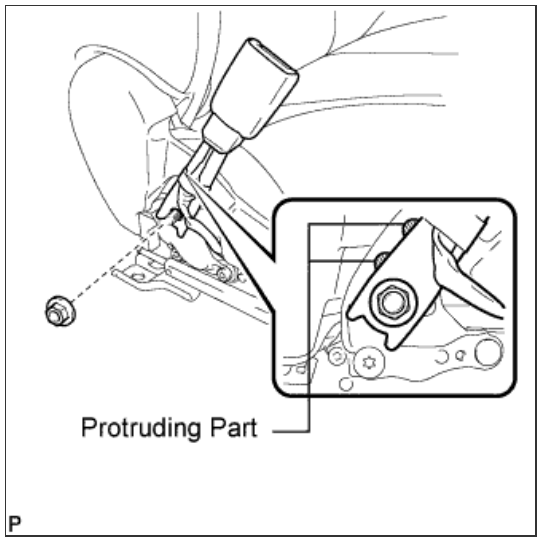


7. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for 4 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.

ii. Install the 2 screws.

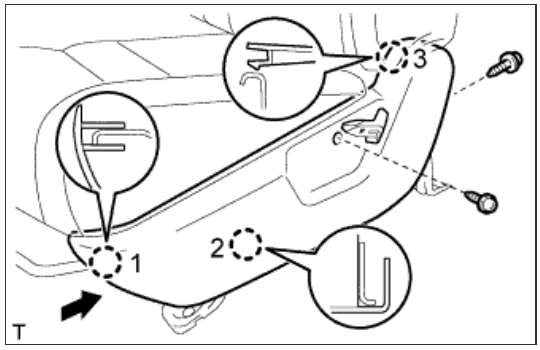


b. w/ Lumbar Support:
Connect the lumbar switch connector.


c. for 8 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.


ii. Install the 3 screws.

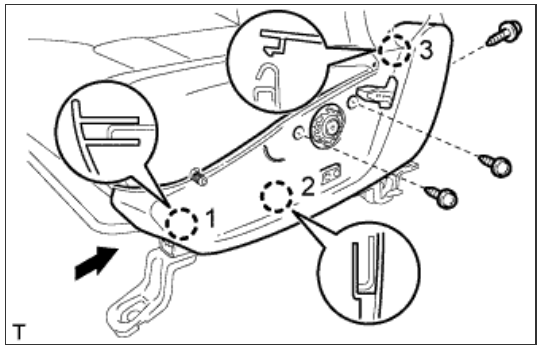

d. w/ Seatback Board:
Attach the 2 rubber bands to the hooks.

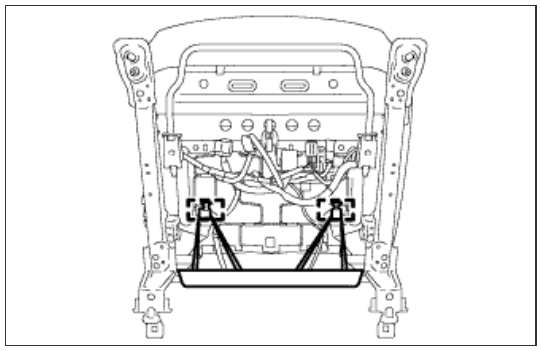


e. w/o Seatback Board:
Attach the 2 rubber bands to the hooks.

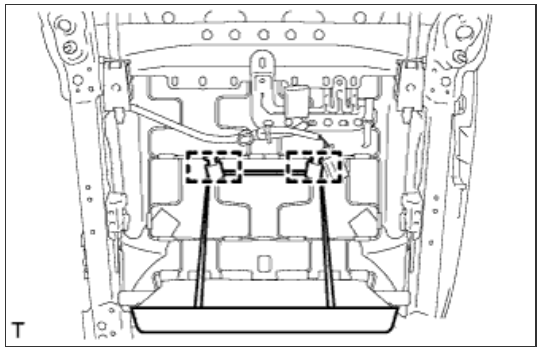

. INSTALL RECLININ ADJUSTER RELEASE HANDLE LH


a. Attach the claw to install the reclining adjuster release handle.

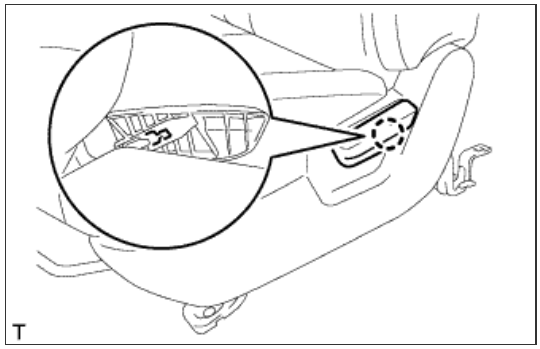

9. INSTALL VERTICAL SEAT ADJUSTER KNOB (for Wa Seat T pe)


a. Install the snap ring to the vertical seat adjuster knob.

b. Install the vertical seat adjuster knob to the front seat.

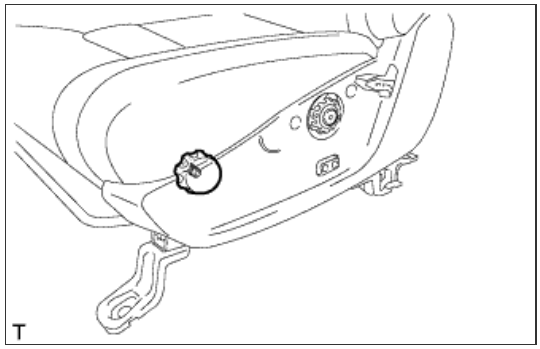


10. INSTALL VERTICAL ADJUSTIN HANDLE LH (for Wa Seat T pe)

a. Install the vertical adjusting handle with the 2 screws.

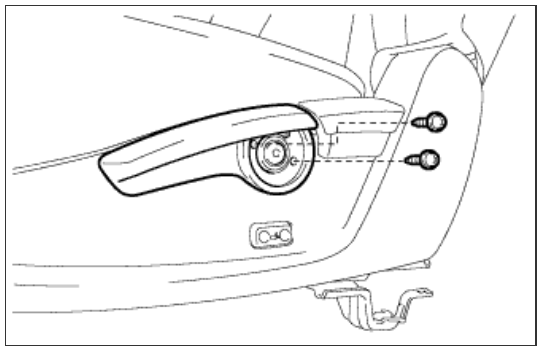

11. INSTALL VERTICAL ADJUSTER COVER LH (for Manual Seat Type)

a. Attach the 2 claws to install the vertical adjuster cover.

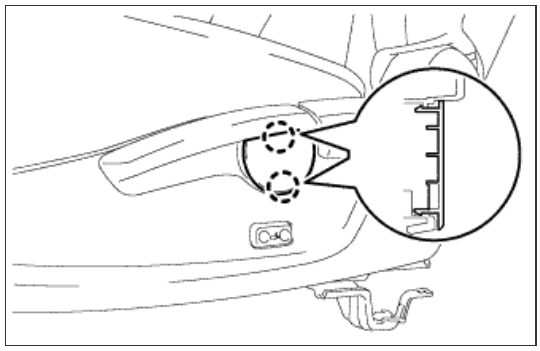

12. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (w/ Lumbar support)


a. Install the lumbar support adjuster with the 2 screws.

b. Connect the lumbar support adjuster connector.

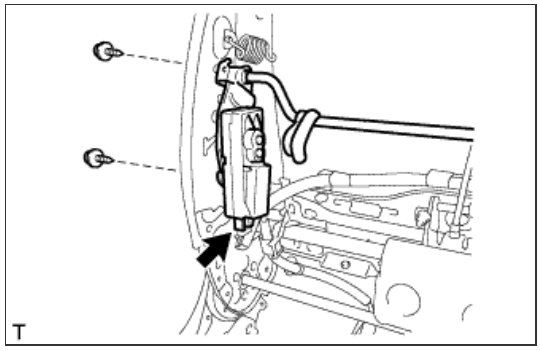

c. Attach the 4 hooks to install the seatback spring.

d. Install the 4 springs.

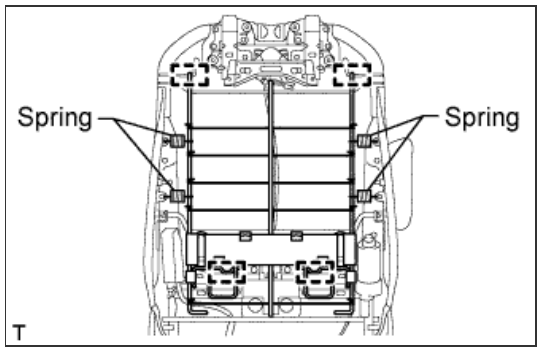

2. INSTALL SEATBACK COVER WITH PAD

a. Install the seatback cover with pad to the seatback frame.


b. w/ Seatback Board:

i. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

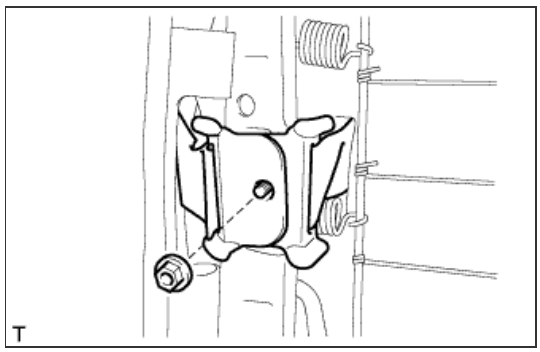


ii. Attach the hooks.

iii. Using hog ring pliers, install new hog rings to the seat frame.

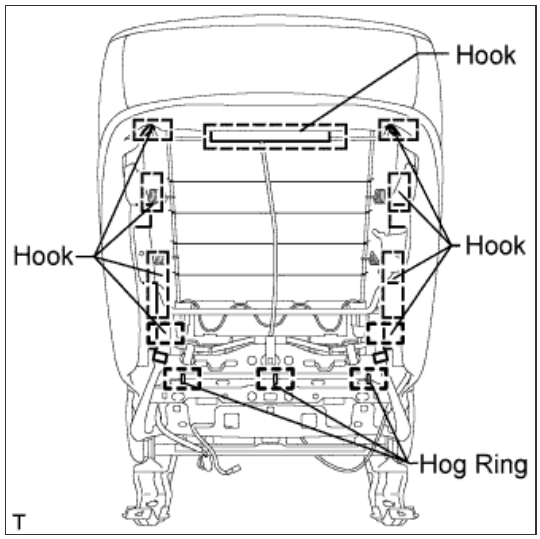

c. w/o Seatback Board:

i. Attach the 4 claws to install the 2 headrest supports.

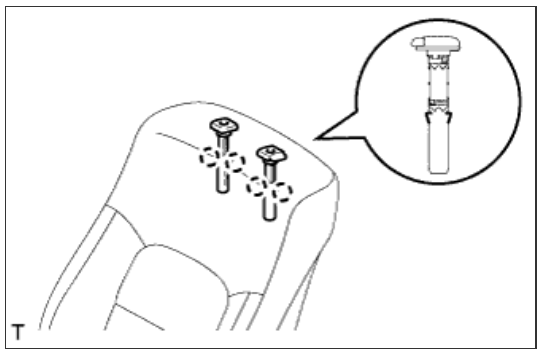


ii. w/ Front Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the nut.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf

CAUTION:


After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

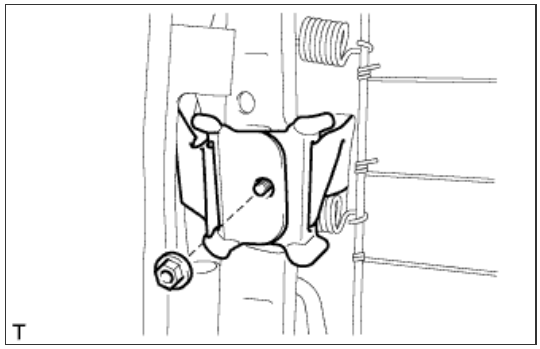

iii. Close the 2 fasteners, and then close the seatback cover.

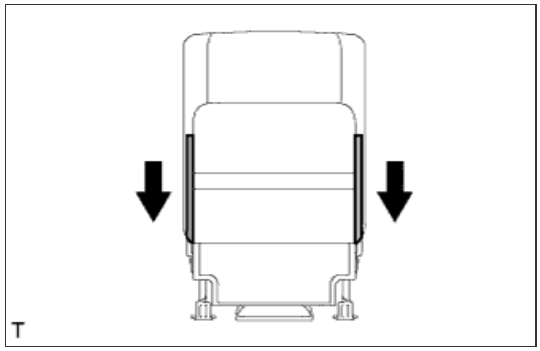

iv. Using hog ring pliers, install new hog rings to the seat frame.

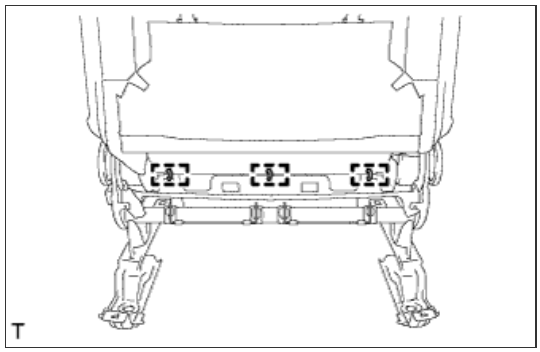


. INSTALL KNT SEAT HEADREST SUPPORT (w/ Active Headrest)

a. Attach the 4 claws to install the 2 headrest supports.

4. INSTALL KNT SEATBACK BOARD SUB-ASSEMBLY LH (w/ Seatback Board)

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.


b. Install the 2 screws.

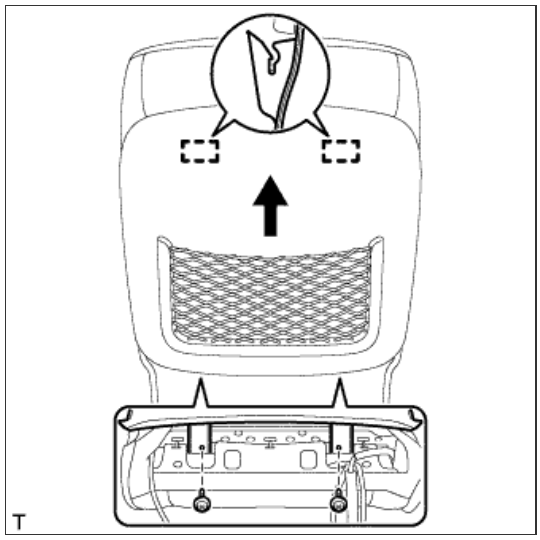

5. INSTALL KNT INNER SEAT CUSHION SHIELD LH

a. Attach the claw and clip to install the cushion shield.

b. Install the screw.

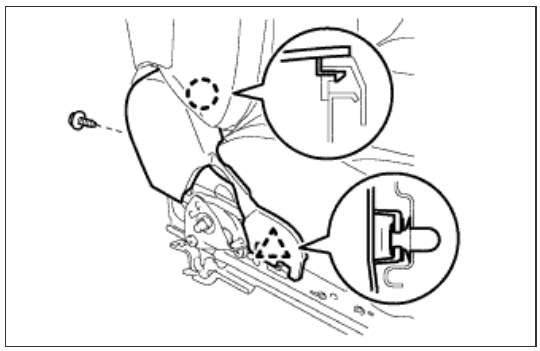

6. INSTALL KNT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 42 kgf*cm , 1 ft.*lbf

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding part of the front seat adjuster.

b. Connect the connectors and attach the clamps.

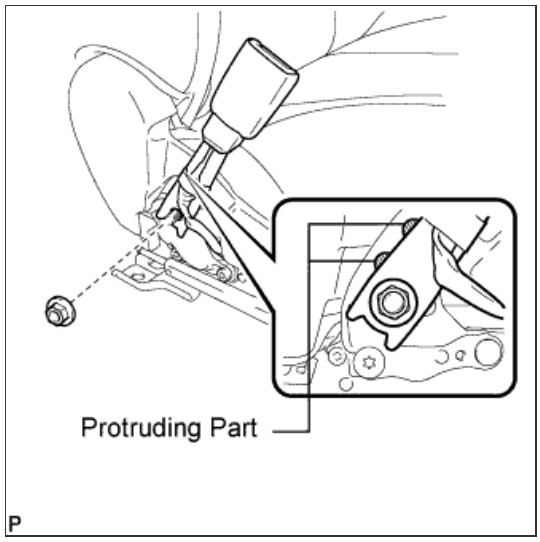


7. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for 4 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.

ii. Install the 2 screws.

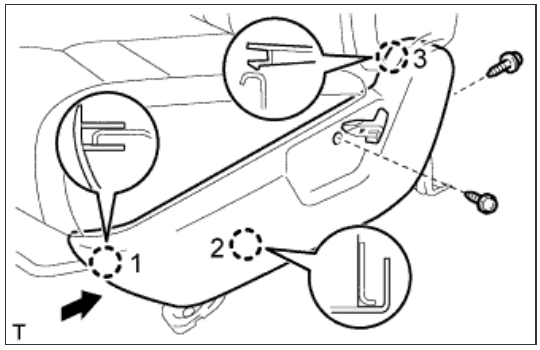


b. w/ Lumbar Support:
Connect the lumbar switch connector.


c. for 8 Way Seat Type:

i. Attach the 3 claws in the order shown in the illustration to install the cushion shield.


ii. Install the 3 screws.

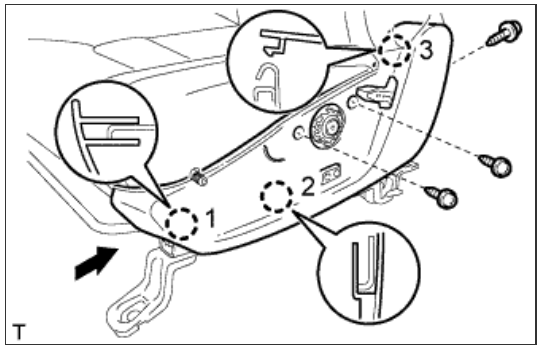

d. w/ Seatback Board:
Attach the 2 rubber bands to the hooks.

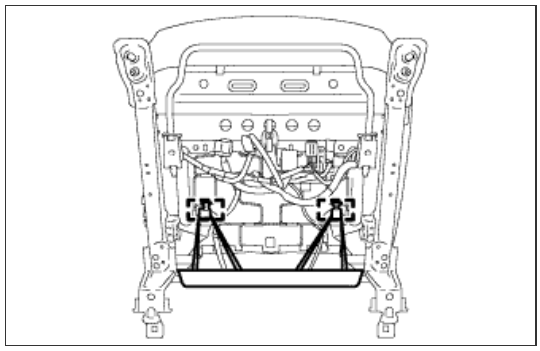


e. w/o Seatback Board:
Attach the 2 rubber bands to the hooks.

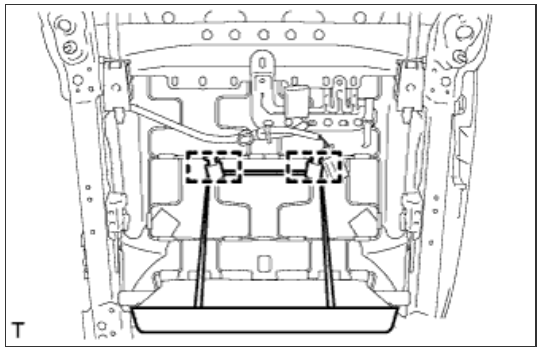

. INSTALL RECLININ ADJUSTER RELEASE HANDLE LH


a. Attach the claw to install the reclining adjuster release handle.

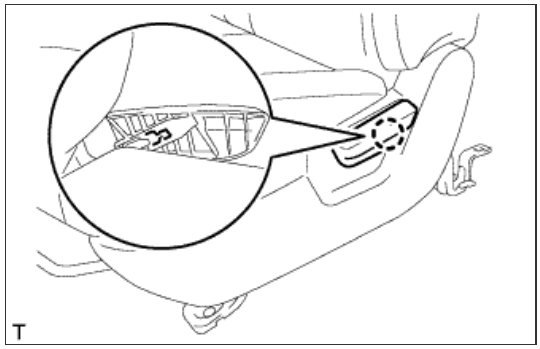

9. INSTALL VERTICAL SEAT ADJUSTER KNOB (for Wa Seat T pe)


a. Install the snap ring to the vertical seat adjuster knob.

b. Install the vertical seat adjuster knob to the front seat.

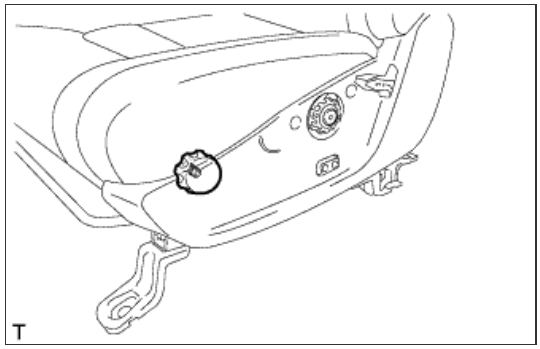


10. INSTALL VERTICAL ADJUSTIN HANDLE LH (for Wa Seat T pe)

a. Install the vertical adjusting handle with the 2 screws.

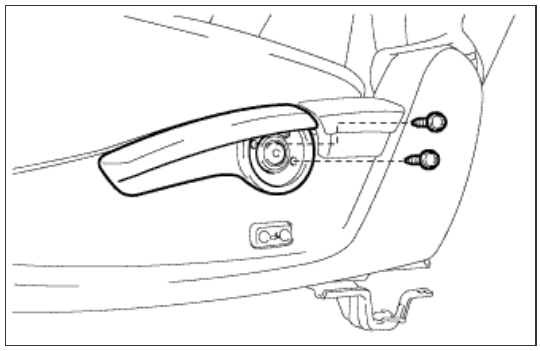

11. INSTALL VERTICAL ADJUSTER COVER LH (for Manual Seat Type)


a. Attach the 2 claws to install the vertical adjuster cover.

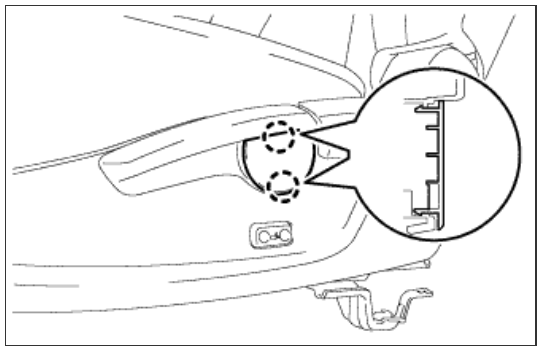


12. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).

for Preparation Click here

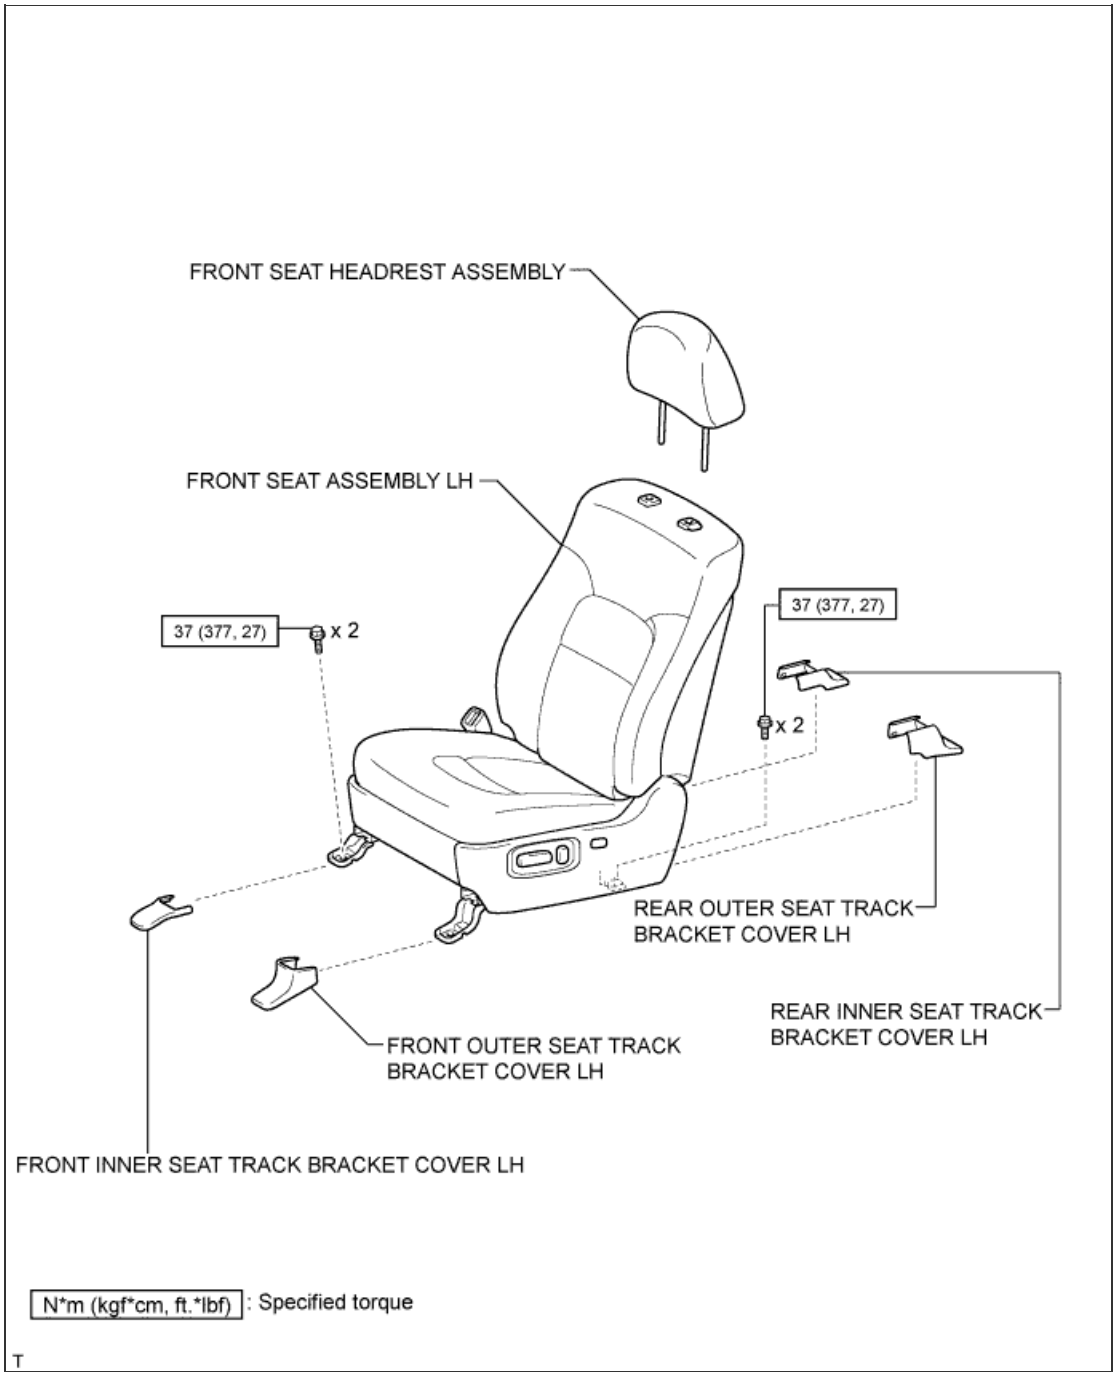

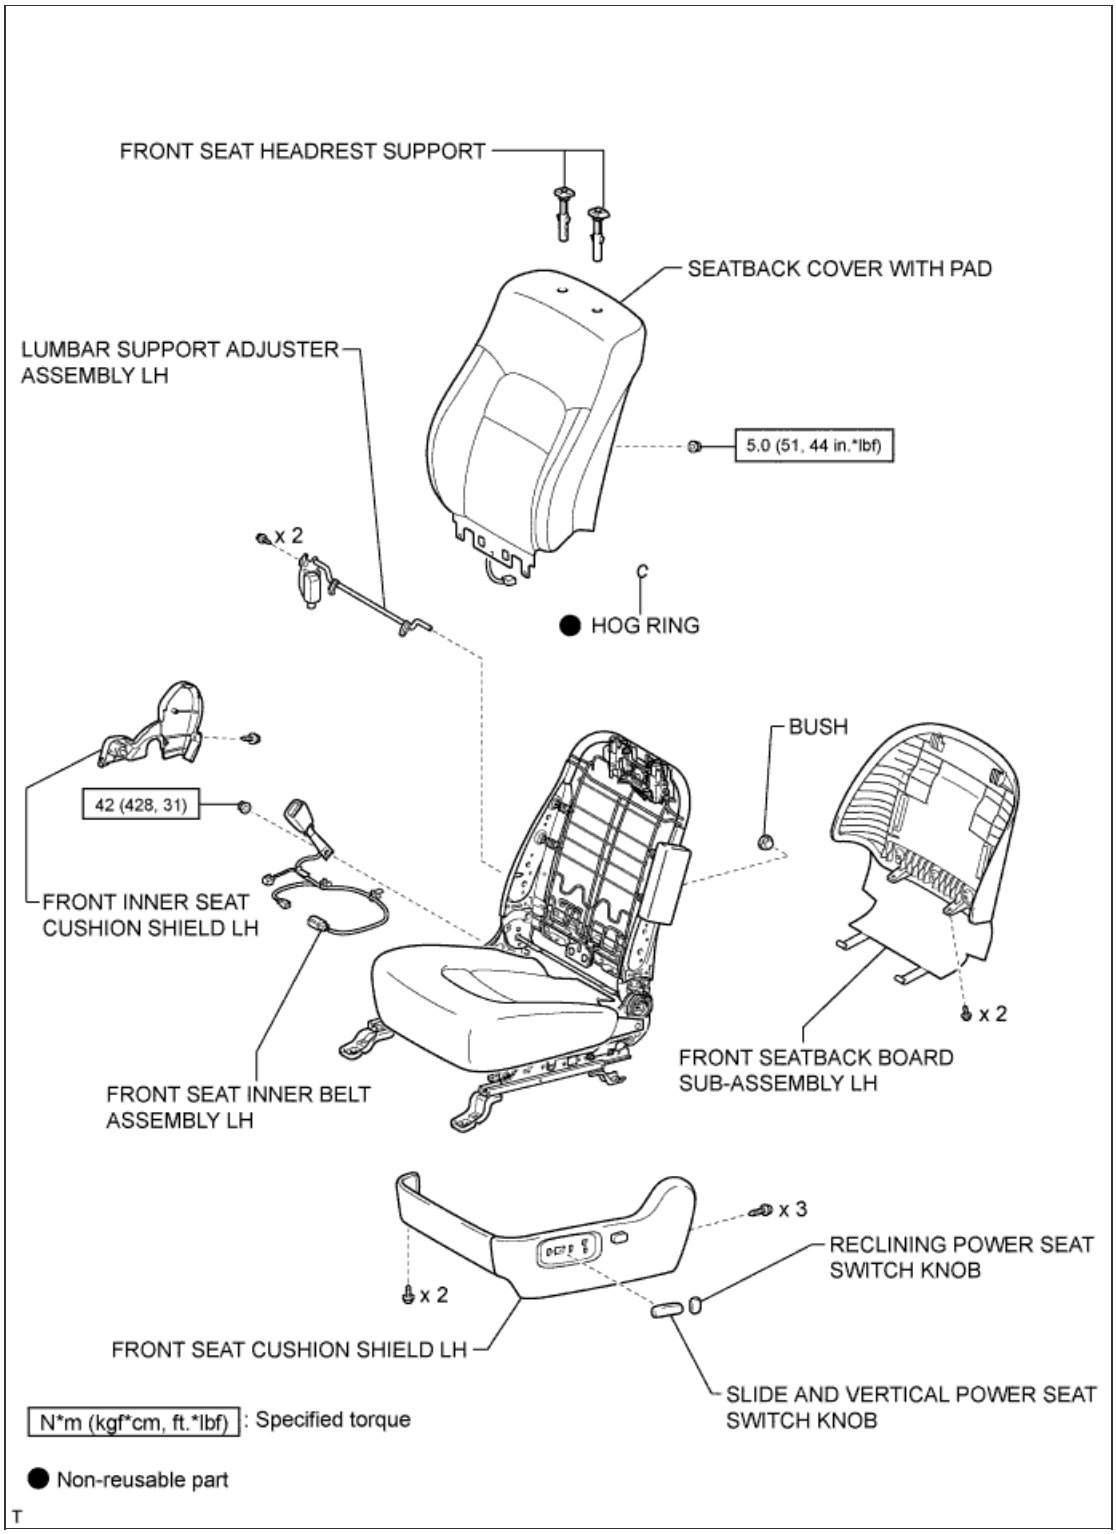
FRONT SEAT HEADREST SUPPORT
SEATBACK COVER WITH PAD
LUMBAR SUPPORT ADJUSTER ASSEMBLY LH
5.0 (51, 44 in.*lbf)
x 2
HOG RING
BUSH
42 (428, 31)
FRONT INNER SEAT CUSHION SHIELD LH
x 2
FRONT SEATBACK BOARD SUB-ASSEMBLY LH
FRONT SEAT INNER BELT ASSEMBLY LH
x 3
RECLINING POWER SEAT SWITCH KNOB
x 2
FRONT SEAT CUSHION SHIELD LH
SLIDE AND VERTICAL POWER SEAT SWITCH KNOB
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

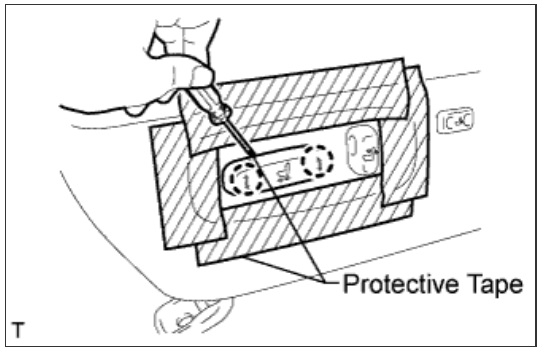


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

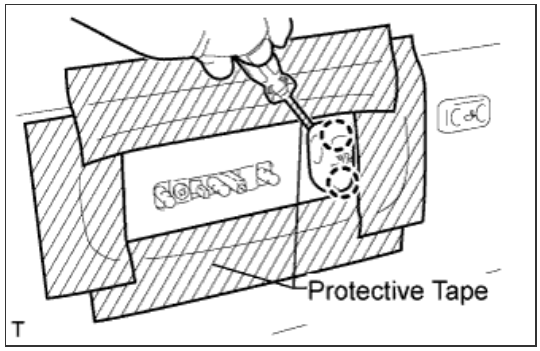

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

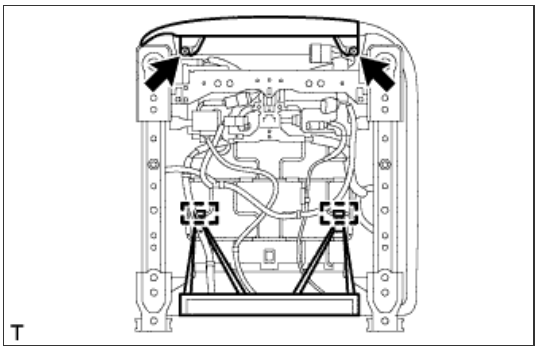

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side:
Disconnect the power seat lumbar switch connectors.

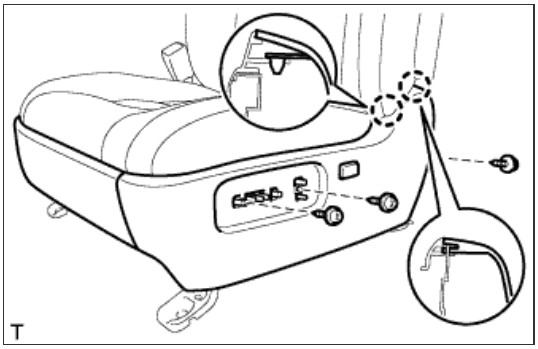

5. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

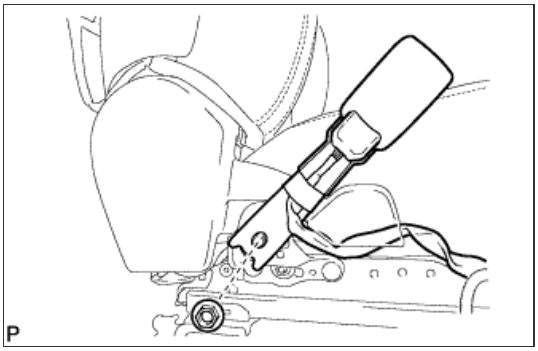

6. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the 2 claws and clip, and then remove the cushion shield.

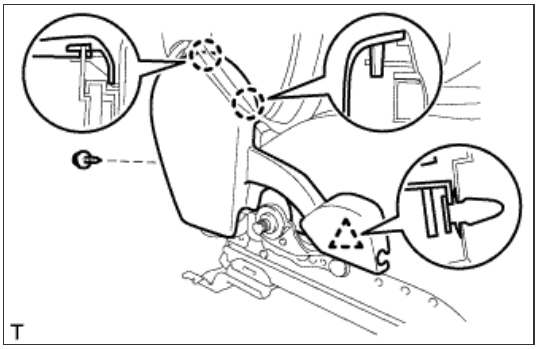

7. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

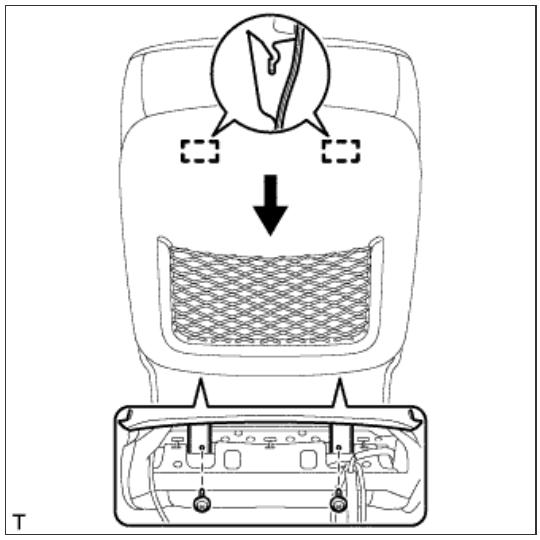


8. REMOVE FRONT SEAT HEADREST SUPPORT

a. Using a screwdriver, detach the 4 claws and remove the 2 headrest supports.

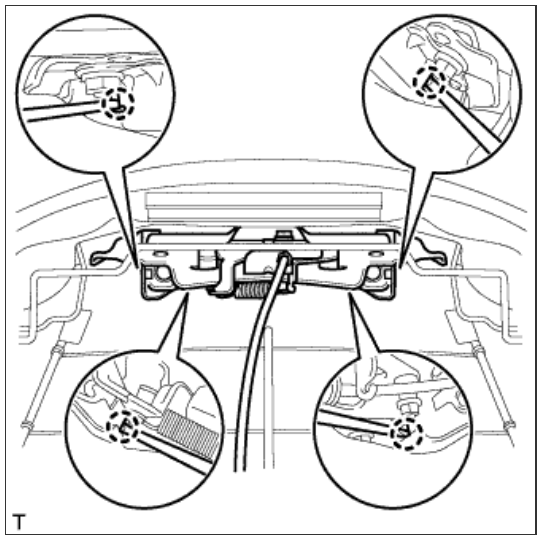


9. REMOVE SEATBACK COVER WITH PAD

a. Disconnect the seat heater connector and detach the 2 wire harness clamps.

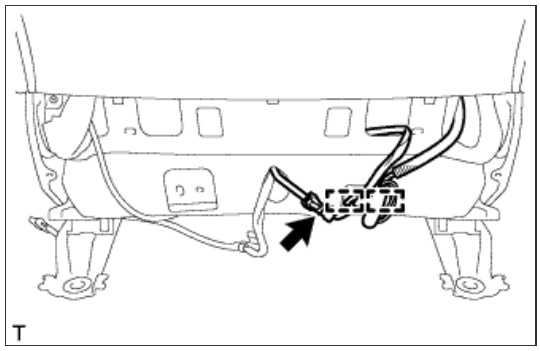


b. Remove the 3 hog rings and detach the 9 hooks.

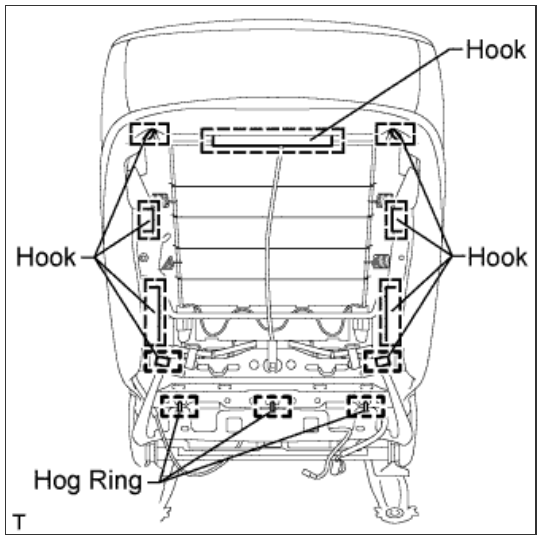

c. Remove the nut and seatback cover bracket from the seat frame.


d. Remove the seatback cover with pad.

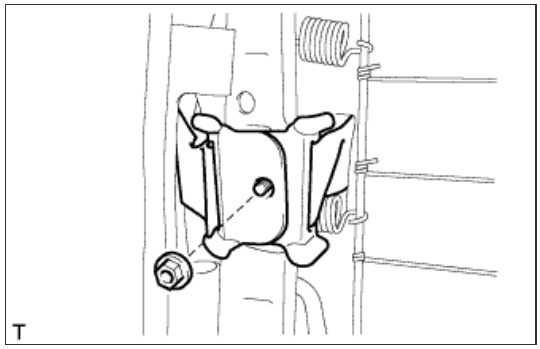

1 . REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (for Driver Side)


a. Remove the 4 springs.

b. Detach the 4 hooks and remove the seatback spring.

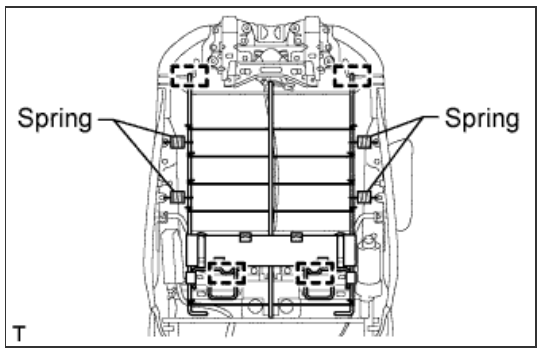

c. Disconnect the lumbar support adjuster connector.

d. Remove the 2 screws and lumbar support adjuster.

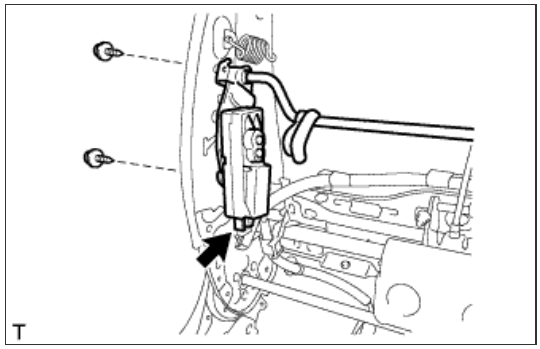

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

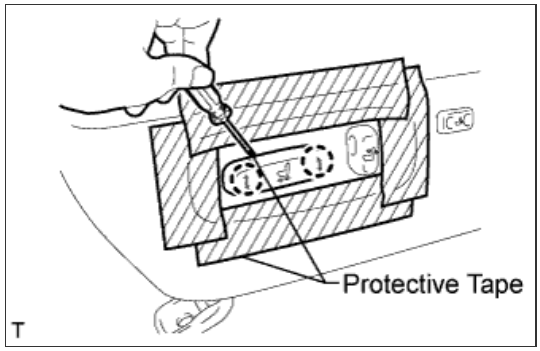


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

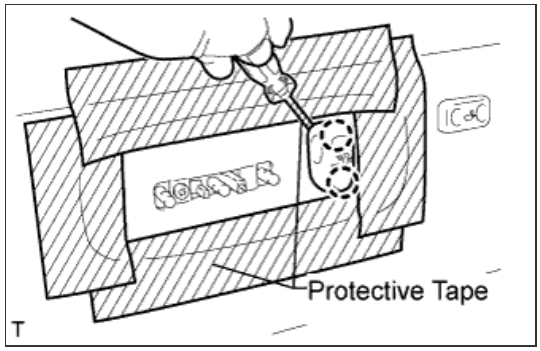

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

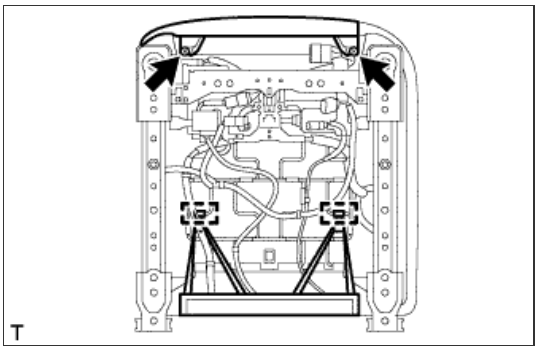

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side:
Disconnect the power seat lumbar switch connectors.

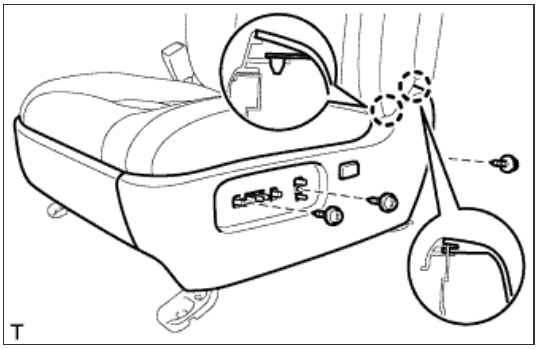

5. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

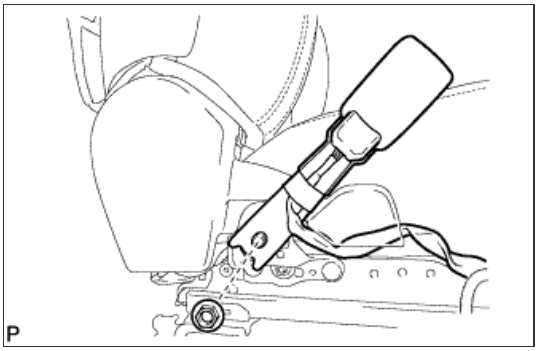

6. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the 2 claws and clip, and then remove the cushion shield.

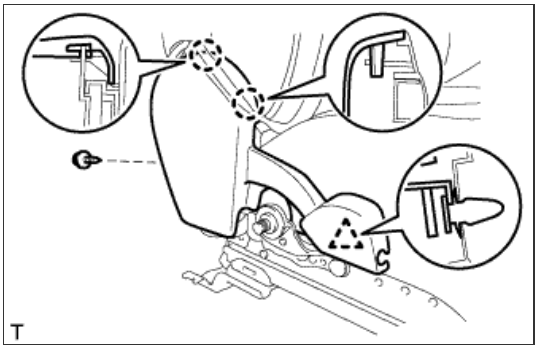

7. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

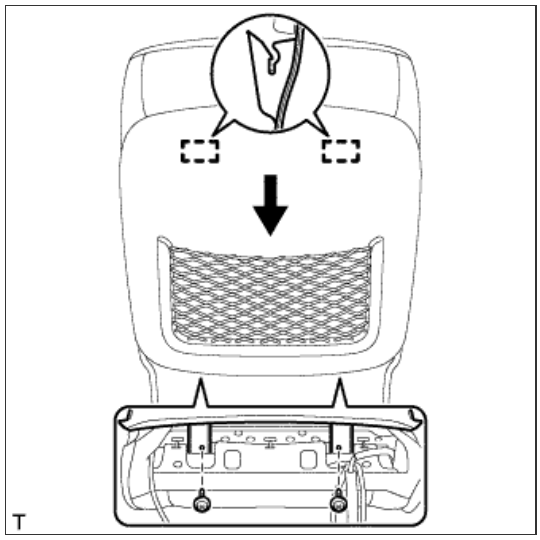


8. REMOVE FRONT SEAT HEADREST SUPPORT

a. Using a screwdriver, detach the 4 claws and remove the 2 headrest supports.

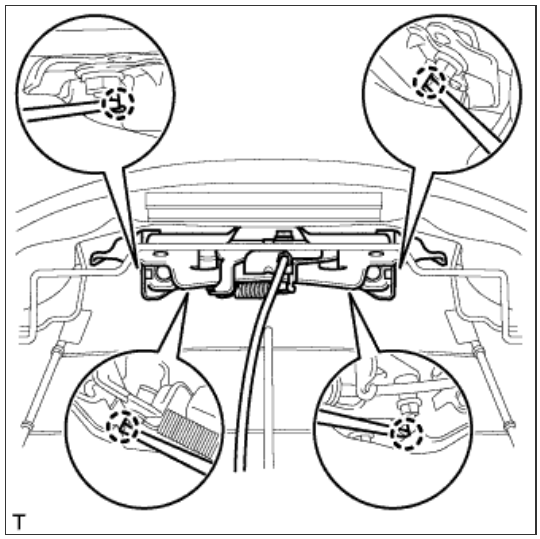


9. REMOVE SEATBACK COVER WITH PAD

a. Disconnect the seat heater connector and detach the 2 wire harness clamps.

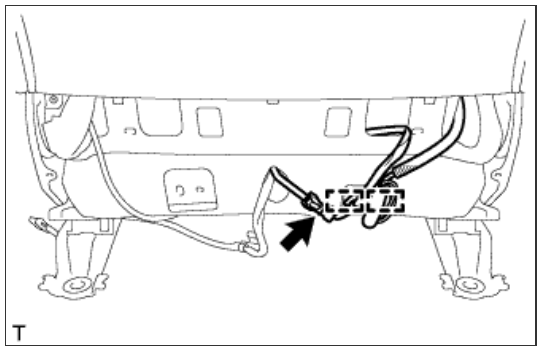


b. Remove the 3 hog rings and detach the 9 hooks.

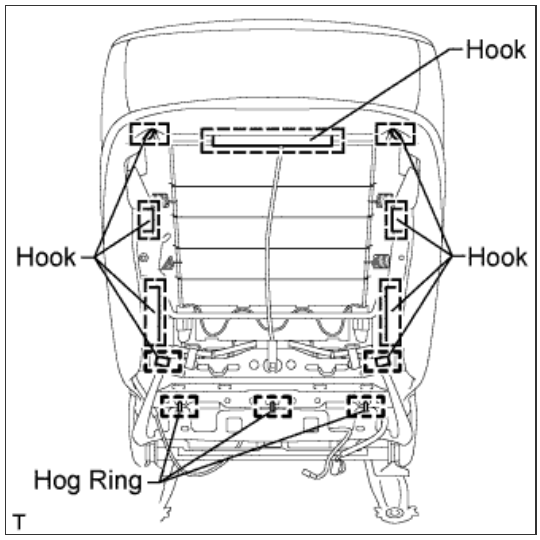

c. Remove the nut and seatback cover bracket from the seat frame.


d. Remove the seatback cover with pad.

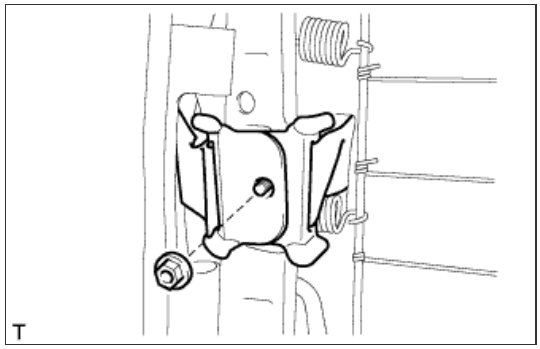

1 . REMOVE LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (for Driver Side)


a. Remove the 4 springs.

b. Detach the 4 hooks and remove the seatback spring.

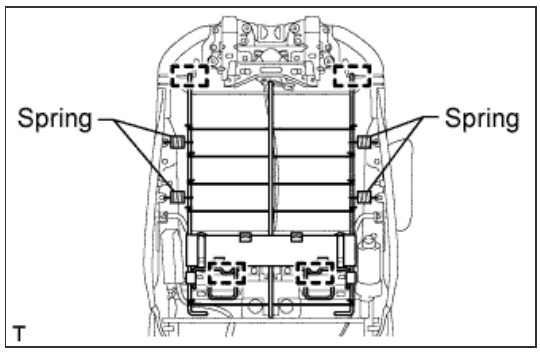

c. Disconnect the lumbar support adjuster connector.

d. Remove the 2 screws and lumbar support adjuster.

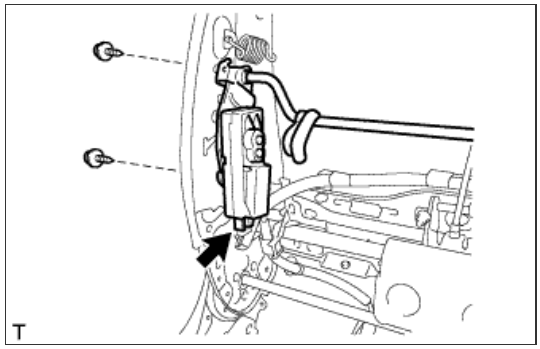

for Preparation Click here

1. INSPECT LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (for LHD)


a. Check the operation of the lumbar support adjuster.

i. Check if the lumbar support adjuster moves smoothly when the battery is connected to the lumbar support adjuster motor connector terminals.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 1 Battery negative (-) → 2	Hold
Battery positive (+) → 2 Battery negative (-) → 1	Release

If the result is not as specified, replace the lumbar support adjuster assembly.

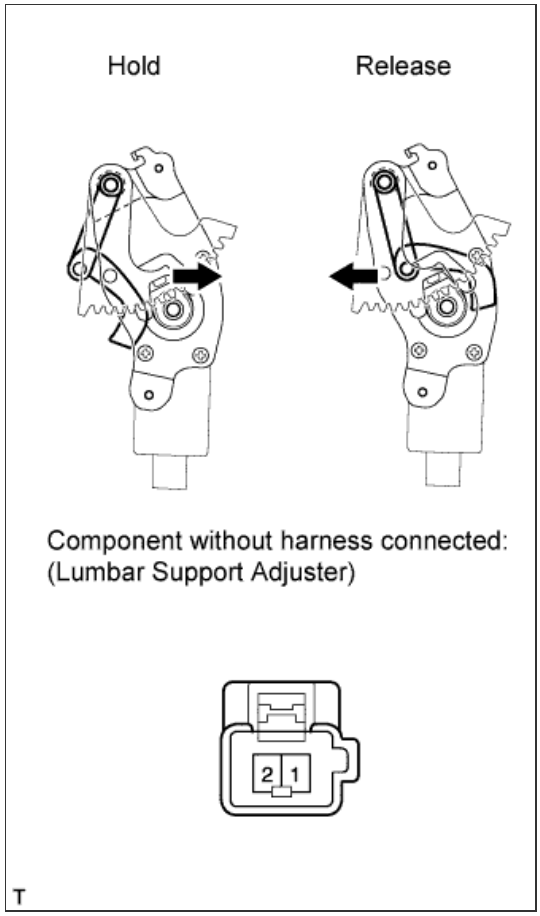

2. INSPECT LUMBAR SUPPORT ADJUSTER ASSEMBLY RH (for RHD)


a. Check the operation of the lumbar support adjuster.

i. Check if the lumbar support adjuster moves smoothly when the battery is connected to the lumbar support adjuster motor connector terminals.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → 2 Battery negative (-) → 1	Hold
Battery positive (+) → 1 Battery negative (-) → 2	Release

If the result is not as specified, replace the lumbar support adjuster assembly.

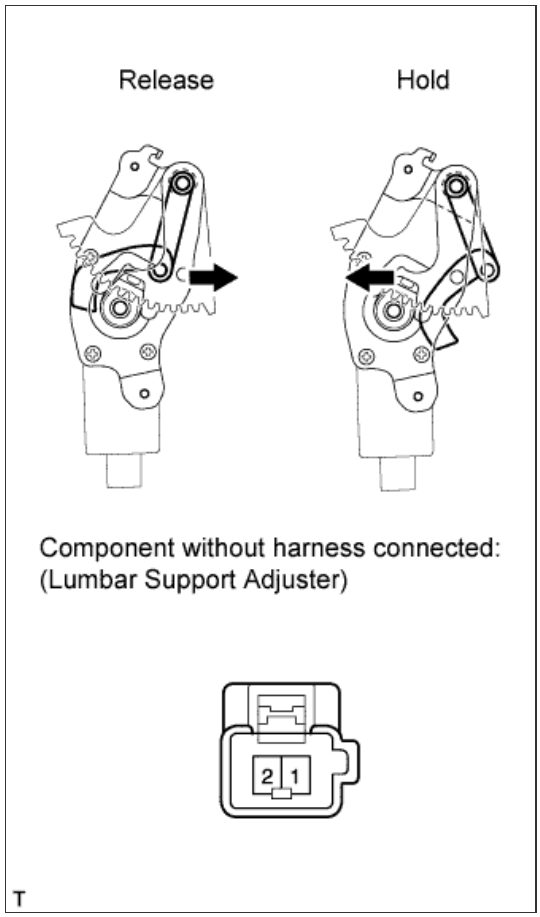
Release
Hold
Component without harness connected:
(Lumbar Support Adjuster)
2
1
T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (for Driver Side)


a. Install the lumbar support adjuster with the 2 screws.

b. Connect the lumbar support adjuster connector.

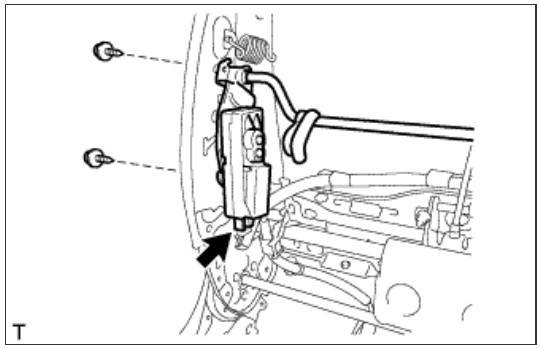

c. Attach the hooks to install the seatback spring.

d. Install the springs.

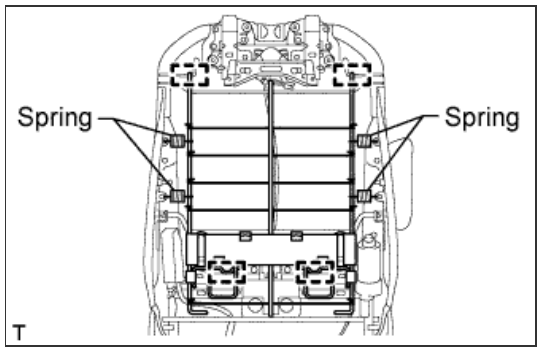

2. INSTALL SEATBACK COVER WITH PAD


a. Install the seatback cover with pad to the seatback frame.

b. Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

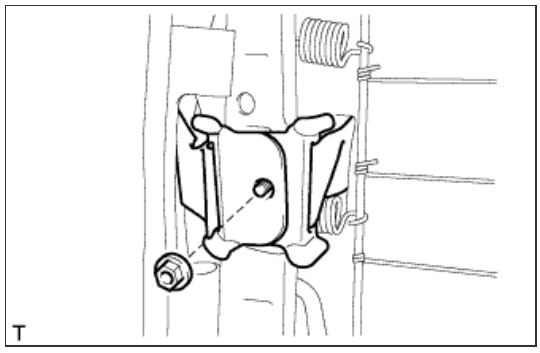


c. Attach the 9 hooks.

d. Using hog ring pliers, install 3 new hog rings to the seat frame.

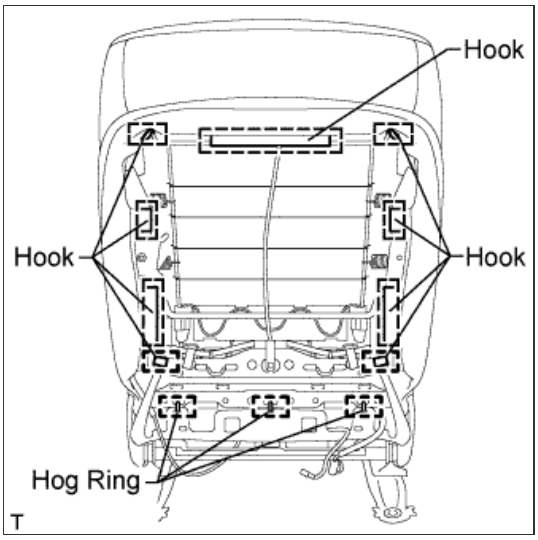

e. Connect the seat heater connector and attach the 2 wire harness clamps.

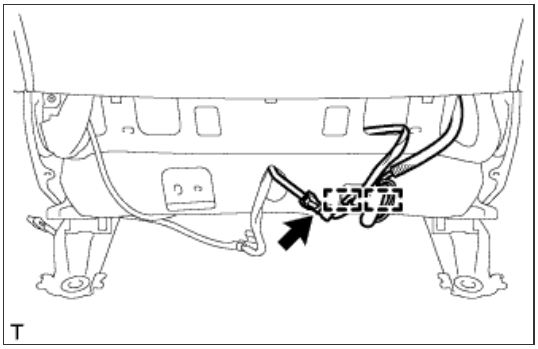


3. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the claws to install the 2 headrest supports.

4. INSTALL FRONT SEATBACK BOARD SUB-ASSEMBLY LH

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.


b. Install the 2 screws.

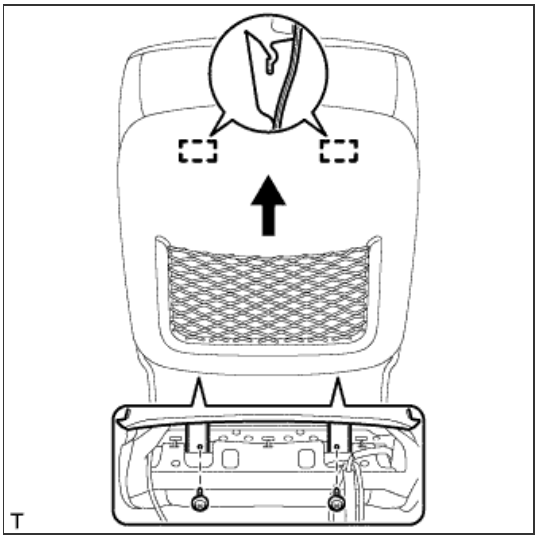

5. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the 2 claws and clip to install the cushion shield.

b. Install the screw.

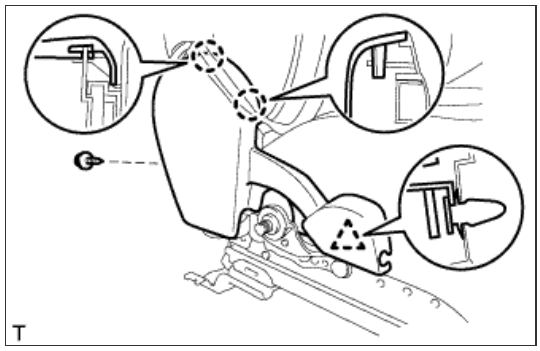

6. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.

b. Connect the connectors and attach the clamps.

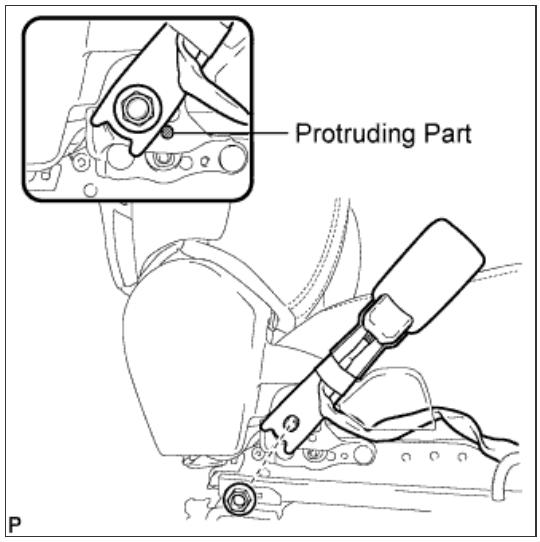


7. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


b. Attach the 2 claws to install the cushion shield.

c. Install the 3 screws.

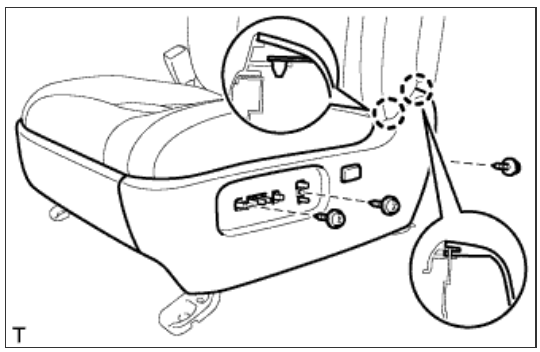


d. Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

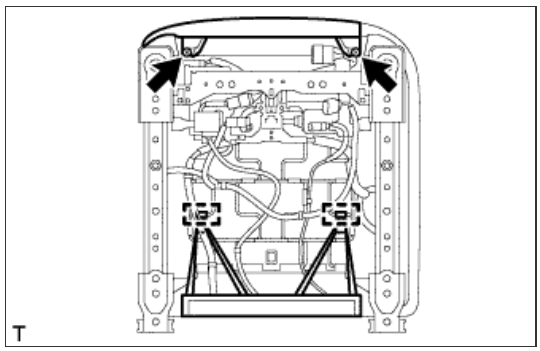


8. INSTALL RECLINING POWER SEAT SWITCH KNOB

a. Attach the 2 claws to install the knob.

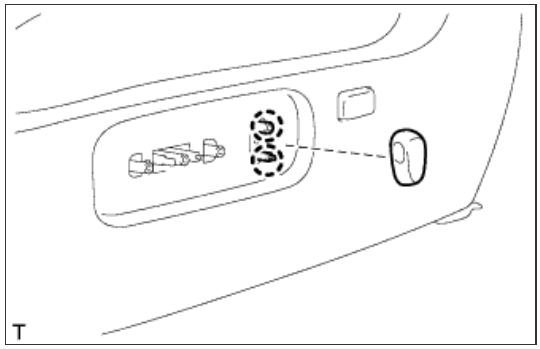

9. INSTALL SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Attach the 2 claws to install the knob.

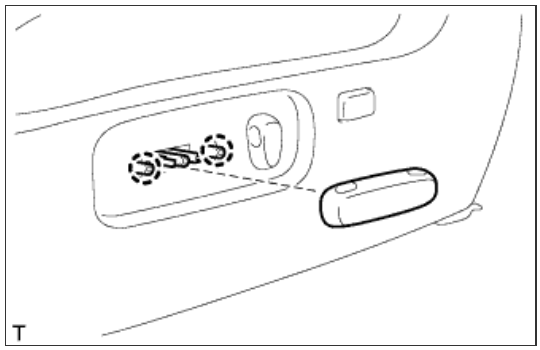

10. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL LUMBAR SUPPORT ADJUSTER ASSEMBLY LH (for Driver Side)


a. Install the lumbar support adjuster with the 2 screws.

b. Connect the lumbar support adjuster connector.

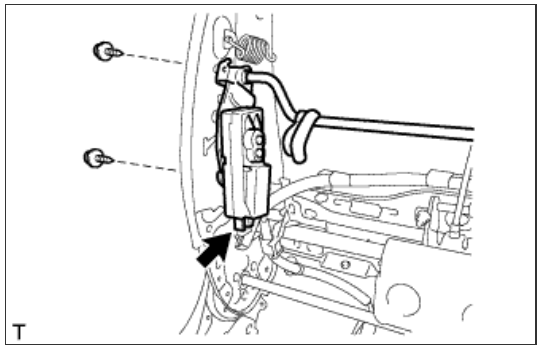

c. Attach the hooks to install the seatback spring.

d. Install the springs.

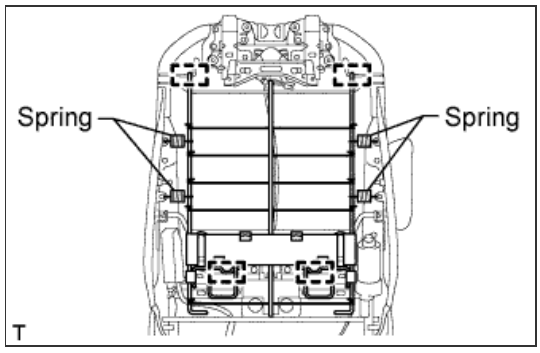

2. INSTALL SEATBACK COVER WITH PAD


a. Install the seatback cover with pad to the seatback frame.

b. Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

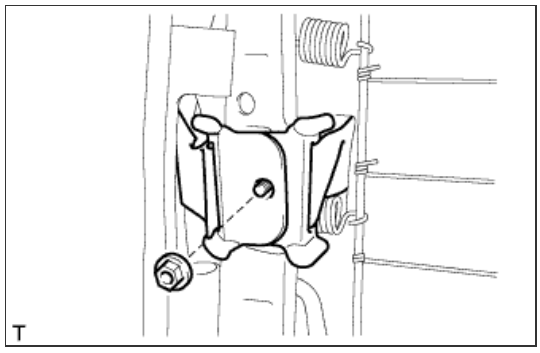


c. Attach the 9 hooks.

d. Using hog ring pliers, install 3 new hog rings to the seat frame.

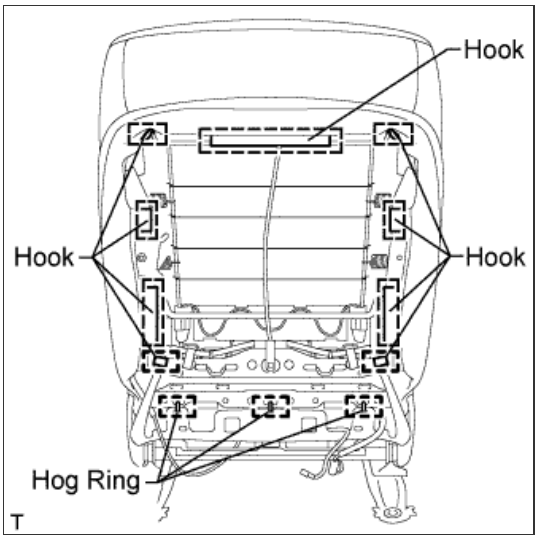

e. Connect the seat heater connector and attach the 2 wire harness clamps.

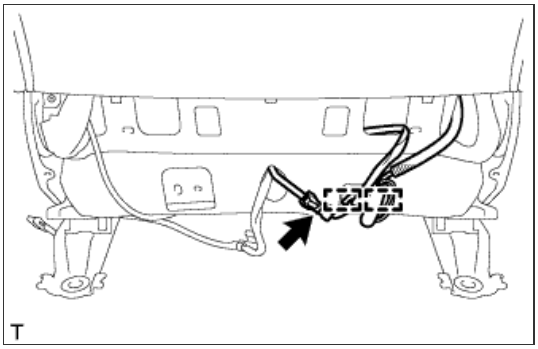


3. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the claws to install the 2 headrest supports.

4. INSTALL FRONT SEATBACK BOARD SUB-ASSEMBLY LH

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.


b. Install the 2 screws.

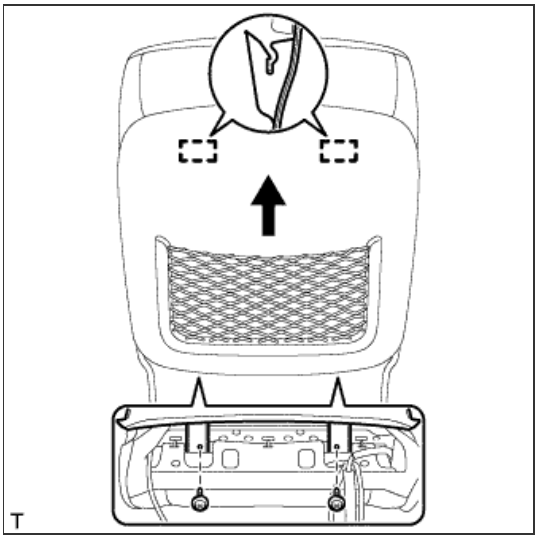

5. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the 2 claws and clip to install the cushion shield.

b. Install the screw.

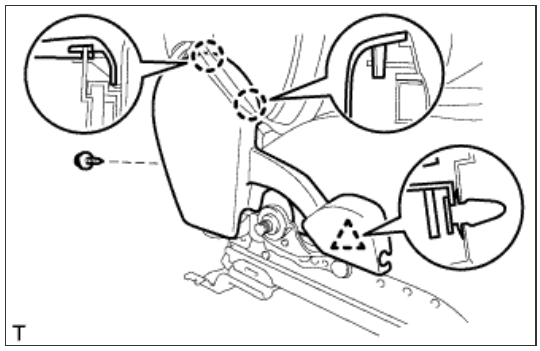

6. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.

b. Connect the connectors and attach the clamps.

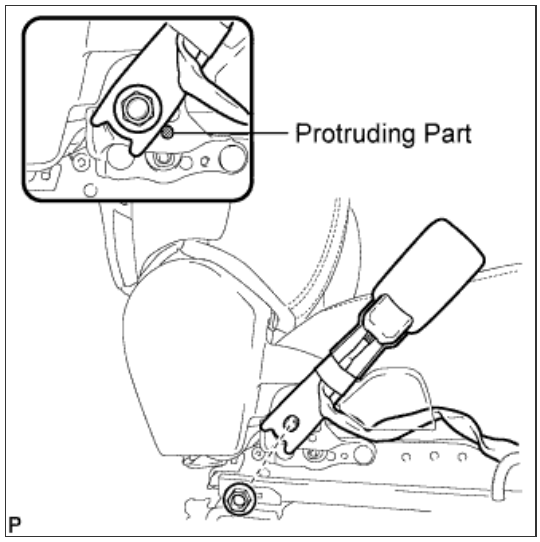


7. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


b. Attach the 2 claws to install the cushion shield.

c. Install the 3 screws.

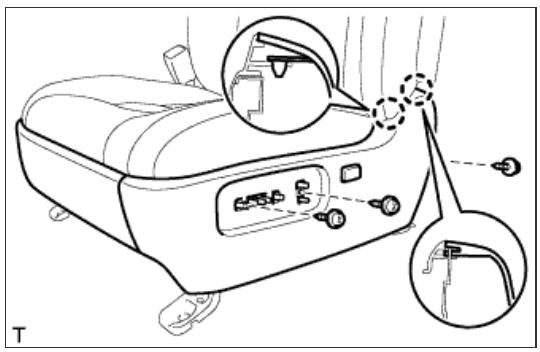


d. Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

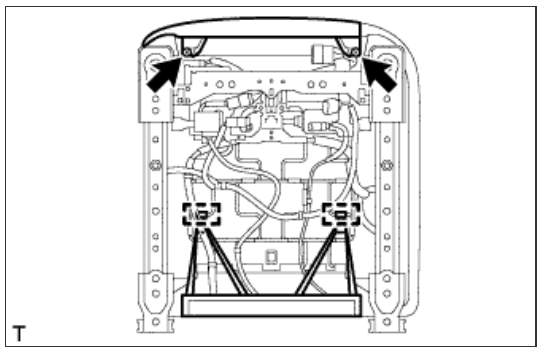


8. INSTALL RECLINING POWER SEAT SWITCH KNOB

a. Attach the 2 claws to install the knob.

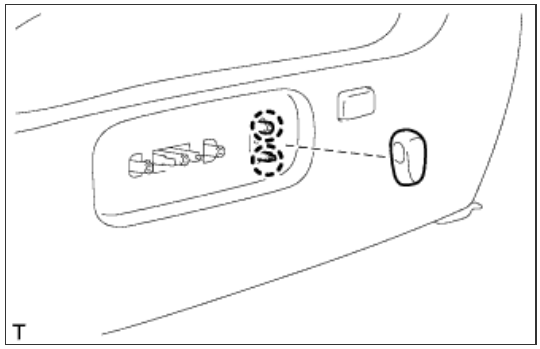

9. INSTALL SLIDE AND VERTICAL POWER SEAT SWITCH KNOB


a. Attach the 2 claws to install the knob.

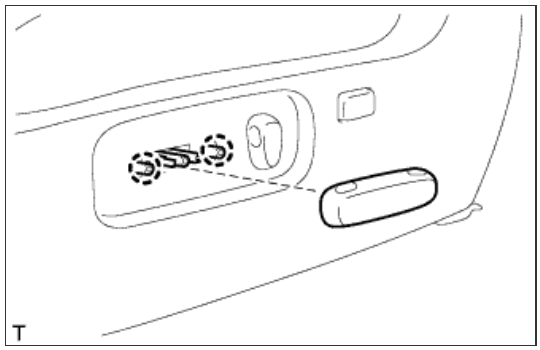

10. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).

for Preparation Click here

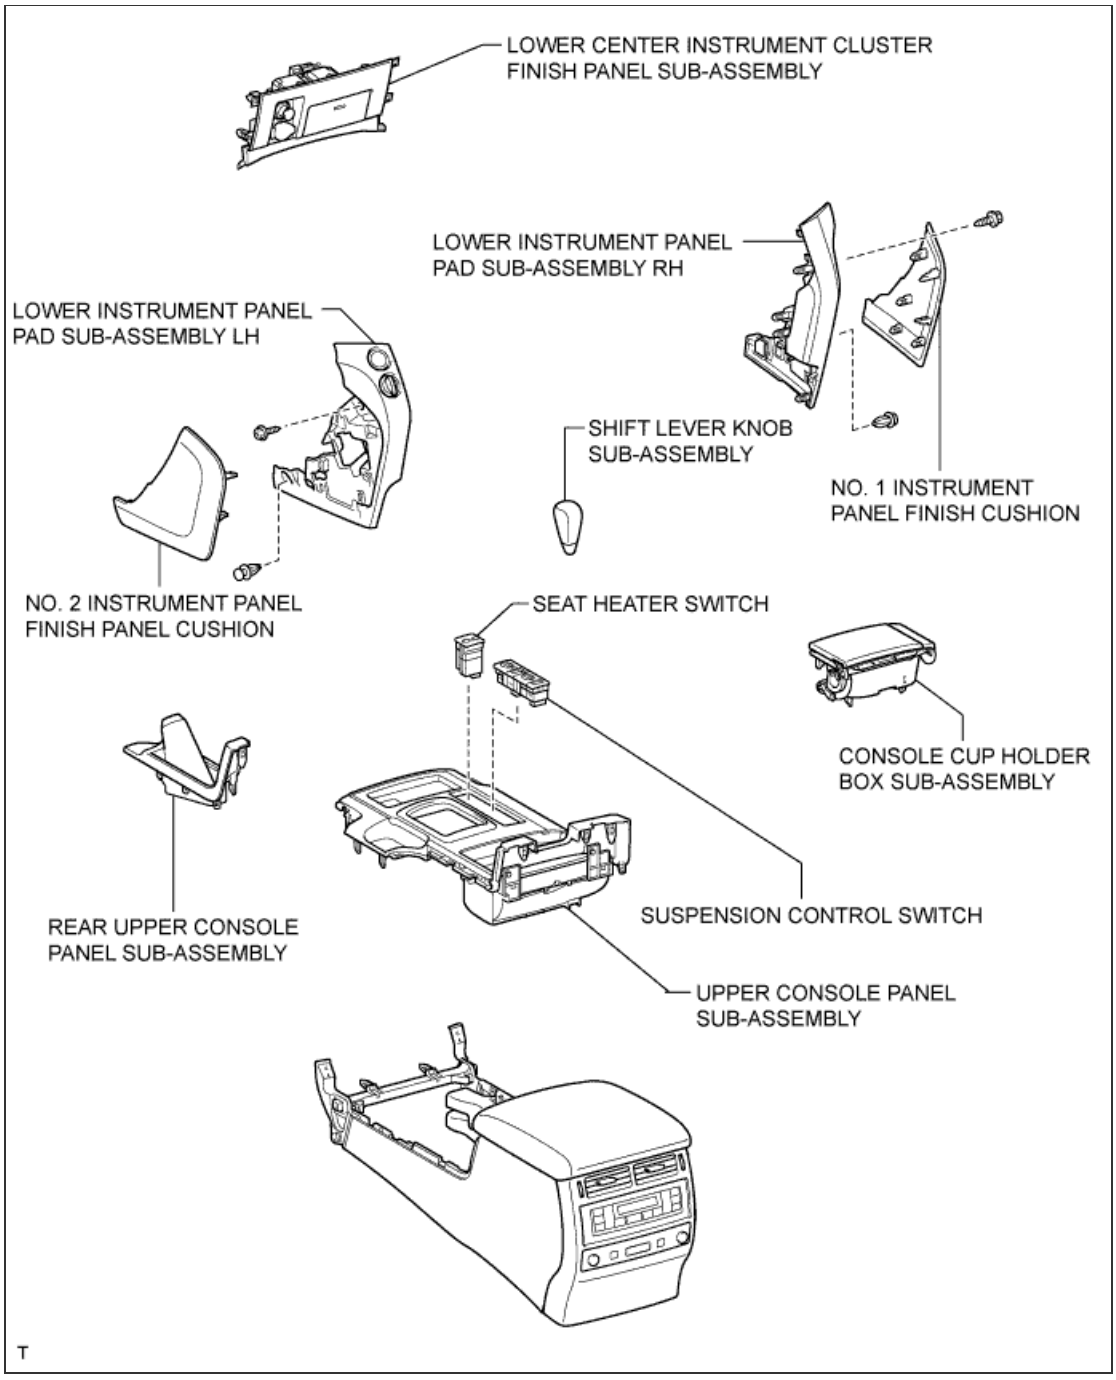

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

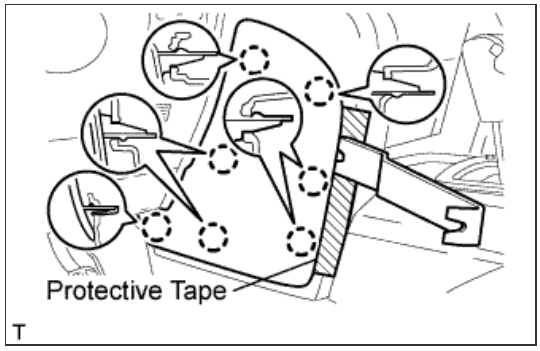


2. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

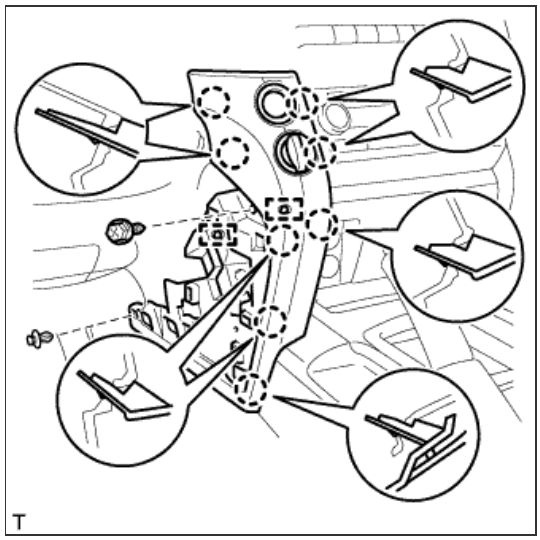

3. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

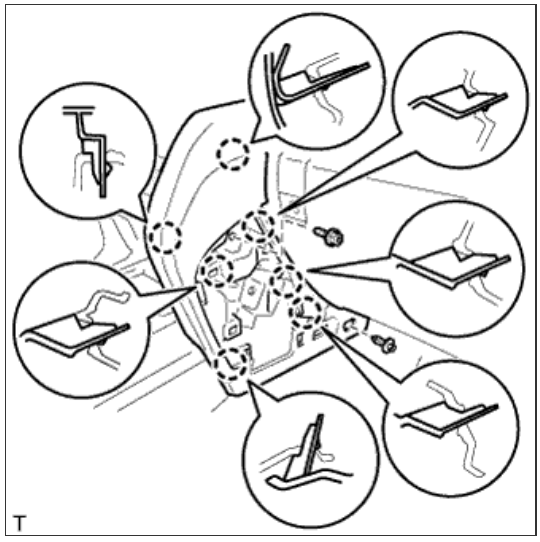

5. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


a. Twist the shift lever knob in the direction indicated by the arrow and remove it.

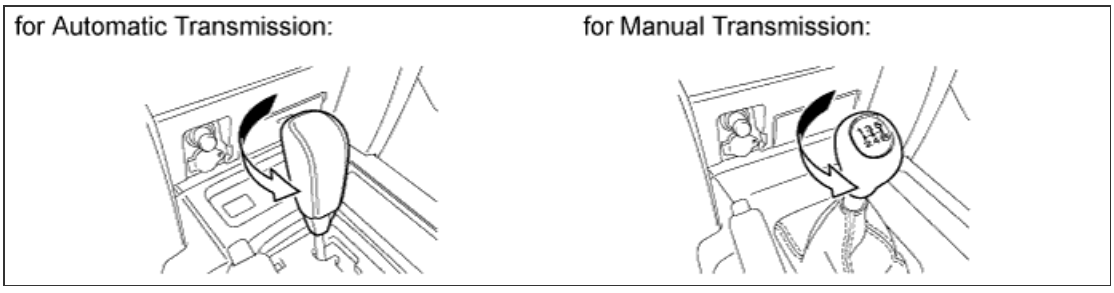

6. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 7 claws.

b. Disconnect the connectors and remove the panel.

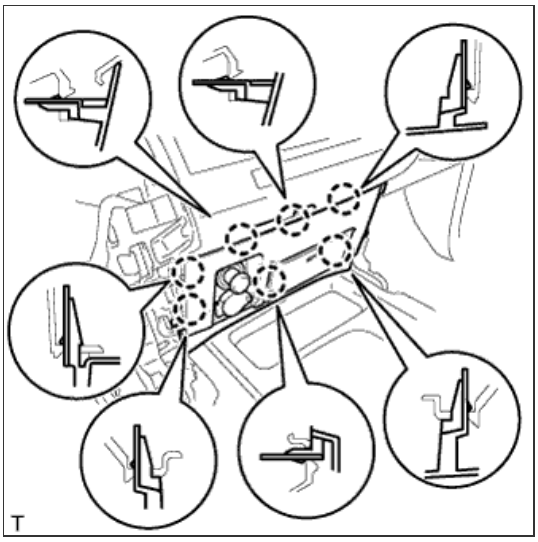


7. REMOVE REAR UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 9 claws and remove the panel.

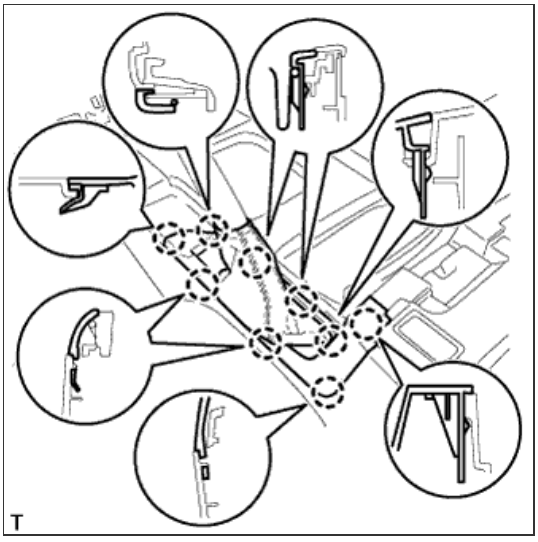

8. REMOVE CONSOLE CUP HOLDER BOX SUB-ASSEMBLY


a. Detach the 4 claws and remove the box.

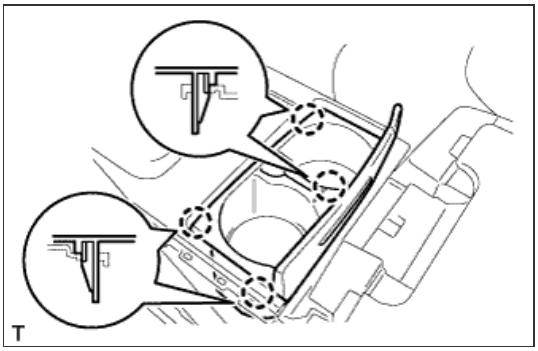

9. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 14 claws.


b. Disconnect the connectors and remove the console panel.

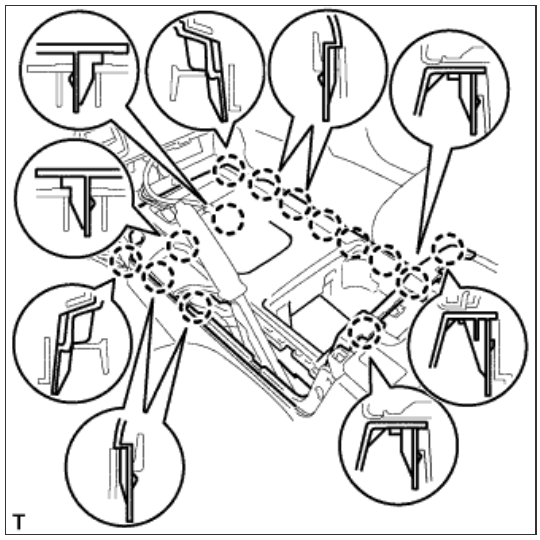


10. REMOVE SUSPENSION CONTROL SWITCH

a. Disconnect the 2 connectors.

b. Detach the wire harness clamp.

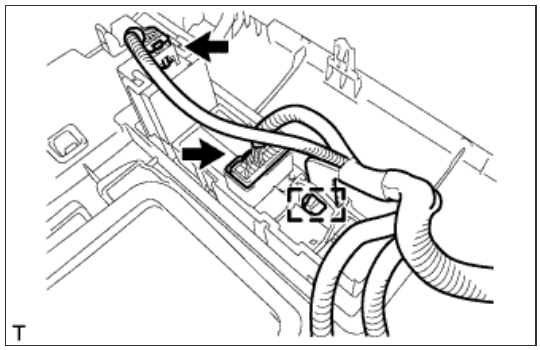


c. Detach the 4 claws and remove the control switch.

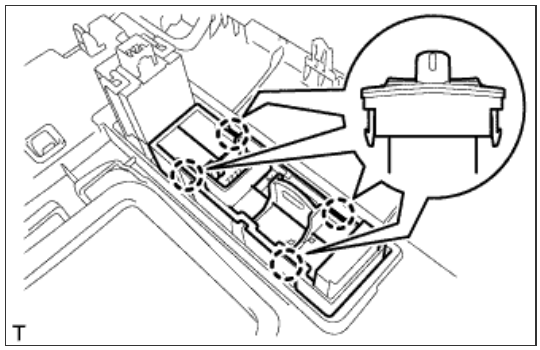

11. REMOVE SEAT HEATER SWITCH

a. Detach the 2 claws and remove the heater switch.

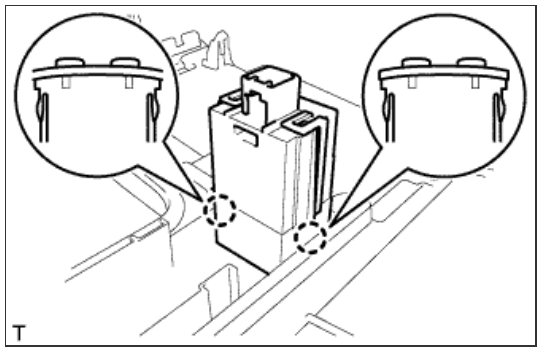

for Preparation Click here

1. INSPECT SEAT HEATER SWITCH

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
1 (RV) - 6 (SW) 3 (RV) - 4 (SW)	Switch off	2.7 to 4.1 kΩ
	Switch on (Min)	
	Switch on (Max)	0.28 to 0.42 kΩ

HINT:

As the dial is being turned, the resistance changes gradually.


f the result is not as specified, replace the seat heater switch.

b. Apply battery voltage to the switch connector, and check that the seat heater switch illu inates.

OK:

Measure ent Condition	Specified Condition
Battery positive (+) → 8 ( ) Battery negative (-) → 5 (-)	llu inates

f the result is not as specified, replace the seat heater switch.

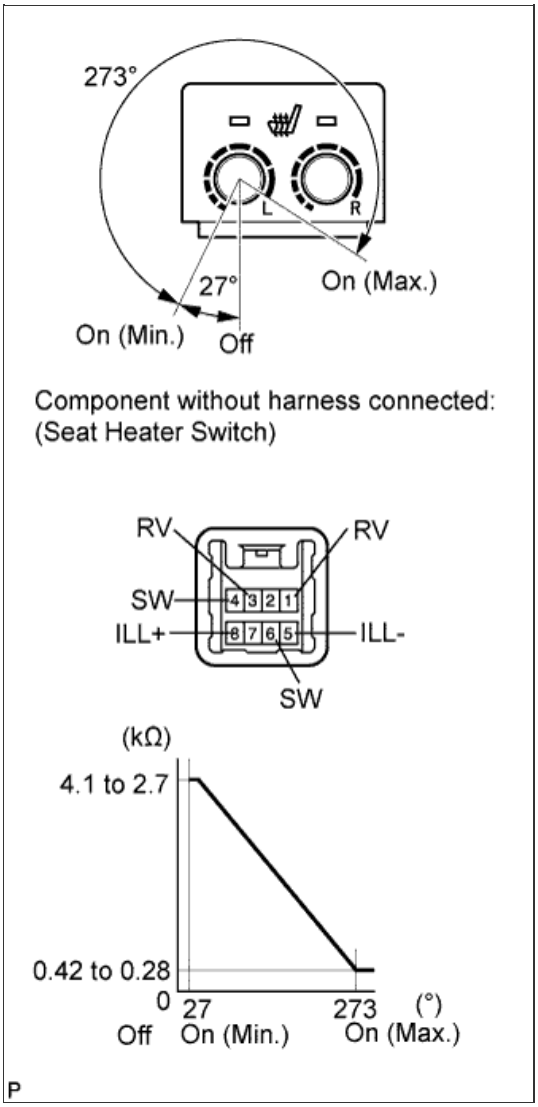


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**


1. INSTALL SEAT HEATER SWITCH

a. Attach the 2 claws to install the heater switch.

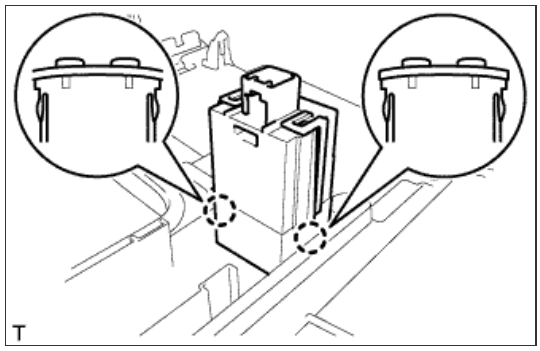


2. INSTALL SUSPENSION CONTROL SWITCH

a. Attach the 4 claws to install the control switch.

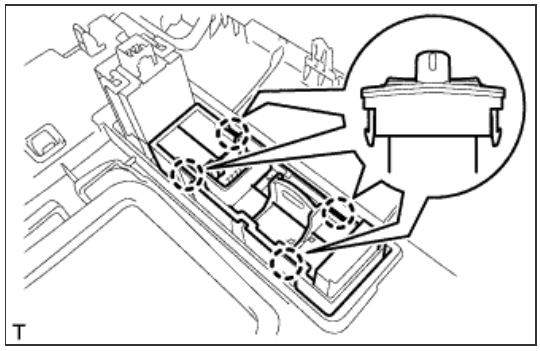

b. Connect the 2 connectors.


c. Attach the wire harness clamp.

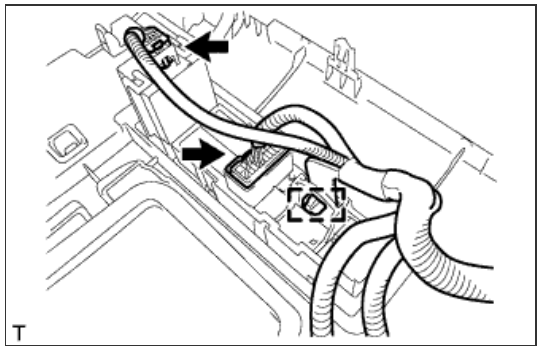

3. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 14 claws to install the console panel.

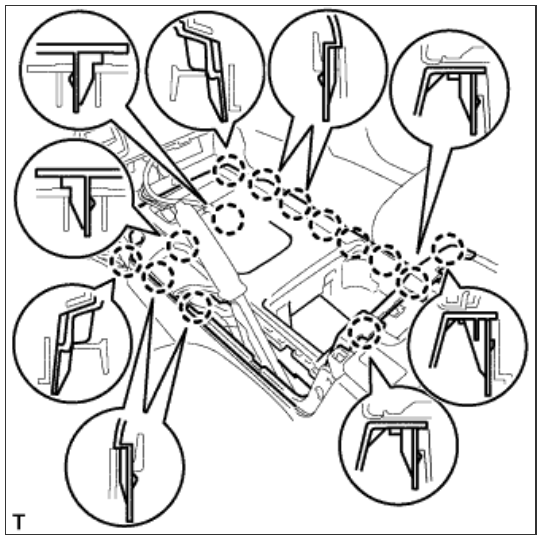


4. INSTALL CONSOLE CUP HOLDER BOX SUB-ASSEMBLY

a. Attach the 4 claws to install the box.

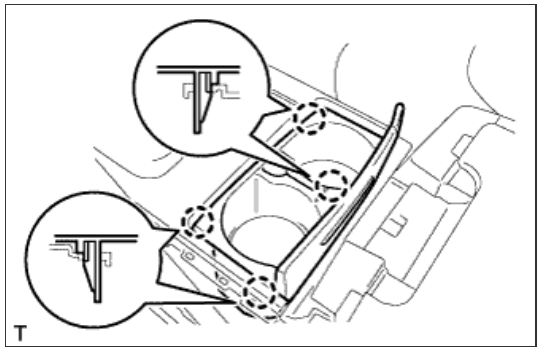

5. INSTALL REAR UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Attach the 9 claws to install the panel.

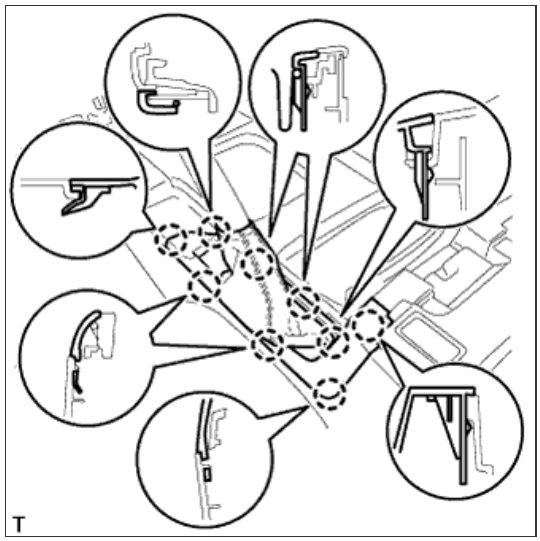

6. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 7 claws to install the panel.

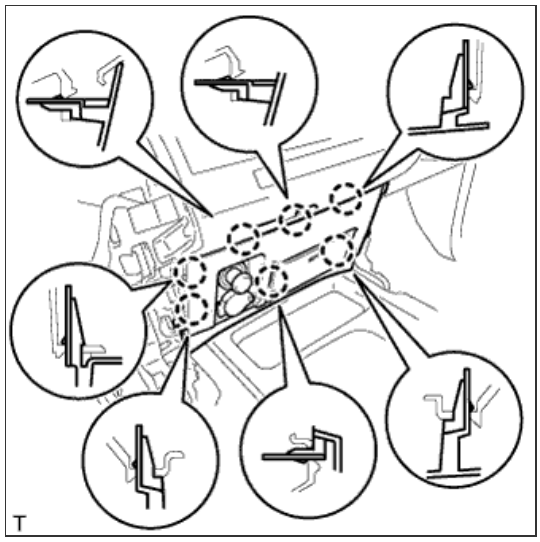

7. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

a. Install the shift lever knob and twist it in the direction indicated by the arrow.

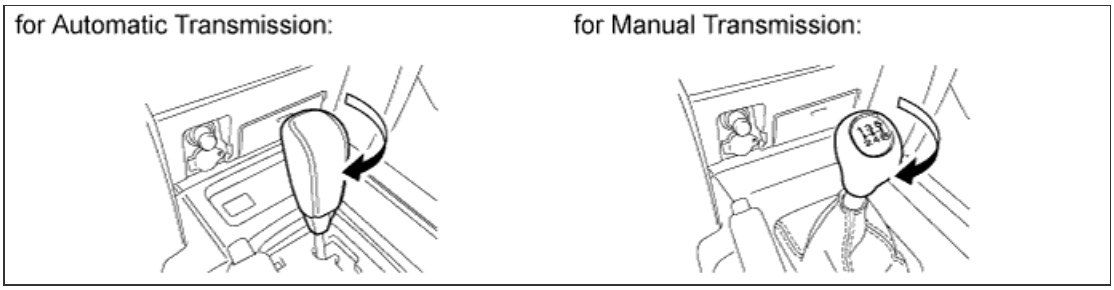


8. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

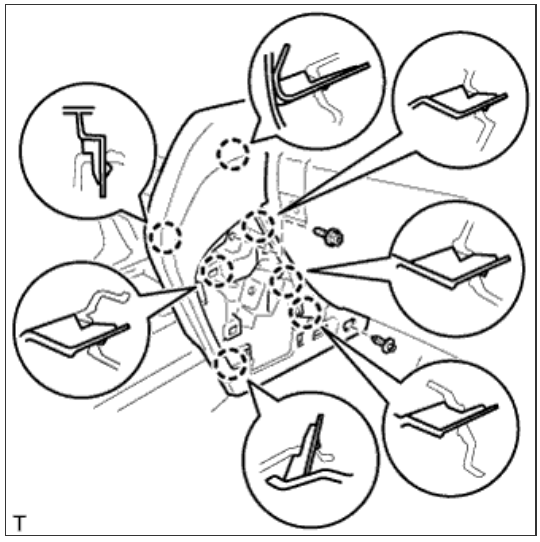

9. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

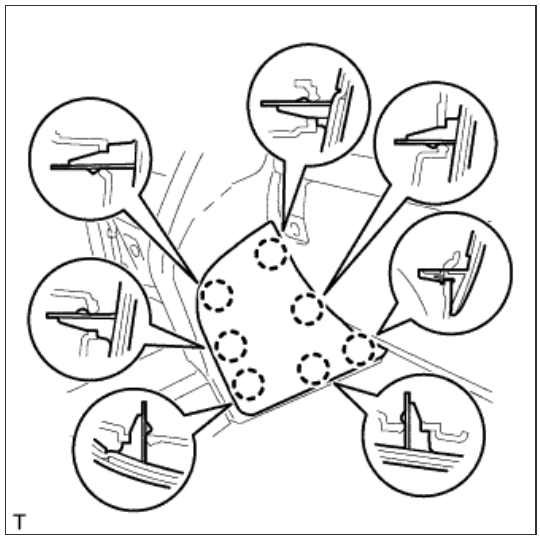


10. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

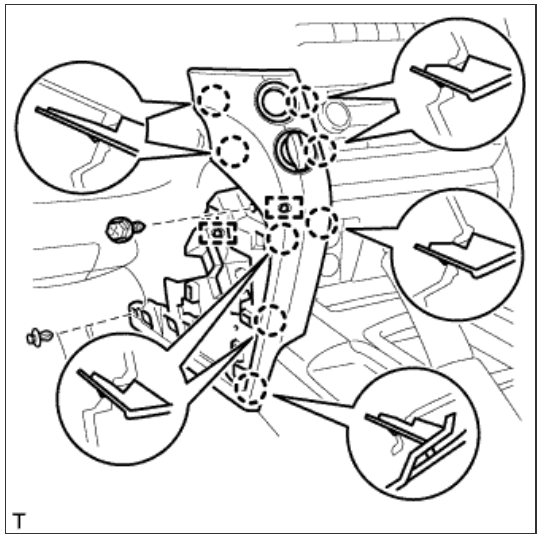



11. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

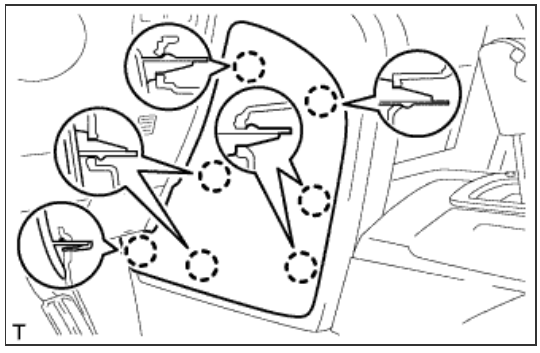

for Preparation Click here

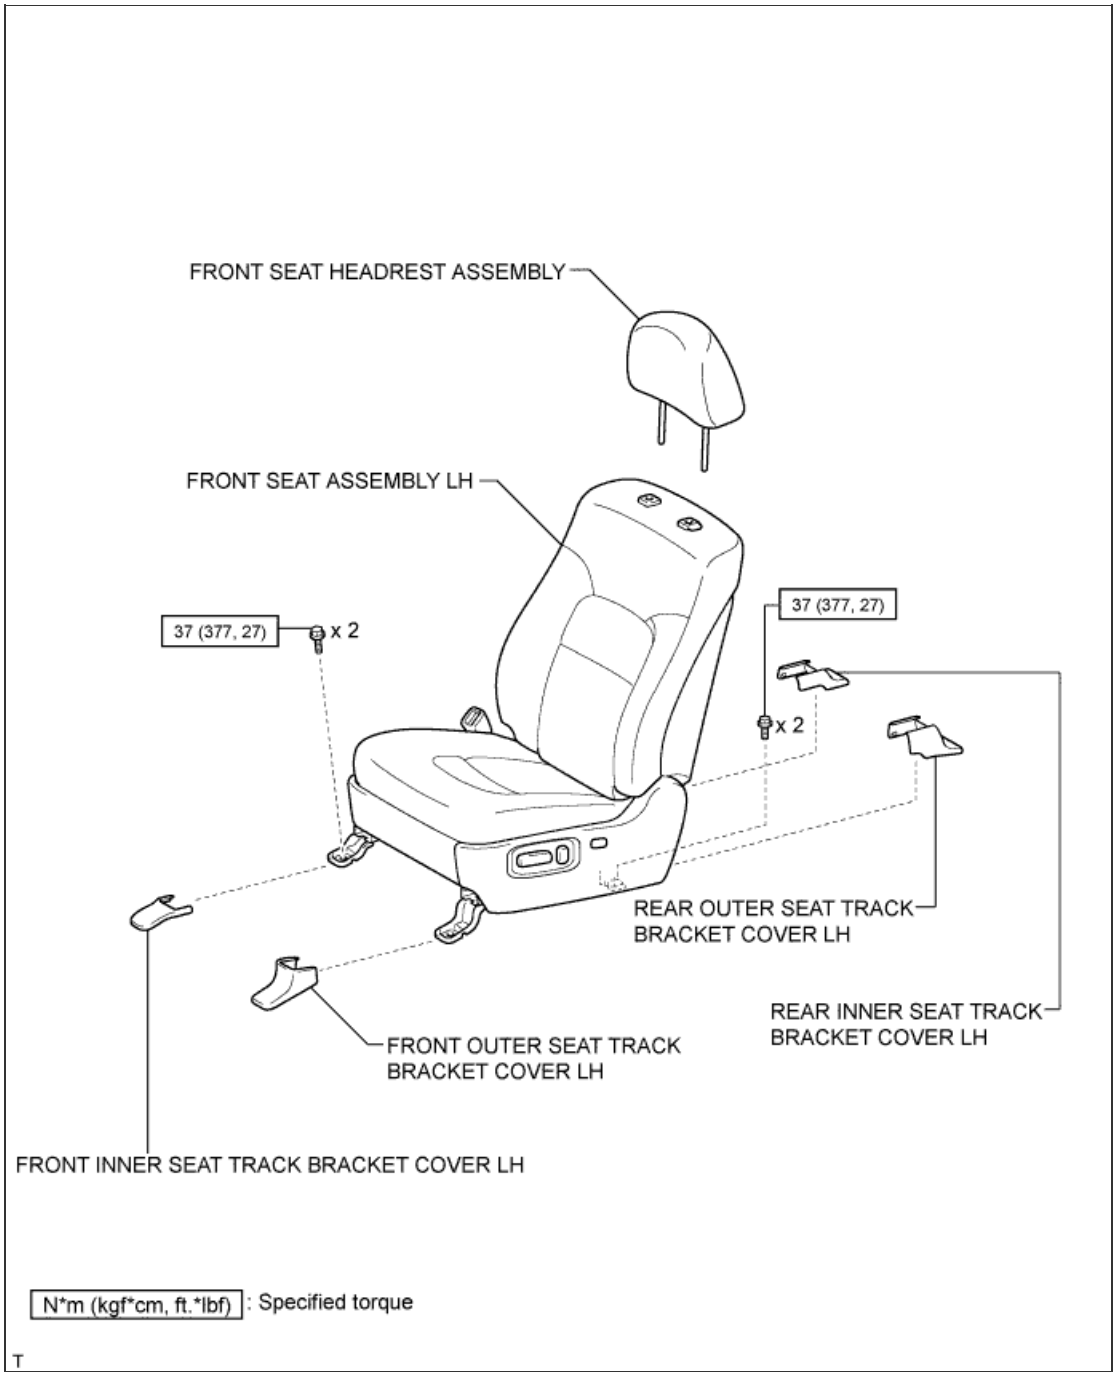

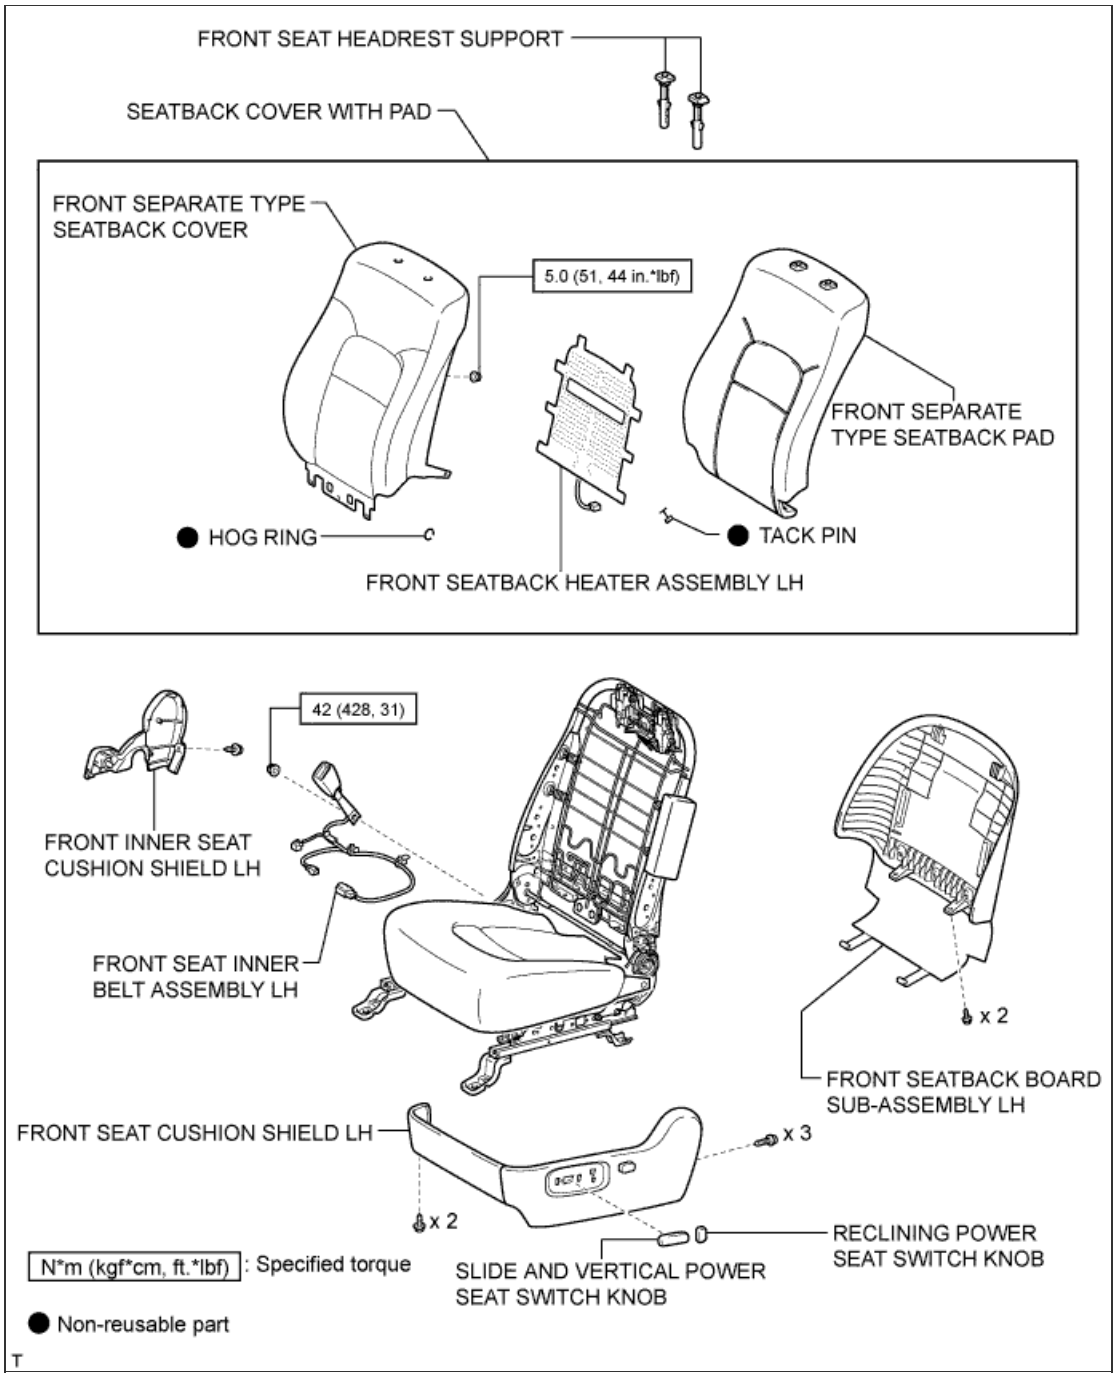
FRONT SEAT HEADREST SUPPORT
SEATBACK COVER WITH PAD
FRONT SEPARATE TYPE SEATBACK COVER
5.0 (51, 44 in.*lbf)
FRONT SEPARATE TYPE SEATBACK PAD
HOG RING
TACK PIN
FRONT SEATBACK HEATER ASSEMBLY LH
42 (428, 31)
FRONT INNER SEAT CUSHION SHIELD LH
FRONT SEAT INNER BELT ASSEMBLY LH
x 2
FRONT SEATBACK BOARD SUB-ASSEMBLY LH
FRONT SEAT CUSHION SHIELD LH
x 3
x 2
RECLINING POWER SEAT SWITCH KNOB
SLIDE AND VERTICAL POWER SEAT SWITCH KNOB
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

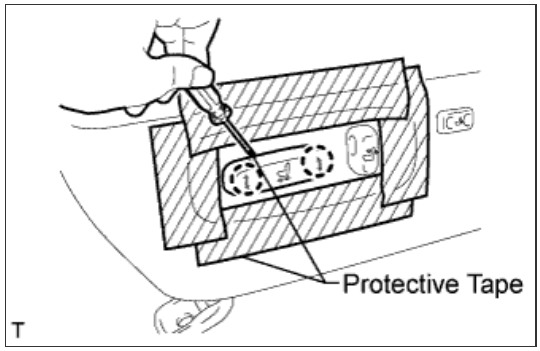


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

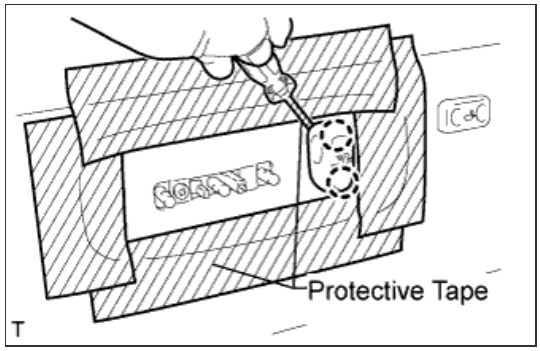

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

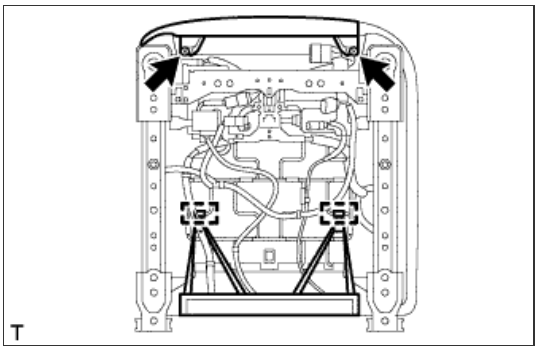

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side:
Disconnect the power seat lumbar switch connectors.

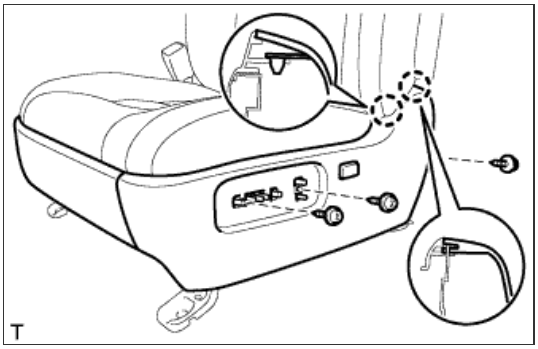

5. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

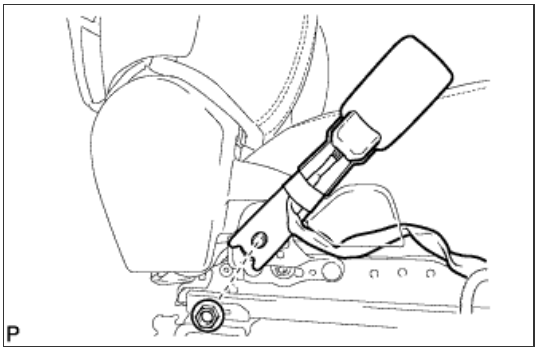

6. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the 2 claws and clip, and then remove the cushion shield.

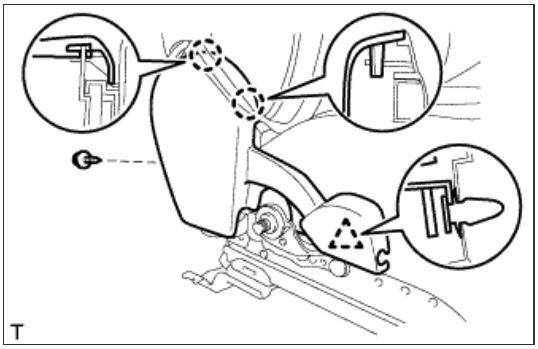

7. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

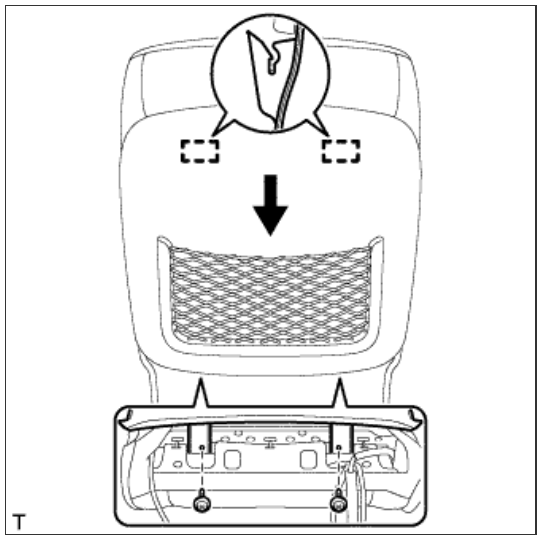


8. REMOVE FRONT SEAT HEADREST SUPPORT

a. Using a screwdriver, detach the 4 claws and remove the 2 headrest supports.

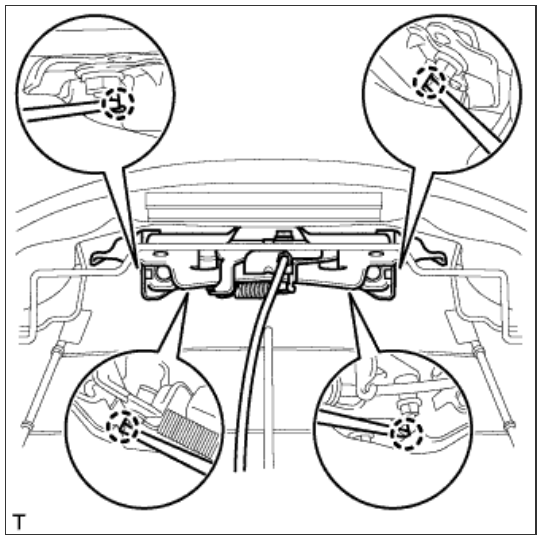


9. REMOVE SEATBACK COVER WITH PAD

a. Disconnect the seat heater connector and detach the 2 wire harness clamps.

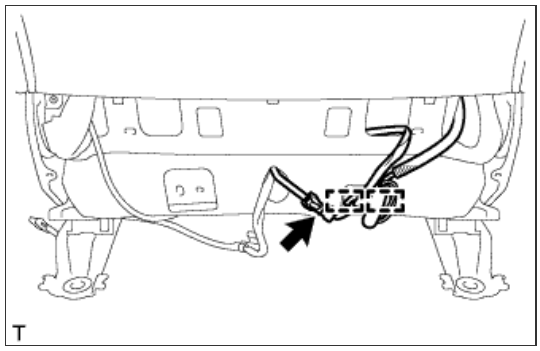


b. Remove the 3 hog rings and detach the 9 hooks.

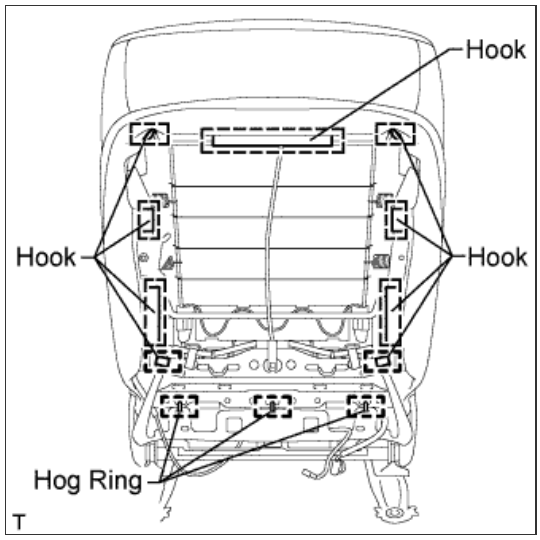


c. Remove the nut and seatback cover bracket from the seat frame.

d. Remove the seatback cover with pad.

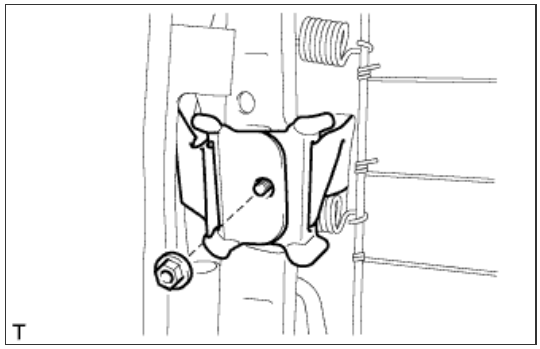


10. REMOVE FRONT SEPARATE TYPE SEATBACK COVER

a. Disconnect the seatback cover bracket from the seatback pad.

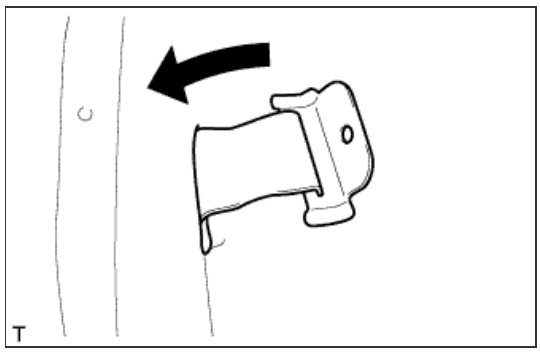

b. Remove the hog rings.


c. Detach the fastening tape and remove the seatback cover.

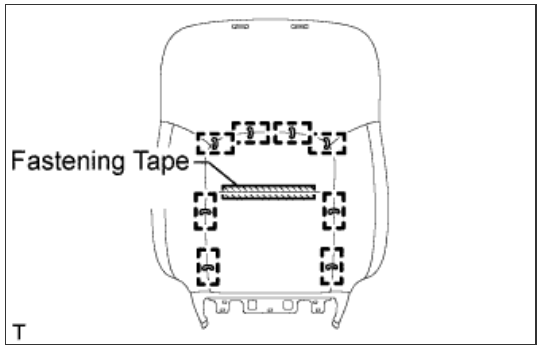

11. REMOVE FRONT SEATBACK HEATER ASSEMBLY LH

a. Cut off the tack pins which fasten the seatback heater to the seatback cover, and

a. Cut off the tack pins which fasten the seatback heater to the seatback cover, and then remove the seatback heater from the seatback cover.

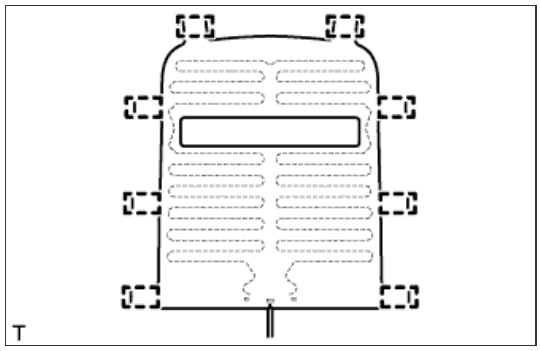

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

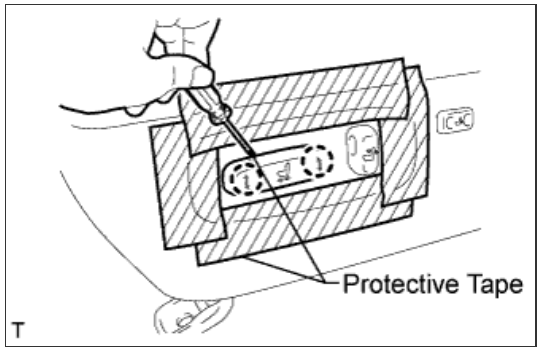


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

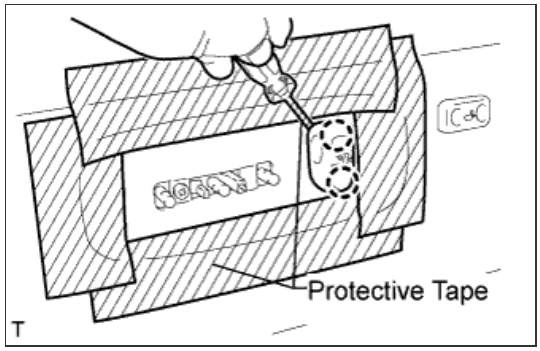

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

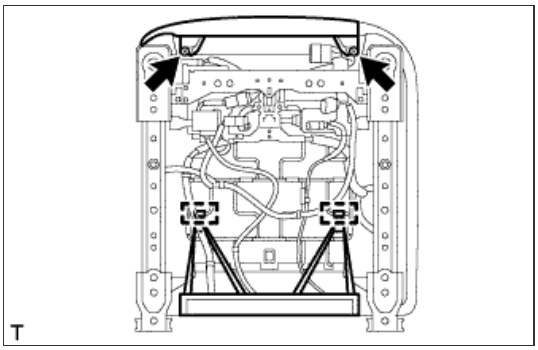

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side:
Disconnect the power seat lumbar switch connectors.

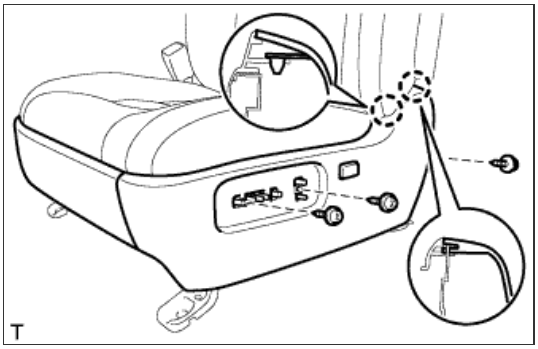

5. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

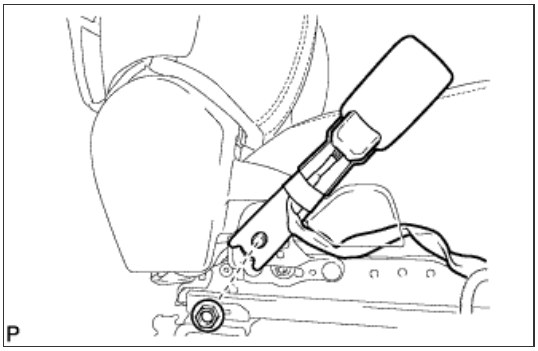

6. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.


b. Detach the 2 claws and clip, and then remove the cushion shield.

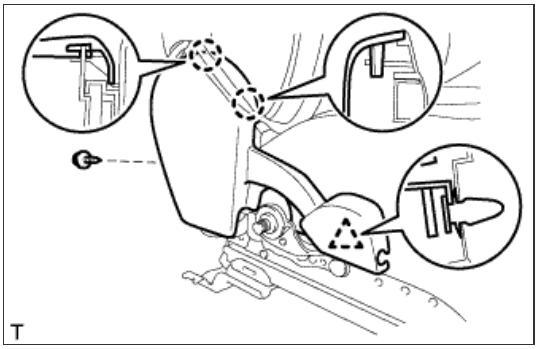

7. REMOVE FRONT SEATBACK BOARD SUB-ASSEMBLY LH


a. Remove the 2 screws.

b. Move the seatback board in the direction of the arrow to detach the 2 hooks and remove the seatback board.

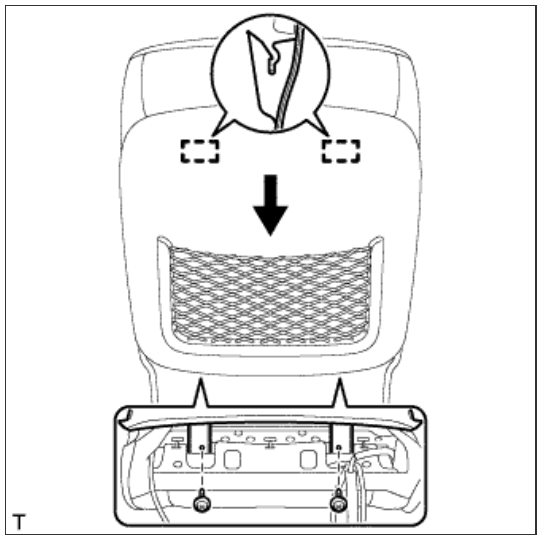


8. REMOVE FRONT SEAT HEADREST SUPPORT

a. Using a screwdriver, detach the 4 claws and remove the 2 headrest supports.

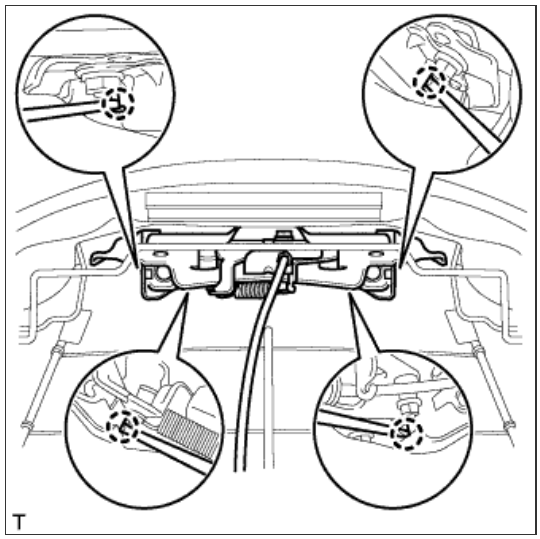


9. REMOVE SEATBACK COVER WITH PAD

a. Disconnect the seat heater connector and detach the 2 wire harness clamps.

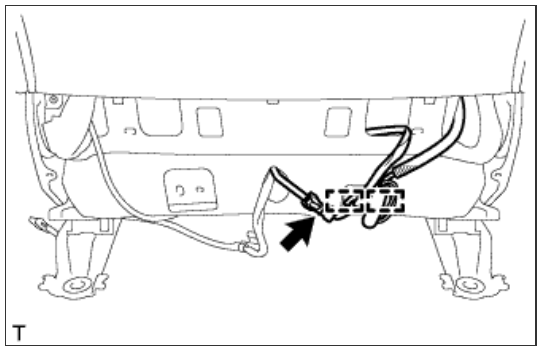


b. Remove the 3 hog rings and detach the 9 hooks.

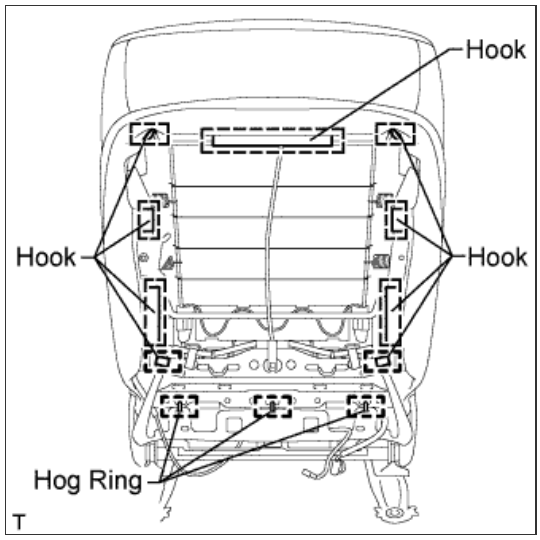


c. Remove the nut and seatback cover bracket from the seat frame.

d. Remove the seatback cover with pad.

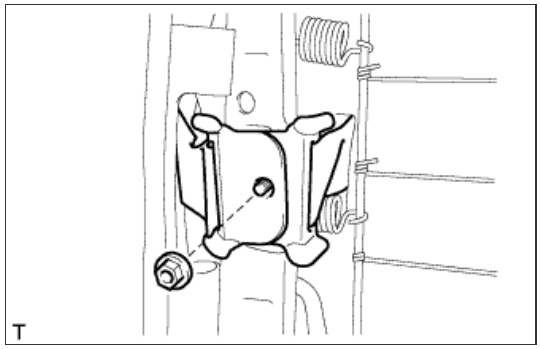


10. REMOVE FRONT SEPARATE TYPE SEATBACK COVER

a. Disconnect the seatback cover bracket from the seatback pad.

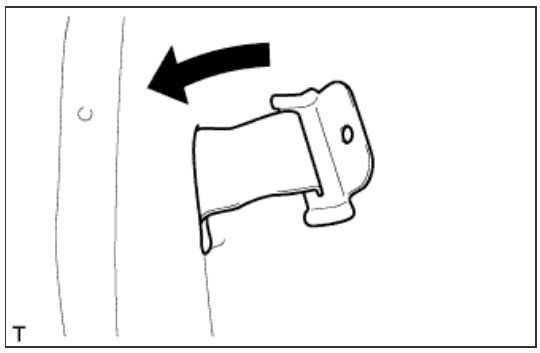

b. Remove the hog rings.


c. Detach the fastening tape and remove the seatback cover.

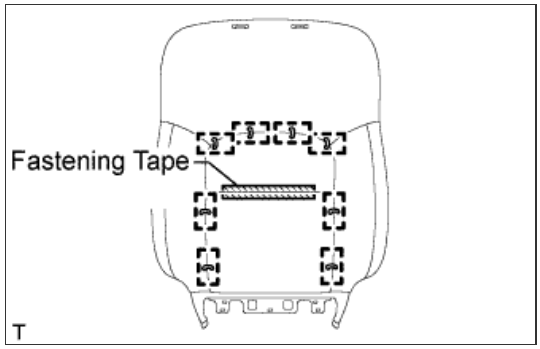

11. REMOVE FRONT SEATBACK HEATER ASSEMBLY LH

a. Cut off the tack pins which fasten the seatback heater to the seatback cover, and

a. Cut off the tack pins which fasten the seatback heater to the seatback cover, and then remove the seatback heater from the seatback cover.

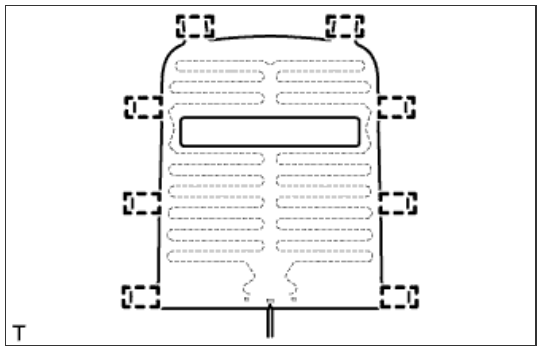

for Preparation Click here

1. INSPECT FRONT SEATBACK HEATER ASSE BLY LH

a. Check the seatback heater.


i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	Seatback heater temperature 25 C ( )	6.6 to 8.0 Ω

If the result is not as specified, replace the seatback heater assembly.

Component without harness connected:
(Front Seatback Heater)

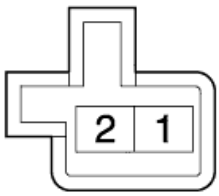

2. INSPECT FRONT SEATBACK HEATER ASSE BLY RH

a. Check the seatback heater.


i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	Seatback heater temperature 25 C ( )	6.6 to 8.0 Ω

If the result is not as specified, replace the seatback heater assembly.

Component without harness connected:
(Front Seatback Heater)

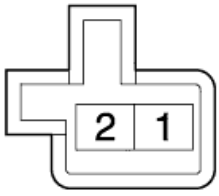

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEATBACK HEATER ASSEMBLY LH

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

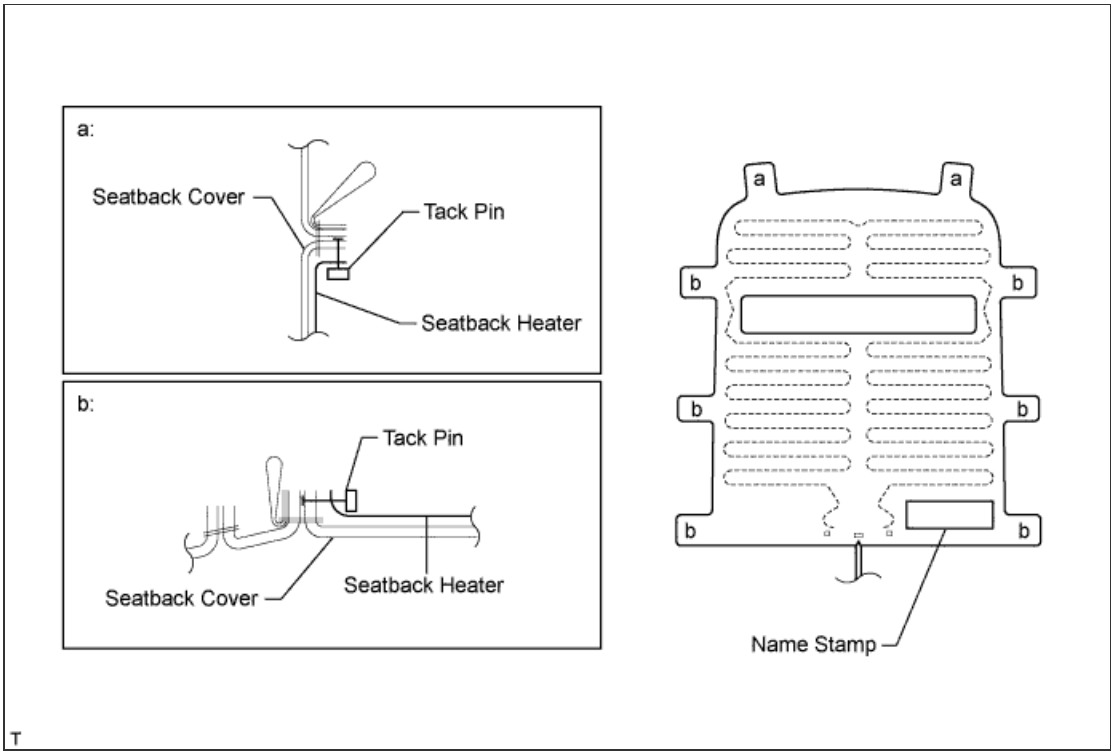


2. INSTALL FRONT SEPARATE TYPE SEATBACK COVER

a. Attach the fastening tape to install the seatback cover with new hog rings.


b. Using hog ring pliers, install the seatback cover

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

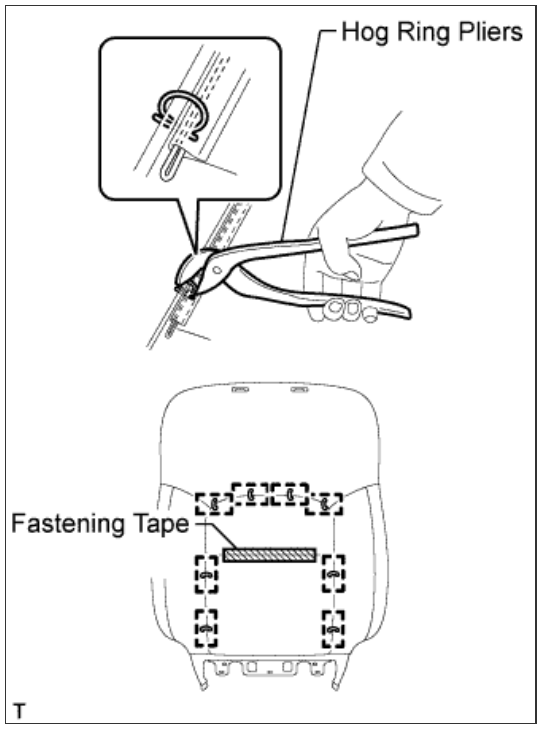

c. Connect the seatback cover bracket to the seatback pad.

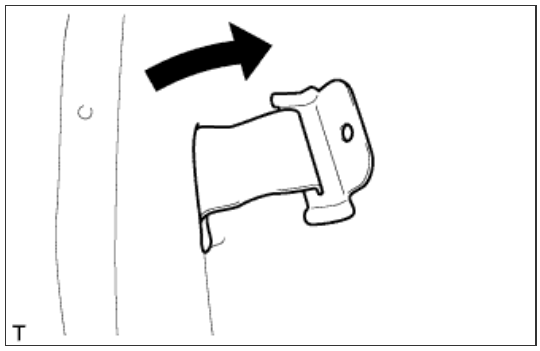

3. INSTALL SEATBACK COVER WITH PAD


a. Install the seatback cover with pad to the seatback frame.

b. Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N m{ 51 kgf cm , 44 in. lbf


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

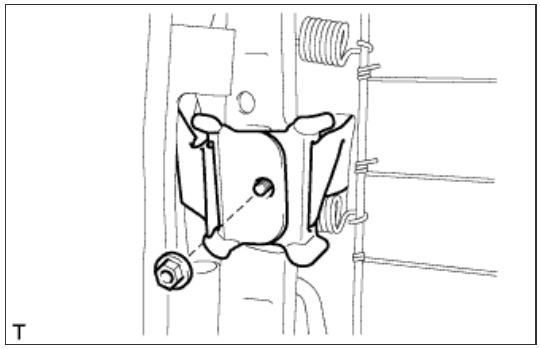


c. Attach the 9 hooks.

d. Using hog ring pliers, install 3 new hog rings to the seat frame.

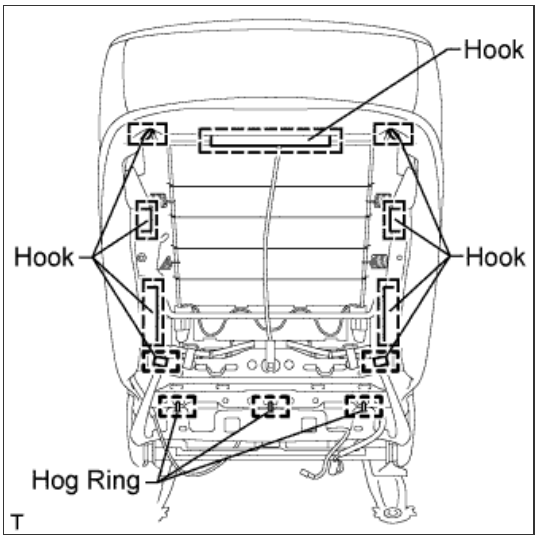

e. Connect the seat heater connector and attach the 2 wire harness clamps.

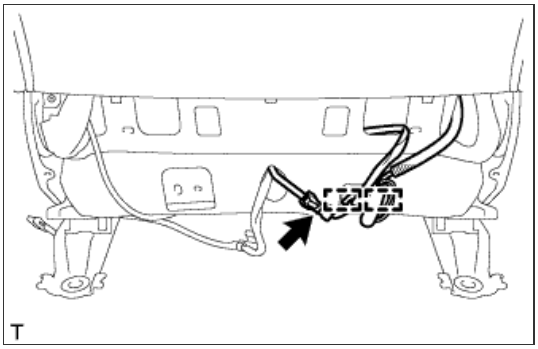


4. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the 4 claws to install the 2 headrest supports.

5. INSTALL FRONT SEATBACK BOARD SUB ASSEMBLY LH

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.


b. Install the 2 screws.

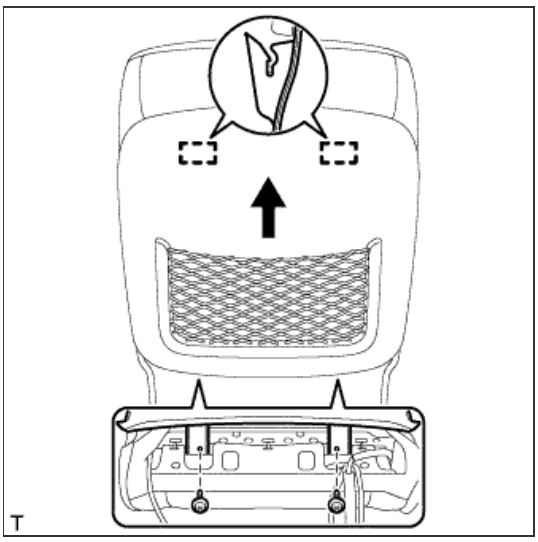

6. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the 2 claws and clip to install the cushion shield.

b. Install the screw.

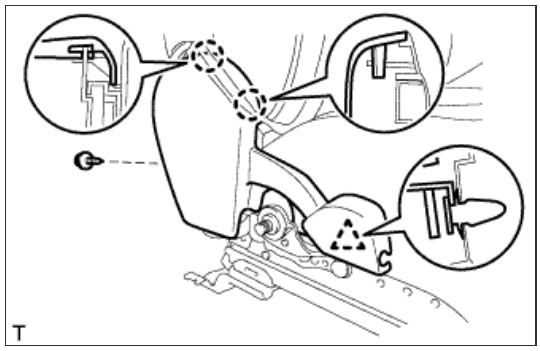

. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.


b. Connect the connectors and attach the clamps.

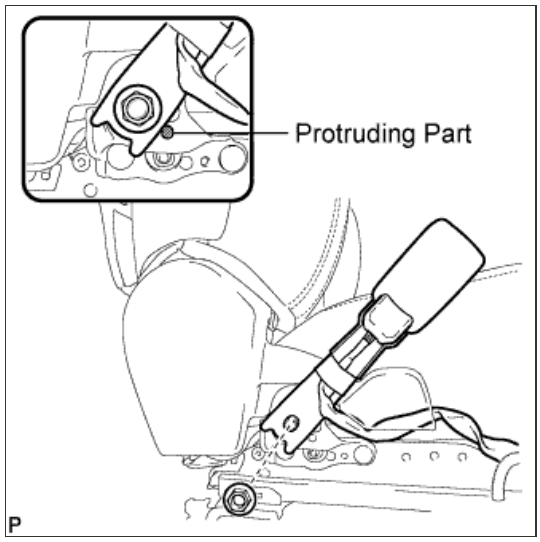

8. INSTALL FRONT SEAT CUSHION SHIELD LH


a. Attach the claw to install the cushion shield.

b. Install the screw.

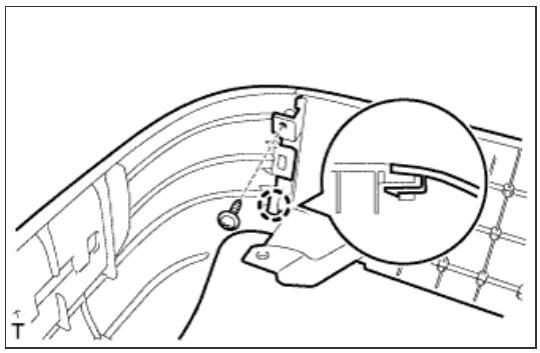


9. INSTALL RECLINING POWER SEAT SWITCH KNOB

a. Attach the 2 claws to install the knob.

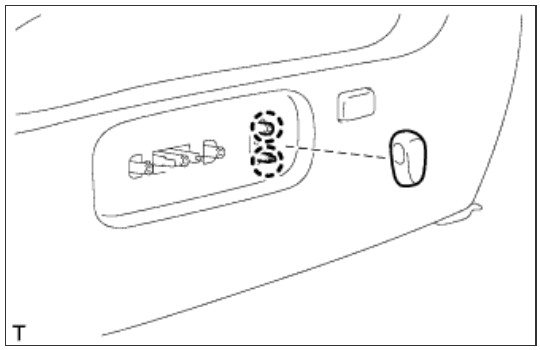

10. INSTALL SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Attach the 2 claws to install the knob.

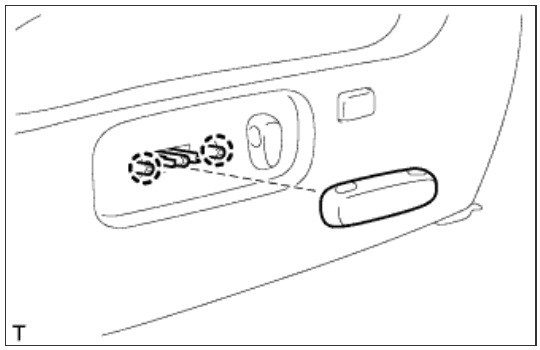

11. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEATBACK HEATER ASSEMBLY LH

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

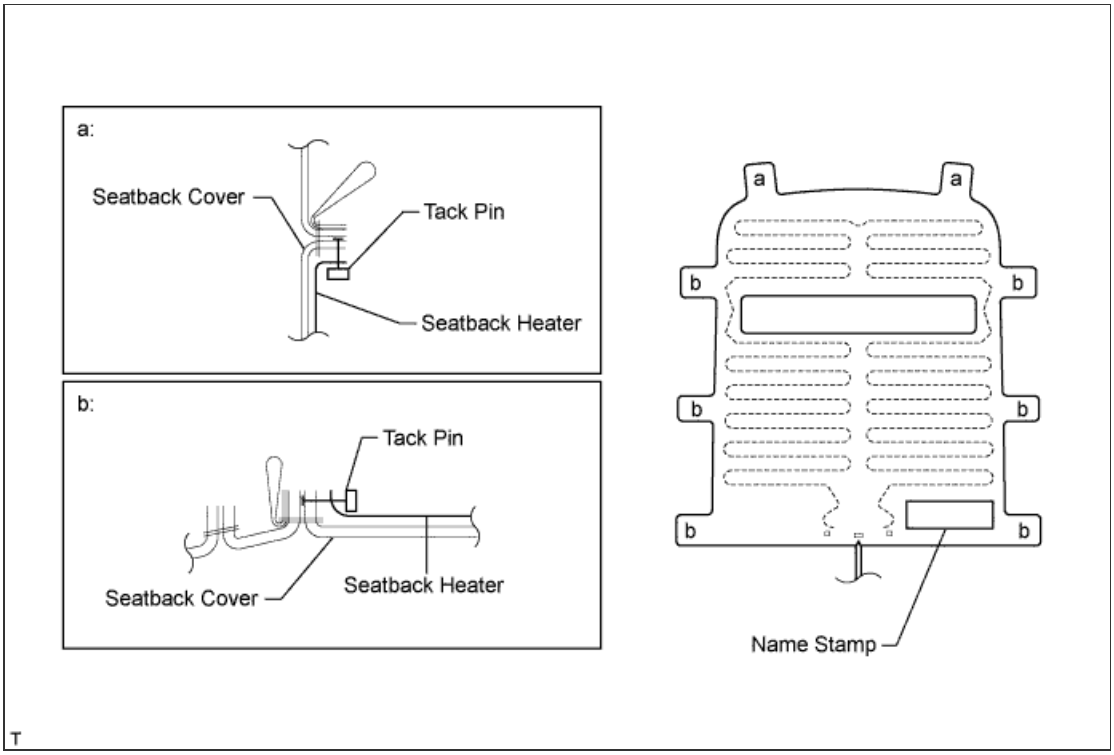


2. INSTALL FRONT SEPARATE TYPE SEATBACK COVER

a. Attach the fastening tape to install the seatback cover with new hog rings.


b. Using hog ring pliers, install the seatback cover

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

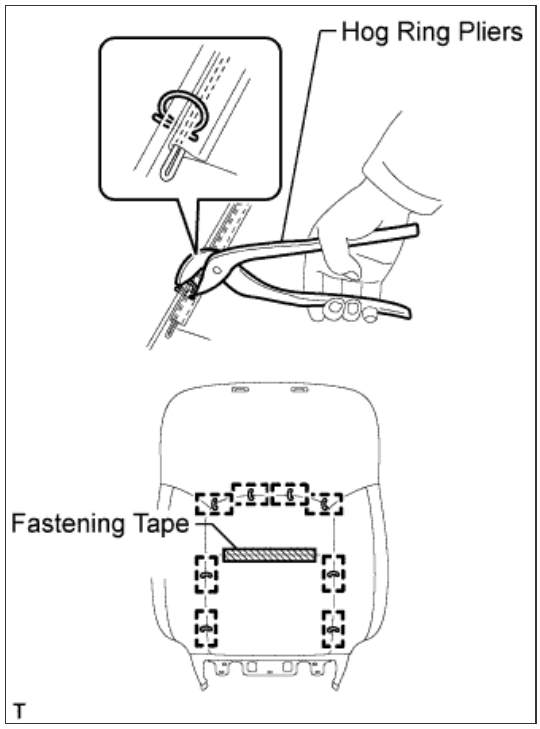

c. Connect the seatback cover bracket to the seatback pad.

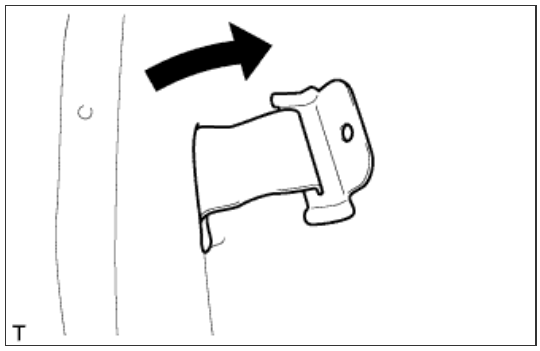

3. INSTALL SEATBACK COVER WITH PAD


a. Install the seatback cover with pad to the seatback frame.

b. Install the seatback cover bracket to the seat frame with the nut.

Torque:
5.0 N m{ 51 kgf cm , 44 in. lbf


CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

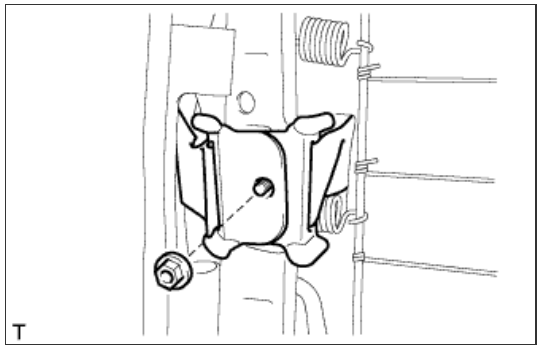


c. Attach the 9 hooks.

d. Using hog ring pliers, install 3 new hog rings to the seat frame.

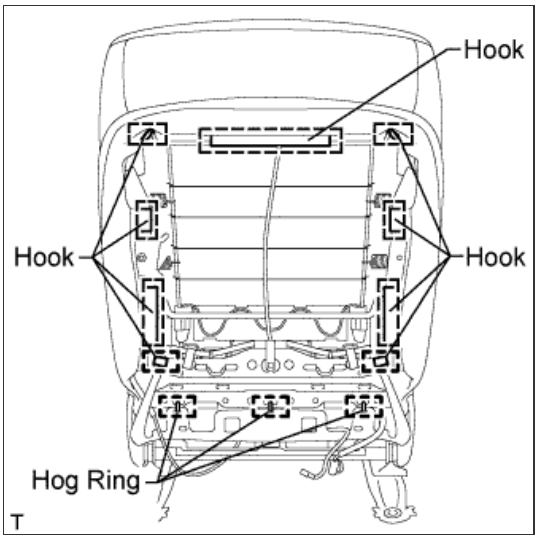

e. Connect the seat heater connector and attach the 2 wire harness clamps.

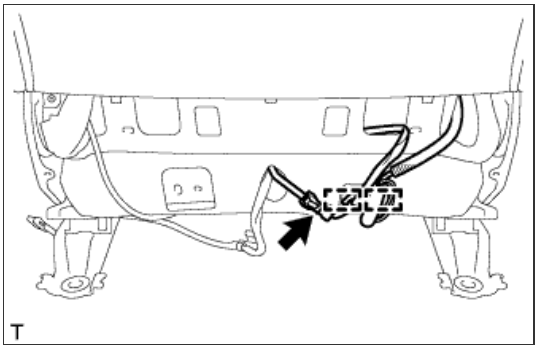


4. INSTALL FRONT SEAT HEADREST SUPPORT

a. Attach the 4 claws to install the 2 headrest supports.

5. INSTALL FRONT SEATBACK BOARD SUB ASSEMBLY LH

a. Move the seatback board in the direction of the arrow to attach the 2 hooks and install the seatback board.


b. Install the 2 screws.

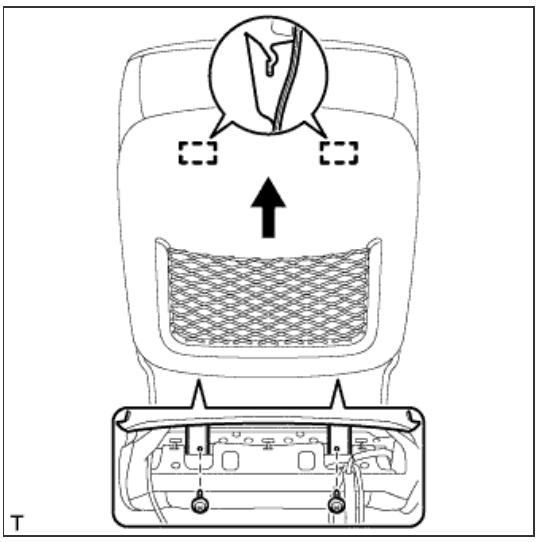

6. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the 2 claws and clip to install the cushion shield.

b. Install the screw.

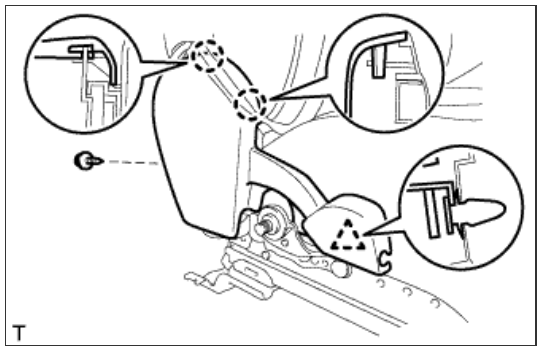

. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.

b. Connect the connectors and attach the clamps.

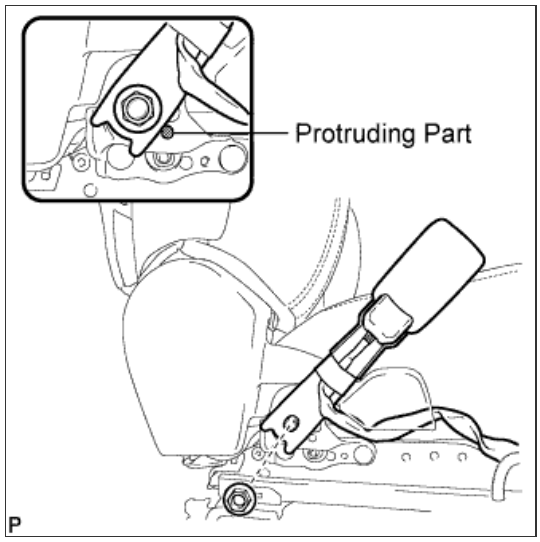


8. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


b. Attach the 2 claws to install the cushion shield.

c. Install the 3 screws.

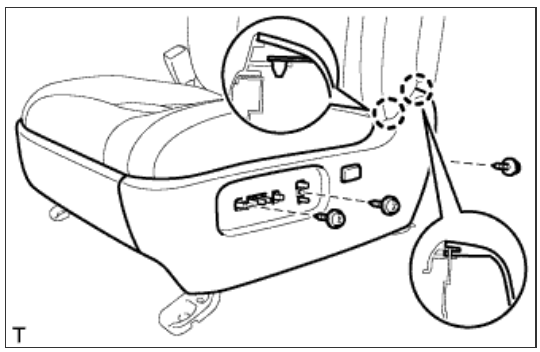


d. Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

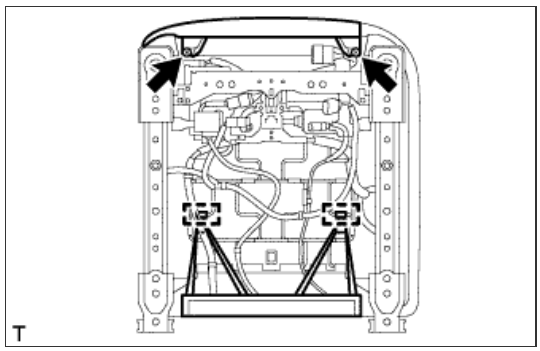


9. INSTALL RECLINING POWER SEAT SWITCH KNOB

a. Attach the 2 claws to install the knob.

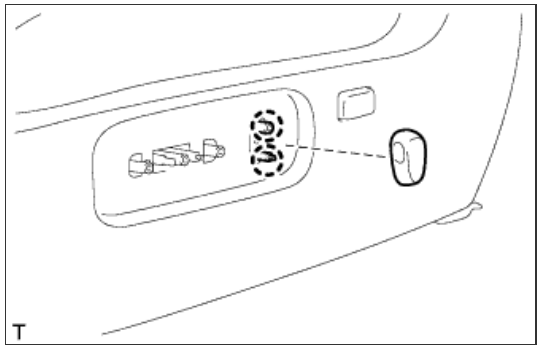

10. INSTALL SLIDE AND VERTICAL POWER SEAT SWITCH KNOB


a. Attach the 2 claws to install the knob.

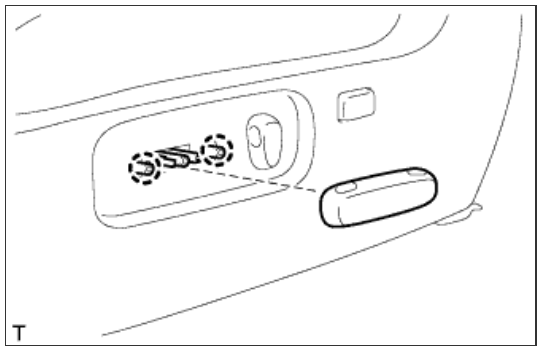



11. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).

for Preparation Click here

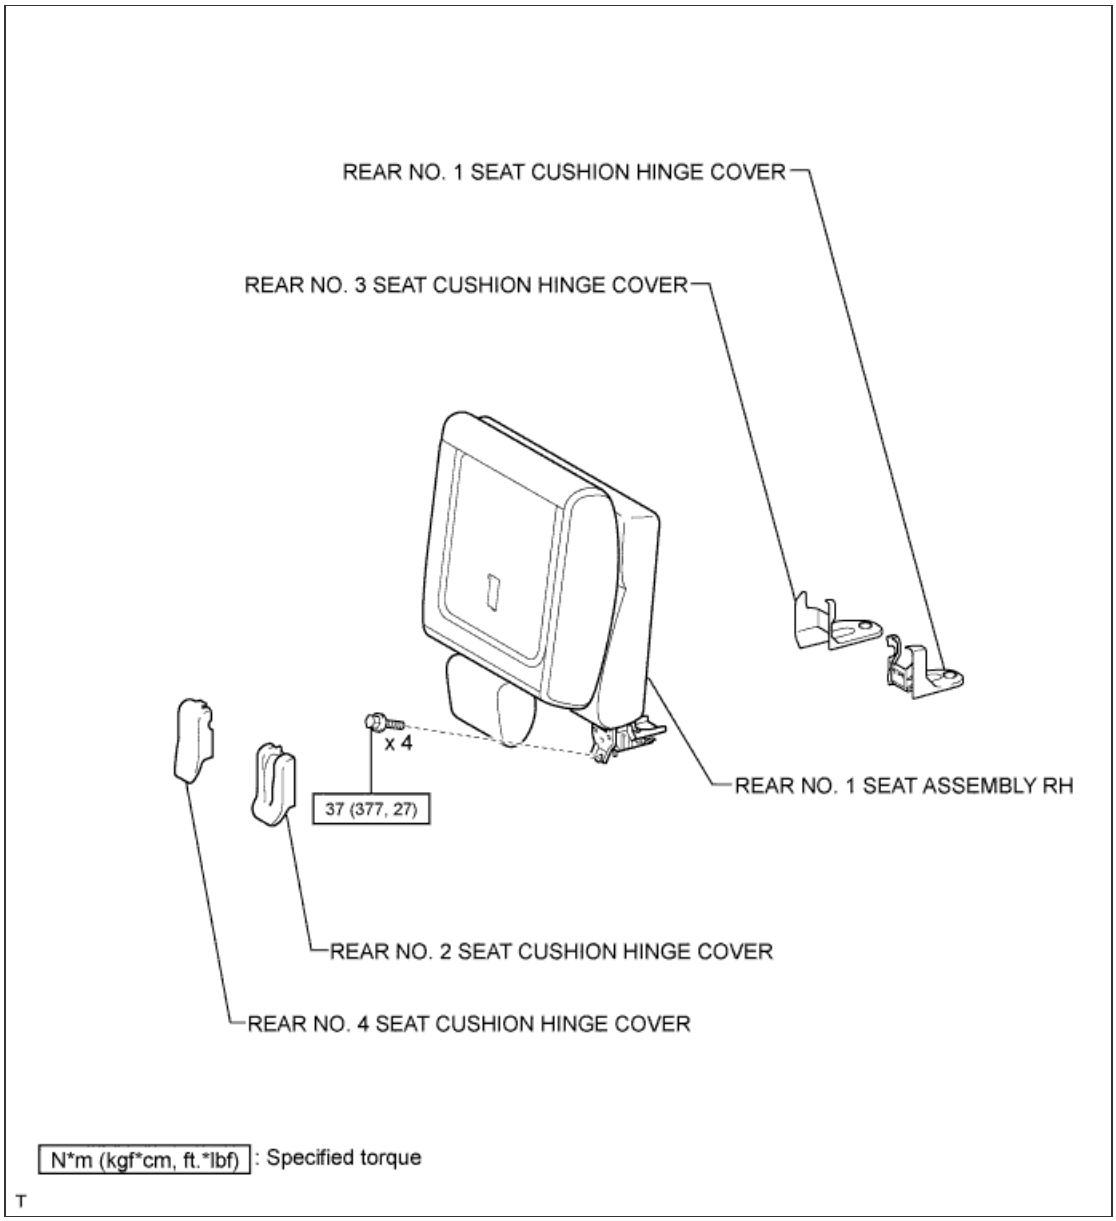

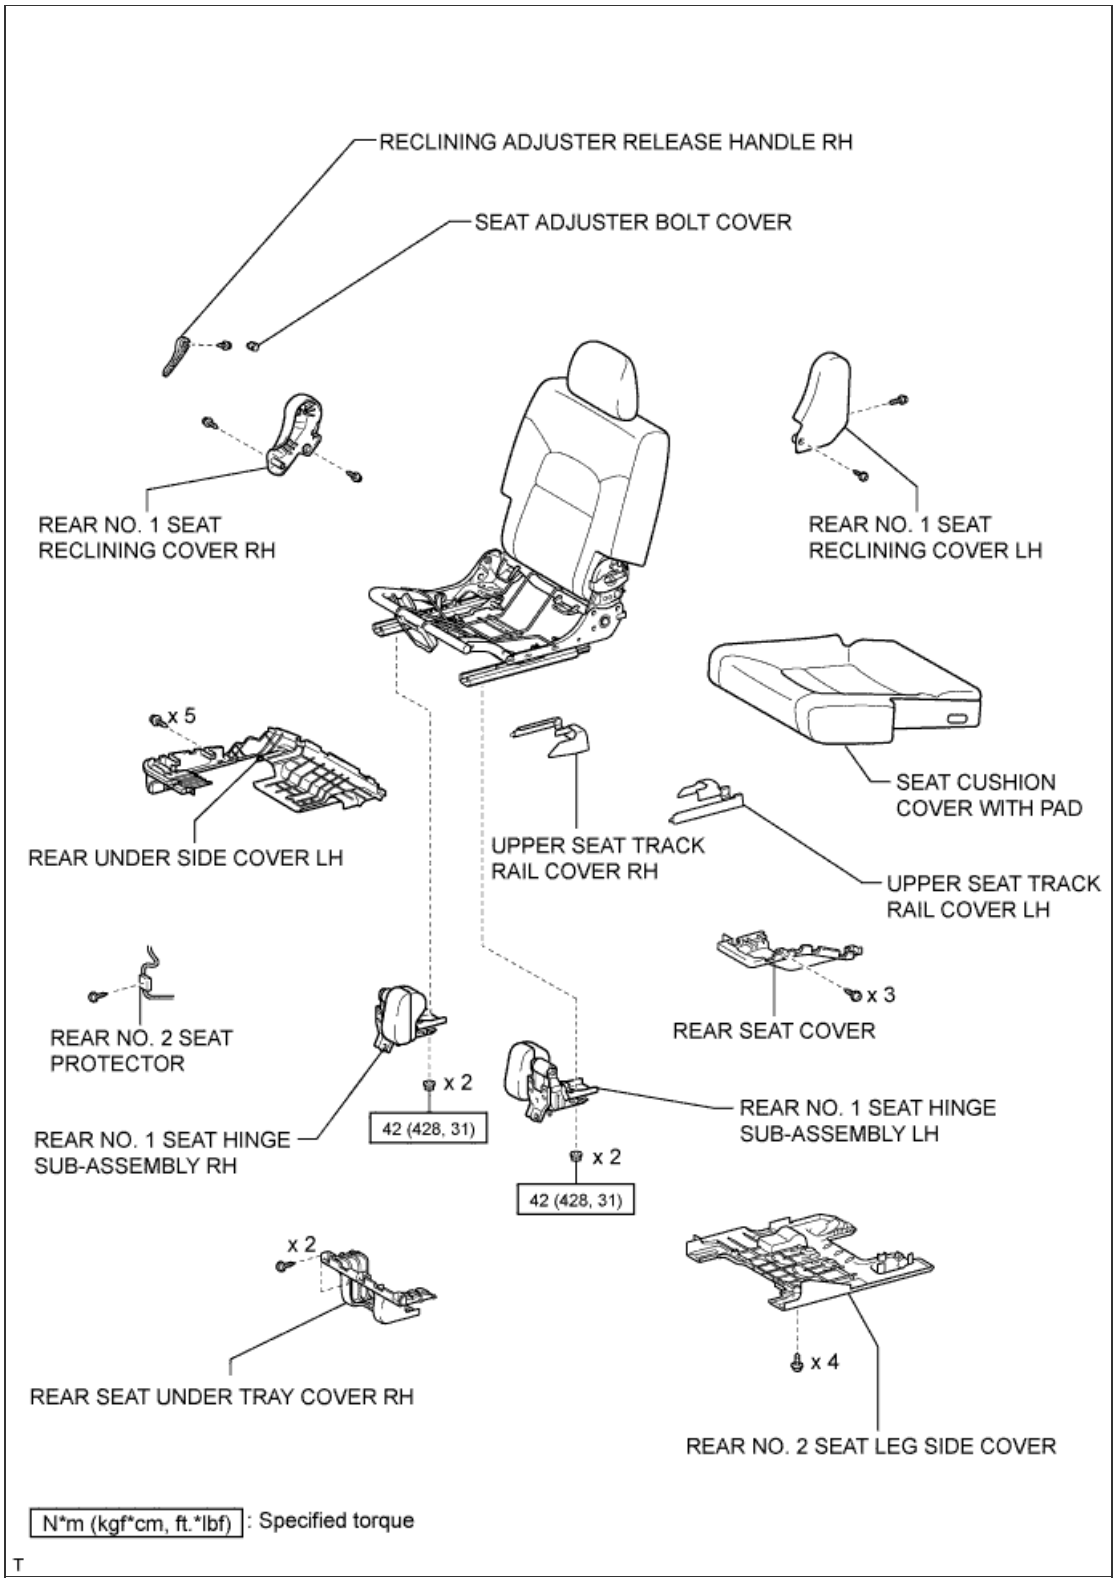
RECLINING ADJUSTER RELEASE HANDLE RH
SEAT ADJUSTER BOLT COVER
REAR NO. 1 SEAT RECLINING COVER RH
REAR NO. 1 SEAT RECLINING COVER LH
x 5
REAR UNDER SIDE COVER LH
UPPER SEAT TRACK RAIL COVER RH
SEAT CUSHION COVER WITH PAD
UPPER SEAT TRACK RAIL COVER LH
REAR NO. 2 SEAT PROTECTOR
x 3
REAR SEAT COVER
x 2
42 (428, 31)
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH
x 2
42 (428, 31)
x 2
REAR SEAT UNDER TRAY COVER RH
x 4
REAR NO. 2 SEAT LEG SIDE COVER
N*m (kgf*cm, ft.*lbf) : Specified torque
T

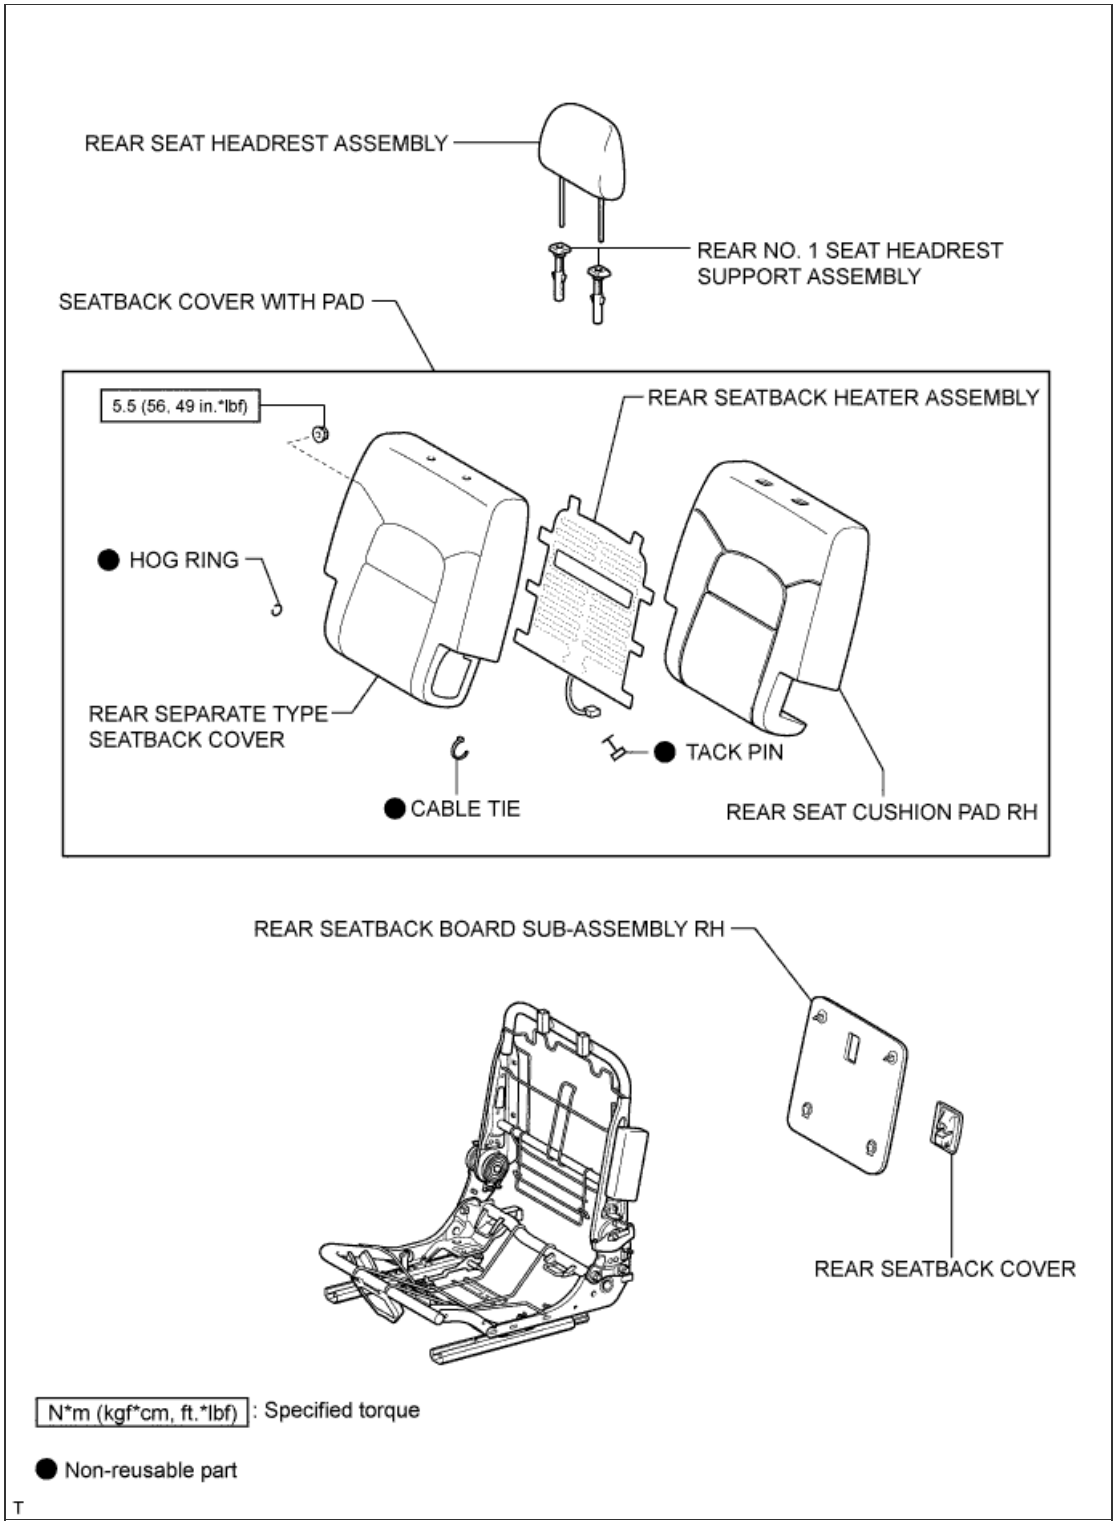
REAR SEAT HEADREST ASSEMBLY
REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY
SEATBACK COVER WITH PAD
5.5 (56, 49 in.*lbf)
REAR SEATBACK HEATER ASSEMBLY
HOG RING
REAR SEPARATE TYPE SEATBACK COVER
TACK PIN
CABLE TIE
REAR SEAT CUSHION PAD RH
REAR SEATBACK BOARD SUB-ASSEMBLY RH
REAR SEATBACK COVER
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part

T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY RH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

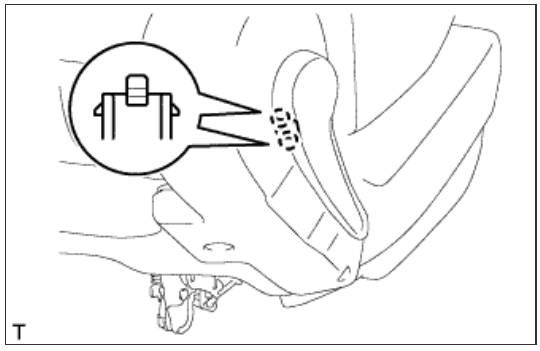

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE RH


a. Remove the screw and release handle.

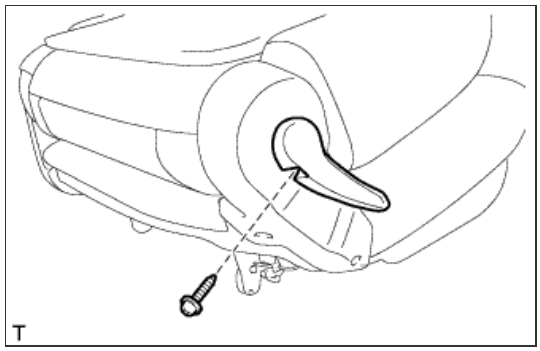

4. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

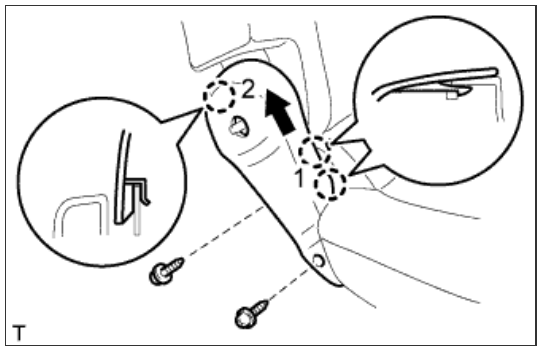

5. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

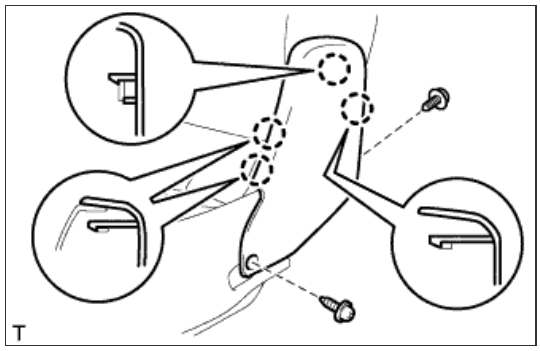


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

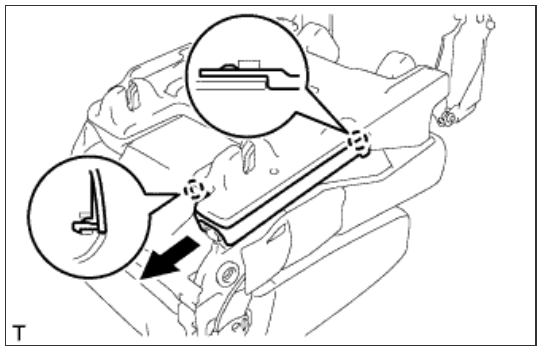


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

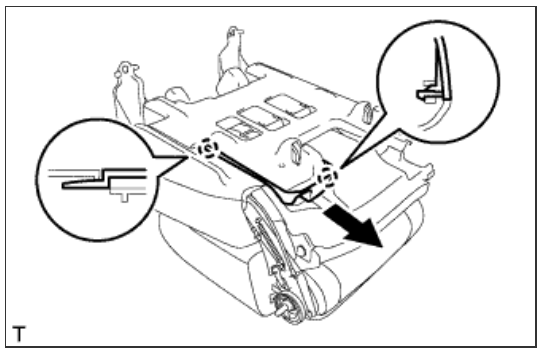


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 3 claws.

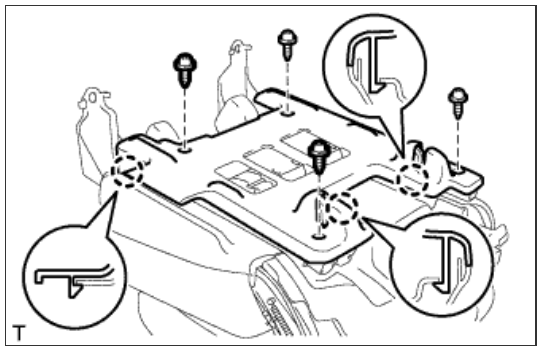


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

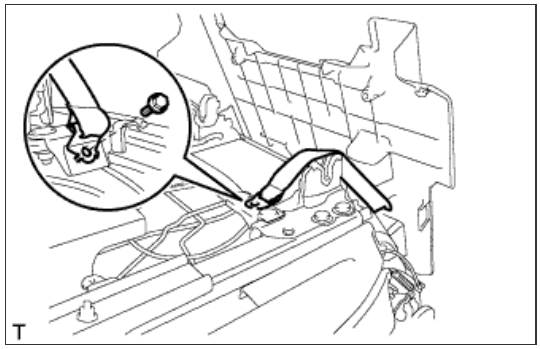

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

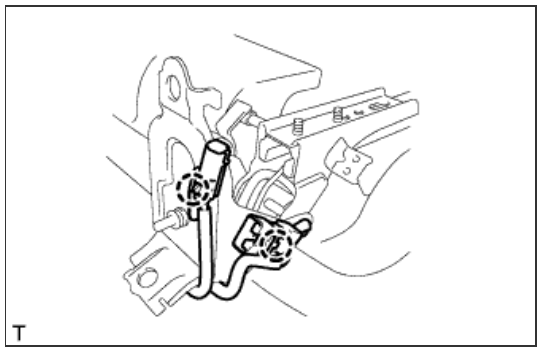

c. Using a clip remover, remove the clip.


d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove the wire harness.

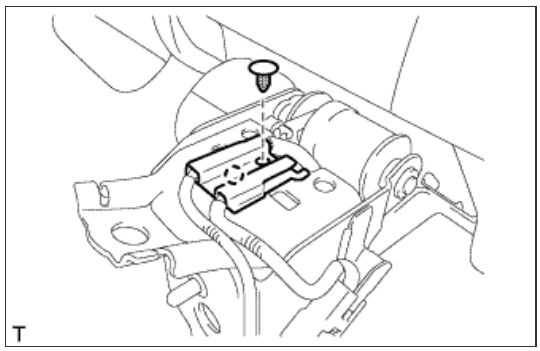

10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Remove the 2 nuts and hinge.

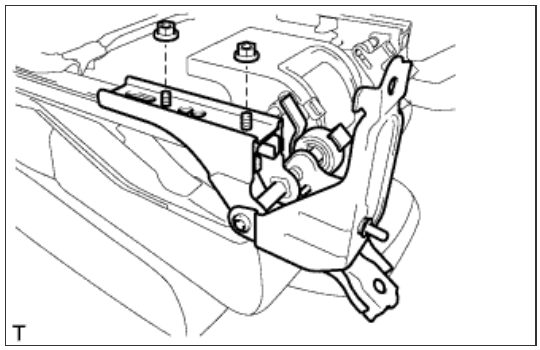


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

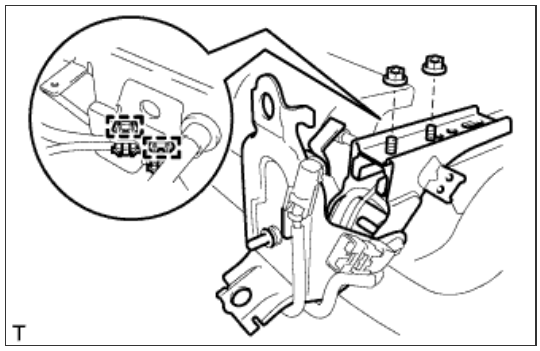


d. Detach the cable clamp and disconnect the cable.

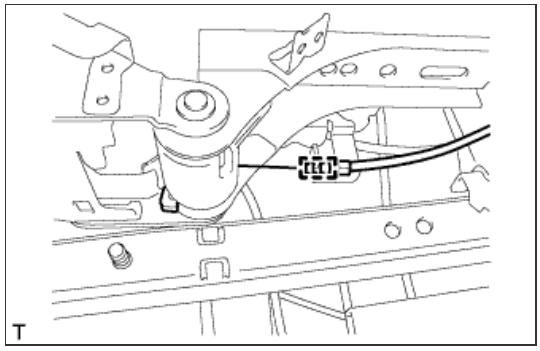


12. REMOVE REAR SEAT COVER

a. Detach the 12 claws.

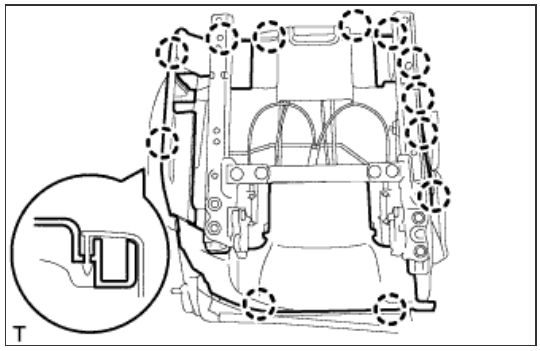

b. Remove the 3 screws.


c. Detach the 2 claws and remove the cover.

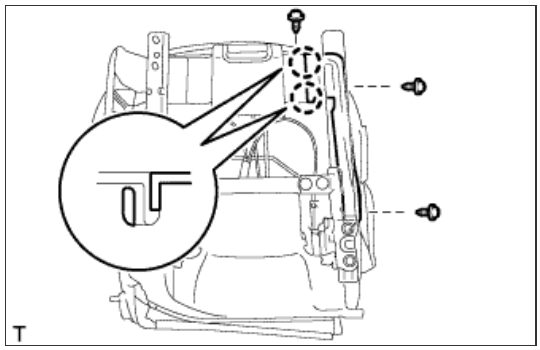

13. REMOVE REAR UNDER SIDE COVER LH

a. Remove the 5 screws.


b. Detach the clip and 2 claws, and remove the cover.

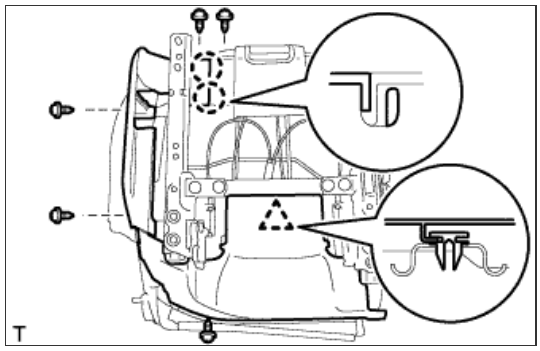

14. REMOVE REAR SEAT UNDER TRAY COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

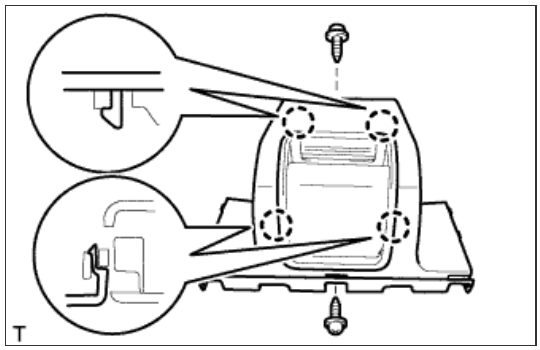

15. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.


ii. Remove the side airbag wire harness through the hole in the seat cushion.

b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

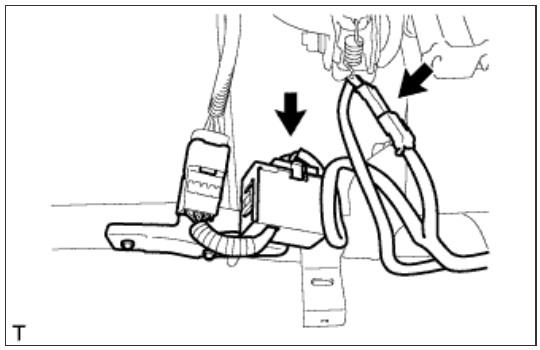

ii. Remove the seatback heater wire harness through the hole in the seat cushion.

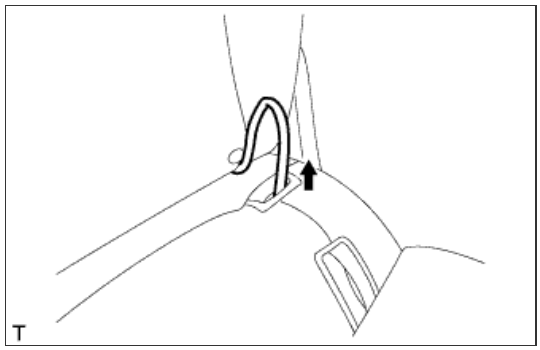


c. Remove the seat cushion cover with pad.

16. REMOVE REAR SEATBACK COVER

a. Using a screwdriver, detach the 4 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

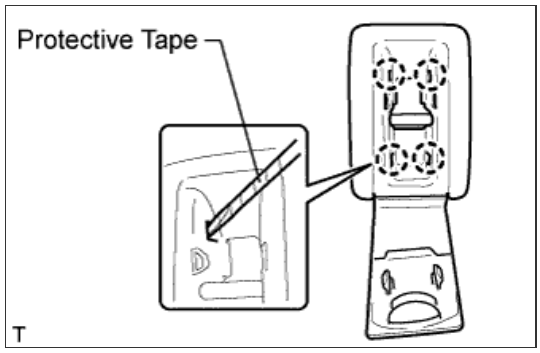

17. REMOVE REAR SEATBACK BOARD SUB-ASSEMBLY RH

a. Detach the 2 claws on the top of the board.


b. Pull up the board to detach the 2 claws on the bottom of the board and remove it.

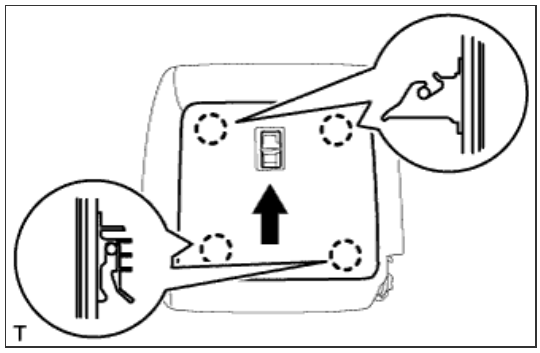

18. REMOVE REAR SEAT HEADREST ASSEMBLY


19. REMOVE REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. Detach the 4 claws and remove the 2 supports.

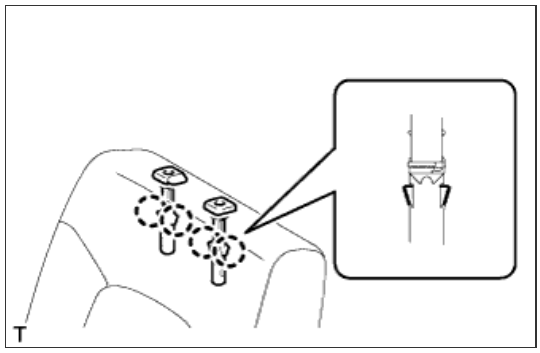

20. REMOVE SEATBACK COVER WITH PAD


a. Remove the hog rings.

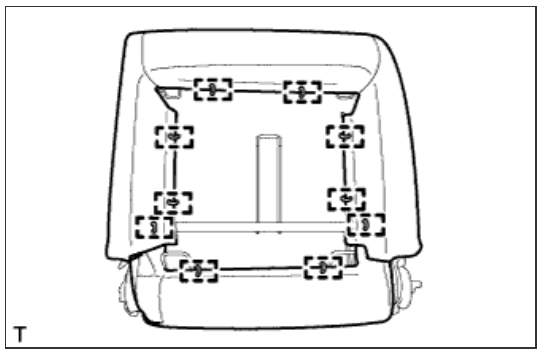

b. w/ Rear Seat Side Airbag:


i. Remove the cap nut and seatback cover bracket from the seat frame.

ii. Remove the side airbag wire harness through the hole in the seatback.

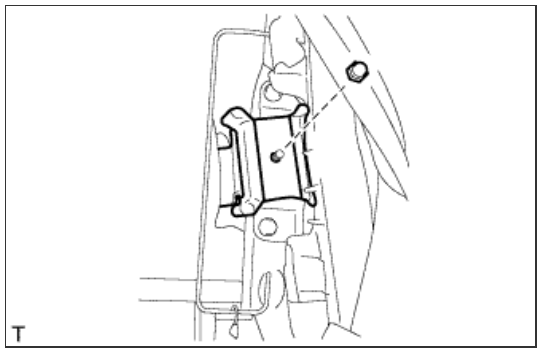


c. w/ Seat Heater System:

i. Cut the cable tie and disconnect the seatback heater wire harness.

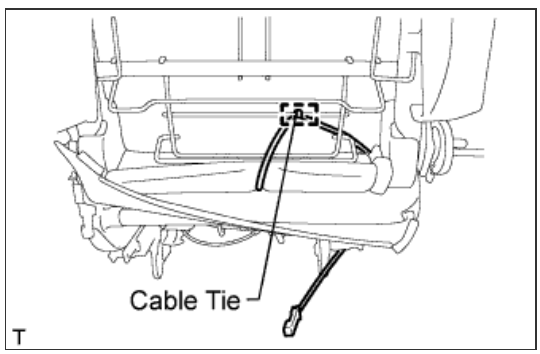


ii. Remove the seatback heater wire harness through the hole in the seatback.

d. Remove the seatback cover with pad.

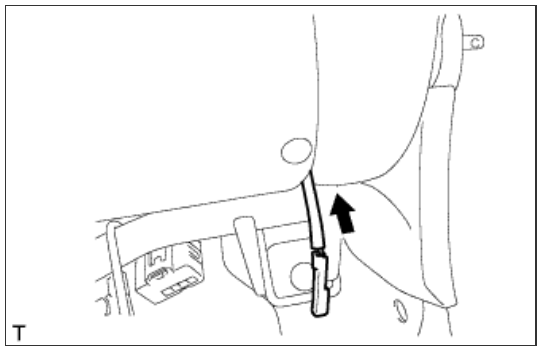


21. REMOVE REAR SEPARATE TYPE SEATBACK COVER

a. w/ Rear Seat Side Airbag:
Disconnect the seatback cover bracket from the seatback pad.

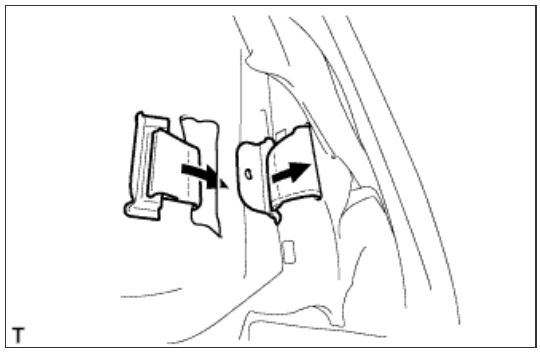


b. Remove the hog rings and rear seatback cover.

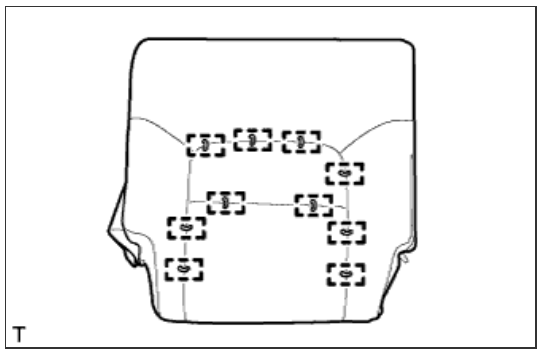

22. REMOVE REAR SEATBACK HEATER ASSEMBLY

a. Cut off the tack pins which fasten the seatback heater to the seatback cover, and then remove the seatback heater from the seatback cover.

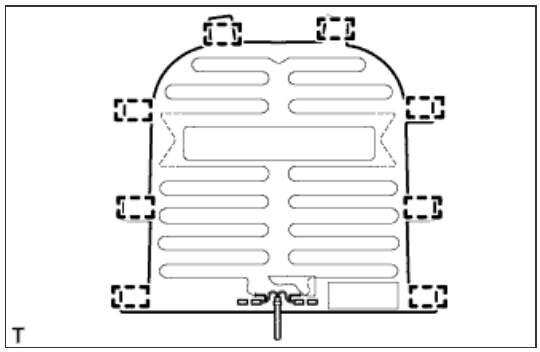

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY RH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

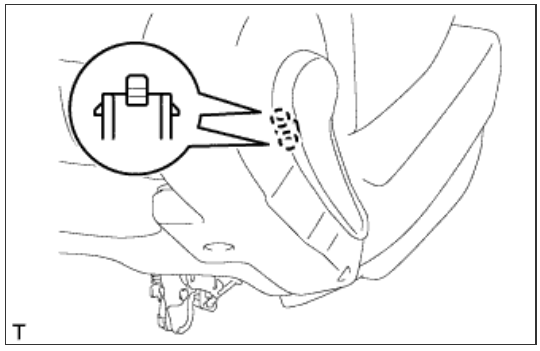

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE RH


a. Remove the screw and release handle.

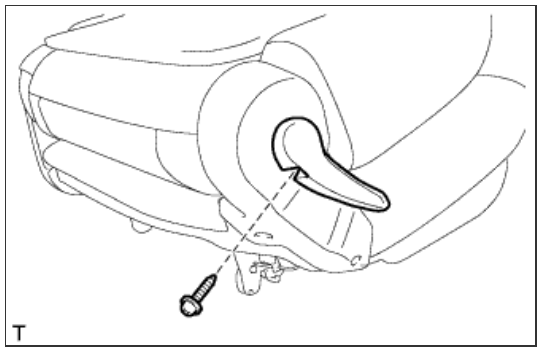

4. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

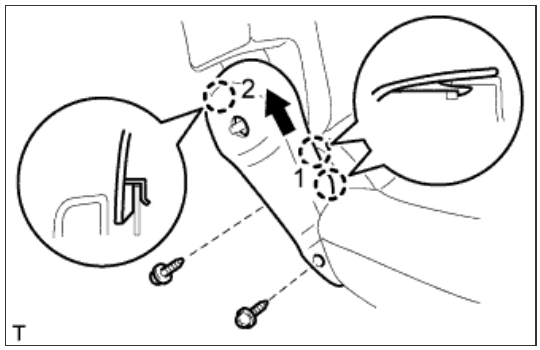

5. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

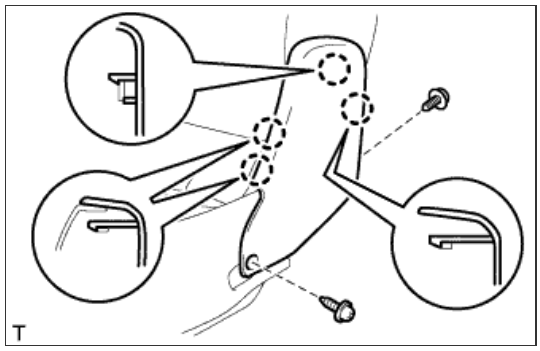


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

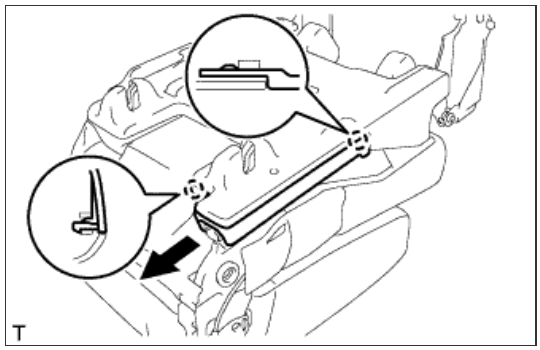


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

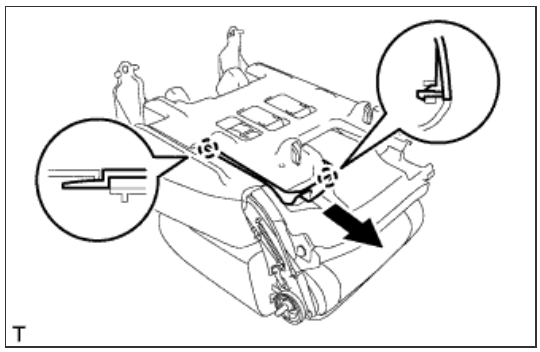


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 3 claws.

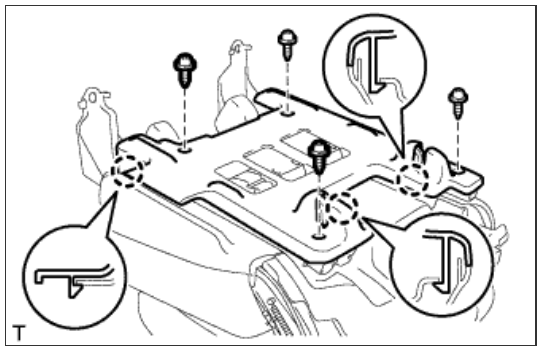


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

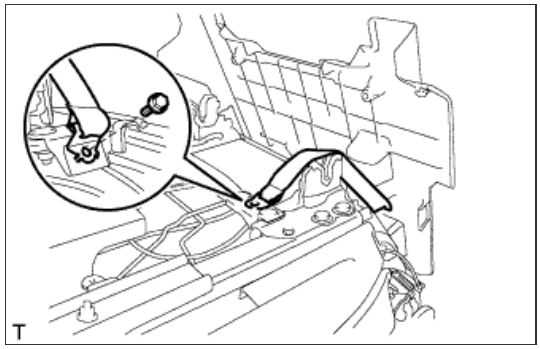

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

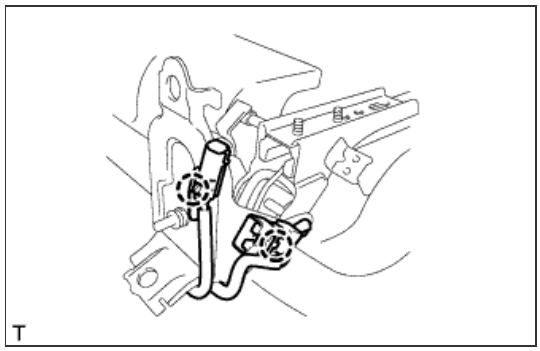

c. Using a clip remover, remove the clip.


d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove the wire harness.

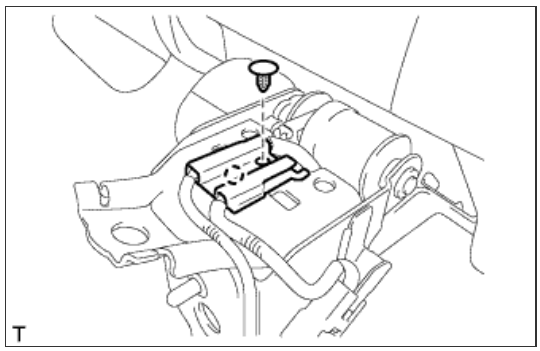

10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Remove the 2 nuts and hinge.

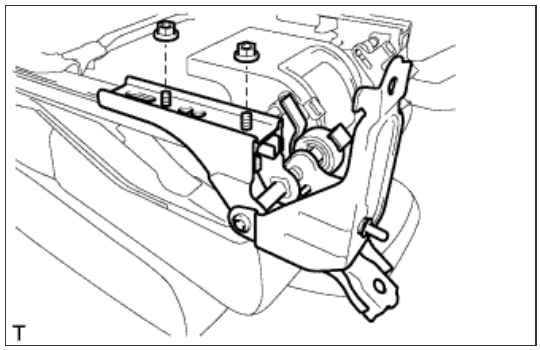


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

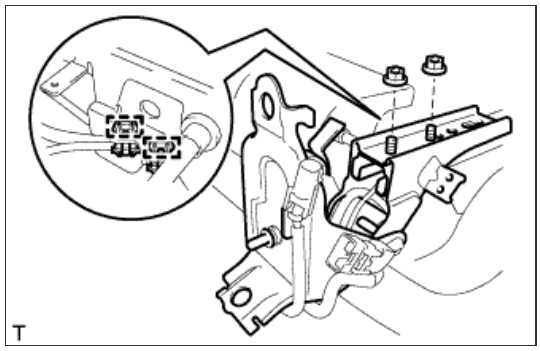


d. Detach the cable clamp and disconnect the cable.

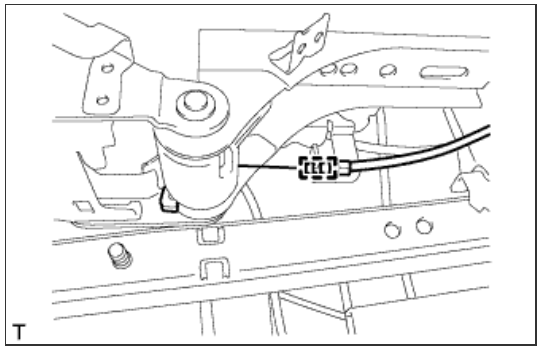


12. REMOVE REAR SEAT COVER

a. Detach the 12 claws.

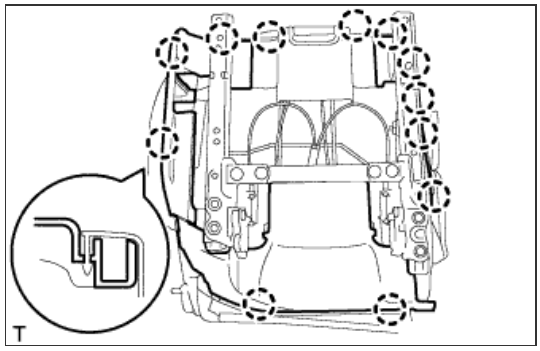

b. Remove the 3 screws.


c. Detach the 2 claws and remove the cover.

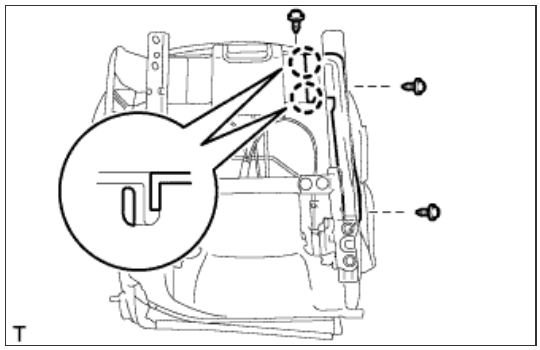

13. REMOVE REAR UNDER SIDE COVER LH

a. Remove the 5 screws.


b. Detach the clip and 2 claws, and remove the cover.

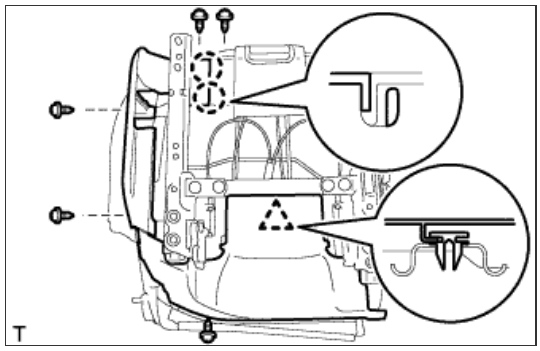

14. REMOVE REAR SEAT UNDER TRAY COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

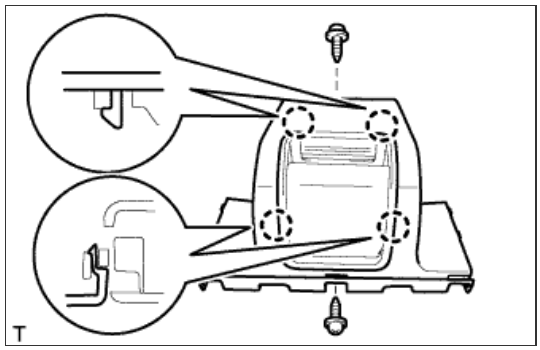

15. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.


ii. Remove the side airbag wire harness through the hole in the seat cushion.

b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

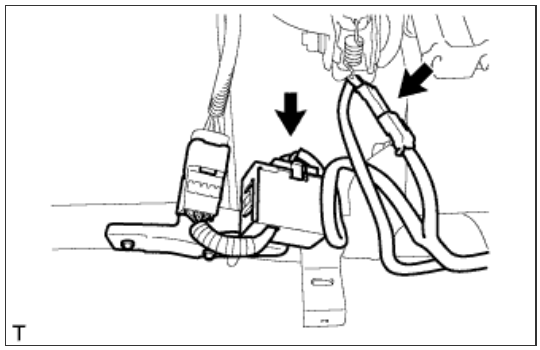

ii. Remove the seatback heater wire harness through the hole in the seat cushion.

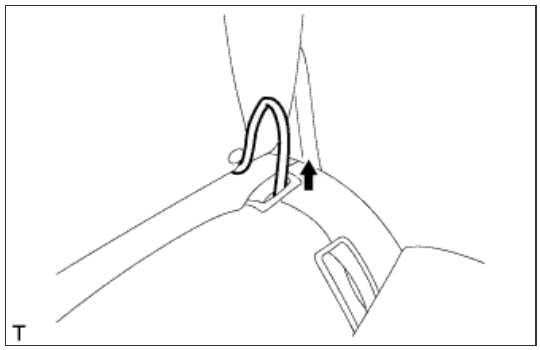


c. Remove the seat cushion cover with pad.

16. REMOVE REAR SEATBACK COVER

a. Using a screwdriver, detach the 4 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

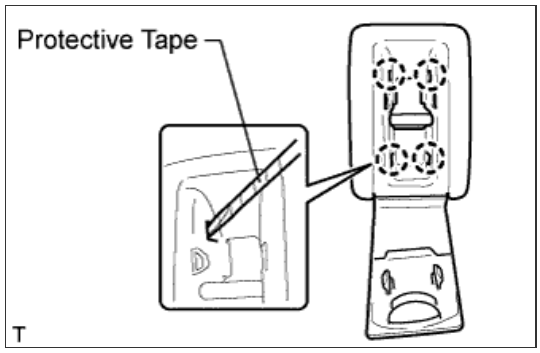

17. REMOVE REAR SEATBACK BOARD SUB-ASSEMBLY RH

a. Detach the 2 claws on the top of the board.


b. Pull up the board to detach the 2 claws on the bottom of the board and remove it.

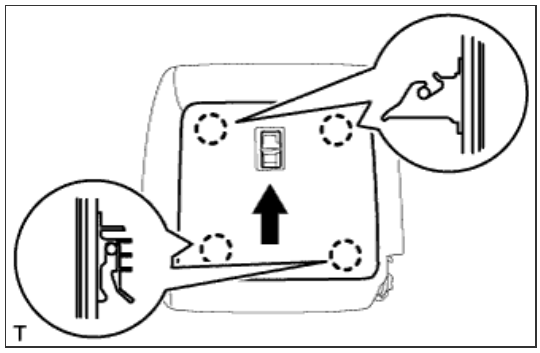

18. REMOVE REAR SEAT HEADREST ASSEMBLY


19. REMOVE REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. Detach the 4 claws and remove the 2 supports.

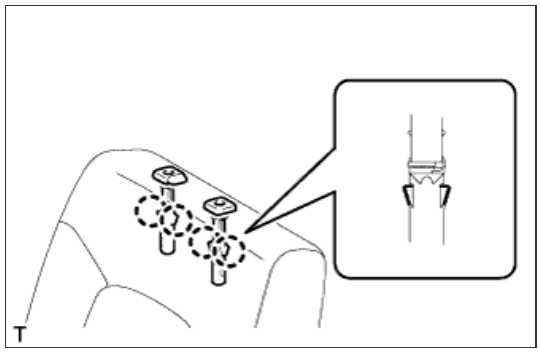

20. REMOVE SEATBACK COVER WITH PAD


a. Remove the hog rings.

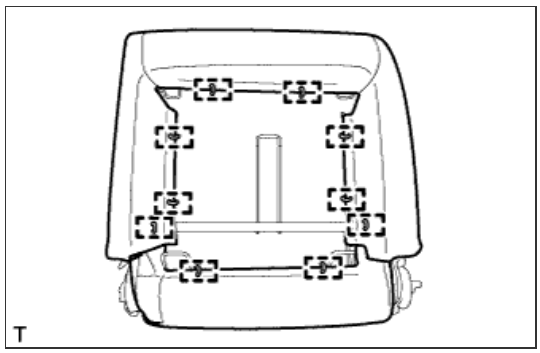

b. w/ Rear Seat Side Airbag:


i. Remove the cap nut and seatback cover bracket from the seat frame.

ii. Remove the side airbag wire harness through the hole in the seatback.

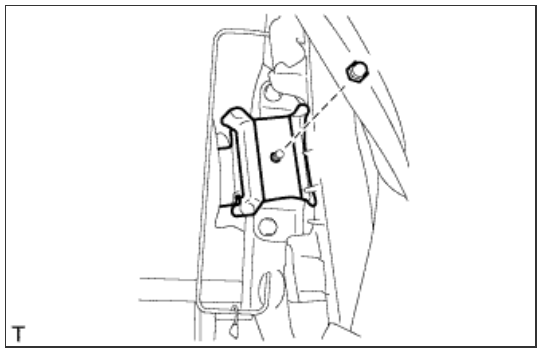


c. w/ Seat Heater System:

i. Cut the cable tie and disconnect the seatback heater wire harness.

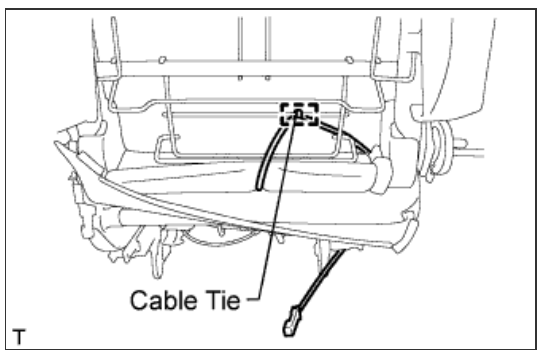


ii. Remove the seatback heater wire harness through the hole in the seatback.

d. Remove the seatback cover with pad.

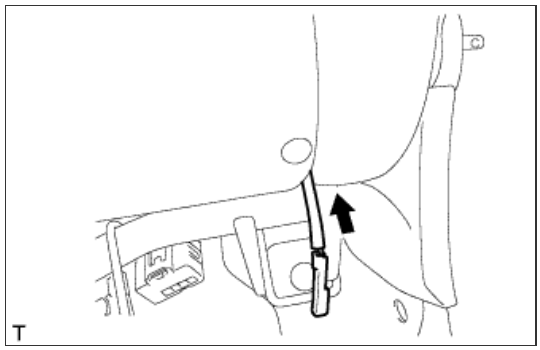


21. REMOVE REAR SEPARATE TYPE SEATBACK COVER

a. w/ Rear Seat Side Airbag:
Disconnect the seatback cover bracket from the seatback pad.

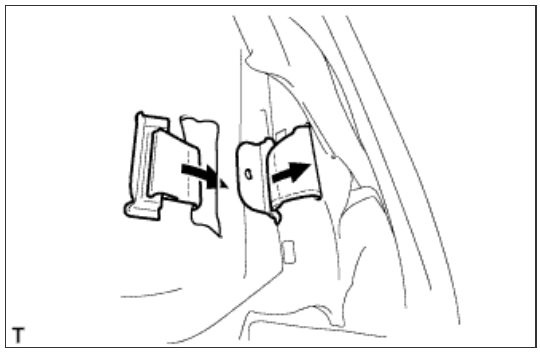


b. Remove the hog rings and rear seatback cover.

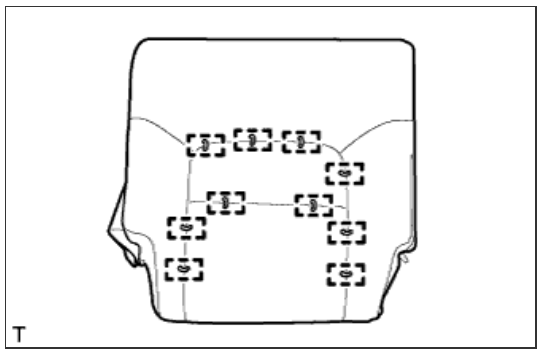

22. REMOVE REAR SEATBACK HEATER ASSEMBLY

a. Cut off the tack pins which fasten the seatback heater to the seatback cover, and then remove the seatback heater from the seatback cover.

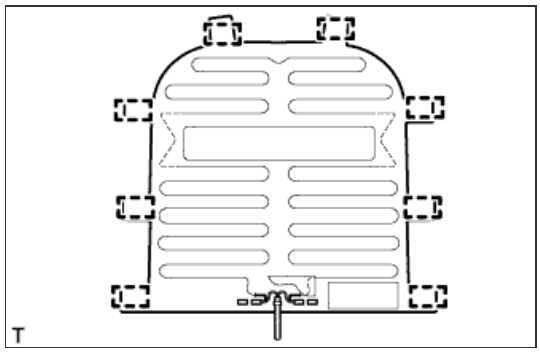

for Preparation Click here

1. INSPECT REAR SEATBACK HEATER ASSE B

a Check the seatback heater.


i Measure the resistance according to the value(s) in the table below.

Standard Re i tance

Tester Connection	Condition	Specified Condition
1 - 2	Seatback heater temperature 25 C ( )	.3 to 8. Ω

the result is not as specified, replace the seatback heater assembly.

Component without harness connected:
(Rear Seatback Heater)

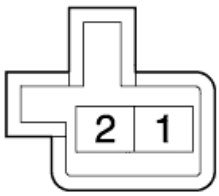

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEATBACK HEATER ASSEMBLY

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

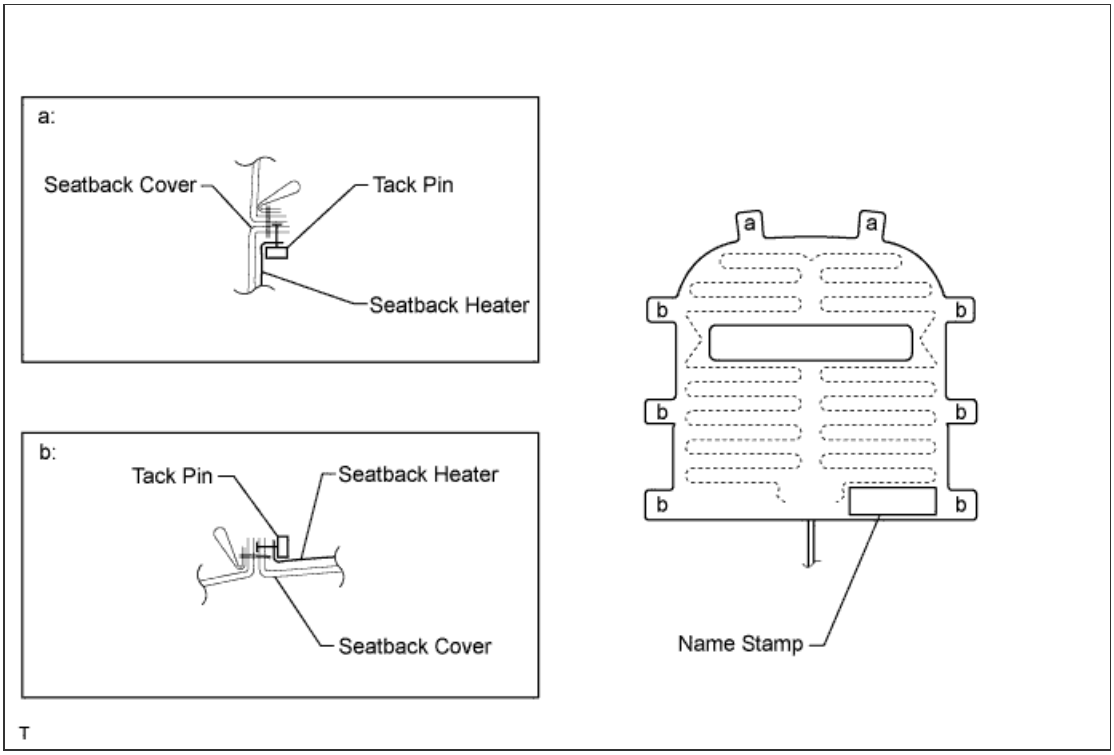


2. INSTALL REAR SEPARATE TYPE SEATBACK COVER


a. Using hog ring pliers, install the seatback cover with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

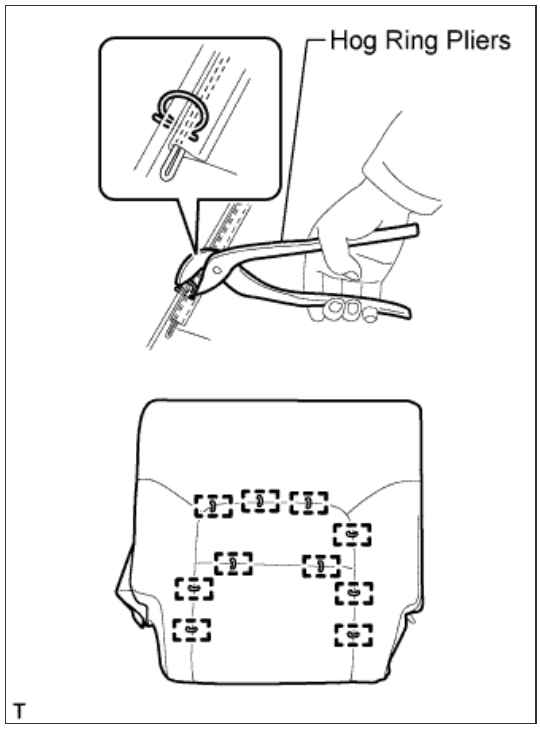

b. w/ Rear Seat Side Airbag:
Connect the seatback cover bracket to the seatback pad.

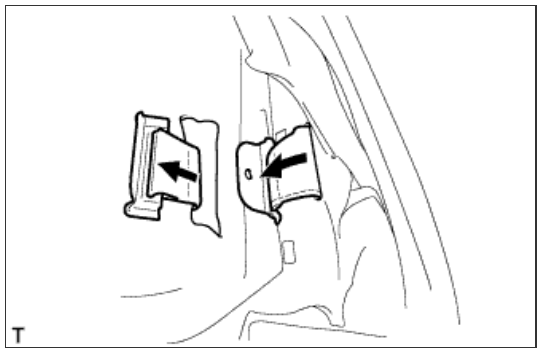


3. INSTALL SEATBACK COVER WITH PAD

a. Install the seatback cover with pad.


b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seatback.

c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seatback.

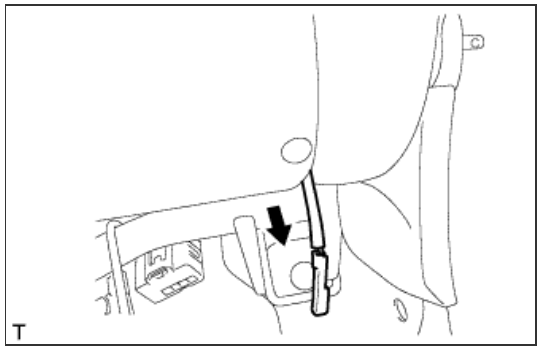

ii. Connect the seatback heater wire harness and install a new cable tie.

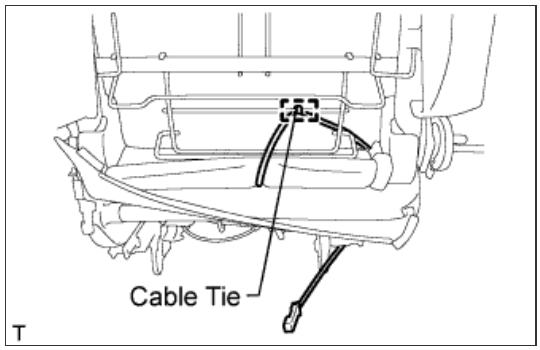


d. w/ Rear Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the cap nut.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

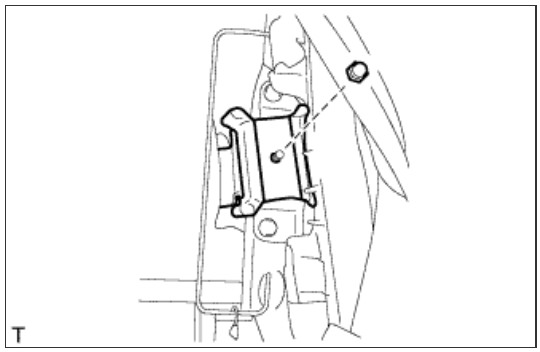


e. Using hog ring pliers, install new hog rings to the seatback frame.

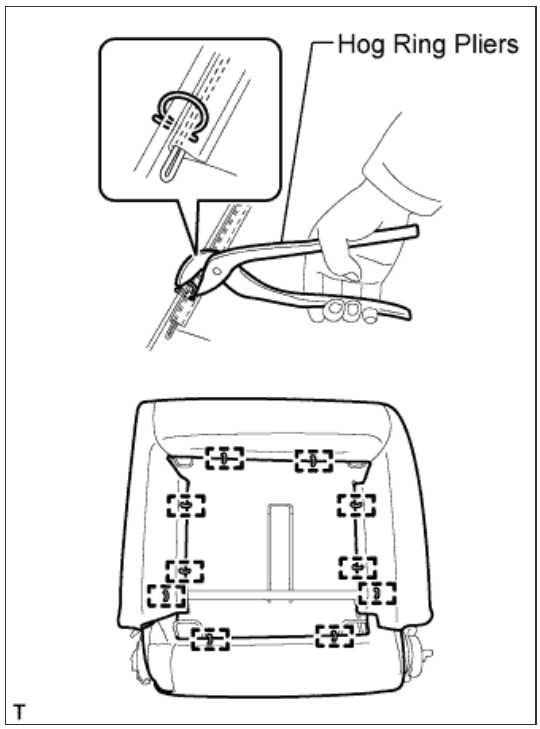

4. INSTALL REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. Attach the 4 claws to install the 2 supports.

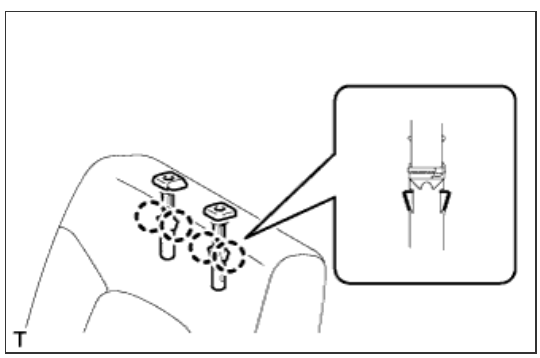


5. INSTALL REAR SEAT HEADREST ASSEMBLY

6. INSTALL REAR SEATBACK BOARD SUB-ASSEMBLY RH


a. Push the board down to attach the 2 claws on the bottom.

b. Attach the 2 claws on the top of the board to install it.

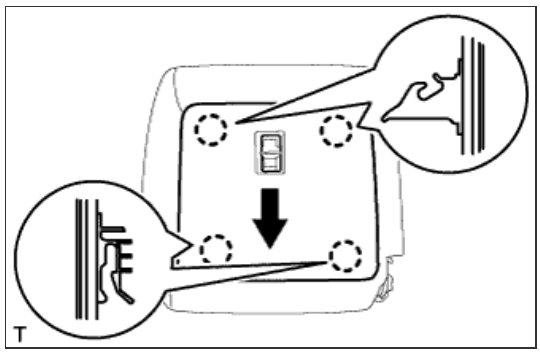

7. INSTALL REAR SEATBACK COVER

a. Attach the 4 claws to install the cover.

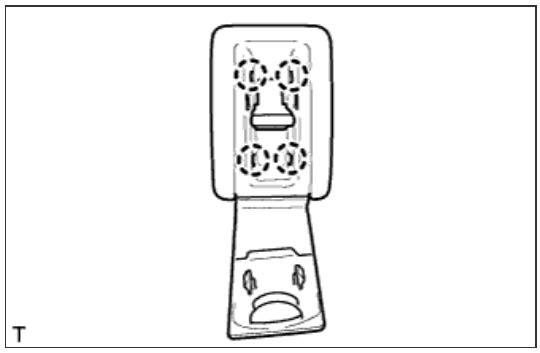


8. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.

b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seat cushion.


c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seat cushion.

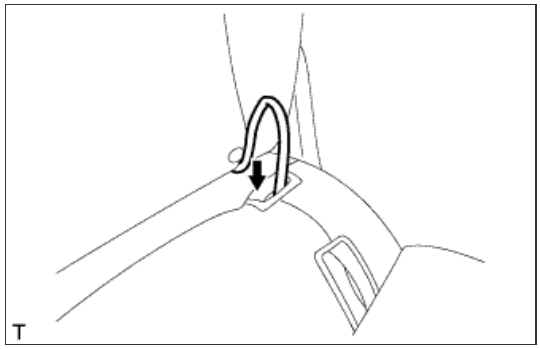

ii. Connect the 2 seat heater connectors.


d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

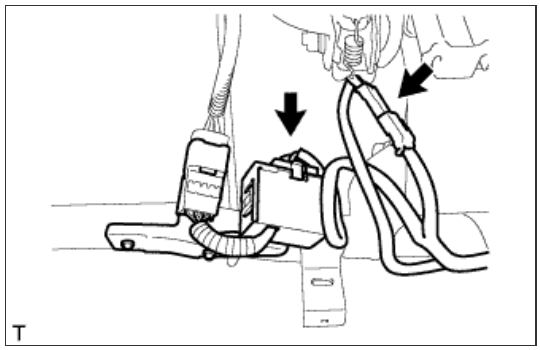

9. INSTALL REAR SEAT UNDER TRAY COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

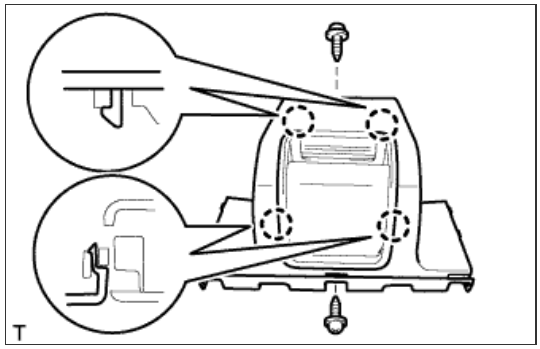

10. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and clip to install the cover.


b. Install the 5 screws.

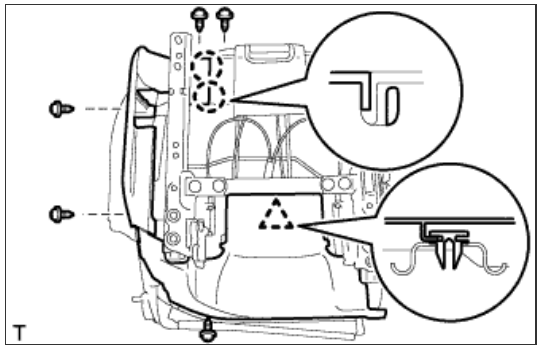


11. INSTALL REAR SEAT COVER

a. Attach the 2 claws to install the cover.

b. Install the 3 screws.

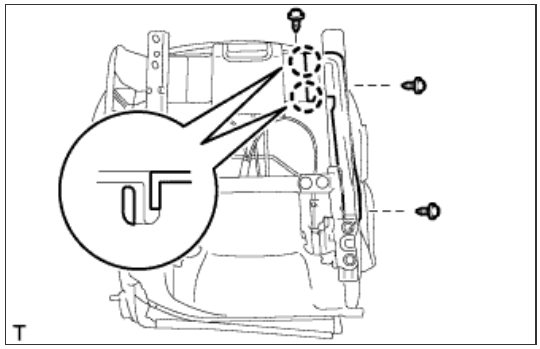


c. Attach the 12 claws.

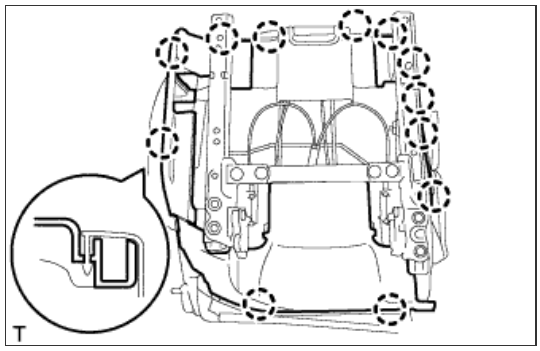

12. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Attach the cable clamp to connect the cable.

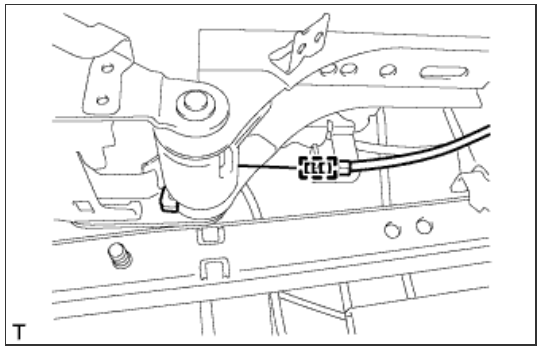


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.


d. w/ Seat Heater System:
Attach the wire harness clamp.

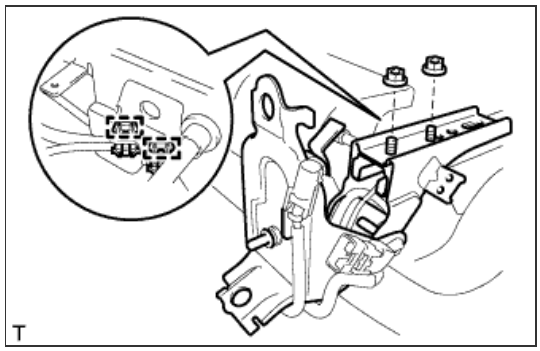

13. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

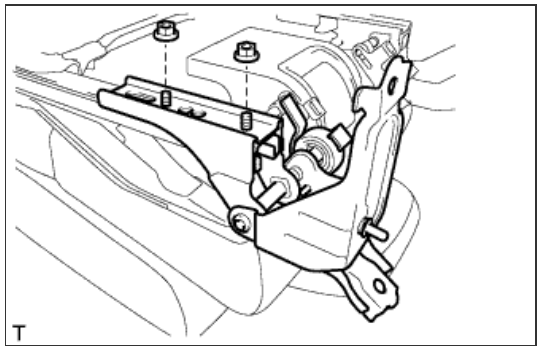


14. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach the 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

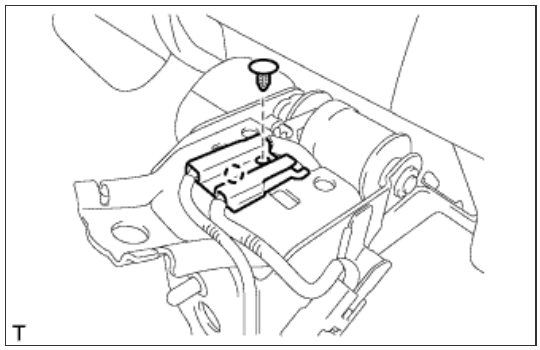


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

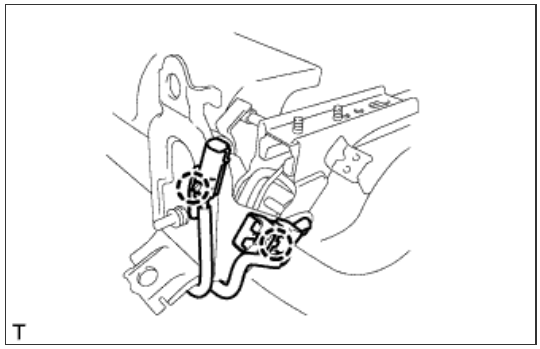


15. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

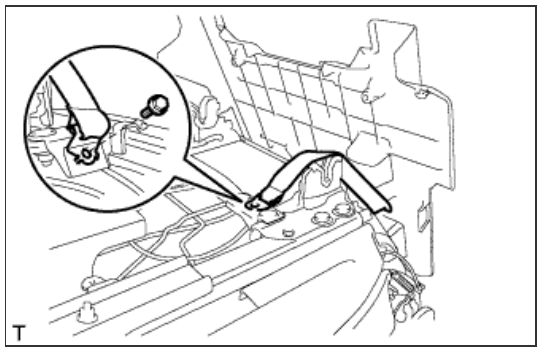


b. Attach the 3 claws to install the seat leg side cover.

c. Install the 4 screws.

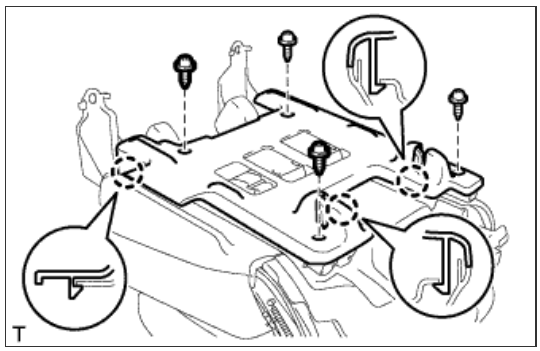


16. INSTALL UPPER SEAT TRACK RAIL COVER RH

a. Attach the 2 claws to install the cover.

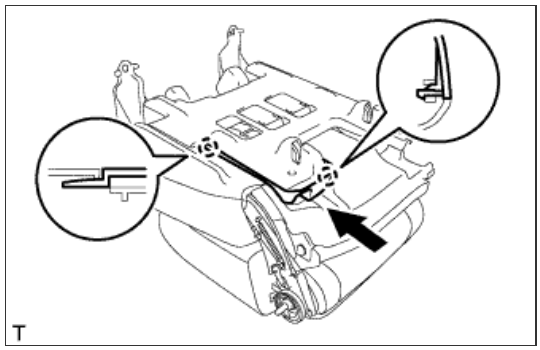

17. INSTALL UPPER SEAT TRACK RAIL COVER LH


a. Attach the 2 claws to install the cover.

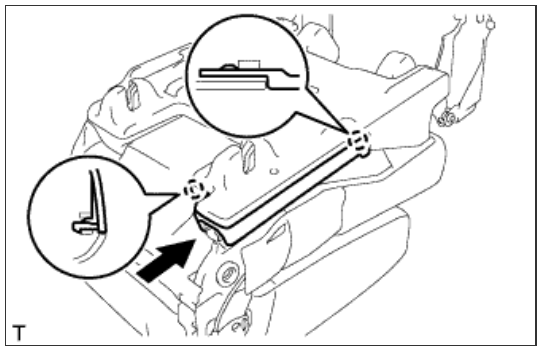

18. INSTALL REAR NO. 1 SEAT RECLINING COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

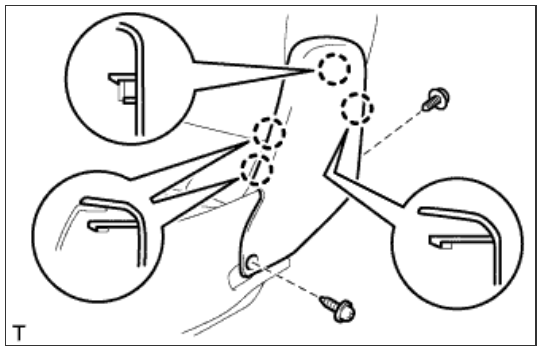

19. INSTALL REAR NO. 1 SEAT RECLINING COVER RH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

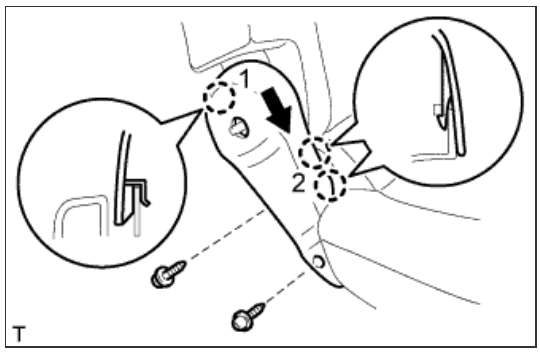


20. INSTALL RECLINING ADJUSTER RELEASE HANDLE RH

a. Install the release handle with the screw.

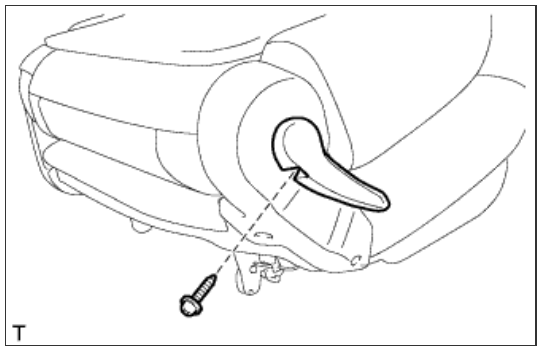

21. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

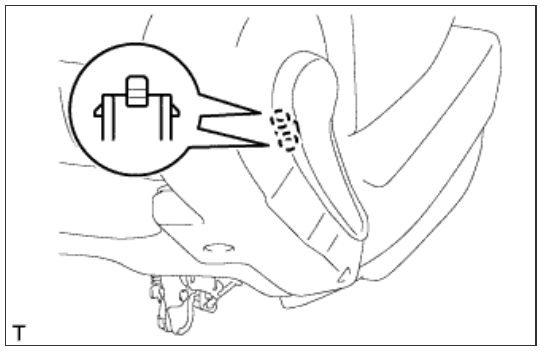

22. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. Install the rear No. 1 seat assembly (Click here).

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEATBACK HEATER ASSEMBLY

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

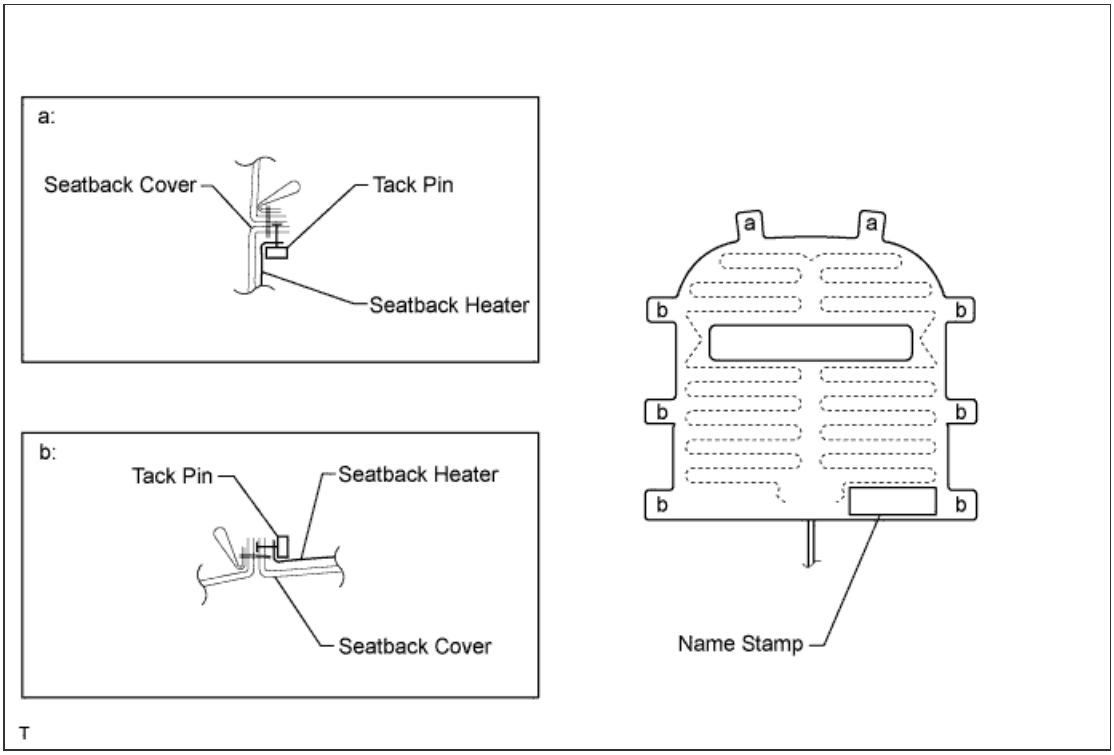


2. INSTALL REAR SEPARATE TYPE SEATBACK COVER


a. Using hog ring pliers, install the seatback cover with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

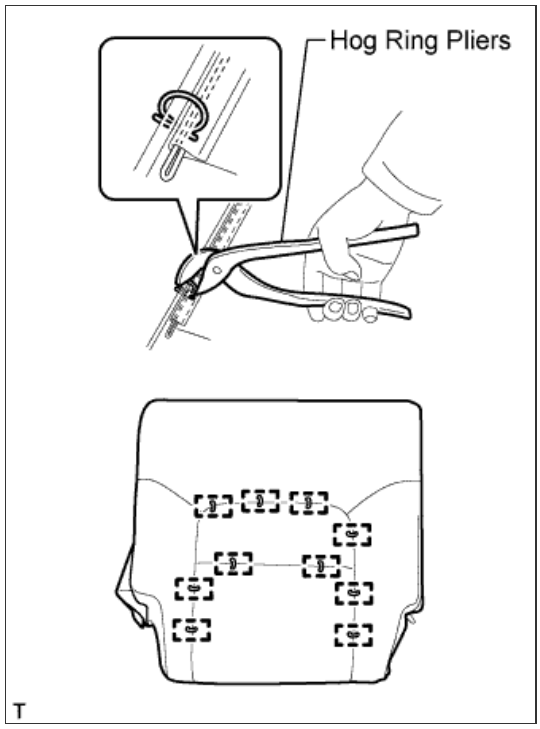

b. w/ Rear Seat Side Airbag:
Connect the seatback cover bracket to the seatback pad.

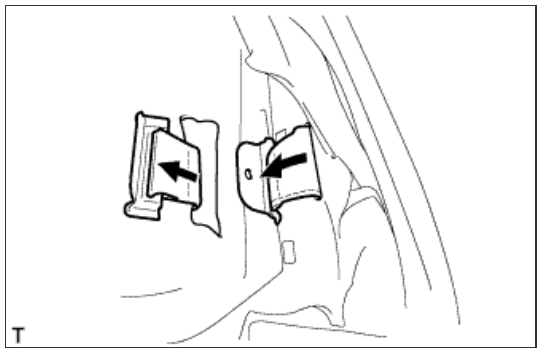


3. INSTALL SEATBACK COVER WITH PAD

a. Install the seatback cover with pad.


b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seatback.

c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seatback.

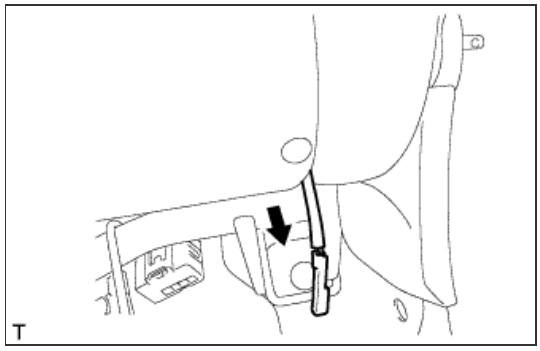

ii. Connect the seatback heater wire harness and install a new cable tie.

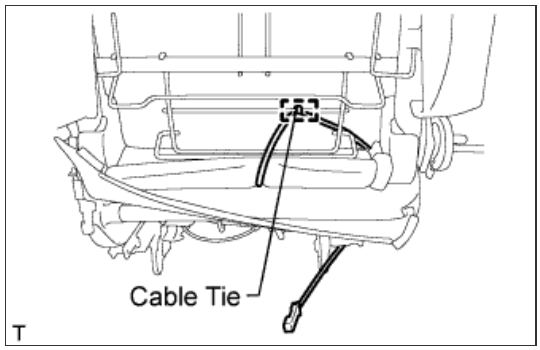


d. w/ Rear Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the cap nut.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

CAUTION:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

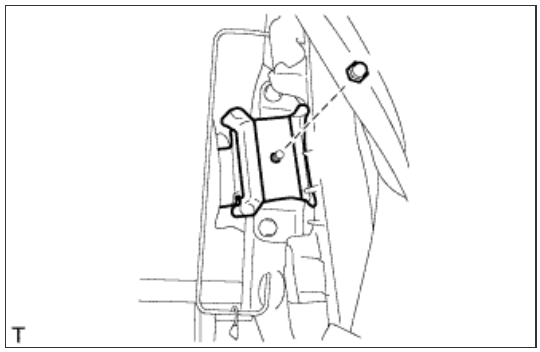


e. Using hog ring pliers, install new hog rings to the seatback frame.

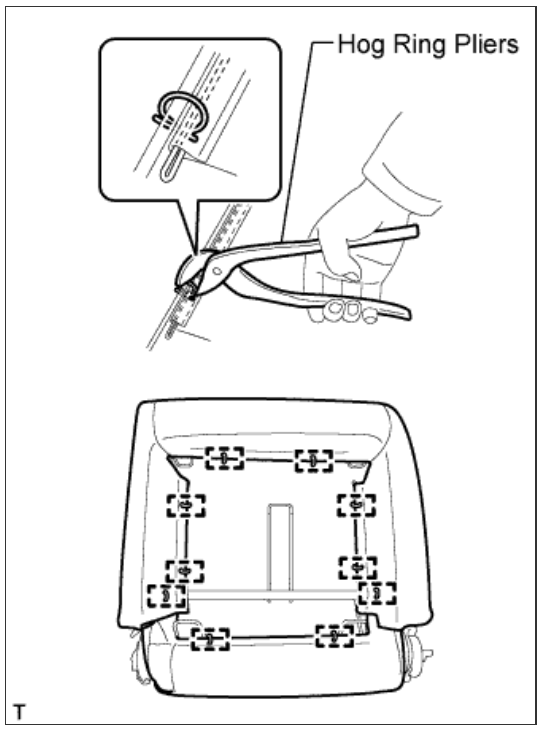

4. INSTALL REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. Attach the 4 claws to install the 2 supports.

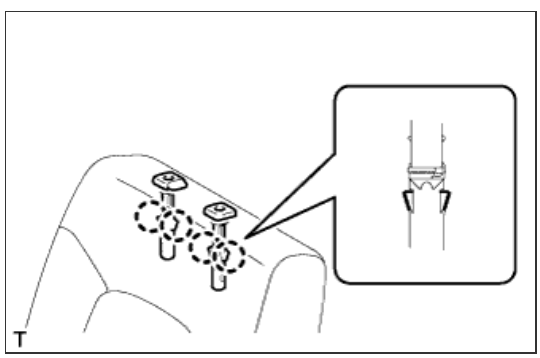


5. INSTALL REAR SEAT HEADREST ASSEMBLY

6. INSTALL REAR SEATBACK BOARD SUB-ASSEMBLY RH


a. Push the board down to attach the 2 claws on the bottom.

b. Attach the 2 claws on the top of the board to install it.

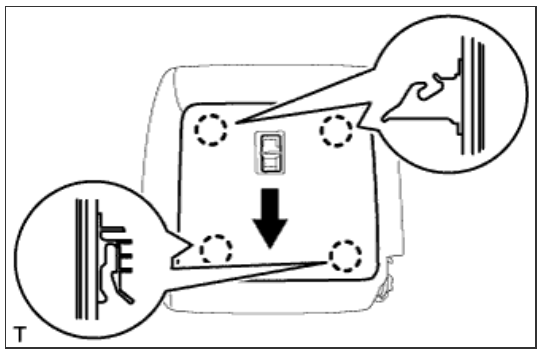

7. INSTALL REAR SEATBACK COVER

a. Attach the 4 claws to install the cover.

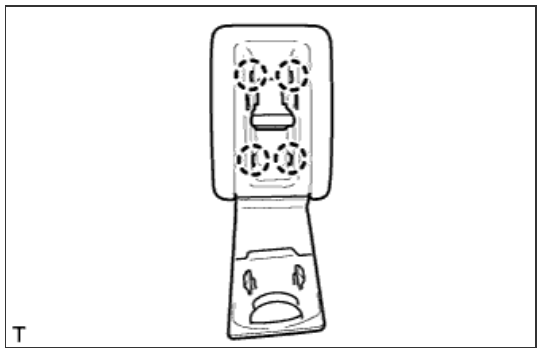


8. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.

b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seat cushion.


c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seat cushion.

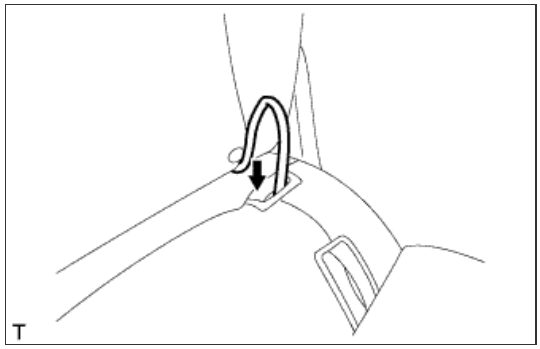

ii. Connect the 2 seat heater connectors.


d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

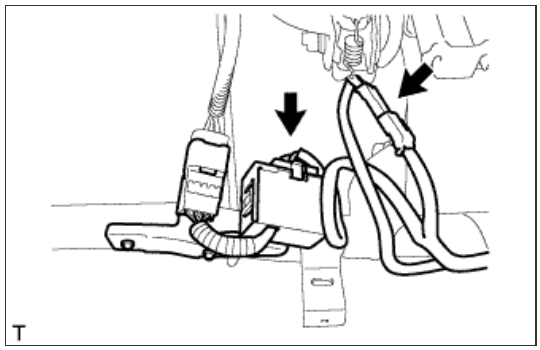

9. INSTALL REAR SEAT UNDER TRAY COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

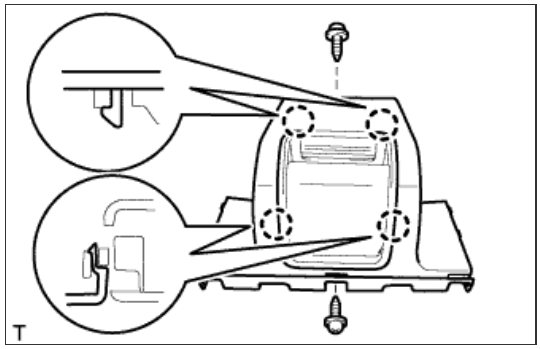

10. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and clip to install the cover.


b. Install the 5 screws.

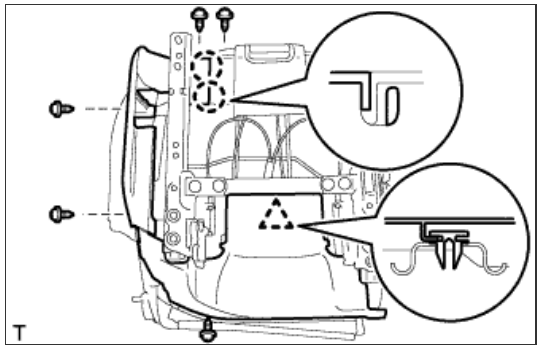


11. INSTALL REAR SEAT COVER

a. Attach the 2 claws to install the cover.

b. Install the 3 screws.

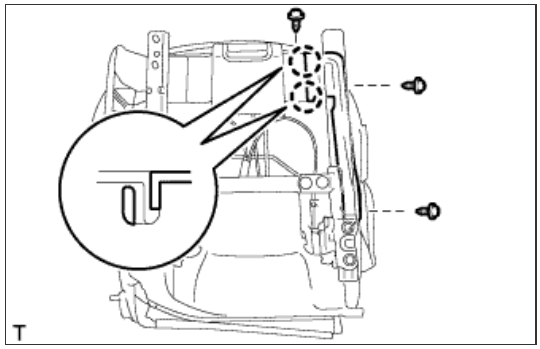


c. Attach the 12 claws.

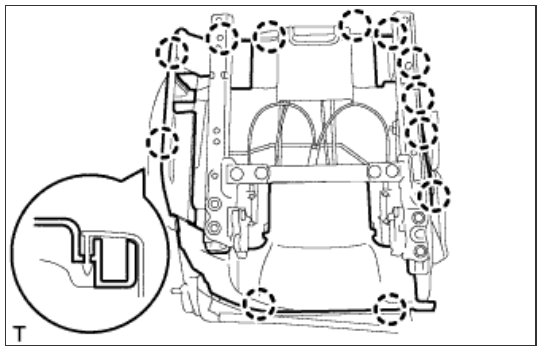

12. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Attach the cable clamp to connect the cable.

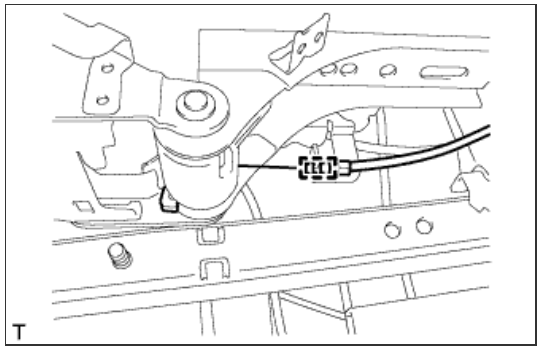


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.


d. w/ Seat Heater System:
Attach the wire harness clamp.

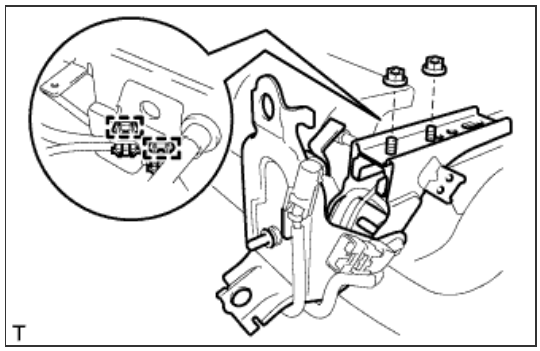

13. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

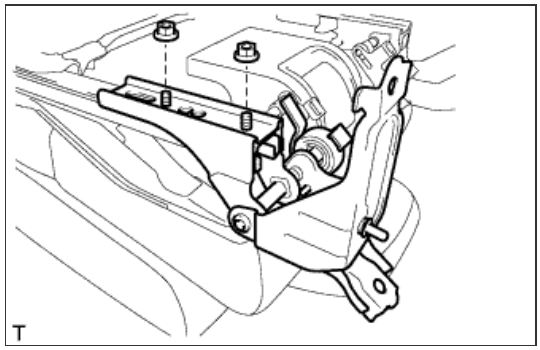


14. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach the 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

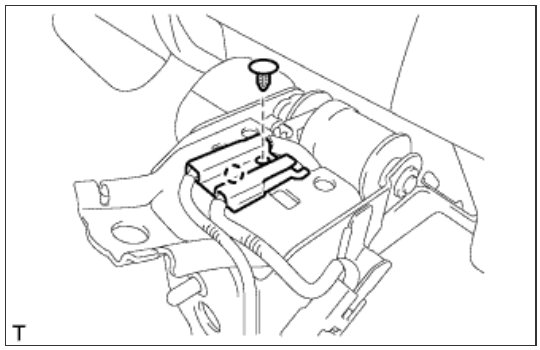


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

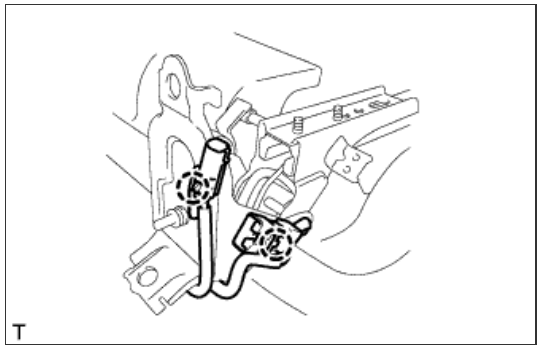


15. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

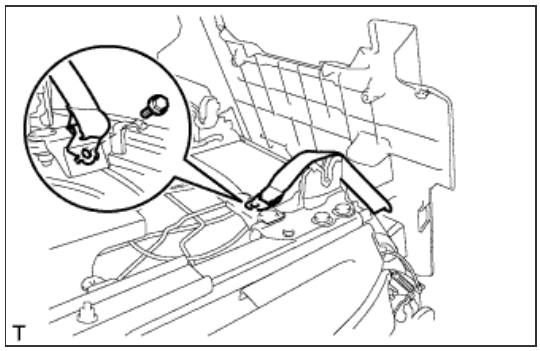


b. Attach the 3 claws to install the seat leg side cover.

c. Install the 4 screws.

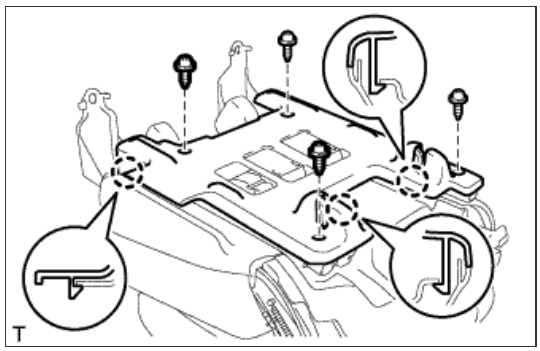


16. INSTALL UPPER SEAT TRACK RAIL COVER RH

a. Attach the 2 claws to install the cover.

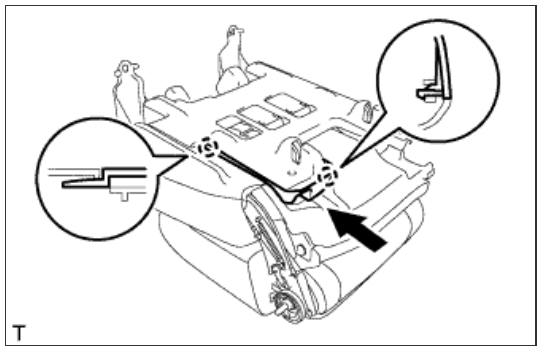

17. INSTALL UPPER SEAT TRACK RAIL COVER LH


a. Attach the 2 claws to install the cover.

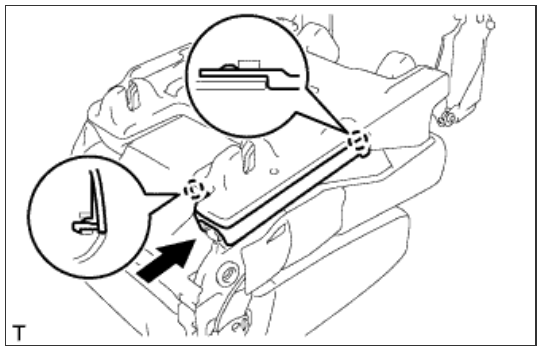

18. INSTALL REAR NO. 1 SEAT RECLINING COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

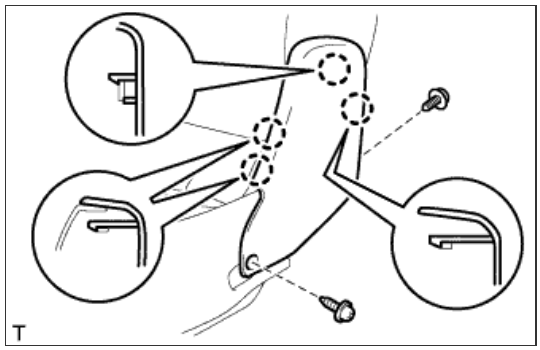

19. INSTALL REAR NO. 1 SEAT RECLINING COVER RH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

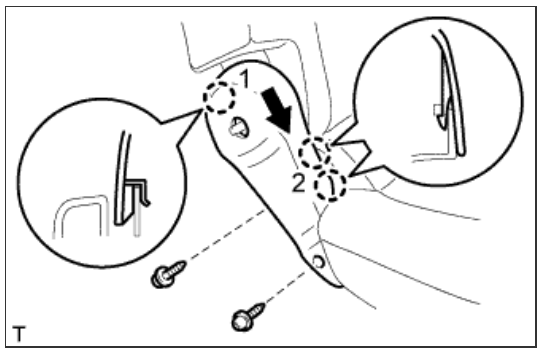


20. INSTALL RECLINING ADJUSTER RELEASE HANDLE RH

a. Install the release handle with the screw.

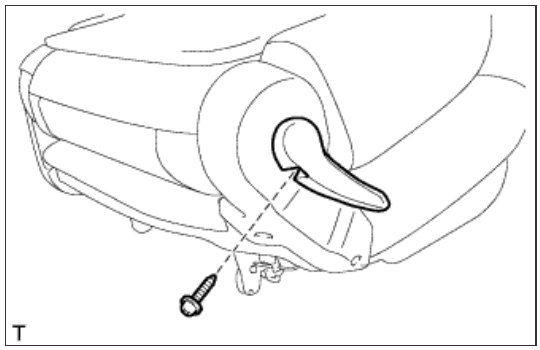

21. INSTALL SEAT ADJUSTER BOLT COVER


a. Attach the 2 claws to install the cover.

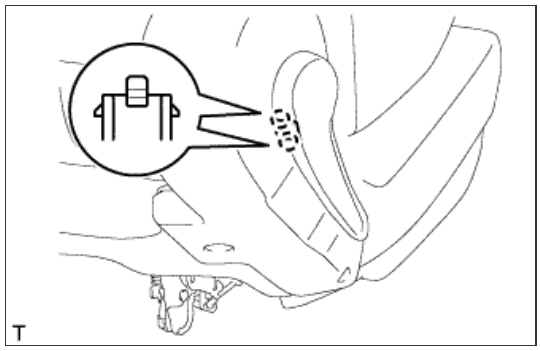


22. INSTALL REAR NO. 1 SEAT ASSEMBLY RH


a. Install the rear No. 1 seat assembly (Click here).


for Preparation Click here

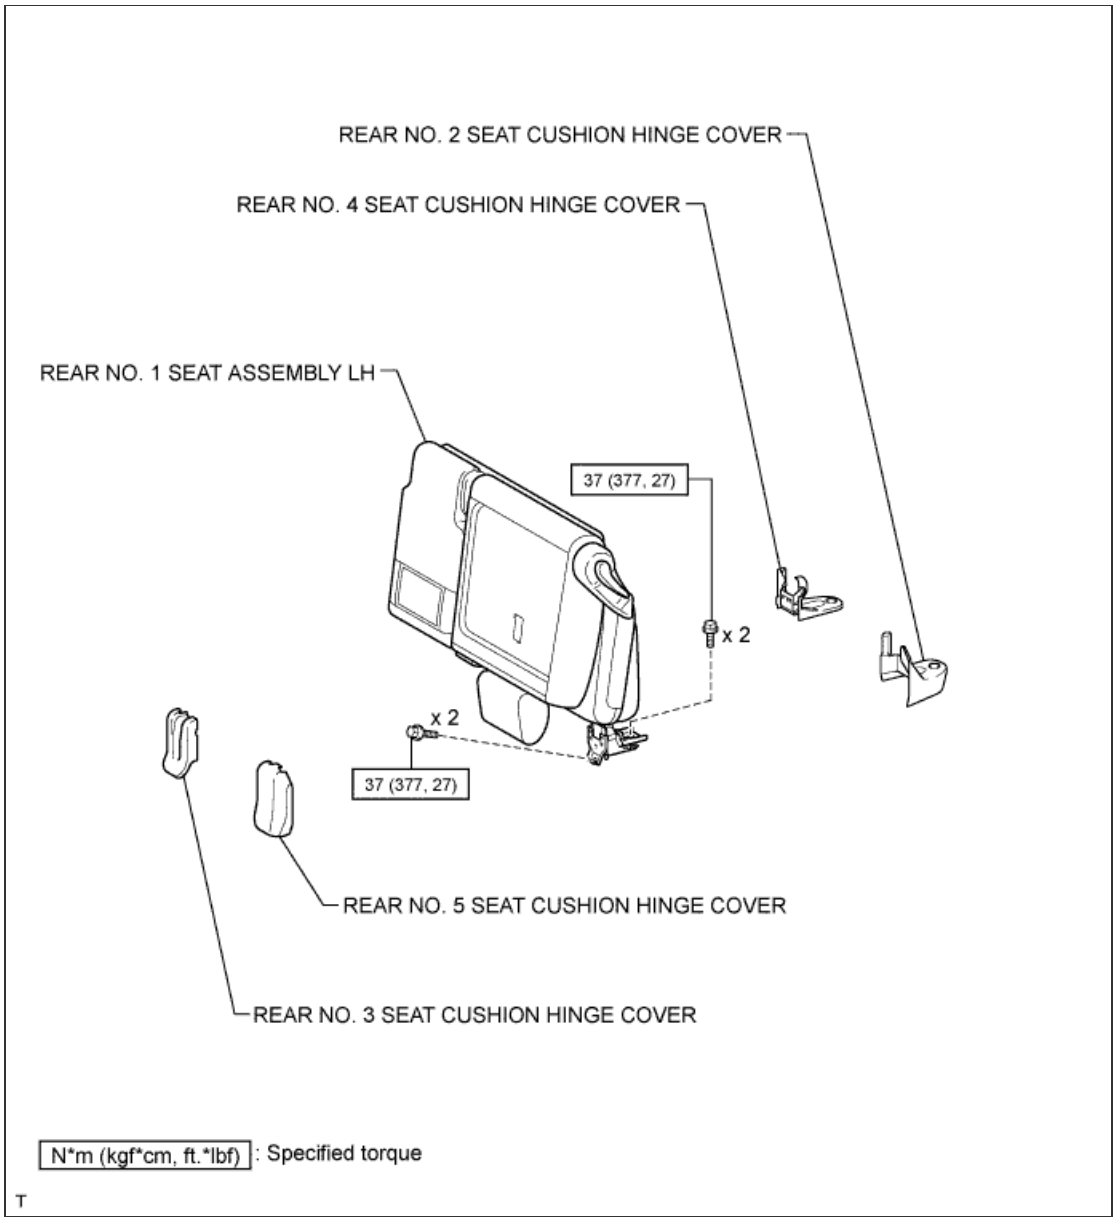

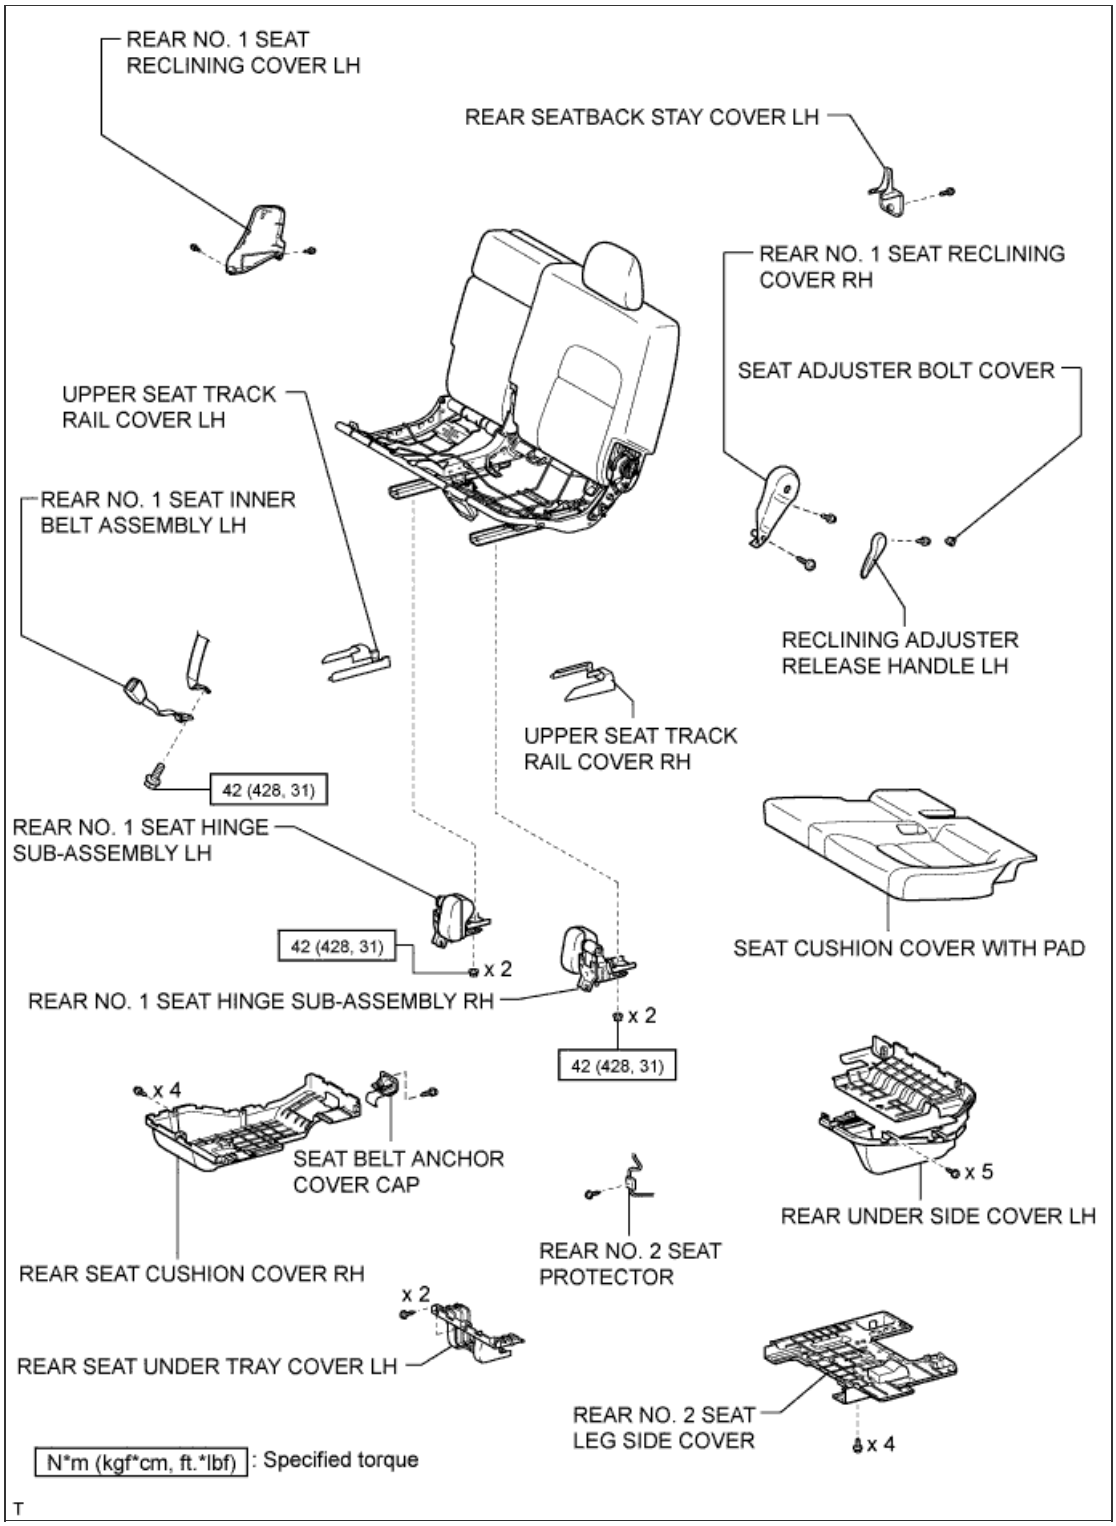

REAR NO. 1 SEAT RECLINING COVER LH
REAR SEATBACK STAY COVER LH
REAR NO. 1 SEAT RECLINING COVER RH
SEAT ADJUSTER BOLT COVER
UPPER SEAT TRACK RAIL COVER LH
REAR NO. 1 SEAT INNER BELT ASSEMBLY LH
RECLINING ADJUSTER RELEASE HANDLE LH
UPPER SEAT TRACK RAIL COVER RH
42 (428, 31)
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH
SEAT CUSHION COVER WITH PAD
42 (428, 31)
x 2
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH
x 2
42 (428, 31)
x 4
SEAT BELT ANCHOR COVER CAP
x 5
REAR UNDER SIDE COVER LH
REAR NO. 2 SEAT PROTECTOR
REAR SEAT CUSHION COVER RH
x 2
REAR SEAT UNDER TRAY COVER LH
REAR NO. 2 SEAT LEG SIDE COVER
x 4
N*m (kgf*cm, ft.*lbf) : Specified torque
T

w/ Center Armrest:

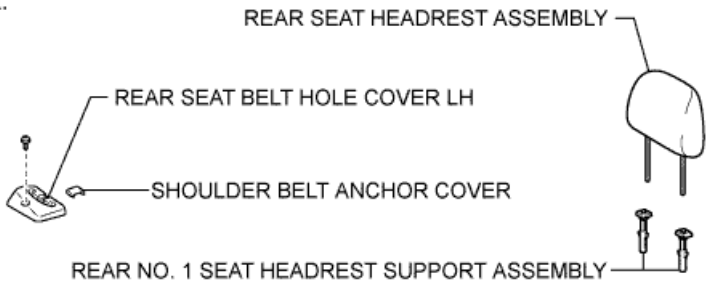

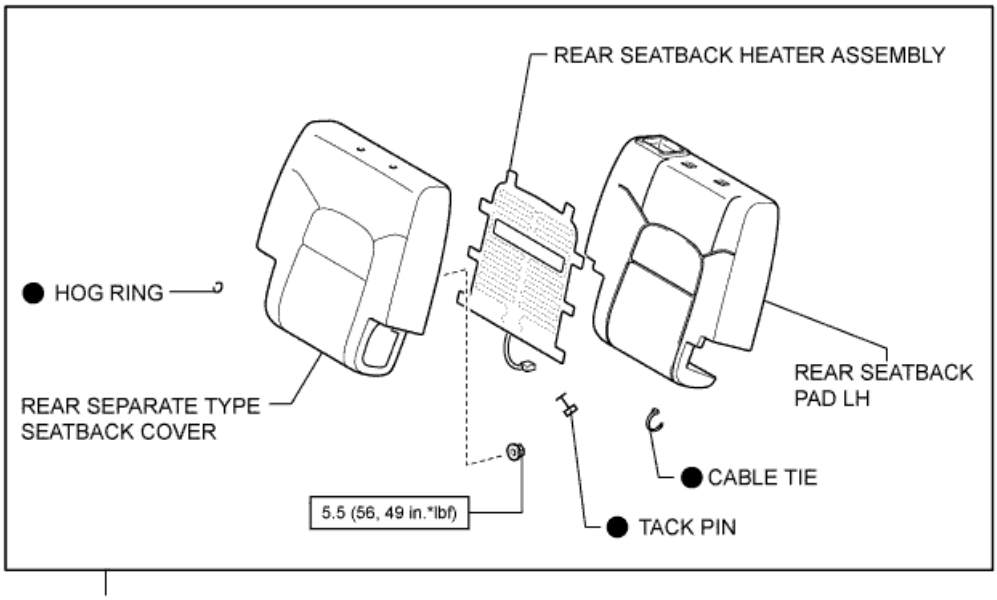

SEATBACK COVER WITH PAD

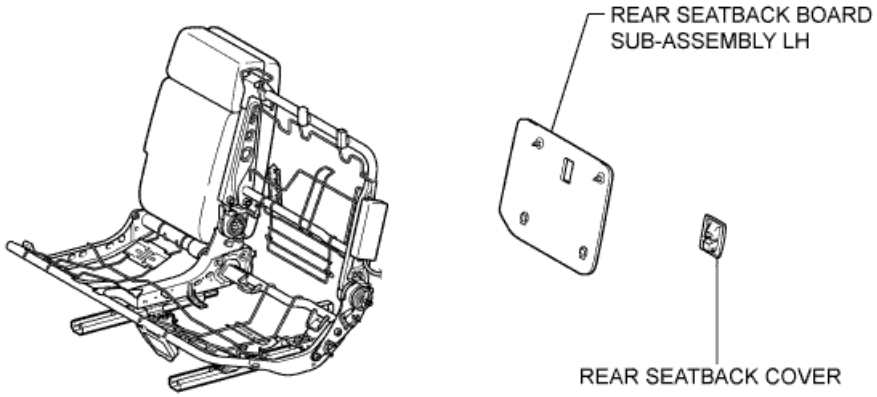

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part

T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY LH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

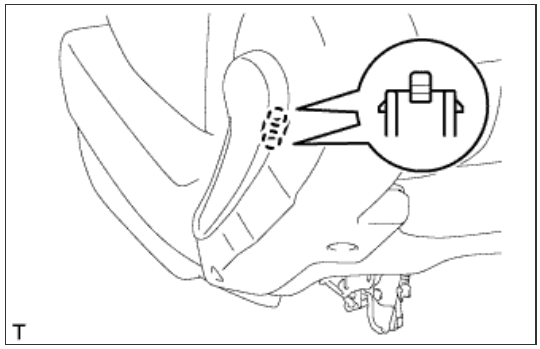

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

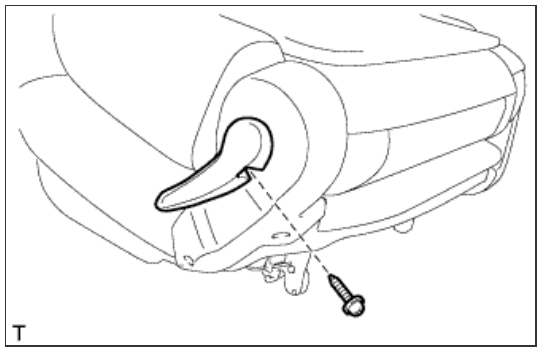

4. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration and then remove the cover.

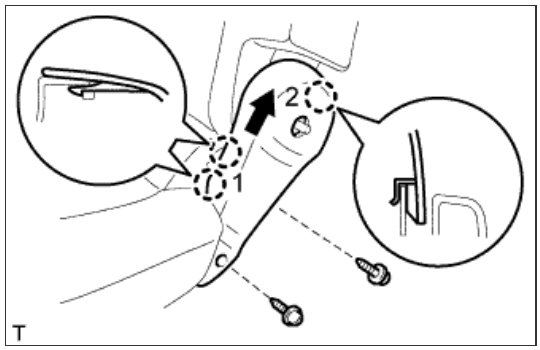

5. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

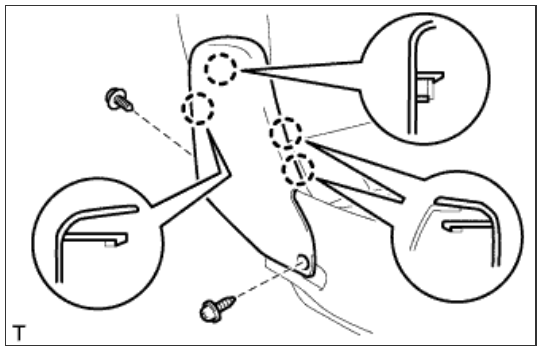


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

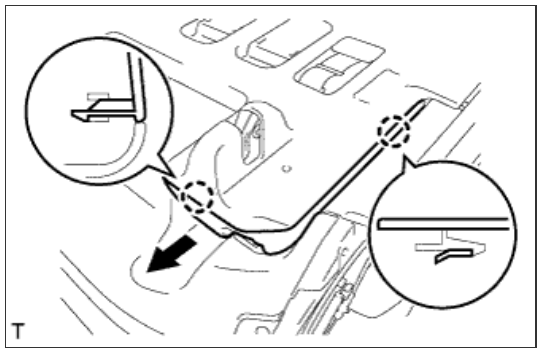


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

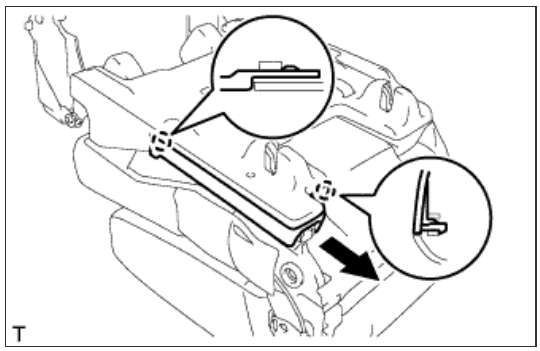


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 4 claws.

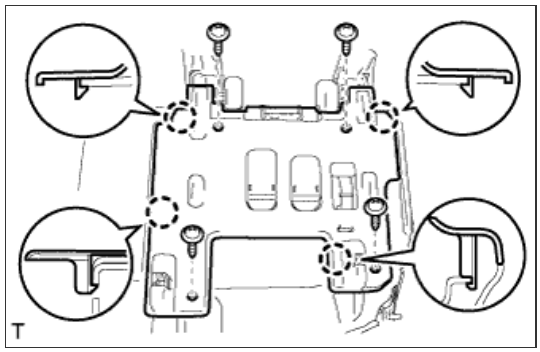


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

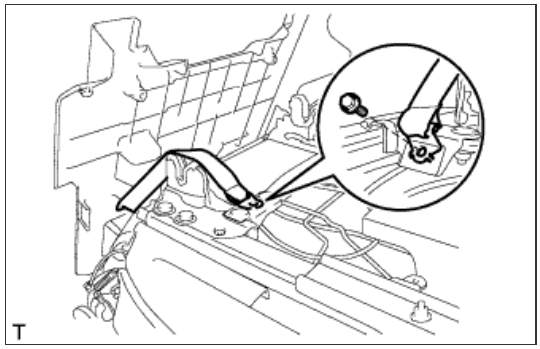

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

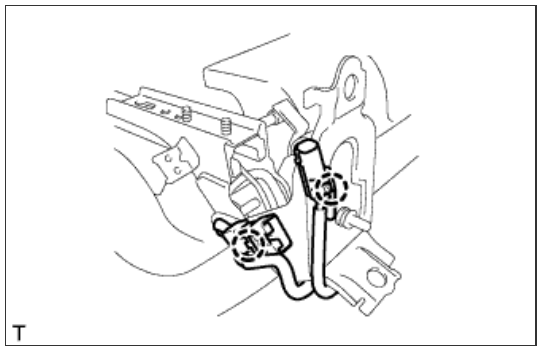

c. Using a clip remover remove the clip.

d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws open the protector and remove wire harness.

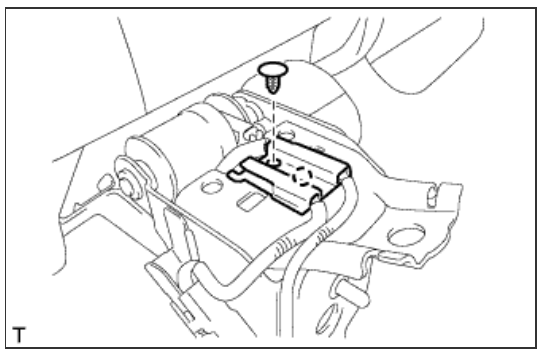


10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

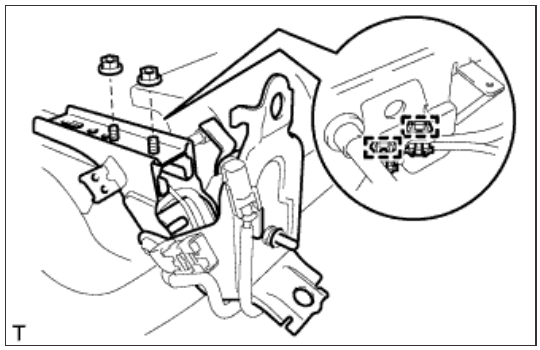


d. Detach the cable clamp and disconnect the cable.

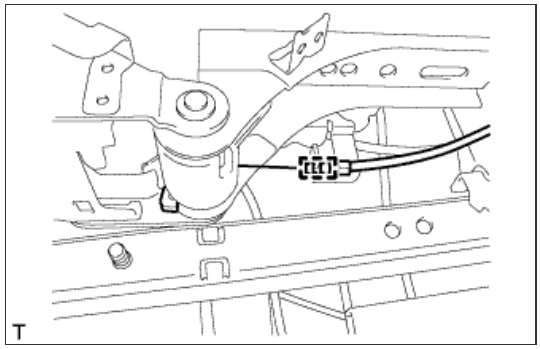


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Remove the 2 nuts and hinge.

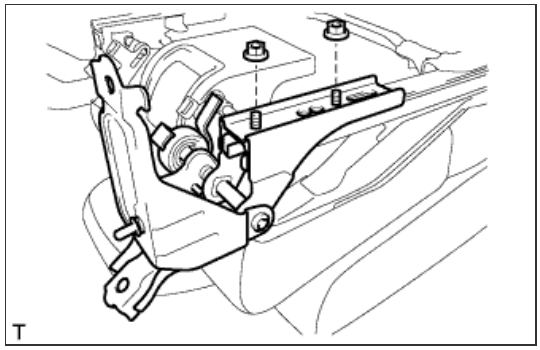


12. REMOVE SEAT BELT ANCHOR COVER CAP

a. Detach the claw and open the cap.

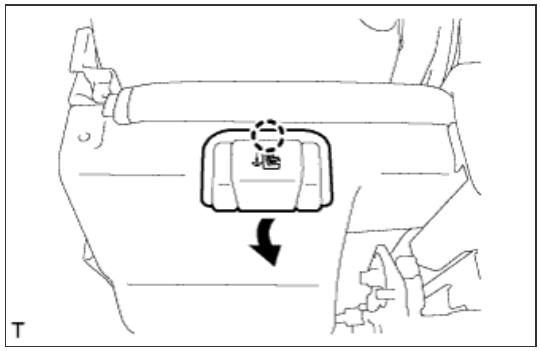


b. Remove the screw and anchor cover cap.

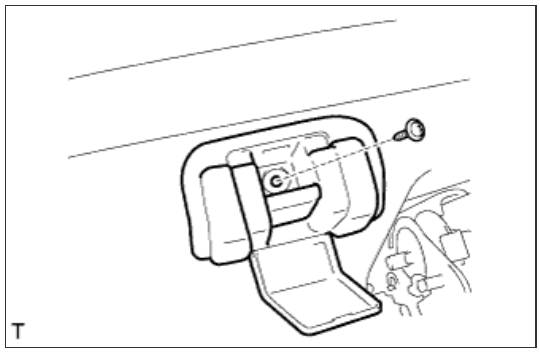

13. REMOVE REAR SEATBACK STAY COVER LH


a. Remove the screw.

b. Detach the 2 claws and remove the cover.

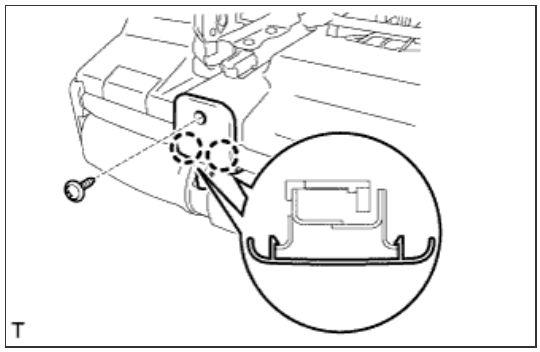


14. REMOVE REAR UNDER SIDE COVER LH

a. Detach the 10 claws.

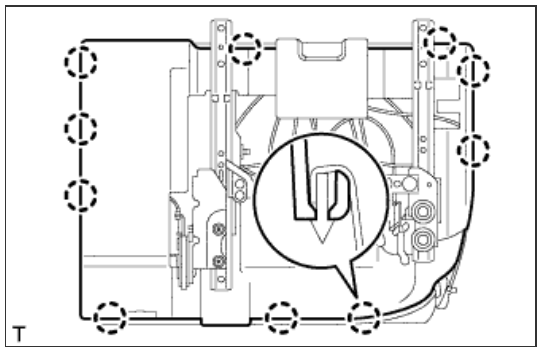

b. Remove the 5 screws.


c. Detach the 2 clips and 2 claws and remove the cover.

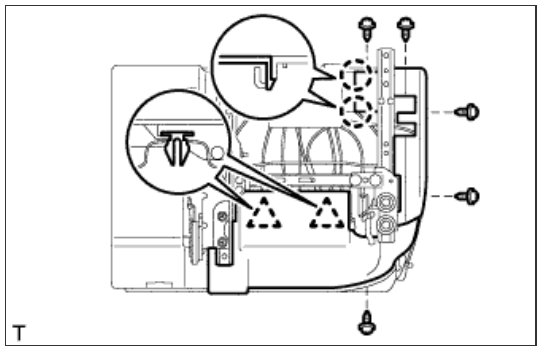

15. REMOVE REAR SEAT CUSHION COVER RH

a. Remove the 4 screws.


b. Detach the 2 claws and remove the cover.

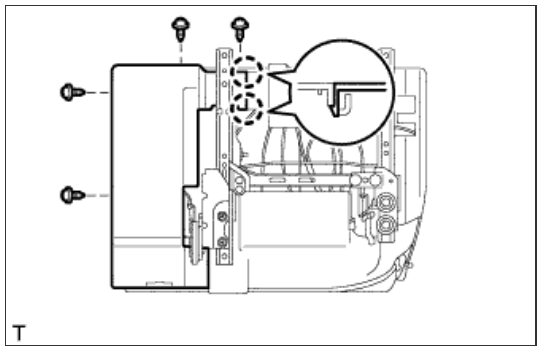

16. REMOVE REAR SEAT UNDER TRAY COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

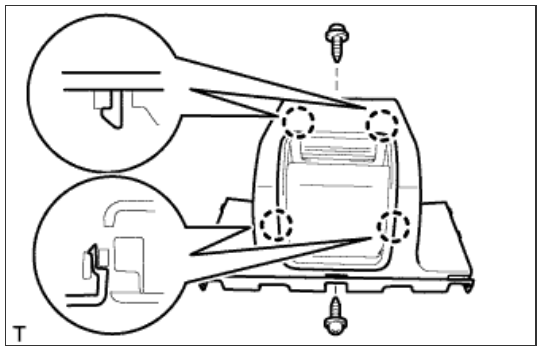


17. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Remove the bolt and belt.


HINT:

The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore it becomes disconnected when the bolt is removed.

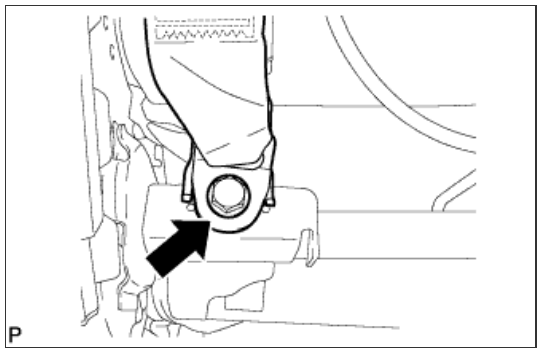

18. DISCONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Disconnect the belt anchor.

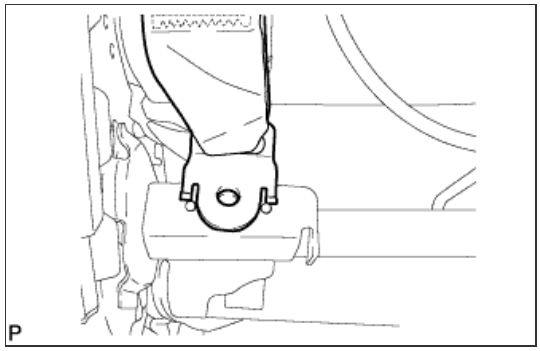

19. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.


ii. Remove the side airbag wire harness through the hole in the seat cushion.

b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

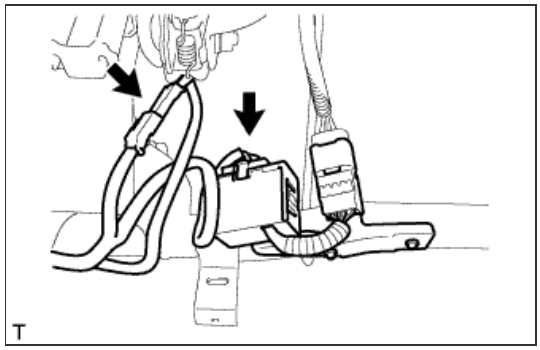

ii. Remove the seatback heater wire harness through the hole in the seat cushion.

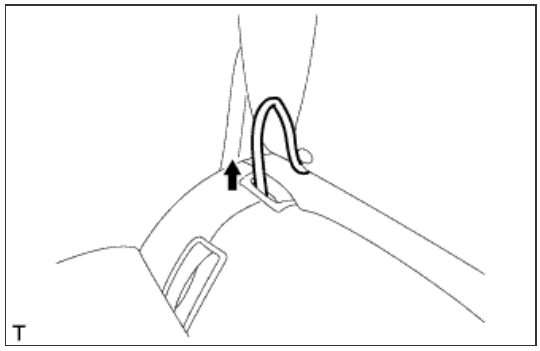


c. Remove the seat cushion cover with pad.

20. REMOVE REAR SEATBACK COVER

a. Using a screwdriver detach the 4 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

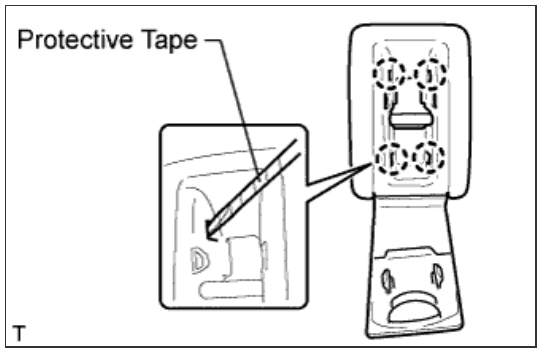


21. REMOVE REAR SEATBACK BOARD SUB-ASSEMBLY LH

a. w/ Center Armrest:

i. Detach the 2 claws on the top of the board.


ii. Pull up the board to detach the 2 claws on the bottom of the board and remove it.

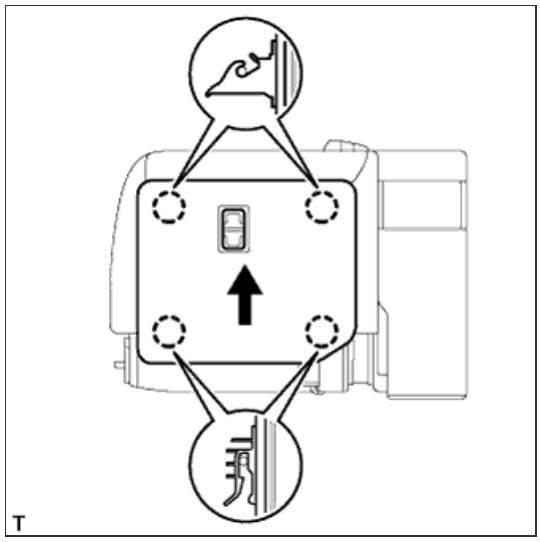

b. w/o Center Armrest:

i. Detach the 3 claws on the top of the board.


ii. Pull up the board to detach the 3 claws on the bottom of the board and remove it.

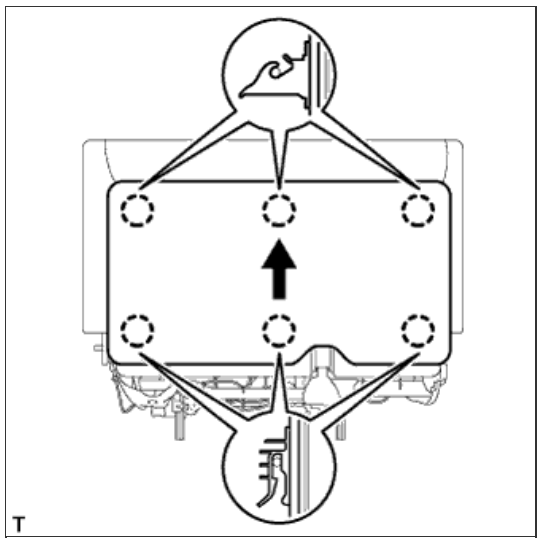


22. REMOVE REAR SEAT HEADREST ASSEMBLY

23. REMOVE REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ Center Armrest:
Detach the 4 claws and remove the 2 supports.

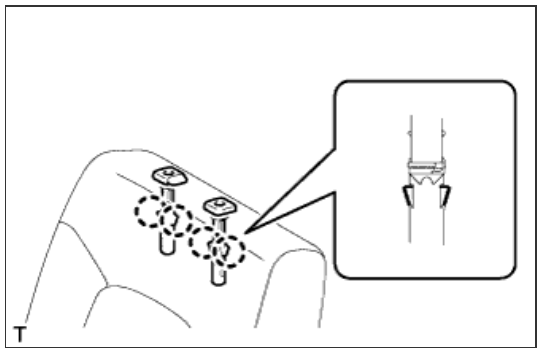

b. w/o Center Armrest:
Detach the 8 claws and remove the 4 supports.

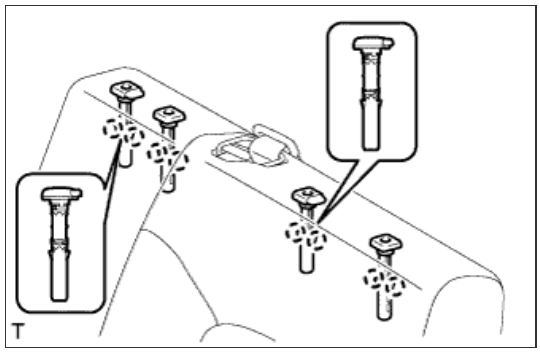


24. REMOVE SHOULDER BELT ANCHOR COVER

a. Using a screwdriver detach the 2 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

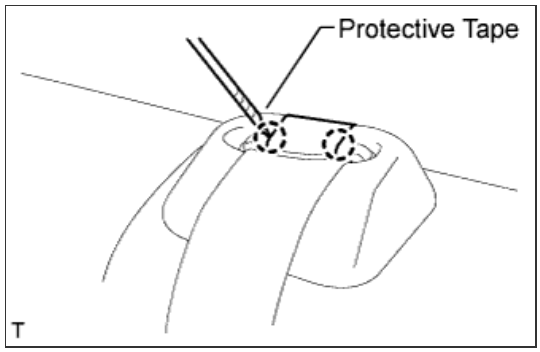

25. REMOVE REAR SEAT BELT HOLE COVER LH


a. Remove the screw.

b. Detach the 4 claws and remove the cover.

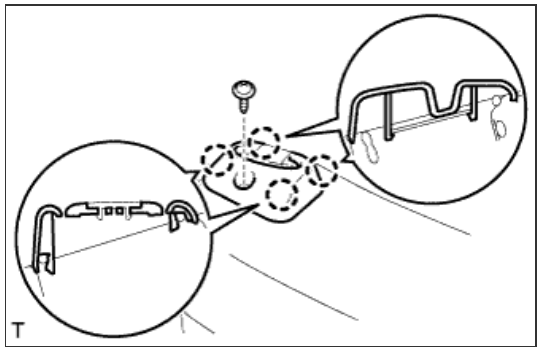

26. REMOVE SEATBACK COVER WITH PAD


a. w/ Center Armrest:
Remove the hog rings.

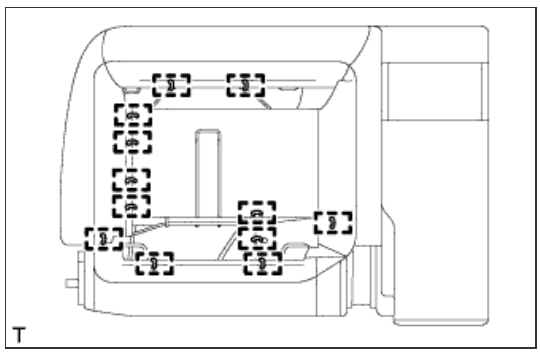

b. w/o Center Armrest:

i. Remove the hog rings.


ii. Detach the hook.

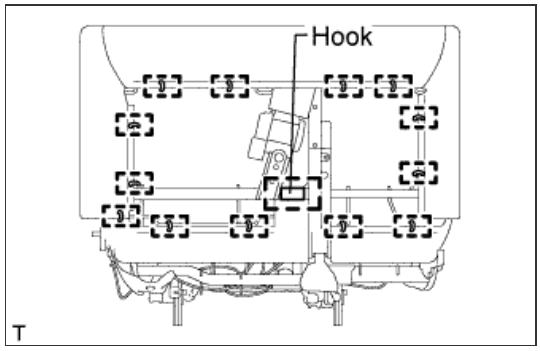

c. w/ Rear Seat Side Airbag:


i. Remove the cap nut and seatback cover bracket from the seat frame.

ii. Remove the side airbag wire harness through the hole in the seatback.

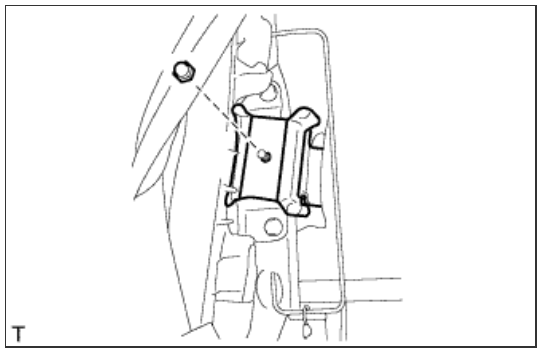


d. w/ Seat Heater System:


i. Cut the cable tie and disconnect the seatback heater wire harness.

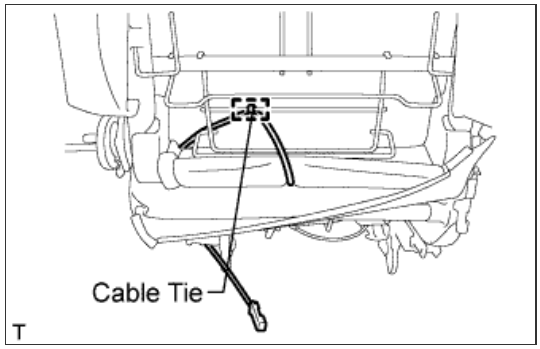

ii. Remove the seatback heater wire harness through the hole in the seatback.

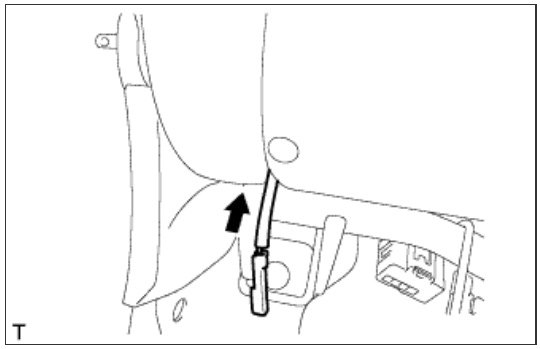


e. w/ Center Armrest:
Pull the seat belt into the inside of the seat.

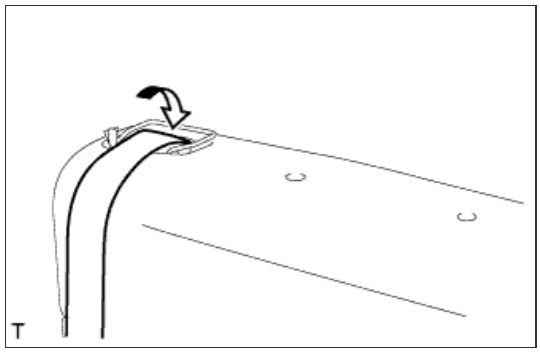


f. w/o Center Armrest:
Pull the seat belt into the inside of the seat.

g. Remove the seatback cover with pad.

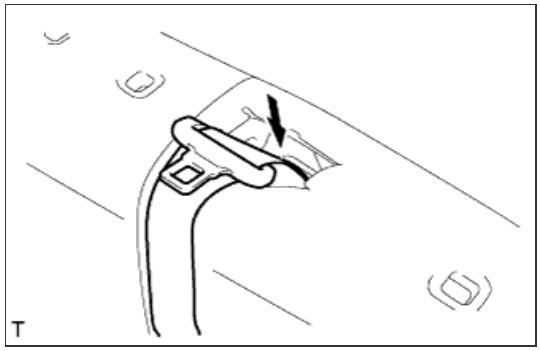


27. REMOVE REAR SEPARATE TYPE SEATBACK COVER


a. w/ Rear Seat Side Airbag:
Disconnect the seatback cover bracket from the seatback pad.

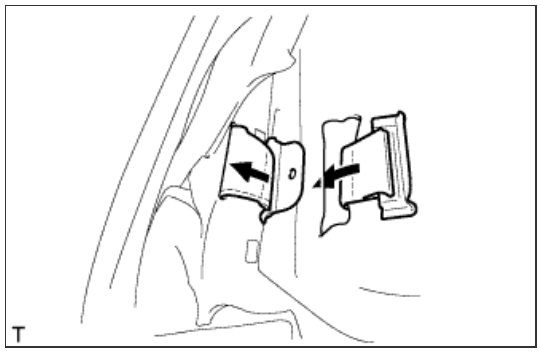

b. w/ Center Armrest:
Remove the hog rings and rear seatback cover.

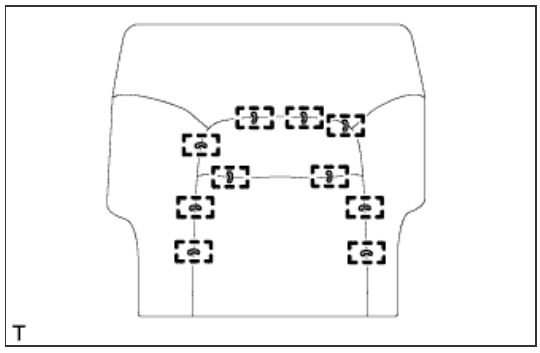


c. w/o Center Armrest:
Remove the hog rings and rear seatback cover.

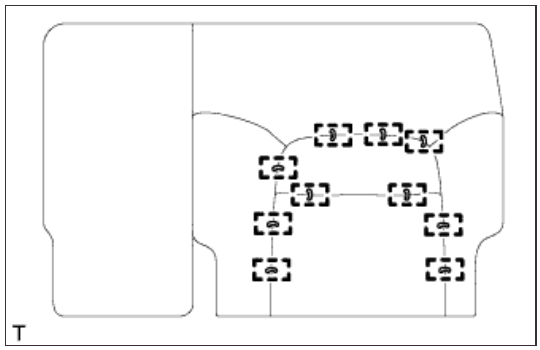

28. REMOVE REAR SEATBACK HEATER ASSEMBLY

a. Cut off the tack pins which fasten the seatback heater to the seatback cover and then remove the seatback heater from the seatback cover.

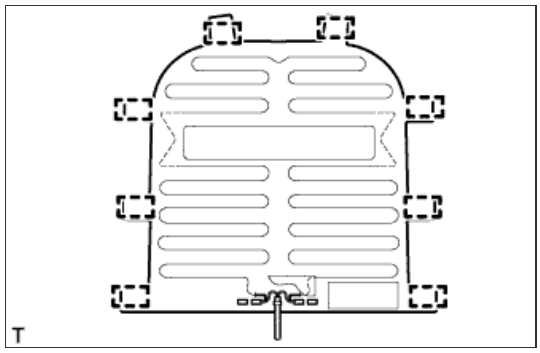

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY LH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

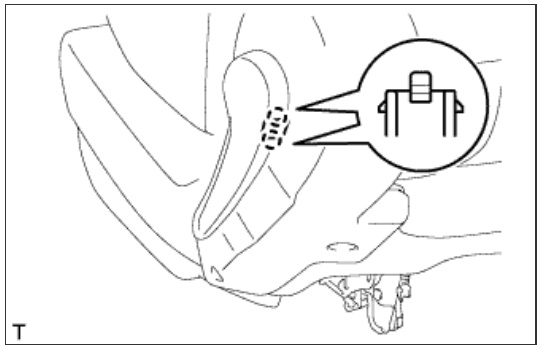

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

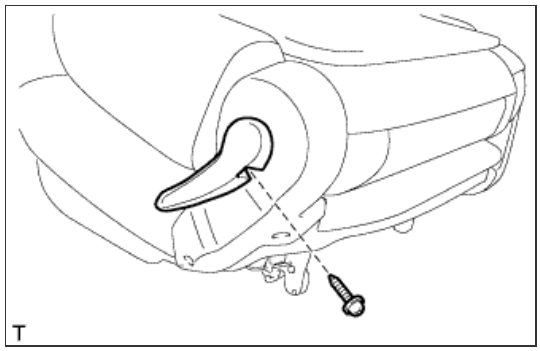

4. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration and then remove the cover.

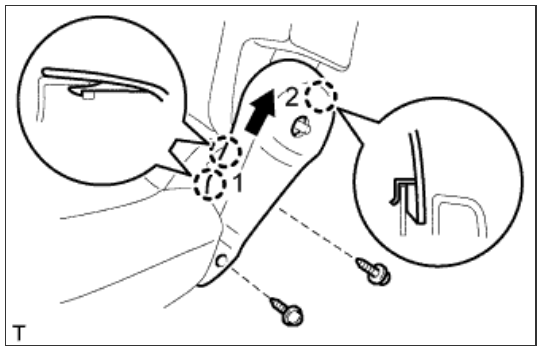

5. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

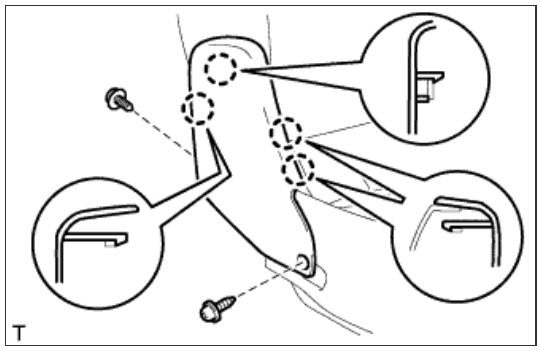


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

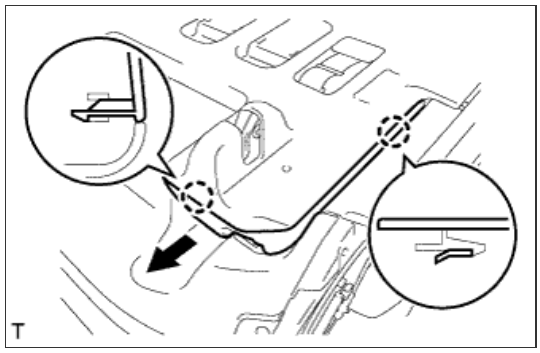


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

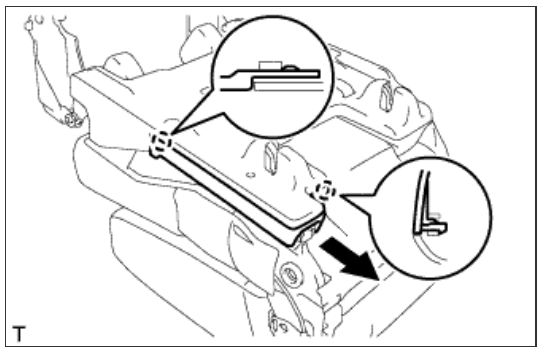


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 4 claws.

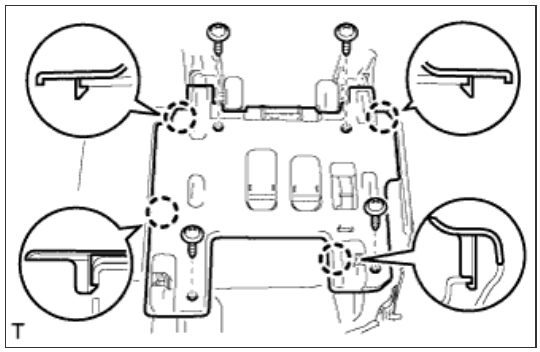


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

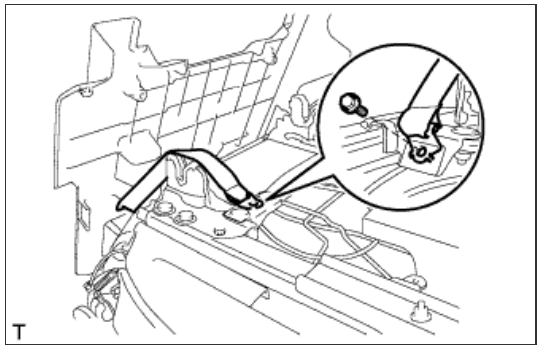

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

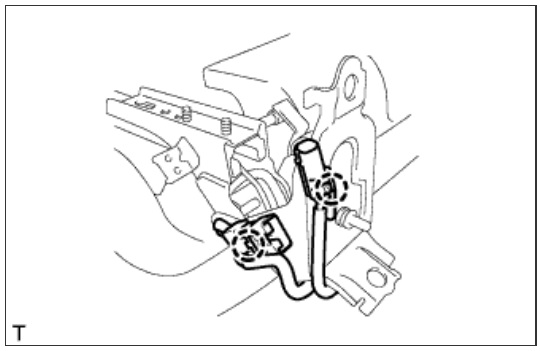

c. Using a clip remover remove the clip.

d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws open the protector and remove wire harness.

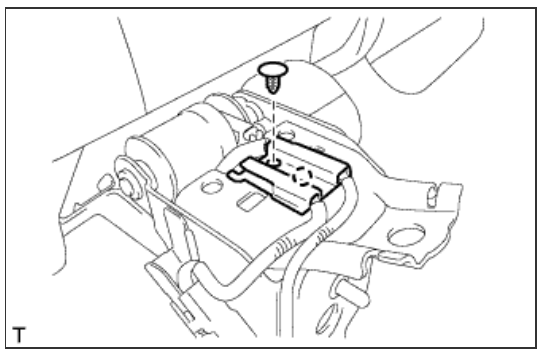


10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

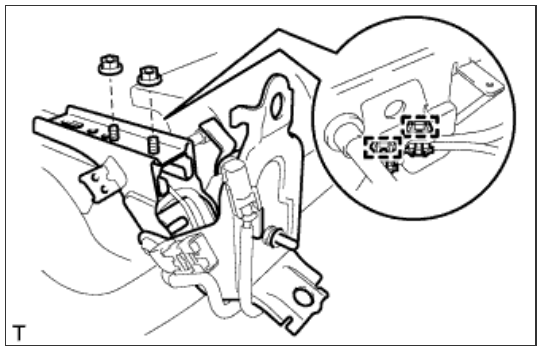


d. Detach the cable clamp and disconnect the cable.

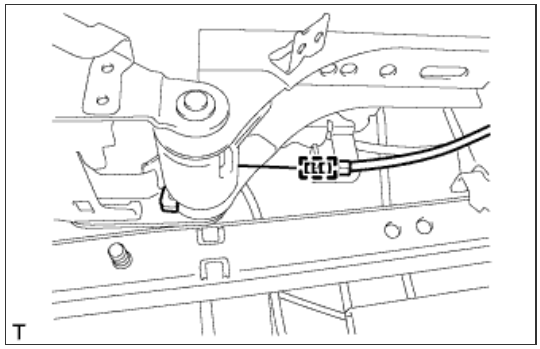


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Remove the 2 nuts and hinge.

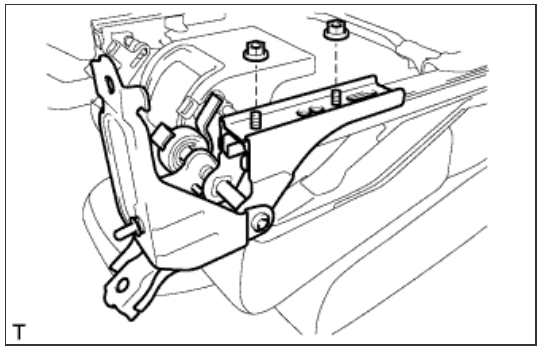


12. REMOVE SEAT BELT ANCHOR COVER CAP

a. Detach the claw and open the cap.

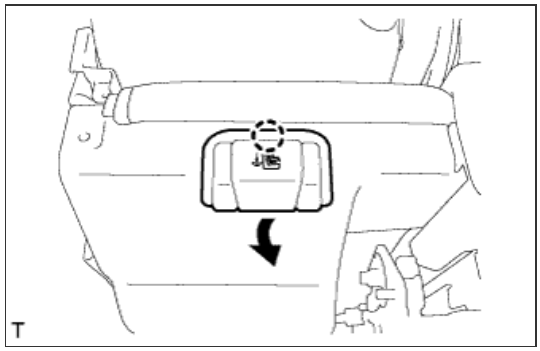


b. Remove the screw and anchor cover cap.

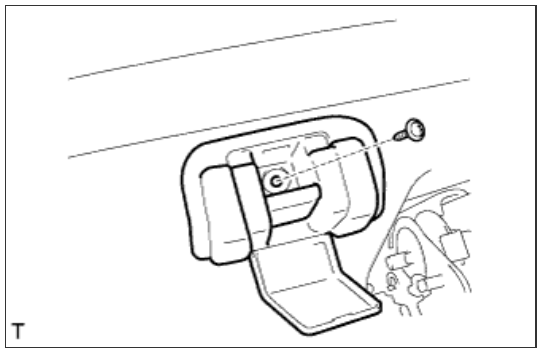

13. REMOVE REAR SEATBACK STAY COVER LH


a. Remove the screw.

b. Detach the 2 claws and remove the cover.

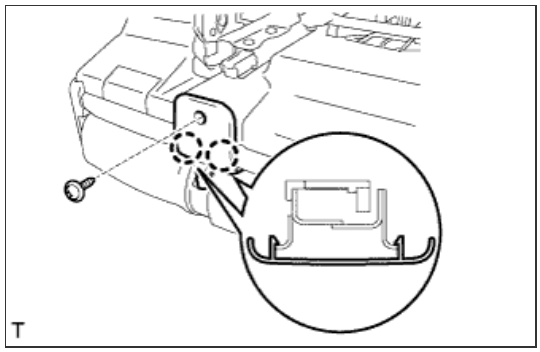


14. REMOVE REAR UNDER SIDE COVER LH

a. Detach the 10 claws.

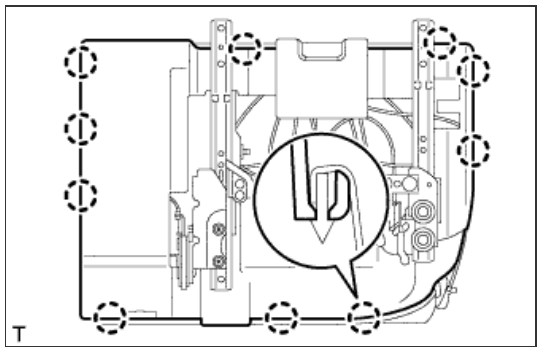

b. Remove the 5 screws.


c. Detach the 2 clips and 2 claws and remove the cover.

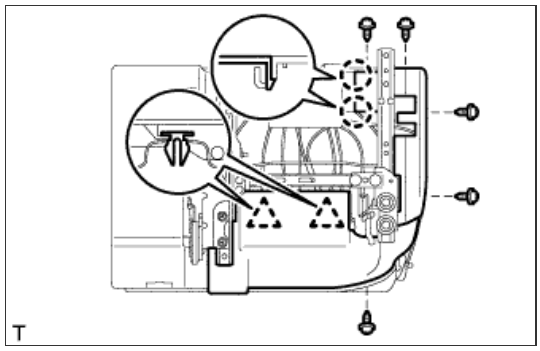

15. REMOVE REAR SEAT CUSHION COVER RH

a. Remove the 4 screws.


b. Detach the 2 claws and remove the cover.

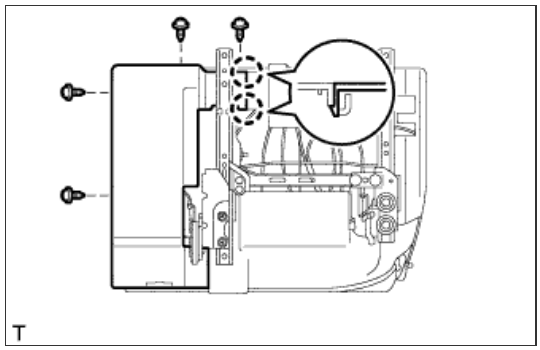

16. REMOVE REAR SEAT UNDER TRAY COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

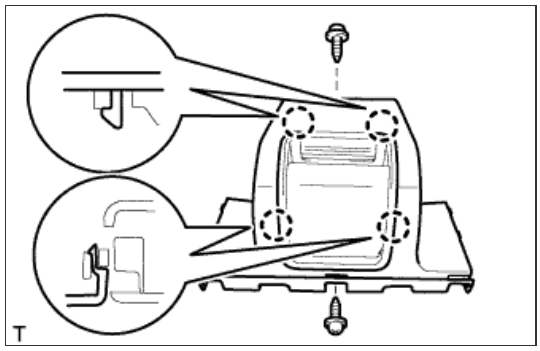


17. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Remove the bolt and belt.


HINT:

The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore it becomes disconnected when the bolt is removed.

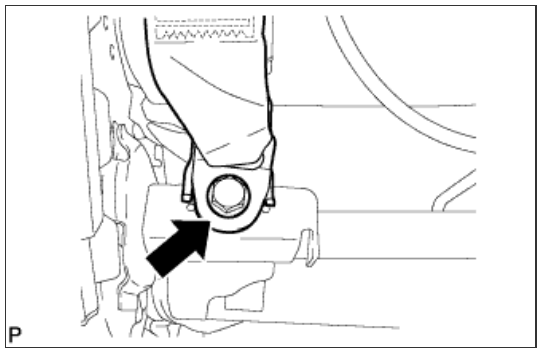

18. DISCONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Disconnect the belt anchor.

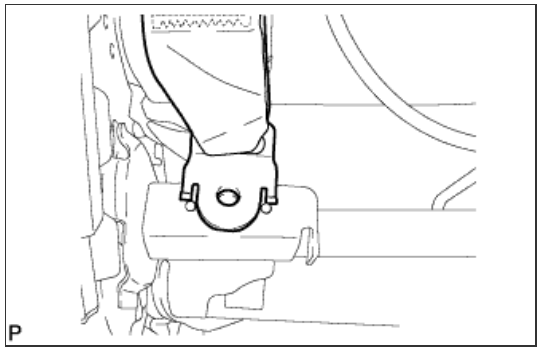

19. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.


ii. Remove the side airbag wire harness through the hole in the seat cushion.

b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

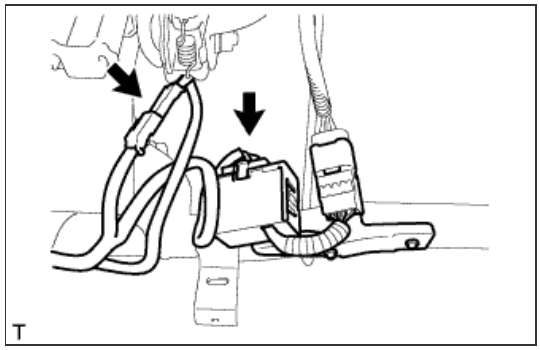

ii. Remove the seatback heater wire harness through the hole in the seat cushion.

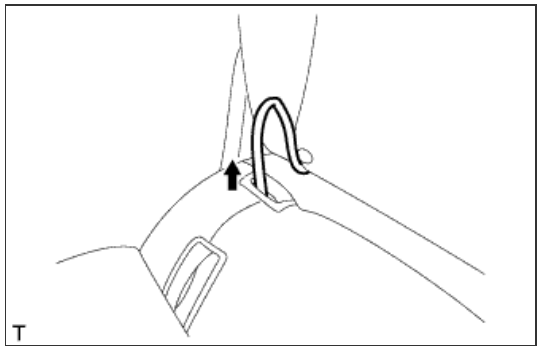


c. Remove the seat cushion cover with pad.

20. REMOVE REAR SEATBACK COVER

a. Using a screwdriver detach the 4 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

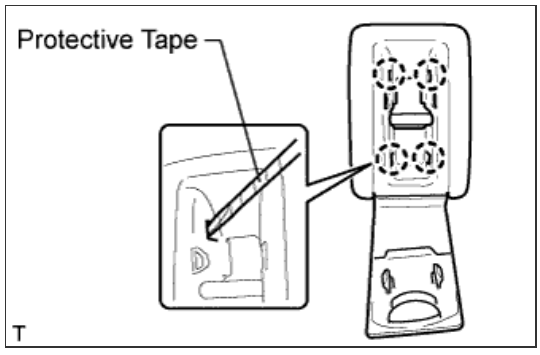


21. REMOVE REAR SEATBACK BOARD SUB-ASSEMBLY LH

a. w/ Center Armrest:

i. Detach the 2 claws on the top of the board.


ii. Pull up the board to detach the 2 claws on the bottom of the board and remove it.

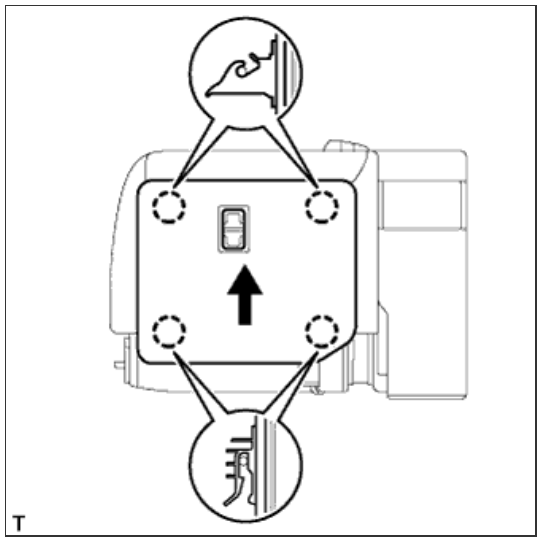

b. w/o Center Armrest:

i. Detach the 3 claws on the top of the board.


ii. Pull up the board to detach the 3 claws on the bottom of the board and remove it.

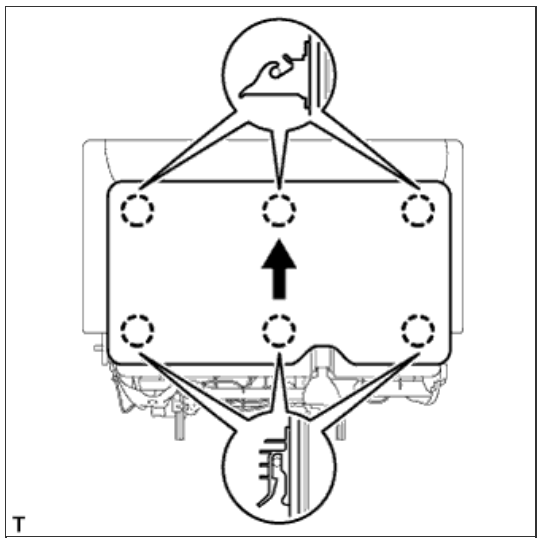


22. REMOVE REAR SEAT HEADREST ASSEMBLY

23. REMOVE REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ Center Armrest:
Detach the 4 claws and remove the 2 supports.

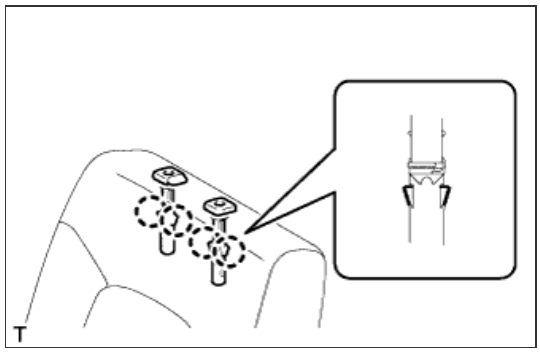

b. w/o Center Armrest:
Detach the 8 claws and remove the 4 supports.

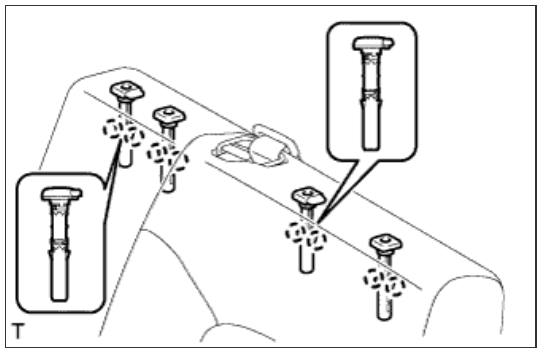


24. REMOVE SHOULDER BELT ANCHOR COVER

a. Using a screwdriver detach the 2 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

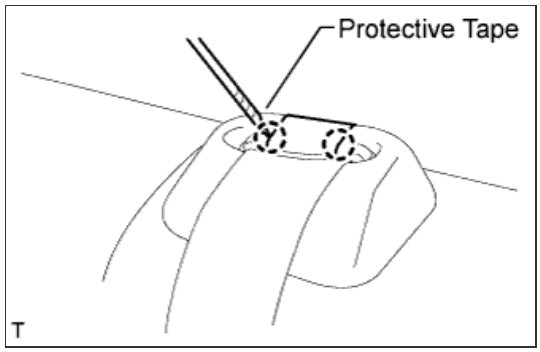

25. REMOVE REAR SEAT BELT HOLE COVER LH


a. Remove the screw.

b. Detach the 4 claws and remove the cover.

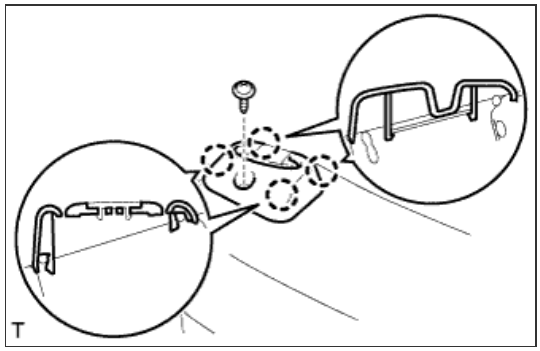


26. REMOVE SEATBACK COVER WITH PAD

a. w/ Center Armrest:
Remove the hog rings.

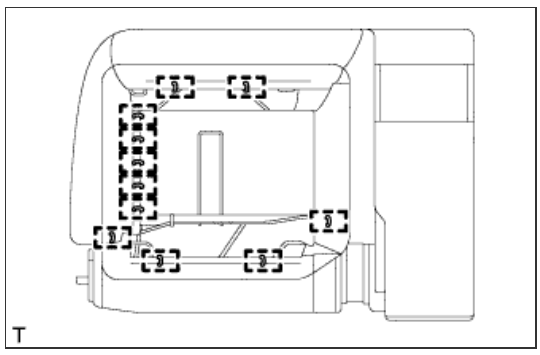


b. w/o Center Armrest:
Remove the hog rings.

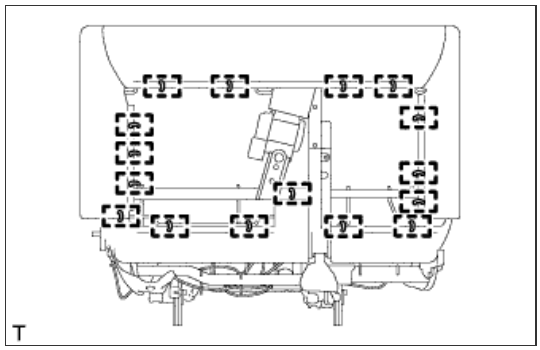

c. w/ Rear Seat Side Airbag:


i. Remove the cap nut and seatback cover bracket from the seat frame.

ii. Remove the side airbag wire harness through the hole in the seatback.

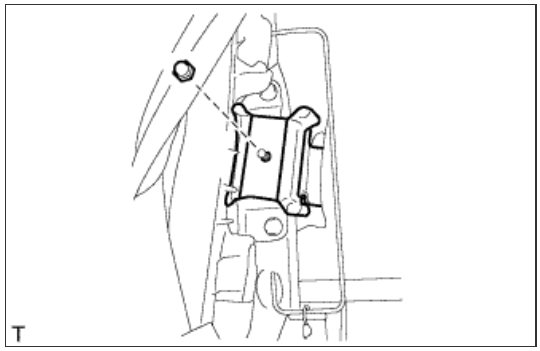


d. w/ Seat Heater System:


i. Cut the cable tie and disconnect the seatback heater wire harness.

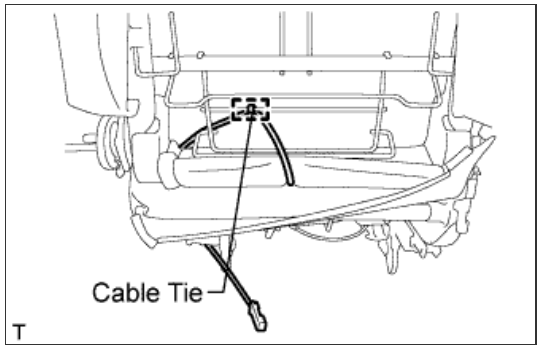

ii. Remove the seatback heater wire harness through the hole in the seatback.

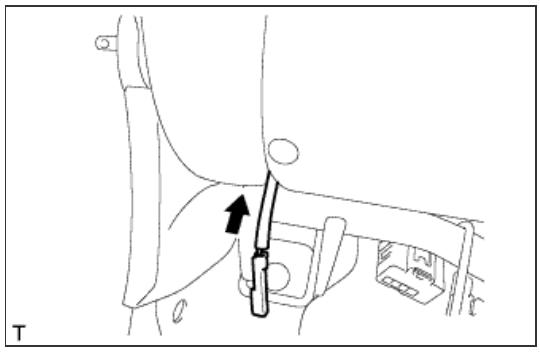


e. w/ Center Armrest:
Pull the seat belt into the inside of the seat.

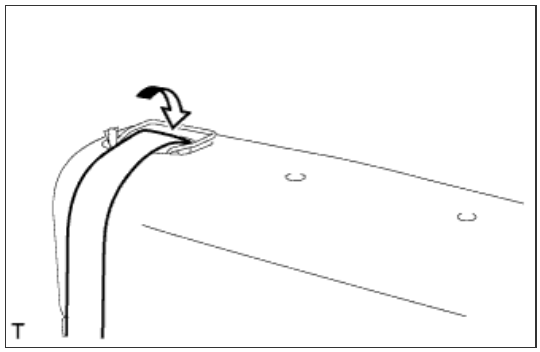


f. w/o Center Armrest:
Pull the seat belt into the inside of the seat.

g. Remove the seatback cover with pad.

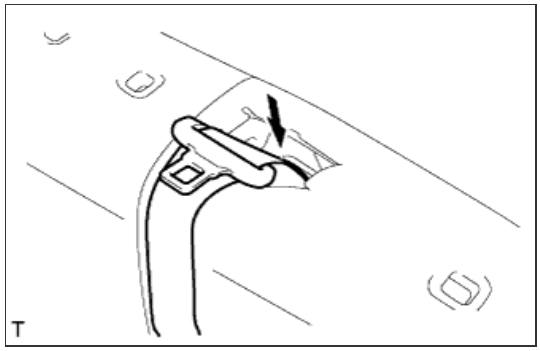


27. REMOVE REAR SEPARATE TYPE SEATBACK COVER


a. w/ Rear Seat Side Airbag:
Disconnect the seatback cover bracket from the seatback pad.

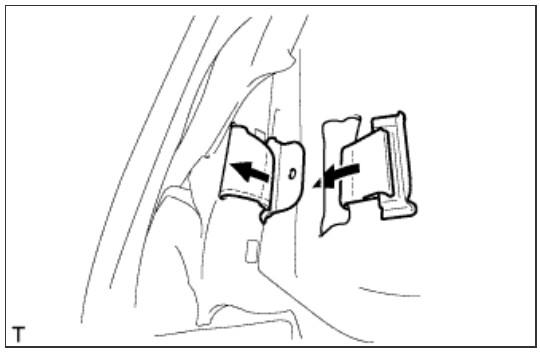

b. w/ Center Armrest:
Remove the hog rings and rear seatback cover.

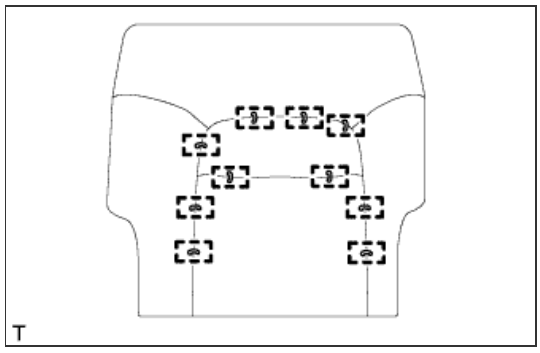


c. w/o Center Armrest:
Remove the hog rings and rear seatback cover.

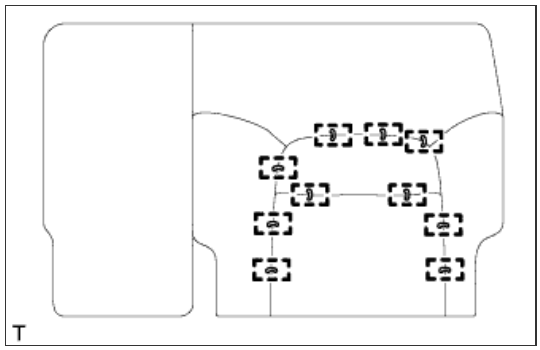

28. REMOVE REAR SEATBACK HEATER ASSEMBLY

a. Cut off the tack pins which fasten the seatback heater to the seatback cover and then remove the seatback heater from the seatback cover.

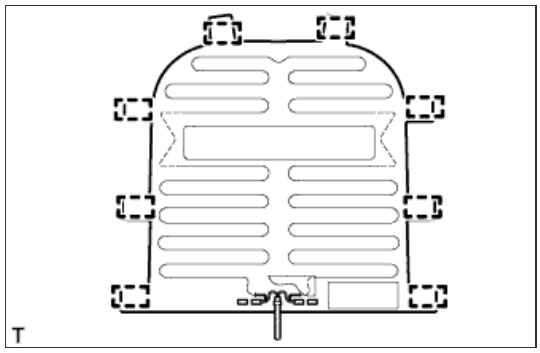

for Preparation Click here

1. INSPECT REAR SEATBACK HEATER ASSE B

a Check the seatback heater.


i Measure the resistance according to the value(s) in the table below.

Standard Re i tance

Tester Connection	Condition	Specified Condition
1 - 2	Seatback heater temperature 25 C ( )	.3 to 8. Ω

the result is not as specified, replace the seatback heater assembly.

Component without harness connected:
(Rear Seatback Heater)

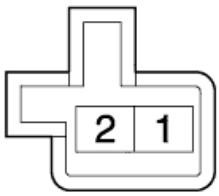

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEATBACK HEATER ASSEMBLY

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

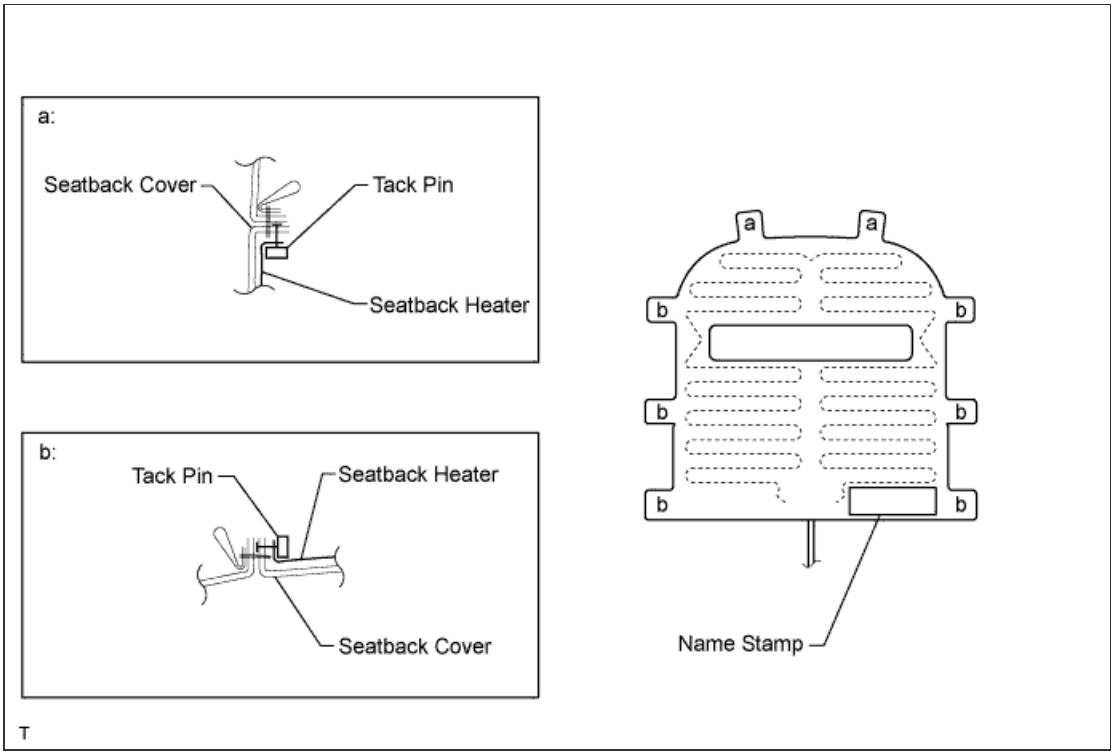


2. INSTALL REAR SEPARATE TYPE SEATBACK COVER

a. w/ Center Armrest:
Using hog ring pliers install the seatback cover with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

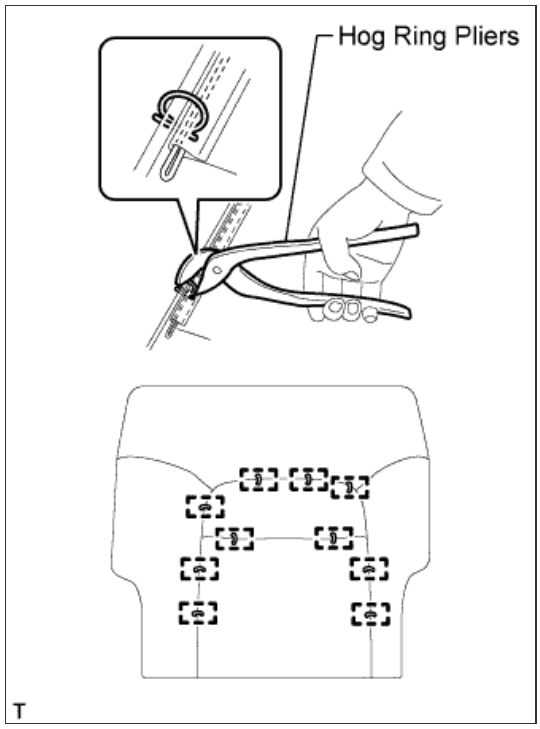


b. w/o Center Armrest:
Using hog ring pliers install the seatback cover with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

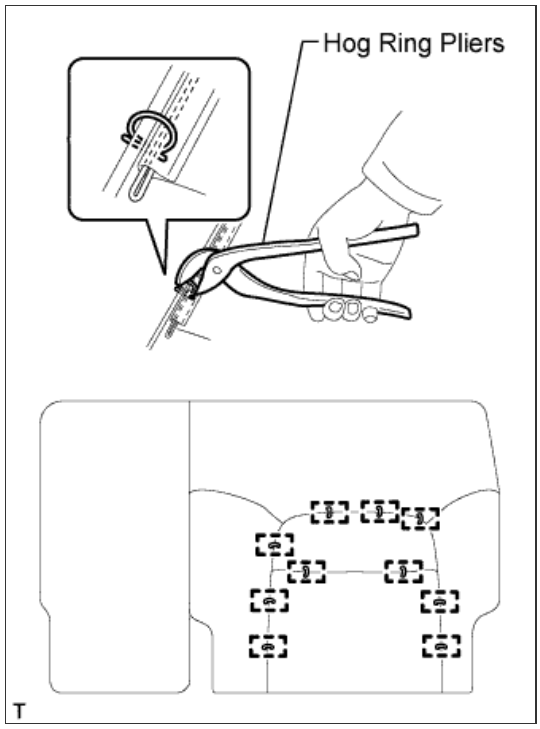


c. w/ Rear Seat Side Airbag:
Connect the seatback cover bracket to the seatback pad.

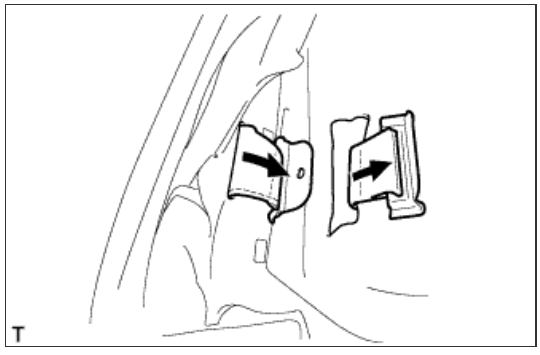

3. INSTALL SEATBACK COVER WITH PAD


a. Install the seatback cover with pad.

b. w/ Center Armrest:
Pull out the seat belt.

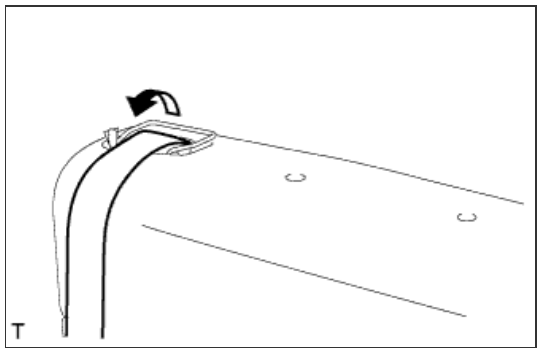


c. w/o Center Armrest:
Pull out the seat belt.

d. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seatback.

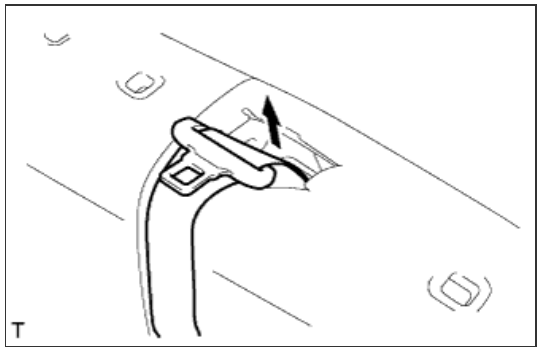


e. w/ Seat Heater System:
Pass the seatback heater wire harness through the hole in the seatback.

i.

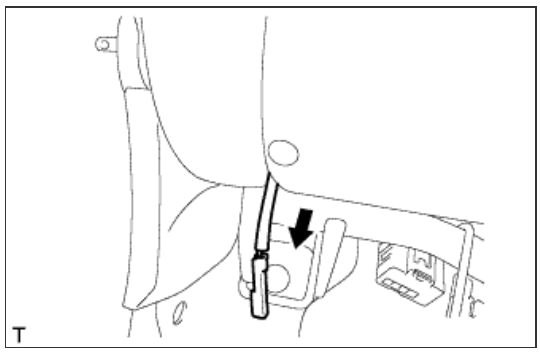

ii. Connect the seatback heater wire harness and install a new cable tie.

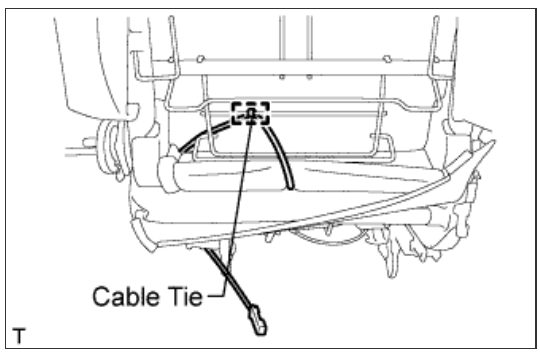


f. w/ Rear Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the cap nut.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

NOTICE:

After the seatback trim cover is assembled make sure the side airbag strap is not twisted.

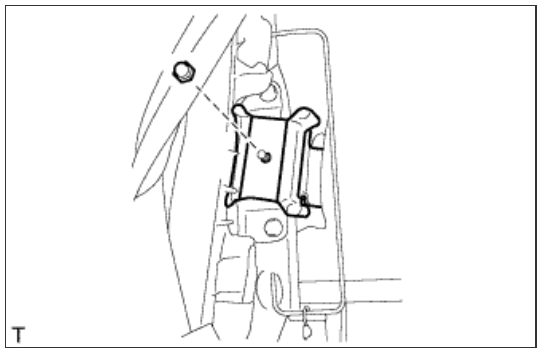


g. w/ Center Armrest:
Using hog ring pliers install new hog rings to the seatback frame.

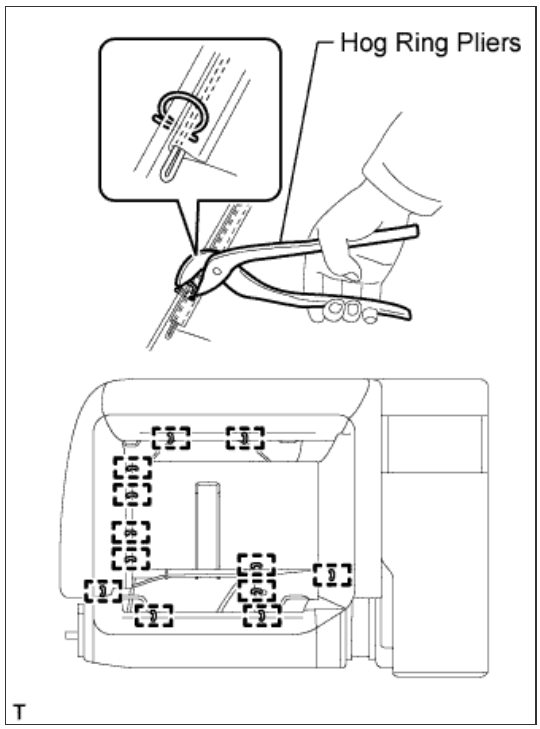

h. w/o Center Armrest:

i. Using hog ring pliers install new hog rings to the seatback frame.


ii. Attach the hook.

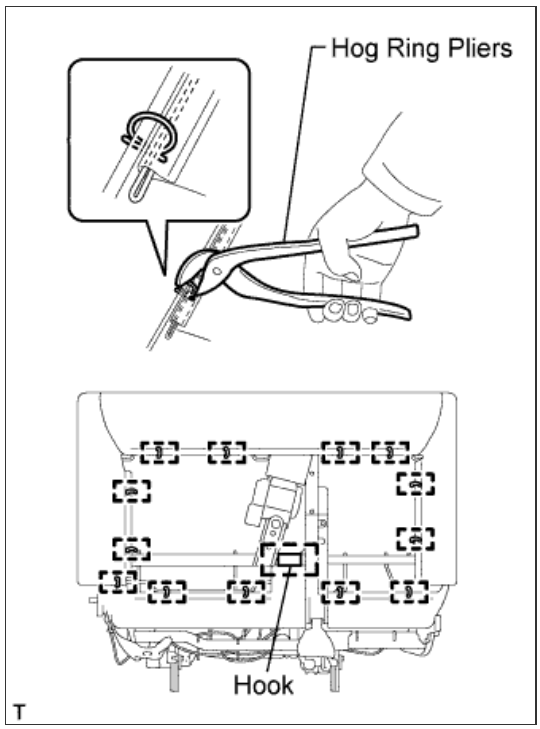

4. INSTALL REAR SEAT BELT HOLE COVER LH


a. Attach the 4 claws to install the cover.

b. Install the screw.

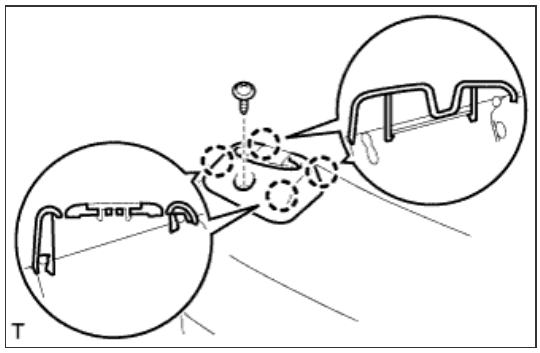


5. INSTALL SHOULDER BELT ANCHOR COVER

a. Attach the 2 claws to install the cover.

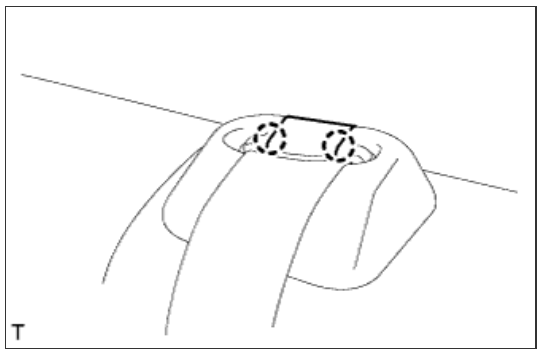


6. INSTALL REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ Center Armrest:
Attach the 4 claws to install the 2 supports.

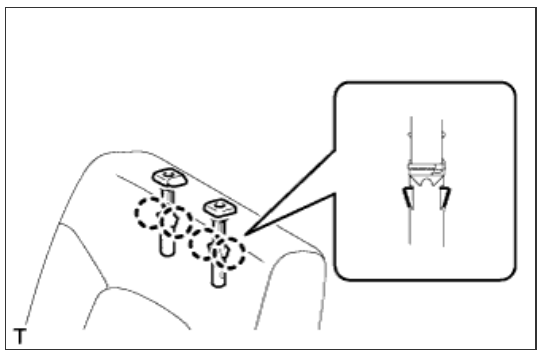

b. w/o Center Armrest:
Attach the claws to install the 4 supports.

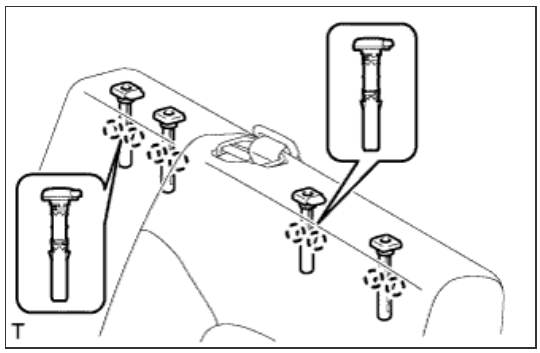


7. INSTALL REAR SEAT HEADREST ASSEMBLY

. INSTALL REAR SEATBACK BOARD SUB ASSEMBLY LH

a. w/ Center Armrest:

i. Push the board down to attach the 2 claws on the bottom.


ii. Attach the 2 claws on the top of the board to install it.

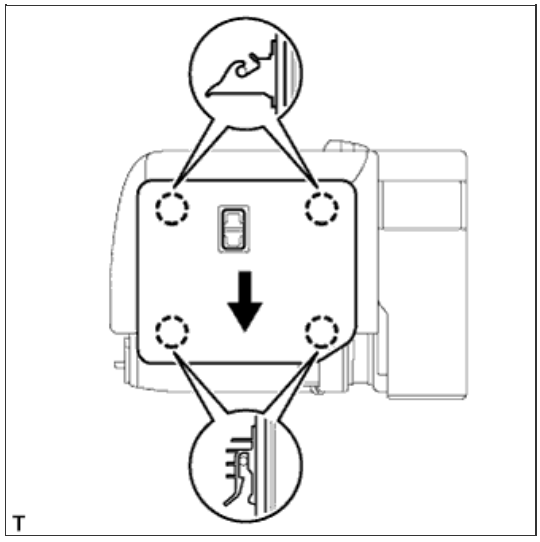

b. w/o Center Armrest:


i. Push the board down to attach the 3 claws on the bottom.

ii. Attach the 3 claws on the top of the board to install it.

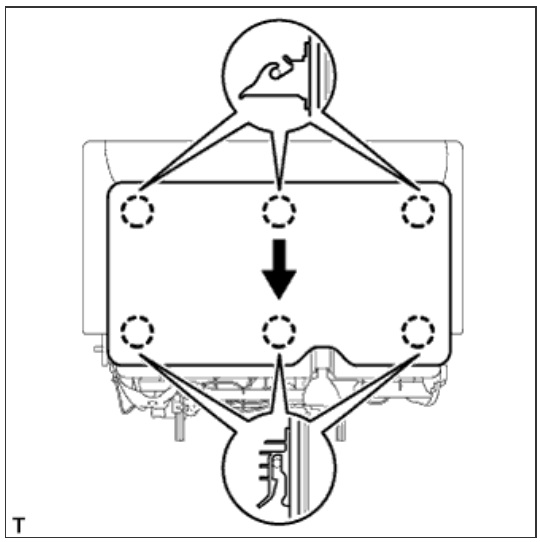

9. INSTALL REAR SEATBACK COVER

a. Attach the 4 claws to install the cover.

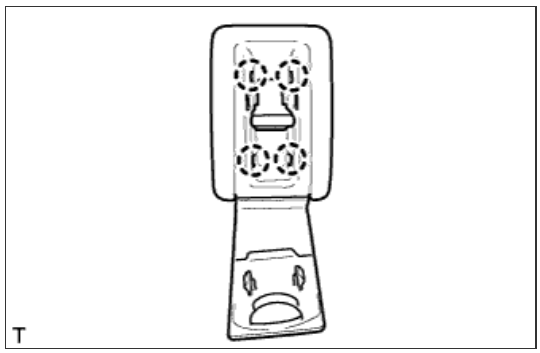


10. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.


b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seat cushion.

c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seat cushion.

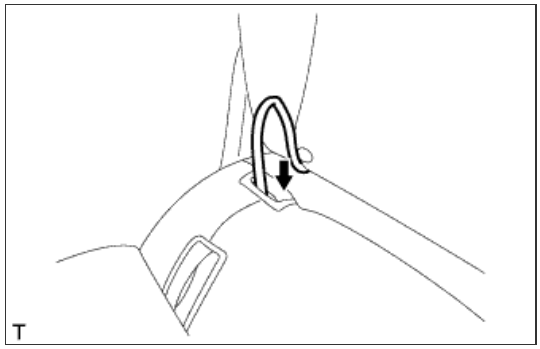

ii. Connect the 2 seat heater connectors.

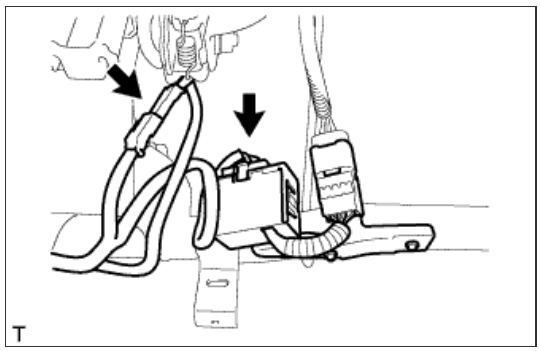


d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

11. CONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Connect the belt anchor.

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

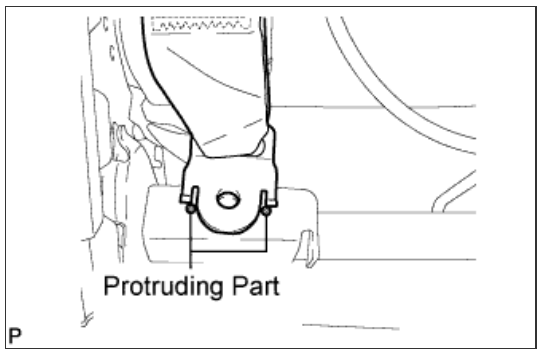

12. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Install the belt with the bolt.


Torque:
42 N*m{ 42 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

HINT:


The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore connect it when installing the rear No. 1 seat inner belt LH.

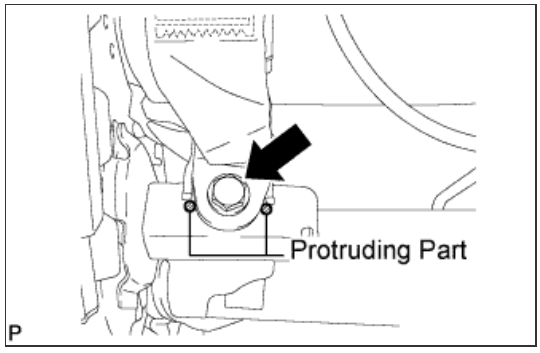

13. INSTALL REAR SEAT UNDER TRAY COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

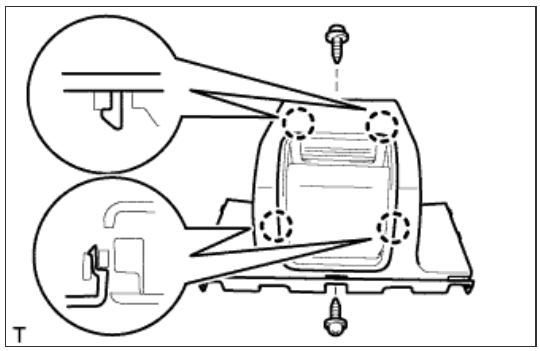

14. INSTALL REAR SEAT CUSHION COVER RH

a. Attach the 2 claws to install the cover.


b. Install the 4 screws.

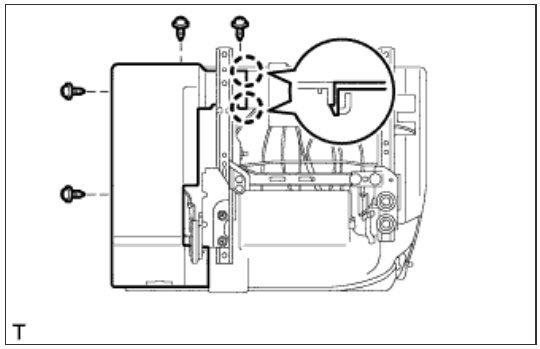


15. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and 2 clips to install the cover.

b. Install the 5 screws.

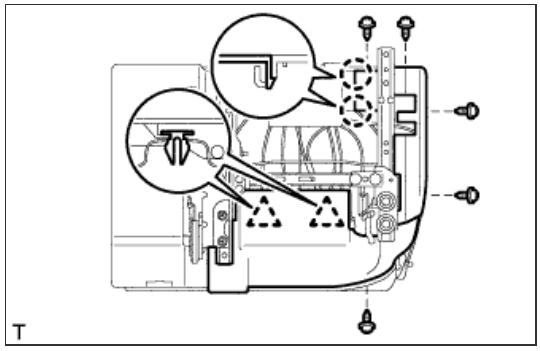


c. Attach the 10 claws.

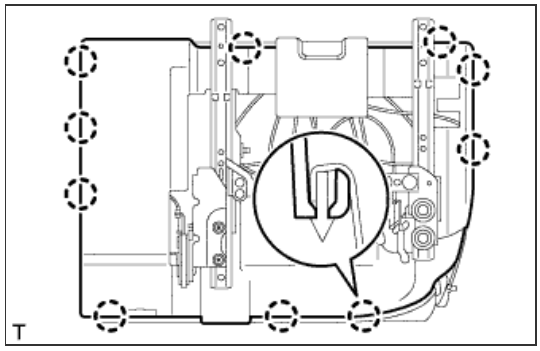

16. INSTALL REAR SEATBACK STAY COVER LH


a. Attach the 2 claws to install the cover.

b. Install the screw.

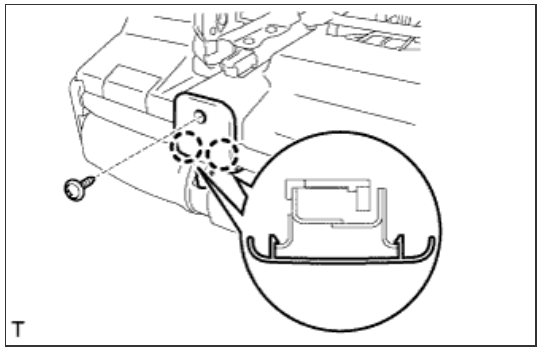


17. INSTALL SEAT BELT ANCHOR COVER CAP

a. Install the anchor cover cap with the screw.

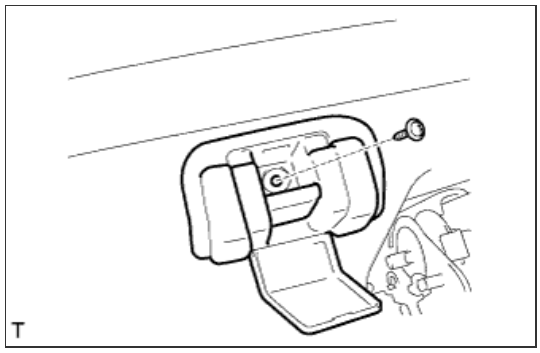


b. Attach the claw to close the cap.

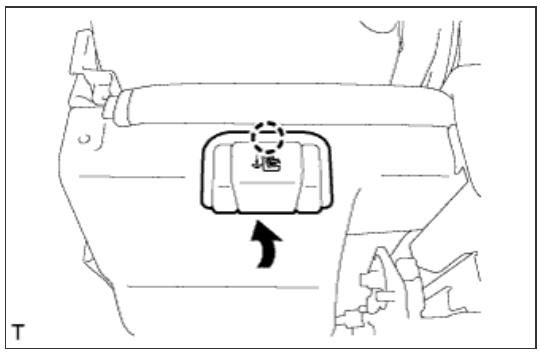

1 . INSTALL REAR NO. 1 SEAT HINGE SUB ASSEMBLY RH


a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 42 kgf*cm , 31 ft.*lbf }

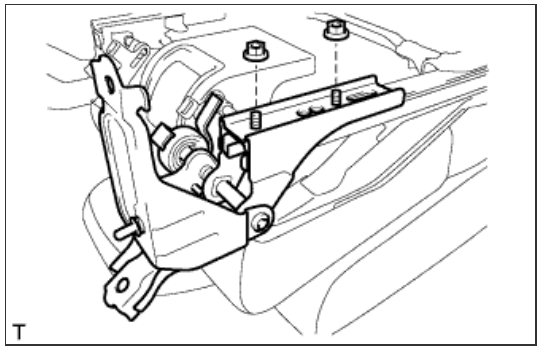

19. INSTALL REAR NO. 1 SEAT HINGE SUB ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

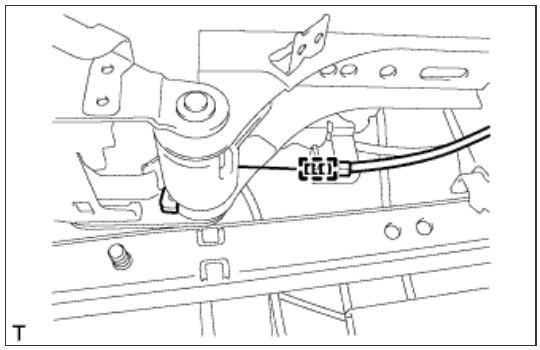


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 42 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.

d. w/ Seat Heater System:
Attach the wire harness clamp.

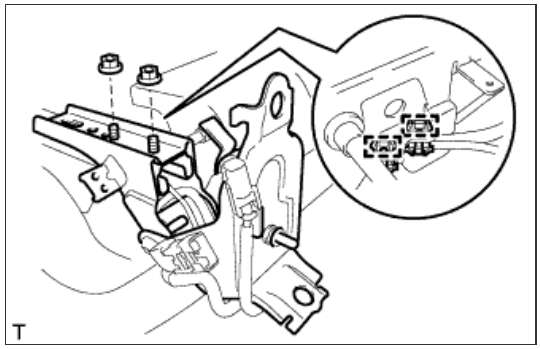


20. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness and attach 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

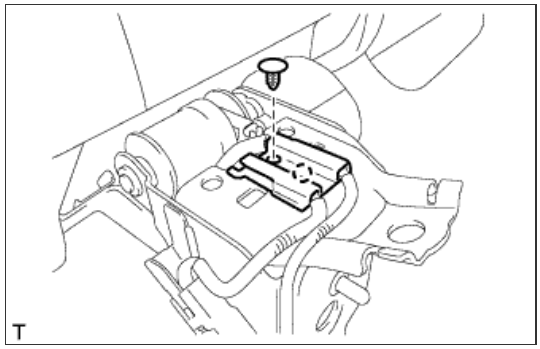


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

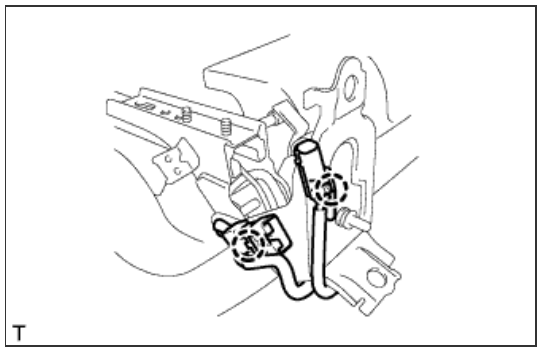


21. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

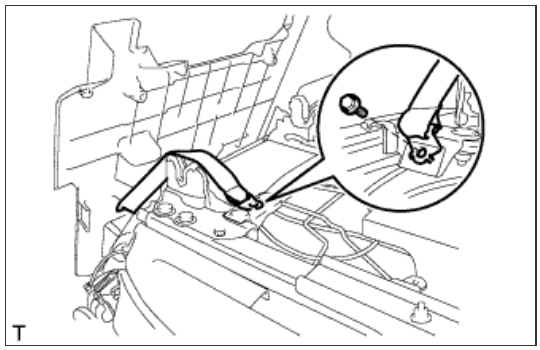


b. Attach the 4 claws to install the seat leg side cover.

c. Install the 4 screws.

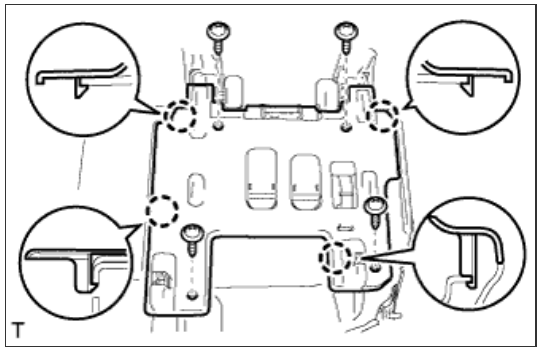


22. INSTALL UPPER SEAT TRACK RAIL COVER RH

a. Attach the 2 claws to install the cover.

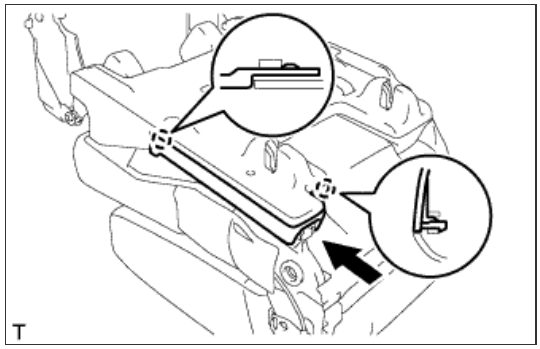

23. INSTALL UPPER SEAT TRACK RAIL COVER LH


a. Attach the 2 claws to install the cover.

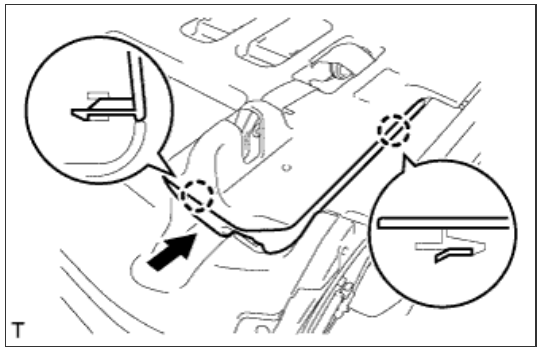

24. INSTALL REAR NO. 1 SEAT RECLINING COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

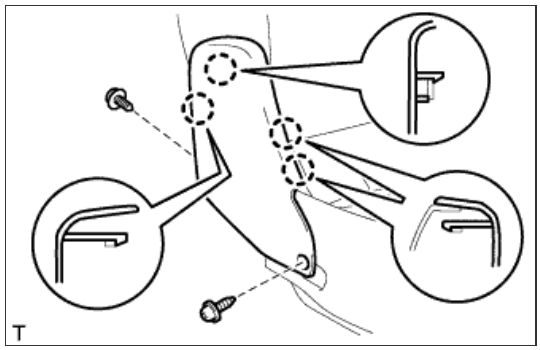

25. INSTALL REAR NO. 1 SEAT RECLINING COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

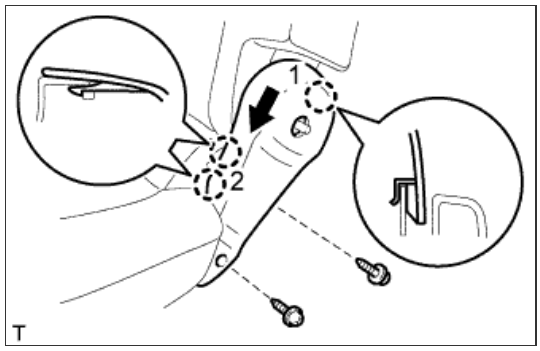


26. INSTALL RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

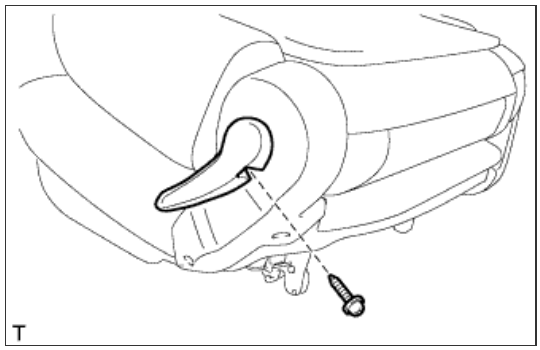

27. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

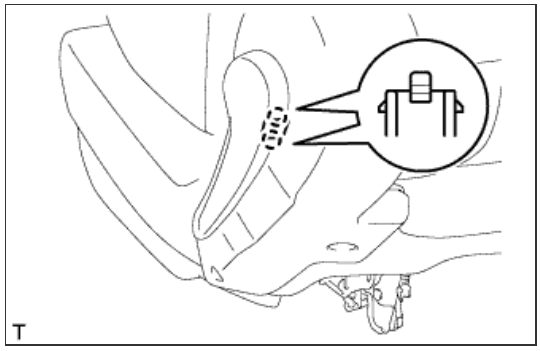

2 . INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly Click here .

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEATBACK HEATER ASSEMBLY

a. Set the seatback heater with the name stamp side facing the seatback cover.

b. Install the seatback heater with new tack pins.

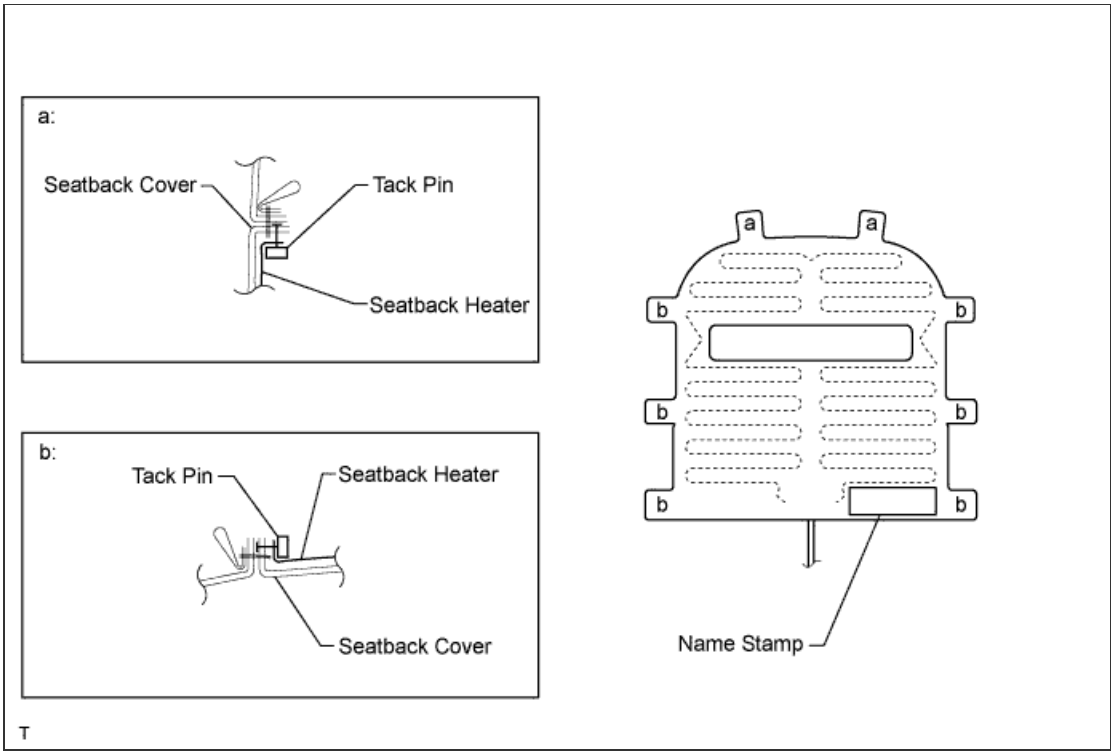


2. INSTALL REAR SEPARATE TYPE SEATBACK COVER

a. w/ Center Armrest:
Using hog ring pliers install the seatback cover with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

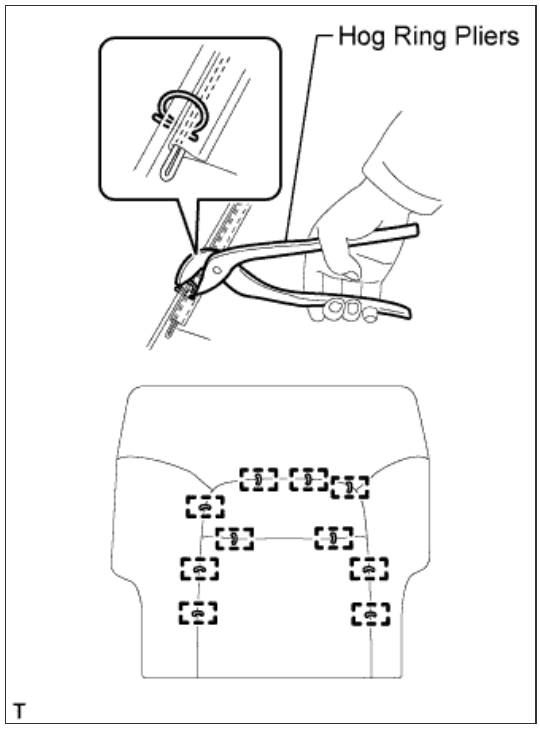


b. w/o Center Armrest:
Using hog ring pliers install the seatback cover with new hog rings.

NOTICE:

- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

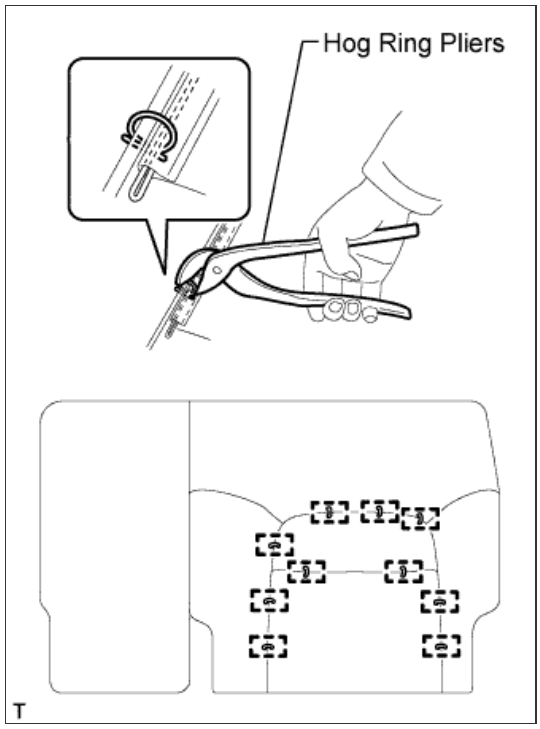


c. w/ Rear Seat Side Airbag:
Connect the seatback cover bracket to the seatback pad.

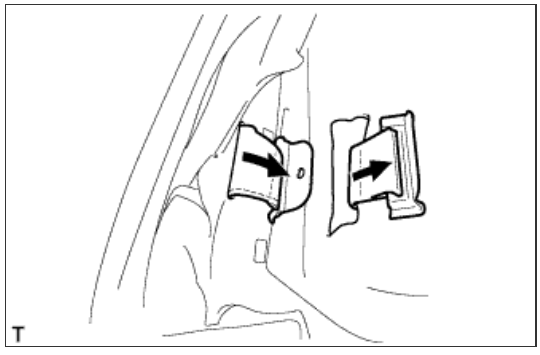

3. INSTALL SEATBACK COVER WITH PAD


a. Install the seatback cover with pad.

b. w/ Center Armrest:
Pull out the seat belt.

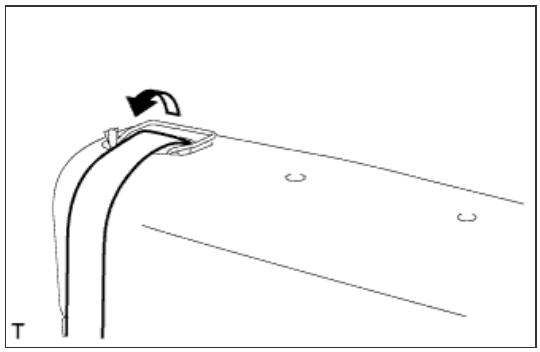


c. w/o Center Armrest:
Pull out the seat belt.

d. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seatback.

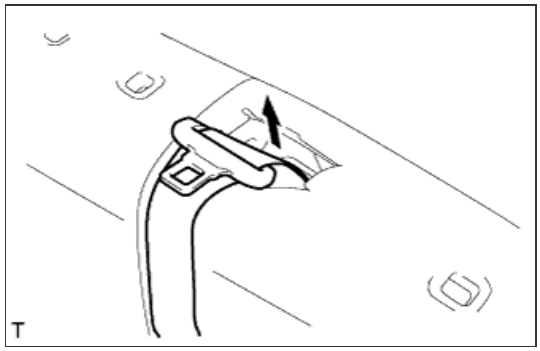


e. w/ Seat Heater System:
Pass the seatback heater wire harness through the hole in the seatback.

i.

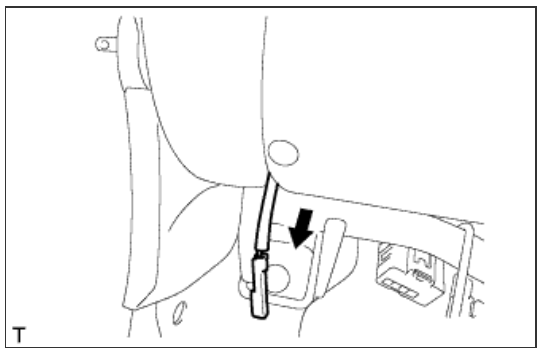

ii. Connect the seatback heater wire harness and install a new cable tie.

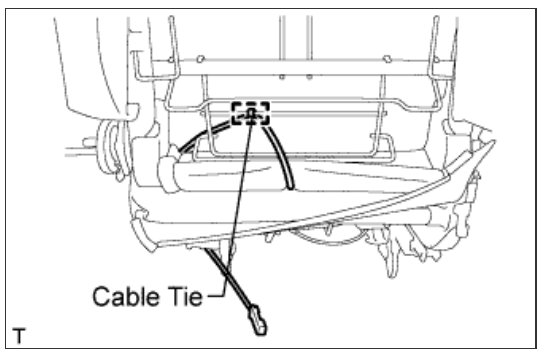


f. w/ Rear Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the cap nut.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

NOTICE:


After the seatback trim cover is assembled make sure the side airbag strap is not twisted.

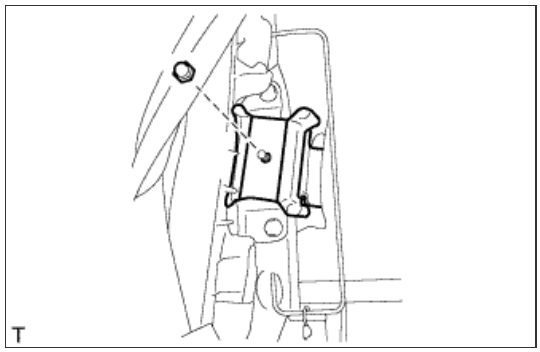

g. w/ Center Armrest:
Using hog ring pliers install new hog rings to the seatback frame.

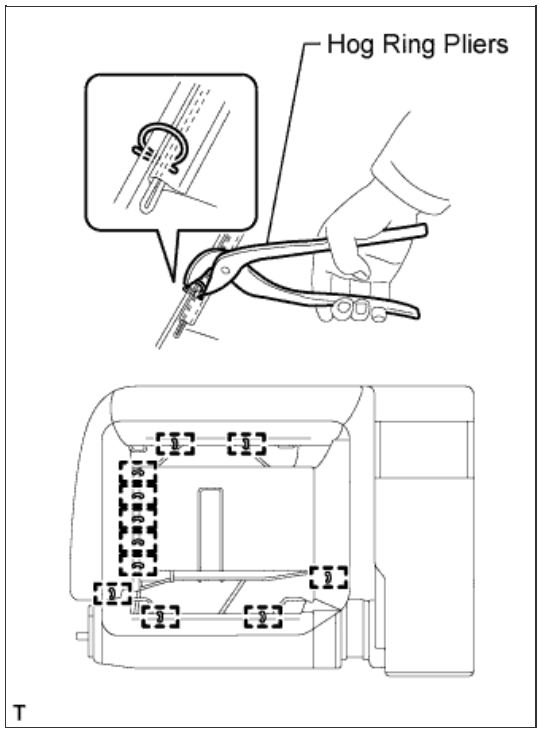


h. w/o Center Armrest:
Using hog ring pliers install new hog rings to the seatback frame.

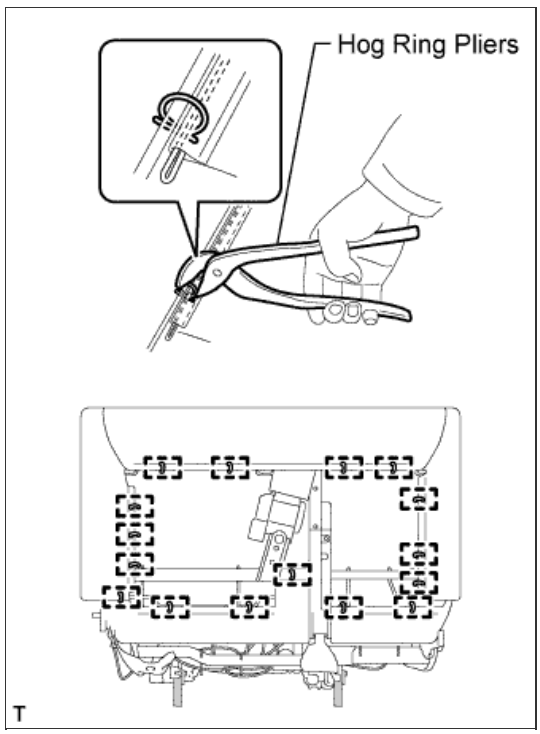

4. INSTALL REAR SEAT BELT HOLE COVER LH


a. Attach the 4 claws to install the cover.

b. Install the screw.

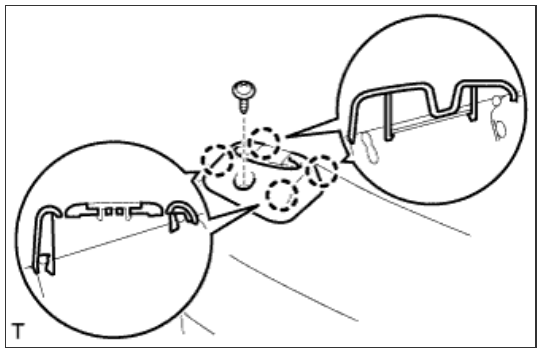


5. INSTALL SHOULDER BELT ANCHOR COVER

a. Attach the 2 claws to install the cover.

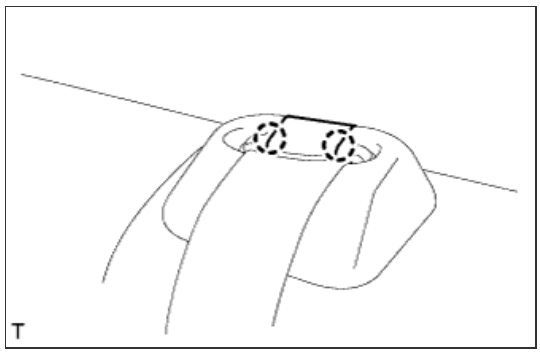


6. INSTALL REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ Center Armrest:
Attach the 4 claws to install the 2 supports.

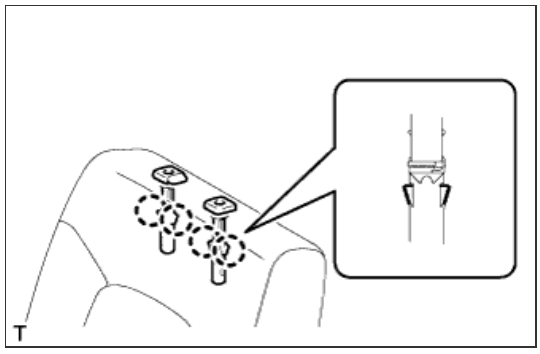

b. w/o Center Armrest:
Attach the claws to install the 4 supports.

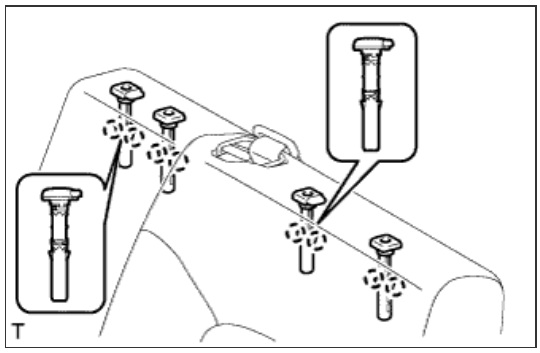


7. INSTALL REAR SEAT HEADREST ASSEMBLY

. INSTALL REAR SEATBACK BOARD SUB ASSEMBLY LH

a. w/ Center Armrest:

i. Push the board down to attach the 2 claws on the bottom.


ii. Attach the 2 claws on the top of the board to install it.

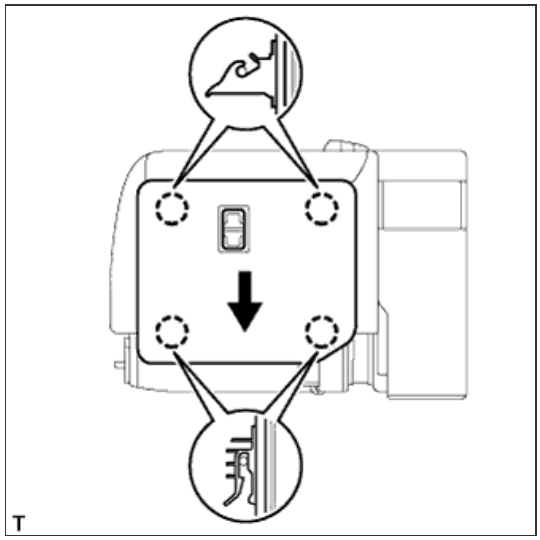

b. w/o Center Armrest:


i. Push the board down to attach the 3 claws on the bottom.

ii. Attach the 3 claws on the top of the board to install it.

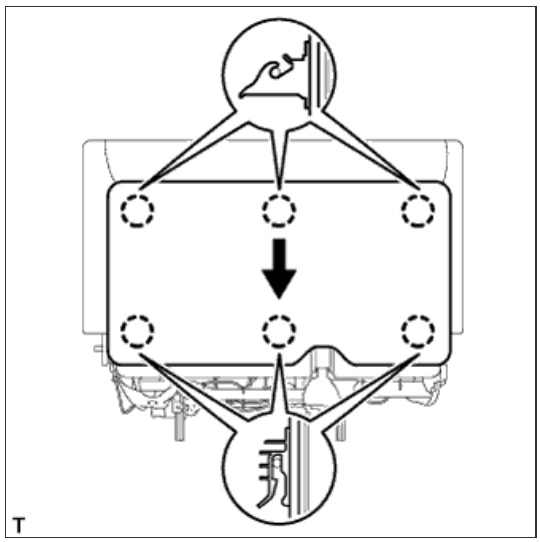

9. INSTALL REAR SEATBACK COVER


a. Attach the 4 claws to install the cover.

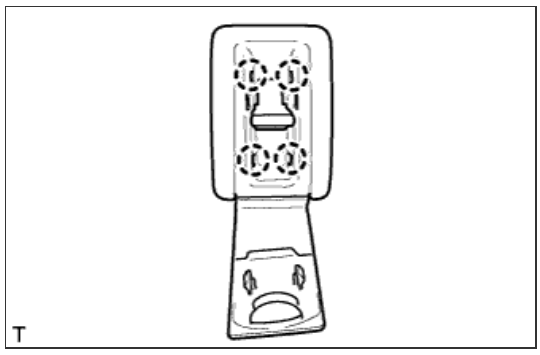

10. INSTALL SEAT CUSHION COVER WITH PAD


a. Install the seatback cover with pad.

b. w/ Center Armrest:
Pull out the seat belt.

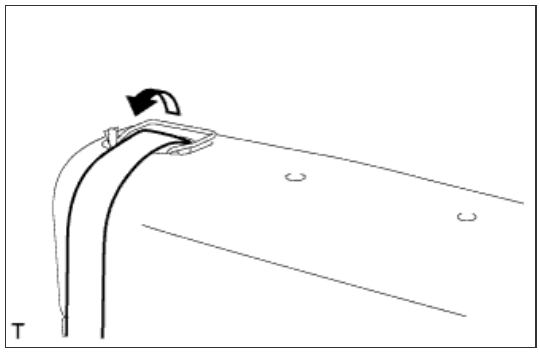


c. w/o Center Armrest:
Pull out the seat belt.

d. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seatback.

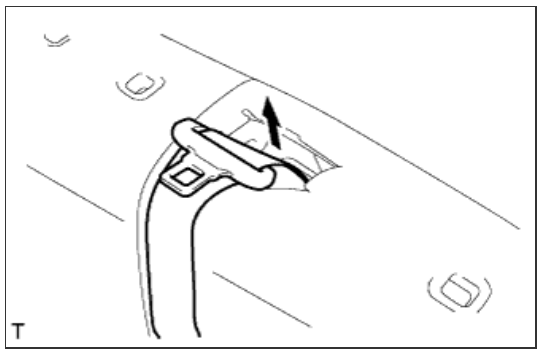


e. w/ Seat Heater System:
Pass the seatback heater wire harness through the hole in the seatback.

i.

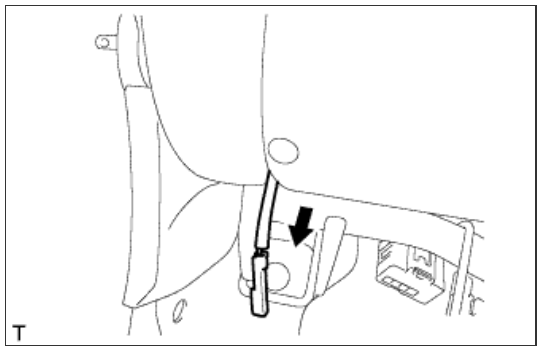

ii. Connect the seatback heater wire harness and install a new cable tie.

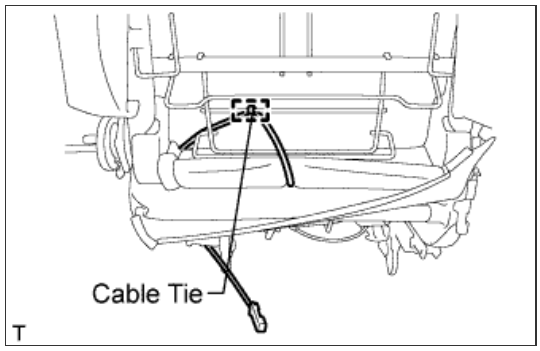


f. w/ Rear Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the cap nut.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

NOTICE:


After the seatback trim cover is assembled make sure the side airbag strap is not twisted.

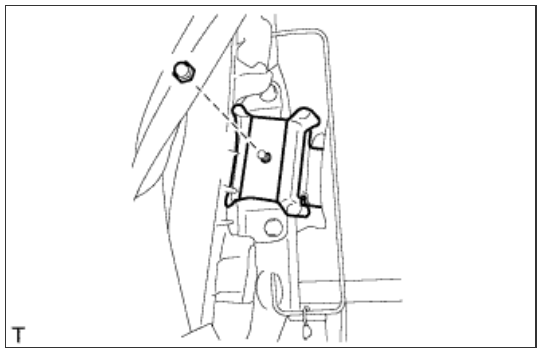

g. w/ Center Armrest:
Using hog ring pliers install new hog rings to the seatback frame.

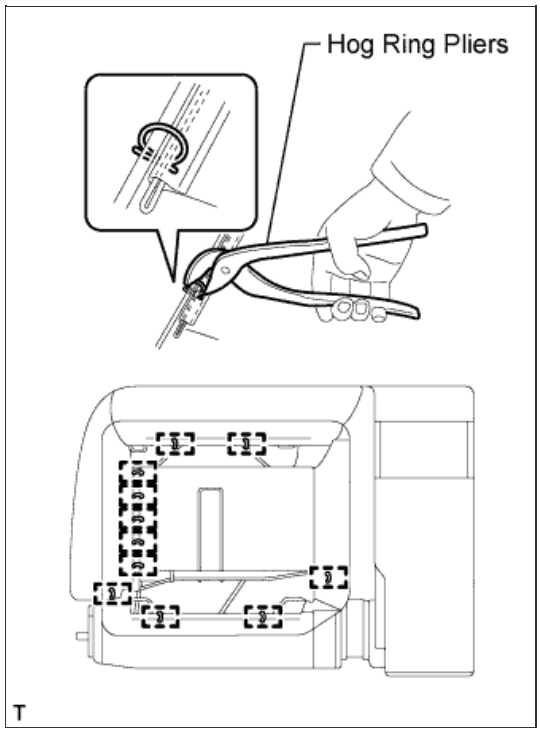

h. w/o Center Armrest:
Using hog ring pliers install new hog rings to the seatback frame.

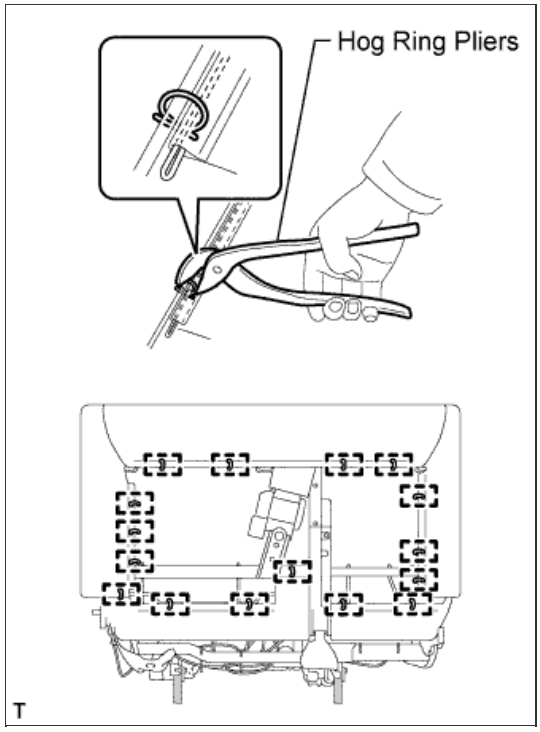


11. CONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Connect the belt anchor.

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

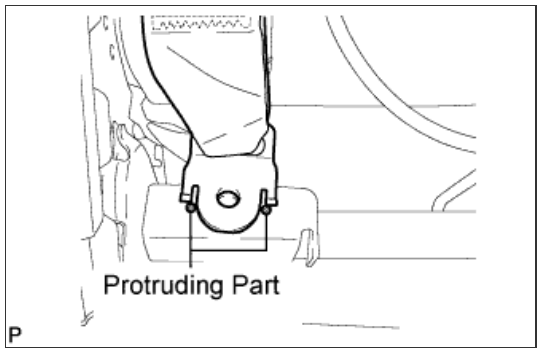

12. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Install the belt with the bolt.


Torque:
42 N*m{ 42 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

HINT:


The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore connect it when installing the rear No. 1 seat inner belt LH.

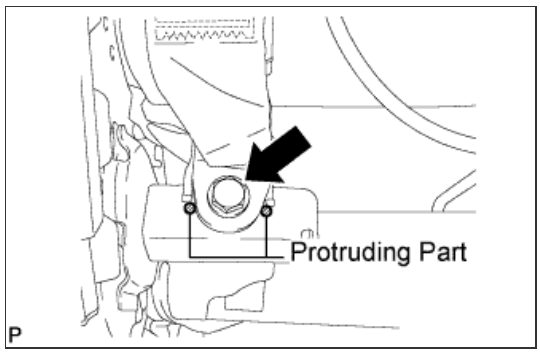

13. INSTALL REAR SEAT UNDER TRAY COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

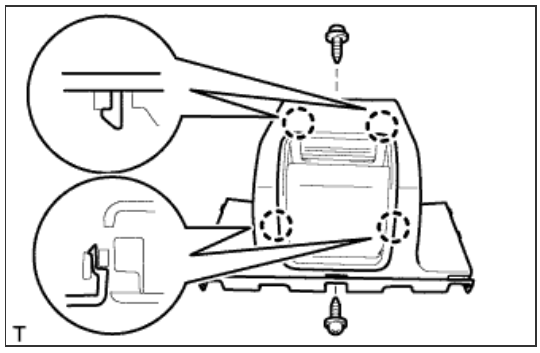

14. INSTALL REAR SEAT CUSHION COVER RH

a. Attach the 2 claws to install the cover.


b. Install the 4 screws.

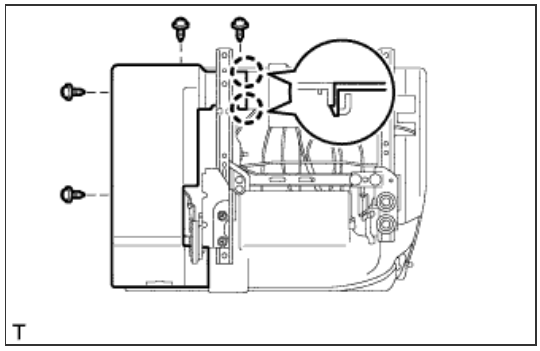


15. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and 2 clips to install the cover.

b. Install the 5 screws.

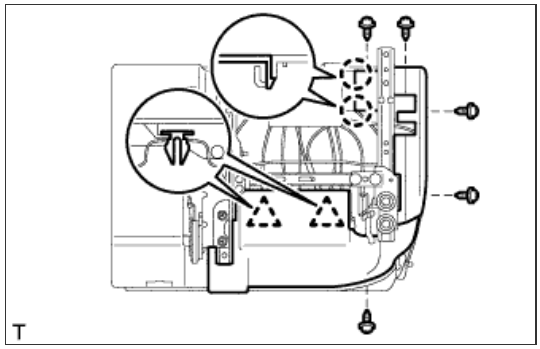


c. Attach the 10 claws.

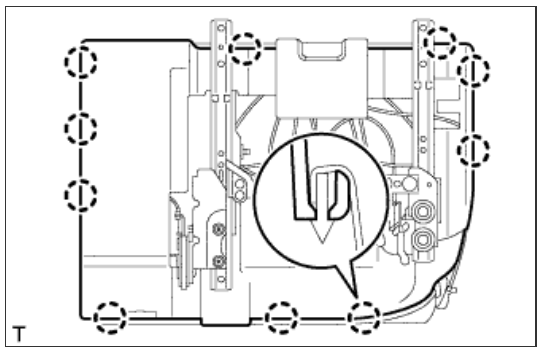

16. INSTALL REAR SEATBACK STAY COVER LH


a. Attach the 2 claws to install the cover.

b. Install the screw.

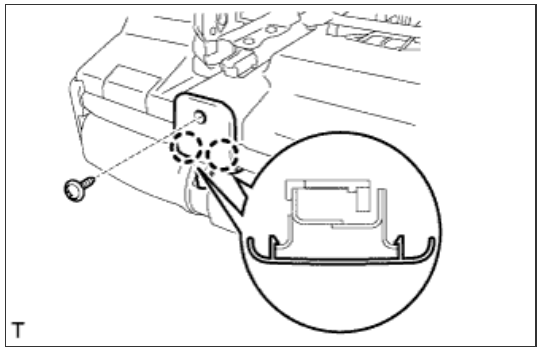


17. INSTALL SEAT BELT ANCHOR COVER CAP

a. Install the anchor cover cap with the screw.

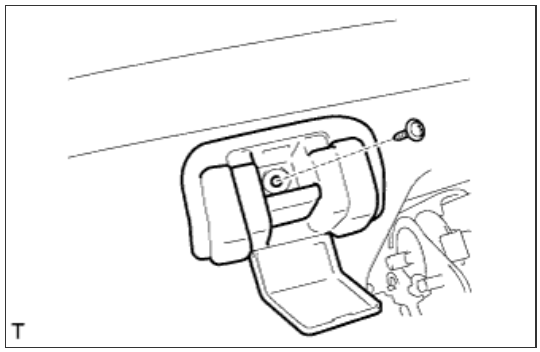


b. Attach the claw to close the cap.

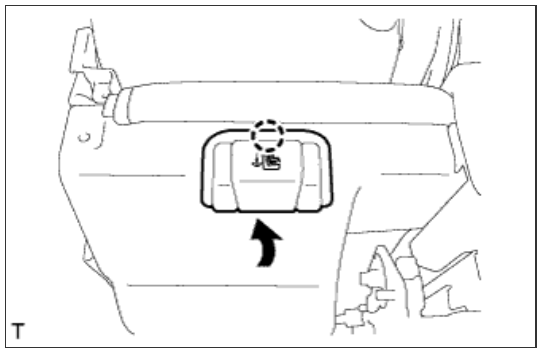

1 . INSTALL REAR NO. 1 SEAT HINGE SUB ASSEMBLY RH


a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 42 kgf*cm , 31 ft.*lbf }

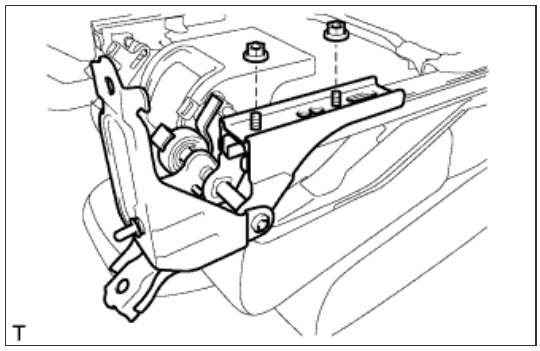

19. INSTALL REAR NO. 1 SEAT HINGE SUB ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

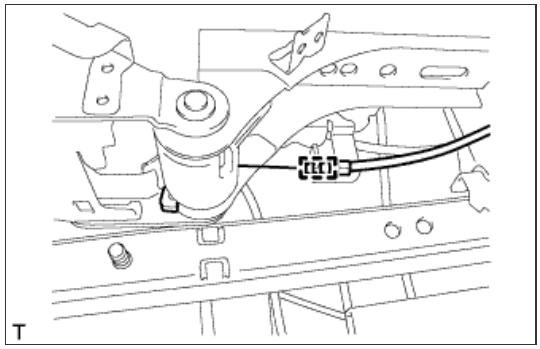


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 42 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.

d. w/ Seat Heater System:
Attach the wire harness clamp.

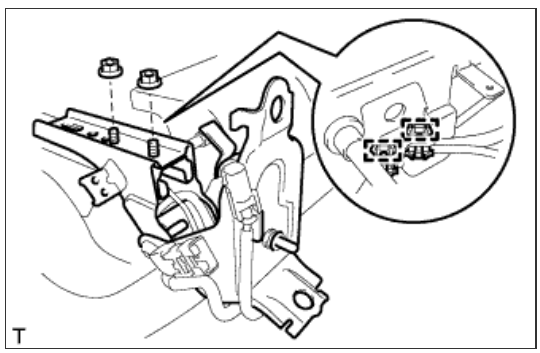


20. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness and attach 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

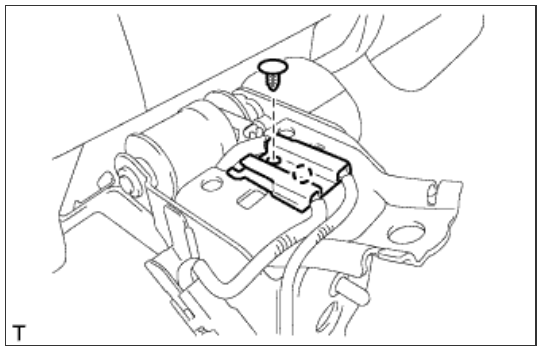


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

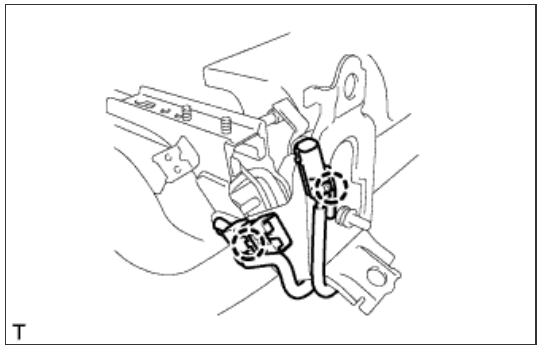


21. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

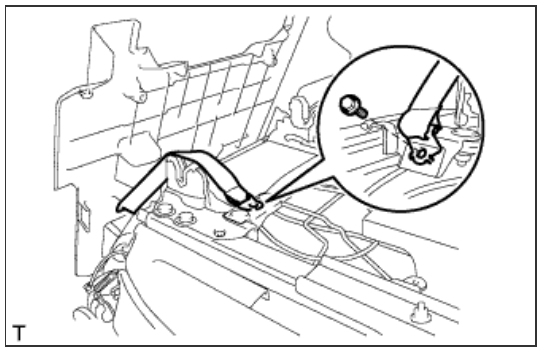


b. Attach the 4 claws to install the seat leg side cover.

c. Install the 4 screws.

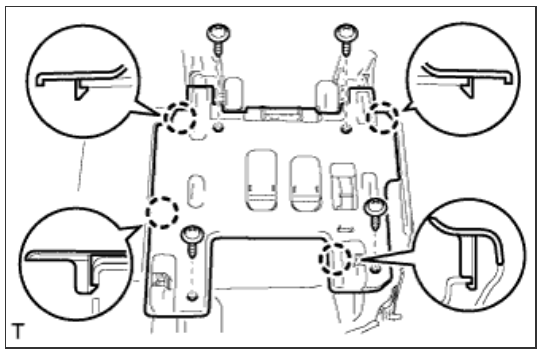


22. INSTALL UPPER SEAT TRACK RAIL COVER RH

a. Attach the 2 claws to install the cover.

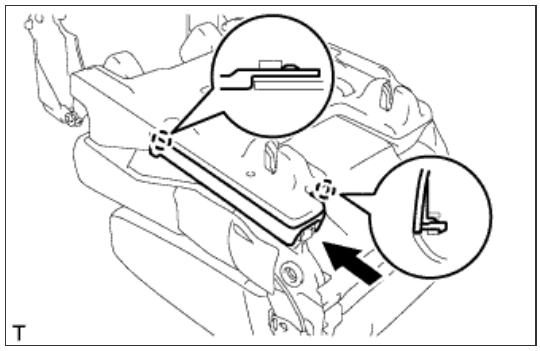

23. INSTALL UPPER SEAT TRACK RAIL COVER LH


a. Attach the 2 claws to install the cover.

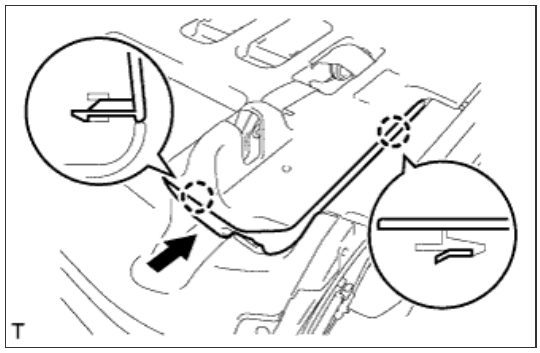

24. INSTALL REAR NO. 1 SEAT RECLINING COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

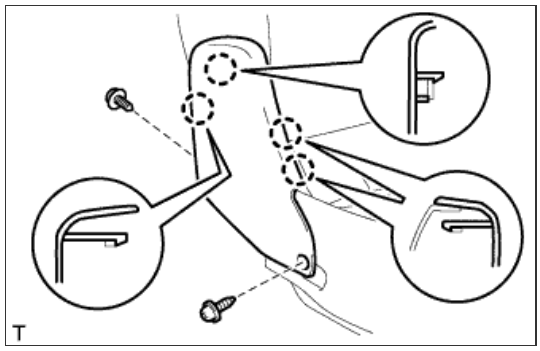

25. INSTALL REAR NO. 1 SEAT RECLINING COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

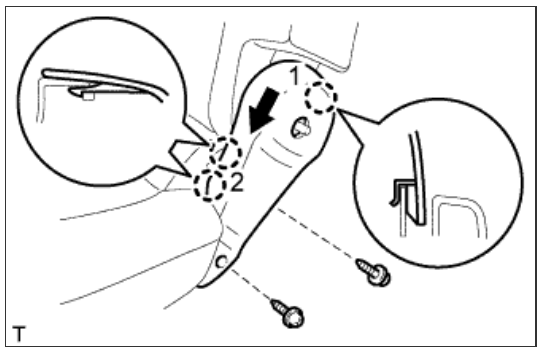


26. INSTALL RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

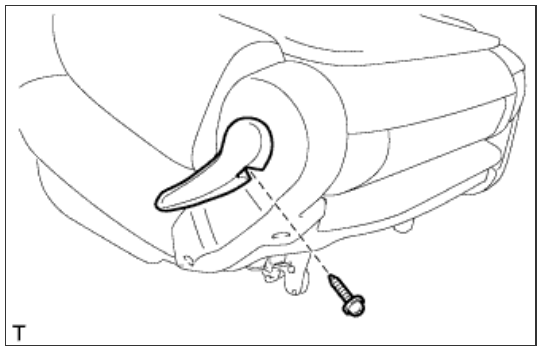

27. INSTALL SEAT ADJUSTER BOLT COVER


a. Attach the 2 claws to install the cover.

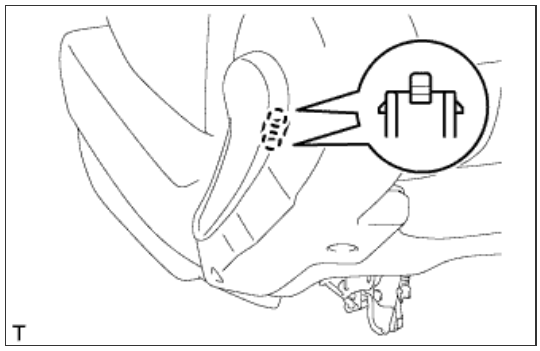


2 . INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly Click here .

for Preparation Click here

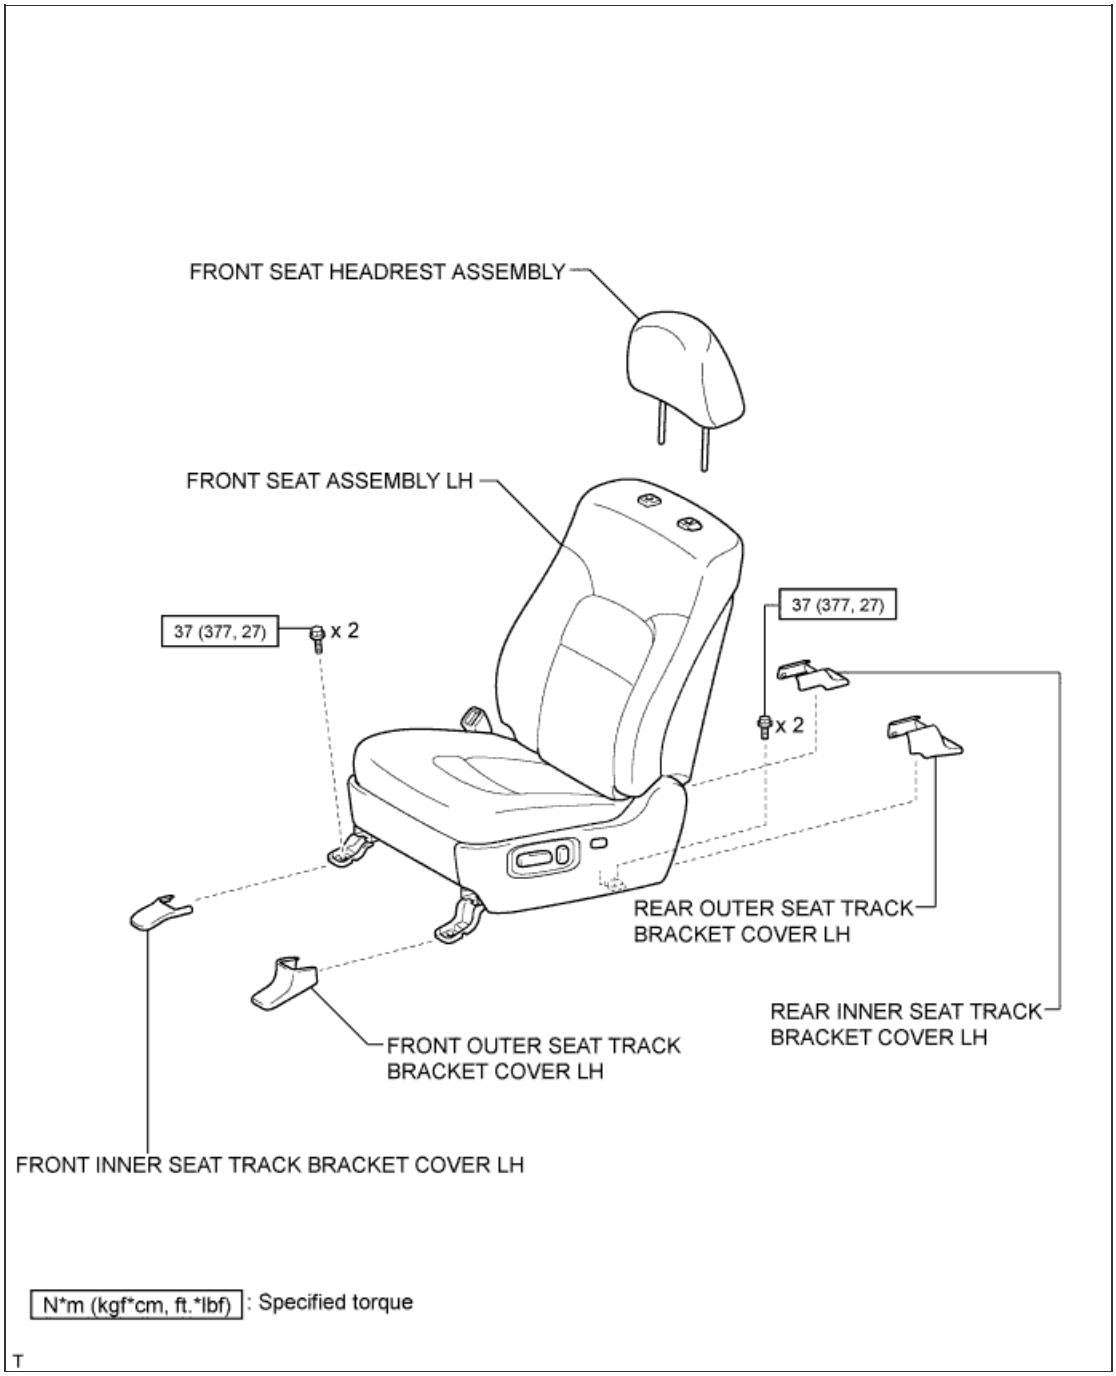

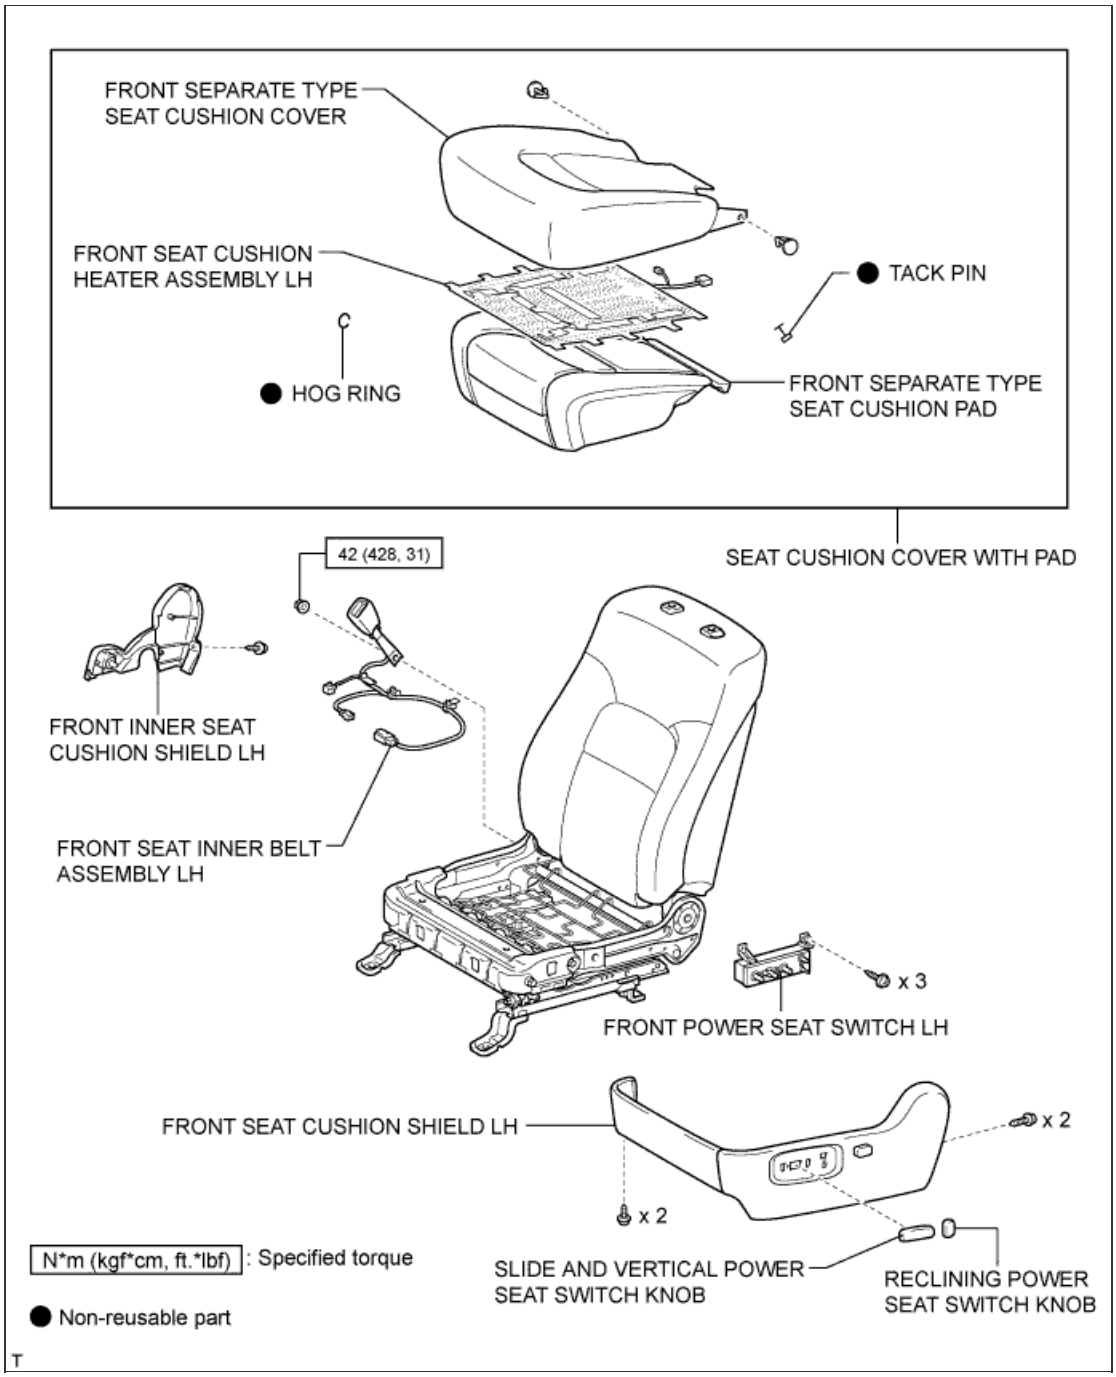
FRONT SEPARATE TYPE SEAT CUSHION COVER
FRONT SEAT CUSHION HEATER ASSEMBLY LH
TACK PIN
HOG RING
FRONT SEPARATE TYPE SEAT CUSHION PAD
SEAT CUSHION COVER WITH PAD
42 (428, 31)
FRONT INNER SEAT CUSHION SHIELD LH
FRONT SEAT INNER BELT ASSEMBLY LH
x 3
FRONT POWER SEAT SWITCH LH
FRONT SEAT CUSHION SHIELD LH
x 2
x 2
SLIDE AND VERTICAL POWER SEAT SWITCH KNOB
RECLINING POWER SEAT SWITCH KNOB
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

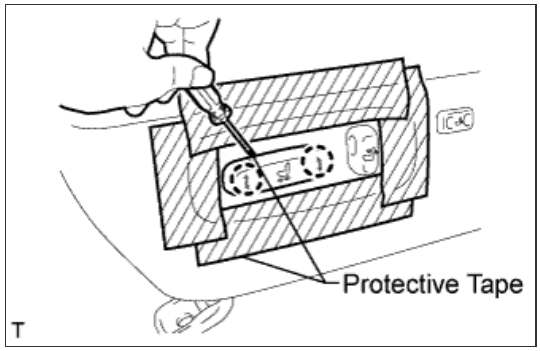


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver, detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

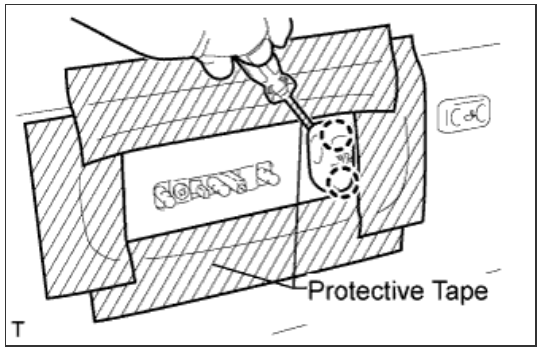

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

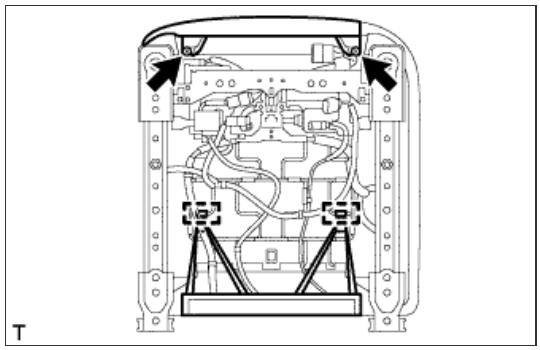

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side:
Disconnect the power seat lumbar switch connectors.

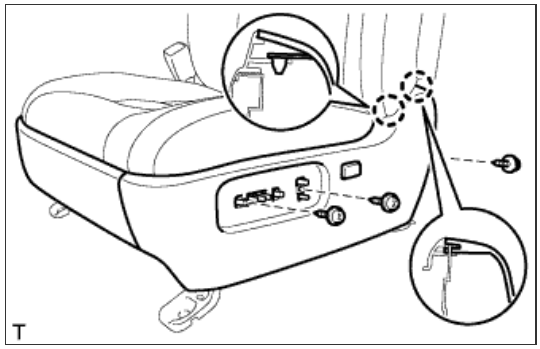

5. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

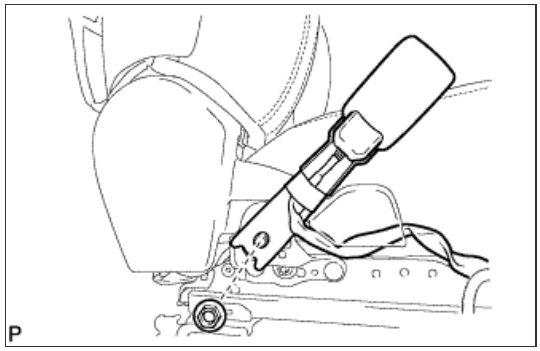

6. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.

b. Detach the 2 claws and clip, and then remove the cushion shield.

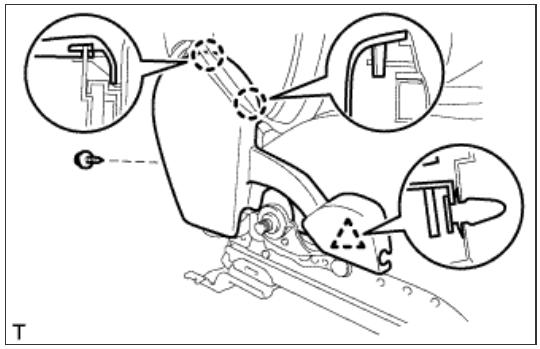


7. REMOVE FRONT POWER SEAT SWITCH LH

a. w/ Seat Position Memory System:
Disconnect the 2 connectors.


b. w/o Seat Position Memory System:
Disconnect the connector.

c. Remove the 3 screws and switch.

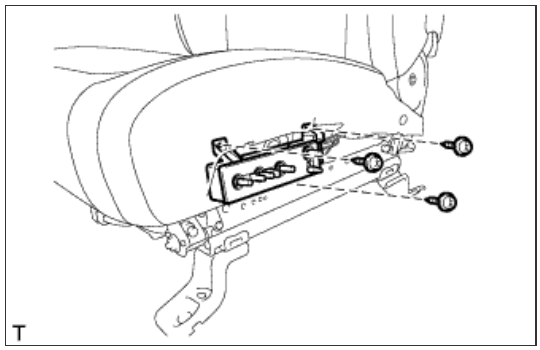


8. REMOVE SEAT CUSHION COVER WITH PAD

a. Remove the 3 hog rings and detach the 9 hooks.

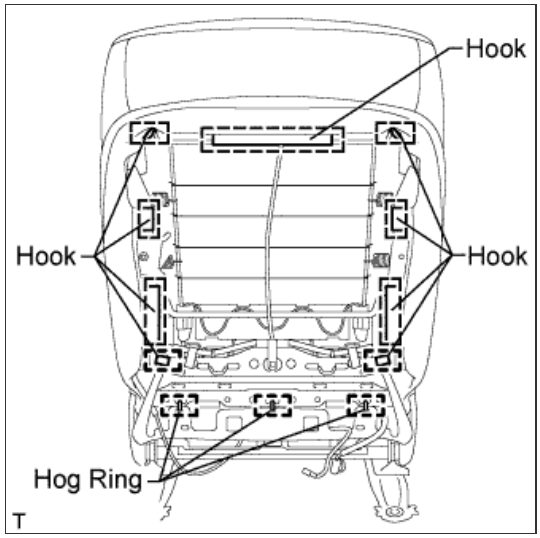


b. Remove the nut and seatback cover bracket from the seat frame.

c. Remove the seatback cover with pad.

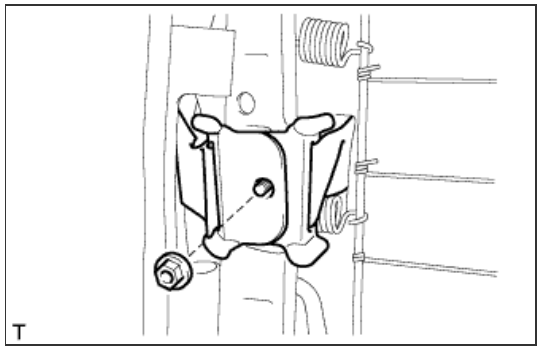


9. REMOVE FRONT SEPARATE TYPE SEAT CUSHION COVER

a. Remove the hog rings and front seat cushion cover.

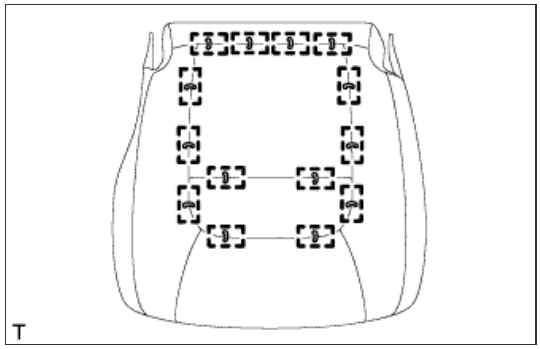

10. REMOVE FRONT SEAT CUSHION HEATER ASSEMBLY LH

a. Cut off the tack pins which fasten the seat heater to the seat cushion cover, and then remove the seat cushion heater from the seat cushion cover.

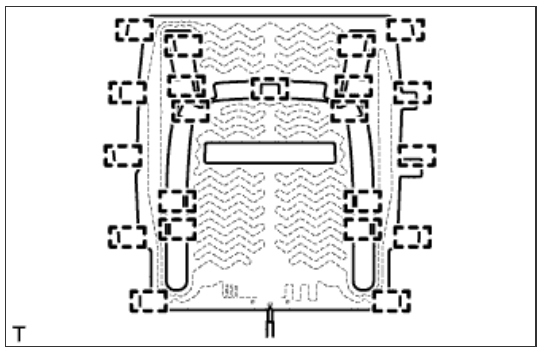

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE FRONT SEAT ASSEMBLY LH

a. Remove the front seat assembly (Click here).


2. REMOVE SLIDE AND VERTICAL POWER SEAT SWITCH KNOB

a. Apply protective tape around the cushion shield.

b. Using a screwdriver detach the 2 claws and remove the knob.

HINT:

Tape the screwdriver tip before use.

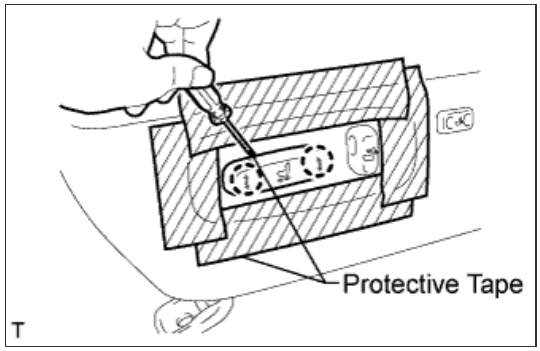


3. REMOVE RECLINING POWER SEAT SWITCH KNOB

a. Using a screwdriver detach the 2 claws and remove the knob.

HINT:


Tape the screwdriver tip before use.

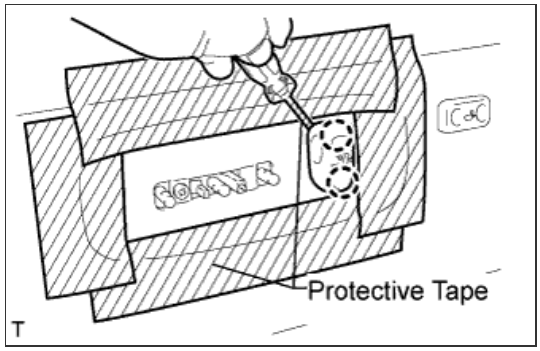

4. REMOVE FRONT SEAT CUSHION SHIELD LH

a. Remove the 2 rubber bands from the hooks.


b. Remove the 2 screws.

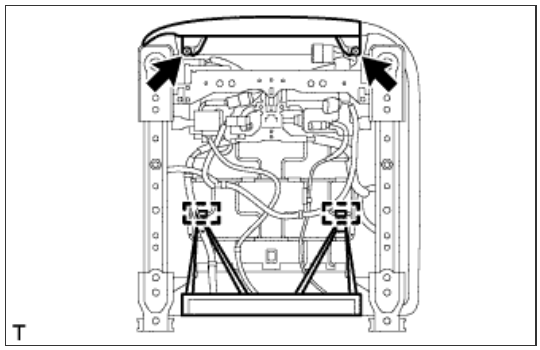

c. Remove the 3 screws.

d. Detach the 2 claws and remove the cushion shield.


e. for Driver Side:
Disconnect the power seat lumbar switch connectors.

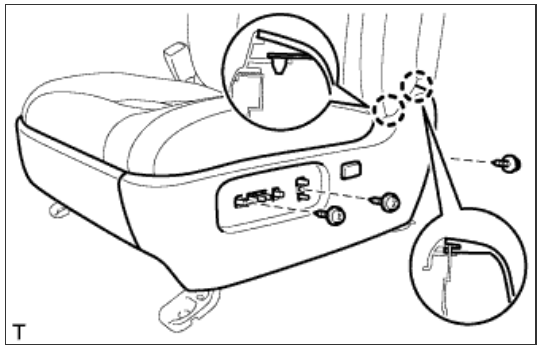

5. REMOVE FRONT SEAT INNER BELT ASSEMBLY LH

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

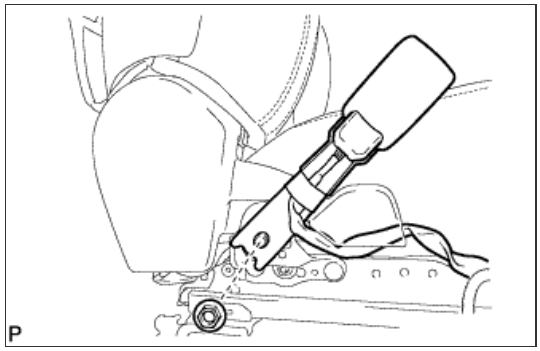

6. REMOVE FRONT INNER SEAT CUSHION SHIELD LH

a. Remove the screw.

b. Detach the 2 claws and clip and then remove the cushion shield.

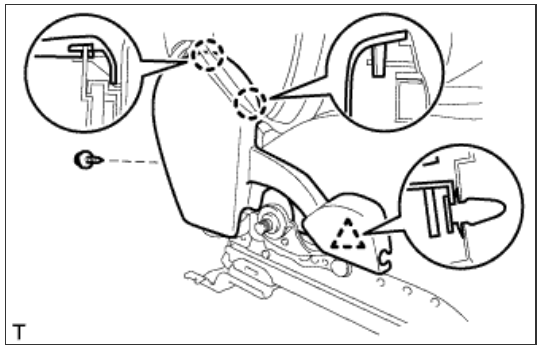


7. REMOVE FRONT POWER SEAT SWITCH LH

a. w/ Seat Position Memory System:
Disconnect the 2 connectors.


b. w/o Seat Position Memory System:
Disconnect the connector.

c. Remove the 3 screws and switch.

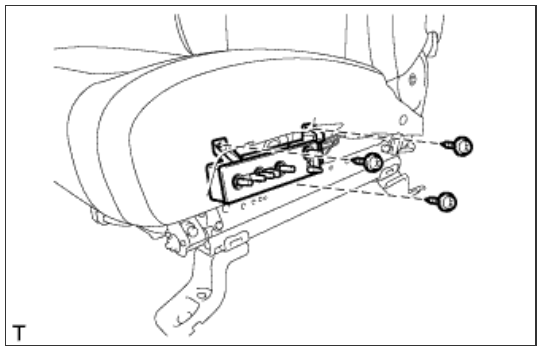


8. REMOVE SEAT CUSHION COVER WITH PAD


a. Using a clip remover remove the 2 clips.

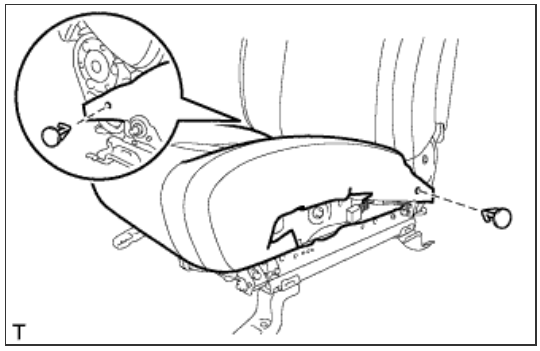

b. Disconnect the seat heater connector and detach the 2 wire harness clamps.

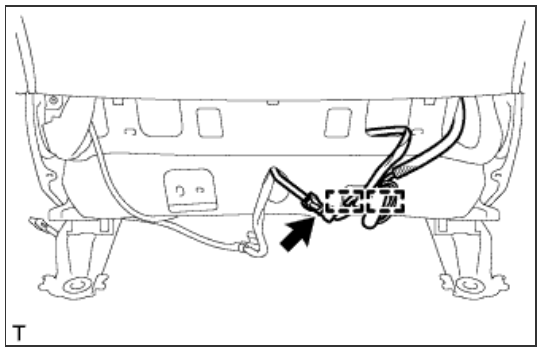


c. Disconnect the seat heater control connector and detach the wire harness clamp.

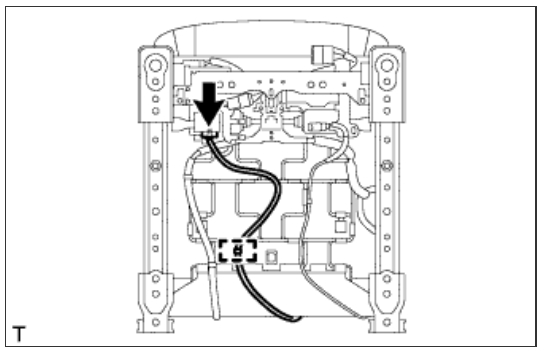

d. for Front Passenger Side:


i. Disconnect the seat belt warning sensor connector.

ii. Detach the 2 clamps and remove the seat belt warning sensor connector.

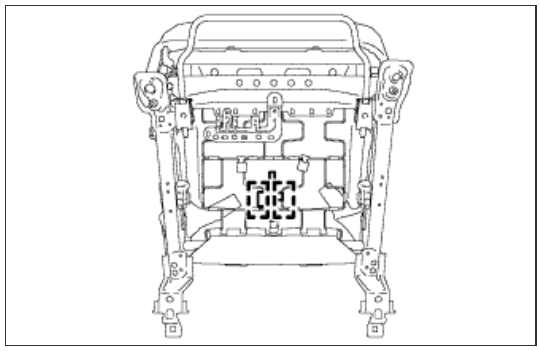


e. Bend the 2 seat frame claws upward.

f. Detach the hooks and remove the seat cushion cover with pad.

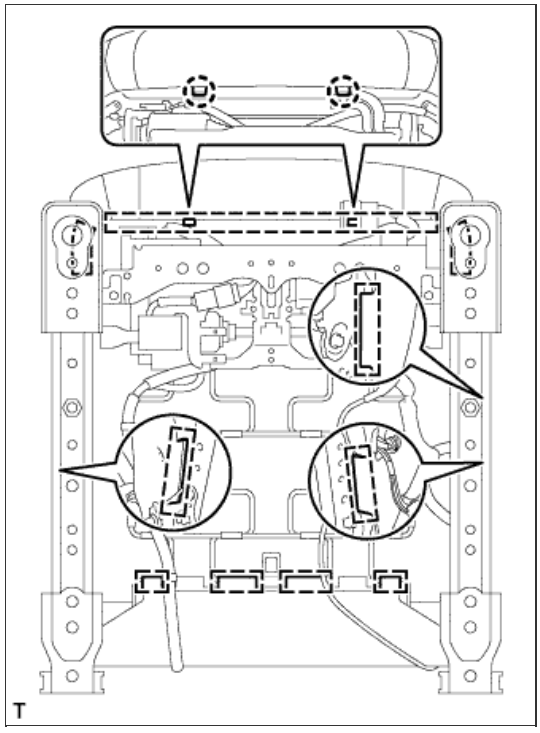


9. REMOVE FRONT SEPARATE TYPE SEAT CUSHION COVER

a. Remove the hog rings and front seat cushion cover.

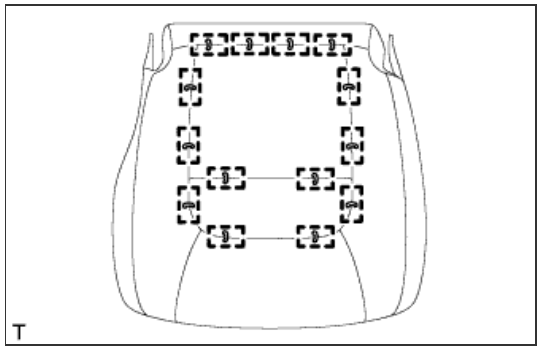

10. REMOVE FRONT SEAT CUSHION HEATER ASSEMBLY LH

a. Cut off the tack pins which fasten the seat heater to the seat cushion cover and then remove the seat cushion heater from the seat cushion cover.

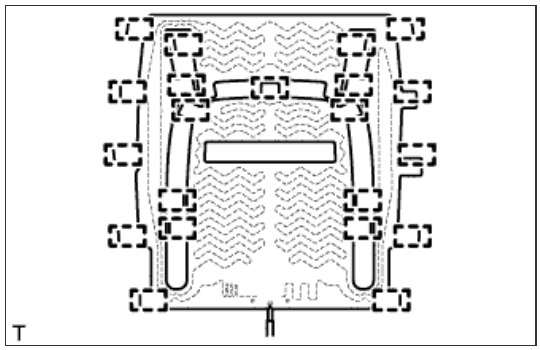
T

for Preparation Click here

1. INSPECT FRONT SEAT CUSHION HEATER ASSE LH

a. Heat the thermostat with a light.


b. Check the seat cushion heater.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A-1 - B-1	Seat cushion heater temperature 25 C (77)	3.05 to 3.65 Ω
A-4 - B-2		
A-1 - A-4		
A-2 - A-3		8 to 12 kΩ

f the result is not as specified, replace the seat cushion heater assembly.

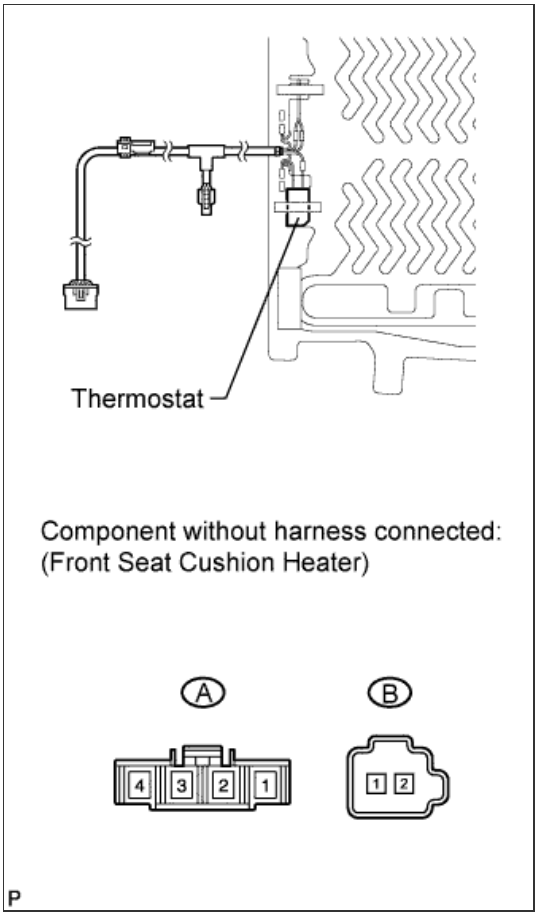

2. INSPECT FRONT SEAT CUSHION HEATER ASSE RH

a. Heat the thermostat with a light.


b. Check the seat cushion heater.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A-1 - B-1	Seat cushion heater temperature 25 C (77)	3.05 to 3.65 Ω
A-4 - B-2		
A-1 - A-4		
A-2 - A-3		8 to 12 kΩ

f the result is not as specified, replace the seat cushion heater assembly.

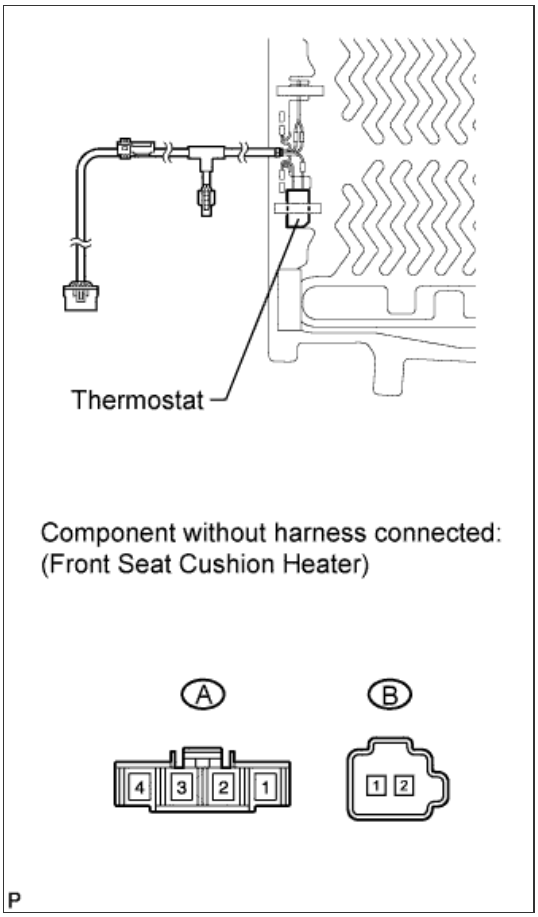
Thermostat
Component without harness connected:
(Front Seat Cushion Heater)
A
B
4
3
2
1
1
2
P

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT CUSHION HEATER ASSEMBLY LH

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

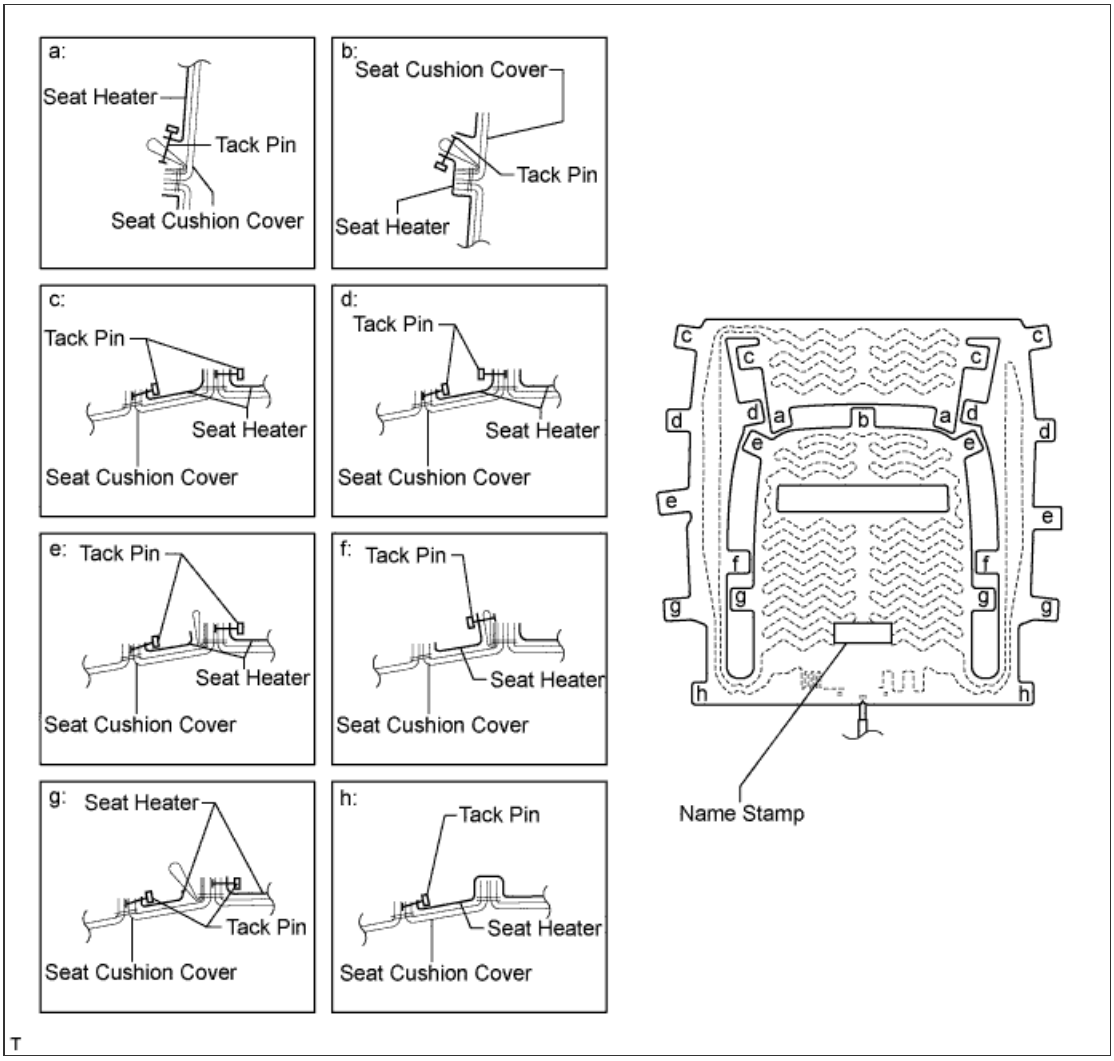


T

2. INSTALL FRONT SEPARATE TYPE SEAT CUSHION COVER

a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

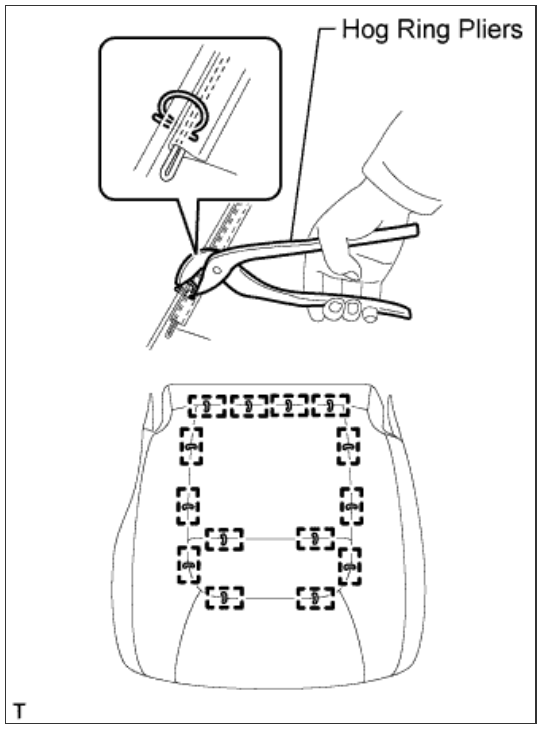


3. INSTALL SEAT CUSHION COVER WITH PAD

a. Attach the hooks to install the seat cushion cover with pad.

b. Bend the 2 seat frame claws downward.

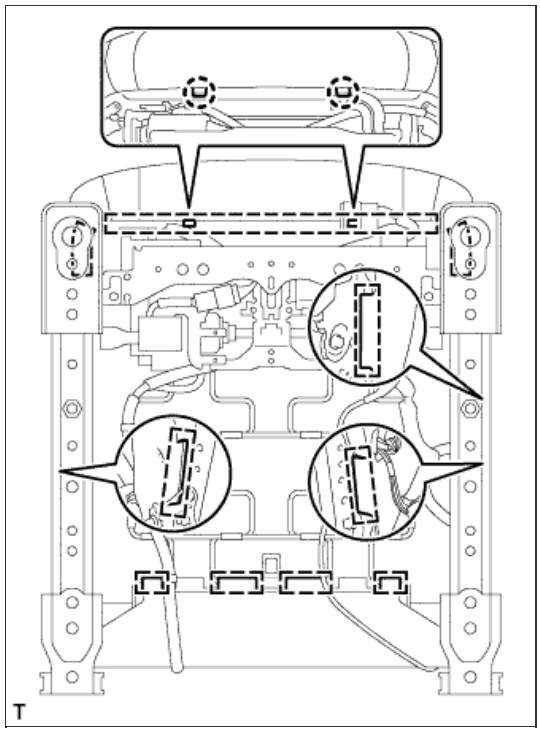


c. Connect the seat heater control connector and attach the wire harness clamp.

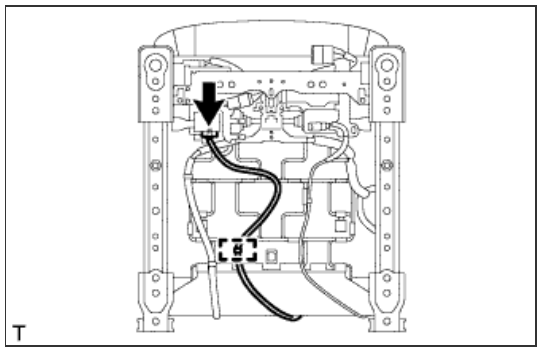


d. for Front asenger Side:

i. Attach the 2 clamps to install the seat belt warning sensor connector.


ii. Connect the seat belt warning sensor connector.

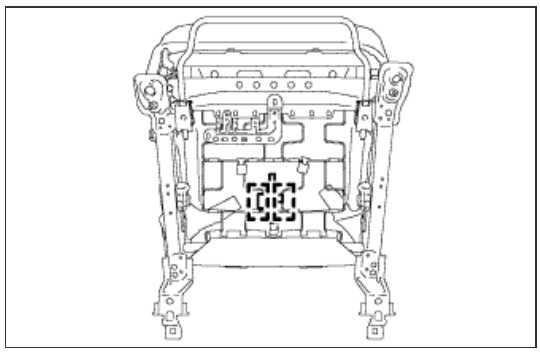

e. Connect the seat heater connector and attach the 2 wire harness clamps.

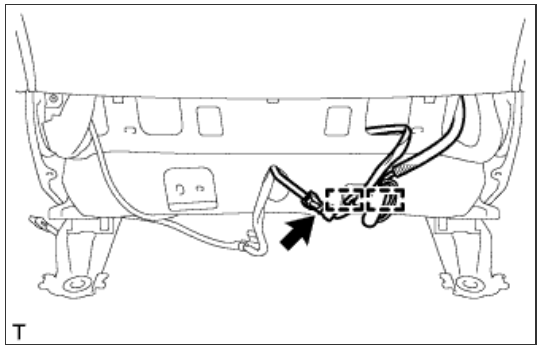

f. Install the 2 clips.

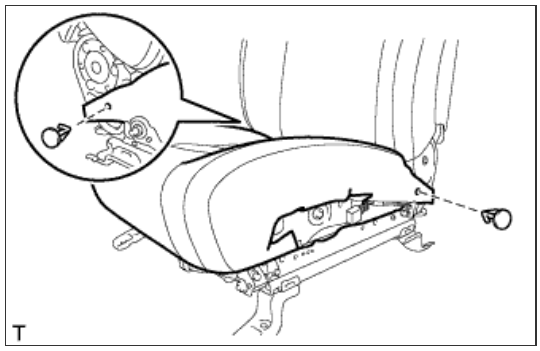


4. INSTALL FRONT POWER SEAT SWITCH LH

a. Install the switch with the 3 screws.

b. w/ Seat osition Memory System:
Connect the 2 connectors.


c. w/o Seat osition Memory System:
Connect the connector.

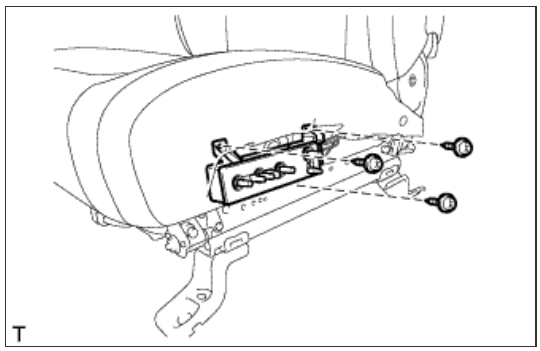

5. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the 2 claws and clip to install the cushion shield.

b. Install the screw.

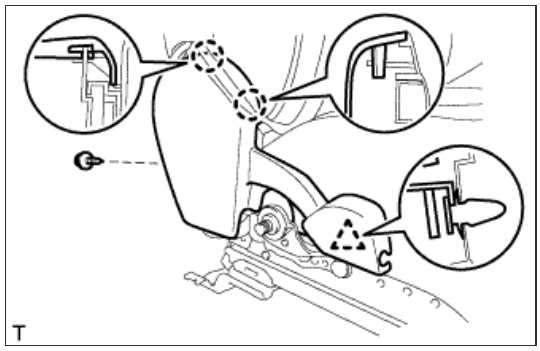

6. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.

b. Connect the connectors and attach the clamps.

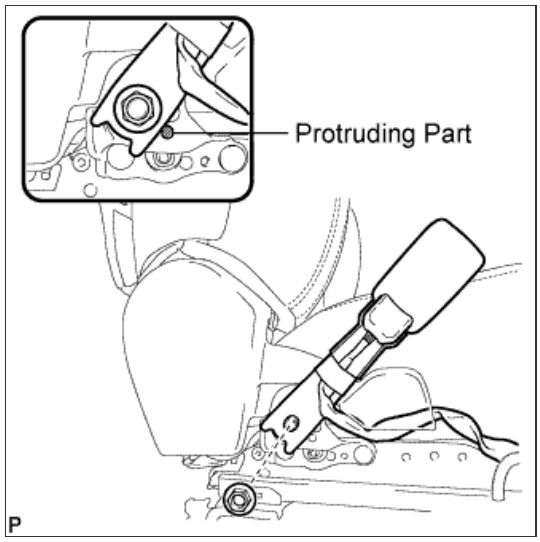


7. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


b. Attach the 2 claws to install the cushion shield.

c. Install the 3 screws.

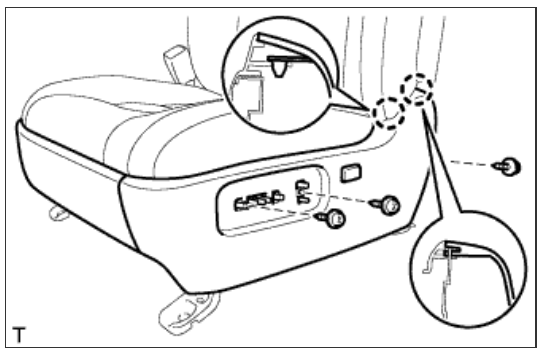


d. Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

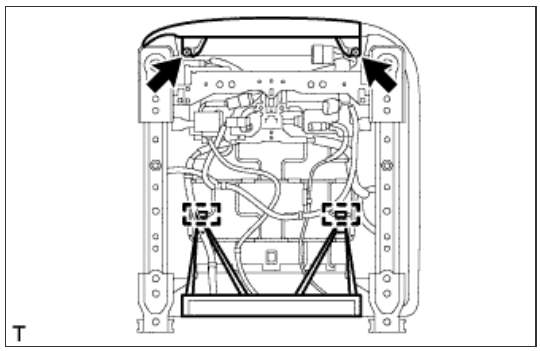


8. INSTALL RECLININ POWER SEAT SWITCH NC

a. Attach the 2 claws to install the knob.

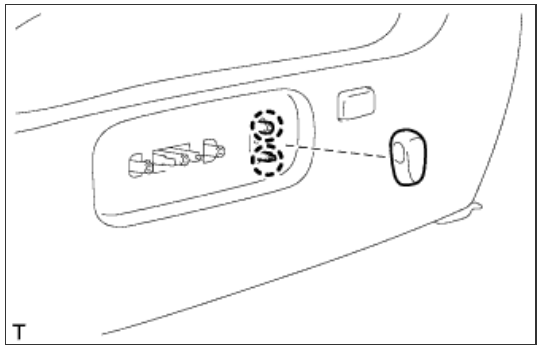

. INSTALL SLIDE AND VERTICAL POWER SEAT SWITCH NO

a. Attach the 2 claws to install the knob.

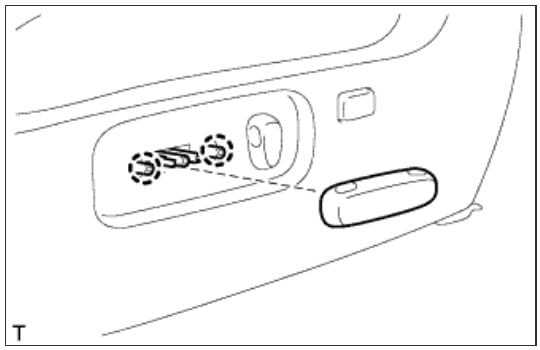

10. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL FRONT SEAT CUSHION HEATER ASSEMBLY LH

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

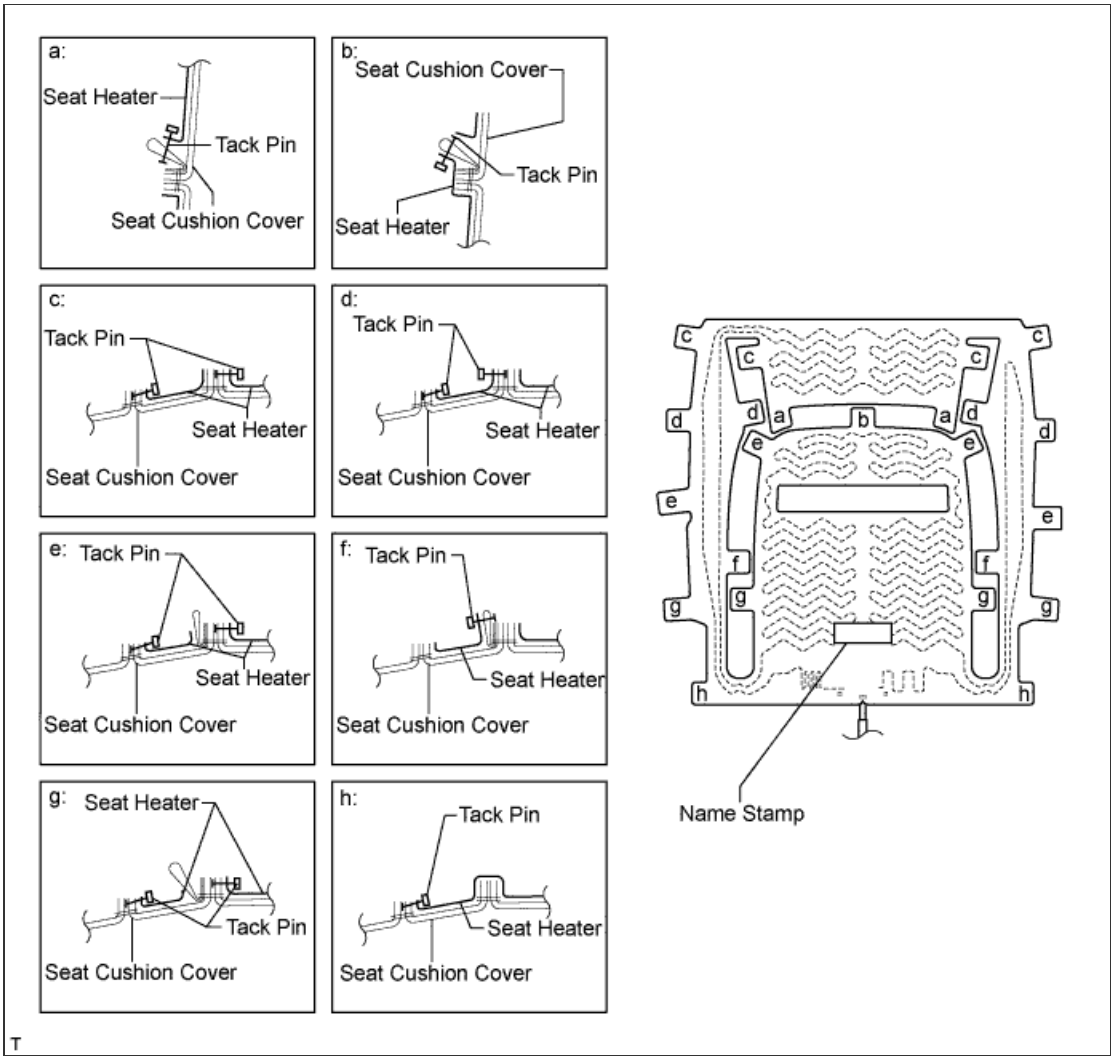


T

2. INSTALL FRONT SEPARATE TYPE SEAT CUSHION COVER

a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.

NOTICE:


- **Be careful not to damage the cover.**
- **When installing the hog rings, avoid wrinkling the cover.**

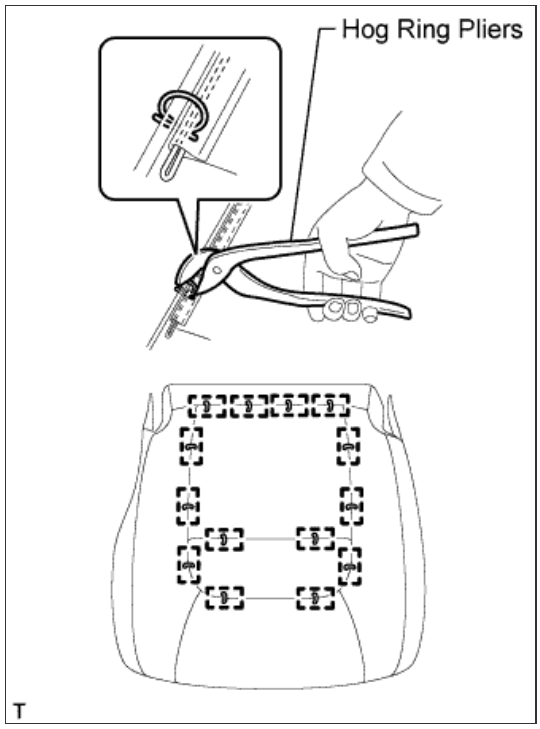


3. INSTALL SEAT CUSHION COVER WITH PAD

a. Attach the hooks to install the seat cushion cover with pad.

b. Bend the 2 seat frame claws downward.

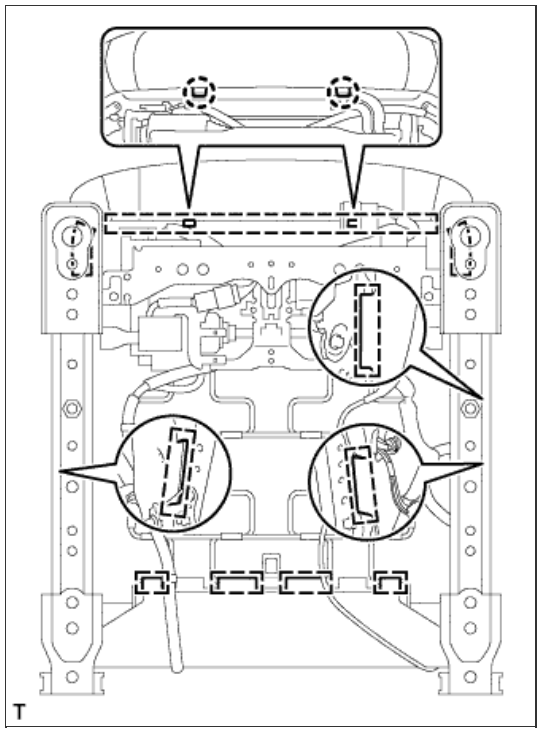


c. Connect the seat heater control connector and attach the wire harness clamp.

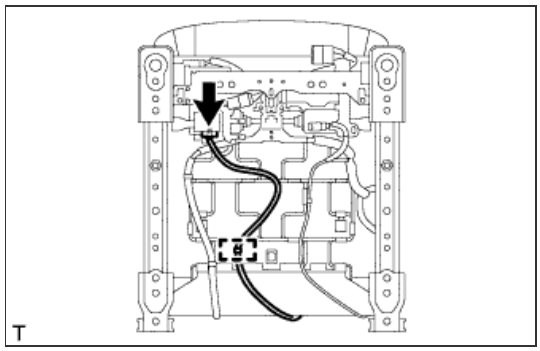


d. for Front asenger Side:

i. Attach the 2 clamps to install the seat belt warning sensor connector.


ii. Connect the seat belt warning sensor connector.

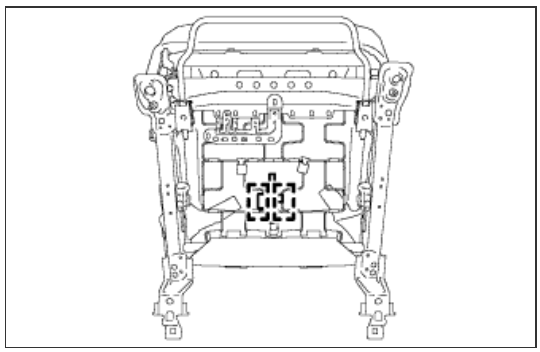

e. Connect the seat heater connector and attach the 2 wire harness clamps.

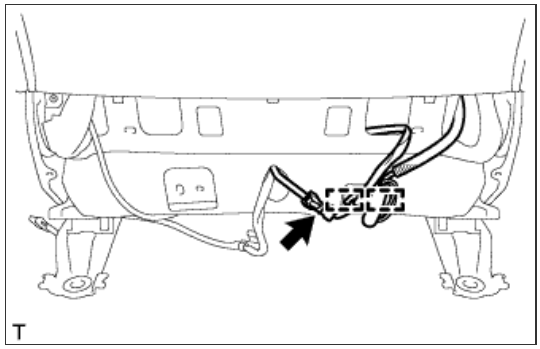

f. Install the 2 clips.

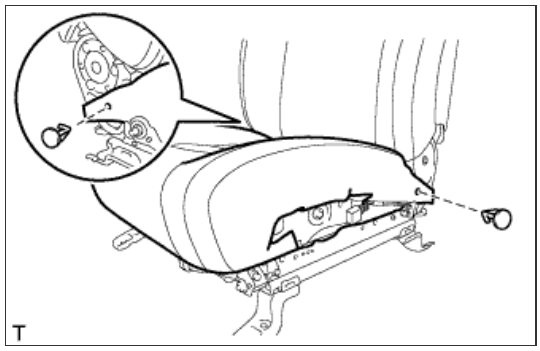


4. INSTALL FRONT POWER SEAT SWITCH LH

a. Install the switch with the 3 screws.

b. w/ Seat osition Memory System:
Connect the 2 connectors.


c. w/o Seat osition Memory System:
Connect the connector.

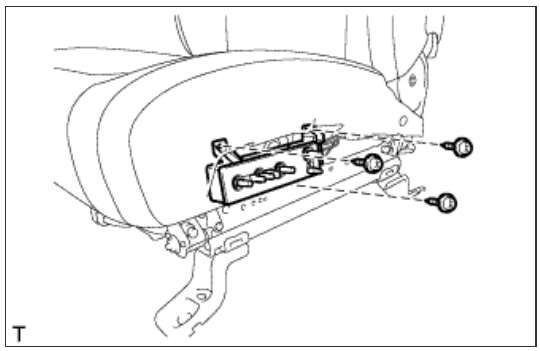

5. INSTALL FRONT INNER SEAT CUSHION SHIELD LH

a. Attach the 2 claws and clip to install the cushion shield.

b. Install the screw.

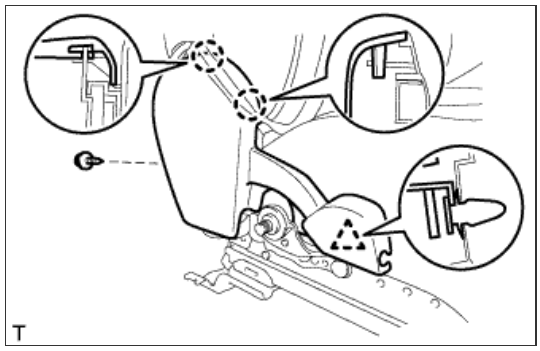

6. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.

b. Connect the connectors and attach the clamps.

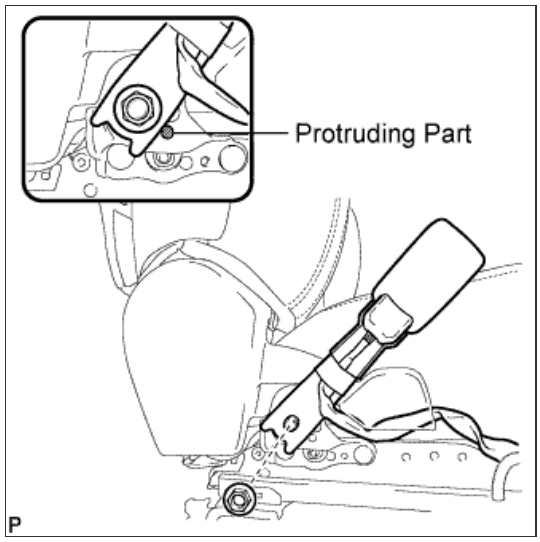


7. INSTALL FRONT SEAT CUSHION SHIELD LH

a. for Driver Side:
Connect the lumbar switch connectors.


b. Attach the 2 claws to install the cushion shield.

c. Install the 3 screws.

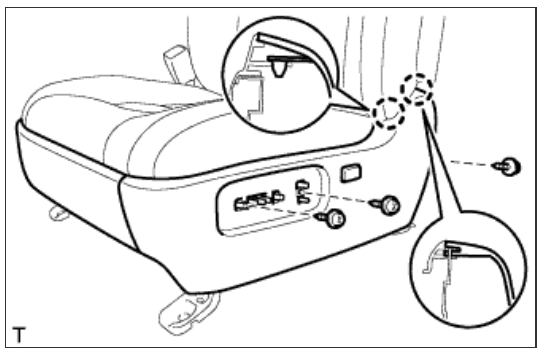


d. Install the 2 screws.

e. Attach the 2 rubber bands to the hooks.

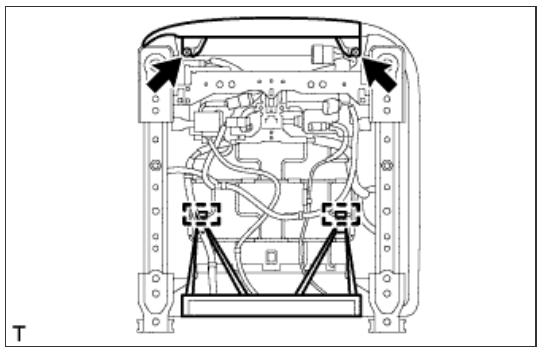


8. INSTALL RECLININ POWER SEAT SWITCH NC

a. Attach the 2 claws to install the knob.

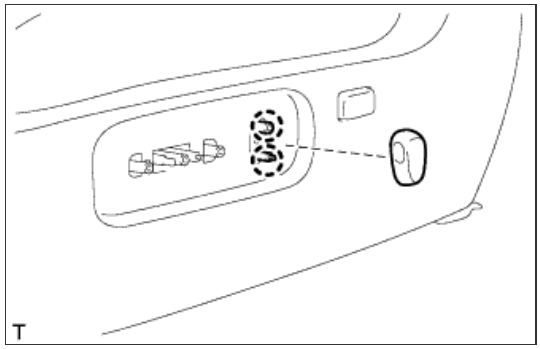

. INSTALL SLIDE AND VERTICAL POWER SEAT SWITCH NO


a. Attach the 2 claws to install the knob.

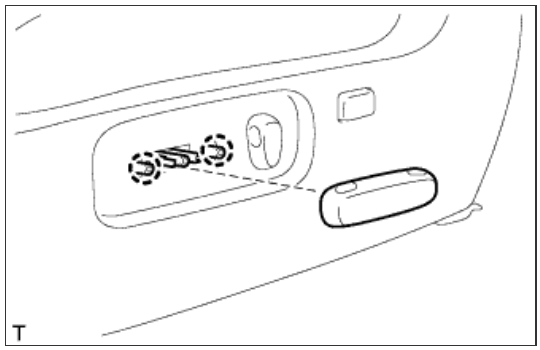


10. INSTALL FRONT SEAT ASSEMBLY LH

a. Install the front seat assembly (Click here).

for Preparation Click here

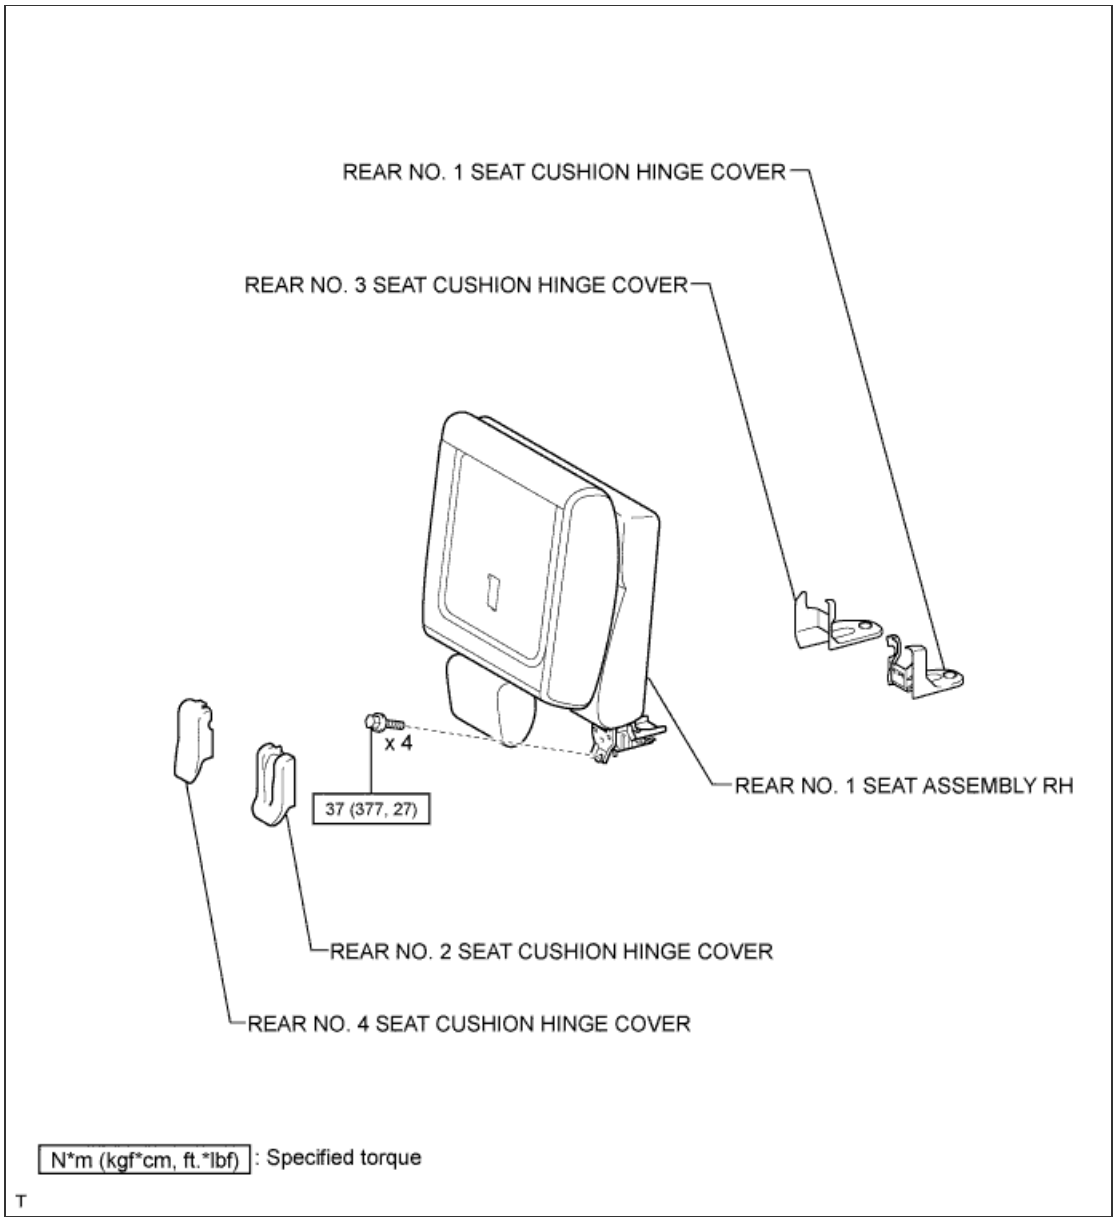

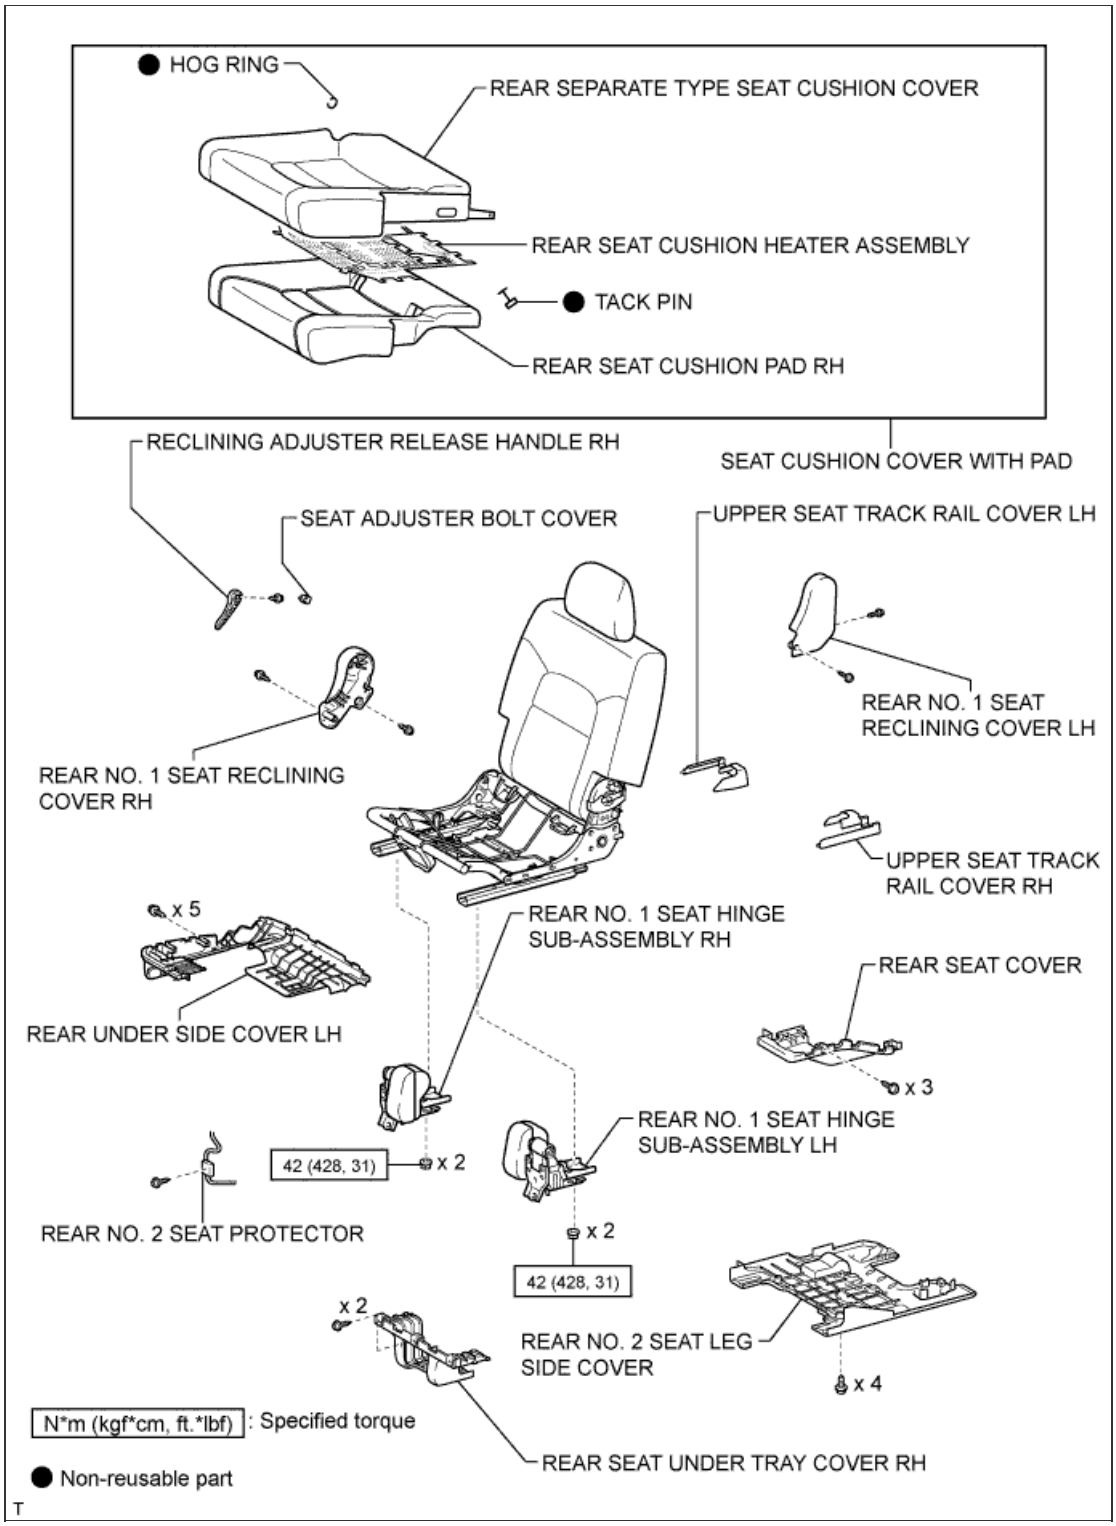
HOG RING
REAR SEPARATE TYPE SEAT CUSHION COVER
REAR SEAT CUSHION HEATER ASSEMBLY
TACK PIN
REAR SEAT CUSHION PAD RH
SEAT CUSHION COVER WITH PAD
RECLINING ADJUSTER RELEASE HANDLE RH
SEAT ADJUSTER BOLT COVER
UPPER SEAT TRACK RAIL COVER LH
REAR NO. 1 SEAT RECLINING COVER LH
REAR NO. 1 SEAT RECLINING COVER RH
UPPER SEAT TRACK RAIL COVER RH
x 5
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH
REAR SEAT COVER
REAR UNDER SIDE COVER LH
x 3
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH
42 (428, 31)
x 2
REAR NO. 2 SEAT PROTECTOR
x 2
42 (428, 31)
x 2
REAR NO. 2 SEAT LEG SIDE COVER
x 4
N*m (kgf*cm, ft.*lbf) : Specified torque
REAR SEAT UNDER TRAY COVER RH
Non-reusable part
T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY RH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

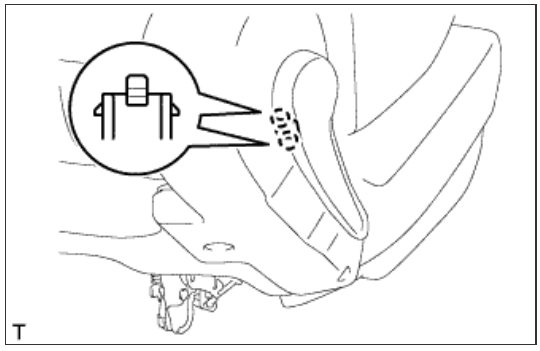

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE RH


a. Remove the screw and release handle.

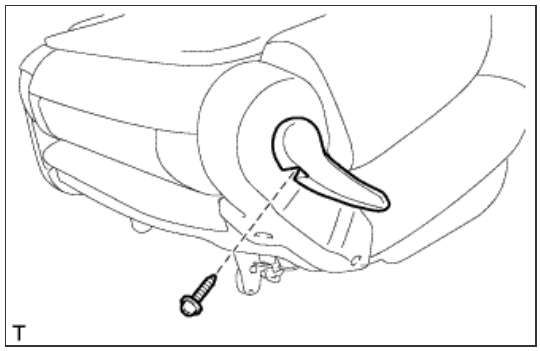

4. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

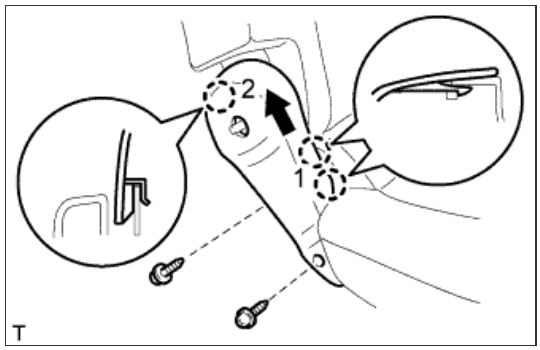

5. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

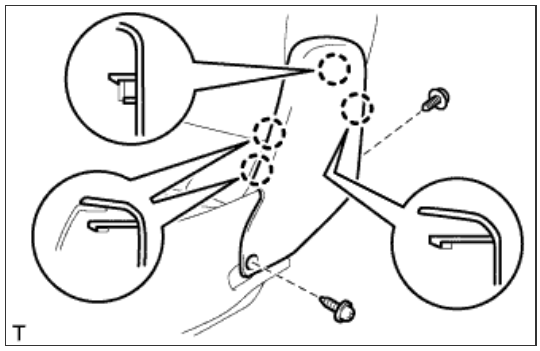


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

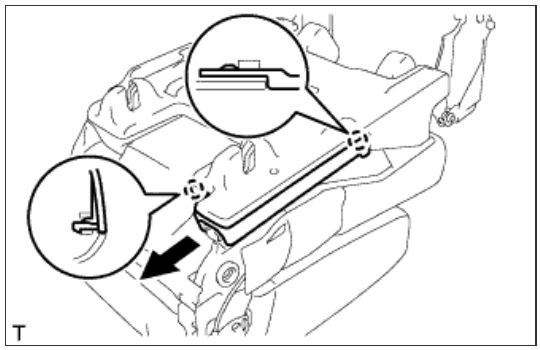


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

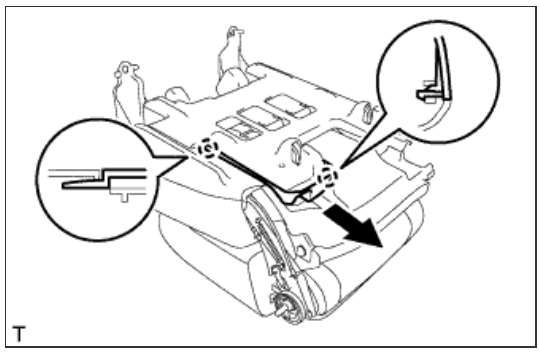


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 3 claws.

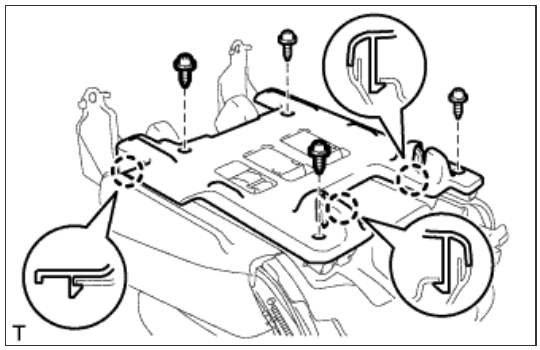


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

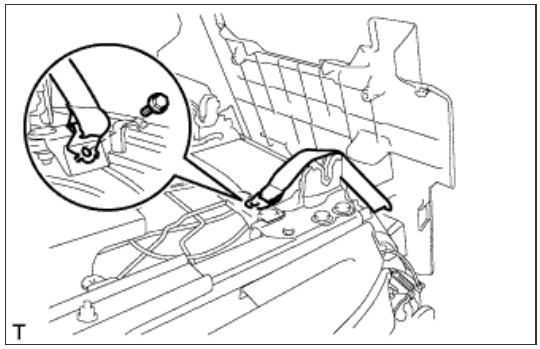

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

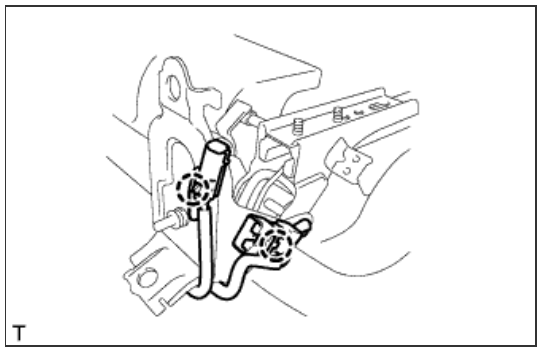

c. Using a clip remover, remove the clip.


d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove the wire harness.

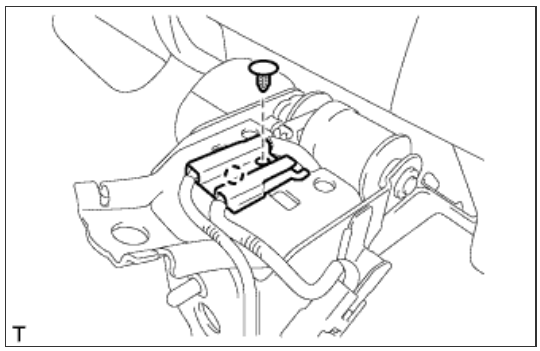

10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Remove the 2 nuts and hinge.

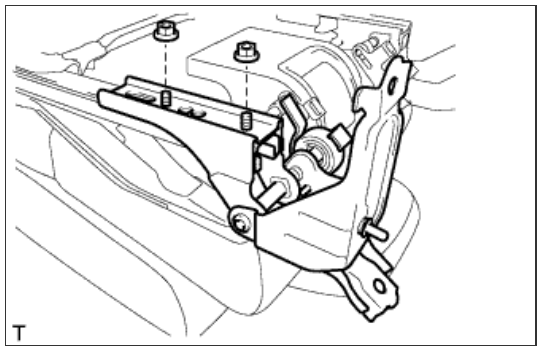


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

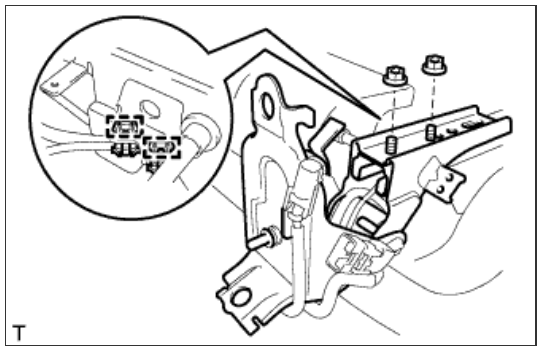


d. Detach the cable clamp and disconnect the cable.

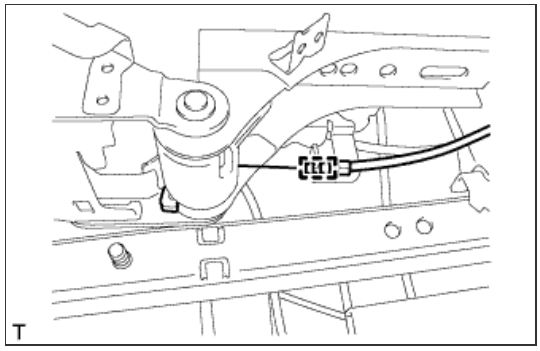


12. REMOVE REAR SEAT COVER

a. Detach the 12 claws.

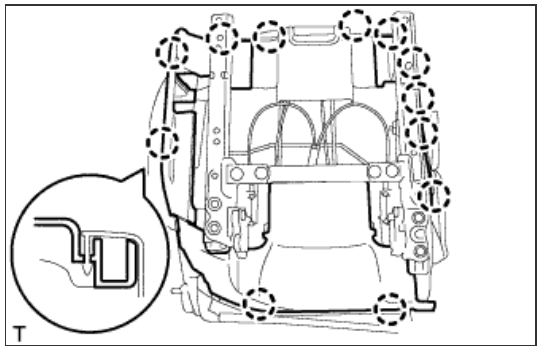

b. Remove the 3 screws.


c. Detach the 2 claws and remove the cover.

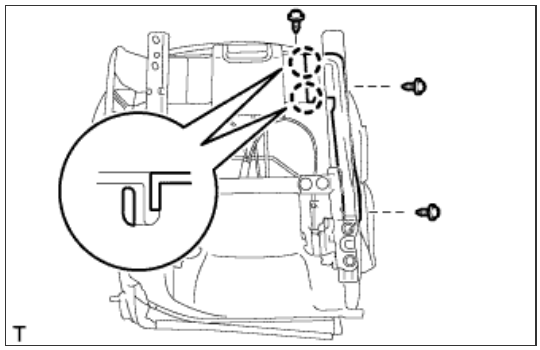

13. REMOVE REAR UNDER SIDE COVER LH

a. Remove the 5 screws.


b. Detach the clip and 2 claws, and remove the cover.

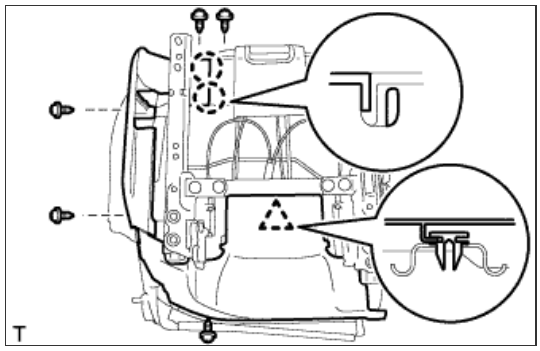

14. REMOVE REAR SEAT UNDER TRAY COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

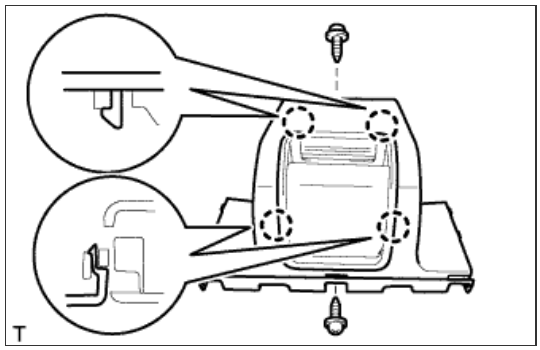

15. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.


ii. Remove the side airbag wire harness through the hole in the seat cushion.

b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

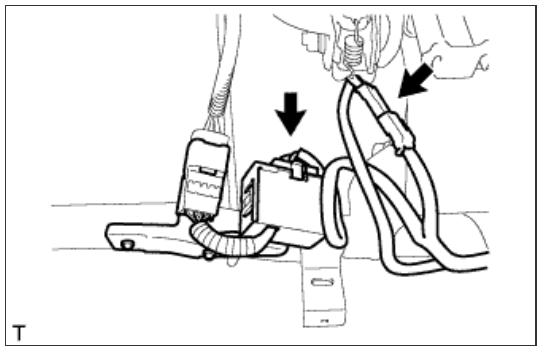


ii. Remove the seatback heater wire harness through the hole in the seat cushion.

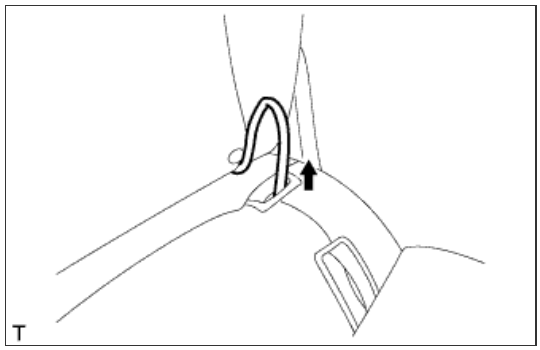


c. Remove the seat cushion cover with pad.

16. REMOVE REAR SEPARATE TYPE SEAT CUSHION COVER

a. Detach the 3 pieces of fastening tape.

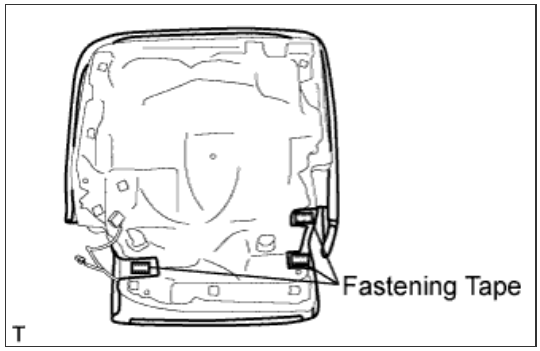


b. Remove the hog rings and cover.

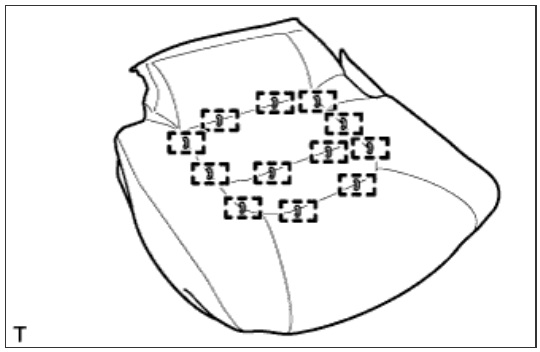

17. REMOVE REAR SEAT CUSHION HEATER ASSEMBLY

a. Cut off the tack pins which fasten the seat heater to the seat cushion cover, and then remove the seat cushion heater from the seat cushion cover.

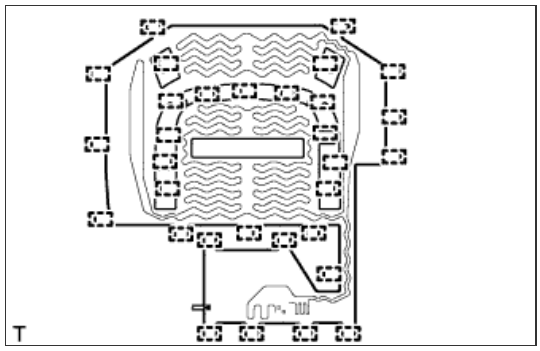
T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY RH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

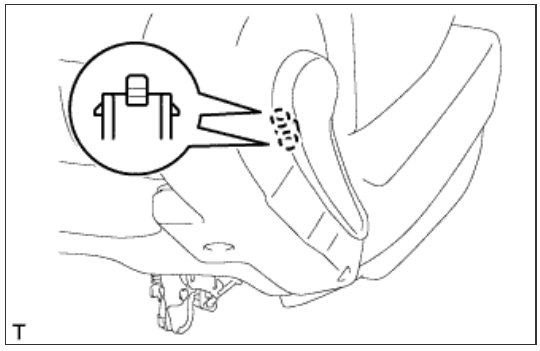

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE RH


a. Remove the screw and release handle.

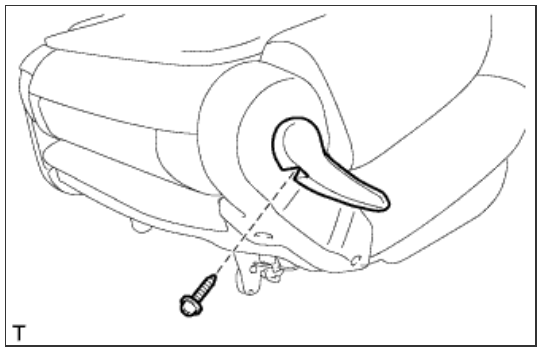

4. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

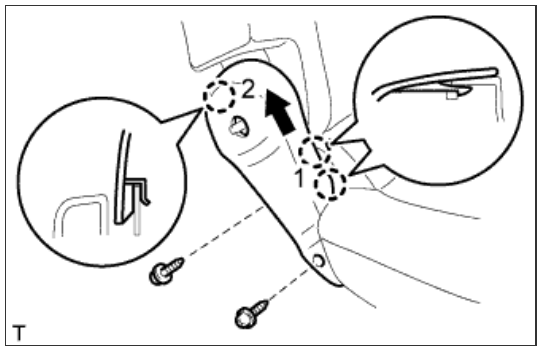

5. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

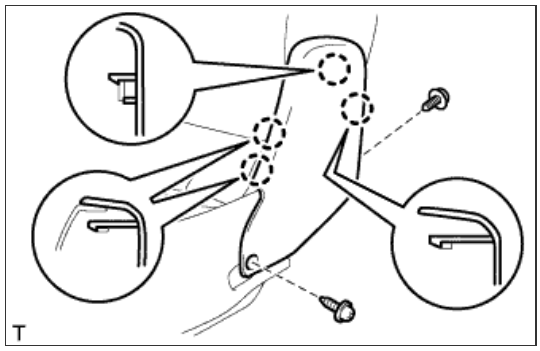


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

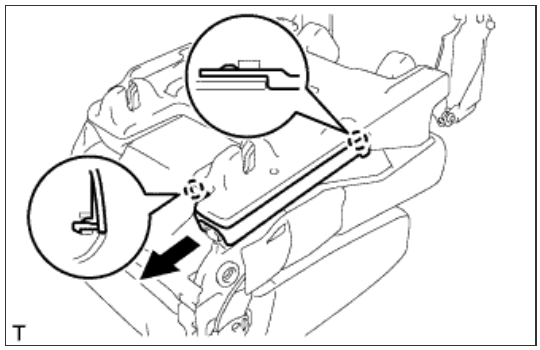


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

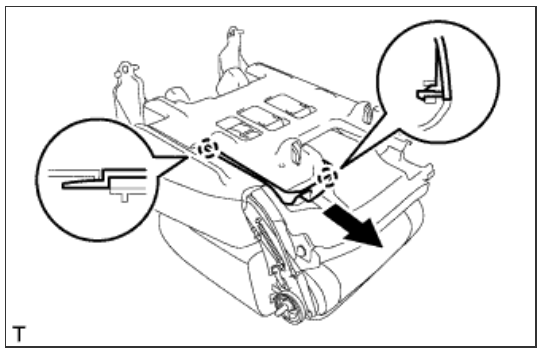


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 3 claws.

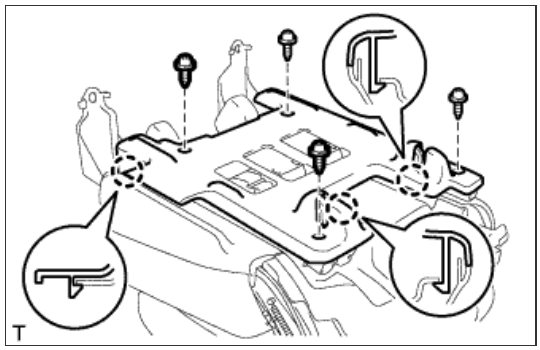


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

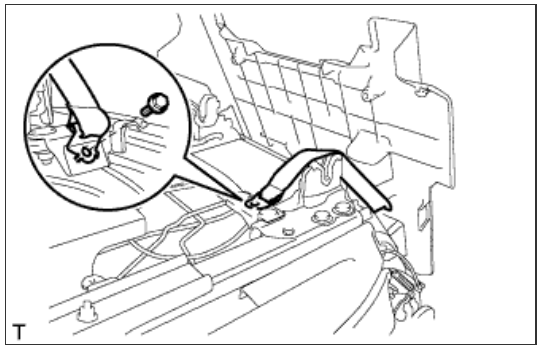

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

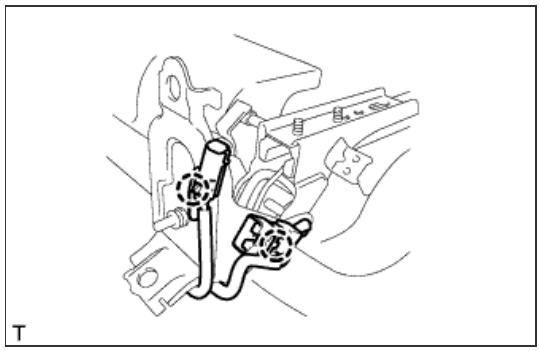

c. Using a clip remover, remove the clip.


d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove the wire harness.

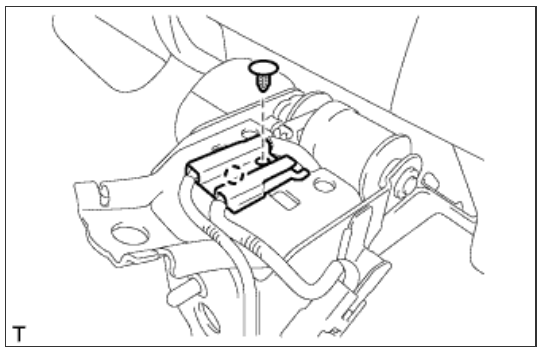

10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Remove the 2 nuts and hinge.

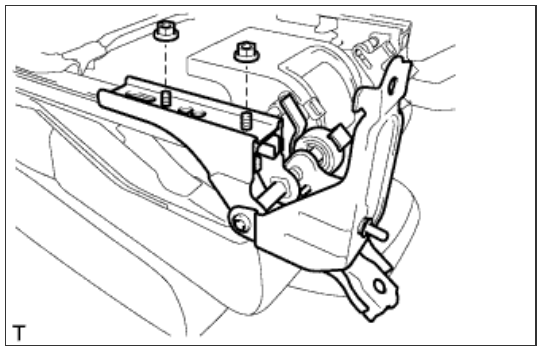


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

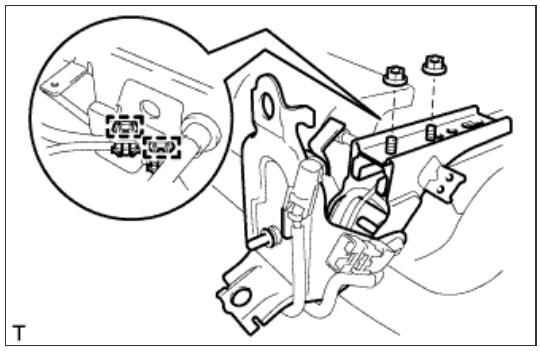


d. Detach the cable clamp and disconnect the cable.

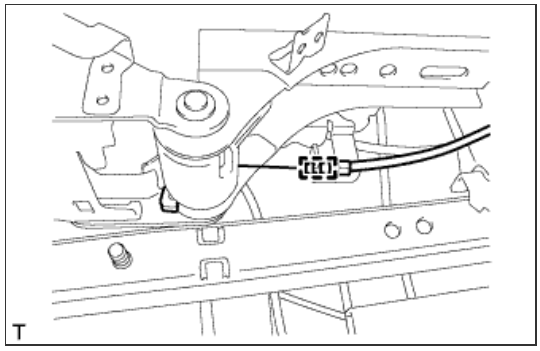


12. REMOVE REAR SEAT COVER

a. Detach the 12 claws.

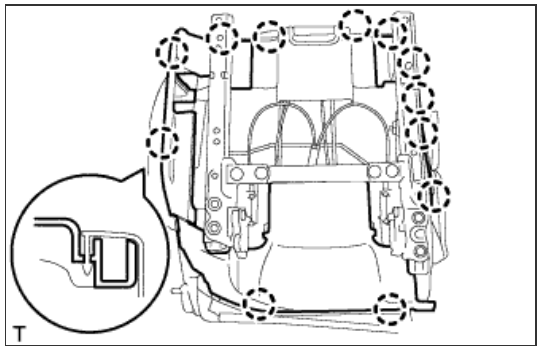

b. Remove the 3 screws.


c. Detach the 2 claws and remove the cover.

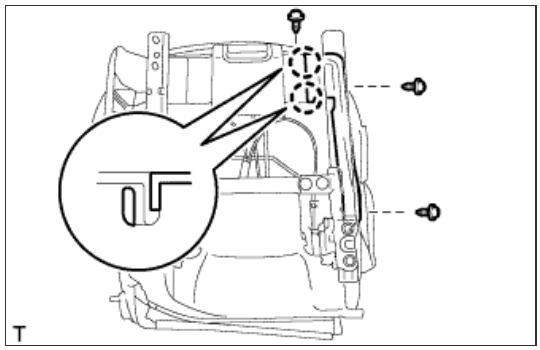

13. REMOVE REAR UNDER SIDE COVER LH

a. Remove the 5 screws.


b. Detach the clip and 2 claws, and remove the cover.

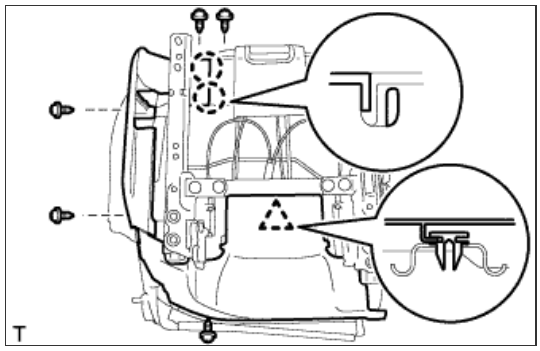

14. REMOVE REAR SEAT UNDER TRAY COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

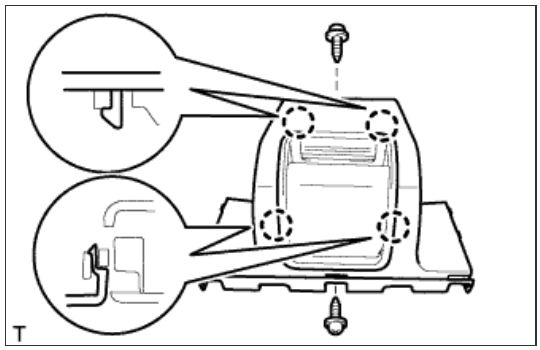

15. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.


ii. Remove the side airbag wire harness through the hole in the seat cushion.

b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

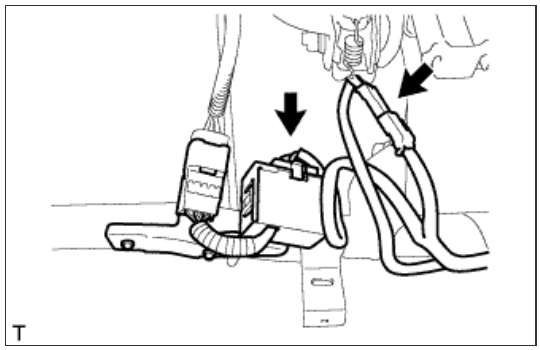


ii. Remove the seatback heater wire harness through the hole in the seat cushion.

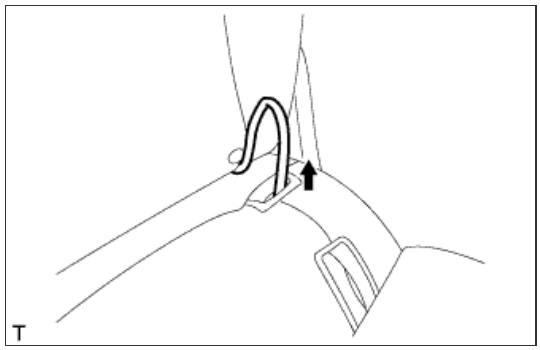


c. Remove the seat cushion cover with pad.

16. REMOVE REAR SEPARATE TYPE SEAT CUSHION COVER

a. Detach the 3 pieces of fastening tape.

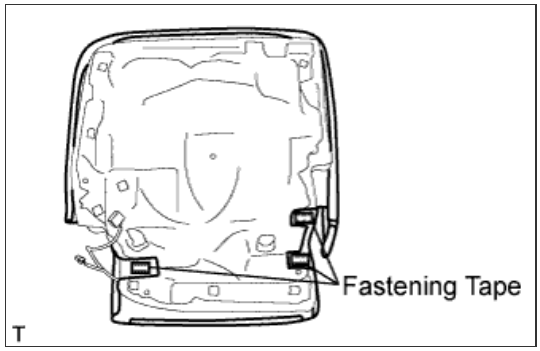


b. Remove the hog rings and cover.

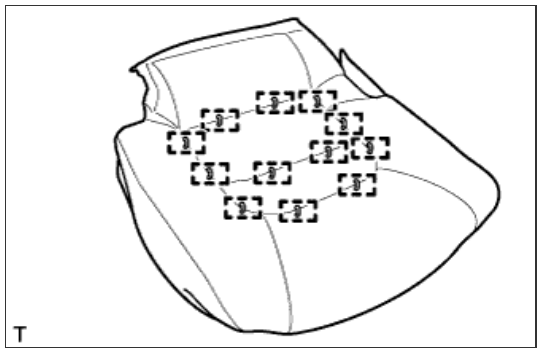

17. REMOVE REAR SEAT CUSHION HEATER ASSEMBLY

a. Cut off the tack pins which fasten the seat heater to the seat cushion cover, and then remove the seat cushion heater from the seat cushion cover.

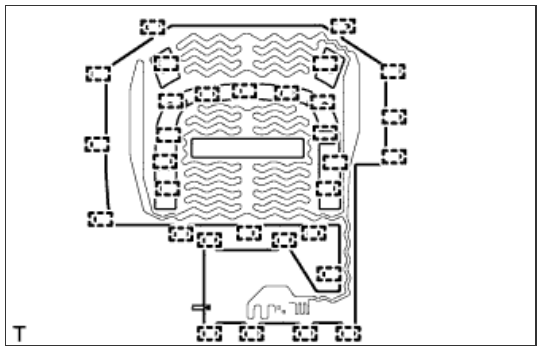
T

for Preparation Click here

1. INSPECT REAR SEAT CUSHION HEATER ASSE

a. Heat the thermostat with a light.


b. Check the seat cushion heater.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A-1 - B-1	Seat cushion heater temperature 25 C (77)	3.05 to 3.65 Ω
A-4 - B-2		
A-1 - A-4		
A-2 - A-3		8 to 12 kΩ

f the result is not as specified, replace the seat cushion heater assembly.

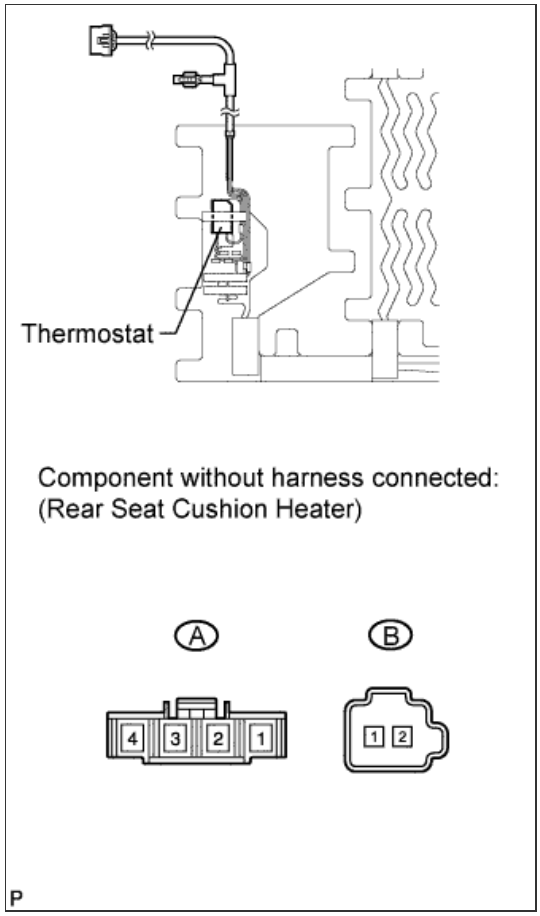

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT CUSHION HEATER ASSEMBLY

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

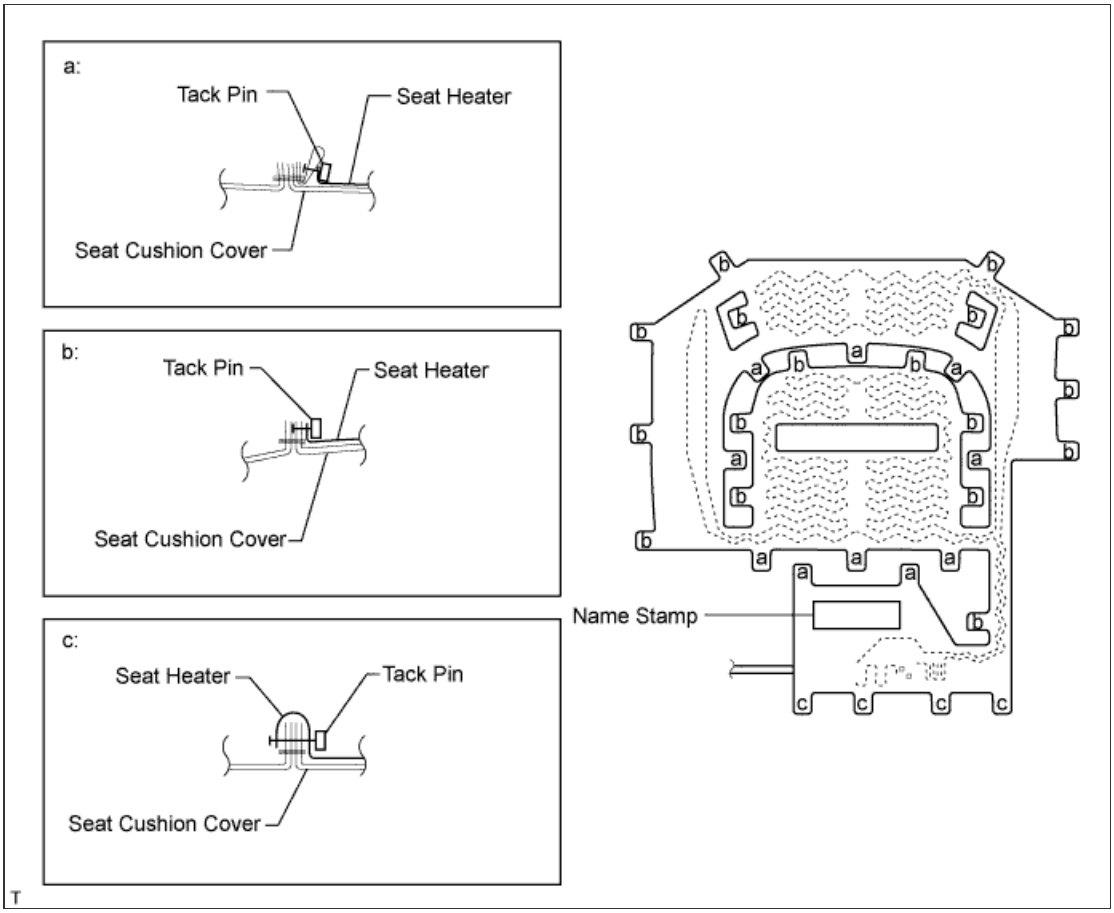


2. INSTALL REAR SEPARATE TYPE SEAT CUSHION COVER

a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.


NOTICE:

- **Be careful not to damage the cover.**

- **When installing the hog rings, avoid wrinkling the cover.**

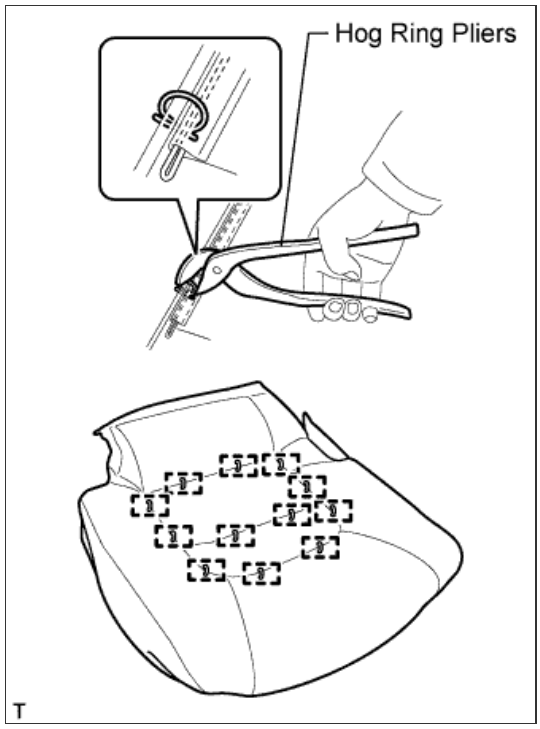

b. Attach the 3 pieces of fastening tape.

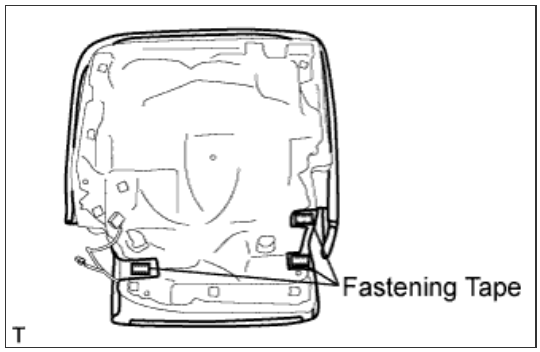


3. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.

b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seat cushion.


c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seat cushion.

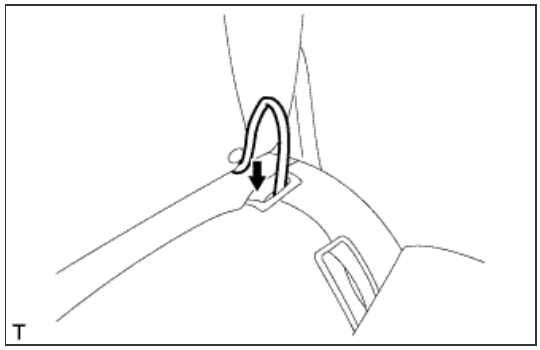

ii. Connect the 2 seat heater connectors.


d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

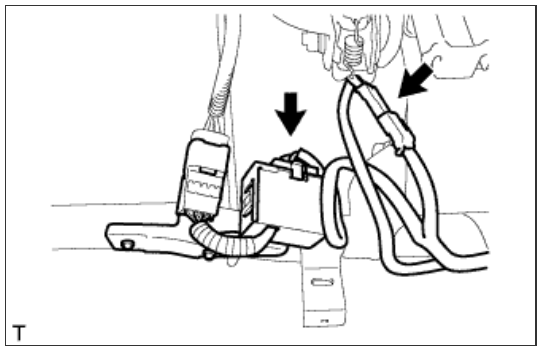

4. INSTALL REAR SEAT UNDER TRAY COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

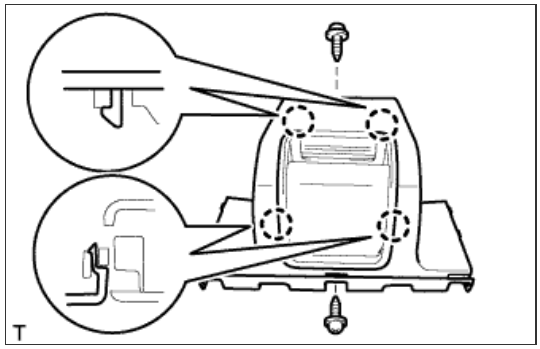

5. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and clip to install the cover.


b. Install the 5 screws.

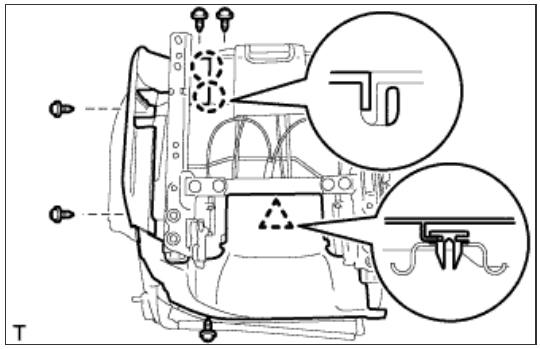


6. INSTALL REAR SEAT COVER

a. Attach the 2 claws to install the cover.

b. Install the 3 screws.

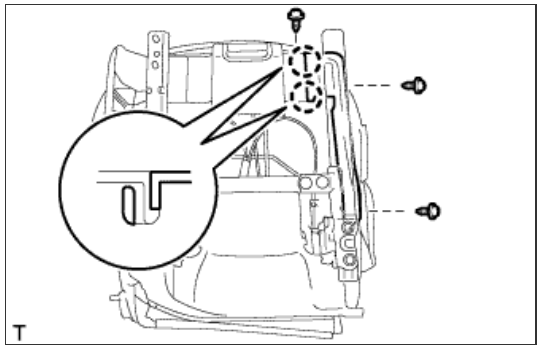


c. Attach the 12 claws.

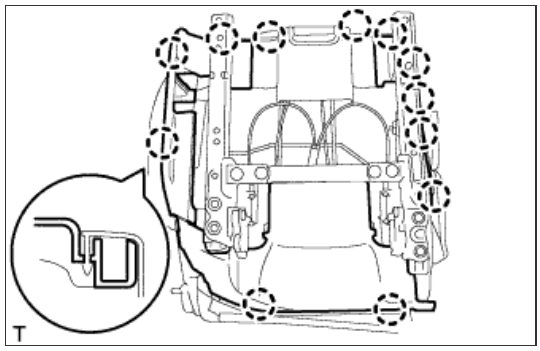

7. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Attach the cable clamp to connect the cable.

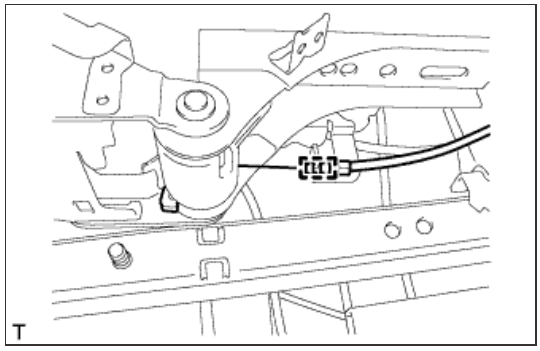


b. Install the hinge with the 2 nuts.

Tor ue:
42 N m 42 kgf cm , 31 ft. lbf

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.


d. w/ Seat Heater System:
Attach the wire harness clamp.

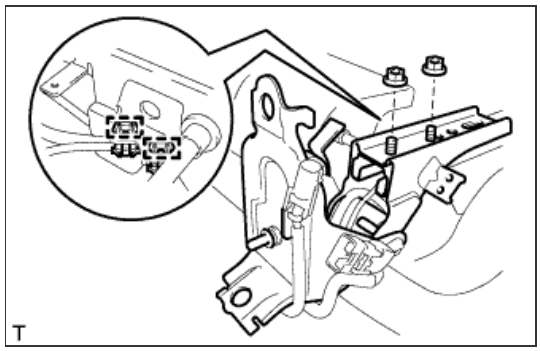

8. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Install the hinge with the 2 nuts.

Tor ue:
42 N m 42 kgf cm , 31 ft. lbf

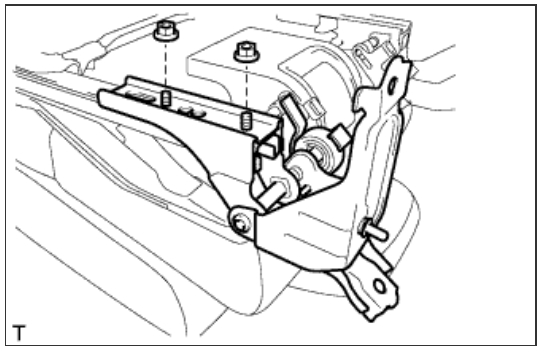


. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach the 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

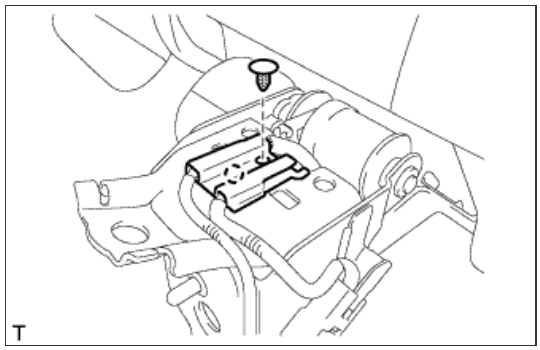


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

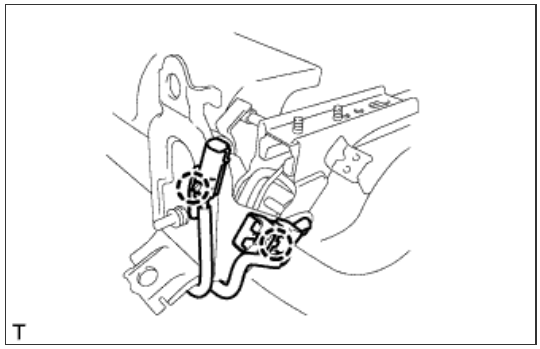


10. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

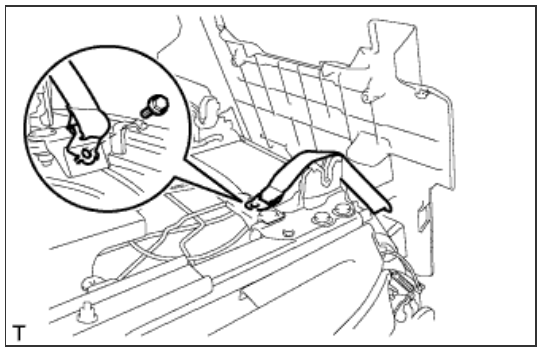


b. Attach the 3 claws to install the seat leg side cover.

c. Install the 4 screws.

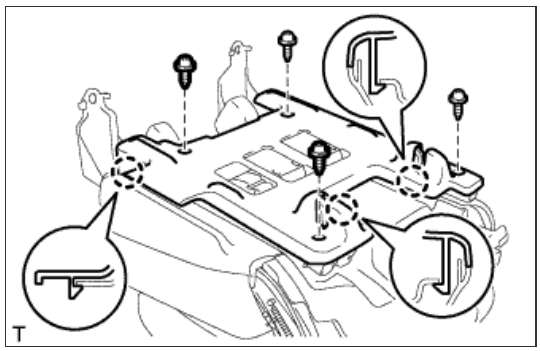


11. INSTALL UPPER SEAT TRAC RAIL COVER RH

a. Attach the 2 claws to install the cover.

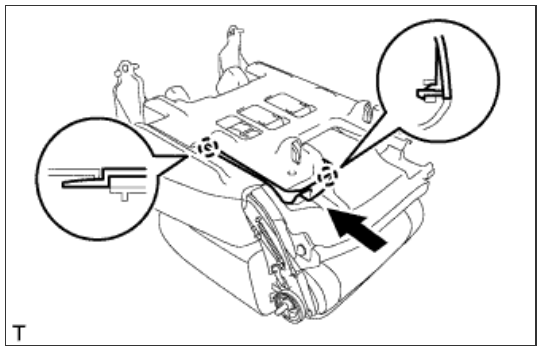

12. INSTALL UPPER SEAT TRAC RAIL COVER LH


a. Attach the 2 claws to install the cover.

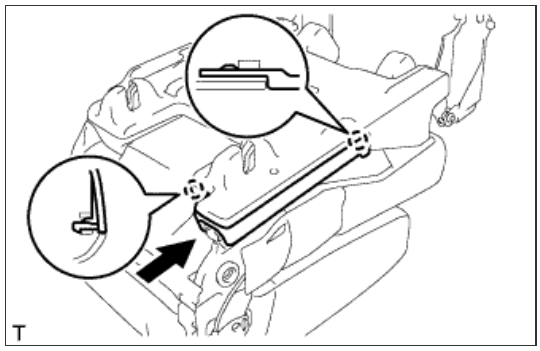

13. INSTALL REAR NO. 1 SEAT RECLINING COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

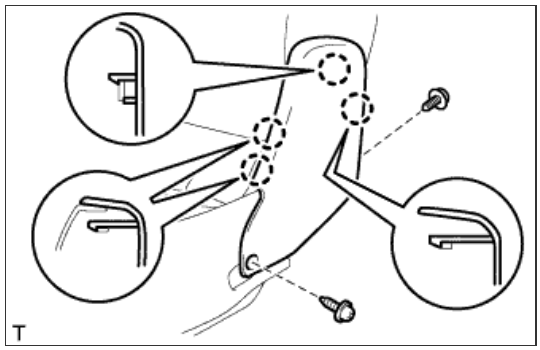

14. INSTALL REAR NO. 1 SEAT RECLINING COVER RH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

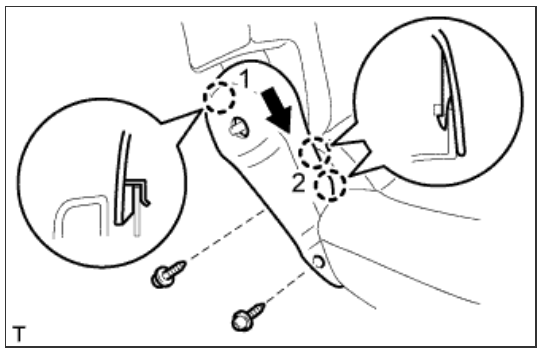


15. INSTALL RECLINING AD USTER RELEASE HANDLE RH

a. Install the release handle with the screw.

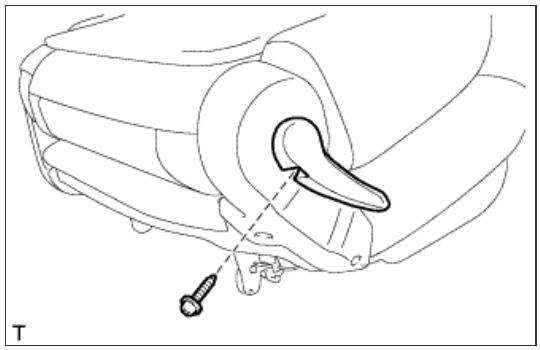

16. INSTALL SEAT AD USTER BOLT COVER

a. Attach the 2 claws to install the cover.

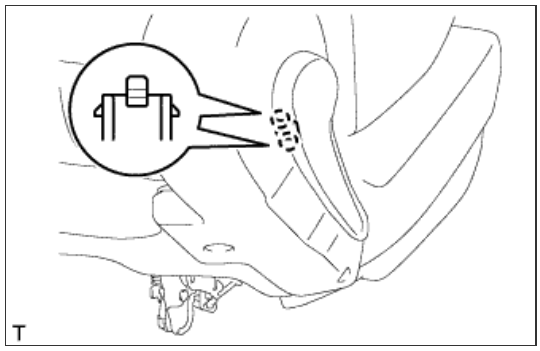

17. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. Install the rear No. 1 seat assembly (Click here).

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT CUSHION HEATER ASSEMBLY

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

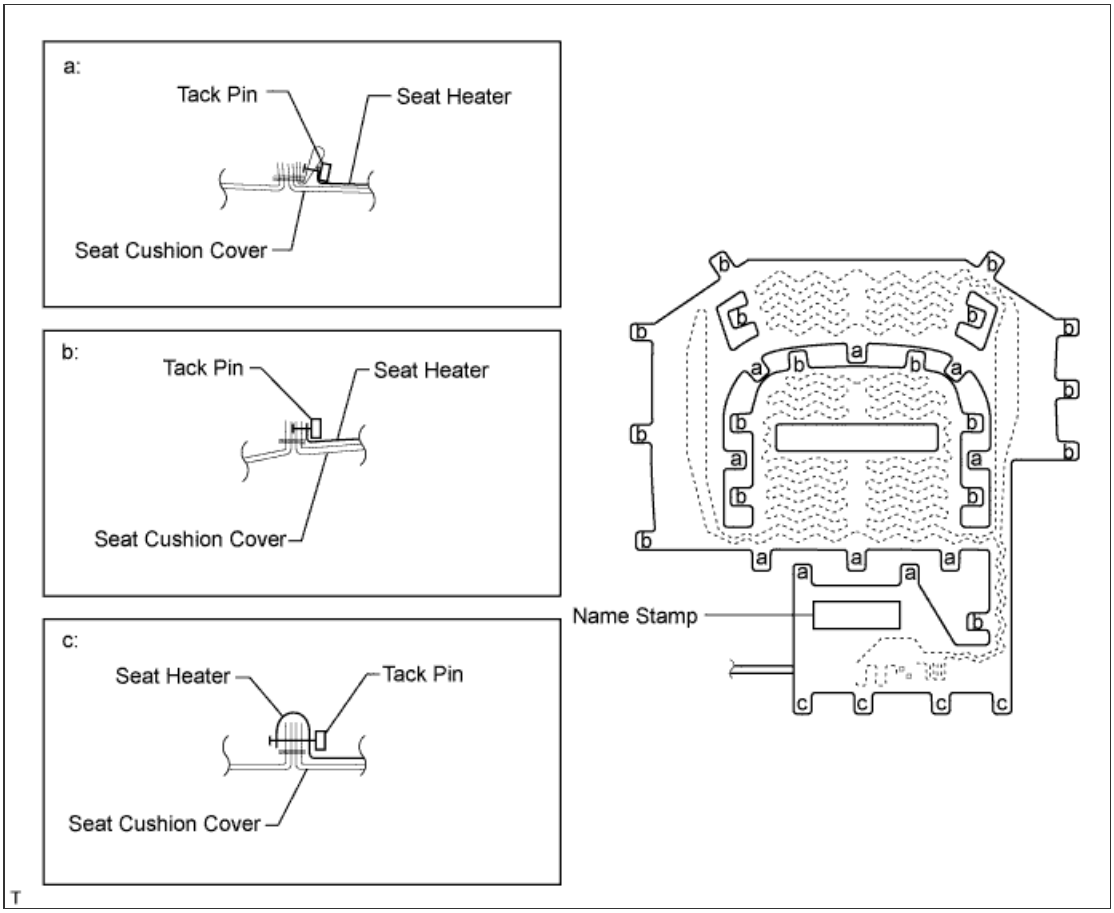


2. INSTALL REAR SEPARATE TYPE SEAT CUSHION COVER

a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.


NOTICE:

- **Be careful not to damage the cover.**

- **When installing the hog rings, avoid wrinkling the cover.**

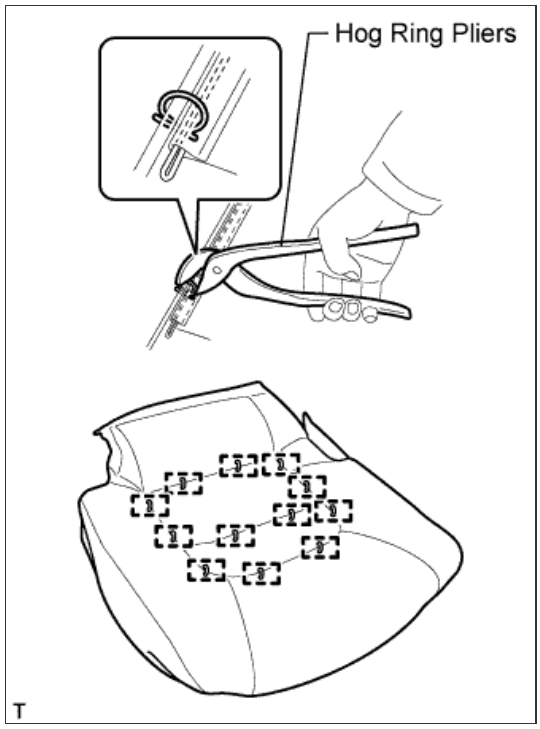

b. Attach the 3 pieces of fastening tape.

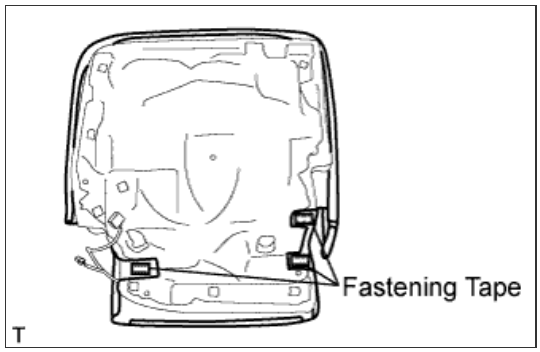


3. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.

b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seat cushion.


c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seat cushion.

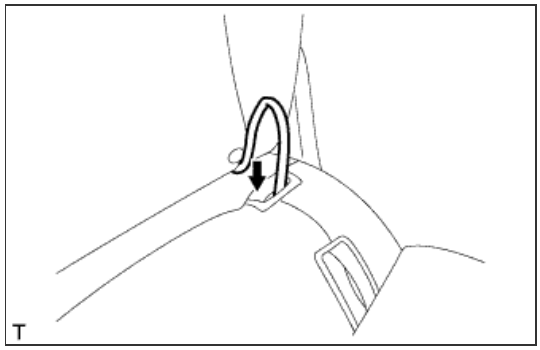

ii. Connect the 2 seat heater connectors.


d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

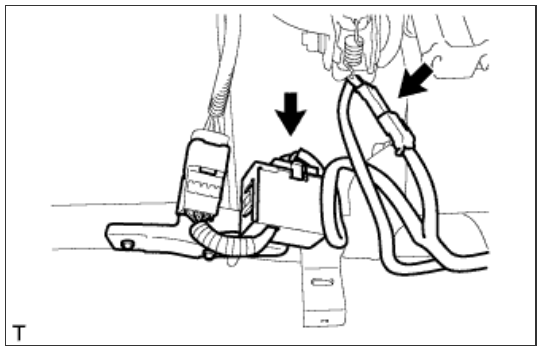

4. INSTALL REAR SEAT UNDER TRAY COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

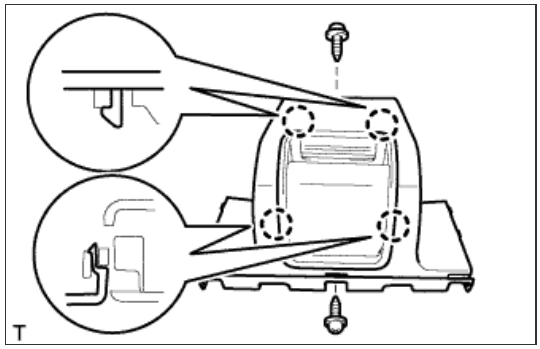

5. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and clip to install the cover.


b. Install the 5 screws.

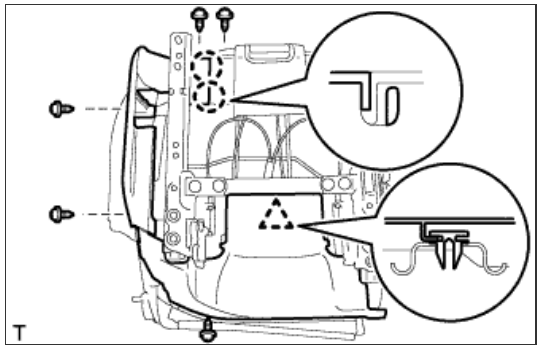


6. INSTALL REAR SEAT COVER

a. Attach the 2 claws to install the cover.

b. Install the 3 screws.

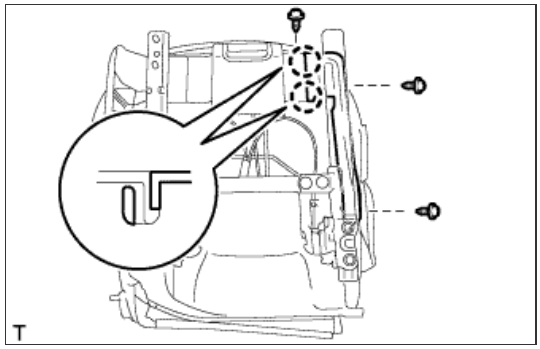


c. Attach the 12 claws.

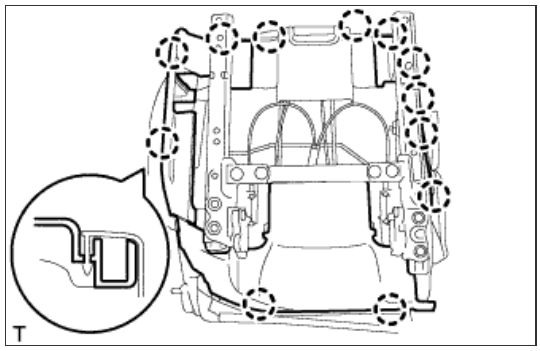

7. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Attach the cable clamp to connect the cable.

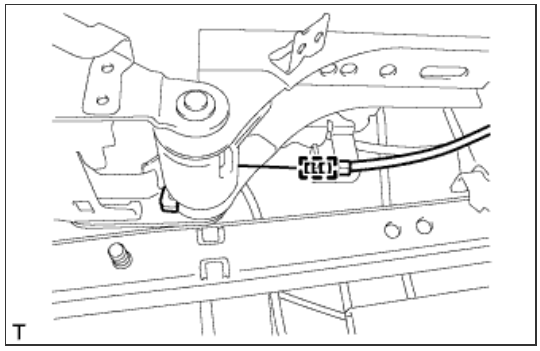


b. Install the hinge with the 2 nuts.

Tor ue:
42 N m 42 kgf cm , 31 ft. lbf

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.


d. w/ Seat Heater System:
Attach the wire harness clamp.

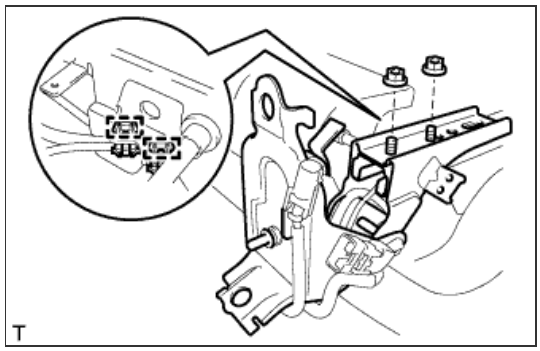

8. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Install the hinge with the 2 nuts.

Tor ue:
42 N m 42 kgf cm , 31 ft. lbf

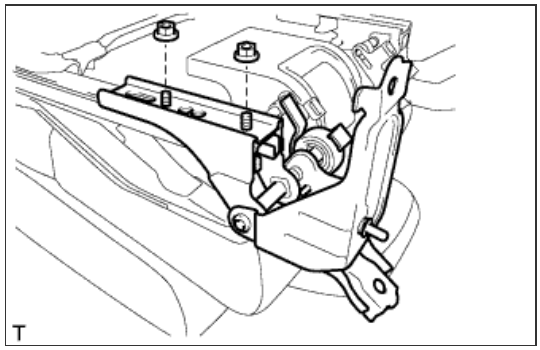


. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach the 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

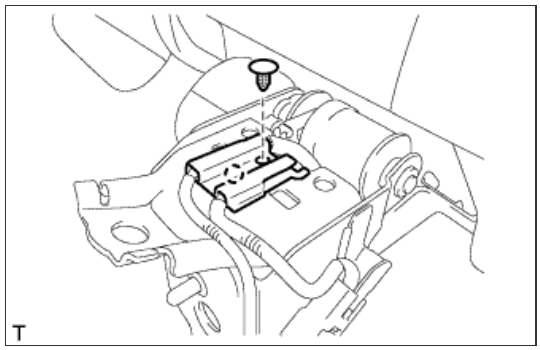


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

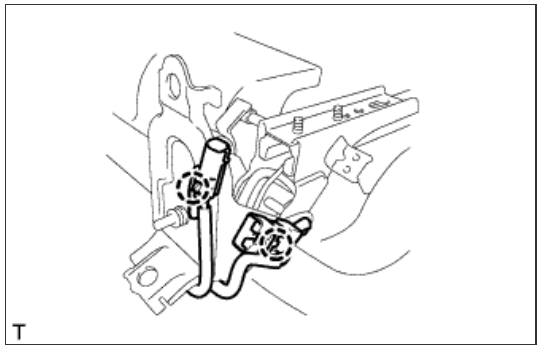


10. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

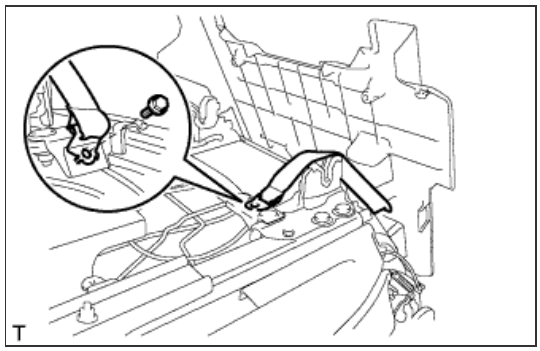


b. Attach the 3 claws to install the seat leg side cover.

c. Install the 4 screws.

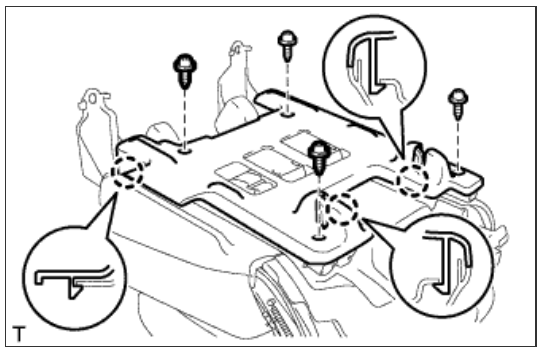


11. INSTALL UPPER SEAT TRAC RAIL COVER RH

a. Attach the 2 claws to install the cover.

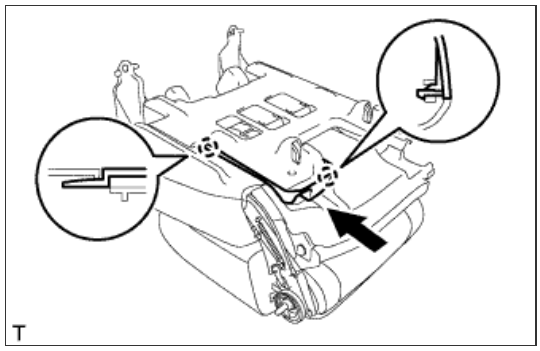

12. INSTALL UPPER SEAT TRAC RAIL COVER LH


a. Attach the 2 claws to install the cover.

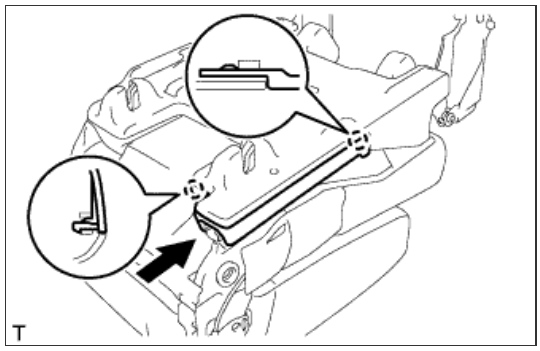

13. INSTALL REAR NO. 1 SEAT RECLINING COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

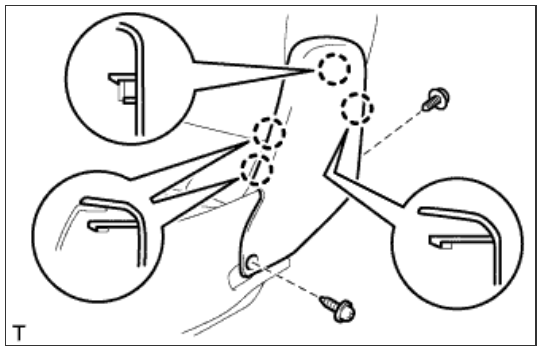

14. INSTALL REAR NO. 1 SEAT RECLINING COVER RH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

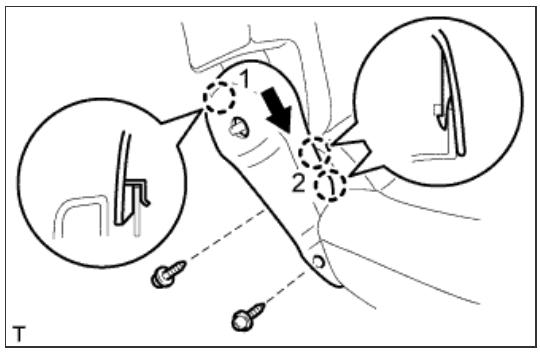


15. INSTALL RECLINING AD USTER RELEASE HANDLE RH

a. Install the release handle with the screw.

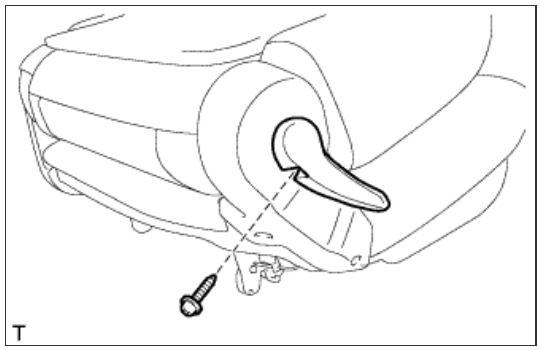

16. INSTALL SEAT AD USTER BOLT COVER


a. Attach the 2 claws to install the cover.

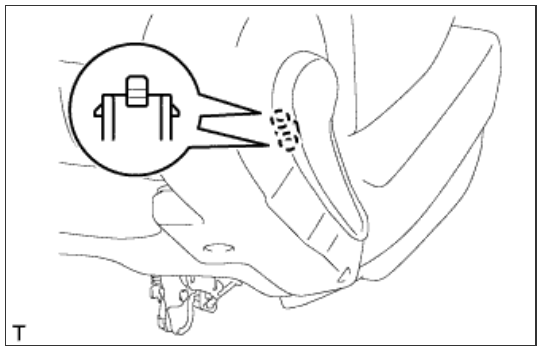


17. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. Install the rear No. 1 seat assembly (Click here).

for Preparation Click here

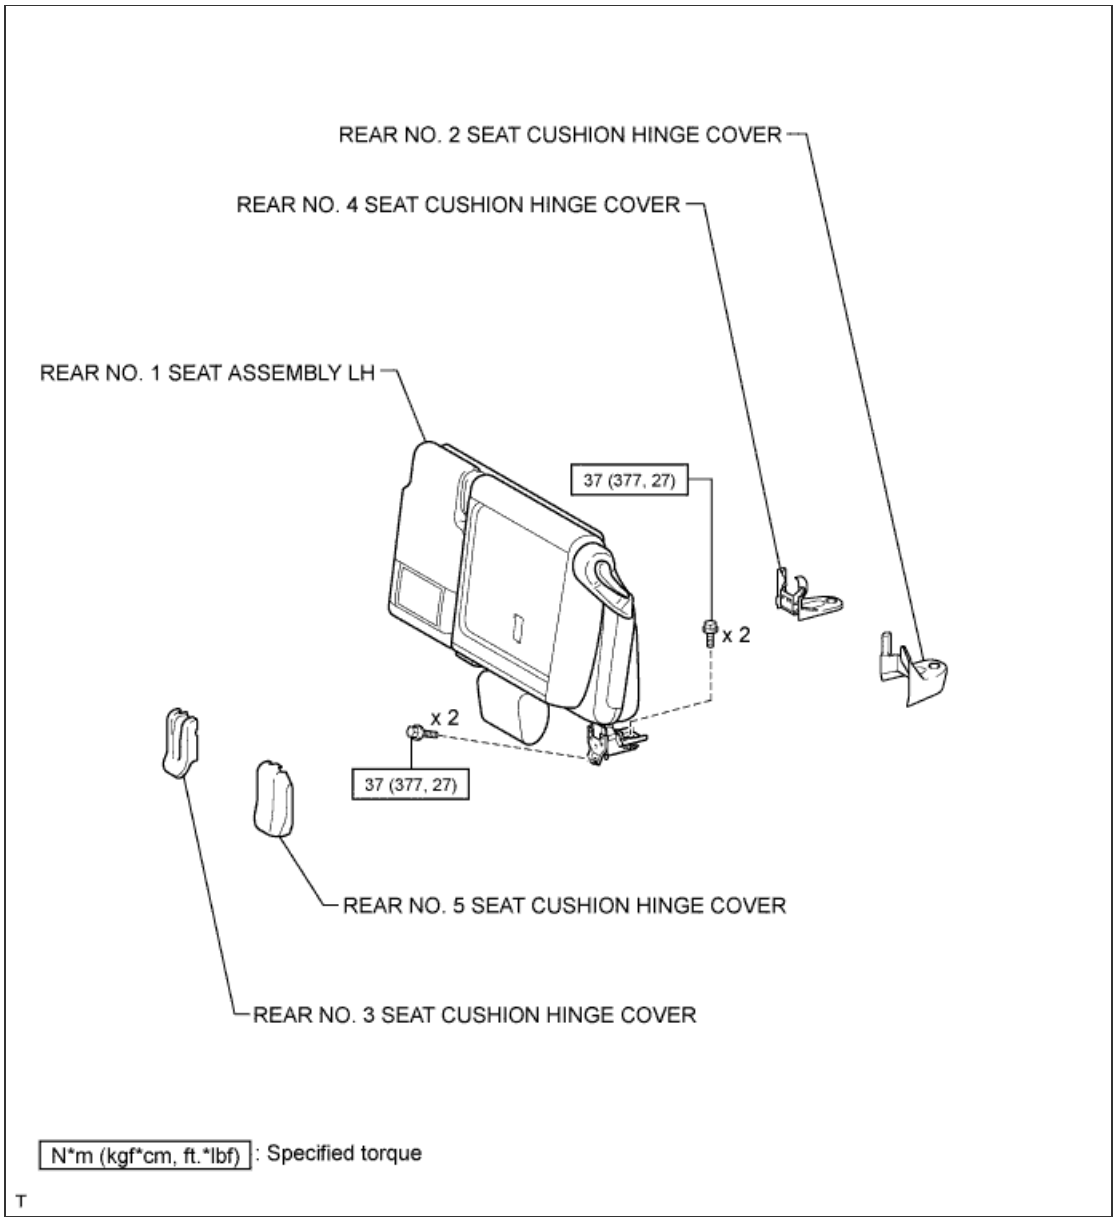

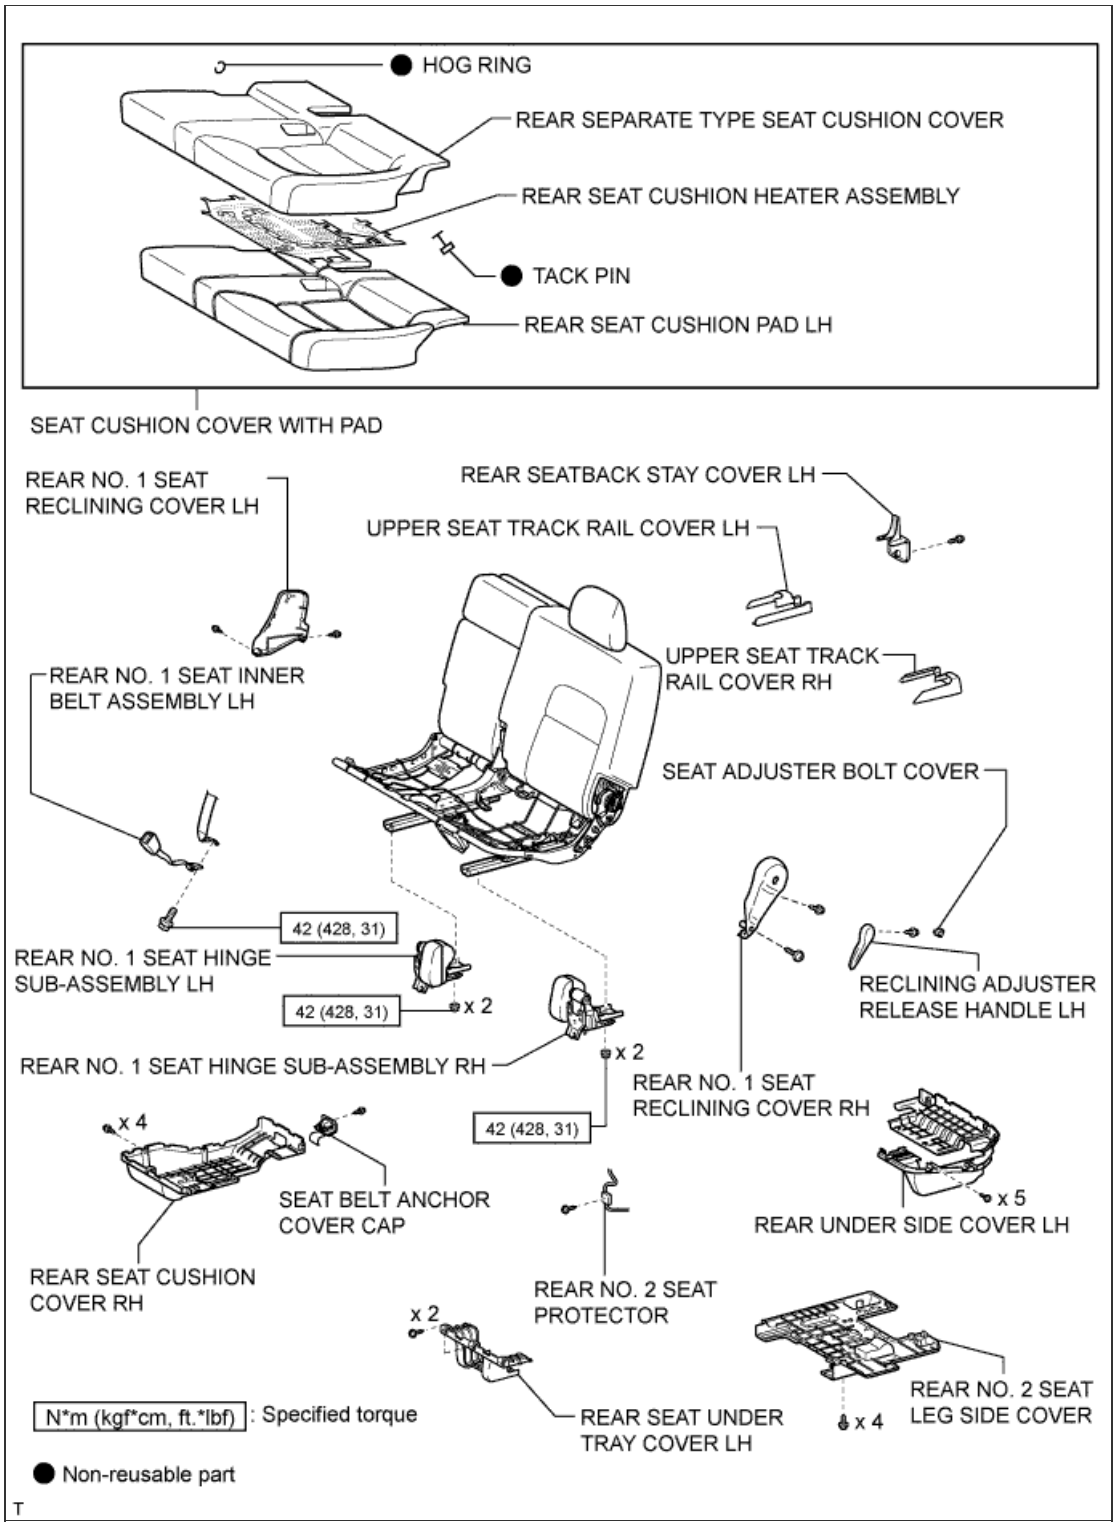
HOG RING
REAR SEPARATE TYPE SEAT CUSHION COVER
REAR SEAT CUSHION HEATER ASSEMBLY
TACK PIN
REAR SEAT CUSHION PAD LH
SEAT CUSHION COVER WITH PAD
REAR NO. 1 SEAT RECLINING COVER LH
REAR SEATBACK STAY COVER LH
UPPER SEAT TRACK RAIL COVER LH
UPPER SEAT TRACK RAIL COVER RH
REAR NO. 1 SEAT INNER BELT ASSEMBLY LH
SEAT ADJUSTER BOLT COVER
42 (428, 31)
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH
42 (428, 31)
x 2
RECLINING ADJUSTER RELEASE HANDLE LH
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH
x 2
REAR NO. 1 SEAT RECLINING COVER RH
x 4
42 (428, 31)
SEAT BELT ANCHOR COVER CAP
x 5
REAR UNDER SIDE COVER LH
REAR SEAT CUSHION COVER RH
REAR NO. 2 SEAT PROTECTOR
x 2
REAR NO. 2 SEAT LEG SIDE COVER
x 4
REAR SEAT UNDER TRAY COVER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
T

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY LH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

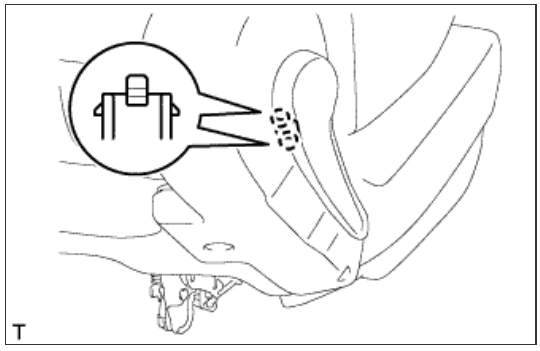

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

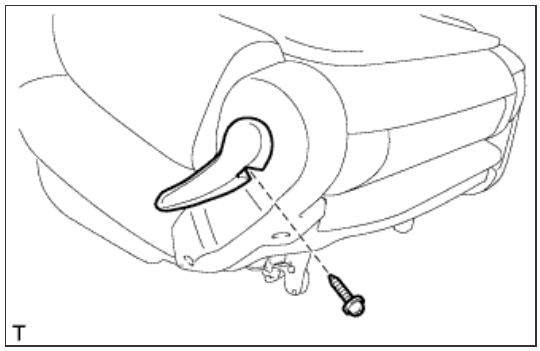

4. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

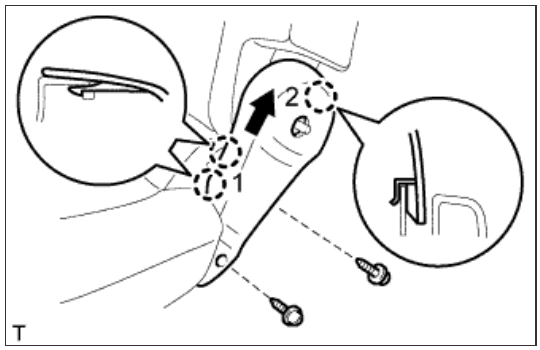

5. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

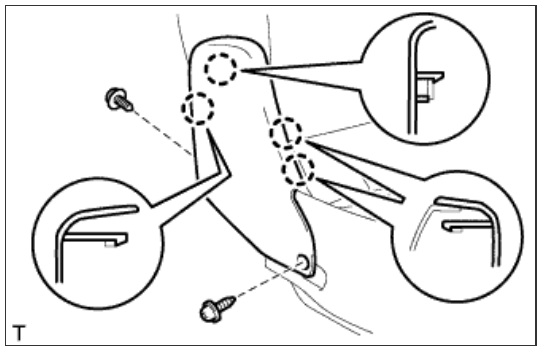


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

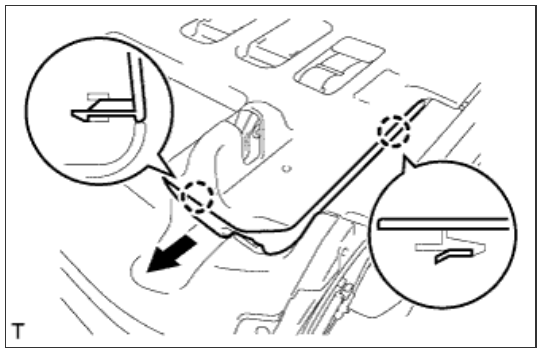


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

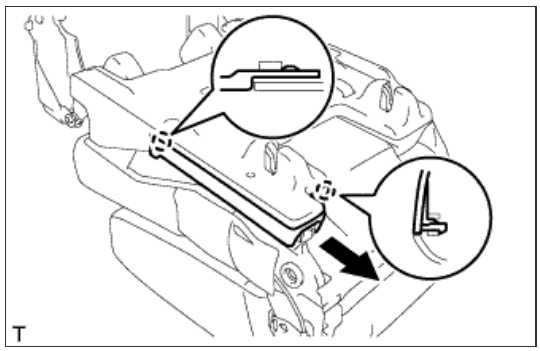


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 4 claws.

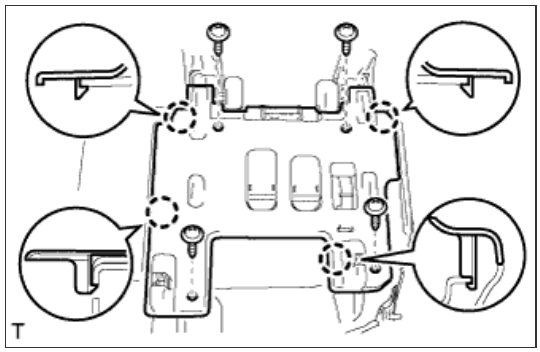


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

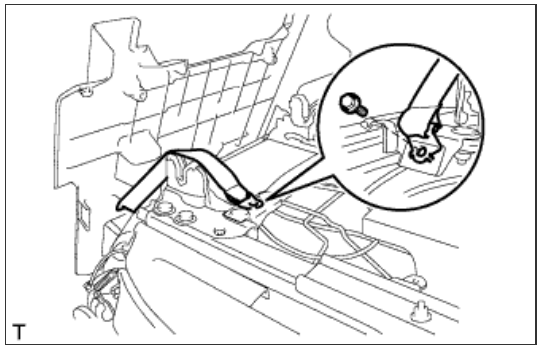

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

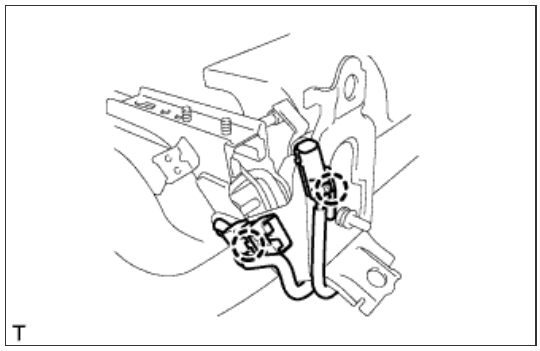

c. Using a clip remover, remove the clip.

d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove wire harness.

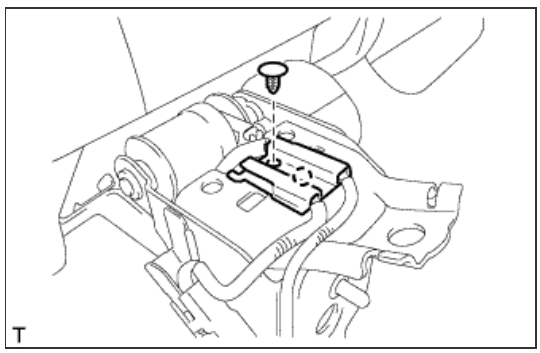


10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

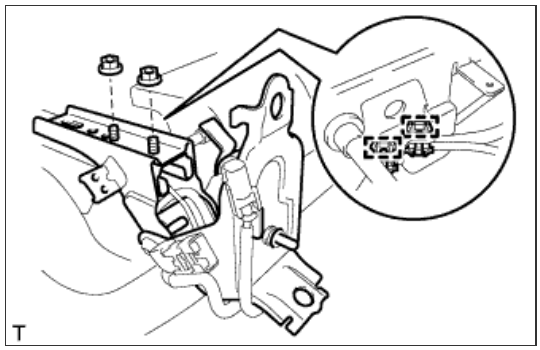


d. Detach the cable clamp and disconnect the cable.

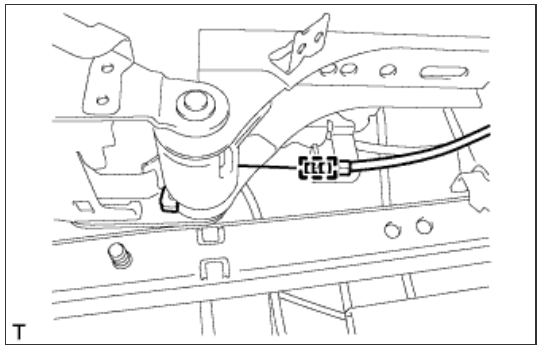


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Remove the 2 nuts and hinge.

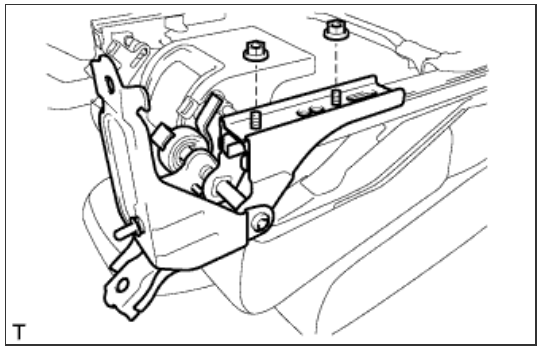


12. REMOVE SEAT BELT ANCHOR COVER CAP

a. Detach the claw and open the cap.

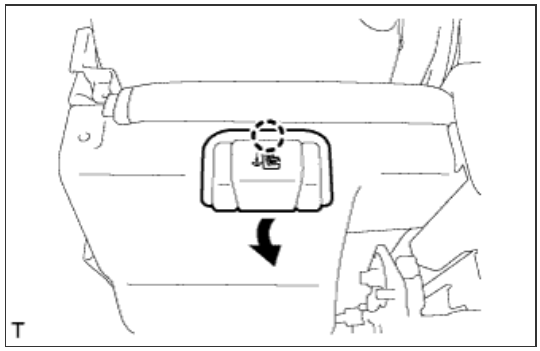


b. Remove the screw and anchor cover cap.

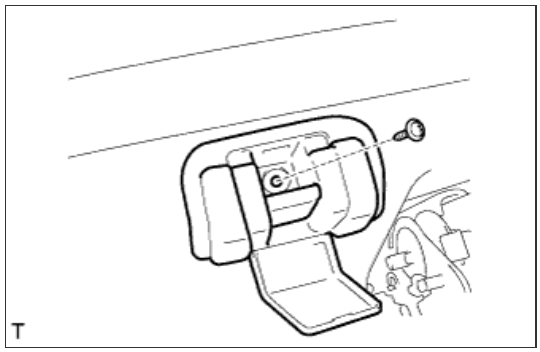

13. REMOVE REAR SEATBACK STAY COVER LH


a. Remove the screw.

b. Detach the 2 claws and remove the cover.

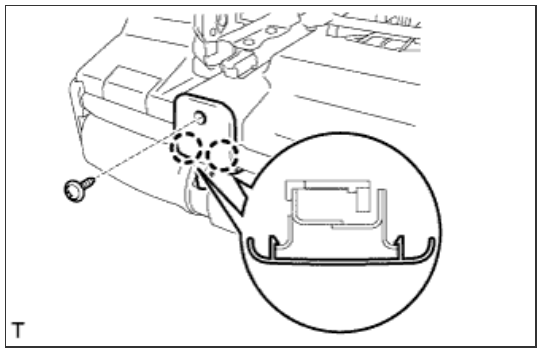


14. REMOVE REAR UNDER SIDE COVER LH

a. Detach the 10 claws.

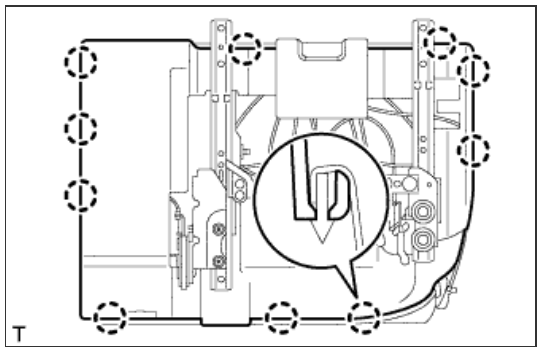

b. Remove the 5 screws.


c. Detach the 2 clips and 2 claws, and remove the cover.

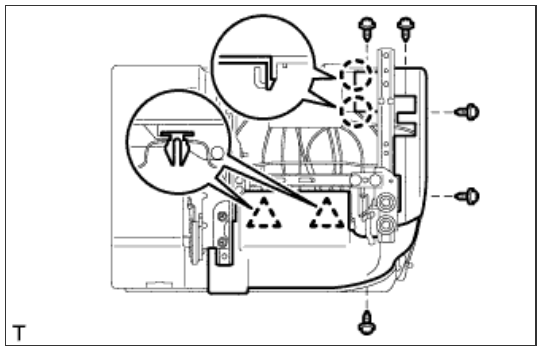

15. REMOVE REAR SEAT CUSHION COVER RH

a. Remove the 4 screws.


b. Detach the 2 claws and remove the cover.

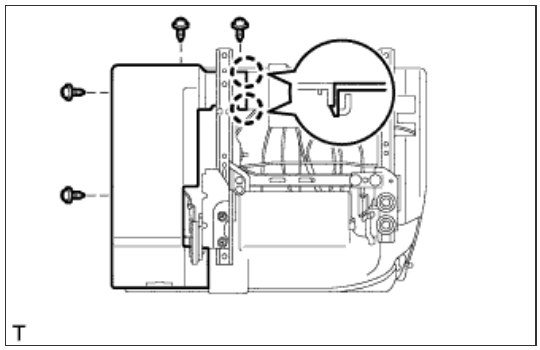

16. REMOVE REAR SEAT UNDER TRAY COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

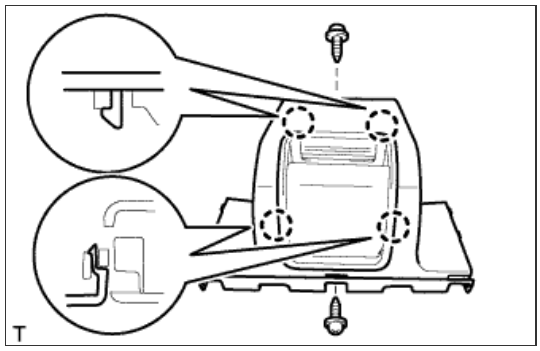


17. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Remove the bolt and belt.


HINT:

The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, it becomes disconnected when the bolt is removed.

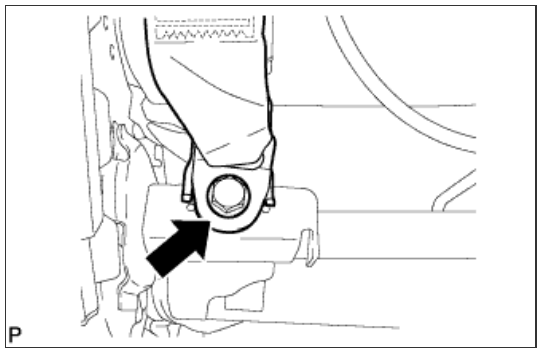

18. DISCONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Disconnect the belt anchor.

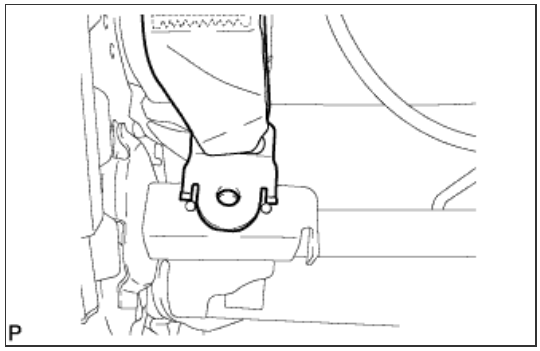

19. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.


ii. Remove the side airbag wire harness through the hole in the seat cushion.

b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

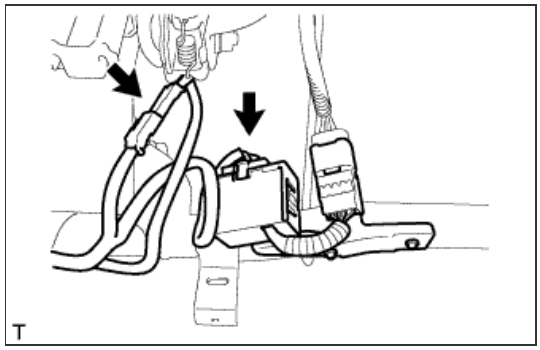


ii. Remove the seatback heater wire harness through the hole in the seat cushion.

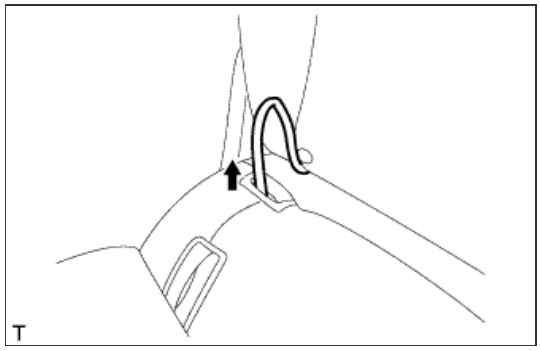


c. Remove the seat cushion cover with pad.

20. REMOVE REAR SEPARATE TYPE SEAT CUSHION COVER

a. Detach the 3 pieces of fastening tape.

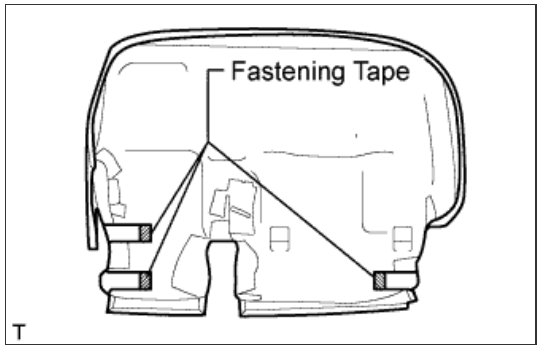


b. Remove the hog rings and cover.

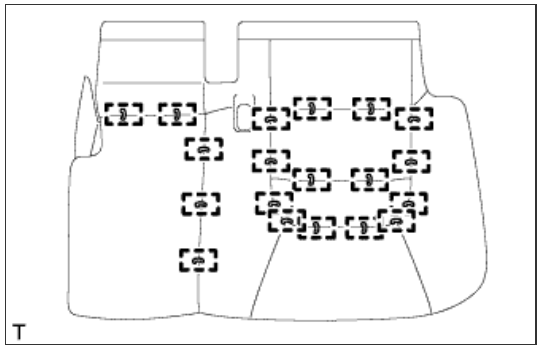

21. REMOVE REAR SEAT CUSHION HEATER ASSEMBLY

a. Cut off the tack pins which fasten the seat heater to the seat cushion cover, and then remove the seat cushion heater from the seat cushion cover.

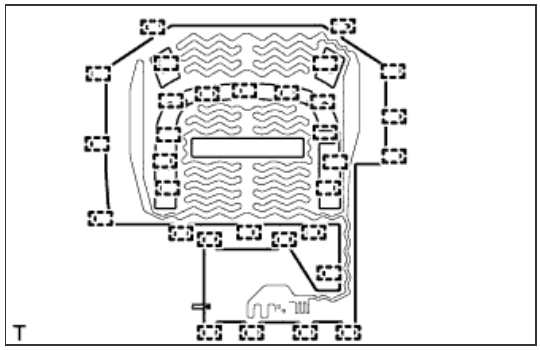

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY LH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

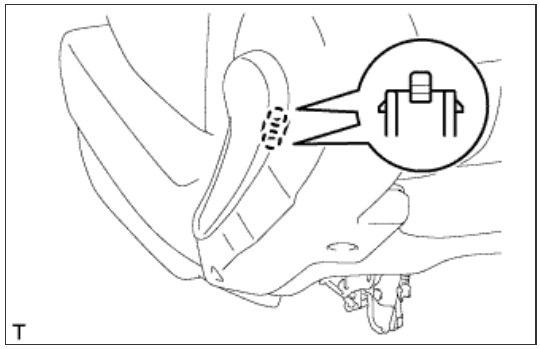

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

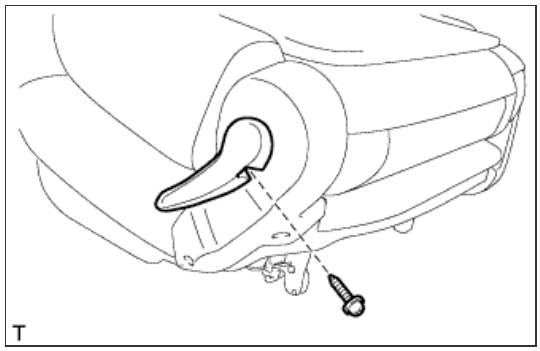

4. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

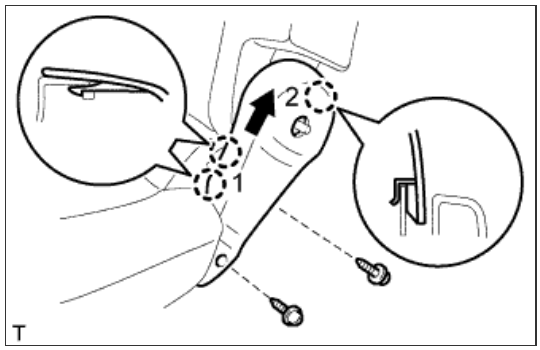

5. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

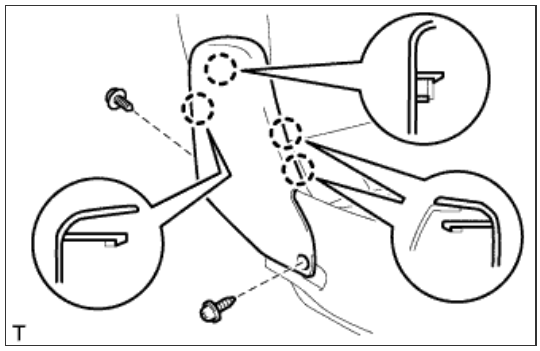


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

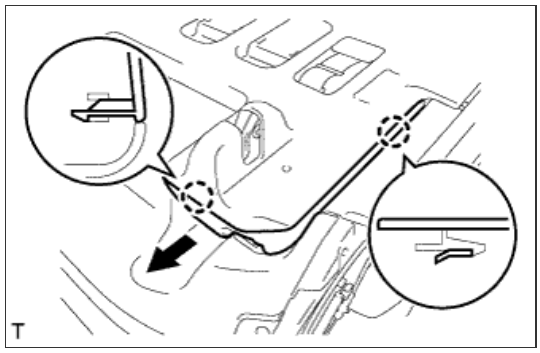


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

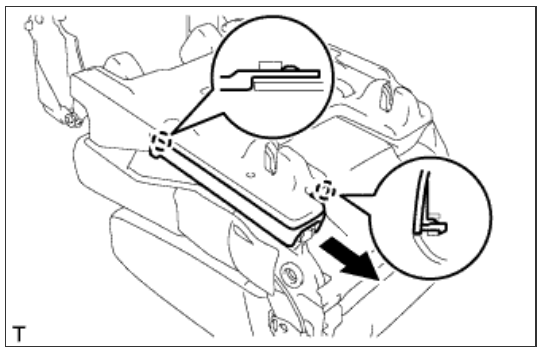


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 4 claws.

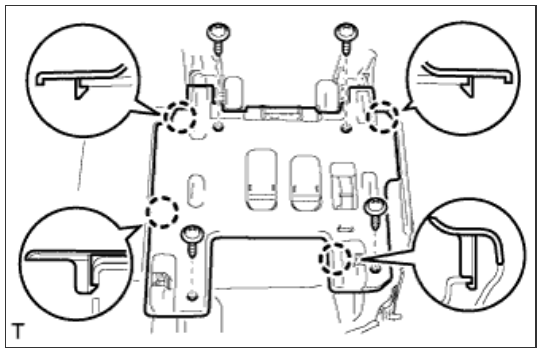


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

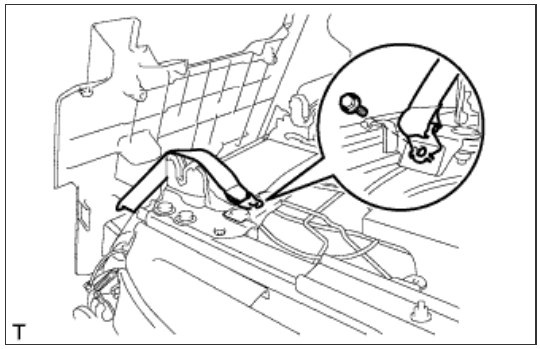

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

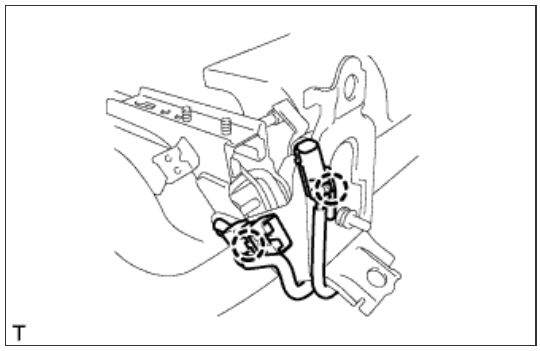

c. Using a clip remover, remove the clip.

d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove wire harness.

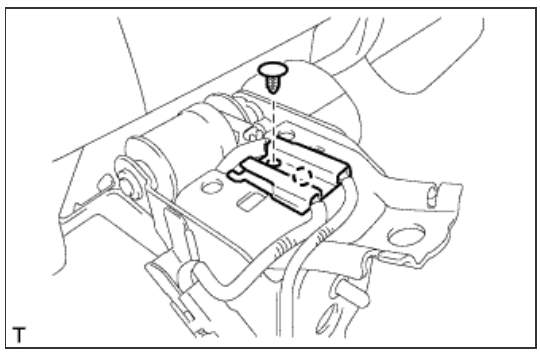


10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

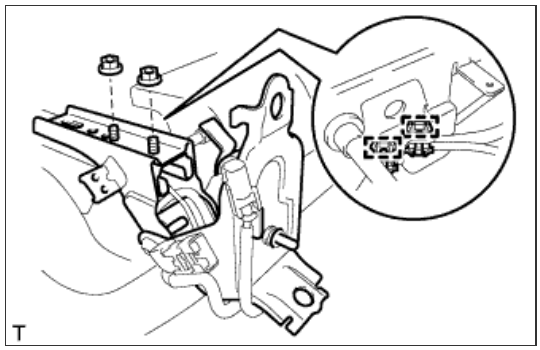


d. Detach the cable clamp and disconnect the cable.

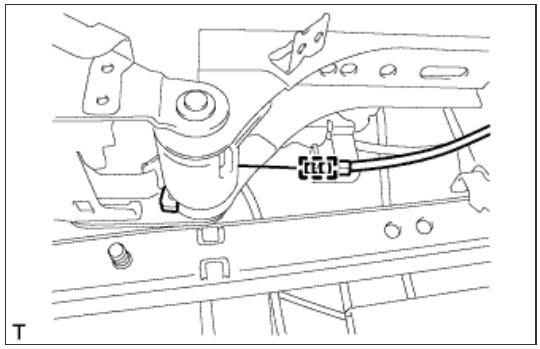


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Remove the 2 nuts and hinge.

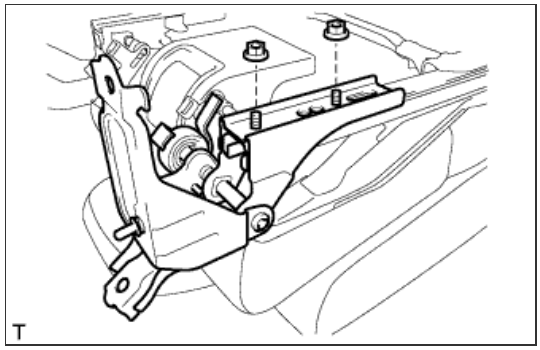


12. REMOVE SEAT BELT ANCHOR COVER CAP

a. Detach the claw and open the cap.

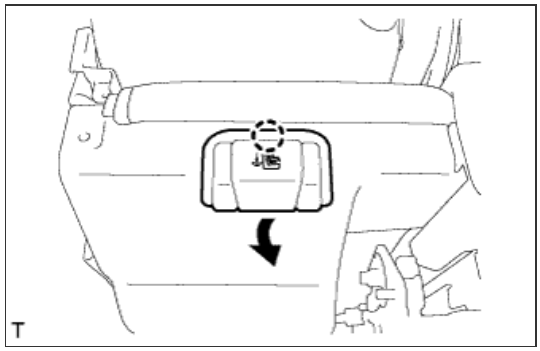


b. Remove the screw and anchor cover cap.

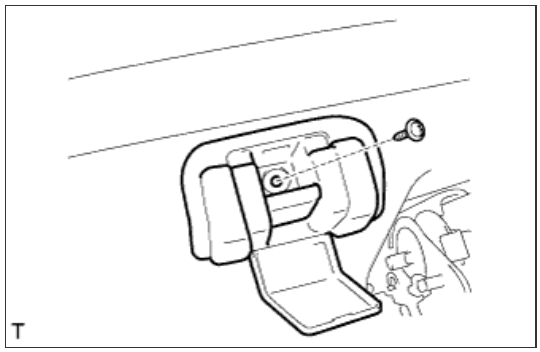

13. REMOVE REAR SEATBACK STAY COVER LH


a. Remove the screw.

b. Detach the 2 claws and remove the cover.

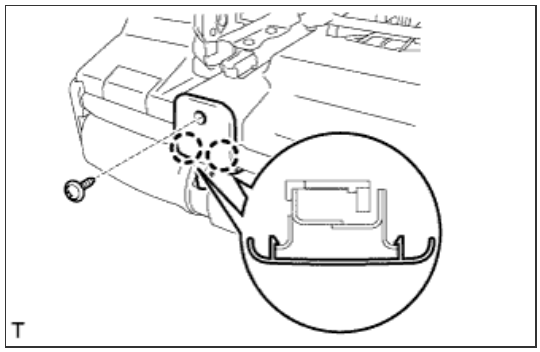


14. REMOVE REAR UNDER SIDE COVER LH

a. Detach the 10 claws.

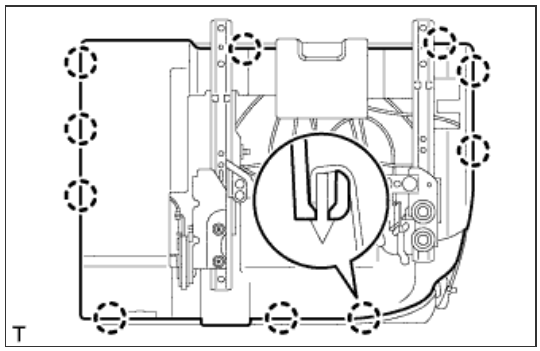

b. Remove the 5 screws.


c. Detach the 2 clips and 2 claws, and remove the cover.

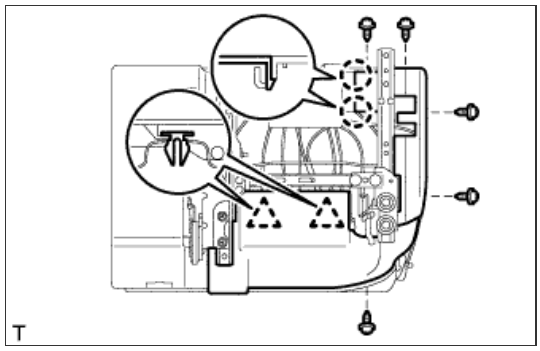

15. REMOVE REAR SEAT CUSHION COVER RH

a. Remove the 4 screws.


b. Detach the 2 claws and remove the cover.

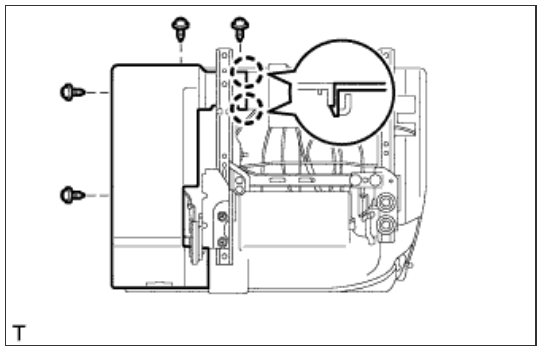

16. REMOVE REAR SEAT UNDER TRAY COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

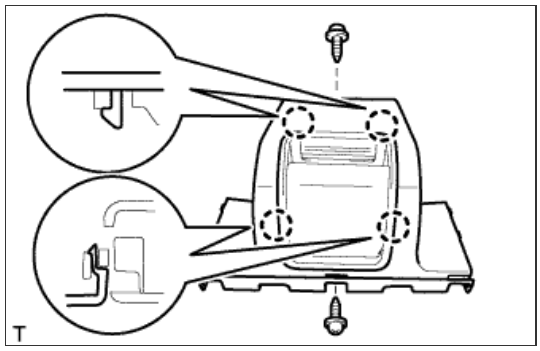


17. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Remove the bolt and belt.


HINT:

The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, it becomes disconnected when the bolt is removed.

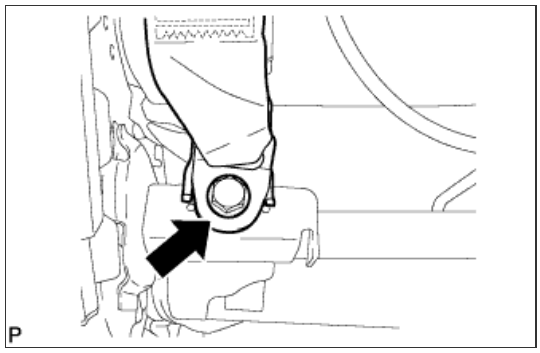

18. DISCONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Disconnect the belt anchor.

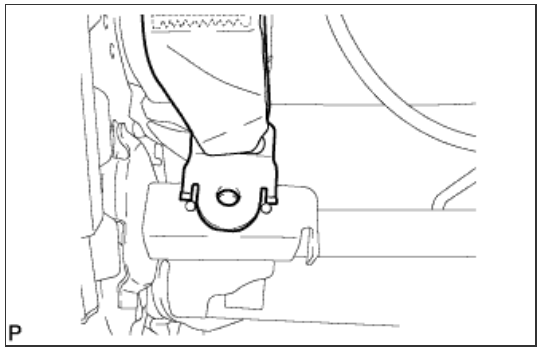

19. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.


ii. Remove the side airbag wire harness through the hole in the seat cushion.

b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

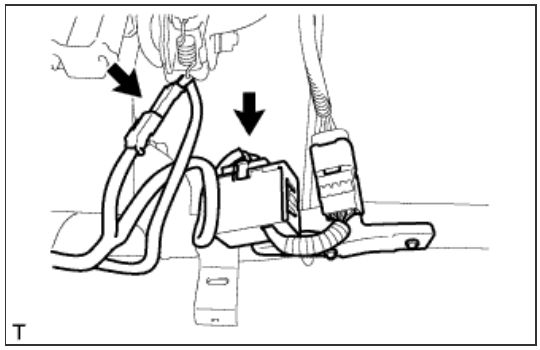


ii. Remove the seatback heater wire harness through the hole in the seat cushion.

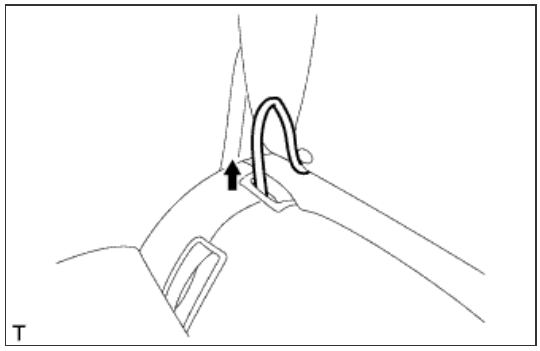


c. Remove the seat cushion cover with pad.

20. REMOVE REAR SEPARATE TYPE SEAT CUSHION COVER

a. Detach the 3 pieces of fastening tape.

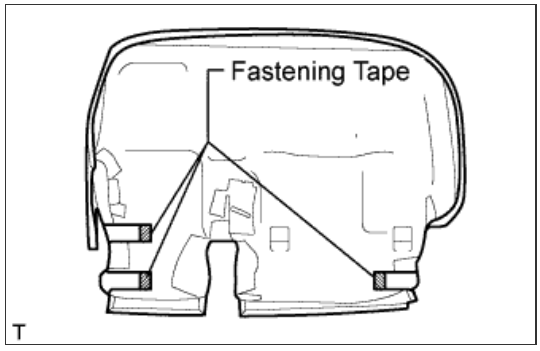


b. Remove the hog rings and cover.

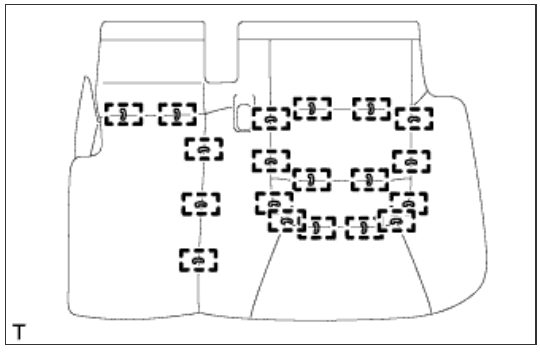

21. REMOVE REAR SEAT CUSHION HEATER ASSEMBLY

a. Cut off the tack pins which fasten the seat heater to the seat cushion cover, and then remove the seat cushion heater from the seat cushion cover.

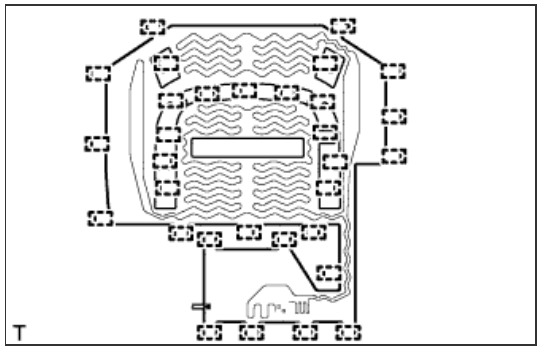

for Preparation Click here

1. INSPECT REAR SEAT CUSHION HEATER ASSE

a. Heat the thermostat with a light.


b. Check the seat cushion heater.

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A-1 - B-1	Seat cushion heater temperature 25 C (77)	3.05 to 3.65 Ω
A-4 - B-2		
A-1 - A-4		
A-2 - A-3		8 to 12 kΩ

f the result is not as specified, replace the seat cushion heater assembly.

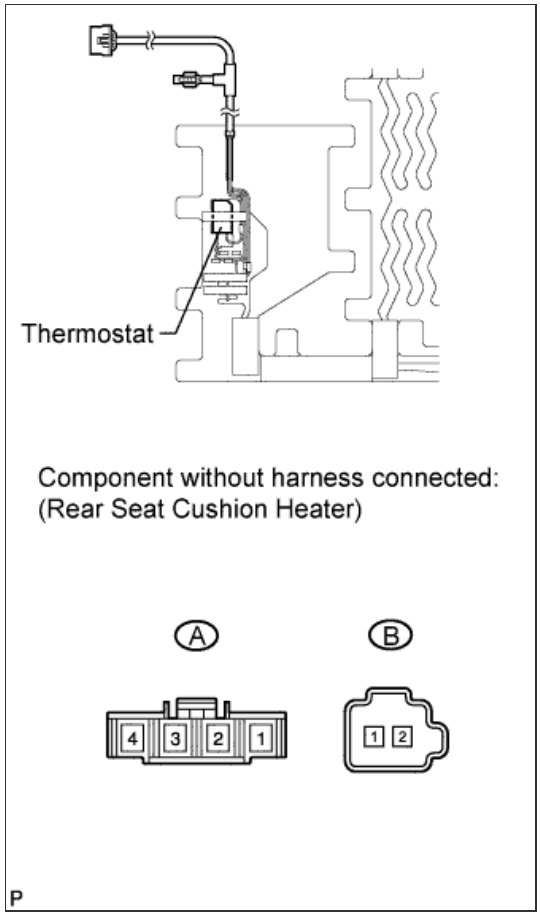

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT CUSHION HEATER ASSEMBLY

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

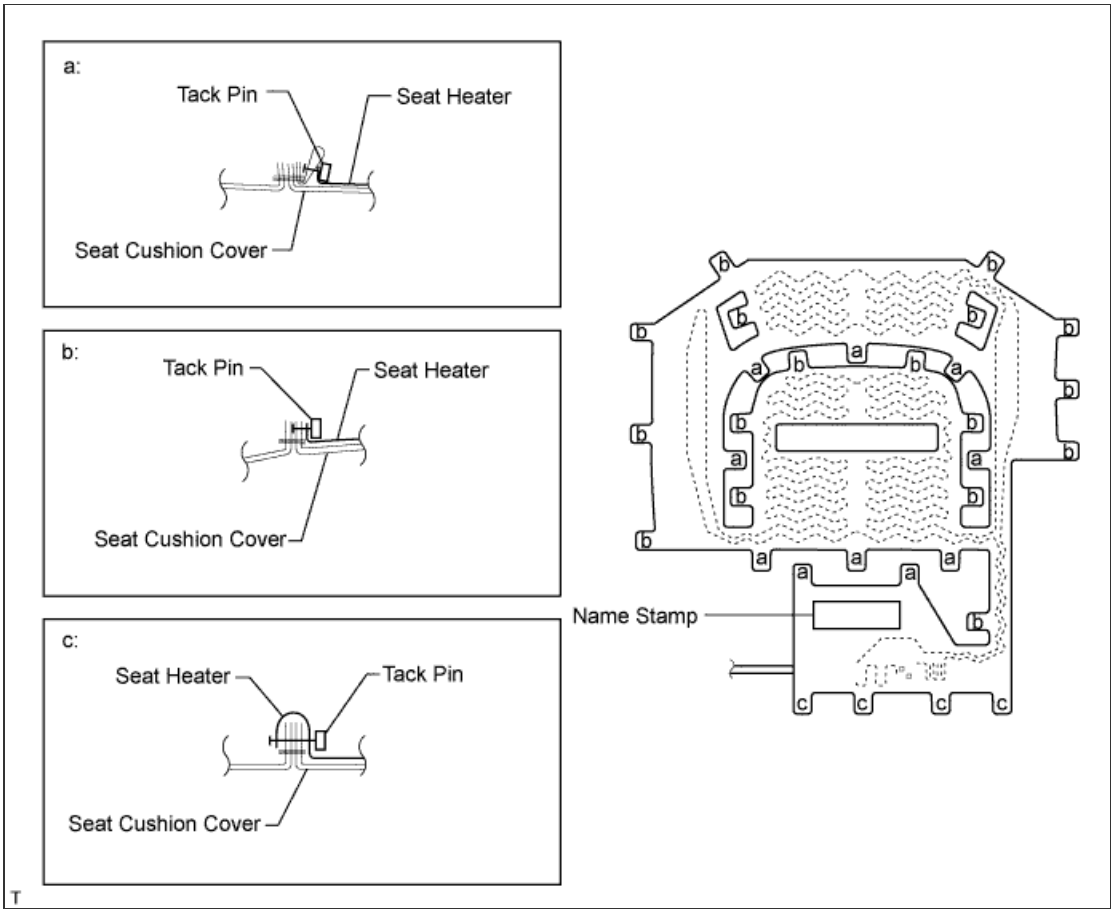


2. INSTALL REAR SEPARATE TYPE SEAT CUSHION COVER

a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.


NOTICE:

- **Be careful not to damage the cover.**

- **When installing the hog rings, avoid wrinkling the cover.**

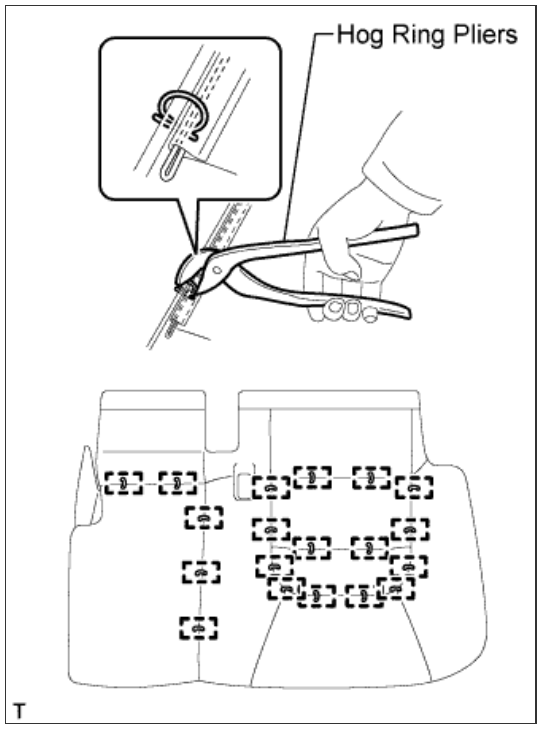

b. Attach the 3 pieces of fastening tape.

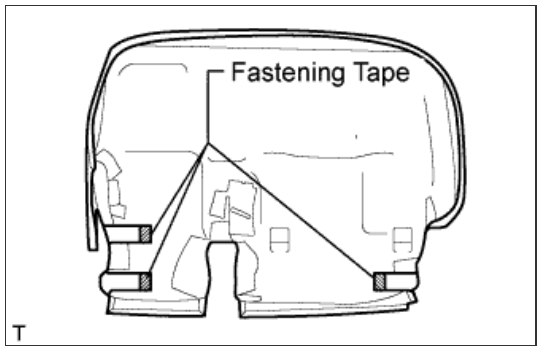


3. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.

b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seat cushion.


c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seat cushion.

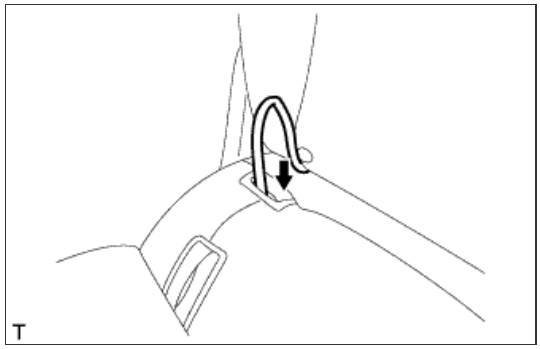

ii. Connect the 2 seat heater connectors.

d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

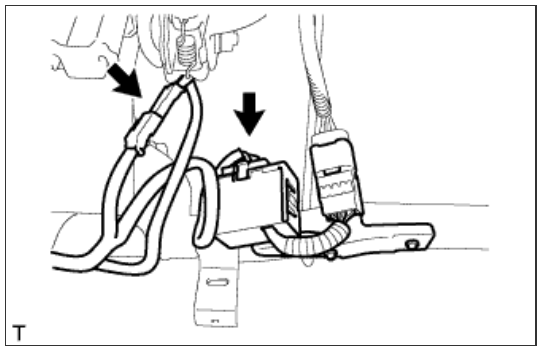


4. CONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Connect the belt anchor.

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

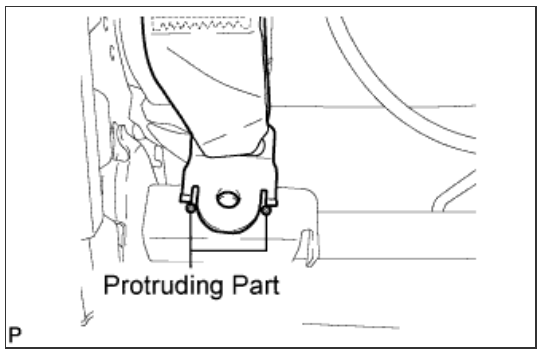

5. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Install the belt with the bolt.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

HINT:


The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt . Therefore, connect it when installing the rear No. 1 seat inner belt .

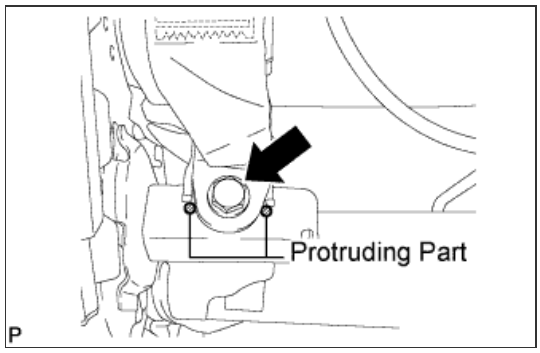

6. INSTALL REAR SEAT UNDER TRAY COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

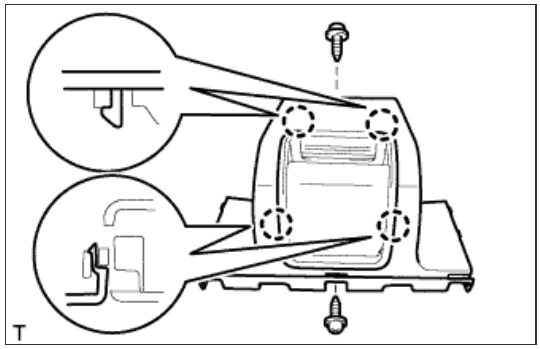

7. INSTALL REAR SEAT CUSHION COVER RH

a. Attach the 2 claws to install the cover.


b. Install the 4 screws.

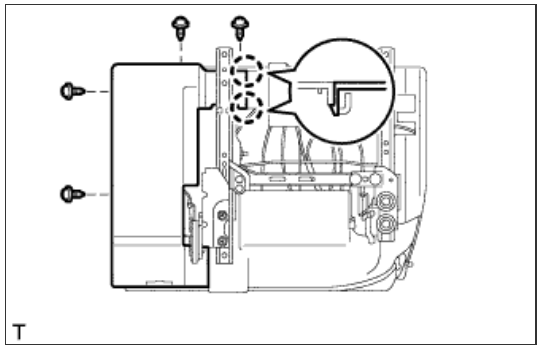


8. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and 2 clips to install the cover.

b. Install the 5 screws.

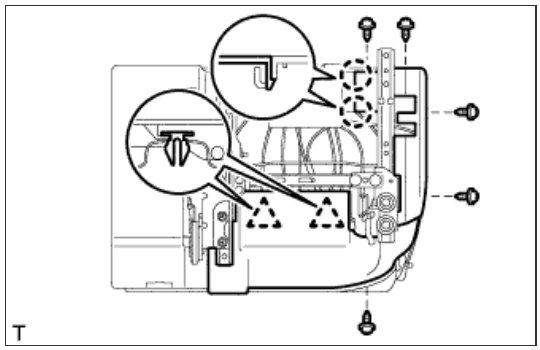


c. Attach the 10 claws.

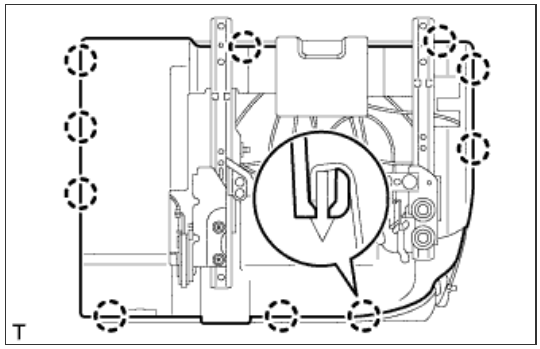

. INSTALL REAR SEATBAC STAY COVER LH


a. Attach the 2 claws to install the cover.

b. Install the screw.

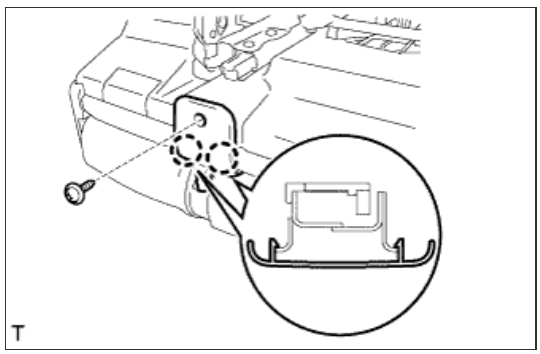


10. INSTALL SEAT BELT ANCHOR COVER CAP

a. Install the anchor cover cap with the screw.

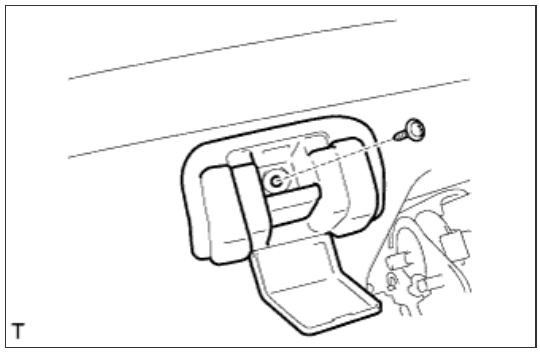


b. Attach the claw to close the cap.

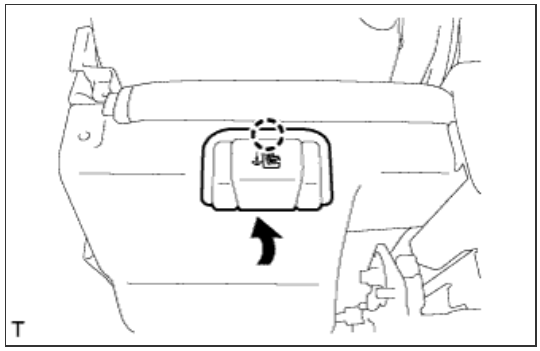

11. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH


a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf

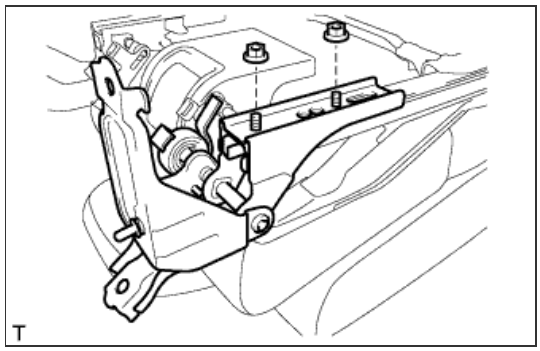

12. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

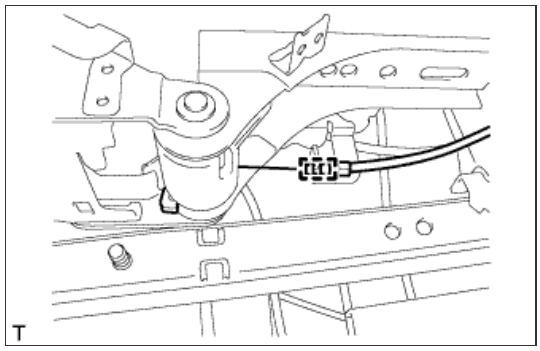


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.

d. w/ Seat Heater System:
Attach the wire harness clamp.

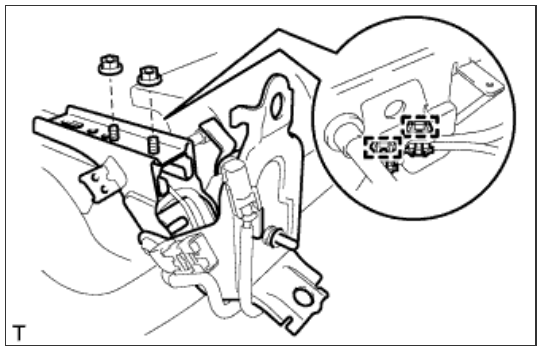


13. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

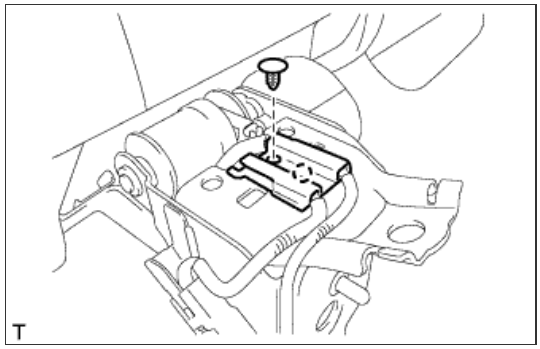


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

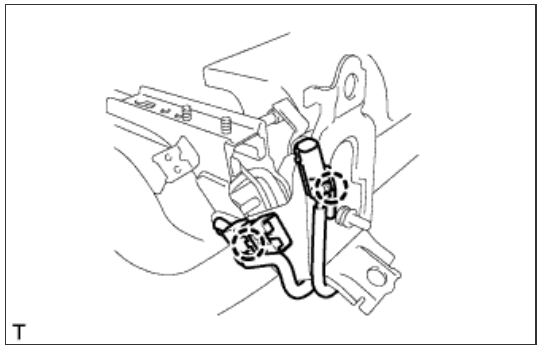


14. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

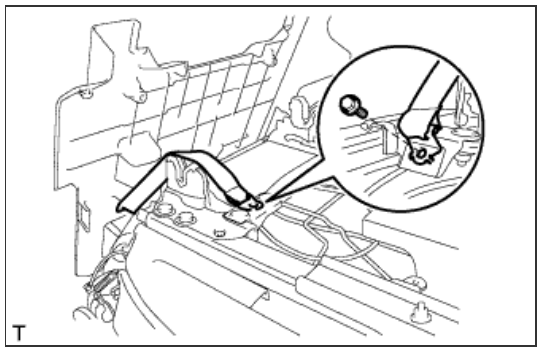


b. Attach the 4 claws to install the seat leg side cover.

c. Install the 4 screws.

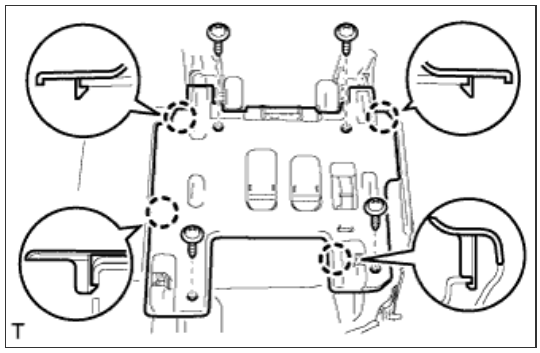


15. INSTALL UPPER SEAT TRAC RAIL COVER RH

a. Attach the 2 claws to install the cover.

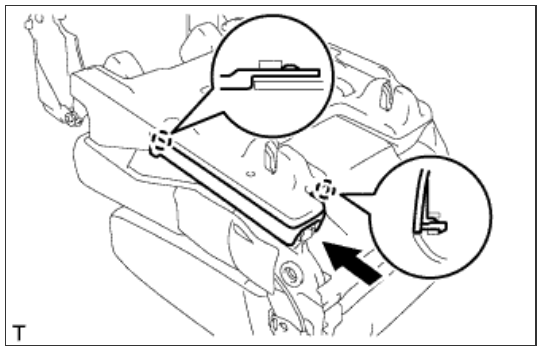

16. INSTALL UPPER SEAT TRAC RAIL COVER LH


a. Attach the 2 claws to install the cover.

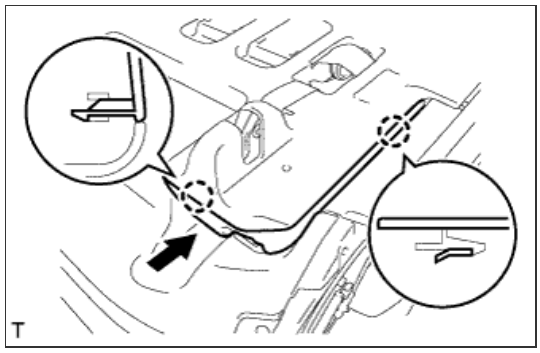

17. INSTALL REAR NO. 1 SEAT RECLINING COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

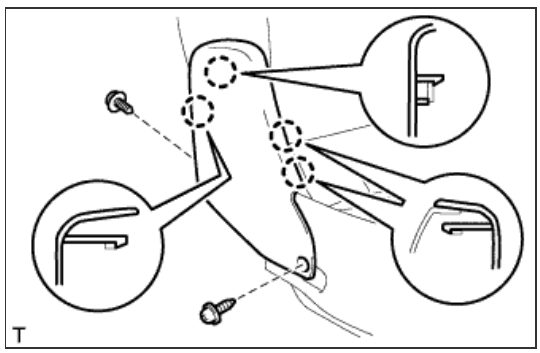

18. INSTALL REAR NO. 1 SEAT RECLINING COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

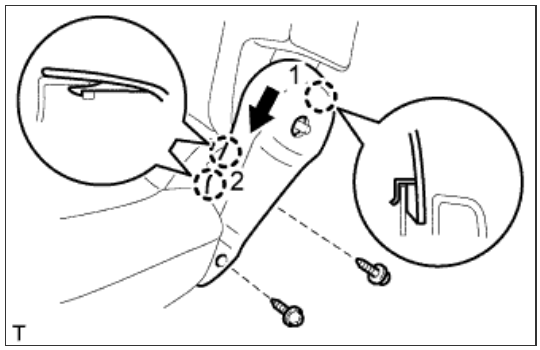


1 . INSTALL RECLINING AD USTER RELEASE HANDLE LH

a. Install the release handle with the screw.

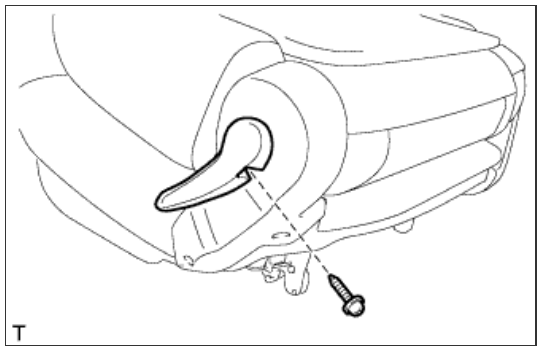

20. INSTALL SEAT AD USTER BOLT COVER

a. Attach the 2 claws to install the cover.

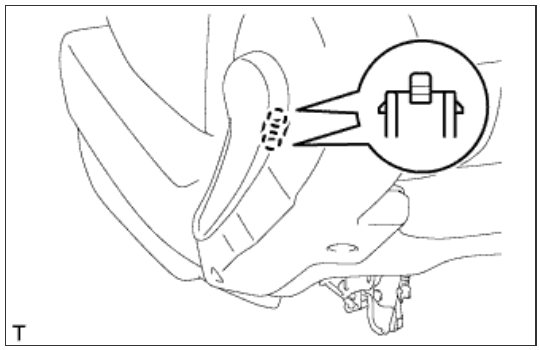

21. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly (Click here).

for Preparation Click here

CAUTION:

Wear protective gloves. Sharp areas on the parts may injure your hands.


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL REAR SEAT CUSHION HEATER ASSEMBLY

a. Set the seat cushion heater with the name stamp side facing the seat cushion cover.

b. Install the seat cushion heater with new tack pins.

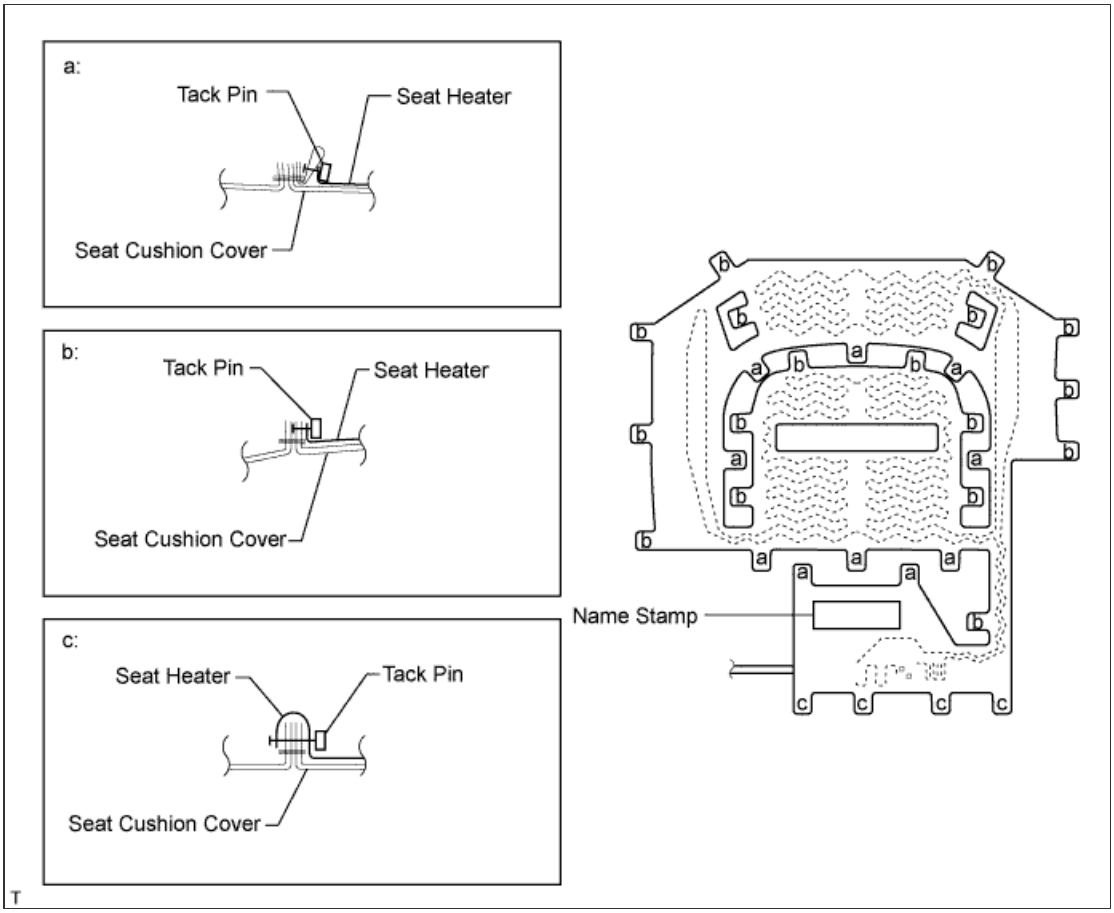


2. INSTALL REAR SEPARATE TYPE SEAT CUSHION COVER

a. Using hog ring pliers, install the seat cushion cover to the seat cushion pad with new hog rings.


NOTICE:

- **Be careful not to damage the cover.**

- **When installing the hog rings, avoid wrinkling the cover.**

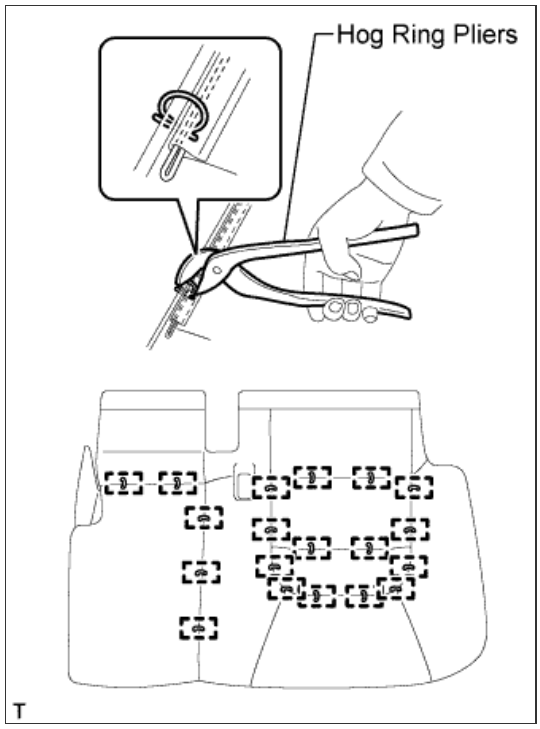

b. Attach the 3 pieces of fastening tape.

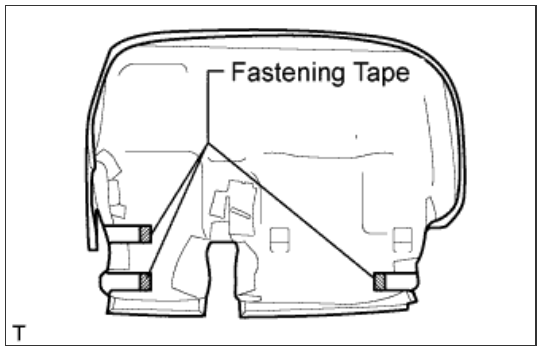


3. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.

b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seat cushion.


c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seat cushion.

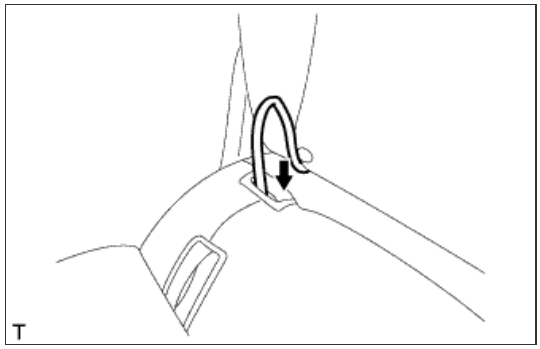

ii. Connect the 2 seat heater connectors.

d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

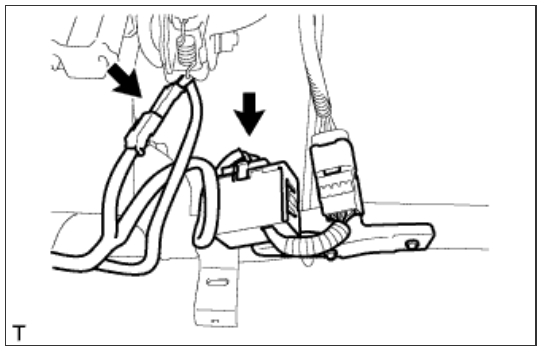


4. CONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Connect the belt anchor.

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

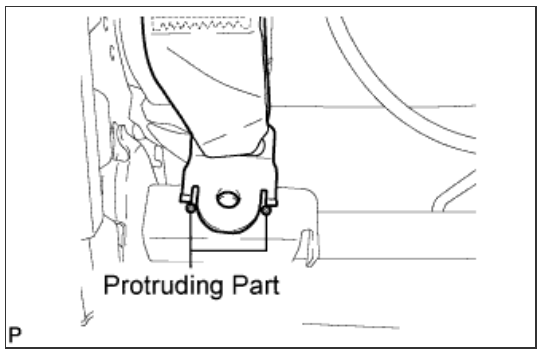

5. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Install the belt with the bolt.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

HINT:


The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt . Therefore, connect it when installing the rear No. 1 seat inner belt .

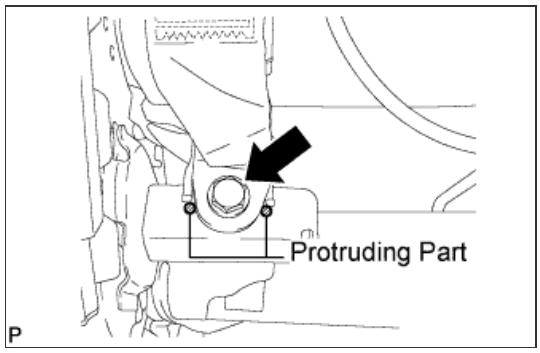

6. INSTALL REAR SEAT UNDER TRAY COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

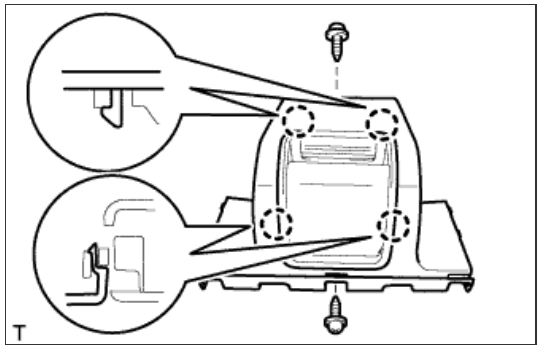

7. INSTALL REAR SEAT CUSHION COVER RH

a. Attach the 2 claws to install the cover.


b. Install the 4 screws.

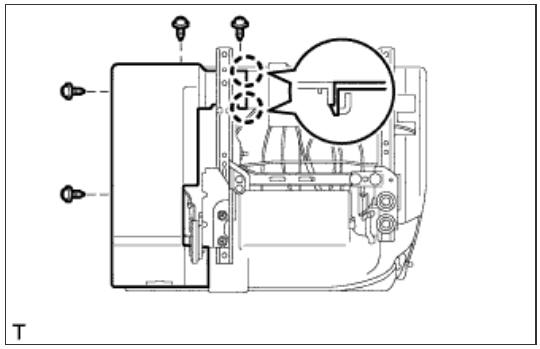


8. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and 2 clips to install the cover.

b. Install the 5 screws.

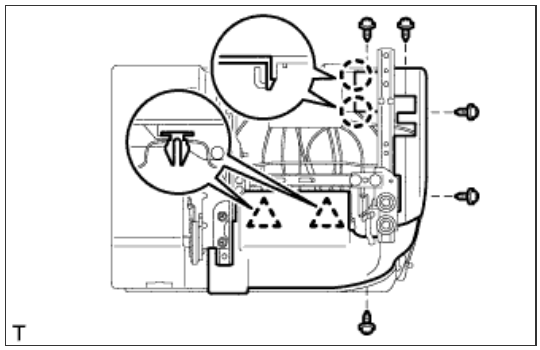


c. Attach the 10 claws.

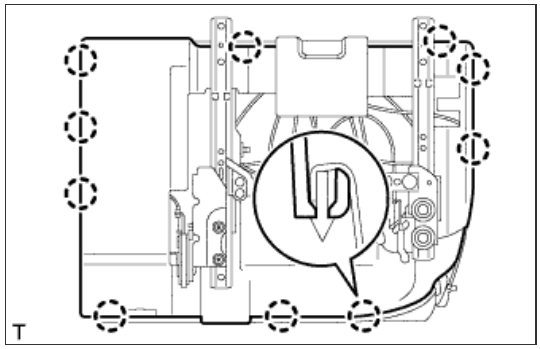

. INSTALL REAR SEATBAC STAY COVER LH


a. Attach the 2 claws to install the cover.

b. Install the screw.

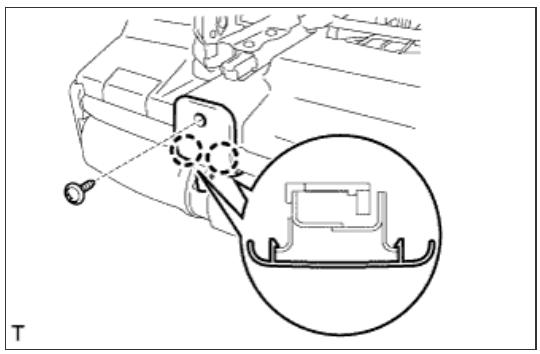


10. INSTALL SEAT BELT ANCHOR COVER CAP

a. Install the anchor cover cap with the screw.

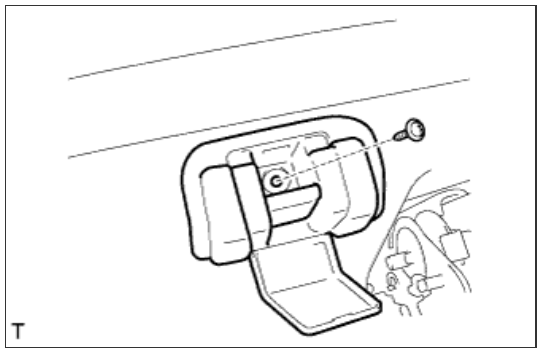


b. Attach the claw to close the cap.

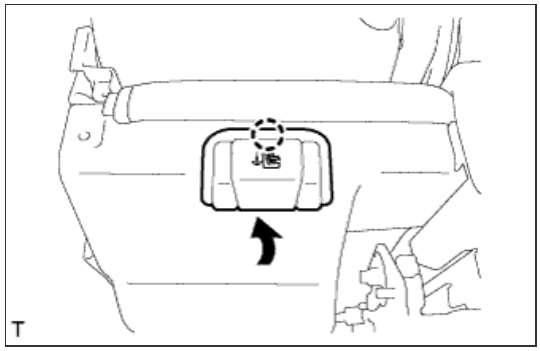

11. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH


a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf

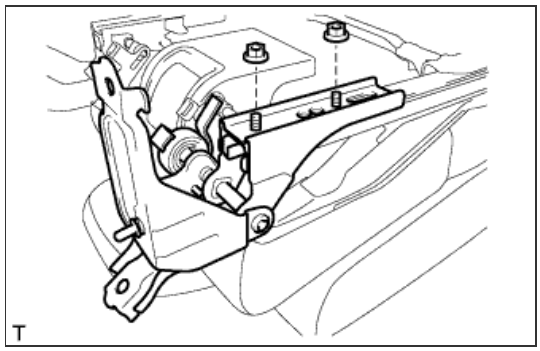

12. INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

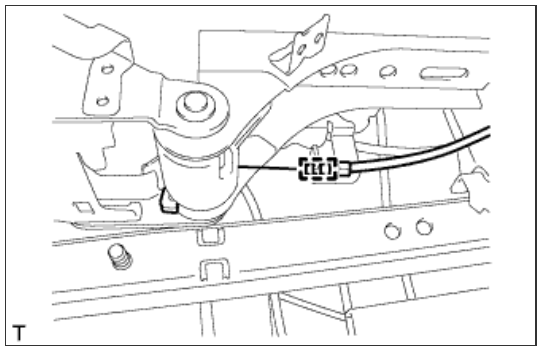


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.

d. w/ Seat Heater System:
Attach the wire harness clamp.

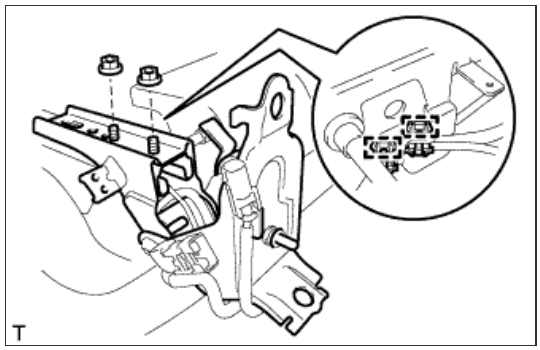


13. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

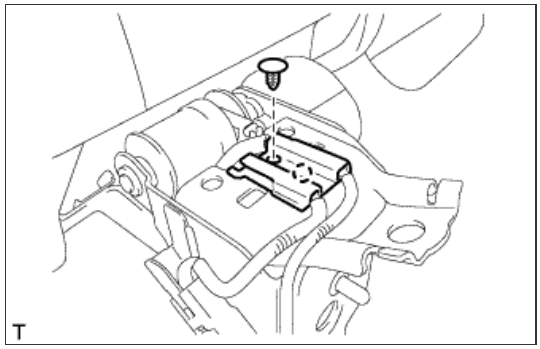


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

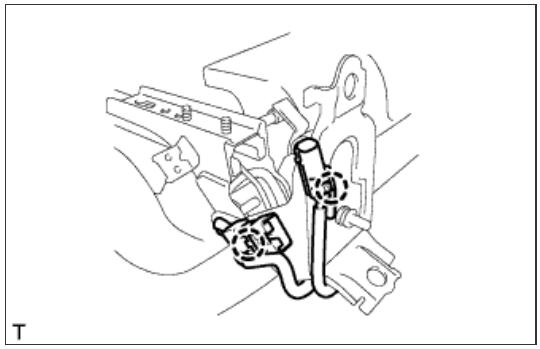


14. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

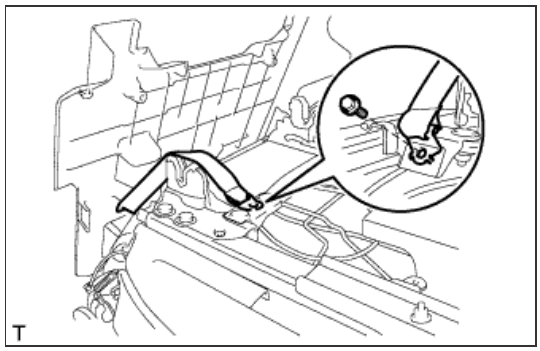


b. Attach the 4 claws to install the seat leg side cover.

c. Install the 4 screws.

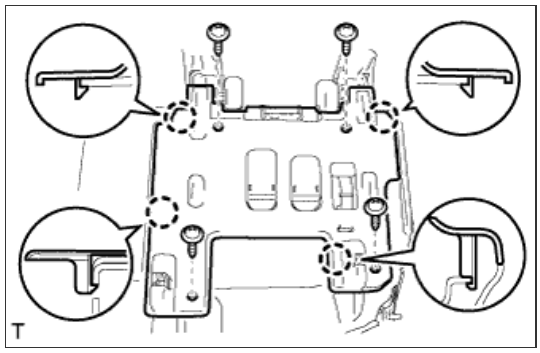


15. INSTALL UPPER SEAT TRAC RAIL COVER RH

a. Attach the 2 claws to install the cover.

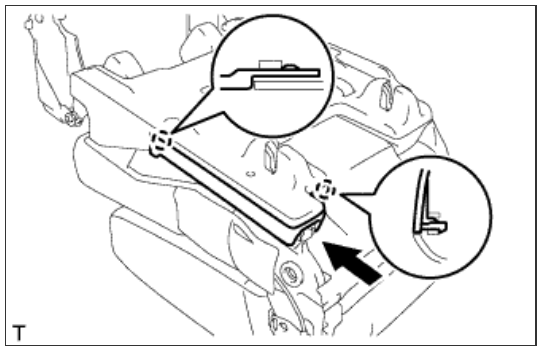

16. INSTALL UPPER SEAT TRAC RAIL COVER LH


a. Attach the 2 claws to install the cover.

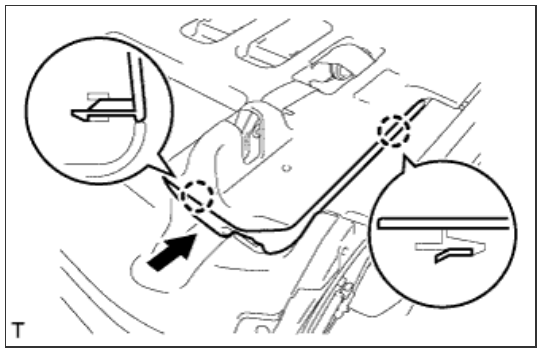

17. INSTALL REAR NO. 1 SEAT RECLINING COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

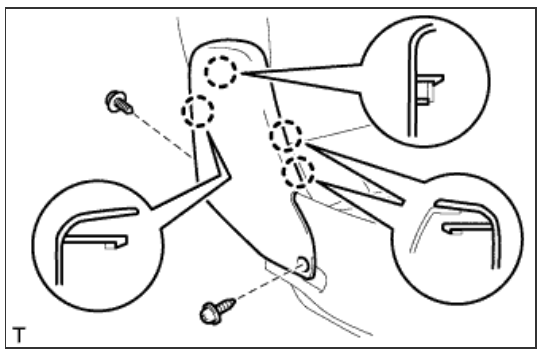

18. INSTALL REAR NO. 1 SEAT RECLINING COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

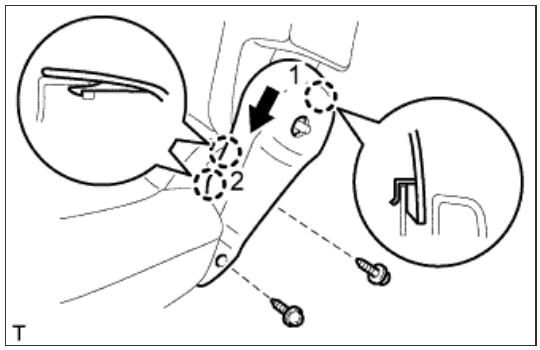


1 . INSTALL RECLINING AD USTER RELEASE HANDLE LH

a. Install the release handle with the screw.

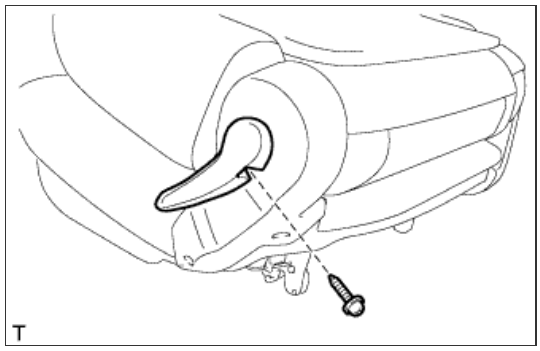

20. INSTALL SEAT AD USTER BOLT COVER

a. Attach the 2 claws to install the cover.

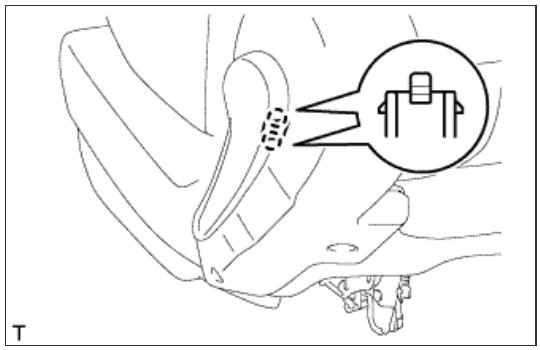


21. INSTALL REAR NO. 1 SEAT ASSEMBLY LH


a. Install the rear No. 1 seat assembly (Click here).


for Preparation Click here

for LHD:

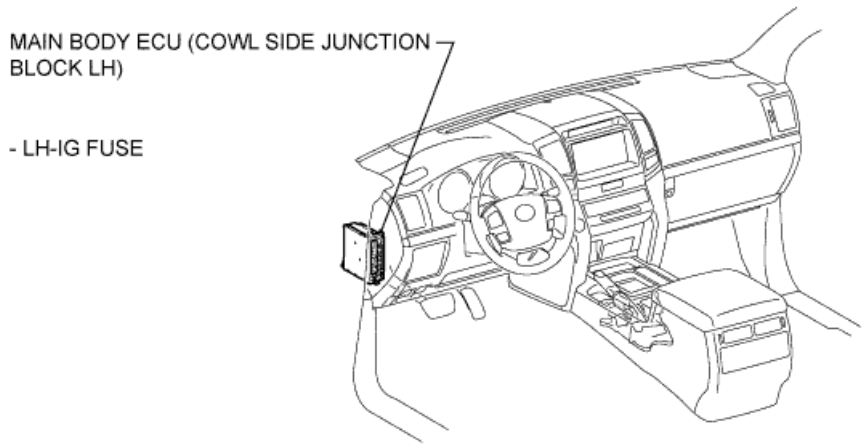


for RHD:

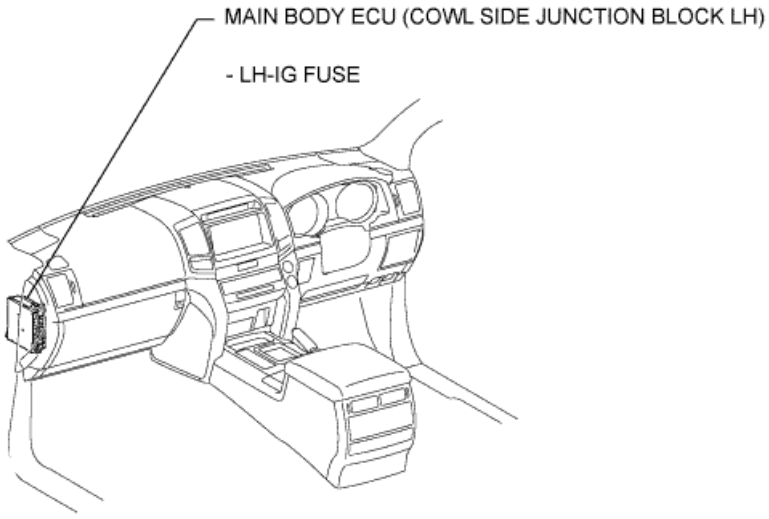

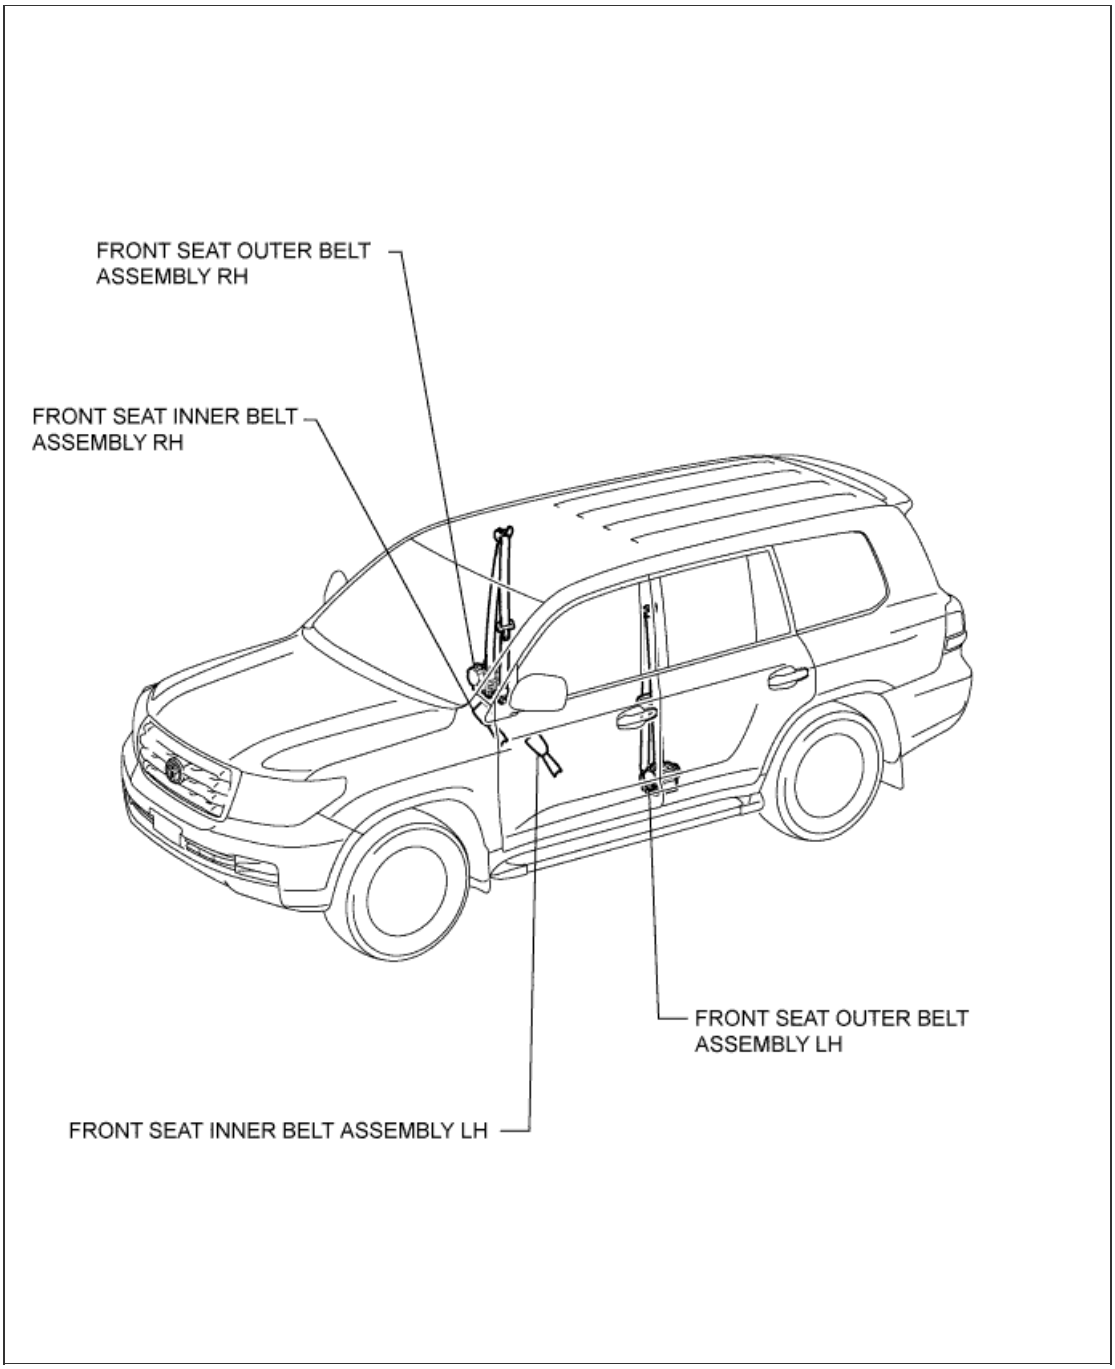
FRONT SEAT OUTER BELT ASSEMBLY RH
FRONT SEAT INNER BELT ASSEMBLY RH
FRONT SEAT OUTER BELT ASSEMBLY LH
FRONT SEAT INNER BELT ASSEMBLY LH

for Preparation Click here

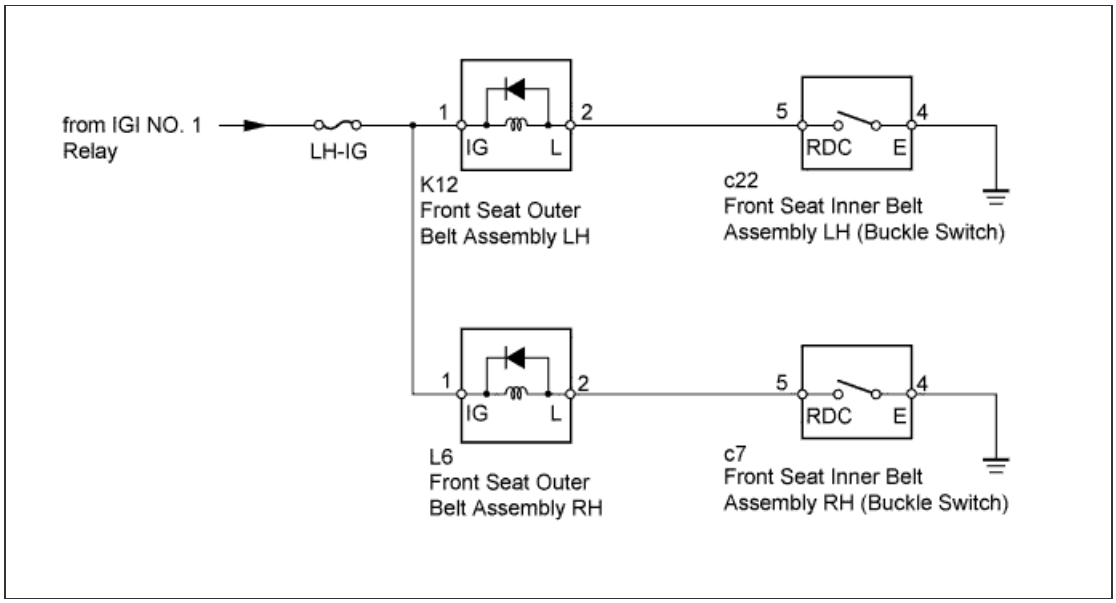

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Seat Belt Tension Reducer S stem


Symptom	Suspected Area	See page
Driver side: Tension reducer system does not operate	LH-IG fuse	-
	Front seat inner belt assembly LH*1 (or RH*2)	Click here
	Front seat outer belt assembly LH*1 (or RH*2)	Click here
	Wire harness	-
Passenger side: Tension reducer system does not	LH-IG fuse	-
	Front seat inner belt assembly RH*1 (or LH*2)	Click here
	Front seat outer belt assembly RH*1 (or LH*2)	Click here
	Wire harness	-

HINT:


*1: for LHD

*2: for RHD


for Preparation Click here

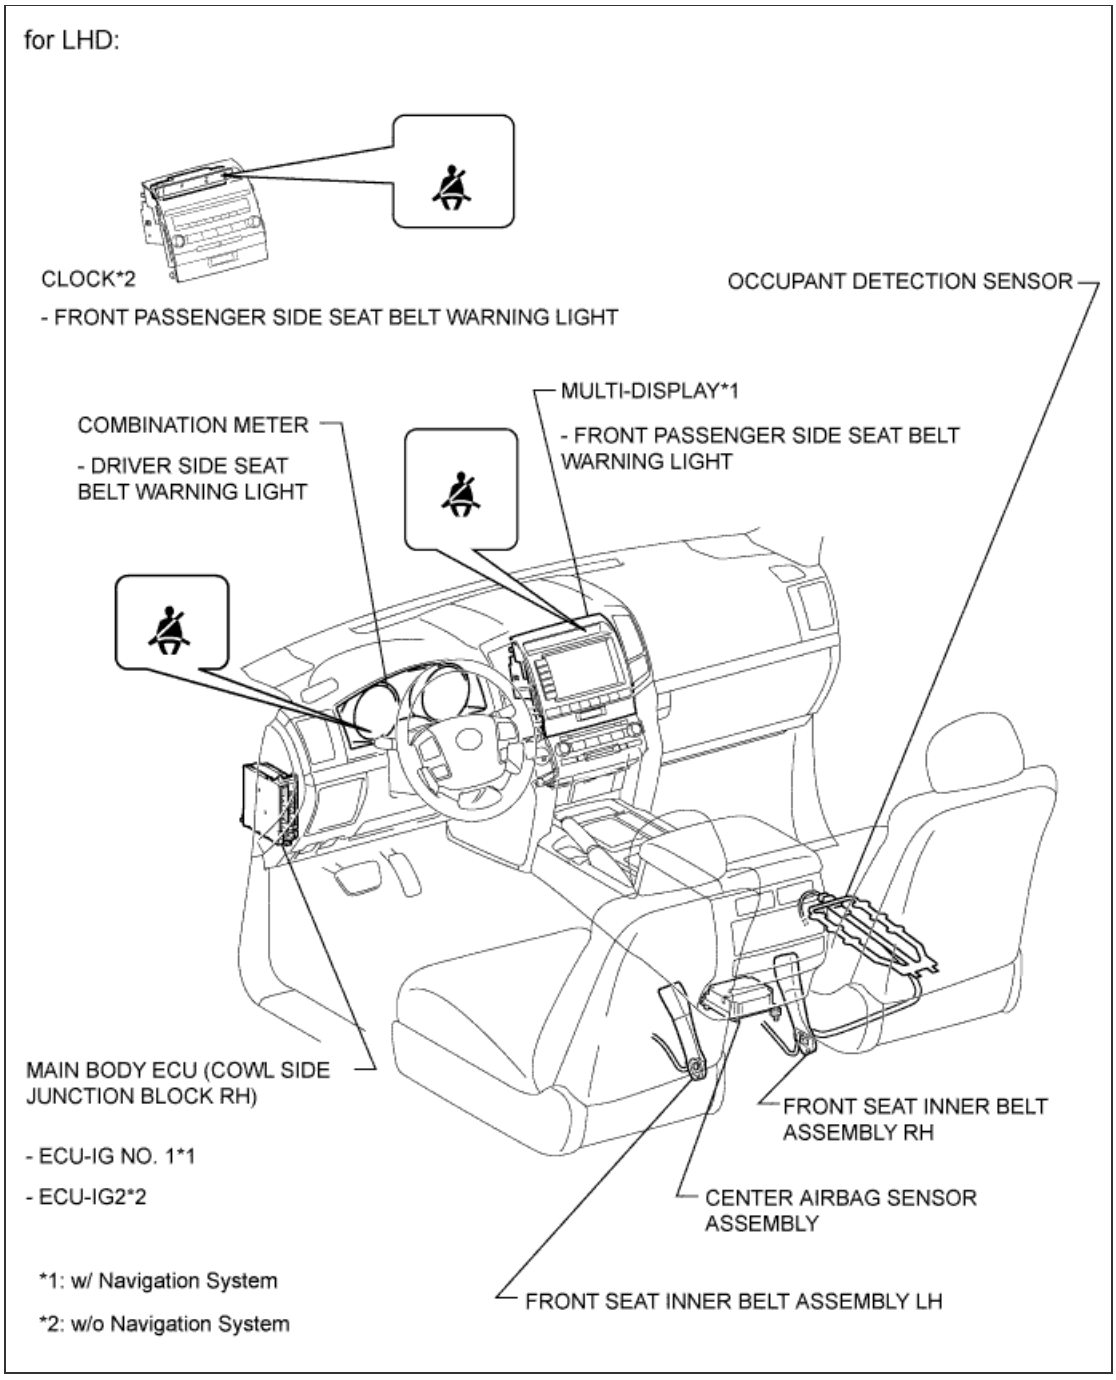

for RHD:

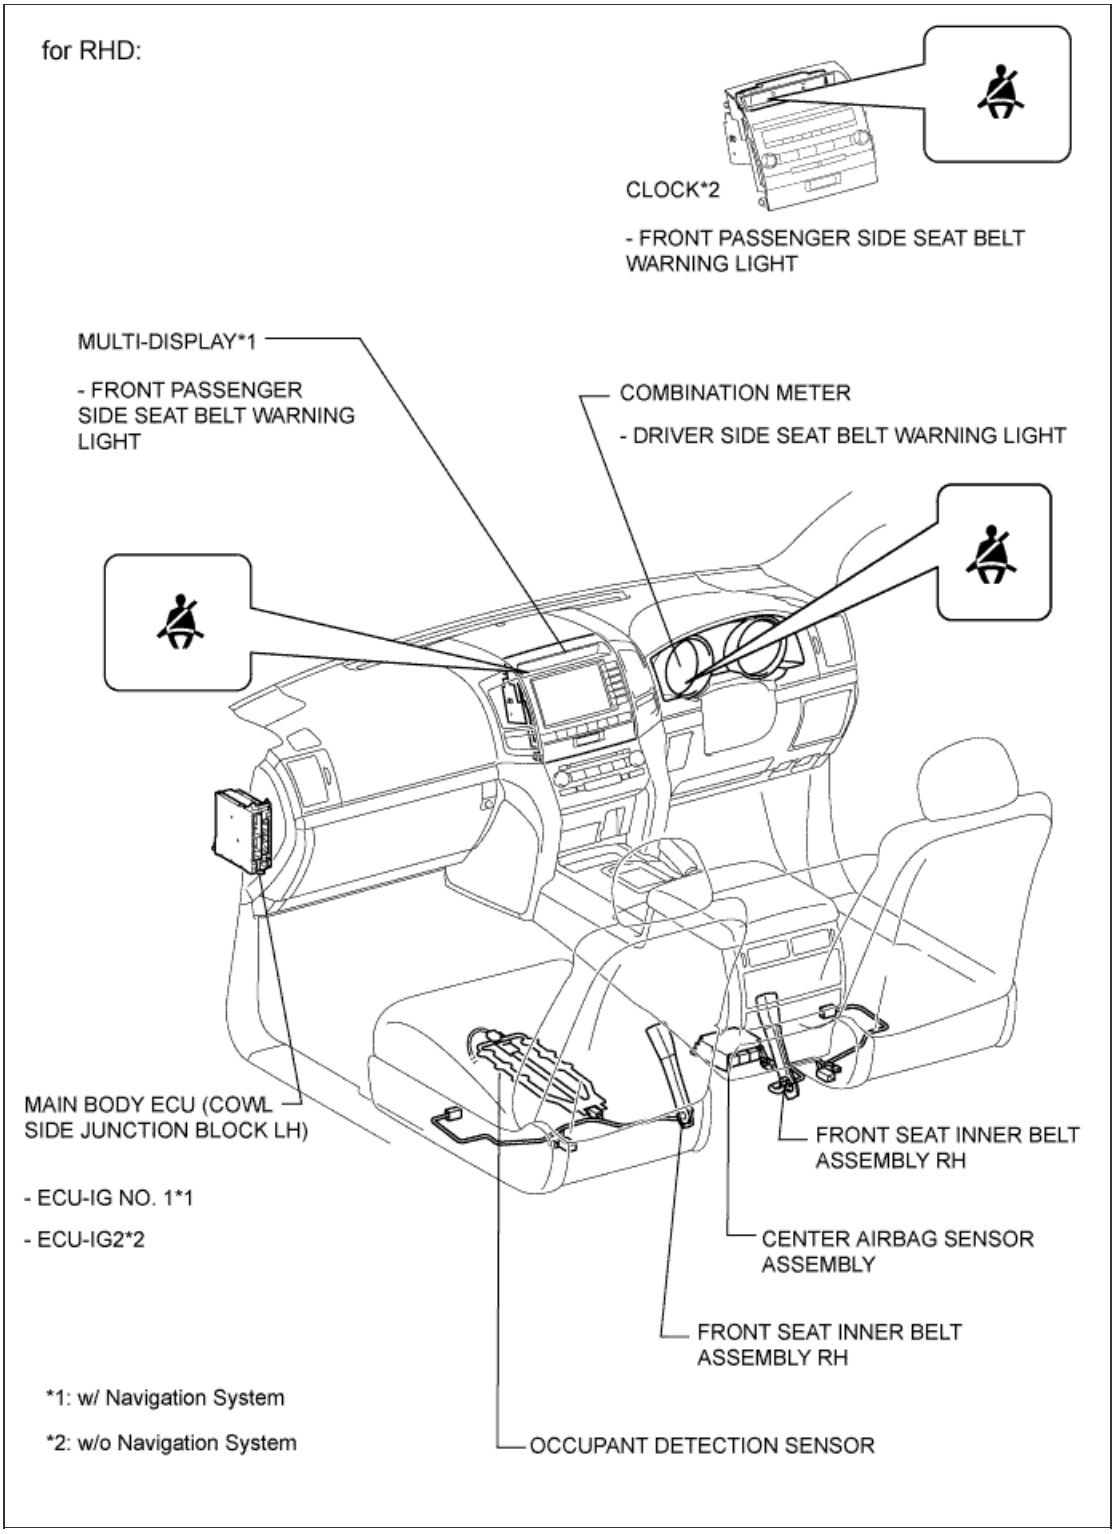
CLOCK*2
- FRONT PASSENGER SIDE SEAT BELT WARNING LIGHT
MULTI-DISPLAY*1
- FRONT PASSENGER SIDE SEAT BELT WARNING LIGHT
COMBINATION METER
- DRIVER SIDE SEAT BELT WARNING LIGHT
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
- ECU-IG NO. 1*1
- ECU-IG2*2
FRONT SEAT INNER BELT ASSEMBLY RH
CENTER AIRBAG SENSOR ASSEMBLY
FRONT SEAT INNER BELT ASSEMBLY RH
OCCUPANT DETECTION SENSOR
*1: w/ Navigation System
*2: w/o Navigation System

for Preparation Click here

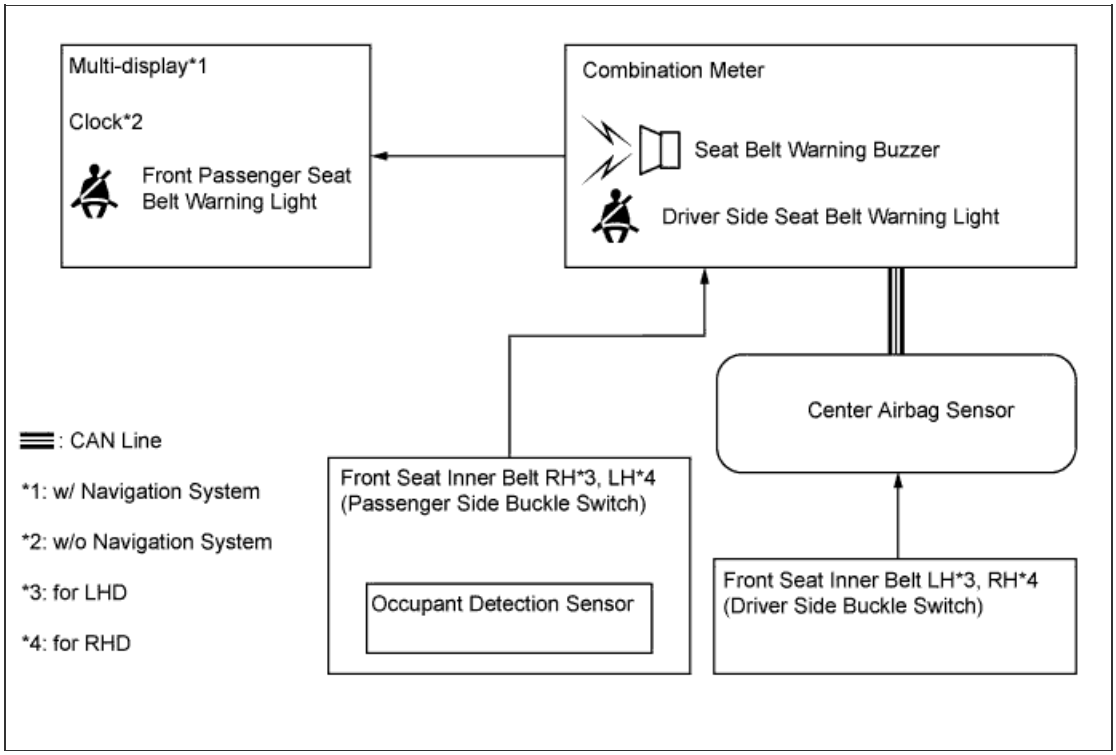

Communication Table

Sender	Receiver	Signal	Line
Center Airbag Sensor	Combination Meter	Front seat inner belt switch signal (for driver side)	CAN

for Preparation Click here

SEAT BELT WARNING SYSTEM DESCRIPTION

If a seat belt is not fastened, this system flashes the seat belt warning light or sounds the seat belt warning buzzer as a reminder.

a. Driver side seat belt warning light:
When the driver seat belt is not fastened with the engine switch on (IG), the driver side seat belt warning light on the combination meter comes on to inform the driver. The center airbag sensor detects the driver seat belt status and sends signals to the combination meter.

b. Front passenger side seat belt warning light:
When the passenger seat belt is not fastened with the engine switch on (IG) and the passenger seat occupied, the passenger side seat belt warning light on the multi-display*1 (low blinks. The multi-display displays the passenger seat belt status and whether the passenger seat is occupied.

HINT:

*1: w/ Navigation System

*2: w/o Navigation System

c. Seat belt warning buzzer:
When the vehicle is driven at approximately 20 km/h (12.5 mph) or more while the driver or front passenger seat belt is not being fastened, the seat belt warning buzzer in the combination meter sounds at an interval of 1.2 seconds for 30 seconds.

FUNCTION OF MAIN COMPONENT

The following functions are available.

omponents	Function
Front seat inner belt LH*1,RH*2 (driver side buckle switch)	Informs center airbag sensor of driver seat belt condition (fastened or unfastened)
Front seat inner belt RH*1, LH*2 (passenger side buckle switch)	Informs center airbag sensor of front passenger seat belt condition (fastened or unfastened)
Occupant detection sensor	Informs combination meter of front passenger seat condition (occupied or unoccupied)
Driver side seat belt warning light	If driver seat belt is unfastened and engine switch is on (IG), combination meter flashes seat belt warning light of combination meter as reminder
Front passenger side seat belt warning light	When front passenger seat is occupied and engine switch is on (IG), if passenger seat belt is unfastened, combination meter flashes seat belt warning light of multi-display*3, (low as reminder
Seat belt warning buzzer	If driver or passenger seat belt is unfastened and engine switch is on (IG), combination meter sounds buzzer as reminder

HINT:

*1: for LHD

*2: for RHD

*3: w/ Navigation System

*4: w/o Navigation System

SYSTEM OPERATION

a. Driver side seat belt warning light

i. When the driver seat belt is not fastened with the engine switch on (IG), the driver side seat belt warning light on the combination meter comes on to inform the driver. The center airbag sensor detects the driver seat belt status and sends signals to the combination meter using .

b. Front passenger side seat belt warning light

i. When the passenger seat belt is not fastened with the engine switch on (IG) and the passenger seat occupied, the that the front passenger side seat belt warning light on the multi-display*1 (low blinks. The combination meter displays the passenger seat belt status and whether the passenger seat is occupied.

HINT:

*1: w/ Navigation System

*2: w/o Navigation System

for Preparation Click here

HINT:

- **Use the following procedures to troubleshoot the seat belt warning system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding to the next step.

NEXT

3.CHECK FOR DTC*

a. Check for DTCs and make a note of any codes that are output.

b. Clear the DTCs.

c. Based on the DTCs output above, try to cause the output of the same CAN communication system DTC or airbag system DTC by simulating the symptoms indicated by the DTC. Then recheck for DTCs.

Result

Result	Proceed to
DTC is not output	A
CAN communication system DTC is output (for LHD)	B
CAN communication system DTC is output (for RHD)	C
Airbag system DTC is output	D

B. Go to CAN COMMUNICATION SYSTEM (Click here)

C. Go to CAN COMMUNICATION SYSTEM (Click here)

D. Go to AIRBAG SYSTEM (Click here)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the problem symptoms table (Click here).

NEXT

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Operation check (Click here)

b. Data List / Active Test (Click here)

c. Terminals of ECU (Click here)

NEXT

6.REPAIR OR REPLACE

NEXT

7.CON IRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use the following procedures to troubleshoot the seat belt warning system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding to the next step.

NEXT

3.CHECK FOR DTC*

a. Check for DTCs and make a note of any codes that are output.

b. Clear the DTCs.

c. Based on the DTCs output above, try to cause the output of the same CAN communication system DTC or airbag system DTC by simulating the symptoms indicated by the DTC. Then recheck for DTCs.

Result

Result	Proceed to
DTC is not output	A
CAN communication system DTC is output (for LHD)	B
CAN communication system DTC is output (for RHD)	C
Airbag system DTC is output	D

B. Go to CAN COMMUNICATION SYSTEM (Click here)

C. Go to CAN COMMUNICATION SYSTEM (Click here)

D. Go to AIRBAG SYSTEM (Click here)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the problem symptoms table (Click here).

NEXT

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Operation check (Click here)

b. Data List / Active Test (Click here)

c. Terminals of ECU (Click here)

NEXT

6.REPAIR OR REPLACE

NEXT

7.CON IRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use the following procedures to troubleshoot the seat belt warning system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding to the next step.

NEXT

3.CHECK FOR DTC*

a. Check for DTCs and make a note of any codes that are output.

b. Clear the DTCs.

c. Based on the DTCs output above, try to cause the output of the same CAN communication system DTC or airbag system DTC by simulating the symptoms indicated by the DTC. Then recheck for DTCs.

Result

Result	Proceed to
DTC is not output	A
CAN communication system DTC is output (for LHD)	B
CAN communication system DTC is output (for RHD)	C
Airbag system DTC is output	D

B. Go to CAN COMMUNICATION SYSTEM (Click here)

C. Go to CAN COMMUNICATION SYSTEM (Click here)

D. Go to AIRBAG SYSTEM (Click here)

A

4.PROBLEM SYMPTOMS TABLE

a. Refer to the problem symptoms table (Click here).

NEXT

5.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Operation check (Click here)

b. Data List / Active Test (Click here)

c. Terminals of ECU (Click here)

NEXT

6.REPAIR OR REPLACE

NEXT

7.CON IRMATION TEST

NEXT

END

for Preparation Click here

INSPECT DRIVER SIDE SEAT BELT WARNING LIGHT

a. Turn the engine switch on (IG).

b. When the driver seat belt is not fastened, check that the driver side seat belt warning light on the combination meter blinks.

c. When the driver seat belt is fastened, check that the driver side seat belt warning light on the combination meter is off.

INSPECT FRONT PASSENGER SIDE SEAT BELT WARNING LIGHT

a. Turn the engine switch on (IG).

b. When the front passenger side seat belt is not fastened with the passenger seat occupied, check that the front passenger side seat belt warning light on the multi-display*1 (clock*2) blinks.

HINT:

*1: w/ Navigation System

*2: w/o Navigation System

c. When the front passenger seat belt is fastened with the passenger seat occupied, check that the front passenger side seat belt warning light on the multi-display*1 (clock*2) is off.

HINT:

*1: w/ Navigation System

*2: w/o Navigation System

INSPECT SEAT BELT WARNING BUZZER

HINT:

If the buzzer does not sound, the buzzer cancel setting may be set to ON (Click here).

a. Turn the engine switch on (IG).

b. Place a weight of 20 kg (44.0 lb) on the front passenger seat.

c. **NOTICE:**

- **Do not allow the weight to come into contact with the seatback when placing it on the seat cushion.**
- **Place the weight on the seat cushion.**

When the vehicle is driven at approximately 20 km/h (12.5 mph) or more while the driver or front passenger seat belt is not fastened, check that the buzzer in the combination meter sounds at an interval of 1.2 seconds for 30 seconds.

d. Check that the buzzer sounds at an interval of 0.4 seconds for 90 seconds.

e. Check that the buzzer stops 2 minutes after the buzzer starts sounding.

f. After the buzzer has stopped, turn the engine switch off and then start the engine again. Drive the vehicle at approximately 20 km/h (12.5 mph) or more while the driver or front passenger seat belt is not being fastened, and then check that the buzzer sounds again.

g. After the buzzer has stopped, fasten the driver and front passenger seat belts. Drive the vehicle at approximately 20 km/h (12.5 mph) or more and unfasten the driver or front passenger seat belt, and then check that the buzzer sounds again.

h. After the buzzer has stopped, move the shift lever to R, and then move it to D. Drive the vehicle at approximately 20 km/h (12.5 mph) or more, and then check that the buzzer sounds again.

for Preparation Click here

CUSTOMIZING FUNCTION WITH TECHSTREAM (REFERENCE)

NOTICE:

- **When the customer requests a change in a function, first make sure that the function can be customized.**
- **Be sure to make a note of the current settings before customizing.**
- **When troubleshooting a function, first make sure that the function is set to the default setting.**

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Customize Setting.

e. Select the setting by referring to the table below.

Seat Belt Warning

Display	Default	Contents	Setting
D-Seatbelt Warning Buzzer	ON	If driver side seat belt is unfastened and the vehicle is driven at approximately 20 mh (12.5 mph) or more, this system sound the seat belt warning buzzer	ON/OFF
P-Seatbelt Warning Buzzer	ON	If front passenger side seat belt is unfastened and the vehicle is driven at approximately 20 mh (12.5 mph) or more, this system sound the seat belt warning buzzer	ON/OFF

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptom. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Seat Belt Warning System

Symptom	Suspected Area	See page
Driver side seat belt warning light does not operate	Proceed to "Driver side seat belt warning light does not operate"	Click here
Front passenger side seat belt warning light does not operate	Proceed to "Front passenger side seat belt warning light does not operate"	Click here

for Preparation Click here

HINT:

Use the table below to help determine the cause of problem symptom. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Seat Belt Warning System

Symptom	Suspected Area	See page
Driver side seat belt warning light does not operate	Proceed to "Driver side seat belt warning light does not operate"	Click here
Front passenger side seat belt warning light does not operate	Proceed to "Front passenger side seat belt warning light does not operate"	Click here

for Preparation Click here

HINT:


Use the table below to help determine the cause of problem symptom. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.

Seat Belt Warning System

Symptom	Suspected Area	See page
Driver side seat belt warning light does not operate	Proceed to "Driver side seat belt warning light does not operate"	Click here
Front passenger side seat belt warning light does not operate	Proceed to "Front passenger side seat belt warning light does not operate"	Click here


for Preparation Click here

CHECK COMBINATION METER

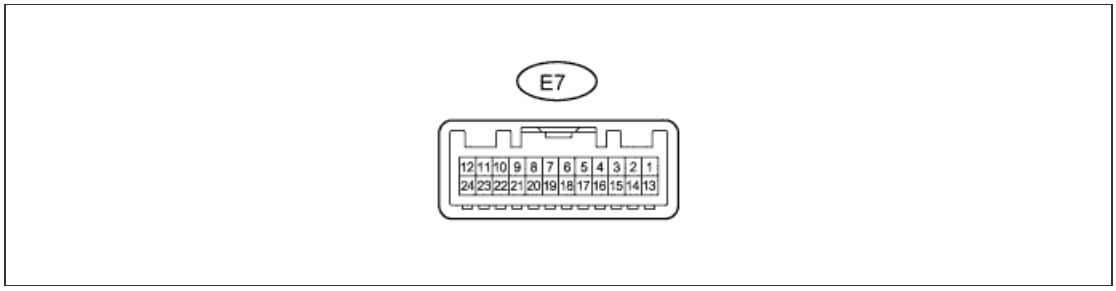


Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E7-17 (B) - Body ground	R - Body ground	Combination meter +B line	Always	11 to 14 V
E7-18 (IG+) - Body ground	B - Body ground	Combination meter IG line	Engine switch on (IG)	11 to 14 V
E7-14 (EP) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E7-22 (WRNP) - Body ground	Y - Body ground	Passenger seat belt signal	Passenger seat is occupied, seat belt is fastened	Below 1 V
			Passenger seat is occupied, seat belt is unfastened	11 to 14 V

CHECK MULTI- $PLAY (w/ Navigation System)

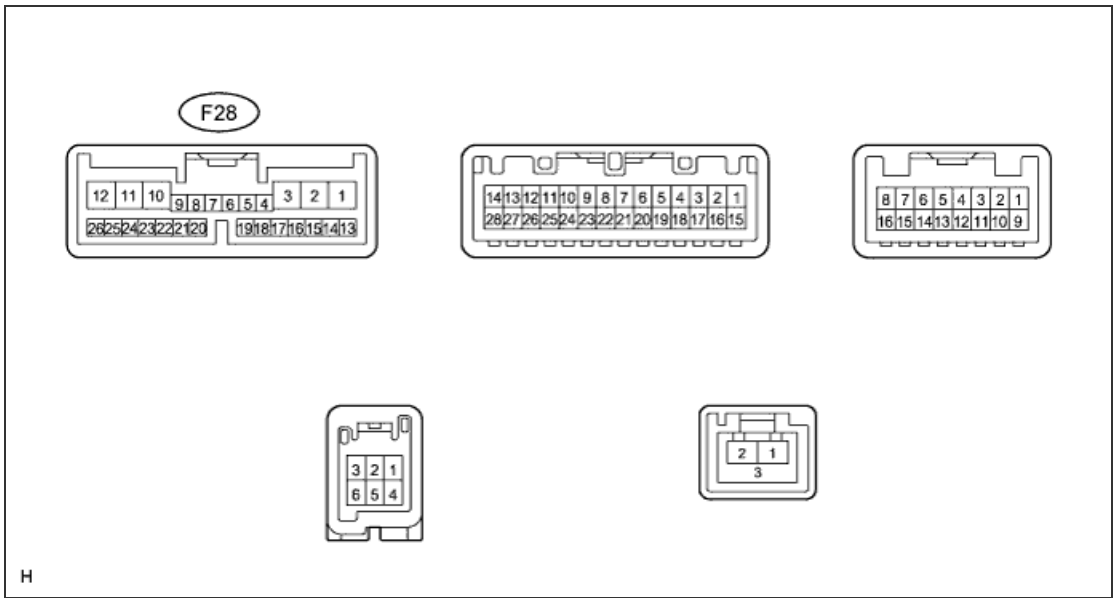


Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F28-10 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
F28-1 (+B1) - Body ground	R - Body ground	Multi-display +B line	Always	11 to 14 V
F28-2 (ACC) - Body ground	GR - Body ground	Multi-display ACC line	Engine switch on (ACC)	11 to 14 V
F28-3 (IG) - Body ground	G - Body ground	Multi-display IG line	Engine switch on (IG)	11 to 14 V
F28-21 (PBEW) - Body ground	Y - Body ground	Passenger seat belt warning signal	Passenger seat is occupied, seat belt is fastened	Below 1 V
			Passenger seat is occupied, seat belt is unfastened	11 to 14 V

CHECK CLOCK (w/o Navigation System)

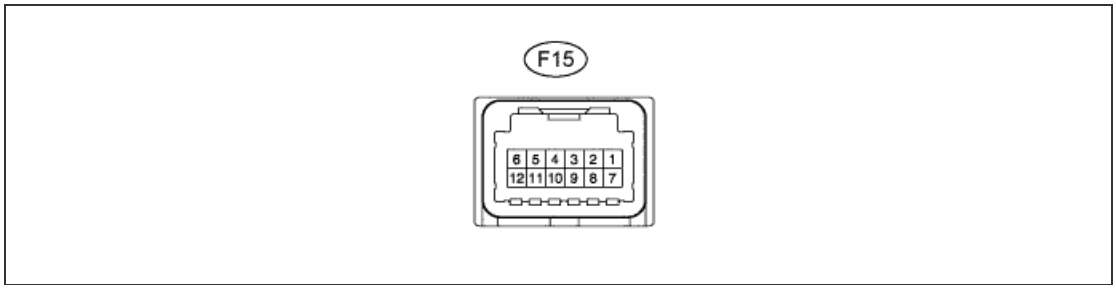

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F15-1 (E) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
F15-12 (B) - Body ground	R - Body ground	Clock +B line	Always	11 to 14 V
F15-10 (IG+) - Body ground	G - Body ground	Clock ACC line	Engine switch on (ACC)	11 to 14 V
F15-11 (ACC) - Body ground	GR - Body ground	Clock IG line	Engine switch on (IG)	11 to 14 V
F15-21 (PBEW) - Body ground	Y - Body ground	Passenger seat belt warning signal	Passenger seat is occupied, seat belt is fastened	Below 1 V
			Passenger seat is occupied, seat belt is unfastened	11 to 14 V

CHECK CENTER AIRBAG SENSOR

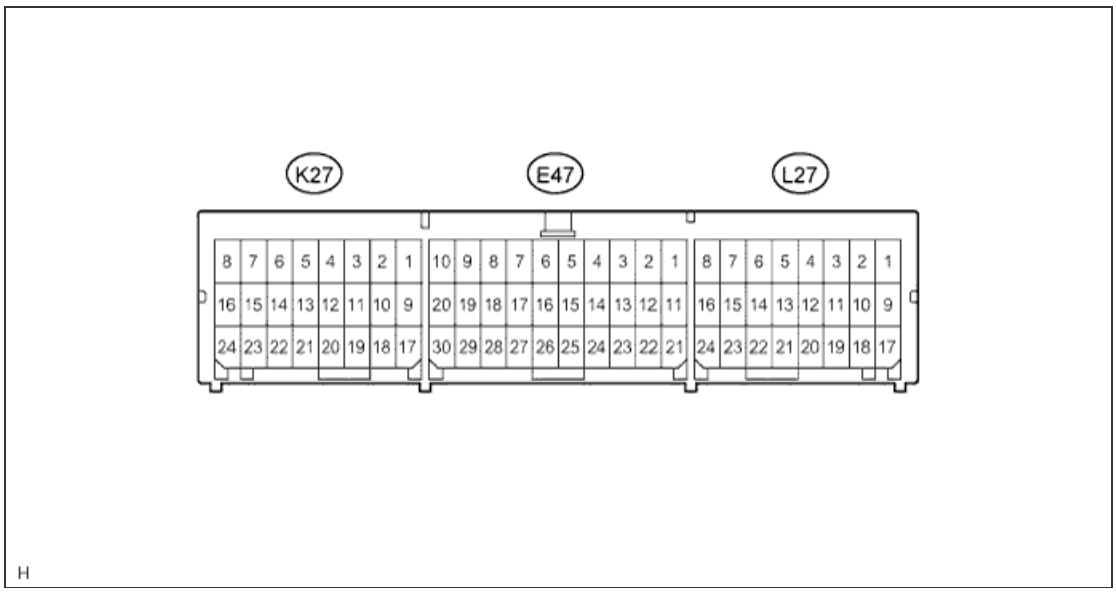

Terminal No.	Symbol	Destination
K27-10*1, *3 or K32-11*1, *4	LBE+	Front seat inner belt LH (Seat belt buckle switch LH)
K32-12*1 ,*3	LBE-	Front seat inner belt LH (Seat belt buckle switch LH)
L27-15*2, *3 or L38-15*2 ,*4	RBE+	Front seat inner belt RH (Seat belt buckle switch RH)
L38-14*2, *4	RBE-+	Front seat inner belt RH (Seat belt buckle switch RH)

HINT:

*1: for LHD


*2: for RHD

*3: w/ Curtain Shield Airbag

*4: w/o Curtain Shield Airbag


for Preparation Click here

CHECK COMBINATION METER

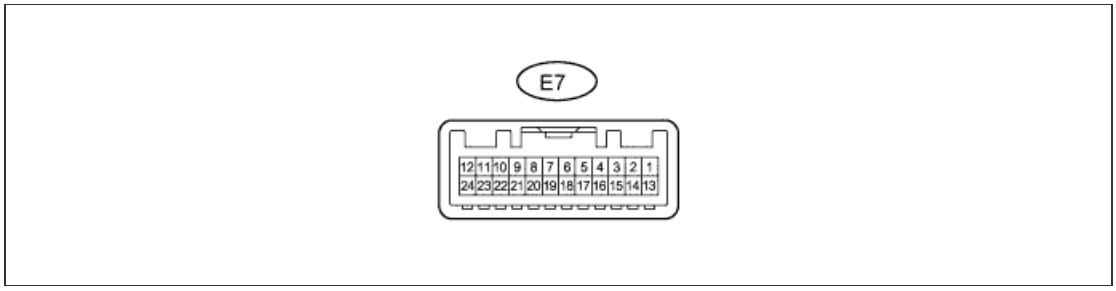


Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E7-17 (B) - Body ground	R - Body ground	Combination meter +B line	Always	11 to 14 V
E7-18 (IG+) - Body ground	B - Body ground	Combination meter IG line	Engine switch on (IG)	11 to 14 V
E7-14 (EP) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E7-22 (WRNP) - Body ground	Y - Body ground	Passenger seat belt signal	Passenger seat is occupied, seat belt is fastened	Below 1 V
			Passenger seat is occupied, seat belt is unfastened	11 to 14 V

CHECK MULTI- $PLAY (w/ Navigation System)

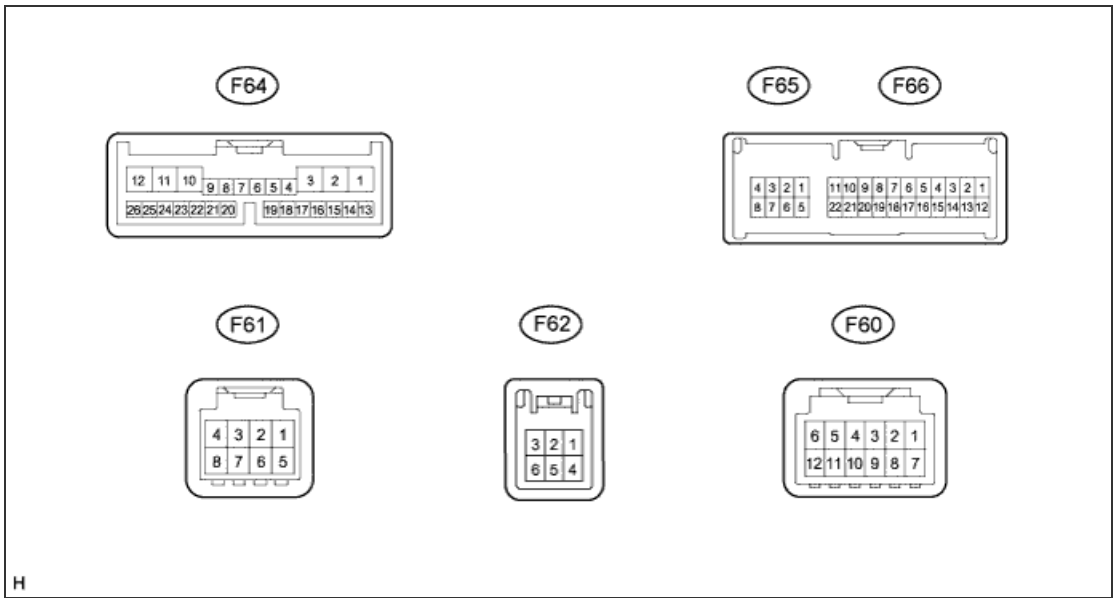


Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F64-10 (GND1) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
F64-1 (+B1) - Body ground	R - Body ground	Multi-display +B line	Always	11 to 14 V
F64-2 (ACC) - Body ground	GR - Body ground	Multi-display ACC line	Engine switch on (ACC)	11 to 14 V
F64-3 (IG) - Body ground	G - Body ground	Multi-display IG line	Engine switch on (IG)	11 to 14 V
F62-5 (PBEW) - Body ground	Y - Body ground	Passenger seat belt warning signal	Passenger seat is occupied, seat belt is fastened	Below 1 V
			Passenger seat is occupied, seat belt is unfastened	11 to 14 V

CHECK CLOCK (w/o Navigation System)

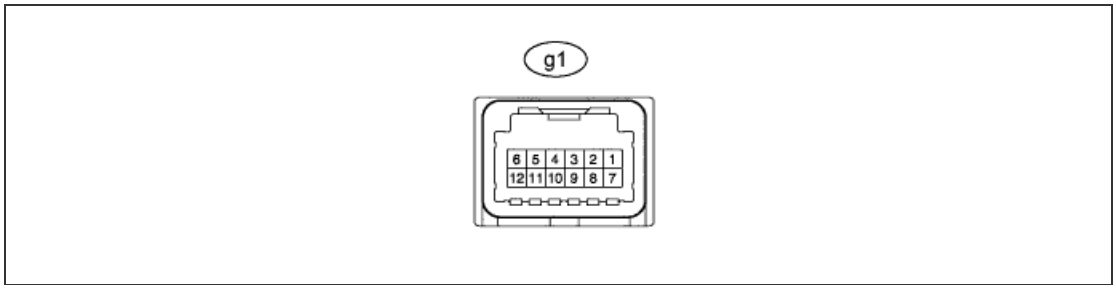

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
g1-1 (E) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
g1-12 (B) - Body ground	R - Body ground	Cloc +B line	Al ays	11 to 14 V
g1-10 (IG+) - Body ground	G - Body ground	Cloc ACC line	Engine s itch on (ACC)	11 to 14 V
g1-11 (ACC) - Body ground	GR - Body ground	Cloc IG line	Engine s itch on (IG)	11 to 14 V
g1-8 (LAPL) - Body ground	- Body ground	Passenger seat belt warning signal	Passenger seat is occupied, seat belt is fastened	Below 1 V
			Passenger seat is occupied, seat belt is unfastened	11 to 14 V


CHECK CENTER AIRBAG SENSOR (w/ Curtain Shield Airbag)

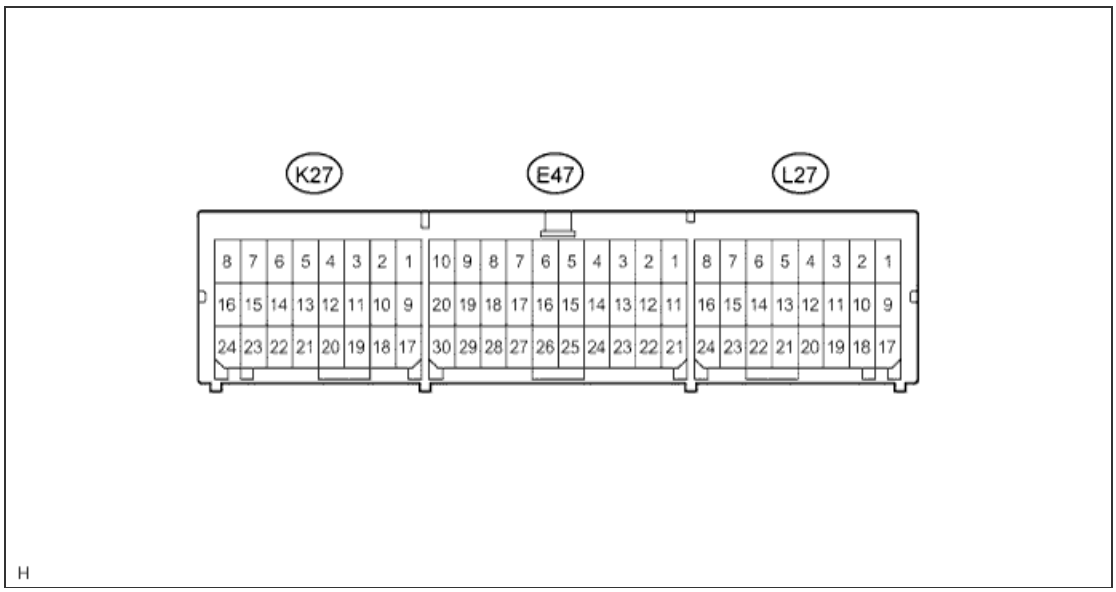

Terminal No.	Symbol	Destination
K27-10 1	BE+	Front seat inner belt L (Seat belt buc le s itch L)
L27-15	BE+	Front seat inner belt R (Seat belt buc le s itch R)

1for L D
for R D

CHECK CENTER AIRBAG SENSOR (w/o Curtain Shield Airbag)

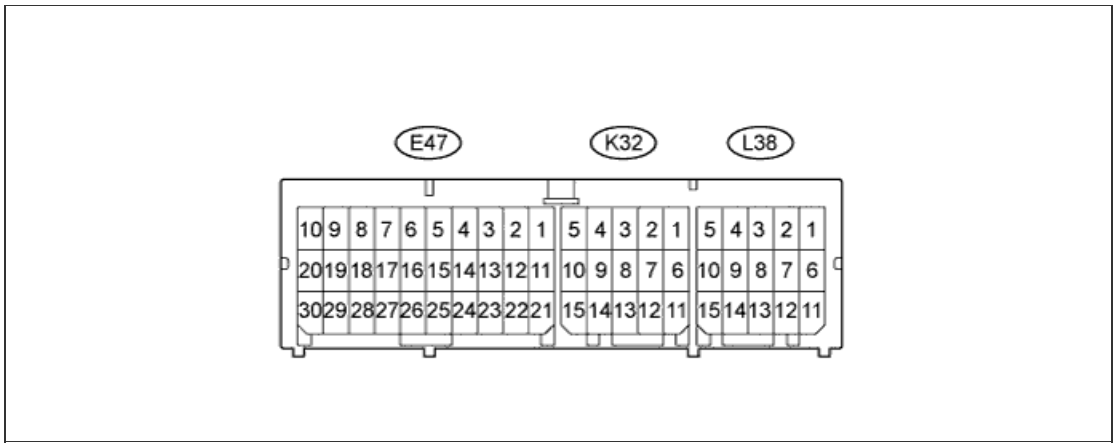

Terminal No.	Symbol	Destination
K32-11 1	BE+	Front seat inner belt L (Seat belt buc le s itch L)
K32-12 1	BE-	Front seat inner belt L (Seat belt buc le s itch L)
L3 -15	BE+	Front seat inner belt R (Seat belt buc le s itch R)
L3 -14	BE-	Front seat inner belt R (Seat belt buc le s itch R)

1for L D
for R D

for Preparation Click here

READ DATA LIST

HINT:

Using the intelligent tester to read the Data List allows values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / Data List.

e. According to the display on the intelligent tester, read the "Data List".

Combination Meter

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
P-Seatbelt Buckle SW	Front passenger side seat belt buckle signal / ON or OFF	ON: Front passenger side seat belt is fastened OFF: Front passenger side seat belt is unfastened	-
D - Seatbelt Warning Buzzer	Driver side seat belt warning signal / ON or OFF	ON: Driver side seat belt warning buzzer is sound OFF: Driver side seat belt warning buzzer is not sound	-
P - Seatbelt Warning Buzzer	Front passenger side seat belt warning signal / ON or OFF	ON: Front passenger side seat belt warning buzzer is sound OFF: Front passenger side seat belt warning buzzer is not sound	-

SRS Airbag

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Driver side Buckle SW	Driver side seat belt / set or unset	Set: Driver side seat belt is fastened Unset: Driver side seat belt is unfastened	-
Passenger side Buckle SW	Front passenger side seat belt / set or unset	Set: Front passenger side seat belt is fastened Unset: Front passenger side seat belt is unfastened	-

PERFORM ACTIVE TEST

HINT:

Using the intelligent tester to perform Active Tests allows relays, VSVs, actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. Performing Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Combination Meter / Active Test.

e. According to display on the intelligent tester, perform the "Active Test".

Combination Meter


Tester Display	Test Part	Control Range	Diagnostic Note
Driver Side Seat Belt	Driver side seat belt warning light	ON or OFF	-
Front Passenger Side Seat Belt	Front passenger side seat belt warning light	ON or OFF	-


for Preparation Click here

DESCRIPTION

When the engine switch is on (IG), the center airbag sensor transmits front seat inner belt state signals to the combination meter through the CAN. If the driver seat belt is not fastened, the combination meter blinks the driver side seat belt warning light. If the seat belt is fastened, the warning light goes off.

WIRING DIAGRAM

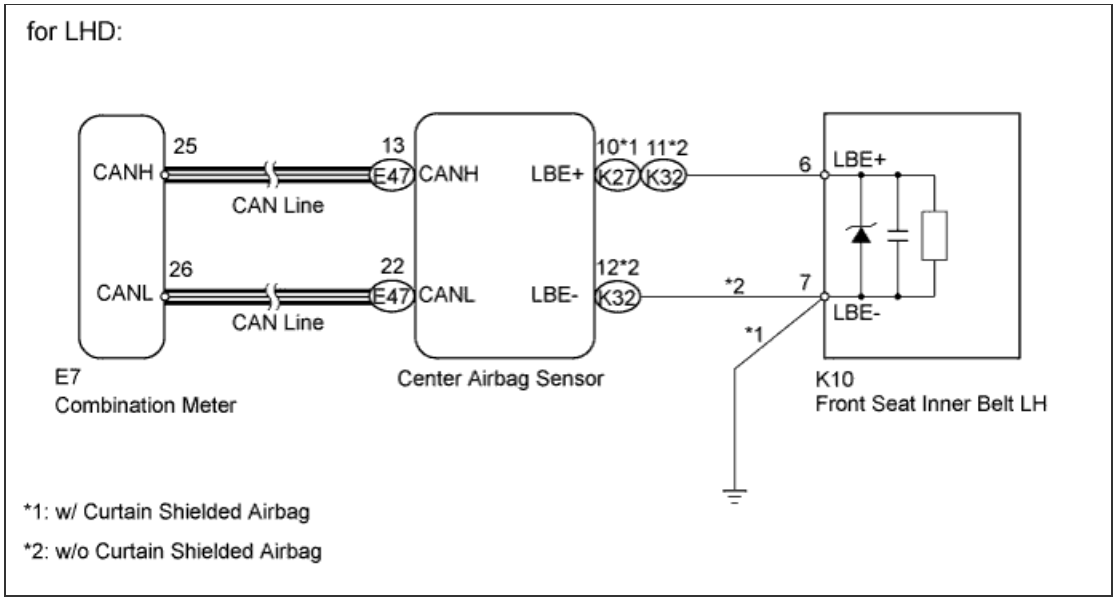

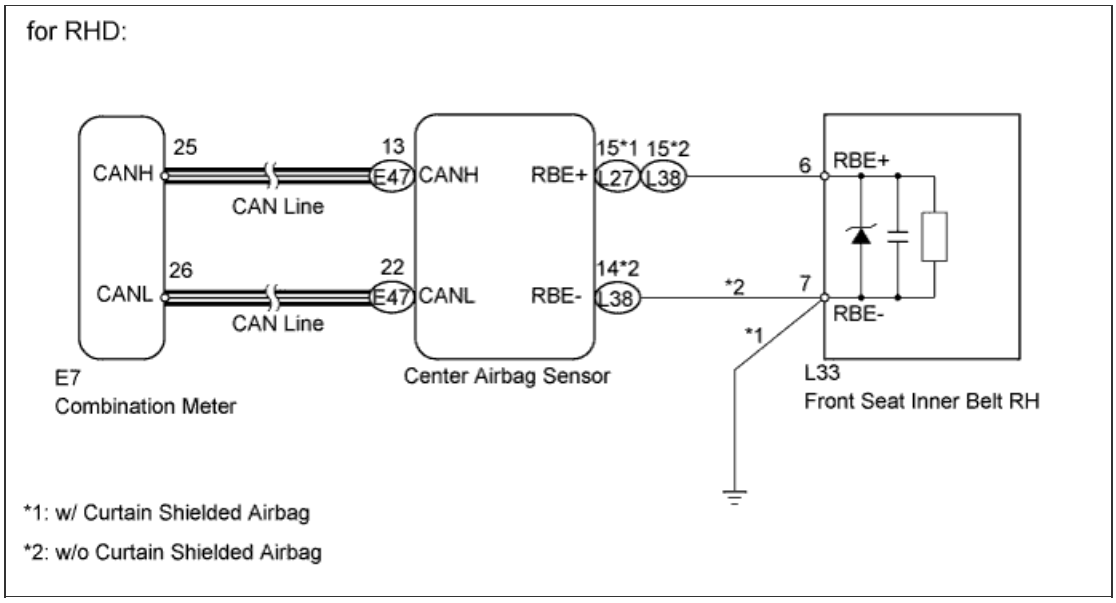

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Check for DTCs.

Result

Result	Proceed to
DTC is not output	A
CAN system DTC is output (for LHD)	B
CAN system DTC is output (for RHD)	C
Airbag system DTC is output	D

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

D → Go to AIRBAG SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER

a. Operate the intelligent tester according to the steps on the display and select "Active Test".

Co ination Meter

Item	Test Part	Control Range	Diagnostic Note
Driver Side Seat Belt	Driver side seat belt warning light	ON or OFF	-

OK:

Driver side seat belt warning light condition can be switched by "Active Test".

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE COMBINATION METER (Click here)

A

3.REPLACE CENTER AIRBAG SENSOR ASSEMBLY

a. Temporarily replace the center airbag sensor with a new one (Click here).

NEXT

4.CHECK DRIVER SIDE SEAT BELT WARNING LIGHT

a. Check the driver side seat belt warning light function (Click here).

OK:

Driver side seat belt warning light operates nor ally.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE COMBINATION METER (Click here)

A


END (CENTER AIRBAG SENSOR IS DEFECTIVE)


for Preparation Click here

DESCRIPTION

When the engine switch is on (IG), the center airbag sensor transmits front seat inner belt state signals to the combination meter through the CAN. If the driver seat belt is not fastened, the combination meter blinks the driver side seat belt warning light. If the seat belt is fastened, the warning light goes off.

WIRING DIAGRAM

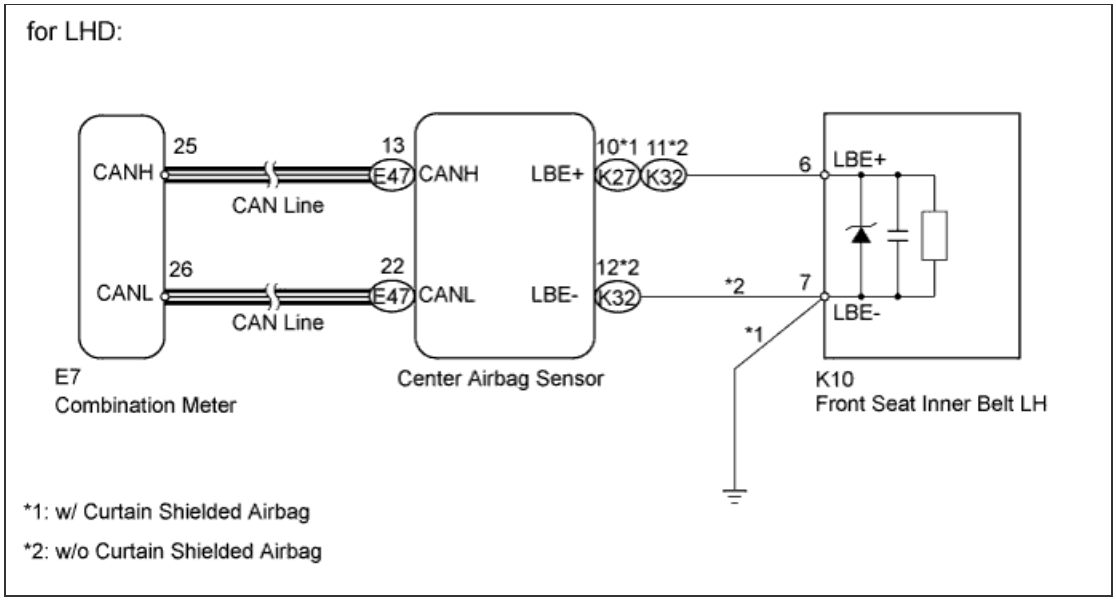

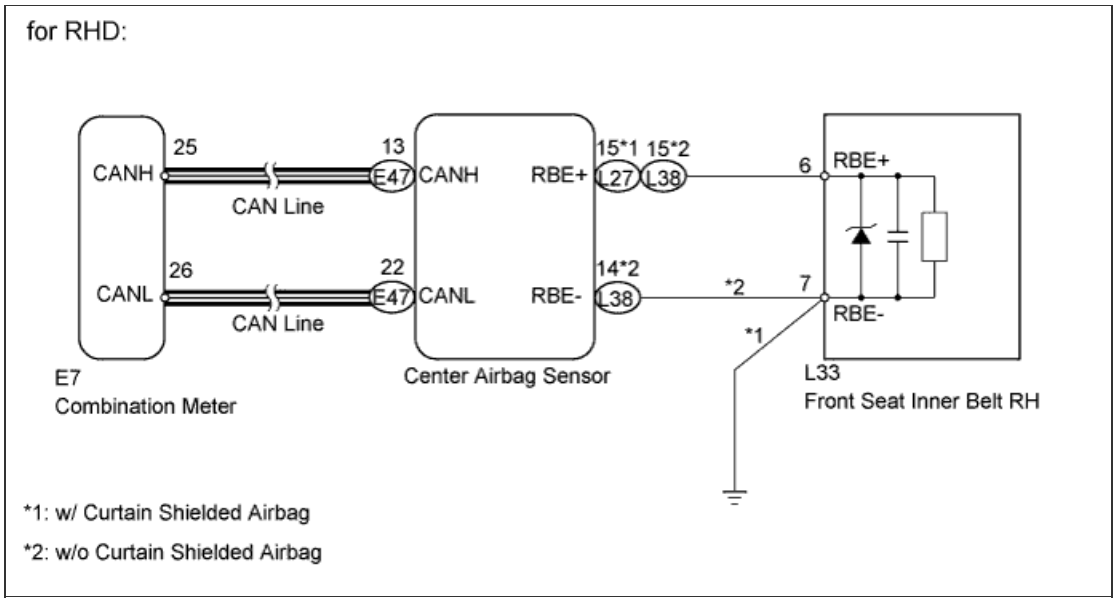

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Check for DTCs.

Result

Result	Proceed to
DTC is not output	A
CAN system DTC is output (for LHD)	B
CAN system DTC is output (for RHD)	C
Airbag system DTC is output	D

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

D → Go to AIRBAG SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER

a. Operate the intelligent tester according to the steps on the display and select "Active Test".

Co ination Meter

Item	Test Part	Control Range	Diagnostic Note
Driver Side Seat Belt	Driver side seat belt warning light	ON or OFF	-

OK:

Driver side seat belt warning light condition can be switched by "Active Test".

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE COMBINATION METER (Click here)

A

3.REPLACE CENTER AIRBAG SENSOR ASSEMBLY

a. Temporarily replace the center airbag sensor with a new one (Click here).

NEXT

4.CHECK DRIVER SIDE SEAT BELT WARNING LIGHT

a. Check the driver side seat belt warning light function (Click here).

OK:

Driver side seat belt warning light operates nor ally.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE COMBINATION METER (Click here)

A

END (CENTER AIRBAG SENSOR IS DEFECTIVE)

for Preparation Click here

DESCRIPTION


The combination meter detects the state of the front seat inner belt RH when the front passenger seat is occupied with the engine switch on (IG). If the front passenger seat belt is not fastened, the front passenger side seat belt warning light on the multi-display*1 or clock*2 blinks. If the seat belt is fastened, the warning light goes off.

HINT:

*1: w/ Navigation System

*2: w/o Navigation System

WIRING DIAGRAM

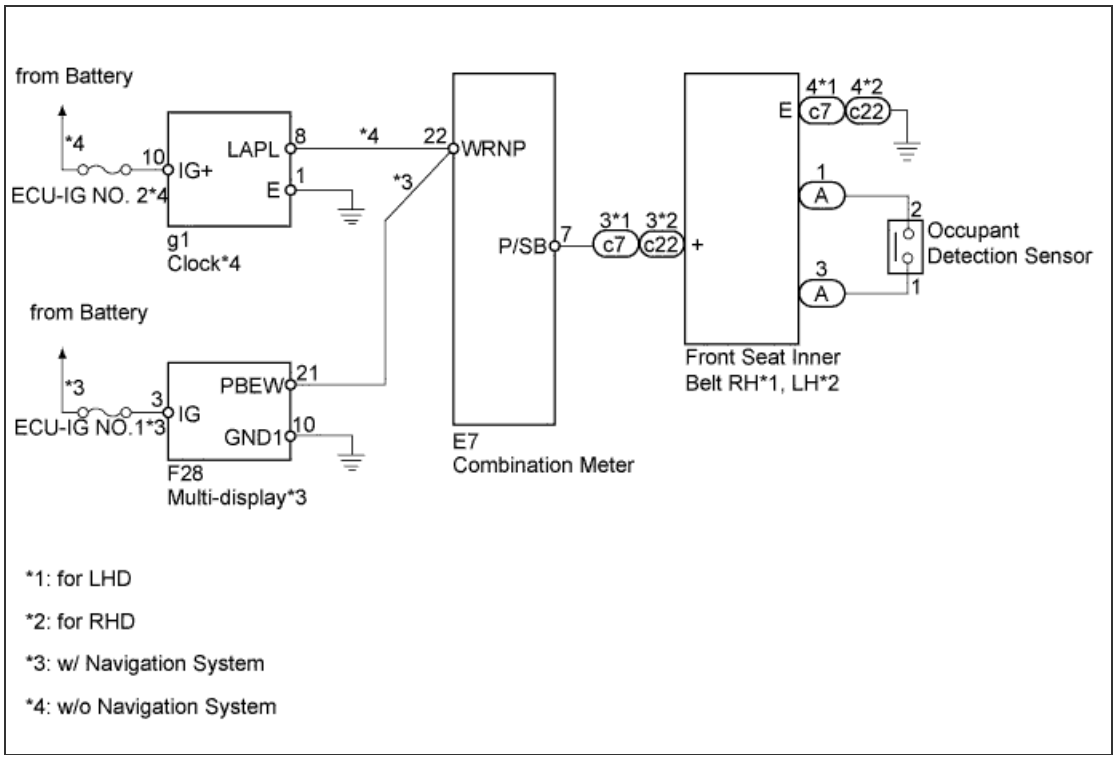

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Check for DTCs.

Result

Result	Proceed to
DTC is not output	A
CAN communication system DTC is output (for LHD)	B
CAN communication system DTC is output (for RHD)	C
Airbag system DTC is output	D

B → Go to CAN COMMUNICATION SYSTEM (Click here)

C → Go to CAN COMMUNICATION SYSTEM (Click here)

D → Go to AIRBAG SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER

a. Operate the intelligent tester according to the steps on the display and select "Active Test".

Combination Meter

Item	Test Part	Control Range	Diagnostic Note
Front Passenger Side Seat Belt	Front passenger side seat belt warning light	ON or OFF	-

Result

Result	Proceed to
Front passenger side seat belt warning light condition cannot be switched by "Active Test"	A
Front passenger side seat belt warning light condition can be switched by "Active Test"	B

B → Go to step 10

A

3.CHECK NAVIGATION SYSTEM

a. Check if the vehicle is equipped with navigation system.

Result

Result	Proceed to
w/ Navigation System	A
w/o Navigation System	B

B → Go to step 7

A

4.INSPECT FUSE (ECU-IG NO. 1)

a. Disconnect the ECU-IG NO. 1 fuse from the cowl side junction block RH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
ECU-IG NO. 1 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

5.CHECK HARNESS AND CONNECTOR (MULTI-DISPLAY - COMBINATION METER, BATTERY AND BODY GROUND)

a. Disconnect the F28 display connector.

b. Disconnect the E7 ECU connector.

c. Measure the resistance and voltage according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
F28-21 (PBEW) -		

-22 (RNP)	Always	Below 1 Ω
F28-10 (GND1) - Body ground		
F28-21 (PBEW) or E7-22 (WRNP) - Body ground	Always	10 kΩ or higher

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
F28-3 (IG) - Body ground	Engine switch on (IG)	11 to 14 V

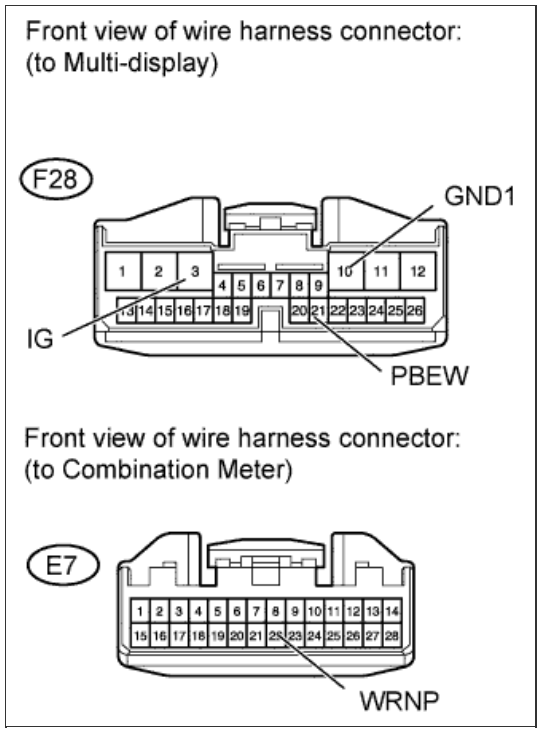

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

6.CHECK DISPLAY AND NAVIGATION ASSEMBLY (MULTI-DISPLAY)

a. Disconnect the F28 display connector.

b. Connect the positive (+) battery lead to terminal 3 (IG), and the negative battery lead to terminals 21 (PBEW) and 10 (GND1).

c. Check that the front passenger side seat belt warning light comes on.

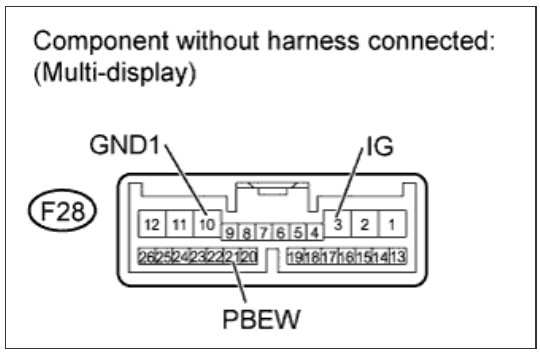

OK:

Measurement Connection	Specified Condition
Battery positive (+) → F28-3 (IG) Battery negative (-) → F28-21 (PBEW) Battery negative (-) → F28-10 (GND1)	Front passenger side seat belt warning light on

Result

Result	Proceed to
OK (w/ Multi-information Display)	A
OK (w/o Multi-information Display)	B
NG	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE MULTI-DISPLAY (Click here)

A

REPLACE COMBINATION METER (Click here)

7.INSPECT FUSE (ECU-IG NO. 2)

a. Disconnect the ECU-IG NO. 2 fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
ECU-IG2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

8.CHECK HARNESS AND CONNECTOR (CLOCK - COMBINATION METER, BATTERY AND BODY GROUND)

a. Disconnect the g1 clock connector.

b. Disconnect the E7 ECU connector.

c. Measure the resistance and voltage according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
g1-1 (E) - Body ground	Always	Below 1 Ω
g1-8 (LAPL) - E7-22 (WRNP)	Always	Below 1 Ω
g1-8 (LAPL) - Body ground	Always	10 kΩ or higher


Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
g1-10 (IG+) - Body ground	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector: (to Clock)

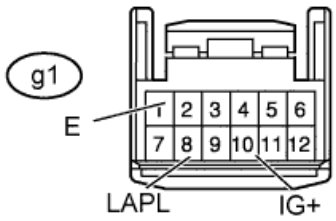

Front view of wire harness connector: (to Combination Meter)

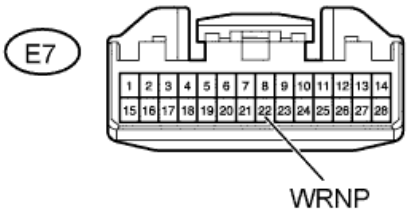

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.CHECK CLOCK

a. Disconnect the g1 clock connector.


b. Connect the positive (+) battery lead to terminal 10 (IG+), and the negative (-) battery lead to terminals 1 (E) and 8 (LAPL).

c. Check that the front passenger side seat belt warning light comes on.

OK:

Measurement Connection	Specified Condition
Battery positive (+) → g1-10 (IG+) Battery negative (-) → g1-8 (LAPL) Battery negative (-) → g1-1 (E)	Front passenger side seat belt warning light on

Component without harness connected: (Clock)

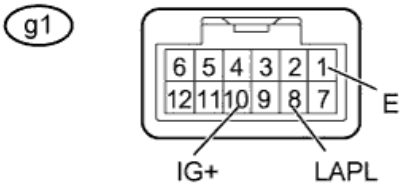

Result

Result	Proceed to

O (w/ Multi-information Display)	A
O (w/o Multi-information Display)	B
NG	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE CLOCK (Click here)

A

REPLACE COMBINATION METER (Click here)

10.REPLACE FRONT SEAT INNER BELT ASSEMBLY

a. Temporarily replace the front seat inner belt RH*1 or LH*2 with a new one (Click here).

HINT:

*1: for LHD

*2: for RHD

NEXT

11.CHECK FRONT PASSENGER SIDE SEAT BELT WARNING LIGHT

a. Check the front passenger side seat belt warning light function (Click here).

OK:
Front passenger side seat belt warning light operates normally.

Result

Result	Proceed to
OK	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER (Click here)

C → REPLACE COMBINATION METER (Click here)

A

END (FRONT SEAT INNER BELT IS DEFECTIVE)

for Preparation Click here

DESCRIPTION


The combination meter detects the state of the front seat inner belt RH when the front passenger seat is occupied with the engine switch on (IG). If the front passenger seat belt is not fastened, the front passenger side seat belt warning light on the multi-display*1 or clock*2 blinks. If the seat belt is fastened, the warning light goes off.

HINT:

*1: w/ Navigation System

*2: w/o Navigation System

WIRING DIAGRAM

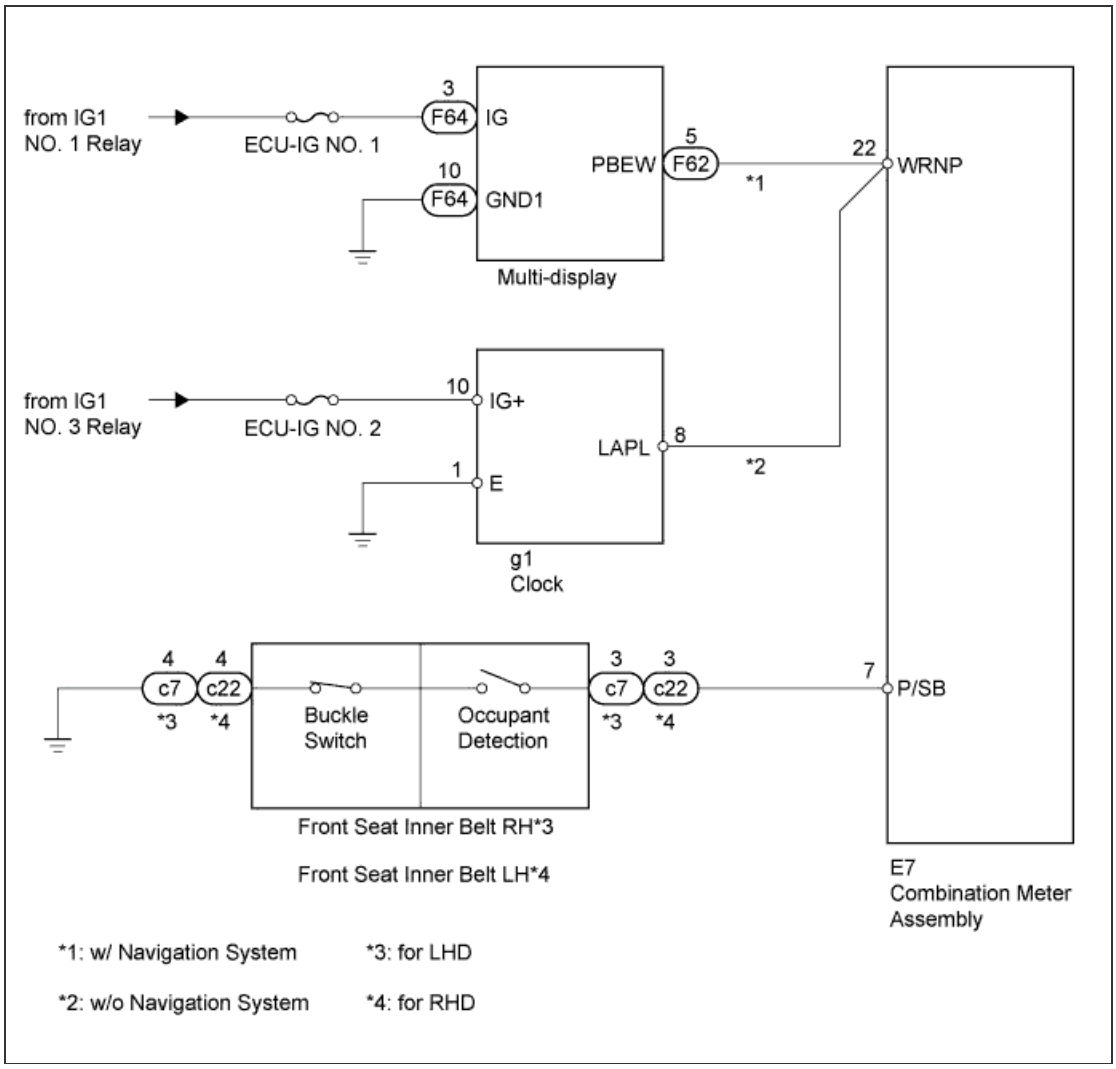

INSPECTION PROCEDURE

NOTICE:

Inspect the fuses for circuits related to this system before performing the following inspection procedure.

1.CHECK FOR DTC

a. Check for DTCs.

Result

Result	Proceed to
DTC is not output	A

CAN communication system DTC is output (for LHD)	B
CAN communication system DTC is output (for RHD)	C
Airbag system DTC is output	D

B → GO TO CAN COMMUNICATION SYSTEM (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (Click here)

D → GO TO AIRBAG SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER

a. Operate the intelligent tester according to the steps on the display and select "Active Test".

Combination Meter

Item	Test Part	Control Range	Diagnostic Note
Front Passenger Side Seat Belt	Front passenger side seat belt warning light	ON or OFF	-

Result

Result	Proceed to
Front passenger side seat belt warning light condition cannot be switched by "Active Test"	A
Front passenger side seat belt warning light condition can be switched by "Active Test"	B

B → Go to step 8

A

3.CHECK NAVIGATION SYSTEM

a. Check if the vehicle is equipped with navigation system.

Result

Result	Proceed to
w/ Navigation System	A
w/o Navigation System	B

B → Go to step 6

A

4.CHECK HARNESS AND CONNECTOR (MULTI-DISPLAY - COMBINATION METER, BATTERY AND BODY GROUND)

a. Disconnect the F 2 and F multi-display connectors.

b. Disconnect the E combination meter assembly connector.

c. Measure the resistance and voltage according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F 2- (PBE) - E -22 (RNP)	Always	Below 1 Ω
F -1 (GND1) - Body ground	Always	Below 1 Ω
F 2- (PBE) or		

E -22 (RNP) - Body ground	Always	10 kΩ or higher

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
F -3 (IG) - Body ground	Engine switch on (IG)	11 to 14 V

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


5.CHECK DISPLAY AND NAVIGATION MODULE ASSEMBLY (MULTI-DISPLAY)

a. Disconnect the F 2 and F multi-display connectors.

b. Apply battery voltage to the terminals and check that the front passenger seat belt warning light illuminates.

OK:

Measurement Connection	Specified Condition
Positive battery → F -3 (IG) Negative battery → F 2- (PBE) Negative battery → F -1 (GND1)	Front passenger side seat belt warning light on

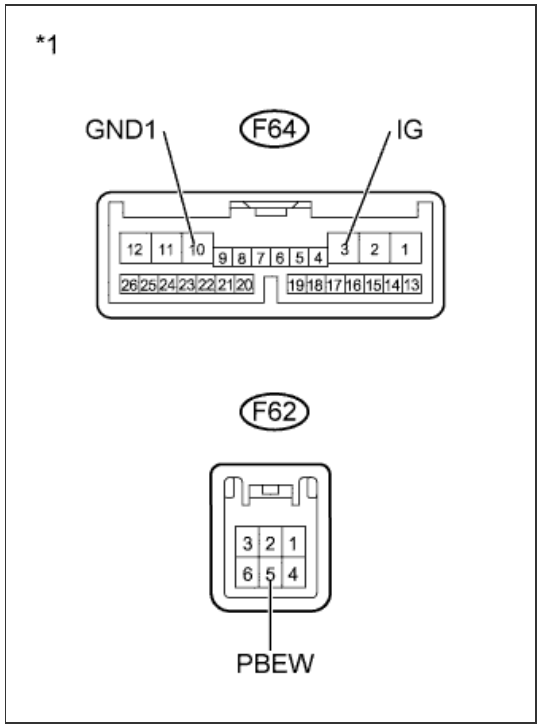

Text in Illustration

*1	Component without harness connected (Multi-display)

Result

Result	Proceed to
NG	A
O (w/ Multi-information Display)	B
O (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

REPLACE MULTI-DISPLAY (Click here)

6.CHECK HARNESS AND CONNECTOR (CLOCK - COMBINATION METER, BATTERY AND BODY GROUND)

a. Disconnect the g1 clock connector.

b. Disconnect the E combination meter assembly connector.

c. Measure the resistance and voltage according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
g1-1 (E) - Body ground	Always	Below 1 Ω
g1-8 (LAPL) - E -22 (RNP)	Always	Below 1 Ω
g1-8 (LAPL) - Body ground	Always	10 kΩ or higher

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
g1-10 (IG+) - Body ground	Engine switch on (IG)	11 to 14 V


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK CLOCK

a. Disconnect the g1 clock connector.

b. Apply battery voltage to the terminals and check that the front passenger seat belt warning light illuminates.

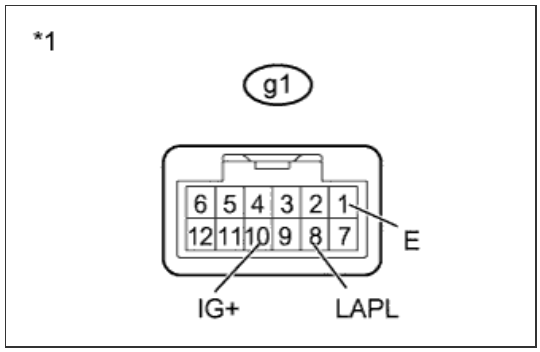

OK:

Measurement Connection	Specified Condition
Positive battery → g1-10 (IG+) Negative battery → g1-8 (LAPL) Negative battery → g1-1 (E)	Front passenger seat belt warning light Illuminates

Text in Illustration

*1	Component without harness connected (Clock)

Result

Result	Proceed to
NG	A
O (w/ Multi-information Display)	B
O (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

REPLACE CLOCK (Click here)

8.REPLACE FRONT SEAT INNER BELT ASSEMBLY

a. Temporarily replace the front seat inner belt RH*1 or LH*2 with a new one (Click here).

HINT:

*1: for LHD

*2: for RHD

NE T

9.CHECK FRONT PASSENGER SIDE SEAT BELT WARNING LIGHT

a. Check the front passenger side seat belt warning light function (Click here).

OK:

Front passenger side seat belt warning light operates normally.

Result

Result	Proceed to
O	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

END (FRONT SEAT INNER BELT IS DEFECTIVE)

for Preparation Click here

DESCRIPTION


The combination meter detects the state of the front seat inner belt RH when the front passenger seat is occupied with the engine switch on (IG). If the front passenger seat belt is not fastened, the front passenger side seat belt warning light on the multi-display*1 or clock*2 blinks. If the seat belt is fastened, the warning light goes off.

HINT:

*1: w/ Navigation System

*2: w/o Navigation System

WIRING DIAGRAM

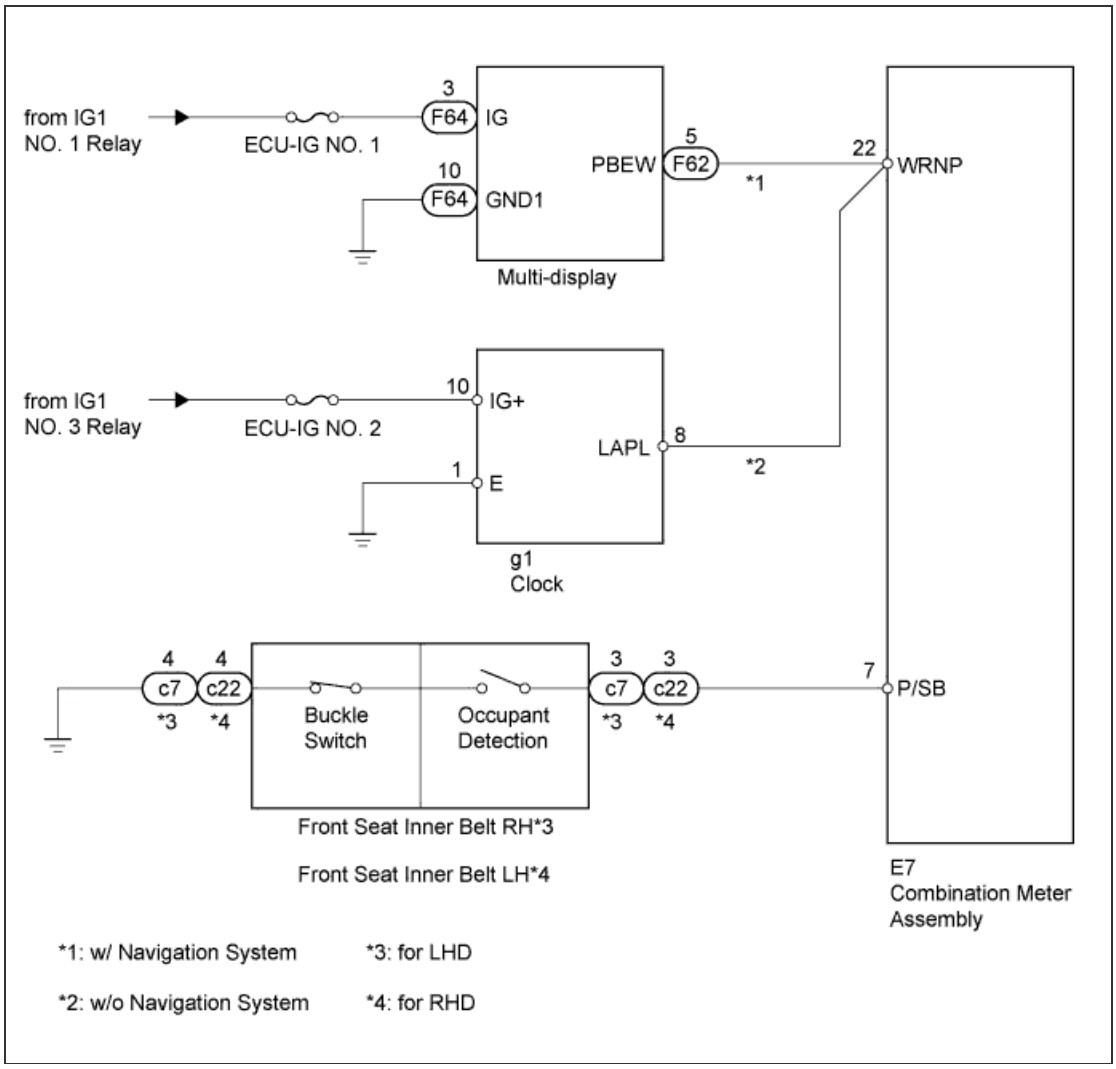

INSPECTION PROCEDURE

NOTICE:

Inspect the fuses for circuits related to this system before performing the following inspection procedure.

1.CHECK FOR DTC

a. Check for DTCs.

Result

Result	Proceed to
DTC is not output	A

CAN communication system DTC is output (for LHD)	B
CAN communication system DTC is output (for RHD)	C
Airbag system DTC is output	D

B → GO TO CAN COMMUNICATION SYSTEM (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (Click here)

D → GO TO AIRBAG SYSTEM (Click here)

A

2.PERFORM ACTIVE TEST USING INTELLIGENT TESTER

a. Operate the intelligent tester according to the steps on the display and select "Active Test".

Combination Meter

Item	Test Part	Control Range	Diagnostic Note
Front Passenger Side Seat Belt	Front passenger side seat belt warning light	ON or OFF	-

Result

Result	Proceed to
Front passenger side seat belt warning light condition cannot be switched by "Active Test"	A
Front passenger side seat belt warning light condition can be switched by "Active Test"	B

B → Go to step 8

A

3.CHECK NAVIGATION SYSTEM

a. Check if the vehicle is equipped with navigation system.

Result

Result	Proceed to
w/ Navigation System	A
w/o Navigation System	B

B → Go to step 6

A

4.CHECK HARNESS AND CONNECTOR (MULTI-DISPLAY - COMBINATION METER, BATTERY AND BODY GROUND)

a. Disconnect the F 2 and F multi-display connectors.

b. Disconnect the E combination meter assembly connector.

c. Measure the resistance and voltage according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F 2- (PBE) - E -22 (RNP)	Always	Below 1 Ω
F -1 (GND1) - Body ground	Always	Below 1 Ω
F 2- (PBE) or		

E -22 (RNP) - Body ground	Always	10 kΩ or higher

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
F -3 (IG) - Body ground	Engine switch on (IG)	11 to 14 V

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


5.CHECK DISPLAY AND NAVIGATION MODULE ASSEMBLY (MULTI-DISPLAY)

a. Disconnect the F 2 and F multi-display connectors.

b. Apply battery voltage to the terminals and check that the front passenger seat belt warning light illuminates.

OK:

Measurement Connection	Specified Condition
Positive battery → F -3 (IG) Negative battery → F 2- (PBE) Negative battery → F -1 (GND1)	Front passenger side seat belt warning light on

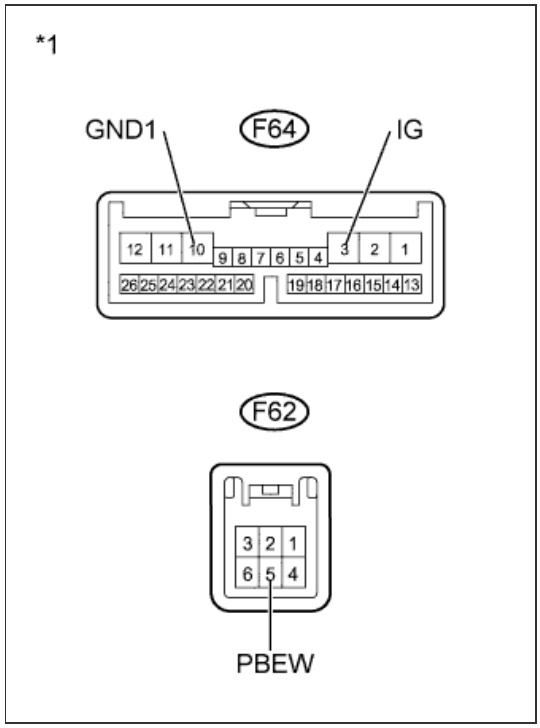

Text in Illustration

*1	Component without harness connected (Multi-display)

Result

Result	Proceed to
NG	A
O (w/ Multi-information Display)	B
O (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

REPLACE MULTI-DISPLAY (Click here)

6.CHECK HARNESS AND CONNECTOR (CLOCK - COMBINATION METER, BATTERY AND BODY GROUND)

a. Disconnect the g1 clock connector.

b. Disconnect the E combination meter assembly connector.

c. Measure the resistance and voltage according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
g1-1 (E) - Body ground	Always	Below 1 Ω
g1-8 (LAPL) - E -22 (RNP)	Always	Below 1 Ω
g1-8 (LAPL) - Body ground	Always	10 kΩ or higher

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
g1-10 (IG+) - Body ground	Engine switch on (IG)	11 to 14 V


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK CLOCK

a. Disconnect the g1 clock connector.

b. Apply battery voltage to the terminals and check that the front passenger seat belt warning light illuminates.

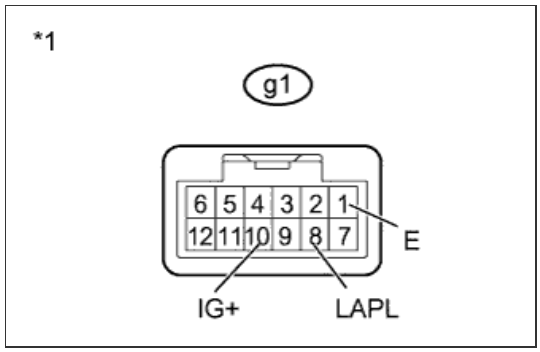

OK:

Measurement Connection	Specified Condition
Positive battery → g1-10 (IG+) Negative battery → g1-8 (LAPL) Negative battery → g1-1 (E)	Front passenger seat belt warning light Illuminates

Text in Illustration

*1	Component without harness connected (Clock)

Result

Result	Proceed to
NG	A
O (w/ Multi-information Display)	B
O (w/o Multi-information Display)	C

B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)

A

REPLACE CLOCK (Click here)

8.REPLACE FRONT SEAT INNER BELT ASSEMBLY

a. Temporarily replace the front seat inner belt RH*1 or LH*2 with a new one (Click here).

HINT:

*1: for LHD

*2: for RHD

NE T

9.CHECK FRONT PASSENGER SIDE SEAT BELT WARNING LIGHT

a. Check the front passenger side seat belt warning light function (Click here).

OK:

Front passenger side seat belt warning light operates normally.

Result

Result	Proceed to
O	A
NG (w/ Multi-information Display)	B
NG (w/o Multi-information Display)	C


B → REPLACE COMBINATION METER ASSEMBLY (Click here)

C → REPLACE COMBINATION METER ASSEMBLY (Click here)


A

END (FRONT SEAT INNER BELT IS DEFECTIVE)

for Preparation Click here

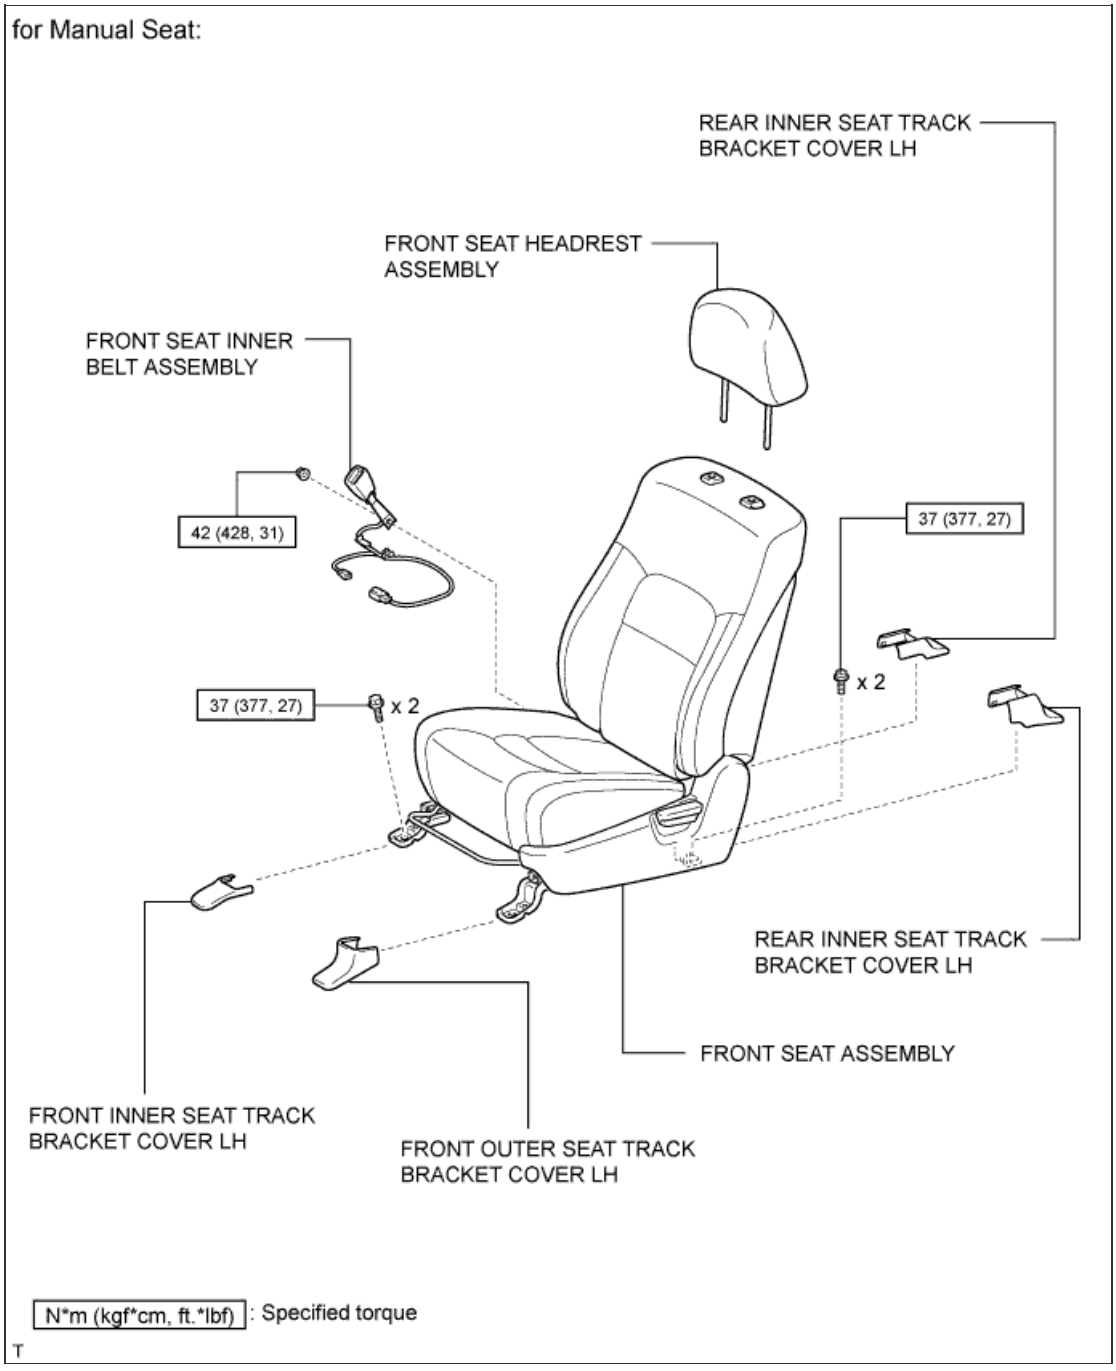

for Power Seat:

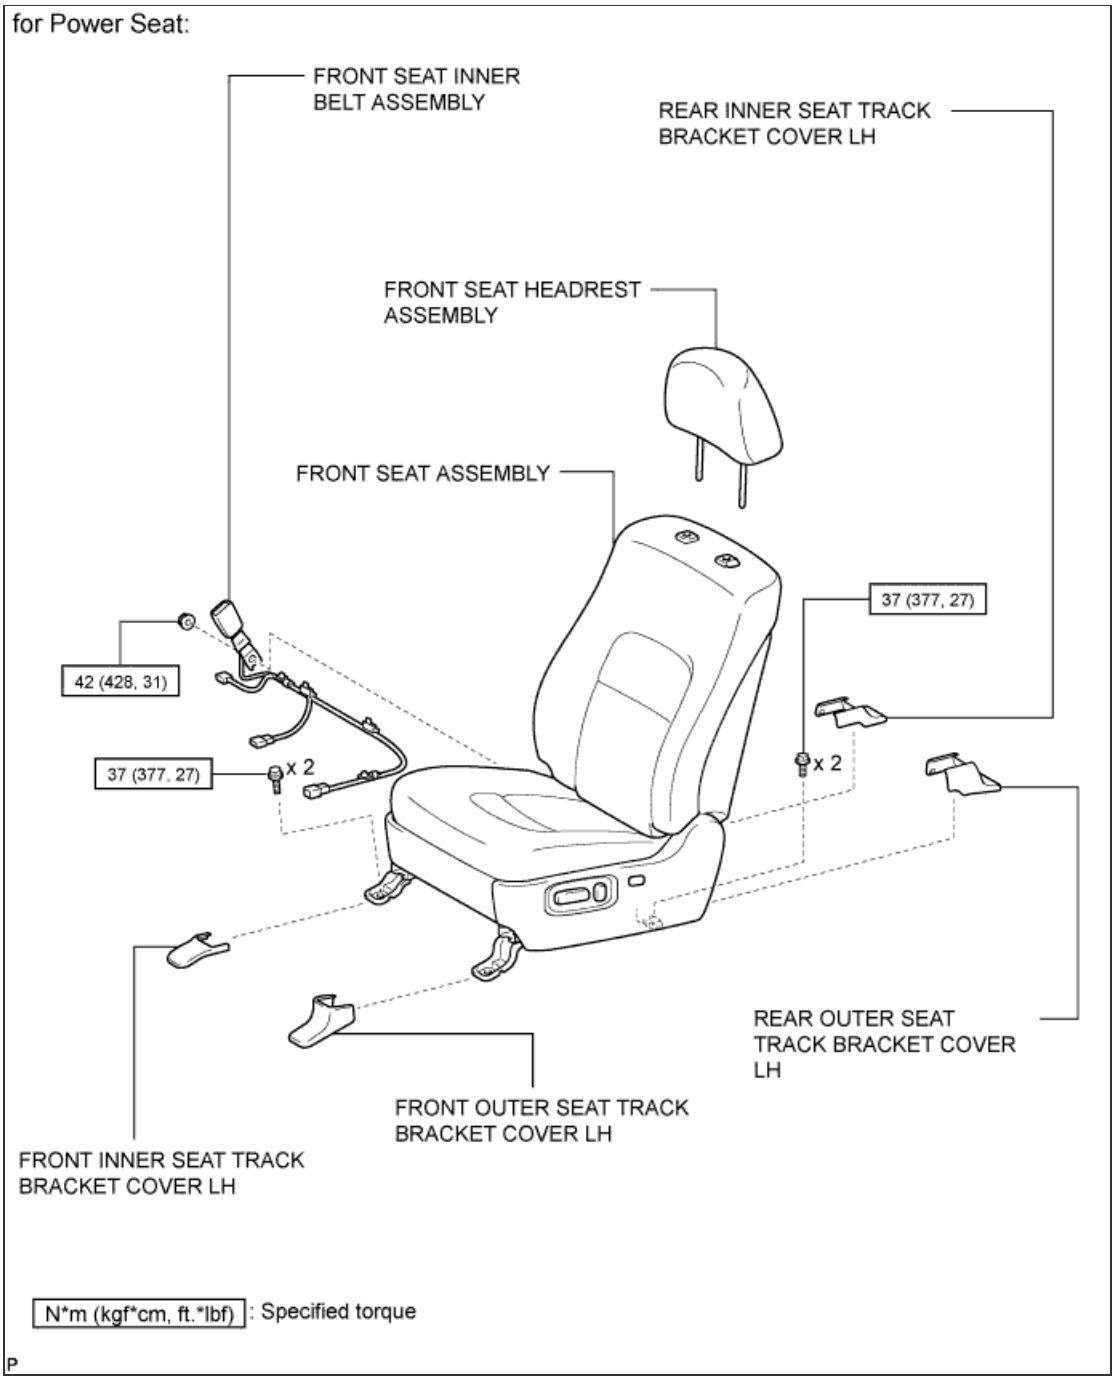

N*m (kgf*cm, ft.*lbf) : Specified torque

P

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

2. REMOVE FRONT SEAT ASSEMBLY (for Manual Seat)

a. Remove the front seat assembly (Click here).


3. REMOVE FRONT SEAT ASSEMBLY (for Power Seat)

a. Remove the front seat assembly (Click here).

4. REMOVE FRONT SEAT INNER BELT ASSEMBLY (for Manual Seat)

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

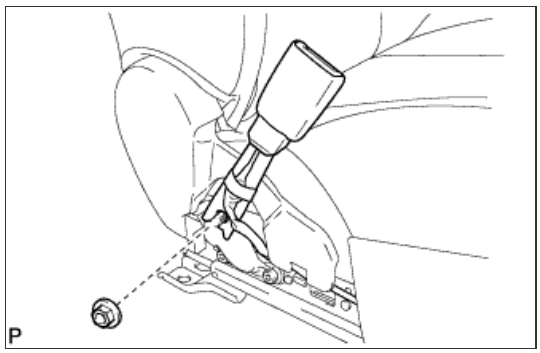

5. REMOVE FRONT SEAT INNER BELT ASSEMBLY (for Power Seat)

a. Disconnect the connectors and detach the clamps.

b. Remove the nut and front seat inner belt assembly.

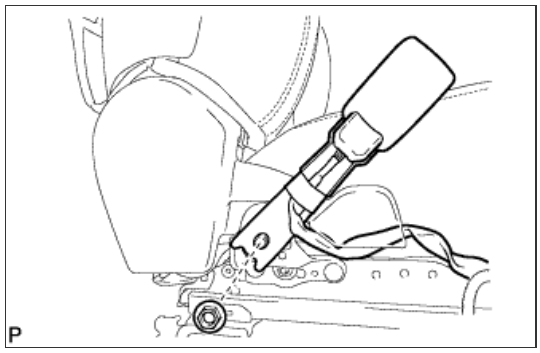
P

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

2. REMOVE FRONT SEAT ASSEMBLY (for Manual Seat)

a. Remove the front seat assembly (Click here).


3. REMOVE FRONT SEAT ASSEMBLY (for Power Seat)

a. Remove the front seat assembly (Click here).

4. REMOVE FRONT SEAT INNER BELT ASSEMBLY (for Manual Seat)

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

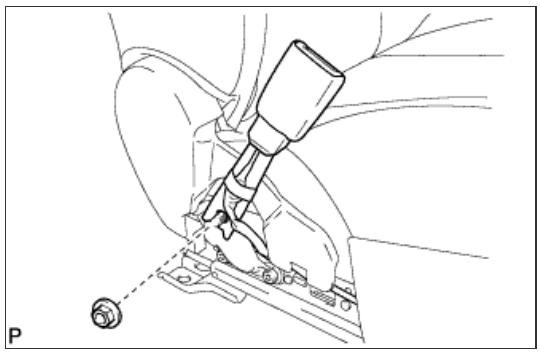

5. REMOVE FRONT SEAT INNER BELT ASSEMBLY (for Power Seat)

a. Disconnect the connectors and detach the clamps.


b. Remove the nut and front seat inner belt assembly.

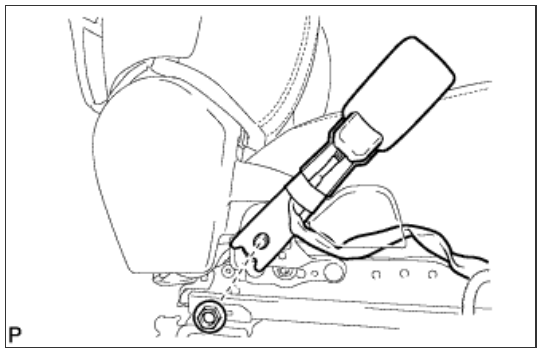
P

for Preparation Click here

1. INSPECT FRONT SEAT INNER BELT ASSEMBLY (for Driver Side)

a. for Power Seat, for 4 Way Seat Type:
Check the buckle switch.

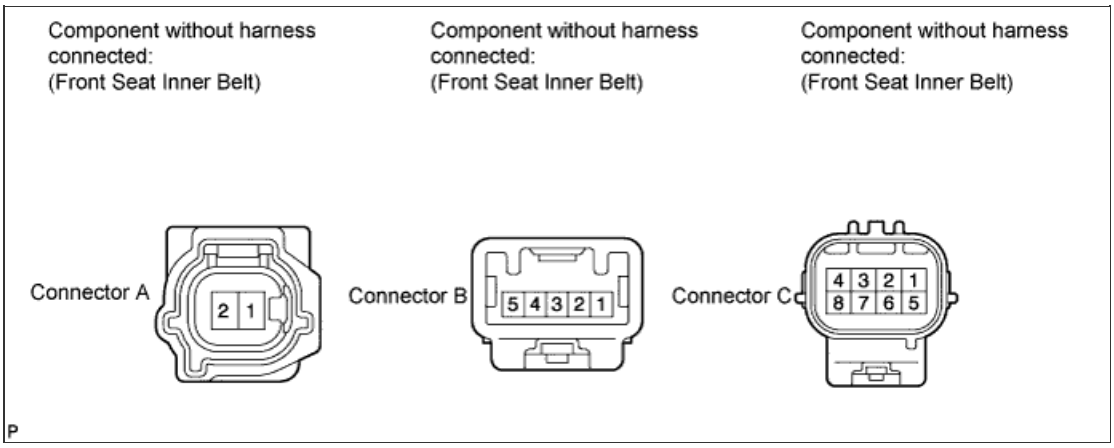


i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
B-4 - B-5	Seat belt fastened (Buckle switch is on)	Below 1 Ω
	Seat belt unfastened (Buckle switch is off)	1 MΩ or higher
A-1 - C-4	Always	Below 1 Ω
A-2 - C-8	Always	Below 1 Ω

If the result is not as specified, replace the inner belt assembly.

b. for 8 Way Seat Type:
Check the buckle switch.

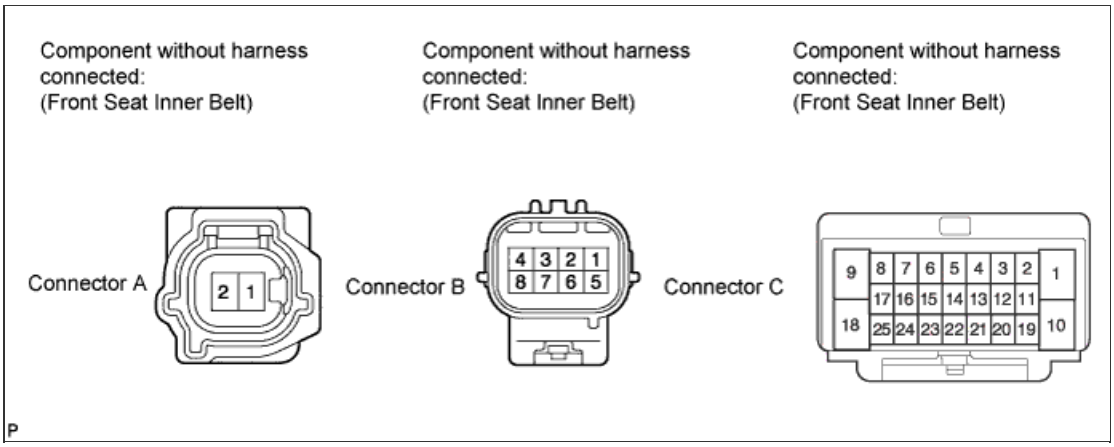

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
C-9 - C-13	Seat belt fastened (Buckle switch is on)	Below 1 Ω
	Seat belt unfastened (Buckle switch is off)	1 MΩ or higher
A-1 - B-4	Always	Below 1 Ω
A-2 - B-8	Always	Below 1 Ω

If the result is not as specified, replace the inner belt assembly.

2. INSPECT FRONT SEAT INNER BELT ASSEMBLY (for Front Passenger Side)

a. for Power Seat, w/ Front Seat Side Airbag and Curtain Shield Airbag:
Check the buckle switch.

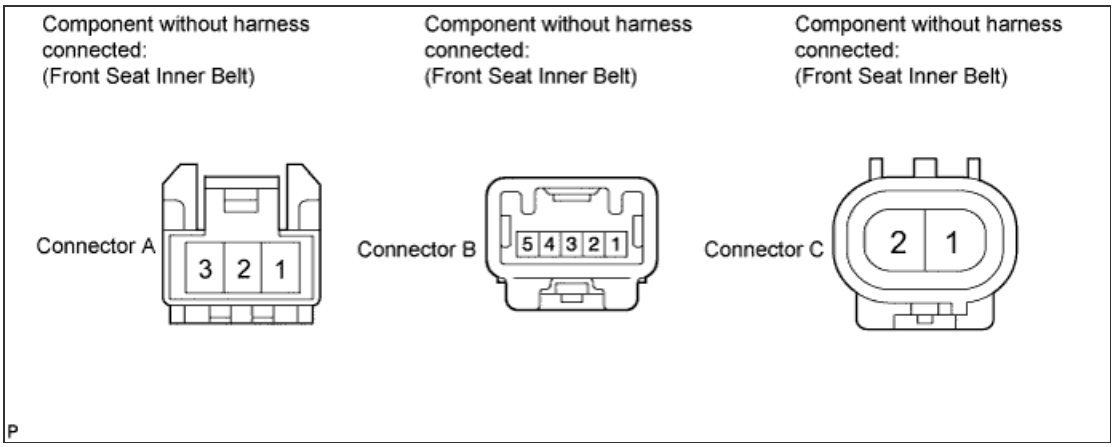

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
	Seat belt fastened (Buckle switch	Below 1 Ω

B-4 - B-5	is on)	
	Seat belt unfastened (Buckle switch is off)	1 MΩ or higher
A-1 - B-4	Seat belt fastened (Buckle switch is on)	1 MΩ or higher
	Seat belt unfastened (Buckle switch is off)	Below 1 Ω
A-1 - B-4	Always	Below 1 Ω
A-3 - B-3	Always	Below 1 Ω

If the result is not as specified, replace the inner belt assembly.

b. for Power Seat, w/o Front Seat Side Airbag and Curtain Shield Airbag:
Check the buckle switch.

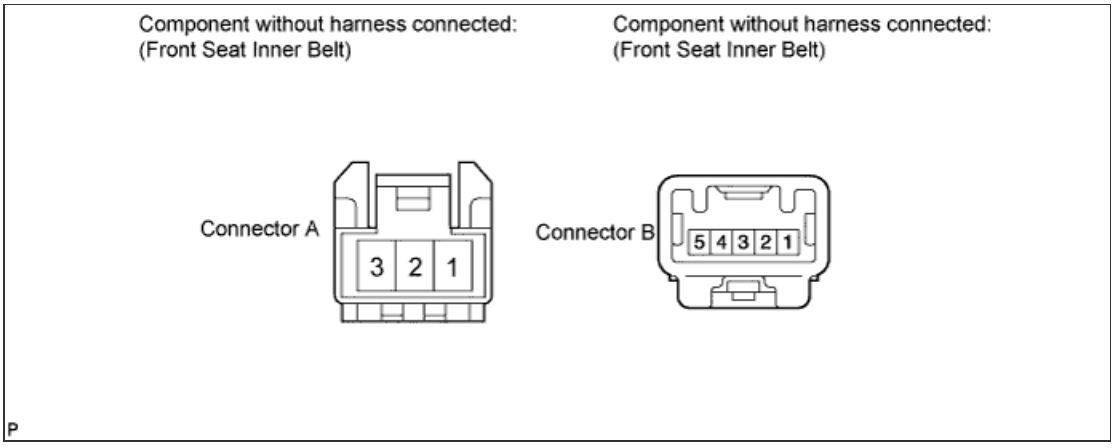

i. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
B-4 - B-5	Seat belt fastened (Buckle switch is on)	Below 1 Ω
	Seat belt unfastened (Buckle switch is off)	1 MΩ or higher
A-1 - B-4	Seat belt fastened (Buckle switch is on)	1 MΩ or higher
	Seat belt unfastened (Buckle switch is off)	Below 1 Ω
A-3 - B-3	Always	Below 1 Ω

If the result is not as specified, replace the inner belt assembly.

c. for Manual Seat:

Check the buckle switch.

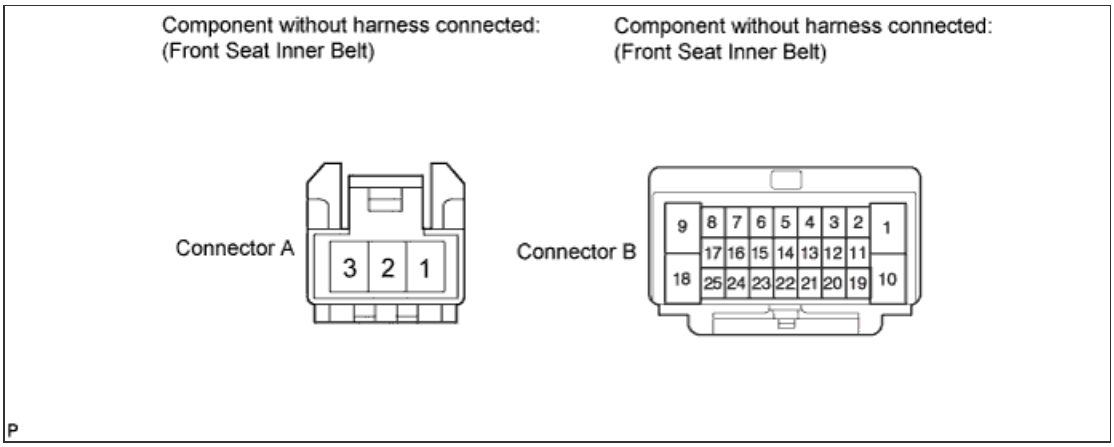

i. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
B-9 - B-13	Seat belt fastened (Buckle switch is on)	Below 1 Ω
	Seat belt unfastened (Buckle switch is off)	1 MΩ or higher
A-1 - B-9	Seat belt fastened (Buckle switch is on)	1 MΩ or higher
	Seat belt unfastened (Buckle switch is off)	Below 1 Ω
A-3 - B-14	Always	Below 1 Ω

If the result is not as specified, replace the inner belt assembly.

for Preparation Click here

1. INSTALL FRONT SEAT INNER BELT ASSEMBLY (for Manual Seat)


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding part of the front seat adjuster.

b. Connect the connectors and attach the clamps.

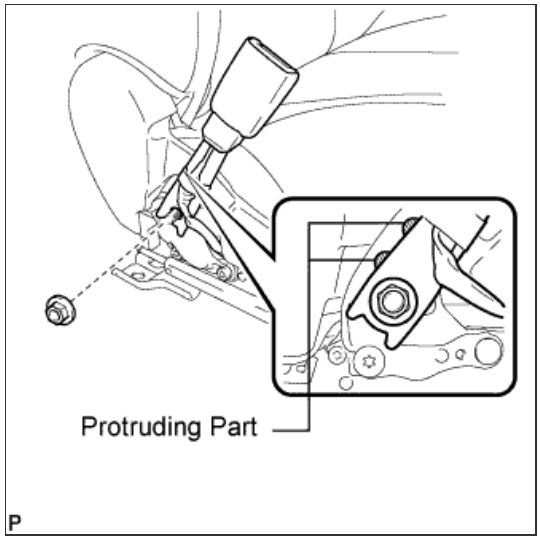

2. INSTALL FRONT SEAT INNER BELT ASSEMBLY (for Power Seat)


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.

b. Connect the connectors and attach the clamps.

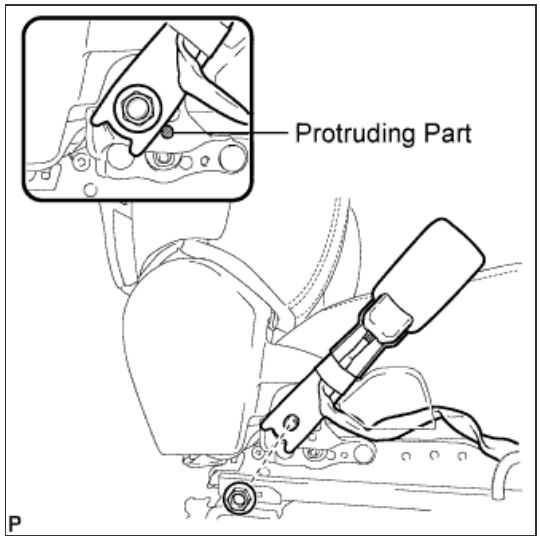

3. INSTALL FRONT SEAT ASSEMBLY (for Manual Seat)

a. Install the front seat assembly (Click here).

4. INSTALL FRONT SEAT ASSEMBLY (for Power Seat)

a. Install the front seat assembly (Click here).

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

6. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

7. INSPECT FRONT SEAT ASSEMBLY

a. for Manual Seat:
Inspect Front Seat (Click here).

b. for Power Seat:
Inspect Front Seat (Click here).

for Preparation Click here

1. INSTALL FRONT SEAT INNER BELT ASSEMBLY (for Manual Seat)


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding part of the front seat adjuster.

b. Connect the connectors and attach the clamps.

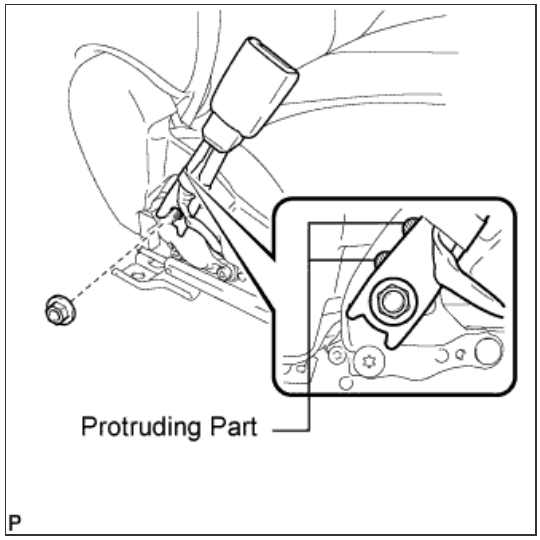

2. INSTALL FRONT SEAT INNER BELT ASSEMBLY (for Power Seat)


a. Install the front seat inner belt assembly with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not allow the anchor part of the front seat inner belt assembly to overlap the protruding parts of the front seat adjuster.

b. Connect the connectors and attach the clamps.

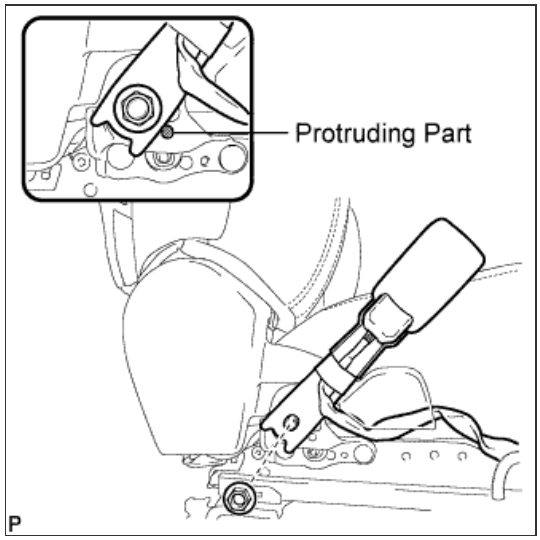

3. INSTALL FRONT SEAT ASSEMBLY (for Manual Seat)

a. Install the front seat assembly (Click here).

4. INSTALL FRONT SEAT ASSEMBLY (for Power Seat)

a. Install the front seat assembly (Click here).

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

6. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

7. INSPECT FRONT SEAT ASSEMBLY


a. for Manual Seat:
Inspect Front Seat (Click here).

b. for Power Seat:
Inspect Front Seat (Click here).

for Preparation Click here

CAUTION:

Replace the faulty parts of the seat belt systems (outer belt, inner belt, bolts, nuts, adjustable shoulder anchor, tether anchor hardware and other related parts). When inspecting a vehicle that was in a collision, be sure to check all of the seat belt systems regardless of whether or not the system was activated in the collision. Replace any damaged or malfunctioning systems.

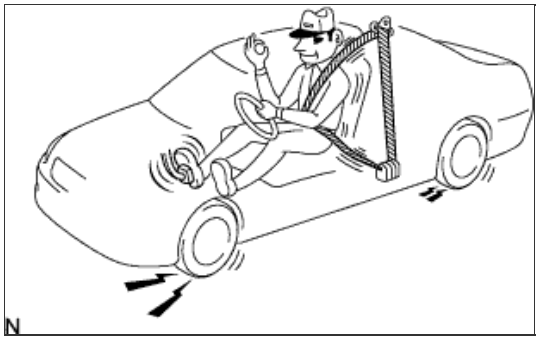

1.RUNNING TEST (IN SAFE AREA)

CAUTION:

Conduct this test in a safe area.


a. Fasten the front seat belt.


b. Drive the vehicle at 16 km/h (10 mph) and firmly depress the brakes. Check that the belts lock and cannot be extended at this time. If a belt does not lock, replace the seat belt assembly (Click here).

HINT:

Inspect a seat belt assembly before installing it (Click here).

for Preparation Click here

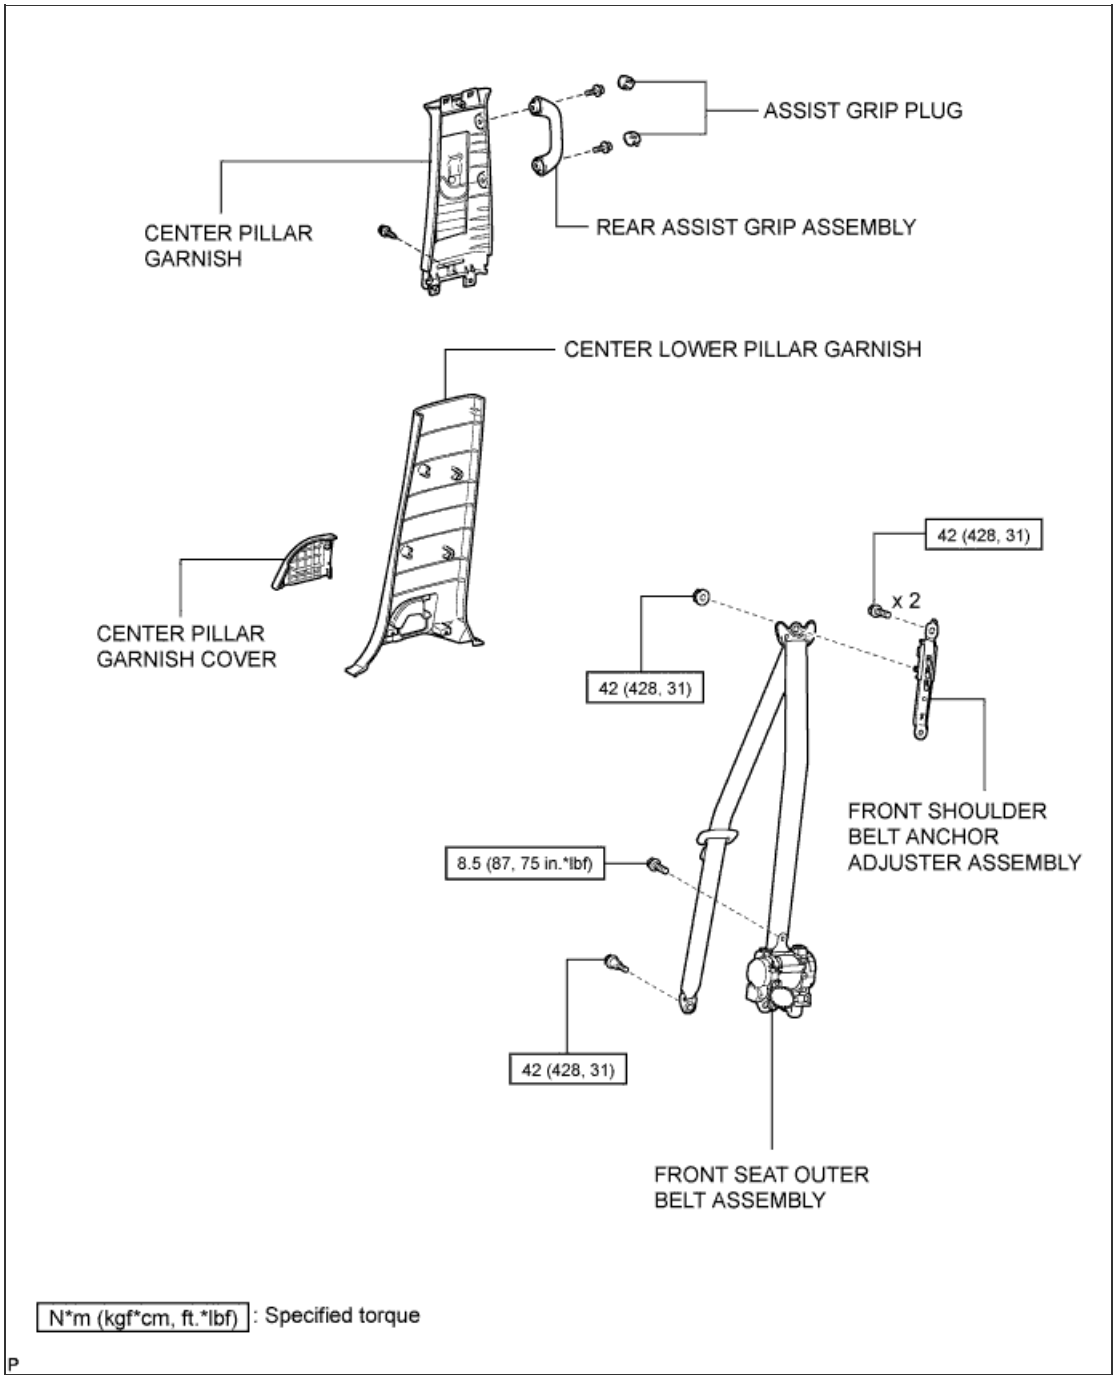

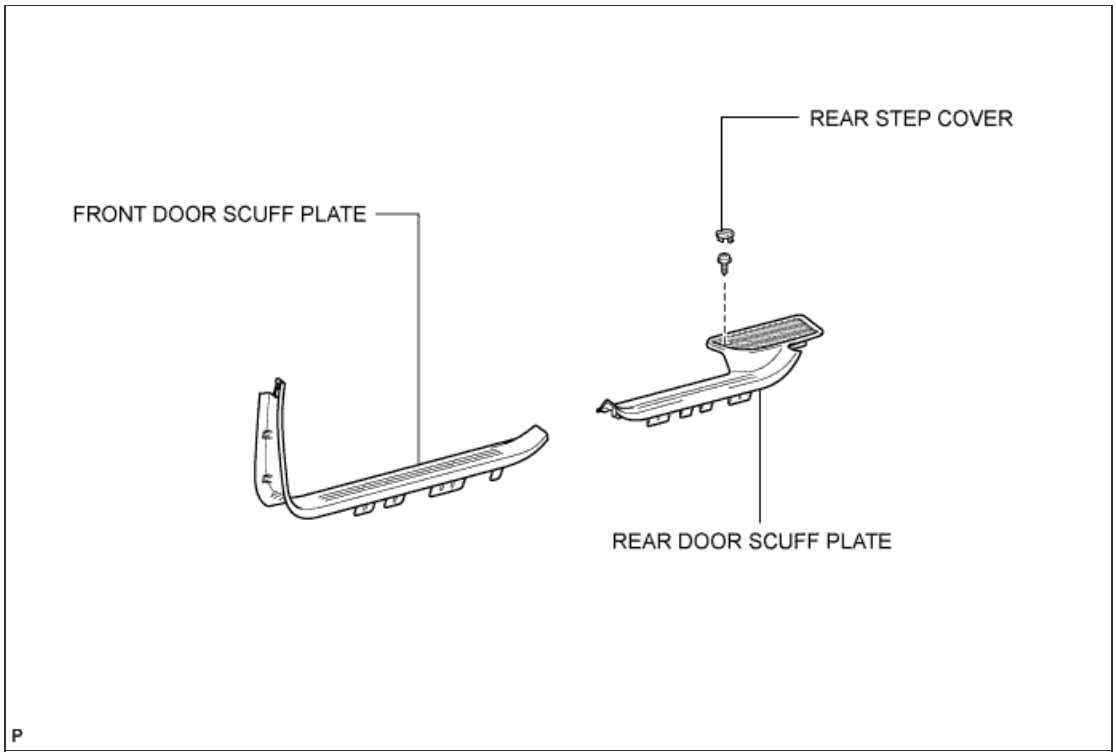
REAR STEP COVER
FRONT DOOR SCUFF PLATE
REAR DOOR SCUFF PLATE
P

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

2. REMOVE FRONT DOOR SCUFF PLATE

a. Detach the 7 claws and 4 clips and remove the scuff plate.

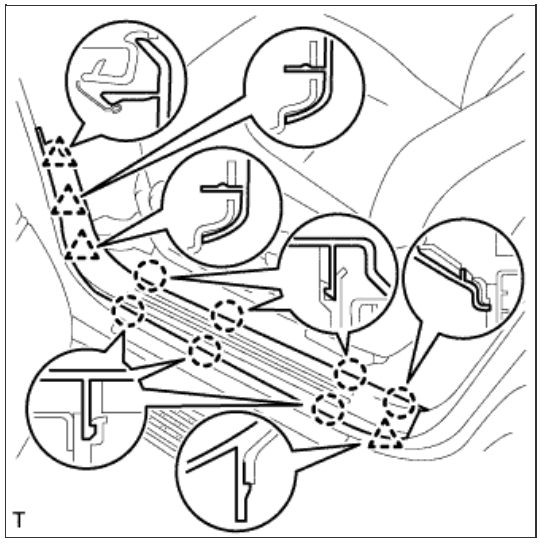


3. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

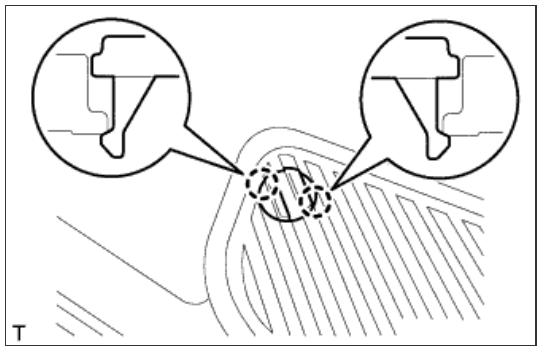

4. REMOVE REAR DOOR SCUFF PLATE

a. Remove the screw.

b. Detach the 3 claws and 4 clips and remove the scuff plate.

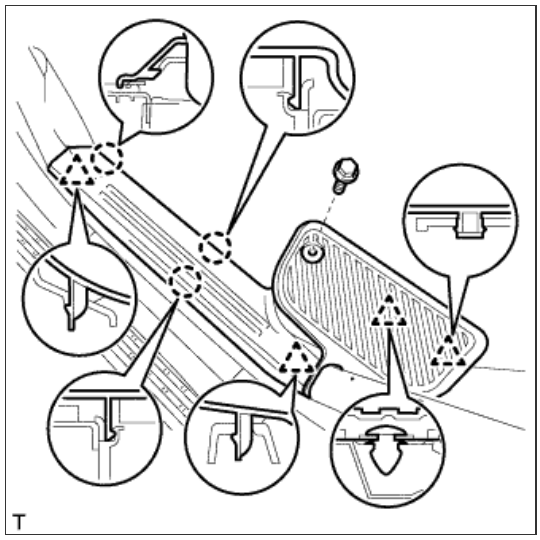


5. REMOVE CENTER PILLAR GARNISH COVER

HINT:

- **for Manual Seat:**
  When removing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When removing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.


a. Detach the 2 clips and 2 guides and remove the cover.

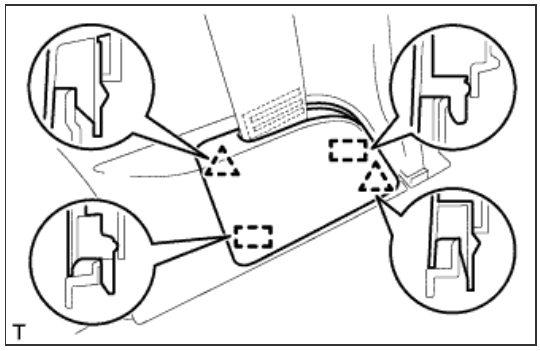

6. REMOVE CENTER LOWER PILLAR GARNISH


HINT:

- **for Manual Seat:**
  When removing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When removing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

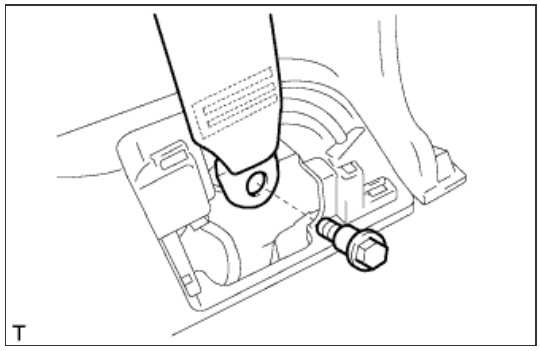

a. Remove the bolt and seat belt's anchor.


b. Detach the 2 claws and 7 clips and remove the center lower pillar garnish.

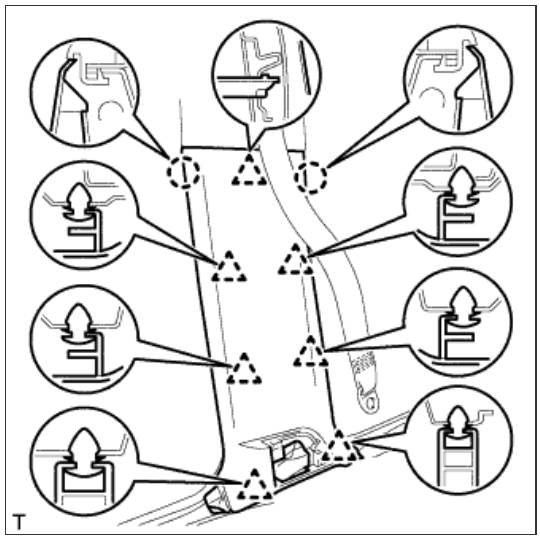


7. REMOVE REAR ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to remove the rear assist grip on the other side.

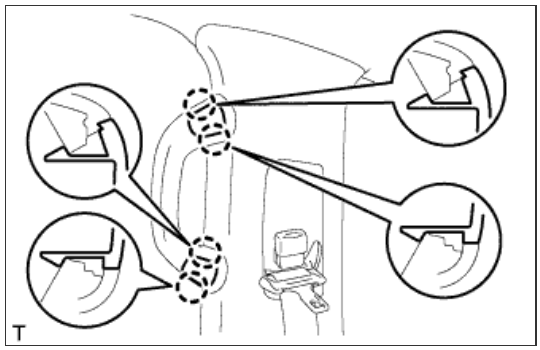

a. Detach the 4 claws and remove the 2 assist grip plugs.

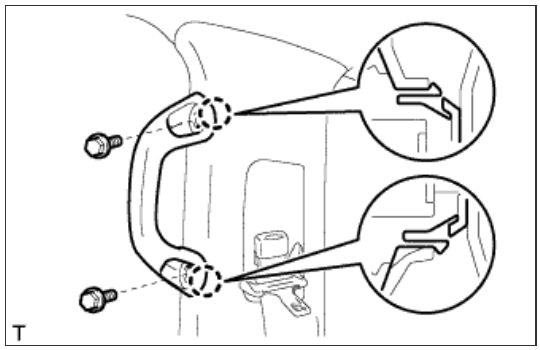

b. Remove the 2 bolts.


c. Detach the 2 claws and remove the rear assist grip.

8. REMOVE CENTER PILLAR GARNISH

a. Remove the bolt.


b. Detach the 2 clips and 2 guides.

c. Pass the seat belt anchor through the center pillar garnish and remove the center pillar garnish.

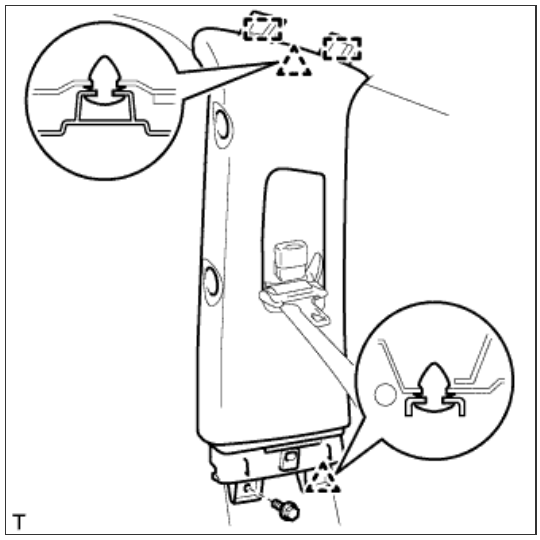

9. REMOVE FRONT SEAT OUTER BELT ASSEMBLY


a. Remove the nut and shoulder anchor.

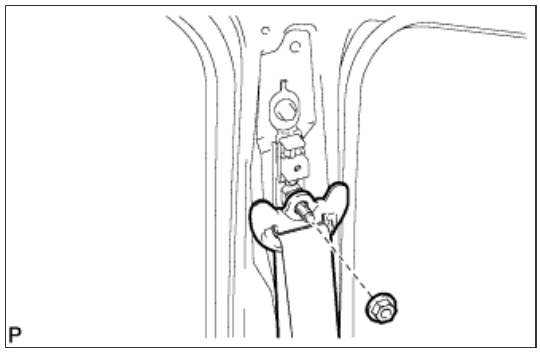


b. Disconnect the pretensioner connector labeled A as shown in the illustration.

c. Disconnect the tension reducer connector labeled B.

d. w/ Pre-Crash Safety System:
Disconnect the pre-crash safety connector labeled C.

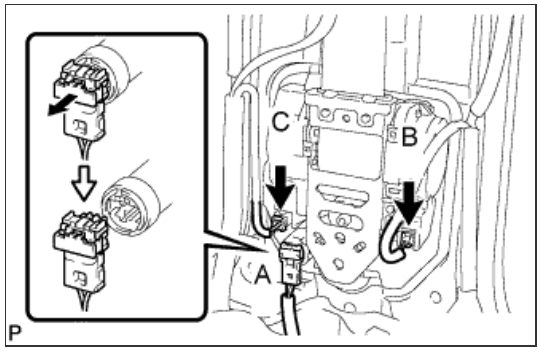


e. Remove the bolt and seat belt.

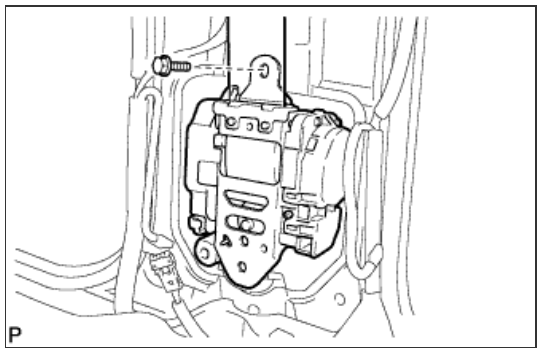

10. REMOVE FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY

a. Remove the 2 bolts and ad ster.

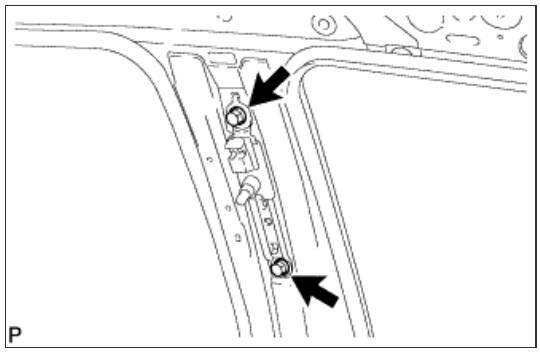
P

for Preparation Click here

HINT:

- **Use the same procedure for the LH and RH side.**
- **The procedure listed below is for the LH side.**


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

2. REMOVE FRONT DOOR SCUFF PLATE

a. Detach the 7 claws and 4 clips and remove the scuff plate.

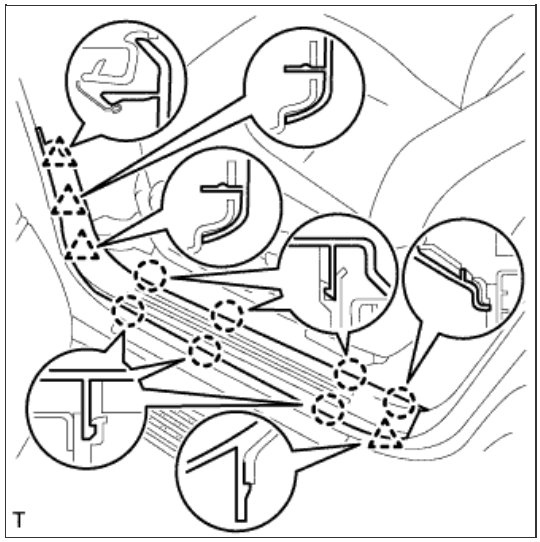


3. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

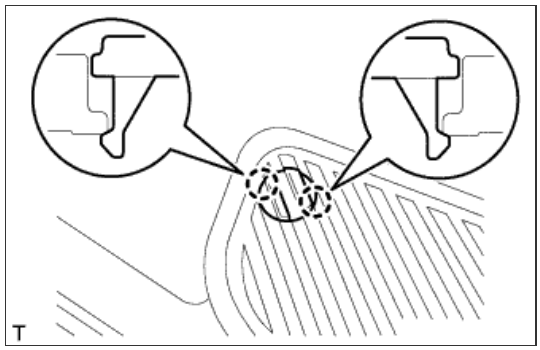

4. REMOVE REAR DOOR SCUFF PLATE

a. Remove the screw.

b. Detach the 3 claws and 4 clips and remove the scuff plate.

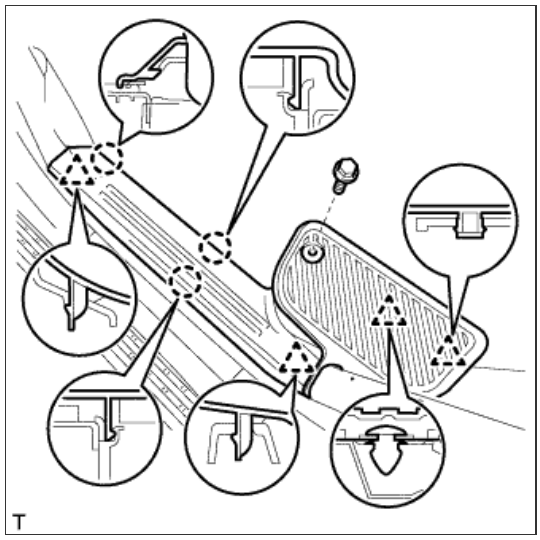


5. REMOVE CENTER PILLAR GARNISH COVER

HINT:

- **for Manual Seat:**
  When removing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When removing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.


a. Detach the 2 clips and 2 guides and remove the cover.

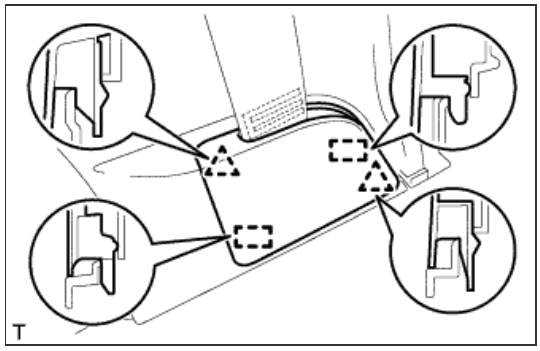

6. REMOVE CENTER LOWER PILLAR GARNISH


HINT:

- **for Manual Seat:**
  When removing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When removing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

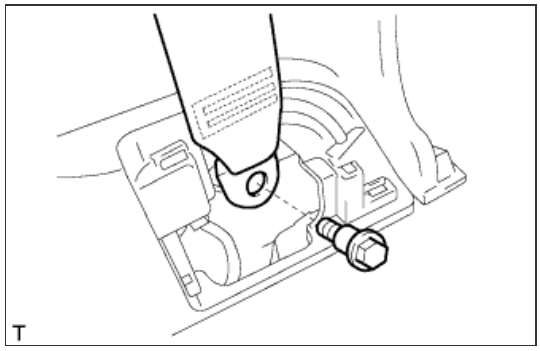

a. Remove the bolt and seat belt's anchor.


b. Detach the 2 claws and 7 clips and remove the center lower pillar garnish.

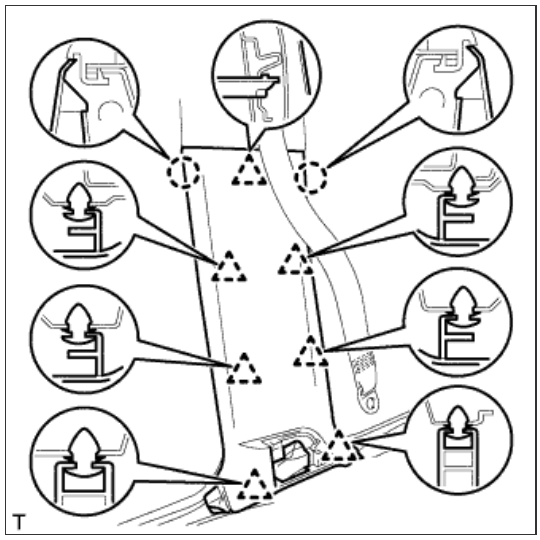


7. REMOVE REAR ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to remove the rear assist grip on the other side.

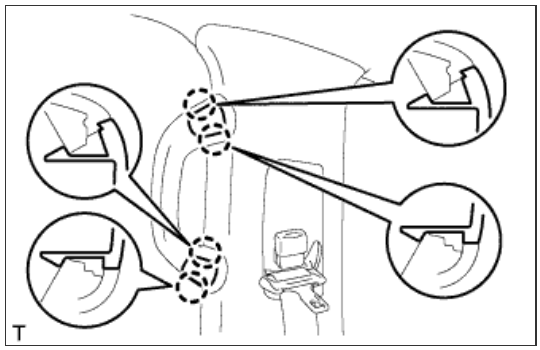

a. Detach the 4 claws and remove the 2 assist grip plugs.

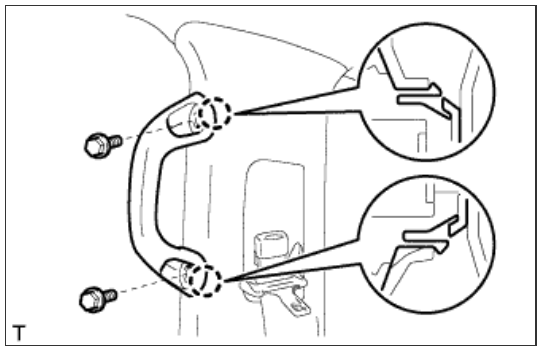

b. Remove the 2 bolts.


c. Detach the 2 claws and remove the rear assist grip.

8. REMOVE CENTER PILLAR GARNISH

a. Remove the bolt.


b. Detach the 2 clips and 2 guides.

c. Pass the seat belt anchor through the center pillar garnish and remove the center pillar garnish.

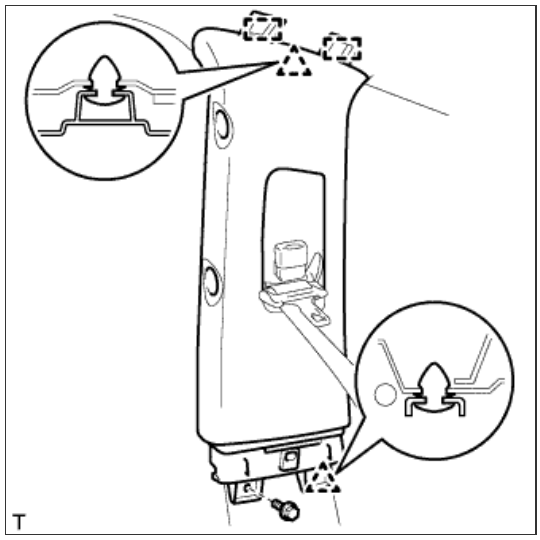

9. REMOVE FRONT SEAT OUTER BELT ASSEMBLY


a. Remove the nut and shoulder anchor.

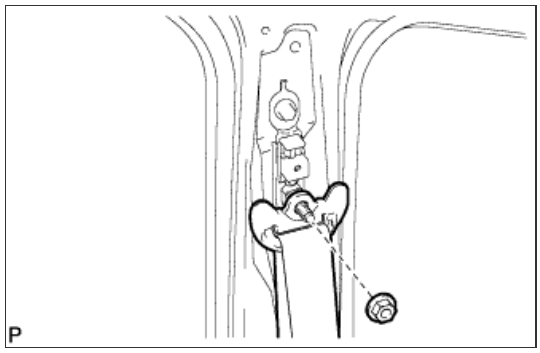


b. Disconnect the pretensioner connector labeled A as shown in the illustration.

c. Disconnect the tension reducer connector labeled B.

d. w/ Pre-Crash Safety System:
Disconnect the pre-crash safety connector labeled C.

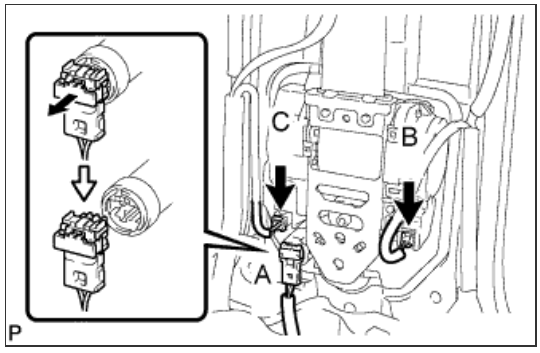


e. Remove the bolt and seat belt.

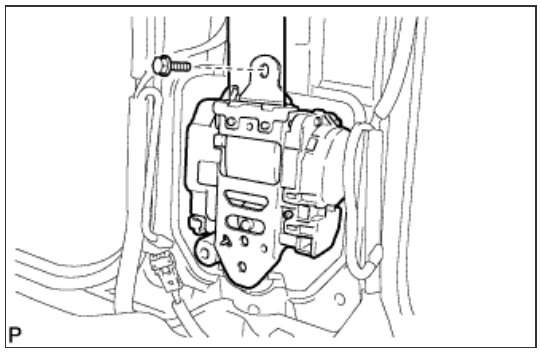

10. REMOVE FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY

a. Remove the 2 bolts and ad ster.

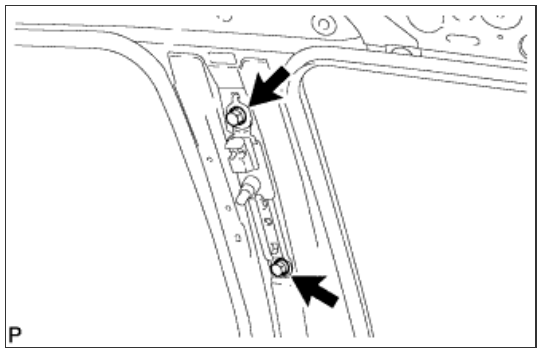
P

for Preparation Click here


1. INSPECT FRONT SEAT OUTER BELT ASSEMBLY

CAUTION:

Do not disassemble the retractor.

a. Before installing the seat belt, check the ELR.

i. When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks. If the operation is not as specified, replace the seat belt assembly.

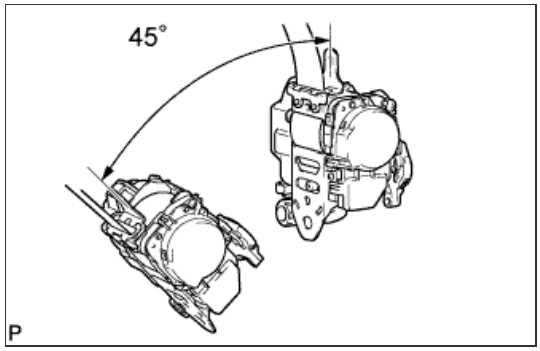

b. Check the tension reducer operation.

NOTICE:


Do not apply battery voltage to the pretensioner connector.

i. Connect the battery positive (+) lead to terminal 1 (IG) of the tension reducer connector and the negative (-) lead to terminal 2 (L).

ii. Check that an operating sound is heard when the magnetized solenoid is attracting the plunger.


iii. Pull out the seat belt and let it retract. Listen to the operating sound.

i . Pull out the seat belt again, disconnect the battery negative (-) lead and let it retract. Listen to the operating sound again and check that the operating sound volume has increased.
If the result is not as specified, replace the outer belt assembly.

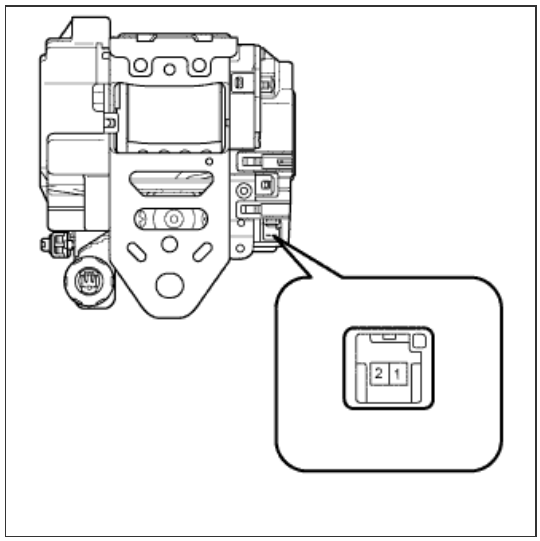

Component without harness connected:
(Front Seat Outer Belt)

Tension Reducer Connector

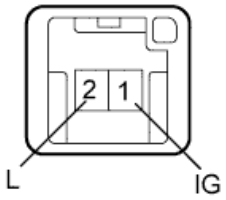

Pretensioner Connector*



*: Do not apply battery voltage

o

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**


1. INSTALL FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY

a. Align the adjuster positioning hole with the claw, and install the adjuster with the 2 bolts.

HINT:

First install the lower bolt, and then install the upper bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

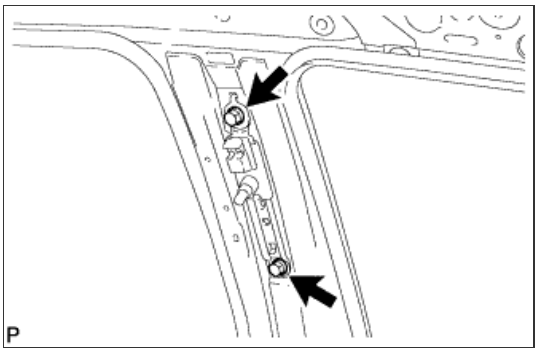

2. INSTALL FRONT SEAT OUTER BELT ASSEMBLY


NOTICE:

When installing the retractor, make sure the claws of the vehicle (labeled "a" in the illustration) only contact the installation areas of the retractor.

a. Align the claws of the vehicle with the seat belt retractor positioning holes.

b. Install the seat belt with the bolt.


Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

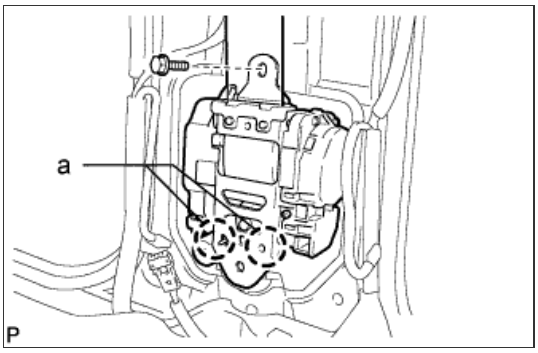

c. Connect the pretensioner connector labeled A as shown in the illustration.


d. Connect the tension reducer connector labeled B.

e. w/ Pre-Crash Safety System:
Connect the pre-crash safety connector labeled C.

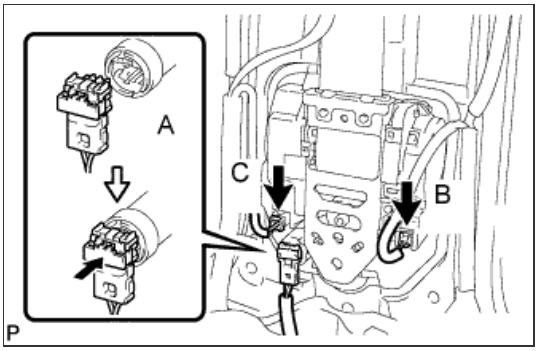

f. Install the shoulder anchor to the shoulder belt anchor adjuster with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

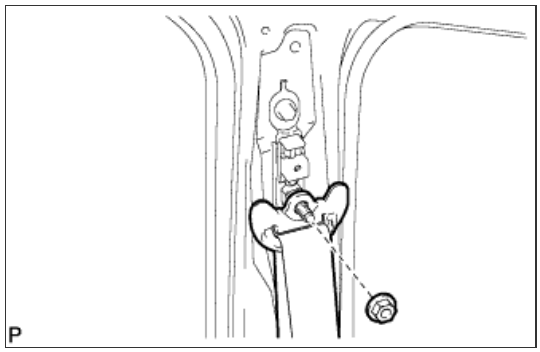

3. INSTALL CENTER PILLAR GARNISH LH

a. for 9 Speakers:
Connect the speaker connector.

b. Attach the clip and 3 guides to install the front pillar garnish.

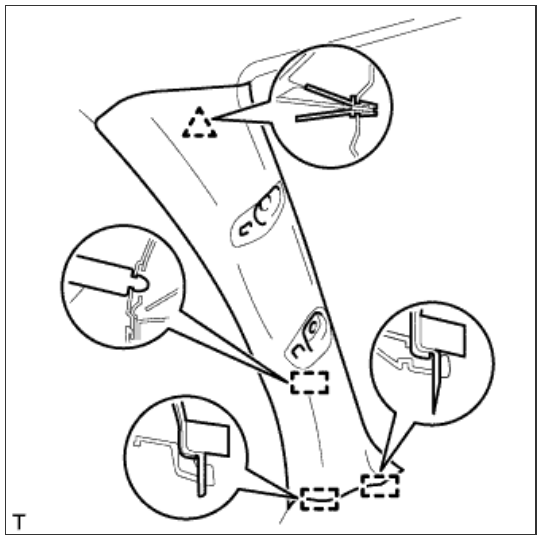


4. INSTALL REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to install the rear assist grip on the other side.

a. Attach the 2 claws to install the rear assist grip.

b. Install the 2 bolts.

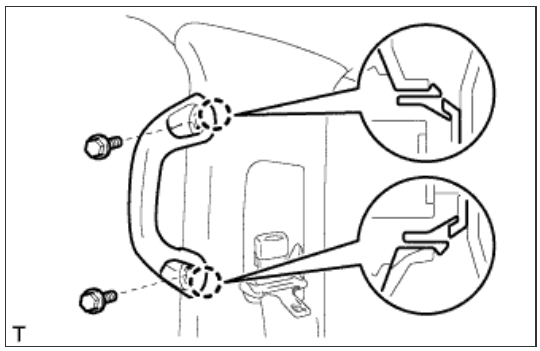


c. Attach the 4 claws to install the 2 assist grip plugs.

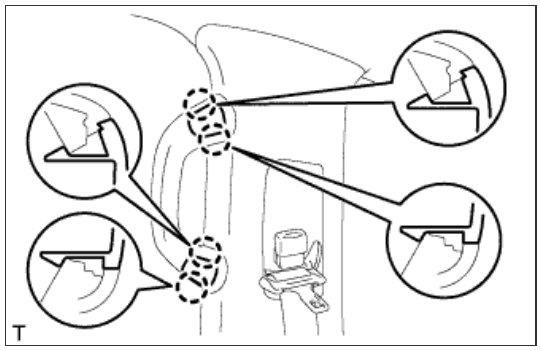

5. INSTALL CENTER LO ER PILLAR GARNISH

HINT:


- **for Manual Seat:**
  When installing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When installing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Manual Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

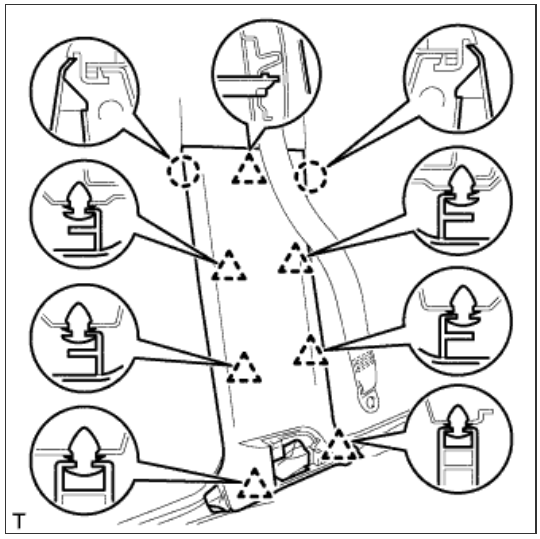

a. Attach the 2 claws and 7 clips to install the center lower pillar garnish.

b. Install the seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

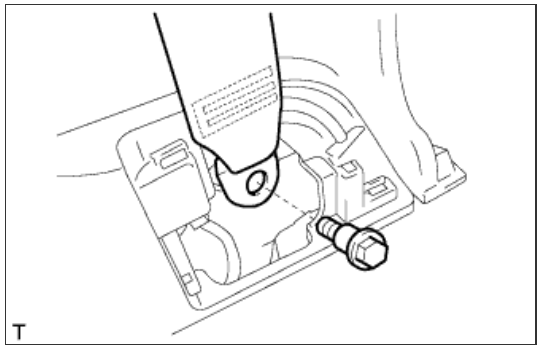


6. INSTALL CENTER PILLAR GARNISH COVER

HINT:

- **for Manual Seat:**
  When installing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When installing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.


a. Attach the 2 clips and 2 guides to install the cover.

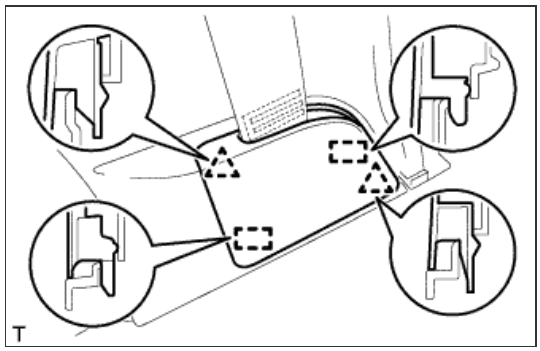

7. INSTALL REAR DOOR SCUFF PLATE

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

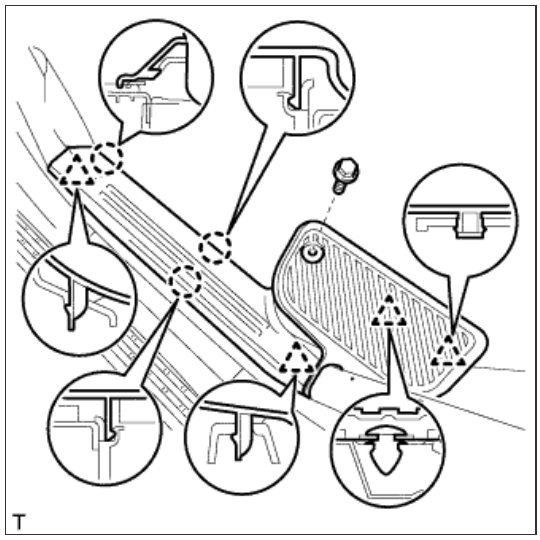


8. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

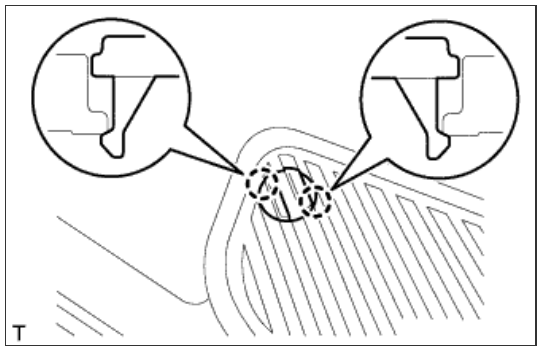

. INSTALL FRONT DOOR SCUFF PLATE

a. Attach the 7 claws and 4 clips to install the scuff plate.

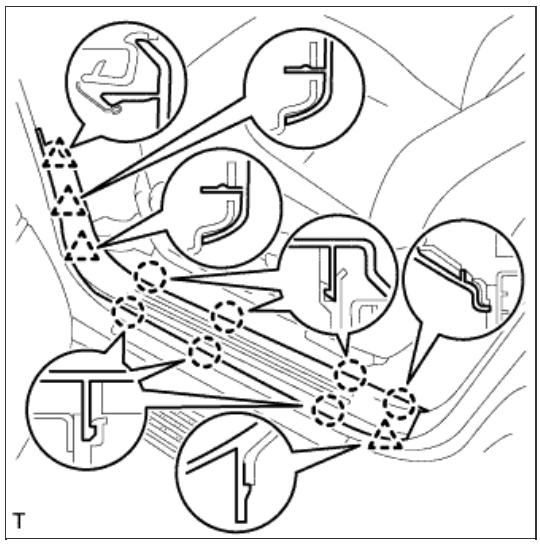

10. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

11. CHEC SRS ARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**


1. INSTALL FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY

a. Align the adjuster positioning hole with the claw, and install the adjuster with the 2 bolts.

HINT:

First install the lower bolt, and then install the upper bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

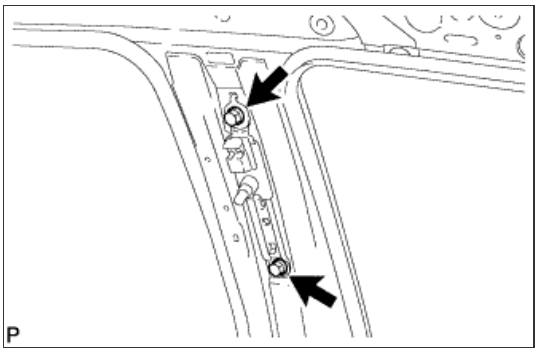

2. INSTALL FRONT SEAT OUTER BELT ASSEMBLY


NOTICE:

When installing the retractor, make sure the claws of the vehicle (labeled "a" in the illustration) only contact the installation areas of the retractor.

a. Align the claws of the vehicle with the seat belt retractor positioning holes.

b. Install the seat belt with the bolt.


Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

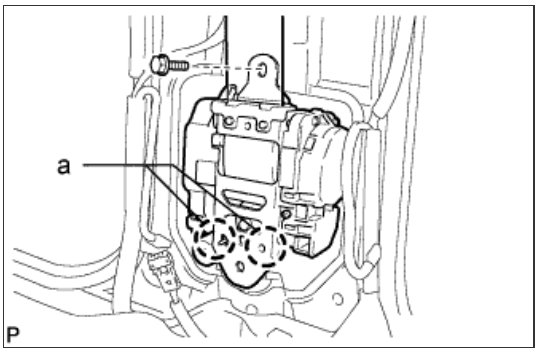

c. Connect the pretensioner connector labeled A as shown in the illustration.


d. Connect the tension reducer connector labeled B.

e. w/ Pre-Crash Safety System:
Connect the pre-crash safety connector labeled C.

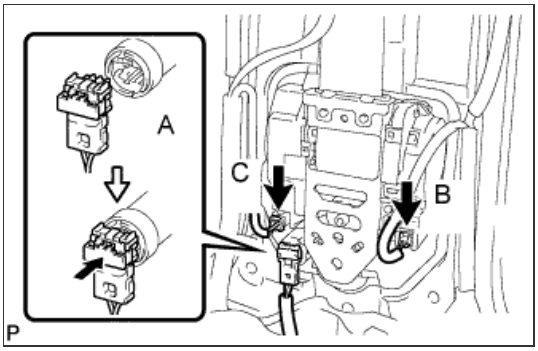

f. Install the shoulder anchor to the shoulder belt anchor adjuster with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

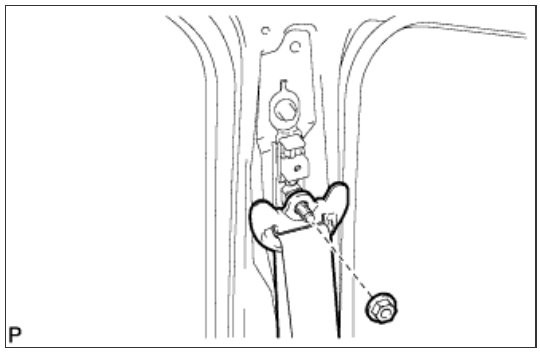


3. INSTALL CENTER PILLAR GARNISH LH

a. Pass the seat belt anchor through the center pillar garnish.

b. Attach the 2 clips and 2 guides to install the center pillar garnish.

c. Install the bolt.

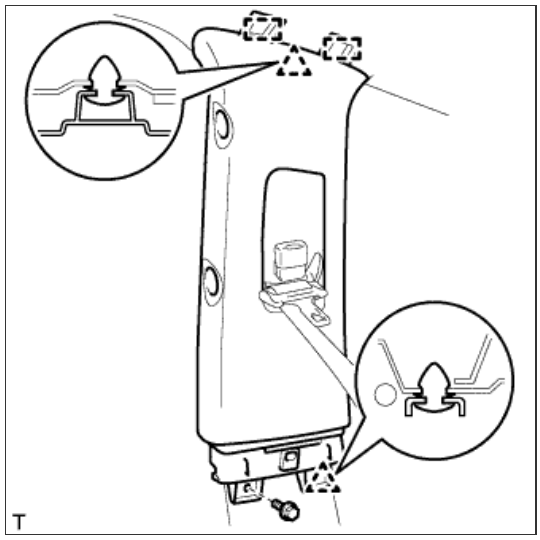


4. INSTALL REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to install the rear assist grip on the other side.

a. Attach the 2 claws to install the rear assist grip.

b. Install the 2 bolts.

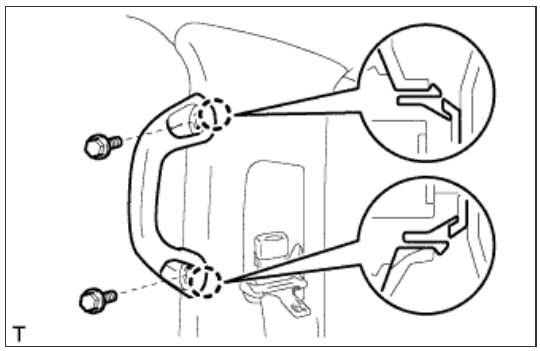


c. Attach the 4 claws to install the 2 assist grip plugs.

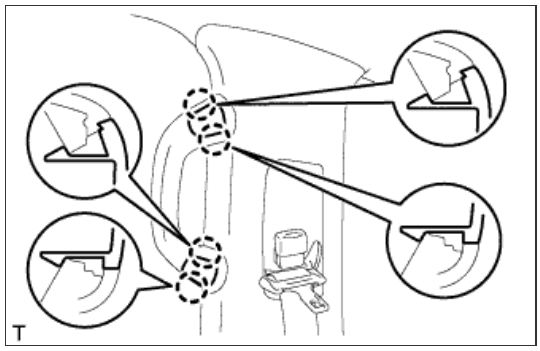

5. INSTALL CENTER LO ER PILLAR GARNISH

HINT:


- **for Manual Seat:**
  When installing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When installing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Manual Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

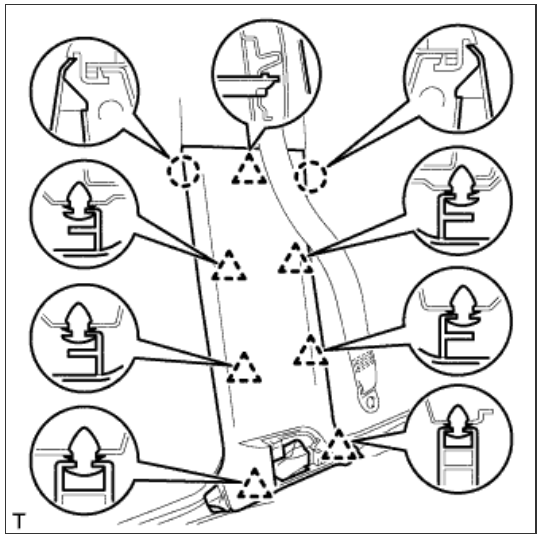

a. Attach the 2 claws and 7 clips to install the center lower pillar garnish.

b. Install the seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

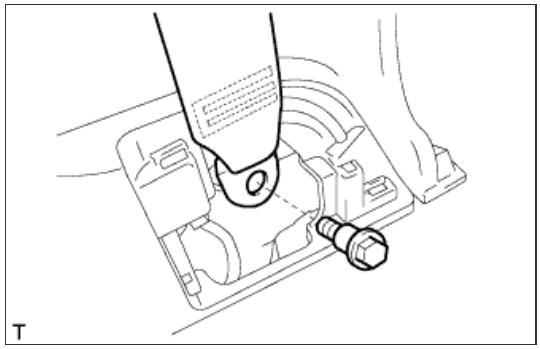


6. INSTALL CENTER PILLAR GARNISH COVER

HINT:

- **for Manual Seat:**
  When installing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When installing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.


a. Attach the 2 clips and 2 guides to install the cover.

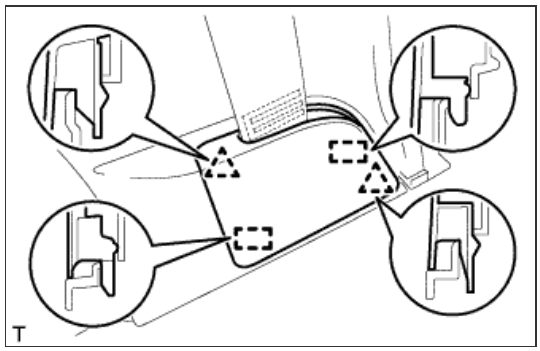

7. INSTALL REAR DOOR SCUFF PLATE

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

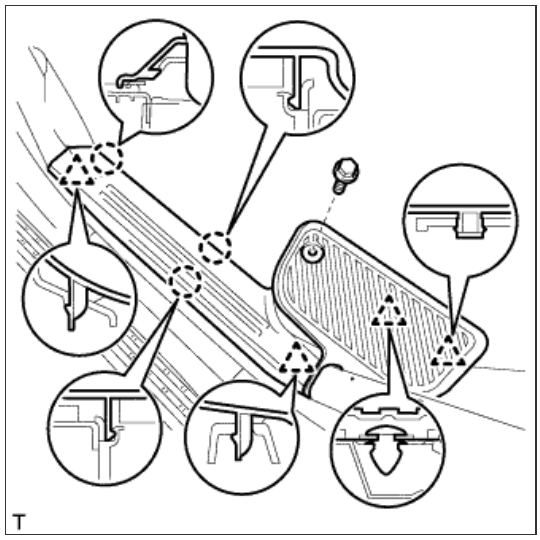


8. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

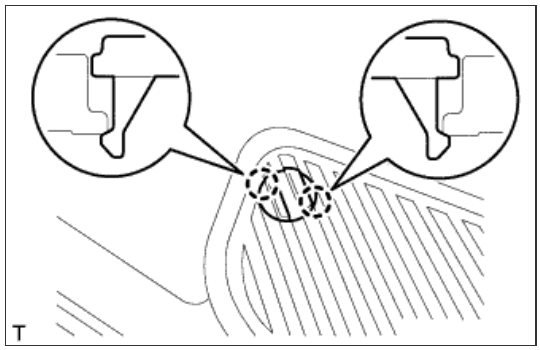

. INSTALL FRONT DOOR SCUFF PLATE

a. Attach the 7 claws and 4 clips to install the scuff plate.

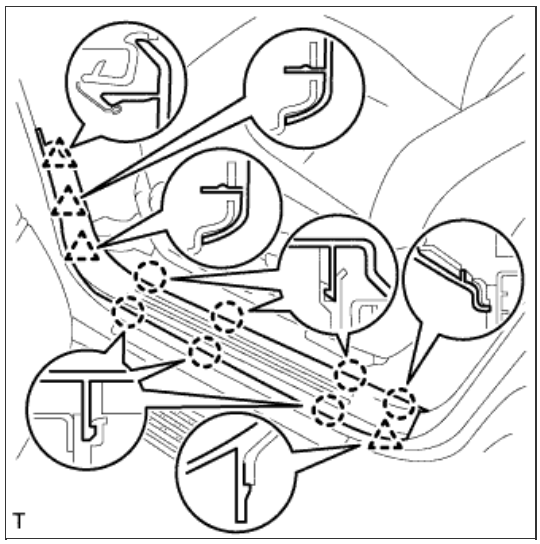

10. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

11. CHEC SRS ARNING LIGHT


a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

When scrapping vehicles equipped with a seat belt pretensioner or disposing of a front seat outer belt (with seat belt pretensioner), always first activate the seat belt pretensioner in accordance with the procedures described below. If any abnormality occurs during activation of the seat belt pretensioner, contact the SERVICE DEPART ENT of DISTRIBUTOR.

CAUTION:

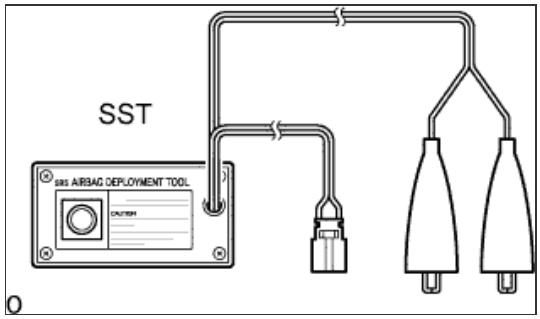

- **Never dispose of a front seat outer belt that has an un-activated pretensioner.**
- **The seat belt pretensioner produces a loud, exploding sound when it activates. Perform the operation where it will not be a nuisance to nearby people.**
- **When activating a front seat outer belt (with seat belt pretensioner), stand at least 10 m (32.8 ft.) away from the front seat outer belt.**
- **Use gloves and safety glasses when handling a front seat outer belt with an activated pretensioner.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a front seat outer belt that has an activated pretensioner.**
- **Perform procedures in a place away from electrical interference.**
- **When activating the seat belt pretensioner, always use the specified SST (SRS airbag deployment tool).**

1. DISPOSE OF FRONT SEAT OUTER BELT ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:


Prepare a battery to activate the seat belt pretensioner.

a. Check if SST is functioning properly.

SST
09082-00700

CAUTION:


When activating the seat belt pretensioner, always use the specified SST.

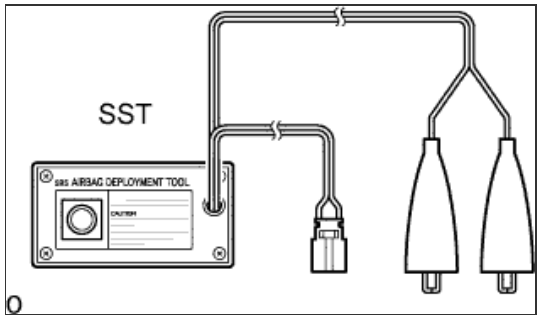

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the battery negative (-) terminal.

HINT:


Do not connect the yellow connector. The yellow connector is used to connect to the seat belt pretensioner.

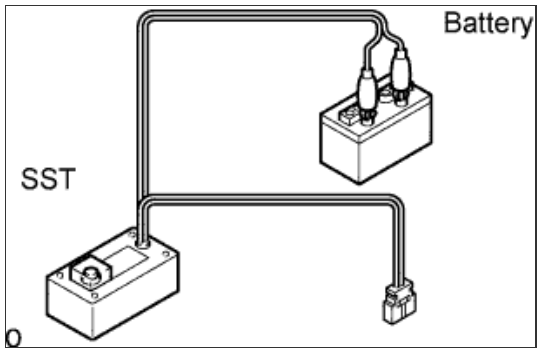

ii. Press SST activation switch and check that the LED of SST activation switch illuminates.

CAUTION:

If the LED illuminates when the activation switch is not being pressed, SST may be malfunctioning. Replace SST with a new one.

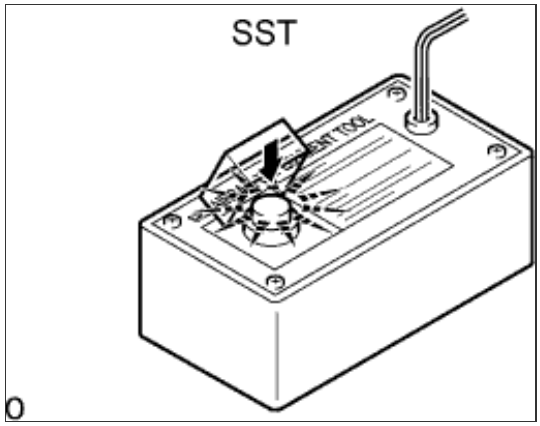

b. Disconnect SST from the battery.

c. Disconnect the pretensioner connector.

i. Disconnect the cable from the negative (-) battery terminal.

ii. Remove the front door scuff plate (Click here).


iii. Remove the rear step cover (Click here).

iv. Remove the rear door scuff plate (Click here).

v. Remove the center pillar garnish cover (Click here).

vi. Remove the center lower pillar garnish (Click here).

vii. Disconnect the pretensioner connector as shown in the illustration.

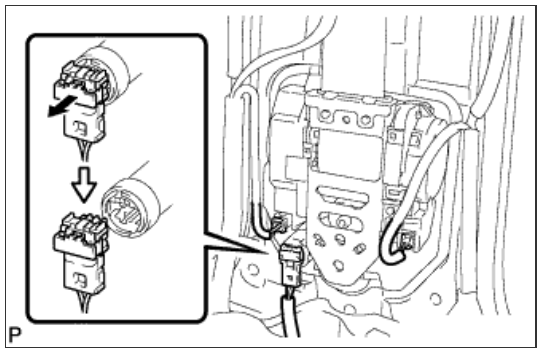

d. Prepare SST for activation of the seat belt pretensioner.

i. Install the floor anchor of the seat belt.


ii. Connect SST (A) to SST (B). Then connect the connector of SST (B) to the seat belt pretensioner.

SST

09082-00700
09082-00770

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

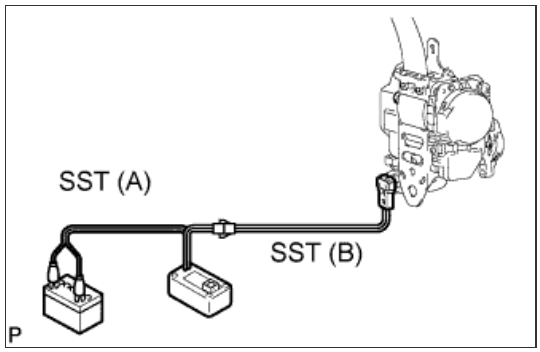

iii. ove SST at least 10 m (.8 ft.) away from the front of the vehicle.

iv. Close all the doors and windows of the vehicle.


HINT:

Leave a gap in one of the windows for inserting SST wire harness.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the negative (-) terminal.

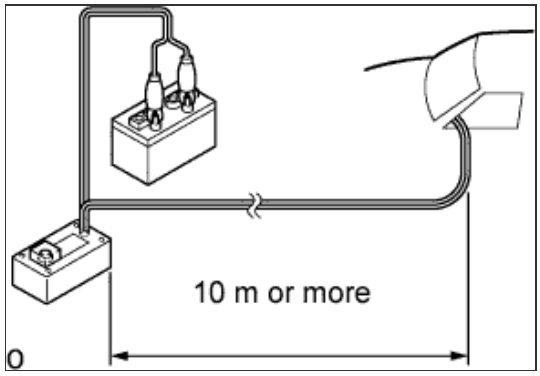

e. Activate the seat belt pretensioner.

i. Confirm that no one is inside the vehicle or within 10 m (.8 ft.) of the vehicle.

ii. Press SST activation switch to activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates at the same time SST activation switch LED illuminates.

f. Dispose of the front seat outer belt (with the seat belt pretensioner).

CAUTION:

- **Do not touch the front seat outer belt for at least 30 minutes after the seat belt pretensioner has been activated. It is very hot.**
- **Use gloves and safety glasses when handling a front seat outer belt whose pretensioner has been activated.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a front seat outer belt that has an activated pretensioner.**

HINT:


When scrapping a vehicle, activate the seat belt pretensioner, and then scrap the vehicle with the activated front seat outer belt installed.

2. DISPOSE OF FRONT SEAT OUTER BELT ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedures listed below when activating the seat belt pretensioner.

a. Remove the front seat outer belt.

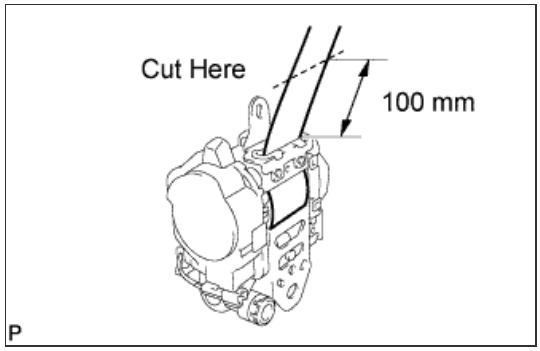

i. Wind the seat belt with the retractor.

ii. When the seat belt is sufficiently wound, cut the seat belt appro imately 100 mm (0. in.) from the retractor as shown in the illustration.

HINT:


The seat belt is designed so that winding the seat belt before pretensioner activation will decrease the pulling power of the seat belt during pretensioner activation.

b. Check if SST is functioning properly.

SST
09082-00700
09082-00770

CAUTION:

When activating a seat belt pretensioner, always use the specified SST.

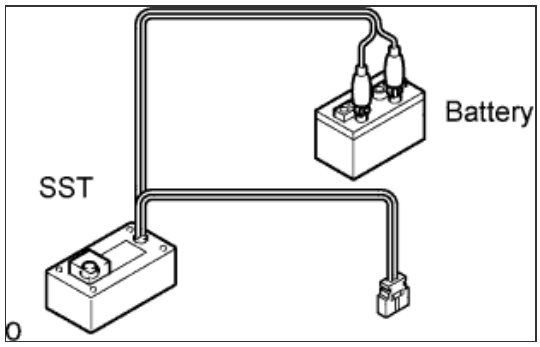


c. Prepare SST for activation of the seat belt pretensioner.

i. Connect SST (A) to SST (B). Then connect the connector of SST (B) to the seat belt pretensioner.

NOTICE:


To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

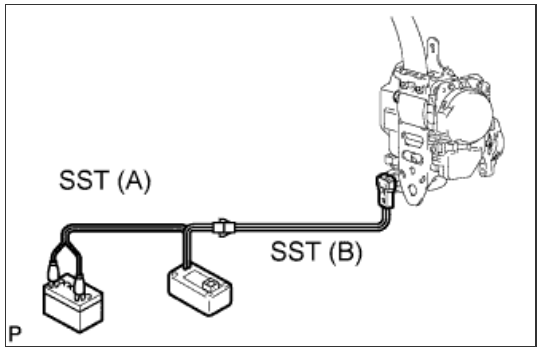

ii. Place the front seat outer belt on the ground and cover it with a tire (with wheel).

NOTICE:


Set up the front seat outer belt as shown in the illustration.

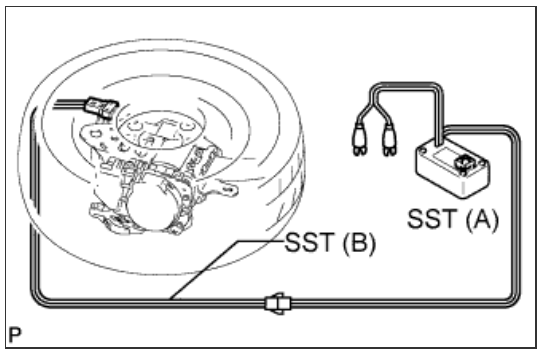

iii. ove SST at least 10 m (.8 ft.) away from the wheel.

NOTICE:

Take care not to damage SST wire harness.

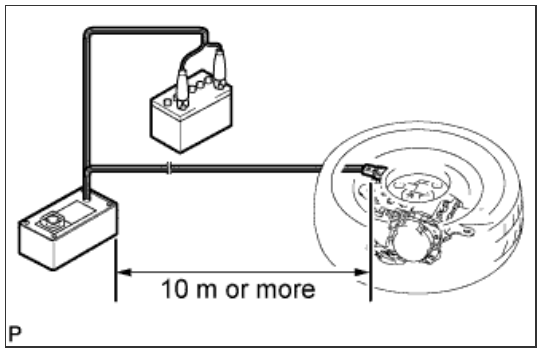

d. Activate the seat belt pretensioner.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the battery negative (-) terminal.

ii. Check that no one is within 10 m (.8 ft.) of the wheel.

iii. Press SST activation switch to activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates at the same time SST activation switch LED illuminates.

e. Dispose of the front seat outer belt (with the seat belt pretensioner).


CAUTION:

- **Do not touch the front seat outer belt for at least 30 minutes after the seat belt pretensioner has been activated. It is very hot.**
- **Use gloves and safety glasses when handling a front seat outer belt whose pretensioner has been activated.**
- **Always wash your hands with water after completing the disposal.**

- **Do not apply water to a front seat outer belt that has an activated pretensioner.**

i. Remove the tire (with wheel) and SST.

ii. Place the front seat outer belt in a plastic bag, tie the end tightly and dispose of it in the same way as other general parts.

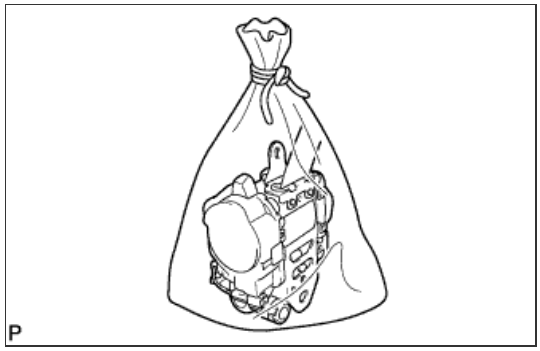


for Preparation Click here

HINT:

When scrapping vehicles equipped with a seat belt pretensioner or disposing of a front seat outer belt (with seat belt pretensioner), always first activate the seat belt pretensioner in accordance with the procedures described below. If any abnormality occurs during activation of the seat belt pretensioner, contact the SERVICE DEPART ENT of DISTRIBUTOR.

CAUTION:

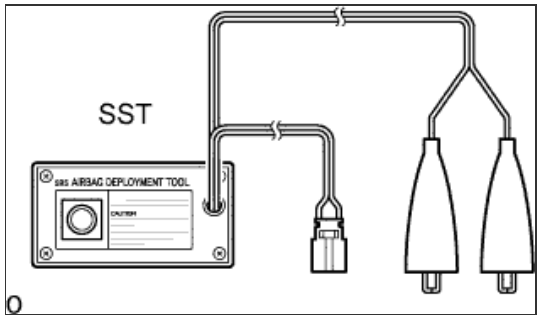

- **Never dispose of a front seat outer belt that has an un-activated pretensioner.**
- **The seat belt pretensioner produces a loud, exploding sound when it activates. Perform the operation where it will not be a nuisance to nearby people.**
- **When activating a front seat outer belt (with seat belt pretensioner), stand at least 10 m (32.8 ft.) away from the front seat outer belt.**
- **Use gloves and safety glasses when handling a front seat outer belt with an activated pretensioner.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a front seat outer belt that has an activated pretensioner.**
- **Perform procedures in a place away from electrical interference.**
- **When activating the seat belt pretensioner, always use the specified SST (SRS airbag deployment tool).**

1. DISPOSE OF FRONT SEAT OUTER BELT ASSEMBLY (WHEN INSTALLED IN VEHICLE)

HINT:


Prepare a battery to activate the seat belt pretensioner.

a. Check if SST is functioning properly.

SST
09082-00700

CAUTION:


When activating the seat belt pretensioner, always use the specified SST.

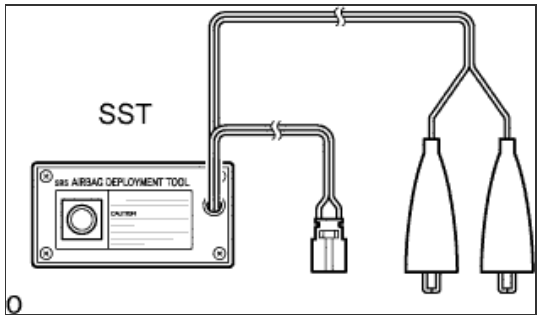

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the battery negative (-) terminal.

HINT:


Do not connect the yellow connector. The yellow connector is used to connect to the seat belt pretensioner.

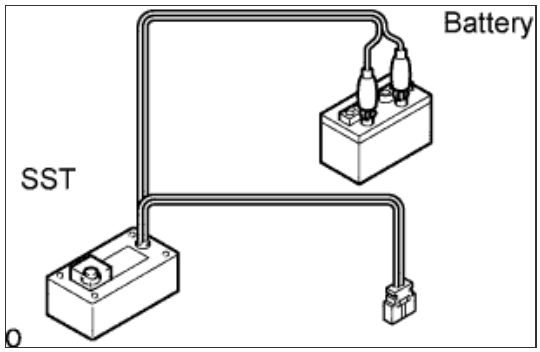

ii. Press SST activation switch and check that the LED of SST activation switch illuminates.

CAUTION:

If the LED illuminates when the activation switch is not being pressed, SST may be malfunctioning. Replace SST with a new one.

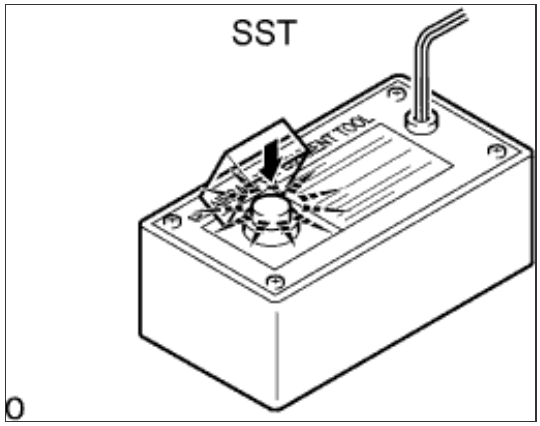

b. Disconnect SST from the battery.

c. Disconnect the pretensioner connector.

i. Disconnect the cable from the negative (-) battery terminal.

ii. Remove the front door scuff plate (Click here).


iii. Remove the rear step cover (Click here).

iv. Remove the rear door scuff plate (Click here).

v. Remove the center pillar garnish cover (Click here).

vi. Remove the center lower pillar garnish (Click here).

vii. Disconnect the pretensioner connector as shown in the illustration.

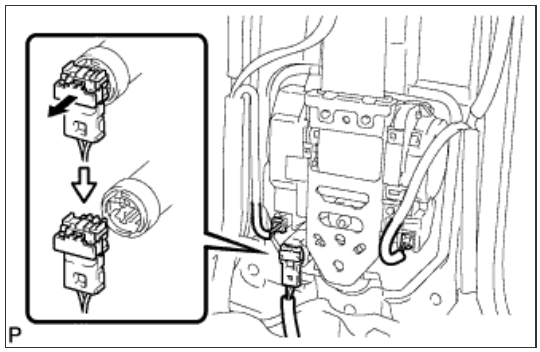

d. Prepare SST for activation of the seat belt pretensioner.

i. Install the floor anchor of the seat belt.


ii. Connect SST (A) to SST (B). Then connect the connector of SST (B) to the seat belt pretensioner.

SST

09082-00700
09082-00770

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

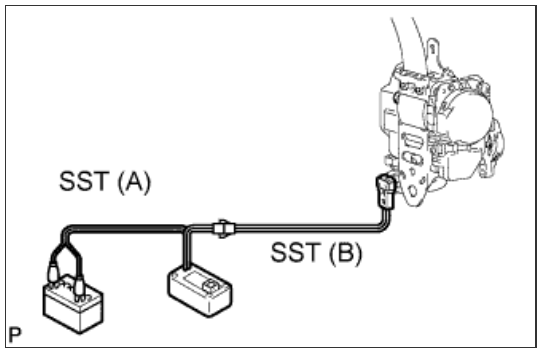

iii. ove SST at least 10 m (.8 ft.) away from the front of the vehicle.

iv. Close all the doors and windows of the vehicle.


HINT:

Leave a gap in one of the windows for inserting SST wire harness.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the negative (-) terminal.

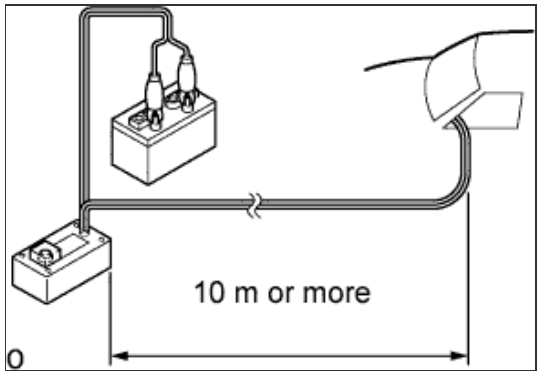

e. Activate the seat belt pretensioner.

i. Confirm that no one is inside the vehicle or within 10 m (.8 ft.) of the vehicle.

ii. Press SST activation switch to activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates at the same time SST activation switch LED illuminates.

f. Dispose of the front seat outer belt (with the seat belt pretensioner).

CAUTION:

- **Do not touch the front seat outer belt for at least 30 minutes after the seat belt pretensioner has been activated. It is very hot.**
- **Use gloves and safety glasses when handling a front seat outer belt whose pretensioner has been activated.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a front seat outer belt that has an activated pretensioner.**

HINT:


When scrapping a vehicle, activate the seat belt pretensioner, and then scrap the vehicle with the activated front seat outer belt installed.

2. DISPOSE OF FRONT SEAT OUTER BELT ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedures listed below when activating the seat belt pretensioner.

a. Remove the front seat outer belt.

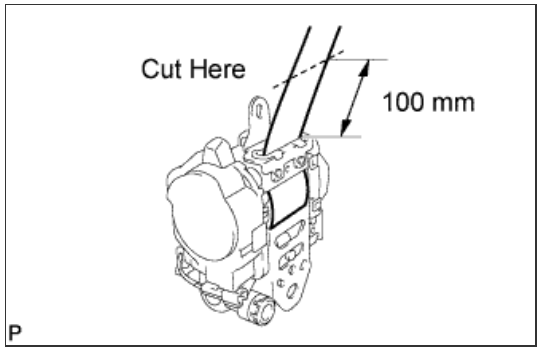

i. Wind the seat belt with the retractor.

ii. When the seat belt is sufficiently wound, cut the seat belt appro imately 100 mm (0. in.) from the retractor as shown in the illustration.

HINT:


The seat belt is designed so that winding the seat belt before pretensioner activation will decrease the pulling power of the seat belt during pretensioner activation.

b. Check if SST is functioning properly.

SST
09082-00700
09082-00770

CAUTION:

When activating a seat belt pretensioner, always use the specified SST.

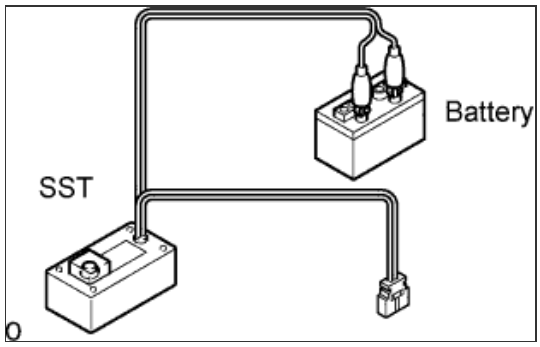


c. Prepare SST for activation of the seat belt pretensioner.

i. Connect SST (A) to SST (B). Then connect the connector of SST (B) to the seat belt pretensioner.

NOTICE:


To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

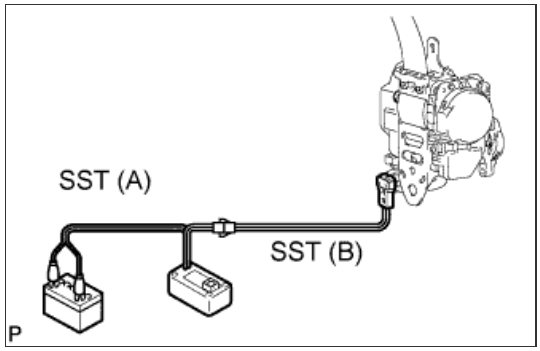

ii. Place the front seat outer belt on the ground and cover it with a tire (with wheel).

NOTICE:


Set up the front seat outer belt as shown in the illustration.

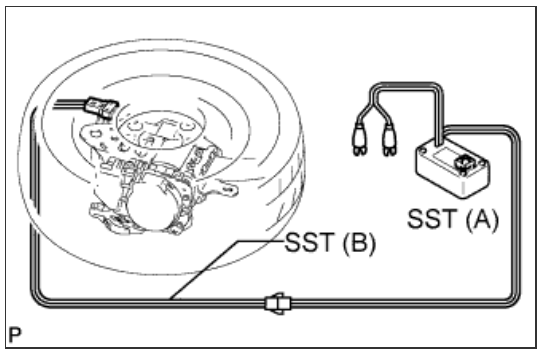

iii. ove SST at least 10 m (.8 ft.) away from the wheel.

NOTICE:

Take care not to damage SST wire harness.

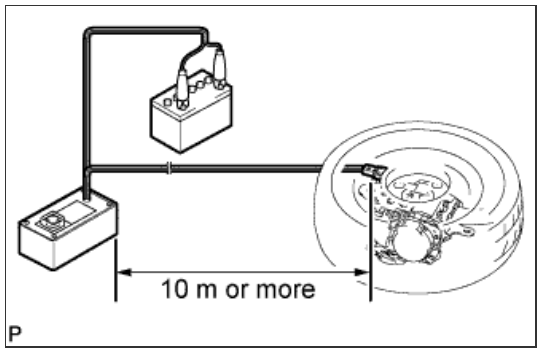

d. Activate the seat belt pretensioner.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the battery negative (-) terminal.

ii. Check that no one is within 10 m (.8 ft.) of the wheel.

iii. Press SST activation switch to activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates at the same time SST activation switch LED illuminates.

e. Dispose of the front seat outer belt (with the seat belt pretensioner).


CAUTION:

- **Do not touch the front seat outer belt for at least 30 minutes after the seat belt pretensioner has been activated. It is very hot.**
- **Use gloves and safety glasses when handling a front seat outer belt whose pretensioner has been activated.**
- **Always wash your hands with water after completing the disposal.**


- **Do not apply water to a front seat outer belt that has an activated pretensioner.**


i. Remove the tire (with wheel) and SST.

ii. Place the front seat outer belt in a plastic bag, tie the end tightly and dispose of it in the same way as other general parts.

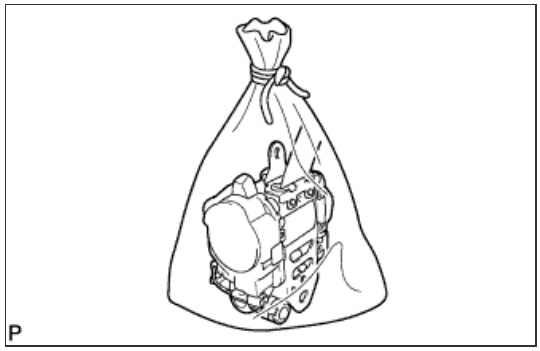

for Preparation Click here

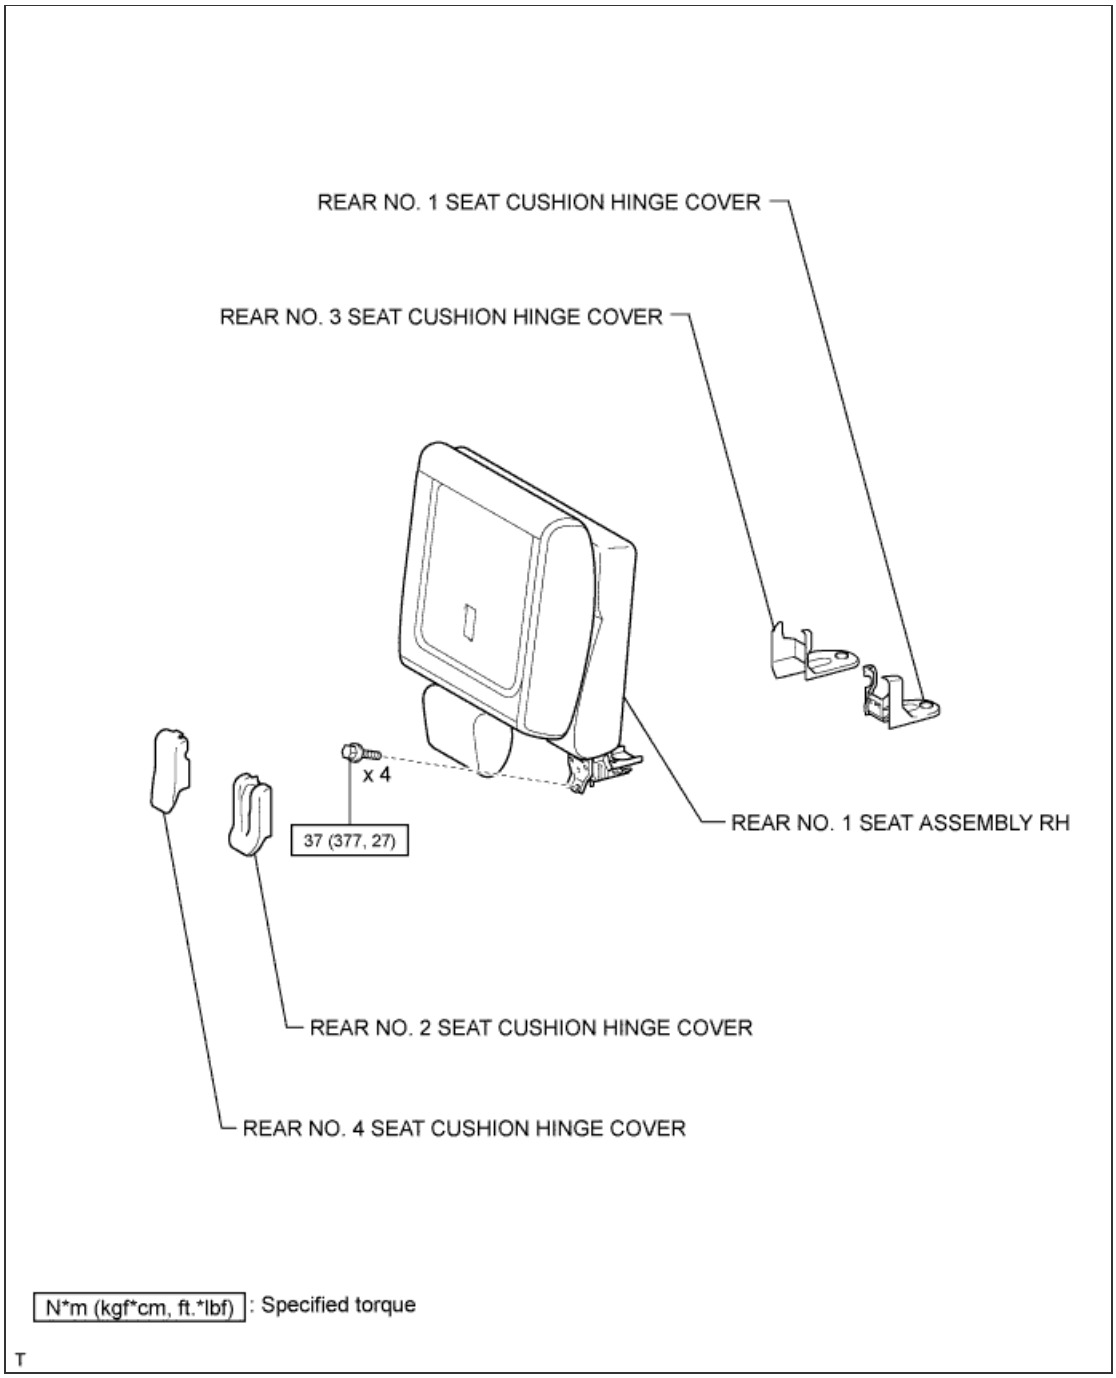

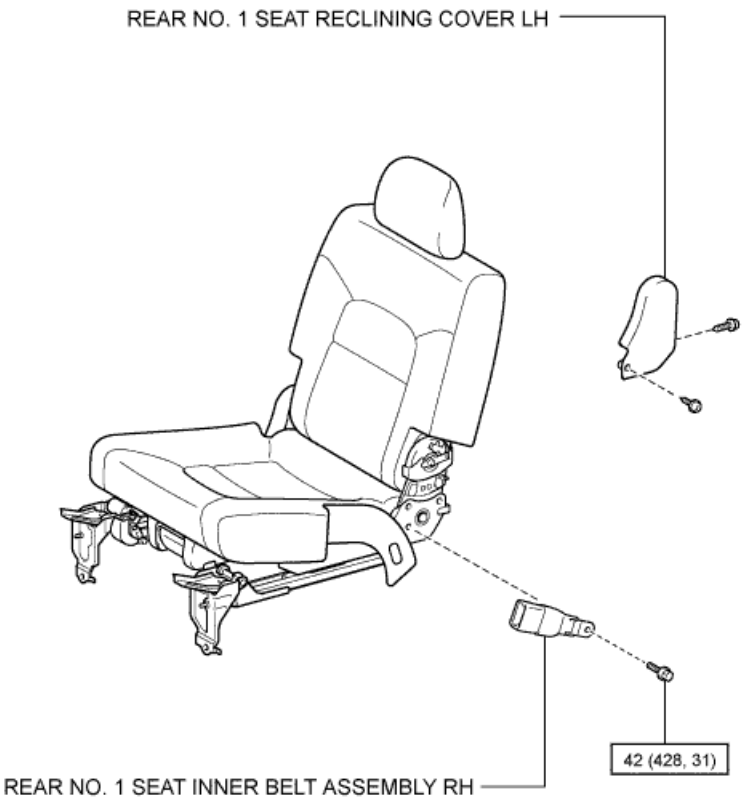

N*m (kgf*cm, ft.*lbf) : Specified torque

T

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**


1. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE REAR NO. 1 SEAT RECLINING COVER LH


a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

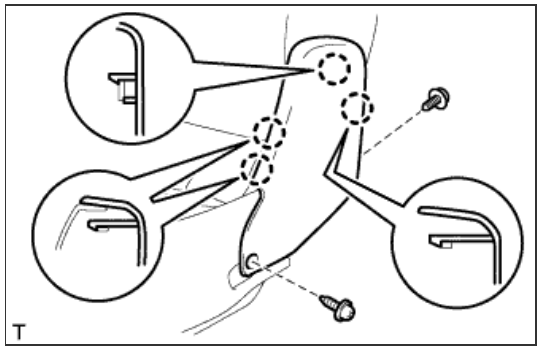

3. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY RH

a. Remove the bolt and belt.

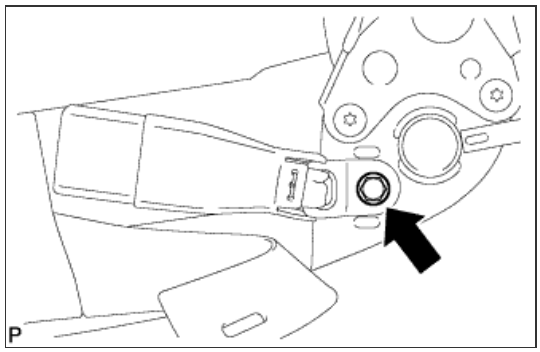

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**


1. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE REAR NO. 1 SEAT RECLINING COVER LH


a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

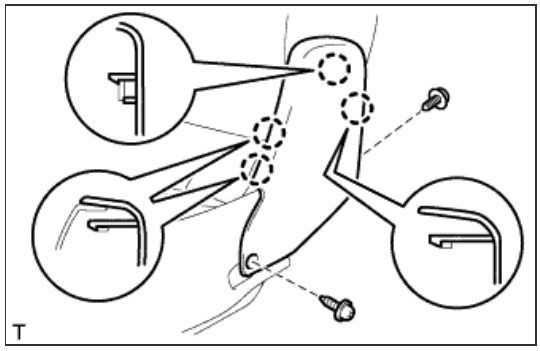

3. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY RH

a. Remove the bolt and belt.

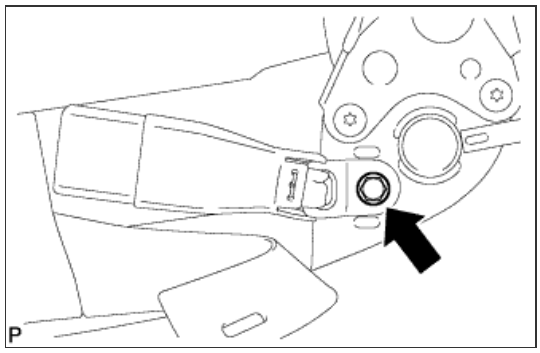

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**


1. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY RH

a. Install the belt with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not overlap the anchor part of the seat belt and protruding parts of the seat.

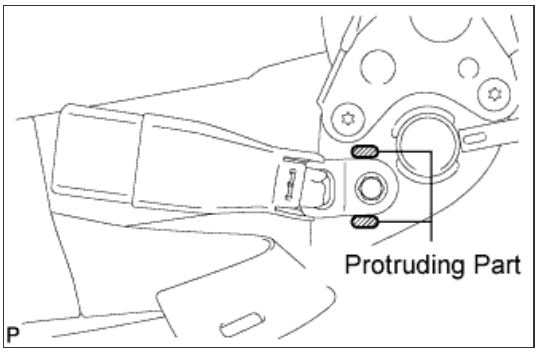

2. INSTALL REAR NO. 1 SEAT RECLINING COVER LH

a. Attach the 4 claws to install the cover.

b. Install the 2 screws.

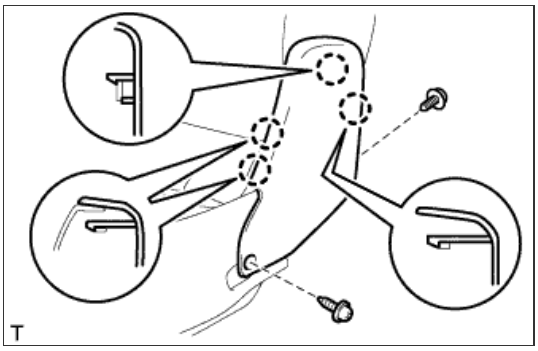

3. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. Install the rear No. 1 seat assembly (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedure listed below is for the LHD.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**


1. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY RH

a. Install the belt with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not overlap the anchor part of the seat belt and protruding parts of the seat.

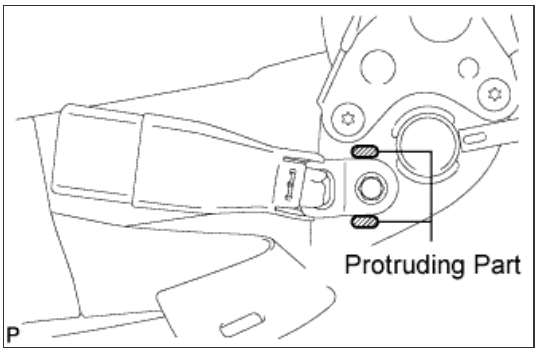

2. INSTALL REAR NO. 1 SEAT RECLINING COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

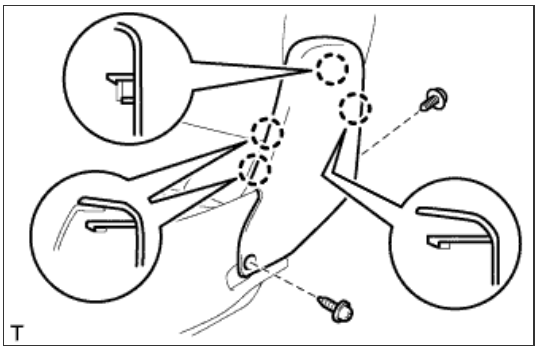


3. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. Install the rear No. 1 seat assembly (Click here).

for Preparation Click here

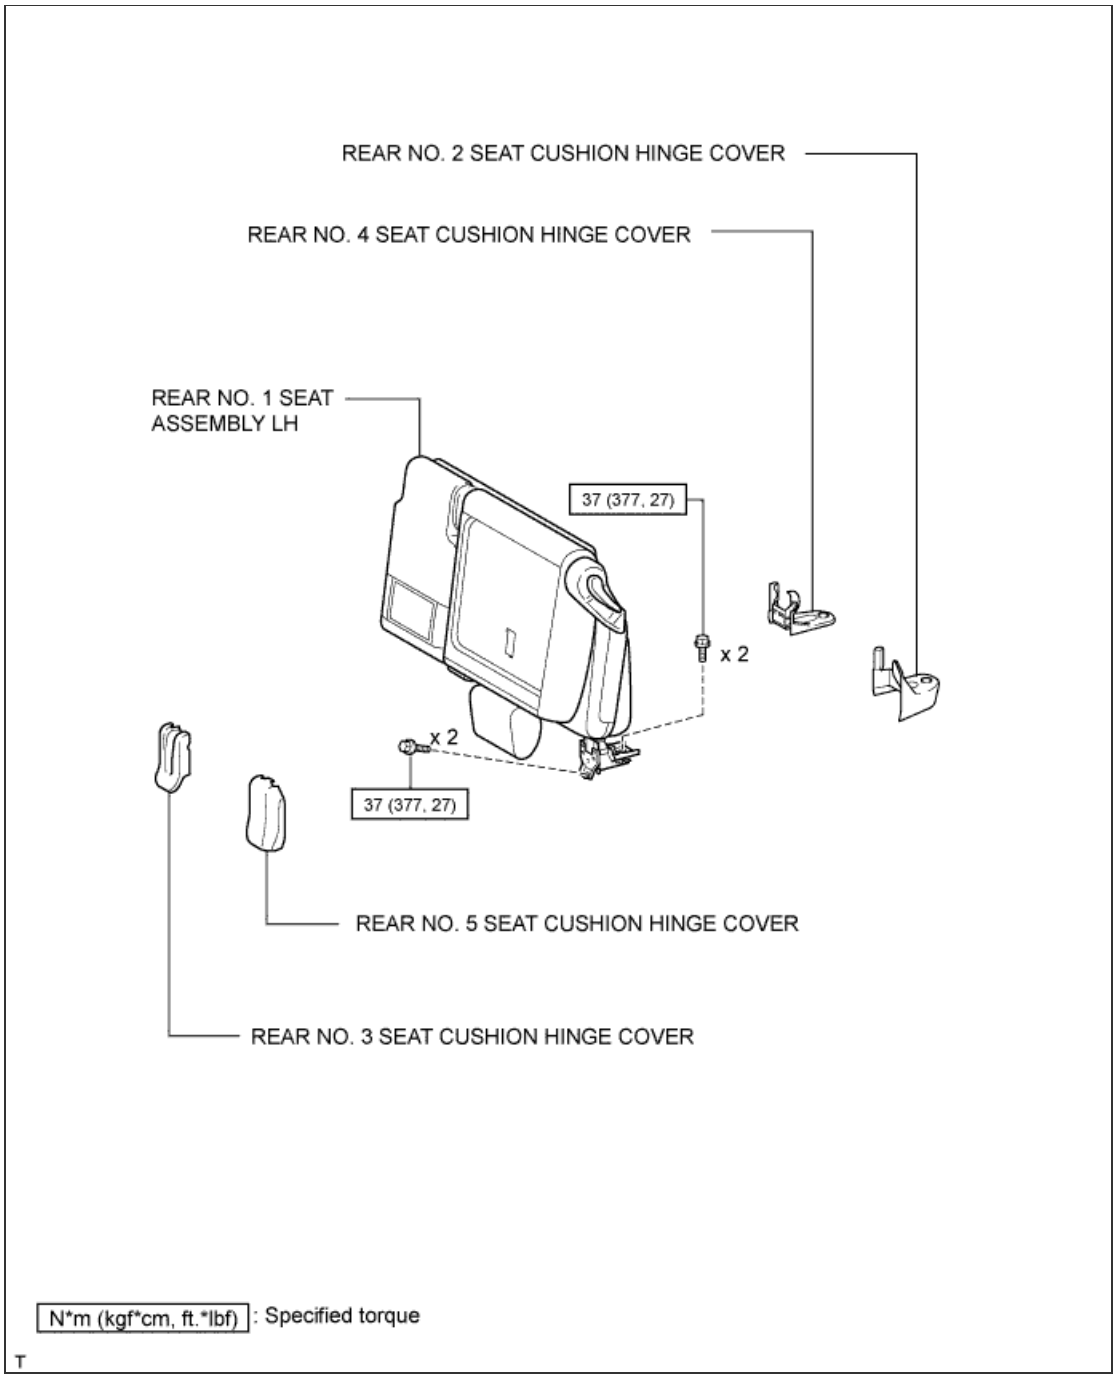

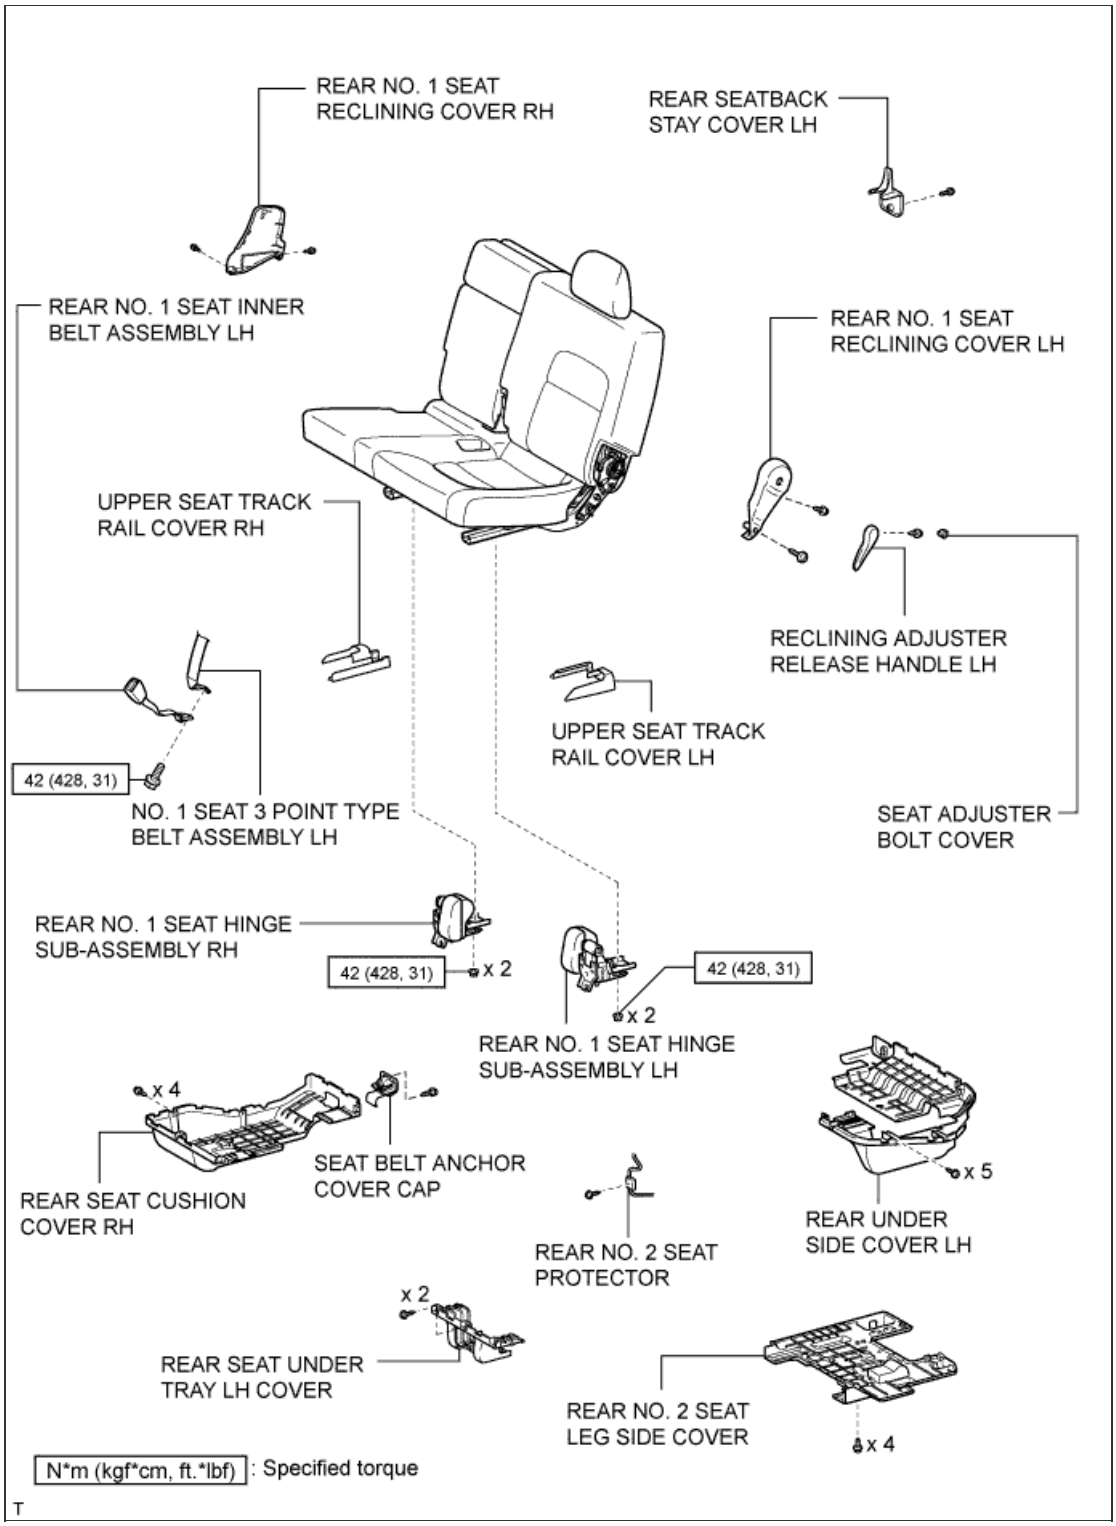
REAR NO. 1 SEAT RECLINING COVER RH
REAR SEATBACK STAY COVER LH
REAR NO. 1 SEAT INNER BELT ASSEMBLY LH
REAR NO. 1 SEAT RECLINING COVER LH
UPPER SEAT TRACK RAIL COVER RH
RECLINING ADJUSTER RELEASE HANDLE LH
UPPER SEAT TRACK RAIL COVER LH
42 (428, 31)
NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH
SEAT ADJUSTER BOLT COVER
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH
42 (428, 31) x 2
42 (428, 31) x 2
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH
x 4
SEAT BELT ANCHOR COVER CAP
x 5
REAR SEAT CUSHION COVER RH
REAR NO. 2 SEAT PROTECTOR
REAR UNDER SIDE COVER LH
x 2
REAR SEAT UNDER TRAY LH COVER
REAR NO. 2 SEAT LEG SIDE COVER
x 4
N*m (kgf*cm, ft.*lbf) : Specified torque
T

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY LH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

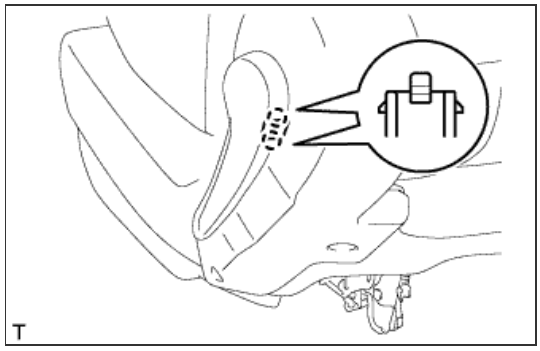

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

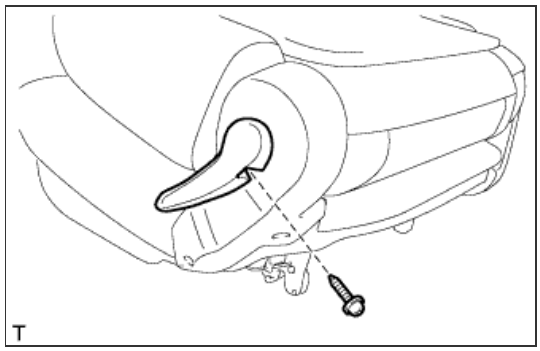

4. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

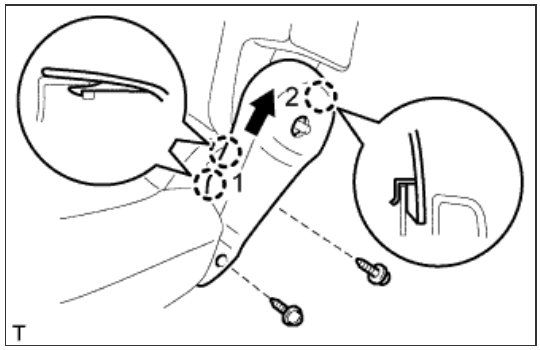

5. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

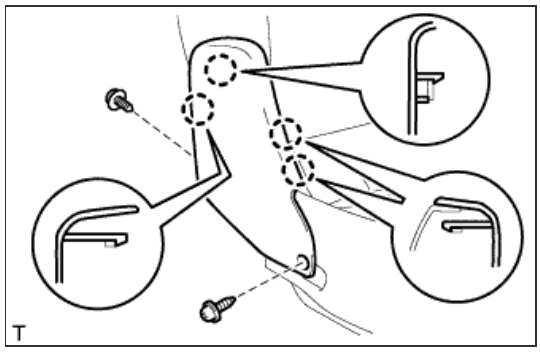


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

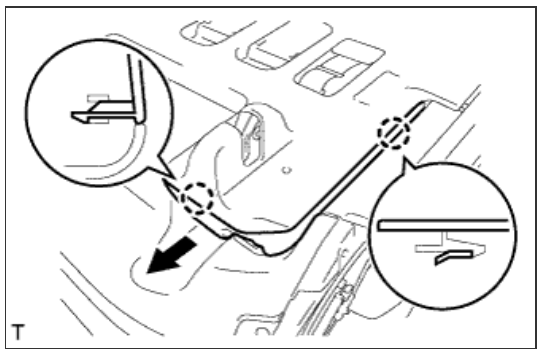


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

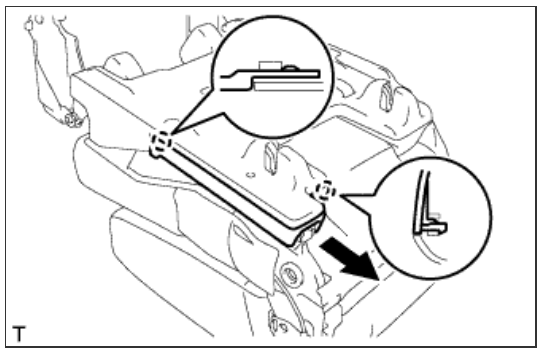


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 4 claws.

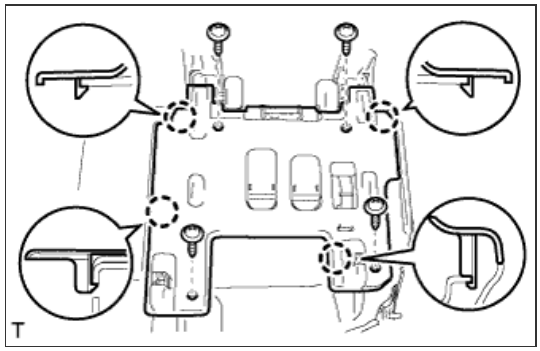


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

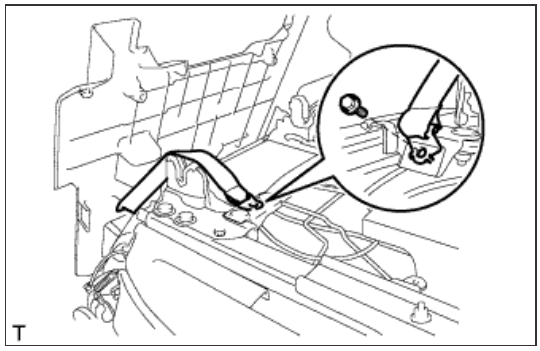

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

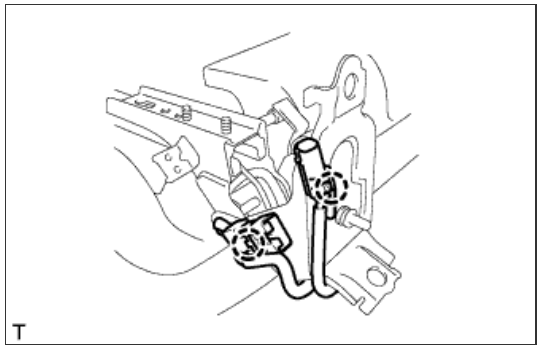

c. Using a clip remover, remove the clip.

d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove wire harness.

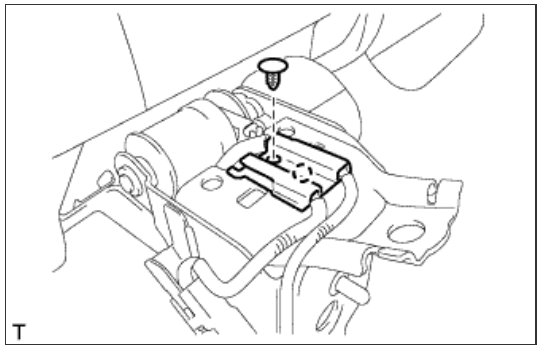


10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

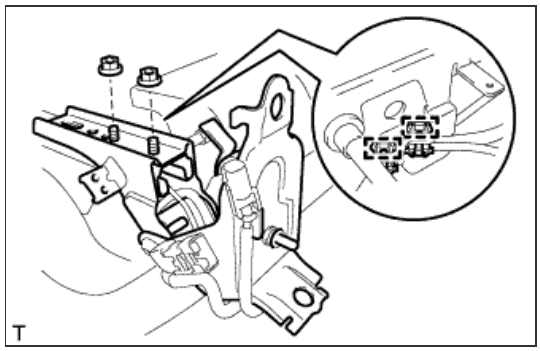


d. Detach the cable clamp and disconnect the cable.

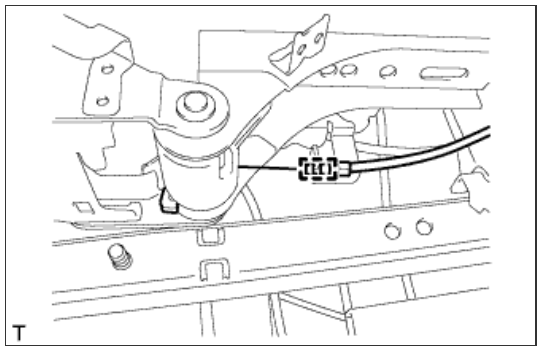


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Remove the 2 nuts and hinge.

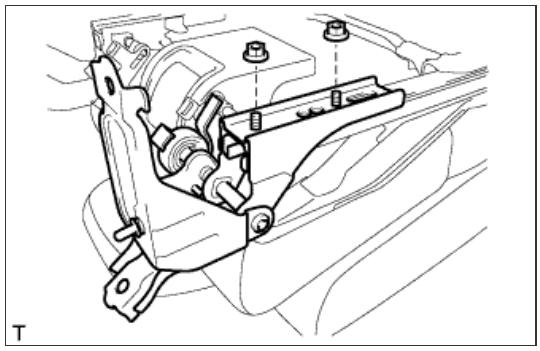


12. REMOVE SEAT BELT ANCHOR COVER CAP

a. Detach the claw and open the cap.

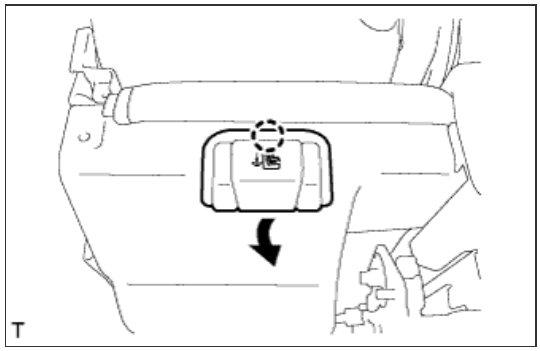


b. Remove the screw and anchor cover cap.

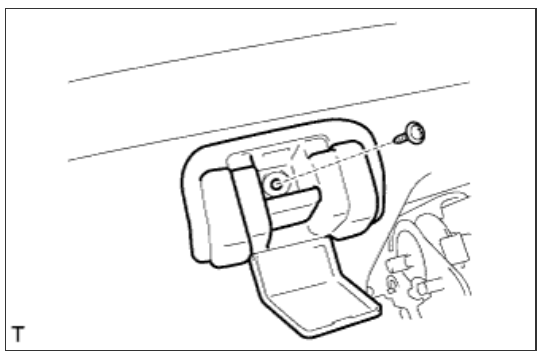

13. REMOVE REAR SEATBACK STAY COVER LH


a. Remove the screw.

b. Detach the 2 claws and remove the cover.

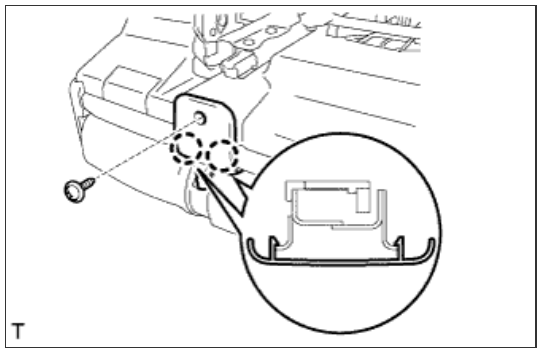


14. REMOVE REAR UNDER SIDE COVER LH

a. Detach the 10 claws.

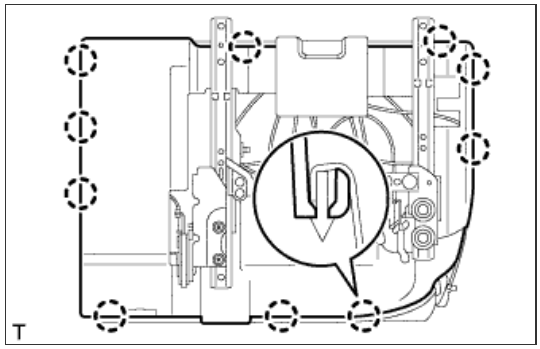

b. Remove the screws.


c. Detach the 2 clips and 2 claws, and remove the cover.

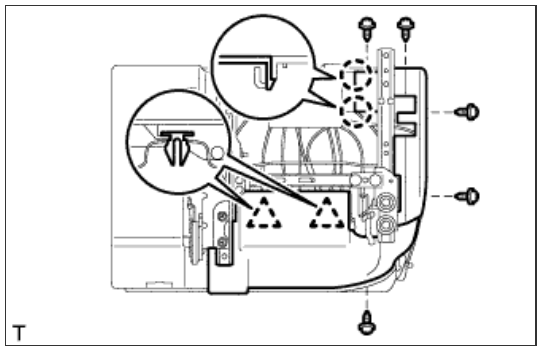

15. REMOVE REAR SEAT CUSHION COVER RH

a. Remove the 4 screws.


b. Detach the 2 claws and remove the cover.

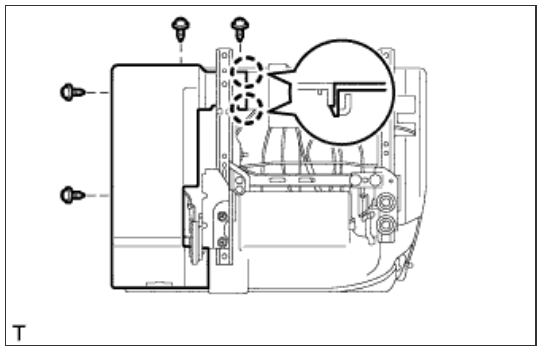

16. REMOVE REAR SEAT UNDER TRAY LH COVER

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

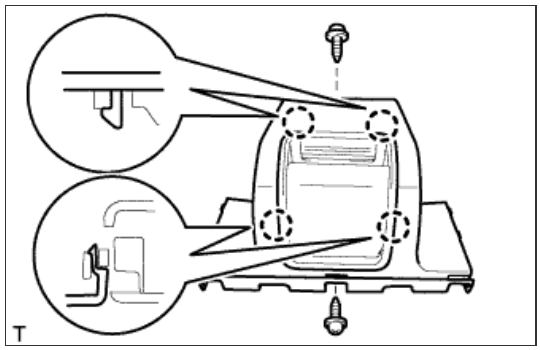


17. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Remove the bolt and belt.


HINT:

The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, it becomes disconnected when the bolt is removed.

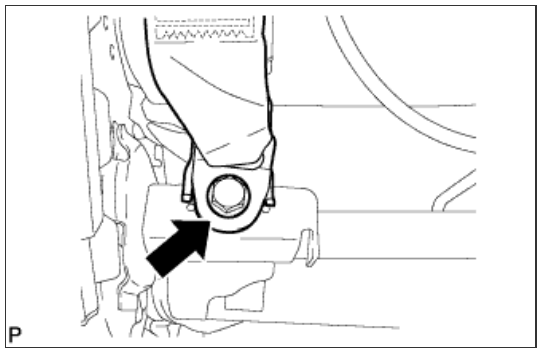

18. DISCONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Disconnect the belt anchor.

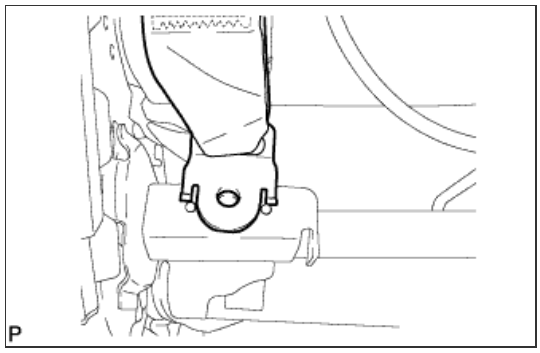

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY LH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

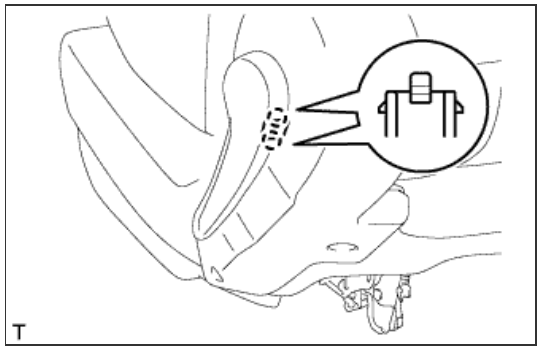

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

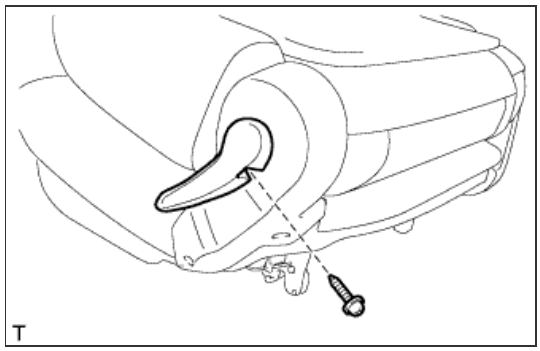

4. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

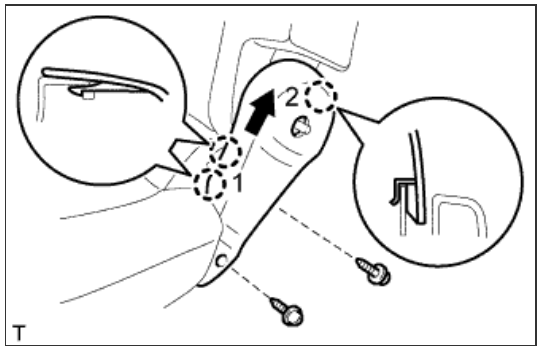

5. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

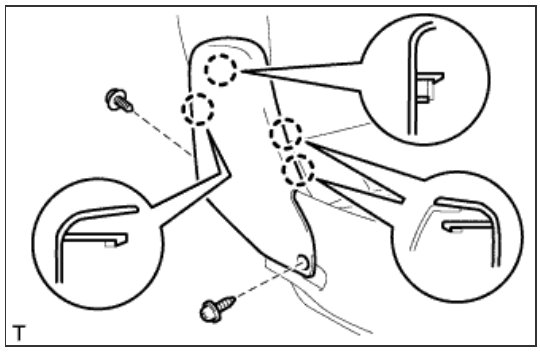


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

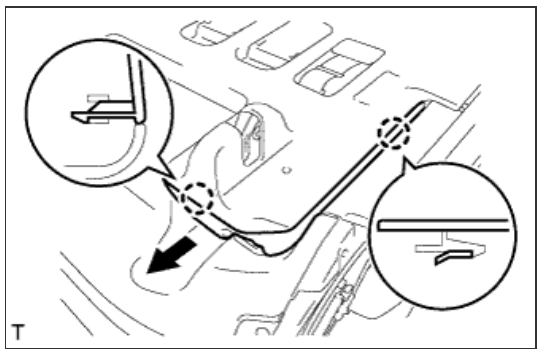


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

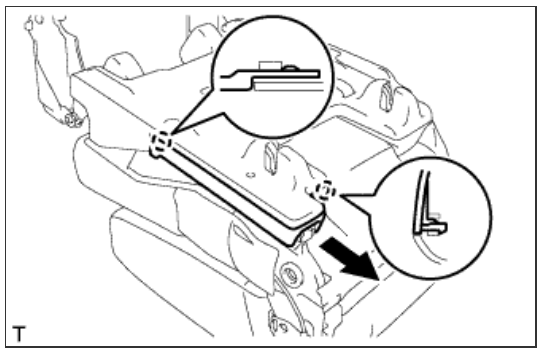


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 4 claws.

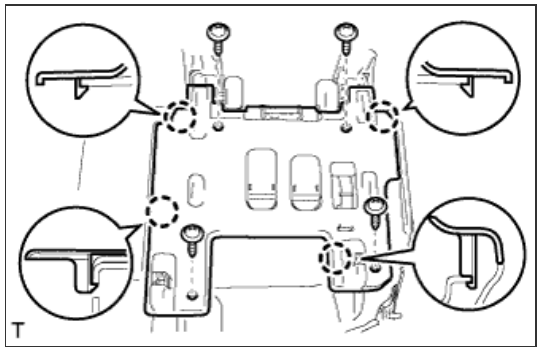


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

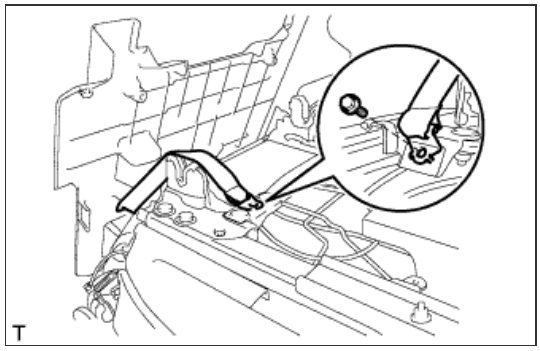

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

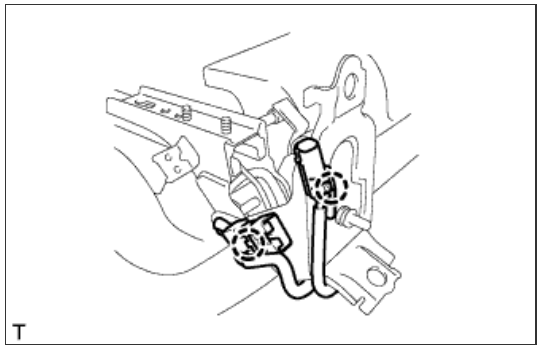

c. Using a clip remover, remove the clip.

d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove wire harness.

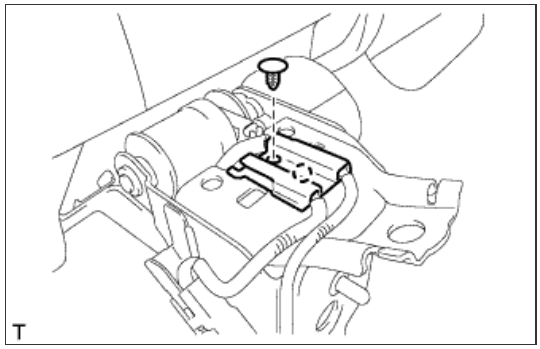


10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

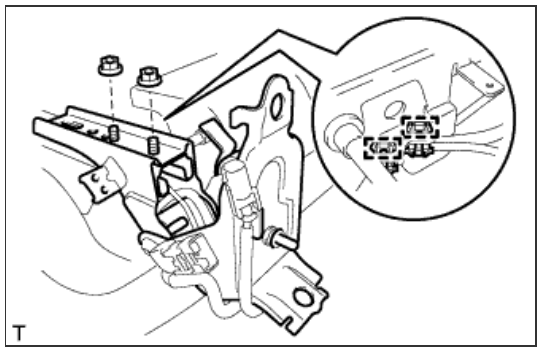


d. Detach the cable clamp and disconnect the cable.

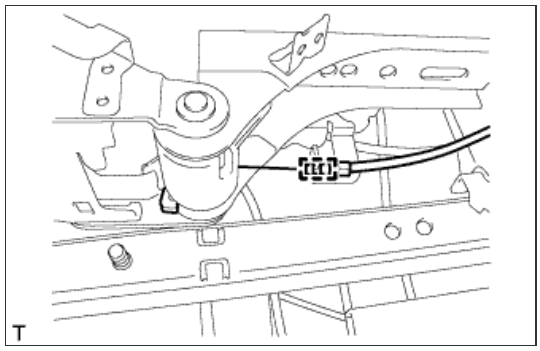


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Remove the 2 nuts and hinge.

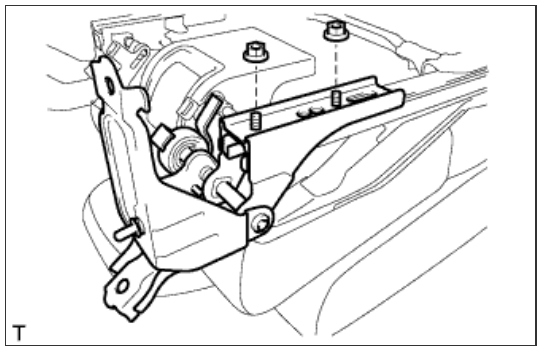


12. REMOVE SEAT BELT ANCHOR COVER CAP

a. Detach the claw and open the cap.

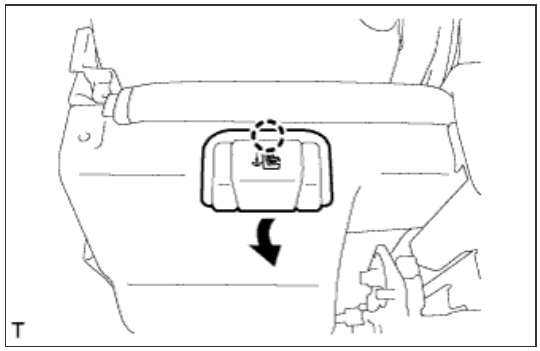


b. Remove the screw and anchor cover cap.

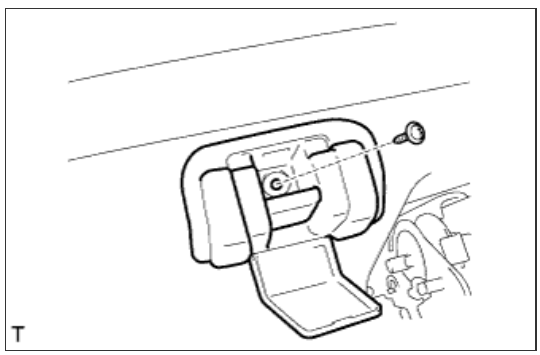

13. REMOVE REAR SEATBACK STAY COVER LH


a. Remove the screw.

b. Detach the 2 claws and remove the cover.

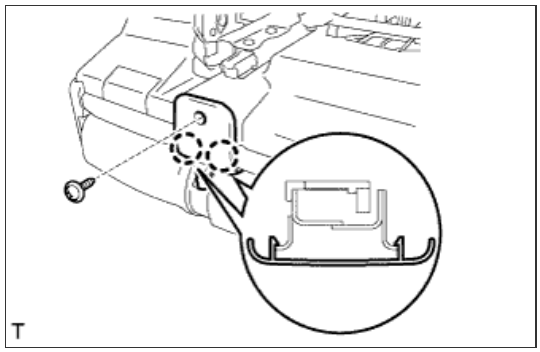


14. REMOVE REAR UNDER SIDE COVER LH

a. Detach the 10 claws.

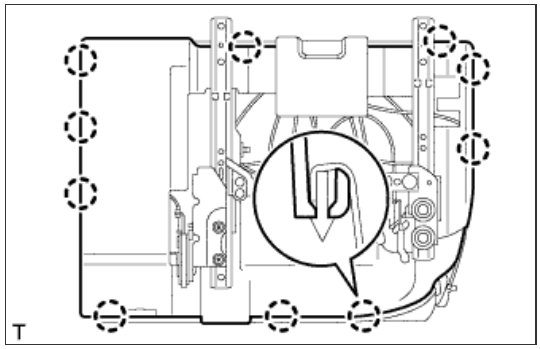

b. Remove the screws.


c. Detach the 2 clips and 2 claws, and remove the cover.

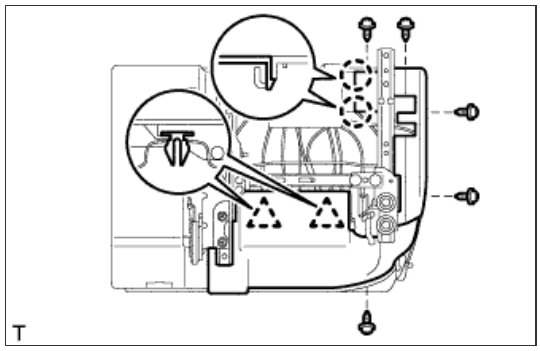

15. REMOVE REAR SEAT CUSHION COVER RH

a. Remove the 4 screws.


b. Detach the 2 claws and remove the cover.

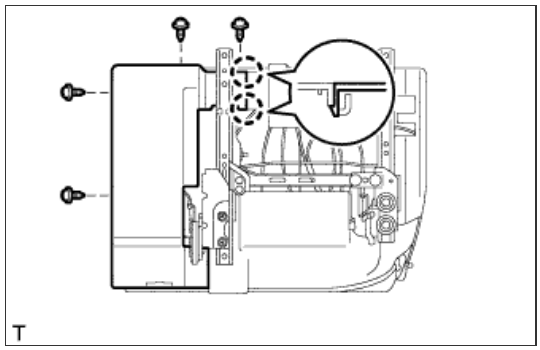

16. REMOVE REAR SEAT UNDER TRAY LH COVER

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

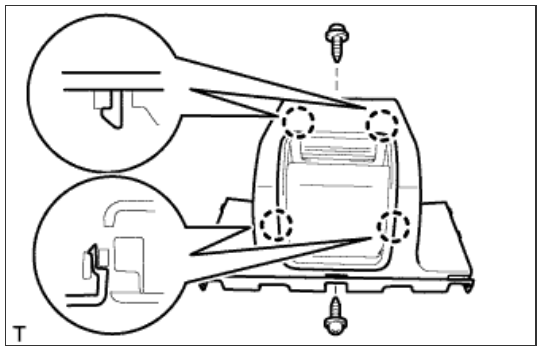


17. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Remove the bolt and belt.


HINT:

The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, it becomes disconnected when the bolt is removed.

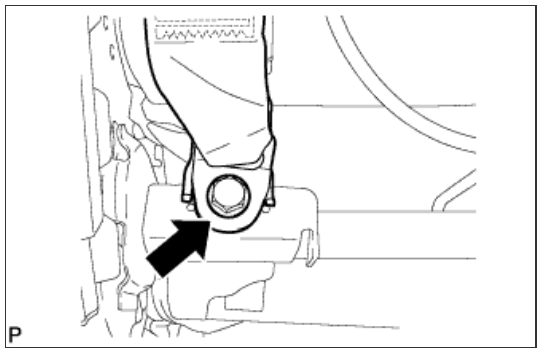

18. DISCONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Disconnect the belt anchor.

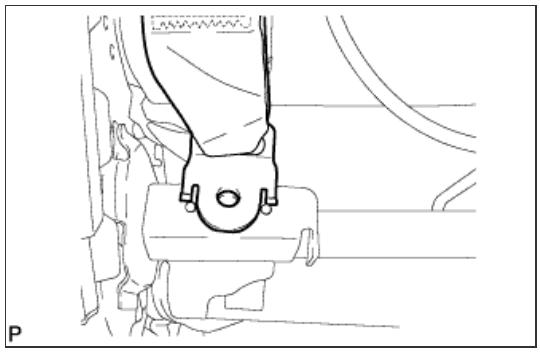

for Preparation Click here

HINT:


- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**

1. CONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Connect the belt anchor.

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

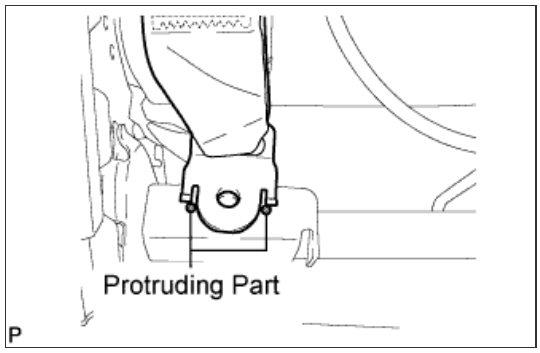

2. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Install the belt with the bolt.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

HINT:


The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, connect it when installing the rear No. 1 seat inner belt LH.

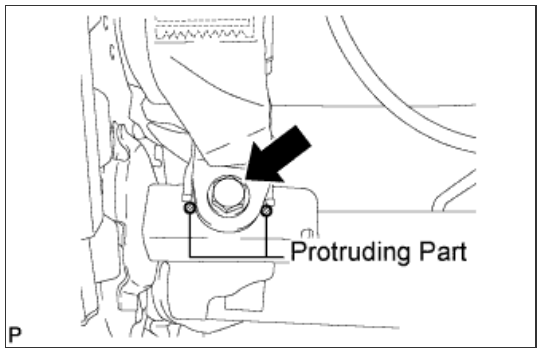

3. INSTALL REAR SEAT UNDER TRAY COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

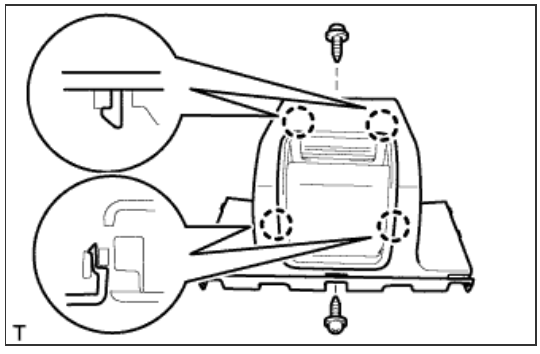

4. INSTALL REAR SEAT CUSHION COVER RH

a. Attach the 2 claws to install the cover.


b. Install the 4 screws.

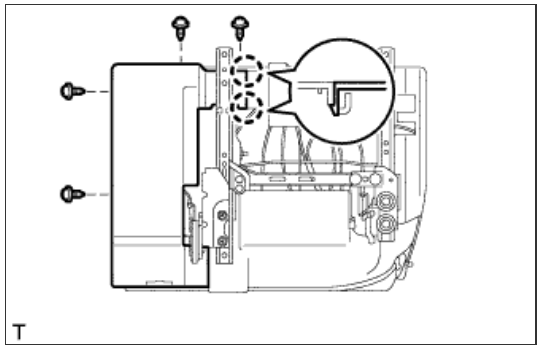


5. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and 2 clips to install the cover.

b. Install the 5 screws.

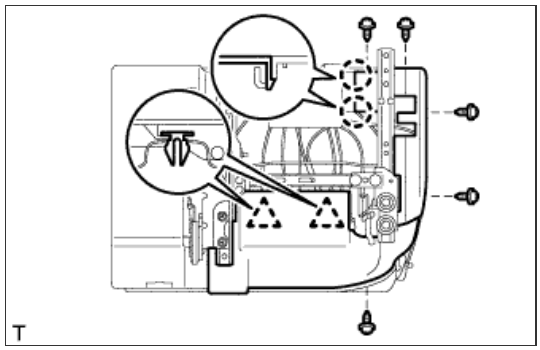


c. Attach the 10 claws.

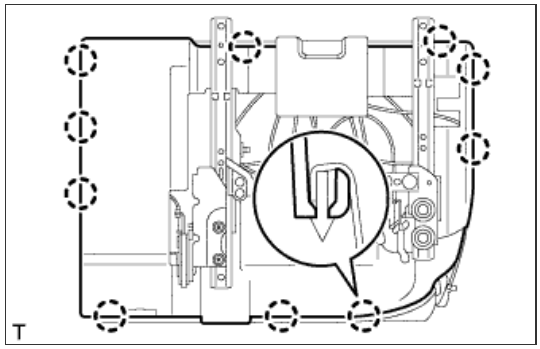

6. INSTALL REAR SEATBAC STAY COVER LH


a. Attach the 2 claws to install the cover.

b. Install the screw.

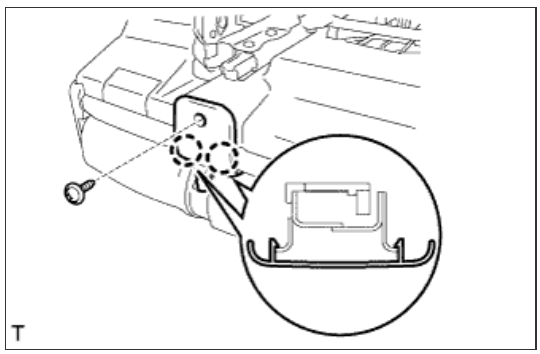


7. INSTALL SEAT BELT ANCHOR COVER CAP

a. Install the anchor cover cap with the screw.

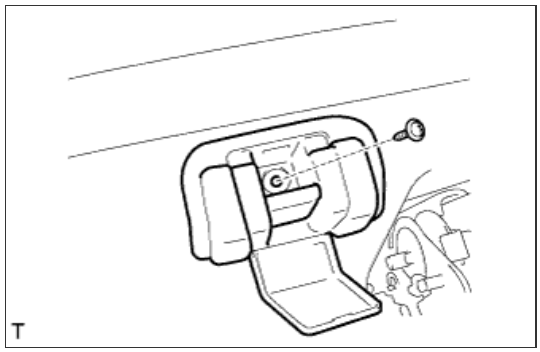


b. Attach the claw to close the cap.

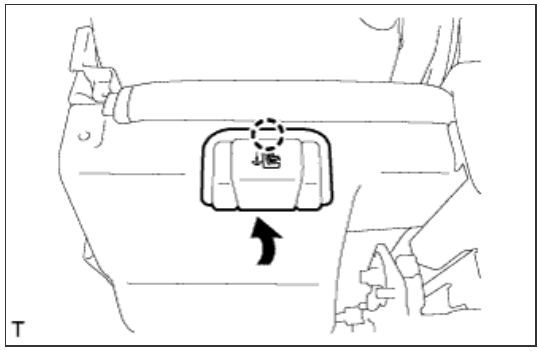

8. INSTALL REAR NO. 1 SEAT HIN E SUB-ASSEMBLY RH


a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

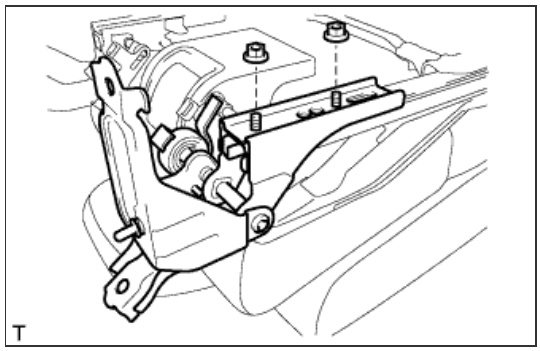

. INSTALL REAR NO. 1 SEAT HIN E SUB-ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

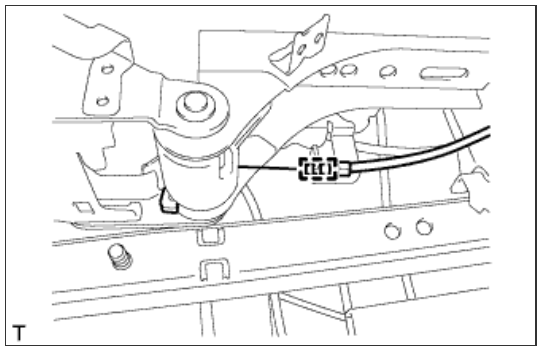


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.

d. w/ Seat Heater System:
Attach the wire harness clamp.

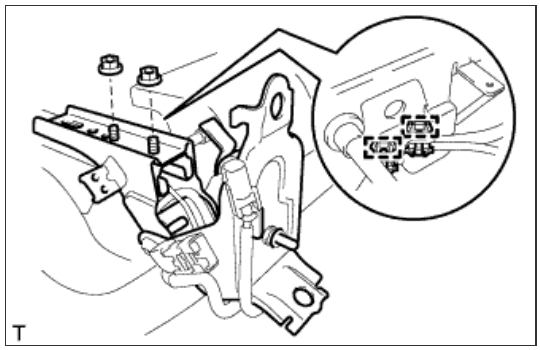


10. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

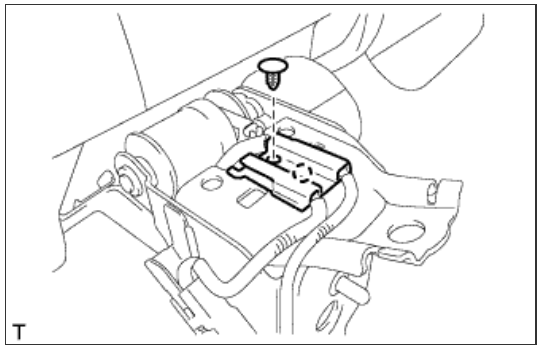


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

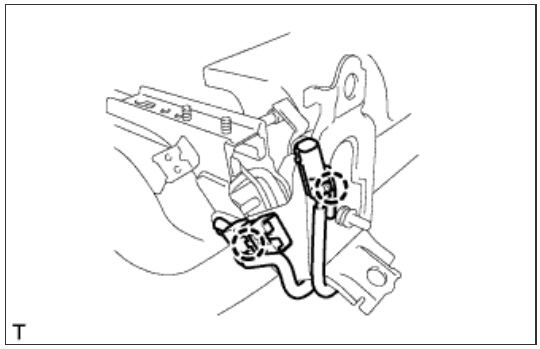


11. INSTALL REAR NO. 2 SEAT LE SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

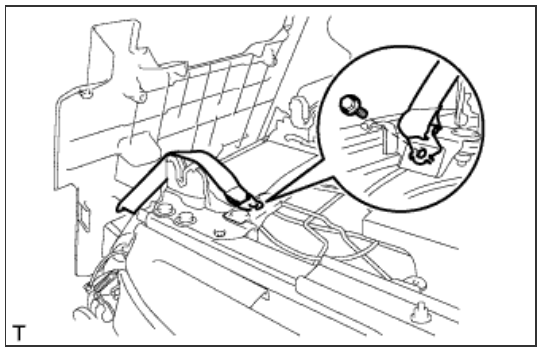


b. Attach the 4 claws to install the seat leg side cover.

c. Install the 4 screws.

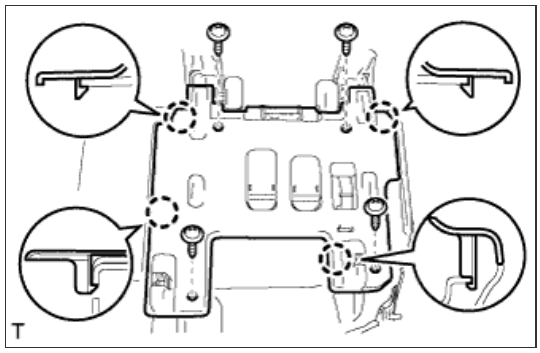


12. INSTALL UPPER SEAT TRAC RAIL COVER RH

a. Attach the 2 claws to install the cover.

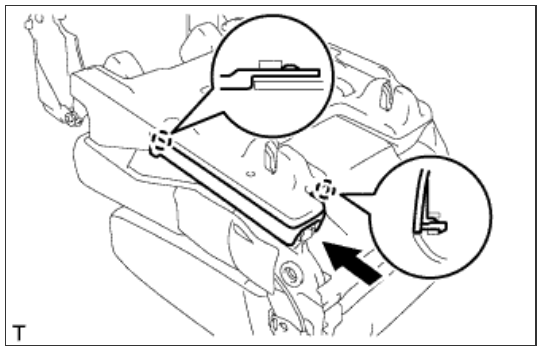

13. INSTALL UPPER SEAT TRAC RAIL COVER LH


a. Attach the 2 claws to install the cover.

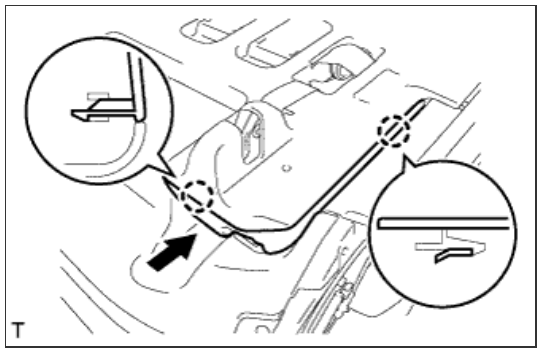

14. INSTALL REAR NO. 1 SEAT RECLININ COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

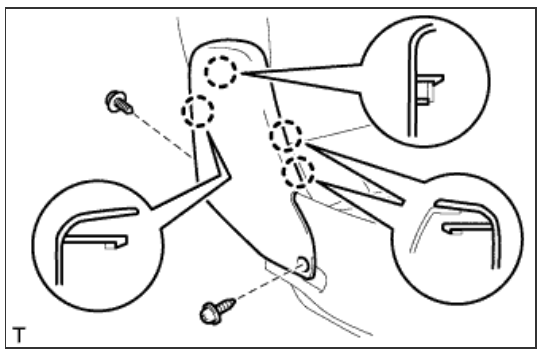

15. INSTALL REAR NO. 1 SEAT RECLININ COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

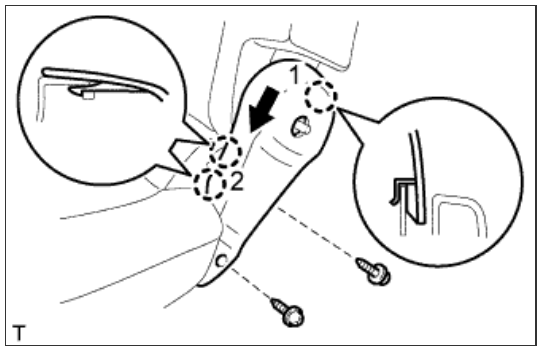


16. INSTALL RECLININ AD USTER RELEASE HANDLE LH

a. Install the release handle with the screw.

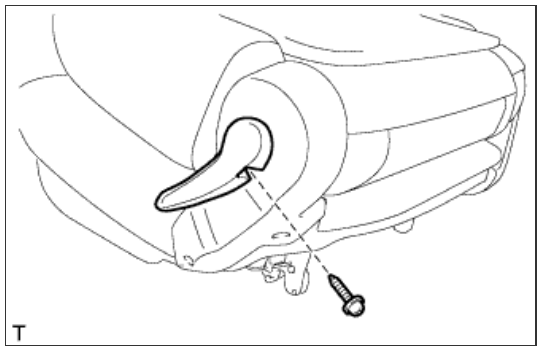

17. INSTALL SEAT AD USTER BOLT COVER

a. Attach the 2 claws to install the cover.

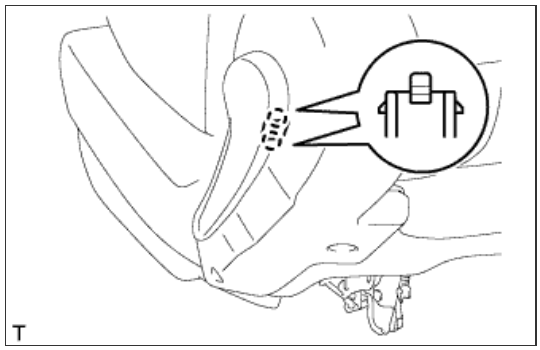

18. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly (Click here).

for Preparation Click here

HINT:


- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**

1. CONNECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Connect the belt anchor.

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

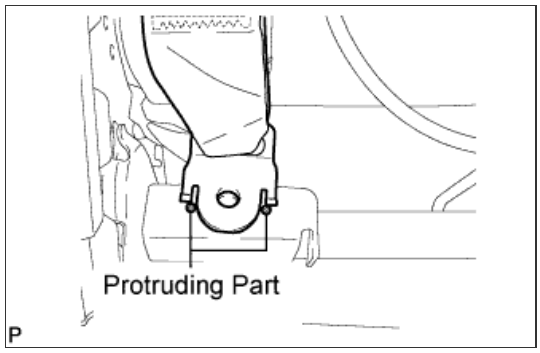

2. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Install the belt with the bolt.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

HINT:


The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, connect it when installing the rear No. 1 seat inner belt LH.

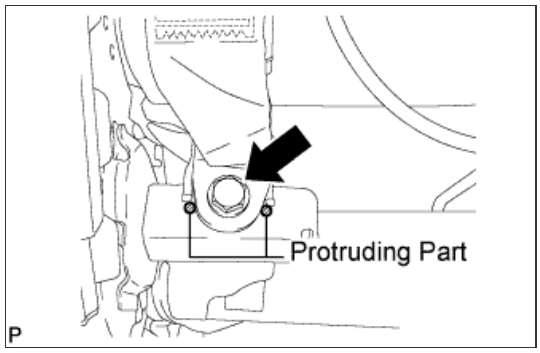

3. INSTALL REAR SEAT UNDER TRAY COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

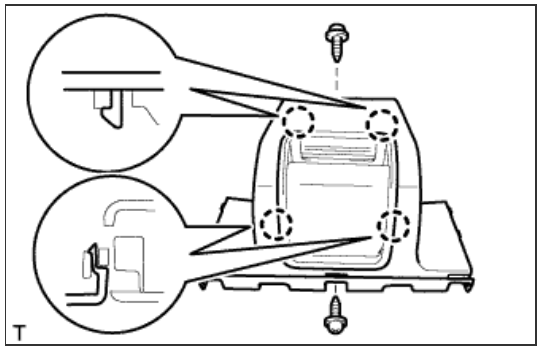

4. INSTALL REAR SEAT CUSHION COVER RH

a. Attach the 2 claws to install the cover.


b. Install the 4 screws.

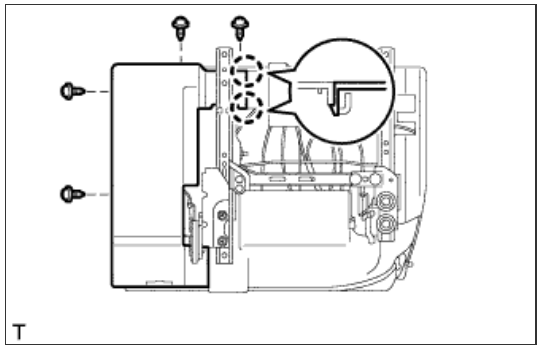


5. INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and 2 clips to install the cover.

b. Install the 5 screws.

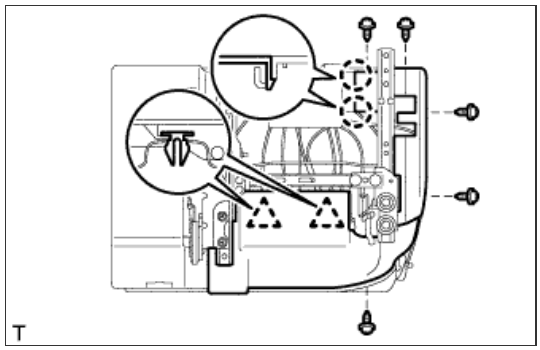


c. Attach the 10 claws.

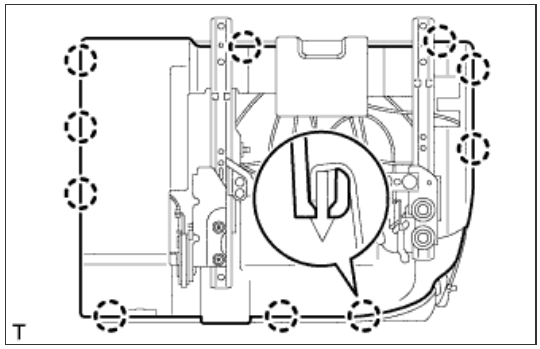

6. INSTALL REAR SEATBAC STAY COVER LH


a. Attach the 2 claws to install the cover.

b. Install the screw.

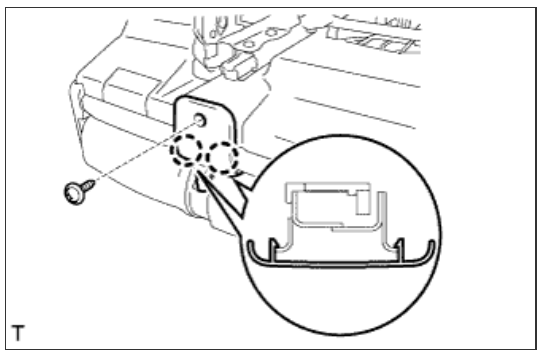


7. INSTALL SEAT BELT ANCHOR COVER CAP

a. Install the anchor cover cap with the screw.

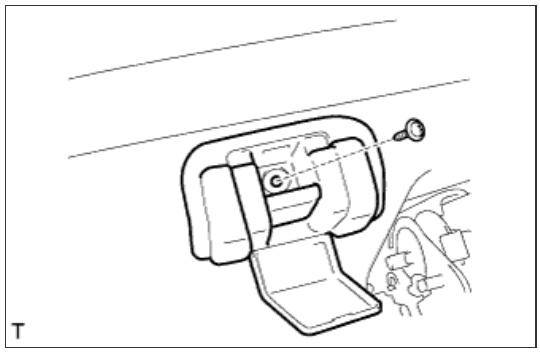


b. Attach the claw to close the cap.

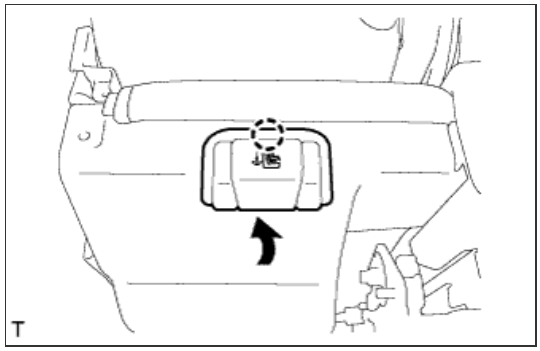

8. INSTALL REAR NO. 1 SEAT HIN E SUB-ASSEMBLY RH


a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

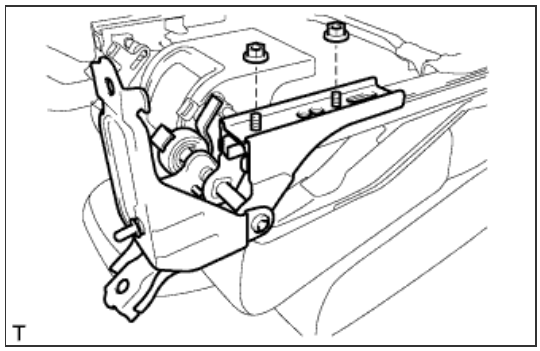

. INSTALL REAR NO. 1 SEAT HIN E SUB-ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

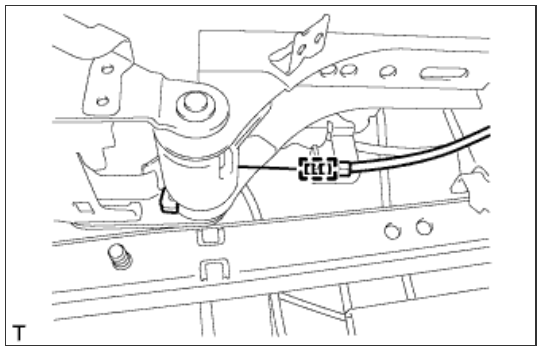


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.

d. w/ Seat Heater System:
Attach the wire harness clamp.

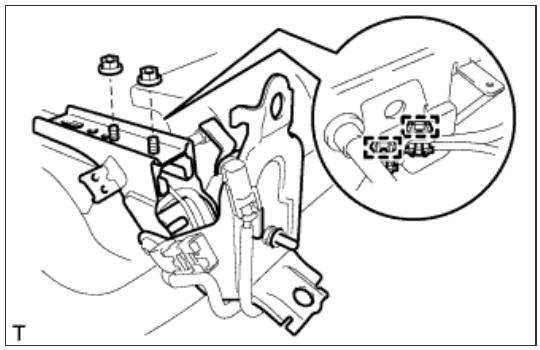


10. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

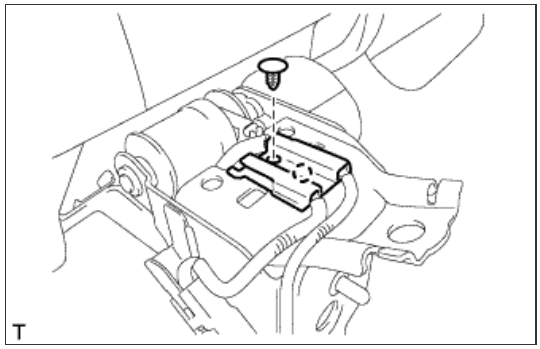


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

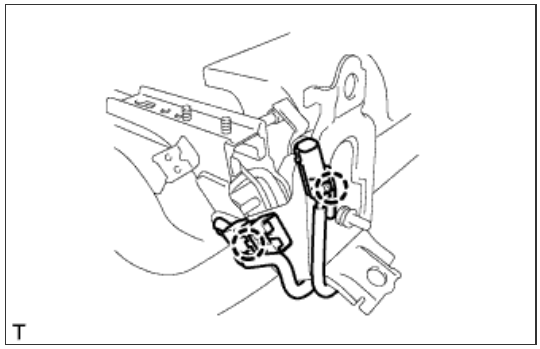


11. INSTALL REAR NO. 2 SEAT LE SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

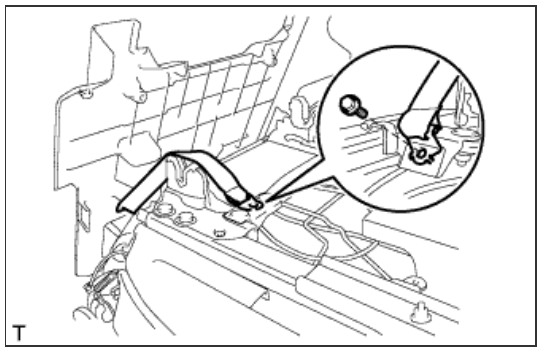


b. Attach the 4 claws to install the seat leg side cover.

c. Install the 4 screws.

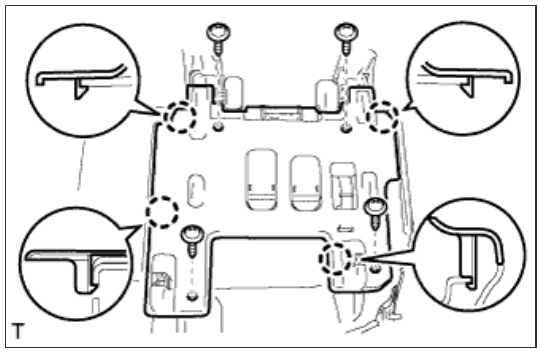


12. INSTALL UPPER SEAT TRAC RAIL COVER RH

a. Attach the 2 claws to install the cover.

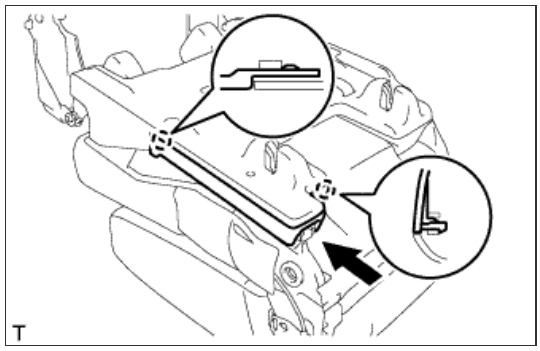

13. INSTALL UPPER SEAT TRAC RAIL COVER LH


a. Attach the 2 claws to install the cover.

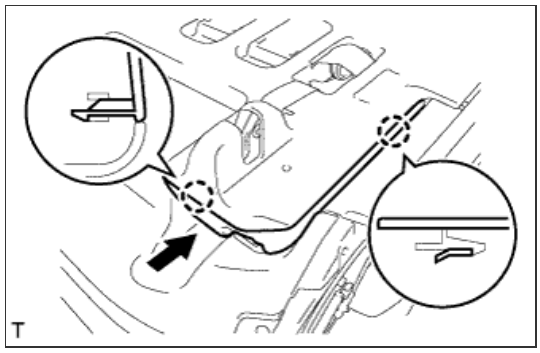

14. INSTALL REAR NO. 1 SEAT RECLININ COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

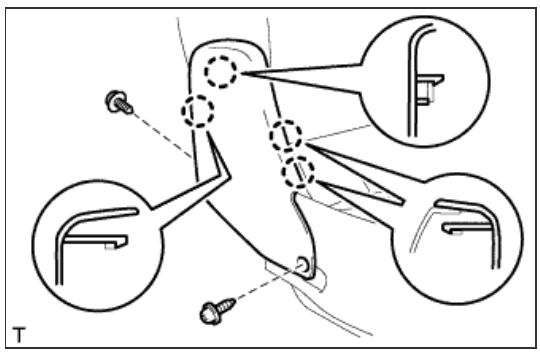

15. INSTALL REAR NO. 1 SEAT RECLININ COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

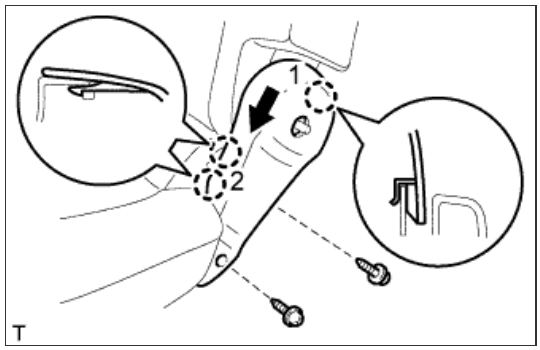


16. INSTALL RECLININ AD USTER RELEASE HANDLE LH

a. Install the release handle with the screw.

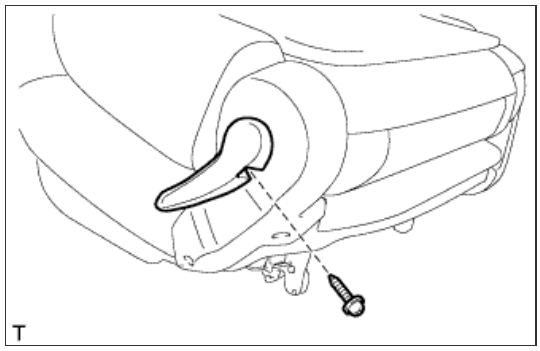

17. INSTALL SEAT AD USTER BOLT COVER


a. Attach the 2 claws to install the cover.

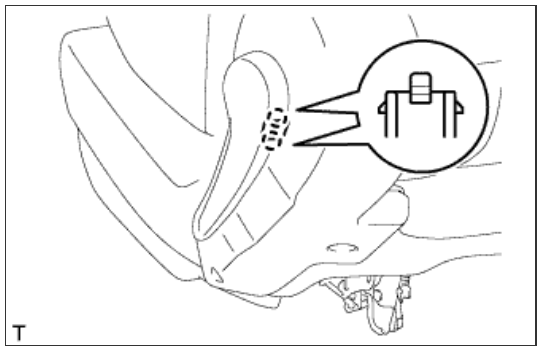


18. INSTALL REAR NO. 1 SEAT ASSEMBLY LH


a. Install the rear No. 1 seat assembly (Click here).

for Preparation Click here

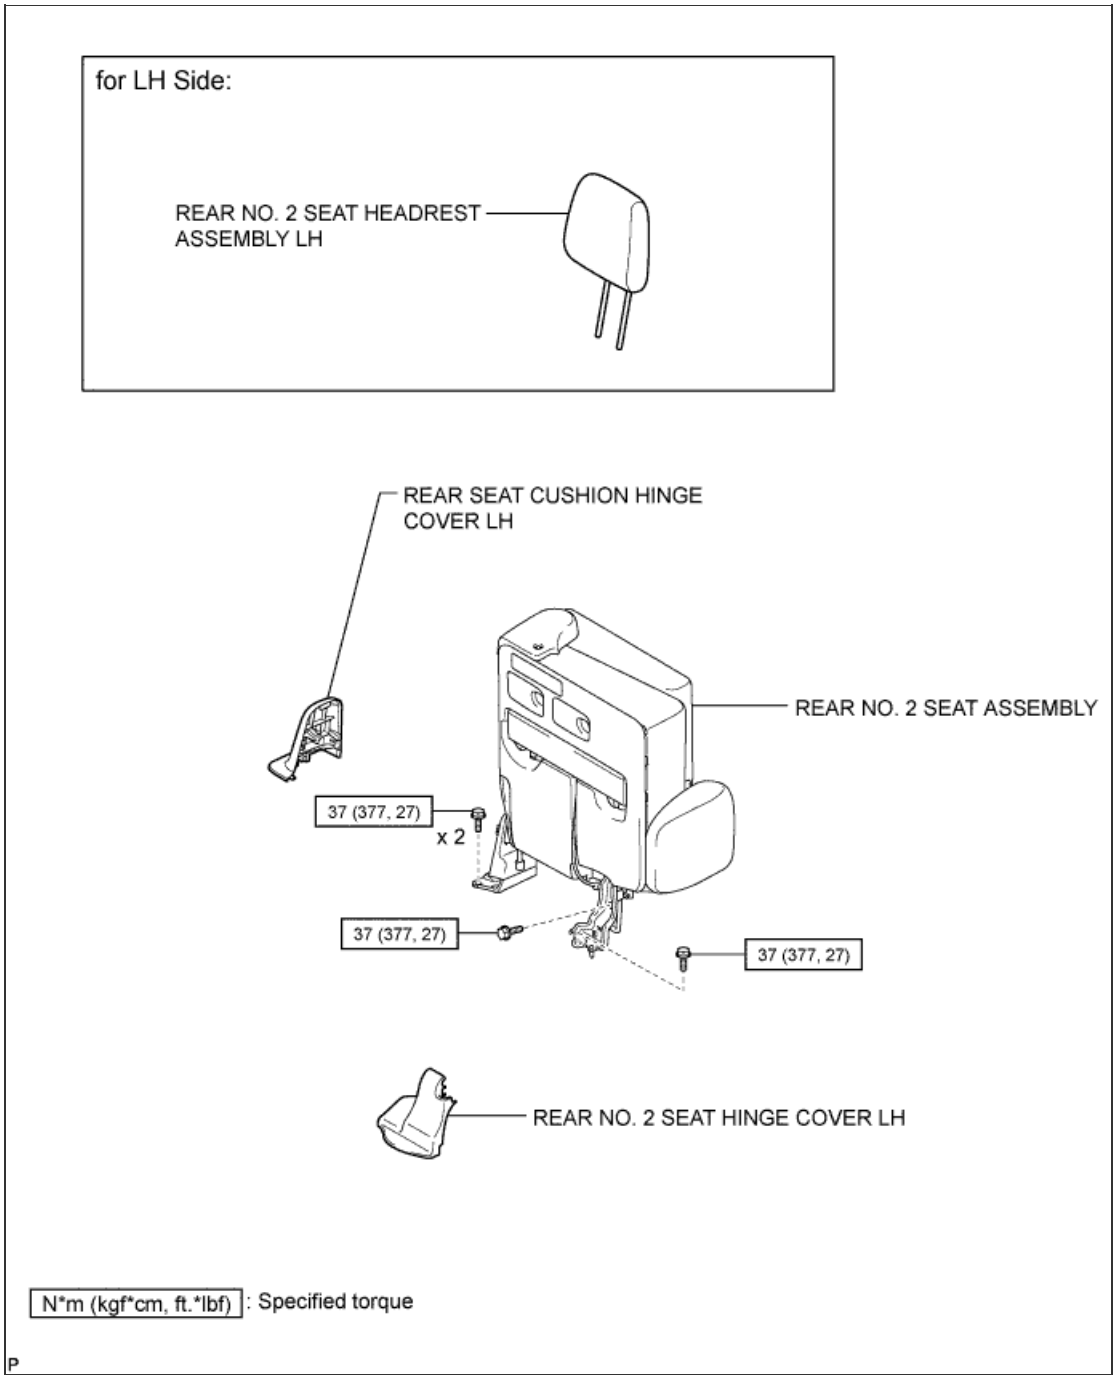

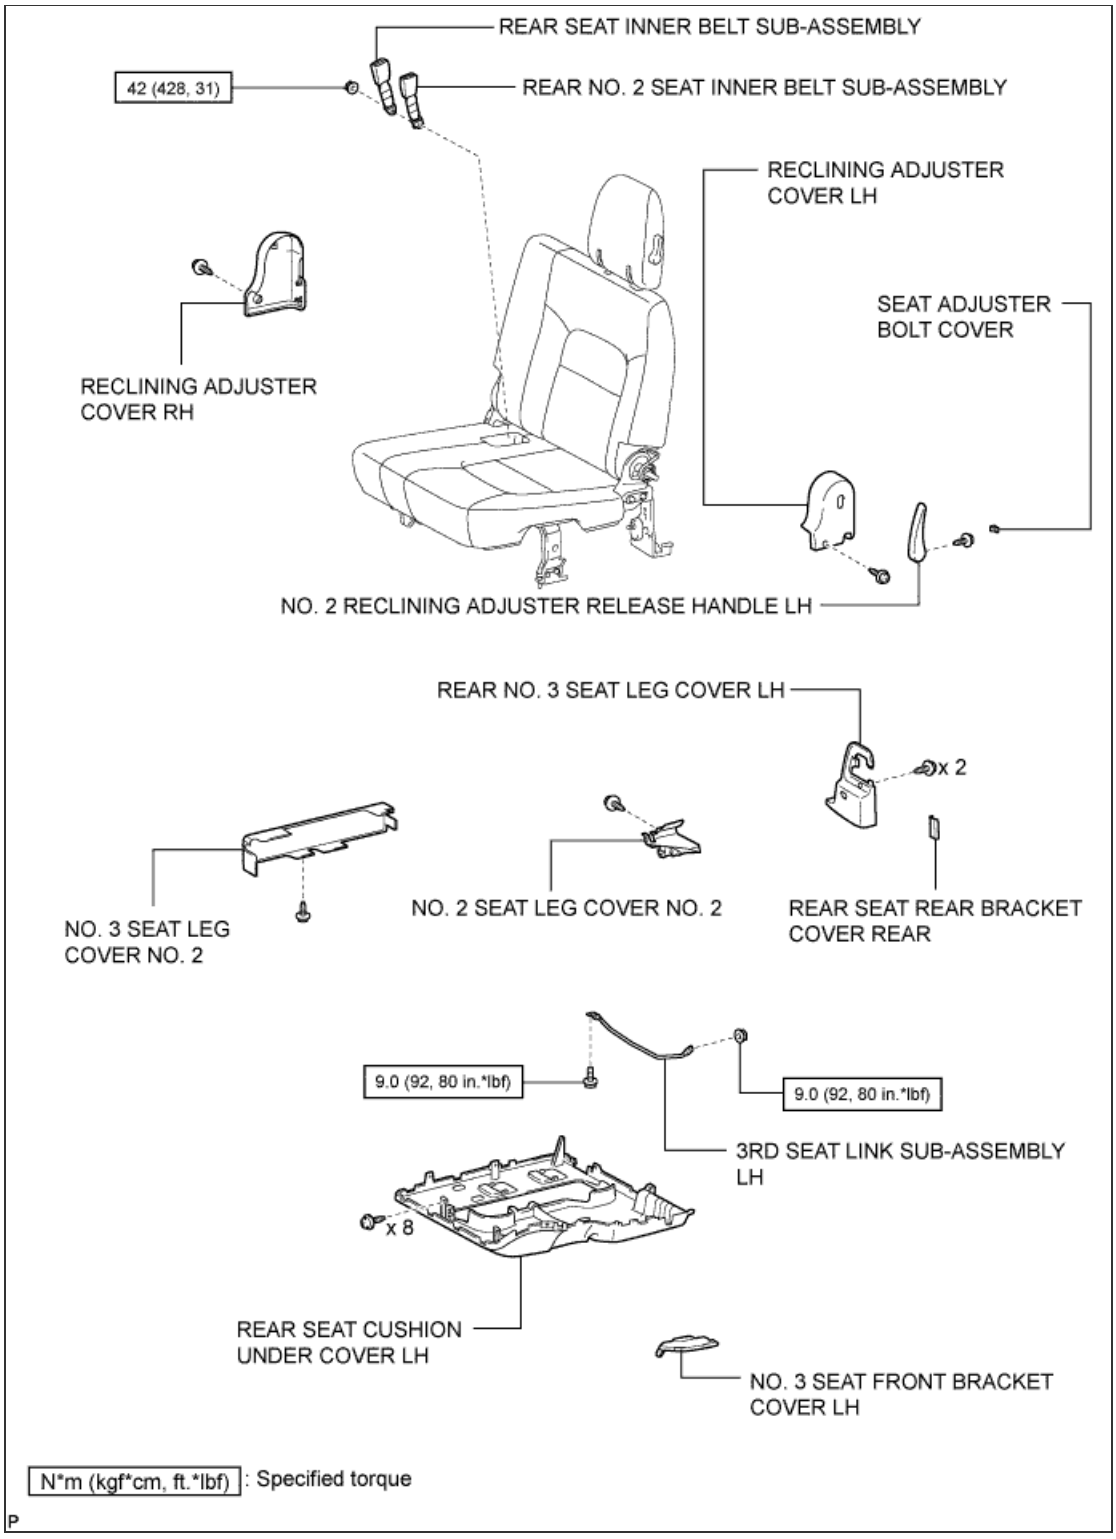
REAR SEAT INNER BELT SUB-ASSEMBLY
42 (428, 31)
REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY
RECLINING ADJUSTER COVER LH
SEAT ADJUSTER BOLT COVER
RECLINING ADJUSTER COVER RH
NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH
REAR NO. 3 SEAT LEG COVER LH
x 2
NO. 3 SEAT LEG COVER NO. 2
NO. 2 SEAT LEG COVER NO. 2
REAR SEAT REAR BRACKET COVER REAR
9.0 (92, 80 in.*lbf)
9.0 (92, 80 in.*lbf)
3RD SEAT LINK SUB-ASSEMBLY LH
x 8
REAR SEAT CUSHION UNDER COVER LH
NO. 3 SEAT FRONT BRACKET COVER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
P

for RH Side:

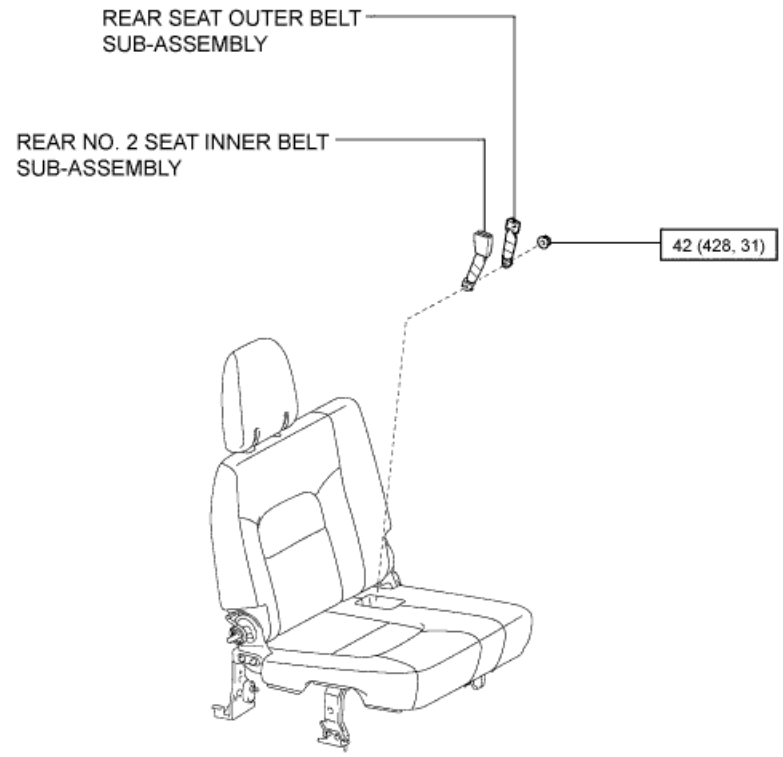

N*m (kgf*cm, ft.*lbf) : Specified torque

P

for Preparation Click here

HINT:

- **Use the same procedures for the RH side and LH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH


a. Remove the rear No. 2 seat assembly LH (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

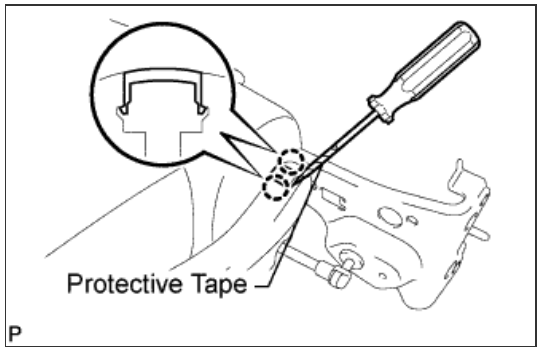

3. REMOVE NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

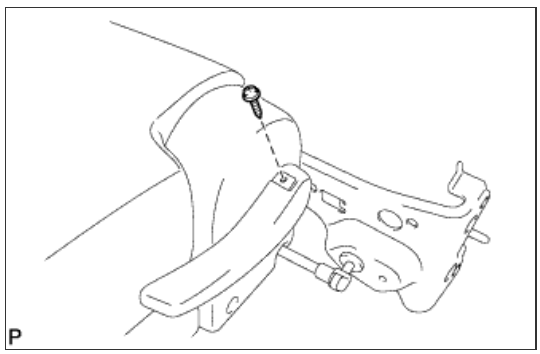

4. REMOVE RECLINING ADJUSTER COVER LH

a. Remove the screw.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

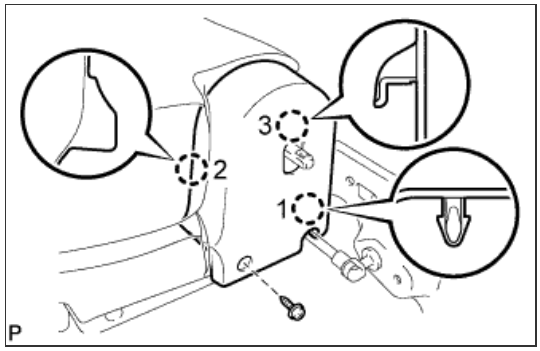

5. REMOVE RECLINING ADJUSTER COVER RH

a. Remove the screw.

b. Detach the 5 claws in the order shown in the illustration, and then remove the cover.

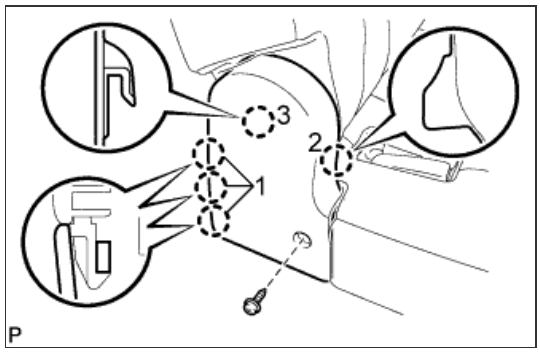


6. REMOVE REAR SEAT REAR BRACKET COVER REAR

a. Detach the 2 claws and cover.


7. REMOVE REAR NO. 3 SEAT LEG COVER LH

a. Using a screwdriver, remove the spring of the seat stay ball-joint.

b. Disconnect the seat stay.

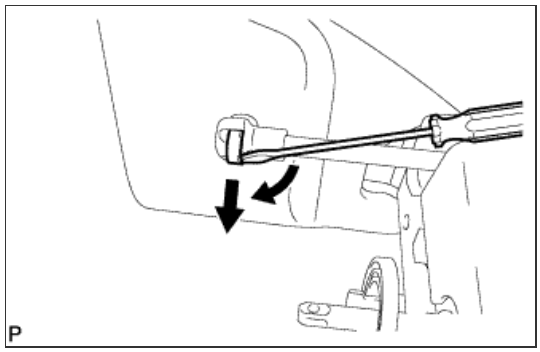


c. Remove the 2 screws and cover.

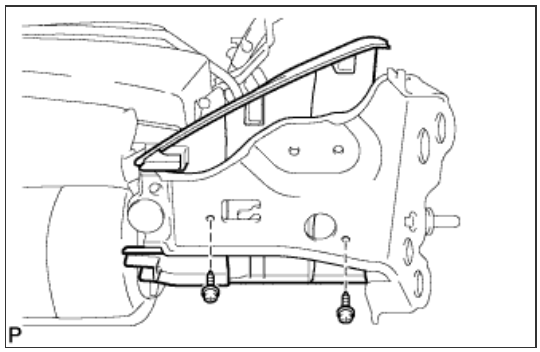


8. REMOVE NO. 2 SEAT LEG COVER NO. 2

a. Remove the screw and seat leg cover.

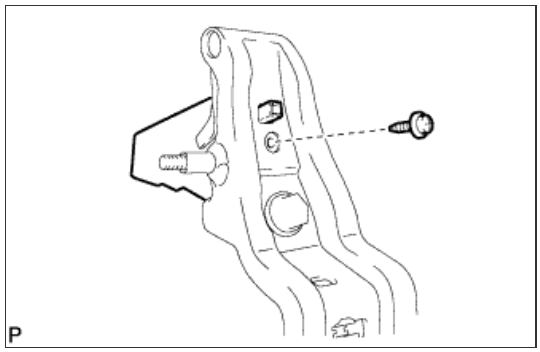


9. REMOVE 3RD SEAT LINK SUB-ASSEMBLY LH

a. Remove the bolt, nut and seat link.

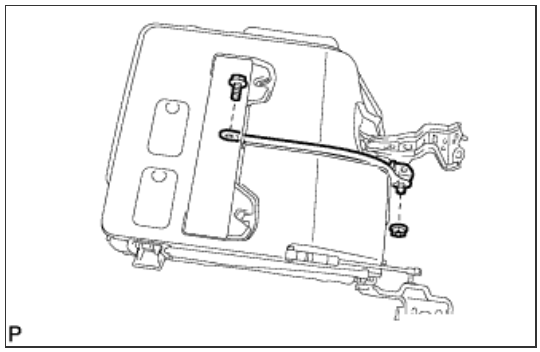


10. REMOVE REAR SEAT CUSHION UNDER COVER LH

a. Detach the 16 claws.

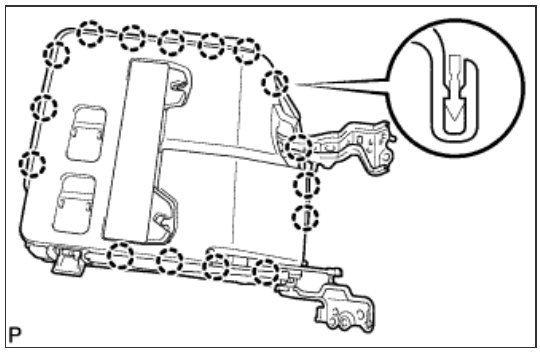


b. Remove the screws and cover.

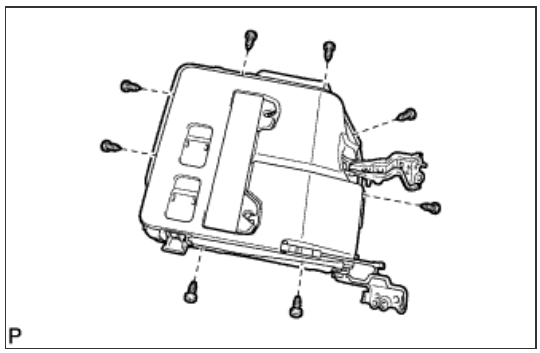

11. REMOVE NO. 3 SEAT FRONT BRACKET COVER LH


a. Detach the 4 claws and remove the cover.

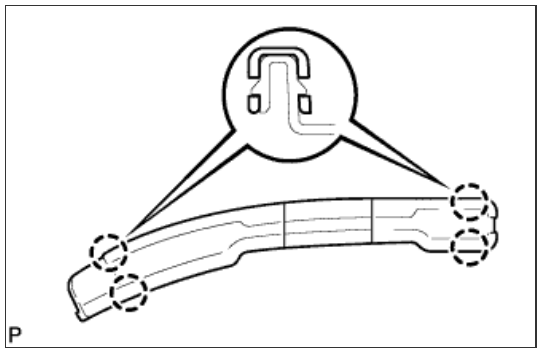

12. REMOVE NO. 3 SEAT LEG COVER NO. 2

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

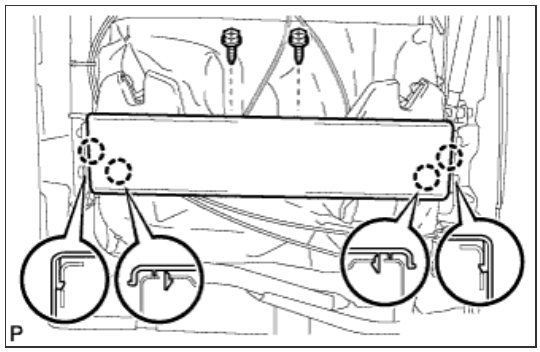


13. REMOVE REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Remove the nut and belt.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, it becomes disconnected when the nut is removed.

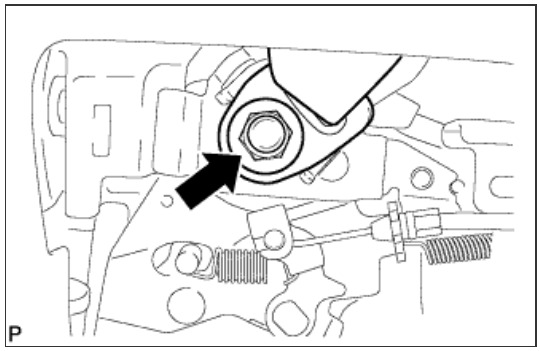


14. REMOVE REAR SEAT OUTER BELT SUB-ASSEMBLY (for RH Side)


a. Remove the nut and belt.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, it becomes disconnected when the nut is removed.

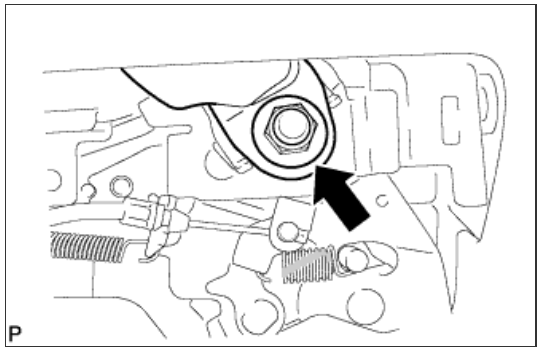

15. REMOVE REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

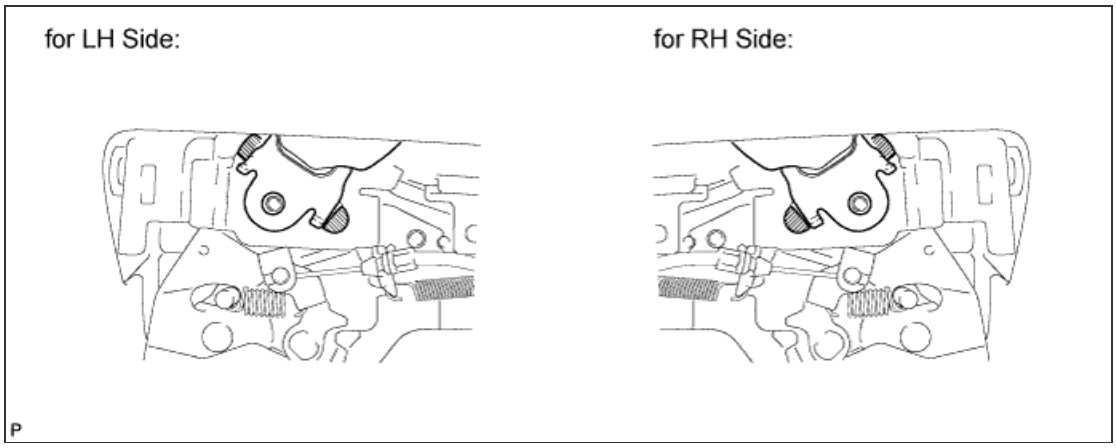

a. Remove the 2 belts.

for Preparation Click here

HINT:

- **Use the same procedures for the RH side and LH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH

a. Remove the rear No. 2 seat assembly LH (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER


a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

*1	Protective Tape

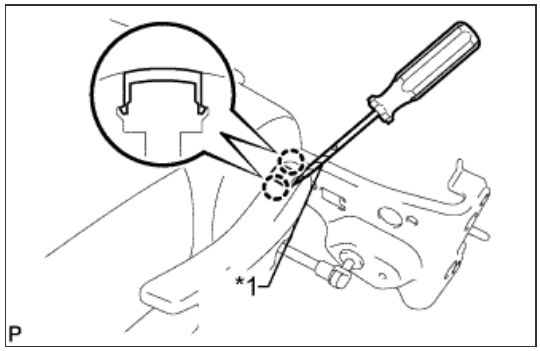

3. REMOVE NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

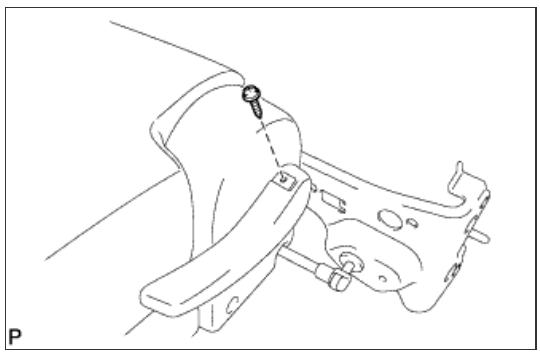

4. REMOVE RECLINING ADJUSTER COVER LH

a. Remove the screw.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

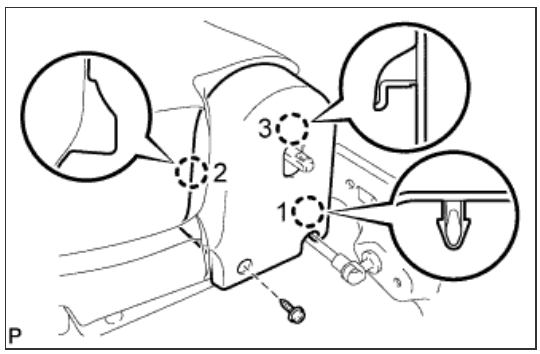

5. REMOVE RECLINING ADJUSTER COVER RH

a. Remove the screw.

b. Detach the 5 claws in the order shown in the illustration, and then remove the cover.

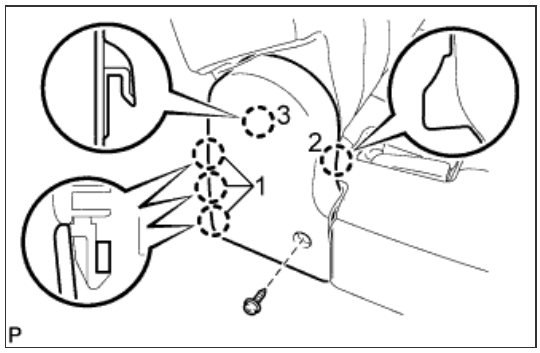


6. REMOVE REAR SEAT REAR BRACKET COVER REAR

a. Detach the 2 claws and cover.


7. REMOVE REAR NO. 3 SEAT LEG COVER LH

a. Using a screwdriver, remove the spring of the seat stay ball-joint.

b. Disconnect the seat stay.

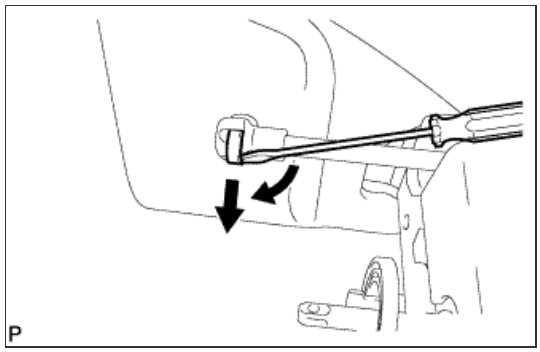


c. Remove the 2 screws and cover.

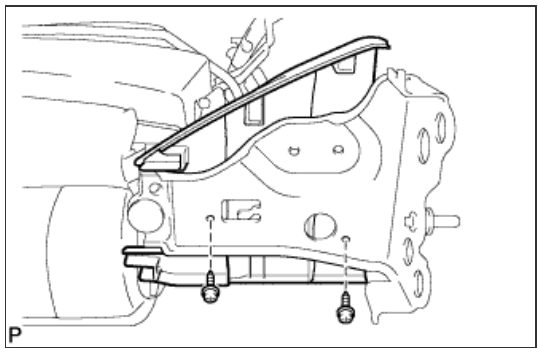


8. REMOVE NO. 2 SEAT LEG COVER NO. 2

a. Remove the screw and seat leg cover.

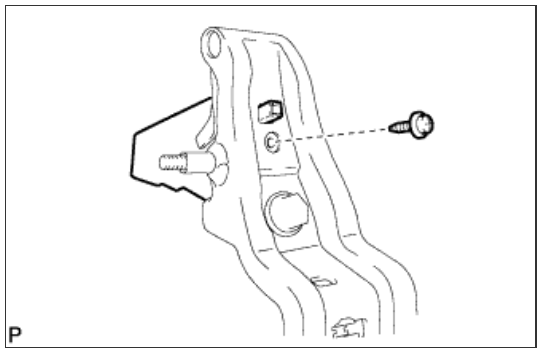


9. REMOVE 3RD SEAT LINK SUB-ASSEMBLY LH

a. Remove the bolt, nut and seat link.

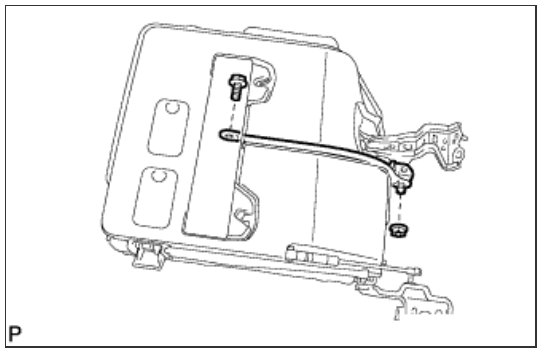


10. REMOVE REAR SEAT CUSHION UNDER COVER LH

a. Detach the 1 claws.

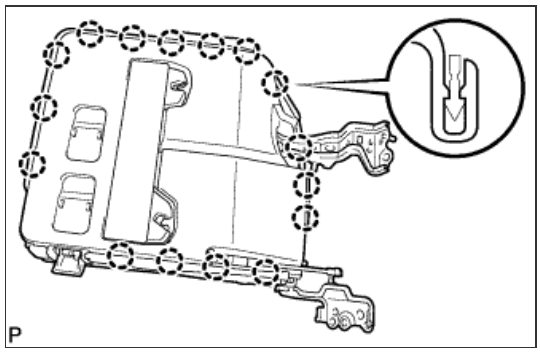


b. Remove the 8 screws and cover.

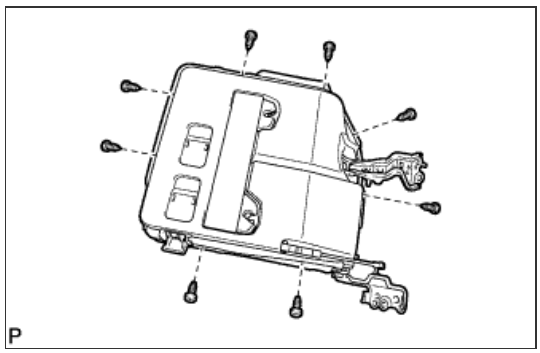

11. REMOVE NO. 3 SEAT FRONT BRACKET COVER LH


a. Detach the 4 claws and remove the cover.

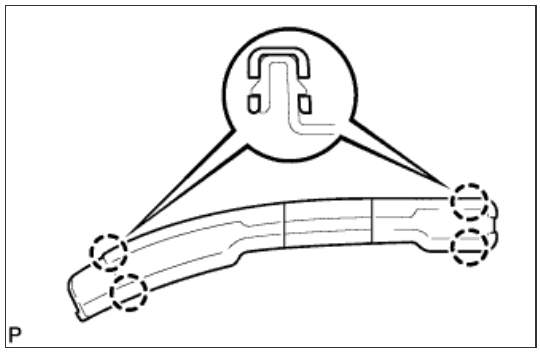

12. REMOVE NO. 3 SEAT LEG COVER NO. 2

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

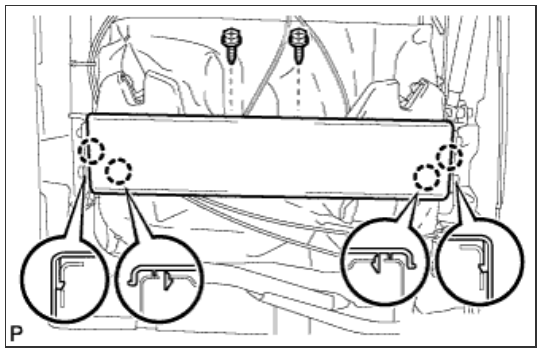


13. REMOVE REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Remove the nut and belt.

HINT:

The rear No. 2 seat inner belt is fi ed with the same nut as the rear seat inner belt. Therefore, it becomes disconnected when the nut is removed.

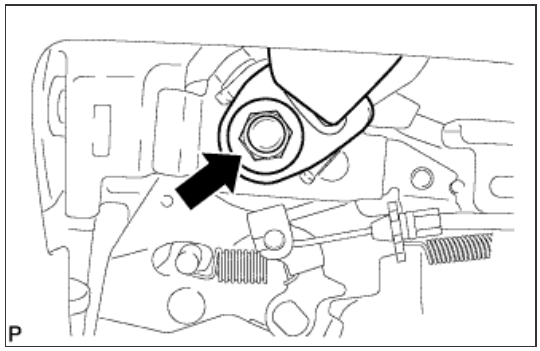


14. REMOVE REAR SEAT OUTER BELT SUB-ASSEMBLY (for RH Side)


a. Remove the nut and belt.

HINT:

The rear No. 2 seat inner belt is fi ed with the same nut as the rear seat outer belt. Therefore, it becomes disconnected when the nut is removed.

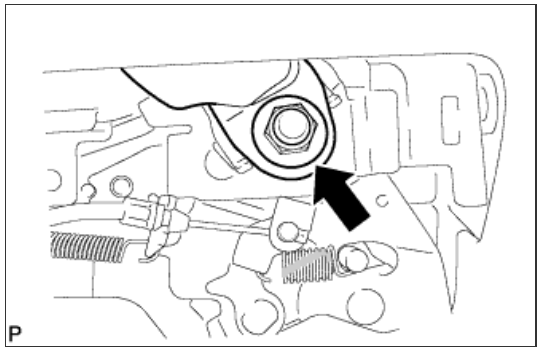

15. REMOVE REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

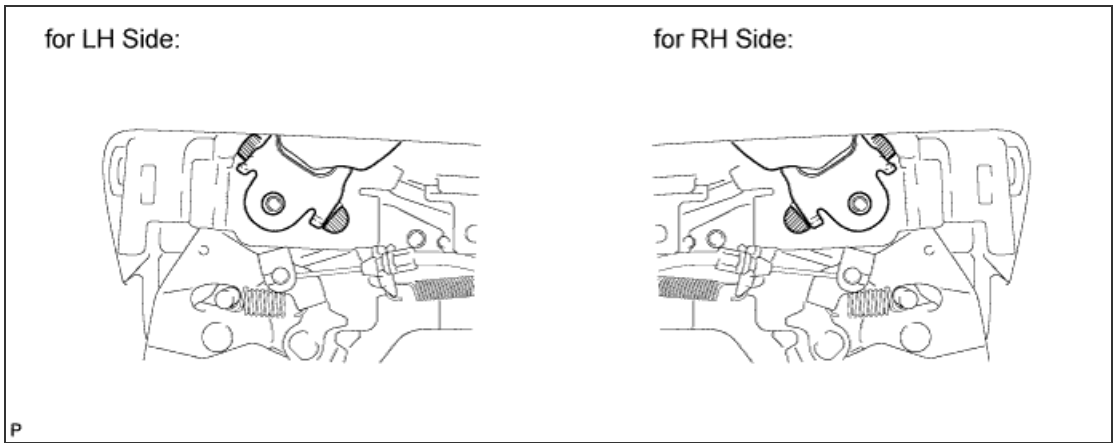

a. Remove the 2 belts.

for Preparation Click here

HINT:

- **Use the same procedures for the RH side and LH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH

a. Remove the rear No. 2 seat assembly LH (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER


a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

*1	Protective Tape

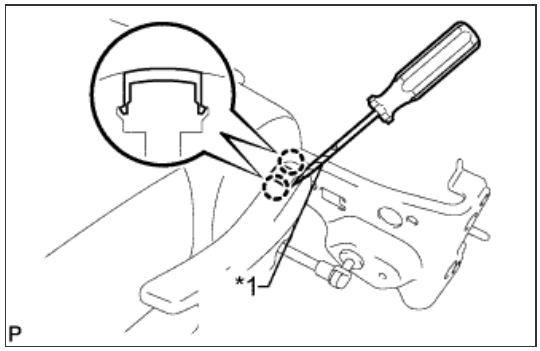

3. REMOVE NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

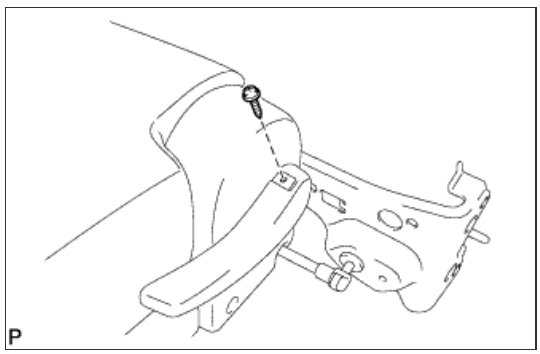

4. REMOVE RECLINING ADJUSTER COVER LH

a. Remove the screw.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

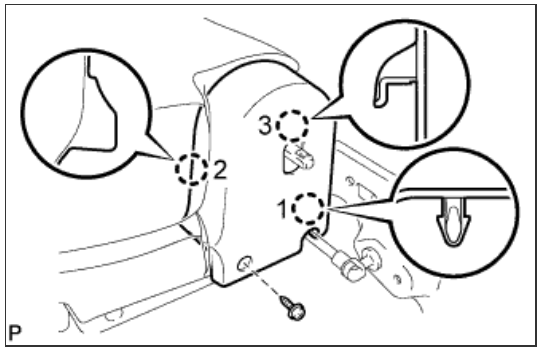

5. REMOVE RECLINING ADJUSTER COVER RH

a. Remove the screw.

b. Detach the 5 claws in the order shown in the illustration, and then remove the cover.

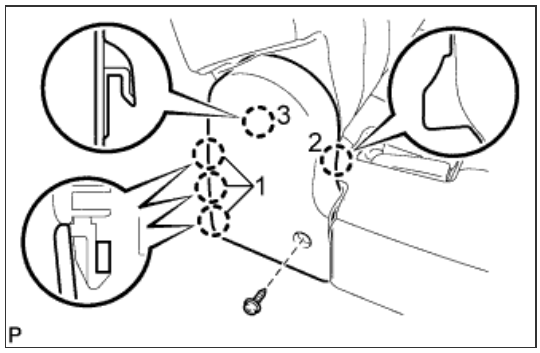


6. REMOVE REAR SEAT REAR BRACKET COVER REAR

a. Detach the 2 claws and cover.


7. REMOVE REAR NO. 3 SEAT LEG COVER LH

a. Using a screwdriver, remove the spring of the seat stay ball- oint.

b. Disconnect the seat stay.

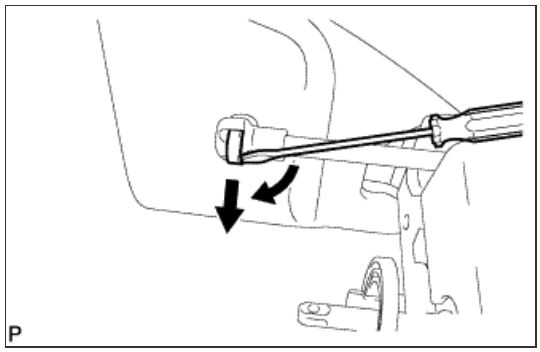


c. Remove the 2 screws and cover.

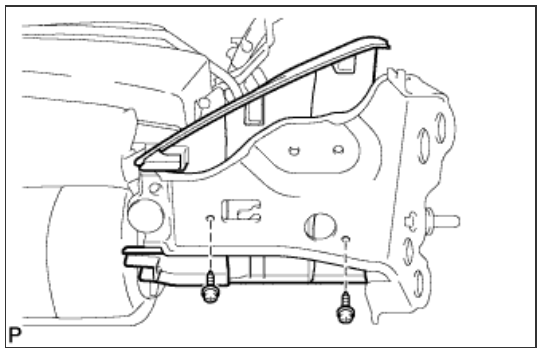


8. REMOVE NO. 2 SEAT LEG COVER NO. 2

a. Remove the screw and seat leg cover.

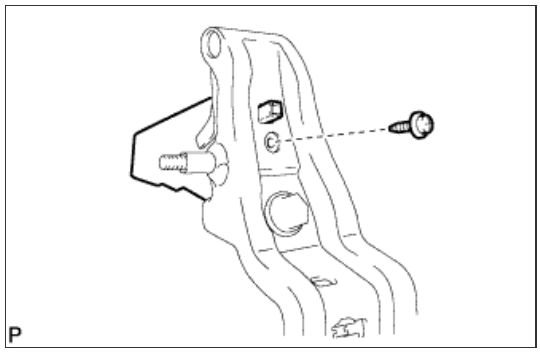


9. REMOVE 3RD SEAT LINK SUB-ASSEMBLY LH

a. Remove the bolt, nut and seat link.

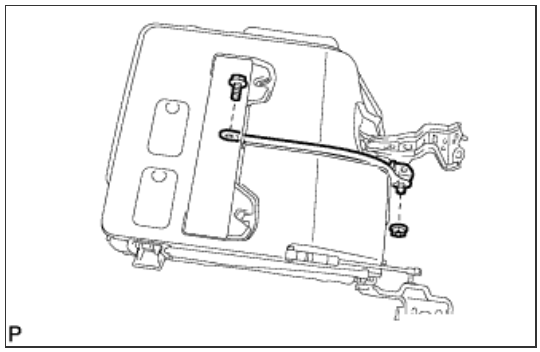


10. REMOVE REAR SEAT CUSHION UNDER COVER LH

a. Detach the 1 claws.

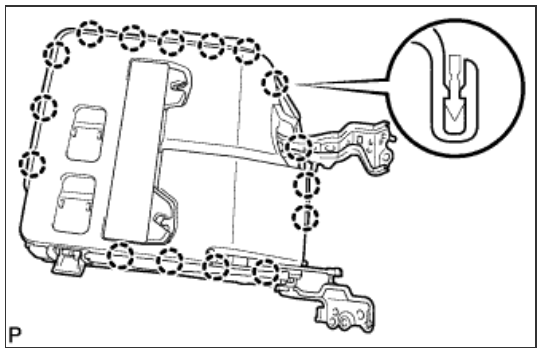


b. Remove the 7 screws and cover.

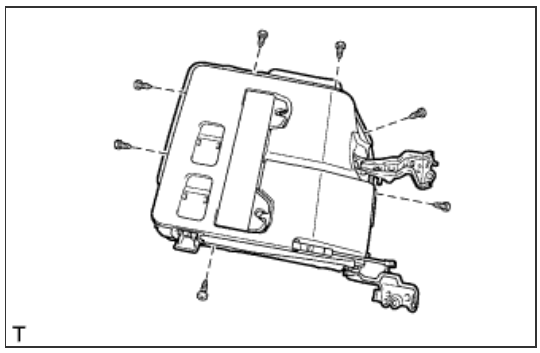

11. REMOVE NO. 3 SEAT FRONT BRACKET COVER LH


a. Detach the 4 claws and remove the cover.

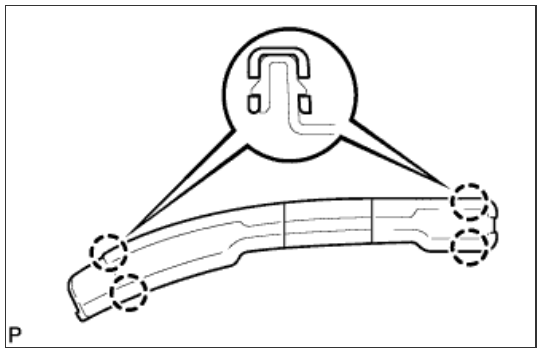

12. REMOVE NO. 3 SEAT LEG COVER NO. 2

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

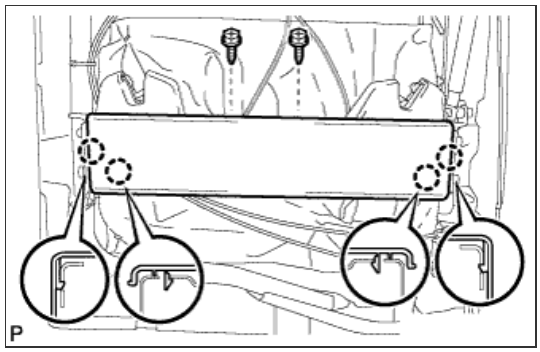


13. REMOVE REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Remove the nut and belt.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, it becomes disconnected when the nut is removed.

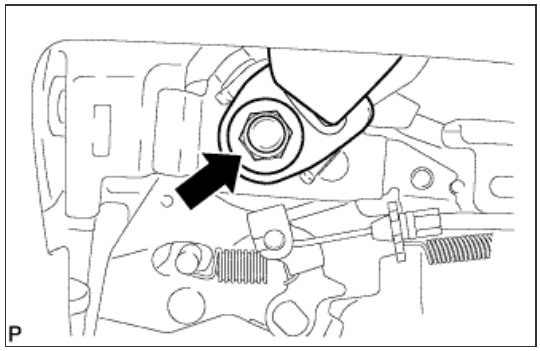


14. REMOVE REAR SEAT OUTER BELT SUB-ASSEMBLY (for RH Side)


a. Remove the nut and belt.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, it becomes disconnected when the nut is removed.

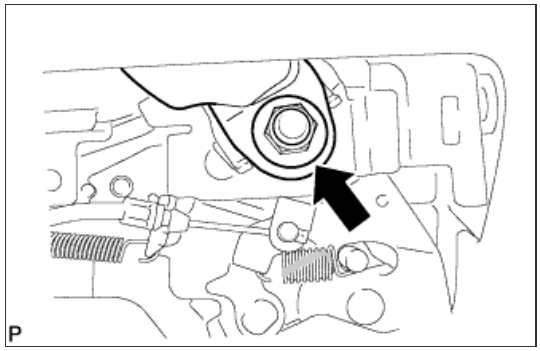

15. REMOVE REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

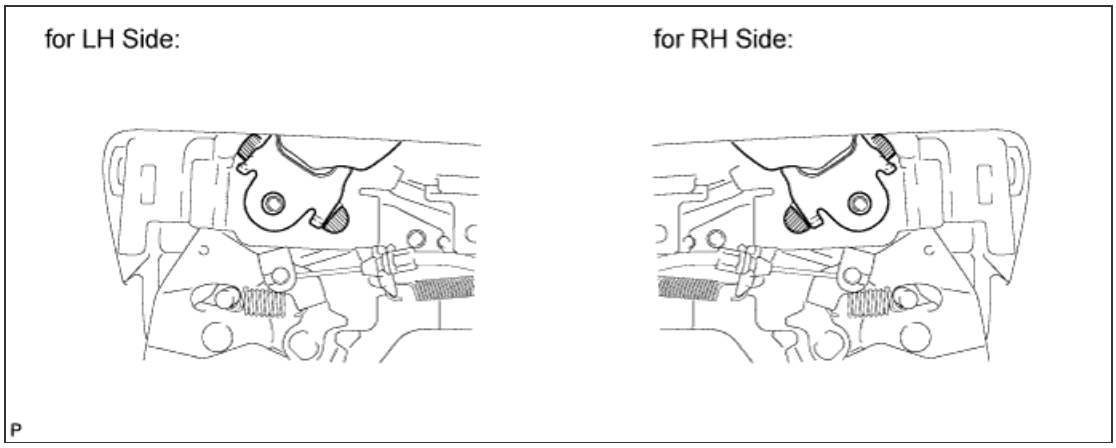


a. Remove the 2 belts.

for Preparation Click here

1. INSTALL REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Install the 2 belts.

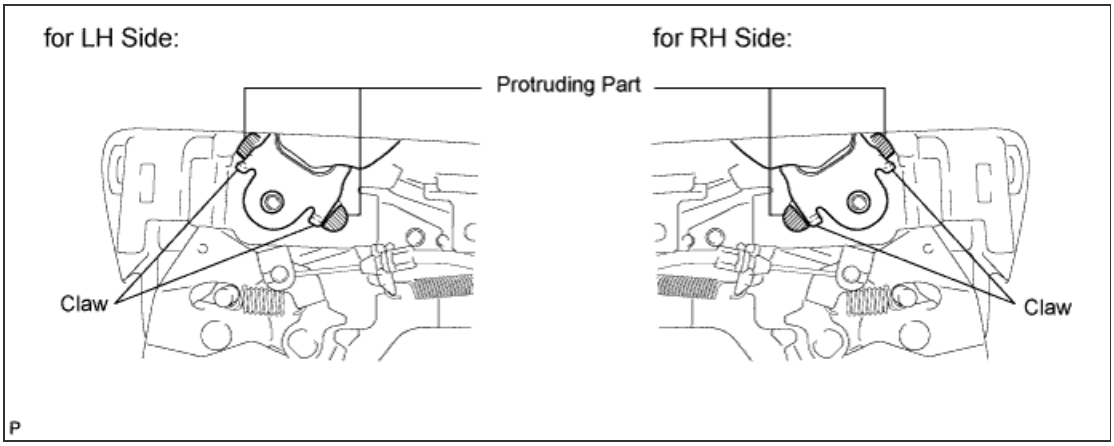

NOTICE:

- **Make sure the claws are facing away from the seat.**
- **Do not overlap the anchor part of the seat belt and protruding parts of the seat.**

2. INSTALL REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, connect it when installing the rear seat inner belt.

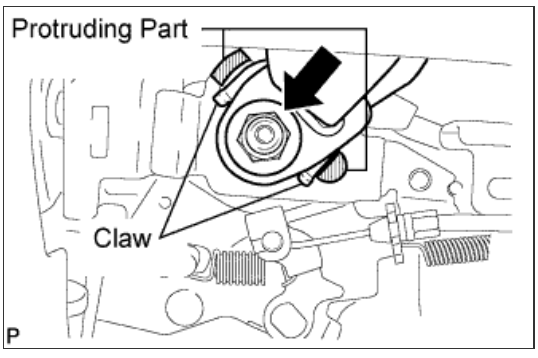

3. INSTALL REAR SEAT OUTER BELT SUB-ASSEMBLY (for RH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:


The rear No. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, connect it when installing the rear seat outer belt.

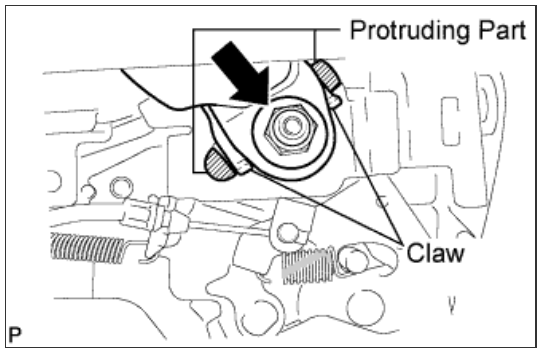

4. INSTALL NO. 3 SEAT LEG COVER NO. 2


a. Attach the 4 claws to install the cover.

b. Install the 2 screws.

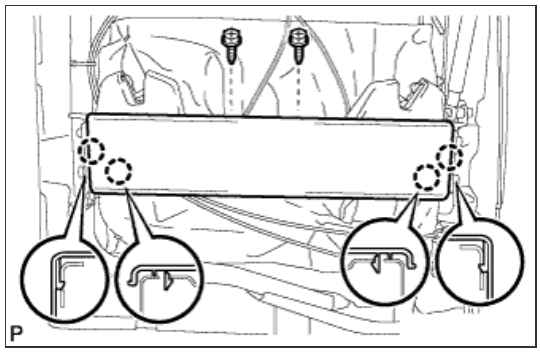


5. INSTALL NO. 3 SEAT FRONT BRACKET COVER LH

a. Attach the 4 claws to install the cover.

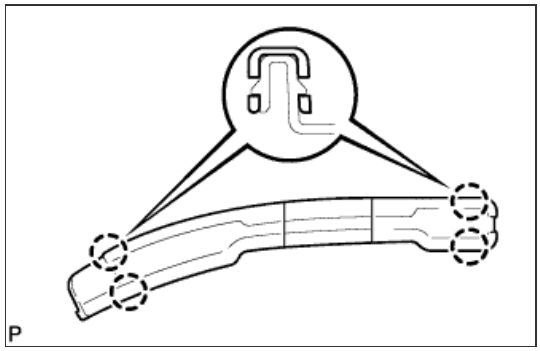


6. INSTALL REAR SEAT CUSHION UNDER COVER LH

a. Install the cover with the 8 screws.

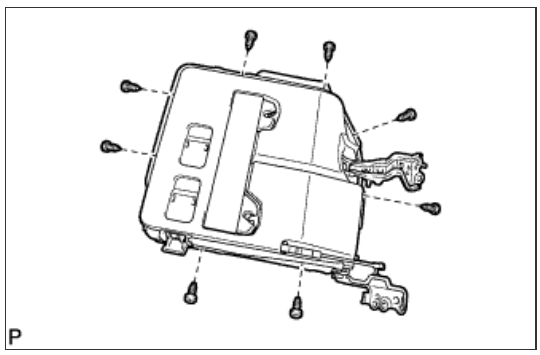


b. Attach the 16 claws.

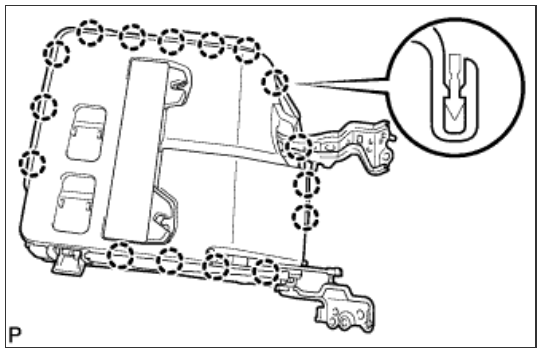

7. INSTALL 3RD SEAT LIN SUB-ASSEMBLY LH


a. Install the seat link with the bolt and nut.

Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

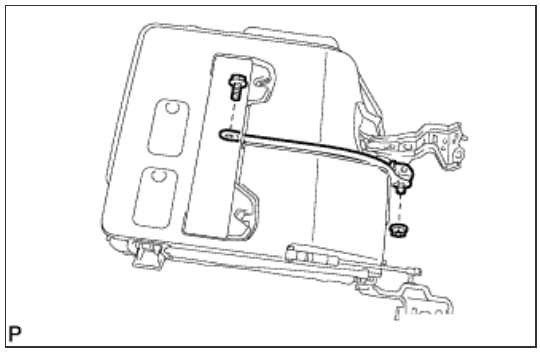


8. INSTALL NO. 2 SEAT LEG COVER NO. 2

a. Install the seat leg cover with the screw.

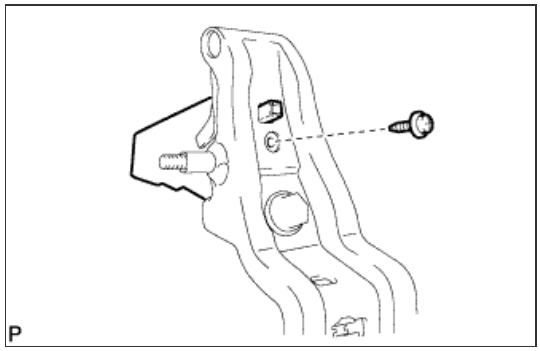


9. INSTALL REAR NO. 3 SEAT LEG COVER LH

a. Install the seat leg cover with the 2 screws.

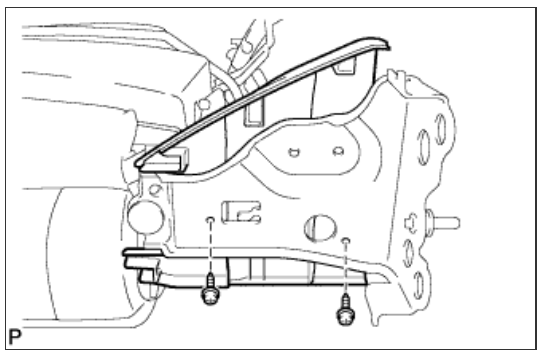

b. Install the spring of the seat stay ball-joint.

c. Connect the seat stay to the seat frame.

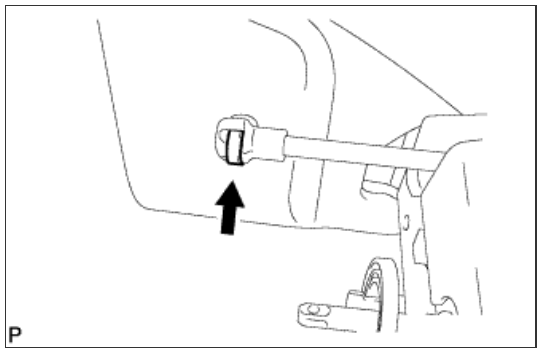


10. INSTALL REAR SEAT REAR BRACKET COVER REAR

a. Attach the 2 claws to install the cover.

11. INSTALL RECLINING ADJUSTER COVER RH

a. Attach the 5 claws in the order shown in the illustration to install the cover.


b. Install the screw.

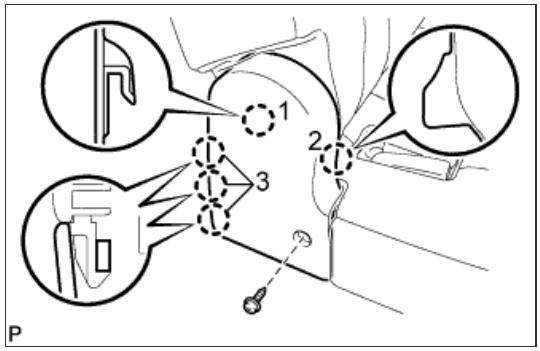

12. INSTALL RECLINING ADJUSTER COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the screw.

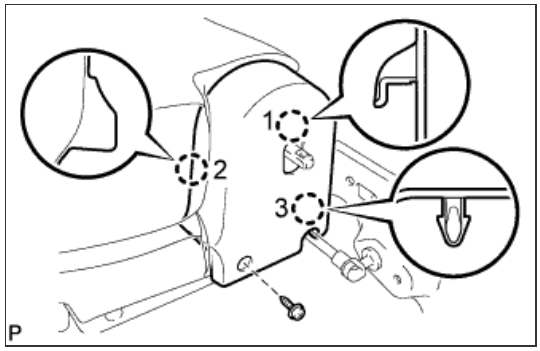


13. INSTALL NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

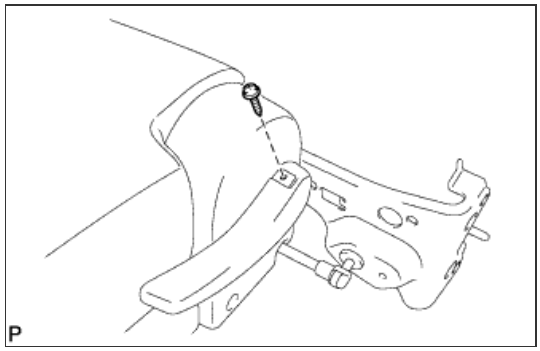

14. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

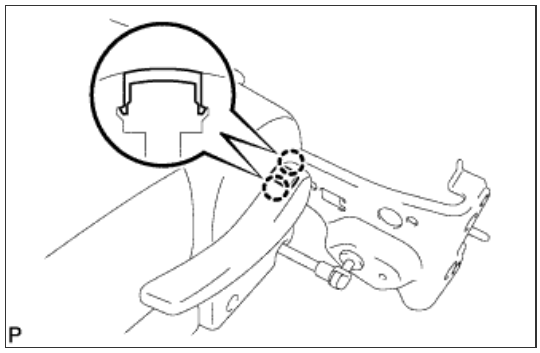


15. INSTALL REAR NO. 2 SEAT ASSEMBLY (for LH Side)

a. Install the rear No. 2 seat assembly (Click here).

for Preparation Click here

1. INSTALL REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Install the 2 belts.

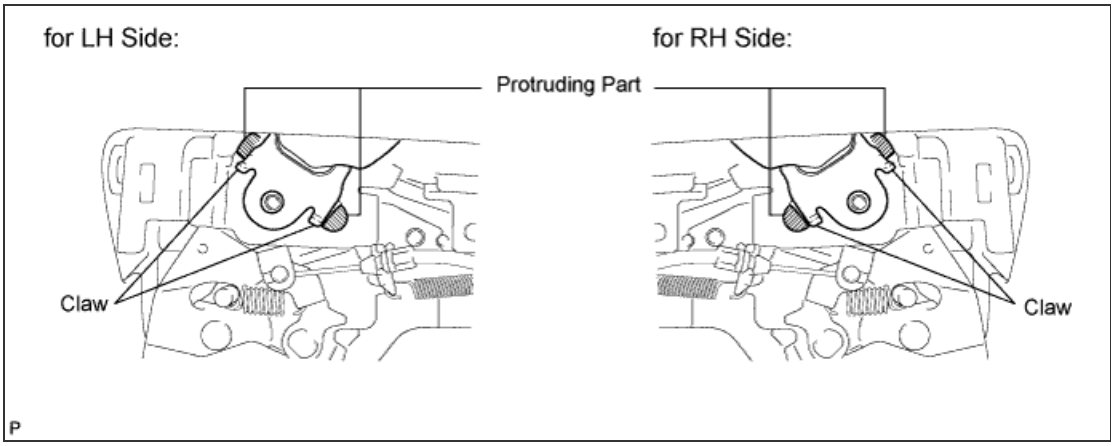

NOTICE:

- **Make sure the claws are facing away from the seat.**
- **Do not overlap the anchor part of the seat belt and protruding parts of the seat.**

2. INSTALL REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, connect it when installing the rear seat inner belt.

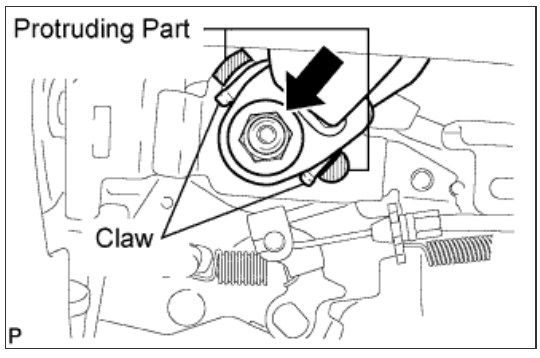

3. INSTALL REAR SEAT OUTER BELT SUB-ASSEMBLY (for RH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:


The rear No. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, connect it when installing the rear seat outer belt.

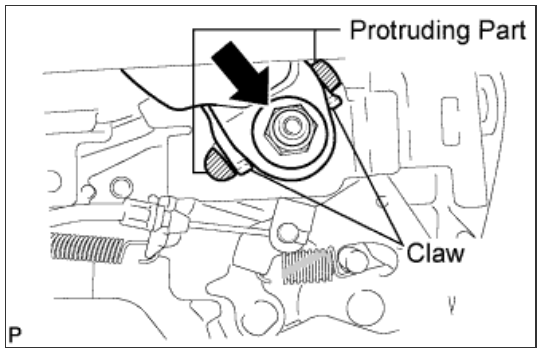

4. INSTALL NO. 3 SEAT LEG COVER NO. 2


a. Attach the 4 claws to install the cover.

b. Install the 2 screws.

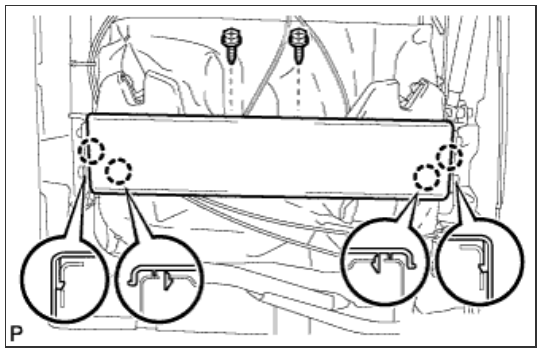


5. INSTALL NO. 3 SEAT FRONT BRACKET COVER LH

a. Attach the 4 claws to install the cover.

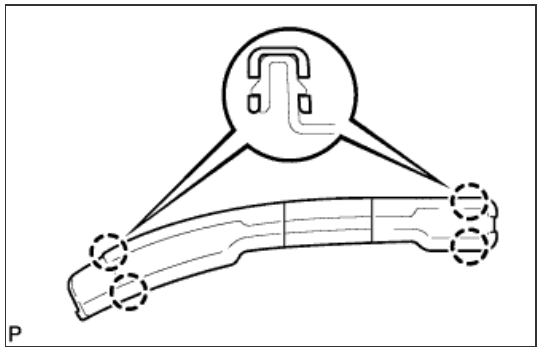


6. INSTALL REAR SEAT CUSHION UNDER COVER LH

a. Install the cover with the 8 screws.

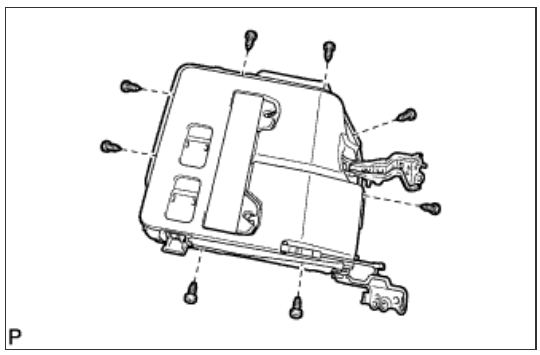


b. Attach the 16 claws.

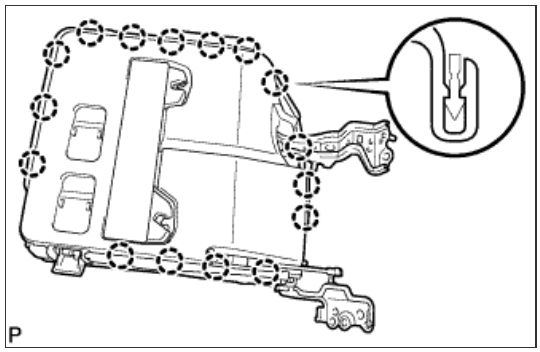

7. INSTALL 3RD SEAT LIN SUB-ASSEMBLY LH


a. Install the seat link with the bolt and nut.

Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

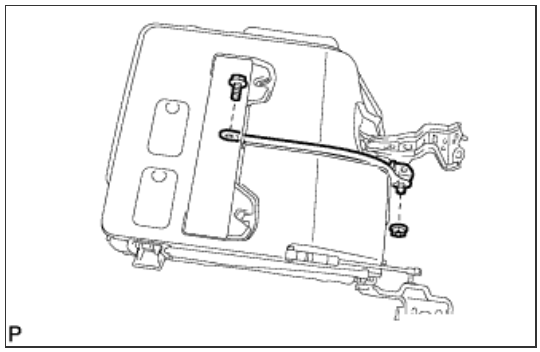


8. INSTALL NO. 2 SEAT LEG COVER NO. 2

a. Install the seat leg cover with the screw.

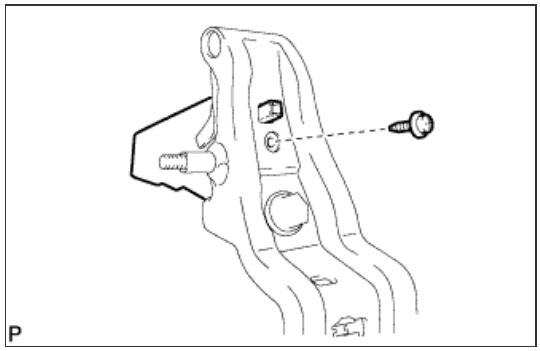


9. INSTALL REAR NO. 3 SEAT LEG COVER LH

a. Install the seat leg cover with the 2 screws.

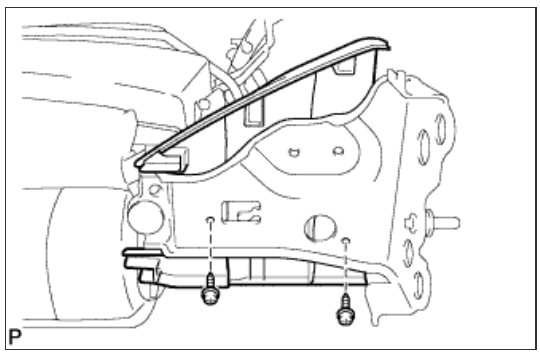

b. Install the spring of the seat stay ball-joint.

c. Connect the seat stay to the seat frame.

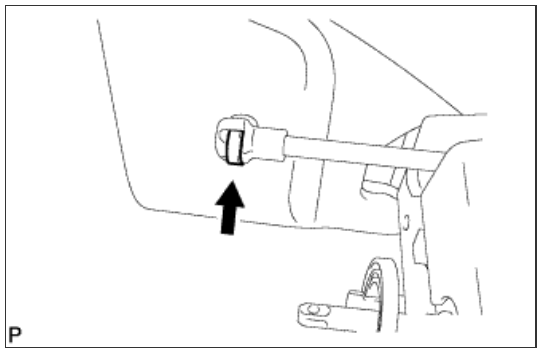


10. INSTALL REAR SEAT REAR BRACKET COVER REAR

a. Attach the 2 claws to install the cover.

11. INSTALL RECLINING ADJUSTER COVER RH

a. Attach the 5 claws in the order shown in the illustration to install the cover.


b. Install the screw.

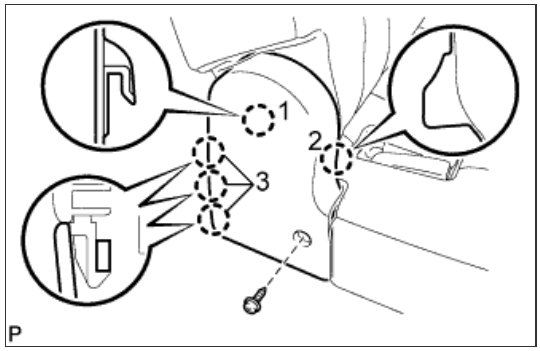

12. INSTALL RECLINING ADJUSTER COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the screw.

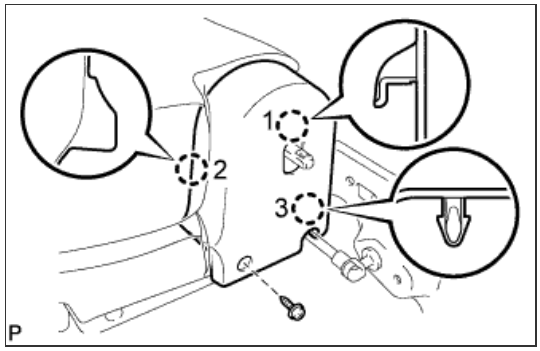


13. INSTALL NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

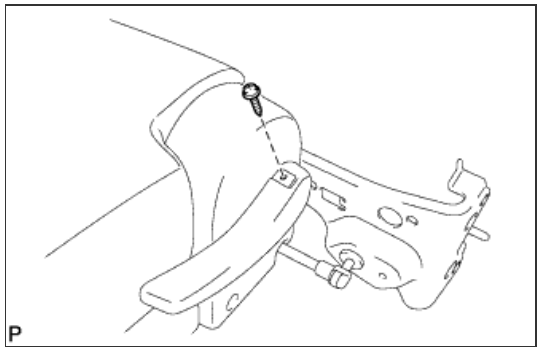

14. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

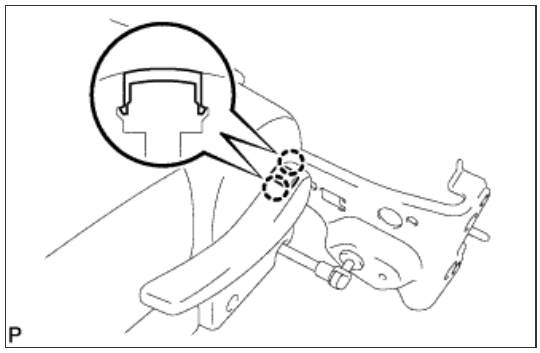


15. INSTALL REAR NO. 2 SEAT ASSEMBLY (for LH Side)

a. Install the rear No. 2 seat assembly (Click here).

for Preparation Click here

1. INSTALL REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Install the 2 belts.

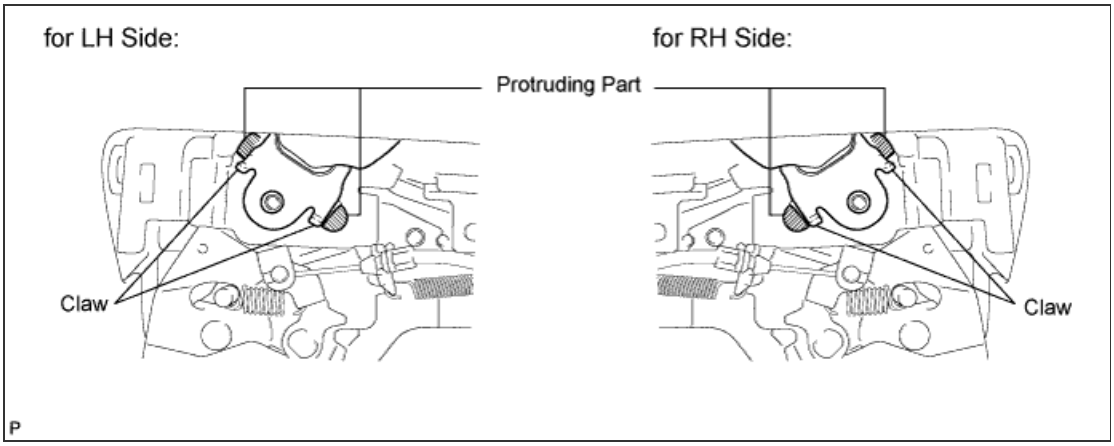

NOTICE:

- **Make sure the claws are facing away from the seat.**
- **Do not overlap the anchor part of the seat belt and protruding parts of the seat.**

2. INSTALL REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, connect it when installing the rear seat inner belt.

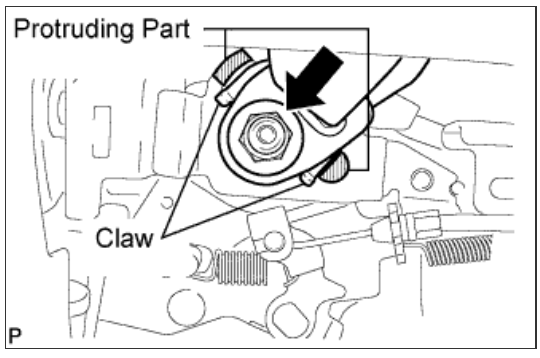

3. INSTALL REAR SEAT OUTER BELT SUB-ASSEMBLY (for RH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:


The rear No. 2 seat inner belt is fixed with the same nut as the rear seat outer belt. Therefore, connect it when installing the rear seat outer belt.

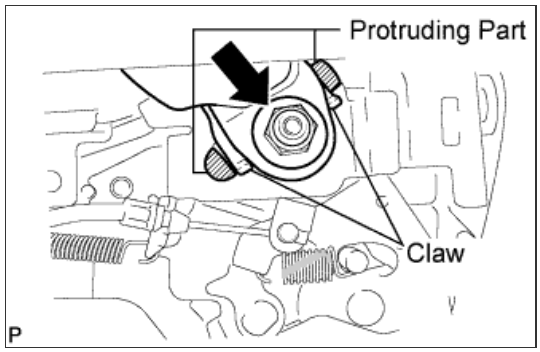

4. INSTALL NO. 3 SEAT LEG COVER NO. 2


a. Attach the 4 claws to install the cover.

b. Install the 2 screws.

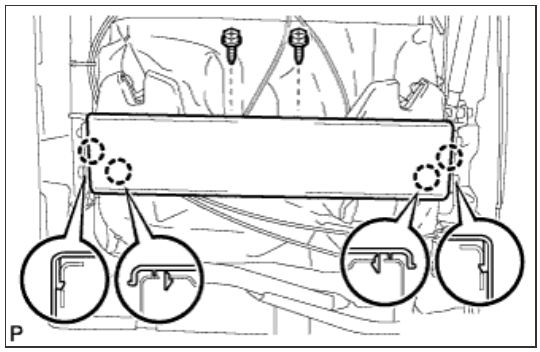


5. INSTALL NO. 3 SEAT FRONT BRACKET COVER LH

a. Attach the 4 claws to install the cover.

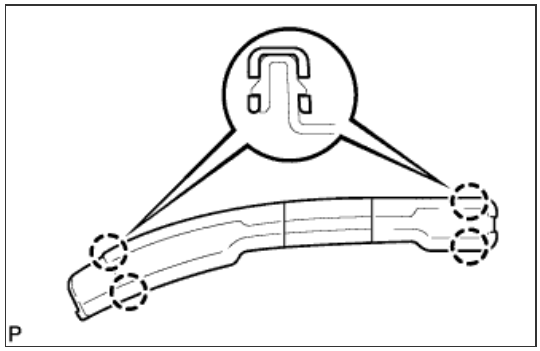


6. INSTALL REAR SEAT CUSHION UNDER COVER LH

a. Install the cover with the 7 screws.

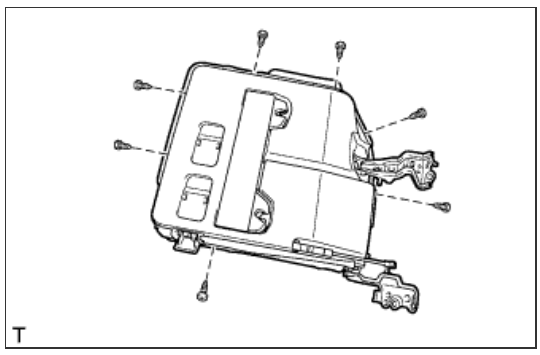


b. Attach the 16 claws.

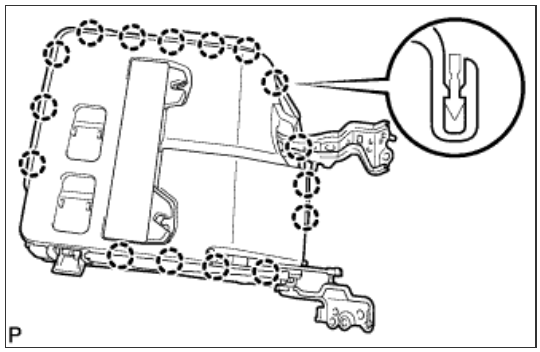

7. INSTALL 3RD SEAT LIN SUB-ASSEMBLY LH


a. Install the seat link with the bolt and nut.

Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

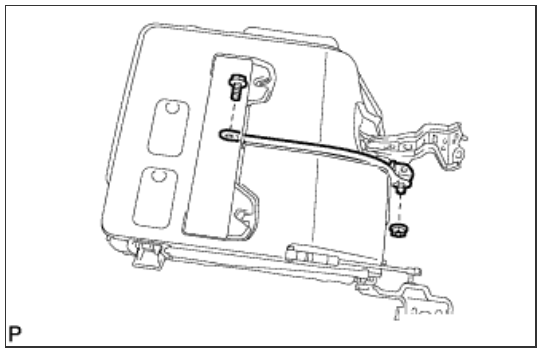


8. INSTALL NO. 2 SEAT LEG COVER NO. 2

a. Install the seat leg cover with the screw.

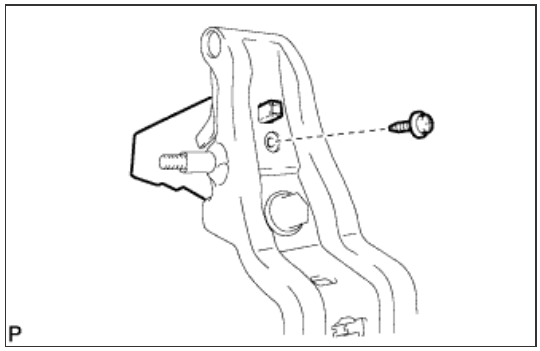


9. INSTALL REAR NO. 3 SEAT LEG COVER LH

a. Install the seat leg cover with the 2 screws.

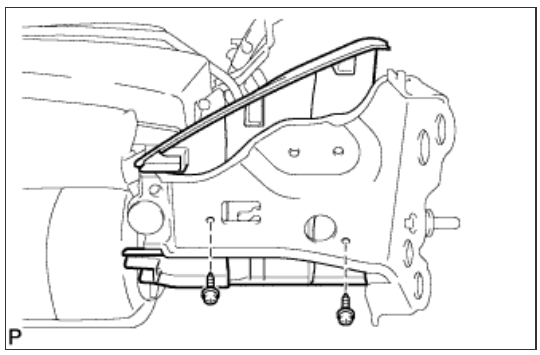

b. Install the spring of the seat stay ball-joint.

c. Connect the seat stay to the seat frame.

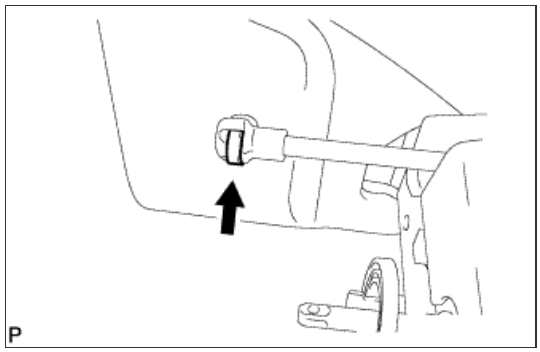


10. INSTALL REAR SEAT REAR BRACKET COVER REAR

a. Attach the 2 claws to install the cover.

11. INSTALL RECLINING ADJUSTER COVER RH

a. Attach the 5 claws in the order shown in the illustration to install the cover.


b. Install the screw.

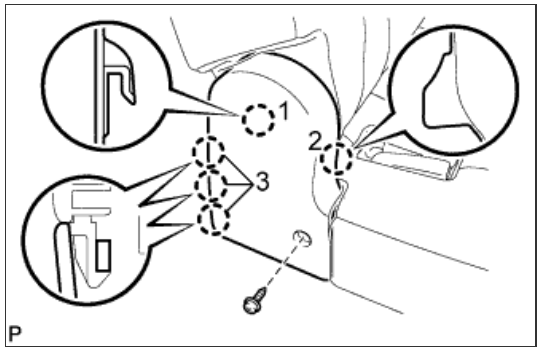

12. INSTALL RECLINING ADJUSTER COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the screw.

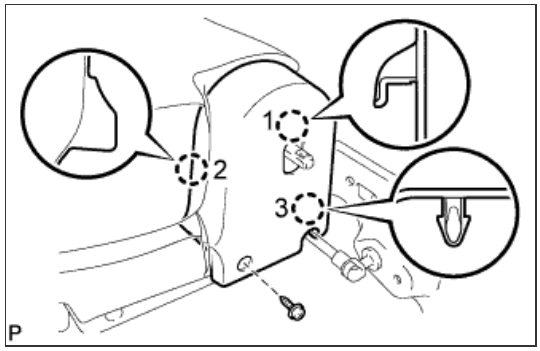


13. INSTALL NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

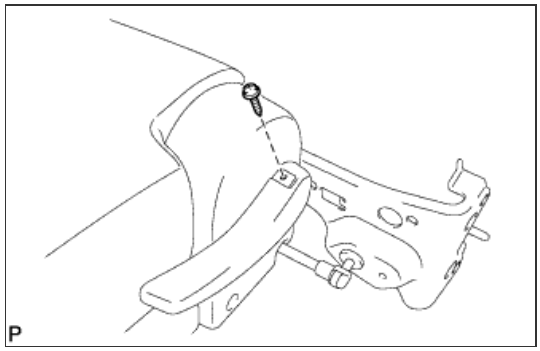

14. INSTALL SEAT ADJUSTER BOLT COVER


a. Attach the 2 claws to install the cover.

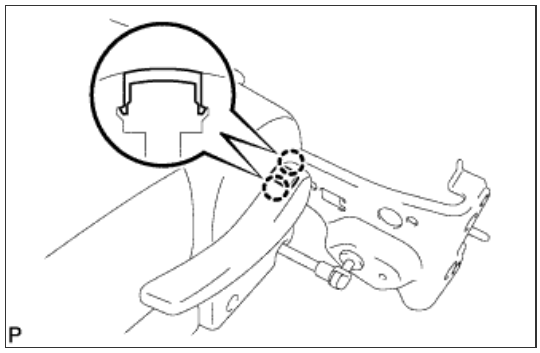



15. INSTALL REAR NO. 2 SEAT ASSEMBLY (for LH Side)


a. Install the rear No. 2 seat assembly (Click here).

for Preparation Click here

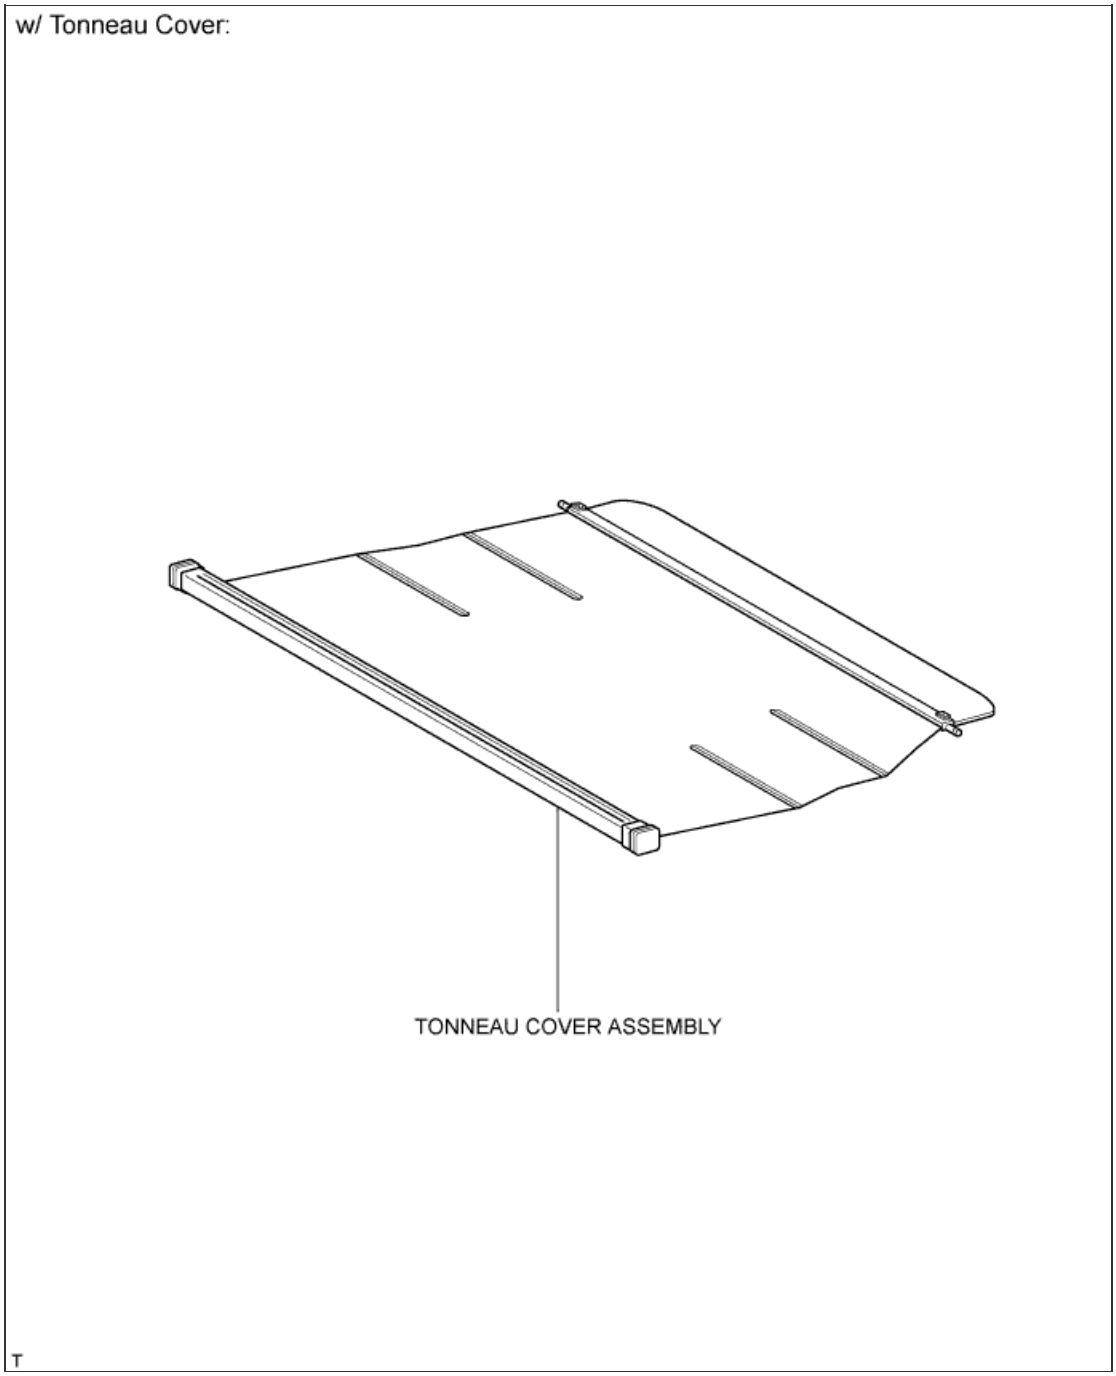

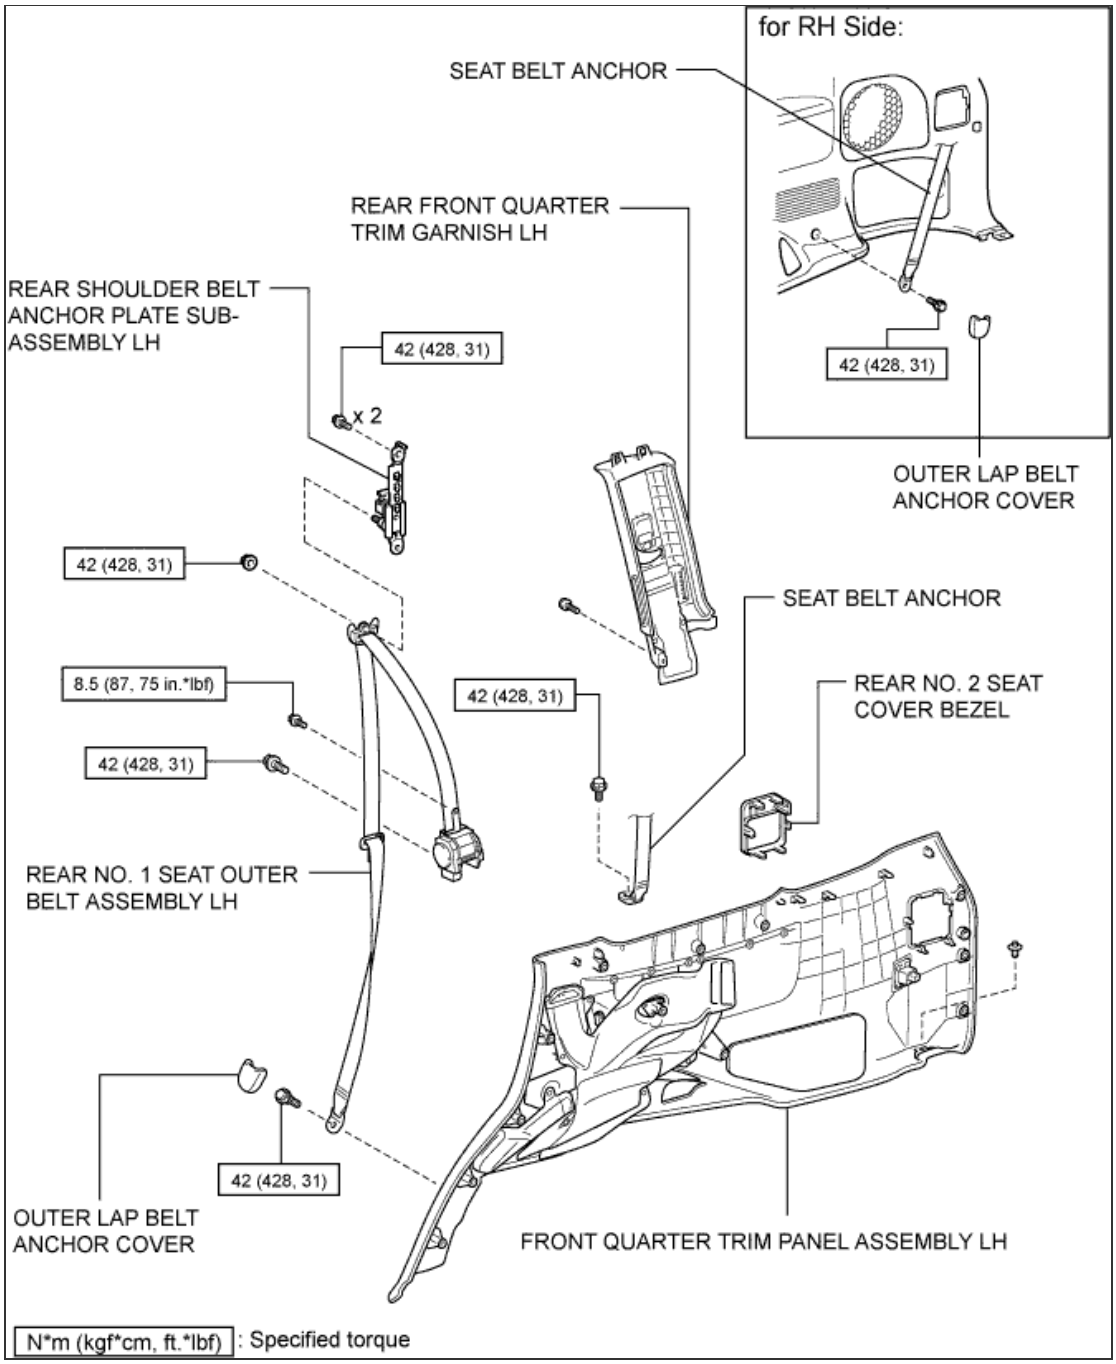
for RH Side:
SEAT BELT ANCHOR
42 (428, 31)
OUTER LAP BELT ANCHOR COVER
REAR FRONT QUARTER TRIM GARNISH LH
REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH
42 (428, 31)
x 2
42 (428, 31)
SEAT BELT ANCHOR
8.5 (87, 75 in.*lbf)
42 (428, 31)
REAR NO. 2 SEAT COVER BEZEL
42 (428, 31)
REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH
42 (428, 31)
OUTER LAP BELT ANCHOR COVER
FRONT QUARTER TRIM PANEL ASSEMBLY LH
N*m (kgf*cm, ft.*lbf) : Specified torque

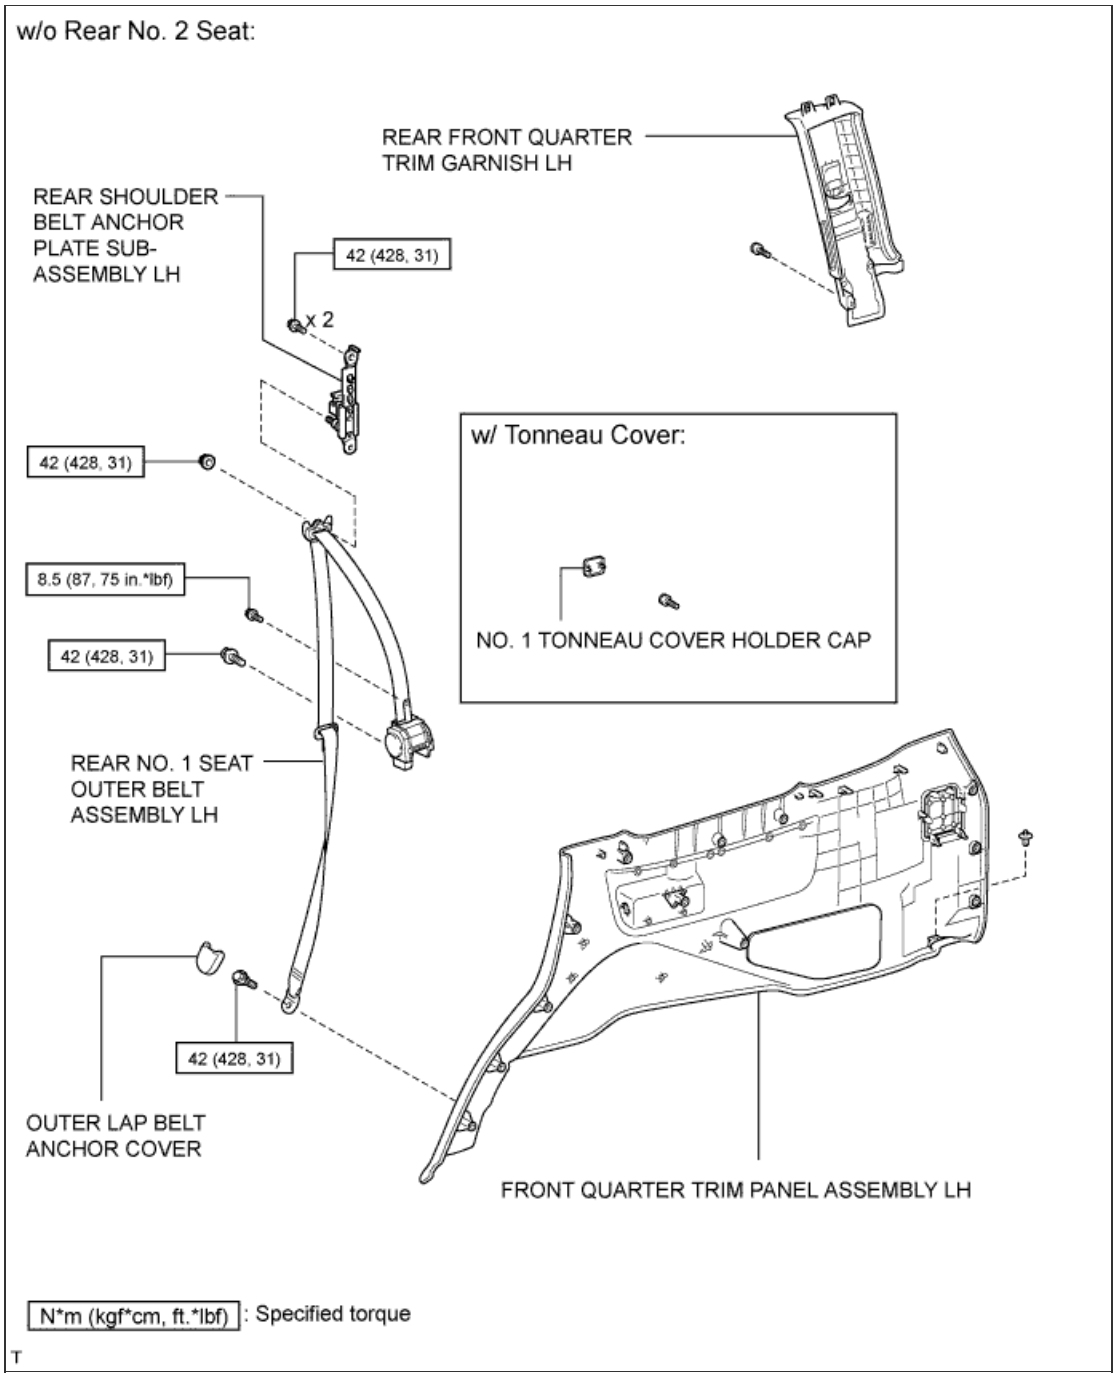
w/o Rear No. 2 Seat:
REAR FRONT QUARTER TRIM GARNISH LH
REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH
42 (428, 31)
x 2
42 (428, 31)
8.5 (87, 75 in.*lbf)
42 (428, 31)
w/ Tonneau Cover:
NO. 1 TONNEAU COVER HOLDER CAP
REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH
42 (428, 31)
OUTER LAP BELT ANCHOR COVER
FRONT QUARTER TRIM PANEL ASSEMBLY LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T

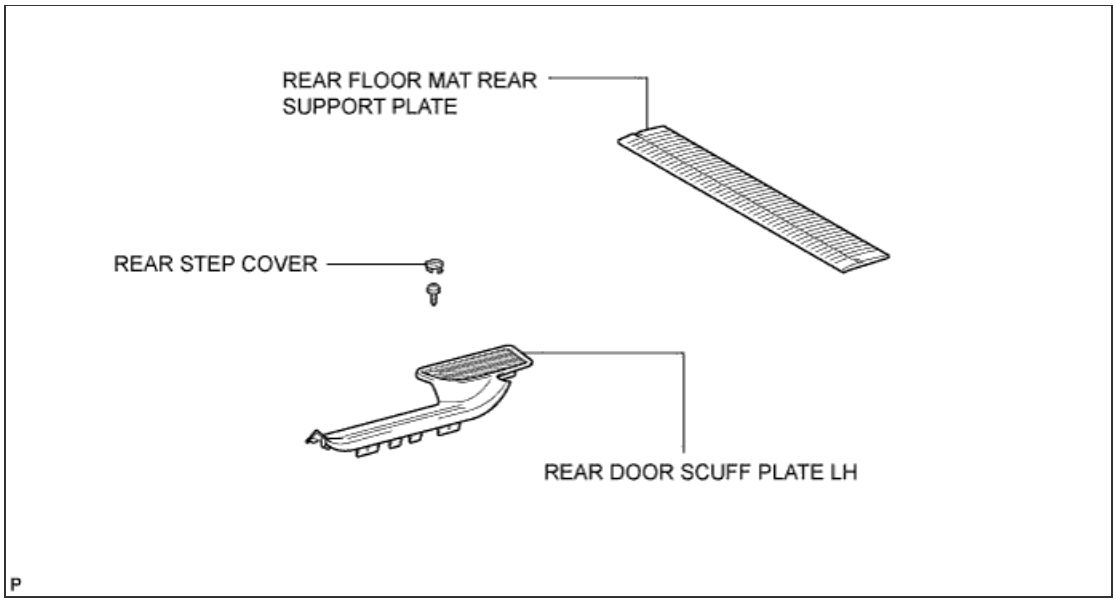
REAR FLOOR MAT REAR SUPPORT PLATE
REAR STEP COVER
REAR DOOR SCUFF PLATE LH
P

REAR NO. 1 SEAT OUTER BELT ASSEMBLY > REMOVAL

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

2. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)


a. Remove the tonneau cover.

3. REMOVE REAR NO. 2 SEAT ASSEMBLY (w/ Rear No. 2 Seat)

a. Remove the rear No. 2 seat assembly (Click here).

4. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

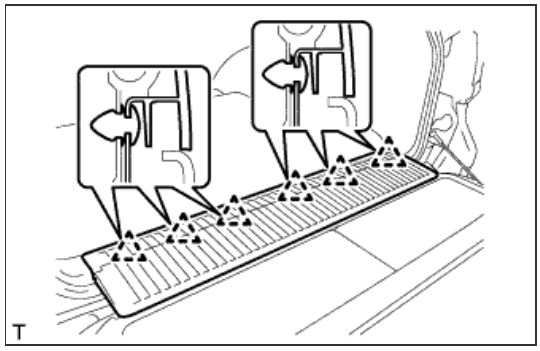


5. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 cla s and remove the step cover.

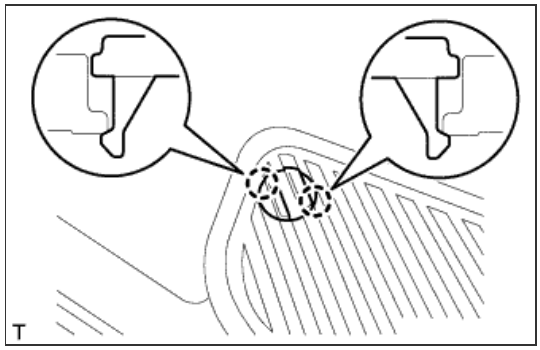

6. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the scre .

b. Detach the 3 cla s and 4 clips, and remove the scuff plate.

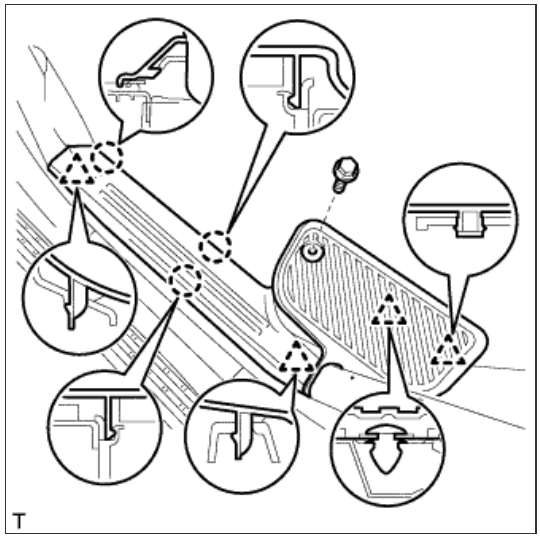


7. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:


Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 cla s and remove the tonneau cover holder cap.

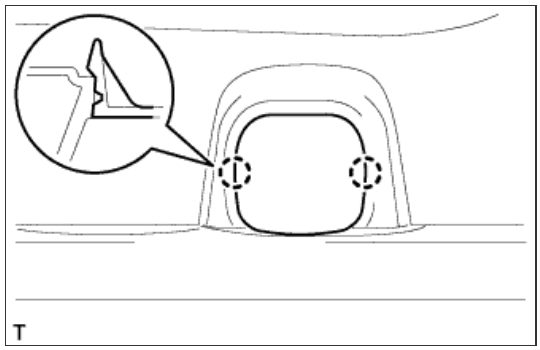

8. REMOVE REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat)

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

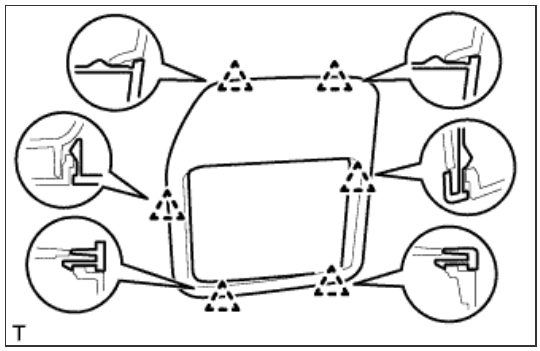



9. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front quarter trim panel, operate the reclining ad ster release handle and move the No. 1 rear seat to the position shown in the illustration.

a. Detach the 3 claws and remove the cover.

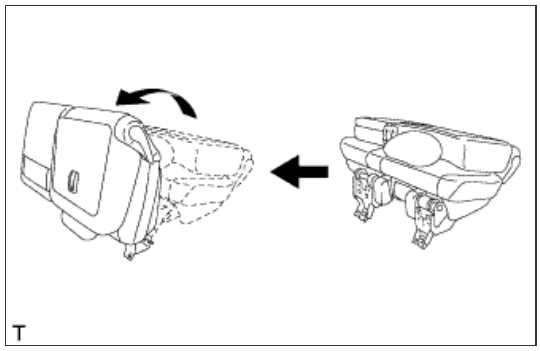

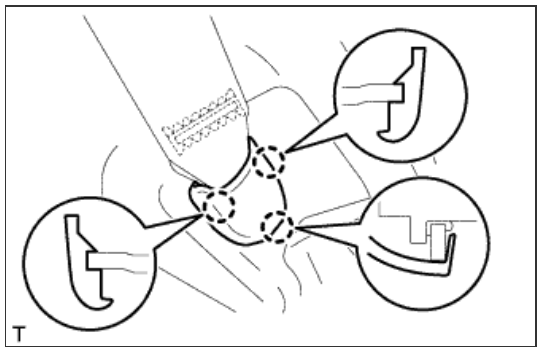


b. Remove the bolt and disconnect the rear seat outer belt floor anchor.

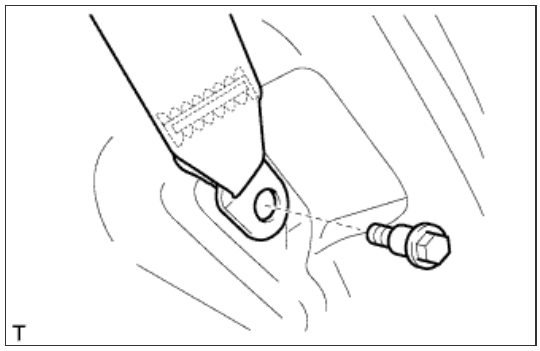


c. w/ Rear No. 2 Seat, for LH side:

i. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor LH.

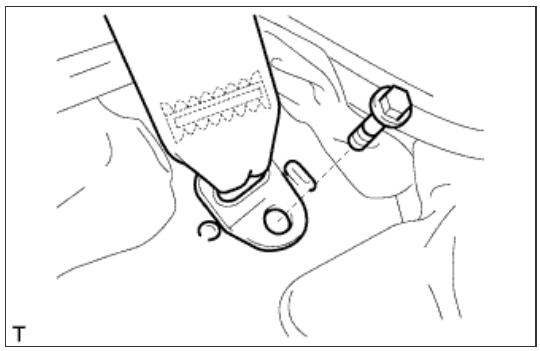


d. w/ Rear No. 2 Seat, for RH side:

i. Detach the 3 claws and remove the cover.

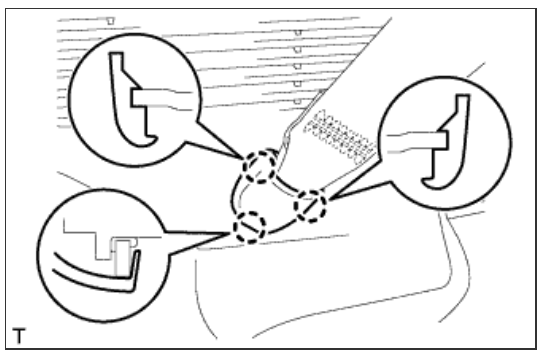

ii. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor RH.

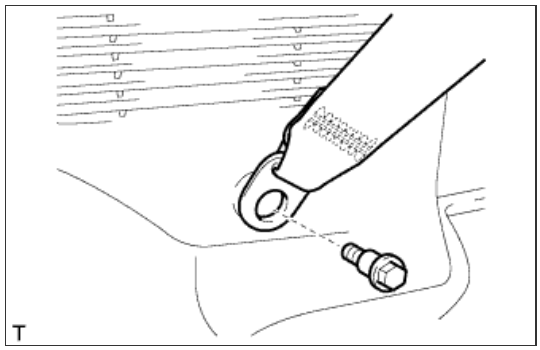


e. w/o Tonneau Cover:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

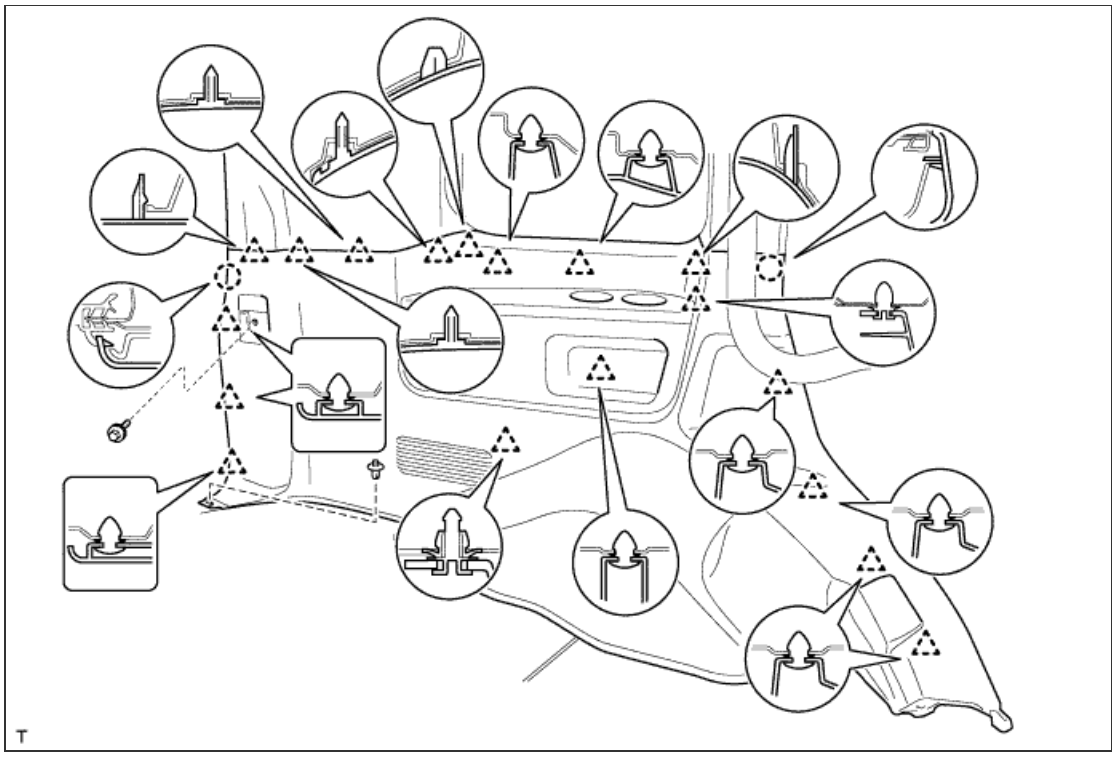

f. w/ Tonneau Cover:

i. Remove the screw and clip.

ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

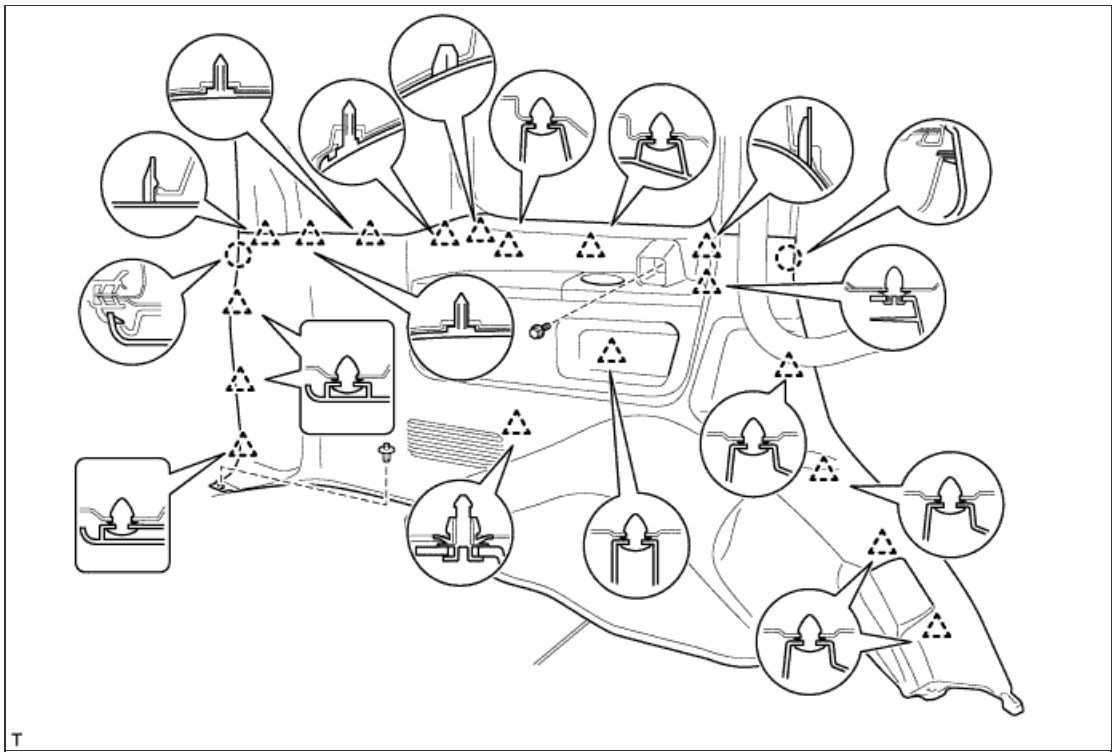


10. REMOVE REAR FRONT QUARTER TRIM GARNISH LH

a. Remove the screw.


b. Detach the clip and 2 guides.

c. Pass the seat belt anchor through the quarter trim garnish, and remove the quarter trim garnish.

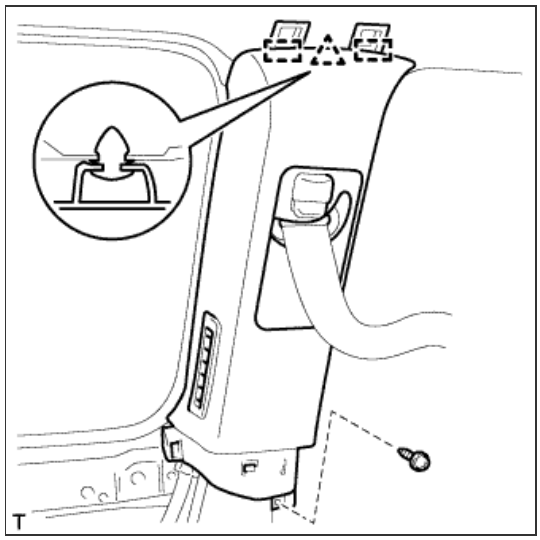


11. REMOVE REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH


a. Remove the nut and seat belt shoulder anchor.

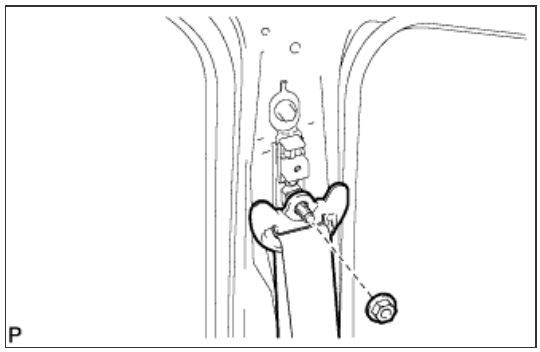

b. w/ Pretensioner:
Disconnect the pretensioner connector as shown in the illustration.

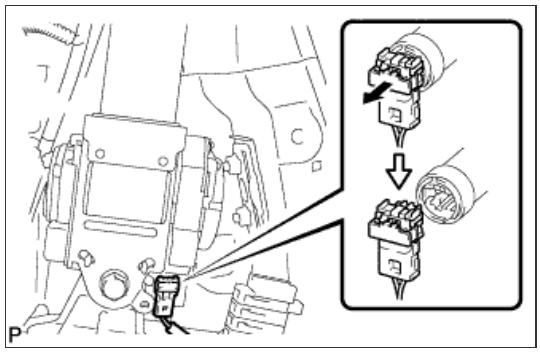


c. Remove the 2 bolts and rear No. 1 seat outer belt.

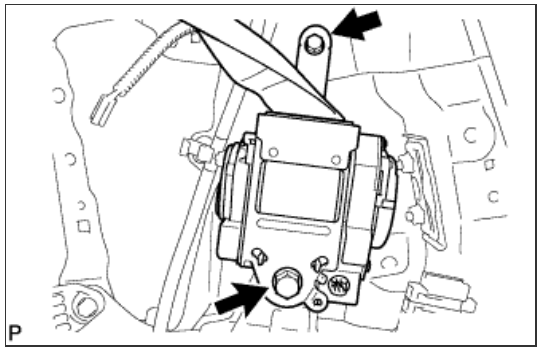

12. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Remove the 2 bolts and anchor plate.

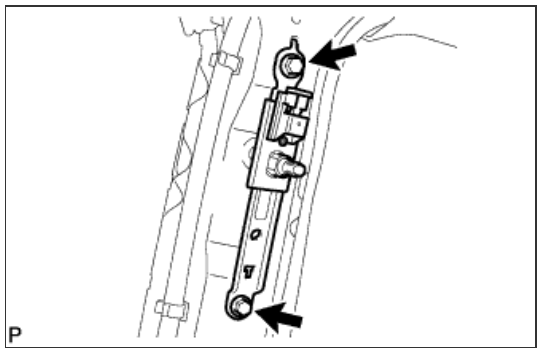

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

2. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)


a. Remove the tonneau cover.

3. REMOVE REAR NO. 2 SEAT ASSEMBLY (w/ Rear No. 2 Seat)

a. Remove the rear No. 2 seat assembly (Click here).

4. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

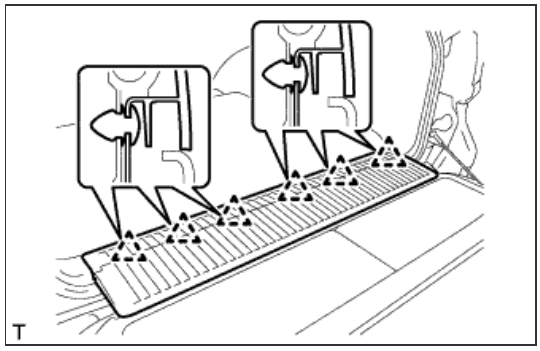


5. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

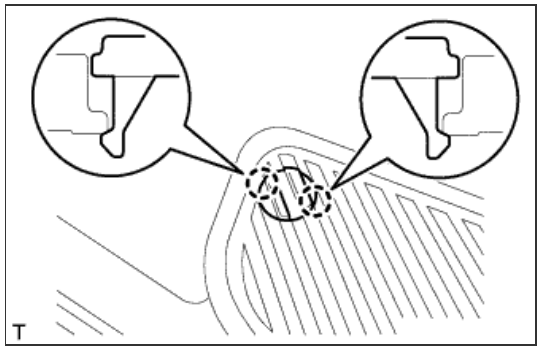

6. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

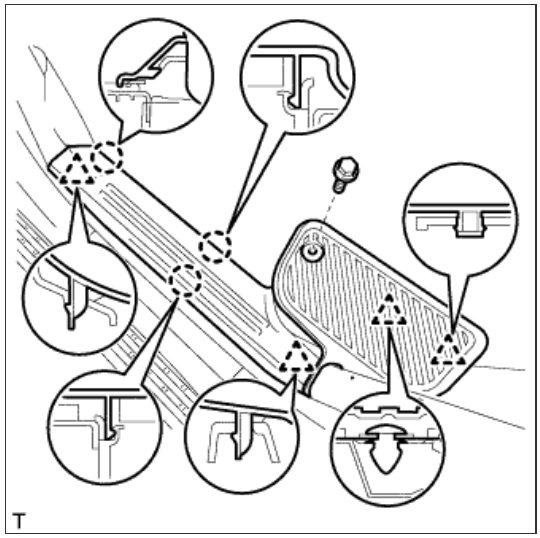


7. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:


Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

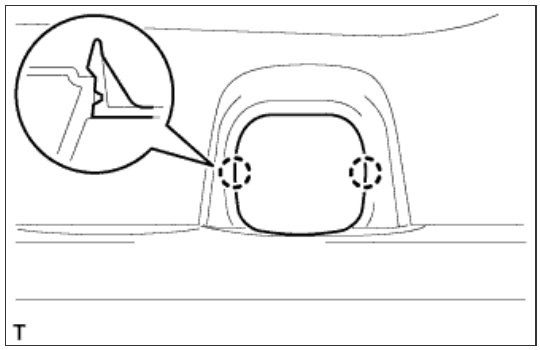

8. REMOVE REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat)

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

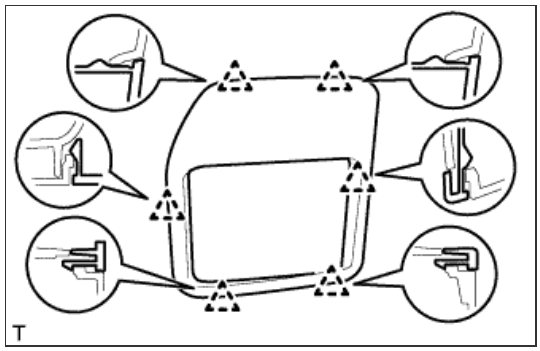



9. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front quarter trim panel, operate the reclining ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

a. Detach the 3 claws and remove the cover.

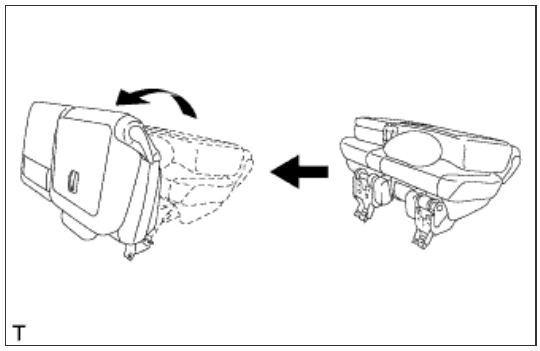

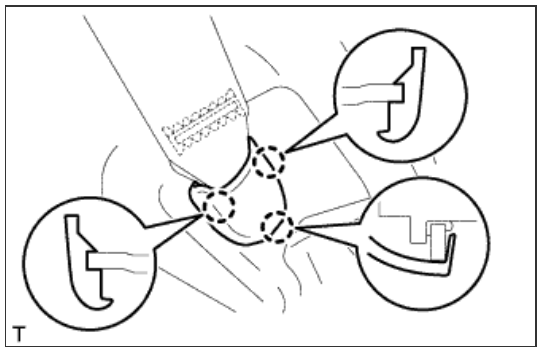


b. Remove the bolt and disconnect the rear seat outer belt floor anchor.

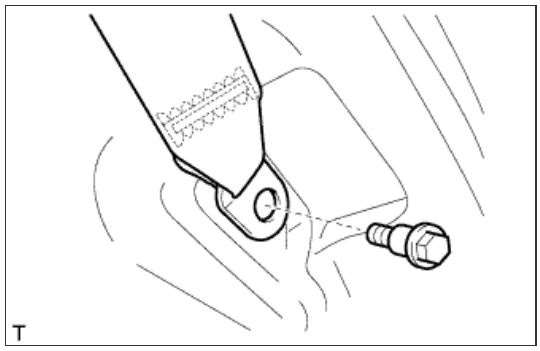


c. w/ Rear No. 2 Seat, for LH side:

i. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor LH.

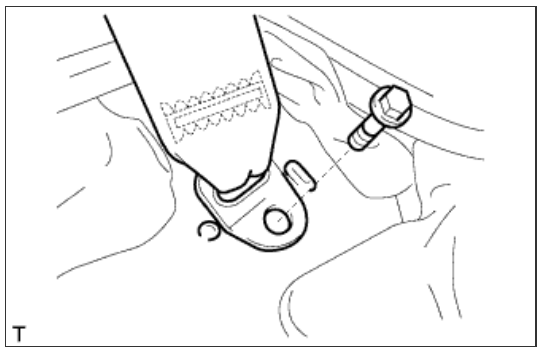


d. w/ Rear No. 2 Seat, for RH side:

i. Detach the 3 claws and remove the cover.

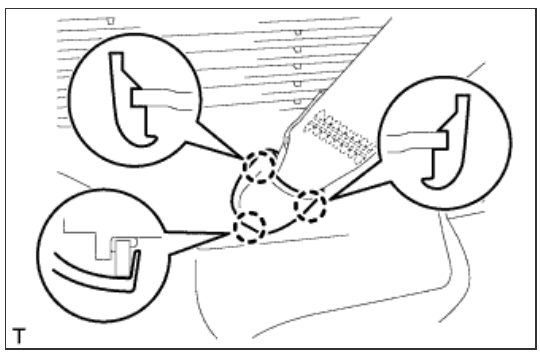

ii. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor RH.

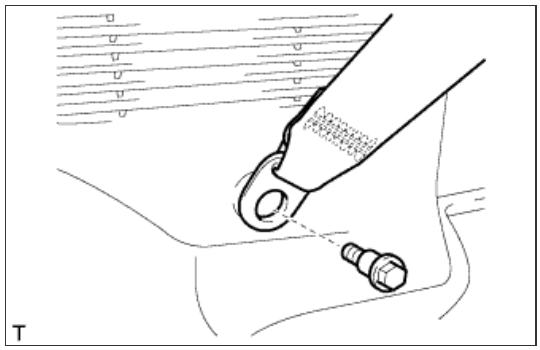


e. w/o Tonneau Cover:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

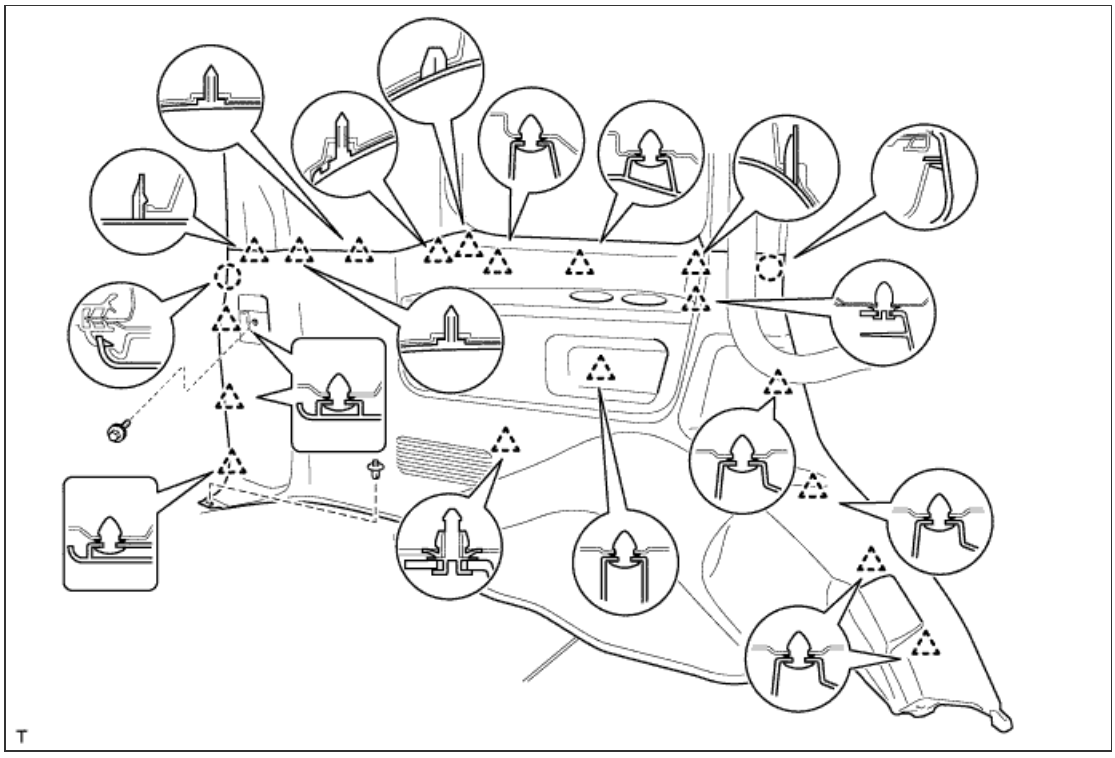

f. w/ Tonneau Cover:

i. Remove the screw and clip.

ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

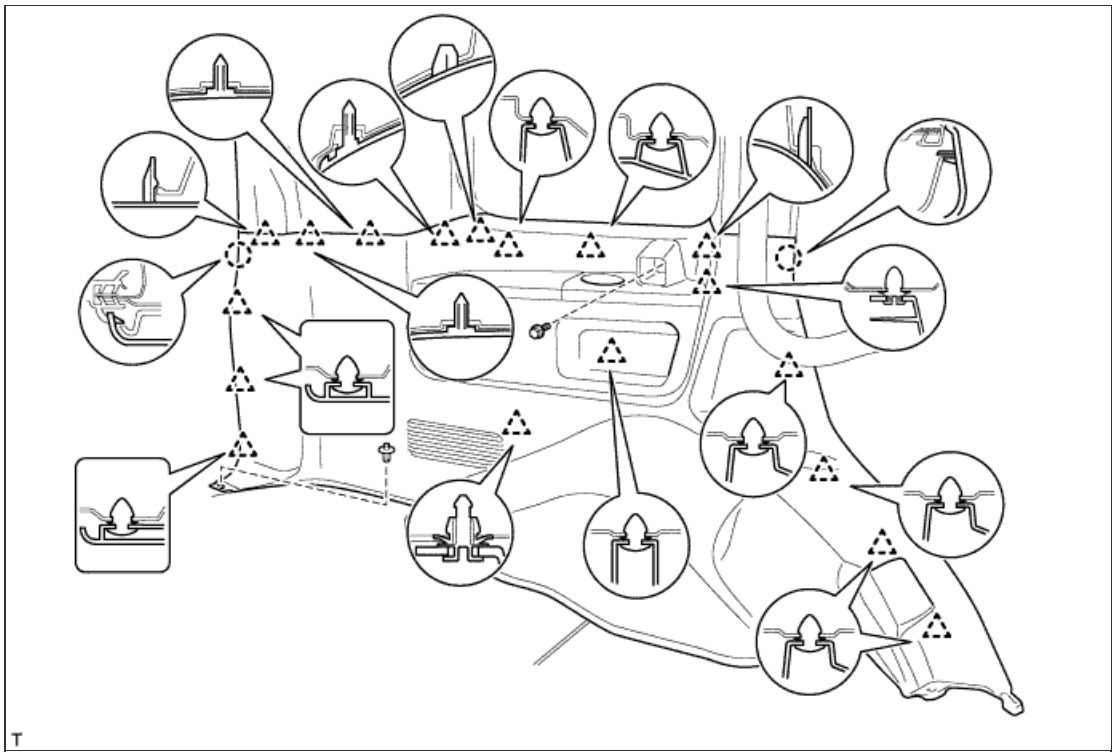


10. REMOVE REAR FRONT QUARTER TRIM GARNISH LH

a. Remove the screw.


b. Detach the clip and 2 guides.

c. Pass the seat belt anchor through the quarter trim garnish, and remove the quarter trim garnish.

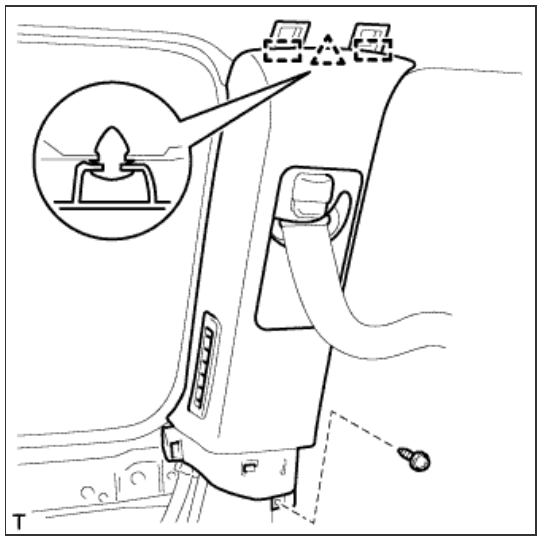


11. REMOVE REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH


a. Remove the nut and seat belt shoulder anchor.

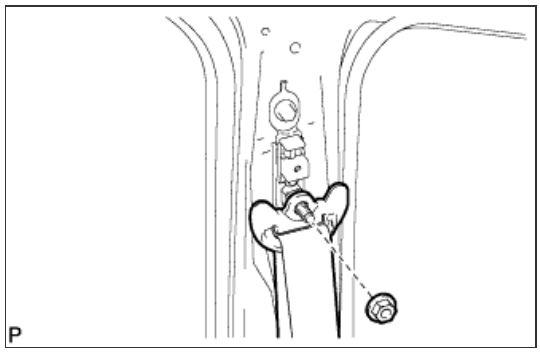

b. w/ Pretensioner:
Disconnect the pretensioner connector as shown in the illustration.

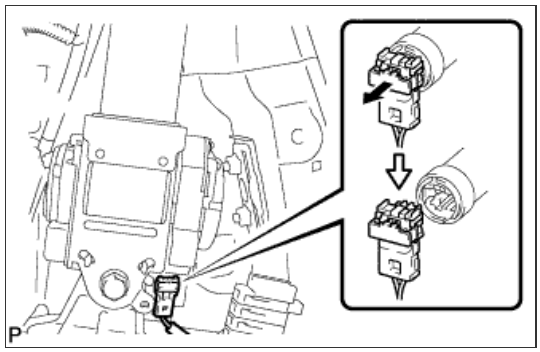


c. Remove the 2 bolts and rear No. 1 seat outer belt.

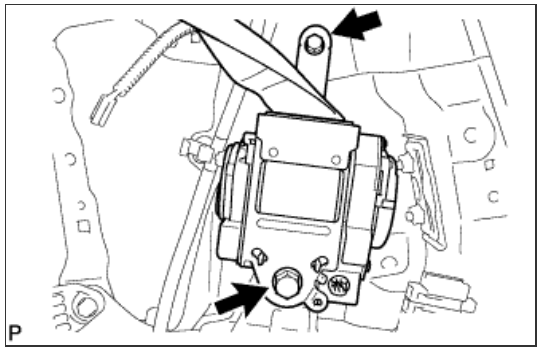

12. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Remove the 2 bolts and anchor plate.

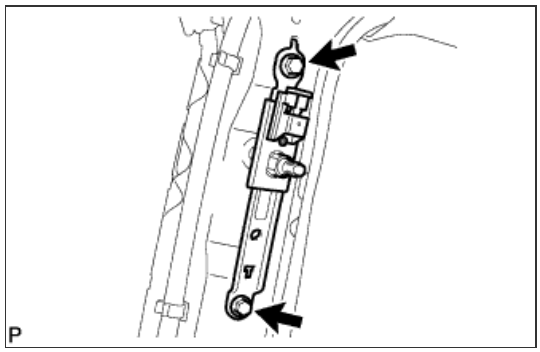

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

2. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)


a. Remove the tonneau cover.

3. REMOVE REAR NO. 2 SEAT ASSEMBLY (w/ Rear No. 2 Seat)

a. Remove the rear No. 2 seat assembly (Click here).

4. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

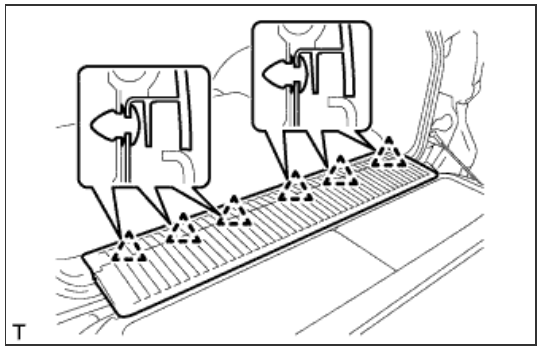


5. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

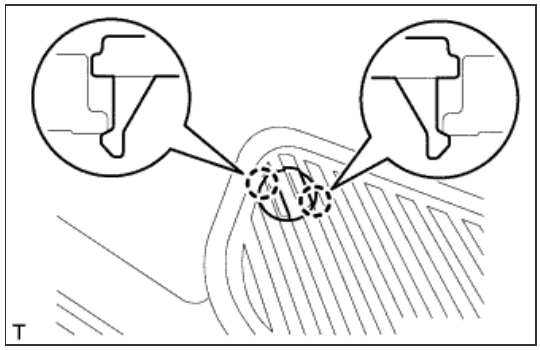

6. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

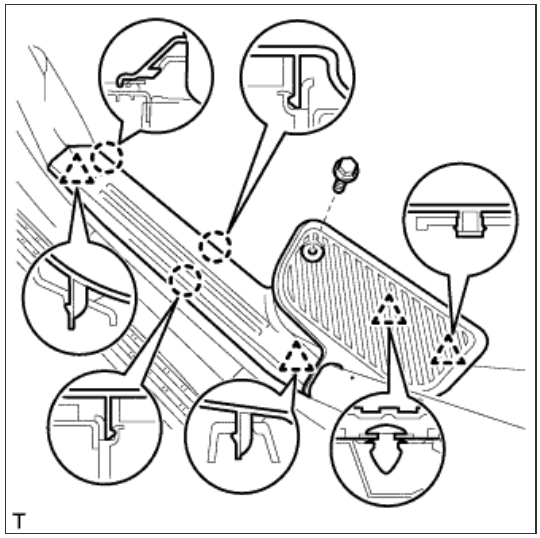


7. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:


Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

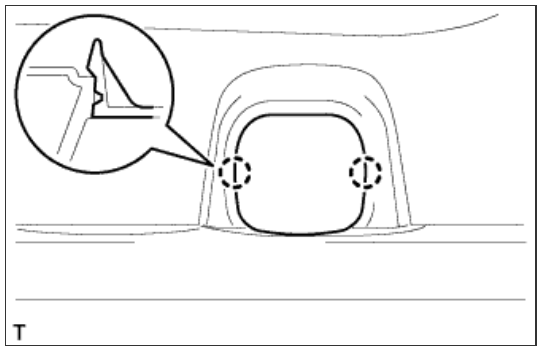

8. REMOVE REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat)

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

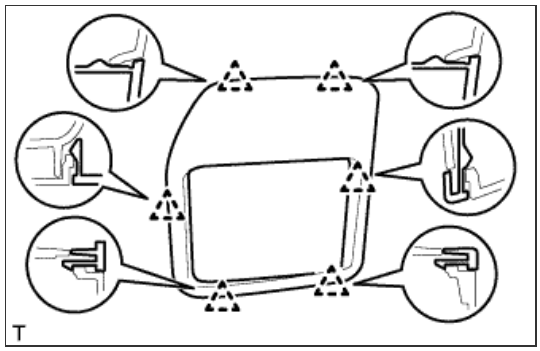



9. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front quarter trim panel, operate the reclining ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

a. Detach the 3 claws and remove the cover.

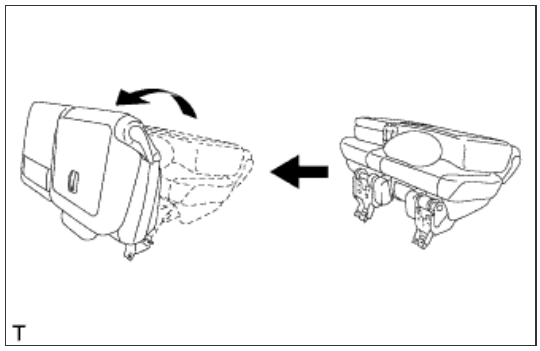

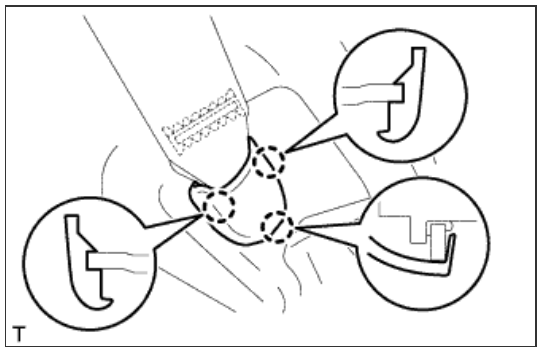


b. Remove the bolt and disconnect the rear seat outer belt floor anchor.

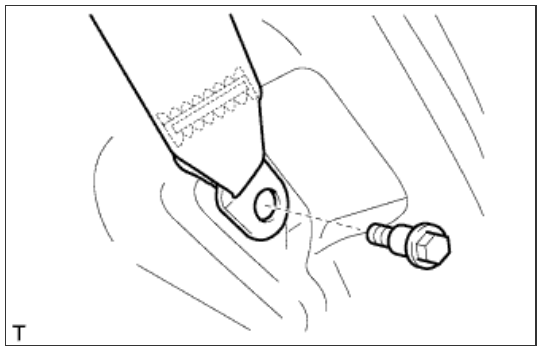


c. w/ Rear No. 2 Seat, for LH side:

i. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor LH.

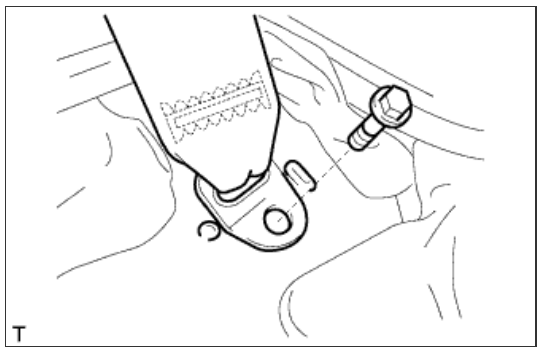


d. w/ Rear No. 2 Seat, for RH side:

i. Detach the 3 claws and remove the cover.

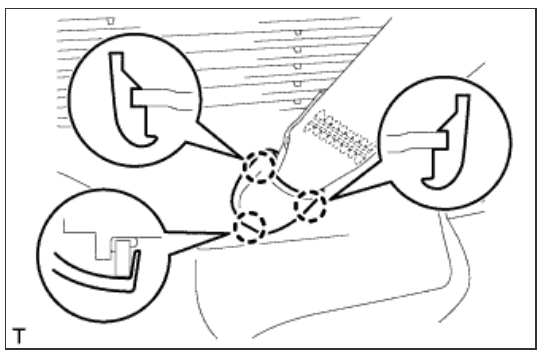

ii. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor RH.

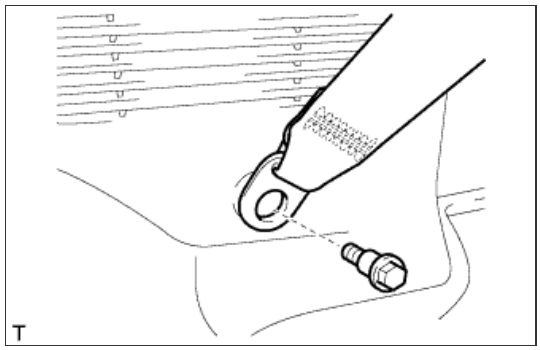


e. w/o Tonneau Cover:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

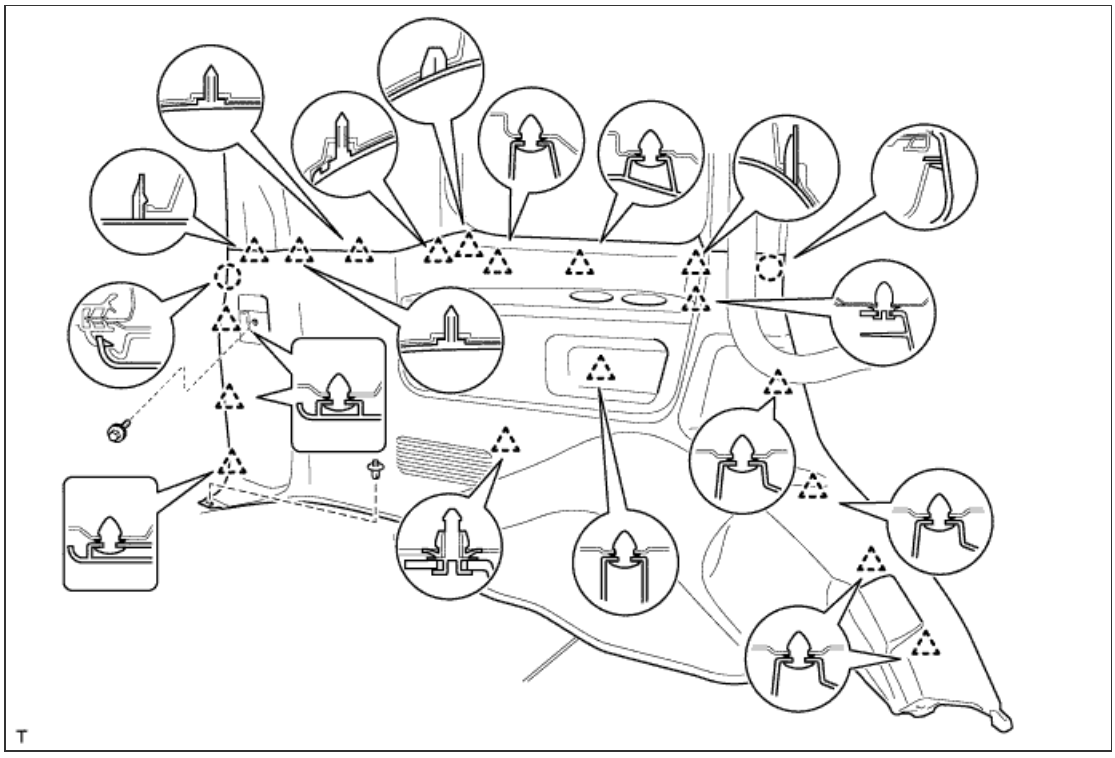

f. w/ Tonneau Cover:

i. Remove the screw and clip.

ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

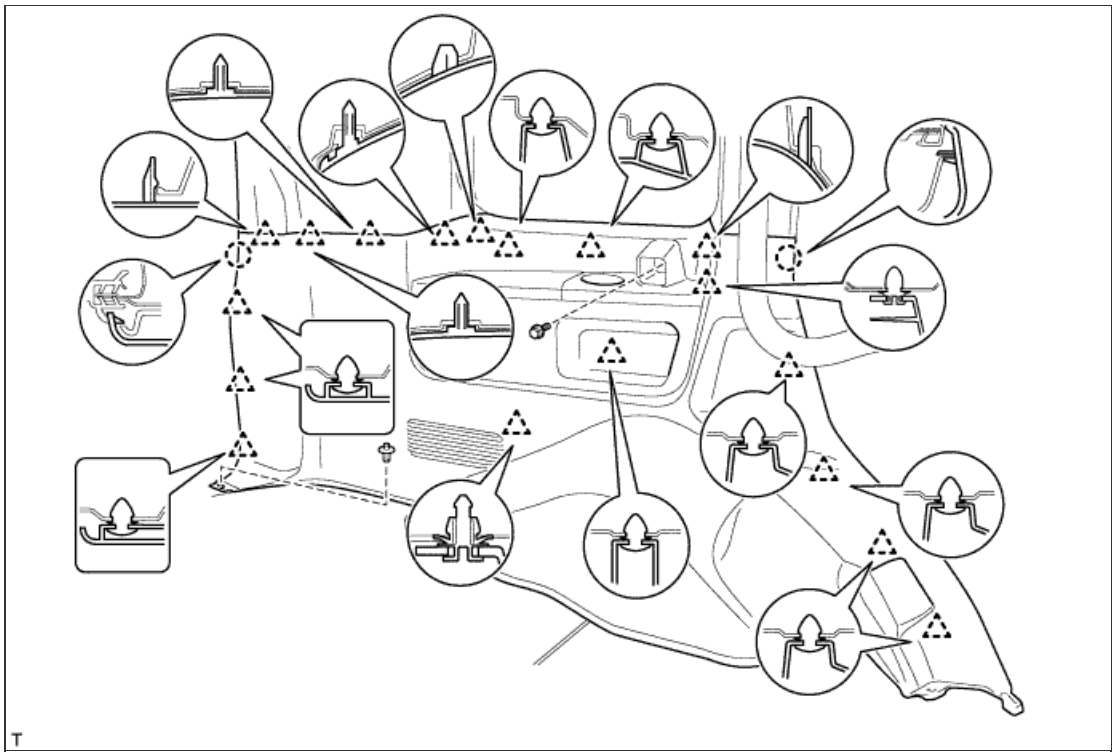


10. REMOVE REAR FRONT QUARTER TRIM GARNISH LH

a. Remove the screw.


b. Detach the clip and 2 guides.

c. Pass the seat belt anchor through the quarter trim garnish, and remove the quarter trim garnish.

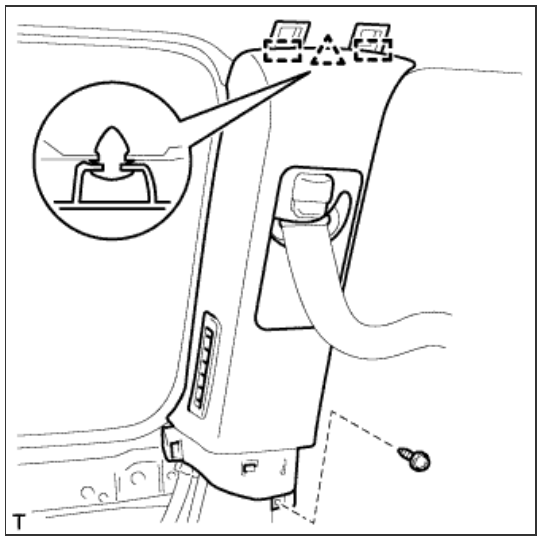


11. REMOVE REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH


a. Remove the nut and seat belt shoulder anchor.

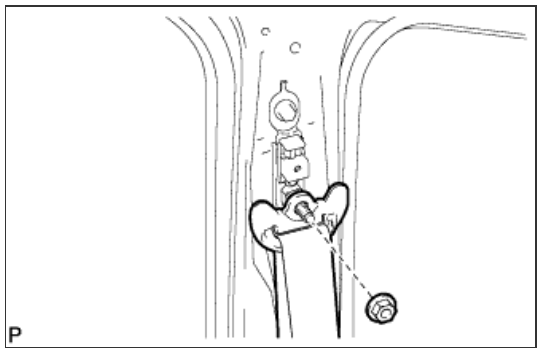

b. w/ Pretensioner:
Disconnect the pretensioner connector as shown in the illustration.

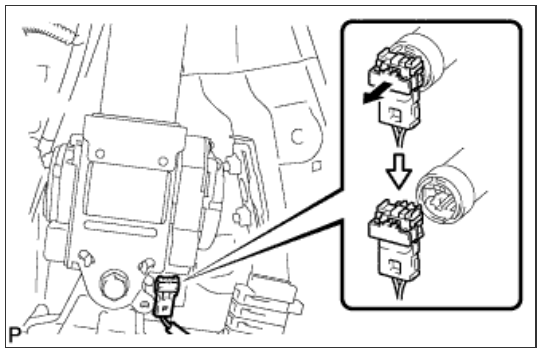


c. Remove the 2 bolts and rear No. 1 seat outer belt.

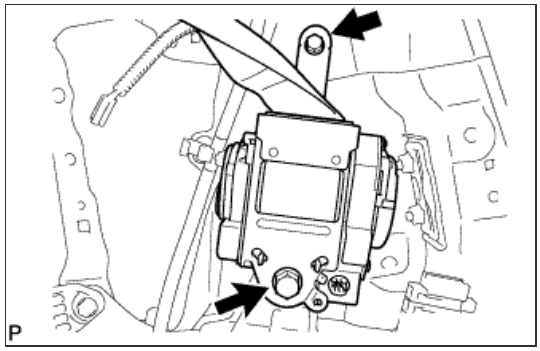

12. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH


a. Remove the 2 bolts and anchor plate.

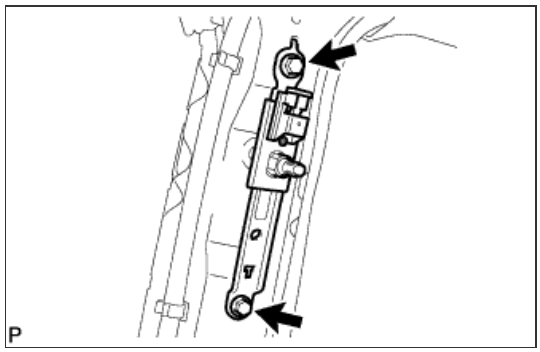

for Preparation Click here

1. INSPECT REAR NO. 1 SEAT OUTER BELT ASSEMBLY

a. Check the ELR.

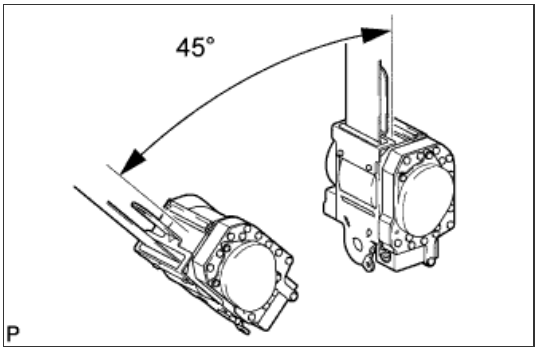

i. When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks.
If the operation is not as specified, replace the seat belt assembly.

b. w/ ALR:
Check the fastening function of the child restraint system.

NOTICE:

The check should be performed with the outer belt installed.

i. When the belt is pulled out fully, the belt should automatically start to retract.

ii. After the belt has fully retracted, the belt should be able to be pulled out and retracted again.
If the operation is not as specified, replace the belt assembly.

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**


1. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Align the anchor plate positioning hole with the claw, and install the anchor plate with the 2 bolts.

HINT:

First install the upper bolt, and then install the lower bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

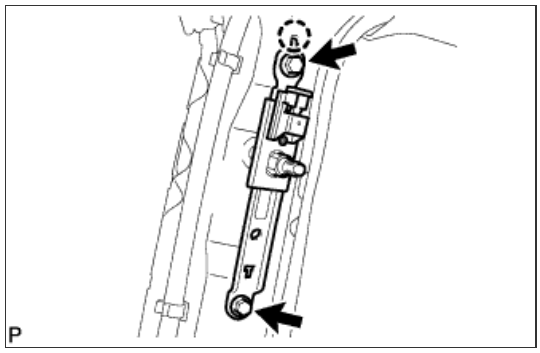

2. INSTALL REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH

NOTICE:

w/ Pretensioner:

When installing the retractor, make sure the claws of the vehicle (labeled "a" in the illustration) only contact the installation areas of the retractor.


a. Align the claws with the seat belt positioning holes and install the retractor of the seat belt as shown in the illustration.

b. Install the seat belt with the 2 bolts.


HINT:

First install bolt A, and then install bolt B.

Torque:
for bolt A:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }
for bolt B:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

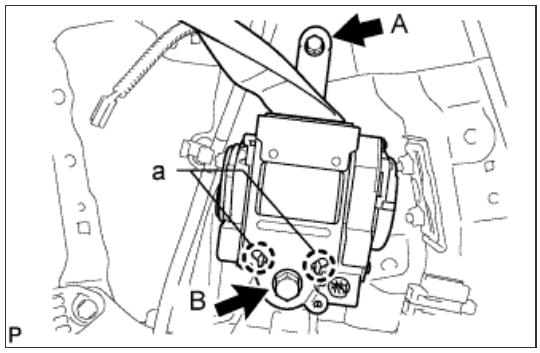


c. w/ Pretensioner:
Connect the pretensioner connector as shown in the illustration.

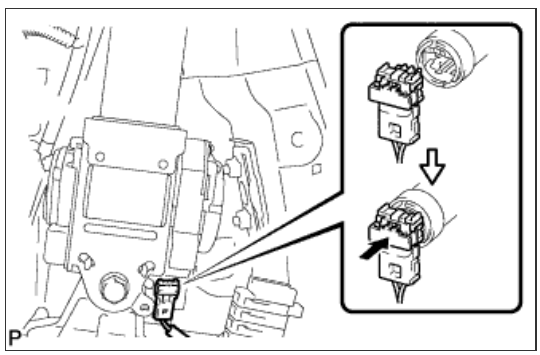

d. Install the seat belt shoulder anchor with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

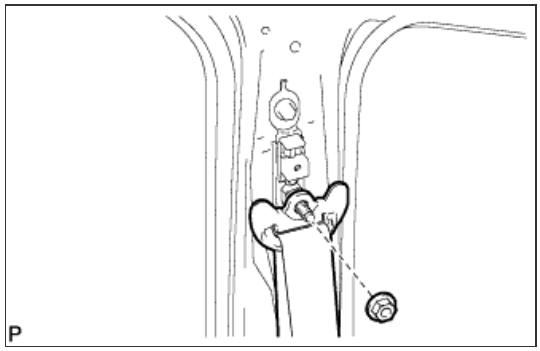


3. INSTALL REAR FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. Pass the seat belt anchor through the quarter trim garnish.

b. Attach the clip and 2 guides to install the quarter trim garnish.


c. Install the screw.

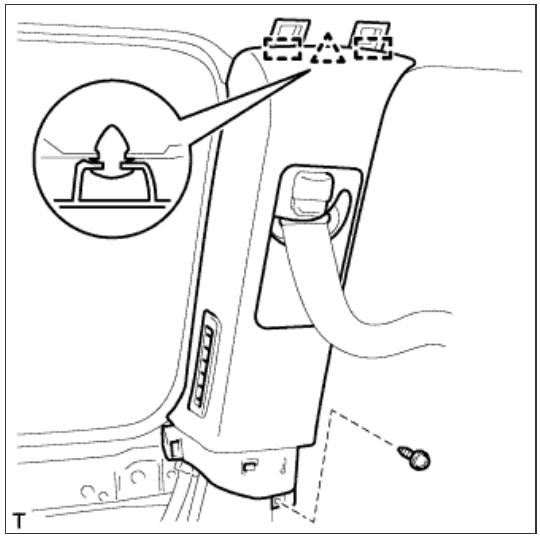

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

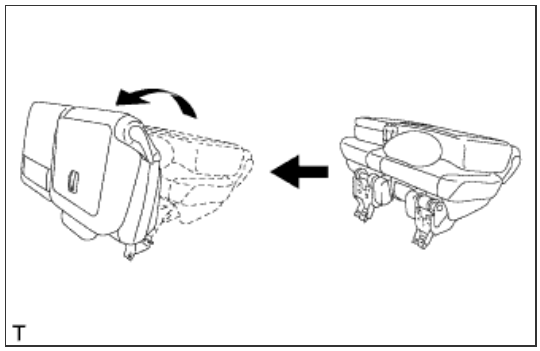

a. w/o Tonneau Cover:


i. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

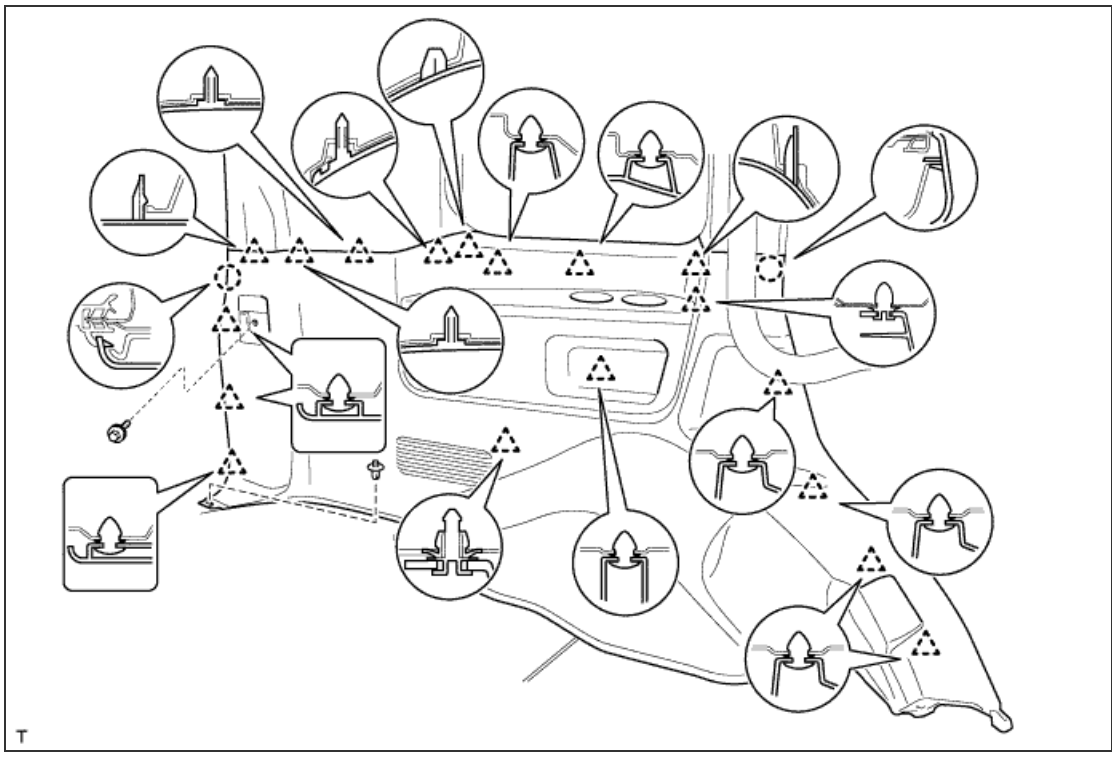

b. w/ Tonneau Cover:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the screw and clip.

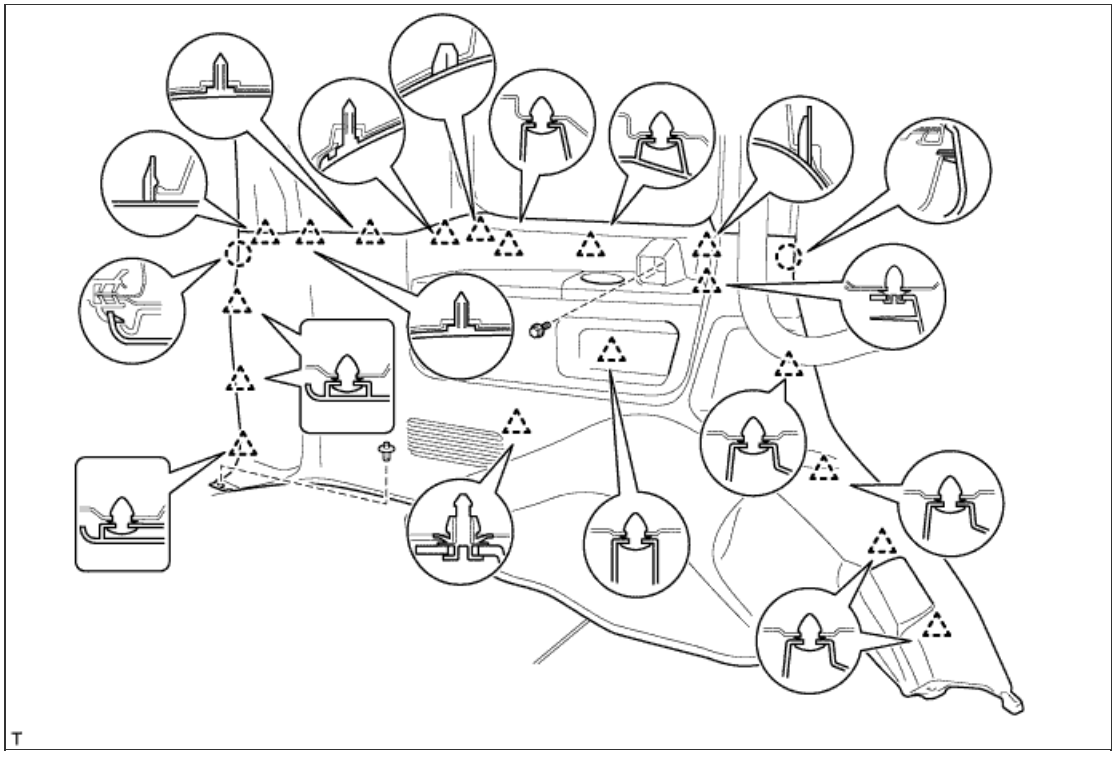


c. w/ Rear No. 2 Seat, for LH side:

i. Install the rear No. 2 seat belt anchor LH with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

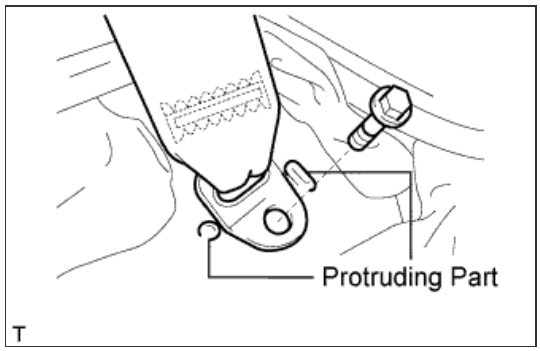


d. w/ Rear No. 2 Seat, for RH side:

i. Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

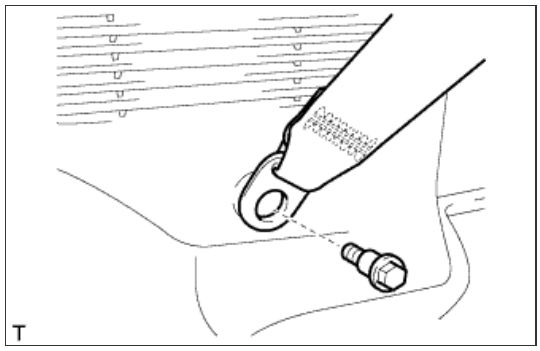


ii. Attach the 3 claws to install the cover.

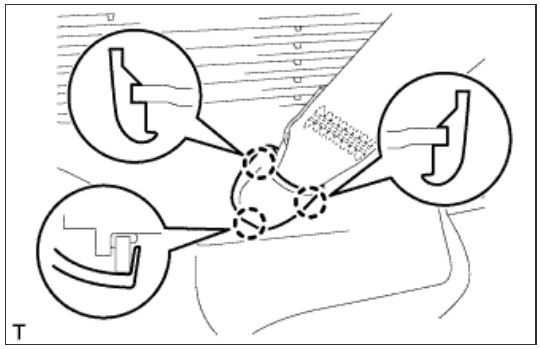


e. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

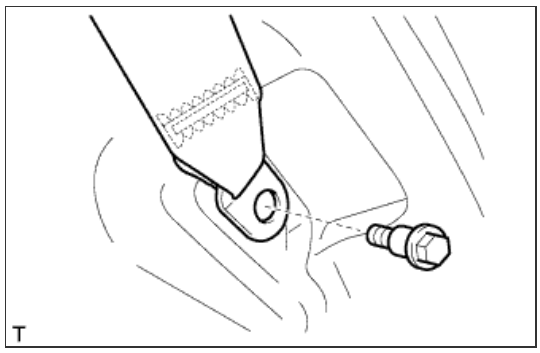


f. Attach the 3 claws to install the cover.

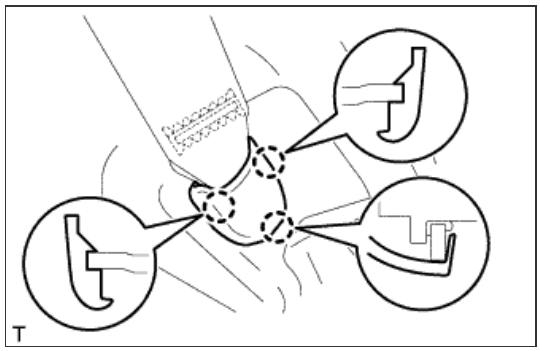

5. INSTALL REAR NO. 2 SEAT COVER BEZEL

a. Attach the 6 clips to install the rear No. 2 seat cover bezel.

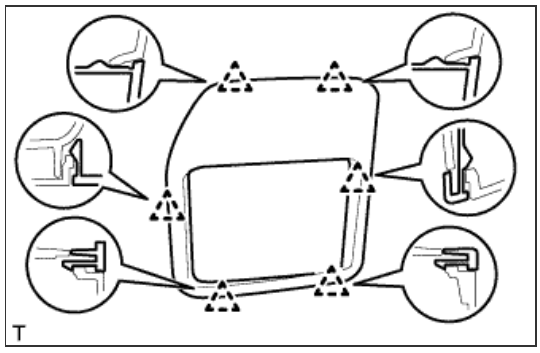


6. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to install the tonneau cover holder cap on the other side.


a. Attach the 2 claws to install the tonneau cover holder cap.

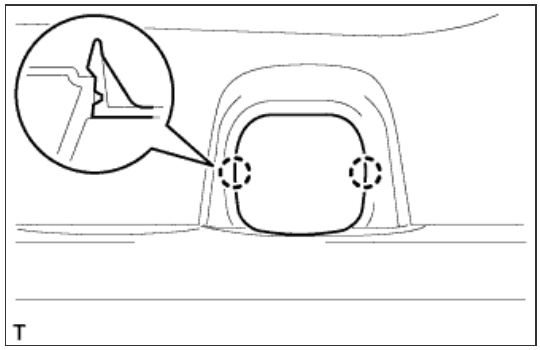

7. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

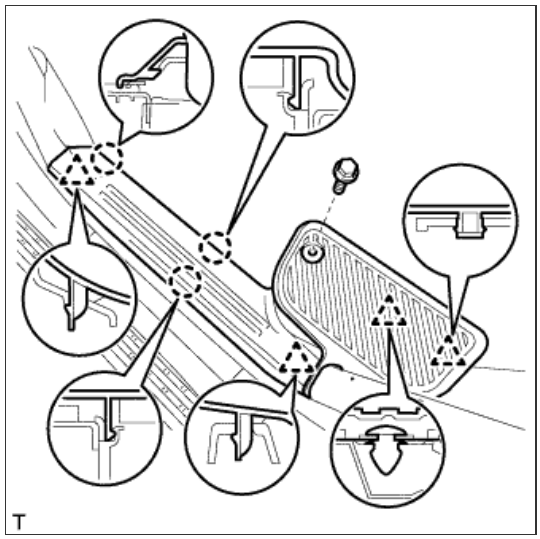


8. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

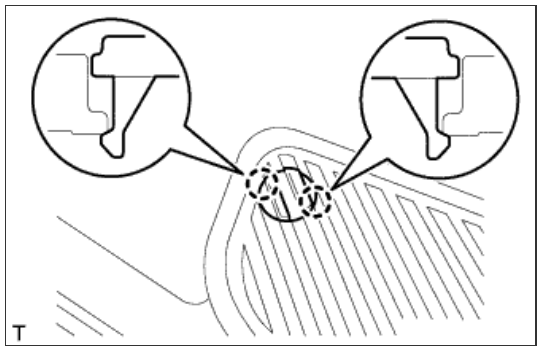

9. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the 6 clips to install the support plate.

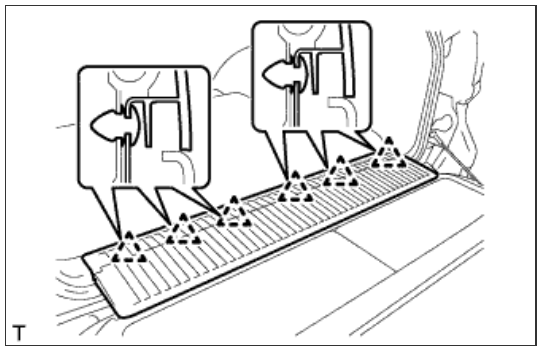

10. INSTALL REAR NO. 2 SEAT ASSEMBLY (w/ Rear No. 2 Seat)

a. Install the rear No. 2 seat assembly (Click here).

11. INSTALL TONNEAU COVER ASSEMBLY

a. Install the tonneau cover assembly.

12. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

13. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**


1. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Align the anchor plate positioning hole with the claw, and install the anchor plate with the 2 bolts.

HINT:

First install the upper bolt, and then install the lower bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

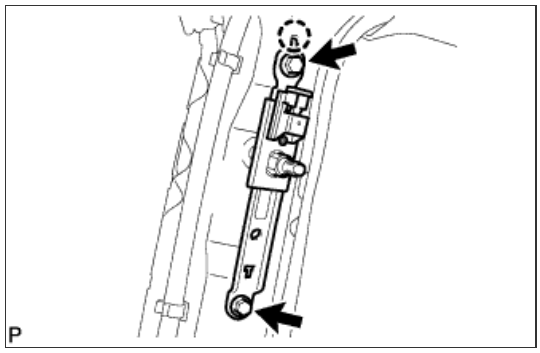

2. INSTALL REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH

NOTICE:

w/ Pretensioner:

When installing the retractor, make sure the claws of the vehicle (labeled "a" in the illustration) only contact the installation areas of the retractor.


a. Align the claws with the seat belt positioning holes and install the retractor of the seat belt as shown in the illustration.

b. Install the seat belt with the 2 bolts.


HINT:

First install bolt A, and then install bolt B.

Torque:
for bolt A:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }
for bolt B:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

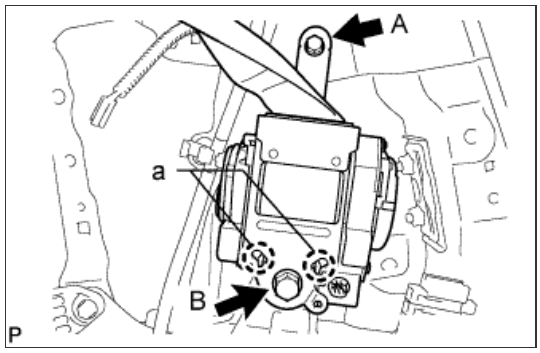


c. w/ Pretensioner:
Connect the pretensioner connector as shown in the illustration.

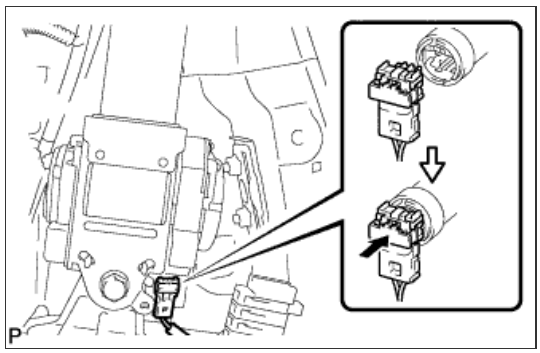

d. Install the seat belt shoulder anchor with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

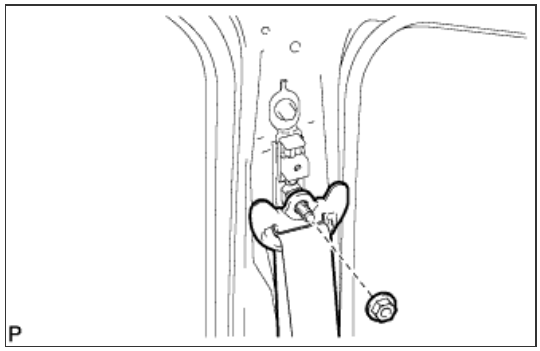


3. INSTALL REAR FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. Pass the seat belt anchor through the quarter trim garnish.

b. Attach the clip and 2 guides to install the quarter trim garnish.


c. Install the screw.

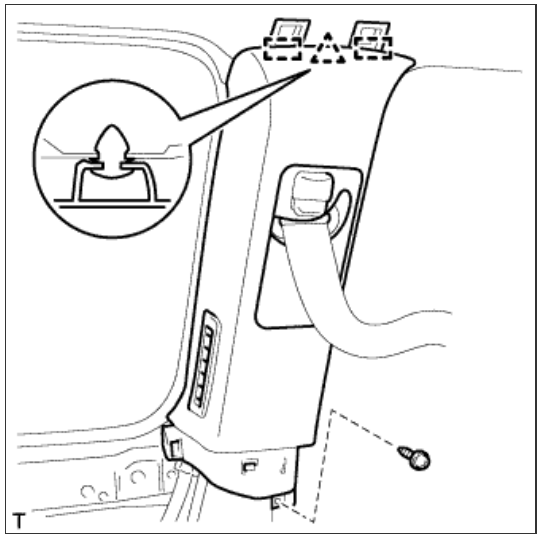

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

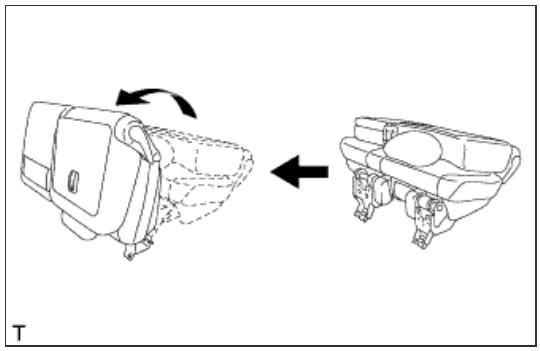

a. w/o Tonneau Cover:


i. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

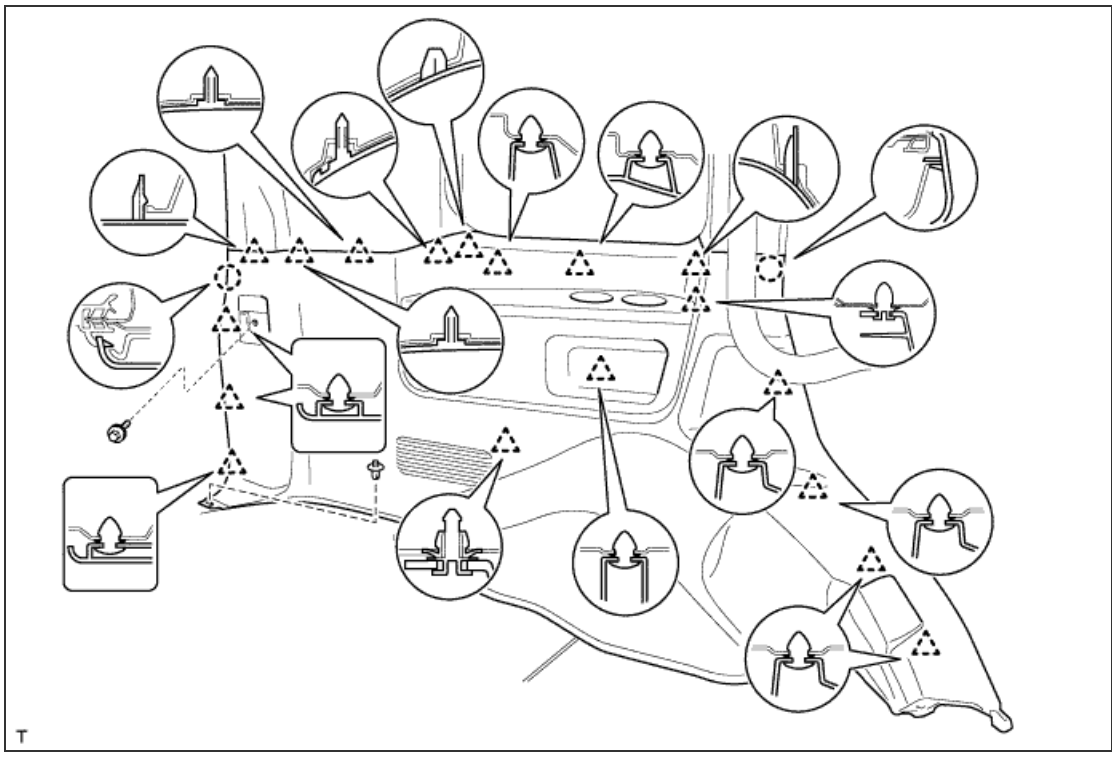

b. w/ Tonneau Cover:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the screw and clip.

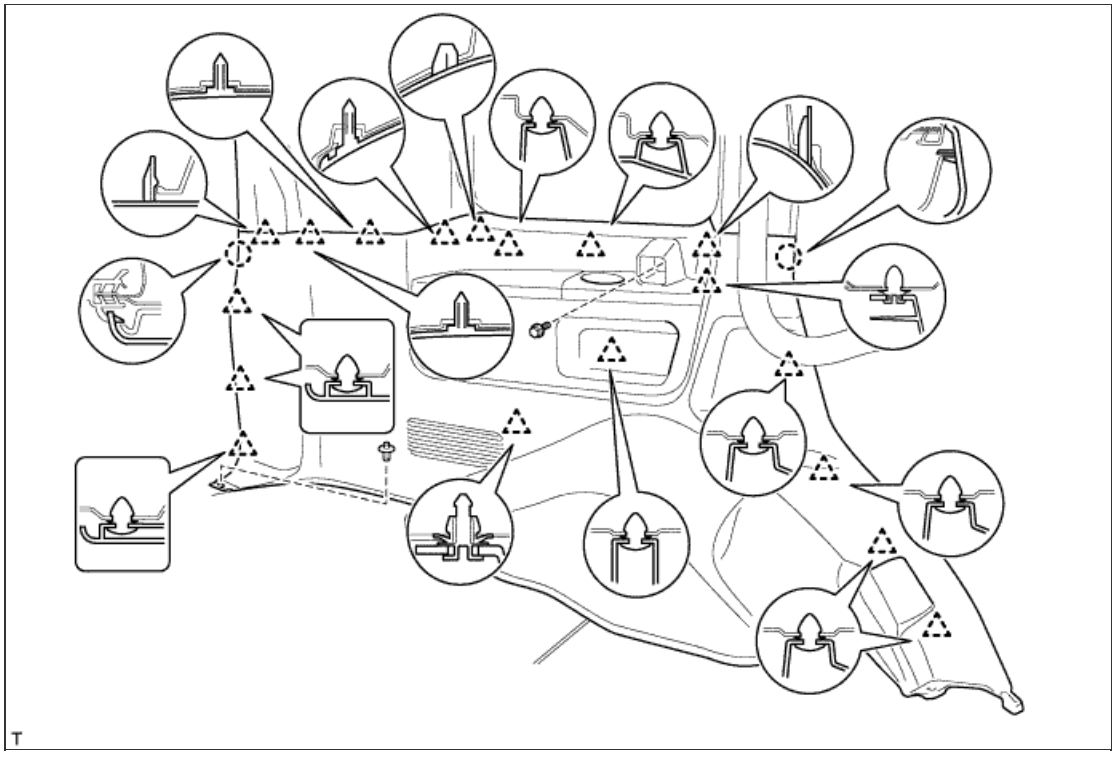


c. w/ Rear No. 2 Seat, for LH side:

i. Install the rear No. 2 seat belt anchor LH with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

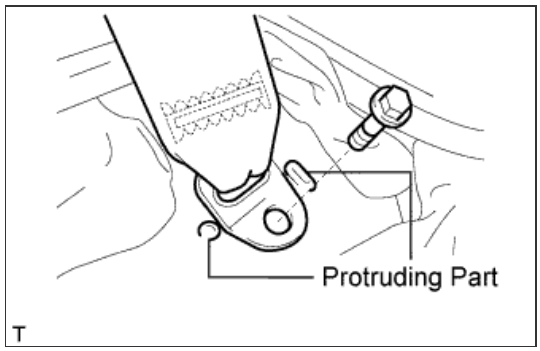


d. w/ Rear No. 2 Seat, for RH side:

i. Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

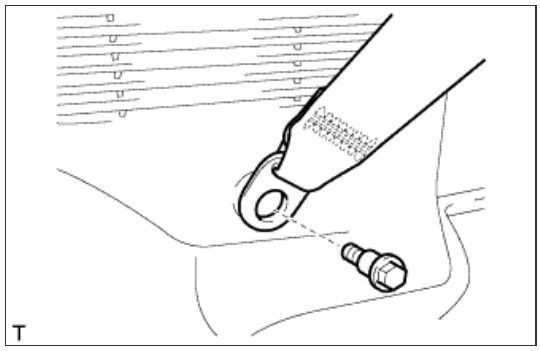


ii. Attach the 3 claws to install the cover.

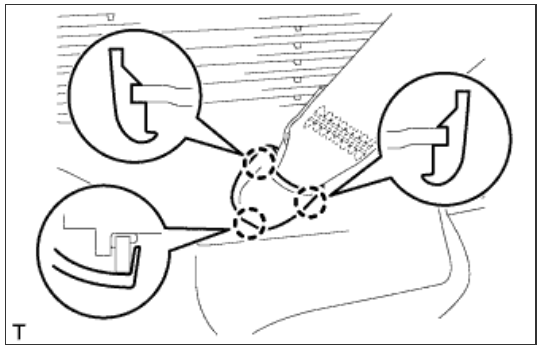


e. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

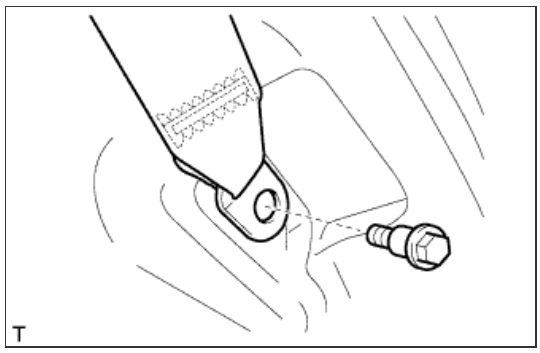


f. Attach the 3 claws to install the cover.

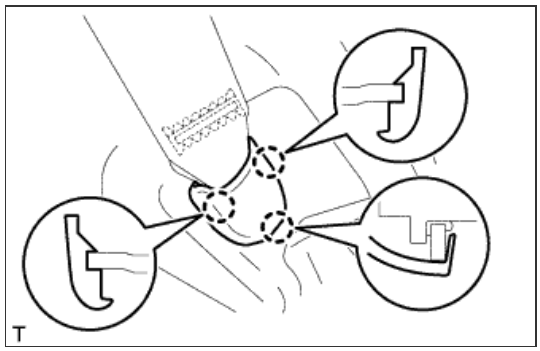

5. INSTALL REAR NO. 2 SEAT COVER BEZEL

a. Attach the 6 clips to install the rear No. 2 seat cover bezel.

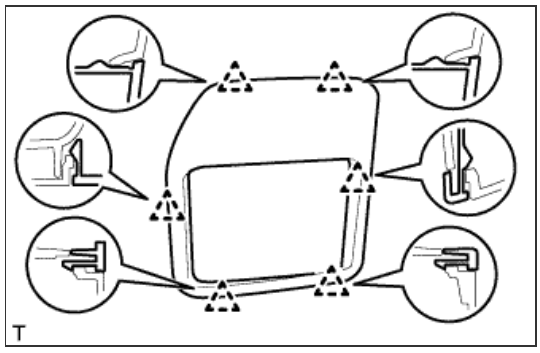


6. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to install the tonneau cover holder cap on the other side.


a. Attach the 2 claws to install the tonneau cover holder cap.

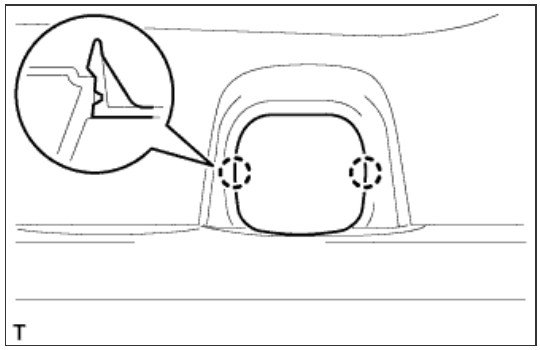

7. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

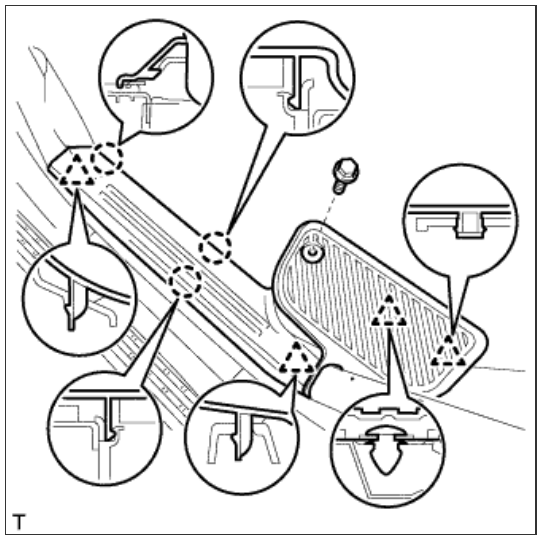


8. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

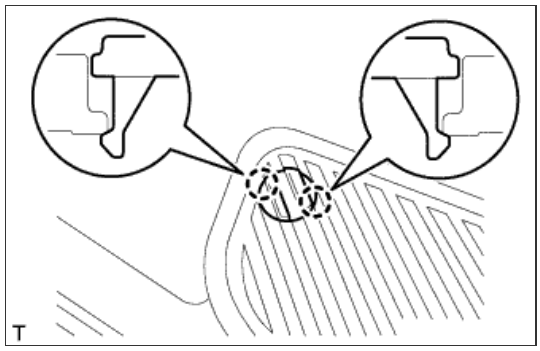

9. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the 6 clips to install the support plate.

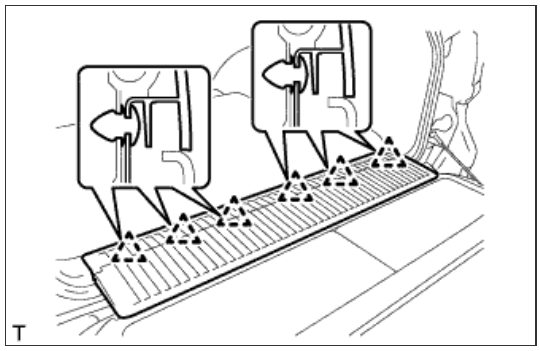

10. INSTALL REAR NO. 2 SEAT ASSEMBLY (w/ Rear No. 2 Seat)

a. Install the rear No. 2 seat assembly (Click here).

11. INSTALL TONNEAU COVER ASSEMBLY

a. Install the tonneau cover assembly.

12. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

13. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**


1. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Align the anchor plate positioning hole with the claw, and install the anchor plate with the 2 bolts.

HINT:

First install the upper bolt, and then install the lower bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

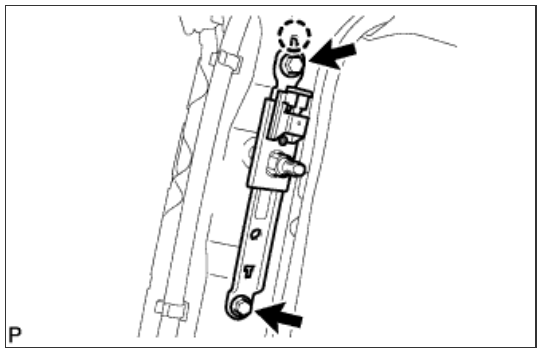

2. INSTALL REAR NO. 1 SEAT OUTER BELT ASSEMBLY LH

NOTICE:

w/ Pretensioner:

When installing the retractor, make sure the claws of the vehicle (labeled "a" in the illustration) only contact the installation areas of the retractor.


a. Align the claws with the seat belt positioning holes and install the retractor of the seat belt as shown in the illustration.

b. Install the seat belt with the 2 bolts.


HINT:

First install bolt A, and then install bolt B.

Torque:
for bolt A:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }
for bolt B:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

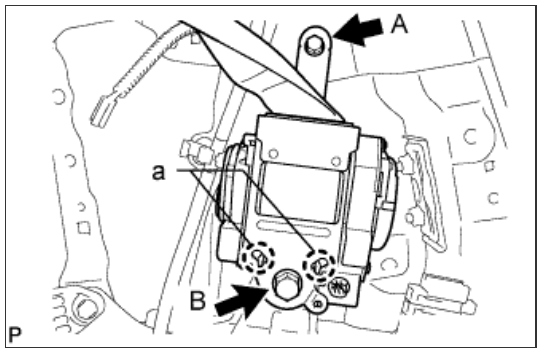


c. w/ Pretensioner:
Connect the pretensioner connector as shown in the illustration.

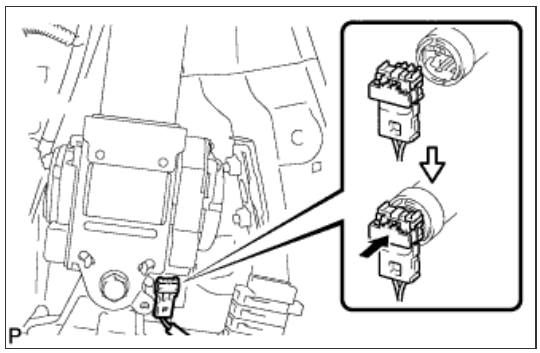

d. Install the seat belt shoulder anchor with the nut.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

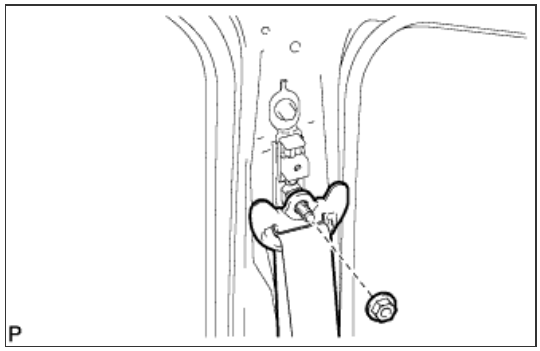


3. INSTALL REAR FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. Pass the seat belt anchor through the quarter trim garnish.

b. Attach the clip and 2 guides to install the quarter trim garnish.


c. Install the screw.

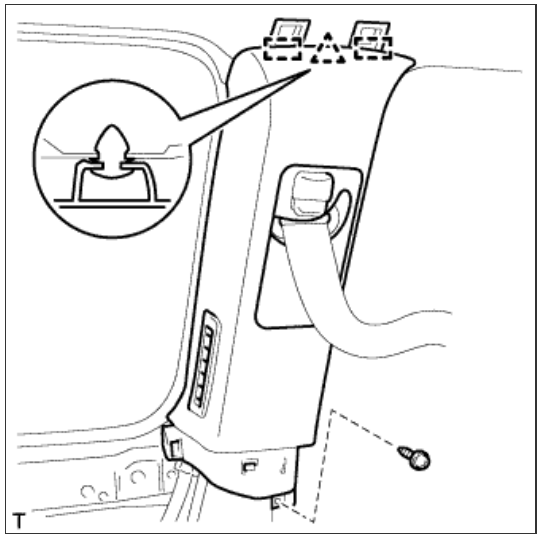

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

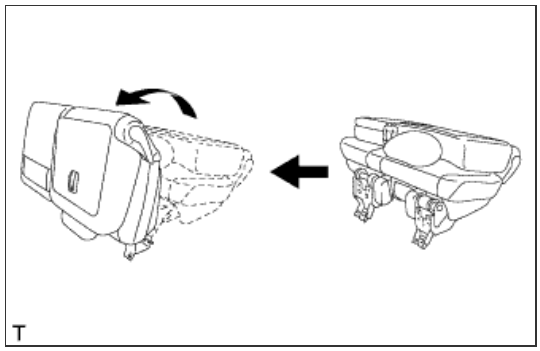

a. w/o Tonneau Cover:


i. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

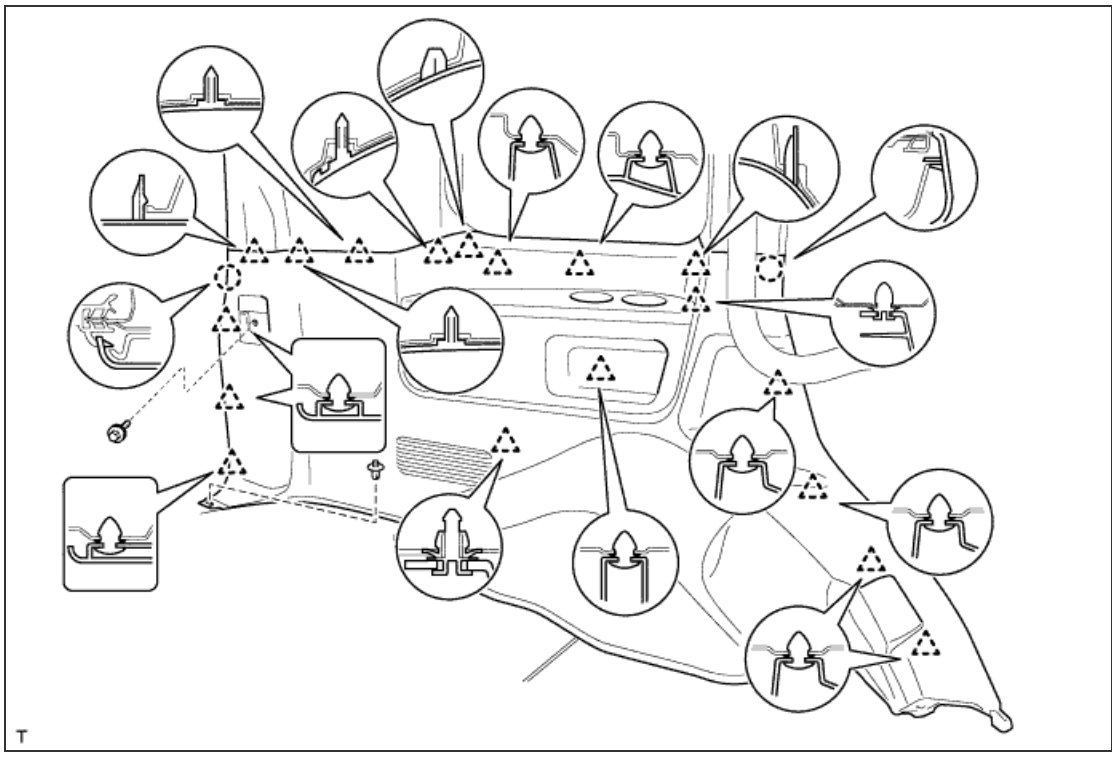

b. w/ Tonneau Cover:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the screw and clip.

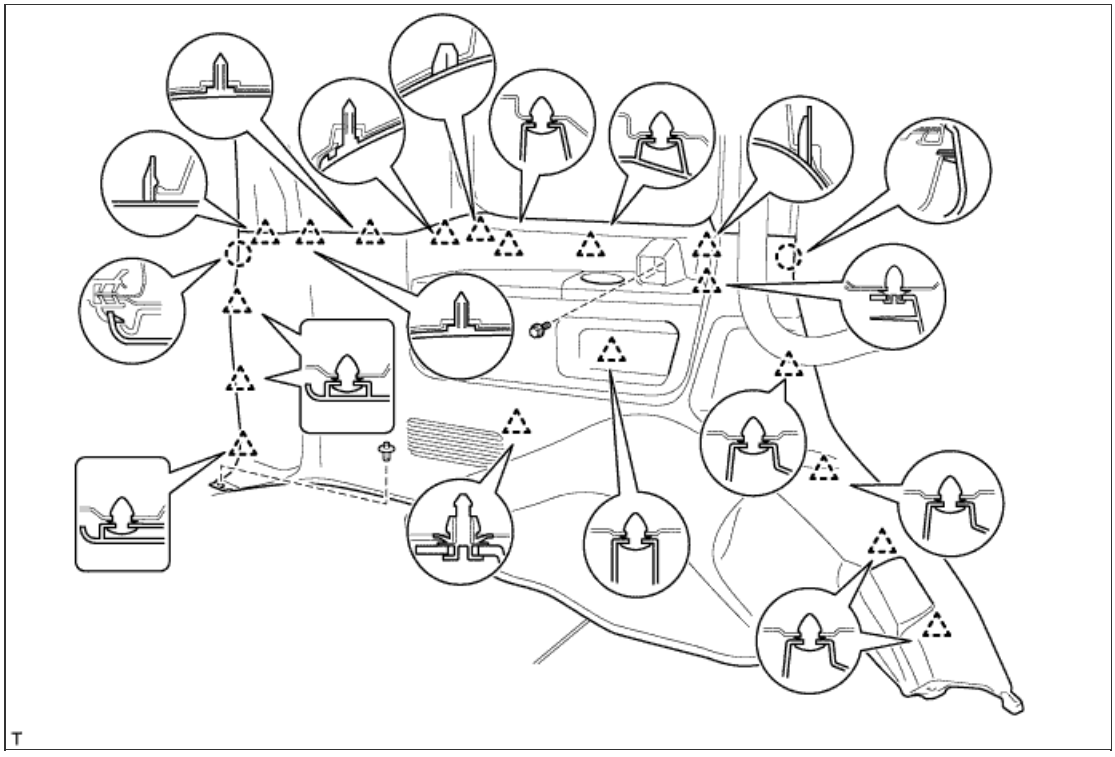


c. w/ Rear No. 2 Seat, for LH side:

i. Install the rear No. 2 seat belt anchor LH with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

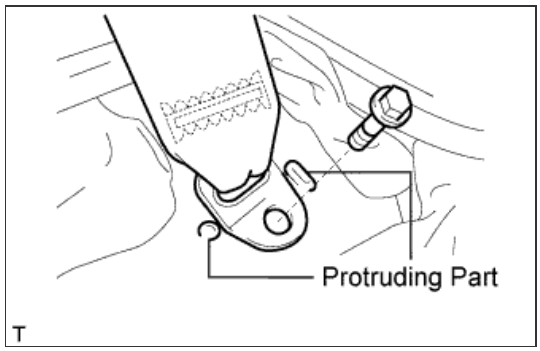


d. w/ Rear No. 2 Seat, for RH side:

i. Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

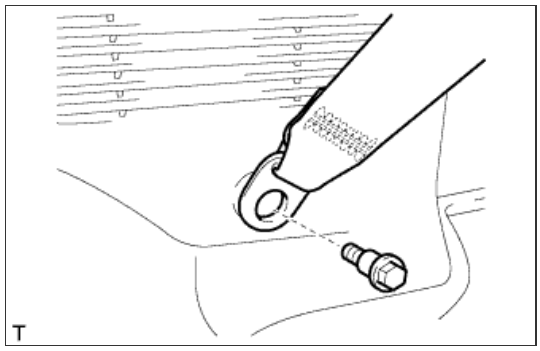


ii. Attach the 3 claws to install the cover.

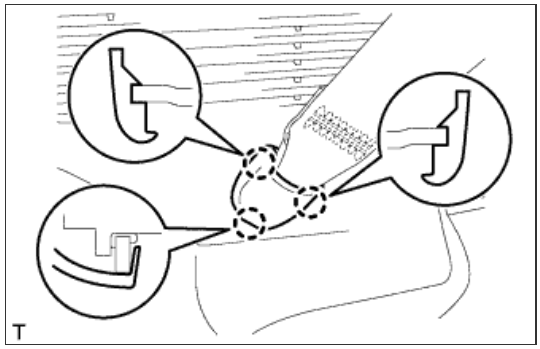


e. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

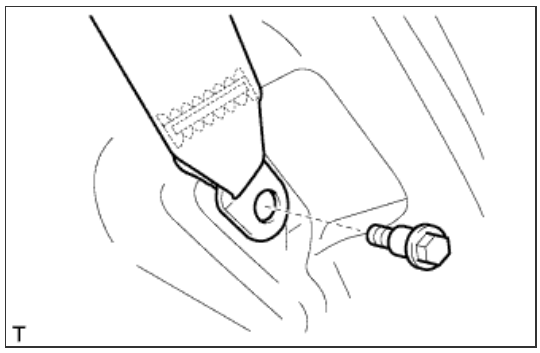


f. Attach the 3 claws to install the cover.

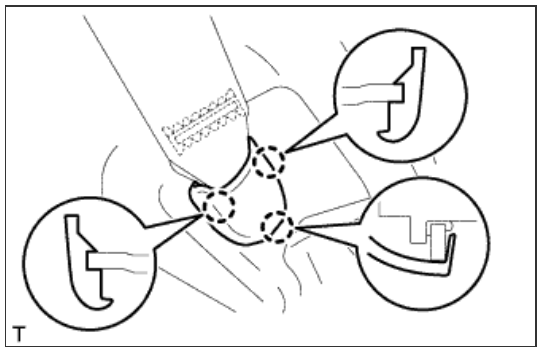

5. INSTALL REAR NO. 2 SEAT COVER BEZEL

a. Attach the 6 clips to install the rear No. 2 seat cover bezel.

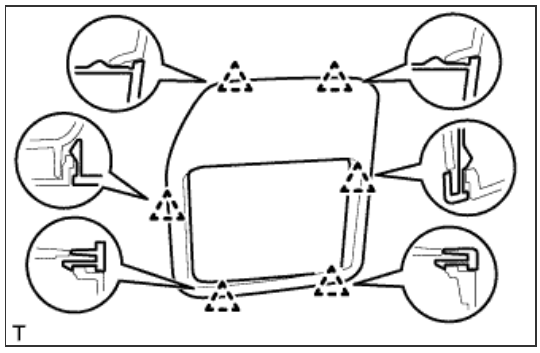


6. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to install the tonneau cover holder cap on the other side.


a. Attach the 2 claws to install the tonneau cover holder cap.

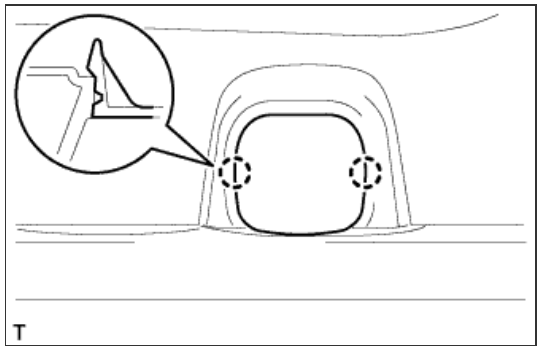

7. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

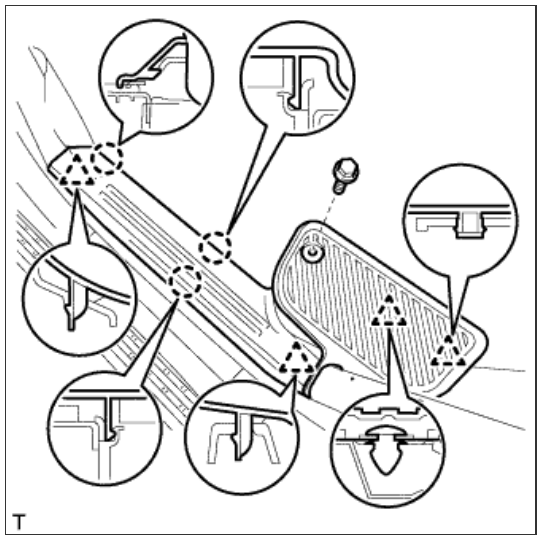


8. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

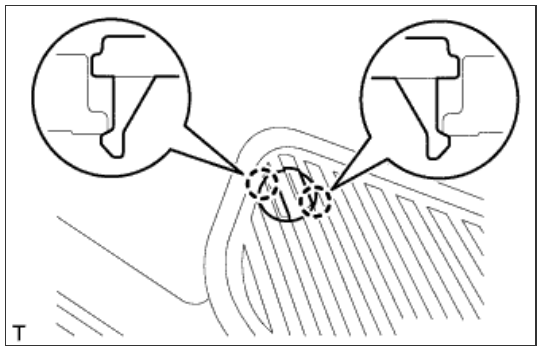

9. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the 6 clips to install the support plate.

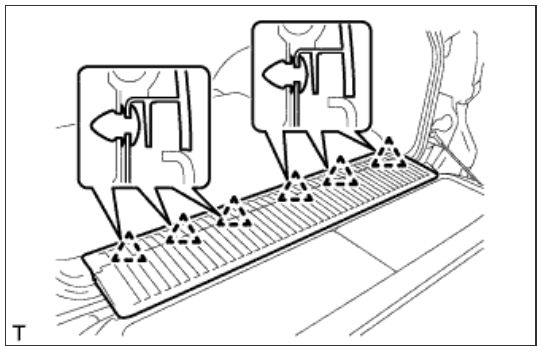

10. INSTALL REAR NO. 2 SEAT ASSEMBLY (w/ Rear No. 2 Seat)

a. Install the rear No. 2 seat assembly (Click here).

11. INSTALL TONNEAU COVER ASSEMBLY


a. Install the tonneau cover assembly.

12. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

13. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

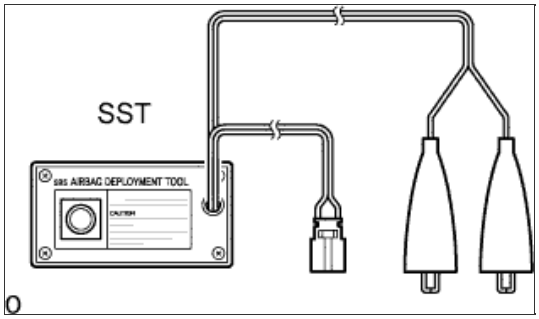

HINT:

When scrapping vehicles equipped with a seat belt pretensioner or disposing of a rear seat outer belt (with seat belt pretensioner), always first activate the seat belt pretensioner in accordance with the procedures described below. If any abnormality occurs during activation of the seat belt pretensioner, contact the SERVICE DEPART E of DISTRIBUTOR.

CAUTION:

- **Never dispose of a rear seat outer belt that has an un-activated pretensioner.**
- **The seat belt pretensioner produces a loud, exploding sound when it activates. Perform the operation where it will not be a nuisance to nearby people.**
- **When activating a rear seat outer belt (with seat belt pretensioner), stand at least 10 m (32.8 ft.) away from the rear seat outer belt.**
- **Use gloves and safety glasses when handling a rear seat outer belt with an activated pretensioner.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a rear seat outer belt that has an activated pretensioner.**
- **Perform procedures in a place away from electrical interference.**
- **When activating the seat belt pretensioner, always use the specified SST (SRS airbag deployment tool).**

1. DISPOSE OF REAR NO. 1 SEAT OUTER BELT ASSEMBLY (WHEN INSTALLED IN VEHICLE)


HINT:

Prepare a battery to activate the seat belt pretensioner.

a. Check if SST is functioning properly.

CAUTION:


When activating the seat belt pretensioner, always use the specified SST.

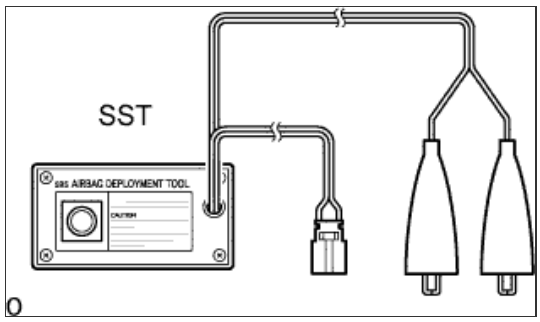


i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the battery negative (-) terminal.

HINT:

Do not connect the yellow connector. The yellow connector is used to connect to the seat belt pretensioner.

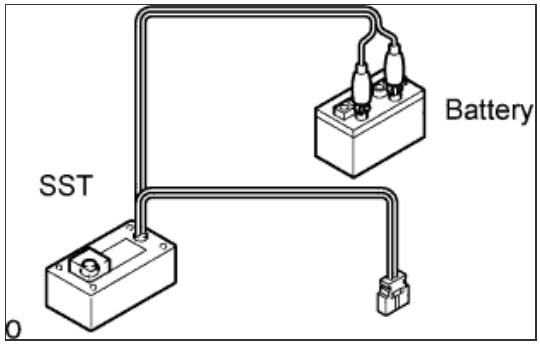

ii. Press SST activation switch and check that the LED of SST activation switch illuminates.

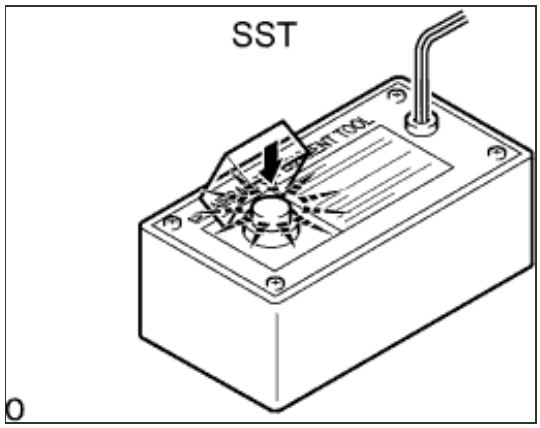

CAUTION:

If the LED illuminates when the activation switch is not being pressed, SST may be malfunctioning. Replace SST with a new one.

b. Disconnect SST from the battery.

c. Disconnect the pretensioner connector.

i. Disconnect the cable from the negative (-) battery terminal.

ii. Remove the rear No. 2 seat (Click here).

iii. Rear floor mat rear support plate (Click here).


iv. Remove the rear step cover (Click here).

v. Remove the rear door scuff plate (Click here).

vi. Remove the rear seat cover bezel (Click here).

vii. Remove the front quarter trim panel (Click here).


viii. Disconnect the pretensioner connector as shown in the illustration.

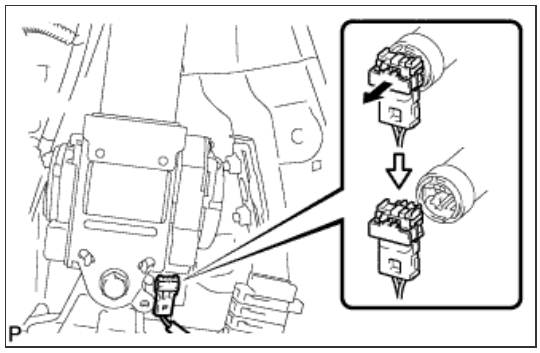

d. Prepare SST for activation of the seat belt pretensioner.

i. Install the floor anchor of the seat belt.

ii. Connect SST (A) to SST (B). Then connect the connector of SST (B) to the seat belt pretensioner.

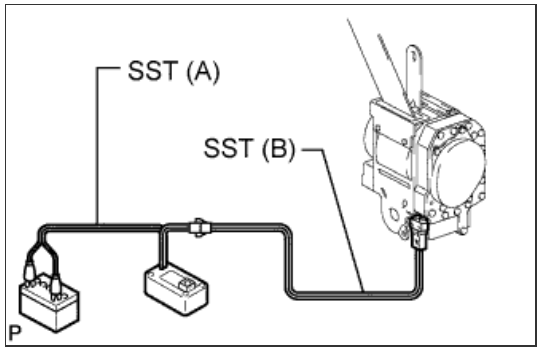

SST

09082-00700
09082-00770

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

iii. ove SST at least 10 m (32.8 ft.) away from the rear of the vehicle.

iv. Close all the doors and windows of the vehicle.


HINT:

Leave a gap in one of the windows for inserting SST wire harness.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the negative (-) terminal.

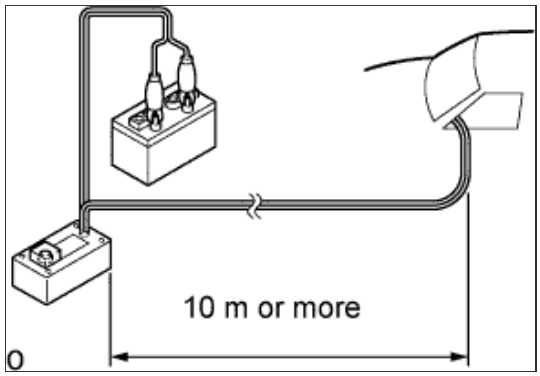

e. Activate the seat belt pretensioner.

i. Confirm that no one is inside the vehicle or within 10 m (32.8 ft.) of the vehicle.

ii. Press SST activation switch to activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates at the same time SST activation switch LED illuminates.

f. Dispose of the rear seat outer belt (with the seat belt pretensioner).

CAUTION:

- **Do not touch the rear seat outer belt for at least 30 minutes after the seat belt pretensioner has been activated. It is very hot.**
- **Use gloves and safety glasses when handling a rear seat outer belt whose pretensioner has been activated.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a rear seat outer belt that has an activated pretensioner.**


HINT:

When scrapping a vehicle, activate the seat belt pretensioner, and then scrap the vehicle with the activated rear seat outer belt installed.

2. DISPOSE OF REAR NO. 1 SEAT OUTER BELT ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedures listed below when activating the seat belt pretensioner.

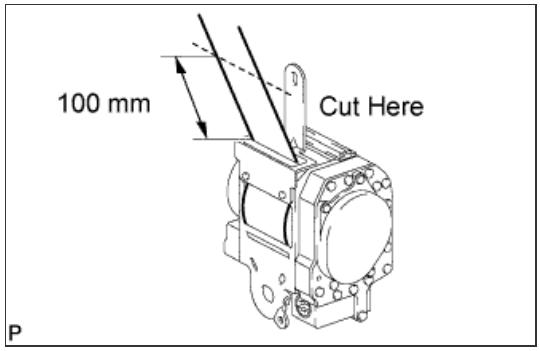

a. Remove the rear No. 1 seat outer belt (Click here).

i. Wind the seat belt with the retractor.

ii. When the seat belt is sufficiently wound, cut the seat belt approximately 100 mm (0.393 in.) from the retractor as shown in the illustration.

HINT:

The seat belt is designed so that winding the seat belt before pretensioner activation will decrease the pulling power of the seat belt during pretensioner activation.


b. Check if SST is functioning properly.

SST


09082-00770 09082-00700

CAUTION:

When activating a seat belt pretensioner, always use the specified SST.

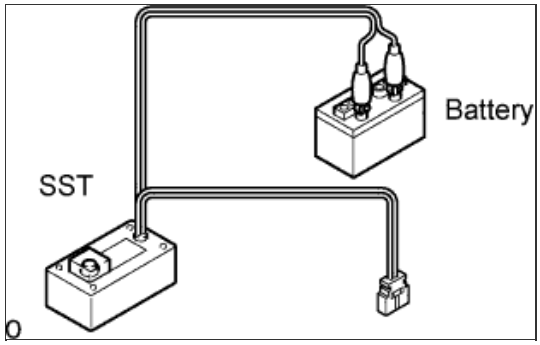


c. Prepare SST for activation of the seat belt pretensioner.

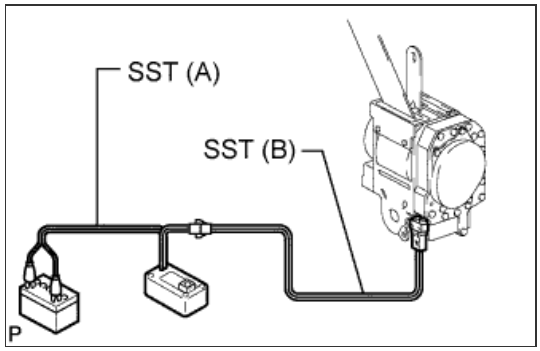


i. Connect SST (A) to SST (B). Then connect the connector of SST (B) to the seat belt pretensioner.

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

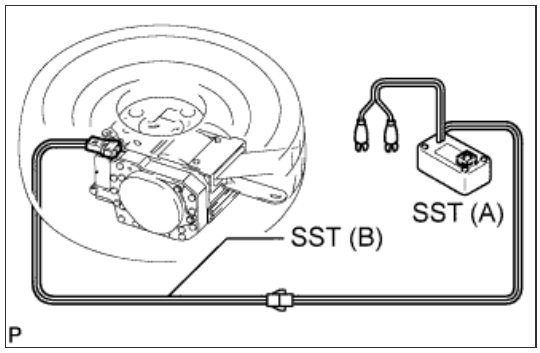

ii. Place the rear seat outer belt on the ground and cover it with a tire (with wheel).

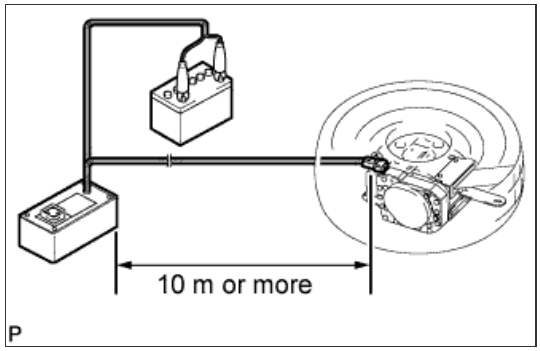

iii. ove SST at least 10 m (32.8 ft.) away from the wheel.

NOTICE:

Take care not to damage SST wire harness.

d. Activate the seat belt pretensioner.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the battery negative (-) terminal.

ii. Check that no one is within 10 m (32.8 ft.) of the wheel.

iii. Press SST activation switch to activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates at the same time SST activation switch LED illuminates.


e. Dispose of the rear seat outer belt (with the seat belt pretensioner).

CAUTION:


- **Do not touch the rear seat outer belt for at least 30 minutes after the seat belt pretensioner has been activated. It is very hot.**
- **Use gloves and safety glasses when handling a rear seat outer belt whose pretensioner has been activated.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a rear seat outer belt that has an activated pretensioner.**

i. Remove the tire (with wheel) and SST.

ii. Place the rear seat outer belt in a plastic bag, tie the end tightly and dispose of it in the same way as other general parts.

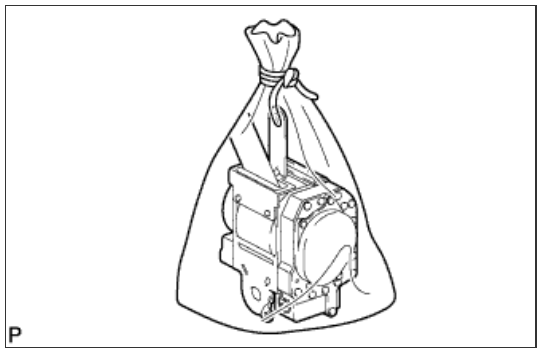
P

for Preparation Click here

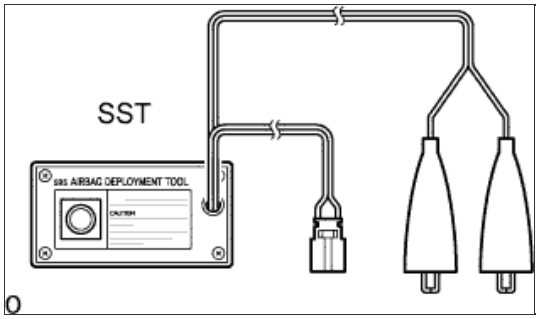

HINT:

When scrapping vehicles equipped with a seat belt pretensioner or disposing of a rear seat outer belt (with seat belt pretensioner), always first activate the seat belt pretensioner in accordance with the procedures described below. If any abnormality occurs during activation of the seat belt pretensioner, contact the SERVICE DEPART E of DISTRIBUTOR.

CAUTION:

- **Never dispose of a rear seat outer belt that has an un-activated pretensioner.**
- **The seat belt pretensioner produces a loud, exploding sound when it activates. Perform the operation where it will not be a nuisance to nearby people.**
- **When activating a rear seat outer belt (with seat belt pretensioner), stand at least 10 m (32.8 ft.) away from the rear seat outer belt.**
- **Use gloves and safety glasses when handling a rear seat outer belt with an activated pretensioner.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a rear seat outer belt that has an activated pretensioner.**
- **Perform procedures in a place away from electrical interference.**
- **When activating the seat belt pretensioner, always use the specified SST (SRS airbag deployment tool).**

1. DISPOSE OF REAR NO. 1 SEAT OUTER BELT ASSEMBLY (WHEN INSTALLED IN VEHICLE)


HINT:

Prepare a battery to activate the seat belt pretensioner.

a. Check if SST is functioning properly.

CAUTION:


When activating the seat belt pretensioner, always use the specified SST.

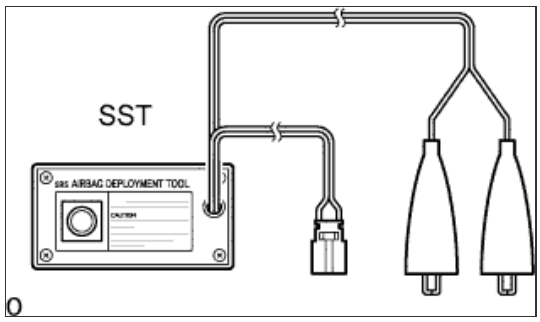


i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the battery negative (-) terminal.

HINT:

Do not connect the yellow connector. The yellow connector is used to connect to the seat belt pretensioner.

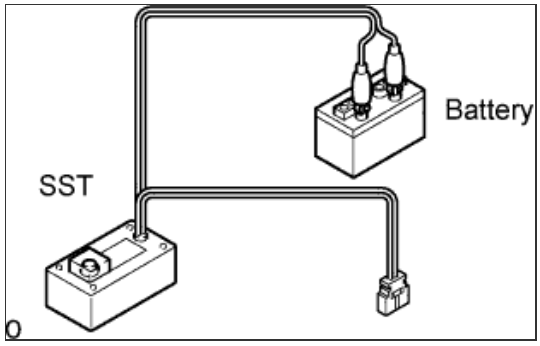

ii. Press SST activation switch and check that the LED of SST activation switch illuminates.

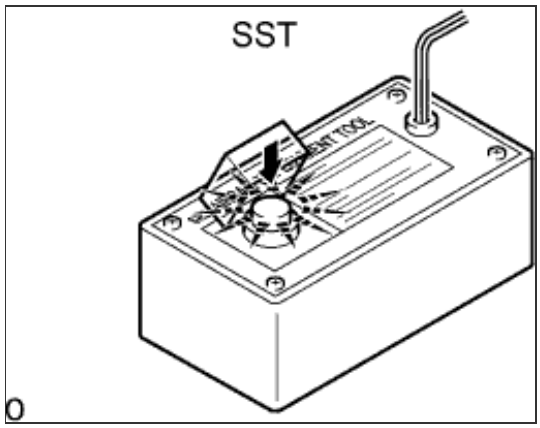

CAUTION:

If the LED illuminates when the activation switch is not being pressed, SST may be malfunctioning. Replace SST with a new one.

b. Disconnect SST from the battery.

c. Disconnect the pretensioner connector.

i. Disconnect the cable from the negative (-) battery terminal.

ii. Remove the rear No. 2 seat (Click here).

iii. Rear floor mat rear support plate (Click here).


iv. Remove the rear step cover (Click here).

v. Remove the rear door scuff plate (Click here).

vi. Remove the rear seat cover bezel (Click here).

vii. Remove the front quarter trim panel (Click here).


viii. Disconnect the pretensioner connector as shown in the illustration.

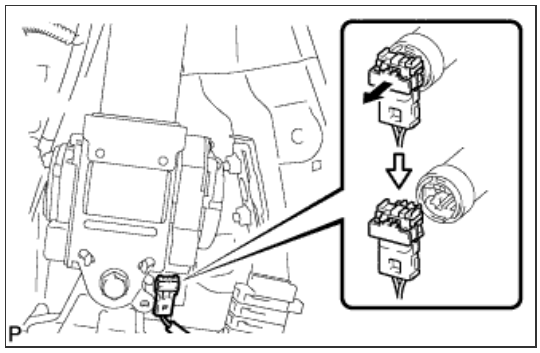

d. Prepare SST for activation of the seat belt pretensioner.

i. Install the floor anchor of the seat belt.

ii. Connect SST (A) to SST (B). Then connect the connector of SST (B) to the seat belt pretensioner.

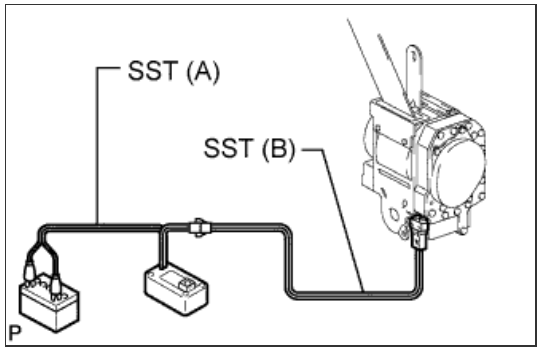

SST

09082-00700
09082-00770

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

iii. ove SST at least 10 m (32.8 ft.) away from the rear of the vehicle.

iv. Close all the doors and windows of the vehicle.


HINT:

Leave a gap in one of the windows for inserting SST wire harness.

NOTICE:

Take care not to damage SST wire harness.

v. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the negative (-) terminal.

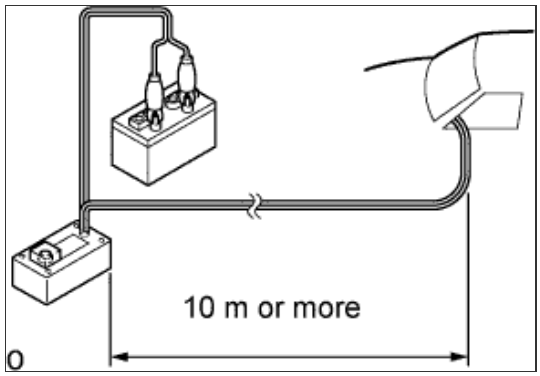

e. Activate the seat belt pretensioner.

i. Confirm that no one is inside the vehicle or within 10 m (32.8 ft.) of the vehicle.

ii. Press SST activation switch to activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates at the same time SST activation switch LED illuminates.

f. Dispose of the rear seat outer belt (with the seat belt pretensioner).

CAUTION:

- **Do not touch the rear seat outer belt for at least 30 minutes after the seat belt pretensioner has been activated. It is very hot.**
- **Use gloves and safety glasses when handling a rear seat outer belt whose pretensioner has been activated.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a rear seat outer belt that has an activated pretensioner.**


HINT:

When scrapping a vehicle, activate the seat belt pretensioner, and then scrap the vehicle with the activated rear seat outer belt installed.

2. DISPOSE OF REAR NO. 1 SEAT OUTER BELT ASSEMBLY (WHEN NOT INSTALLED IN VEHICLE)

NOTICE:

Be sure to follow the procedures listed below when activating the seat belt pretensioner.

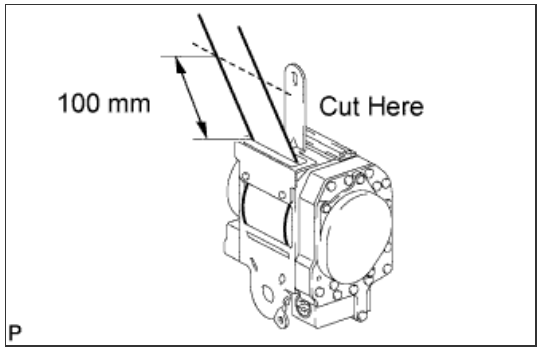

a. Remove the rear No. 1 seat outer belt (Click here).

i. Wind the seat belt with the retractor.

ii. When the seat belt is sufficiently wound, cut the seat belt approximately 100 mm (0.393 in.) from the retractor as shown in the illustration.

HINT:

The seat belt is designed so that winding the seat belt before pretensioner activation will decrease the pulling power of the seat belt during pretensioner activation.


b. Check if SST is functioning properly.

SST


09082-00770 09082-00700

CAUTION:

When activating a seat belt pretensioner, always use the specified SST.

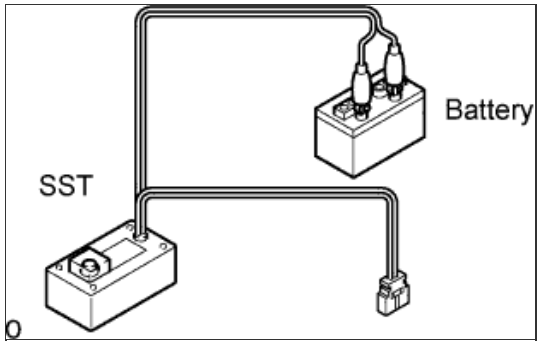


c. Prepare SST for activation of the seat belt pretensioner.

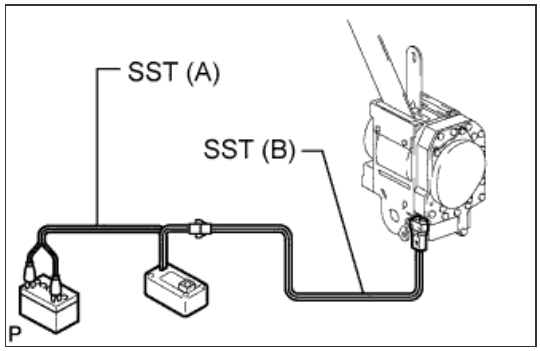


i. Connect SST (A) to SST (B). Then connect the connector of SST (B) to the seat belt pretensioner.

NOTICE:

To avoid damaging SST connector and wire harness, do not lock the secondary lock of the twin lock.

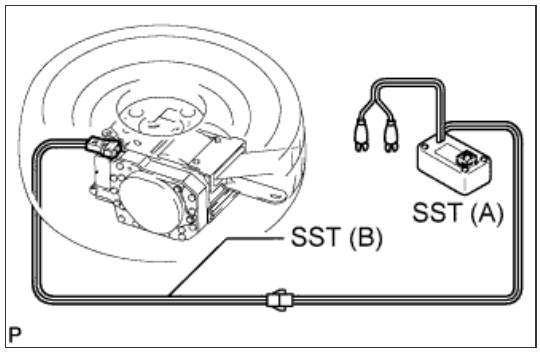

ii. Place the rear seat outer belt on the ground and cover it with a tire (with wheel).

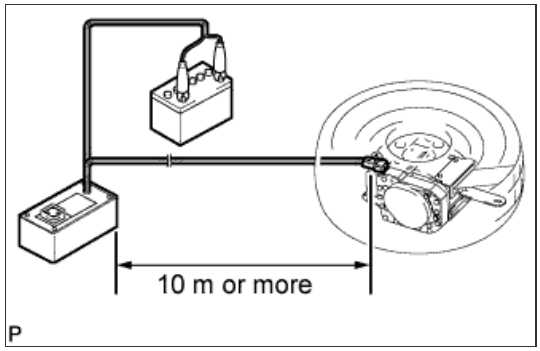

iii. ove SST at least 10 m (32.8 ft.) away from the wheel.

NOTICE:

Take care not to damage SST wire harness.

d. Activate the seat belt pretensioner.

i. Connect the red clip of SST to the battery positive ( ) terminal and the black clip to the battery negative (-) terminal.

ii. Check that no one is within 10 m (32.8 ft.) of the wheel.

iii. Press SST activation switch to activate the seat belt pretensioner.

HINT:

The seat belt pretensioner operates at the same time SST activation switch LED illuminates.


e. Dispose of the rear seat outer belt (with the seat belt pretensioner).

CAUTION:


- **Do not touch the rear seat outer belt for at least 30 minutes after the seat belt pretensioner has been activated. It is very hot.**
- **Use gloves and safety glasses when handling a rear seat outer belt whose pretensioner has been activated.**
- **Always wash your hands with water after completing the disposal.**
- **Do not apply water to a rear seat outer belt that has an activated pretensioner.**


i. Remove the tire (with wheel) and SST.

ii. Place the rear seat outer belt in a plastic bag, tie the end tightly and dispose of it in the same way as other general parts.

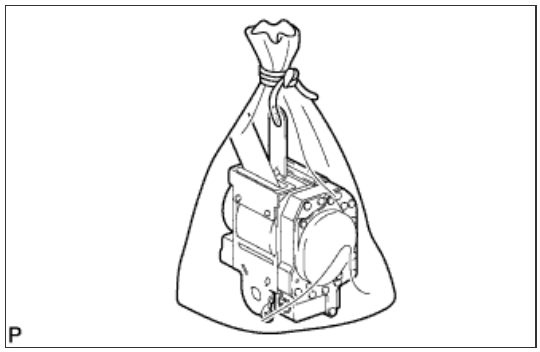
P

for Preparation Click here

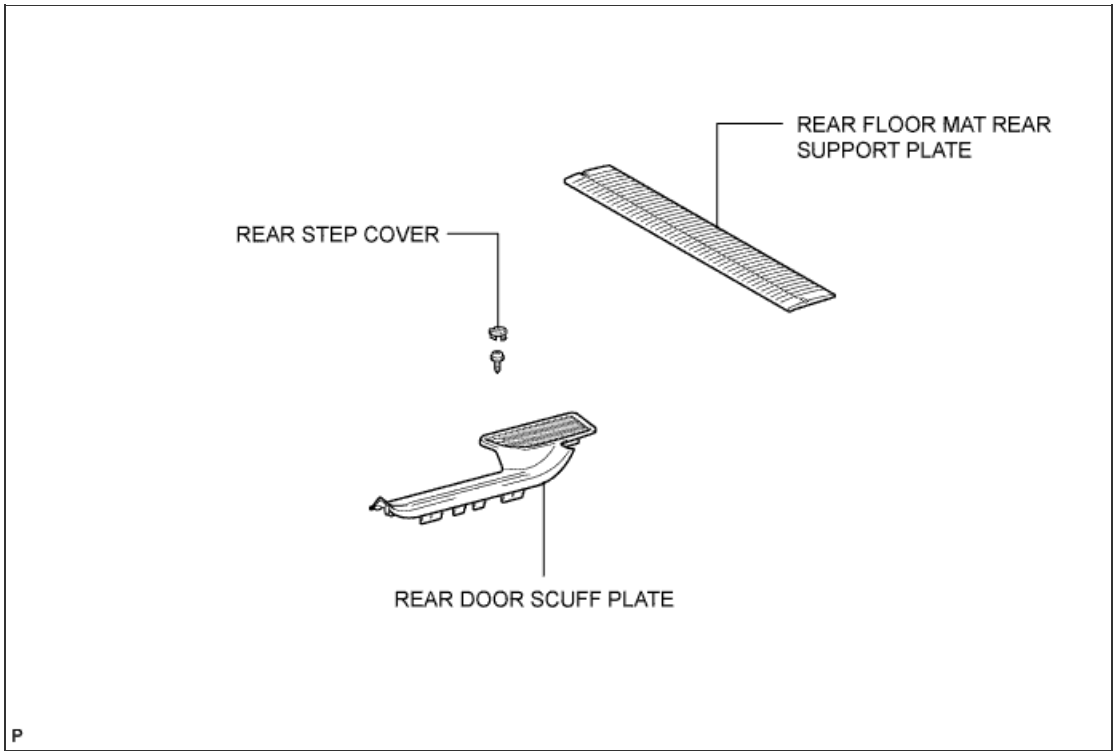

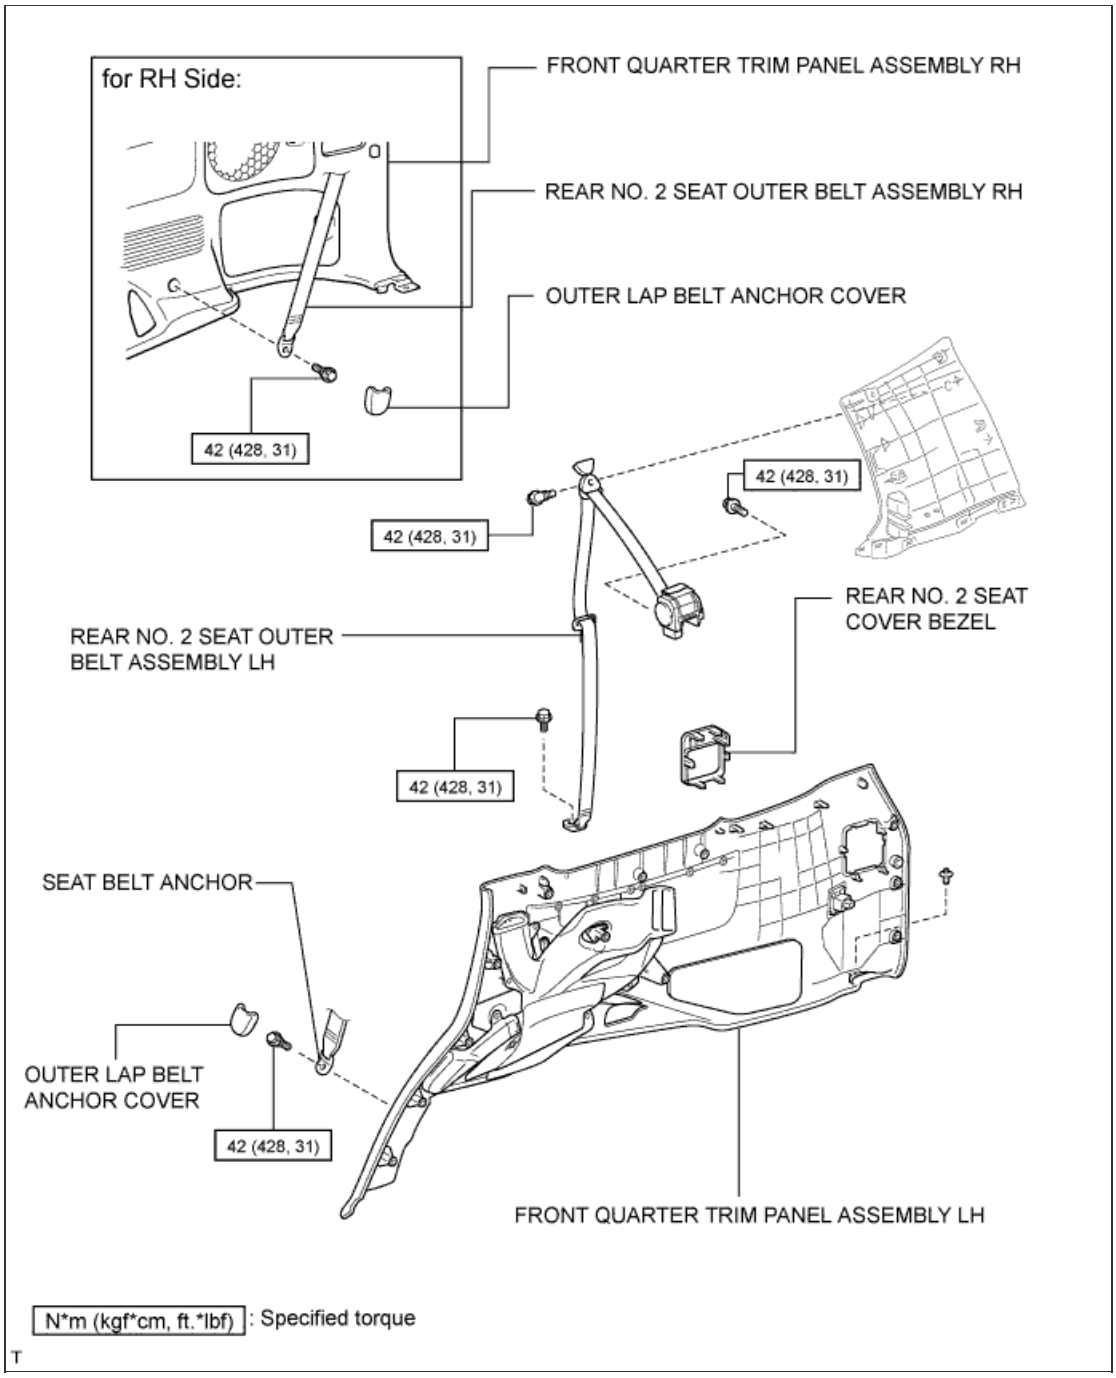
for RH Side:
FRONT QUARTER TRIM PANEL ASSEMBLY RH
REAR NO. 2 SEAT OUTER BELT ASSEMBLY RH
OUTER LAP BELT ANCHOR COVER
42 (428, 31)
42 (428, 31)
42 (428, 31)
REAR NO. 2 SEAT COVER BEZEL
REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH
42 (428, 31)
SEAT BELT ANCHOR
OUTER LAP BELT ANCHOR COVER
42 (428, 31)
FRONT QUARTER TRIM PANEL ASSEMBLY LH
N*m (kgf*cm, ft.*lbf) : Specified torque

T

for Preparation Click here

HINT:


- **Use the same procedures for the RH side and LH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. Remove the rear No. 2 seat assembly (Click here).

2. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

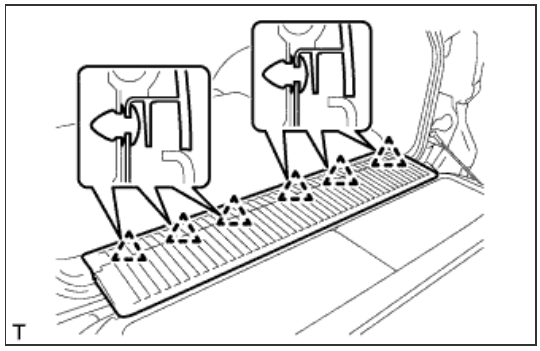


3. REMOVE REAR STEP COVER

HINT:


Use the same procedure to remove the step cover on the other side.

a. Detach the 2 claws and remove the step cover.

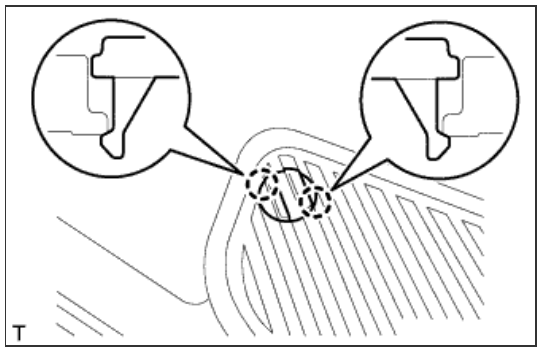


4. REMOVE REAR DOOR SCUFF PLATE LH

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

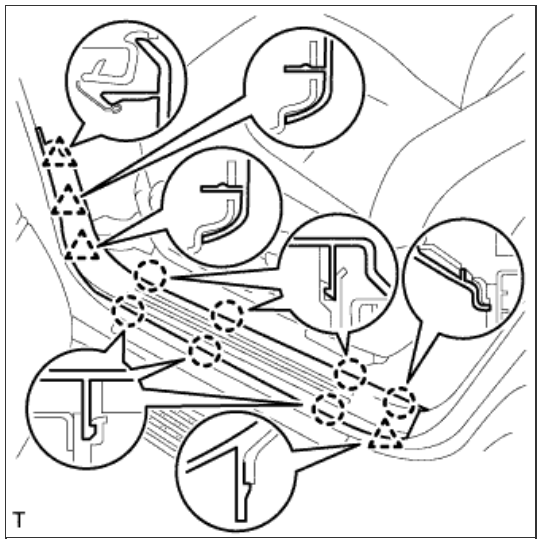

. REMOVE REAR NO. 2 SEAT COVER BEZEL

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

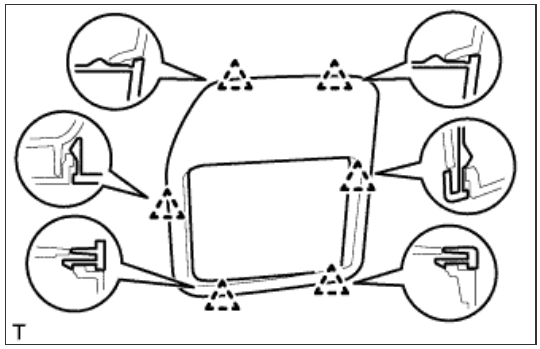



6. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

a. Detach the 3 claws and remove the cover.

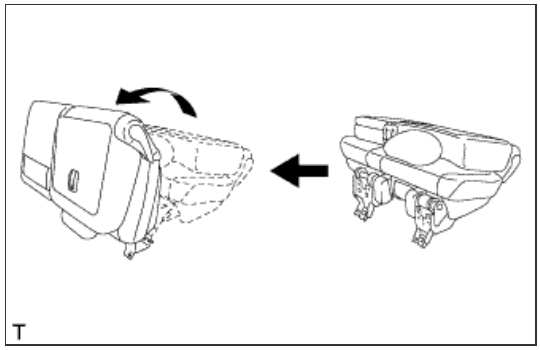

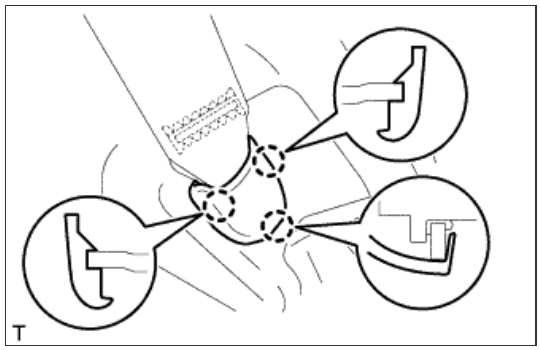


.Remove the bolt and disconnect the rear seat outer belt floor anchor.

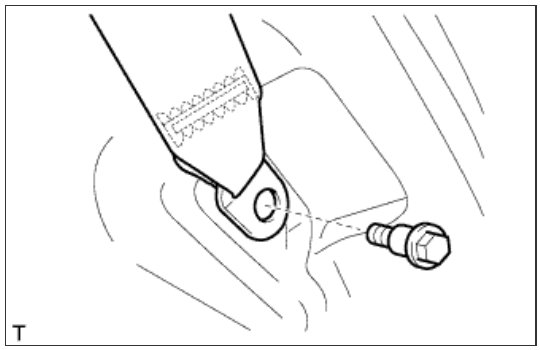


c. for LH Side:

i. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor LH.

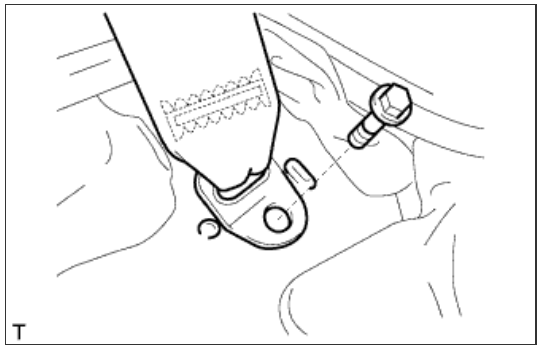


d. for RH Side:

i. Detach the 3 claws and remove the cover.

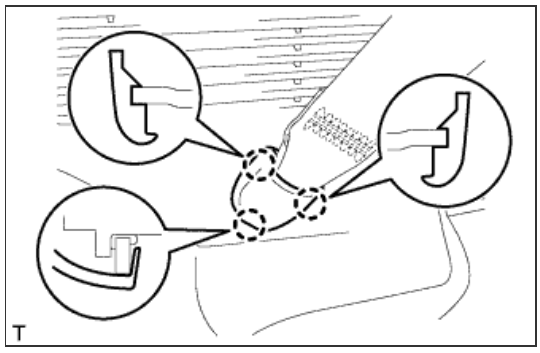


ii. Remove the bolt and disconnect the rear seat outer belt floor anchor RH.

e. Remove the clip and bolt.

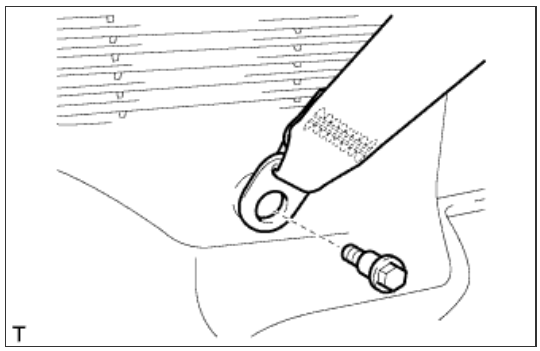

f. Detach the 18 clips and 2 claws.

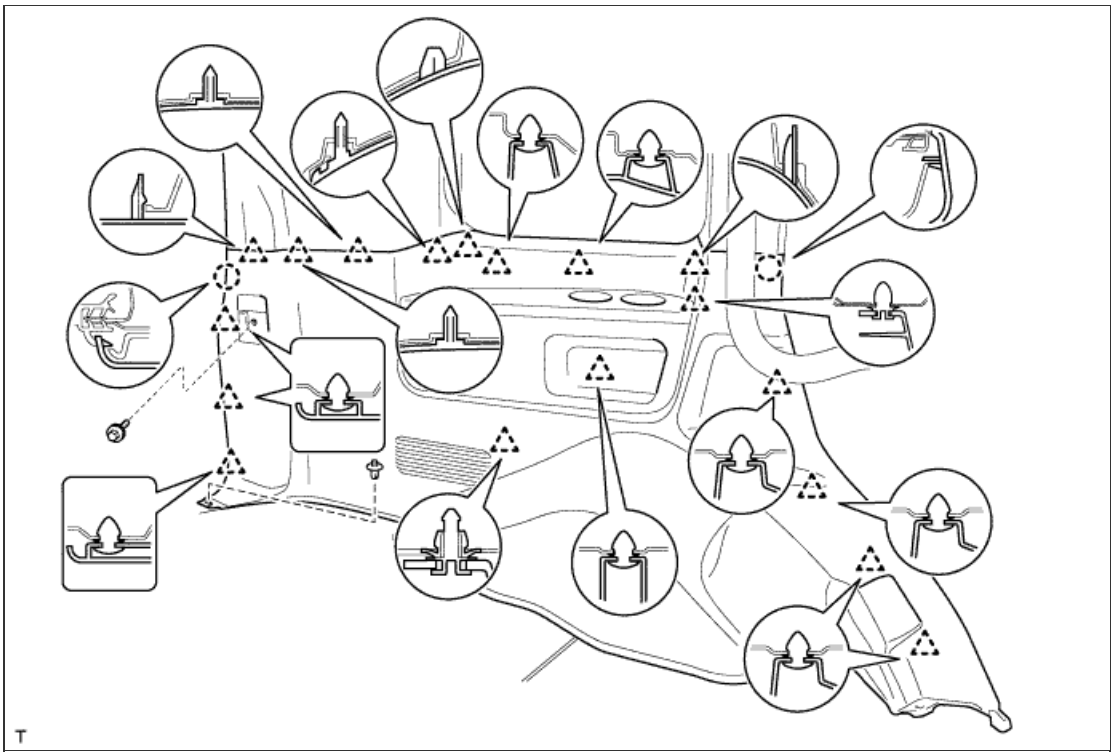

g. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.

h. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

7. REMOVE REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH

a. Remove the bolt and disconnect the seat belt shoulder anchor.


i. Using a screwdriver, detach the 2 claws and open the seat belt anchor cover as shown in the illustration.

HINT:


ape the screwdriver tip before use.



ii. Remove the bolt and seat belt shoulder anchor.

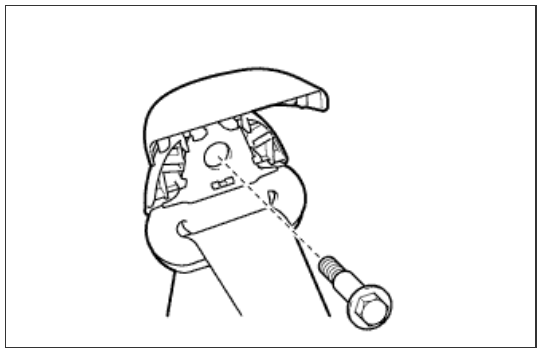

.Remove the bolt and rear No. 2 seat outer belt.

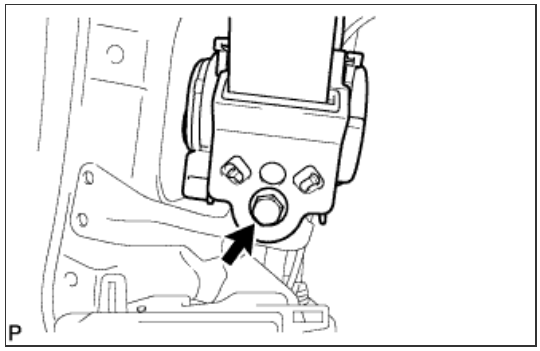

for Preparation Click here

HINT:


- **Use the same procedures for the RH side and LH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. Remove the rear No. 2 seat assembly (Click here).

2. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

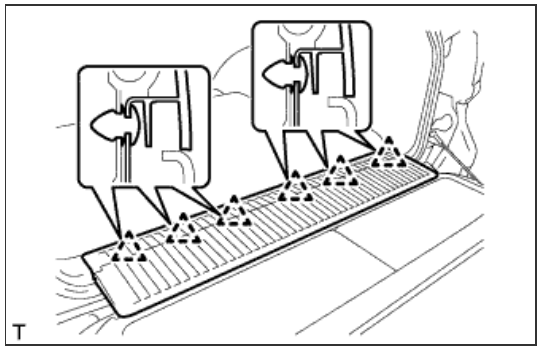


3. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

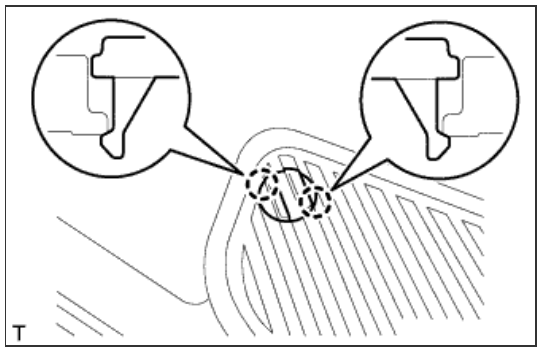

4. REMOVE REAR DOOR SCUFF PLATE LH


a. Remove the screw.

.Detach the 3 claws and 4 clips, and remove the scuff plate.

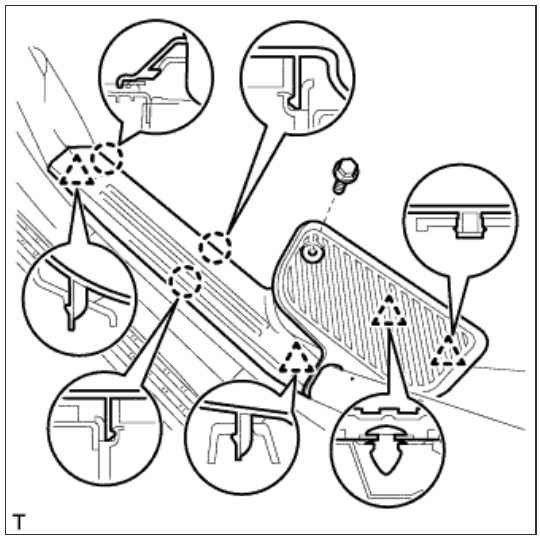

. REMOVE REAR NO. 2 SEAT COVER BEZEL

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

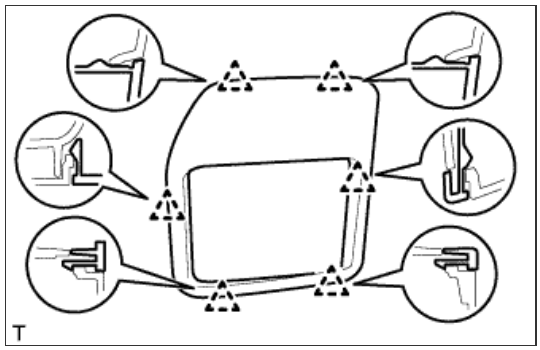



6. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

a. Detach the 3 claws and remove the cover.

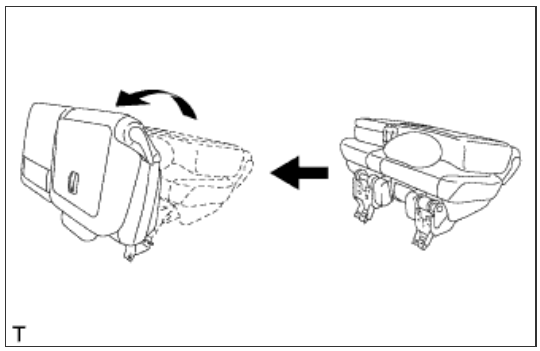

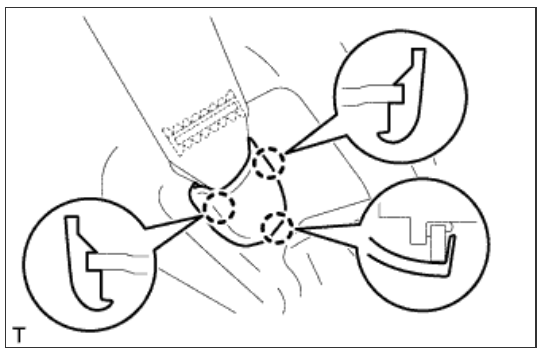


.Remove the bolt and disconnect the rear seat outer belt floor anchor.

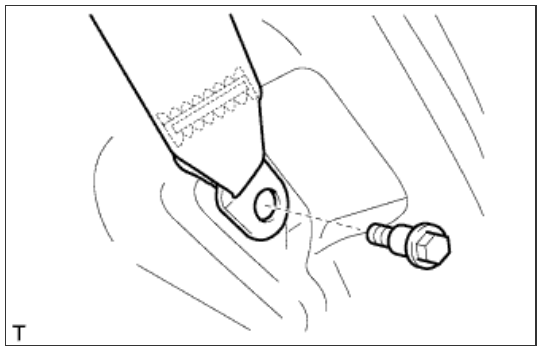


c. for Side:

i. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor .

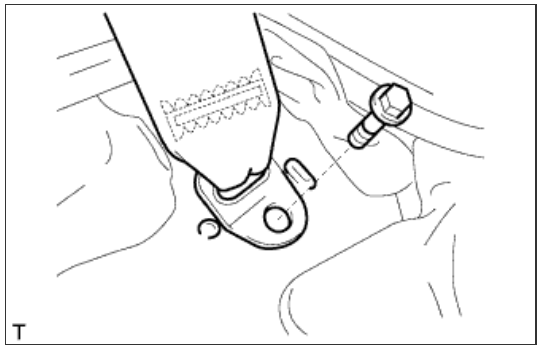


d. for RH Side:

i. Detach the 3 claws and remove the cover.

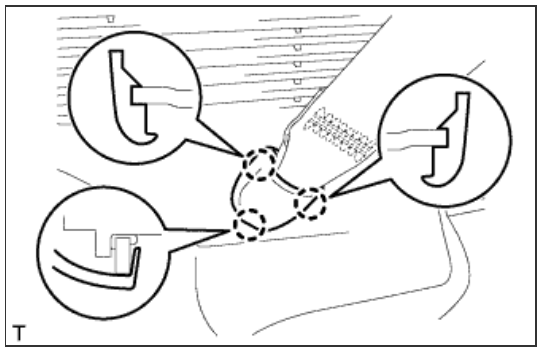


ii. Remove the bolt and disconnect the rear seat outer belt floor anchor RH.

e. Remove the clip and bolt.

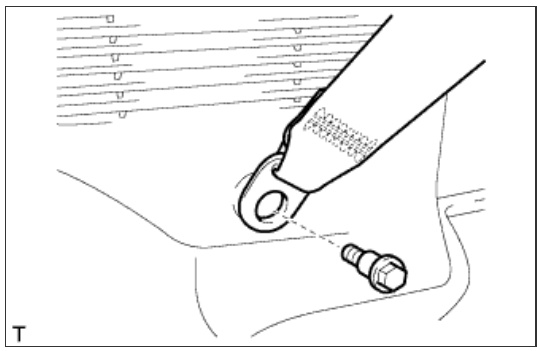

f. Detach the 18 clips and 2 claws.

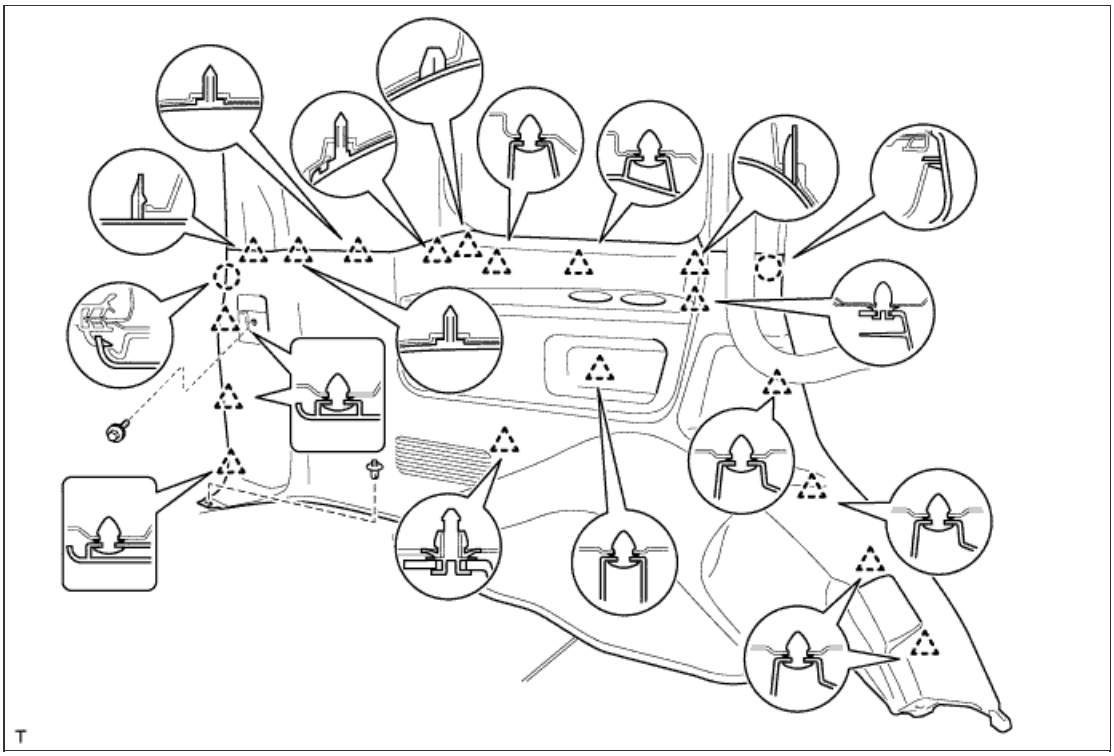

g. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.

h. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

7. REMOVE REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH

a. Remove the bolt and disconnect the seat belt shoulder anchor.




i. Using a screwdriver, detach the 2 claws and open the seat belt anchor cover as shown in the illustration.


HINT:

ape the screwdriver tip before use.

ii. Remove the bolt and seat belt shoulder anchor.

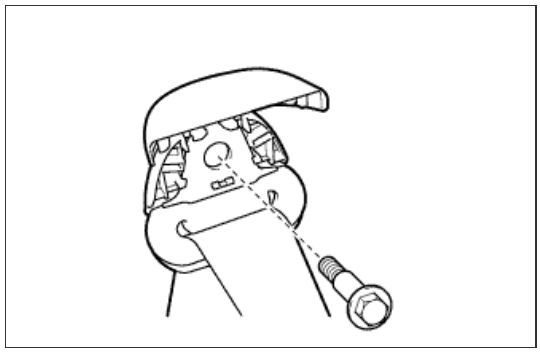

.Remove the bolt and rear No. 2 seat outer belt.

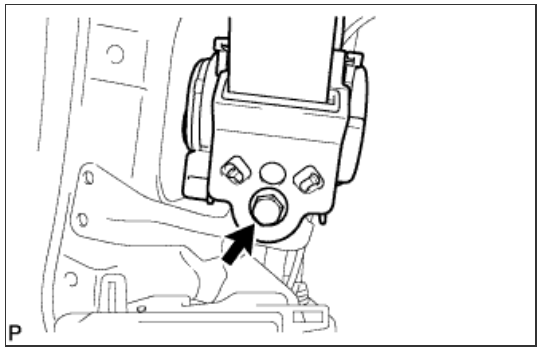

for Preparation Click here

HINT:


- **Use the same procedures for the RH side and LH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE REAR NO. 2 SEAT ASSEMBLY

a. Remove the rear No. 2 seat assembly (Click here).

2. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

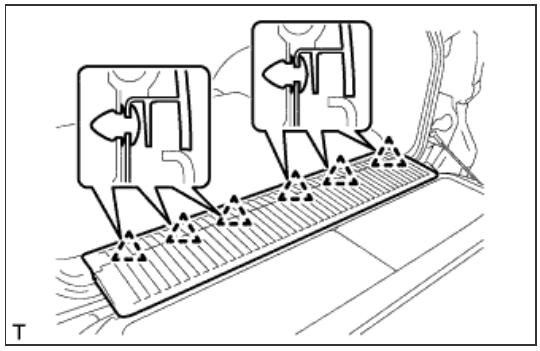


3. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

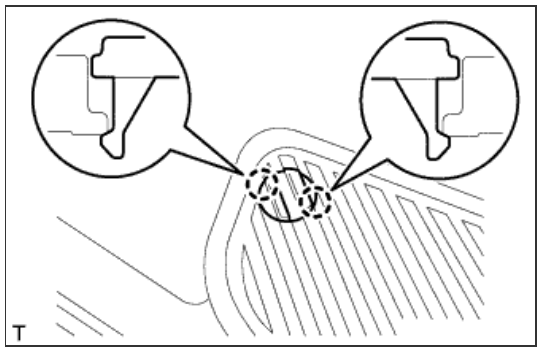

4. REMOVE REAR DOOR SCUFF PLATE LH


a. Remove the screw.

.Detach the 3 claws and 4 clips, and remove the scuff plate.

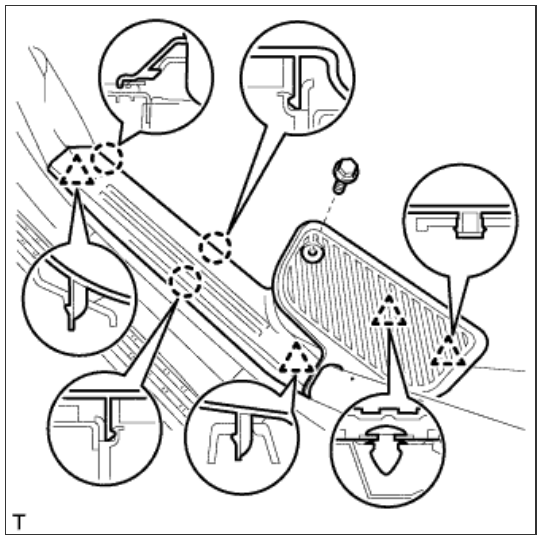

. REMOVE REAR NO. 2 SEAT COVER BEZEL

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

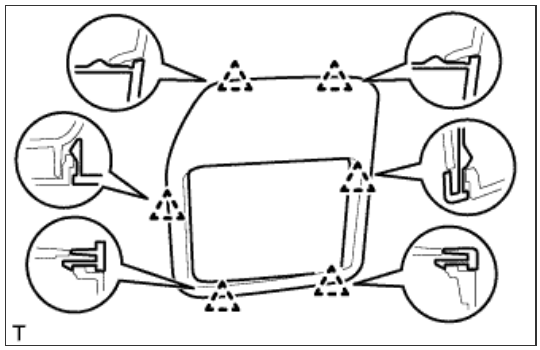



6. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

a. Detach the 3 claws and remove the cover.

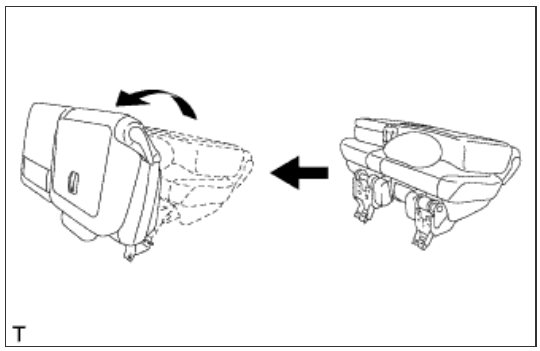

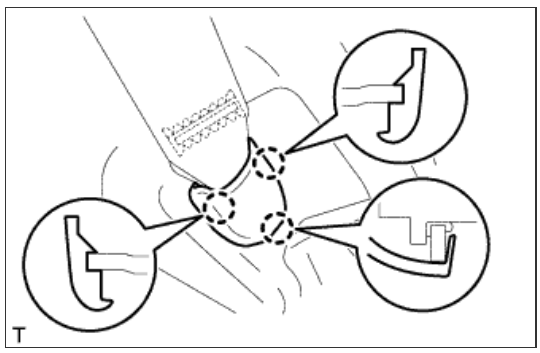


.Remove the bolt and disconnect the rear seat outer belt floor anchor.

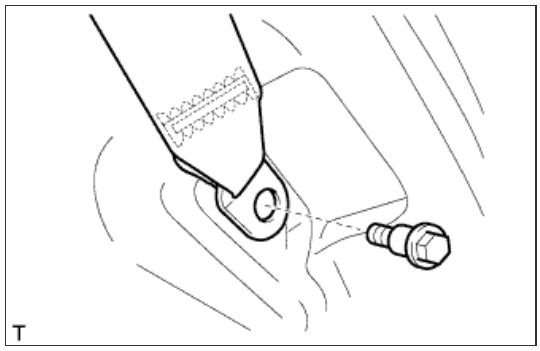


c. for Side:

i. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor .

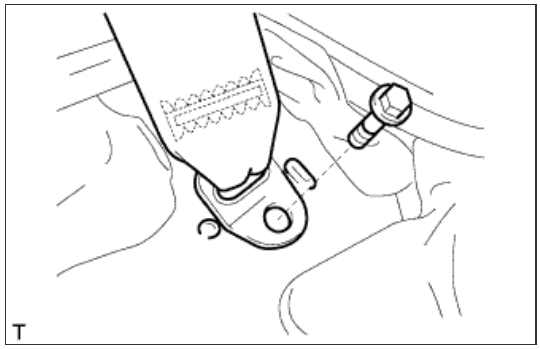


d. for RH Side:

i. Detach the 3 claws and remove the cover.

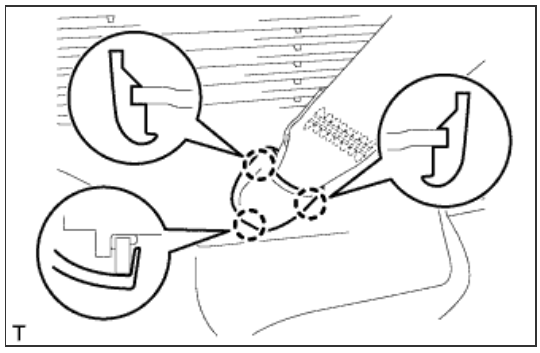


ii. Remove the bolt and disconnect the rear seat outer belt floor anchor RH.

e. Remove the clip and bolt.

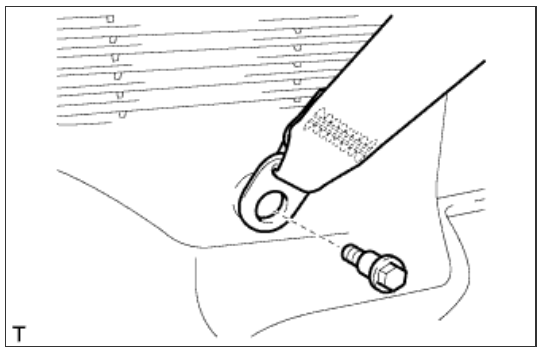

f. Detach the 18 clips and 2 claws.

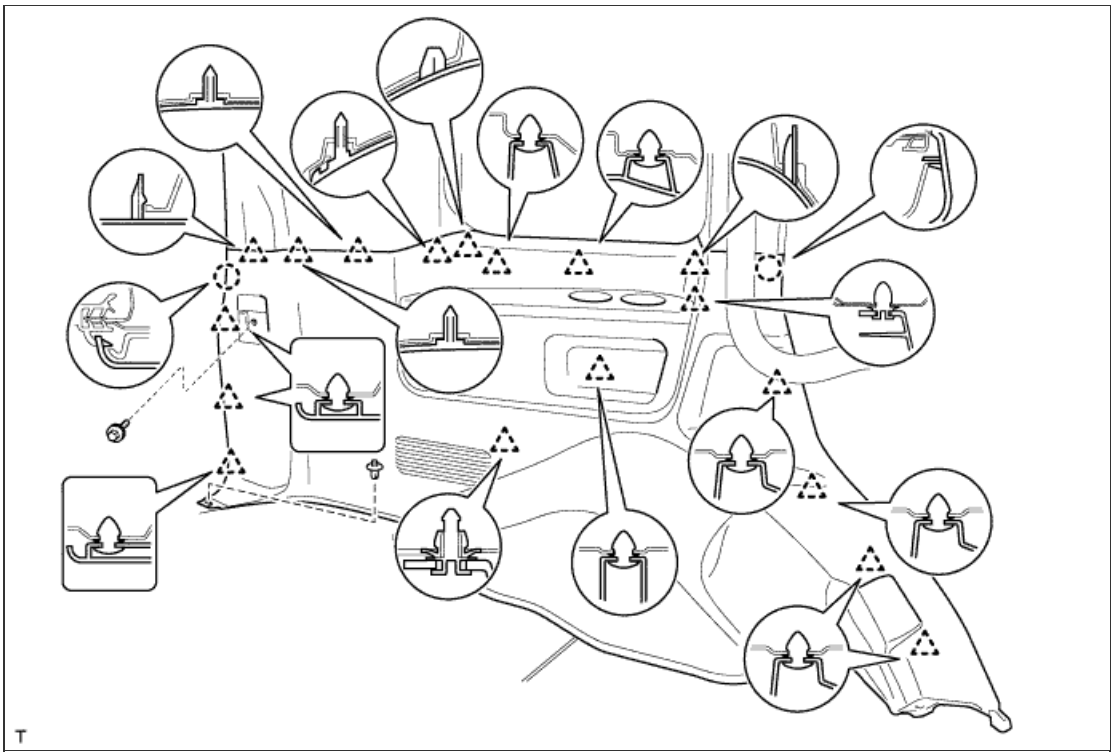

g. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the quarter trim panel.

h. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

7. REMOVE REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH

a. Remove the bolt and disconnect the seat belt shoulder anchor.




i. Using a screwdriver, detach the 2 claws and open the seat belt anchor cover as shown in the illustration.


HINT:

ape the screwdriver tip before use.

ii. Remove the bolt and seat belt shoulder anchor.

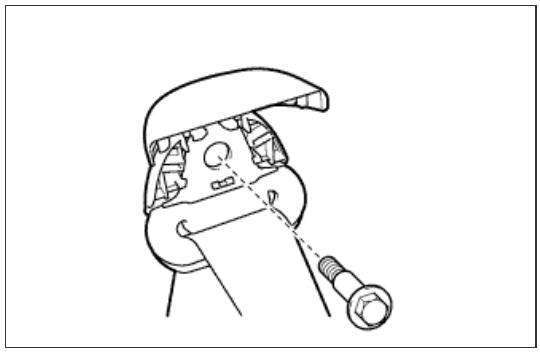

.Remove the bolt and rear No. 2 seat outer belt.

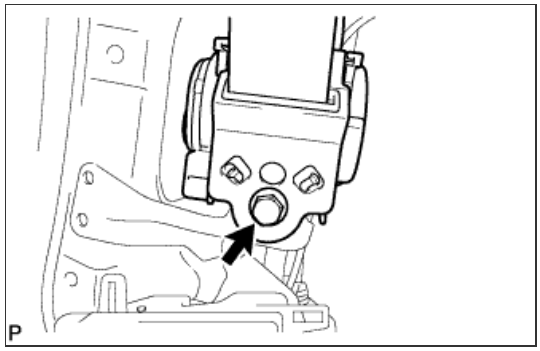


for Preparation Click here

1. INSPECT REAR NO. 2 SEAT OUTER BELT ASSEMBLY

NOTICE:

Do not disassemble the retractor.

a. When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks.
If the operation is not as specified, replace the belt.

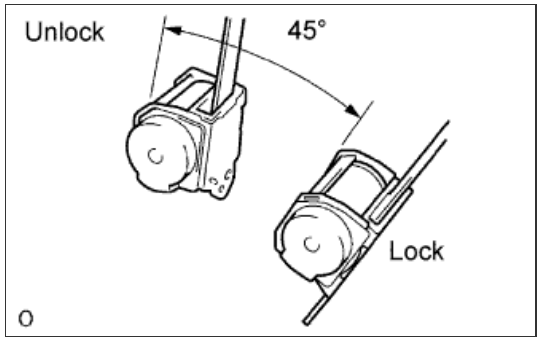

for Preparation Click here

HINT:


- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**

1. INSTALL REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH

a. Align the claws with the seat belt positioning holes and install the retractor of the seat belt as shown in the illustration.


b. Install the seat belt with the bolt.

Torque:
42 N*m{ 427 kgf*cm , 31 ft.*lbf }

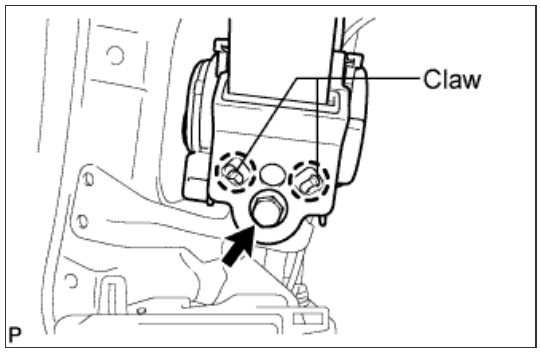


c. Install the seat belt shoulder anchor with the bolt.

Torque:
42 N*m{ 427 kgf*cm , 31 ft.*lbf }

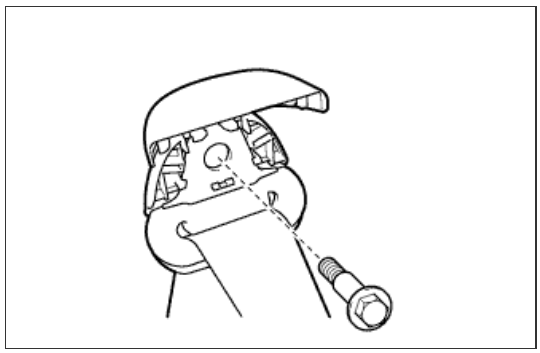

d. Attach the 2 claws to close the seat belt shoulder anchor cover.

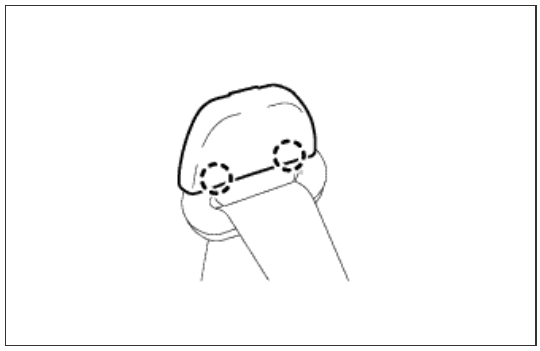

2. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH


HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

a. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.


b. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

c. Attach the 18 clips and 2 claws to install the quarter trim panel.

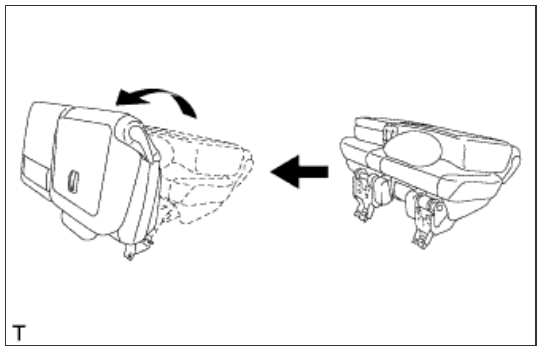

d. Install the clip and bolt.

Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

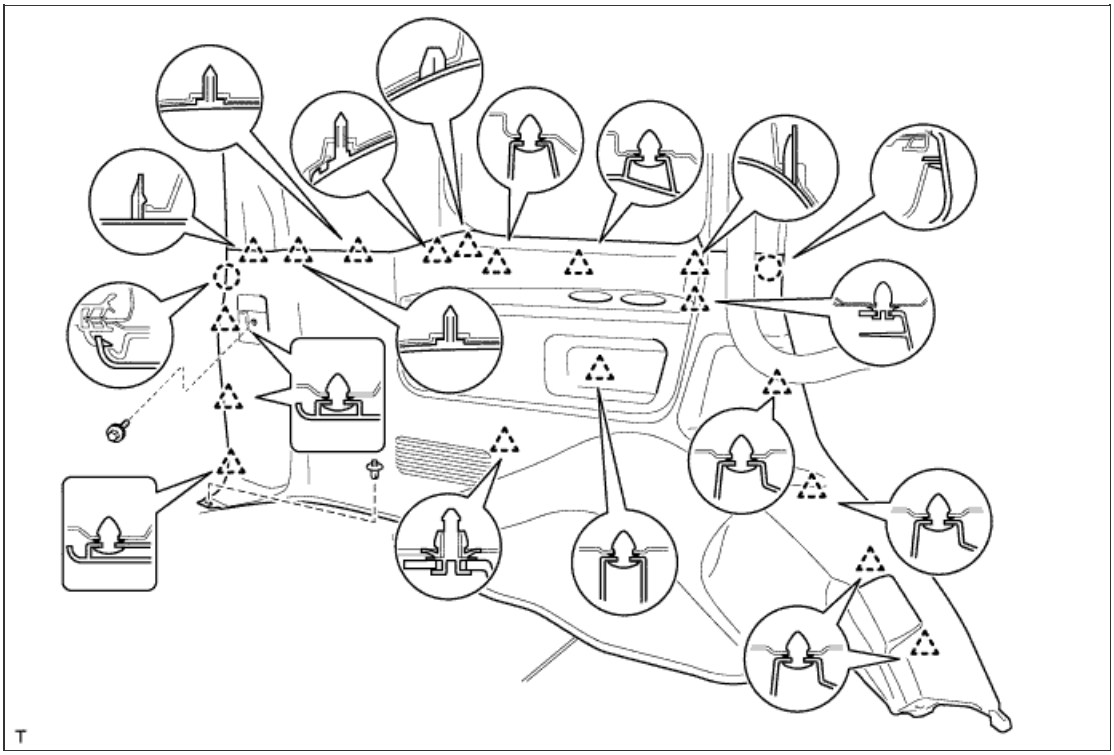


e. for LH Side:

i. Install the rear No. 2 seat belt anchor LH with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

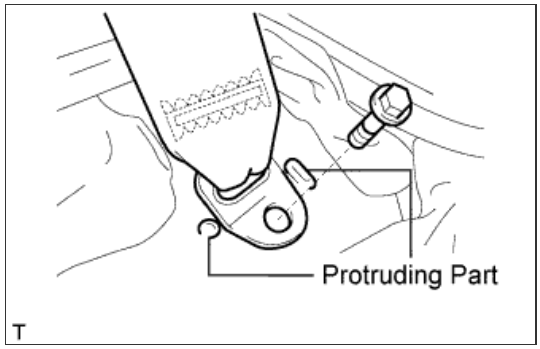


f. for RH Side:

i. Install the rear No. 2 seat belt anchor RH with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

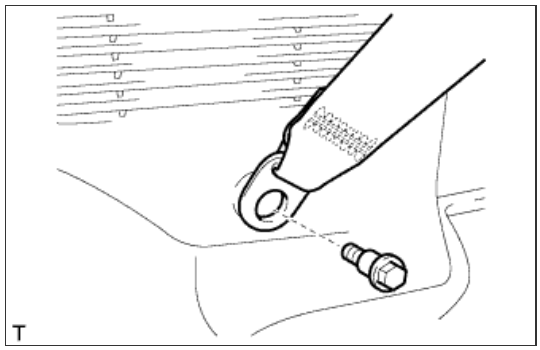


ii. Attach the 3 claws to install the cover.

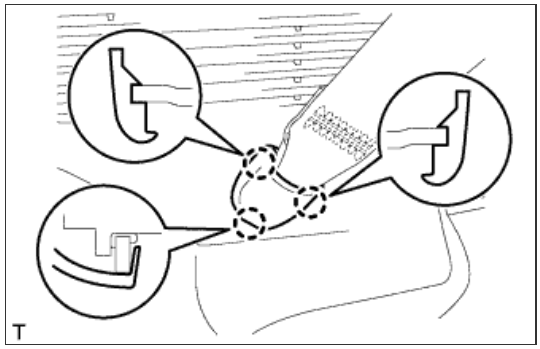


g. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

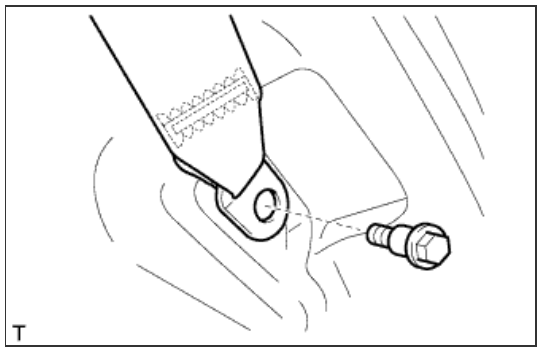


h. Attach the 3 claws to install the cover.

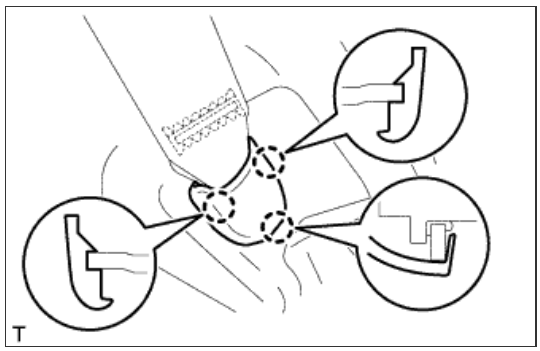

3. INSTALL REAR NO. 2 SEAT COVER BEZEL


a. Attach the clips to install the rear No. 2 seat cover be b

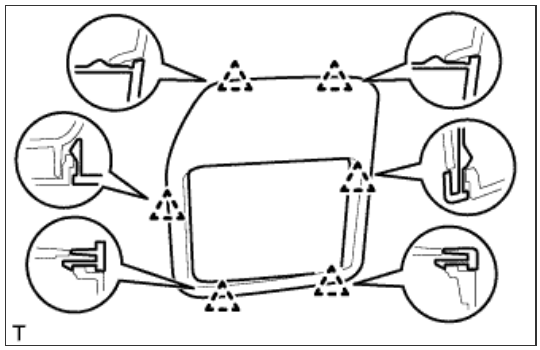

4. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

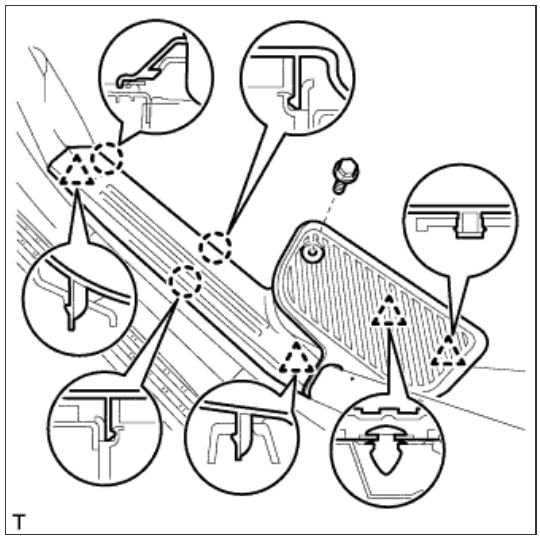


5. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

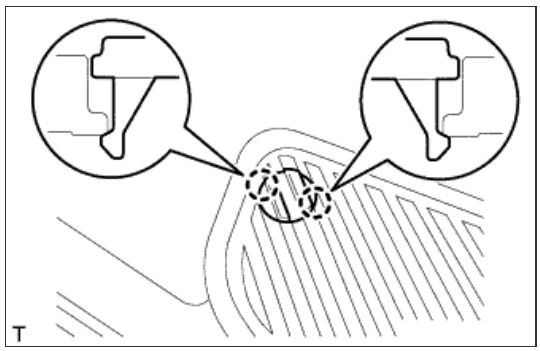

6. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the clips to install the support plate.

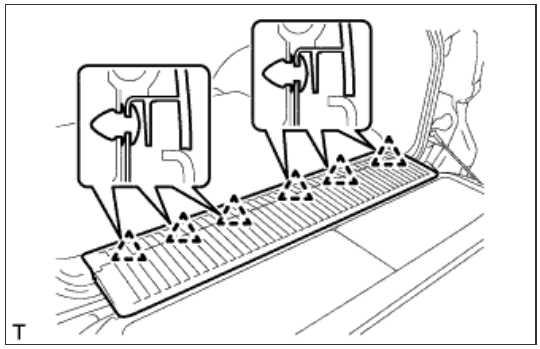

7. INSTALL REAR NO. 2 SEAT ASSEMBLY

a. Install the rear No. 2 seat assembly (Click here .

for Preparation Click here

HINT:


- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**

1. INSTALL REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH

a. Align the claws with the seat belt positioning holes and install the retractor of the seat belt as shown in the illustration.


b. Install the seat belt with the bolt.

Torque:
42 N*m{ 427 kgf*cm , 31 ft.*lbf }

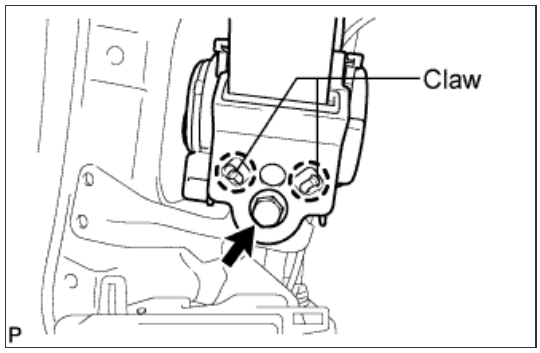


c. Install the seat belt shoulder anchor with the bolt.

Torque:
42 N*m{ 427 kgf*cm , 31 ft.*lbf }

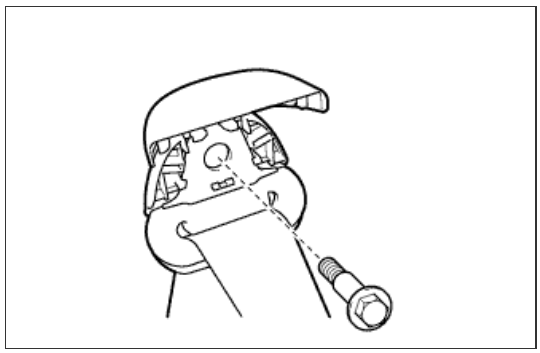

d. Attach the 2 claws to close the seat belt shoulder anchor cover.

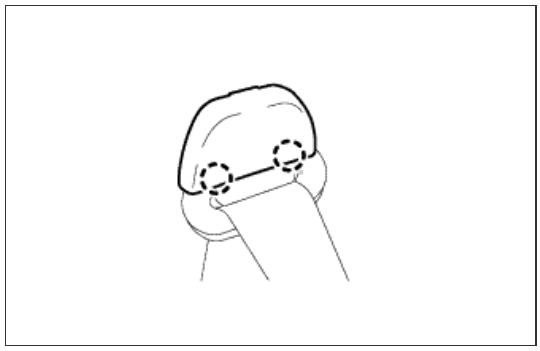

2. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH


HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

a. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.


b. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

c. Attach the 18 clips and 2 claws to install the quarter trim panel.

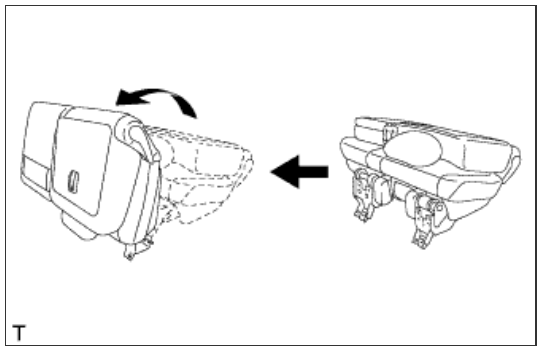

d. Install the clip and bolt.

Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

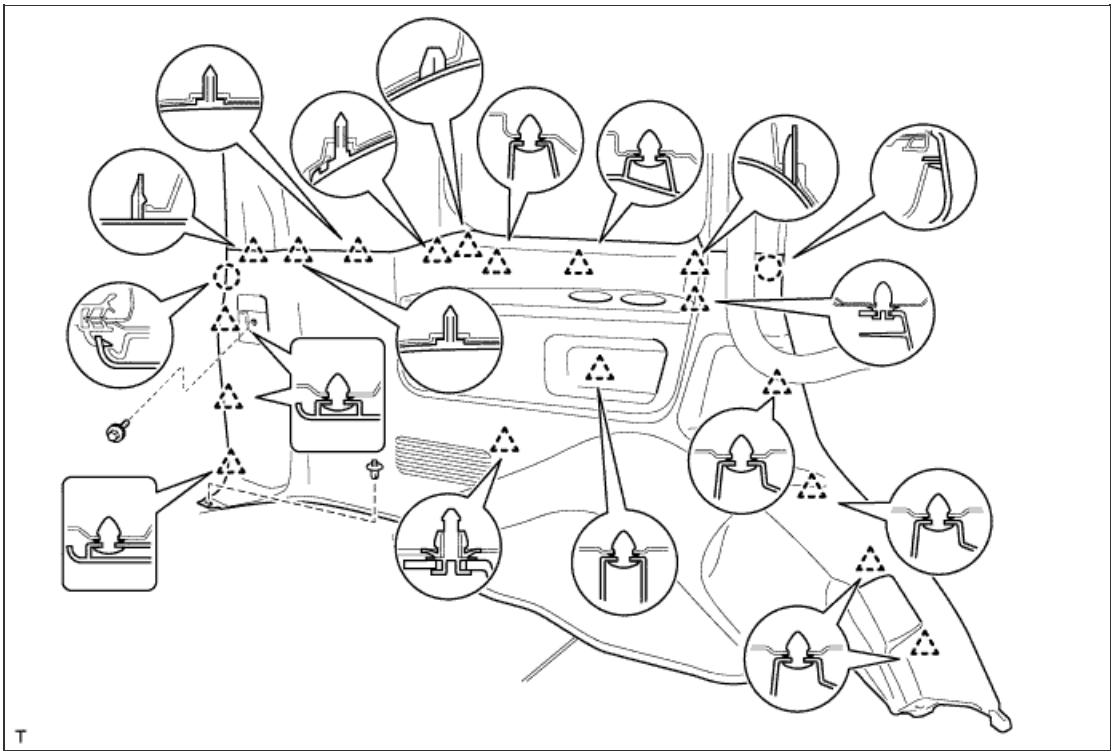


e. for LH Side:

i. Install the rear No. 2 seat belt anchor LH with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

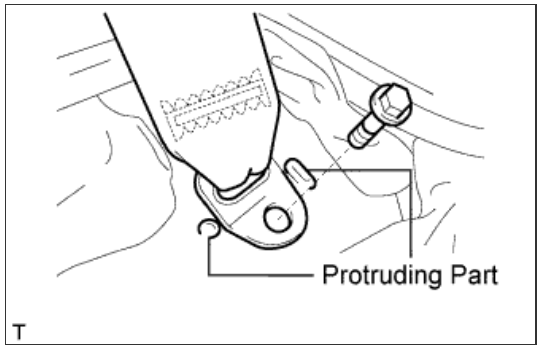


f. for RH Side:

i. Install the rear No. 2 seat belt anchor RH with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

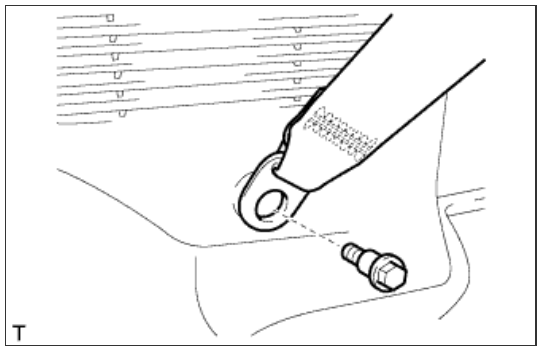


ii. Attach the 3 claws to install the cover.

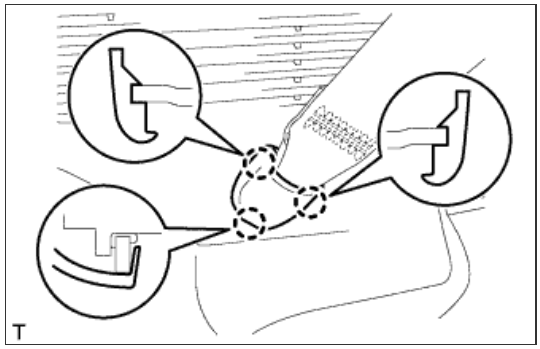


g. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

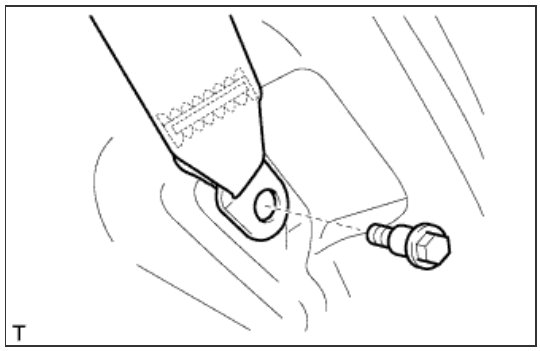


h. Attach the 3 claws to install the cover.

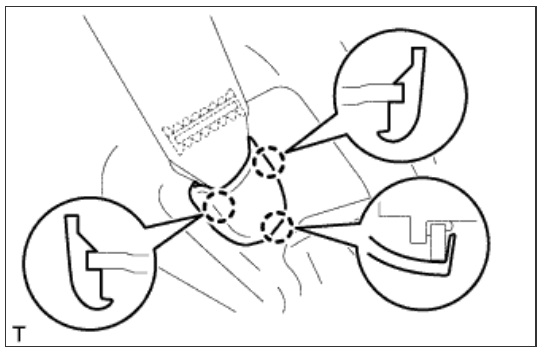

3. INSTALL REAR NO. 2 SEAT COVER BEZEL


a. Attach the clips to install the rear No. 2 seat cover be b

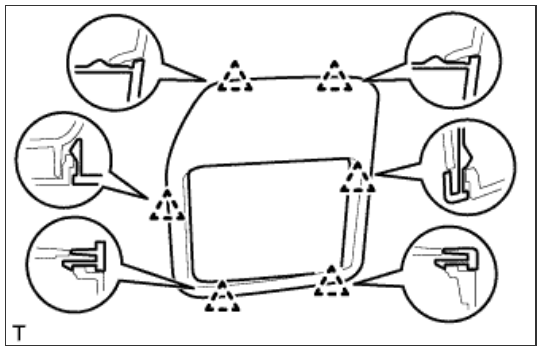

4. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

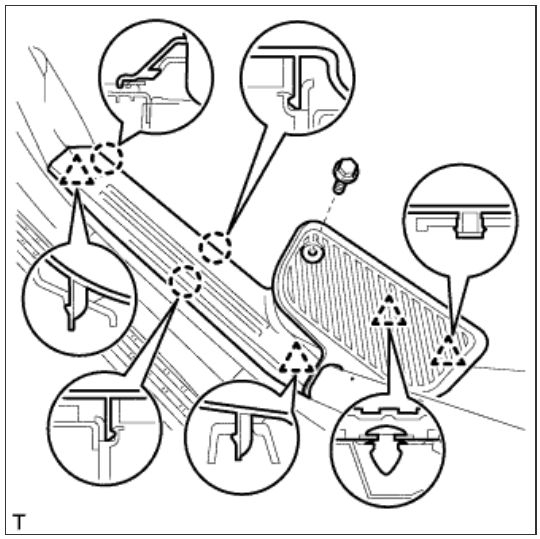


5. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

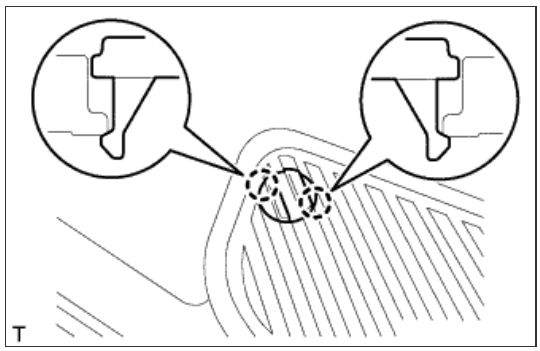

6. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. Attach the clips to install the support plate.

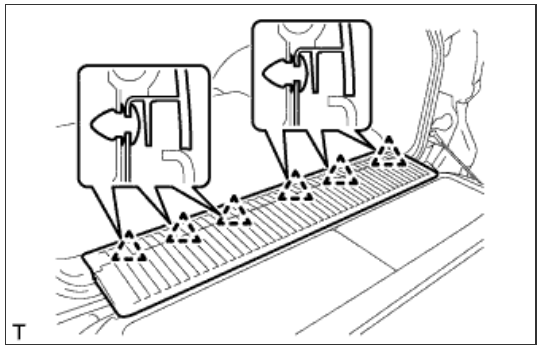

7. INSTALL REAR NO. 2 SEAT ASSEMBLY

a. Install the rear No. 2 seat assembly (Click here .

for Preparation Click here

HINT:


- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**

1. INSTALL REAR NO. 2 SEAT OUTER BELT ASSEMBLY LH

a. Align the claws with the seat belt positioning holes and install the retractor of the seat belt as shown in the illustration.


b. Install the seat belt with the bolt.

Torque:
42 N*m{ 427 kgf*cm , 31 ft.*lbf }

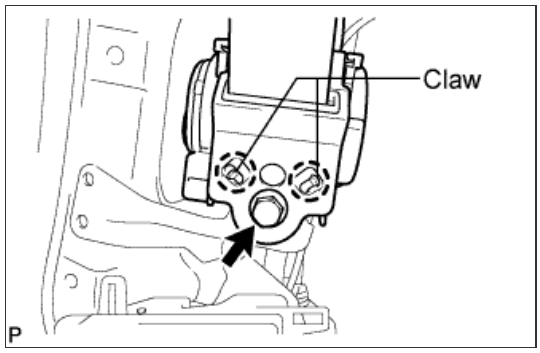


c. Install the seat belt shoulder anchor with the bolt.

Torque:
42 N*m{ 427 kgf*cm , 31 ft.*lbf }

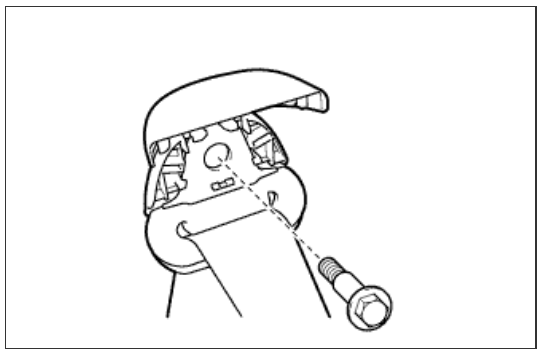

d. Attach the 2 claws to close the seat belt shoulder anchor cover.

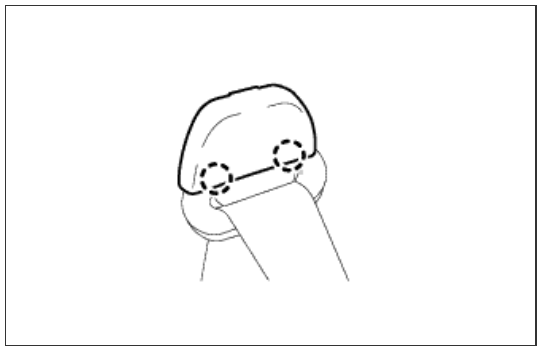

2. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH


HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

a. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.


b. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

c. Attach the 18 clips and 2 claws to install the quarter trim panel.

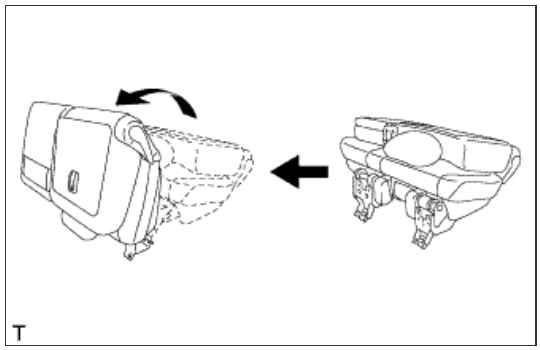

d. Install the clip and bolt.

Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

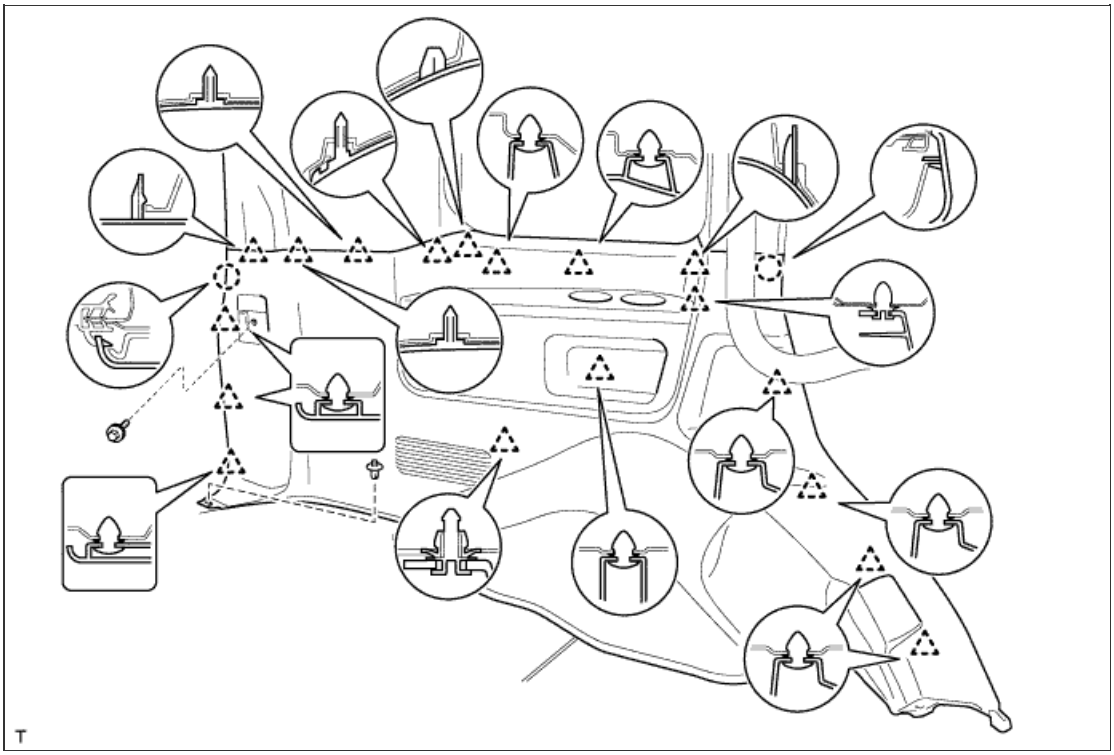


e. for LH Side:

i. Install the rear No. 2 seat belt anchor LH with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

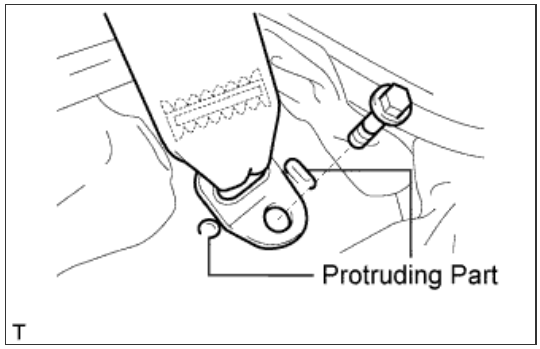


f. for RH Side:

i. Install the rear No. 2 seat belt anchor RH with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

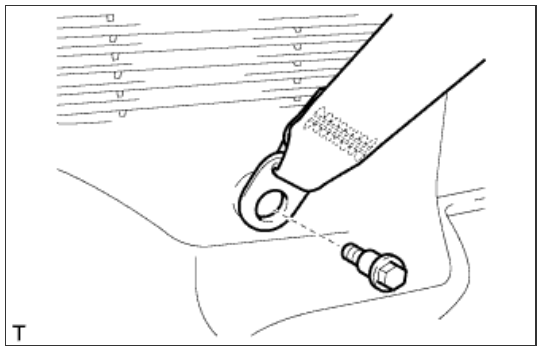


ii. Attach the 3 claws to install the cover.

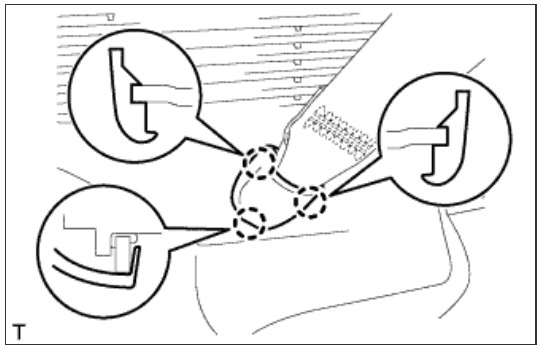


g. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

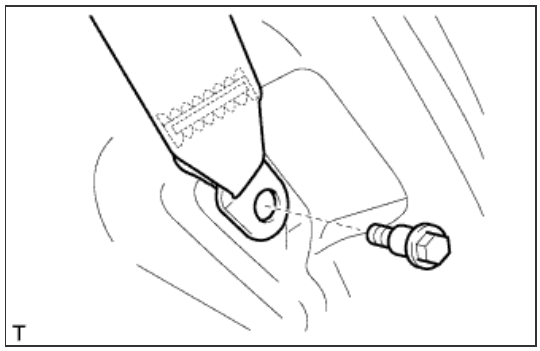


h. Attach the 3 claws to install the cover.

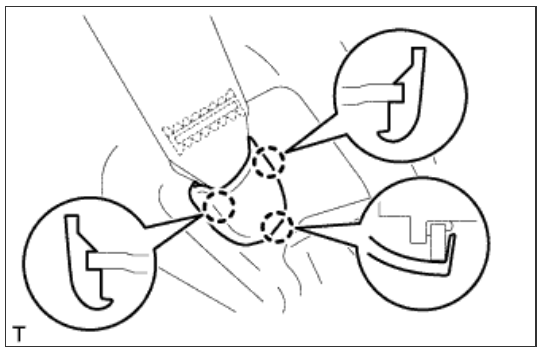

3. INSTALL REAR NO. 2 SEAT COVER BEZEL


a. Attach the clips to install the rear No. 2 seat cover be b

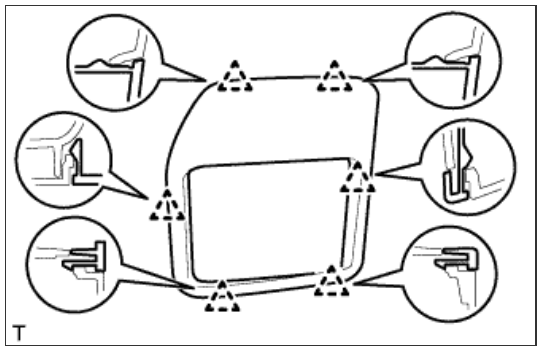

4. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

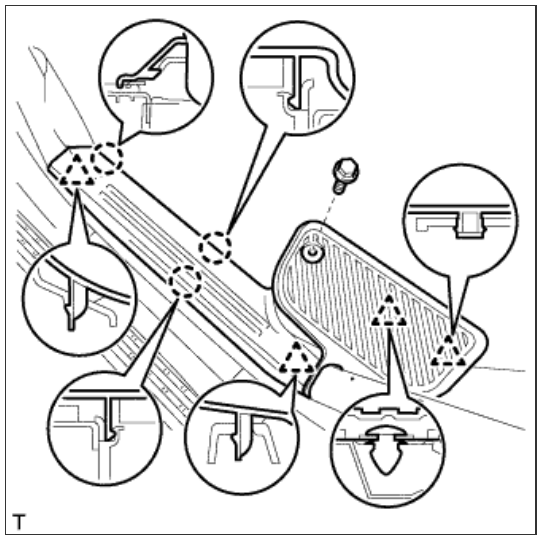


5. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

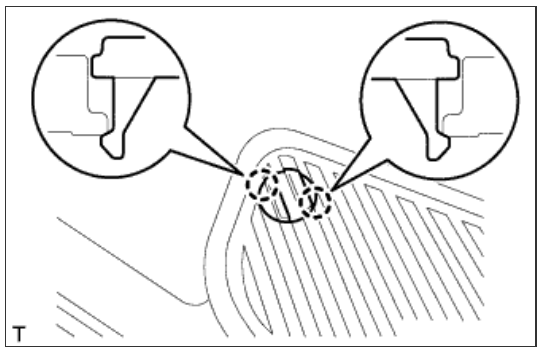

6. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE


a. Attach the clips to install the support plate.

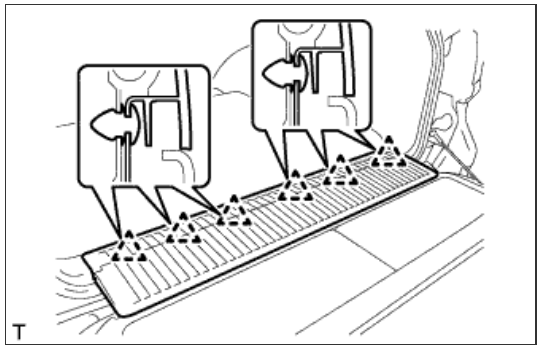


7. INSTALL REAR NO. 2 SEAT ASSEMBLY

a. Install the rear No. 2 seat assembly (Click here .

for Preparation Click here

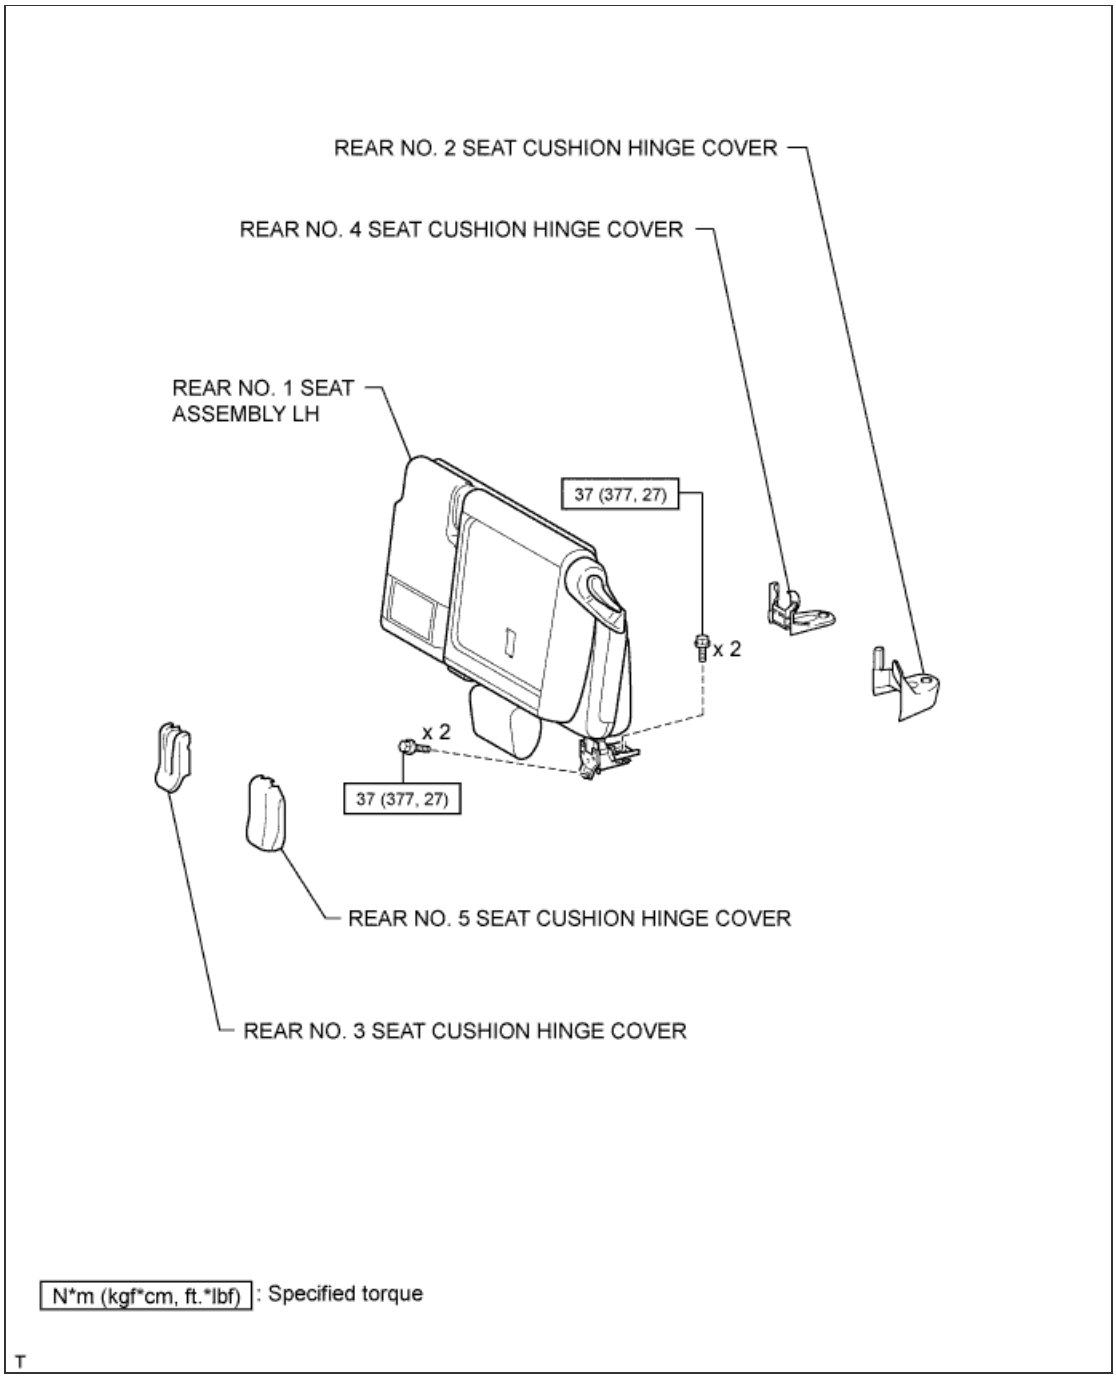

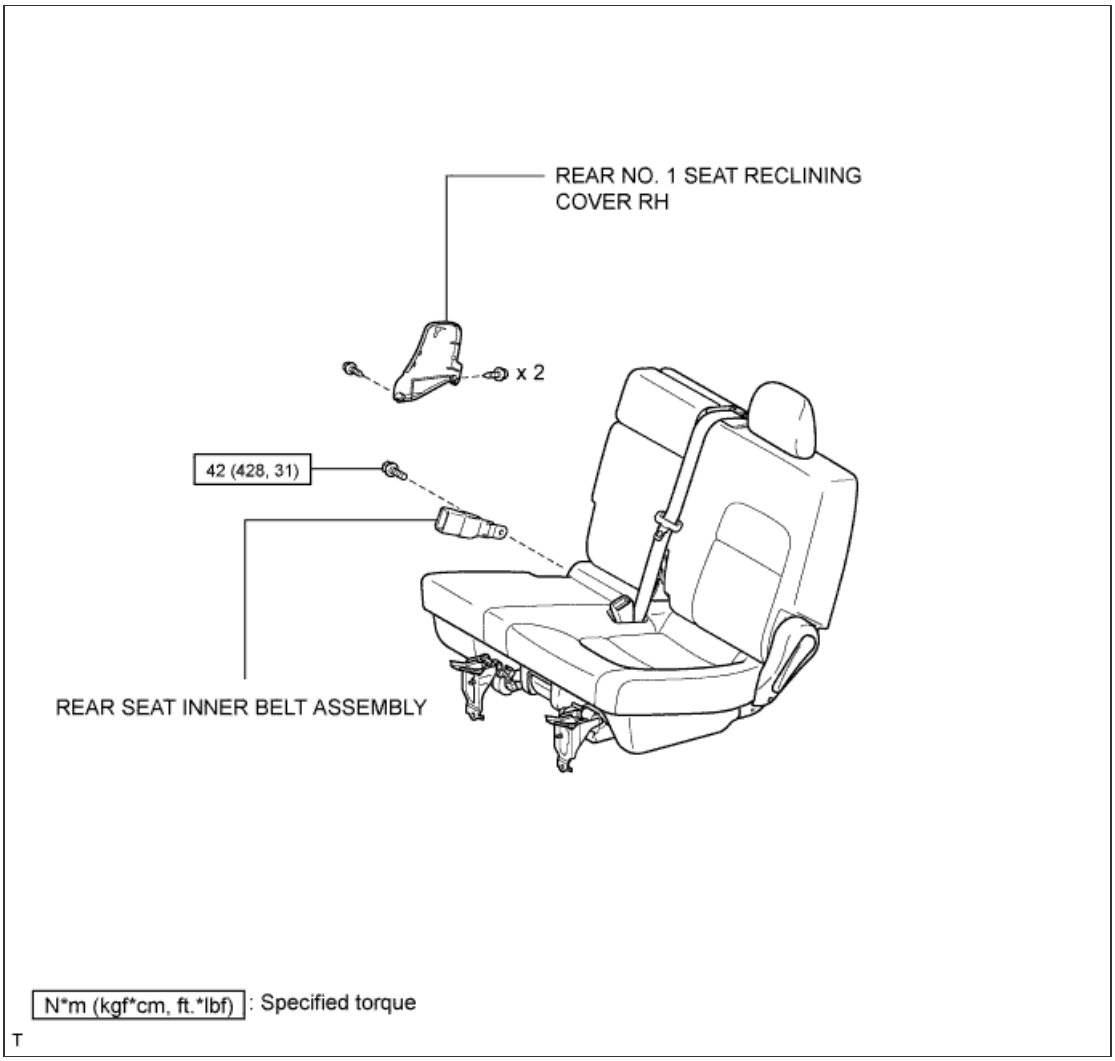

N*m (kgf*cm, ft.*lbf) : Specified torque

T

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**


1. REMOVE REAR NO. 1 SEAT ASSEMBLY L

a. Remove the rear No. 1 seat assembly (Click here).

. REMOVE REAR NO. 1 SEAT RECLININ COVER RH


a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

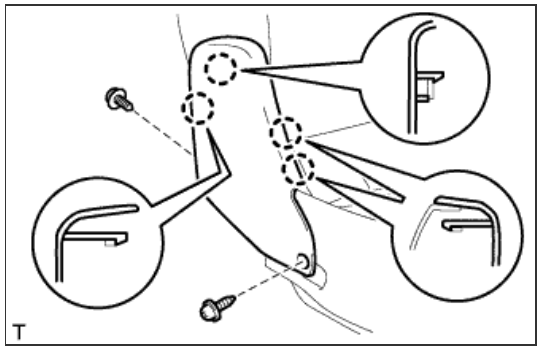

3. REMOVE REAR SEAT INNER BELT ASSEMBLY

a. Remove the bolt and belt.

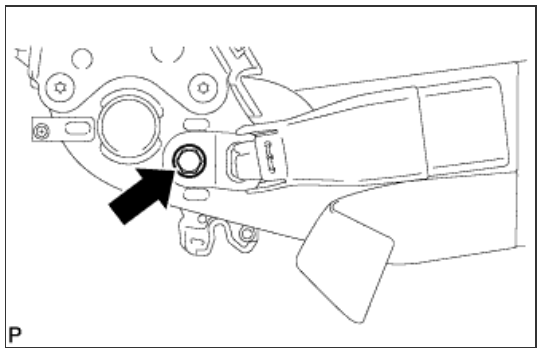

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**


1. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE REAR NO. 1 SEAT RECLININ COVER RH


a. Remove the 2 screws.

b. Detach the 3 claws in the order shown in the ill stration and then remove the cover.

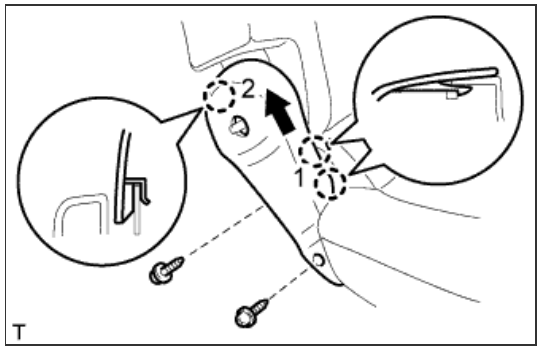

3. REMOVE REAR SEAT INNER BELT ASSEMBLY

a. Remove the bolt and belt.

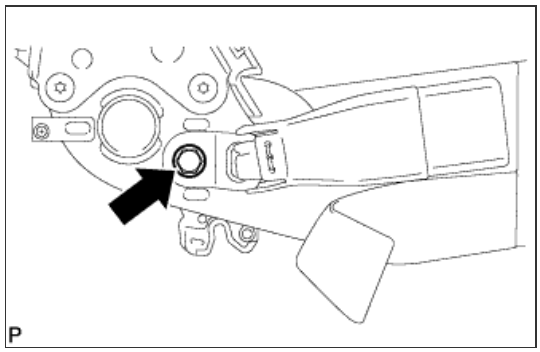

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**


1. INSTALL REAR SEAT INNER BELT ASSEMBLY

a. Install the seat belt with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


The anchor part of the seat belt must not overlap the protruding part.

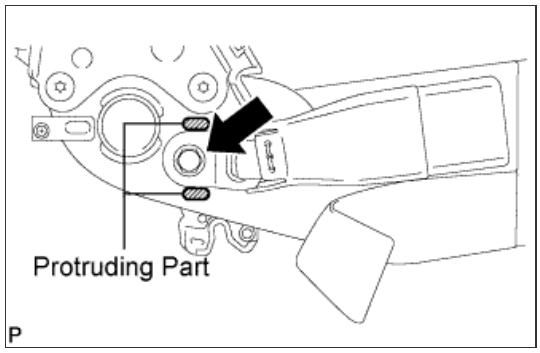

2. INSTALL REAR NO. 1 SEAT RECLINING COVER RH

a. Attach the claw to install the cover.

b. Install the screw.

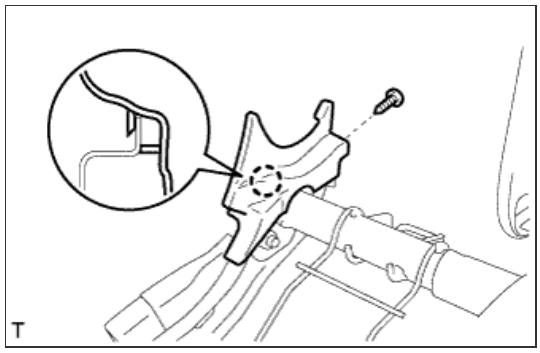

3. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly (Clic here).

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**


1. INSTALL REAR SEAT INNER BELT ASSEMBLY

a. Install the seat belt with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:


The anchor part of the seat belt must not overlap the protruding part.

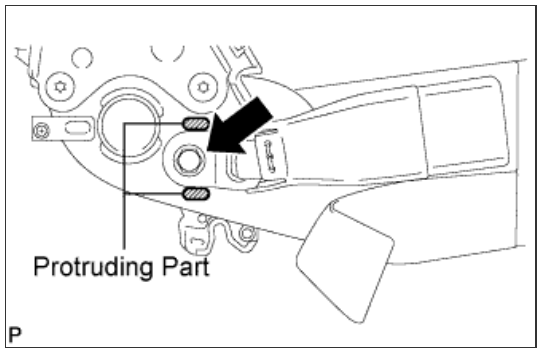

2. INSTALL REAR NO. 1 SEAT RECLINING COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

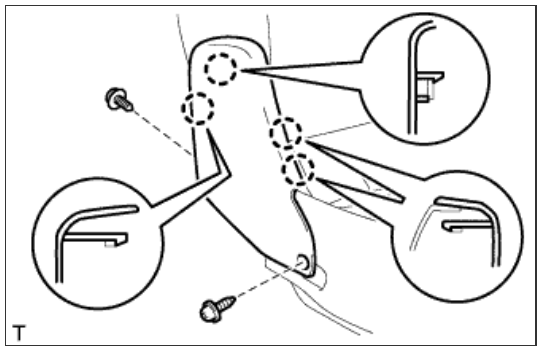


3. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembl (lick here).

for Preparation Click here

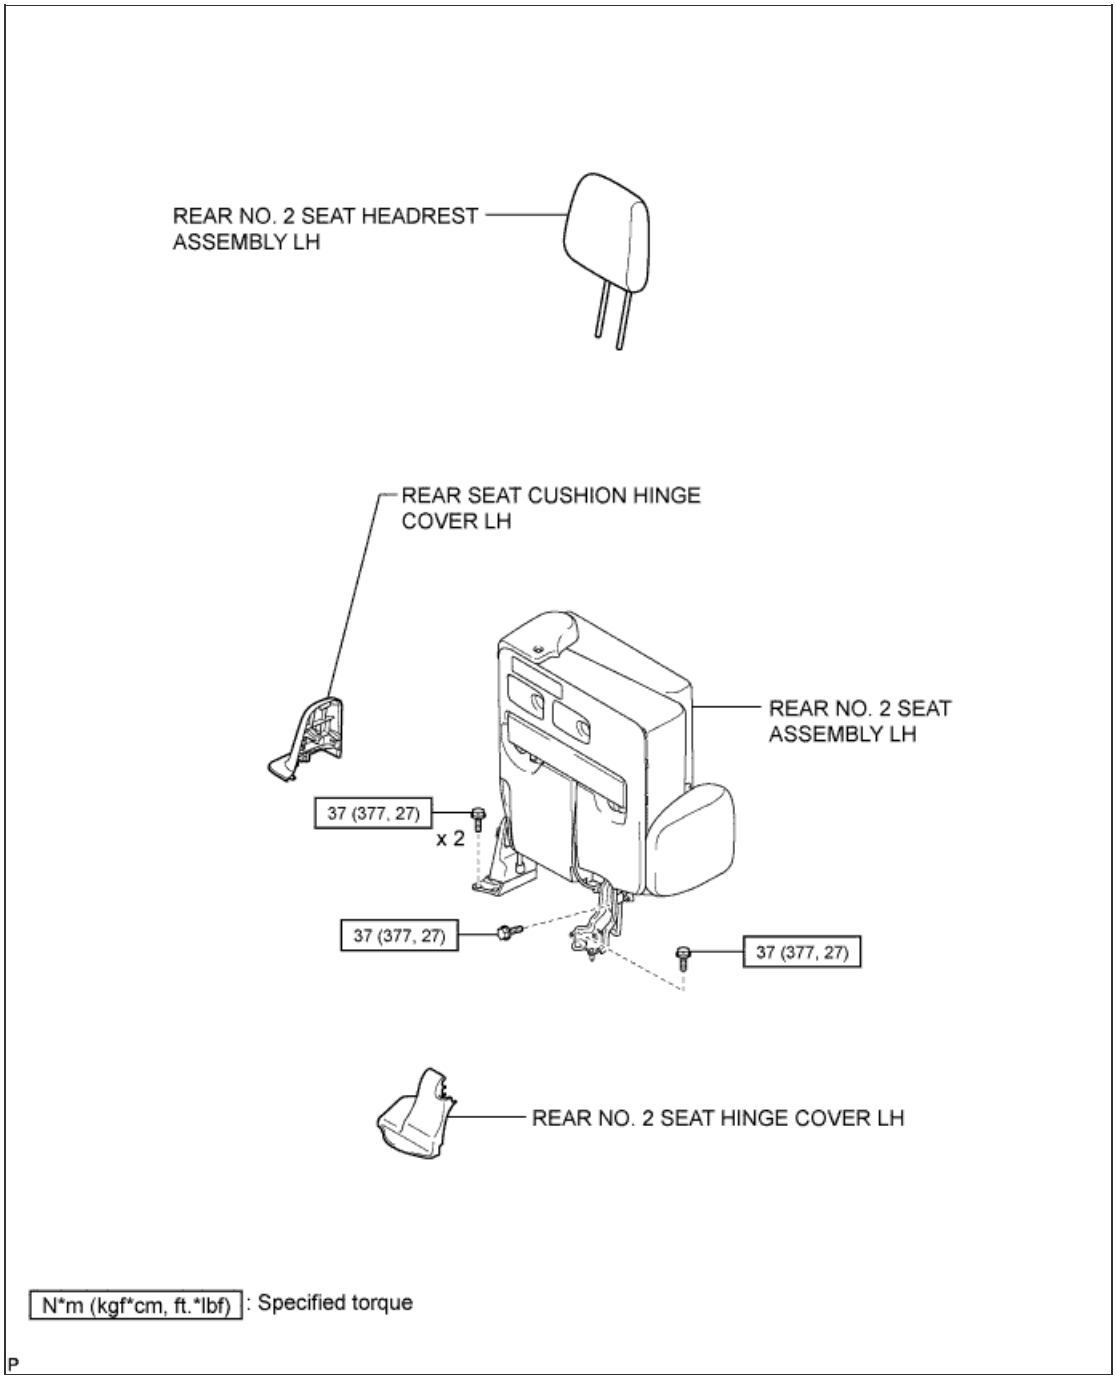

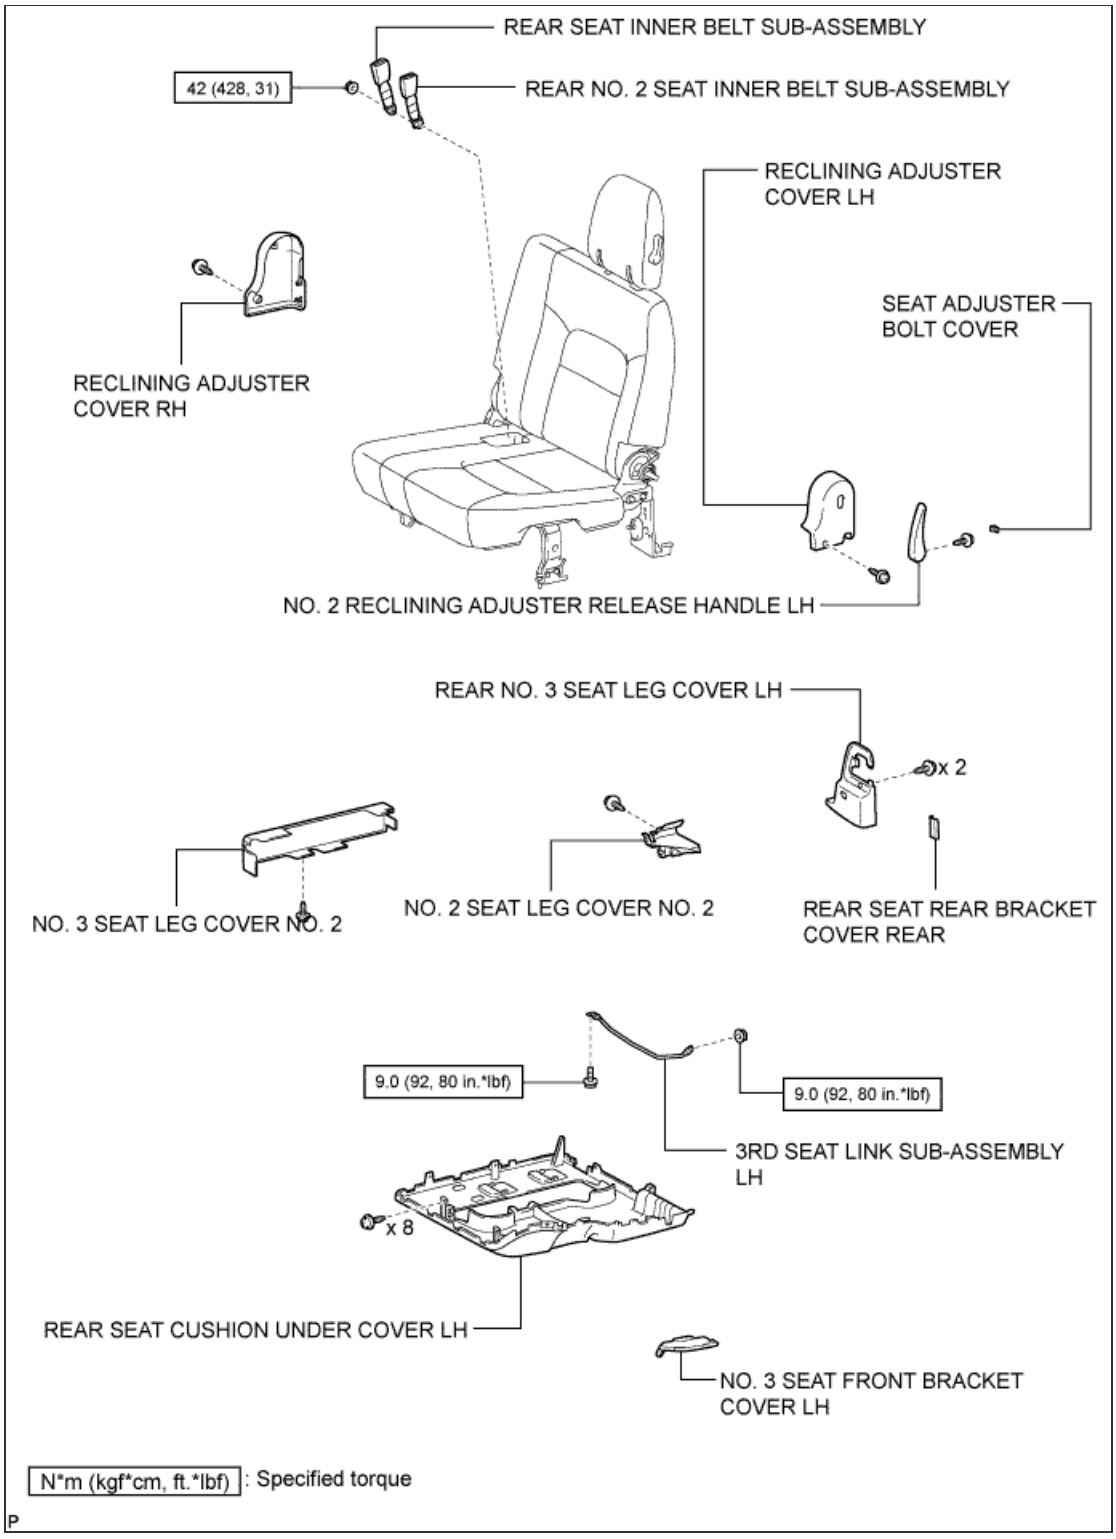
REAR SEAT INNER BELT SUB-ASSEMBLY
42 (428, 31)
REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY
RECLINING ADJUSTER COVER LH
SEAT ADJUSTER BOLT COVER
RECLINING ADJUSTER COVER RH
NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH
REAR NO. 3 SEAT LEG COVER LH
x 2
NO. 3 SEAT LEG COVER NO. 2
NO. 2 SEAT LEG COVER NO. 2
REAR SEAT REAR BRACKET COVER REAR
9.0 (92, 80 in.*lbf)
9.0 (92, 80 in.*lbf)
3RD SEAT LINK SUB-ASSEMBLY LH
x 8
REAR SEAT CUSHION UNDER COVER LH
NO. 3 SEAT FRONT BRACKET COVER LH
N*m (kgf*cm, ft.*lbf) : Specified torque
P

for Preparation Click here

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH


a. Remove the rear No. 2 seat assembly LH (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

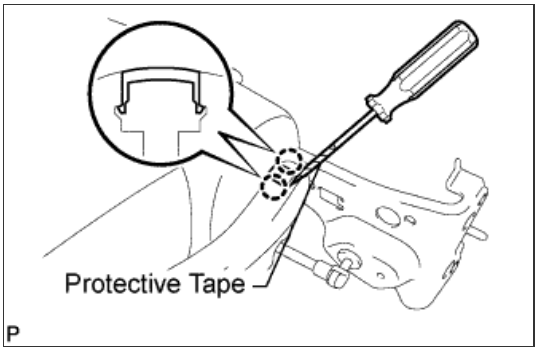

3. REMOVE NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

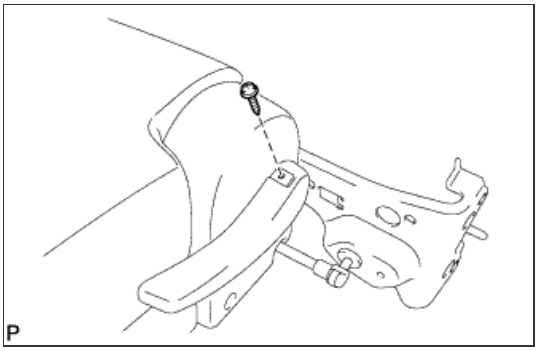

4. REMOVE RECLINING ADJUSTER COVER LH

a. Remove the screw.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

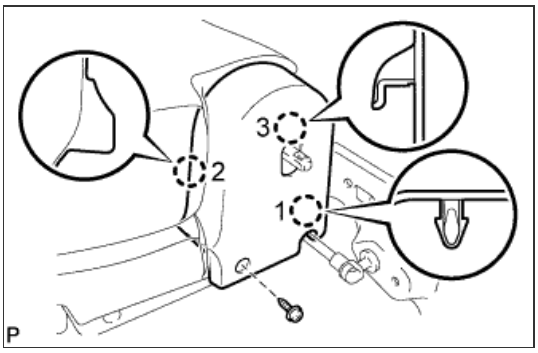

5. REMOVE RECLINING ADJUSTER COVER RH

a. Remove the screw.

b. Detach the 5 claws in the order shown in the illustration, and then remove the cover.

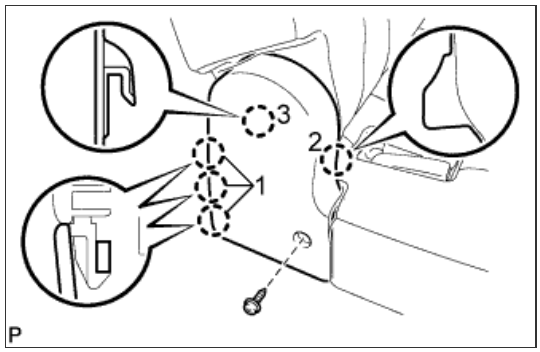


6. REMOVE REAR SEAT REAR BRACKET COVER REAR

a. Detach the 2 claws and cover.


7. REMOVE REAR NO. 3 SEAT LEG COVER LH

a. Using a screwdriver, remove the spring of the seat stay ball-joint.

b. Disconnect the seat stay.

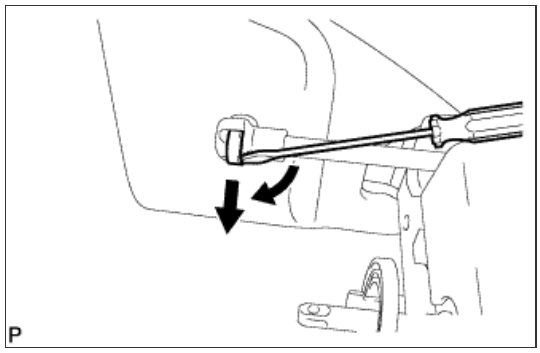


c. Remove the 2 screws and cover.

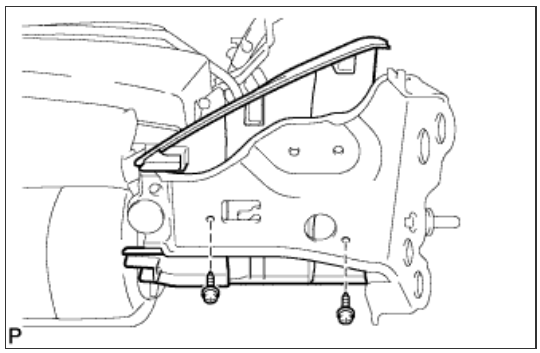


8. REMOVE NO. 2 SEAT LEG COVER NO. 2

a. Remove the screw and seat leg cover.

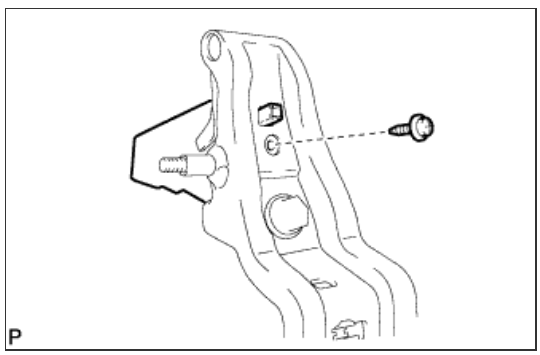


9. REMOVE 3RD SEAT LINK SUB-ASSEMBLY LH

a. Remove the bolt, nut and seat link.

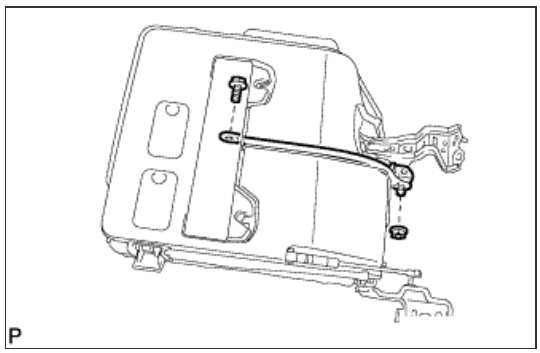


10. REMOVE REAR SEAT CUSHION UNDER COVER LH

a. Detach the 16 claws.

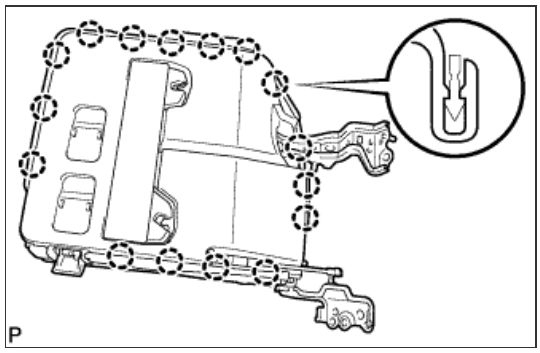


b. Remove the screws and cover.

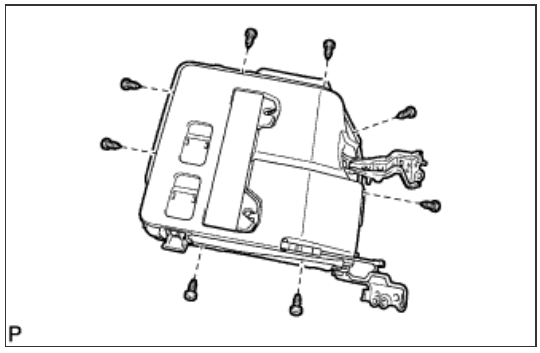

11. REMOVE NO. 3 SEAT FRONT BRACKET COVER LH


a. Detach the 4 claws and remove the cover.

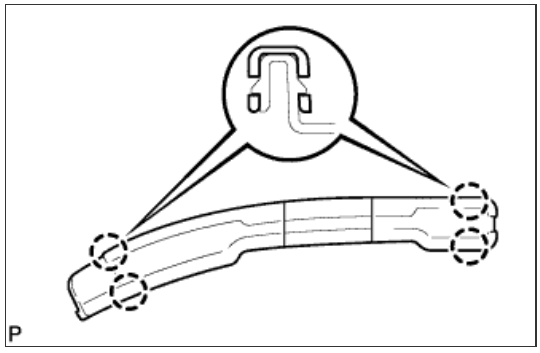

12. REMOVE NO. 3 SEAT LEG COVER NO. 2

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

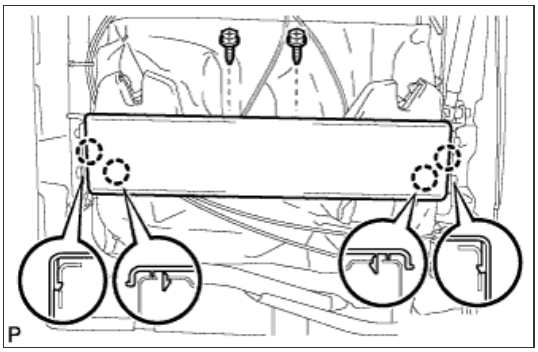


13. REMOVE REAR SEAT INNER BELT SUB-ASSEMBLY

a. Remove the nut and belt.


HINT:

The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, it becomes disconnected when the nut is removed.

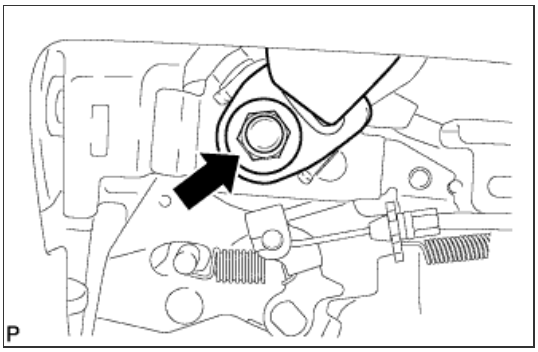

14. REMOVE REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Remove the belt.

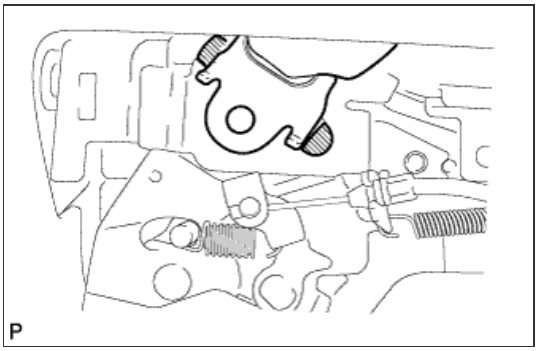

REAR CENTER SEAT INNER BELT ASSEMBLY (for Rear No. 2 Seat) > REMOVAL

for Preparation Click here

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH

a. Remove the rear No. 2 seat assembly LH (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER


a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.


Text in Illustration

*1	Protective Tape

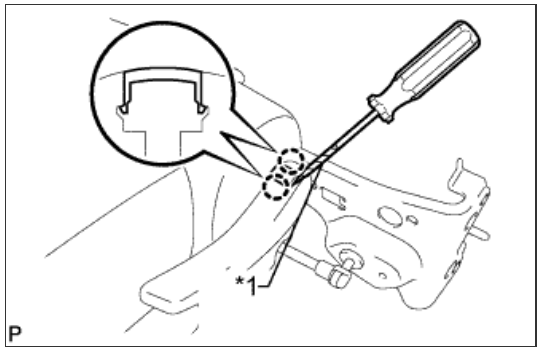

3. REMOVE NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

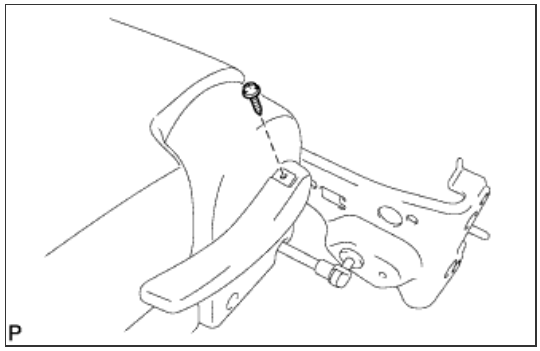

4. REMOVE RECLINING ADJUSTER COVER LH

a. Remove the screw.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

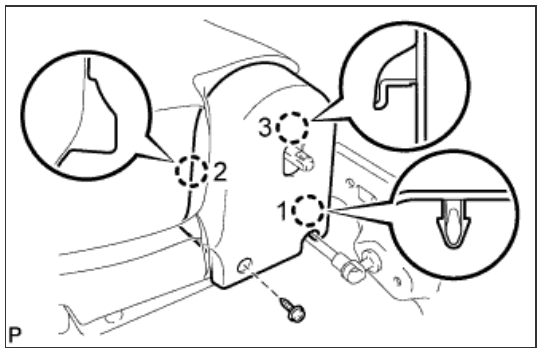

5. REMOVE RECLINING ADJUSTER COVER RH

a. Remove the screw.

b. Detach the 5 claws in the order shown in the illustration, and then remove the cover.

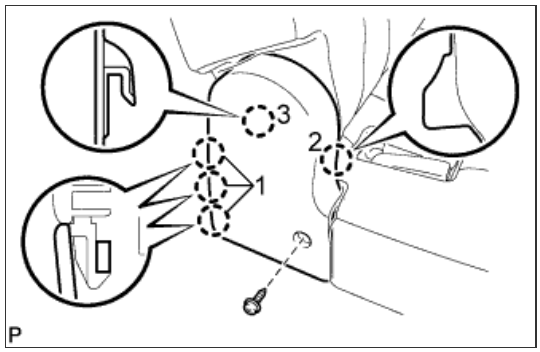


6. REMOVE REAR SEAT REAR BRACKET COVER REAR

a. Detach the 2 claws and cover.


7. REMOVE REAR NO. 3 SEAT LEG COVER LH

a. Using a screwdriver, remove the spring of the seat stay ball-joint.

b. Disconnect the seat stay.

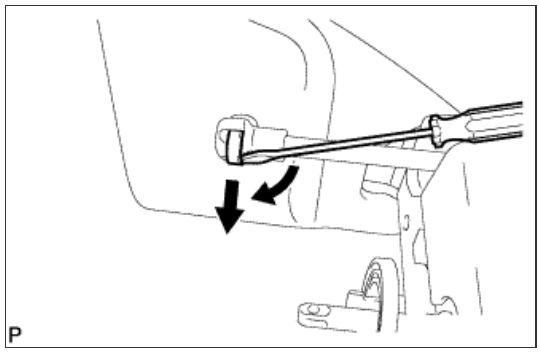


c. Remove the 2 screws and cover.

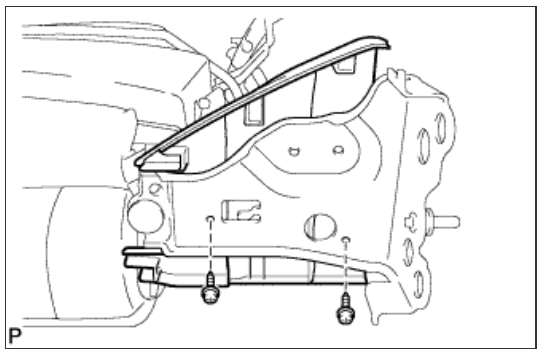


8. REMOVE NO. 2 SEAT LEG COVER NO. 2

a. Remove the screw and seat leg cover.

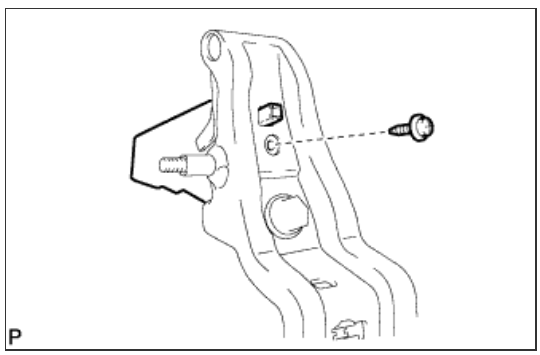


9. REMOVE 3RD SEAT LINK SUB-ASSEMBLY LH

a. Remove the bolt, nut and seat link.

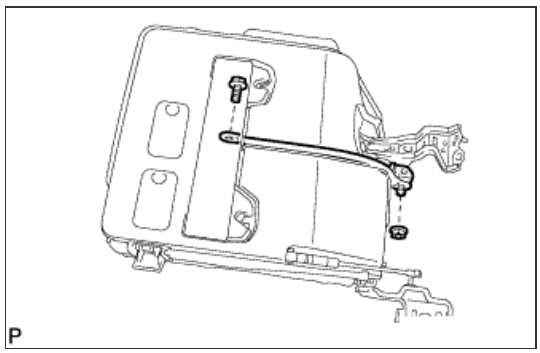


10. REMOVE REAR SEAT CUSHION UNDER COVER LH

a. Detach the 1 claws.

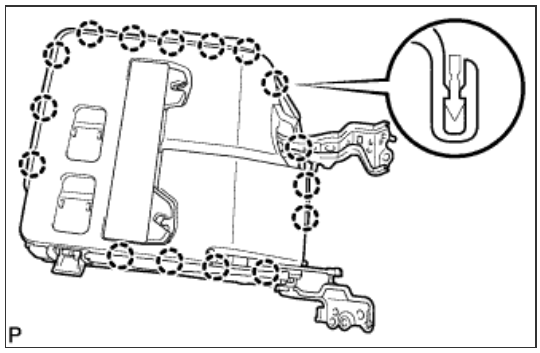


b. Remove the 8 screws and cover.

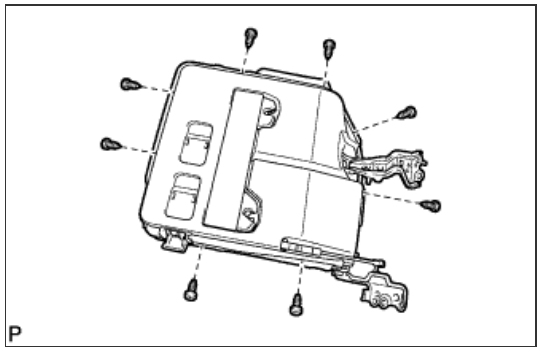

11. REMOVE NO. 3 SEAT FRONT BRACKET COVER LH


a. Detach the 4 claws and remove the cover.

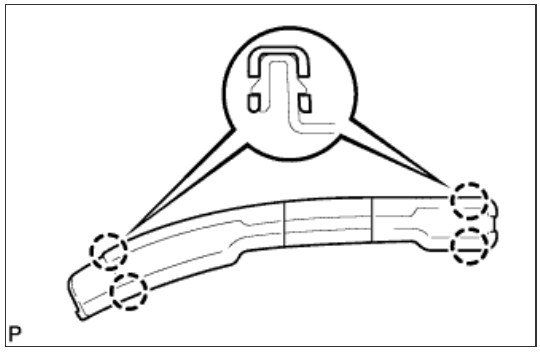

12. REMOVE NO. 3 SEAT LEG COVER NO. 2

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

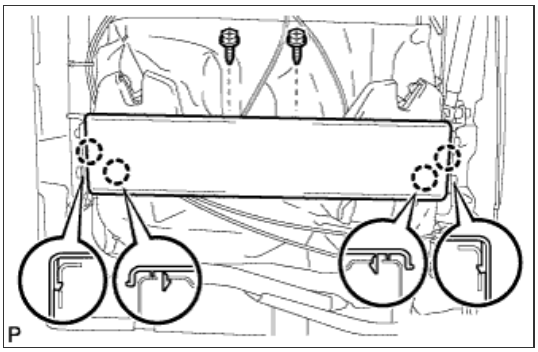


13. REMOVE REAR SEAT INNER BELT SUB-ASSEMBLY

a. Remove the nut and belt.


HINT:

The rear No. 2 seat inner belt is fi ed with the same nut as the rear seat inner belt. Therefore, it becomes disconnected when the nut is removed.

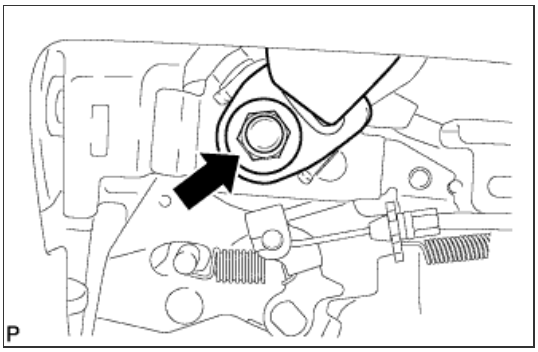

14. REMOVE REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Remove the belt.

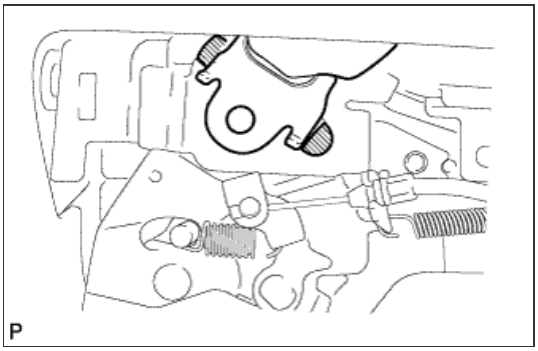

for Preparation Click here

1. REMOVE REAR NO. 2 SEAT ASSEMBLY LH

a. Remove the rear No. 2 seat assembly LH (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER


a. Using a screwdriver detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip be ore se.


Text in Illustration

	rotective Tape

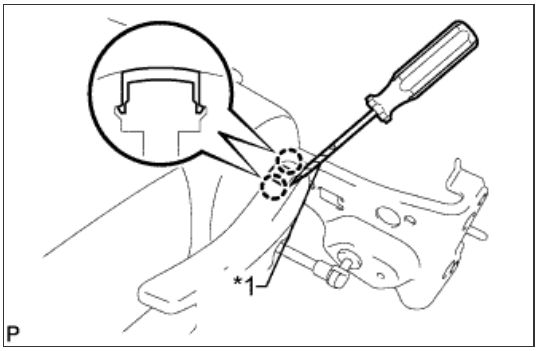

3. REMOVE NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

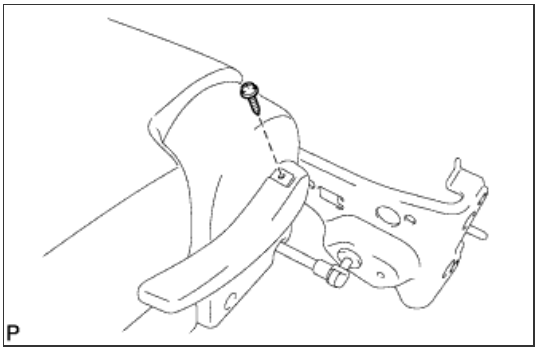

4. REMOVE RECLINING ADJUSTER COVER LH

a. Remove the screw.


b. Detach the 3 claws in the order shown in the ill stration and then remove the cover.

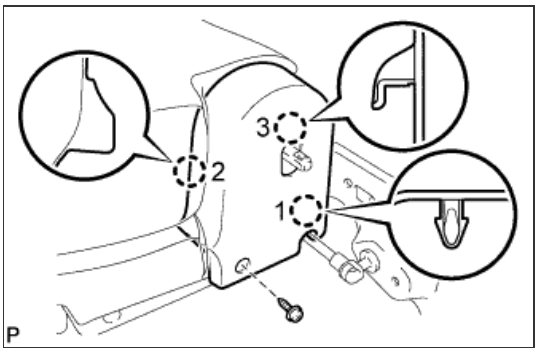

5. REMOVE RECLINING ADJUSTER COVER RH

a. Remove the screw.

b. Detach the claws in the order shown in the ill stration and then remove the cover.

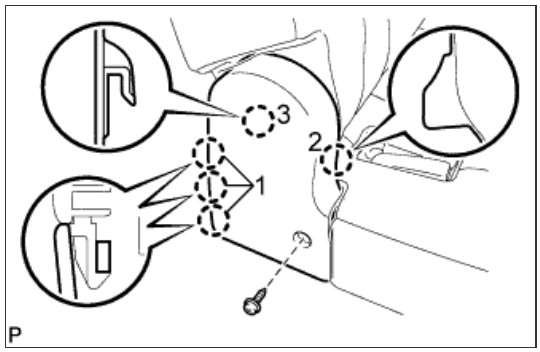


6. REMOVE REAR SEAT REAR BRACKET COVER REAR

a. Detach the 2 claws and cover.


7. REMOVE REAR NO. 3 SEAT LEG COVER LH

a. Using a screwdriver remove the spring o the seat stay ball oint.

b. Disconnect the seat stay.

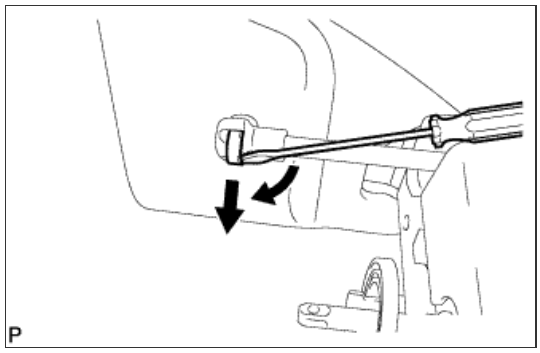


c. Remove the 2 screws and cover.

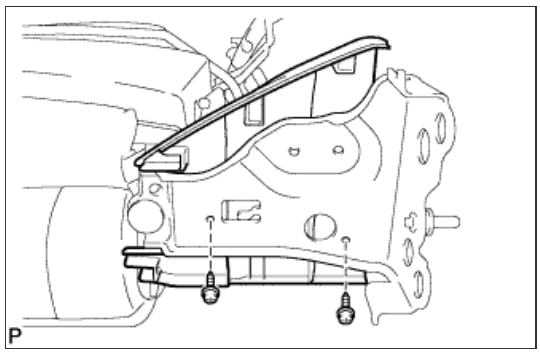


8. REMOVE NO. 2 SEAT LEG COVER NO. 2

a. Remove the screw and seat leg cover.

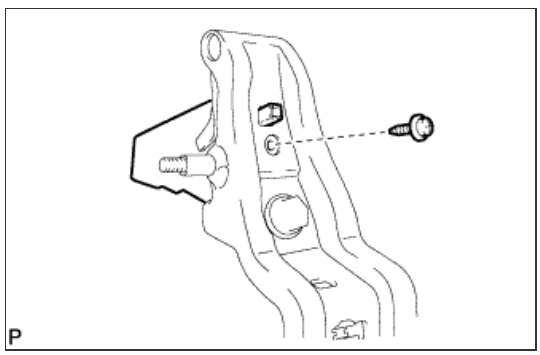


9. REMOVE 3RD SEAT LINK SUB-ASSEMBLY LH

a. Remove the bolt n t and seat link.

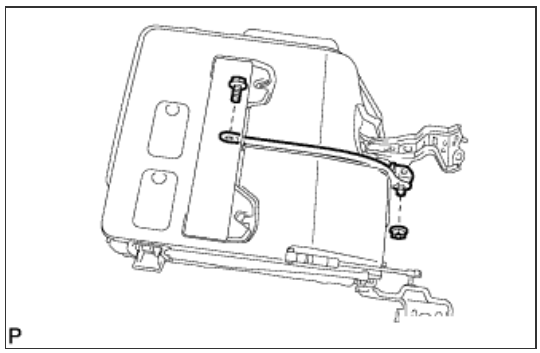


10. REMOVE REAR SEAT CUSHION UNDER COVER LH

a. Detach the claws.

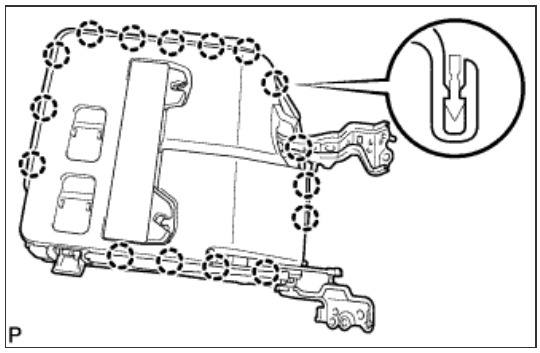


b. Remove the screws and cover.

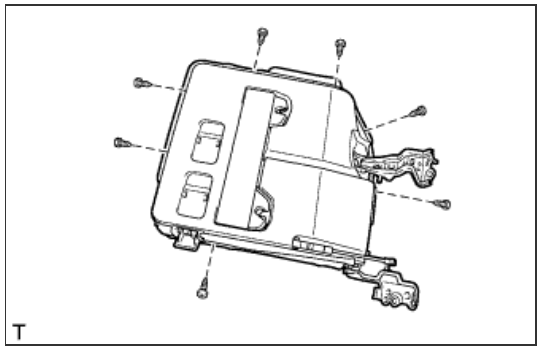

11. REMOVE NO. 3 SEAT FRONT BRACKET COVER LH


a. Detach the claws and remove the cover.

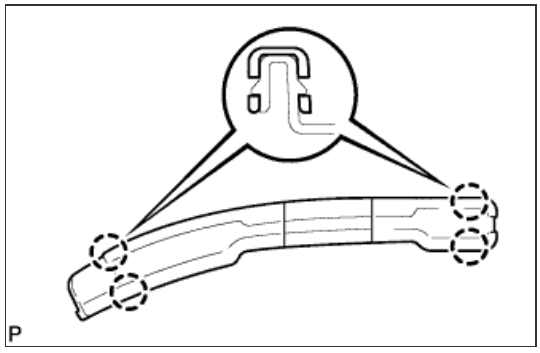

12. REMOVE NO. 3 SEAT LEG COVER NO. 2

a. Remove the 2 screws.

b. Detach the claws and remove the cover.

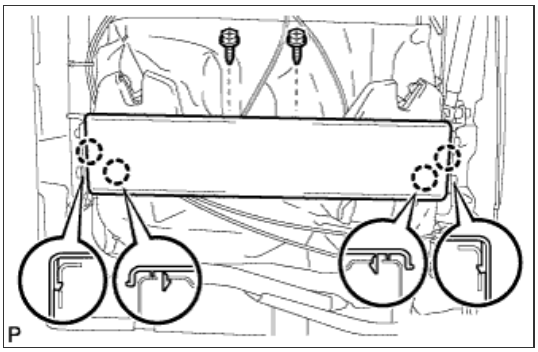


13. REMOVE REAR SEAT INNER BELT SUB-ASSEMBLY

a. Remove the n t and belt.


HINT:

The rear No. 2 seat inner belt is i ed with the same n t as the rear seat inner belt. There ore it becomes disconnected when the n t is removed.

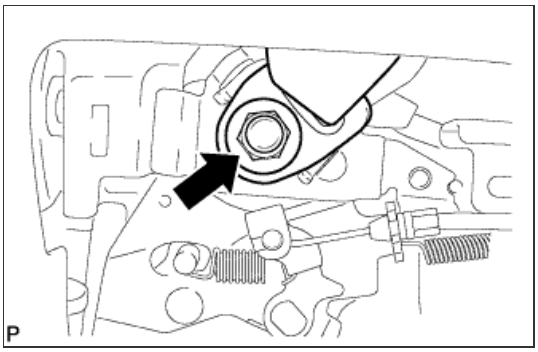

14. REMOVE REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Remove the belt.

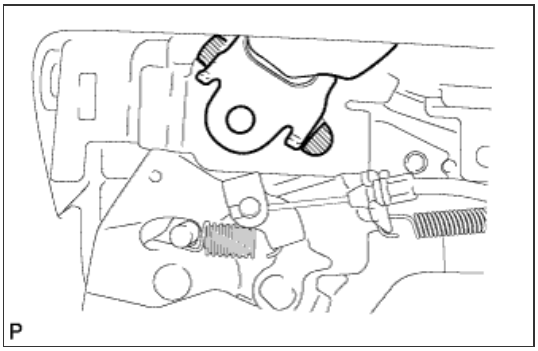


for Preparation Click here

1. INSTALL REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Install the belt.

NOTICE:

- **Make sure the claws are facing away from the seat.**
- **Do not overlap the anchor part of the seat belt and protruding parts of the seat.**

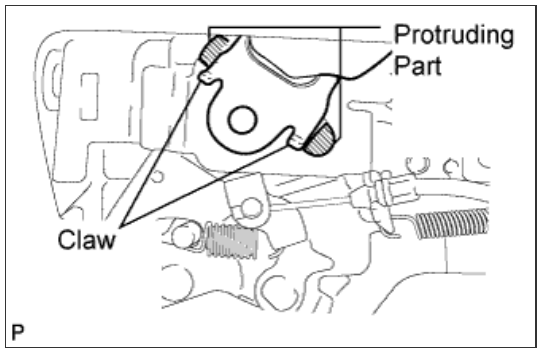

2. INSTALL REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:


The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, connect it when installing the rear seat inner belt.

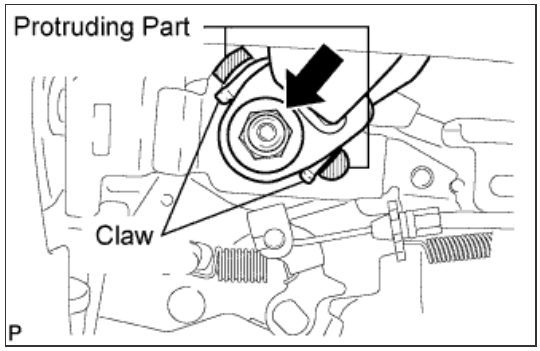

3. INSTALL NO. 3 SEAT LEG COVER NO. 2


a. Attach the 4 claws to install the cover.

b. Install the 2 screws.

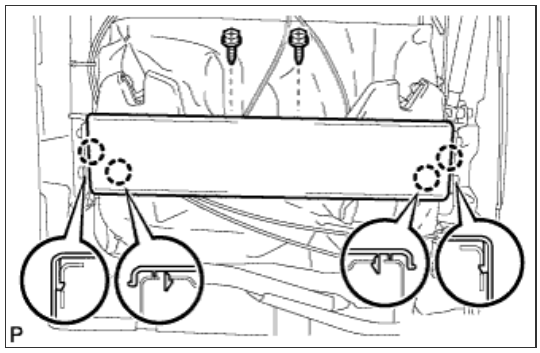


4. INSTALL NO. 3 SEAT FRONT BRACKET COVER LH

a. Attach the 4 claws to install the cover.

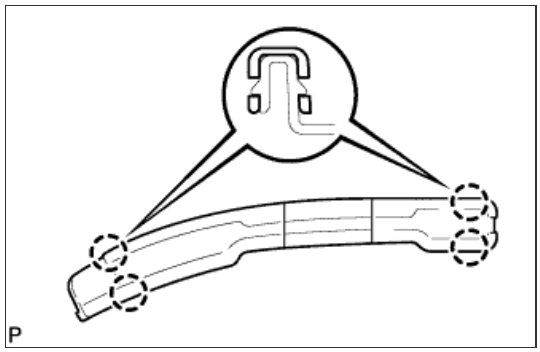


5. INSTALL REAR SEAT CUSHION UNDER COVER LH

a. Install the cover with the 8 screws.

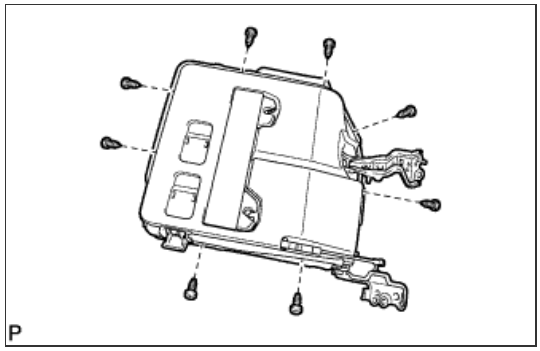


b. Attach the 16 claws.

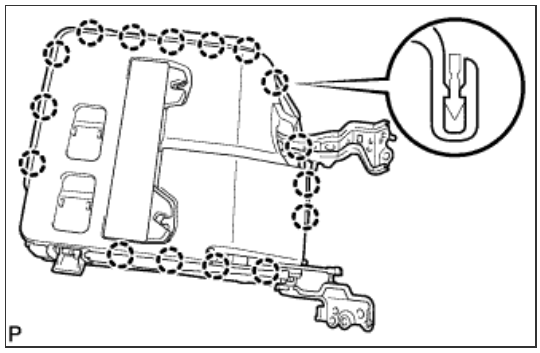

6. INSTALL 3RD SEAT LIN SUB-ASSEMBLY LH


a. Install the seat link with the bolt and nut.

Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

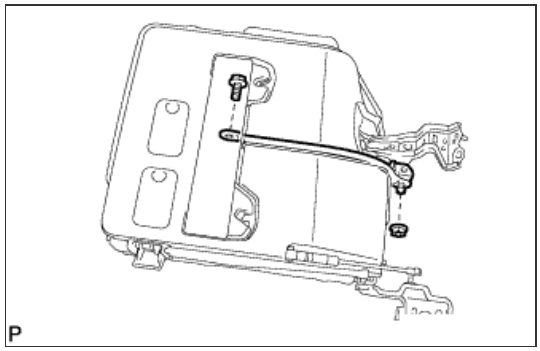


7. INSTALL NO. 2 SEAT LEG COVER NO. 2

a. Install the seat leg cover with the screw.

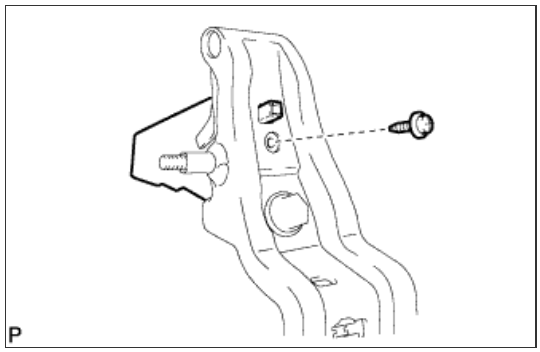


8. INSTALL REAR NO. 3 SEAT LEG COVER LH

a. Install the seat leg cover with the 2 screws.

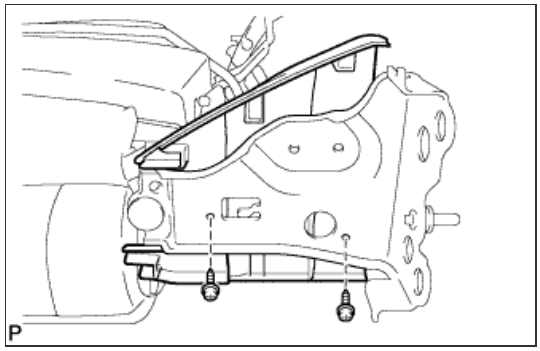

b. Install the spring of the seat stay ball-joint.

c. Connect the seat stay to the seat frame.

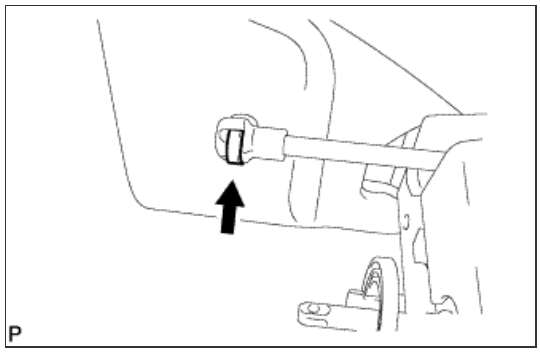


. INSTALL REAR SEAT REAR BRAC ET COVER REAR

a. Attach the 2 claws to install the cover.

10. INSTALL RECLINING ADJUSTER COVER RH

a. Attach the 5 claws in the order shown in the illustration to install the cover.


b. Install the screw.

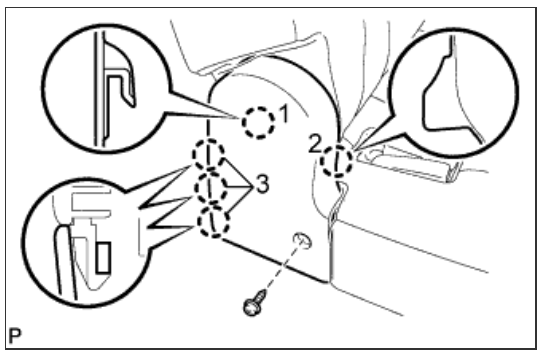

11. INSTALL RECLINING ADJUSTER COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the screw.

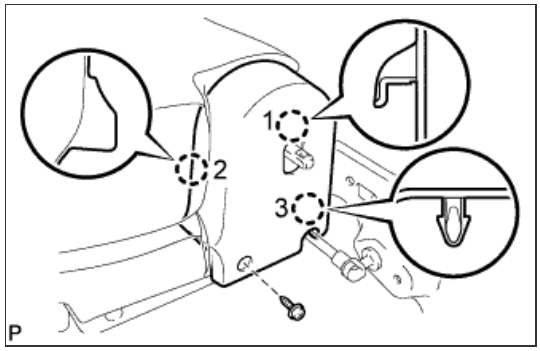


12. INSTALL NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

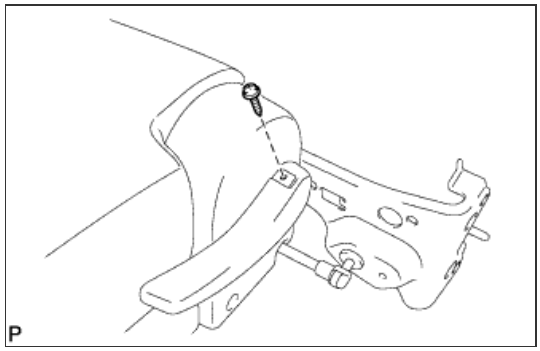

13. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

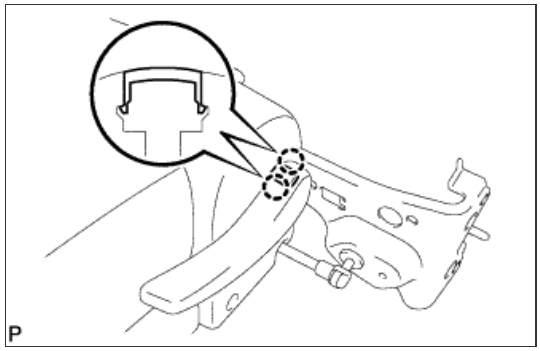

14. INSTALL REAR NO. 2 SEAT ASSEMBLY LH

a. Install the rear No. 2 seat assembly (Click here).


for Preparation Click here

1. INSTALL REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Install the belt.

NOTICE:

- **Make sure the claws are facing away from the seat.**
- **Do not overlap the anchor part of the seat belt and protruding parts of the seat.**

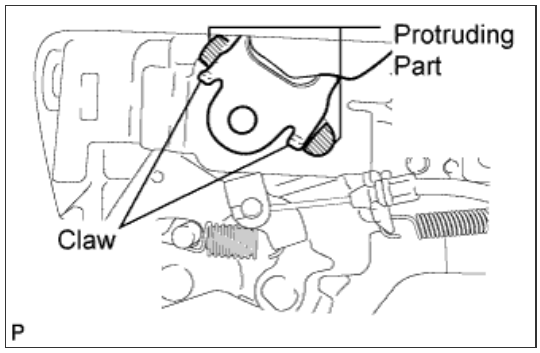

2. INSTALL REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:


The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, connect it when installing the rear seat inner belt.

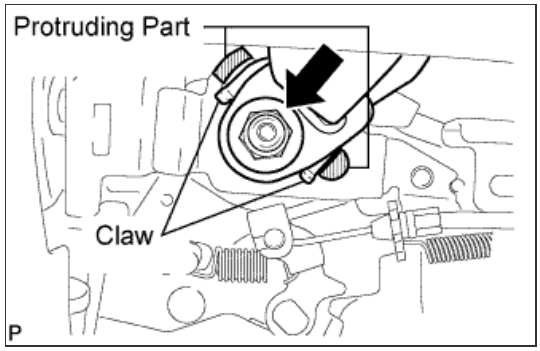

3. INSTALL NO. 3 SEAT LEG COVER NO. 2


a. Attach the 4 claws to install the cover.

b. Install the 2 screws.

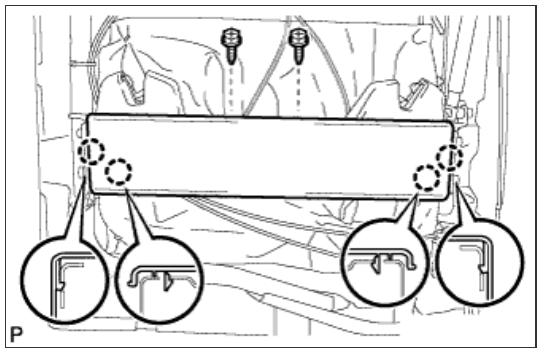


4. INSTALL NO. 3 SEAT FRONT BRACKET COVER LH

a. Attach the 4 claws to install the cover.

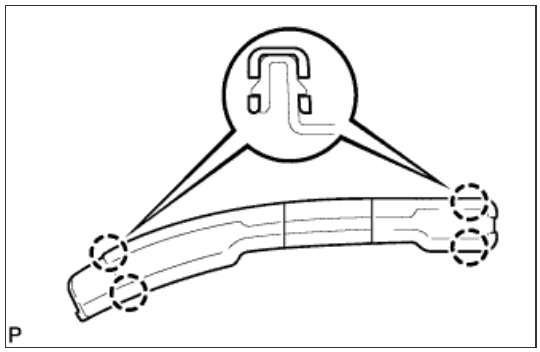


5. INSTALL REAR SEAT CUSHION UNDER COVER LH

a. Install the cover with the 8 screws.

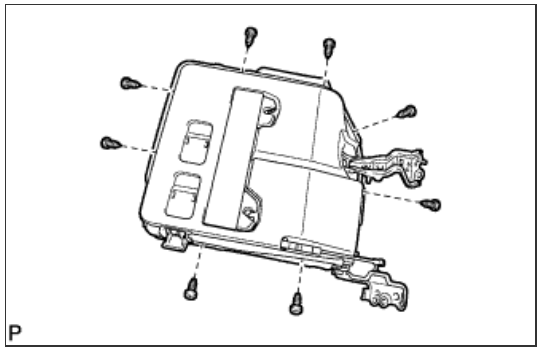


b. Attach the 16 claws.

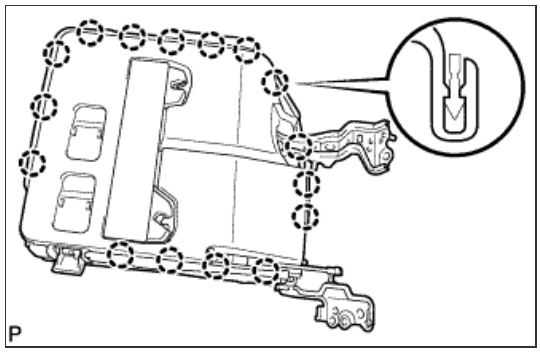

6. INSTALL 3RD SEAT LIN SUB-ASSEMBLY LH


a. Install the seat link with the bolt and nut.

Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

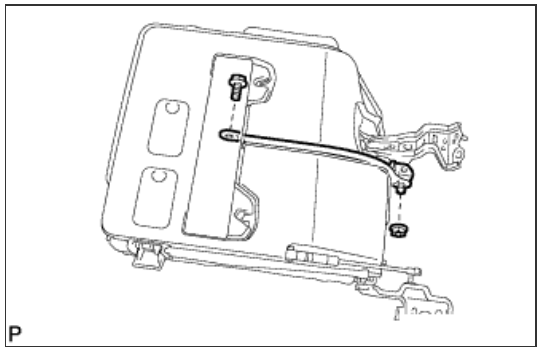


7. INSTALL NO. 2 SEAT LEG COVER NO. 2

a. Install the seat leg cover with the screw.

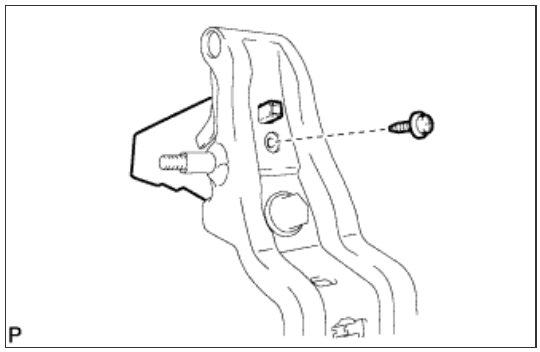


8. INSTALL REAR NO. 3 SEAT LEG COVER LH

a. Install the seat leg cover with the 2 screws.

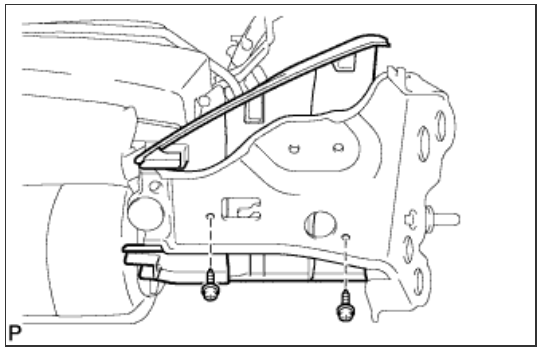

b. Install the spring of the seat stay ball-joint.

c. Connect the seat stay to the seat frame.

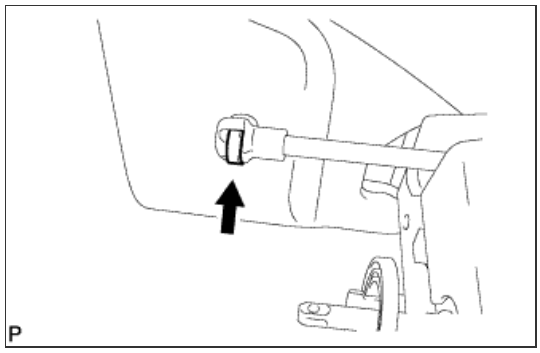


. INSTALL REAR SEAT REAR BRAC ET COVER REAR

a. Attach the 2 claws to install the cover.

10. INSTALL RECLINING ADJUSTER COVER RH

a. Attach the 5 claws in the order shown in the illustration to install the cover.


b. Install the screw.

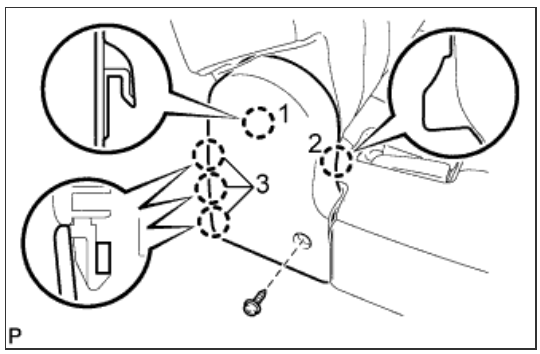

11. INSTALL RECLINING ADJUSTER COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the screw.

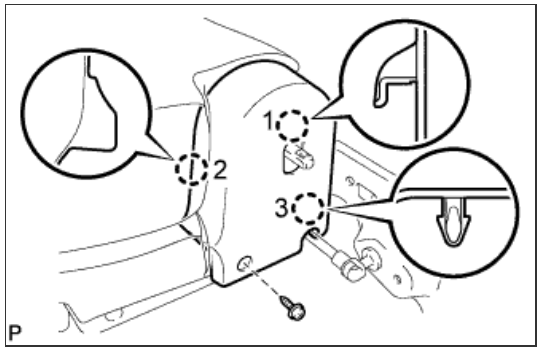


12. INSTALL NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

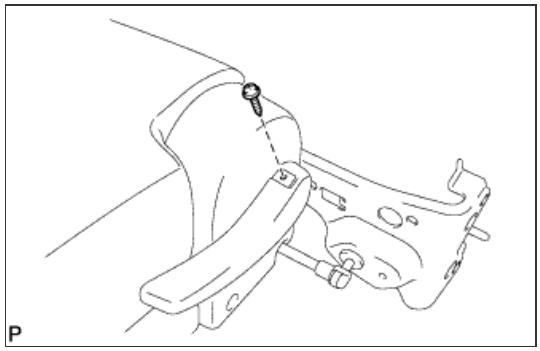

13. INSTALL SEAT ADJUSTER BOLT COVER

a. Attach the 2 claws to install the cover.

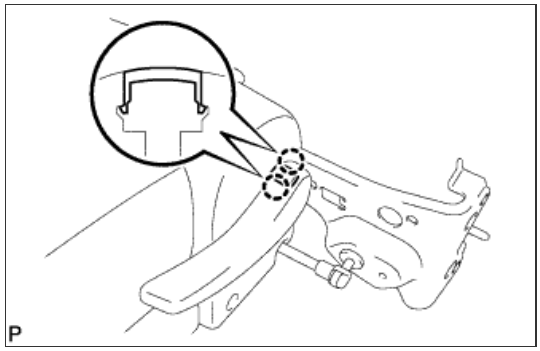

14. INSTALL REAR NO. 2 SEAT ASSEMBLY LH

a. Install the rear No. 2 seat assembly (Click here).


for Preparation Click here

1. INSTALL REAR NO. 2 SEAT INNER BELT SUB-ASSEMBLY

a. Install the belt.

NOTICE:

- **Make sure the claws are facing away from the seat.**
- **Do not overlap the anchor part of the seat belt and protruding parts of the seat.**

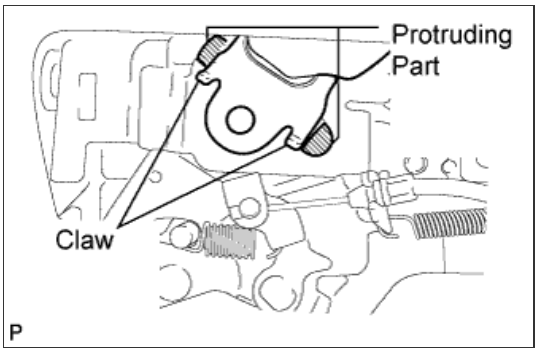

2. INSTALL REAR SEAT INNER BELT SUB-ASSEMBLY (for LH Side)

a. Install the belt with the nut.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the seat.

HINT:


The rear No. 2 seat inner belt is fixed with the same nut as the rear seat inner belt. Therefore, connect it when installing the rear seat inner belt.

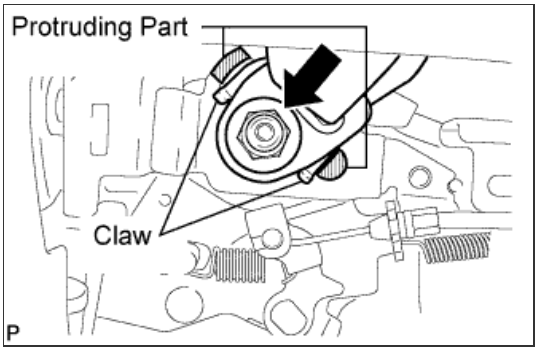

3. INSTALL NO. 3 SEAT LEG COVER NO. 2


a. Attach the claws to install the cover.

b. Install the 2 screws.

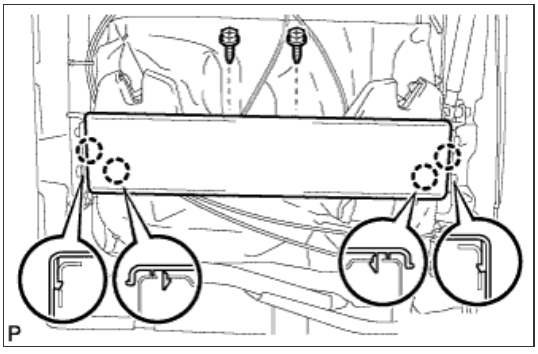


4. INSTALL NO. 3 SEAT FRONT BRACKET COVER LH

a. Attach the claws to install the cover.

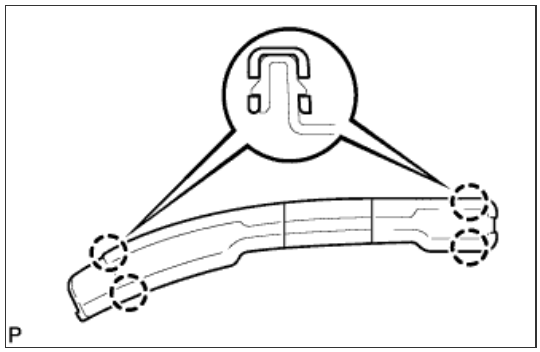


5. INSTALL REAR SEAT CUSHION UNDER COVER LH

a. Install the cover with the screws.

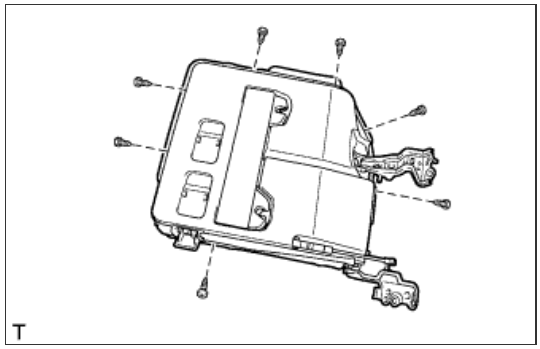


b. Attach the 1 claws.

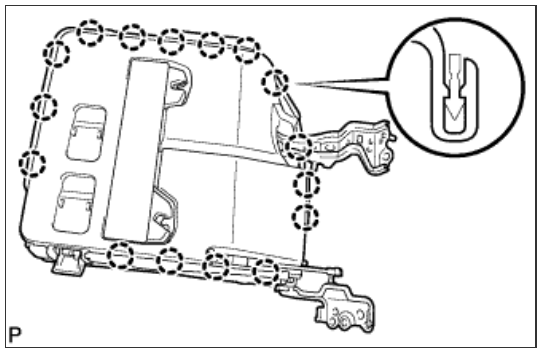

6. INSTALL 3RD SEAT LIN SUB-ASSEMBLY LH


a. Install the seat lin with the bolt and nut.

Torque:
8.5 N*m{ 87 kgf*cm , 75 in.*lbf }

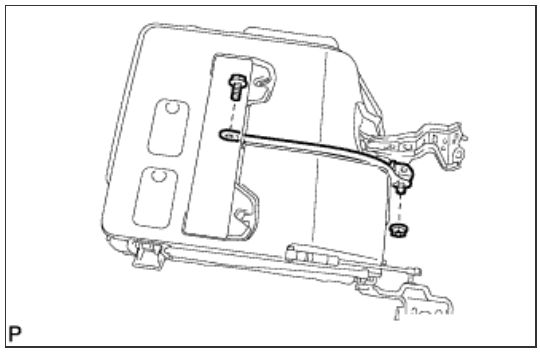


7. INSTALL NO. 2 SEAT LEG COVER NO. 2

a. Install the seat leg cover with the screw.

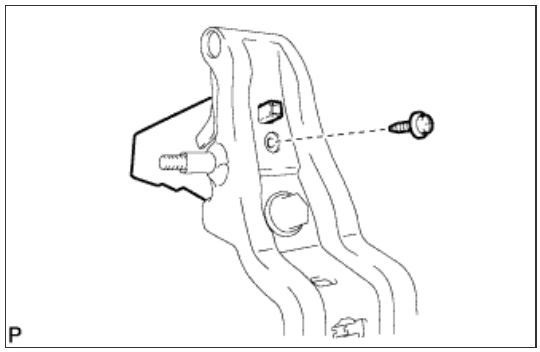


8. INSTALL REAR NO. 3 SEAT LEG COVER LH

a. Install the seat leg cover with the 2 screws.

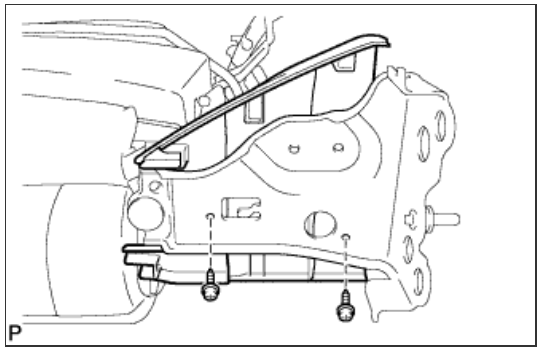

b. Install the spring of the seat sta ball oint.

c. onnect the seat sta to the seat frame.

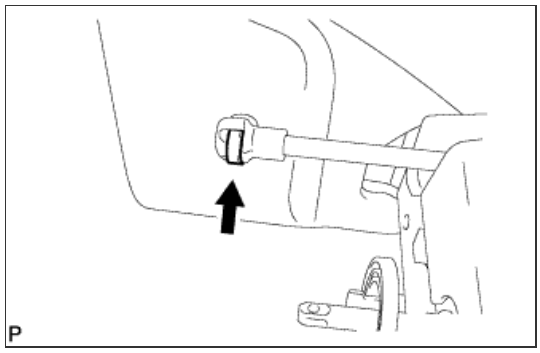


. INSTALL REAR SEAT REAR BRAC ET COVER REAR

a. Attach the 2 claws to install the cover.

10. INSTALL RECLINING ADJUSTER COVER RH

a. Attach the 5 claws in the order shown in the illustration to install the cover.


b. Install the screw.

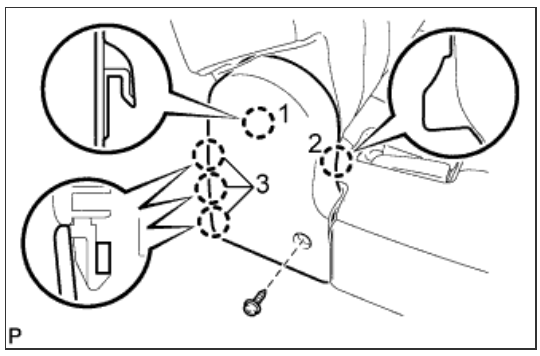

11. INSTALL RECLINING ADJUSTER COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the screw.

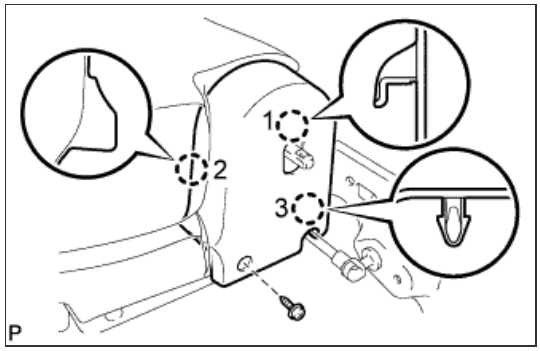


12. INSTALL NO. 2 RECLINING ADJUSTER RELEASE HANDLE LH

a. Install the release handle with the screw.

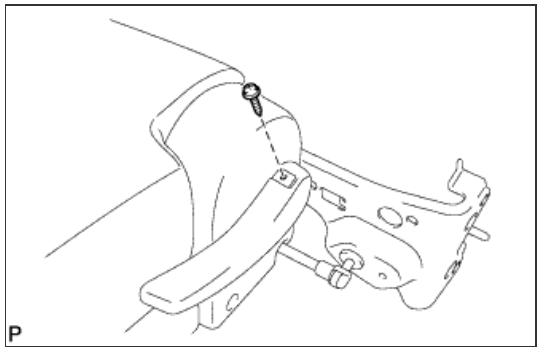

13. INSTALL SEAT ADJUSTER BOLT COVER


a. Attach the 2 claws to install the cover.

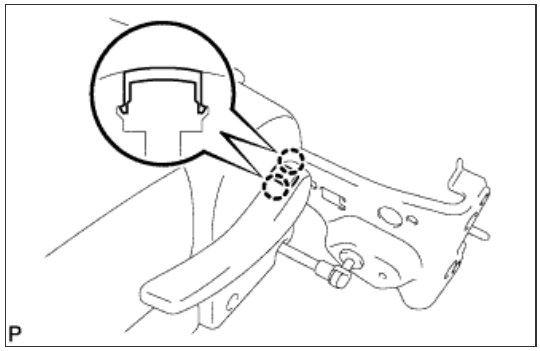



14. INSTALL REAR NO. 2 SEAT ASSEMBLY LH

a. Install the rear No. 2 seat assembl （ lic here).

for Preparation Click here

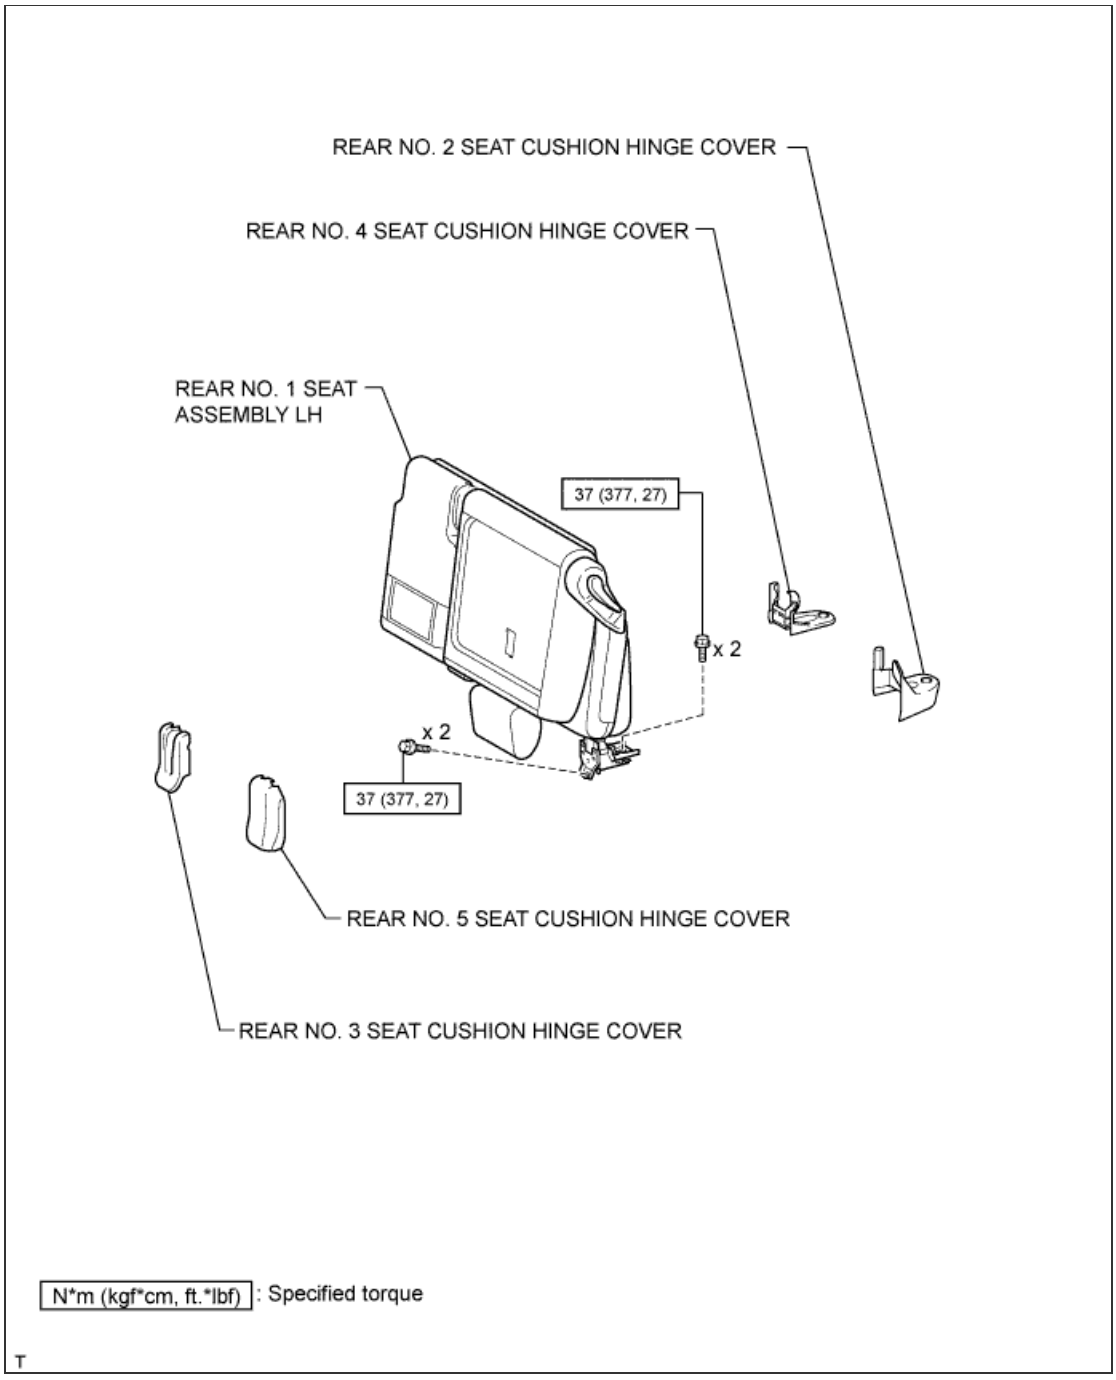

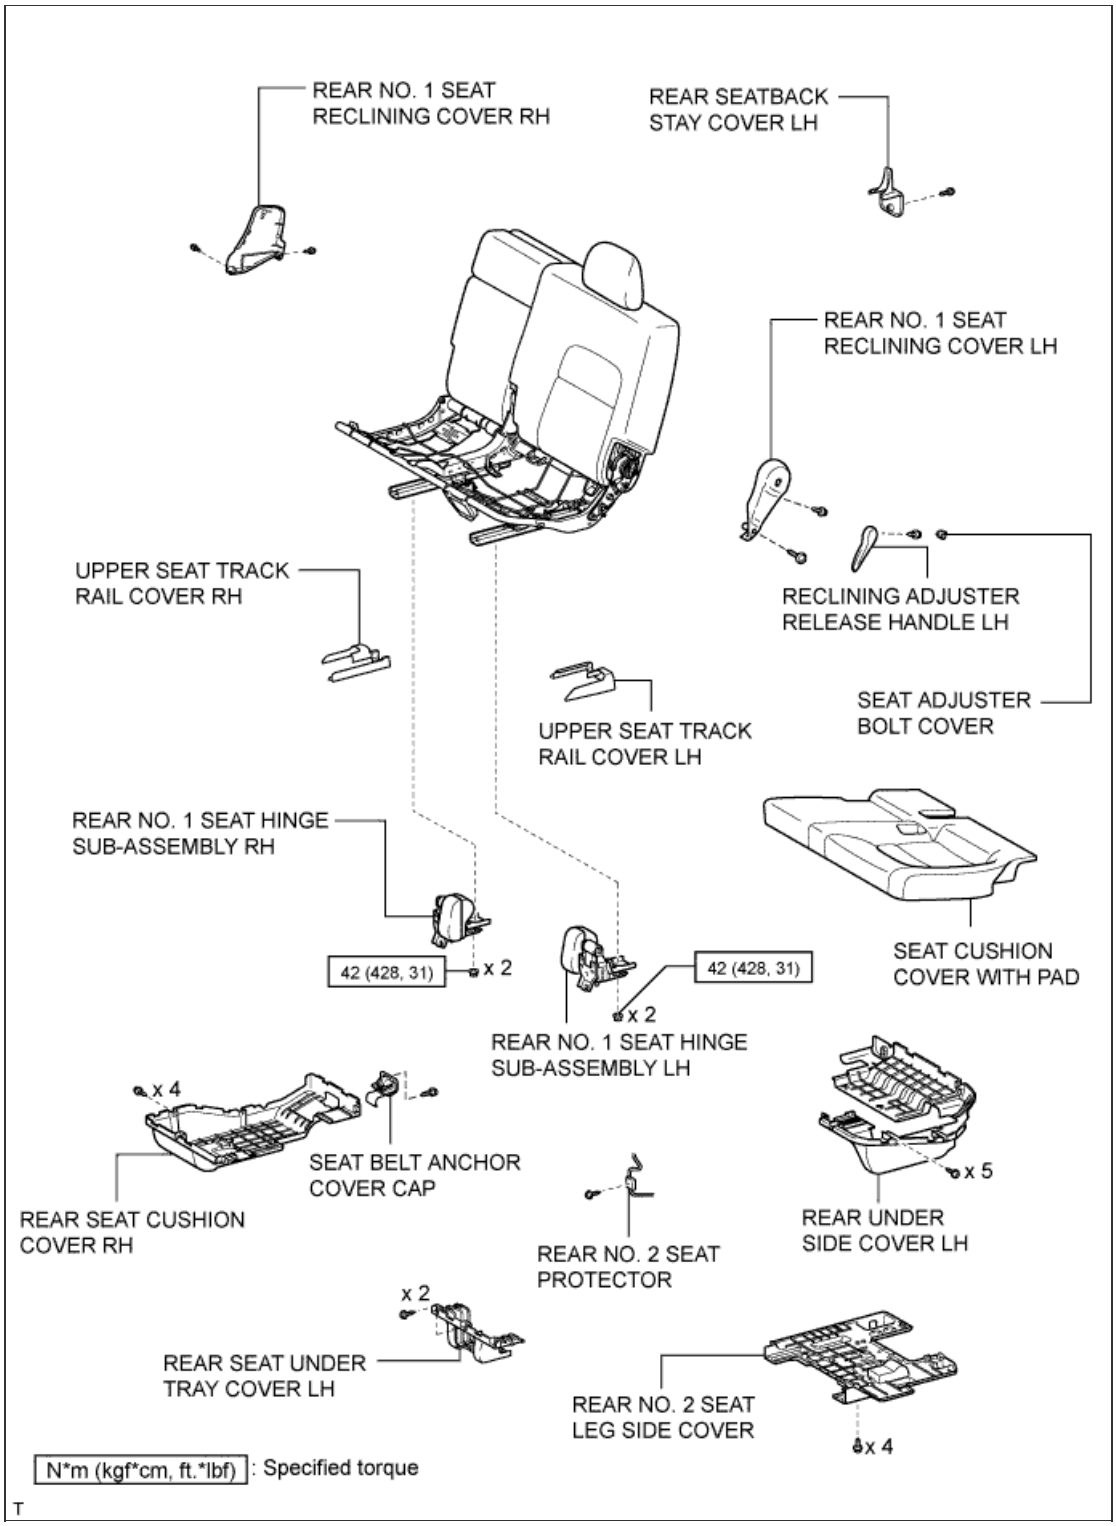
REAR NO. 1 SEAT RECLINING COVER RH
REAR SEATBACK STAY COVER LH
REAR NO. 1 SEAT RECLINING COVER LH
UPPER SEAT TRACK RAIL COVER RH
RECLINING ADJUSTER RELEASE HANDLE LH
SEAT ADJUSTER BOLT COVER
UPPER SEAT TRACK RAIL COVER LH
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH
SEAT CUSHION COVER WITH PAD
42 (428, 31)
x 2
42 (428, 31)
x 2
REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH
x 4
SEAT BELT ANCHOR COVER CAP
x 5
REAR SEAT CUSHION COVER RH
REAR NO. 2 SEAT PROTECTOR
REAR UNDER SIDE COVER LH
x 2
REAR SEAT UNDER TRAY COVER LH
REAR NO. 2 SEAT LEG SIDE COVER
x 4
N*m (kgf*cm, ft.*lbf) : Specified torque
T

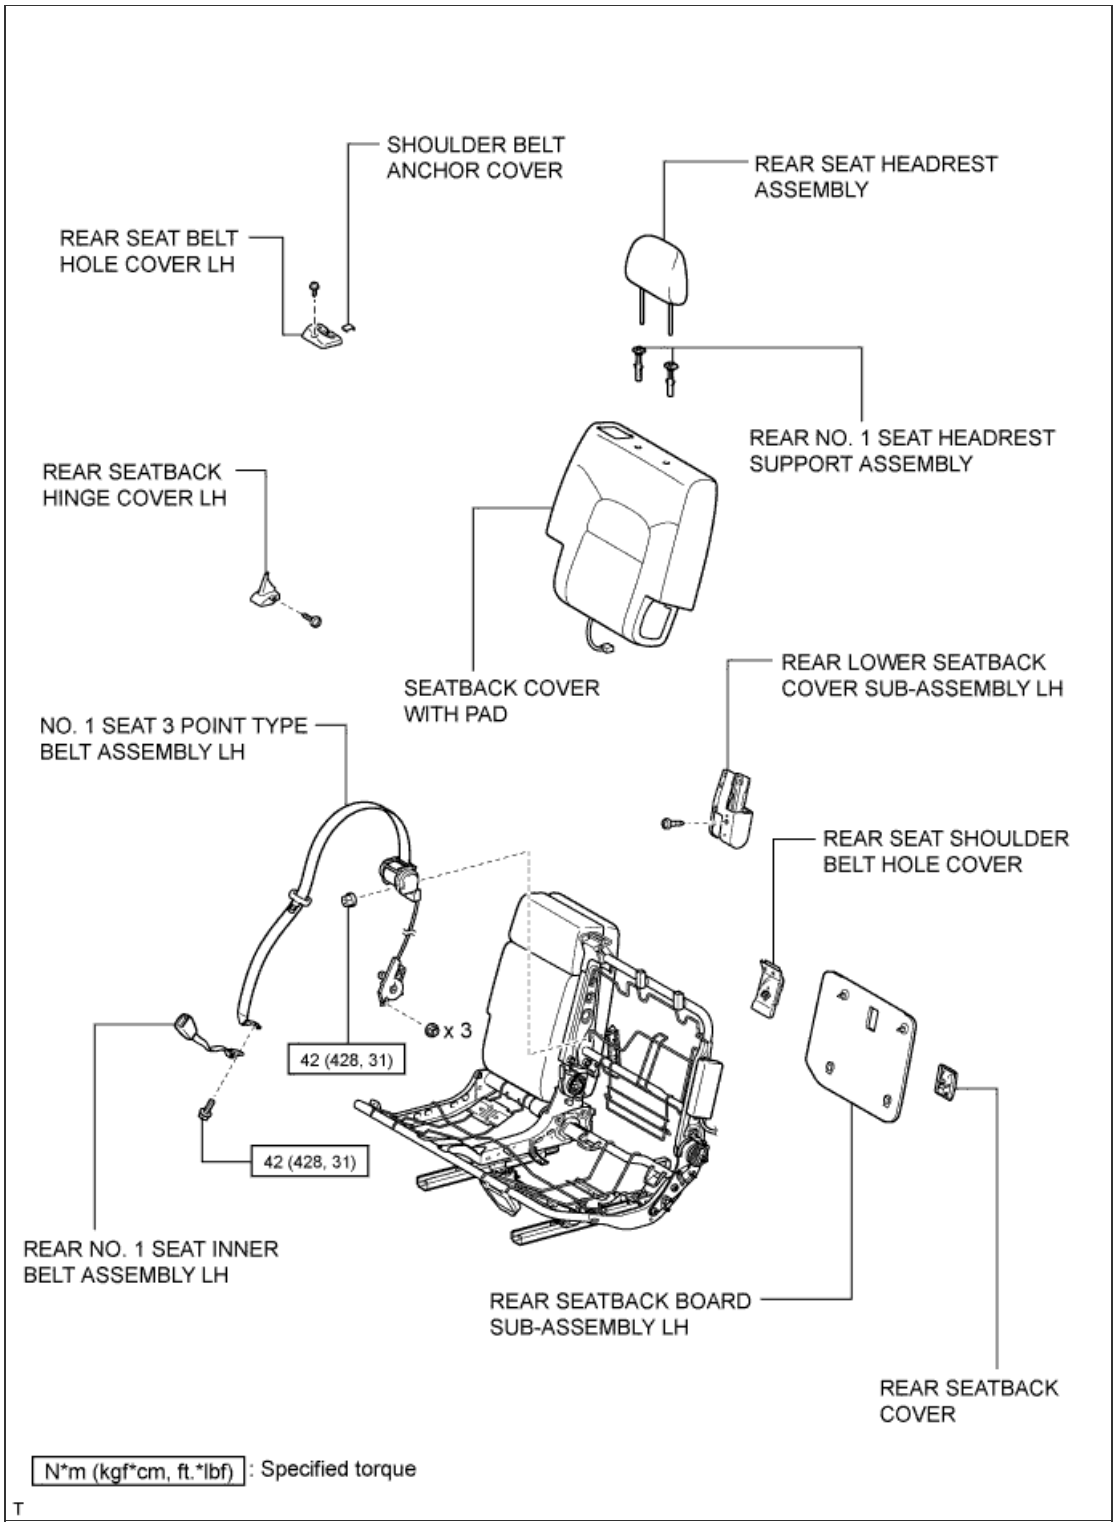
SHOULDER BELT ANCHOR COVER
REAR SEAT BELT HOLE COVER LH
REAR SEAT HEADREST ASSEMBLY
REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY
REAR SEATBACK HINGE COVER LH
SEATBACK COVER WITH PAD
REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH
NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH
REAR SEAT SHOULDER BELT HOLE COVER
x 3
42 (428, 31)
42 (428, 31)
REAR NO. 1 SEAT INNER BELT ASSEMBLY LH
REAR SEATBACK BOARD SUB-ASSEMBLY LH
REAR SEATBACK COVER
N*m (kgf*cm, ft.*lbf) : Specified torque
T

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY LH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

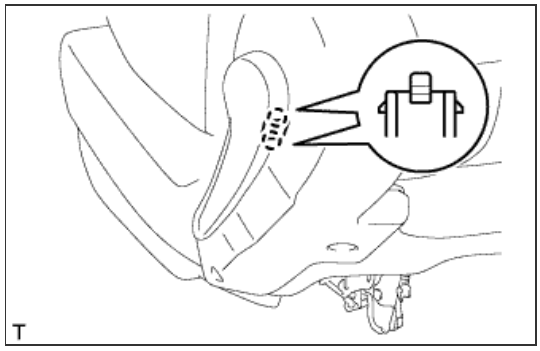

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

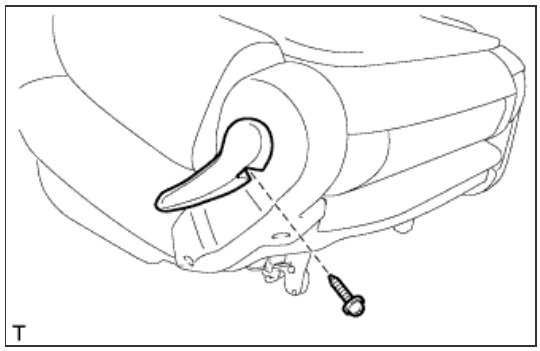

4. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

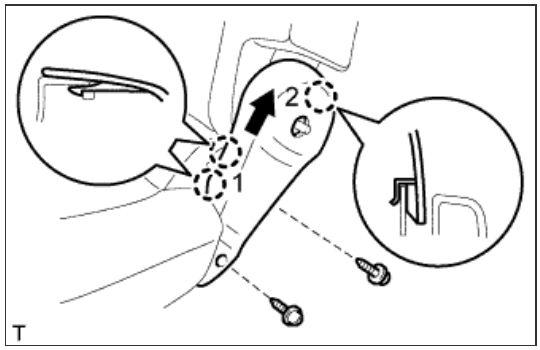

5. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

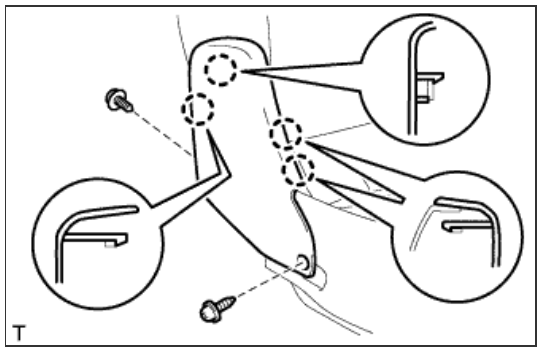


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

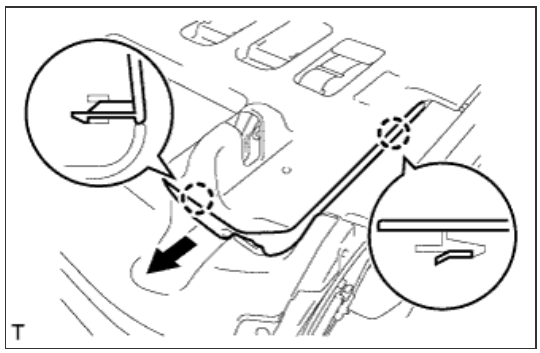


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

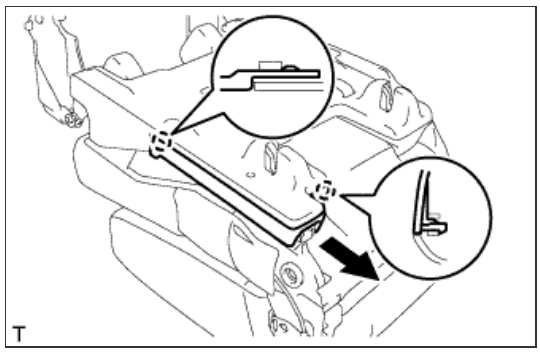


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 4 claws.

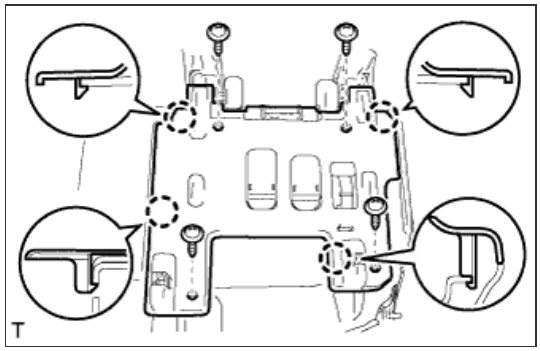


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

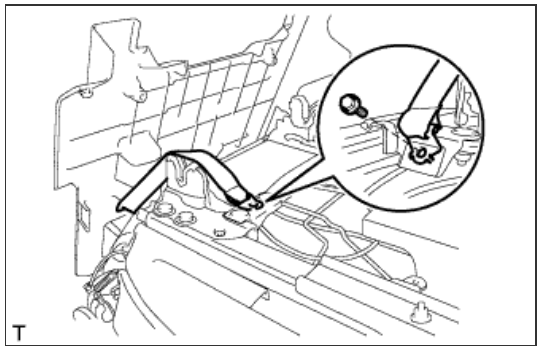

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

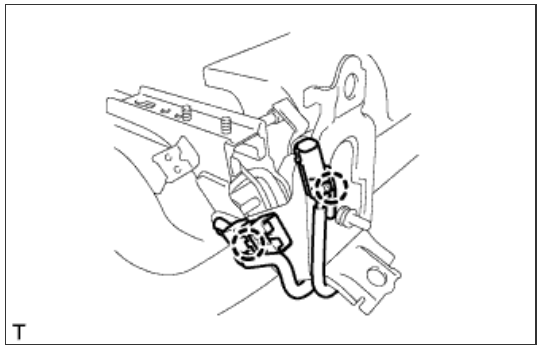

c. Using a clip remover, remove the clip.

d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove wire harness.

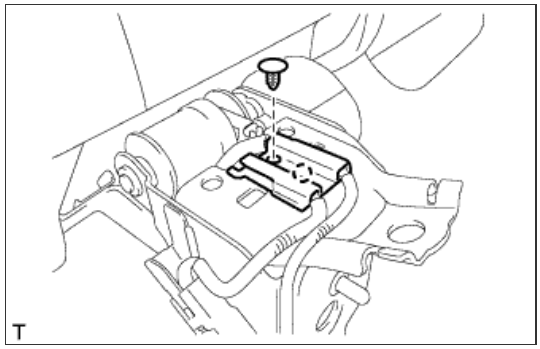


10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

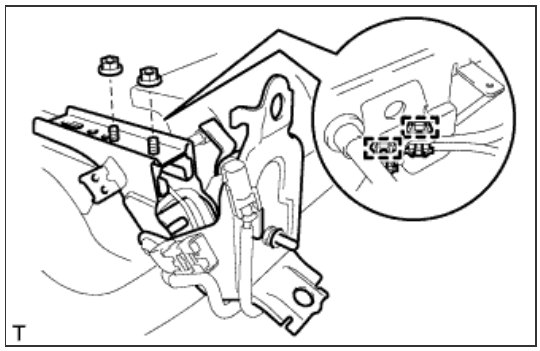


d. Detach the cable clamp and disconnect the cable.

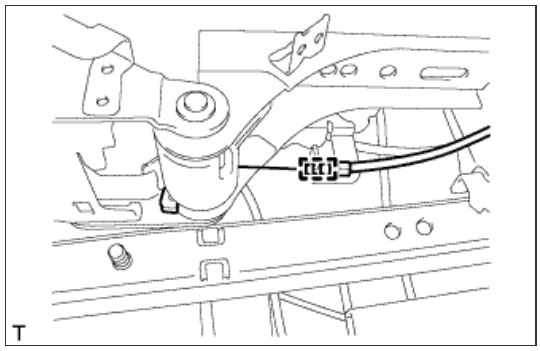


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Remove the 2 nuts and hinge.

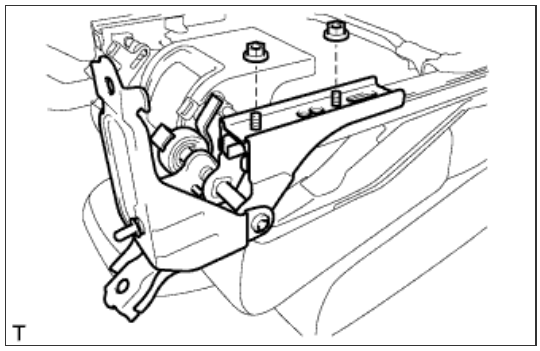


12. REMOVE SEAT BELT ANCHOR COVER CAP

a. Detach the claw and open the cap.

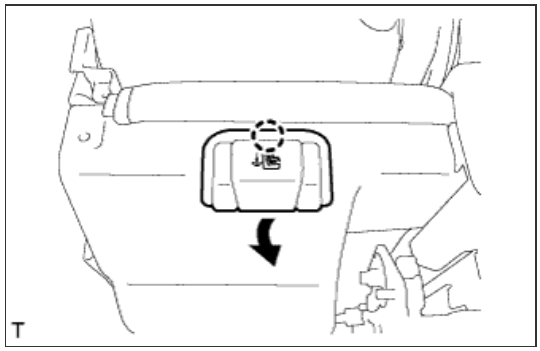


b. Remove the screw and anchor cover cap.

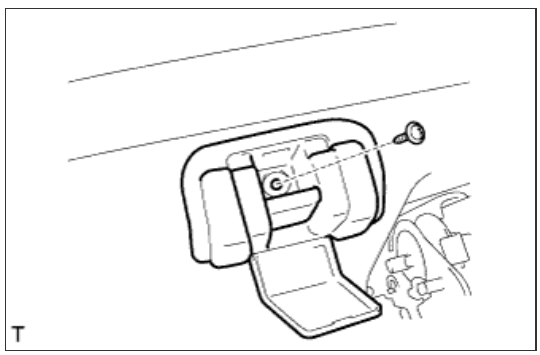

13. REMOVE REAR SEATBACK STAY COVER LH


a. Remove the screw.

b. Detach the 2 claws and remove the cover.

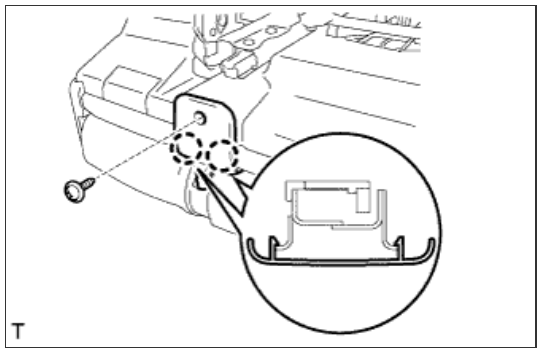


14. REMOVE REAR UNDER SIDE COVER LH

a. Detach the 10 claws.

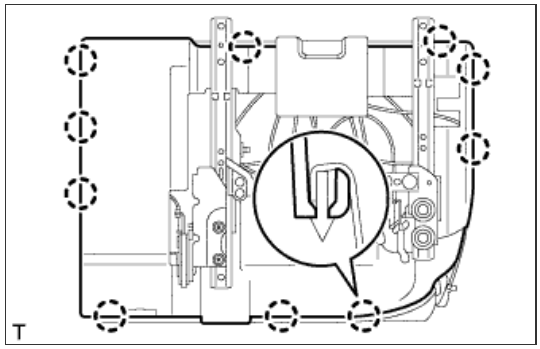

b. Remove the 5 screws.


c. Detach the 2 clips and 2 claws, and remove the cover.

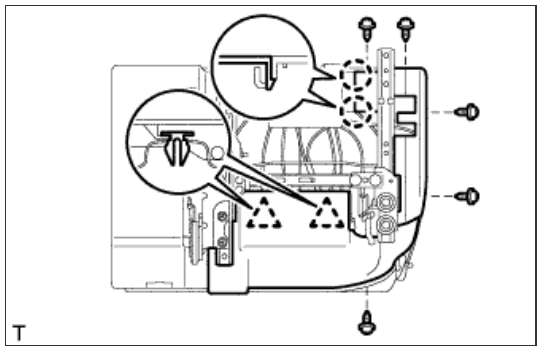

15. REMOVE REAR SEAT CUSHION COVER RH

a. Remove the 4 screws.


b. Detach the 2 claws and remove the cover.

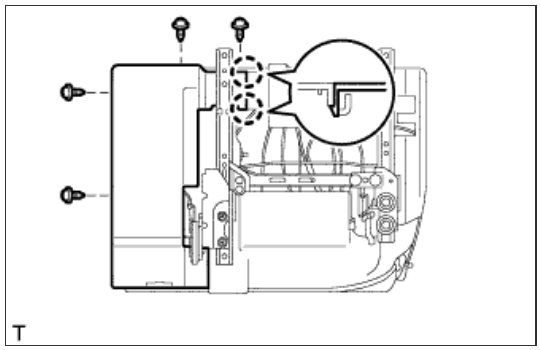

16. REMOVE REAR SEAT UNDER TRAY COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

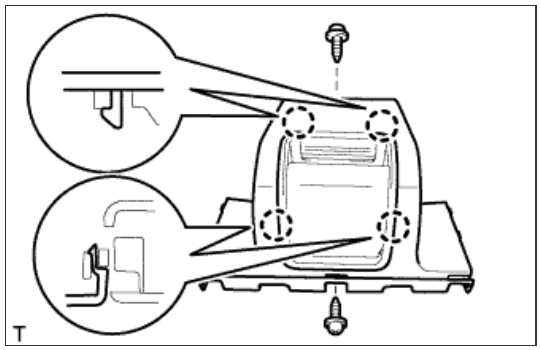


17. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Remove the bolt and belt.

HINT:

The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, it becomes disconnected when the bolt is removed.

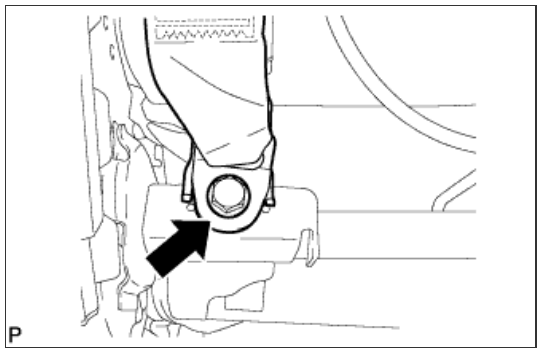

18. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.

ii. Remove the side airbag wire harness through the hole in the seat cushion.


b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

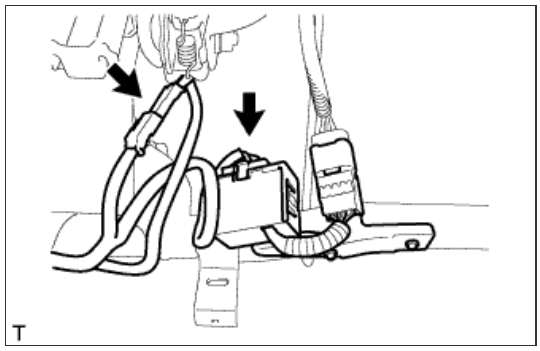

ii. Remove the seatback heater wire harness through the hole in the seat cushion.

c. Remove the seat cushion cover with pad.

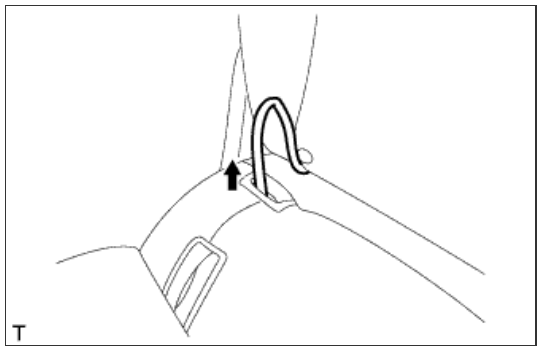


19. REMOVE REAR SEATBACK COVER

a. Using a screwdriver, detach the 4 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

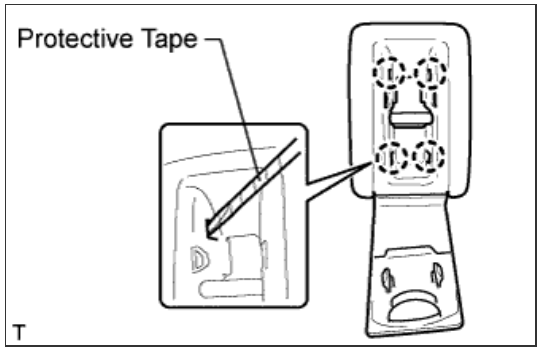


20. REMOVE REAR SEATBACK BOARD SUB-ASSEMBLY LH

a. w/ Center Armrest:

i. Detach the 2 claws on the top of the board.


ii. Pull up the board to detach the 2 claws on the bottom of the board and remove it.

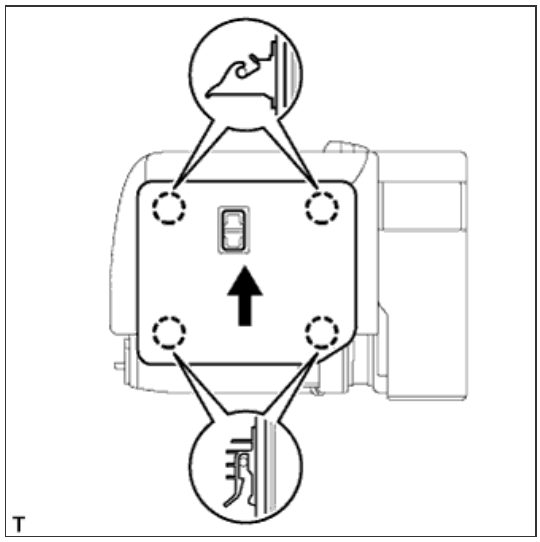

b. w/o Center Armrest:

i. Detach the 3 claws on the top of the board.


ii. Pull up the board to detach the 3 claws on the bottom of the board and remove it.

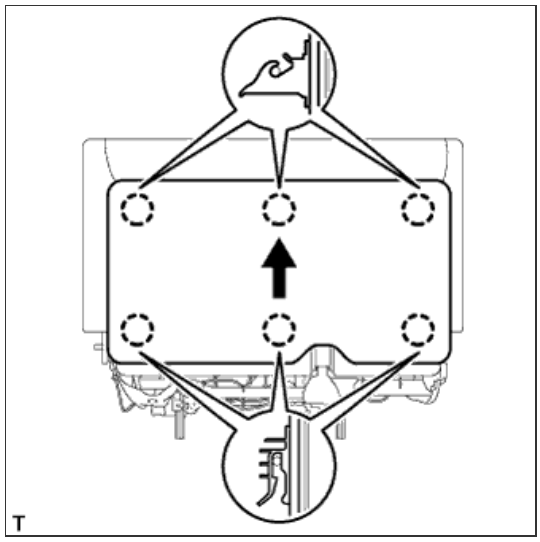


21. REMOVE REAR SEAT HEADREST ASSEMBLY

22. REMOVE REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ Center Armrest:
Detach the 4 claws and remove the 2 supports.

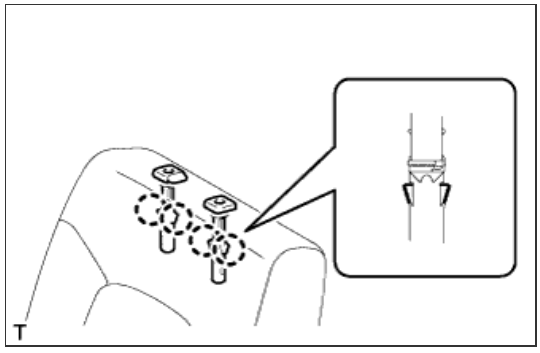

b. w/o Center Armrest:
Detach the 8 claws and remove the 4 supports.

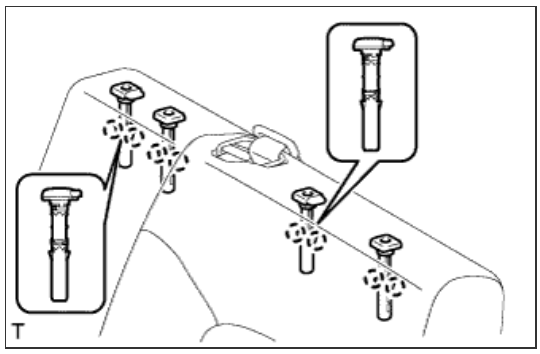


23. REMOVE SHOULDER BELT ANCHOR COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

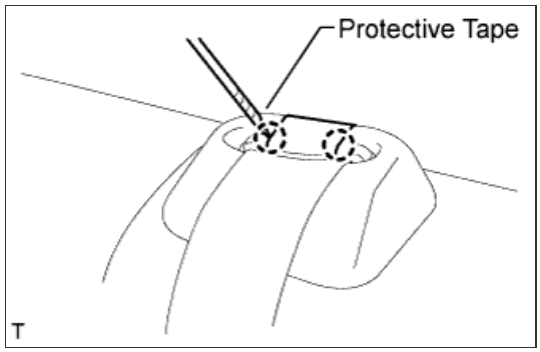

24. REMOVE REAR SEAT BELT HOLE COVER LH


a. Remove the screw.

b. Detach the 4 claws and remove the cover.

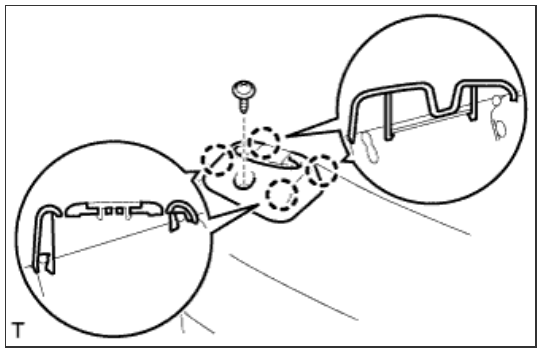

25. REMOVE SEATBACK COVER WITH PAD


a. w/ Center Armrest:
Remove the hog rings.

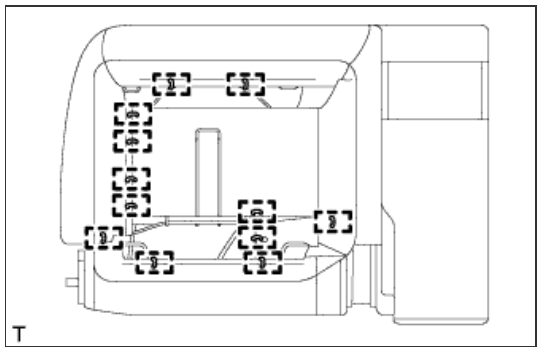

b. w/o Center Armrest:

i. Remove the hog rings.


ii. Detach the hook.

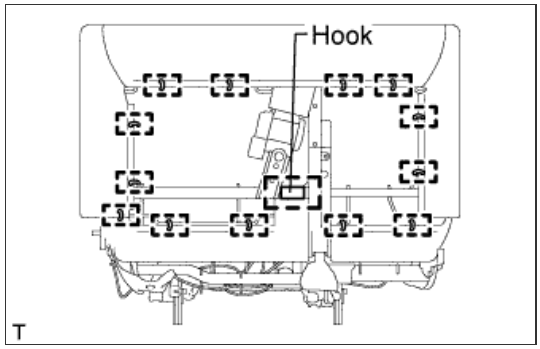

c. w/ Rear Seat Side Airbag:


i. Remove the cap nut and seatback cover bracket from the seat frame.

ii. Remove the side airbag wire harness through the hole in the seatback.

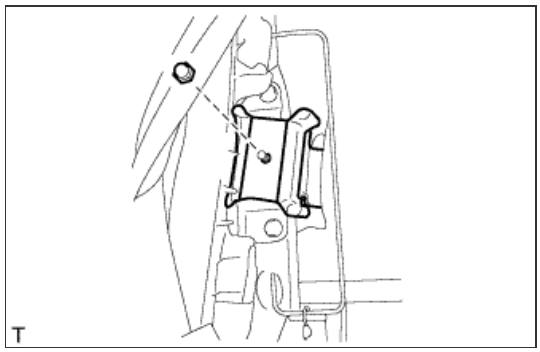


d. w/ Seat Heater System:


i. Cut the cable tie and disconnect the seatback heater wire harness.

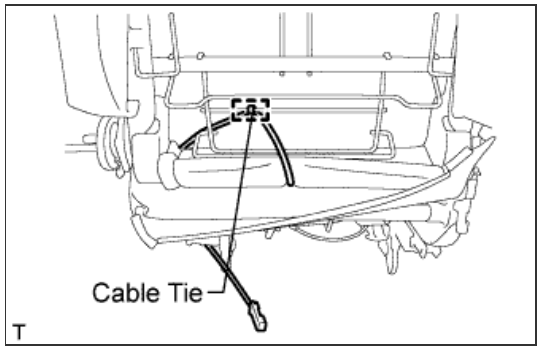

ii. Remove the seatback heater wire harness through the hole in the seatback.

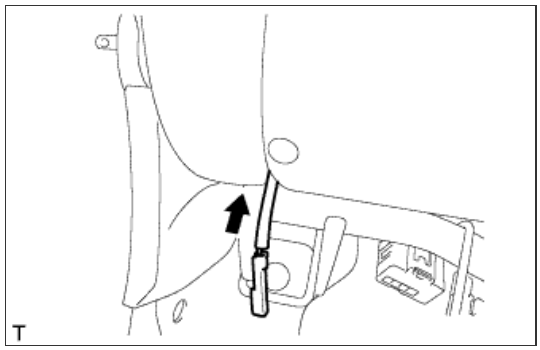


e. w/ Center Armrest:
Pull the seat belt into the inside of the seat.

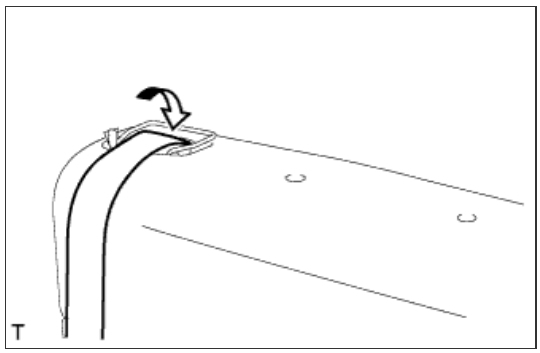

f. w/o Center Armrest:
Pull the seat belt into the inside of the seat.


g. Remove the seatback cover with pad.

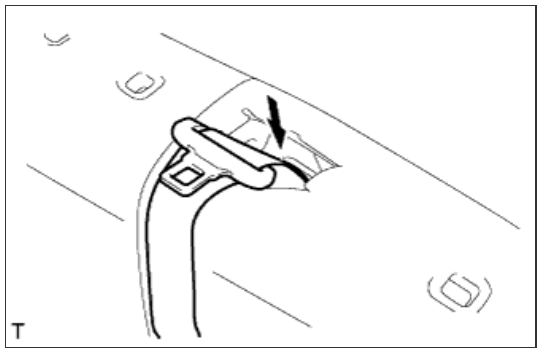

26. REMOVE REAR SEAT BACK HINGE COVER LH

a. Remove the screw.


b. Detach the claw and remove the cover.

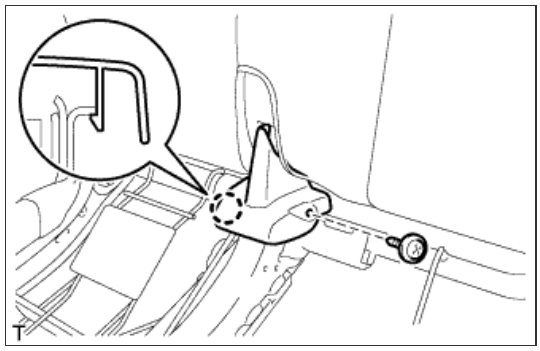

27. REMOVE REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH


a. Remove the 4 screws.

b. Detach the 4 claws and remove the cover.

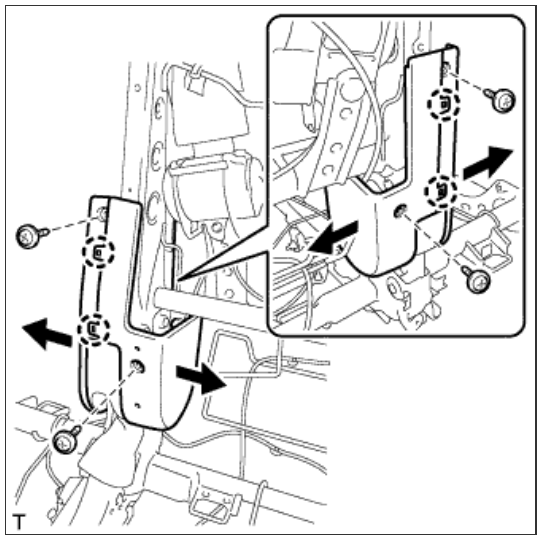

28. REMOVE REAR SEAT SHOULDER BELT HOLE COVER


a. Using a screwdriver, detach the 3 claws and remove the shoulder belt hole cover.

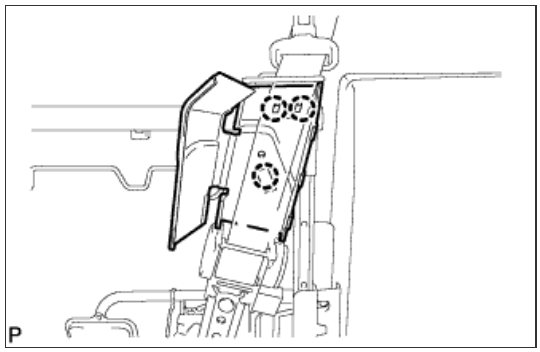

29. REMOVE NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Remove the 3 nuts and belt sensor.

b. Remove the nut and then remove the outer belt.

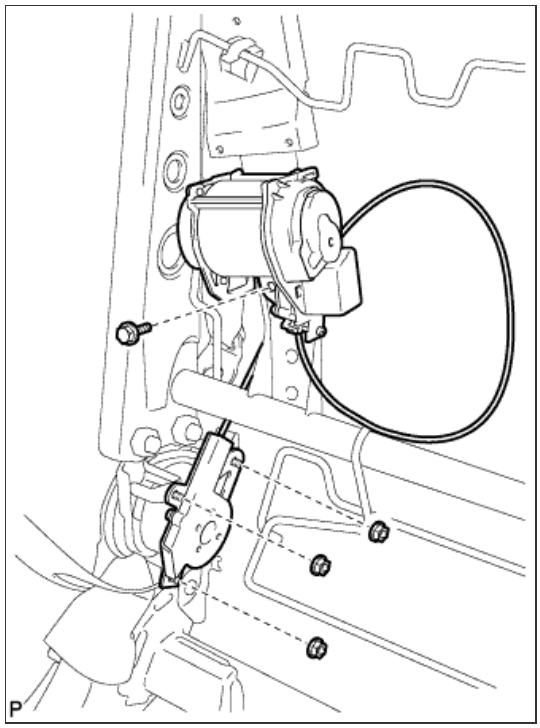

for Preparation Click here

HINT:

- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**

1. REMOVE REAR NO. 1 SEAT ASSEMBLY LH


a. Remove the rear No. 1 seat assembly (Click here).

2. REMOVE SEAT ADJUSTER BOLT COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

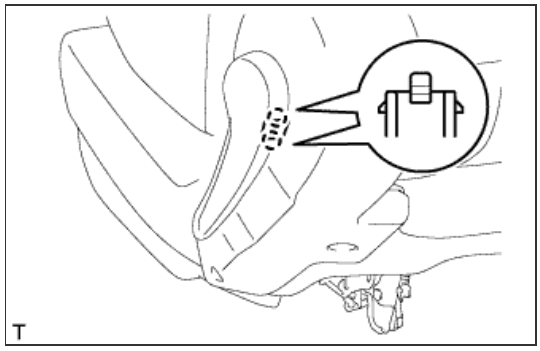

3. REMOVE RECLINING ADJUSTER RELEASE HANDLE LH


a. Remove the screw and release handle.

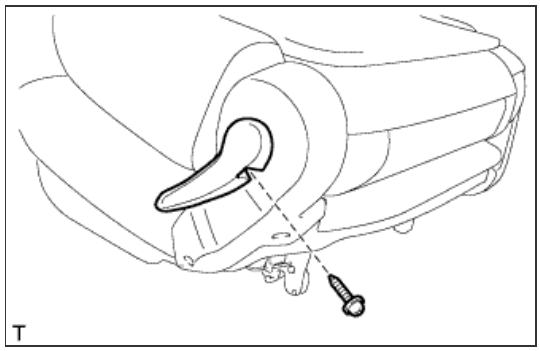

4. REMOVE REAR NO. 1 SEAT RECLINING COVER LH

a. Remove the 2 screws.


b. Detach the 3 claws in the order shown in the illustration, and then remove the cover.

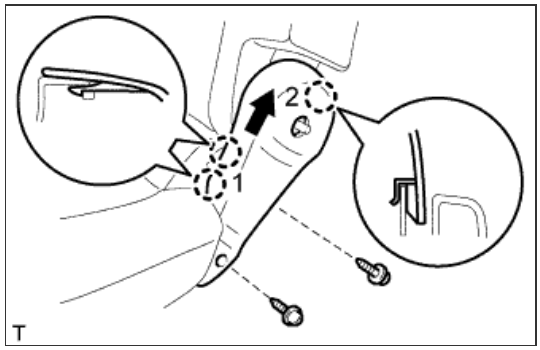

5. REMOVE REAR NO. 1 SEAT RECLINING COVER RH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

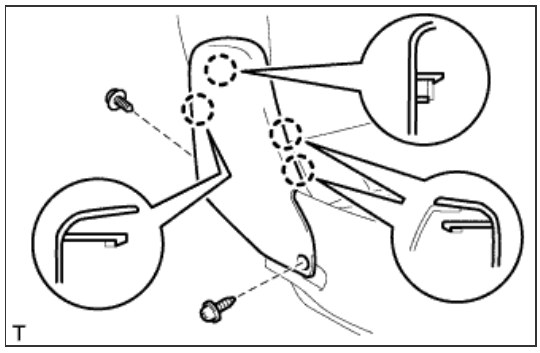


6. REMOVE UPPER SEAT TRACK RAIL COVER LH

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

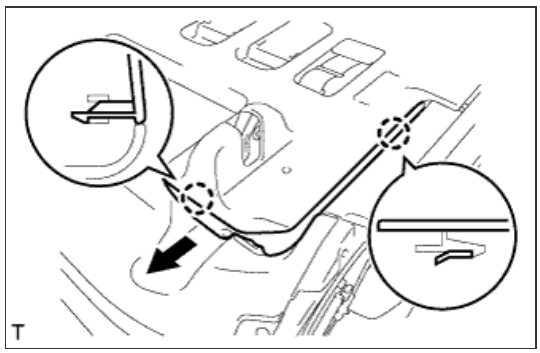


7. REMOVE UPPER SEAT TRACK RAIL COVER RH

a. Using a screwdriver, detach the 2 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

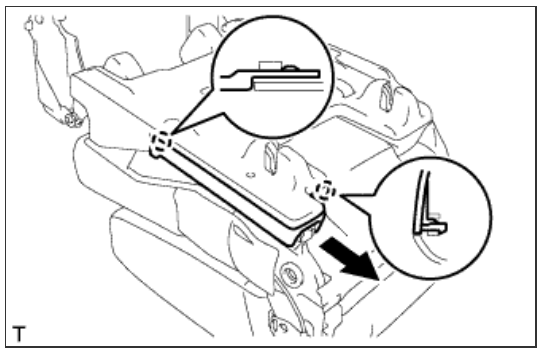


8. REMOVE REAR NO. 2 SEAT LEG SIDE COVER

a. Remove the 4 screws and detach the 4 claws.

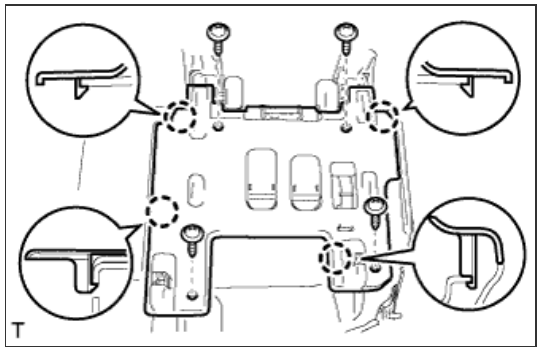


b. Remove the bolt that is securing the fold seat stopper band and remove the seat leg side cover together with the fold seat stopper band.

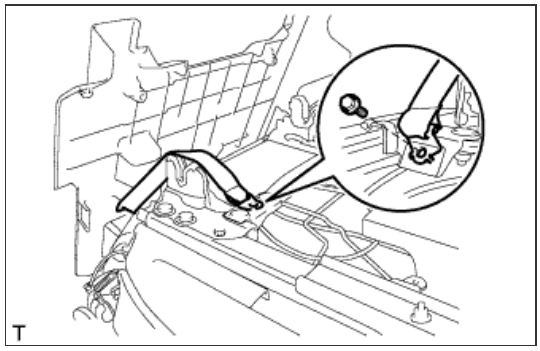

9. REMOVE REAR NO. 2 SEAT PROTECTOR

a. w/ Rear Seat Side Airbag:
Detach the claw and remove the wire harness connector.


b. w/ Seat Heater System:
Detach the claw and remove the wire harness connector.

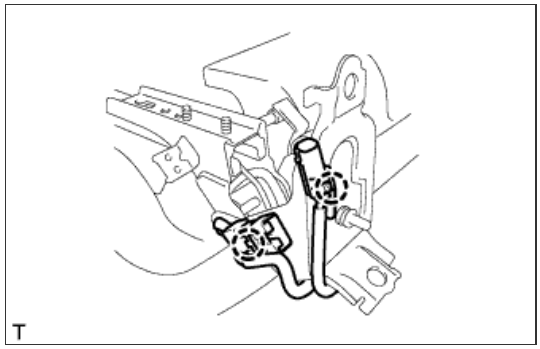

c. Using a clip remover, remove the clip.

d. Detach the claw and remove the seat protector from the seat hinge.

e. Detach the 2 claws, open the protector and remove wire harness.

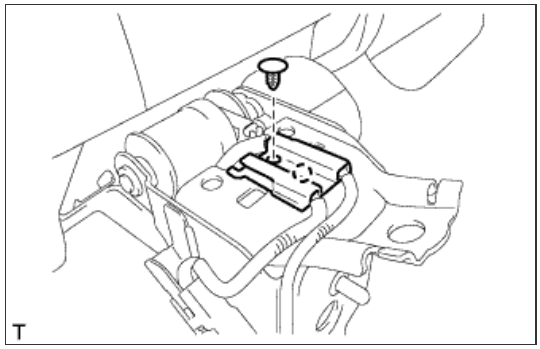


10. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH


a. w/ Rear Seat Side Airbag:
Detach the wire harness clamp.

b. w/ Seat Heater System:
Detach the wire harness clamp.

c. Remove the 2 nuts and hinge.

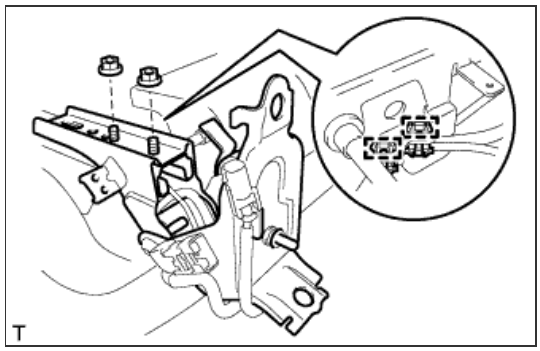


d. Detach the cable clamp and disconnect the cable.

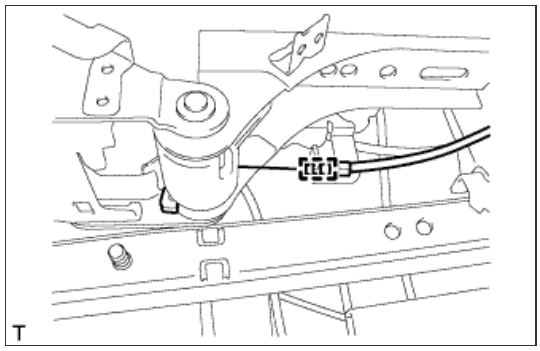


11. REMOVE REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH

a. Remove the 2 nuts and hinge.

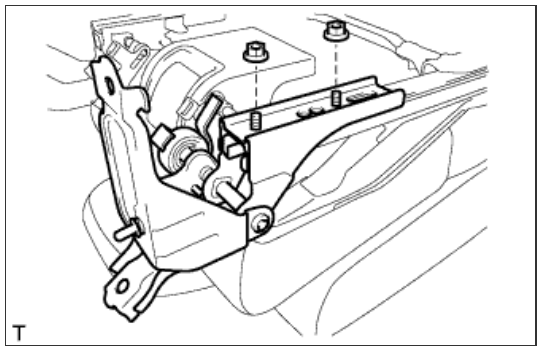


12. REMOVE SEAT BELT ANCHOR COVER CAP

a. Detach the claw and open the cap.

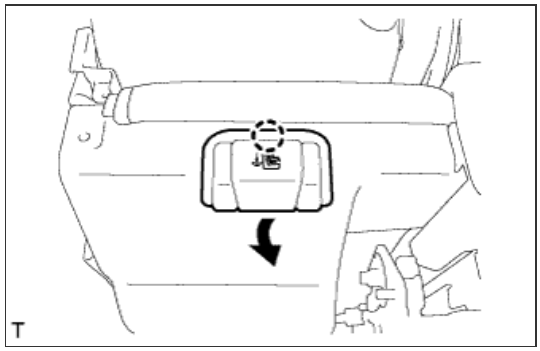


b. Remove the screw and anchor cover cap.

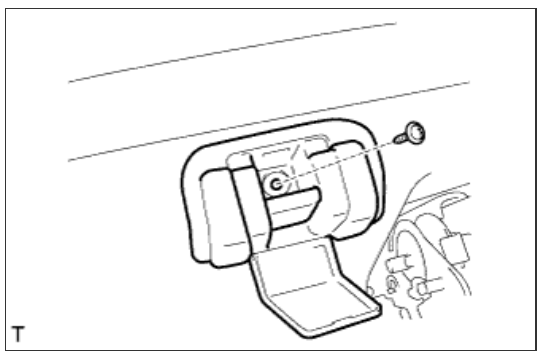

13. REMOVE REAR SEATBACK STAY COVER LH


a. Remove the screw.

b. Detach the 2 claws and remove the cover.

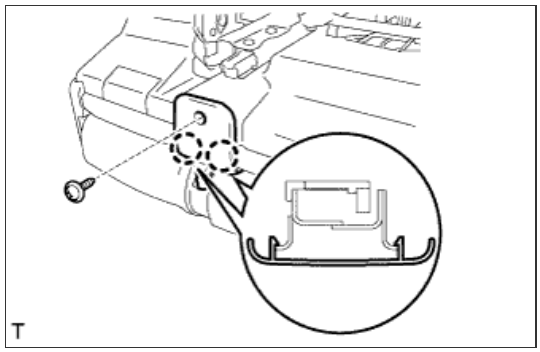


14. REMOVE REAR UNDER SIDE COVER LH

a. Detach the 10 claws.

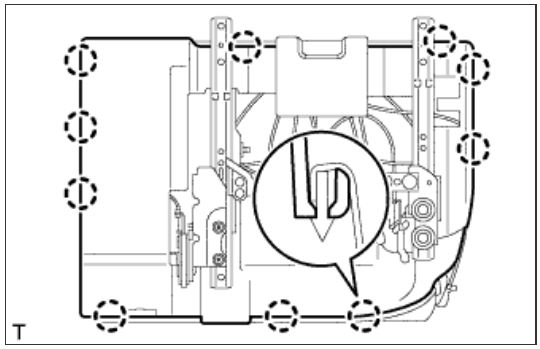

b. Remove the 5 screws.


c. Detach the 2 clips and 2 claws, and remove the cover.

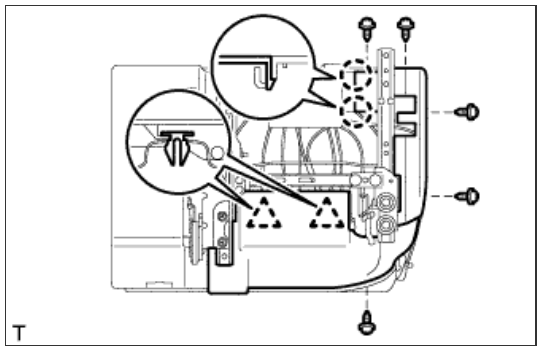

15. REMOVE REAR SEAT CUSHION COVER RH

a. Remove the 4 screws.


b. Detach the 2 claws and remove the cover.

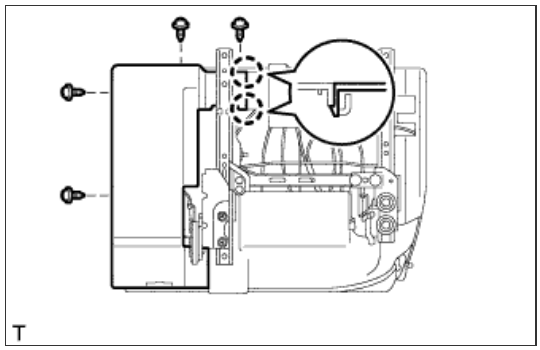

16. REMOVE REAR SEAT UNDER TRAY COVER LH

a. Remove the 2 screws.

b. Detach the 4 claws and remove the cover.

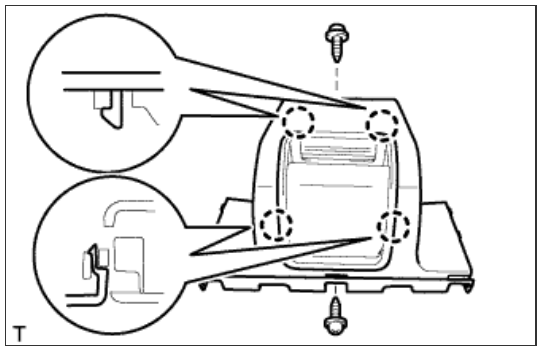


17. REMOVE REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Remove the bolt and belt.

HINT:

The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, it becomes disconnected when the bolt is removed.

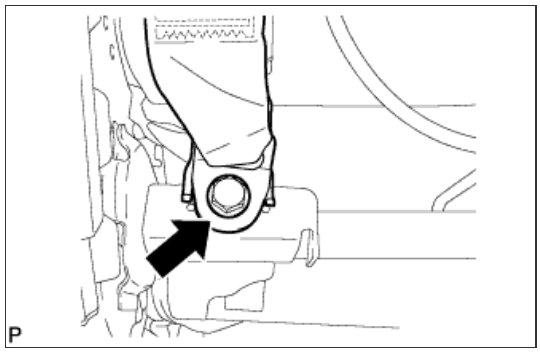

18. REMOVE SEAT CUSHION COVER WITH PAD


a. w/ Rear Seat Side Airbag:

i. Detach the side airbag wire harness clamps.

ii. Remove the side airbag wire harness through the hole in the seat cushion.


b. w/ Seat Heater System:

i. Disconnect the 2 seat heater connectors.

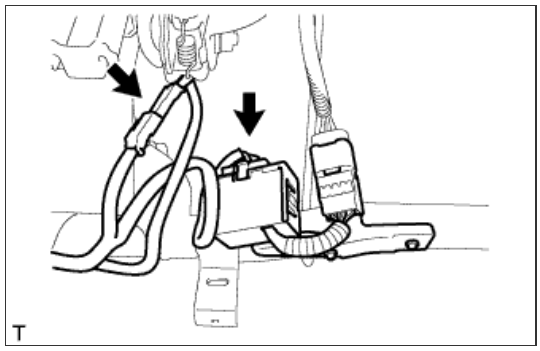

ii. Remove the seatback heater wire harness through the hole in the seat cushion.

c. Remove the seat cushion cover with pad.

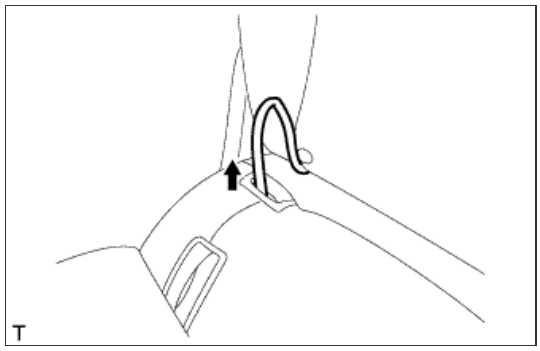


19. REMOVE REAR SEATBACK COVER

a. Using a screwdriver, detach the 4 claws and remove the cover.

HINT:

Tape the screwdriver tip before use.

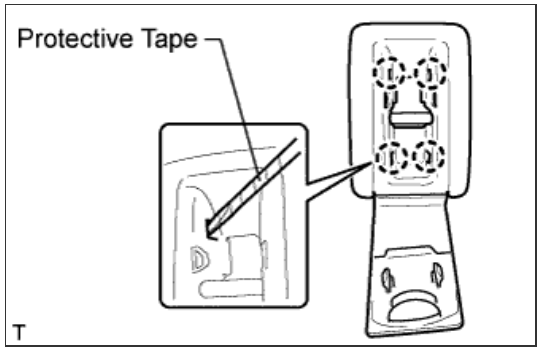


20. REMOVE REAR SEATBACK BOARD SUB-ASSEMBLY LH

a. w/ Center Armrest:

i. Detach the 2 claws on the top of the board.


ii. Pull up the board to detach the 2 claws on the bottom of the board and remove it.

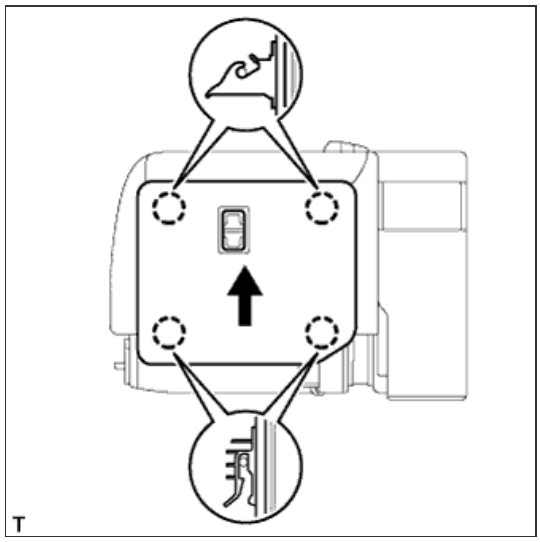

b. w/o Center Armrest:

i. Detach the 3 claws on the top of the board.


ii. Pull up the board to detach the 3 claws on the bottom of the board and remove it.

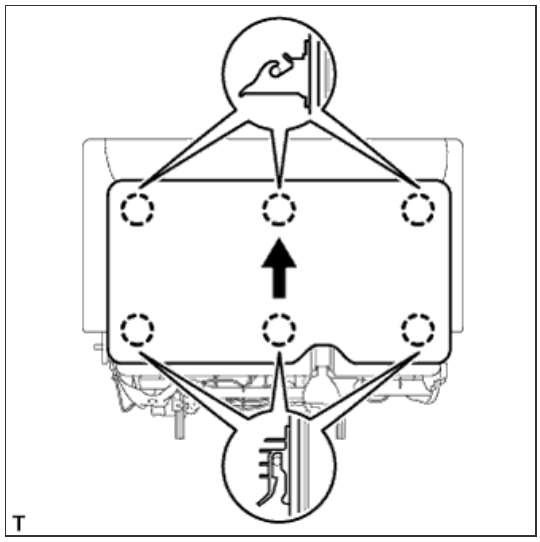


21. REMOVE REAR SEAT HEADREST ASSEMBLY

22. REMOVE REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ Center Armrest:
Detach the 4 claws and remove the 2 supports.

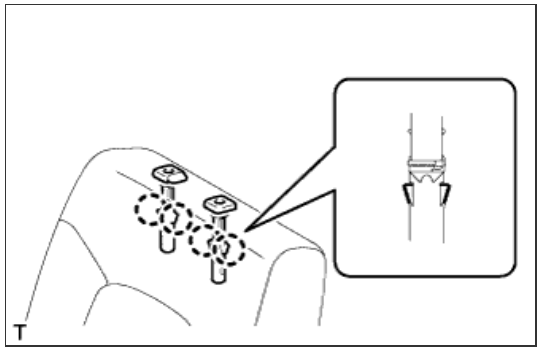

b. w/o Center Armrest:
Detach the 8 claws and remove the 4 supports.

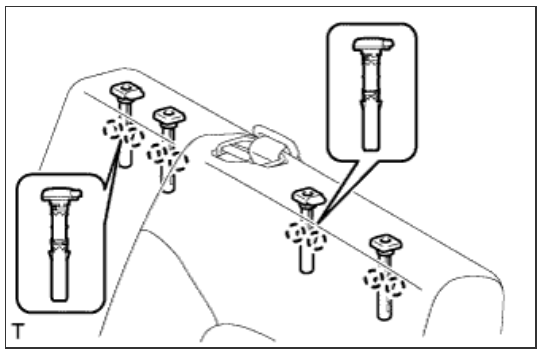


23. REMOVE SHOULDER BELT ANCHOR COVER

a. Using a screwdriver, detach the 2 claws and remove the cover.

HINT:


Tape the screwdriver tip before use.

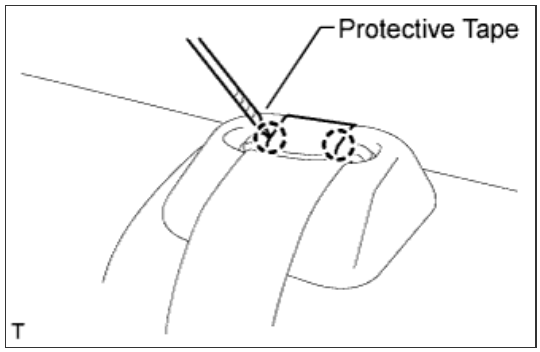

24. REMOVE REAR SEAT BELT HOLE COVER LH


a. Remove the screw.

b. Detach the 4 claws and remove the cover.

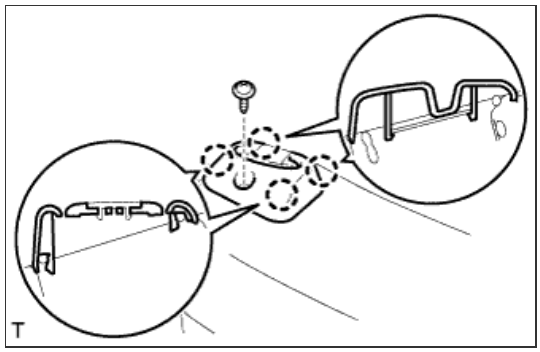


25. REMOVE SEATBACK COVER WITH PAD

a. w/ Center Armrest:
Remove the hog rings.

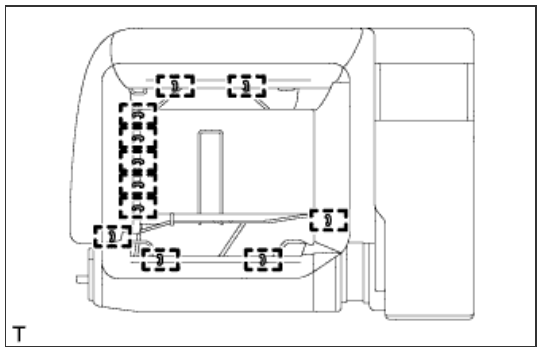


b. w/o Center Armrest:
Remove the hog rings.

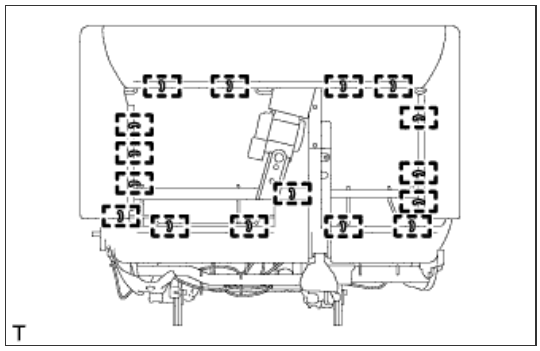

c. w/ Rear Seat Side Airbag:


i. Remove the cap nut and seatback cover bracket from the seat frame.

ii. Remove the side airbag wire harness through the hole in the seatback.

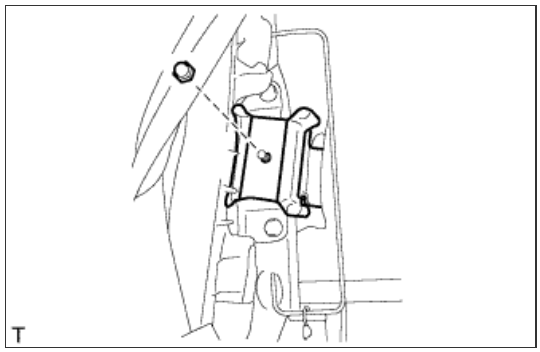


d. w/ Seat Heater System:


i. Cut the cable tie and disconnect the seatback heater wire harness.

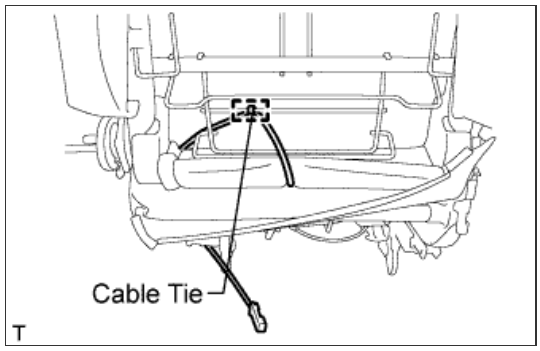

ii. Remove the seatback heater wire harness through the hole in the seatback.

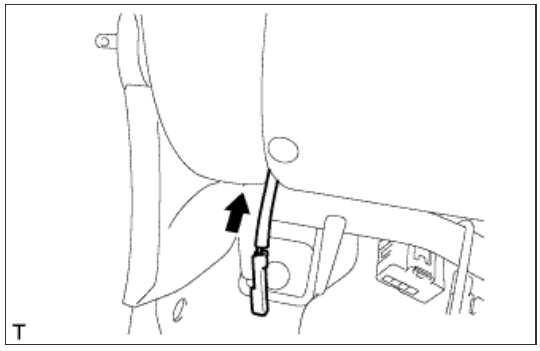


e. w/ Center Armrest:
Pull the seat belt into the inside of the seat.

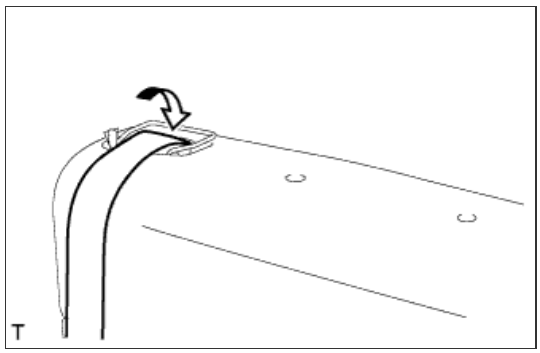

f. w/o Center Armrest:
Pull the seat belt into the inside of the seat.


g. Remove the seatback cover with pad.

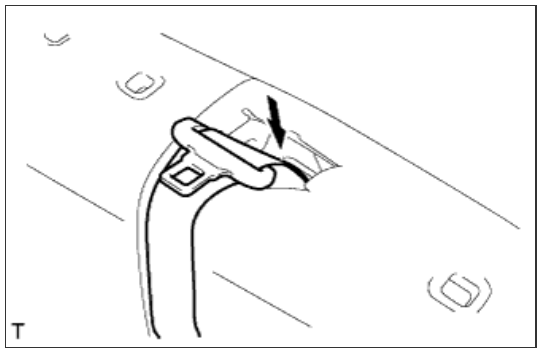

26. REMOVE REAR SEAT BACK HINGE COVER LH

a. Remove the screw.


b. Detach the claw and remove the cover.

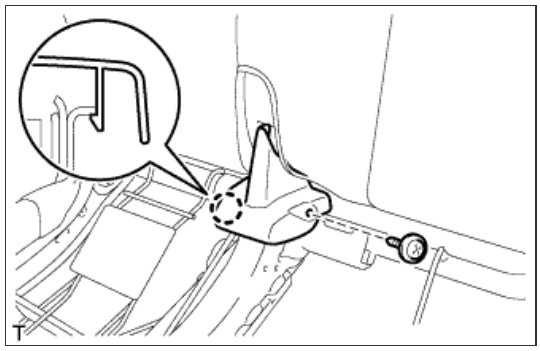

27. REMOVE REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH


a. Remove the 4 screws.

b. Detach the 4 claws and remove the cover.

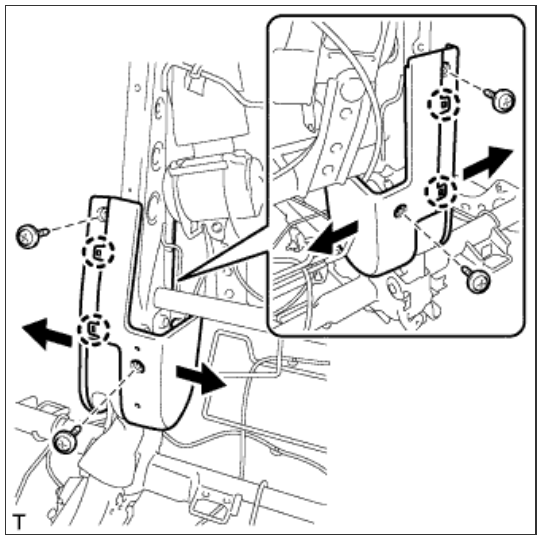

28. REMOVE REAR SEAT SHOULDER BELT HOLE COVER


a. Using a screwdriver, detach the 3 claws and remove the shoulder belt hole cover.

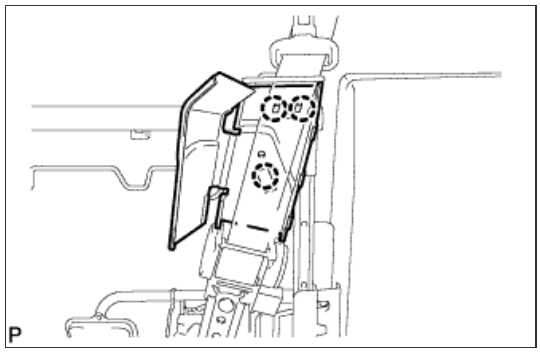

29. REMOVE NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Remove the 3 nuts and belt sensor.

b. Remove the nut and then remove the outer belt.

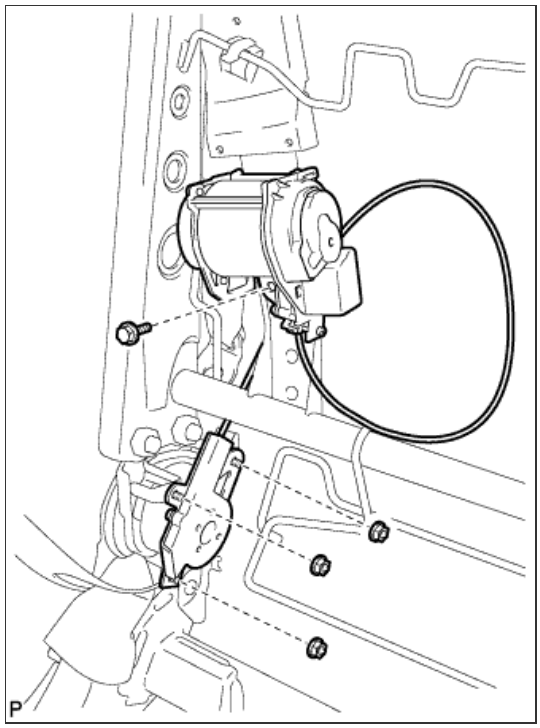


for Preparation Click here

1. INSPECT NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Check the ELR.

i. When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks.
If the operation is not as specified, replace the seat belt assembly.

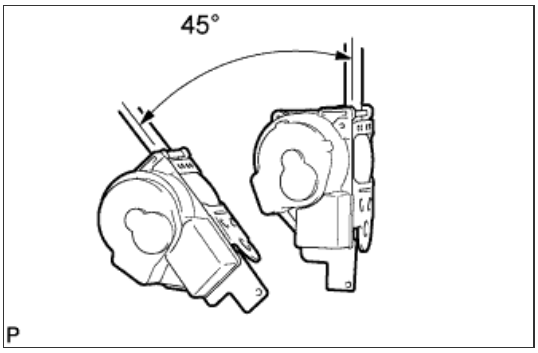

for Preparation Click here

HINT:


- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**

1. INSTALL NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Install the belt with the nut labeled A.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

b. Install the belt sensor with the 3 nuts labeled B.

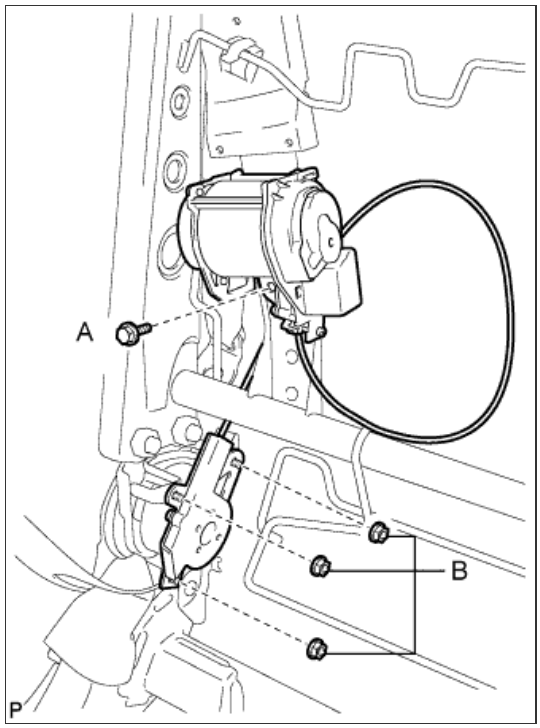


2. INSTALL REAR SEAT SHOULDER BELT HOLE COVER

a. Install the seat belt as shown in the illustration.

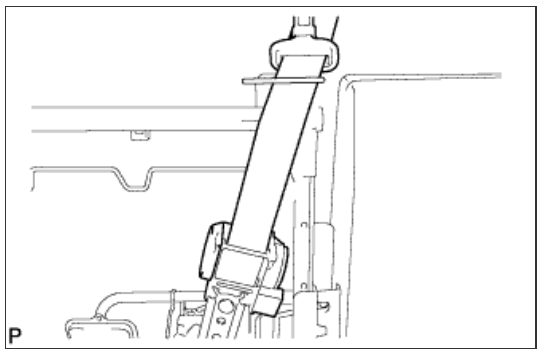


b. Attach the 3 claws to install the shoulder belt hole cover.

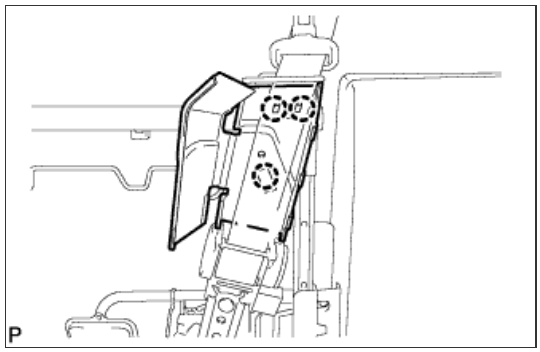

3. INSTALL REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the cover.


b. Install the 4 screws.

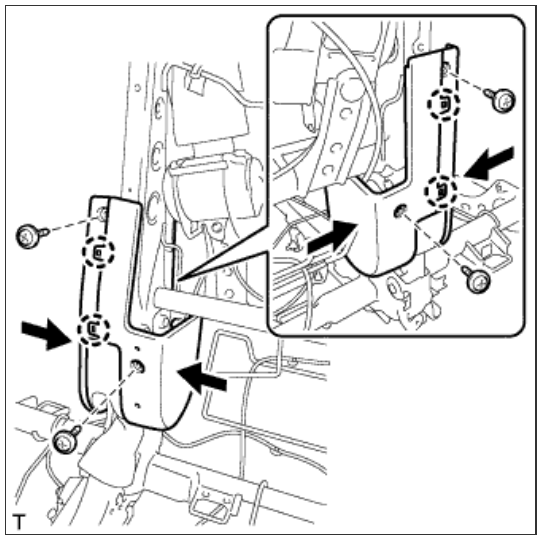

4. INSTALL REAR SEATBACK HINGE COVER LH

a. Attach the claw to install the cover.


b. Install the screw.

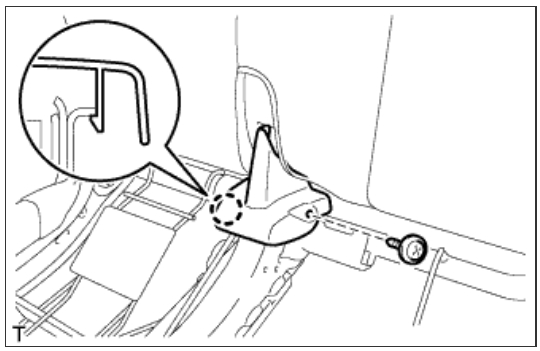

5. INSTALL SEATBACK COVER WITH PAD


a. Install the seatback cover with pad.

b. w/ Center Armrest:
Pull out the seat belt.

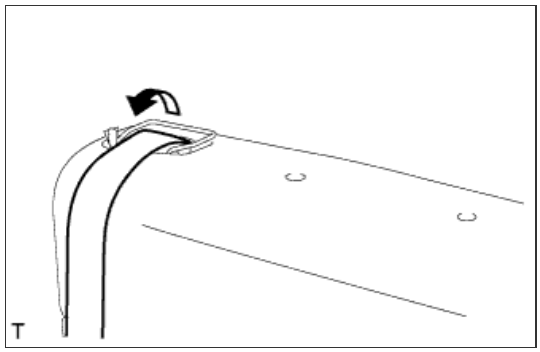


c. w/o Center Armrest:
Pull out the seat belt.

d. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seatback.

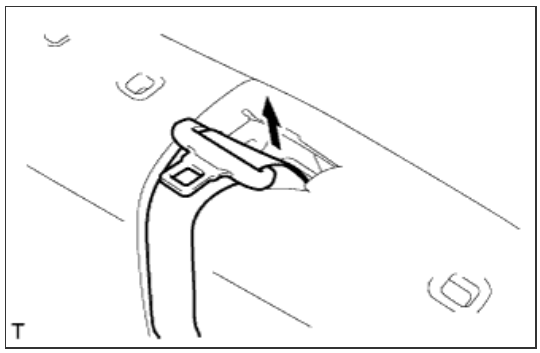


e. w/ Seat Heater System:
Pass the seatback heater wire harness through the hole in the seatback.

i.

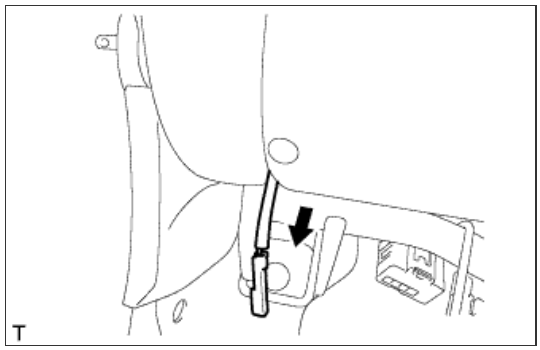

ii. Connect the seatback heater wire harness and install a new cable tie.

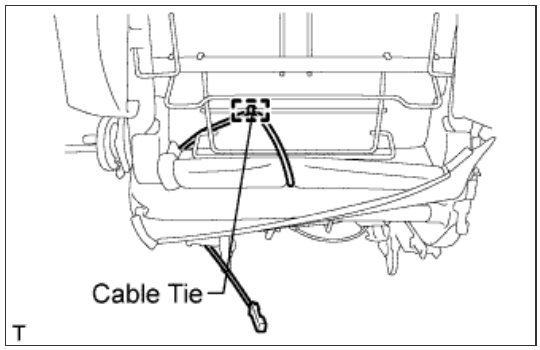


f. w/ Rear Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the cap nut.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

NOTICE:

After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

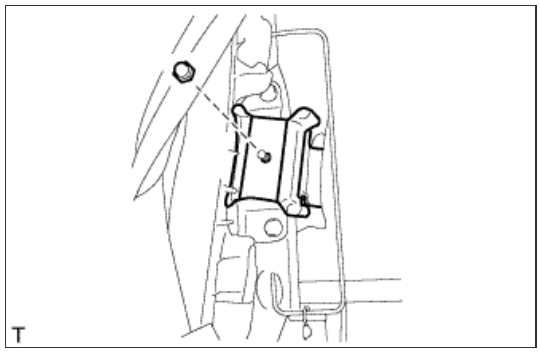


g. w/ Center Armrest:
Using hog ring pliers, install new hog rings to the seatback frame.

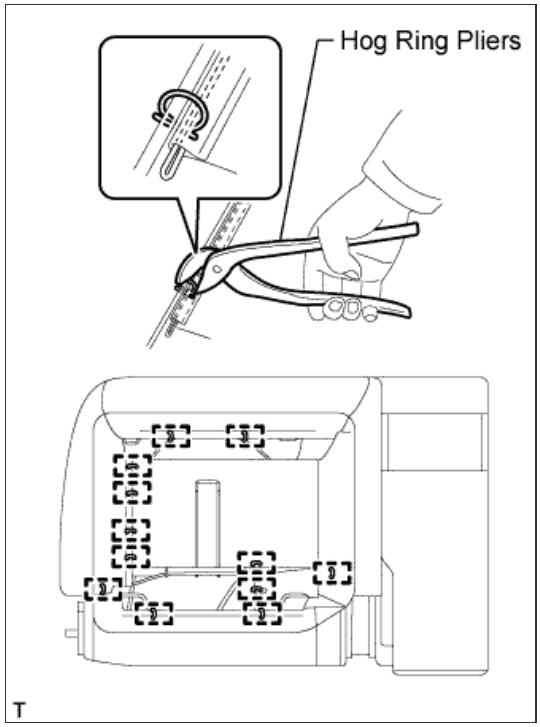

h. w/o Center Armrest:

i. Using hog ring pliers, install new hog rings to the seatback frame.


ii. Attach the hook.

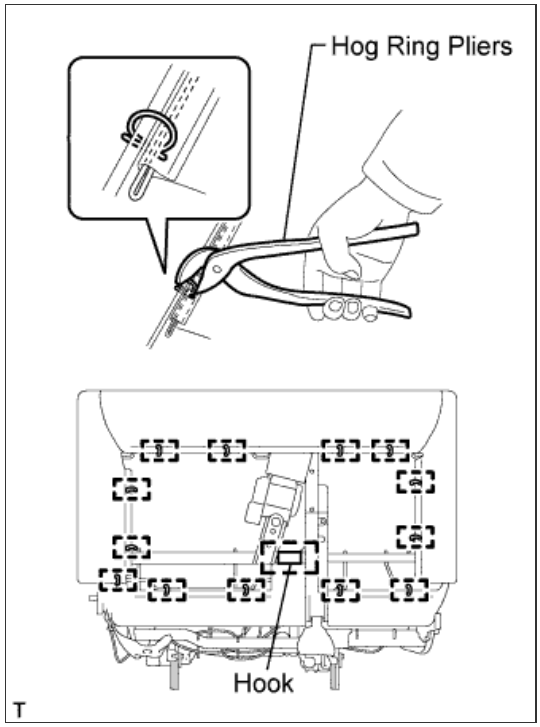

6. INSTALL REAR SEAT BELT HOLE COVER LH


a. Attach the 4 claws to install the cover.

b. Install the screw.

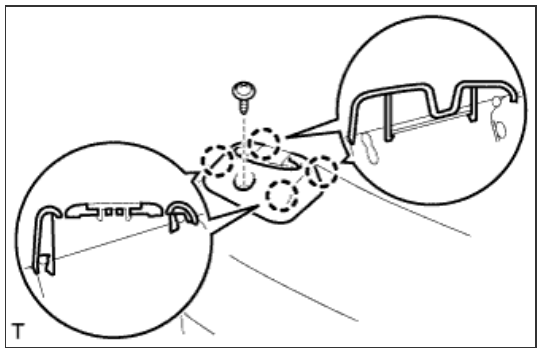


7. INSTALL SHOULDER BELT ANCHOR COVER

a. Attach the 2 claws to install the cover.

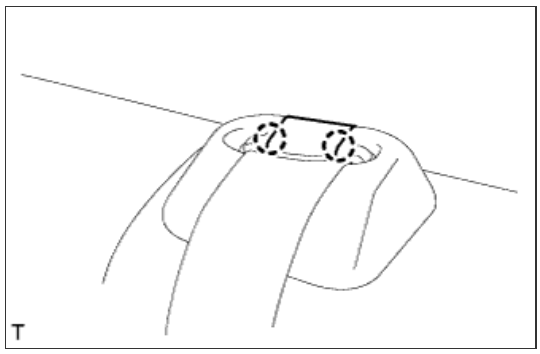


8. INSTALL REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ Center Armrest:
Attach the 4 claws to install the 2 supports.

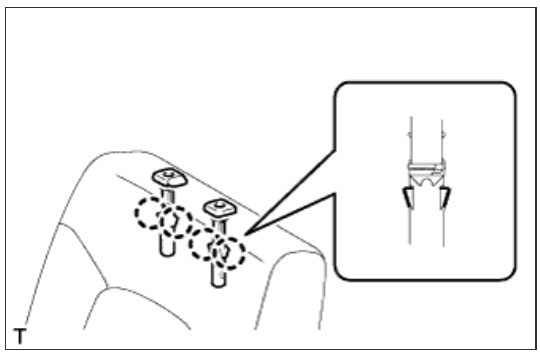

b. w/o Center Armrest:
Attach the 8 claws to install the 4 supports.

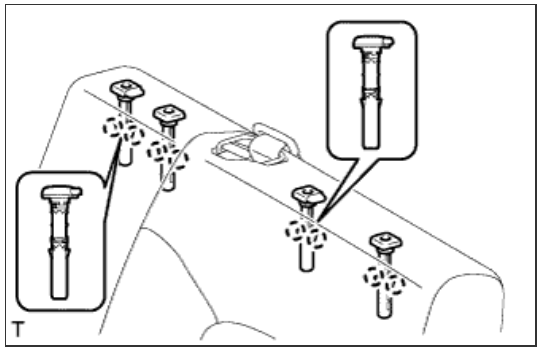


9. INSTALL REAR SEAT HEADREST ASSEMBLY

1 . INSTALL REAR SEATBACK BOARD SUB-ASSEMBLY LH

a. w/ Center Armrest:

i. Push the board down to attach the 2 claws on the bottom.


ii. Attach the 2 claws on the top of the board to install it.

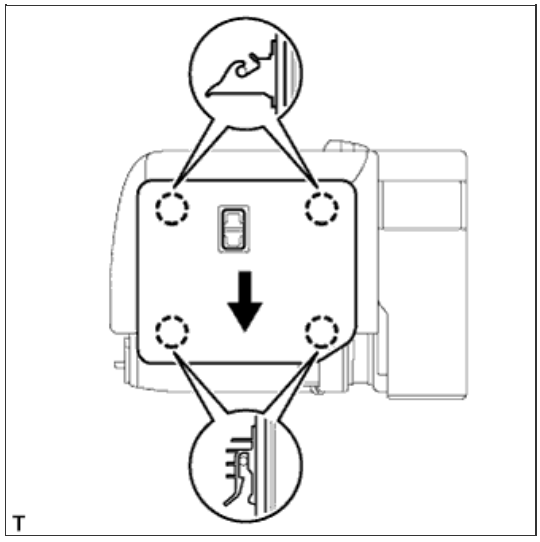

b. w/o Center Armrest:


i. Push the board down to attach the 3 claws on the bottom.

ii. Attach the 3 claws on the top of the board to install it.

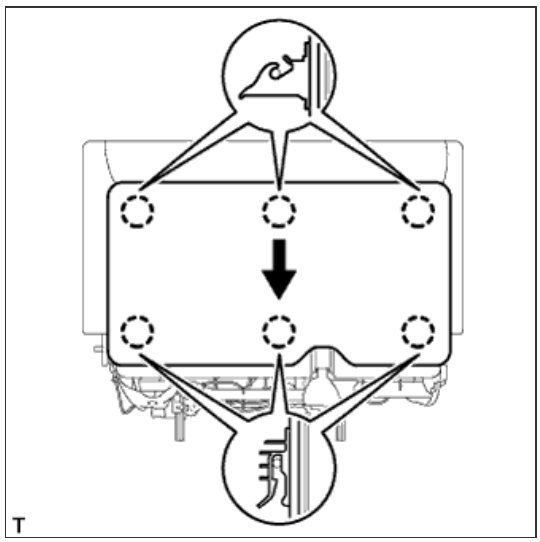

11. INSTALL REAR SEATBACK COVER

a. Attach the 4 claws to install the cover.

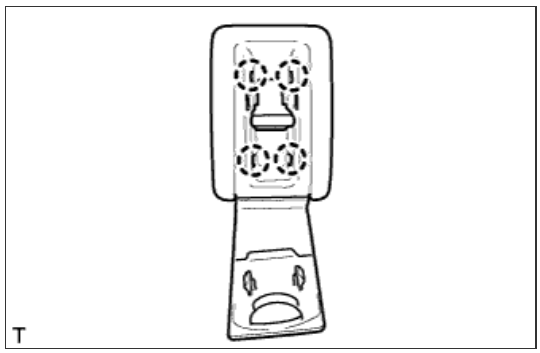


12. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.


b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seat cushion.

c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seat cushion.

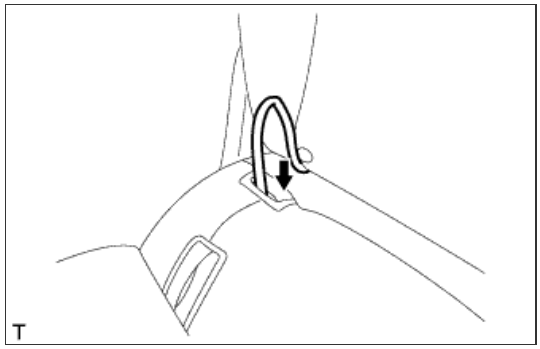

ii. Connect the 2 seat heater connectors.

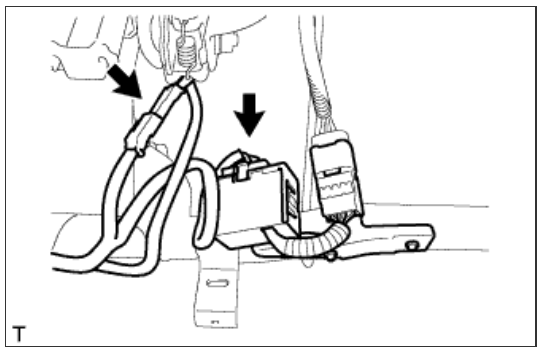

d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

13. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Install the belt with the bolt.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

HINT:


The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, connect it when installing the rear No. 1 seat inner belt LH.

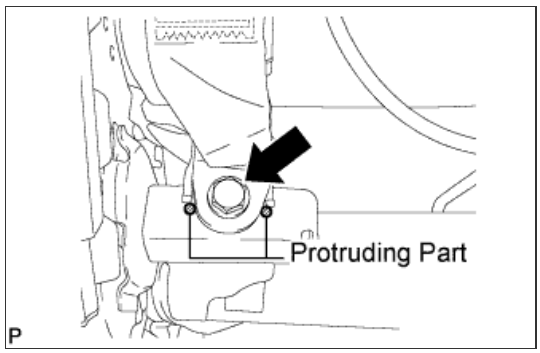

14. INSTALL REAR SEAT UNDER TRAY COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

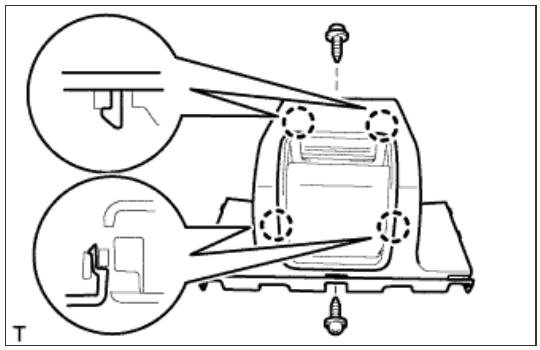

15. INSTALL REAR SEAT CUSHION COVER RH

a. Attach the 2 claws to install the cover.


b. Install the 4 screws.

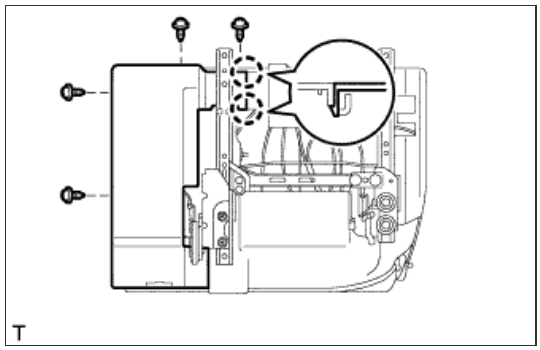


1 . INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and 2 clips to install the cover.

b. Install the 5 screws.

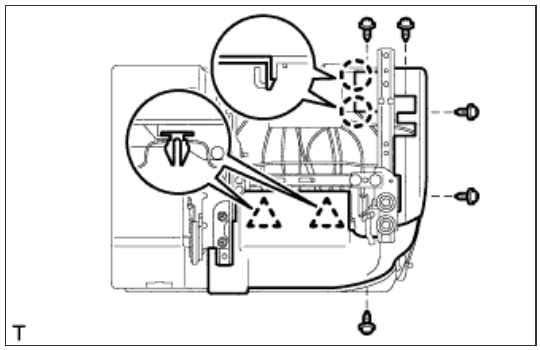


c. Attach the 10 claws.

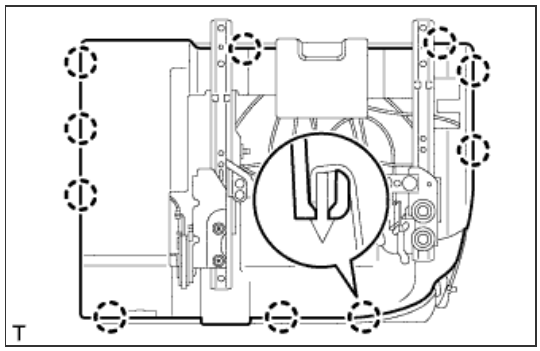

1 . INSTALL REAR SEATBACK STAY COVER LH


a. Attach the 2 claws to install the cover.

b. Install the screw.

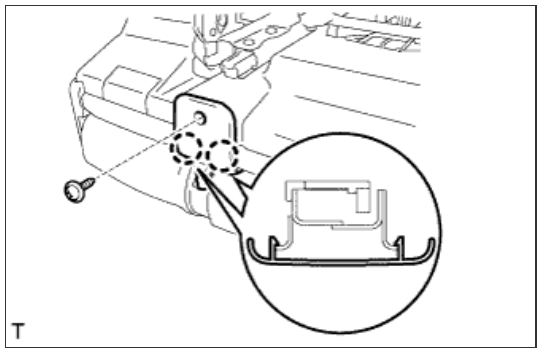


18. INSTALL SEAT BELT ANCHOR COVER CAP

a. Install the anchor cover cap with the screw.

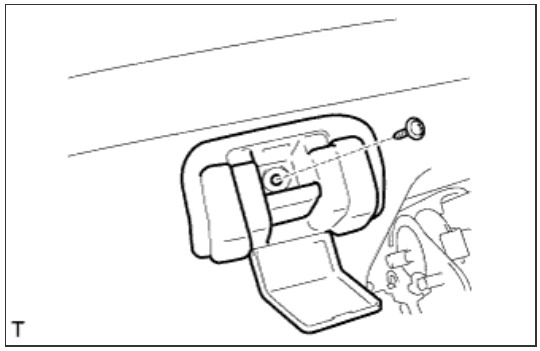


b. Attach the claw to close the cap.

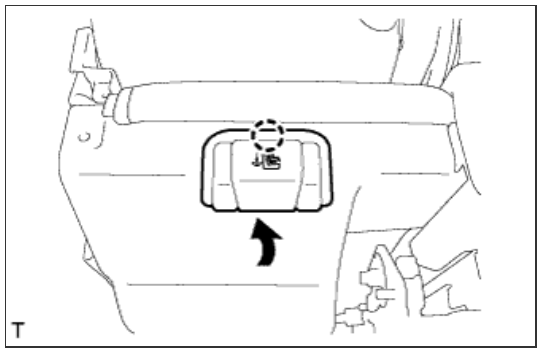

1 . INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH


a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

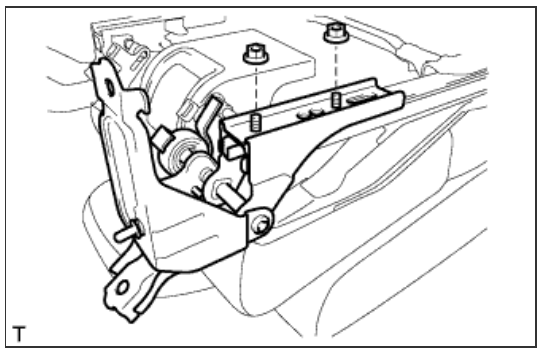

2 . INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

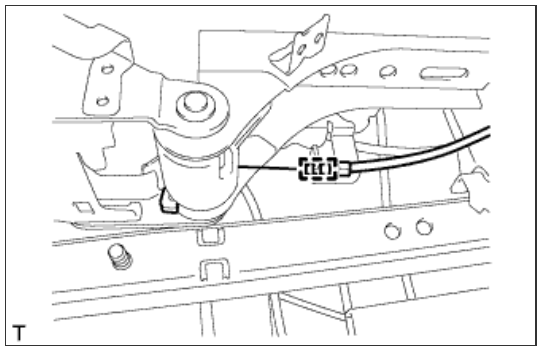


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.

d. w/ Seat Heater System:
Attach the wire harness clamp.

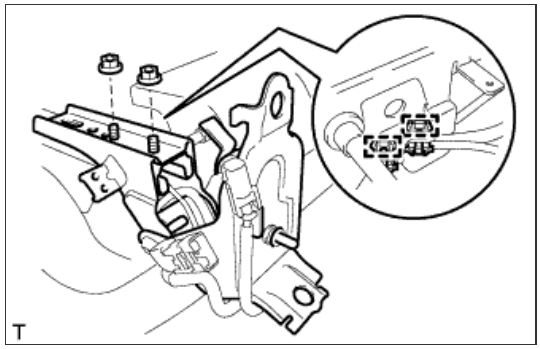


21. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

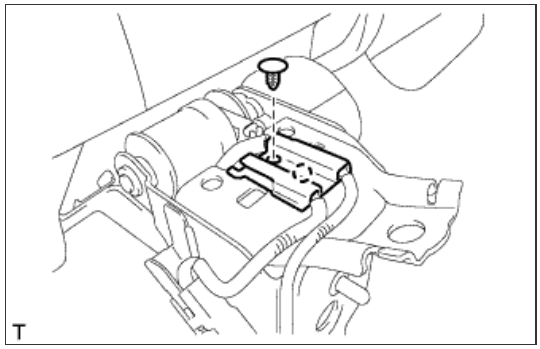


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

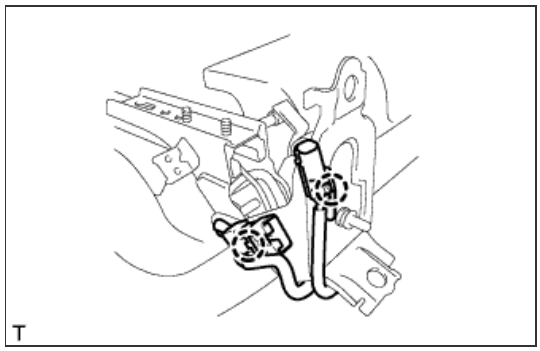


22. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

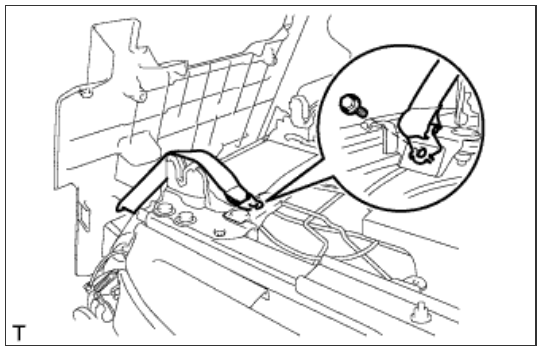


b. Attach the 4 claws to install the seat leg side cover.

c. Install the 4 screws.

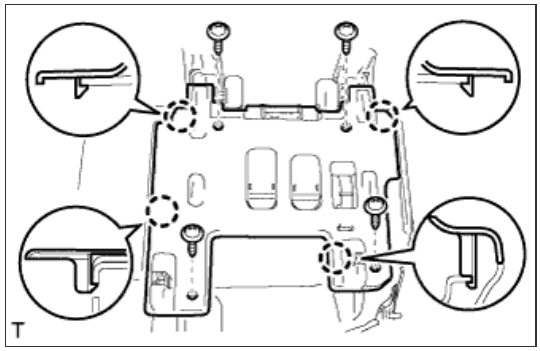


23. INSTALL UPPER SEAT TRACK RAIL COVER RH

a. Attach the 2 claws to install the cover.

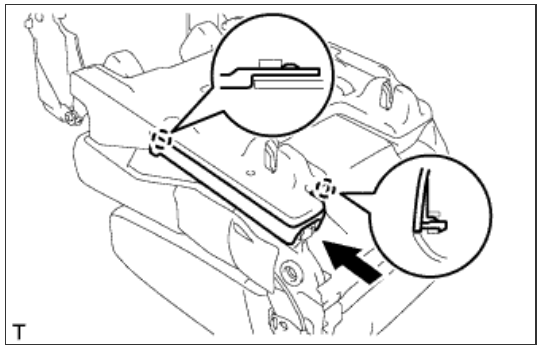

24. INSTALL UPPER SEAT TRACK RAIL COVER LH


a. Attach the 2 claws to install the cover.

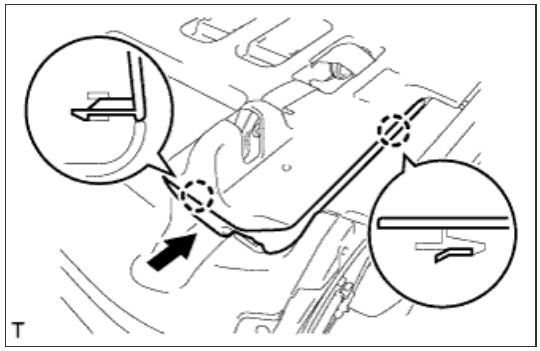

25. INSTALL REAR NO. 1 SEAT RECLINING COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

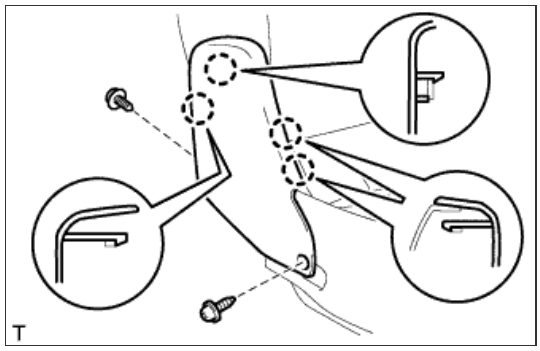

26. INSTALL REAR NO. 1 SEAT RECLINING COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

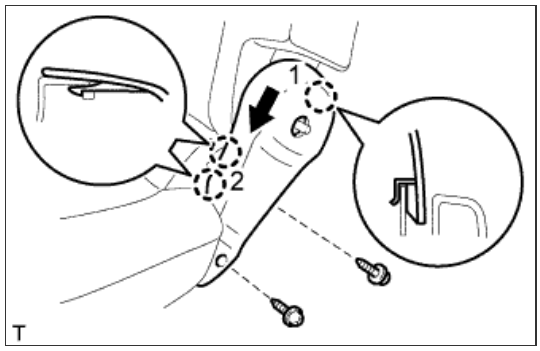


27. INSTALL RECLINING AD USTER RELEASE HANDLE LH

a. Install the release handle with the screw.

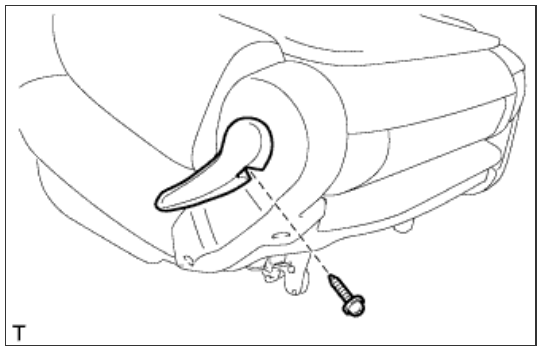

28. INSTALL SEAT AD USTER BOLT COVER

a. Attach the 2 claws to install the cover.

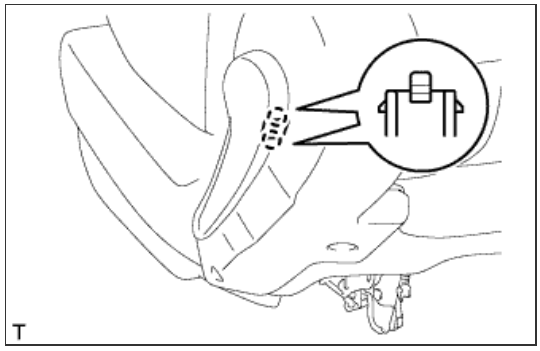

29. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. Install the rear No. 1 seat assembly (Click here).

for Preparation Click here

HINT:


- **Use the same procedures for the LHD and RHD.**
- **The procedures listed below are for the LHD.**
- **A bolt without a torque specification is shown in the standard bolt chart (Click here).**

1. INSTALL NO. 1 SEAT 3 POINT TYPE BELT ASSEMBLY LH

a. Install the belt with the nut labeled A.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

b. Install the belt sensor with the 3 nuts labeled B.

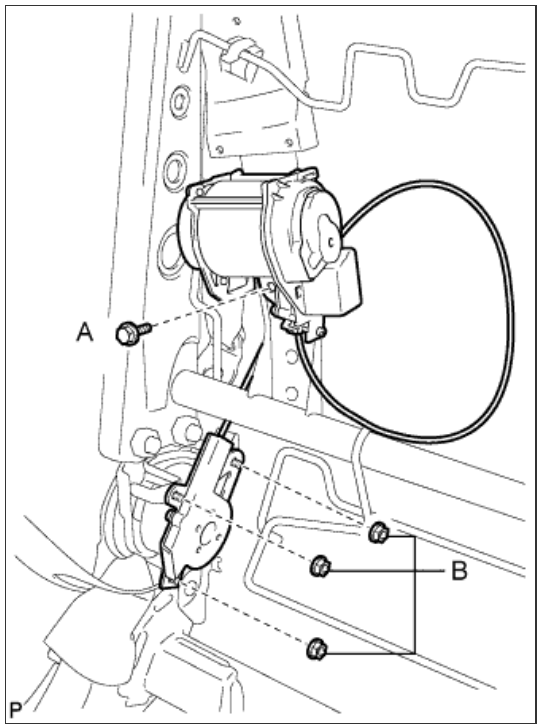


2. INSTALL REAR SEAT SHOULDER BELT HOLE COVER

a. Install the seat belt as shown in the illustration.

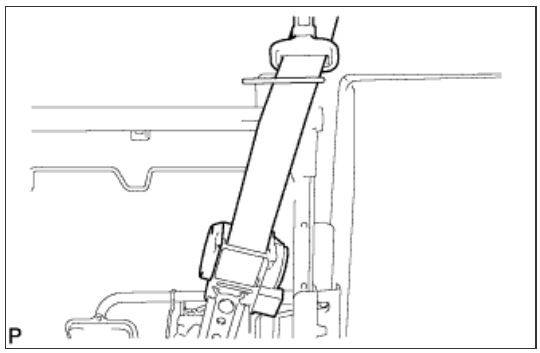


b. Attach the 3 claws to install the shoulder belt hole cover.

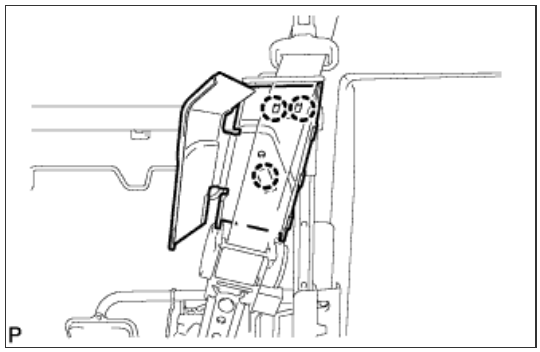

3. INSTALL REAR LOWER SEATBACK COVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the cover.


b. Install the 4 screws.

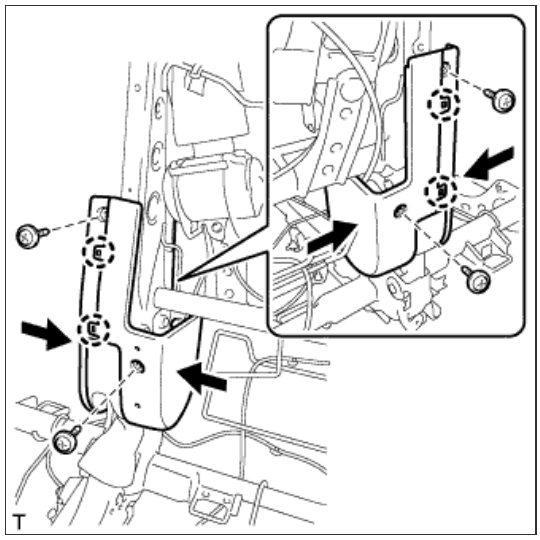

4. INSTALL REAR SEATBACK HINGE COVER LH

a. Attach the claw to install the cover.


b. Install the screw.

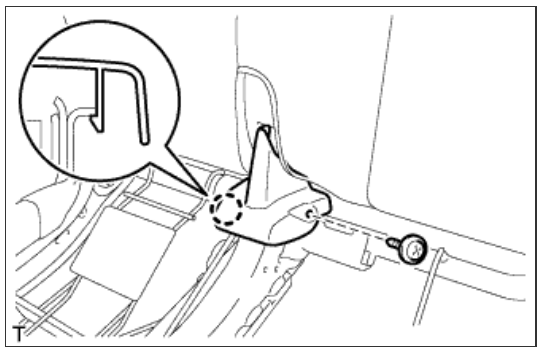

5. INSTALL SEATBACK COVER WITH PAD


a. Install the seatback cover with pad.

b. w/ Center Armrest:
Pull out the seat belt.

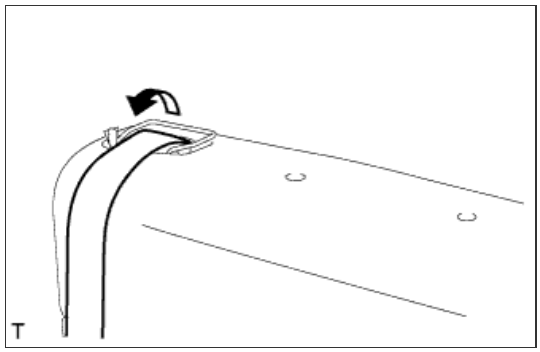


c. w/o Center Armrest:
Pull out the seat belt.

d. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seatback.

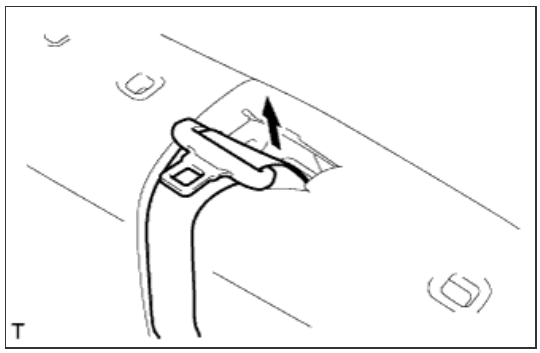


e. w/ Seat Heater System:
Pass the seatback heater wire harness through the hole in the seatback.

i.

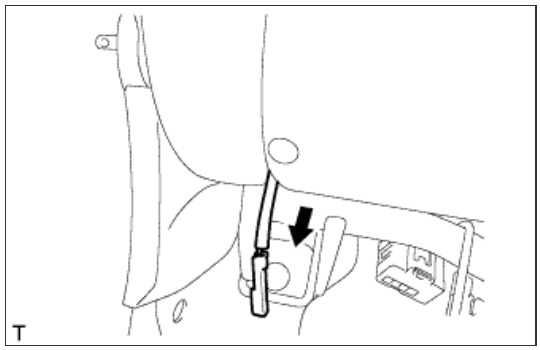

ii. Connect the seatback heater wire harness and install a new cable tie.

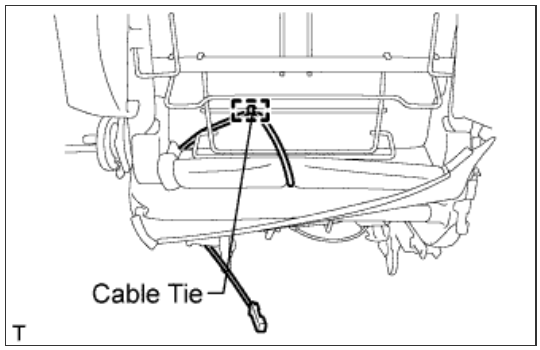


f. w/ Rear Seat Side Airbag:
Install the seatback cover bracket to the seat frame with the cap nut.


Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }

NOTICE:


After the seatback trim cover is assembled, make sure the side airbag strap is not twisted.

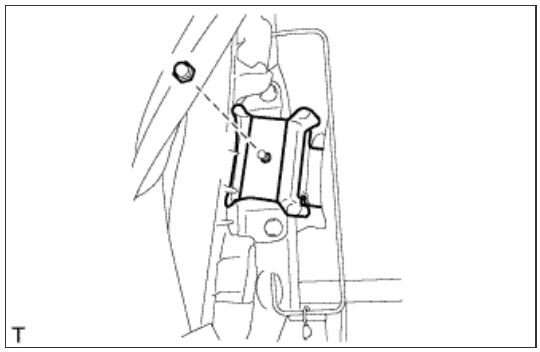

g. w/ Center Armrest:
Using hog ring pliers, install new hog rings to the seatback frame.

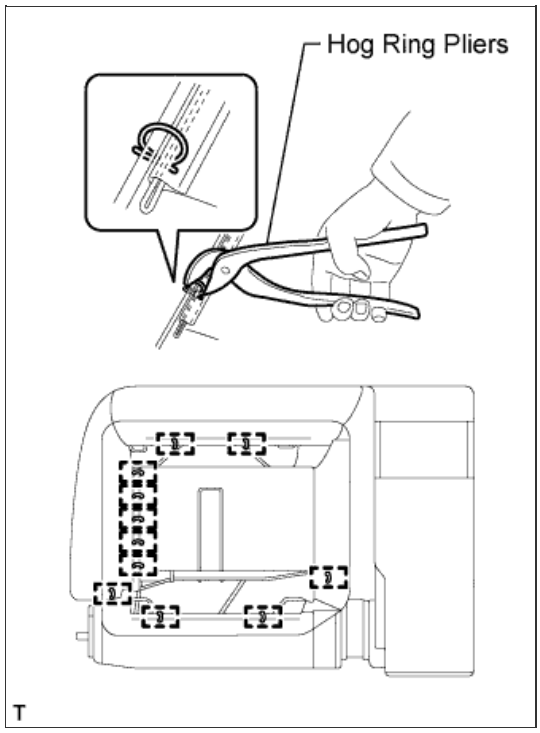


h. w/o Center Armrest:
Using hog ring pliers, install new hog rings to the seatback frame.

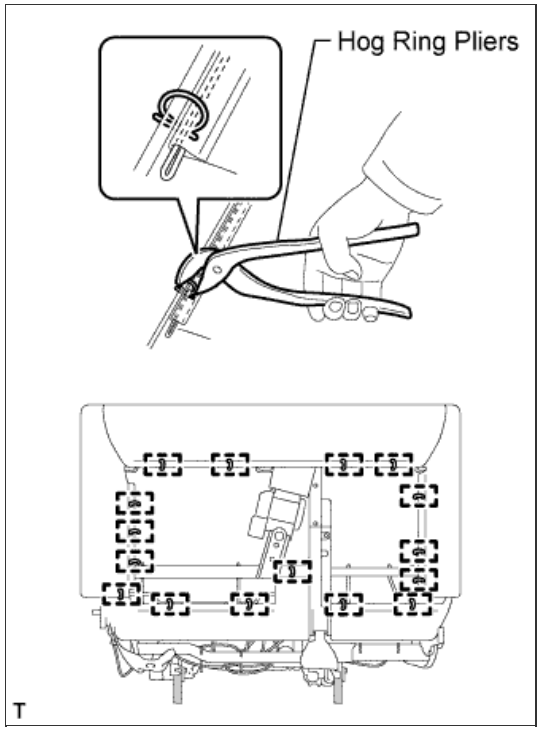

6. INSTALL REAR SEAT BELT HOLE COVER LH


a. Attach the 4 claws to install the cover.

b. Install the screw.

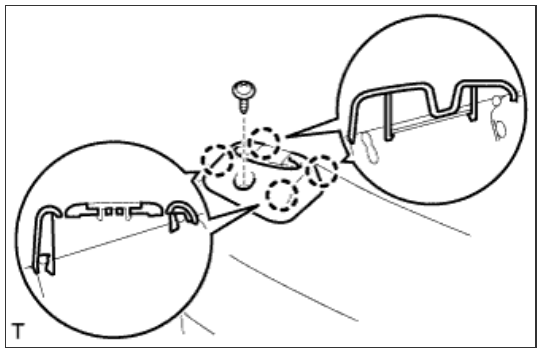


7. INSTALL SHOULDER BELT ANCHOR COVER

a. Attach the 2 claws to install the cover.

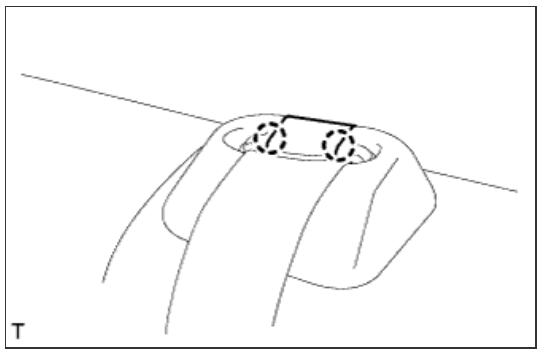


8. INSTALL REAR NO. 1 SEAT HEADREST SUPPORT ASSEMBLY

a. w/ Center Armrest:
Attach the 4 claws to install the 2 supports.

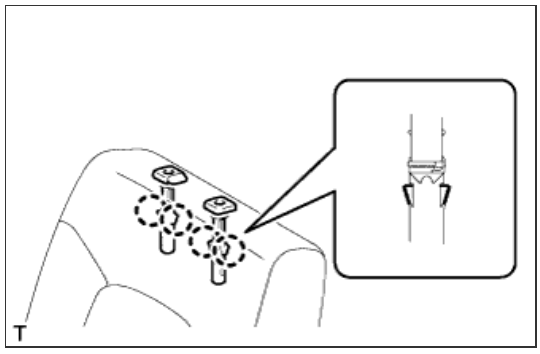

b. w/o Center Armrest:
Attach the 8 claws to install the 4 supports.

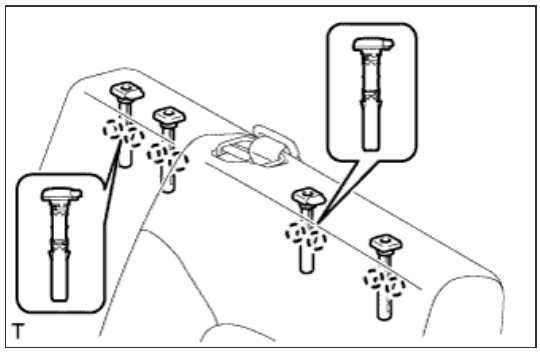


9. INSTALL REAR SEAT HEADREST ASSEMBLY

1 . INSTALL REAR SEATBACK BOARD SUB-ASSEMBLY LH

a. w/ Center Armrest:

i. Push the board down to attach the 2 claws on the bottom.


ii. Attach the 2 claws on the top of the board to install it.

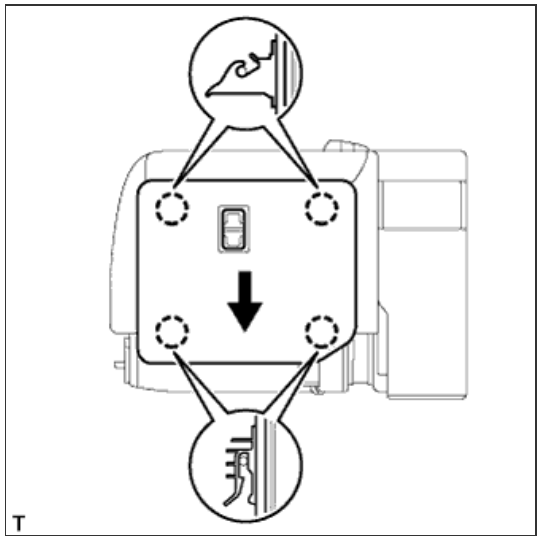

b. w/o Center Armrest:


i. Push the board down to attach the 3 claws on the bottom.

ii. Attach the 3 claws on the top of the board to install it.

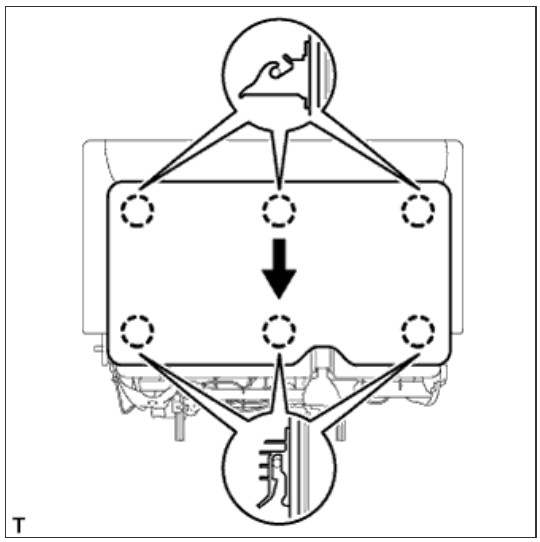

11. INSTALL REAR SEATBACK COVER

a. Attach the 4 claws to install the cover.

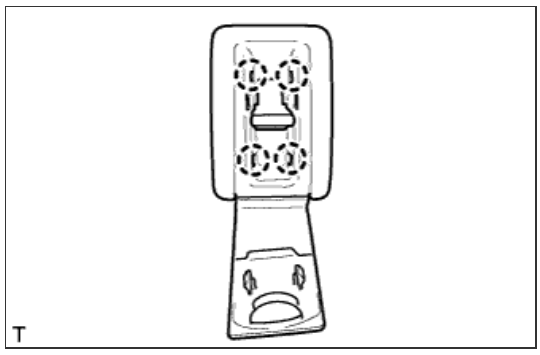


12. INSTALL SEAT CUSHION COVER WITH PAD

a. Install the seat cushion cover with pad.


b. w/ Rear Seat Side Airbag:
Pass the side airbag wire harness through the hole in the seat cushion.

c. w/ Seat Heater System:

i. Pass the seatback heater wire harness through the hole in the seat cushion.

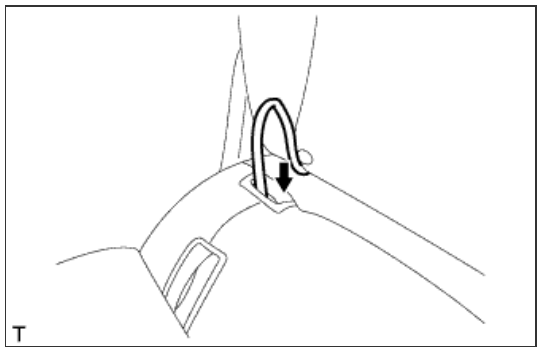

ii. Connect the 2 seat heater connectors.

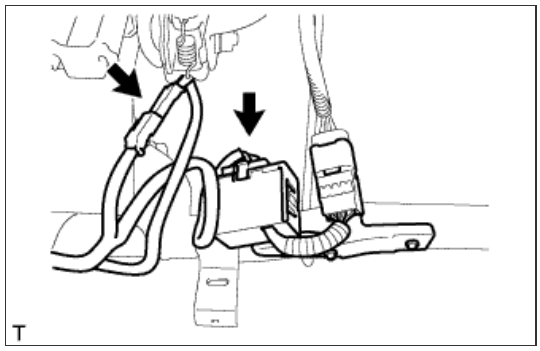

d. w/ Rear Seat Side Airbag:
Attach the side airbag wire harness clamps.

13. INSTALL REAR NO. 1 SEAT INNER BELT ASSEMBLY LH

a. Install the belt with the bolt.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

HINT:


The No. 1 seat 3 point type belt anchor is fixed with the same bolt as the rear No. 1 seat inner belt LH. Therefore, connect it when installing the rear No. 1 seat inner belt LH.

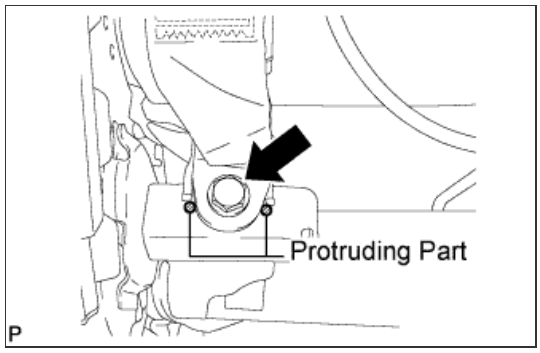

14. INSTALL REAR SEAT UNDER TRAY COVER LH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

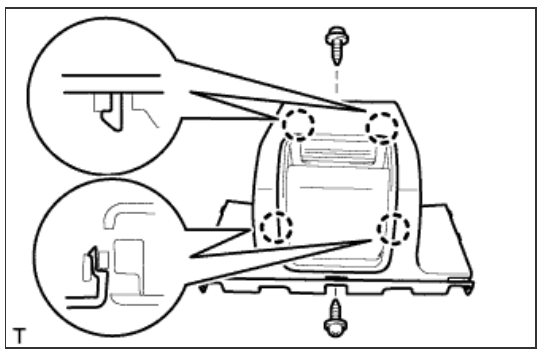

15. INSTALL REAR SEAT CUSHION COVER RH

a. Attach the 2 claws to install the cover.


b. Install the 4 screws.

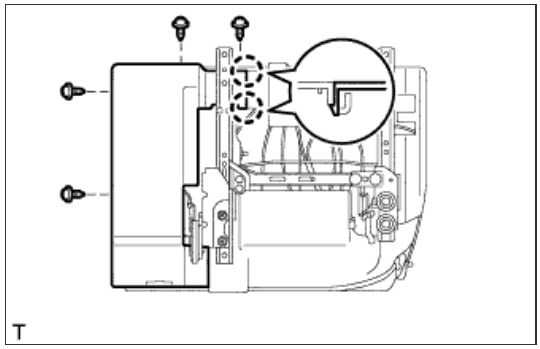


1 . INSTALL REAR UNDER SIDE COVER LH

a. Attach the 2 claws and 2 clips to install the cover.

b. Install the 5 screws.

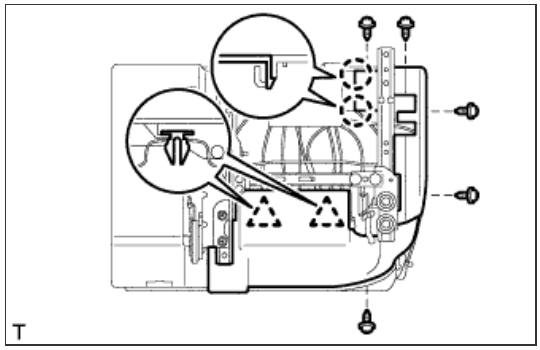


c. Attach the 10 claws.

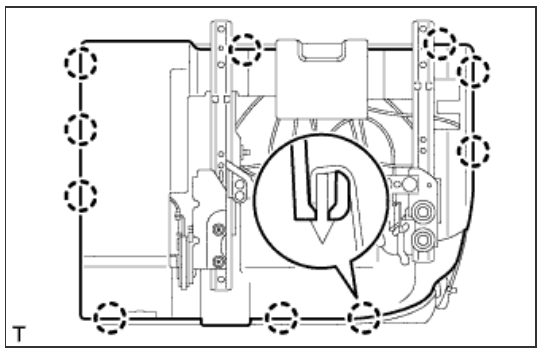

1 . INSTALL REAR SEATBACK STAY COVER LH


a. Attach the 2 claws to install the cover.

b. Install the screw.

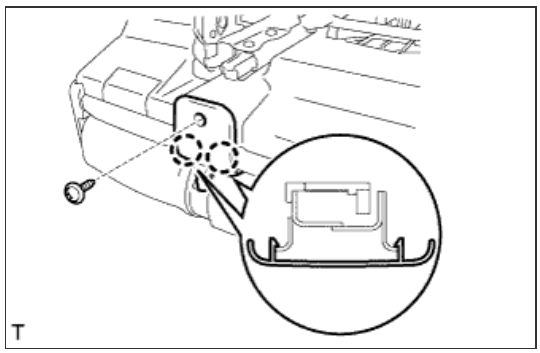


18. INSTALL SEAT BELT ANCHOR COVER CAP

a. Install the anchor cover cap with the screw.

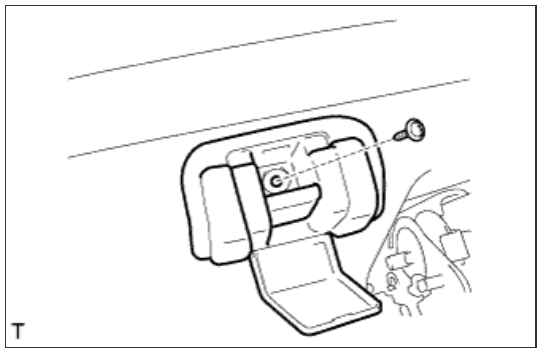


b. Attach the claw to close the cap.

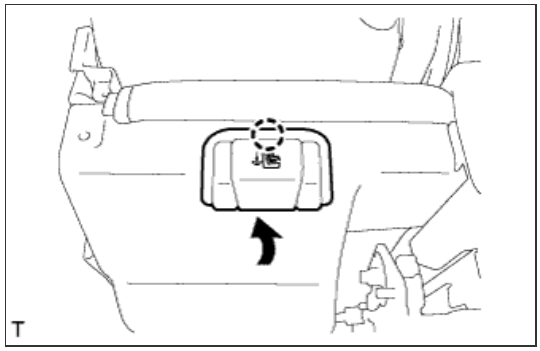

1 . INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY RH


a. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

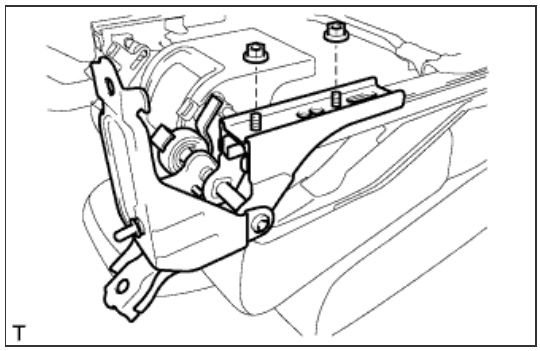

2 . INSTALL REAR NO. 1 SEAT HINGE SUB-ASSEMBLY LH

a. Attach the cable clamp to connect the cable.

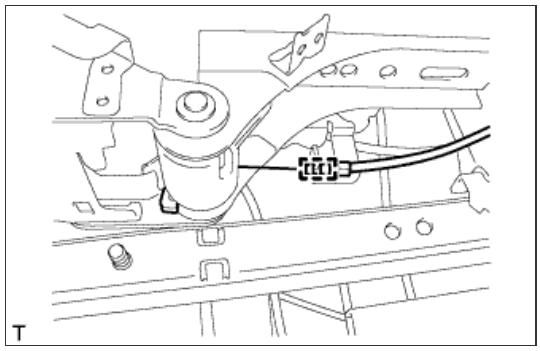


b. Install the hinge with the 2 nuts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

c. w/ Rear Seat Side Airbag:
Attach the wire harness clamp.

d. w/ Seat Heater System:
Attach the wire harness clamp.

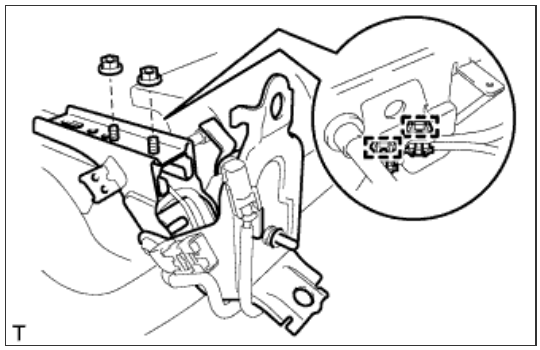


21. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Install the wire harness, and attach 2 claws to close the protector.


b. Attach the claw to install the protector to the seat hinge.

c. Install the clip.

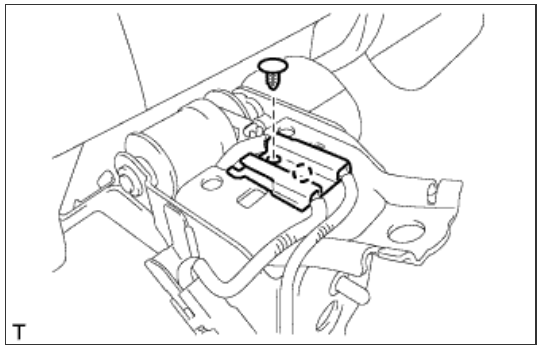


d. w/ Rear Seat Side Airbag:
Attach the claw to install the wire harness connector.

e. w/ Seat Heater System:
Attach the claw to install the wire harness connector.

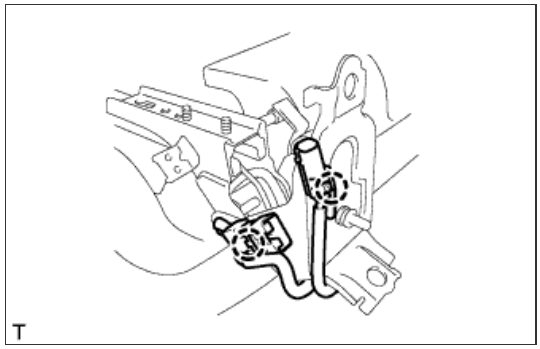


22. INSTALL REAR NO. 2 SEAT LEG SIDE COVER

a. Pass the fold seat stopper band through the seat leg side cover and attach it to the seat cushion frame with the bolt.

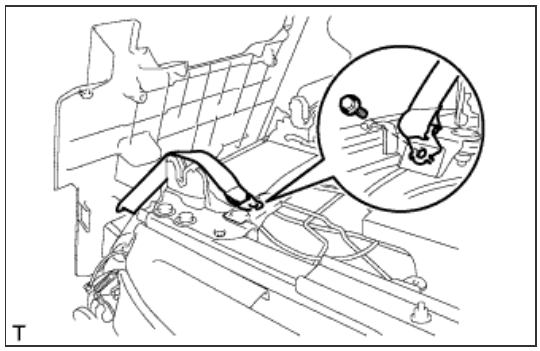


b. Attach the 4 claws to install the seat leg side cover.

c. Install the 4 screws.

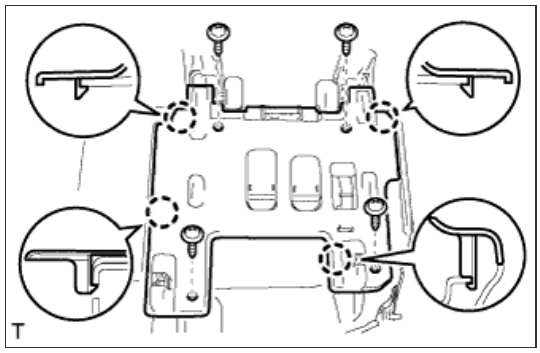


23. INSTALL UPPER SEAT TRACK RAIL COVER RH

a. Attach the 2 claws to install the cover.

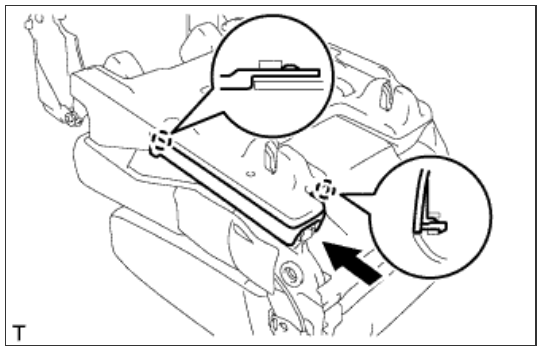

24. INSTALL UPPER SEAT TRACK RAIL COVER LH


a. Attach the 2 claws to install the cover.

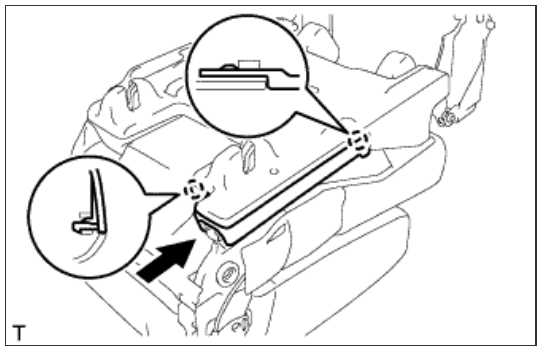

25. INSTALL REAR NO. 1 SEAT RECLINING COVER RH

a. Attach the 4 claws to install the cover.


b. Install the 2 screws.

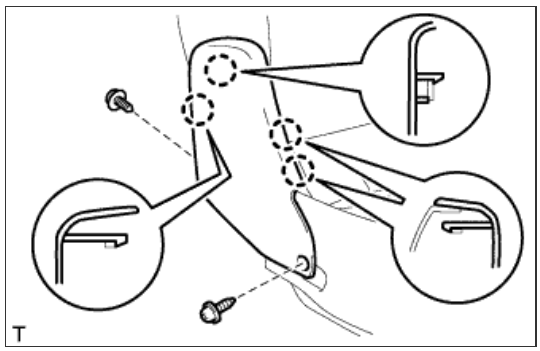

26. INSTALL REAR NO. 1 SEAT RECLINING COVER LH


a. Attach the 3 claws in the order shown in the illustration to install the cover.

b. Install the 2 screws.

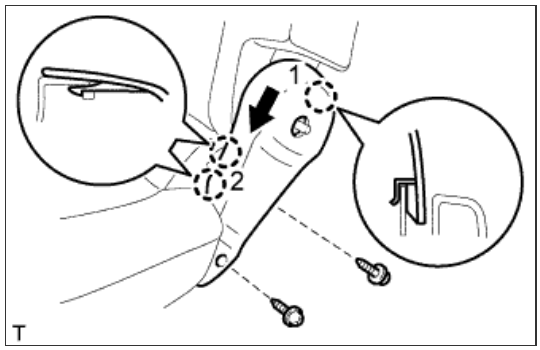


27. INSTALL RECLINING AD USTER RELEASE HANDLE LH

a. Install the release handle with the screw.

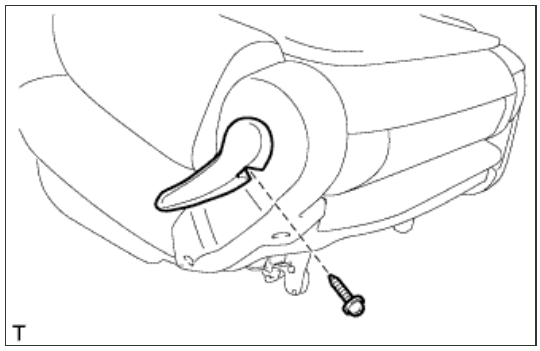

28. INSTALL SEAT AD USTER BOLT COVER

a. Attach the 2 claws to install the cover.

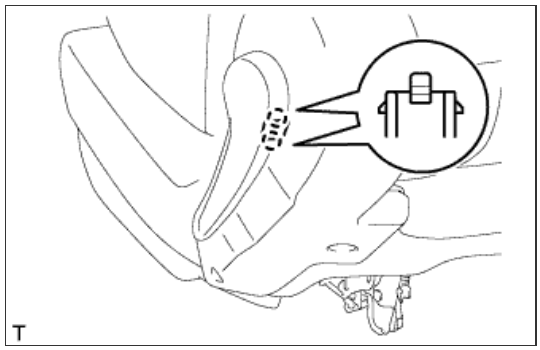


29. INSTALL REAR NO. 1 SEAT ASSEMBLY LH


a. Install the rear No. 1 seat assembly (Click here).

for Preparation Click here


w/o Sliding Roof:

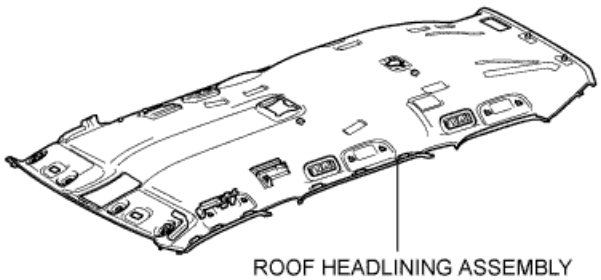

w/ Sliding Roof:

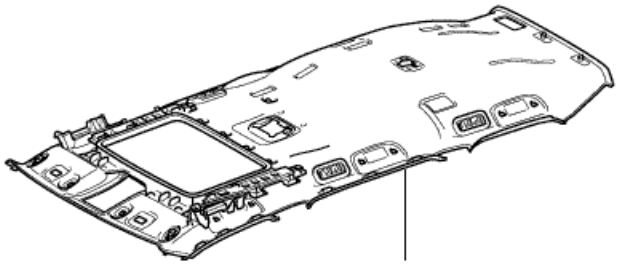


T

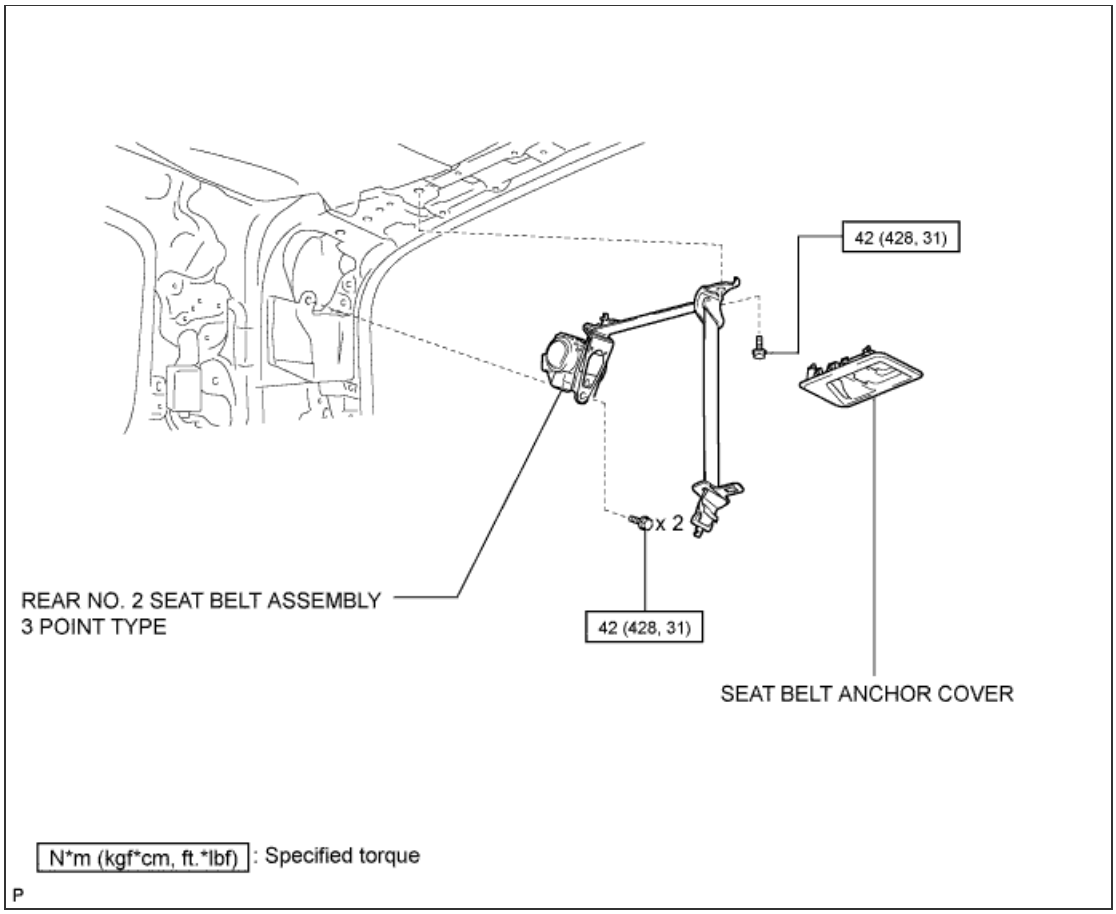
42 (428, 31)
x 2
REAR NO. 2 SEAT BELT ASSEMBLY
3 POINT TYPE
42 (428, 31)
SEAT BELT ANCHOR COVER
N*m (kgf*cm, ft.*lbf) : Specified torque
P

for Preparation Click here

1. REMOVE SEAT BELT ANCHOR COVER

a. Detach the 4 clips and 4 guides, and remove the seat belt anchor cover.

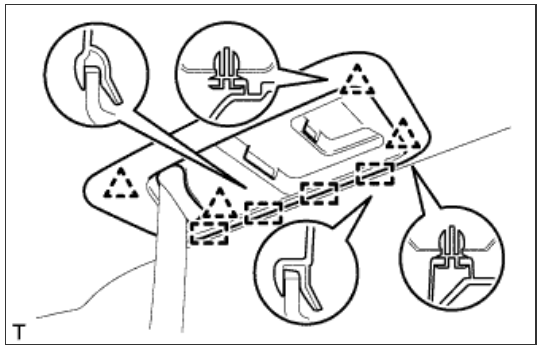

2. REMOVE ROOF HEADLINING ASSEMBLY (w o Sliding Roof)


a. Remove the roof headlining (Click here).

3. REMOVE ROOF HEADLINING ASSEMBLY (w Sliding Roof)


a. Remove the roof headlining (Click here).

4. REMOVE REAR NO. 2 SEAT BELT ASSEMBLY 3 POINT TYPE

a. Remove the bolt and through anchor.

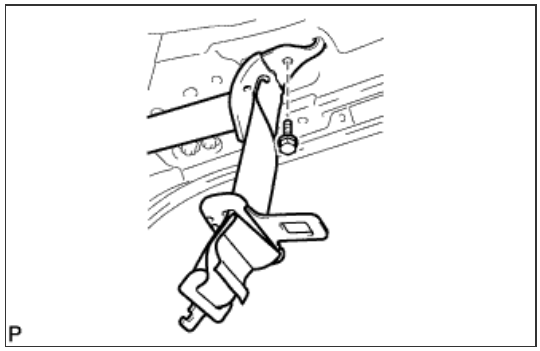


b. Remove the bolts and belt.

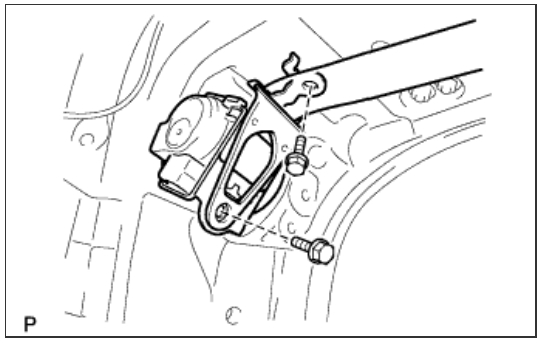

for Preparation Click here

1. REMOVE SEAT BELT ANCHOR COVER

a. Detach the 4 clips and 4 guides, and remove the seat belt anchor cover.

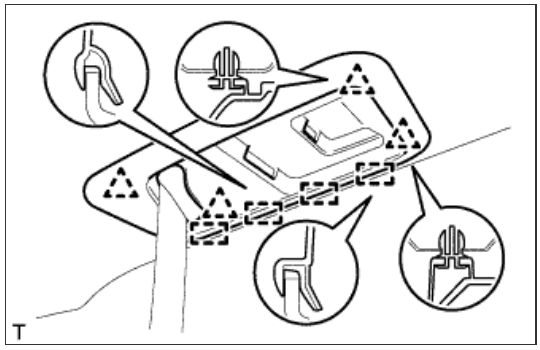

2. REMOVE ROOF HEADLINING ASSEMBLY (w o Sliding Roof)


a. Remove the roof headlining (Click here).

3. REMOVE ROOF HEADLINING ASSEMBLY (w Sliding Roof)


a. Remove the roof headlining (Click here).

4. REMOVE REAR NO. 2 SEAT BELT ASSEMBLY 3 POINT TYPE

a. Remove the bolt and through anchor.

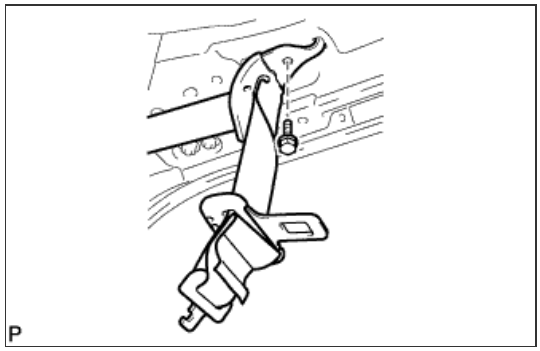

b. Remove the bolts and belt.

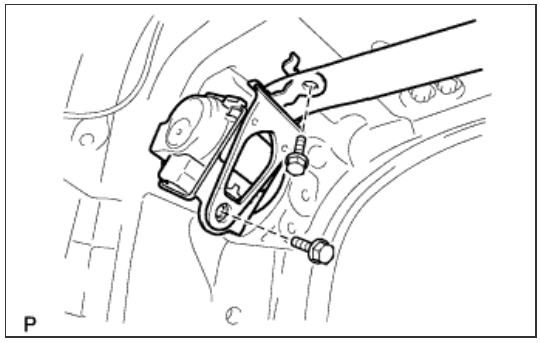


for Preparation Click here

1. INSPECT REAR NO. 2 SEAT BELT ASSEMBLY POINT TYPE

NOTICE:

Do not disassemble the retractor.

a. When the inclination of the retractor is 15° or less, check that the belt can be pulled from the retractor. When the inclination of the retractor is over 45°, check that the belt locks.
If the operation is not as specified, replace the belt.

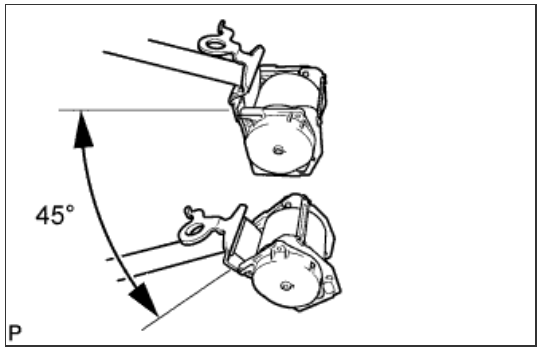


for Preparation Click here

1. INSTALL REAR NO. 2 SEAT BELT ASSEMBLY 3 POINT TYPE


a. Install the belt with the 2 bolts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

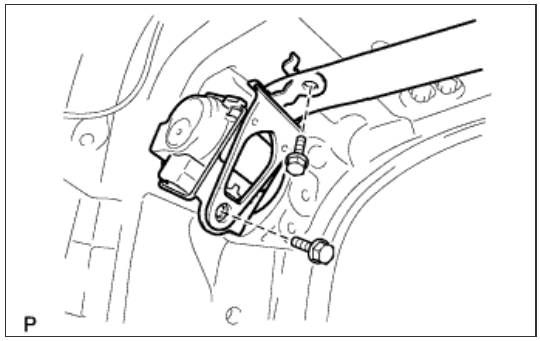

b. Install the through-anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

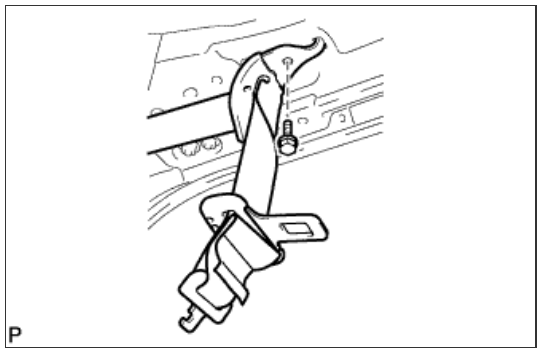

2. INSTALL ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)


a. Install the roof headlining (Click here).

3. INSTALL ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)

a. Install the roof headlining (Click here).

4. INSTALL SEAT BELT ANCHOR COVER

a. Attach the 4 guides and 4 clips to install the seat belt anchor co er.

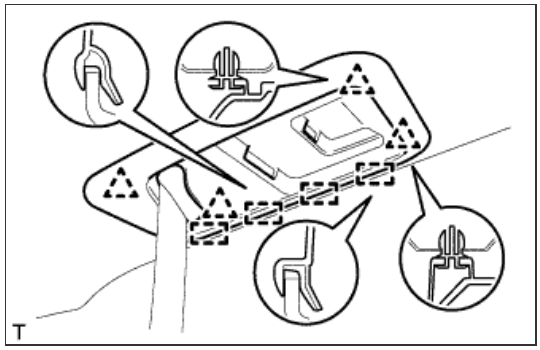


for Preparation Click here

1. INSTALL REAR NO. 2 SEAT BELT ASSEMBLY 3 POINT TYPE


a. Install the belt with the 2 bolts.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

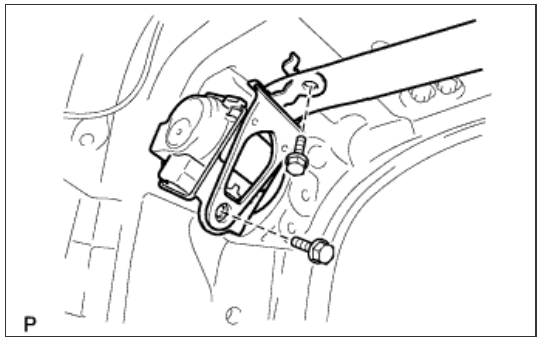

b. Install the through-anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

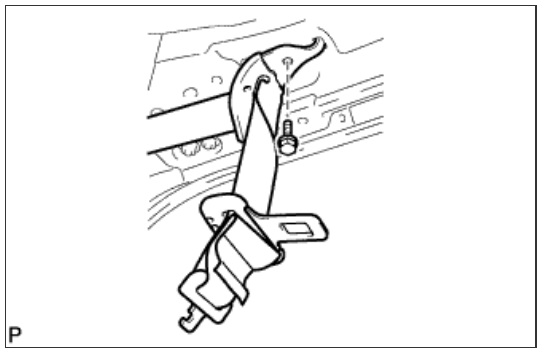

2. INSTALL ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)


a. Install the roof headlining (Click here).

3. INSTALL ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)

a. Install the roof headlining (Click here).

4. INSTALL SEAT BELT ANCHOR COVER

a. Attach the 4 guides and 4 clips to install the seat belt anchor co er.

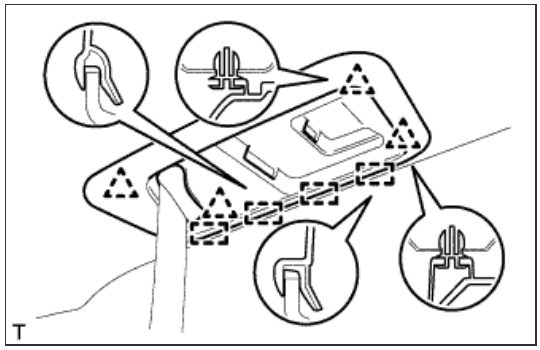

for Preparation Click here

1.PRECAUTIONS WHEN USING INTELLIGENT TESTER

a. When using the intelligent tester to troubleshoot the CAN communication line or LIN communication line:
Connect the intelligent tester to the vehicle, and turn a courtesy light switch on and off at 1.5 second intervals until communication between the intelligent tester and vehicle begins.

b. After all DTCs are cleared, check if the trouble occurs again 6 seconds after the engine switch is turned on (IG).


2.IF ANY OF FOLLOWING CONDITIONS ARE MET, KEEP ENGINE IDLING WITH A/C ON (ENGINE SPEED AT LESS THAN 2000 RPM) FOR AT LEAST 2 MINUTE:

- Refrigerant gas has been refilled or A/C parts have been replaced.
- The engine has not been started for a long time.

NOTICE:

If the engine speed exceeds 2,000 rpm, the A/C compressor may be damaged.

3.DO NOT HANDLE REFRIGERANT IN AN ENCLOSED AREA OR NEAR AN OPEN FLAME

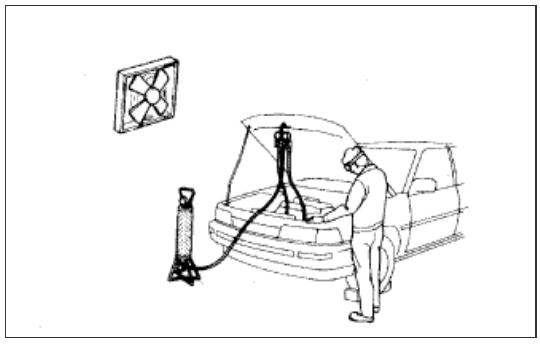

4.ALWAYS WEAR EYE PROTECTION

5.BE CAREFUL NOT TO GET LIQUID REFRIGERANT IN YOUR EYES OR ON YOUR SKIN

If liquid refrigerant gets in your eyes or on your skin:


a. Wash the area with lots of cold water.

CAUTION:

Do not rub your eyes or skin.

b. Apply clean petroleum jelly to the skin.

c. Go immediately to a hospital or see a physician for professional treatment.

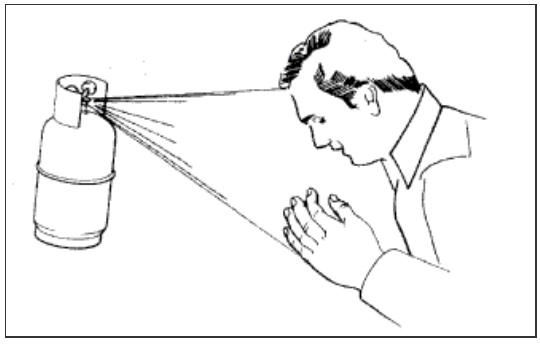


6.NEVER HEAT CONTAINER OR EXPOSE IT TO OPEN FLAME

7.BE CAREFUL NOT TO DROP CONTAINER OR APPLY PHYSICAL SHOCKS TO IT

8.DO NOT OPERATE COMPRESSOR WITH INSUFFICIENT REFRIGERANT IN REFRIGERANT SYSTEM

If there is not enough refrigerant in the refrigerant system, oil lubrication will be insufficient and compressor burnout may occur. Necessary care should be taken to avoid this.

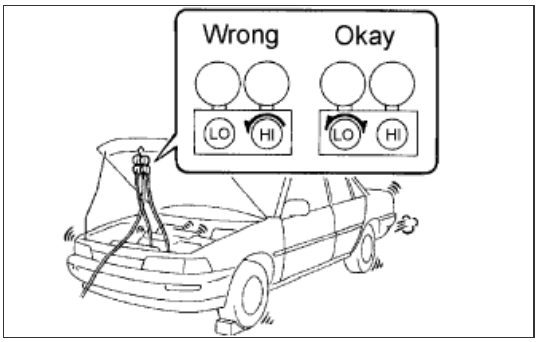

9.DO NOT OPEN HIGH PRESSURE MANIFOLD VALVE WHILE COMPRESSOR IS OPERATING

Open and close only the low pressure valve. Opening and closing the high pressure valve could cause the charging cylinder to rupture.

10.BE CAREFUL NOT TO OVERCHARGE SYSTEM WITH REFRIGERANT


If the refrigerant is overcharged, it causes problems such as insufficient cooling, poor fuel economy and engine overheating.

11.DO NOT OPERATE ENGINE AND COMPRESSOR WITHOUT REFRIGERANT


NOTICE:

This may damage the inside of the compressor.

for Preparation Click here

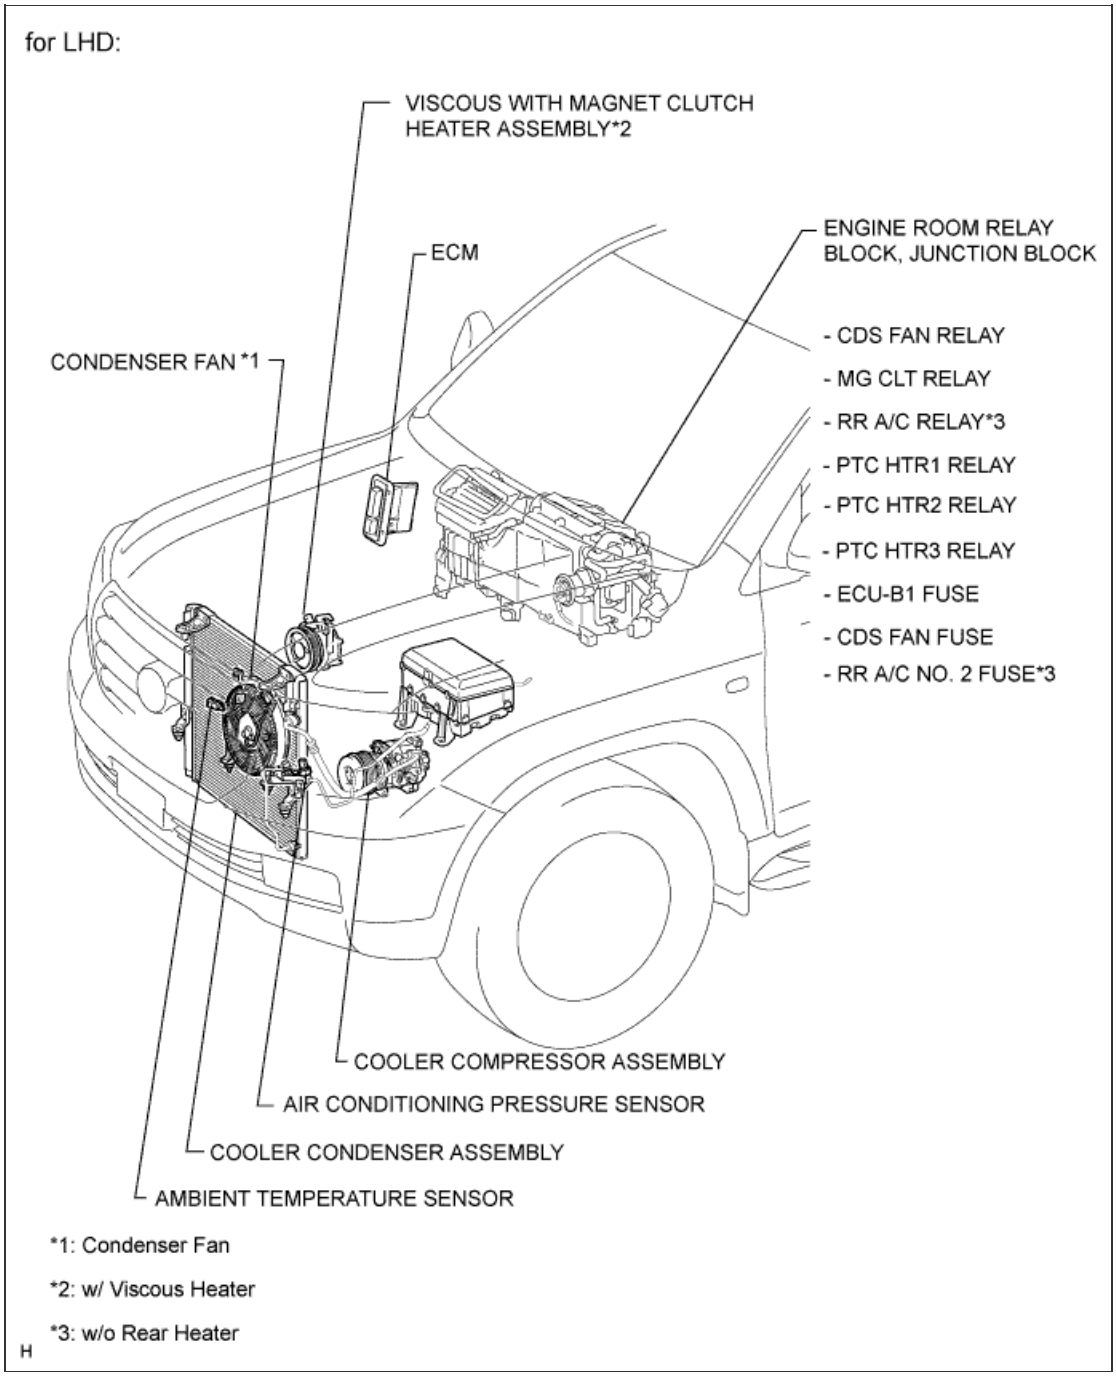


for RHD:

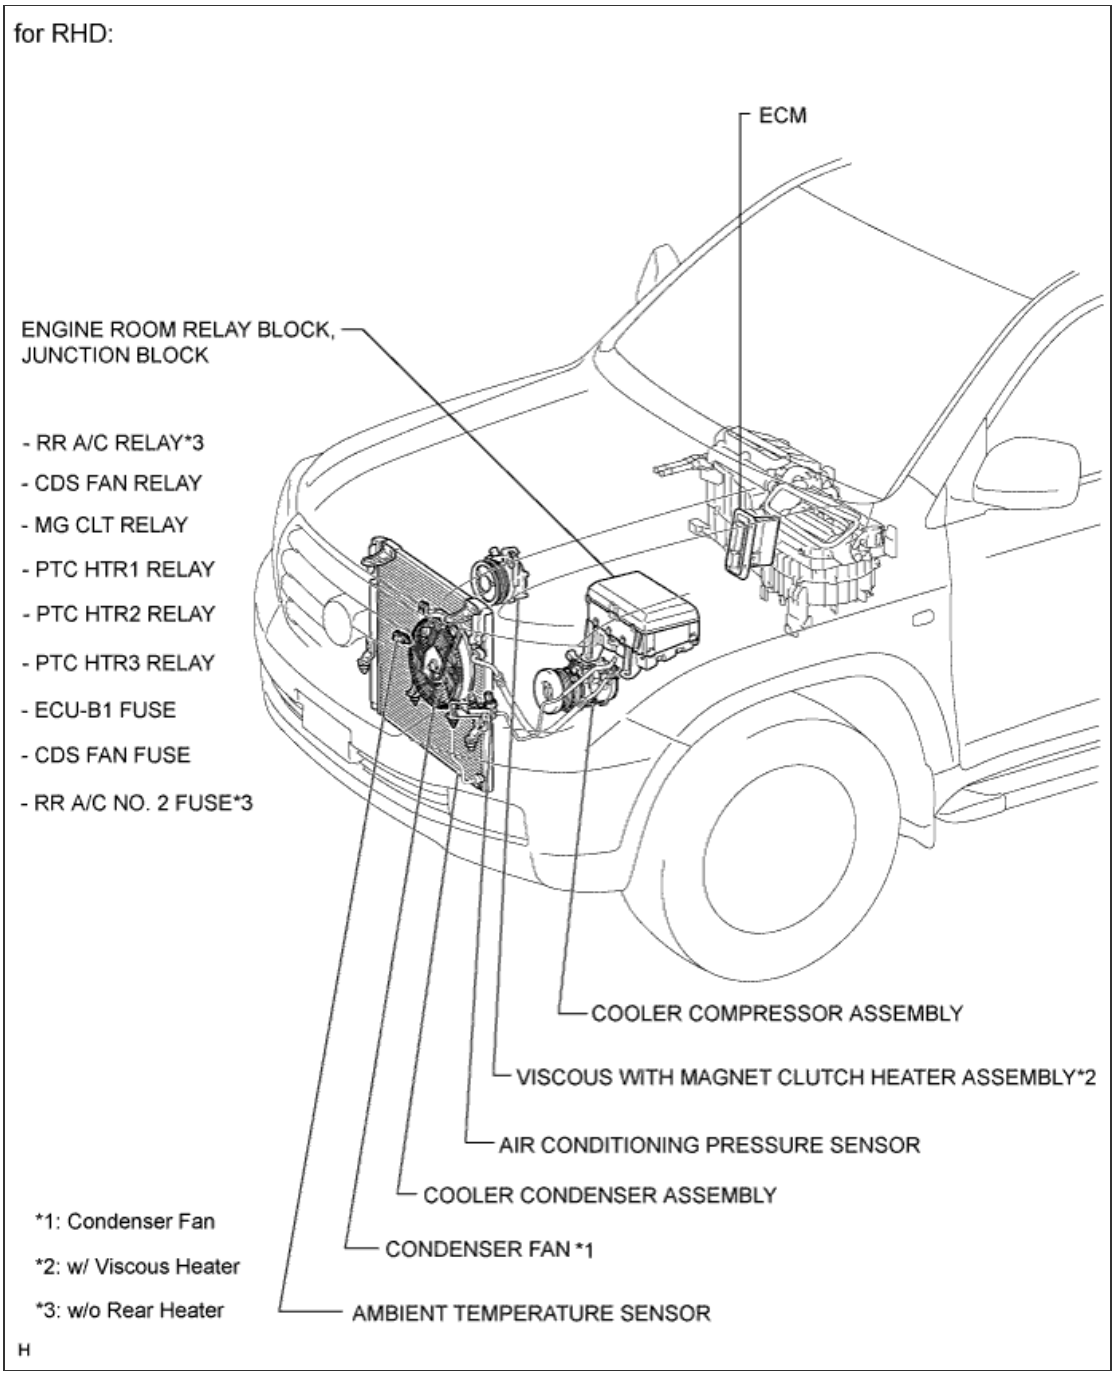

ECM
ENGINE ROOM RELAY BLOCK, JUNCTION BLOCK
- RR A/C RELAY*3
- CDS FAN RELAY
- MG CLT RELAY
- PTC HTR1 RELAY
- PTC HTR2 RELAY
- PTC HTR3 RELAY
- ECU-B1 FUSE
- CDS FAN FUSE
- RR A/C NO. 2 FUSE*3
COOLER COMPRESSOR ASSEMBLY
VISCOUS WITH MAGNET CLUTCH HEATER ASSEMBLY*2
AIR CONDITIONING PRESSURE SENSOR
COOLER CONDENSER ASSEMBLY
CONDENSER FAN *1
AMBIENT TEMPERATURE SENSOR
*1: Condenser Fan
*2: w/ Viscous Heater
*3: w/o Rear Heater


H

for LHD:

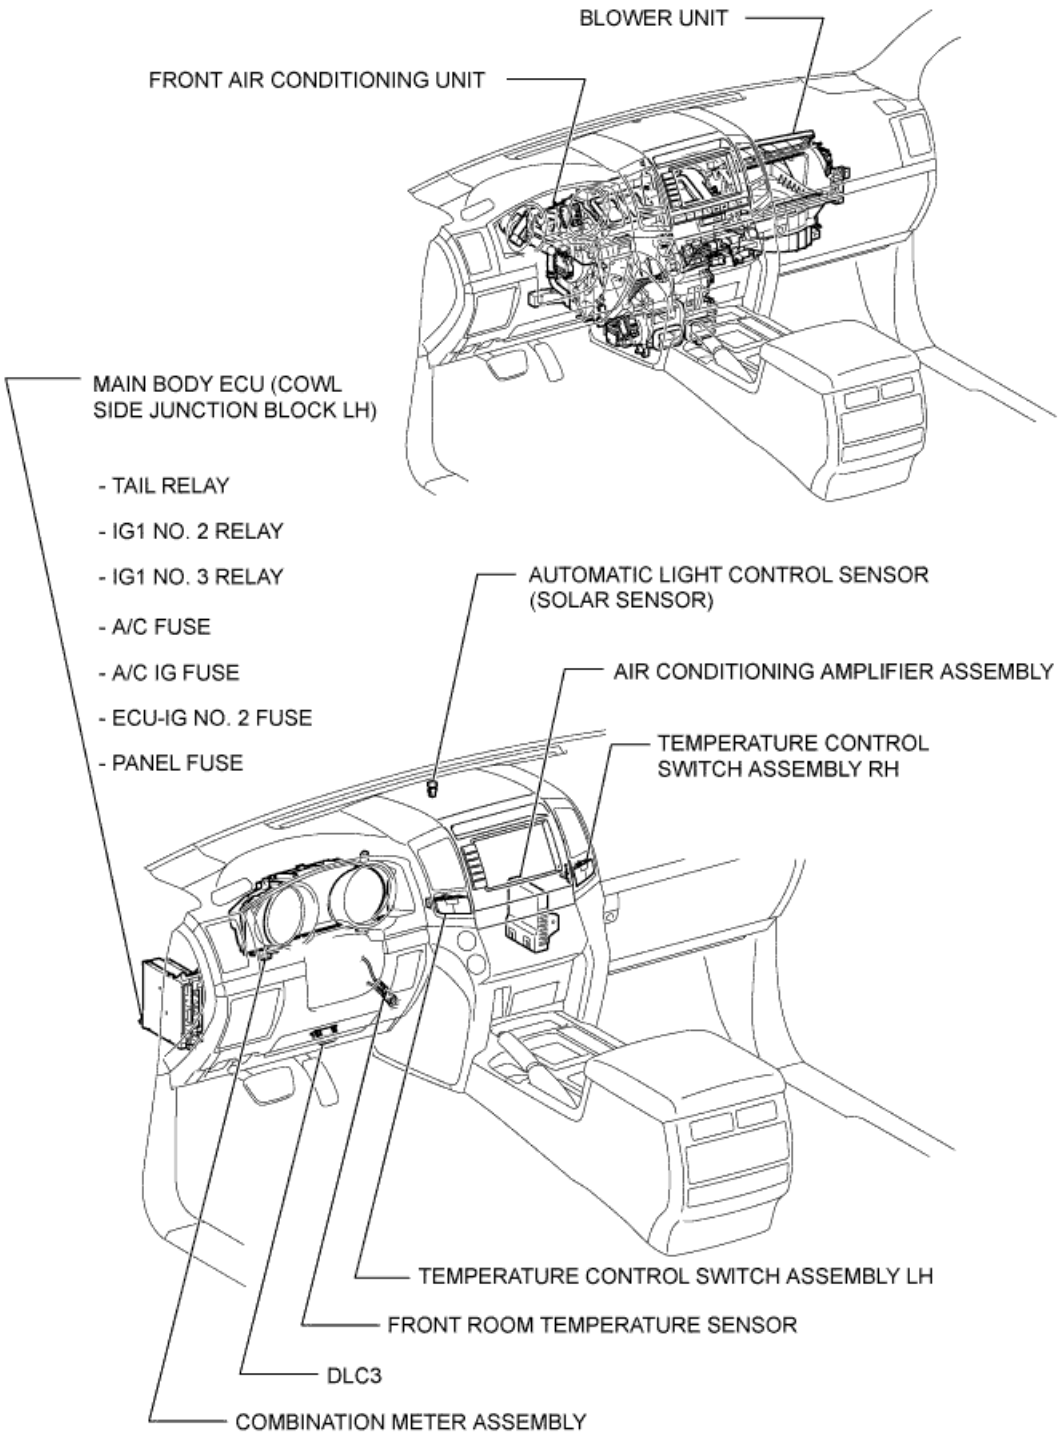

BLOWER UNIT
FRONT AIR CONDITIONING UNIT
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
- TAIL RELAY
- IG1 NO. 2 RELAY
- IG1 NO. 3 RELAY
- A/C FUSE
- A/C IG FUSE
- ECU-IG NO. 2 FUSE
- PANEL FUSE
AUTOMATIC LIGHT CONTROL SENSOR (SOLAR SENSOR)
AIR CONDITIONING AMPLIFIER ASSEMBLY
TEMPERATURE CONTROL SWITCH ASSEMBLY RH
TEMPERATURE CONTROL SWITCH ASSEMBLY LH
FRONT ROOM TEMPERATURE SENSOR
DLC3
COMBINATION METER ASSEMBLY

for RHD:

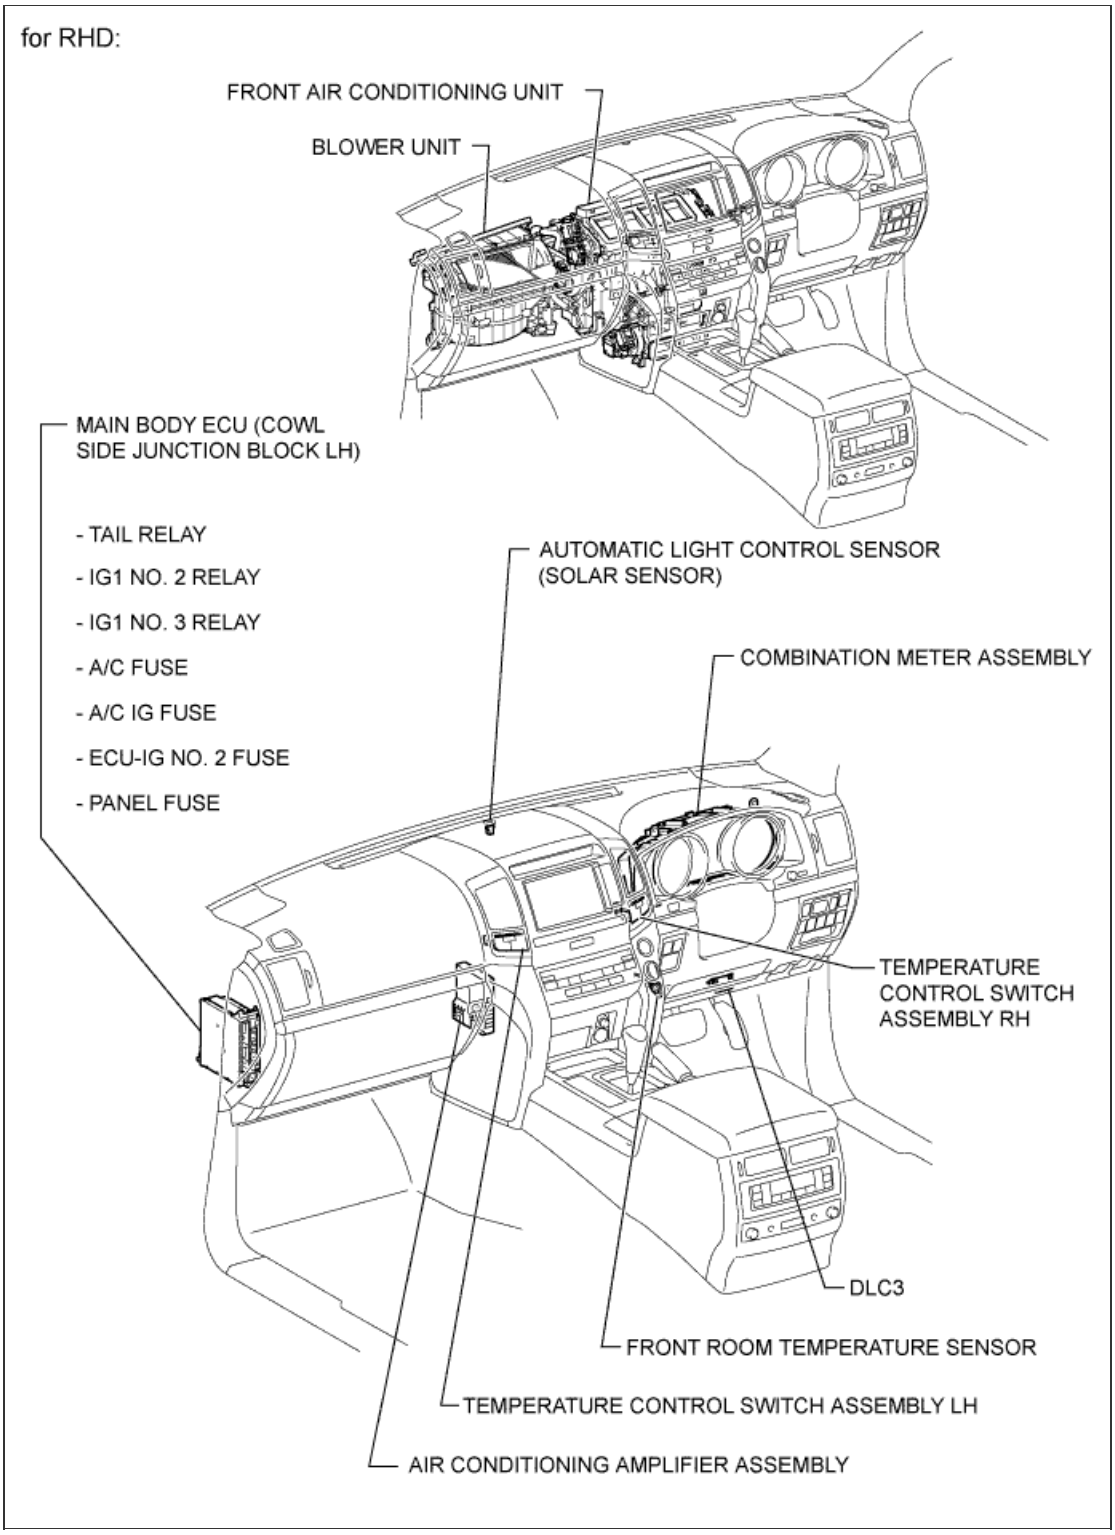
FRONT AIR CONDITIONING UNIT
BLOWER UNIT
MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)
- TAIL RELAY
- IG1 NO. 2 RELAY
- IG1 NO. 3 RELAY
- A/C FUSE
- A/C IG FUSE
- ECU-IG NO. 2 FUSE
- PANEL FUSE
AUTOMATIC LIGHT CONTROL SENSOR (SOLAR SENSOR)
COMBINATION METER ASSEMBLY
TEMPERATURE CONTROL SWITCH ASSEMBLY RH
DLC3
FRONT ROOM TEMPERATURE SENSOR
TEMPERATURE CONTROL SWITCH ASSEMBLY LH
AIR CONDITIONING AMPLIFIER ASSEMBLY

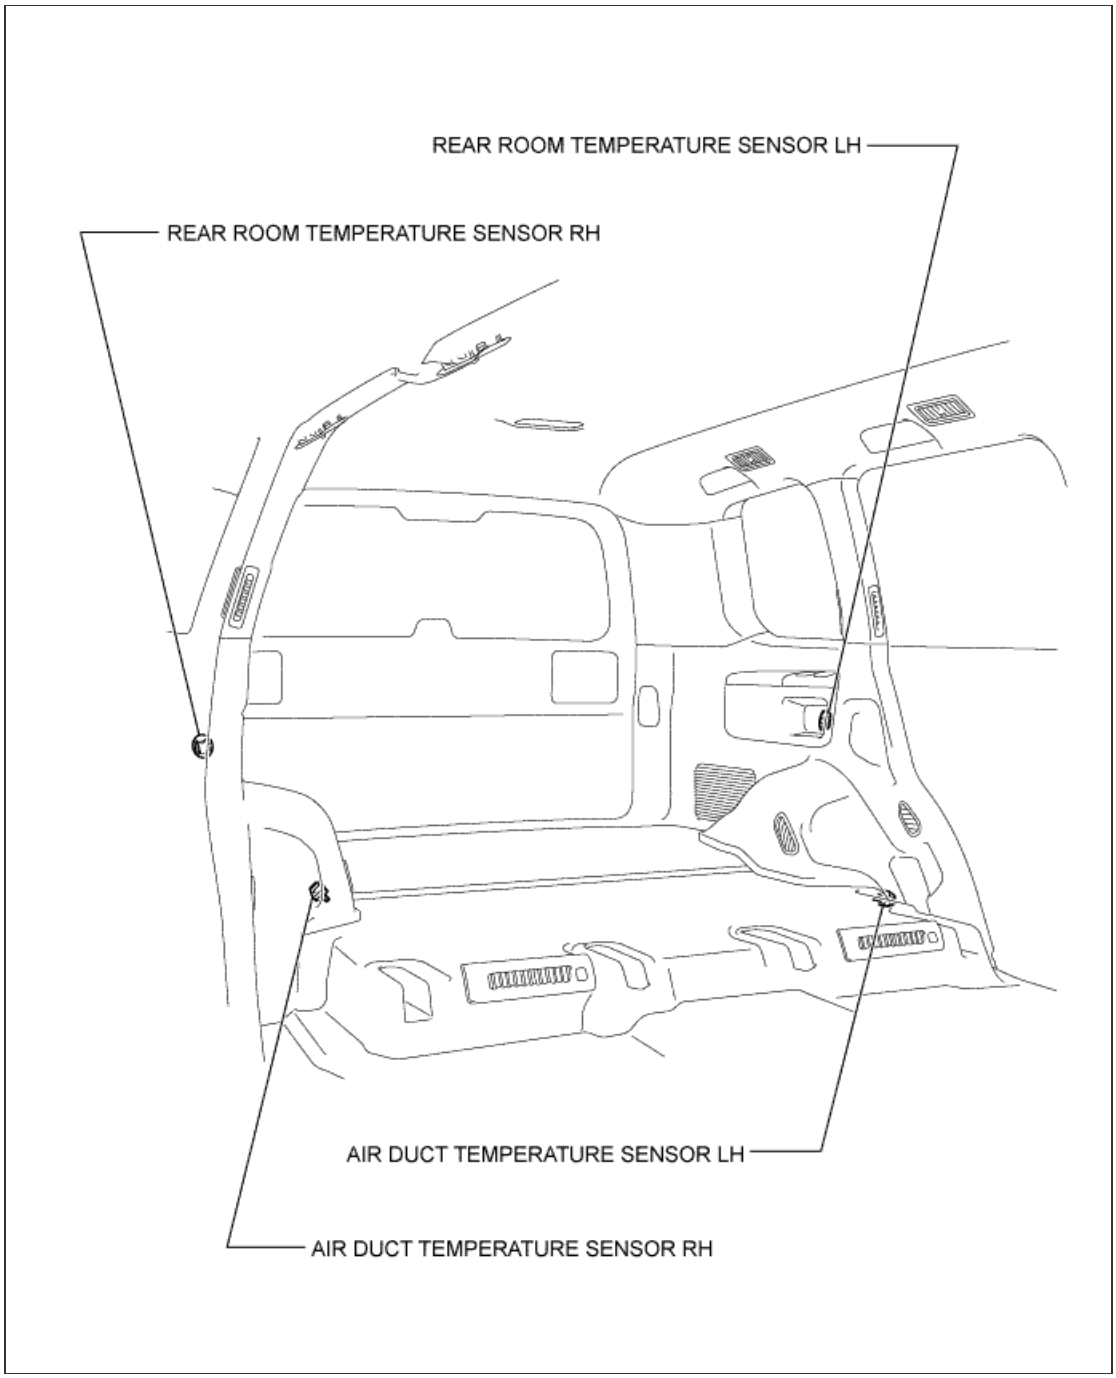

REAR ROOM TEMPERATURE SENSOR LH
REAR ROOM TEMPERATURE SENSOR RH
AIR DUCT TEMPERATURE SENSOR LH
AIR DUCT TEMPERATURE SENSOR RH

for LHD:

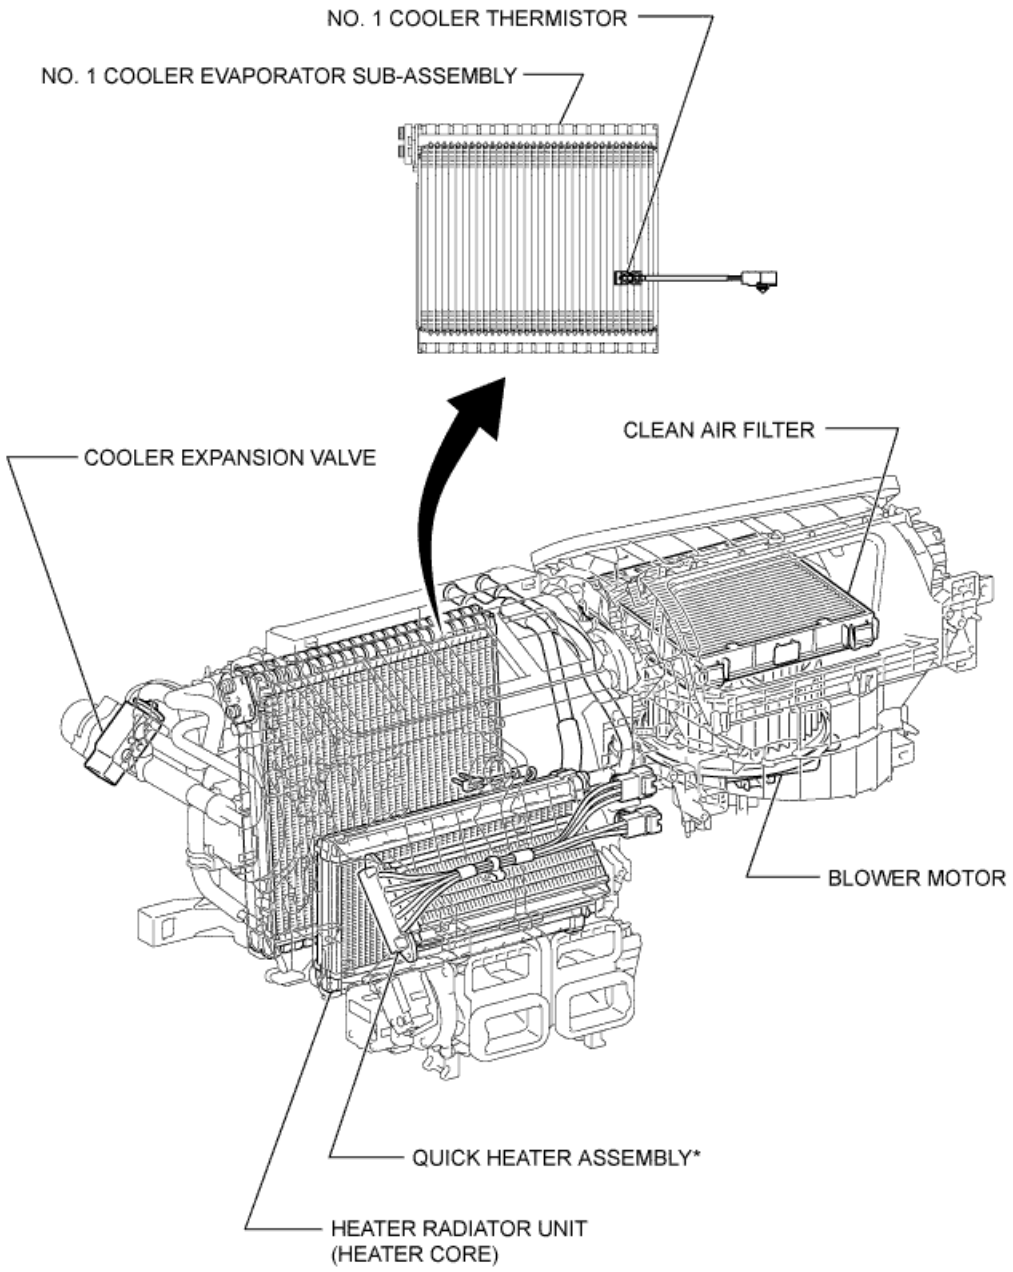


*: w/ PTC Heater

for RHD:

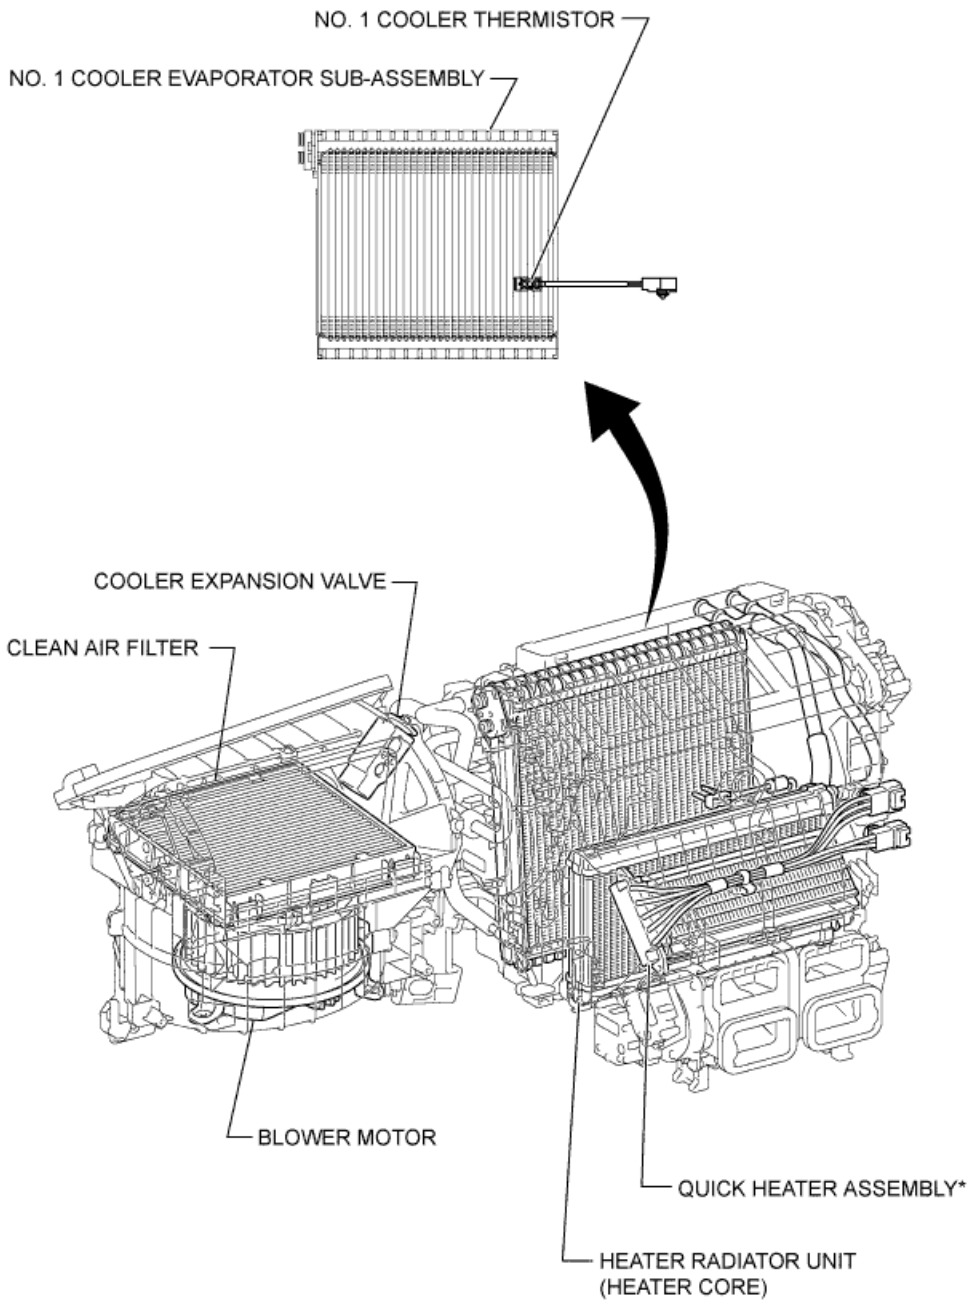


*: w/ PTC Heater

for LHD:

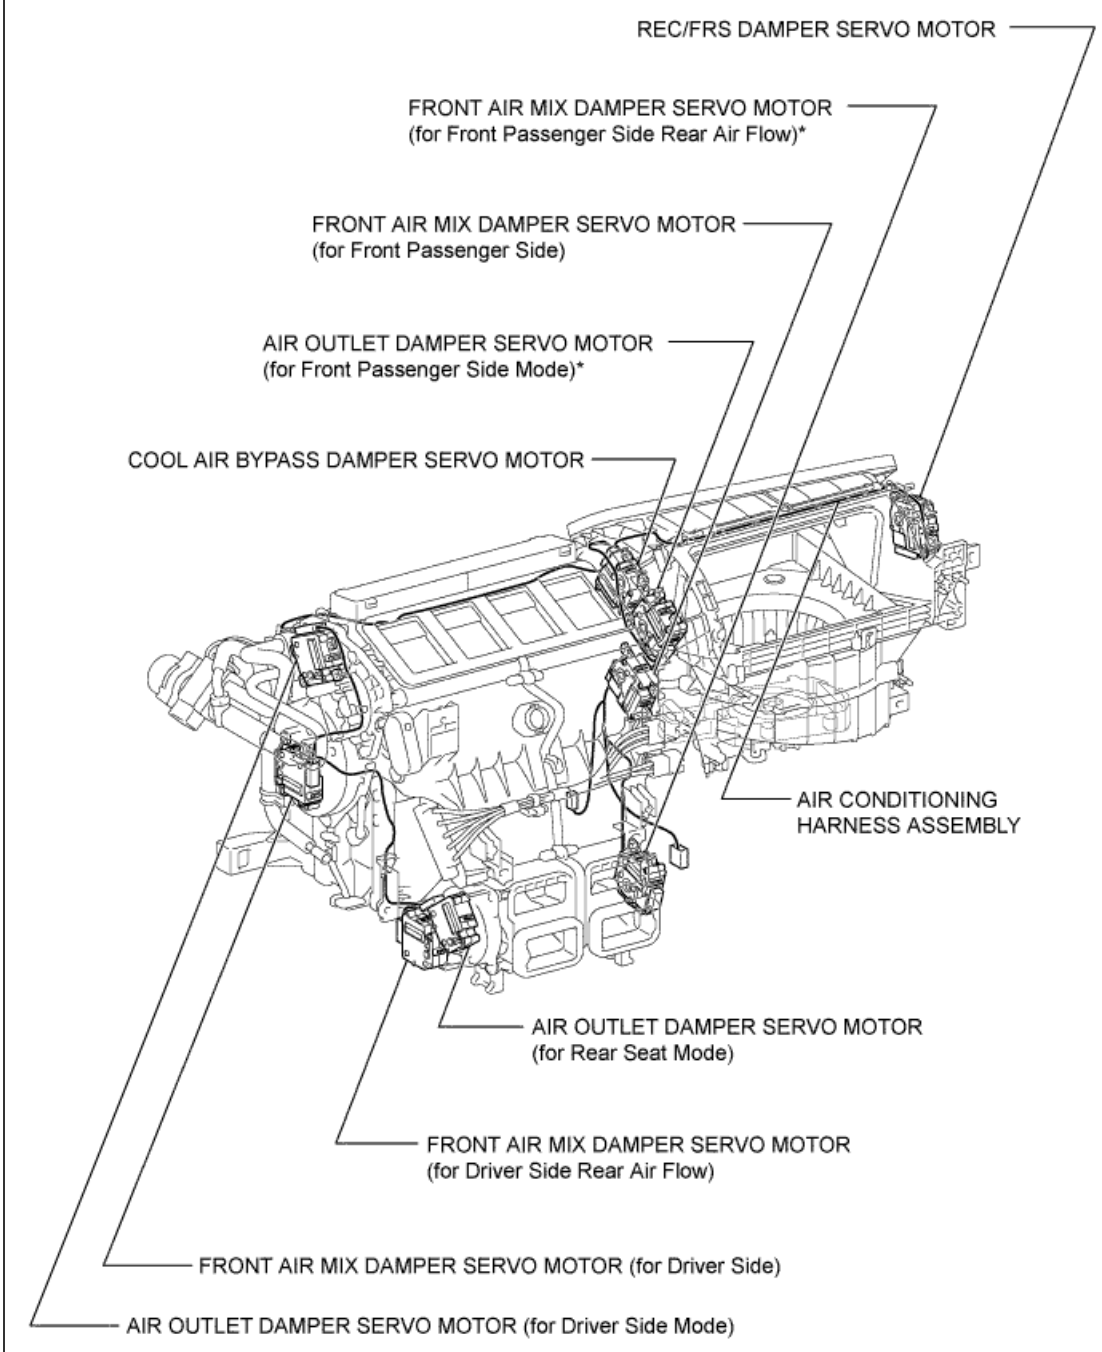


*: for 4-ZONE Type

for LHD (for 2-ZONE Type, w/o Rear Air Duct):

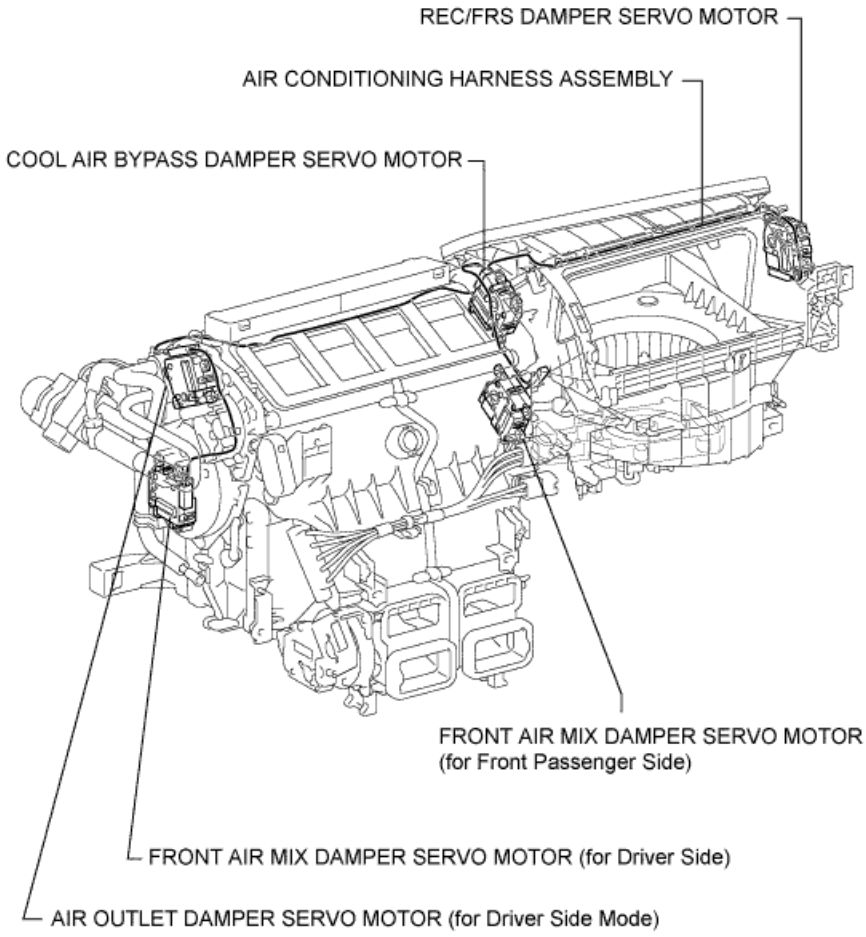


H

for RHD:

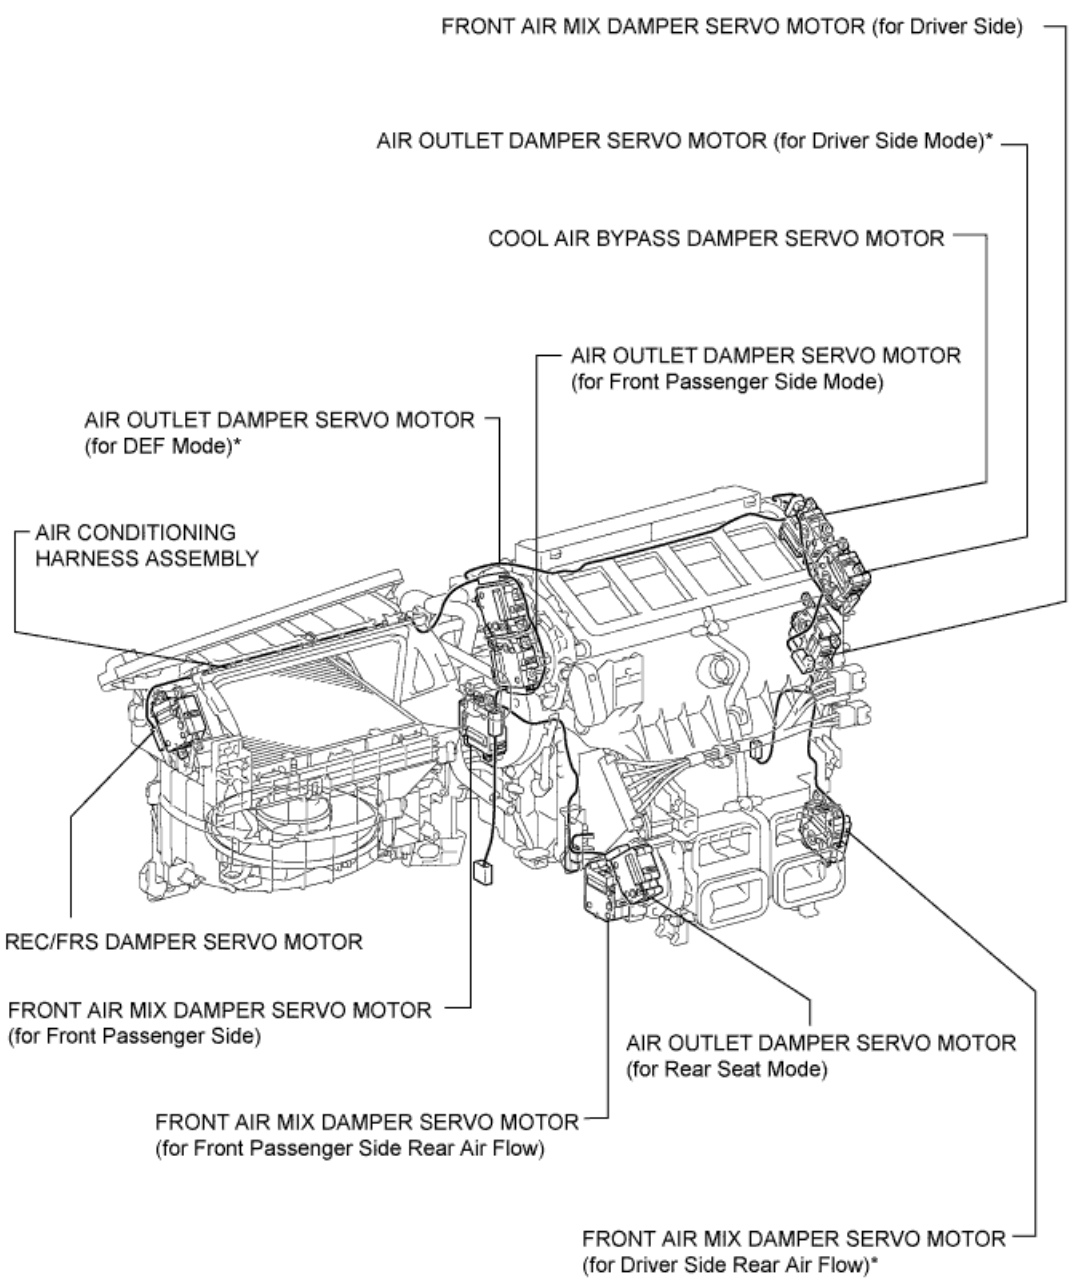


*: for 4-ZONE Type

w/ Rear Heater:

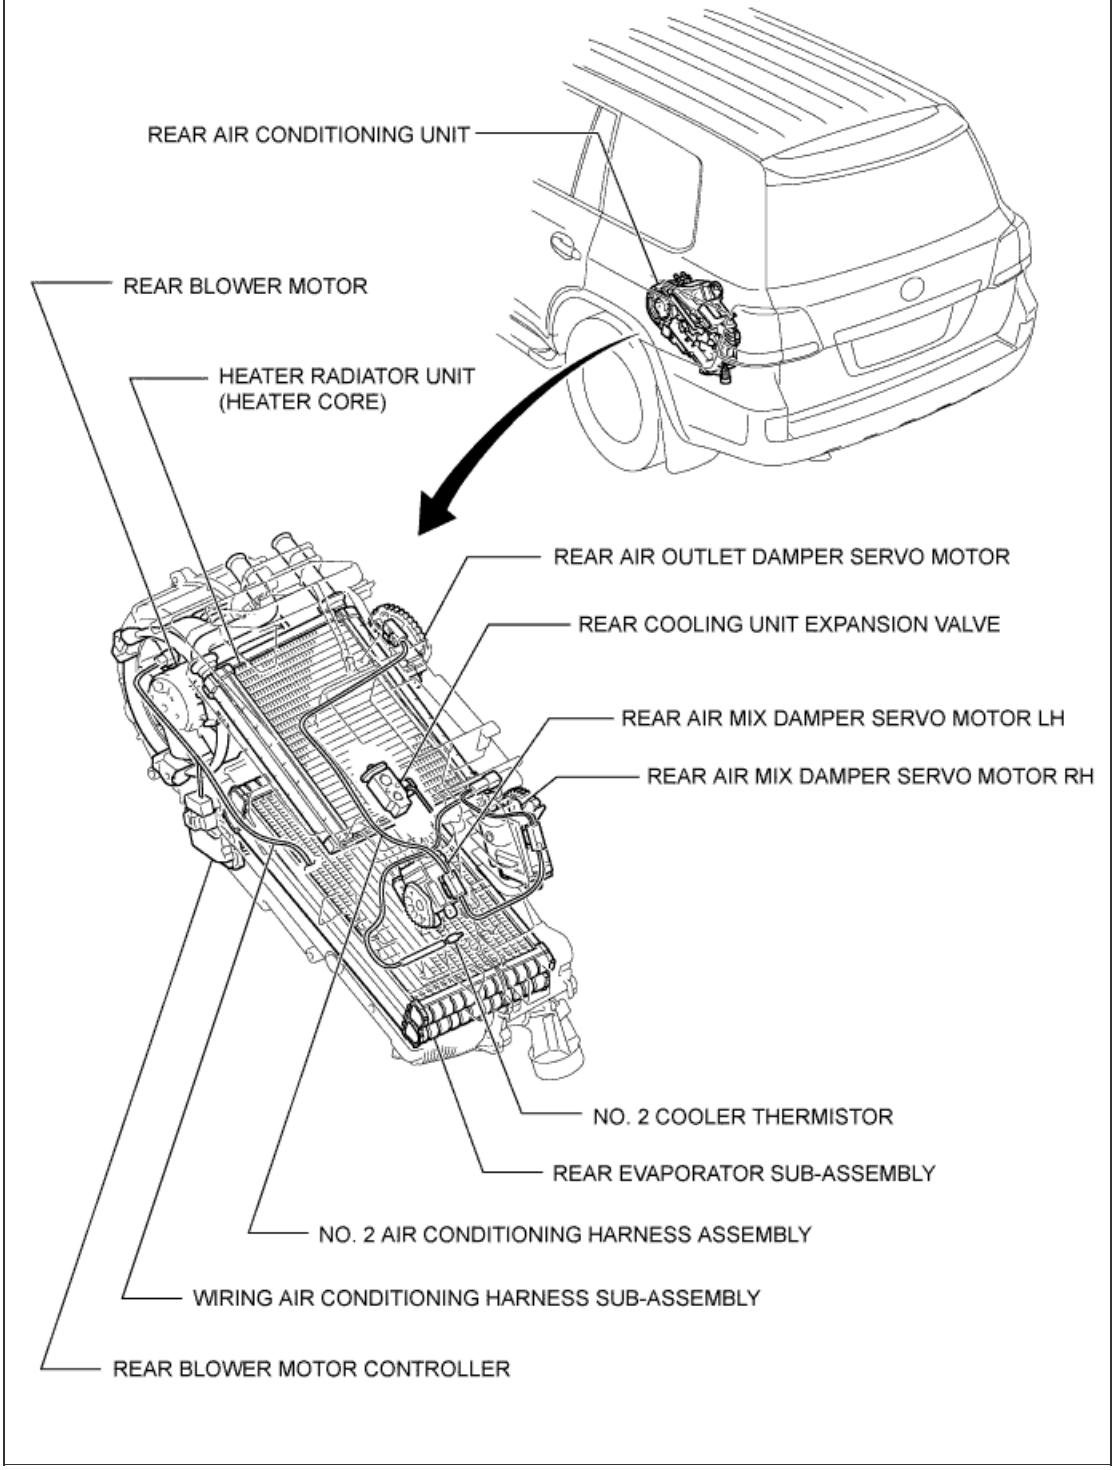

w/o Rear Heater:

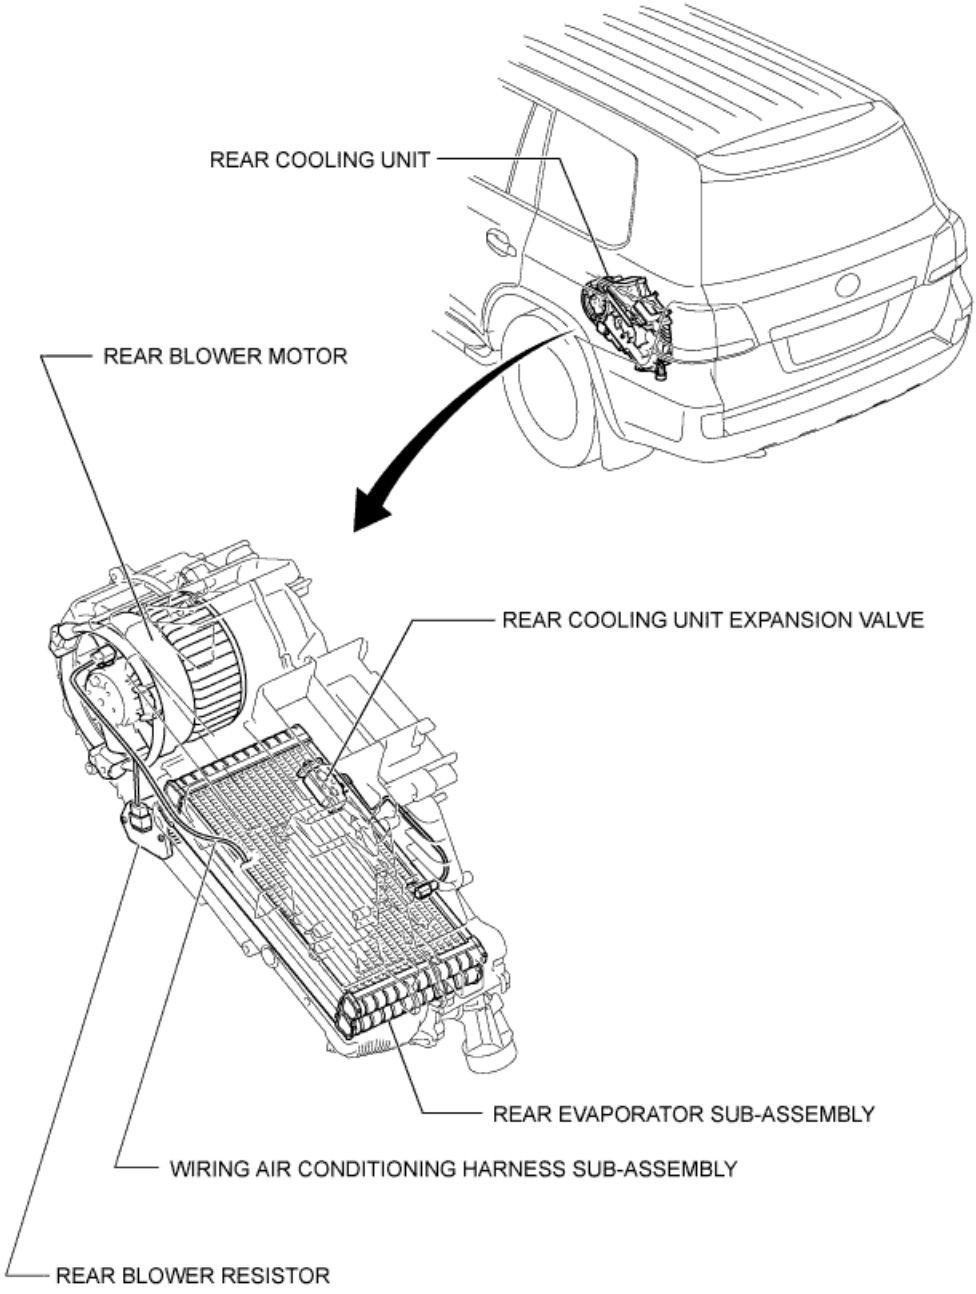


H


for LHD:




MULTI-DISPLAY*2

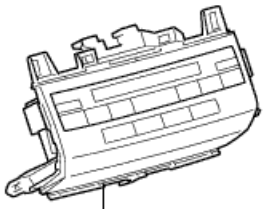

AIR CONDITIONING CONTROL ASSEMBLY*1

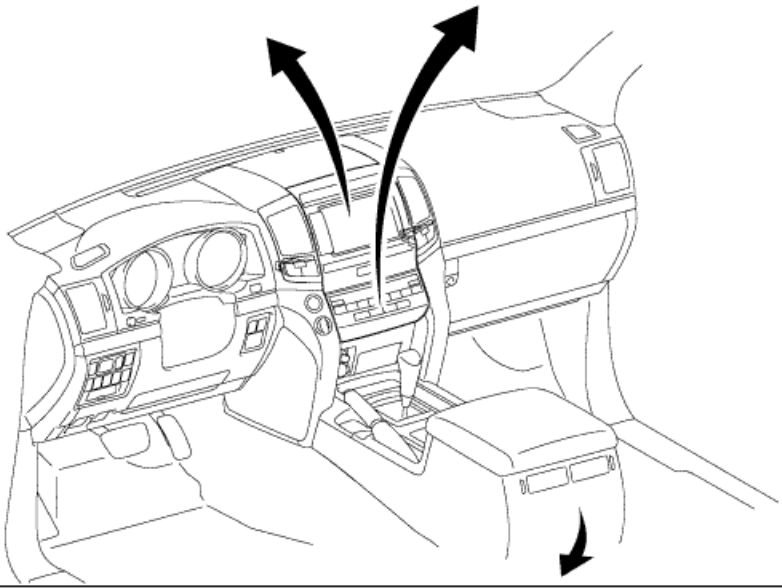


w/o Rear Heater:

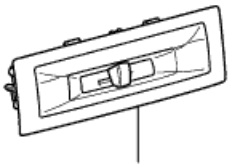

NO. 2 AIR CONDITIONING CONTROL ASSEMBLY

w/ Rear Heater:

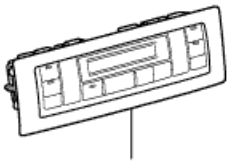


NO. 2 AIR CONDITIONING CONTROL ASSEMBLY

*1: w/o Multi-display


*2: w/ Multi-display

H


for RHD:

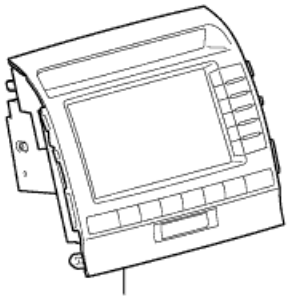


MULTI-DISPLAY*2

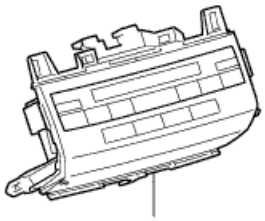

AIR CONDITIONING CONTROL ASSEMBLY*1

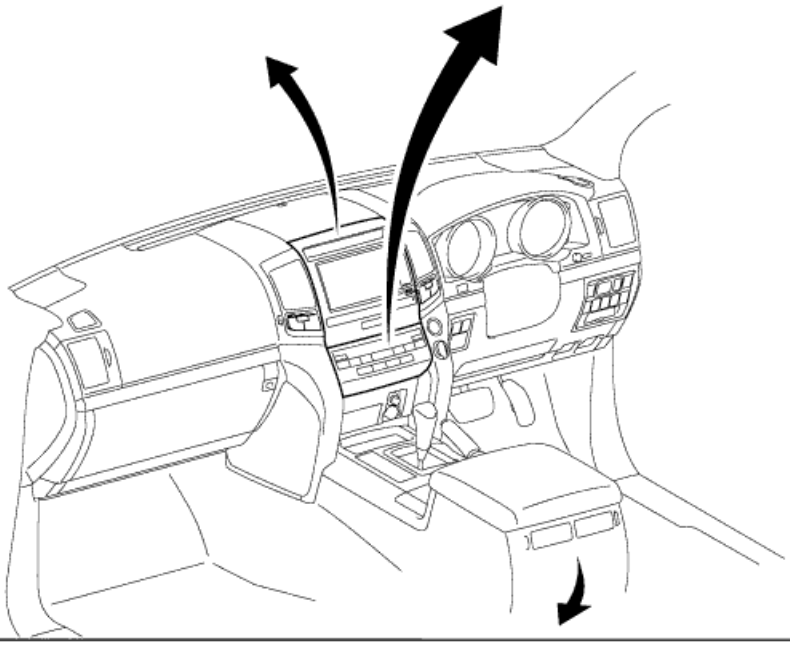


w/o Rear Heater:

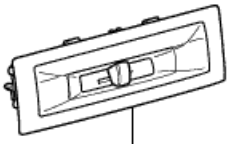

NO. 2 AIR CONDITIONING CONTROL ASSEMBLY

w/ Rear Heater:

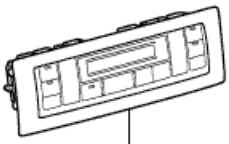


NO. 2 AIR CONDITIONING CONTROL ASSEMBLY

*1: w/o Multi-display


*2: w/ Multi-display

H


w/ Cooling Box (for LHD):

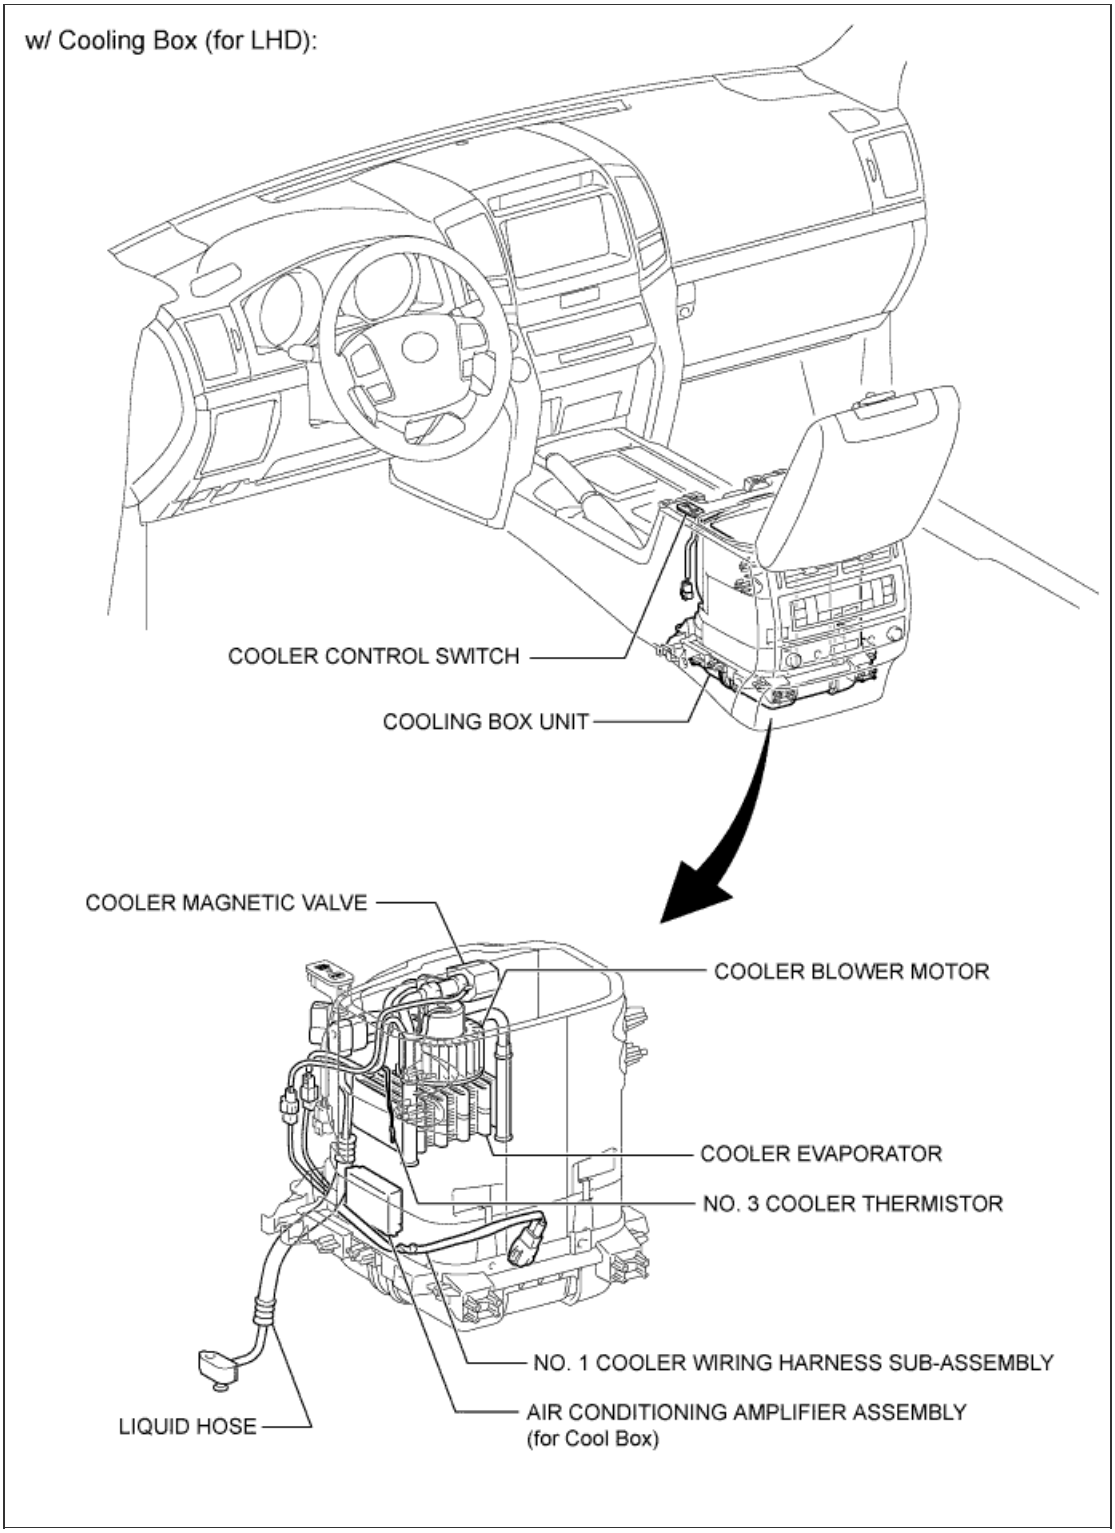

w/ Cooling Box (for RHD):

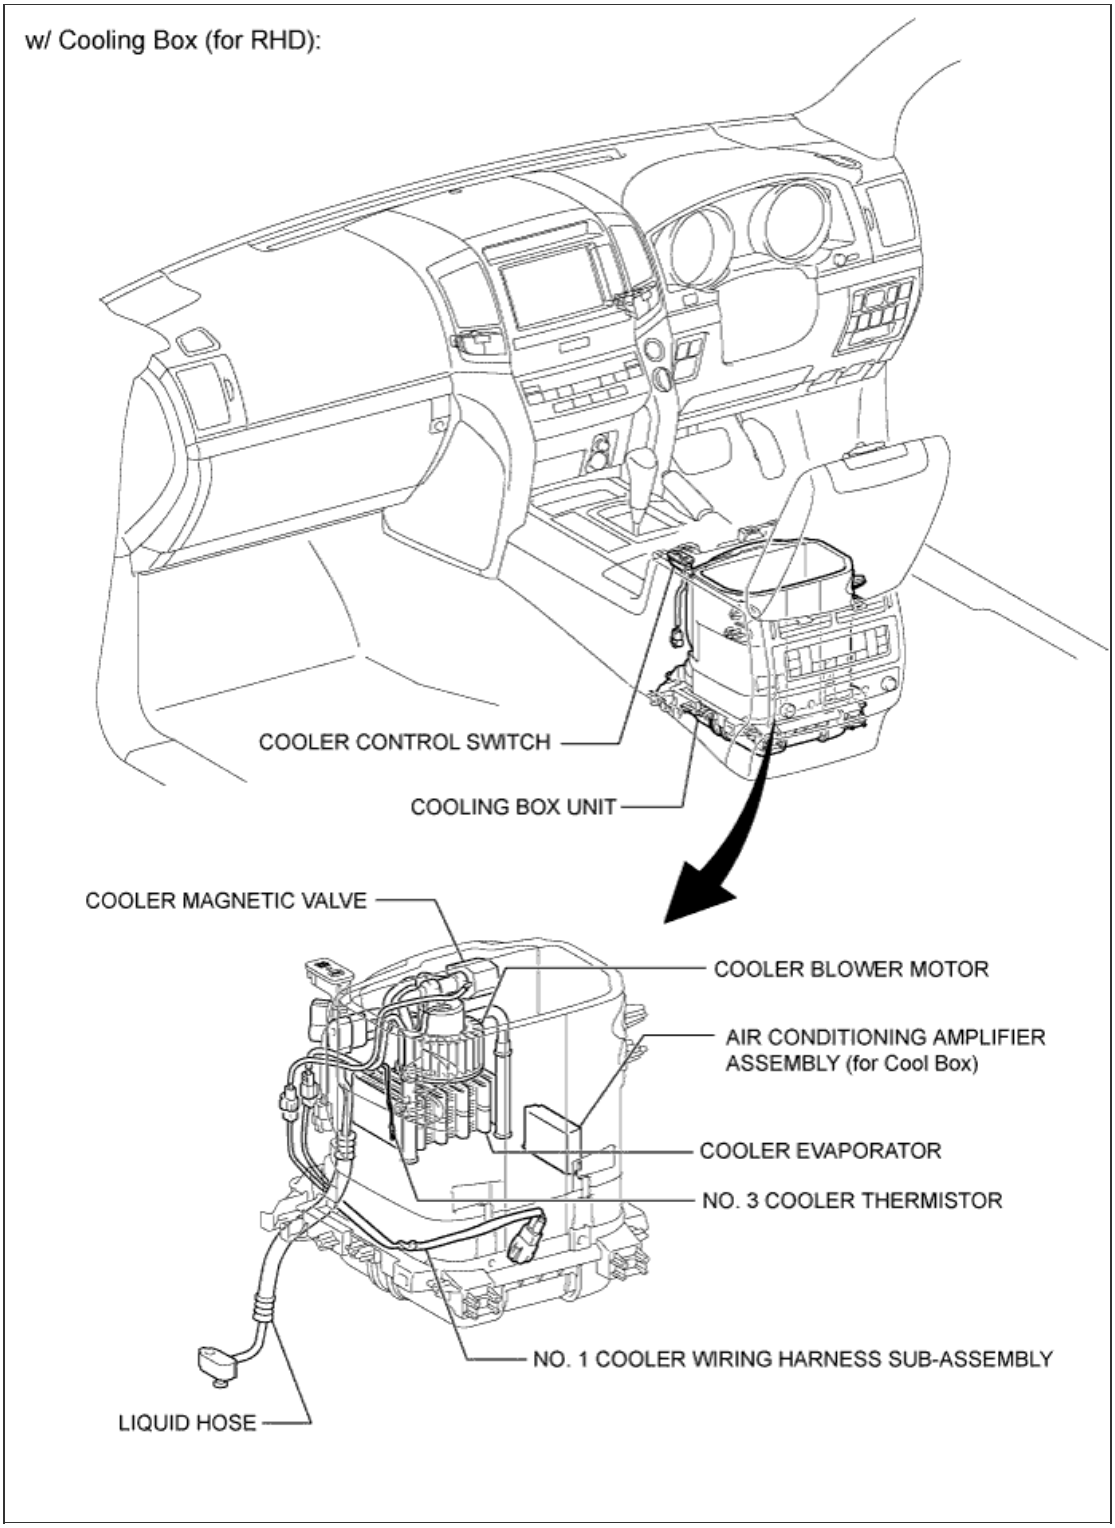

for Preparation Click here

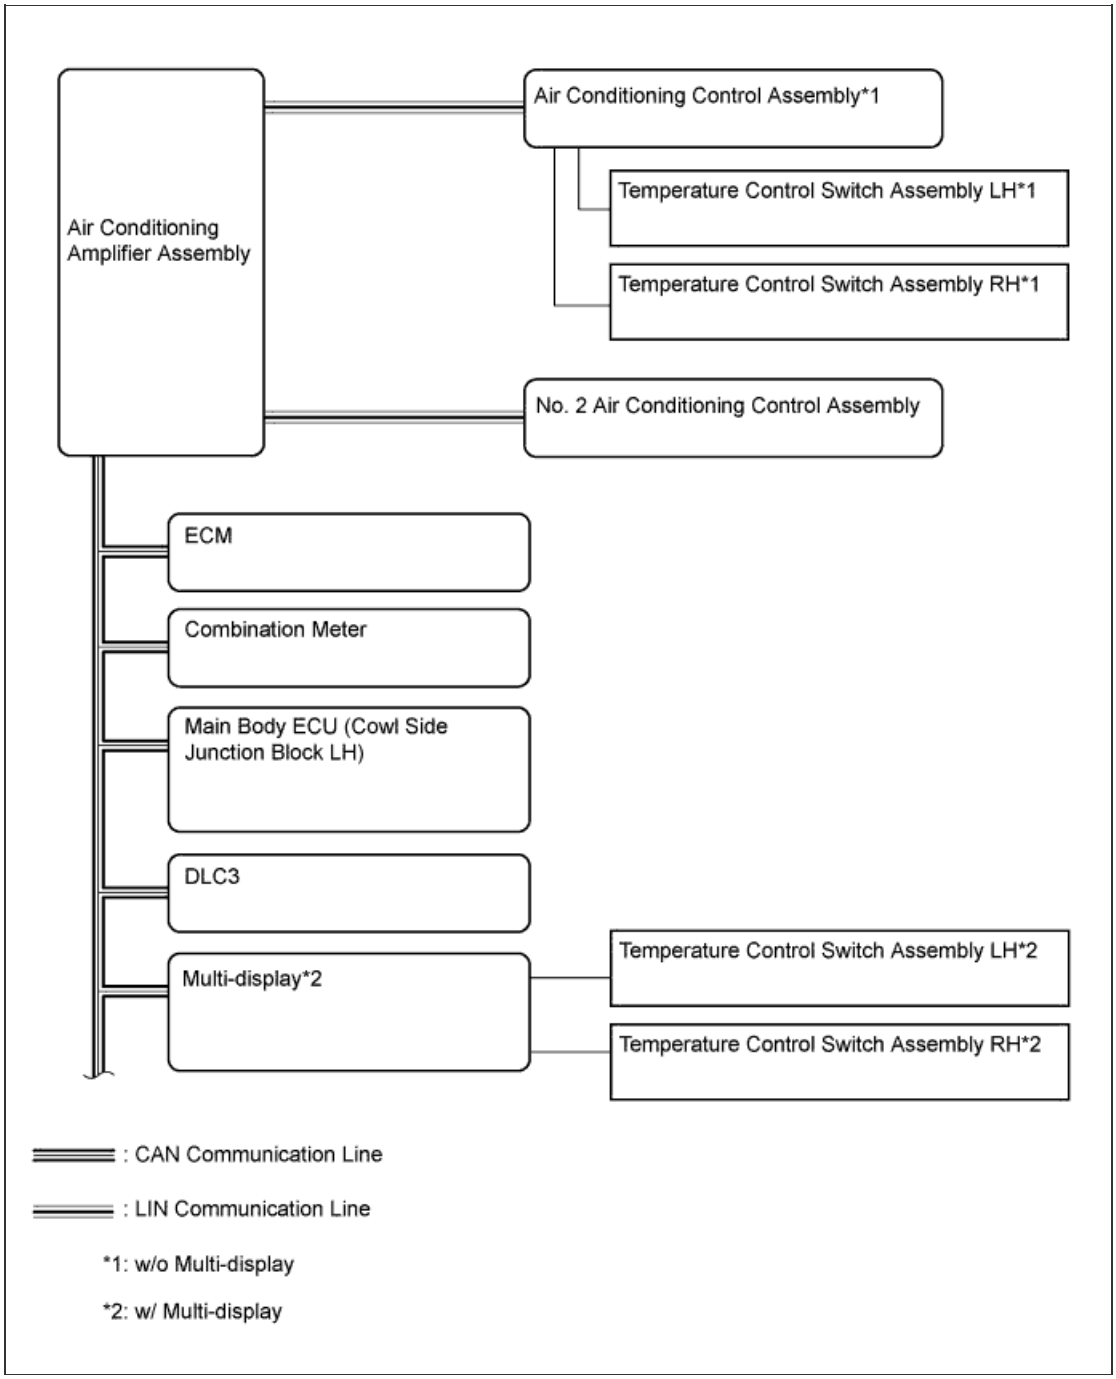


Communication Table

Transmitter	Receiver	Signal	Communication Line
Air conditioning amplifier assembly	ECM	- A/C compressor control signal - Heater idle up request signal - A/C idle up request signal - PTC heater driving number request signal - Ambient temperature signal	CAN
	Multi-display*1	- Display indication signal - Micro dust and pollen filter switch illumination signal - MODE indication signal - Driver seat set temperature indication signal - Front passenger seat set temperature indication signal	


		- Rear seat RH side set temperature indication signal*3 - Rear seat LH side set temperature indication signal*3 - Blower level indication signal - Rear blower level indication signal	
ECM	Air conditioning amplifier assembly	- Engine speed signal - Engine coolant temperature signal	CAN
Main Body ECU	Air conditioning amplifier assembly	- Panel illumination switch signal	
Multi-display*1	Air conditioning amplifier assembly	- Front A/C operation signal - Rear A/C operation signal - Micro dust and pollen filter switch operation signal - AUTO switch signal - OFF switch signal - Blower switch signal (UP, DOWN) - MODE switch signal - DEF switch signal - 4 ONE switch signal*3 - 2 ONE switch signal - Driver seat set temperature switch signal - Front passenger seat set temperature switch signal - Rear seat RH side set temperature indication signal*3 - Rear seat LH side set temperature indication signal*3	
Meter ECU	Air conditioning amplifier assembly	- Vehicle speed signal	
Air conditioning amplifier assembly	Air conditioning control assembly*2	- Front panel indication signal - AUTO indication signal - Blower level indication signal - A/C indication signal - REC indication signal - FRS indication signal - MODE indication signal - 4 ONE indication signal*3 - 2 ONE indication signal - Pollen indication signal - Driver seat set temperature indication signal - Front passenger seat set temperature indication signal - Rear seat RH side set temperature indication signal*3 - Rear seat LH side set temperature indication signal*3 - Set temperature indication signal	LIN
	No 2 air conditioning control assembly	- Rear panel indication signal - AUTO indication signal - MODE indication signal - Blower level indication signal - Rear seat RH side set temperature indication signal - Rear seat LH side set temperature indication signal	
Air conditioning control assembly*2	Air conditioning amplifier assembly	- Front A/C switch signal - AUTO switch signal - OFF switch signal - Blower switch signal (UP, DOWN) - MODE switch signal - DEF switch signal - 4 ONE switch signal*3 - 2 ONE switch signal - Micro dust and pollen filter switch signal - Driver seat set temperature switch signal - Front passenger seat set temperature switch signal - Rear seat RH side set temperature indication signal*3 - Rear seat LH side set temperature indication signal*3	LIN
No 2 Air conditioning control assembly		- OFF switch signal - AUTO switch signal - MODE switch signal - Blower switch signal (UP, DOWN) - Rear seat RH side set temperature switch signal*3 - Rear seat LH side set temperature switch signal*3	

HINT:


- **Multi-display**
- **o Multi-display**
- **for 4- ONE Type**

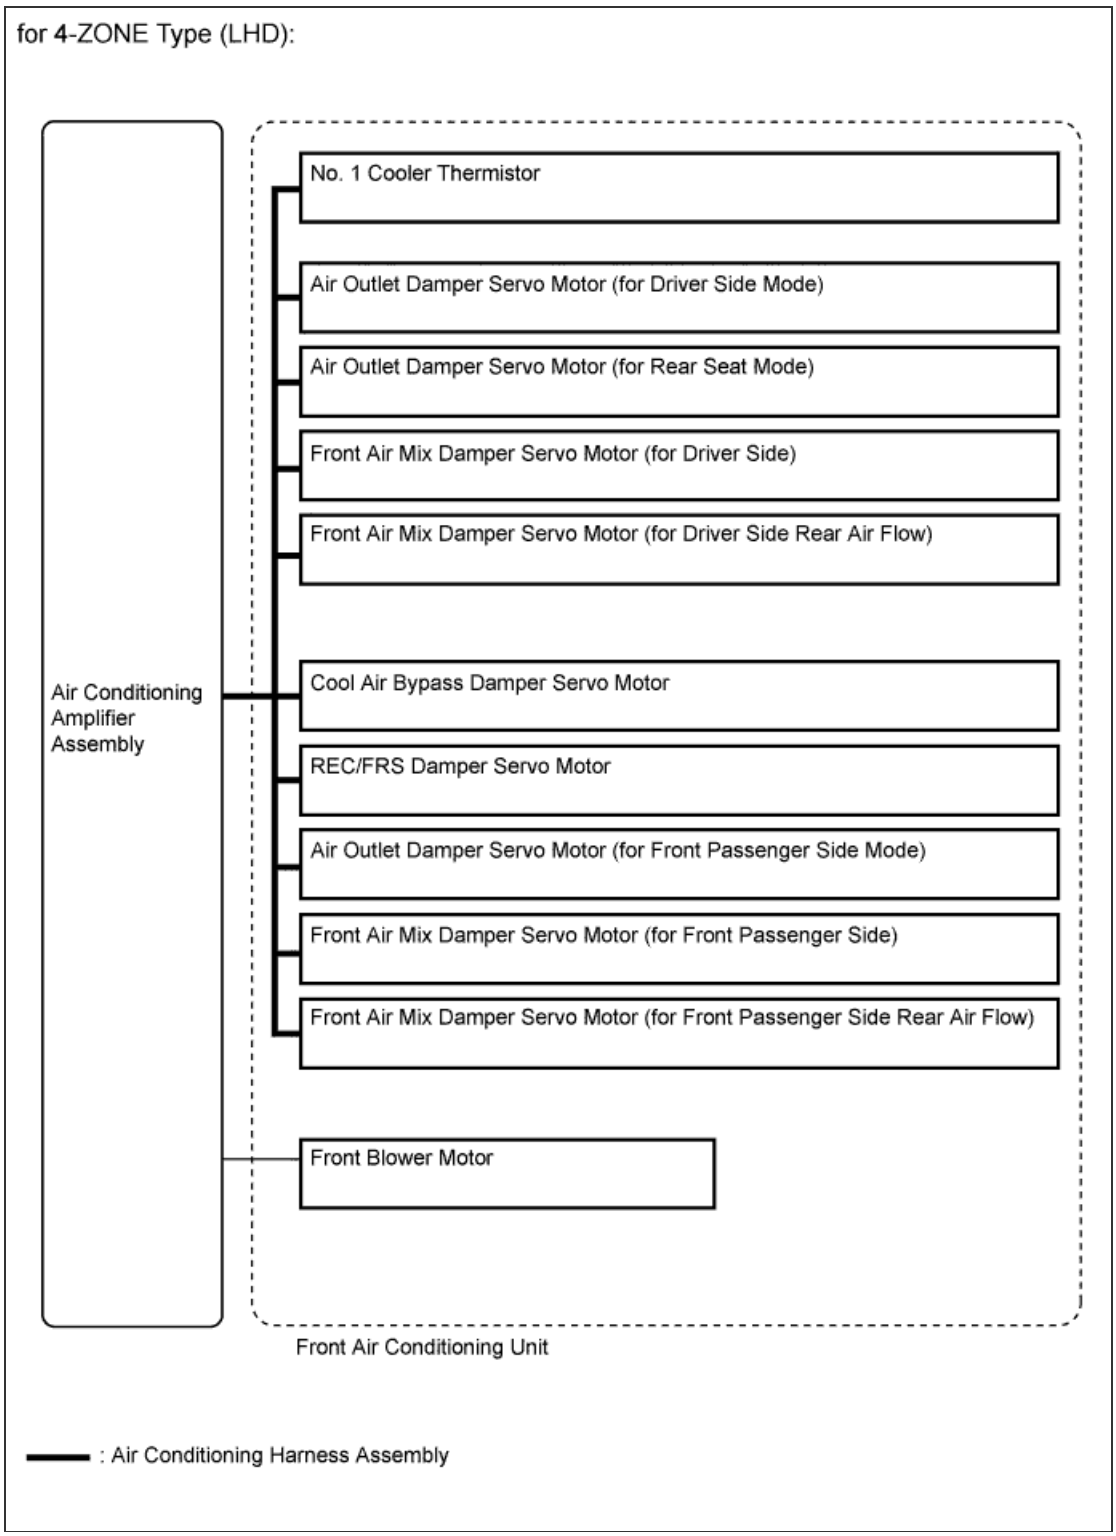

for 2-ZONE Type (LHD):

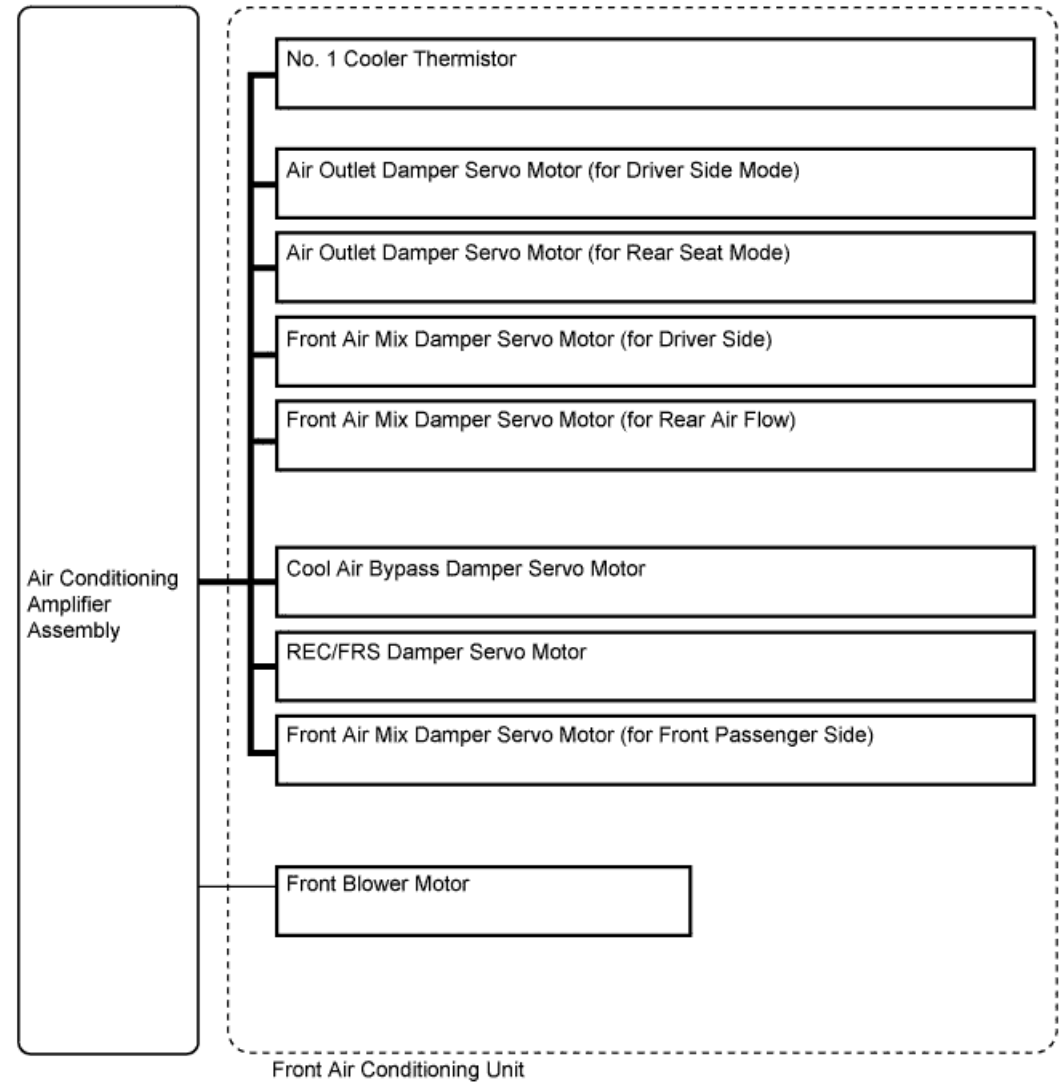


for 2-ZONE Type (LHD, w/o Rear Air Duct):

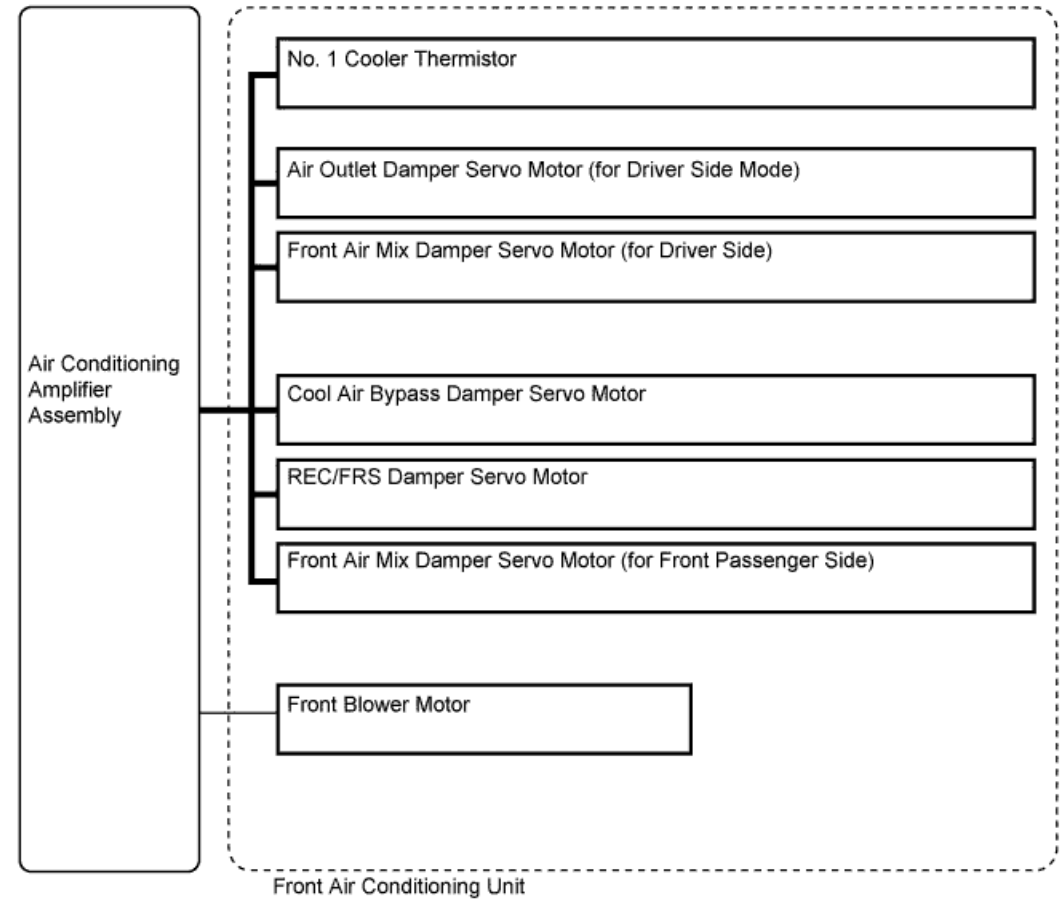


: Air Conditioning Harness Assembly


for 4-ZONE Type (RHD):

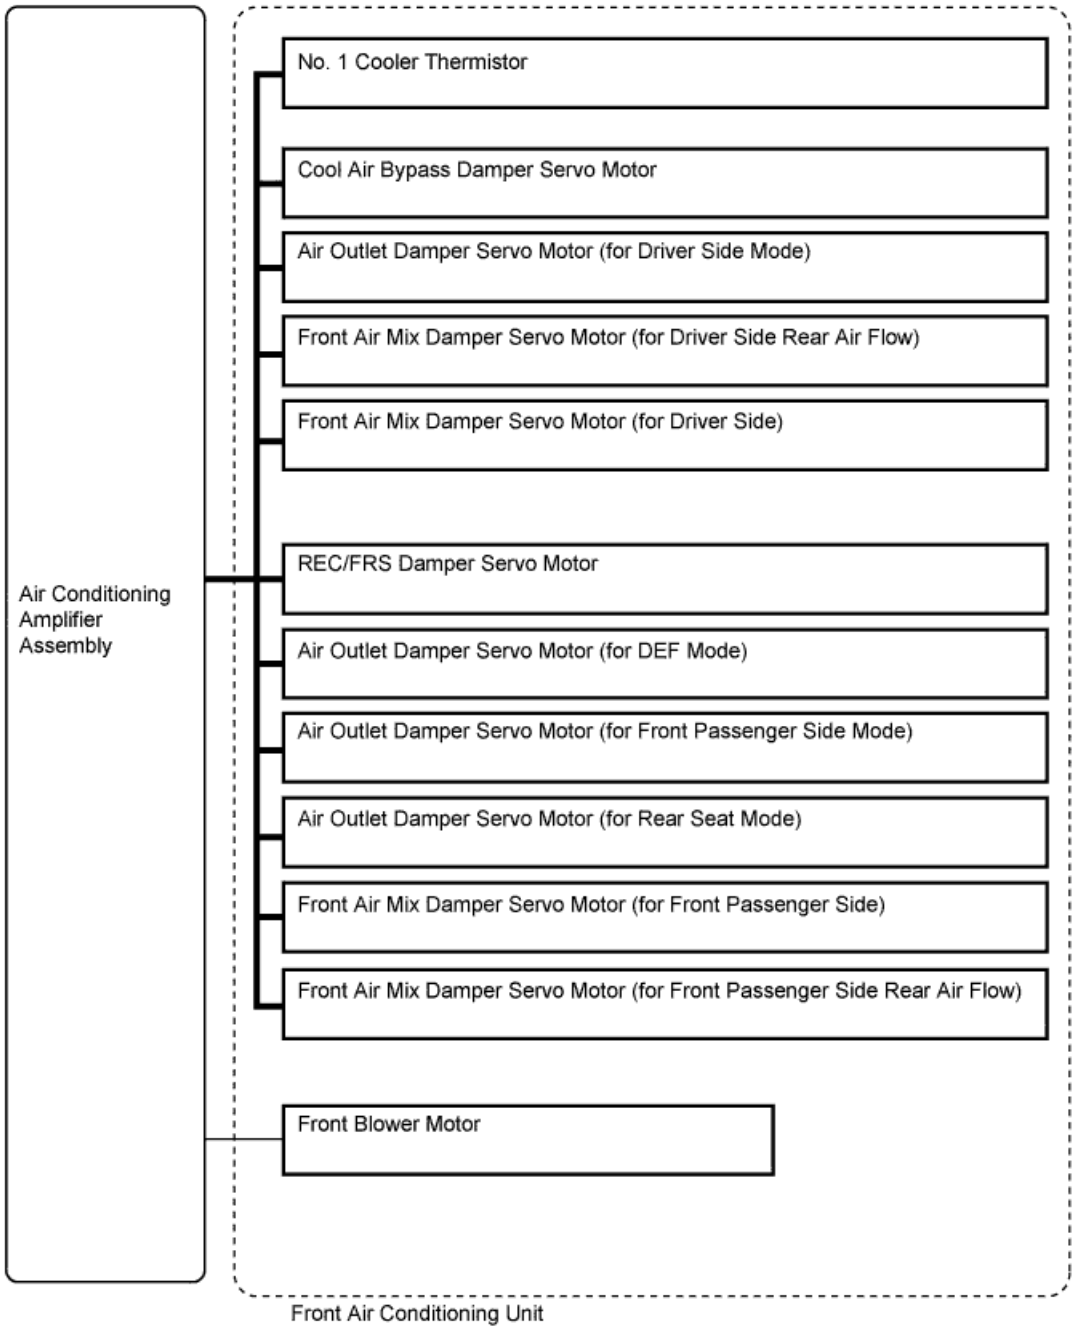


for 2-ZONE Type (RHD):

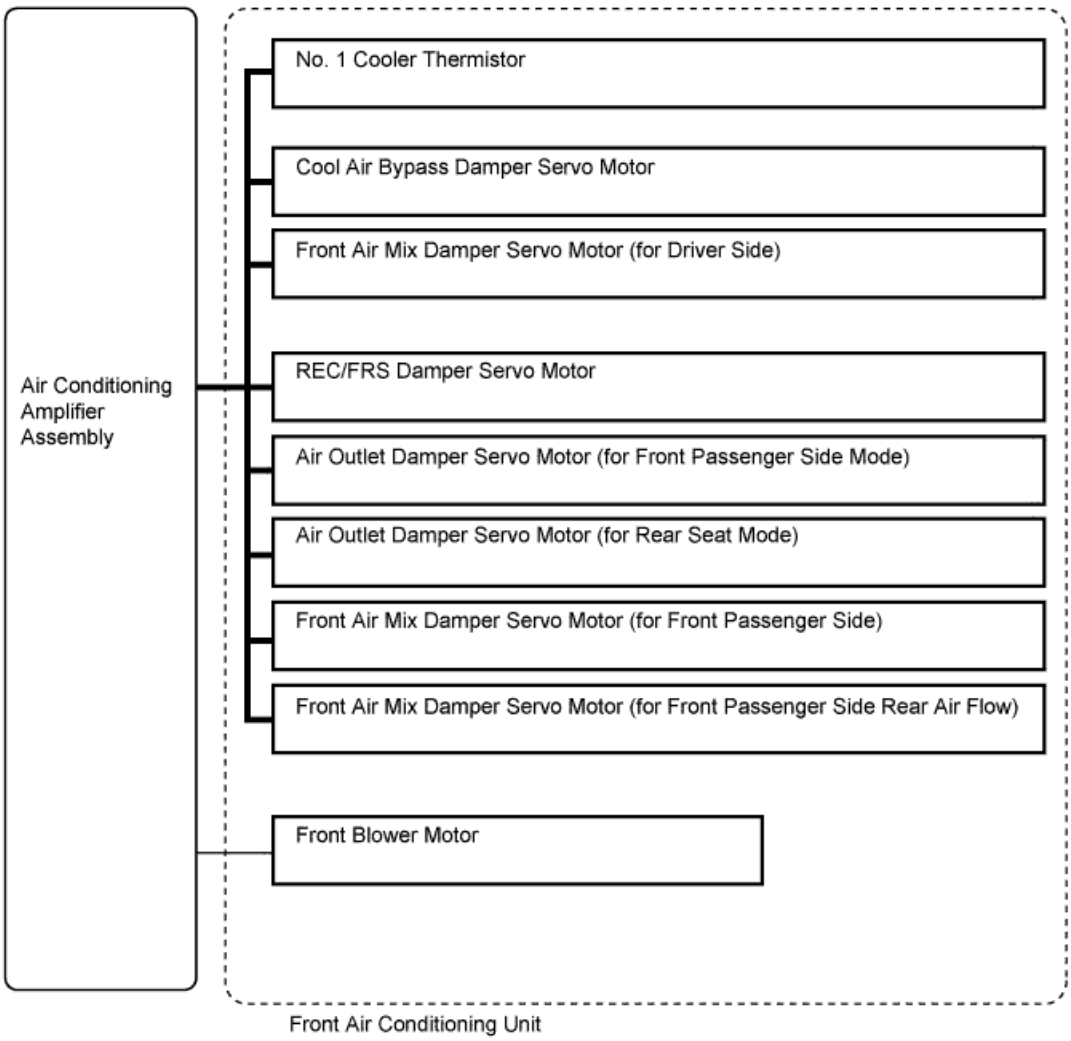

w/ Rear Heater:

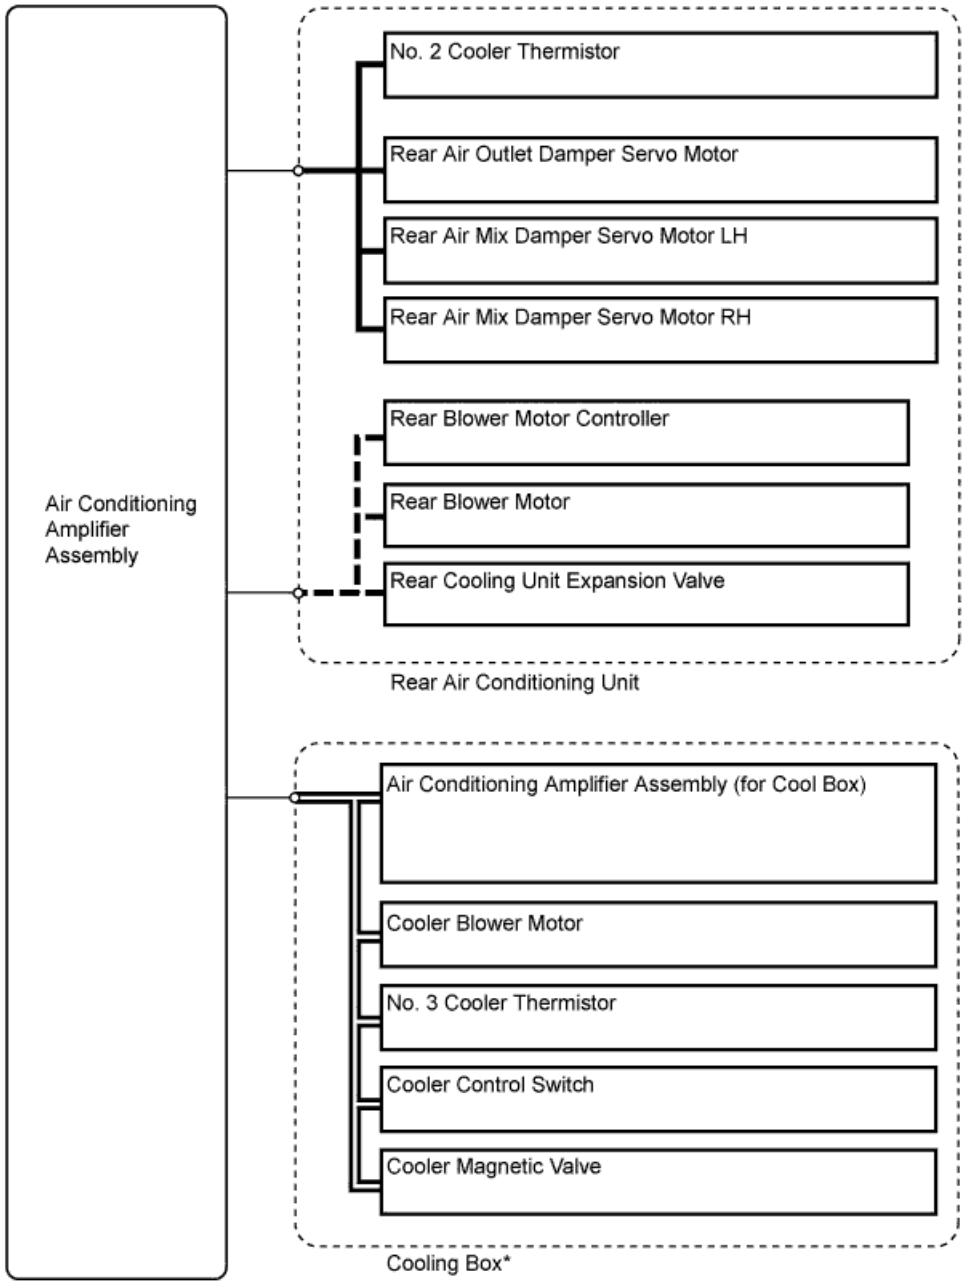


w/o Rear Heater:

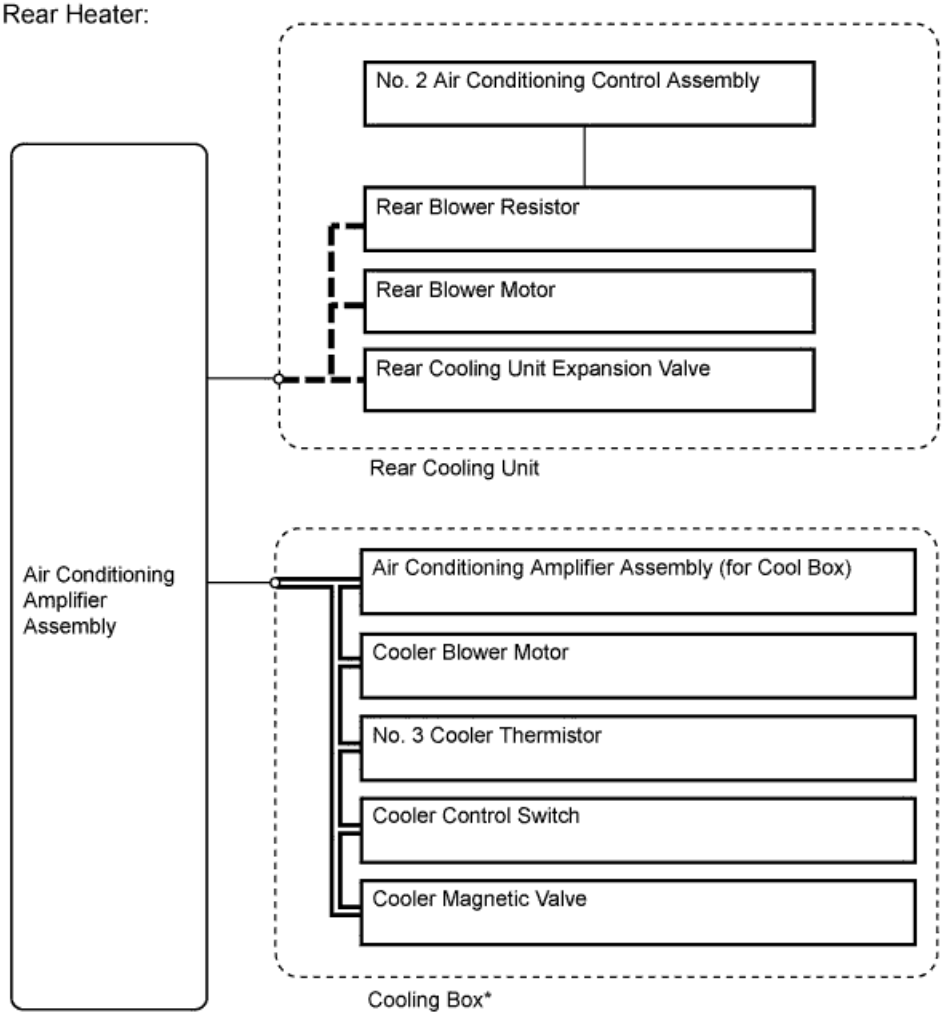

▬▬▬ : Wiring Air Conditioning Harness Sub-assembly

═══ : No. 1 Cooler Wiring Harness Sub-assembly


*: w/ Cooling Box

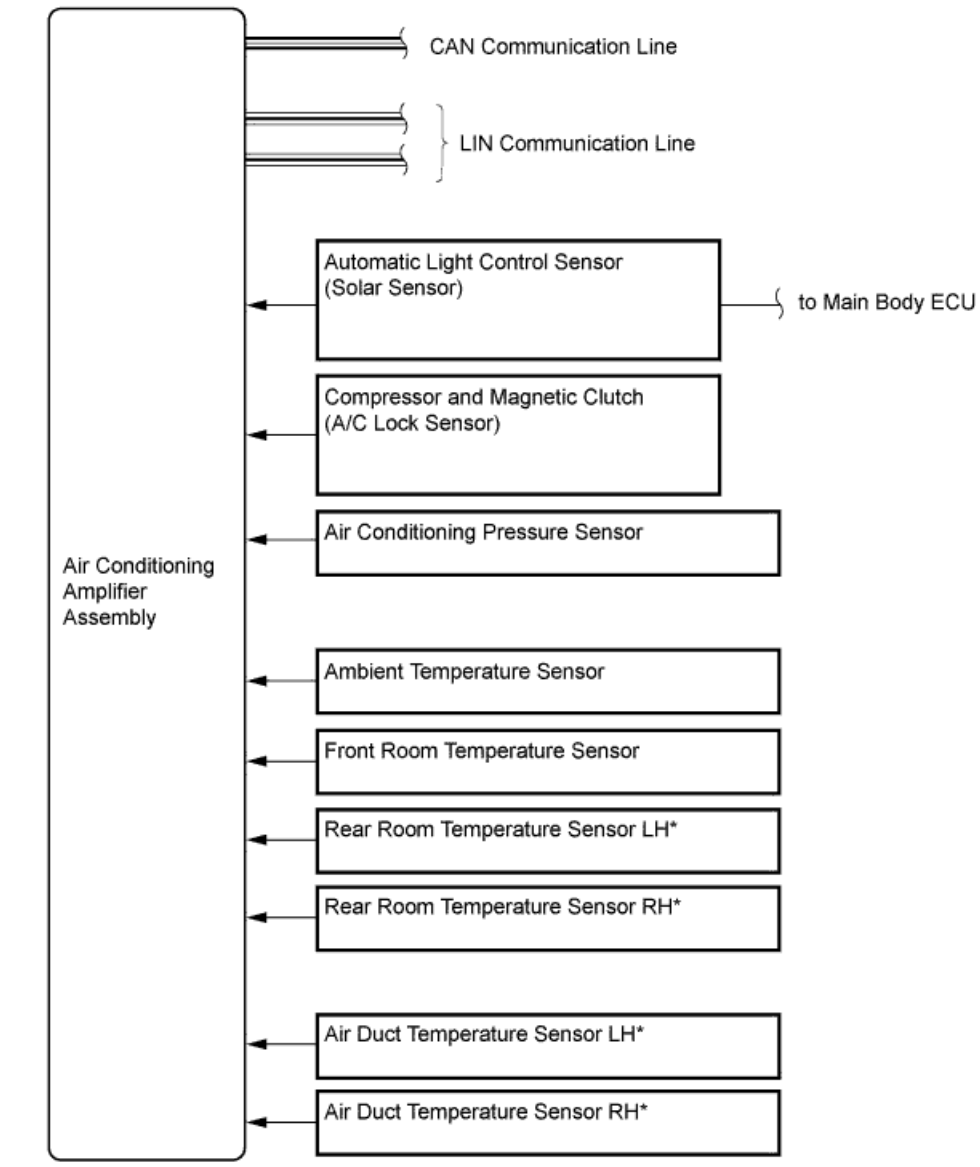

*: for 4-ZONE Type

: CAN Communication Line

: LIN Communication Line

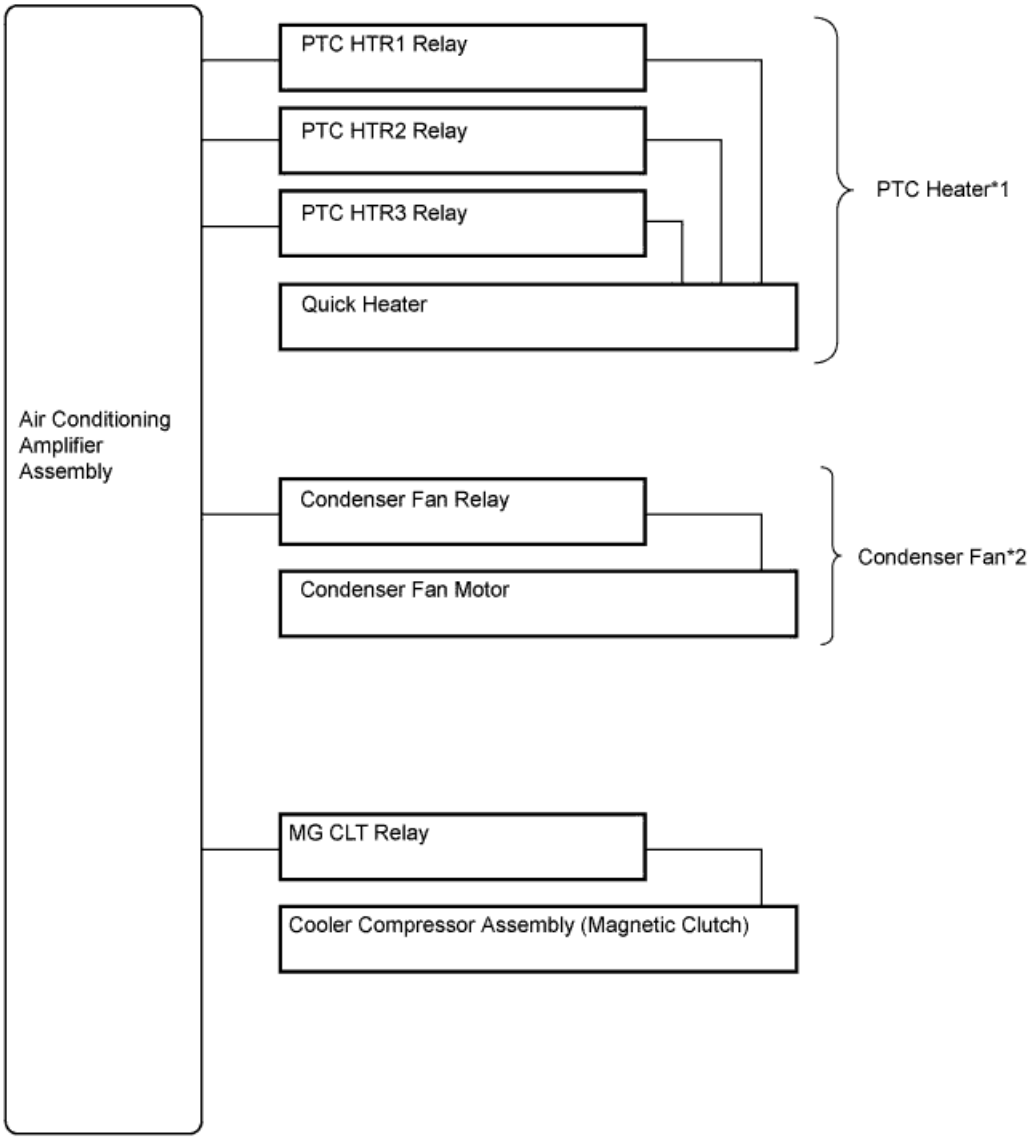

*1: w/ PTC Heater

*2: w/ Condenser Fan

for Preparation Click here


GENERAL

a. The air conditioning system has the following features:

- The 4-ZONE air conditioner system controls the temperature of the front and rear seats independently. In addition, it uses the amount of sunlight and temperature of each seat to adjust the temperature and airflow volume. When the 4-ZONE switch is on, the temperature, the airflow mode and airflow volume of each of the 4 seats (driver, front passenger, rear left, rear right) are automatically adjusted.
- The 2-ZONE air conditioner system controls the temperature of the left and right seats independently, and sets the temperature for the driver seat and front passenger seat. In addition, it uses the amount of sunlight and temperature of the left and right seats to adjust the temperature and airflow volume.
  When the 2-ZONE switch is on, the temperature, airflow mode and airflow volume of the driver seat and front passenger seat are automatically adjusted.
- In accordance with the temperature set using the temperature control switch, the air conditioning amplifier assembly determines the outlet temperature based on the input signals from various sensors. In addition, corrections are made in accordance with the signals from the water temperature sensor to control the outlet air temperature.
- Controls the blower motor in accordance with the airflow volume determined by the air conditioning amplifier assembly based on the input signals from various sensors.
- Automatically changes the outlets in accordance with the outlet mode ratio that is determined by the air conditioning amplifier assembly based on the input signals from various sensors.
- Based on the signals from the ambient temperature sensor, this system calculates the outside temperature and indicates it in the multi-information display in the combination meter.
- For vehicles with the rear air conditioner, there are rear side and roof side air ducts, and independent temperature and airflow mode adjustments are automatically performed.
- The Positive Temperature Coefficient (PTC) heater system contains a PTC heater that heats the air that has passed through the heater core to ensure proper heater performance.
- A compact, lightweight, and highly efficient straight flow (full-path flow) aluminum heater core is used.
- The micro dust and pollen filter control is used to remove pollen in the air around the upper areas of the driver and front passenger seats.
- The air conditioning amplifier assembly is equipped with a self diagnosis function. If there is a malfunction in the system, it stores the DTCs (Diagnostic Trouble Codes) in its memory.

MODE POSITION AND DAMPER OPERATION

for Front Air Conditioning:

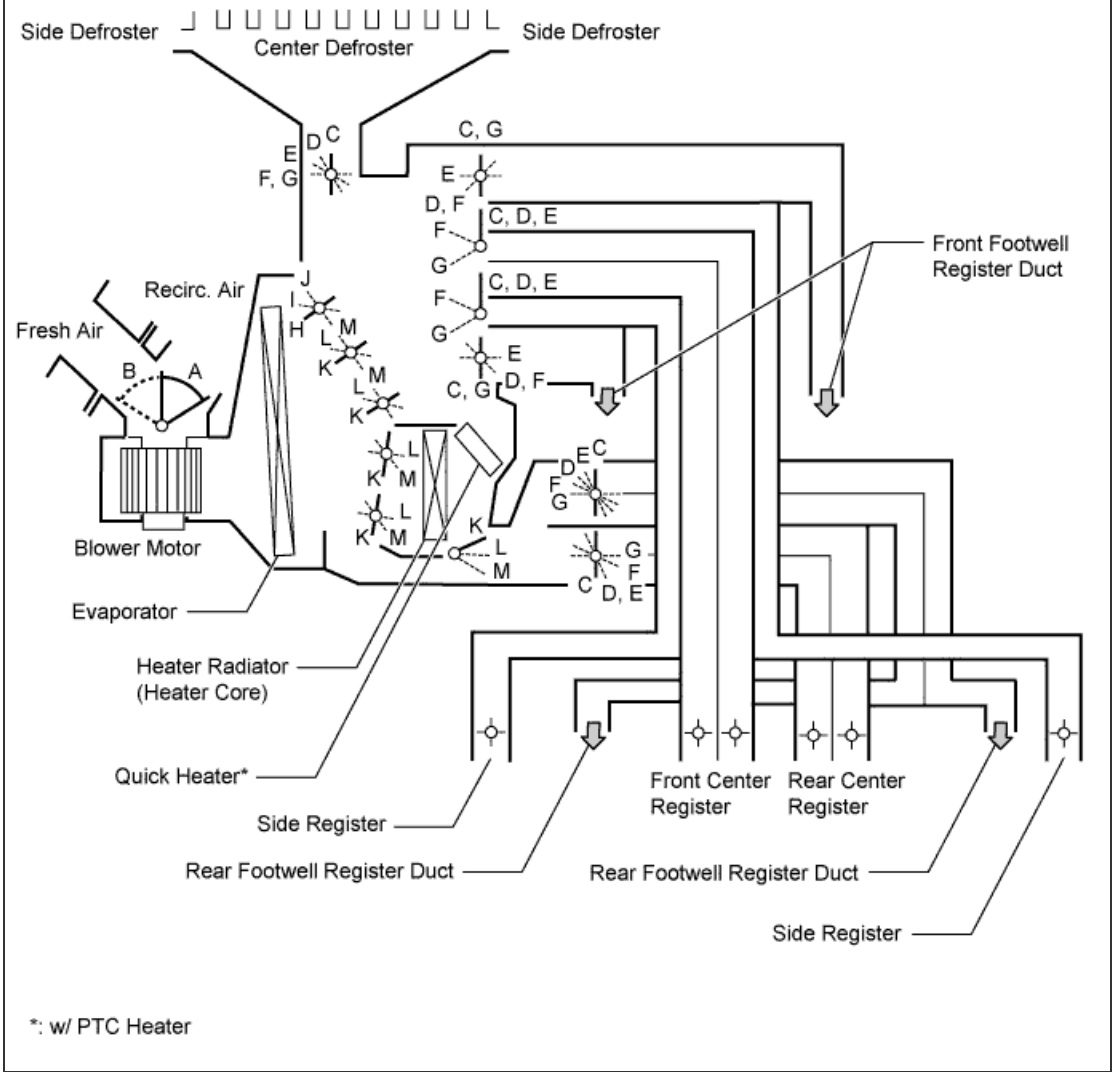


Function of Main Damper

Control Damper	Operation Position	Damper Position	Operation
Air Inlet Control Damper	Fresh	A	Brings in fresh air.
	Recirculation	B	Recirculates internal air.
Air Mix Control Damper	Max Cool to Max Hot	K, L, M	Varies the mixture ratio of cold air and hot air in order to regulate the temperature continuously from hot to cool.
Cool Air Bypass Control Damper	Max Cool to Max Hot	H, I, J	Cool air blows out from the front center register and side registers in order to adjust the temperature around the heads of the occupants during cooling or warming.
Mode Control Damper	Def	C	Defrosts the windshield through the center defroster.
	Foot/Def	D	Defrosts the windshield through the center defroster and side defroster while air is also blown out from the front and rear footwell register ducts. In addition, air blows out slightly from the front and rear center registers and side register.
	Foot	E	Air blows out of the front and rear footwell register duct, front and rear center register and side register. In addition, air blows out slightly from the center defroster and side defroster.
	Bi - Level	F	Air blows out of the center registers, side register, and rear center register to defrost the windshield. Air also blows out from the front and rear footwell register ducts.
		G	Air blows out of the center registers and side registers to defrost the windshield.

	Face		

for Rear Air Conditioning System:

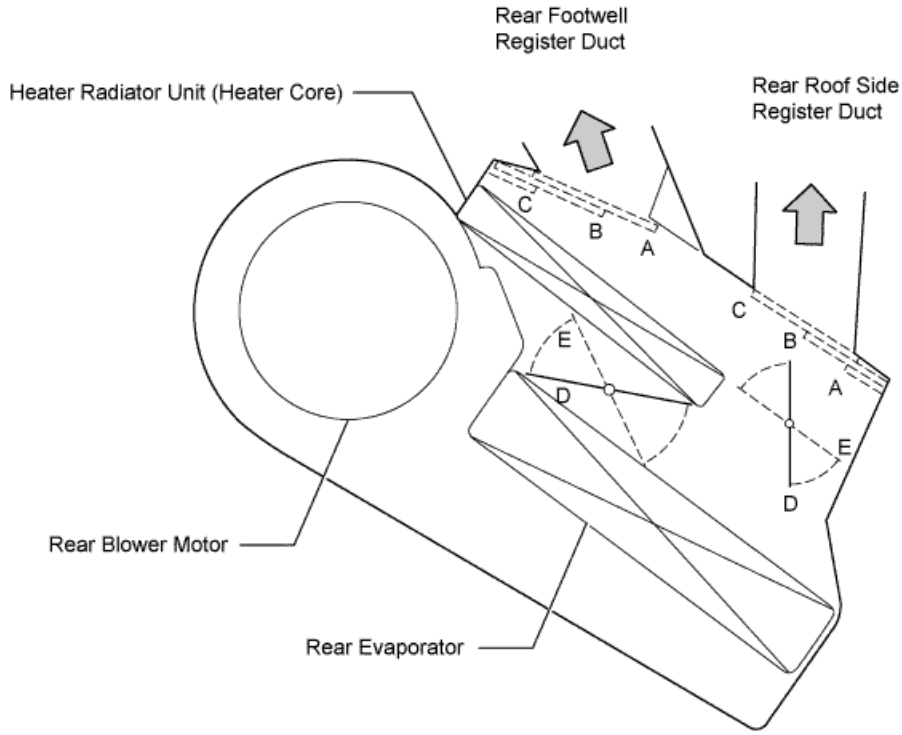


Function of Main Damper

Control Damper	Operation Position	Damper Position	Operation
Mode Control Damper	Face	A	Air blows out of the rear roof side register.
	Bi - Level	B	Air blows out of the rear roof side register and rear footwell register.
	Foot	C	Air blows out of the rear footwell register.
Air Mix Control Damper	Max Cool to Max Hot	D, E	Varies the mixture ratio of cold air and hot air in order to regulate the temperature continuously from hot to cool.

AIR OUTLETS AND AIRFLOW VOLUME

for Front Air Conditioning System:

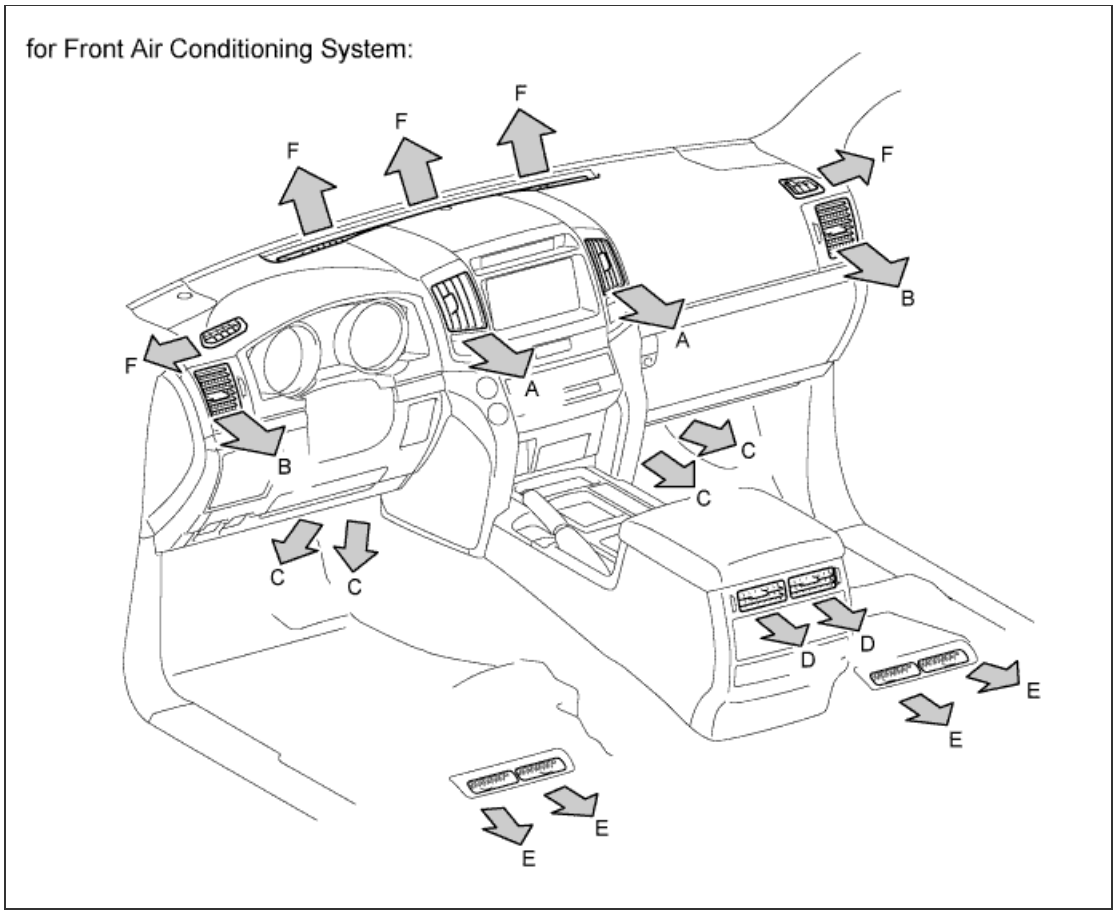


Air Outlet Mode		Selectable Mode		Register		Register Duct			Defroster
		Automatic	Manual	Center	Side	Front Foot	Rear Face	Rear Foot	
				A	B	C	D	E	F
	FACE-U*1	○	○	◯	◯	-	◯	-	-
	FACE-L*2, *6	○	-	◯	◯	○	◯	-	-
	B/L-U*1	○	○	◯	◯	○	○	○	-
	B/L*2	○	-	◯	◯	◯	○	○	-
	FOOT F*3	○	-	○	○	◯	○	○	○
	FOOT R*4	○	○	○	○	◯	○	◯	○
	FOOT D*5	○	-	○	○	◯	○	◯	○
	F/D	○	○	○	○	◯	○	○	◯
	DEF	○	○	-	-	-	-	-	◯

HINT:

- **The si e of the circle in icates the proportion of airflow volume.**
- **: Greater airflow volume at the upper area.**
- **: Greater airflow volume at the lower area.**

- **: Greater airflow volume at the front.**
- **: Greater airflow volume at the rear foot.**
- **: Greater airflow volume at the efroster.**
- **: In contrast to FACE-U, a small amount of air comes out of the front footwell register uct.**

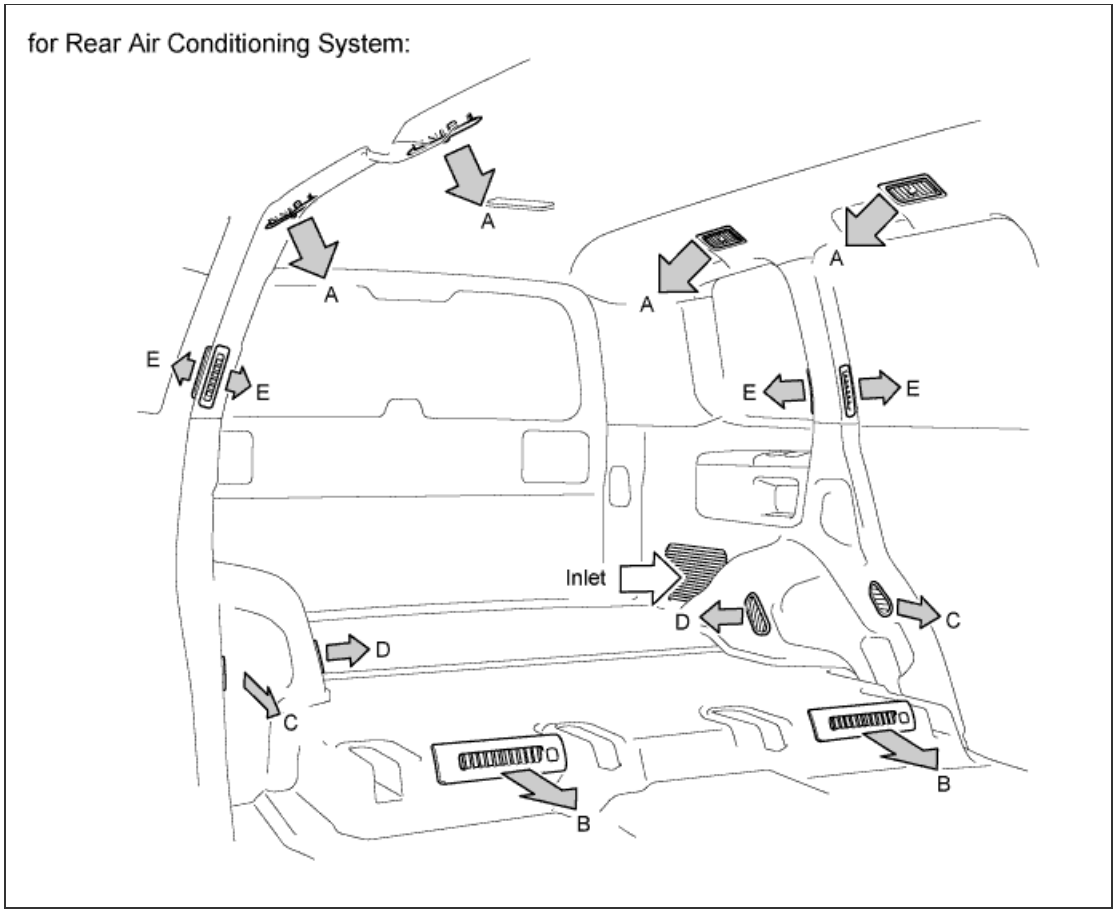

Air Outlet Mode		Register Duct				
		Roof	Rear Foot 1	Rear Side 2	Rear Foot 2	C Pillar
		A	B	C	D	E
	FACE	○	-	-	-	-
	BI-LEVEL	○	○	○	○	○
	FOOT	-	○	○	○	○

HINT:

The size of the circle indicates the proportion of airflow volume.

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the air conditioning system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B. GO TO CAN COMMUNICATION SYSTEM (Click here)

C. GO TO CAN COMMUNICATION SYSTEM (Click here)

A

4.CHECK COMMUNICATION FUNCTION OF LIN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the LIN communication system is functioning normally.

Result

Result	Proceed to
LIN DTC is not output	A
LIN DTC is output	B

B. GO TO LIN COMMUNICATION SYSTEM (Click here)

A

5.CHECK FOR DTC*

a. Check for DTCs (Click here).

b. Clear the DTC (Click here).

c. Based on the DTCs output above, try to force output of the air conditioning system DTC by simulating the conditions indicated by the DTC. Then recheck for DTCs.

Result

Result	Proceed to
DTC is not output	A
DTC is output	B

B. → GO TO DTC CHART (Click here)

A

6.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → GO TO STEP 8

A

7.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of ECU (Click here)

b. Data List/Active Test (Click here)

c. Actuator Check (Click here)

d. On-vehicle Inspection

e. Inspection

NEXT

8.AD UST REPAIR OR REPLACE

NEXT

CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the air conditioning system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B. GO TO CAN COMMUNICATION SYSTEM (Click here)

C. GO TO CAN COMMUNICATION SYSTEM (Click here)

A

4.CHECK COMMUNICATION FUNCTION OF LIN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the LIN communication system is functioning normally.

Result

Result	Proceed to
LIN DTC is not output	A
LIN DTC is output	B

B. GO TO LIN COMMUNICATION SYSTEM (Click here)

A

5.CHECK FOR DTC*

a. Check for DTCs (Click here).

b. Clear the DTC (Click here).

c. Based on the DTCs output above, try to force output of the air conditioning system DTC by simulating the conditions indicated by the DTC. Then recheck for DTCs.

Result

Result	Proceed to
DTC is not output	A
DTC is output	B

B. → GO TO DTC CHART (Click here)

A

6.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → GO TO STEP 8

A

7.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of ECU (Click here)

b. Data List/Active Test (Click here)

c. Actuator Check (Click here)

d. On-vehicle Inspection

e. Inspection

NEXT

8.AD UST REPAIR OR REPLACE

NEXT

CONFIRMATION TEST

NEXT

END

for Preparation Click here

HINT:

- **Use these procedures to troubleshoot the air conditioning system.**
- ***: Use the intelligent tester.**

1.VEHICLE BROUGHT TO WORKSHOP

NEXT

2.INSPECT BATTERY VOLTAGE

Standard Voltage:
11 to 14 V

If the voltage is below 11 V, recharge or replace the battery before proceeding.

NEXT

3.CHECK COMMUNICATION FUNCTION OF CAN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B. GO TO CAN COMMUNICATION SYSTEM (Click here)

C. GO TO CAN COMMUNICATION SYSTEM (Click here)

A

4.CHECK COMMUNICATION FUNCTION OF LIN COMMUNICATION SYSTEM*

a. Use the intelligent tester to check if the LIN communication system is functioning normally.

Result

Result	Proceed to
LIN DTC is not output	A
LIN DTC is output	B

B. GO TO LIN COMMUNICATION SYSTEM (Click here)

A

5.CHECK FOR DTC*

a. Check for DTCs (Click here).

b. Clear the DTC (Click here).

c. Based on the DTCs output above, try to force output of the air conditioning system DTC by simulating the conditions indicated by the DTC. Then recheck for DTCs.

Result

Result	Proceed to
DTC is not output	A
DTC is output	B

B. → GO TO DTC CHART (Click here)

A

6.PROBLEM SYMPTOMS TABLE

a. Refer to the Problem Symptoms Table (Click here).

Result

Result	Proceed to
Fault is not listed in problem symptoms table	A
Fault is listed in problem symptoms table	B

B. → GO TO STEP 8

A

7.OVERALL ANALYSIS AND TROUBLESHOOTING*

a. Terminals of ECU (Click here)

b. Data List/Active Test (Click here)

c. Actuator Check (Click here)

d. On-vehicle Inspection

e. Inspection

NEXT

8.AD UST REPAIR OR REPLACE

NEXT

CONFIRMATION TEST

NEXT

END

for Preparation Click here

CUSTOMIZING FUNCTION WITH INTELLIGENT TESTER (REFERENCE)

NOTICE:

- **When the customer requests a change in a function, first make sure that the function can be customized.**
- **Be sure to make a note of the current settings before customizing.**
- **When troubleshooting a function, first make sure that the function is set to the default setting.**

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Customize Setting.

e. Select the setting by referring to the table below.

Air Conditioner

Display	Default	Contents	Setting
Set Temperature Shift	Normal	Function to set the temperature shift.	+2 C/+1 C/Normal/-1 C/-2 C
Compressor/Air Inlet DEF operation	Link	Function to automatically turn the A/C on when the FRONT DEF button is pressed.	Normal/Link
Compressor Mode	Automatic	Function to turn the A/C on automatically by pressing the AUTO button when the blower is on and the A/C is off.	Manual/Automatic
Air Inlet Mode	Automatic	Function to automatically change to recirculation mode when the A/C is turned on.	Manual/Automatic
Foot/DEF Auto Mode	ON	Function to turn the airflow from FOOT/DEF on automatically when auto mode is on.	ON/OFF
Foot/DEF Automatic Blow Up Function	ON	Function to change the blower level automatically when the defroster is on.	ON/OFF
Ambient Temperature Shift	Normal	Function to control the shifted ambient temperature in relation to the displayed ambient temperature.	+3 C/+2 C/+1 C/Normal/-1 C/-2 C/-3 C
Button Press Buzzer	ON	Function to sound a buzzer when a button is pressed.	ON/OFF
Add Foot Air in FACE Mode	ON	When the FACE mode is selected an additional amount of air blow to the foot area. Selecting OFF will cancel this additional air flow.	ON/OFF

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to this system before inspecting the suspected areas below.**

Front Air Conditioning Unit

Symptom	Suspected Area	See page
All functions of A/C system do not operate	Harness or connector	-
	IG power source circuit	Click here
	Back-up power source circuit	Click here
	Air conditioning control assembly*1	Click here
	Multi-display*2	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: No blower operation	Harness or connector	-
	Blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: Insufficient air flow	Blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Temperature Control: No cool air comes out	olume of refrigerant	Click here
	Refrigerant pressure	Click here
	Cooler compressor assembly	Click here
	Pressure sensor circuit	Click here
	Front air mi damper servo motor (for driver side)	Click here
	Front air mi damper servo motor (for driver side rear air flow)	Click here
	Front air mi damper servo motor (for front passenger side)	Click here
	Front air mi damper servo motor (for passenger side rear air flow)	Click here
	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Solar sensor circuit (for driver side)	Click here
	Solar sensor circuit (for passenger side)	Click here
	Ambient temperature sensor circuit	Click here

	vaporator temperature sensor circuit	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LH)	Click here
	CAN communication line (for RH	Click here
Temperature Control: No warm air comes out	Front air mi damper servo motor (for driver side)	Click here
	Front air mi damper servo motor (for driver side rear air flow)	Click here
	Front air mi damper servo motor (for front passenger side)	Click here
	Front air mi damper servo motor (for passenger side rear air flow)	Click here
	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Solar sensor circuit (for driver side)	Click here
	Solar sensor circuit (for passenger side)	Click here
	Ambient temperature sensor circuit	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LH	Click here
	CAN communication line (for RH	Click here
Temperature Control: Output air is warmer or cooler than the set temperature or response is slow	olume of refrigerant	Click here
	Refrigerant pressure	Click here
	Front air mi damper servo motor (for driver side)	Click here
	Front air mi damper servo motor (for driver side rear air flow)	Click here
	Front air mi damper servo motor (for front passenger side)	Click here
	Front air mi damper servo motor (for passenger side rear air flow)	Click here
	R C/FRS damper servo motor	Click here
	Cool air bypass damper servo motor	Click here
	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Solar sensor circuit (for driver side)	Click here
	Solar sensor circuit (for passenger side)	Click here
		Click

	Ambient temperature sensor circuit	here
	Cooler compressor assembly	Click here
	Heater radiator	-
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LH	Click here
	CAN communication line (for RH	Click here
Temperature Control: No temperature control (only Ma cool or Ma warm)	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Ambient temperature sensor circuit	Click here
	Cool air bypass damper servo motor	Click here
	Front air mi damper servo motor (for driver side)	Click here
	Front air mi damper servo motor (for driver side rear air flow)	Click here
	Front air mi damper servo motor (for front passenger side)	Click here
	Front air mi damper servo motor (for passenger side rear air flow)	Click here
	Air conditioning control assembly*1	Click here
	Multi-display*2	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LH	Click here
	CAN communication line (for RH	Click here
PTC heater does not operate*3	PTC heater circuit	Click here
	Air conditioning amplifier assembly	Click here
No airflow mode control	Air outlet damper servo motor (for driver side mode)	Click here
	Air outlet damper servo motor (for passenger side mode)	Click here
	Air outlet damper servo motor (for rear seat mode)	Click here
	Air outlet damper servo motor (for F mode)*5, *6	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
Blinking of A/C indicator	Air conditioning control assembly*1	Click here
	Multi-display*2	Click here
	Air conditioning amplifier assembly	Click here
		Click

	CAN communication line (for LH	here
	CAN communication line (for RH	Click here
iagnostic trouble codes are not stored Set mode is cleared when engine switch is turned OFF	Back-up power source circuit	Click here
	Air conditioning amplifier assembly	Click here

Rear Air Conditioning Unit

Symptom	Suspected Area	See page
All functions of A/C system do not operate	Harness or connector	-
	IG power source circuit	Click here
	Back-up power source circuit	Click here
	No 2 air conditioning control assembly	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: No blower operation	Rear blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: Insufficient air flow	Rear blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Temperature Control: No cool air comes out	olume of refrigerant	Click here
	Refrigerant pressure	Click here
	Cooler compressor assembly	Click here
	Pressure sensor circuit	Click here
	Rear air mi damper servo motor (for driver side)*5	Click here
	Rear air mi damper servo motor (for passenger side)*5	Click here
	Rear room temperature sensor (for driver side)*5	Click here
	Rear room temperature sensor (for passenger side)*5	Click here
	Ambient temperature sensor circuit	Click here
	aporator temperature sensor circuit	Click here
	Rear evaporator temperature sensor circuit*5	Click here
	Rear magnetic valve circuit	Click here
	No 2 air conditioning harness assembly	-
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LH *5	Click here
	CAN communication line (for RH *5	Click here
Temperature Control: No warm air comes out*5	Rear air mi damper servo motor (for driver side)	Click here
	Rear air mi damper servo motor (for passenger side)	Click here
	Rear room temperature sensor (for driver side)	Click here
	Rear room temperature sensor (for passenger side)	Click here
	Ambient temperature sensor circuit	Click here
	No 2 air conditioning harness assembly	Click here
	Air duct temperature sensor (for driver side)	Click here
	Air duct temperature sensor (for passenger side)	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LH	Click here
	CAN communication line (for RH	Click here

Rear Cooling Unit

Symptom	Suspected Area	See page
All functions of A/C system do not operate	Harness or connector	-
	IG power source circuit	Click here
	Back-up power source circuit	Click here
	No 2 air conditioning control assembly	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: No blower operation	Rear blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: Insufficient air flow	Rear blower motor circuit	Click here

	Air conditioning amplifier assembly	Click here
Temperature Control: No cool air comes out	olume of refrigerant	Click here
	Refrigerant pressure	Click here
	Cooler compressor assembly	Click here
	Pressure sensor circuit	Click here
	Ambient temperature sensor circuit	Click here
	aporator temperature sensor circuit	Click here
	Rear magnetic valve circuit	Click here
	No 2 air conditioning harness assembly	-
	Air conditioning amplifier assembly	Click here

Cooling Box

Symptom	Suspected Area	See page
Cooling bo malfunction*4	Cooling bo magnetic valve circuit	Click here
	Cooling bo blower motor circuit	Click here
	Cooling bo control switch circuit	Click here
	Cooling bo sensor circuit	Click here
	Air conditioning amplifier assembly (for cool bo	-
	No 1 cooler wiring harness sub-assembly	-
	Noise filter (built into cooling bo unit)	-
	Fuse (built into cooling bo unit)	-

HINT:

*1: w/o Multi-display

*2: w/ Multi-display

*3: w/ PTC Heater

*4: w/ Cooling Bo

*5: for 4-ZON Type

*6: for RH

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to this system before inspecting the suspected areas below.**

Front Air Conditioning Unit

Symptom	Suspected Area	See page
All functions of A/C system do not operate	Harness or connector	-
	IG power source circuit	Click here
	Back-up power source circuit	Click here
	Air conditioning control assembly*1	Click here
	Display and Navigation Module Display*2	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: No blower operation	Harness or connector	-
	Blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: Insufficient air flow	Blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Temperature Control: No cool air comes out	Volume of refrigerant	Click here
	Refrigerant pressure	Click here
	Cooler compressor assembly	Click here
	Pressure sensor circuit	Click here
	Front air mix damper servo motor (for driver side)	Click here
	Front air mix damper servo motor (for driver side rear air flow)	Click here
	Front air mix damper servo motor (for front passenger side)	Click here
	Front air mix damper servo motor (for passenger side rear air flow)	Click here
	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Solar sensor circuit (for driver side)	Click here
	Solar sensor circuit (for passenger side)	Click here
	Ambient temperature sensor circuit	Click here

	Evaporator temperature sensor circuit	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)	Click here
	CAN communication line (for RHD)	Click here
Temperature Control: No warm air comes out	Front air mix damper servo motor (for driver side)	Click here
	Front air mix damper servo motor (for driver side rear air flow)	Click here
	Front air mix damper servo motor (for front passenger side)	Click here
	Front air mix damper servo motor (for passenger side rear air flow)	Click here
	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Solar sensor circuit (for driver side)	Click here
	Solar sensor circuit (for passenger side)	Click here
	Ambient temperature sensor circuit	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)	Click here
	CAN communication line (for RHD)	Click here
Temperature Control: Output air is warmer or cooler than the set temperature or response is slow	Volume of refrigerant	Click here
	Refrigerant pressure	Click here
	Front air mix damper servo motor (for driver side)	Click here
	Front air mix damper servo motor (for driver side rear air flow)	Click here
	Front air mix damper servo motor (for front passenger side)	Click here
	Front air mix damper servo motor (for passenger side rear air flow)	Click here
	REC/FRS damper servo motor	Click here
	Cool air bypass damper servo motor	Click here
	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Solar sensor circuit (for driver side)	Click here
	Solar sensor circuit (for passenger side)	Click here
		Click

	Ambient temperature sensor circuit	here
	Cooler compressor assembly	Click here
	Heater radiator	-
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)	Click here
	CAN communication line (for RHD)	Click here
Temperature Control: No temperature control (only Max cool or Max warm)	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Ambient temperature sensor circuit	Click here
	Cool air bypass damper servo motor	Click here
	Front air mix damper servo motor (for driver side)	Click here
	Front air mix damper servo motor (for driver side rear air flow)	Click here
	Front air mix damper servo motor (for front passenger side)	Click here
	Front air mix damper servo motor (for passenger side rear air flow)	Click here
	Air conditioning control assembly*1	Click here
	Display and Navigation Module Display*2	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)	Click here
	CAN communication line (for RHD)	Click here
PTC heater does not operate*3	PTC heater circuit	Click here
	Air conditioning amplifier assembly	Click here
No airflow mode control	Air outlet damper servo motor (for driver side mode)	Click here
	Air outlet damper servo motor (for passenger side mode)	Click here
	Air outlet damper servo motor (for rear seat mode)	Click here
	Air outlet damper servo motor (for DEF mode)*5, *6	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
Blinking of A/C indicator	Air conditioning control assembly*1	Click here
	Display and Navigation Module Display*2	Click here
	Air conditioning amplifier assembly	Click here
		Click

	CAN communication line (for LHD)	here
	CAN communication line (for RHD)	Click here
Diagnostic trouble codes are not stored Set mode is cleared when engine switch is turned OFF	Back-up power source circuit	Click here
	Air conditioning amplifier assembly	Click here

Rear Air Conditioning Unit

Symptom	Suspected Area	See page
All functions of A/C system do not operate	Harness or connector	-
	IG power source circuit	Click here
	Back-up power source circuit	Click here
	No 2 air conditioning control assembly	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: No blower operation	Rear blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: Insufficient air flow	Rear blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Temperature Control: No cool air comes out	Volume of refrigerant	Click here
	Refrigerant pressure	Click here
	Cooler compressor assembly	Click here
	Pressure sensor circuit	Click here
	Rear air mix damper servo motor (for driver side)*5	Click here
	Rear air mix damper servo motor (for passenger side)*5	Click here
	Rear room temperature sensor (for driver side)*5	Click here
	Rear room temperature sensor (for passenger side)*5	Click here
	Ambient temperature sensor circuit	Click here
	Evaporator temperature sensor circuit	Click here
	Rear evaporator temperature sensor circuit*5	Click here
	Rear magnetic valve circuit	Click here
	No 2 air conditioning harness assembly	-
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)*5	Click here
	CAN communication line (for RHD)*5	Click here
Temperature Control: No warm air comes out*5	Rear air mix damper servo motor (for driver side)	Click here
	Rear air mix damper servo motor (for passenger side)	Click here
	Rear room temperature sensor (for driver side)	Click here
	Rear room temperature sensor (for passenger side)	Click here
	Ambient temperature sensor circuit	Click here
	No 2 air conditioning harness assembly	Click here
	Air duct temperature sensor (for driver side)	Click here
	Air duct temperature sensor (for passenger side)	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)	Click here
	CAN communication line (for RHD)	Click here

Rear Cooling Unit

Symptom	Suspected Area	See page
All functions of A/C system do not operate	Harness or connector	-
	IG power source circuit	Click here
	Back-up power source circuit	Click here
	No 2 air conditioning control assembly	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: No blower operation	Rear blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: Insufficient air flow	Rear blower motor circuit	Click here

	Air conditioning amplifier assembly	Click here
Temperature Control: No cool air comes out	Volume of refrigerant	Click here
	Refrigerant pressure	Click here
	Cooler compressor assembly	Click here
	Pressure sensor circuit	Click here
	Ambient temperature sensor circuit	Click here
	Evaporator temperature sensor circuit	Click here
	Rear magnetic valve circuit	Click here
	No 2 air conditioning harness assembly	-
	Air conditioning amplifier assembly	Click here

Cooling Box

Symptom	Suspected Area	See page
Cooling box malfunction*4	Cooling box magnetic valve circuit	Click here
	Cooling box blower motor circuit	Click here
	Cooling box control switch circuit	Click here
	Cooling box sensor circuit	Click here
	Air conditioning amplifier assembly (for cool box)	-
	No 1 cooler wiring harness sub-assembly	-
	Noise filter (built into cooling box unit)	-
	Fuse (built into cooling box unit)	-

*1: w/o Navigation System
*2: w/ Navigation System
*3: w/ PTC Heater
*4: w/ Cooling Box
*5: for 4-ZONE Type
*6: for RHD

for Preparation Click here

HINT:

- **Use the table below to help determine the cause of problem symptoms. If multiple suspected areas are listed, the potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.**
- **Inspect the fuses and relays related to this system before inspecting the suspected areas below.**

Front Air Conditioning Unit

Symptom	Suspected Area	See page
All functions of A/C system do not operate	Harness or connector	-
	IG power source circuit	Click here
	Back-up power source circuit	Click here
	Air conditioning control assembly*1	Click here
	Display and Navigation Module Display*2	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: No blower operation	Harness or connector	-
	Blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: Insufficient air flow	Blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Temperature Control: No cool air comes out	Volume of refrigerant	Click here
	Refrigerant pressure	Click here
	Cooler compressor assembly	Click here
	Pressure sensor circuit	Click here
	Front air mix damper servo motor (for driver side)	Click here
	Front air mix damper servo motor (for driver side rear air flow)	Click here
	Front air mix damper servo motor (for front passenger side)	Click here
	Front air mix damper servo motor (for passenger side rear air flow)	Click here
	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Solar sensor circuit (for driver side)	Click here
	Solar sensor circuit (for passenger side)	Click here
	Ambient temperature sensor circuit	Click here

	Evaporator temperature sensor circuit	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)	Click here
	CAN communication line (for RHD)	Click here
Temperature Control: No warm air comes out	Front air mix damper servo motor (for driver side)	Click here
	Front air mix damper servo motor (for driver side rear air flow)	Click here
	Front air mix damper servo motor (for front passenger side)	Click here
	Front air mix damper servo motor (for passenger side rear air flow)	Click here
	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Solar sensor circuit (for driver side)	Click here
	Solar sensor circuit (for passenger side)	Click here
	Ambient temperature sensor circuit	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)	Click here
	CAN communication line (for RHD)	Click here
Temperature Control: Output air is warmer or cooler than the set temperature or response is slow	Volume of refrigerant	Click here
	Refrigerant pressure	Click here
	Front air mix damper servo motor (for driver side)	Click here
	Front air mix damper servo motor (for driver side rear air flow)	Click here
	Front air mix damper servo motor (for front passenger side)	Click here
	Front air mix damper servo motor (for passenger side rear air flow)	Click here
	REC/FRS damper servo motor	Click here
	Cool air bypass damper servo motor	Click here
	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Solar sensor circuit (for driver side)	Click here
	Solar sensor circuit (for passenger side)	Click here
		Click

	Ambient temperature sensor circuit	here
	Cooler compressor assembly	Click here
	Heater radiator	-
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)	Click here
	CAN communication line (for RHD)	Click here
Temperature Control: No temperature control (only Max cool or Max warm)	Room temperature sensor circuit	Click here
	Rear room temperature sensor circuit (for driver side)*5	Click here
	Rear room temperature sensor circuit (for passenger side)*5	Click here
	Ambient temperature sensor circuit	Click here
	Cool air bypass damper servo motor	Click here
	Front air mix damper servo motor (for driver side)	Click here
	Front air mix damper servo motor (for driver side rear air flow)	Click here
	Front air mix damper servo motor (for front passenger side)	Click here
	Front air mix damper servo motor (for passenger side rear air flow)	Click here
	Air conditioning control assembly*1	Click here
	Display and Navigation Module Display*2	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)	Click here
	CAN communication line (for RHD)	Click here
PTC heater does not operate*3	PTC heater circuit	Click here
	Air conditioning amplifier assembly	Click here
No airflow mode control	Air outlet damper servo motor (for driver side mode)	Click here
	Air outlet damper servo motor (for passenger side mode)	Click here
	Air outlet damper servo motor (for rear seat mode)	Click here
	Air outlet damper servo motor (for DEF mode)*5, *6	Click here
	Air conditioning harness assembly	Click here
	Air conditioning amplifier assembly	Click here
Blinking of A/C indicator	Air conditioning control assembly*1	Click here
	Display and Navigation Module Display*2	Click here
	Air conditioning amplifier assembly	Click here
		Click

	CAN communication line (for LHD)	here
	CAN communication line (for RHD)	Click here
Diagnostic trouble codes are not stored Set mode is cleared when engine switch is turned OFF	Back-up power source circuit	Click here
	Air conditioning amplifier assembly	Click here

Rear Air Conditioning Unit

Symptom	Suspected Area	See page
All functions of A/C system do not operate	Harness or connector	-
	IG power source circuit	Click here
	Back-up power source circuit	Click here
	No 2 air conditioning control assembly	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: No blower operation	Rear blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: Insufficient air flow	Rear blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Temperature Control: No cool air comes out	Volume of refrigerant	Click here
	Refrigerant pressure	Click here
	Cooler compressor assembly	Click here
	Pressure sensor circuit	Click here
	Rear air mix damper servo motor (for driver side)*5	Click here
	Rear air mix damper servo motor (for passenger side)*5	Click here
	Rear room temperature sensor (for driver side)*5	Click here
	Rear room temperature sensor (for passenger side)*5	Click here
	Ambient temperature sensor circuit	Click here
	Evaporator temperature sensor circuit	Click here
	Rear evaporator temperature sensor circuit*5	Click here
	Rear magnetic valve circuit	Click here
	No 2 air conditioning harness assembly	-
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)*5	Click here
	CAN communication line (for RHD)*5	Click here
Temperature Control: No warm air comes out*5	Rear air mix damper servo motor (for driver side)	Click here
	Rear air mix damper servo motor (for passenger side)	Click here
	Rear room temperature sensor (for driver side)	Click here
	Rear room temperature sensor (for passenger side)	Click here
	Ambient temperature sensor circuit	Click here
	No 2 air conditioning harness assembly	Click here
	Air duct temperature sensor (for driver side)	Click here
	Air duct temperature sensor (for passenger side)	Click here
	Air conditioning amplifier assembly	Click here
	CAN communication line (for LHD)	Click here
	CAN communication line (for RHD)	Click here

Rear Cooling Unit

Symptom	Suspected Area	See page
All functions of A/C system do not operate	Harness or connector	-
	IG power source circuit	Click here
	Back-up power source circuit	Click here
	No 2 air conditioning control assembly	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: No blower operation	Rear blower motor circuit	Click here
	Air conditioning amplifier assembly	Click here
Air Flow Control: Insufficient air flow	Rear blower motor circuit	Click here

	Air conditioning amplifier assembly	Click here
Temperature Control: No cool air comes out	Volume of refrigerant	Click here
	Refrigerant pressure	Click here
	Cooler compressor assembly	Click here
	Pressure sensor circuit	Click here
	Ambient temperature sensor circuit	Click here
	Evaporator temperature sensor circuit	Click here
	Rear magnetic valve circuit	Click here
	No 2 air conditioning harness assembly	-
	Air conditioning amplifier assembly	Click here


Cooling Box

Symptom	Suspected Area	See page
Cooling box malfunction*4	Cooling box magnetic valve circuit	Click here
	Cooling box blower motor circuit	Click here
	Cooling box control switch circuit	Click here
	Cooling box sensor circuit	Click here
	Air conditioning amplifier assembly (for cool box)	-
	No 1 cooler wiring harness sub-assembly	-
	Noise filter (built into cooling box unit)	-
	Fuse (built into cooling box unit)	-

*1: w/o Navigation System
*2: w/ Navigation System
*3: w/ PTC Heater
*4: w/ Cooling Box
*5: for 4-ZONE Type
*6: for RHD

for Preparation Click here

CHECK AIR CONDITIONING AMPLIFIER (w Rear Heater)

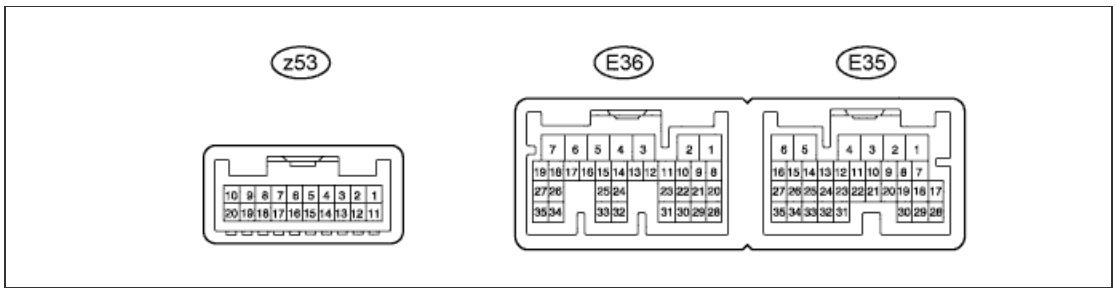

a. Disconnect the E36, E35 and z53 air conditioning amplifier assembly connectors.

. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E36-6 (+B1) - E36-1 (GND)	R - W-B	Battery power source	Always	11 to 14 V
E36-7 (+B2) - E36-1 (GND)	R - W-B	Battery power source	Always	11 to 14 V
z53-3 (B BUS) - z53-1 (BUS G)	-	Power supply for BUS IC (for front)	Always	11 to 14 V
z53-10 (B BUS) - z53-8 (BUS G)	-	Power supply for BUS IC (for front)	Always	11 to 14 V
E36-5 (IG+) - E36-1 (GND)	G - W-B	Ignition power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V
E36-14 (RBBU) - E36-12 (RBUG)	L - BR	Power supply for BUS IC (for rear)	Always	11 to 14 V
E35-25 (TR3) - Body ground	V - Body ground	Ground	Engine switch on (IG) Driver side duct sensor temperature: 25°C (77°F)	5000 +/-150 Ω
E35-26 (TR4) - Body ground	W - Body ground	Ground	Engine switch on (IG) Passenger side duct sensor temperature: 25°C (77°F)	5000 +/-150 Ω
E35-16 (SG-2) - Body ground	G - Body ground	Ground for pressure sensor	Always	Below 1 Ω
E35-29 (SG-5) - Body ground	G - Body ground	Ground for compressor signal	Always	Below 1 Ω
E36-2 (E1) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E36-1 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E35-6 (E2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E35-32 (SG-1) - Body ground	B - Body ground	Ground for room temperature sensor (for front)	Always	Below 1 Ω
z53-6 (SGA) - Body ground	-	Ground for evaporator temperature sensor	Always	Below 1 Ω
z53-1 (BUS G) - Body ground	-	Ground for BUS IC (for front)	Always	Below 1 Ω
z53-8 (BUS G) - Body ground	-	Ground for BUS IC (for front)	Always	Below 1 Ω
E35-34 (SGND) - Body ground	BR - Body ground	Ground for duct sensor (for driver side)	Always	Below 1 Ω
E35-12 (SG-9) - Body		Ground for duct sensor		

ground	L - Body ground	(for passenger side)	Always	Below 1 Ω
E35-2 (SG-6) - Body ground	G - Body ground	Ground for room temperature sensor signal (for Rear LH and Rear RH)	Always	Below 1 Ω
E36-12 (RBUG) - Body ground	BR - Body ground	Ground for BUS IC (for rear)	Always	Below 1 Ω
E35-1 (SG) - Body ground	P - Body ground	Ground for evaporator temperature sensor signal (for Rear)	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E36, E35 and z53 air conditioning amplifier assembly connectors.

d. Measure the voltage and waveform according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E36-25 (CFN+) - Body ground	R - Body ground	Condenser FAN operation signal	Engine switch on (IG)	11 to 14 V
E36-33 (COOL) - Body ground	W - Body ground	Cool box operation signal	Engine switch on (IG) Cool box switch: ON	11 to 14 V
E36-29 (AC1) - Body ground	L - Body ground	Compressor operation signal	Engine switch on (IG) A/C switch: OFF	11 to 14 V
			Engine switch on (IG) A/C switch: ON	Below 1 V
E36-22 (ACT) - Body ground	G - Body ground	Compressor operation signal	Engine switch on (IG) A/C switch: OFF	Below 1 V
			Engine switch on (IG) A/C switch: ON	11 to 14 V
E35-28 (LOCK) - E35-29 (SG-5)	L - G	Air compressor lock sensor signal	Engine idling A/C switch: ON Blower switch LO	Pulse generation (see waveform 1)
E35-10 (TAM) - E35-16 (SG-2)	V - G	Ambient temperature sensor signal	Engine switch on (IG) Ambient temperature: 25°C (77°F)	1.6 to 1.8 V
			Engine switch on (IG) Ambient temperature: 50°C (122°F)	0.5 to 0.7 V
E35-27 (S5-1) - E35-16 (SG-2)	LG - G	Power supply for pressure sensor	Engine switch on (IG)	4.5 to 5.5 V
E35-20 (PRE) - E35-16 (SG-2)	R - G	Air conditioning pressure sensor signal	Refrigerant pressure: Normal	1.0 to 4.8 V
			Refrigerant pressure: Abnormal (less than 0.392 MPa [4.0 kgf/cm^2, 57 psi])	Below 1 V
			Refrigerant pressure: Abnormal (less than 3.187 MPa [32.5 kgf/cm^2, 463 psi])	4.8 V or higher
E36-18 (MGC) - E36-1 (GND)	R - W-B	A/C compressor magnetic clutch operation signal	Engine idling Blower switch LO A/C switch: ON	Below 1 V
E36-3 (BLW) - E36-1 (GND)	R - W-B	Blower motor control signal	Engine switch on (IG) Blower switch LO	Pulse generation (see waveform 2)
E35-9 (TR) - E35-32 (SG-1)	W - B	Room temperature sensor signal (for front)	Engine switch on (IG) Front side interior temperature: 25°C (77°F)	1.6 to 1.8 V
		Room temperature sensor signal (for front)	Engine switch on (IG) Front side interior temperature: 50°C (122°F)	0.5 to 0.7 V
E35-7 (TSD) - Body ground	LG - Body ground	Driver side solar sensor signal	Engine switch on (IG) Solar sensor subjected to electric light	0.8 to 4.3 V
E35-8 (TSP) - Body	GR - Body ground	Passenger side solar	Engine switch on (IG) Solar sensor subjected	0.8 to 4.3 V

ground		sensor signal	to electric light	
z53-7 (TEA) - z53-6 (SGA)	-	Evaporator temperature sensor signal	Engine switch on (IG) Evaporator temperature: 15°C (59°F)	1.4 to 1.8 V
z53-2 (BUS) - z53-1 (BUS G)	-	BUS IC control signal (for front)	Engine switch on (IG)	Pulse generation
z53-9 (BUS) - z53-8 (BUS G)	-	BUS IC control signal (for front)	Engine switch on (IG)	Pulse generation
E35-18 (TR) - E35-2 (SG-6)	R - G	Room temperature sensor signal (for Rear LH)	Engine switch on (IG) Vehicle interior temperature: 25°C (77°F)	1.6 to 1.8 V
			Engine switch on (IG) Vehicle interior temperature: 50°C (122°F)	0.5 to 0.7 V
E35-19 (TR7) - E35-2 (SG-6)	R - G	Room temperature sensor signal (for Rear RH)	Engine switch on (IG) Vehicle interior temperature: 25°C (77°F)	1.6 to 1.8 V
			Engine switch on (IG) Vehicle interior temperature: 50°C (122°F)	0.5 to 0.7 V
E36-13 (RBUS) - E36-12 (RBUG)	R - BR	BUS IC control signal (for rear)	Engine switch on (IG)	Pulse generation
E35-17 (TEC) - E35-1 (SG)	W - P	Evaporator temperature sensor signal (for Rear)	Engine switch on (IG) Evaporator temperature: 15°C (59°F)	1.4 to 1.8 V
E36-31 (ALT) - Body ground	R - Body ground	Generator signal	Engine idling	Pulse generation
E36-32 (SW1) - Body ground	BR - Body ground	Idle up operation signal	Engine switch on (IG) Idle up switch OFF	Below 1 V
			Engine switch on (IG) Idle up switch ON	11 to 14 V
E36-20 (LIN1) - E36-1 (GND)	Y - W-B	LIN communication signal (for Front A/C switch)	Engine switch on (IG)	Pulse generation
E36-21 (RLIN) - E36-1 (GND)	L - W-B	LIN communication signal (for Rear A/C switch)	Engine switch on (IG)	Pulse generation
E36-27 (PTC1) - Body ground	R - Body ground	PTC1 heater relay operation signal	Engine idling Set temperature: MAX HOT Engine coolant temperature: Below 65°C (149°F) Ambient temperature: Below 10°C (50°F) Blower switch off → LO	Below 1 V → 11 to 14 V
E36-26 (PTC2) - Body ground	R - Body ground	PTC2 heater relay operation signal		
E36-35 (PTC3) - Body ground	R - Body ground	PTC3 heater relay operation signal		
E36-17 (BLWH) - E36-1 (GND)	L - W-B	Blower motor control signal (for rear)	Engine switch on (IG) Blower switch LO	Pulse generation (see waveform 3)
E36-19 (RMGV) - E36-1 (GND)	B - W-B	Rear cooling unit expansion valve signal	Engine switch on (IG)	11 to 14 V

If the result is not as specified, the air conditioning amplifier assembly may have a malfunction.


e. Using an oscilloscope, check waveform 1.

A/C Compressor Lock Sensor Signal

Item	Content
Terminal No. (Symbol)	E35-28 (LOCK) - E35-29 (SG-5)
Tool Setting	200 mV/DIV., 10 ms/DIV.
Condition	Engine running Blower switch LO A/C switch on

HINT:


When the rear blower level is increased, the duty ratio changes accordingly.

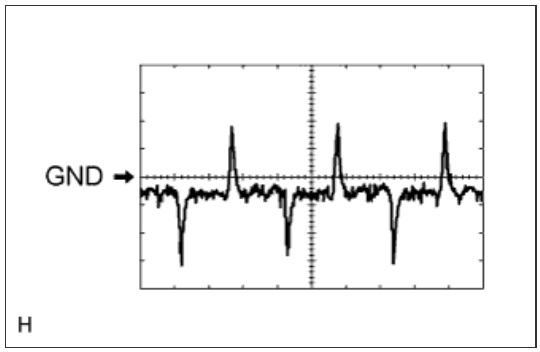

f. sing an oscilloscope, chec waveform 2.

Blower Motor Control Signal

Item	Content
Terminal No. (Symbol)	E36-3 (BLW) - E36-1 (GND)
Tool Setting	1 V/DIV., 500 µs/DIV.
Condition	Engine switch on (IG) Blower switch LO

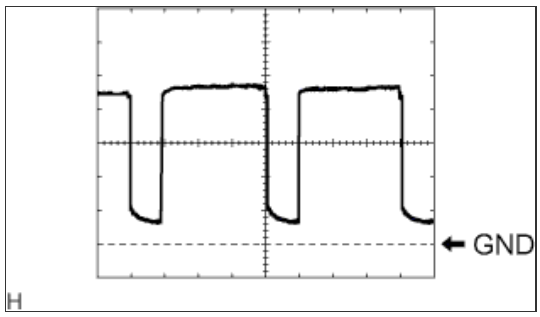


HINT:

When the blower level is increased, the duty ratio changes accordingly.

g. Using an oscilloscope, check waveform 3.

Rear Blower Motor Control Signal


Item	Content
Terminal No. (Symbol)	E36-17 (BLWH) - E36-1 (GND)
Tool Setting	1 V/DIV., 500 µs/DIV.
Condition	Engine switch on (IG) Blower switch LO

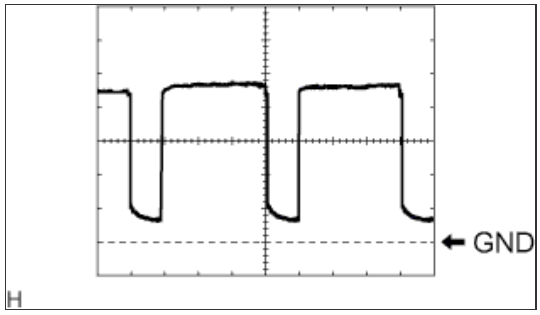

HINT:

When the rear blower level is increased, the duty ratio changes accordingly.

CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY (w/o Rear Heater)

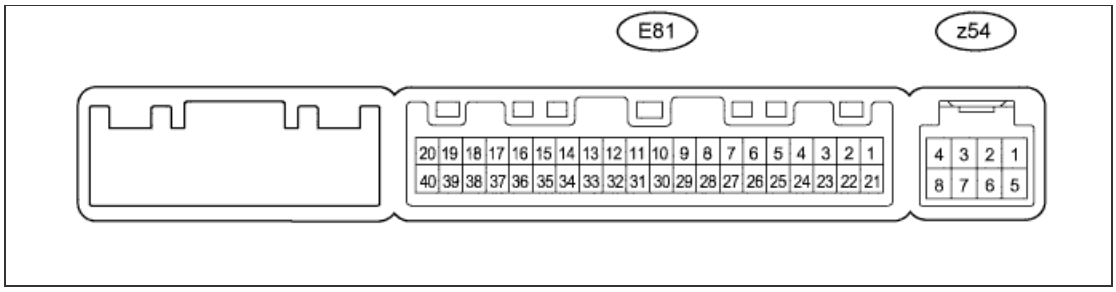

a. Disconnect the E81 and z54 air conditioning amplifier assembly connectors.

. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E81-21 (+B1) - E81-14 (GND)	R - W-B	Battery power source	Always	11 to 14 V
z54-4 (B BUS) - z54-2 (BUS G)	-	Power supply for BUS IC (for front)	Always	11 to 14 V
E81-1 (IG+) - E81-14 (GND)	G - W-B	Ignition power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V
E81-35 (SG-5) - Body ground	G - Body ground	Ground for compressor signal	Always	Below 1 Ω
E81-13 (SG-2) - Body	G - Body ground	Ground for pressure	Always	Below 1 Ω

ground		sensor		
E81-14 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E81-34 (SG-1) - Body ground	B - Body ground	Ground for room temperature sensor (for front)	Always	Below 1 Ω
z54-5 (SGA) - Body ground	-	Ground for evaporator temperature sensor	Always	Below 1 Ω
z54-2 (B S G) - Body ground	-	Ground for B S IC (for front)	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E81 and z54 air conditioning amplifier assembly connectors.

d. Measure the voltage and waveform according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E81-8 (L C) - E81-35 (SG-5)	L - G	Air compressor loc sensor signal	Engine idling A/C switch N Blower switch L	ulse generation (see waveform 1)
E81-39 (CFN+) - Body ground	R - Body ground	Condenser FAN operation signal	Engine switch on (IG) A/C switch	elow 1 V
			Engine switch on (IG) A/C switch N	11 to 14 V
E81-15 (C) - Body ground	W - Body ground	Cool bo operation signal	Engine switch on (IG) Cool bo switch	elow 1 V
			Engine switch on (IG) Cool bo switch N	11 to 14 V
E81-17 (AC1) - Body ground	L - Body ground	Compressor operation signal	Engine switch on (IG) A/C switch	elow 1 V
			Engine switch on (IG) A/C switch N	11 to 14 V
E81-27 (ACT) - Body ground	G - Body ground	Compressor operation signal	Engine switch on (IG) A/C switch	elow 1 V
			Engine switch on (IG) A/C switch N	11 to 14 V
E81-5 (TAM) - E81-13 (SG-2)	V - G	Ambient temperature sensor signal	Engine switch on (IG) Ambient temperature 5 C (77)	1.6 to 1.8 V
			Engine switch on (IG) Ambient temperature: 50°C (122°F)	0.5 to 0.7 V
E81-30 (S5-1) - E81-13 (SG-2)	LG - G	Power supply for pressure sensor	Engine switch on (IG)	4.5 to 5.5 V
E81-9 (PRE) - E81-13 (SG-2)	R - G	Air conditioning pressure sensor signal	Refrigerant pressure: Normal	1.0 to 4.8 V
			Refrigerant pressure: Abnormal (less than 0.392 Mpa [4.0 kgf/cm^2, 57 psi]	Below 1 V
			Refrigerant pressure: Abnormal (less than 3.187 Mpa [32.5 kgf/cm^2, 463 psi]	4.8 V or higher
E81-20 (MGC) - E81-14 (GND)	R - W-B	A/C compressor magnetic clutch operation signal	Engine idling Blower switch LO A/C switch: ON	Below 1 V
E81-18 (RCRL) - E81-14 (GND)	B - Body ground	Rear cooler control relay operation signal	Engine switch on (IG) Rear blower switch OFF	Below 1 V
			Engine switch on (IG) Rear blower switch ON	11 to 14 V
E81-23 (BLW) - E81-14 (GND)	R - W-B	Blower motor control signal	Engine switch on (IG) Blower switch ON	Pulse generation (see waveform 2)
E81-29 (TR) - E81-34	W - B	Room temperature	Engine switch on (IG) Front side interior temperature: 25°C (77°F)	1.6 to 1.8 V


(SG-1)		sensor signal (for front)	Engine switch on (IG) Front side interior temperature 50 C (122)	0.5 to 0.7 V
E81-32 (TSP) - Body ground	GR - Body ground	Passenger side solar sensor signal	Engine switch on (IG) Solar sensor sub ected to electric light	0.8 to 4.3 V
E81-33 (TSD) - Body ground	LG - Body ground	Driver side solar sensor signal	Engine switch on (IG) Solar sensor sub ected to electric light	0.8 to 4.3 V
E81-36 (SW1) - Body ground	BR - Body ground	Idle up operation signal	Engine switch on (IG) Idle up switch OFF	Below 1 V
			Engine switch on (IG) Idle up switch ON	11 to 14 V
z54-6 (TEA) - z54-5 (SGA)	-	Evaporator temperature sensor signal	Engine switch on (IG) Evaporate temperature: 15°C (59°F)	1.4 to 1.8 V
z54-3 (BUS) - z54-2 (BUS G)	-	BUS IC control signal (for front)	Engine switch on (IG)	Pulse generation
E81-37 (LIN1) - E81-14 (GND)	Y - W-B	LIN communication signal	Engine switch on (IG)	Pulse generation
E81-25 (ALT) - Body ground	R - Body ground	Generator signal	Engine idling	Pulse generation
E81-3 (PTC1) - Body ground	R - Body ground	PTC1 heater relay operation signal	Engine idling Set temperature: MAX HOT Engine coolant temperature: Below 65°C (149°F) Ambient temperature: Below 10°C (50°F)	Below 1 V → 11 to 14 V
E81-22 (PTC2) - Body ground	R - Body ground	PTC2 heater relay operation signal		
E81-4 (PTC3) - Body ground	R - Body ground	PTC3 heater relay operation signal		
E81-24 (MGCA) - E81-14 (GND)	Y - W-B	Viscous with magnetic clutch operation signal	Engine idling Idle up switch ON	Below 1 V

If the result is not as specified, the air conditioning amplifier or fuse may have a malfunction.

e. Using an oscilloscope, check waveform 1.

A/C Compressor Lock Sensor Signal

Item	Content
Terminal No. (Symbol)	E81-8 (LOCK) - E81-35 (SG-5)
Tool Setting	200 mV/DIV., 10 ms/DIV.
Condition	Engine running Blower switch LO A/C switch on

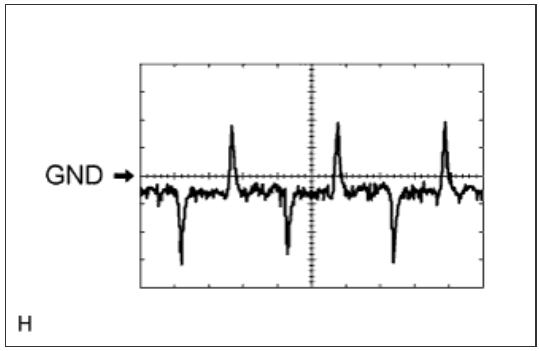


HINT:

When the rear blower level is increased, the duty ratio changes accordingly.

f. Using an oscilloscope, check waveform 2.

Blower Motor Control Signal


Item	Content
Terminal No. (Symbol)	E81-23 (BLW) - E81-14 (GND)
Tool Setting	1 V/DIV., 500 µs/DIV.
Condition	Engine switch on (IG) Blower switch LO

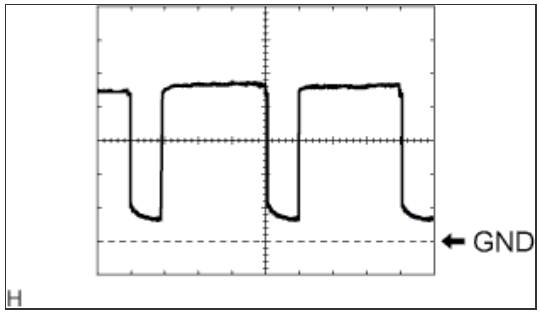

HINT:

When the blower level is increased, the duty ratio changes accordingly.

CHECK AIR CONDITIONING CONTROL ASSEMBLY (w/o M lti-display)

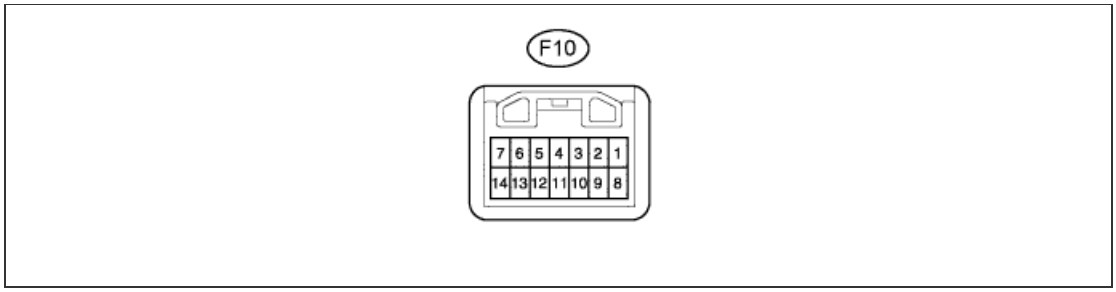

a. Disconnect the F10 air conditioning control assembly connector.

. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F10-7 (IG+) - F10-1 (GND)	G - W-B	Ignition power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V
F10-1 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.


c. Reconnect the F10 air conditioning control assembly connector.

d. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F10-12 (DTP+) - F10-1 (GND)	R - W-B	Temperature up switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F10-10 (PTP+) - F10-1 (GND)	L - W-B	Temperature up switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F10-9 (S5) - F10-1 (GND)	B - W-B	Signal ground	Always	Below 1 Ω
F10-11 (DTP-) - F10-1 (GND)	G - W-B	Temperature down switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F10-3 (PTP-) - F10-1 (GND)	W - W-B	Temperature down switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F10-2 (SG) - F10-1 (GND)	GR - W-B	Signal ground	Always	Below 1 Ω

If the result is not as specified, the air conditioning control assembly may have a malfunction.

CHECK MULTI-DISPLAY (w/ M lti-display)

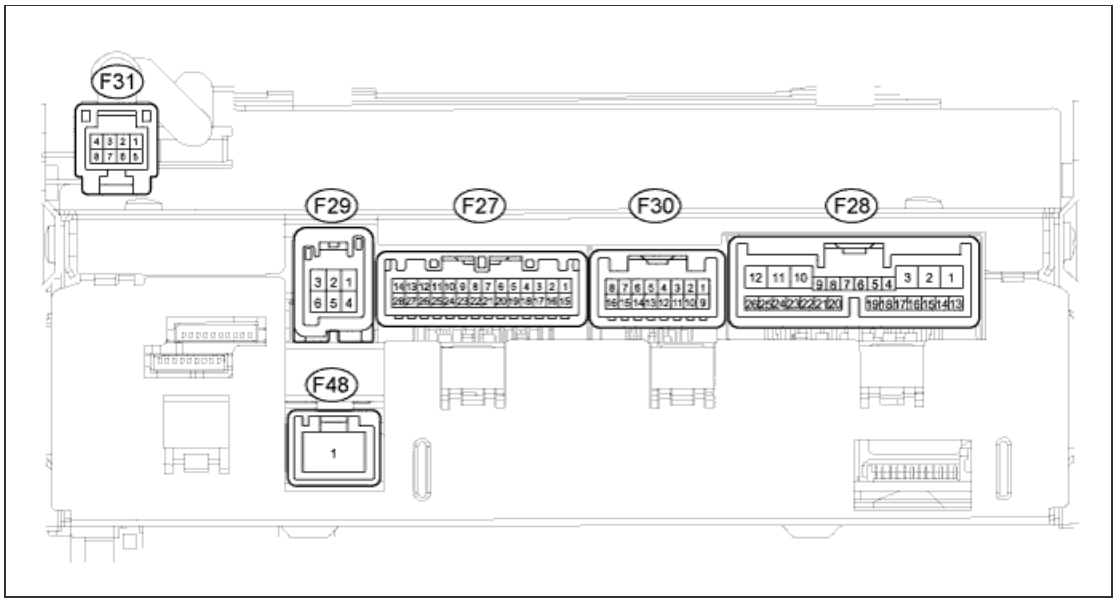

a. Disconnect the F28 multi-display connector.

. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F28-3 (IG) - F28-10 (GND1)	G - W-B	Ignition power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V
F28-1 (+B1) - F28-10 (GND1)	R - W-B	Battery power source	Always	11 to 14 V
F28-10 (GND1) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.


c. Reconnect the F28 multi-display connector.

d. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F31-2 (TEC+) - F28-10 (GND1)	R - W-B	Temperature up switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F31-3 (TES+) - F28-10 (GND1)	L - W-B	Temperature up switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F31-5 (AGND) - F28-10 (GND1)	B - N-B	Signal ground	Always	Below 1 Ω
F31-6 (TEC-) - F28-10 (GND1)	G - W-B	Temperature down switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F31-7 (TES-) - F28-10 (GND1)	W - W-B	Temperature down switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F31-8 (BGND) - F28-10 (GND1)	GR - W-B	Signal ground	Always	Below 1 Ω

If the result is not as specified, the multi-display may have a malfunction.

CHECK NO. 2 AIR CONDITIONING CONTROL ASSEMBLY

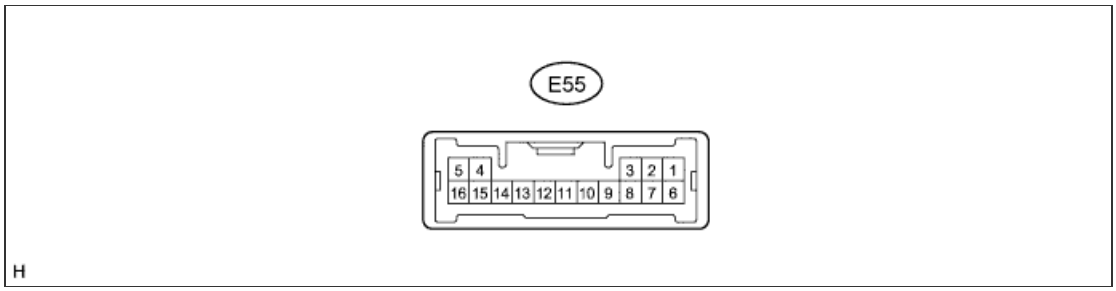


a. Disconnect the E55 switch connector.

. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E55-6 (IG) - E55-1 (E)	G - W-B	Ignition power supply	Always	11 to 14 V
E55-1 (E) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

CHECK MAIN BODY ECU (COWL SIDE UNCTION BLOCK LH)

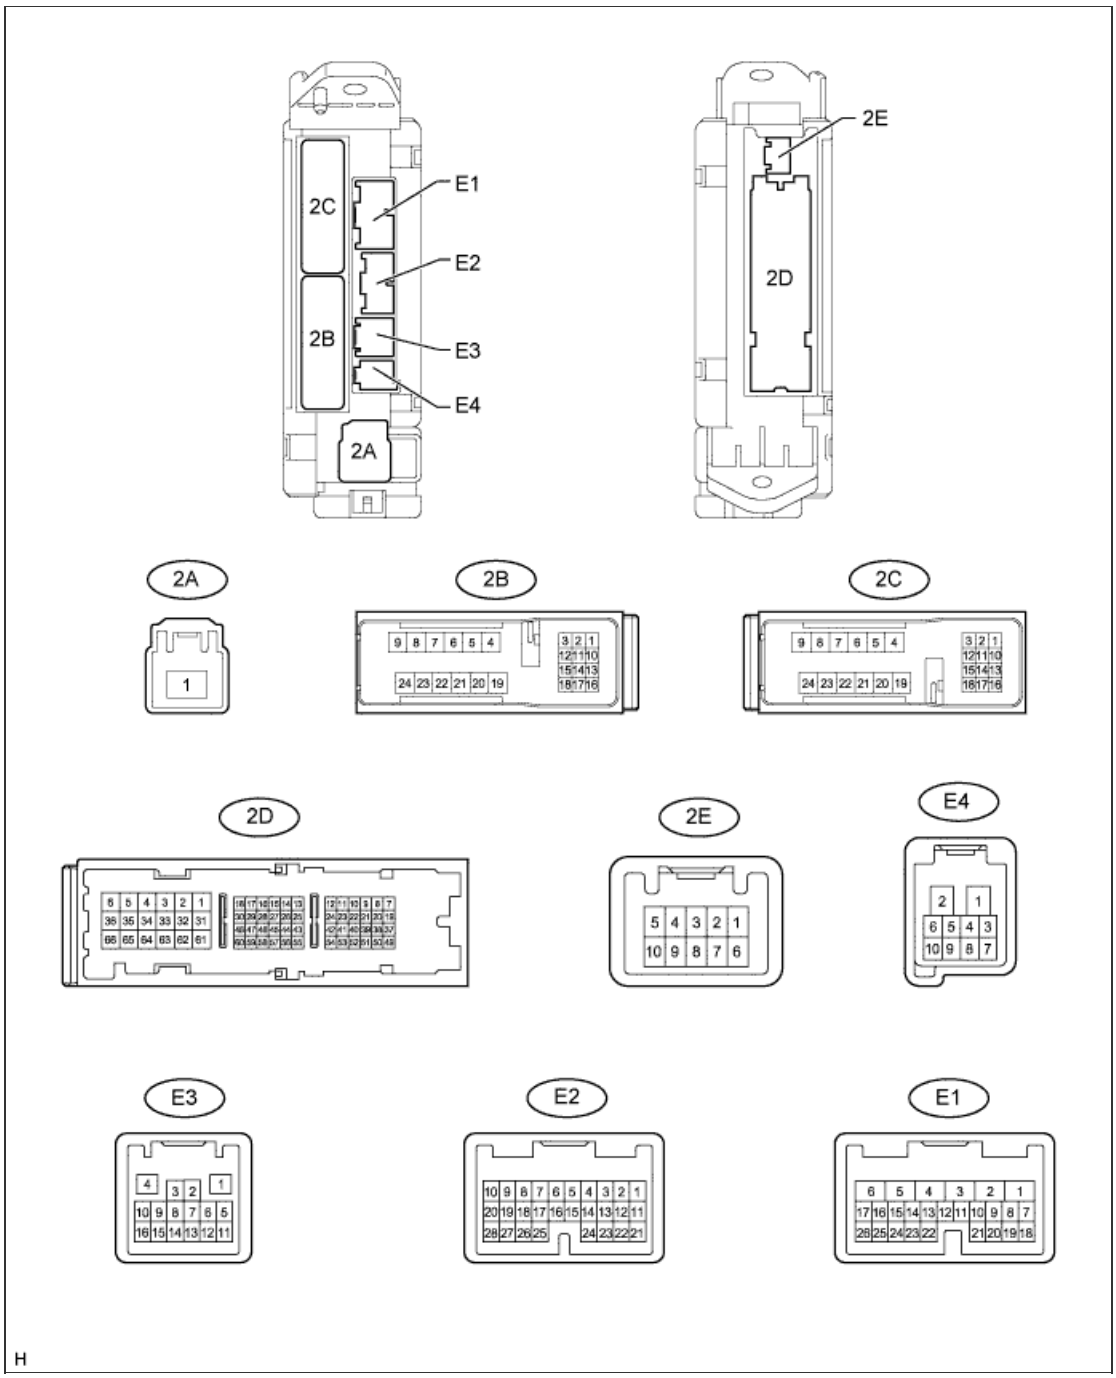

a. Disconnect the 2B, 2D, and E3 EC connectors.


. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
2B-20 (BATB) - Body ground	L - Body ground	Battery power supply	Always	11 to 14 V
2A-1 (ACC) - Body ground	GR - Body ground	ACC power supply	Engine switch on (ACC)	11 to 14 V
2A-1 (ACC) - Body ground	GR - Body ground	ACC power supply	Engine switch off	Below 1 V
2D-62 (GND2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction in the wire harness.

for Preparation Click here

CHECK AIR CONDITIONING AMPLIFIER (w/ Rear Heater)

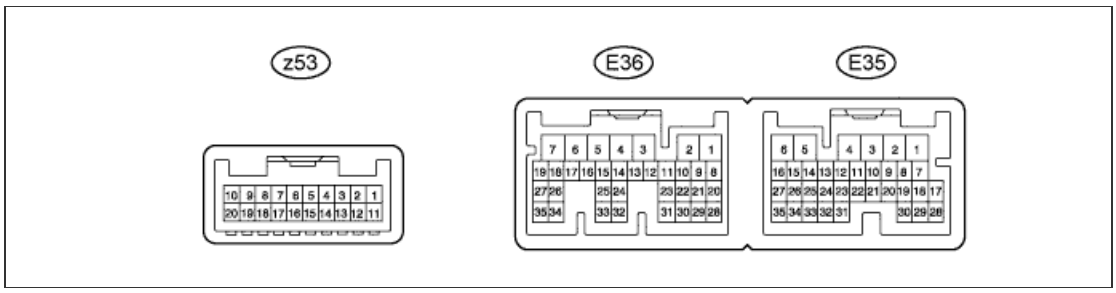

a. Disconnect the E36, E35 and z53 air conditioning amplifier assembly connectors.

. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E36-6 (+B1) - E36-1 (GND)	R - W-B	Battery power source	Always	11 to 14 V
E36-7 (+B2) - E36-1 (GND)	R - W-B	Battery power source	Always	11 to 14 V
z53-3 (B BUS) - z53-1 (BUS G)	-	Power supply for BUS IC (for front)	Always	11 to 14 V
z53-10 (B BUS) - z53-8 (BUS G)	-	Power supply for BUS IC (for front)	Always	11 to 14 V
E36-5 (IG+) - E36-1 (GND)	G - W-B	Ignition power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V
E36-14 (RBBU) - E36-12 (RBUG)	L - BR	Power supply for BUS IC (for rear)	Always	11 to 14 V
E35-25 (TR3) - Body ground	V - Body ground	Ground	Engine switch on (IG) Driver side duct sensor temperature: 25°C (77°F)	5000 +/-150 Ω
E35-26 (TR4) - Body ground	W - Body ground	Ground	Engine switch on (IG) Passenger side duct sensor temperature: 25°C (77°F)	5000 +/-150 Ω
E35-16 (SG-2) - Body ground	G - Body ground	Ground for pressure sensor	Always	Below 1 Ω
E35-29 (SG-5) - Body ground	G - Body ground	Ground for compressor signal	Always	Below 1 Ω
E36-2 (E1) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E36-1 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E35-6 (E2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E35-32 (SG-1) - Body ground	B - Body ground	Ground for room temperature sensor (for front)	Always	Below 1 Ω
z53-6 (SGA) - Body ground	-	Ground for evaporator temperature sensor	Always	Below 1 Ω
z53-1 (BUS G) - Body ground	-	Ground for BUS IC (for front)	Always	Below 1 Ω
z53-8 (BUS G) - Body ground	-	Ground for BUS IC (for front)	Always	Below 1 Ω
E35-34 (SGND) - Body ground	BR - Body ground	Ground for duct sensor (for driver side)	Always	Below 1 Ω
E35-12 (SG-9) - Body		Ground for duct sensor		

ground	L - Body ground	(for passenger side)	Always	Below 1 Ω
E35-2 (SG-6) - Body ground	G - Body ground	Ground for room temperature sensor signal (for Rear LH and Rear RH)	Always	Below 1 Ω
E36-12 (RBUG) - Body ground	BR - Body ground	Ground for BUS IC (for rear)	Always	Below 1 Ω
E35-1 (SG) - Body ground	P - Body ground	Ground for evaporator temperature sensor signal (for Rear)	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E36, E35 and z53 air conditioning amplifier assembly connectors.

d. Measure the voltage and waveform according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E36-25 (CFN+) - Body ground	R - Body ground	Condenser FAN operation signal	Engine switch on (IG)	11 to 14 V
E36-33 (COOL) - Body ground	W - Body ground	Cool box operation signal	Engine switch on (IG) Cool box switch: ON	11 to 14 V
E36-29 (AC1) - Body ground	L - Body ground	Compressor operation signal	Engine switch on (IG) A/C switch: OFF	11 to 14 V
			Engine switch on (IG) A/C switch: ON	Below 1 V
E36-22 (ACT) - Body ground	G - Body ground	Compressor operation signal	Engine switch on (IG) A/C switch: OFF	Below 1 V
			Engine switch on (IG) A/C switch: ON	11 to 14 V
E35-28 (LOCK) - E35-29 (SG-5)	L - G	Air compressor lock sensor signal	Engine idling A/C switch: ON Blower switch LO	Pulse generation (see waveform 1)
E35-10 (TAM) - E35-16 (SG-2)	V - G	Ambient temperature sensor signal	Engine switch on (IG) Ambient temperature: 25°C (77°F)	1.6 to 1.8 V
			Engine switch on (IG) Ambient temperature: 50°C (122°F)	0.5 to 0.7 V
E35-27 (S5-1) - E35-16 (SG-2)	LG - G	Power supply for pressure sensor	Engine switch on (IG)	4.5 to 5.5 V
E35-20 (PRE) - E35-16 (SG-2)	R - G	Air conditioning pressure sensor signal	Refrigerant pressure: Normal	1.0 to 4.8 V
			Refrigerant pressure: Abnormal (less than 0.392 MPa [4.0 kgf/cm^2, 57 psi])	Below 1 V
			Refrigerant pressure: Abnormal (less than 3.187 MPa [32.5 kgf/cm^2, 463 psi])	4.8 V or higher
E36-18 (MGC) - E36-1 (GND)	R - W-B	A/C compressor magnetic clutch operation signal	Engine idling Blower switch LO A/C switch: ON	Below 1 V
E36-3 (BLW) - E36-1 (GND)	R - W-B	Blower motor control signal	Engine switch on (IG) Blower switch LO	Pulse generation (see waveform 2)
E35-9 (TR) - E35-32 (SG-1)	W - B	Room temperature sensor signal (for front)	Engine switch on (IG) Front side interior temperature: 25°C (77°F)	1.6 to 1.8 V
		Room temperature sensor signal (for front)	Engine switch on (IG) Front side interior temperature: 50°C (122°F)	0.5 to 0.7 V
E35-7 (TSD) - Body ground	LG - Body ground	Driver side solar sensor signal	Engine switch on (IG) Solar sensor subjected to electric light	0.8 to 4.3 V
E35-8 (TSP) - Body	GR - Body ground	Passenger side solar	Engine switch on (IG) Solar sensor subjected	0.8 to 4.3 V

ground		sensor signal	to electric light	
z53-7 (TEA) - z53-6 (SGA)	-	Evaporator temperature sensor signal	Engine switch on (IG) Evaporator temperature: 15°C (59°F)	1.4 to 1.8 V
z53-2 (BUS) - z53-1 (BUS G)	-	BUS IC control signal (for front)	Engine switch on (IG)	Pulse generation
z53-9 (BUS) - z53-8 (BUS G)	-	BUS IC control signal (for front)	Engine switch on (IG)	Pulse generation
E35-18 (TR) - E35-2 (SG-6)	R - G	Room temperature sensor signal (for Rear LH)	Engine switch on (IG) Vehicle interior temperature: 25°C (77°F)	1.6 to 1.8 V
			Engine switch on (IG) Vehicle interior temperature: 50°C (122°F)	0.5 to 0.7 V
E35-19 (TR7) - E35-2 (SG-6)	R - G	Room temperature sensor signal (for Rear RH)	Engine switch on (IG) Vehicle interior temperature: 25°C (77°F)	1.6 to 1.8 V
			Engine switch on (IG) Vehicle interior temperature: 50°C (122°F)	0.5 to 0.7 V
E36-13 (RBUS) - E36-12 (RBUG)	R - BR	BUS IC control signal (for rear)	Engine switch on (IG)	Pulse generation
E35-17 (TEC) - E35-1 (SG)	W - P	Evaporator temperature sensor signal (for Rear)	Engine switch on (IG) Evaporator temperature: 15°C (59°F)	1.4 to 1.8 V
E36-31 (ALT) - Body ground	R - Body ground	Generator signal	Engine idling	Pulse generation
E36-32 (SW1) - Body ground	BR - Body ground	Idle up operation signal	Engine switch on (IG) Idle up switch OFF	Below 1 V
			Engine switch on (IG) Idle up switch ON	11 to 14 V
E36-20 (LIN1) - E36-1 (GND)	Y - W-B	LIN communication signal (for Front A/C switch)	Engine switch on (IG)	Pulse generation
E36-21 (RLIN) - E36-1 (GND)	L - W-B	LIN communication signal (for Rear A/C switch)	Engine switch on (IG)	Pulse generation
E36-27 (PTC1) - Body ground	R - Body ground	PTC1 heater relay operation signal	Engine idling Set temperature: MAX HOT Engine coolant temperature: Below 65°C (149°F) Ambient temperature: Below 10°C (50°F) Blower switch off → LO	Below 1 V → 11 to 14 V
E36-26 (PTC2) - Body ground	R - Body ground	PTC2 heater relay operation signal		
E36-35 (PTC3) - Body ground	R - Body ground	PTC3 heater relay operation signal		
E36-17 (BLWH) - E36-1 (GND)	L - W-B	Blower motor control signal (for rear)	Engine switch on (IG) Blower switch LO	Pulse generation (see waveform 3)
E36-19 (RMGV) - E36-1 (GND)	B - W-B	Rear cooling unit expansion valve signal	Engine switch on (IG)	11 to 14 V

If the result is not as specified, the air conditioning amplifier assembly may have a malfunction.


e. Using an oscilloscope, check waveform 1.

A/C Compressor Lock Sensor Signal

Item	Content
Terminal No. (Symbol)	E35-28 (LOCK) - E35-29 (SG-5)
Tool Setting	200 mV/DIV., 10 ms/DIV.
Condition	Engine running Blower switch LO A/C switch on

HINT:


When the rear blower level is increased, the duty ratio changes accordingly.

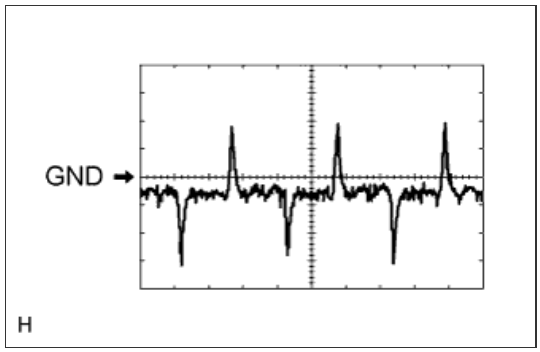

f. sing an oscilloscope, chec waveform 2.

Blower Motor Control Signal

Item	Content
Terminal No. (Symbol)	E36-3 (BLW) - E36-1 (GND)
Tool Setting	1 V/DIV., 500 µs/DIV.
Condition	Engine switch on (IG) Blower switch LO

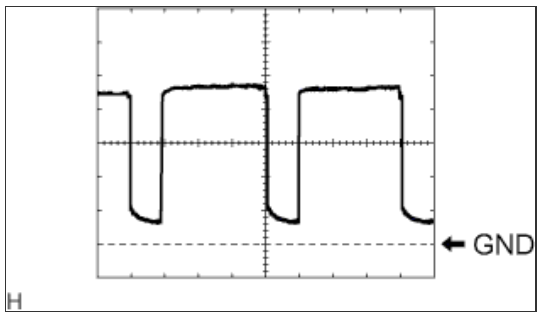


HINT:

When the blower level is increased, the duty ratio changes accordingly.

g. Using an oscilloscope, check waveform 3.

Rear Blower Motor Control Signal


Item	Content
Terminal No. (Symbol)	E36-17 (BLWH) - E36-1 (GND)
Tool Setting	1 V/DIV., 500 µs/DIV.
Condition	Engine switch on (IG) Blower switch LO

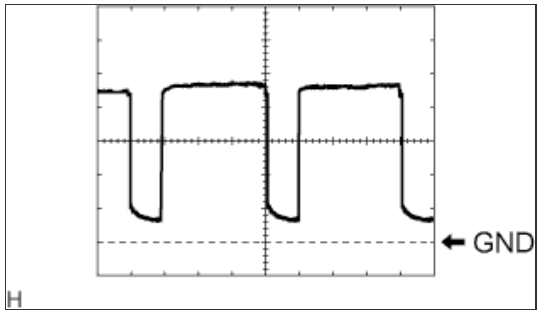

HINT:

When the rear blower level is increased, the duty ratio changes accordingly.

CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY (w/o Rear Heater)

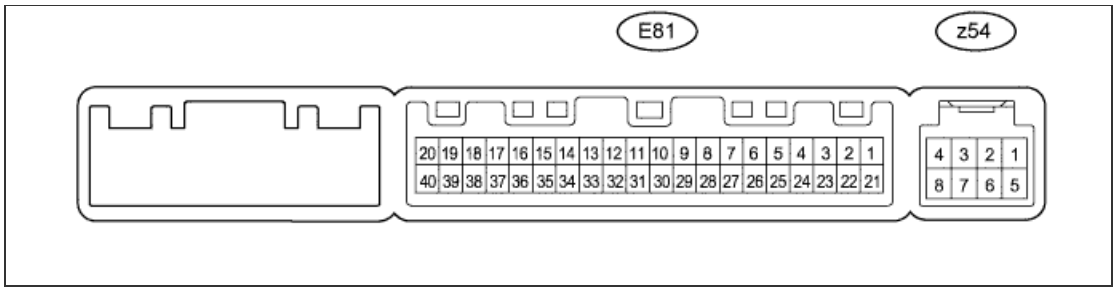

a. Disconnect the E81 and z54 air conditioning amplifier assembly connectors.

. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E81-21 (+B1) - E81-14 (GND)	R - W-B	Battery power source	Always	11 to 14 V
z54-4 (B BUS) - z54-2 (BUS G)	-	Power supply for BUS IC (for front)	Always	11 to 14 V
E81-1 (IG+) - E81-14 (GND)	G - W-B	Ignition power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V
E81-35 (SG-5) - Body ground	G - Body ground	Ground for compressor signal	Always	Below 1 Ω
E81-13 (SG-2) - Body	G - Body ground	Ground for pressure	Always	Below 1 Ω

ground		sensor		
E81-14 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω
E81-34 (SG-1) - Body ground	B - Body ground	Ground for room temperature sensor (for front)	Always	Below 1 Ω
z54-5 (SGA) - Body ground	-	Ground for evaporator temperature sensor	Always	Below 1 Ω
z54-2 (B S G) - Body ground	-	Ground for B S IC (for front)	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

c. Reconnect the E81 and z54 air conditioning amplifier assembly connectors.

d. Measure the voltage and waveform according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E81-8 (L C) - E81-35 (SG-5)	L - G	Air compressor loc sensor signal	Engine idling A/C switch N Blower switch L	ulse generation (see waveform 1)
E81-39 (CFN+) - Body ground	R - Body ground	Condenser FAN operation signal	Engine switch on (IG) A/C switch	elow 1 V
			Engine switch on (IG) A/C switch N	11 to 14 V
E81-15 (C) - Body ground	W - Body ground	Cool bo operation signal	Engine switch on (IG) Cool bo switch	elow 1 V
			Engine switch on (IG) Cool bo switch N	11 to 14 V
E81-17 (AC1) - Body ground	L - Body ground	Compressor operation signal	Engine switch on (IG) A/C switch	elow 1 V
			Engine switch on (IG) A/C switch N	11 to 14 V
E81-27 (ACT) - Body ground	G - Body ground	Compressor operation signal	Engine switch on (IG) A/C switch	elow 1 V
			Engine switch on (IG) A/C switch N	11 to 14 V
E81-5 (TAM) - E81-13 (SG-2)	V - G	Ambient temperature sensor signal	Engine switch on (IG) Ambient temperature 5 C (77)	1.6 to 1.8 V
			Engine switch on (IG) Ambient temperature: 50°C (122°F)	0.5 to 0.7 V
E81-30 (S5-1) - E81-13 (SG-2)	LG - G	Power supply for pressure sensor	Engine switch on (IG)	4.5 to 5.5 V
E81-9 (PRE) - E81-13 (SG-2)	R - G	Air conditioning pressure sensor signal	Refrigerant pressure: Normal	1.0 to 4.8 V
			Refrigerant pressure: Abnormal (less than 0.392 MPa [4.0 kgf/cm^2, 57 psi])	Below 1 V
			Refrigerant pressure: Abnormal (less than 3.187 MPa [32.5 kgf/cm^2, 463 psi])	4.8 V or higher
E81-20 (MGC) - E81-14 (GND)	R - W-B	A/C compressor magnetic clutch operation signal	Engine idling Blower switch LO A/C switch: ON	Below 1 V
E81-18 (RCRL) - E81-14 (GND)	B - Body ground	Rear cooler control relay operation signal	Engine switch on (IG) Rear blower switch OFF	Below 1 V
			Engine switch on (IG) Rear blower switch ON	11 to 14 V
E81-23 (BLW) - E81-14 (GND)	R - W-B	Blower motor control signal	Engine switch on (IG) Blower switch ON	Pulse generation (see waveform 2)
E81-29 (TR) - E81-34	W - B	Room temperature	Engine switch on (IG) Front side interior temperature: 25°C (77°F)	1.6 to 1.8 V


(SG-1)		sensor signal (for front)	Engine switch on (IG) Front side interior temperature 50 C (122)	0.5 to 0.7 V
E81-32 (TSP) - Body ground	GR - Body ground	Passenger side solar sensor signal	Engine switch on (IG) Solar sensor sub ected to electric light	0.8 to 4.3 V
E81-33 (TSD) - Body ground	LG - Body ground	Driver side solar sensor signal	Engine switch on (IG) Solar sensor sub ected to electric light	0.8 to 4.3 V
E81-36 (SW1) - Body ground	BR - Body ground	Idle up operation signal	Engine switch on (IG) Idle up switch OFF	Below 1 V
			Engine switch on (IG) Idle up switch ON	11 to 14 V
z54-6 (TEA) - z54-5 (SGA)	-	Evaporator temperature sensor signal	Engine switch on (IG) Evaporate temperature: 15°C (59°F)	1.4 to 1.8 V
z54-3 (BUS) - z54-2 (BUS G)	-	BUS IC control signal (for front)	Engine switch on (IG)	Pulse generation
E81-37 (LIN1) - E81-14 (GND)	Y - W-B	LIN communication signal	Engine switch on (IG)	Pulse generation
E81-25 (ALT) - Body ground	R - Body ground	Generator signal	Engine idling	Pulse generation
E81-3 (PTC1) - Body ground	R - Body ground	PTC1 heater relay operation signal	Engine idling Set temperature: MAX HOT Engine coolant temperature: Below 65°C (149°F) Ambient temperature: Below 10°C (50°F)	Below 1 V → 11 to 14 V
E81-22 (PTC2) - Body ground	R - Body ground	PTC2 heater relay operation signal		
E81-4 (PTC3) - Body ground	R - Body ground	PTC3 heater relay operation signal		
E81-24 (MGCA) - E81-14 (GND)	Y - W-B	Viscous with magnetic clutch operation signal	Engine idling Idle up switch ON	Below 1 V

If the result is not as specified, the air conditioning amplifier or fuse may have a malfunction.

e. Using an oscilloscope, check waveform 1.

A/C Compressor Lock Sensor Signal

Item	Content
Terminal No. (Symbol)	E81-8 (LOCK) - E81-35 (SG-5)
Tool Setting	200 mV/DIV., 10 ms/DIV.
Condition	Engine running Blower switch LO A/C switch on

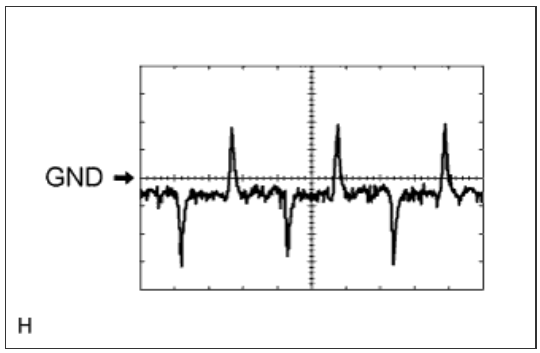


HINT:

When the rear blower level is increased, the duty ratio changes accordingly.

f. Using an oscilloscope, check waveform 2.

Blower Motor Control Signal


Item	Content
Terminal No. (Symbol)	E81-23 (BLW) - E81-14 (GND)
Tool Setting	1 V/DIV., 500 µs/DIV.
Condition	Engine switch on (IG) Blower switch LO

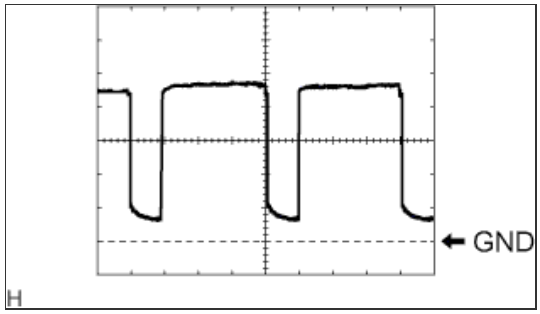

HINT:

When the blower level is increased, the duty ratio changes accordingly.

CHECK AIR CONDITIONING CONTROL ASSEMBLY (w/o Navigation System)

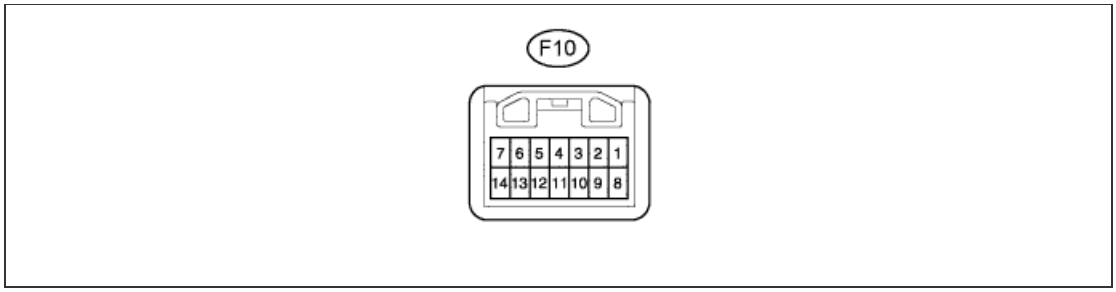

a. Disconnect the F10 air conditioning control assembly connector.

. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F10-7 (IG+) - F10-1 (GND)	G - W-B	Ignition power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V
F10-1 (GND) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.


c. Reconnect the F10 air conditioning control assembly connector.

d. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F10-12 (DTP+) - F10-1 (GND)	R - W-B	Temperature up switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F10-10 (PTP+) - F10-1 (GND)	L - W-B	Temperature up switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F10-9 (S5) - F10-1 (GND)	B - W-B	Signal ground	Always	Below 1 Ω
F10-11 (DTP-) - F10-1 (GND)	G - W-B	Temperature down switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F10-3 (PTP-) - F10-1 (GND)	W - W-B	Temperature down switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F10-2 (SG) - F10-1 (GND)	GR - W-B	Signal ground	Always	Below 1 Ω

If the result is not as specified, the air conditioning control assembly may have a malfunction.

CHECK DISPLAY AND NAVIGATION MODULE DISPLAY (w/ Navigation System)

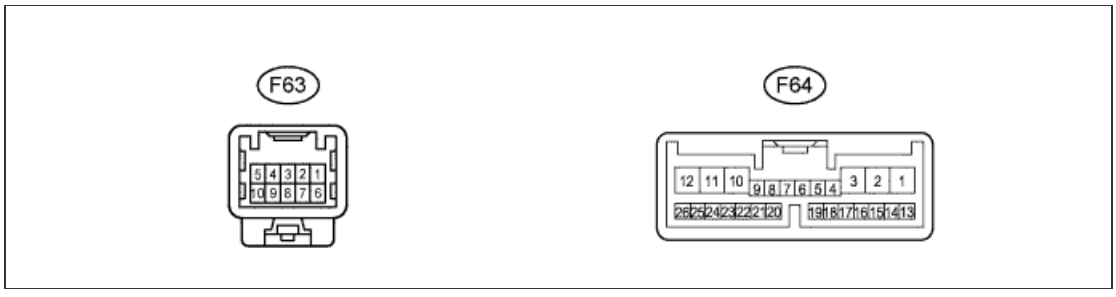

a. Disconnect the F64 display and navigation module display connector.

. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F64-3 (IG) - F64-10 (GND1)	G - W-B	Ignition power supply	Engine switch on (IG)	11 to 14 V
			Engine switch off	Below 1 V
F64-1 (+B1) - F64-10 (GND1)	R - W-B	Battery power source	Always	11 to 14 V
F64-10 (GND1) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.


c. Reconnect the F64 display and navigation module display connector.

d. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
F63-2 (TEC+) - F64-10 (GND1)	R - W-B	Temperature up switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F63-3 (TES+) - F64-10 (GND1)	L - W-B	Temperature up switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F63-6 (AGND) - F64-10 (GND1)	B - N-B	Signal ground	Always	Below 1 Ω
F63-7 (TEC-) - F64-10 (GND1)	G - W-B	Temperature down switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F63-8 (TES-) - F64-10 (GND1)	W - W-B	Temperature down switch signal	Switch not pressed	Below 1 V
			Switch pressed	Alternating between 3.5 V or higher and below 1 V
F63-9 (BGND) - F64-10 (GND1)	GR - W-B	Signal ground	Always	Below 1 Ω

If the result is not as specified, the display and navigation module display may have a malfunction.

CHECK NO. 2 AIR CONDITIONING CONTROL ASSEMBLY

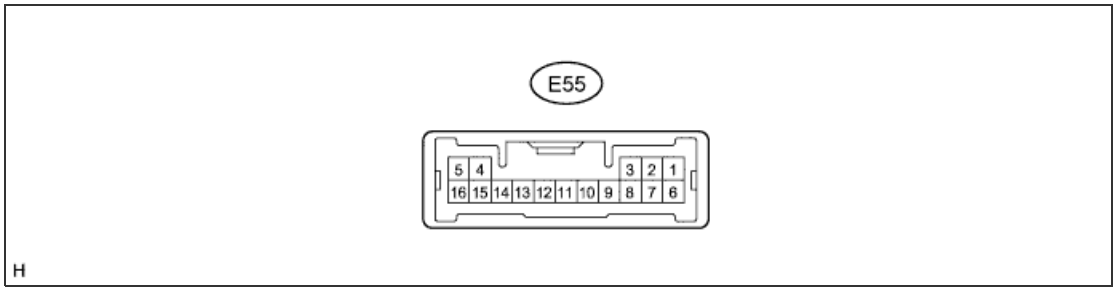


a. Disconnect the E55 switch connector.

. Measure the resistance and voltage according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
E55-6 (IG) - E55-1 (E)	G - W-B	Ignition power supply	Always	11 to 14 V
E55-1 (E) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction on the wire harness side.

CHECK MAIN BODY ECU (COWL SIDE UNCTION BLOCK LH)

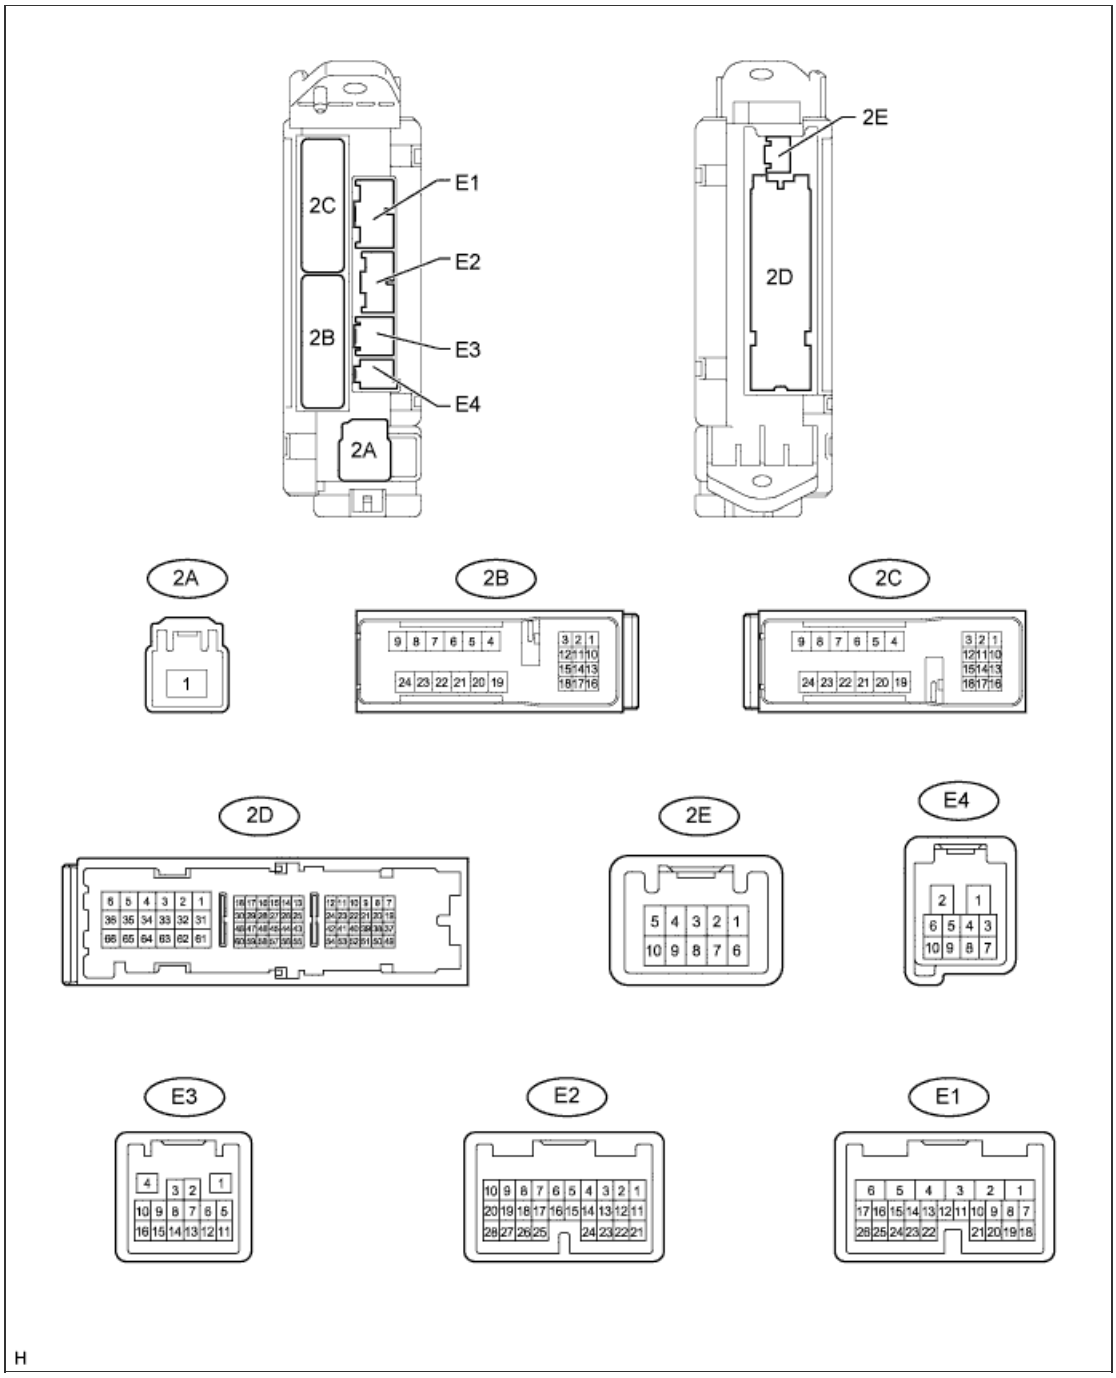

a. Disconnect the 2A, 2B, and 2D EC connectors.

. Measure the voltage and resistance according to the value(s) in the table below.

Terminal No. (Symbol)	Wiring Color	Terminal Description	Condition	Specified Condition
2B-20 (BATB) - Body ground	L - Body ground	Battery power supply	Always	11 to 14 V
2A-1 (ACC) - Body ground	GR - Body ground	ACC power supply	Engine switch on (ACC)	11 to 14 V
2A-1 (ACC) - Body ground	GR - Body ground	ACC power supply	Engine switch off	Below 1 V
2D-62 (GND2) - Body ground	W-B - Body ground	Ground	Always	Below 1 Ω

If the result is not as specified, there may be a malfunction in the wire harness.

for Preparation Click here

CHECK DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / Trouble Codes.

e. Read the DTCs.

CLEAR DTC

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / (desired system) / Trouble Codes.

e. Clear the DTCs.


for Preparation Click here

LIST OF OPERATION METHODS

By operating each of the air conditioning control switches as shown in the diagram below, it is possible to enter the diagnostic check mode.

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

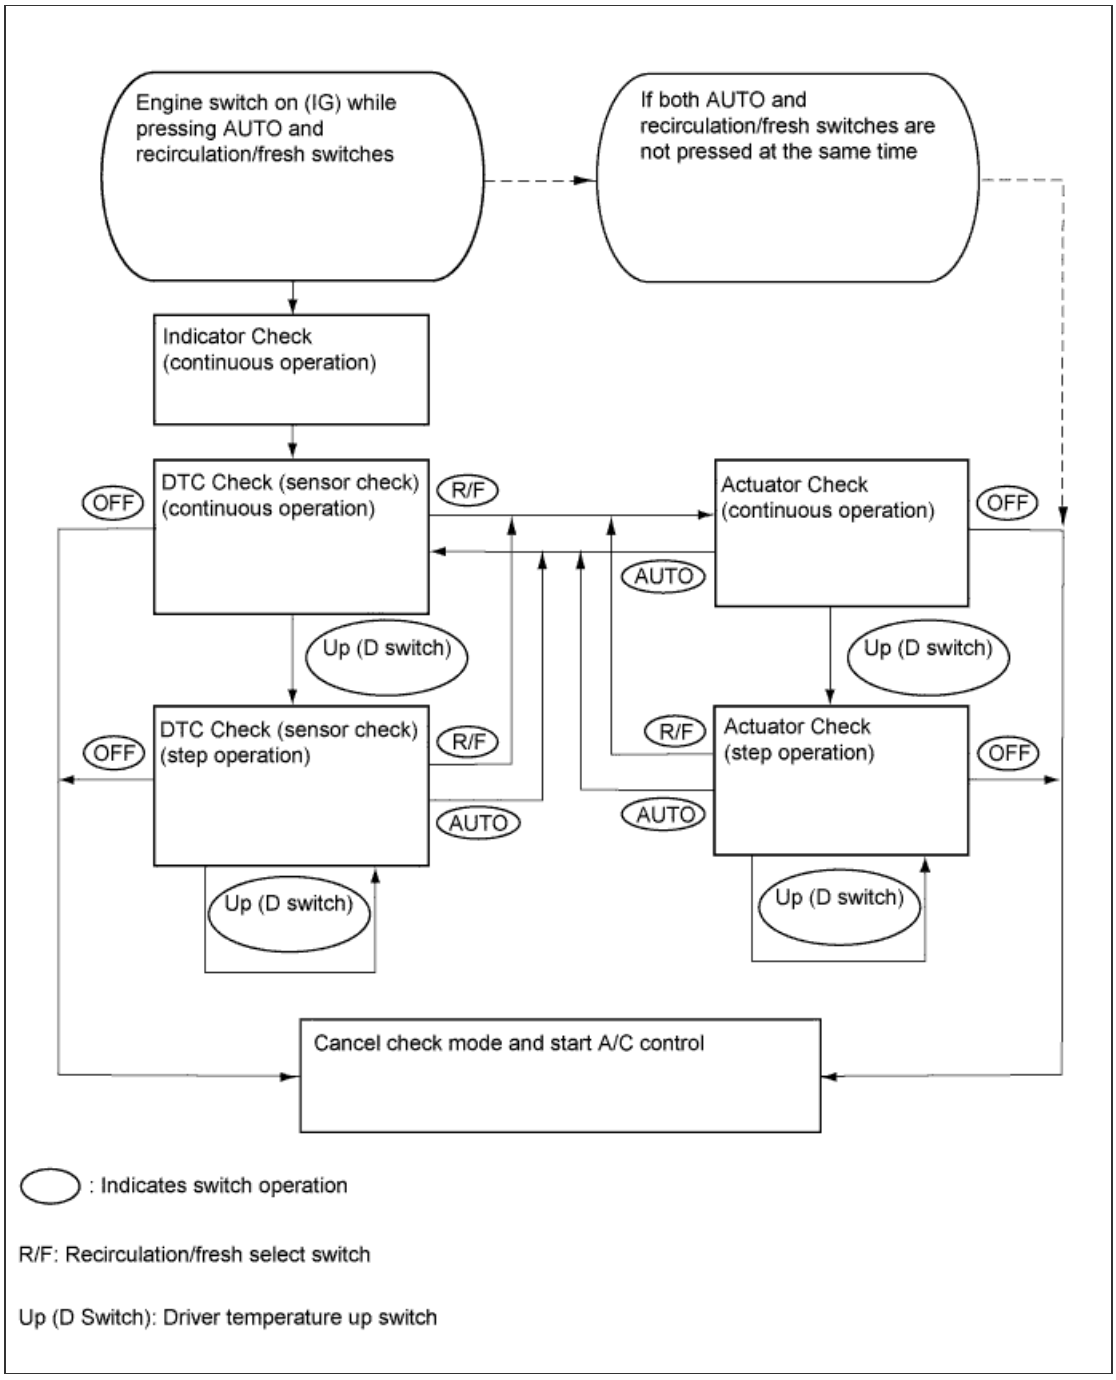


INDICATOR CHECK

a. Press and hold the A/C control AUTO switch and recirculation/fresh switch simultaneously, and turn the engine switch on (IG). Continue holding the 2 switches until the panel diagnosis mode begins.

HINT:


When the above operation is performed, each mode switch indicator light illuminates. For vehicles equipped with multi-display, each mode switch indicator light illuminates and an operation confirmation buzzer sounds.

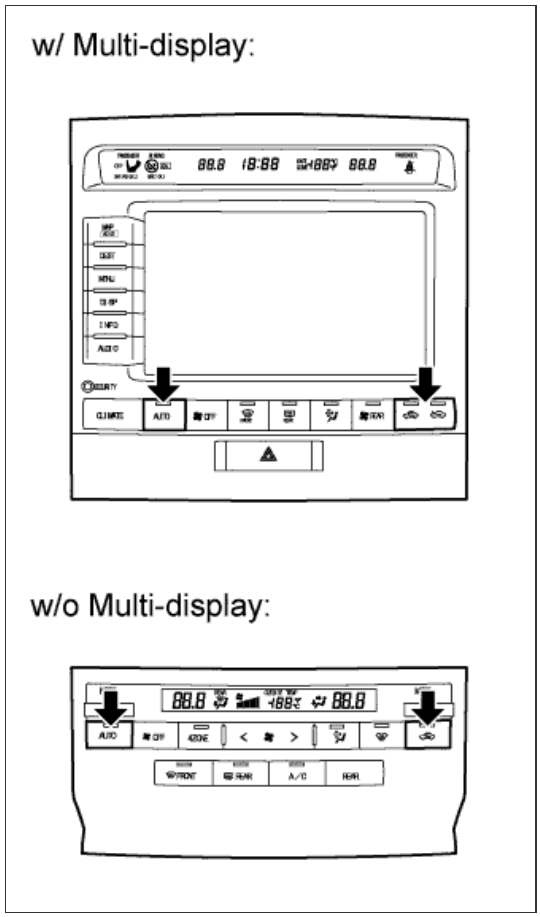

b. Check that all indicators turn on and off 4 times in succession at 1 second intervals.

HINT:

- **After the indicator check is completed, the system enters the DTC mode automatically.**
- **Press the Off switch to cancel the indicator check.**

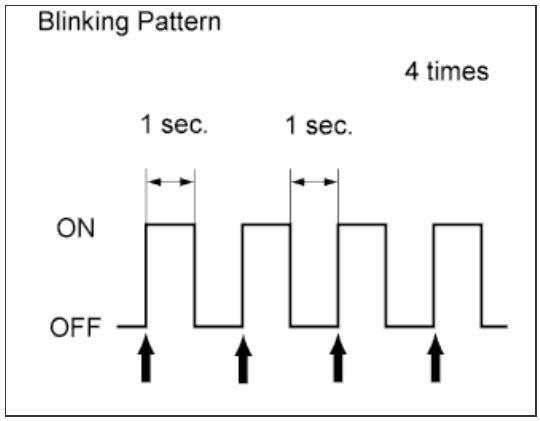


for Preparation Click here

LIST OF OPERATION METHODS

By operating each of the air conditioning control switches as shown in the diagram below, it is possible to enter the diagnostic check mode.

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

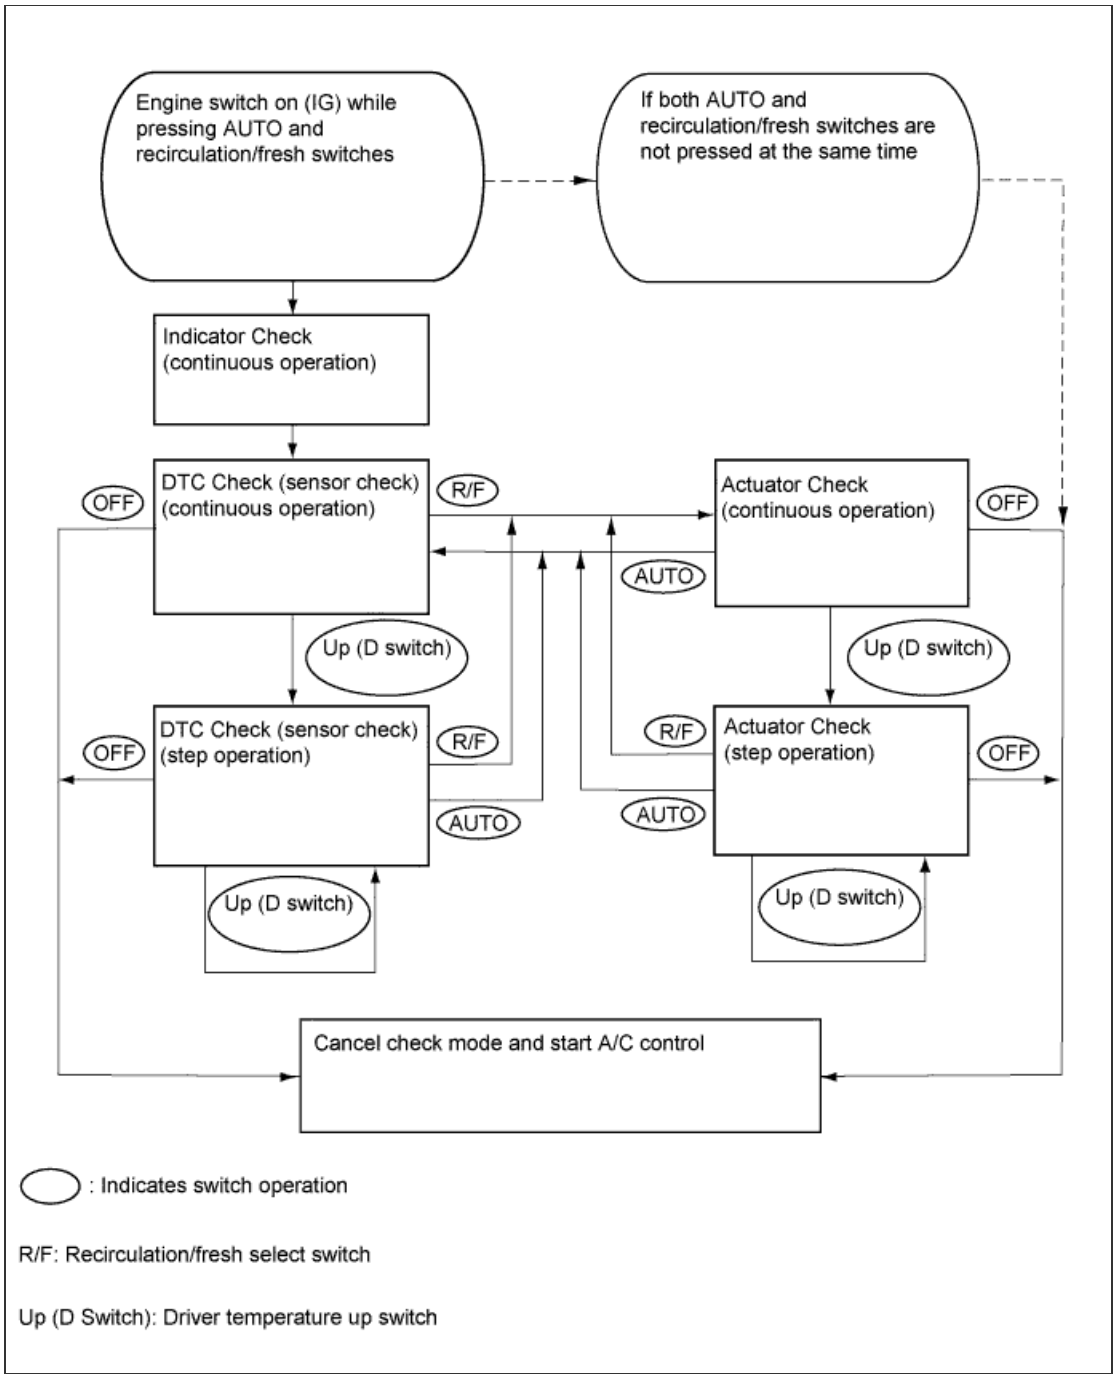

INDICATOR CHECK

a. Turn the engine switch off.

b. Turn the engine switch on (ACC) and wait at least 5 seconds.


HINT:

Vehicle with Navigation System only.

c. Turn the engine switch on (IG) while pressing the A/ C control panel "AUTO" switch and "Recirculation/ Fresh" switch simultaneously.
Hold both switches until the indicator check screen appears.

Text in Illustration


A	w/ Navigation System
B	w/o Navigation System

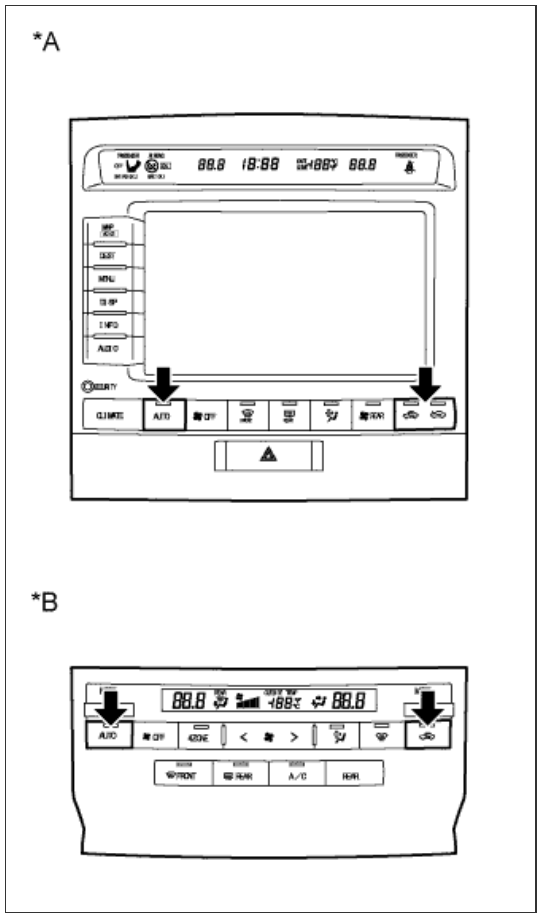

d. Check that all indicators turn on and off 4 times in succession at 1 second intervals.

HINT:

- **After the indicator check is completed, the s stem enters the DTC mode automaticall**
- **Press the Off switch to cancel the indicator check.**

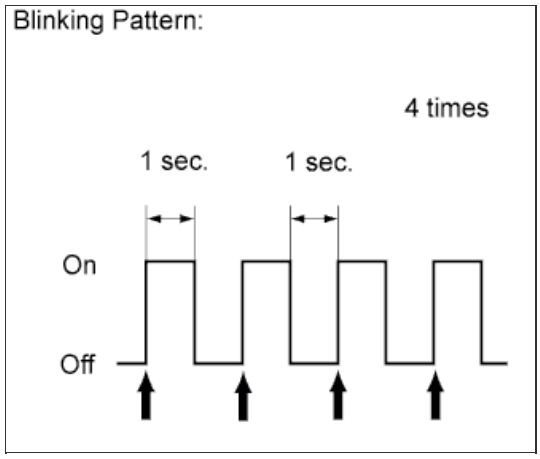

for Preparation Click here

HINT:

Using the intelligent tester to read the Data List allows the values or states of switches, sensors, actuators and other items to be read without removing any parts. This non-intrusive inspection can be very useful because intermittent conditions or signals may be discovered before parts or wiring is disturbed. Reading the Data List information early in troubleshooting is one way to save diagnostic time.

NOTICE:

In the table below, the values listed under "Normal Condition" are reference values. Do not depend solely on these reference values when deciding whether a part is faulty or not.

DATA LIST

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Air Conditioner / Data List.

e. Enter the following menus: Powertrain / Engine and ECT / Data List.

f. According to the display on the intelligent tester, read the Data List.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Room Temperature Sensor	Front room temperature sensor / Min.: -6.5°C (20.3°F) Max.: 57.25°C (135.05°F)	Actual room temperature for front seat displayed	Open in the circuit: -6.5°C (20.3°F). Short in the circuit: 57.25°C (135.05°F).
Ambient Temp Sensor	Ambient temperature sensor / Min.: -23.3°C (-9.94°F) Max.: 65.95°C (150.71°F)	Actual ambient temperature displayed	Open in the circuit: -23.3°C (-9.94°F). Short in the circuit: 65.95°C (150.71°F).
Adjusted Ambient Temp	Adjusted ambient temperature / Min.: -30.8°C (-23.44°F) Max.: 50.8°C (123.44°F)	Adjusted ambient temperature displayed	-
Evaporator Fin Thermistor	No. 1 cooler thermistor / Min.: -29.7°C (-21.46°F) Max.: 59.55°C (139.19°F)	Actual evaporator temperature displayed	Open in the circuit: -29.7°C (-21.46°F). Short in the circuit: 59.55°C (139.19°F).
Evaporator Target Temp	Target evaporator temperature / Min.: 1.5°C (34.7°F) Max.: 4.0°C (39.2°F)	Target evaporator temperature displayed	-
Solar Sensor (D Side)	Driver side solar sensor / Min.: 0, Max.: 255	Driver side solar sensor voltage increases as brightness increases	Open in the circuit: 0 Short in the circuit: 255
Solar Sensor (P Side)	Passenger side solar sensor / Min.: 0, Max.: 255	Passenger side solar sensor voltage increases as brightness increases	Open in the circuit: 0 Short in the circuit: 255
Engine Coolant Temp	Engine coolant temperature / Min.: 1.3°C (34.34°F) Max.: 90.55°C (194.99°F)	Actual engine coolant temperature displayed while engine warmed up	-
Set Temperature (D Side)	Driver side set temperature / MAX COLD: 15.5°C (59.9°F) MAX HOT: 32.5°C (90.5°F)	Driver side actual set temperature displayed	-
Set Temperature (P Side)	Passenger side set temperature / MAX COLD: 15.5°C (59.9°F) MAX HOT: 32.5°C (90.5°F)	Passenger side actual set temperature displayed	-
A/M Servo Targ Pulse (Rear D)	Rear air mix damper servo motor target pulse / Min.: 9, Max.: 54 (for LHD) Min.: 8, Max.: 53 (for RHD)	for LHD • MAX COOL: 9 (pulse) • MAX HOT: 54 (pulse) for RHD • MAX COOL: 53 (pulse)	-

		• MAX HOT: 8 (pulse)	
A/M Servo Targ Pulse (Rear P)	Rear air mix damper servo motor (for front passenger side) target pulse / Min.: 8, Max.: 53 (for LHD) Min.: 9, Max.: 54 (for RHD)	for LHD • MAX COOL: 53 (pulse) • MAX HOT: 8 (pulse) for RHD • MAX COOL: 9 (pulse) • MAX HOT: 54 (pulse)	-
Hand Free Telephone	Handsfree telephone / OFF or ON	ON: Handsfree telephone used OFF: Handsfree telephone not used	-
Blower Motor Speed Level	Blower motor speed level / Min.: 0 level, Max.: 31 level	Increases in range between 0 and 31 as blower motor speed increases	-
Regulator Pressure Sensor	Refrigerant pressure sensor / Min.: -0.4566 MPaG Max.: 3.2943 MPaG	Actual refrigerant pressure displayed	-
Room Temp Sensor (Rear)	Rear room temperature sensor / Min.: -6.5°C (20.3°F) Max.: 57.25°C (135.05°F)	Actual rear room temperature displayed	Open in the circuit: -6.5°C (20.3°F). Short in the circuit: 57.25°C (135.05°F).
Ambient Temp Sens (Rear)	No. 2 cooler thermistor / Min.: -29.7°C (-21.46°F) Max.: 59.55°C (139.19°F)	Actual rear evaporator temperature displayed	Open in the circuit: -29.7°C (-21.46°F). Short in the circuit: 59.55°C (139.19°F).
Blower Motor Level (Rear)	Rear blower motor speed level / Min.: 0, Max.: 31	Increases in range between 0 to 31 as rear blower motor speed increases	-
Air Mix Servo Targ Pulse(D)	Air mix damper servo motor (for driver side) target pulse / Min.: 8, Max.: 90 (for LHD) Min.: 8, Max.: 90 (for RHD)	for LHD • MAX COOL: 90 (pulse) • MAX HOT: 8 (pulse) for RHD • MAX COOL: 8 (pulse) • MAX HOT: 90 (pulse)	-
Air Mix Servo Targ Pulse(P)	Air mix damper servo motor (for front passenger side) target pulse / Min.: 8, Max.: 90 (for LHD) Min.: 8, Max.: 90 (for RHD)	for LHD • MAX COOL: 8 (pulse) • MAX HOT: 90 (pulse) for RHD • MAX COOL: 90 (pulse) • MAX HOT: 8 (pulse)	-
Air Inlet Damper Targ Pulse	REC/FRS damper servo motor target pulse / Min.: 9, Max.: 37	for LHD Recirculation: 37 (pulse) Fresh: 9 (pulse) for RHD Recirculation: 9 (pulse) Fresh: 37 (pulse)	-
Cool Air Bypass Pulse	Cool air bypass damper servo motor target pulse / Min.: 6, Max.: 57	Shut: 6 (pulse) Open: 57 (pulse)	-
Electric Heater Count	Electric heater count / Min.: 0, Max.: 3	-	-
Shift Set Temperature	Shift set temperature / +2 C, +1 C, NORMAL, -1 C, -2 C	Customized value displayed	-
Air Inlet Mode	Air inlet mode / AUTO, MANUAL	Customized value displayed	-
Compressor Mode	Compressor mode / AUTO, MANUAL	Customized value displayed	-
Compressor/DEF Mode	Compressor/DEF mode / LINK, NORMAL	Customized value displayed	-
Evaporator Control	Evaporator control / AUTO, MANUAL	Customized value displayed	-
Button Press Buzzer	Button press buzzer / ON or OFF	Customized value displayed	-
Foot/DEF Auto Mode	FOOT/DEF auto mode / ON or OFF	Customized value displayed	-
Foot/DEF Auto Blow Up	FOOT/DEF auto blower up function / ON or OFF	Customized value displayed	-
Filter Sensor	Filter sensor / LESS, NORMAL, MORE	Customized value displayed	-
Rear A/P HI Set	Rear A/P HI set / ON or OFF	Customized value displayed	-
Ambient Temperature Shift	Ambient temperature shift / +3 C, +2 C, +1 C, NORMAL, -1 C, -2 C, -3 C	Customized value displayed	-

A/O Damper FACE Pos(D)	Air outlet damper servo motor (for driver side mode) target pulse / Min.: 6, Max.: 117	FACE1: 117 (pulse) FACE2: 109 (pulse) B/L1: 93 (pulse) B/L2: 81 (pulse) FOOT-F: 41 (pulse) FOOT-R: 41 (pulse) FOOT-D: 52 (pulse) F/D: 18 (pulse) DEF: 6 (pulse)	-
A/O Damper FACE Pos(P)	Air outlet damper servo motor (for front passenger side mode) target pulse / Min.: 6, Max.: 117 (for LHD) Min.: 9, Max.: 120 (for RHD)	for LHD • FACE1: 117 (pulse) • FACE2: 109 (pulse) • B/L1: 93 (pulse) • B/L2: 81 (pulse) • FOOT-F: 41 (pulse) • FOOT-R: 41 (pulse) • FOOT-D: 52 (pulse) • F/D: 18 (pulse) • DEF: 6 (pulse) for RHD • FACE1: 9 (pulse) • FACE2: 17 (pulse) • B/L1: 33 (pulse) • B/L2: 45 (pulse) • FOOT-F: 85 (pulse) • FOOT-R: 85 (pulse) • FOOT-D: 74 (pulse) • F/D: 108 (pulse) • DEF: 120 (pulse)	-
Air Mix Servo Targ Pls(F&R D)	Front air mix damper servo motor (for driver side rear air flow) target pulse / Min.: 13, Max.: 41 (for LHD) Min.: 5, Max.: 33 (for RHD)	for LHD • MAX COOL: 13 (pulse) • MAX HOT: 41 (pulse) for RHD • MAX COOL: 33 (pulse) • MAX HOT: 5 (pulse)	-
Air Mix Servo Targ Pls(F&R P)	Front air mix damper servo motor (for front passenger side rear air flow) target pulse / Min.: 5, Max.: 33 (for LHD) Min.: 13, Max.: 41 (for RHD)	for LHD • MAX COOL: 33 (pulse) • MAX HOT: 5 (pulse) for RHD • MAX COOL: 13 (pulse) • MAX HOT: 41 (pulse)	-
Air Outlet Servo Pls (F&R D)	Air outlet damper servo motor (for rear seat mode) target pulse / Min.: 9, Max.: 79	FACE1: 9 (pulse) B/L1: 28 (pulse) FOOT-O: 41 (pulse) F/D: 67 (pulse) DEF: 79 (pulse)	-
Air Outlet Servo Pulse (R)	Rear air outlet damper servo motor target pulse / Min.: 7, Max.: 83	FOOT: 7 (pulse) B/L: 42 (pulse) FACE: 83 (pulse)	-
Room Temperature Sensor (RP)	Rear room temperature sensor / Min.: -6.5°C (20.3°F) Max.: 57.25°C (135.05°F)	Actual rear room temperature displayed	Open in the circuit: -6.5°C (20.3°F) Short in the circuit: 57.25°C (135.05°F)
Set Temperature (Rear D side)	Rear driver side set temperature / MAX COLD: 0°C (32°F) MAX HOT: 32°C (54°F)	Rear driver side actual set temperature displayed	-
Set Temperature (Rear P side)	Rear passenger side set temperature / MAX COLD: 0°C (32°F) MAX HOT: 32°C (54°F)	Rear passenger side actual set temperature displayed	-
Pls Servo Test Sts	Pulse servo motor test status / 00, 01, 02, 03, 04	Not in effect: 00 During test: 01 Completed without malfunction: 02 Completed with malfunction: 03 Interrupted: 04	-
Foot Duct Sensor(Rear D)	Min.: -12.7°C (9.14°F) Max.: 76.55°C (169.79°F)	Actual air duct temperature sensor (for driver side) displayed	Open in the circuit: -12.7°C (9.14°F) Short in the circuit: 76.55°C (169.79°F)
Foot Duct Sensor(Rear P)	Min.: -12.7°C (9.14°F) Max.: 76.55°C (169.79°F)	Actual air duct temperature sensor (for passenger side) displayed	Open in the circuit: -12.7°C (9.14°F) Short in the circuit: 76.55°C (169.79°F)

Number of Trouble Codes	Number of trouble codes / Min.: 0, Max.: 255	Number of DTCs displayed	-
A/O Damper FOOT/DEF Pos(P)	Air outlet damper servo motor (for DEF mode) target pulse / Min.: 6, Max.: 117	• FACE1: 117 (pulse) • FACE2: 109 (pulse) • B/L1: 93 (pulse) • B/L2: 81 (pulse) • FOOT-D: 52 (pulse) • FOOT-R: 41 (pulse) • FOOT-F: 41 (pulse) • F/D: 18 (pulse) • DEF: 6 (pulse)	-

Engine

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
A/C Signal	A/C signal / ON or OFF	ON: A/C Switch on OFF: A/C Switch off	-

ACTIVE TEST

HINT:

Using the intelligent tester to perform Active Tests allows relays, VSVs, actuators and other items to be operated without removing any parts. This non-intrusive functional inspection can be very useful because intermittent operation may be discovered before parts or wiring is disturbed. Performing Active Tests early in troubleshooting is one way to save diagnostic time. Data List information can be displayed while performing Active Tests.

a. Connect the intelligent tester to the DLC3.

b. Turn the engine switch on (IG).

c. Turn the intelligent tester on.

d. Enter the following menus: Body / Air Conditioner / Active Test.

e. According to the display on the intelligent tester, perform the Active Test.

Tester Display	Test Part	Control Range	Diagnostic Note
Blower Motor	Front blower motor	Min.: 0, Max.: 31	-
Magnetic Clutch Relay	Magnetic clutch relay	OFF or ON	-
Air Mix Servo Targ Pulse(D)	Air mix servo motor pulse (Front A/C D side)	Min.: 8, Max.: 90	-
Air Mix Servo Targ Pulse(P)	Air mix servo motor pulse (Front A/C P side)	Min.: 8, Max.: 90	-
Air Inlet Damper Targ Pulse	Air inlet damper target pulse	Min.: 9, Max.: 37	-
Cool Air Bypass Pulse	Driver side cool air bypass pulse	Min.: 6, Max.: 57	-
Rear Blower Motor	Rear blower motor	Min.: 0, Max.: 31	-
Rear A/C Mag Valve	Rear A/C magnetic valve	OFF or ON	-
Face A/O Servo Pulse(D)	Air outlet servo motor pulse (D side)	Min.: 6, Max.: 117	-
Face A/O Servo Pulse(P)	Air outlet servo motor pulse (P side)	for LHD • Min.: 6 • Max.: 117 for RHD • Min.: 9 • Max.: 120	-
A/M Servo Puls(F&R D)	Air mix servo motor pulse (Front A/C rear air flow D side)	for LHD • Min.: 9 • Max.: 54 for RHD • Min.: 8 • Max.: 53	-
A/M Servo Puls(F&R P)	Air mix servo motor pulse (Front A/C rear air flow P side)	for LHD • Min.: 8 • Max.: 53 for RHD • Min.: 9 • Max.: 54	-
A/O Servo Pulse(F&R D)	Air outlet servo motor pulse (Front A/C rear air flow D side)	Min.: 9, Max.: 79	-

A/O Servo Pulse(Rr D)	Air outlet servo motor pulse (Rr D side)	Min.: 7, Max.: 83	-

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Air Conditioning Amplifier

DTC Code	Detection Item	Trouble Area	Memory*	Diagnostic Note	See page
B1411/11	Room Temperature Sensor Circuit	- Front room temperature sensor - Harness or connector between room temperature sensor and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (8.5 min. or more)	If the front side room temperature is approx. -18.6 C (-1.48 F) or less, DTC B1411/11 may be output even though the system is normal.	Click here
B1412/12	Ambient Temperature Sensor Circuit	- Ambient temperature sensor - Harness or connector between ambient temperature sensor and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (8.5 min. or more)	If ambient temperature is approx. -52.9 C (-63.22 F) or less, a malfunction code may be output even though the system is normal.	Click here
B1413/13	aporator Temperature Sensor Circuit	- No. 1 cooler thermistor - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (8.5 min. or more)	-	Click here
B1417/17	Rear aporator Temperature Sensor Circuit	- Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly - No. 2 air conditioning harness assembly (No. 2 cooler thermistor) - Air conditioning amplifier assembly	Stored (8.5 min. or more)	-	Click here
B1419/19	Rear Room Temperature Sensor Circuit	- Rear room temperature sensor LH - Harness or connector between rear room temperature sensor LH and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (30 sec.)	If the rear driver side room temperature is approx. -18.6 C (-1.48 F) or less, DTC B1419/19 may be output even though the system is normal.	Click here
B1421/21	Solar Sensor Circuit (Passenger Side)	- Automatic light control sensor (solar sensor) - Harness or connector between solar sensor and air conditioning amplifier assembly - Harness or connector between solar sensor and main body CU (cowl side unction block LH) - Main body CU (cowl side unction block LH) - Air conditioning amplifier assembly	Stored (8.5 min. or more)	If the check is performed in a dark place, DTC B1424/24 (solar sensor circuit (driver side)) may be output.	Click here
B1422/22	Compressor Lock Sensor Circuit	- Cooler compressor assembly (A/C lock sensor) - Compressor drive belt - Harness or connector between cooler compressor assembly and air conditioning amplifier assembly - Air conditioning amplifier assembly - CAN communication line	-	-	Click here
B1423/23	Pressure Sensor Circuit	- Pressure sensor - Harness or connector - Cooler expansion valve (blocked, stuck) - Cooler condenser assembly (blocked, deterioration of cooling capacity due to dirt) - Cooler dryer (moisture in the refrigerant cycle cannot be absorbed) - Condenser fan (condenser cannot be cooled down) - Air conditioning system (leaks, blocked) - Refrigerant pipe line - Air conditioning amplifier assembly	-	-	Click here

B1424/24	Solar Sensor Circuit (Driver Side)	- Automatic light control sensor (solar sensor) - Harness or connector between solar sensor and air conditioning amplifier assembly - Harness or connector between solar sensor and main body CU (cowl side unction block LH) - Main body CU (cowl side unction block LH) - Air conditioning amplifier assembly	Stored (8.5 min. or more)	If the check is performed in a dark place, DTC B1421/21 (solar sensor circuit (passenger side)) may be output.	Click here
B1429/29	Rear Air Foot Duct Sensor Circuit on Front Passenger Side	- Air duct temperature sensor RH - Harness or connector (air duct temperature sensor RH) - Air conditioning amplifier assembly	Stored (8.5 min. or more)	-	Click here
B1441/41	Air Mix Damper Control Servo Motor Circuit (Passenger Side)	- Air mix servo motor (for front passenger side) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1442/42	Air Inlet Damper Control Servo Motor Circuit	- R C/FRS damper servo motor - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1443/43	Air Outlet Damper Control Servo Motor Circuit	- Air outlet damper servo motor (for driver side mode) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1445/45	Passenger Side Cool Air Bypass Damper Control	- Cool air bypass damper servo motor - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1446/46	Air Mix Damper Control Servo Motor Circuit (Driver Side)	- Air mix damper servo motor (for driver side) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1447/47	Rear Air Mix Damper Control Servo Motor Circuit on Driver Side	- Rear air mix damper servo motor LH - No. 2 air conditioning harness assembly - Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1448/48	Passenger Side FAC Servo Motor Circuit	- Air outlet damper servo motor (for front passenger side mode) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1449/49	Rear Air Outlet Damper Control Servo Motor Circuit	- Rear air outlet damper servo motor - No. 2 air conditioning harness assembly - Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1455/55	Driver Side Air Outlet Damper FOOT/D F Control Servo Motor Circuit	- Air outlet damper servo motor (for D F mode) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1457/57	Driver Side Air Outlet Damper Control Servo Motor Circuit	- Front air mix damper servo motor (for driver side rear air flow) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1458/58	Passenger Side Air Outlet Damper Control Servo Motor Circuit	- Front air mix damper servo motor (for front passenger side rear air flow) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1467/67	Rear Air Foot Duct Sensor Circuit on Driver Side	- Air duct temperature sensor LH - Harness or connector (air duct temperature sensor LH) - Air conditioning amplifier assembly	Stored (8.5 min. or more)	-	Click here
B1468/68	Rear Passenger Side Room Temperature Sensor Circuit	- Rear room temperature sensor RH - Harness or connector between rear room temperature sensor RH and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (8.5 min. or more)	If the rear passenger side room temperature is approx. -18.6 C (-1.48 F) or less, DTC B1468/68 may be output even though the system is normal.	Click here

B1486/86	Driver Side Air Outlet Damper Control Servo Motor Circuit	- Air outlet damper servo motor (for rear seat mode) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1488/88	Rear Air Mix Damper Control Servo Motor Circuit on Front Passenger Side	- Rear air mix damper servo motor RH - No. 2 air conditioning harness assembly - Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1497/97	BUS IC Communication Malfunction	- Air conditioning harness assembly - Air conditioning amplifier assembly	-	-	Click here
B1499/99	Multiplex Communication Circuit	- Air conditioning amplifier assembly - CM - Meter CU - CAN communication line	-	-	Click here

* The air conditioning amplifier memorizes the DTC of the respective malfunction that has occurred for the period of the time indicated in the brackets.

for Preparation Click here

HINT:

If a trouble code is output during the DTC check, inspect the trouble areas listed for that code. For details of the code, refer to the "See page" below.

Air Conditioning Amplifier

DTC Code	Detection Item	Trouble Area	Memory*	Diagnostic Note	See page
B1411/11	Room Temperature Sensor Circuit	- Front room temperature sensor - Harness or connector between room temperature sensor and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (8.5 min. or more)	If the front side room temperature is approx. -18.6 C (-1.48 F) or less, DTC B1411/11 may be output even though the system is normal.	Click here
B1412/12	Ambient Temperature Sensor Circuit	- Ambient temperature sensor - Harness or connector between ambient temperature sensor and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (8.5 min. or more)	If ambient temperature is approx. -52.9 C (-63.22 F) or less, a malfunction code may be output even though the system is normal.	Click here
B1413/13	aporator Temperature Sensor Circuit	- No. 1 cooler thermistor - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (8.5 min. or more)	-	Click here
B1417/17	Rear aporator Temperature Sensor Circuit	- Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly - No. 2 air conditioning harness assembly (No. 2 cooler thermistor) - Air conditioning amplifier assembly	Stored (8.5 min. or more)	-	Click here
B1419/19	Rear Room Temperature Sensor Circuit	- Rear room temperature sensor LH - Harness or connector between rear room temperature sensor LH and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (30 sec.)	If the rear driver side room temperature is approx. -18.6 C (-1.48 F) or less, DTC B1419/19 may be output even though the system is normal.	Click here
B1421/21	Solar Sensor Circuit (Passenger Side)	- Automatic light control sensor (solar sensor) - Harness or connector between solar sensor and air conditioning amplifier assembly - Harness or connector between solar sensor and main body CU (cowl side unction block LH) - Main body CU (cowl side unction block LH) - Air conditioning amplifier assembly	Stored (8.5 min. or more)	If the check is performed in a dark place, DTC B1424/24 (solar sensor circuit (driver side)) may be output.	Click here
B1422/22	Compressor Lock Sensor Circuit	- Cooler compressor assembly (A/C lock sensor) - Compressor drive belt - Harness or connector between cooler compressor assembly and air conditioning amplifier assembly - Air conditioning amplifier assembly - CAN communication line	-	-	Click here
B1423/23	Pressure Sensor Circuit	- Pressure sensor - Harness or connector - Cooler expansion valve (blocked, stuck) - Cooler condenser assembly (blocked, deterioration of cooling capacity due to dirt) - Cooler dryer (moisture in the refrigerant cycle cannot be absorbed) - Condenser fan (condenser cannot be cooled down) - Air conditioning system (leaks, blocked) - Refrigerant pipe line - Air conditioning amplifier assembly	-	-	Click here

B1424/24	Solar Sensor Circuit (Driver Side)	- Automatic light control sensor (solar sensor) - Harness or connector between solar sensor and air conditioning amplifier assembly - Harness or connector between solar sensor and main body CU (cowl side unction block LH) - Main body CU (cowl side unction block LH) - Air conditioning amplifier assembly	Stored (8.5 min. or more)	If the check is performed in a dark place, DTC B1421/21 (solar sensor circuit (passenger side)) may be output.	Click here
B1429/29	Rear Air Foot Duct Sensor Circuit on Front Passenger Side	- Air duct temperature sensor RH - Harness or connector (air duct temperature sensor RH) - Air conditioning amplifier assembly	Stored (8.5 min. or more)	-	Click here
B1441/41	Air Mix Damper Control Servo Motor Circuit (Passenger Side)	- Air mix servo motor (for front passenger side) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1442/42	Air Inlet Damper Control Servo Motor Circuit	- R C/FRS damper servo motor - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1443/43	Air Outlet Damper Control Servo Motor Circuit	- Air outlet damper servo motor (for driver side mode) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1445/45	Passenger Side Cool Air Bypass Damper Control	- Cool air bypass damper servo motor - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1446/46	Air Mix Damper Control Servo Motor Circuit (Driver Side)	- Air mix damper servo motor (for driver side) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1447/47	Rear Air Mix Damper Control Servo Motor Circuit on Driver Side	- Rear air mix damper servo motor LH - No. 2 air conditioning harness assembly - Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1448/48	Passenger Side FAC Servo Motor Circuit	- Air outlet damper servo motor (for front passenger side mode) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1449/49	Rear Air Outlet Damper Control Servo Motor Circuit	- Rear air outlet damper servo motor - No. 2 air conditioning harness assembly - Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1455/55	Driver Side Air Outlet Damper FOOT/D F Control Servo Motor Circuit	- Air outlet damper servo motor (for D F mode) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1457/57	Driver Side Air Outlet Damper Control Servo Motor Circuit	- Front air mix damper servo motor (for driver side rear air flow) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1458/58	Passenger Side Air Outlet Damper Control Servo Motor Circuit	- Front air mix damper servo motor (for front passenger side rear air flow) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1467/67	Rear Air Foot Duct Sensor Circuit on Driver Side	- Air duct temperature sensor LH - Harness or connector (air duct temperature sensor LH) - Air conditioning amplifier assembly	Stored (8.5 min. or more)	-	Click here
B1468/68	Rear Passenger Side Room Temperature Sensor Circuit	- Rear room temperature sensor RH - Harness or connector between rear room temperature sensor RH and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (8.5 min. or more)	If the rear passenger side room temperature is approx. -18.6 C (-1.48 F) or less, DTC B1468/68 may be output even though the system is normal.	Click here

B1486/86	Driver Side Air Outlet Damper Control Servo Motor Circuit	- Air outlet damper servo motor (for rear seat mode) - Air conditioning harness assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1488/88	Rear Air Mix Damper Control Servo Motor Circuit on Front Passenger Side	- Rear air mix damper servo motor RH - No. 2 air conditioning harness assembly - Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly - Air conditioning amplifier assembly	Stored (30 sec.)	-	Click here
B1497/97	BUS IC Communication Malfunction	- Air conditioning harness assembly - Air conditioning amplifier assembly	-	-	Click here
B1499/99	Multiplex Communication Circuit	- Air conditioning amplifier assembly - CM - Meter CU - CAN communication line	-	-	Click here

* The air conditioning amplifier memorizes the DTC of the respective malfunction that has occurred for the period of the time indicated in the brackets.

DTC B1411/11 Room Temperature Sensor Circuit


for Preparation Click here


DESCRIPTION

The front room temperature sensor for the front seat is installed in the instrument panel to detect the room temperature and control the heater and air conditioner "auto" mode. The resistance of the room temperature sensor changes in accordance with the front room temperature. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.
The air conditioning amplifier assembly applies voltage (5 V) to the front room temperature sensor and reads voltage changes as the resistance of the front room temperature sensor changes. This sensor also sends the appropriate signals to the air conditioning amplifier assembly.

DTC Code	DTC Detection Condition	Trouble Area
B1411/11	An open or short in the front room temperature sensor circuit.	• Front room temperature sensor • Harness or connector between room temperature sensor and air conditioning amplifier assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

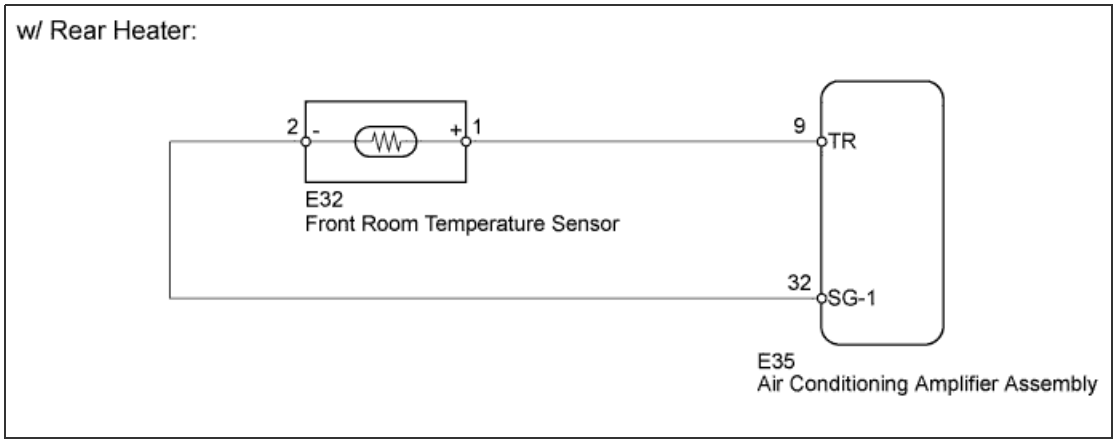

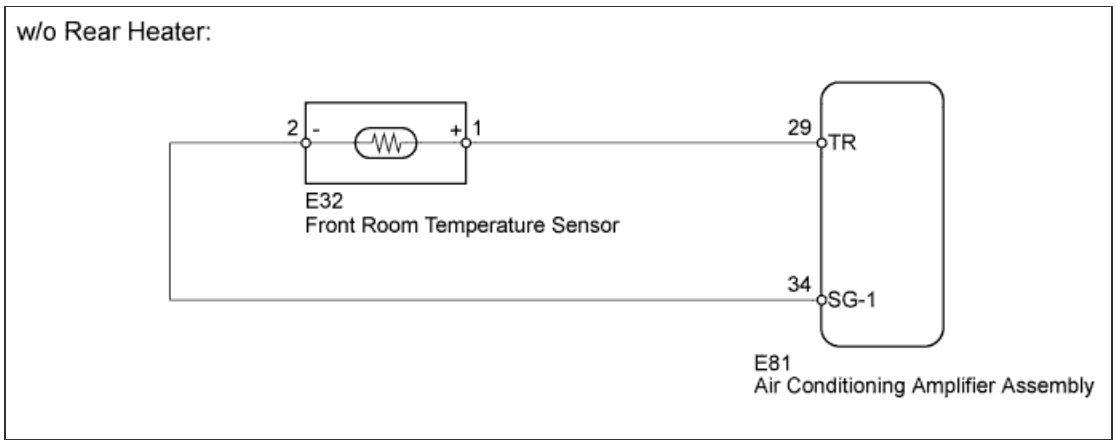

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FRONT ROOM TEMPERATURE SENSOR)

a. Use the Data List to check if the front room temperature sensor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Room Temperature Sensor	Front room temperature sensor / Min.: -6.5°C (20.3°F) Max.: 57.25°C (135.05°F)	Actual room temperature for front seat displayed	Open in the circuit: -6.5°C (20.3°F). Short in the circuit: 57.25°C (135.05°F).

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.INSPECT ROOM TEMPERATURE SENSOR

a. Remove the front room temperature sensor (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	10°C (50°F)	3.00 to 3.73 kΩ
	15°C (59°F)	2.45 to 2.88 kΩ
	20°C (68°F)	1.95 to 2.30 kΩ
	25°C (77°F)	1.60 to 1.80 kΩ
	30°C (86°F)	1.28 to 1.47 kΩ
	35°C (95°F)	1.00 to 1.22 kΩ
	40°C (104°F)	0.80 to 1.00 kΩ
	45°C (113°F)	0.65 to 0.85 kΩ
	50°C (122°F)	0.50 to 0.70 kΩ
	55°C (131°F)	0.44 to 0.60 kΩ
	60°C (140°F)	0.36 to 0.50 kΩ

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

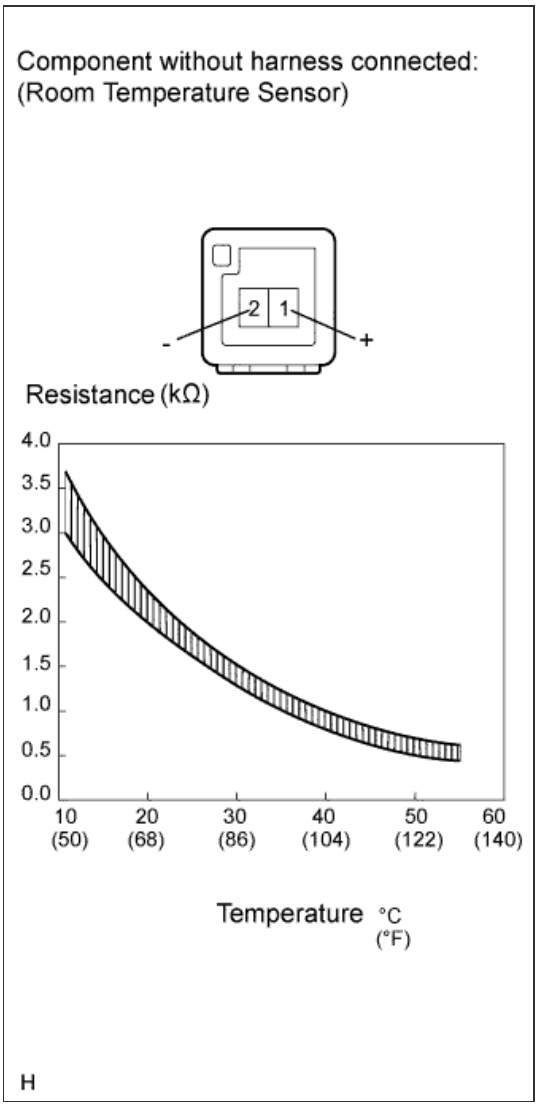

NG → REPLACE FRONT ROOM TEMPERATURE SENSOR (Click here)

OK

3.CHECK HARNESS AND CONNECTOR (FRONT ROOM TEMPERATURE SENSOR - AIR CONDITIONING AMPLIFIER)

a. w/ Rear Heater

i. Disconnect the E32 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E32-1 (+) - E35-9 (TR)	Always	Below 1 Ω
E32-2 (-) - E35-		

32 (SG-1)		
E35-9 (TR) - Body ground	Always	10 kΩ or higher
E35-32 (SG-1) - Body ground		

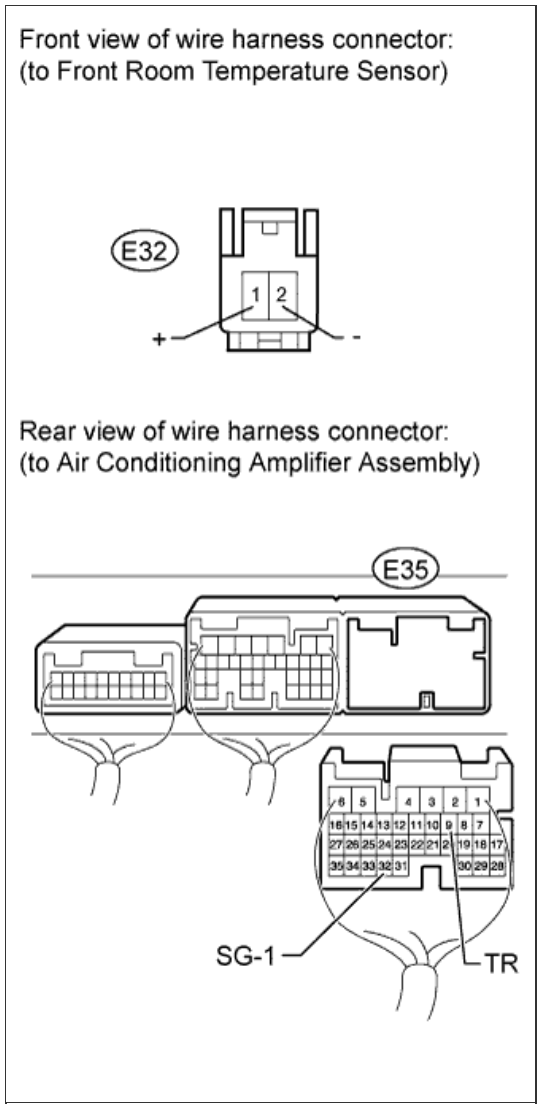

b. w/o Rear Heater


i. Disconnect the E32 sensor connector.

ii. Disconnect the E81 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E32-1 (+) - E81-29 (TR)	Always	Below 1 Ω
E32-2 (-) - E81-34 (SG-1)		
E81-29 (TR) - Body ground	Always	10 kΩ or higher
E81-34 (SG-1) - Body ground		

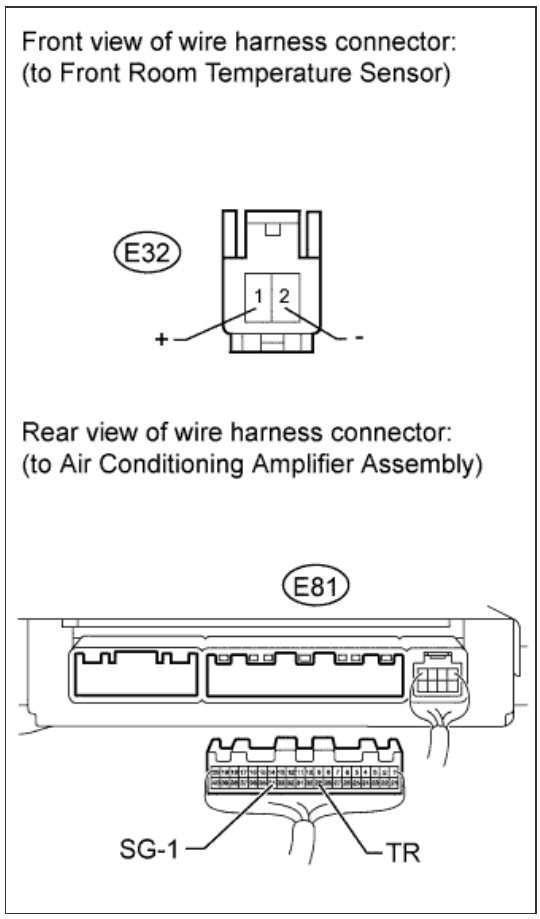

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1445/45 Passenger Side Cool Air Bypass Damper Control

for Preparation Click here

DESCRIPTION


The cool air bypass damper servo motor sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the cool air bypass damper to any position. As a result, when the air conditioner is operating, the temperature of the air blowing toward the head area is controlled.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1445/45	The cool air bypass damper position does not change even if the air conditioning amplifier assembly operates the cool air bypass damper servo motor.	• Cool air bypass damper servo motor • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRA

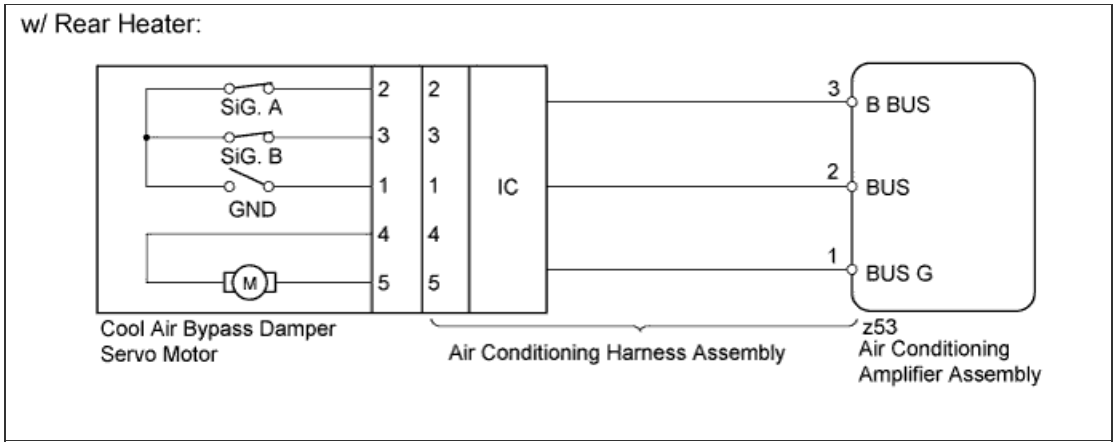

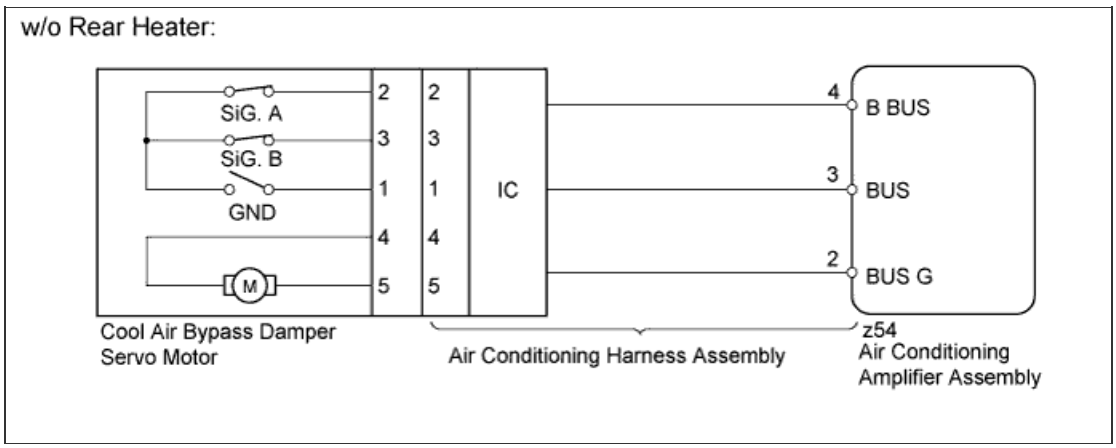

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (COOL AIR BYPASS DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Cool Air Bypass Pulse	Cool air bypass damper servo motor target pulse / Min.: 6, Max.: 57	Shut: 6 (pulse) Open: 57 (pulse)	-

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING A PLIFIER ASSE BLY (Click here)

2.CHECK COOL AIR BYPASS DA PER SERVO OTOR (OPERATION)

a. for LHD:

i. Replace the cool air bypass damper servo motor (Click here).

b. for RHD:

i. Replace the cool air bypass damper servo motor (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1445 is not o tp t.

Res lt

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE COOL AIR BYPASS DA PER SERVO OTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSE BLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSE BLY (Click here)

A

REPLACE COOL AIR BYPASS DA PER SERVO OTOR (Click here)

DTC B1411/11 Room Temperature Sensor Circuit


for Preparation Click here


DESCRIPTION

The front room temperature sensor for the front seat is installed in the instrument panel to detect the room temperature and control the heater and air conditioner "auto" mode. The resistance of the room temperature sensor changes in accordance with the front room temperature. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.
The air conditioning amplifier assembly applies voltage (5 V) to the front room temperature sensor and reads voltage changes as the resistance of the front room temperature sensor changes. This sensor also sends the appropriate signals to the air conditioning amplifier assembly.

DTC Code	DTC Detection Condition	Trouble Area
B1411/11	An open or short in the front room temperature sensor circuit.	• Front room temperature sensor • Harness or connector between room temperature sensor and air conditioning amplifier assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

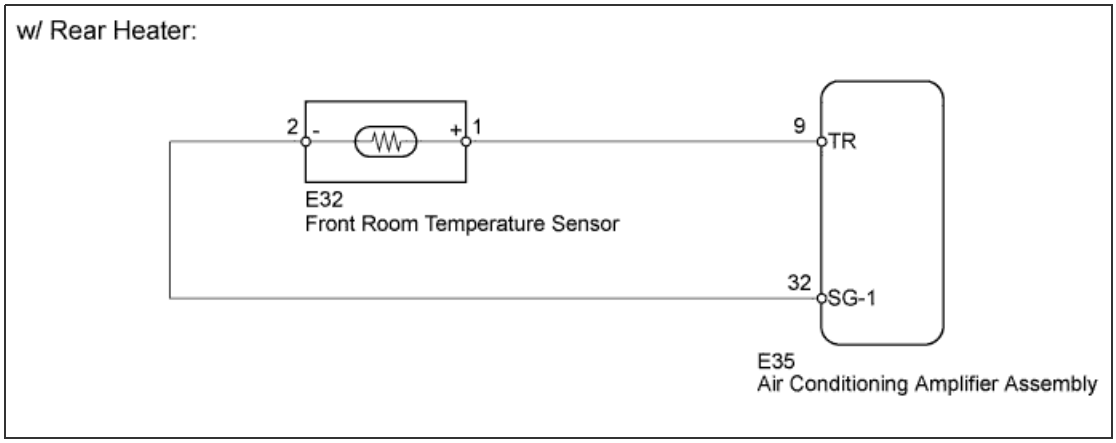

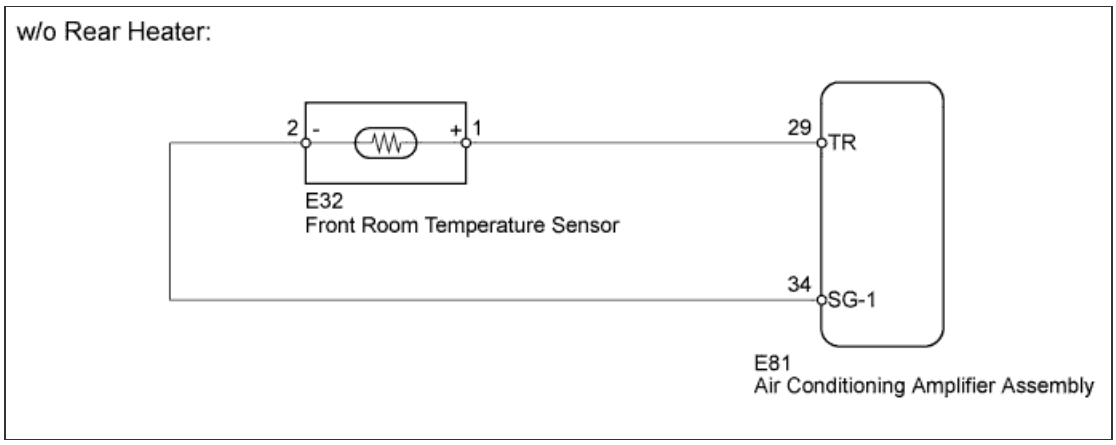

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FRONT ROOM TEMPERATURE SENSOR)

a. Use the Data List to check if the front room temperature sensor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Room Temperature Sensor	Front room temperature sensor / Min.: -6.5°C (20.3°F) Max.: 57.25°C (135.05°F)	Actual room temperature for front seat displayed	Open in the circuit: -6.5°C (20.3°F). Short in the circuit: 57.25°C (135.05°F).

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.INSPECT ROOM TEMPERATURE SENSOR

a. Remove the front room temperature sensor (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	10°C (50°F)	3.00 to 3.73 kΩ
	15°C (59°F)	2.45 to 2.88 kΩ
	20°C (68°F)	1.95 to 2.30 kΩ
	25°C (77°F)	1.60 to 1.80 kΩ
	30°C (86°F)	1.28 to 1.47 kΩ
	35°C (95°F)	1.00 to 1.22 kΩ
	40°C (104°F)	0.80 to 1.00 kΩ
	45°C (113°F)	0.65 to 0.85 kΩ
	50°C (122°F)	0.50 to 0.70 kΩ
	55°C (131°F)	0.44 to 0.60 kΩ
	60°C (140°F)	0.36 to 0.50 kΩ

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

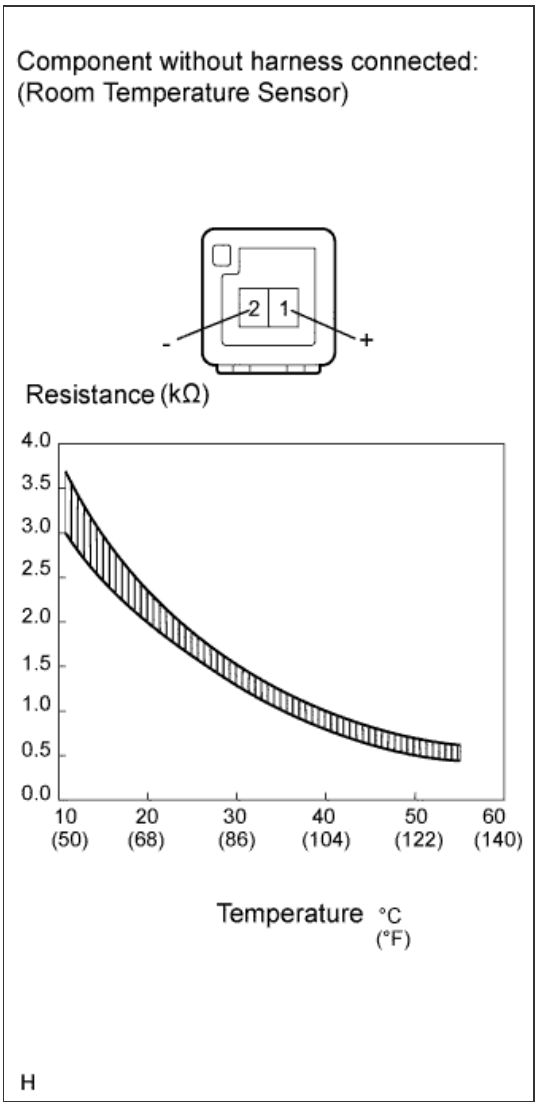

NG → REPLACE FRONT ROOM TEMPERATURE SENSOR (Click here)

OK

3.CHECK HARNESS AND CONNECTOR (FRONT ROOM TEMPERATURE SENSOR - AIR CONDITIONING AMPLIFIER)

a. w/ Rear Heater

i. Disconnect the E32 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E32-1 (+) - E35-9 (TR)	Always	Below 1 Ω
E32-2 (-) - E35-		

32 (SG-1)		
E35-9 (TR) - Body ground	Always	10 kΩ or higher
E35-32 (SG-1) - Body ground		

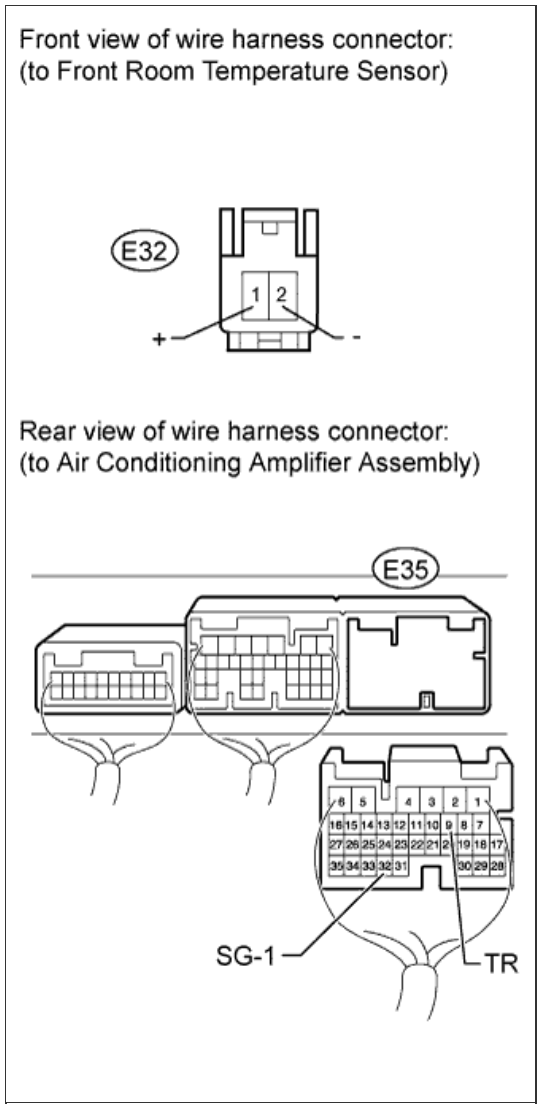

b. w/o Rear Heater


i. Disconnect the E32 sensor connector.

ii. Disconnect the E81 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E32-1 (+) - E81-29 (TR)	Always	Below 1 Ω
E32-2 (-) - E81-34 (SG-1)		
E81-29 (TR) - Body ground	Always	10 kΩ or higher
E81-34 (SG-1) - Body ground		

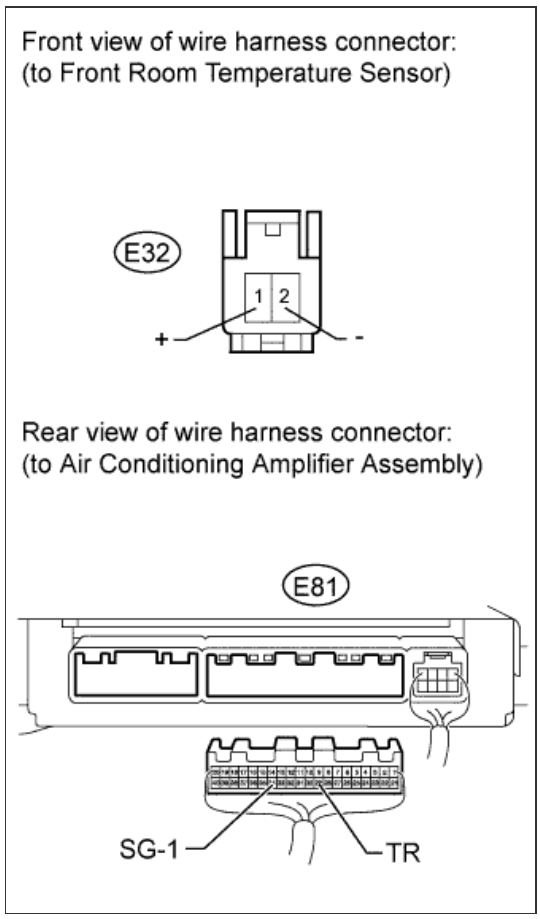

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1446/46 Air Mix Damper Control Servo Motor Circuit (Driver Side)

for Preparation Click here

DESCRIPTION


The front air mix damper servo motor (for driver side) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air mix damper (for driver side) to any position. As a result, the amount of air that has passed through the evaporator and is passing through the heater core is adjusted, and the temperature of the air blowing toward the driver side is controlled.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1446/46	The air mix damper position does not change even if the air conditioning amplifier assembly operates the air mix damper servo motor.	• Air mix damper servo motor (for driver side) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

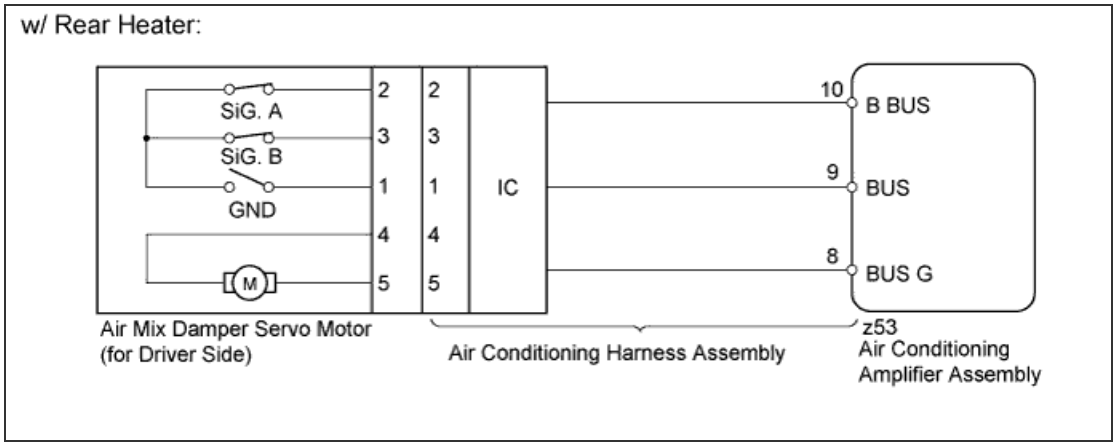

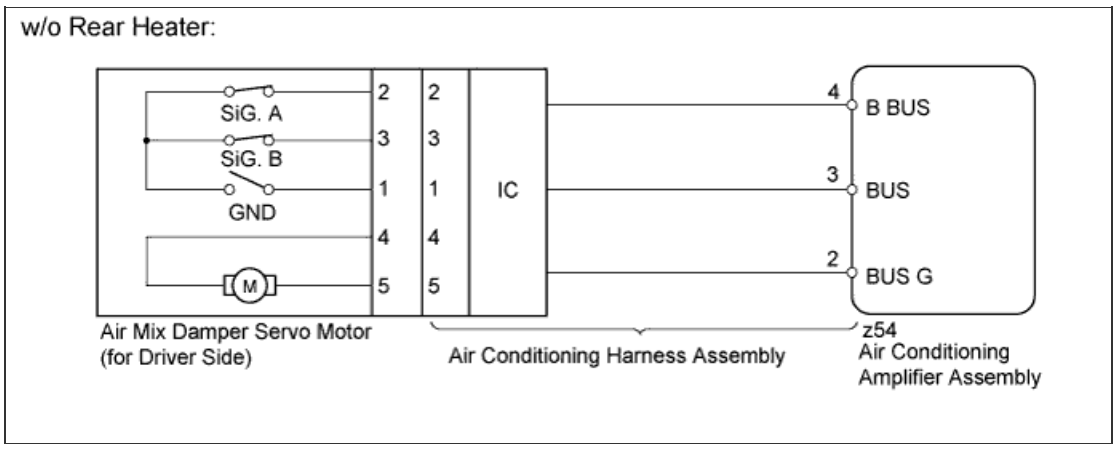

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR MIX DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
	Air mix damper servo motor (for driver side) target	for LHD • MAX COOL: 90 (pulse) • MAX HOT: 8 (pulse)	

Air Mix Servo Targ Pulse(D)	pulse / Min.: 8, Max.: 90 (for LHD) Min.: 8, Max.: 90 (for RHD)	for RHD • MAX COOL: 8 (pulse) • MAX HOT: 90 (pulse)	-

OK:

The display is as specified in the normal condition.

NG → **Go to step 2**

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR MIX DAMPER SERVO MOTOR (OPERATION)

a. for LHD

i. Replace the air mix damper servo motor (for driver side) (Click here).

b. for RHD

i. Replace the air mix damper servo motor (for driver side) (Click here)

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:

DTC B1446 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → **REPLACE AIR MIX DAMPER SERVO MOTOR (Click here)**

C → **REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)**

D → **REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)**

A

REPLACE AIR MIX DAMPER SERVO MOTOR (Click here)

DTC B1412/12 Ambient Temperature Sensor Circuit

for Preparation Click here


DESCRIPTION


The ambient temperature sensor is installed in the front part of the condenser to detect the ambient temperature and control the air conditioner "auto" mode. The sensor connected to the air conditioning amplifier assembly detects fluctuations in the ambient temperature. This data is used for controlling the room temperature. The sensor sends a signal to the air conditioning amplifier assembly. The resistance of the ambient temperature sensor changes in accordance with the ambient temperature. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.

The air conditioning amplifier assembly applies voltage (5 V) to the ambient temperature sensor and reads voltage changes as the resistance of the ambient temperature sensor changes.

DTC Code	DTC Detection Condition	Trouble Area
B1412/12	An open or short in the ambient temperature sensor circuit.	• Ambient temperature sensor • Harness or connector between ambient temperature sensor and air conditioning amplifier assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

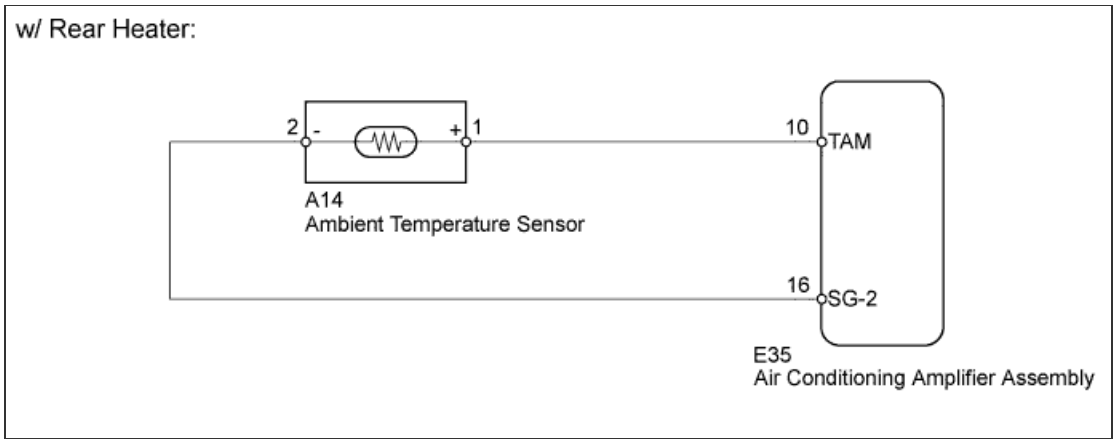

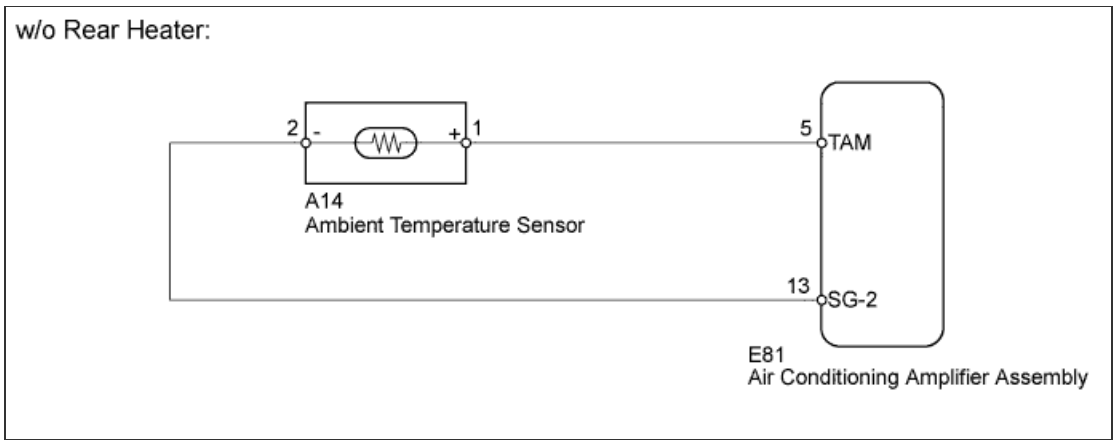

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AMBIENT TEMPERATURE SENSOR)

a. Use the Data List to check if the ambient temperature sensor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Ambient Temp Sensor	Ambient temperature sensor / Min: -23.3°C (-9.94°F) Max: 65.95°C (150.71°F)	Actual ambient temperature displayed	Open in the circuit: -23.3°C (-9.94°F). Short in the circuit: 65.95°C (150.71°F).

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)


2.INSPECT AMBIENT TEMPERATURE SENSOR

a. Remove the ambient temperature sensor (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	10°C (50°F)	3.00 to 3.73 kΩ
	15°C (59°F)	2.45 to 2.88 kΩ
	20°C (68°F)	1.95 to 2.30 kΩ
	25°C (77°F)	1.60 to 1.80 kΩ
	30°C (86°F)	1.28 to 1.47 kΩ
	35°C (95°F)	1.00 to 1.22 kΩ
	40°C (104°F)	0.80 to 1.00 kΩ
	45°C (113°F)	0.65 to 0.85 kΩ
	50°C (122°F)	0.50 to 0.70 kΩ
	55°C (131°F)	0.44 to 0.60 kΩ
	60°C (140°F)	0.36 to 0.50 kΩ

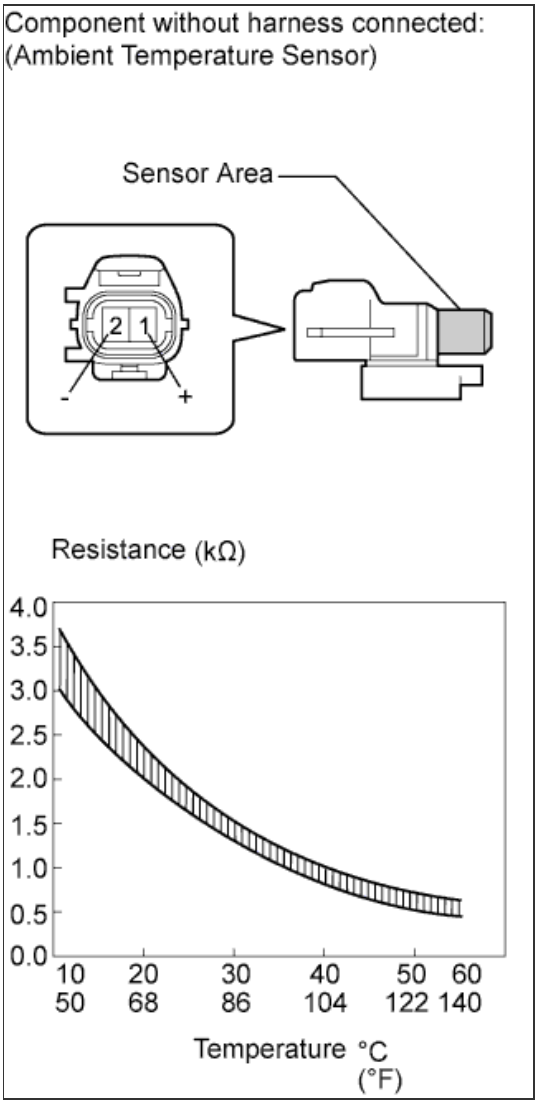

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

NG → REPLACE AMBIENT TEMPERATURE SENSOR (Click here)

OK

3.CHECK HARNESS AND CONNECTOR (AMBIENT TEMPERATURE SENSOR - AIR CONDITIONING AMPLIFIER)

a. w/ Rear Heater

i. Disconnect the A14 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A14 (+) -1 - E35-10 (TAM)	Always	Below 1 Ω
A14-2 (-) - E35-		

16 (SG-2)		
E35-10 (TAM) - Body ground	Always	10 kΩ or higher
E35-16 (SG-2) - Body ground		

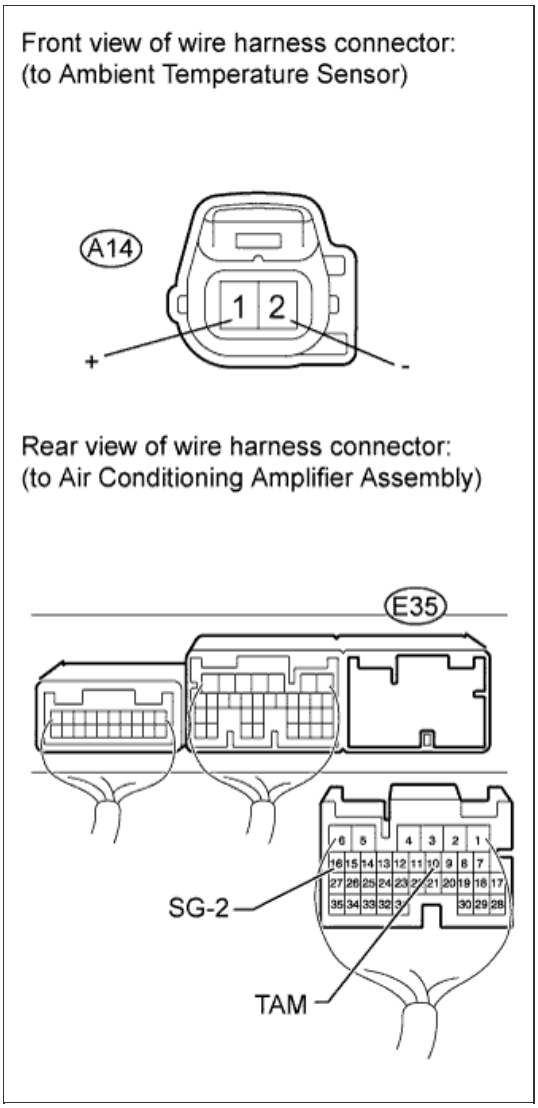

b. w/o Rear Heater


i. Disconnect the A14 sensor connector.

ii. Disconnect the E81 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A14-1 (+) - E81-5 (TAM)	Always	Below 1 Ω
A14-2 (-) - E81-13 (SG-2)		
E81-5 (TAM) - Body ground	Always	10 kΩ or higher
E81-13 (SG-2) - Body ground		

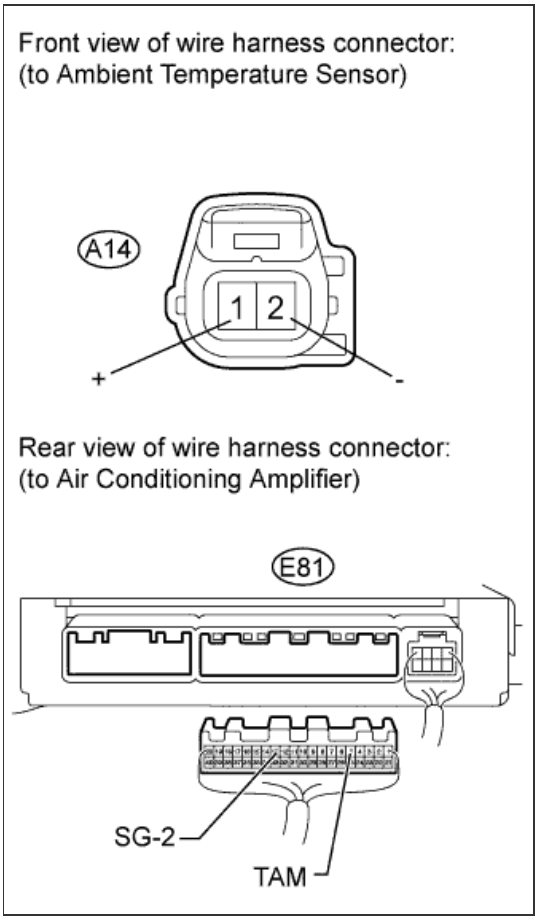

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1446/46 Air Mix Damper Control Servo Motor Circuit (Driver Side)

for Preparation Click here

DESCRIPTION


The front air mix damper servo motor (for driver side) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air mix damper (for driver side) to any position. As a result, the amount of air that has passed through the evaporator and is passing through the heater core is adjusted, and the temperature of the air blowing toward the driver side is controlled.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1446/46	The air mix damper position does not change even if the air conditioning amplifier assembly operates the air mix damper servo motor.	• Air mix damper servo motor (for driver side) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

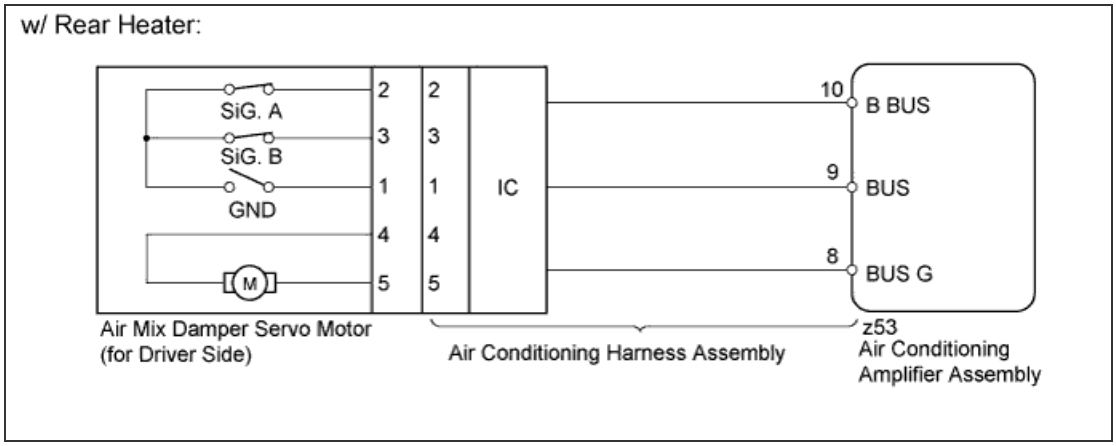

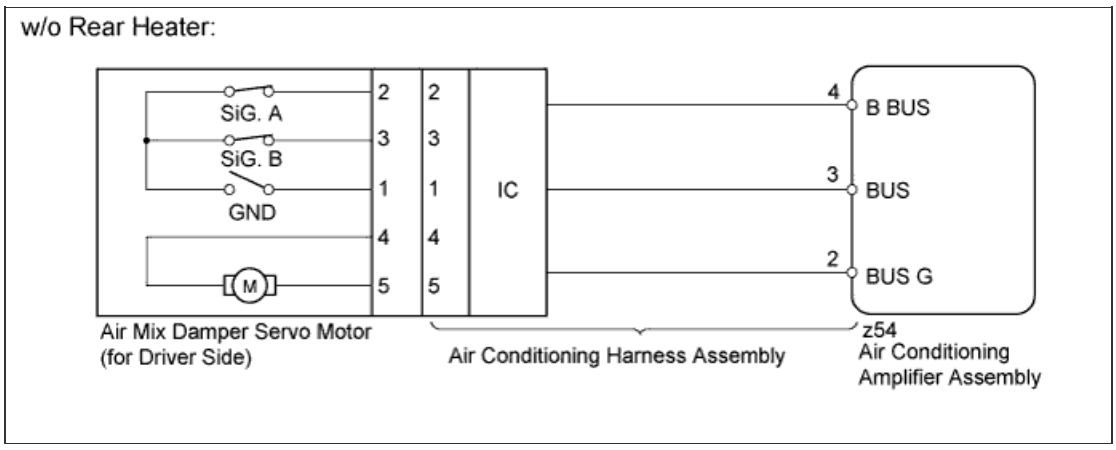

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR MIX DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
	Air mix damper servo motor (for driver side) target	for LHD • MAX COOL: 90 (pulse) • MAX HOT: 8 (pulse)	

Air Mix Servo Targ Pulse(D)	pulse / Min.: 8, Max.: 90 (for LHD) Min.: 8, Max.: 90 (for RHD)	for RHD • MAX COOL: 8 (pulse) • MAX HOT: 90 (pulse)	-

OK:

The display is as specified in the normal condition.

NG → **Go to step 2**

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR MIX DAMPER SERVO MOTOR (OPERATION)

a. for LHD

i. Replace the air mix damper servo motor (for driver side) (Click here).

b. for RHD

i. Replace the air mix damper servo motor (for driver side) (Click here)

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:

DTC B1446 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → **REPLACE AIR MIX DAMPER SERVO MOTOR (Click here)**

C → **REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)**

D → **REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)**

A

REPLACE AIR MIX DAMPER SERVO MOTOR (Click here)

DTC B1412/12 Ambient Temperature Sensor Circuit

for Preparation Click here


DESCRIPTION


The ambient temperature sensor is installed in the front part of the condenser to detect the ambient temperature and control the air conditioner "auto" mode. The sensor connected to the air conditioning amplifier assembly detects fluctuations in the ambient temperature. This data is used for controlling the room temperature. The sensor sends a signal to the air conditioning amplifier assembly. The resistance of the ambient temperature sensor changes in accordance with the ambient temperature. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.

The air conditioning amplifier assembly applies voltage (5 V) to the ambient temperature sensor and reads voltage changes as the resistance of the ambient temperature sensor changes.

DTC Code	DTC Detection Condition	Trouble Area
B1412/12	An open or short in the ambient temperature sensor circuit.	• Ambient temperature sensor • Harness or connector between ambient temperature sensor and air conditioning amplifier assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

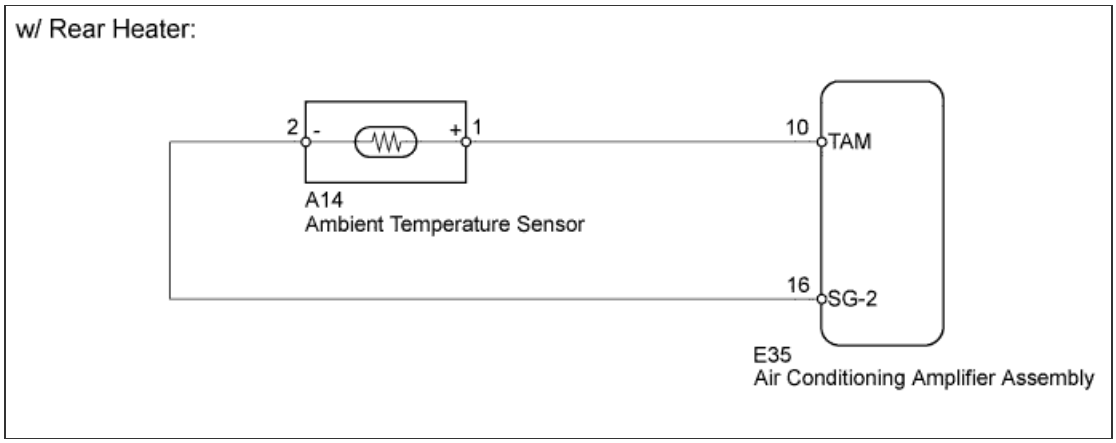

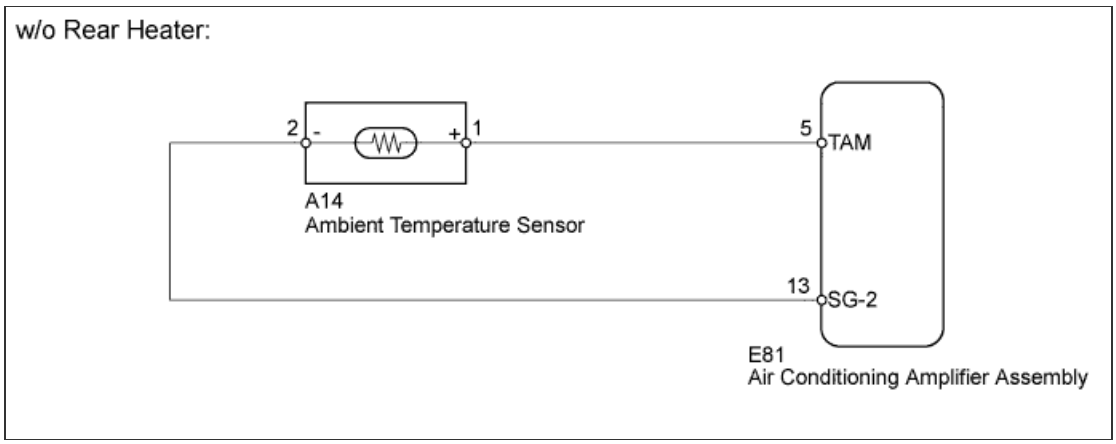

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AMBIENT TEMPERATURE SENSOR)

a. Use the Data List to check if the ambient temperature sensor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Ambient Temp Sensor	Ambient temperature sensor / Min: -23.3°C (-9.94°F) Max: 65.95°C (150.71°F)	Actual ambient temperature displayed	Open in the circuit: -23.3°C (-9.94°F). Short in the circuit: 65.95°C (150.71°F).

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)


2.INSPECT AMBIENT TEMPERATURE SENSOR

a. Remove the ambient temperature sensor (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	10°C (50°F)	3.00 to 3.73 kΩ
	15°C (59°F)	2.45 to 2.88 kΩ
	20°C (68°F)	1.95 to 2.30 kΩ
	25°C (77°F)	1.60 to 1.80 kΩ
	30°C (86°F)	1.28 to 1.47 kΩ
	35°C (95°F)	1.00 to 1.22 kΩ
	40°C (104°F)	0.80 to 1.00 kΩ
	45°C (113°F)	0.65 to 0.85 kΩ
	50°C (122°F)	0.50 to 0.70 kΩ
	55°C (131°F)	0.44 to 0.60 kΩ
	60°C (140°F)	0.36 to 0.50 kΩ

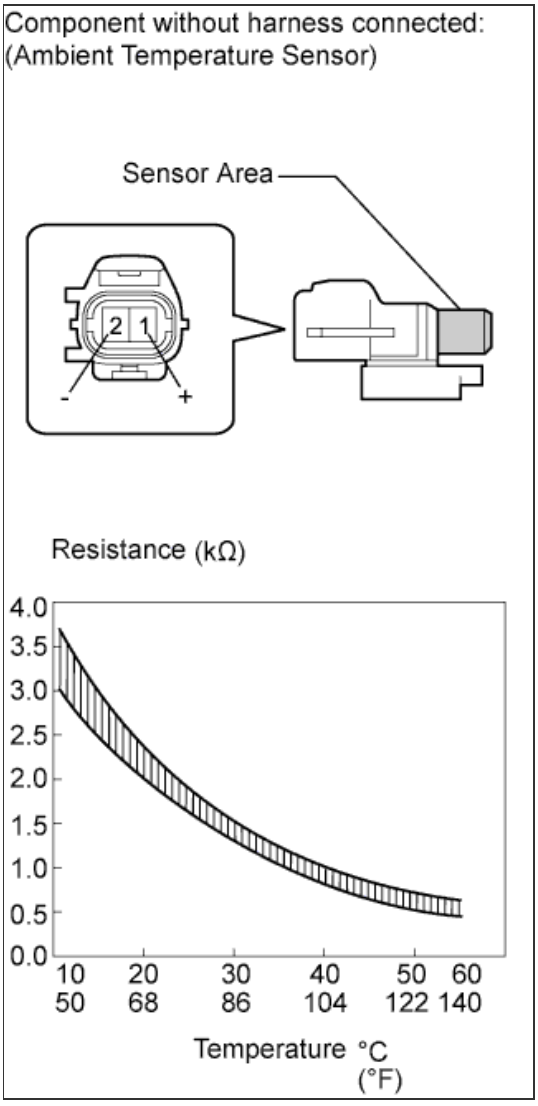

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

NG → REPLACE AMBIENT TEMPERATURE SENSOR (Click here)

OK

3.CHECK HARNESS AND CONNECTOR (AMBIENT TEMPERATURE SENSOR - AIR CONDITIONING AMPLIFIER)

a. w/ Rear Heater

i. Disconnect the A14 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A14 (+) -1 - E35-10 (TAM)	Always	Below 1 Ω
A14-2 (-) - E35-		

16 (SG-2)		
E35-10 (TAM) - Body ground	Always	10 kΩ or higher
E35-16 (SG-2) - Body ground		

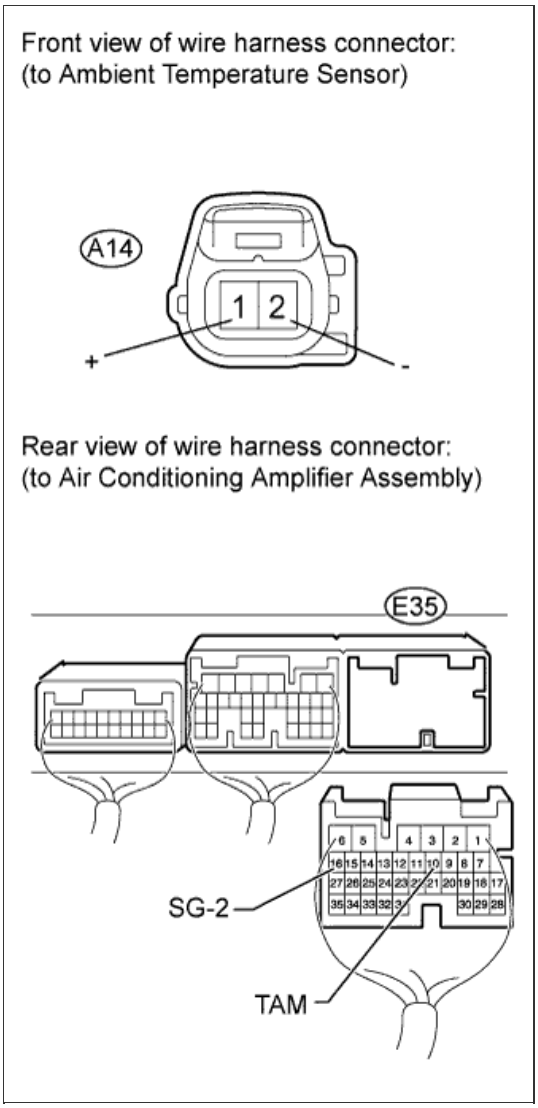

b. w/o Rear Heater


i. Disconnect the A14 sensor connector.

ii. Disconnect the E81 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A14-1 (+) - E81-5 (TAM)	Always	Below 1 Ω
A14-2 (-) - E81-13 (SG-2)		
E81-5 (TAM) - Body ground	Always	10 kΩ or higher
E81-13 (SG-2) - Body ground		

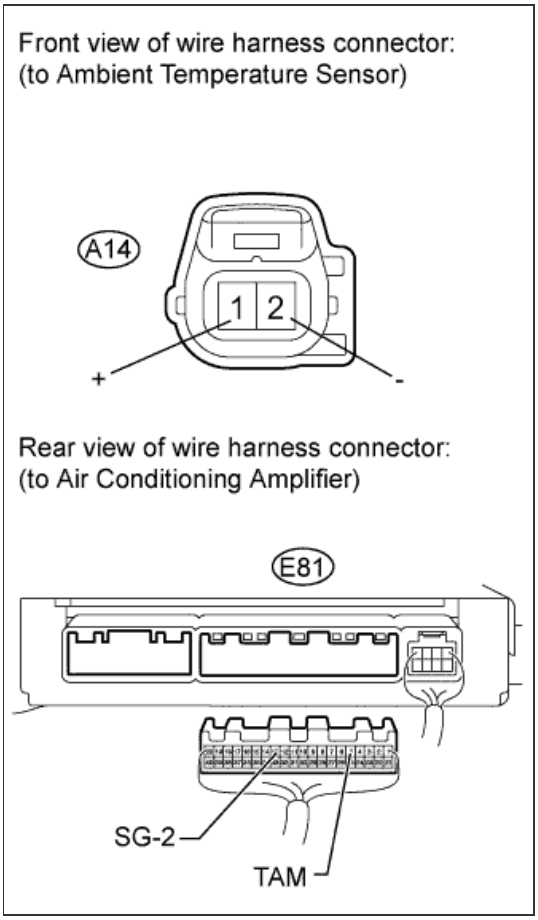

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1447/47 Rear Air Mix Damper Control Servo Motor Circuit on Driver Side

for Preparation Click here

DESCRIPTION


The rear air mix damper servo motor (for driver side) sends pulse signals to indicate the damper position to the air conditioning amplifier assembly. The air conditioning amplifier assembly activates the motor (normal or reverse) based on these signals to move the rear air mix damper to the appropriate position. This adjusts the amount of air passing through the heater core after passing the evaporator and controls the temperature of the blown air.

HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1447/47	The rear air mix damper position does not change even if the air conditioning amplifier assembly operates the rear air mix damper servo motor.	• Rear air mix damper servo motor • No. 2 air conditioning harness assembly • Wire harness between No. 2 air conditioning harness assembly and air conditioning amplifier assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

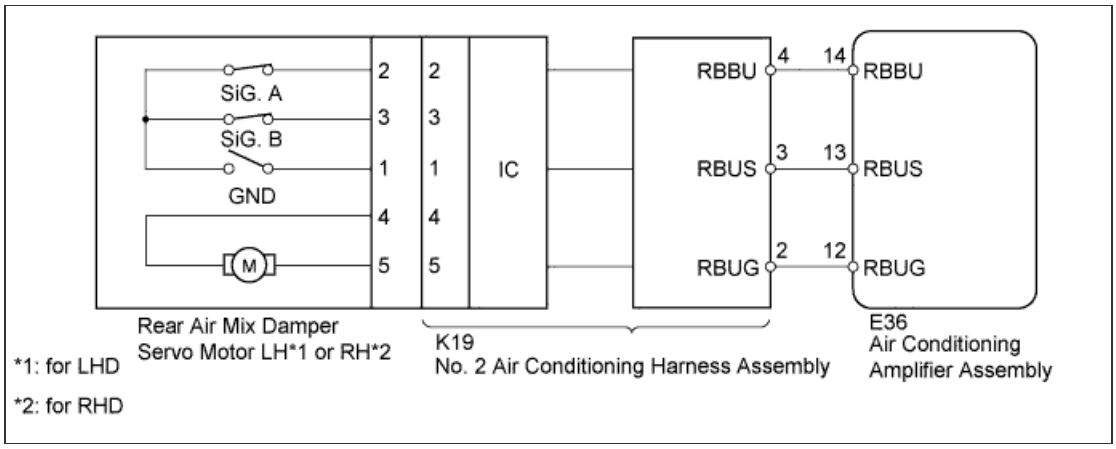

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (REAR AIR MI DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
A/M Servo Targ Pulse (Rear D)	Rear air mix damper servo motor target pulse / Min.: 9, Max.: 54 (for LHD) Min.: 8, Max.: 53 (for RHD)	for LHD • MAX COOL: 9 (pulse) • MAX HOT: 54 (pulse) for RHD • MAX COOL: 53 (pulse) • MAX HOT: 8 (pulse)	-

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK HARNESS AND CONNECTOR (NO. 2 AIR CONDITIONING HARNESS - AIR CONDITIONING AMPLIFIER)

a. Disconnect the K19 No. 2 air conditioning harness connector.


b. Disconnect the E36 amplifier connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K19-2 (RBUG) - E36-12 (RBUG)	Always	Below 1 Ω
K19-3 (RBUS) - E36-13 (RBUS)		
K19-4 (RBBU) - E36-14 (RBBU)		
E36-12 (RBUG) - Body ground	Always	10 kΩ or higher
E36-13 (RBUS) - Body ground		
E36-14 (RBBU) - Body ground		

Front view of wire harness connector: (to No. 2 Air Conditioning Harness Assembly)

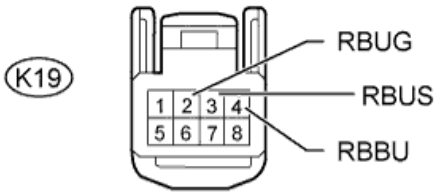

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

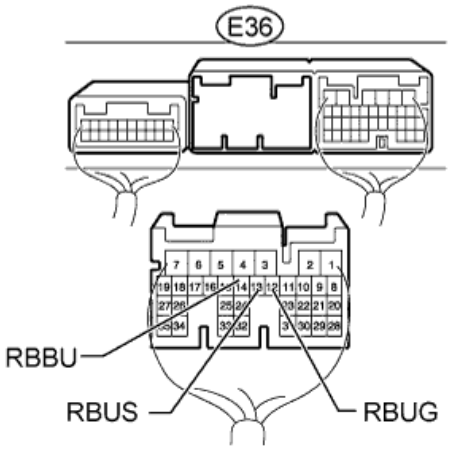

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK REAR AIR MI DAMPER SERVO MOTOR (OPERATION)

a. for LHD

i. Replace the rear air mix damper servo motor LH (Click here).

b. for RHD

i. Replace the rear air mix damper servo motor RH (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NE T

4.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:

DTC B1447 is not output.

NG → REPLACE NO. 2 AIR CONDITIONING HARNESS ASSEMBLY (Click here)

OK

REPLACE REAR AIR MI DAMPER SERVO MOTOR (Click here)

DTC B1413/13 Evaporator Temperature Sensor Circuit


for Preparation Click here


DESCRIPTION

The No. 1 cooler thermistor is installed on the evaporator in the air conditioner unit to detect the cooled air temperature that has passed through the evaporator and control the air conditioning. It sends appropriate signals to the air conditioning amplifier assembly. The resistance of the No. 1 cooler thermistor changes in accordance with the cooled air temperature that has passed through the evaporator. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.
The air conditioning amplifier assembly applies voltage (5 V) to the No. 1 cooler thermistor and reads voltage changes as the resistance of the No. 1 cooler thermistor changes. This sensor is used for frost prevention.

DTC Code	DTC Detection Condition	Trouble Area
B1413/13	An open or short in the No. 1 cooler thermistor circuit.	• No. 1 cooler thermistor • Air conditioning harness assembly (No. 1 cooler thermistor) • Air conditioning amplifier assembly

WIRING DIAGRAM

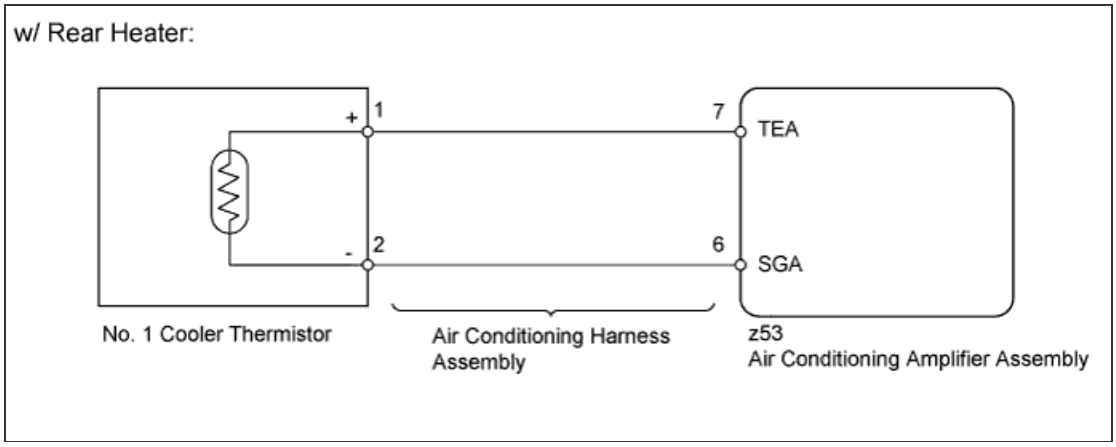

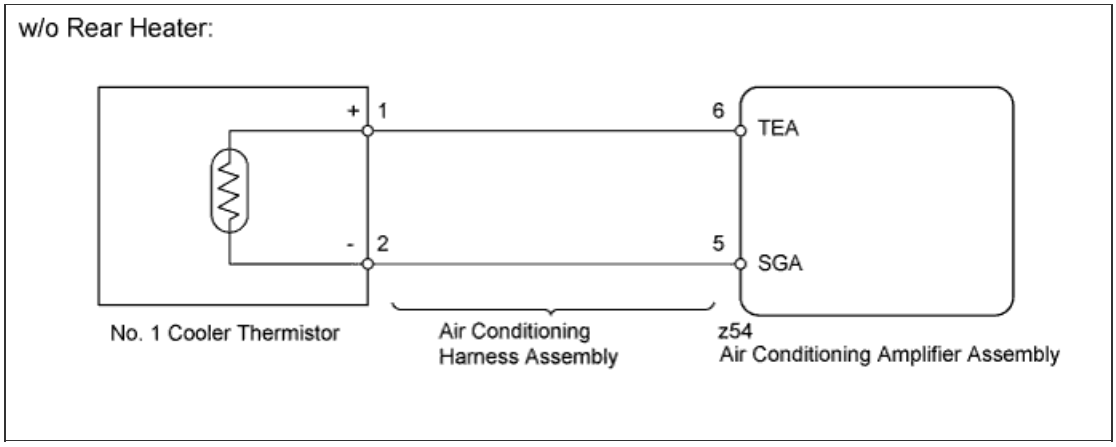

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (NO. 1 COOLER THERMISTOR)

a. Use the Data List to check if the No. 1 cooler thermistor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Evaporator Fin Thermistor	No. 1 cooler thermistor / Min.: -29.7°C (-21.46°F) Max.: 59.55°C (139.19°F)	Actual evaporator temperature displayed	Open in the circuit: -29.7°C (-21.46°F). Short in the circuit: 59.55°C (139.19°F).

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.INSPECT NO. 1 COOLER THERMISTOR


a. Remove the No. 1 cooler thermistor.

- for LHD (Click here)
- for RHD (Click here)

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	-10°C (14°F)	7.30 to 9.10 kΩ
	-5°C (23°F)	5.65 to 6.95 kΩ
	0°C (32°F)	4.40 to 5.35 kΩ
	5°C (41°F)	3.40 to 4.15 kΩ
	10°C (50°F)	2.70 to 3.25 kΩ
	15°C (59°F)	2.14 to 2.58 kΩ
	20°C (68°F)	1.71 to 2.05 kΩ
	25°C (77°F)	1.38 to 1.64 kΩ
	30°C (86°F)	1.11 to 1.32 kΩ

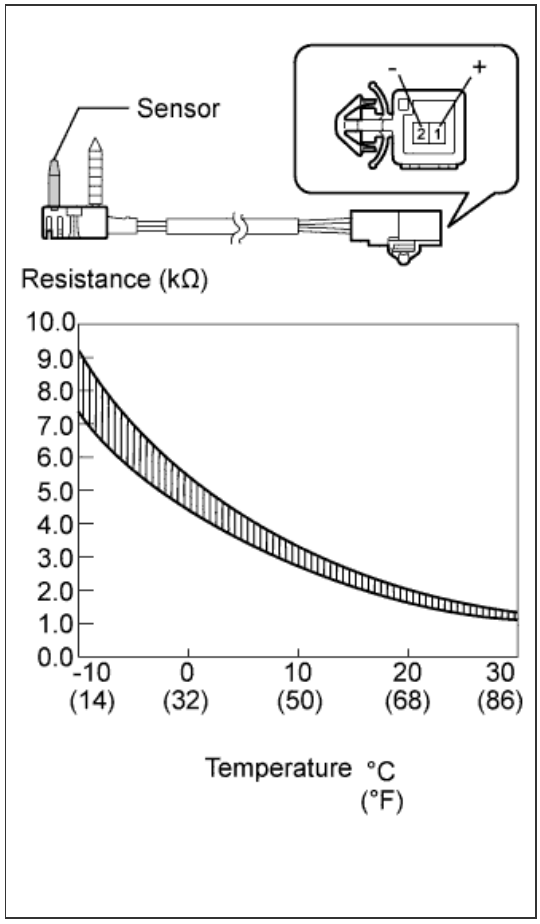

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

C → REPLACE NO. 1 COOLER THERMISTOR (Click here)

D → REPLACE NO. 1 COOLER THERMISTOR (Click here)

A

REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

DTC B1447/47 Rear Air Mix Damper Control Servo Motor Circuit on Driver Side

for Preparation Click here

DESCRIPTION


The rear air mix damper servo motor (for driver side) sends pulse signals to indicate the damper position to the air conditioning amplifier assembly. The air conditioning amplifier assembly activates the motor (normal or reverse) based on these signals to move the rear air mix damper to the appropriate position. This adjusts the amount of air passing through the heater core after passing the evaporator and controls the temperature of the blown air.

HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1447/47	The rear air mix damper position does not change even if the air conditioning amplifier assembly operates the rear air mix damper servo motor.	• Rear air mix damper servo motor • No. 2 air conditioning harness assembly • Wire harness between No. 2 air conditioning harness assembly and air conditioning amplifier assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

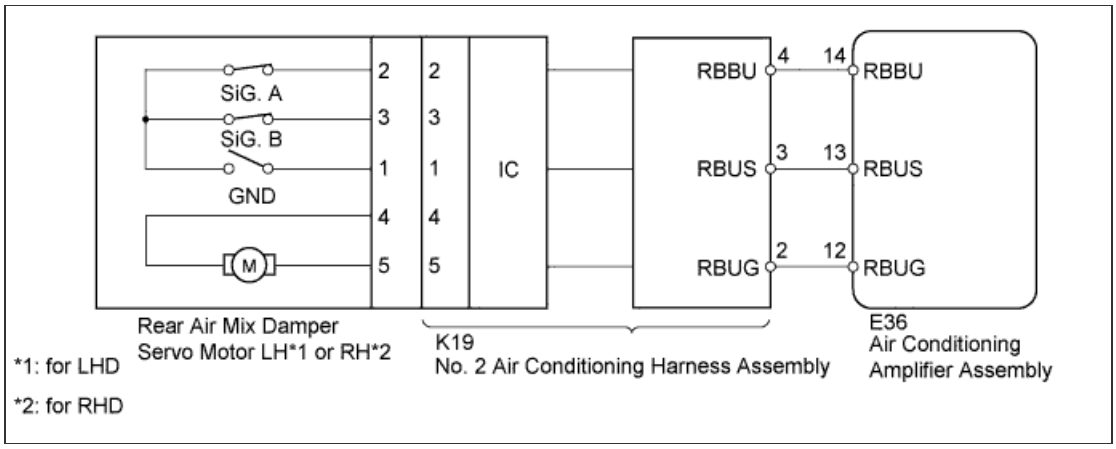

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (REAR AIR MI DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
A/M Servo Targ Pulse (Rear D)	Rear air mix damper servo motor target pulse / Min.: 9, Max.: 54 (for LHD) Min.: 8, Max.: 53 (for RHD)	for LHD • MAX COOL: 9 (pulse) • MAX HOT: 54 (pulse) for RHD • MAX COOL: 53 (pulse) • MAX HOT: 8 (pulse)	-

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK HARNESS AND CONNECTOR (NO. 2 AIR CONDITIONING HARNESS - AIR CONDITIONING AMPLIFIER)

a. Disconnect the K19 No. 2 air conditioning harness connector.


b. Disconnect the E36 amplifier connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K19-2 (RBUG) - E36-12 (RBUG)	Always	Below 1 Ω
K19-3 (RBUS) - E36-13 (RBUS)		
K19-4 (RBBU) - E36-14 (RBBU)		
E36-12 (RBUG) - Body ground	Always	10 kΩ or higher
E36-13 (RBUS) - Body ground		
E36-14 (RBBU) - Body ground		

Front view of wire harness connector: (to No. 2 Air Conditioning Harness Assembly)

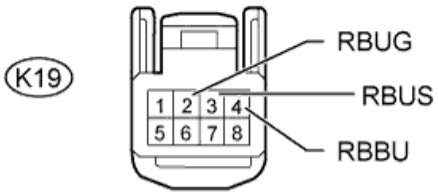

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

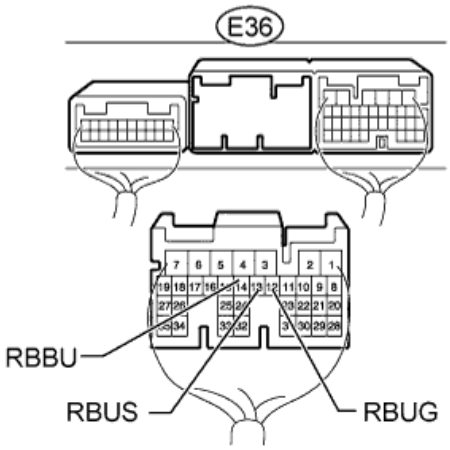

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK REAR AIR MI DAMPER SERVO MOTOR (OPERATION)

a. for LHD

i. Replace the rear air mix damper servo motor LH (Click here).

b. for RHD

i. Replace the rear air mix damper servo motor RH (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NE T

4.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:

DTC B1447 is not output.

NG → REPLACE NO. 2 AIR CONDITIONING HARNESS ASSEMBLY (Click here)

OK

REPLACE REAR AIR MI DAMPER SERVO MOTOR (Click here)

DTC B1413/13 Evaporator Temperature Sensor Circuit


for Preparation Click here


DESCRIPTION

The No. 1 cooler thermistor is installed on the evaporator in the air conditioner unit to detect the cooled air temperature that has passed through the evaporator and control the air conditioning. It sends appropriate signals to the air conditioning amplifier assembly. The resistance of the No. 1 cooler thermistor changes in accordance with the cooled air temperature that has passed through the evaporator. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.
The air conditioning amplifier assembly applies voltage (5 V) to the No. 1 cooler thermistor and reads voltage changes as the resistance of the No. 1 cooler thermistor changes. This sensor is used for frost prevention.

DTC Code	DTC Detection Condition	Trouble Area
B1413/13	An open or short in the No. 1 cooler thermistor circuit.	• No. 1 cooler thermistor • Air conditioning harness assembly (No. 1 cooler thermistor) • Air conditioning amplifier assembly

WIRING DIAGRAM

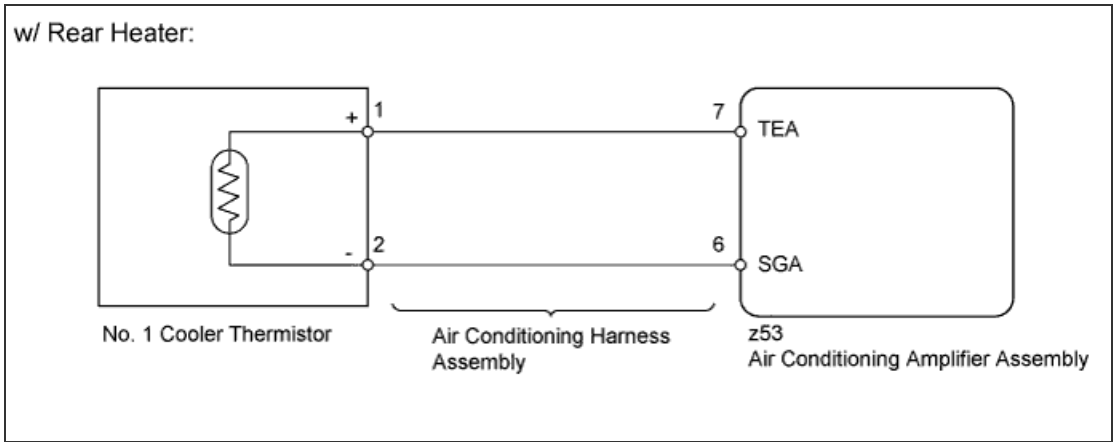

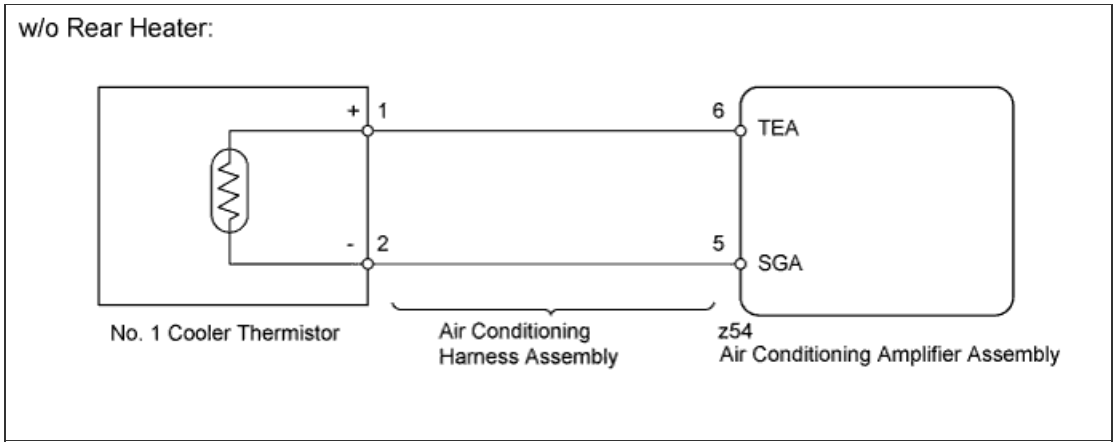

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (NO. 1 COOLER THERMISTOR)

a. Use the Data List to check if the No. 1 cooler thermistor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Evaporator Fin Thermistor	No. 1 cooler thermistor / Min.: -29.7°C (-21.46°F) Max.: 59.55°C (139.19°F)	Actual evaporator temperature displayed	Open in the circuit: -29.7°C (-21.46°F). Short in the circuit: 59.55°C (139.19°F).

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.INSPECT NO. 1 COOLER THERMISTOR


a. Remove the No. 1 cooler thermistor.

- for LHD (Click here)
- for RHD (Click here)

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	-10°C (14°F)	7.30 to 9.10 kΩ
	-5°C (23°F)	5.65 to 6.95 kΩ
	0°C (32°F)	4.40 to 5.35 kΩ
	5°C (41°F)	3.40 to 4.15 kΩ
	10°C (50°F)	2.70 to 3.25 kΩ
	15°C (59°F)	2.14 to 2.58 kΩ
	20°C (68°F)	1.71 to 2.05 kΩ
	25°C (77°F)	1.38 to 1.64 kΩ
	30°C (86°F)	1.11 to 1.32 kΩ

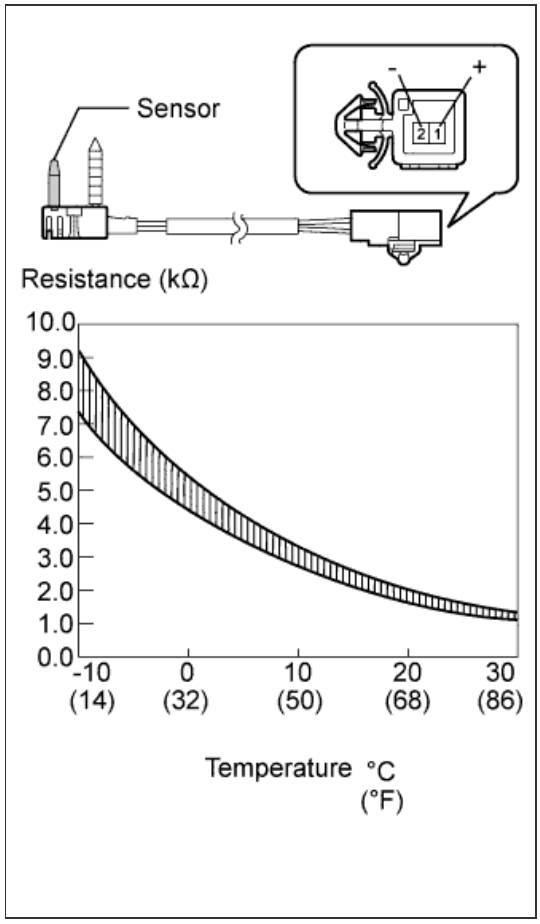

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

C → REPLACE NO. 1 COOLER THERMISTOR (Click here)

D → REPLACE NO. 1 COOLER THERMISTOR (Click here)

A

REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

DTC B1448/48 Passenger Side FACE Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The air outlet damper servo motor (for front passenger side mode) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air outlet damper (for front passenger side mode) to any position, which controls the air outlet changes.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1448/48	The air outlet damper position does not change even if the air conditioning amplifier assembly operates the air outlet damper servo motor.	• Air outlet damper servo motor (for front passenger side mode) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

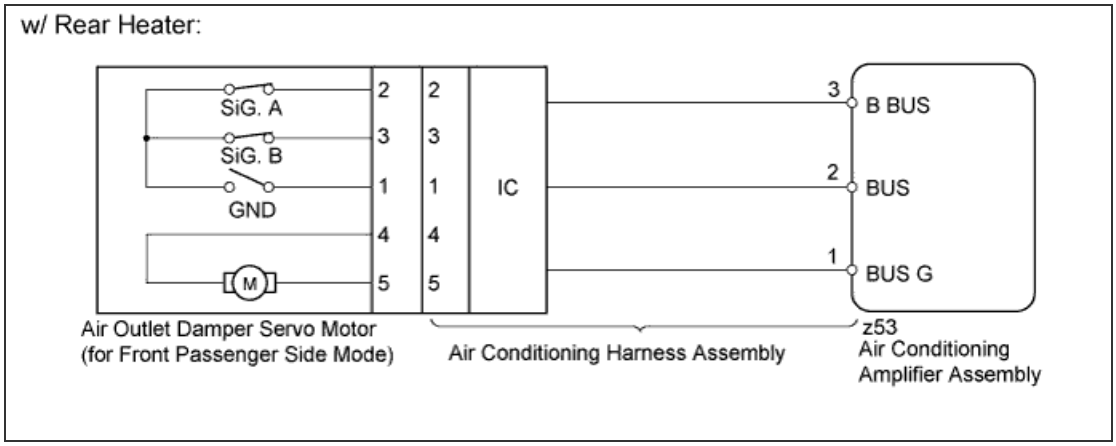

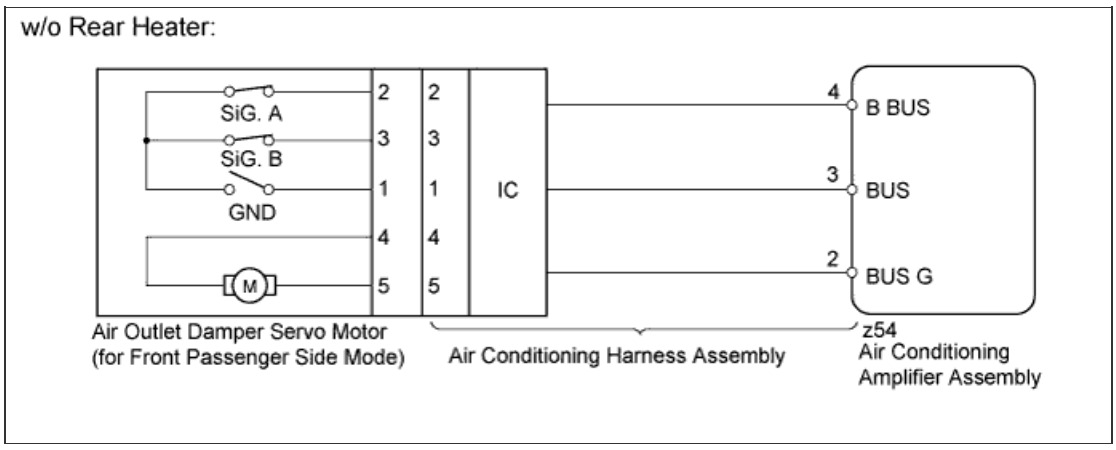

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR OUTLET DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	easurement Item/Range	Normal Condition	Diagnostic Note
		for LHD • FACE1: 117 (pulse) • FACE2: 109	

A/O Damper FACE Pos(P)	Air outlet damper servo motor (for front passenger side mode) target pulse / in.: 6, a.: 117 (for LHD) in.: 9, a.: 120 (for RHD)	(pulse) • B/L1: 93 (pulse) • B/L2: 81 (pulse) • FOOT-F: 41 (pulse) • FOOT-R: 41 (pulse) • FOOT-D: 52 (pulse) • F/D: 18 (pulse) • DEF: 6 (pulse) for RHD • FACE1: 9 (pulse) • FACE2: 17 (pulse) • B/L1: 33 (pulse) • B/L2: 45 (pulse) • FOOT-F: 85 (pulse) • FOOT-R: 85 (pulse) • FOOT-D: 74 (pulse) • F/D: 108 (pulse) • DEF: 120 (pulse)	-

OK:
The display is as specified in the normal condition.

NG → **Go to step 2**

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR OUTLET DAMPER SERVO MOTOR (OPERATION)

a. for LHD:

i. Replace the air outlet damper servo motor (for front passenger side mode) (Click here).

b. for RHD:

i. Replace the air outlet damper servo motor (for front passenger side mode) (Click here)

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1448 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B

N (for LHD)	C
N (for RHD)	D

B → REPLACE AIR OUTLET DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A

REPLACE AIR OUTLET DAMPER SERVO MOTOR (Click here)

DTC B1417/17 Rear Evaporator Temperature Sensor Circuit


for Preparation Click here

DESCRIPTION

The No. 2 cooler thermistor is installed on the evaporator in the rear air conditioning unit to detect the cooled air temperature that has passed through the evaporator and control the air conditioning. It sends appropriate signals to the air conditioning amplifier assembly. The resistance of the No. 2 cooler thermistor changes in accordance with the cooled air temperature that has passed through the rear evaporator. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.
The air conditioning amplifier assembly applies voltage (5 V) to the No. 2 cooler thermistor and reads voltage changes as the resistance of the No. 2 cooler thermistor changes. This sensor is used for frost prevention.

DTC Code	DTC Detection Condition	Trouble Area
B1417/17	An open or short in the No. 2 cooler thermistor circuit.	• Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly • No. 2 air conditioning harness assembly (No. 2 cooler thermistor) • Air conditioning amplifier assembly

WIRING DIAGRAM

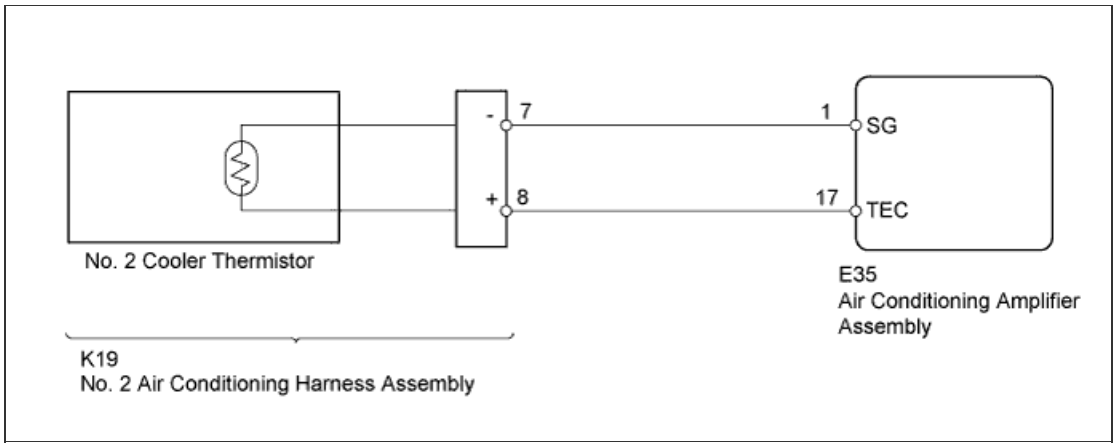

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (NO. 2 COOLER THERMISTOR)

a. Use the Data List to check if the No. 2 cooler thermistor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Ambient Temp Sens (Rear)	No. 2 cooler thermistor / Min.: -29.7°C (-21.46°F) Max.: 59.55°C (139.19°F)	Actual rear evaporator temperature displayed	Open in the circuit: -29.7°C (-21.46°F). Short in the circuit: 59.55°C (139.19°F).

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.INSPECT NO. 2 COOLER THERMISTOR

a. Remove the No. 2 air conditioning harness assembly (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
7 (-) - 8 (+)	-10°C (14°F)	7.40 to 9.20 kΩ
	-5°C (23°F)	5.65 to 7.00 kΩ
	0°C (32°F)	4.35 to 5.40 kΩ
	5°C (41°F)	3.40 to 4.20 kΩ
	10°C (50°F)	2.68 to 3.30 kΩ
	15°C (59°F)	2.10 to 2.60 kΩ
	20°C (68°F)	1.66 to 2.10 kΩ
	25°C (77°F)	1.32 to 1.66 kΩ
	30°C (86°F)	1.05 to 1.35 kΩ

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

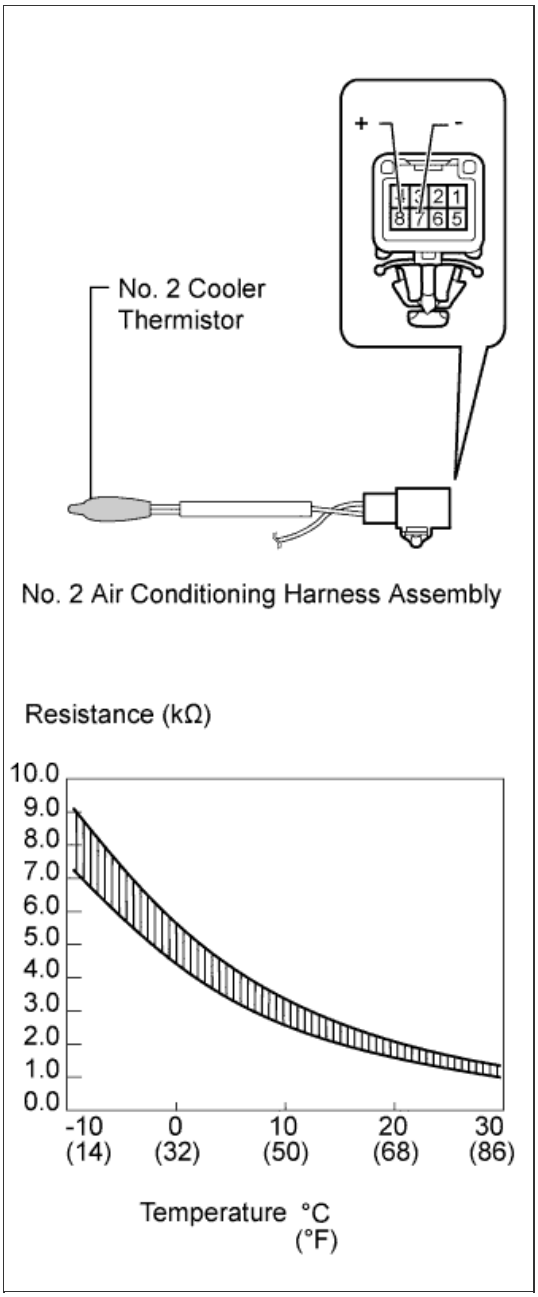

NG → REPLACE NO. 2 AIR CONDITIONING HARNESS ASSEMBLY (Click here)

OK

3.CHECK HARNESS AND CONNECTOR (NO. 2 AIR CONDITIONING HARNESS - AIR CONDITIONING AMPLIFIER)

a. Disconnect the K19 No. 2 air conditioning harness connector.


b. Disconnect the E35 amplifier connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K19-8 (+) - E35-17 (TEC)	Always	Below 1 Ω
K19-7 (-) - E35-1 (SG)	Always	Below 1 Ω
E35-17 (TEC) - Body ground	Always	10 kΩ or higher
E35-1 (SG) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to No. 2 Air Conditioning Harness Assembly)

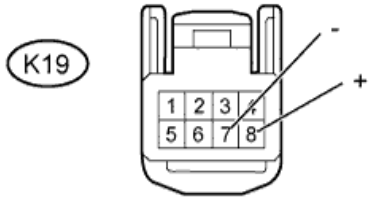

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

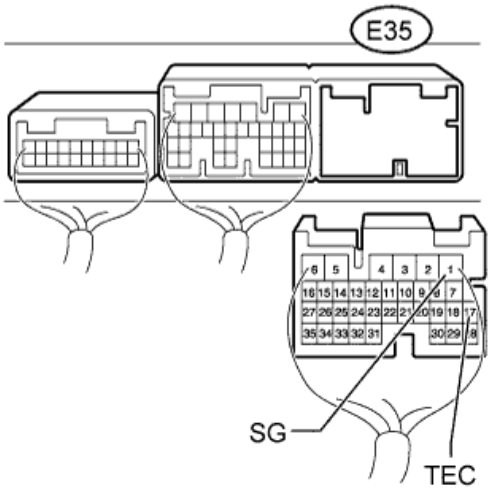

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK NO. 2 AIR CONDITIONING HARNESS ASSEMBLY (OPERATION)

a. Replace the No. 2 air conditioning harness assembly with a normal one and check that the condition returns to normal (Click here).

NEXT

5.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1417 is not output.

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (**Click here**)

OK

REPLACE NO. 2 AIR CONDITIONING HARNESS ASSEMBLY (Click here)

DTC B1448/48 Passenger Side FACE Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The air outlet damper servo motor (for front passenger side mode) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air outlet damper (for front passenger side mode) to any position, which controls the air outlet changes.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1448/48	The air outlet damper position does not change even if the air conditioning amplifier assembly operates the air outlet damper servo motor.	• Air outlet damper servo motor (for front passenger side mode) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

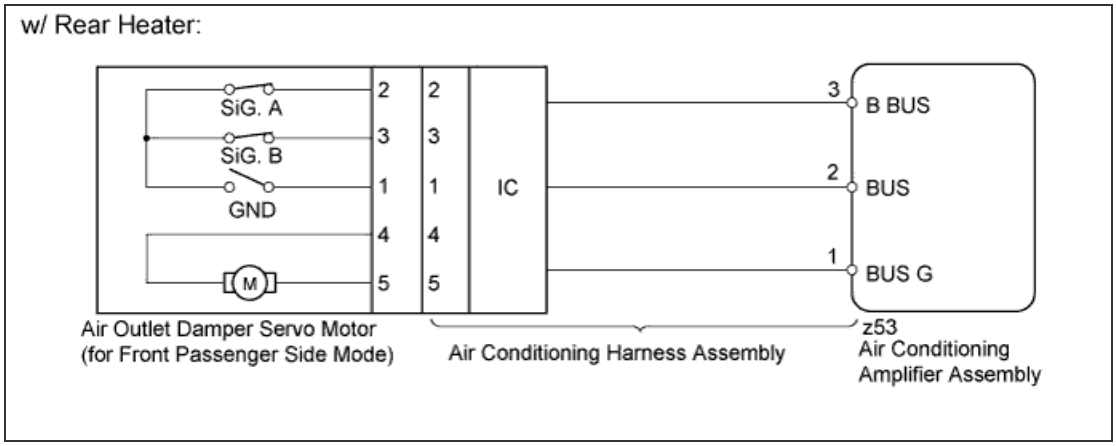

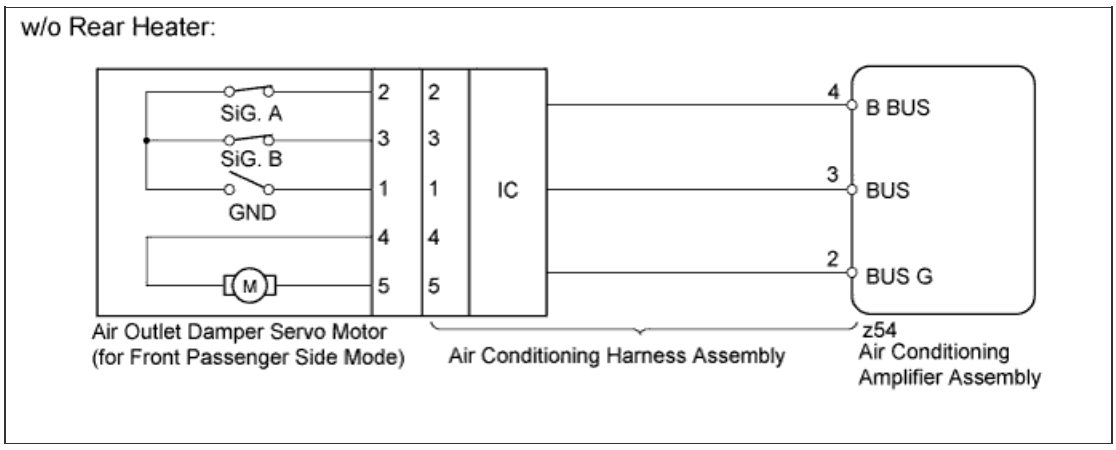

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR OUTLET DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	easurement Item/Range	Normal Condition	Diagnostic Note
		for LHD • FACE1: 117 (pulse) • FACE2: 109	

A/O Damper FACE Pos(P)	Air outlet damper servo motor (for front passenger side mode) target pulse / in.: 6, a.: 117 (for LHD) in.: 9, a.: 120 (for RHD)	(pulse) • B/L1: 93 (pulse) • B/L2: 81 (pulse) • FOOT-F: 41 (pulse) • FOOT-R: 41 (pulse) • FOOT-D: 52 (pulse) • F/D: 18 (pulse) • DEF: 6 (pulse) for RHD • FACE1: 9 (pulse) • FACE2: 17 (pulse) • B/L1: 33 (pulse) • B/L2: 45 (pulse) • FOOT-F: 85 (pulse) • FOOT-R: 85 (pulse) • FOOT-D: 74 (pulse) • F/D: 108 (pulse) • DEF: 120 (pulse)	-

OK:
The display is as specified in the normal condition.

NG → **Go to step 2**

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR OUTLET DAMPER SERVO MOTOR (OPERATION)

a. for LHD:

i. Replace the air outlet damper servo motor (for front passenger side mode) (Click here).

b. for RHD:

i. Replace the air outlet damper servo motor (for front passenger side mode) (Click here)

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1448 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B

N (for LHD)	C
N (for RHD)	D

B → REPLACE AIR OUTLET DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A

REPLACE AIR OUTLET DAMPER SERVO MOTOR (Click here)

DTC B1417/17 Rear Evaporator Temperature Sensor Circuit


for Preparation Click here

DESCRIPTION

The No. 2 cooler thermistor is installed on the evaporator in the rear air conditioning unit to detect the cooled air temperature that has passed through the evaporator and control the air conditioning. It sends appropriate signals to the air conditioning amplifier assembly. The resistance of the No. 2 cooler thermistor changes in accordance with the cooled air temperature that has passed through the rear evaporator. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.
The air conditioning amplifier assembly applies voltage (5 V) to the No. 2 cooler thermistor and reads voltage changes as the resistance of the No. 2 cooler thermistor changes. This sensor is used for frost prevention.

DTC Code	DTC Detection Condition	Trouble Area
B1417/17	An open or short in the No. 2 cooler thermistor circuit.	• Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly • No. 2 air conditioning harness assembly (No. 2 cooler thermistor) • Air conditioning amplifier assembly

WIRING DIAGRAM

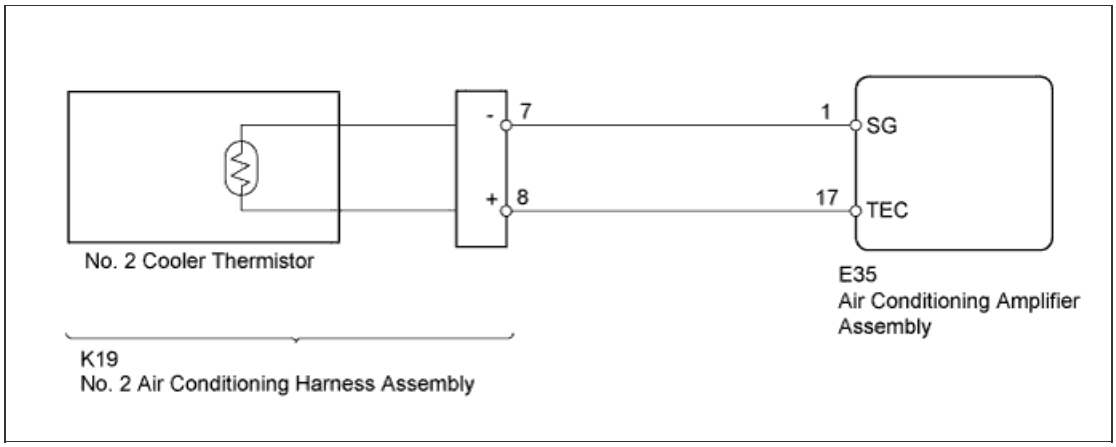

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (NO. 2 COOLER THERMISTOR)

a. Use the Data List to check if the No. 2 cooler thermistor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Ambient Temp Sens (Rear)	No. 2 cooler thermistor / Min.: -29.7°C (-21.46°F) Max.: 59.55°C (139.19°F)	Actual rear evaporator temperature displayed	Open in the circuit: -29.7°C (-21.46°F). Short in the circuit: 59.55°C (139.19°F).

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.INSPECT NO. 2 COOLER THERMISTOR

a. Remove the No. 2 air conditioning harness assembly (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
7 (-) - 8 (+)	-10°C (14°F)	7.40 to 9.20 kΩ
	-5°C (23°F)	5.65 to 7.00 kΩ
	0°C (32°F)	4.35 to 5.40 kΩ
	5°C (41°F)	3.40 to 4.20 kΩ
	10°C (50°F)	2.68 to 3.30 kΩ
	15°C (59°F)	2.10 to 2.60 kΩ
	20°C (68°F)	1.66 to 2.10 kΩ
	25°C (77°F)	1.32 to 1.66 kΩ
	30°C (86°F)	1.05 to 1.35 kΩ

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

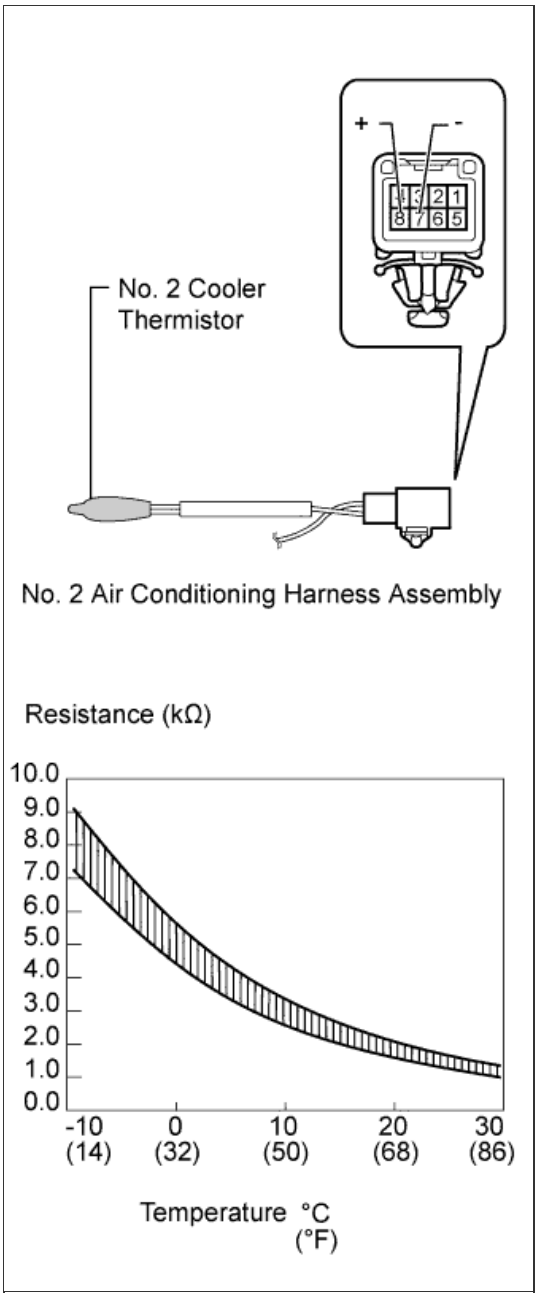

NG → REPLACE NO. 2 AIR CONDITIONING HARNESS ASSEMBLY (Click here)

OK

3.CHECK HARNESS AND CONNECTOR (NO. 2 AIR CONDITIONING HARNESS - AIR CONDITIONING AMPLIFIER)

a. Disconnect the K19 No. 2 air conditioning harness connector.


b. Disconnect the E35 amplifier connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K19-8 (+) - E35-17 (TEC)	Always	Below 1 Ω
K19-7 (-) - E35-1 (SG)	Always	Below 1 Ω
E35-17 (TEC) - Body ground	Always	10 kΩ or higher
E35-1 (SG) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to No. 2 Air Conditioning Harness Assembly)

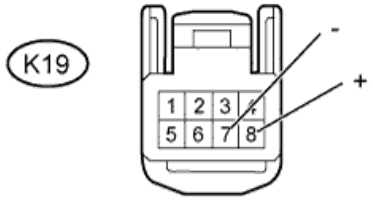

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

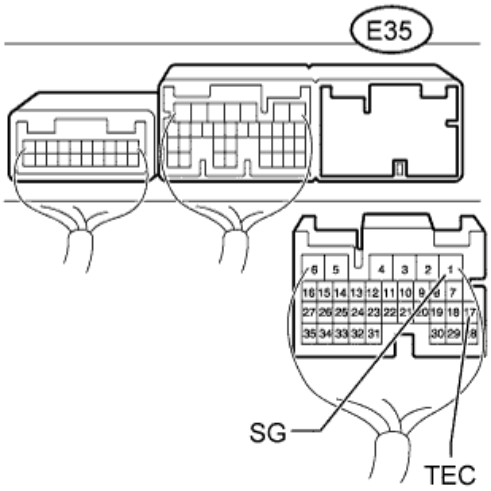

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK NO. 2 AIR CONDITIONING HARNESS ASSEMBLY (OPERATION)

a. Replace the No. 2 air conditioning harness assembly with a normal one and check that the condition returns to normal (Click here).

NEXT

5.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1417 is not output.

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (**Click here**)

OK

REPLACE NO. 2 AIR CONDITIONING HARNESS ASSEMBLY (Click here)

DTC B1449/49 Rear Air Outlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The rear air outlet damper servo motor sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the rear air outlet damper to the appropriate position, which controls the air outlet modes.

HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1449/49	The rear air outlet damper position does not change even if the air conditioning amplifier assembly operates the rear air outlet damper servo motor.	• **Rear air outlet damper servo motor** • **No. 2 air conditioning harness assembly** • **Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly** • **Air conditioning amplifier assembly**

WIRING DIAGRAM

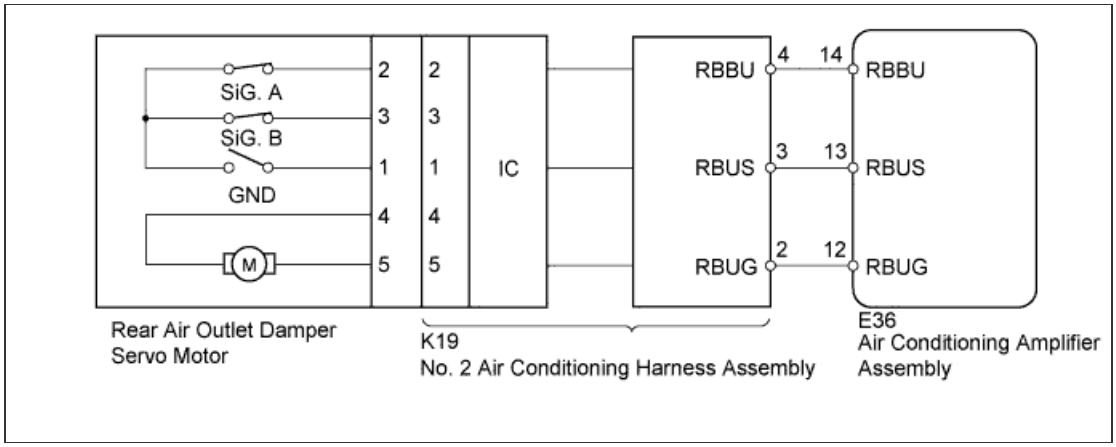

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (REAR AIR OUTLET DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	easurement Item/Range	Normal Condition	Diagnostic Note
Air Outlet Servo Pulse (R)	Rear air outlet damper servo motor target pulse / in.: 7, ax.: 83	Foot: 7 (pulse) B/L: 42 (pulse) FACE: 83 (pulse)	-

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBL (Click here)

2.CHECK HARNESS AND CONNECTOR (NO. 2 AIR CONDITIONING HARNESS - AIR CONDITIONING AMPLIFIER)

a. Disconnect the K19 No. 2 air conditioning harness assembly connector.


b. Disconnect the E36 amplifier connector.

c. easure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K19 2(RBUG) - E36-12 (RBUG)	Always	Below 1 Ω
K19 3(RBUS) - E36-13 (RBUS)		
K19 4(RBBU) - E36-14 (RBBU)		
E36-12 (RBUG) - Body ground	Always	10 kΩ or higher
E36-13 (RBUS) - Body ground		
E36-14 (RBBU) - Body ground		

Front view of wire harness connector: (to No. 2 Air Conditioning Harness Assembly)

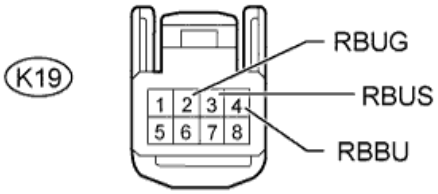

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

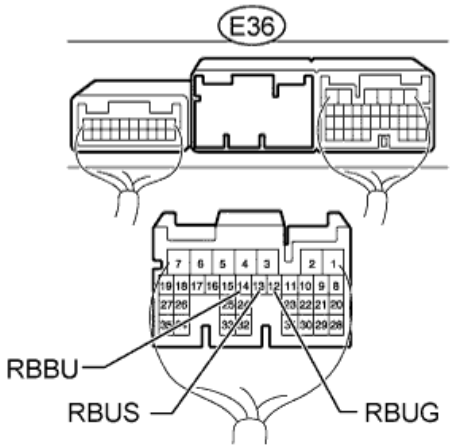

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK REAR AIR OUTLET DAMPER SERVO MOTOR (OPERATION)

a. Replace the rear air outlet damper servo motor (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

4.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1449 is not output.

NG → REPLACE NO. 2 AIR CONDITIONING HARNESS ASSEMBL Click here)

OK

REPLACE REAR AIR OUTLET DAMPER SERVO MOTOR (Click here)

DTC B1419/19 Rear Room Temperature Sensor Circuit

for Preparation Click here

DESCRIPTION

The rear room temperature sensor LH*1 or RH*2 (for driver side) is installed in the rear quarter trim board LH*1 or RH*2 to detect the rear room temperature and control the heater and air conditioner "auto" mode. The resistance of the rear room temperature sensor LH*1 or RH*2 changes in accordance with the rear room temperature for the LH*1 or RH*2 seat. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.

The air conditioning amplifier assembly applies a voltage (5 V) to the rear room temperature sensor LH*1 or RH*2 and reads voltage changes as changes in the resistance of the rear room temperature sensor LH*1 or RH*2.


DTC Code	DTC Detection Condition	Trouble Area
B1419/19	An open or short in the rear room temperature sensor LH*1 or RH*2 circuit.	• Rear room temperature sensor LH*1 • Rear room temperature sensor RH*2 • Harness or connector between rear room temperature sensor LH and air conditioning amplifier assembly*1 • Harness or connector between rear room temperature sensor RH and air conditioning amplifier assembly*2 • Air conditioning amplifier assembly


HINT:

*1: for LHD

*2: for RHD

WIRING DIAGRA

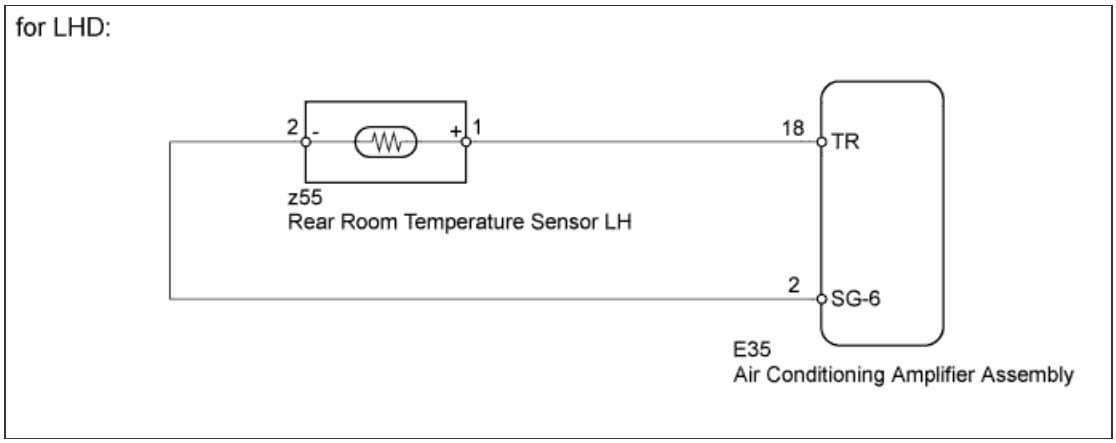

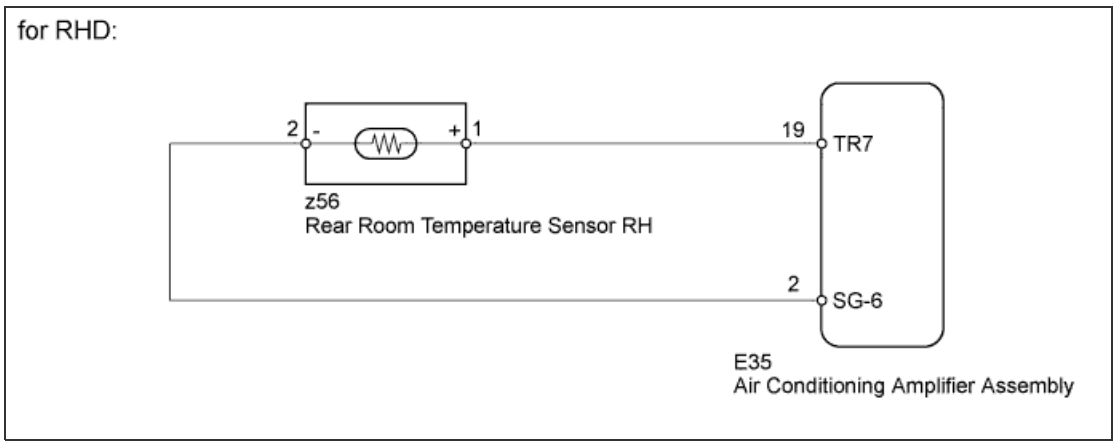

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR CONDITIONER)

a. Use the Data List to check if the rear room temperature sensor LH*1 or RH*2 is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Room Temp Sensor (Rear)	Rear room temperature sensor for LH*1 or RH*2 / Min.: -6.5°C (20.3°F) Max.: 57.25°C (135.05°F)	Actual rear room temperature for LH*1 or RH*2 displayed	Open in the circuit: -6.5°C (20.3°F). Short in the circuit: 57.25°C (135.05°F).

HINT:

*1: for LHD

*2: for RHD

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING A PLIFIER ASSE BLY (Click here)

2.INSPECT REAR ROO TE PERATURE SENSOR

a. for LHD

i. Remove the rear room temperature sensor LH (Click here).


b. for RHD

i. Remove the rear room temperature sensor RH (Click here).

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	10°C (50°F)	3.00 to 3.73 kΩ
	15°C (59°F)	2.45 to 2.88 kΩ
	20°C (68°F)	1.95 to 2.30 kΩ
	25°C (77°F)	1.60 to 1.80 kΩ
	30°C (86°F)	1.28 to 1.47 kΩ
	35°C (95°F)	1.00 to 1.22 kΩ
	40°C (104°F)	0.80 to 1.00 kΩ
	45°C (113°F)	0.65 to 0.85 kΩ
	50°C (122°F)	0.50 to 0.70 kΩ
	55°C (131°F)	0.44 to 0.60 kΩ
	60°C (140°F)	0.36 to 0.50 kΩ

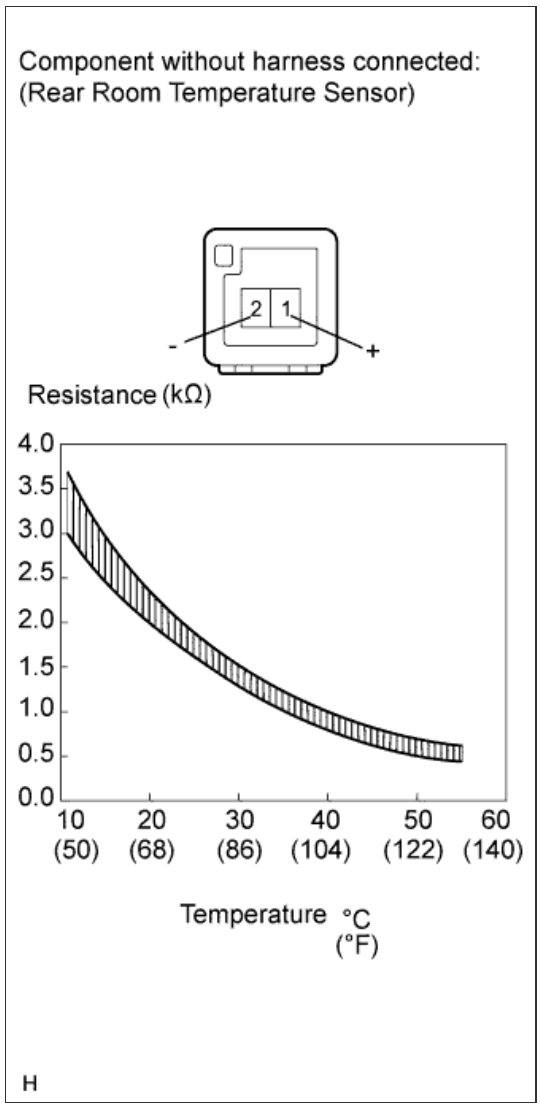

NOTICE:

Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.

HINT:

As the temperature increases, the resistance decreases (see the graph).

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE REAR ROO TE PERATURE SENSOR LH (Click here)

C

REPLACE REAR ROO TE PERATURE SENSOR RH (Click here)

A

3.CHECK HARNESS AND CONNECTOR (REAR ROO TE PERATURE SENSOR - AIR CONDITIONING A PLIFIER)

a. for LHD

i. Disconnect the z55 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
z55-1 (+) - E35-18 (TR)	Always	Below 1 Ω
z55-2 (-) - E35-2 (SG-6)		
E35-18 (TR) - Body ground	Always	10 kΩ or higher
E35-2 (SG-6) - Body ground		

Front view of wire harness connector:
(to Rear Room Temperature Sensor LH)

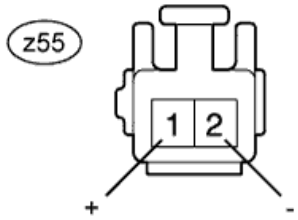

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

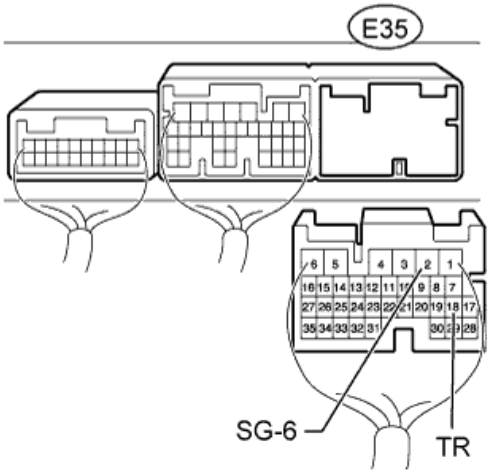

b. for RHD

i. Disconnect the z56 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
z56-2 (-) - E35-2 (SG-6)	Always	Below 1 Ω
z56-1 (+) - E35-19 (TR7)		
E35-2 (SG-6) - Body ground	Always	10 kΩ or higher
E35-19 (TR7) - Body ground		

Front view of wire harness connector:
(to Rear Room Temperature Sensor RH)

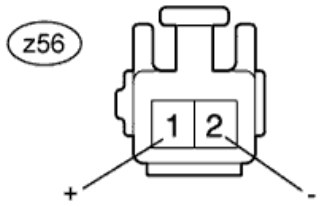

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

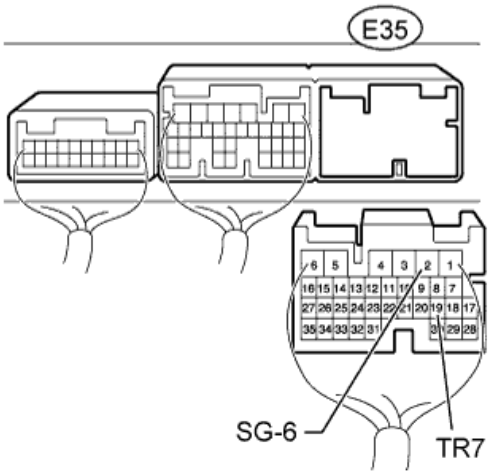

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK → REPLACE AIR CONDITIONING A PLIFIER ASSE BLY (Click here)

DTC B1449/49 Rear Air Outlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The rear air outlet damper servo motor sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the rear air outlet damper to the appropriate position, which controls the air outlet modes.

HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1449/49	The rear air outlet damper position does not change even if the air conditioning amplifier assembly operates the rear air outlet damper servo motor.	• **Rear air outlet damper servo motor** • **No. 2 air conditioning harness assembly** • **Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly** • **Air conditioning amplifier assembly**

WIRING DIAGRAM

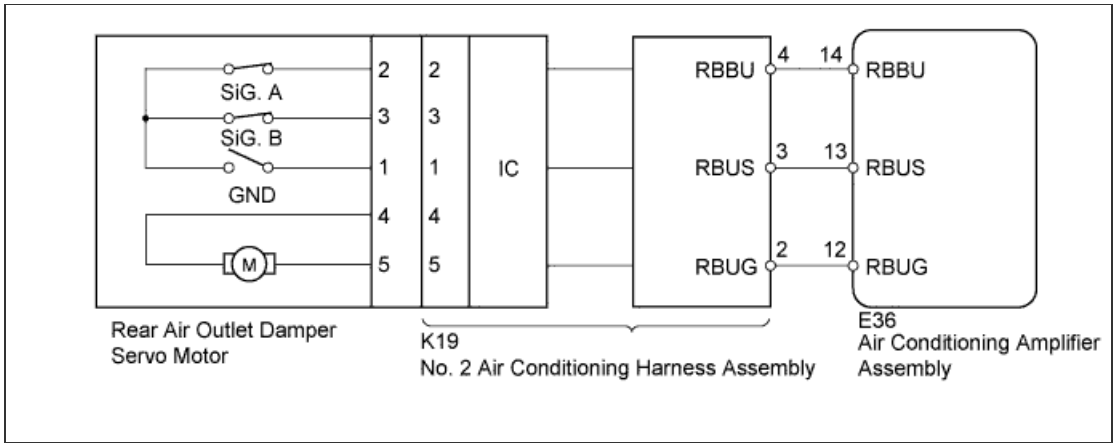

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (REAR AIR OUTLET DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	easurement Item/Range	Normal Condition	Diagnostic Note
Air Outlet Servo Pulse (R)	Rear air outlet damper servo motor target pulse / in.: 7, ax.: 83	Foot: 7 (pulse) B/L: 42 (pulse) FACE: 83 (pulse)	-

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBL (Click here)

2.CHECK HARNESS AND CONNECTOR (NO. 2 AIR CONDITIONING HARNESS - AIR CONDITIONING AMPLIFIER)

a. Disconnect the K19 No. 2 air conditioning harness assembly connector.


b. Disconnect the E36 amplifier connector.

c. easure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K19 2(RBUG) - E36-12 (RBUG)	Always	Below 1 Ω
K19 3(RBUS) - E36-13 (RBUS)		
K19 4(RBBU) - E36-14 (RBBU)		
E36-12 (RBUG) - Body ground	Always	10 kΩ or higher
E36-13 (RBUS) - Body ground		
E36-14 (RBBU) - Body ground		

Front view of wire harness connector: (to No. 2 Air Conditioning Harness Assembly)

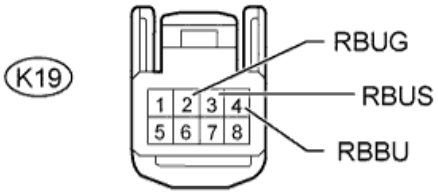

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

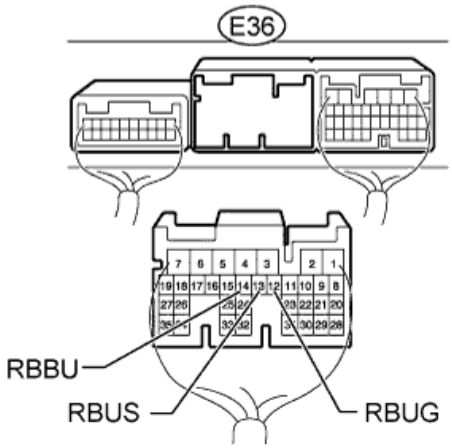

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK REAR AIR OUTLET DAMPER SERVO MOTOR (OPERATION)

a. Replace the rear air outlet damper servo motor (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

4.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1449 is not output.

NG → REPLACE NO. 2 AIR CONDITIONING HARNESS ASSEMBL Click here)

OK

REPLACE REAR AIR OUTLET DAMPER SERVO MOTOR (Click here)

DTC B1419/19 Rear Room Temperature Sensor Circuit

for Preparation Click here

DESCRIPTION

The rear room temperature sensor LH*1 or RH*2 (for driver side) is installed in the rear quarter trim board LH*1 or RH*2 to detect the rear room temperature and control the heater and air conditioner "auto" mode. The resistance of the rear room temperature sensor LH*1 or RH*2 changes in accordance with the rear room temperature for the LH*1 or RH*2 seat. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.

The air conditioning amplifier assembly applies a voltage (5 V) to the rear room temperature sensor LH*1 or RH*2 and reads voltage changes as changes in the resistance of the rear room temperature sensor LH*1 or RH*2.


DTC Code	DTC Detection Condition	Trouble Area
B1419/19	An open or short in the rear room temperature sensor LH*1 or RH*2 circuit.	• Rear room temperature sensor LH*1 • Rear room temperature sensor RH*2 • Harness or connector between rear room temperature sensor LH and air conditioning amplifier assembly*1 • Harness or connector between rear room temperature sensor RH and air conditioning amplifier assembly*2 • Air conditioning amplifier assembly


HINT:

*1: for LHD

*2: for RHD

WIRING DIAGRA

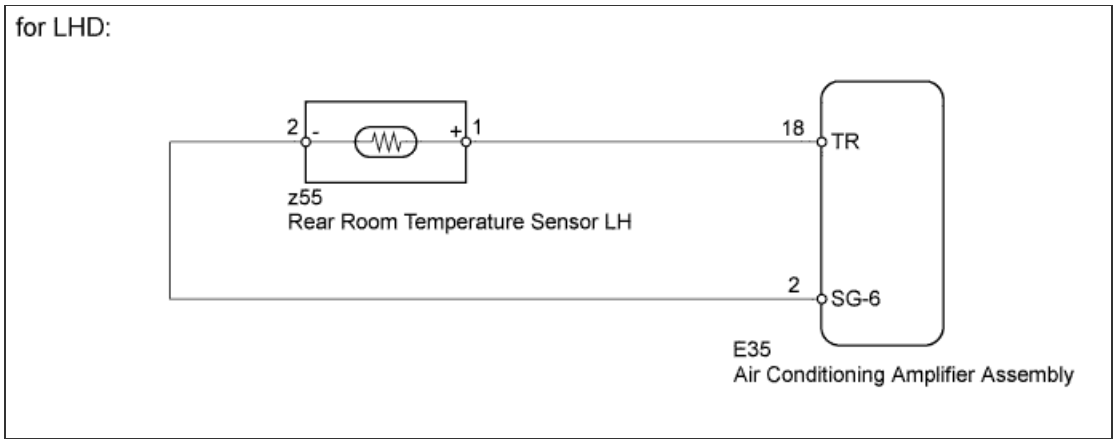

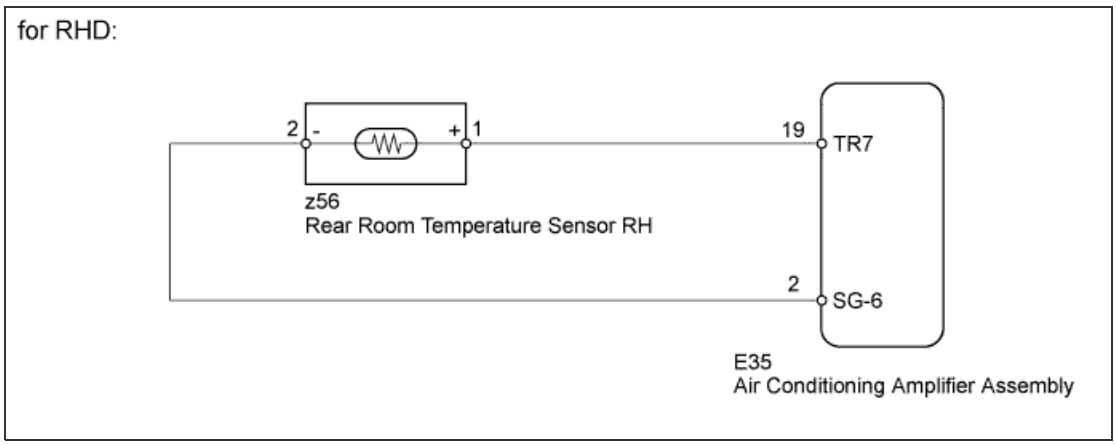

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR CONDITIONER)

a. Use the Data List to check if the rear room temperature sensor LH*1 or RH*2 is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Room Temp Sensor (Rear)	Rear room temperature sensor for LH*1 or RH*2 / Min.: -6.5°C (20.3°F) Max.: 57.25°C (135.05°F)	Actual rear room temperature for LH*1 or RH*2 displayed	Open in the circuit: -6.5°C (20.3°F). Short in the circuit: 57.25°C (135.05°F).

HINT:

*1: for LHD

*2: for RHD

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING A PLIFIER ASSE BLY (Click here)

2.INSPECT REAR ROO TE PERATURE SENSOR

a. for LHD

i. Remove the rear room temperature sensor LH (Click here).


b. for RHD

i. Remove the rear room temperature sensor RH (Click here).

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	10°C (50°F)	3.00 to 3.73 kΩ
	15°C (59°F)	2.45 to 2.88 kΩ
	20°C (68°F)	1.95 to 2.30 kΩ
	25°C (77°F)	1.60 to 1.80 kΩ
	30°C (86°F)	1.28 to 1.47 kΩ
	35°C (95°F)	1.00 to 1.22 kΩ
	40°C (104°F)	0.80 to 1.00 kΩ
	45°C (113°F)	0.65 to 0.85 kΩ
	50°C (122°F)	0.50 to 0.70 kΩ
	55°C (131°F)	0.44 to 0.60 kΩ
	60°C (140°F)	0.36 to 0.50 kΩ

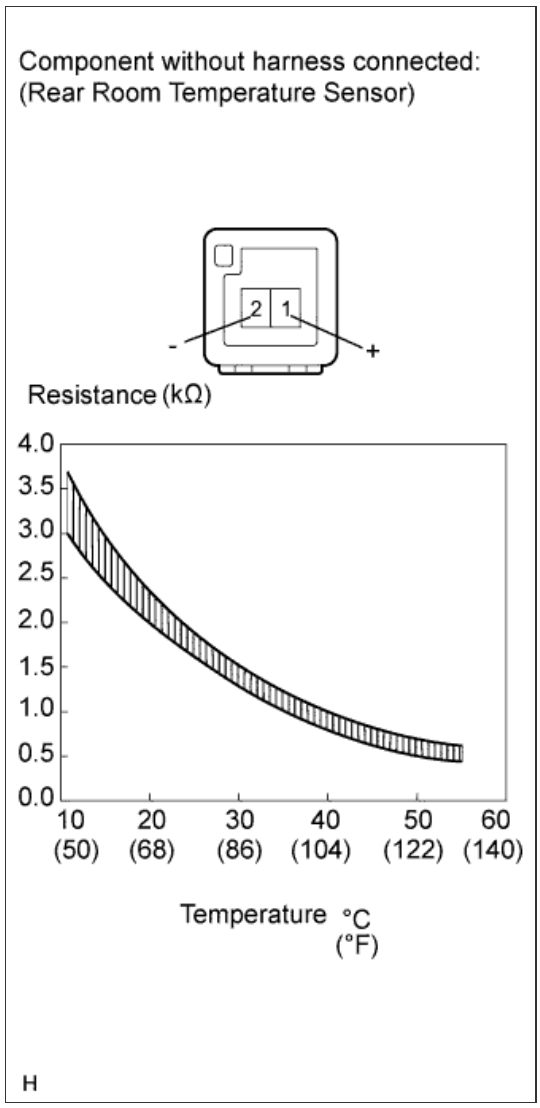

NOTICE:

Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.

HINT:

As the temperature increases, the resistance decreases (see the graph).

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE REAR ROO TE PERATURE SENSOR LH (Click here)

C

REPLACE REAR ROO TE PERATURE SENSOR RH (Click here)

A

3.CHECK HARNESS AND CONNECTOR (REAR ROO TE PERATURE SENSOR - AIR CONDITIONING A PLIFIER)

a. for LHD

i. Disconnect the z55 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
z55-1 (+) - E35-18 (TR)	Always	Below 1 Ω
z55-2 (-) - E35-2 (SG-6)		
E35-18 (TR) - Body ground	Always	10 kΩ or higher
E35-2 (SG-6) - Body ground		

Front view of wire harness connector:
(to Rear Room Temperature Sensor LH)

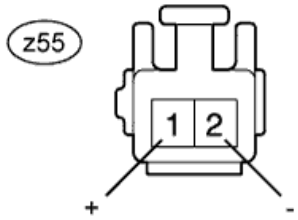

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

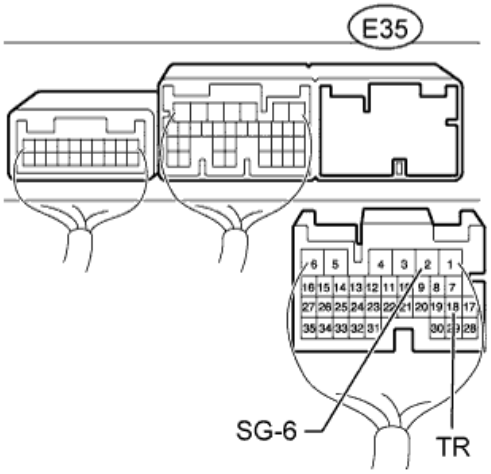

b. for RHD

i. Disconnect the z56 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
z56-2 (-) - E35-2 (SG-6)	Always	Below 1 Ω
z56-1 (+) - E35-19 (TR7)		
E35-2 (SG-6) - Body ground	Always	10 kΩ or higher
E35-19 (TR7) - Body ground		

Front view of wire harness connector:
(to Rear Room Temperature Sensor RH)

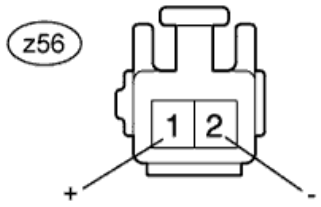

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

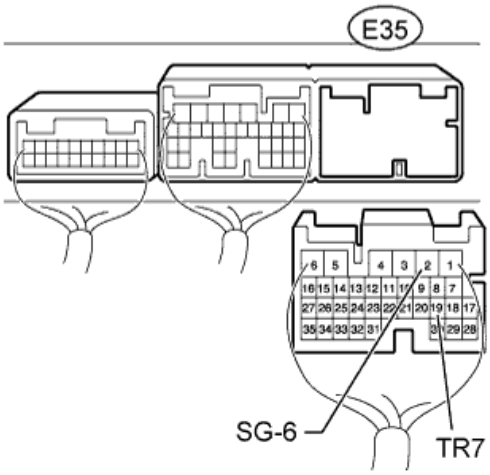

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK → REPLACE AIR CONDITIONING A PLIFIER ASSE BLY (Click here)

DTC B1455/55 Driver Side Air Outlet Damper FOOT/DEF Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


Air outlet damper servo motor (for DEF mode) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air outlet damper (for DEF mode) to any position, which controls the air outlet changes.

HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1455/55	The air outlet damper position does not change even if the air conditioning amplifier assembly operates the air outlet damper servo motor (for DEF mode)	• Air outlet damper servo motor (for DEF mode) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

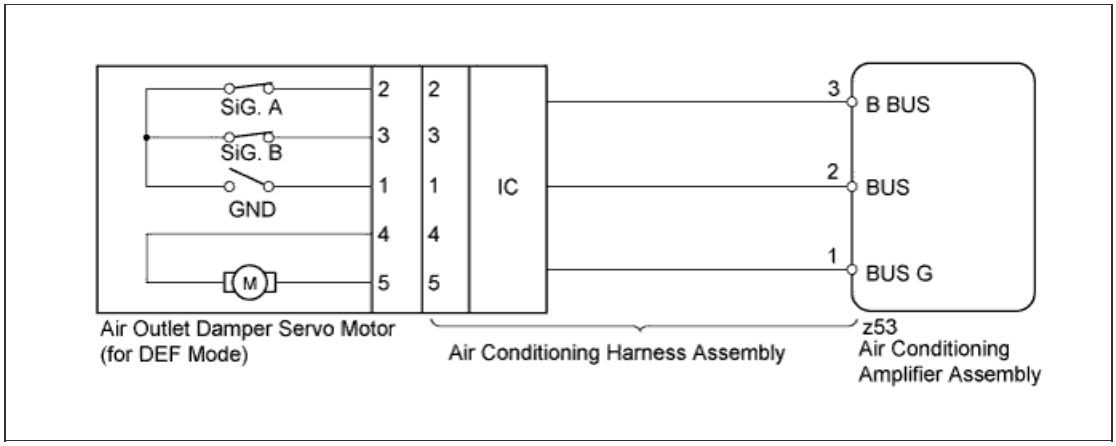

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR OUTLET DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
A/O Damper FOOT/DEF Pos(P)	Air outlet damper servo motor (for DEF mode) target pulse / Min.: 6, Max.: 117	• FACE1: 117 (pulse) • FACE2: 109 (pulse) • B/L1: 93 (pulse) • B/L2: 81 (pulse) • FOOT-D: 52 (pulse) • FOOT-R: 41 (pulse) • FOOT-F: 41 (pulse) • F/D: 18 (pulse) • DEF: 6 (pulse)	-

OK:

The display is as specified in the normal condition.

NG	Go to step 2
OK	

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (**Click here**)

2.CHECK AIR OUTLET DAMPER SERVO MOTOR (OPERATION)

a. Replace the air outlet servo motor (for DEF mode) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1456 is not output.

NG → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (**Click here**)


OK

REPLACE AIR OUTLET DAMPER SERVO MOTOR (for DEF mode) (**Click here**)

DTC B1421/21 Solar Sensor Circuit (Passenger Side)

for Preparation Click here

DESCRIPTION

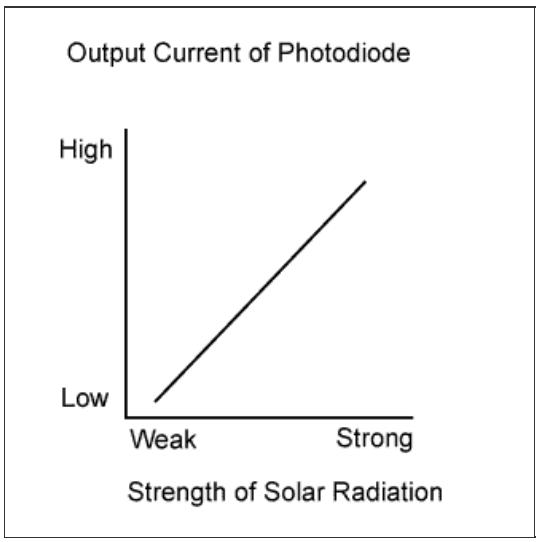


The automatic light control sensor (solar sensor), which is installed on the upper side of the instrument panel, detects sunlight and controls the air conditioning in auto mode. The output current from the solar sensor varies according to the amount of sunlight. When the sunlight increases, the output current increases. As the sunlight decreases, the output current decreases. The air conditioning amplifier assembly detects output current from the solar sensor.


DTC Code	DTC Detection Condition	Trouble Area
B1421/21	An open or short in the passenger side solar sensor circuit.	• Automatic light control sensor (solar sensor) • Harness or connector between solar sensor and air conditioning amplifier assembly • Harness or connector between solar sensor and main body ECU (cowl side junction block) • Main body ECU (cowl side junction block) • Air conditioning amplifier assembly

HINT:

If DTC B1244 is output at the same time, troubleshoot DTC B1244 first.

WIRING DIAGRAM

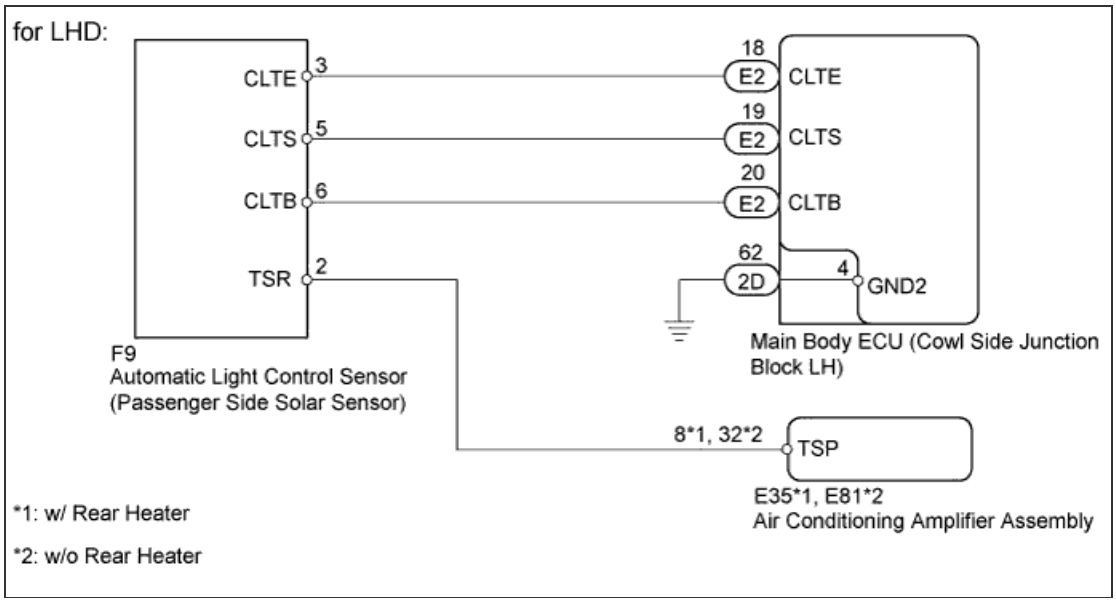

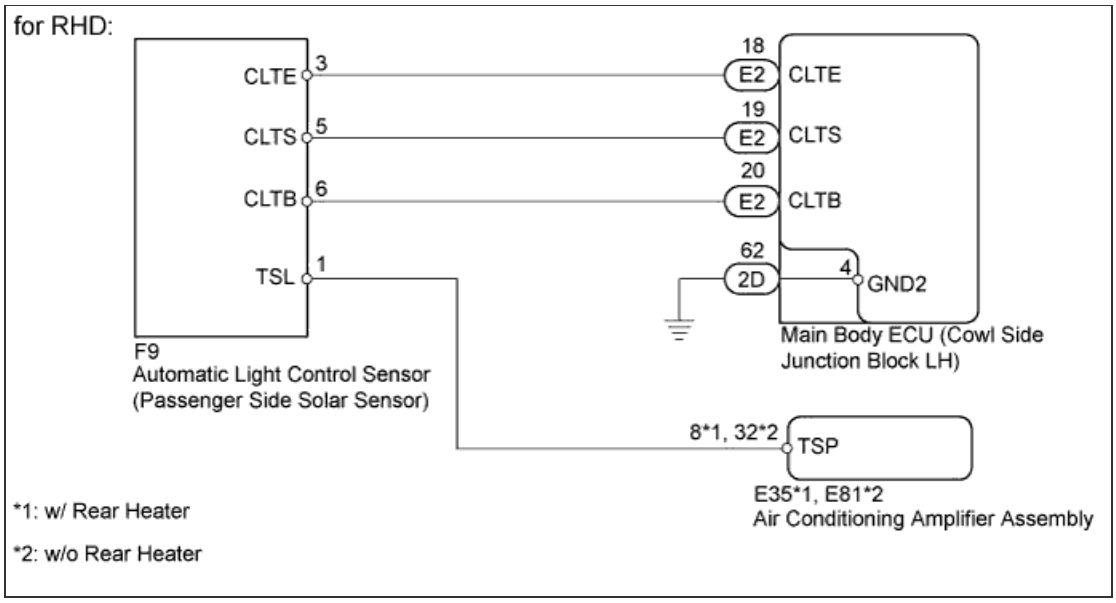

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (PASSENGER SIDE SOLAR SENSOR)

a. Use the Data ist to check if the front passenger side solar sensor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Solar Sensor (P Side)	Passenger side solar sensor / Min.: 0, Max.: 255	Passenger side solar sensor voltage increases as brightness increases	Open in the circuit: 0. Short in the circuit: 255.

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - AUTOMATIC LIGHT CONTROL SENSOR)

a. w/ Rear Heater

i. Disconnect the F9 sensor connector.

ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-8 (TSP) - F9-2 (TSR)*1	Always	Below 1 Ω
E35-8 (TSP) - F9-1 (TS)*2	Always	Below 1 Ω
E35-8 (TSP) - Body ground	Always	10 kΩ or higher

HINT:

*1: for D

*2: for RHD

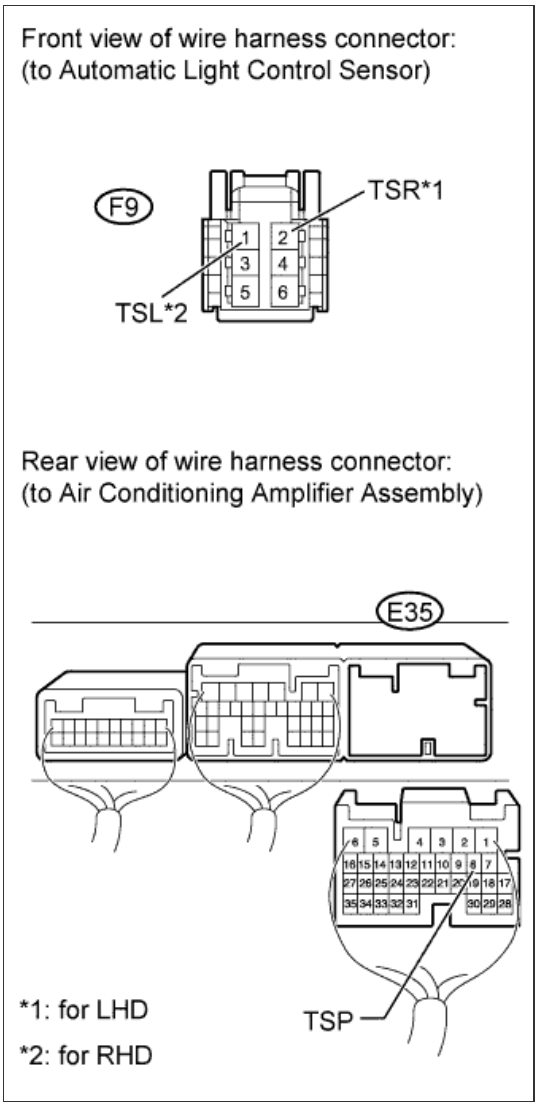

b. w/o Rear Heater

i. Disconnect the F9 sensor connector.

ii. Disconnect the E81 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-32 (TSP) - F9-2 (TSR)*1	Always	Below 1 Ω
E81-32 (TSP) - F9-1 (TS)*2	Always	Below 1 Ω
E81-32 (TSP) - Body ground	Always	10 kΩ or higher

HINT:

*1: for D

*2: for RHD

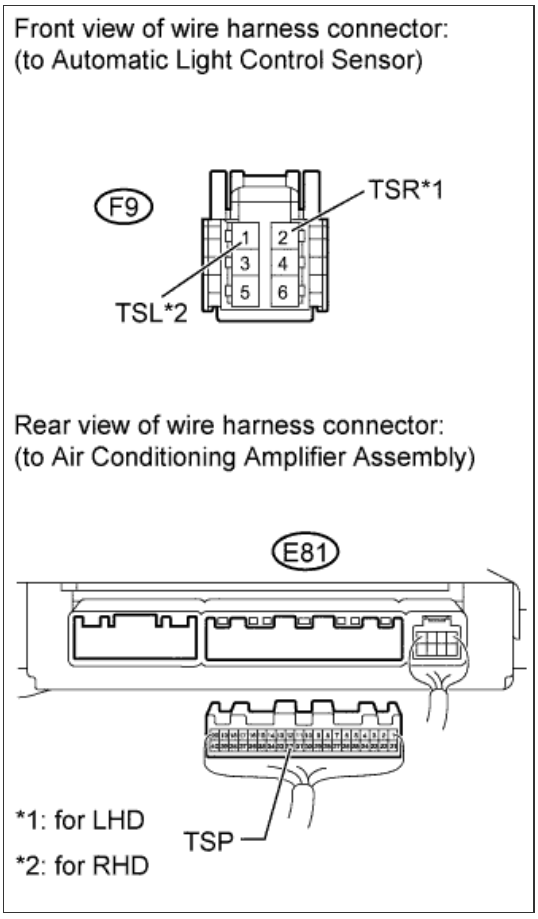

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT AUTOMATIC LIGHT CONTROL SENSOR (TSR, TSL - CLTE VOLTAGE)

a. Remove the automatic light control sensor (Click here).


b. Apply battery voltage between terminals 6 (C TB) and 3 (C TE) of the solar sensor.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
2 (TSR) - 3 (C TE)*1	Sensor exposed to electric light	0.8 to 4.3 V
	Sensor covered with a cloth	Below 0.8 V
1 (TS) - 3 (C TE)*2	Sensor exposed to electric light	0.8 to 4.3 V
	Sensor covered with a cloth	Below 0.8 V

Component with harness connected:
(Automatic Light Control Sensor)

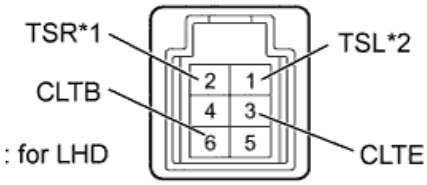

*1: for LHD

*2: for RHD

HINT:

- **As the inspection light is moved away from the sensor, the voltage decreases.**
- **Use an incandescent light for inspection. Bring it about 300 mm (11.8 in.) from the solar sensor.**
- ***1: for LHD**
- ***2: for RHD**

NG → REPLACE AUTOMATIC LIGHT CONTROL SENSOR (Click here)

OK

4.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - AUTOMATIC LIGHT CONTROL SENSOR)

a. Disconnect the E2 ECU connector.


b. Disconnect the F9 sensor connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E2-20 (C TB) - F9-6 (C TB)	Always	Below 1 Ω
E2-19 (C TS) - F9-5 (C TS)		
E2-18 (C TE) - F9-3 (C TE)		
E2-20 (C TB) - Body ground	Always	10 kΩ or higher
E2-19 (C TS) - Body ground		
E2-18 (C TE) - Body ground		

Front view of wire harness connector:
(to Main Body ECU)

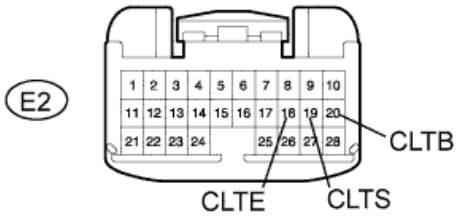

Front view of wire harness connector:
(to Automatic Light Control Sensor)

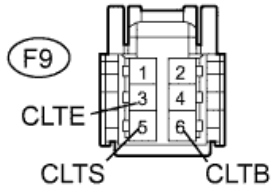

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

DTC B1455/55 Driver Side Air Outlet Damper FOOT/DEF Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


Air outlet damper servo motor (for DEF mode) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air outlet damper (for DEF mode) to any position, which controls the air outlet changes.

HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1455/55	The air outlet damper position does not change even if the air conditioning amplifier assembly operates the air outlet damper servo motor (for DEF mode)	• Air outlet damper servo motor (for DEF mode) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

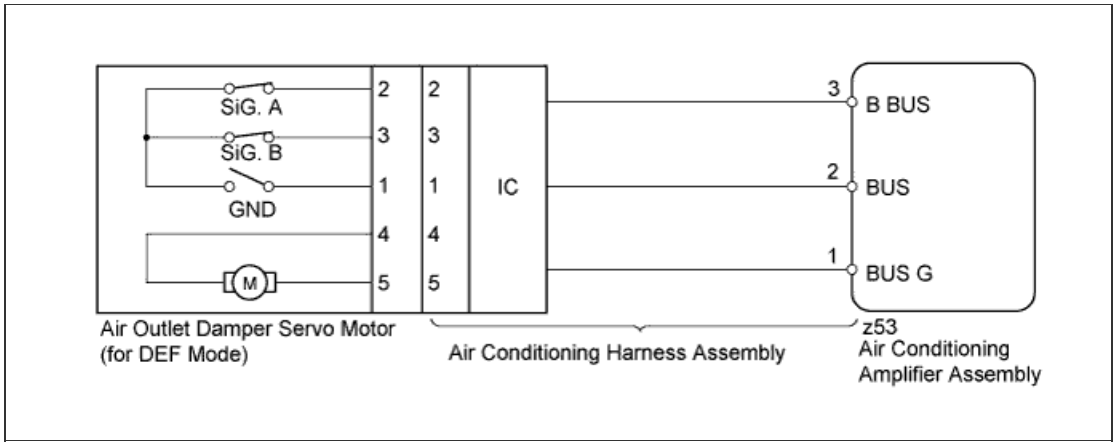

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR OUTLET DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
A/O Damper FOOT/DEF Pos(P)	Air outlet damper servo motor (for DEF mode) target pulse / Min.: 6, Max.: 117	• FACE1: 117 (pulse) • FACE2: 109 (pulse) • B/L1: 93 (pulse) • B/L2: 81 (pulse) • FOOT-D: 52 (pulse) • FOOT-R: 41 (pulse) • FOOT-F: 41 (pulse) • F/D: 18 (pulse) • DEF: 6 (pulse)	-

OK:

The display is as specified in the normal condition.

NG	Go to step 2
OK	

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (**Click here**)

2.CHECK AIR OUTLET DAMPER SERVO MOTOR (OPERATION)

a. Replace the air outlet servo motor (for DEF mode) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1456 is not output.

NG → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (**Click here**)


OK

REPLACE AIR OUTLET DAMPER SERVO MOTOR (for DEF mode) (**Click here**)

DTC B1421/21 Solar Sensor Circuit (Passenger Side)

for Preparation Click here

DESCRIPTION

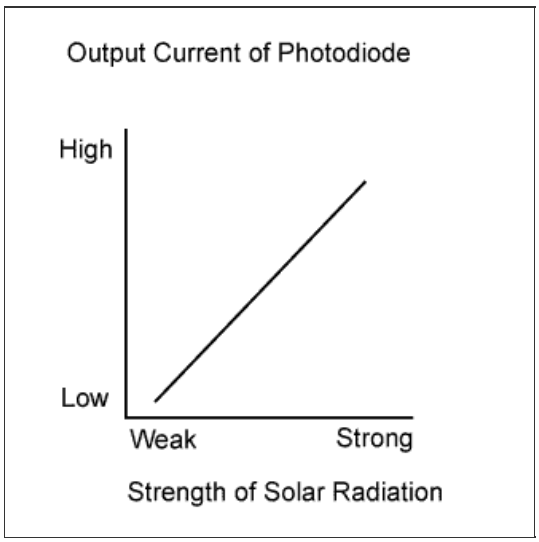


The automatic light control sensor (solar sensor), which is installed on the upper side of the instrument panel, detects sunlight and controls the air conditioning in auto mode. The output current from the solar sensor varies according to the amount of sunlight. When the sunlight increases, the output current increases. As the sunlight decreases, the output current decreases. The air conditioning amplifier assembly detects output current from the solar sensor.


DTC Code	DTC Detection Condition	Trouble Area
B1421/21	An open or short in the passenger side solar sensor circuit.	• Automatic light control sensor (solar sensor) • Harness or connector between solar sensor and air conditioning amplifier assembly • Harness or connector between solar sensor and main body ECU (cowl side junction block) • Main body ECU (cowl side junction block) • Air conditioning amplifier assembly

HINT:

If DTC B1244 is output at the same time, troubleshoot DTC B1244 first.

WIRING DIAGRAM

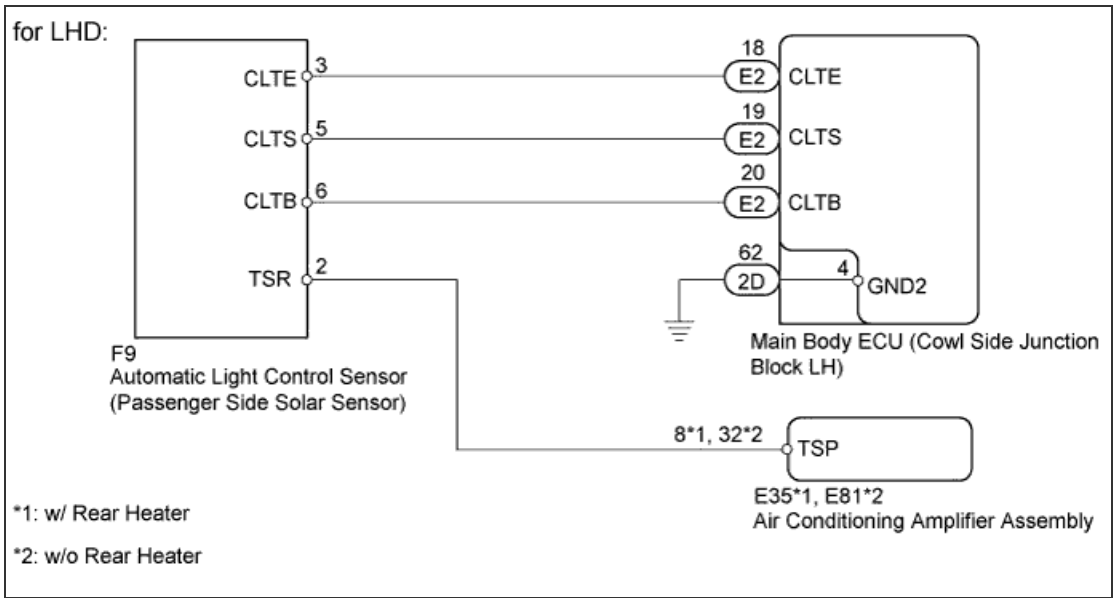

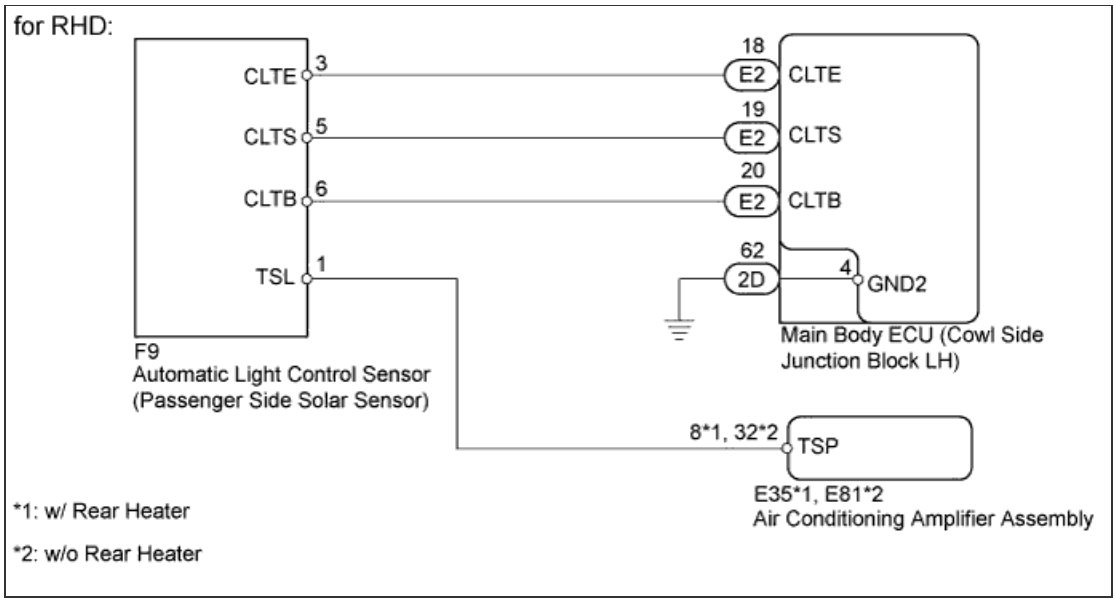

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (PASSENGER SIDE SOLAR SENSOR)

a. Use the Data ist to check if the front passenger side solar sensor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Solar Sensor (P Side)	Passenger side solar sensor / Min.: 0, Max.: 255	Passenger side solar sensor voltage increases as brightness increases	Open in the circuit: 0. Short in the circuit: 255.

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - AUTOMATIC LIGHT CONTROL SENSOR)

a. w/ Rear Heater

i. Disconnect the F9 sensor connector.

ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-8 (TSP) - F9-2 (TSR)*1	Always	Below 1 Ω
E35-8 (TSP) - F9-1 (TS)*2	Always	Below 1 Ω
E35-8 (TSP) - Body ground	Always	10 kΩ or higher

HINT:

*1: for D

*2: for RHD

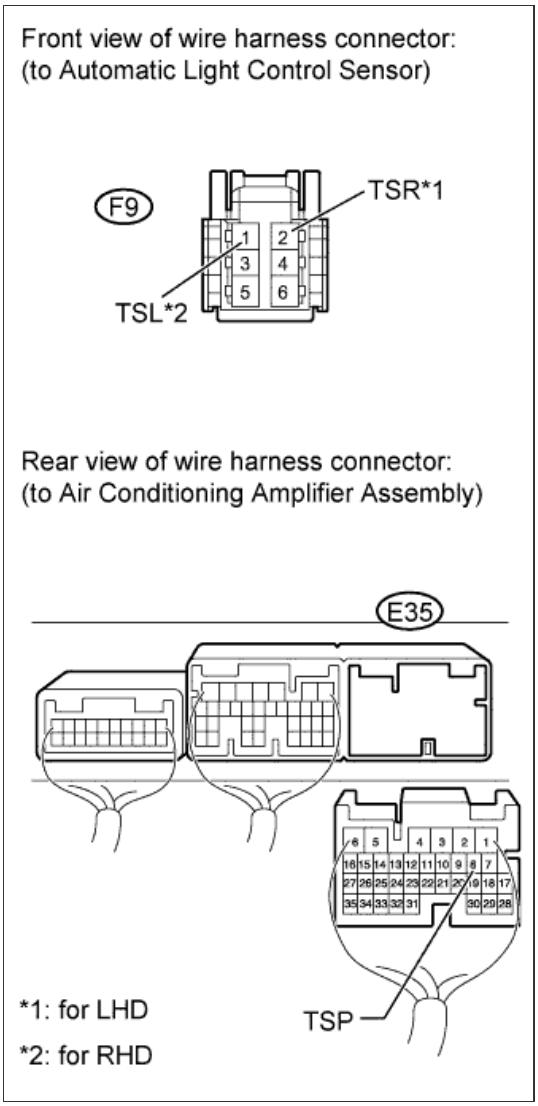

b. w/o Rear Heater

i. Disconnect the F9 sensor connector.

ii. Disconnect the E81 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-32 (TSP) - F9-2 (TSR)*1	Always	Below 1 Ω
E81-32 (TSP) - F9-1 (TS)*2	Always	Below 1 Ω
E81-32 (TSP) - Body ground	Always	10 kΩ or higher

HINT:

*1: for D

*2: for RHD

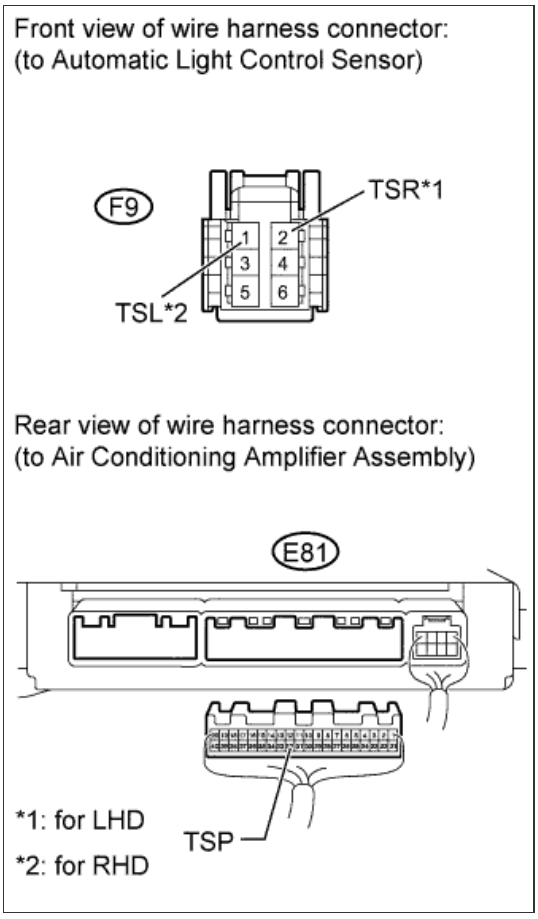

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT AUTOMATIC LIGHT CONTROL SENSOR (TSR, TSL - CLTE VOLTAGE)

a. Remove the automatic light control sensor (Click here).


b. Apply battery voltage between terminals 6 (C TB) and 3 (C TE) of the solar sensor.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
2 (TSR) - 3 (C TE)*1	Sensor exposed to electric light	0.8 to 4.3 V
	Sensor covered with a cloth	Below 0.8 V
1 (TS) - 3 (C TE)*2	Sensor exposed to electric light	0.8 to 4.3 V
	Sensor covered with a cloth	Below 0.8 V

Component with harness connected:
(Automatic Light Control Sensor)

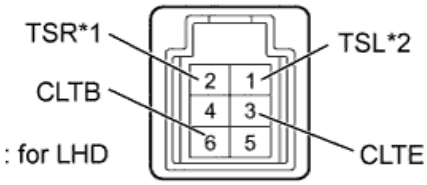

*1: for LHD

*2: for RHD

HINT:

- **As the inspection light is moved away from the sensor, the voltage decreases.**
- **Use an incandescent light for inspection. Bring it about 300 mm (11.8 in.) from the solar sensor.**
- ***1: for LHD**
- ***2: for RHD**

NG → REPLACE AUTOMATIC LIGHT CONTROL SENSOR (Click here)

OK

4.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - AUTOMATIC LIGHT CONTROL SENSOR)

a. Disconnect the E2 ECU connector.


b. Disconnect the F9 sensor connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E2-20 (C TB) - F9-6 (C TB)	Always	Below 1 Ω
E2-19 (C TS) - F9-5 (C TS)		
E2-18 (C TE) - F9-3 (C TE)		
E2-20 (C TB) - Body ground	Always	10 kΩ or higher
E2-19 (C TS) - Body ground		
E2-18 (C TE) - Body ground		

Front view of wire harness connector:
(to Main Body ECU)

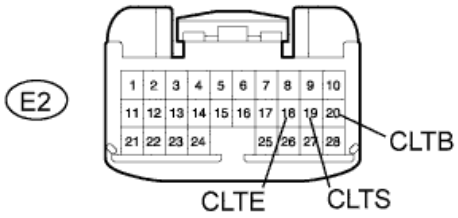

Front view of wire harness connector:
(to Automatic Light Control Sensor)

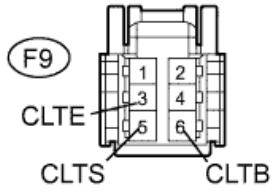

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

DTC B1457/57 Driver Side Air Outlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION

The front air mix damper servo motor (for driver side rear air flow) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the front air mix damper (for driver side rear air flow) to any position. As a result, the amount of air that has passed through the evaporator and is passing through the heater core is adjusted, and the temperature of the air blowing toward the rear driver side is controlled.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.


DTC Code	DTC Detection Condition	Trouble Area
B1457/57	The air mix damper position does not change even if the air conditioning amplifier assembly operates the front air mix damper servo motor.	• Front air mix damper servo motor (for driver side rear air flow) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

w/ Rear Heater:

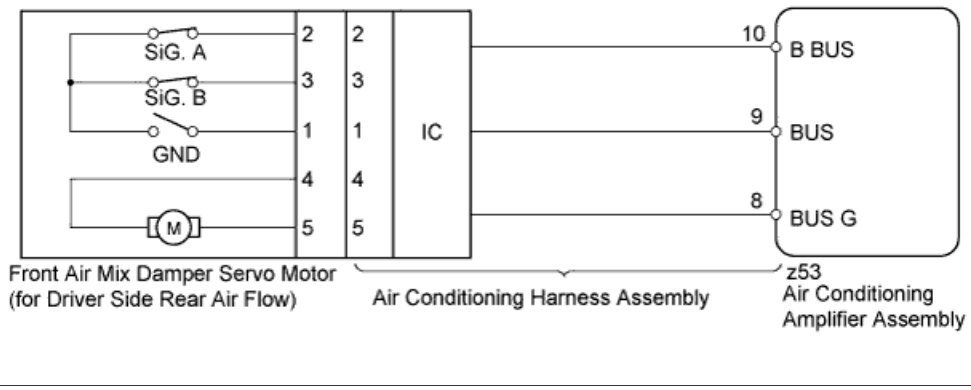

w/o Rear Heater:

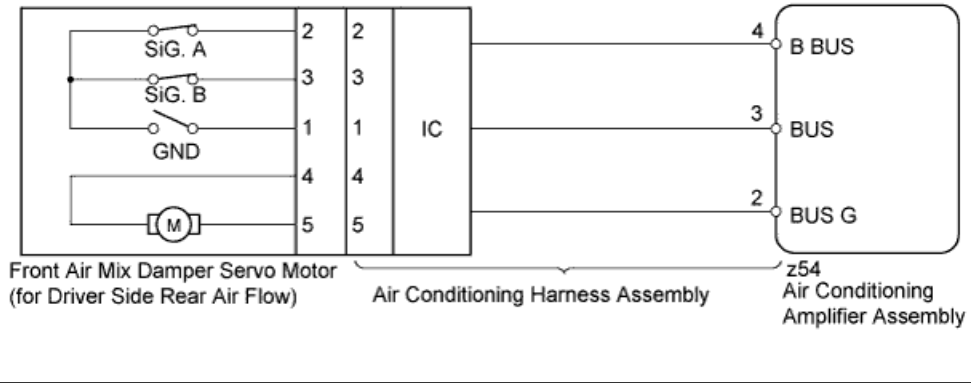

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FRONT AIR MIX DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
		for LHD • MAX COOL: 13 (pulse)	

Air Mix Servo Targ Pls(F&R D)	Front air mix damper servo motor (for driver side rear air flow) target pulse / Min.: 13, Max.: 41 (for LHD) Min.: 5, Max.: 33 (for RHD)	for RHD • MAX HOT: 41 (pulse) • MAX COOL: 33 (pulse) • MAX HOT: 5 (pulse)	-

OK:

The display is specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK FRONT AIR MIX DAMPER SERVO MOTOR (OPERATION)

a. for LHD

i. Replace the front air mix damper servo motor (for driver side rear air flow) (Click here).

b. for RHD

i. Replace the front air mix damper servo motor (for driver side rear air flow) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT →

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:

DTC B1457 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE FRONT AIR MIX DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A →

REPLACE FRONT AIR MIX DAMPER SERVO MOTOR (Click here)

DTC B1422/22 Compressor Lock Sensor Circuit


for Preparation Click here


SYSTEM DESCRIPTION

The ECM sends the engine speed signal to the air conditioning amplifier assembly via CAN communication.
The air conditioning amplifier assembly reads the difference between compressor speed and engine speed. When the difference becomes too large, the air conditioning amplifier assembly determines that the compressor is locked, and turns the magnetic clutch off.

DTC Code	DTC Detection Condition	Trouble Area
B1422/22	An open or short in the compressor lock sensor circuit.	• Cooler compressor assembly (A/C lock sensor) • Compressor drive belt • Harness or connector between cooler compressor assembly and air conditioning amplifier assembly • Air conditioning amplifier assembly • CAN communication line

WIRING DIAGRAM

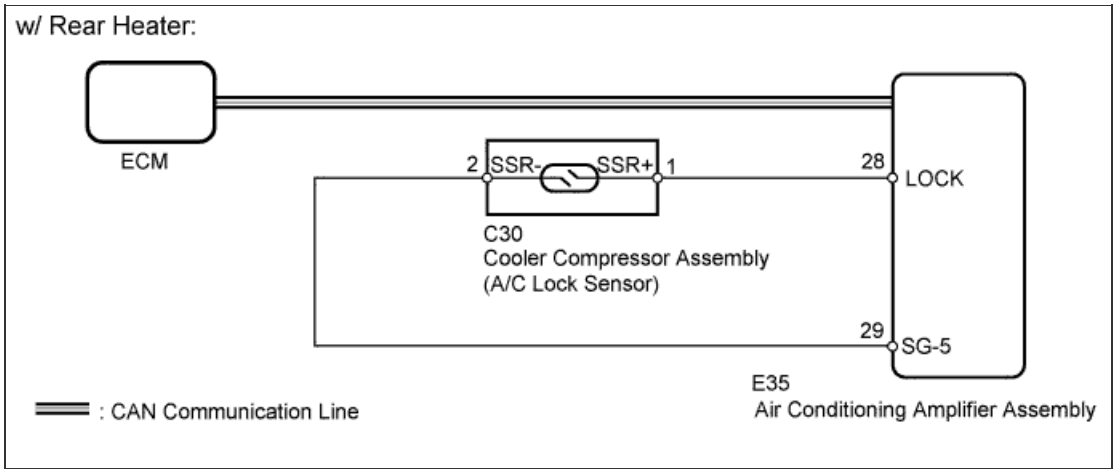

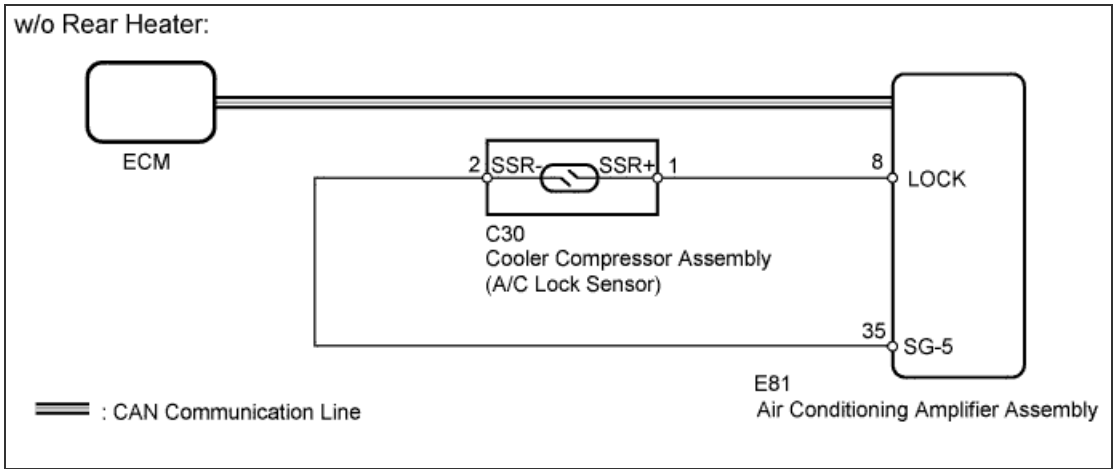

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C


B	GO TO CAN COMMUNICATION SYSTEM (Click here)
C	GO TO CAN COMMUNICATION SYSTEM (Click here)

A

2.INSPECT AIR CONDITIONING AMPLIFIER ASSEMBLY

a. w/ Rear Heater


i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

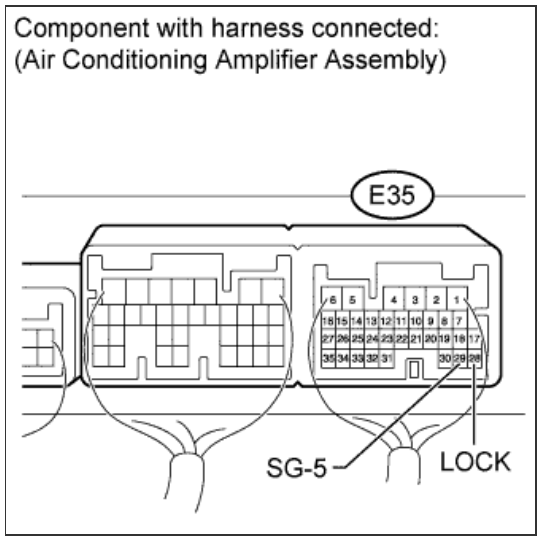

ii. Measure the waveform of the connector.


Measurement Condition

Item	Contents
Terminal No. (Symbol)	E35-28 (LOCK) - E35-29 (SG-5)
Tool Setting	200 mV/DIV., 10 ms/DIV.
Condition	Engine running A/C switch on Blower switch LO

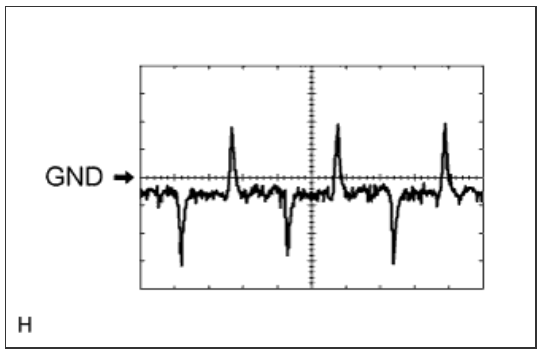

b. w/o Rear Heater


i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

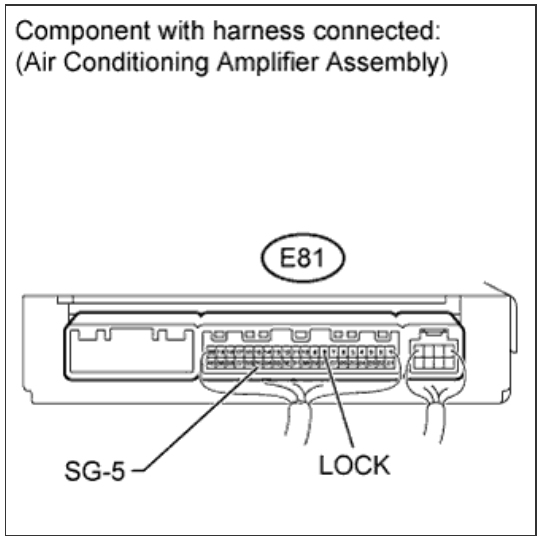

ii. Measure the waveform of the connector.

Measurement Condition

Item	Contents
Terminal No. (Symbol)	E81-8 (LOCK) - E81-35 (SG-5)
Tool Setting	200 mV/DIV., 10 ms/DIV.
Condition	Engine running A/C switch on Blower switch LO

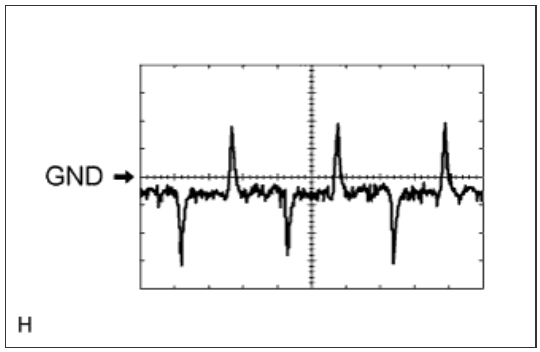

NG → Go to step

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)


3.INSPECT COOLER COMPRESSOR ASSEMBLY (A/C LOCK SENSOR)

a. Disconnect the C30 connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance

Tester Connection	Condition	Specified Condition
C30-1 (SSR+) - C30-2 (SSR-)	20°C (68°F)	65 to 125 Ω

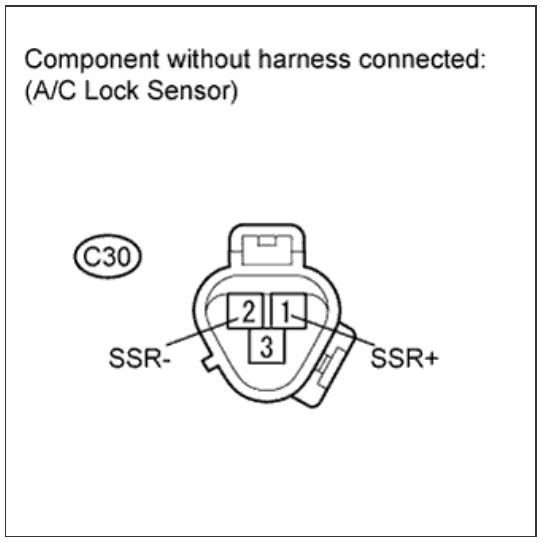

NG → REPLACE COOLER COMPRESSOR ASSEMBLY (A/C LOCK SENSOR)

OK →

4.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - A/C LOCK SENSOR)

a. w/ Rear Heater

i. Disconnect the E35 amplifier connector.


ii. Disconnect the C30 compressor connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance

Tester Connection	Condition	Specified Condition
E35-28 (LOCK) - C30-1 (SSR+)	Always	Below 1 Ω
E35-29 (SG-5) - C30-2 (SSR-)	Always	Below 1 Ω
E35-28 (LOCK) - Body ground	Always	10 kΩ or higher
E35-29 (SG-5) -		

Body ground	Always	10 kΩ or higher

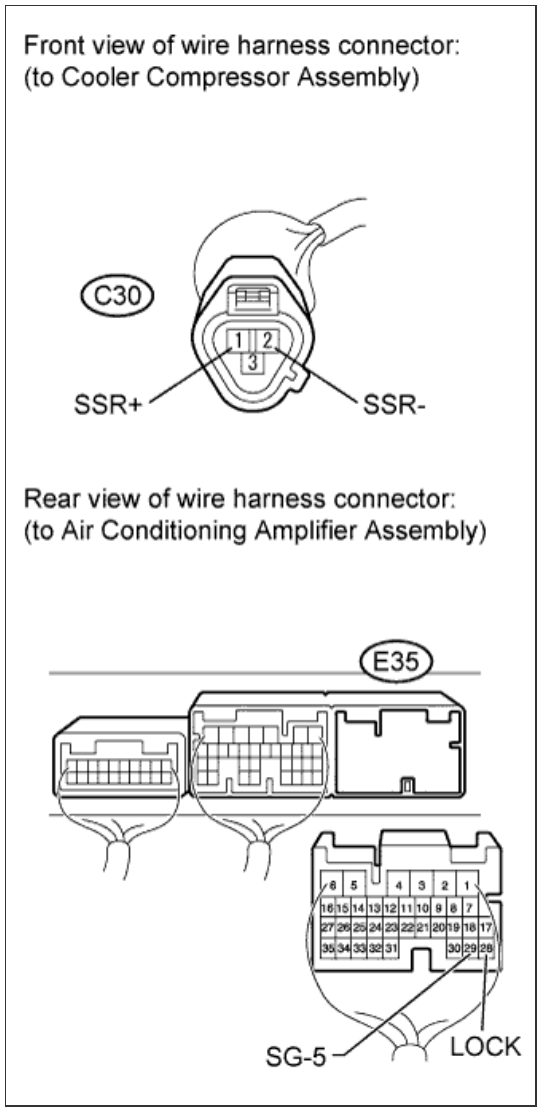

b. w/o Rear Heater

i. Disconnect the E81 amplifier connector.


ii. Disconnect the C30 compressor connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance

Tester Connection	Condition	Specified Condition
E81-8 (LOCK) - C30-1 (SSR+)	Always	Below 1 Ω
E81-35 (SG-5) - C30-2 (SSR-)	Always	Below 1 Ω
E81-8 (LOCK) - Body ground	Always	10 kΩ or higher
E81-35 (SG-5) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Cooler Compressor Assembly)

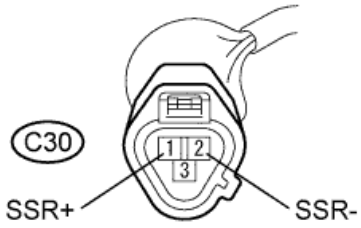

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

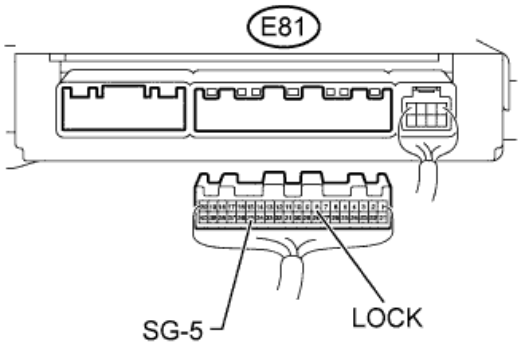

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1457/57 Driver Side Air Outlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION

The front air mix damper servo motor (for driver side rear air flow) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the front air mix damper (for driver side rear air flow) to any position. As a result, the amount of air that has passed through the evaporator and is passing through the heater core is adjusted, and the temperature of the air blowing toward the rear driver side is controlled.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.


DTC Code	DTC Detection Condition	Trouble Area
B1457/57	The air mix damper position does not change even if the air conditioning amplifier assembly operates the front air mix damper servo motor.	• Front air mix damper servo motor (for driver side rear air flow) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

w/ Rear Heater:

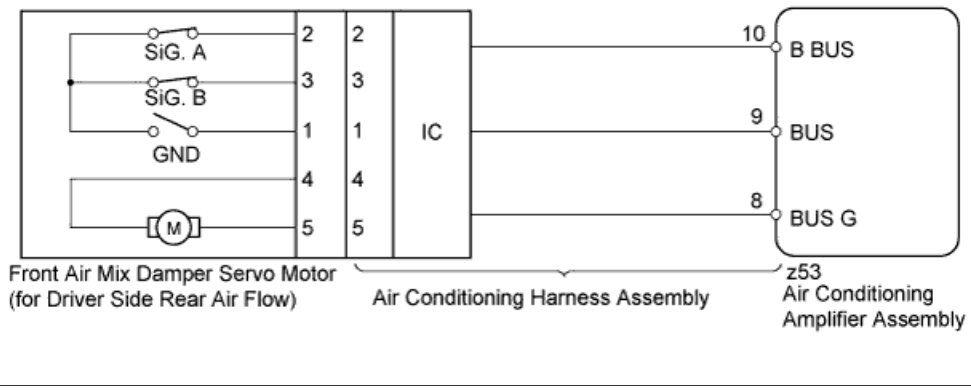

w/o Rear Heater:

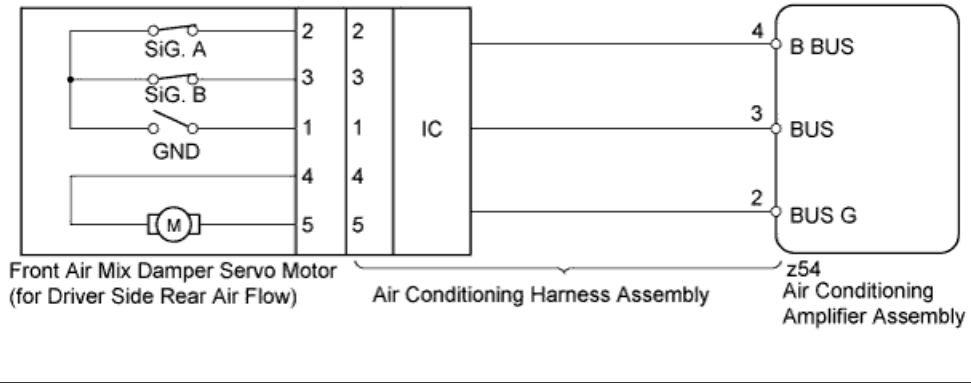

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FRONT AIR MIX DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
		for LHD • MAX COOL: 13 (pulse)	

Air Mix Servo Targ Pls(F&R D)	Front air mix damper servo motor (for driver side rear air flow) target pulse / Min.: 13, Max.: 41 (for LHD) Min.: 5, Max.: 33 (for RHD)	for RHD • MAX HOT: 41 (pulse) • MAX COOL: 33 (pulse) • MAX HOT: 5 (pulse)	-

OK:

The display is specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK FRONT AIR MIX DAMPER SERVO MOTOR (OPERATION)

a. for LHD

i. Replace the front air mix damper servo motor (for driver side rear air flow) (Click here).

b. for RHD

i. Replace the front air mix damper servo motor (for driver side rear air flow) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT →

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:

DTC B1457 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE FRONT AIR MIX DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A →

REPLACE FRONT AIR MIX DAMPER SERVO MOTOR (Click here)

DTC B1422/22 Compressor Lock Sensor Circuit


for Preparation Click here


SYSTEM DESCRIPTION

The ECM sends the engine speed signal to the air conditioning amplifier assembly via CAN communication.
The air conditioning amplifier assembly reads the difference between compressor speed and engine speed. When the difference becomes too large, the air conditioning amplifier assembly determines that the compressor is locked, and turns the magnetic clutch off.

DTC Code	DTC Detection Condition	Trouble Area
B1422/22	An open or short in the compressor lock sensor circuit.	• Cooler compressor assembly (A/C lock sensor) • Compressor drive belt • Harness or connector between cooler compressor assembly and air conditioning amplifier assembly • Air conditioning amplifier assembly • CAN communication line

WIRING DIAGRAM

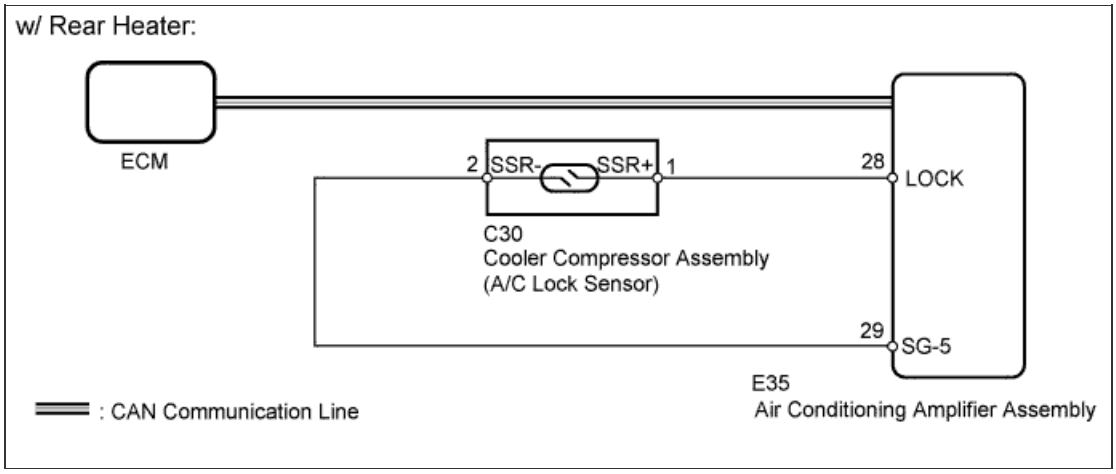

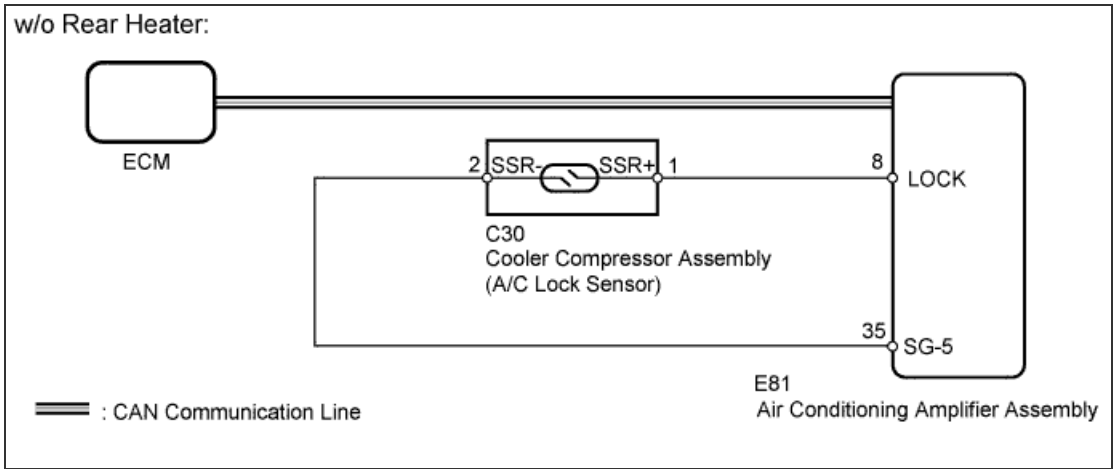

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Use the intelligent tester to check if the CAN communication system is functioning normally.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C


B	GO TO CAN COMMUNICATION SYSTEM (Click here)
C	GO TO CAN COMMUNICATION SYSTEM (Click here)

A

2.INSPECT AIR CONDITIONING AMPLIFIER ASSEMBLY

a. w/ Rear Heater


i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

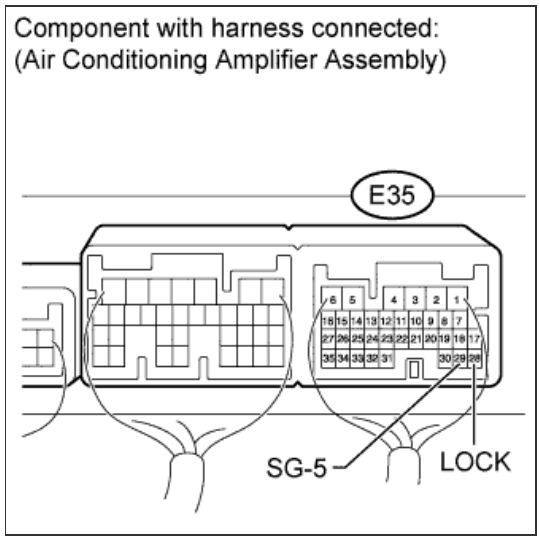

ii. Measure the waveform of the connector.


Measurement Condition

Item	Contents
Terminal No. (Symbol)	E35-28 (LOCK) - E35-29 (SG-5)
Tool Setting	200 mV/DIV., 10 ms/DIV.
Condition	Engine running A/C switch on Blower switch LO

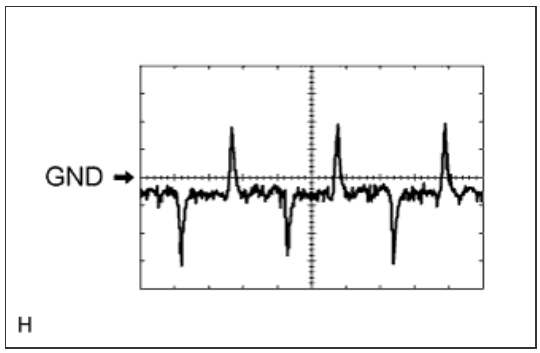

b. w/o Rear Heater


i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

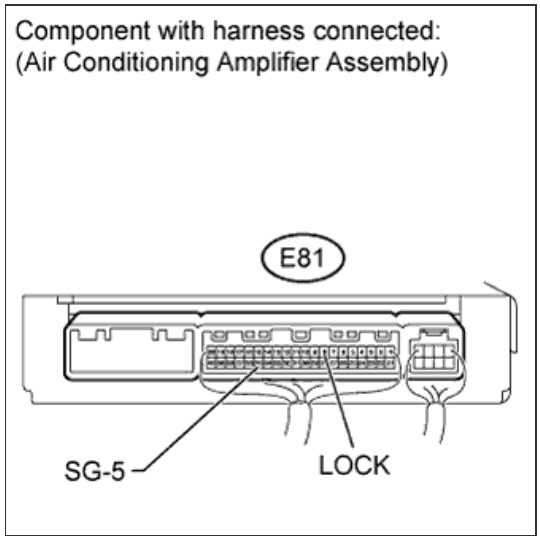

ii. Measure the waveform of the connector.

Measurement Condition

Item	Contents
Terminal No. (Symbol)	E81-8 (LOCK) - E81-35 (SG-5)
Tool Setting	200 mV/DIV., 10 ms/DIV.
Condition	Engine running A/C switch on Blower switch LO

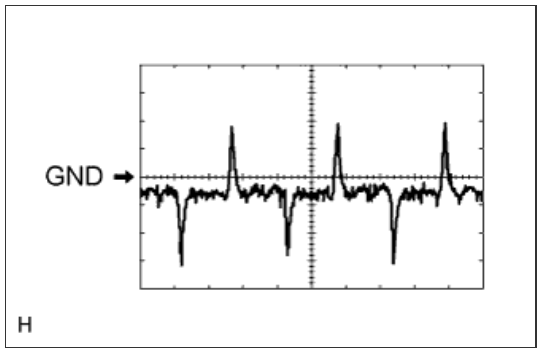

NG → Go to step

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)


3.INSPECT COOLER COMPRESSOR ASSEMBLY (A/C LOCK SENSOR)

a. Disconnect the C30 connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance

Tester Connection	Condition	Specified Condition
C30-1 (SSR+) - C30-2 (SSR-)	20°C (68°F)	65 to 125 Ω

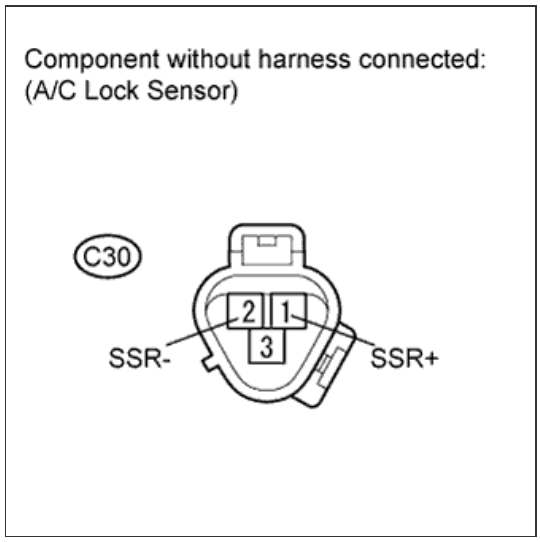

NG → REPLACE COOLER COMPRESSOR ASSEMBLY (A/C LOCK SENSOR)

OK →

4.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - A/C LOCK SENSOR)

a. w/ Rear Heater

i. Disconnect the E35 amplifier connector.


ii. Disconnect the C30 compressor connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance

Tester Connection	Condition	Specified Condition
E35-28 (LOCK) - C30-1 (SSR+)	Always	Below 1 Ω
E35-29 (SG-5) - C30-2 (SSR-)	Always	Below 1 Ω
E35-28 (LOCK) - Body ground	Always	10 kΩ or higher
E35-29 (SG-5) -		

Body ground	Always	10 kΩ or higher

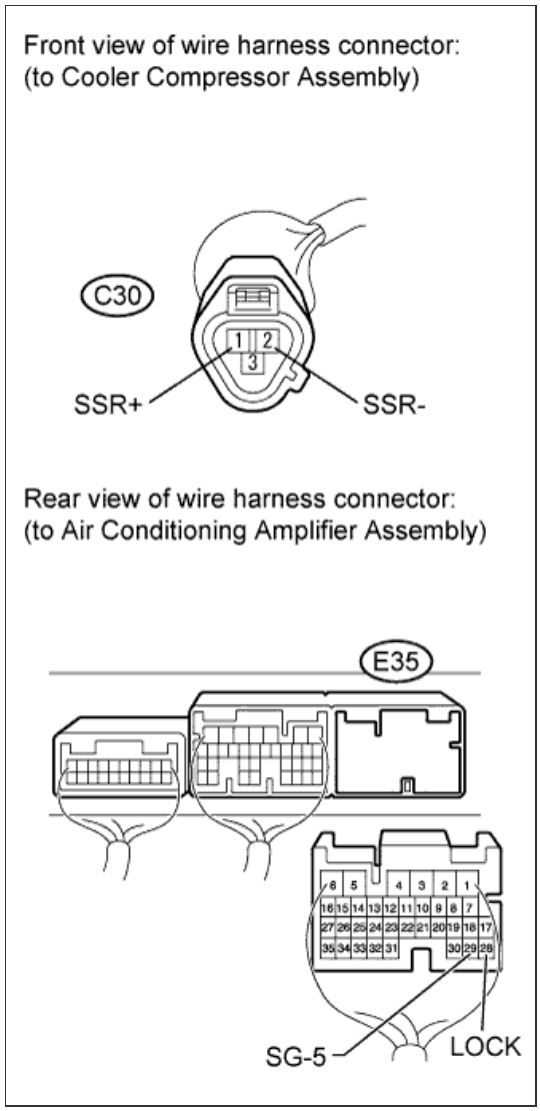

b. w/o Rear Heater

i. Disconnect the E81 amplifier connector.


ii. Disconnect the C30 compressor connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance

Tester Connection	Condition	Specified Condition
E81-8 (LOCK) - C30-1 (SSR+)	Always	Below 1 Ω
E81-35 (SG-5) - C30-2 (SSR-)	Always	Below 1 Ω
E81-8 (LOCK) - Body ground	Always	10 kΩ or higher
E81-35 (SG-5) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Cooler Compressor Assembly)

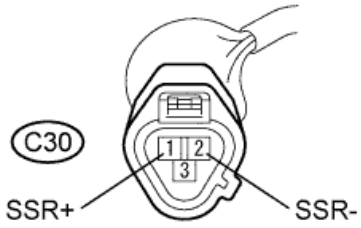

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

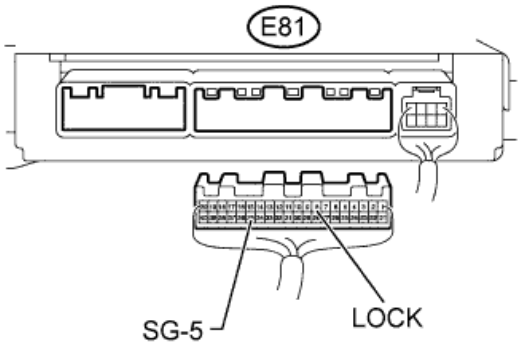

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1458/58 Passenger Side Air Outlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The front air mix damper servo motor (for front passenger side rear air flow) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the front air mix damper (for front passenger side rear air flow) to any position. As a result, the amount of air that has passed through the evaporator and is passing through the heater core is adjusted, and the temperature of the air blowing toward the rear passenger side is controlled.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1458/58	The air mix damper position does not change even if the air conditioning amplifier assembly operates the front air mix damper servo motor.	• Front air mix damper servo motor (for front passenger side rear air flow) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

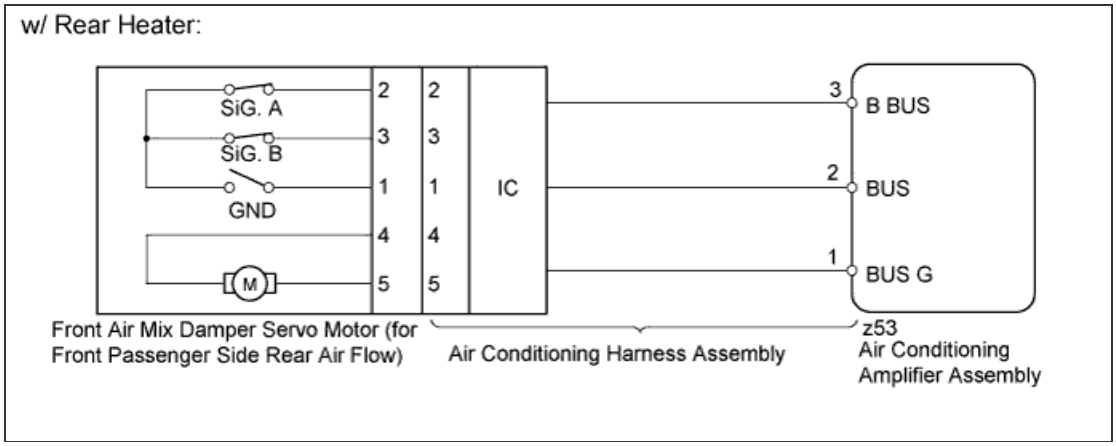

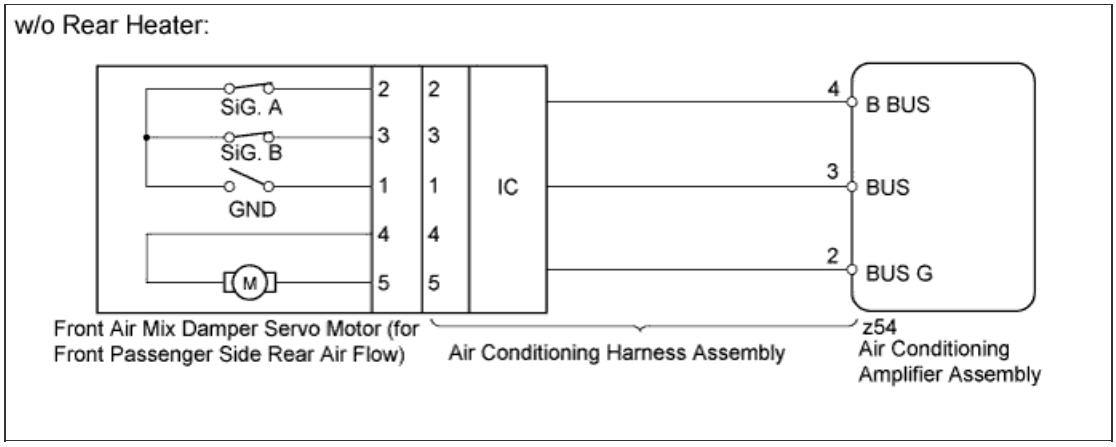

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FRONT AIR MIX DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
		for LHD • MAX COOL: 33 (pulse)	

Air Mix Servo Targ Pls (F&R P)	Front air mix damper servo motor (for front passenger side rear air flow) target pulse / Min.: 5, Max.: 33 (for LHD) Min.: 13, Max.: 41 (for RHD)	for RHD • MAX HOT: 5 (pulse) • MAX COOL: 13 (pulse) • MAX HOT: 41 (pulse)	-

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK FRONT AIR MIX DAMPER SERVO MOTOR (OPERATION)

a. for LHD:

i. Replace the front air mix damper servo motor (for front passenger side rear air flow) (Click here).

b. for RHD:

i. Replace the front air mix damper servo motor (for front passenger side rear air flow) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT →

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1458 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE FRONT AIR MIX DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A →

REPLACE FRONT AIR MIX DAMPER SERVO MOTOR (Click here)

DTC B1423/23 Pressure Sensor Circuit

for Preparation Click here

DESCRIPTION


This DTC is output when refrigerant pressure is extremely low (-0.4566 MPaG (-4.6 kgf/cm ^{2}, -66 psi) or less) or extremely high (3.2943 MPaG (33.6 kgf/cm^2, 477 psi) or more). The air con itioner pressure sensor, which is installe on the pipe of the high pressure si e to etect refrigerant pressure, outputs the refrigerant pressure signal to the air con itioning amplifier assembly. The air con itioning amplifier assembly converts the signal to pressure accor ing to the sensor characteristics to control the compressor.

HINT:

Be sure to check the refrigerant volume first when this DTC is output because this DTC can also be output if there is no refrigerant in the cycle.

DTC Co e	DTC Detection Con ition	Trouble Area
B1423/23	• An open or short in the air con itioner pressure sensor circuit • Refrigerant pressure on the high pressure si e is extremely low (-0.4566 MPaG (-4.6 kgf/cm^2, -66 psi) or less) or extremely high (3.2943 MPaG (33.6 kgf/cm^2, 477 psi) or more)	• Air con itioner pressure sensor • Harness or connector • Cooler expansion valve (blocke stuck) • Cooler con enser assembly (blocke eterioration of cooling capacity ue to irt) • Cooler ryer (moisture in the refrigerant cycle cannot be absorbe • Con enser fan (con enser cannot be coole own) • Air con itioning system (leaks, blocke • efrigerant pipe line • Air con itioning amplifier assembly

WIRING DIAGRAM

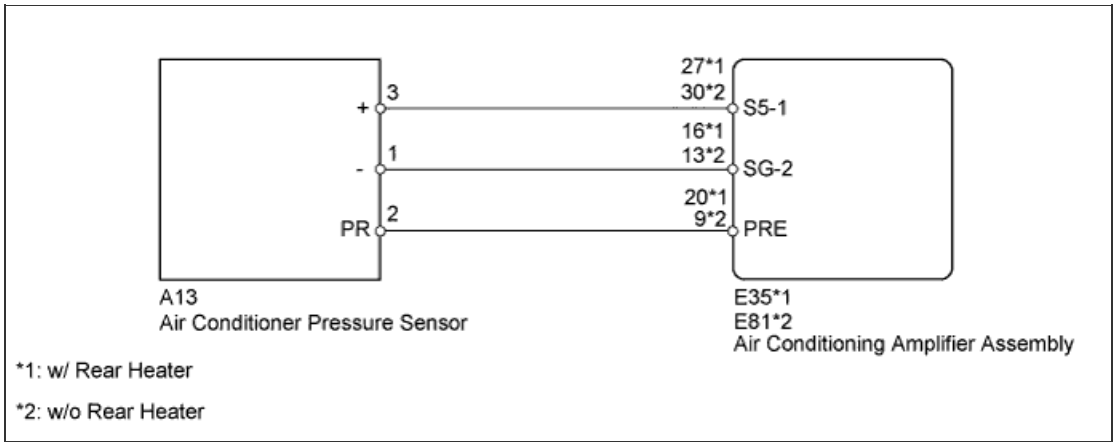

INSPECTION PROCEDURE

1.CHECK HARNESS AND CONNECTOR (POWER SOURCE CIRCUIT)


a. Disconnect the A13 air con itioner pressure sensor connector.

b. Measure the voltage accor ing to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Con ition	Specifie Con ition
A13-3 ( ) - Bo y groun	ngine switch on (IG)	4.4 to 5.5

Front view of wire harness connector:
(to Air Conditioner Pressure Sensor)

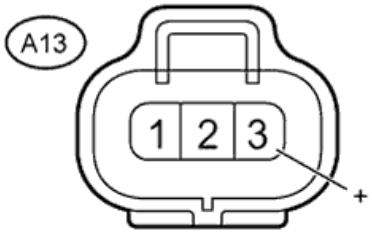

NG → Go to step 5

OK


2.CHECK HARNESS AND CONNECTOR (GROUND CIRCUIT)

a. Measure the resistance accor ing to the value(s) in the table below.

Standard Resistance:

Tester Connection	Con ition	Specifie Con ition
A13-1 (-) - Bo y groun	lways	Below 1 Ω

Front view of wire harness connector:
(to Air Conditioner Pressure Sensor)

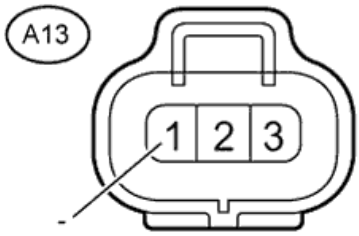


NG → Go to step 6

OK

3.INSPECT AIR CONDITIONER PRESSURE SENSOR (SENSOR SIGNAL CIRCUIT)

a. Reconnect the A13 pressure sensor connector.

b. Remove the air con itioning amplifier with its connectors still connecte .

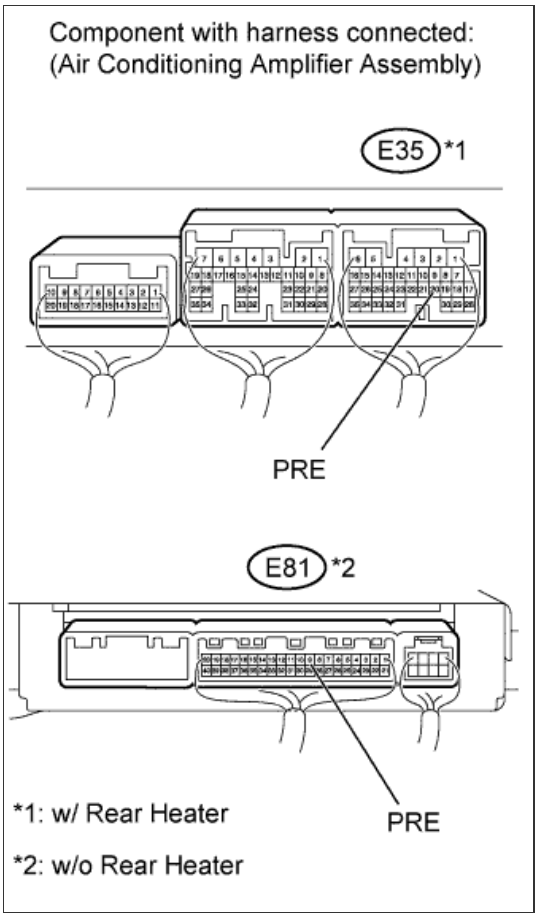

Standard Voltage:

w/ Rear Heater:

Tester Connection	Switch Con ition	Specifie Con ition
E35-20 (PRE) - Bo y groun	• ngine switch on (IG) • A/C switch off	0.7 to 4.8

w/o Rear Heater:

Tester Connection	Switch Con ition	Specifie Con ition
E81-9 (PRE) - Bo y groun	• ngine switch on (IG) • A/C switch off	0.7 to 4.8

HINT:

the measure voltage is not within the normal range, there may be a malfunction in the air con itioning amplifier assembly, air con itioner pressure sensor, or wire harness. It is also possible that the amount of refrigerant may not be appropriate.

NG → Go to step 7

OK

4.INSPECT AIR CONDITIONER PRESSURE SENSOR (SENSOR SIGNAL CIRCUIT)

a. Measure the voltage when the following con itions are satisfie .

Item	Con ition
Engine Spee	500 rpm

ehicle Doors	Fully open
Temperature Setting	MA CO D
Blower Spee	
/C Switch	ON
R/F Switch	RECIRCU ATION
Interior Temperature	25 to 35 C (77 to 95)


NOTICE:

- **If refrigerant pressure on the high pressure side becomes extremely high during the inspection (if the voltage exceeds 4.8 V), the fail-safe function stops compressor operation. Therefore, measure the voltage before the fail-safe operation.**
- **It is necessary to measure the voltage for a certain amount of time (approximately 10 minutes) because the problem symptom may recur after a while.**

HINT:

hen the outsi e air temperature is low (below -1.5 C (29.3)), the compressor stops ue to operation of the ambient temperature an the evaporator temperature sensor to prevent the evaporator from freezing. In this case, perform the inspection in a warm in oor environment.

i. Measure the voltage accor ing to the value(s) in the table below.

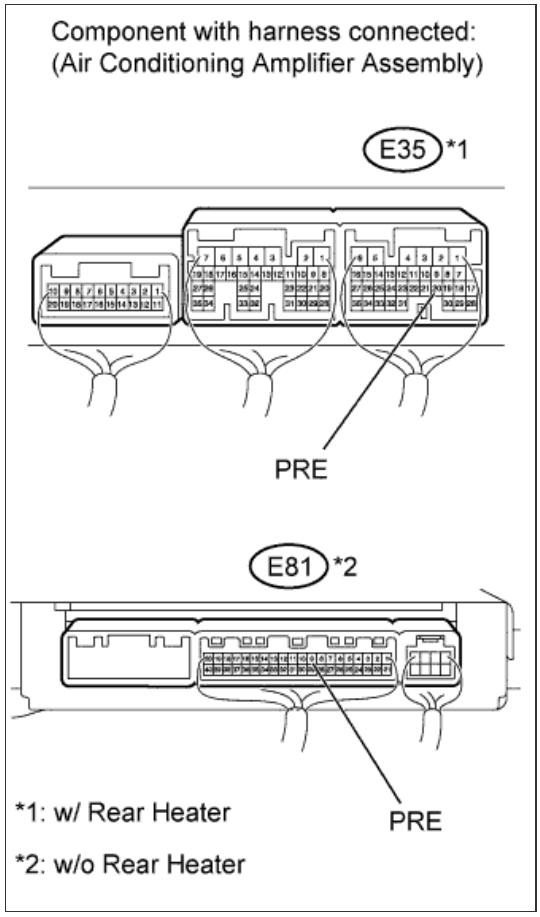

Standard Voltage:

w/ Rear Heater:

Tester Connection	Switch Con ition	Specifie Con ition
E35-20 (PRE) - Bo y groun	• ngine switch on (IG) • A/C switch on	0.7 to 4.8

w/o Rear Heater:

Tester Connection	Switch Con ition	Specifie Con ition
B81-9 (PRE) -	• Engine switch on (IG)	

Bo y groun	• /C switch on	0.7 to 4.8

NG → Go to step 13

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

5.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - PRESSURE SENSOR)


a. Disconnect the E35 1or E81 2 amplifier connector.

HINT:

1 w/ Rear Heater

2 w/o Rear Heater

b. Measure the resistance accor ing to the value(s) in the table below.

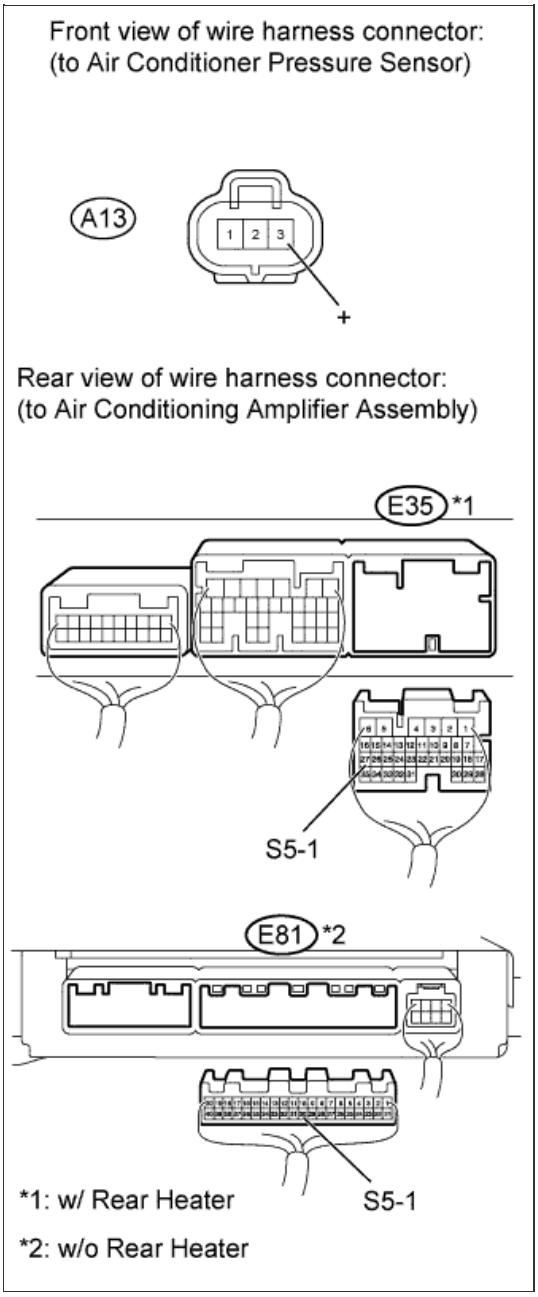

Standard Resistance:

w/ Rear Heater:

Tester Connection	Con ition	Specifie Con ition
A13-3 (+) - E35-27 (S5-1)	Always	Below 1 Ω
E35-27 (S5-1) - Bo y groun	lways	10 kΩ or higher

w/o Rear Heater:

Tester Connection	Con ition	Specifie Con ition

A13-3 (+) - E81-30 (S5-1)	Always	Below 1 Ω
E81-30 (S5-1) - Bo y groun	lways	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

6.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - PRESSURE SENSOR)


a. Disconnect the E35 1 or E81 2 amplifier connector.

HINT:

1 w/ Rear Heater

2 w/o Rear Heater

b. Measure the resistance accor ing to the value(s) in the table below.

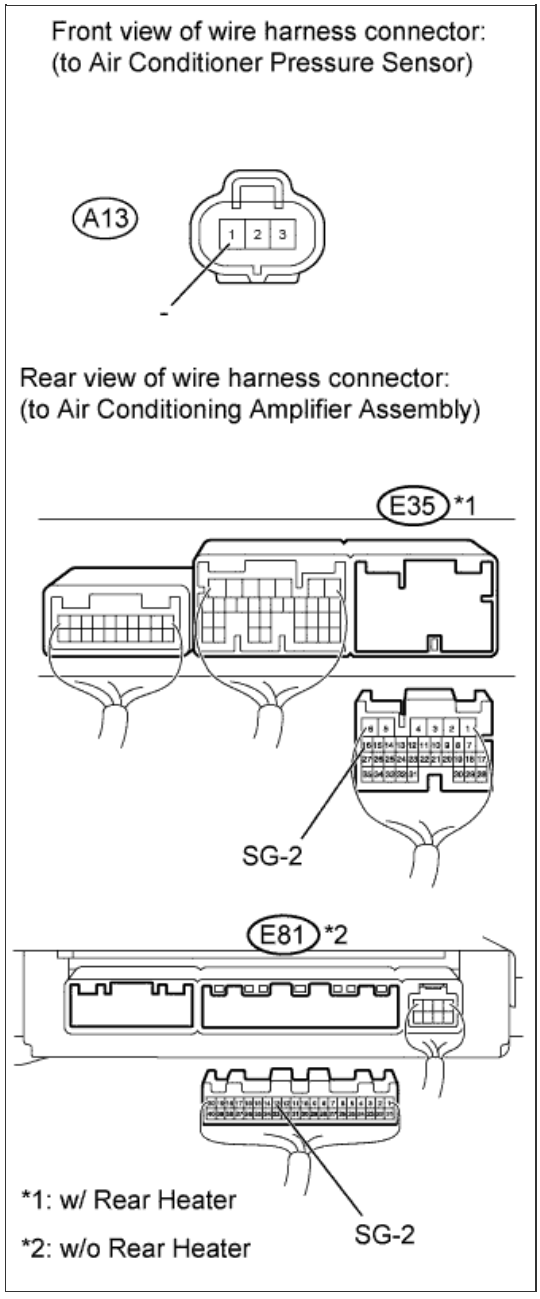

Standard Resistance:

w/ Rear Heater:

Tester Connection	Con ition	Specifie Con ition
A13-1 (-) - E35-16 (SG-2)	Always	Below 1 Ω
E35-16 (SG-2) - Bo y groun	lways	10 kΩ or higher

w/o Rear Heater:

		Specifie

Tester Connection	Con ition	Con ition
A13-1 (-) - E81-13 (SG-2)	Always	Below 1 Ω
E81-13 (SG-2) - Bo y groun	lways	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

7.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - PRESSURE SENSOR)


a. Disconnect the E35 1 or E81 2 amplifier connector.

HINT:

1 w/ Rear Heater

2 w/o Rear Heater

b. Measure the resistance accor ing to the value(s) in the table below.

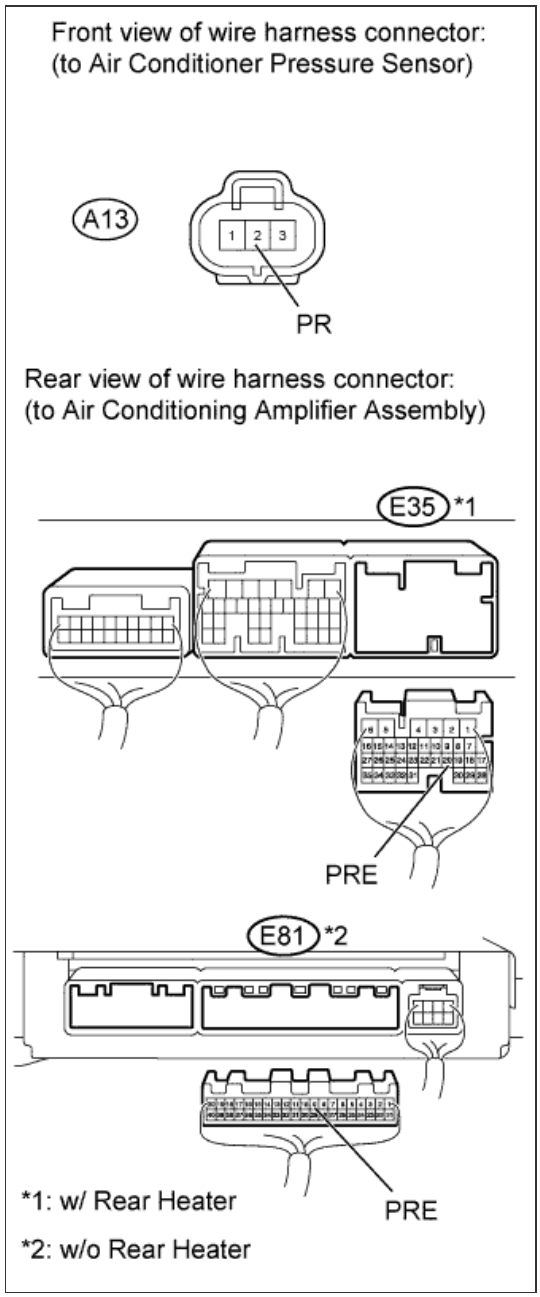

Standard Resistance:

w/ Rear Heater:

Tester Connection	Con ition	Specifie Con ition
A13-2 (PR) - E35-20 (PRE)	Always	Below 1 Ω
E35-20 (PRE) - Bo y groun	lways	10 kΩ or higher

w/o Rear Heater:

Tester Connection	Con ition	Specifie Con ition
A13-2 (PR) - E81-9 (PRE)	Always	Below 1 Ω
E81-9 (PRE) - Bo y groun	lways	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.INSPECT FOR AIR CONDITIONING SYSTEM LEAK

a. Install the manifol gauge set.

b. Recover the refrigerant from the air con itioning system using a refrigerant recovery unit.

c. Evacuate the air con itioning system an check that vacuum can be maintaine in it.

OK:

Vacuum can be maintained in the air conditioning system.

HINT:

If vacuum cannot be maintaine in the air con itioning system, refrigerant may be leaking from it. In this case, it is necessary to repair or replace the leaking part of the air con itioning system.

NG → Go to step 12

OK

9.CHARGE REFRIGERANT

a. A an appropriate amount of refrigerant (Click here).

NEXT

10.RECHECK DTC

a. Recheck for the DTC when the following con itions are satisfie .

Item	Con ition
Engine Spee	500 rpm
ehicle Doors	Fully open
Temperature Setting	MA CO D
Blower Spee	
/C Switch	ON
R/F Switch	RECIRCU ATION
Interior Temperature	25 to 35 C (77 to 95 F)

NOTICE:

If refrigerant pressure on the high pressure si e becomes high, the DTC will be store . Therefore, it is necessary to measure the voltage for a certain amount of time (approximately 10 minutes) because the DTC may be store after the air con itioning system operates for a while.

HINT:

hen the outsi e air temperature is low (below -1.5 C (29.3 F)), the compressor stops ue to operation of the ambient temperature sensor an the evaporator temperature sensor to prevent the evaporator from freezing. In this case, perform the inspection in a warm in oor environment.

OK:

DTC B1423 is not output.

NOTICE:

If the DTC was output ue to an insufficient or excessive amount of refrigerant, the problem may have been solve after performing the

previous step. However, the root cause of insufficient refrigerant may be refrigerant leaks. The root cause of excessive refrigerant may be a ing refrigerant when the level was insufficient. Therefore, i entify an repair the area where refrigerant leaks as necessary.

NG → Go to step 11

OK

END

11.CHECK AIR CONDITIONER PRESSURE SENSOR

a. Install the manifol gauge set.


b. Reconnect the A13 air con itioner pressure sensor connector.


c. Remove the air con itioning amplifier assembly with its connectors still connecte .

d. Turn the engine switch on (IG).

e. Measure the voltage accor ing to the value(s) in the table below.

Component with harness connected:
(Air Conditioning Amplifier Assembly)

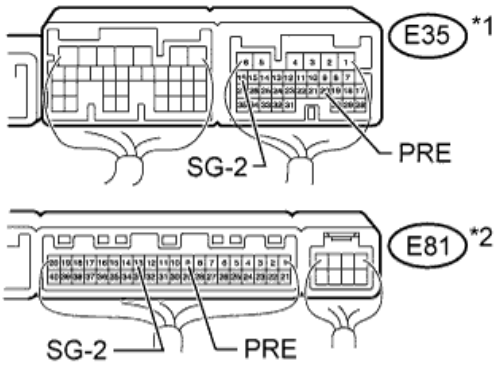

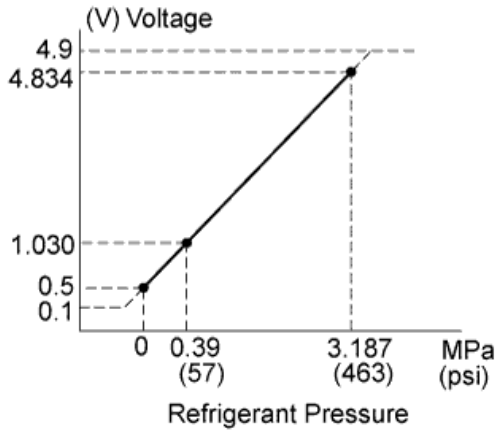

*1: w/ Rear Heater

*2: w/o Rear Heater

Standard Voltage:

w/ Rear Heater:

Tester Connection	Con ition	Specifie Con ition
E35-20 (PRE) - E35-16 (SG-2)	Refrigerant pressure Normal pressure (less than 3.0732 MPa 31.4 kgf/cm^2, 445 psi an more than 0.1762 MPa 1.8 kgf/cm^2, 25 psi)	1.0 to 4.8
	Refrigerant pressure Abnormal (less than 0.1762 MPa 1.8 kgf/cm^2, 25 psi)	Below 1
	Refrigerant pressure Abnormal (more than 3.0732 MPa 31.4 kgf/cm^2, 445 psi)	4.8 or higher

w/o Rear Heater:

Tester Connection	Con ition	Specifie Con ition
E81-9 (PRE) - E81-13 (SG-2)	Refrigerant pressure Normal pressure (less than 3.0732 MPa 31.4 kgf/cm^2, 445 psi an more than 0.1762 MPa 1.8 kgf/cm^2, 25 psi)	1.0 to 4.8
	Refrigerant pressure Abnormal (less than 0.1762 MPa 1.8 kgf/cm^2, 25 psi)	Below 1
	Refrigerant pressure Abnormal (more than 3.0732 MPa 31.4 kgf/cm^2, 445 psi)	4.8 or higher

NG → REPLACE AIR CONDITIONER PRESSURE SENSOR (Click here)

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

12.REPAIR AIR CONDITIONING SYSTEM LEAK

a. I entify the area where refrigerant leaks (Click here).

b. Repair the i entifie area of the air con itioning system.

c. Evacuate the air con itioning system.

NEXT

CHARGE REFRIGERANT (Click here)

13.INSPECT CONDENSER FAN

a. Inspect that the con enser fan operates normally (Click here).

NG → REPLACE CONDENSER FAN (Click here)

OK

14.CHARGE REFRIGERANT

a. Use a refrigerant recovery unit to recover refrigerant.

b. Evacuate the air con itioning system.

c. A an appropriate amount of refrigerant (Click here).

HINT:

If refrigerant is a e an the system has not been properly evacuate (insufficient vacuum time), moisture in the air remaining in the system will freeze in the expansion valve, blocking the flow on the high pressure si e. Therefore, in or er to confirm the problem, recover the refrigerant an properly evacuate the system. A an appropriate amount of refrigerant, an check for the DTC.

NEXT

15.RECHECK DTC

a. Recheck for the DTC when the following con itions are satisfie .

Item	Con ition
Engine Spee	500 rpm

ehicle Doors	Fully open
Temperature Setting	MA CO D
Blower Spee	
/C Switch	ON
R/F Switch	RECIRCU ATION
Interior Temperature	25 to 35 C (77 to 95 F)

NOTICE:

If refrigerant pressure on the high pressure si e becomes high, the DTC will be store . Therefore, it is necessary to measure the voltage for a certain amount of time (approximately 10 minutes) because the DTC may be store after the air con itioning system operates for a while.

HINT:

- **When the outside air temperature is low (below -1.5°C (29.3°F)), the compressor stops due to operation of the ambient temperature sensor and the evaporator temperature sensor to prevent the evaporator from freezing. In this case, perform the inspection in a warm indoor environment.**
- **If refrigerant is added and the system has not been properly evacuated (insufficient vacuum time), moisture in the air remaining in the system will freeze in the expansion valve, blocking the flow on the high pressure side. Therefore, in order to confirm the problem, recover the refrigerant and properly evacuate the system. Add an appropriate amount of refrigerant, and check for the DTC. If the DTC is not output after this procedure, it indicates that the cooler dryer in the condenser is not able to absorb moisture in the refrigerant cycle. In this case, to complete the repair it is necessary to replace the cooler dryer.**

OK:
DTC B1423 is not output.

NG → **Go to step 16**

OK

REPLACE COOLER DRYER (Click here)

16.REPLACE COOLER EXPANSION VALVE

a. Replace the cooler expansion valve with a normal one.
for HD (Click here)
for RHD (Click here)

HINT:

Replace the cooler expansion valve with a normal one because the cooler expansion valve is either stuck or clogge .

NEXT

17.CHARGE REFRIGERANT

a. A an appropriate amount of refrigerant (Click here).

NEXT

18.RECHECK DTC

a. Recheck for the DTC when the following con itions are satisfie .

Item	Con ition
Engine Spee	500 rpm
ehicle Doors	Fully open
Temperature Setting	MA CO D
Blower Spee	
/C Switch	ON
R/F Switch	RECIRCU ATION
Interior Temperature	25 to 35 C (77 to 95 F)

NOTICE:

If refrigerant pressure on the high pressure si e becomes high, the DTC will be store . Therefore, it is necessary to measure the voltage for a certain amount of time (approximately 10 minutes) because the DTC may be store after the air con itioning system operates for a while.

HINT:

- **When the outside air temperature is low (below -1.5°C (29.3°F)), the compressor stops due to operation of the ambient temperature sensor and the evaporator temperature sensor to prevent the evaporator from freezing. In this case, perform the inspection in a warm indoor environment.**
- **If refrigerant pressure is not normal after replacing the expansion valve with a normal one, the condenser or pipes may be clogged due to dirt, dust or other contaminants. In this case, clean or replace the condenser or pipes.**

OK:
DTC B1423 is not output.

NG → REPLACE COOLER CONDENSER ASSEMBLY (Click here)

OK → END

DTC B1458/58 Passenger Side Air Outlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The front air mix damper servo motor (for front passenger side rear air flow) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the front air mix damper (for front passenger side rear air flow) to any position. As a result, the amount of air that has passed through the evaporator and is passing through the heater core is adjusted, and the temperature of the air blowing toward the rear passenger side is controlled.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1458/58	The air mix damper position does not change even if the air conditioning amplifier assembly operates the front air mix damper servo motor.	• Front air mix damper servo motor (for front passenger side rear air flow) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

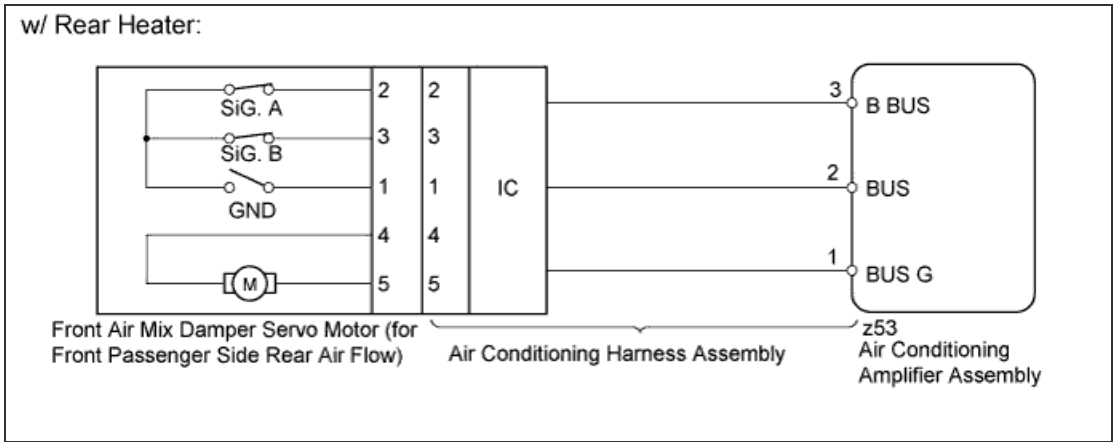

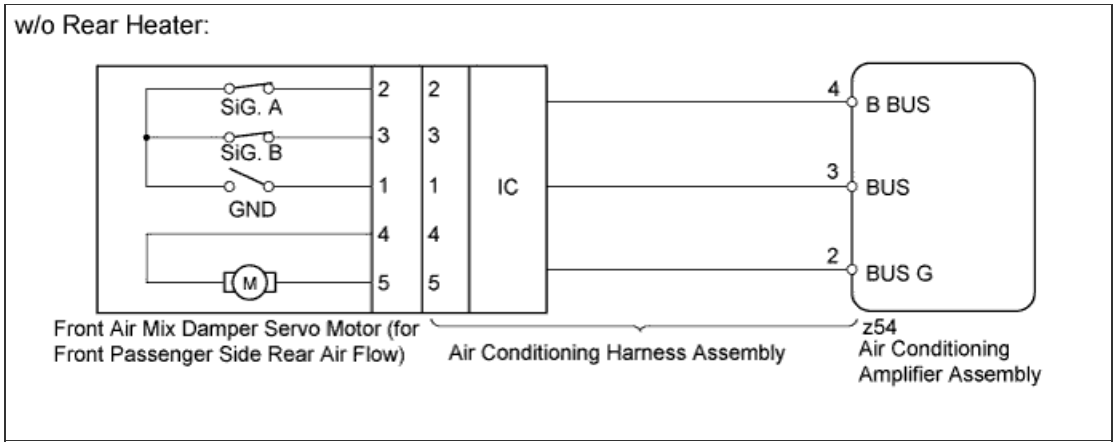

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (FRONT AIR MIX DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
		for LHD • MAX COOL: 33 (pulse)	

Air Mix Servo Targ Pls (F&R P)	Front air mix damper servo motor (for front passenger side rear air flow) target pulse / Min.: 5, Max.: 33 (for LHD) Min.: 13, Max.: 41 (for RHD)	for RHD • MAX HOT: 5 (pulse) • MAX COOL: 13 (pulse) • MAX HOT: 41 (pulse)	-

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK FRONT AIR MIX DAMPER SERVO MOTOR (OPERATION)

a. for LHD:

i. Replace the front air mix damper servo motor (for front passenger side rear air flow) (Click here).

b. for RHD:

i. Replace the front air mix damper servo motor (for front passenger side rear air flow) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT →

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1458 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE FRONT AIR MIX DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A →

REPLACE FRONT AIR MIX DAMPER SERVO MOTOR (Click here)

DTC B1423/23 Pressure Sensor Circuit

for Preparation Click here

DESCRIPTION


This DTC is output when refrigerant pressure is extremely low (-0.4566 MPaG (-4.6 kgf/cm ^{2}, -66 psi) or less) or extremely high (3.2943 MPaG (33.6 kgf/cm^2, 477 psi) or more). The air con itioner pressure sensor, which is installe on the pipe of the high pressure si e to etect refrigerant pressure, outputs the refrigerant pressure signal to the air con itioning amplifier assembly. The air con itioning amplifier assembly converts the signal to pressure accor ing to the sensor characteristics to control the compressor.

HINT:

Be sure to check the refrigerant volume first when this DTC is output because this DTC can also be output if there is no refrigerant in the cycle.

DTC Co e	DTC Detection Con ition	Trouble Area
B1423/23	• An open or short in the air con itioner pressure sensor circuit • Refrigerant pressure on the high pressure si e is extremely low (-0.4566 MPaG (-4.6 kgf/cm^2, -66 psi) or less) or extremely high (3.2943 MPaG (33.6 kgf/cm^2, 477 psi) or more)	• Air con itioner pressure sensor • Harness or connector • Cooler expansion valve (blocke stuck) • Cooler con enser assembly (blocke eterioration of cooling capacity ue to irt) • Cooler ryer (moisture in the refrigerant cycle cannot be absorbe • Con enser fan (con enser cannot be coole own) • Air con itioning system (leaks, blocke • efrigerant pipe line • Air con itioning amplifier assembly

WIRING DIAGRAM

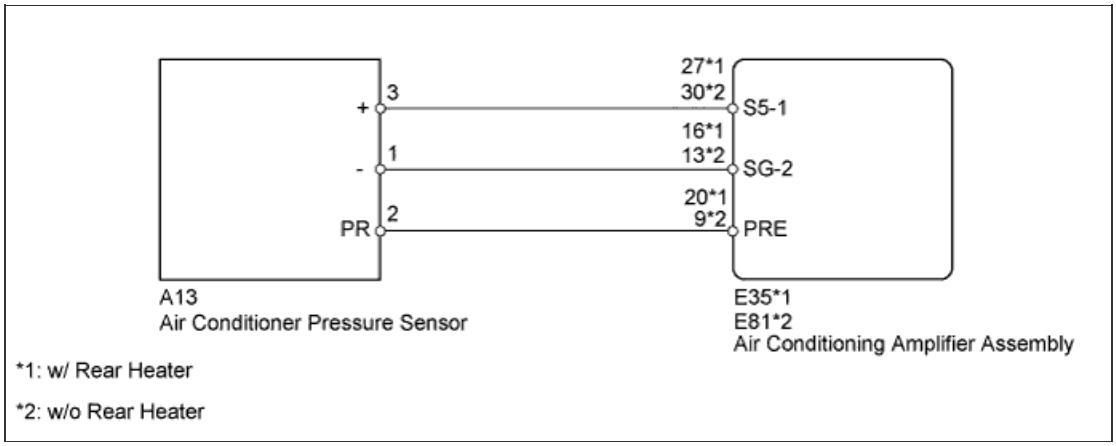

INSPECTION PROCEDURE


1.CHECK HARNESS AND CONNECTOR (POWER SOURCE CIRCUIT)

a. Disconnect the A13 air con itioner pressure sensor connector.

b. Measure the voltage accor ing to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Con ition	Specifie Con ition
A13-3 (+) - Bo y groun	ngine switch on (IG)	4.4 to 5.5

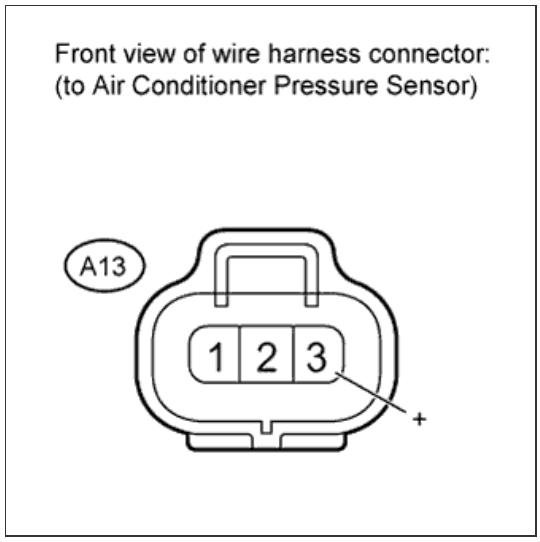

NG → Go to step 5


OK

2.CHECK HARNESS AND CONNECTOR (GROUND CIRCUIT)

a. Measure the resistance accor ing to the value(s) in the table below.

Standard Resistance:

Tester Connection	Con ition	Specifie Con ition
A13-1 (-) - Bo y groun	lways	Below 1 Ω

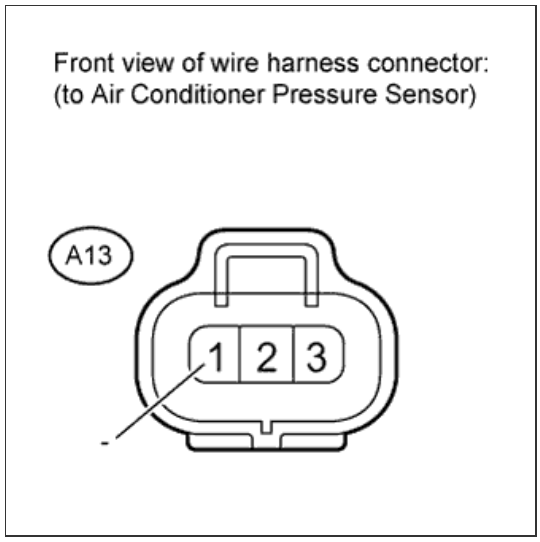


NG → Go to step 6

OK

3.INSPECT AIR CONDITIONER PRESSURE SENSOR (SENSOR SIGNAL CIRCUIT)

a. Reconnect the A13 pressure sensor connector.

b. Remove the air con itioning amplifier with its connectors still connecte .

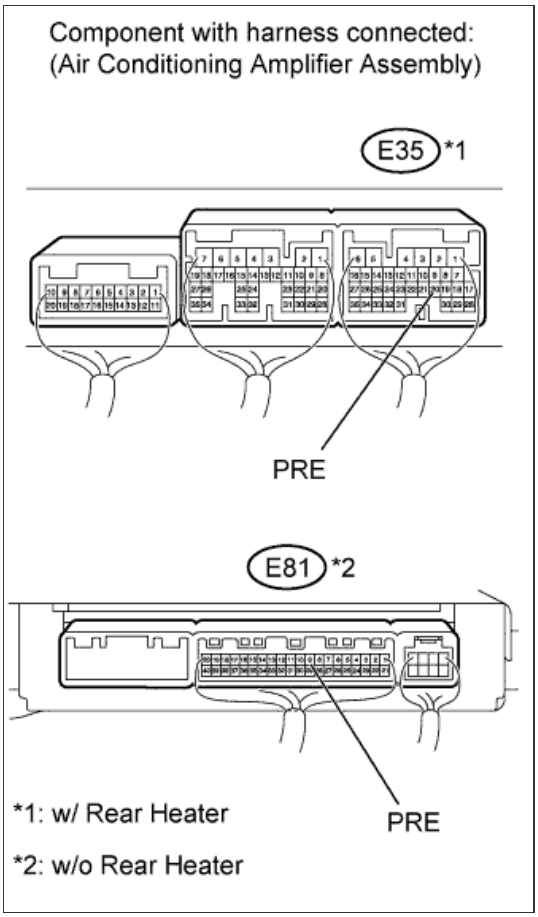

Standard Voltage:

w/ Rear Heater:

Tester Connection	Switch Con ition	Specifie Con ition
E35-20 (PRE) - Bo y groun	• ngine switch on (IG) • A/C switch off	0.7 to 4.8

w/o Rear Heater:

Tester Connection	Switch Con ition	Specifie Con ition
E81-9 (PRE) - Bo y groun	• ngine switch on (IG) • A/C switch off	0.7 to 4.8

HINT:

f the measure voltage is not within the normal range, there may be a malfunction in the air con itioning amplifier assembly, air con itioner pressure sensor, or wire harness. It is also possible that the amount of refrigerant may not be appropriate.

NG → Go to step 7

OK

4.INSPECT AIR CONDITIONER PRESSURE SENSOR (SENSOR SIGNAL CIRCUIT)

a. Measure the voltage when the following con itions are satisfie .

Item	Con ition
Engine Spee	500 rpm

ehicle Doors	Fully open
Temperature Setting	MA CO D
Blower Spee	
/C Switch	ON
R/F Switch	RECIRCU ATION
Interior Temperature	25 to 35 C (77 to 95 F)


NOTICE:

- **If refrigerant pressure on the high pressure side becomes extremely high during the inspection (if the voltage exceeds 4.8 V), the fail-safe function stops compressor operation. Therefore, measure the voltage before the fail-safe operation.**
- **It is necessary to measure the voltage for a certain amount of time (approximately 10 minutes) because the problem symptom may recur after a while.**

HINT:

an the outsi e air temperature is low (below -1.5 C (29.3 F)), the compressor stops ue to operation of the ambient temperature an the evaporator temperature sensor to prevent the evaporator from freezing. In this case, perform the inspection in a warm in oor environment.

i. Measure the voltage accor ing to the value(s) in the table below.

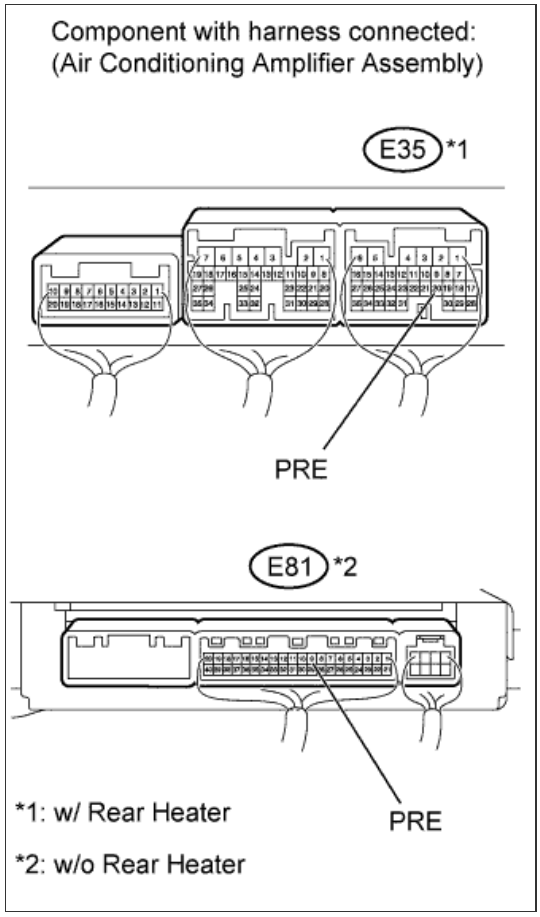

Standard Voltage:

w/ Rear Heater:

Tester Connection	Switch Con ition	Specifie Con ition
E35-20 (PRE) - Bo y groun	• ngine switch on (IG) • A/C switch on	0.7 to 4.8

w/o Rear Heater:

Tester Connection	Switch Con ition	Specifie Con ition
B81-9 (PRE) -	• Engine switch on (IG)	

Bo y groun	• /C switch on	0.7 to 4.8

NG → Go to step 13

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

5.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - PRESSURE SENSOR)


a. Disconnect the E35 1 or E81 2 amplifier connector.

HINT:

1 w/ Rear Heater

2 w/o Rear Heater

b. Measure the resistance accor ing to the value(s) in the table below.

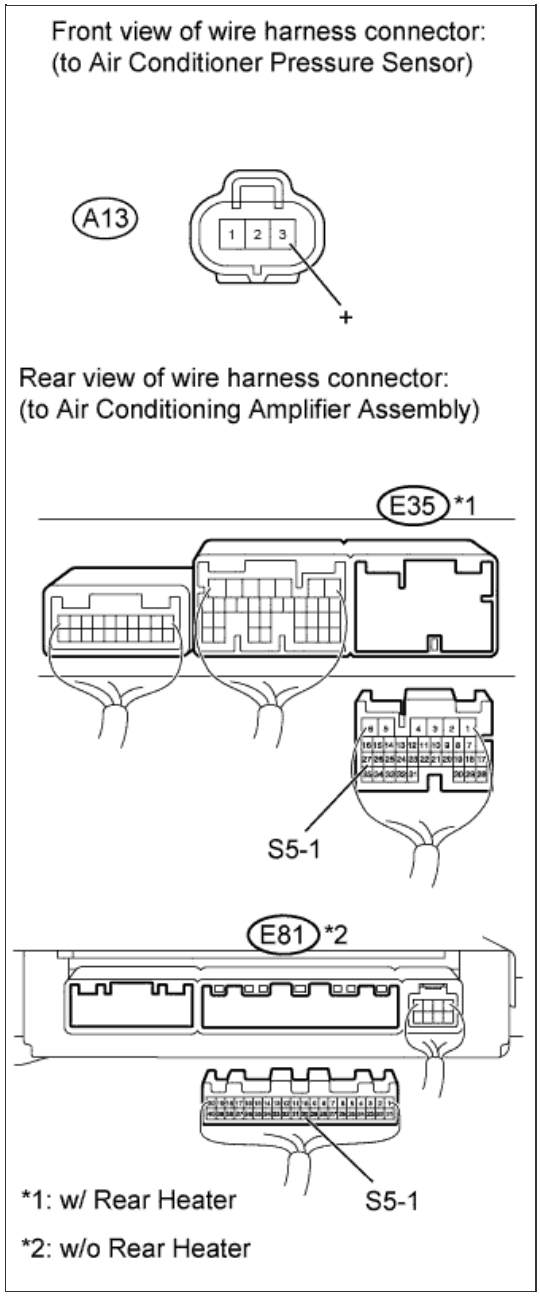

Standard Resistance:

w/ Rear Heater:

Tester Connection	Con ition	Specifie Con ition
A13-3 (+) - E35-27 (S5-1)	Always	Below 1 Ω
E35-27 (S5-1) - Bo y groun	lways	10 kΩ or higher

w/o Rear Heater:

Tester Connection	Con ition	Specifie Con ition

A13-3 (+) - E81-30 (S5-1)	Always	Below 1 Ω
E81-30 (S5-1) - Bo y groun	lways	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

6.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - PRESSURE SENSOR)


a. Disconnect the E35 1 or E81 2 amplifier connector.

HINT:

1 w/ Rear Heater

2 w/o Rear Heater

b. Measure the resistance accor ing to the value(s) in the table below.

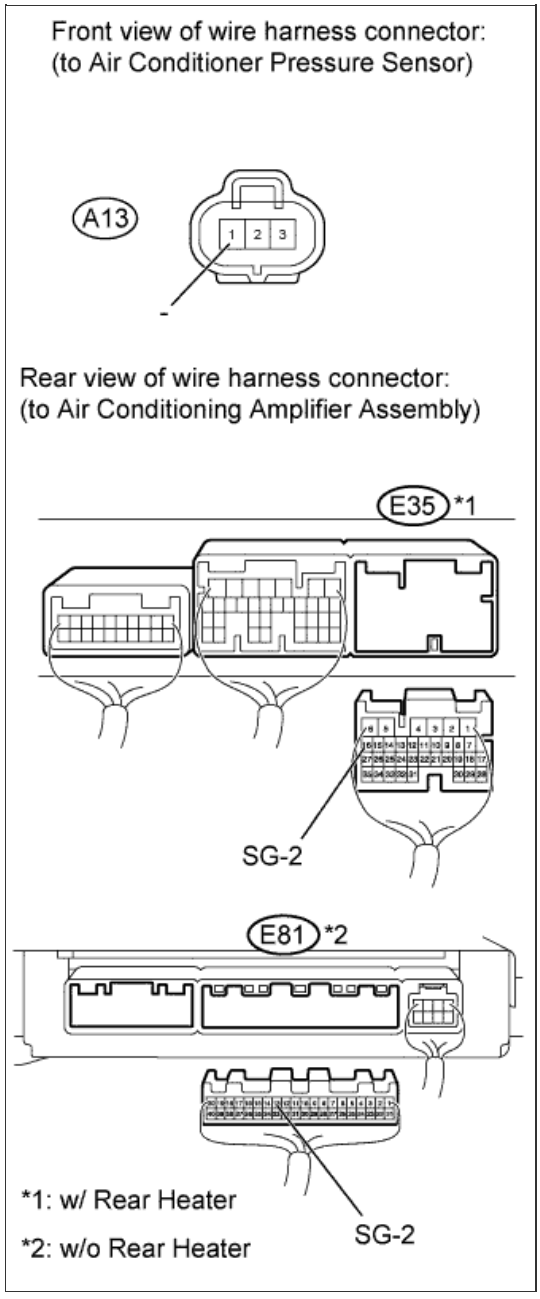

Standard Resistance:

w/ Rear Heater:

Tester Connection	Con ition	Specifie Con ition
A13-1 (-) - E35-16 (SG-2)	Always	Below 1 Ω
E35-16 (SG-2) - Bo y groun	lways	10 kΩ or higher

w/o Rear Heater:

		Specifie

Tester Connection	Con ition	Con ition
A13-1 (-) - E81-13 (SG-2)	Always	Below 1 Ω
E81-13 (SG-2) - Bo y groun	lways	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

7.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - PRESSURE SENSOR)


a. Disconnect the E35 1 or E81 2 amplifier connector.

HINT:

1 w/ Rear Heater

2 w/o Rear Heater

b. Measure the resistance accor ing to the value(s) in the table below.

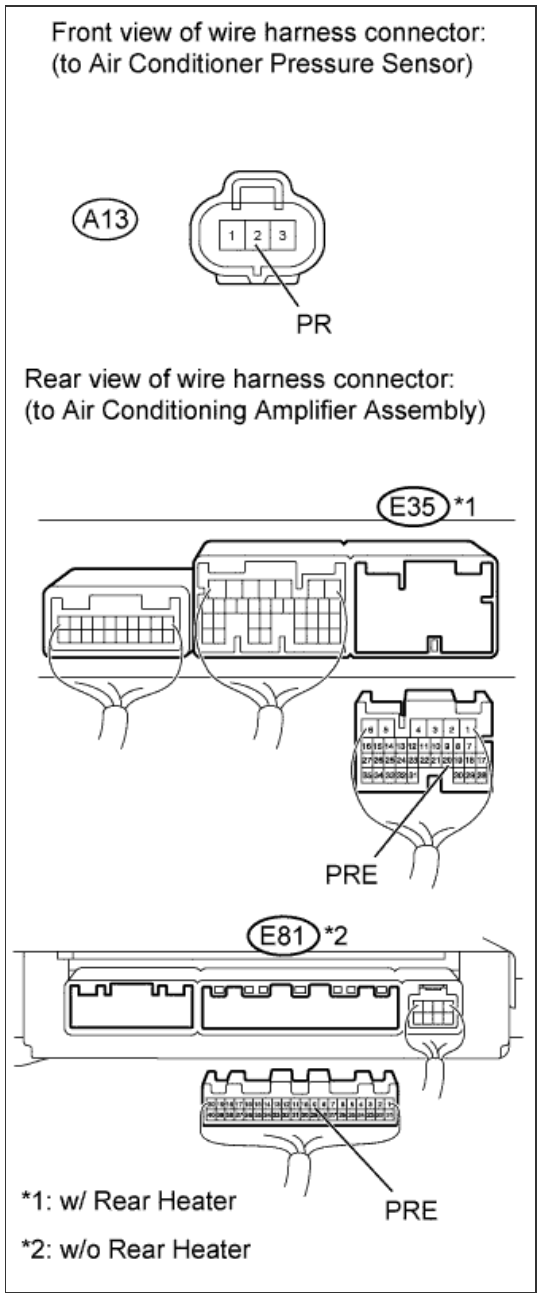

Standard Resistance:

w/ Rear Heater:

Tester Connection	Con ition	Specifie Con ition
A13-2 (PR) - E35-20 (PRE)	Always	Below 1 Ω
E35-20 (PRE) - Bo y groun	lways	10 kΩ or higher

w/o Rear Heater:

Tester Connection	Con ition	Specifie Con ition
A13-2 (PR) - E81-9 (PRE)	Always	Below 1 Ω
E81-9 (PRE) - Bo y groun	lways	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.INSPECT FOR AIR CONDITIONING SYSTEM LEAK

a. Install the manifol gauge set.

b. Recover the refrigerant from the air con itioning system using a refrigerant recovery unit.

c. Evacuate the air con itioning system an check that vacuum can be maintaine in it.

OK:

Vacuum can be maintained in the air conditioning system.

HINT:

If vacuum cannot be maintaine in the air con itioning system, refrigerant may be leaking from it. In this case, it is necessary to repair or replace the leaking part of the air con itioning system.

NG → Go to step 12

OK

9.CHARGE REFRIGERANT

a. A an appropriate amount of refrigerant (Click here).

NEXT

10.RECHECK DTC

a. Recheck for the DTC when the following con itions are satisfie .

Item	Con ition
Engine Spee	500 rpm
ehicle Doors	Fully open
Temperature Setting	MA CO D
Blower Spee	
/C Switch	ON
R/F Switch	RECIRCU ATION
Interior Temperature	25 to 35 C (77 to 95 F)

NOTICE:

If refrigerant pressure on the high pressure si e becomes high, the DTC will be store . Therefore, it is necessary to measure the voltage for a certain amount of time (approximately 10 minutes) because the DTC may be store after the air con itioning system operates for a while.

HINT:

hen the outsi e air temperature is low (below -1.5 C (29.3 F)), the compressor stops ue to operation of the ambient temperature sensor an the evaporator temperature sensor to prevent the evaporator from freezing. In this case, perform the inspection in a warm in oor environment.

OK:

DTC B1423 is not output.

NOTICE:

If the DTC was output ue to an insufficient or excessive amount of refrigerant, the problem may have been solve after performing the

previous step. However, the root cause of insufficient refrigerant may be refrigerant leaks. The root cause of excessive refrigerant may be a ing refrigerant when the level was insufficient. Therefore, i entify an repair the area where refrigerant leaks as necessary.

NG → Go to step 11

OK

END

11.CHECK AIR CONDITIONER PRESSURE SENSOR

a. Install the manifol gauge set.


b. Reconnect the A13 air con itioner pressure sensor connector.


c. Remove the air con itioning amplifier assembly with its connectors still connecte .

d. Turn the engine switch on (IG).

e. Measure the voltage accor ing to the value(s) in the table below.

Component with harness connected:
(Air Conditioning Amplifier Assembly)

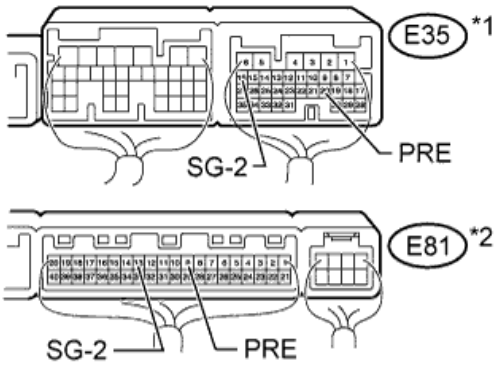

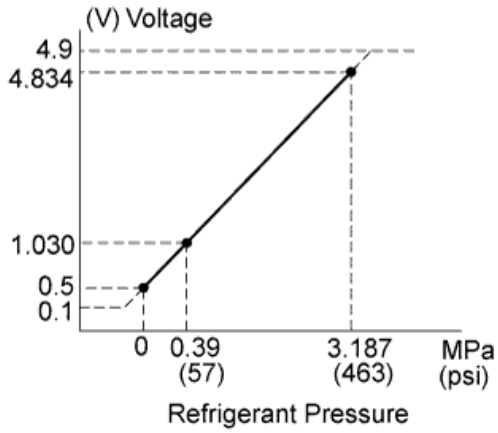

*1: w/ Rear Heater

*2: w/o Rear Heater

Standard Voltage:

w/ Rear Heater:

Tester Connection	Con ition	Specifie Con ition
E35-20 (PRE) - E35-16 (SG-2)	Refrigerant pressure Normal pressure (less than 3.0732 MPa 31.4 kgf/cm^2, 445 psi an more than 0.1762 MPa 1.8 kgf/cm^2, 25 psi)	1.0 to 4.8
	Refrigerant pressure Abnormal (less than 0.1762 MPa 1.8 kgf/cm^2, 25 psi)	Below 1
	Refrigerant pressure Abnormal (more than 3.0732 MPa 31.4 kgf/cm^2, 445 psi)	4.8 or higher

w/o Rear Heater:

Tester Connection	Con ition	Specifie Con ition
E81-9 (PRE) - E81-13 (SG-2)	Refrigerant pressure Normal pressure (less than 3.0732 MPa 31.4 kgf/cm^2, 445 psi an more than 0.1762 MPa 1.8 kgf/cm^2, 25 psi)	1.0 to 4.8
	Refrigerant pressure Abnormal (less than 0.1762 MPa 1.8 kgf/cm^2, 25 psi)	Below 1
	Refrigerant pressure Abnormal (more than 3.0732 MPa 31.4 kgf/cm^2, 445 psi)	4.8 or higher

NG → REPLACE AIR CONDITIONER PRESSURE SENSOR (Click here)

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

12.REPAIR AIR CONDITIONING SYSTEM LEAK

a. I entify the area where refrigerant leaks (Click here).

b. Repair the i entifie area of the air con itioning system.

c. Evacuate the air con itioning system.

NEXT

CHARGE REFRIGERANT (Click here)

13.INSPECT CONDENSER FAN

a. Inspect that the con enser fan operates normally (Click here).

NG → REPLACE CONDENSER FAN (Click here)

OK

14.CHARGE REFRIGERANT

a. Use a refrigerant recovery unit to recover refrigerant.

b. Evacuate the air con itioning system.

c. A an appropriate amount of refrigerant (Click here).

HINT:

If refrigerant is a e an the system has not been properly evacuate (insufficient vacuum time), moisture in the air remaining in the system will freeze in the expansion valve, blocking the flow on the high pressure si e. Therefore, in or er to confirm the problem, recover the refrigerant an properly evacuate the system. A an appropriate amount of refrigerant, an check for the DTC.

NEXT

15.RECHECK DTC

a. Recheck for the DTC when the following con itions are satisfie .

Item	Con ition
Engine Spee	500 rpm

ehicle Doors	Fully open
Temperature Setting	MA CO D
Blower Spee	
/C Switch	ON
R/F Switch	RECIRCU ATION
Interior Temperature	25 to 35 C (77 to 95 F)

NOTICE:

If refrigerant pressure on the high pressure si e becomes high, the DTC will be store . Therefore, it is necessary to measure the voltage for a certain amount of time (approximately 10 minutes) because the DTC may be store after the air con itioning system operates for a while.

HINT:

- **When the outside air temperature is low (below -1.5°C (29.3°F)), the compressor stops due to operation of the ambient temperature sensor and the evaporator temperature sensor to prevent the evaporator from freezing. In this case, perform the inspection in a warm indoor environment.**
- **If refrigerant is added and the system has not been properly evacuated (insufficient vacuum time), moisture in the air remaining in the system will freeze in the expansion valve, blocking the flow on the high pressure side. Therefore, in order to confirm the problem, recover the refrigerant and properly evacuate the system. Add an appropriate amount of refrigerant, and check for the DTC. If the DTC is not output after this procedure, it indicates that the cooler dryer in the condenser is not able to absorb moisture in the refrigerant cycle. In this case, to complete the repair it is necessary to replace the cooler dryer.**

OK:
DTC B1423 is not output.

NG → **Go to step 16**

OK

REPLACE COOLER DRYER (Click here)

16.REPLACE COOLER EXPANSION VALVE

a. Replace the cooler expansion valve with a normal one.
for HD (Click here)
for RHD (Click here)

HINT:

Replace the cooler expansion valve with a normal one because the cooler expansion valve is either stuck or clogge .

NEXT

17.CHARGE REFRIGERANT

a. A an appropriate amount of refrigerant (Click here).

NEXT

18.RECHECK DTC

a. Recheck for the DTC when the following con itions are satisfie .

Item	Con ition
Engine Spee	500 rpm
ehicle Doors	Fully open
Temperature Setting	MA CO D
Blower Spee	
/C Switch	ON
R/F Switch	RECIRCU ATION
Interior Temperature	25 to 35 C (77 to 95 F)

NOTICE:

If refrigerant pressure on the high pressure si e becomes high, the DTC will be store . Therefore, it is necessary to measure the voltage for a certain amount of time (approximately 10 minutes) because the DTC may be store after the air con itioning system operates for a while.

HINT:

- **When the outside air temperature is low (below -1.5°C (29.3°F)), the compressor stops due to operation of the ambient temperature sensor and the evaporator temperature sensor to prevent the evaporator from freezing. In this case, perform the inspection in a warm indoor environment.**
- **If refrigerant pressure is not normal after replacing the expansion valve with a normal one, the condenser or pipes may be clogged due to dirt, dust or other contaminants. In this case, clean or replace the condenser or pipes.**

OK:
DTC B1423 is not output.

NG → REPLACE COOLER CONDENSER ASSEMBLY (Click here)

OK → END

DTC B1467/67 Rear Air Foot Duct Sensor Circuit on Driver Side

for Preparation Click here

DESCRIPTION

The air duct temperature sensor LH*1 or RH*2 (for driver side) detects the duct temperature and sends the appropriate signals to the air conditioning amplifier assembly.


DTC Code	DTC Detection Condition	Trouble Area
B1467/67	An open or short in the air duct temperature sensor LH*1 or RH*2 circuit.	• Air duct temperature sensor LH*1 • Air duct temperature sensor RH*2 • Harness or connector (air duct temperature sensor LH)*1 • Harness or connector (air duct temperature sensor RH)*2 • Air conditioning amplifier assembly


HINT:

*1: for LHD

*2: for RHD

WIRING DIAGRAM

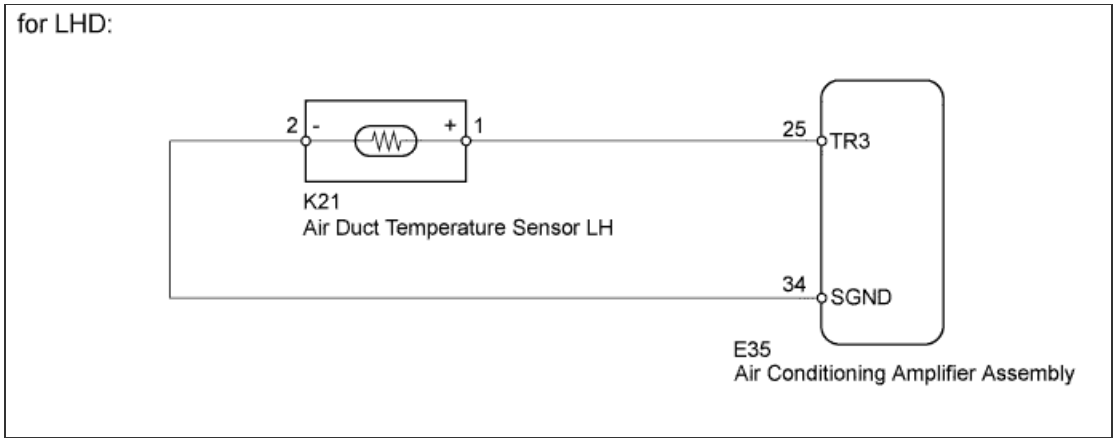

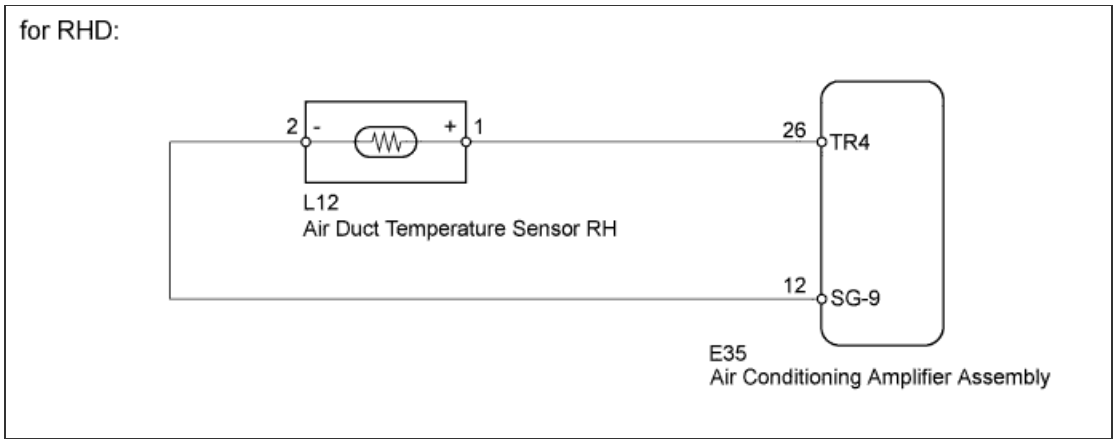

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR DUCT TEMPERATURE SENSOR)

a. Use the Data List to check if the air duct temperature sensor LH*1 or RH*2 (for driver side) is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note

Foot Duct Sensor (Rear D)	Min.: -12.7°C (9.14°F) Max.: 76.55°C (169.79°F)	Actual air duct temperature sensor (for driver side) displayed	Open in the circuit: -12.7°C (9.14°F) Short in the circuit: 76.55°C (169.79°F)

HINT:

*1: for LHD

*2: for RHD

OK:

The display is as specified in the normal condition.

NG	Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR DUCT TEMPERATURE SENSOR

a. for LHD

i. Remove the air duct temperature sensor LH (Click here).

b. for RHD

i. Remove the air duct temperature sensor RH (Click here).

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	at 10°C (50°F)	9.4 to 10.5 kΩ
	at 15°C (59°F)	7.5 to 8.3 kΩ
	at 20°C (68°F)	6.0 to 6.5 kΩ
	at 25°C (77°F)	4.5 to 5.2 kΩ
	at 30°C (86°F)	3.8 to 4.2 kΩ
	at 35°C (95°F)	3.1 to 3.4 kΩ
	at 40°C (104°F)	2.5 to 2.8 kΩ
	at 45°C (113°F)	2.0 to 2.3 kΩ
	at 50°C (122°F)	1.6 to 2.0 kΩ
	at 55°C (131°F)	1.3 to 1.6 kΩ
	at 60°C (140°F)	1.1 to 1.4 kΩ

NOTICE:

- **Touching the sensor even slightly may change the resistance value. Hold the connector of the sensor.**
- **When measuring the resistance, the sensor temperature must be the same as the ambient temperature.**


HINT:

As the temperature increases, the resistance decreases (see the graph).

If the resistance value is not as specified, replace the sensor.

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

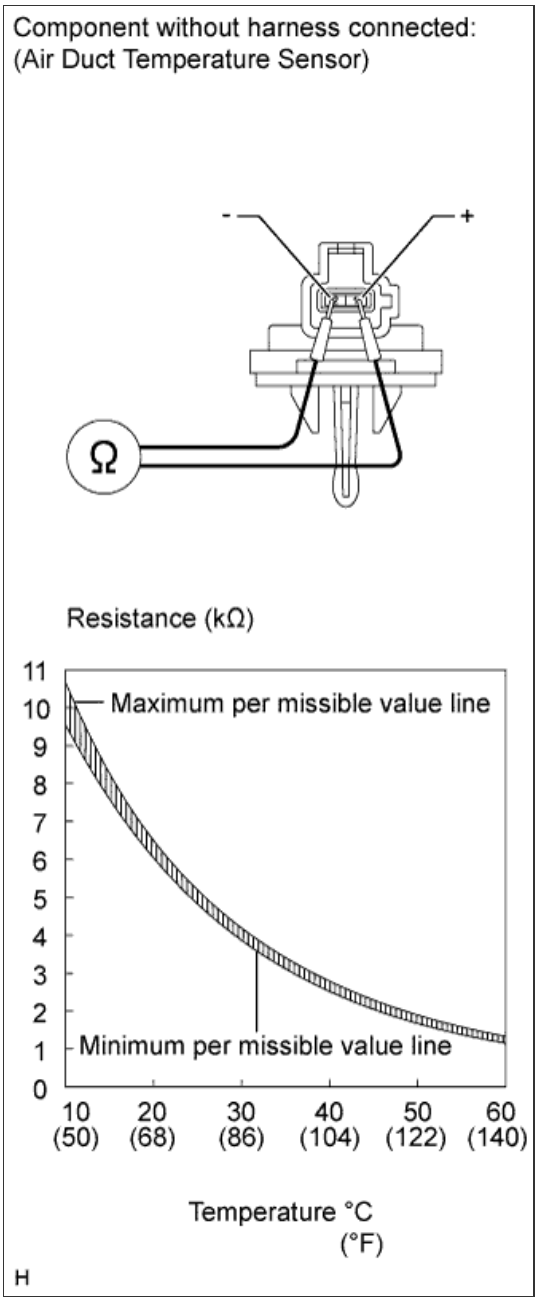

B → REPLACE AIR DUCT TEMPERATURE SENSOR LH (Click here)

C → REPLACE AIR DUCT TEMPERATURE SENSOR RH (Click here)

A

3.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - AIR DUCT TEMPERATURE SENSOR)

a. for LHD

i. Disconnect the K21 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-25 (TR3) - K21-1 (+)	Always	Below 1 Ω
E35-34 (SGND) - K21-2 (-)		
E35-25 (TR3) - Body ground	Always	10 kΩ or higher
E35-34 (SGND) - Body ground		

Front view of wire harness connector:
(to Air Duct Temperature Sensor LH)

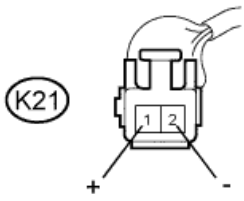

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

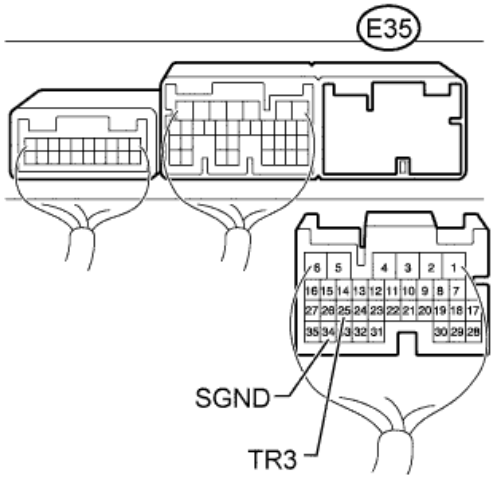

b. for RHD

i. Disconnect the L12 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-26 (TR4) - L12-1 (+)	Always	Below 1 Ω
E35-12 (SG-9) - L12-2 (-)		
E35-26 (TR4) - Body ground	Always	10 kΩ or higher
E35-12 (SG-9) - Body ground		

Front view of wire harness connector:
(to Air Duct Temperature Sensor RH)

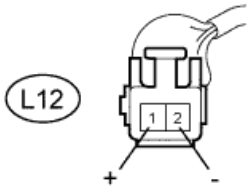

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

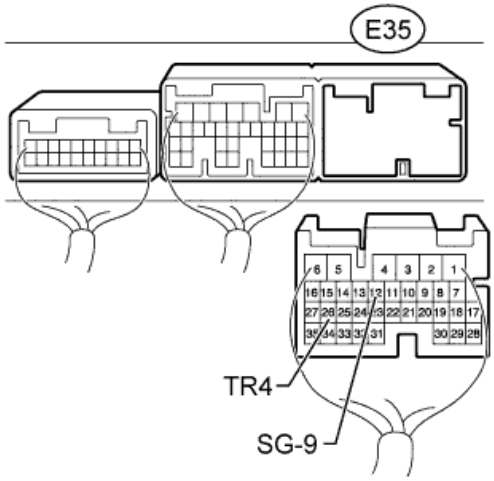

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1424/24 Solar Sensor Circuit (Driver Side)

for Preparation Click here

DESCRIPTION

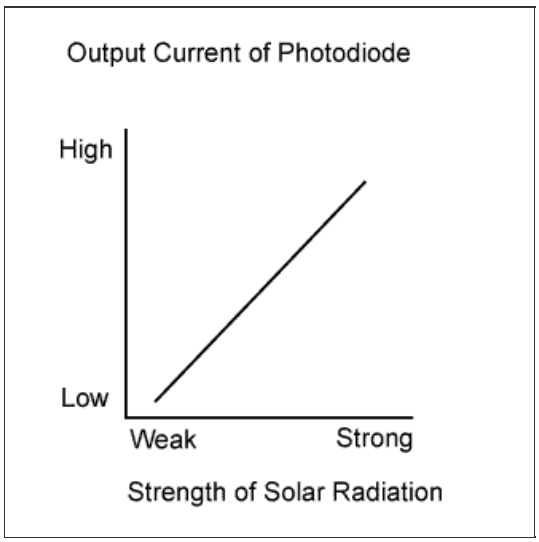


The automatic light control sensor (solar sensor), which is installed on the upper side of the instrument panel, detects sunlight and controls the air conditioning in auto mode. The output current from the solar sensor varies according to the amount of sunlight. When the sunlight increases, the output current increases. As the sunlight decreases, the output current decreases. The air conditioning amplifier assembly detects output current from the solar sensor.


DTC Code	DTC Detection Condition	Trouble Area
B1424/24	An open or short in the driver side solar sensor circuit.	• Automatic light control sensor (solar sensor) • Harness or connector between solar sensor and air conditioning amplifier assembly • Harness or connector between solar sensor and main body ECU (cowl side junction block LH) • Main body ECU (cowl side junction block LH) • Air conditioning amplifier assembly

HINT:

If DTC B1244 is output at the same time, troubleshoot DTC B1244 first.

WIRING DIAGRAM

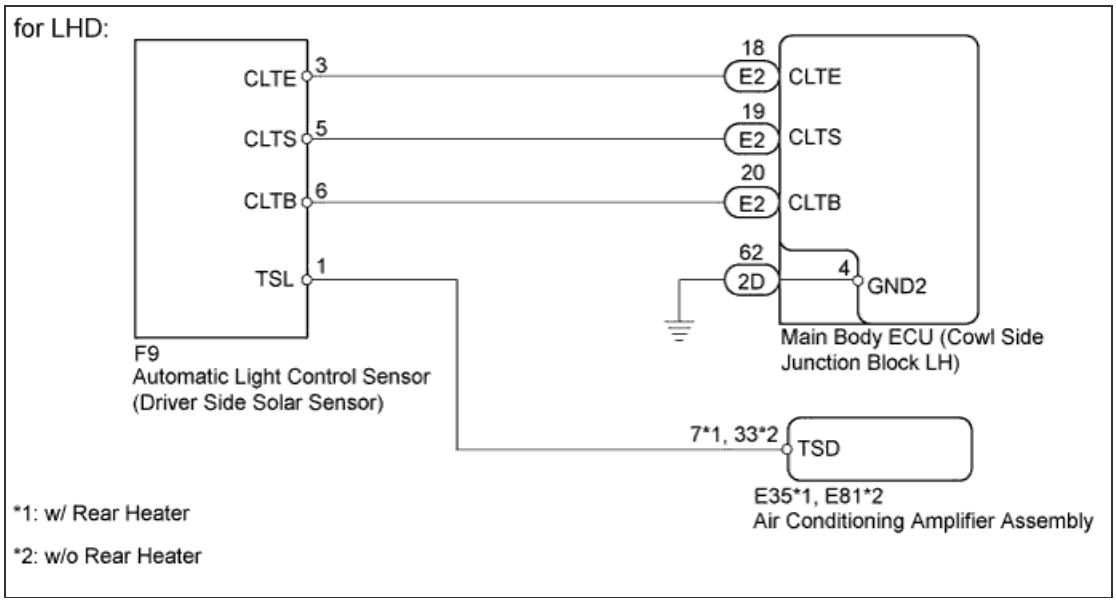

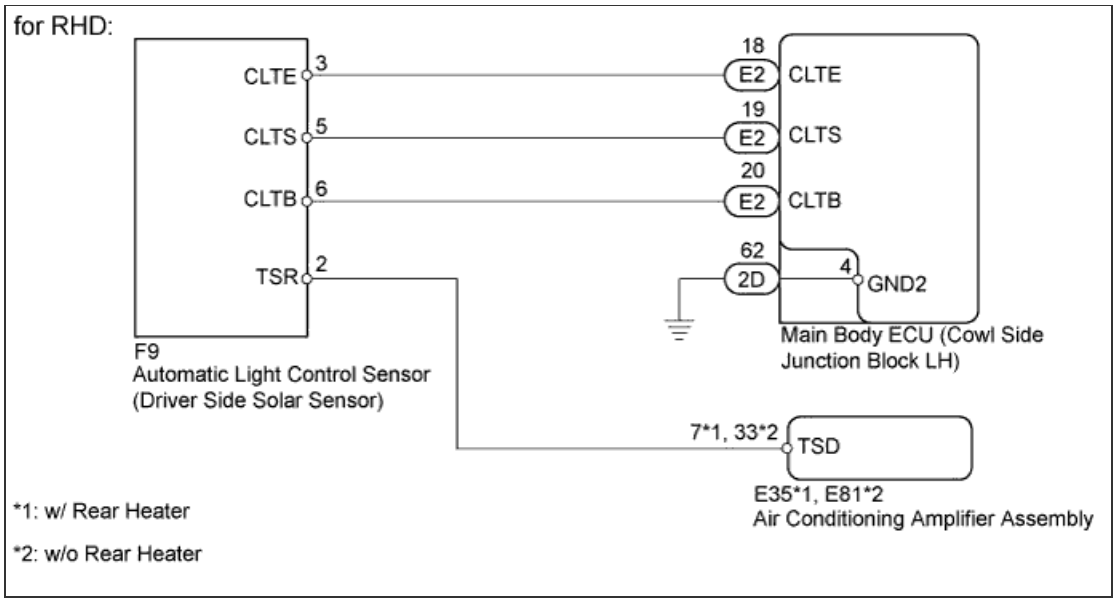

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (DRIVER SIDE SOLAR SENSOR)

a. Use the Data List to check if the driver side solar sensor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Solar Sensor (D Side)	Driver side solar sensor / Min.: 0, Max.: 255	Driver side solar sensor voltage increases as brightness increases	Open in the circuit: 0. Short in the circuit: 255.

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK ↓

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - AUTOMATIC LIGHT CONTROL SENSOR)

a. w/ Rear Heater

i. Disconnect the F9 sensor connector.

ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-7 (TSD) - F9-1 (TSL)*1	Always	Below 1 Ω
E35-7 (TSD) - F9-2 (TSR)*2	Always	Below 1 Ω
E35-7 (TSD) - Body ground	Always	10 kΩ or higher

HINT:

*1: for LHD

*2: for RHD

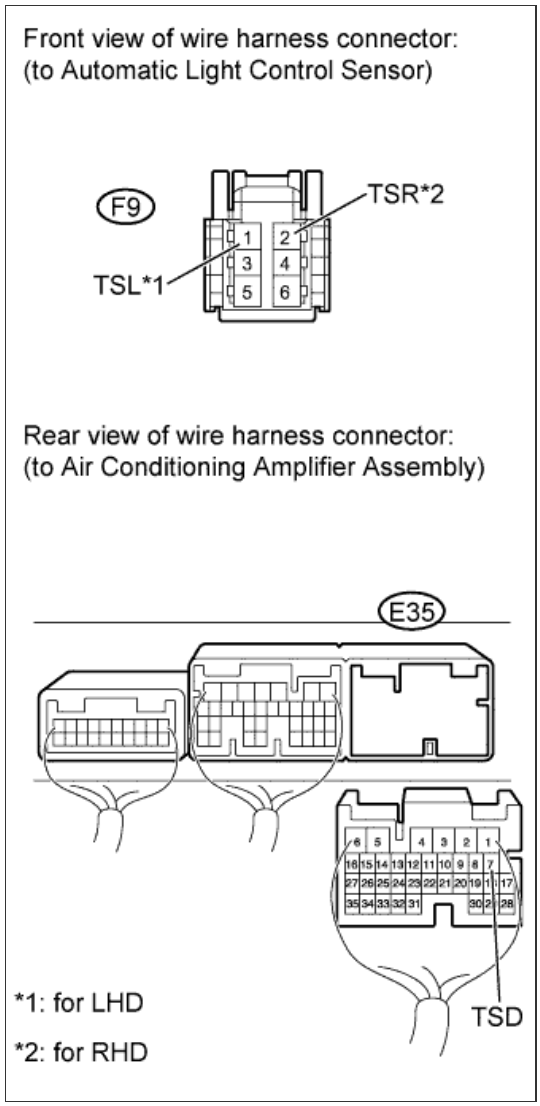

b. w/o Rear Heater

i. Disconnect the F9 sensor connector.

ii. Disconnect the E81 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-33 (TSD) - F9-1 (TSL)*1	Always	Below 1 Ω
E81-33 (TSD) - F9-2 (TSR)*2	Always	Below 1 Ω
E81-33 (TSD) - Body ground	Always	10 kΩ or higher

HINT:

*1: for LHD

*2: for RHD

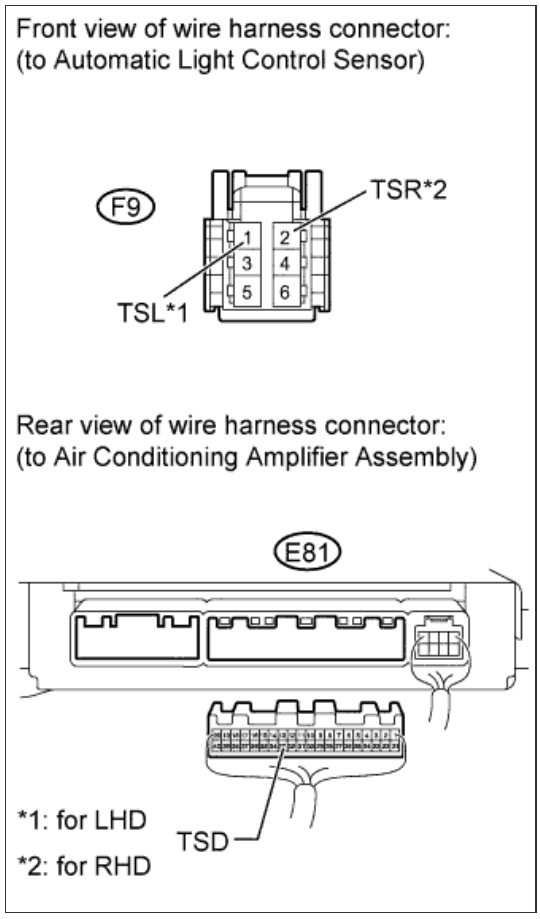

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT AUTOMATIC LIGHT CONTROL SENSOR (TSL, TSR - CLTE VOLTAGE)

a. Remove the automatic light control sensor (Click here).


b. Apply battery voltage between terminals 6 (CLTB) and 3 (CLTE) of the solar sensor.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
1 (TSL) - 3 (CLTE)*1	Sensor exposed to electric light	0.8 to 4.3 V
	Sensor covered with a cloth	Below 0.8 V
2 (TSR) - 3 (CLTE)*2	Sensor exposed to electric light	0.8 to 4.3 V
	Sensor covered with a cloth	Below 0.8 V

Component with harness connected:
(Automatic Light Control Sensor)

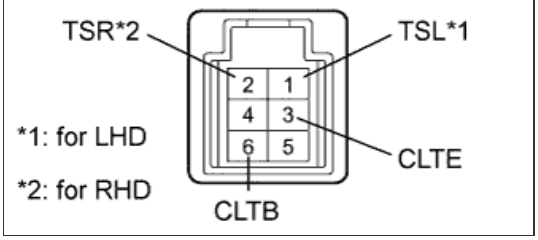

HINT:

- **As the inspection light is moved away from the sensor, the voltage decreases.**
- **Use an incandescent light for inspection. Bring it about 300 mm (11.8 in.) from the solar sensor.**
- ***1: for LHD**
- ***2: for RHD**

NG → REPLACE AUTOMATIC LIGHT CONTROL SENSOR (Click here)

OK

4.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - AUTOMATIC LIGHT CONTROL SENSOR)

a. Disconnect the E2 ECU connector.


b. Disconnect the F9 sensor connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E2-20 (CLTB) - F9-6 (CLTB)	Always	Below 1 Ω
E2-19 (CLTS) - F9-5 (CLTS)		
E2-18 (CLTE) - F9-3 (CLTE)		
E2-20 (CLTB) - Body ground	Always	10 kΩ or higher
E2-19 (CLTS) - Body ground		
E2-18 (CLTE) - Body ground		

Front view of wire harness connector:
(to Main Body ECU)

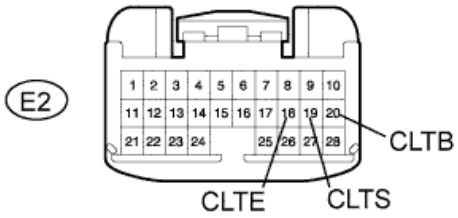

Front view of wire harness connector:
(to Automatic Light Control Sensor)

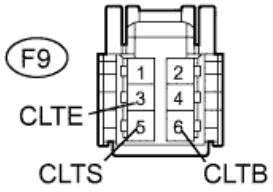

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

DTC B1467/67 Rear Air Foot Duct Sensor Circuit on Driver Side

for Preparation Click here

DESCRIPTION

The air duct temperature sensor LH*1 or RH*2 (for driver side) detects the duct temperature and sends the appropriate signals to the air conditioning amplifier assembly.


DTC Code	DTC Detection Condition	Trouble Area
B1467/67	An open or short in the air duct temperature sensor LH*1 or RH*2 circuit.	• Air duct temperature sensor LH*1 • Air duct temperature sensor RH*2 • Harness or connector (air duct temperature sensor LH)*1 • Harness or connector (air duct temperature sensor RH)*2 • Air conditioning amplifier assembly


HINT:

*1: for LHD

*2: for RHD

WIRING DIAGRAM

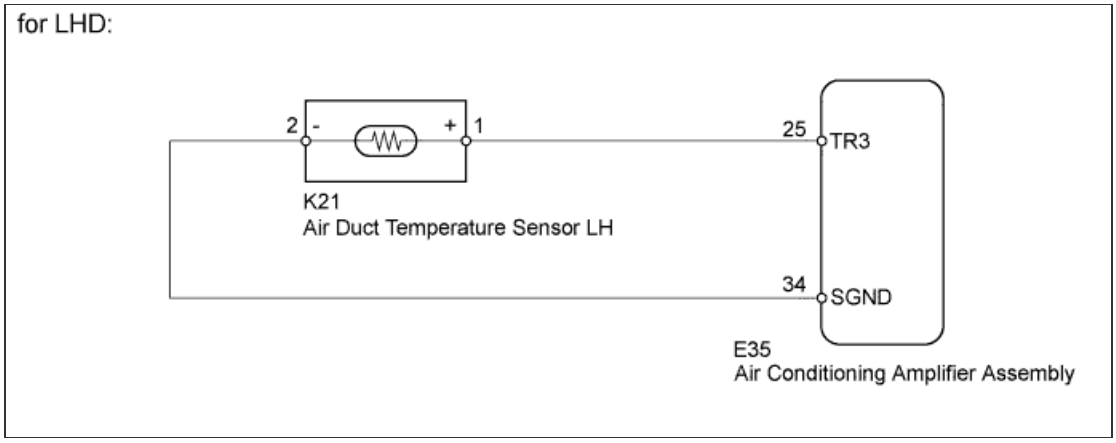

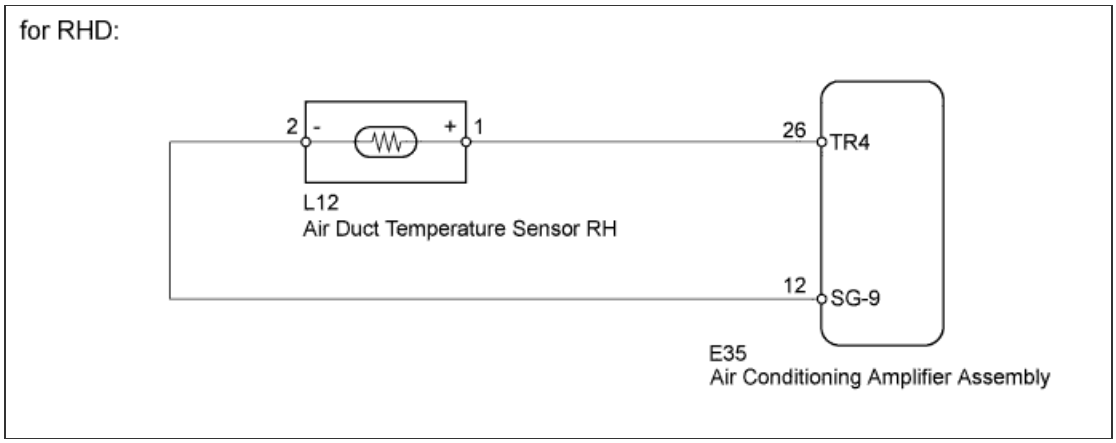

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR DUCT TEMPERATURE SENSOR)

a. Use the Data List to check if the air duct temperature sensor LH*1 or RH*2 (for driver side) is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note

Foot Duct Sensor (Rear D)	Min.: -12.7°C (9.14°F) Max.: 76.55°C (169.79°F)	Actual air duct temperature sensor (for driver side) displayed	Open in the circuit: -12.7°C (9.14°F) Short in the circuit: 76.55°C (169.79°F)

HINT:

*1: for LHD

*2: for RHD

OK:

The display is as specified in the normal condition.

NG	Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR DUCT TEMPERATURE SENSOR

a. for LHD

i. Remove the air duct temperature sensor LH (Click here).

b. for RHD

i. Remove the air duct temperature sensor RH (Click here).

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	at 10°C (50°F)	9.4 to 10.5 kΩ
	at 15°C (59°F)	7.5 to 8.3 kΩ
	at 20°C (68°F)	6.0 to 6.5 kΩ
	at 25°C (77°F)	4.5 to 5.2 kΩ
	at 30°C (86°F)	3.8 to 4.2 kΩ
	at 35°C (95°F)	3.1 to 3.4 kΩ
	at 40°C (104°F)	2.5 to 2.8 kΩ
	at 45°C (113°F)	2.0 to 2.3 kΩ
	at 50°C (122°F)	1.6 to 2.0 kΩ
	at 55°C (131°F)	1.3 to 1.6 kΩ
	at 60°C (140°F)	1.1 to 1.4 kΩ

NOTICE:

- **Touching the sensor even slightly may change the resistance value. Hold the connector of the sensor.**
- **When measuring the resistance, the sensor temperature must be the same as the ambient temperature.**


HINT:

As the temperature increases, the resistance decreases (see the graph).

If the resistance value is not as specified, replace the sensor.

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

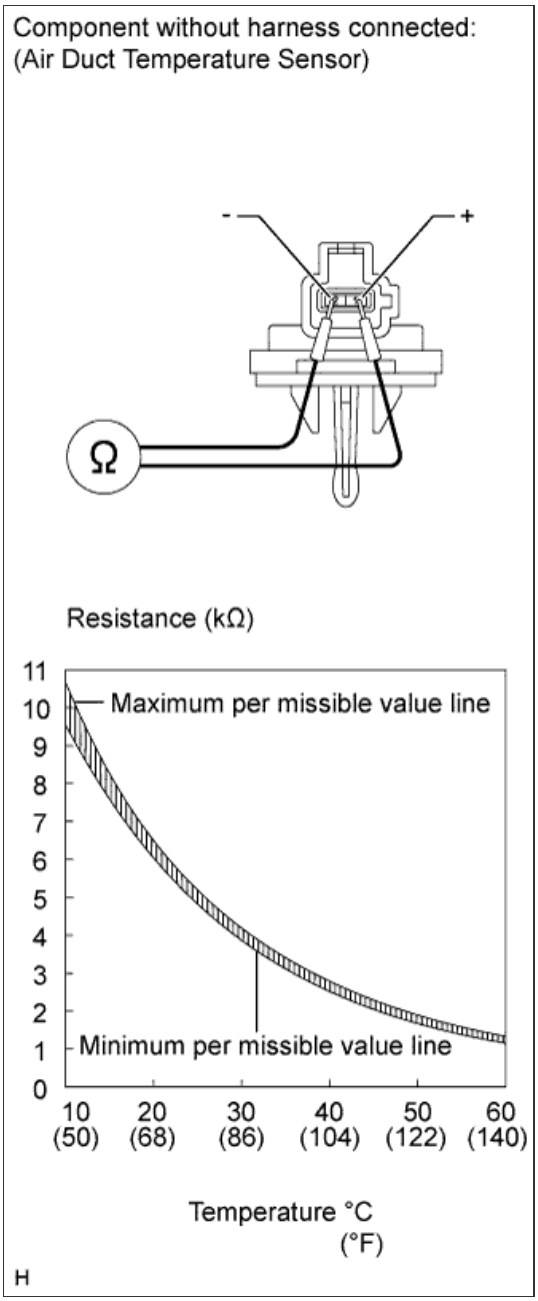

B → REPLACE AIR DUCT TEMPERATURE SENSOR LH (Click here)

C → REPLACE AIR DUCT TEMPERATURE SENSOR RH (Click here)

A

3.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - AIR DUCT TEMPERATURE SENSOR)

a. for LHD

i. Disconnect the K21 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-25 (TR3) - K21-1 (+)	Always	Below 1 Ω
E35-34 (SGND) - K21-2 (-)		
E35-25 (TR3) - Body ground	Always	10 kΩ or higher
E35-34 (SGND) - Body ground		

Front view of wire harness connector:
(to Air Duct Temperature Sensor LH)

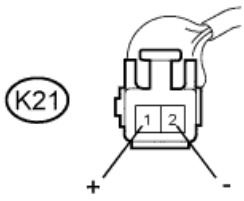

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

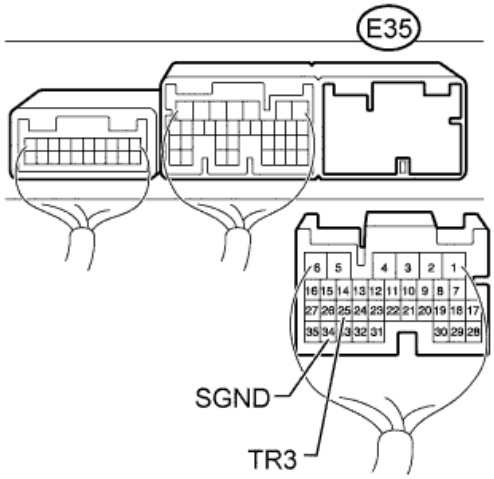

b. for RHD

i. Disconnect the L12 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-26 (TR4) - L12-1 (+)	Always	Below 1 Ω
E35-12 (SG-9) - L12-2 (-)		
E35-26 (TR4) - Body ground	Always	10 kΩ or higher
E35-12 (SG-9) - Body ground		

Front view of wire harness connector:
(to Air Duct Temperature Sensor RH)

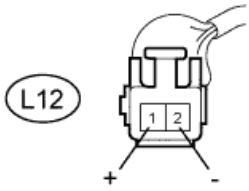

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

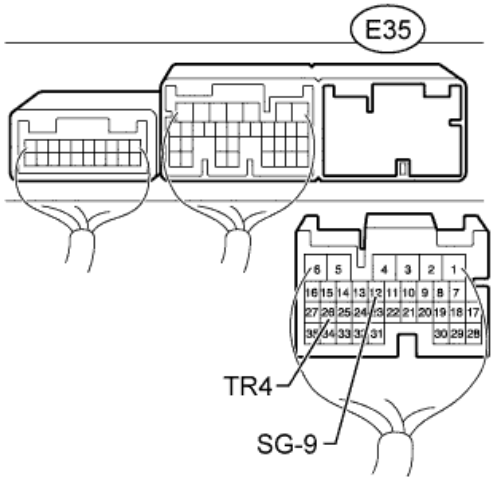

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1424/24 Solar Sensor Circuit (Driver Side)

for Preparation Click here

DESCRIPTION

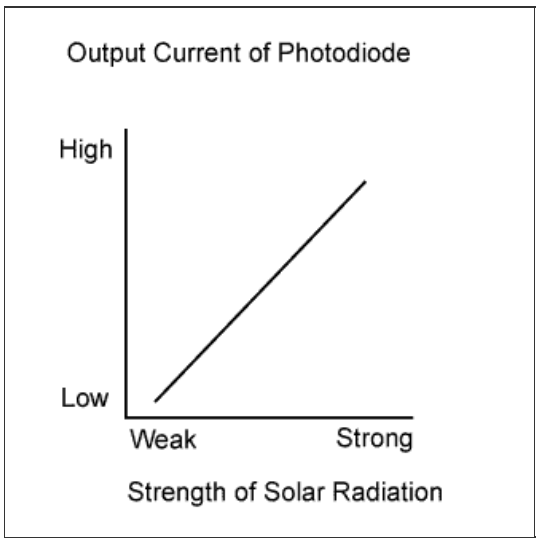


The automatic light control sensor (solar sensor), which is installed on the upper side of the instrument panel, detects sunlight and controls the air conditioning in auto mode. The output current from the solar sensor varies according to the amount of sunlight. When the sunlight increases, the output current increases. As the sunlight decreases, the output current decreases. The air conditioning amplifier assembly detects output current from the solar sensor.


DTC Code	DTC Detection Condition	Trouble Area
B1424/24	An open or short in the driver side solar sensor circuit.	• Automatic light control sensor (solar sensor) • Harness or connector between solar sensor and air conditioning amplifier assembly • Harness or connector between solar sensor and main body ECU (cowl side junction block LH) • Main body ECU (cowl side junction block LH) • Air conditioning amplifier assembly

HINT:

If DTC B1244 is output at the same time, troubleshoot DTC B1244 first.

WIRING DIAGRAM

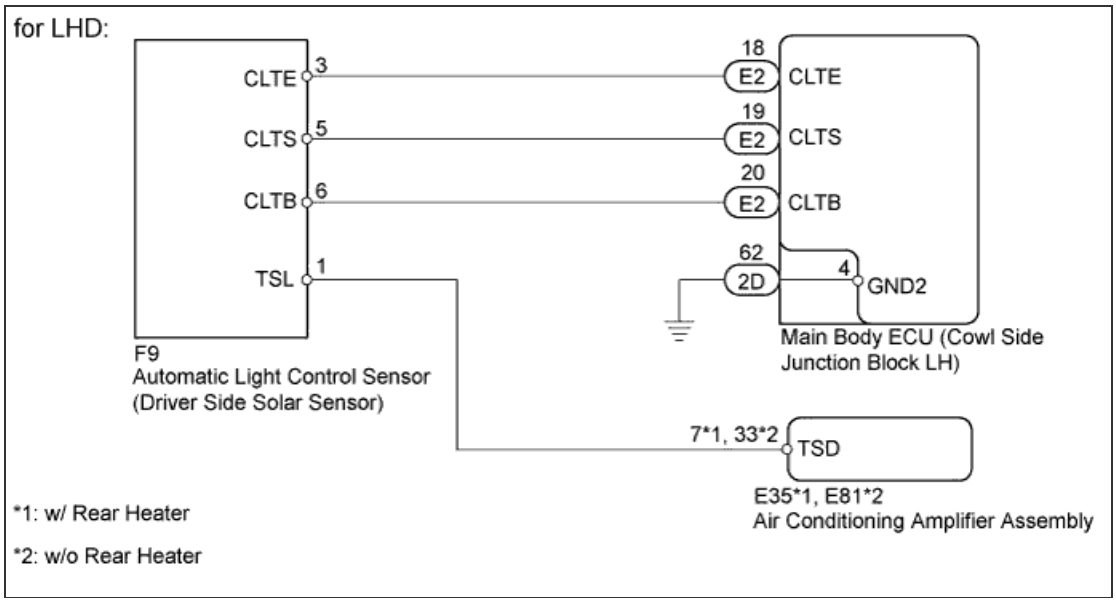

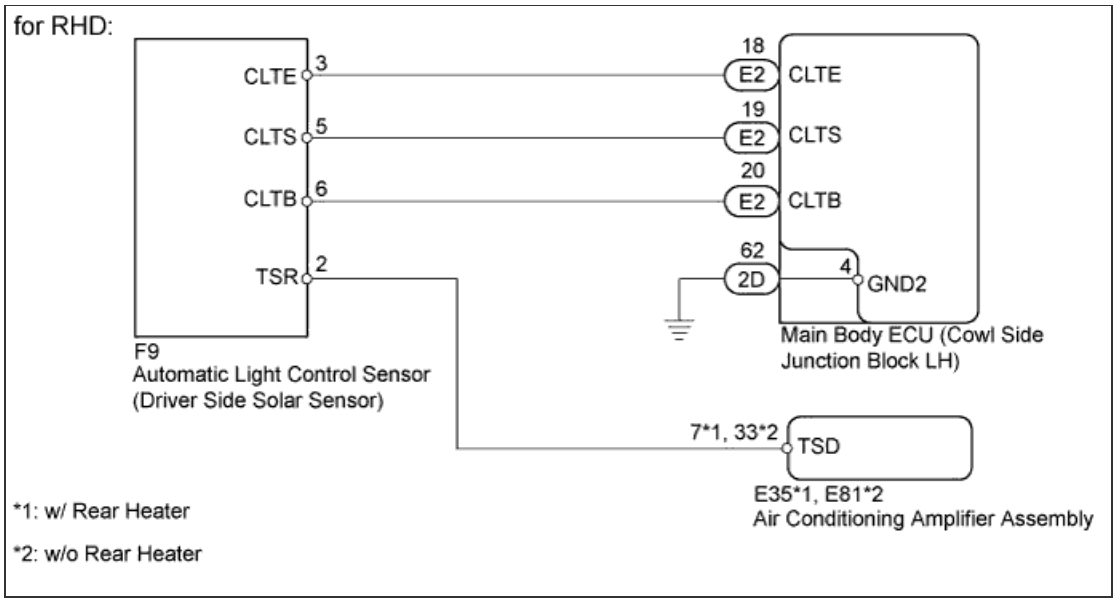

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (DRIVER SIDE SOLAR SENSOR)

a. Use the Data List to check if the driver side solar sensor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Solar Sensor (D Side)	Driver side solar sensor / Min.: 0, Max.: 255	Driver side solar sensor voltage increases as brightness increases	Open in the circuit: 0. Short in the circuit: 255.

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK ↓

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - AUTOMATIC LIGHT CONTROL SENSOR)

a. w/ Rear Heater

i. Disconnect the F9 sensor connector.

ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-7 (TSD) - F9-1 (TSL)*1	Always	Below 1 Ω
E35-7 (TSD) - F9-2 (TSR)*2	Always	Below 1 Ω
E35-7 (TSD) - Body ground	Always	10 kΩ or higher

HINT:

*1: for LHD

*2: for RHD

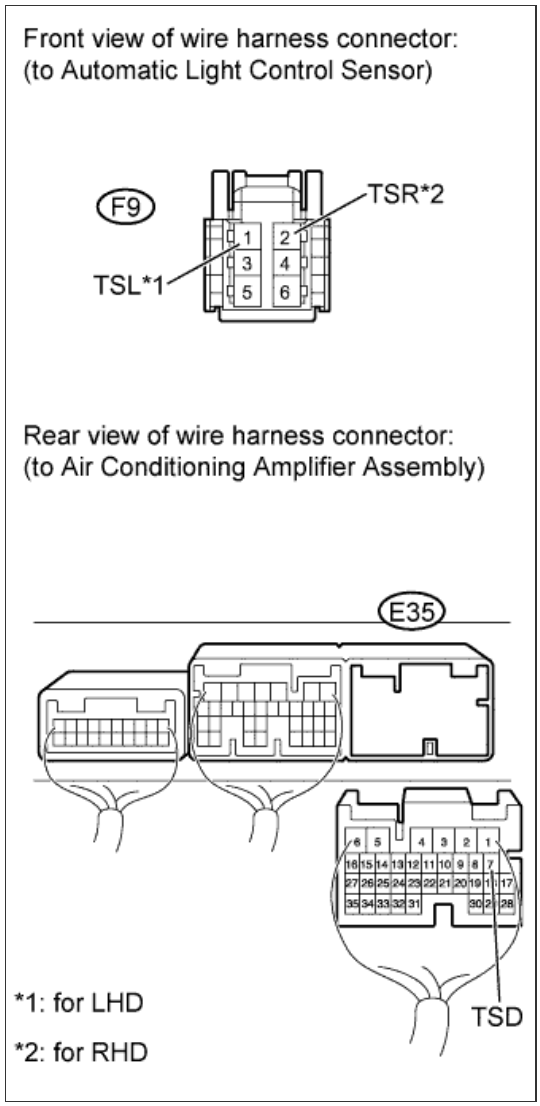

b. w/o Rear Heater

i. Disconnect the F9 sensor connector.

ii. Disconnect the E81 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-33 (TSD) - F9-1 (TSL)*1	Always	Below 1 Ω
E81-33 (TSD) - F9-2 (TSR)*2	Always	Below 1 Ω
E81-33 (TSD) - Body ground	Always	10 kΩ or higher

HINT:

*1: for LHD

*2: for RHD

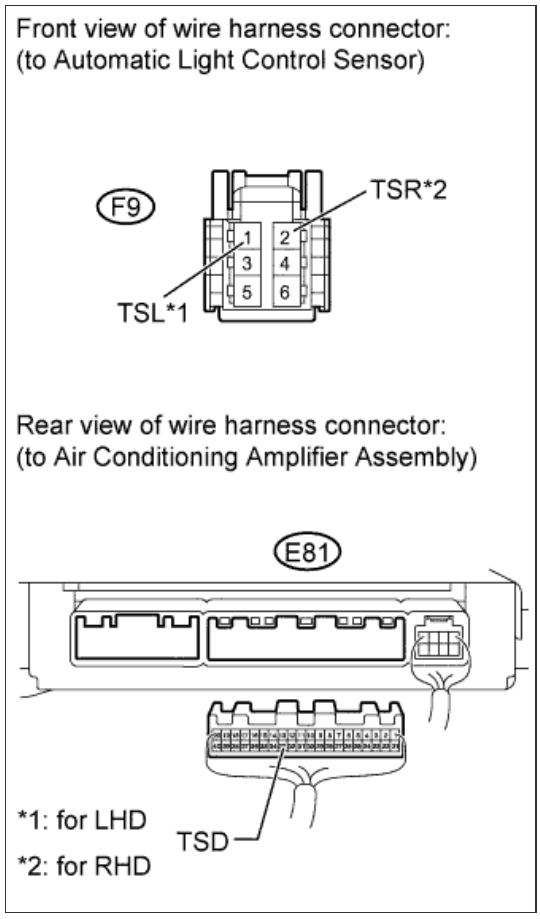

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.INSPECT AUTOMATIC LIGHT CONTROL SENSOR (TSL, TSR - CLTE VOLTAGE)

a. Remove the automatic light control sensor (Click here).


b. Apply battery voltage between terminals 6 (CLTB) and 3 (CLTE) of the solar sensor.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
1 (TSL) - 3 (CLTE)*1	Sensor exposed to electric light	0.8 to 4.3 V
	Sensor covered with a cloth	Below 0.8 V
2 (TSR) - 3 (CLTE)*2	Sensor exposed to electric light	0.8 to 4.3 V
	Sensor covered with a cloth	Below 0.8 V

Component with harness connected:
(Automatic Light Control Sensor)

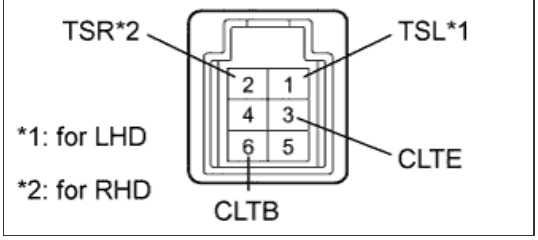

HINT:

- **As the inspection light is moved away from the sensor, the voltage decreases.**
- **Use an incandescent light for inspection. Bring it about 300 mm (11.8 in.) from the solar sensor.**
- ***1: for LHD**
- ***2: for RHD**

NG → REPLACE AUTOMATIC LIGHT CONTROL SENSOR (Click here)

OK

4.CHECK HARNESS AND CONNECTOR (MAIN BODY ECU - AUTOMATIC LIGHT CONTROL SENSOR)

a. Disconnect the E2 ECU connector.


b. Disconnect the F9 sensor connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E2-20 (CLTB) - F9-6 (CLTB)	Always	Below 1 Ω
E2-19 (CLTS) - F9-5 (CLTS)		
E2-18 (CLTE) - F9-3 (CLTE)		
E2-20 (CLTB) - Body ground	Always	10 kΩ or higher
E2-19 (CLTS) - Body ground		
E2-18 (CLTE) - Body ground		

Front view of wire harness connector:
(to Main Body ECU)

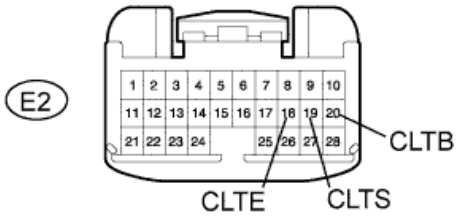

Front view of wire harness connector:
(to Automatic Light Control Sensor)

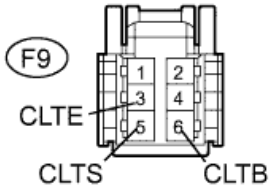

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MAIN BODY ECU (COWL SIDE JUNCTION BLOCK LH)

DTC B1468/68 Rear Passenger Side Room Temperature Sensor Circuit

for Preparation Click here

DESCRIPTION

The rear room temperature sensor RH*1 or LH*2 (for front passenger side) is installed in the rear quarter trim board RH*1 or LH*2 to detect the rear room temperature and control the heater and air conditioner "auto" mode. The resistance of the rear room temperature sensor RH*1 or LH*2 changes in accordance with the rear room temperature for RH*1 or LH*2 seat. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.

The air conditioning amplifier applies a voltage (5) to the rear room temperature sensor RH*1 or LH*2 and reads voltage changes as changes in the resistance of the rear room temperature sensor RH*1 or LH*2.


DTC Code	DTC Detection Condition	Trouble Area
B1468/68	An open or short in the rear room temperature sensor RH*1 or LH*2 circuit.	• Rear room temperature sensor RH*1 • Rear room temperature sensor LH*2 • Harness or connector between rear room temperature sensor RH and air conditioning amplifier assembly*1 • Harness or connector between rear room temperature sensor LH and air conditioning amplifier assembly*2 • Air conditioning amplifier assembly


HINT:

*1: for LHD

*2: for RHD

WIRING DIAGRAM

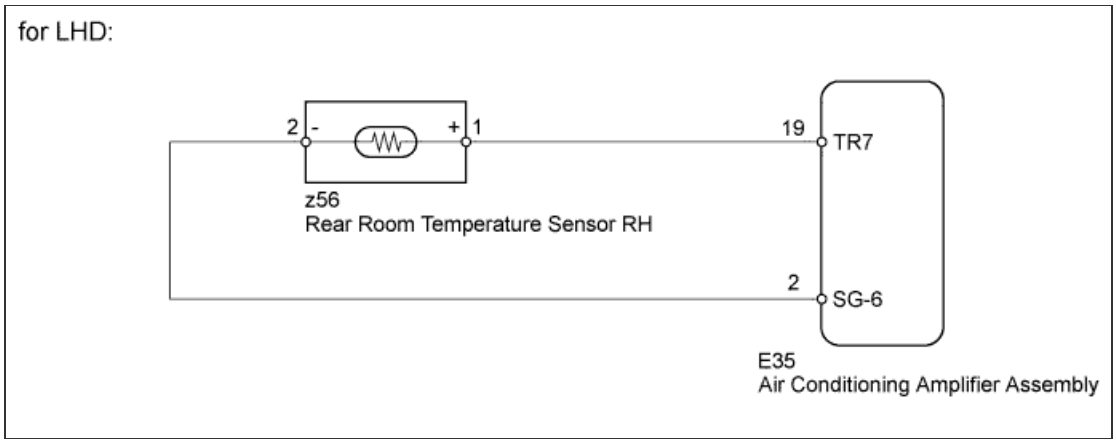

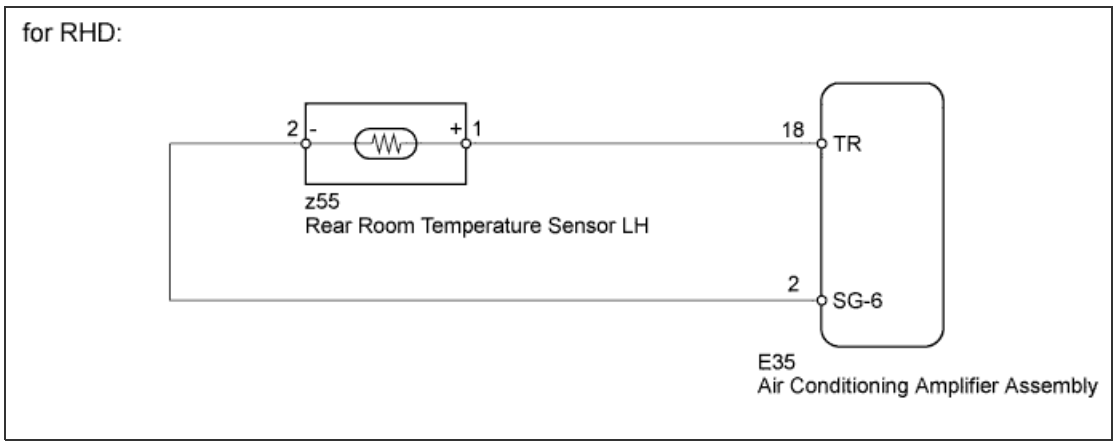

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR CONDITIONER)

a. Use the Data List to check if the rear room temperature sensor RH*1 or LH*2 is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Room Temperature Sensor (RP)	Rear room temperature sensor for RH*1 or LH*2 / Min.: -6.5 C (20.) Ma .: 57.25 C (1 5.05)	Actual rear room temperature for RH*1 or LH*2 displayed	Open in the circuit: -6.5 C (20.). Short in the circuit: 57.25 C (1 5.05).

HINT:

*1: for LHD

*2: for RHD

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.INSPECT REAR ROOM TEMPERATURE SENSOR

a. for LHD
Remove the rear room temperature sensor RH (Click here).

b. for RHD
Remove the rear room temperature sensor LH (Click here).

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	10 C (50)	.00 to .7 kΩ
	15 C (59)	2.45 to 2.88 kΩ
	20 C (68)	1.95 to 2. kΩ
	25 C (77)	1.60 to 1.80 kΩ
	C (86)	1.28 to 1.47 kΩ
	5 C (95)	1.00 to 1.22 kΩ
	40 C (104)	0.80 to 1.00 kΩ
	45 C (11)	0.65 to 0.85 kΩ
	50 C (122)	0.50 to 0.70 kΩ
	55 C (1 1)	0.44 to 0.60 kΩ
	60 C (140)	0. 6 to 0.50 kΩ

NOTICE:

ven slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.

HINT:

As the temperature increases, the resistance decreases (see the graph).

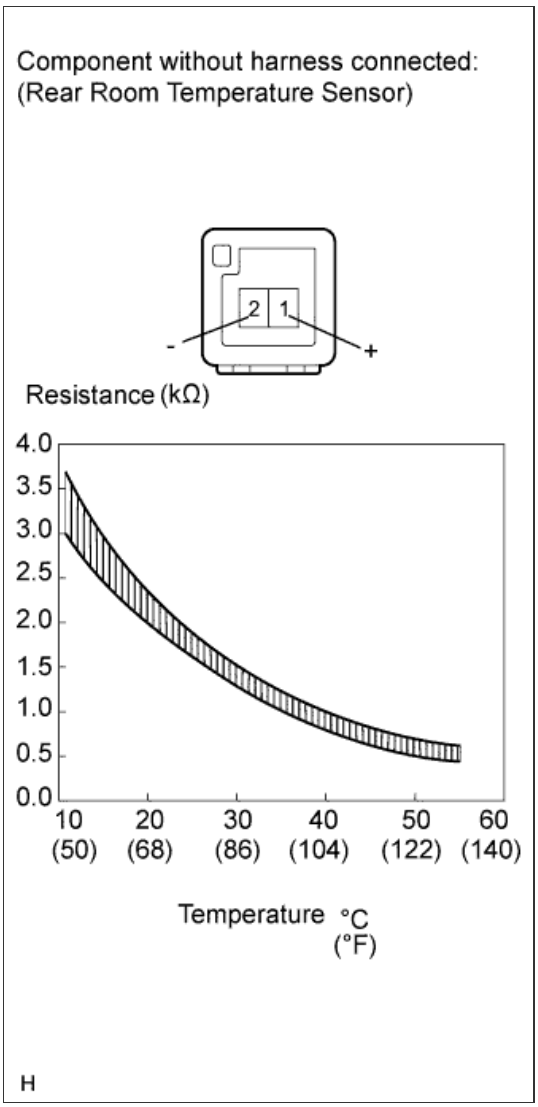

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE REAR ROOM TEMPERATURE SENSOR RH (Click here)

C

REPLACE REAR ROOM TEMPERATURE SENSOR LH (Click here)

A

3.CHECK HARNESS AND CONNECTOR (REAR ROOM TEMPERATURE SENSOR - AIR CONDITIONING AMPLIFIER)

a. for LHD

i. Disconnect the z56 sensor connector.

ii. Disconnect the 5 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z56-2 (-) - 5-2 (SG-6)	Always	Below 1 Ω
z56-1 (+) - 5-19 (TR7)		
5-2 (SG-6) - Body ground	Always	10 kΩ or higher
5-19 (TR7) - Body ground		

b. for RHD

i. Disconnect the z55 sensor connector.


ii. Disconnect the 5 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
z55-2 (-) - 5-2 (SG-6)	Always	Below 1 Ω
z55-1 (+) - 5-18 (TR)		
5-2 (SG-6) - Body ground	Always	10 kΩ or higher
5-18 (TR) - Body ground		


Front view of wire harness connector:
(to Rear Room Temperature Sensor RH)

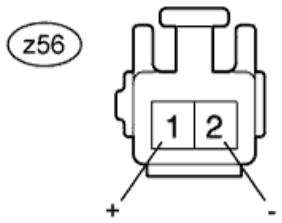


Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

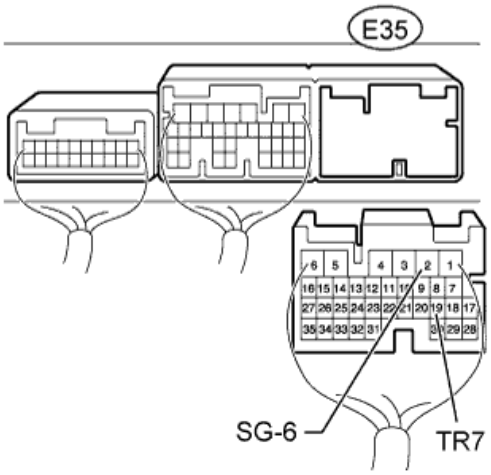

Front view of wire harness connector:
(to Rear Room Temperature Sensor LH)

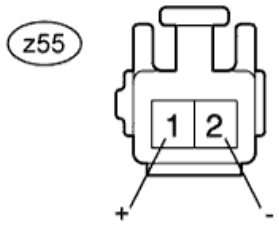

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

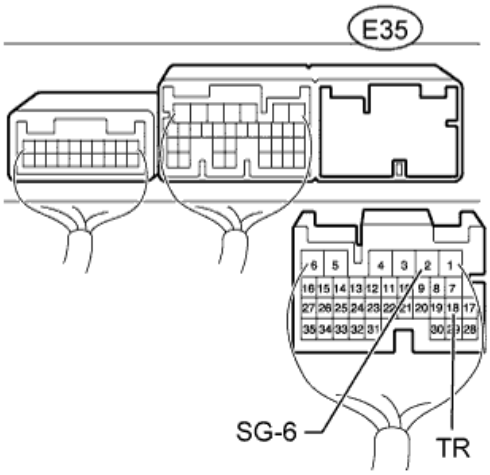

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1429/29 Rear Air Foot Duct Sensor Circuit on Front Passenger Side

for Preparation Click here

DESCRIPTION

The air duct temperature sensor RH*1 or LH*2 (for front passenger side) detects the duct temperature and sends the appropriate signals to the air conditioning amplifier assembly.


DTC Code	DTC Detection Condition	Trouble Area
B1429/29	An open or short in the air duct temperature sensor RH*1 or LH*2 circuit.	• Air duct temperature sensor RH*1 • Air duct temperature sensor LH*2 • Harness or connector (air duct temperature sensor RH)*1 • Harness or connector (air duct temperature sensor LH)*2 • Air conditioning amplifier assembly


HINT:

*1: for LHD

*2: for RHD

WIRING DIAGRAM

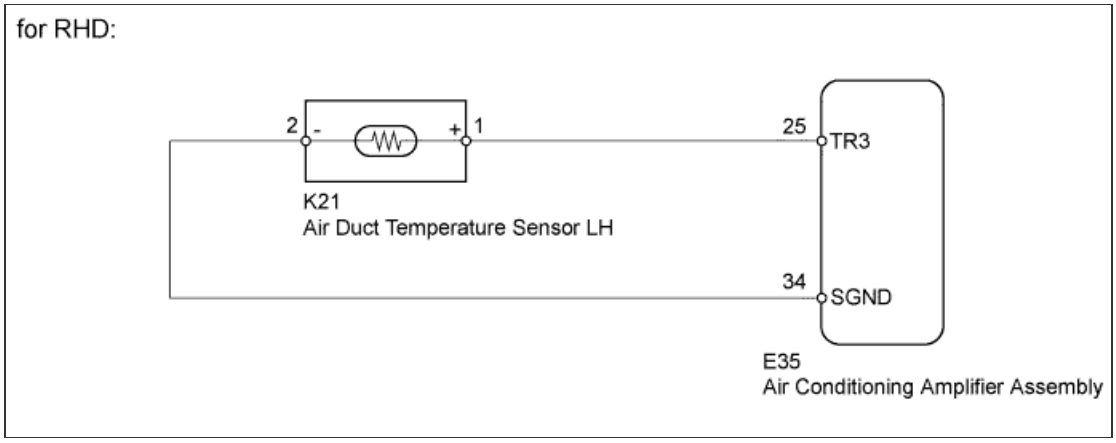

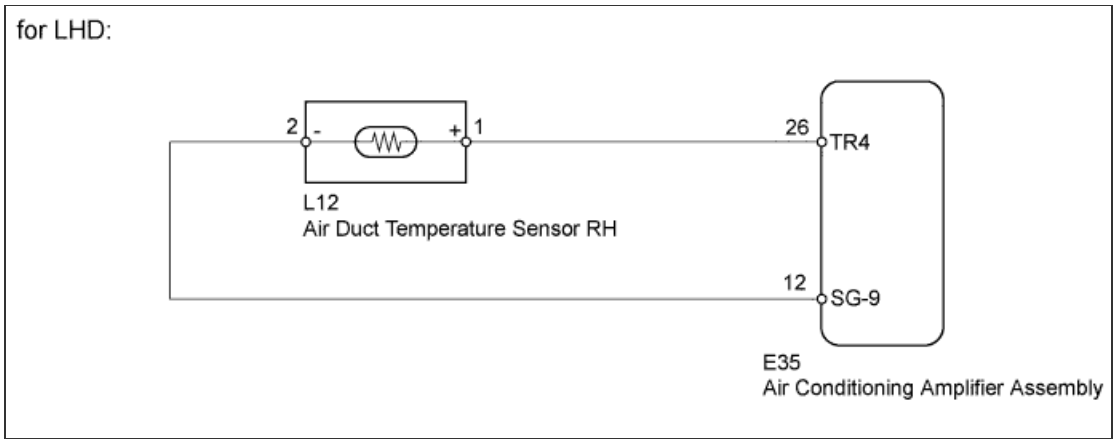

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR DUCT TEMPERATURE SENSOR)

a. Use the Data List to check if the air duct temperature sensor RH*1 or LH*2 (for front passenger side) is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note

Foot Duct Sensor (Rear P)	Min.: -12.7°C (9.14°F) Max.: 76.55°C (169.79°F)	Actual air duct temperature sensor (for passenger side) displayed	Open in the circuit: -12.7°C (9.14°F) Short in the circuit: 76.55°C (169.79°F)

HINT:

*1: for LHD

*2: for RHD

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR DUCT TEMPERATURE SENSOR

a. for LHD

i. Remove the air duct temperature sensor RH (Click here).

b. for RHD

i. Remove the air duct temperature sensor LH (Click here).

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	at 10°C (50°F)	9.4 to 10.5 kΩ
	at 15°C (59°F)	7.5 to 8.3 kΩ
	at 20°C (68°F)	6.0 to 6.5 kΩ
	at 25°C (77°F)	4.5 to 5.2 kΩ
	at 30°C (86°F)	3.8 to 4.2 kΩ
	at 35°C (95°F)	3.1 to 3.4 kΩ
	at 40°C (104°F)	2.5 to 2.8 kΩ
	at 45°C (113°F)	2.0 to 2.3 kΩ
	at 50°C (122°F)	1.6 to 2.0 kΩ
	at 55°C (131°F)	1.3 to 1.6 kΩ
	at 60°C (140°F)	1.1 to 1.4 kΩ

NOTICE:


- **Touching the sensor even slightly may change the resistance value. Hold the connector of the sensor.**
- **When measuring the resistance, the sensor temperature must be the same as the ambient temperature.**


HINT:

As the temperature increases, the resistance decreases (see the graph).

If the resistance value is not as specified, replace the sensor.

Component without harness connected:
(Air Duct Temperature Sensor)

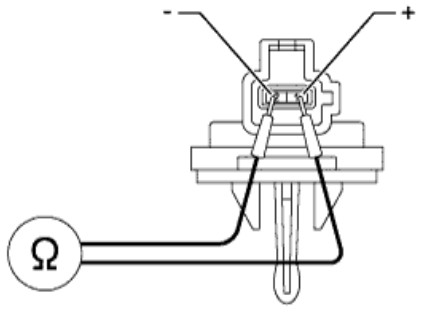

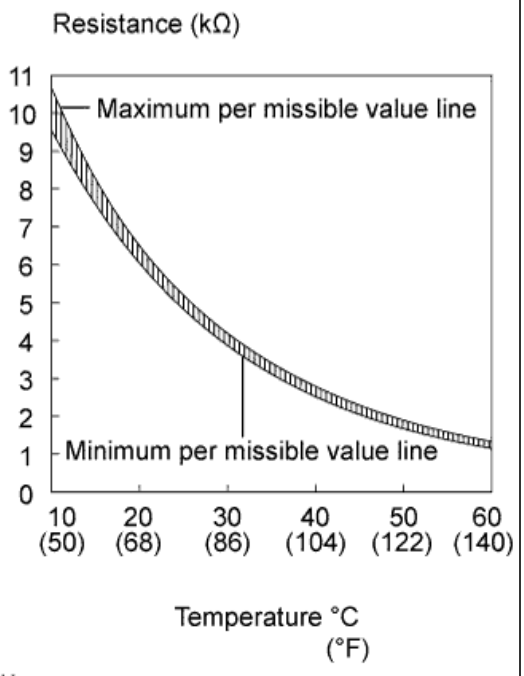

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE AIR DUCT TEMPERATURE SENSOR RH (Click here)

C → REPLACE AIR DUCT TEMPERATURE SENSOR LH (Click here)

A

3.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER AIR DUCT TEMPERATURE SENSOR)

a. for LHD

i. Disconnect the L12 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-26 (TR4) - L12-1 (+)	Always	Below 1 Ω
E35-12 (SG-9) - L12-2 (-)		
E35-26 (TR4) - Body ground	Always	10 kΩ or higher
E35-12 (SG-9) - Body ground		

Front view of wire harness connector:
(to Air Duct Temperature Sensor RH)

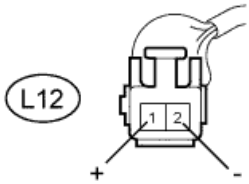

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

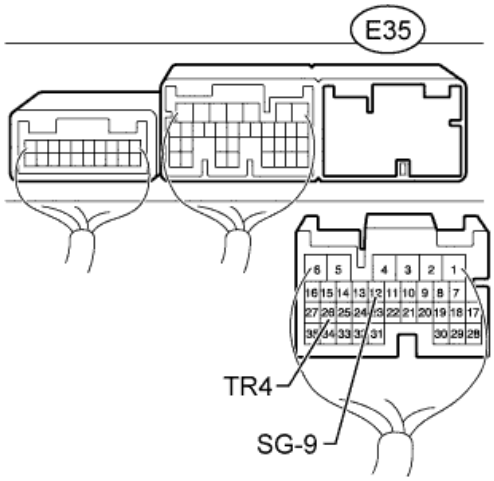

b. for RHD

i. Disconnect the K21 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-25 (TR3) - K21-1 (+)	Always	Below 1 Ω
E35-34 (SGND) - K21-2 (-)		
E35-25 (TR3) - Body ground	Always	10 kΩ or higher
E35-34 (SGND) - Body ground		

Front view of wire harness connector:
(to Air Duct Temperature Sensor LH)

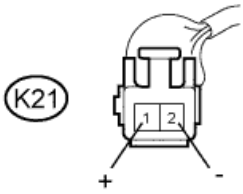

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

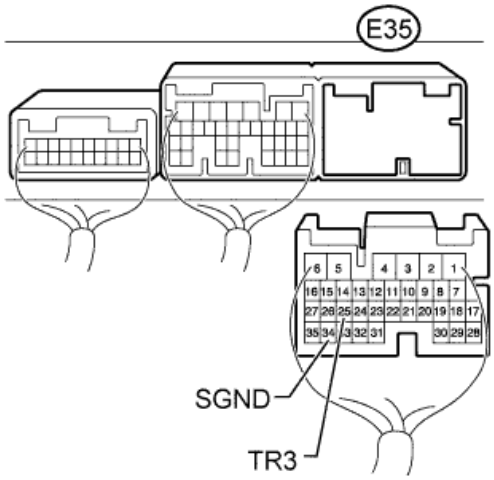

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1468/68 Rear Passenger Side Room Temperature Sensor Circuit

for Preparation Click here

DESCRIPTION

The rear room temperature sensor RH*1 or LH*2 (for front passenger side) is installed in the rear quarter trim board RH*1 or LH*2 to detect the rear room temperature and control the heater and air conditioner "auto" mode. The resistance of the rear room temperature sensor RH*1 or LH*2 changes in accordance with the rear room temperature for RH*1 or LH*2 seat. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.

The air conditioning amplifier applies a voltage (5) to the rear room temperature sensor RH*1 or LH*2 and reads voltage changes as changes in the resistance of the rear room temperature sensor RH*1 or LH*2.


DTC Code	DTC Detection Condition	Trouble Area
B1468/68	An open or short in the rear room temperature sensor RH*1 or LH*2 circuit.	• Rear room temperature sensor RH*1 • Rear room temperature sensor LH*2 • Harness or connector between rear room temperature sensor RH and air conditioning amplifier assembly*1 • Harness or connector between rear room temperature sensor LH and air conditioning amplifier assembly*2 • Air conditioning amplifier assembly


HINT:

*1: for LHD

*2: for RHD

WIRING DIAGRAM

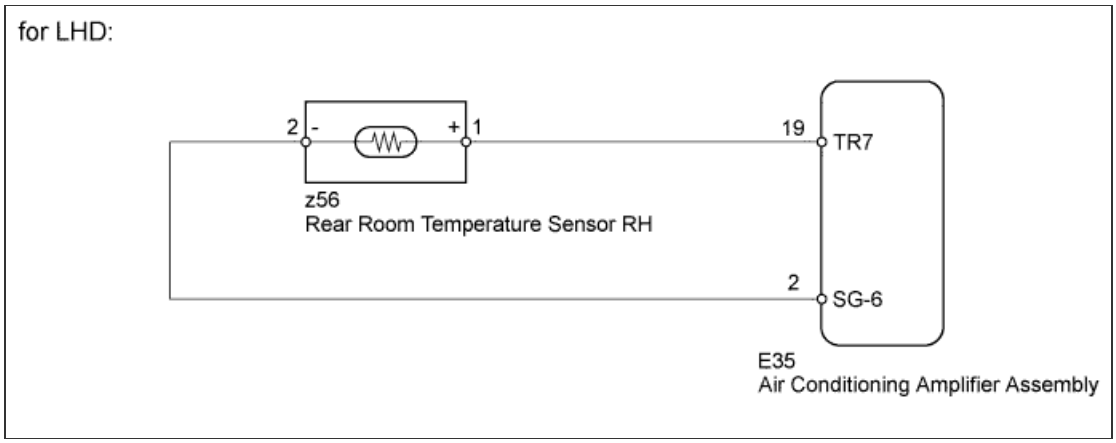

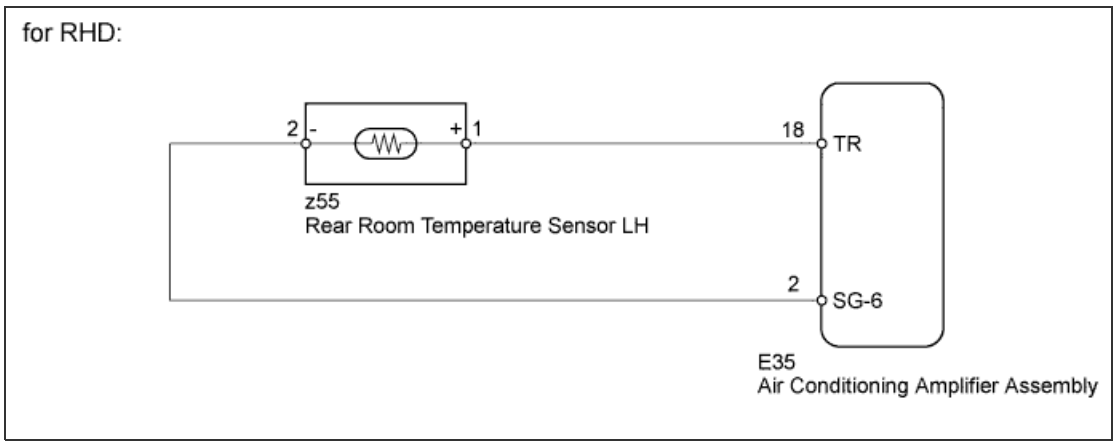

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR CONDITIONER)

a. Use the Data List to check if the rear room temperature sensor RH*1 or LH*2 is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Room Temperature Sensor (RP)	Rear room temperature sensor for RH*1 or LH*2 / Min.: -6.5 C (20.) Ma .: 57.25 C (1 5.05)	Actual rear room temperature for RH*1 or LH*2 displayed	Open in the circuit: -6.5 C (20.). Short in the circuit: 57.25 C (1 5.05).

HINT:

*1: for LHD

*2: for RHD

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.INSPECT REAR ROOM TEMPERATURE SENSOR

a. for LHD
Remove the rear room temperature sensor RH (Click here).

b. for RHD
Remove the rear room temperature sensor LH (Click here).

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	10 C (50)	.00 to .7 kΩ
	15 C (59)	2.45 to 2.88 kΩ
	20 C (68)	1.95 to 2. kΩ
	25 C (77)	1.60 to 1.80 kΩ
	C (86)	1.28 to 1.47 kΩ
	5 C (95)	1.00 to 1.22 kΩ
	40 C (104)	0.80 to 1.00 kΩ
	45 C (11)	0.65 to 0.85 kΩ
	50 C (122)	0.50 to 0.70 kΩ
	55 C (1 1)	0.44 to 0.60 kΩ
	60 C (140)	0. 6 to 0.50 kΩ

NOTICE:

ven slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.

HINT:

As the temperature increases, the resistance decreases (see the graph).

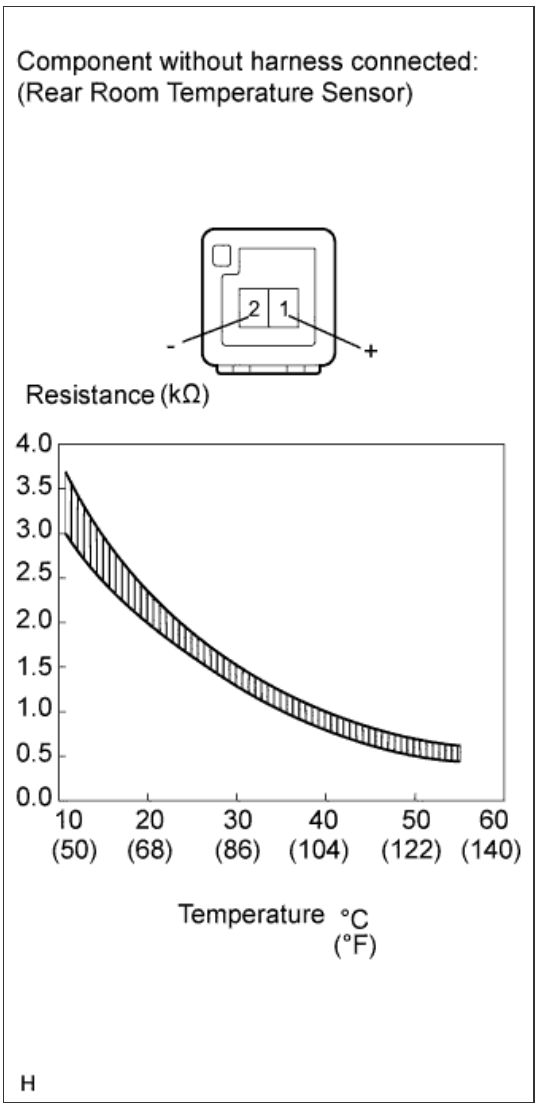

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE REAR ROOM TEMPERATURE SENSOR RH (Click here)

C

REPLACE REAR ROOM TEMPERATURE SENSOR LH (Click here)

A

3.CHECK HARNESS AND CONNECTOR (REAR ROOM TEMPERATURE SENSOR - AIR CONDITIONING AMPLIFIER)

a. for LHD

i. Disconnect the z56 sensor connector.

ii. Disconnect the 5 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z56-2 (-) - 5-2 (SG-6)	Always	Below 1 Ω
z56-1 (+) - 5-19 (TR7)		
5-2 (SG-6) - Body ground	Always	10 kΩ or higher
5-19 (TR7) - Body ground		

b. for RHD

i. Disconnect the z55 sensor connector.


ii. Disconnect the 5 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
z55-2 (-) - 5-2 (SG-6)	Always	Below 1 Ω
z55-1 (+) - 5-18 (TR)		
5-2 (SG-6) - Body ground	Always	10 kΩ or higher
5-18 (TR) - Body ground		


Front view of wire harness connector:
(to Rear Room Temperature Sensor RH)

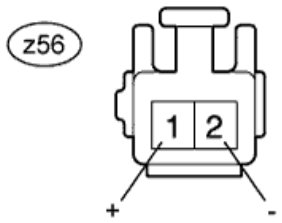


Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

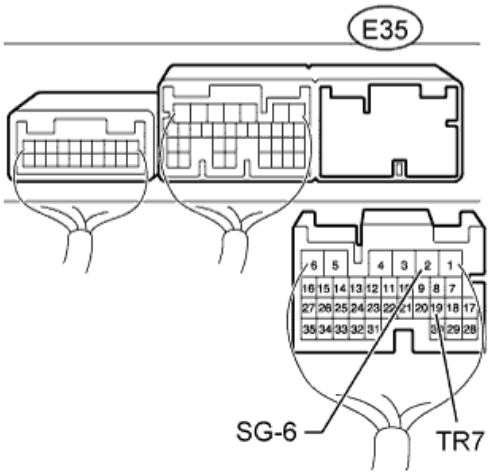

Front view of wire harness connector:
(to Rear Room Temperature Sensor LH)

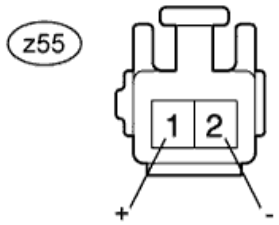

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

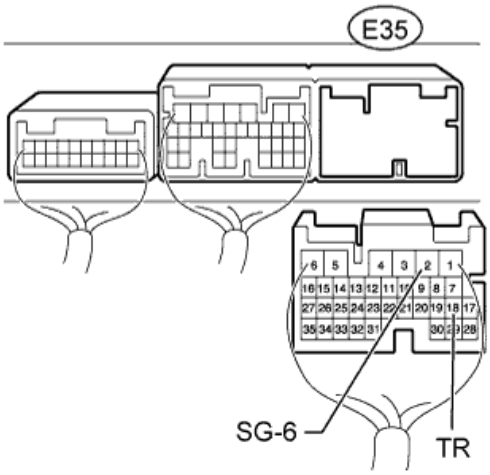

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1429/29 Rear Air Foot Duct Sensor Circuit on Front Passenger Side

for Preparation Click here

DESCRIPTION

The air duct temperature sensor RH*1 or LH*2 (for front passenger side) detects the duct temperature and sends the appropriate signals to the air conditioning amplifier assembly.


DTC Code	DTC Detection Condition	Trouble Area
B1429/29	An open or short in the air duct temperature sensor RH*1 or LH*2 circuit.	• Air duct temperature sensor RH*1 • Air duct temperature sensor LH*2 • Harness or connector (air duct temperature sensor RH)*1 • Harness or connector (air duct temperature sensor LH)*2 • Air conditioning amplifier assembly


HINT:

*1: for LHD

*2: for RHD

WIRING DIAGRAM

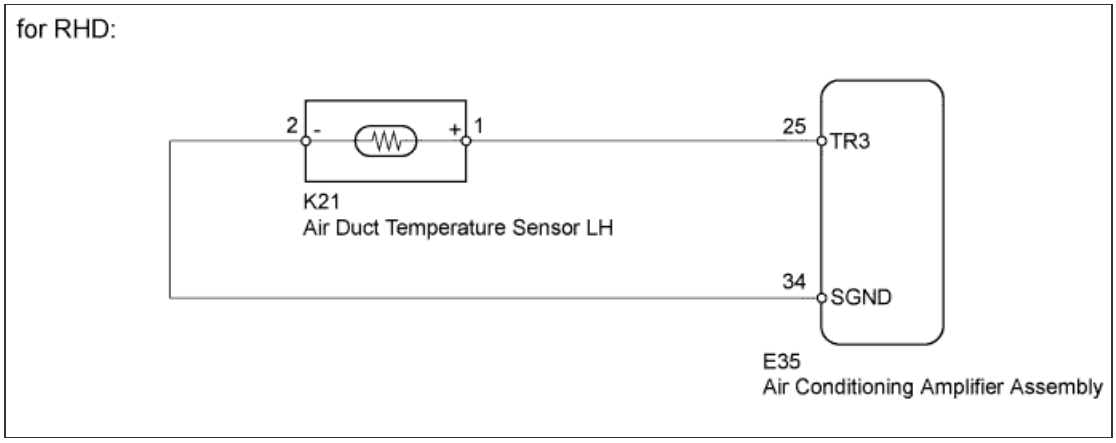

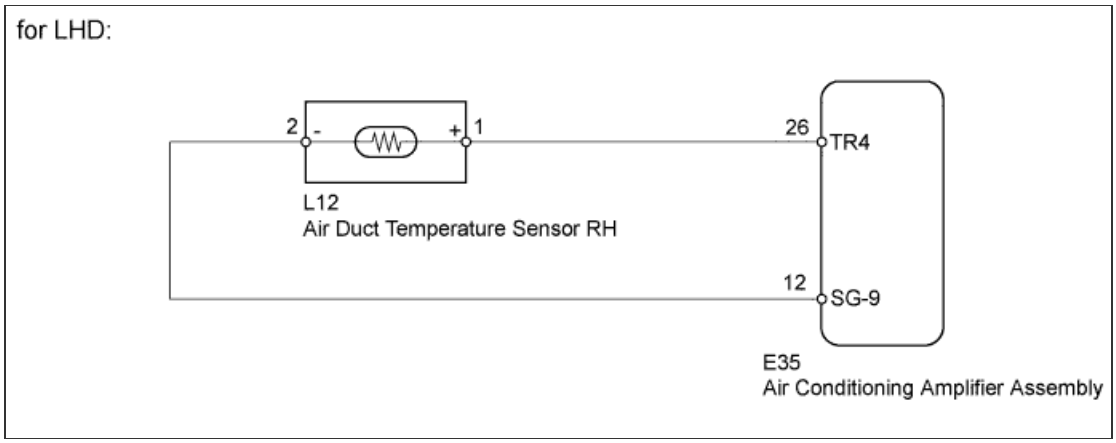

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR DUCT TEMPERATURE SENSOR)

a. Use the Data List to check if the air duct temperature sensor RH*1 or LH*2 (for front passenger side) is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note

Foot Duct Sensor (Rear P)	Min.: -12.7°C (9.14°F) Max.: 76.55°C (169.79°F)	Actual air duct temperature sensor (for passenger side) displayed	Open in the circuit: -12.7°C (9.14°F) Short in the circuit: 76.55°C (169.79°F)

HINT:

*1: for LHD

*2: for RHD

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR DUCT TEMPERATURE SENSOR

a. for LHD

i. Remove the air duct temperature sensor RH (Click here).

b. for RHD

i. Remove the air duct temperature sensor LH (Click here).

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	at 10°C (50°F)	9.4 to 10.5 kΩ
	at 15°C (59°F)	7.5 to 8.3 kΩ
	at 20°C (68°F)	6.0 to 6.5 kΩ
	at 25°C (77°F)	4.5 to 5.2 kΩ
	at 30°C (86°F)	3.8 to 4.2 kΩ
	at 35°C (95°F)	3.1 to 3.4 kΩ
	at 40°C (104°F)	2.5 to 2.8 kΩ
	at 45°C (113°F)	2.0 to 2.3 kΩ
	at 50°C (122°F)	1.6 to 2.0 kΩ
	at 55°C (131°F)	1.3 to 1.6 kΩ
	at 60°C (140°F)	1.1 to 1.4 kΩ

NOTICE:


- **Touching the sensor even slightly may change the resistance value. Hold the connector of the sensor.**
- **When measuring the resistance, the sensor temperature must be the same as the ambient temperature.**


HINT:

As the temperature increases, the resistance decreases (see the graph).

If the resistance value is not as specified, replace the sensor.

Component without harness connected:
(Air Duct Temperature Sensor)

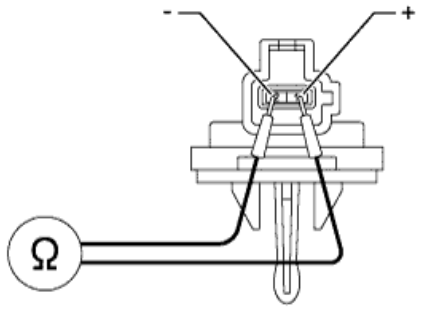

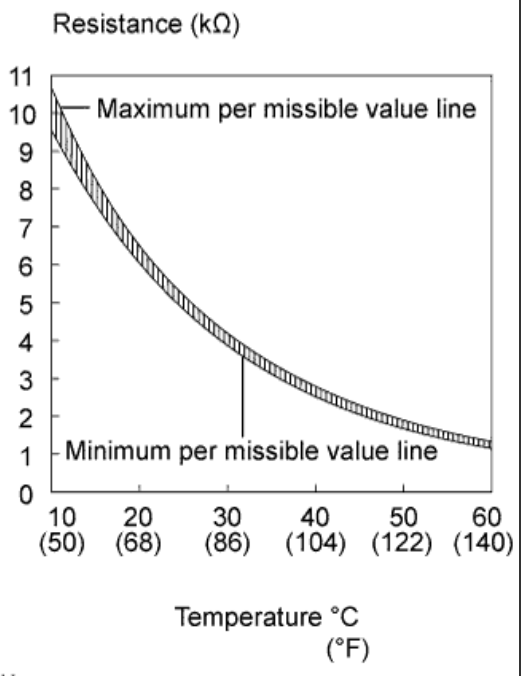

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → REPLACE AIR DUCT TEMPERATURE SENSOR RH (Click here)

C → REPLACE AIR DUCT TEMPERATURE SENSOR LH (Click here)

A

3.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - AIR DUCT TEMPERATURE SENSOR)

a. for LHD

i. Disconnect the L12 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-26 (TR4) - L12-1 (+)	Always	Below 1 Ω
E35-12 (SG-9) - L12-2 (-)		
E35-26 (TR4) - Body ground	Always	10 kΩ or higher
E35-12 (SG-9) - Body ground		

Front view of wire harness connector:
(to Air Duct Temperature Sensor RH)

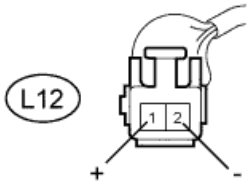

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

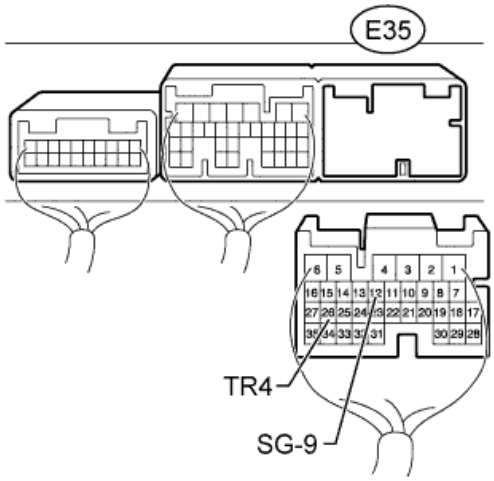

b. for RHD

i. Disconnect the K21 sensor connector.


ii. Disconnect the E35 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E35-25 (TR3) - K21-1 (+)	Always	Below 1 Ω
E35-34 (SGND) - K21-2 (-)		
E35-25 (TR3) - Body ground	Always	10 kΩ or higher
E35-34 (SGND) - Body ground		

Front view of wire harness connector:
(to Air Duct Temperature Sensor LH)

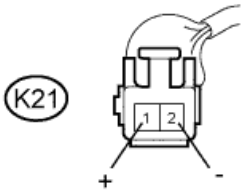

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

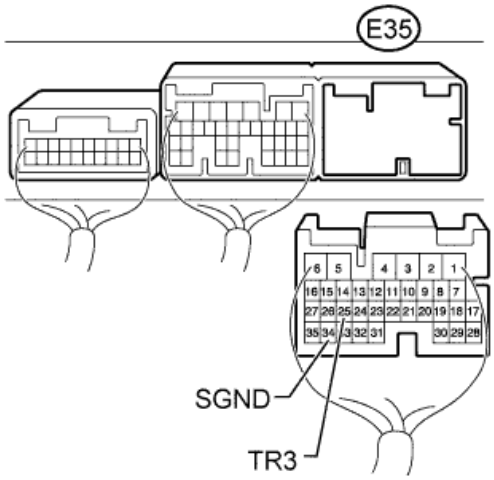

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

DTC B1486/86 Driver Side Air Outlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The air outlet damper servo motor (for rear seat mode) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air outlet damper to any position, which controls the air outlet changes.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1486/86	The air outlet damper position does not change even if the air conditioning amplifier assembly operates the air outlet damper servo motor.	• Air outlet damper servo motor (for rear seat mode) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

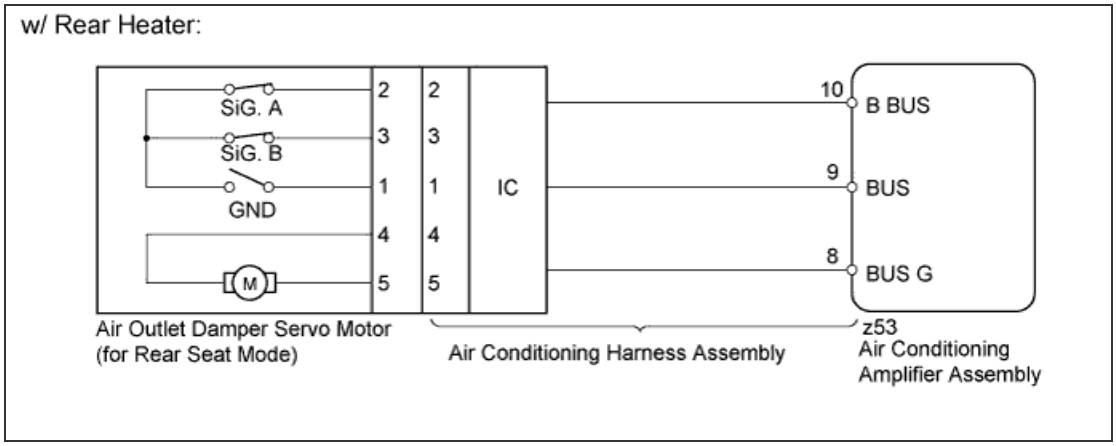

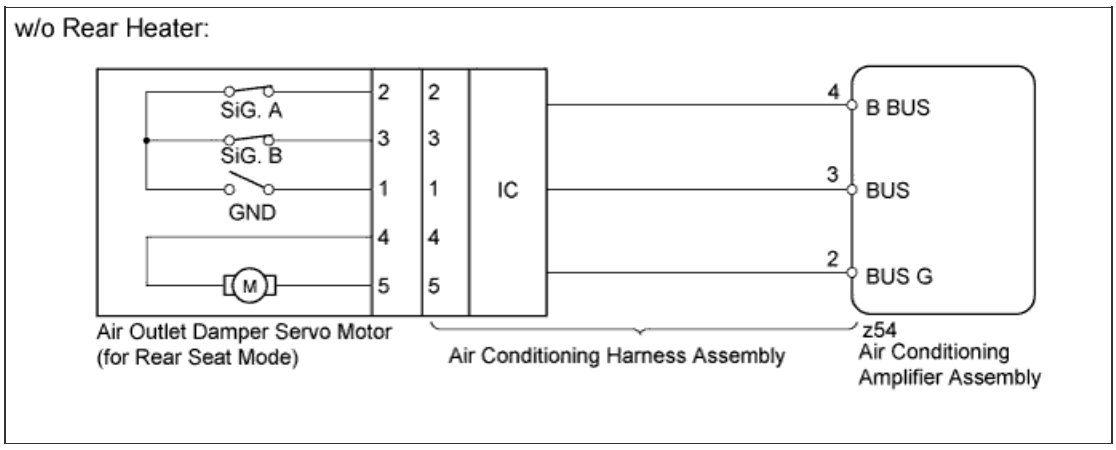

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR OUTLET DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
	Air outlet damper servo motor (for rear seat mode) target pulse /	FACE1: 9 (pulse) FACE2: 9 (pulse) B/L1: 28 (pulse) B/L2: 34 (pulse) FOOT-O: 41 (pulse)	

Air Outlet Servo Pls (F&R D)	Min.: 9, Max.: 79	FOOT-D: 41 (pulse) FOOT-R: 41 (pulse) FOOT-F: 58 (pulse) F/D: 67 (pulse) DEF: 79 (pulse)	-

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK ↓

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR OUTLET DAMPER SERVO MOTOR (OPERATION)

a. Replace the air outlet damper servo motor (for rear seat mode) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT ↓

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1486 is not output.

NG → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

OK ↓

REPLACE AIR OUTLET DAMPER SERVO MOTOR (Click here)

DTC B1441/41 Air Mix Damper Control Servo Motor Circuit (Passenger Side)

for Preparation Click here

DESCRIPTION


The front air mix damper servo motor (for front passenger side) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the front air mix damper (for front passenger side) to any position. As a result, the amount of air that has passed through the evaporator and is passing through the heater core is adjusted, and the temperature of the air blowing toward the front passenger side is controlled.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1441/41	The air mix damper position does not change even if the air conditioning amplifier assembly operates the air mix damper servo motor.	• Air mix damper servo motor (for front passenger side) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

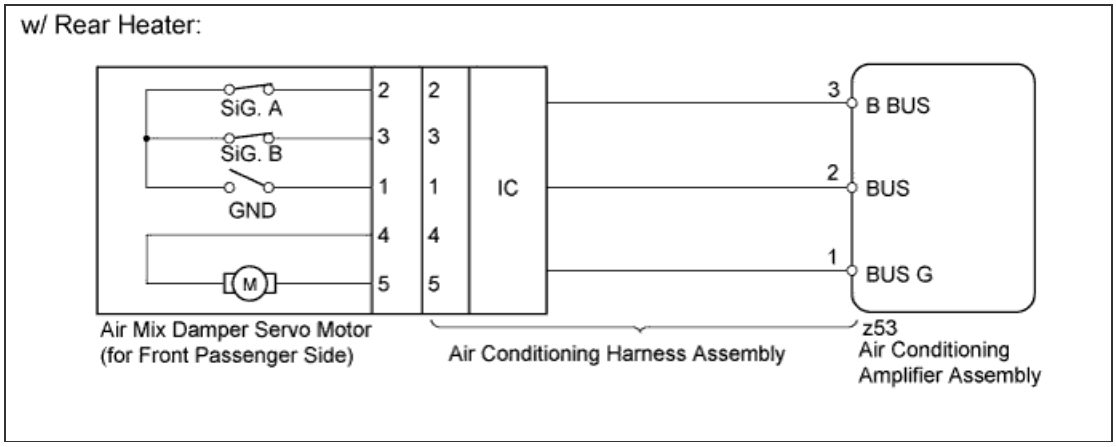

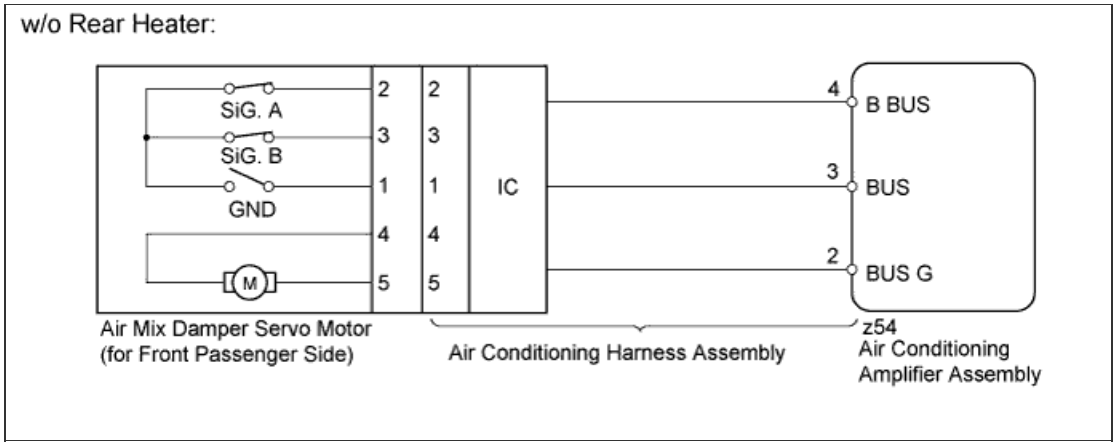

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR MIX DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
		for LHD • MAX COOL: 8 (pulse)	

Air Mix Servo Targ Pulse (P)	Air mix damper servo motor (for front passenger side) target pulse / Min.: 8, Max.: 90 (for LHD) Min.: 8, Max.: 90 (for RHD)	for RHD • MAX HOT: 90 (pulse) • MAX COOL: 90 (pulse) • MAX HOT: 8 (pulse)	-

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR MIX DAMPER SERVO MOTOR (OPERATION)

a. for LHD

i. Replace the air mix damper servo motor (for front passenger side) (Click here).

b. for RHD

i. Replace the air mix damper servo motor (for front passenger side) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT →

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1441 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE AIR MIX DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A →

REPLACE AIR MIX DAMPER SERVO MOTOR (Click here)

DTC B1486/86 Driver Side Air Outlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The air outlet damper servo motor (for rear seat mode) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air outlet damper to any position, which controls the air outlet changes.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1486/86	The air outlet damper position does not change even if the air conditioning amplifier assembly operates the air outlet damper servo motor.	• Air outlet damper servo motor (for rear seat mode) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

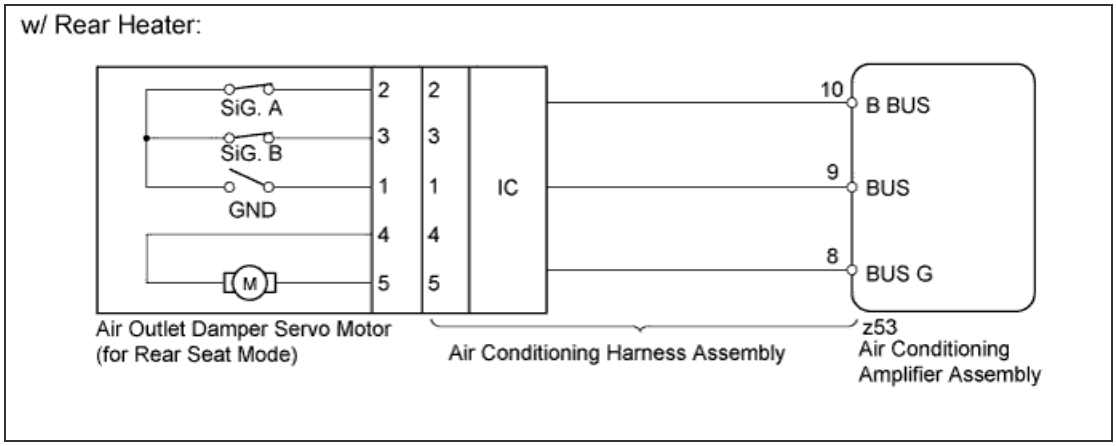

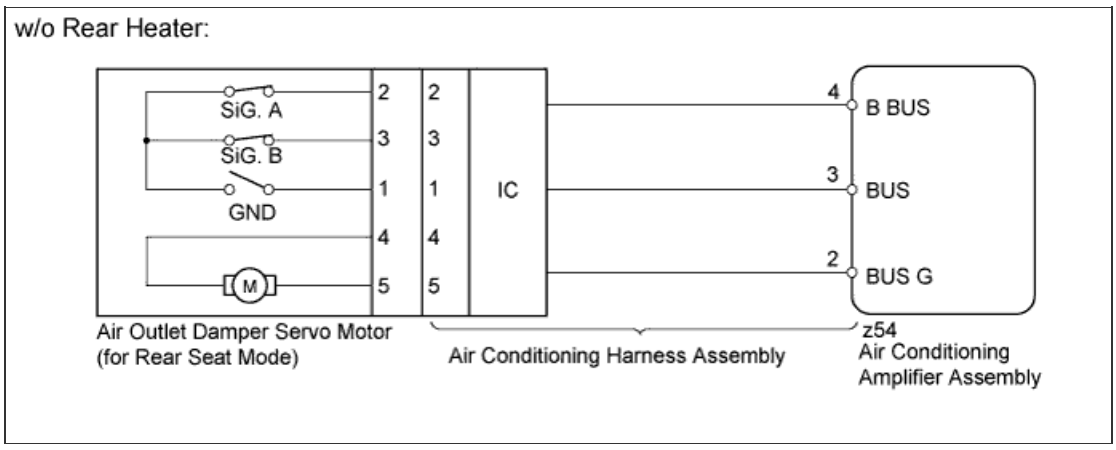

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR OUTLET DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
	Air outlet damper servo motor (for rear seat mode) target pulse /	FACE1: 9 (pulse) FACE2: 9 (pulse) B/L1: 28 (pulse) B/L2: 34 (pulse) FOOT-O: 41 (pulse)	

Air Outlet Servo Pls (F&R D)	Min.: 9, Max.: 79	FOOT-D: 41 (pulse) FOOT-R: 41 (pulse) FOOT-F: 58 (pulse) F/D: 67 (pulse) DEF: 79 (pulse)	-

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK ↓

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR OUTLET DAMPER SERVO MOTOR (OPERATION)

a. Replace the air outlet damper servo motor (for rear seat mode) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT ↓

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1486 is not output.

NG → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

OK ↓

REPLACE AIR OUTLET DAMPER SERVO MOTOR (Click here)

DTC B1441/41 Air Mix Damper Control Servo Motor Circuit (Passenger Side)

for Preparation Click here

DESCRIPTION


The front air mix damper servo motor (for front passenger side) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the front air mix damper (for front passenger side) to any position. As a result, the amount of air that has passed through the evaporator and is passing through the heater core is adjusted, and the temperature of the air blowing toward the front passenger side is controlled.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1441/41	The air mix damper position does not change even if the air conditioning amplifier assembly operates the air mix damper servo motor.	• Air mix damper servo motor (for front passenger side) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

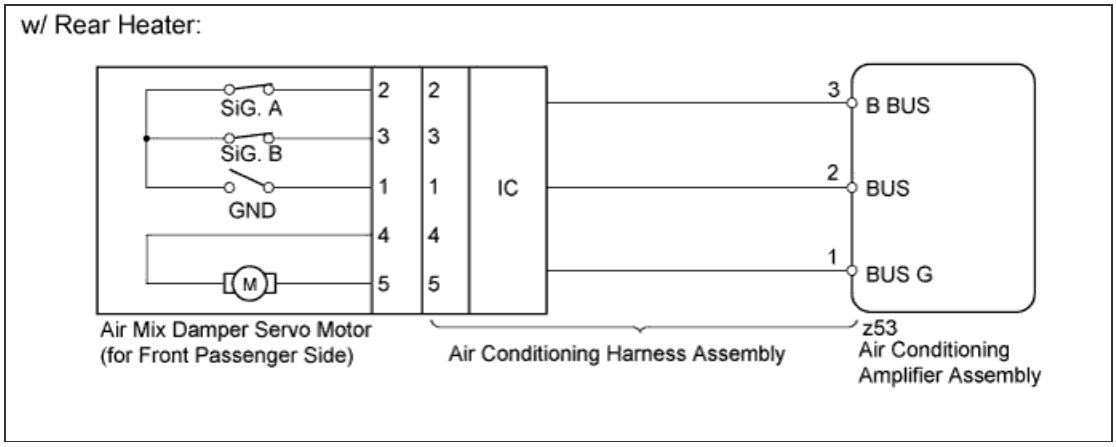

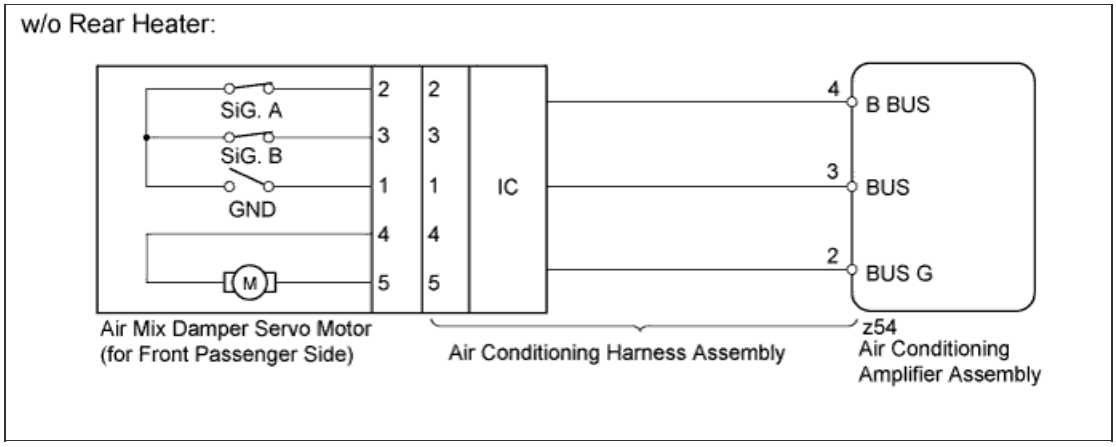

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR MIX DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
		for LHD • MAX COOL: 8 (pulse)	

Air Mix Servo Targ Pulse (P)	Air mix damper servo motor (for front passenger side) target pulse / Min.: 8, Max.: 90 (for LHD) Min.: 8, Max.: 90 (for RHD)	for RHD • MAX HOT: 90 (pulse) • MAX COOL: 90 (pulse) • MAX HOT: 8 (pulse)	-

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR MIX DAMPER SERVO MOTOR (OPERATION)

a. for LHD

i. Replace the air mix damper servo motor (for front passenger side) (Click here).

b. for RHD

i. Replace the air mix damper servo motor (for front passenger side) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT →

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1441 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE AIR MIX DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A →

REPLACE AIR MIX DAMPER SERVO MOTOR (Click here)

DTC B1488/88 Rear Air Mix Damper Control Servo Motor Circuit on Front Passenger Side

for Preparation Click here

DESCRIPTION

The rear air mix damper servo motor RH*1 or LH*2 sends pulse signals to indicate the damper position to the air conditioning amplifier assembly. The air conditioning amplifier assembly activates the motor (normal or reverse) based on these signals to move the rear air mix damper to the appropriate position. This adjusts the amount of air passing through the heater core after passing the evaporator and controls the temperature of the blown air.

HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.


DTC Code	DTC Detection Condition	Trouble Area
B1488/88	The rear air mix damper position does not change even if the air conditioning amplifier assembly operates the air mix damper servo motor.	• Rear air mix damper servo motor RH*1 • Rear air mix damper servo motor LH*2 • No. 2 air conditioning harness assembly • Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly • Air conditioning amplifier assembly

HINT:

*1: for LHD

*2: for RHD

WIRING DIAGRAM

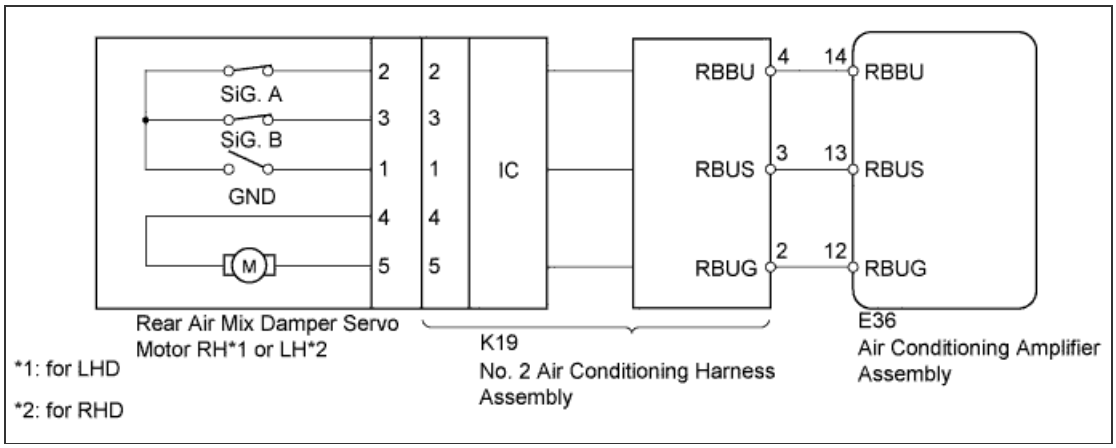

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (REAR AIR MIX DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
A/M Servo Targ Pulse (Rear P)	Rear air mix damper servo motor (for front passenger side) target pulse / Min.: 8, Max.: 53 (for LHD) Min.: 9, Max.: 54 (for RHD)	for LHD • MAX COOL: 53 (pulse) • MAX HOT: 8 (pulse) for RHD • MAX COOL: 9 (pulse)	-

		• MAX HOT: 54 (pulse)	

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK HARNESS AND CONNECTOR (NO. 2 AIR CONDITIONING HARNESS - AIR CONDITIONING AMPLIFIER)

a. Disconnect the K19 No. 2 air conditioning harness connector.


b. Disconnect the E36 amplifier connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K19-2 (RBUG) - E36-12 (RBUG)	Always	Below 1 Ω
K19-3 (RBUS) - E36-13 (RBUS)		
K19-4 (RBBU) - E36-14 (RBBU)		
E36-12 (RBUG) - Body ground	Always	10 kΩ or higher
E36-13 (RBUS) - Body ground		
E36-14 (RBBU) - Body ground		

Front view of wire harness connector:
(to No. 2 Air Conditioning Harness Assembly)

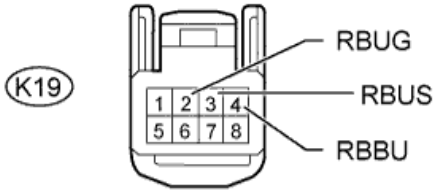

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

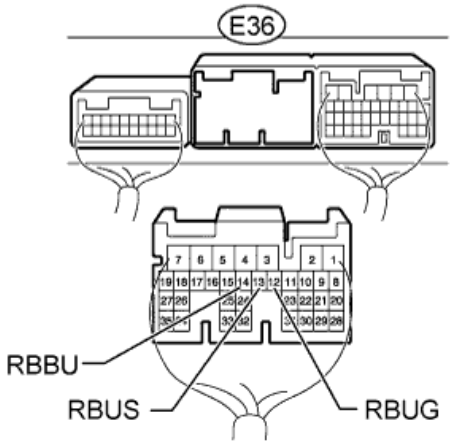

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK REAR AIR MIX DAMPER SERVO MOTOR (OPERATION)

a. Replace the rear air mix damper servo motor (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

4.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1489 is not output.

NG → **REPLACE NO. 2 AIR CONDITIONING HARNESS ASSEMBLY (Click here)**

OK

REPLACE REAR AIR MIX DAMPER SERVO MOTOR (Click here)

DTC B1442/42 Air Inlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The REC/FRS damper servo motor sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air inlet damper to any position, which controls the intake air settings (fresh, fresh/recirculation and recirculation).


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1442/42	The air inlet damper position does not change even if the air conditioning amplifier assembly operates the REC/FRS damper servo motor.	• REC/FRS damper servo motor • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

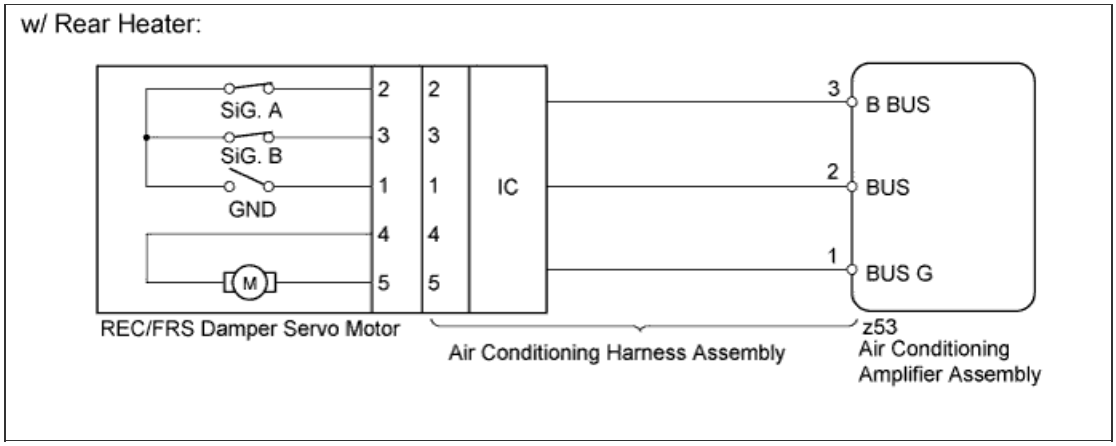

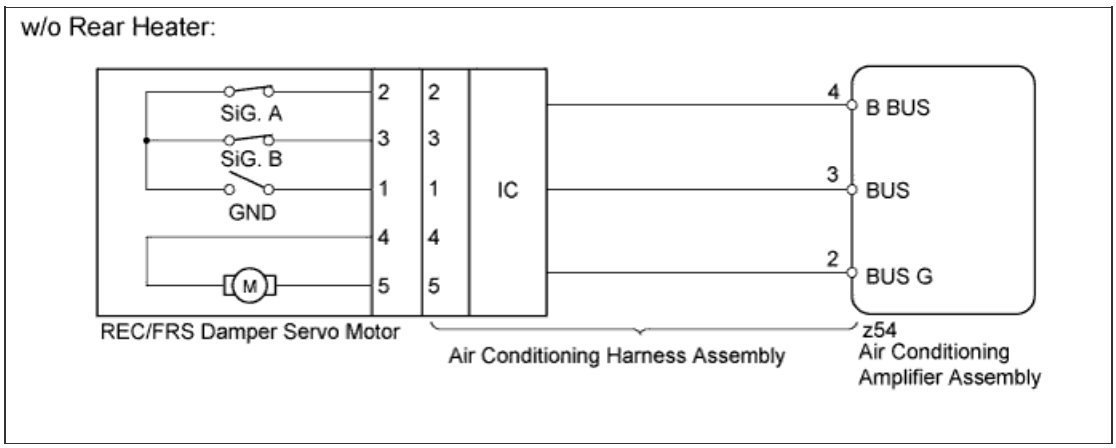

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (REC/FRS DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Air Inlet Damper Targ Pulse	REC/FRS damper servo motor target pulse / Min.: 9, Max.: 37	for LHD Recirculation: 37 (pulse) Fresh: 9 (pulse) for RHD Recirculation: 9 (pulse) Fresh: 37 (pulse)	-

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK REC/FRS DAMPER SERVO MOTOR (OPERATION)

a. for LHD:

i. Replace the REC/FRS damper servo motor (Click here).

b. for RHD

i. Replace the REC/FRS damper servo motor (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1442 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE REC/FRS DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A

REPLACE REC/FRS DAMPER SERVO MOTOR (Click here)

DTC B1488/88 Rear Air Mix Damper Control Servo Motor Circuit on Front Passenger Side

for Preparation Click here

DESCRIPTION

The rear air mix damper servo motor RH*1 or LH*2 sends pulse signals to indicate the damper position to the air conditioning amplifier assembly. The air conditioning amplifier assembly activates the motor (normal or reverse) based on these signals to move the rear air mix damper to the appropriate position. This adjusts the amount of air passing through the heater core after passing the evaporator and controls the temperature of the blown air.

HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.


DTC Code	DTC Detection Condition	Trouble Area
B1488/88	The rear air mix damper position does not change even if the air conditioning amplifier assembly operates the air mix damper servo motor.	• Rear air mix damper servo motor RH*1 • Rear air mix damper servo motor LH*2 • No. 2 air conditioning harness assembly • Harness or connector between No. 2 air conditioning harness assembly and air conditioning amplifier assembly • Air conditioning amplifier assembly

HINT:

*1: for LHD

*2: for RHD

WIRING DIAGRAM

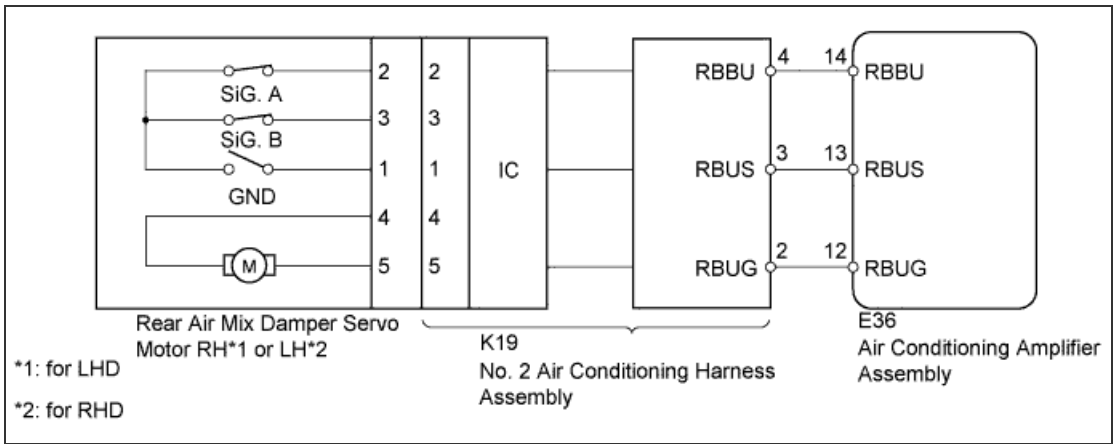

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (REAR AIR MIX DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
A/M Servo Targ Pulse (Rear P)	Rear air mix damper servo motor (for front passenger side) target pulse / Min.: 8, Max.: 53 (for LHD) Min.: 9, Max.: 54 (for RHD)	for LHD • MAX COOL: 53 (pulse) • MAX HOT: 8 (pulse) for RHD • MAX COOL: 9 (pulse)	-

		• MAX HOT: 54 (pulse)	

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK HARNESS AND CONNECTOR (NO. 2 AIR CONDITIONING HARNESS - AIR CONDITIONING AMPLIFIER)

a. Disconnect the K19 No. 2 air conditioning harness connector.


b. Disconnect the E36 amplifier connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
K19-2 (RBUG) - E36-12 (RBUG)	Always	Below 1 Ω
K19-3 (RBUS) - E36-13 (RBUS)		
K19-4 (RBBU) - E36-14 (RBBU)		
E36-12 (RBUG) - Body ground	Always	10 kΩ or higher
E36-13 (RBUS) - Body ground		
E36-14 (RBBU) - Body ground		

Front view of wire harness connector:
(to No. 2 Air Conditioning Harness Assembly)

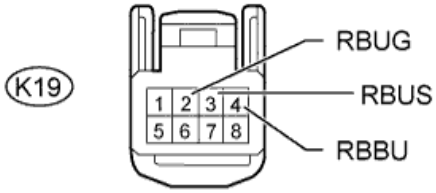

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

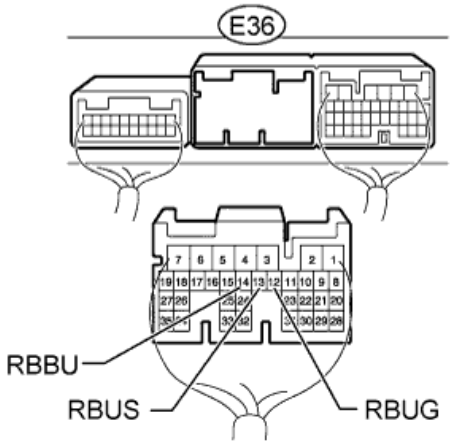

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK REAR AIR MIX DAMPER SERVO MOTOR (OPERATION)

a. Replace the rear air mix damper servo motor (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

4.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1489 is not output.

NG → **REPLACE NO. 2 AIR CONDITIONING HARNESS ASSEMBLY (Click here)**

OK

REPLACE REAR AIR MIX DAMPER SERVO MOTOR (Click here)

DTC B1442/42 Air Inlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The REC/FRS damper servo motor sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air inlet damper to any position, which controls the intake air settings (fresh, fresh/recirculation and recirculation).


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1442/42	The air inlet damper position does not change even if the air conditioning amplifier assembly operates the REC/FRS damper servo motor.	• REC/FRS damper servo motor • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

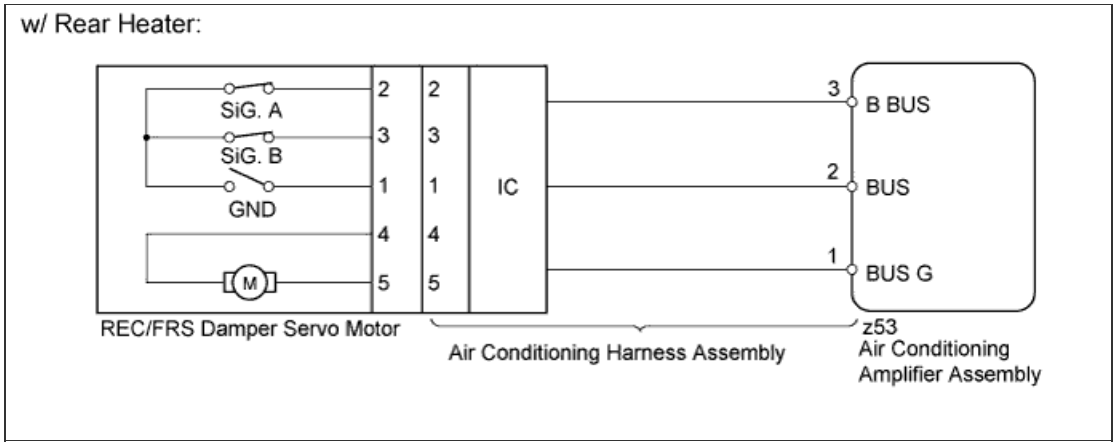

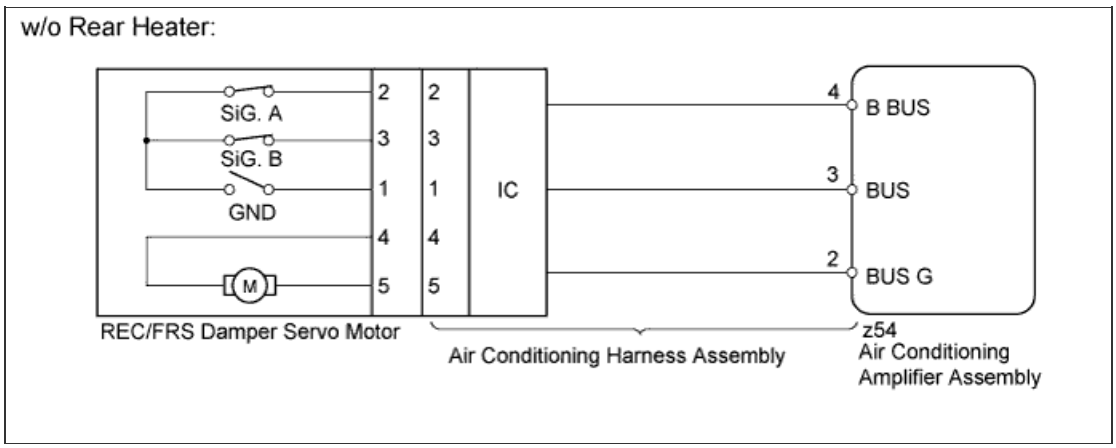

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (REC/FRS DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
Air Inlet Damper Targ Pulse	REC/FRS damper servo motor target pulse / Min.: 9, Max.: 37	for LHD Recirculation: 37 (pulse) Fresh: 9 (pulse) for RHD Recirculation: 9 (pulse) Fresh: 37 (pulse)	-

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK REC/FRS DAMPER SERVO MOTOR (OPERATION)

a. for LHD:

i. Replace the REC/FRS damper servo motor (Click here).

b. for RHD

i. Replace the REC/FRS damper servo motor (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1442 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE REC/FRS DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A

REPLACE REC/FRS DAMPER SERVO MOTOR (Click here)

DTC B1497/97 BUS IC Communication Malfunction


for Preparation Click here

DESCRIPTION


The air conditioning harness assembly connects the air conditioning amplifier assembly and each servo motor. The air conditioning amplifier assembly supplies power and sends operation instructions to each servo motor through the air conditioning harness assembly. Each servo motor sends the damper position information to the air conditioning amplifier assembly.

DTC Code	DTC Detection Condition	Trouble Area
B1497/97	An open or error in the communication line.	• Air conditioning harness assembly • Air conditioning amplifier assembly


WIRING DIAGRAM

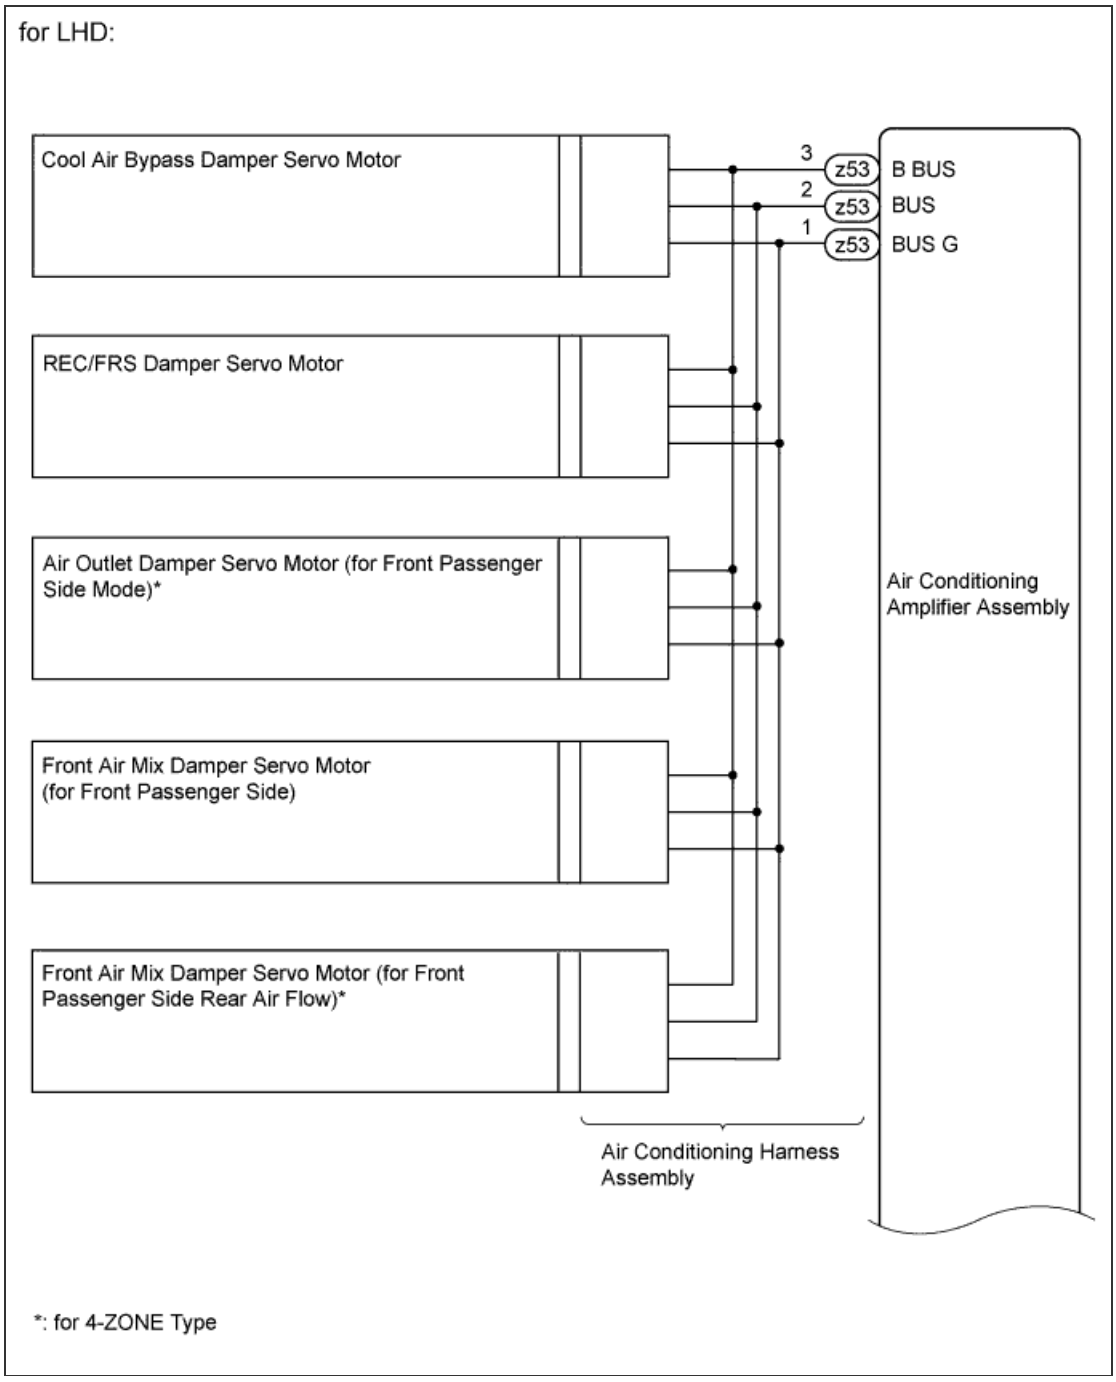


for LHD:

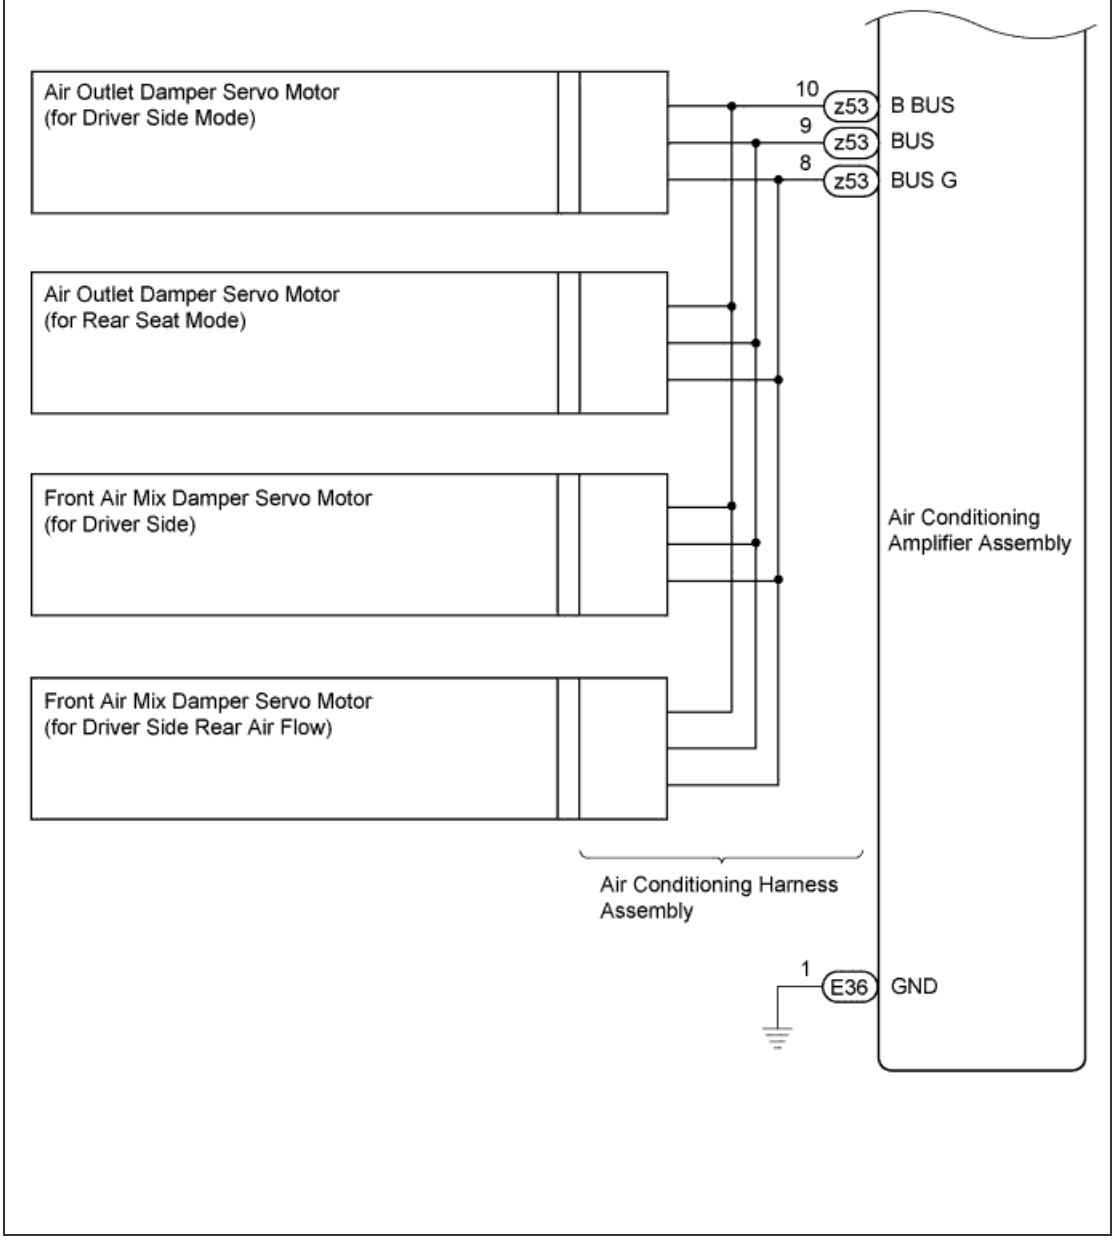
Air Outlet Damper Servo Motor
(for Driver Side Mode)
Air Outlet Damper Servo Motor
(for Rear Seat Mode)
Front Air Mix Damper Servo Motor
(for Driver Side)
Front Air Mix Damper Servo Motor
(for Driver Side Rear Air Flow)
10
z53
B BUS
9
z53
BUS
8
z53
BUS G
Air Conditioning
Amplifier Assembly
Air Conditioning Harness
Assembly
1
E36
GND


for 2-ZONE (LHD, w/o Rear Face Duct):

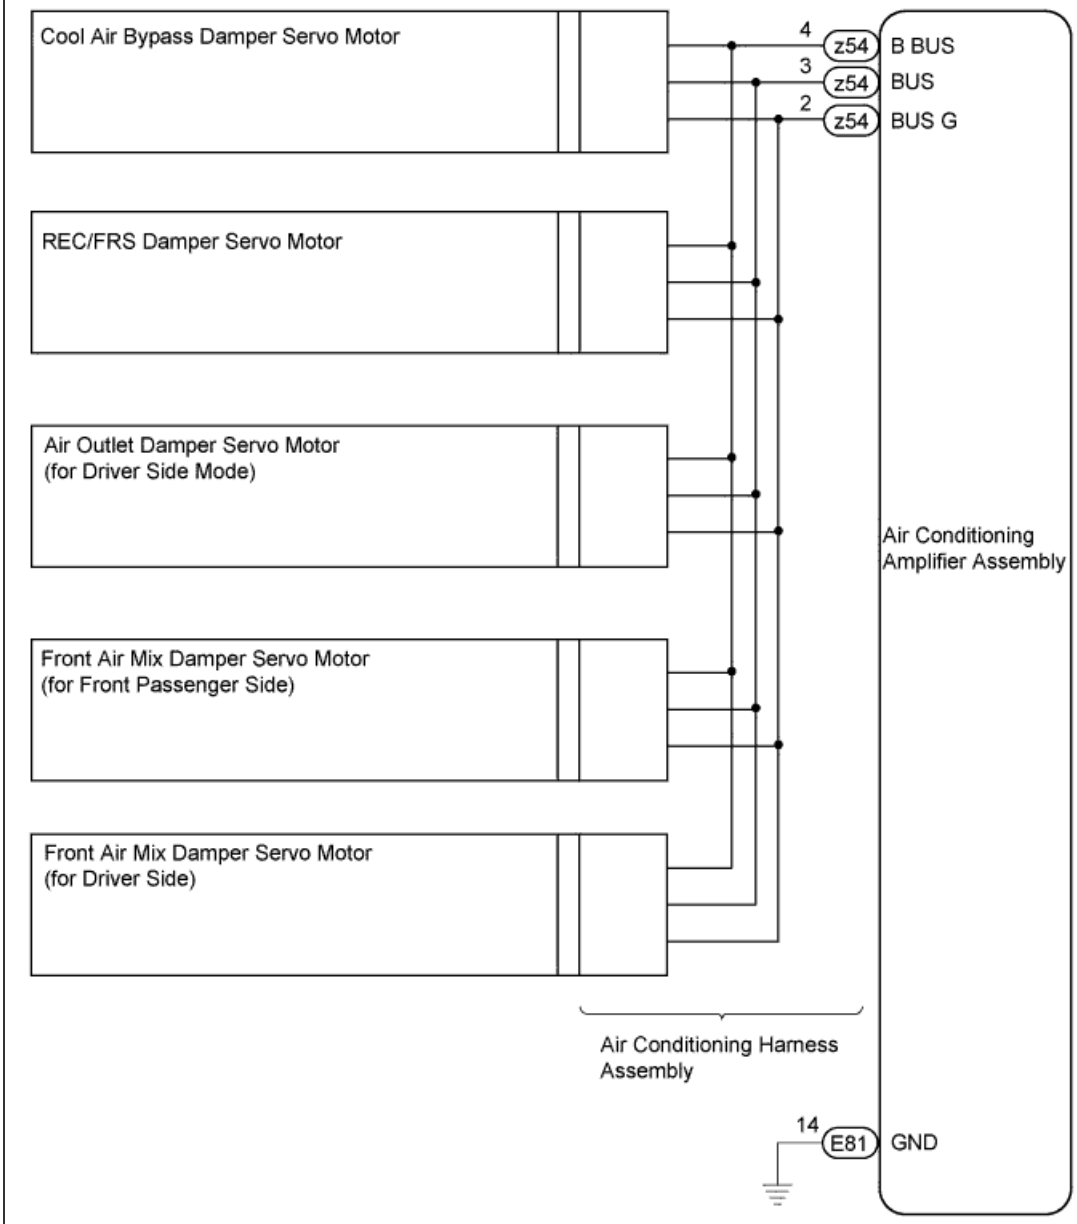

for RHD:

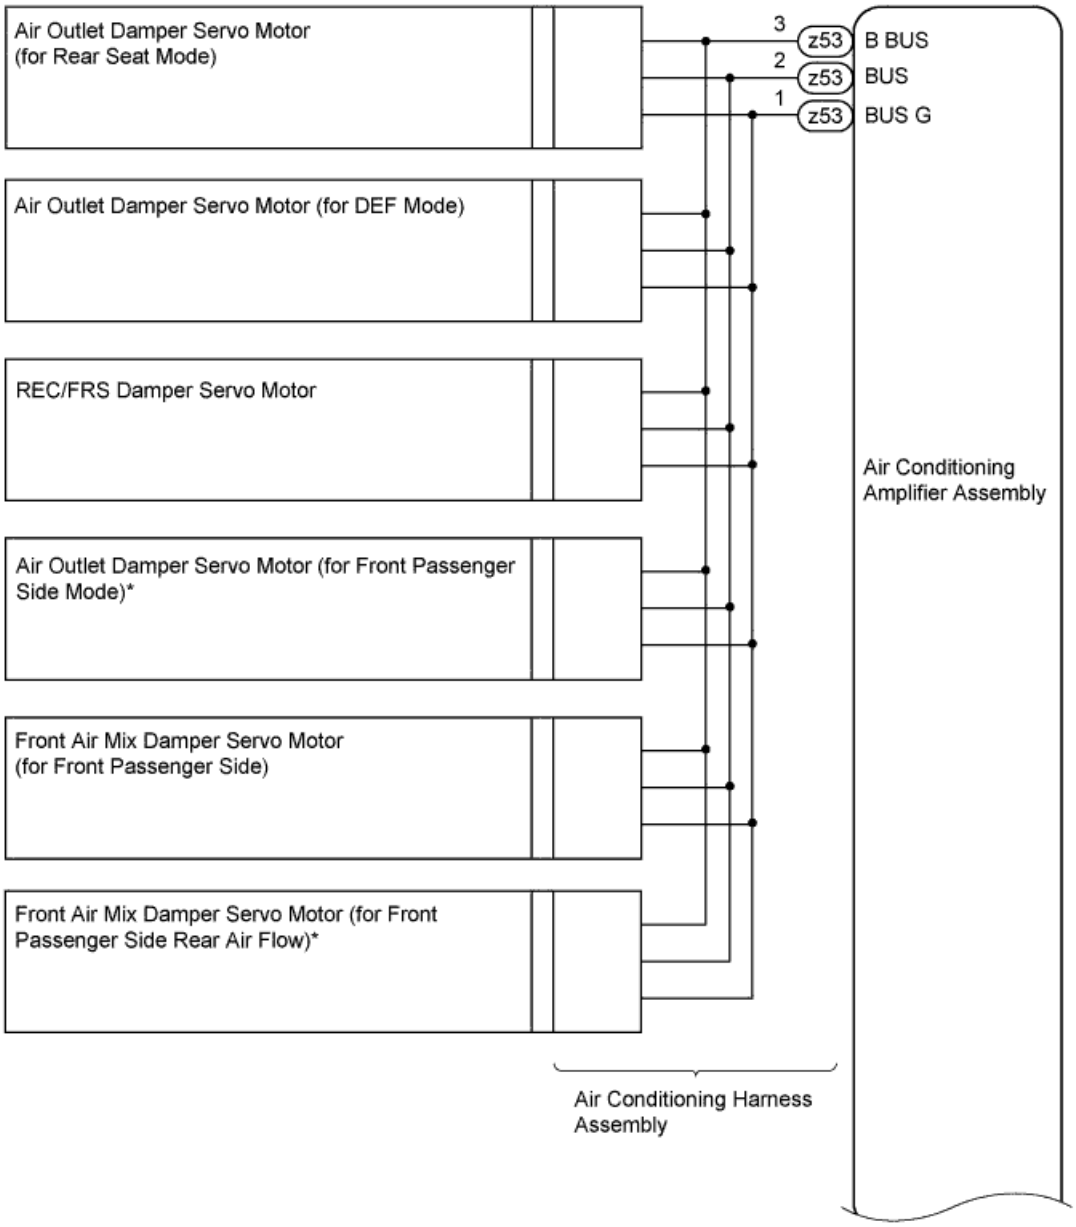

*: for 4-ZONE Type

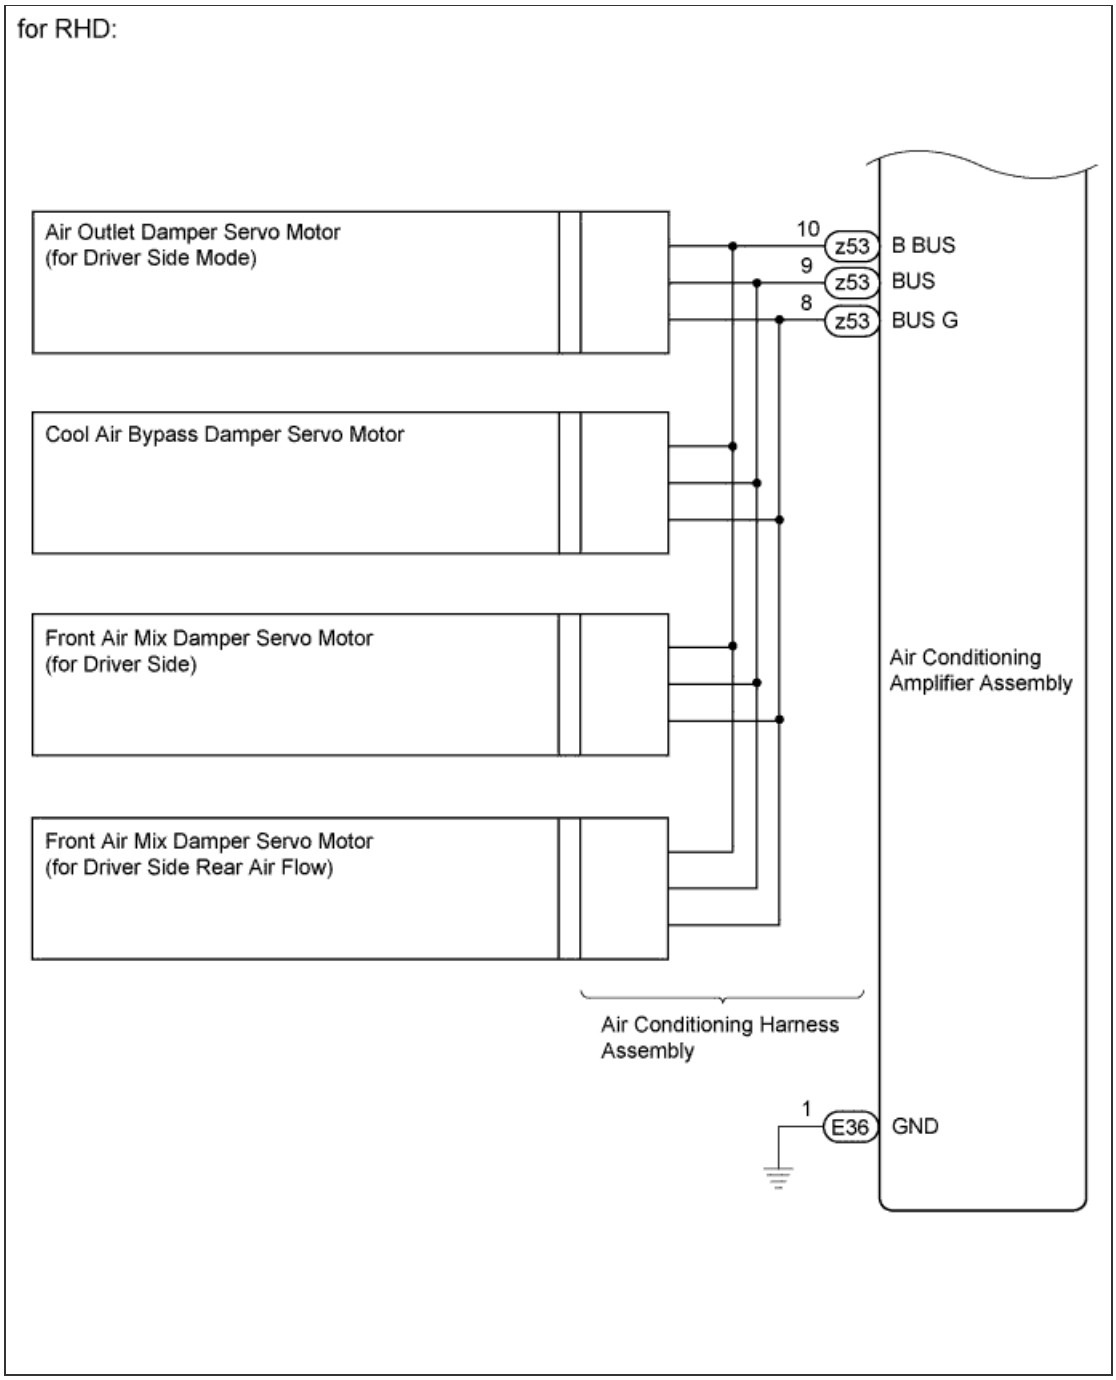

INSPECTION PROCEDURE

1.CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY

a. w/ Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E36-1 (GND) - z53-1 (BUS G)	Always	Below 1 Ω
E36-1 (GND) - z53-8 (BUS G)		
z53-1 (BUS G) - Body ground		
z53-8 (BUS G) - Body ground		

iii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
z53-1 (BUS G) - z53-3 (B BUS)	Always	11 to 14
z53-8 (BUS G) - z53-10 (B BUS)	Always	11 to 14
z53-1 (BUS G) - z53-2 (BUS)	Engine switch on (G)	Pulse generation
z53-8 (BUS G) - z53-9 (BUS)		

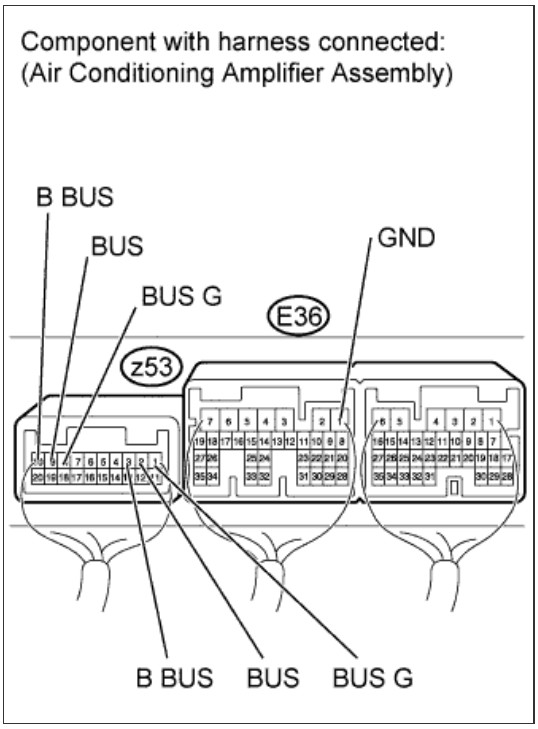


b. w/o Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-14 (GND) - z54-2 (BUS G)	Always	Below 1 Ω
z54-2 (BUS G) - Body ground		

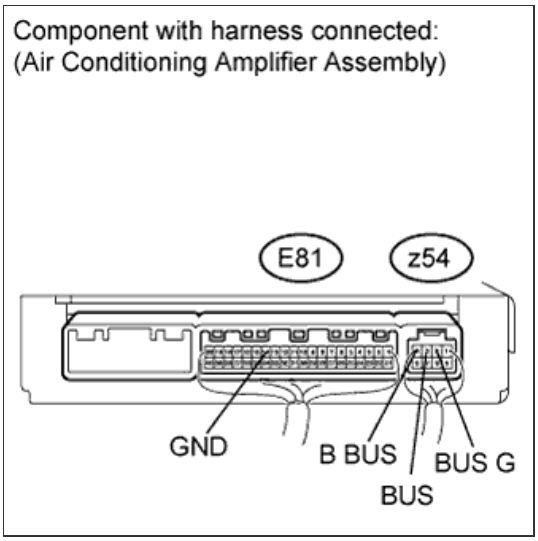

iii. Measure the voltage according to the value(s) in the table below.

Tester Connection	Condition	Specified Condition
z54-2 (BUS G) - z54-4 (B BUS)	Always	11 to 14
z54-2 (BUS G) - z54-3 (BUS)	Engine switch on (G)	Pulse generation

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

C → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

A

REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

DTC B1443/43 Air Outlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The air outlet damper servo motor (for driver side mode) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air outlet damper (for driver side mode) to any position, which controls the air outlet changes.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1443/43	The air outlet damper position does not change even if the air conditioning amplifier assembly operates the air outlet damper servo motor.	• Air outlet damper servo motor (for driver side mode) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

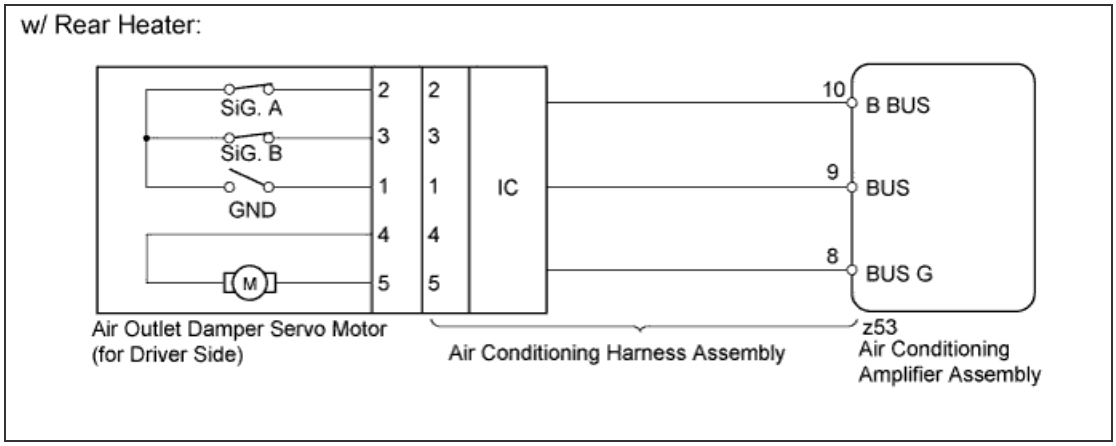

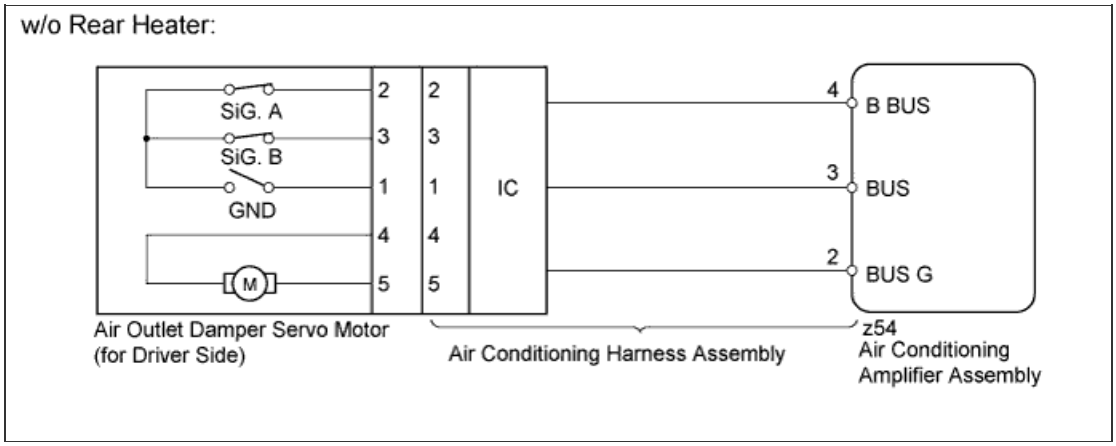

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR OUTLET DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	easurement Item/Range	Normal Condition	Diagnostic Note
A/O Damper FACE Pos(D)	Air outlet damper servo motor (for driver side mode) target pulse /	FACE1: 117 (pulse) FACE2: 109 (pulse) B/L1: 93 (pulse) B/L2: 81 (pulse) FOOT-F: 41 (pulse)	-

	in.: 6, a.: 117	FOOT-R: 41 (pulse) FOOT-D: 52 (pulse) F/D: 18 (pulse) DEF: 6 (pulse)	

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR OUTLET DAMPER SERVO MOTOR (OPERATION)

a. for LHD

i. Replace the air outlet damper servo motor (for driver side mode) (Click here).

b. for RHD

i. Replace the air outlet damper servo motor (for driver side mode) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT →

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1443 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE AIR OUTLET DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A →

REPLACE AIR OUTLET DAMPER SERVO MOTOR (Click here)

DTC B1497/97 BUS IC Communication Malfunction


for Preparation Click here

DESCRIPTION


The air conditioning harness assembly connects the air conditioning amplifier assembly and each servo motor. The air conditioning amplifier assembly supplies power and sends operation instructions to each servo motor through the air conditioning harness assembly. Each servo motor sends the damper position information to the air conditioning amplifier assembly.

DTC Code	DTC Detection Condition	Trouble Area
B1497/97	An open or error in the communication line.	• Air conditioning harness assembly • Air conditioning amplifier assembly


WIRING DIAGRAM

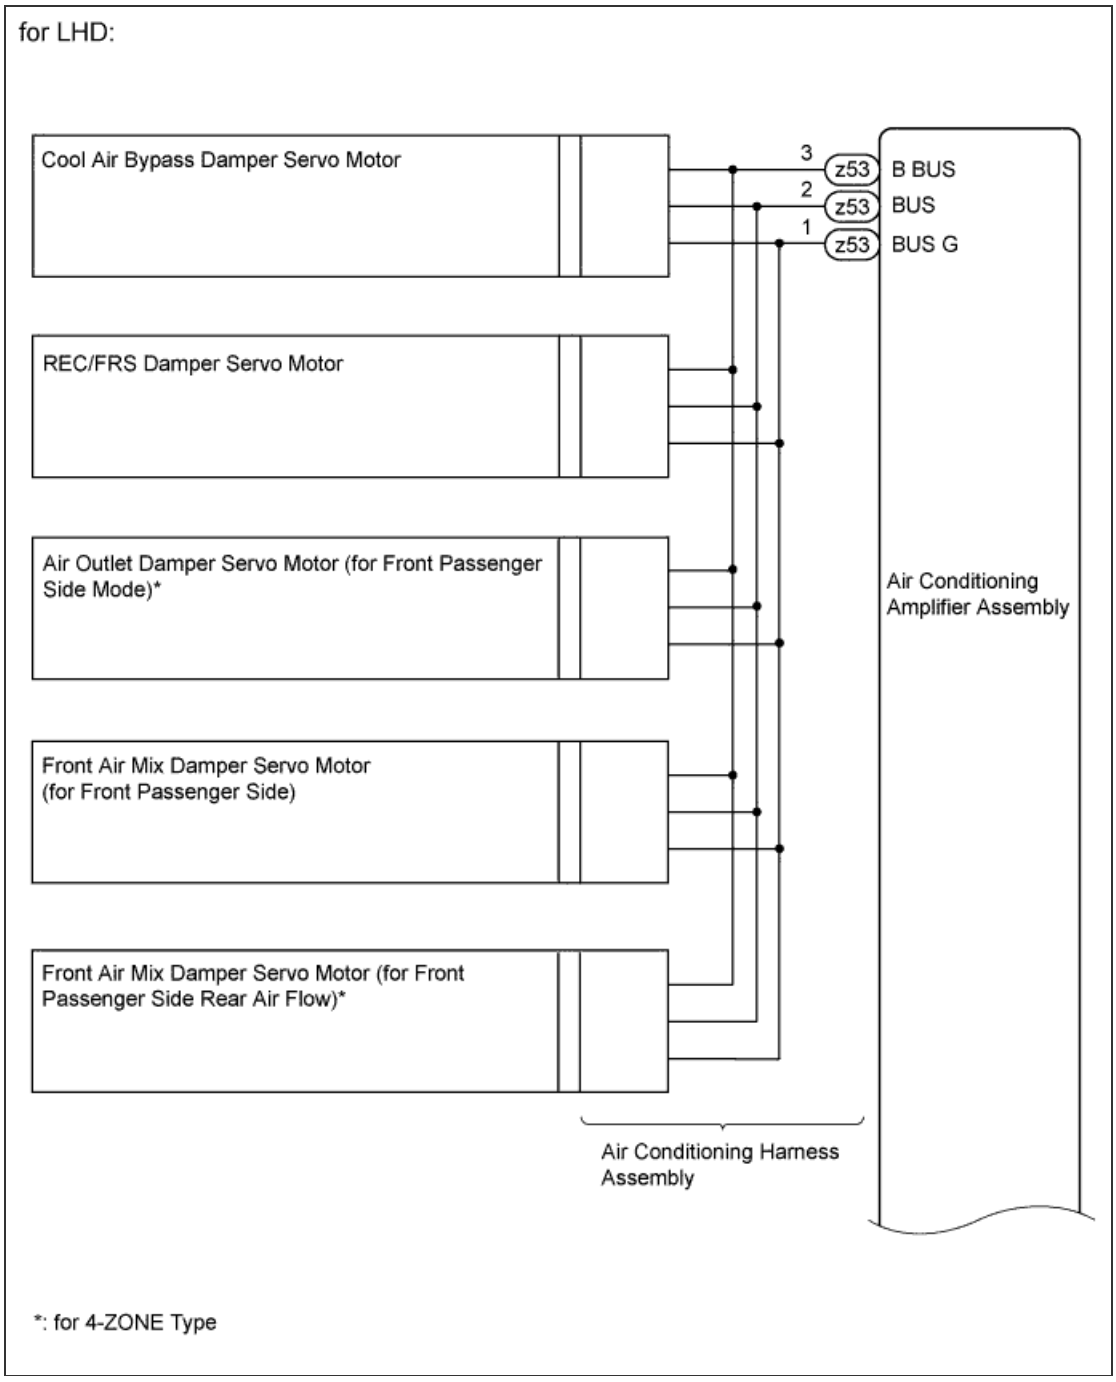


for LHD:

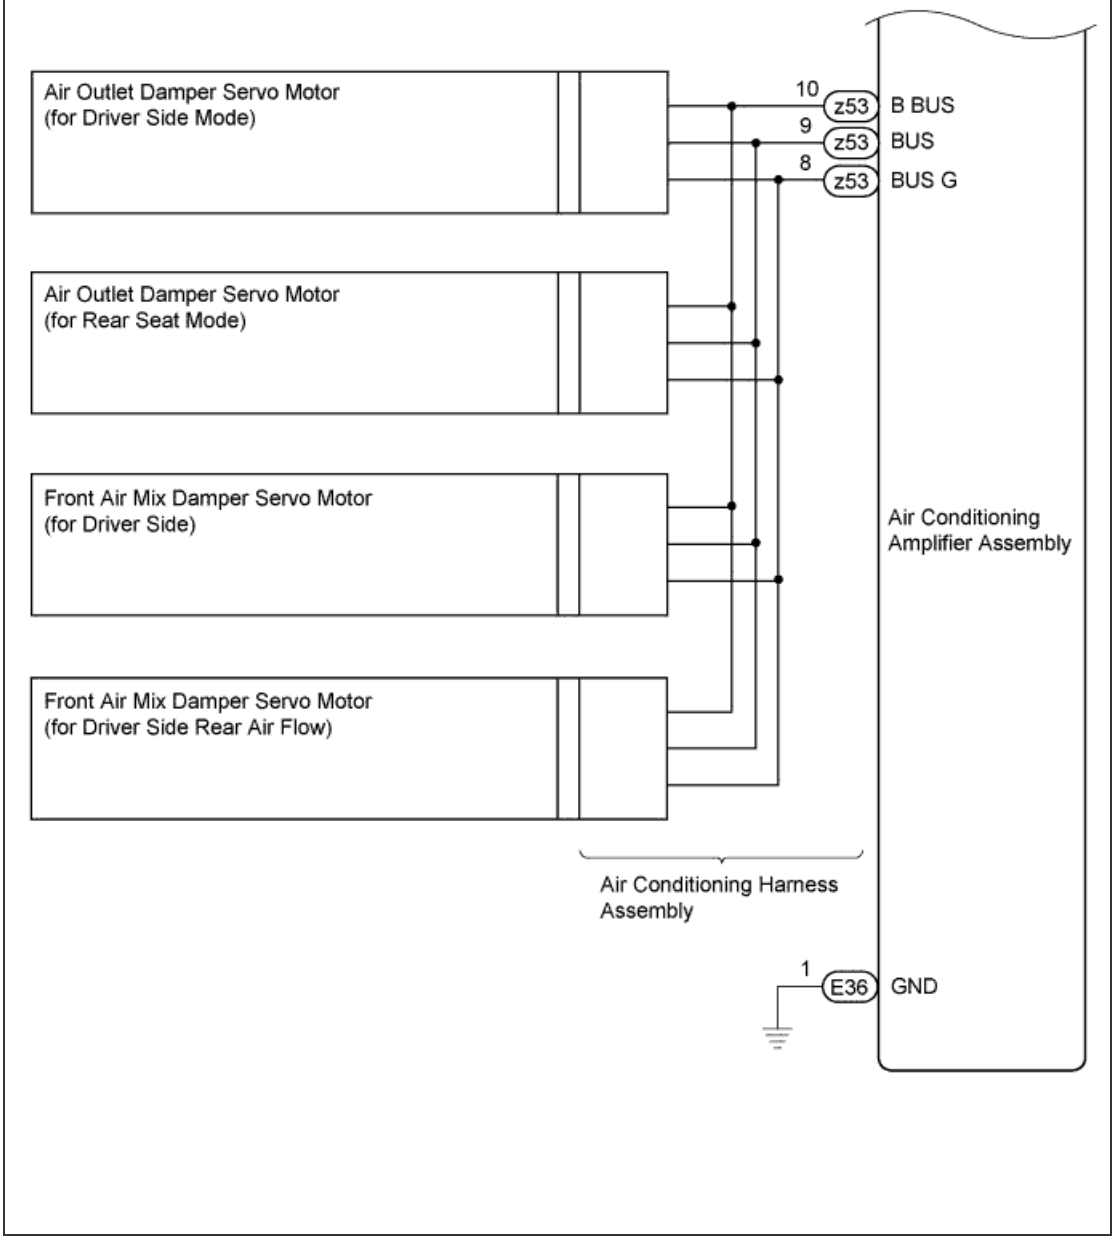
Air Outlet Damper Servo Motor
(for Driver Side Mode)
Air Outlet Damper Servo Motor
(for Rear Seat Mode)
Front Air Mix Damper Servo Motor
(for Driver Side)
Front Air Mix Damper Servo Motor
(for Driver Side Rear Air Flow)
10
z53
B BUS
9
z53
BUS
8
z53
BUS G
Air Conditioning
Amplifier Assembly
Air Conditioning Harness
Assembly
1
E36
GND


for 2-ZONE (LHD, w/o Rear Face Duct):

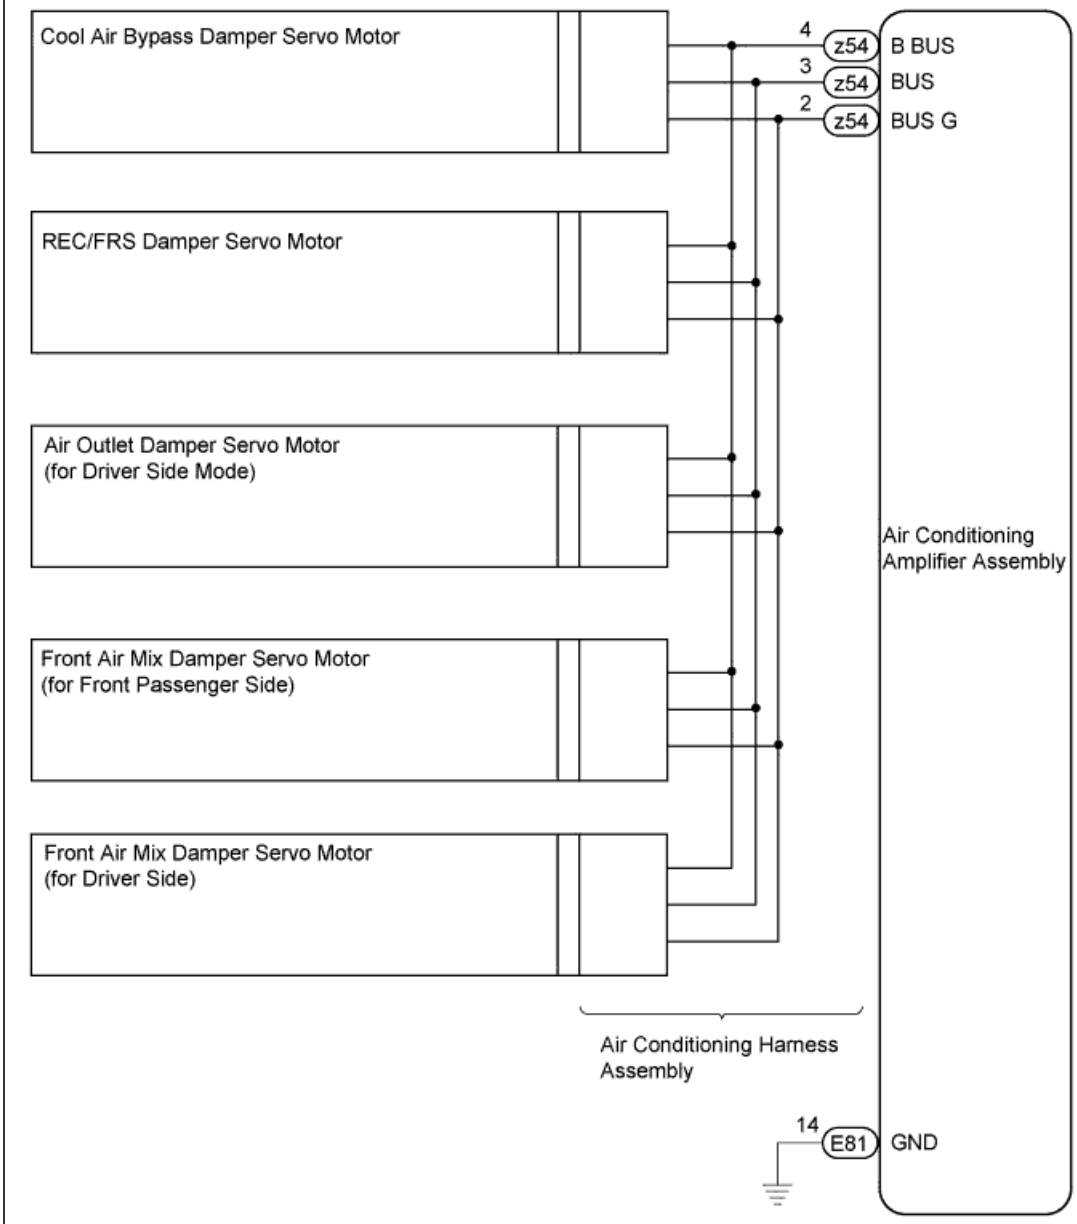

for RHD:

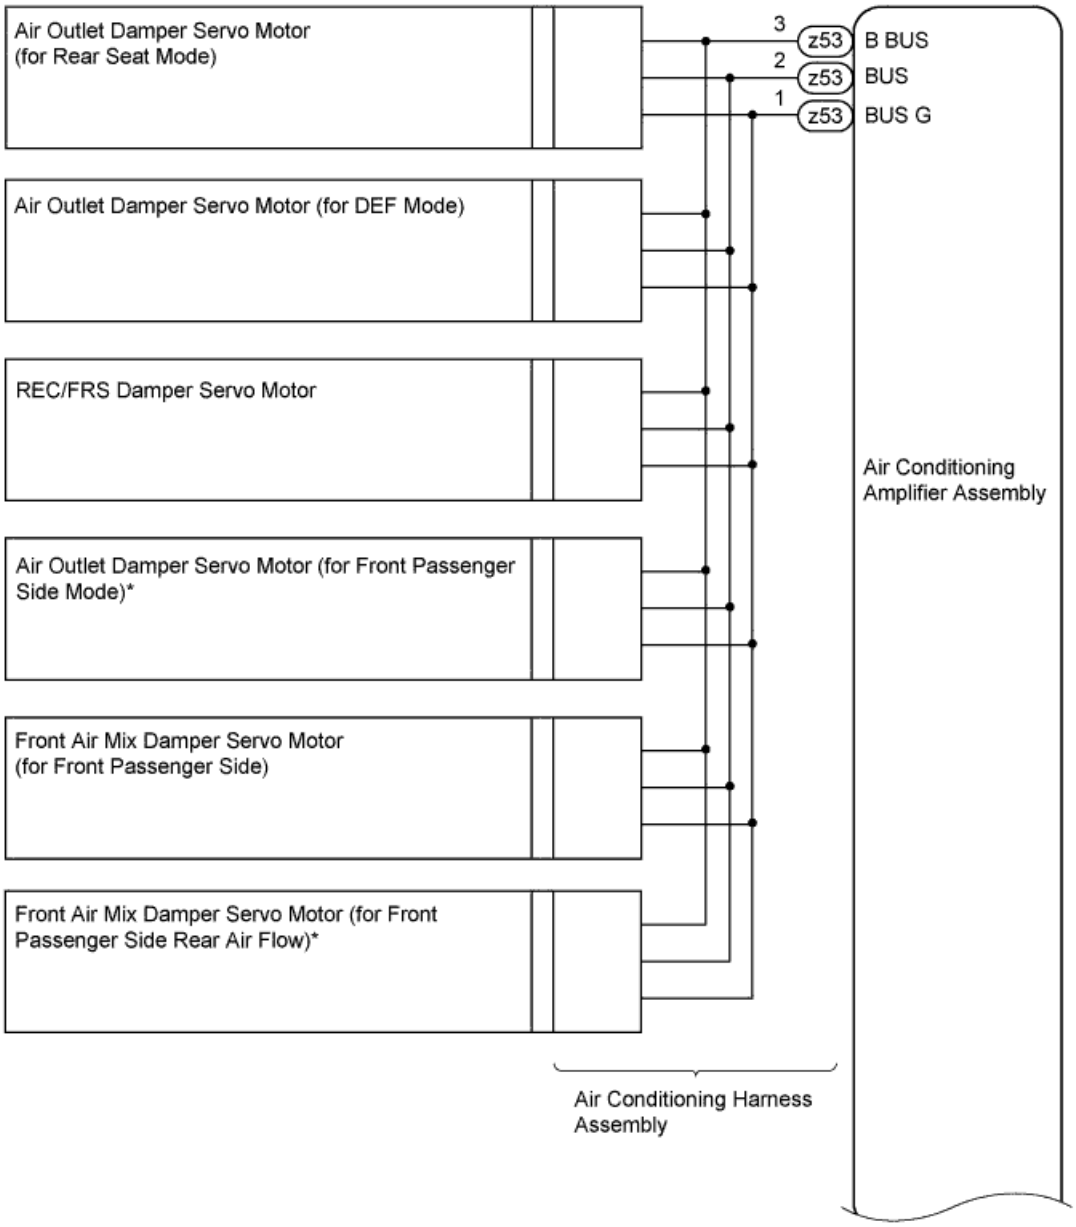

*: for 4-ZONE Type

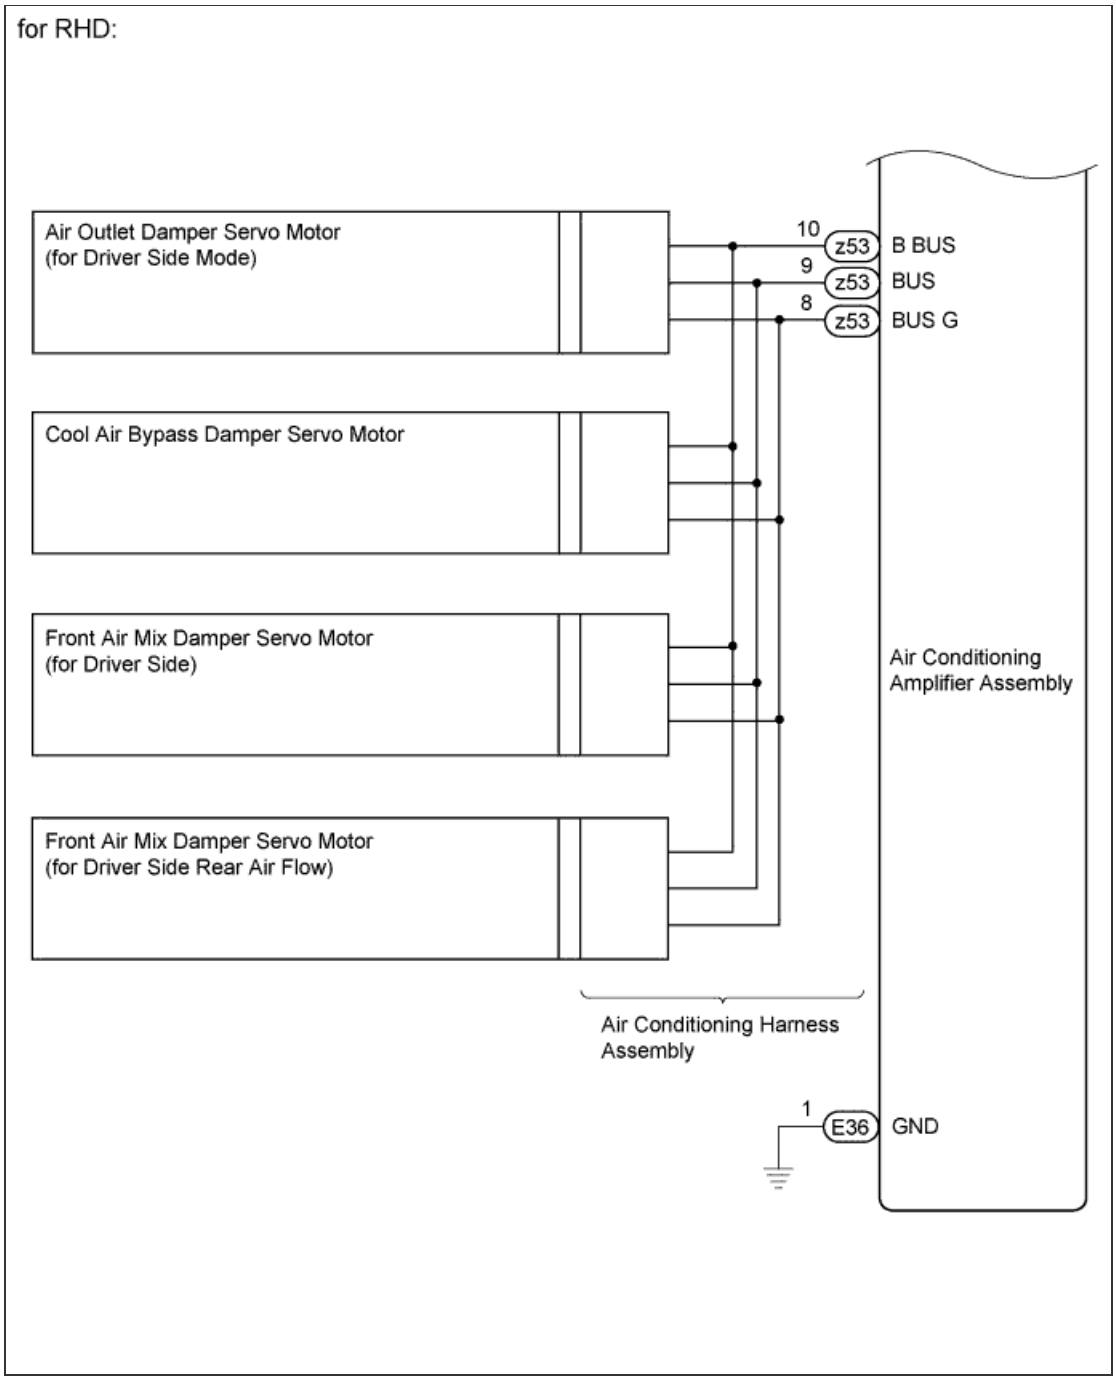

INSPECTION PROCEDURE

1.CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY

a. w/ Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E36-1 (GND) - z53-1 (BUS G)	Always	Below 1 Ω
E36-1 (GND) - z53-8 (BUS G)		
z53-1 (BUS G) - Body ground		
z53-8 (BUS G) - Body ground		

iii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
z53-1 (BUS G) - z53-3 (B BUS)	Always	11 to 14
z53-8 (BUS G) - z53-10 (B BUS)	Always	11 to 14
z53-1 (BUS G) - z53-2 (BUS)	Engine switch on (G)	Pulse generation
z53-8 (BUS G) - z53-9 (BUS)		

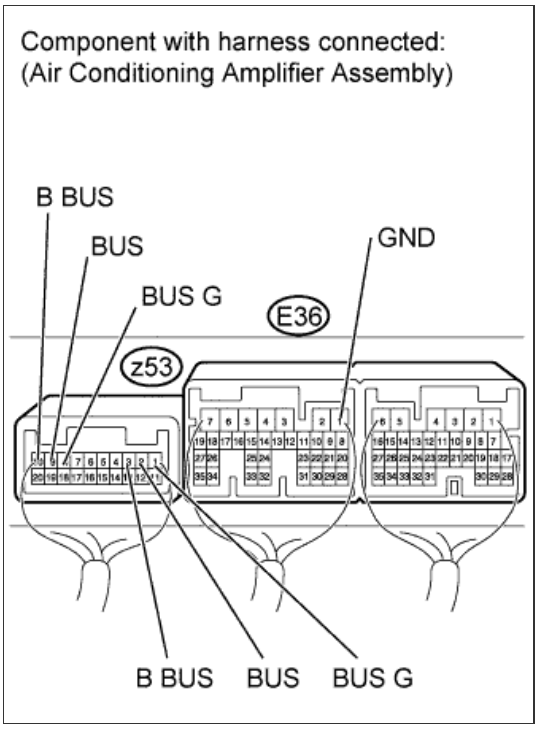


b. w/o Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-14 (GND) - z54-2 (BUS G)	Always	Below 1 Ω
z54-2 (BUS G) - Body ground		

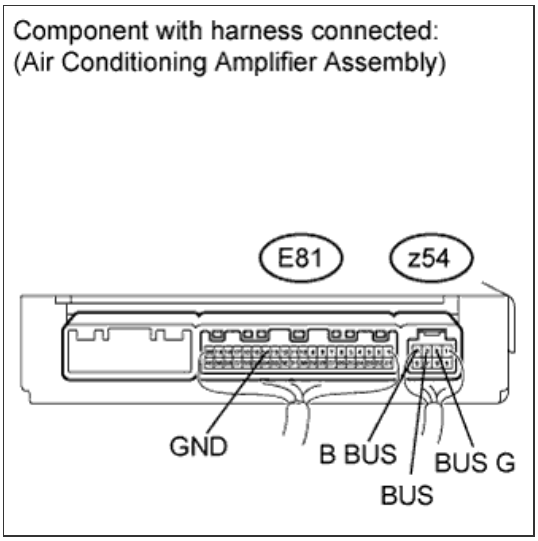

iii. Measure the voltage according to the value(s) in the table below.

Tester Connection	Condition	Specified Condition
z54-2 (BUS G) - z54-4 (B BUS)	Always	11 to 14
z54-2 (BUS G) - z54-3 (BUS)	Engine switch on (G)	Pulse generation

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG	C

B → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

C → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

A

REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

DTC B1443/43 Air Outlet Damper Control Servo Motor Circuit

for Preparation Click here

DESCRIPTION


The air outlet damper servo motor (for driver side mode) sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the air outlet damper (for driver side mode) to any position, which controls the air outlet changes.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1443/43	The air outlet damper position does not change even if the air conditioning amplifier assembly operates the air outlet damper servo motor.	• Air outlet damper servo motor (for driver side mode) • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRAM

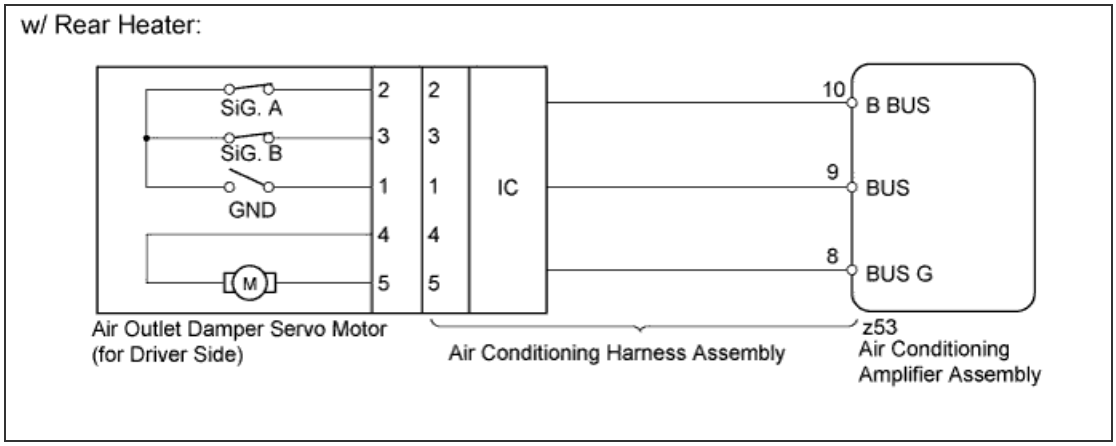

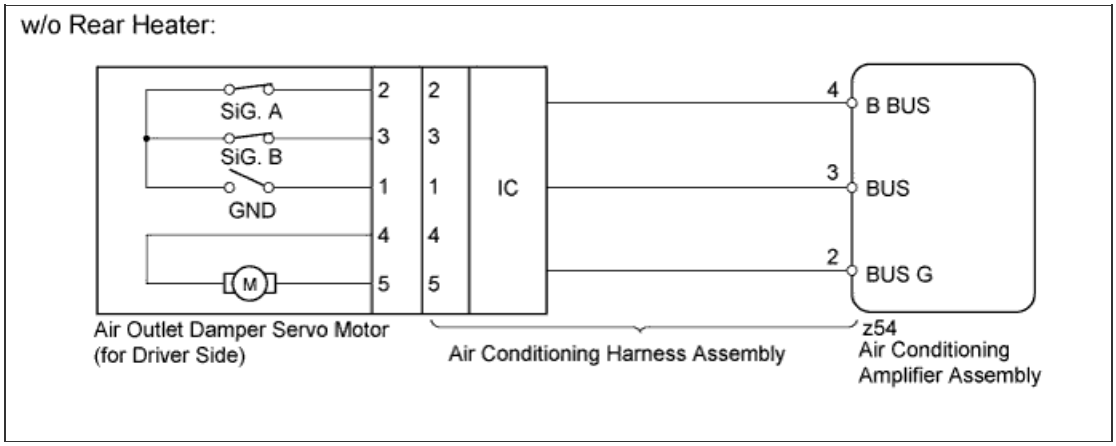

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (AIR OUTLET DAMPER SERVO MOTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	easurement Item/Range	Normal Condition	Diagnostic Note
A/O Damper FACE Pos(D)	Air outlet damper servo motor (for driver side mode) target pulse /	FACE1: 117 (pulse) FACE2: 109 (pulse) B/L1: 93 (pulse) B/L2: 81 (pulse) FOOT-F: 41 (pulse)	-

	in.: 6, a.: 117	FOOT-R: 41 (pulse) FOOT-D: 52 (pulse) F/D: 18 (pulse) DEF: 6 (pulse)	

OK:
The display is as specified in the normal condition.

NG → Go to step 2

OK →

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.CHECK AIR OUTLET DAMPER SERVO MOTOR (OPERATION)

a. for LHD

i. Replace the air outlet damper servo motor (for driver side mode) (Click here).

b. for RHD

i. Replace the air outlet damper servo motor (for driver side mode) (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT →

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1443 is not output.

Result

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE AIR OUTLET DAMPER SERVO MOTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSEMBLY (Click here)

A →

REPLACE AIR OUTLET DAMPER SERVO MOTOR (Click here)

DTC B1499/99 Multiplex Communication Circuit


for Preparation Click here

DESCRIPTION

The air conditioning amplifier assembly communicates with the ECM and meter ECU through the CAN communication system.

DTC Code	DTC Detection Condition	Trouble Area
B1499/99	An open in CAN communication line.	• Air conditioning amplifier assembly • ECM • Meter ECU • CAN communication line

WIRING DIAGRAM

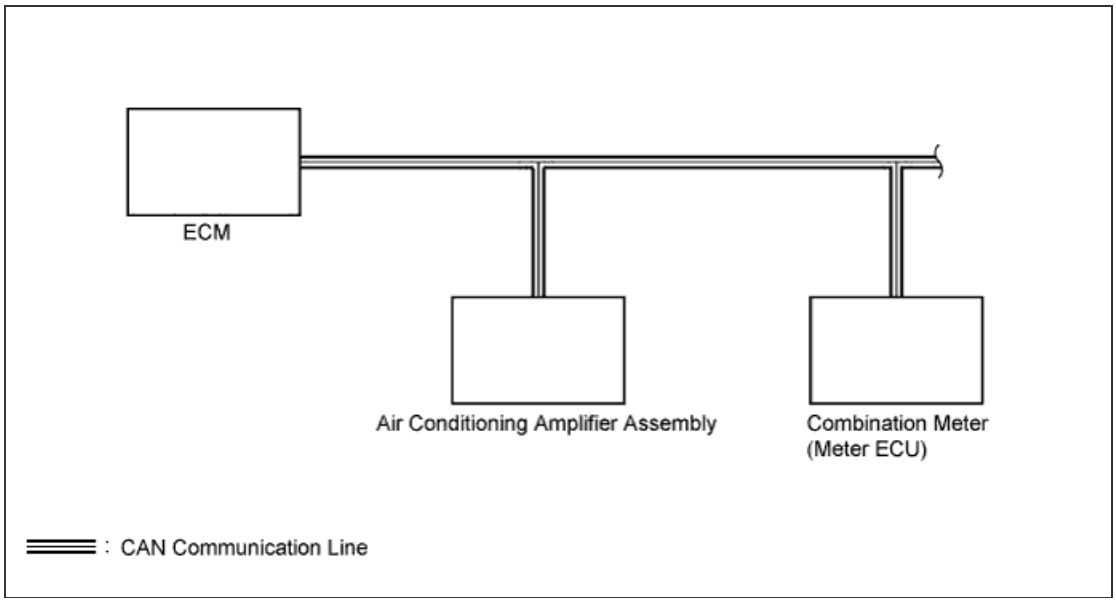

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1499 is not output	A
DTC B1499 is output (for LHD)	B
DTC B1499 is output (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (Click here)

A

USE SIMULATION METHOD TO CHECK (Click here)

DTC B1445/45 Passenger Side Cool Air Bypass Damper Control

for Preparation Click here

DESCRIPTION


The cool air bypass damper servo motor sends pulse signals to inform the air conditioning amplifier assembly of the damper position. The air conditioning amplifier assembly activates the motor (normal or reverse) based on the signals to move the cool air bypass damper to any position. As a result, when the air conditioner is operating, the temperature of the air blowing toward the head area is controlled.


HINT:

Confirm that no mechanical problem is present because this trouble code can be output when either a damper link or damper is mechanically locked.

DTC Code	DTC Detection Condition	Trouble Area
B1445/45	The cool air bypass damper position does not change even if the air conditioning amplifier assembly operates the cool air bypass damper servo motor.	• Cool air bypass damper servo motor • Air conditioning harness assembly • Air conditioning amplifier assembly

WIRING DIAGRA

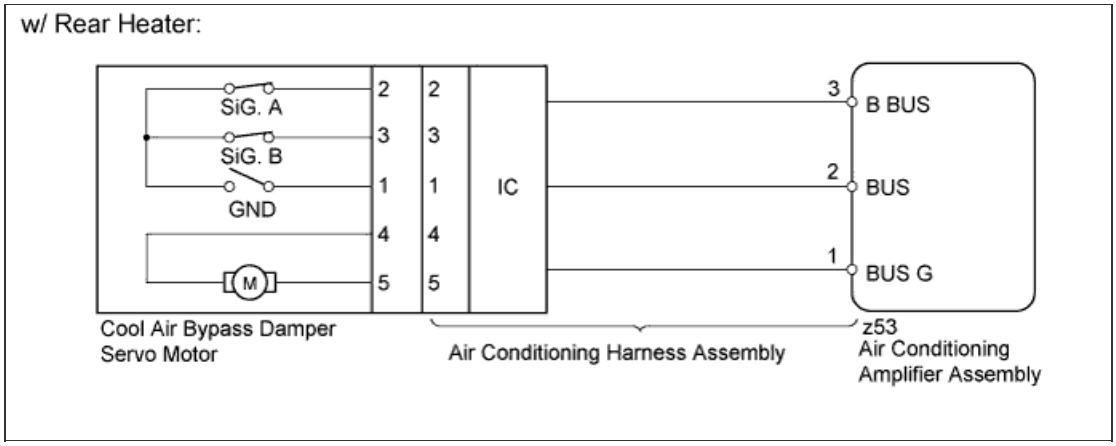

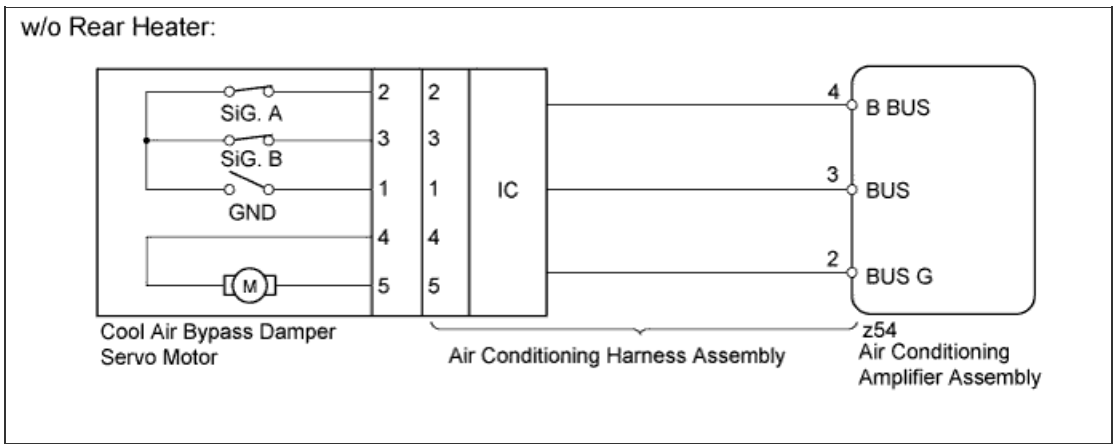

INSPECTION PROCEDURE

1.READ VALUE USING INTELLIGENT TESTER (COOL AIR BYPASS DA PER SERVO OTOR)

a. Use the Data List to check if the servo motor is functioning properly.

Air Conditioner

Tester Display	easurement Item/Range	Normal Condition	Diagnostic Note
Cool Air Bypass Pulse	Cool air bypass damper servo motor target pulse / in.: 6, ax.: 57	Shut: 6 (pulse) Open: 57 (pulse)	-

OK:

The display is as specified in the normal condition.

NG → Go to step 2

OK

REPLACE AIR CONDITIONING A PLIFIER ASSE BLY (Click here)

2.CHECK COOL AIR BYPASS DA PER SERVO OTOR (OPERATION)

a. for LHD:

i. Replace the cool air bypass damper servo motor (Click here).

b. for RHD:

i. Replace the cool air bypass damper servo motor (Click here).

HINT:

Since the servo motor cannot be inspected while it is removed from the vehicle, replace the servo motor with a normal one.

NEXT

3.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

OK:
DTC B1445 is not o tp t.

Res lt

Result	Proceed to
OK (for LHD)	A
OK (for RHD)	B
NG (for LHD)	C
NG (for RHD)	D

B → REPLACE COOL AIR BYPASS DA PER SERVO OTOR (Click here)

C → REPLACE AIR CONDITIONING HARNESS ASSE BLY (Click here)

D → REPLACE AIR CONDITIONING HARNESS ASSE BLY (Click here)

A

REPLACE COOL AIR BYPASS DA PER SERVO OTOR (Click here)

DTC B1499/99 Multiplex Communication Circuit


for Preparation Click here

DESCRIPTION

The air conditioning amplifier assembly communicates with the ECM and meter ECU through the CAN communication system.

DTC Code	DTC Detection Condition	Trouble Area
B1499/99	An open in CAN communication line.	• Air conditioning amplifier assembly • ECM • Meter ECU • CAN communication line

WIRING DIAGRAM

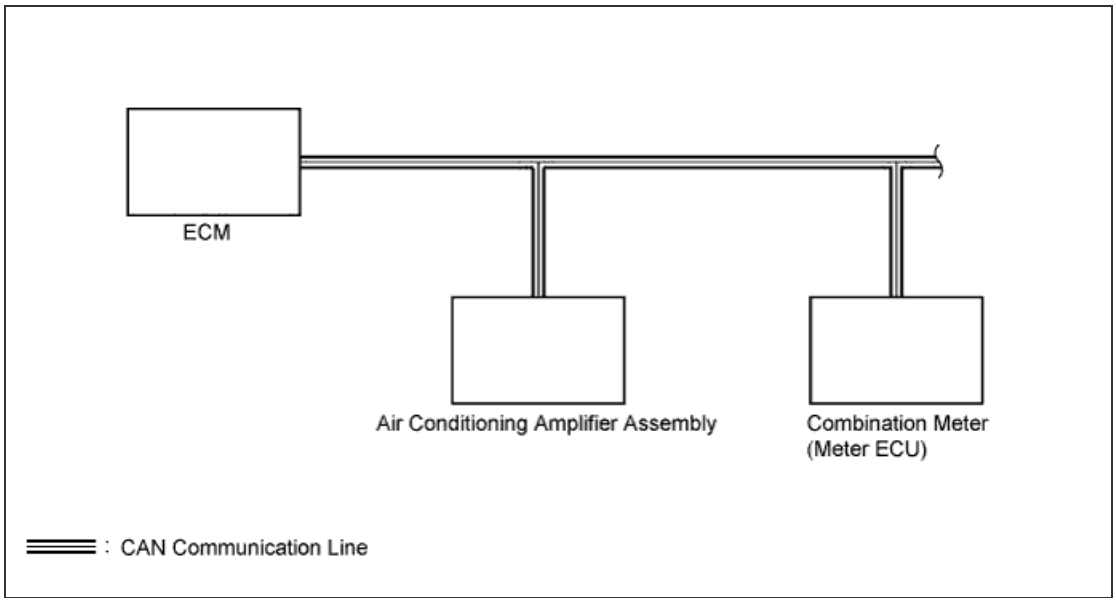

INSPECTION PROCEDURE

1.CHECK FOR DTC

a. Clear the DTCs (Click here).

b. Check for DTCs (Click here).

Result

Result	Proceed to
DTC B1499 is not output	A
DTC B1499 is output (for LHD)	B
DTC B1499 is output (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (Click here)


A

USE SIMULATION METHOD TO CHECK (Click here)

for Preparation Click here

ACTUATOR CHECK

a. Turn the engine switch on (IG) while pressing the A/C control AUTO switch and recirculation/fresh switch simultaneously.

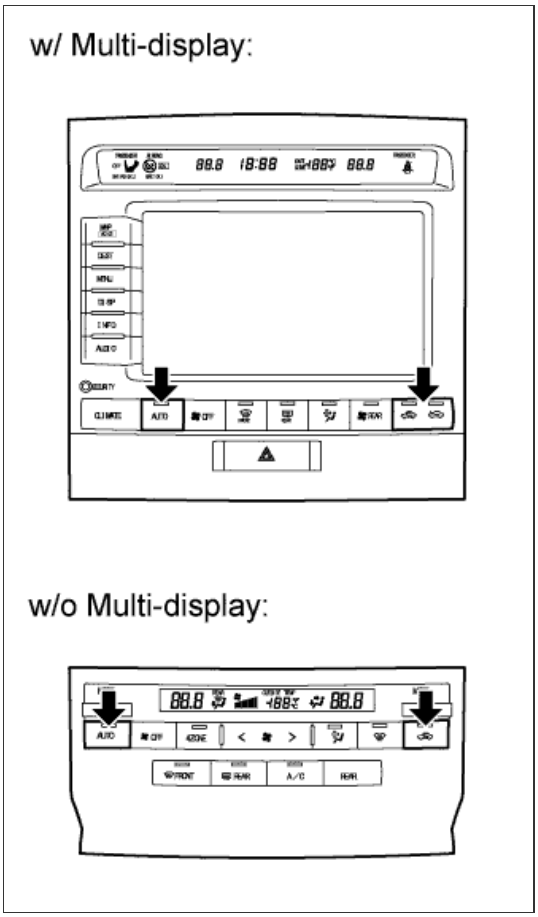


b. Press the recirculation/fresh switch.

c. By performing the actuator check, each damper, motor, and relay are automatically operated at 1 second intervals in a continuous cycle from step No. 1 to No. 10. During this operation, check the temperature and airflow indicated on the display as well as by hand.


HINT:

- **If a slower display is desired, press the driver temperature up switch to stop the automatic display. The display changes to step operation display mode which allows the display to be changed 1 step for each press of the switch.**
- **The buzzer sounds when the display code changes.**
- **Codes are displayed from smaller to larger numbers in order.**
- **To cancel the check mode, press the "OFF" switch.**
- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

w/ Multi-display:

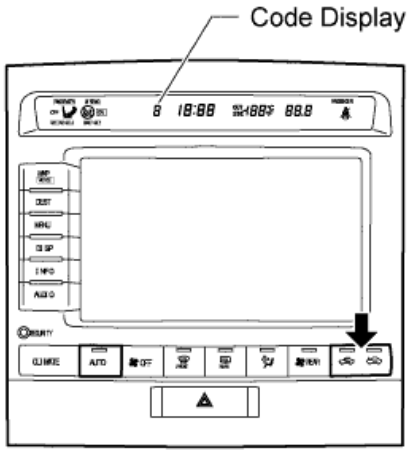

w/o Multi-display:

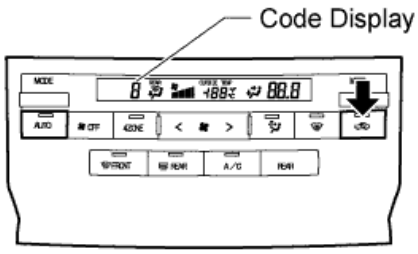

Front Air Conditioning Unit

Step No.	Display Code	Conditions							
		Blower Level	Air Mix Damper Dr. Pa.	Air Mix Damper FrRr Dr. Pa.	Airflow Vent Dr. Pa. DEF Mode	Airflow Vent FrRr	Air Inlet	Cool Air Bypass Damper	Compressor
1	0	0	0%	0%	FACE	FACE	FRESH	-14%	OFF
2	1	1							
3	2	17					RECIRCULATION/FRESH		ON
4	3	17					RECIRCULATION	113.0%	
5	4	17	50%	50%	B/L	B/L			
6	5	17							
7	6	17			FOOT	FOOT	FRESH		
8	7	17	100%	100%	FOOT				
9	8	17			F/D				
10	9	31			DEF			113.5%	

Rear Air Conditioning Unit

Step No.	Display Code	Conditions			
		Rear Blower Level	Rear Air Mix Damper Dr. Pa.	Rear Airflow Vent Dr. Pa.	Rear Magnetic Valve
1	0	0	0%	FACE	OFF
2	1	3			
3	2	17			ON
4	3	17			
5	4	17	50%	B/L	OFF
6	5	17			
7	6	17		FOOT	
8	7	17	100%		
9	8	17			
10	9	31			

for Preparation Click here


ACTUATOR CHECK

a. Start the engine and warm it up.

b. Perform the indicator check (Click here).

Text in Illustration

*A	w/ Navigation System
*B	w/o Navigation System

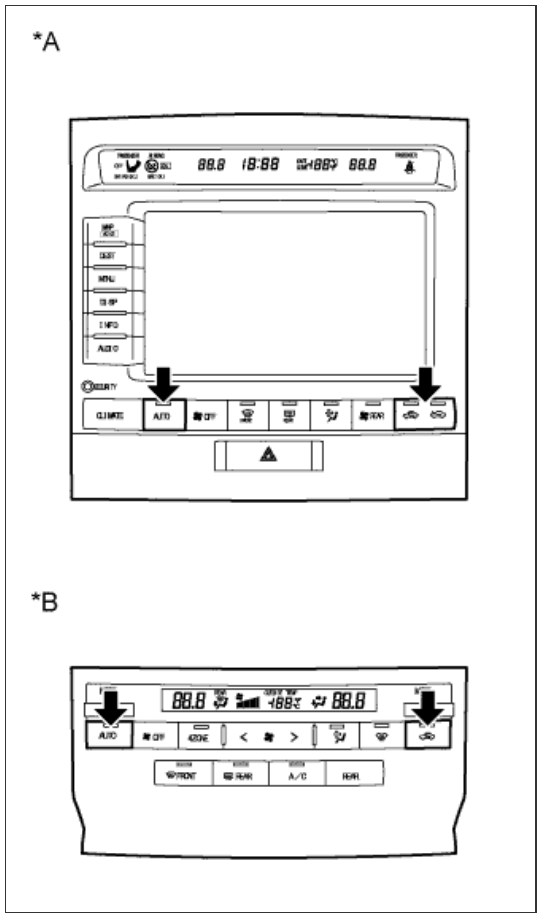

c. Press the "Recirculation/Fresh" switch.


d. By performing the actuator check, each damper, motor, and relay are automatically operated at 1 second intervals in a continuous cycle from step No. 1 to No. 10. During this operation, check the temperature and airflow indicated on the display as well as by hand.

HINT:

- **If a slower display is desired, press the driver temperature up switch to stop the automatic display. The display changes to step operation display mode which allows the display to be changed 1 step for each press of the switch.**
- **The buzzer sounds when the display code changes.**
- **Codes are displayed from smaller to larger numbers in order.**
- **To cancel the check mode, press the "OFF" switch.**
- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

Text in Illustration

*A	w/ Navigation System
*B	w/o Navigation System
*1	Code Display

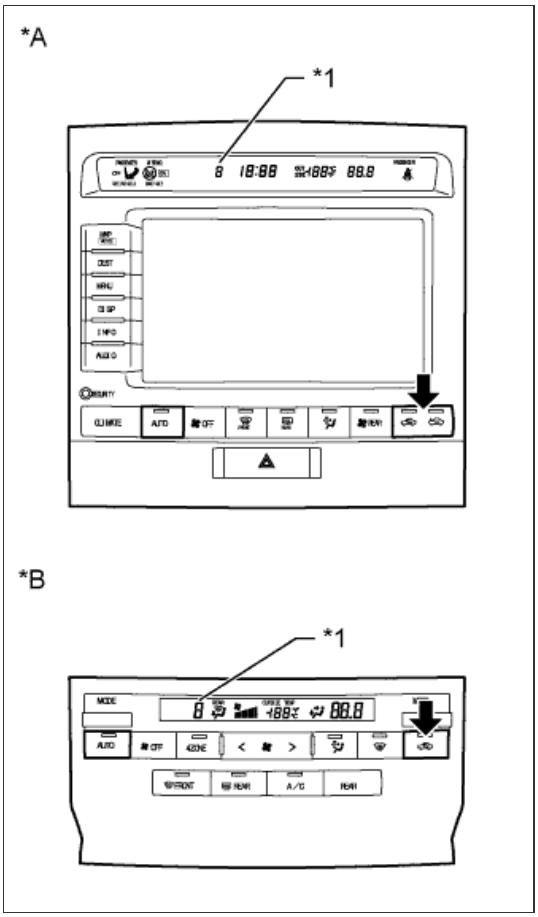

Front Air Conditioning Unit

Step No.	Display Code	Conditions							
		Blower Level	Air Mix Damper Dr. Pa.	Air Mix Damper FrRr Dr. Pa.	Airflow Vent Dr. Pa. DEF Mode	Airflow Vent FrRr	Air Inlet	Cool Air Bypass Damper	Compressor
1	0	0	0%	0%	FACE	FACE	FRESH	-14%	OFF
2	1	1							
3	2	17					RECIRCULATION/FRESH		ON
4	3	17					RECIRCULATION	113.0%	
5	4	17	50%	50%	B/L	B/L			
6	5	17							
7	6	17			FOOT	FOOT	FRESH		
8	7	17	100%	100%	FOOT				
9	8	17			F/D				
10	9	31			DEF			113.5%	

Rear Air Conditioning Unit

Step No.	Display Code	Conditions			
		Rear Blower Level	Rear Air Mix Damper Dr. Pa.	Rear Airflow Vent Dr. Pa.	Rear Magnetic Valve
1	0	0	0%	FACE	OFF
2	1	3			
3	2	17			ON
4	3	17			
5	4	17	50%	B/L	OFF
6	5	17			
7	6	17		FOOT	
8	7	17	100%		
9	8	17			
10	9	31			

for Preparation Click here


DESCRIPTION


This circuit* consists of the air conditioning control assembly and the air conditioning amplifier assembly. When the air conditioning control assembly is operated, signals are transmitted to the air conditioning amplifier assembly through the LIN communication system.
If the LIN communication system malfunctions, the air conditioning amplifier assembly does not operate even if the air conditioning control assembly is operated.

HINT:

*: w/o Multi-display

WIRING DIAGRAM

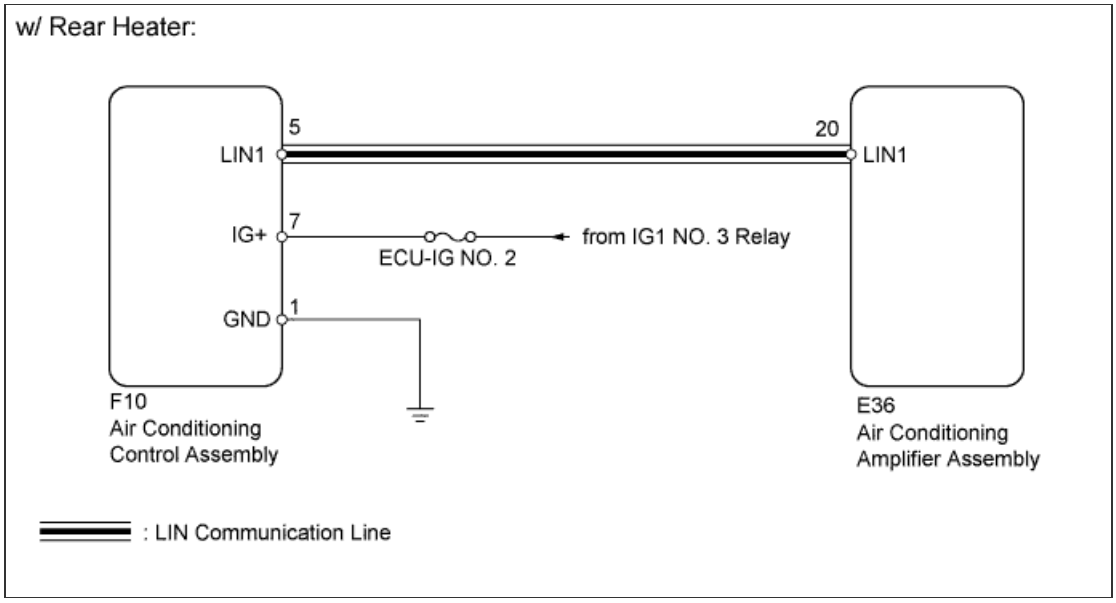

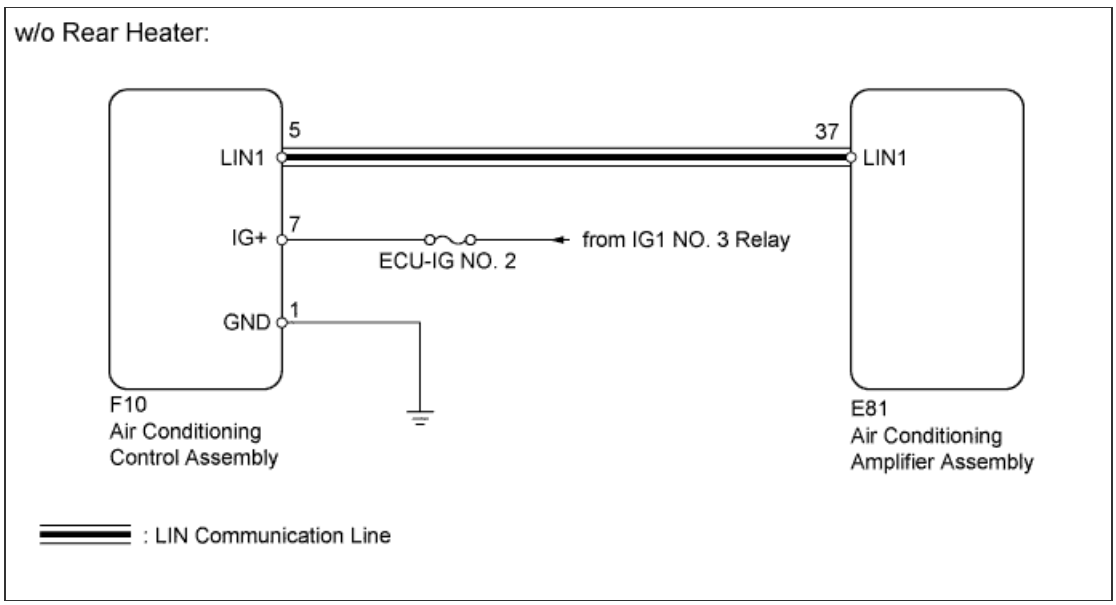

INSPECTION PROCEDURE

1.INSPECT FUSE (ECU-IG NO. 2)

a. Remove the ECU-IG NO. 2 fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
ECU-IG NO. 2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING CONTROL - BODY GROUND AND BATTERY)

a. Disconnect the F10 air conditioning control assembly connector.


b. Measure the resistance and voltage according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F10-1 (GND) - Body ground	Always	Below 1 Ω

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
F10-1 (GND) - F10-7 (IG+)	Engine switch on (IG)	11 to 14 V

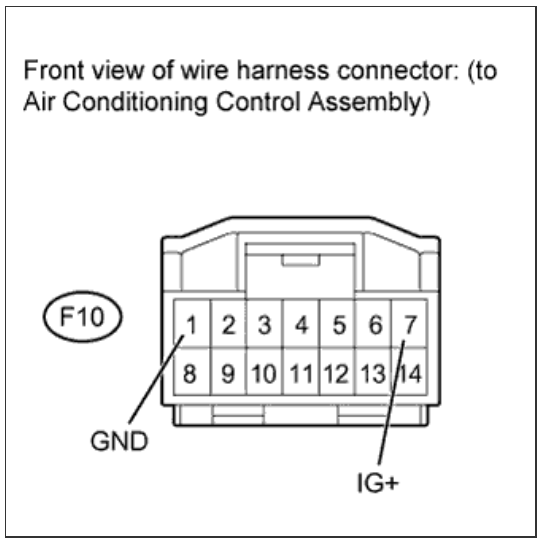

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - AIR CONDITIONING CONTROL)

a. w/ Rear Heater


i. Disconnect the F10 air conditioning control assembly connector.

ii. Disconnect the E36 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E36-20 (LIN1) - F10-5 (LIN1)	Always	Below 1 Ω
E36-20 (LIN1) - Body ground	Always	10 kΩ or higher

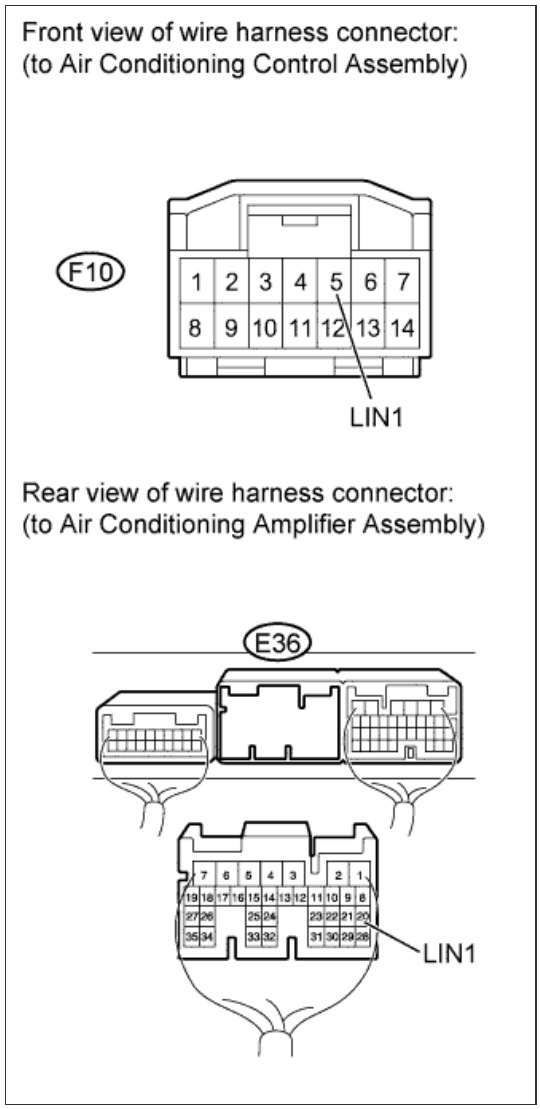

b. w/o Rear Heater

i. Disconnect the F10 air conditioning control assembly connector.


ii. Disconnect the E81 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-37 (LIN1) - F10-5 (LIN1)	Always	Below 1 Ω
E81-37 (LIN1) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Air Conditioning Control Assembly)

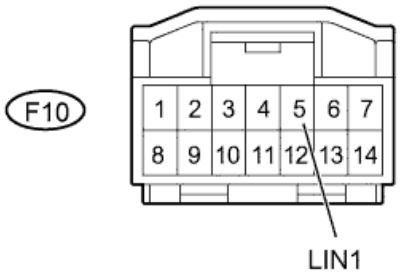

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

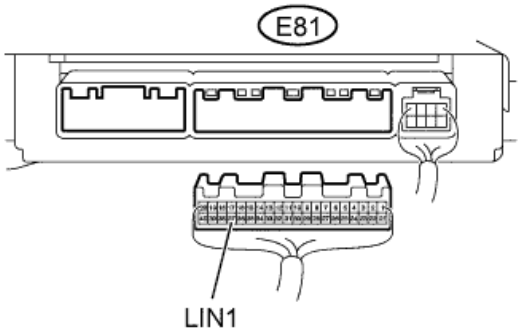

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK AIR CONDITIONING CONTROL ASSEMBLY (OPERATION)

a. Replace the air conditioning control assembly with a new or properly functioning one.

b. Operate the front air conditioning control to check that it functions properly.

OK:
Air conditioning control assembly function operates normally.

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK

REPLACE AIR CONDITIONING CONTROL ASSEMBLY (Click here)

for Preparation Click here


DESCRIPTION


This circuit* consists of the air conditioning control assembly and the air conditioning amplifier assembly. When the air conditioning control assembly is operated, signals are transmitted to the air conditioning amplifier assembly through the LIN communication system.
If the LIN communication system malfunctions, the air conditioning amplifier assembly does not operate even if the air conditioning control assembly is operated.

HINT:

*: w/o Multi-display

WIRING DIAGRAM

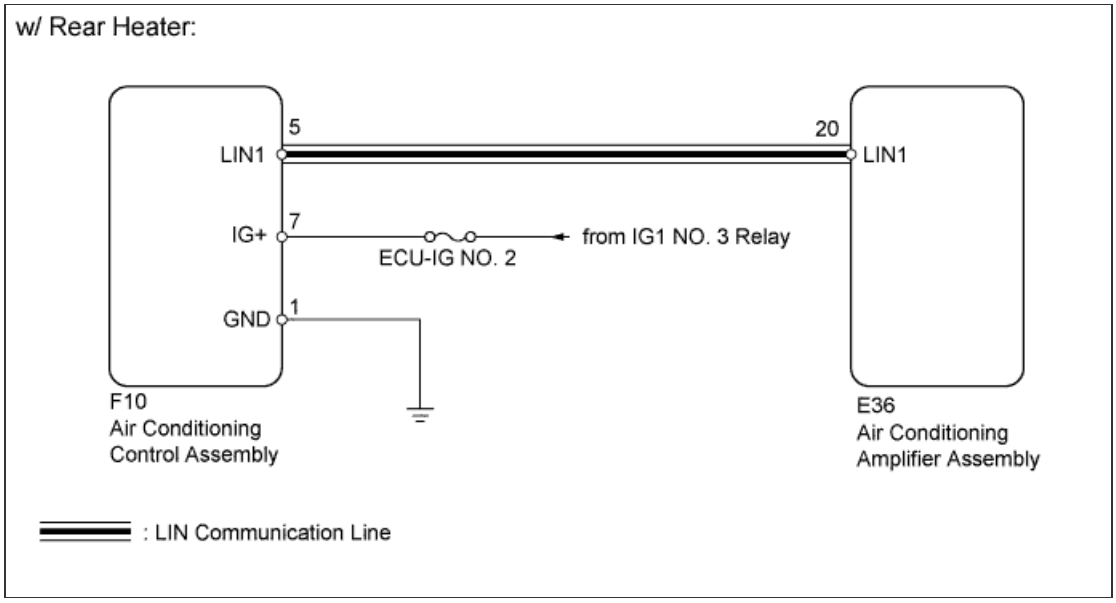

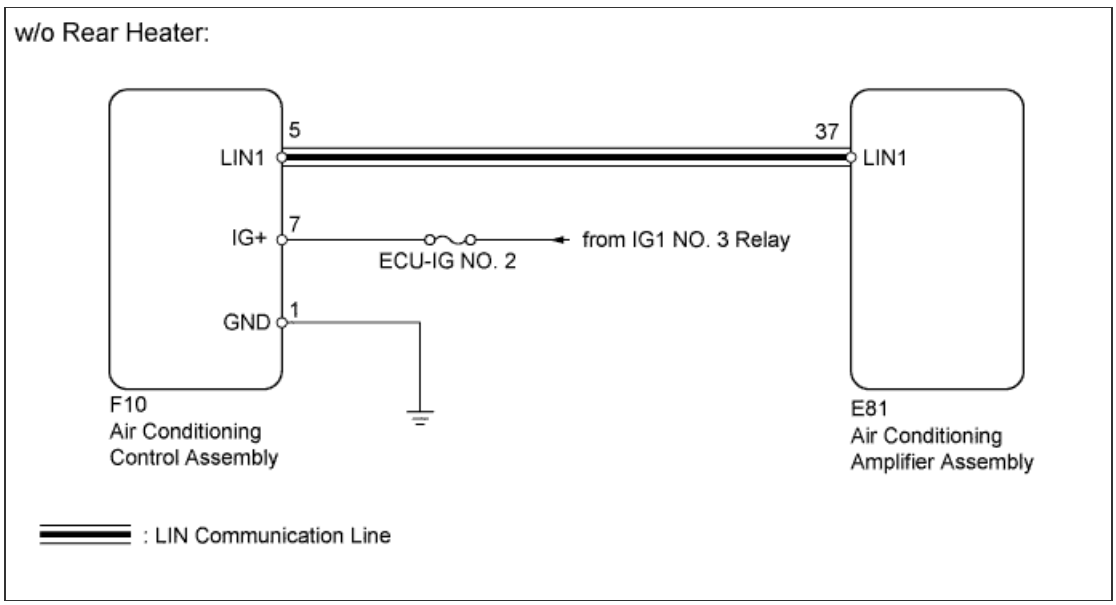

INSPECTION PROCEDURE

1.INSPECT FUSE (ECU-IG NO. 2)

a. Remove the ECU-IG NO. 2 fuse from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
ECU-IG NO. 2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING CONTROL - BODY GROUND AND BATTERY)

a. Disconnect the F10 air conditioning control assembly connector.


b. Measure the resistance and voltage according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F10-1 (GND) - Body ground	Always	Below 1 Ω

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
F10-1 (GND) - F10-7 (IG+)	Engine switch on (IG)	11 to 14 V

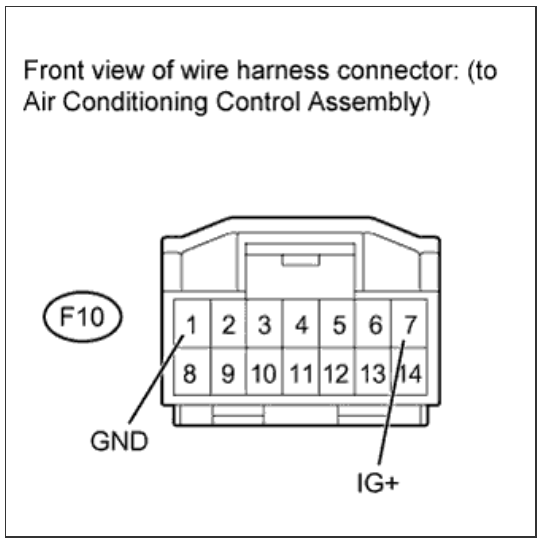

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - AIR CONDITIONING CONTROL)

a. w/ Rear Heater


i. Disconnect the F10 air conditioning control assembly connector.

ii. Disconnect the E36 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E36-20 (LIN1) - F10-5 (LIN1)	Always	Below 1 Ω
E36-20 (LIN1) - Body ground	Always	10 kΩ or higher

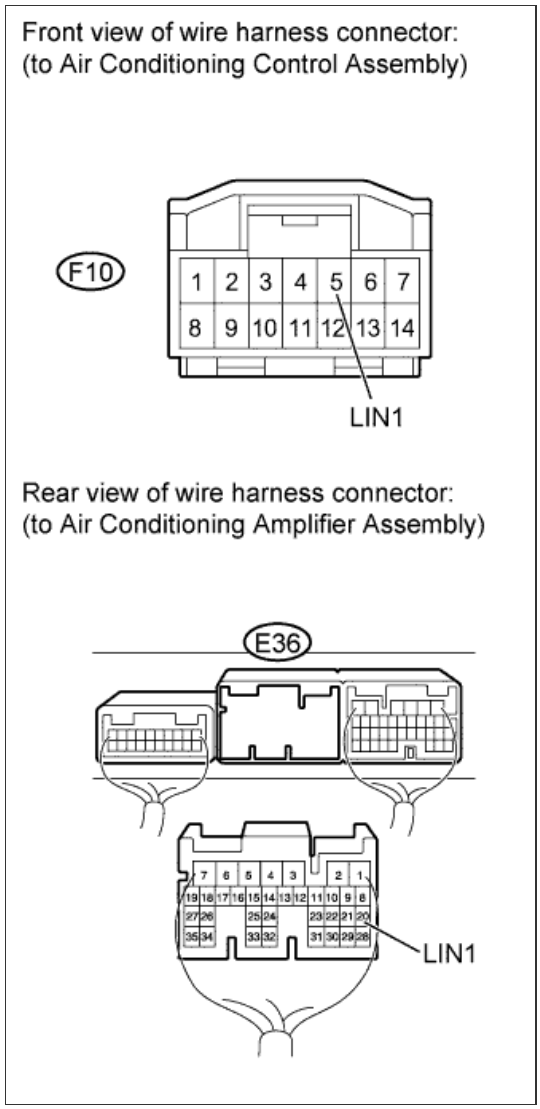

b. w/o Rear Heater

i. Disconnect the F10 air conditioning control assembly connector.


ii. Disconnect the E81 amplifier connector.

iii. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-37 (LIN1) - F10-5 (LIN1)	Always	Below 1 Ω
E81-37 (LIN1) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector:
(to Air Conditioning Control Assembly)

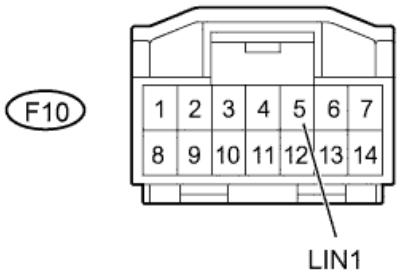

Rear view of wire harness connector:
(to Air Conditioning Amplifier Assembly)

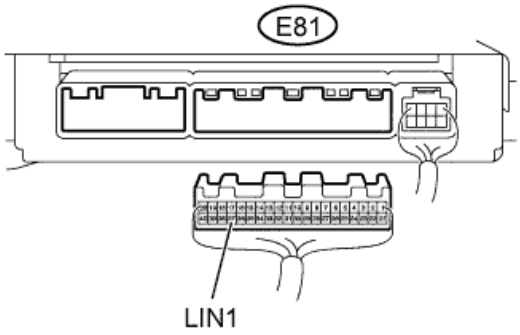

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK AIR CONDITIONING CONTROL ASSEMBLY (OPERATION)

a. Replace the air conditioning control assembly with a new or properly functioning one.

b. Operate the front air conditioning control to check that it functions properly.

OK:
Air conditioning control assembly function operates normally.

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK


REPLACE AIR CONDITIONING CONTROL ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

The cooler expansion valve (cooler magnetic valve) is controlled by the air conditioning amplifier assembly (for cool box).

WIRING DIAGRAM

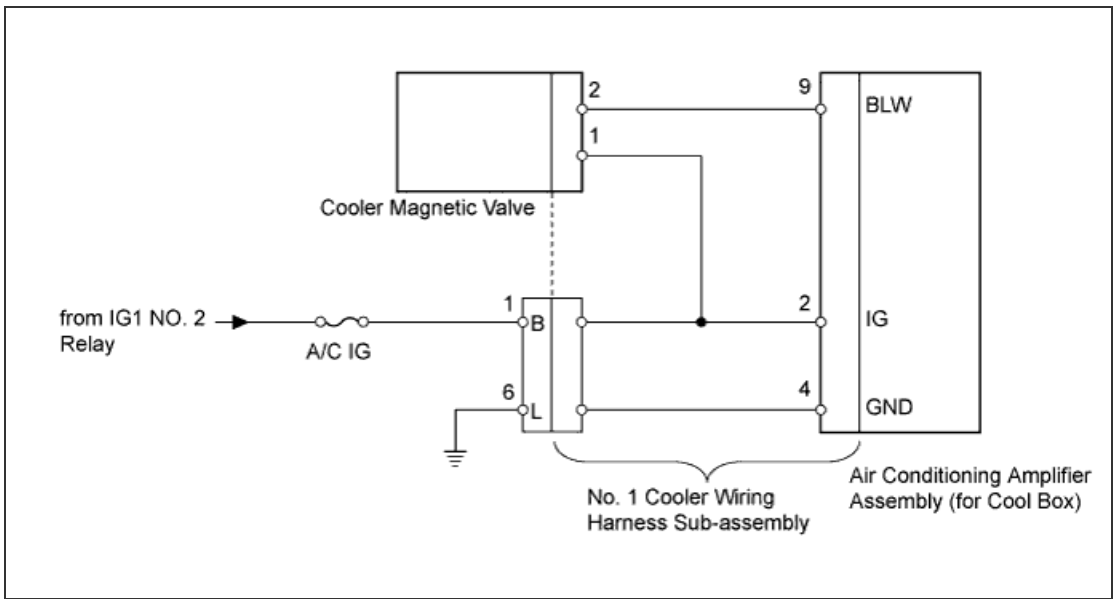

INSPECTION PROCEDURE

1.INSPECT FUSE (A/C IG)

a. Remove the A/C IG fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C IG fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (NO. 1 COOLER WIRING HARNESS - BATTERY)


a. Disconnect the No. 1 cooler wiring harness sub-assembly connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
1 (B) - Body ground	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector: (to No. 1 Cooler Wiring Harness Sub-assembly)

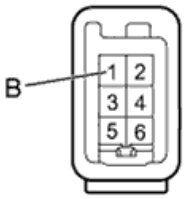

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK ↓

3.CHECK HARNESS AND CONNECTOR (NO. 1 COOLER WIRING HARNESS - BODY GROUND)


a. Disconnect the No. 1 cooler wiring harness sub-assembly connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
6 (L) - Body ground	Always	Below 1 Ω

Front view of wire harness connector: (to No. 1 Cooler Wiring Harness Sub-assembly)

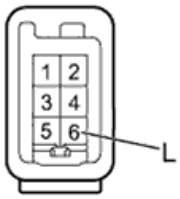

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK ↓

4.CHECK NO. 1 COOLER WIRING HARNESS SUB-ASSEMBLY (OPERATION)

a. Replace the No. 1 cooler wiring harness sub-assembly with a normal one and check that the condition returns to normal.

OK:
Same problem does not occur.

NG → Go to step 5

OK ↓

REPLACE NO. 1 COOLER WIRING HARNESS SUB-ASSEMBLY

5.CHECK COOLER MAGNETIC VALVE (OPERATION)

a. Replace the cooler magnetic valve (Click here).

HINT:

Since the cooler magnetic valve cannot be inspected while it is removed from the vehicle, replace the cooler magnetic valve with a normal one and check that the condition returns to normal.

OK:

Same problem does not occur.

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (for Cool Box) (Click here)


OK → REPLACE COOLER MAGNETIC VALVE (Click here)

for Preparation Click here

DESCRIPTION

The cooler blower motor is operated by signals from the air conditioning amplifier assembly (for cool box).

WIRING DIAGRAM

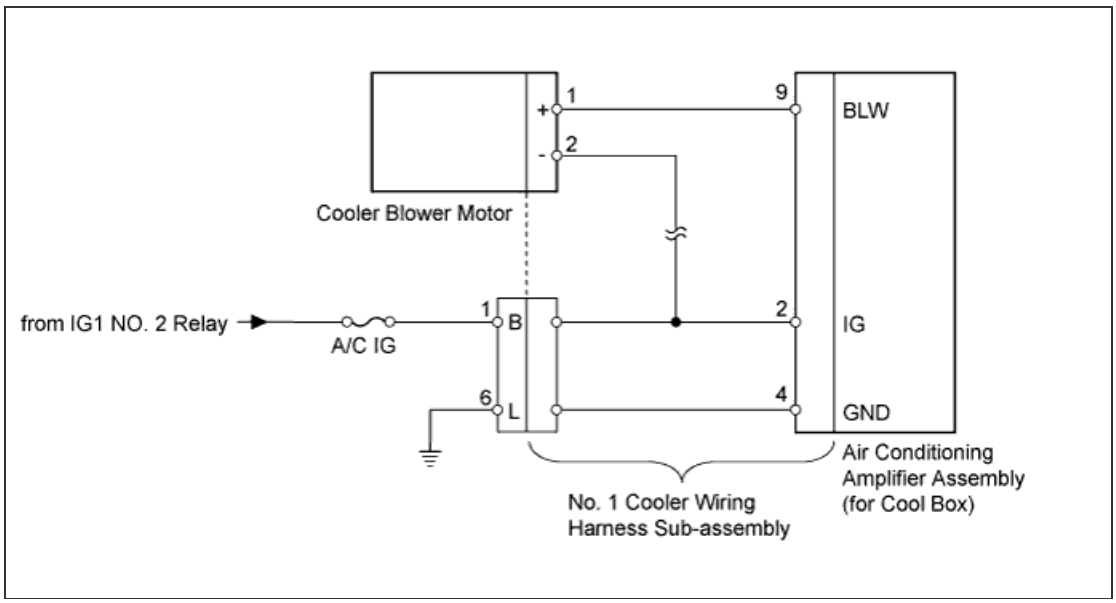

INSPECTION PROCEDURE

1.INSPECT FUSE (A/C IG)

a. Remove the A/C IG fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C IG fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (NO. 1 COOLER WIRING HARNESS - BATTERY)


a. Disconnect the No. 1 cooler wiring harness sub-assembly connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
1 (B) - Body ground	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector: (to No. 1 Cooler Wiring Harness Sub-assembly)

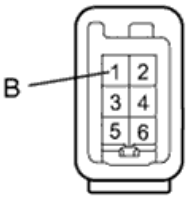

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK HARNESS AND CONNECTOR (NO. 1 COOLER WIRING HARNESS - BODY GROUND)


a. Disconnect the No. 1 cooler wiring harness sub-assembly connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
6 (L) - Body ground	Always	Below 1 Ω

Front view of wire harness connector: (to No. 1 Cooler Wiring Harness Sub-assembly)

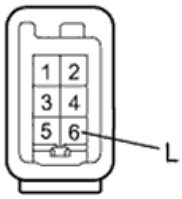

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK NO. 1 COOLER WIRING HARNESS SUB-ASSEMBLY (OPERATION)

a. Replace the No. 1 cooler wiring harness sub-assembly with a normal one and check that the condition returns to normal.

OK:
Same problem does not occur.

NG → Go to step 5

OK

REPLACE NO. 1 COOLER WIRING HARNESS SUB-ASSEMBLY


5.INSPECT COOLER BLOWER MOTOR

a. Remove the cooler blower motor (Click here).

b. Connect the positive (+) lead from the battery to terminal 1 and negative (-) to terminal 2, then check that the motor operates smoothly.

OK:

Cooler blower motor operates smoothl .

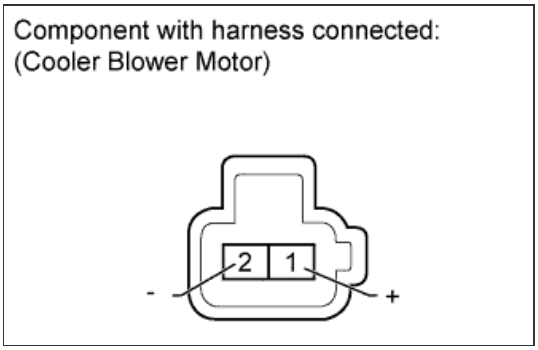

NG → REPLACE COOLER BLOWER MOTOR (Click here)


OK → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (for Cool Box) (Click here)

for Preparation Click here

DESCRIPTION

The cooler control switch is the activation switch for the cooling box. If the cooling box does not activate when the cooler control switch is pushed, there may be a malfunction in the circuit shown below.

WIRING DIAGRAM

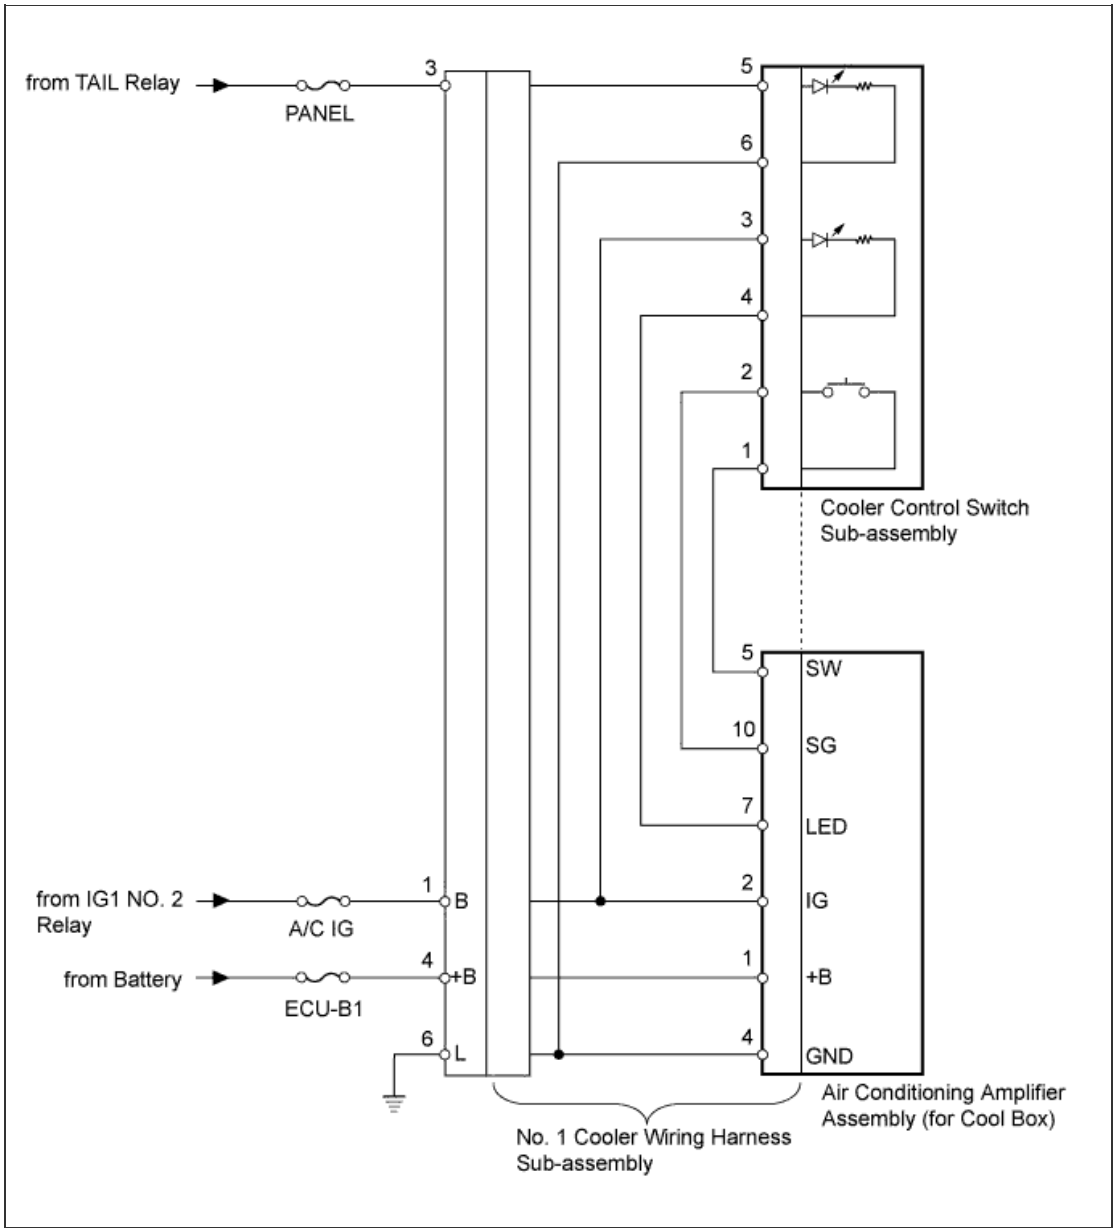

INSPECTION PROCEDURE

1.INSPECT FUSE (PANEL, A/C IG, ECU-B1)

a. Remove the PANEL and A/C IG fuses from the cowl side junction block LH.

b. Remove the ECU-B1 fuse from the engine room relay block.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
PANEL fuse	Always	Below 1 Ω
ECU-B1 fuse	Always	Below 1 Ω
A/C IG fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK


2.CHECK HARNESS AND CONNECTOR (NO. 1 COOLER WIRING HARNESS - BATTERY)

a. Disconnect the No. 1 cooler wiring harness sub-assembly connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
4 (+B) - Body ground	Always	11 to 14 V
1 (B) - Body ground	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

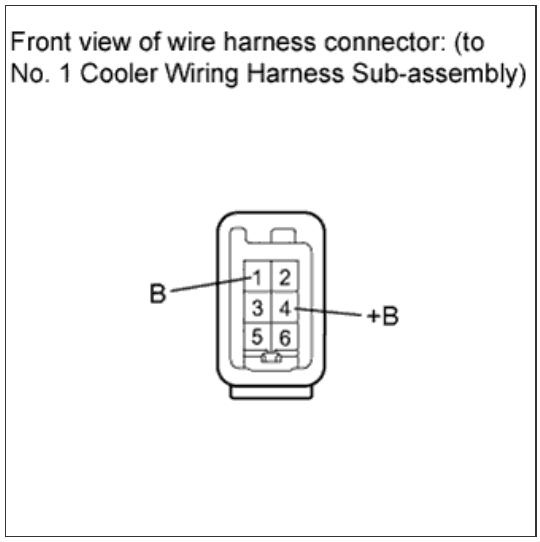

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


3.CHECK HARNESS AND CONNECTOR (NO. 1 COOLER WIRING HARNESS - BODY GROUND)

a. Disconnect the No. 1 cooler wiring harness sub-assembly connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
6 (L) - Body ground	Always	Below 1 Ω

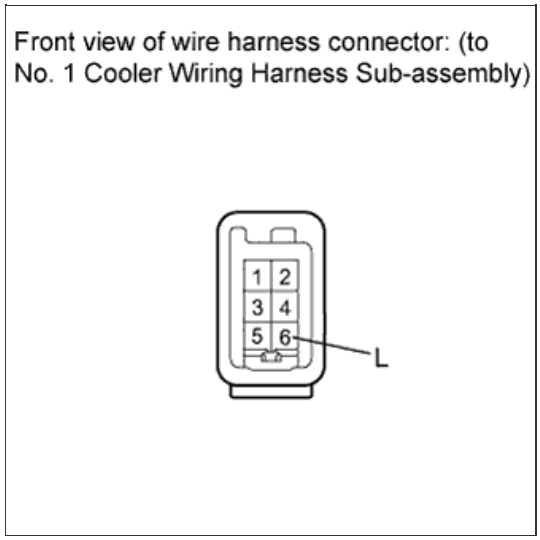

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK NO. 1 COOLER WIRING HARNESS SUB-ASSEMBLY (OPERATION)

a. Replace the No. 1 cooler wiring harness sub-assembly with a normal one and check that the condition returns to normal.

OK:

Same problem does not occur.

NG → Go to step 5

OK

REPLACE NO. 1 COOLER WIRING HARNESS SUB-ASSEMBLY

5.INSPECT COOLER CONTROL SWITCH SUB-ASSEMBLY

a. Remove the cooler control switch sub-assembly (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Switch Condition	Specified Condition
1 - 2	On	Below 1 Ω
1 - 2	Off	10 kΩ or higher

c. Apply battery voltage to the cooler control switch connector and check that the cooler control switch illuminates.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 3 Battery negative (-) → Terminal 4	LED illuminates
Battery positive (+) → Terminal 5 Battery negative (-) → Terminal 6	LED illuminates

Component with harness connected:
(Cooler Control Switch Sub-assembly)

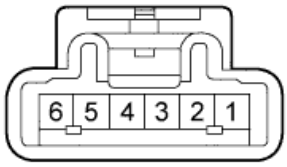

NG → REPLACE COOLER CONTROL SWITCH SUB-ASSEMBLY (Click here)

OK


REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (for Cool Box) (Click here)

for Preparation Click here

DESCRIPTION

The No. 3 cooler thermistor is installed on the evaporator in the cooling box unit to detect the cooled air temperature that has passed through the evaporator and control the cooling box. It sends appropriate signals to the air conditioning amplifier assembly (for cool box). The resistance of the No. 3 cooler thermistor changes in accordance with the cooled air temperature that has passed through the evaporator. As the temperature decreases, the resistance increases. As the temperature increases, the resistance decreases.
The air conditioning amplifier assembly (for cool box) applies voltage (12 V) to the No. 3 cooler thermistor and reads voltage changes as the resistance of the No. 3 cooler thermistor changes.

WIRING DIAGRAM

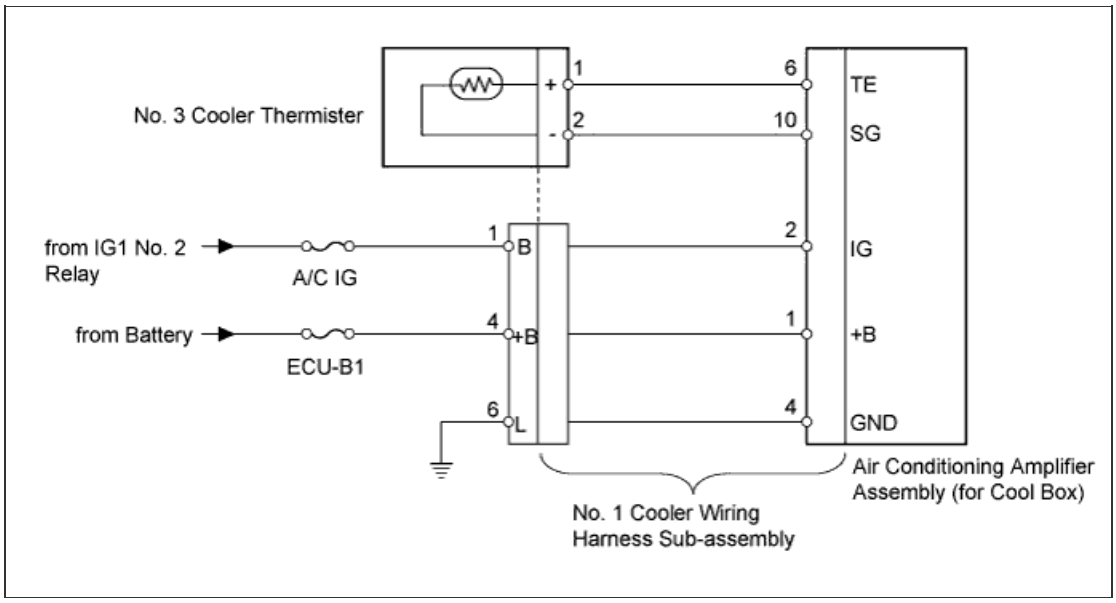

INSPECTION PROCEDURE

1.INSPECT FUSE (A/C IG, ECU-B1)

a. Remove the A/C IG fuse from the cowl side junction block LH.

b. Remove the ECU-B1 fuse from the engine room relay block.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C IG fuse	Always	Below 1 Ω
ECU-B1 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (NO. 1 COOLER WIRING HARNESS - BATTERY)

a. Disconnect the No. 1 cooler wiring harness sub-assembly connector.


b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition

4 (+B) - Body ground	Always	11 to 14 V
1 (B) - Body ground	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector: (to No. 1 Cooler Wiring Harness Sub-assembly)

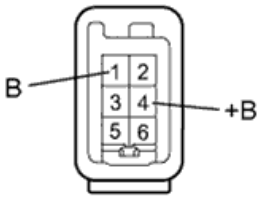

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK HARNESS AND CONNECTOR (NO. 1 COOLER WIRING HARNESS - BODY GROUND)


a. Disconnect the No. 1 cooler wiring harness sub-assembly connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
6 (L) - Body ground	Always	Below 1 Ω

Front view of wire harness connector: (to No. 1 Cooler Wiring Harness Sub-assembly)

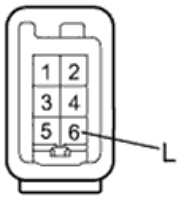

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK NO. 1 COOLER WIRING HARNESS SUB-ASSEMBLY (OPERATION)

a. Replace the No. 1 cooler wiring harness sub-assembly with a normal one and check that the condition returns to normal.

OK:
Same problem does not occur.

NG → Go to step 5

OK

REPLACE NO. 1 COOLER WIRING HARNESS SUB-ASSEMBLY


5.CHECK NO. 3 COOLER THERMISTOR

a. Remove the No. 3 cooler thermistor (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 (+) - 2 (-)	-10°C (14°F)	7.30 to 9.10 kΩ
	-5°C (23°F)	5.65 to 6.95 kΩ
	0°C (32°F)	4.40 to 5.35 kΩ
	5°C (41°F)	3.40 to 4.15 kΩ
	10°C (50°F)	2.70 to 3.25 kΩ
	15°C (59°F)	2.14 to 2.58 kΩ
	20°C (68°F)	1.71 to 2.05 kΩ
	25°C (77°F)	1.38 to 1.64 kΩ
	30°C (86°F)	1.11 to 1.32 kΩ

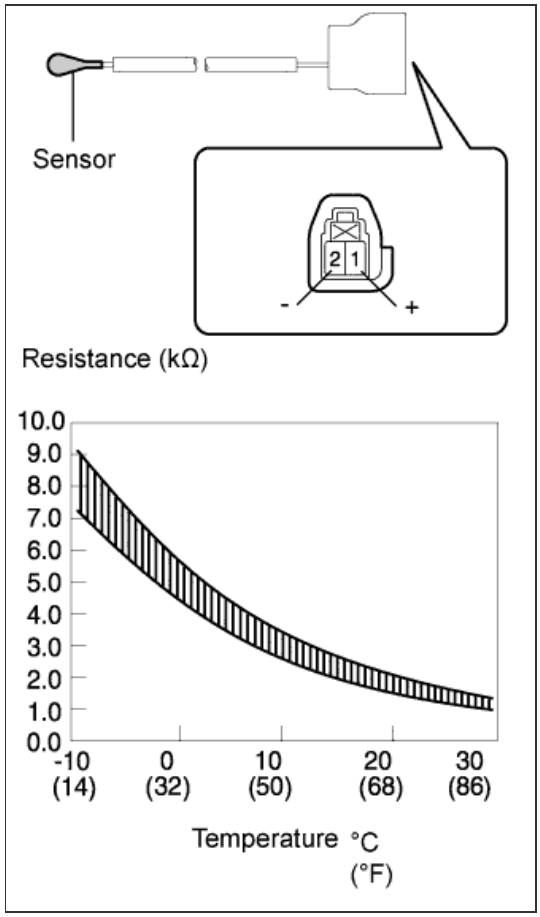

NOTICE:

- **Even slightl touching the sensor ma hange the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).


NG → REPLACE NO. 3 COOLER THERMISTOR (Click here)

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (for Cool Box) (Click here)


for Preparation Click here


DESCRIPTION

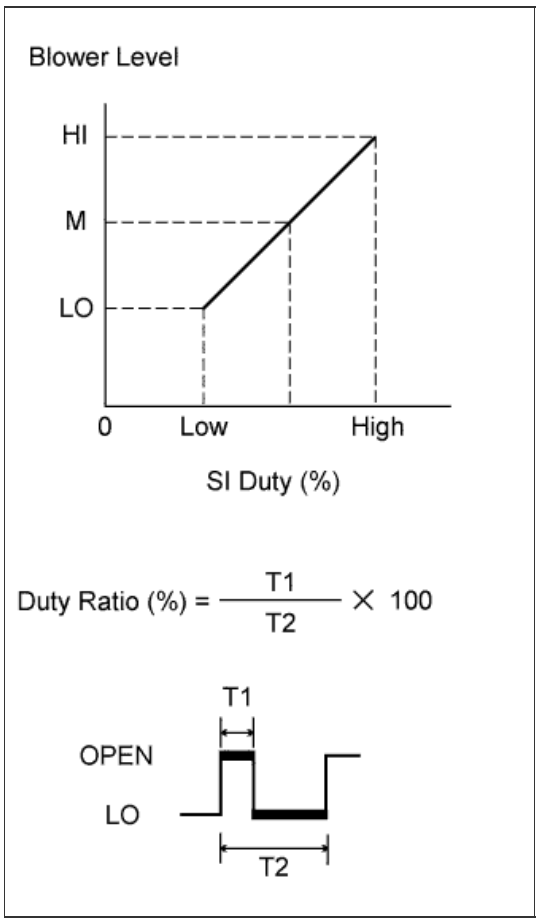

The blower motor is operated by signals from the air conditioning amplifier assembly. The blower motor speed signals are transmitted by changes in the duty ratio.
Duty Ratio:
The duty ratio is the ratio of the blower motor OPEN time (T1) to the total of the blower motor OPEN and LO time (T2).
The blower motor controller controls the blower motor speed.

WIRING DIAGRAM

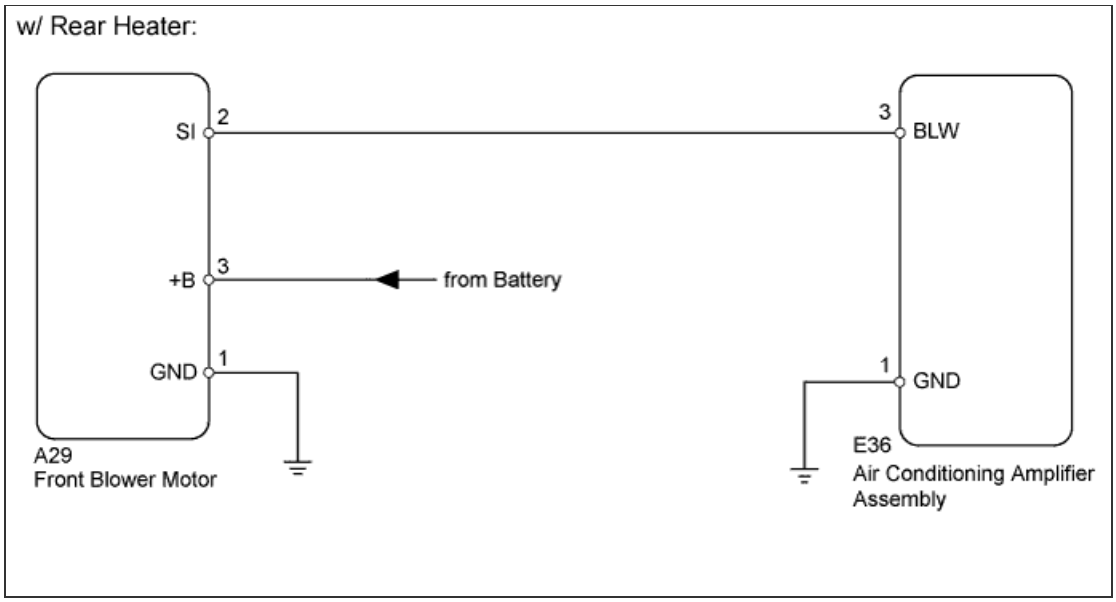

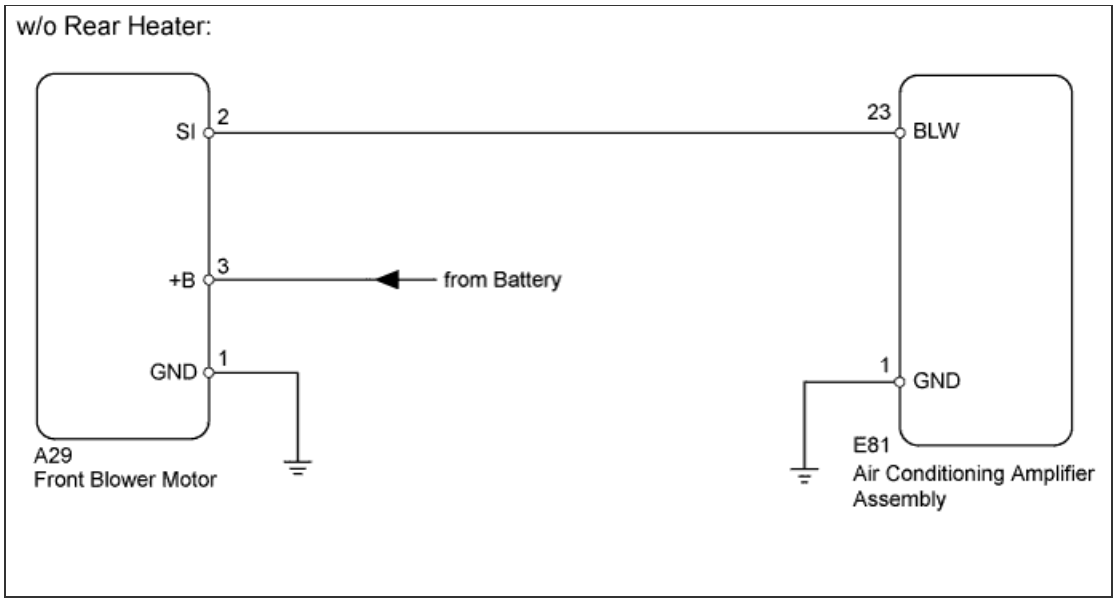

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (FRONT BLOWER MOTOR)

a. Select the Active Test, use the intelligent tester to generate a control command, and then check that the front blower motor operates.

Air Conditioner

Tester Display	Test Part	Control Range	Diagnostic Note
Blower Motor	Front blower motor	Min.: 0, Max.: 31	-

Result

Result	Proceed to
Front blower motor operates normally	A
Front blower motor does not operate	B
Front blower motor operates but does not change speed	C

B	Go to step 2
C	Go to step 6

A

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)


2.CHECK HARNESS AND CONNECTOR (FRONT BLOWER MOTOR - BODY GROUND)

a. Disconnect the A29 motor connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A29-1 (GND) - Body ground	Always	Below 1 Ω

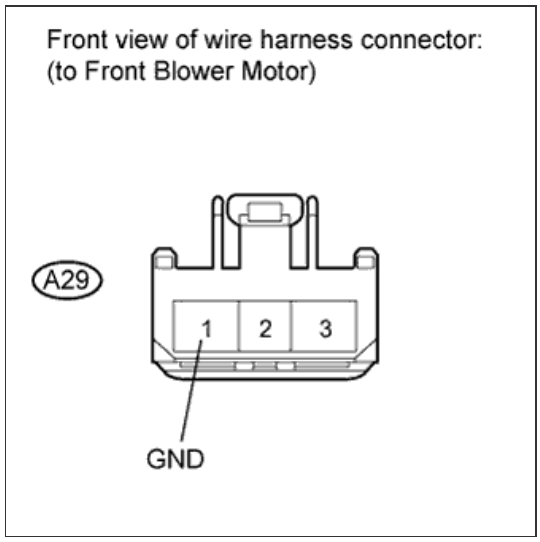

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


3.CHECK HARNESS AND CONNECTOR (FRONT BLOWER MOTOR - BATTERY)

a. Disconnect the A29 motor connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
A29-3 (+B) - Body ground	Always	11 to 14 V

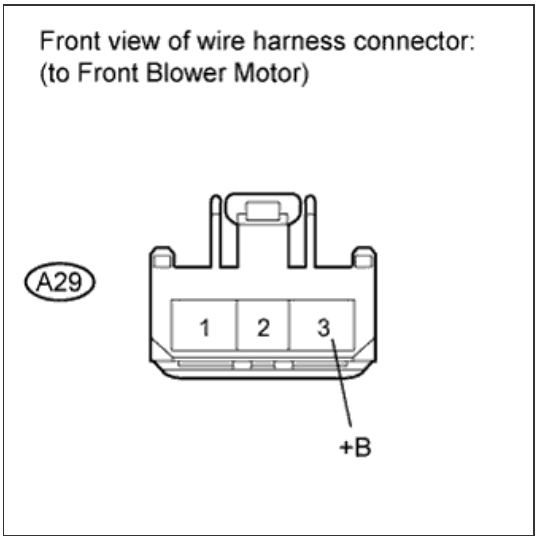

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK FRONT BLOWER MOTOR (SI VOLTAGE)

a. Disconnect the E36*1 or E81*2 amplifier connector.

b. Reconnect the A29 motor connector.

c. Measure the voltage according to the value(s) in the table below.


HINT:

*1: for LHD

*2: for RHD

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A29-2 (S) - Body ground	Engine switch on (G)	4. to . V

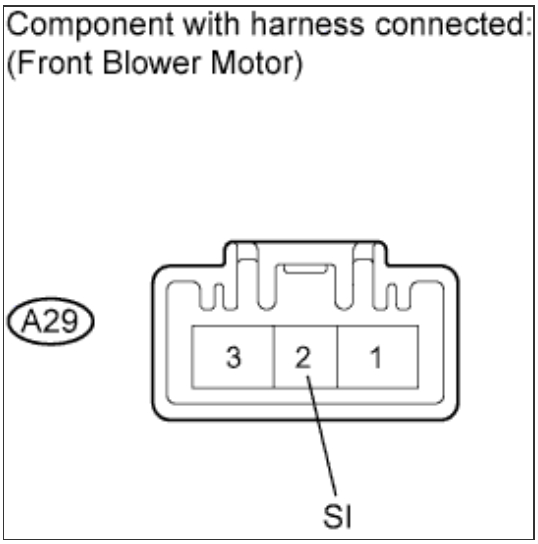

NG → REPLACE FRONT BLOWER MOTOR (Click here)

OK

5.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - FRONT BLOWER MOTOR)

a. w Rear Heater


i. Disconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
	Engine switch	

E36-3 (BLW) - E36-1 (GND)	on (G) Blower switch off	4. to . V

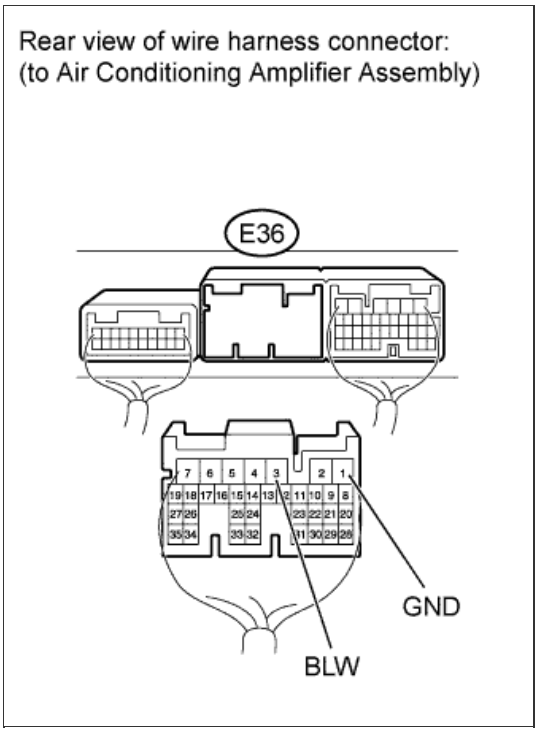


b. w o Rear Heater

i. Disconnect the E81 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-23 (BLW) - E81-1 (GND)	Engine switch on (G) Blower switch off	4. to . V

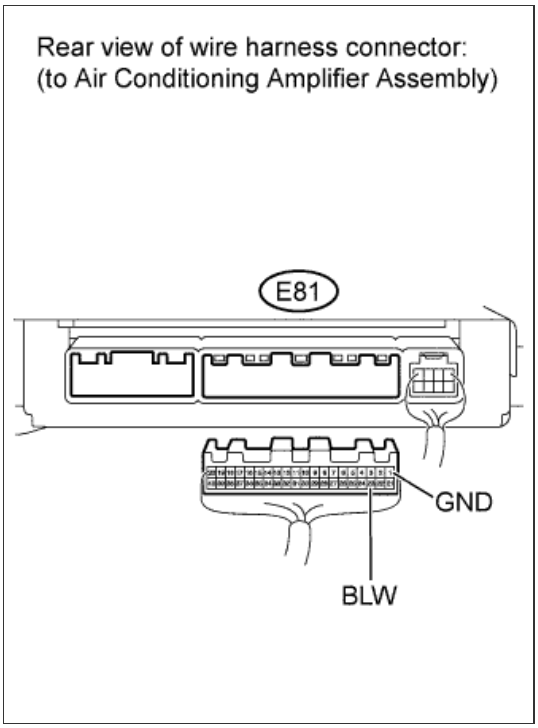

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

6.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - FRONT BLOWER MOTOR)

a. w Rear Heater


i. Disconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester	Switch	Specified

Connection	Condition	Condition
E36-3 (BLW) - E36-1 (GND)	Engine switch on (G) Blower switch off	4. to . V

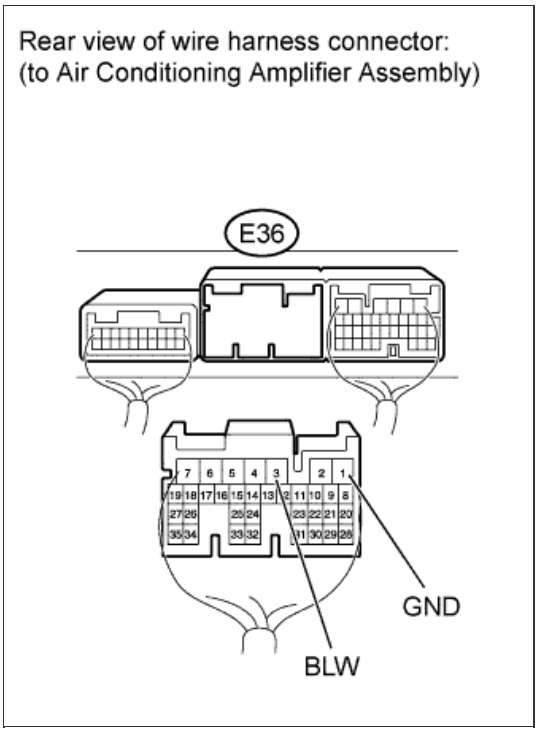


b. w o Rear Heater

i. Disconnect the E81 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-23 (BLW) - E81-1 (GND)	Engine switch on (G) Blower switch off	4. to . V

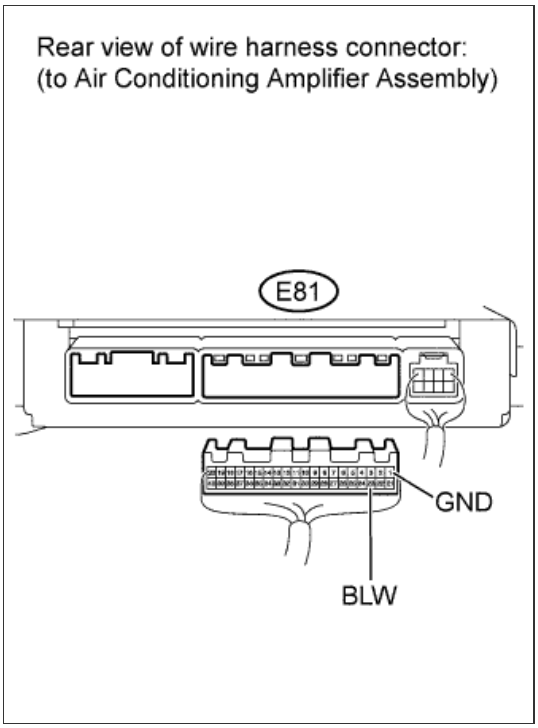

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY (BLW SIGNAL)

a. w Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. sing an oscilloscope, check the waveform.

Measurement Condition

tem	Content
Terminal No. (Symbol)	E36-3 (BLW) - E36-1 (GND)


Tool Setting	1 V D V., 00 sec. D V.
Condition	Engine switch on (G) Blower switch: off → on

OK:

Waveform is as shown in the illustration.

HINT:

Waveform varies with the blower level.

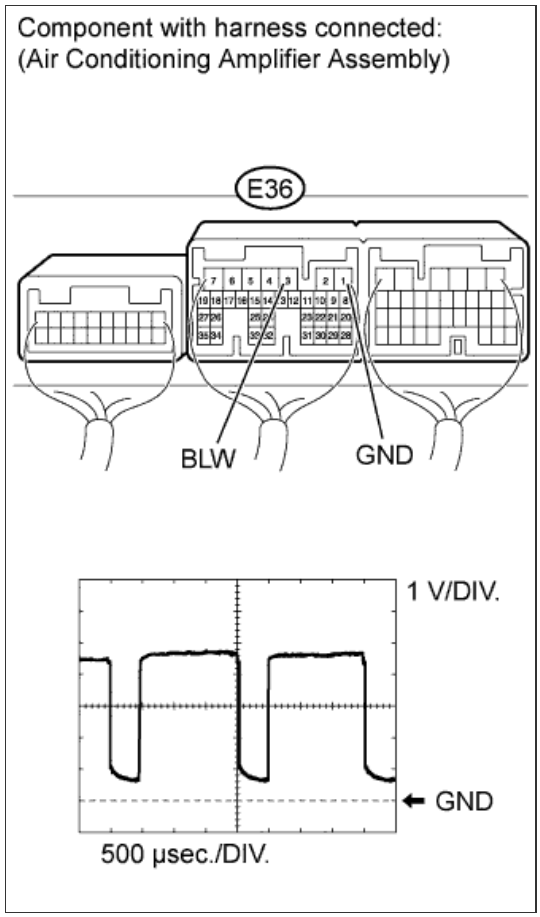

b. w o Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. sing an oscilloscope, check the waveform.

Measurement Condition


tem	Content
Terminal No. (Symbol)	E81-23 (BLW) - E81-1 (GND)
Tool Setting	1 V D V., 00 sec. D V.
Condition	Engine switch on (G) Blower switch: OFF → ON

OK:

Waveform is as shown in the illustration.

HINT:

Waveform varies with the blower level.

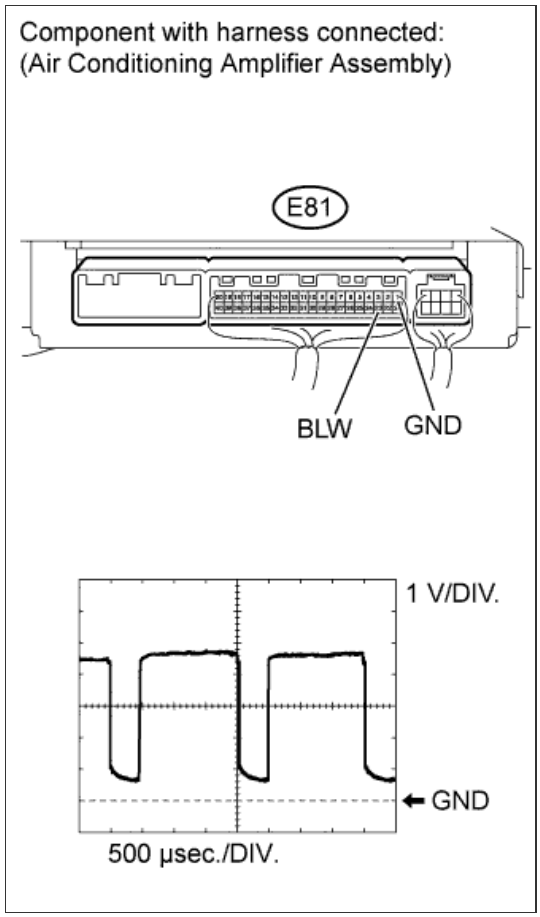


NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK → REPLACE FRONT BLOWER MOTOR (Click here)


for Preparation Click here


DESCRIPTION

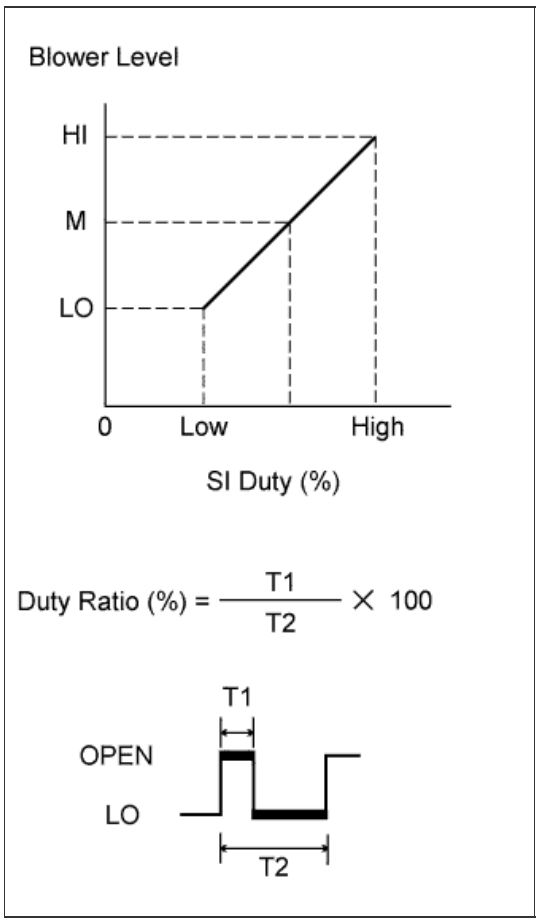

The blower motor is operated by signals from the air conditioning amplifier assembly. The blower motor speed signals are transmitted by changes in the duty ratio.
Duty Ratio:
The duty ratio is the ratio of the blower motor OPEN time (T1) to the total of the blower motor OPEN and LO time (T2).
The blower motor controller controls the blower motor speed.

WIRING DIAGRAM

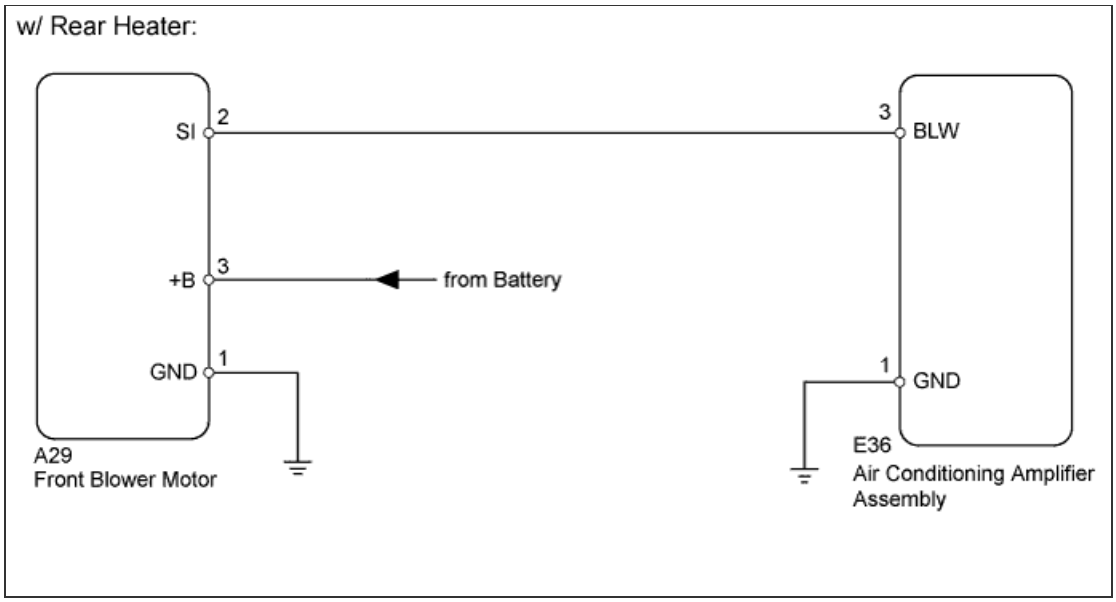

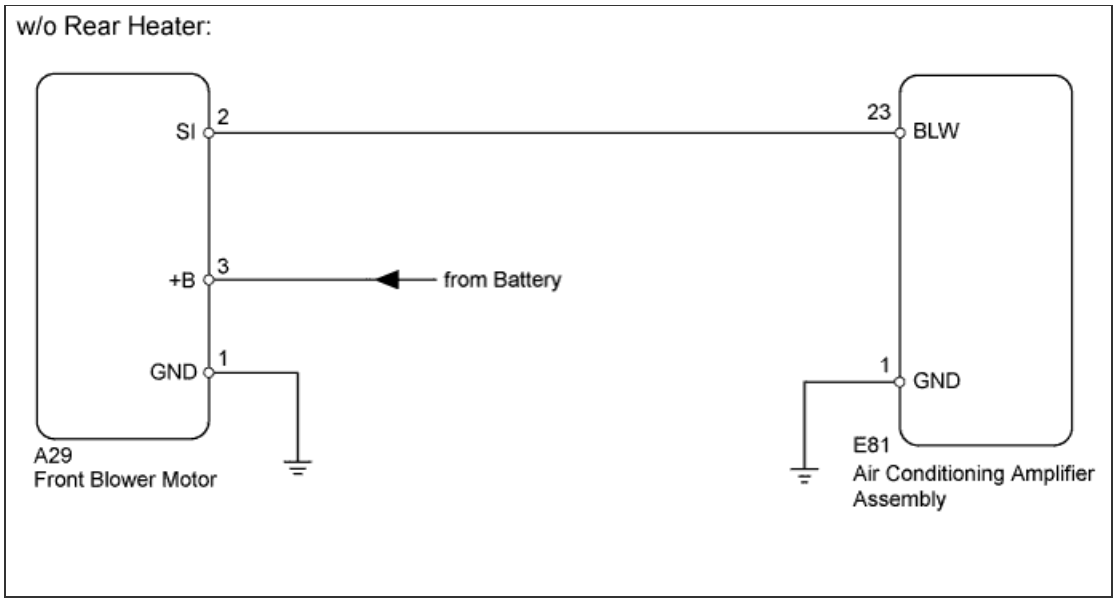

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (FRONT BLOWER MOTOR)

a. Select the Active Test, use the intelligent tester to generate a control command, and then check that the front blower motor operates.

Air Conditioner

Tester Display	Test Part	Control Range	Diagnostic Note
Blower Motor	Front blower motor	Min.: 0, Max.: 31	-

Result

Result	Proceed to
Front blower motor operates normally	A
Front blower motor does not operate	B
Front blower motor operates but does not change speed	C

B	Go to step 2
C	Go to step 6

A

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)


2.CHECK HARNESS AND CONNECTOR (FRONT BLOWER MOTOR - BODY GROUND)

a. Disconnect the A29 motor connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A29-1 (GND) - Body ground	Always	Below 1 Ω

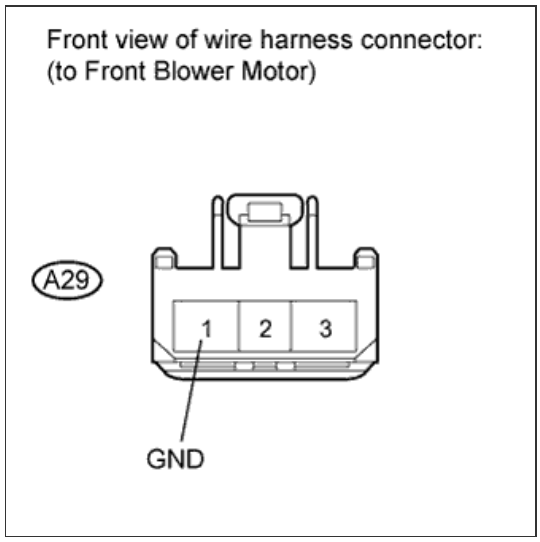

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


3.CHECK HARNESS AND CONNECTOR (FRONT BLOWER MOTOR - BATTERY)

a. Disconnect the A29 motor connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
A29-3 (+B) - Body ground	Always	11 to 14 V

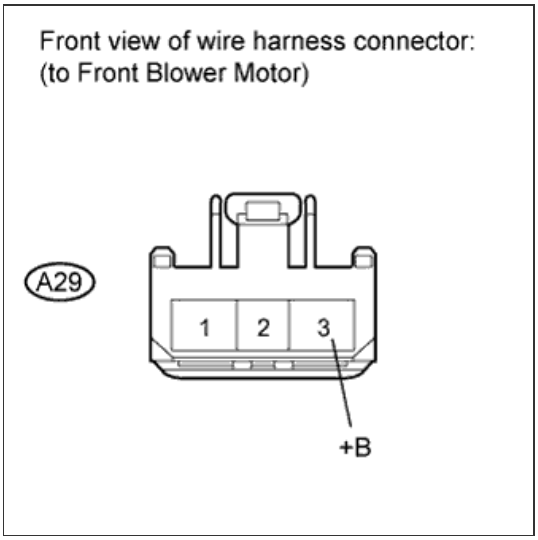

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK FRONT BLOWER MOTOR (SI VOLTAGE)

a. Disconnect the E36*1 or E81*2 amplifier connector.

b. Reconnect the A29 motor connector.

c. Measure the voltage according to the value(s) in the table below.


HINT:

*1: for LHD

*2: for RHD

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A29-2 (S) - Body ground	Engine switch on (G)	4. to . V

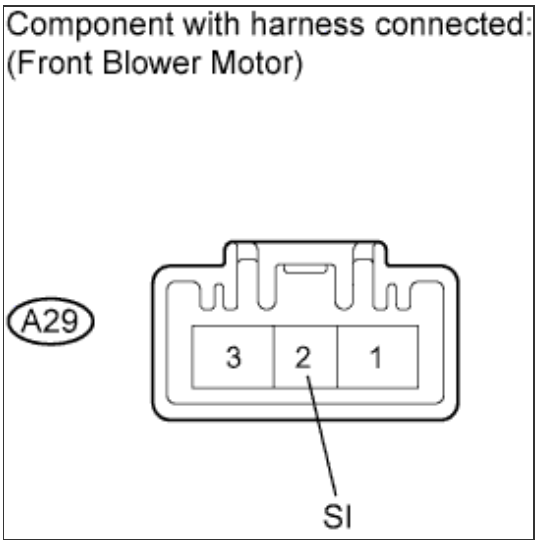

NG → REPLACE FRONT BLOWER MOTOR (Click here)

OK

5.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - FRONT BLOWER MOTOR)

a. w Rear Heater


i. Disconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
	Engine switch	

E36-3 (BLW) - E36-1 (GND)	on (G) Blower switch off	4. to . V

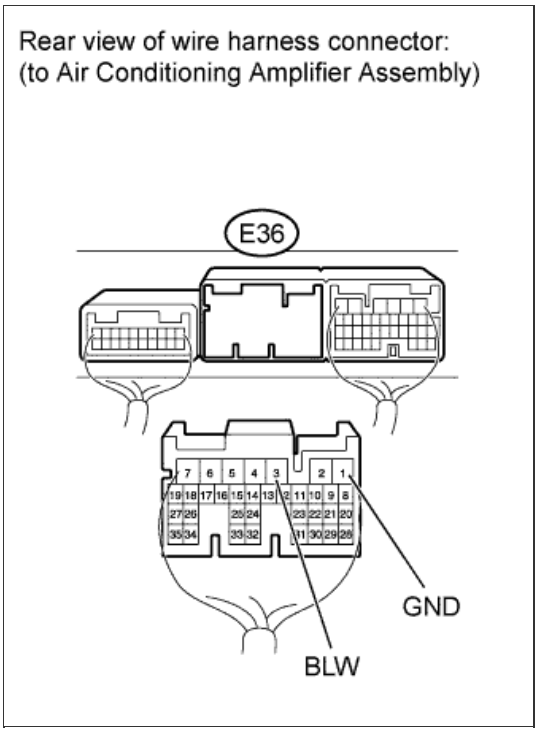


b. w o Rear Heater

i. Disconnect the E81 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-23 (BLW) - E81-1 (GND)	Engine switch on (G) Blower switch off	4. to . V

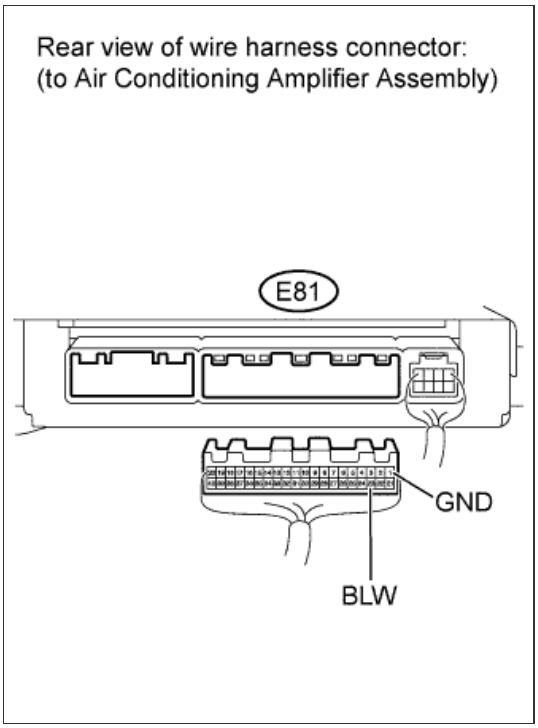

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

6.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - FRONT BLOWER MOTOR)

a. w Rear Heater


i. Disconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester	Switch	Specified

Connection	Condition	Condition
E36-3 (BLW) - E36-1 (GND)	Engine switch on (G) Blower switch off	4. to . V

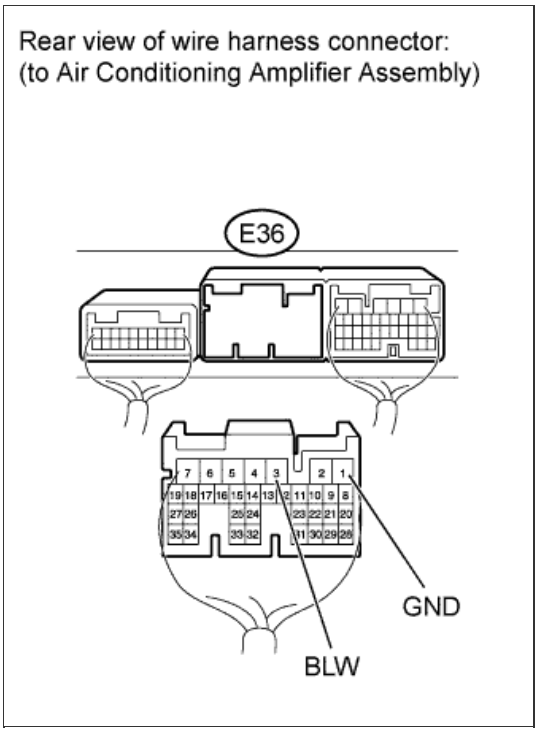


b. w o Rear Heater

i. Disconnect the E81 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-23 (BLW) - E81-1 (GND)	Engine switch on (G) Blower switch off	4. to . V

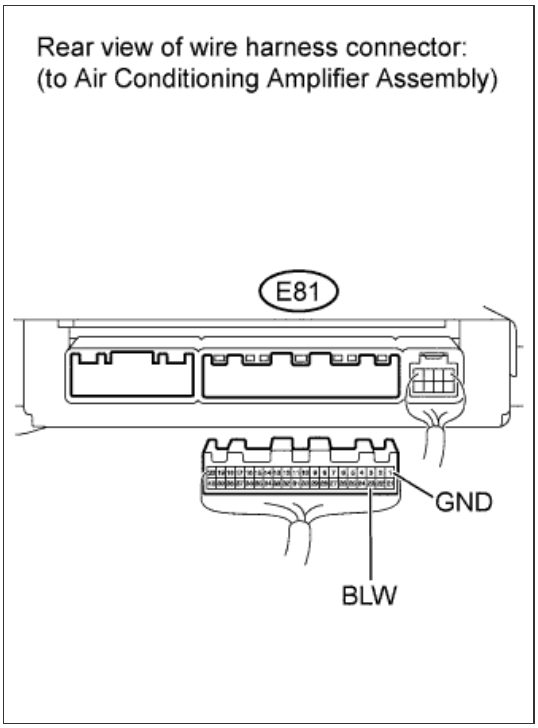

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY (BLW SIGNAL)

a. w Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. sing an oscilloscope, check the waveform.

Measurement Condition

tem	Content
Terminal No. (Symbol)	E36-3 (BLW) - E36-1 (GND)


Tool Setting	1 V D V., 00 sec. D V.
Condition	Engine switch on (G) Blower switch: off → on

OK:

Waveform is as shown in the illustration.

HINT:

Waveform varies with the blower level.

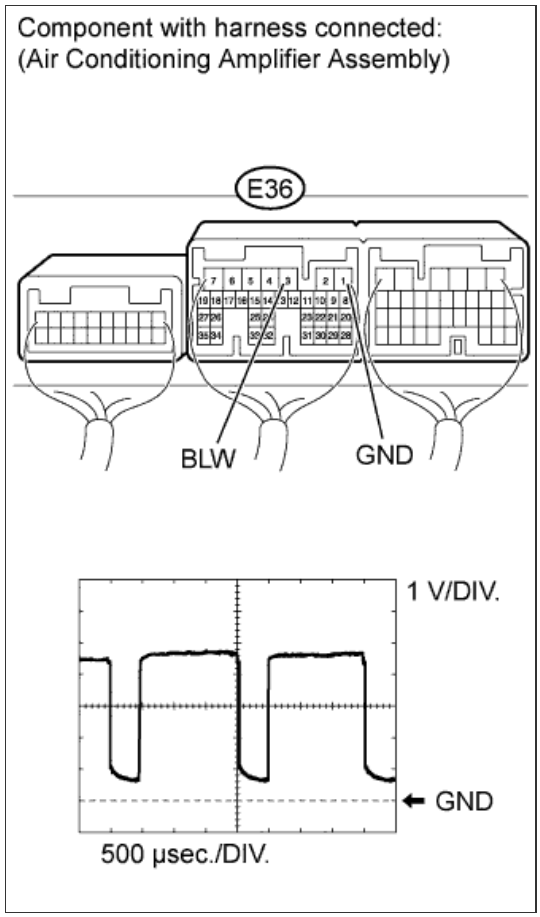

b. w o Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. sing an oscilloscope, check the waveform.

Measurement Condition


tem	Content
Terminal No. (Symbol)	E81-23 (BLW) - E81-1 (GND)
Tool Setting	1 V D V., 00 sec. D V.
Condition	Engine switch on (G) Blower switch: OFF → ON

OK:

Waveform is as shown in the illustration.

HINT:

Waveform varies with the blower level.

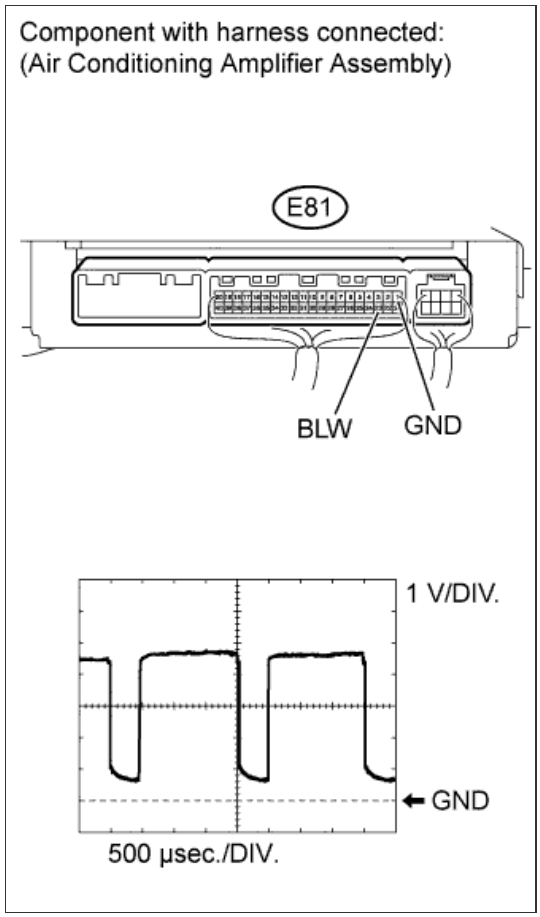


NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK → REPLACE FRONT BLOWER MOTOR (Click here)


for Preparation Click here


DESCRIPTION

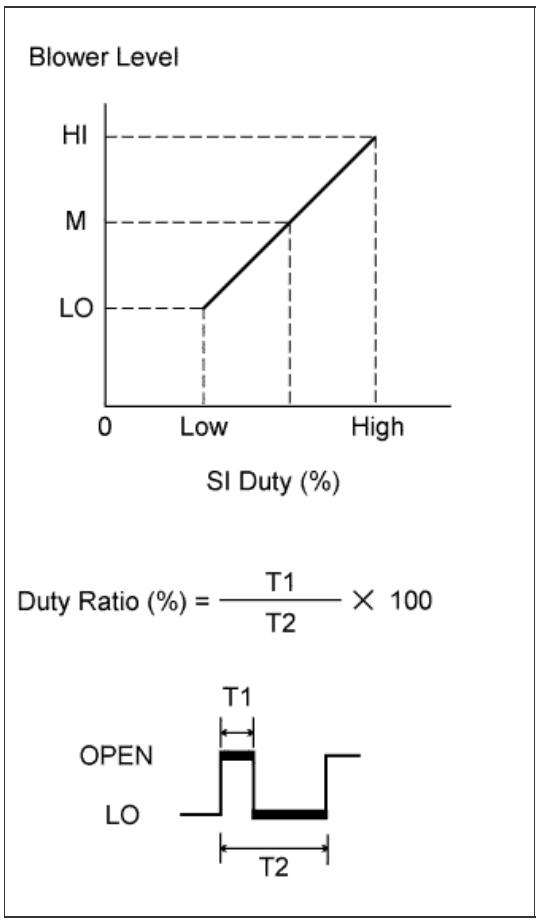

The blower motor is operated by signals from the air conditioning amplifier assembly. The blower motor speed signals are transmitted by changes in the duty ratio.
Duty Ratio:
The duty ratio is the ratio of the blower motor OPEN time (T1) to the total of the blower motor OPEN and LO time (T2).
The blower motor controller controls the blower motor speed.

WIRING DIAGRAM

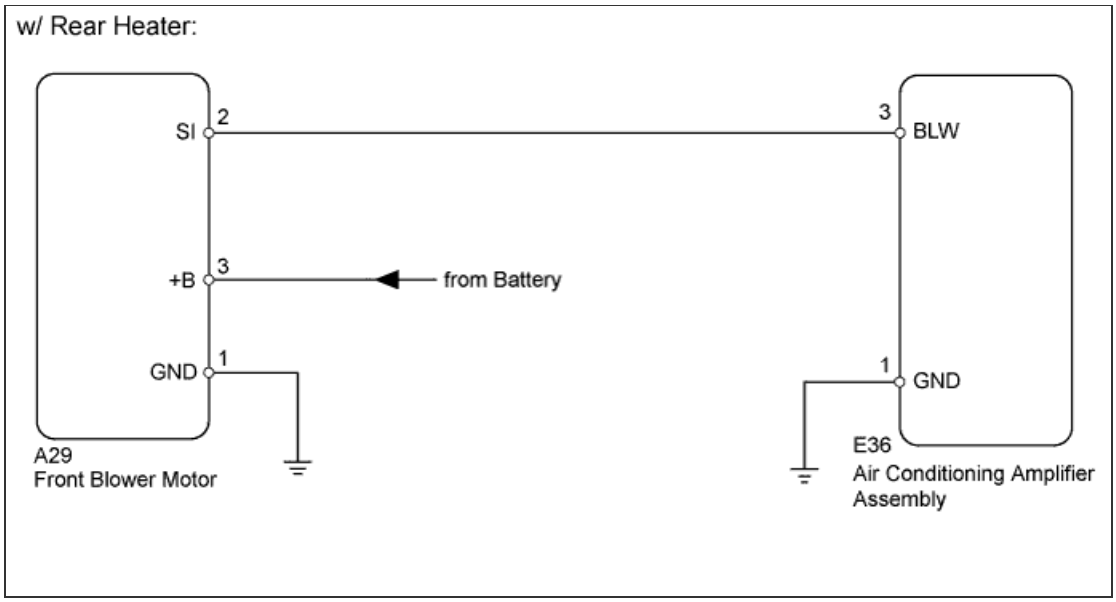

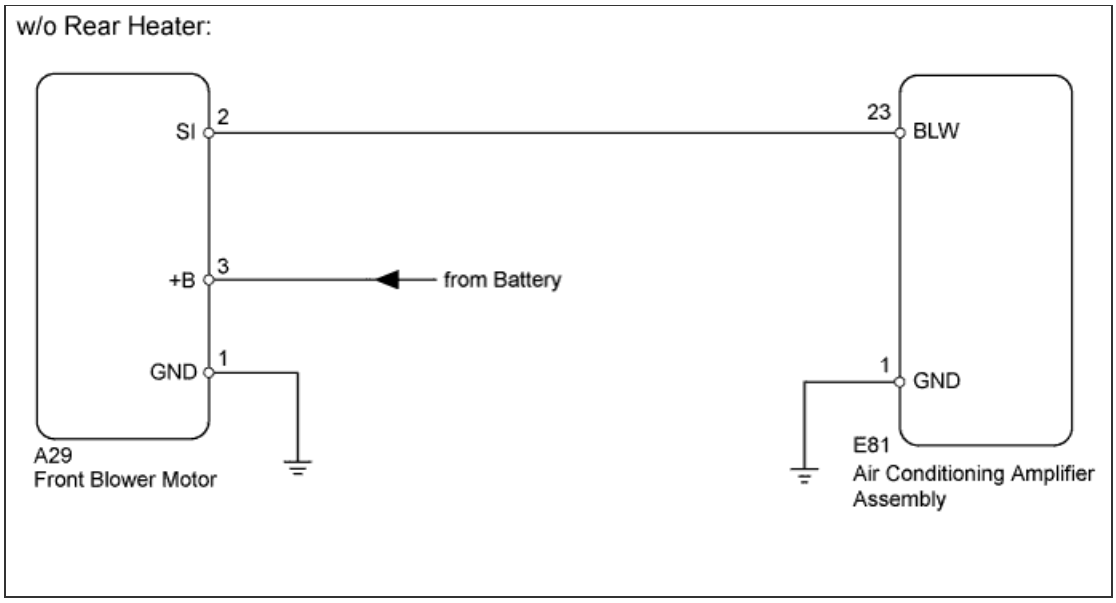

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (FRONT BLOWER MOTOR)

a. Select the Active Test, use the intelligent tester to generate a control command, and then check that the front blower motor operates.

Air Conditioner

Tester Display	Test Part	Control Range	Diagnostic Note
Blower Motor	Front blower motor	Min.: 0, Max.: 31	-

Result

Result	Proceed to
Front blower motor operates normally	A
Front blower motor does not operate	B
Front blower motor operates but does not change speed	C

B	Go to step 2
C	Go to step 6

A

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)


2.CHECK HARNESS AND CONNECTOR (FRONT BLOWER MOTOR - BODY GROUND)

a. Disconnect the A29 motor connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A29-1 (GND) - Body ground	Always	Below 1 Ω

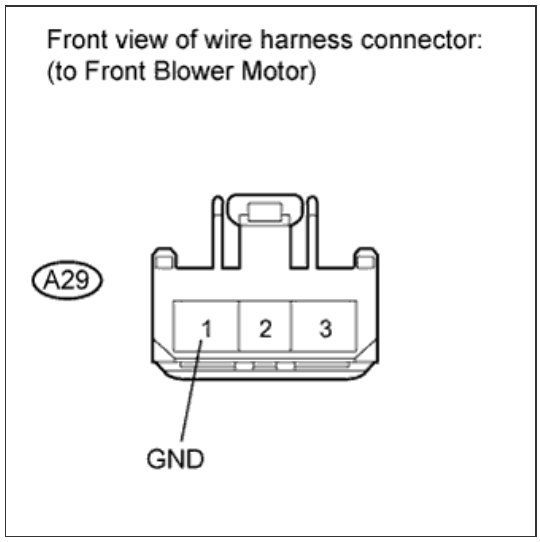

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


3.CHECK HARNESS AND CONNECTOR (FRONT BLOWER MOTOR - BATTERY)

a. Disconnect the A29 motor connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
A29-3 (+B) - Body ground	Always	11 to 14 V

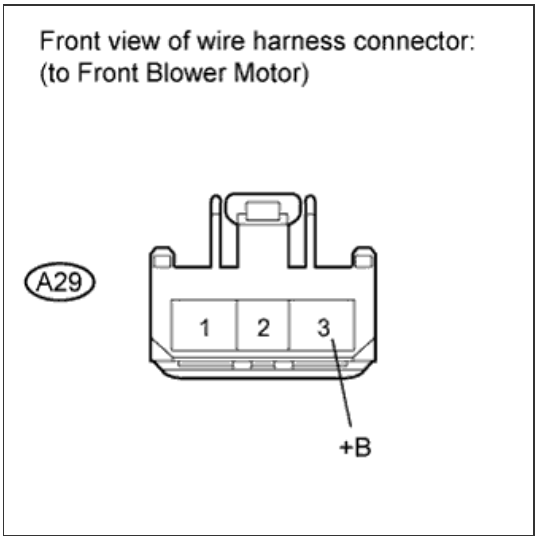

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK FRONT BLOWER MOTOR (SI VOLTAGE)

a. Disconnect the E36*1 or E81*2 amplifier connector.

b. Reconnect the A29 motor connector.

c. Measure the voltage according to the value(s) in the table below.


HINT:

*1: for LHD

*2: for RHD

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
A29-2 (S) - Body ground	Engine switch on (G)	4. to . V

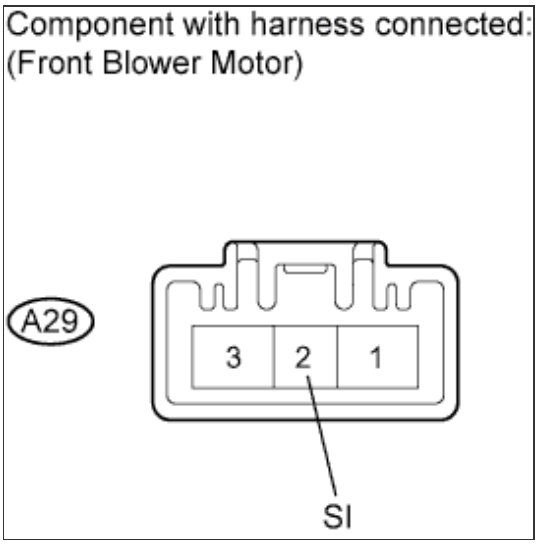

NG → REPLACE FRONT BLOWER MOTOR (Click here)

OK

5.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - FRONT BLOWER MOTOR)

a. w Rear Heater


i. Disconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
	Engine switch	

E36-3 (BLW) - E36-1 (GND)	on (G) Blower switch off	4. to . V

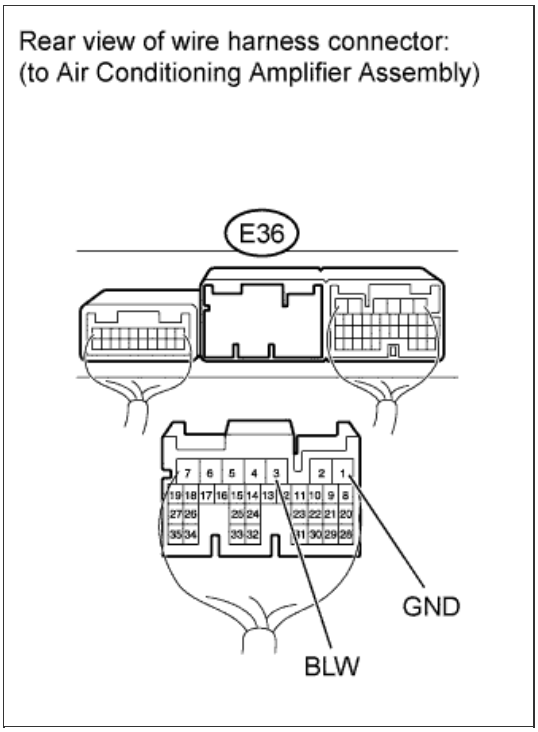


b. w o Rear Heater

i. Disconnect the E81 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-23 (BLW) - E81-1 (GND)	Engine switch on (G) Blower switch off	4. to . V

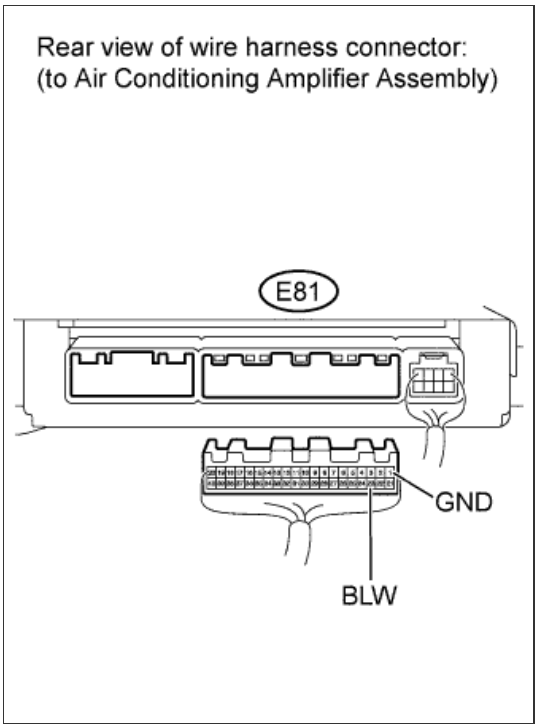

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

6.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - FRONT BLOWER MOTOR)

a. w Rear Heater


i. Disconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester	Switch	Specified

Connection	Condition	Condition
E36-3 (BLW) - E36-1 (GND)	Engine switch on (G) Blower switch off	4. to . V

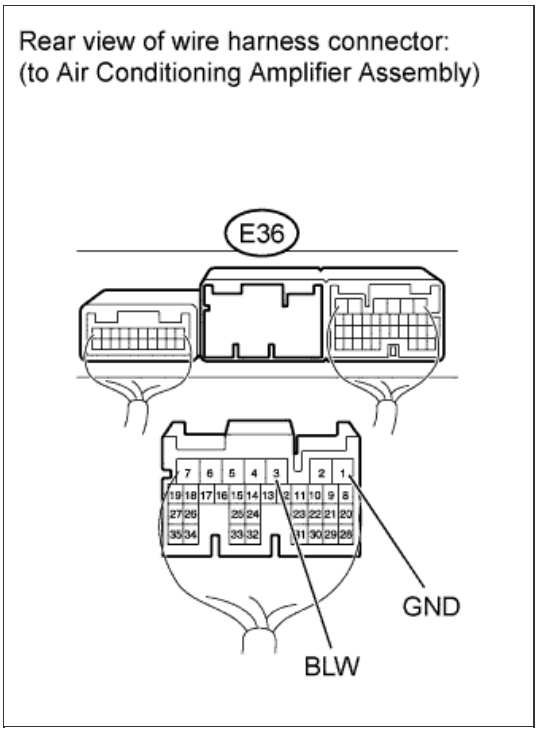


b. w o Rear Heater

i. Disconnect the E81 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-23 (BLW) - E81-1 (GND)	Engine switch on (G) Blower switch off	4. to . V

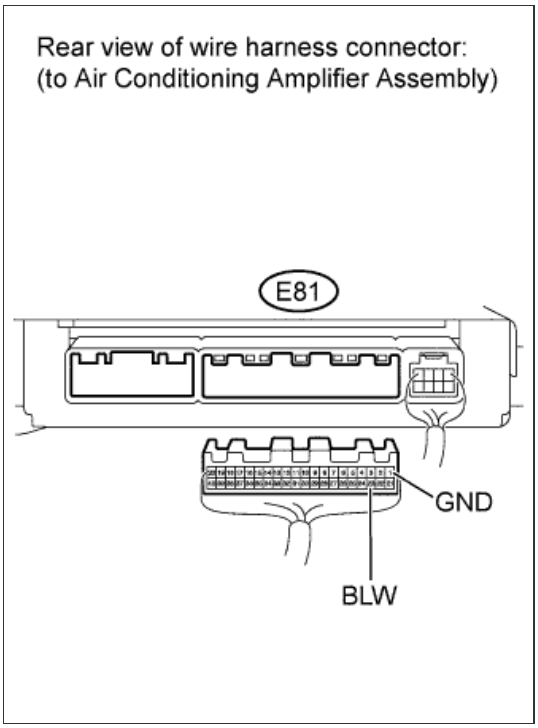

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

7.CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY (BLW SIGNAL)

a. w Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. sing an oscilloscope, check the waveform.

Measurement Condition

tem	Content
Terminal No. (Symbol)	E36-3 (BLW) - E36-1 (GND)


Tool Setting	1 V D V., 00 sec. D V.
Condition	Engine switch on (G) Blower switch: off → on

OK:

Waveform is as shown in the illustration.

HINT:

Waveform varies with the blower level.

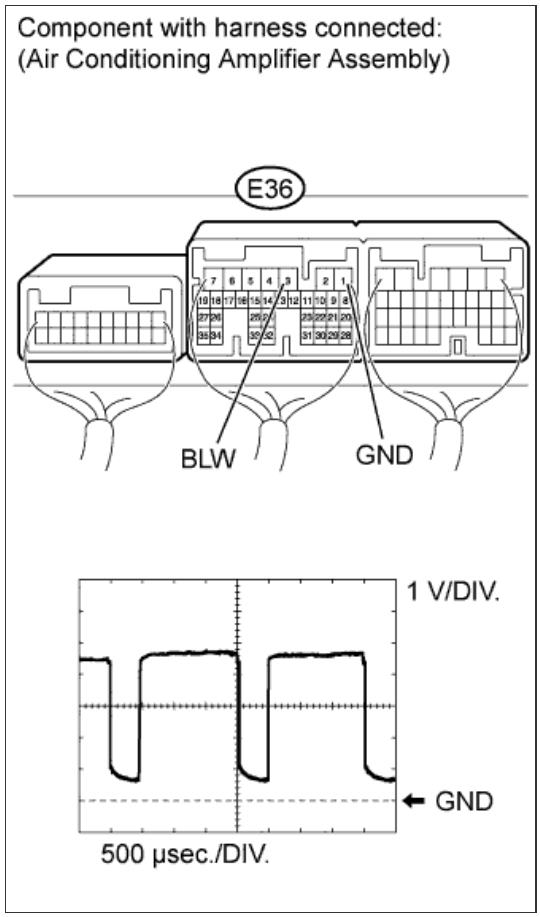

b. w o Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. sing an oscilloscope, check the waveform.

Measurement Condition


tem	Content
Terminal No. (Symbol)	E81-23 (BLW) - E81-1 (GND)
Tool Setting	1 V D V., 00 sec. D V.
Condition	Engine switch on (G) Blower switch: OFF → ON

OK:

Waveform is as shown in the illustration.

HINT:

Waveform varies with the blower level.

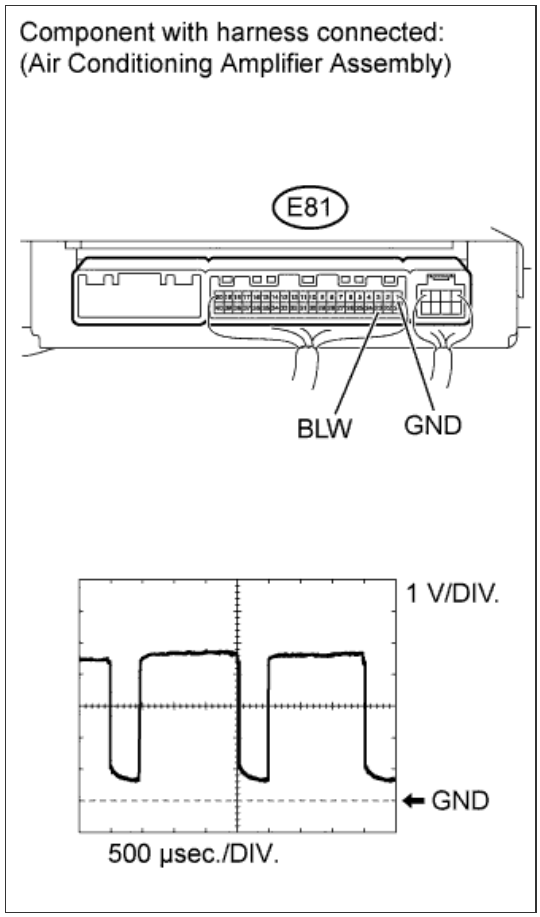

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK → REPLACE FRONT BLOWER MOTOR (Click here)

for Preparation Click here

DESCRIPTION


The temperature control switch assembly LH and RH sends the temperature up and down signal to the air conditioning amplifier assembly through the multi-display*1 or the air conditioning control assembly*2.


HINT:

*1: w/ Multi-display

*2: w/o Multi-display

WIRING DIAGRAM

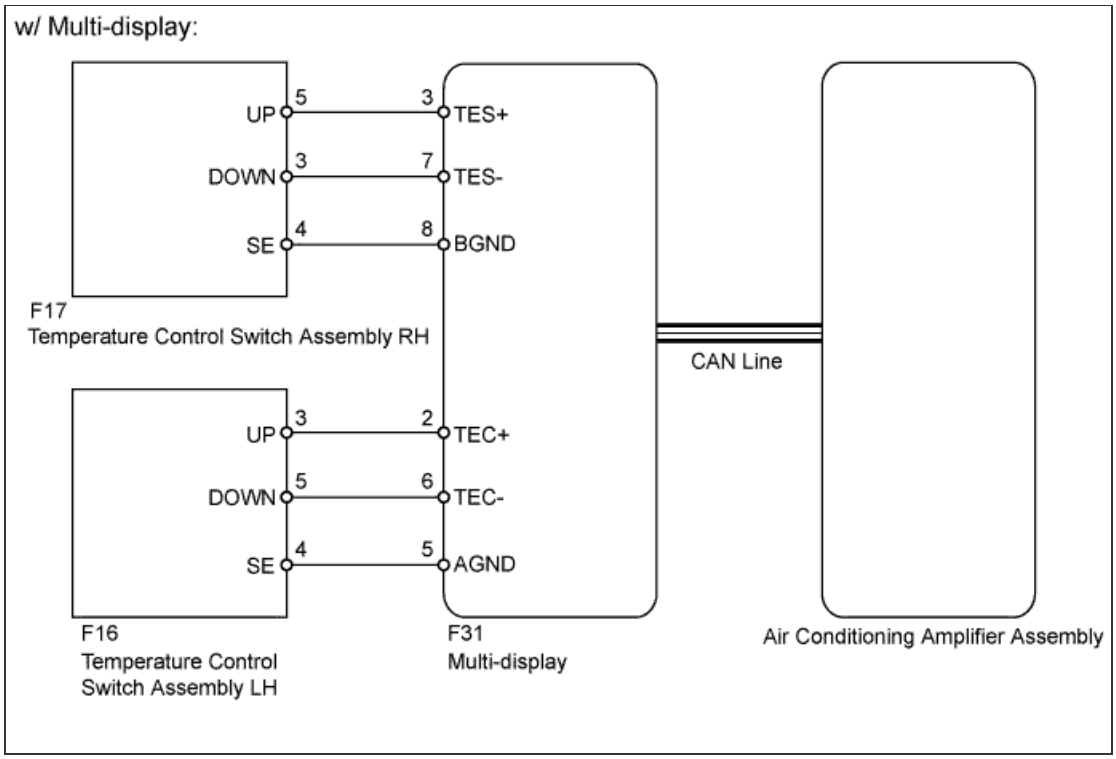

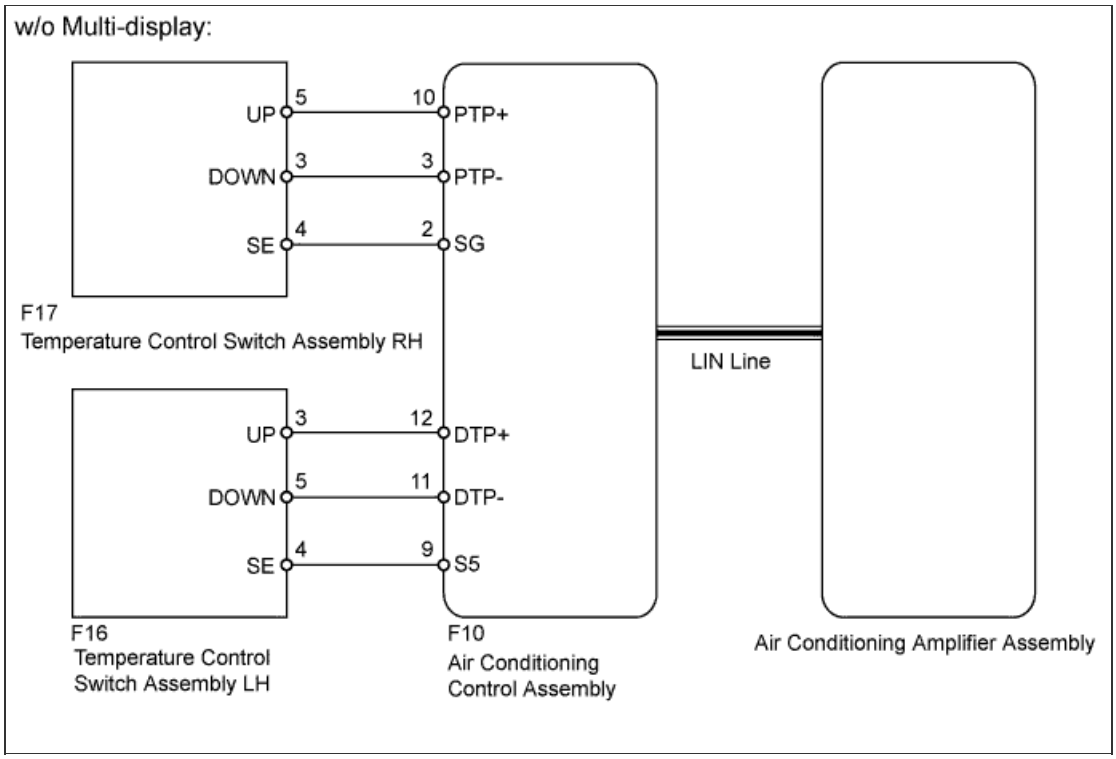

INSPECTION PROCEDURE

1.CHECK VEHICLE TYPE

a. Check if the vehicle is equipped with the multi-display.

Result

Result	Proceed to
w/ Multi-display	A
w/o Multi-display	B

B → Go to step 8

A

2.CHECK CAN COMMUNICATION SYSTEM

a. Check the CAN communication system.

OK:

CAN communication system has no problem.

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (Click here)

A

3.CHECK OPERATION

a. Check that the temperature control switches operate.

Result

Result	Proceed to

Temperature control switch LH does not operate	A
Temperature control switch RH does not operate	B

B → Go to step 6

A

4.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY LH


a. Remove the temperature control switch assembly LH (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
3 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
5 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω
	DOWN switch not pressed	10 kΩ or higher

Component without harness connected:
(Temperature Control Switch Assembly LH)

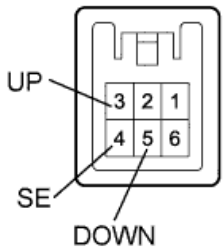

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY LH (Click here)

OK

5.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH LH - MULTI-DISPLAY)

a. Disconnect the F16 switch connector.


b. Disconnect the F31 display connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
F16-3 (UP) - F31-2 (TEC+)	Always	Below 1 Ω
F16-5 (DOWN) - F31-6 (TEC-)	Always	Below 1 Ω
F16-4 (SE) - F31-5 (AGND)	Always	Below 1 Ω
F16-3 (UP) - Body ground	Always	10 kΩ or higher
F16-5 (DOWN) - Body ground	Always	10 kΩ or higher
F16-4 (SE) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector: (to Temperature Control Switch Assembly LH)

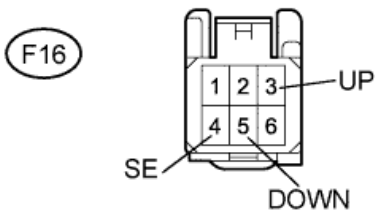

Front view of wire harness connector: (to Multi-display)

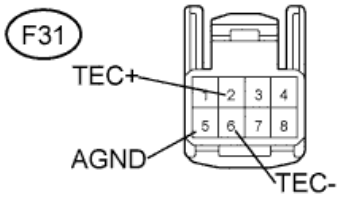

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MULTI-DISPLAY (Click here)

6.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY RH


a. Remove the temperature control switch assembly RH (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
5 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
3 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω
	DOWN switch not pressed	10 kΩ or higher

Component without harness connected: (Temperature Control Switch Assembly RH)

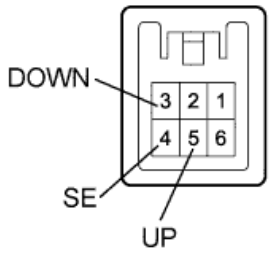

NG

REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY RH (Click here)

OK

7.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH RH - MULTI-DISPLAY)

a. Disconnect the F17 switch connector.


b. Disconnect the F31 display connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
F17-5 (UP) - F31-3 (TES+)	Always	Below 1 Ω
F17-3 (DOWN) - F31-7 (TES-)	Always	Below 1 Ω
F17-4 (SE) - F31-8 (BGND)	Always	Below 1 Ω
F17-5 (UP) - Body ground	Always	10 kΩ or higher
F17-3 (DOWN) - Body ground	Always	10 kΩ or higher
F17-4 (SE) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector: (to Temperature Control Switch Assembly RH)

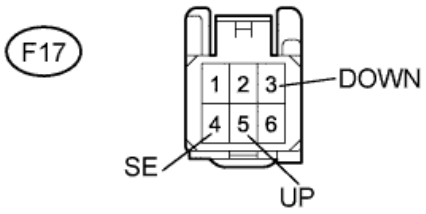

Front view of wire harness connector: (to Multi-display)

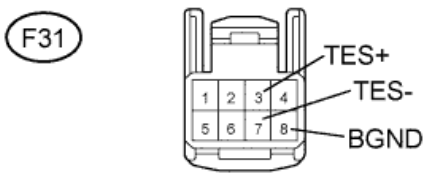

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MULTI-DISPLAY (Click here)

8.CHECK LIN COMMUNICATION SYSTEM

a. Check the L N communication system.

OK:
LIN communication system has no problem.

NG → GO TO LIN COMMUNICATION SYSTEM (Click here)

OK ↓

9.CHECK OPERATION

a. Check that the temperature control switches operate.

Result

Result	Proceed to
Temperature control switch LH does not operate	A
Temperature control switch RH does not operate	B

B → Go to step 12

A ↓

10.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY LH


a. Remove the temperature control switch assembly LH (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
3 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
5 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω
	DOWN switch not pressed	10 kΩ or higher

Component without harness connected:
(Temperature Control Switch Assembly LH)

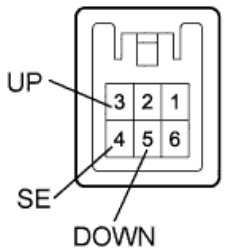

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY LH (Click here)

OK ↓

11.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH LH - AIR CONDITIONING CONTROL)

a. Disconnect the F16 switch connector.

b. Disconnect the F10 control connector.


c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition

F16-3 (UP) - F10-12 (DTP+)	Always	Below 1 Ω
F16-5 (DOWN) - F10-11 (DTP-)	Always	Below 1 Ω
F16-4 (SE) - F10-9 (S5)	Always	Below 1 Ω
F16-3 (UP) - Body ground	Always	10 kΩ or higher
F16-5 (DOWN) - Body ground	Always	10 kΩ or higher
F16-4 (SE) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector: (to Temperature Control Switch Assembly LH)

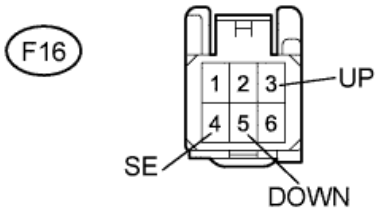

Front view of wire harness connector: (to Air Conditioning Control Assembly)

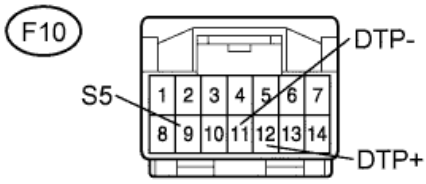

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING CONTROL ASSEMBLY (Click here)

12.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY RH


a. Remove the temperature control switch assembly RH (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
5 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
3 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω
	DOWN switch not pressed	10 kΩ or higher

Component without harness connected: (Temperature Control Switch Assembly RH)

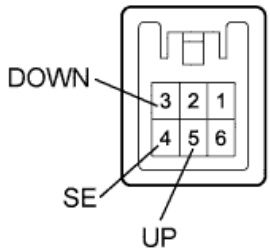

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY RH (Click here)

OK

13.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH RH - AIR CONDITIONING CONTROL)

a. Disconnect the F17 switch connector.


b. Disconnect the F10 control connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
F1 -5 (UP) - F10-10 (PTP+)	Always	Below 1 Ω
F17-3 (DOWN) - F10-3 (PTP-)	Always	Below 1 Ω
F17-4 (SE) - F10-2 (SG)	Always	Below 1 Ω
F17-5 (UP) - Body ground	Always	10 kΩ or higher
F17-3 (DOWN) - Body ground	Always	10 kΩ or higher
F17-4 (SE) - Body ground	Always	10 kΩ or higher

Front view of wire harness connector: (to Temperature Control Switch Assembly RH)

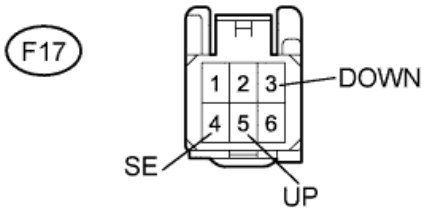

Front view of wire harness connector: (to Air Conditioning Control Assembly)

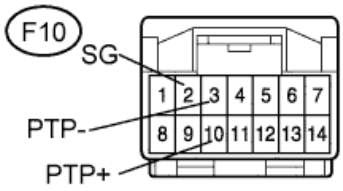

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING CONTROL ASSEMBLY (Click here)


for Preparation Click here


DESCRIPTION

The temperature control switch assembly LH and RH sends the temperature up and down signal to the air conditioning amplifier assembly through the display and navigation module display*1 or the air conditioning control assembly*2.

*1: w/ Navigation System
*2: w/o Navigation System

WIRING DIAGRAM

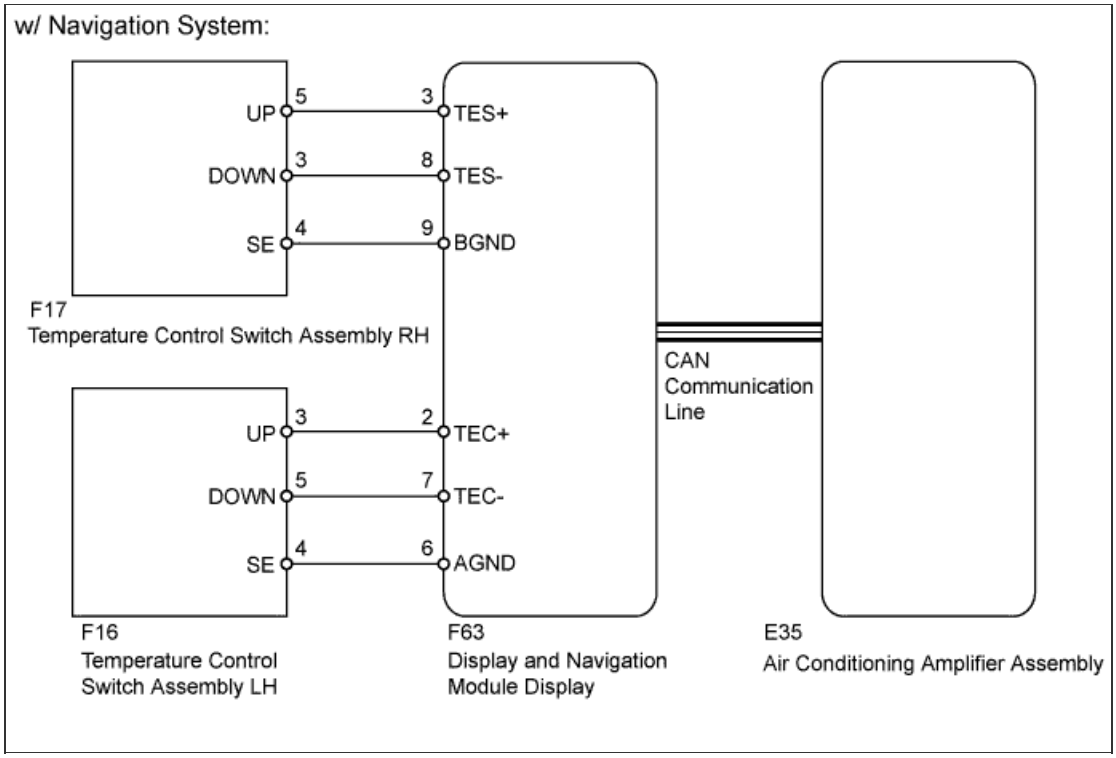

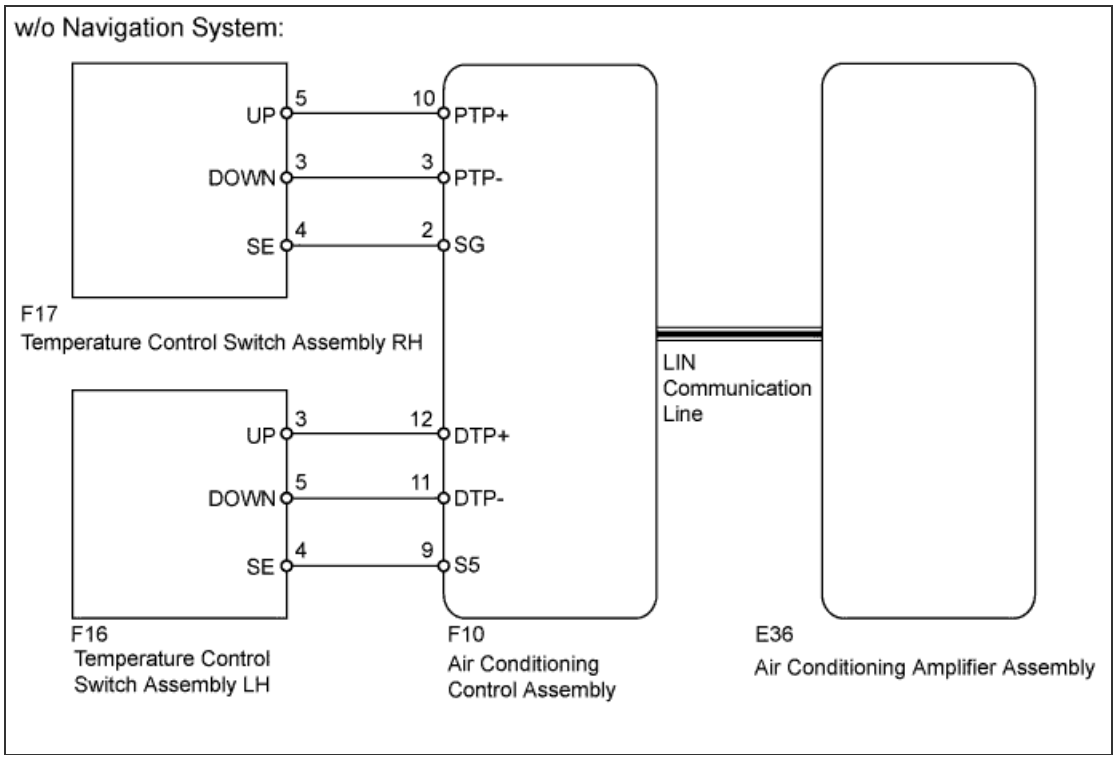

INSPECTION PROCEDURE

1.CHECK VEHICLE TYPE

a. Check if the vehicle is equipped with the navigation system.

Result

Result	Proceed to
w/ Navigation System	A
w/o Navigation System	B

B → Go to step 8

A

2.CHECK CAN COMMUNICATION SYSTEM

a. Check the CAN communication system.

OK:

CAN communication system has no problem.

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (Click here)

A

3.CHECK OPERATION

a. Check that the temperature control switches operate.

Result

Result	Proceed to
Temperature control switch LH does not operate	A
Temperature control switch RH does not operate	B

B → Go to step 6

A


4.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY LH

a. Remove the temperature control switch assembly LH (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
3 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
5 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω

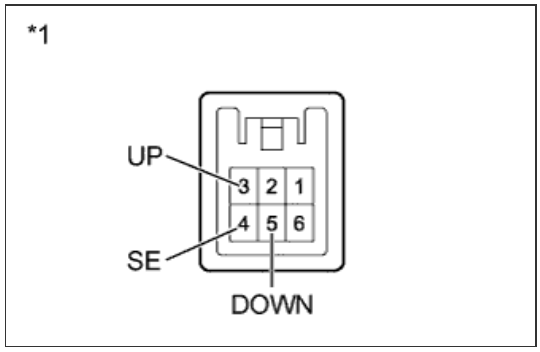

	DOWN switch not pressed	10 kΩ or higher

Text in Illustration

*1	Component without harness connected (to Temperature Control Switch Assembly LH)

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY LH (Click here)

OK

5.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH ASSEMBLY LH - DISPLAY AND NAVIGATION MODULE DISPLAY)

a. Disconnect the F16 temperature control switch assembly LH connector.

b. Disconnect the F63 display and navigation module display connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F16-3 (UP) - F63-2 (TEC)	Always	Below 1 Ω
F16-5 (DOWN) - F63- (TEC-)	Always	Below 1 Ω
F16-4 (SE) - F63-6 (AGND)	Always	Below 1 Ω
F16-3 (UP) - Body ground	Always	10 kΩ or higher
F16-5 (DOWN) - Body ground	Always	10 kΩ or higher
F16-4 (SE) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

REPLACE DISPLAY AND NAVIGATION MODULE DISPLAY (Click here)

6.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY RH

a. Remove the temperature control switch assembly RH (Click here).

b. Measure the resistance according to the value(s) in the table below.

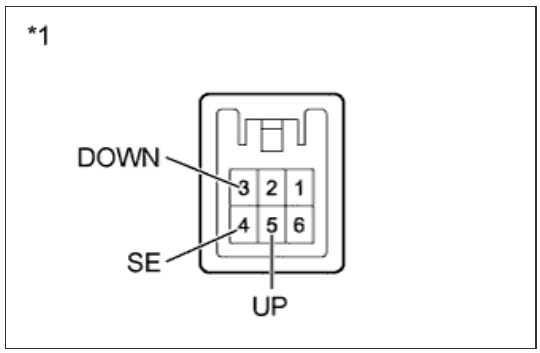

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
5 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
3 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω
	DOWN switch not pressed	10 kΩ or higher

Text in Illustration

*1	Component without harness connected (to Temperature Control Switch Assembly RH)

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY RH (Click here)

OK

7.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH ASSEMBLY RH - DISPLAY AND NAVIGATION MODULE DISPLAY)

a. Disconnect the F1 temperature control switch assembly RH connector.

b. Disconnect the F63 display and navigation module display connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F1 -5 (UP) - F63-3 (TES+)	Always	Below 1 Ω
F1 -3 (DOWN) - F63- (TES-)	Always	Below 1 Ω
F1 -4 (SE) - F63- (BGND)	Always	Below 1 Ω
F1 -5 (UP) - Body ground	Always	10 kΩ or higher
F1 -3 (DOWN) - Body ground	Always	10 kΩ or higher
F1 -4 (SE) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE DISPLAY AND NAVIGATION MODULE DISPLAY (Click here)

8.CHECK LIN COMMUNICATION SYSTEM

a. Check the L N communication system.

OK:

LIN communication system has no problem.

NG → GO TO LIN COMMUNICATION SYSTEM (Click here)

OK

9.CHECK OPERATION

a. Check that the temperature control switches operate.

Result

Result	Proceed to
Temperature control switch LH does not operate	A
Temperature control switch RH does not operate	B


B → Go to step 12

A

10.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY LH

a. Remove the temperature control switch assembly LH (Click here).

b. Measure the resistance according to the value(s) in the table below.

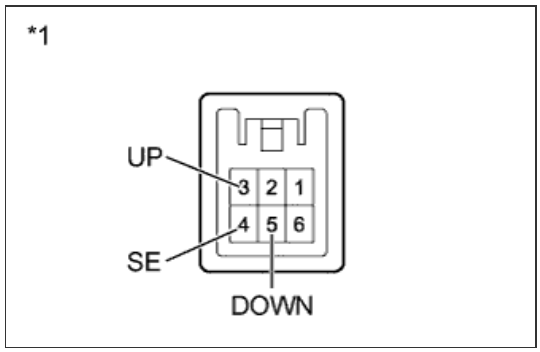

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
3 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
5 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω
	DOWN switch not pressed	10 kΩ or higher

Text in Illustration

*1	Component without harness connected (to Temperature Control Switch Assembly LH)

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY LH (Click here)

OK

11.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH ASSEMBLY LH - AIR CONDITIONING CONTROL ASSEMBLY)

a. Disconnect the F16 temperature control switch assembly LH connector.

b. Disconnect the F10 air conditioning control assembly connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F16-3 (UP) - F10-12 (DTP+)	Always	Below 1 Ω
F16-5 (DOWN) - F10-11 (DTP-)	Always	Below 1 Ω
F16-4 (SE) - F10-(S5)	Always	Below 1 Ω
F16-3 (UP) - Body ground	Always	10 kΩ or higher
F16-5 (DOWN) - Body ground	Always	10 kΩ or higher
F16-4 (SE) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING CONTROL ASSEMBLY (Click here)


12.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY RH

a. Remove the temperature control switch assembly RH (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
5 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
3 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω
	DOWN switch not pressed	10 kΩ or higher

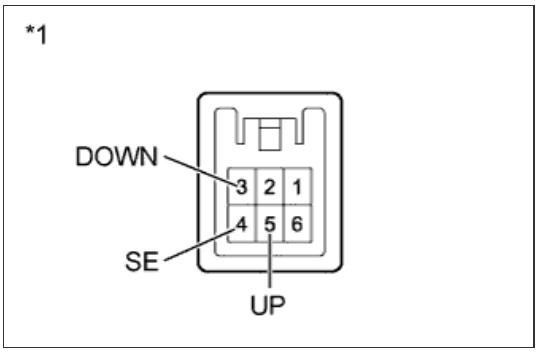

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY RH (Click here)

OK

13.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH ASSEMBLY RH - AIR CONDITIONING CONTROL ASSEMBLY)

a. Disconnect the F1 temperature control switch assembly RH connector.

b. Disconnect the F10 air conditioning control assembly connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F1 -5 (UP) - F10-10 (PTP+)	Always	Below 1 Ω
F1 -3 (DOWN) - F10-3 (PTP-)	Always	Below 1 Ω
F1 -4 (SE) - F10-2 (SG)	Always	Below 1 Ω
F1 -5 (UP) - Body ground	Always	10 kΩ or higher
F1 -3 (DOWN) - Body ground	Always	10 kΩ or higher
F1 -4 (SE) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING CONTROL ASSEMBLY (Click here)


for Preparation Click here


DESCRIPTION

The temperature control switch assembly LH and RH sends the temperature up and down signal to the air conditioning amplifier assembly through the display and navigation module display*1 or the air conditioning control assembly*2.

*1: w/ Navigation System
*2: w/o Navigation System

WIRING DIAGRAM

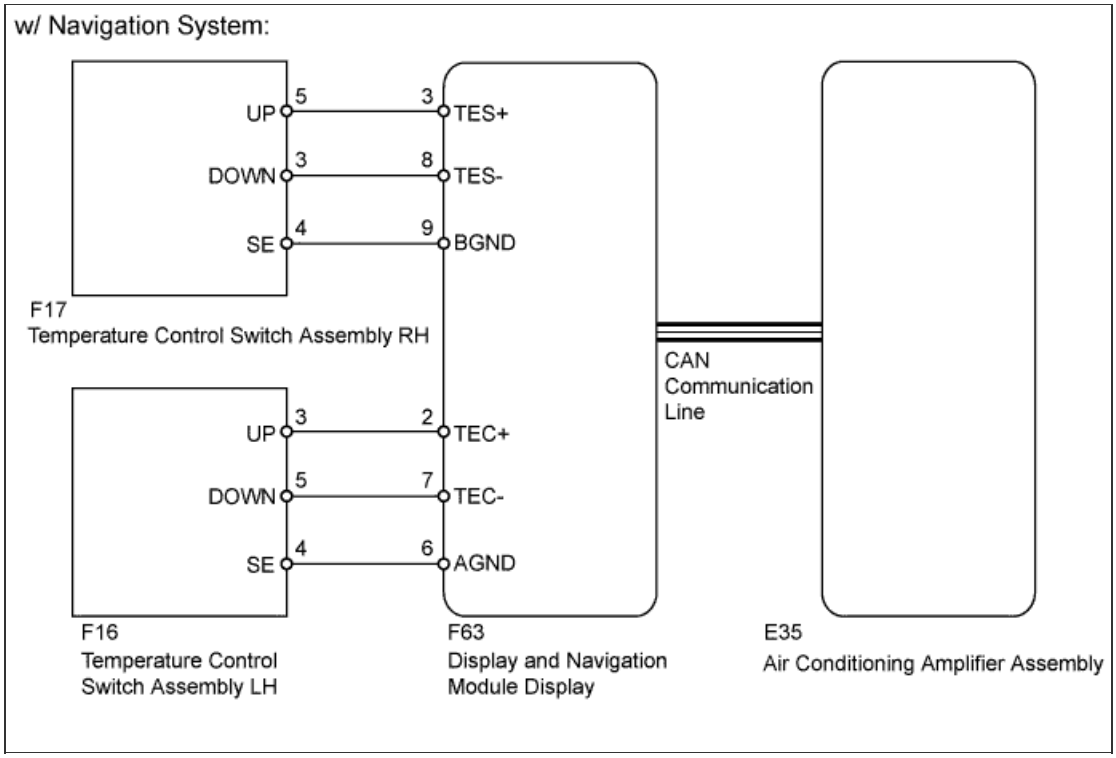

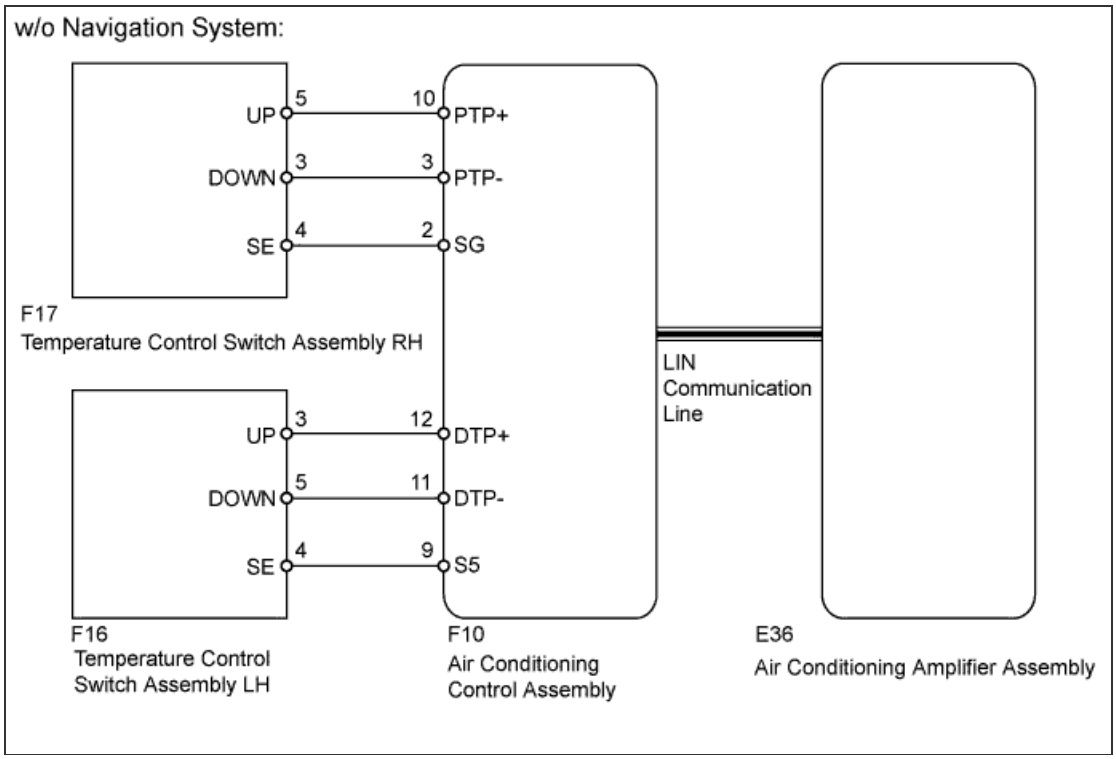

INSPECTION PROCEDURE

1.CHECK VEHICLE TYPE

a. Check if the vehicle is equipped with the navigation system.

Result

Result	Proceed to
w/ Navigation System	A
w/o Navigation System	B

B → Go to step 8

A

2.CHECK CAN COMMUNICATION SYSTEM

a. Check the CAN communication system.

OK:

CAN communication system has no problem.

Result

Result	Proceed to
OK	A
NG (for LHD)	B
NG (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (Click here)

A

3.CHECK OPERATION

a. Check that the temperature control switches operate.

Result

Result	Proceed to
Temperature control switch LH does not operate	A
Temperature control switch RH does not operate	B

B → Go to step 6

A


4.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY LH

a. Remove the temperature control switch assembly LH (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
3 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
5 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω

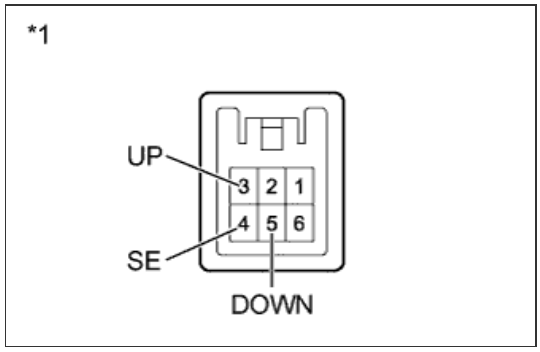

	DOWN switch not pressed	10 kΩ or higher

Text in Illustration

*1	Component without harness connected (to Temperature Control Switch Assembly LH)

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY LH (Click here)

OK

5.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH ASSEMBLY LH - DISPLAY AND NAVIGATION MODULE DISPLAY)

a. Disconnect the F16 temperature control switch assembly LH connector.

b. Disconnect the F63 display and navigation module display connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F16-3 (UP) - F63-2 (TEC)	Always	Below 1 Ω
F16-5 (DOWN) - F63- (TEC-)	Always	Below 1 Ω
F16-4 (SE) - F63-6 (AGND)	Always	Below 1 Ω
F16-3 (UP) - Body ground	Always	10 kΩ or higher
F16-5 (DOWN) - Body ground	Always	10 kΩ or higher
F16-4 (SE) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK

REPLACE DISPLAY AND NAVIGATION MODULE DISPLAY (Click here)

6.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY RH

a. Remove the temperature control switch assembly RH (Click here).

b. Measure the resistance according to the value(s) in the table below.

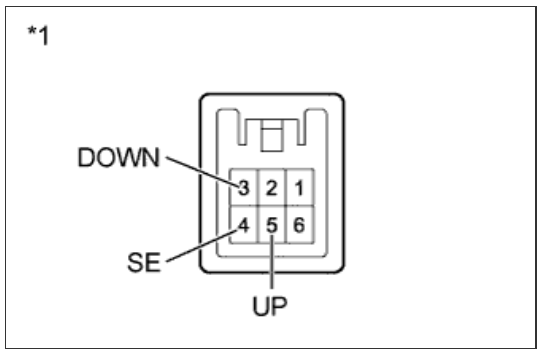

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
5 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
3 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω
	DOWN switch not pressed	10 kΩ or higher

Text in Illustration

*1	Component without harness connected (to Temperature Control Switch Assembly RH)

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY RH (Click here)

OK

7.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH ASSEMBLY RH - DISPLAY AND NAVIGATION MODULE DISPLAY)

a. Disconnect the F1 temperature control switch assembly RH connector.

b. Disconnect the F63 display and navigation module display connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F1 -5 (UP) - F63-3 (TES+)	Always	Below 1 Ω
F1 -3 (DOWN) - F63- (TES-)	Always	Below 1 Ω
F1 -4 (SE) - F63- (BGND)	Always	Below 1 Ω
F1 -5 (UP) - Body ground	Always	10 kΩ or higher
F1 -3 (DOWN) - Body ground	Always	10 kΩ or higher
F1 -4 (SE) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE DISPLAY AND NAVIGATION MODULE DISPLAY (Click here)

8.CHECK LIN COMMUNICATION SYSTEM

a. Check the L N communication system.

OK:

LIN communication system has no problem.

NG → GO TO LIN COMMUNICATION SYSTEM (Click here)

OK

9.CHECK OPERATION

a. Check that the temperature control switches operate.

Result

Result	Proceed to
Temperature control switch LH does not operate	A
Temperature control switch RH does not operate	B


B → Go to step 12

A

10.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY LH

a. Remove the temperature control switch assembly LH (Click here).

b. Measure the resistance according to the value(s) in the table below.

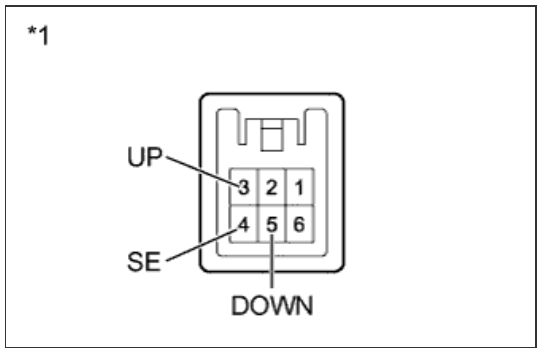

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
3 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
5 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω
	DOWN switch not pressed	10 kΩ or higher

Text in Illustration

*1	Component without harness connected (to Temperature Control Switch Assembly LH)

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY LH (Click here)

OK

11.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH ASSEMBLY LH - AIR CONDITIONING CONTROL ASSEMBLY)

a. Disconnect the F16 temperature control switch assembly LH connector.

b. Disconnect the F10 air conditioning control assembly connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F16-3 (UP) - F10-12 (DTP+)	Always	Below 1 Ω
F16-5 (DOWN) - F10-11 (DTP-)	Always	Below 1 Ω
F16-4 (SE) - F10-(S5)	Always	Below 1 Ω
F16-3 (UP) - Body ground	Always	10 kΩ or higher
F16-5 (DOWN) - Body ground	Always	10 kΩ or higher
F16-4 (SE) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING CONTROL ASSEMBLY (Click here)


12.INSPECT TEMPERATURE CONTROL SWITCH ASSEMBLY RH

a. Remove the temperature control switch assembly RH (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
5 (UP) - 4 (SE)	UP switch pressed	Below 1 Ω
	UP switch not pressed	10 kΩ or higher
3 (DOWN) - 4 (SE)	DOWN switch pressed	Below 1 Ω
	DOWN switch not pressed	10 kΩ or higher

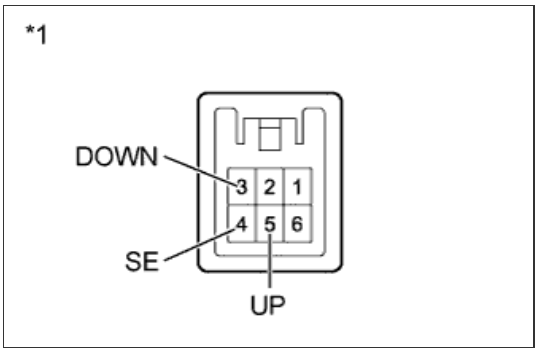

NG → REPLACE TEMPERATURE CONTROL SWITCH ASSEMBLY RH (Click here)

OK

13.CHECK HARNESS AND CONNECTOR (TEMPERATURE CONTROL SWITCH ASSEMBLY RH - AIR CONDITIONING CONTROL ASSEMBLY)

a. Disconnect the F1 temperature control switch assembly RH connector.

b. Disconnect the F10 air conditioning control assembly connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
F1 -5 (UP) - F10-10 (PTP+)	Always	Below 1 Ω
F1 -3 (DOWN) - F10-3 (PTP-)	Always	Below 1 Ω
F1 -4 (SE) - F10-2 (SG)	Always	Below 1 Ω
F1 -5 (UP) - Body ground	Always	10 kΩ or higher
F1 -3 (DOWN) - Body ground	Always	10 kΩ or higher
F1 -4 (SE) - Body ground	Always	10 kΩ or higher

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE AIR CONDITIONING CONTROL ASSEMBLY (Click here)


for Preparation Click here

DESCRIPTION

When the air conditioning amplifier assembly is turned on, a magnetic clutch on signal is sent from the MGC terminal of the air conditioning amplifier assembly. Then, the magnetic clutch relay turns on to operate the magnetic clutch.

WIRING DIAGRAM

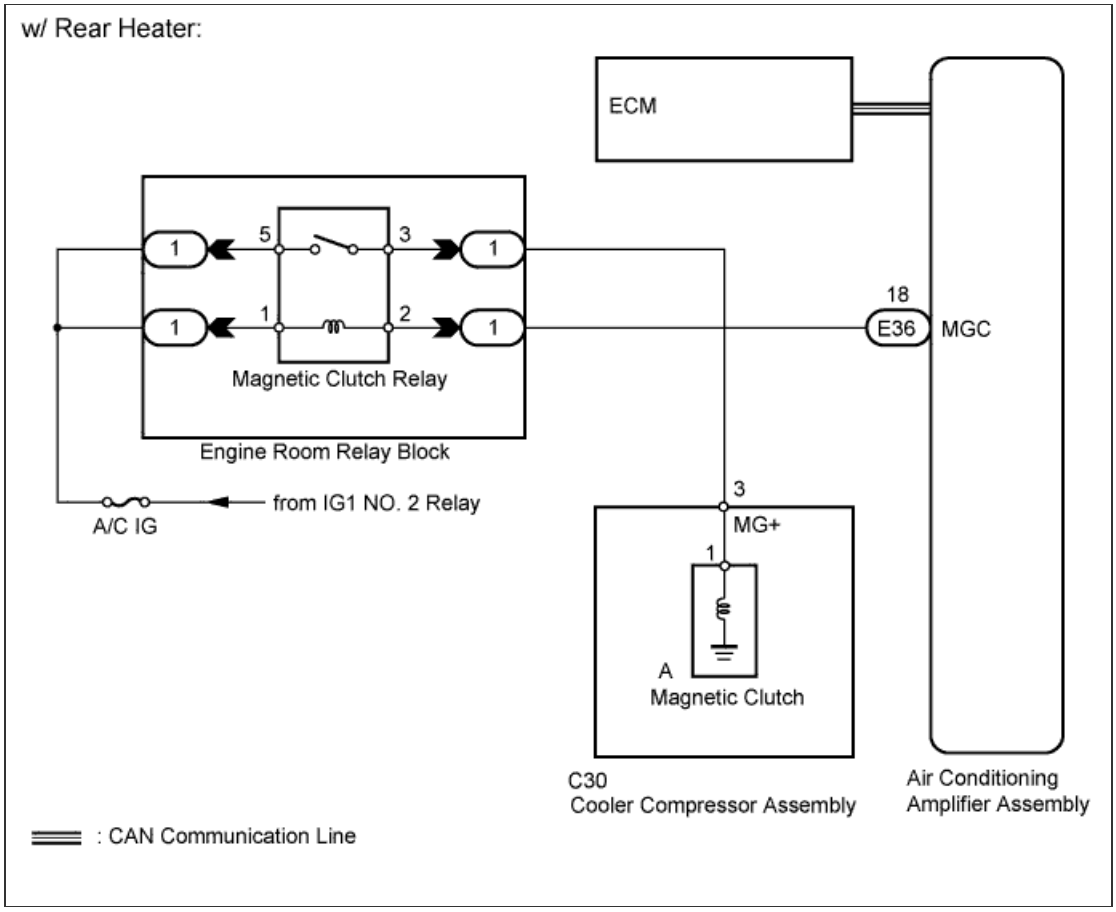

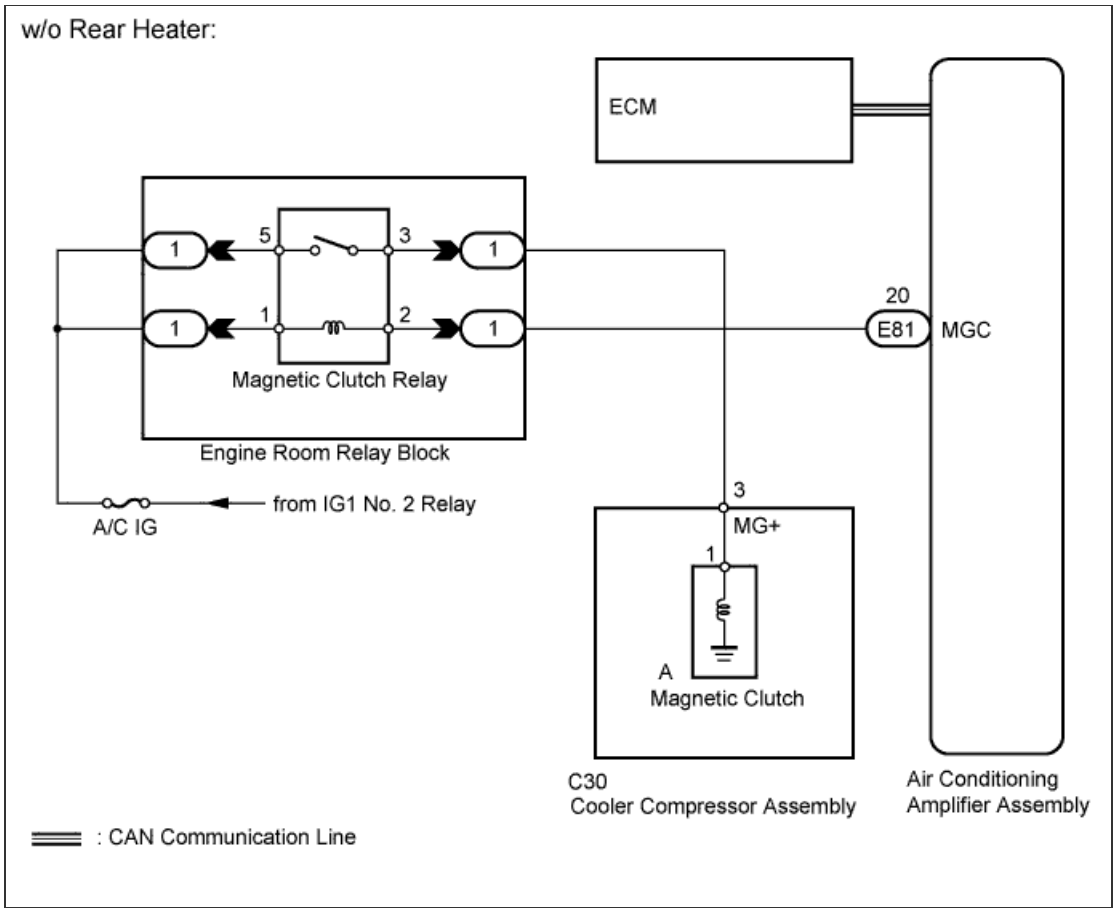

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for CAN communication system DTCs related to the air conditioning system.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (Click here)

A

2.READ VALUE USING INTELLIGENT TESTER (A/C SIGNAL)

a. Use the Data List to check if the A/C switch is functioning properly.

Engine

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
A/C Signal	A/C signal / ON or OFF	ON: A/C switch on OFF: A/C switch off	-

OK:

The display is as specified in the normal condition.

NG → Go to step 3

OK

REPLACE ECM (Click here)

3.INSPECT FUSE (A/C IG)

a. Remove the A/C IG fuse from the cowl side unction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C IG fuse	Always	Below 1 Ω

NG → REPLACE FUSE (A/C IG)

OK


4.INSPECT MAGNETIC CLUTCH RELAY

a. Remove the magnetic clutch relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 5	Voltage not applied to terminals 1 and 2	10 kΩ or higher
3 - 5	Voltage applied to terminals 1 and 2	Below 1 Ω

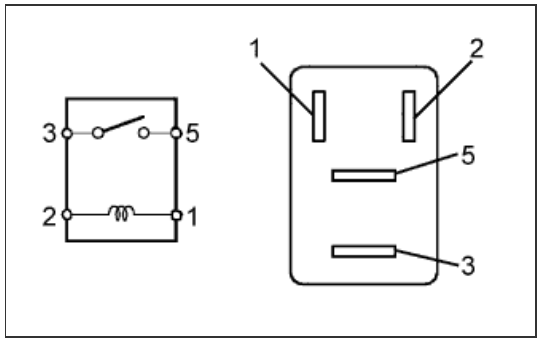

c. Install the magnetic clutch relay to the engine room relay block.

NG → REPLACE MAGNETIC CLUTCH RELAY

OK

5.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - BATTERY)


a. w/ Rear Heater

i. Disconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E36-1 (MGC) - Body ground	Engine switch off	Below 1 V
E36-1 (MGC) - Body ground	Engine switch on (IG)	11 to 1 V

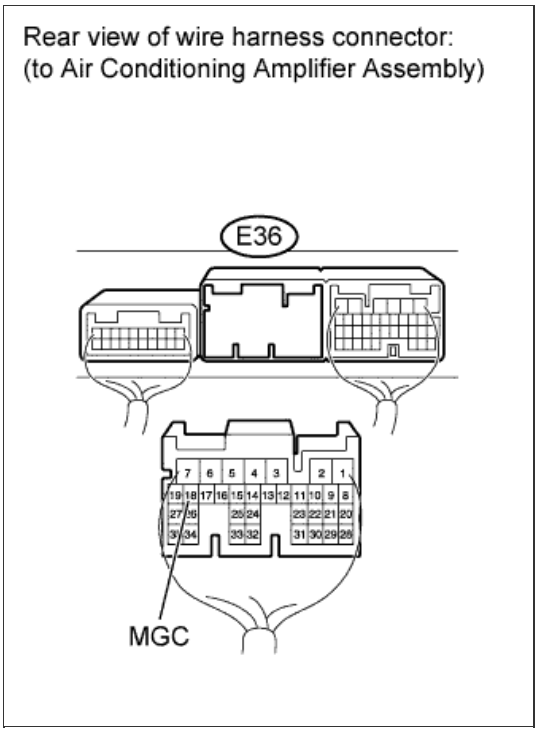


b. w/o Rear Heater

i. Disconnect the E 1 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E 1-20 (MGC) - Body ground	Engine switch off	Below 1 V
E 1-20 (MGC) - Body ground	Engine switch on (IG)	11 to 1 V

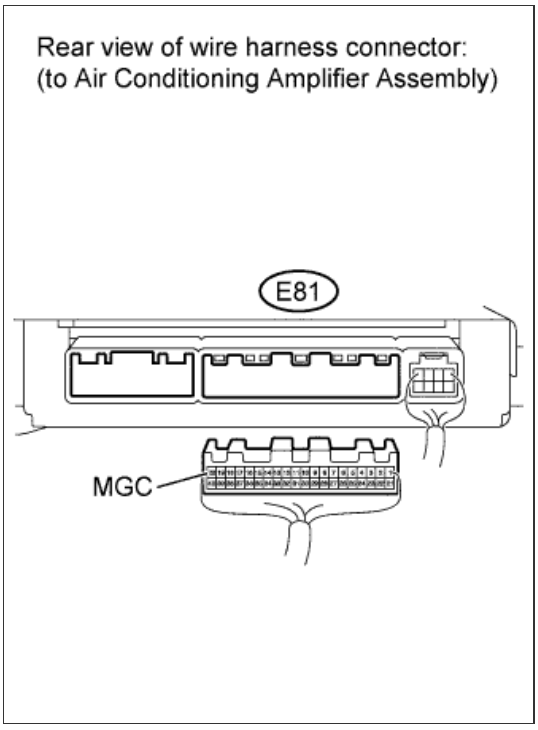

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.INSPECT AIR CONDITIONING AMPLIFIER ASSEMBLY

a. w/ Rear Heater


i. Reconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition

E36-1 (MGC) - Body ground	Engine switch on (IG) A/C switch off	11 to 1 V
E36-1 (MGC) - Body ground	Engine switch on (IG) A/C switch on	Below 1 V

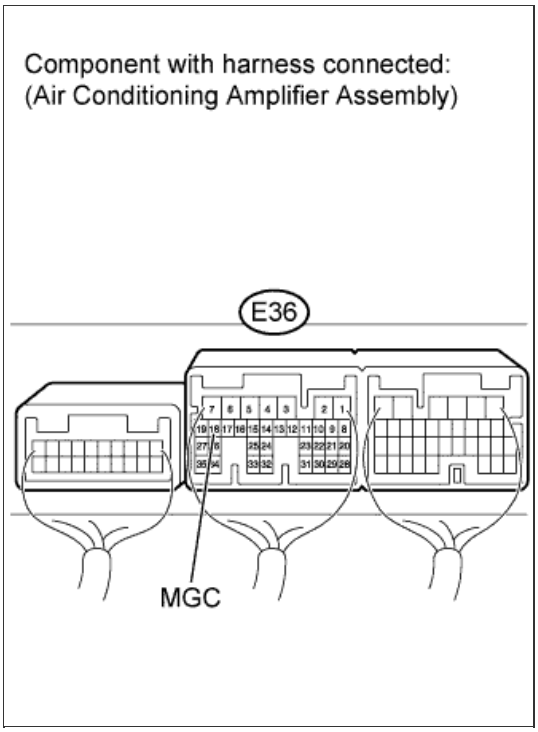


b. w/o Rear Heater

i. Reconnect the E 1 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E 1-20 (MGC) - Body ground	Engine switch on (IG) A/C switch off	11 to 1 V
E 1-20 (MGC) - Body ground	Engine switch on (IG) A/C switch on	Below 1 V

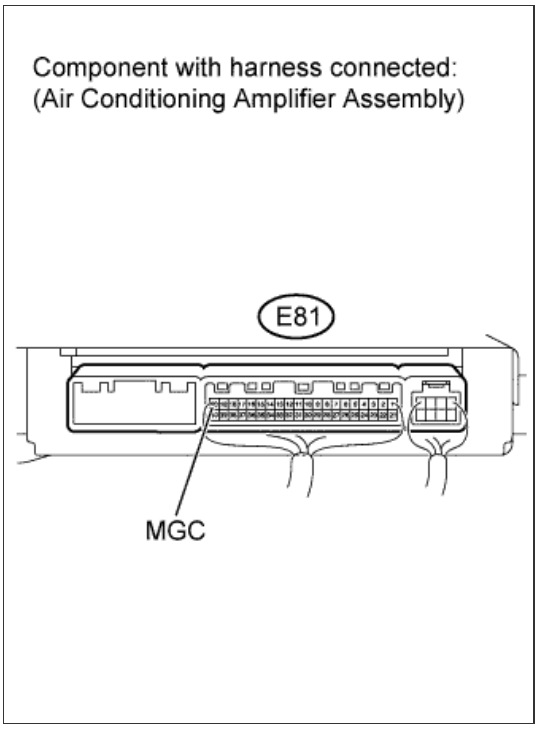

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK

7.INSPECT COOLER COMPRESSOR ASSEMBLY

a. Disconnect the C30 compressor connector.

b. Disconnect the A magnetic clutch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition

C30-3 (MG) - A-1	Always	Below 1 Ω
C30-3 (MG) - Body ground	Always	10 kΩ or higher

Component with harness connected:
(Cooler Compressor Assembly)



Front view of wire harness connector:
(to Magnetic Clutch)

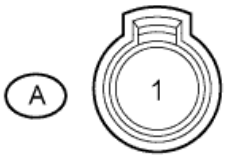

NG → REPLACE COOLER COMPRESSOR ASSEMBLY (Click here)

OK

8.INSPECT MAGNETIC CLUTCH


a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A-1 - Body ground	20 C (6 F)	3. to 3. Ω

b. When connector terminal A-1 is connected to the positive ( ) battery terminal, check that the following occurs: 1) the operating sound of the magnetic clutch can be heard, and 2) the hub and rotor of the magnetic clutch lock.

Component without harness connected:
(Magnetic Clutch)

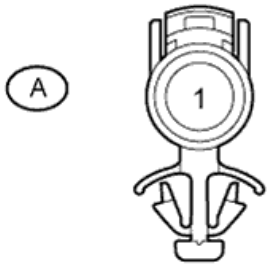

NG → REPLACE MAGNETIC CLUTCH

OK

9.CHECK HARNESS AND CONNECTOR (ENGINE ROOM RELAY BLOCK - BATTERY)

a. Remove the magnetic clutch relay from the engine room relay block.


b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition

Relay block magnetic clutch relay terminal 5 - Body ground	Engine switch on (IG)	11 to 1 V
Relay block magnetic clutch relay terminal 1 - Body ground	Engine switch on (IG)	11 to 1 V

Engine Room Relay Block:

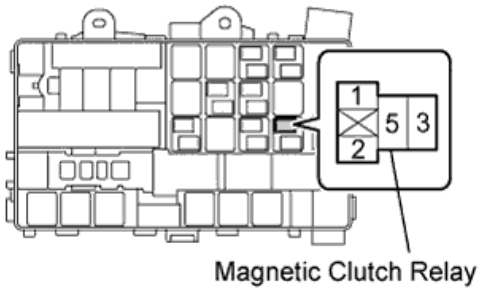

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR (ENGINE ROOM RELAY BLOCK - BATTERY)

OK


REPAIR OR REPLACE HARNESS OR CONNECTOR (ENGINE ROOM RELAY BLOCK - COOLER COMPRESSOR)


for Preparation Click here

DESCRIPTION

When the air conditioning amplifier assembly is turned on, a magnetic clutch on signal is sent from the MGC terminal of the air conditioning amplifier assembly. Then, the magnetic clutch relay turns on to operate the magnetic clutch.

WIRING DIAGRAM

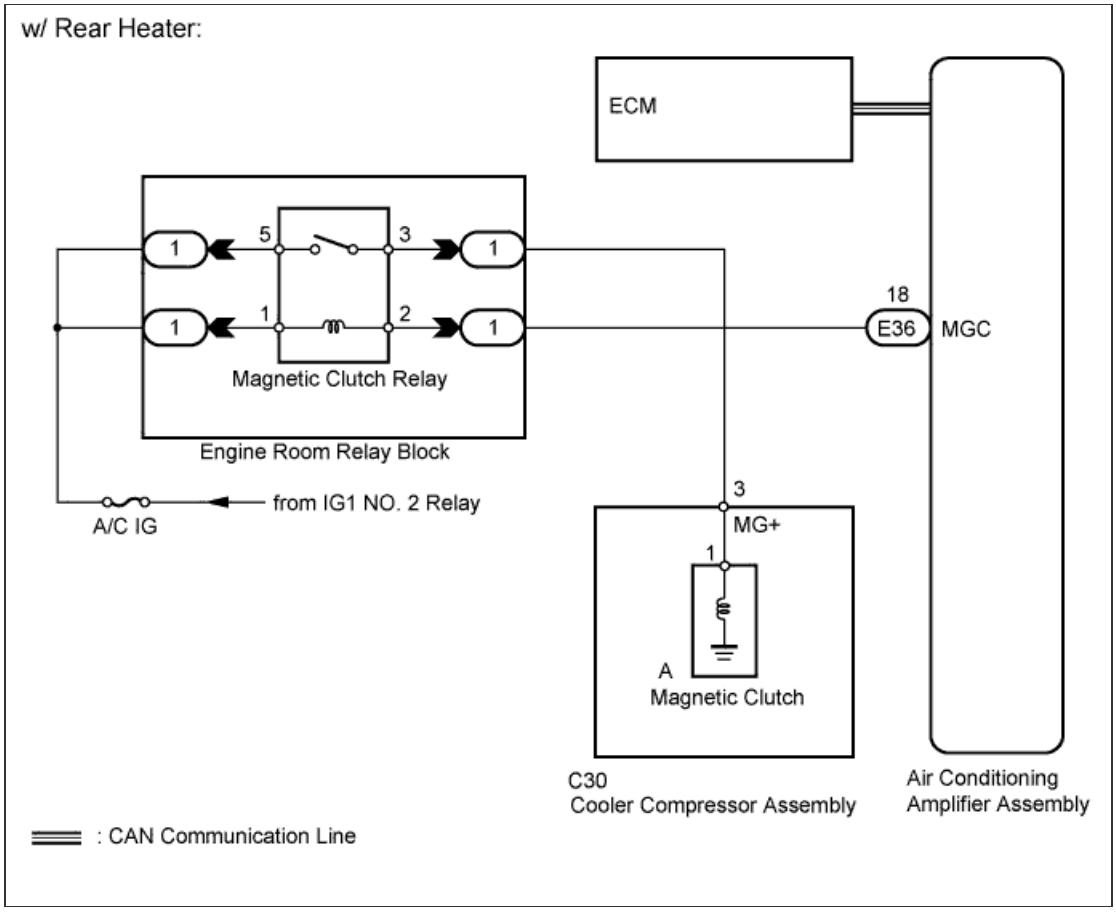

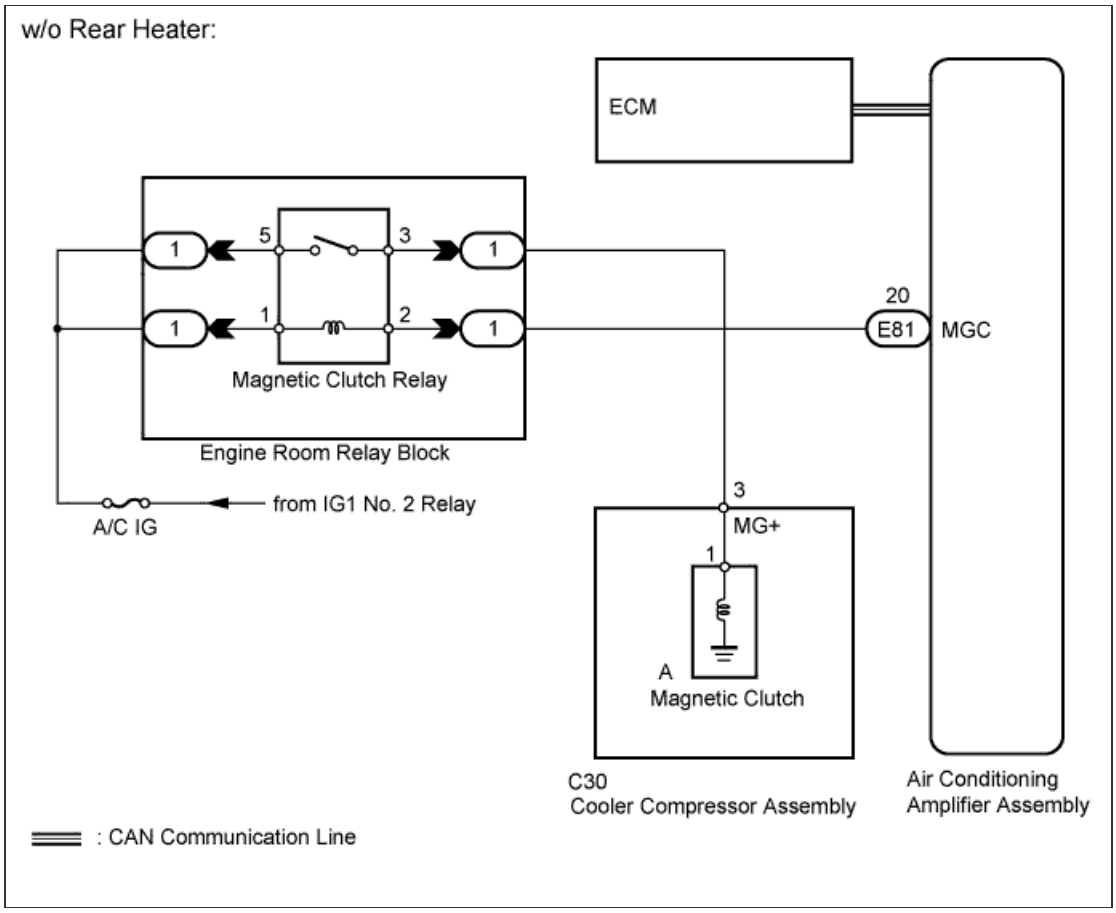

INSPECTION PROCEDURE

1.CHECK CAN COMMUNICATION SYSTEM

a. Check for CAN communication system DTCs related to the air conditioning system.

Result

Result	Proceed to
CAN DTC is not output	A
CAN DTC is output (for LHD)	B
CAN DTC is output (for RHD)	C

B → GO TO CAN COMMUNICATION SYSTEM (Click here)

C → GO TO CAN COMMUNICATION SYSTEM (Click here)

A

2.READ VALUE USING INTELLIGENT TESTER (A/C SIGNAL)

a. Use the Data List to check if the A/C switch is functioning properly.

Engine

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
A/C Signal	A/C signal / ON or OFF	ON: A/C switch on OFF: A/C switch off	-

OK:

The display is as specified in the normal condition.

NG → Go to step 3

OK

REPLACE ECM (Click here)

3.INSPECT FUSE (A/C IG)

a. Remove the A/C IG fuse from the cowl side unction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C IG fuse	Always	Below 1 Ω

NG → REPLACE FUSE (A/C IG)

OK


4.INSPECT MAGNETIC CLUTCH RELAY

a. Remove the magnetic clutch relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 5	Voltage not applied to terminals 1 and 2	10 kΩ or higher
3 - 5	Voltage applied to terminals 1 and 2	Below 1 Ω

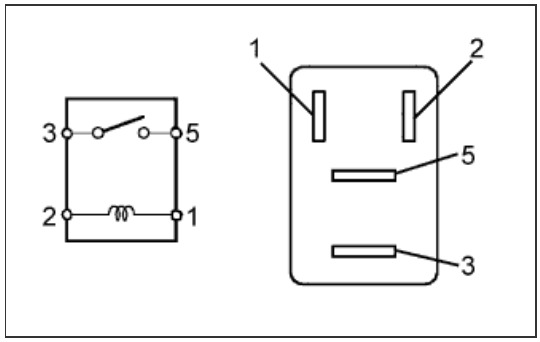

c. Install the magnetic clutch relay to the engine room relay block.

NG → REPLACE MAGNETIC CLUTCH RELAY

OK

5.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - BATTERY)


a. w/ Rear Heater

i. Disconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E36-1 (MGC) - Body ground	Engine switch off	Below 1 V
E36-1 (MGC) - Body ground	Engine switch on (IG)	11 to 1 V

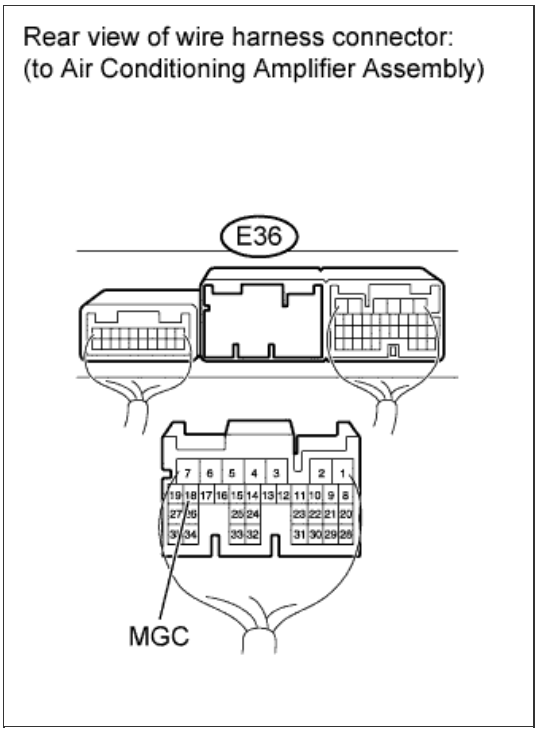


b. w/o Rear Heater

i. Disconnect the E 1 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E 1-20 (MGC) - Body ground	Engine switch off	Below 1 V
E 1-20 (MGC) - Body ground	Engine switch on (IG)	11 to 1 V

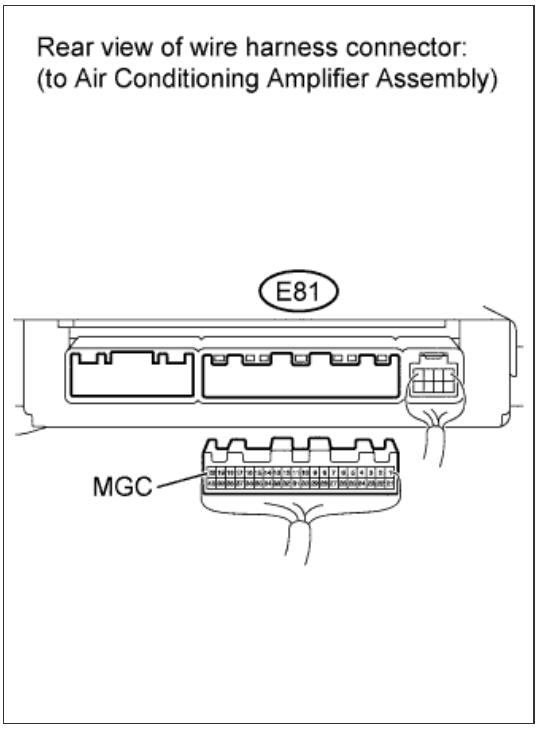

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.INSPECT AIR CONDITIONING AMPLIFIER ASSEMBLY

a. w/ Rear Heater


i. Reconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition

E36-1 (MGC) - Body ground	Engine switch on (IG) A/C switch off	11 to 1 V
E36-1 (MGC) - Body ground	Engine switch on (IG) A/C switch on	Below 1 V

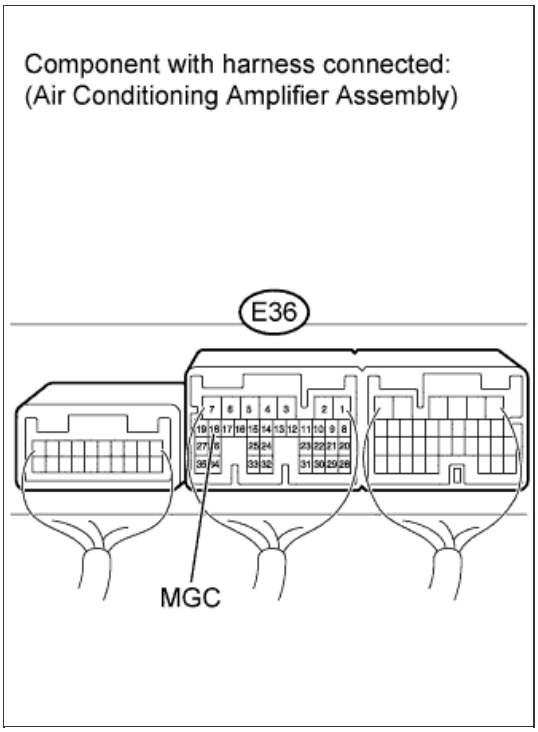


b. w/o Rear Heater

i. Reconnect the E 1 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E 1-20 (MGC) - Body ground	Engine switch on (IG) A/C switch off	11 to 1 V
E 1-20 (MGC) - Body ground	Engine switch on (IG) A/C switch on	Below 1 V

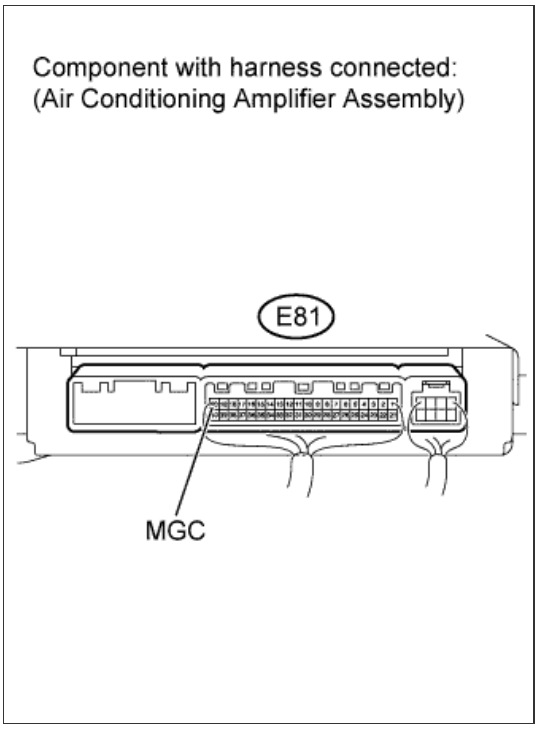

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK

7.INSPECT COOLER COMPRESSOR ASSEMBLY

a. Disconnect the C30 compressor connector.

b. Disconnect the A magnetic clutch connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:


Tester Connection	Condition	Specified Condition

C30-3 (MG) - A-1	Always	Below 1 Ω
C30-3 (MG) - Body ground	Always	10 kΩ or higher

Component with harness connected:
(Cooler Compressor Assembly)



Front view of wire harness connector:
(to Magnetic Clutch)

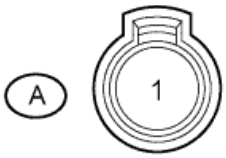

NG → REPLACE COOLER COMPRESSOR ASSEMBLY (Click here)

OK

8.INSPECT MAGNETIC CLUTCH


a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A-1 - Body ground	20 C (6 F)	3. to 3. Ω

b. When connector terminal A-1 is connected to the positive ( ) battery terminal, check that the following occurs: 1) the operating sound of the magnetic clutch can be heard, and 2) the hub and rotor of the magnetic clutch lock.

Component without harness connected:
(Magnetic Clutch)

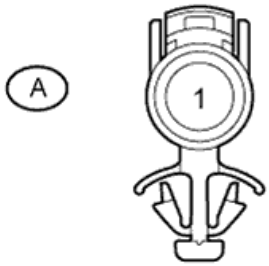

NG → REPLACE MAGNETIC CLUTCH

OK

9.CHECK HARNESS AND CONNECTOR (ENGINE ROOM RELAY BLOCK - BATTERY)

a. Remove the magnetic clutch relay from the engine room relay block.


b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition

Relay block magnetic clutch relay terminal 5 - Body ground	Engine switch on (IG)	11 to 1 V
Relay block magnetic clutch relay terminal 1 - Body ground	Engine switch on (IG)	11 to 1 V

Engine Room Relay Block:

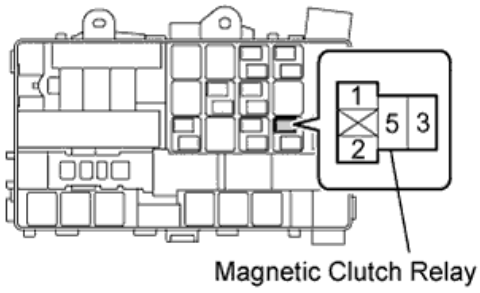

NG

REPAIR OR REPLACE HARNESS OR CONNECTOR (ENGINE ROOM RELAY BLOCK - BATTERY)

OK

REPAIR OR REPLACE HARNESS OR CONNECTOR (ENGINE ROOM RELAY BLOCK - COOLER COMPRESSOR)

for Preparation Click here


DESCRIPTION

This circuit consists of the No. 2 air conditioning control assembly* and the air conditioning amplifier assembly. When the No. 2 air conditioning control assembly is operated, signals are transmitted to the air conditioning amplifier assembly through the LIN communication system.
If the LIN communication system malfunctions, the air conditioning amplifier assembly does not operate even if the No. 2 air conditioning control assembly is operated.

HINT:

*: w/ Rear Heater

WIRING DIAGRAM

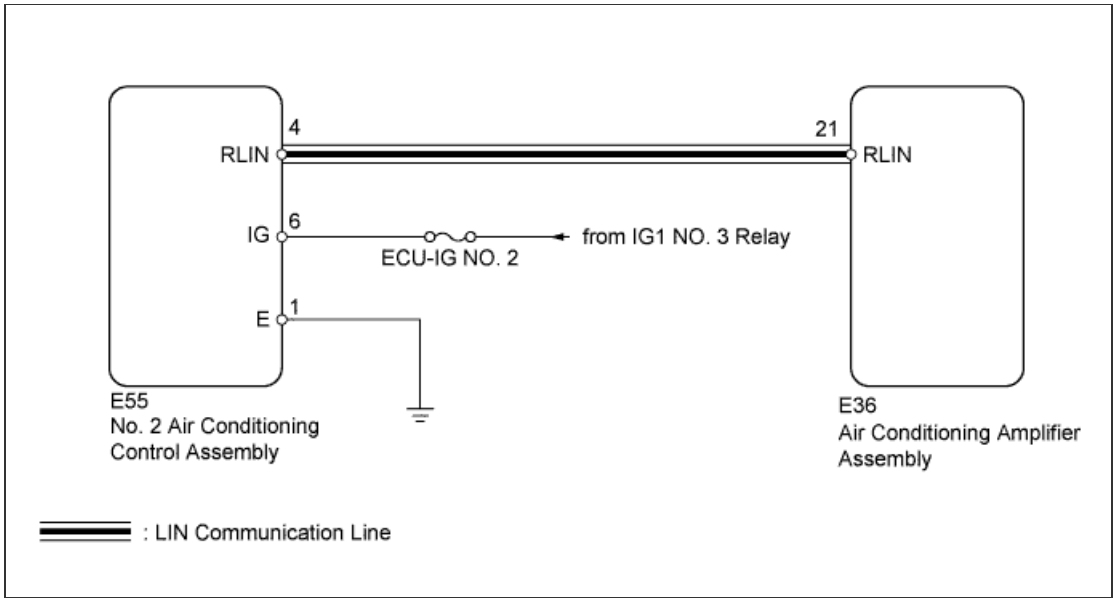

INSPECTION PROCEDURE

1.INSPECT FUSE (ECU-IG NO. 2)

a. Remove the ECU-IG NO. 2 fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
ECU-IG NO. 2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (NO. 2 AIR CONDITIONING CONTROL - BODY GROUND AND BATTERY)

a. Disconnect the E55 No. 2 air conditioning control assembly connector.

b. Measure the resistance and voltage according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E55-1 (E) - Body ground	Always	Below 1 Ω

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E55-6 (IG) - Body ground	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector: (to No. 2 Air Conditioning Control Assembly)

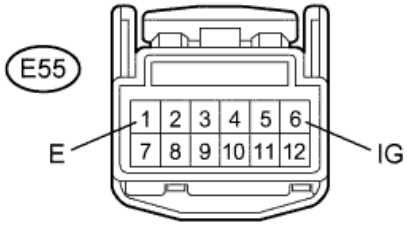

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - NO. 2 AIR CONDITIONING CONTROL)

a. sconnect the E55 No. 2 air conditioning control assembly connector.


b. Disconnect the E36 amplifier connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E36-21 (RLIN) - E55-4 (RLIN)	Always	Below 1 Ω
E55-4 (RLIN) - Body ground	Always	10 kΩ or higher
E36-21 (RLIN) - Body ground		

Front view of wire harness connector: (to No. 2 Air Conditioning Control Assembly)

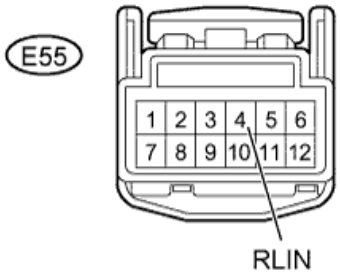

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

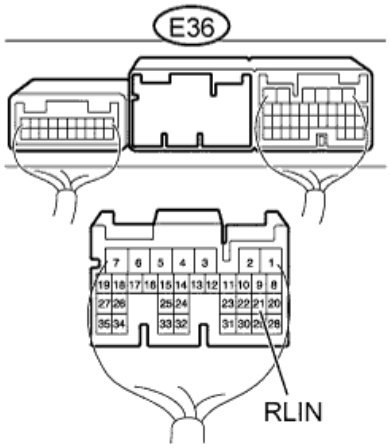

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (OPERATION)

a. Replace the No. 2 air conditioning control assembly with a new or properly functioning one (Click here).

b. Operate the No. 2 air conditioning control assembly to check that it functions properly.

OK:

No. 2 air conditioning control assembly function operates normally.

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK → REPLACE NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (Click here)

for Preparation Click here


DESCRIPTION

This circuit consists of the No. 2 air conditioning control assembly* and the air conditioning amplifier assembly. When the No. 2 air conditioning control assembly is operated, signals are transmitted to the air conditioning amplifier assembly through the LIN communication system.
If the LIN communication system malfunctions, the air conditioning amplifier assembly does not operate even if the No. 2 air conditioning control assembly is operated.

HINT:

*: w/ Rear Heater

WIRING DIAGRAM

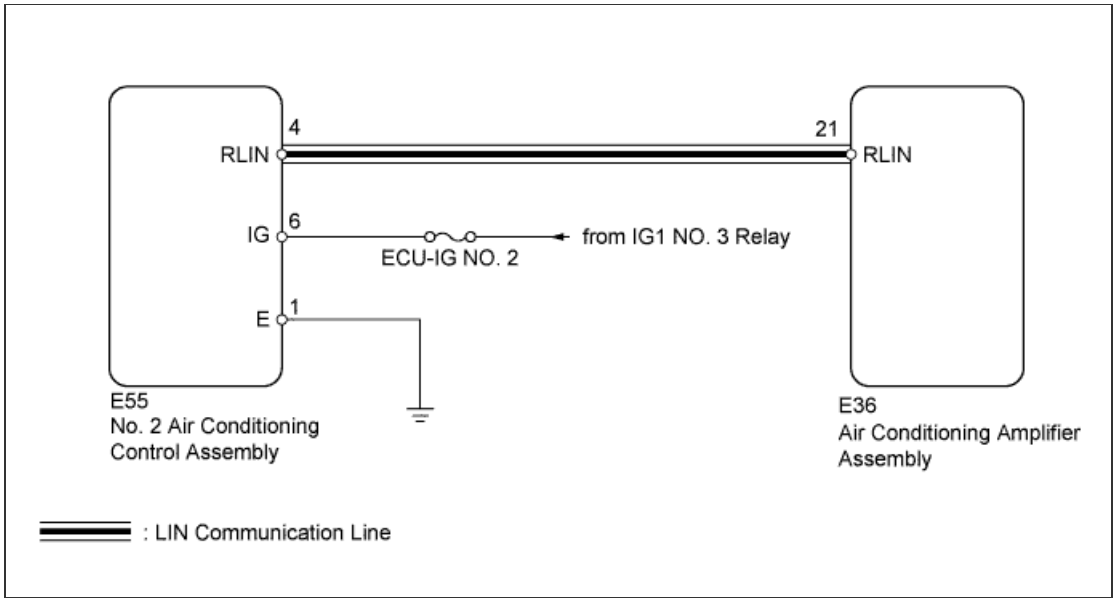

INSPECTION PROCEDURE

1.INSPECT FUSE (ECU-IG NO. 2)

a. Remove the ECU-IG NO. 2 fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
ECU-IG NO. 2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (NO. 2 AIR CONDITIONING CONTROL - BODY GROUND AND BATTERY)

a. Disconnect the E55 No. 2 air conditioning control assembly connector.

b. Measure the resistance and voltage according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E55-1 (E) - Body ground	Always	Below 1 Ω

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E55-6 (IG) - Body ground	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector: (to No. 2 Air Conditioning Control Assembly)

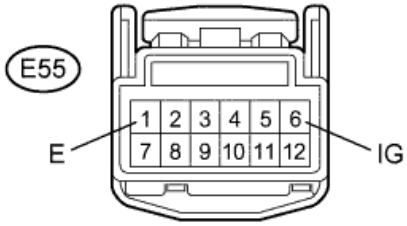

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - NO. 2 AIR CONDITIONING CONTROL)

a. sconnect the E55 No. 2 air conditioning control assembly connector.


b. Disconnect the E36 amplifier connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E36-21 (RLIN) - E55-4 (RLIN)	Always	Below 1 Ω
E55-4 (RLIN) - Body ground	Always	10 kΩ or higher
E36-21 (RLIN) - Body ground		

Front view of wire harness connector: (to No. 2 Air Conditioning Control Assembly)

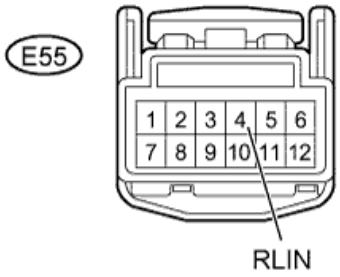

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

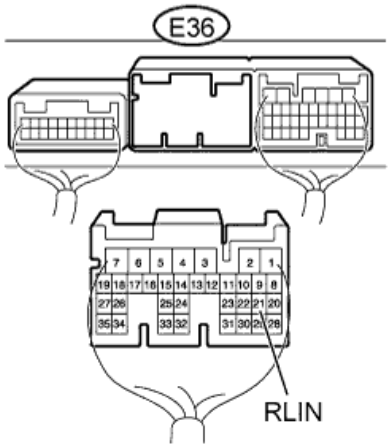

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (OPERATION)

a. Replace the No. 2 air conditioning control assembly with a new or properly functioning one (Click here).

b. Operate the No. 2 air conditioning control assembly to check that it functions properly.

OK:

No. 2 air conditioning control assembly function operates normally.

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)


OK → REPLACE NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

When the No. 2 air conditioning control assembly (rear blower switch) is set to position LO or higher, the contact of the RR A/C relay is closed, current flows to the rear blower motor, and the rear blower motor operates. The rear blower motor speed can be changed by exchanging the ground and the rear blower resistor circuit with the No. 2 air conditioning control assembly (rear blower switch).

WIRING DIAGRAM

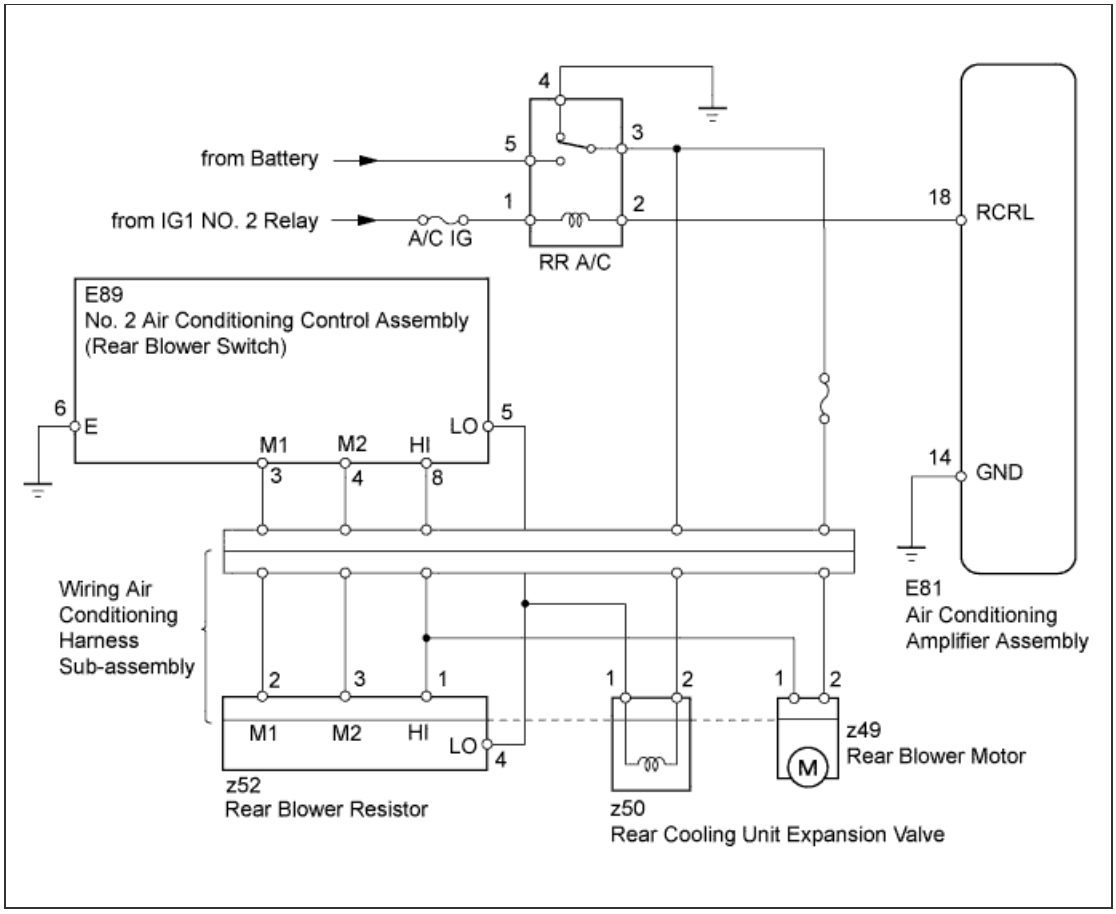

INSPECTION PROCEDURE

1.INSPECT FUSE (A/C IG, RR A/C NO.2)

a. Remove the A/C IG and RR A/C NO. 2 fuses from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C IG fuse	Always	Below 1 Ω
RR A/C NO. 2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK


2.INSPECT RR A/C RELAY

a. Remove the RR A/C relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 4	Battery voltage is not applied between terminals 1 and 2	Below 1 Ω
3 - 5	Battery voltage is not applied between terminals 1 and 2	10 kΩ or higher
3 - 4	Battery voltage is applied to terminals 1 and 2	10 kΩ or higher
3 - 5	Battery voltage is applied to terminals 1 and 2	Below 1 Ω

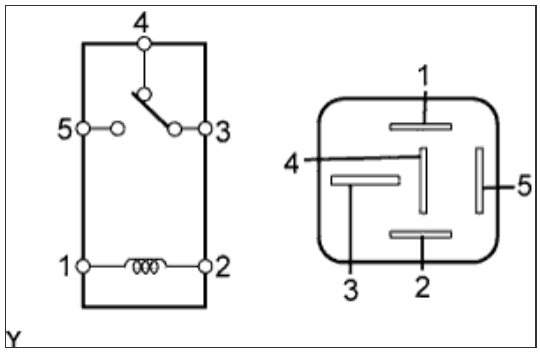

NG → REPLACE RR A/C RELAY

OK

3.INSPECT REAR BLOWER MOTOR

a. Disconnect the z49 motor connector.


b. Connect the battery's positive (+) lead to terminal 2 and the negative (-) lead to terminal 1, then check that the rear blower motor operates smoothly.

OK:
The rear blower motor operates smoothly.

c. Measure the current according to the value(s) in the table below.

Standard Current:

Tester Connection	Condition	Specified Condition
z49-1 (-) - z49-2 (+)	Rear blower motor operates	1 to 3 A

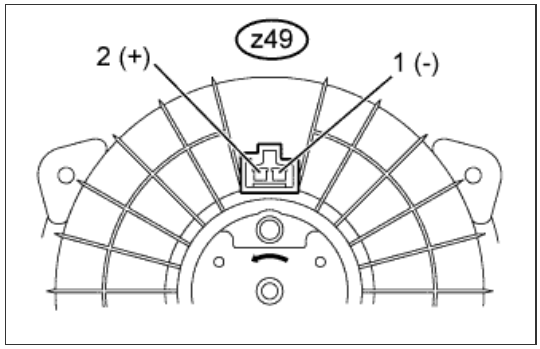

NG → REPLACE REAR BLOWER MOTOR (Click here)

OK

4.INSPECT NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (REAR BLOWER SWITCH)


a. Remove the No. 2 air conditioning control assembly (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
ALL - E89-6 (E)	OFF	10 kΩ or higher
E89-5 (LO) - E89-6 (E)	LO	Below 1 Ω
E89-3 (M1) - E89-6 (E)	M1	Below 1 Ω
E89-4 (M2) - E89-6 (E)	M2	Below 1 Ω
E89-8 (HI) - E89-6 (E)	HI	Below 1 Ω

Component without harness connected:
(No. 2 Air Conditioning Control Assembly)

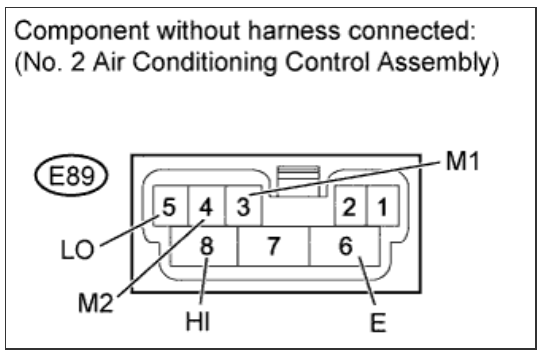

NG → REPLACE NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (Click here)

OK

5.INSPECT REAR BLOWER RESISTOR


a. Remove the rear blower resistor (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z52-1 (HI) - z52-2 (M1)	Always	1.32 to 1.52 Ω
z52-1 (HI) - z52-3 (M2)	Always	0.39 to 0.45 Ω
z52-1 (HI) - z52-4 (LO)	Always	2.24 to 2.4 Ω

Component without harness connected:
(Rear Blower Resistor)

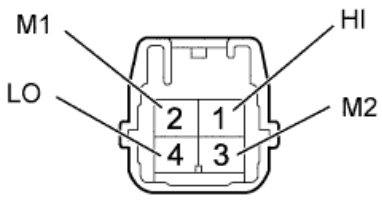

NG → REPLACE REAR BLOWER RESISTOR (Click here)

OK

6.CHECK REAR COOLING UNIT EXPANSION VALVE (OPERATION)

a. Replace the rear cooling unit expansion valve (Click here).

HINT:

Since the rear cooling unit expansion valve cannot be inspected while it is removed from the vehicle, replace the rear cooling unit expansion valve with a normal one and check that the condition returns to normal.

OK:

Same problem does not occur.

NG → Go to step 7

OK

CHECK REAR COOLING UNIT EXPANSION VALVE (Click here)

7.CHECK HARNESS AND CONNECTOR (REAR BLOWER RESISTOR - WIRING AIR CONDITIONING HARNESS)

a. Disconnect the wiring air conditioning harness sub-assembly connector.


b. Disconnect the z52 rear blower resistor connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
6 (M1) - z52-2 (M1)	Always	Below 1 Ω
5 (M2) - z52-3 (M2)	Always	Below 1 Ω
4 (HI) - z52-1 (HI)	Always	Below 1 Ω
7 (LO) - z52-4 (LO)	Always	Below 1 Ω

Front view of wire harness connector:
(to Wiring Air Conditioning Harness Sub-assembly)

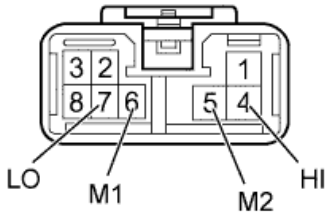

Front view of wire harness connector:
(to Rear Blower Resistor)

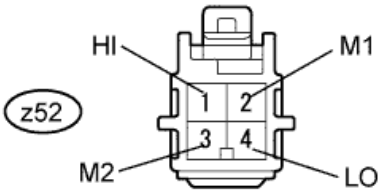

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.CHECK HARNESS AND CONNECTOR (REAR BLOWER SWITCH - WIRING AIR CONDITIONING HARNESS)

a. Disconnect the E89 No. 2 air conditioning control assembly connector.


b. Disconnect the Wiring air conditioning harness sub-assembly connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E89-3 (M1) - 6 (M1)	Always	Below 1 Ω
E89-4 (M2) - 5 (M2)	Always	Below 1 Ω
E89-8 (HI) - 4 (HI)	Always	Below 1 Ω
E89-5 (LO) - 7 (LO)	Always	Below 1 Ω
E89-6 (E) - Body ground	Always	Below 1 Ω

Front view of wire harness connector:
(to No. 2 Air Conditioning Control Assembly)

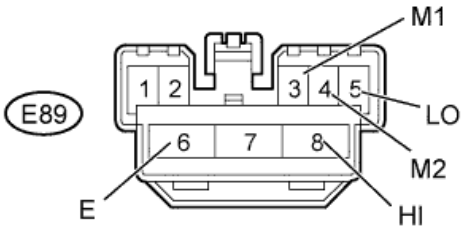

Front view of wire harness connector:
(to Wiring Air Conditioning Harness Sub-assembly)

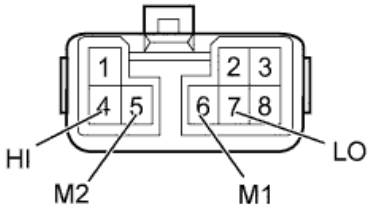

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.CHECK HARNESS AND CONNECTOR (REAR BLOWER RESISTOR - REAR BLOWER MOTOR)


a. Disconnect the z52 rear blower resistor connector.

b. Disconnect the z49 rear motor connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z52-1 (HI) - z49-1	Always	Below 1 Ω

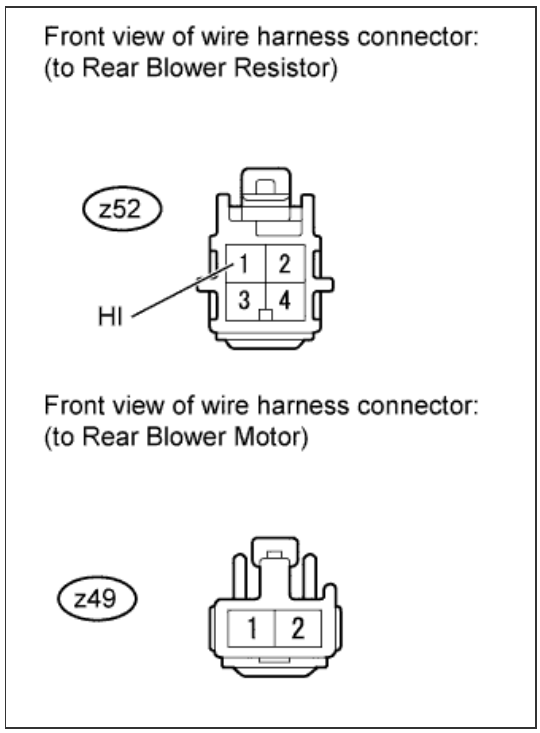

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

10.CHECK HARNESS AND CONNECTOR (REAR BLOWER MOTOR - BODY GROUND AND BATTERY)

a. Disconnect the z49 rear motor connector.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
z49-2 - Body ground	Always	Below 1 Ω

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z49-2 - Body ground	Engine switch on (IG) Heater control (blower switch) HI	11 to 14 V

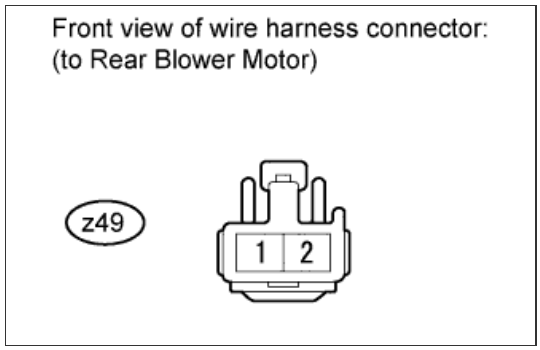

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


11.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - BATTERY AND BODY GROUND)

a. Disconnect the E81air conditioning amplifier connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-18 (RCRL) - Body ground	Engine switch on (IG) Heater control (blower switch): OFF	11 to 14 V
E81-18 (RCRL) - Body ground	Engine switch on (IG) Heater control (blower switch): ON	Below 1 V

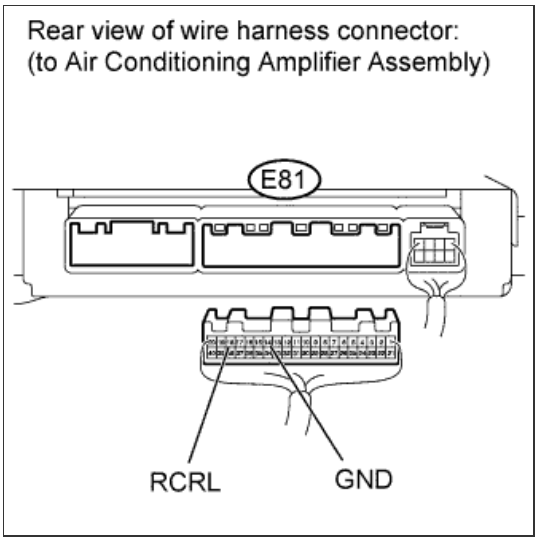

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-14 (GND) - Body ground	Always	Below 1 Ω

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

DESCRIPTION

When the No. 2 air conditioning control assembly (rear blower switch) is set to position LO or higher, the contact of the RR A/C relay is closed, current flows to the rear blower motor, and the rear blower motor operates. The rear blower motor speed can be changed by exchanging the ground and the rear blower resistor circuit with the No. 2 air conditioning control assembly (rear blower switch).

WIRING DIAGRAM

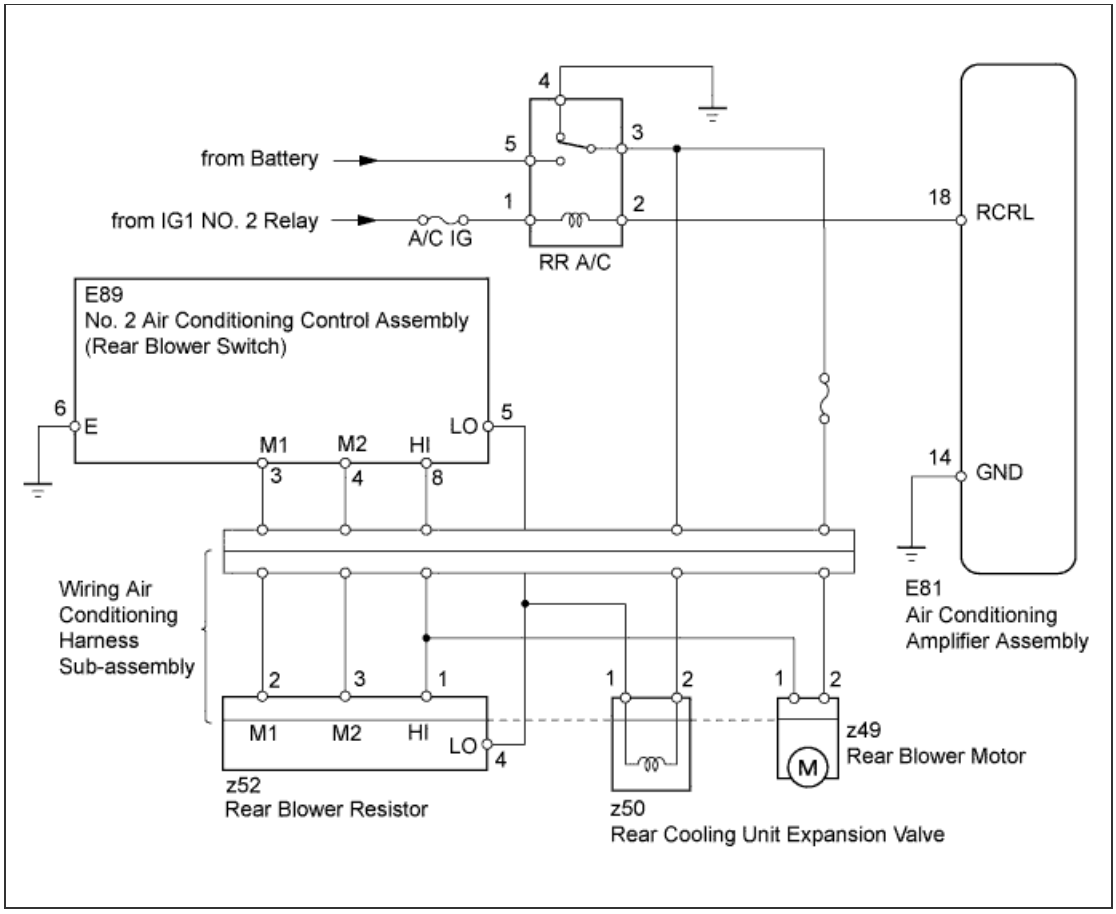

INSPECTION PROCEDURE

1.INSPECT FUSE (A/C IG, RR A/C NO.2)

a. Remove the A/C IG and RR A/C NO. 2 fuses from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C IG fuse	Always	Below 1 Ω
RR A/C NO. 2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK


2.INSPECT RR A/C RELAY

a. Remove the RR A/C relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 4	Battery voltage is not applied between terminals 1 and 2	Below 1 Ω
3 - 5	Battery voltage is not applied between terminals 1 and 2	10 kΩ or higher
3 - 4	Battery voltage is applied to terminals 1 and 2	10 kΩ or higher
3 - 5	Battery voltage is applied to terminals 1 and 2	Below 1 Ω

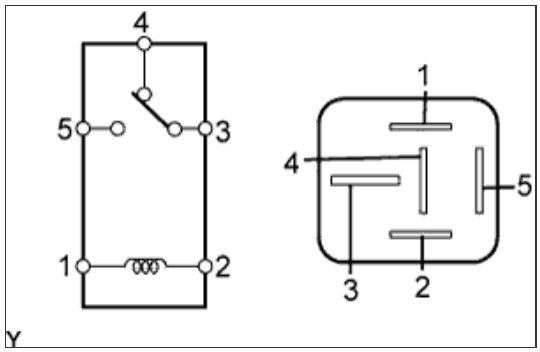

NG → REPLACE RR A/C RELAY

OK

3.INSPECT REAR BLOWER MOTOR

a. Disconnect the z49 motor connector.


b. Connect the battery's positive (+) lead to terminal 2 and the negative (-) lead to terminal 1, then check that the rear blower motor operates smoothly.

OK:
The rear blower motor operates smoothly.

c. Measure the current according to the value(s) in the table below.

Standard Current:

Tester Connection	Condition	Specified Condition
z49-1 (-) - z49-2 (+)	Rear blower motor operates	1 to 3 A

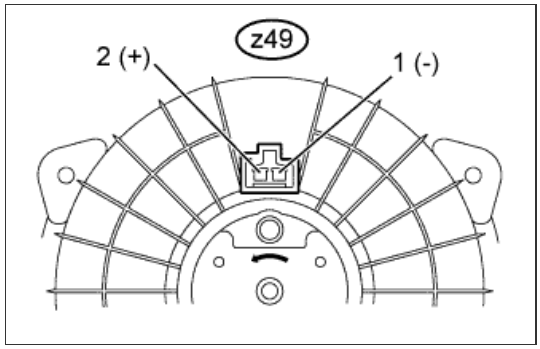

NG → REPLACE REAR BLOWER MOTOR (Click here)

OK

4.INSPECT NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (REAR BLOWER SWITCH)


a. Remove the No. 2 air conditioning control assembly (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
ALL - E89-6 (E)	OFF	10 kΩ or higher
E89-5 (LO) - E89-6 (E)	LO	Below 1 Ω
E89-3 (M1) - E89-6 (E)	M1	Below 1 Ω
E89-4 (M2) - E89-6 (E)	M2	Below 1 Ω
E89-8 (HI) - E89-6 (E)	HI	Below 1 Ω

Component without harness connected:
(No. 2 Air Conditioning Control Assembly)

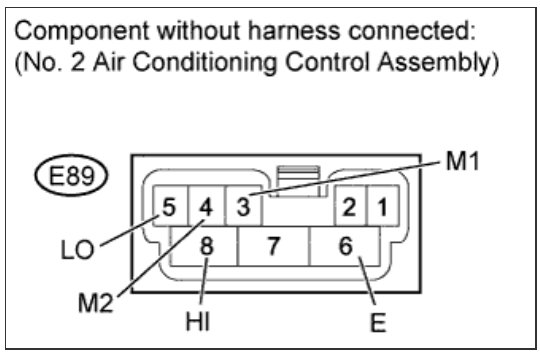

NG → REPLACE NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (Click here)

OK

5.INSPECT REAR BLOWER RESISTOR


a. Remove the rear blower resistor (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z52-1 (HI) - z52-2 (M1)	Always	1.32 to 1.52 Ω
z52-1 (HI) - z52-3 (M2)	Always	0.39 to 0.45 Ω
z52-1 (HI) - z52-4 (LO)	Always	2.24 to 2.4 Ω

Component without harness connected:
(Rear Blower Resistor)

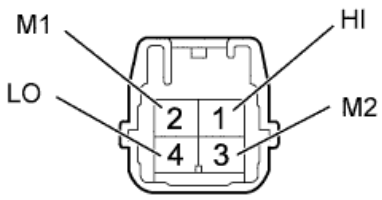

NG → REPLACE REAR BLOWER RESISTOR (Click here)

OK

6.CHECK REAR COOLING UNIT EXPANSION VALVE (OPERATION)

a. Replace the rear cooling unit expansion valve (Click here).

HINT:

Since the rear cooling unit expansion valve cannot be inspected while it is removed from the vehicle, replace the rear cooling unit expansion valve with a normal one and check that the condition returns to normal.

OK:

Same problem does not occur.

NG → Go to step 7

OK

CHECK REAR COOLING UNIT EXPANSION VALVE (Click here)

7.CHECK HARNESS AND CONNECTOR (REAR BLOWER RESISTOR - WIRING AIR CONDITIONING HARNESS)

a. Disconnect the wiring air conditioning harness sub-assembly connector.


b. Disconnect the z52 rear blower resistor connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
6 (M1) - z52-2 (M1)	Always	Below 1 Ω
5 (M2) - z52-3 (M2)	Always	Below 1 Ω
4 (HI) - z52-1 (HI)	Always	Below 1 Ω
7 (LO) - z52-4 (LO)	Always	Below 1 Ω

Front view of wire harness connector:
(to Wiring Air Conditioning Harness Sub-assembly)

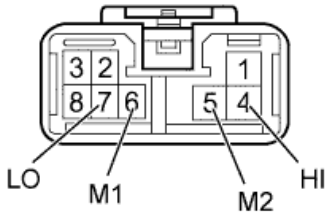

Front view of wire harness connector:
(to Rear Blower Resistor)

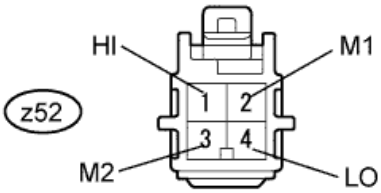

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.CHECK HARNESS AND CONNECTOR (REAR BLOWER SWITCH - WIRING AIR CONDITIONING HARNESS)

a. Disconnect the E89 No. 2 air conditioning control assembly connector.


b. Disconnect the Wiring air conditioning harness sub-assembly connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E89-3 (M1) - 6 (M1)	Always	Below 1 Ω
E89-4 (M2) - 5 (M2)	Always	Below 1 Ω
E89-8 (HI) - 4 (HI)	Always	Below 1 Ω
E89-5 (LO) - 7 (LO)	Always	Below 1 Ω
E89-6 (E) - Body ground	Always	Below 1 Ω

Front view of wire harness connector:
(to No. 2 Air Conditioning Control Assembly)

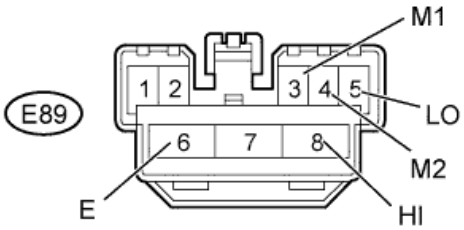

Front view of wire harness connector:
(to Wiring Air Conditioning Harness Sub-assembly)

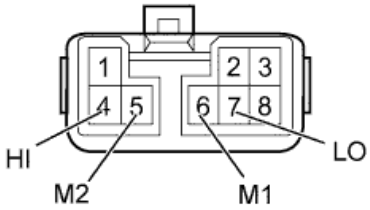

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.CHECK HARNESS AND CONNECTOR (REAR BLOWER RESISTOR - REAR BLOWER MOTOR)


a. Disconnect the z52 rear blower resistor connector.

b. Disconnect the z49 rear motor connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z52-1 (HI) - z49-1	Always	Below 1 Ω

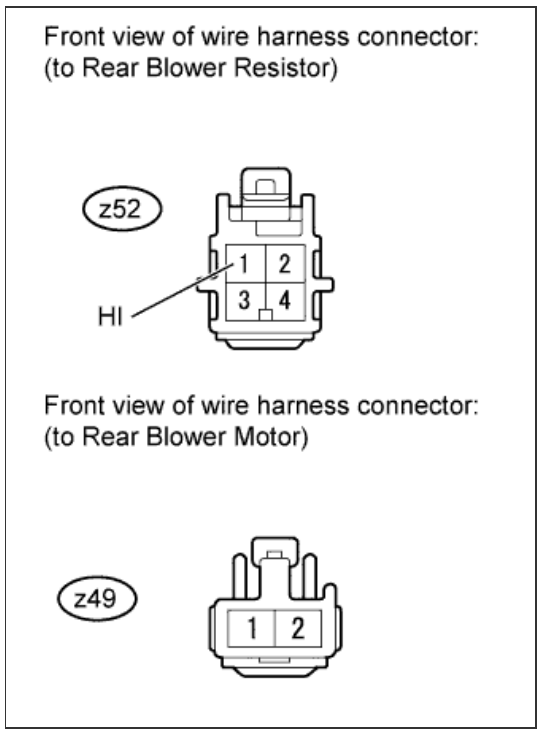

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

10.CHECK HARNESS AND CONNECTOR (REAR BLOWER MOTOR - BODY GROUND AND BATTERY)

a. Disconnect the z49 rear motor connector.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
z49-2 - Body ground	Always	Below 1 Ω

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z49-2 - Body ground	Engine switch on (IG) Heater control (blower switch) HI	11 to 14 V

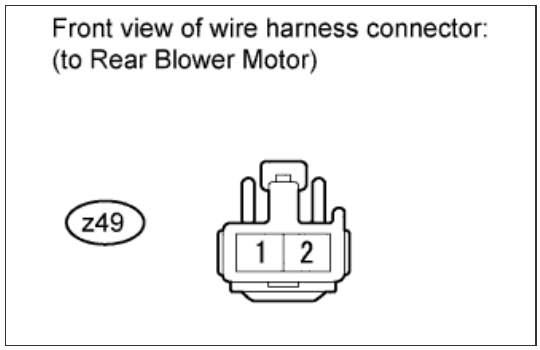

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


11.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - BATTERY AND BODY GROUND)

a. Disconnect the E81air conditioning amplifier connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-18 (RCRL) - Body ground	Engine switch on (IG) Heater control (blower switch): OFF	11 to 14 V
E81-18 (RCRL) - Body ground	Engine switch on (IG) Heater control (blower switch): ON	Below 1 V

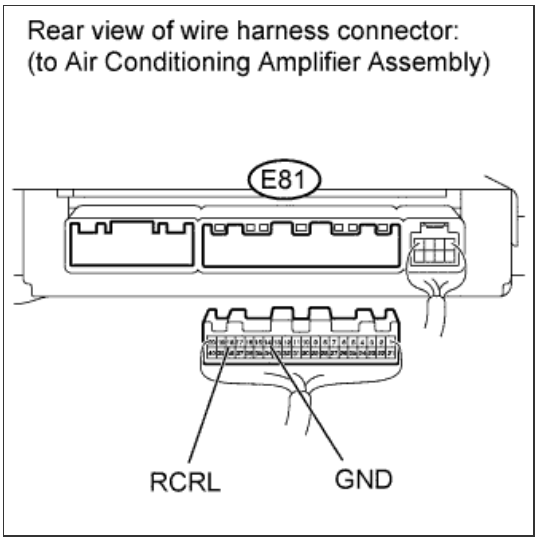

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-14 (GND) - Body ground	Always	Below 1 Ω

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

DESCRIPTION

When the No. 2 air conditioning control assembly (rear blower switch) is set to position LO or higher, the contact of the RR A/C relay is closed, current flows to the rear blower motor, and the rear blower motor operates. The rear blower motor speed can be changed by exchanging the ground and the rear blower resistor circuit with the No. 2 air conditioning control assembly (rear blower switch).

WIRING DIAGRAM

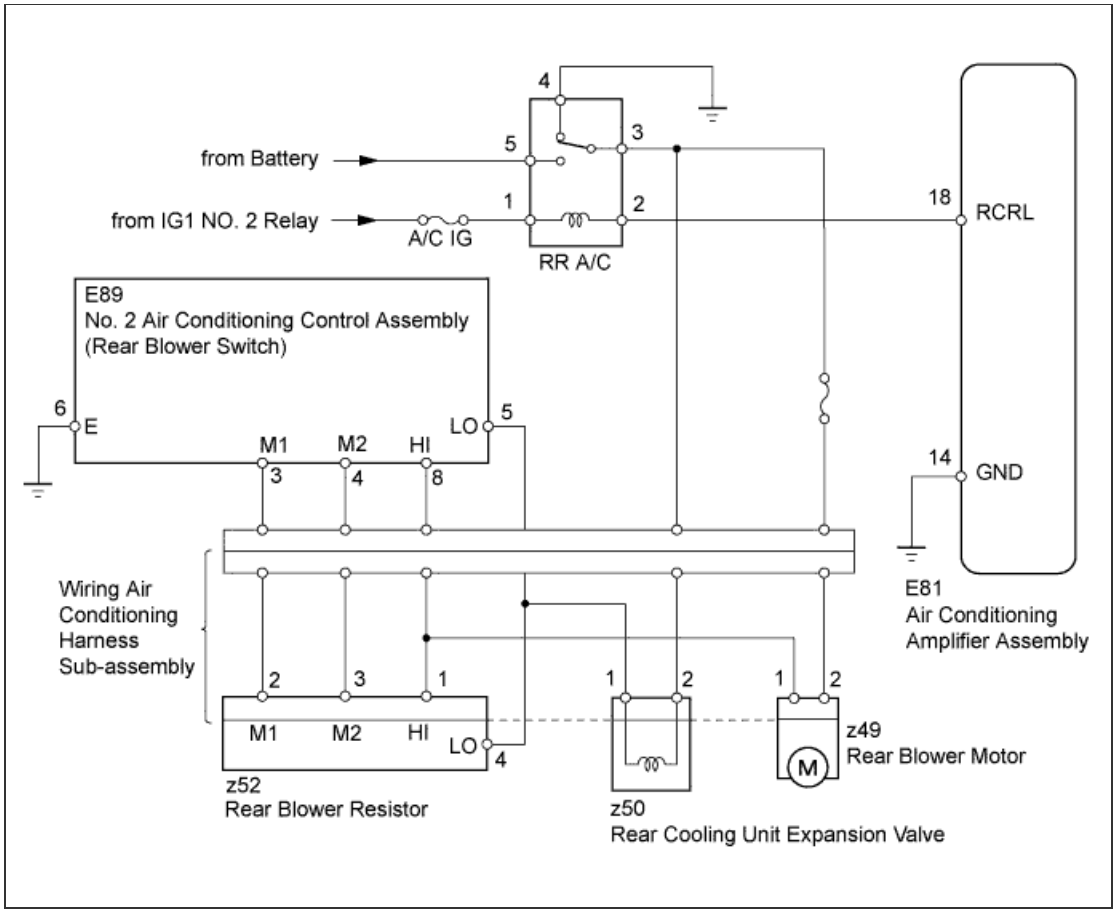

INSPECTION PROCEDURE

1.INSPECT FUSE (A/C IG, RR A/C NO.2)

a. Remove the A/C IG and RR A/C NO. 2 fuses from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C IG fuse	Always	Below 1 Ω
RR A/C NO. 2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK


2.INSPECT RR A/C RELAY

a. Remove the RR A/C relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 4	Battery voltage is not applied between terminals 1 and 2	Below 1 Ω
3 - 5	Battery voltage is not applied between terminals 1 and 2	10 kΩ or higher
3 - 4	Battery voltage is applied to terminals 1 and 2	10 kΩ or higher
3 - 5	Battery voltage is applied to terminals 1 and 2	Below 1 Ω

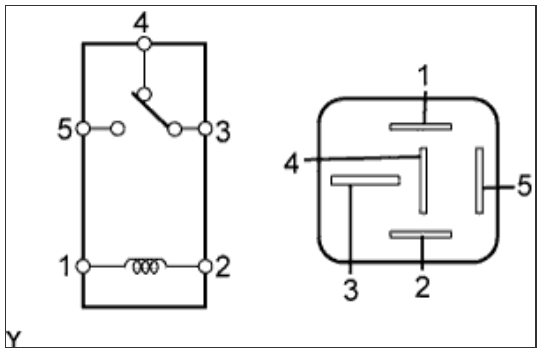

NG → REPLACE RR A/C RELAY

OK

3.INSPECT REAR BLOWER MOTOR

a. Disconnect the z49 motor connector.


b. Connect the battery's positive (+) lead to terminal 2 and the negative (-) lead to terminal 1, then check that the rear blower motor operates smoothly.

OK:
The rear blower motor operates smoothly.

c. Measure the current according to the value(s) in the table below.

Standard Current:

Tester Connection	Condition	Specified Condition
z49-1 (-) - z49-2 (+)	Rear blower motor operates	1 to 3 A

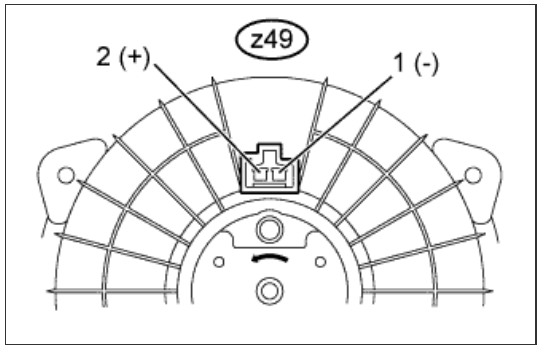

NG → REPLACE REAR BLOWER MOTOR (Click here)

OK

4.INSPECT NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (REAR BLOWER SWITCH)


a. Remove the No. 2 air conditioning control assembly (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
ALL - E89-6 (E)	OFF	10 kΩ or higher
E89-5 (LO) - E89-6 (E)	LO	Below 1 Ω
E89-3 (M1) - E89-6 (E)	M1	Below 1 Ω
E89-4 (M2) - E89-6 (E)	M2	Below 1 Ω
E89-8 (HI) - E89-6 (E)	HI	Below 1 Ω

Component without harness connected:
(No. 2 Air Conditioning Control Assembly)

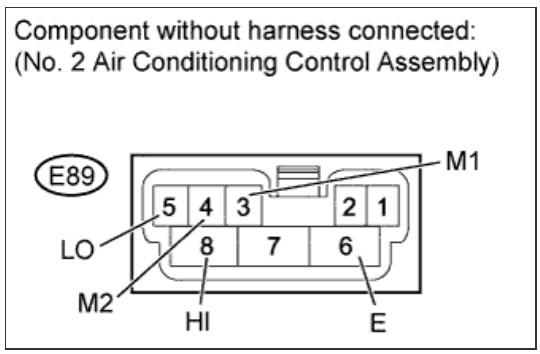

NG → REPLACE NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (Click here)

OK

5.INSPECT REAR BLOWER RESISTOR


a. Remove the rear blower resistor (Click here).

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z52-1 (HI) - z52-2 (M1)	Always	1.32 to 1.52 Ω
z52-1 (HI) - z52-3 (M2)	Always	0.39 to 0.45 Ω
z52-1 (HI) - z52-4 (LO)	Always	2.24 to 2.4 Ω

Component without harness connected:
(Rear Blower Resistor)

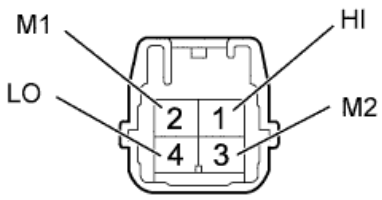

NG → REPLACE REAR BLOWER RESISTOR (Click here)

OK

6.CHECK REAR COOLING UNIT EXPANSION VALVE (OPERATION)

a. Replace the rear cooling unit expansion valve (Click here).

HINT:

Since the rear cooling unit expansion valve cannot be inspected while it is removed from the vehicle, replace the rear cooling unit expansion valve with a normal one and check that the condition returns to normal.

OK:

Same problem does not occur.

NG → Go to step 7

OK

CHECK REAR COOLING UNIT EXPANSION VALVE (Click here)

7.CHECK HARNESS AND CONNECTOR (REAR BLOWER RESISTOR - WIRING AIR CONDITIONING HARNESS)

a. Disconnect the wiring air conditioning harness sub-assembly connector.


b. Disconnect the z52 rear blower resistor connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
6 (M1) - z52-2 (M1)	Always	Below 1 Ω
5 (M2) - z52-3 (M2)	Always	Below 1 Ω
4 (HI) - z52-1 (HI)	Always	Below 1 Ω
7 (LO) - z52-4 (LO)	Always	Below 1 Ω

Front view of wire harness connector:
(to Wiring Air Conditioning Harness Sub-assembly)

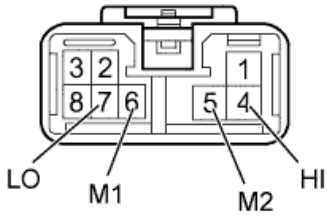

Front view of wire harness connector:
(to Rear Blower Resistor)

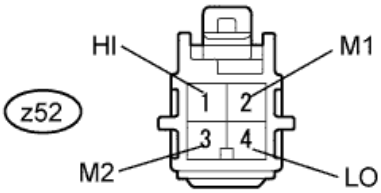

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.CHECK HARNESS AND CONNECTOR (REAR BLOWER SWITCH - WIRING AIR CONDITIONING HARNESS)

a. Disconnect the E89 No. 2 air conditioning control assembly connector.


b. Disconnect the Wiring air conditioning harness sub-assembly connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
E89-3 (M1) - 6 (M1)	Always	Below 1 Ω
E89-4 (M2) - 5 (M2)	Always	Below 1 Ω
E89-8 (HI) - 4 (HI)	Always	Below 1 Ω
E89-5 (LO) - 7 (LO)	Always	Below 1 Ω
E89-6 (E) - Body ground	Always	Below 1 Ω

Front view of wire harness connector:
(to No. 2 Air Conditioning Control Assembly)

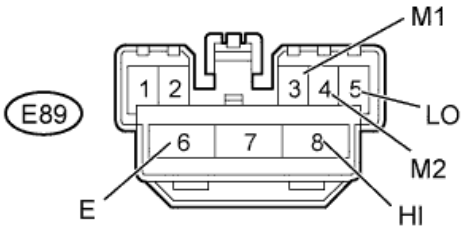

Front view of wire harness connector:
(to Wiring Air Conditioning Harness Sub-assembly)

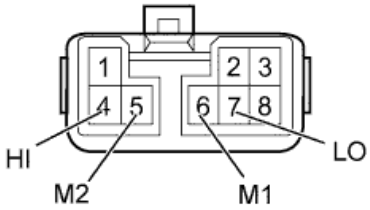

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

9.CHECK HARNESS AND CONNECTOR (REAR BLOWER RESISTOR - REAR BLOWER MOTOR)


a. Disconnect the z52 rear blower resistor connector.

b. Disconnect the z49 rear motor connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
z52-1 (HI) - z49-1	Always	Below 1 Ω

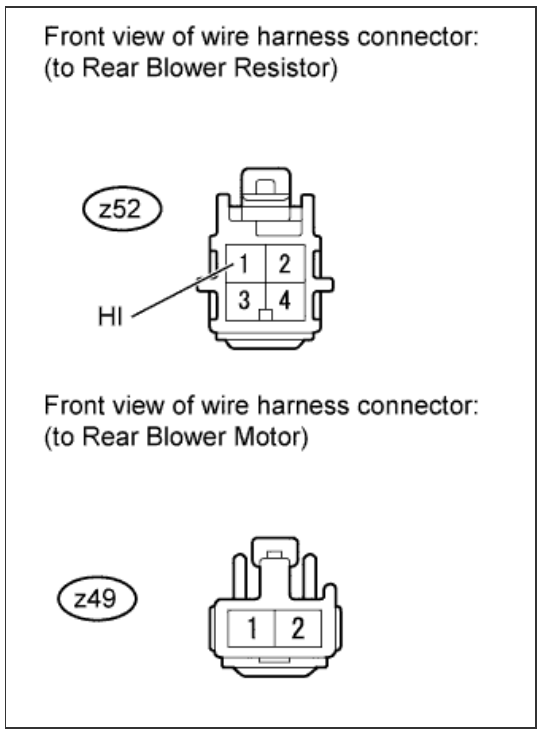

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

10.CHECK HARNESS AND CONNECTOR (REAR BLOWER MOTOR - BODY GROUND AND BATTERY)

a. Disconnect the z49 rear motor connector.

b. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
z49-2 - Body ground	Always	Below 1 Ω

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
z49-2 - Body ground	Engine switch on (IG) Heater control (blower switch) HI	11 to 14 V

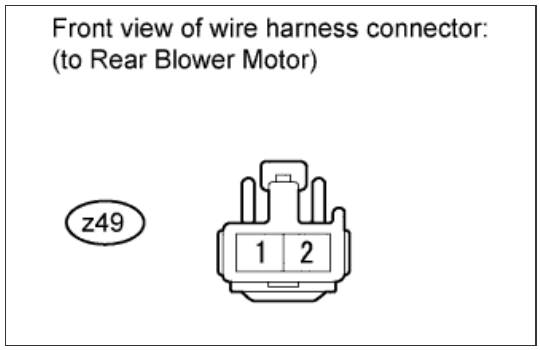

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


11.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - BATTERY AND BODY GROUND)

a. Disconnect the E81air conditioning amplifier connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-18 (RCRL) - Body ground	Engine switch on (IG) Heater control (blower switch): OFF	11 to 14 V
E81-18 (RCRL) - Body ground	Engine switch on (IG) Heater control (blower switch): ON	Below 1 V

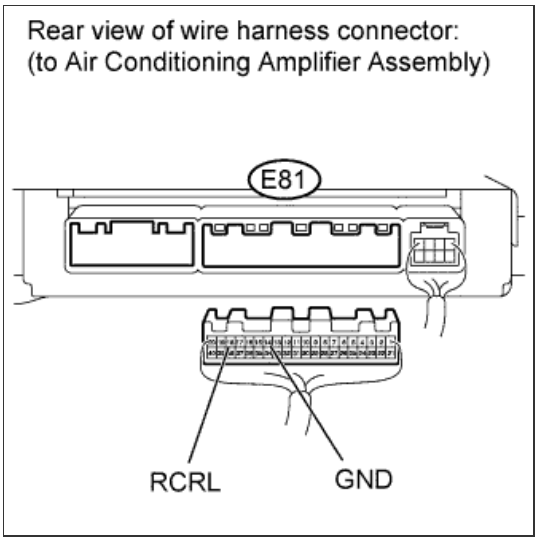

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-14 (GND) - Body ground	Always	Below 1 Ω

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

for Preparation Click here

DESCRIPTION

PTC heater relays are closed in accordance with signals from the air conditioning amplifier assembly and power is supplied to the quick heater assembly installed on the radiator heater unit.

WIRING DIAGRAM

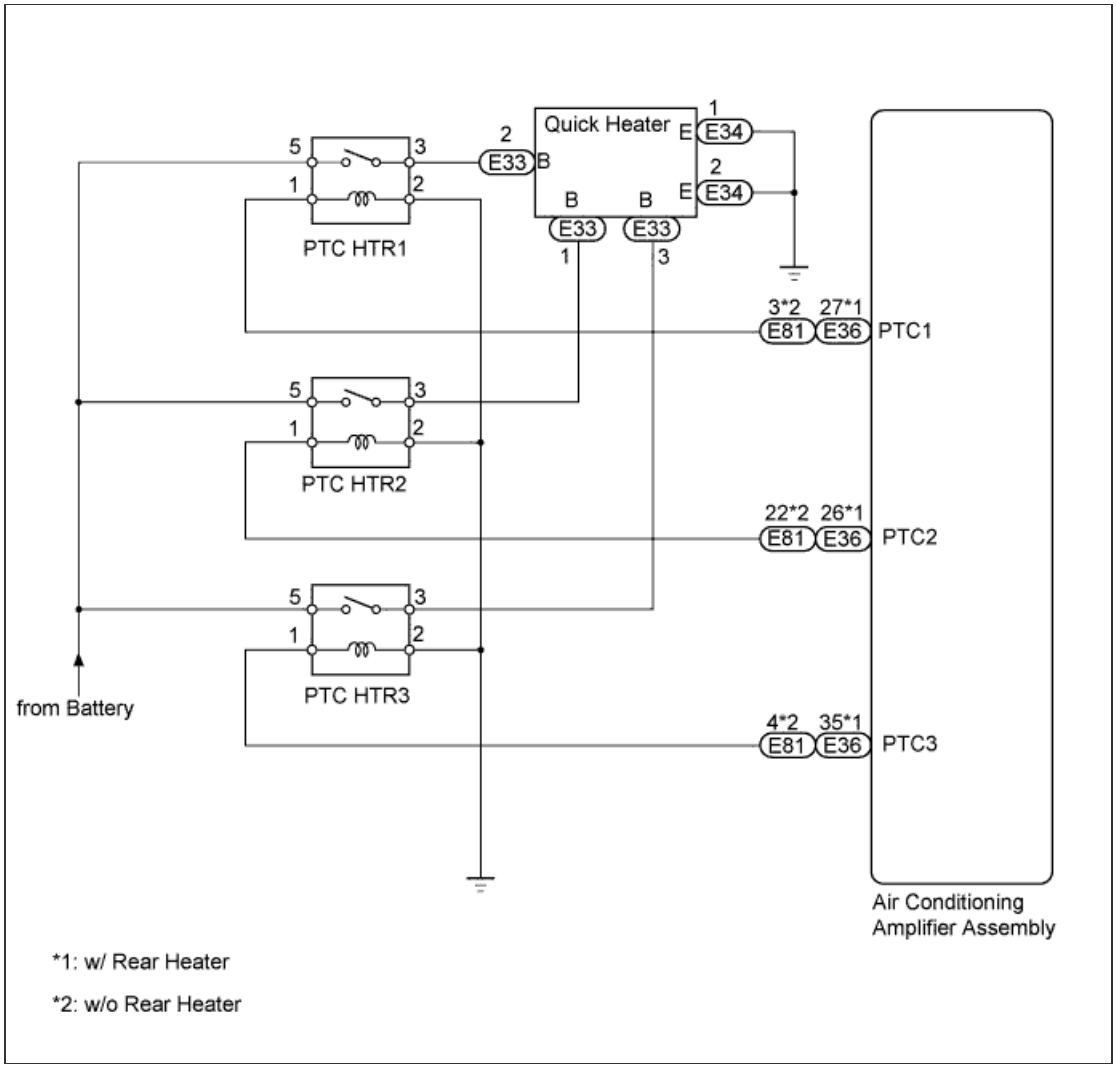

INSPECTION PROCEDURE


1.INSPECT PTC HEATER RELAY (PTC HTR1)

a. Remove the PTC HTR1 relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 5	Battery voltage not applied between terminals 1 and 2	10 kΩ or higher
	Battery voltage applied to terminals 1 and 2	Below 1 Ω

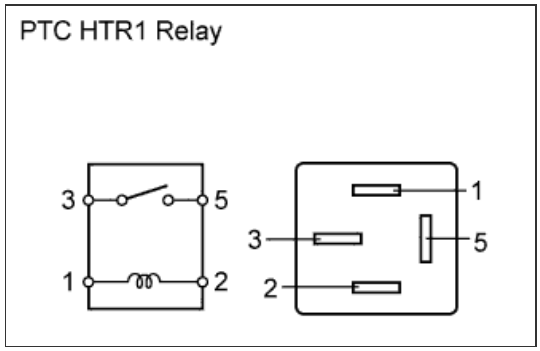

NG → REPLACE PTC HEATER RELAY

OK


2.INSPECT PTC HEATER RELAY (PTC HTR2)

a. Remove the PTC HTR2 relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 5	Battery voltage not applied between terminals 1 and 2	10 kΩ or higher
	Battery voltage applied to terminals 1 and 2	Below 1 Ω

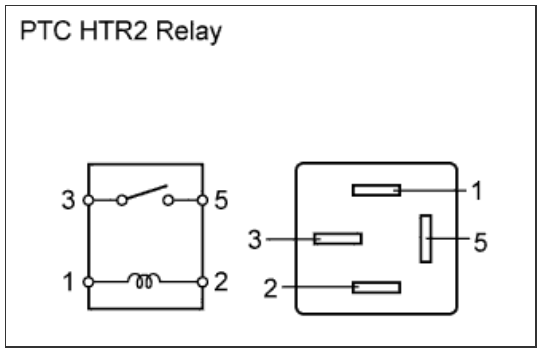

NG → REPLACE PTC HEATER RELAY

OK


3.INSPECT PTC HEATER RELAY (PTC HTR3)

a. Remove the PTC HTR3 relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 5	Battery voltage not applied between terminals 1 and 2	10 kΩ or higher
	Battery voltage applied to terminals 1 and 2	Below 1 Ω

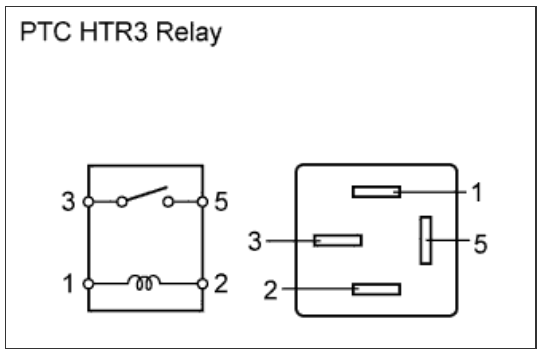

NG → REPLACE PTC HEATER RELAY

OK

4.CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY


a. w/ Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:


Tester Connection	Condition	Specified Condition
E36-27 (PTC1) - Body ground	Engine switch on (IG) Temperature setting: MAX HOT MODE switch: FOOT Engine coolant temperature: 55°C (131°F) or less Blower switch: off	11 to 14 V
E36-26 (PTC2) - Body ground		
E36-35 (PTC3) - Body ground		

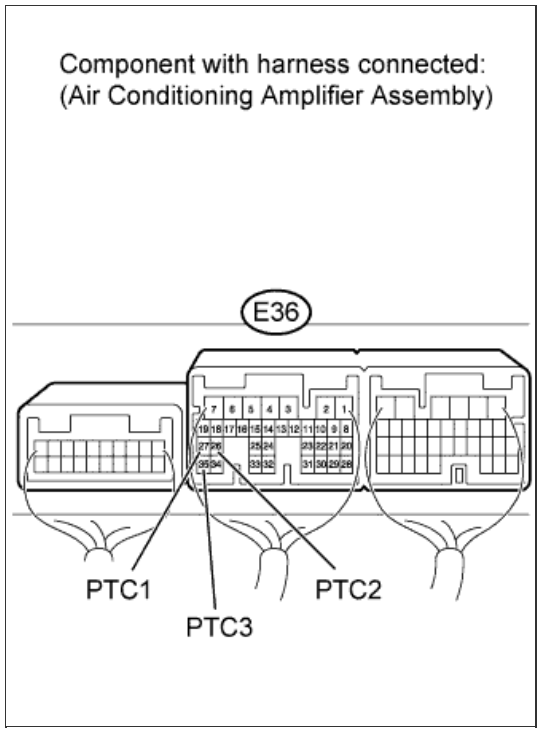

b. w/o Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. Measure the voltage according to the value(s) in the table below.

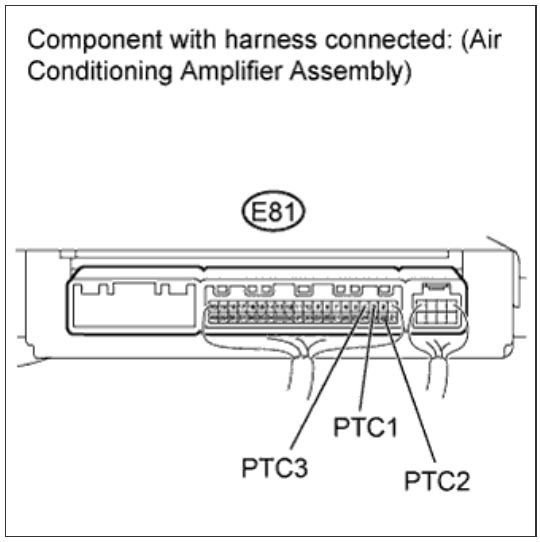

Standard Voltage:

Tester Connection	Condition	Specified Condition
E 1-3 (PTC1) - Body ground	Engine switch on (I) Temperature setting: MA HOT MODE switch: FOOT Engine coolant temperature: 55°C (131°F) or less Blower switch: off	11 to 14 V
E 1-22 (PTC2) - Body ground		
E 1-4 (PTC3) - Body ground		

NG → Go to step 8

OK

5.CHECK HARNESS AND CONNECTOR (PTC HEATER RELAY - QUICK HEATER)

a. Remove the quick heater relays from the engine room relay block.


b. Disconnect the E33 quick heater assembly connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
PTC HTR2 terminal 3 - E33-1 (B)	Always	Below 1 Ω
PTC HTR1 terminal 3 - E33-2		

(B)		
PTC HTR3 terminal 3 - E33-3 (B)		
PTC HTR2 terminal 3 - Body ground	Always	10 kΩ or higher
PTC HTR1 terminal 3 - Body ground		
PTC HTR3 terminal 3 - Body ground		

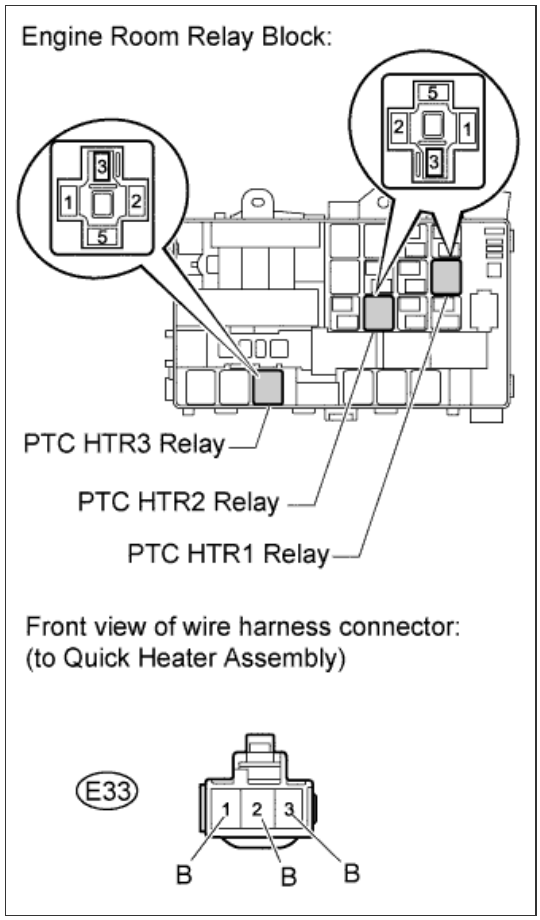

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


6.INSPECT QUICK HEATER ASSEMBLY

a. Disconnect the E33 and E34 quick heater connectors.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E33-1 (B) - E34-1 (E)	Always	Below 1 Ω
E33-2 (B) - E34-1 (E)		
E33-3 (B) - E34-2 (E)		

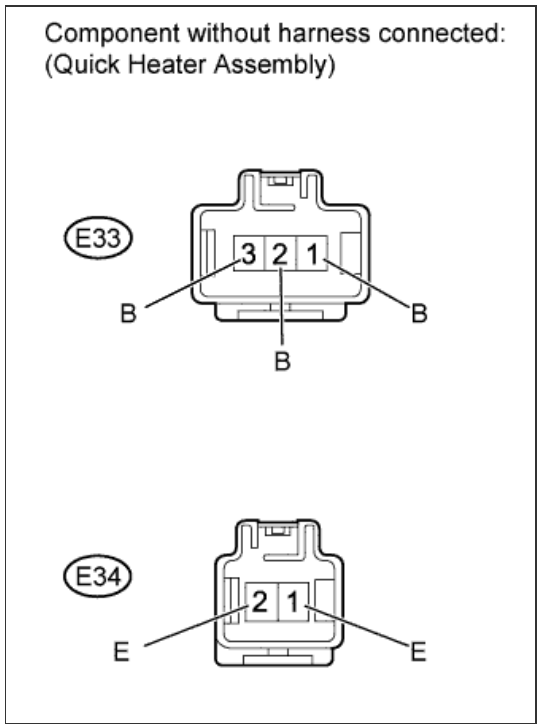

NG → REPLACE QUICK HEATER RELAY (Click here)

OK

7.CHECK HARNESS AND CONNECTOR (QUICK HEATER - BODY GROUND)


a. Disconnect the E34 quick heater assembly connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E34-1 (E) - Body ground	Always	10 kΩ or higher
E34-2 (E) - Body ground		

Front view of wire harness connector: (to Quick Heater Assembly)

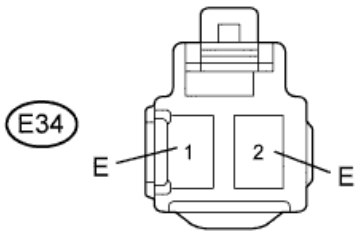

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - PTC HTR RELAY)

a. w/ Rear Heater


i. Disconnect the E36 amplifier connector.

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E36-27 (PTC1) - Body ground	Always	Below 1 Ω
E36-26 (PTC2) - Body ground		
E36-35 (PTC3) - Body ground		

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

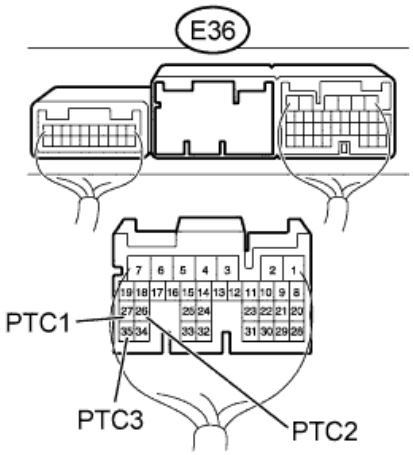

b. w/o Rear Heater

i. Disconnect the E 1 amplifier connector.


ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E 1-3 (PTC1) - Body ground	Always	Below 1 Ω
E 1-22 (PTC2) - Body ground		
E 1-4 (PTC3) - Body ground		

Result

Result	Proceed to
O (for HD)	A
O (for RHD)	B
	C

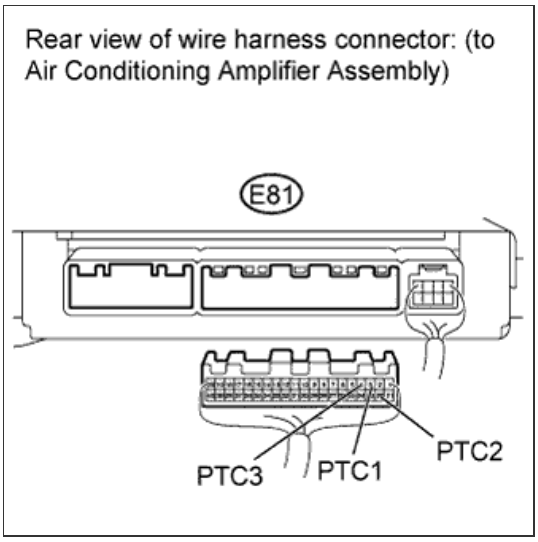

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

PTC heater relays are closed in accordance with signals from the air conditioning amplifier assembly and power is supplied to the quick heater assembly installed on the radiator heater unit.

WIRING DIAGRAM

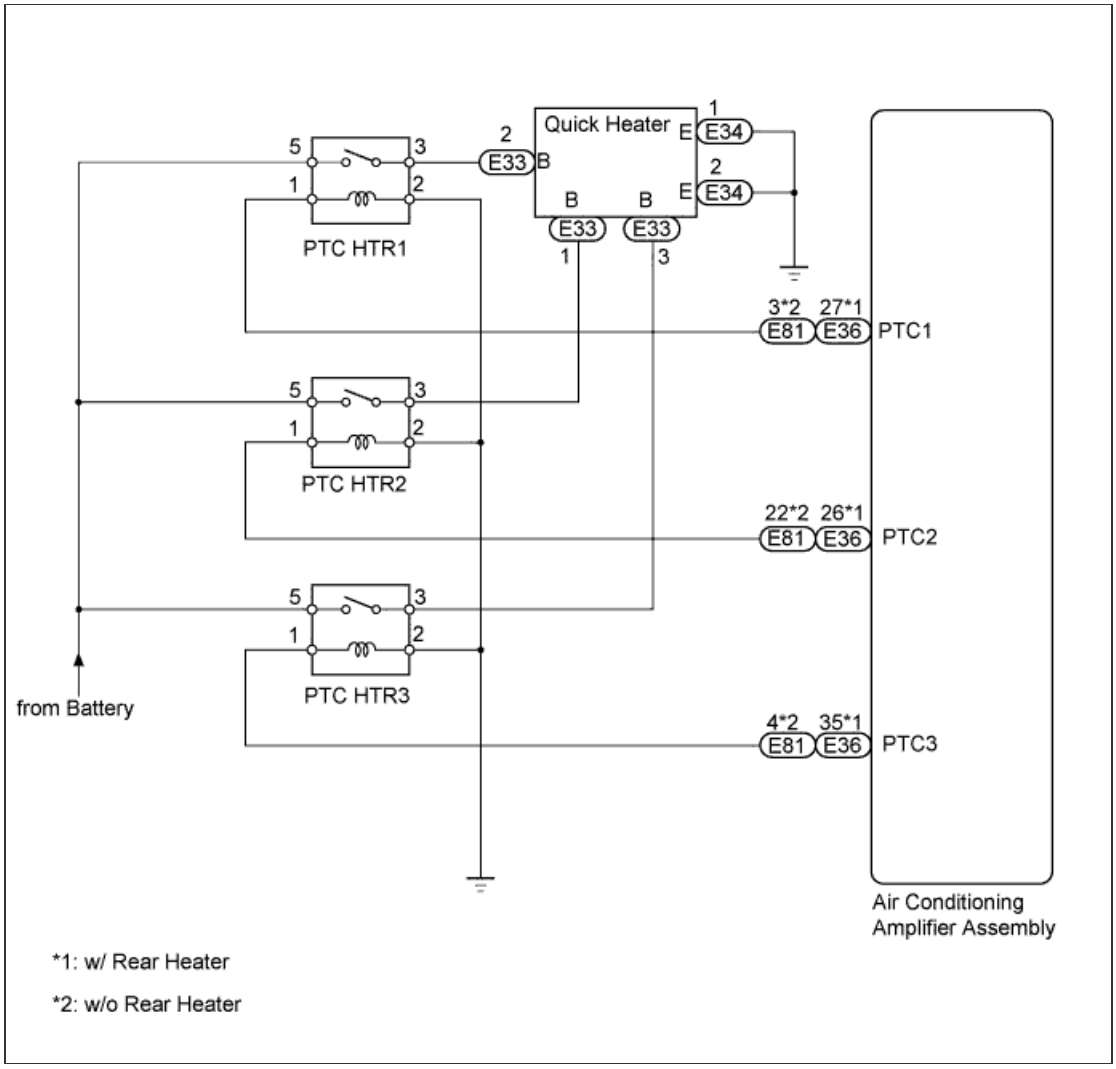

INSPECTION PROCEDURE


1.INSPECT PTC HEATER RELAY (PTC HTR1)

a. Remove the PTC HTR1 relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 5	Battery voltage not applied between terminals 1 and 2	10 kΩ or higher
	Battery voltage applied to terminals 1 and 2	Below 1 Ω

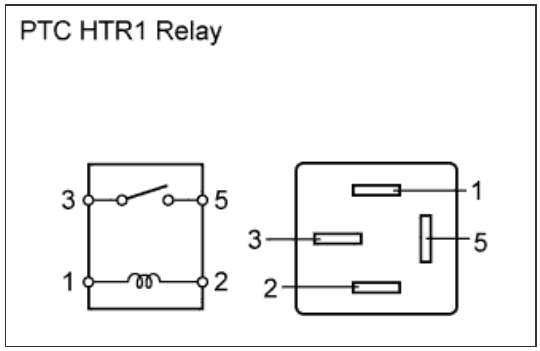

NG → REPLACE PTC HEATER RELAY

OK


2.INSPECT PTC HEATER RELAY (PTC HTR2)

a. Remove the PTC HTR2 relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 5	Battery voltage not applied between terminals 1 and 2	10 kΩ or higher
	Battery voltage applied to terminals 1 and 2	Below 1 Ω

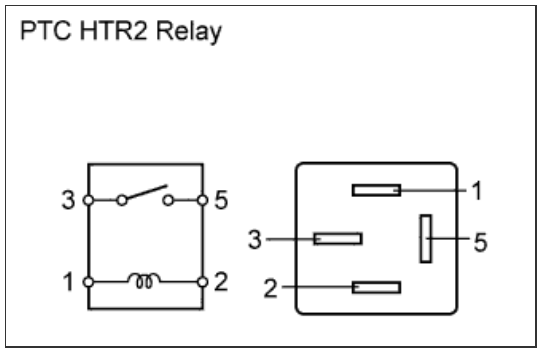

NG → REPLACE PTC HEATER RELAY

OK


3.INSPECT PTC HEATER RELAY (PTC HTR3)

a. Remove the PTC HTR3 relay from the engine room relay block.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
3 - 5	Battery voltage not applied between terminals 1 and 2	10 kΩ or higher
	Battery voltage applied to terminals 1 and 2	Below 1 Ω

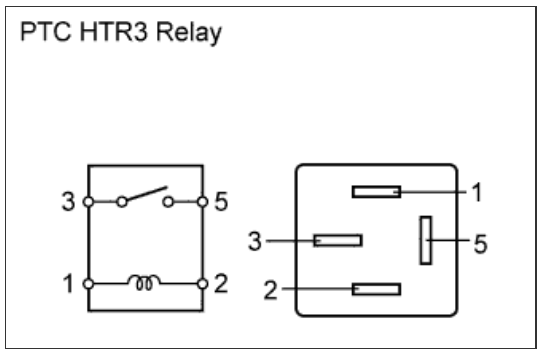

NG → REPLACE PTC HEATER RELAY

OK

4.CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY


a. w/ Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:


Tester Connection	Condition	Specified Condition
E36-27 (PTC1) - Body ground	Engine switch on (IG) Temperature setting: MAX HOT MODE switch: FOOT Engine coolant temperature: 55°C (131°F) or less Blower switch: off	11 to 14 V
E36-26 (PTC2) - Body ground		
E36-35 (PTC3) - Body ground		

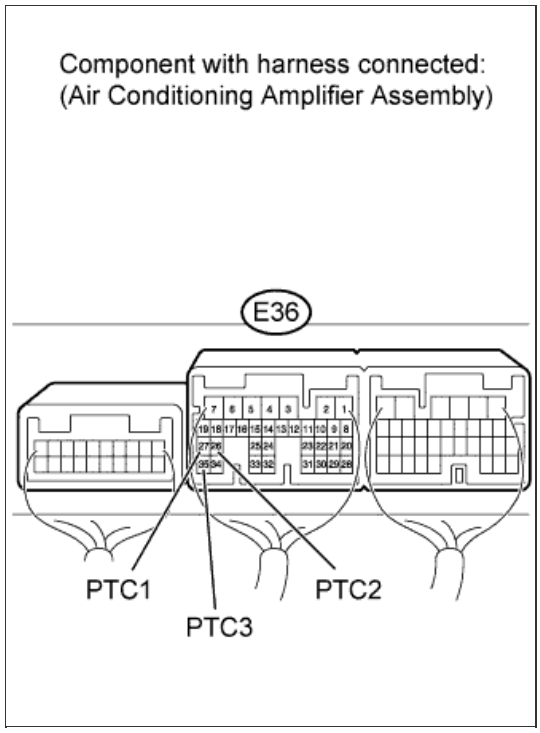

b. w/o Rear Heater

i. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

ii. Measure the voltage according to the value(s) in the table below.

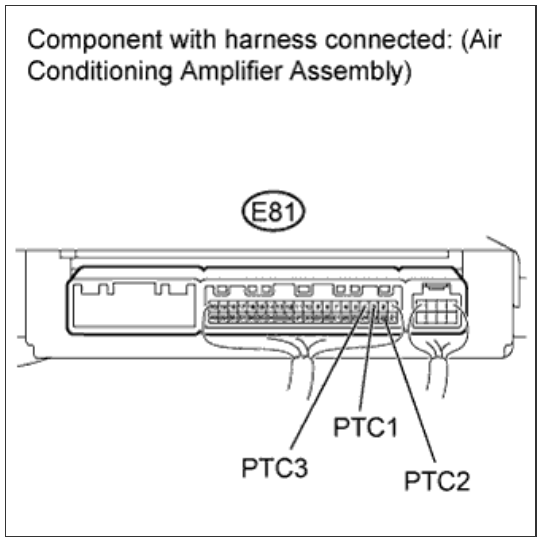

Standard Voltage:

Tester Connection	Condition	Specified Condition
E 1-3 (PTC1) - Body ground	Engine switch on (I) Temperature setting: MA HOT MODE switch: FOOT Engine coolant temperature: 55°C (131°F) or less Blower switch: off	11 to 14 V
E 1-22 (PTC2) - Body ground		
E 1-4 (PTC3) - Body ground		

NG → Go to step 8

OK

5.CHECK HARNESS AND CONNECTOR (PTC HEATER RELAY - QUICK HEATER)

a. Remove the quick heater relays from the engine room relay block.


b. Disconnect the E33 quick heater assembly connector.

c. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
PTC HTR2 terminal 3 - E33-1 (B)	Always	Below 1 Ω
PTC HTR1 terminal 3 - E33-2		

(B)		
PTC HTR3 terminal 3 - E33-3 (B)		
PTC HTR2 terminal 3 - Body ground	Always	10 kΩ or higher
PTC HTR1 terminal 3 - Body ground		
PTC HTR3 terminal 3 - Body ground		

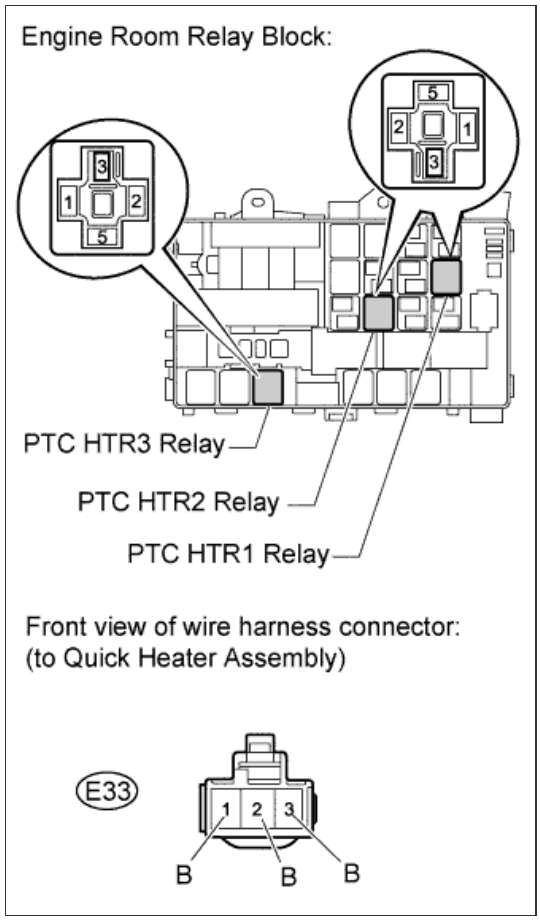

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


6.INSPECT QUICK HEATER ASSEMBLY

a. Disconnect the E33 and E34 quick heater connectors.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E33-1 (B) - E34-1 (E)	Always	Below 1 Ω
E33-2 (B) - E34-1 (E)		
E33-3 (B) - E34-2 (E)		

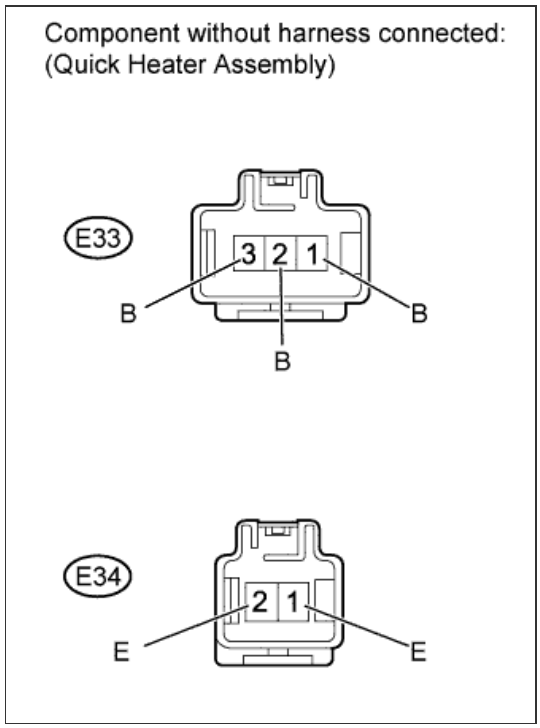

NG → REPLACE QUICK HEATER RELAY (Click here)

OK

7.CHECK HARNESS AND CONNECTOR (QUICK HEATER - BODY GROUND)


a. Disconnect the E34 quick heater assembly connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E34-1 (E) - Body ground	Always	10 kΩ or higher
E34-2 (E) - Body ground		

Front view of wire harness connector: (to Quick Heater Assembly)

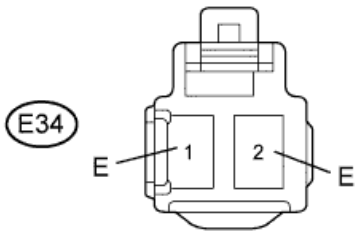

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

8.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - PTC HTR RELAY)

a. w/ Rear Heater


i. Disconnect the E36 amplifier connector.

ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E36-27 (PTC1) - Body ground	Always	Below 1 Ω
E36-26 (PTC2) - Body ground		
E36-35 (PTC3) - Body ground		

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

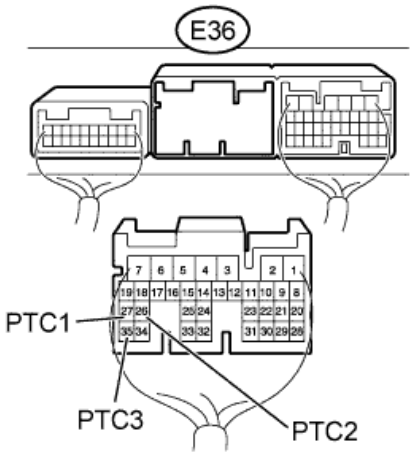

b. w/o Rear Heater

i. Disconnect the E 1 amplifier connector.


ii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E 1-3 (PTC1) - Body ground	Always	Below 1 Ω
E 1-22 (PTC2) - Body ground		
E 1-4 (PTC3) - Body ground		

Result

Result	Proceed to
O (for HD)	A
O (for RHD)	B
	C

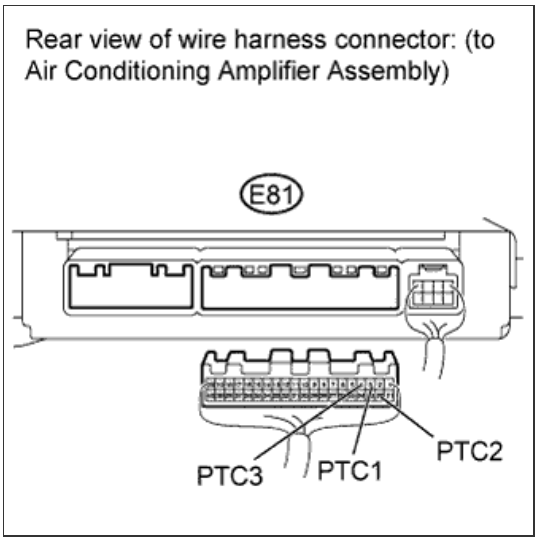


NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)


for Preparation Click here

DESCRIPTION

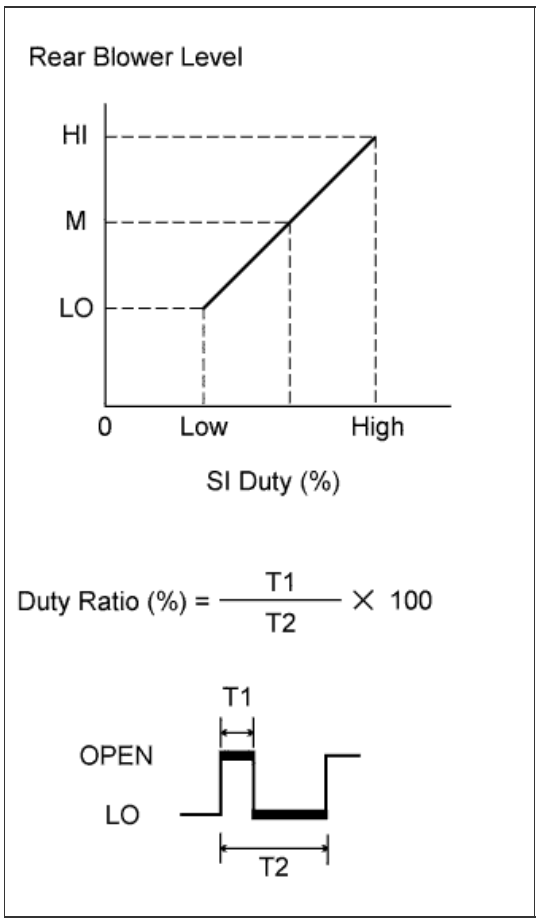

The rear blower motor (w/ rear heater) is operated by signals from the air conditioning amplifier assembly. The rear blower motor speed signals are transmitted by changes in the duty ratio.
Duty Ratio:
The duty ratio is the ratio of the rear blower motor OPEN time (T1) to the total of the rear blower motor OPEN and LO time (T2).
The rear blower motor controller controls the rear blower motor speed.

WIRING DIAGRAM

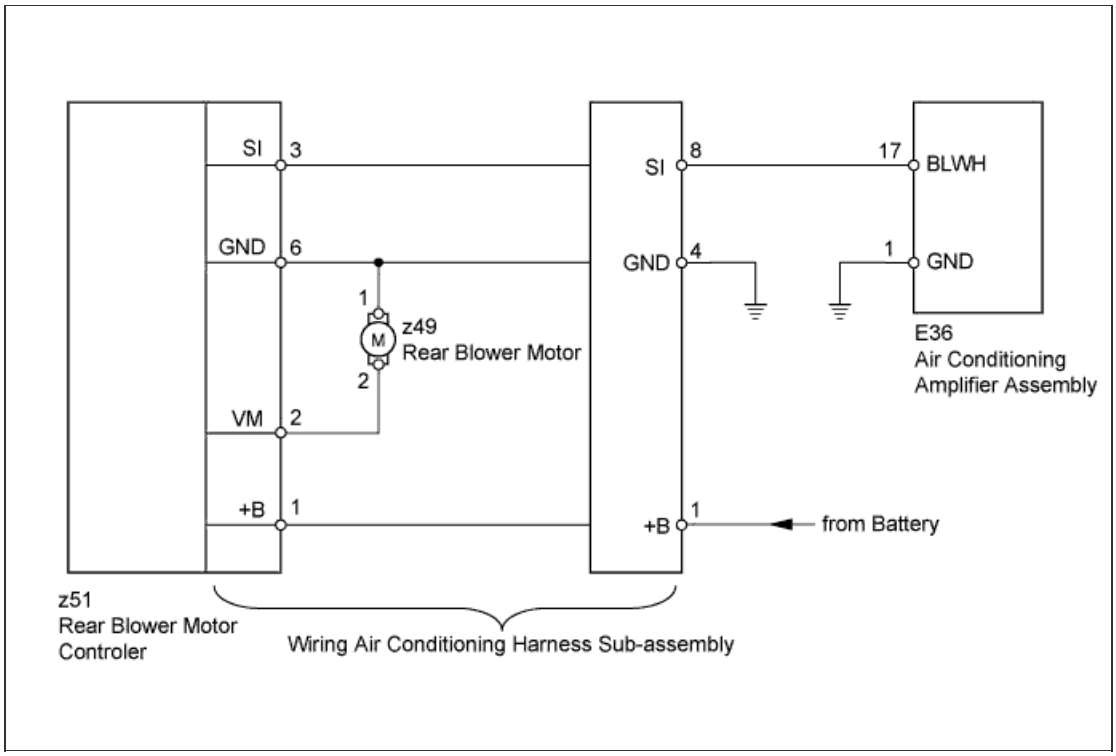

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (REAR BLOWER MOTOR)

a. elect the Active Test, use the intelligent tester to generate a control command, and then check that the rear blower motor operates.

Air Conditioner

Tester Display	Test Part	Control Range	Diagnostic Note
Rear Blower Motor	Rear blower motor	Min.: 0, Max.: 31	-

Result

Result	Proceed to
Rear blower motor operates normally	A
Rear blower motor does not operate	B
Rear blower motor operates but does not change speed	C

B → Go to step 2

C → Go to step 5

A

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

2.CHECK HARNESS AND CONNECTOR (WIRING AIR CONDITIONING HARNESS - BODY GROUND)


a. Disconnect the wiring air conditioning harness sub-assembly connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	pecified Condition
4 (GND) - Body ground	Always	Below 1 Ω

Front view of wire harness connector: (to Air Conditioning Wiring Harness Sub-assembly)

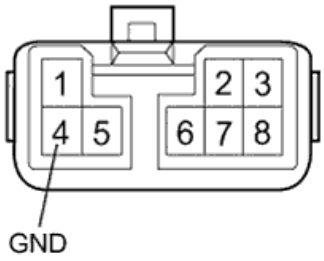

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK HARNESS AND CONNECTOR (WIRING AIR CONDITIONING HARNESS - BATTERY)


a. Disconnect the wiring air conditioning harness sub-assembly connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	pecified Condition
1 (+B) - Body ground	Always	11 to 14 V

Front view of wire harness connector: (to Air Conditioning Wiring Harness Sub-assembly)

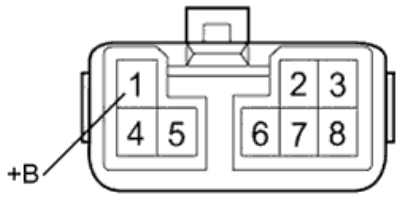

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY (SI VOLTAGE)

a. Disconnect the E36 amplifier connector.


b. Reconnect the wiring air conditioning harness sub-assembly connector.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	witch Condition	pecified Condition
8 ( ) - Body ground	Engine switch on (IG)	4.5 to 5.5 V

Component with harness connected: (Air Conditioning Wiring Harness Sub-assembly)

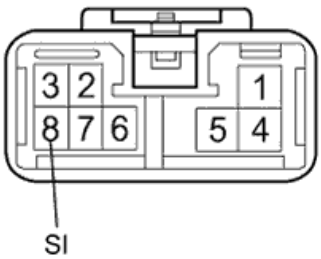

NG → Go to step 7

OK

5.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - WIRING AIR CONDITIONING HARNESS)


a. Disconnect the E36 amplifier connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	witch Condition	pecified Condition
E36-17 (BL) - E36-1 (GND)	Engine switch on (IG) Blower switch off	4.5 to 5.5 V

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

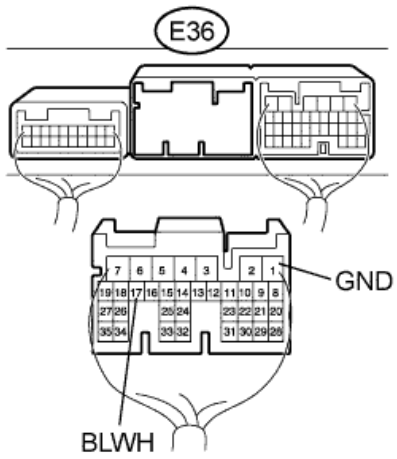

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY (BLWH SIGNAL)

a. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

b. Using an oscilloscope, check the waveform.

Measurement Condition


Item	Content
Terminal No.(ymbol)	E36-17 (BL) - E36-1 (GND)
Tool etting	1 V/DIV., 500 s/DIV.
Condition	Engine switch on (IG) Blower switch: off → on

OK:

Waveform is as shown in the illustration.

HINT:

aveform varies with the blower level.

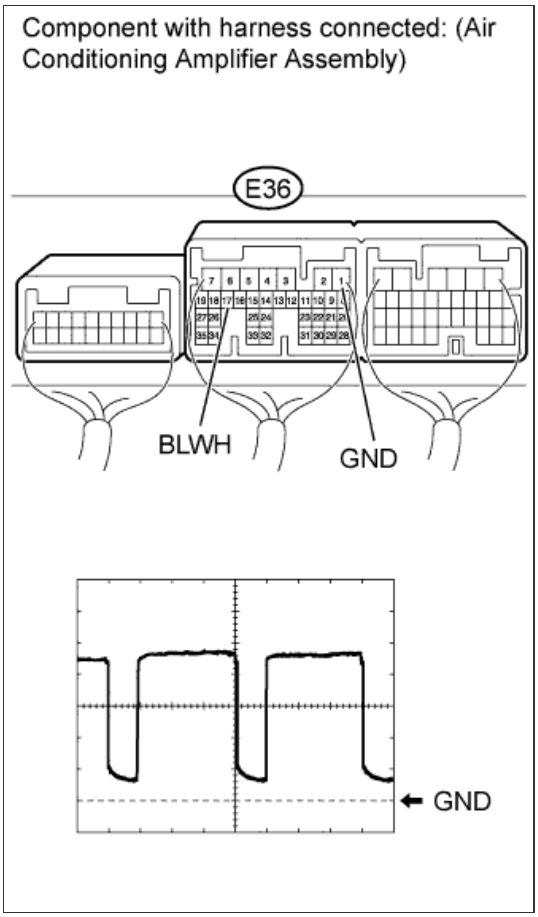

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK ↓

7.CHECK WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY (OPERATION)

a. Replace the wiring air conditioning harness sub-assembly with a normal one and check that the condition returns to normal.

OK:
Same problem does not occur.

NG → Go to step 8

OK ↓

REPLACE WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY


8.INSPECT REAR BLOWER MOTOR

a. Disconnect the 32 motor connector.

b. Connect the positive (+) lead of the battery to terminal 2 and the negative (-) lead to terminal 1, then check that the rear blower motor operates smoothly.

OK:
The rear blower motor operates smoothly.

Component without harness connected:
(Rear Blower Motor)

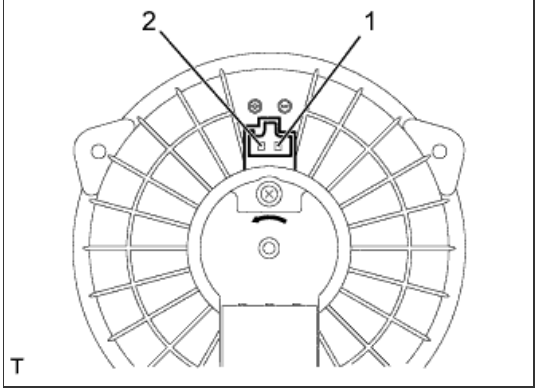


NG → REPLACE REAR BLOWER MOTOR (Click here)

OK → REPLACE REAR BLOWER MOTOR CONTROLLER (Click here)


for Preparation Click here

DESCRIPTION

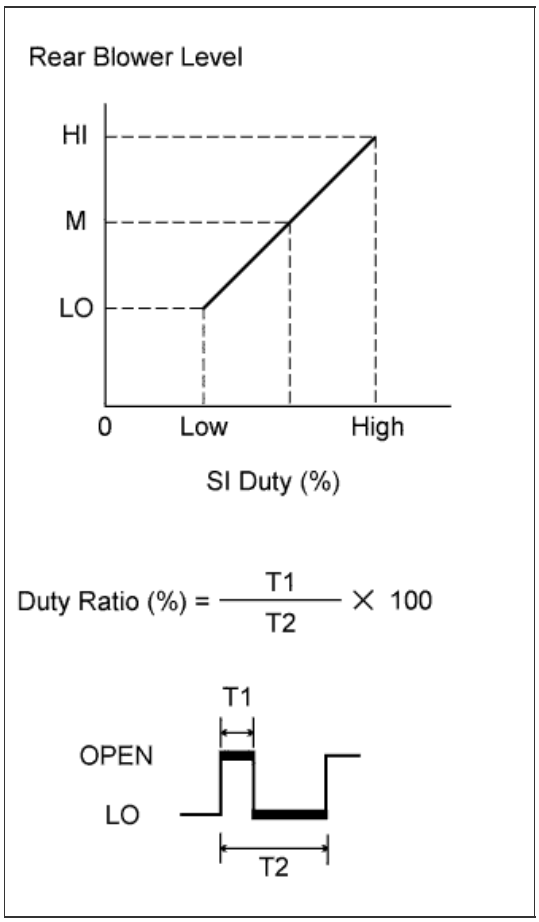

The rear blower motor (w/ rear heater) is operated by signals from the air conditioning amplifier assembly. The rear blower motor speed signals are transmitted by changes in the duty ratio.
Duty Ratio:
The duty ratio is the ratio of the rear blower motor OPEN time (T1) to the total of the rear blower motor OPEN and LO time (T2).
The rear blower motor controller controls the rear blower motor speed.

WIRING DIAGRAM

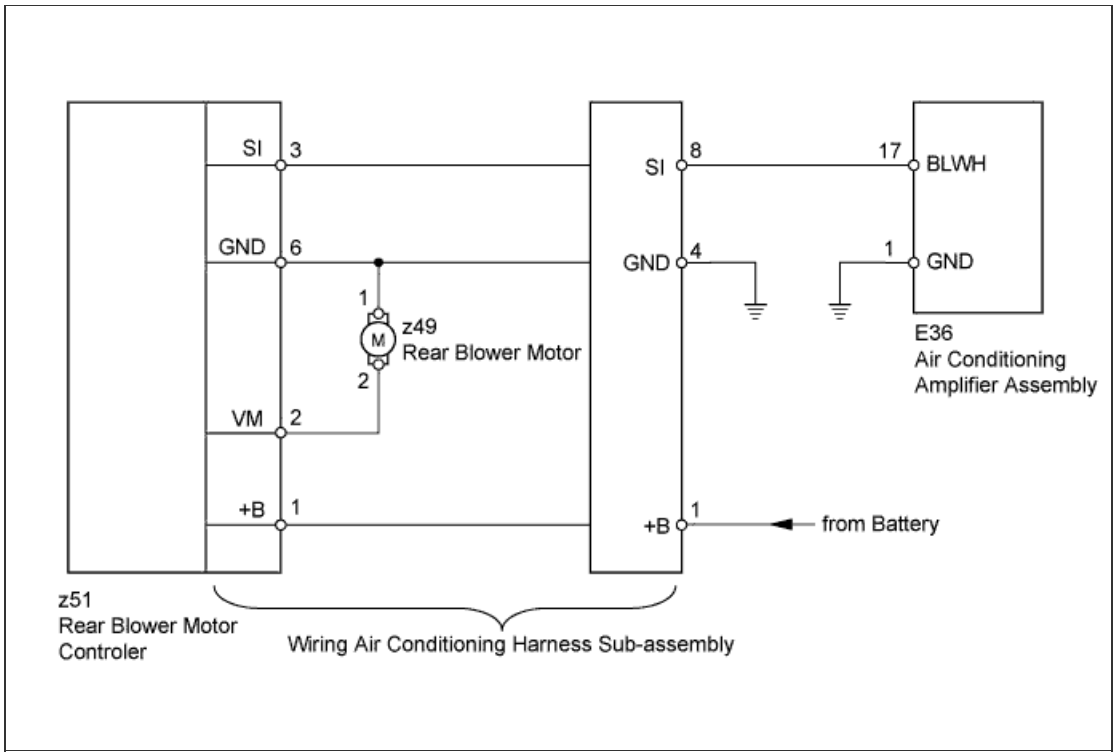

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (REAR BLOWER MOTOR)

a. elect the Active Test, use the intelligent tester to generate a control command, and then check that the rear blower motor operates.

Air Conditioner

Tester Display	Test Part	Control Range	Diagnostic Note
Rear Blower Motor	Rear blower motor	Min.: 0, Max.: 31	-

Result

Result	Proceed to
Rear blower motor operates normally	A
Rear blower motor does not operate	B
Rear blower motor operates but does not change speed	C

B → Go to step 2

C → Go to step 5

A

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

2.CHECK HARNESS AND CONNECTOR (WIRING AIR CONDITIONING HARNESS - BODY GROUND)


a. Disconnect the wiring air conditioning harness sub-assembly connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	pecified Condition
4 (GND) - Body ground	Always	Below 1 Ω

Front view of wire harness connector: (to Air Conditioning Wiring Harness Sub-assembly)

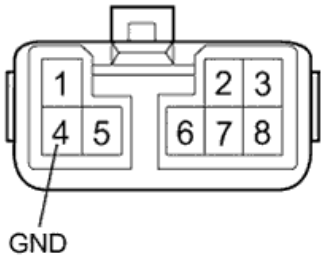

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK HARNESS AND CONNECTOR (WIRING AIR CONDITIONING HARNESS - BATTERY)


a. Disconnect the wiring air conditioning harness sub-assembly connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	pecified Condition
1 (+B) - Body ground	Always	11 to 14 V

Front view of wire harness connector: (to Air Conditioning Wiring Harness Sub-assembly)

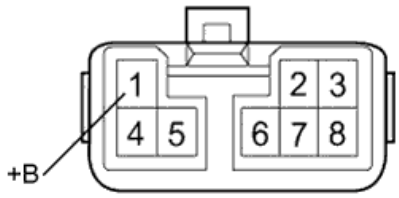

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY (SI VOLTAGE)

a. Disconnect the E36 amplifier connector.


b. Reconnect the wiring air conditioning harness sub-assembly connector.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	witch Condition	pecified Condition
8 ( ) - Body ground	Engine switch on (IG)	4.5 to 5.5 V

Component with harness connected: (Air Conditioning Wiring Harness Sub-assembly)

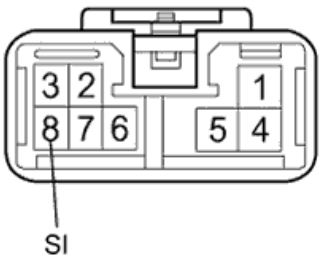

NG → Go to step 7

OK

5.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - WIRING AIR CONDITIONING HARNESS)


a. Disconnect the E36 amplifier connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	witch Condition	pecified Condition
E36-17 (BL) - E36-1 (GND)	Engine switch on (IG) Blower switch off	4.5 to 5.5 V

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

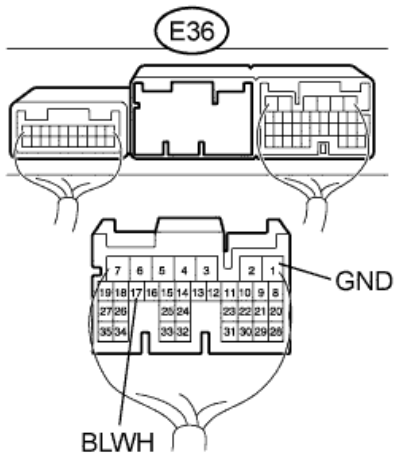

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY (BLWH SIGNAL)

a. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

b. Using an oscilloscope, check the waveform.

Measurement Condition


Item	Content
Terminal No.(ymbol)	E36-17 (BL) - E36-1 (GND)
Tool etting	1 V/DIV., 500 s/DIV.
Condition	Engine switch on (IG) Blower switch: off → on

OK:

Waveform is as shown in the illustration.

HINT:

aveform varies with the blower level.

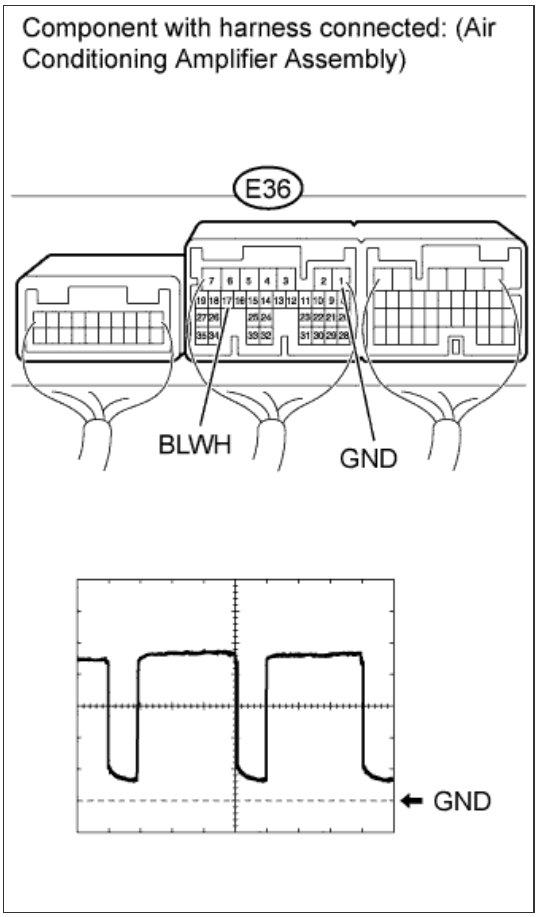

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK ↓

7.CHECK WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY (OPERATION)

a. Replace the wiring air conditioning harness sub-assembly with a normal one and check that the condition returns to normal.

OK:
Same problem does not occur.

NG → Go to step 8

OK ↓

REPLACE WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY


8.INSPECT REAR BLOWER MOTOR

a. Disconnect the 32 motor connector.

b. Connect the positive (+) lead of the battery to terminal 2 and the negative (-) lead to terminal 1, then check that the rear blower motor operates smoothly.

OK:
The rear blower motor operates smoothly.

Component without harness connected:
(Rear Blower Motor)

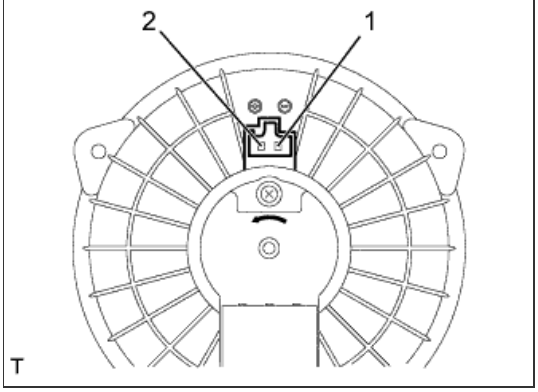


NG → REPLACE REAR BLOWER MOTOR (Click here)

OK → REPLACE REAR BLOWER MOTOR CONTROLLER (Click here)


for Preparation Click here

DESCRIPTION

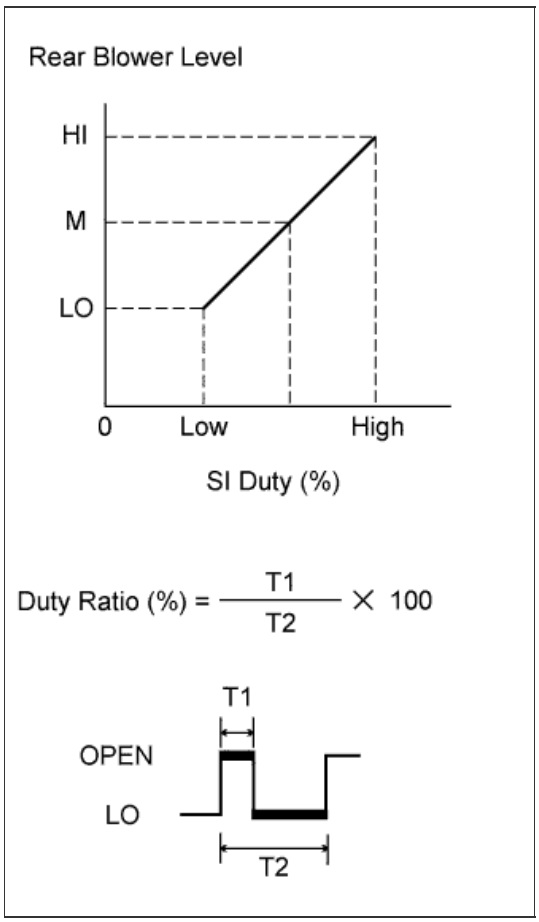

The rear blower motor (w/ rear heater) is operated by signals from the air conditioning amplifier assembly. The rear blower motor speed signals are transmitted by changes in the duty ratio.
Duty Ratio:
The duty ratio is the ratio of the rear blower motor OPEN time (T1) to the total of the rear blower motor OPEN and LO time (T2).
The rear blower motor controller controls the rear blower motor speed.

WIRING DIAGRAM

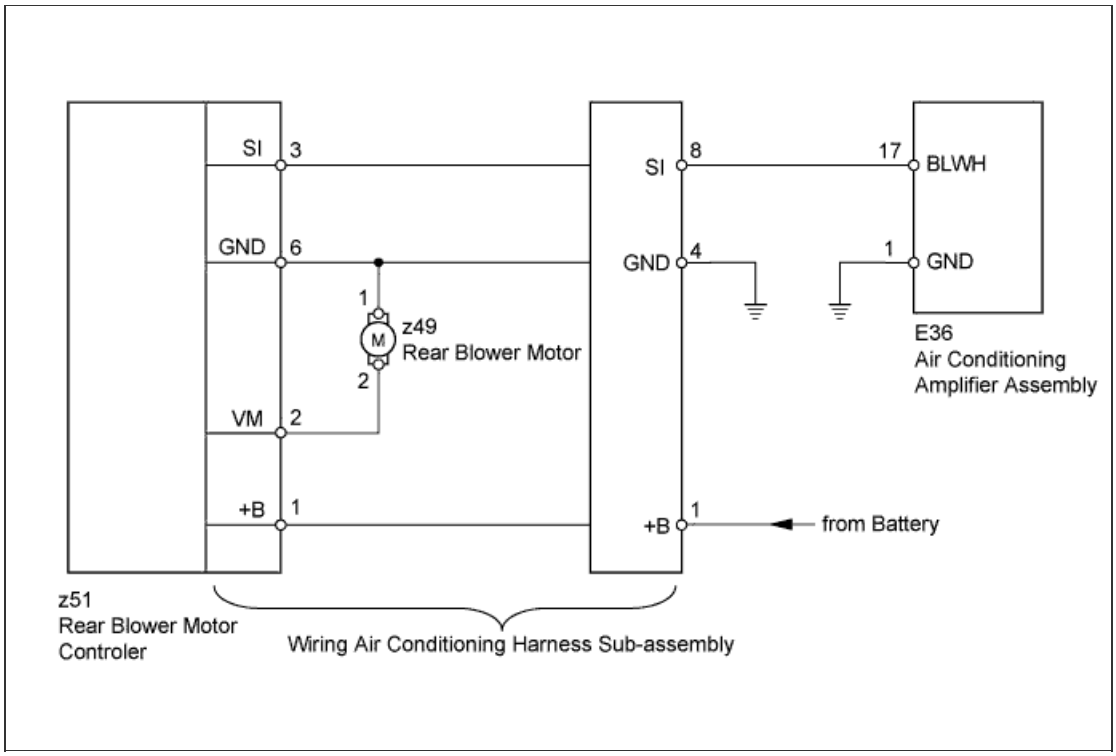

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (REAR BLOWER MOTOR)

a. elect the Active Test, use the intelligent tester to generate a control command, and then check that the rear blower motor operates.

Air Conditioner

Tester Display	Test Part	Control Range	Diagnostic Note
Rear Blower Motor	Rear blower motor	Min.: 0, Max.: 31	-

Result

Result	Proceed to
Rear blower motor operates normally	A
Rear blower motor does not operate	B
Rear blower motor operates but does not change speed	C

B → Go to step 2

C → Go to step 5

A

PROCEED TO NEXT CIRCUIT INSPECTION SHOWN IN PROBLEM SYMPTOMS TABLE (Click here)

2.CHECK HARNESS AND CONNECTOR (WIRING AIR CONDITIONING HARNESS - BODY GROUND)


a. Disconnect the wiring air conditioning harness sub-assembly connector.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	pecified Condition
4 (GND) - Body ground	Always	Below 1 Ω

Front view of wire harness connector: (to Air Conditioning Wiring Harness Sub-assembly)

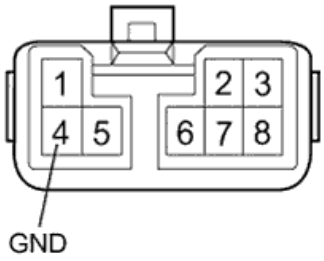

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

3.CHECK HARNESS AND CONNECTOR (WIRING AIR CONDITIONING HARNESS - BATTERY)


a. Disconnect the wiring air conditioning harness sub-assembly connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	pecified Condition
1 (+B) - Body ground	Always	11 to 14 V

Front view of wire harness connector: (to Air Conditioning Wiring Harness Sub-assembly)

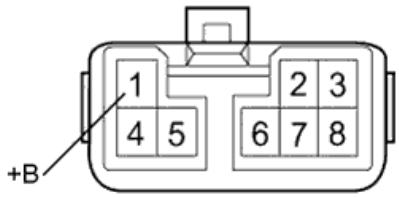

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY (SI VOLTAGE)

a. Disconnect the E36 amplifier connector.


b. Reconnect the wiring air conditioning harness sub-assembly connector.

c. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	witch Condition	pecified Condition
8 ( ) - Body ground	Engine switch on (IG)	4.5 to 5.5 V

Component with harness connected: (Air Conditioning Wiring Harness Sub-assembly)

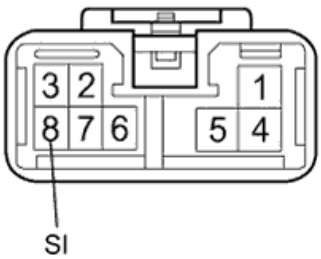

NG → Go to step 7

OK

5.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - WIRING AIR CONDITIONING HARNESS)


a. Disconnect the E36 amplifier connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	witch Condition	pecified Condition
E36-17 (BL) - E36-1 (GND)	Engine switch on (IG) Blower switch off	4.5 to 5.5 V

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

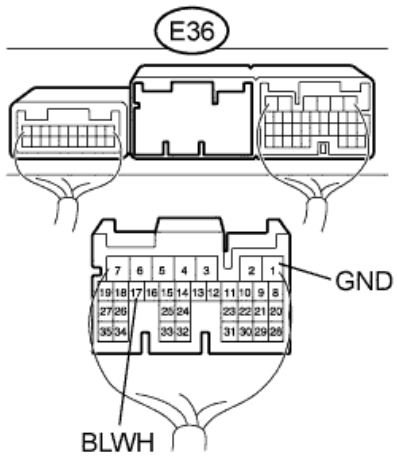

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

6.CHECK AIR CONDITIONING AMPLIFIER ASSEMBLY (BLWH SIGNAL)

a. Remove the air conditioning amplifier assembly with its connectors still connected (Click here).

b. Using an oscilloscope, check the waveform.

Measurement Condition


Item	Content
Terminal No.(ymbol)	E36-17 (BL) - E36-1 (GND)
Tool etting	1 V/DIV., 500 s/DIV.
Condition	Engine switch on (IG) Blower switch: off → on

OK:

Waveform is as shown in the illustration.

HINT:

aveform varies with the blower level.

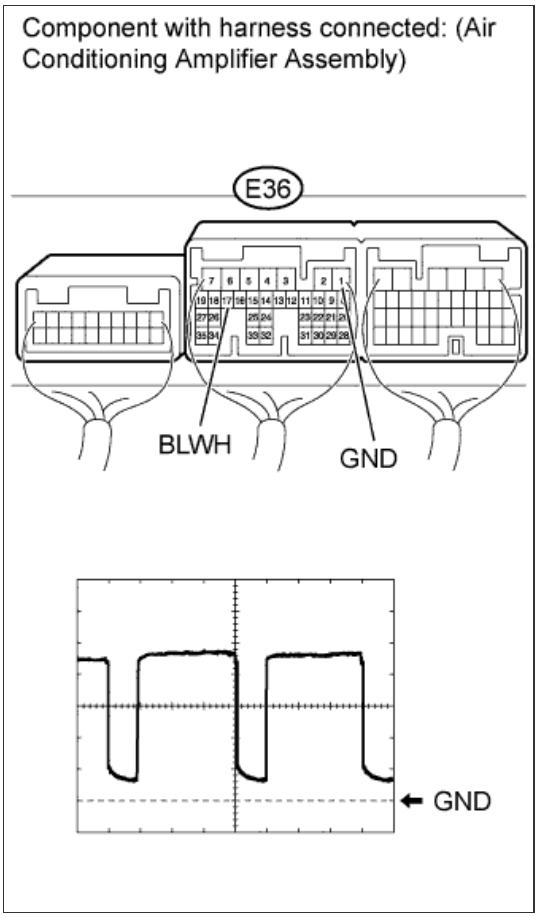

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK ↓

7.CHECK WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY (OPERATION)

a. Replace the wiring air conditioning harness sub-assembly with a normal one and check that the condition returns to normal.

OK:
Same problem does not occur.

NG → Go to step 8

OK ↓

REPLACE WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY


8.INSPECT REAR BLOWER MOTOR

a. Disconnect the 32 motor connector.

b. Connect the positive (+) lead of the battery to terminal 2 and the negative (-) lead to terminal 1, then check that the rear blower motor operates smoothly.

OK:
The rear blower motor operates smoothly.

Component without harness connected:
(Rear Blower Motor)

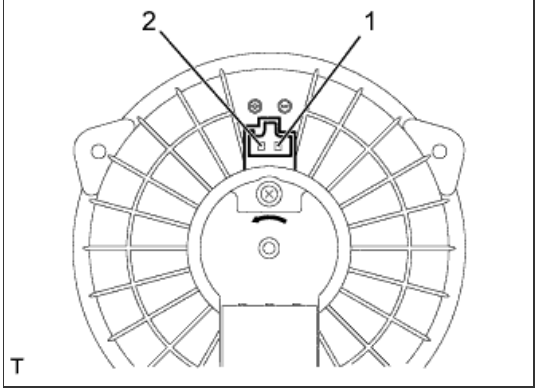

NG → REPLACE REAR BLOWER MOTOR (Click here)


OK → REPLACE REAR BLOWER MOTOR CONTROLLER (Click here)

for Preparation Click here

DESCRIPTION

The rear cooling unit expansion valve (rear magnetic valve) is controlled by the air conditioning amplifier assembly.

WIRING DIAGRAM

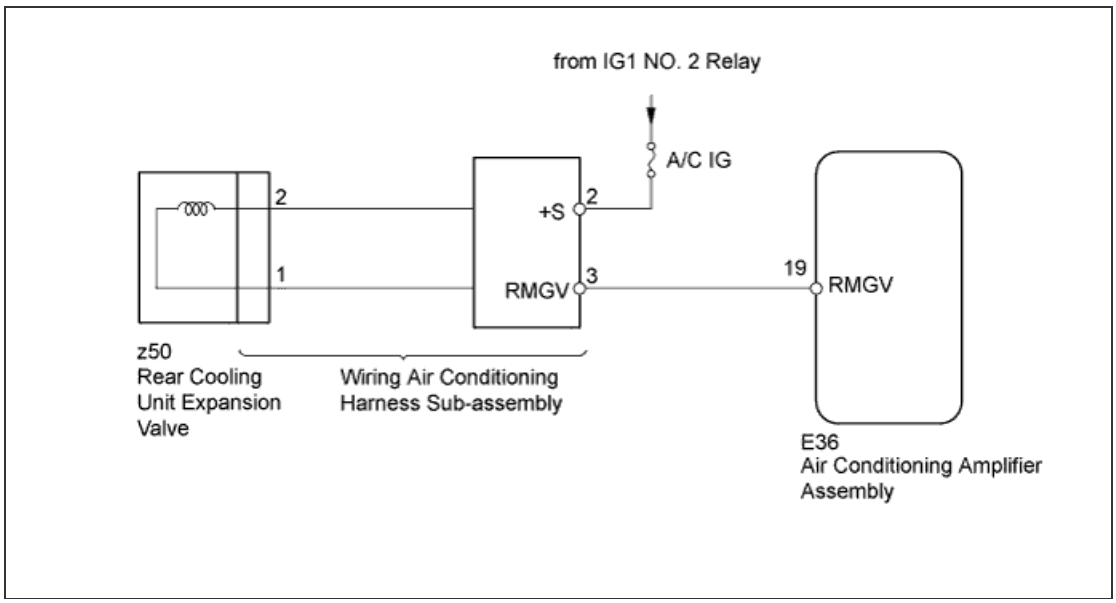

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (REAR A/C MAG VALVE)

a. Select the Active Test, use the intelligent tester to generate a control command, and then check that the rear cooling unit expansion valve operates.

OK:
Rear cooling unit expansion valve operates normally.

Air Conditioner

Tester Display	Test Part	Control Range	Diagnostic Note
Rear A/C Mag Valv	Rear cooling unit expansion valve	OFF or ON	-

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.INSPECT FUSE (A/C IG)

a. Remove the A/C IG fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C IG fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

3.CHECK HARNESS AND CONNECTOR (WIRING AIR CONDITIONING HARNESS - BATTERY)


a. Disconnect the wiring air conditioning harness sub-assembly connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
2 (+S) - Body ground	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector: (to Air Conditioning Wiring Harness Sub-assembly)

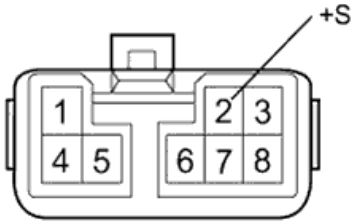

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK HARNESS AND CONNECTOR (WIRING AIR CONDITIONING HARNESS - AIR CONDITIONING AMPLIFIER)

a. Disconnect the wiring air conditioning harness sub-assembly connector.


b. Disconnect the E36 amplifier connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
3 (RMGV) - E36-19 (RMGV)	Always	Below 1 Ω
3 (RMGV) - Body ground	Always	10 kΩ or higher
E36-19 (RMGV) - Body ground		

Front view of wire harness connector: (to Air Conditioning Wiring Harness Sub-assembly)

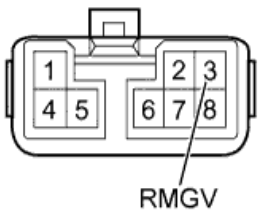

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

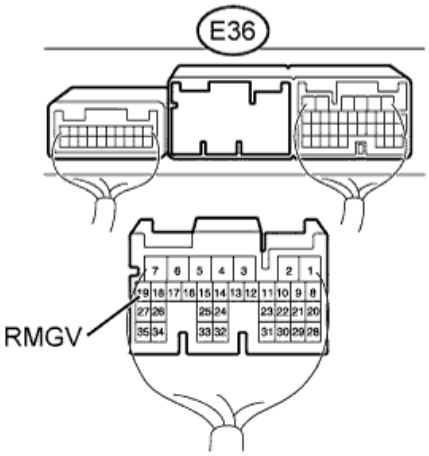

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

5.CHECK REAR COOLING UNIT EXPANSION VALVE (OPERATION)

a. Replace the rear cooling unit expansion valve (Click here).

HINT:

Since the rear cooling unit expansion valve cannot be inspected while it is removed from the vehicle, replace the rear cooling unit expansion valve with a normal one and check that the condition returns to normal.

OK:

Same problem does not occur.

NG → Go to step 6

OK

REPLACE REAR COOLING UNIT EXPANSION VALVE (Click here)

6.CHECK WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY (OPERATION)

a. Replace the wiring air conditioning harness sub-assembly with a normal one and check that the condition returns to normal.

OK:

Same problem does not occur.

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK


REPLACE WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY

for Preparation Click here

DESCRIPTION

The rear cooling unit expansion valve (rear magnetic valve) is controlled by the air conditioning amplifier assembly.

WIRING DIAGRAM

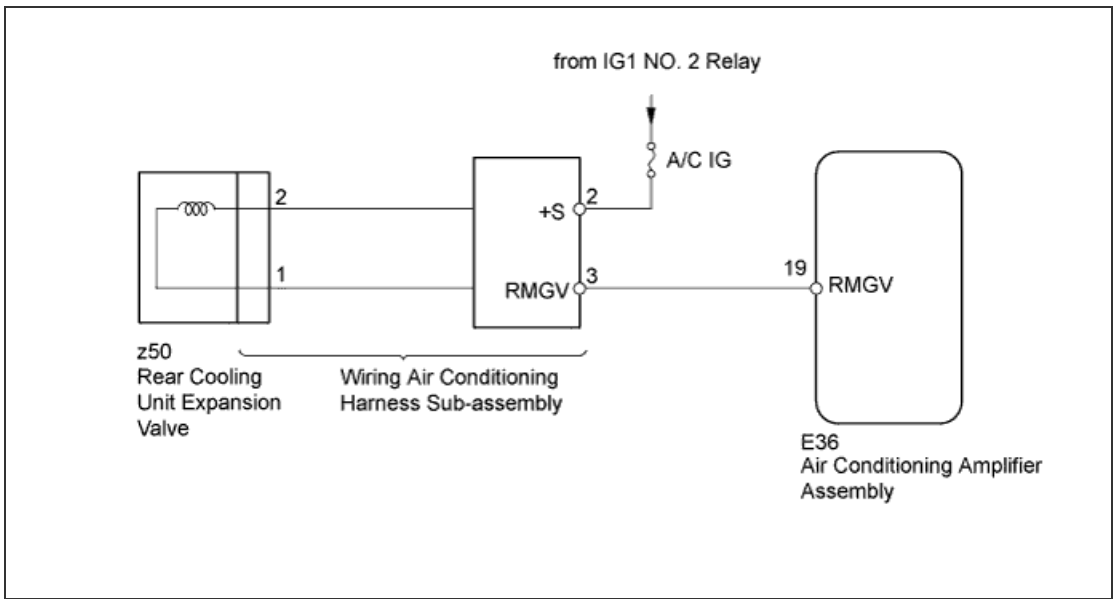

INSPECTION PROCEDURE

1.PERFORM ACTIVE TEST USING INTELLIGENT TESTER (REAR A/C MAG VALVE)

a. Select the Active Test, use the intelligent tester to generate a control command, and then check that the rear cooling unit expansion valve operates.

OK:
Rear cooling unit expansion valve operates normally.

Air Conditioner

Tester Display	Test Part	Control Range	Diagnostic Note
Rear A/C Mag Valv	Rear cooling unit expansion valve	OFF or ON	-

NG → Go to step 2

OK

REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

2.INSPECT FUSE (A/C IG)

a. Remove the A/C IG fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C IG fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

3.CHECK HARNESS AND CONNECTOR (WIRING AIR CONDITIONING HARNESS - BATTERY)


a. Disconnect the wiring air conditioning harness sub-assembly connector.

b. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
2 (+S) - Body ground	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

Front view of wire harness connector: (to Air Conditioning Wiring Harness Sub-assembly)

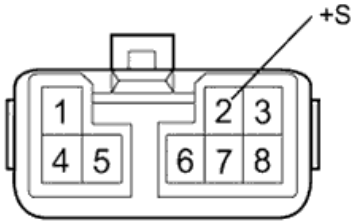

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4.CHECK HARNESS AND CONNECTOR (WIRING AIR CONDITIONING HARNESS - AIR CONDITIONING AMPLIFIER)

a. Disconnect the wiring air conditioning harness sub-assembly connector.


b. Disconnect the E36 amplifier connector.

c. Measure the resistance according to the value(s) in the table below.


Standard Resistance:

Tester Connection	Condition	Specified Condition
3 (RMGV) - E36-19 (RMGV)	Always	Below 1 Ω
3 (RMGV) - Body ground	Always	10 kΩ or higher
E36-19 (RMGV) - Body ground		

Front view of wire harness connector: (to Air Conditioning Wiring Harness Sub-assembly)

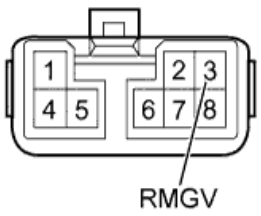

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

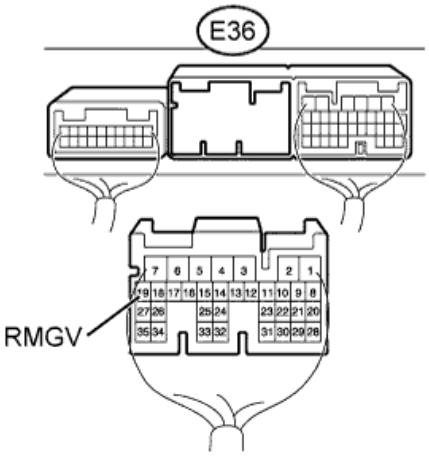

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

5.CHECK REAR COOLING UNIT EXPANSION VALVE (OPERATION)

a. Replace the rear cooling unit expansion valve (Click here).

HINT:

Since the rear cooling unit expansion valve cannot be inspected while it is removed from the vehicle, replace the rear cooling unit expansion valve with a normal one and check that the condition returns to normal.

OK:

Same problem does not occur.

NG → Go to step 6

OK

REPLACE REAR COOLING UNIT EXPANSION VALVE (Click here)

6.CHECK WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY (OPERATION)

a. Replace the wiring air conditioning harness sub-assembly with a normal one and check that the condition returns to normal.

OK:

Same problem does not occur.

NG → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

OK


REPLACE WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY

for Preparation Click here

DESCRIPTION

The main power source is supplied to the air conditioning amplifier assembly when the engine switch is on (IG). The power source is used for operating the air conditioning amplifier assembly and servo motor, etc.

WIRING DIAGRAM

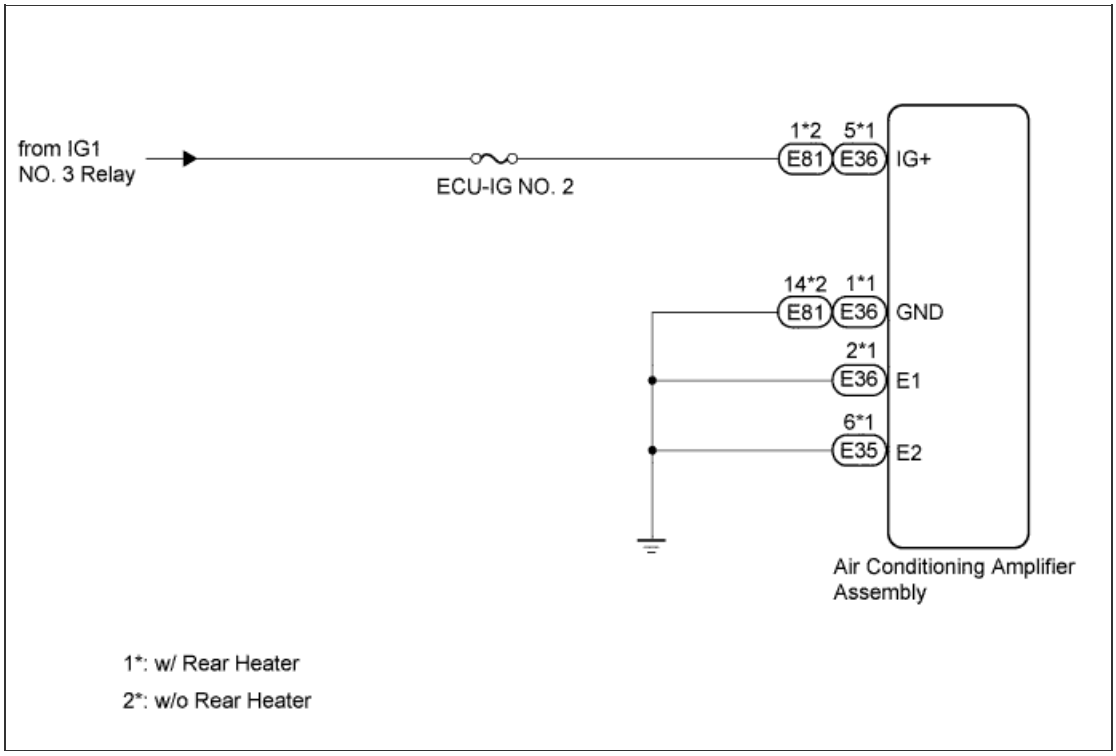

INSPECTION PROCEDURE

HINT:

Start the engine before inspection. Check the relay or battery if the entry and start system does not start.

1.INSPECT FUSE (ECU-IG NO. 2)

a. Remove the ECU-IG NO. 2 fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
ECU-IG NO. 2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - BATTERY AND BODY GROUND)

a. w/ Rear Heater

i. Disconnect the E35 and E36 amplifier connectors.

ii. Measure the voltage according to the value(s) in the table below.


Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E36-5 (IG+) - Body ground	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E36-1 (GND) - Body ground	Always	Below 1 Ω
E36-2 (E1) - Body ground		
E35-6 (E2) - Body ground		

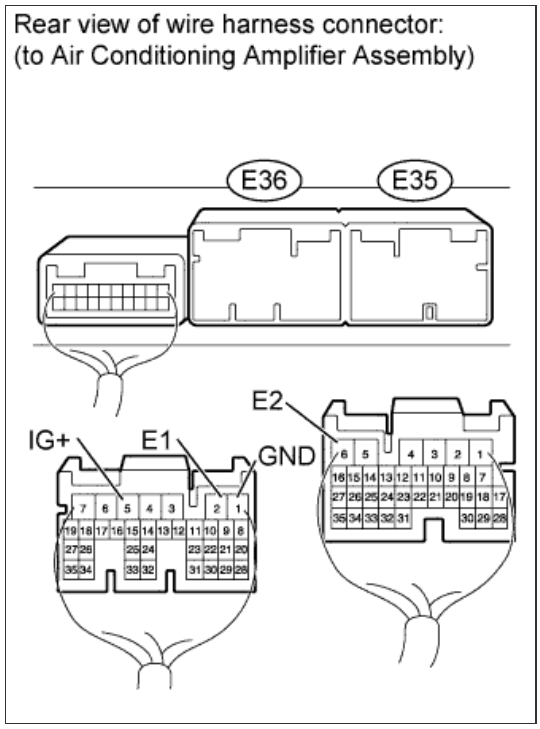

b. w/o Rear Heater

i. Disconnect the E81 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.


Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-1 (IG+) - Body ground	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-14 (GND) - Body ground	Always	Below 1 Ω

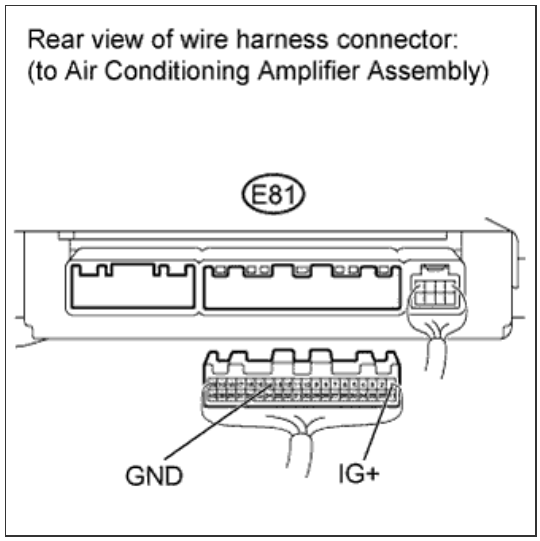

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

The main power source is supplied to the air conditioning amplifier assembly when the engine switch is on (IG). The power source is used for operating the air conditioning amplifier assembly and servo motor, etc.

WIRING DIAGRAM

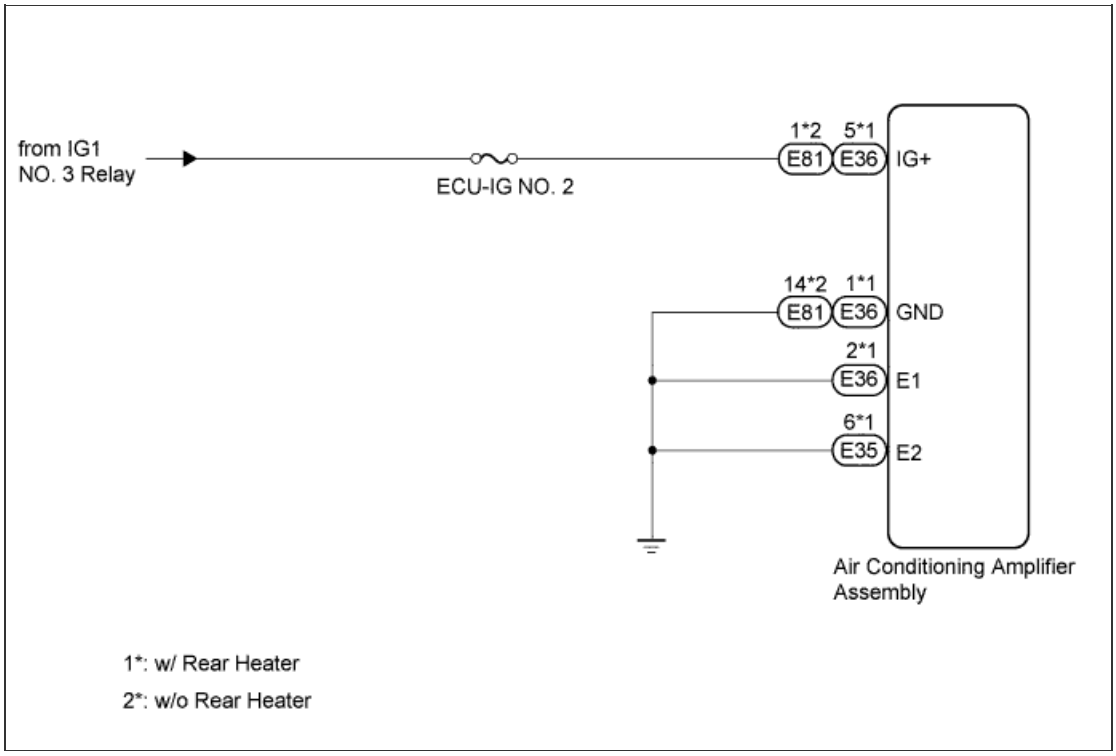

INSPECTION PROCEDURE

HINT:

Start the engine before inspection. Check the relay or battery if the entry and start system does not start.

1.INSPECT FUSE (ECU-IG NO. 2)

a. Remove the ECU-IG NO. 2 fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
ECU-IG NO. 2 fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - BATTERY AND BODY GROUND)

a. w/ Rear Heater

i. Disconnect the E35 and E36 amplifier connectors.

ii. Measure the voltage according to the value(s) in the table below.


Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E36-5 (IG+) - Body ground	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E36-1 (GND) - Body ground	Always	Below 1 Ω
E36-2 (E1) - Body ground		
E35-6 (E2) - Body ground		

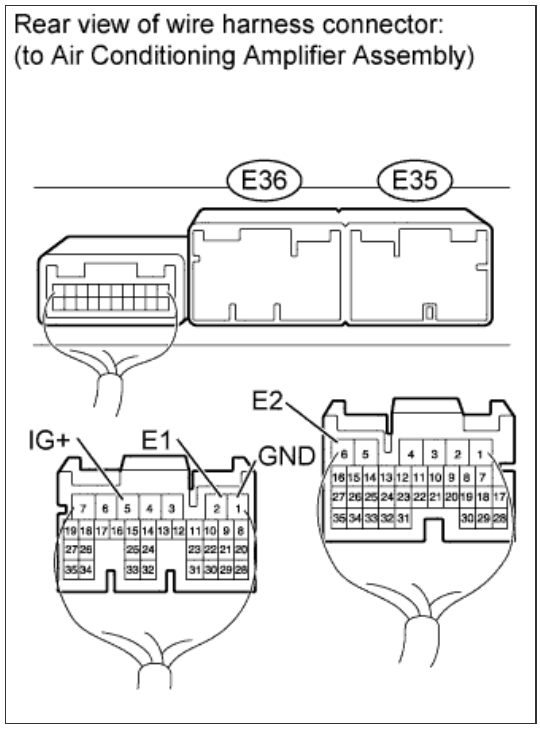

b. w/o Rear Heater

i. Disconnect the E81 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.


Standard Voltage:

Tester Connection	Switch Condition	Specified Condition
E81-1 (IG+) - Body ground	Engine switch off	Below 1 V
	Engine switch on (IG)	11 to 14 V

iii. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
E81-14 (GND) - Body ground	Always	Below 1 Ω

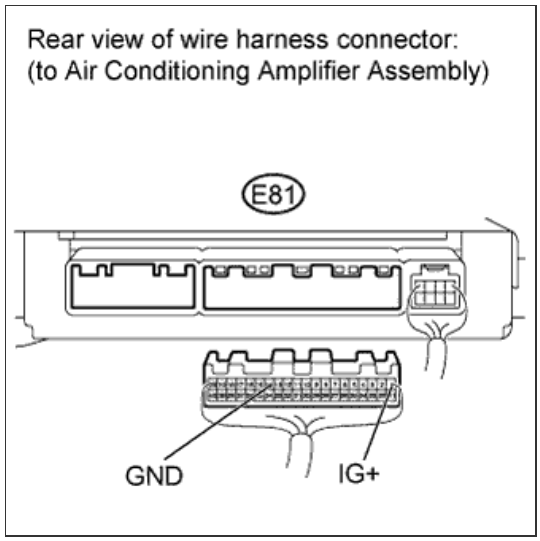

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR


OK → REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

The back-up power source circuit for the air conditioning amplifier assembly is shown below. Power is supplied even when turning the engine switch off and is used for diagnostic trouble code memory, etc.

WIRING DIAGRAM

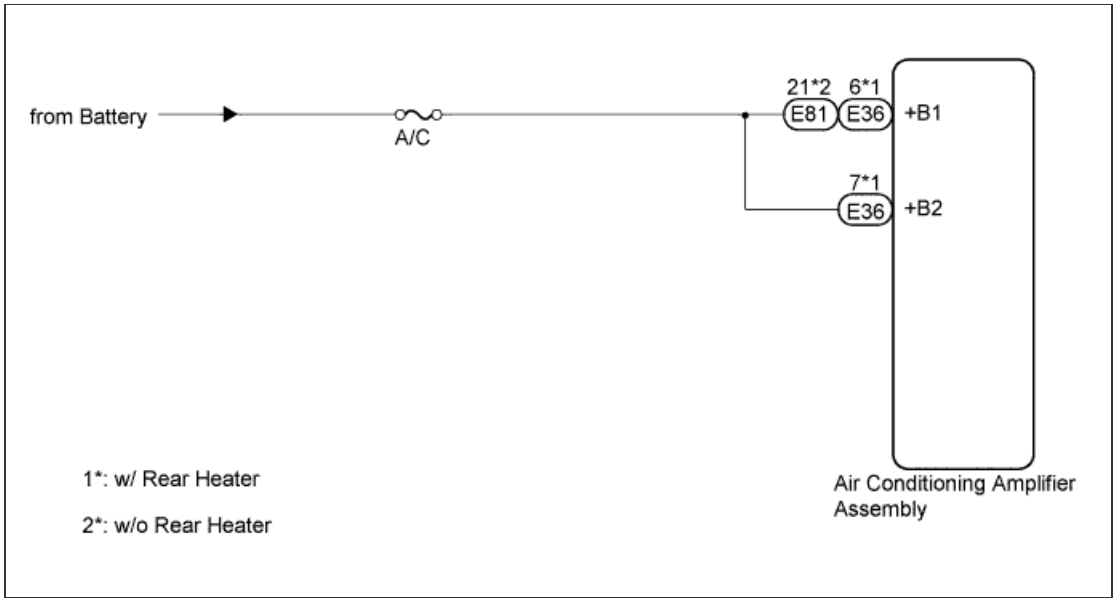

INSPECTION PROCEDURE

1.INSPECT FUSE (A/C)

a. Remove the A/C fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - BATTERY)

a. w/ Rear Heater


i. Disconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E36-6 (+B1) - Body ground	Always	11 to 14 V
E36-7 (+B2) - Body ground		

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

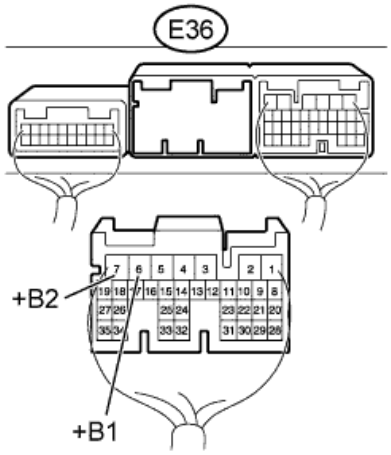

b. w/o Rear Heater


i. Disconnect the E81amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E81-21 (+B1) - Body ground	Always	11 to 14 V

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

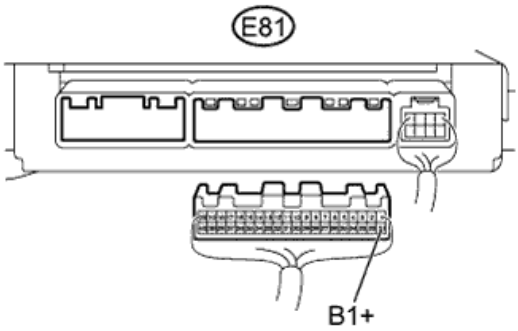

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

for Preparation Click here

DESCRIPTION

The back-up power source circuit for the air conditioning amplifier assembly is shown below. Power is supplied even when turning the engine switch off and is used for diagnostic trouble code memory, etc.

WIRING DIAGRAM

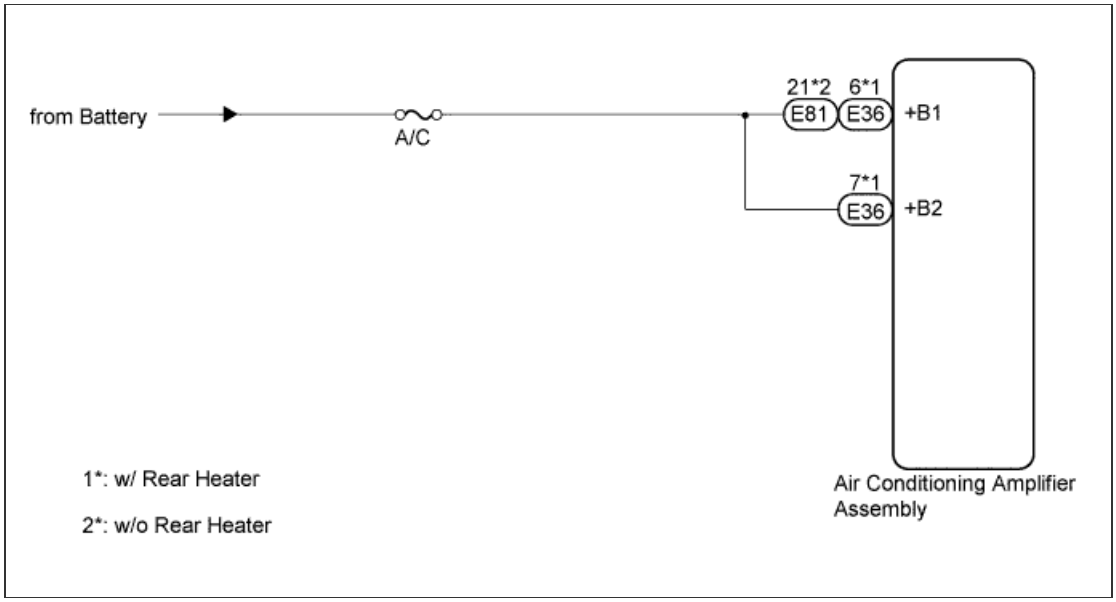

INSPECTION PROCEDURE

1.INSPECT FUSE (A/C)

a. Remove the A/C fuse from the cowl side junction block LH.

b. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A/C fuse	Always	Below 1 Ω

NG → REPLACE FUSE

OK

2.CHECK HARNESS AND CONNECTOR (AIR CONDITIONING AMPLIFIER - BATTERY)

a. w/ Rear Heater


i. Disconnect the E36 amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E36-6 (+B1) - Body ground	Always	11 to 14 V
E36-7 (+B2) - Body ground		

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

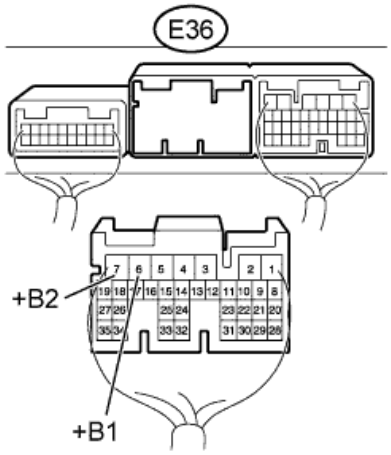

b. w/o Rear Heater


i. Disconnect the E81amplifier connector.

ii. Measure the voltage according to the value(s) in the table below.

Standard Voltage:

Tester Connection	Condition	Specified Condition
E81-21 (+B1) - Body ground	Always	11 to 14 V

Rear view of wire harness connector: (to Air Conditioning Amplifier Assembly)

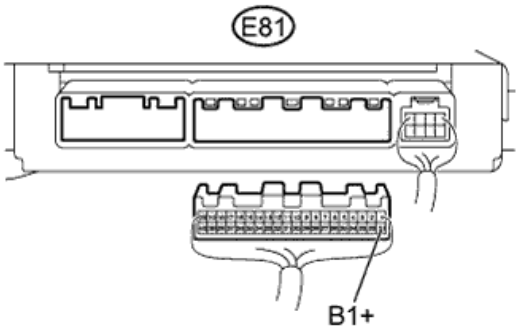

NG → REPAIR OR REPLACE HARNESS OR CONNECTOR

OK


REPLACE AIR CONDITIONING AMPLIFIER ASSEMBLY (Click here)

for Preparation Click here

1. INSPECT REFRIGERANT VOLUME

a. Check the sight glass on the liquid pipe A.
Test conditions:

- Temperature at the air inlet is 30 to 35°C (86 to 95°F).
- Engine is running at 1500 rpm.
- Blower speed control switch is at HI.
- A/C switch is on.
- Temperature control switch is at the MAX. COOL position.
- Doors are fully open.

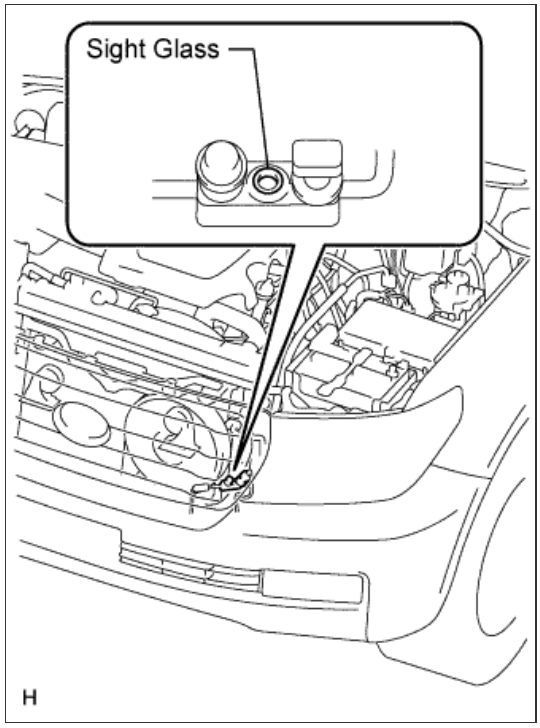

Item	Symptom	Amount of Refrigerant	Corrective Procedures
1	Bubbles visible	Insufficient*	(1) Check for gas leakage and repair if necessary (2) Add refrigerant until bubbles disappear
2	No bubbles visible	Empty, insufficient or too much	Refer to items 3 and 4
3	No temperature difference between compressor inlet and outlet	Empty or nearly empty	(1) Check for gas leakage with halogen leak detector and repair if necessary (2) Add refrigerant until bubbles disappear
4	Considerable temperature difference between compressor inlet and outlet	Correct or too much	Refer to items 5 and 6
5	Immediately after A/C is off, refrigerant becomes clear	Too much	(1) Drain or discharge refrigerant (2) Bleed air and supply proper amount of purified refrigerant
6	Immediately after A/C is off, refrigerant foams and then becomes clear	Correct	-

HINT:

*: If the ambient temperature is higher than usual but cooling is sufficient, bubbles in the sight glass are permissible.


2. INSPECT REFRIGERANT PRESSURE WITH MANIFOLD GAUGE SET

a. This method uses a manifold gauge set to locate problem areas. Read the manifold gauge pressure when these conditions are established.

Test conditions:

- Temperature at the air inlet with the switch set at RECIRC is 30 to 35°C (86 to 95°F).
- Engine is running at 1500 rpm.
- All doors are fully open.
- Blower speed control switch is at HI.
- A/C switch is on.


Gauge readings (Reference).

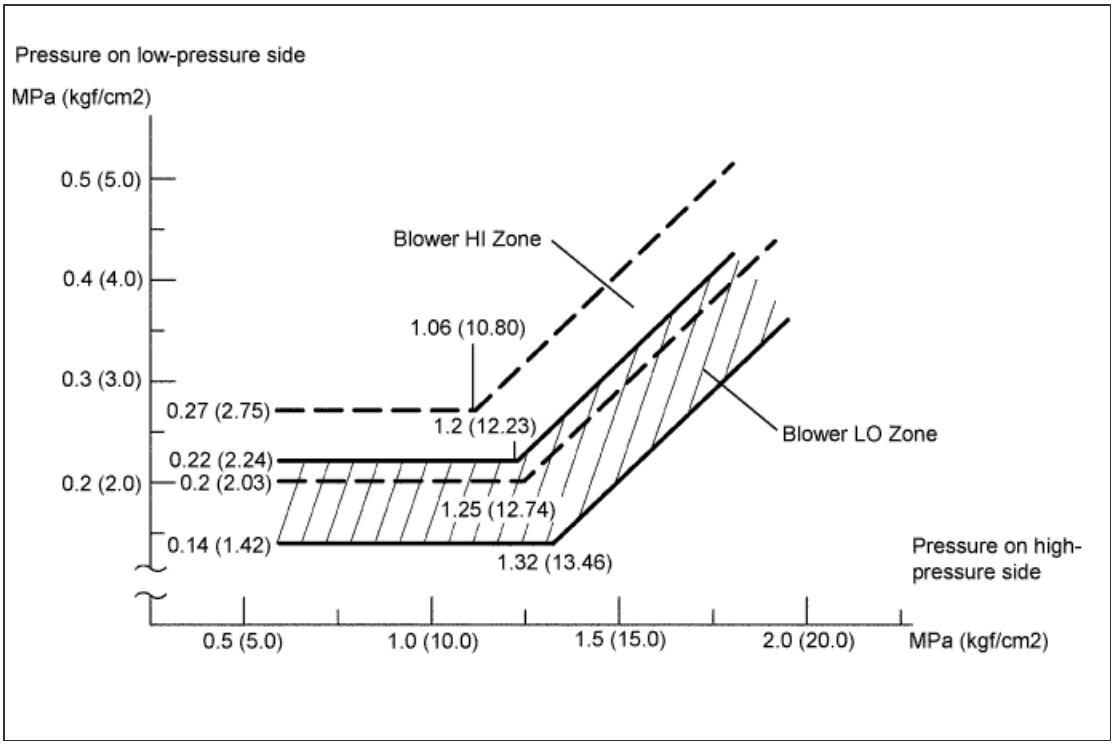


i. Normally functioning refrigeration system

Gauge Reading:

Pressure Side	Refrigerant Volume
Low	0.15 to 0.25 MPa (1.5 to 2.5 kgf/cm^2)
High	1.37 to 1.57 MPa (14 to 16 kgf/cm^2)

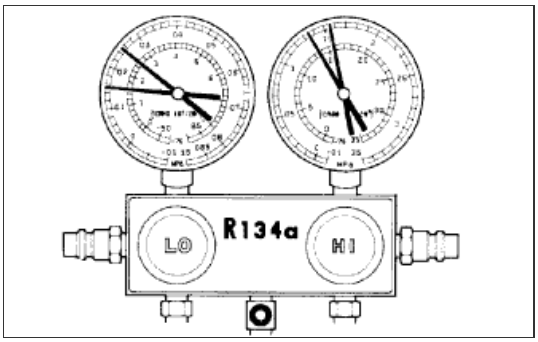


ii. The A/C system periodically changes between normal and improper function due to moisture in the refrigerant system.

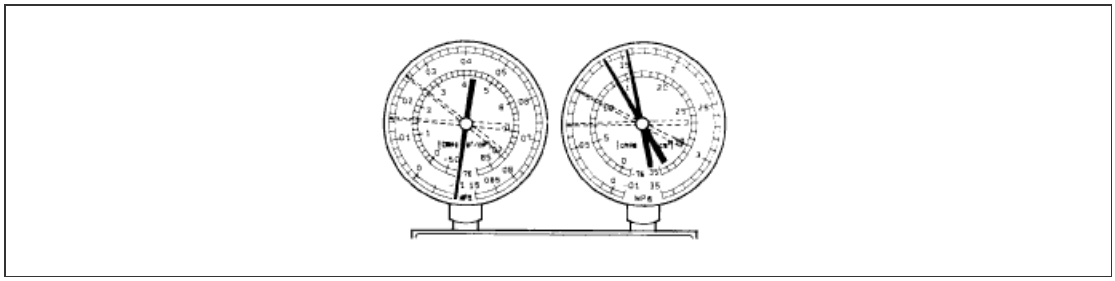

Symptoms	Probable Cause	Diagnosis	Corrective Actions
During operation, pressure	Moisture in refrigeration system freezes at expansion valve orifice,	- Dryer is overly saturated - Moisture in refrigeration	1. Replace cooler dryer 2. Remove moisture from


on low pressure side cycles between normal and vacuum	causing temporary stop of cycle. However, when melted, normal state is restored.	system freezes at expansion valve orifice and blocks refrigerant circulation	cycle by repeatedly evacuating air 3. Supply appropriate volume of new refrigerant

iii. The A/C system does not function effectively due to insufficient refrigerant.

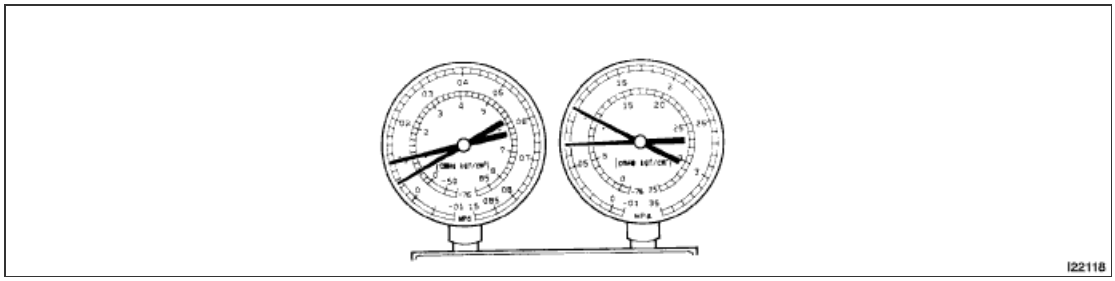


Symptoms	Probable Cause	Diagnosis	Corrective Actions
- Pressure low on both low and high pressure sides - Cooling performance insufficient	Gas leakage from refrigeration system	- Insufficient refrigerant - Refrigerant leakage	1. Check for gas leakage and repair if necessary 2. Supply appropriate volume of new refrigerant 3. If indicated pressure value close to 0 when connected to gauge, create vacuum after inspecting and repairing the location of leakage

iv. The A/C system does not function effectively due to poor circulation of the refrigerant.

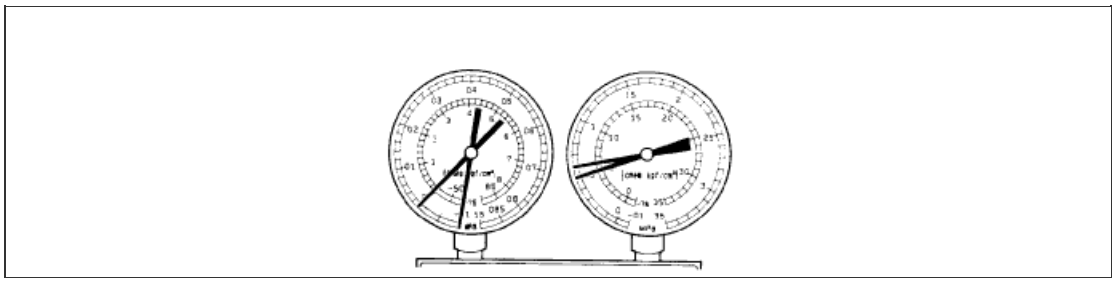


Symptoms	Probable Cause	Diagnosis	Corrective Actions
- Pressure low on both low and high pressure sides - Frost exists on piping from condenser to A/C unit	Refrigerant flow obstructed by dirt in condenser	Condenser clogged	Replace condenser

v. The A/C system does not function or functions intermittently because the refrigerant does not circulate.

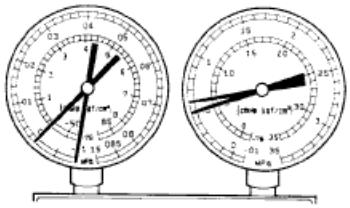

Symptoms	Probable Cause	Diagnosis	Corrective Actions
- Vacuum indicated on low pressure side, and extremely low pressure indicated on high pressure side - Frost or condensation seen on piping on both sides of condenser or expansion valve	- Refrigerant flow obstructed by moisture or dirt in refrigeration system - Refrigerant flow obstructed by gas leakage from expansion valve	Refrigerant does not circulate	1. Check expansion valve refrigerant 2. Clean expansion valve by blowing air 3. Replace condenser 4. Evacuate air and charge appropriate volume of new refrigerant 5. For gas leakage from expansion valve, replace expansion valve

vi. The A/C system does not function effectively due to overcharged refrigerant or insufficient cooling of the condenser.

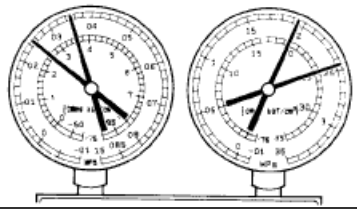


Symptoms	Probable Cause	Diagnosis	Corrective Actions
Pressure extremely high on both low and high-pressure sides	- Excessive refrigerant - Cooling performance of condenser insufficient	- Condenser is dirty - Condenser fan motor is malfunctioning - Excessive refrigerant	1. Clean condenser 2. Check condenser fan motor operation 3. If 1 and 2 normal, check the amount of refrigerant and supply appropriate volume of refrigerant

vii. The A/C system does not function due to air in the refrigeration system.

CAUTION:


The low-pressure piping may be very hot and cause serious burns.

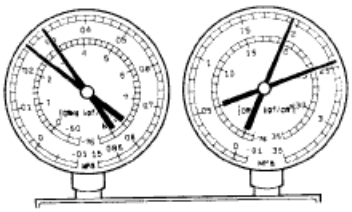

HINT: These gauge indications occur when the refrigeration system opens and the refrigerant is charged without vacuum purging


Symptoms	Probable Cause	Diagnosis	Corrective Actions
- Pressure extremely high on both low and high-pressure sides - Low-pressure piping is too hot to touch	Air in refrigeration system	- Air in refrigeration system - Vacuum purging insufficient	1. Check if compressor oil is dirty or insufficient 2. Evacuate air and charge new refrigerant

viii. The A/C system does not function effectively due to an expansion valve malfunction.

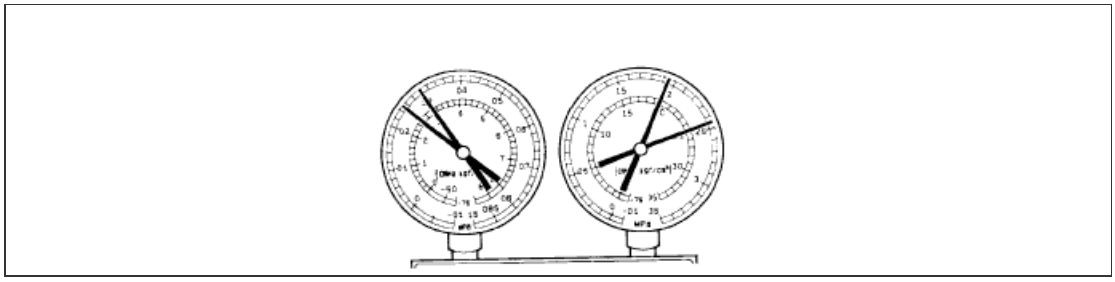

Symptoms	Probable Cause	Diagnosis	Corrective Actions
- Pressure extremely high on both low and high-pressure sides - Frost or condensation on piping on low-pressure side	Problem with expansion valve	- Excessive refrigerant in low pressure piping - Expansion valve too wide open	Replace expansion valve

ix. The A/C system does not function due to a defective compressor.

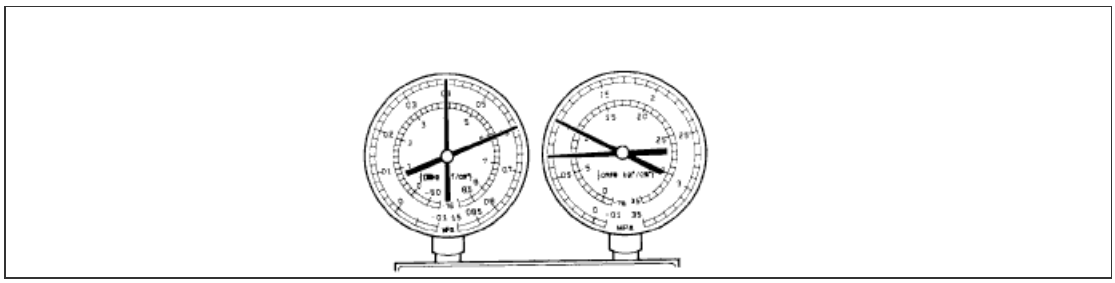

Symptoms	Probable Cause	Diagnosis	Corrective Actions
- Pressure extremely high on both low and high-pressure sides - Pressure extremely low on high pressure side	Internal leakage in compressor	- Compression failure - Leakage from damaged valve or broken sliding parts	Repair or replace compressor

for Preparation Click here

1. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

2. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

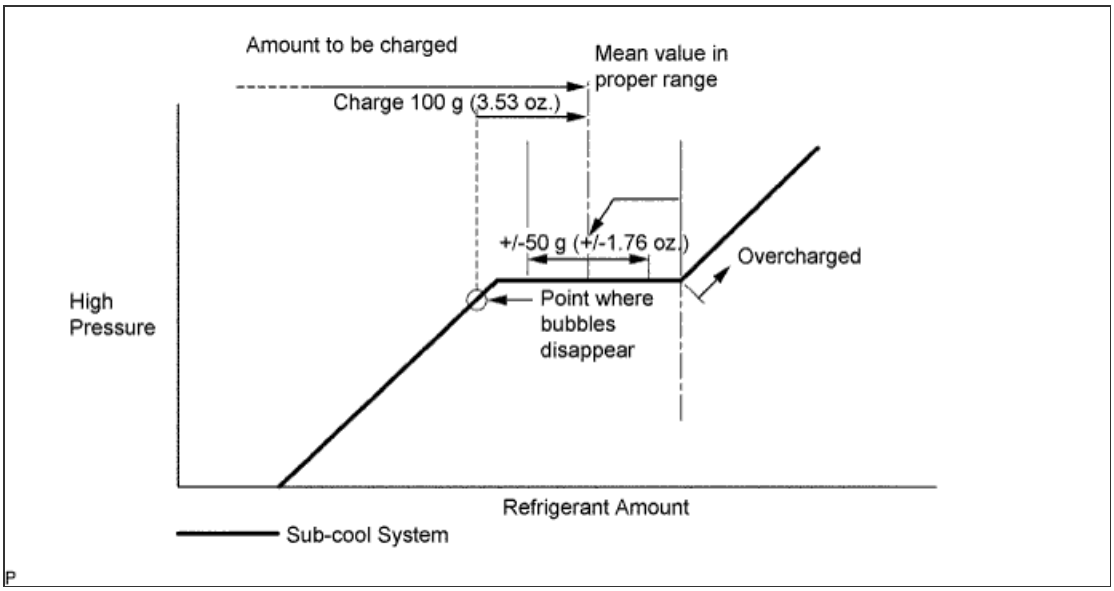

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly**

without any refrigerant, and will overheat.

- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

3. WARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

4. CHECK FOR REFRIGERANT GAS LEAK

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).


c. Using a halogen leak detector, check the refrigerant line for leakage.


d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.


e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

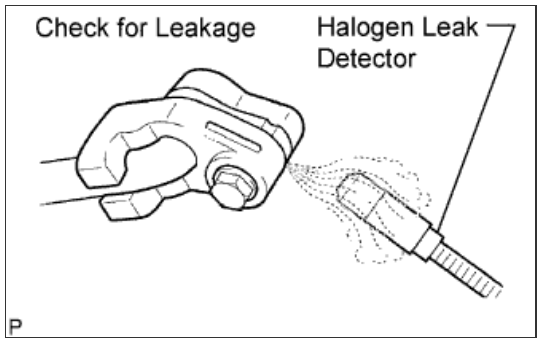



for Preparation Click here

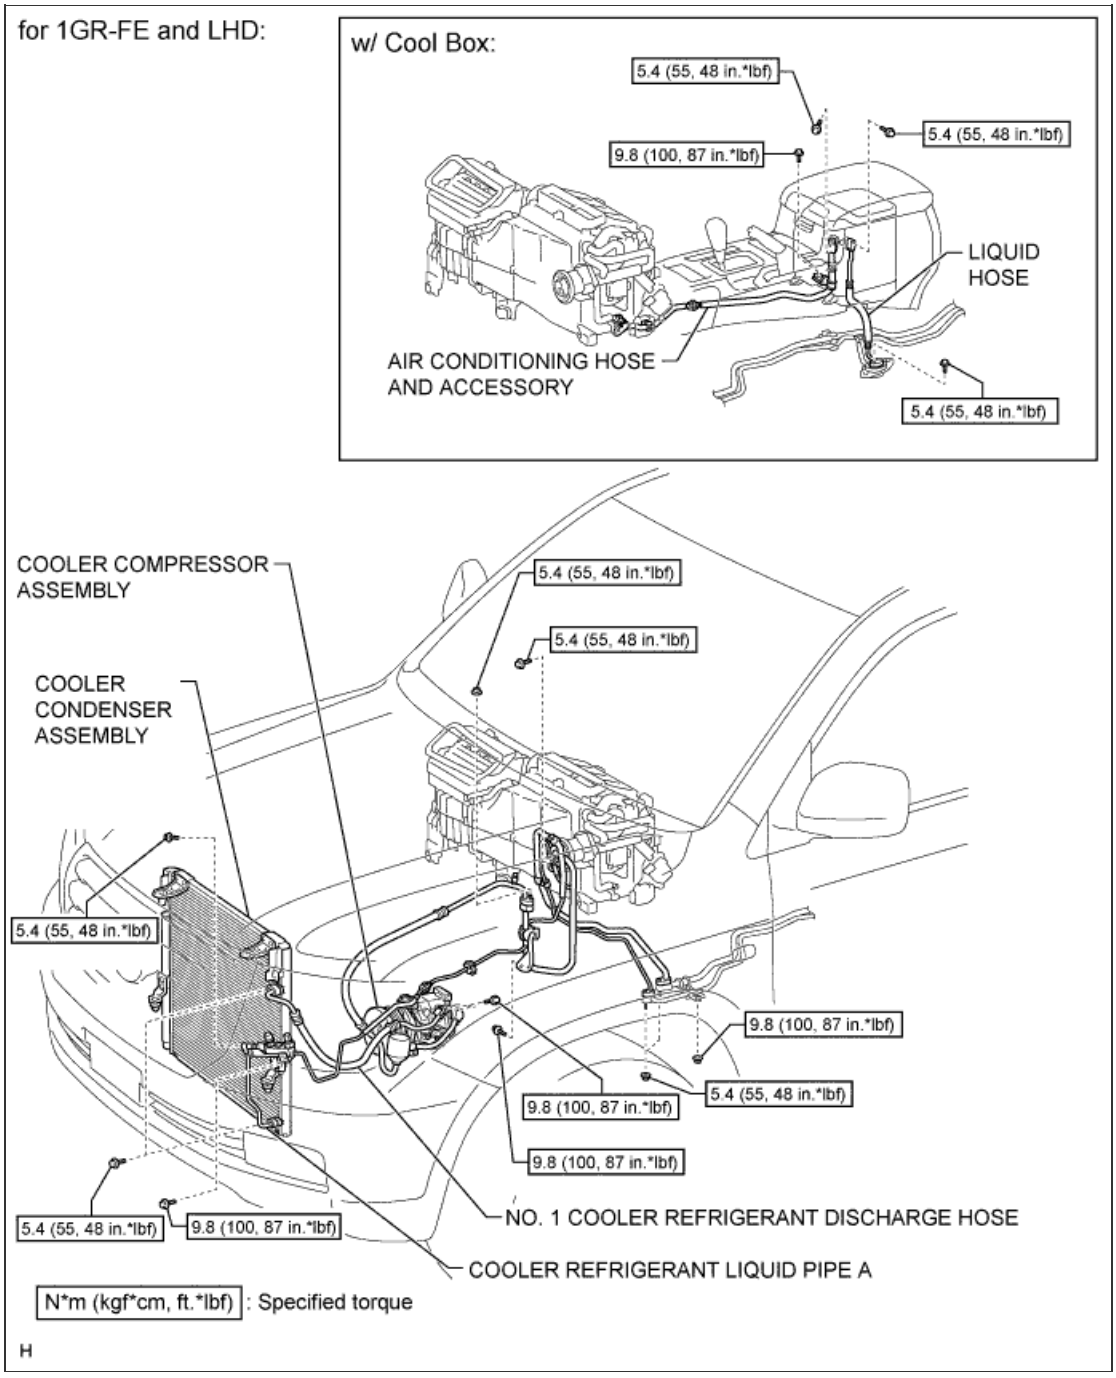


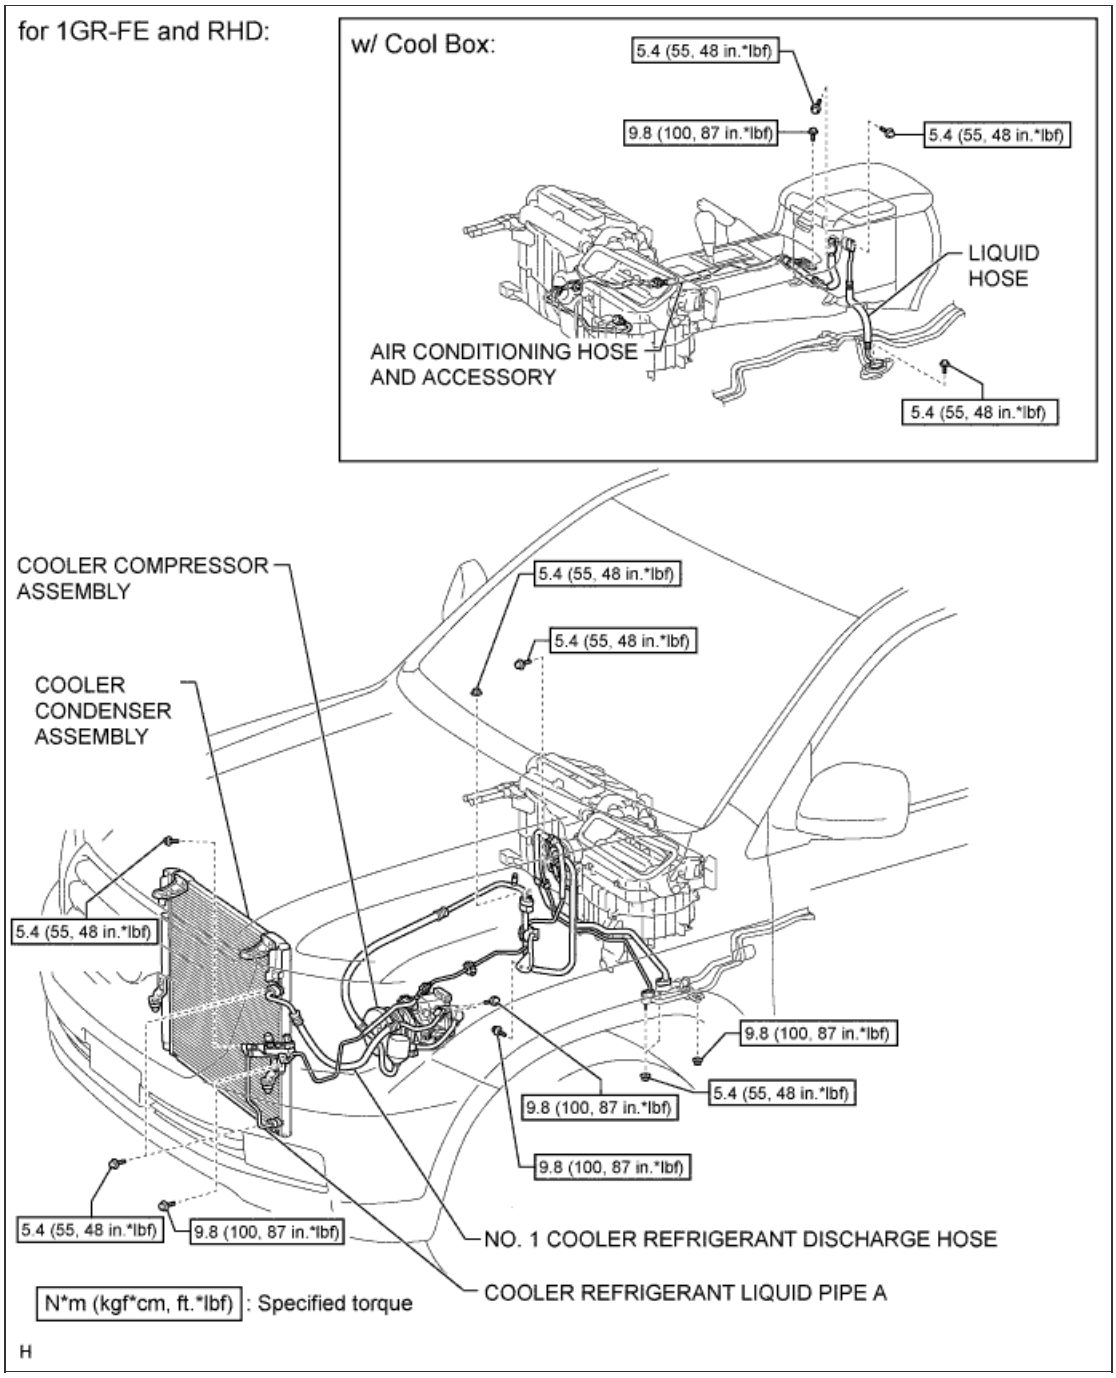

for 1GR-FE and RHD:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
COOLER REFRIGERANT LIQUID PIPE A
N*m (kgf*cm, ft.*lbf) : Specified torque
H

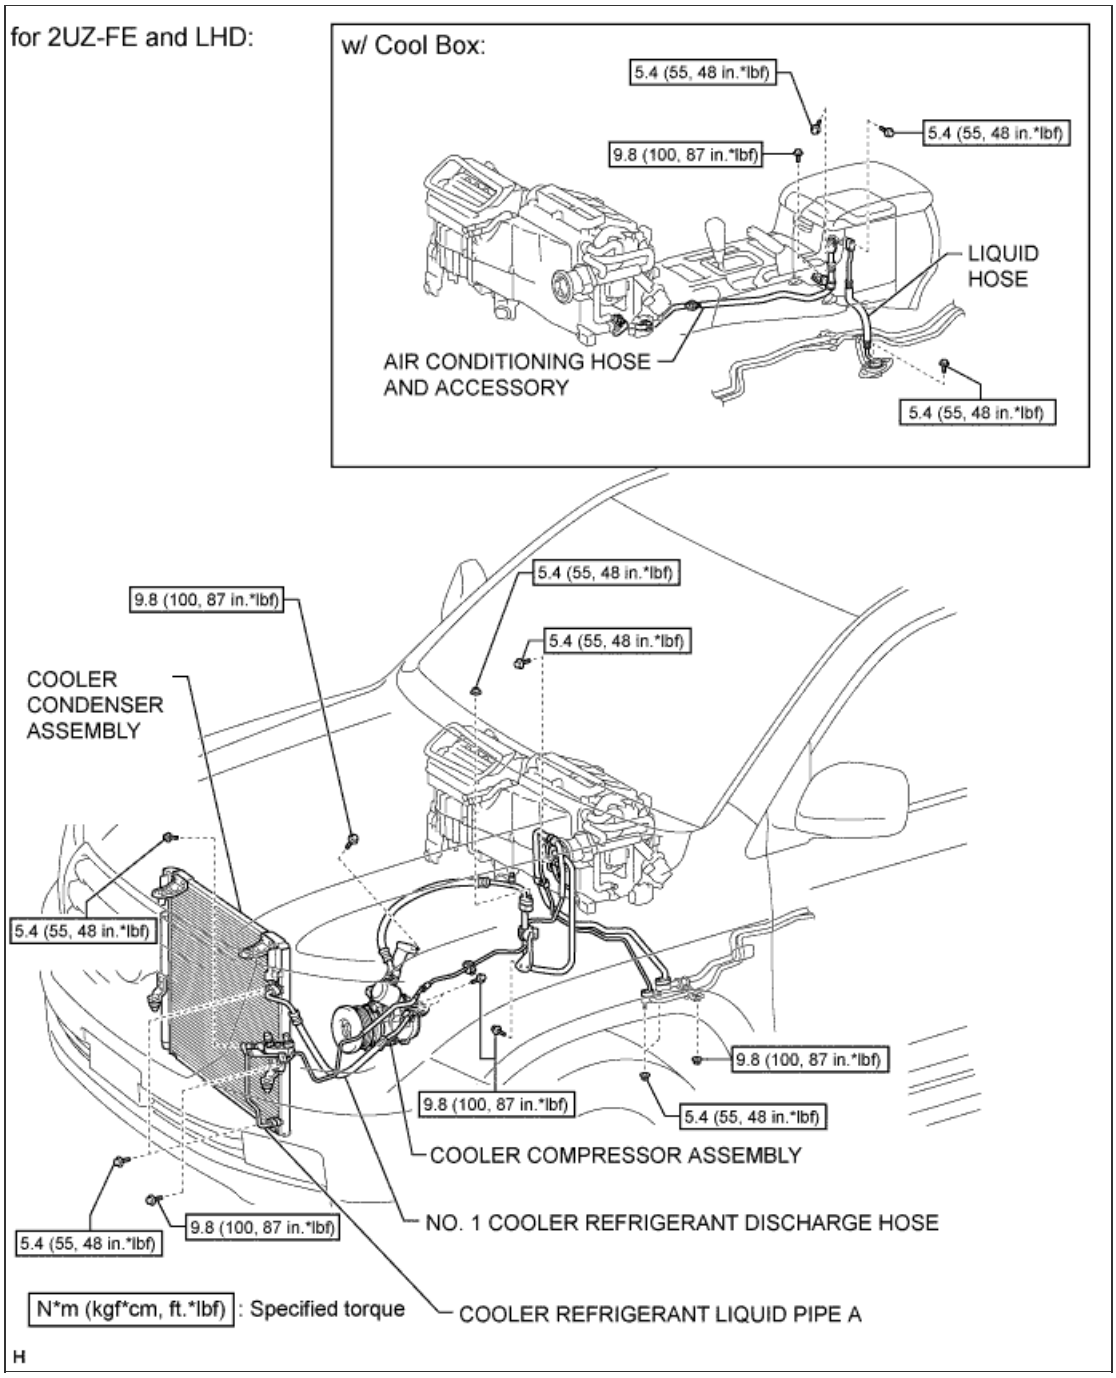
for 2UZ-FE and LHD:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
N*m (kgf*cm, ft.*lbf) : Specified torque
COOLER REFRIGERANT LIQUID PIPE A
H

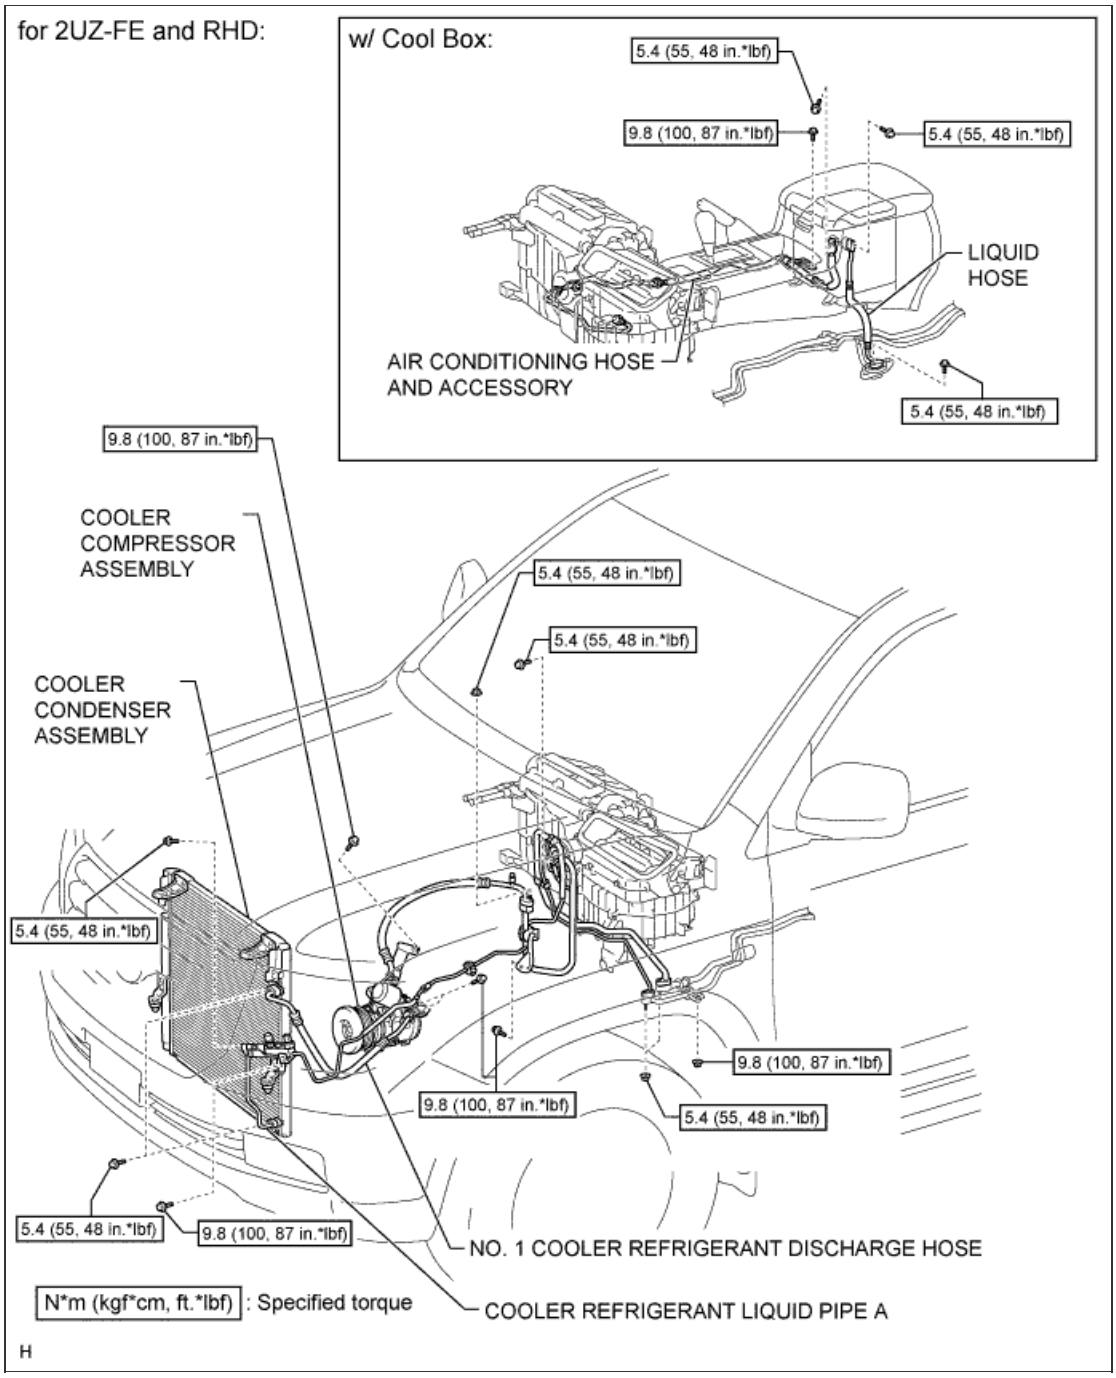
for 2UZ-FE and RHD:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
N*m (kgf*cm, ft.*lbf) : Specified torque
COOLER REFRIGERANT LIQUID PIPE A
H

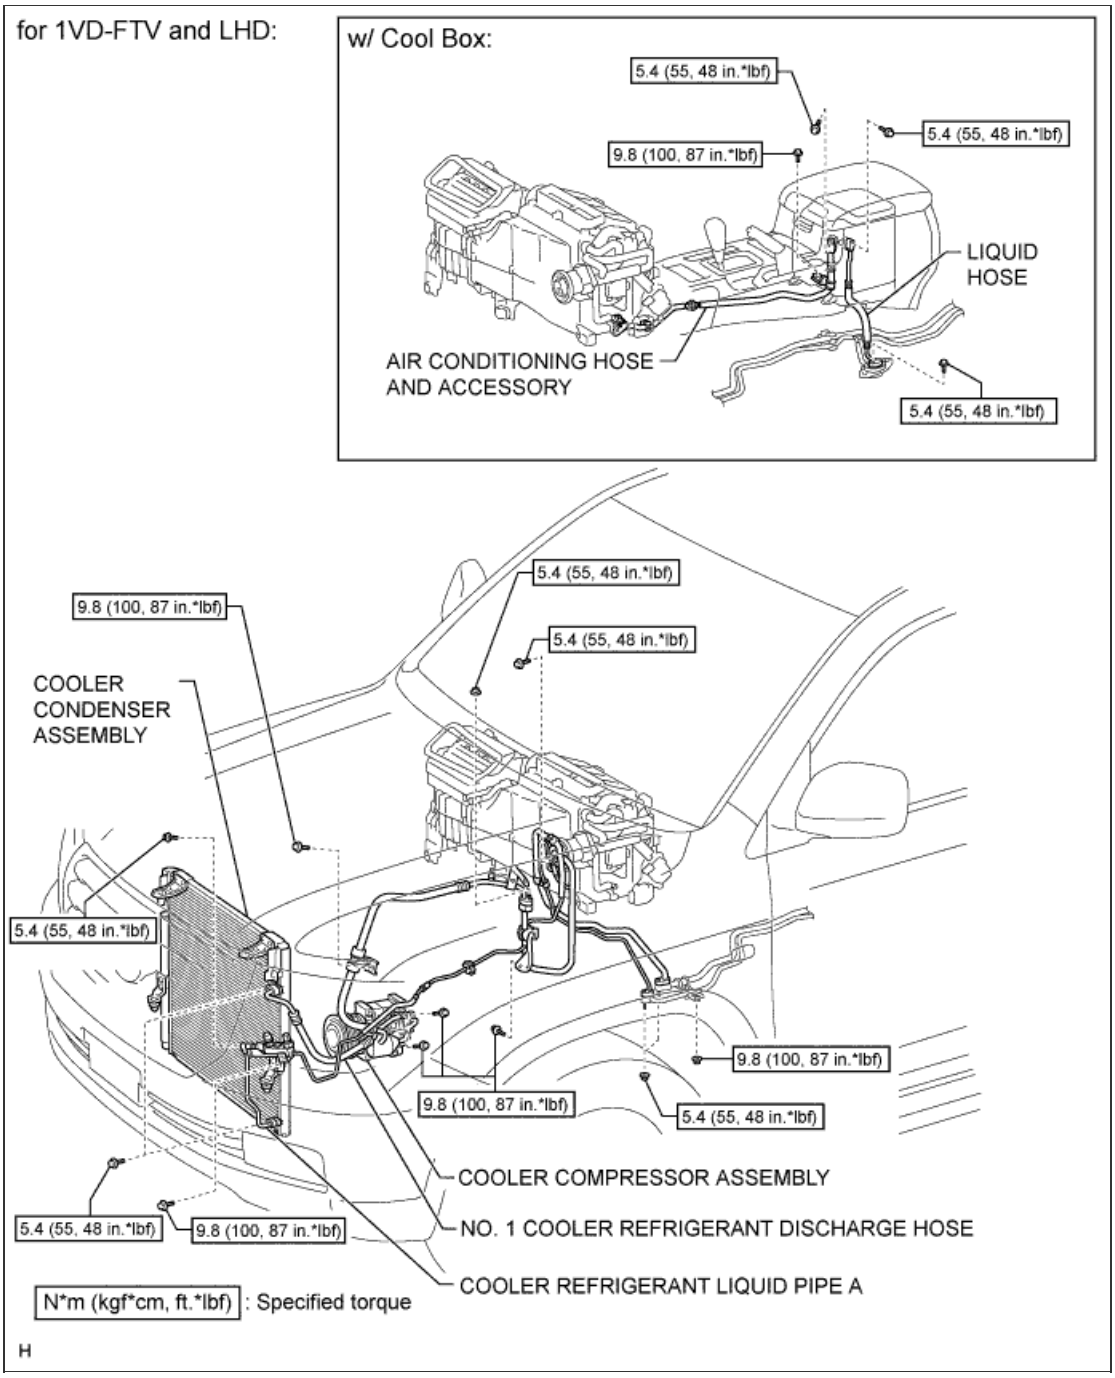

for 1VD-FTV and LHD:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
COOLER REFRIGERANT LIQUID PIPE A
N*m (kgf*cm, ft.*lbf) : Specified torque
H

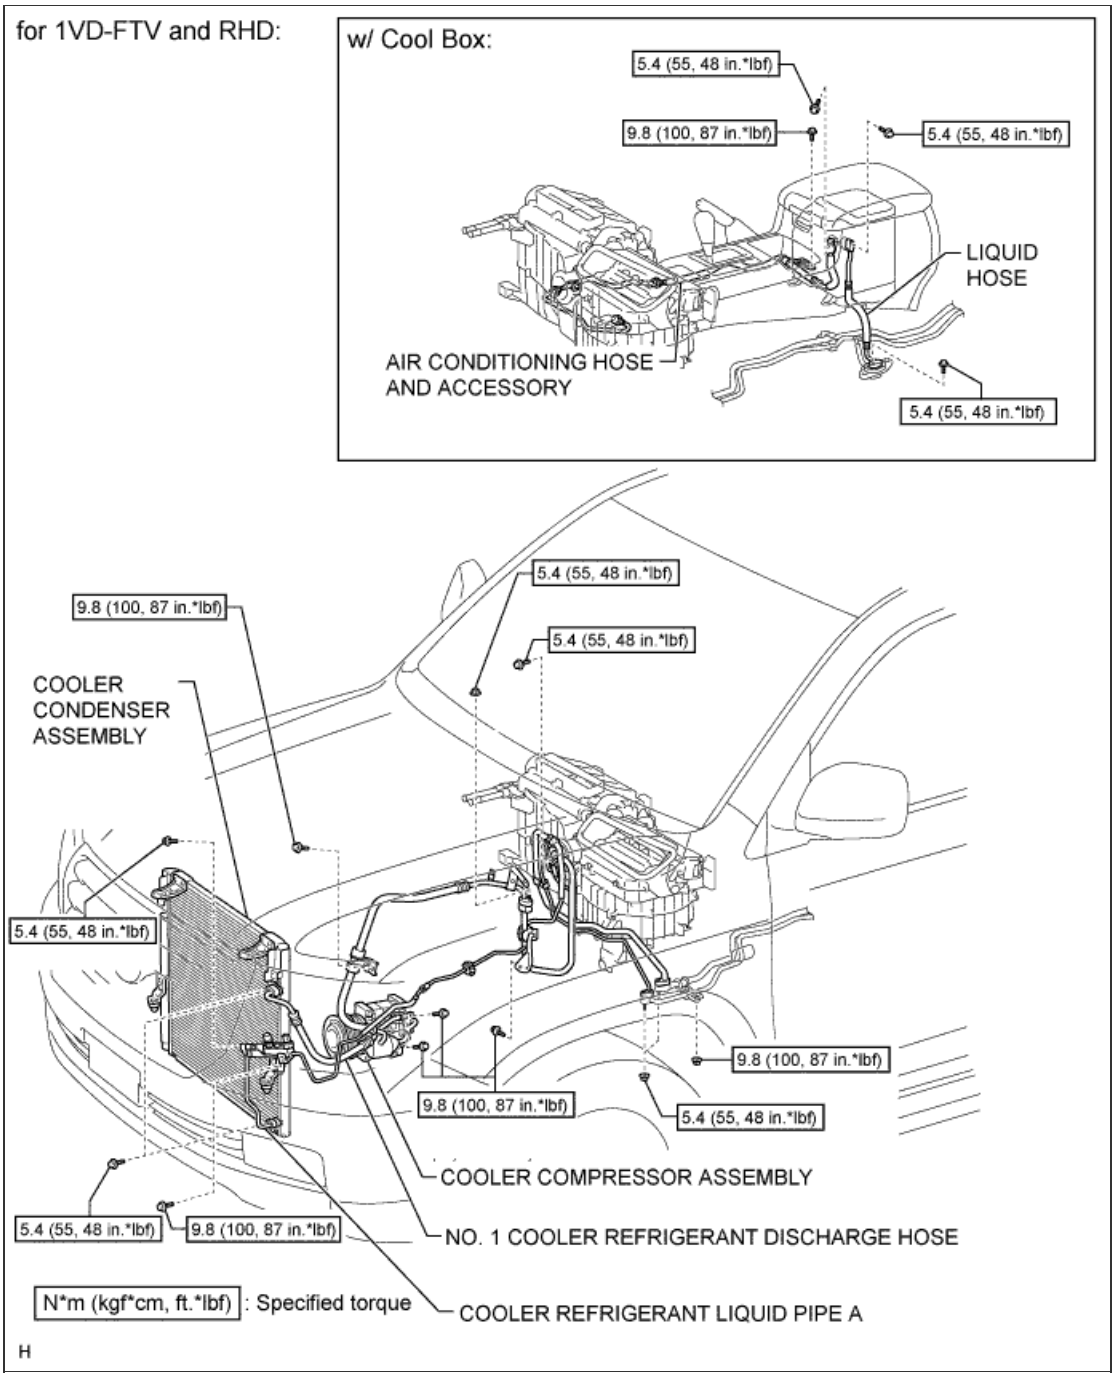

for 1VD-FTV and RHD:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
N*m (kgf*cm, ft.*lbf) : Specified torque
COOLER REFRIGERANT LIQUID PIPE A
H

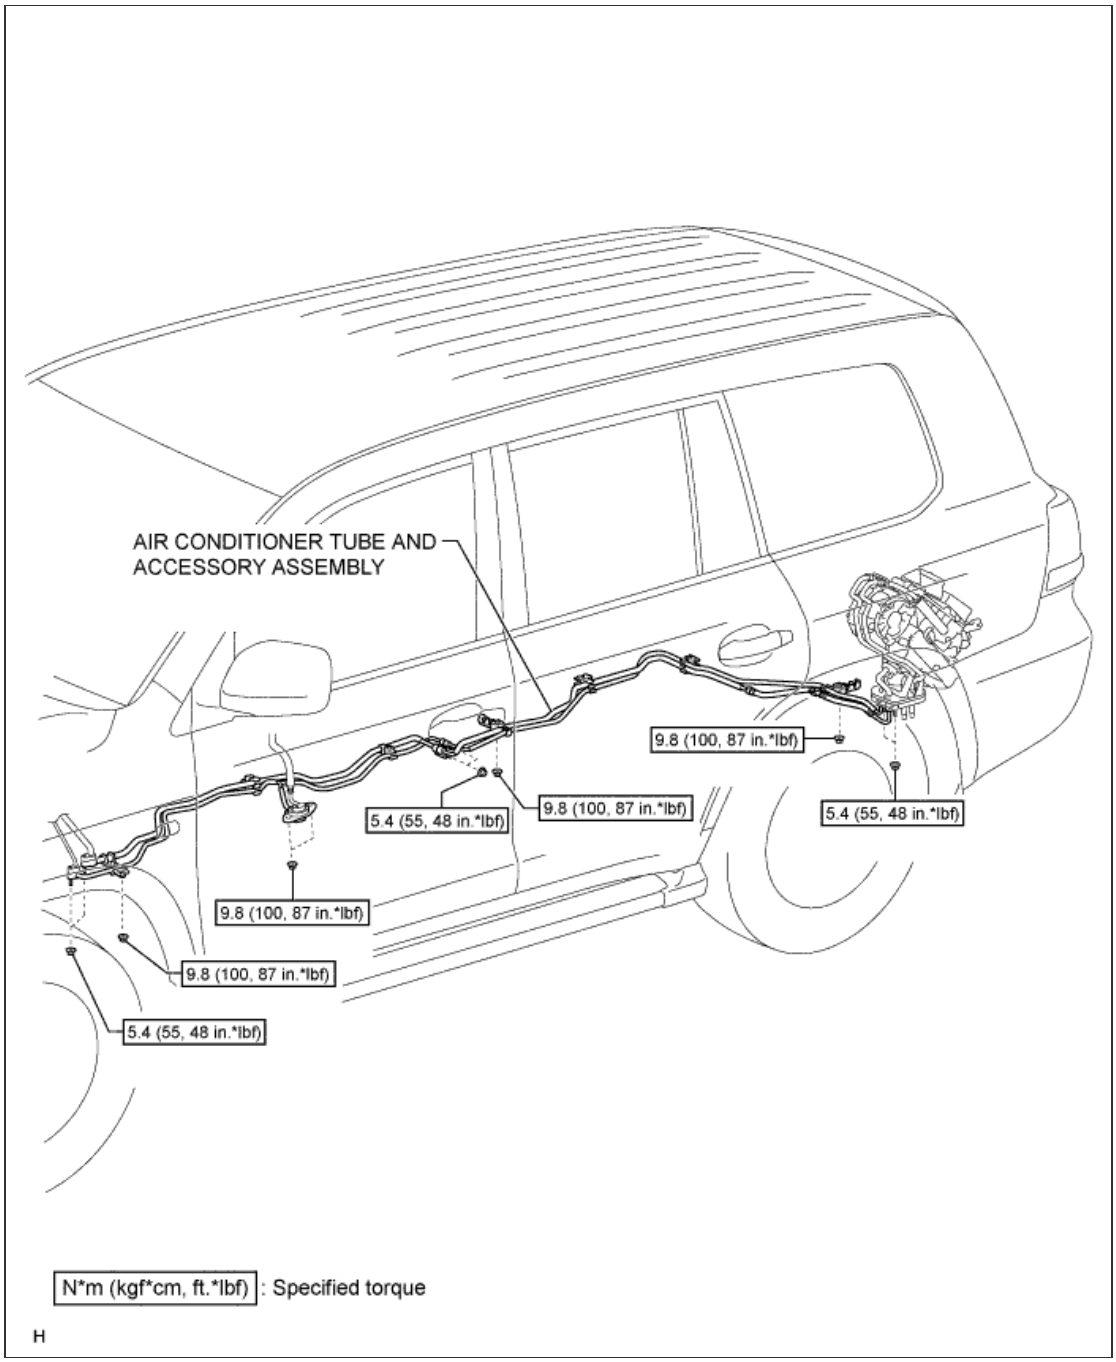

AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
N*m (kgf*cm, ft.*lbf) : Specified torque


H


for Preparation Click here

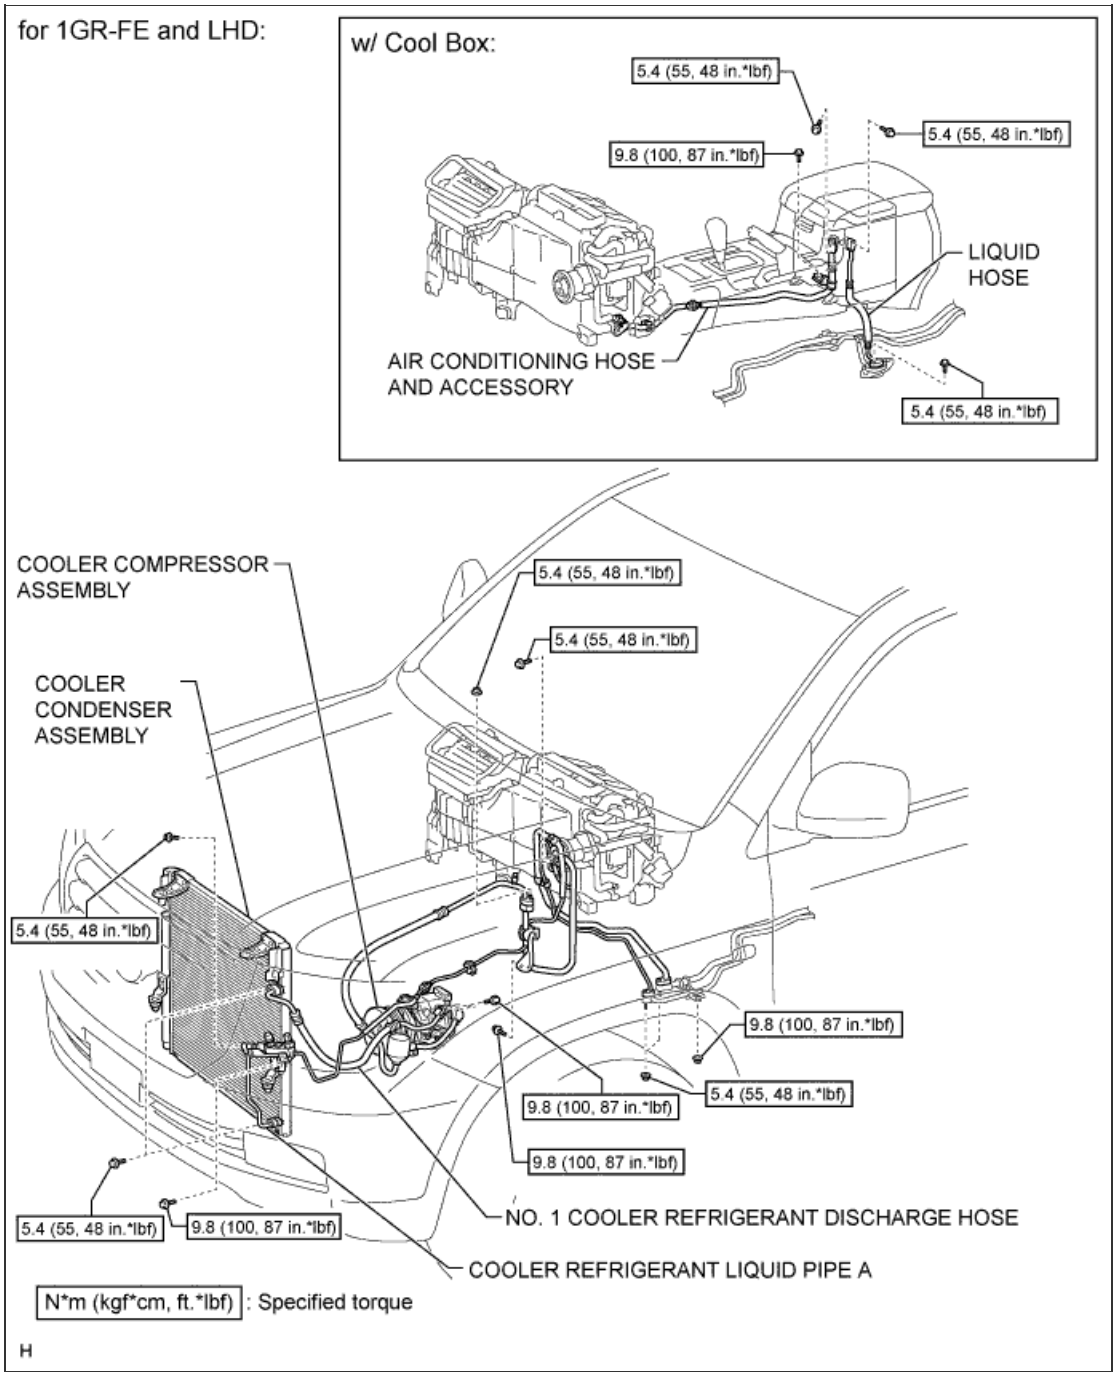


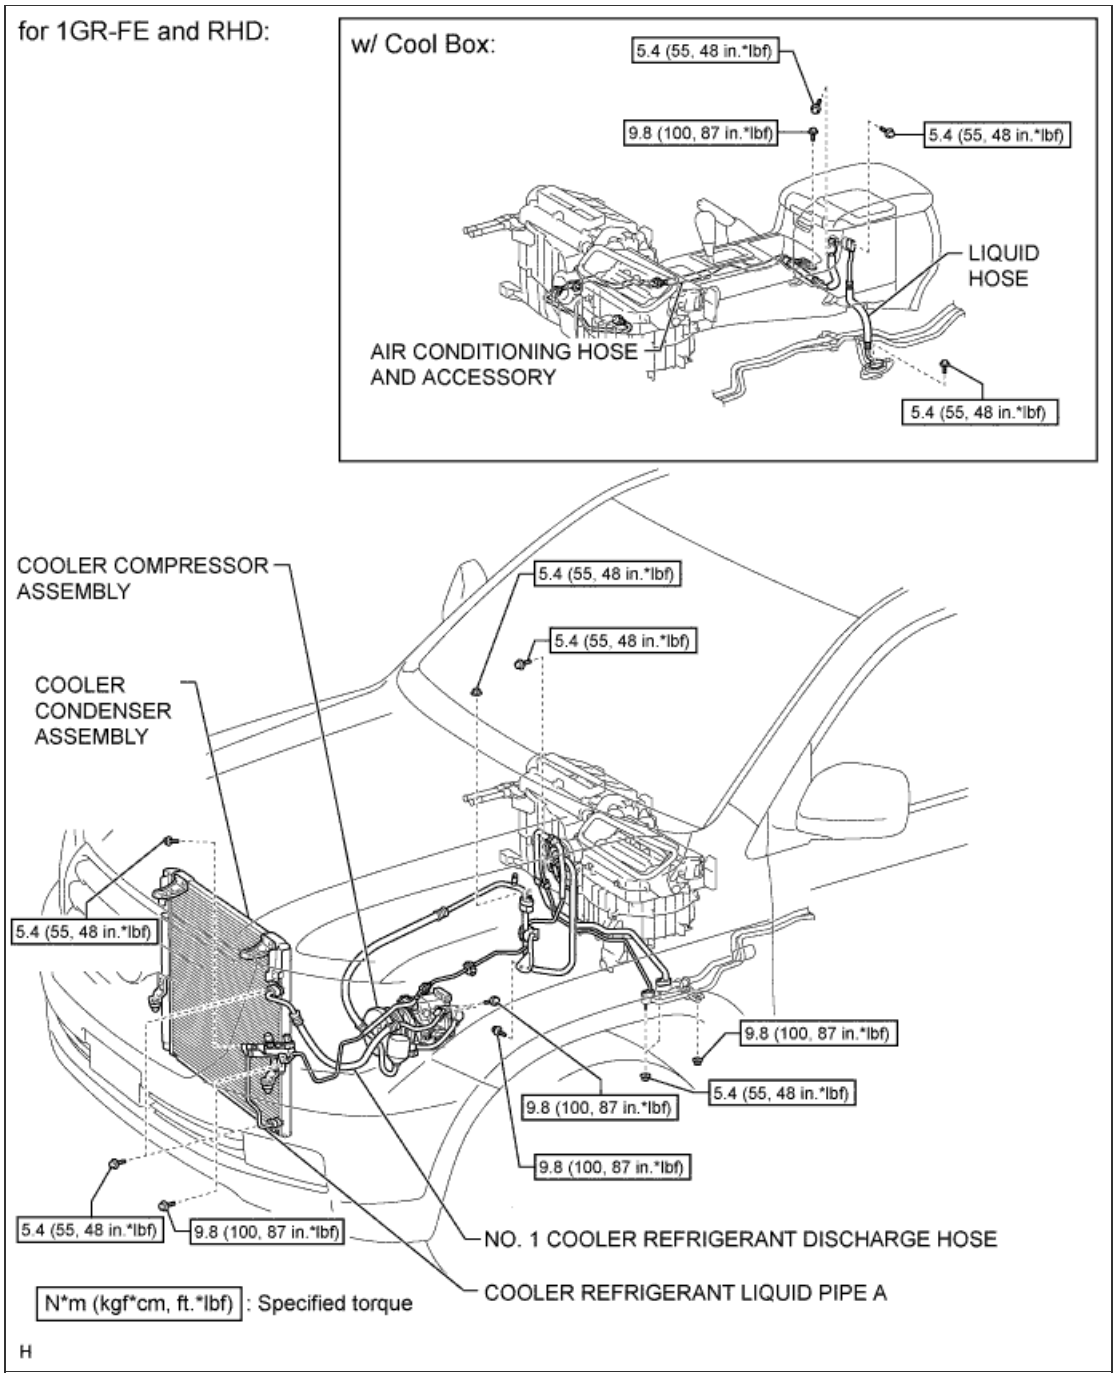

for 1GR-FE and RHD:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
COOLER REFRIGERANT LIQUID PIPE A
N*m (kgf*cm, ft.*lbf) : Specified torque
H

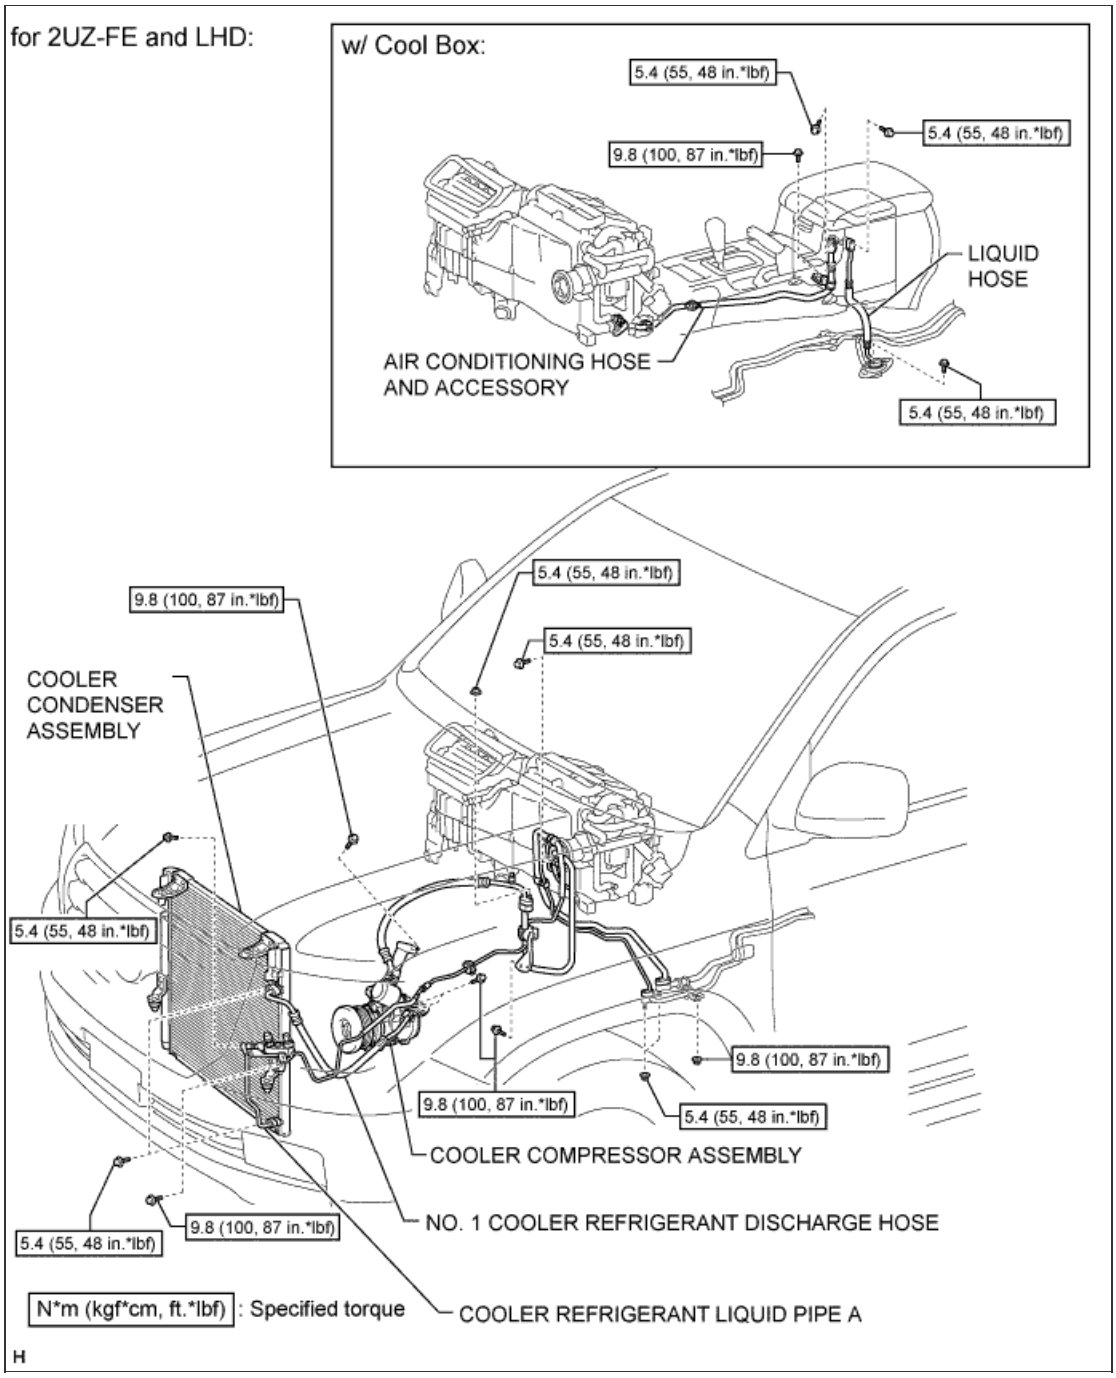

for 2UZ-FE and LHD:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
N*m (kgf*cm, ft.*lbf) : Specified torque
COOLER REFRIGERANT LIQUID PIPE A
H

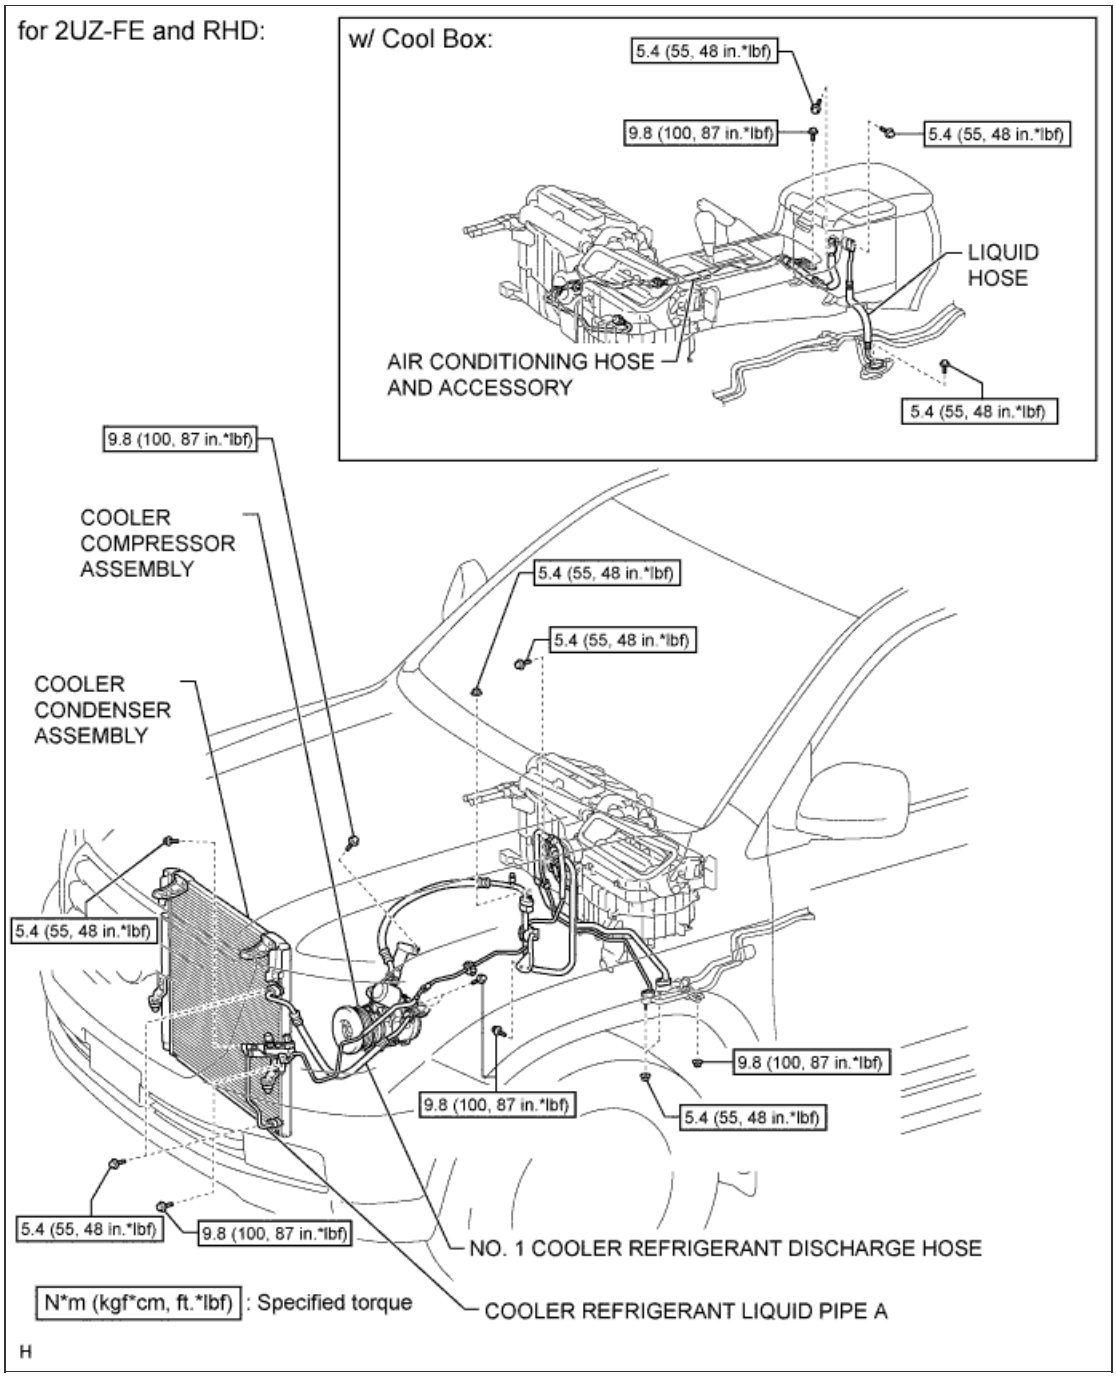
for 2UZ-FE and RHD:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
N*m (kgf*cm, ft.*lbf) : Specified torque
COOLER REFRIGERANT LIQUID PIPE A
H

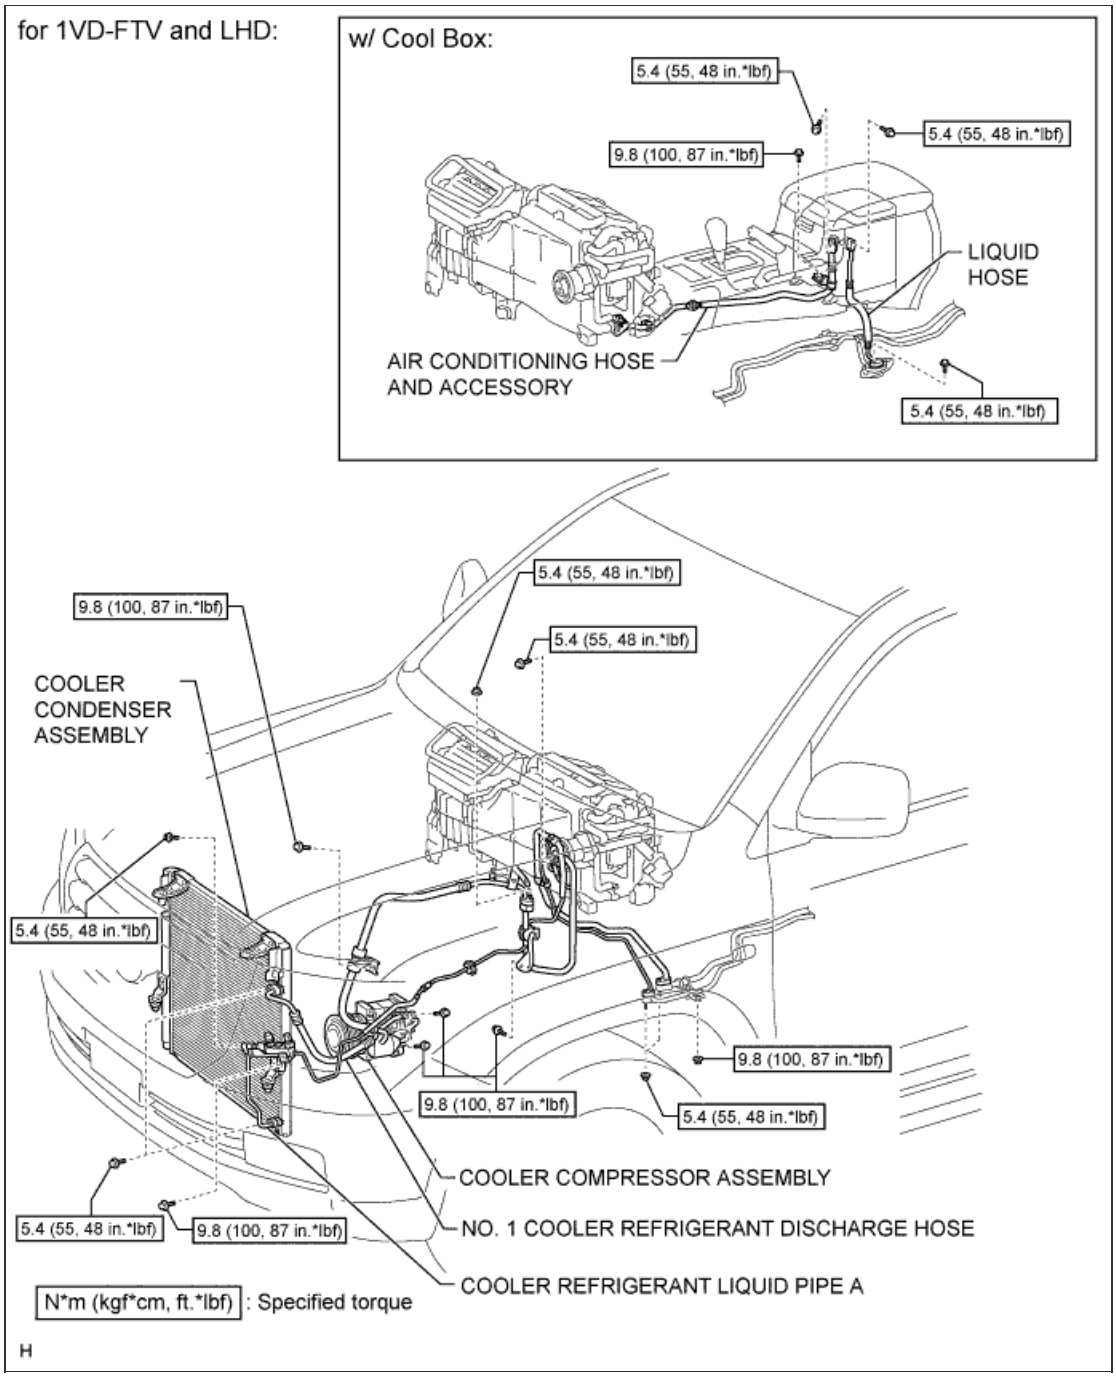
for 1VD-FTV and LHD:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
COOLER REFRIGERANT LIQUID PIPE A
N*m (kgf*cm, ft.*lbf) : Specified torque
H

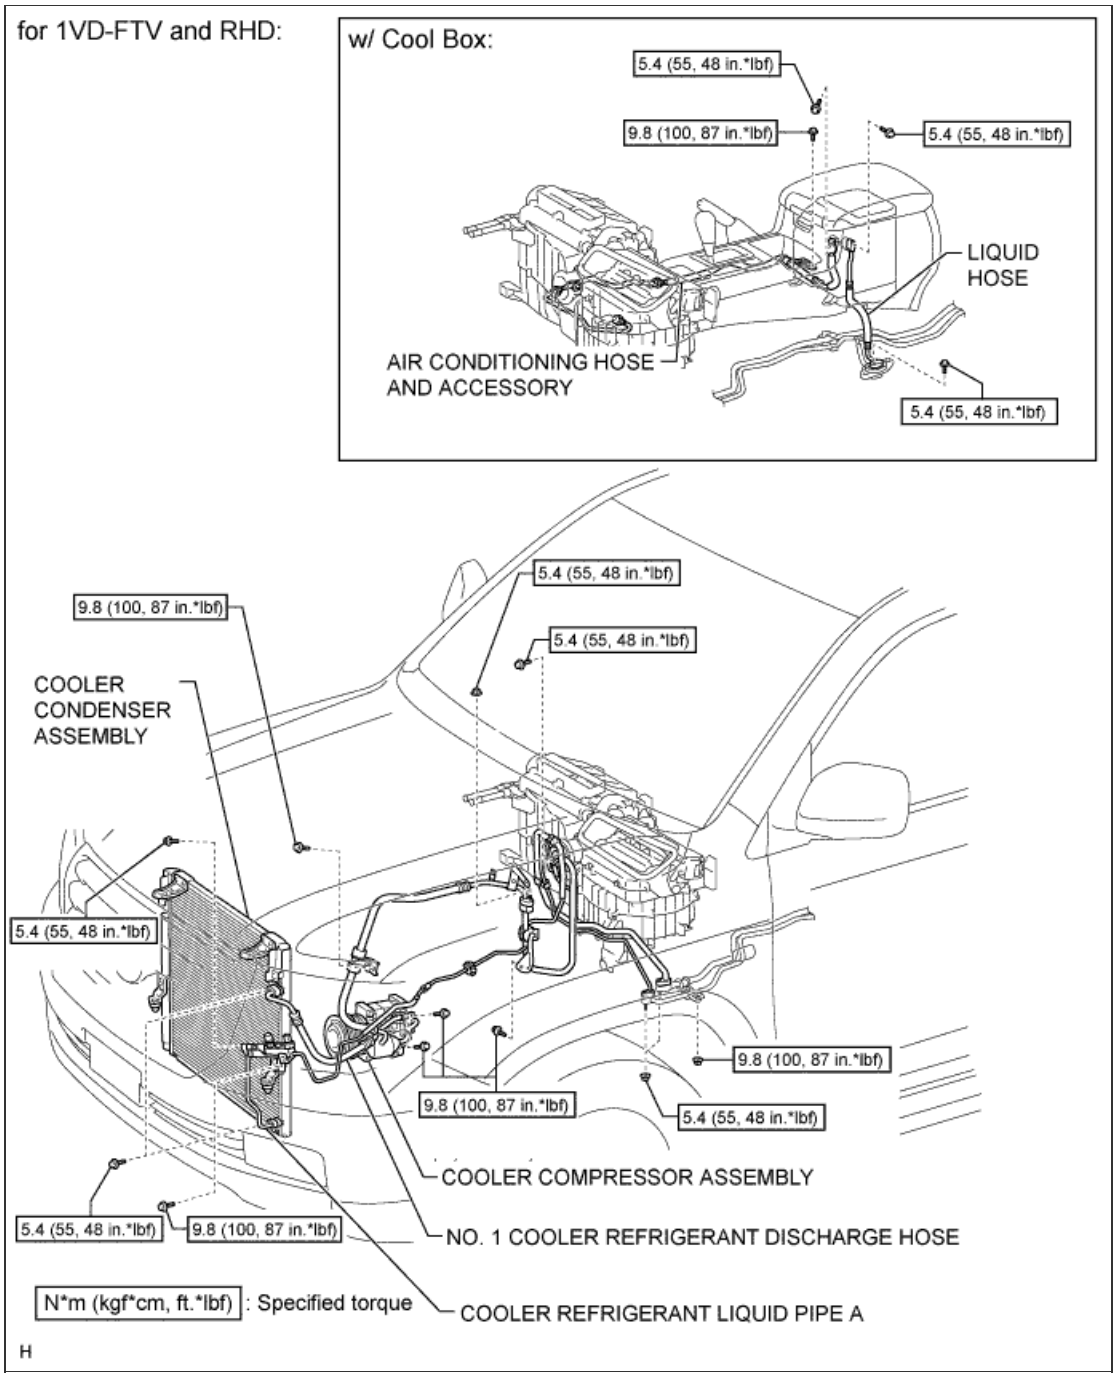

for 1VD-FTV and RHD:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
N*m (kgf*cm, ft.*lbf) : Specified torque
COOLER REFRIGERANT LIQUID PIPE A
H

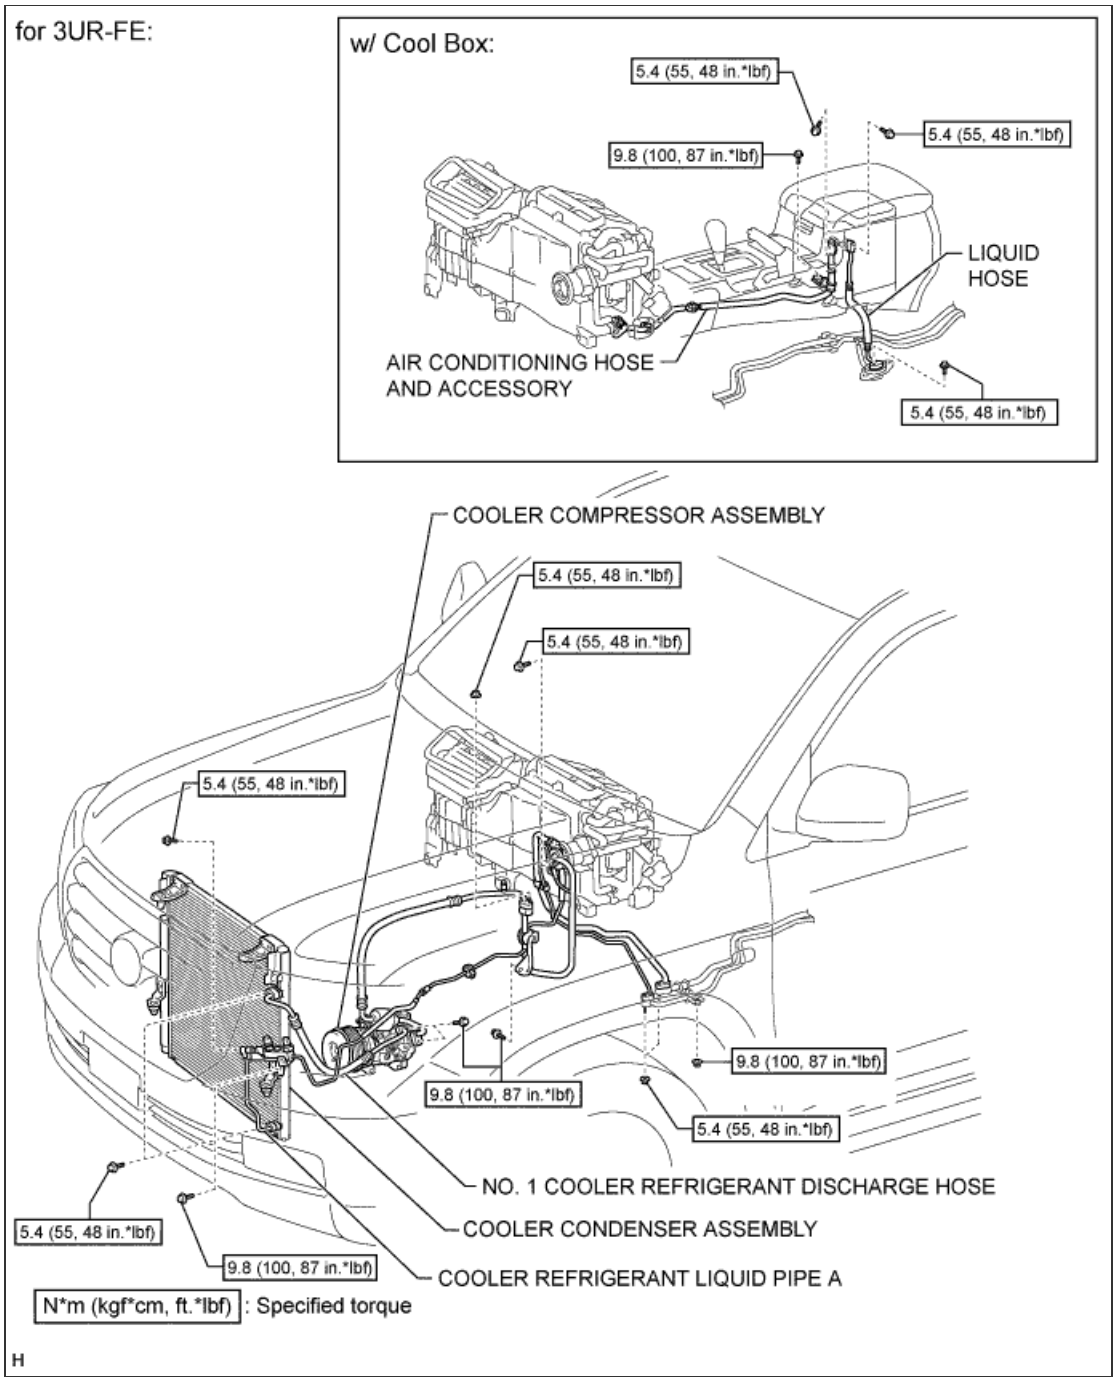
for 3UR-FE:
w/ Cool Box:
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
LIQUID HOSE
AIR CONDITIONING HOSE AND ACCESSORY
5.4 (55, 48 in.*lbf)
COOLER COMPRESSOR ASSEMBLY
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
COOLER CONDENSER ASSEMBLY
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
COOLER REFRIGERANT LIQUID PIPE A
N*m (kgf*cm, ft.*lbf) : Specified torque
H

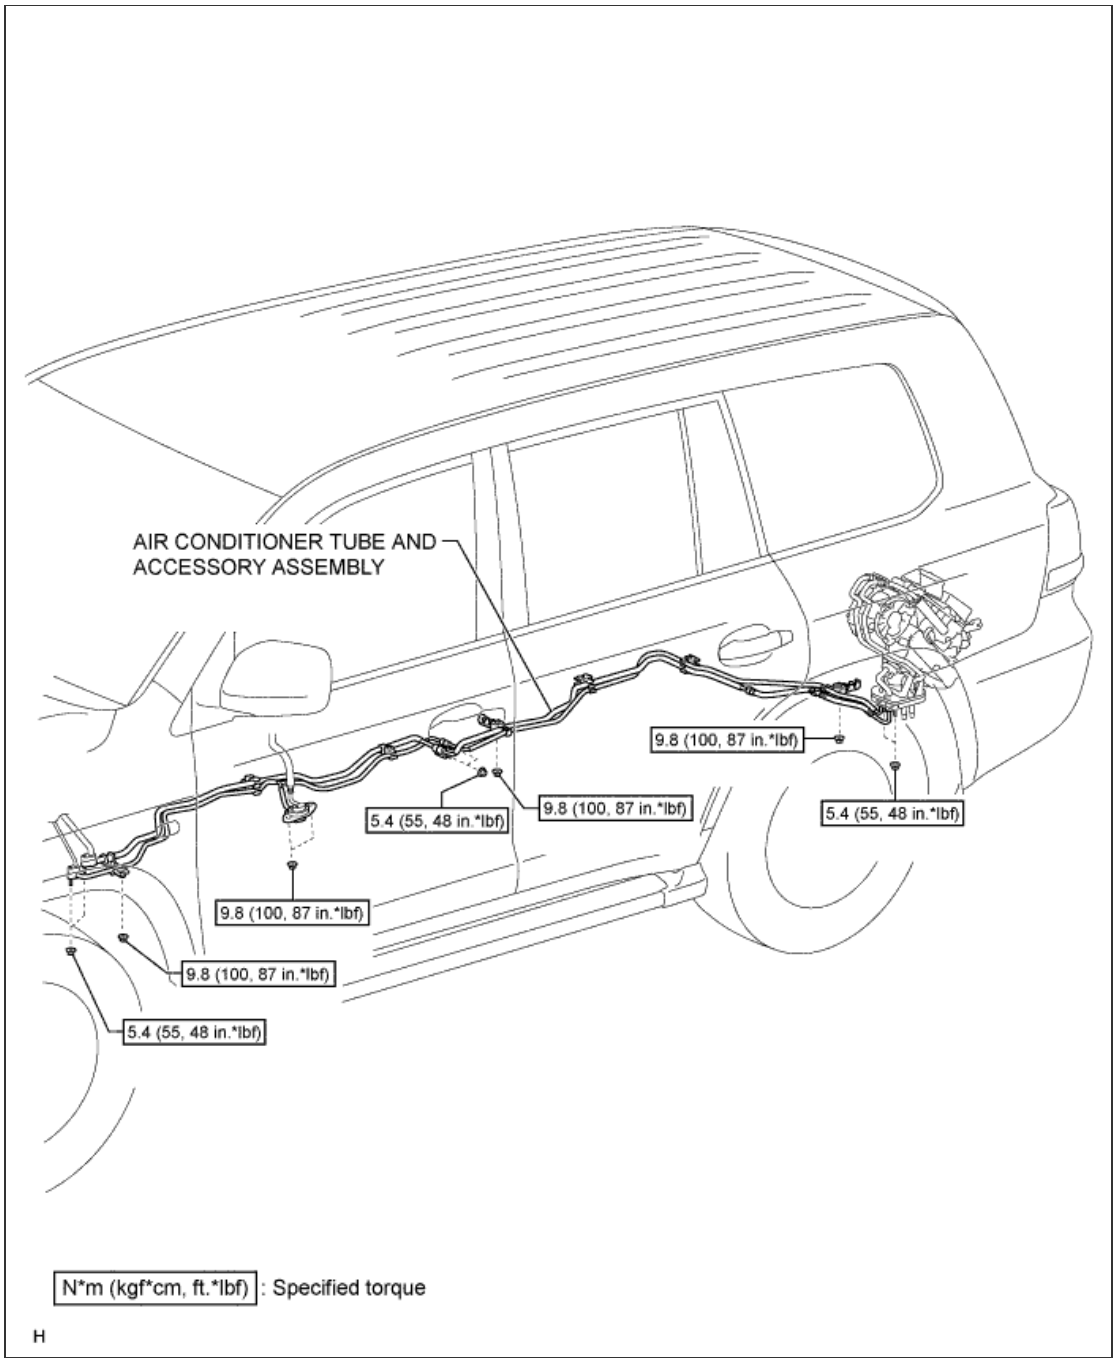

AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
5.4 (55, 48 in.*lbf)
N*m (kgf*cm, ft.*lbf) : Specified torque


H


for Preparation Click here

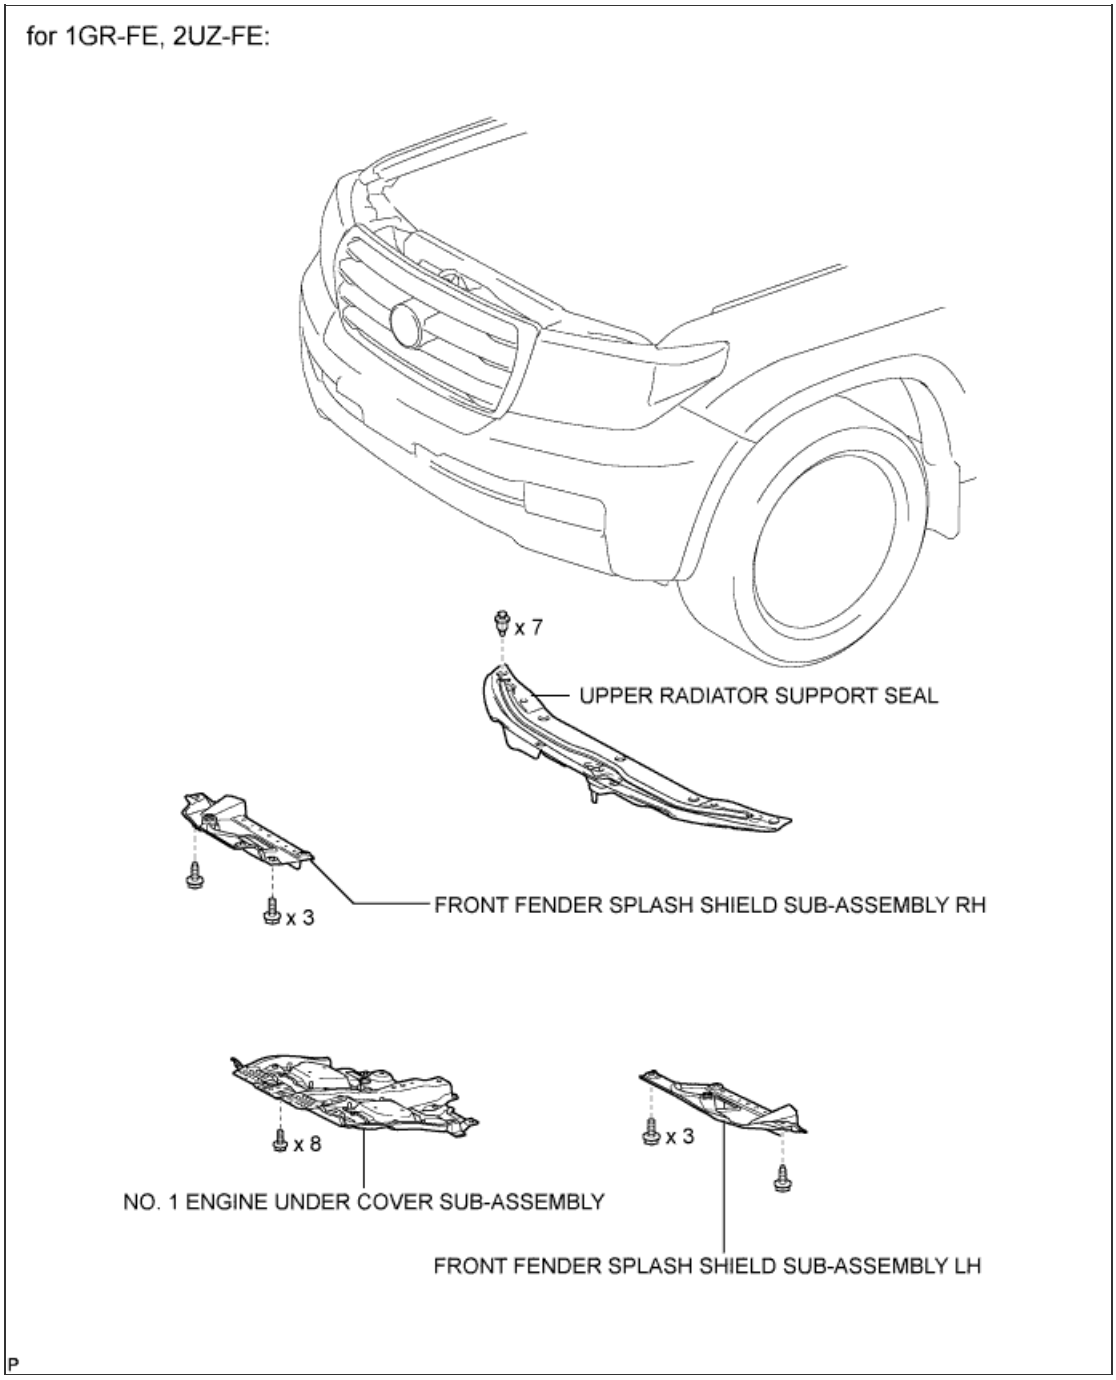


for 1VD-FTV:

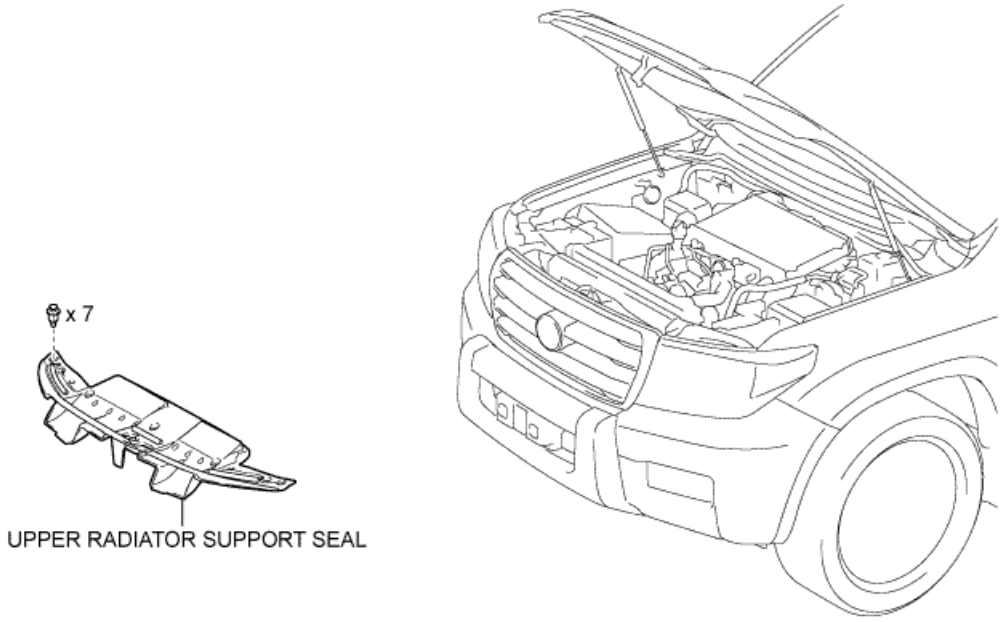

x 7
UPPER RADIATOR SUPPORT SEAL

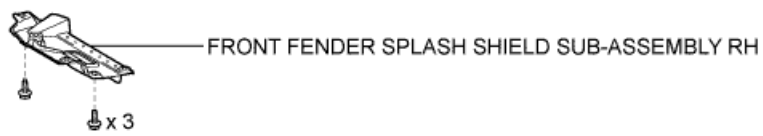

FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH
x 3

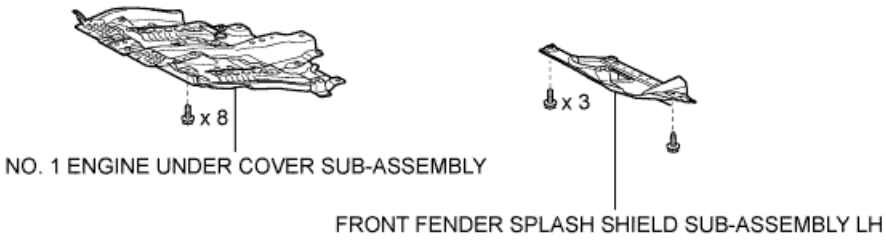

x 8
NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY
x 3
FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

P

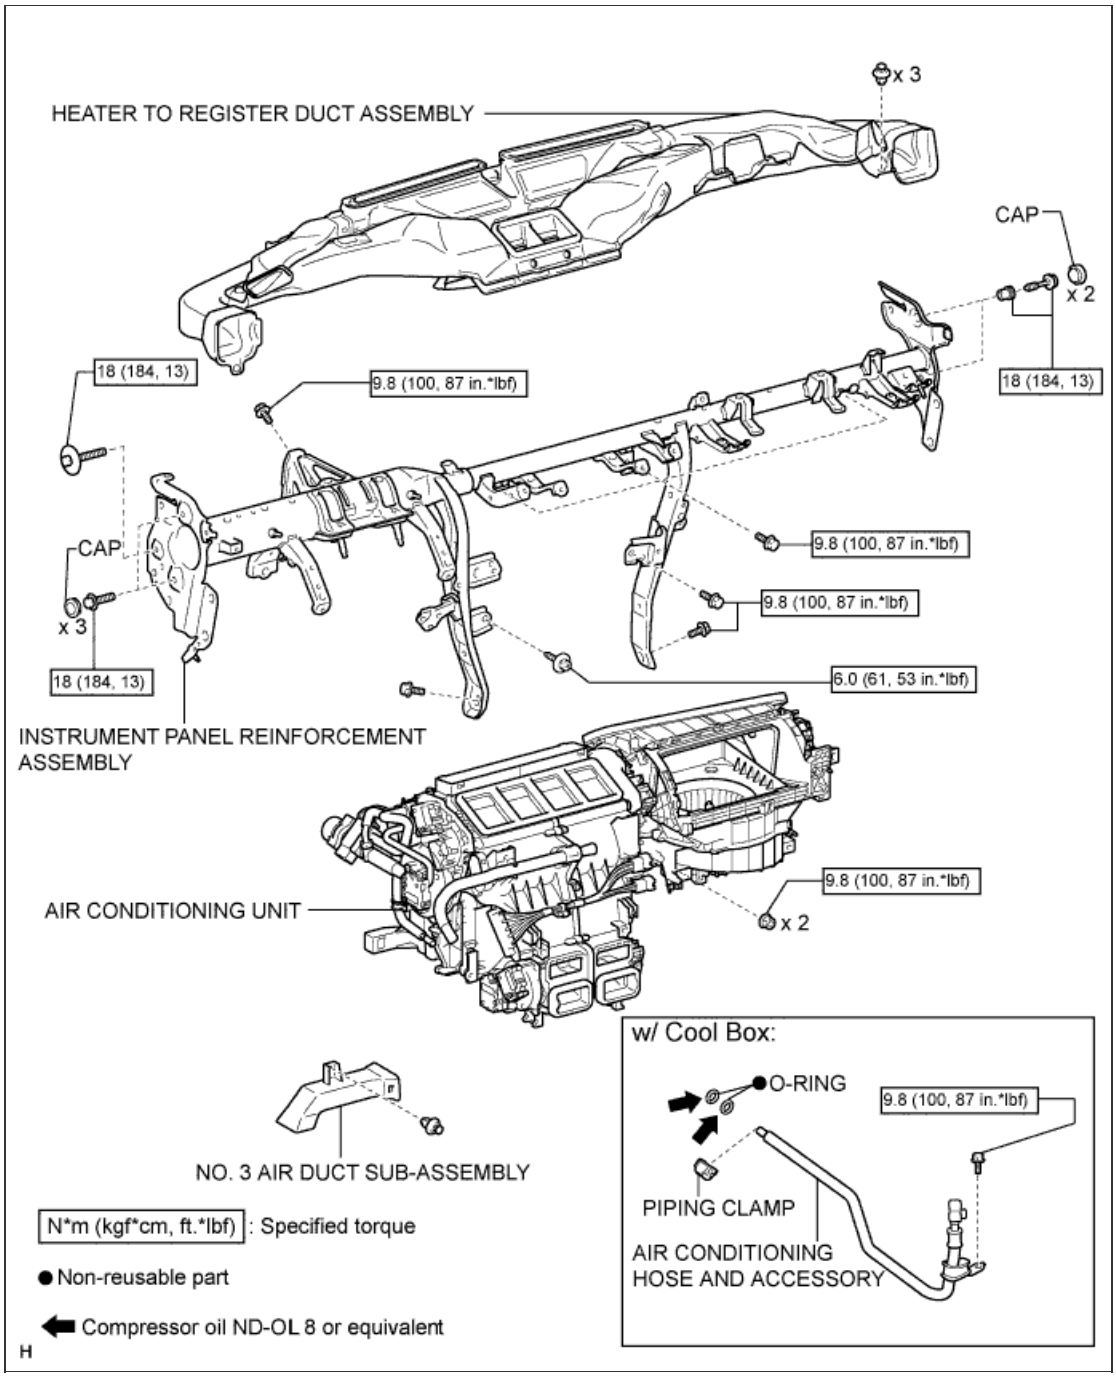

HEATER TO REGISTER DUCT ASSEMBLY
x 3
CAP
x 2
18 (184, 13)
9.8 (100, 87 in.*lbf)
18 (184, 13)
CAP
x 3
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
18 (184, 13)
6.0 (61, 53 in.*lbf)
INSTRUMENT PANEL REINFORCEMENT ASSEMBLY
AIR CONDITIONING UNIT
9.8 (100, 87 in.*lbf)
x 2
w/ Cool Box:
O-RING
9.8 (100, 87 in.*lbf)
PIPING CLAMP
AIR CONDITIONING HOSE AND ACCESSORY
NO. 3 AIR DUCT SUB-ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
Compressor oil ND-OIL 8 or equivalent
H

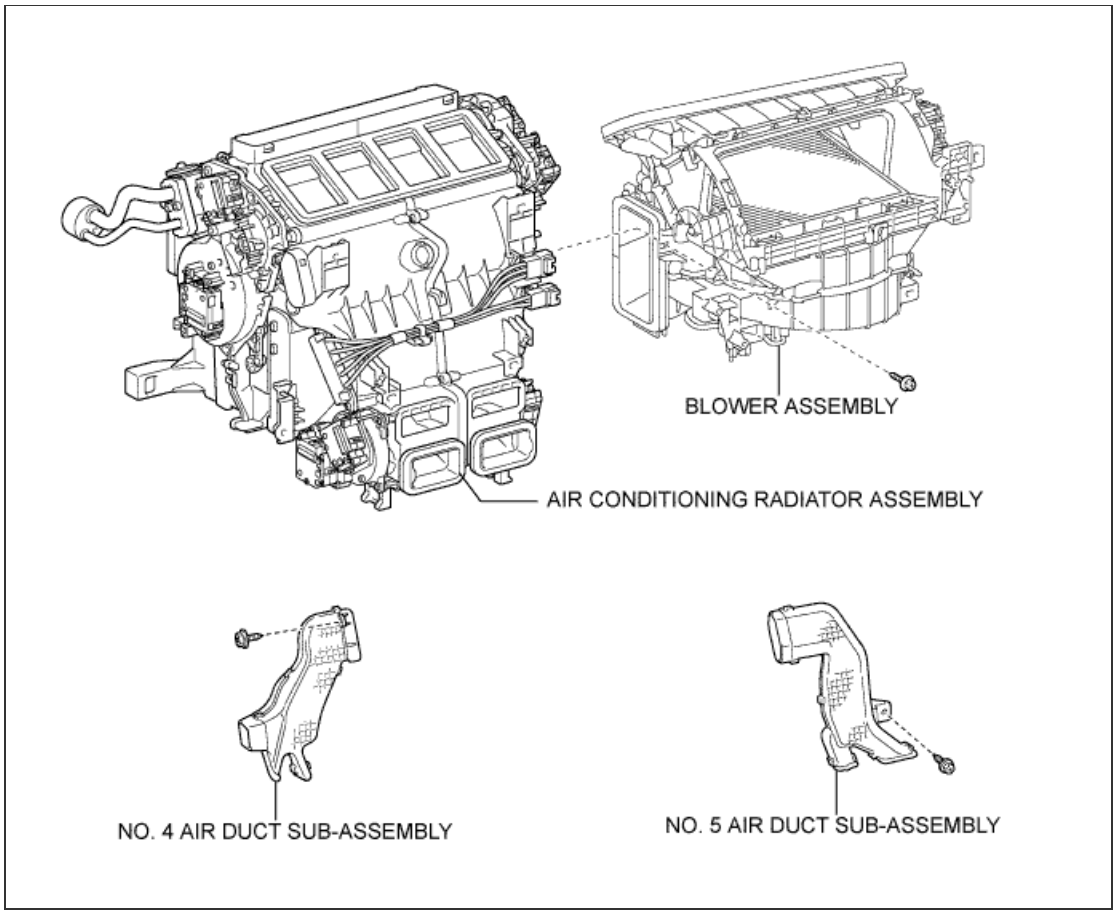
BLOWER ASSEMBLY
AIR CONDITIONING RADIATOR ASSEMBLY
NO. 4 AIR DUCT SUB-ASSEMBLY
NO. 5 AIR DUCT SUB-ASSEMBLY

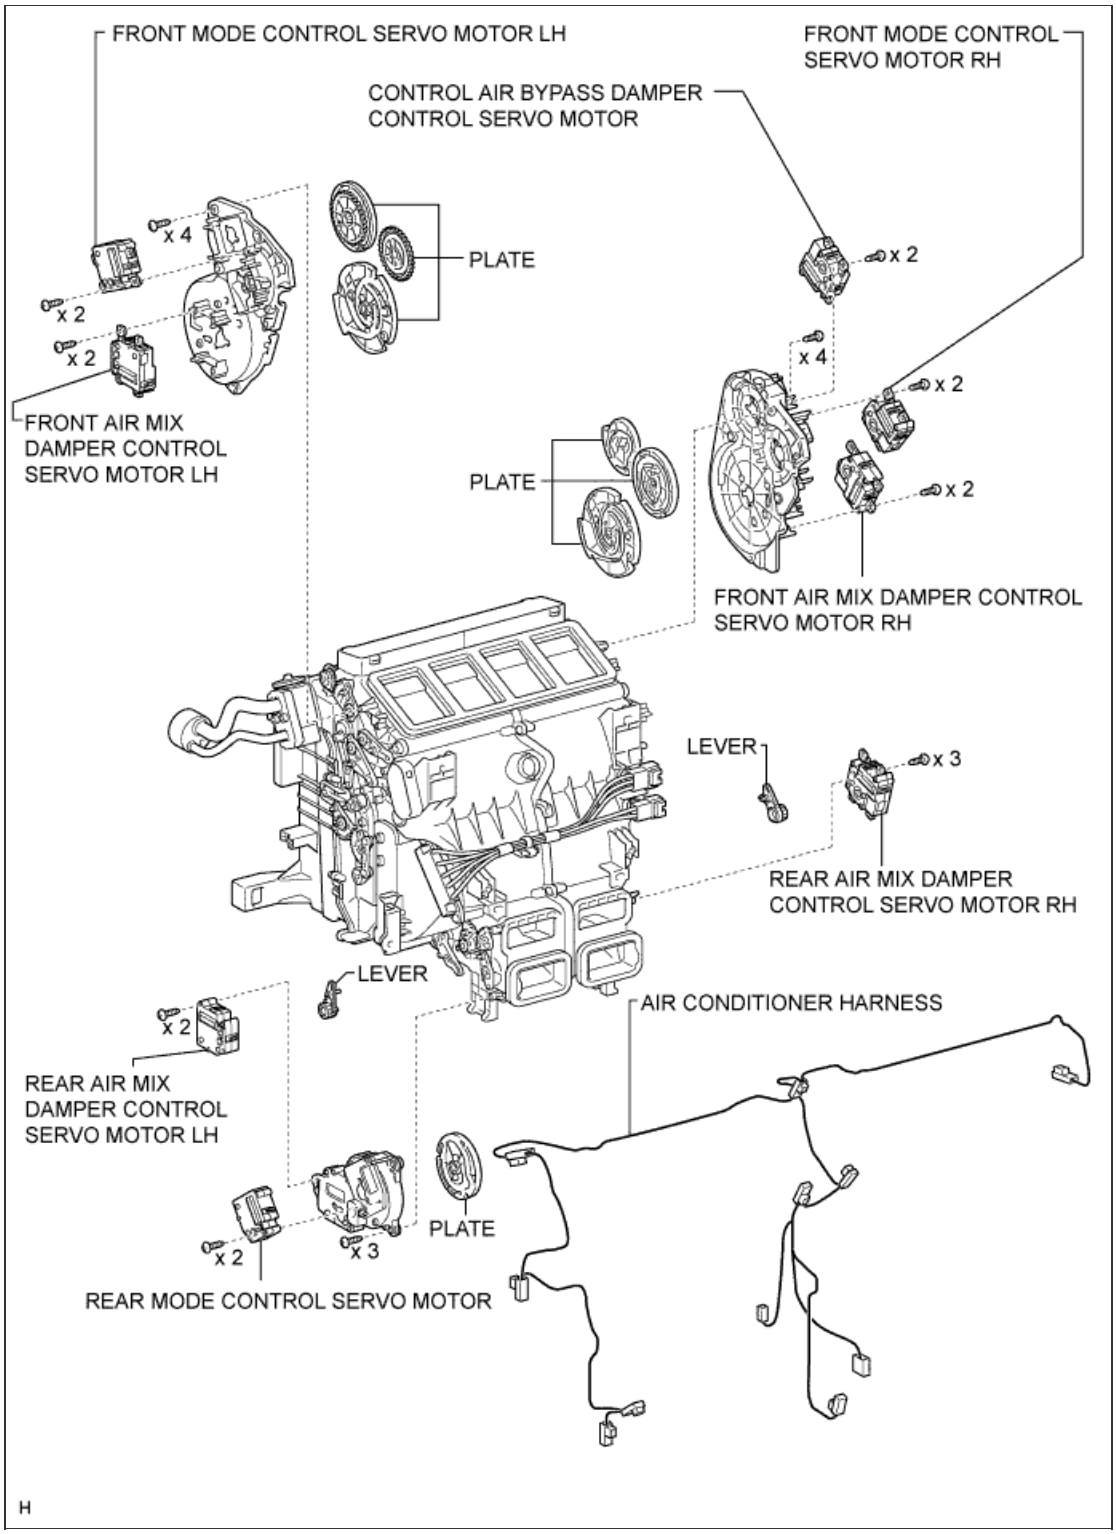

FRONT MODE CONTROL SERVO MOTOR LH
FRONT MODE CONTROL SERVO MOTOR RH
CONTROL AIR BYPASS DAMPER CONTROL SERVO MOTOR
x 4
x 2
x 2
PLATE
x 2
x 4
x 2
x 2
FRONT AIR MIX DAMPER CONTROL SERVO MOTOR LH
PLATE
FRONT AIR MIX DAMPER CONTROL SERVO MOTOR RH
LEVER
x 3
REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH
LEVER
AIR CONDITIONER HARNESS
x 2
REAR AIR MIX DAMPER CONTROL SERVO MOTOR LH
PLATE
x 2
x 3
REAR MODE CONTROL SERVO MOTOR
H

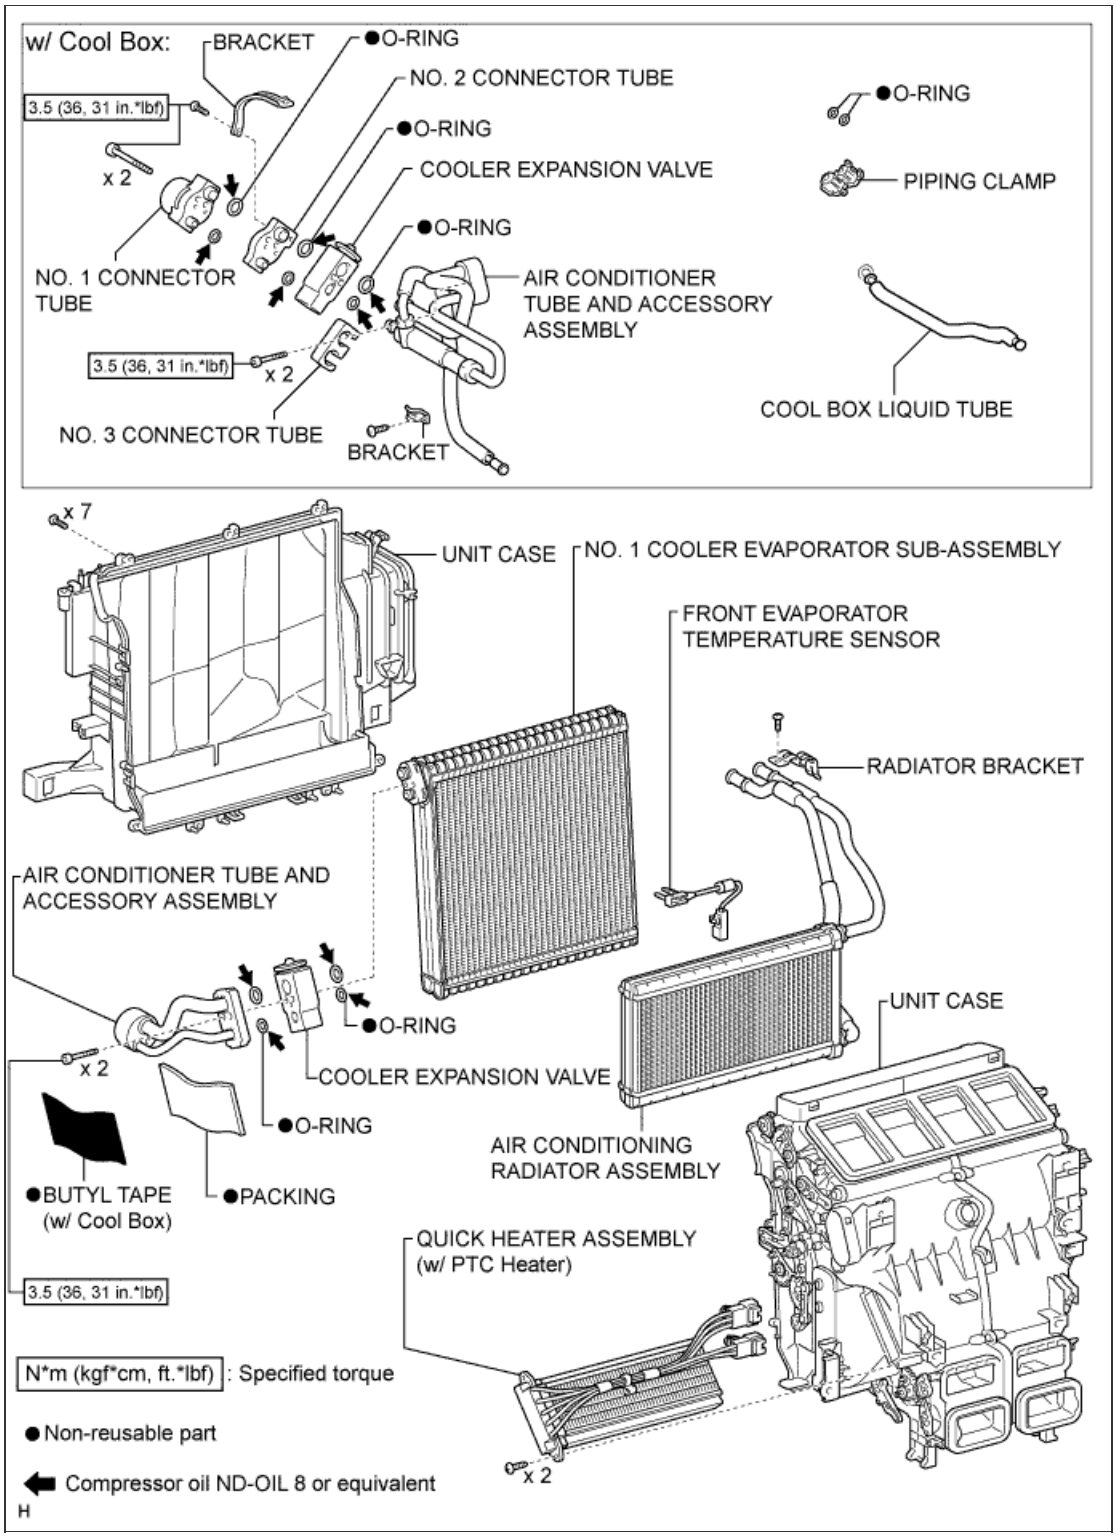

w/ Cool Box:
BRACKET
O-RING
NO. 2 CONNECTOR TUBE
O-RING
COOLER EXPANSION VALVE
O-RING
3.5 (36, 31 in.*lbf)
x 2
NO. 1 CONNECTOR TUBE
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
3.5 (36, 31 in.*lbf)
x 2
NO. 3 CONNECTOR TUBE
BRACKET
O-RING
PIPING CLAMP
COOL BOX LIQUID TUBE
x 7
UNIT CASE
NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY
FRONT EVAPORATOR TEMPERATURE SENSOR
RADIATOR BRACKET
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
O-RING
x 2
COOLER EXPANSION VALVE
O-RING
BUTYL TAPE (w/ Cool Box)
PACKING
3.5 (36, 31 in.*lbf)
UNIT CASE
AIR CONDITIONING RADIATOR ASSEMBLY
QUICK HEATER ASSEMBLY (w/ PTC Heater)
x 2
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
Compressor oil ND-OIL 8 or equivalent
H


for Preparation Click here

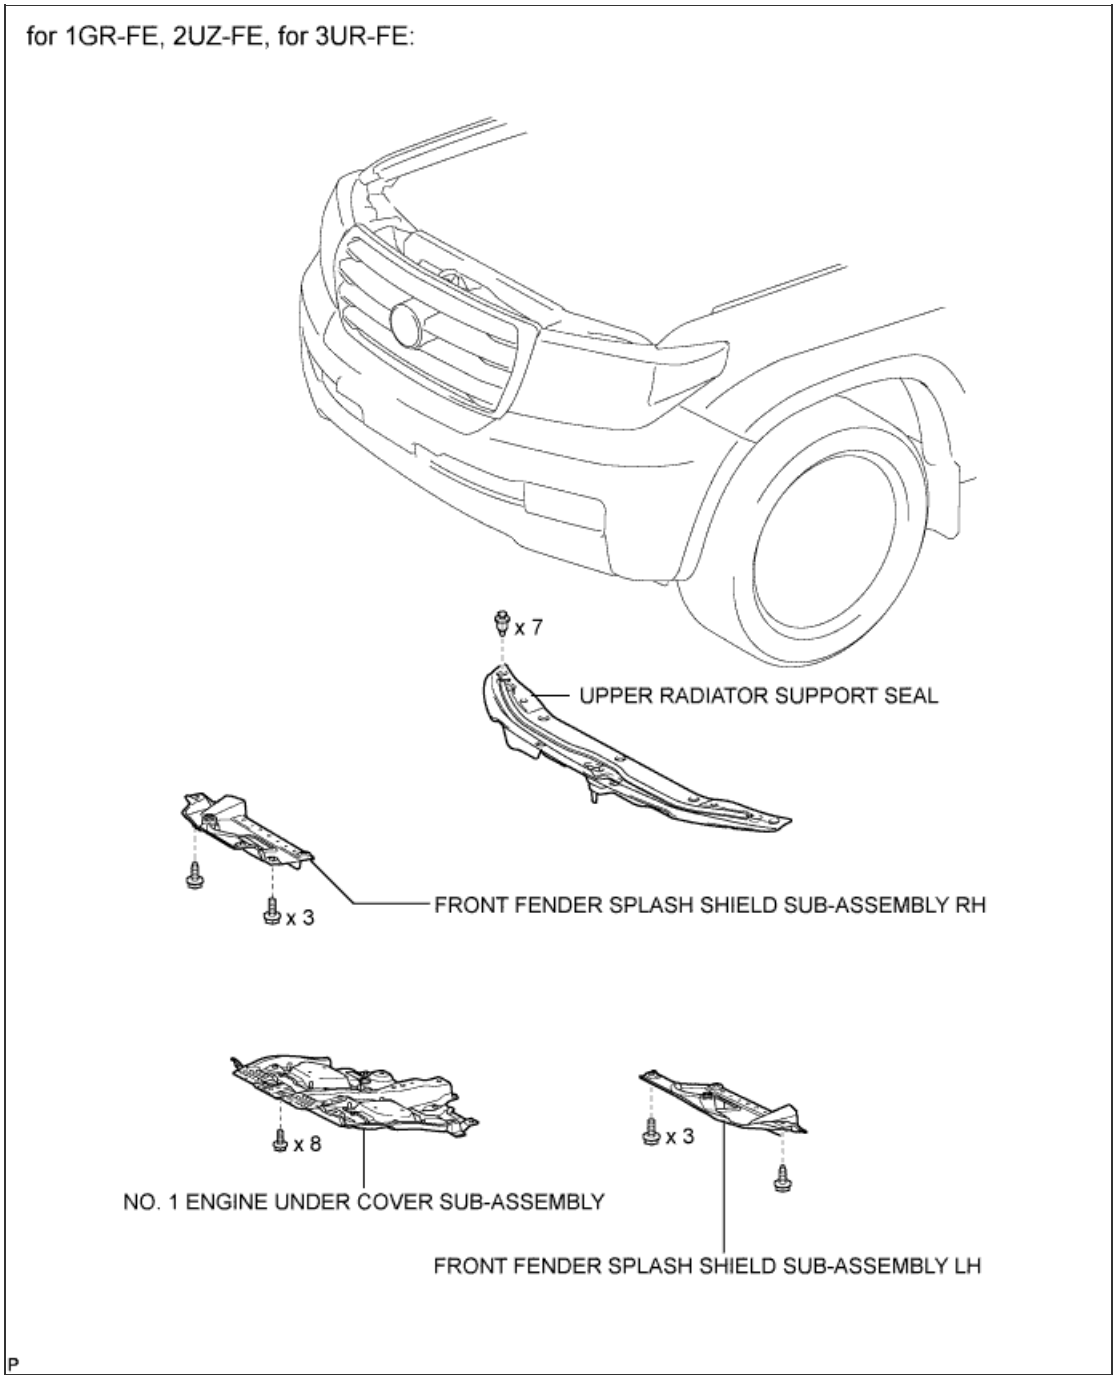


for 1VD-FTV:

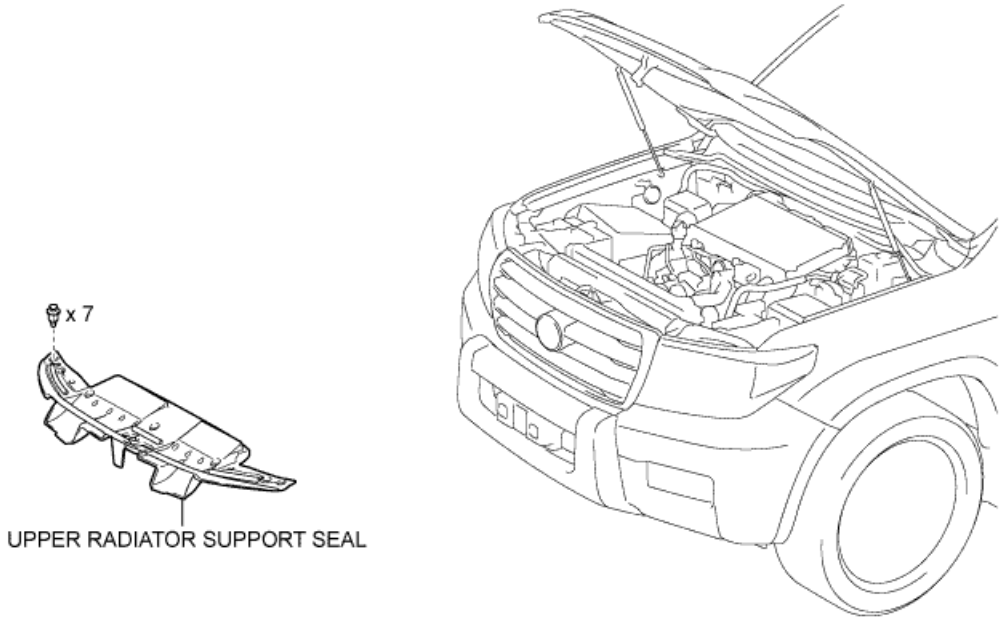

x 7
UPPER RADIATOR SUPPORT SEAL

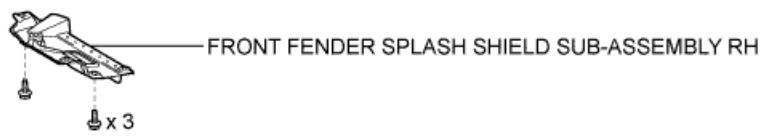

FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH
x 3

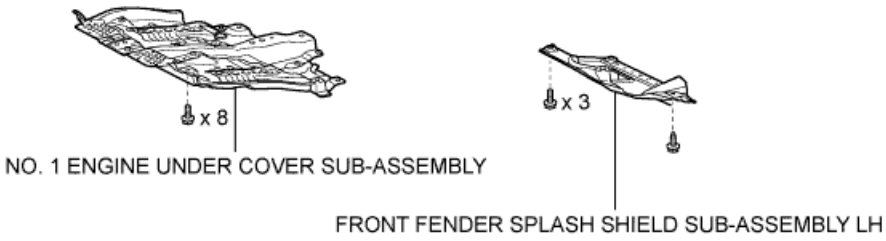

x 8
NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY
x 3
FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

P

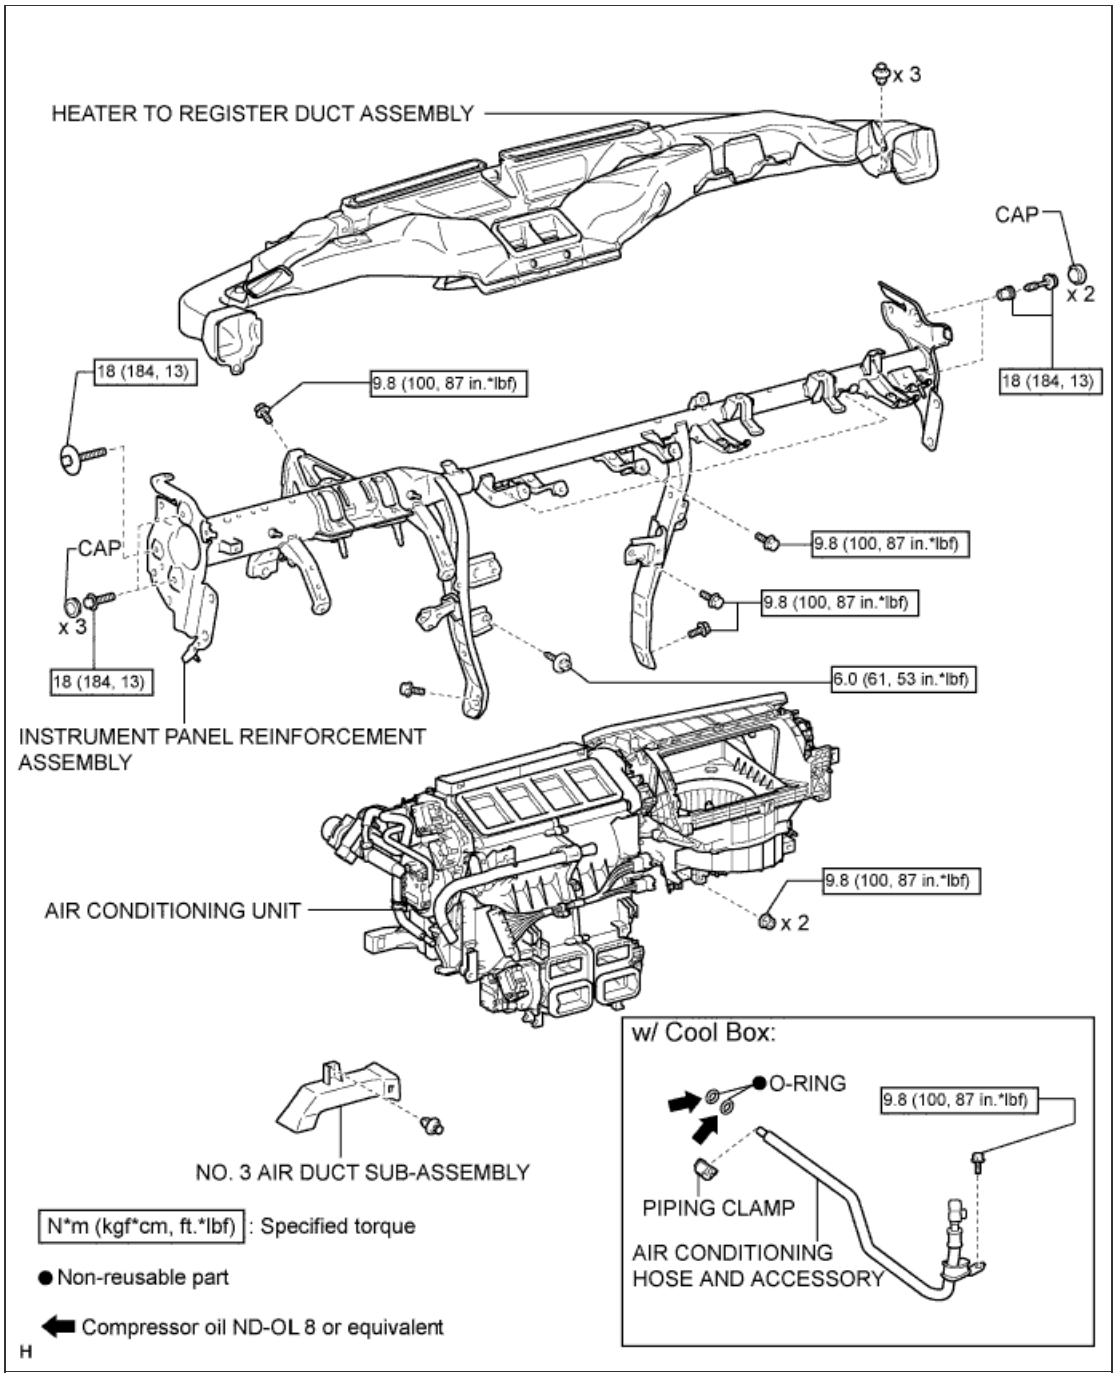
HEATER TO REGISTER DUCT ASSEMBLY
x 3
CAP
x 2
18 (184, 13)
9.8 (100, 87 in.*lbf)
18 (184, 13)
CAP
x 3
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
18 (184, 13)
6.0 (61, 53 in.*lbf)
INSTRUMENT PANEL REINFORCEMENT ASSEMBLY
AIR CONDITIONING UNIT
9.8 (100, 87 in.*lbf)
x 2
w/ Cool Box:
O-RING
9.8 (100, 87 in.*lbf)
PIPING CLAMP
AIR CONDITIONING HOSE AND ACCESSORY
NO. 3 AIR DUCT SUB-ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
Compressor oil ND-OIL 8 or equivalent
H

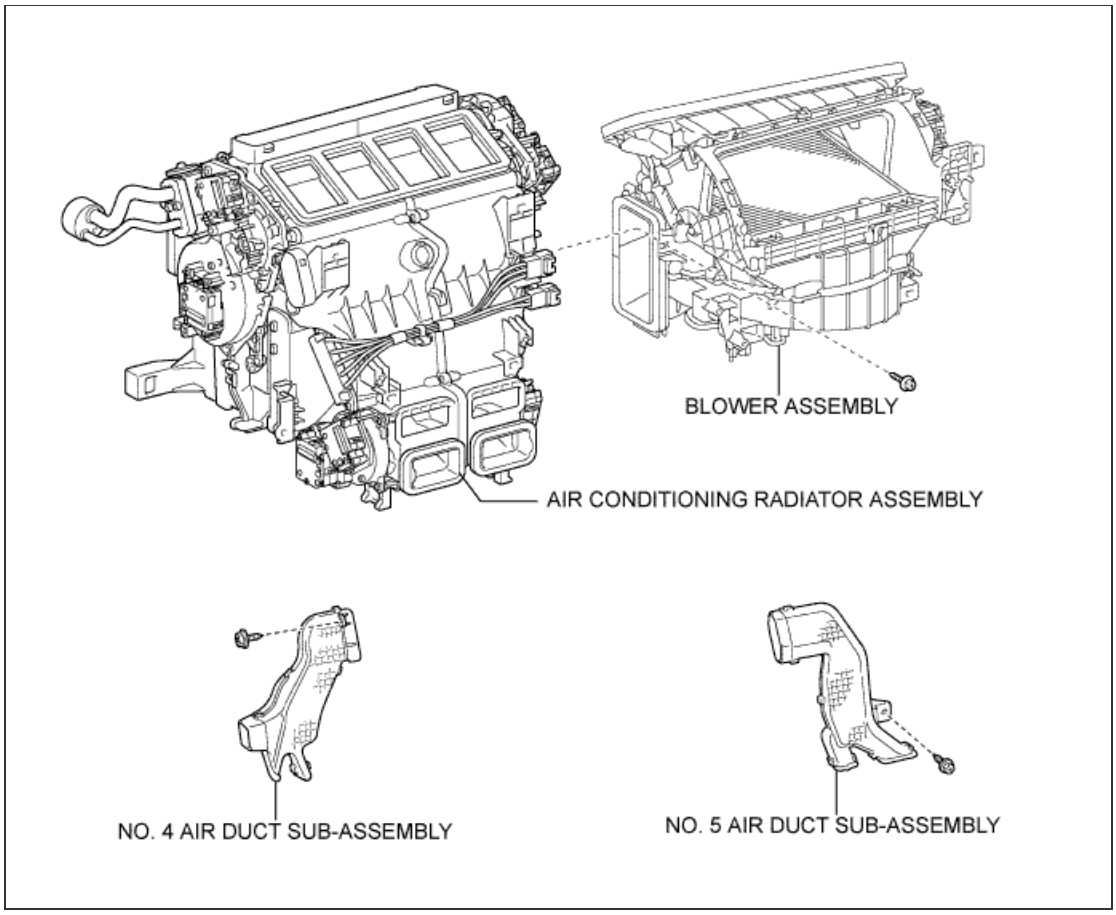
BLOWER ASSEMBLY
AIR CONDITIONING RADIATOR ASSEMBLY
NO. 4 AIR DUCT SUB-ASSEMBLY
NO. 5 AIR DUCT SUB-ASSEMBLY

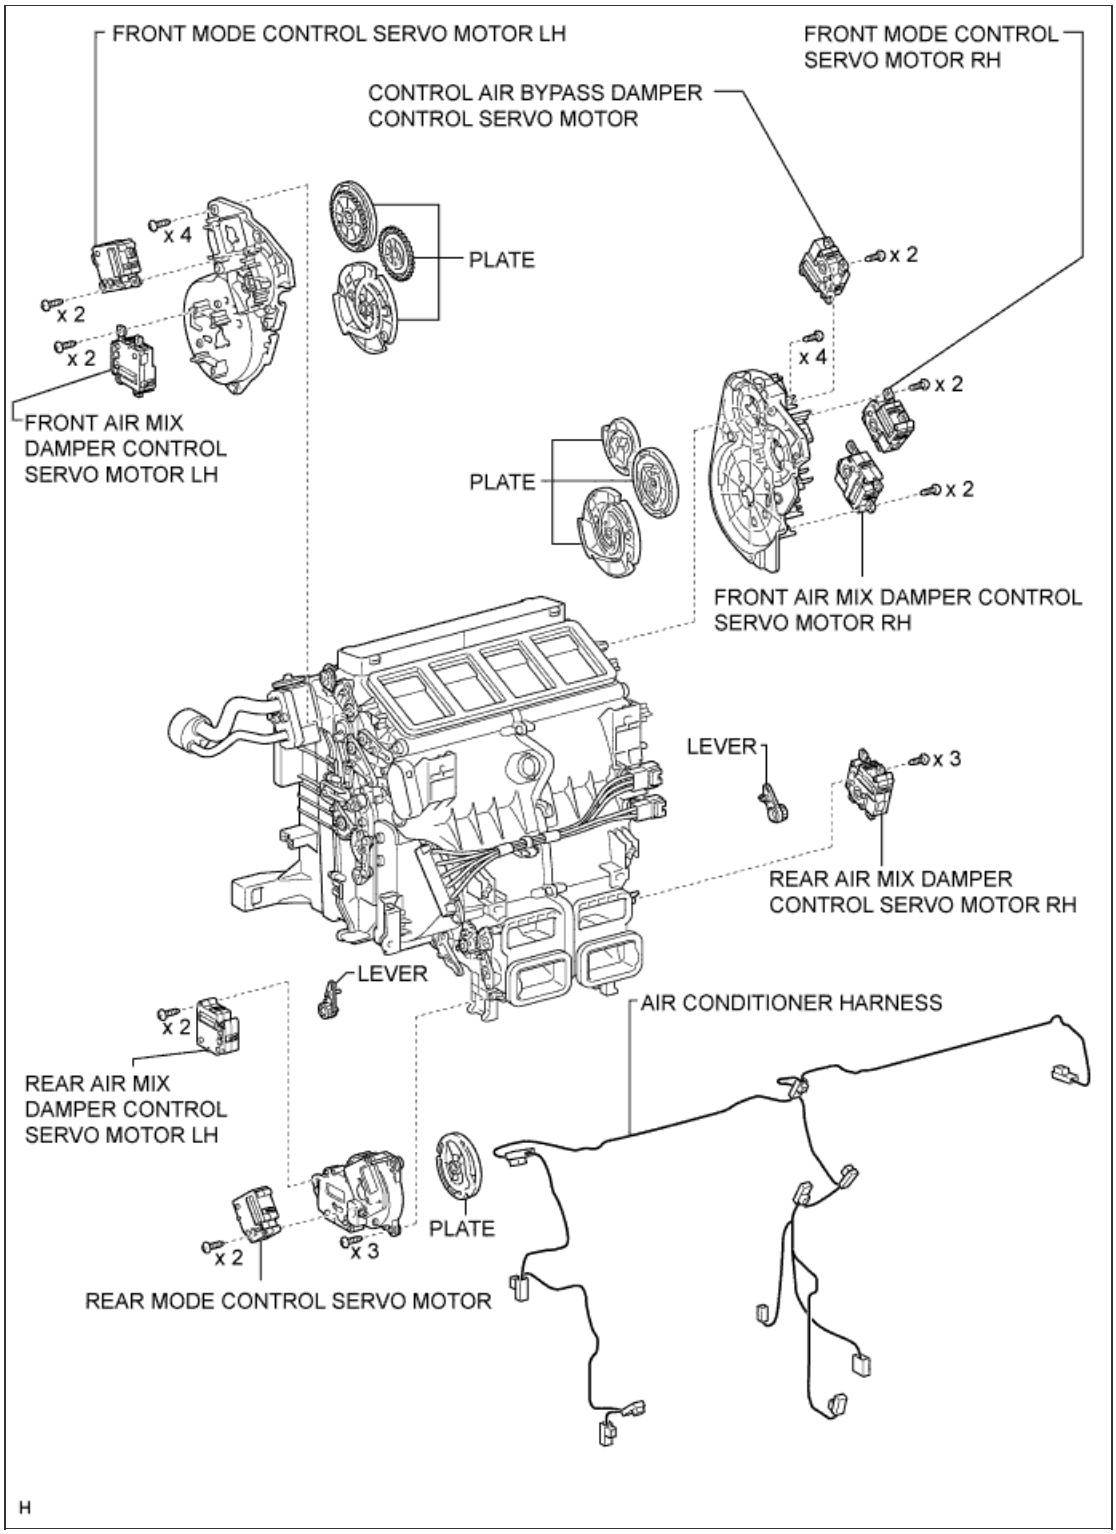
FRONT MODE CONTROL SERVO MOTOR LH
FRONT MODE CONTROL SERVO MOTOR RH
CONTROL AIR BYPASS DAMPER CONTROL SERVO MOTOR
x 4
x 2
x 2
PLATE
x 2
x 4
x 2
x 2
FRONT AIR MIX DAMPER CONTROL SERVO MOTOR LH
PLATE
FRONT AIR MIX DAMPER CONTROL SERVO MOTOR RH
LEVER
x 3
REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH
LEVER
AIR CONDITIONER HARNESS
x 2
REAR AIR MIX DAMPER CONTROL SERVO MOTOR LH
PLATE
x 2
x 3
REAR MODE CONTROL SERVO MOTOR
H

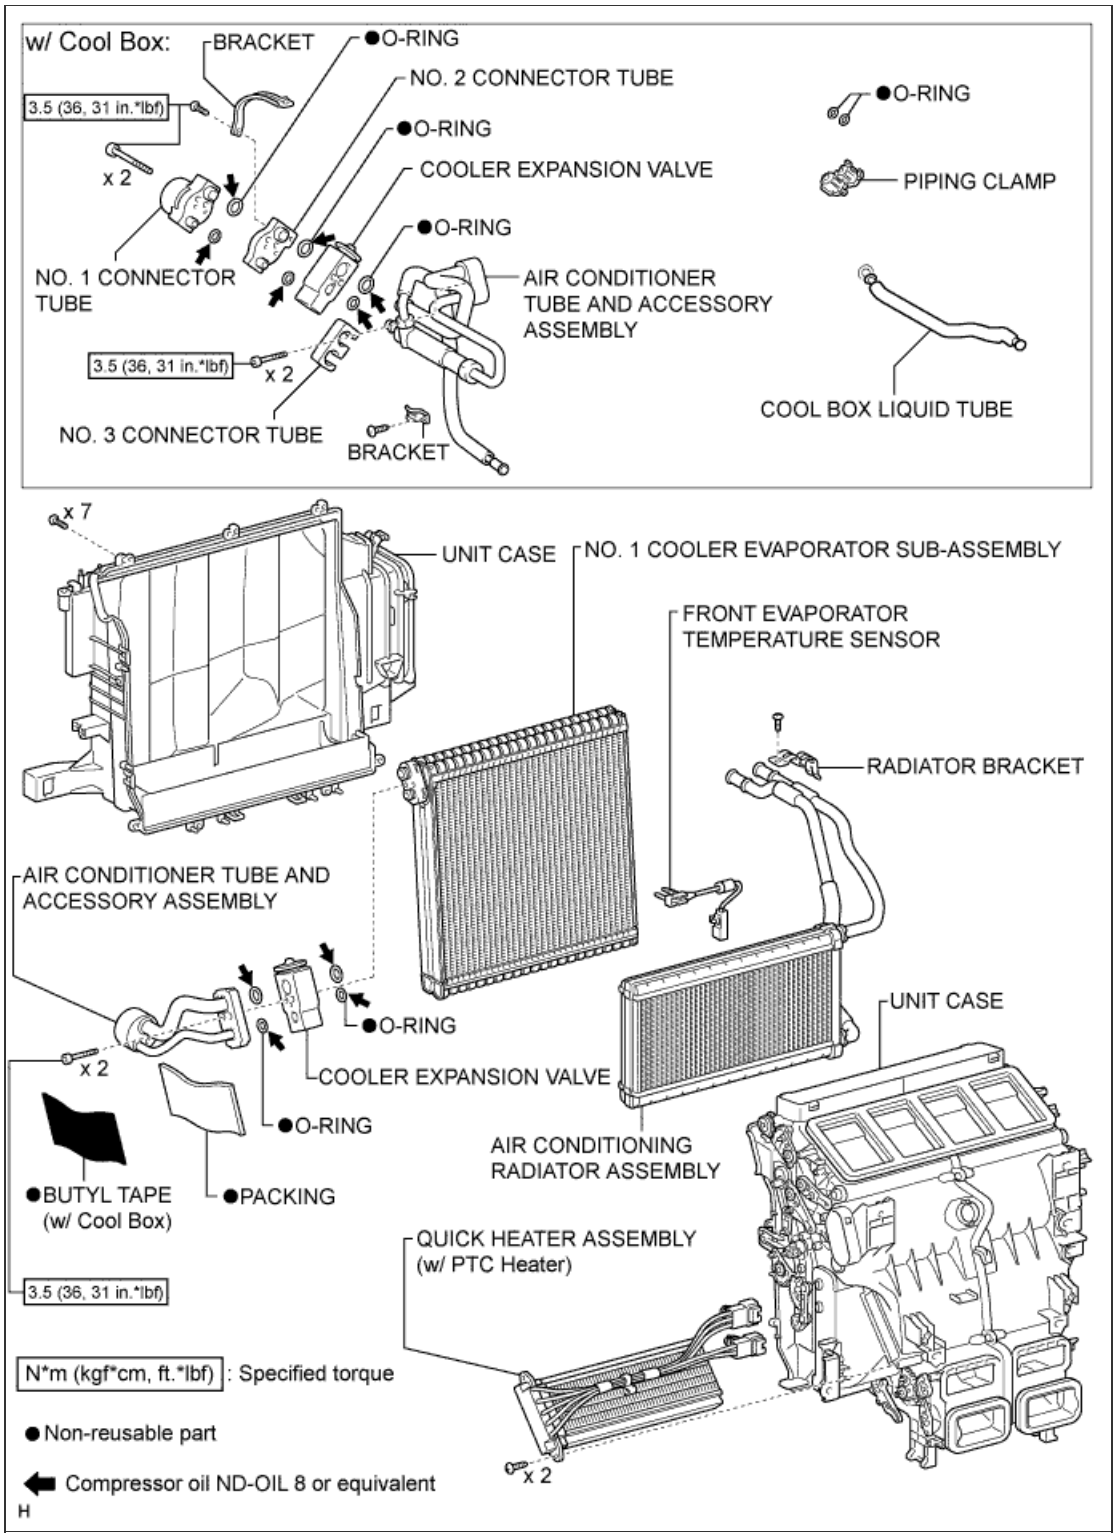
w/ Cool Box:
BRACKET
O-RING
NO. 2 CONNECTOR TUBE
O-RING
COOLER EXPANSION VALVE
O-RING
3.5 (36, 31 in.*lbf)
x 2
NO. 1 CONNECTOR TUBE
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
3.5 (36, 31 in.*lbf)
x 2
NO. 3 CONNECTOR TUBE
BRACKET
O-RING
PIPING CLAMP
COOL BOX LIQUID TUBE
x 7
UNIT CASE
NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY
FRONT EVAPORATOR TEMPERATURE SENSOR
RADIATOR BRACKET
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
O-RING
x 2
COOLER EXPANSION VALVE
O-RING
BUTYL TAPE (w/ Cool Box)
PACKING
3.5 (36, 31 in.*lbf)
UNIT CASE
AIR CONDITIONING RADIATOR ASSEMBLY
QUICK HEATER ASSEMBLY (w/ PTC Heater)
x 2
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
Compressor oil ND-OIL 8 or equivalent
H

for Preparation Click here

1. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).


2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).


3. REMOVE NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. Remove the 10 bolts and No. 1 engine under cover.

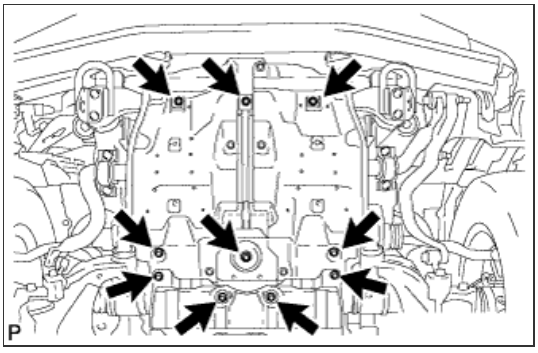

4. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

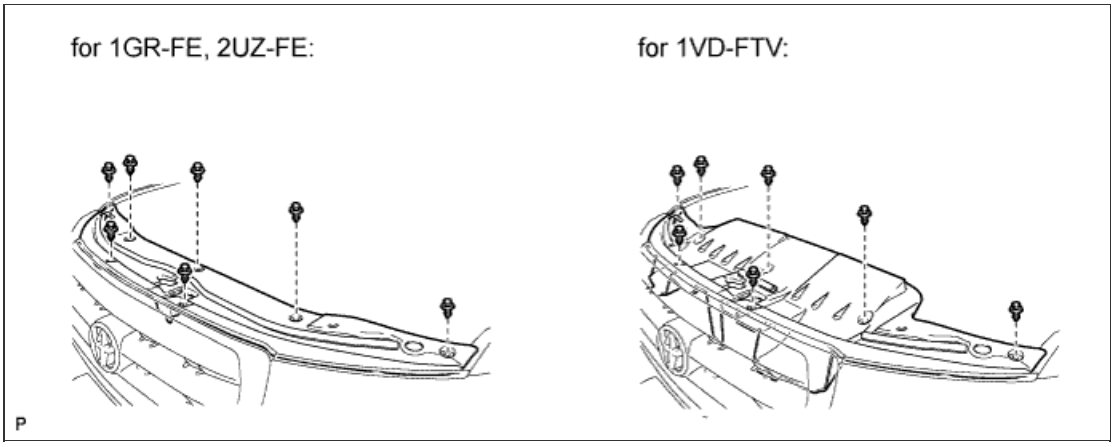

5. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

6. DRAIN ENGINE COOLANT

a. for 1VD-FTV:
Drain the engine coolant (Click here).

b. for 2UZ-FE:
Drain the engine coolant (Click here).

c. for 1GR-FE:
Drain the engine coolant (Click here).

7. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

8. DISCONNECT AIR CONDITIONING TUBE ASSEMBLY

a. Remove the bolt.

b. Detach the plate as shown in the illustration.

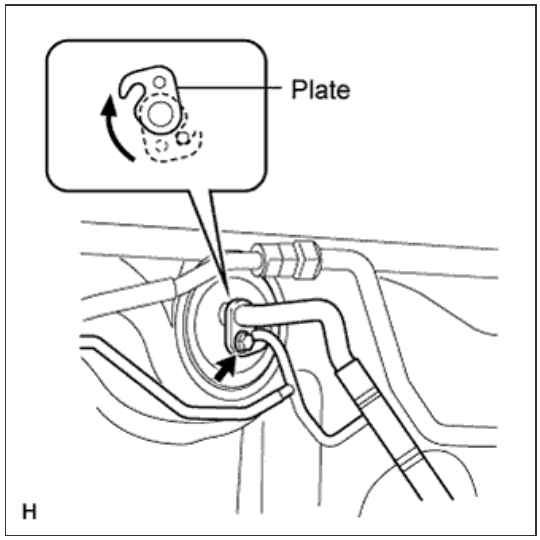


c. Disconnect the air conditioning tube assembly.

NOTICE:

- **Do not use a screwdriver or similar tool to disconnect the tube.**
- **Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.**


d. Remove the 2 O-rings from the air conditioning tube assembly.

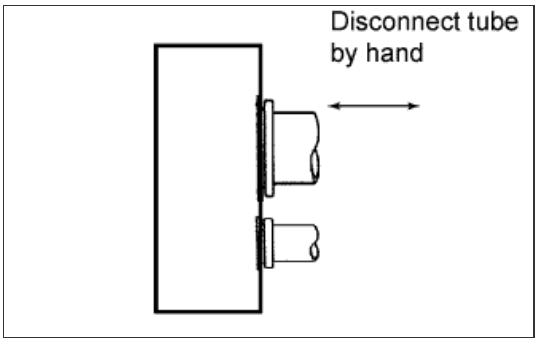

9. DISCONNECT HEATER WATER INLET HOSE AND HEATER WATER OUTLET HOSE

a. Using pliers, grip the claws of the clips and slide the 2 clips.

b. Disconnect the 2 heater water hoses.

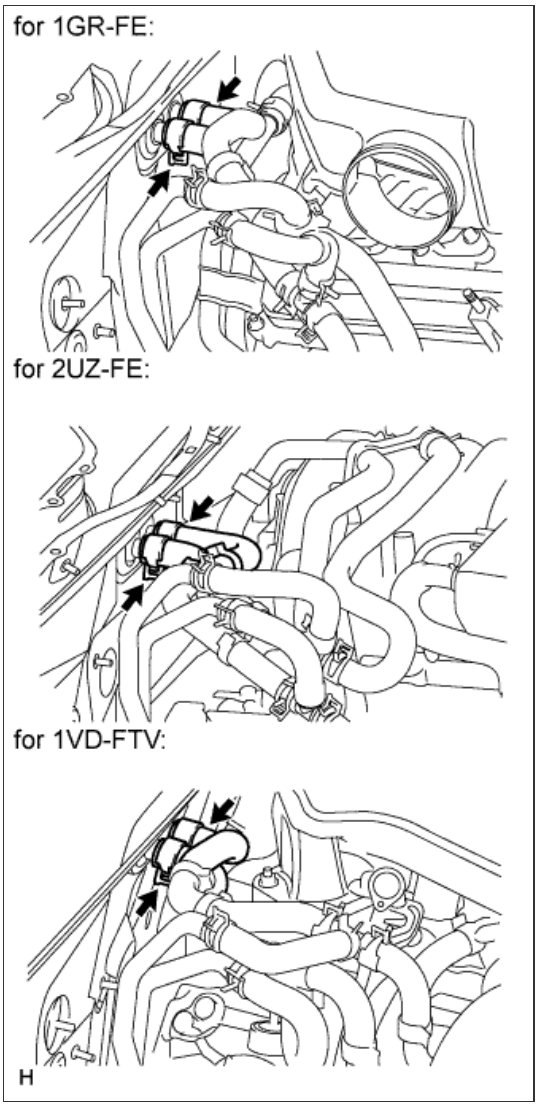

10. REMOVE FRONT WIPER MOTOR AND BRACKET

a. Remove the front wiper motor and bracket (Click here).


11. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY

a. Remove the instrument panel (Click here).

12. REMOVE NO. 3 AIR DUCT SUB-ASSEMBLY

a. Remove the clip.

b. Detach the 2 claws and remove the duct.

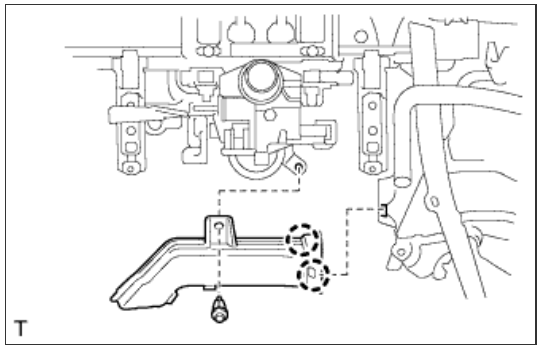

13. REMOVE STEERING COLUMN ASSEMBLY


a. for Power Tilt and Power Telescopic Steering Column:
Remove the steering column (Click here).

b. for Manual Tilt and Manual Telescopic Steering Column:
Remove the steering column (Click here).

14. REMOVE HEATER TO REGISTER DUCT ASSEMBLY


a. Remove the 3 clips.

b. Detach the 2 claws and remove the duct.

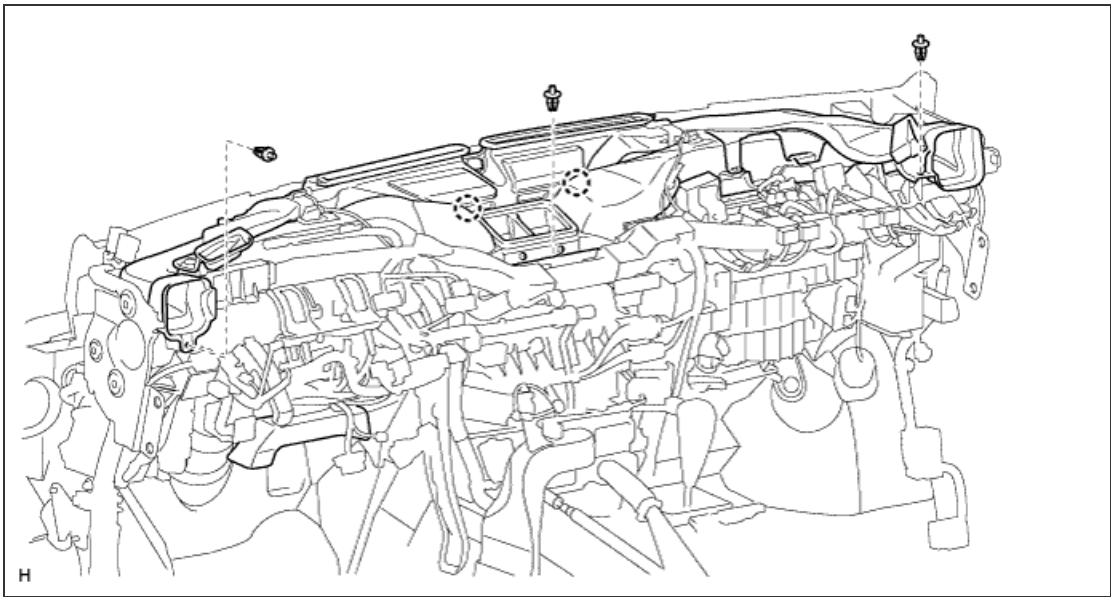

15. REMOVE INSTRUMENT PANEL REINFORCEMENT ASSEMBLY

a. Disconnect the clamps, connectors and wire harness.

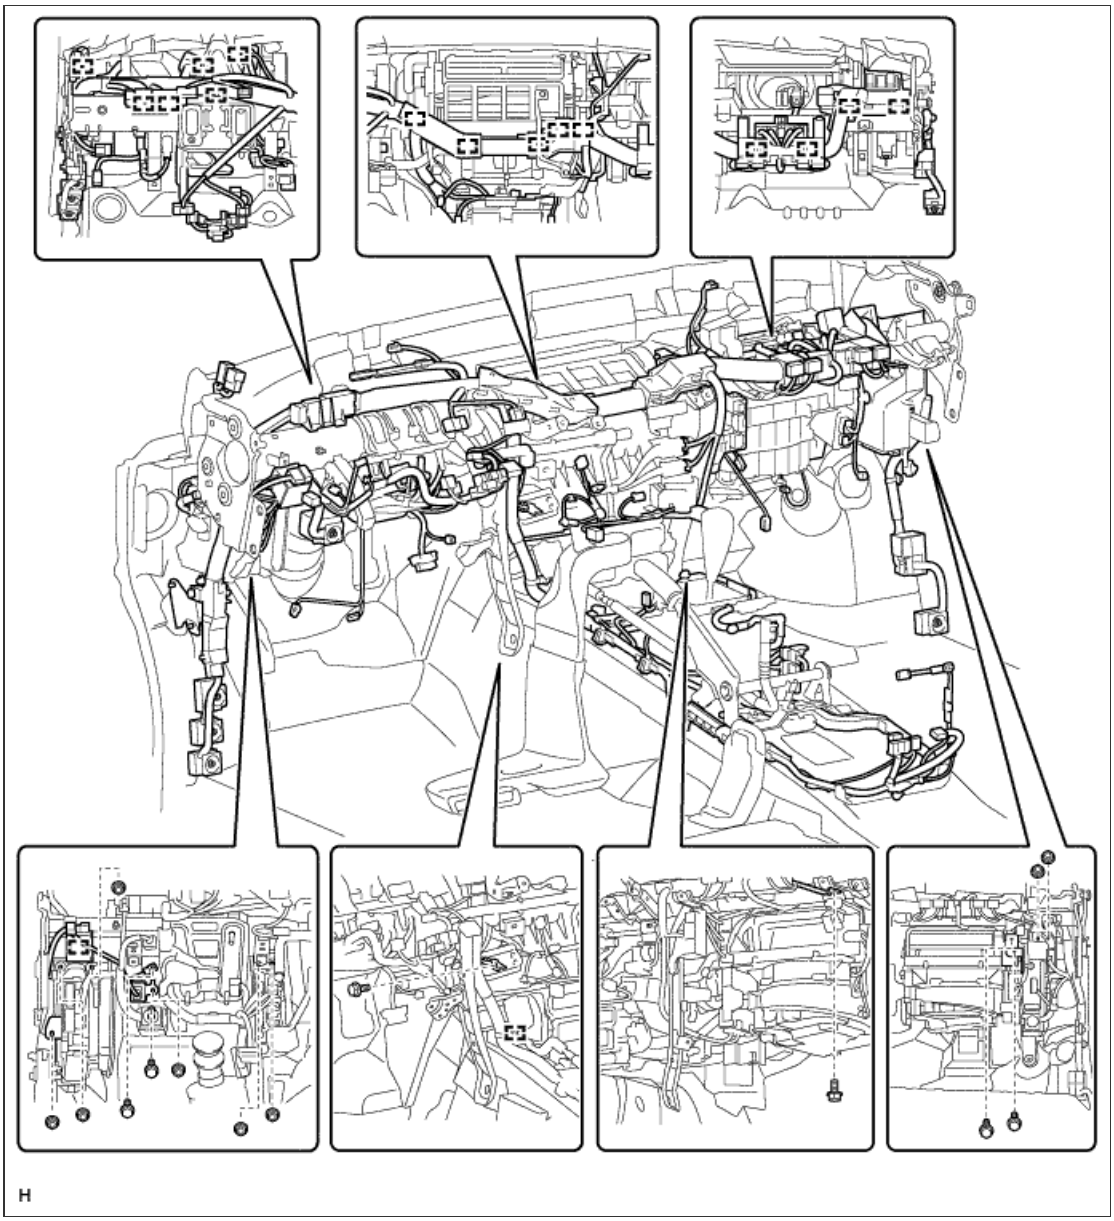

b. Remove the instrument panel reinforcement.

i. for Driver Side:
Remove the 3 caps and 3 bolts.

ii. for Passenger Side:
Remove the 2 caps.


iii. for Passenger Side:
Using a T40 "TORX" socket, remove the 2 "TORX" bolts.

HINT:

When removing the bolts, the collars may come off with the bolts.


iv. for Passenger Side:
Using a 12 mm hexagon wrench, remove the 2 collars.

v. Remove the 7 bolts, screw and instrument panel reinforcement.

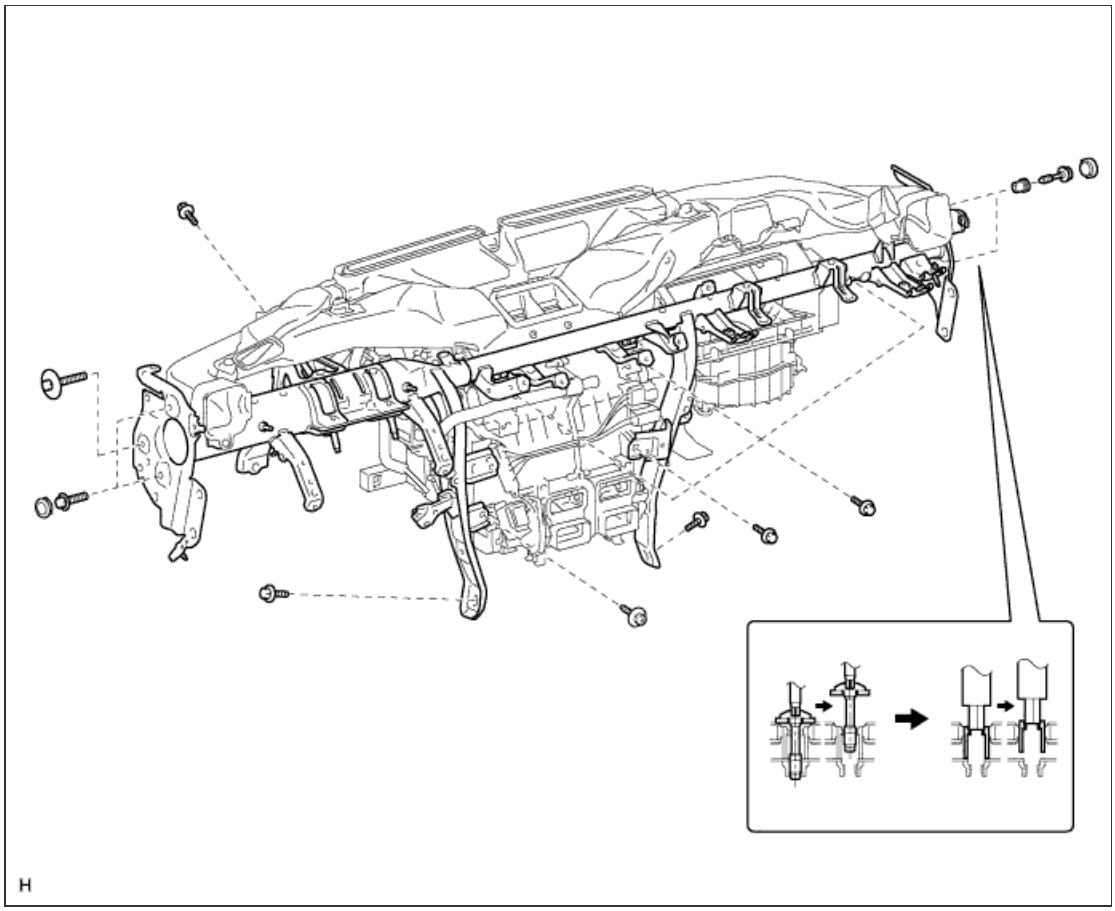

16. REMOVE AIR CONDITIONING HOSE AND ACCESSORY (w/ Cool Box)

a. Remove the bolt.

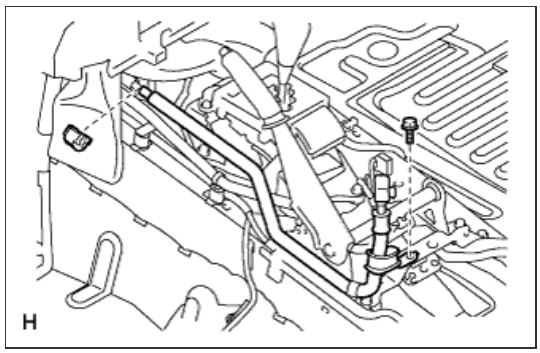


b. Using SST, remove the piping clamp.

SST
09870-00025

i. Attach SST to the piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST by referring to the illustration on the caution label.

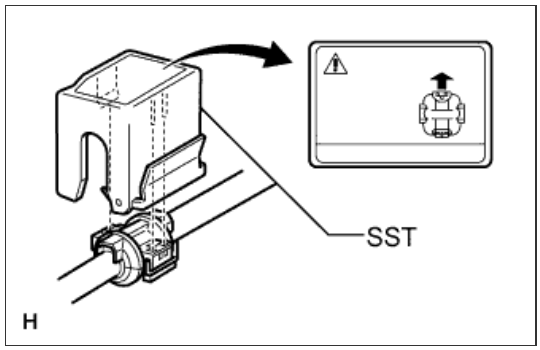


ii. Push down SST and release the clamp lock.

NOTICE:

Be careful not to deform the tubes when pushing SST.

iii. Pull SST slightly and push the release lever, then remove the piping clamp with SST.

iv. Remove the piping clamp from SST.

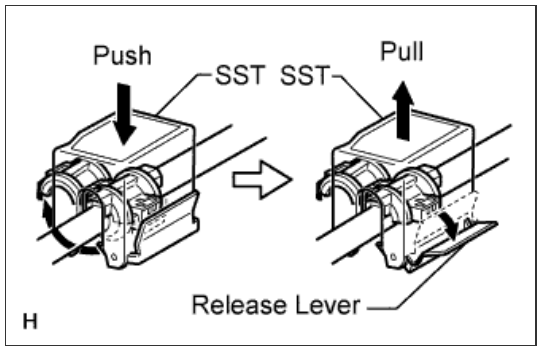

c. Disconnect the hose and accessory from the liquid tube to remove it.


NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

d. Remove the 2 O-rings from the air conditioner hose and accessory.

17. REMOVE AIR CONDITIONING UNIT

a. Remove the 2 nuts and air conditioning unit.

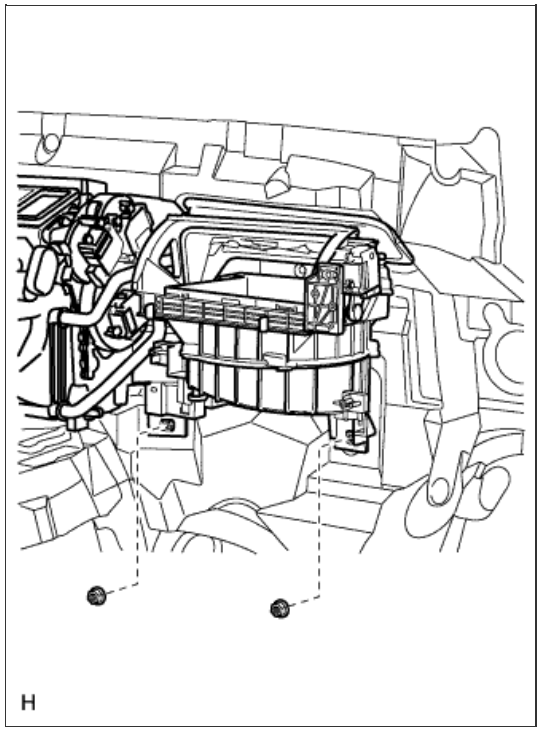

for Preparation Click here

1. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).

2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).

3. REMOVE NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. for 1VD-FTV:
Remove the No. 1 Engine under cover sub-assembly (Click here).


b. for 2UZ-FE:
Remove the No. 1 Engine under cover sub-assembly (Click here).

c. for 1GR-FE:
Remove the No. 1 Engine under cover sub-assembly (Click here).

d. for 3UR-FE:
Remove the No. 1 Engine under cover sub-assembly (Click here).

4. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

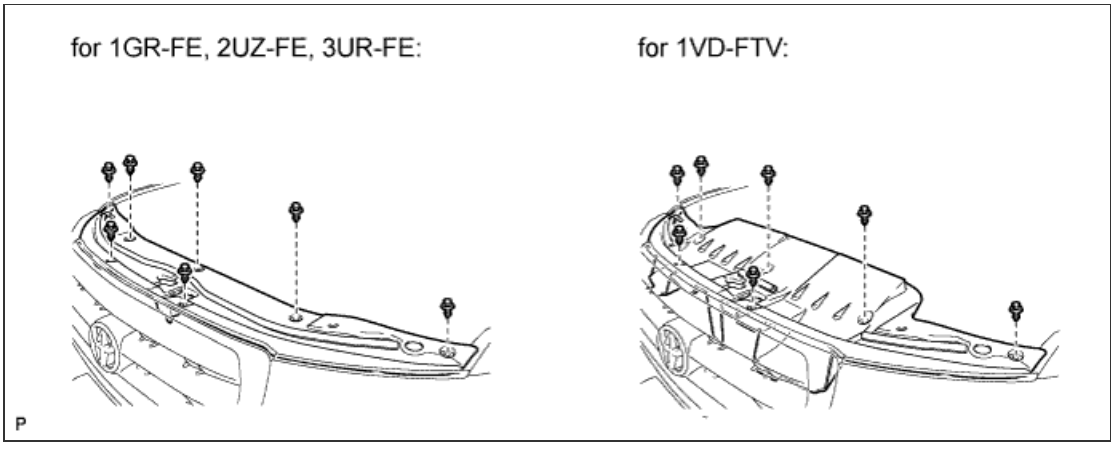

5. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

6. DRAIN ENGINE COOLANT

a. for 1VD-FTV:
Drain the engine coolant (Click here).

b. for 2UZ-FE:
Drain the engine coolant (Click here).

c. for 1GR-FE:
Drain the engine coolant (Click here).

d. for 3UR-FE:
Drain the engine coolant (Click here).

7. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initiali ed after the cable is reconnected (Click here).

8. DISCONNECT AIR CONDITIONING TUBE ASSEMBLY

a. Remove the bolt.

b. Detach the plate as shown in the illustration.

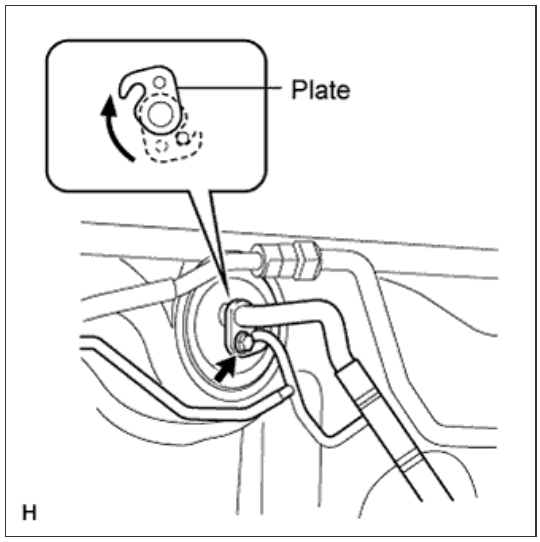


c. Disconnect the air conditioning tube assembly.

NOTICE:

- **Do not use a screwdriver or similar tool to disconnect the tube.**
- **Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.**


d. Remove the 2 O-rings from the air conditioning tube assembly.

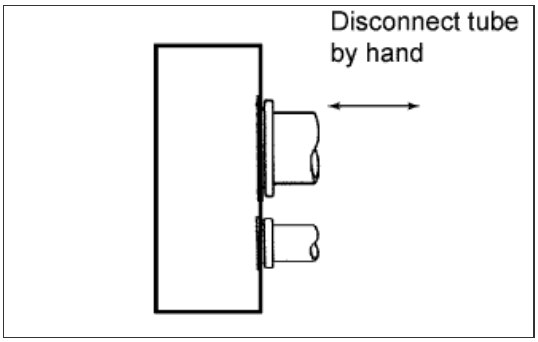

9. DISCONNECT HEATER WATER INLET HOSE AND HEATER WATER OUTLET HOSE

a. Using pliers, grip the claws of the clips and slide the 2 clips.

b. Disconnect the 2 heater water hoses.

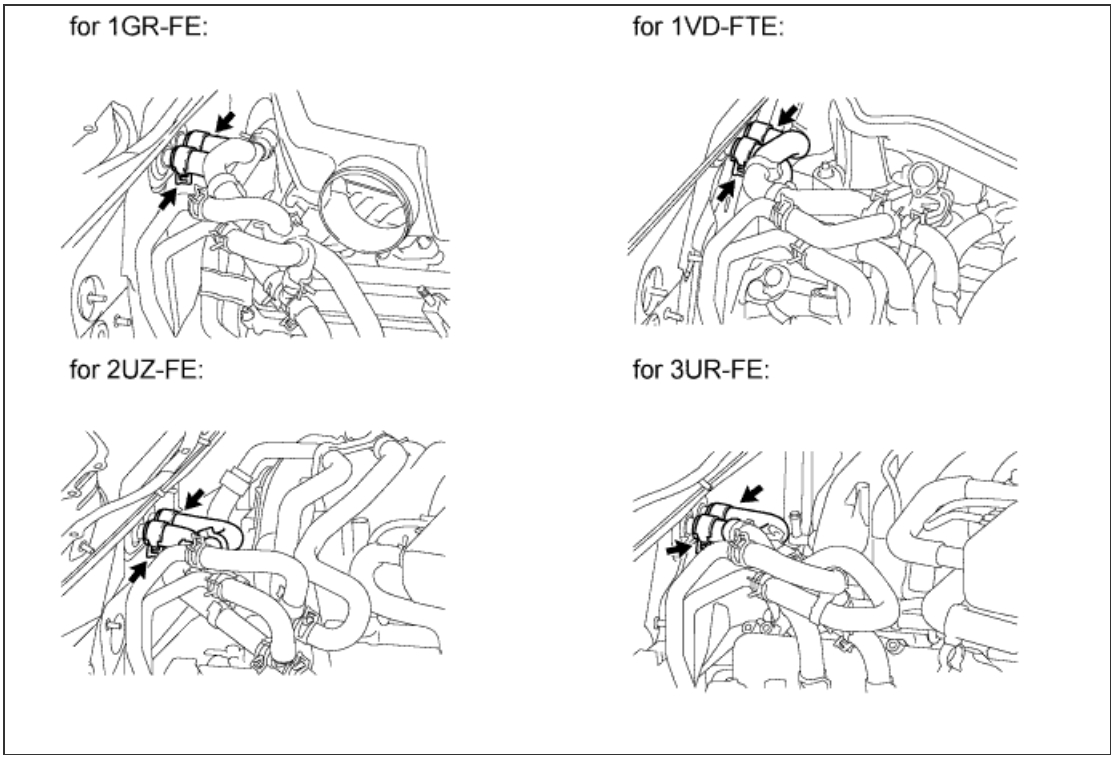

10. REMOVE FRONT WIPER MOTOR AND BRACKET

a. Remove the front wiper motor and bracket (Click here).


11. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY

a. Remove the instrument panel (Click here).

12. REMOVE NO. 3 AIR DUCT SUB-ASSEMBLY

a. Remove the clip.

b. Detach the 2 claws and remove the duct.

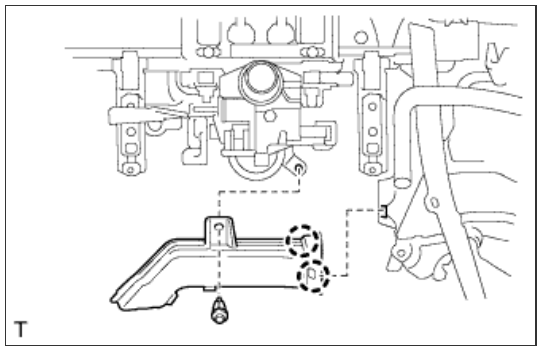

13. REMOVE STEERING COLUMN ASSEMBLY


a. for Power Tilt and Power Telescopic Steering Column:
Remove the steering column (Click here).

b. for Manual Tilt and Manual Telescopic Steering Column:
Remove the steering column (Click here).

14. REMOVE HEATER TO REGISTER DUCT ASSEMBLY


a. Remove the 3 clips.

b. Detach the 2 claws and remove the duct.

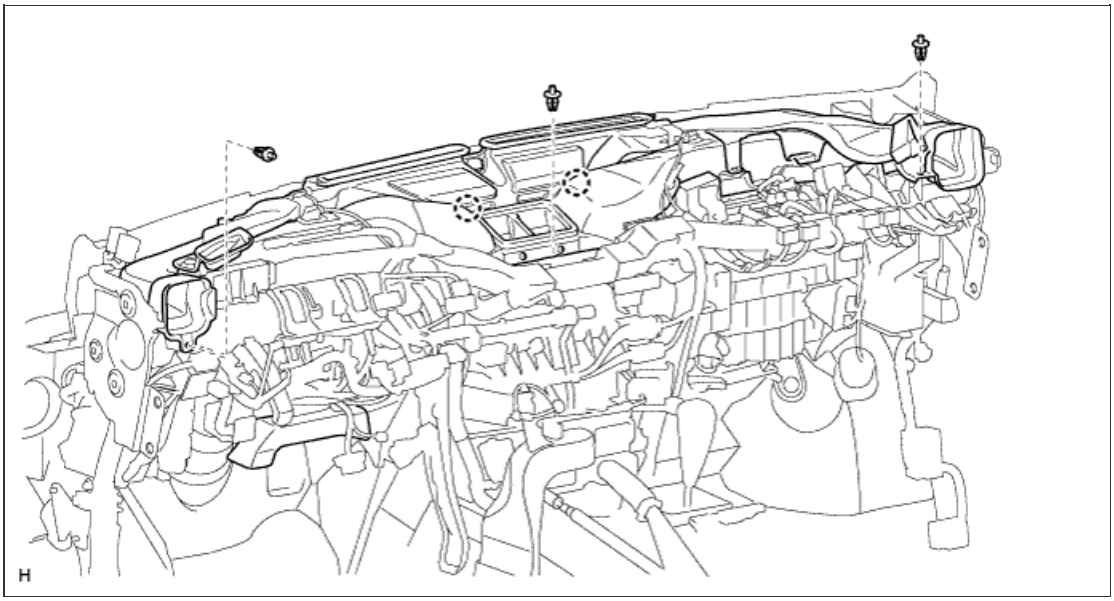

15. REMOVE INSTRUMENT PANEL REINFORCEMENT ASSEMBLY

a. Disconnect the clamps, connectors and wire harness.

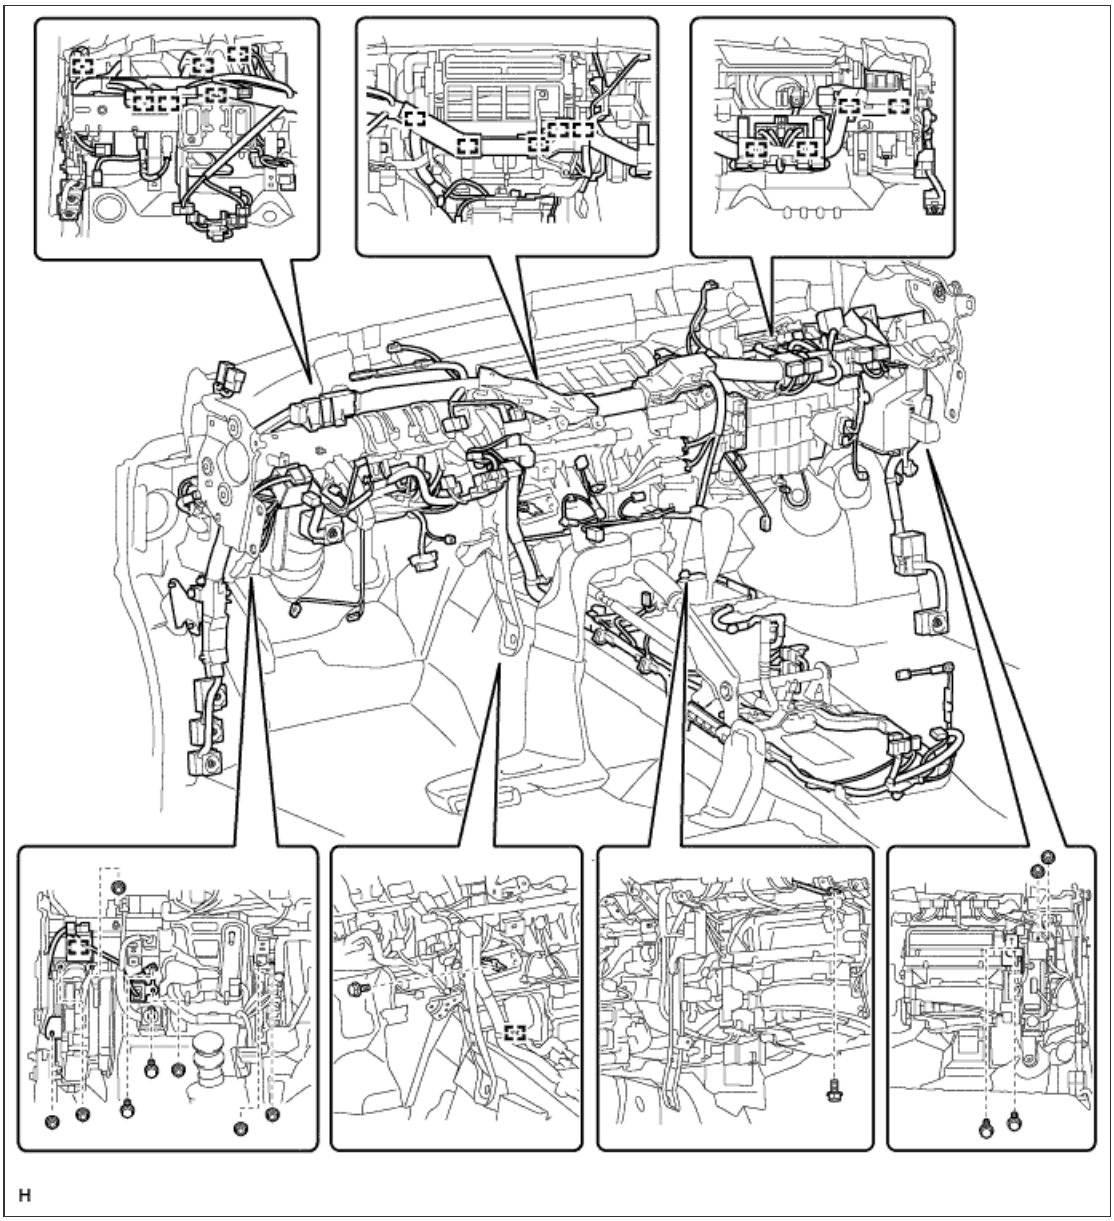

b. Remove the instrument panel reinforcement.

i. for Driver Side:
Remove the 3 caps and 3 bolts.

ii. for Passenger Side:
Remove the 2 caps.


iii. for Passenger Side:
Using a T40 "TORX" socket, remove the 2 "TORX" bolts.

HINT:

When removing the bolts, the collars may come off with the bolts.


iv. for Passenger Side:
Using a 12 mm hexagon wrench, remove the 2 collars.

v. Remove the 7 bolts, screw and instrument panel reinforcement.

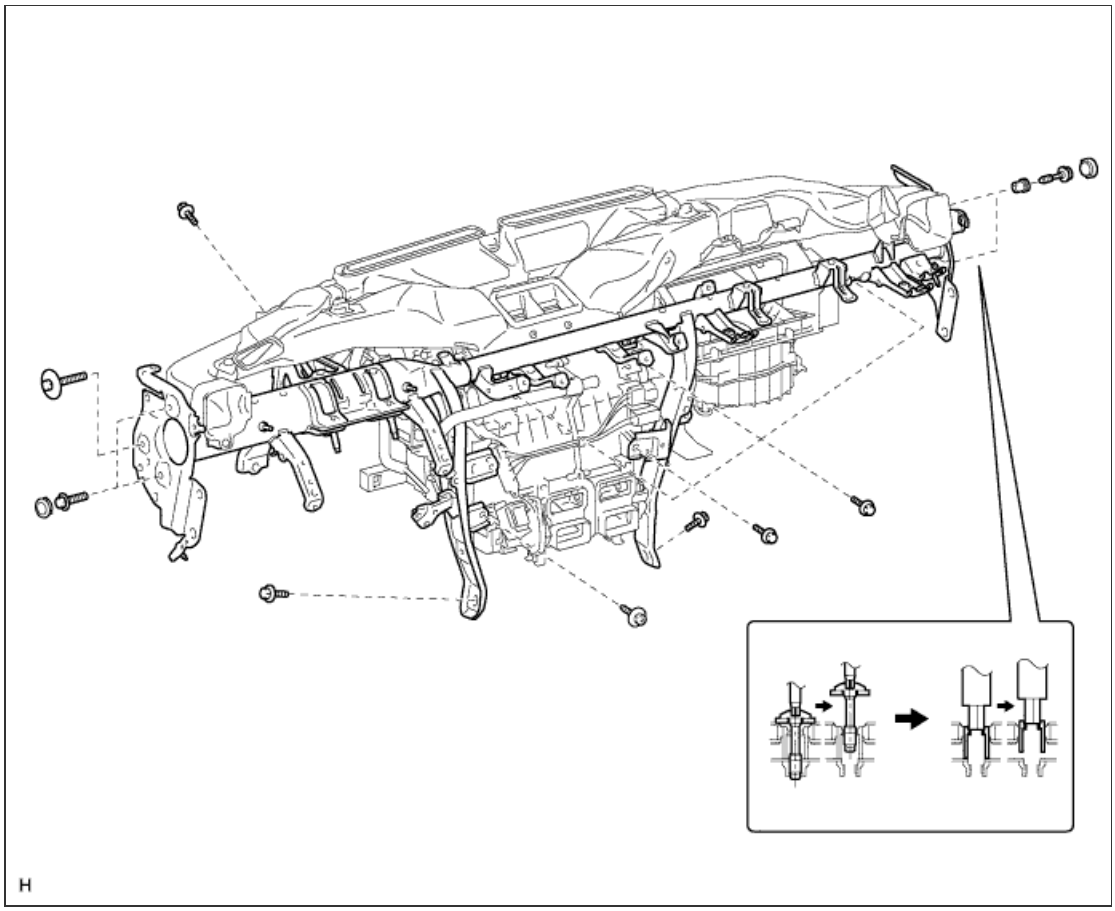

16. REMOVE AIR CONDITIONING HOSE AND ACCESSORY (w/ Cool Box)

a. Remove the bolt.

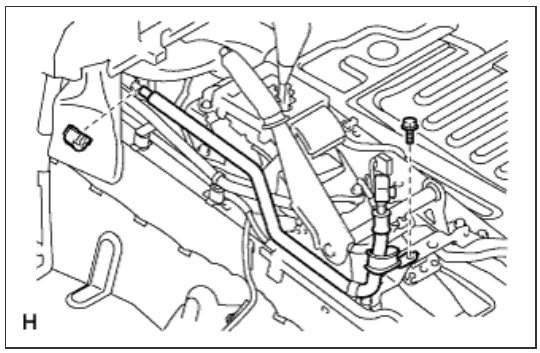


b. Using SST, remove the piping clamp.

SST
09870-00025

i. Attach SST to the piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST by referring to the illustration on the caution label.

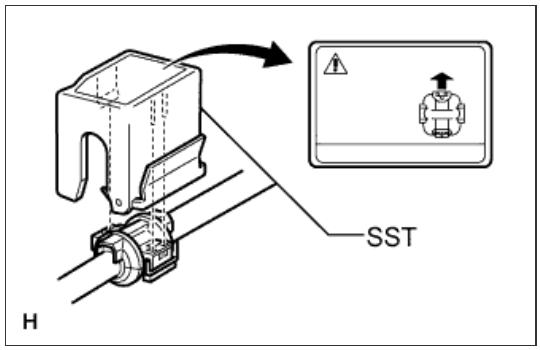


ii. Push down SST and release the clamp lock.

NOTICE:

Be careful not to deform the tubes when pushing SST.

iii. Pull SST slightly and push the release lever, then remove the piping clamp with SST.

iv. Remove the piping clamp from SST.

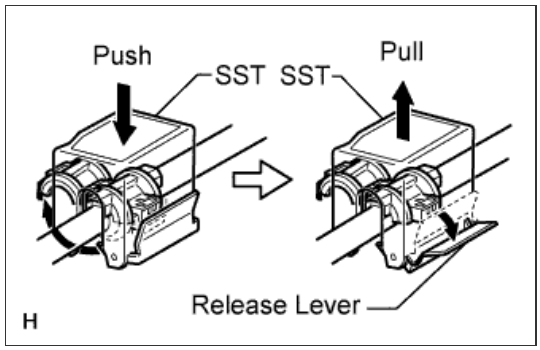

c. Disconnect the hose and accessory from the liquid tube to remove it.


NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

d. Remove the 2 O-rings from the air conditioner hose and accessory.

17. REMOVE AIR CONDITIONING UNIT

a. Remove the 2 nuts and air conditioning unit.

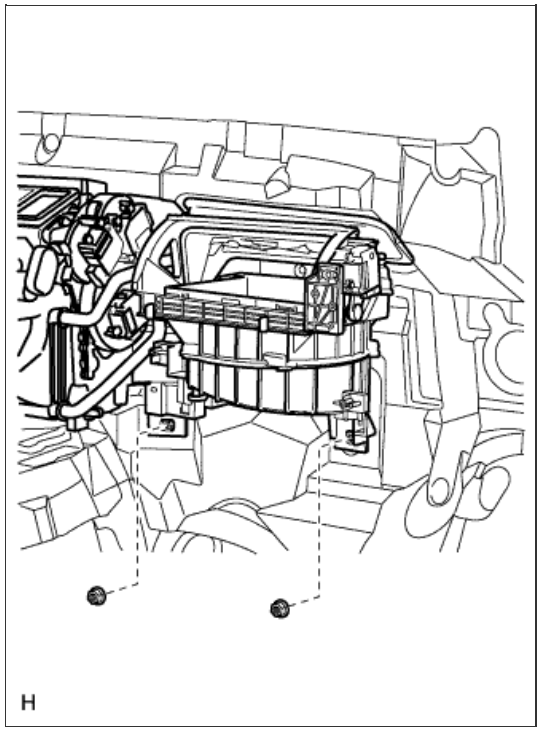


for Preparation Click here

1. REMOVE BLOWER ASSEMBLY

a. Remove the screw.


b. Disconnect the connector and clamp.

c. Detach the claw and remove the blower unit.

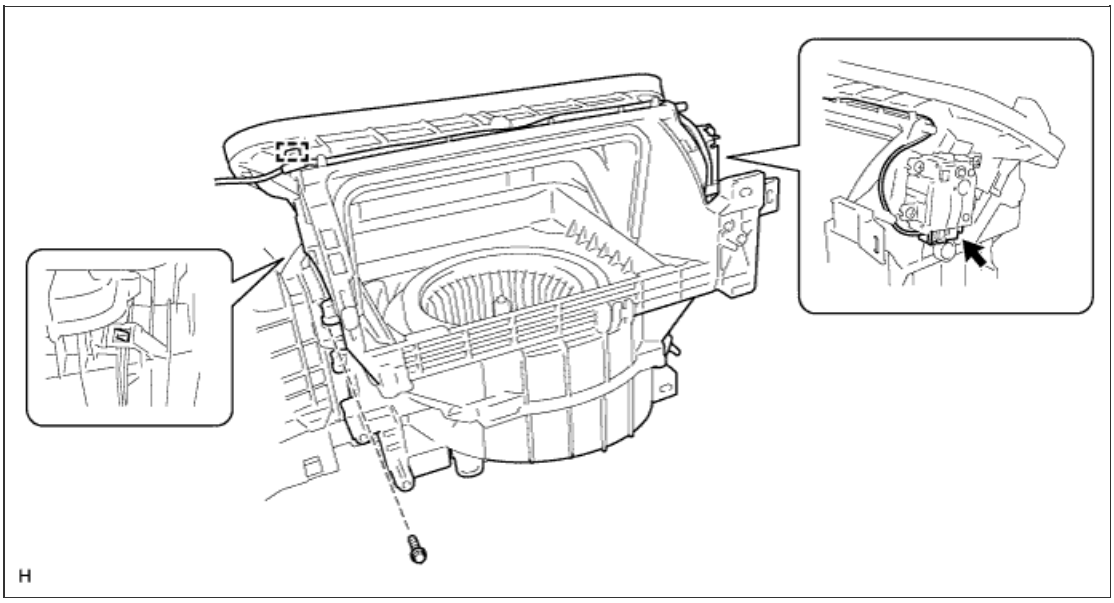


2. REMOVE NO. 4 AIR DUCT SUB-ASSEMBLY

a. Remove the screw and duct.

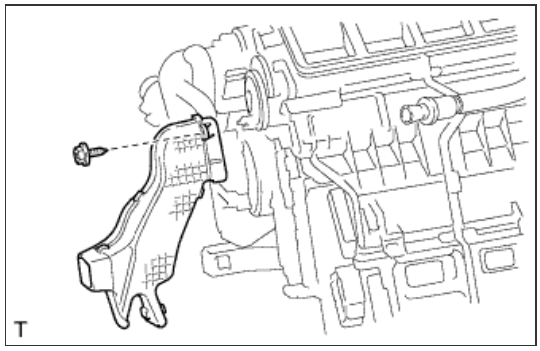


3. REMOVE NO. 5 AIR DUCT SUB-ASSEMBLY

a. Remove the screw and duct.

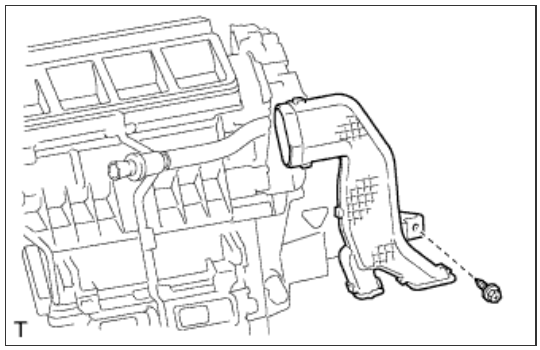


4. REMOVE ASPIRATOR

a. Detach the 2 claws and remove the aspirator.

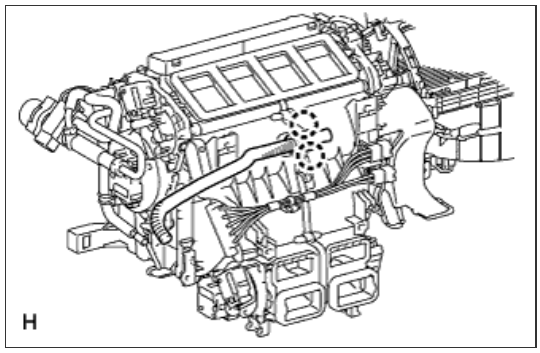

5. REMOVE COOL BOX LIQUID TUBE (w/ Cool Box)

a. Detach the clamp.

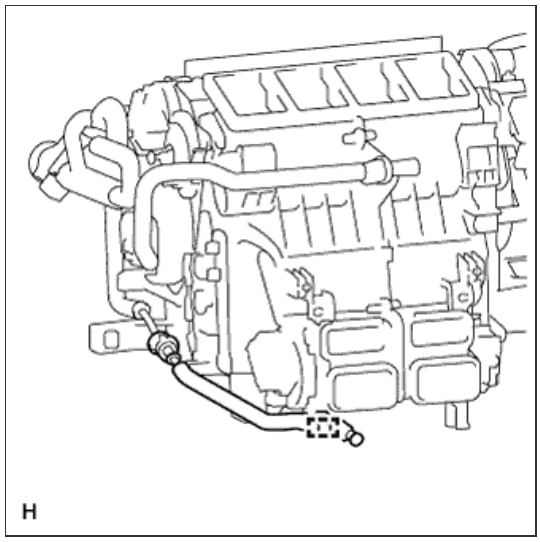


b. Using SST, remove the piping clamp.

SST
09870-00025

i. Attach SST to the piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST by referring to the illustration on the caution label.

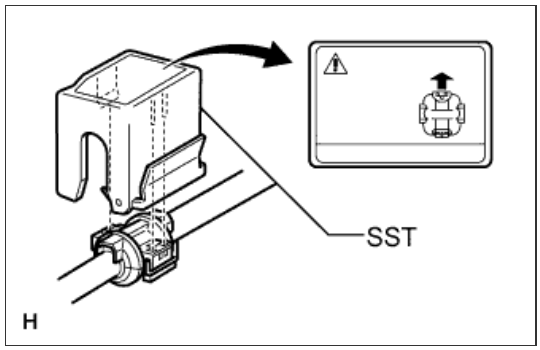


ii. Push down SST and release the clamp lock.

NOTICE:

Be careful not to deform the tubes when pushing SST.

iii. Pull SST slightly and push the release lever, then remove the piping clamp with SST.

iv. Remove the piping clamp from SST.

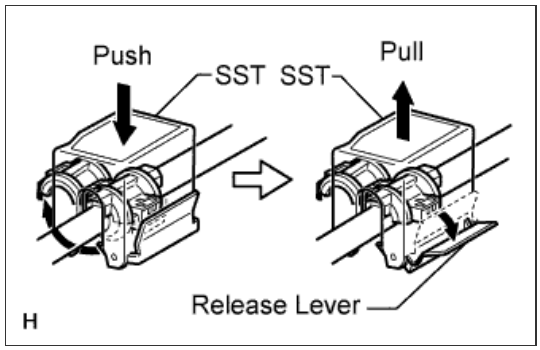

c. Disconnect the tube.

NOTICE:


Cap the open fittings immediately to keep moisture or dirt out of the system.

d. Remove the 2 O-rings from the tube.

6. REMOVE QUICK HEATER ASSEMBLY (w/ PTC Heater)

a. Detach the 3 clamps.


b. Remove the 2 screws and quick heater.

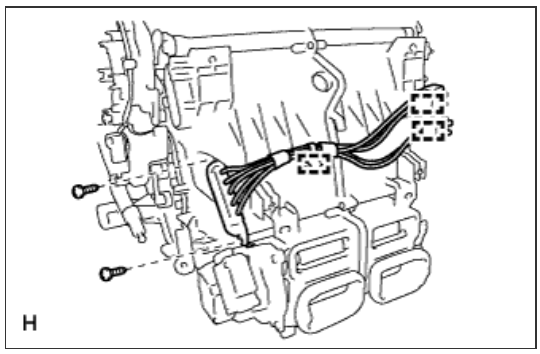

7. REMOVE AIR CONDITIONER HARNESS

a. Disconnect the connectors.


b. Detach the clamps and remove the harness.

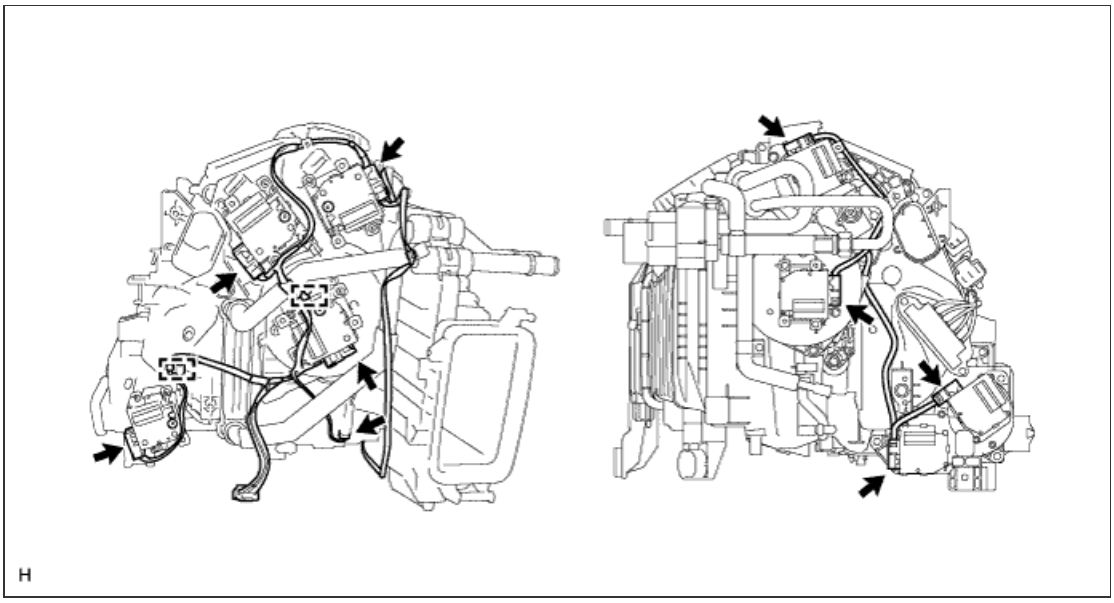

8. REMOVE AIR CONDITIONING RADIATOR ASSEMBLY


a. Remove the screw and radiator bracket.

b. Remove the radiator.

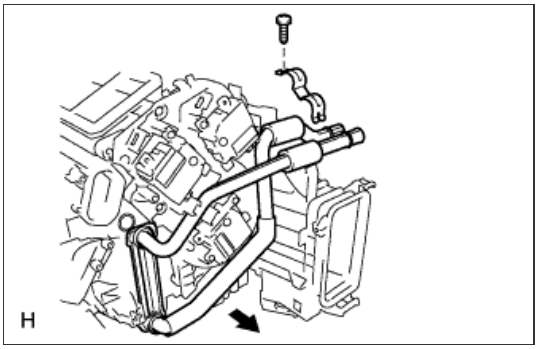


9. REMOVE COOLER EXPANSION VALVE (w/ Cool Box)


a. Remove the packing.

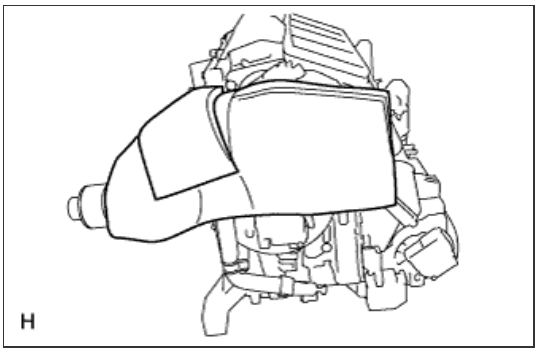

b. Remove the butyl tape.

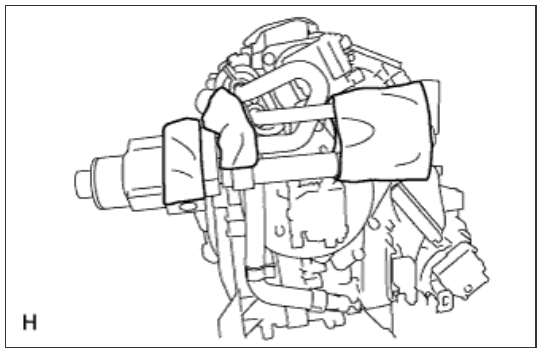


c. Using a 4 mm hexagon wrench, remove the hexagon bolt, screw and bracket.

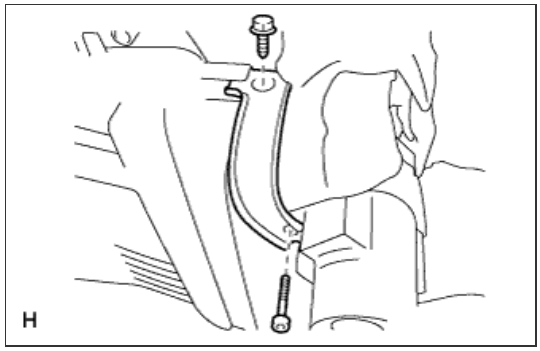

d. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts and No. 1 connector tube.

e. Remove the 2 O-rings from the No. 1 connector tube.

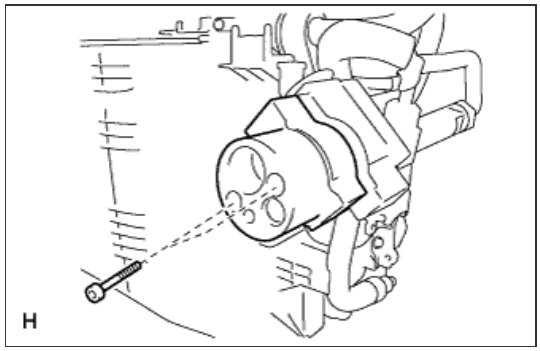

f. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts, No. 2 connector tube, expansion valve and No. 3 connector tube.

g. Remove the 2 O-rings from the No. 2 connector tube.




10. REMOVE AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY (w/ Cool Box)

a. Remove the screw and bracket.


b. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts and air conditioner tube and accessory assembly.

c. Remove the 2 O-rings from the air conditioner tube and accessory assembly.

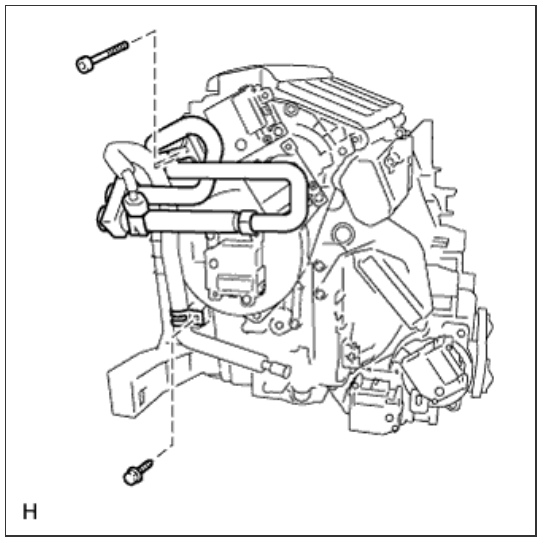

11. REMOVE COOLER EXPANSION VALVE (w/o Cool Box)


a. Remove the packing.

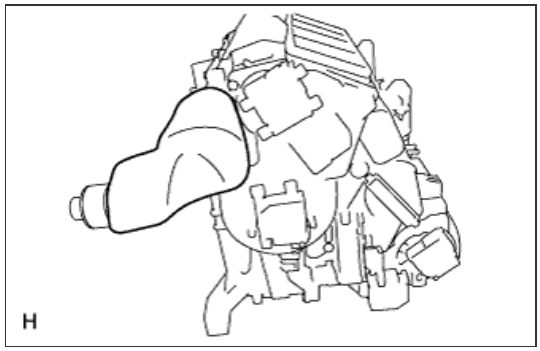

b. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts, air conditioner tube and accessory assembly and expansion valve.


c. Remove the 2 O-rings from the air conditioner tube and accessory assembly.

d. Remove the 2 O-rings from the expansion valve.

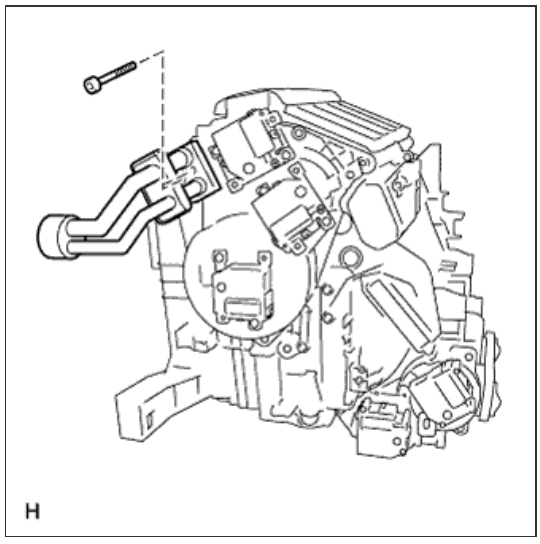


12. REMOVE REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH (for 4 Zone Type)

a. Remove the 3 screws and servo motor.

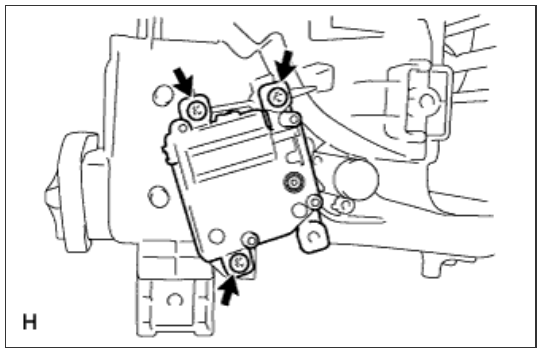

13. REMOVE SERVO MOTOR

a. Remove the 4 screws and servo motor unit.

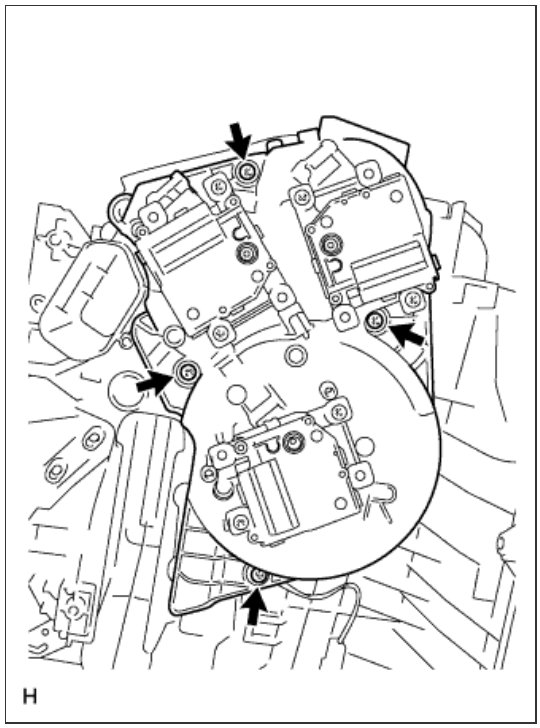


b. for 4 Zone Type:
Remove the front mode control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

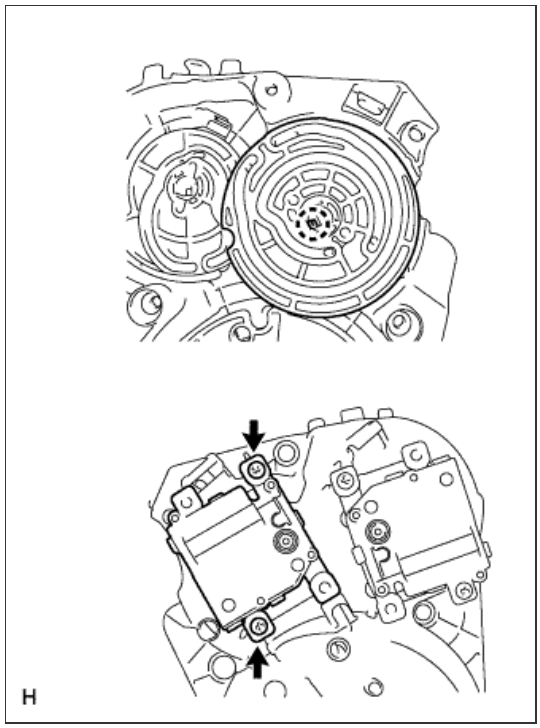


c. Remove the control bypass damper control servo motor.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

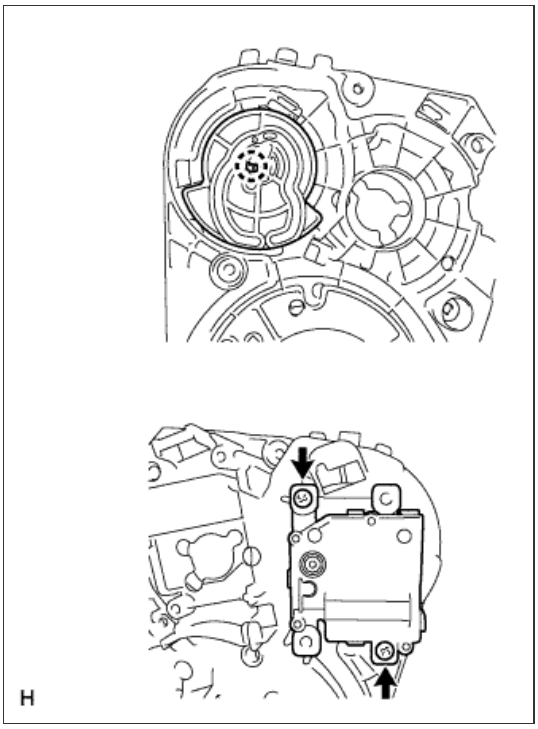


d. Remove the front air mix damper control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.


NOTICE:

Be careful not to damage the claw of the plate.

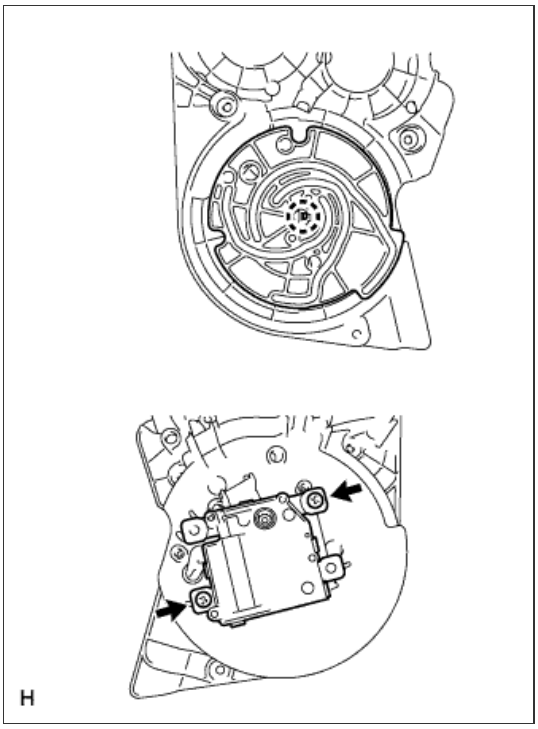

14. REMOVE SERVO MOTOR


a. Remove the 4 screws and servo motor unit.

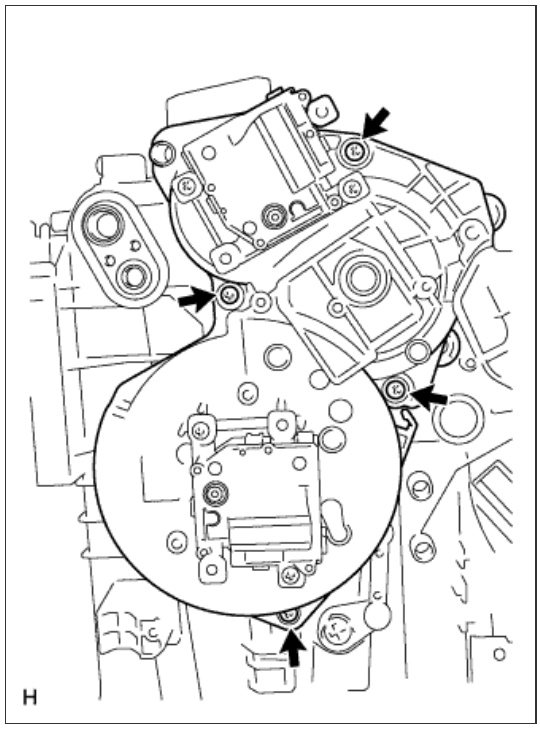

b. Detach the 3 claws and remove the plate.

NOTICE:

Be careful not to damage the claw of the plate.

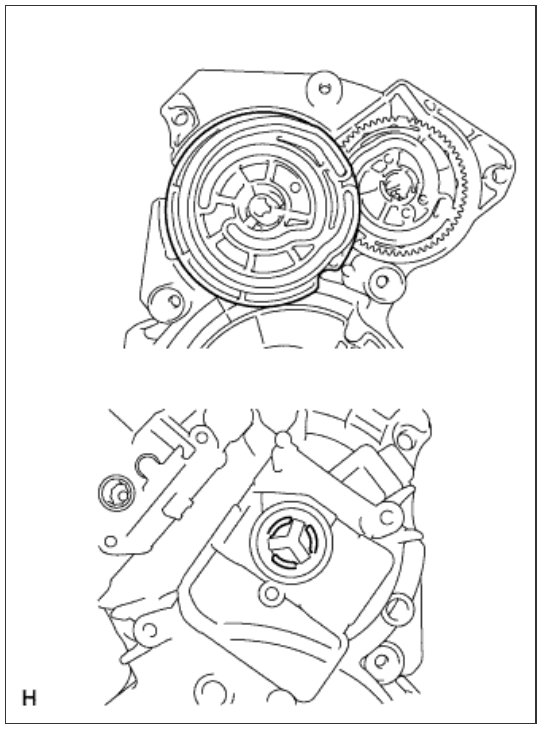


c. Remove the front mode control servo motor LH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

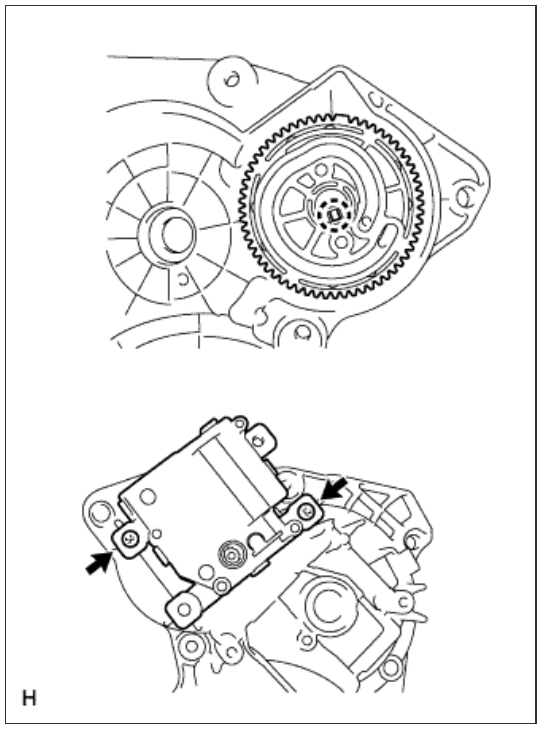


d. Remove the front air mix damper control servo motor LH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.


NOTICE:

Be careful not to damage the claw of the plate.

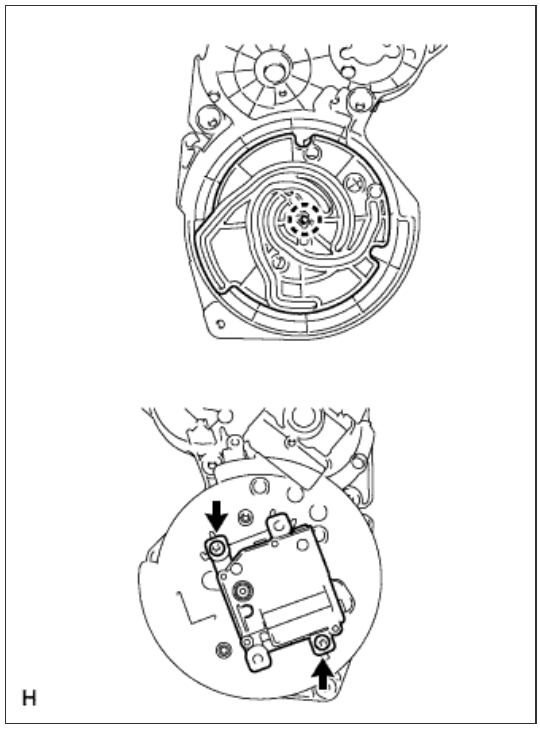


15. REMOVE SERVO MOTOR

a. Remove the 3 screws and servo motor unit.

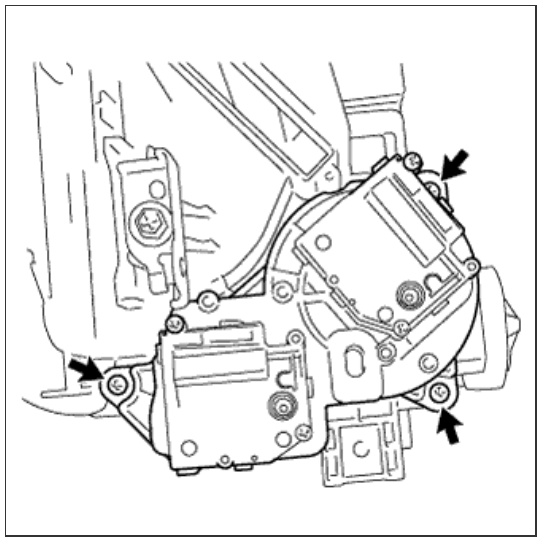

b. Remove the rear mode control servo motor.

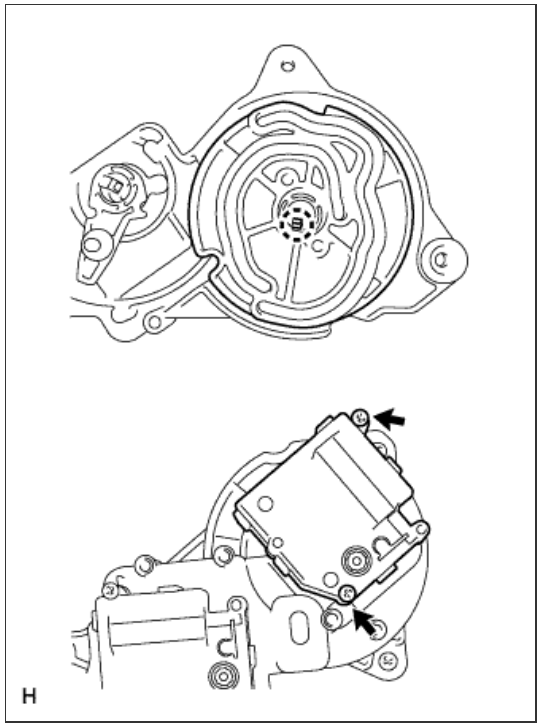

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.


c. Remove the rear air mix damper control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the lever and servo motor.

NOTICE:

Be careful not to damage the claw of the lever.

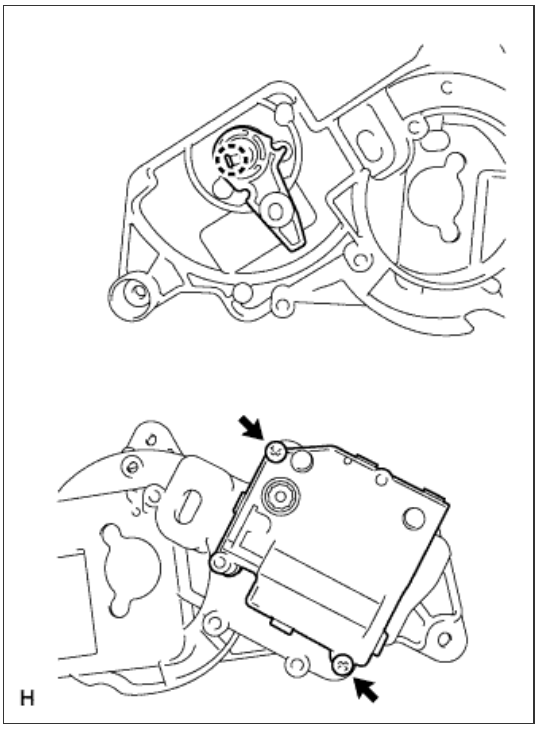


16. REMOVE NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY

a. Remove the 7 screws.

b. Detach the 6 claws and remove the unit case.

c. Remove the evaporator.

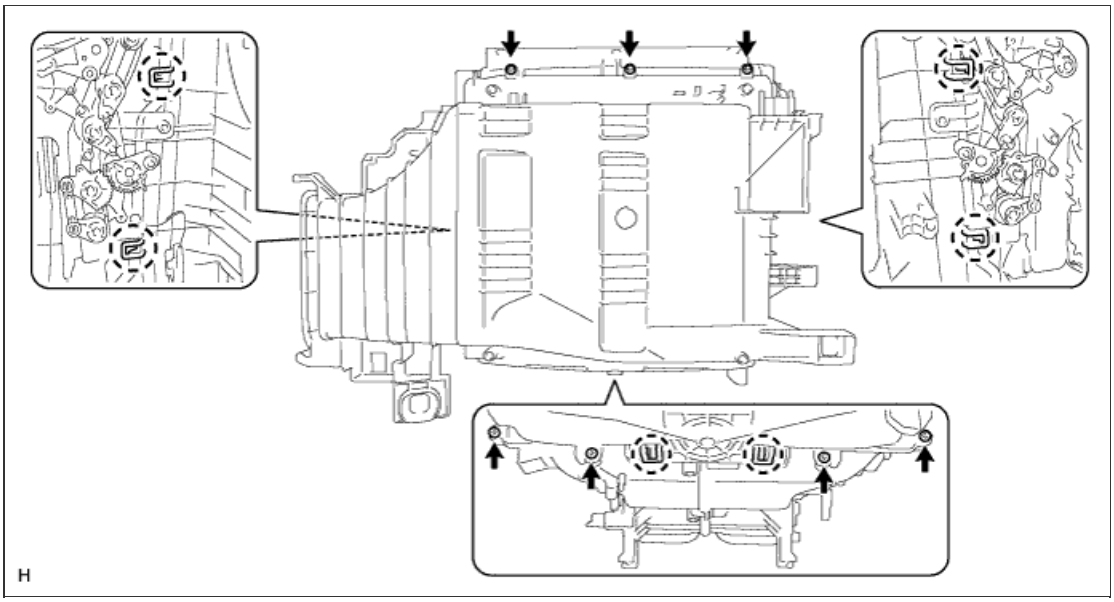

17. REMOVE FRONT EVAPORATOR TEMPERATURE SENSOR

for Preparation Click here

1. INSTALL FRONT EVAPORATOR TEMPERATURE SENSOR


NOTICE:

If reusing the evaporator, do not insert the sensor into a location where the sensor was previously inserted.

a. Insert the sensor to a location that is 1 fin to the right or left of its previous location.

Standard Dimension:

Area	Specified Condition
a	50 mm (1.97 in.)
b	34.3 mm (1.35 in.)
c	20.9 mm (1.97 in.)

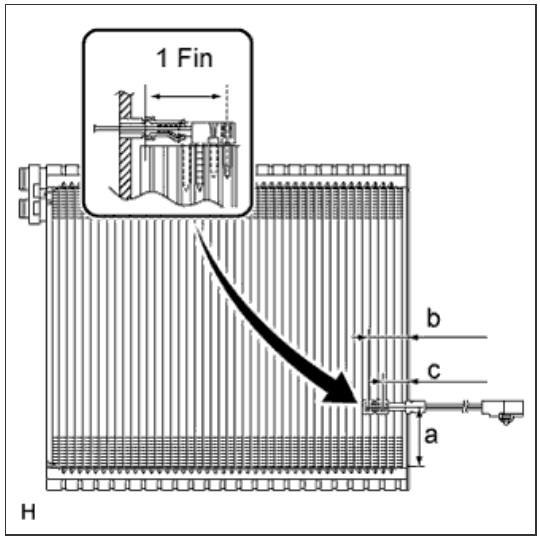


2. INSTALL NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY

a. Install the evaporator.

b. Attach the 6 claws to install the unit case.

c. Install the 7 screws.

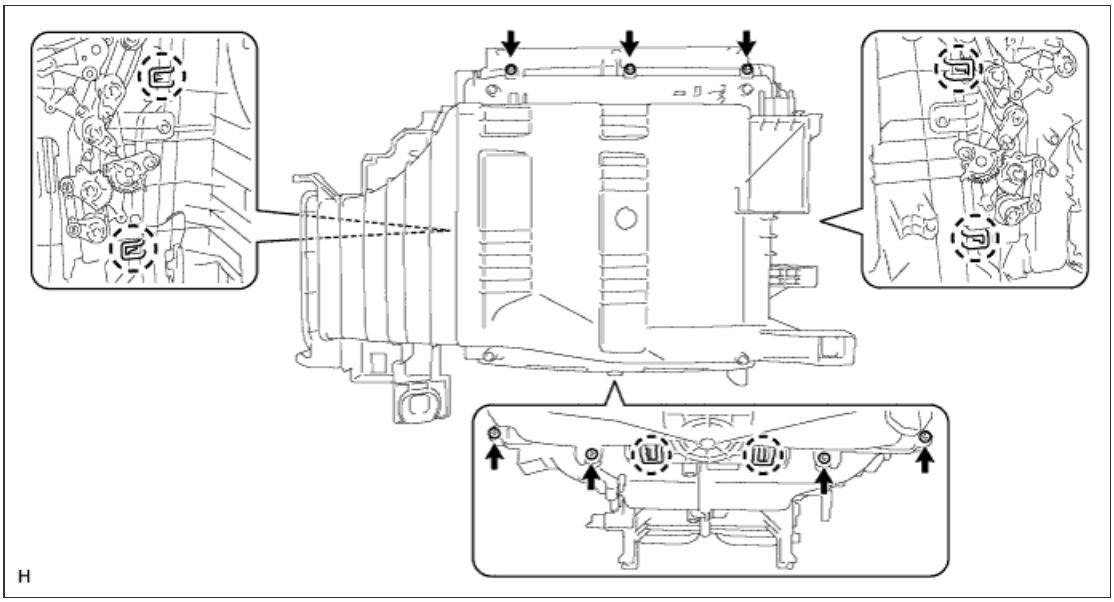


3. INSTALL SERVO MOTOR

a. Install the rear air mix damper control servo motor RH.

i. Attach the claw to install the lever and servo motor.

ii. Install the 2 screws.

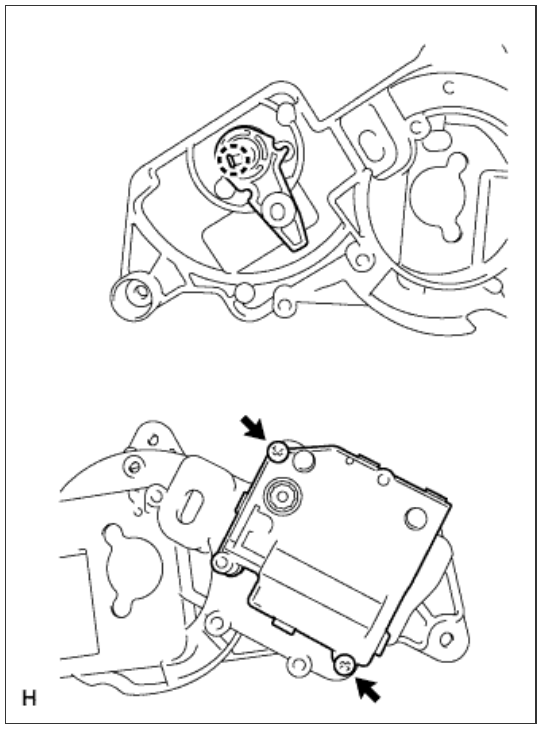


b. Install the rear mode control servo motor.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

c. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

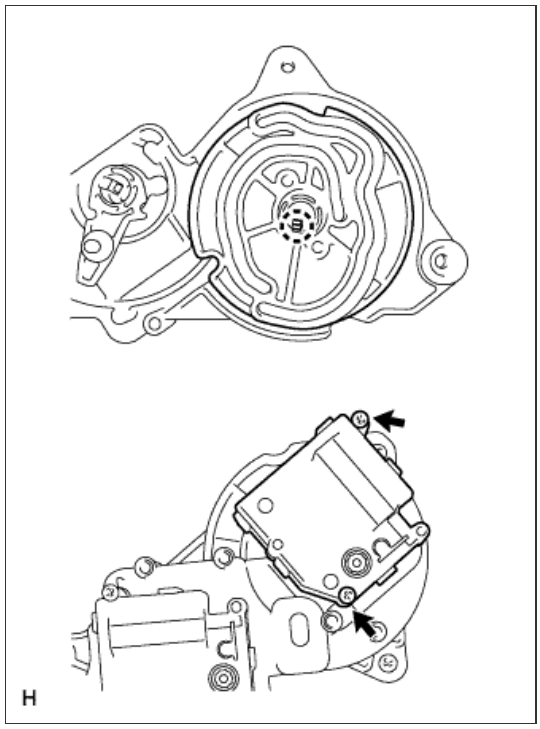

d. Install the 3 screws.

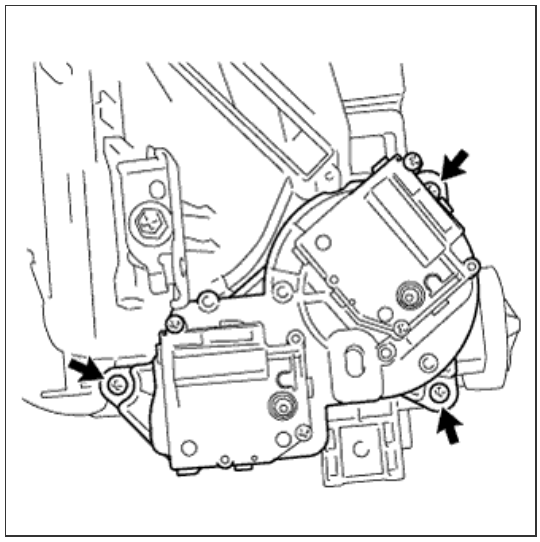


4. INSTALL SERVO MOTOR

a. Install the front air mix damper control servo motor LH.

i. Attach the claw to install the plate and servo motor.


ii. Install the 2 screws.

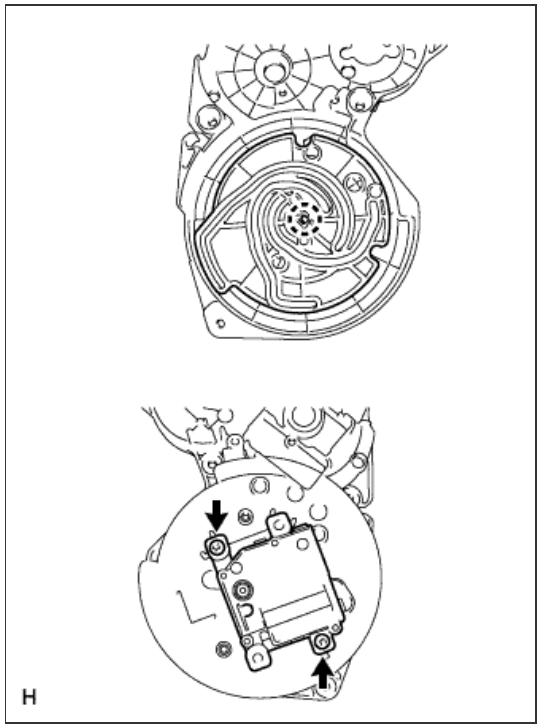

b. Install the front mode control servo motor LH.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

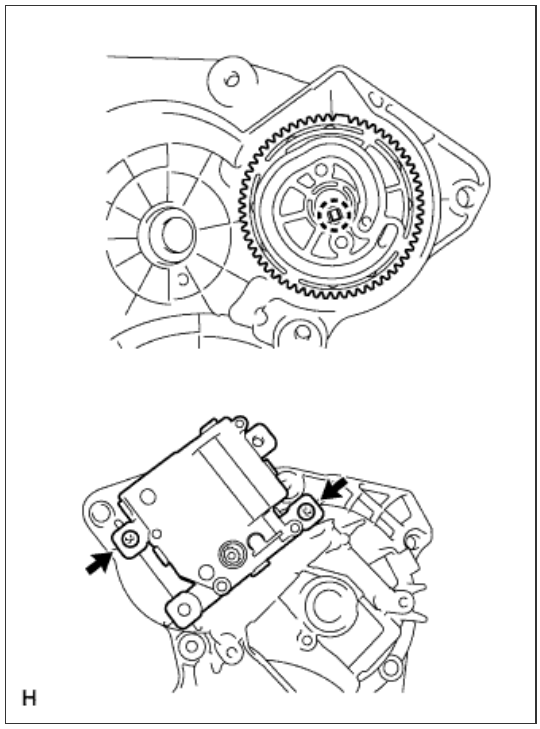


c. Attach the 3 claws to install the plate.

d. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

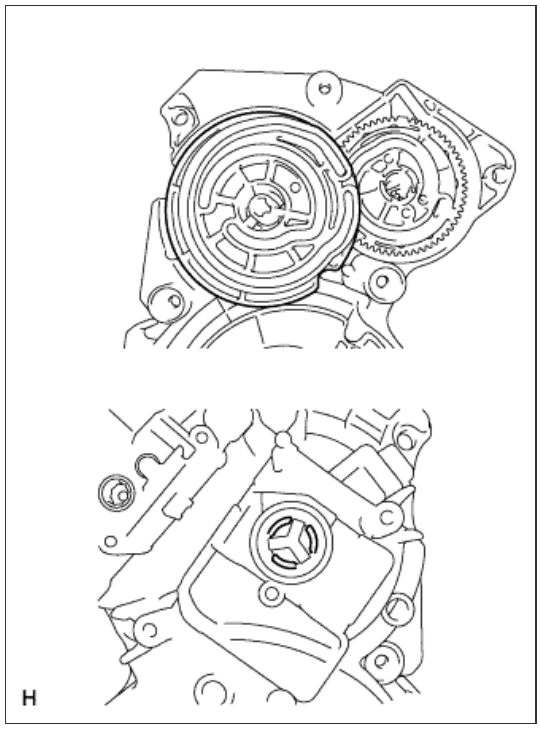


e. Install the 4 screws.

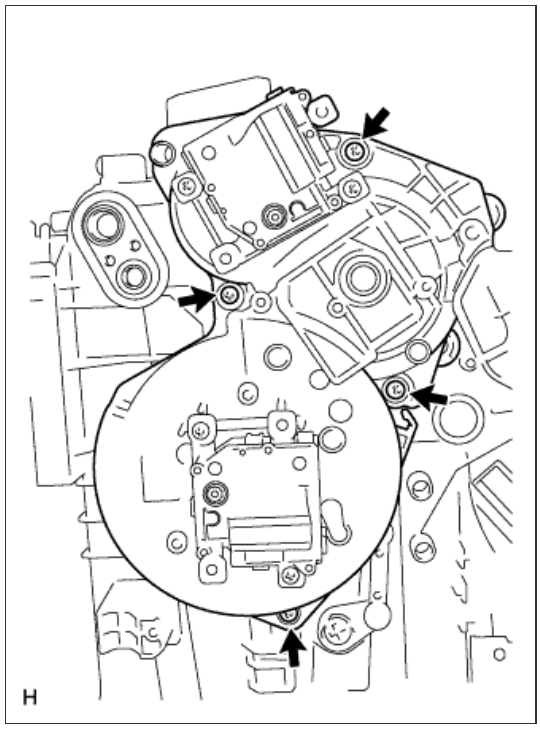

5. INSTALL SERVO MOTOR

a. Install the front air mix damper control servo motor RH.

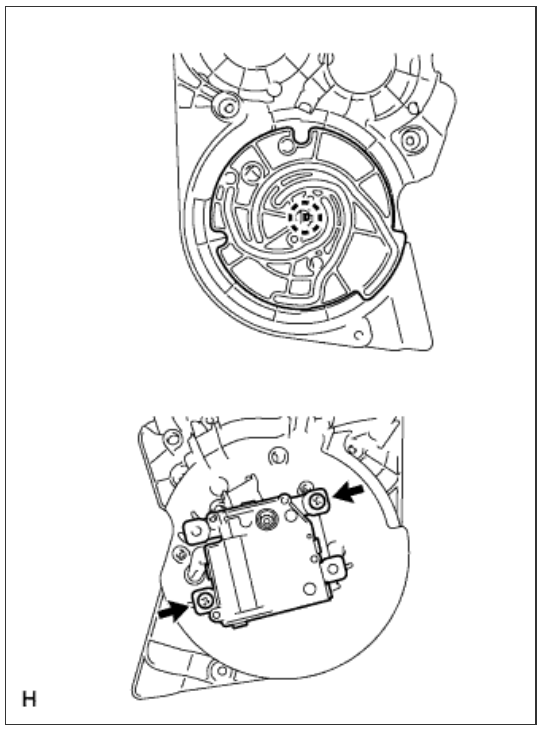


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

b. Install the control air bypass damper control servo motor.

i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

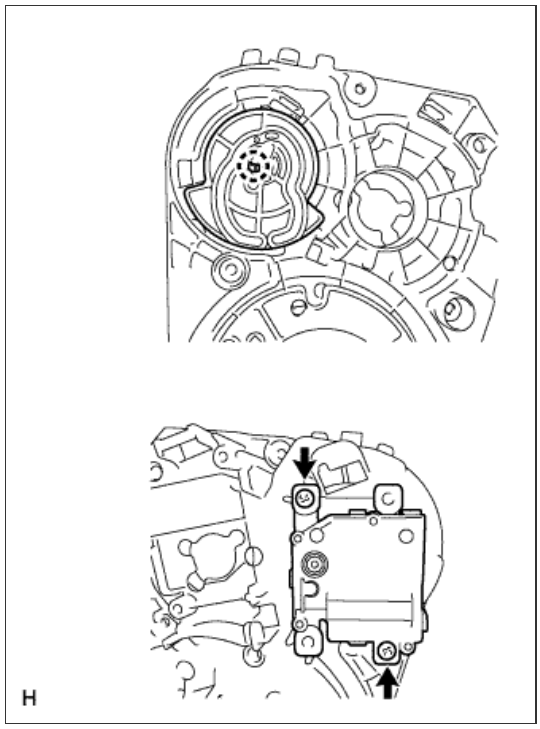


c. for 4 Zone Type:
Install the front mode control servo motor RH.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

d. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

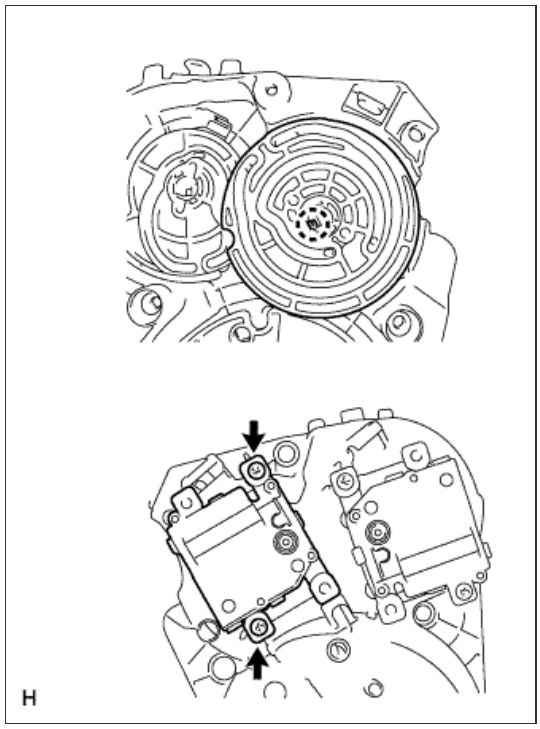


e. Install the 4 screws.

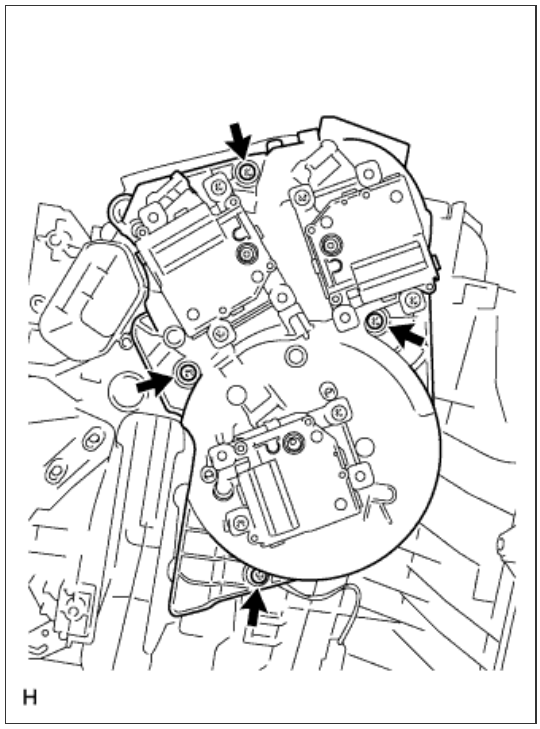

6. INSTALL REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH (for 4 Zone Type)

a. Install the servo motor with the 3 screws.

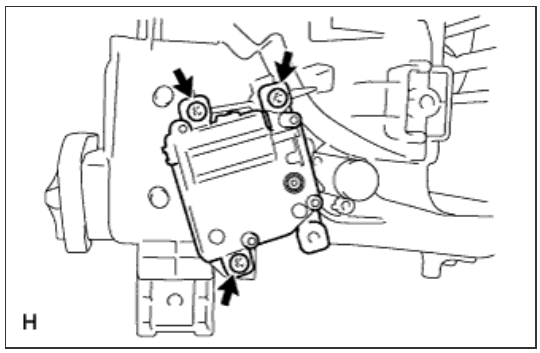

7. INSTALL COOLER EXPANSION VALVE (w/o Cool Box)

a. Sufficiently apply compressor oil to 4 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or e ivalent


b. Install the 2 O-rings to the cooler evaporator.

c. Install the 2 O-rings to the air conditioner tube and accessory assembly.


d. Install the cooler expansion valve and air conditioner tube and accessory assembly to the evaporator.

e. Using a 4 mm hexagon wrench, install the 2 bolts.

Tor e:
3.5 N*m 36 k f*cm 31 in.*lbf

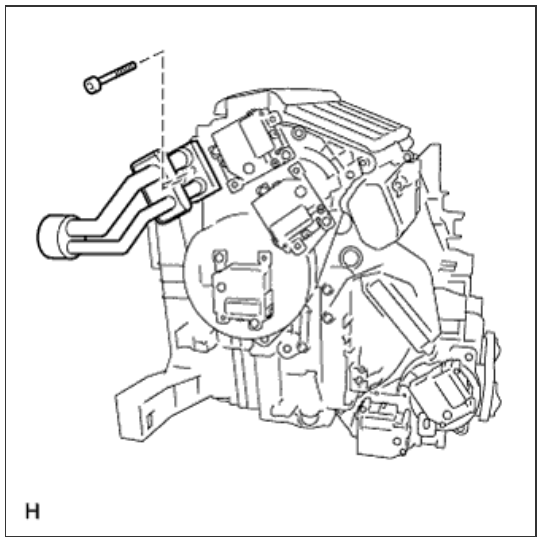

f. Install new packing.

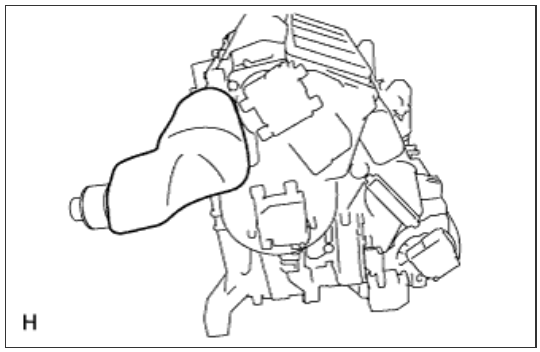

8. INSTALL AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY (w/ Cool Box)

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or e ivalent


b. Install the 2 O-rings to the air conditioner tube and accessory assembly.

c. Install the air conditioner tube and accessory assembly to the evaporator.

d. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.

Tor e:
3.5 N*m 36 k f*cm 31 in.*lbf

e. Install the bracket with the screw.

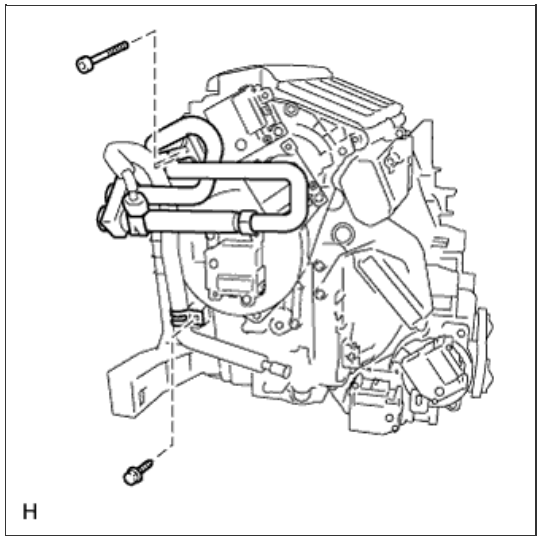

9. INSTALL COOLER EXPANSION VALVE (w/ Cool Box)

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or e ivalent

b. Install the 2 O-rings to the No. 2 connector tube.

c. Install the No. 2 connector tube, expansion valve and No. 3 connector tube.

d. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.

Tor e:
3.5 N*m 36 k f*cm 31 in.*lbf



e. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.


Compressor oil:
ND-OIL 8 or e ivalent

f. Install the 2 O-rings to the No. 1 connector tube.


. Install the No. 1 connector tube.

h. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.


Tor e:
3.5 N*m 36 k f*cm 31 in.*lbf

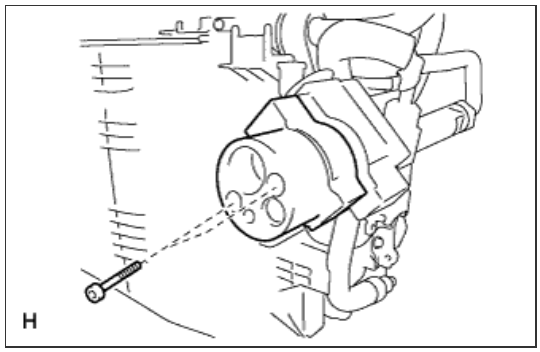


i. Using a 4 mm hexagon wrench, install the bracket with the hexagon bolt and screw.

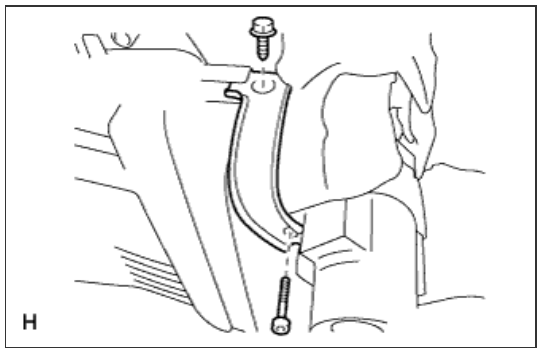

. Install new butyl tape.

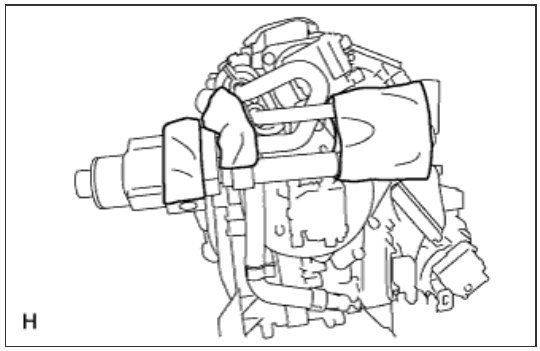


k. Install new packing.

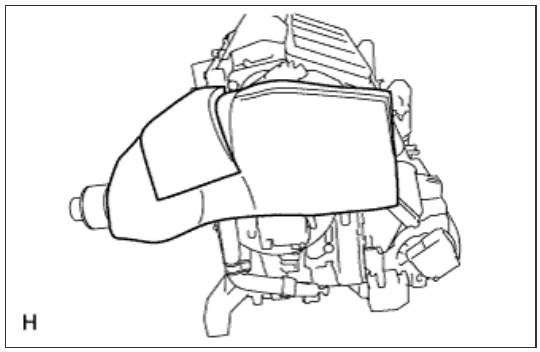

1 . INSTALL AIR CONDITIONING RADIATOR ASSEMBLY

a. Install the radiator.


b. Install the bracket with the screw.

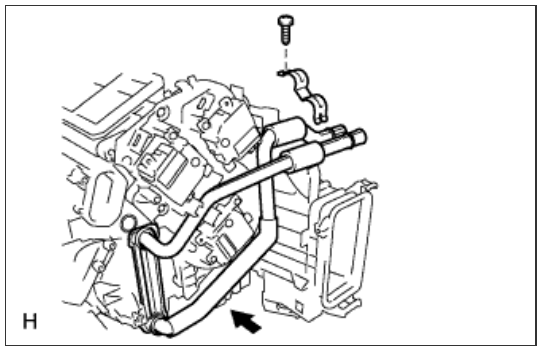

11. INSTALL AIR CONDITIONER HARNESS

a. Attach the clamps to install the harness.


b. Connect the connectors.

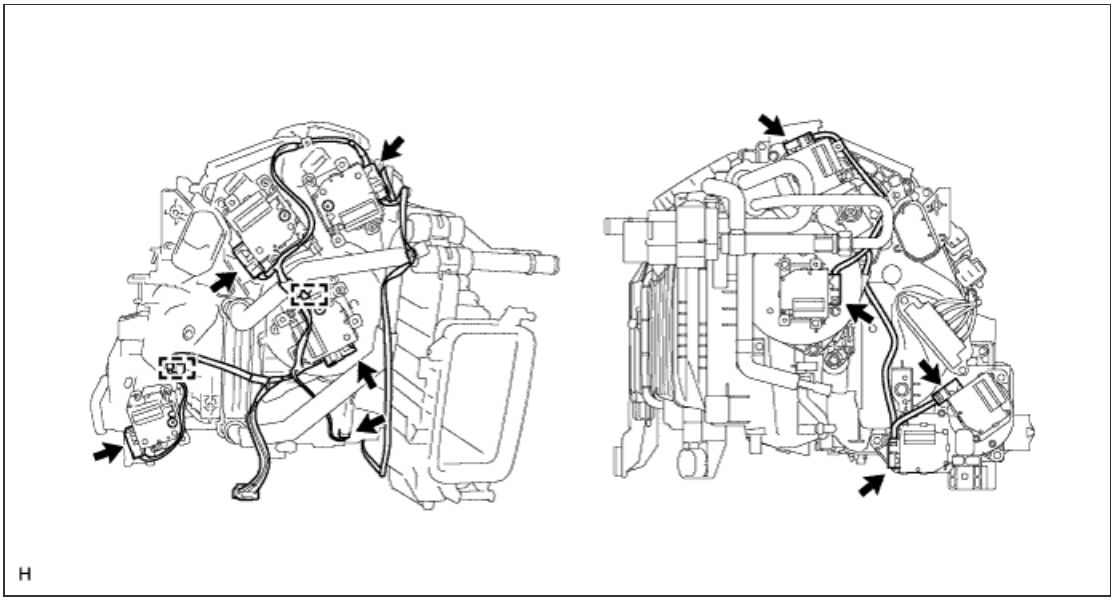

12. INSTALL UIC HEATER ASSEMBLY (w/ PTC Heater)

a. Install the quick heater with the 2 screws.

b. Attach the 3 clamps.

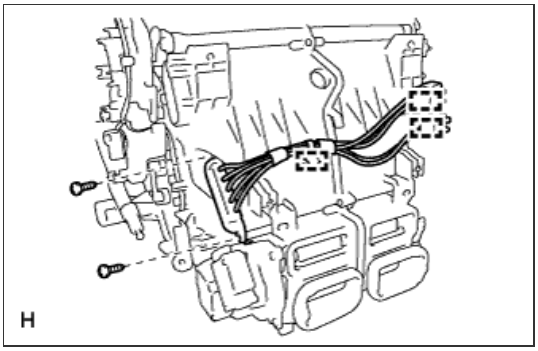

13. INSTALL COOL BOX LI UID TUBE (w/ Cool Box)


a. Lubricate 2 new O-rings with compressor oil and install them to the tube.

Compressor oil:
ND-OIL 8 or e ivalent


b. Connect the liquid tube with the piping clamp.

NOTICE:

After connection, check the claw engagement of the piping clamp.

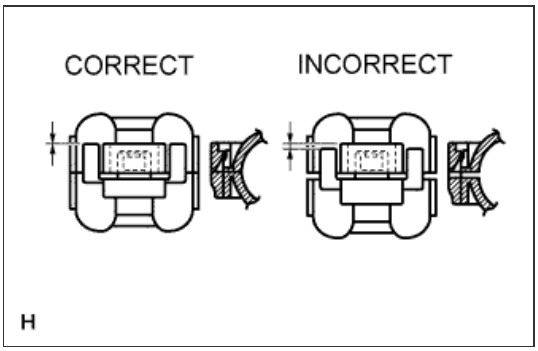


c. Attach the clamp.

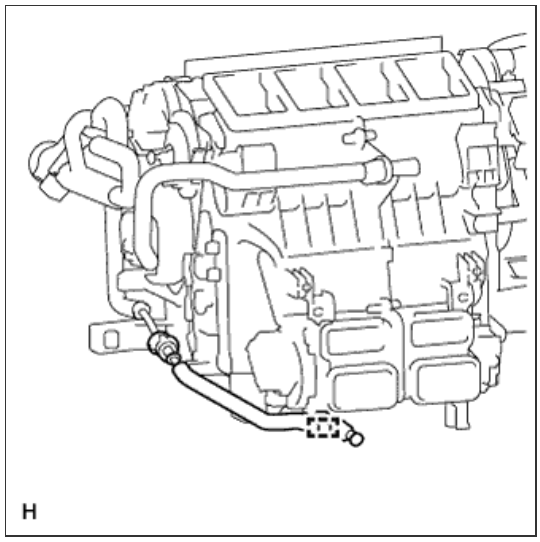


14. INSTALL ASPIRATOR

a. Attach the 2 claws to install the aspirator.

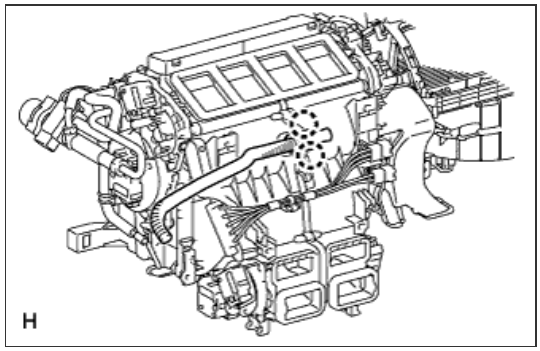


15. INSTALL NO. 4 AIR DUCT SUB-ASSEMBLY

a. Install the duct with the screw.

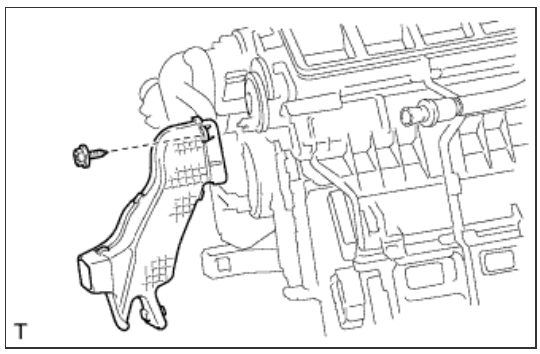


16. INSTALL NO. 5 AIR DUCT SUB-ASSEMBLY

a. Install the duct with the screw.

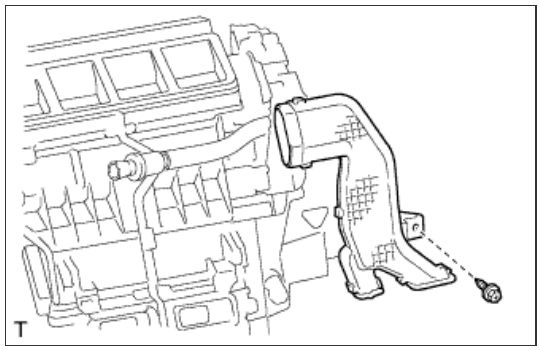

17. INSTALL BLO ER ASSEMBLY

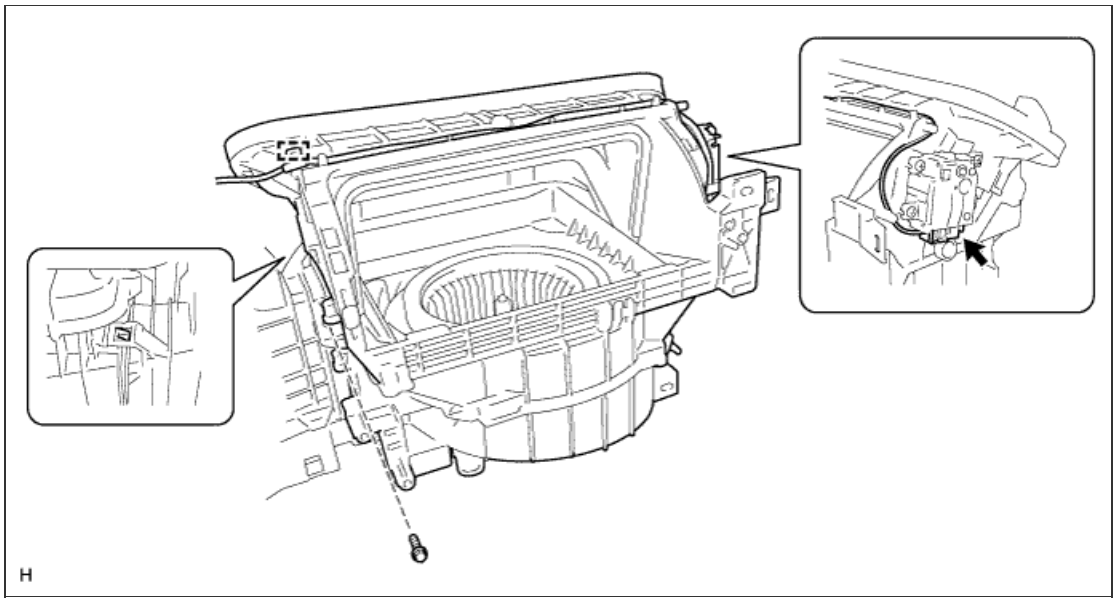

a. Attach the claw to install the blower unit.

b. Connect the connector and clamp.


c. Install the screw.

for Preparation Click here

1. INSTALL AIR CONDITIONING UNIT ASSEMBLY

a. Install the air conditioning unit with the 2 nuts.


Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

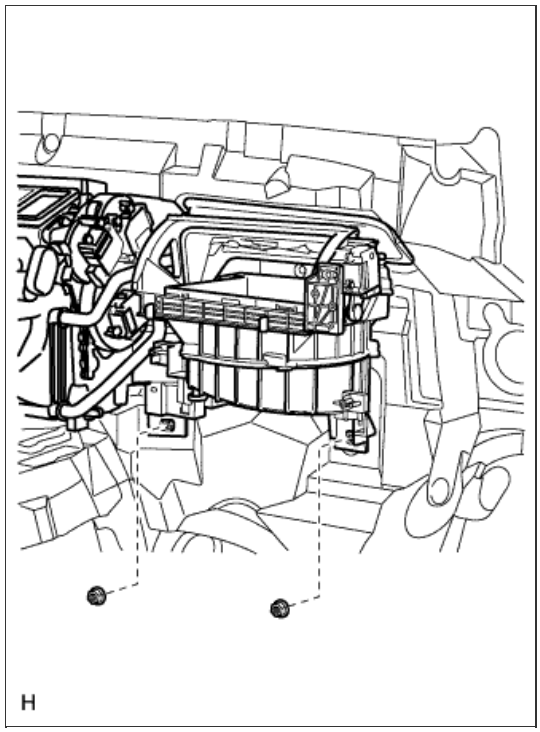

2. INSTALL AIR CONDITIONING HOSE AND ACCESSORY (w/ Cool Box)

a. Lubricate 2 new O-rings with compressor oil and install them to the air conditioning hose and accessory.

Compressor oil:
ND-OIL 8 or equivalent

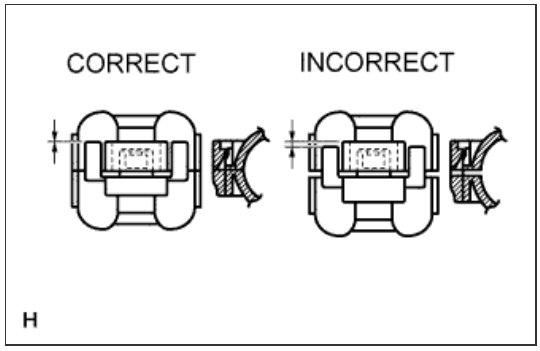


b. Install the air conditioning hose and accessory with the piping clamp.

NOTICE:

After connection, check the claw engagement of the piping clamp.

c. Install the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

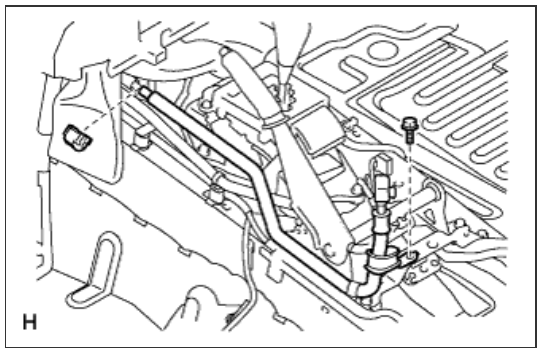

. INSTALL INSTRUMENT PANEL REINFORCEMENT ASSEMBLY

a. Install the instrument panel reinforcement.

i. Install the instrument panel reinforcement with the 7 bolts and screw.

Torque:
for bolt:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }
for screw:
6.0 N*m{ 61 kgf*cm , 53 in.*lbf }

ii. for Passenger Side:
Using a 12 mm hexagon wrench, install the 2 collars.

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

iii. for Passenger Side:
Using a T40 "TORX" socket, install the 2 "TORX" bolts.


Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

iv. for Passenger Side:
Install the 2 caps.


v. for Driver Side:
Install the 3 bolts.

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

vi. for Driver Side:
Install the 3 caps.

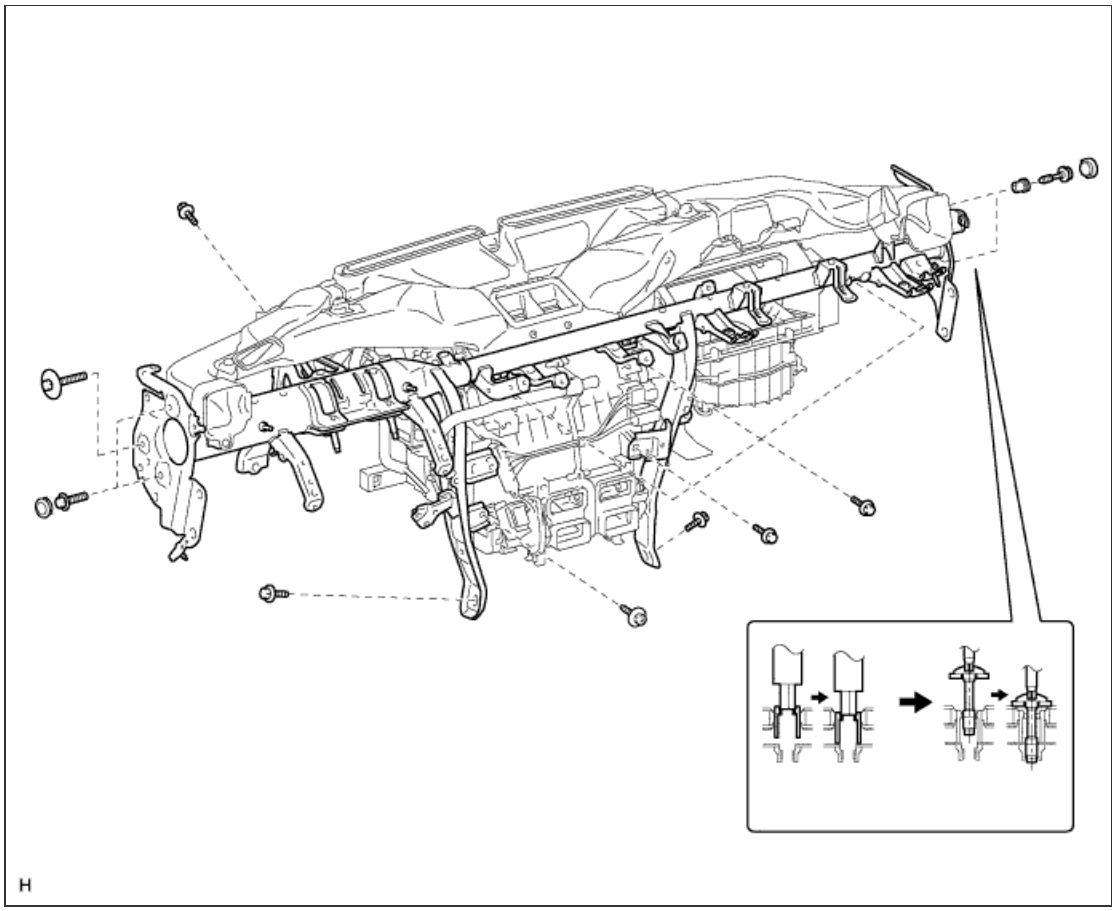


b. Attach the clamps and connectors to the wire harness.

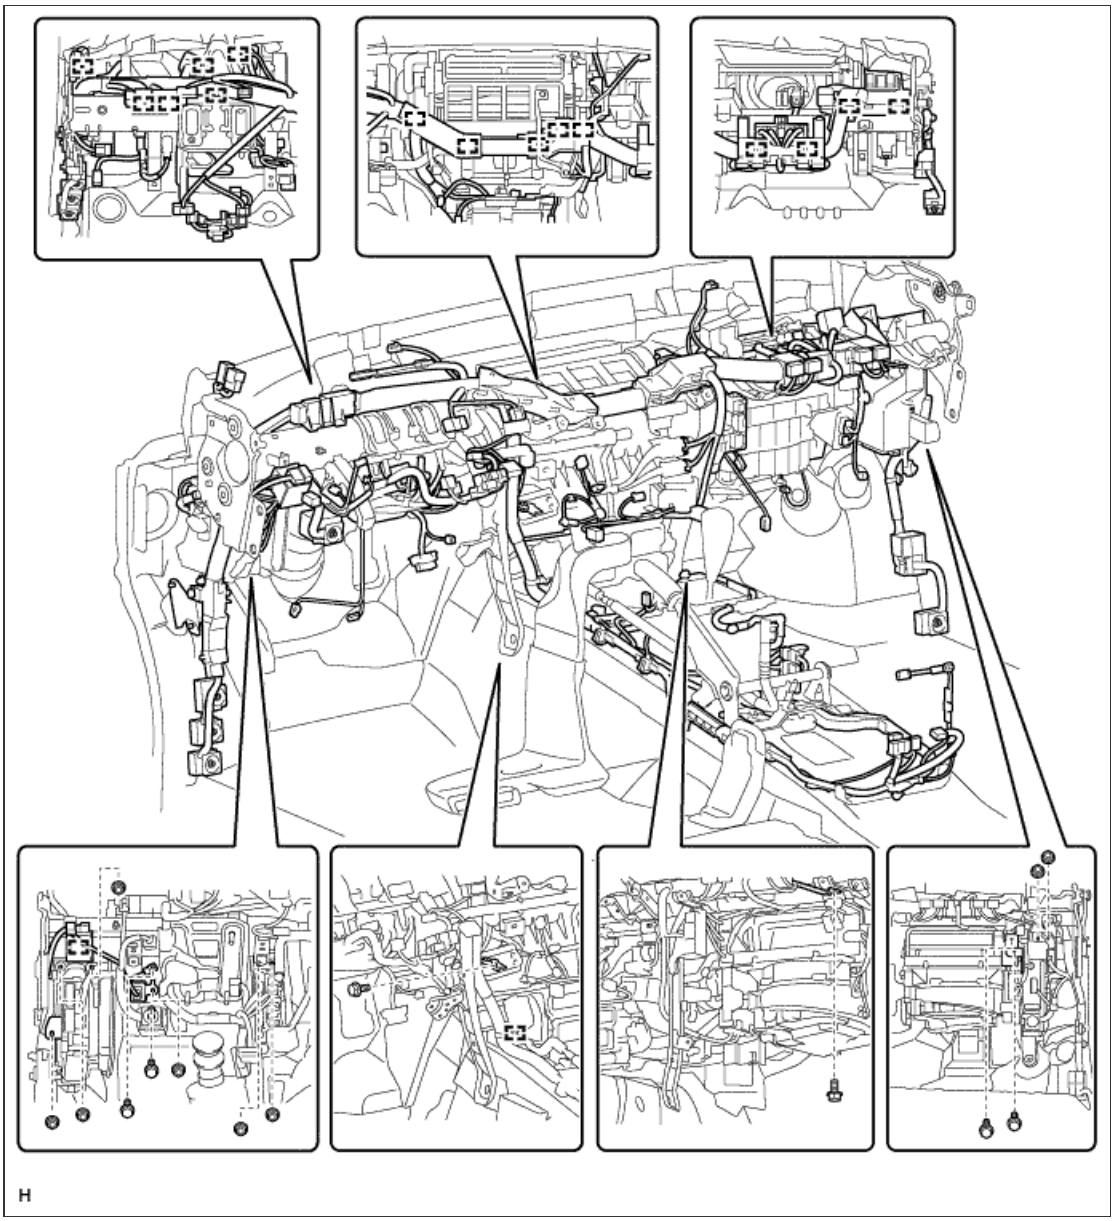

4. INSTALL HEATER TO REGISTER DUCT ASSEMBLY

a. Attach the 2 claws to install the duct.

b. Install the 3 clips.

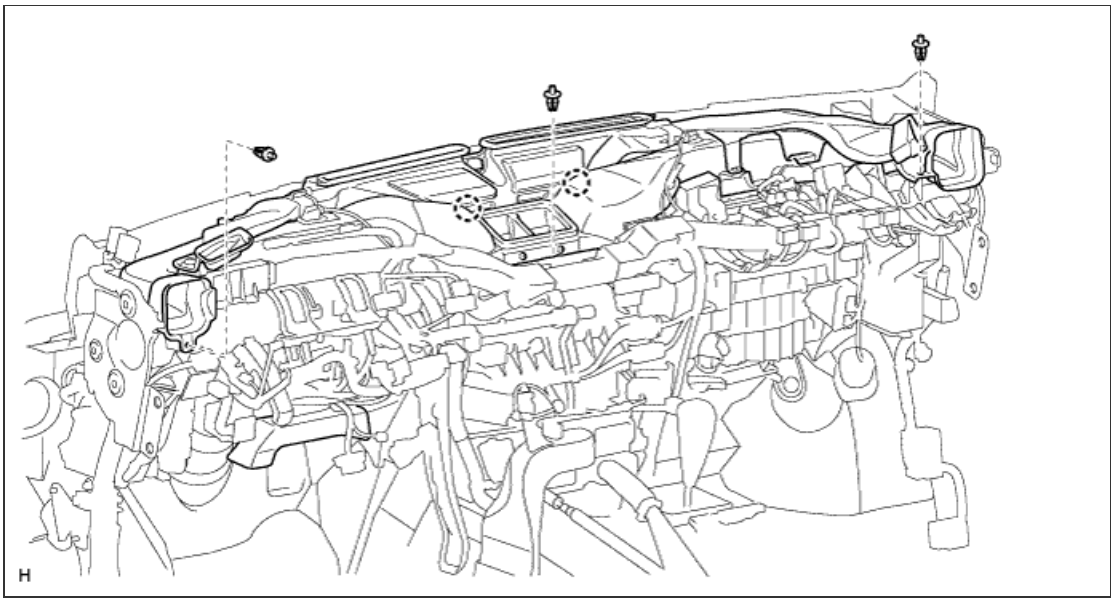

5. INSTALL STEERING COLUMN ASSEMBLY


a. for Power Tilt and Power Telescopic Steering Column:
Install the steering column (Click here).

b. for Manual Tilt and Manual Telescopic Steering Column:
Install the steering column (Click here).

6. INSTALL NO. AIR DUCT SUB-ASSEMBLY

a. Attach the 2 claws to install the duct.

b. Install the clip.

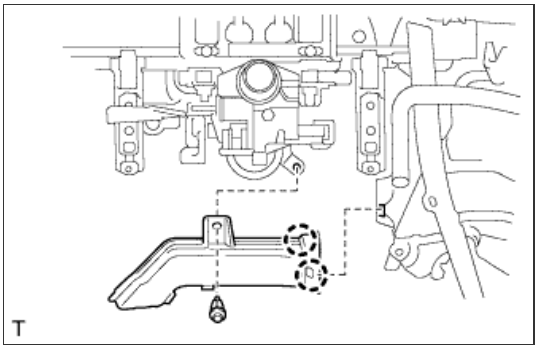

7. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY

a. Install the instrument panel (Click here).


8. INSTALL FRONT IPER MOTOR AND BRAC ET

a. Install the front wiper motor and bracket (Click here).

9. CONNECT HEATER ATER INLET HOSE AND HEATER ATER OUTLET HOSE

a. Connect the 2 heater water hoses.

b. Using pliers, grip the claws of the clips and slide the 2 clips.

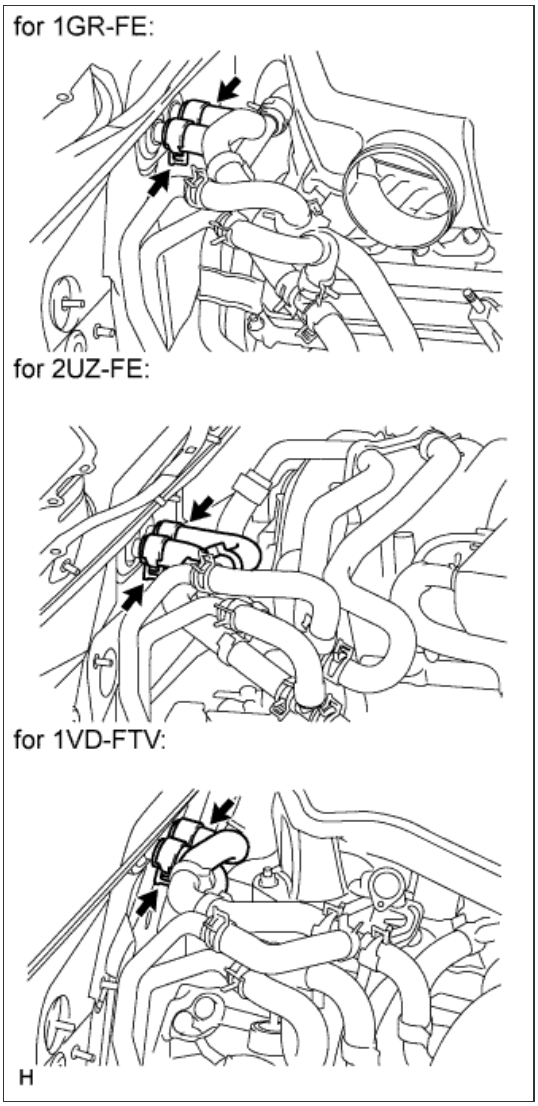

10. CONNECT AIR CONDITIONING TUBE ASSEMBLY

a. Remove the attached vinyl tape from the tubes.

b. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the air conditioning tube assembly.


Compressor oil:
ND-OIL 8 or equivalent

c. Install the 2 O-rings to the air conditioning tube assembly.

d. Connect the air conditioning tube assembly.

e. Attach the plate as shown in the illustration and install the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

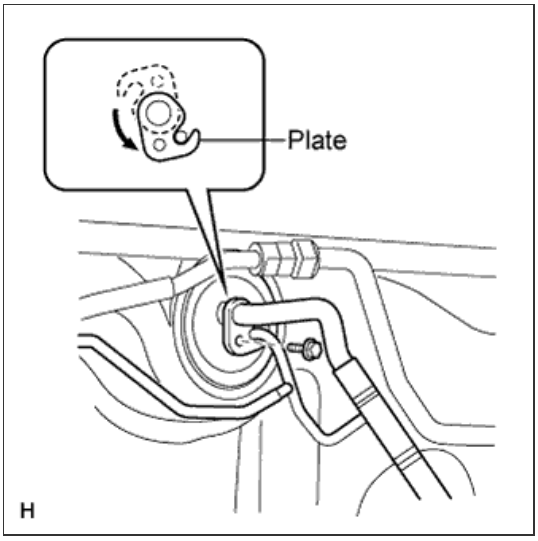

11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

12. CHEC SRS ARNING LIGHT

a. Check the SRS warning light (Click here).

1 . ADD ENGINE COOLANT

a. for 1VD-FTV:
Add engine coolant (Click here).

b. for 2UZ-FE:
Add engine coolant (Click here).

c. for 1GR-FE:
Add engine coolant (Click here).

14. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

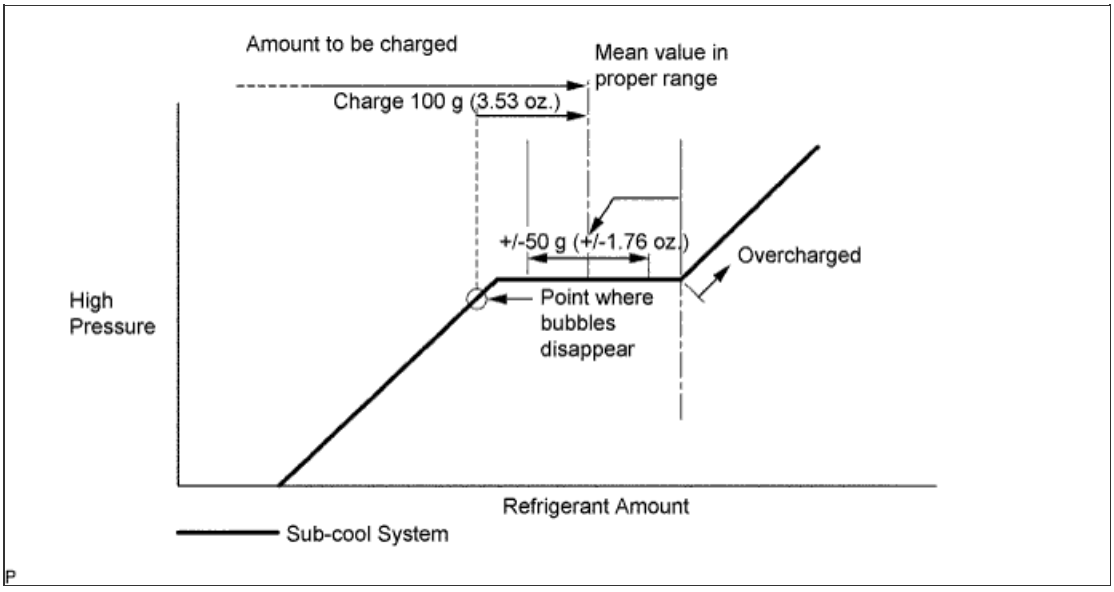

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**

- **Approximatel 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

15. WARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

16. CHECK FOR ENGINE COOLANT LEAK

a. for 1VD-FTV:
Check for engine coolant leaks (Click here).

b. for 2UZ-FE:
Check for engine coolant leaks (Click here).

c. for 1GR-FE:
Check for engine coolant leaks (Click here).

17. CHECK FOR REFRIGERANT GAS LEAK

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.


d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

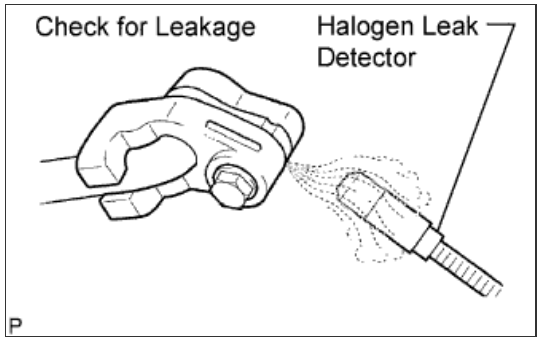

18. INSTALL UPPER RADIATOR SUPPORT SEAL


a. Install the radiator support seal with the 7 clips.

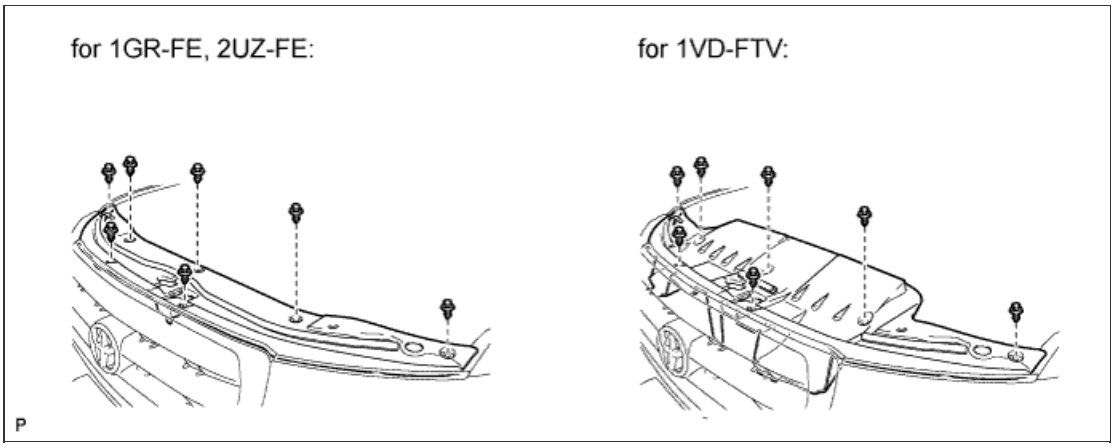

19. INSTALL NO. 1 ENGINE UNDER CO ER SUB-ASSEMBLY

a. Install the No. 1 engine under cover with the 10 bolts.

Torque:
29 N*m{ 296 kgf*cm , 21 ft.*lbf }

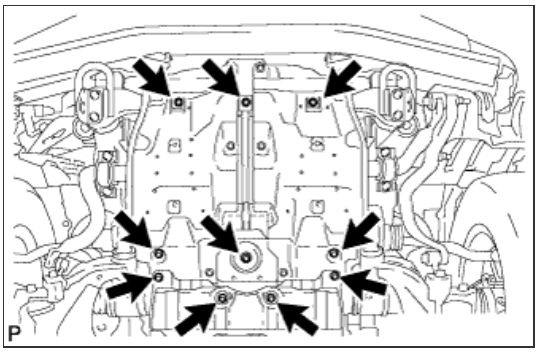

20. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Install the front fender splash shield (Click here).

b. w/ Winch:
Install the front fender splash shield (Click here).

21. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard:
Install the front fender splash shield (Click here).


b. w/ Winch:
Install the front fender splash shield (Click here).

for Preparation Click here

1. INSTALL AIR CONDITIONING UNIT ASSEMBLY

a. Install the air conditioning unit with the 2 nuts.


Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

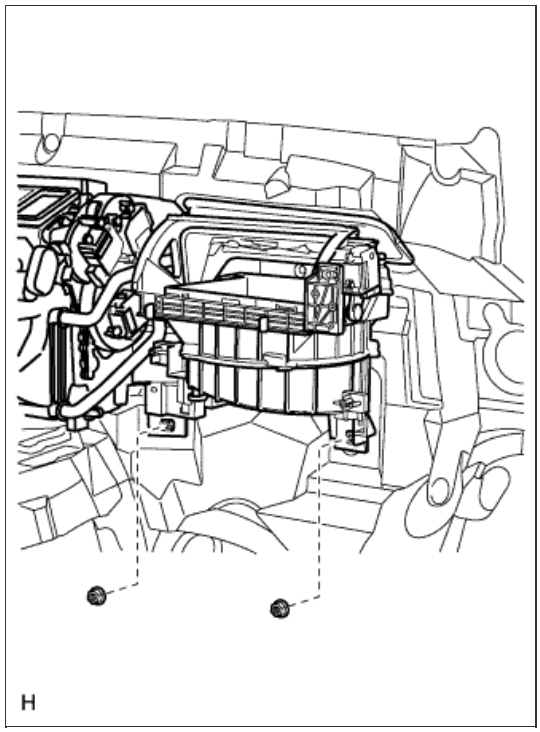

2. INSTALL AIR CONDITIONING HOSE AND ACCESSORY (w/ Cool Box)

a. Lubricate 2 new O-rings with compressor oil and install them to the air conditioning hose and accessory.

Compressor oil:
ND-OIL 8 or equivalent

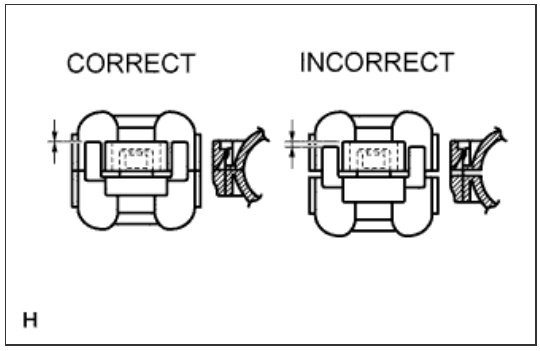


b. Install the air conditioning hose and accessory with the piping clamp.

NOTICE:

After connection, check the claw engagement of the piping clamp.

c. Install the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

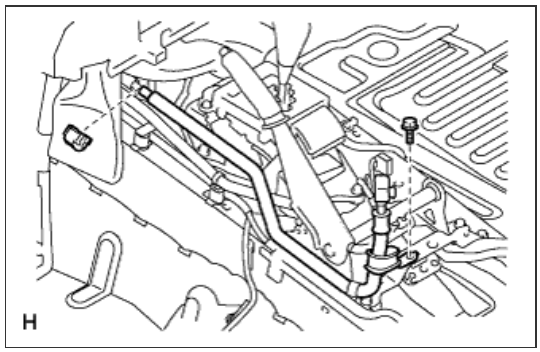

. INSTALL INSTRUMENT PANEL REINFORCEMENT ASSEMBLY

a. Install the instrument panel reinforcement.

i. Install the instrument panel reinforcement with the 7 bolts and screw.

Torque:
for bolt:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }
for screw:
6.0 N*m{ 61 kgf*cm , 53 in.*lbf }

ii. for Passenger Side:
Using a 12 mm hexagon wrench, install the 2 collars.

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

iii. for Passenger Side:
Using a T40 "TORX" socket, install the 2 "TORX" bolts.


Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

iv. for Passenger Side:
Install the 2 caps.


v. for Driver Side:
Install the 3 bolts.

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

vi. for Driver Side:
Install the 3 caps.

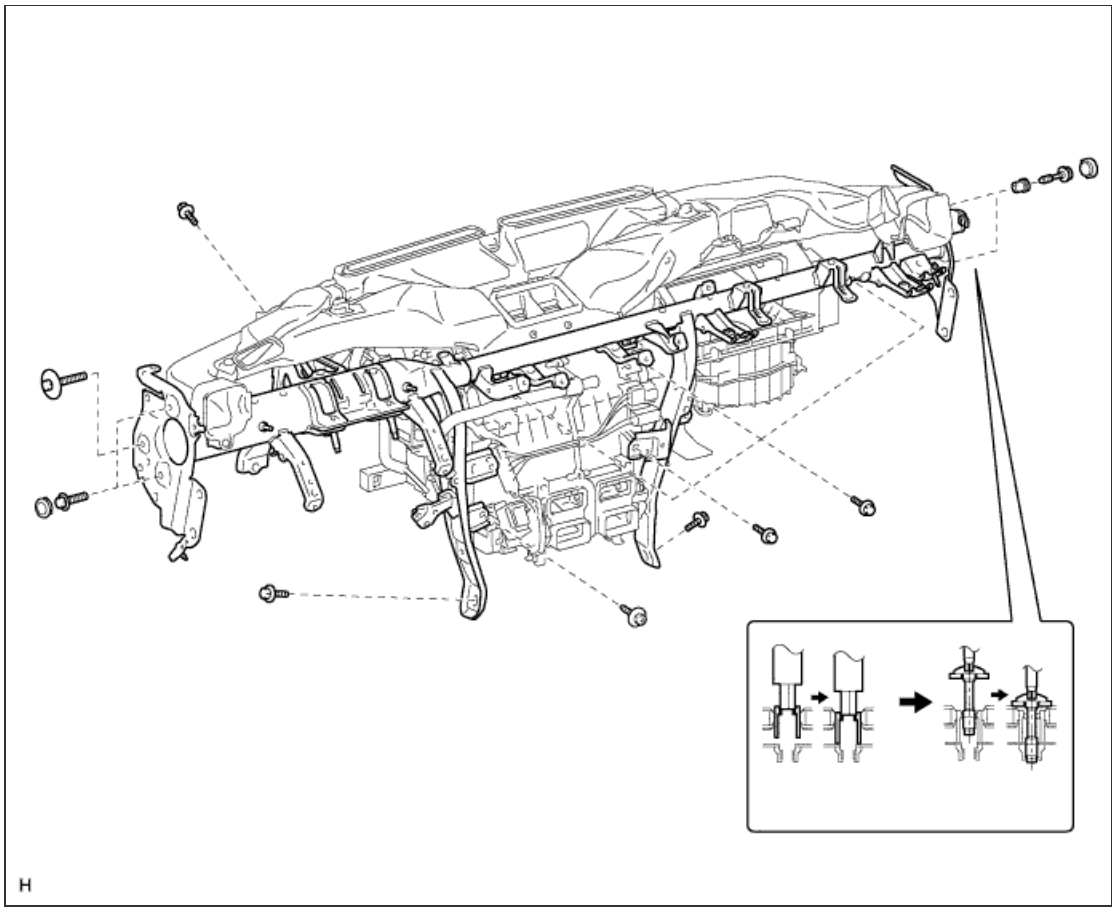


b. Attach the clamps and connectors to the wire harness.

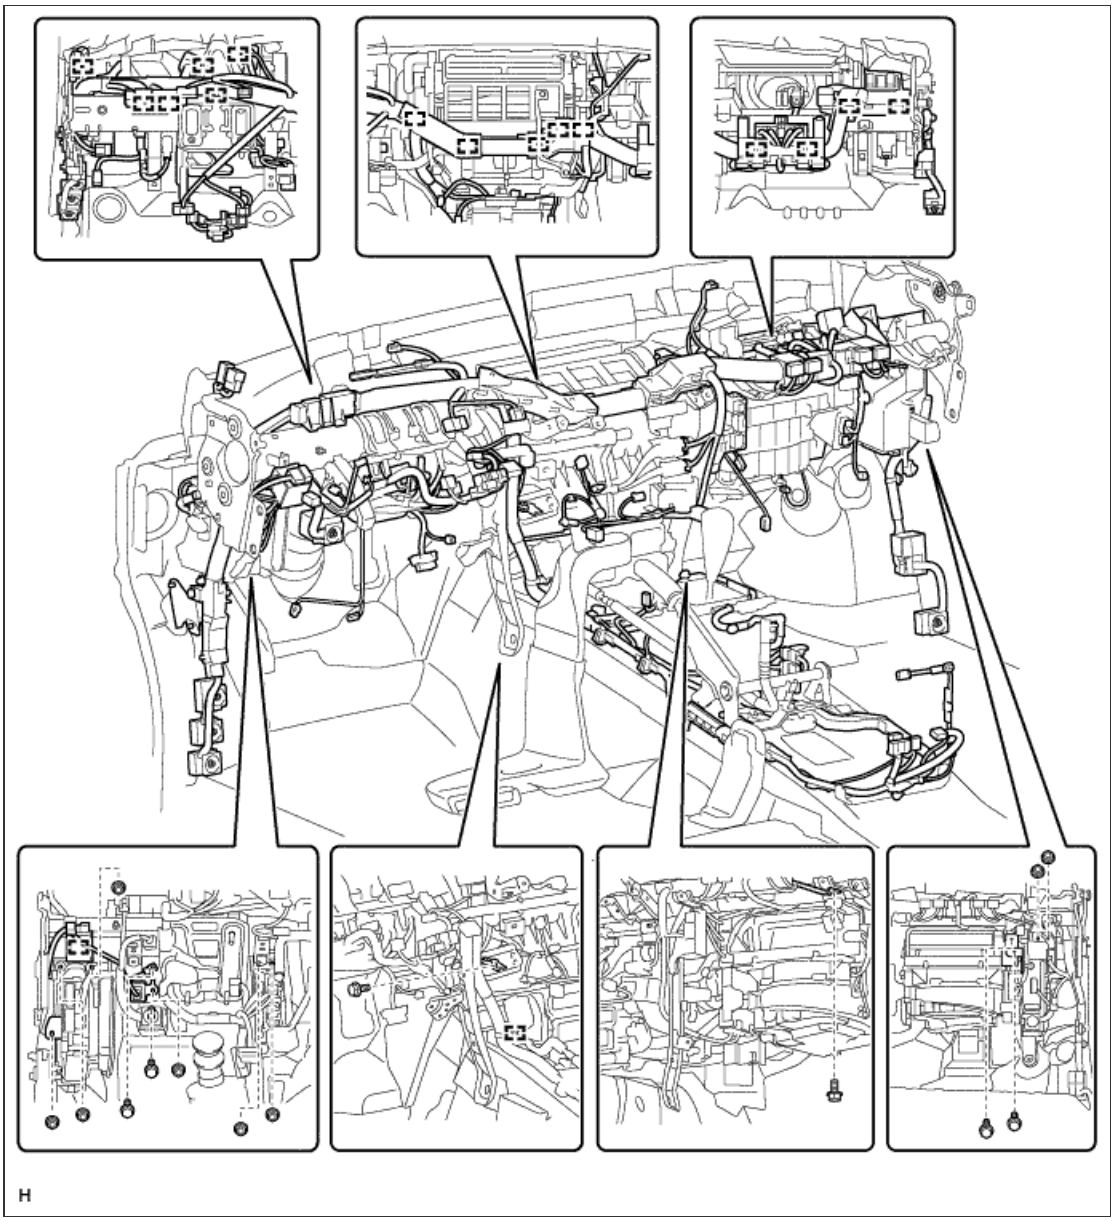

4. INSTALL HEATER TO REGISTER DUCT ASSEMBLY

a. Attach the 2 claws to install the duct.

b. Install the 3 clips.

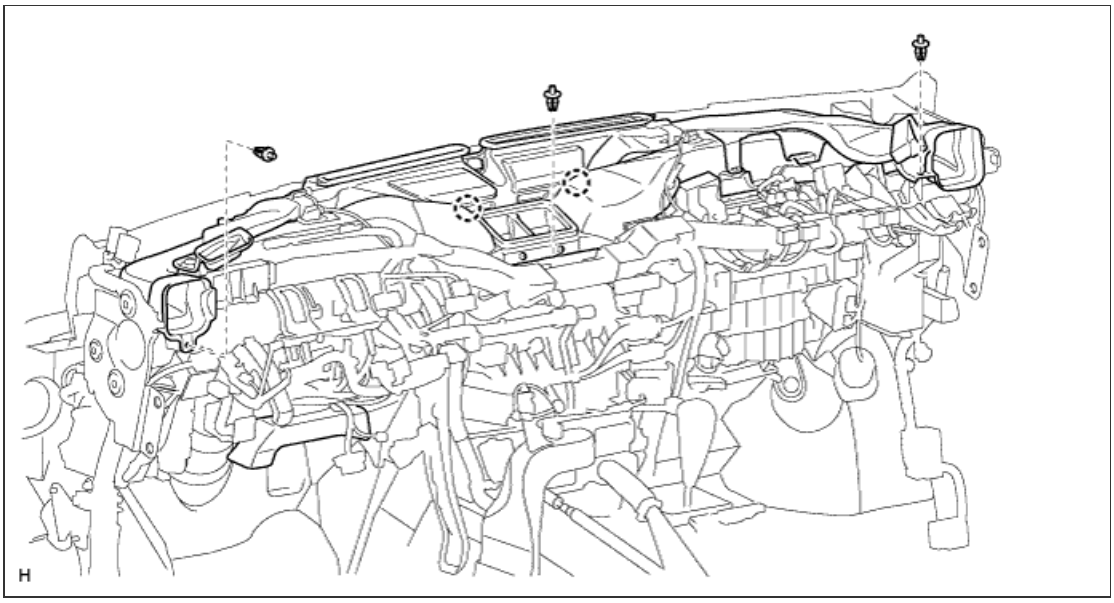

5. INSTALL STEERING COLUMN ASSEMBLY


a. for Power Tilt and Power Telescopic Steering Column:
Install the steering column (Click here).

b. for Manual Tilt and Manual Telescopic Steering Column:
Install the steering column (Click here).

6. INSTALL NO. AIR DUCT SUB-ASSEMBLY

a. Attach the 2 claws to install the duct.

b. Install the clip.

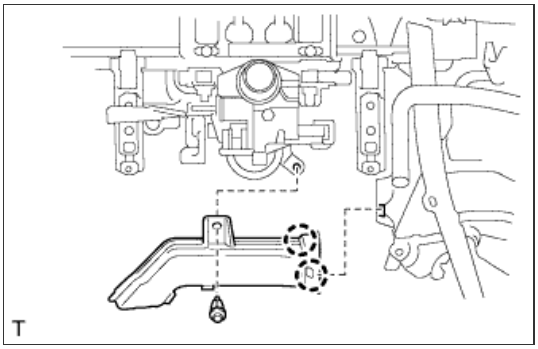

7. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY

a. Install the instrument panel (Click here).


8. INSTALL FRONT IPER MOTOR AND BRAC ET

a. Install the front wiper motor and bracket (Click here).

9. CONNECT HEATER ATER INLET HOSE AND HEATER ATER OUTLET HOSE

a. Connect the 2 heater water hoses.

b. Using pliers, grip the claws of the clips and slide the 2 clips.

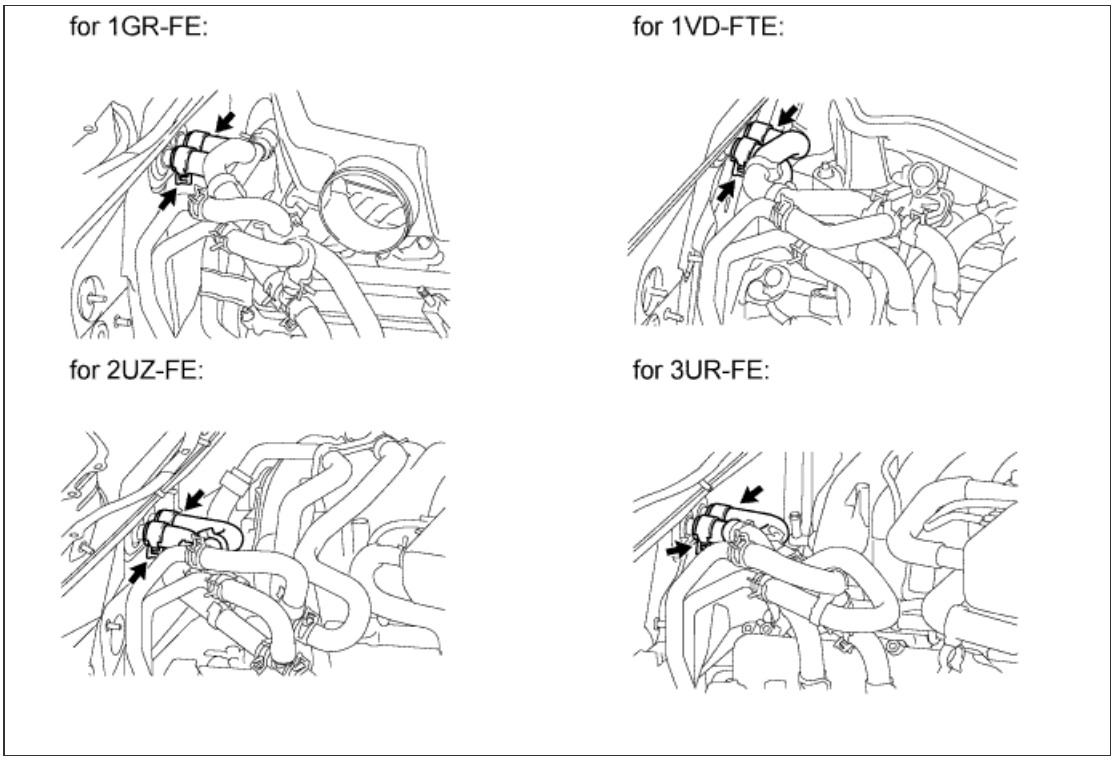

10. CONNECT AIR CONDITIONING TUBE ASSEMBLY

a. Remove the attached vinyl tape from the tubes.

b. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the air conditioning tube assembly.


Compressor oil:
ND-OIL 8 or equivalent

c. Install the 2 O-rings to the air conditioning tube assembly.

d. Connect the air conditioning tube assembly.

e. Attach the plate as shown in the illustration and install the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

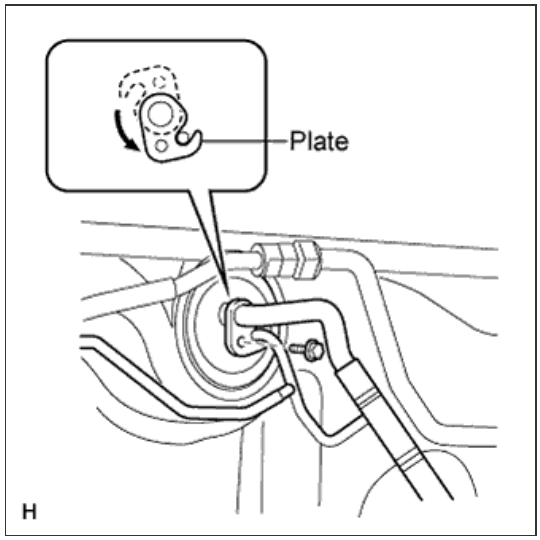

11. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

12. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

1 . ADD ENGINE COOLANT

a. for 1VD-FTV:
Add engine coolant (Click here).

b. for 2UZ-FE:
Add engine coolant (Click here).

c. for 1GR-FE:
Add engine coolant (Click here).

. for 3UR-FE:
Add engine coolant (Click here).

14. CHARGE REFRIGERANT


SST
09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

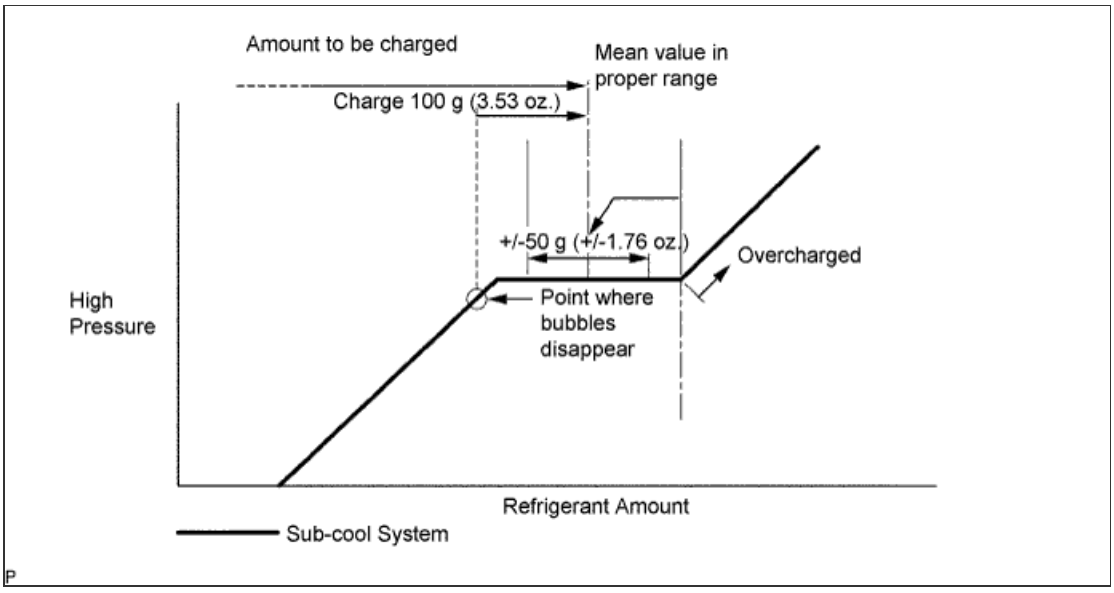

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

15. ARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

16. CHEC FOR ENGINE COOLANT LEA

a. for 1VD-FTV:
Check for engine coolant leaks (Click here).

b. for 2UZ-FE:
Check for engine coolant leaks (Click here).

c. for 1GR-FE:
Check for engine coolant leaks (Click here).

. for 3UR-FE:
Check for engine coolant leaks (Click here).

17. CHEC FOR REFRIGERANT GAS LEA

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.


. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

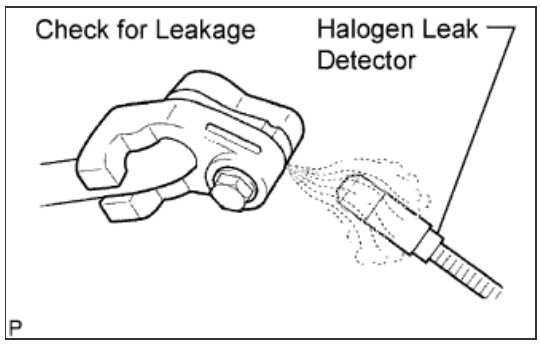

18. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

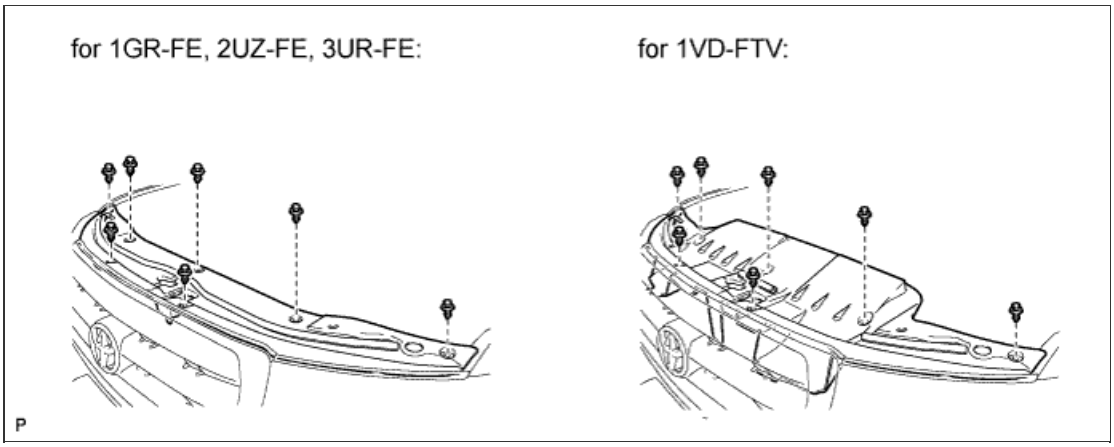

19. INSTALL NO. 1 ENGINE UNDER CO ER SUB-ASSEMBLY

a. for 1VD-FTV:
Install the No. 1 engine under cover sub-assembly (Click here).

b. for 2UZ-FE:
Install the No. 1 engine under cover sub-assembly (Click here).

c. for 1GR-FE:
Install the No. 1 engine under cover sub-assembly (Click here).

. for 3UR-FE:
Install the No. 1 engine under cover sub-assembly (Click here).

20. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Install the front fender splash shield (Click here).


b. w/ Winch:
Install the front fender splash shield (Click here).

21. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH


a. for Standard:
Install the front fender splash shield (Click here).


b. w/ Winch:
Install the front fender splash shield (Click here).


for Preparation Click here

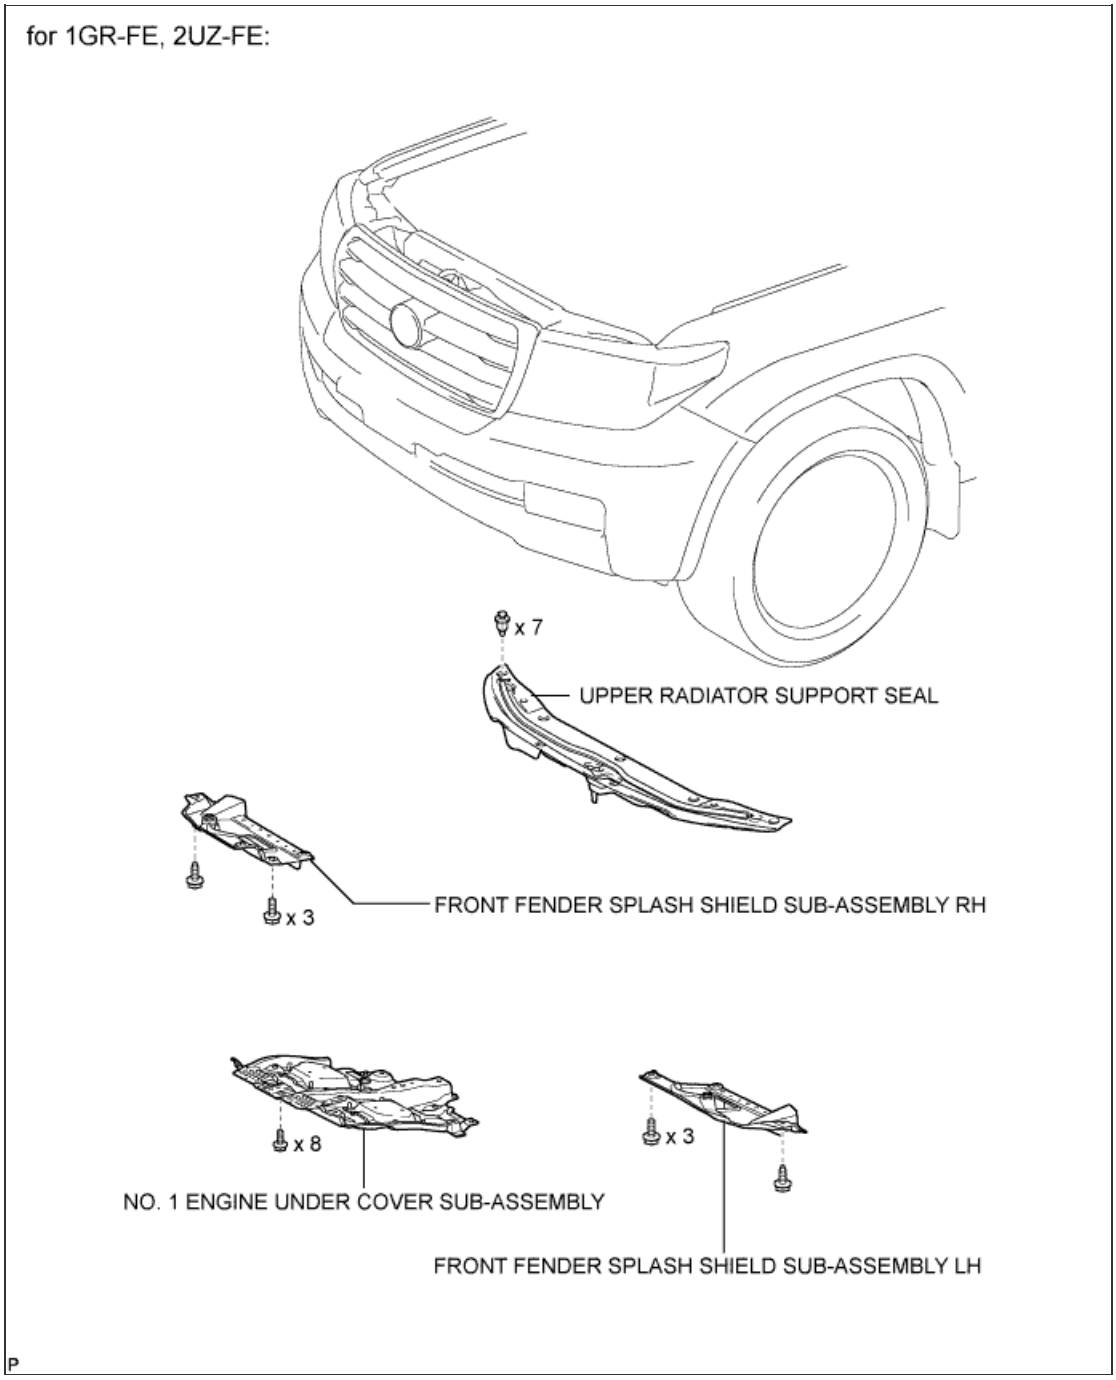


for 1VD-FTV:

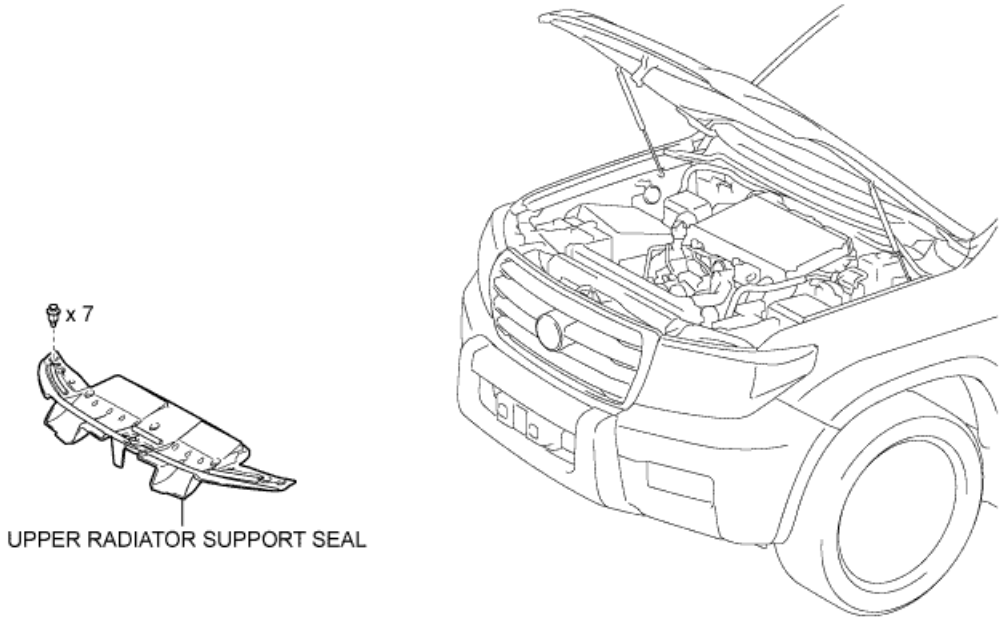

x 7
UPPER RADIATOR SUPPORT SEAL

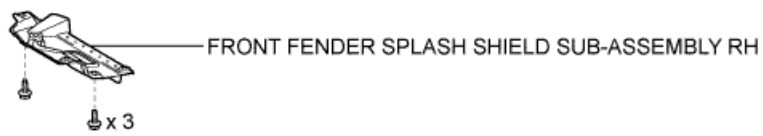

FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH
x 3

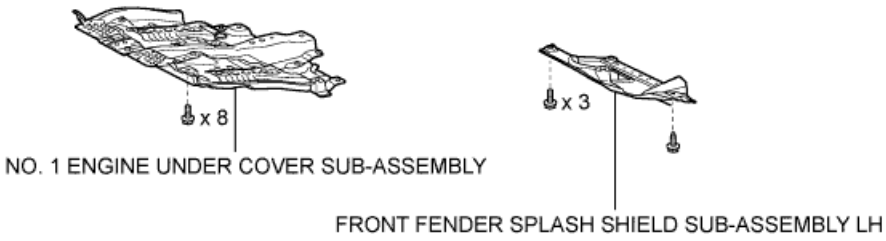

x 8
NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY
x 3
FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

P

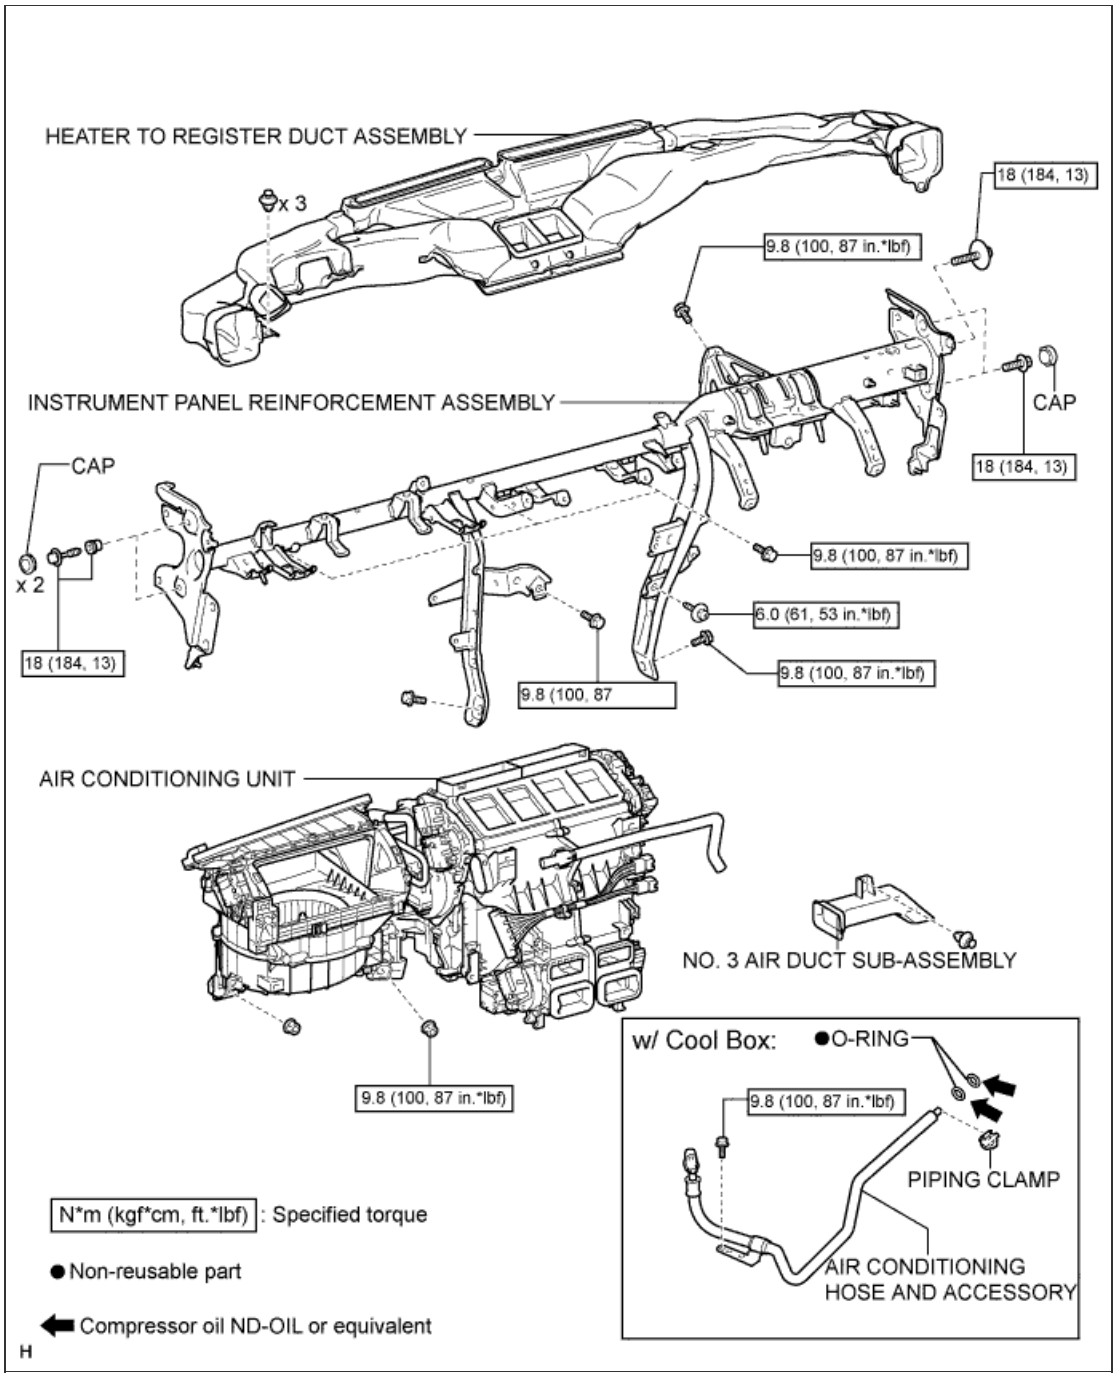
HEATER TO REGISTER DUCT ASSEMBLY
x 3
18 (184, 13)
9.8 (100, 87 in.*lbf)
INSTRUMENT PANEL REINFORCEMENT ASSEMBLY
CAP
CAP
18 (184, 13)
x 2
18 (184, 13)
9.8 (100, 87 in.*lbf)
6.0 (61, 53 in.*lbf)
9.8 (100, 87 in.*lbf)
9.8 (100, 87
AIR CONDITIONING UNIT
NO. 3 AIR DUCT SUB-ASSEMBLY
9.8 (100, 87 in.*lbf)
w/ Cool Box:
O-RING
9.8 (100, 87 in.*lbf)
PIPING CLAMP
AIR CONDITIONING
HOSE AND ACCESSORY
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
Compressor oil ND-OIL or equivalent
H

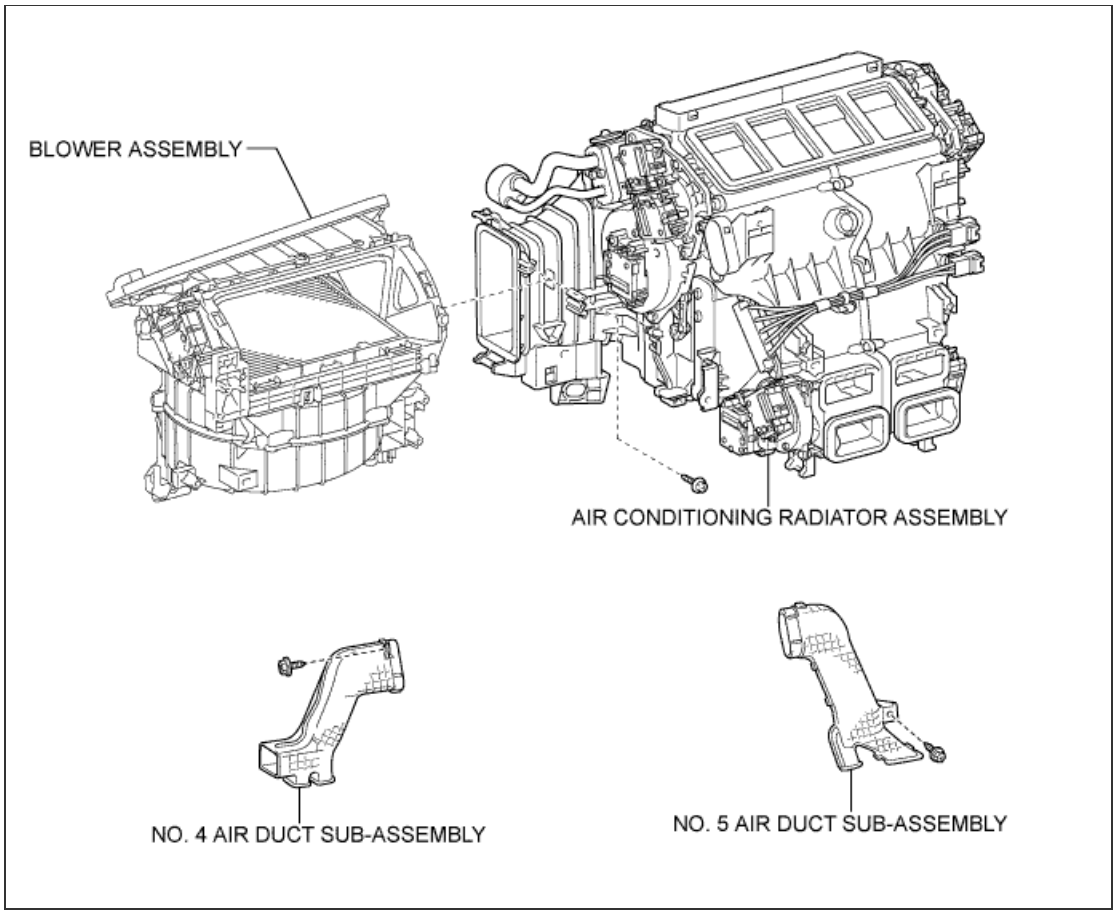
BLOWER ASSEMBLY
AIR CONDITIONING RADIATOR ASSEMBLY
NO. 4 AIR DUCT SUB-ASSEMBLY
NO. 5 AIR DUCT SUB-ASSEMBLY

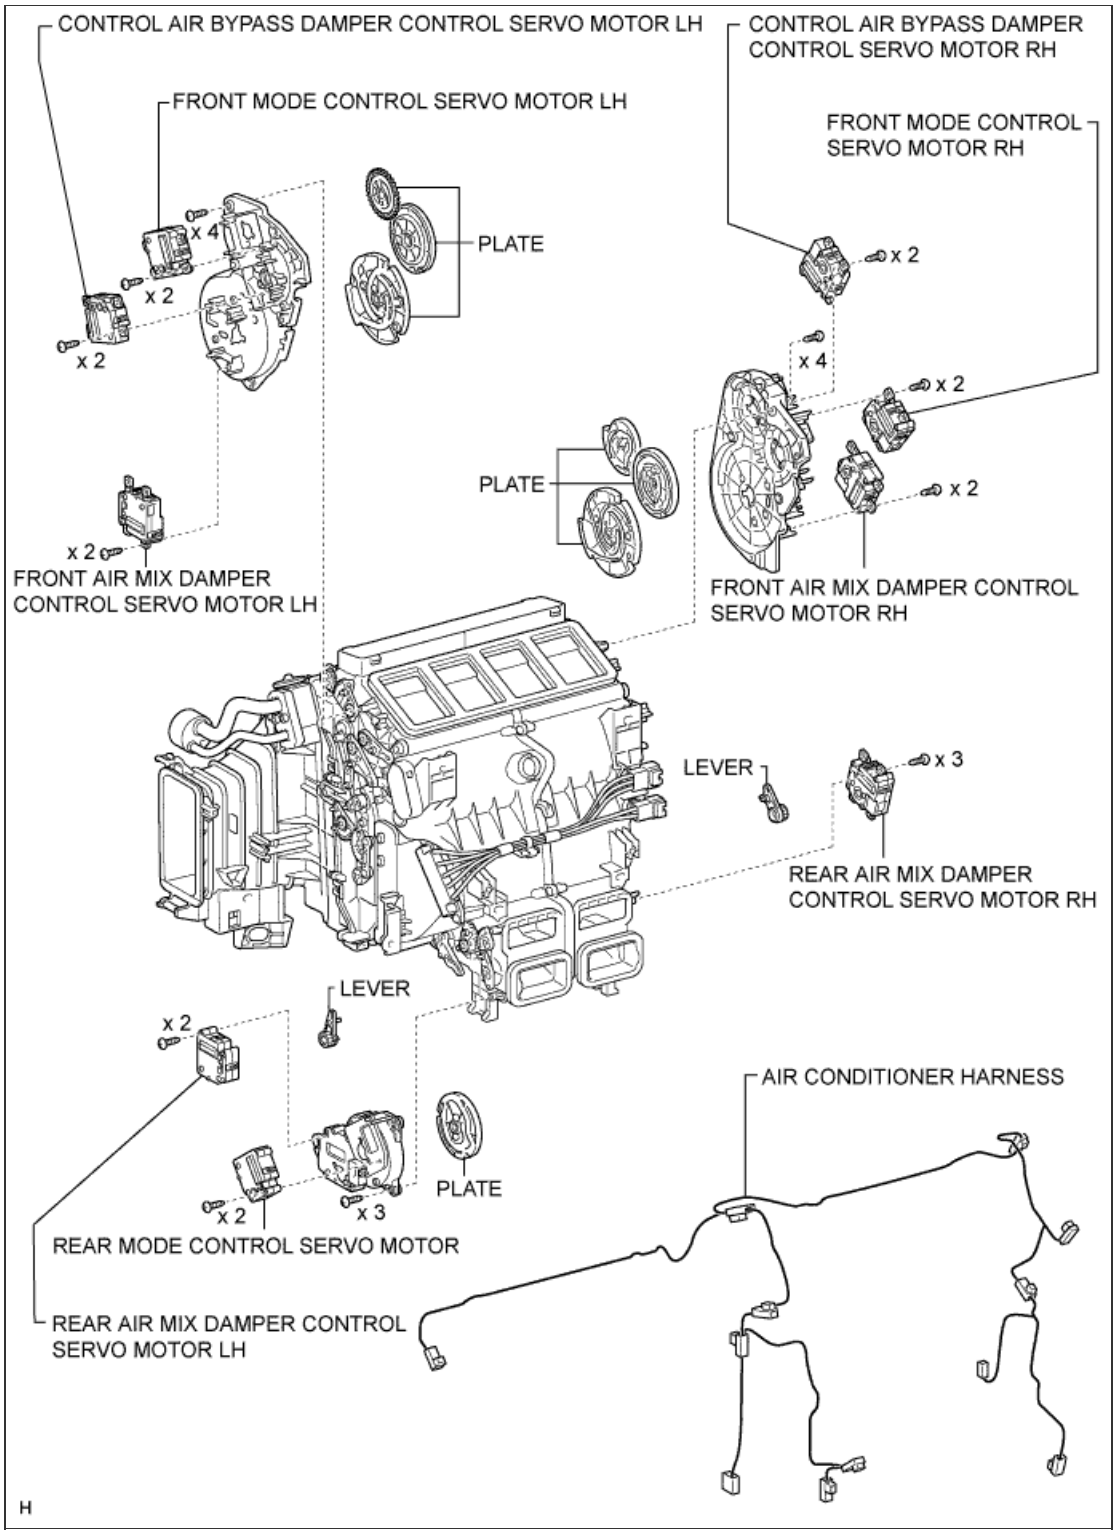
CONTROL AIR BYPASS DAMPER CONTROL SERVO MOTOR LH
CONTROL AIR BYPASS DAMPER CONTROL SERVO MOTOR RH
FRONT MODE CONTROL SERVO MOTOR LH
FRONT MODE CONTROL SERVO MOTOR RH
x 4
x 2
x 2
PLATE
x 2
x 4
x 2
PLATE
x 2
x 2
FRONT AIR MIX DAMPER CONTROL SERVO MOTOR LH
FRONT AIR MIX DAMPER CONTROL SERVO MOTOR RH
LEVER
x 3
REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH
LEVER
x 2
AIR CONDITIONER HARNESS
PLATE
x 2
x 3
REAR MODE CONTROL SERVO MOTOR
REAR AIR MIX DAMPER CONTROL SERVO MOTOR LH
H

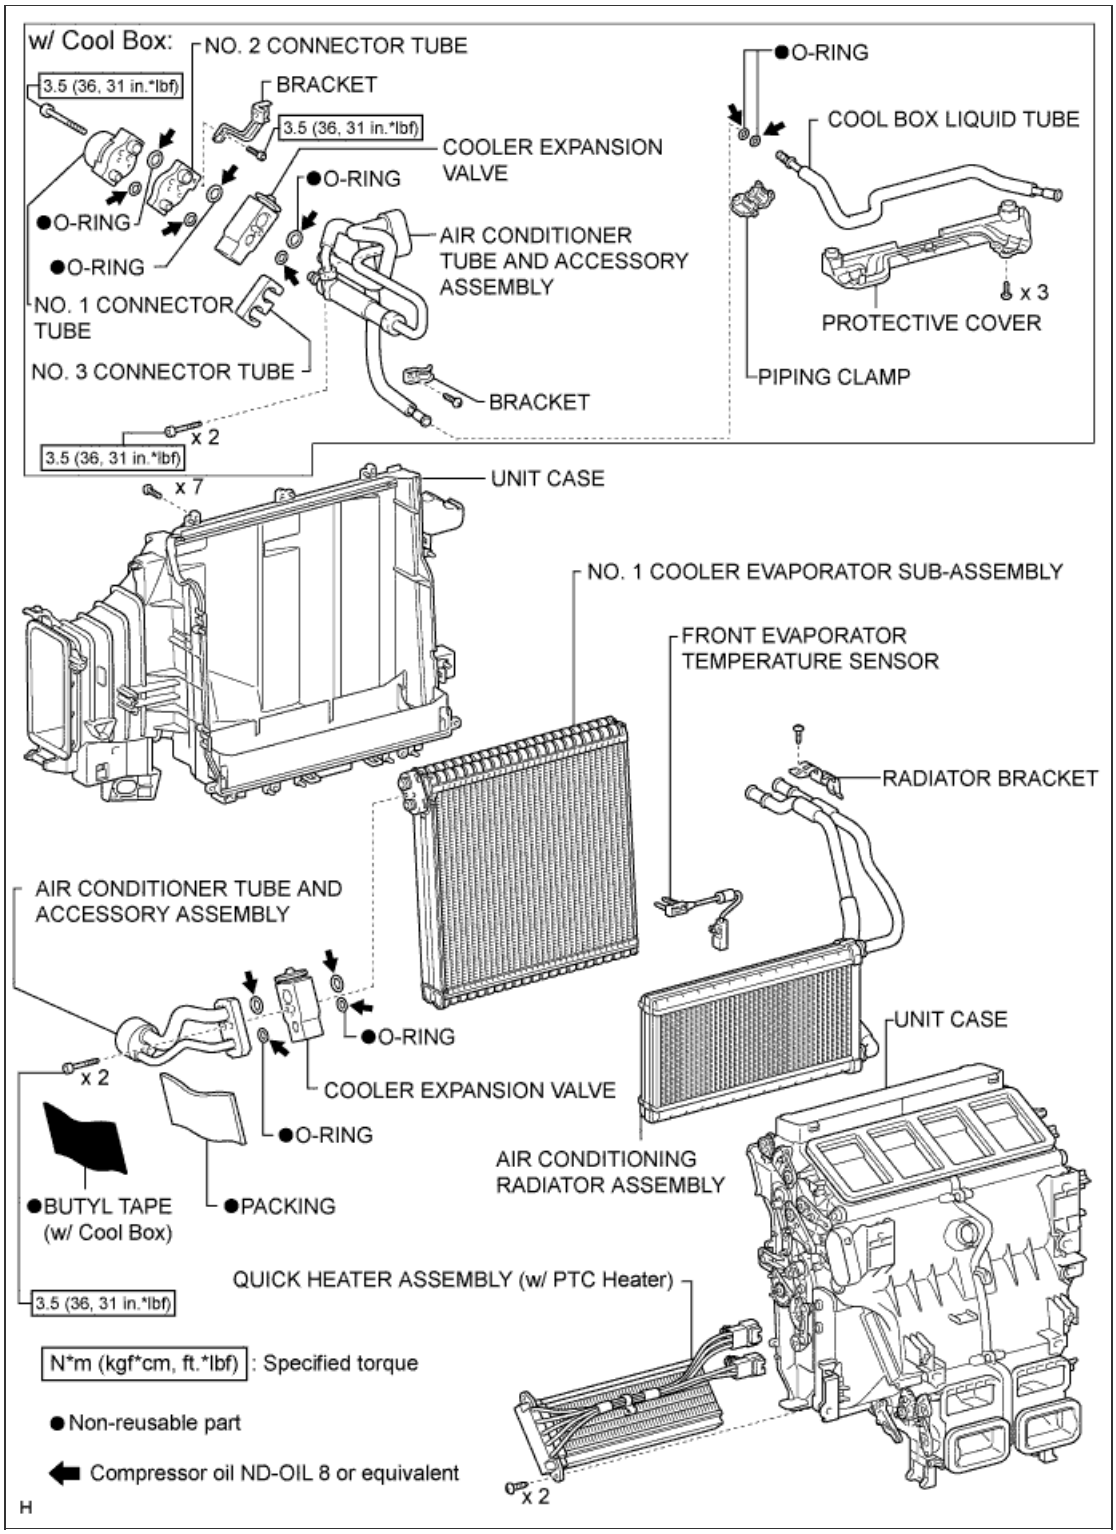
w/ Cool Box:
NO. 2 CONNECTOR TUBE
3.5 (36, 31 in.*lbf)
BRACKET
3.5 (36, 31 in.*lbf)
COOLER EXPANSION VALVE
●O-RING
●O-RING
●O-RING
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
NO. 1 CONNECTOR TUBE
NO. 3 CONNECTOR TUBE
BRACKET
x 2
3.5 (36, 31 in.*lbf)
●O-RING
COOL BOX LIQUID TUBE
x 3
PROTECTIVE COVER
PIPING CLAMP
x 7
UNIT CASE
NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY
FRONT EVAPORATOR TEMPERATURE SENSOR
RADIATOR BRACKET
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
●O-RING
x 2
COOLER EXPANSION VALVE
●O-RING
●BUTYL TAPE (w/ Cool Box)
●PACKING
3.5 (36, 31 in.*lbf)
UNIT CASE
AIR CONDITIONING RADIATOR ASSEMBLY
QUICK HEATER ASSEMBLY (w/ PTC Heater)
x 2
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
Compressor oil ND-OIL 8 or equivalent
H

for Preparation Click here

1. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).


2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).


3. REMOVE NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. Remove the 10 bolts and No. 1 engine under cover.

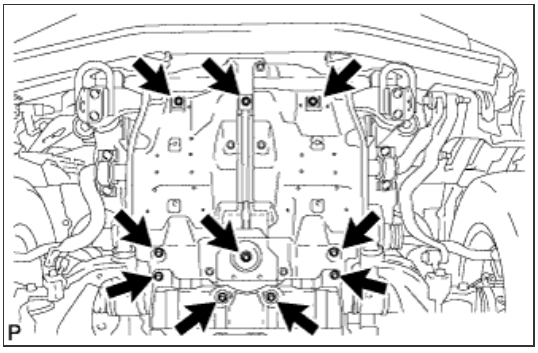

4. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

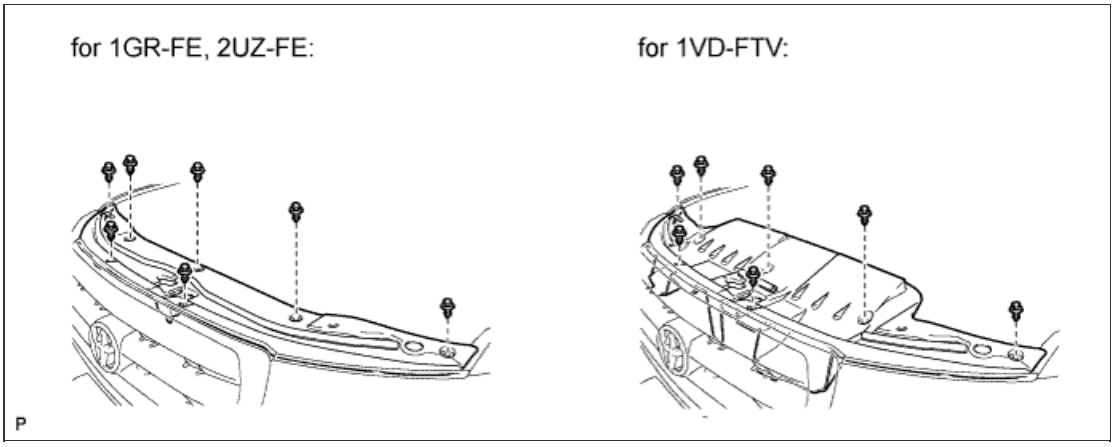

5. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

6. DRAIN ENGINE COOLANT

a. for 1VD-FTV:
Drain the engine coolant (Click here).

b. for 2UZ-FE:
Drain the engine coolant (Click here).

c. for 1GR-FE:
Drain the engine coolant (Click here).

7. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

8. DISCONNECT AIR CONDITIONING TUBE ASSEMBLY

a. Remove the bolt.

b. Detach the plate as shown in the illustration.

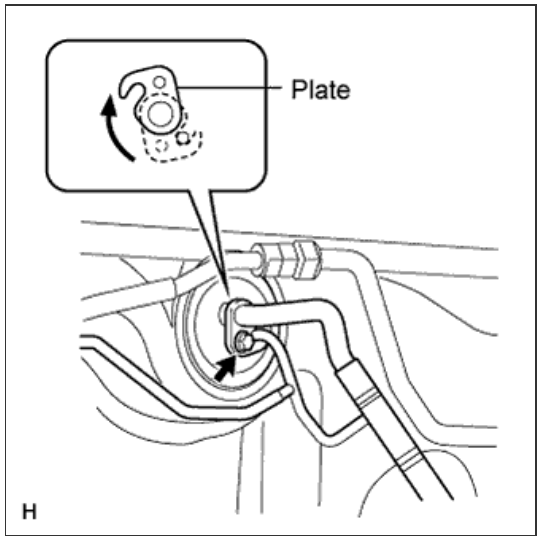


c. Disconnect the air conditioning tube assembly.

NOTICE:

- **Do not use a screwdriver or similar tool to disconnect the tube.**
- **Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.**


d. Remove the 2 O-rings from the air conditioning tube assembly.

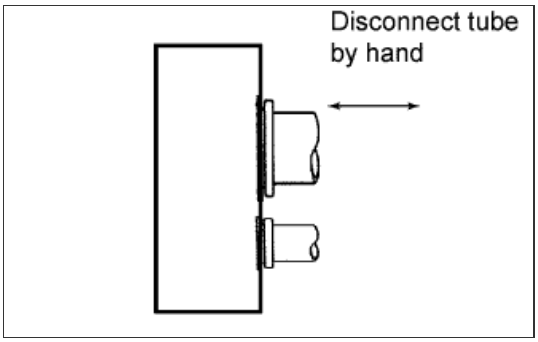

9. DISCONNECT HEATER ATER INLET HOSE AND HEATER ATER OUTLET HOSE

a. Using pliers, grip the claws of the clips and slide the 2 clips.

b. Disconnect the 2 heater water hoses.

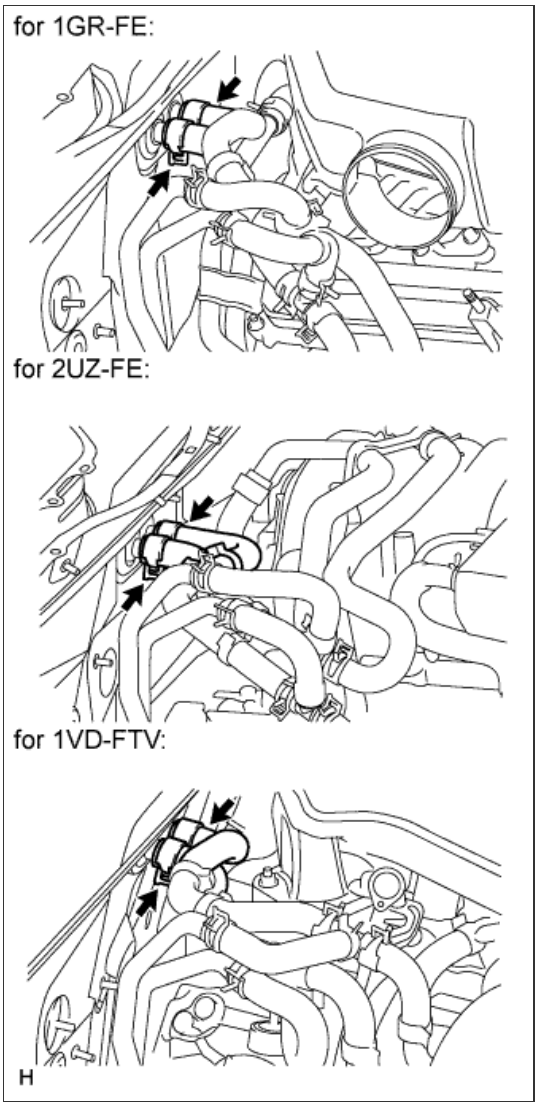

1 . REMOVE FRONT IPER MOTOR AND BRACKET

a. Remove the front wiper motor and bracket (Click here).


11. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY

a. Remove the instrument panel (Click here).

12. REMOVE NO. 3 AIR DUCT SUB-ASSEMBLY

a. Remove the clip.

b. Detach the 2 claws and remove the duct.

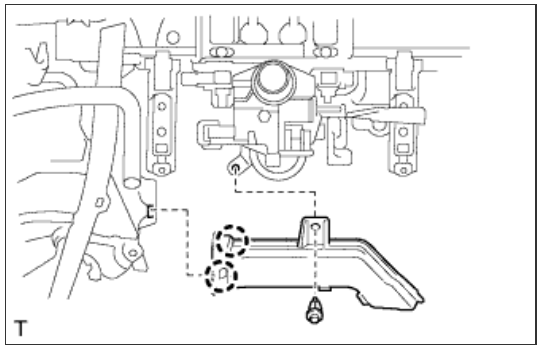

13. REMOVE STEERING COLUMN ASSEMBLY


a. for Power Tilt and Power Telescopic Steering Column:
Remove the steering column (Click here).

b. for Manual Tilt and Manual Telescopic Steering Column:
Remove the steering column (Click here).

14. REMOVE HEATER TO REGISTER DUCT ASSEMBLY


a. Remove the 3 clips.

b. Detach the 2 claws and remove the duct.

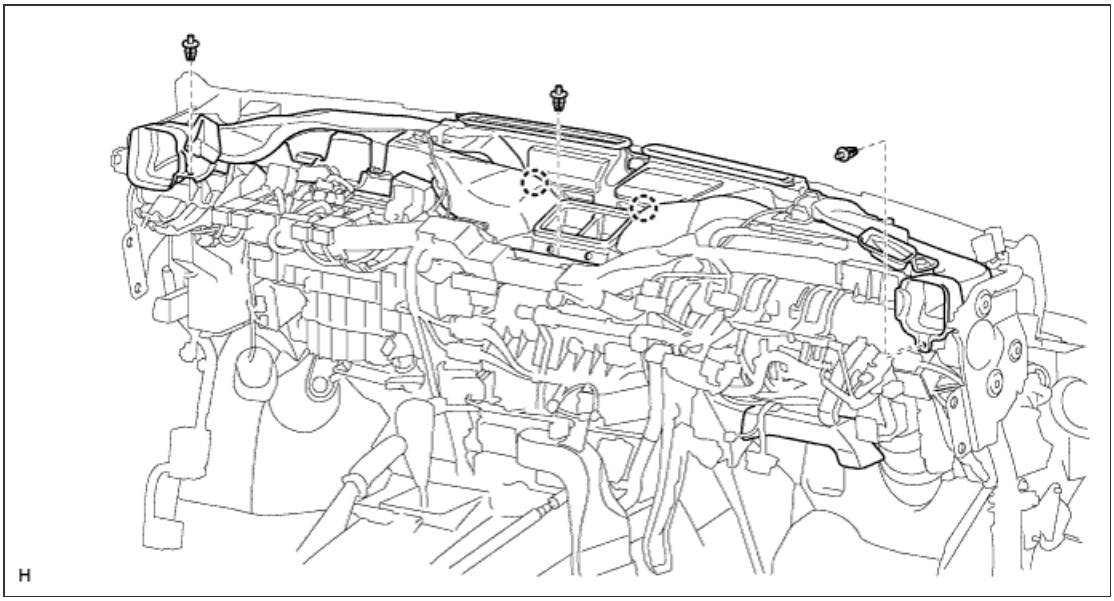

15. REMOVE INSTRUMENT PANEL REINFORCEMENT ASSEMBLY

a. Disconnect the clamps, connectors and wire harness.

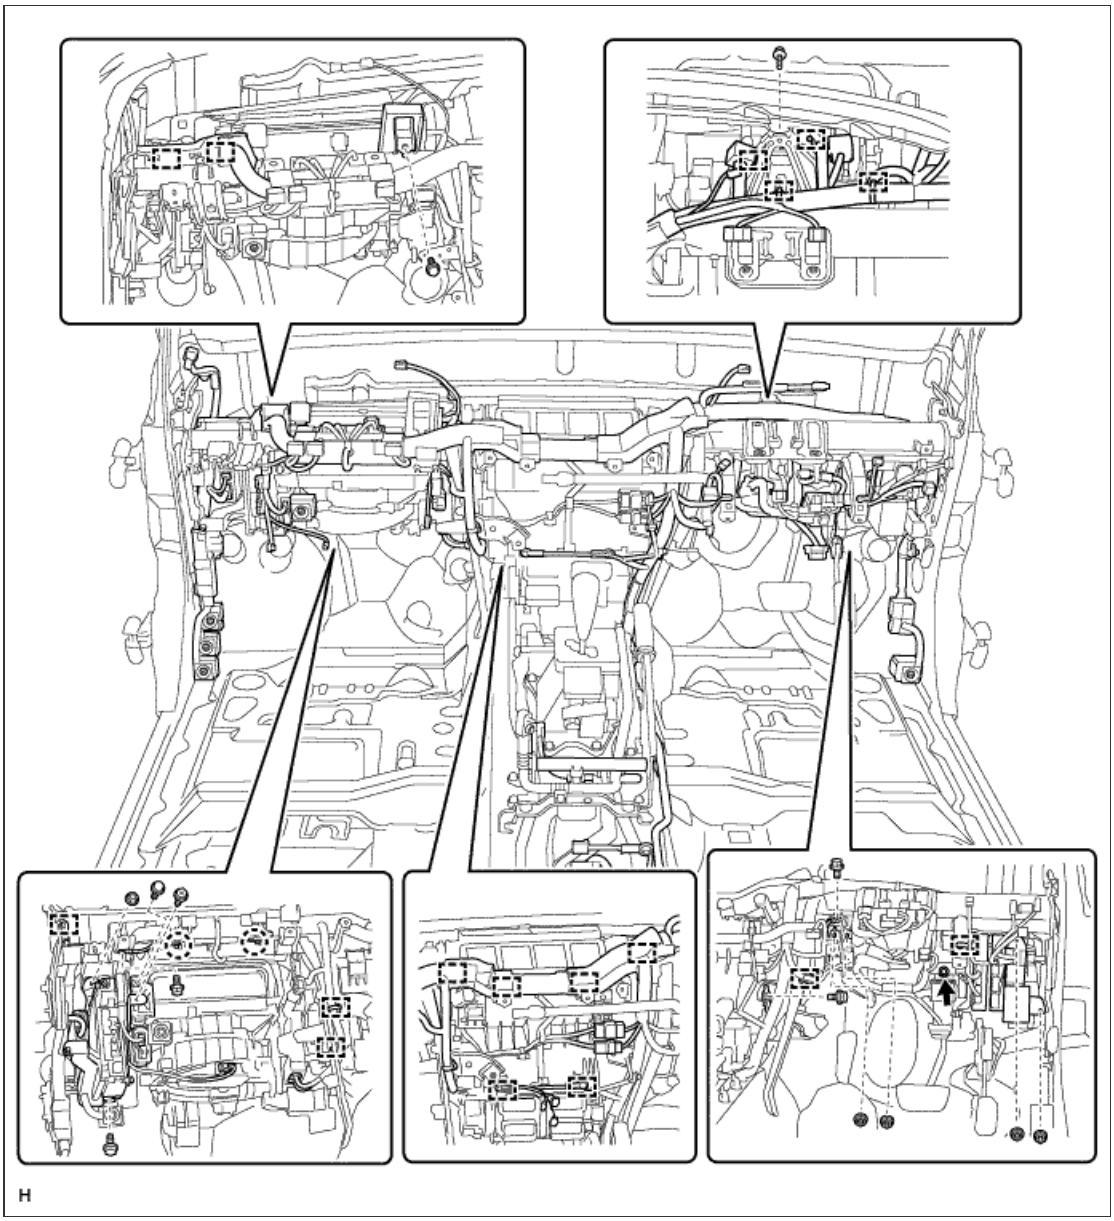

H

b. Remove the instrument panel reinforcement.

i. for Driver Side:
Remove the 3 caps and 3 bolts.

ii. for Passenger Side:
Remove the 2 caps.


iii. for Passenger Side:
Using a T40 "TORX" socket, remove the 2 "TORX" bolts.

HINT:

When removing the bolts, the collars may come off with the bolts.


iv. for Passenger Side:
Using a 12 mm hexagon wrench, remove the 2 collars.

v. Remove the 7 bolts, screw and instrument panel reinforcement.

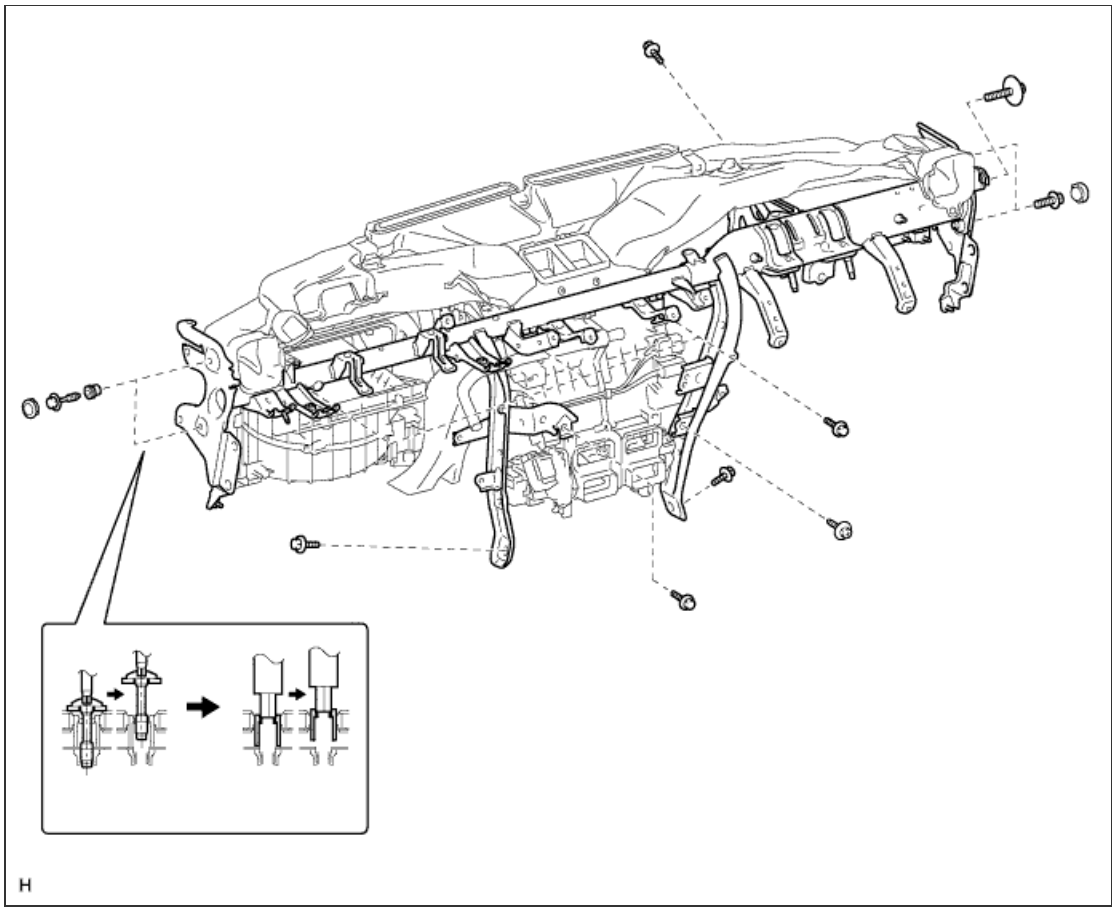

16. REMOVE AIR CONDITIONING HOSE AND ACCESSORY (w/ Cool Box)

a. Remove the bolt.

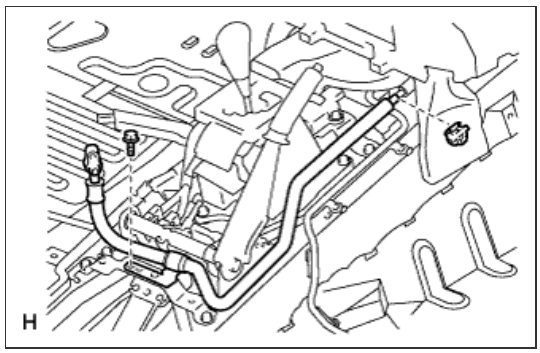

b. Using SST, remove the piping clamp.


SST

87 -00025

i. Attach SST to the piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST by referring to the illustration on the caution label.

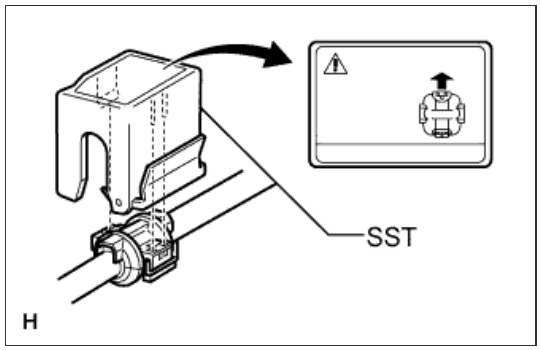


ii. Push down SST and release the clamp lock.

NOTICE:

Be careful not to deform the tubes when pushing SST.

iii. Pull SST slightly and push the release lever, then remove the piping clamp with SST.

iv. Remove the piping clamp from SST.

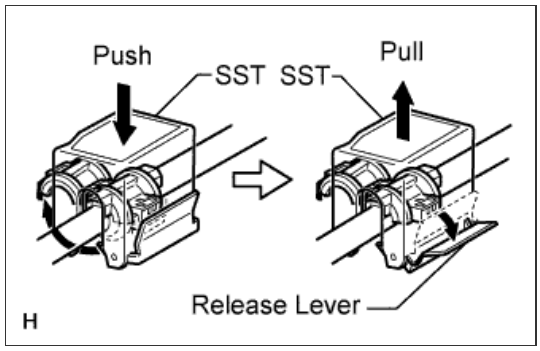

c. Disconnect the hose and accessory from the liquid tube to remove it.


NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

d. Remove the 2 O-rings from the air conditioning hose and accessory.

17. REMOVE AIR CONDITIONING UNIT

a. Remove the 2 nuts and air conditioning unit.

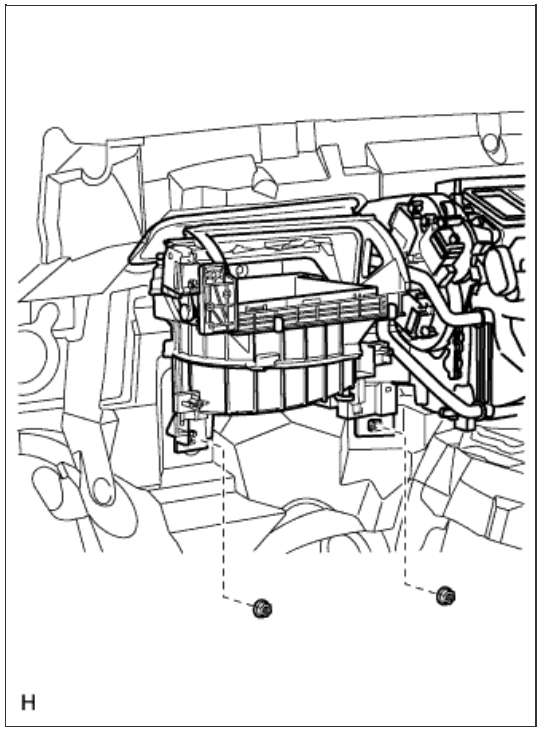

for Preparation Click here

1. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).

2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).

3. REMOVE NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY


a. for 1VD-FTV:
Remove the No. 1 engine under cover sub-assembly (Click here).

b. for 2U FE:
Remove the No. 1 engine under cover sub-assembly (Click here).

c. for 1GR-FE:
Remove the No. 1 engine under cover sub-assembly (Click here).

4. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

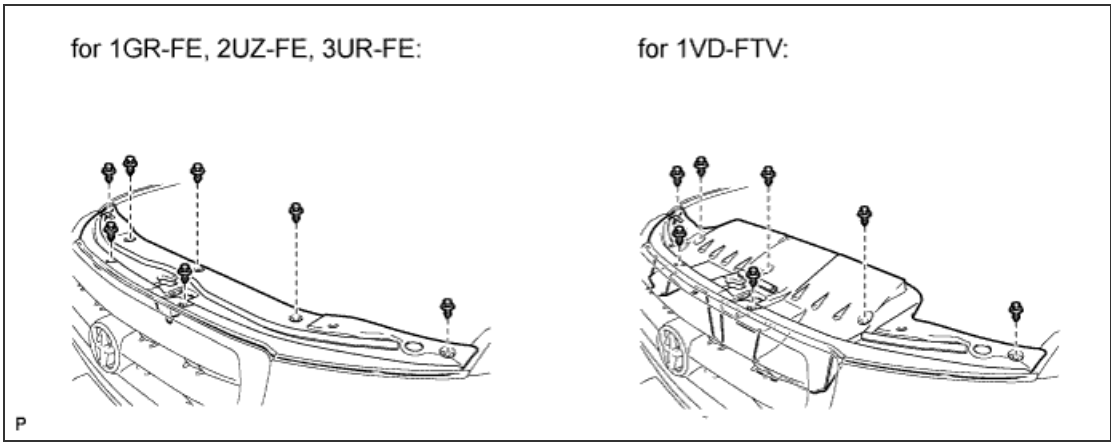

5. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

6. DRAIN ENGINE COOLANT

a. for 1VD-FTV:
Drain the engine coolant (Click here).

b. for 2UZ-FE:
Drain the engine coolant (Click here).

c. for 1GR-FE:
Drain the engine coolant (Click here).

7. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.


NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

8. DISCONNECT AIR CONDITIONING TUBE ASSEMBLY

a. Remove the bolt.

b. Detach the plate as shown in the illustration.

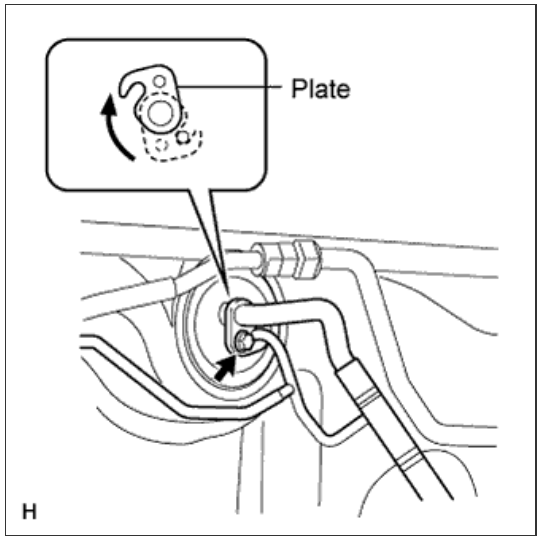


c. Disconnect the air conditioning tube assembly.

NOTICE:

- **Do not use a screwdriver or similar tool to disconnect the tube.**
- **Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.**

d. Remove the 2 O-rings from the air conditioning tube assembly.

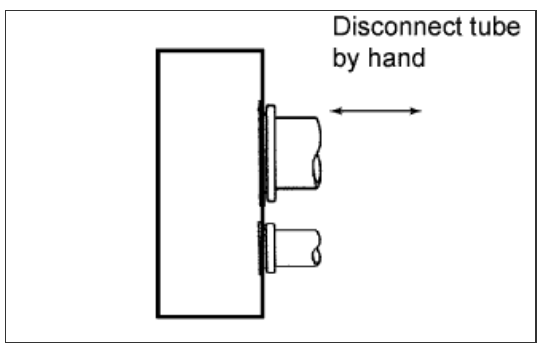


9. DISCONNECT HEATER ATER INLET HOSE AND HEATER ATER OUTLET HOSE


a. Using pliers, grip the claws of the clips and slide the 2 clips.

b. Disconnect the 2 heater water hoses.

for 1GR-FE:

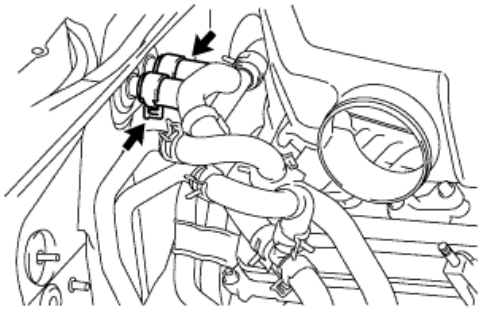

for 2UZ-FE:

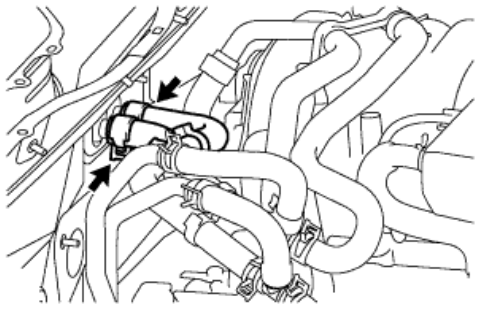

for 1VD-FTV:



H

1 . REMOVE FRONT IPER MOTOR AND BRACKET

a. Remove the front wiper motor and bracket (Click here).


11. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY

a. Remove the instrument panel (Click here).

12. REMOVE NO. 3 AIR DUCT SUB-ASSEMBLY

a. Remove the clip.

b. Detach the 2 claws and remove the duct.

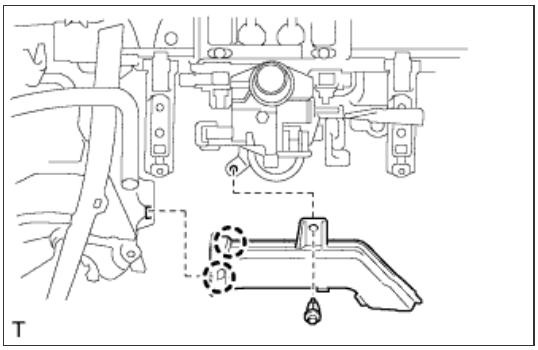

13. REMOVE STEERING COLUMN ASSEMBLY


a. for Power Tilt and Power Telescopic Steering Column:
Remove the steering column (Click here).

b. for Manual Tilt and Manual Telescopic Steering Column:
Remove the steering column (Click here).

14. REMOVE HEATER TO REGISTER DUCT ASSEMBLY


a. Remove the 3 clips.

b. Detach the 2 claws and remove the duct.

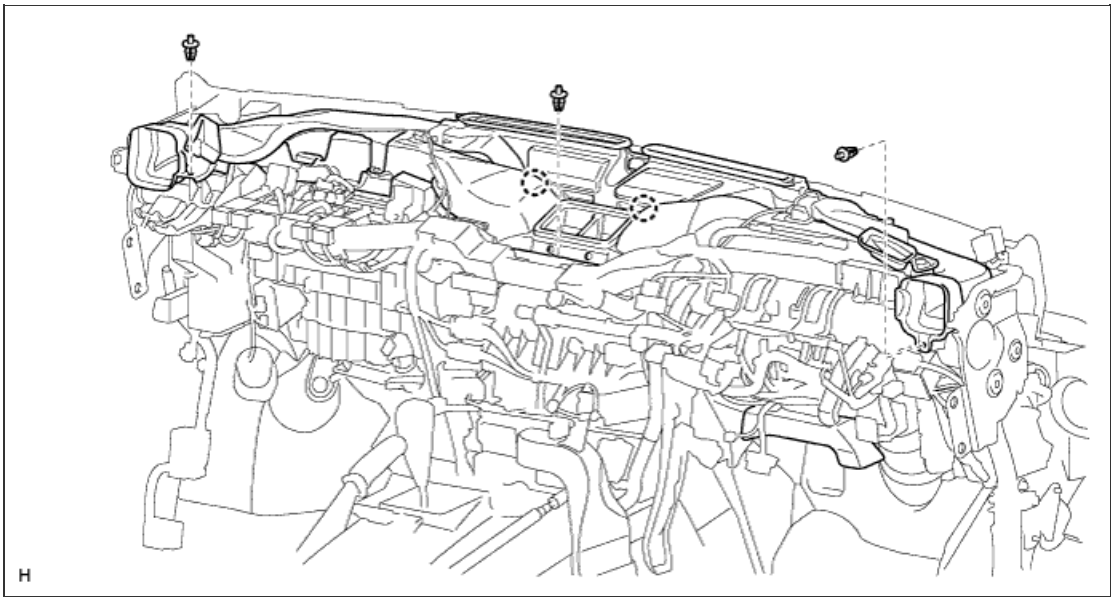

15. REMOVE INSTRUMENT PANEL REINFORCEMENT ASSEMBLY

a. Disconnect the clamps, connectors and wire harness.

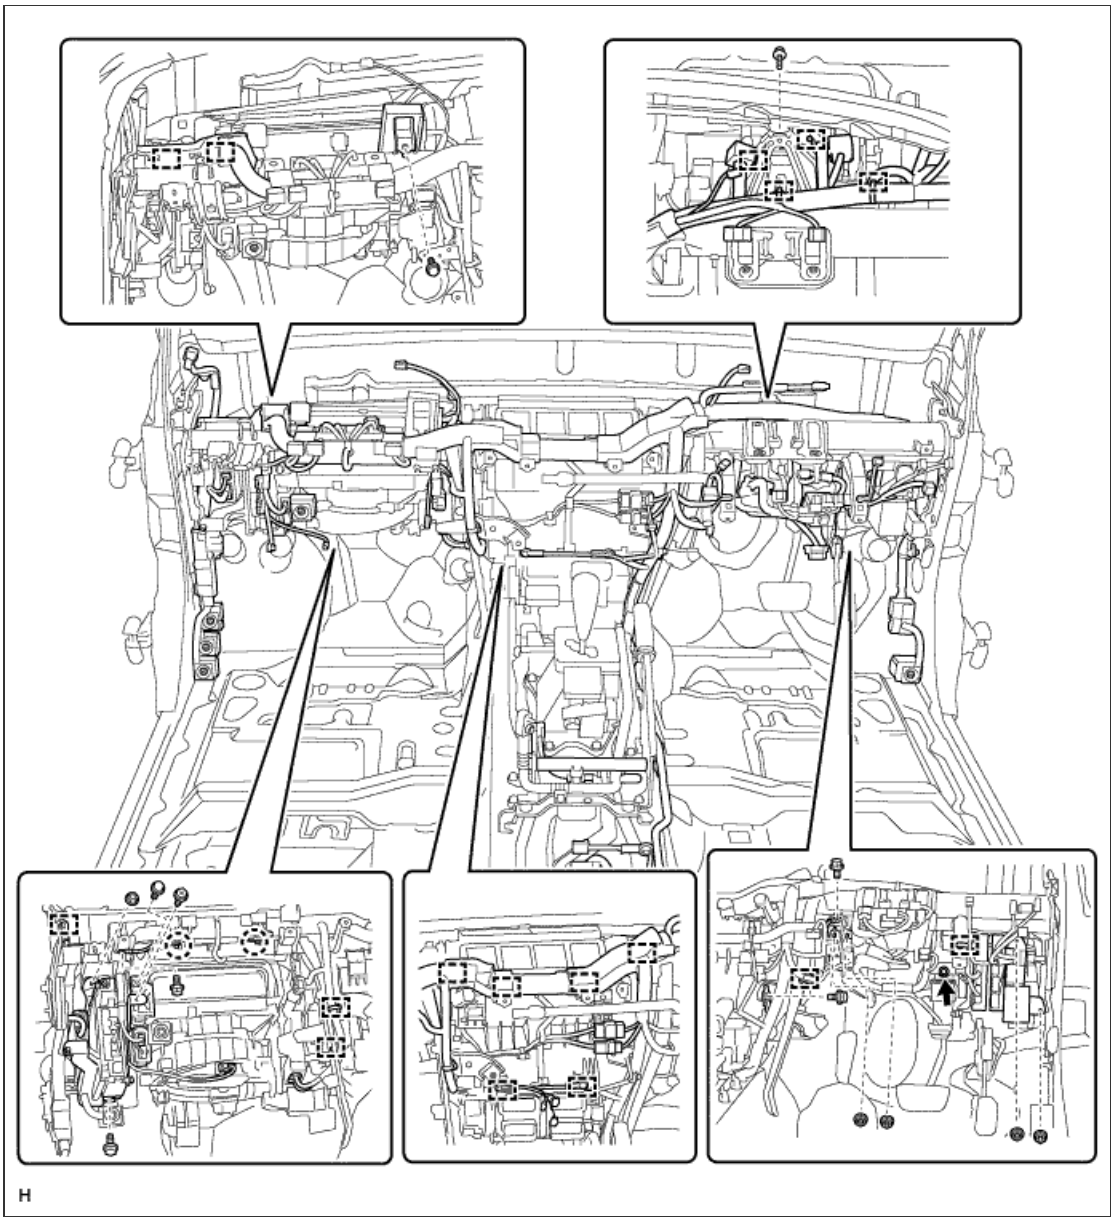

b. Remove the instrument panel reinforcement.

i. for Driver Side:
Remove the 3 caps and 3 bolts.

ii. for Passenger Side:
Remove the 2 caps.


iii. for Passenger Side:
Using a T40 "TORX" socket, remove the 2 "TORX" bolts.

HINT:

When removing the bolts, the collars may come off with the bolts.


iv. for Passenger Side:
Using a 12 mm hexagon wrench, remove the 2 collars.

v. Remove the 7 bolts, screw and instrument panel reinforcement.

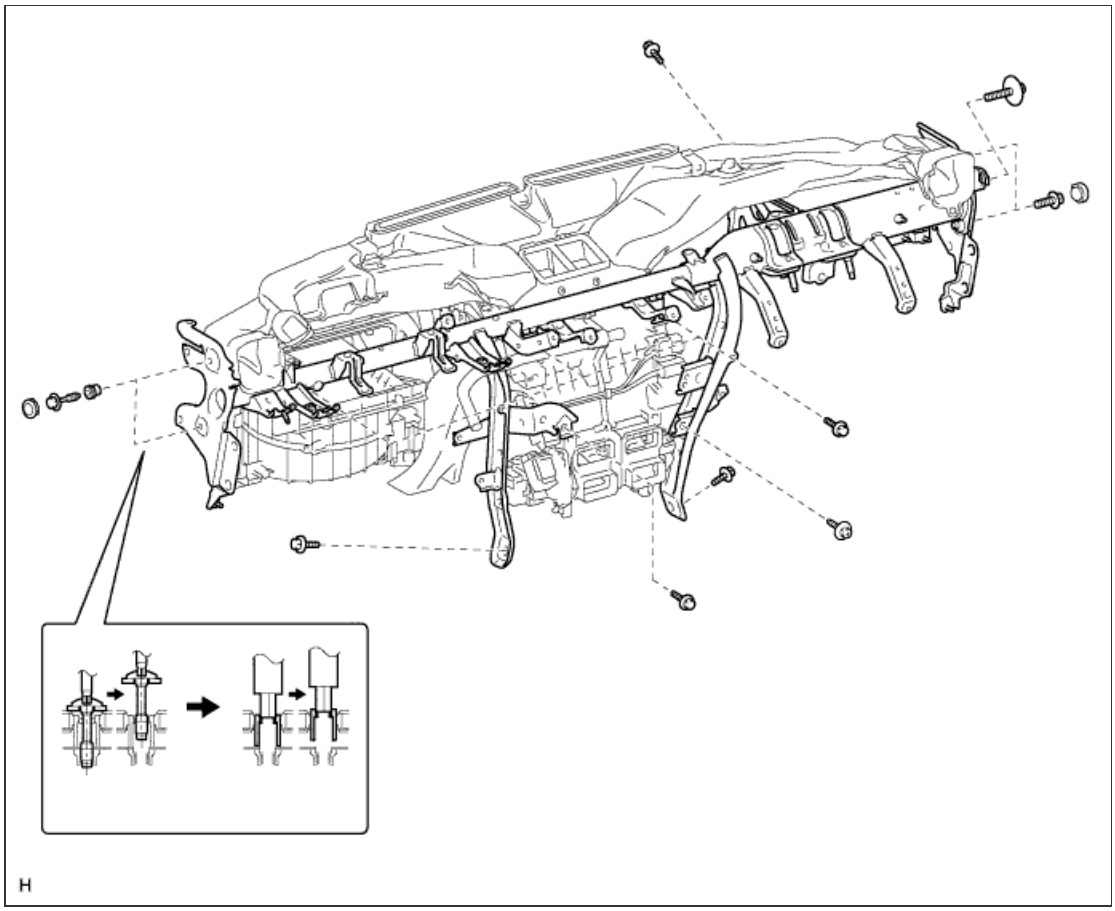

16. REMOVE AIR CONDITIONING HOSE AND ACCESSORY (w/ Cool Box)

a. Remove the bolt.

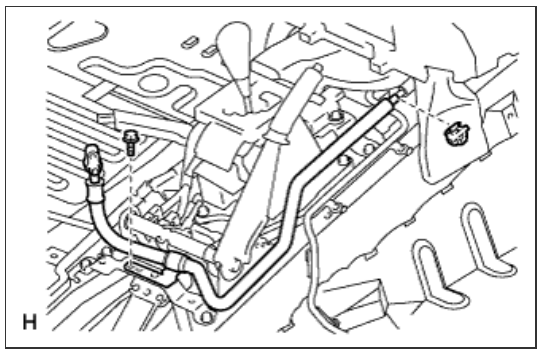

b. Using SST, remove the piping clamp.


SST

87 -00025

i. Attach SST to the piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST by referring to the illustration on the caution label.

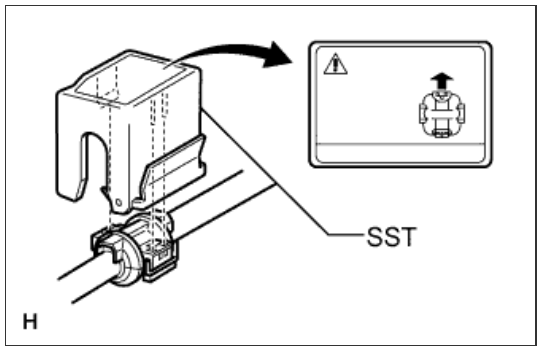


ii. Push down SST and release the clamp lock.

NOTICE:

Be careful not to deform the tubes when pushing SST.

iii. Pull SST slightly and push the release lever, then remove the piping clamp with SST.

iv. Remove the piping clamp from SST.

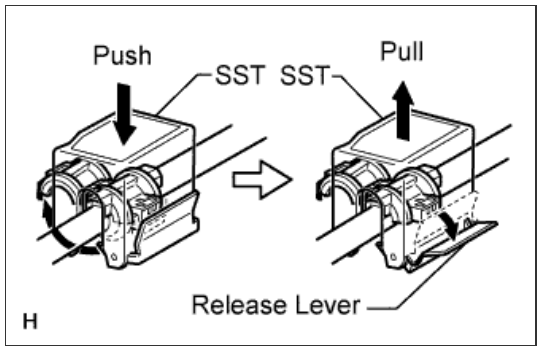

c. Disconnect the hose and accessory from the liquid tube to remove it.


NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

d. Remove the 2 O-rings from the air conditioning hose and accessory.

17. REMOVE AIR CONDITIONING UNIT

a. Remove the 2 nuts and air conditioning unit.

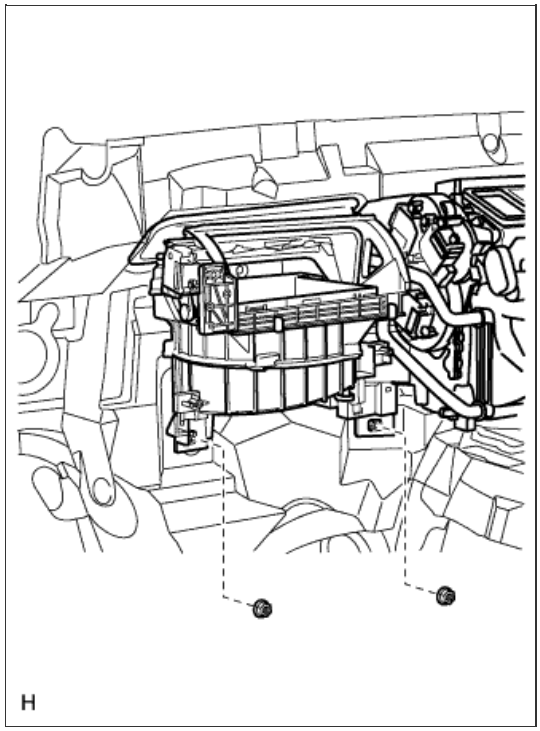


for Preparation Click here

1. REMOVE BLOWER ASSEMBLY

a. Remove the screw.


b. Disconnect the connector and clamp.

c. Detach the claw and remove the blower unit.

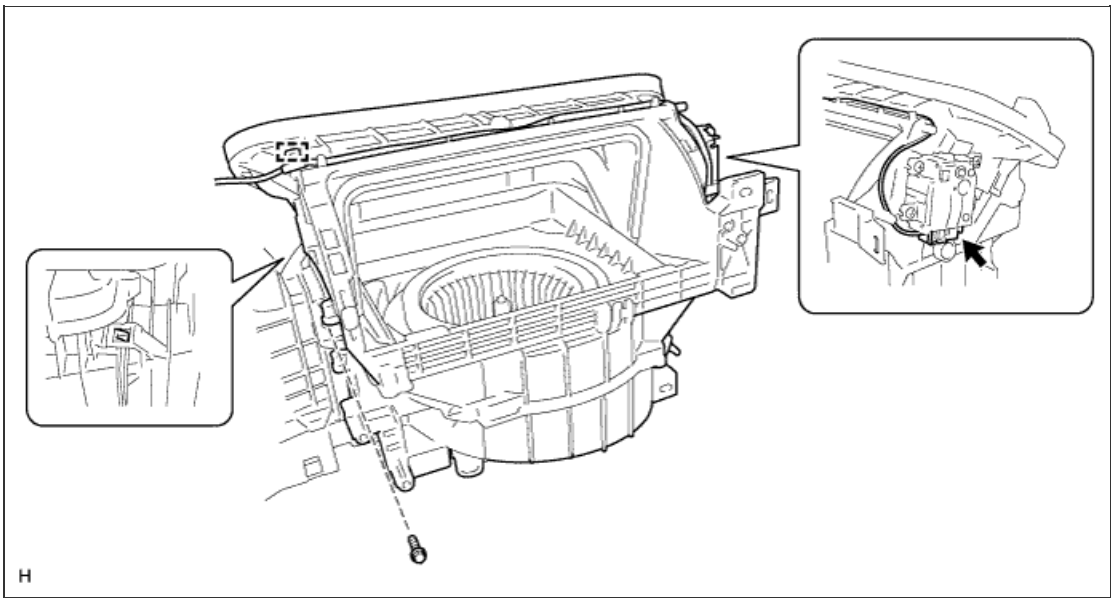


2. REMOVE NO. 4 AIR DUCT SUB-ASSEMBLY

a. Remove the screw and duct.

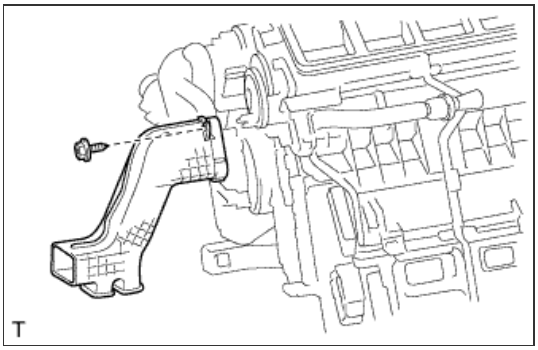


3. REMOVE NO. 5 AIR DUCT SUB-ASSEMBLY

a. Remove the screw and duct.

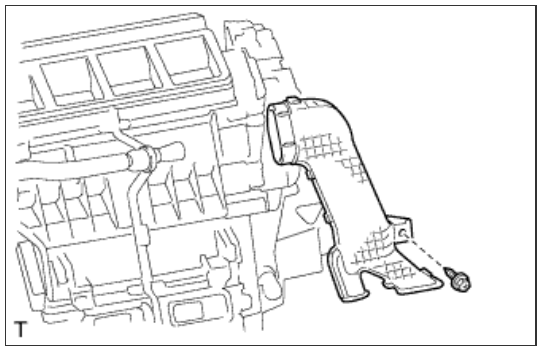

4. REMOVE ASPIRATOR


a. Detach the 2 claws and remove the aspirator.

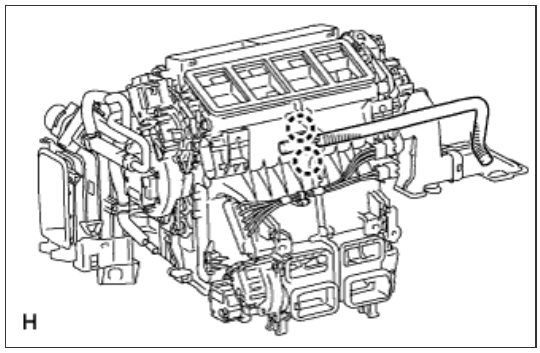

5. REMOVE COOL BOX LIQUID TUBE (w/ Cool Box)

a. Remove the 3 screws.

b. Detach the 2 claws and remove the protective cover.

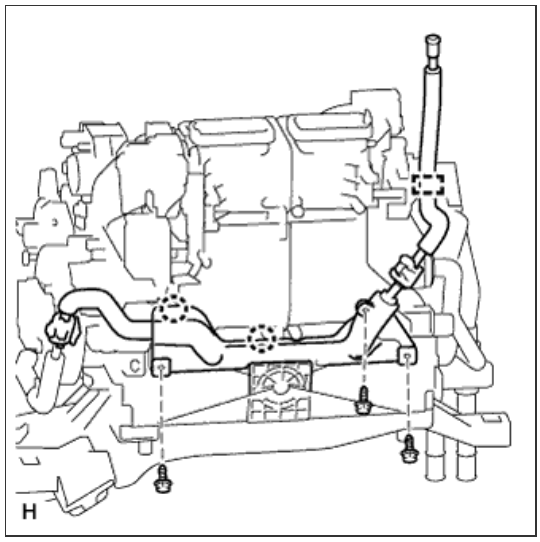


c. Using SST, remove the piping clamp.

SST
09870-00025

i. Attach SST to the piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST by referring to the illustration on the caution label.

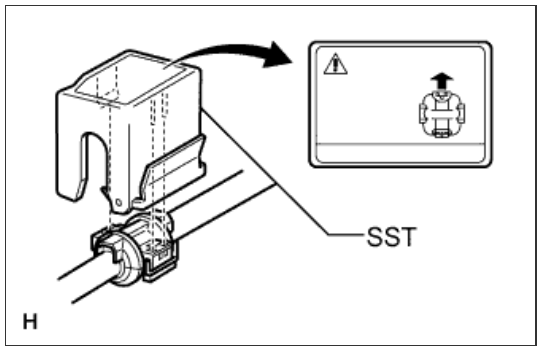


ii. Push down SST and release the clamp lock.

NOTICE:

Be careful not to deform the tubes when pushing SST.

iii. Pull SST slightly and push the release lever, then remove the piping clamp with SST.

iv. Remove the piping clamp from SST.

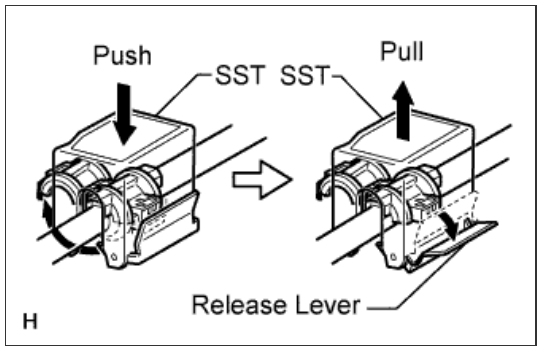

d. Disconnect the tube.

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.


e. Detach the clamp and remove the liquid tube.

f. Remove the 2 O-rings from the liquid tube.

6. REMOVE QUICK HEATER ASSEMBLY (w/ PTC Heater)

a. Detach the 3 clamps.


b. Remove the 2 screws and quick heater.

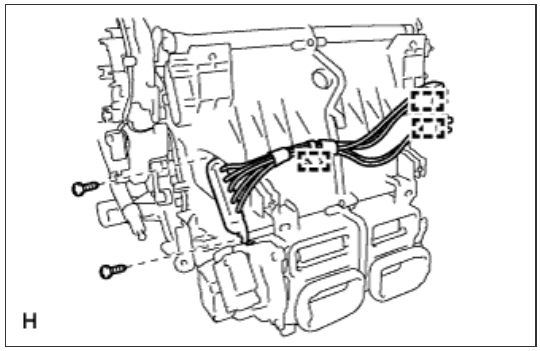

7. REMOVE AIR CONDITIONER HARNESS

a. Disconnect the connectors.


b. Detach the clamps and remove the harness.

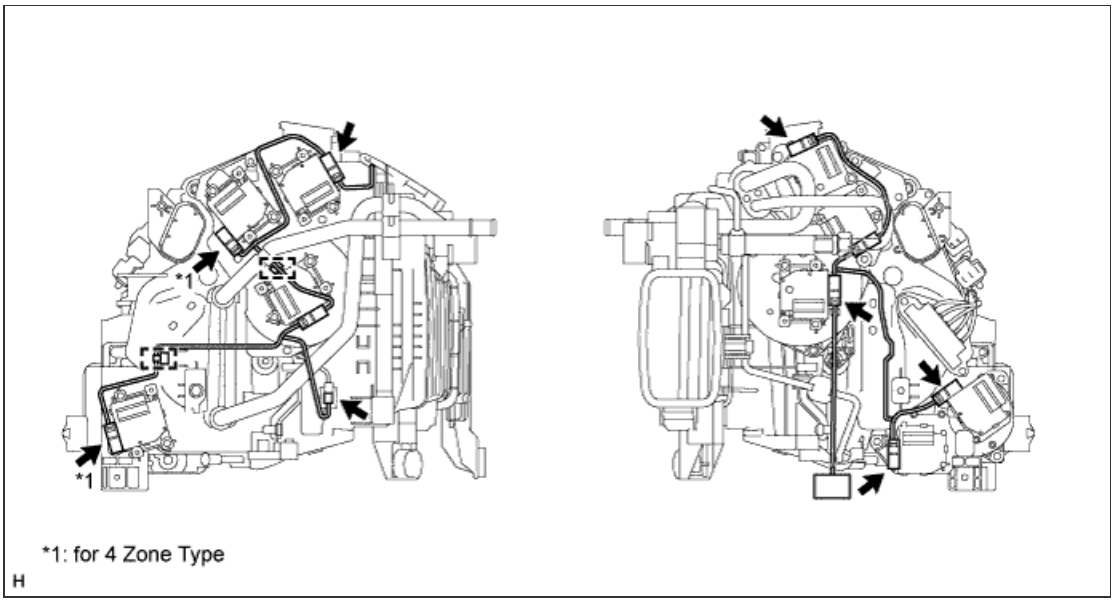

8. REMOVE AIR CONDITIONING RADIATOR ASSEMBLY


a. Remove the screw and radiator bracket.

b. Remove the radiator.

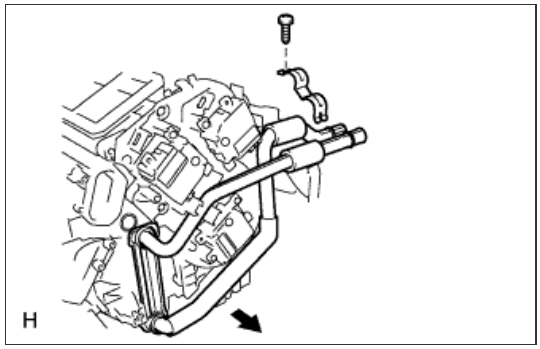


9. REMOVE COOLER EXPANSION VALVE (w/ Cool Box)


a. Remove the packing.

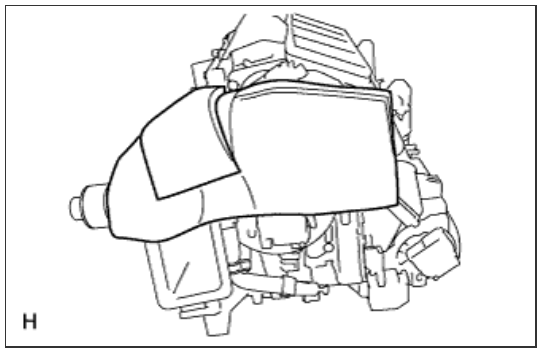

b. Remove the butyl tape.

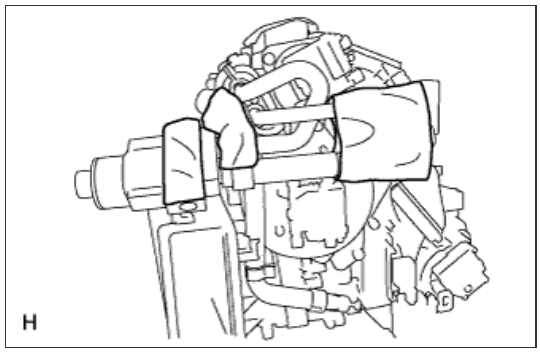


c. Using a 4 mm hexagon wrench, remove the hexagon bolt, screw and bracket.

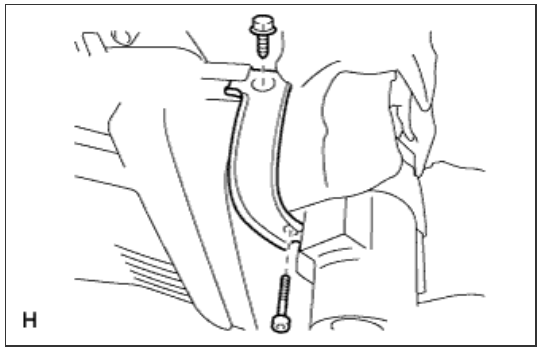

d. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts and No. 1 connector tube.

e. Remove the 2 O-rings from the No. 1 connector tube.

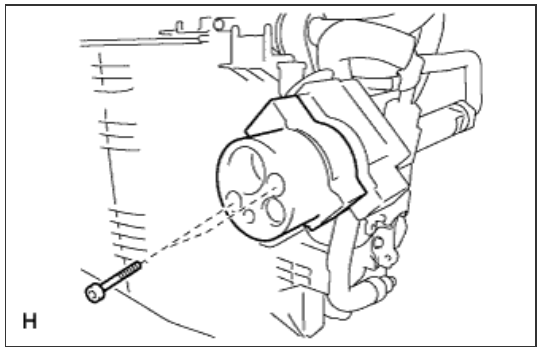

f. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts, No. 2 connector tube, expansion valve and No. 3 connector tube.

g. Remove the 2 O-rings from the No. 2 connector tube.




10. REMOVE AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY (w/ Cool Box)

a. Remove the screw and bracket.


b. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts and air conditioner tube and accessory assembly.

c. Remove the 2 O-rings from the air conditioner tube and accessory assembly.

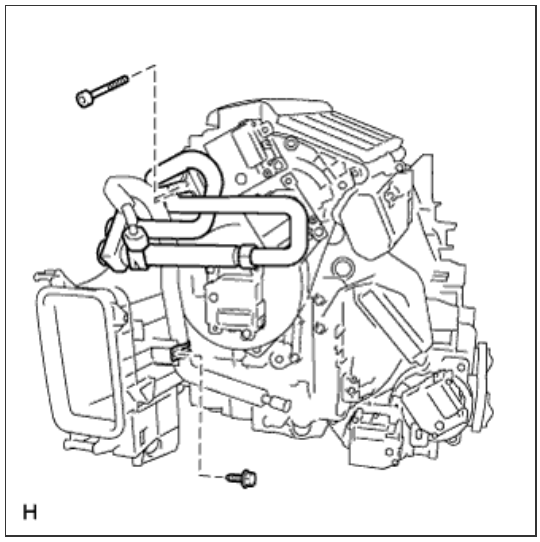

11. REMOVE COOLER EXPANSION VALVE (w/o Cool Box)


a. Remove the packing.

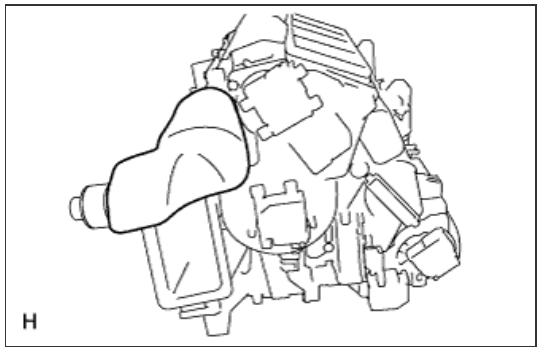

b. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts, air conditioner tube and accessory assembly and expansion valve.


c. Remove the 2 O-rings from the air conditioner tube and accessory assembly.

d. Remove the 2 O-rings from the expansion valve.

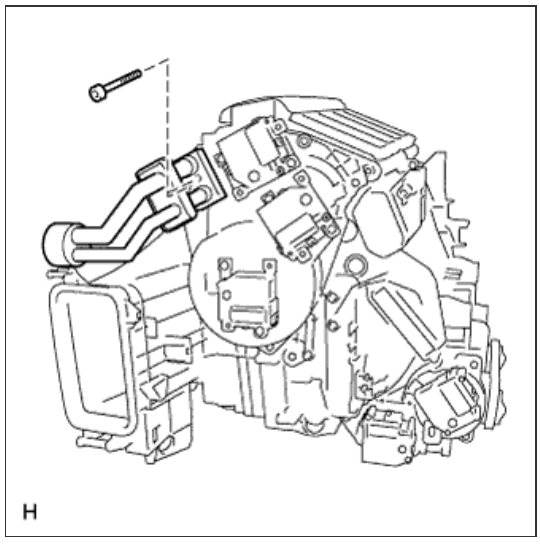


12. REMOVE REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH (for 4 Zone Type)

a. Remove the 3 screws and servo motor.

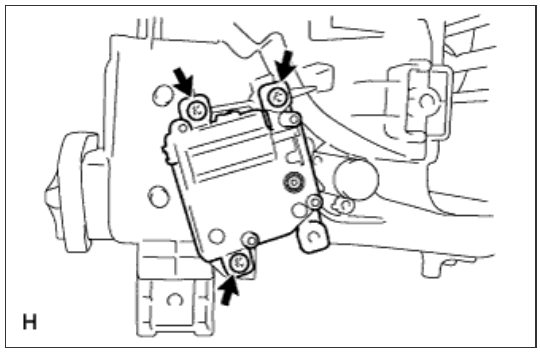

13. REMOVE SERVO MOTOR

a. Remove the 4 screws and servo motor unit.

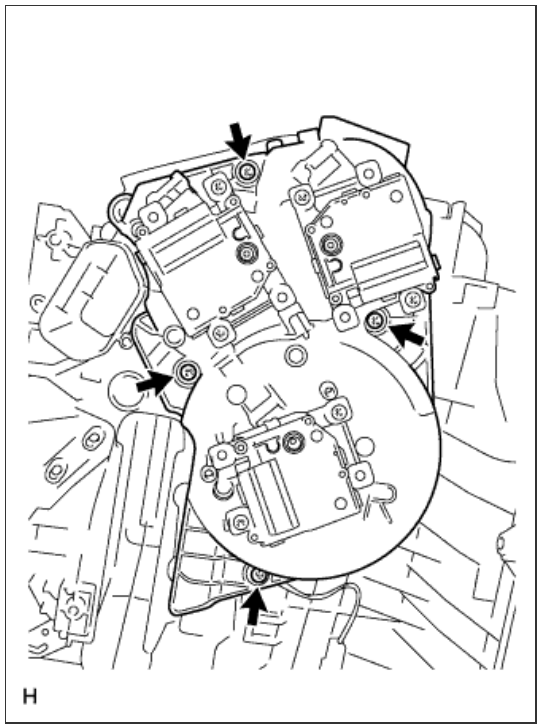


b. for 4 Zone Type:
Remove the front mode control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

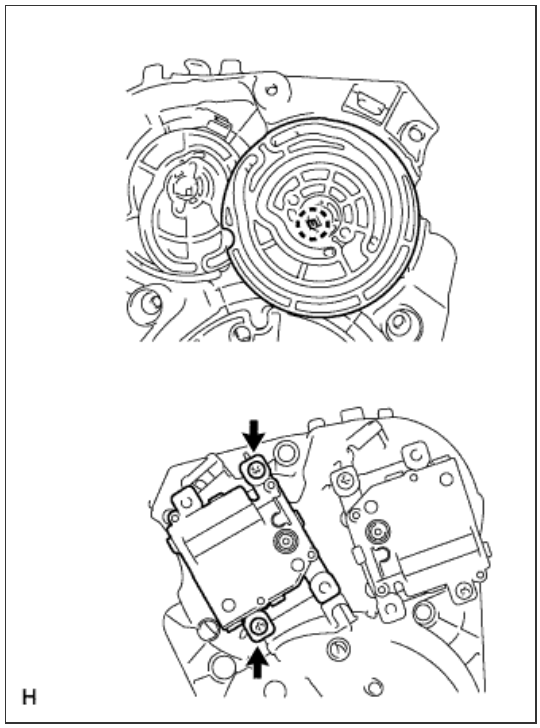


c. Remove the control air bypass damper control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

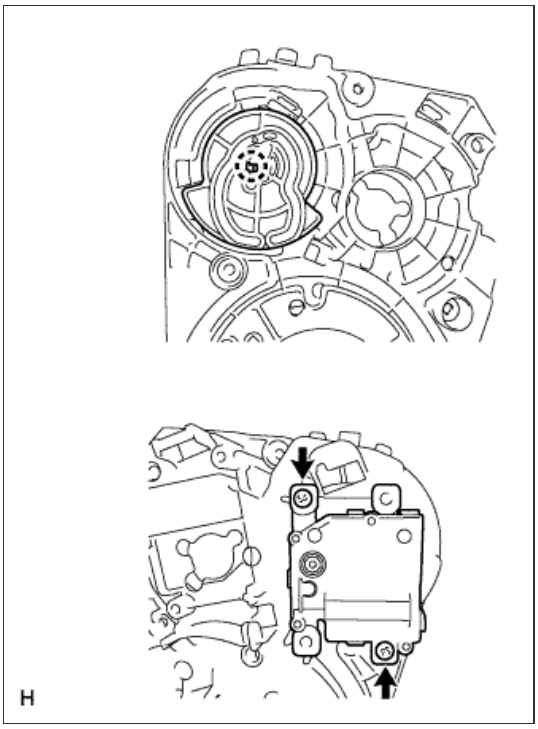


d. Remove the front air mix damper control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.


NOTICE:

Be careful not to damage the claw of the plate.

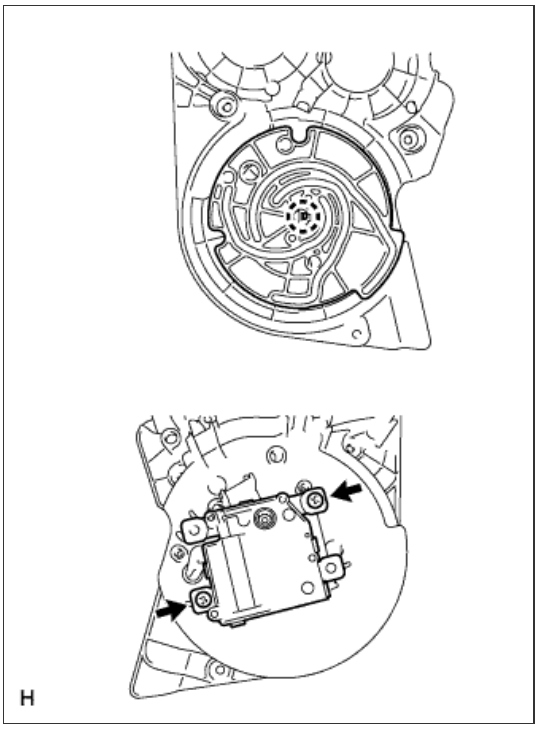


14. REMOVE SERVO MOTOR

a. Remove the 4 screws and servo motor unit.

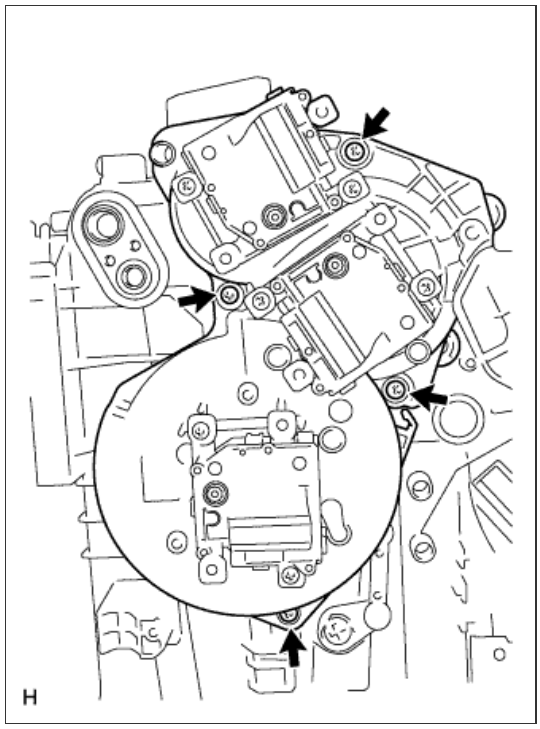

b. Remove the control air bypass damper control servo motor LH

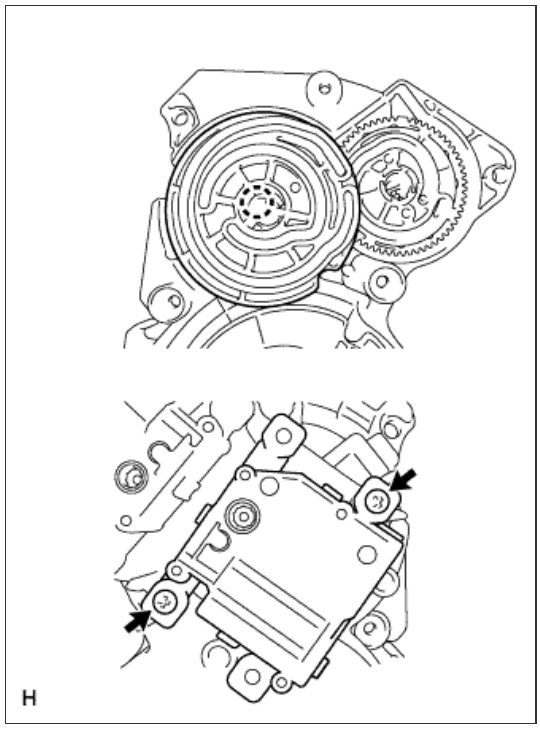

i. Remove the 2 screws.

ii. Detach the claw and remove the plate.

NOTICE:

Be careful not to damage the claw of the plate.


c. Remove the front mode control servo motor LH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

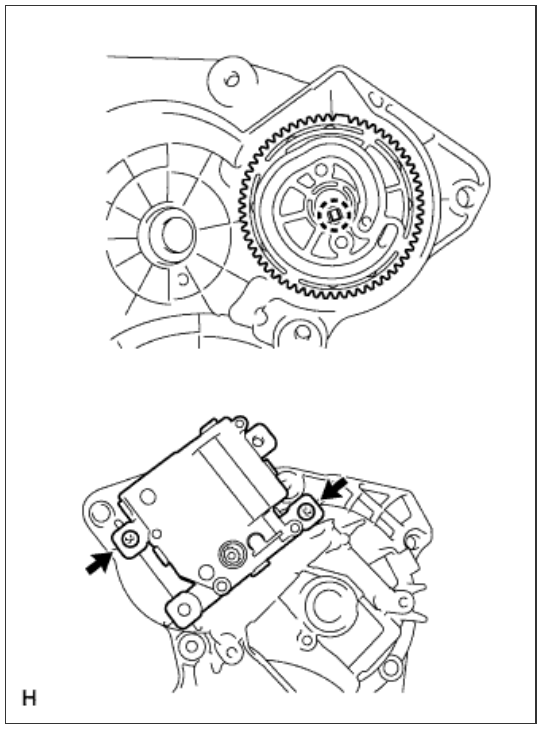


d. Remove the front air mix damper control servo motor LH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.


NOTICE:

Be careful not to damage the claw of the plate.

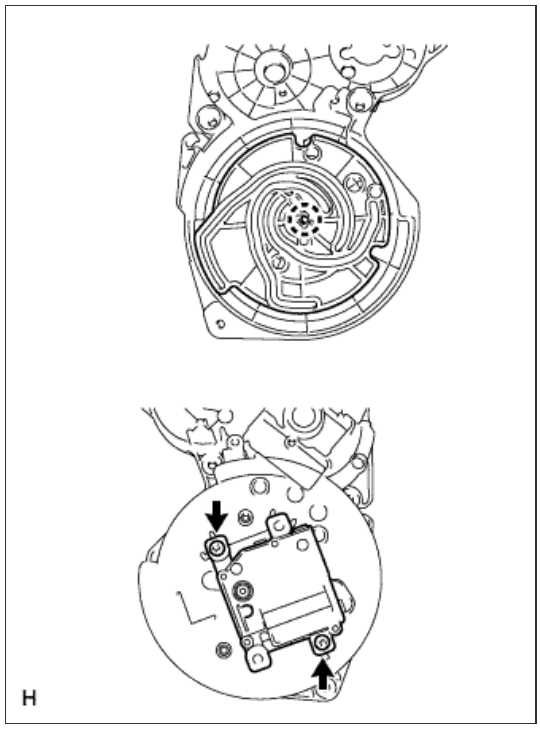


15. REMOVE SERVO MOTOR

a. Remove the 3 screws and servo motor unit.

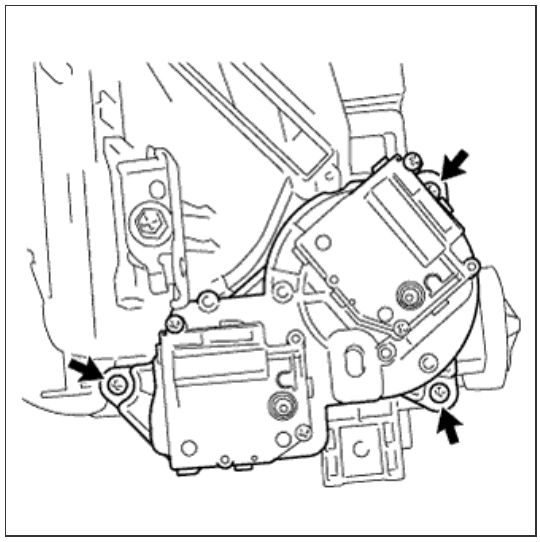

b. Remove the rear mode control servo motor.

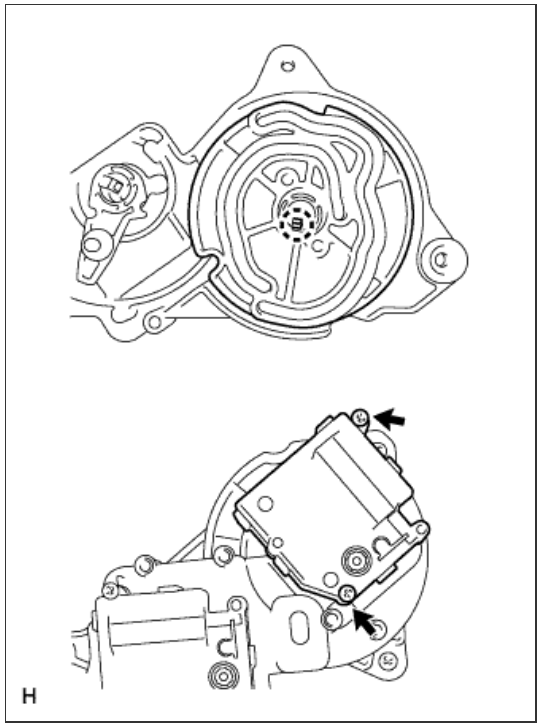

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.


c. Remove the rear air mix damper control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the lever and servo motor.

NOTICE:

Be careful not to damage the claw of the lever.

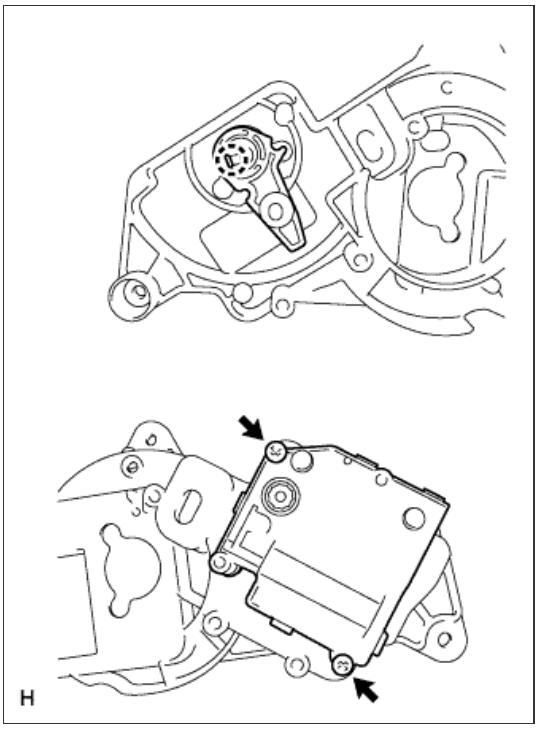


16. REMOVE NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY

a. Remove the 7 screws.

b. Detach the 6 claws and remove the unit case.

c. Remove the evaporator.

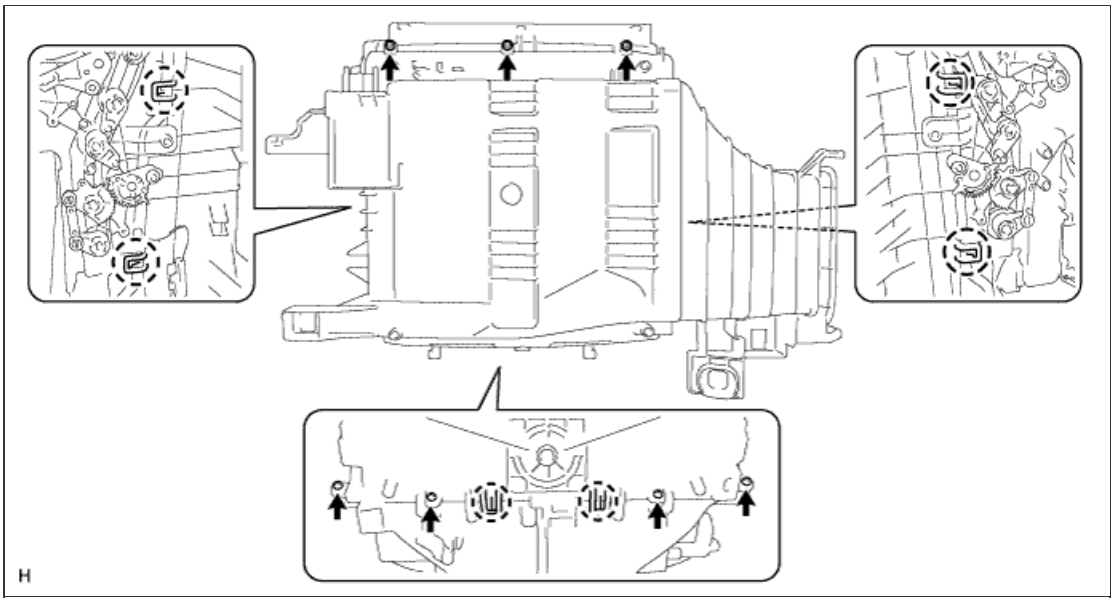

17. REMOVE FRONT EVAPORATOR TEMPERATURE SENSOR

for Preparation Click here

1. INSTALL FRONT EVAPORATOR TEMPERATURE SENSOR


NOTICE:

If reusing the evaporator, do not insert the sensor into a location where the sensor was previously inserted.

a. Insert the sensor to a location that is 1 fin to the right or left of its previous location.

Standard Dimension:

Area	Specified Condition
a	50 mm (1.97 in.)
b	34.3 mm (1.35 in.)
c	20.9 mm (1.97 in.)

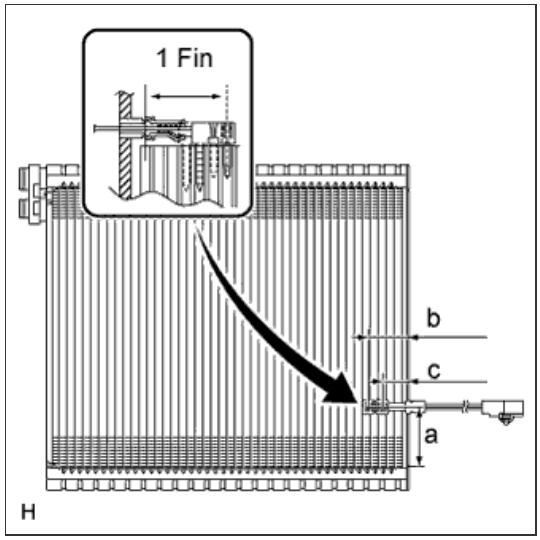


2. INSTALL NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY

a. Install the evaporator.

b. Attach the 6 claws to install the unit case.

c. Install the 7 screws.

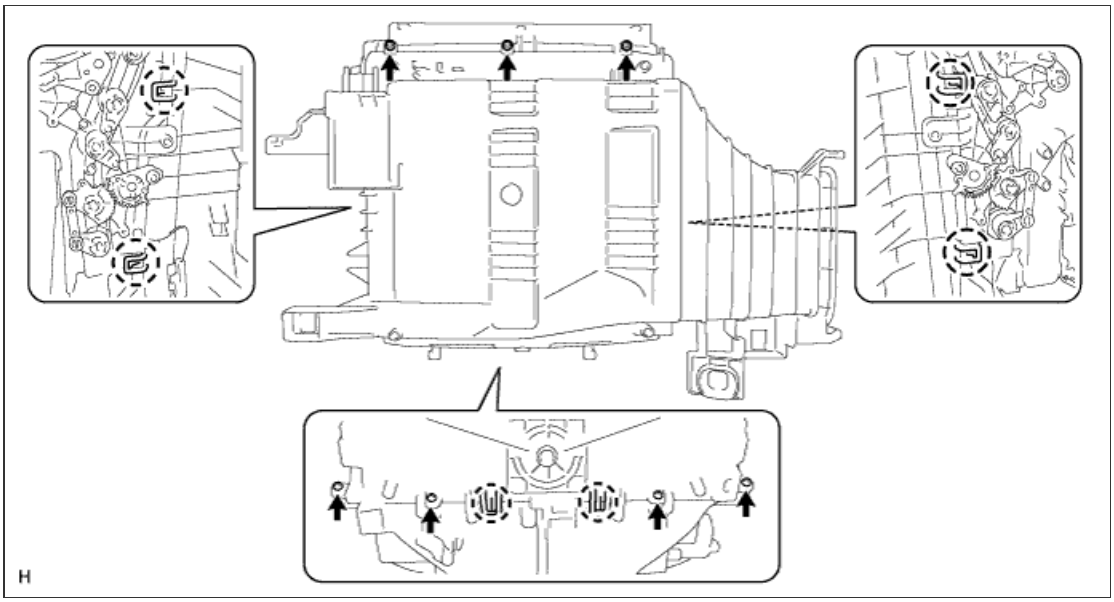


3. INSTALL SERVO MOTOR

a. Install the rear air mix damper control servo motor RH.

i. Attach the claw to install the lever and servo motor.

ii. Install the 2 screws.

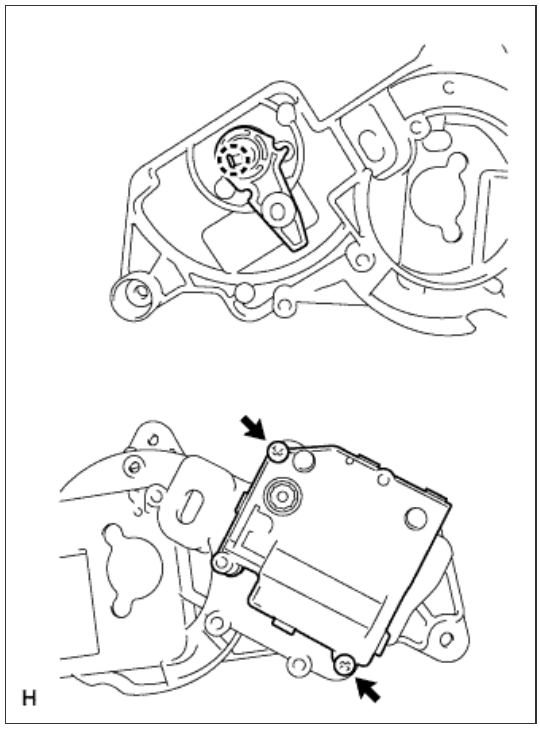


b. Install the rear mode control servo motor.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

c. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

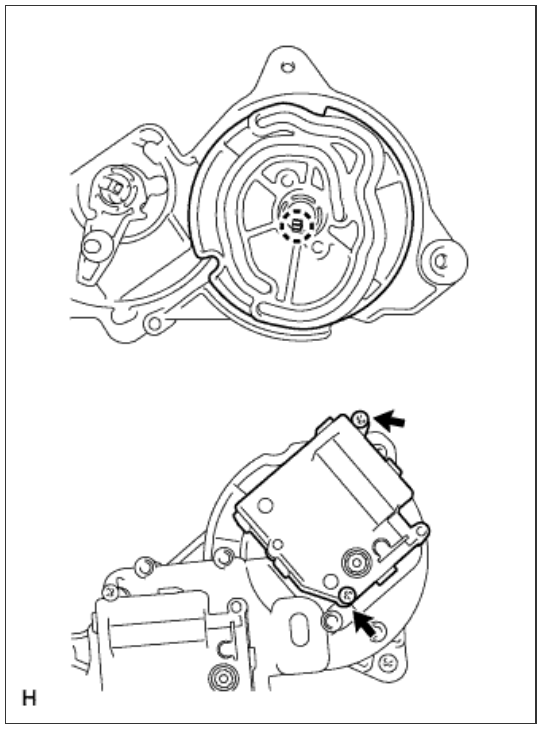

d. Install the 3 screws.

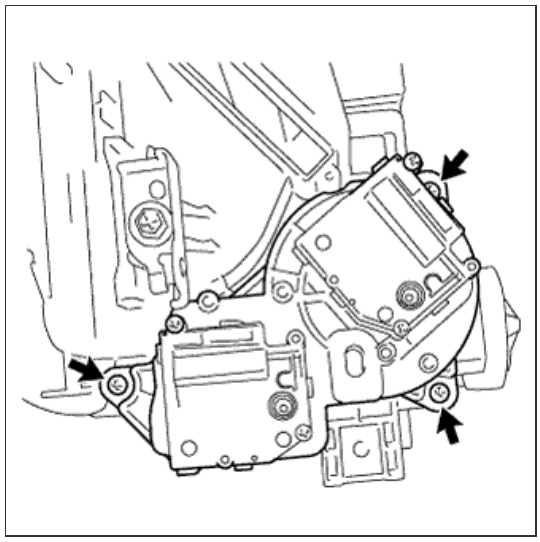


4. INSTALL SERVO MOTOR

a. Install the front air mix damper control servo motor LH.

i. Attach the claw to install the plate and servo motor.


ii. Install the 2 screws.

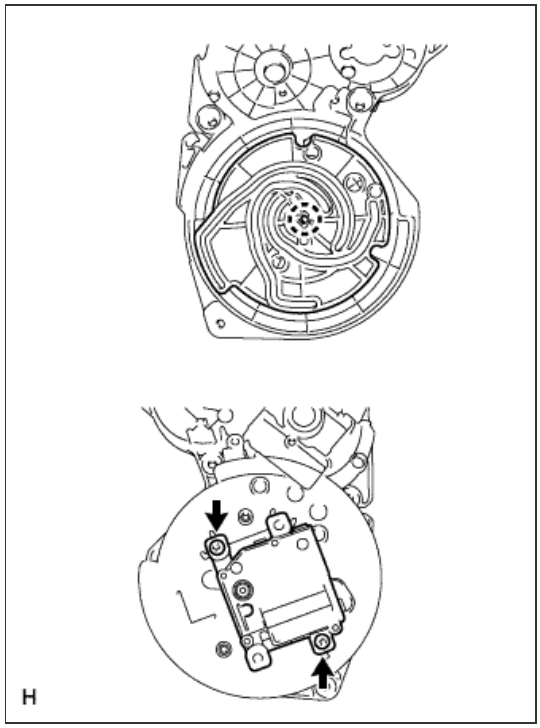

b. Install the front mode control servo motor LH.

i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

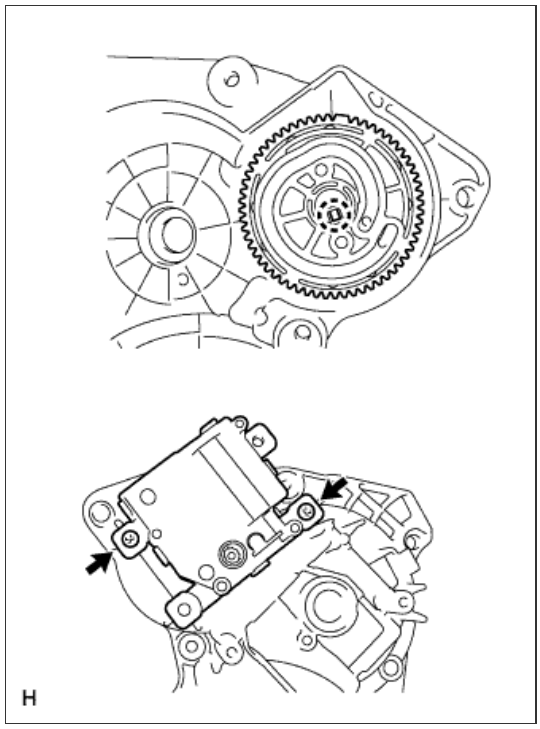


c. Install the control air bypass damper control servo motor LH.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

d. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

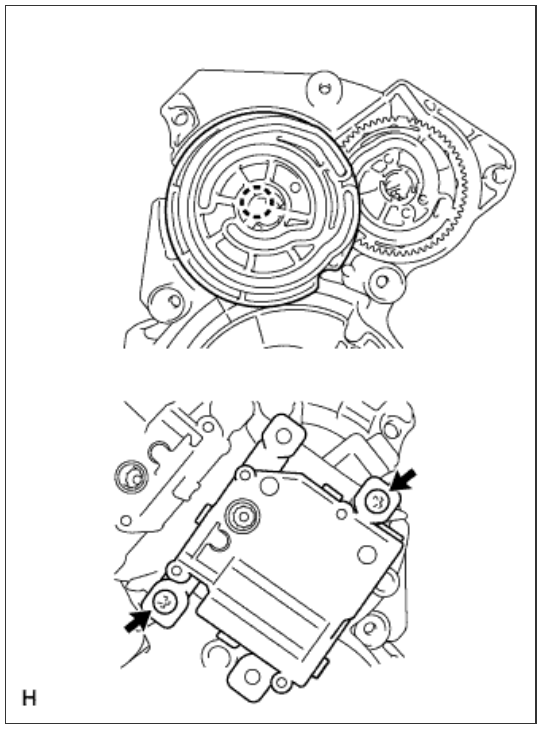


e. Install the 4 screws.

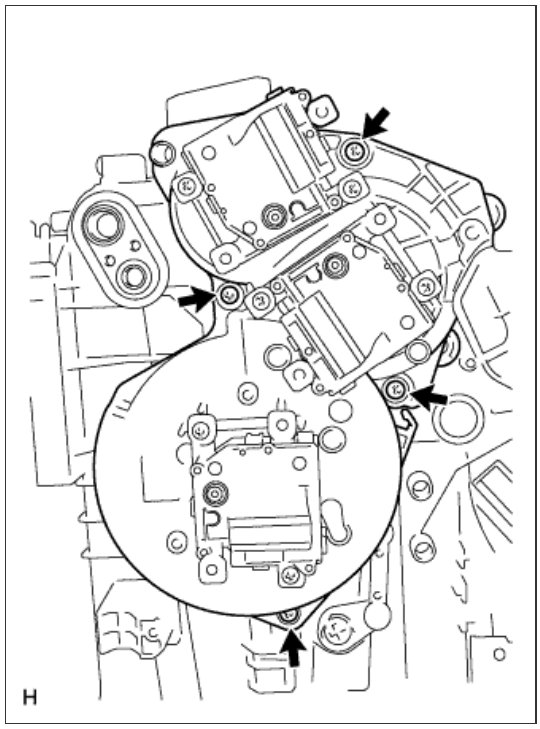

5. INSTALL SERVO MOTOR

a. Install the front air mix damper control servo motor RH.

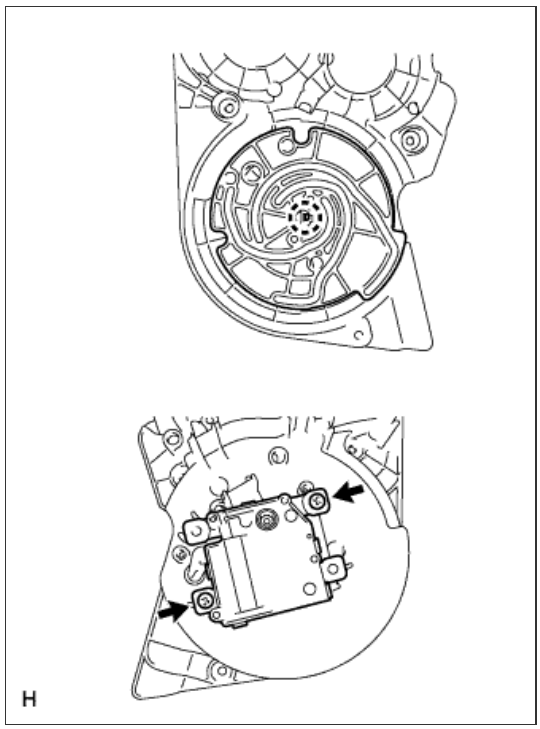


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

b. Install the control air bypass damper control servo motor RH.

i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

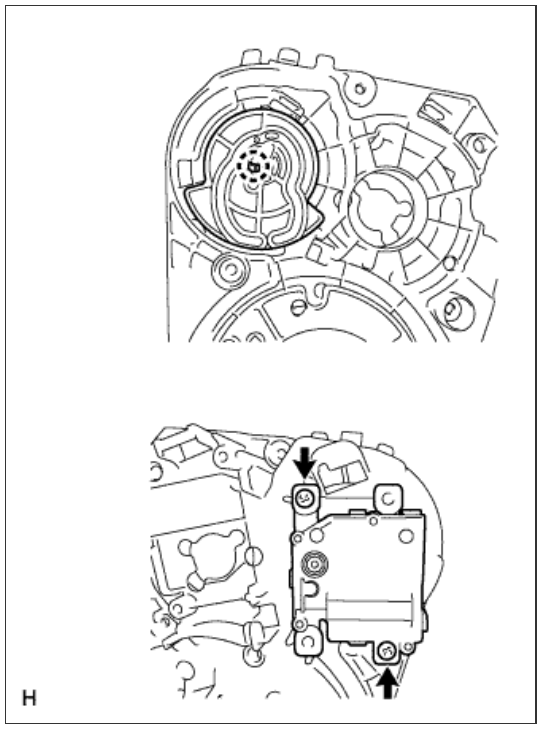


c. for 4 Zone Type:
Install the front mode control servo motor RH.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

d. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

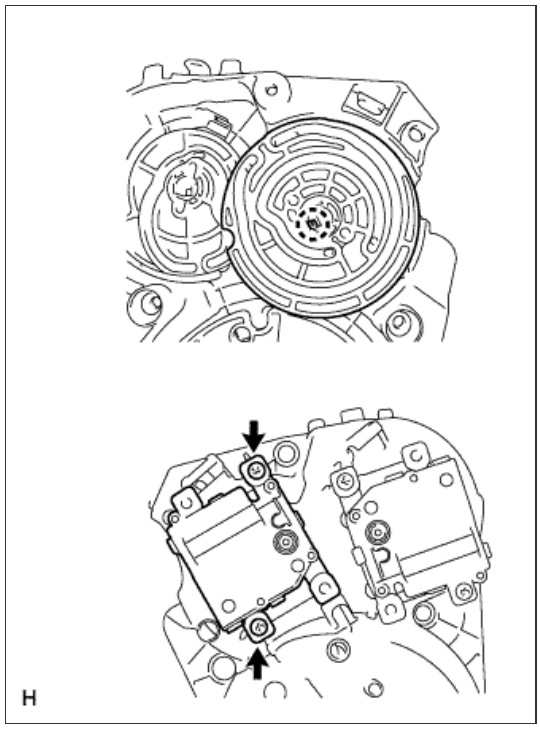


e. Install the 4 screws.

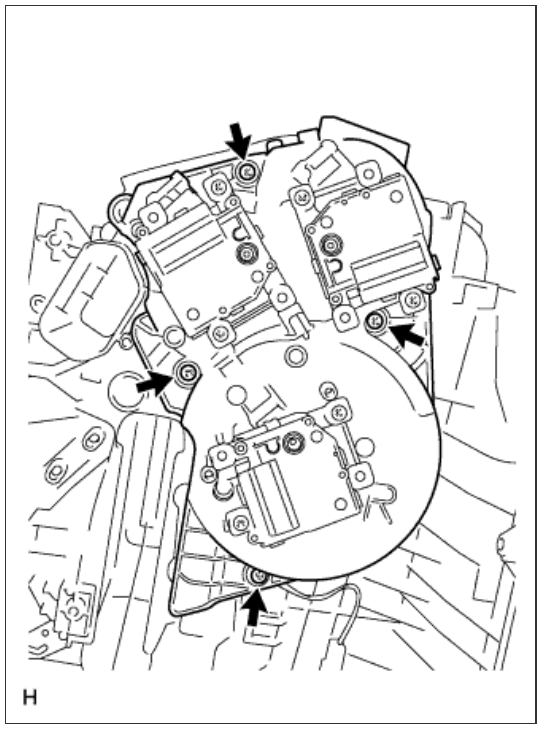

6. INSTALL REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH (for 4 Zone Type)

a. Install the servo motor with the 3 screws.

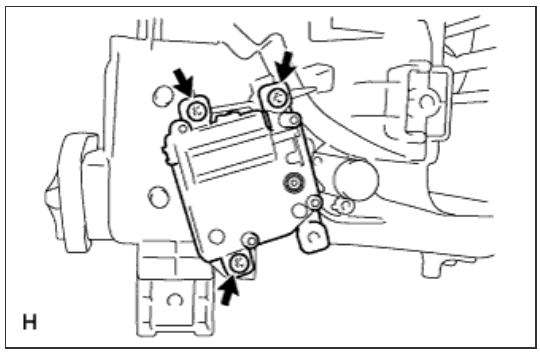

7. INSTALL COOLER EXPANSION VALVE (w/o Cool Box)

a. Sufficiently apply compressor oil to 4 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or e ivalent


b. Install 2 O-rings to the cooler evaporator.

c. Install 2 O-rings to the air conditioner tube and accessory assembly.


d. Install the cooler expansion valve and air conditioner tube and accessory assembly to the evaporator.

e. Using a 4 mm hexagon wrench, install the 2 bolts.

Tor e:
3.5 N*m 36 k f*cm 31 in.*lbf

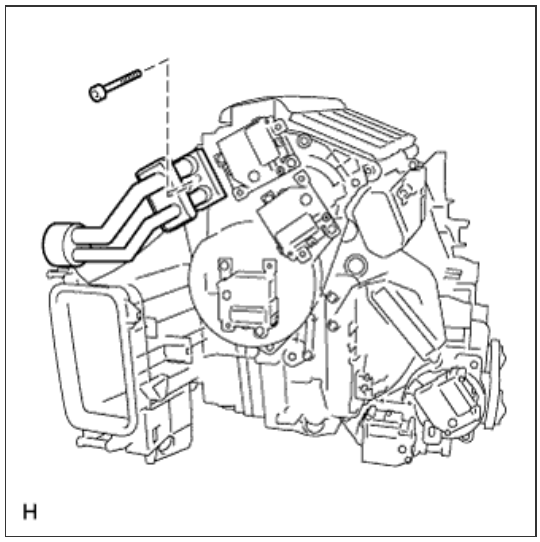

f. Install new packing.

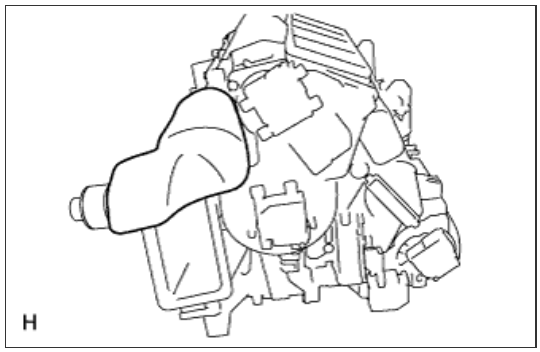

8. INSTALL AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY (w/ Cool Box)

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or e ivalent


b. Install the 2 O-rings to the air conditioner tube and accessory assembly.

c. Install the air conditioner tube and accessory assembly to the evaporator.

d. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.

Tor e:
3.5 N*m 36 k f*cm 31 in.*lbf

e. Install the bracket with the screw.

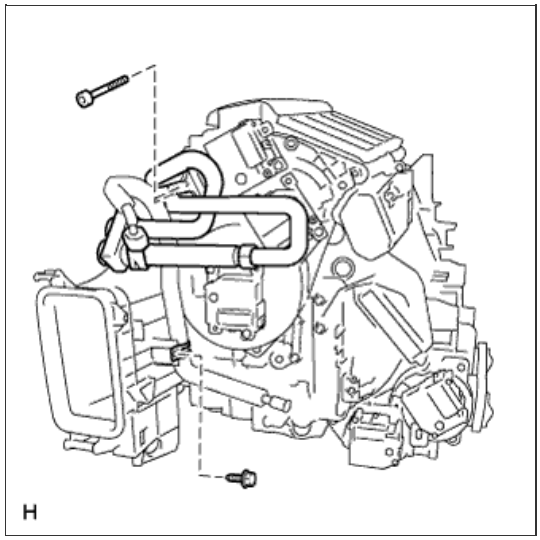

9. INSTALL COOLER EXPANSION VALVE (w/ Cool Box)

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or e ivalent

b. Install the 2 O-rings to the No. 2 connector tube.

c. Install the No. 2 connector tube, expansion valve and No. 3 connector tube.

d. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.

Tor e:
3.5 N*m 36 k f*cm 31 in.*lbf



e. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.


Compressor oil:
ND-OIL 8 or e ivalent

f. Install the 2 O-rings to the No. 1 connector tube.


. Install the No. 1 connector tube.

h. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.


Tor e:
3.5 N*m 36 k f*cm 31 in.*lbf

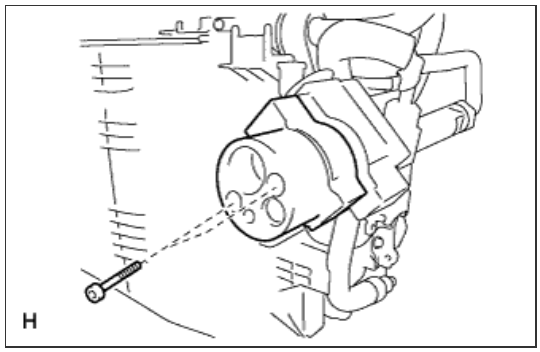


i. Using a 4 mm hexagon wrench, install the bracket with the hexagon bolt and screw.

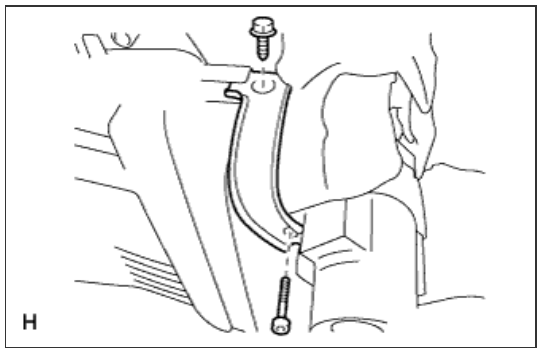

. Install new butyl tape.

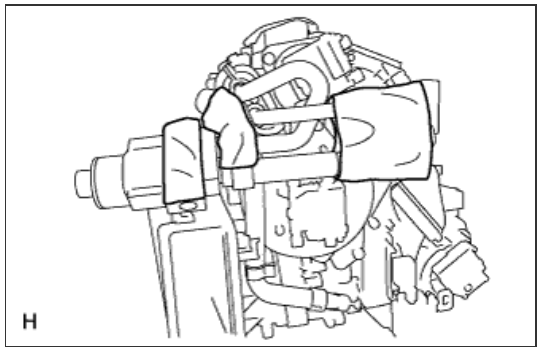


k. Install new packing.

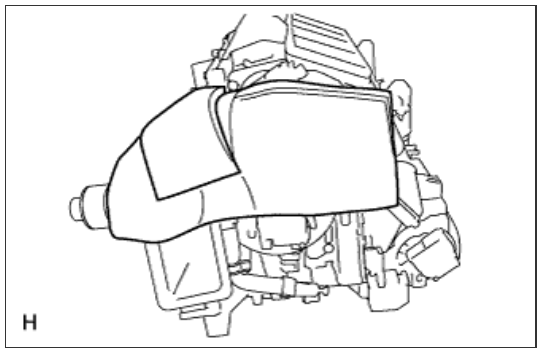

1 . INSTALL AIR CONDITIONING RADIATOR ASSEMBLY

a. Install the radiator.


b. Install the bracket with the screw.

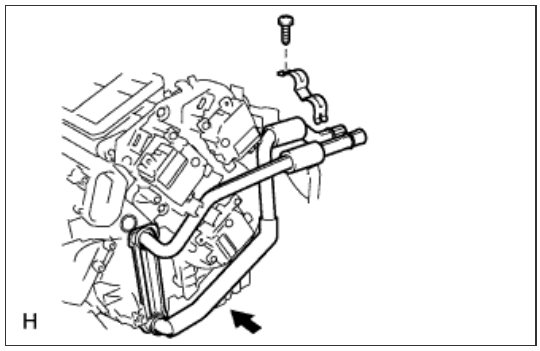

11. INSTALL AIR CONDITIONER HARNESS

a. Attach the clamps to install the harness.


b. Connect the connectors.

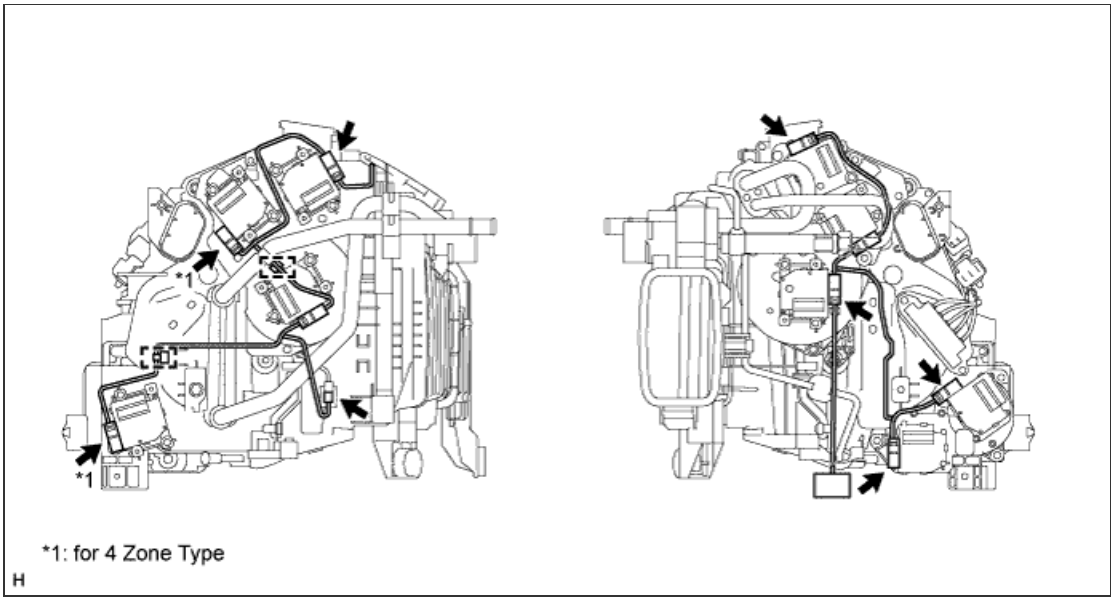

12. INSTALL UIC HEATER ASSEMBLY (w/ PTC Heater)

a. Install the quick heater with the 2 screws.

b. Attach the 3 clamps.

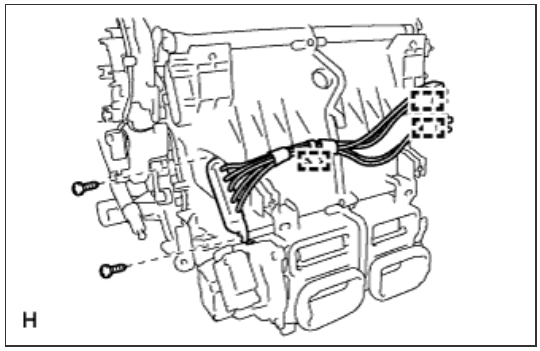

13. INSTALL COOL BOX LI UID TUBE (w/ Cool Box)


a. Lubricate 2 new O-rings with compressor oil and install them to the liquid tube.

Compressor oil:
ND-OIL 8 or e ivalent

b. Connect the liquid tube with the piping clamp.

NOTICE:


After connection, check the claw engagement of the piping clamp.

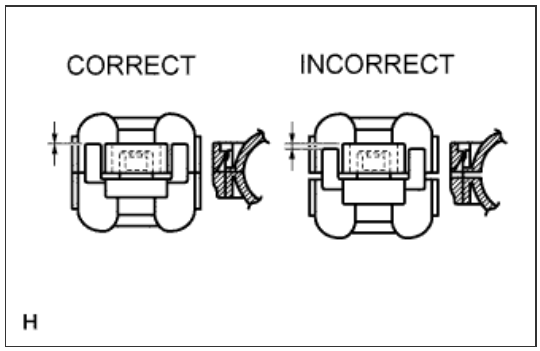

c. Attach the clamp.


d. Attach the 2 claws to install the protective cover.

e. Install the 3 screws.

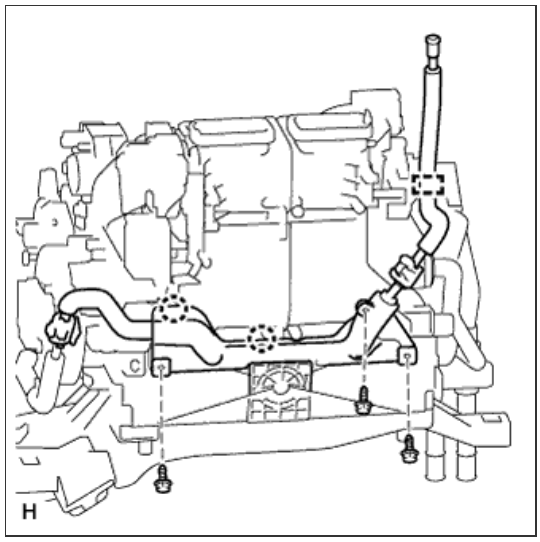


14. INSTALL ASPIRATOR

a. Attach the 2 claws to install the aspirator.

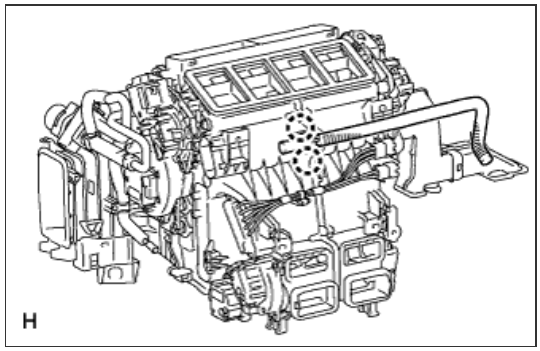


15. INSTALL NO. 4 AIR DUCT SUB-ASSEMBLY

a. Install the duct with the screw.

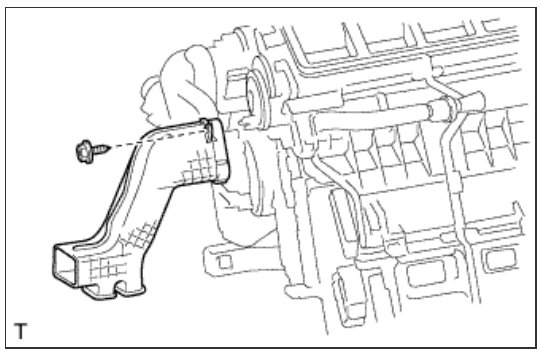


16. INSTALL NO. 5 AIR DUCT SUB-ASSEMBLY

a. Install the duct with the screw.

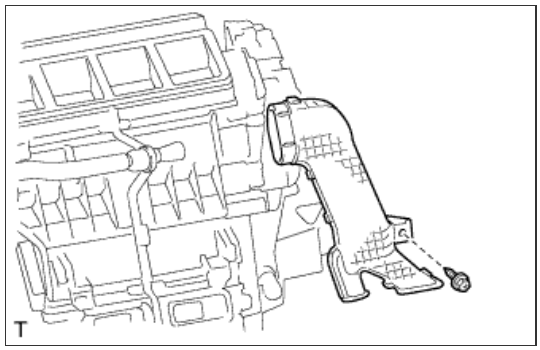

17. INSTALL BLO ER ASSEMBLY

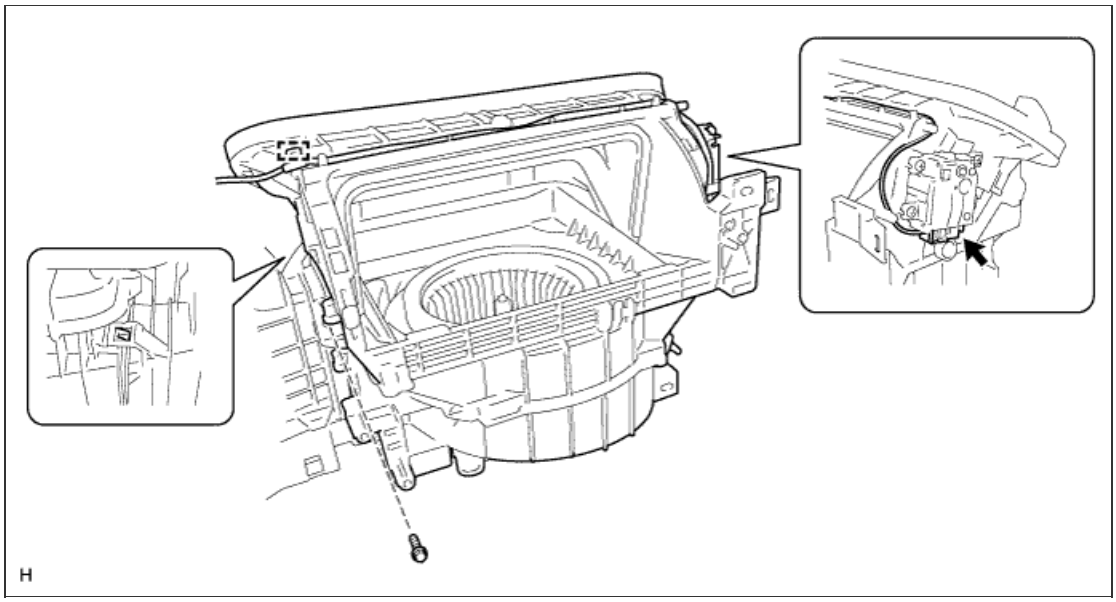

a. Attach the claw to install the blower unit.

b. Connect the connector and clamp.


c. Install the screw.

for Preparation Click here

1. INSTALL AIR CONDITIONING UNIT ASSEMBLY

a. Install the air conditioning unit with the 2 nuts.


Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

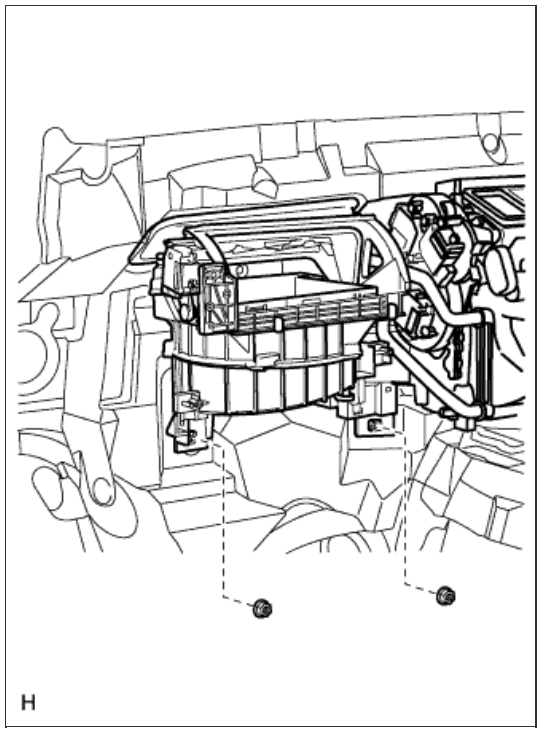

2. INSTALL AIR CONDITIONING HOSE AND ACCESSORY (w/ Cool Box)

a. Lubricate 2 new O-rings with compressor oil and install them to the air conditioning hose and accessory.

Compressor oil:
ND-OIL 8 or equivalent

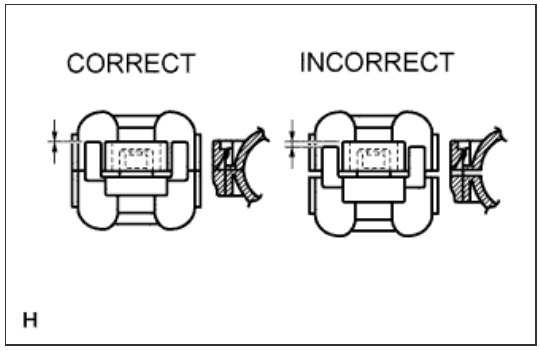


b. Install the air conditioning hose and accessory with the piping clamp.

NOTICE:

After connection, check the claw engagement of the piping clamp.

c. Install the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

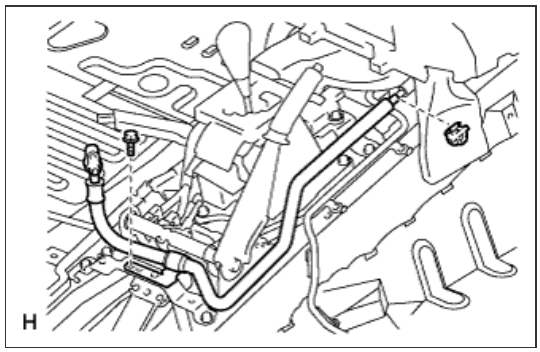

3. INSTALL INSTRUMENT PANEL REINFORCEMENT ASSEMBLY

a. Install the instrument panel reinforcement.

i. Install the instrument panel reinforcement with the 7 bolts and screw.

Torque:
for bolt:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }
for screw:
6.0 N*m{ 61 kgf*cm , 53 in.*lbf }

ii. for Passenger Side:
Using a 12 mm hexagon wrench, install the 2 collars.

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

iii. for Passenger Side:
Using a T40 "TORX" socket, install the 2 "TORX" bolts.


Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

iv. for Passenger Side:
Install the 2 caps.


v. for Driver Side:
Install the 3 bolts.

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

vi. for Driver Side:
Install the 3 caps.

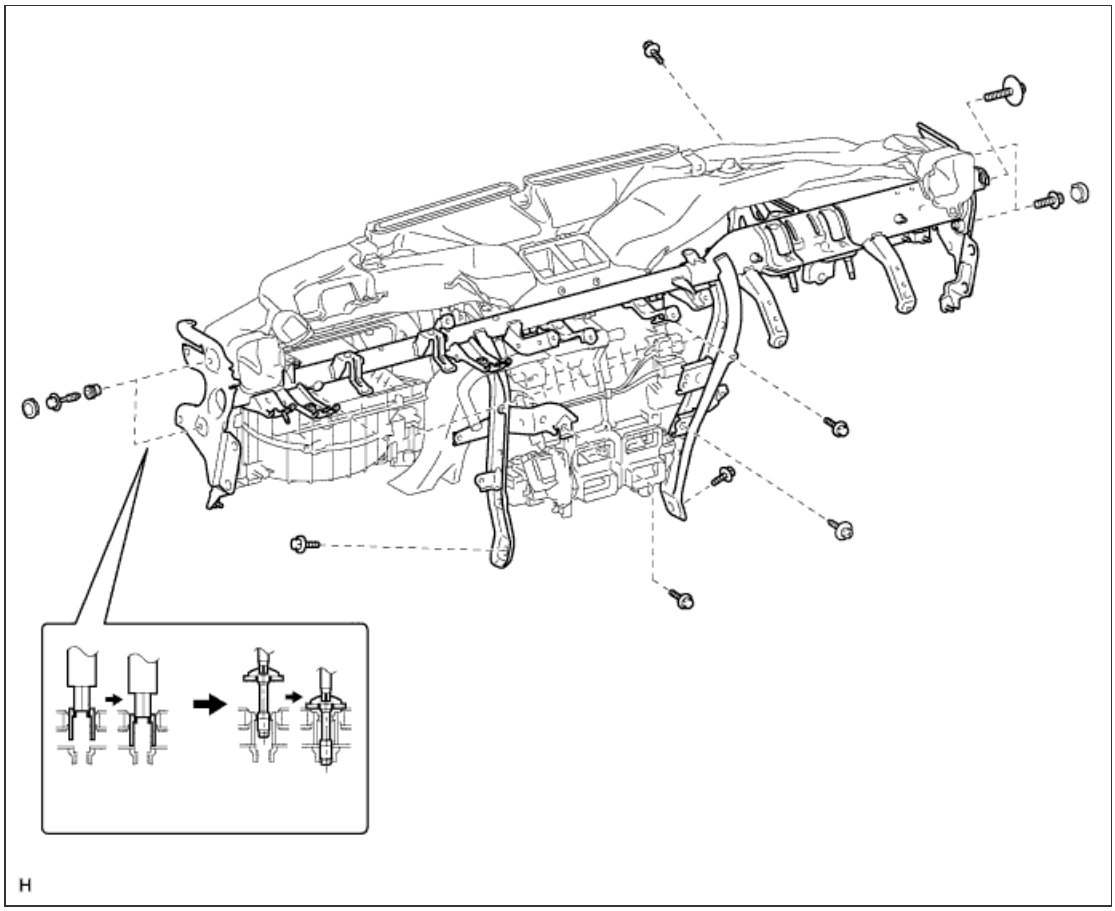


b. Attach the clamps and connectors to the wire harness.

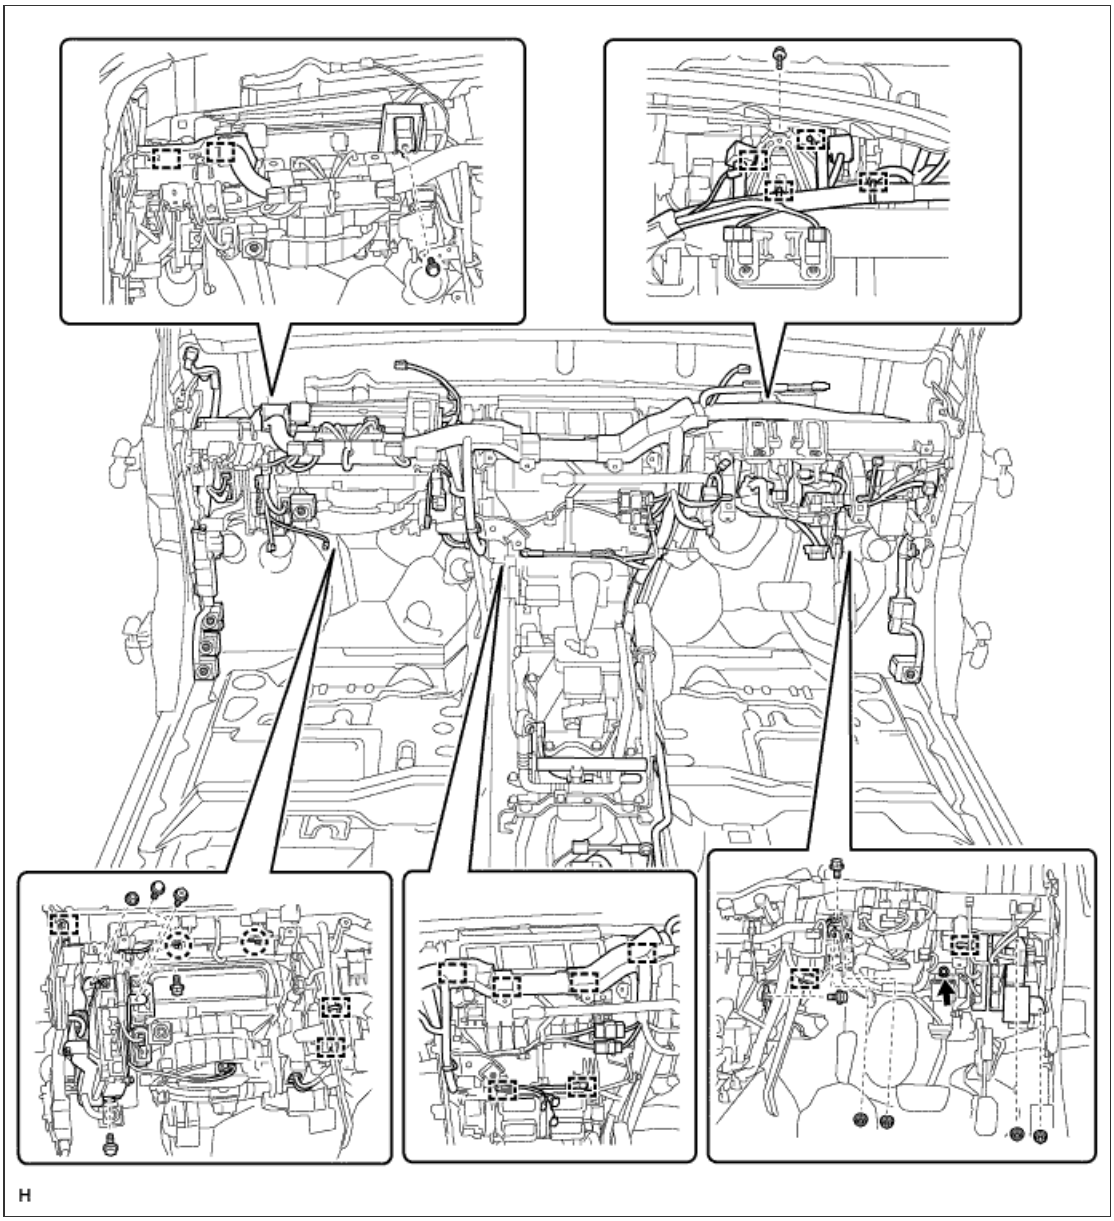

4. INSTALL HEATER TO REGISTER DUCT ASSEMBLY

a. Attach the 2 claws to install the duct.

b. Install the 3 clips.

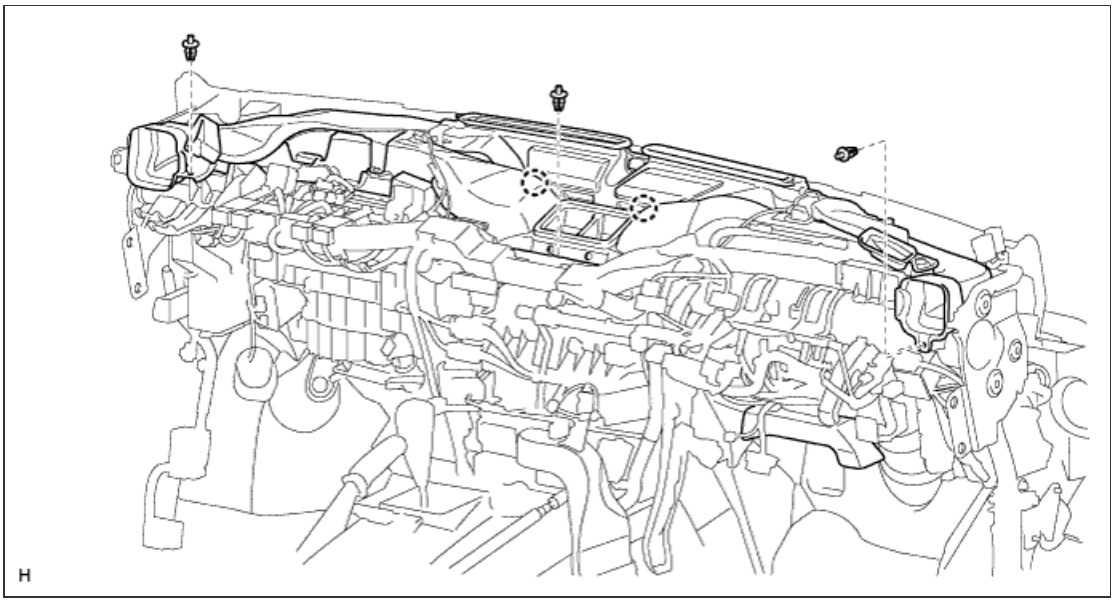

5. INSTALL STEERING COLUMN ASSEMBLY


a. for Power Tilt and Power Telescopic Steering Column:
Install the steering column (Click here).

b. for Manual Tilt and Manual Telescopic Steering Column:
Install the steering column (Click here).

6. INSTALL NO. 3 AIR DUCT SUB-ASSEMBLY

a. Attach the 2 claws to install the duct.

b. Install the clip.

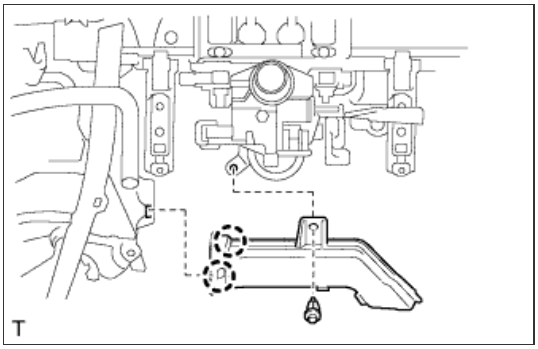

7. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY

a. Install the instrument panel (Click here).


8. INSTALL FRONT IPER MOTOR AND BRAC E

a. Install the front wiper motor and bracket (Click here).

9. CONNECT HEATER ATER INLET HOSE AND HEATER ATER OUTLET HOSE

a. Connect the 2 heater water hoses.

b. Using pliers, grip the claws of the clips and slide the 2 clips.

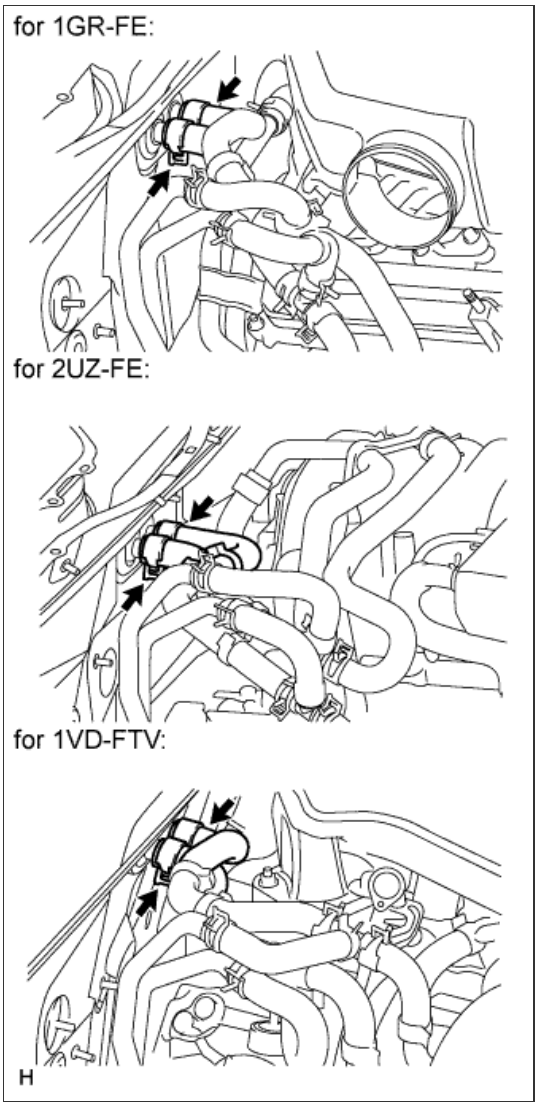

10. CONNECT AIR CONDITIONING TUBE ASSEMBLY

a. Remove the attached vinyl tape from the tubes.

b. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the air conditioning tube assembly.


Compressor oil:
ND-OIL 8 or equivalent

c. Install the 2 O-rings to the air conditioning tube assembly.

d. Connect the air conditioning tube assembly.

e. Attach the plate as shown in the illustration and install the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

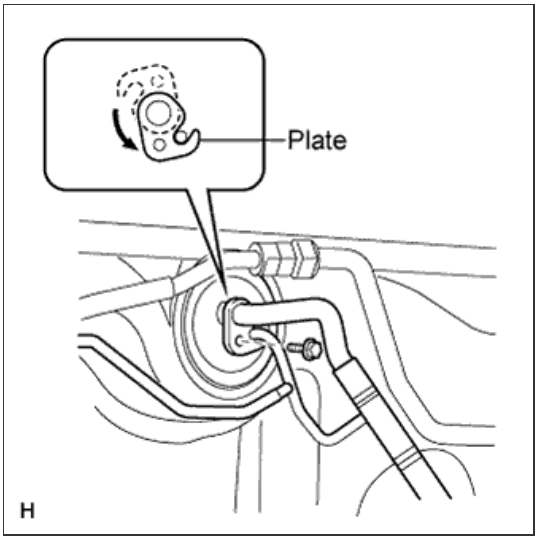

11. CONNECT CABLE TO NEGATI BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

12. CHEC SRS ARNING LIGHT

a. Check the SRS warning light (Click here).

13. ADD ENGINE COOLANT

a. for 1VD-FTV:
Add engine coolant (Click here).

b. for 2UZ-FE:
Add engine coolant (Click here).

c. for 1GR-FE:
Add engine coolant (Click here).

14. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Stan ar :

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

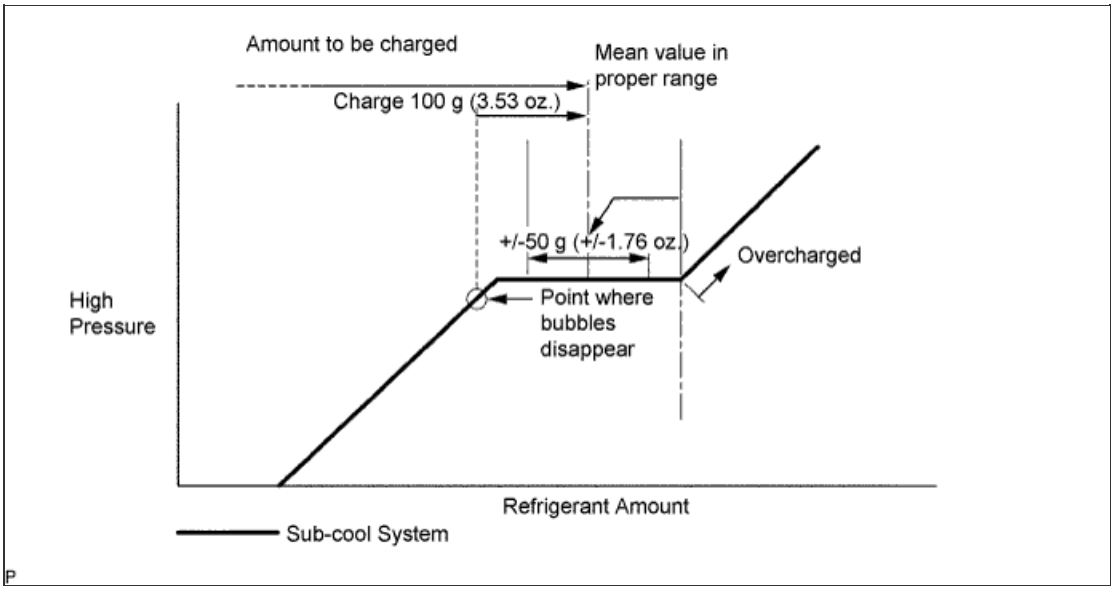

NOTICE:

- Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properl without an refrigerant, an will overheat.

- **Approximatel 200 g (7.05 oz.) of refrigerant ma nee to be charge after bubbles isappear. The refrigerant amount shoul be checke b measuring its quantity, and not with the sight glass.**

15. WARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

16. CHEC FOR ENGINE COOLANT LEA

a. for 1VD-FTV:
Check for engine coolant leaks (Click here).

b. for 2UZ-FE:
Check for engine coolant leaks (Click here).

c. for 1GR-FE:
Check for engine coolant leaks (Click here).

17. CHEC FOR REFRIGERANT GAS LEA

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.


. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

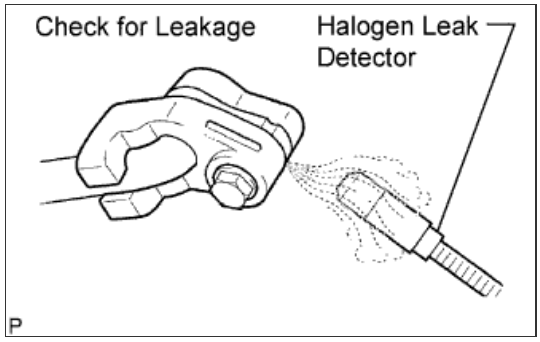

18. INSTALL UPPER RADIATOR SUPPORT SEAL


a. Install the radiator support seal with the 7 clips.

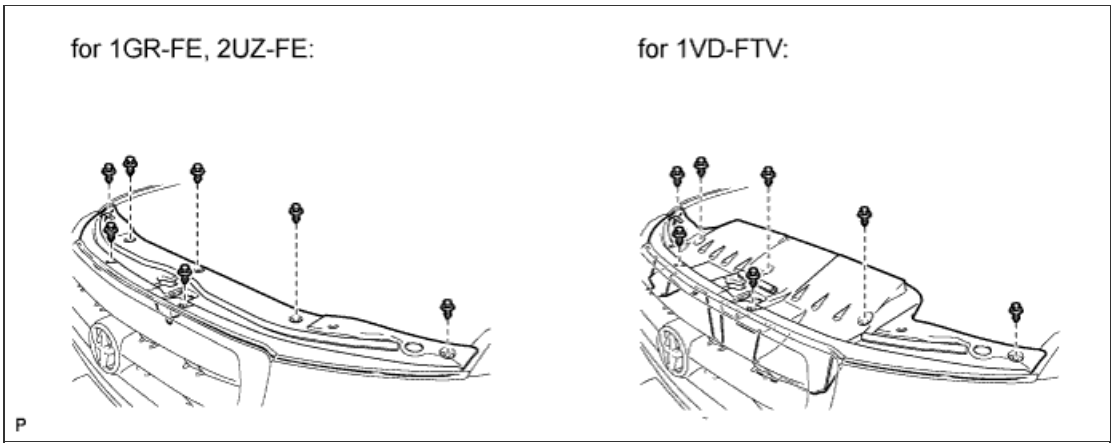

19. INSTALL NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. Install the No. 1 engine under cover with the 10 bolts.

Torque:
29 N*m{ 296 kgf*cm , 21 ft.*lbf }

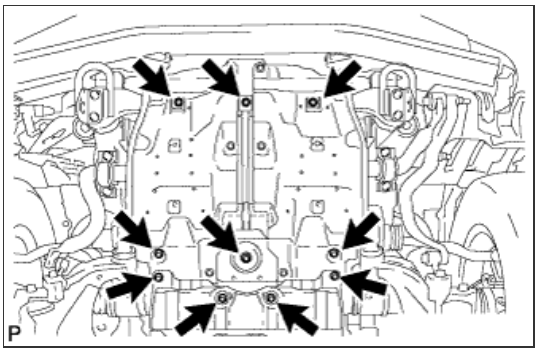

20. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Install the front fender splash shield (Click here).

b. w/Winch:
Install the front fender splash shield (Click here).

21. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard:
Install the front fender splash shield (Click here).


b. w/Winch:
Install the front fender splash shield (Click here).

for Preparation Click here

1. INSTALL AIR CONDITIONING UNIT ASSEMBLY

a. Install the air conditioning unit with the 2 nuts.


Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

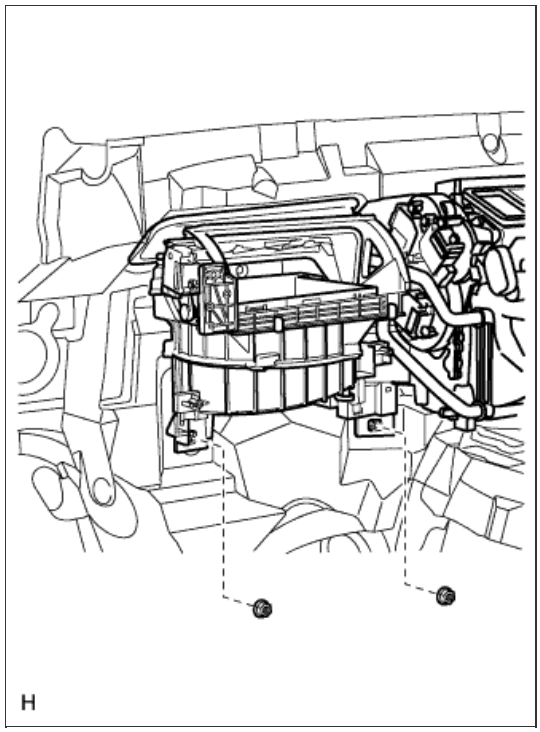

2. INSTALL AIR CONDITIONING HOSE AND ACCESSORY (w/ Cool Box)

a. Lubricate 2 new O-rings with compressor oil and install them to the air conditioning hose and accessory.

Compressor oil:
ND-OIL 8 or equivalent

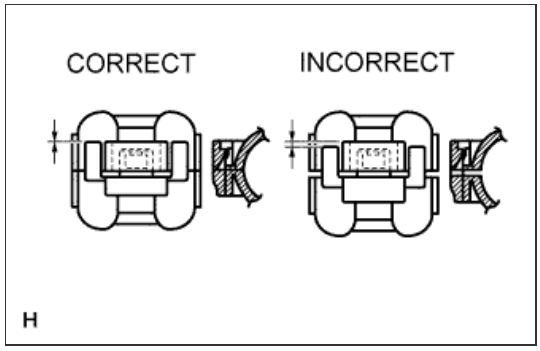


b. Install the air conditioning hose and accessory with the piping clamp.

NOTICE:

After connection, check the claw engagement of the piping clamp.

c. Install the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

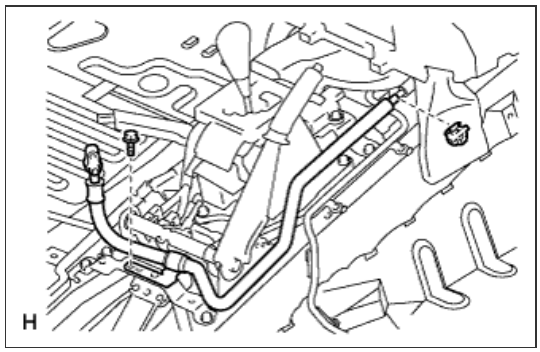

3. INSTALL INSTRUMENT PANEL REINFORCEMENT ASSEMBLY

a. Install the instrument panel reinforcement.

i. Install the instrument panel reinforcement with the 7 bolts and screw.

Torque:
for bolt:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }
for screw:
6.0 N*m{ 61 kgf*cm , 53 in.*lbf }

ii. for Passenger Side:
Using a 12 mm hexagon wrench, install the 2 collars.

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

iii. for Passenger Side:
Using a T40 "TORX" socket, install the 2 "TORX" bolts.


Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

iv. for Passenger Side:
Install the 2 caps.


v. for Driver Side:
Install the 3 bolts.

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

vi. for Driver Side:
Install the 3 caps.

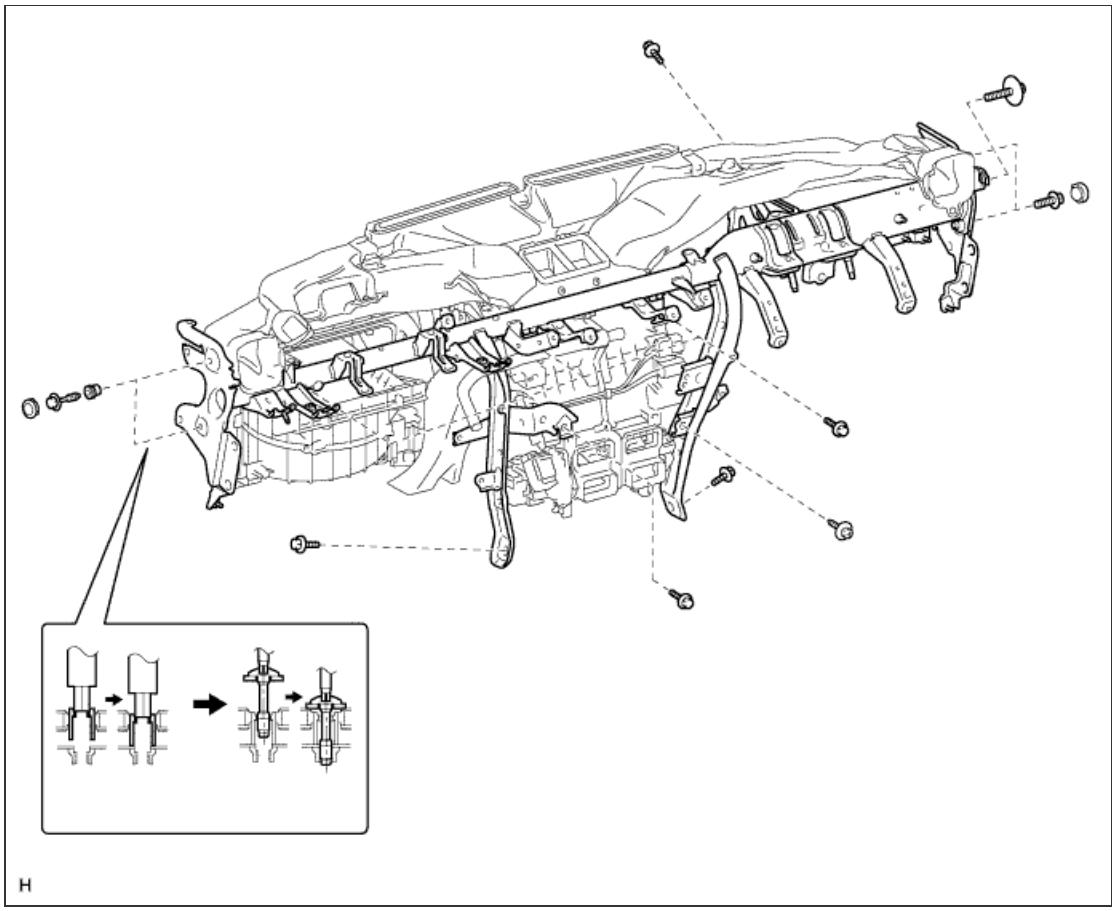


b. Attach the clamps and connectors to the wire harness.

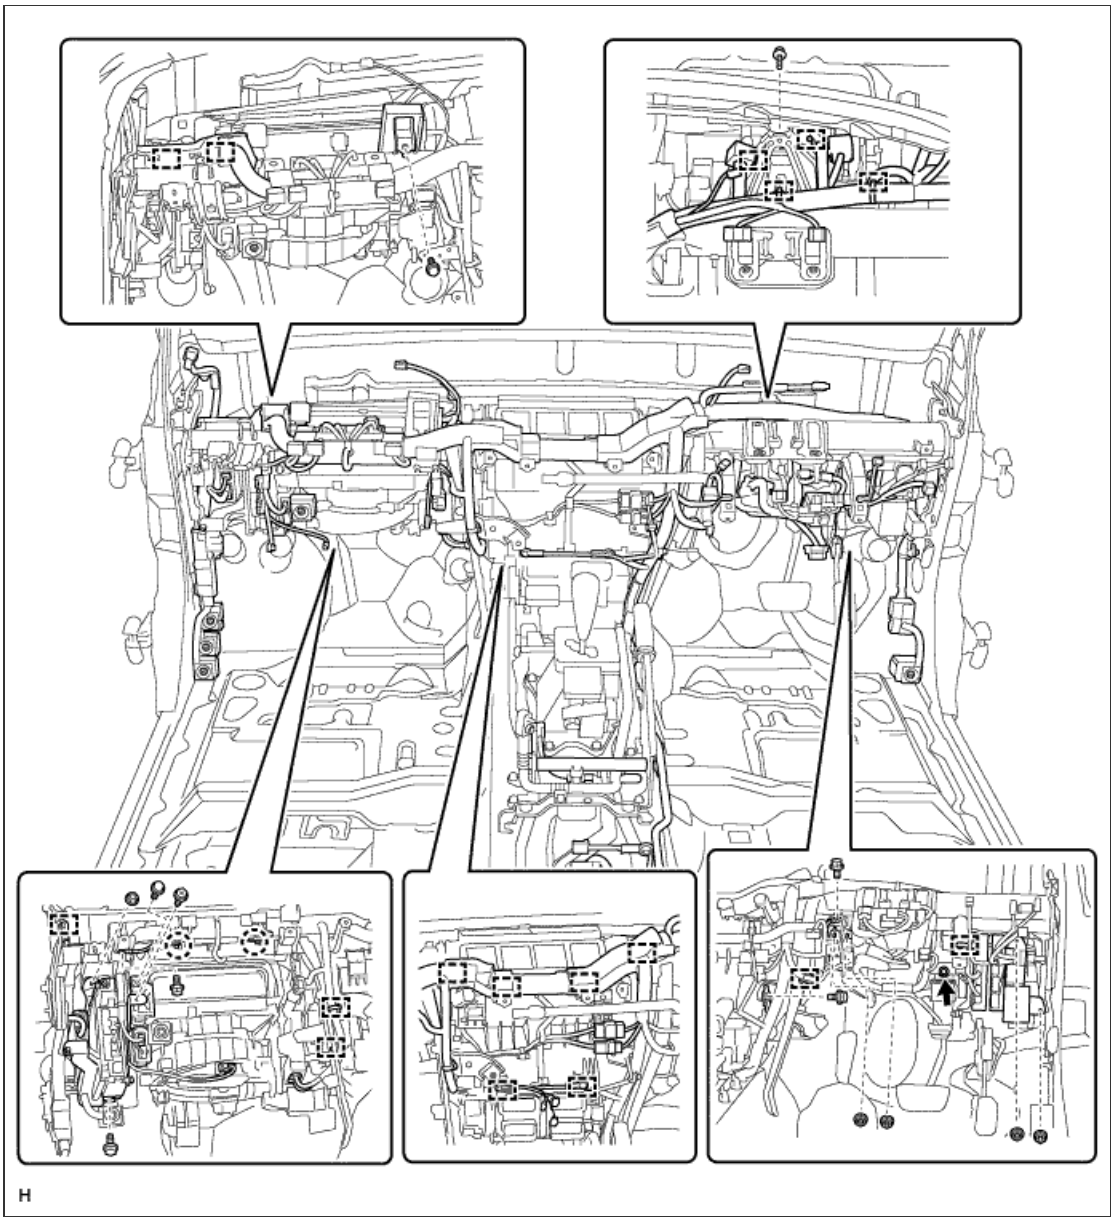

4. INSTALL HEATER TO REGISTER DUCT ASSEMBLY

a. Attach the 2 claws to install the duct.

b. Install the 3 clips.

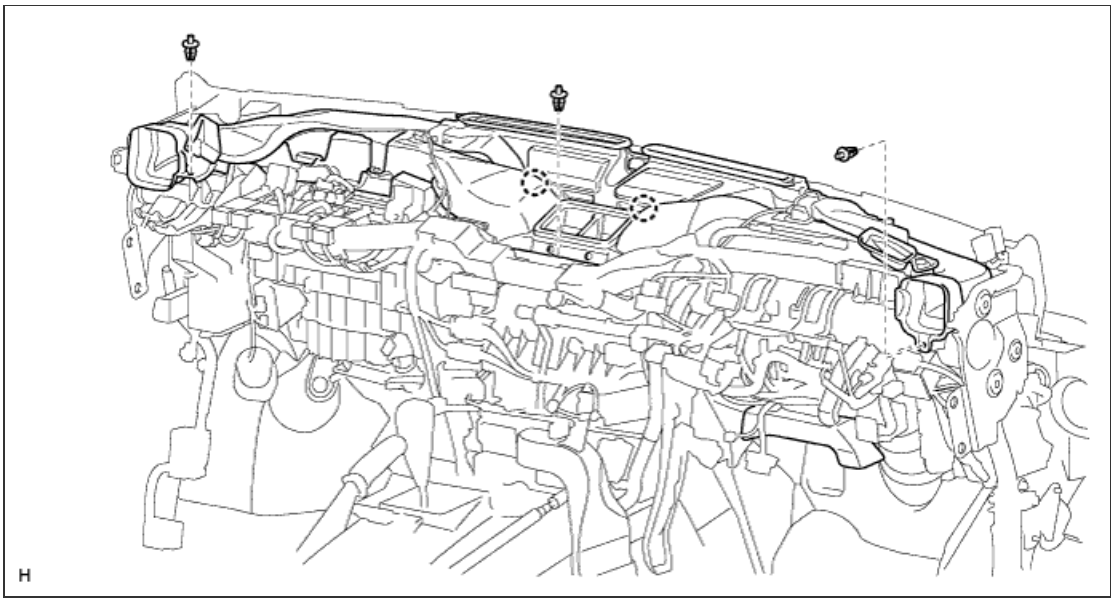

5. INSTALL STEERING COLUMN ASSEMBLY


a. for Power Tilt and Power Telescopic Steering Column:
Install the steering column (Click here).

b. for Manual Tilt and Manual Telescopic Steering Column:
Install the steering column (Click here).

6. INSTALL NO. 3 AIR DUCT SUB-ASSEMBLY

a. Attach the 2 claws to install the duct.

b. Install the clip.

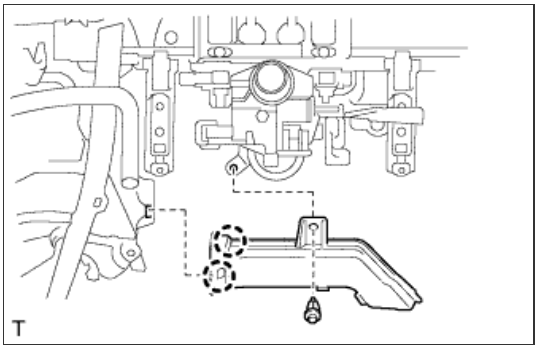

7. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY

a. Install the instrument panel (Click here).


8. INSTALL FRONT IPER MOTOR AND BRAC E

a. Install the front wiper motor and bracket (Click here).

9. CONNECT HEATER ATER INLET HOSE AND HEATER ATER OUTLET HOSE

a. Connect the 2 heater water hoses.

b. Using pliers, grip the claws of the clips and slide the 2 clips.

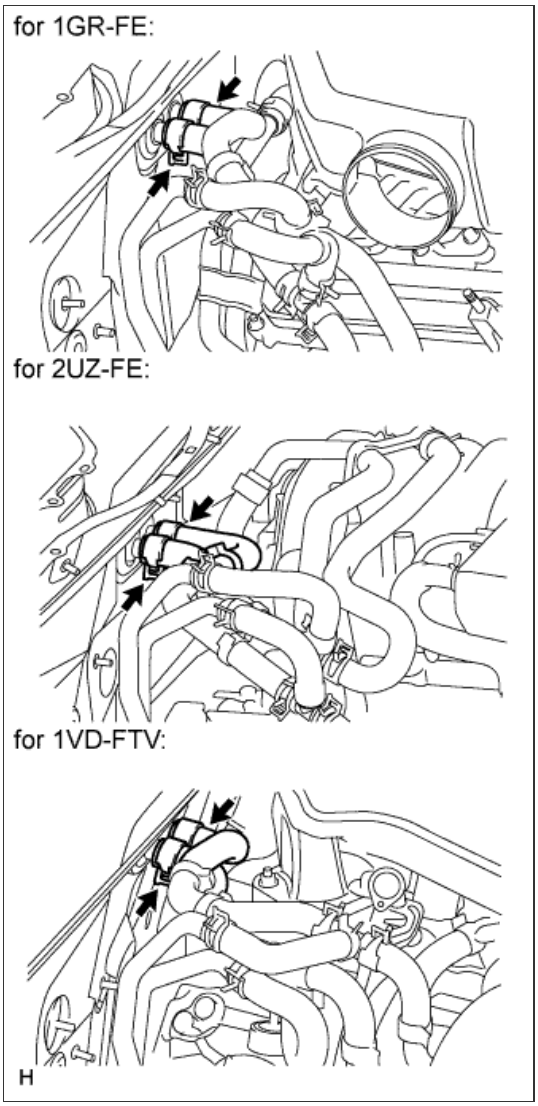

10. CONNECT AIR CONDITIONING TUBE ASSEMBLY

a. Remove the attached vinyl tape from the tubes.

b. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the air conditioning tube assembly.


Compressor oil:
ND-OIL 8 or equivalent

c. Install the 2 O-rings to the air conditioning tube assembly.

d. Connect the air conditioning tube assembly.

e. Attach the plate as shown in the illustration and install the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

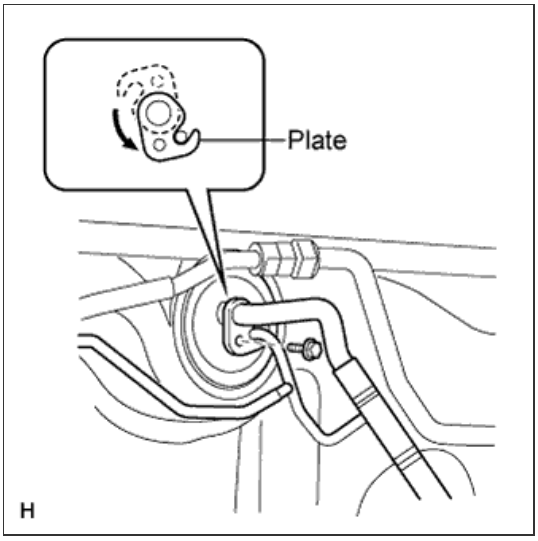

11. CONNECT CABLE TO NEGATI BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

12. CHEC SRS ARNING LIGHT

a. Check the SRS warning light (Click here).

13. ADD ENGINE COOLANT

a. for 1VD-FTV:
Add engine coolant (Click here).

b. for 2UZ-FE:
Add engine coolant (Click here).

c. for 1GR-FE:
Add engine coolant (Click here).

14. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Stan ar :

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

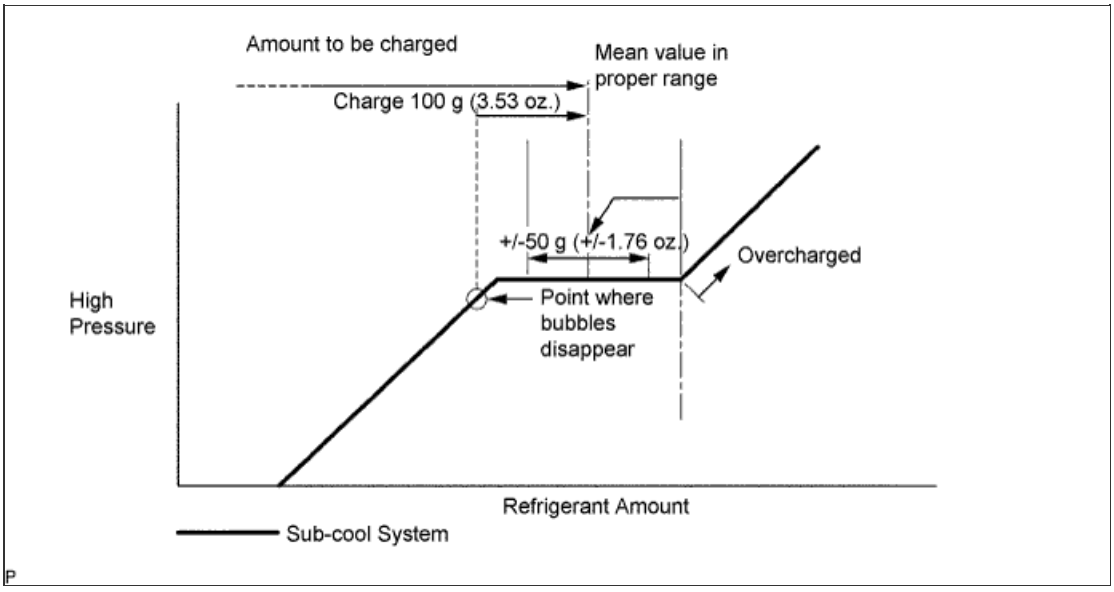

NOTICE:

- Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properl without an refrigerant, an will overheat.

- **Approximatel 200 g (7.05 oz.) of refrigerant ma nee to be charge after bubbles isappear. The refrigerant amount shoul be checke b measuring its quantity, and not with the sight glass.**

15. WARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

16. CHEC FOR ENGINE COOLANT LEA

a. for 1VD-FTV:
Check for engine coolant leaks (Click here).

b. for 2UZ-FE:
Check for engine coolant leaks (Click here).

c. for 1GR-FE:
Check for engine coolant leaks (Click here).

17. CHEC FOR REFRIGERANT GAS LEA

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.


. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

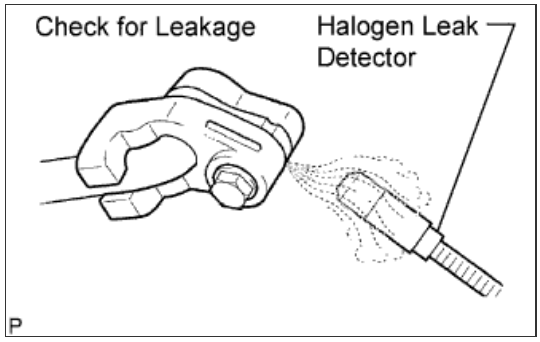

18. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Install the radiator support seal with the 7 clips.

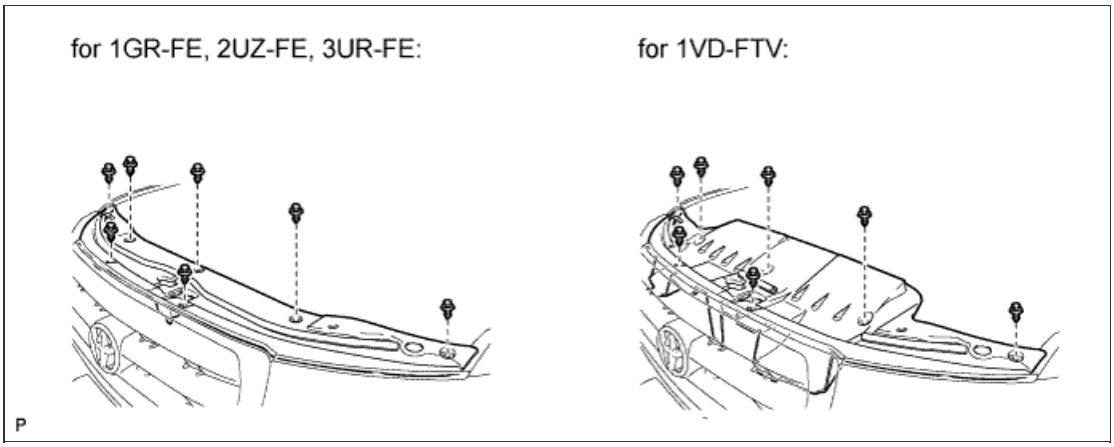

19. INSTALL NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. for 1VD-FTV:
Install the No. 1 engine under cover sub-assembly (Click here).

b. for 2UZ-FE:
Install the No. 1 engine under cover sub-assembly (Click here).

c. for 1GR-FE:
Install the No. 1 engine under cover sub-assembly (Click here).

20. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Install the front fender splash shield (Click here).


b. w/Winch:
Install the front fender splash shield (Click here).

21. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH


a. for Standard:
Install the front fender splash shield (Click here).


b. w/Winch:
Install the front fender splash shield (Click here).


for Preparation Click here

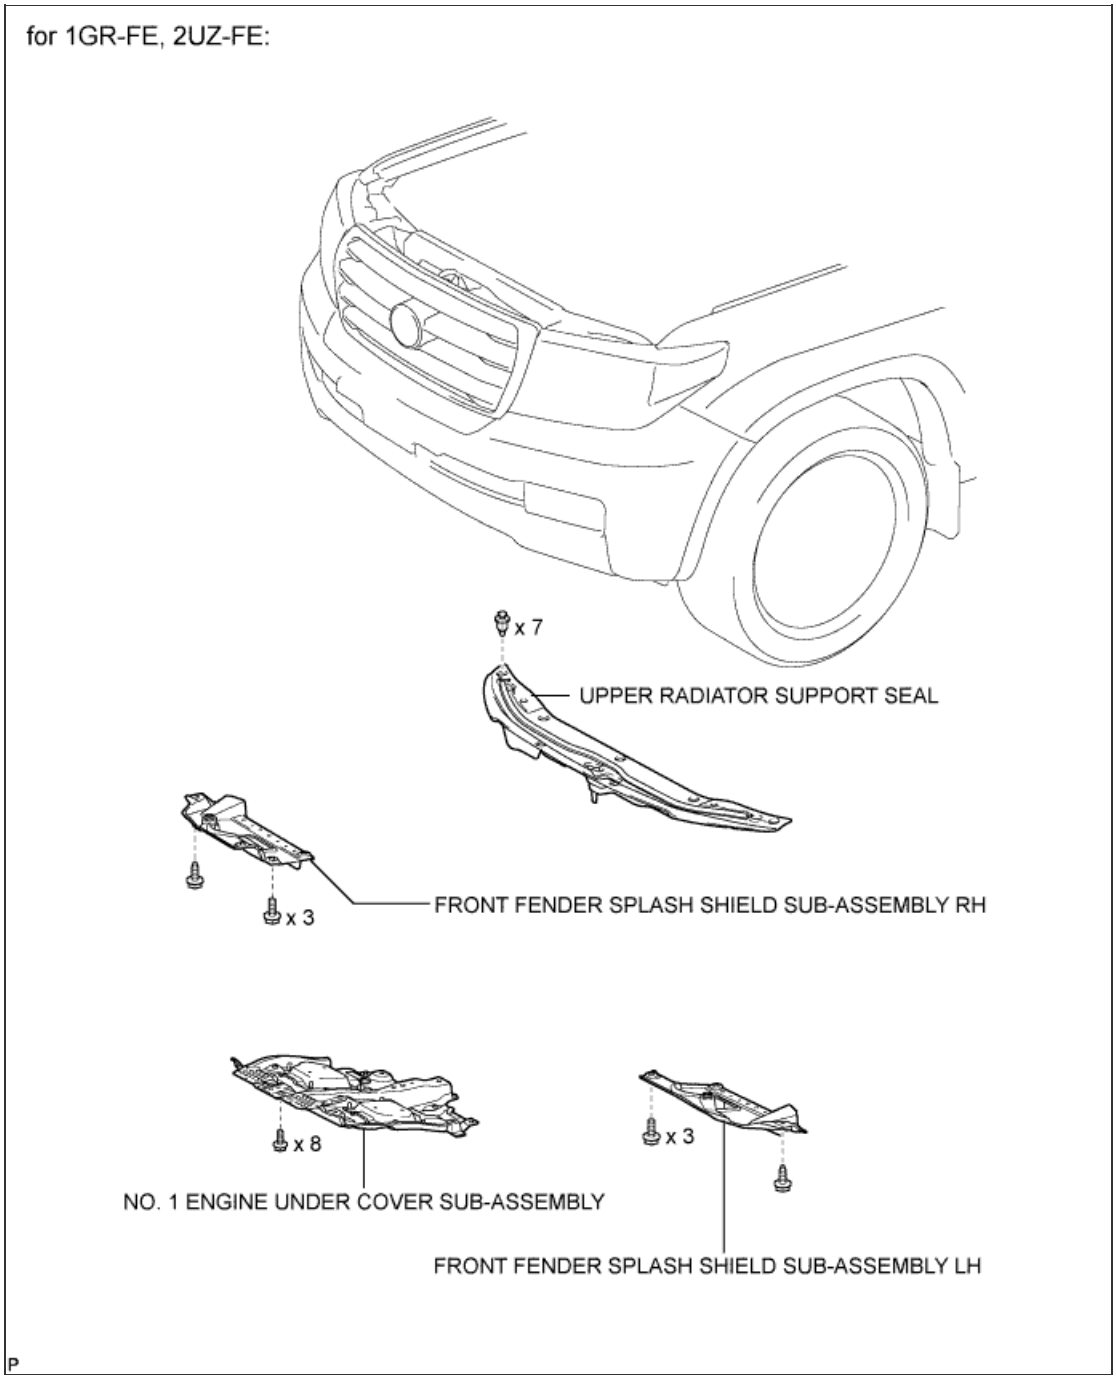


for 1VD-FTV:

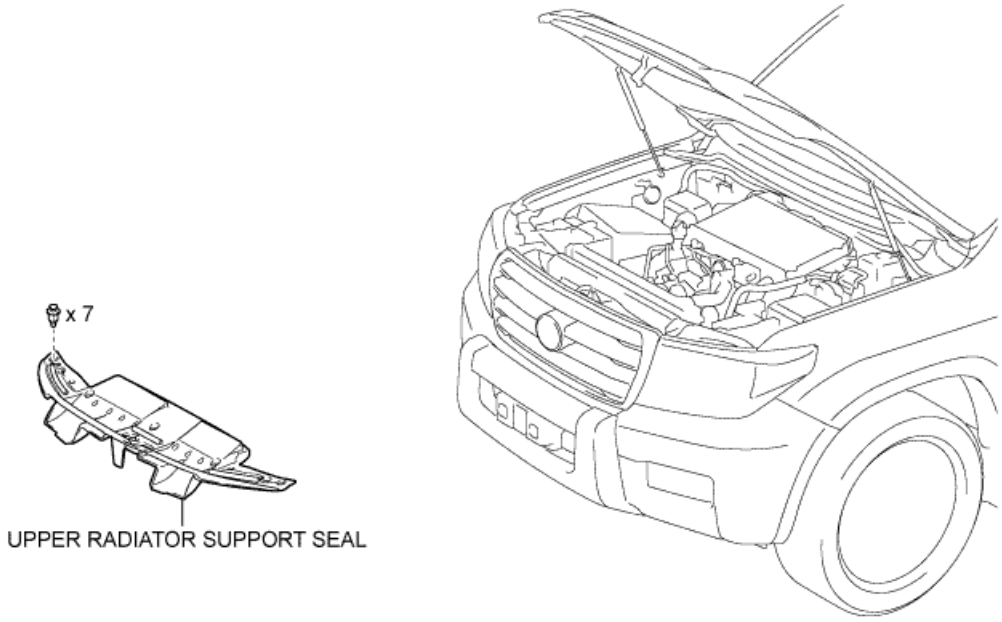

x 7
UPPER RADIATOR SUPPORT SEAL

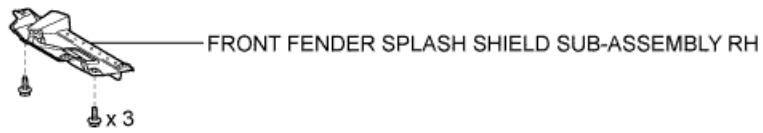

FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH
x 3

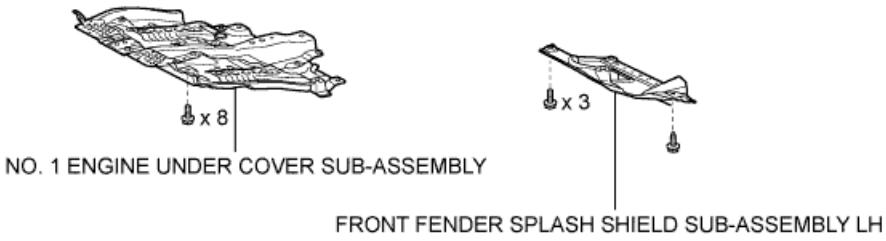
x 8
NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY
x 3
FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

P

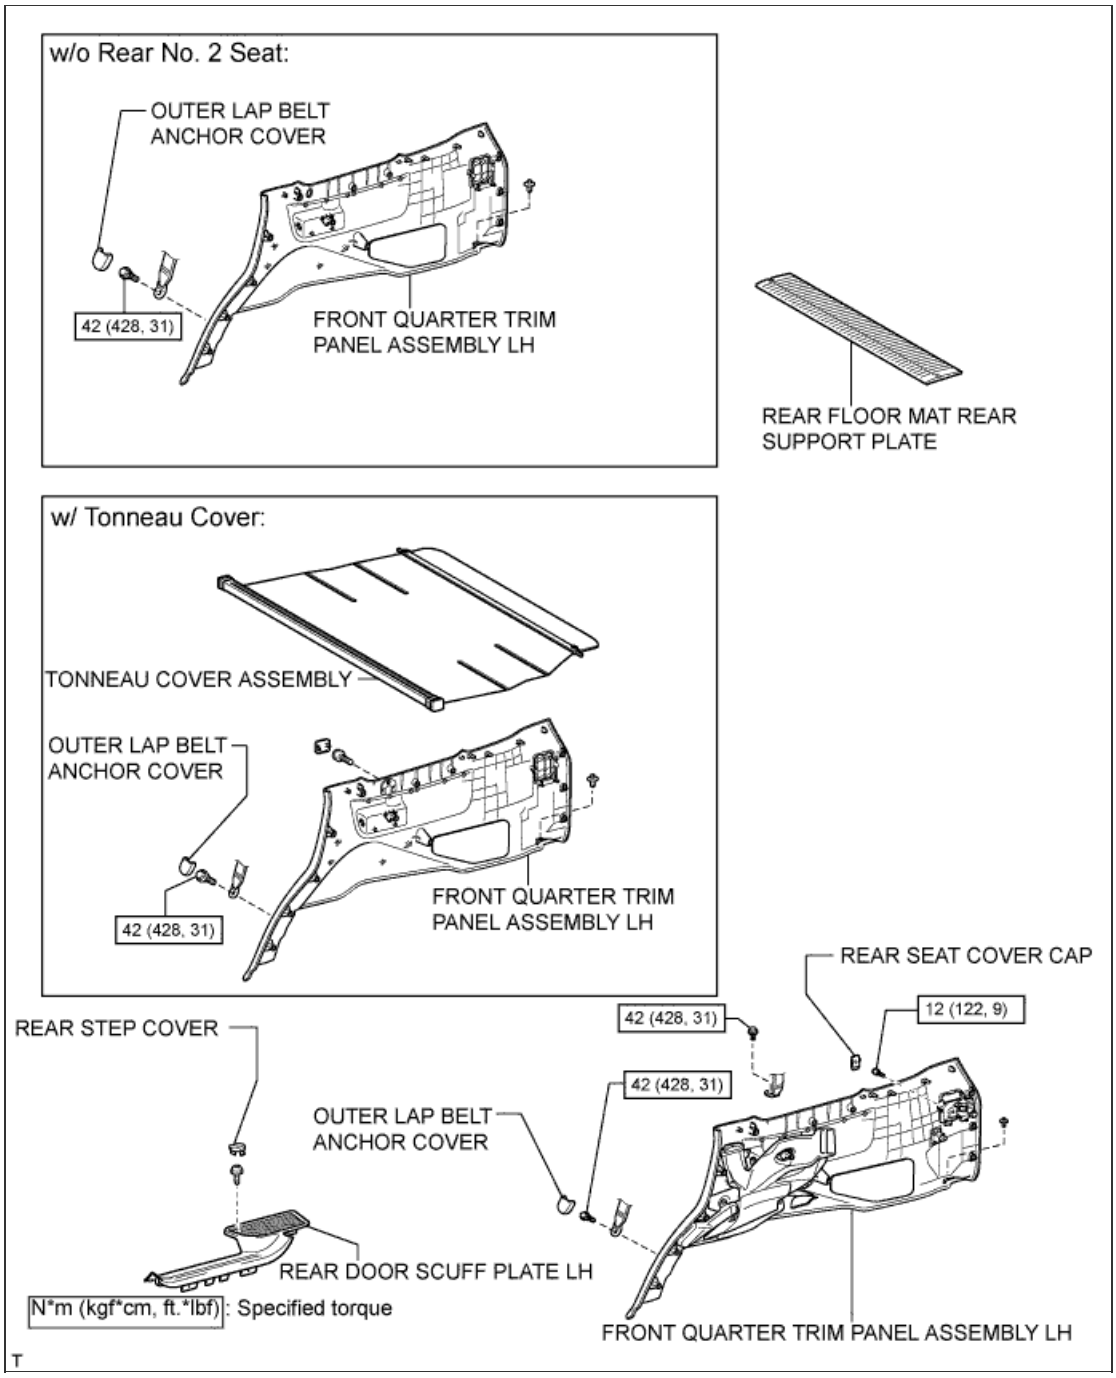
w/o Rear No. 2 Seat:
OUTER LAP BELT ANCHOR COVER
42 (428, 31)
FRONT QUARTER TRIM PANEL ASSEMBLY LH
REAR FLOOR MAT REAR SUPPORT PLATE
w/ Tonneau Cover:
TONNEAU COVER ASSEMBLY
OUTER LAP BELT ANCHOR COVER
42 (428, 31)
FRONT QUARTER TRIM PANEL ASSEMBLY LH
REAR SEAT COVER CAP
12 (122, 9)
42 (428, 31)
42 (428, 31)
REAR STEP COVER
OUTER LAP BELT ANCHOR COVER
REAR DOOR SCUFF PLATE LH
N*m (kgf*cm, ft.*lbf): Specified torque
FRONT QUARTER TRIM PANEL ASSEMBLY LH
T

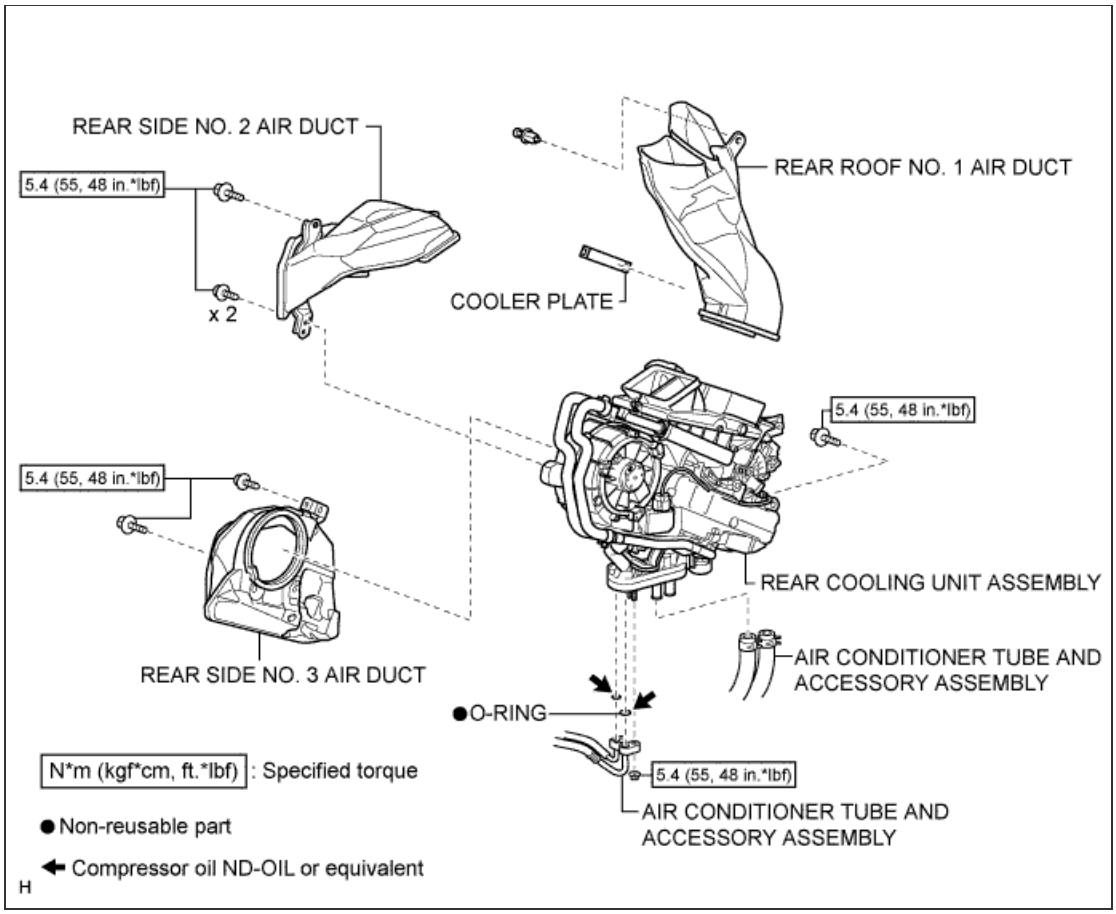
REAR SIDE NO. 2 AIR DUCT
5.4 (55, 48 in.*lbf)
x 2
REAR ROOF NO. 1 AIR DUCT
COOLER PLATE
5.4 (55, 48 in.*lbf)
5.4 (55, 48 in.*lbf)
REAR COOLING UNIT ASSEMBLY
REAR SIDE NO. 3 AIR DUCT
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
●O-RING
5.4 (55, 48 in.*lbf)
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
Compressor oil ND-OIL or equivalent
H

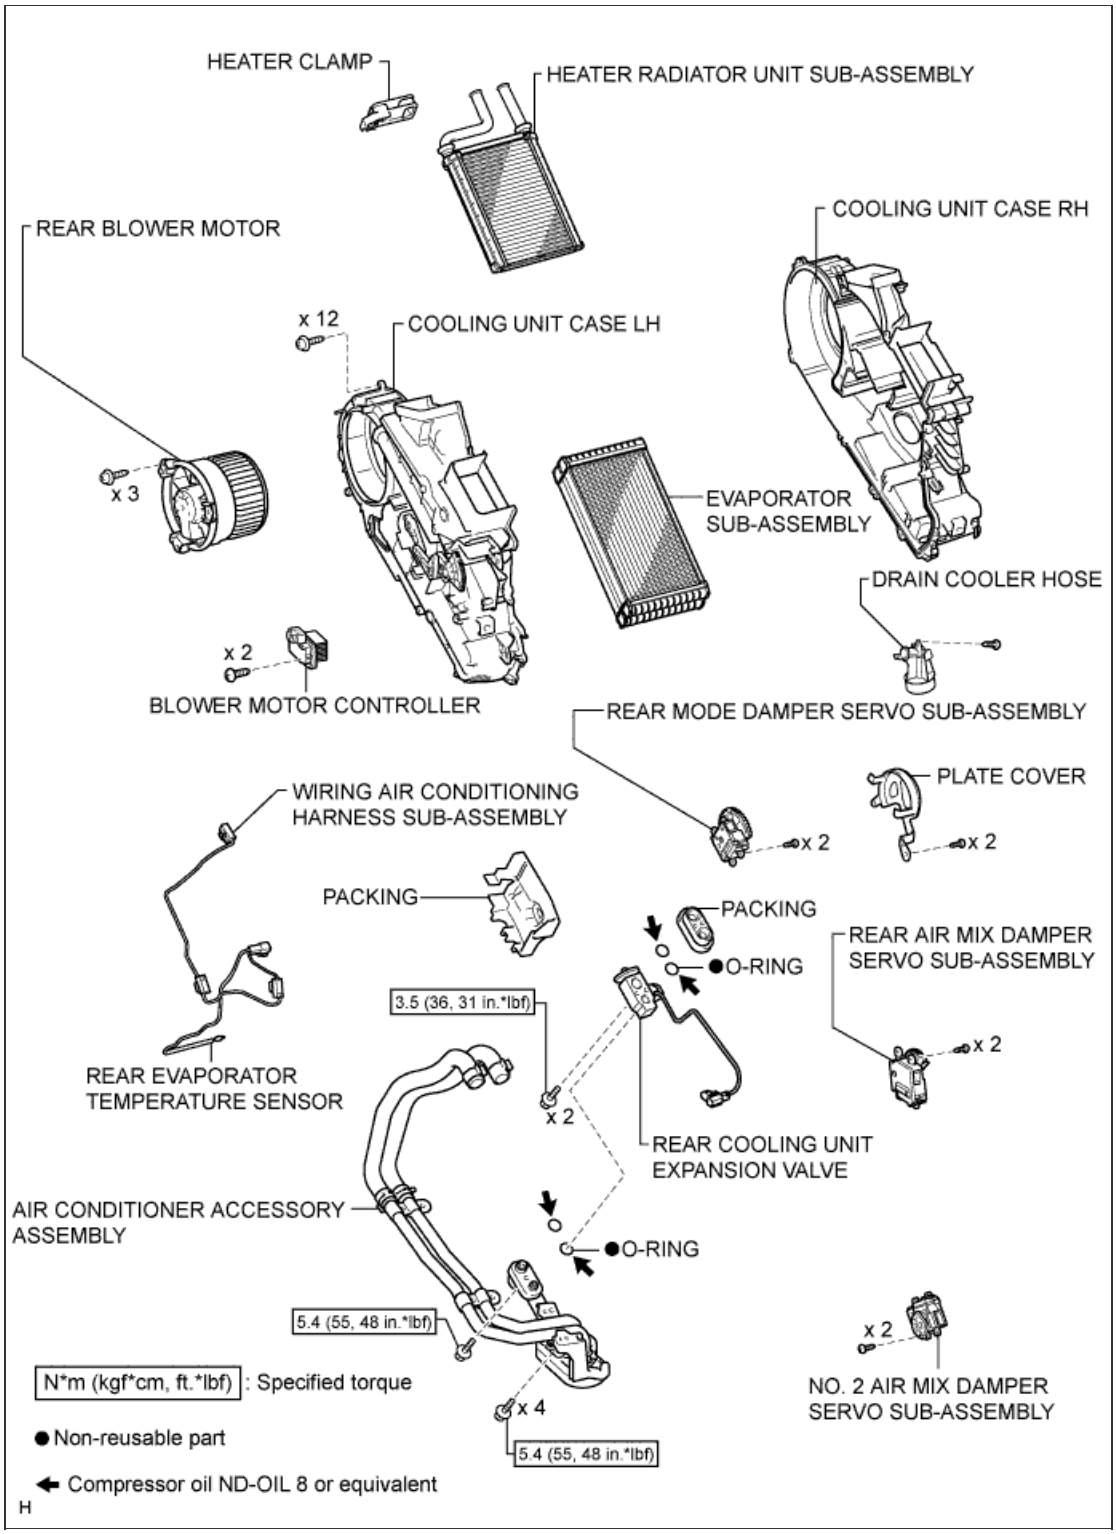
HEATER CLAMP
HEATER RADIATOR UNIT SUB-ASSEMBLY
REAR BLOWER MOTOR
COOLING UNIT CASE RH
x 12
COOLING UNIT CASE LH
x 3
EVAPORATOR SUB-ASSEMBLY
DRAIN COOLER HOSE
x 2
BLOWER MOTOR CONTROLLER
REAR MODE DAMPER SERVO SUB-ASSEMBLY
PLATE COVER
WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY
x 2
x 2
PACKING
PACKING
O-RING
REAR AIR MIX DAMPER SERVO SUB-ASSEMBLY
3.5 (36, 31 in.*lbf)
x 2
REAR EVAPORATOR TEMPERATURE SENSOR
REAR COOLING UNIT EXPANSION VALVE
AIR CONDITIONER ACCESSORY ASSEMBLY
O-RING
5.4 (55, 48 in.*lbf)
x 2
NO. 2 AIR MIX DAMPER SERVO SUB-ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
x 4
Non-reusable part
5.4 (55, 48 in.*lbf)
Compressor oil ND-OIL 8 or equivalent
H

for Preparation Click here

1. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).


2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).


3. REMOVE NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. Remove the 10 bolts and No. 1 engine under cover.

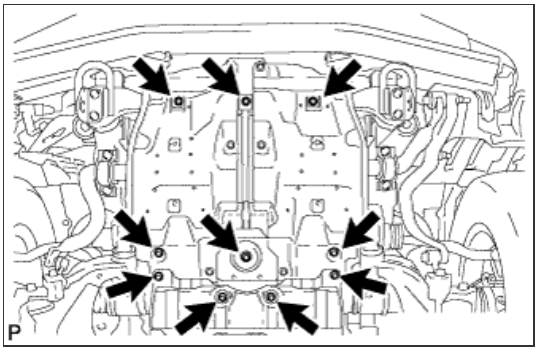

4. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

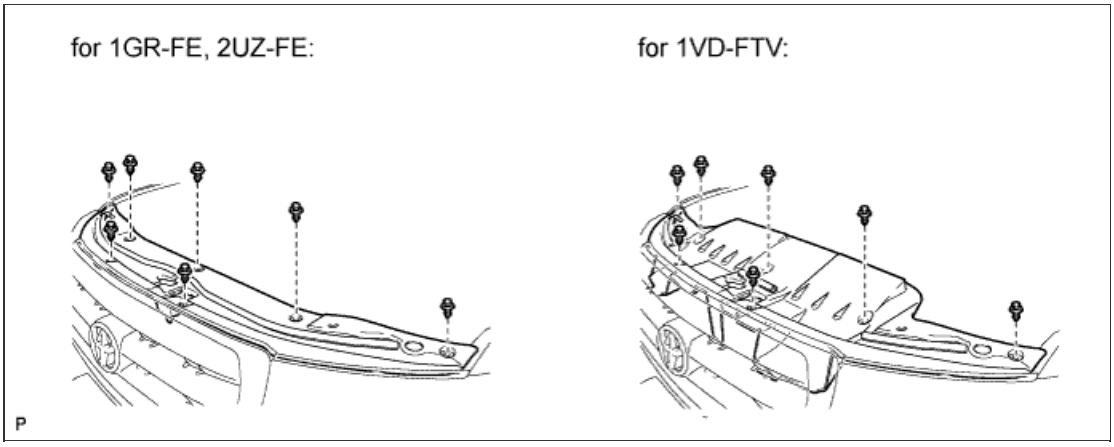

5. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. T rn the /C switch on.

c. Operate the cooler compressor while the engine speed is appro imatel 1000 rpm for to 6 min tes to circ late the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the /C s stem sing a refrigerant recover nit.

6. DRAIN ENGINE COOLANT

a. for 1 :
Drain the engine coolant (Click here).

b. for 2UZ-FE:
Drain the engine coolant (Click here).

c. for 1GR-FE:
Drain the engine coolant (Click here).

7. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

8. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Remove the floor mat rear support plate (Click here).

b. w/o Sliding Roof:
Remove the floor mat rear support plate (Click here).

9. REMOVE REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Remove the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Remove the rear door scuff plate (Click here).

10. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

11. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Remove the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Remove the rear seat cover cap (Click here).

12. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front arter trim panel (Click here).

b. w/o Sliding Roof:
Remove the front arter trim panel (Click here).

13. DISCONNECT AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY

a. Using pliers grip the claws of the clips and slide the 2 clips.


b. Disconnect the heater water inlet hose and heater water o tlet hose.

c. Remove the 2 bolts.

d. Disconnect the air conditioner t e and accessor assembl .

NOTICE:


- **Do not use a screwdriver or similar tool to disconnect the tube.**
- **Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.**

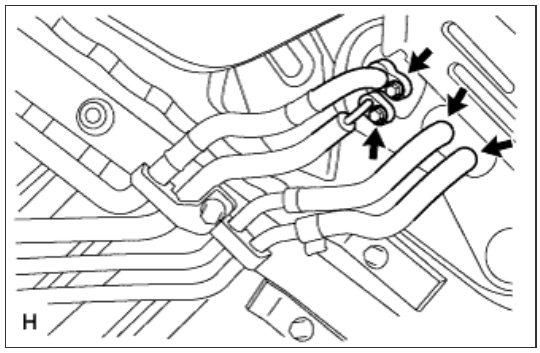


e. Remove the 2 O rings from the air conditioner t e and accessor assembl .

14. REMOVE REAR ROOF NO. 1 AIR DUCT

a. Detach the 2 claws and remove the cooler plate.

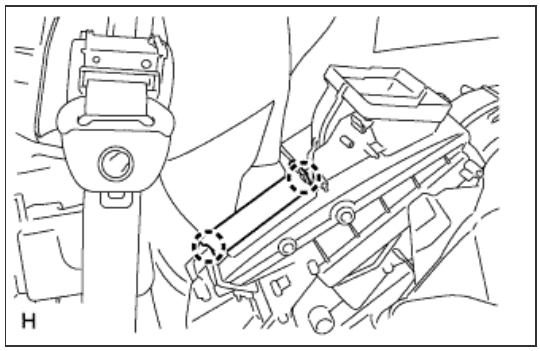


b. Remove the clip and d ct.

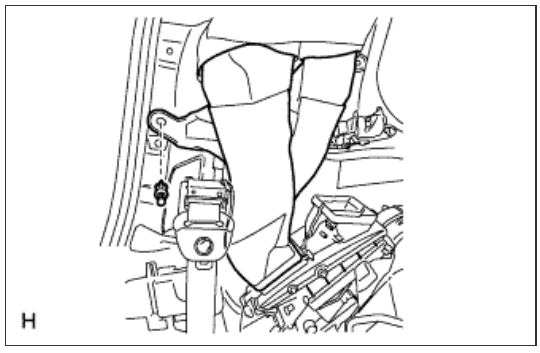

15. REMOVE REAR COOLING UNIT ASSEMBLY

a. Disconnect the 2 connectors.

b. Remove the bolts and rear cooling nit.

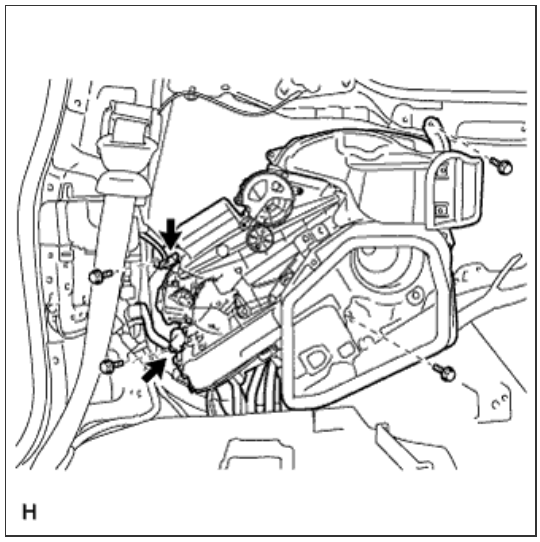
H

for Preparation Click here

1. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).

2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).

3. REMOVE NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. for 1 :
Remove the No. 1 en ine under cover sub-assembl (Click here).

b. for 2U :
Remove the No. 1 en ine under cover sub-assembl (Click here).


c. for 1 R- :

d. Remove the No. 1 en ine under cover sub-assembl (Click here).

e. for 3UR- :
Remove the No. 1 en ine under cover sub-assembl (Click here).

4. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

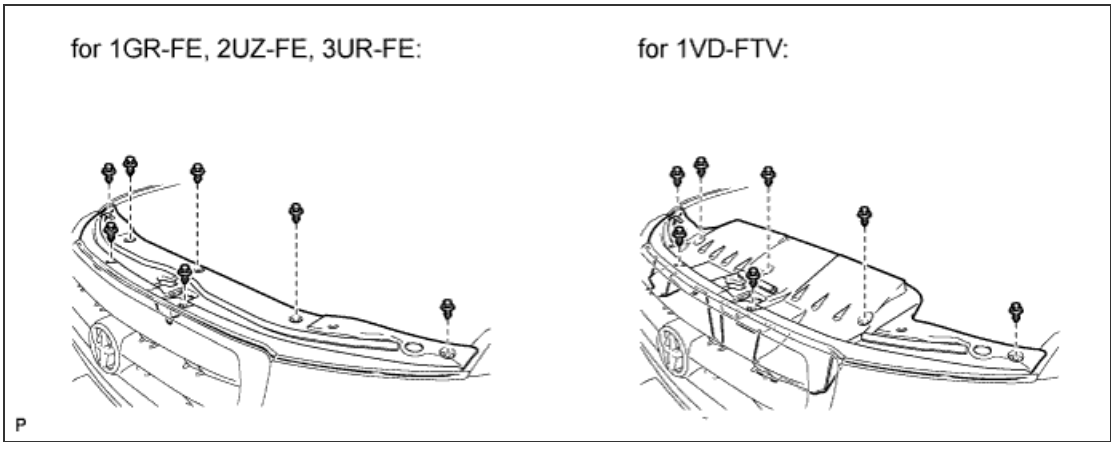

5. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the en ine.

b. Turn the /C switch on.

c. Operate the cooler compressor while the en ine speed is approximatel 1000 rpm for to 6 minutes to circulate the refri erant and collect the compressor oil remainin in each component into the cooler compressor.

d. Stop the en ine.

e. Recover the refri erant from the /C s stem usin a refri erant recover unit.

6. DRAIN ENGINE COOLANT

a. for 1 :
Drain the en ine coolant (Click here).

b. for 2U :
Drain the en ine coolant (Click here).

c. for 1 R- :
Drain the en ine coolant (Click here).

d. for 3UR- :
Drain the en ine coolant (Click here).

7. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least seconds after disconnectin the cable from the ne ative (-) batter terminal to disable the SRS s stem.

NOTICE:

When disconnectin the cable, some s stems need to be initiali ed after the cable is reconnected (Click here).

8. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Slidin Roof:
Remove the floor mat rear support plate (Click here).

b. w/o Slidin Roof:
Remove the floor mat rear support plate (Click here).

9. REMOVE REAR DOOR SCUFF PLATE LH

a. w/ Slidin Roof:
Remove the rear door scuff plate (Click here).

b. w/o Slidin Roof:
Remove the rear door scuff plate (Click here).

10. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

a. Remove the tonneau cover.

11. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Slidin Roof:
Remove the rear seat cover cap (Click here).

b. w/o Slidin Roof:
Remove the rear seat cover cap (Click here).

12. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Slidin Roof:
Remove the front arter trim panel (Click here).

b. w/o Slidin Roof:
Remove the front arter trim panel (Click here).

13. DISCONNECT AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY

a. Usin pliers, rip the claws of the clips and slide the 2 clips.


b. Disconnect the heater water inlet hose and heater water outlet hose.

c. Remove the 2 bolts.

d. Disconnect the air conditioner tube and accessor assembl .

NOTICE:


- **Do not use a screwdriver or similar tool to disconnect the tube.**
- **Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.**

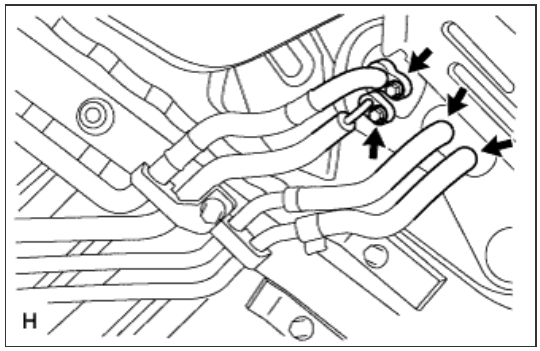


e. Remove the 2 O-rin s from the air conditioner tube and accessor assembl .

14. REMOVE REAR ROOF NO. 1 AIR DUCT

a. Detach the 2 claws and remove the cooler plate.

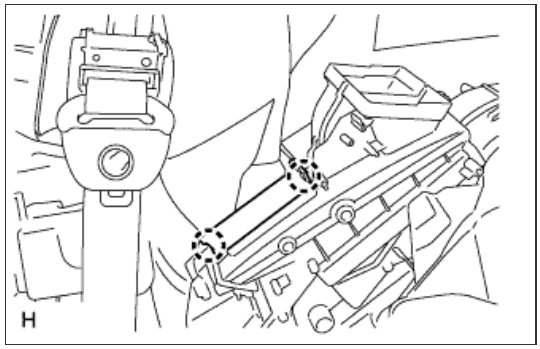


b. Remove the clip and duct.

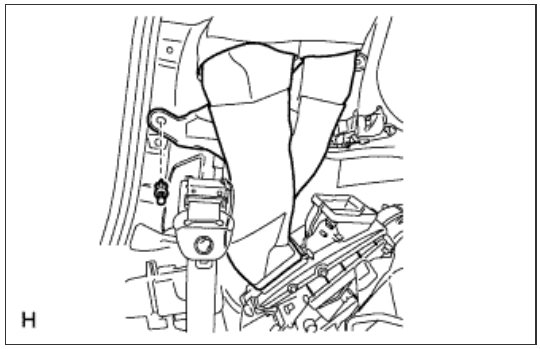

15. REMOVE REAR COOLING UNIT ASSEMBLY

a. Disconnect the 2 connectors.


b. Remove the bolts and rear coolin unit.

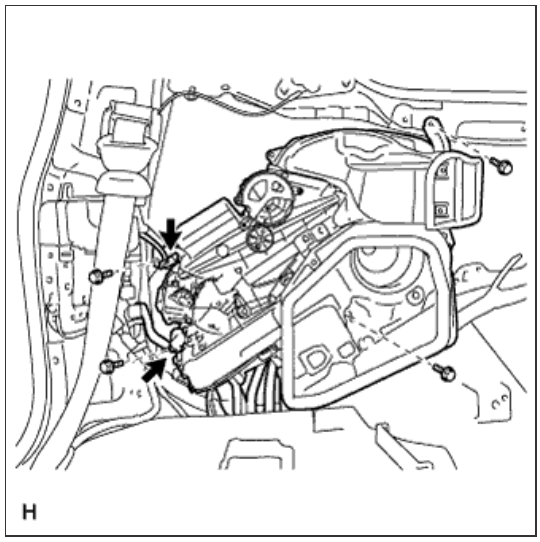
H

for Preparation Click here


1. REMOVE REAR SIDE NO. 2 AIR DUCT

a. Remove the 3 screws and duct.

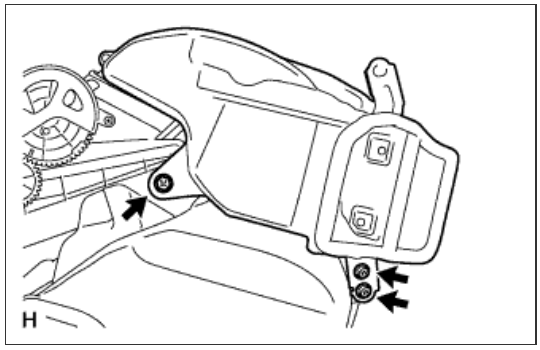

2. REMOVE REAR SIDE NO. 3 AIR DUCT


a. Remove the 2 screws and duct.

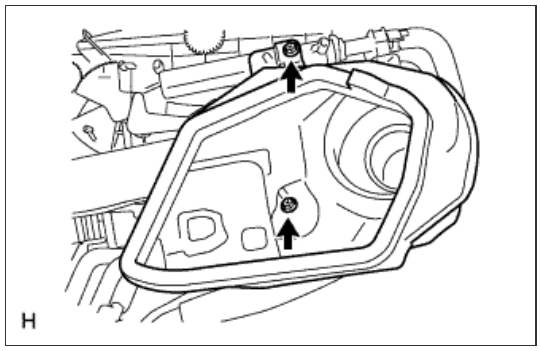

3. REMOVE DRAIN COOLER HOSE

a. Remove the screw.


b. Detach the claw and remove the drain hose.

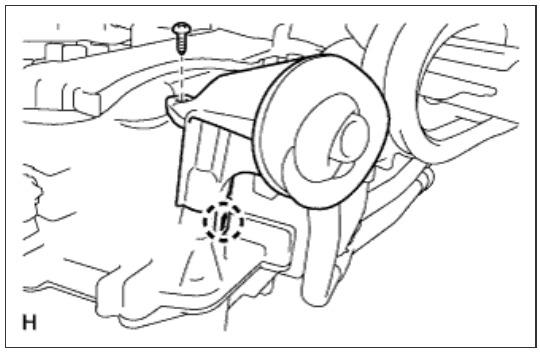

4. REMOVE REAR AIR MIX DAMPER SERVO SUB-ASSEMBLY


a. Disconnect the connector.

b. Remove the 2 screws and damper servo.

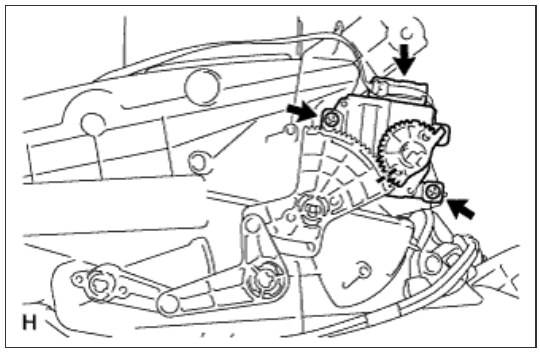


5. REMOVE REAR MODE DAMPER SERVO SUB-ASSEMBLY

a. Remove the 2 screws and plate cover.

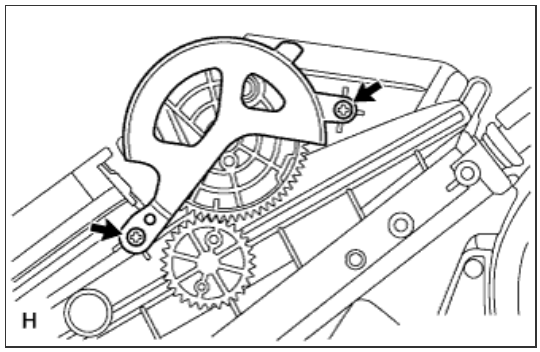

b. Disconnect the connector.


c. Remove the 2 screws and damper servo.

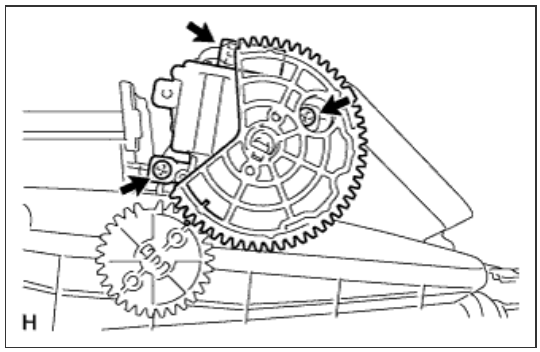

6. REMOVE NO. 2 AIR MIX DAMPER SERVO SUB-ASSEMBLY


a. Disconnect the connector.

b. Remove the 2 screws and damper servo.

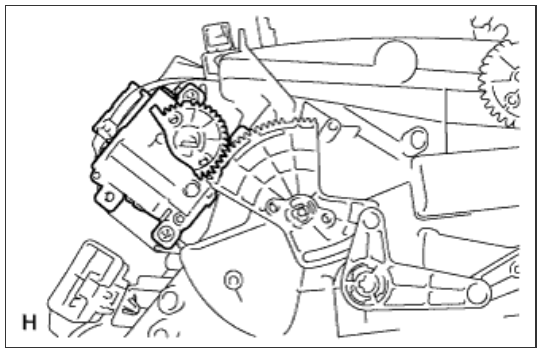

7. REMOVE AIR CONDITIONER ACCESSORY ASSEMBLY

a. Remove the packing.

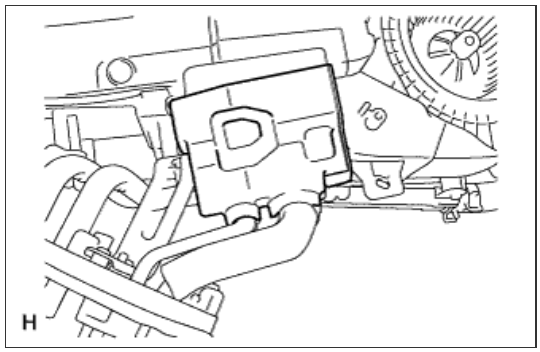


b. Remove the bolt and 4 screws.

c. Using pliers, grip the claws of the clips and slide the 2 clips.

d. Remove the air conditioner accessory assembly.

e. Remove the 2 rings from the air conditioner accessory assembly.

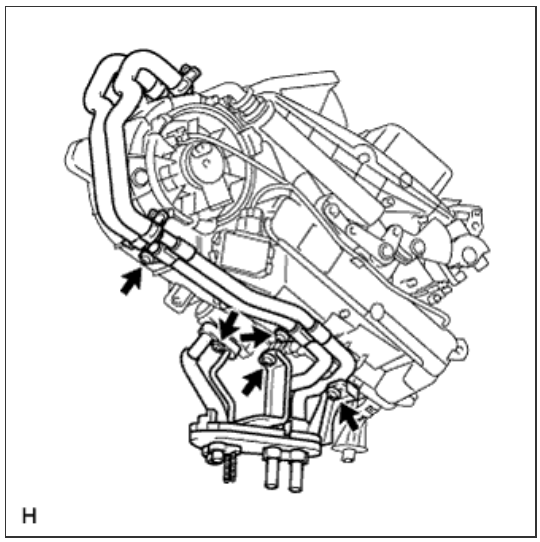


8. REMOVE REAR COOLING UNIT EXPANSION VALVE

a. Disconnect the connector.

b. Detach the clamp.


c. Using a 4 mm he agon wrench, remove the 2 he agon bolts and e pansion valve.

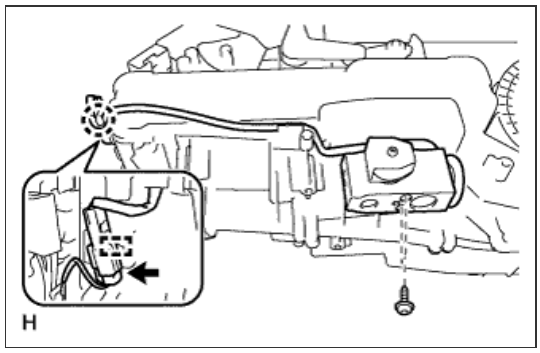


9. REMOVE HEATER RADIATOR UNIT SUB-ASSEMBLY

a. Remove the screw and detach the claw.

b. Remove the heater clamp.

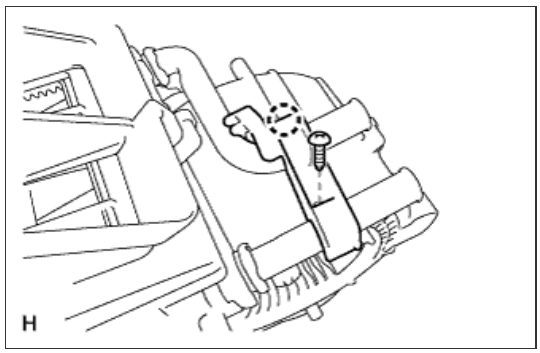


c. Remove the heater radiator.

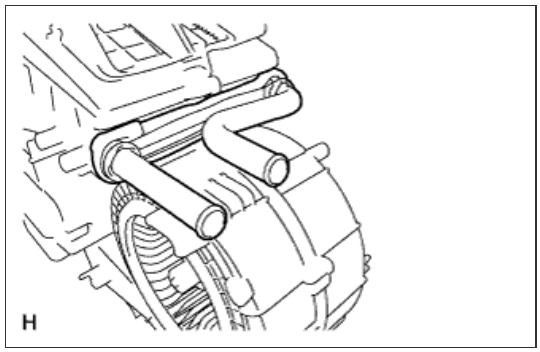

10. REMOVE REAR BLOWER MOTOR

a. Disconnect the connector.


b. Remove the 3 screws and blower motor.

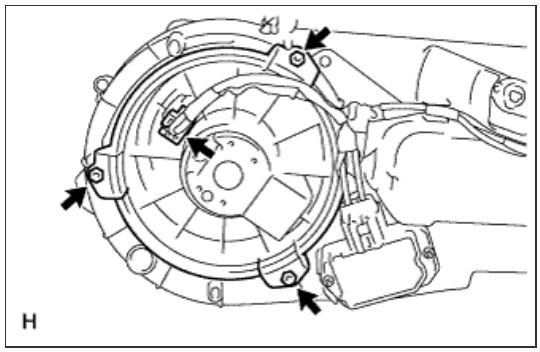

11. REMOVE BLOWER MOTOR CONTROLLER

a. Disconnect the connector.


b. Remove the 2 screws and blower motor controler.

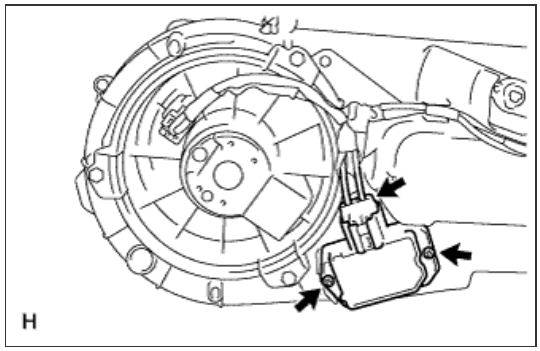


12. REMOVE EVAPORATOR SUB-ASSEMBLY

a. Remove the 12 screws and rear cooling unit case L .

b. Remove the evaporator.

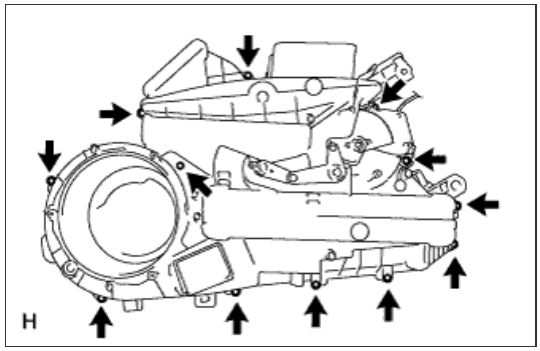


c. Remove the 2 rings from the evaporator.

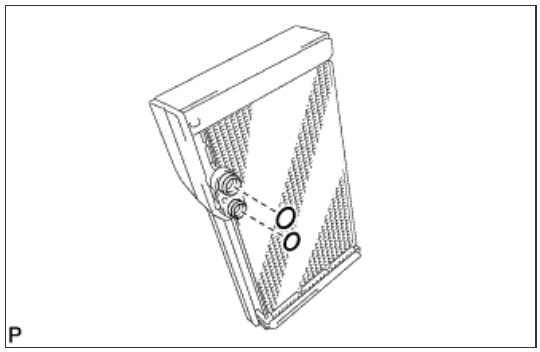

13. REMOVE REAR EVAPORATOR TEMPERATURE SENSOR

a. Detach the 2 claws and remove the sensor.

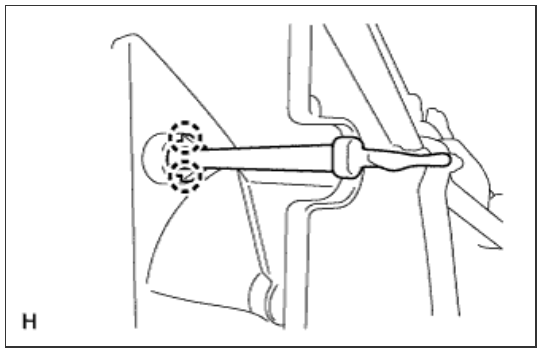


14. REMOVE WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY

for Preparation Click here

1. INSTALL WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY

2. INSTALL REAR EVAPORATOR TEMPERATURE SENSOR

a. Attach the 2 claws to install the sensor.

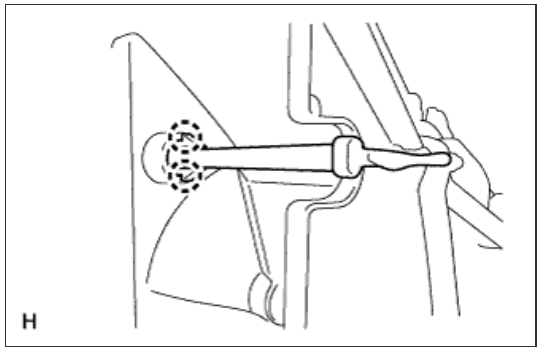


3. INSTALL EVAPORATOR SUB-ASSEMBLY

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.


Compressor oil:
ND-OIL 8 or equivalent

b. Install the 2 O-rings to the evaporator.

c. Install the evaporator.

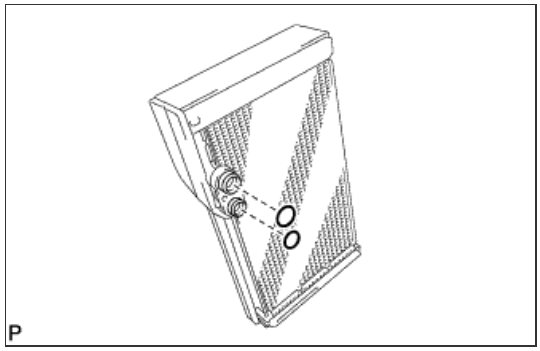


d. Install the rear cooling unit case LH with the 12 screws.

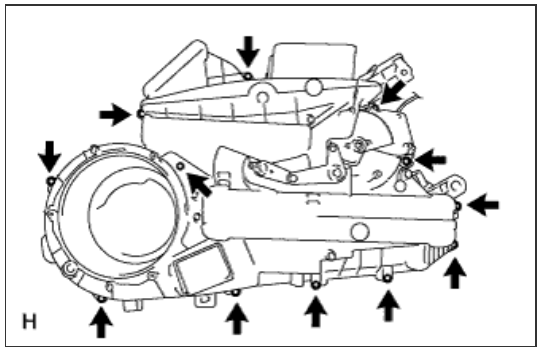

4. INSTALL BLOWER MOTOR CONTROLLER

a. Install the blower motor controller with the 2 screws.


b. Connect the connector.

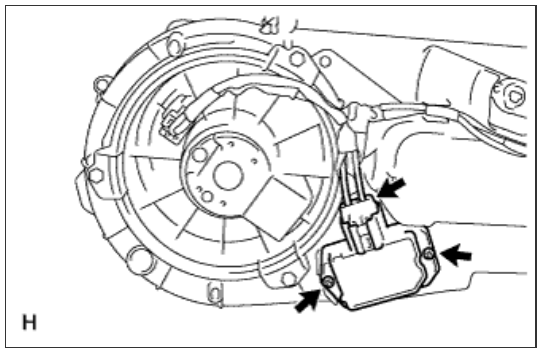

5. INSTALL REAR BLOWER MOTOR


a. Install the blower motor with the 3 screws.

b. Connect the connector.

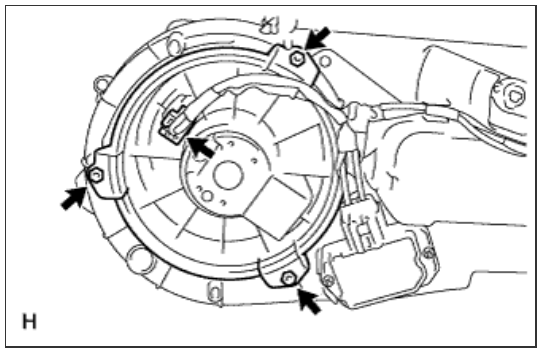


6. INSTALL HEATER RADIATOR UNIT SUB-ASSEMBLY

a. Install the radiator unit to the rear cooling unit.

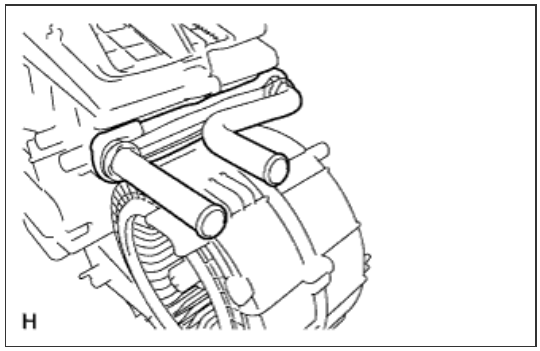

b. Install the heater clamp with the screw and attach the claw.

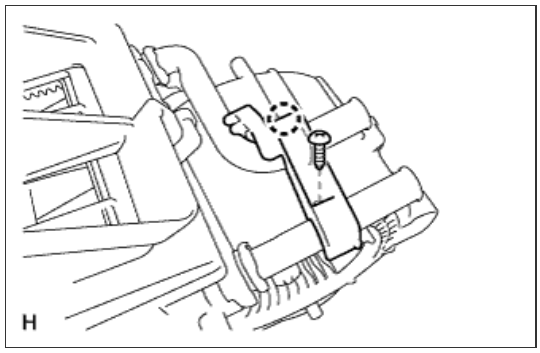

7. INSTALL REAR COOLING UNIT EXPANSION VALVE


a. Using a 4 mm hexagon wrench, install the expansion valve with the 2 hexagon bolts.

Torque:

3.5 N*m{ 36 kgf*cm , 31 in.*lbf }

b. Attach the clamp.

c. Connect the connector.

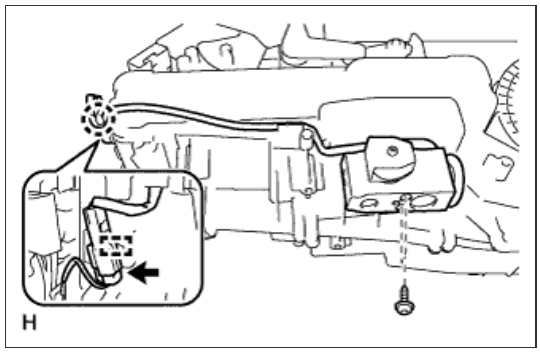

8. INSTALL AIR CONDITIONER ACCESSORY ASSEMBLY

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or equivalent


b. Install the 2 O-rings to the air conditioner accessory assembly.

c. Install the air conditioning accessory assembly.


d. Using pliers, grip the claws of the clips and slide the 2 clips.

e. Install the bolt and 4 screws.

Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

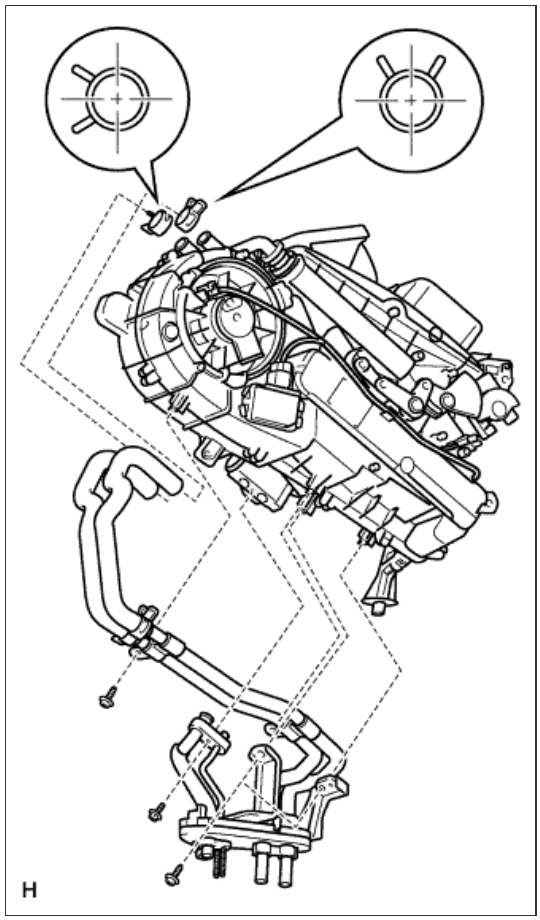


f. Install new packing as shown in the illustration.

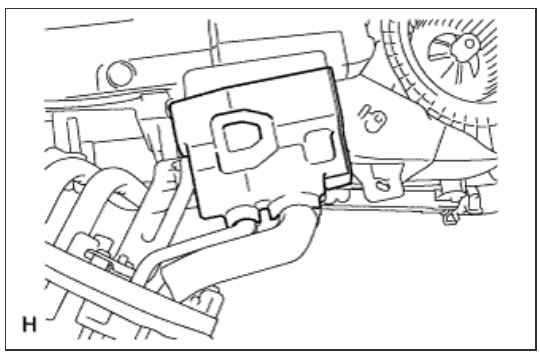


9. INSTALL REAR MODE DAMPER SERVO SUB-ASSEMBLY

a. Align the damper servo as shown in the illustration, and install it with the 2 screws.

b. Connect the connector.

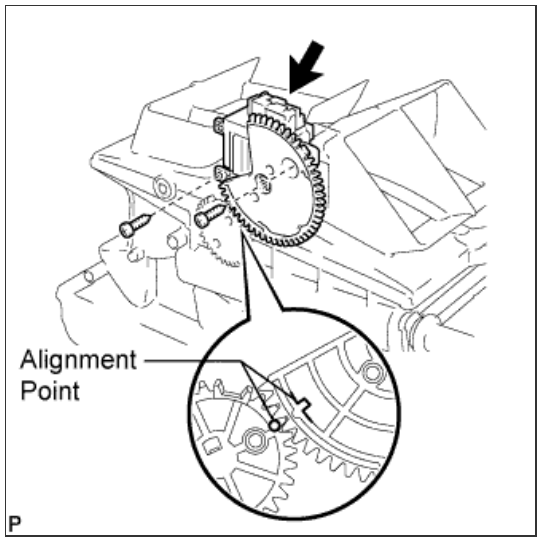


c. Install the plate cover with the 2 screws.

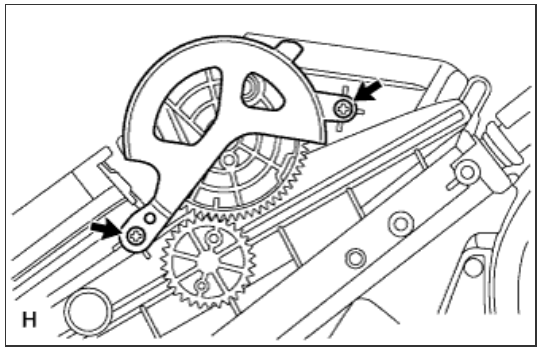

10. INSTALL NO. 2 AIR MIX DAMPER SERVO SUB-ASSEMBLY

a. Align the damper servo as shown in the illustration, and install it with the 2 screws.


b. Connect the connector.

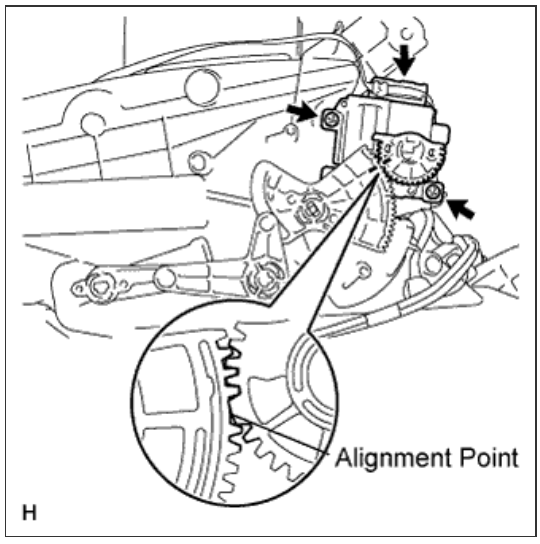

11. INSTALL REAR AIR MIX DAMPER SERVO SUB-ASSEMBLY

a. Align the damper servo as shown in the illustration, and install it with the 2 screws.


b. Connect the connector.

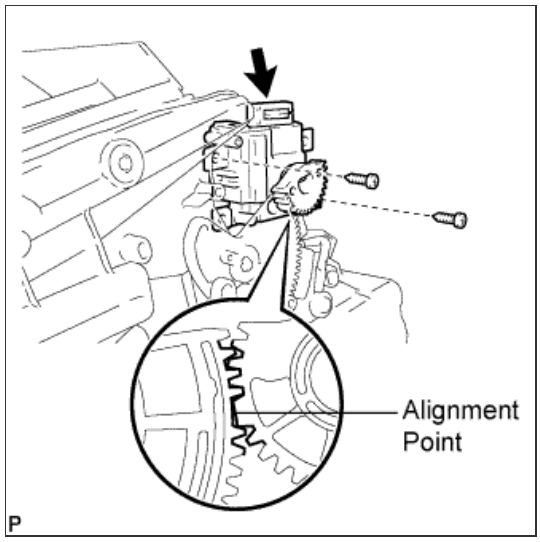

12. INSTALL DRAIN COOLER HOSE

a. Attach the claw to install the drain hose.


b. Install the screw.

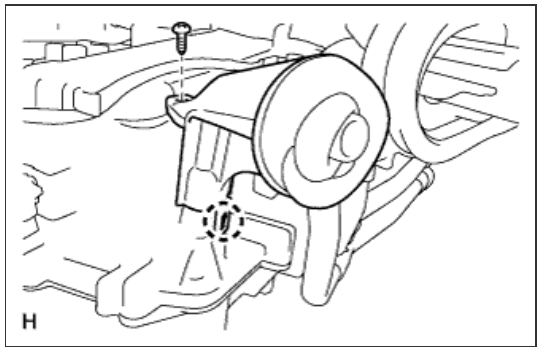

13. INSTALL REAR SIDE NO. 3 AIR DUCT

a. Install the duct with the 2 screws.


Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

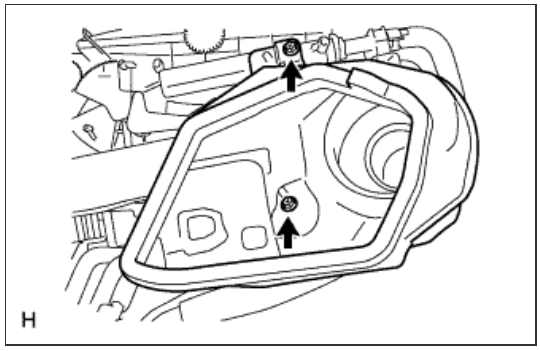

14. INSTALL REAR SIDE NO. 2 AIR DUCT

a. Install the duct with the 3 screws.


Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

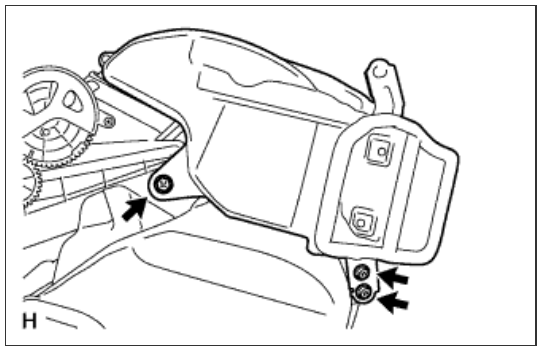
H

for Preparation Click here

1. INSTALL REAR COOLING UNIT ASSEMBLY


a. Install the rear cooling unit as shown in the illustration.

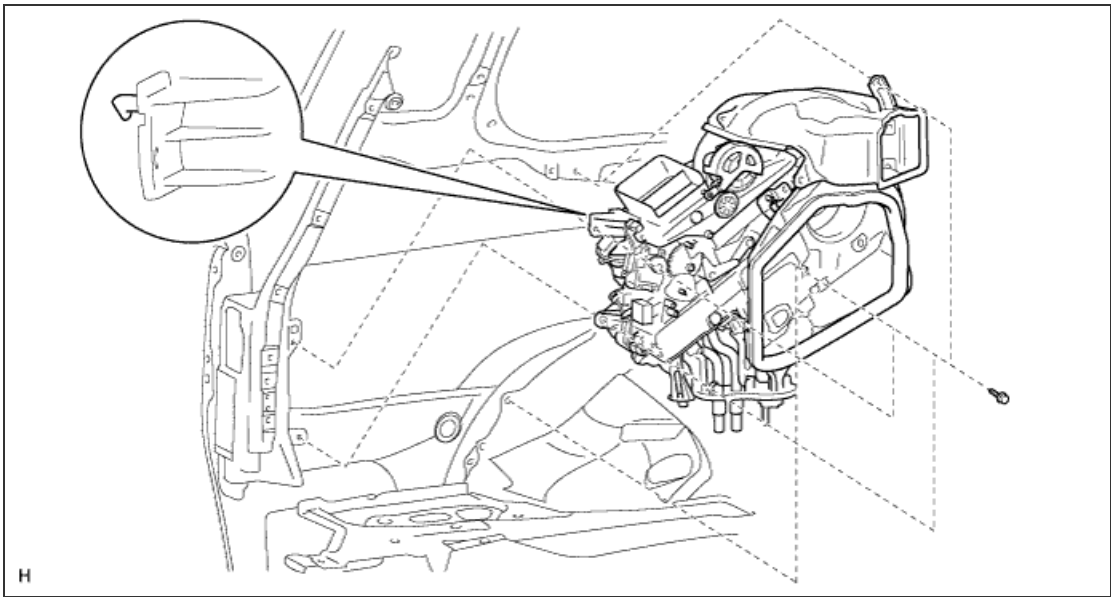

b. Install the 4 bolts.


Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

c. Connect the 2 connectors.

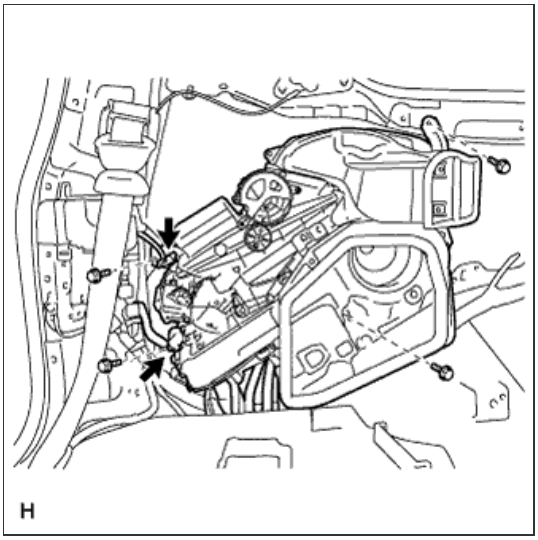


2. INSTALL REAR ROOF NO. 1 AIR DUCT

a. Install the duct with the clip.

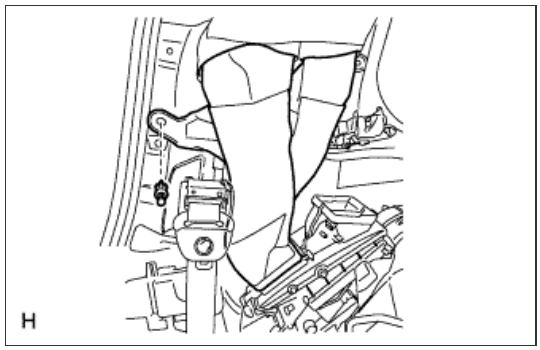

b. Attach the 2 claws to install the cooler plate.

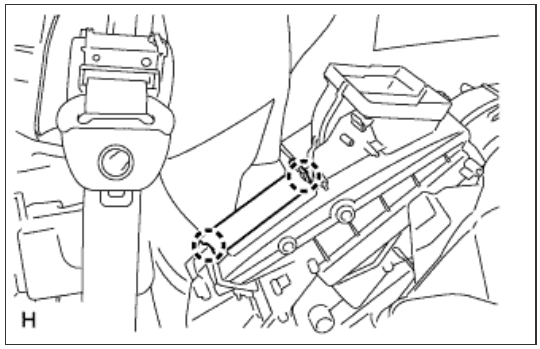

3. CONNECT AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY

a. Remove the attached vinyl tape from the pipe.


b. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the air conditioner tube and accessory assembly.

c. Install 2 O-rings on the air conditioner tube and accessory assembly.

d. Connect the air conditioner tube and accessory assembly.

e. Install the 2 bolts.

Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

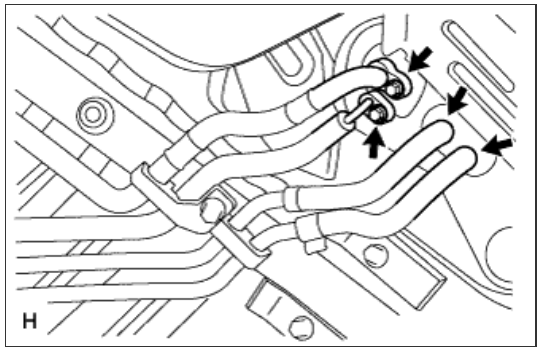

f. Connect the heater water inlet hose and heater water outlet hose.

g. Using pliers, grip the claws of the clip and slide the 2 clips.

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/Sliding Roof:
Install the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel (Click here).

5. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/Sliding Roof:
Install the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Install the rear seat cover cap (Click here).

6. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

7. INSTALL REAR DOOR SCUFF PLATE LH

a. w/Sliding Roof:
Install the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Install the rear door scuff plate (Click here).

8. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. w/Sliding Roof:
Install the rear floor mat rear support plate (Click here).

b. w/o Sliding Roof:
Install the rear floor mat rear support plate (Click here)

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. ADD ENGINE COOLANT

a. for 1VD-FTV:
Add engine coolant (Click here).

b. for 2UZ-FE:
Add engine coolant (Click here).

c. for 1GR-FE:
Add engine coolant (Click here).

11. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool ox	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool ox	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool ox	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool ox	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool ox	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool ox	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool ox	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool ox	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool ox	920 +/-30 g (32.5 +/-1.1 oz.)

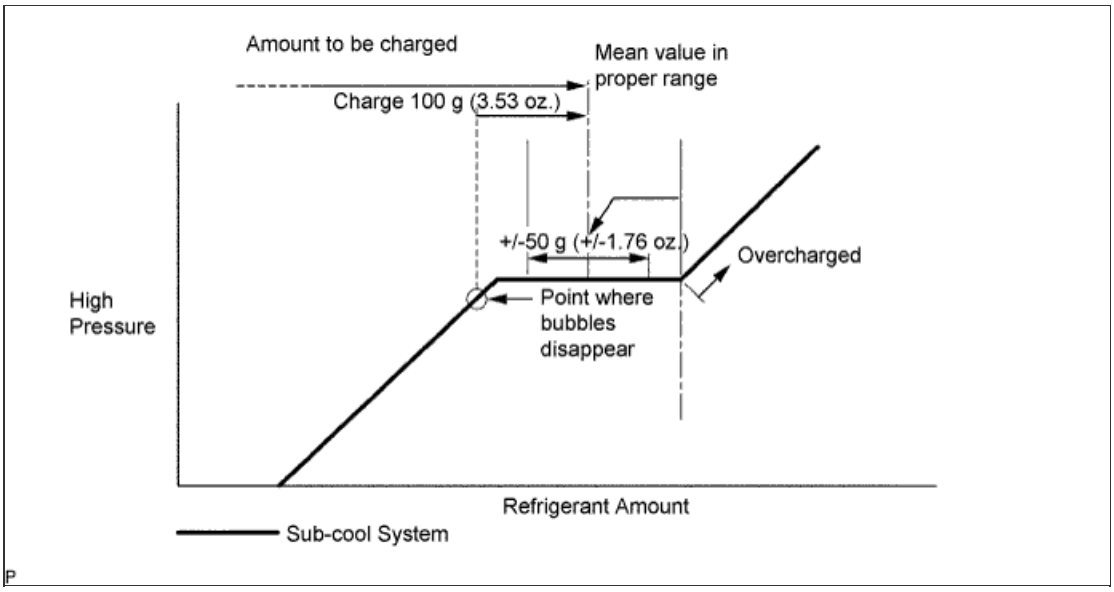

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properl without an rigerant, and will overheat.**
- **Approximatel 200 g (7.05 o .) of refrigerant ma need to be charged after bubbles disappear. The refrigerant amount should be checked b measuring its quantit , and not with the sight glass.**

12. ARM I ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

13. CHEC FOR ENGINE COOLANT LEA S

a. for 1VD-FTV:
Check for engine coolant leaks (Click here).

b. for 2UZ-FE:
Check for engine coolant leaks (Click here).

c. for 1GR-FE:
Check for engine coolant leaks (Click here).

14. CHEC FOR REFRIGERANT GAS LEA

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- ake sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.

d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. ring the halogen leak detector close to the pressure switch and perform the test.

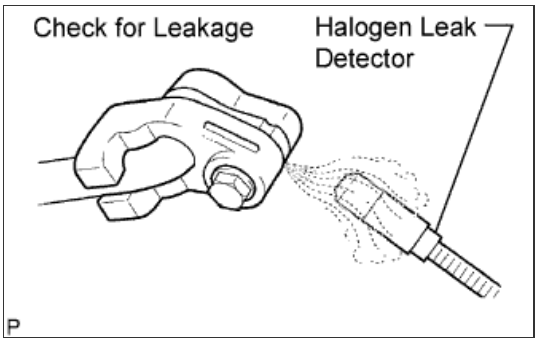


15. CHEC SRS ARNIN IGHT

a. Check the SRS warning light (Click here).

16. INSTALL UPPER RADIATOR SUPPORT SEAL


a. Install the radiator support seal with the 7 clips.

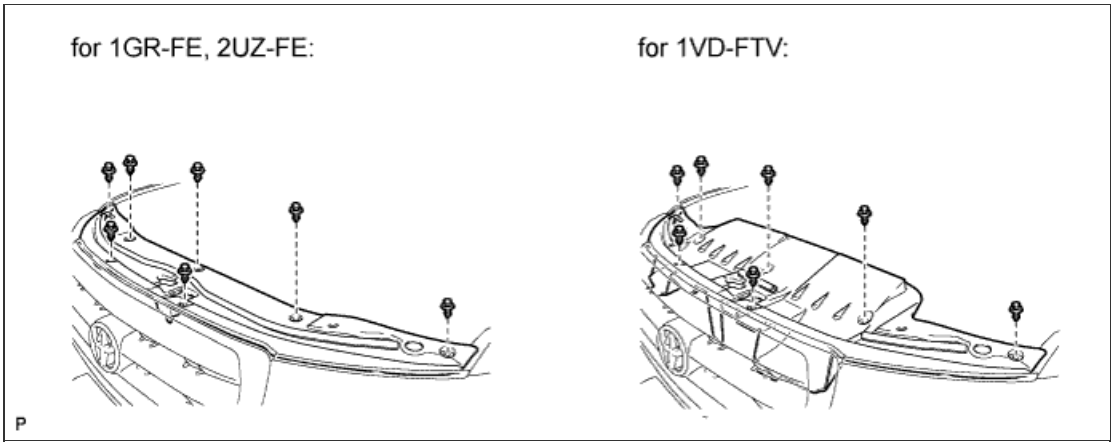

17. INSTALL NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. Install the o. 1 engine under cover with the 10 bolts.

Torque:
29 N*m{ 296 kgf*cm , 21 ft.*lbf }

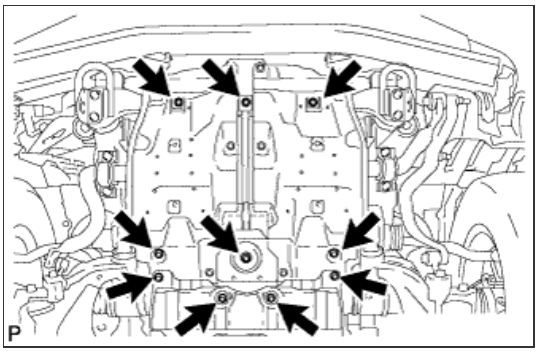

18. INSTALL REAR FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Install the front fender splash shield (Click here).

b. w/ Winch:
Install the front fender splash shield (Click here).

19. INSTALL REAR FENDER SPLASH SHIELD SUB-ASSEMBLY RH


a. for Standard:
Install the front fender splash shield (Click here).

b. w/ Winch:
Install the front fender splash shield (Click here).

for Preparation Click here

1. INSTALL REAR COOLING UNIT ASSEMBLY


a. Install the rear cooling unit as shown in the illustration.

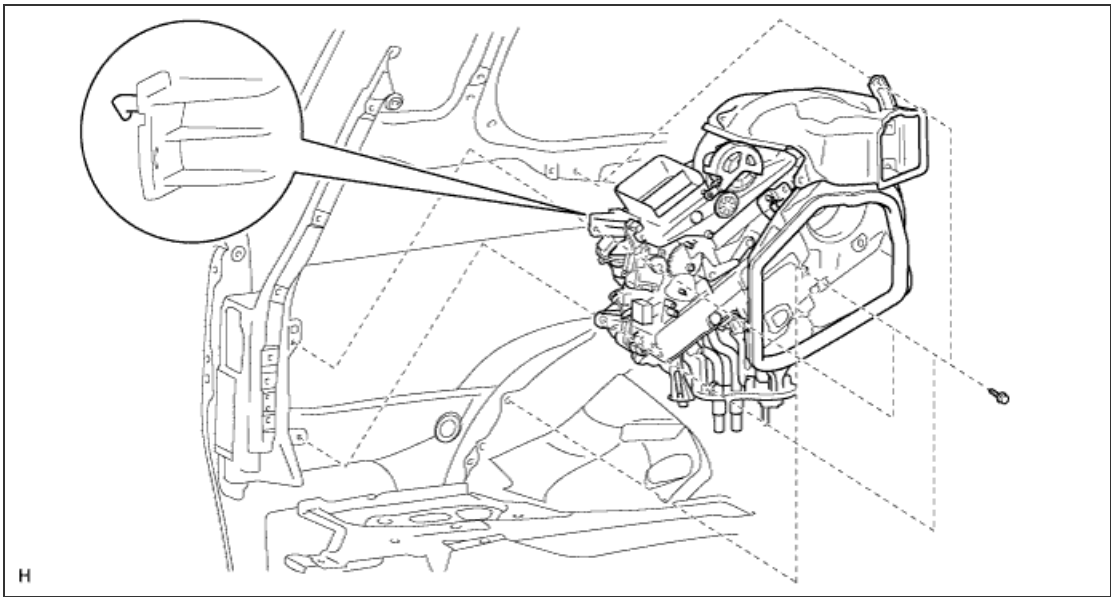

b. Install the 4 bolts.


Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

c. Connect the 2 connectors.

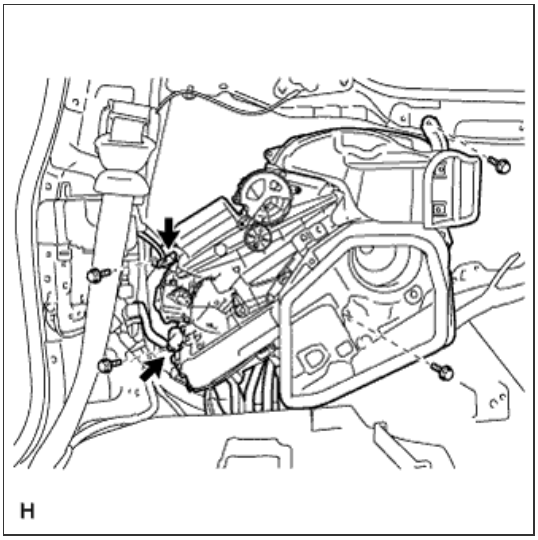


2. INSTALL REAR ROOF NO. 1 AIR DUCT

a. Install the duct with the clip.

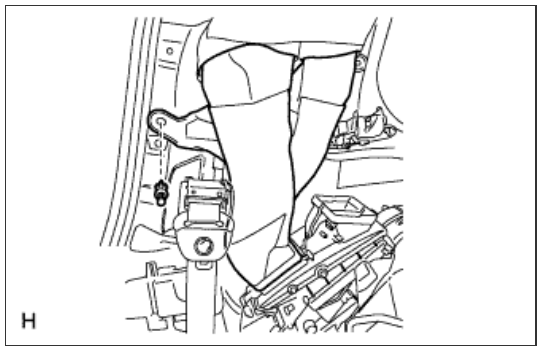

b. Attach the 2 claws to install the cooler plate.

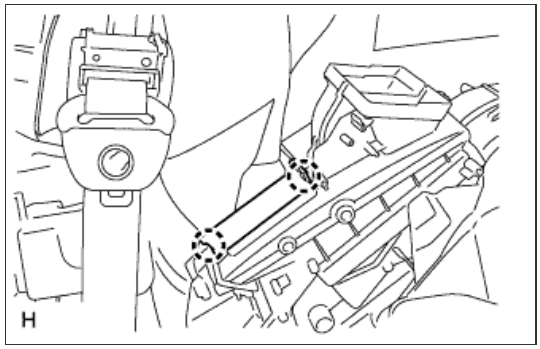

3. CONNECT AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY

a. Remove the attached vinyl tape from the pipe.


b. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the air conditioner tube and accessory assembly.

c. Install 2 O-rings on the air conditioner tube and accessory assembly.

d. Connect the air conditioner tube and accessory assembly.

e. Install the 2 bolts.

Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

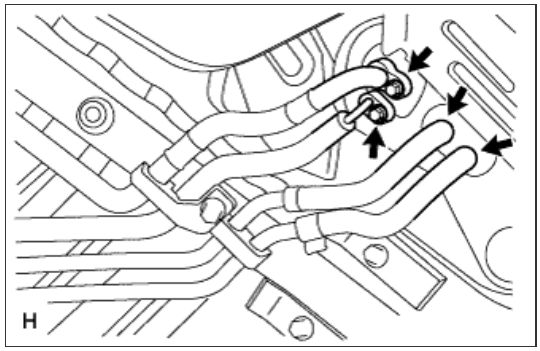

f. Connect the heater water inlet hose and heater water outlet hose.

g. Using pliers, grip the claws of the clip and slide the 2 clips.

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/Sliding Roof:
Install the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel (Click here).

5. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/Sliding Roof:
Install the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Install the rear seat cover cap (Click here).

6. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

a. Install the tonneau cover assembly.

7. INSTALL REAR DOOR SCUFF PLATE LH

a. w/Sliding Roof:
Install the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Install the rear door scuff plate (Click here).

8. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. w/Sliding Roof:
Install the rear floor mat rear support plate (Click here).

b. w/o Sliding Roof:
Install the rear floor mat rear support plate (Click here)

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. ADD ENGINE COOLANT

a. for 1VD-FTV:
Add engine coolant (Click here).

b. for 2UZ-FE:
Add engine coolant (Click here).

c. for 1GR-FE:
Add engine coolant (Click here).

d. for 3UR-FE:
Add engine coolant (Click here).

11. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool ox	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool ox	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool ox	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool ox	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool ox	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool ox	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool ox	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool ox	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool ox	920 +/-30 g (32.5 +/-1.1 oz.)

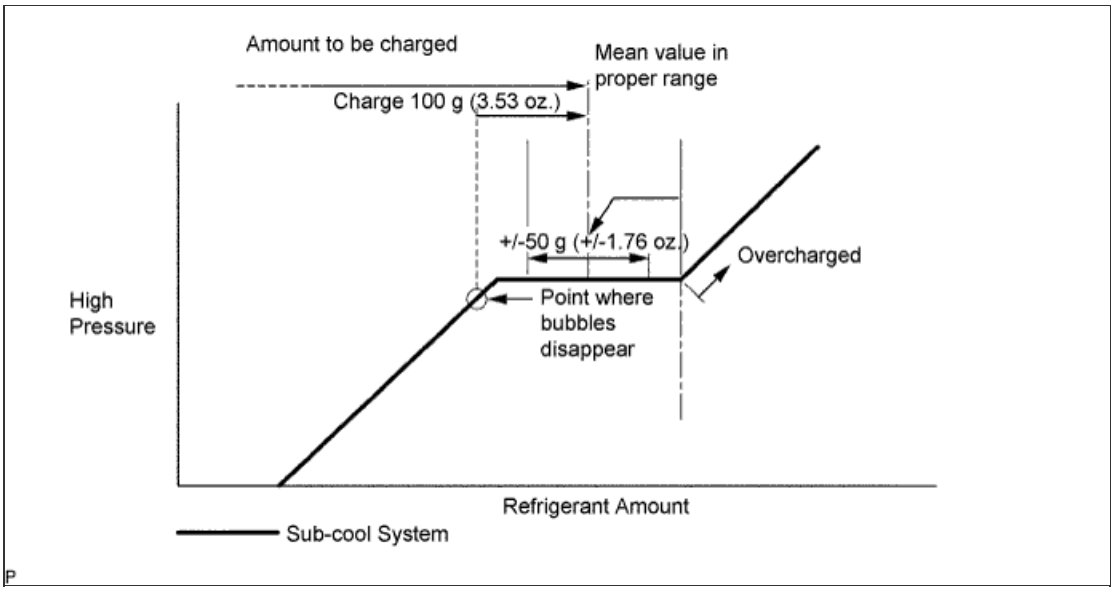

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properl without an rigerant, and will overheat.**
- **Approximatel 200 g (7.05 o .) of refrigerant ma need to be charged after bubbles disappear. The refrigerant amount should be checked b measuring its quantit , and not with the sight glass.**

12. ARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

13. CHEC FOR ENGINE COOLANT LEA S

a. for 1VD-FTV:
Check for engine coolant leaks (Click here).

b. for 2UZ-FE:
Check for engine coolant leaks (Click here).

c. for 1GR-FE:
Check for engine coolant leaks (Click here).

d. for 3UR-FE:
Check for engine coolant leaks (Click here).

14. CHEC FOR REFRIGERANT GAS LEA

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.

b. Perform the operation under these conditions:


- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- ake sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.

c. Using a halogen leak detector, check the refrigerant line for leakage.

d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

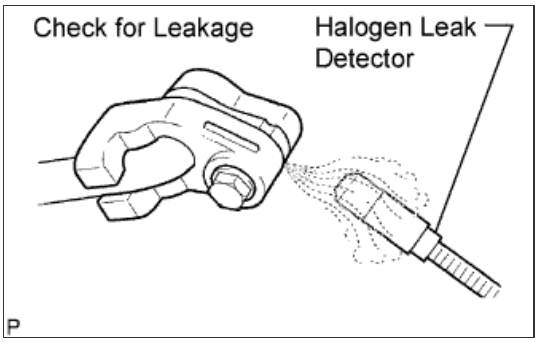


15. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

16. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Install the radiator support seal with the 7 clips.

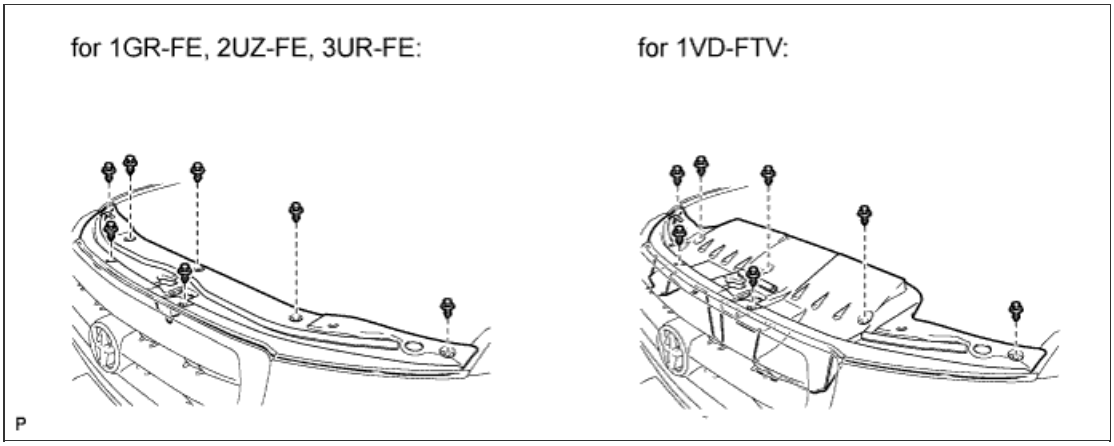

17. INSTALL NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. for 1VD-FTV:
Install the No. 1 engine under cover sub-assembly (Click here).

b. for 2UZ-FE:
Install the No. 1 engine under cover sub-assembly (Click here).

c. for 1GR-FE:
Install the No. 1 engine under cover sub-assembly (Click here).

d. for 3UR-FE:
Install the No. 1 engine under cover sub-assembly (Click here).

18. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Install the front fender splash shield (Click here).


b. w/ Winch:
Install the front fender splash shield (Click here).


19. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH


a. for Standard:
Install the front fender splash shield (Click here).

b. w/ Winch:
Install the front fender splash shield (Click here).

for Preparation Click here

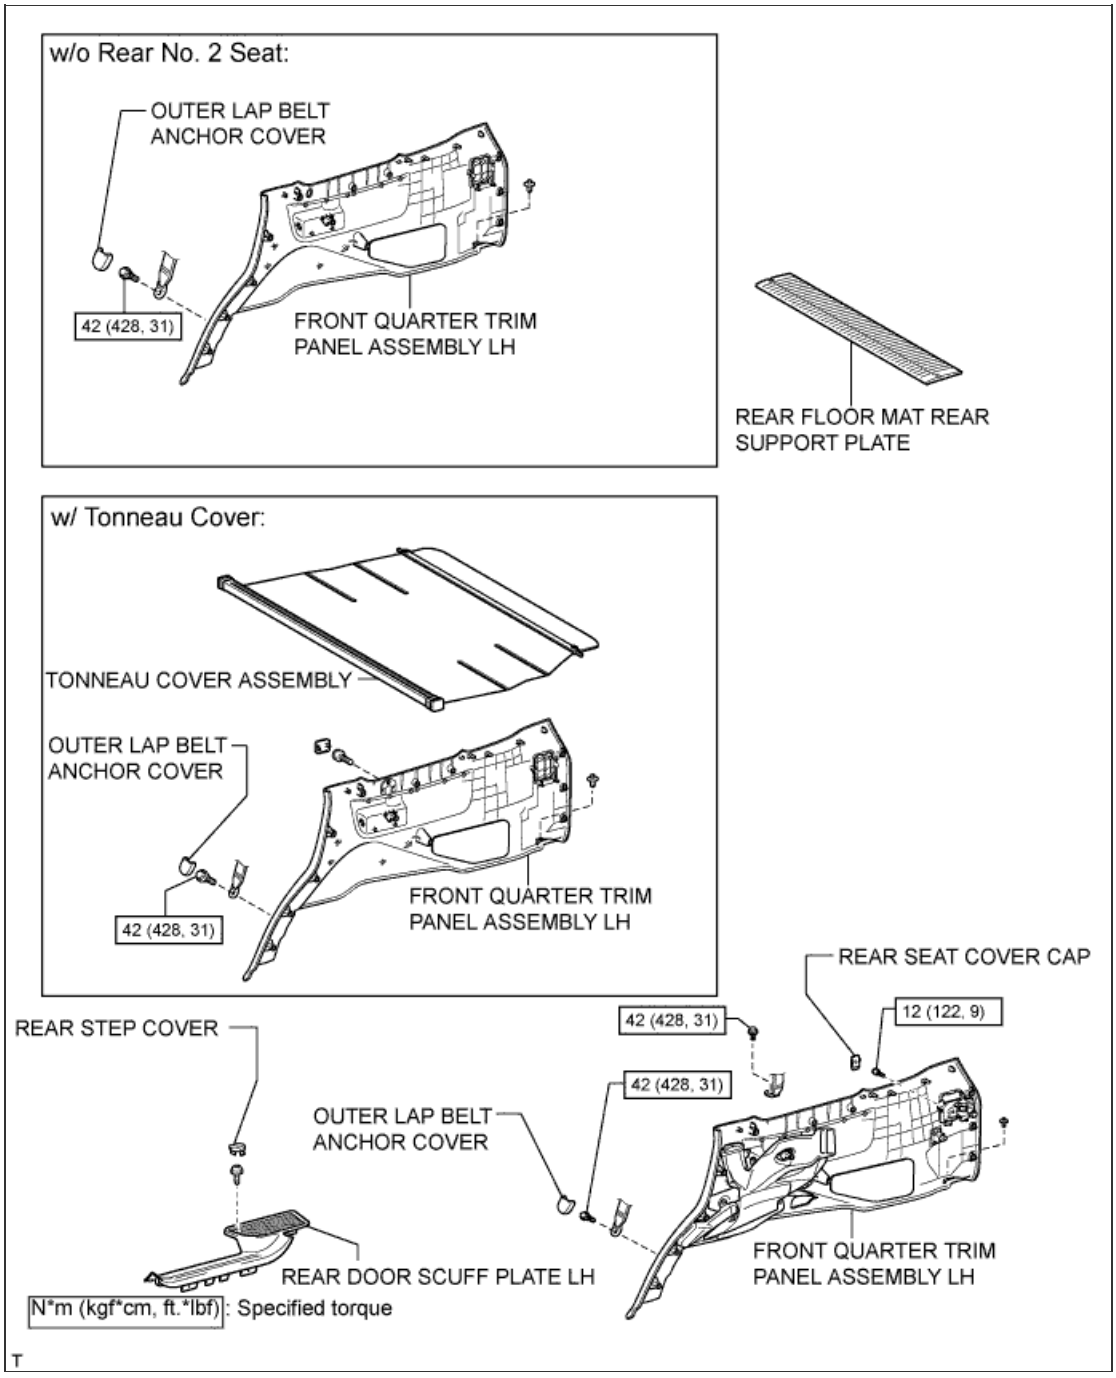

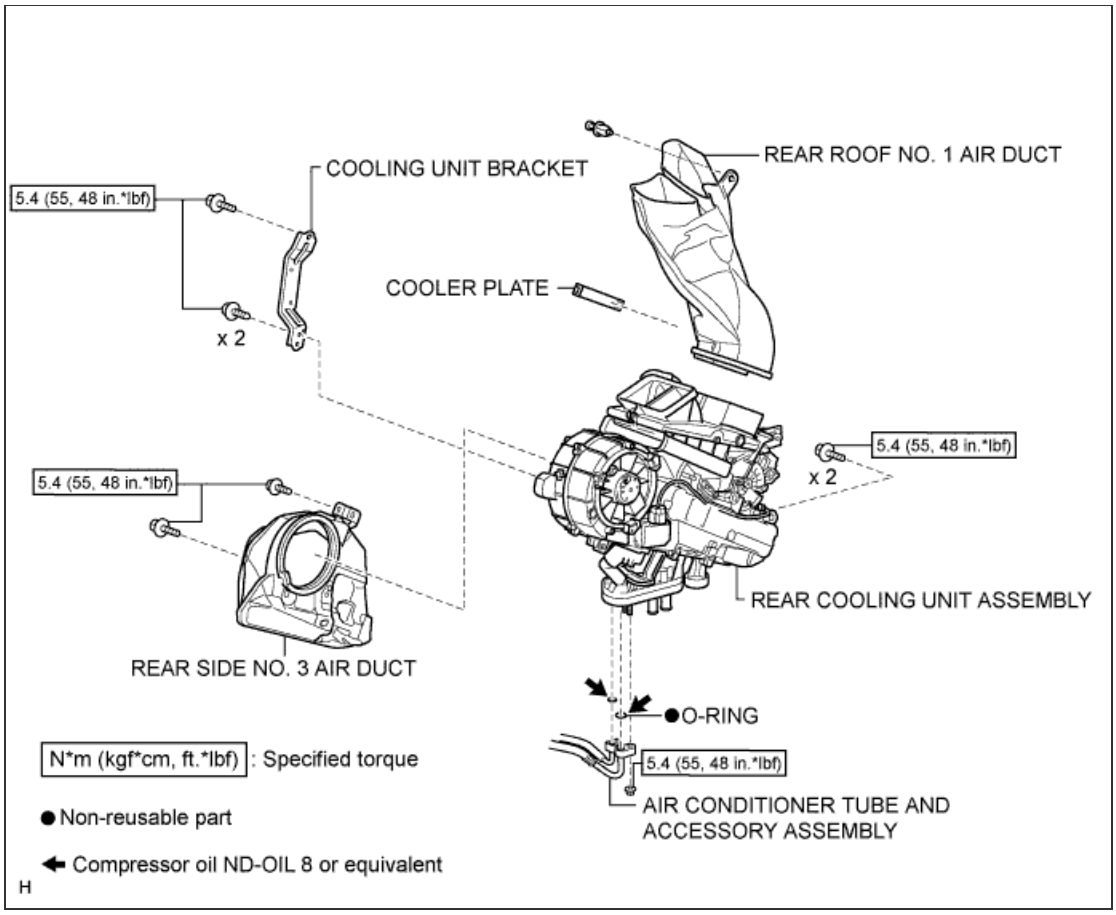

REAR ROOF NO. 1 AIR DUCT
COOLING UNIT BRACKET
5.4 (55, 48 in.*lbf)
COOLER PLATE
x 2
5.4 (55, 48 in.*lbf)
x 2
5.4 (55, 48 in.*lbf)
REAR COOLING UNIT ASSEMBLY
REAR SIDE NO. 3 AIR DUCT
●O-RING
5.4 (55, 48 in.*lbf)
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
Compressor oil ND-OIL 8 or equivalent
H

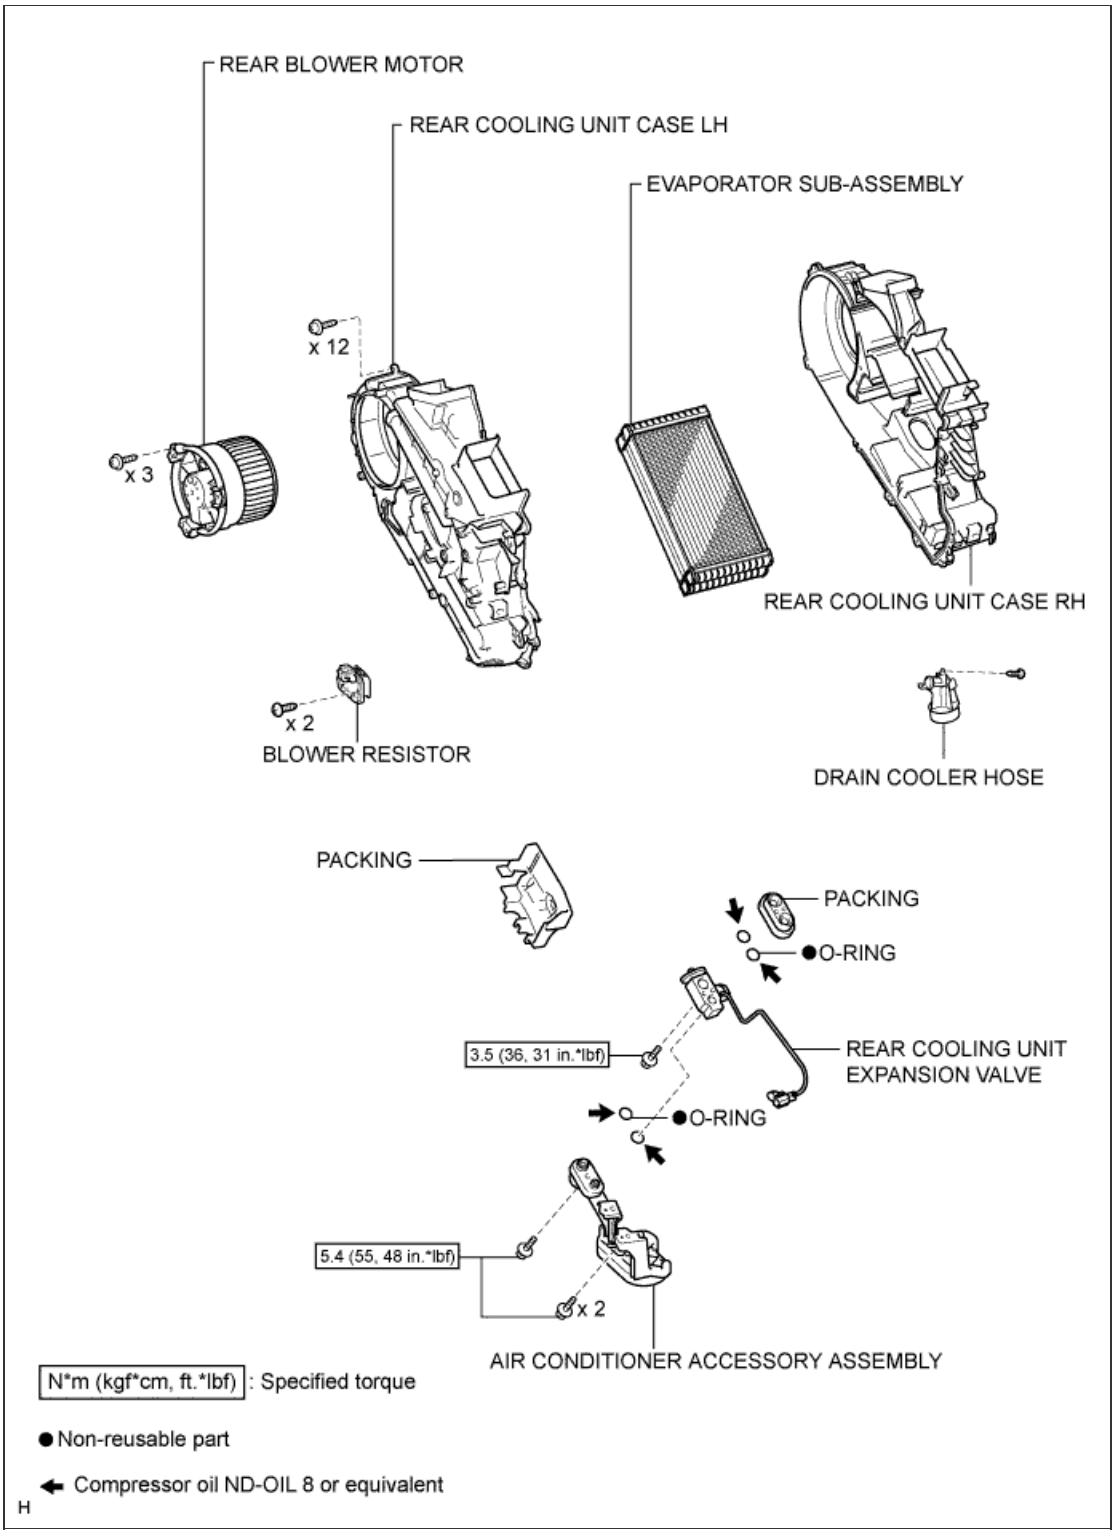
REAR BLOWER MOTOR
REAR COOLING UNIT CASE LH
EVAPORATOR SUB-ASSEMBLY
x 12
x 3
REAR COOLING UNIT CASE RH
x 2
BLOWER RESISTOR
DRAIN COOLER HOSE
PACKING
PACKING
●O-RING
3.5 (36, 31 in.*lbf)
REAR COOLING UNIT
EXPANSION VALVE
●O-RING
5.4 (55, 48 in.*lbf)
x 2
AIR CONDITIONER ACCESSORY ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
Compressor oil ND-OIL 8 or equivalent
H

for Preparation Click here

1. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

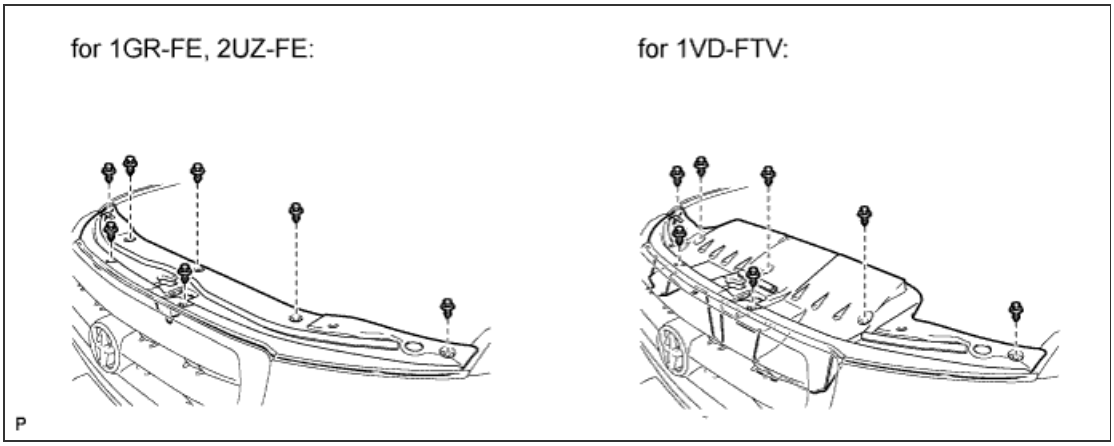

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

3. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

4. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Remove the rear floor mat rear support plate (Click here).

b. w/o Sliding Roof:
Remove the rear floor mat rear support plate (Click here).

5. REMOVE REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Remove the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Remove the rear door scuff plate (Click here).

6. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

7. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Remove the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Remove the rear seat cover cap (Click here).

8. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Remove the front quarter trim panel (Click here).

9. DISCONNECT AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY


a. Remove the 2 bolts.

b. Disconnect the air conditioner tube and accessory assembly.

NOTICE:


- **Do not use a screwdriver or similar tool to disconnect the tube.**
- **Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.**

c. Remove the 2 O-rings from the air conditioner tube and accessory assembly.

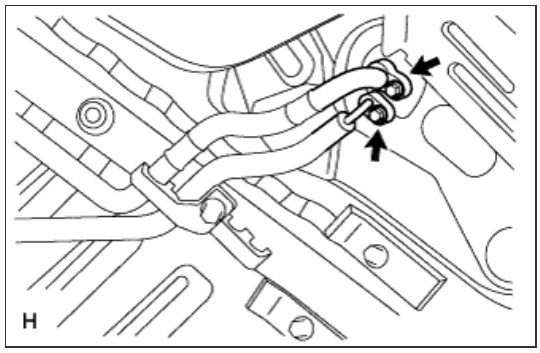


10. REMOVE REAR ROOF NO. 1 AIR DUCT

a. Detach the 2 claws and remove the cooler plate.

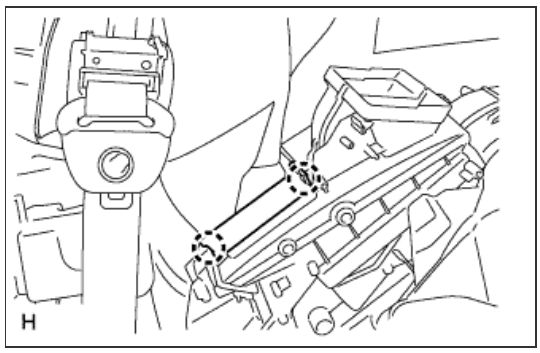


b. Remove the clip and duct.

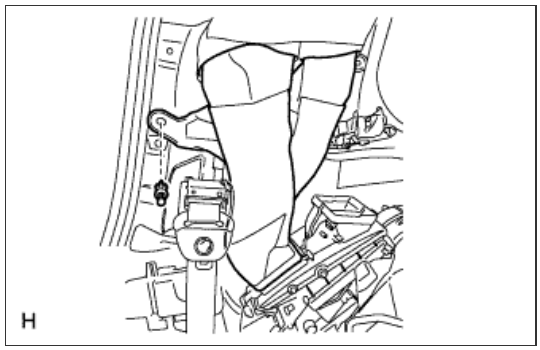

11. REMOVE REAR COOLING UNIT ASSEMBLY

a. Disconnect the connector.


b. Remove the 4 bolts and rear cooling unit.

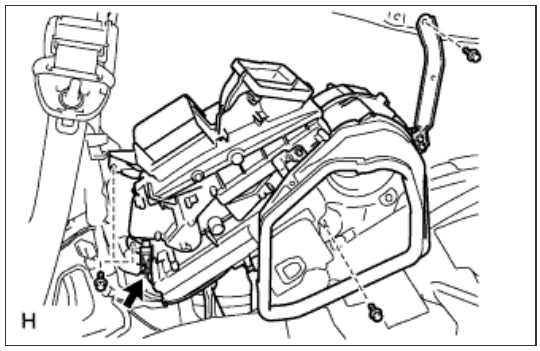

for Preparation Click here

1. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

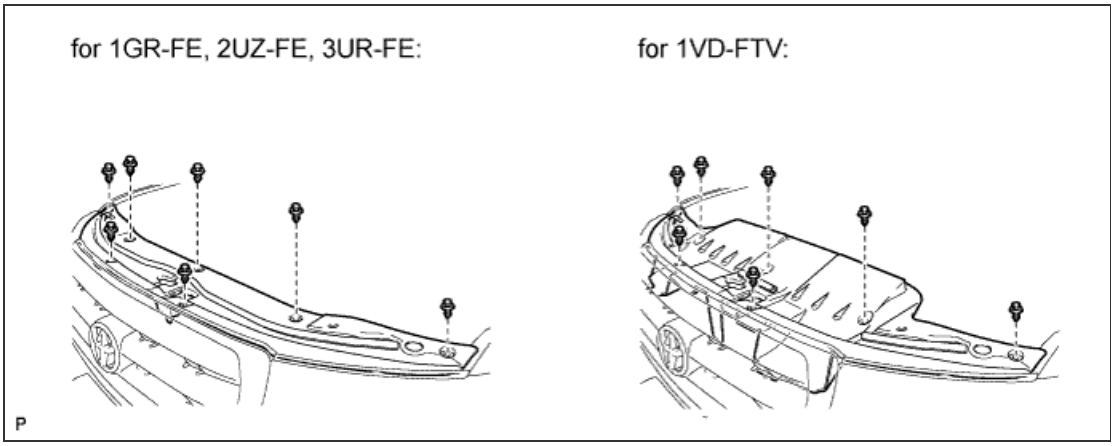

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

3. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

4. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Remove the rear floor mat rear support plate (Click here).

b. w/o Sliding Roof:
Remove the rear floor mat rear support plate (Click here).

5. REMOVE REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Remove the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Remove the rear door scuff plate (Click here).

6. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

a. Remove the tonneau cover.

7. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Remove the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Remove the rear seat cover cap (Click here).

8. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Remove the front quarter trim panel (Click here).

9. DISCONNECT AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY


a. Remove the 2 bolts.

b. Disconnect the air conditioner tube and accessory assembly.

NOTICE:


- **Do not use a screwdriver or similar tool to disconnect the tube.**
- **Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.**

c. Remove the 2 O-rings from the air conditioner tube and accessory assembly.

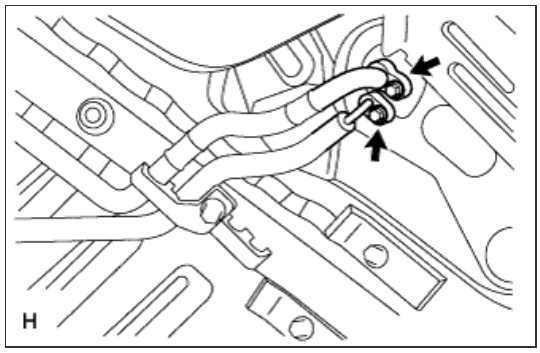


10. REMOVE REAR ROOF NO. 1 AIR DUCT

a. Detach the 2 claws and remove the cooler plate.

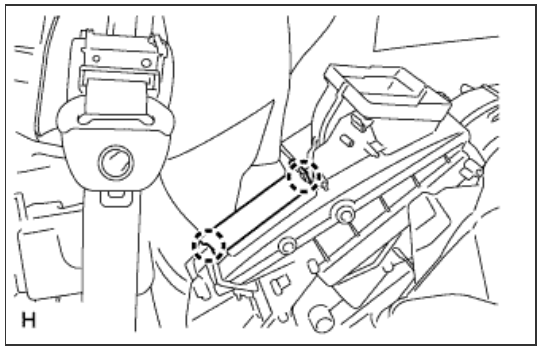


b. Remove the clip and duct.

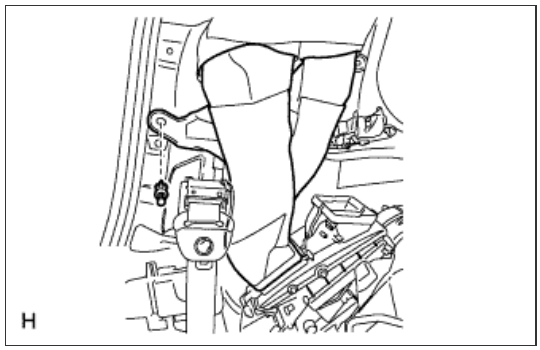

11. REMOVE REAR COOLING UNIT ASSEMBLY

a. Disconnect the connector.


b. Remove the 4 bolts and rear cooling unit.

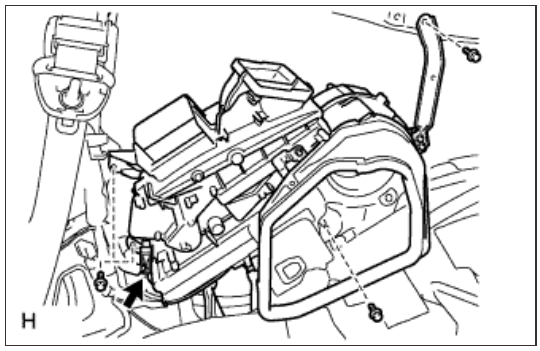

for Preparation Click here


1. REMOVE COOLING UNIT BRACKET

a. Remove the 2 screws and bracket.

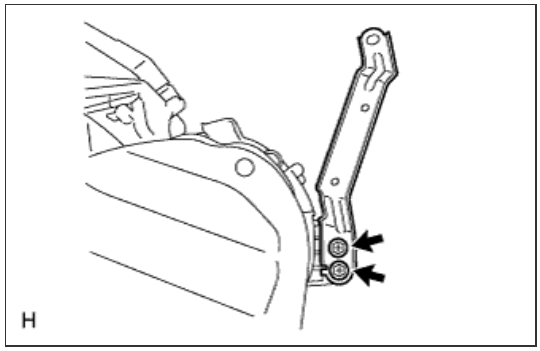

2. REMOVE REAR SIDE NO. 3 AIR DUCT


a. Remove the 2 screws and duct.

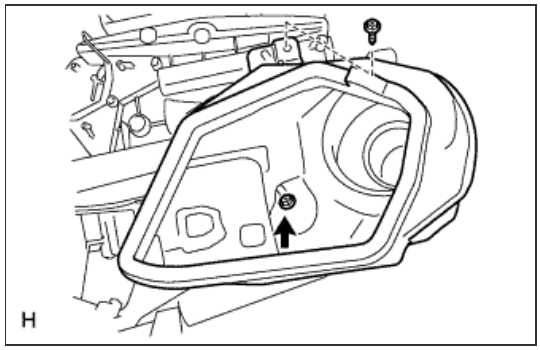

3. REMOVE DRAIN COOLER HOSE


a. Remove the screw.

b. Detach the claw and remove the drain hose.

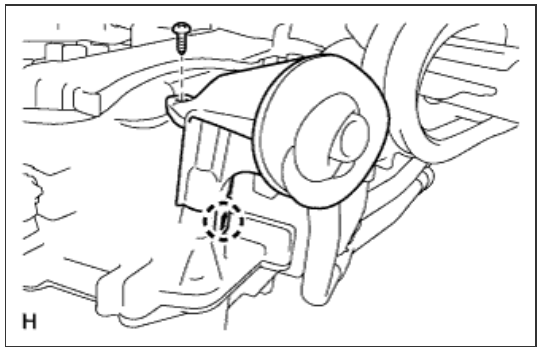

4. REMOVE AIR CONDITIONER ACCESSORY ASSEMBLY


a. Remove the packing.

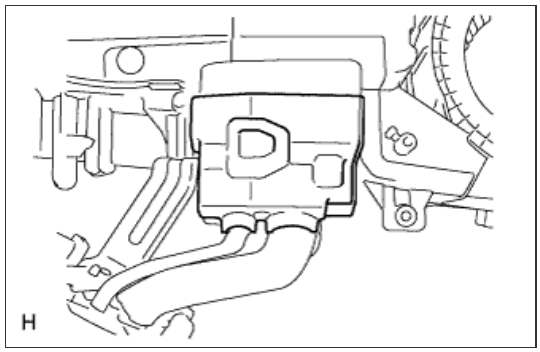

b. Remove the bolt and 2 screws.

c. Remove the air conditioner accessory assembly.

d. Remove the 2 O ings from the air conditioner accessory assembly.

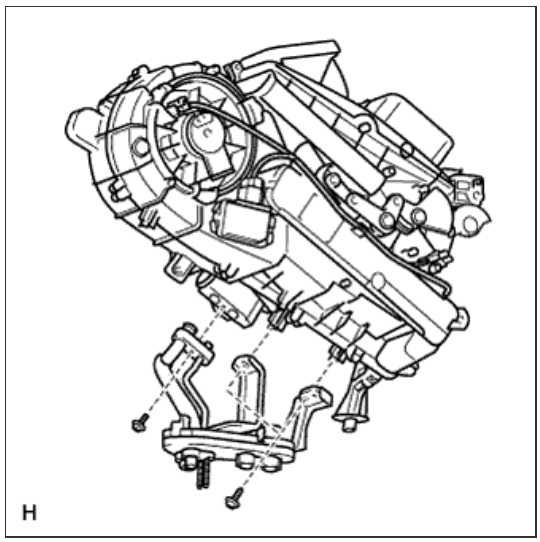


5. REMOVE REAR COOLING UNIT EXPANSION VALVE

a. Disconnect the connector.

b. Detach the clamp.


c. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts and expansion valve.

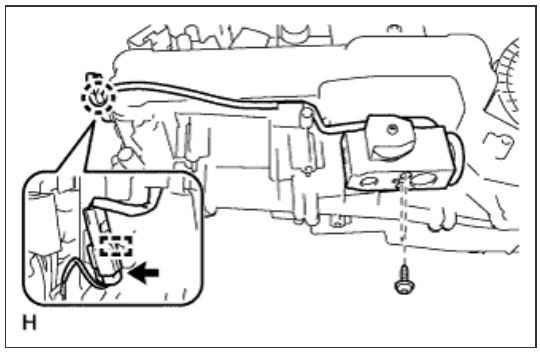

6. REMOVE BLOWER RESISTOR

a. Disconnect the connector.


b. Remove the 2 screws and blower resistor.

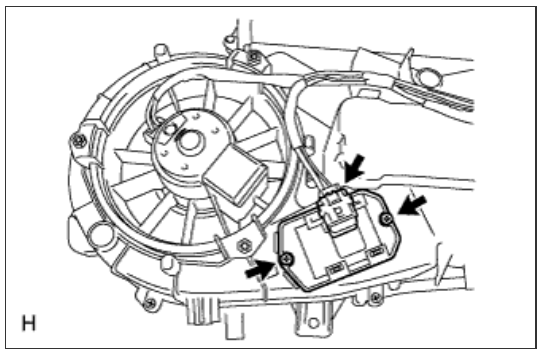

7. REMOVE REAR BLOWER MOTOR

a. Disconnect the connector.


b. Remove the 3 screws and blower motor.

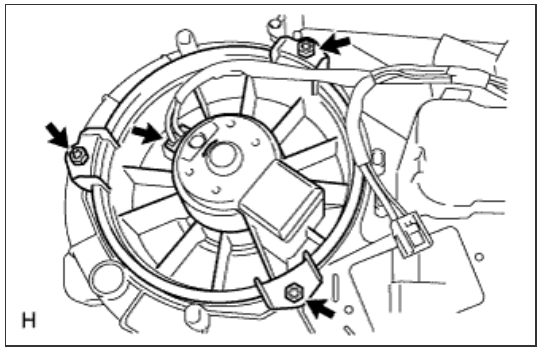


8. REMOVE EVAPORATOR SUB-ASSEMBLY

a. Remove the 12 screws and rear cooling unit case LH.

b. Remove the evaporator.

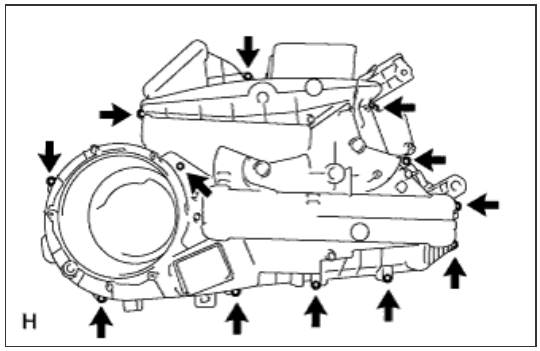

c. Remove the 2 O ings from the evaporator.

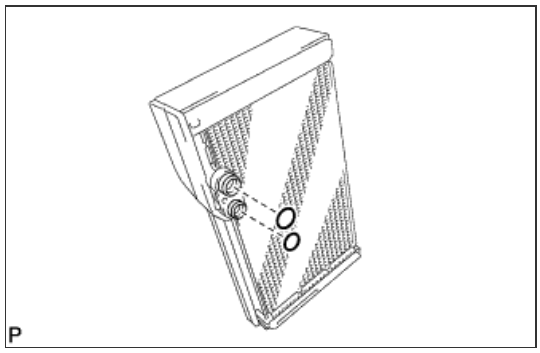

9. REMOVE WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY

for Preparation Click here

1. INSTALL WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY


2. INSTALL EVAPORATOR SUB-ASSEMBLY

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.


Compressor oil:
ND-OIL 8 or equivalent

b. Install the 2 O-rings to the evaporator.

c. Install the evaporator.

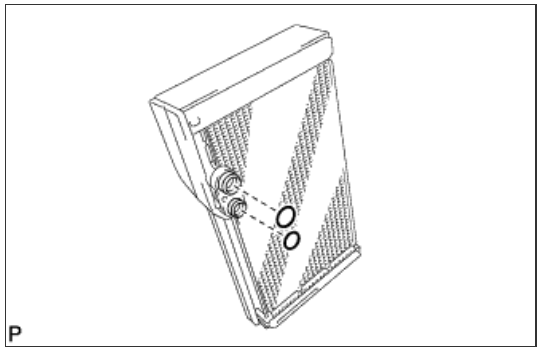


d. Install the rear cooling unit case LH with the 12 screws.

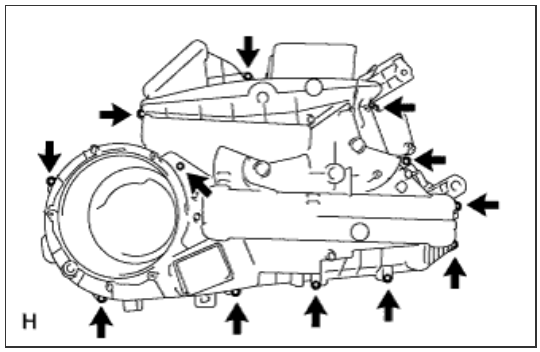

3. INSTALL REAR BLOWER MOTOR

a. Install the blower motor with the 3 screws.


b. Connect the connector.

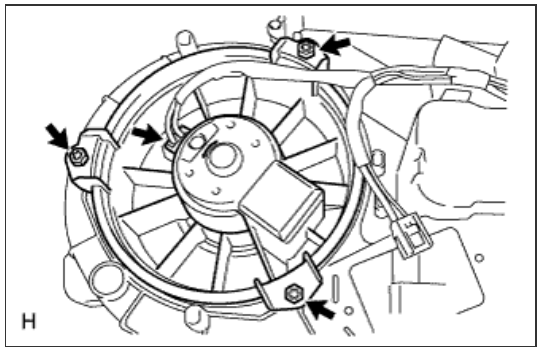

4. INSTALL BLOWER RESISTOR

a. Install the blower resistor with the 2 screws.

b. Connect the connector.

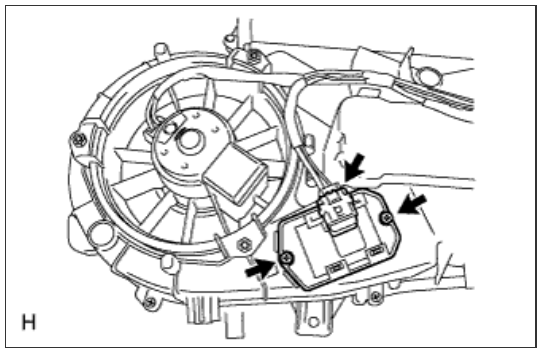


5. INSTALL REAR COOLING UNIT E PANSION VALVE

a. Using a 4 mm hexagon wrench, install the expansion valve with the 2 hexagon bolts.

Torque:
3.5 N m 36 kgf cm , 31 in. lbf }

b. Attach the clamp.

c. Connect the connector.

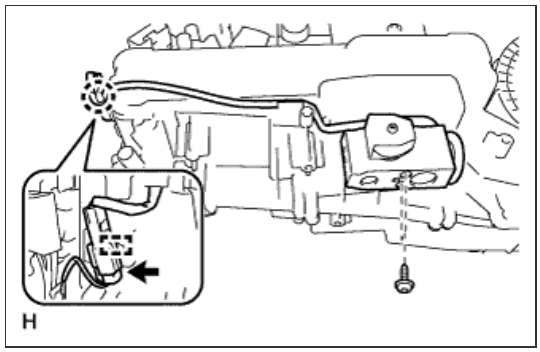

6. INSTALL AIR CONDITIONER ACCESSORY ASSEMBLY

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.


Compressor oil:
ND-OIL 8 or equivalent

b. Install the 2 O-rings to the air conditioner accessory assembly.


c. Install the air conditioner accessory assembly.

d. Install the bolt and 2 screws.

Torque:
5.4 N m k mf, 48 in. lbf }

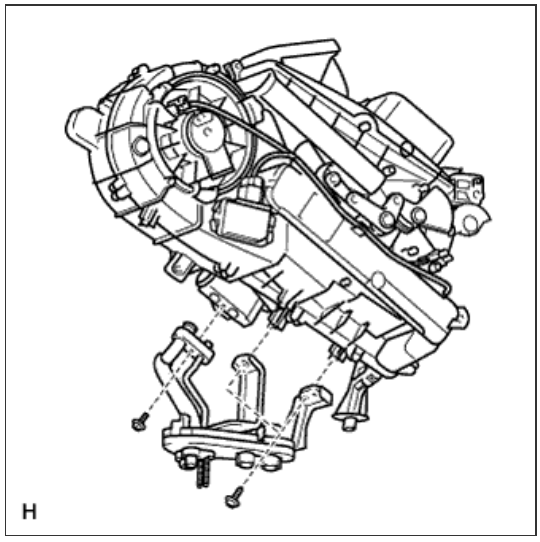


e. Install new packing as shown in the illustration.

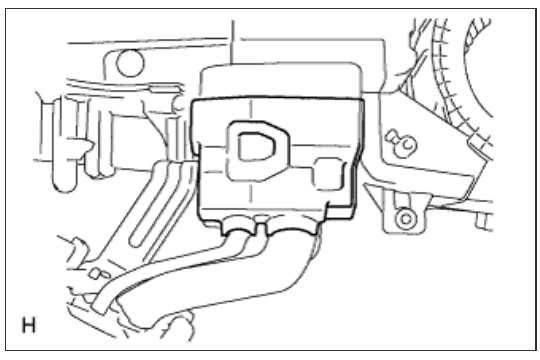

7. INSTALL DRAIN COOLER HOSE

a. Attach the claw to install the drain hose.


b. Install the screw.

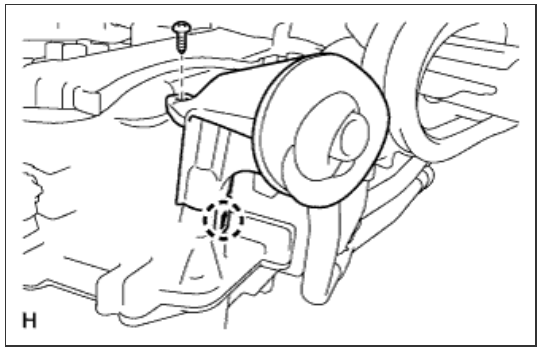

8. INSTALL REAR SIDE NO. 3 AIR DUCT

a. Install the duct with the 2 screws.


Torque:
5.4 N m k mf, 46 in. bf }

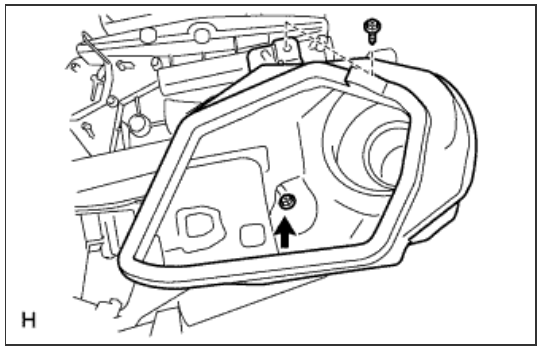

. INSTALL COOLING UNIT BRAC ET

a. Install the bracket with the 2 screws.


Torque:
5.4 N m k mf, 46 in. bf }

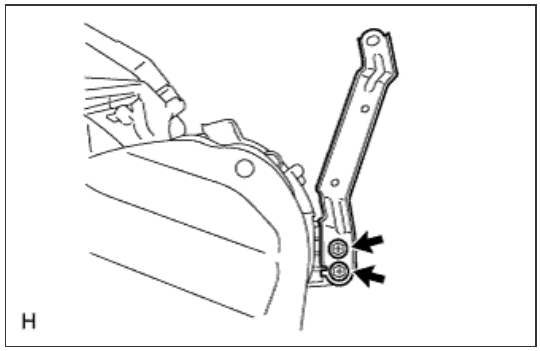

for Preparation Click here

1. INSTALL REAR COOLING UNIT ASSEMBLY


a. Install the rear cooling unit as shown in the illustration.

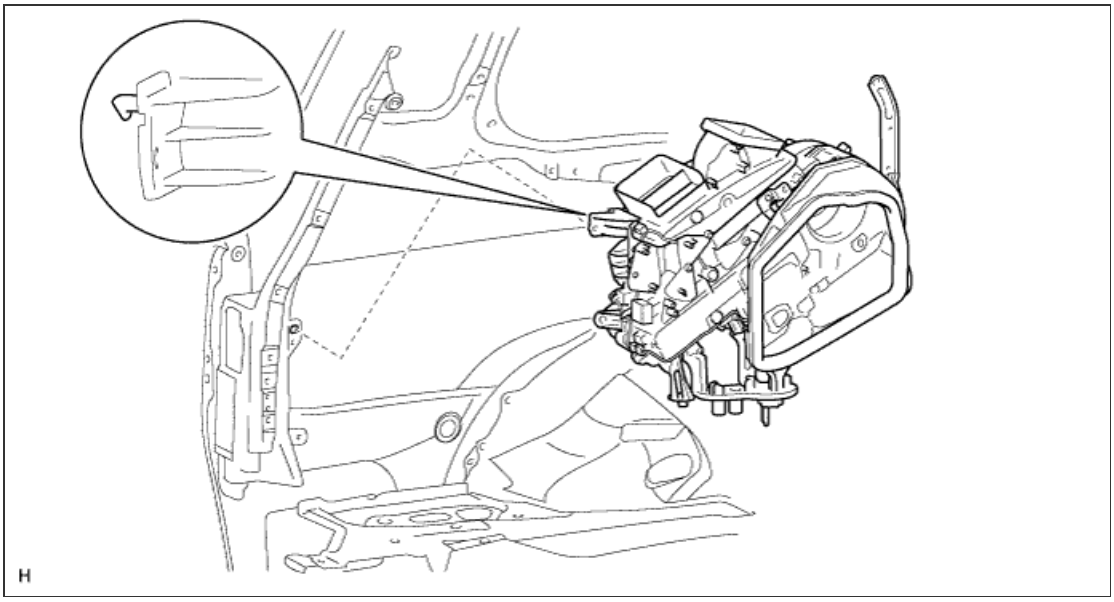

b. Install the 4 bolts.


Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

c. Connect the connector.

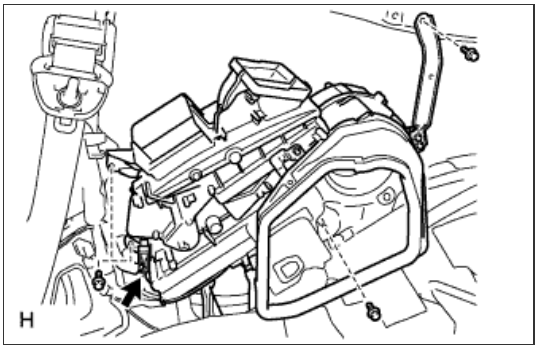


2. INSTALL REAR ROOF NO. 1 AIR DUCT

a. Install the duct with the clip.

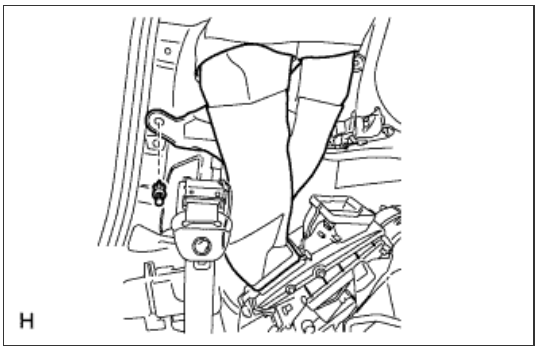

b. Attach the 2 claws to install the cooler plate.

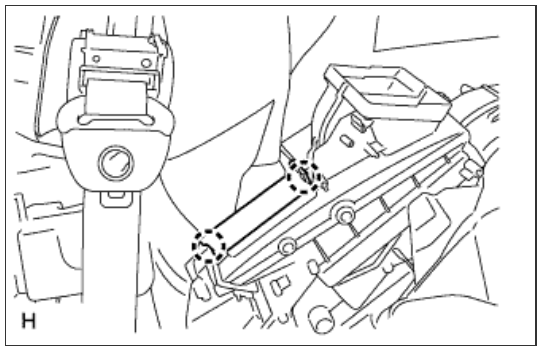

3. CONNECT AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY

a. Remove the attached vinyl tape from the pipe.


b. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the air conditioner tube and accessory assembly.

c. Install the 2 O-rings to the air conditioner tube and accessory assembly.

. Connect the air conditioner tube and accessory assembly.

e. Install the 2 bolts.

Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

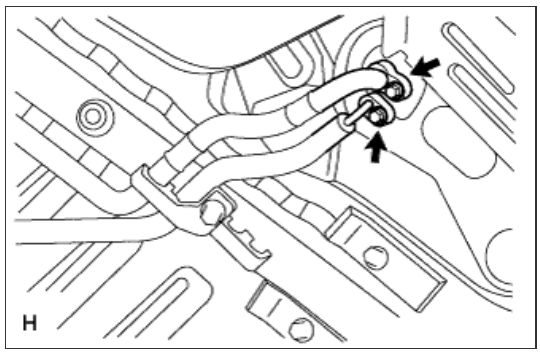

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel (Click here).

5. INSTALL REAR SEAT CO ER CA R (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Install the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Install the rear seat cover cap (Click here).

6. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Co er)

. INSTALL REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Install the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Install the rear door scuff plate (Click here).

8. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Install the rear floor mat rear support plate (Click here).

b. w/o Sliding Roof:
Install the rear floor mat rear support plate (Click here).

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-020)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Stan ar:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 /-30 g (30.7 /-1.1 oz.)
		w/o Cool Box	870 /-30 g (30.7 /-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 /-30 g (35.6 /-1.1 oz.)
		w/o Cool Box	960 /-30 g (33.9 /-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 /-30 g (27.2 /-1.1 oz.)
		w/o Cool Box	770 /-30 g (27.2 /-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 /-30 g (34.2 /-1.1 oz.)
		w/o Cool Box	920 /-30 g (32.5 /-1.1 oz.)

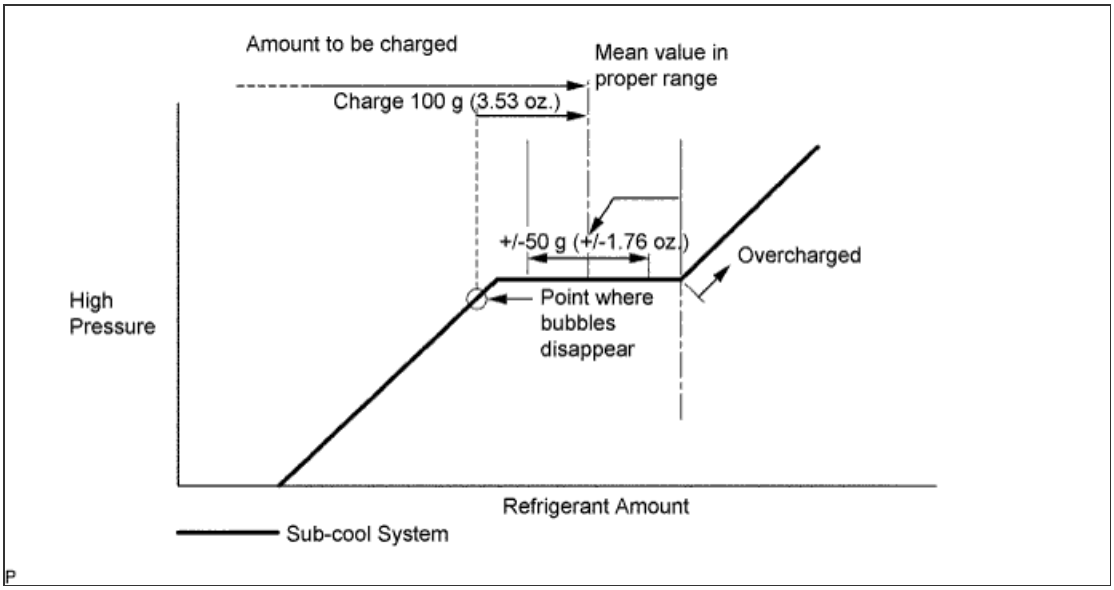

NOTICE:

- **Do not operate the cooler compre or before charging refrigerant a he cooler compre or will not work properl without an r frigerant, an will o erheat.**
- **Approximatel 200 g (.05 o .) of refrigerant ma nee to be charge fter bubble i ppear. The refrigerant amount houl be checke b mea uring it quantit , an not with the ight gla .**

11. AR M UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

12. CHEC FOR REFRIGERANT GAS LEA

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.

. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

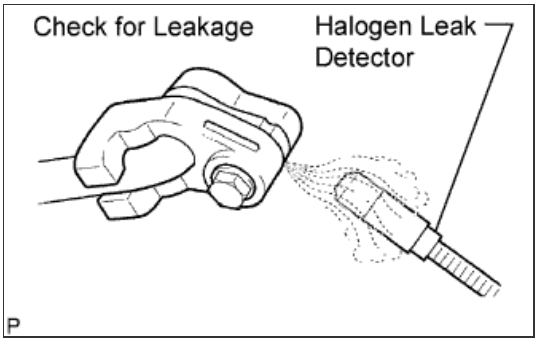


13. CHEC SRS ARNIN IGHT

a. Check the SRS warning light (Click here).

14. INSTALL UPPER RADIATOR SUPPORT SEAL


a. Install the radiator support seal with the 7 clips.

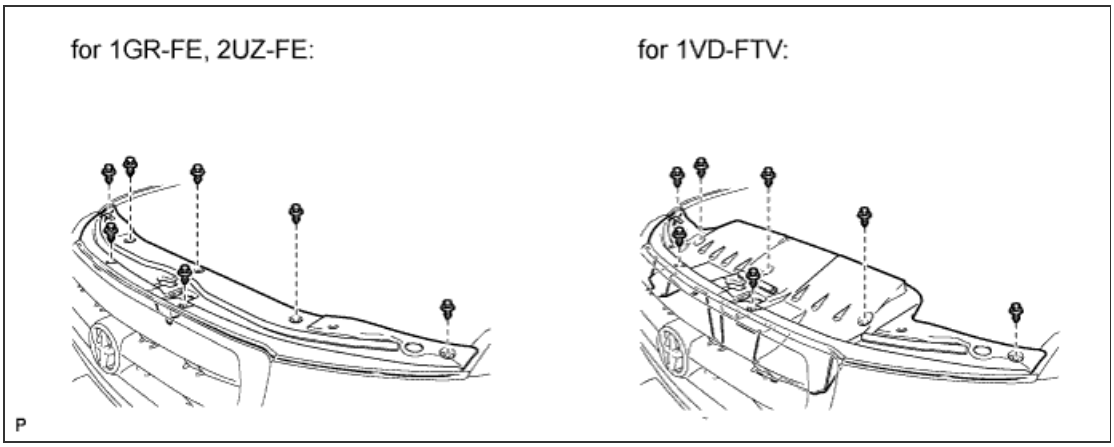

for Preparation Click here

1. INSTALL REAR COOLING UNIT ASSEMBLY


a. Install the rear cooling unit as shown in the illustration.

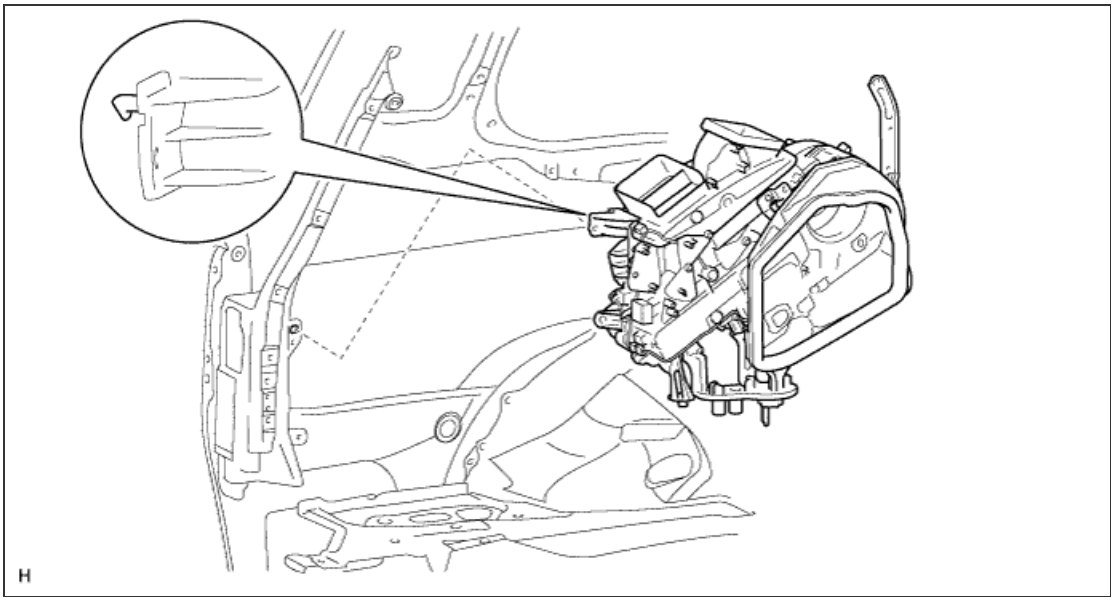

b. Install the 4 bolts.


Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

c. Connect the connector.

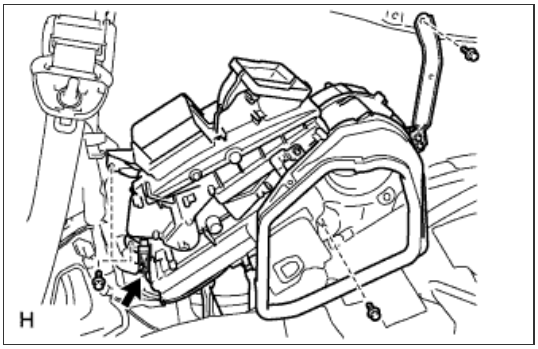


2. INSTALL REAR ROOF NO. 1 AIR DUCT

a. Install the duct with the clip.

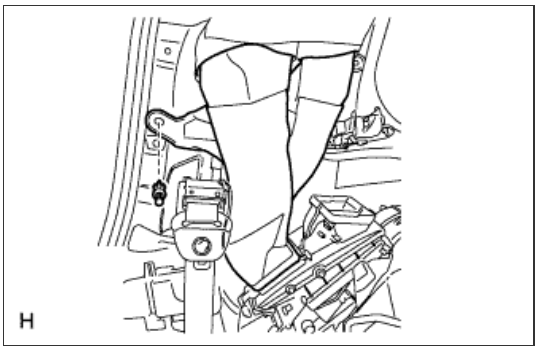

b. Attach the 2 claws to install the cooler plate.

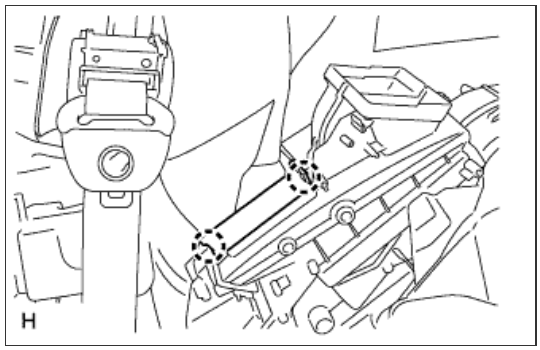

3. CONNECT AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY

a. Remove the attached vinyl tape from the pipe.


b. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the air conditioner tube and accessory assembly.

c. Install the 2 O-rings to the air conditioner tube and accessory assembly.

. Connect the air conditioner tube and accessory assembly.

e. Install the 2 bolts.

Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

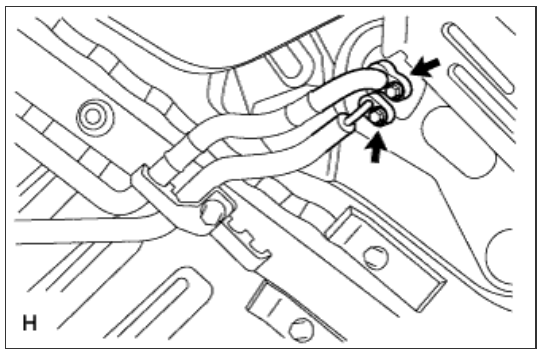

4. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel (Click here).

5. INSTALL REAR SEAT CO ER CA R (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Install the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Install the rear seat cover cap (Click here).

6. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Co er)

a. Install the tonneau cover assembly.

. INSTALL REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Install the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Install the rear door scuff plate (Click here).

8. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Install the rear floor mat rear support plate (Click here).

b. w/o Sliding Roof:
Install the rear floor mat rear support plate (Click here).

9. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

10. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-020)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Stan ar:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 /-30 g (30.7 /-1.1 oz.)
		w/o Cool Box	870 /-30 g (30.7 /-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 /-30 g (35.6 /-1.1 oz.)
		w/o Cool Box	960 /-30 g (33.9 /-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 /-30 g (27.2 /-1.1 oz.)
		w/o Cool Box	770 /-30 g (27.2 /-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 /-30 g (34.2 /-1.1 oz.)
		w/o Cool Box	920 /-30 g (32.5 /-1.1 oz.)

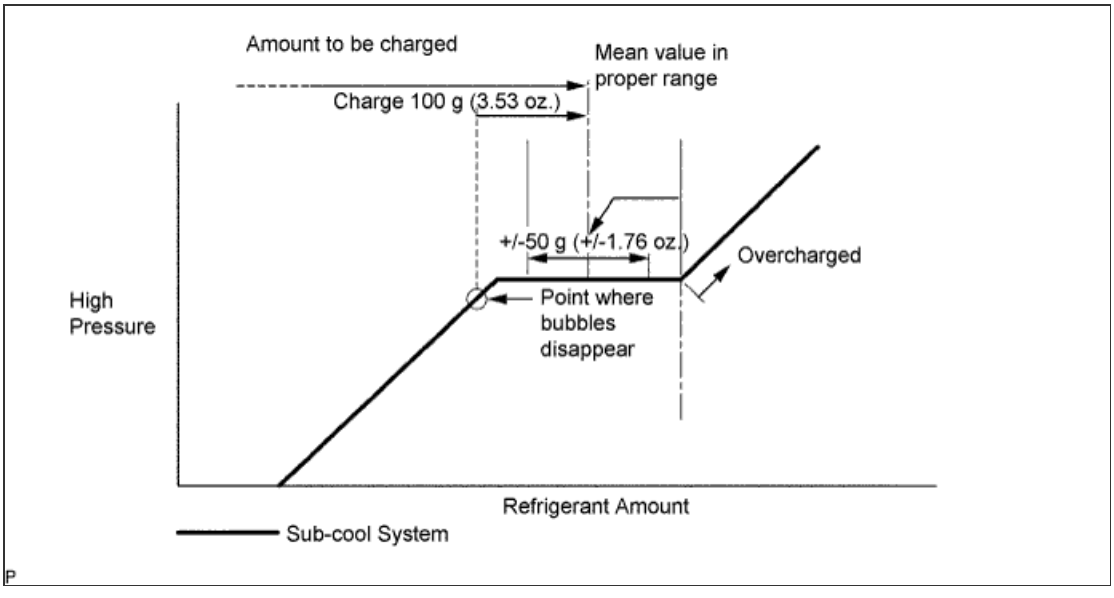

NOTICE:

- **Do not operate the cooler compre or before charging refrigerant a he cooler compre or will not work properl without an refrigerant, an will o erheat.**
- **Approximatel 200 g (.05 o .) of refrigerant ma nee to be charge fter bubble i ppear. The refrigerant amount houl be checke b mea uring it quantit , an not with the ight gla .**

11. AR UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

12. CHEC FOR REFRIGERANT GAS LEA

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.

. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

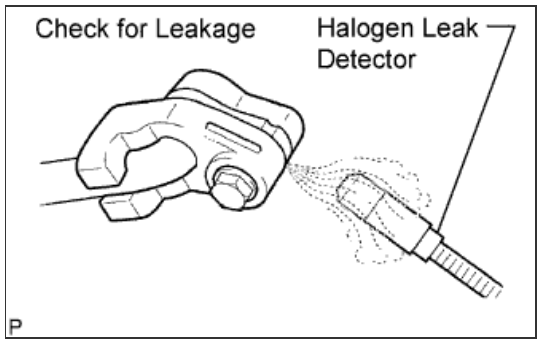


13. CHEC SRS ARNIN IGHT


a. Check the SRS warning light (Click here).


14. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Install the radiator support seal with the 7 clips.

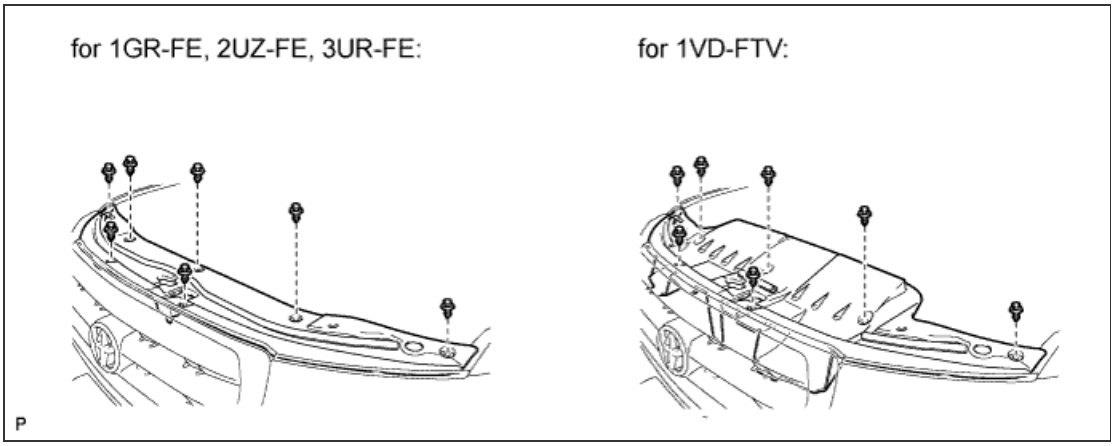

for Preparation [Click here]

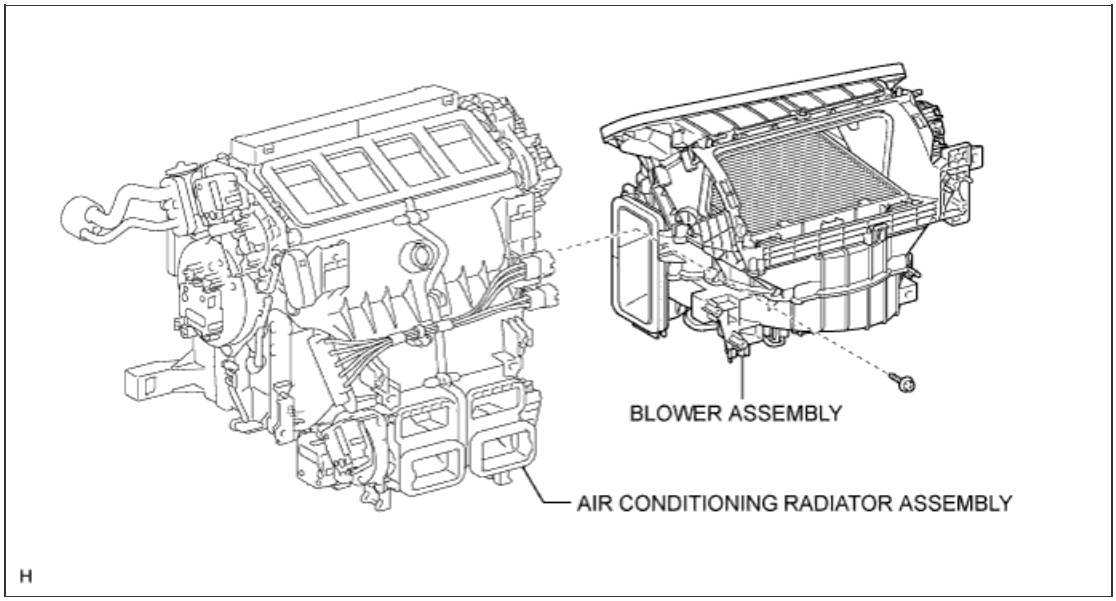

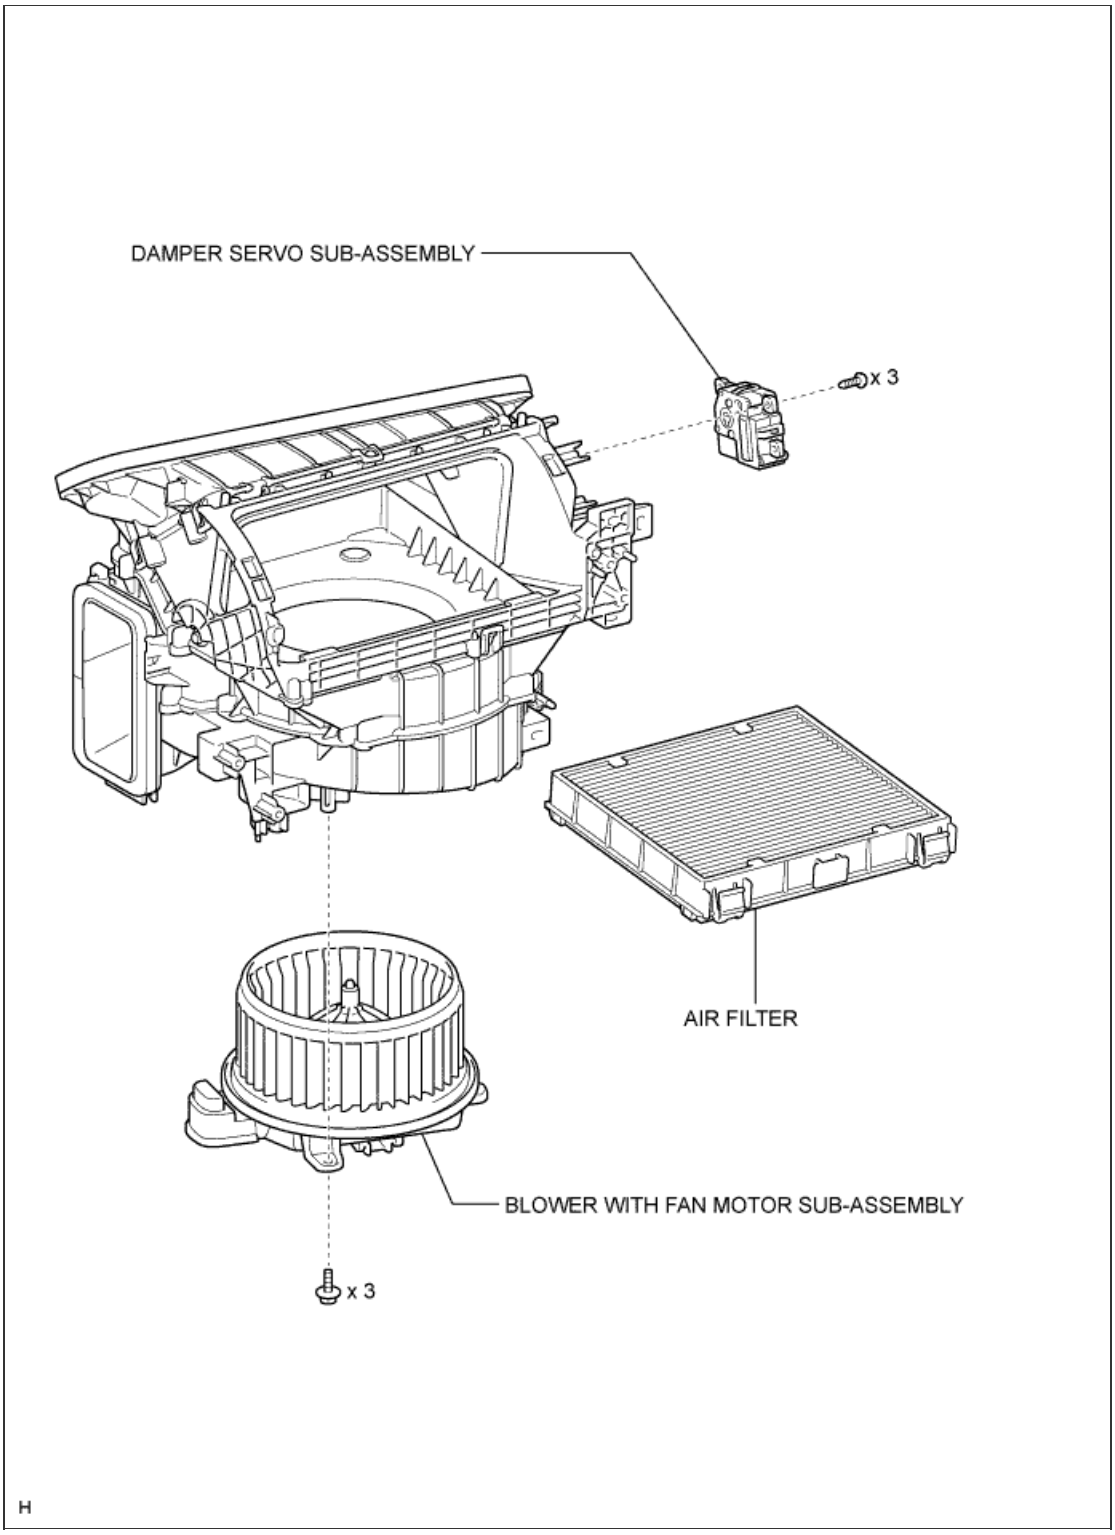
DAMPER SERVO SUB-ASSEMBLY
x 3
AIR FILTER
BLOWER WITH FAN MOTOR SUB-ASSEMBLY
x 3
H

for Preparation Click here

HINT:

- **U e t e a roeqdures for the LHD e cle and RHD e cle.**
- **The procedures listed below are for the LHD e cle.**

1. REMOVE AIR CONDITIONING UNIT


a Remove the air conditioning unit (Click here).

MOVE BLOWER A MBLY

a. Remove the screw.

b. Disconnect the connector and clamp.

c. Detach the claw and remove the blower unit.

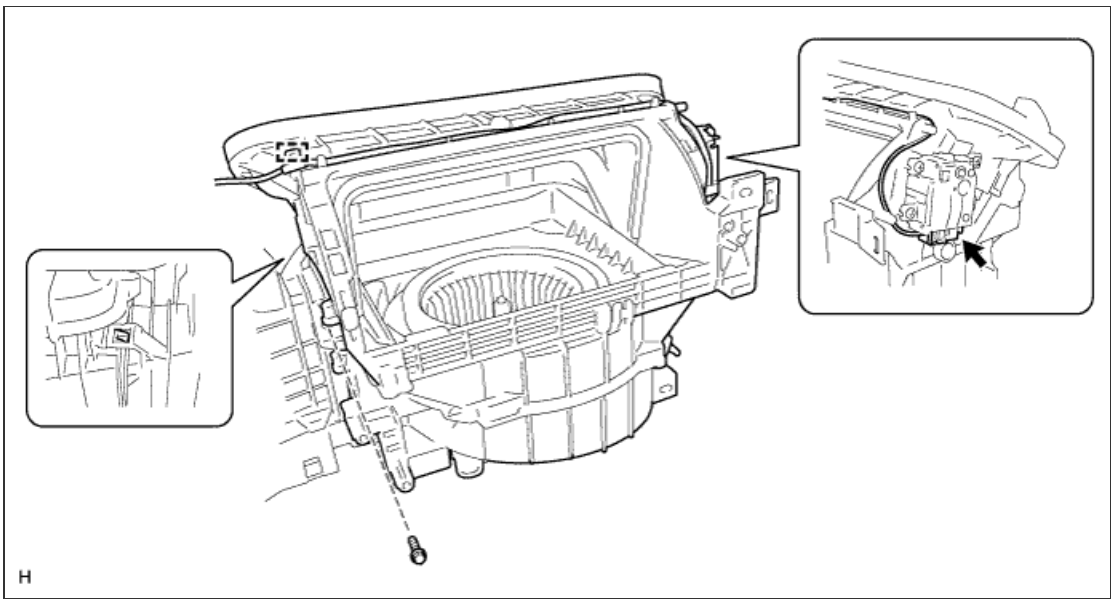

for Preparation Click here

HINT:

- **U e t e a roeqdures for the LHD e cle and RHD e cle.**
- **The procedures listed below are for the LHD e cle.**

1. REMOVE AIR CONDITIONING UNIT


a Remove the air conditioning unit (Click here).

MOVE BLOWER A MBLY

a. Remove the screw.

b. Disconnect the connector and clamp.

c. Detach the claw and remove the blower unit.

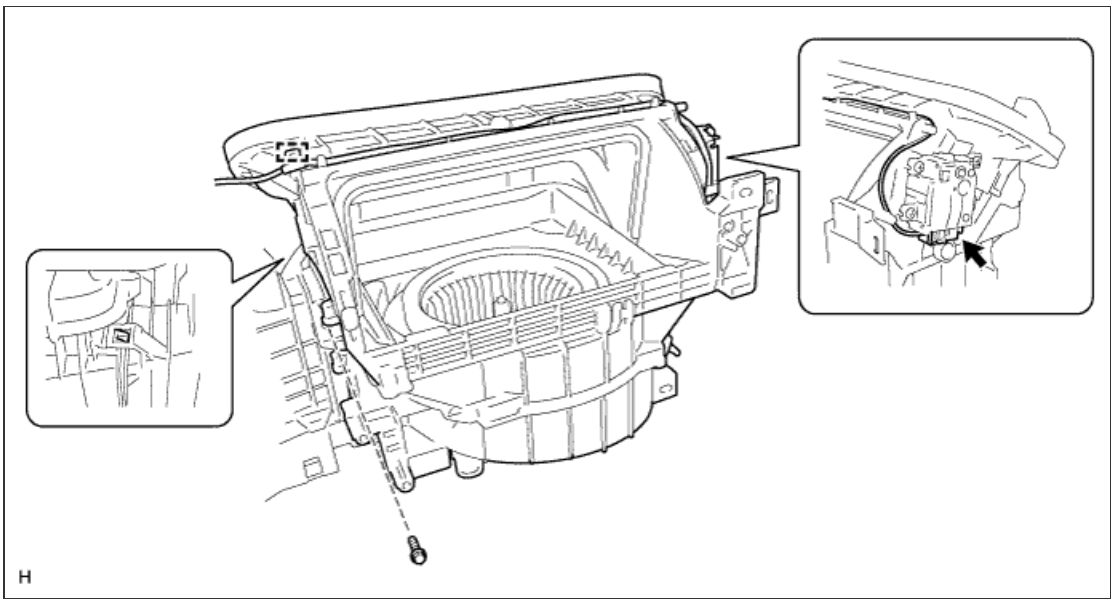


for Preparation Click here

HINT:

- **U e the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**


1. REMOVE DAMPER SERVO SUB ASSEMBLY

a. Remove the 3 screws and damper servo.

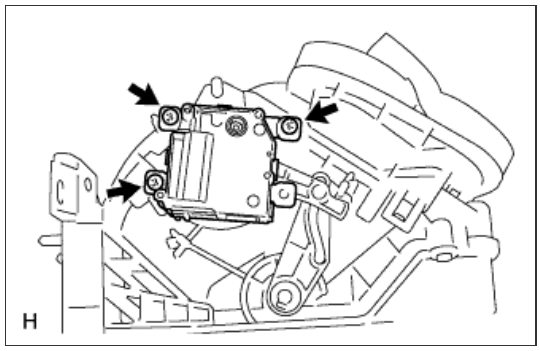


2. REMOVE BLOWER WIT AN MOTOR SUB ASSEMBLY

a. Remove the 3 screws and motor.

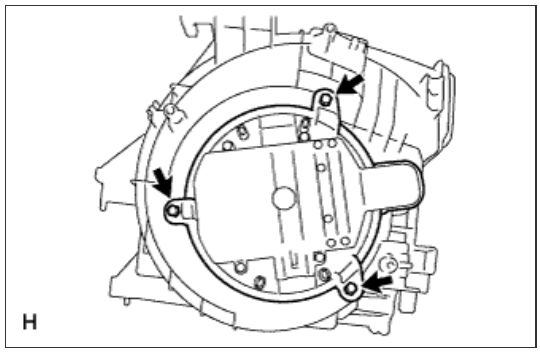

3. REMOVE AIR FILTER

a. Detach the 2 claws and remove the filter.

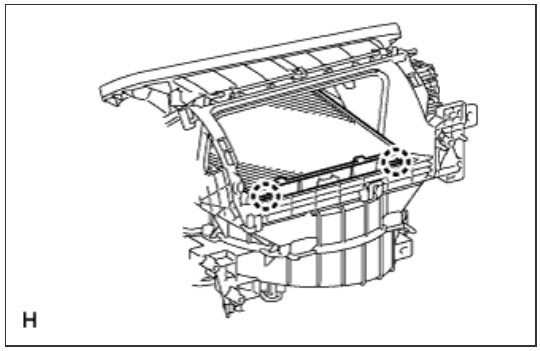


for Preparation Click here

HINT:

- **U e the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**


1. INSTALL AIR FILTER

a. Attach the 2 claws to install the filter.

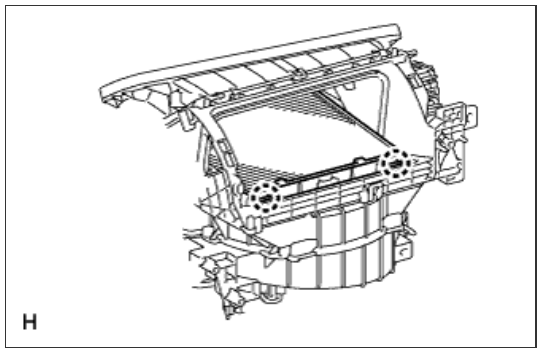


2. INSTALL BLOWER WIT AN MOTOR SUB ASSEMBLY

a. Install the motor with the 3 screws.

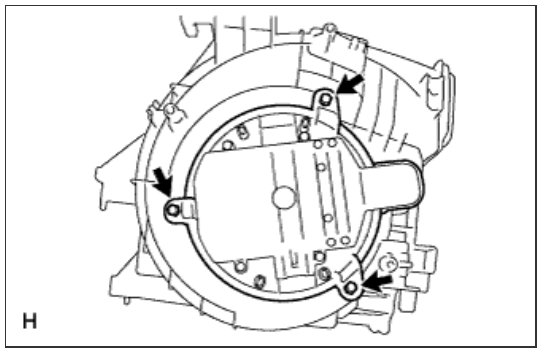

3. INSTALL DAMPER SERVO SUB ASSEMBLY

a. Install the damper servo with the 3 screws.

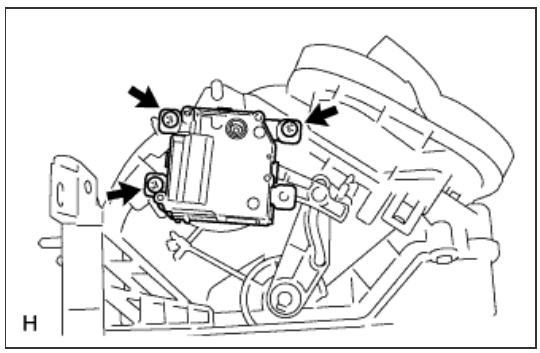


for Preparation Click here

HINT:

- **U e the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. INSTALL BLOWER ASSEMBLY

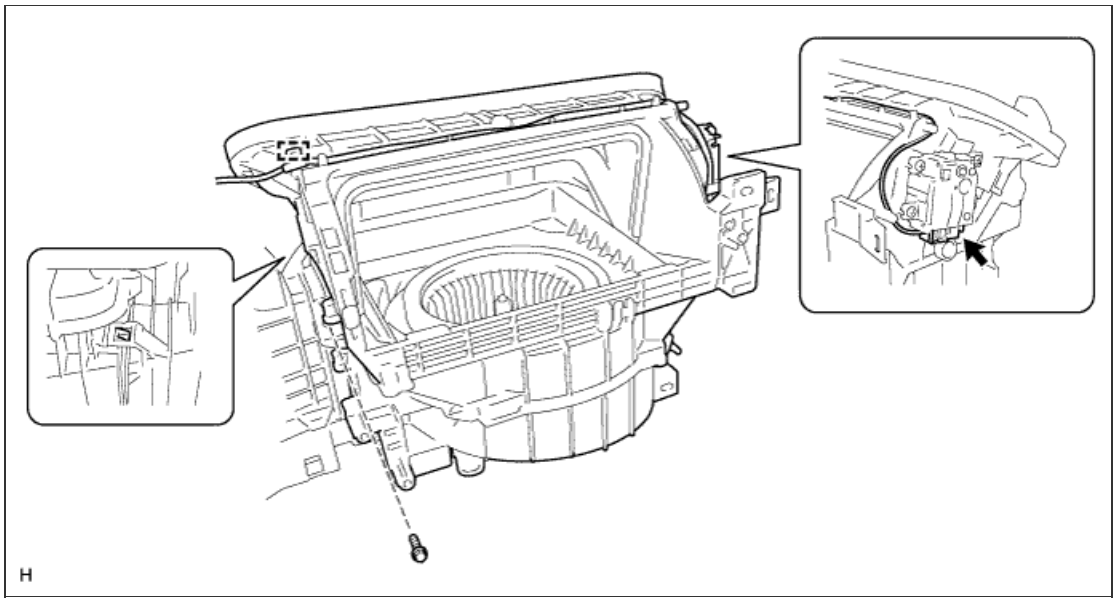

a. Attach the claw to install the blower unit.

b. Connect the connector and clamp.

c. Install the screw.

2. INSTALL AIR CONDITIONING UNIT


a. Install the air conditioning unit (Click here).

for Preparation Click here

HINT:

- **U e the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. INSTALL BLOWER ASSEMBLY

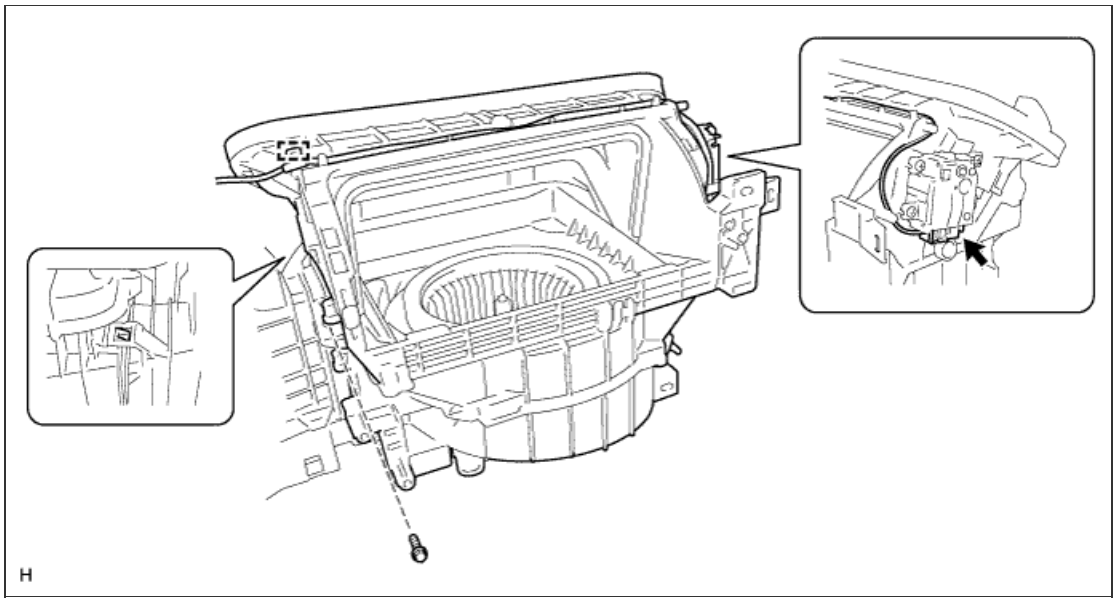

a. Attach the claw to install the blower unit.


b. Connect the connector and clamp.

c. Install the screw.

2. INSTALL AIR CONDITIONING UNIT

a. Install the air conditioning unit (Click here).

for Preparation Click here

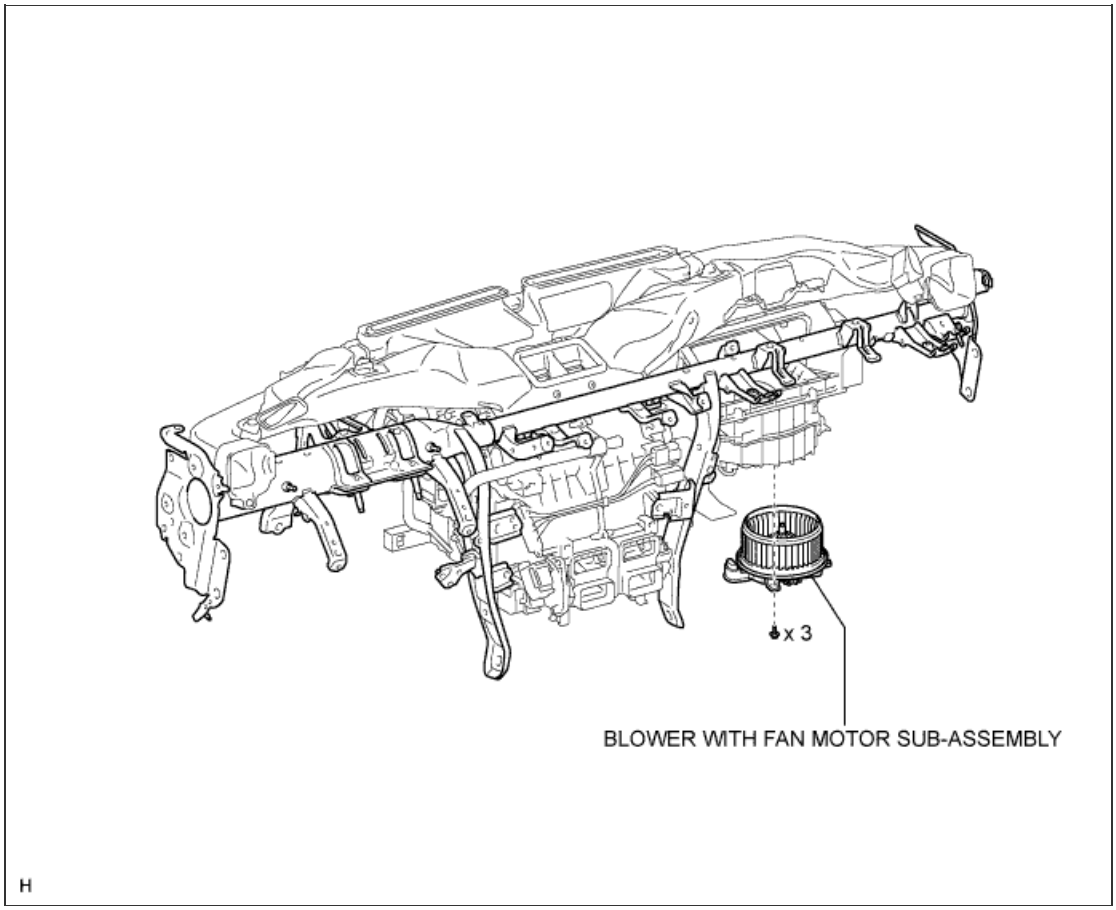

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**


1. REMOVE IN TRUMENT PANEL AFETY PAD A EMBLY

a. Remove the instrument panel safety pad assembly (Click here).

2. REMOVE BLOWER WITH FAN MOTOR B-A EMBLY

a. Disconnect the connector.

b. Remove the 3 screws and motor.

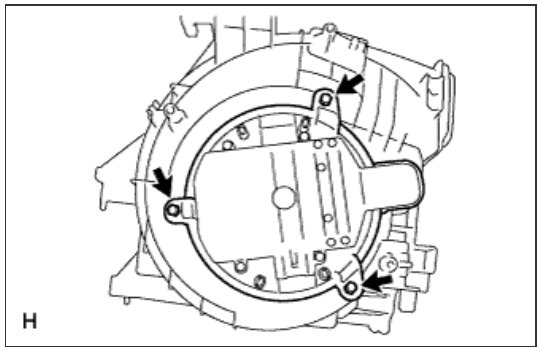

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**


1. REMOVE IN TRUMENT PANEL AFETY PAD A EMBLY

a. Remove the instrument panel safety pad assembly (Click here).

2. REMOVE BLOWER WITH FAN MOTOR B-A EMBLY

a. Disconnect the connector.

b. Remove the 3 screws and motor.

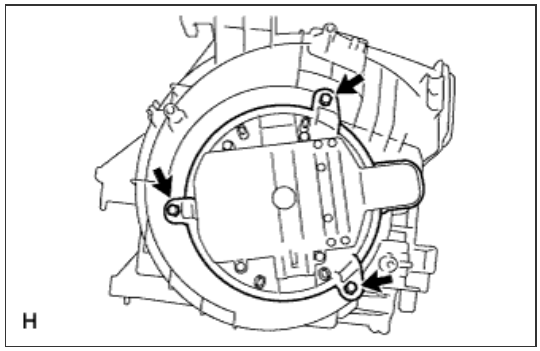

for Preparation Click here


HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. INSTALL BLOWER WITH FAN MOTOR SUB-ASSEMBLY

a. Install the motor with the 3 screws.

b. Connect the connector.

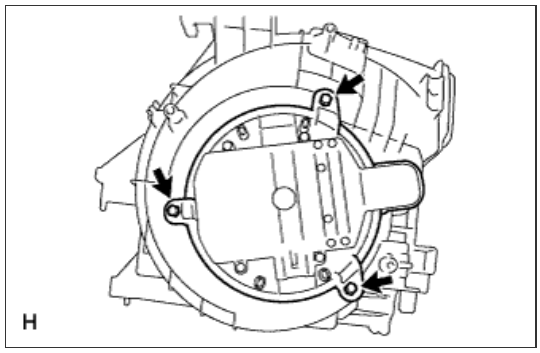

2. INSTALL INSTRUMENT PANEL SAFETY PAD ASSEMBLY

a. Install the instrument panel safety pad assembly (Click here).

for Preparation Click here


HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. INSTALL BLOWER WITH FAN MOTOR SUB-ASSEMBLY

a. Install the motor with the 3 screws.


b. Connect the connector.

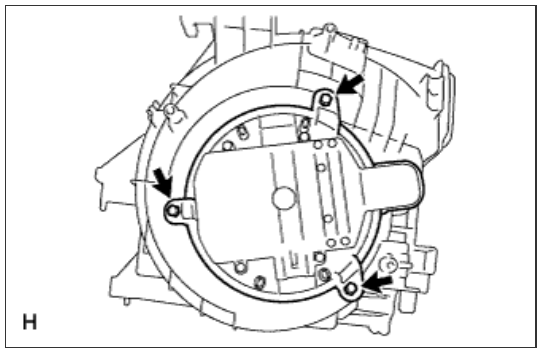


2. INSTALL INSTRUMENT PANEL SAFETY PAD ASSEMBLY

a. Install the instrument panel safety pad assembly (Click here).

for Preparation Click here

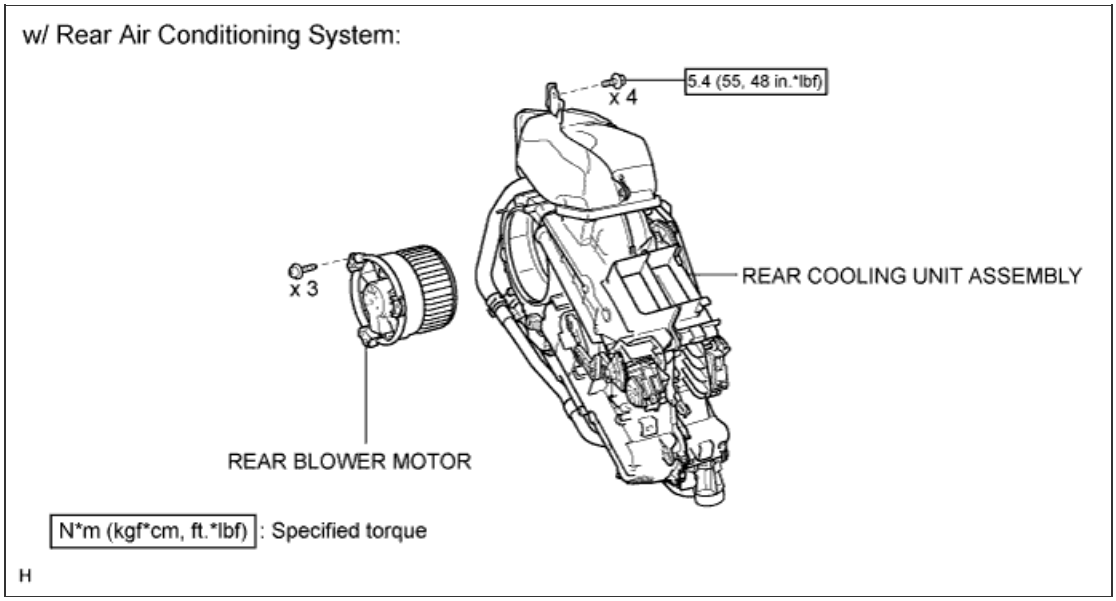

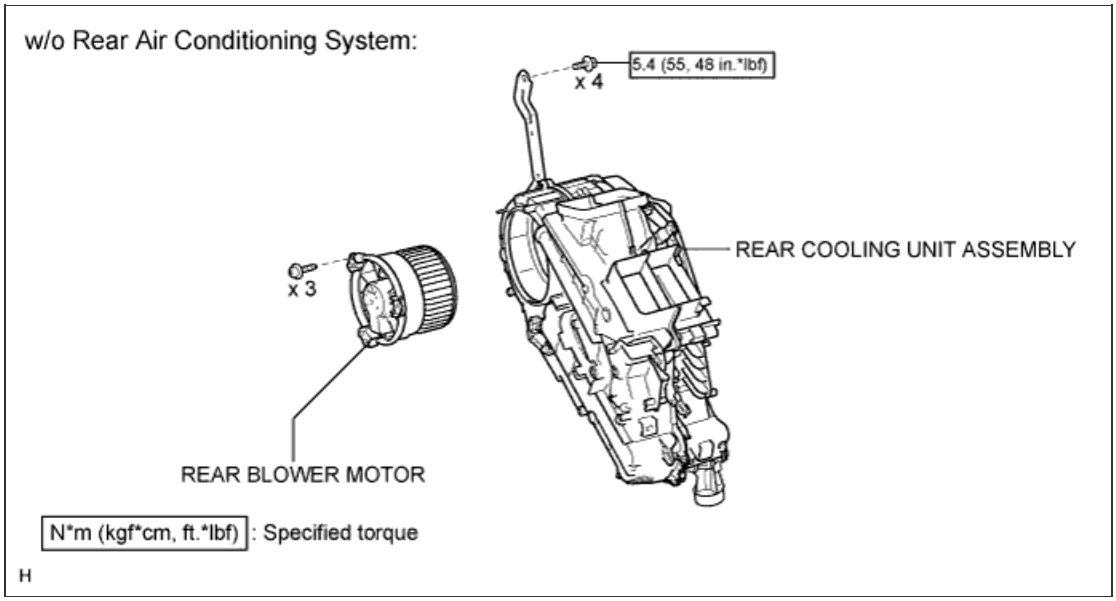

for Preparation Click here

1. REMOVE REAR COOLING UNIT A MBLY


a. w/ Heater:
Remove the rear cooling unit assembly (Click here).

b. w/o Heater:
Remove the rear cooling unit assembly (Click here).

2. REMOVE REAR BLOWER MOTOR

a. Disconnect the connector.

b. Remove the 3 screws and motor.

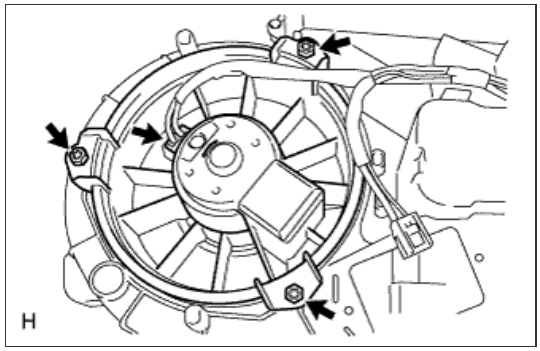

for Preparation Click here

1. REMOVE REAR COOLING UNIT ASSEMBLY


a. w/ Heater:
Remove the rear cooling unit assembly (Click here).

b. w/o Heater:
Remove the rear cooling unit assembly (Click here).

2. REMOVE REAR BLOWER MOTOR

a. Disconnect the connector.

b. Remove the 3 screws and motor.

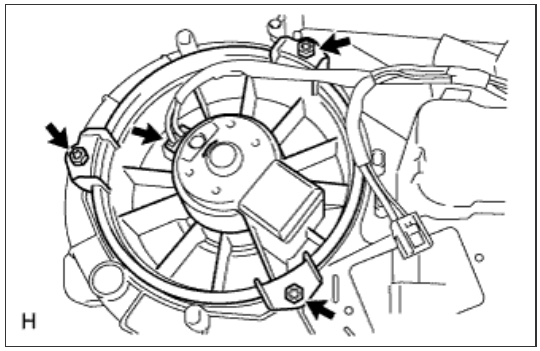

for Preparation Click here


1. INSPECT REAR BLOWER MOTOR

a. Apply battery voltage and check operation of the blower motor, as shown in the illustration.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → Terminal2 Battery negative (-) → Terminal1	Motor operates smoothly

If the result is not as specified, replace the rear blower motor.

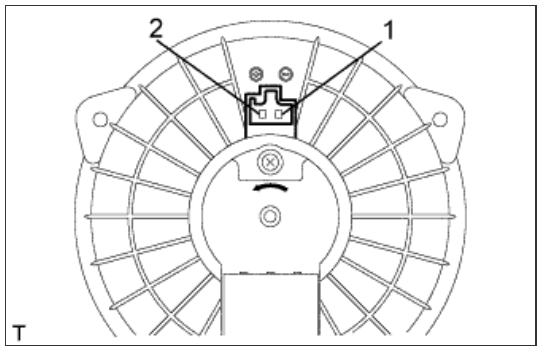


for Preparation Click here

1. INSTALL REAR BLOWER MOTOR

a. Install the motor with the 3 screws.

b. Connect the connector.

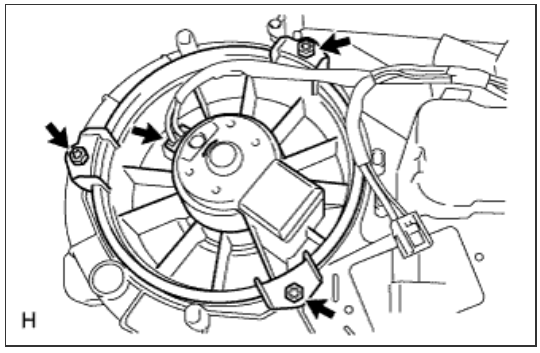

2. INSTALL REAR COOLING UNIT ASSEMBLY

a. w/ Heater:
Install the rear cooling unit assembly (Click here).


b. w/o Heater:
Install the rear cooling unit assembly (Click here).

for Preparation Click here

1. INSTALL REAR BLOWER MOTOR

a. Install the motor with the 3 screws.

b. Connect the connector.

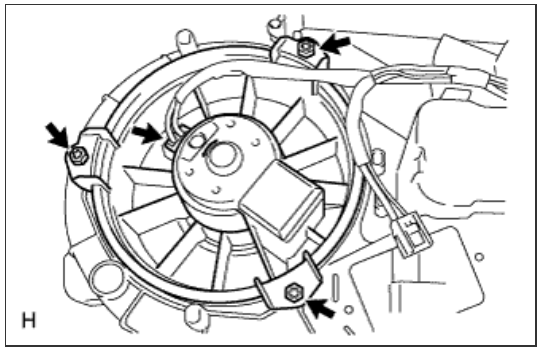


2. INSTALL REAR COOLING UNIT ASSEMBLY

a. w/ Heater:
Install the rear cooling unit assembly (Click here).

b. w/o Heater:
Install the rear cooling unit assembly (Click here).

for Preparation [Click here]

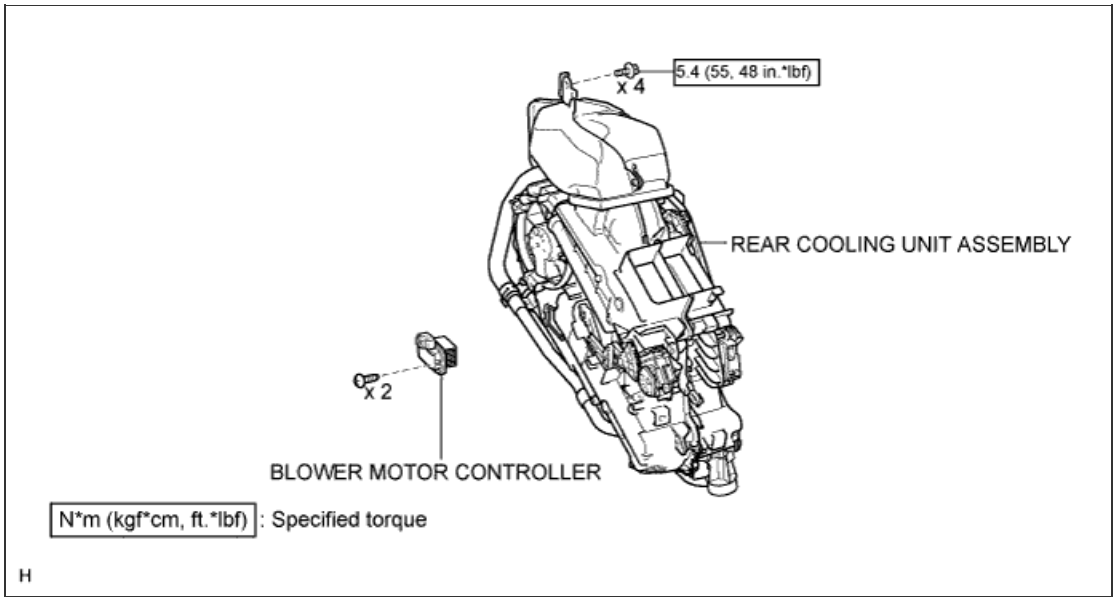

for Preparation Click here


1. REMOVE REAR COOLING UNIT ASSEMBL

a Remove the rear cooling unit assembly (Click here).

REMOVE BLOWER MOTOR CONTROLLER

a Disconnect the connector.

Remove the 2 screws and blower motor controller.

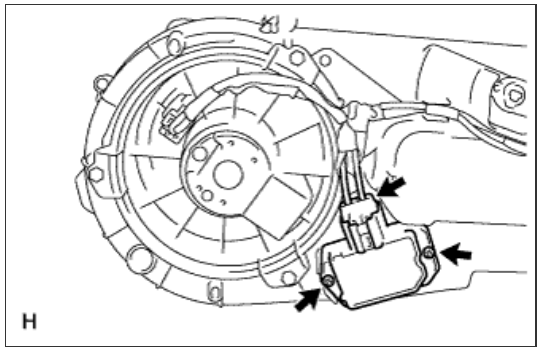

for Preparation Click here


1. REMOVE REAR COOLING UNIT ASSEMBL

a Remove the rear cooling unit assembly (Click here).

REMOVE BLOWER MOTOR CONTROLLER

a Disconnect the connector.

Remove the 2 screws and blower motor controller.

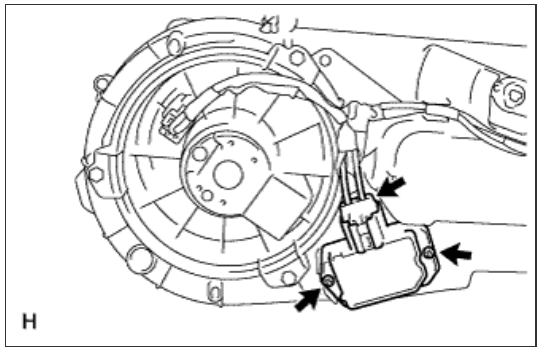


for Preparation Click here

1. INSTALL BLOWER MOTOR CONTROLLER

a Install the blower motor controller with the 2 screws.

Connect the connector.

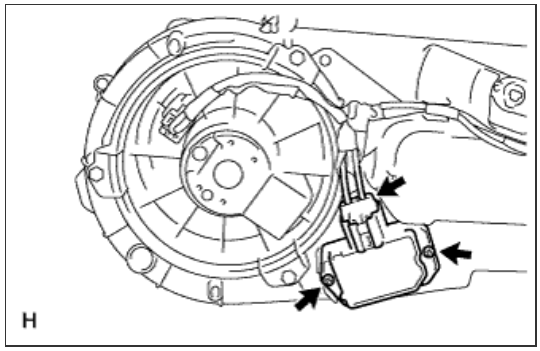

INSTALL REAR COOLING UNIT ASSEMBL


a Install the rear cooling unit assembly (Click here).

for Preparation Click here

1. INSTALL BLOWER MOTOR CONTROLLER

a Install the blower motor controller with the 2 screws.


Connect the connector.

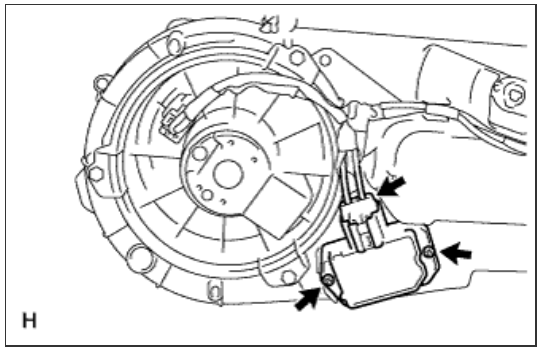

INSTALL REAR COOLING UNIT ASSEMBL

a Install the rear cooling unit assembly (Click here).

for Preparation Click here

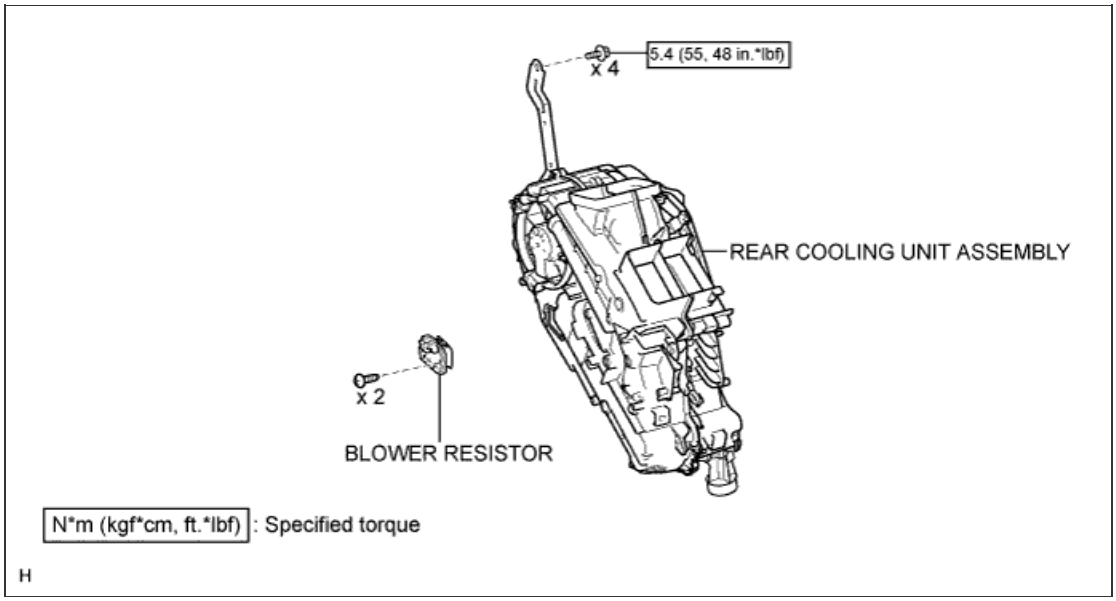

for Preparation Click here


1. REMOVE REAR COOLING UNIT ASSEMBLY

a. Remove the rear cooling unit assembly (Click here).

2. REMOVE BLOWER RESISTOR

a. Disconnect the connector.

b. Remove the 2 screws and blower resistor.

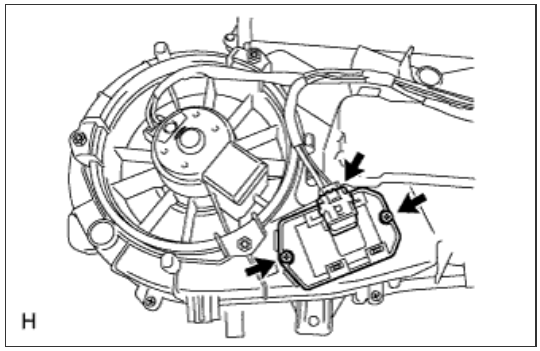

for Preparation Click here


1. REMOVE REAR COOLING UNIT ASSEMBLY

a. Remove the rear cooling unit assembly (Click here).

2. REMOVE BLOWER RESISTOR

a. Disconnect the connector.

b. Remove the 2 screws and blower resistor.

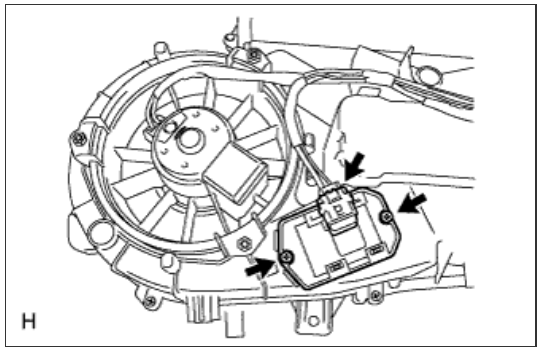

for Preparation Click here

1. INSPECT BLOWER RESISTOR

a. Measure resistance between terminals 1 and 4.


Standard Resistance:
2.0 to 2.4 kΩ

If resistance is not as specified, replace t e blower resistor.

b. Inspect blower resistor.

i. onnect t e positive (lead to terminal 4 t roug a 12 to 3.4 W test bulb and negative (lead to terminal 2.

ii. eck t e test bulb lig ts up w en anot er positive (lead is connected to terminal 2 t roug a 12 to 3.4 W test bulb.
If operation is not as specified, replace t e blower resistor.

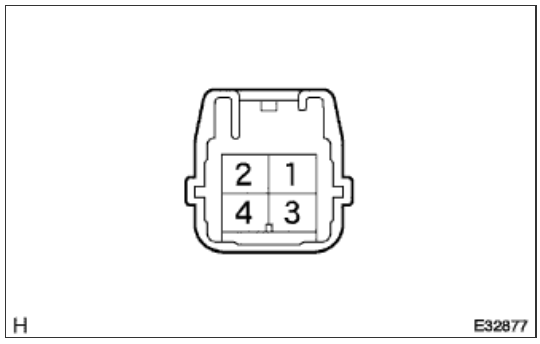


for Preparation Click here

1. INSTALL BLOWER RESISTOR

a. Install the blower resistor with the 2 screws.

b. Connect the connector.

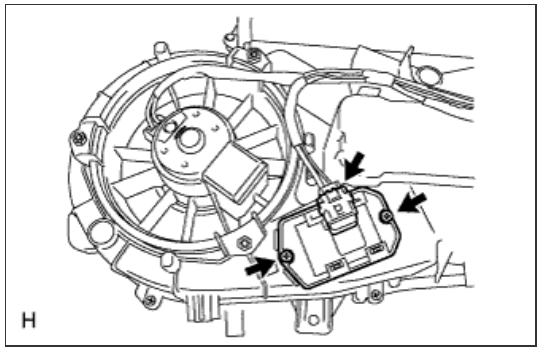

2. INSTALL REAR COOLING UNIT ASSE BL


a Install the rear cooling unit assembly (Click here).

for Preparation Click here

1. INSTALL BLOWER RESISTOR

a. Install the blower resistor with the 2 screws.


b. Connect the connector.

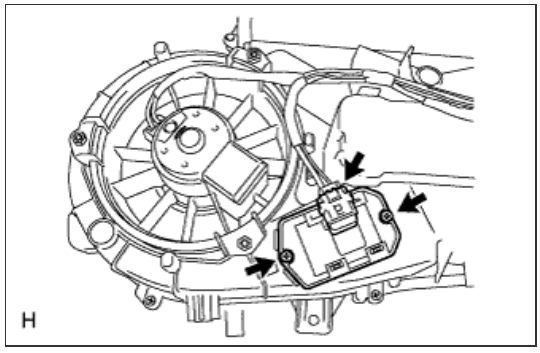

2. INSTALL REAR COOLING UNIT ASSE BL

a Install the rear cooling unit assembly (Click here).

for Preparation Click here

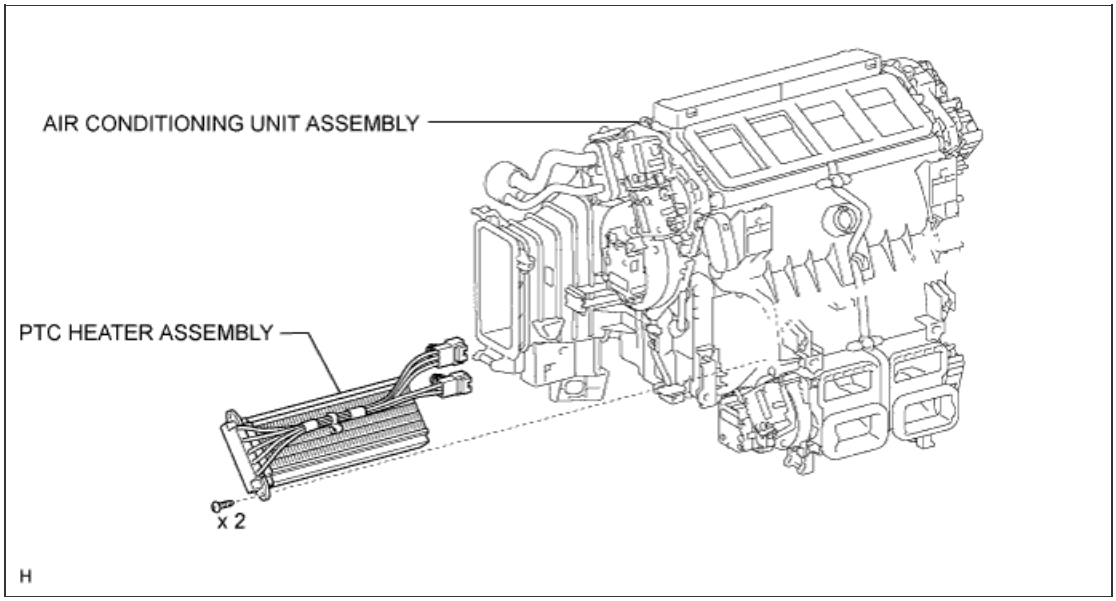

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**


1. REMOVE AIR CONDITIONING UNIT ASSEMBLY

a. Remove the air conditioning unit (Click here).

2. REMOVE PTC HEATER ASSEMBLY

a. Remove the 2 crew .

b. Detach the clamp and remove the P C heater.

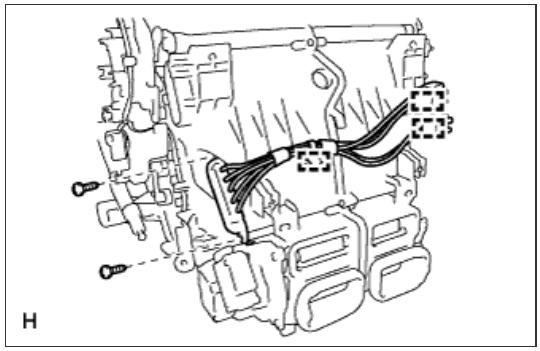

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**


1. REMOVE AIR CONDITIONING UNIT ASSEMBLY

a. Remove the air conditioning unit (Click here).

2. REMOVE PTC HEATER ASSEMBLY

a. Remove the 2 crew .

b. Detach the clamp and remove the P C heater.

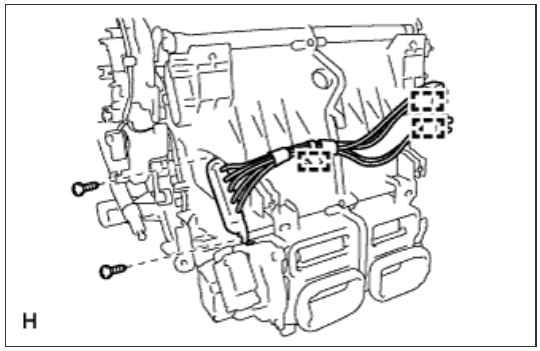

for Preparation Click here


1. INSPECT PTC HEATER ASSEMBLY

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
A-1 - B-1	23 to 25°C (73 to 77°F)	0.5 to 2.5 Ω
A-2 - B-1	23 to 25°C (73 to 77°F)	0.5 to 2.5 Ω
A-2 - B-2	23 to 25°C (73 to 77°F)	0.5 to 2.5 Ω
A-3 - B-2	23 to 25°C (73 to 77°F)	0.5 to 2.5 Ω

If the result is not as specified, replace the PTC heater assembly.

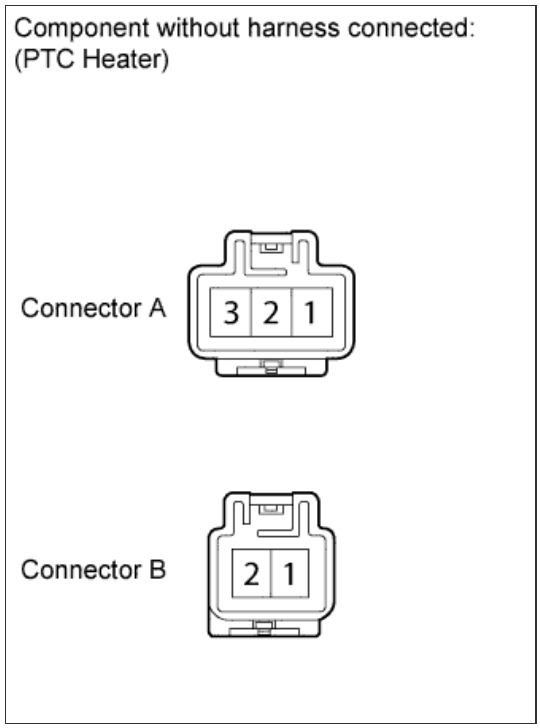

for Preparation Click here


HINT:

- **Use the same procedures for the LHD ehicle and RHD ehicle.**
- **The procedures listed below are for the LHD ehicle.**

1. INSTALL PTC HEATER ASSEMBLY

a. Attach the clamps to install the PTC heater.

b. Install the 2 screws.

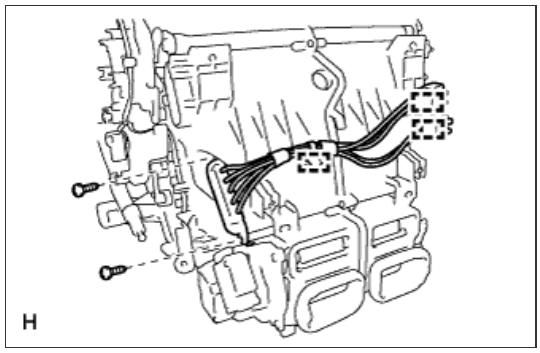

2. INSTALL AIR CONDITIONING UNIT ASSEMBLY

a. Install the air conditioning nit Click here).

for Preparation Click here


HINT:

- **Use the same procedures for the LHD ehicle and RHD ehicle.**
- **The procedures listed below are for the LHD ehicle.**

1. INSTALL PTC HEATER ASSEMBLY

a. Attach the clamps to install the PTC heater.


b. Install the 2 screws.

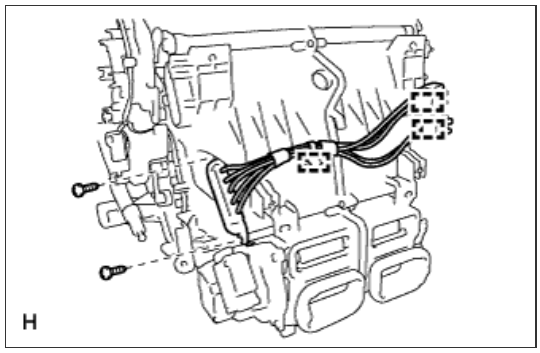


2. INSTALL AIR CONDITIONING UNIT ASSEMBLY

a. Install the air conditioning nit Click here).

for Preparation Click here

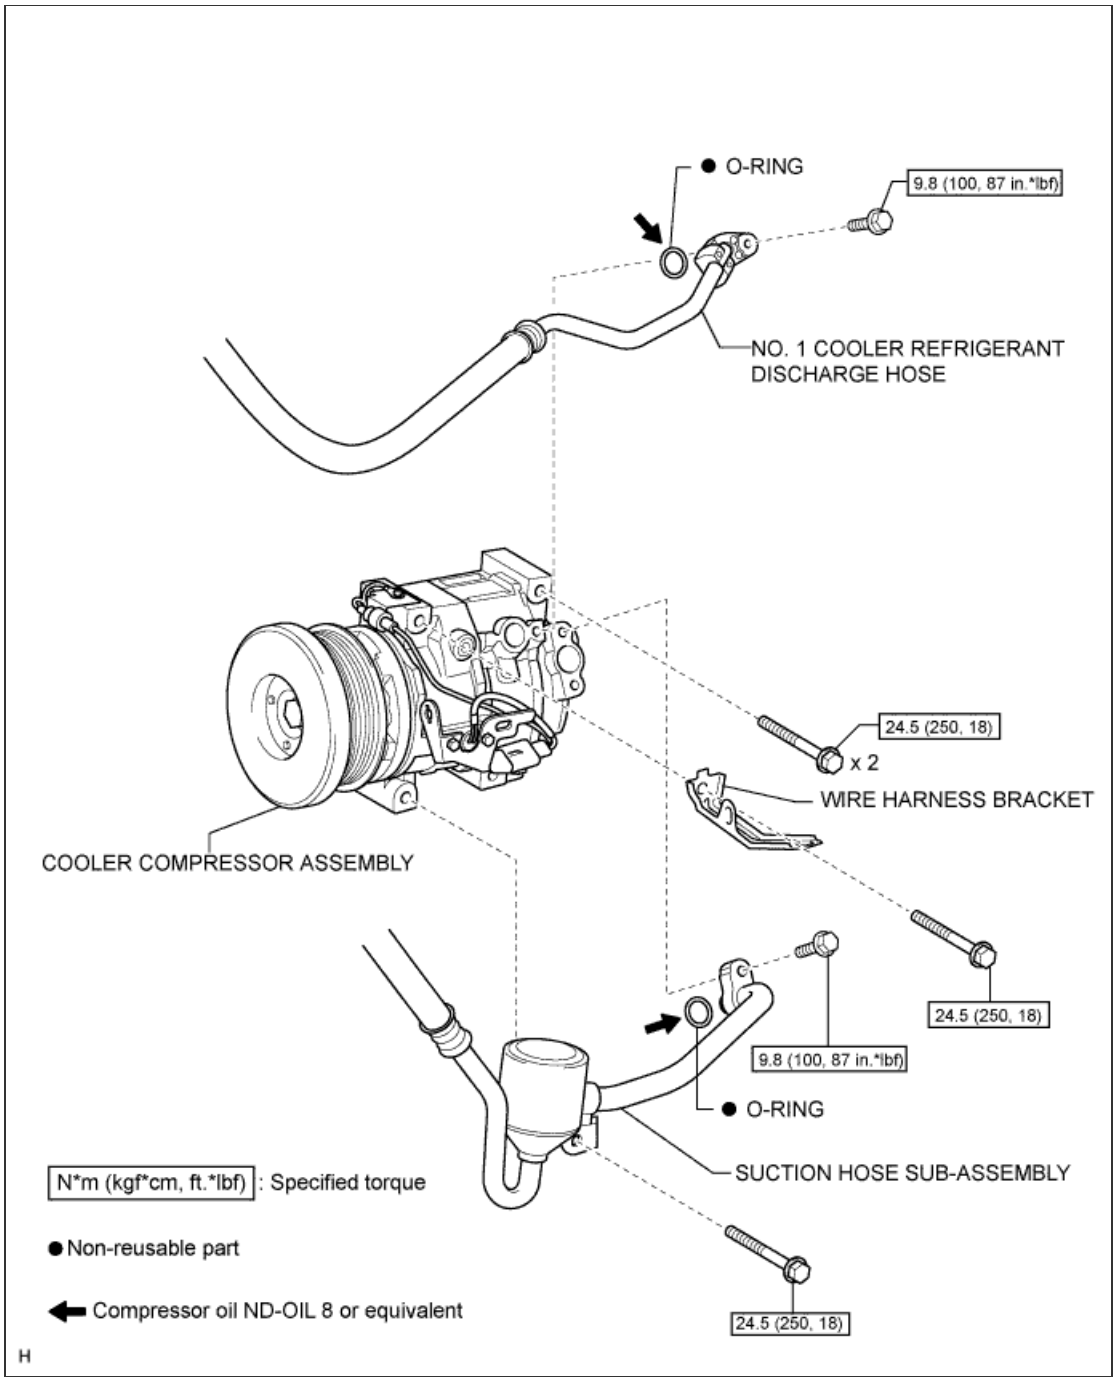


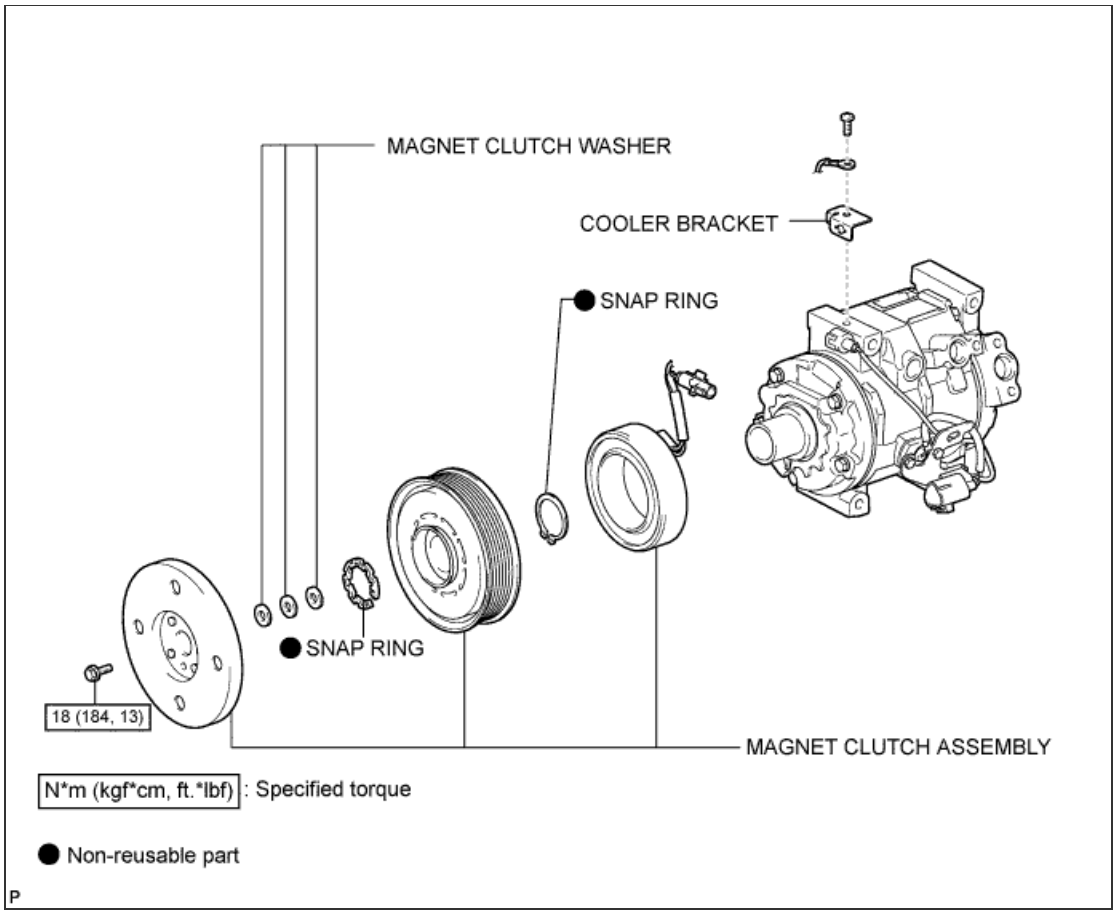
MAGNET CLUTCH WASHER
COOLER BRACKET
SNAP RING
SNAP RING
18 (184, 13)
MAGNET CLUTCH ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
P

for Preparation Click here

1. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

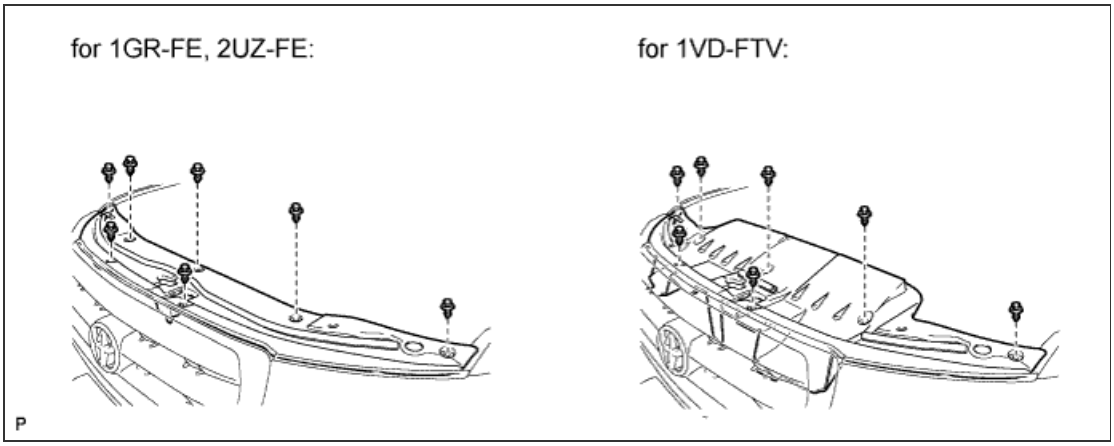

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A switch on.


c. perate the cooler compressor while the engine speed is appro imatel rpm or 5 to 6 minutes to circulate the re rigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the re rigerant rom the A s stem using a re rigerant recover unit.

3. REMOVE FRONT FENDER APRON SEAL LH


a. Remove the 4 clips and seal.

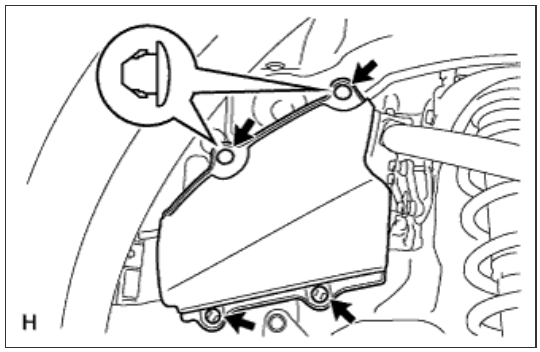

4. REMOVE FAN & GENERATOR V BELT

a. While releasing the belt tension b turning the belt tensioner counterclockwise.

remove the an and generator V belt rom the belt tensioner.

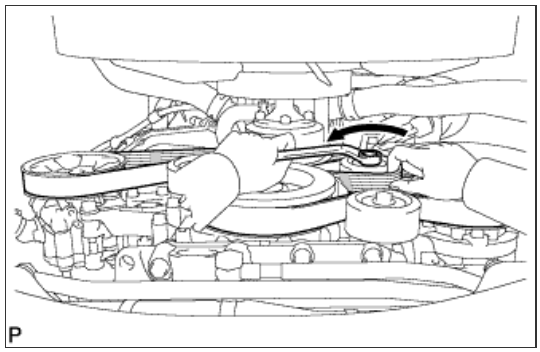


5. DISCONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

a. Remove the bolt and disconnect the discharge hose rom the cooler compressor.

b. Remove the ring rom the discharge hose.

NOTICE:

Seal the openings o the disconnected parts using vin l tape to prevent moisture and oreign matter rom entering them.

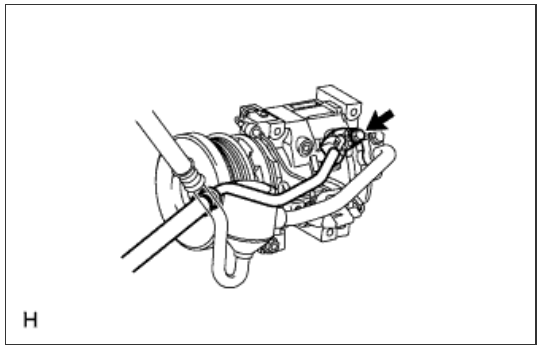


6. DISCONNECT SUCTION HOSE SUB-ASSEMBLY

a. Remove the olts and disconnect the suction hose rom the cooler compressor.

b. Remove the ring rom the suction hose.

NOTICE:


Seal the openings o the disconnected parts using vin l tape to prevent moisture and oreign matter rom entering them.

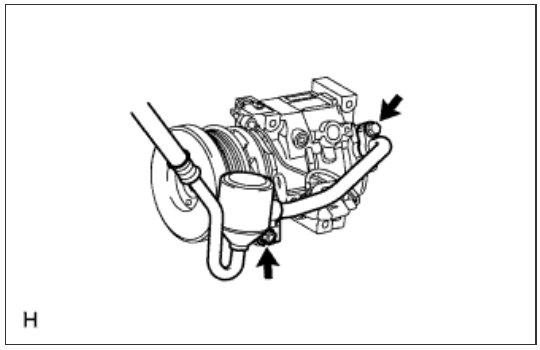

7. REMOVE COOLER COMPRESSOR ASSEMBLY

a. Disconnect the connector.

b. Remove the 3 bolts and cooler compressor.

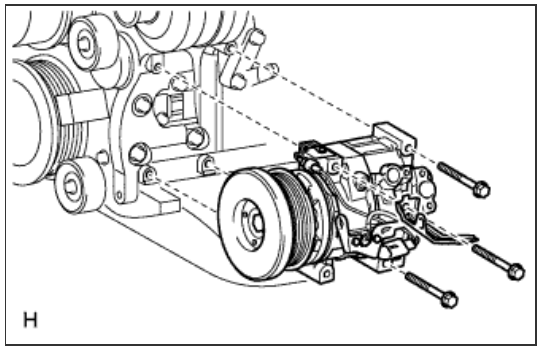


for Preparation Click here

1. REMOVE COOLER BRACKET

a. Detach the clamp.

b. Remove the screw and the cooler bracket.

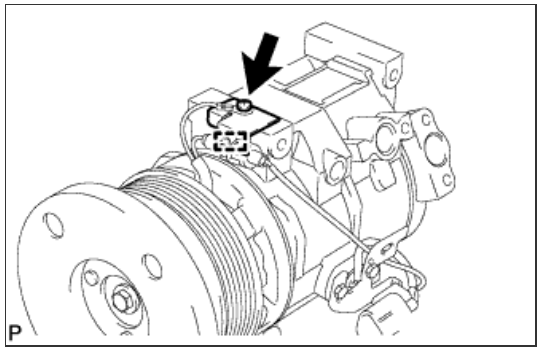

2. REMOVE MAGNET CLUTCH ASSEMBLY

a. Clamp the cooler compressor in a vise.


b. Using SST, hold the magnet clutch hub.

SST
09985-00270

c. Remove the bolt, magnet clutch hub and magnet clutch washer(s).

HINT:

There is no set number of magnet clutch washers since they are used for adjusting.

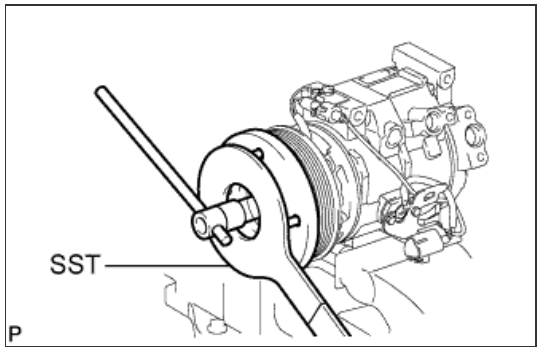


d. Using a snap ring expander, remove the snap ring and the magnet clutch rotor.


NOTICE:

Do not damage the seal cover of the bearing when removing the snap ring.

e. Disconnect the connector.

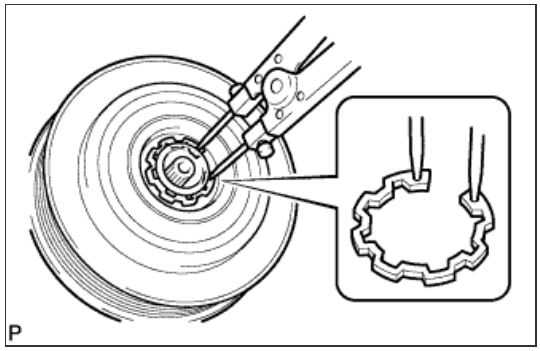

f. Using a snap ring expander, remove the snap ring and magnet clutch stator.

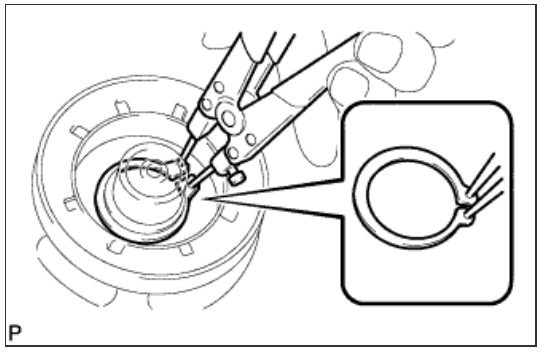

for Preparation Click here

1. INSPECT MAGNET CLUTCH ASSEMBLY


a. Check the magnet clutch operation.

i. Confirm that the magnet clutch hub and magnet clutch rotor lock when the battery po itive lead i onnected to terminal 3 of the magnet clutch and the negative lead i onnected to the ground wire.
If the operation i not a pecified eplace the magnet clutch a embly.

b. ea ure the re i tance.

c. ea ure the re i tance between terminal and .


Standard resistance:
65 to 125 Ω at 20°C (68°F)
If the resistance is not as specified, replace the cooler compressor assembly.

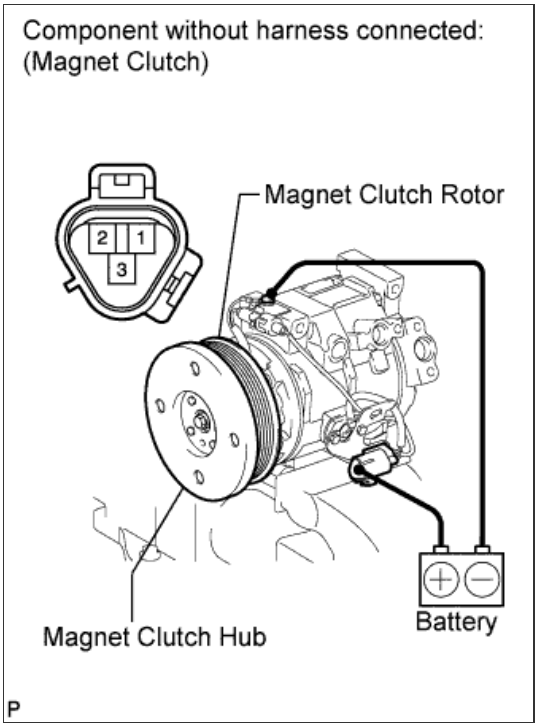

for Preparation Click here


1. INSTALL MAGNET CLUTCH ASSEMBLY

a. Install the magnet clutch stator with the parts shown in the illustration matched.

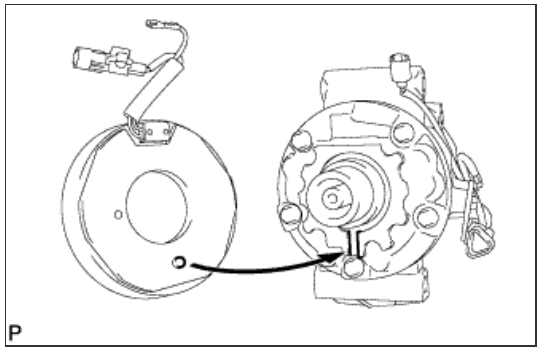

b. Using a snap ring expander, install a new snap ring with the cham ered side acing up.

c. onnect the connector.

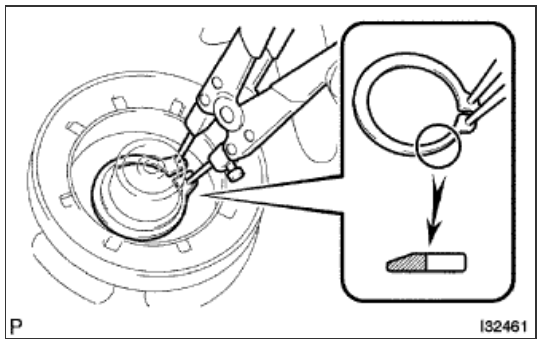

d. Using a snap ring expander, install the magnet clutch rotor and a new snap ring with the cham ered side acing up.


NOTICE:

Do not damage the seal cover o the bearing when installing the snap ring.

e. Install the compressor washer(s) and magnet clutch hub.

NOTICE:

Do not change the combination o the compressor washer(s) used be ore disassembly.

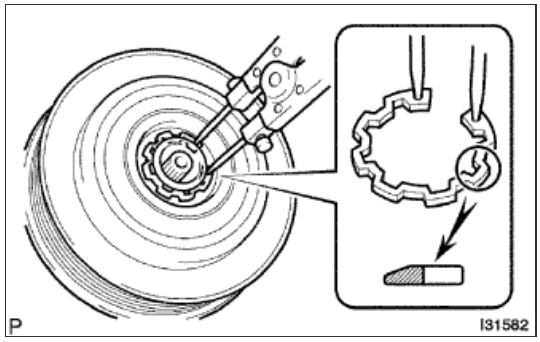


f. Using , hold the magnet clutch hub and install the bolt.

SST
09985-00270

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

NOTICE:


Make sure that there is no oreign matter or oil on the compressor sha t, bolt, and clutch hub.

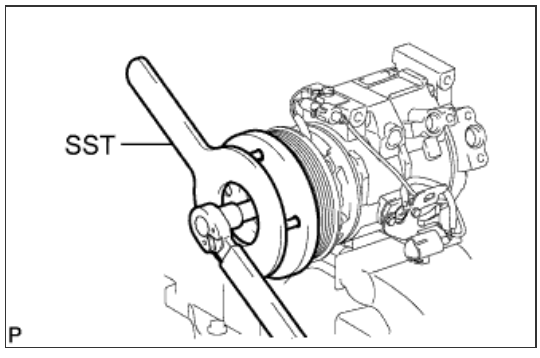

2. INSTALL COOLER BRACKET

a. Install the cooler bracket with the screw.

b. Attach the clamp.

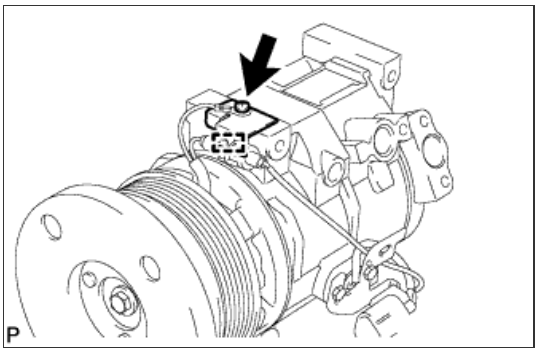

3. INSPECT MAGNET CLUTCH CLEARANCE

a. lamp the cooler compressor in a vise.

b. et the dial indicator to the magnet clutch hub.

c. onnect the battery positive lead to terminal o the magnet clutch connector and the negative lead to the ground wire. Turn the magnet clutch on and o and measure the clearance.

Standard clearance:
0.35 to 0.60 mm (0.014 to 0.024 in.)


I the measured value is not within the standard clearance, remove the magnet clutch hub and ad ust the clearance using compressor washers to obtain the standard clearance.

Compressor washer thickness:
0.1 mm (0.004 in.)
0.3 mm (0.012 in.)
0.5 mm (0.020 in.)

NOTICE:

Ad ustment should be per ormed with or ewer magnet clutch washers.

d. emove the cooler compressor rom the vise.

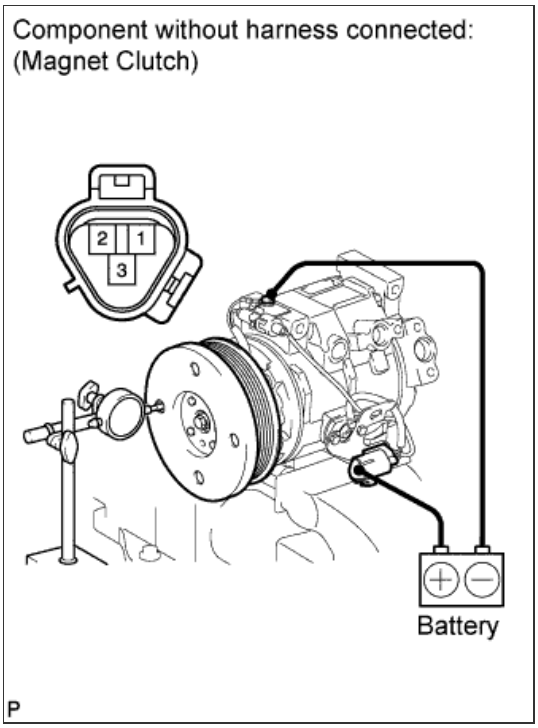

for Preparation Click here

1. ADJUST COMPRESSOR OIL

a. When replacing the compressor and magnetic clutch with a new one, gradually discharge the refrigerant gas from the service valve, and drain the following amount of oil from the new compressor and magnetic clutch before installation.

Standard:
GRJ200L-GNANKV, GNMNKV, GPANKV, GPMNKV:
(Oil capacity inside the new compressor and magnetic clutch: 140 + 15 cc (4.7 + 0.51 fl.oz.)) - (Remaining oil amount in the removed compressor and magnetic clutch) = (Oil amount to be removed from the new compressor when replacing)
Except GRJ200L-GNANKV, GNMNKV, GPANKV, GPMNKV:
(Oil capacity inside the new compressor and magnetic clutch: 135 + 15 cc (4.6 + 0.51 fl.oz.)) - (Remaining oil amount in the removed compressor and magnetic clutch) = (Oil amount to be removed from the new compressor when replacing)

NOTICE:

- **When checking the compressor oil level, follow the A/C system precautions.**
- **If a new compressor and magnetic clutch is installed without removing some oil remaining in the pipes of the vehicle, the oil amount will be too large. This prevents heat exchange in the refrigerant cycle and causes refrigerant failure.**
- **If the volume of oil remaining in the removed compressor and magnetic clutch is too small, check for oil leakage.**
- **Be sure to use ND-OIL 8 or equivalent for compressor oil.**

2. INSTALL COOLER COMPRESSOR ASSEMBLY


a. Install the cooler compressor with the 3 bolts.

Torque:
24.5 N*m{ 250 kgf*cm , 18 ft.*lbf }

HINT:

Tighten the bolts in the order shown in the illustration.

b. Connect the connector.

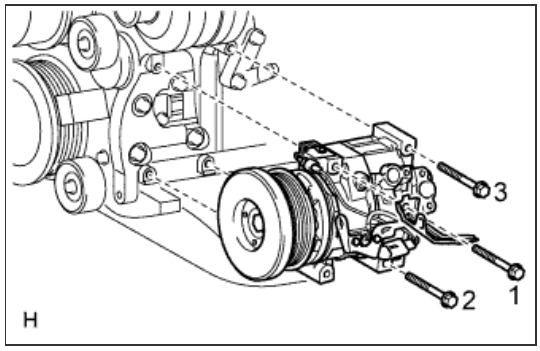

3. CONNECT SUCTION HOSE SUB-ASSEMBLY

a. Remove the attached vinyl tape from the hose.


b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the cooler compressor.

Compressor oil:
ND-OIL 8 or equivalent

c. Install the O-ring to the suction hose.

d. Connect the suction hose to the cooler compressor with the 2 bolts.

Torque:
for bolt A:
9.8 N*m{ 100 kgf*cm , 87 ft.*lbf }
for bolt B:
24.5 N*m{ 250 kgf*cm , 18 ft.*lbf }

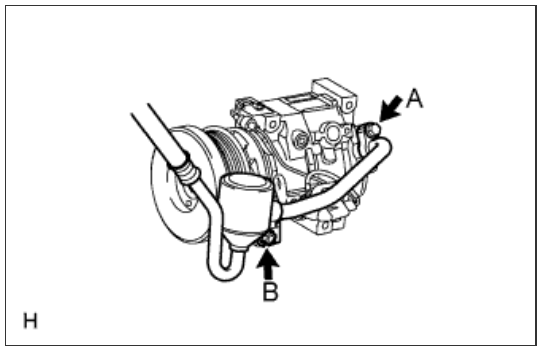

4. CONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

a. Remove the attached vinyl tape from the hose.


b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the cooler compressor.

Compressor oil:
ND-OIL 8 or equivalent

c. Install the O-ring to the cooler refrigerant discharge hose.


d. Connect the cooler refrigerant discharge hose to the cooler compressor with the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

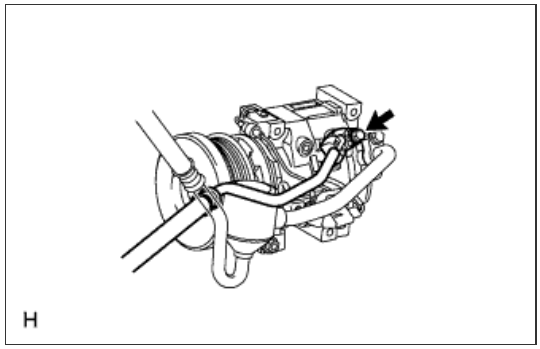

5. INSTALL FAN & GENERATOR V BELT

a. While turning the belt tensioner counterclockwise, align the holes, and then insert a bar of φ6 mm (0.236 in.) into the holes to fix the belt tensioner in place.

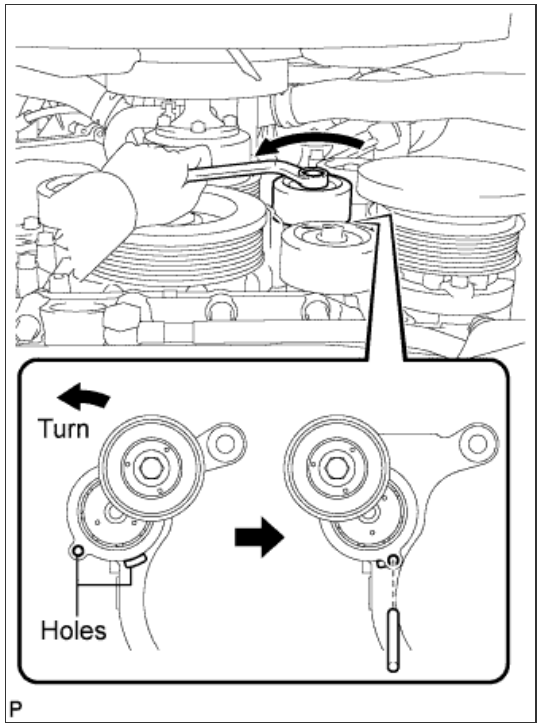


b. Install the fan and generator V belt.

HINT:

If it is hard to install the fan and generator V belt, perform the following procedures.

1. **Put the fan and generator V belt on all parts except the vane pump, as shown in the illustration.**
2. **While releasing the belt tension by turning the belt tensioner counterclockwise, put the fan and generator V belt on the vane pump.**

c. While turning the belt tensioner counterclockwise, remove the bar.

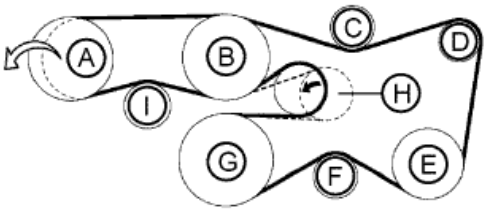

A: Vane Pump

B: Water Pump

C: No. 2 Idler

D: Generator

E: Cooler Compressor

F: No. 1 Idler


G: Crankshaft

H: V-Ribbed Belt Tensioner

I: No. 2 Idler

6. INSTALL FRONT FENDER APRON SEAL LH

a. Install the seal with the 4 clips.

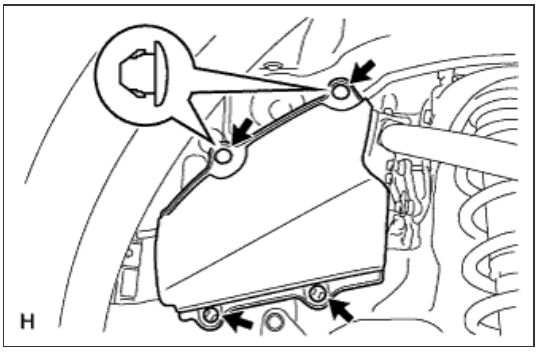

7. CHARGE REFRIGERANT

SST

09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)


a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
		w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)

16 mm (0.630 in.)	w/o Rear Cooler	w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

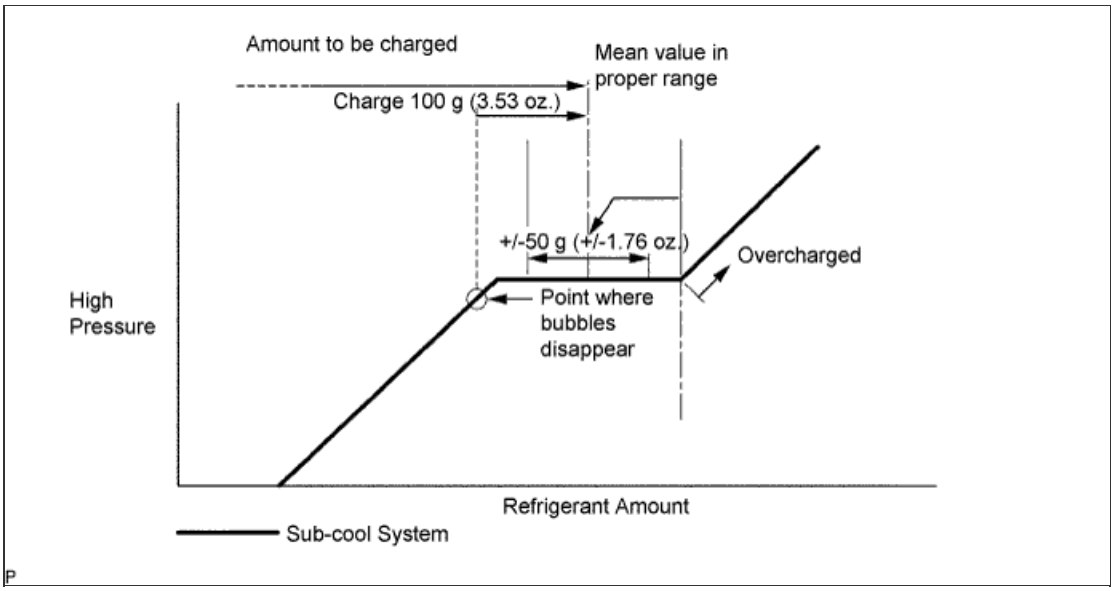

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

8. WARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

9. CHECK FOR REFRIGERANT GAS LEAK

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.


d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.


e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

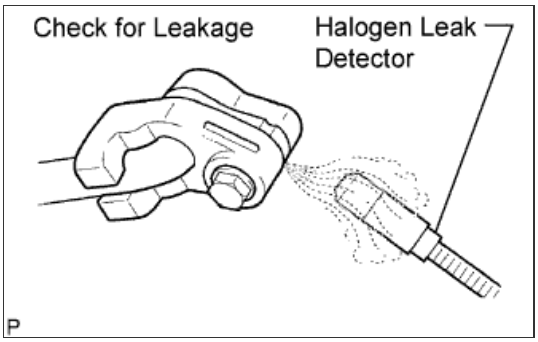

10. INSTALL UPPER RADIATOR SUPPORT SEAL

for Preparation Click here

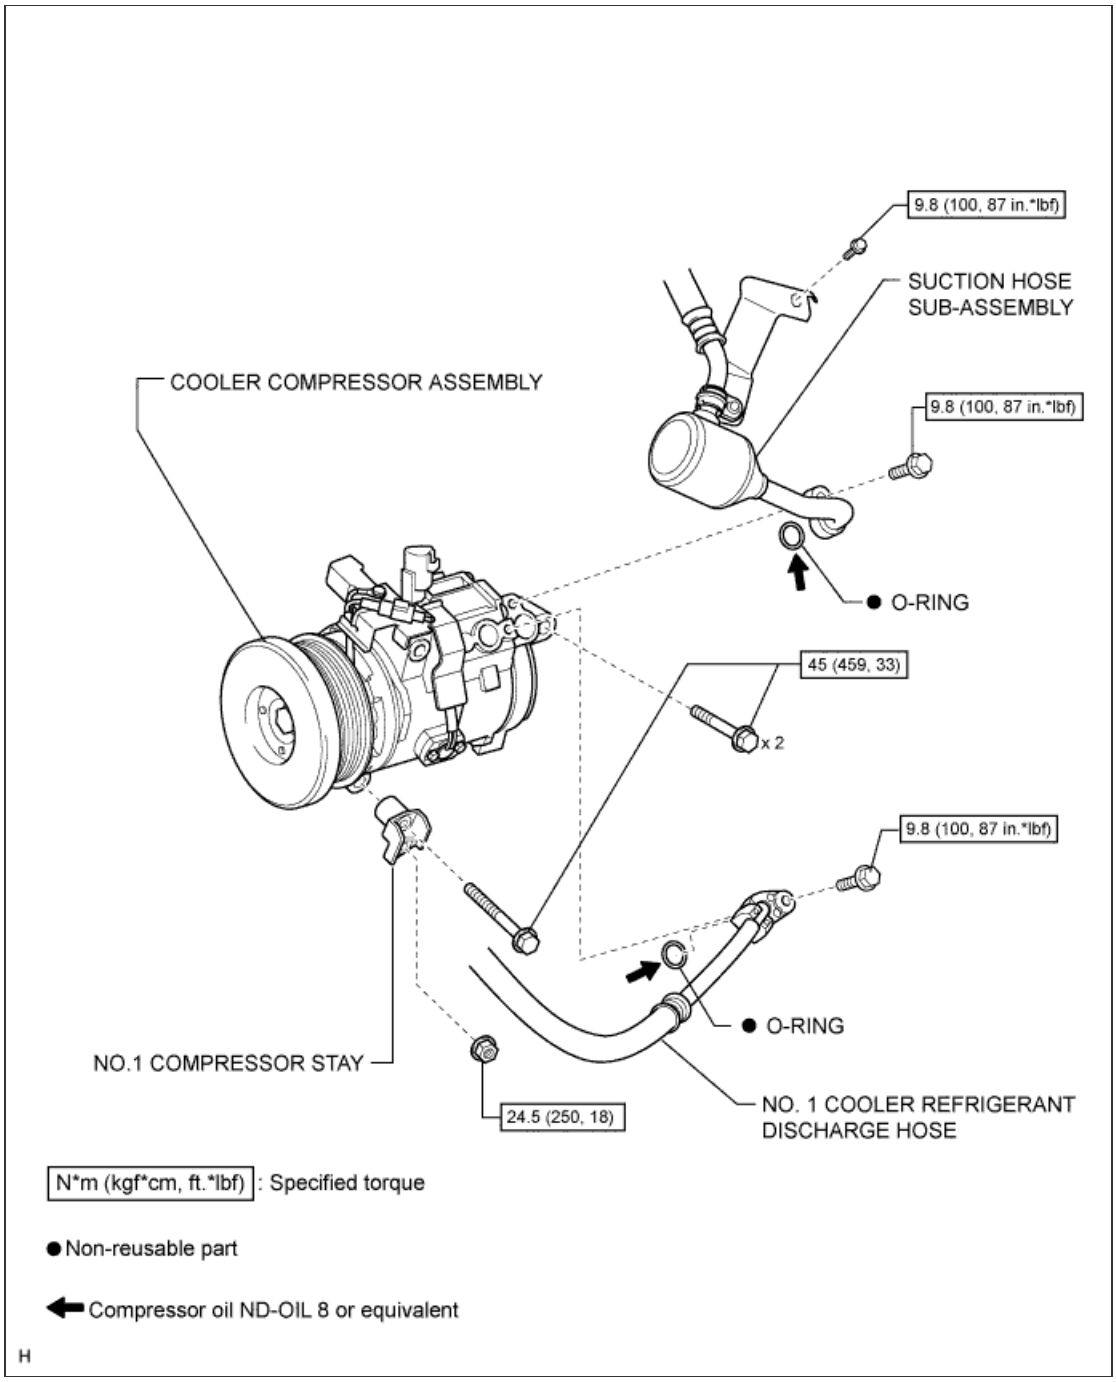


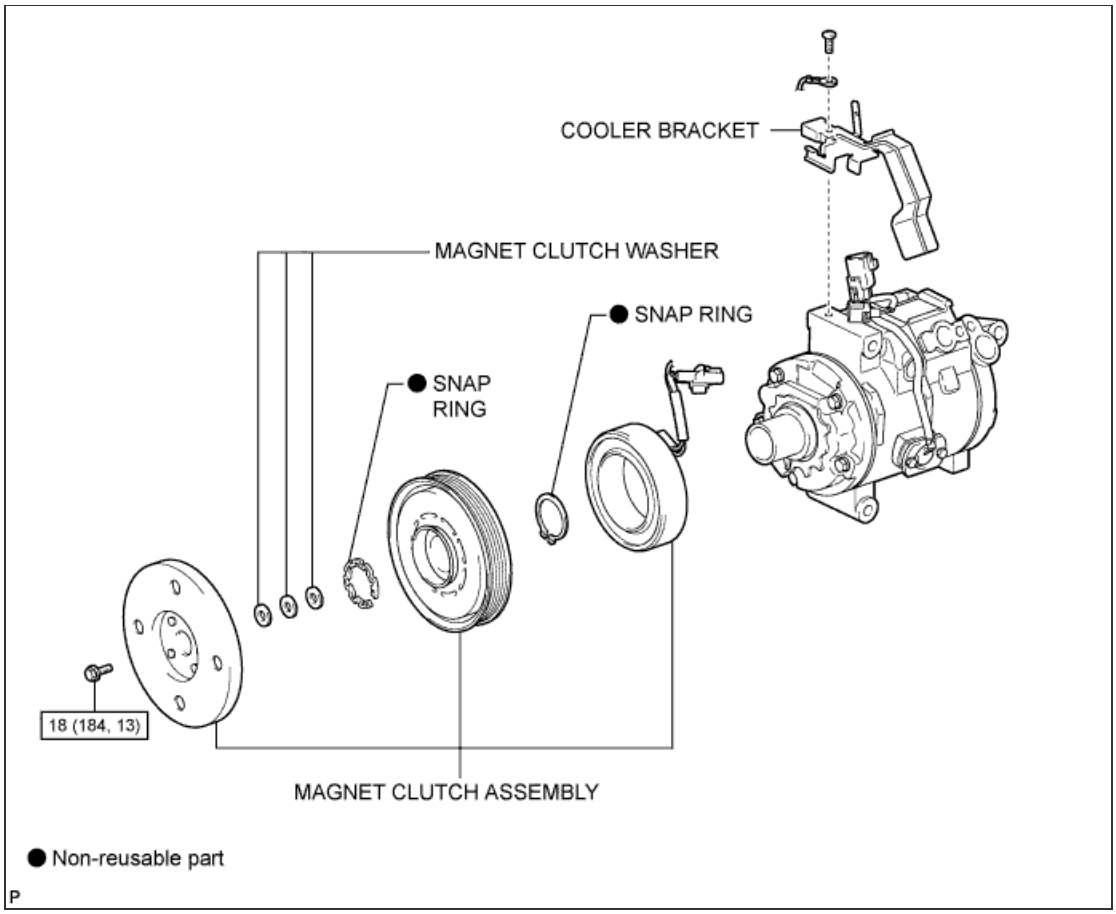
COOLER BRACKET
MAGNET CLUTCH WASHER
SNAP RING
SNAP RING
18 (184, 13)
MAGNET CLUTCH ASSEMBLY
Non-reusable part
P

for Preparation Click here

1. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

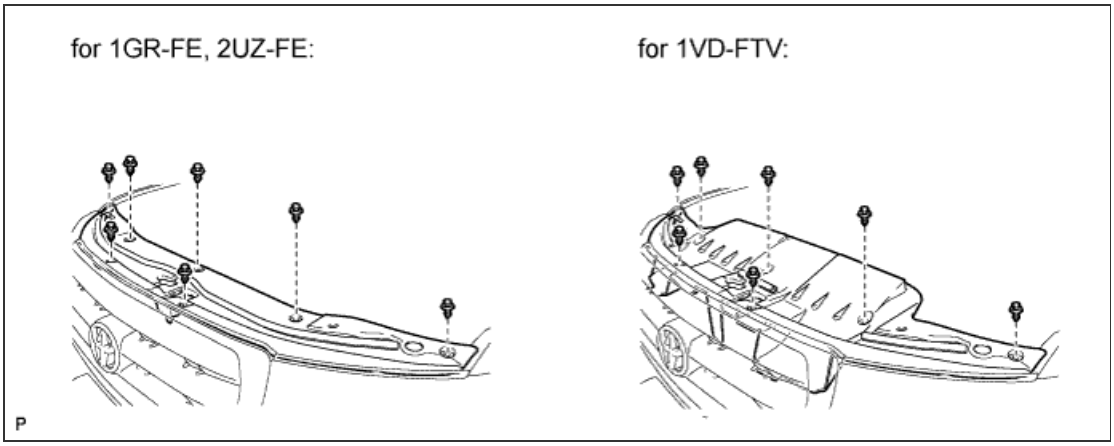

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A switch on.


c. perate the cooler compressor while the engine speed is appro imatel rpm or 5 to 6 minutes to circulate the re rigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the re rigerant rom the A s stem using a re rigerant recover unit.

3. REMOVE FRONT FENDER APRON SEAL LH

a. Remove the 4 clips and seal.

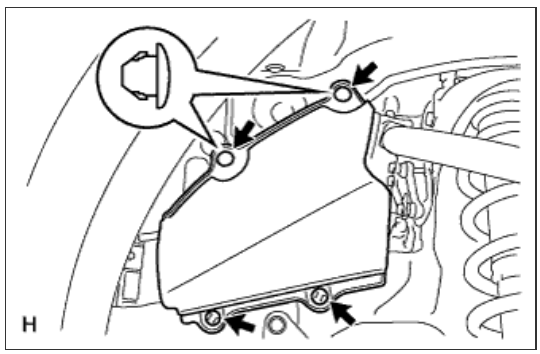


4. REMOVE FAN & GENERATOR V BELT

a. Loosen the belt tension b turning the belt tensioner counterclockwise, and then

remove the an and generator V belt.

HINT:

The pulle olt or the belt tensioner has le t-hand thread.

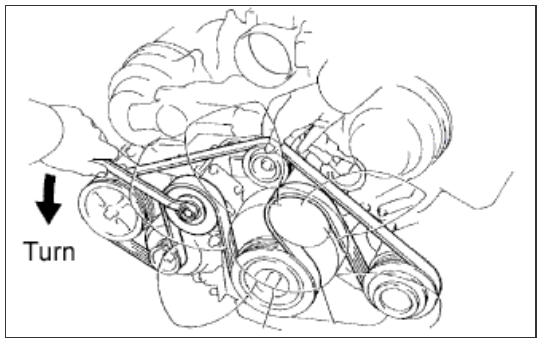


5. DISCONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

a. Remove the bolt and disconnect the discharge hose rom the cooler compressor.

b. Remove the ring rom the discharge hose.

NOTICE:

Seal the openings o the disconnected parts using vin l tape to prevent moisture and oreign matter rom entering them.

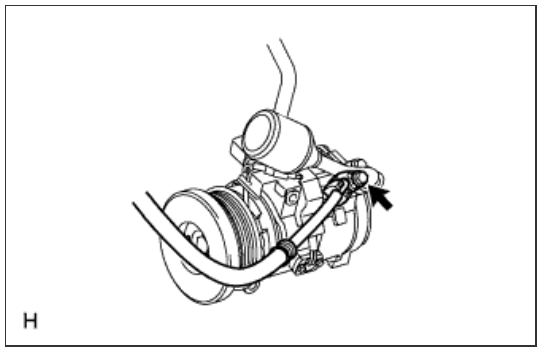


6. DISCONNECT SUCTION HOSE SUB-ASSEMBLY

a. Remove the olts and disconnect the suction hose rom the cooler compressor.

b. Remove the ring rom the suction hose.

NOTICE:


Seal the openings o the disconnected parts using vin l tape to prevent moisture and oreign matter rom entering them.

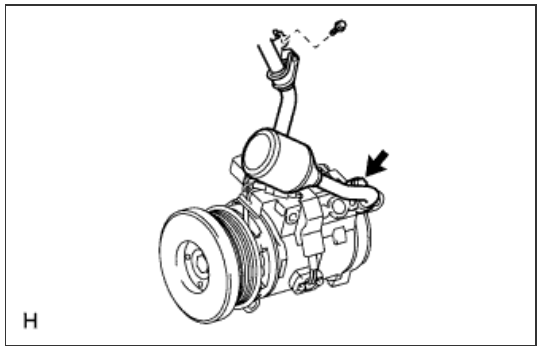

7. REMOVE COOLER COMPRESSOR ASSEMBLY

a. Disconnect the connector.

b. Remove the 3 bolts, nut, cooler compressor and No. 1 compressor sta .

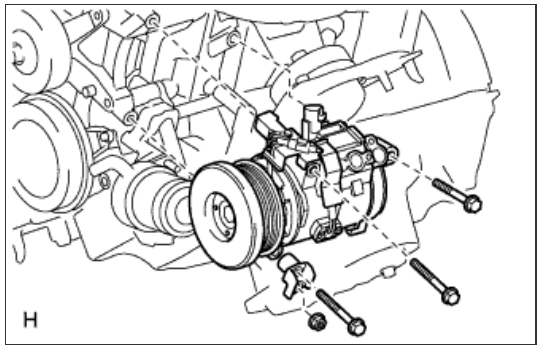


for Preparation Click here

1. REMOVE COOLER BRACKET

a. Detach the 2 clamps.

b. Remove the screw and the cooler bracket.

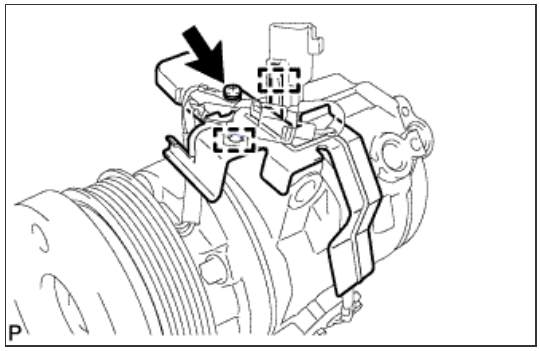

2. REMOVE MAGNET CLUTCH ASSEMBLY

a. Clamp the cooler compressor in a vise.


b. Using SST, hold the magnet clutch hub.

SST
09985-00270

c. Remove the bolt, magnet clutch hub and magnet clutch washer(s).

HINT:

There is no set number of magnet clutch washers since they are used for adjusting.

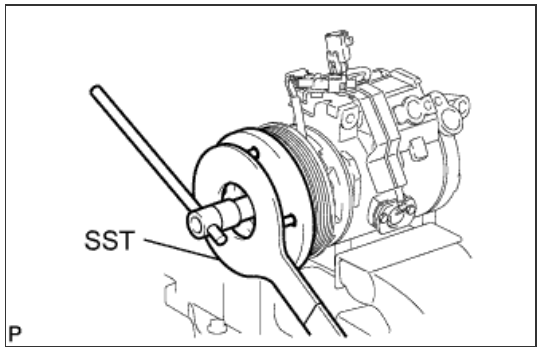


d. Using a snap ring expander, remove the snap ring and the magnet clutch rotor.


NOTICE:

Do not damage the seal cover of the bearing when removing the snap ring.

e. Disconnect the connector.

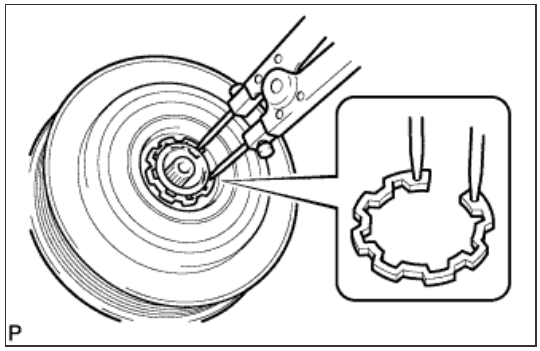

f. Using a snap ring expander, remove the snap ring and magnet clutch stator.

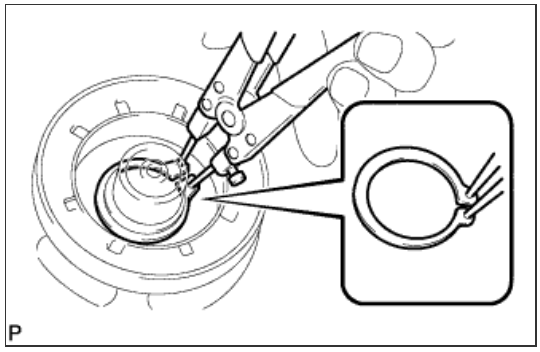

for Preparation Click here

1. INSPECT MAGNET CLUTCH ASSEMBLY


a. Check the magnet clutch operation.

i. Confirm that the magnet clutch hub and magnet clutch rotor lock when the battery positive lead is connected to terminal 3 of the magnet clutch, and the negative lead is connected to the ground wire.
If the operation is not as specified, replace the magnet clutch assembly.

b. Measure the resistance.

c. Measure the resistance between terminals 1 and 2.


Standard resistance:
65 to 125 Ω at 20°C (68°F)
If the resistance is not as specified, replace the cooler compressor assembly.

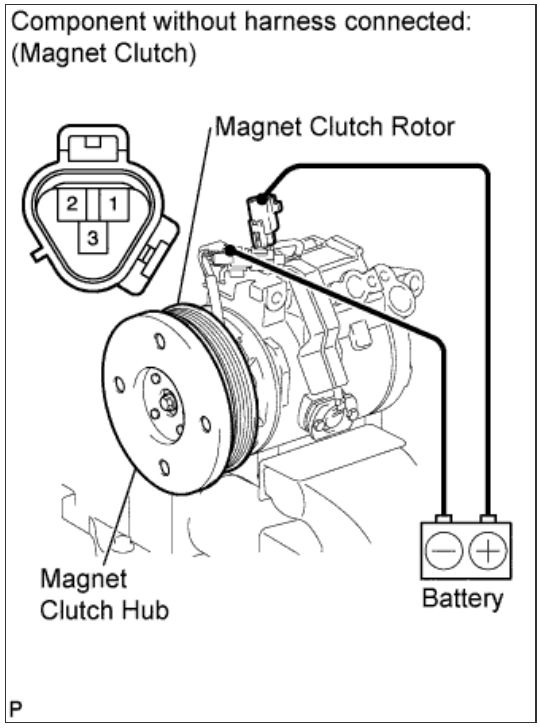

for Preparation Click here


1. INSTALL MAGNET CLUTCH ASSEMBLY

a. Install the magnet clutch stator with the parts shown in the illustration matched.

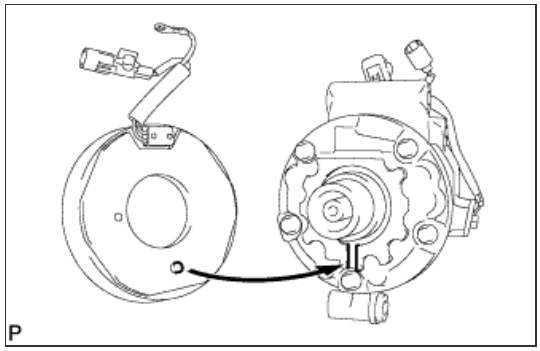

b. Using a snap ring expander, install a new snap ring with the chamfered side facing up.

c. Connect the connector.

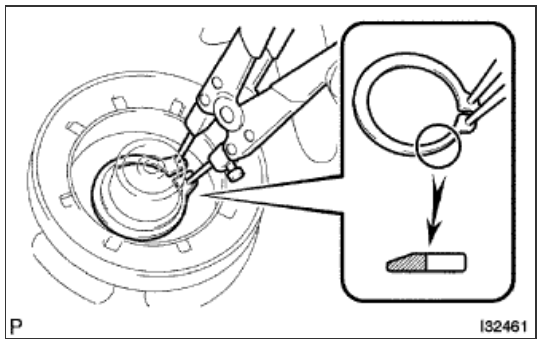

d. Using a snap ring expander, install the magnet clutch rotor and a new snap ring with the chamfered side facing up.


NOTICE:

Do not damage the seal cover of the bearing when installing the snap ring.

e. Install the compressor washer(s) and magnet clutch hub.

NOTICE:

Do not change the combination of the compressor washer(s) used before disassembly.

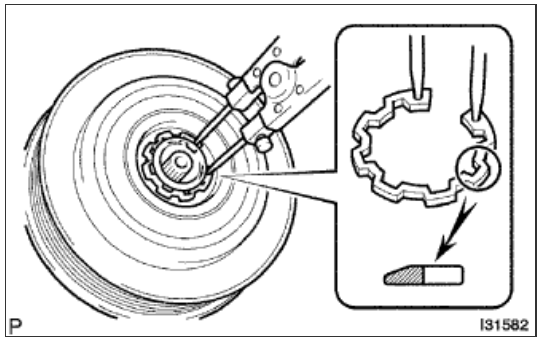


f. Using SST, hold the magnet clutch hub and install the bolt.

SST
09985-00270

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

NOTICE:


Make sure that there is no foreign matter or oil on the compressor shaft, bolt, and clutch hub.

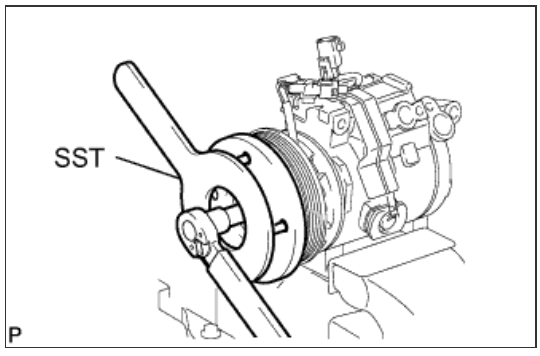

2. INSTALL COOLER BRACKET

a. Install the cooler bracket with the screw.

b. Attach the 2 clamps.

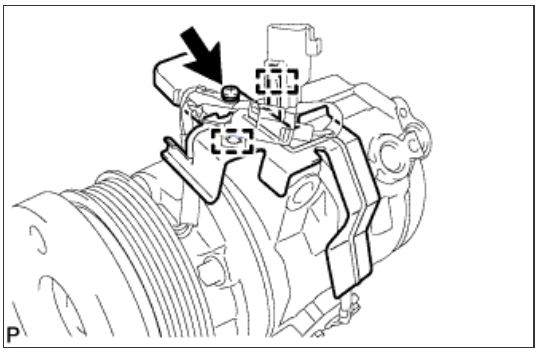

3. INSPECT MAGNET CLUTCH CLEARANCE

a. Clamp the cooler compressor in a vise.

b. Set the dial indicator to the magnet clutch hub.

c. Connect the battery positive lead to terminal 3 of the magnet clutch connector and the negative lead to the ground wire. Turn the magnet clutch on and off and measure the clearance.

Standard clearance:
0.35 to 0.60 mm (0.014 to 0.024 in.)


If the measured value is not within the standard clearance, remove the magnet clutch hub and ad ust the clearance using compressor washers to obtain the standard clearance.

Compre or a her thickne :
0.1 mm (0.004 in.)
0.3 mm (0.012 in.)
0.5 mm (0.020 in.)

NOTICE:

Ad ustment should be performed with 3 or fewer magnet clutch washers.

d. Remove the cooler compressor from the vise.

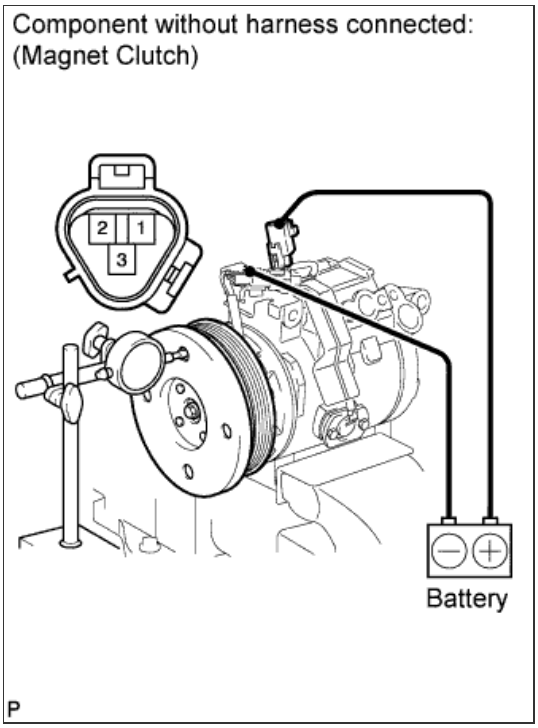

for Preparation Click here

1. ADJUST COMPRESSOR OIL

a. When replacing the compressor and magnetic clutch with a new one, gradually discharge the refrigerant gas from the service valve, and drain the following amount of oil from the new compressor and magnetic clutch before installation.

Standard:
UZJ200L-GNAEKV, GNANKV:
(Oil capacity inside the new compressor and magnetic clutch: 140 + 15 cc (4.7 + 0.51 fl.oz.)) - (Remaining oil amount in the removed compressor and magnetic clutch) = (Oil amount to be removed from the new compressor when replacing)
Except UZJ200L-GNAEKV, GNANKV:
(Oil capacity inside the new compressor and magnetic clutch: 135 + 15 cc (4.6 + 0.51 fl.oz.)) - (Remaining oil amount in the removed compressor and magnetic clutch) = (Oil amount to be removed from the new compressor when replacing)

NOTICE:

- **When checking the compressor oil level, follow the A/C system precautions.**
- **If a new compressor and magnetic clutch is installed without removing some oil remaining in the pipes of the vehicle, the oil amount will be too large. This prevents heat exchange in the refrigerant cycle and causes refrigerant failure.**
- **If the volume of oil remaining in the removed compressor and magnetic clutch is too small, check for oil leakage.**
- **Be sure to use ND-OIL 8 or equivalent for compressor oil.**


2. INSTALL COOLER COMPRESSOR ASSEMBLY

a. Install the cooler compressor and No. 1 compressor stay with the 3 bolts and nut.

Torque:
for nut:
24.5 N*m{ 250 kgf*cm , 18 ft.*lbf }
for bolt:
45 N*m{ 459 kgf*cm , 33 ft.*lbf }

HINT:

Tighten the bolts and nut in the order shown in the illustration.

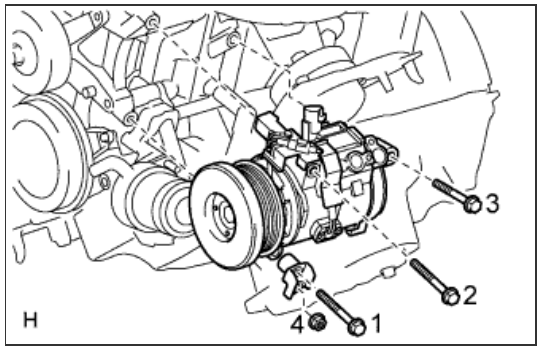

b. Connect the connector.

3. CONNECT SUCTION HOSE SUB-ASSEMBLY

a. Remove the attached vinyl tape from the hose.


b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the cooler compressor.

Compressor oil:
ND-OIL 8 or equivalent

c. Install the O-ring to the suction hose.

d. Connect the suction hose to the cooler compressor with the 2 bolts.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

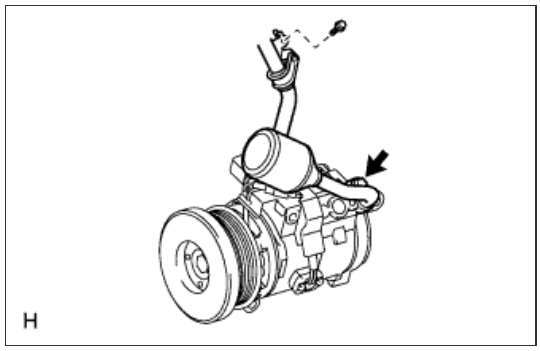

4. CONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

a. Remove the attached vinyl tape from the hose.


b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the cooler compressor.

Compressor oil:
ND-OIL 8 or equivalent

c. Install the O-ring to the discharge hose.

d. Connect the discharge hose to the cooler compressor with the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

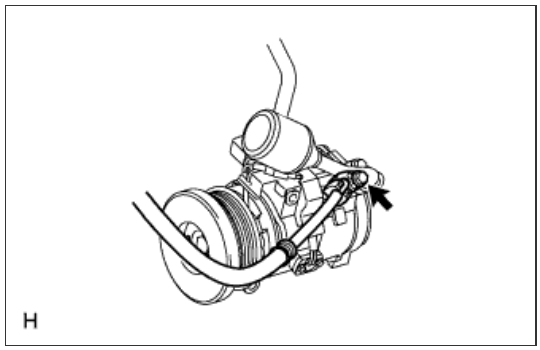


5. INSTALL FAN & GENERATOR V BELT

a. Set the V belt onto every part except the belt tensioner, as shown in the illustration.

b. Loosen the V belt by turning the belt tensioner counterclockwise.


c. Set the V belt to the belt tensioner.

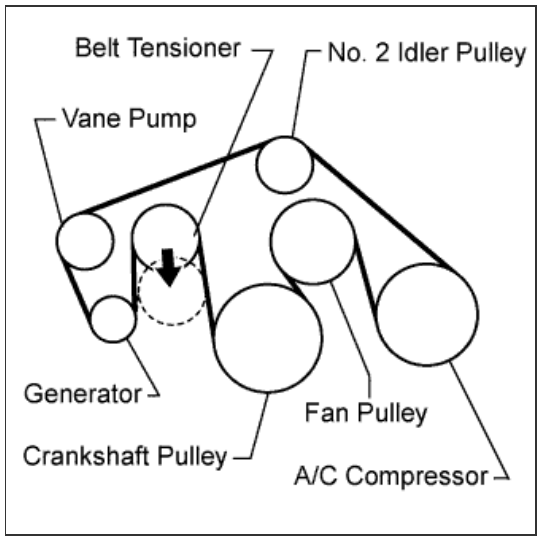

d. Check that the belt fits properly in the ribbed grooves.

HINT:


Make sure to check by hand that the belt has not slipped out of the grooves on the bottom of the pulley.

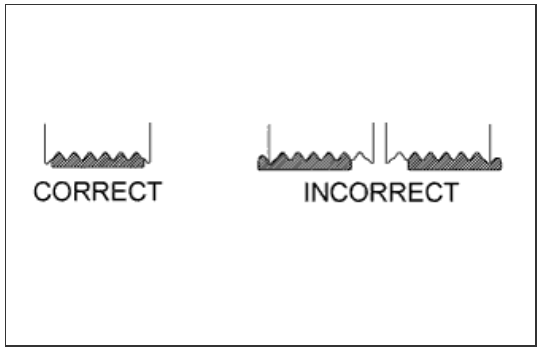

e. Check that the arrow on the belt tensioner is within area "A".
If the arrow is outside area "A", replace the fan and generator V belt.


HINT:

When a new belt is installed, the arrow should be within area "B". If not, the fan and generator V belt is not installed correctly.

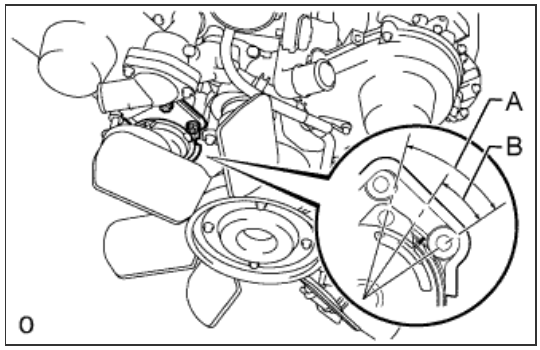

6. INSTALL FRONT FENDER APRON SEAL LH

a. Install the seal with the 4 clips.

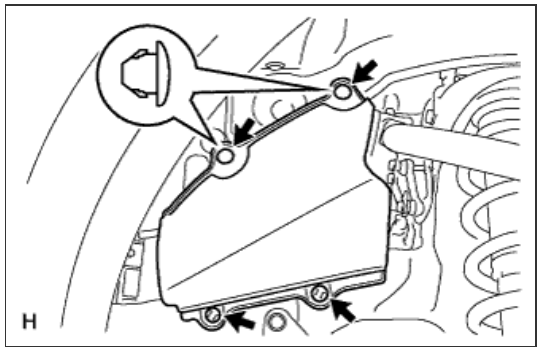

7. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

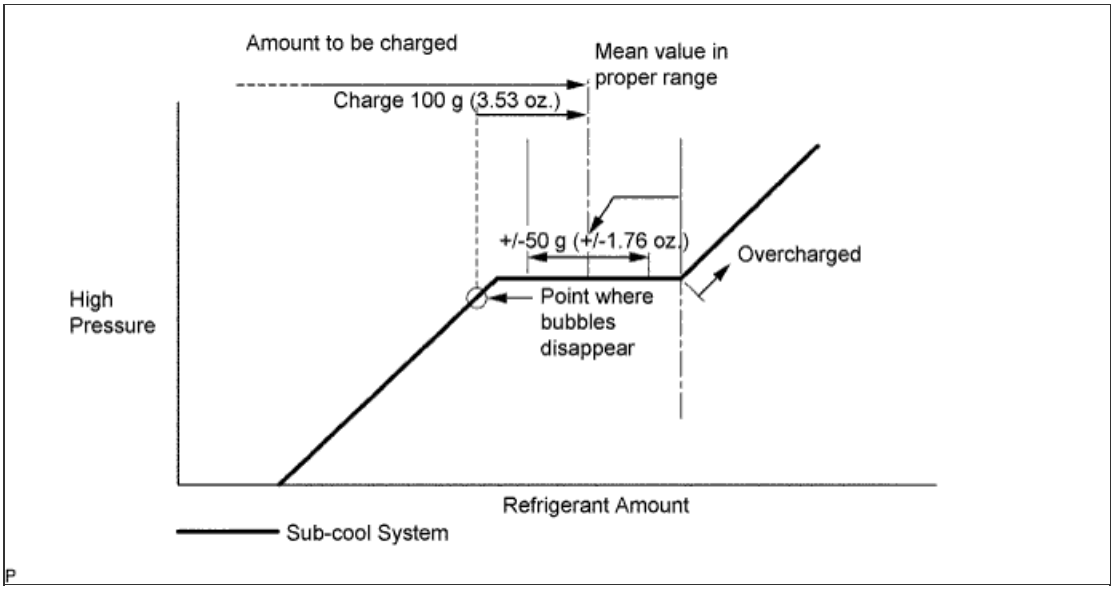

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

8. WARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

9. CHECK FOR REFRIGERANT GAS LEAK

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.


d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. isconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

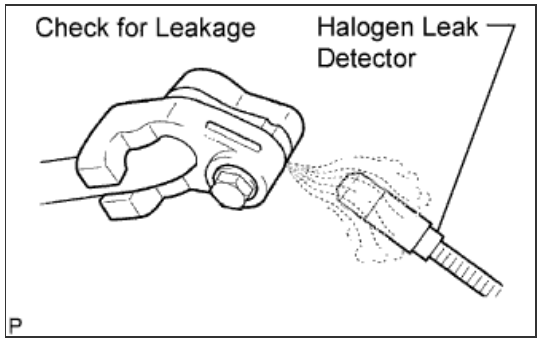



10. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Install the radiator support seal with the 7 clips.

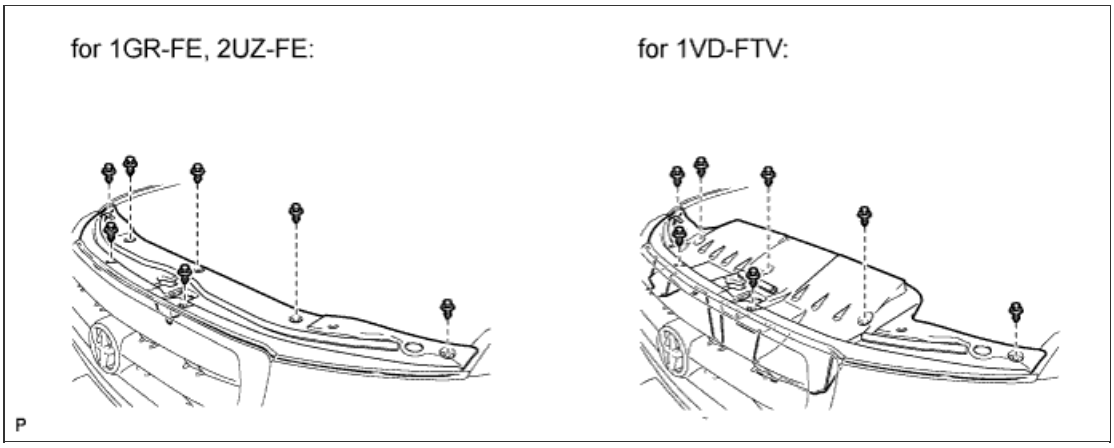

for Preparation Click here

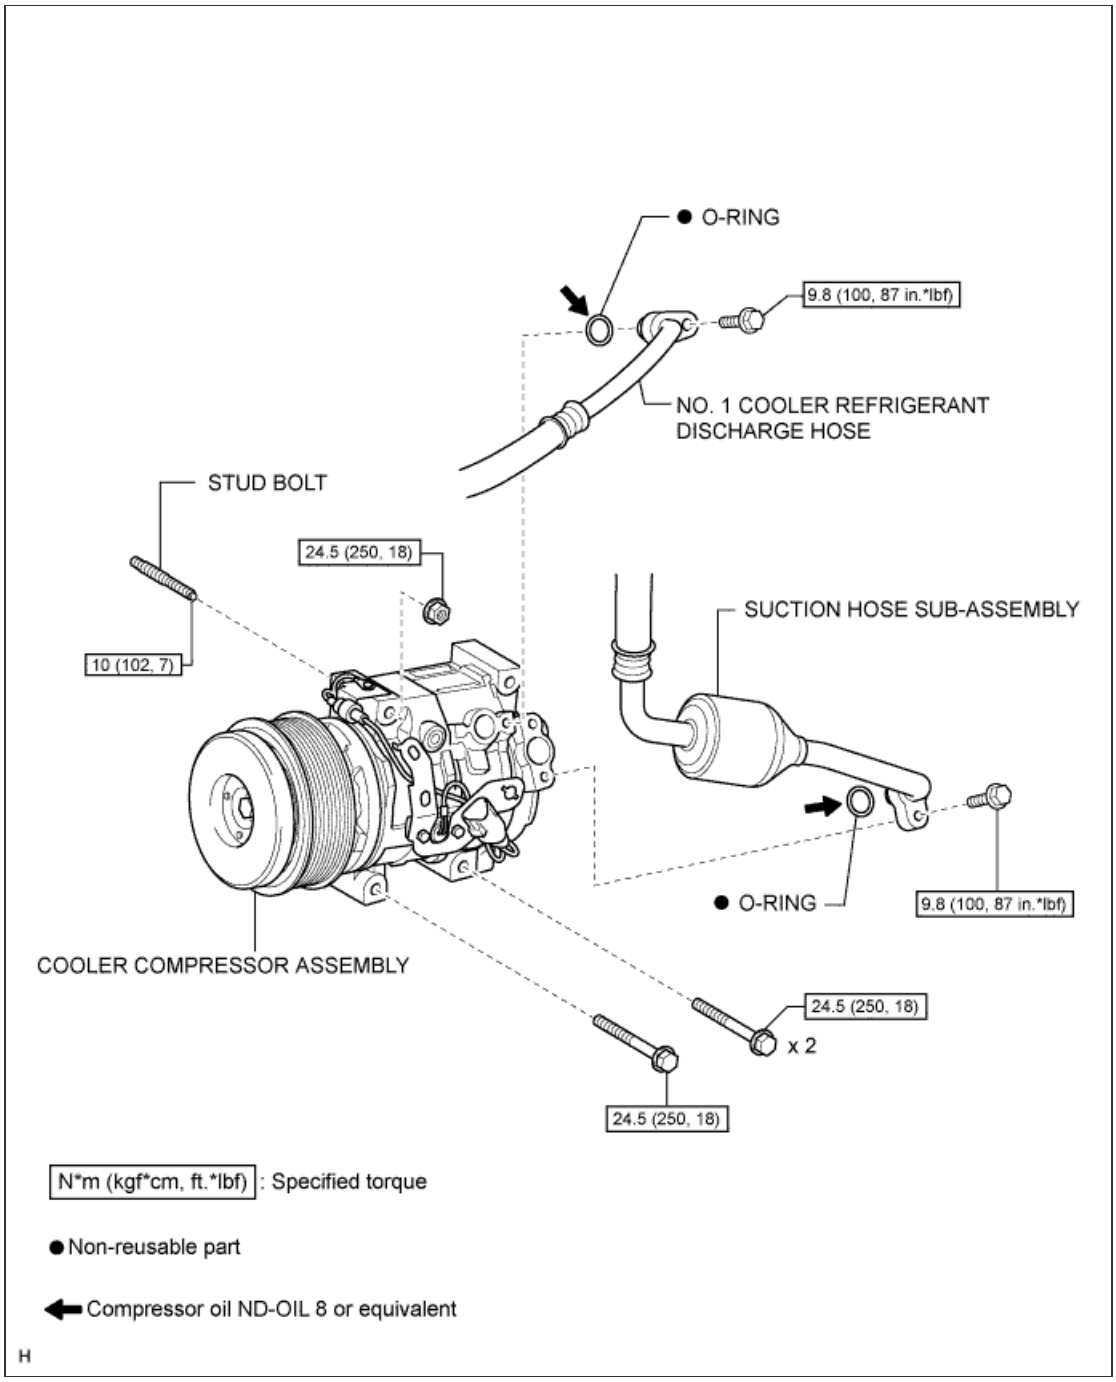


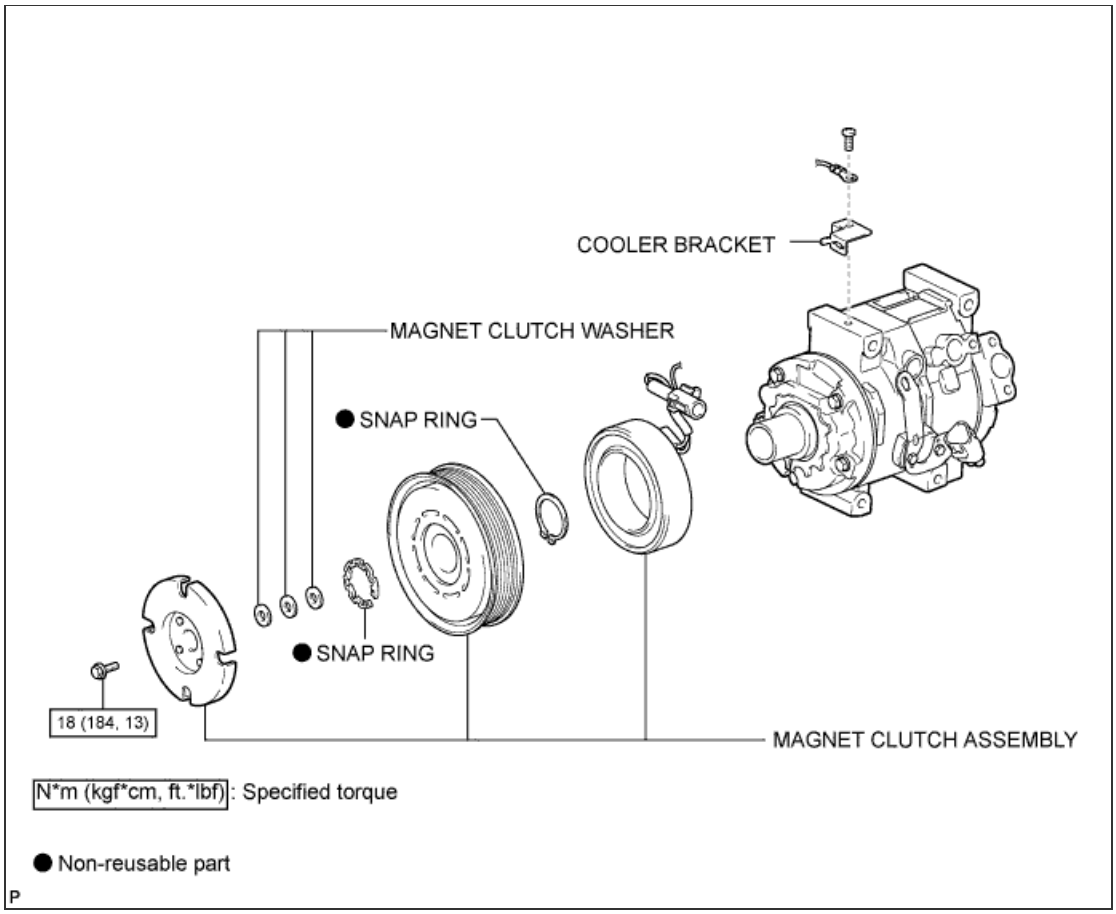
COOLER BRACKET
MAGNET CLUTCH WASHER
● SNAP RING
● SNAP RING
18 (184, 13)
MAGNET CLUTCH ASSEMBLY
N*m (kgf*cm, ft.*lbf): Specified torque
● Non-reusable part
P

for Preparation Click here

1. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

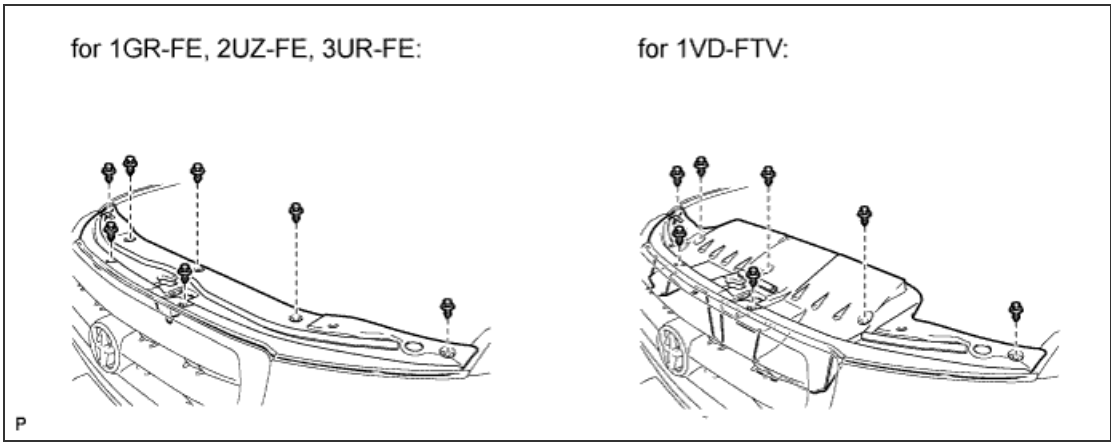

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.


c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

3. REMOVE FRONT FENDER APRON SEAL LH

a. Remove the 4 clips and seal.

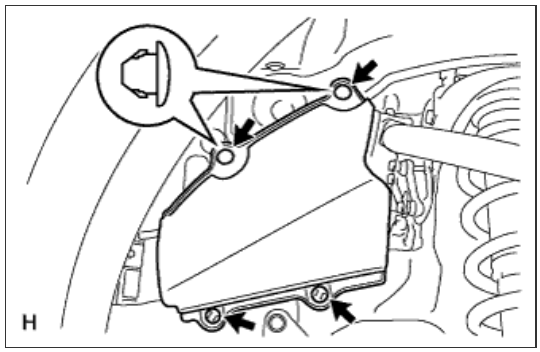


4. REMOVE FAN & GENERATOR V BELT

a. While turning the belt tensioner counterclockwise, align the service hole for the

belt tensioner and the belt tensioner fixing position, and then insert a bar of 5 mm (0.197 in.) into the service hole to fix the belt tensioner in place.

Text in Illustration

*1	Bar

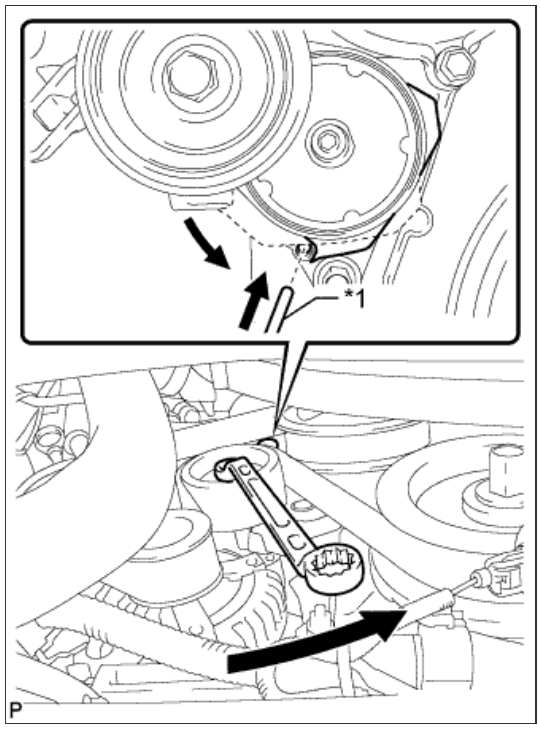

HINT:


The pulley bolt for the belt tensioner has a left-hand thread.

b. Remove the V belt.

5. DISCONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

a. Remove the bolt and disconnect the discharge hose from the cooler compressor.

b. Remove the O-ring from the discharge hose.

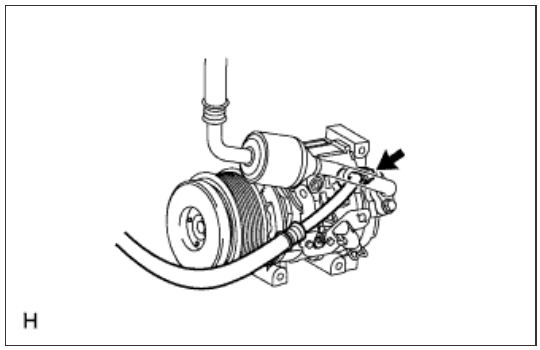


NOTICE:

Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.

6. DISCONNECT SUCTION HOSE SUB-ASSEMBLY

a. Remove the bolt and disconnect the suction hose from the cooler compressor.

b. Remove the O-ring from the suction hose.

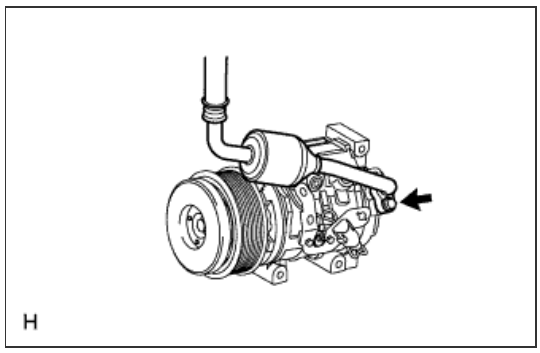

NOTICE:


Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.

7. REMOVE COOLER COMPRESSOR ASSEMBLY

a. Disconnect the connector.

b. Remove the 3 bolts and nut.

c. Remove the stud bolt and cooler compressor.

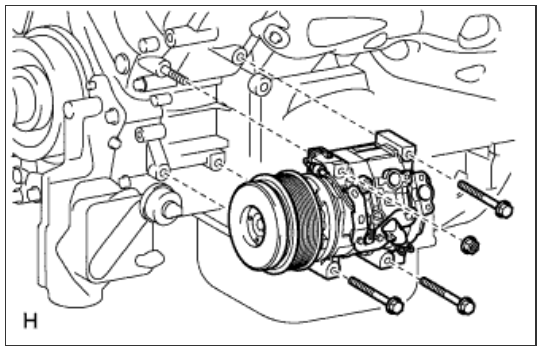

for Preparation Click here


1. REMOVE COOLER BRACKET

a. Detach the clamp.

b. Remove the screw and the cooler bracket.

Text in Illustration

*1	Cooler Bracket

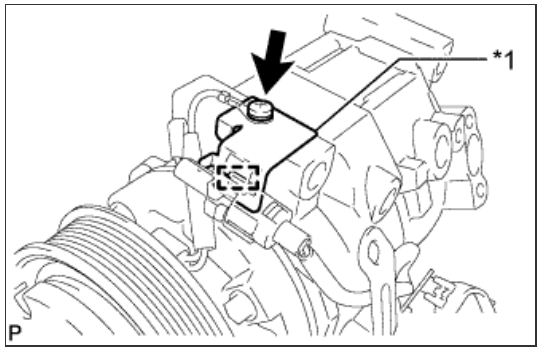

2. REMOVE MAGNET CLUTCH ASSEMBLY

a. Clamp the cooler compressor in a vise.


b. Using SST, hold the magnet clutch hub.

SST
09985-00270

c. Remove the bolt, magnet clutch hub and magnet clutch washer(s).

HINT

There is no set number of magnet clutch washers since they are used for adjusting.

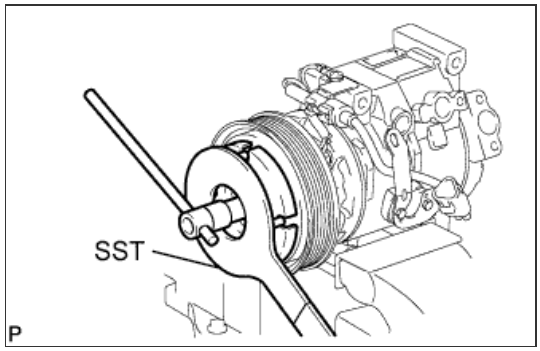


.Using a snap ring expander, remove the snap ring and the magnet clutch rotor.


NOTICE

Do not damage the seal cover of the bearing when removing the snap ring.

e. Disconnect the connector.

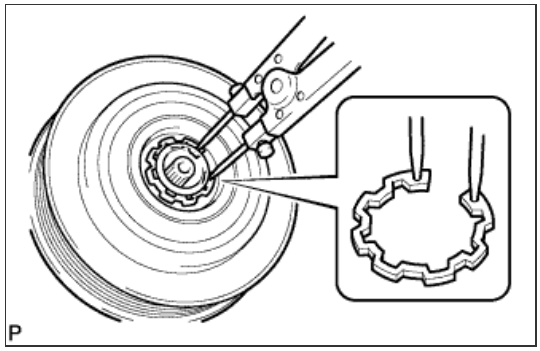

f. Using a snap ring expander, remove the snap ring and magnet clutch stator.

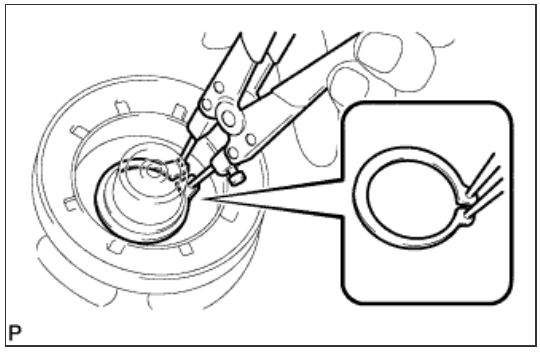

for Preparation [Click here]

1. INSPECT MAGNET CLUTCH ASSEMBLY


a. Check the magnet clutch operation.

i. Confirm that the magnet clutch hub and magnet clutch rotor lock when the battery positive lead is connected to terminal 3 of the magnet clutch, and the negative lead is connected to the ground wire.
If the operation is not as specified, replace the magnet clutch assembly.

b. Measure the resistance.

c. Measure the resistance between terminals 1 and 2.

Standard resistance:
65 to 125 Ω at 20°C (68°F)

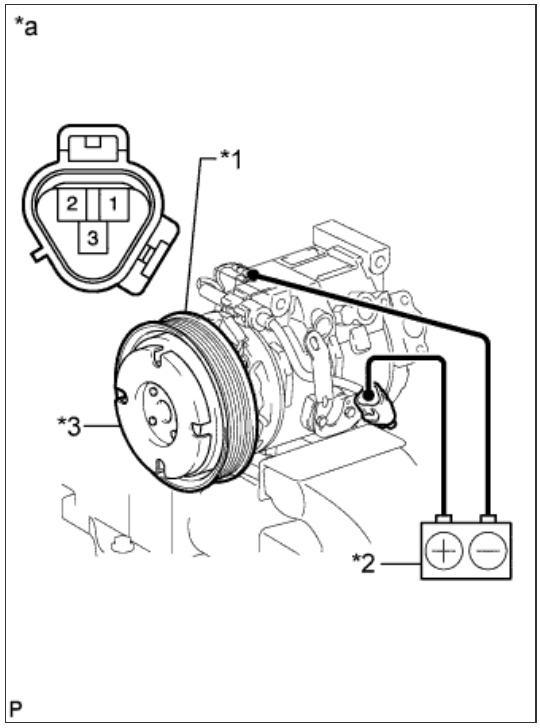

Text in Illustration


*1	Magnet Clutch Rotor
*2	Battery
*3	Magnet Clutch Hub
*a	Component without harness connected (Magnet Clutch)

If the resistance is not as specified, replace the cooler compressor assembly.

for Preparation Click here


1. INSTALL MAGNET CLUTCH ASSEMBLY

a. Install the magnet clutch stator with the parts shown in the illustration matched.

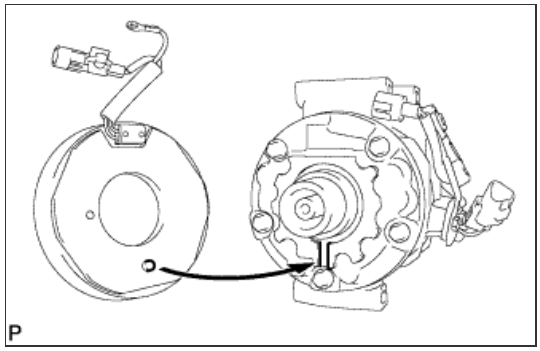

b. Using a snap ring expander, install a new snap ring with the chamfered side facing up.

c. Connect the connector.

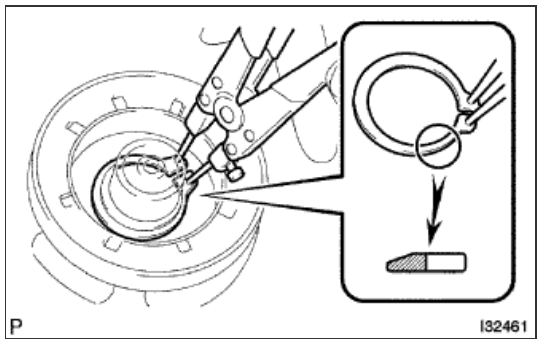

d. Using a snap ring expander, install the magnet clutch rotor and a new snap ring with the chamfered side facing up.


NOTICE:

Do not damage the seal cover of the bearing when installing the snap ring.

e. Install the compressor washer(s) and magnet clutch hub.

NOTICE:

Do not change the combination of the compressor washer(s) used before disassembly.

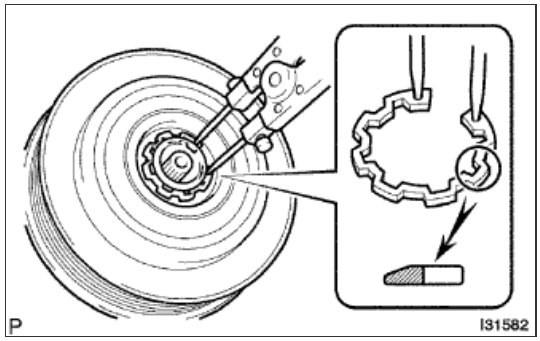


f. Using SST, hold the magnet clutch hub and install the bolt.

SST
09985-00270

Torque:
18 N*m{ 184 kgf*cm , 13 ft.*lbf }

NOTICE:

Make sure that there is no foreign matter or oil on the compressor shaft, bolt, and clutch hub.

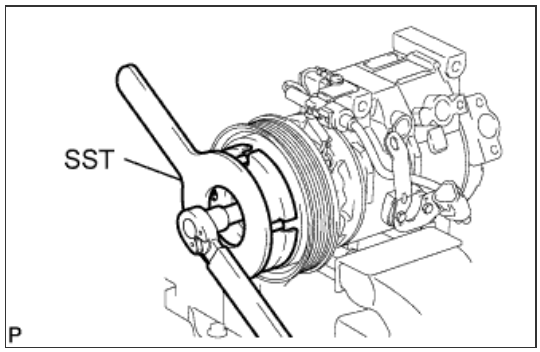


2. INSTALL COOLER BRACKET

a. Install the cooler bracket with the screw.

b. Attach the clamp.

Text in Illustration

*1	Cooler Bracket

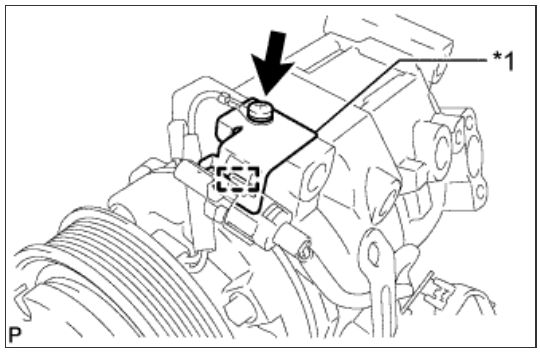

3. INSPECT MAGNET CLUTCH CLEARANCE

a. Clamp the cooler compressor in a vise.

b. Set the dial indicator to the magnet clutch hub.

c. Connect the battery positive lead to terminal 3 of the magnet clutch connector and the negative lead to the ground wire. Turn the magnet clutch on and off and measure the clearance.

Standard clearance:
0.35 to 0.60 mm (0.014 to 0.024 in.)

If the measured value is not within the standard clearance, remove the magnet clutch hub and adjust the clearance using compressor washers to obtain the standard clearance.

Compressor washer thickness:
0.1 mm (0.004 in.)
0.3 mm (0.012 in.)
0.5 mm (0.020 in.)


NOTICE:

Adjustment should be performed with 3 or fewer magnet clutch washers.

d. Remove the cooler compressor from the vise.

Text in Illustration

*1	Battery
*a	Component without harness connected (Magnet Clutch Assembly)

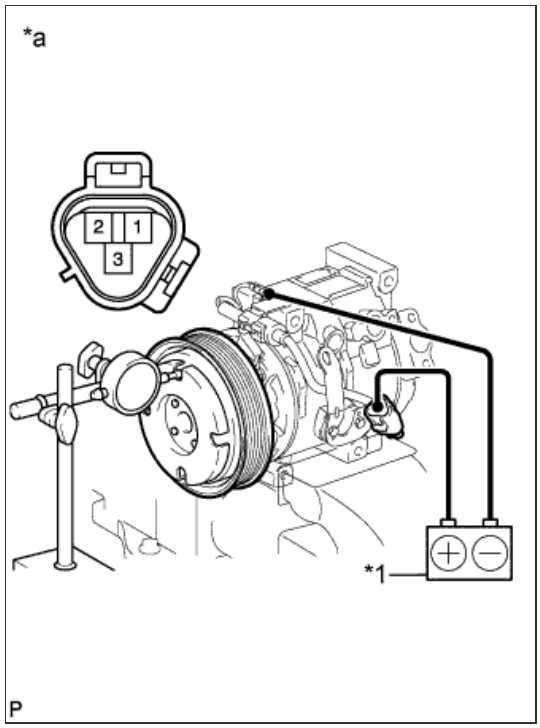

for Preparation Click here

1. ADJUST COMPRESSOR OIL

a. When replacing the compressor and magnetic clutch with a new one, gradually discharge the refrigerant gas from the service valve, and drain the following amount of oil from the new compressor and magnetic clutch before installation.

Standard:
(Oil capacity inside the new compressor and magnetic clutch: 135 + 15 cc (4.6 + 0.51 fl.oz.)) - (Remaining oil amount in the removed compressor and magnetic clutch) = (Oil amount to be removed from the new compressor when replacing)

NOTICE:

- **When checking the compressor oil level, follow the A/C system precautions.**
- **If a new compressor and magnetic clutch is installed without removing some oil remaining in the pipes of the vehicle, the oil amount will be too large. This prevents heat exchange in the refrigerant cycle and causes refrigerant failure.**
- **If the volume of oil remaining in the removed compressor and magnetic clutch is too small, check for oil leakage.**
- **Be sure to use ND-OIL 8 or equivalent compressor oil.**

2. INSTALL COOLER COMPRESSOR ASSEMBLY

a. Install the cooler compressor and stud bolt.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

b. Install the 3 bolts and nut.

Torque:
24.5 N*m{ 250 kgf*cm , 18 ft.*lbf }

HINT:

Tighten the bolts and nut in the order shown in the illustration.

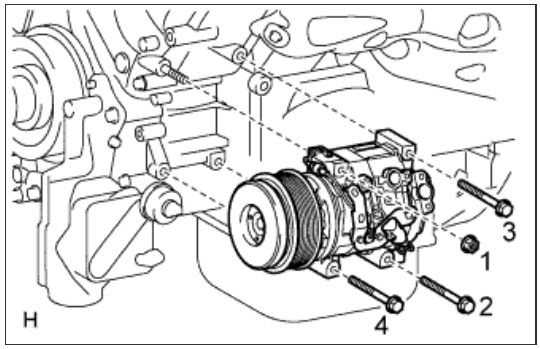

c. Connect the connector.

3. CONNECT SUCTION HOSE SUB-ASSEMBLY

a. Remove the attached vinyl tape from the suction hose.


b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the cooler compressor.

Compressor oil:
ND-OIL 8 or equivalent

c. Install the O-ring to the suction hose.

d. Connect the suction hose to the cooler compressor with the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

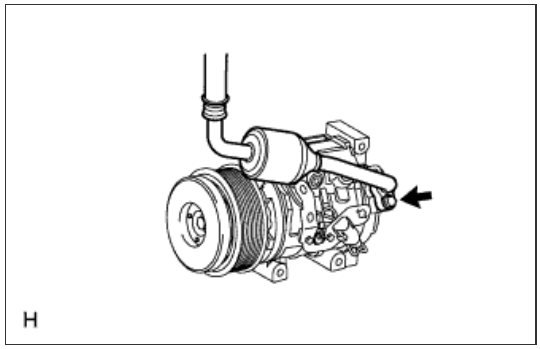

4. CONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

a. Remove the attached vinyl tape from the cooler refrigerant discharge hose.


b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the cooler compressor.

Compressor oil:
ND-OIL 8 or equivalent

c. Install the O-ring to the discharge hose.

d. Connect the discharge hose to the cooler compressor with the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

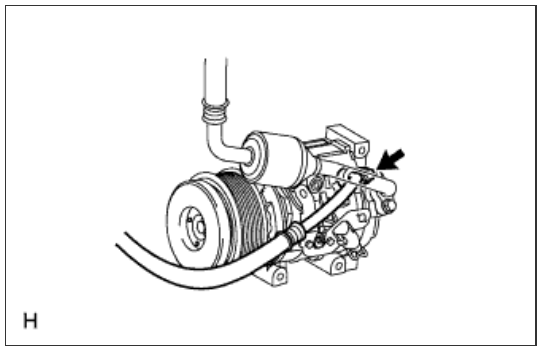

5. INSTALL FAN & GENERATOR V BELT

a. Set the V belt onto every part.


b. While turning the belt tensioner counterclockwise, remove the bar.

Text in Illustration

*1	Vane Pump
*2	Water Pump
*3	No. 1 Idler
*4	Fan
*5	Generator
*6	Belt Tensioner
*7	Crankshaft
*8	Cooler Compressor

NOTICE:

Make sure that the V belt is properly set to each pulley.

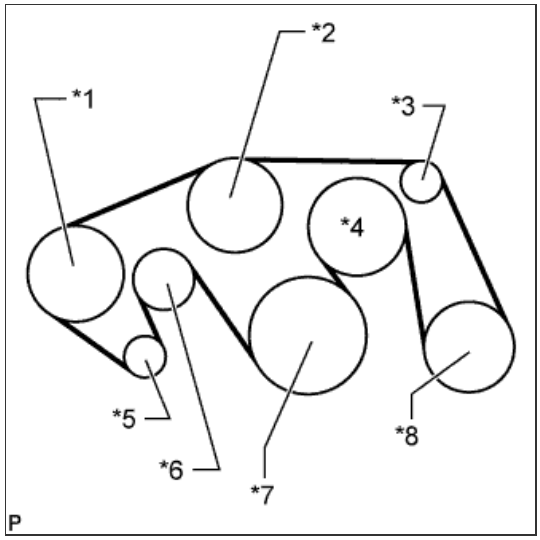


c. After installing the belt, check that it fits properly in the ribbed grooves.

Text in Illustration

*a	CORRECT
*b	INCORRECT


HINT:

Make sure to check by hand that the belt has not slipped out of the grooves on the bottom of the pulley.

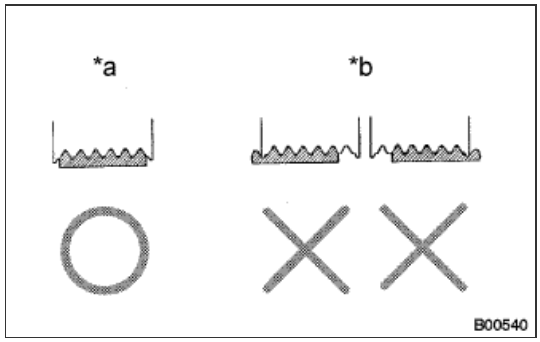

6. INSTALL FRONT FENDER APRON SEAL LH

a. Install the seal with the 4 clips.

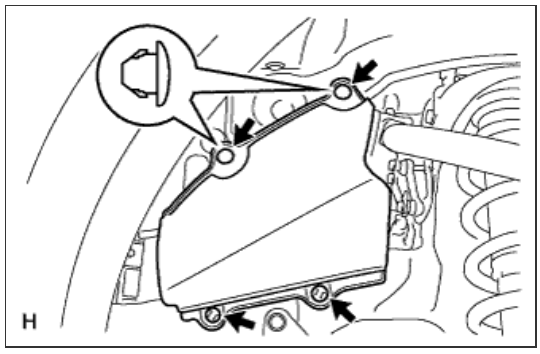

7. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w o Rear Cooler	w Cool Box	870 + -30 g (30.7 + -1.1 oz.)
		w o Cool Box	870 + -30 g (30.7 + -1.1 oz.)
	w Rear Cooler	w Cool Box	1010 + -30 g (35.6 + -1.1 oz.)
		w o Cool Box	960 + -30 g (33.9 + -1.1 oz.)
16 mm (0.630 in.)	w o Rear Cooler	w Cool Box	770 + -30 g (27.2 + -1.1 oz.)
		w o Cool Box	770 + -30 g (27.2 + -1.1 oz.)
	w Rear Cooler	w Cool Box	970 + -30 g (34.2 + -1.1 oz.)
		w o Cool Box	920 + -30 g (32.5 + -1.1 oz.)

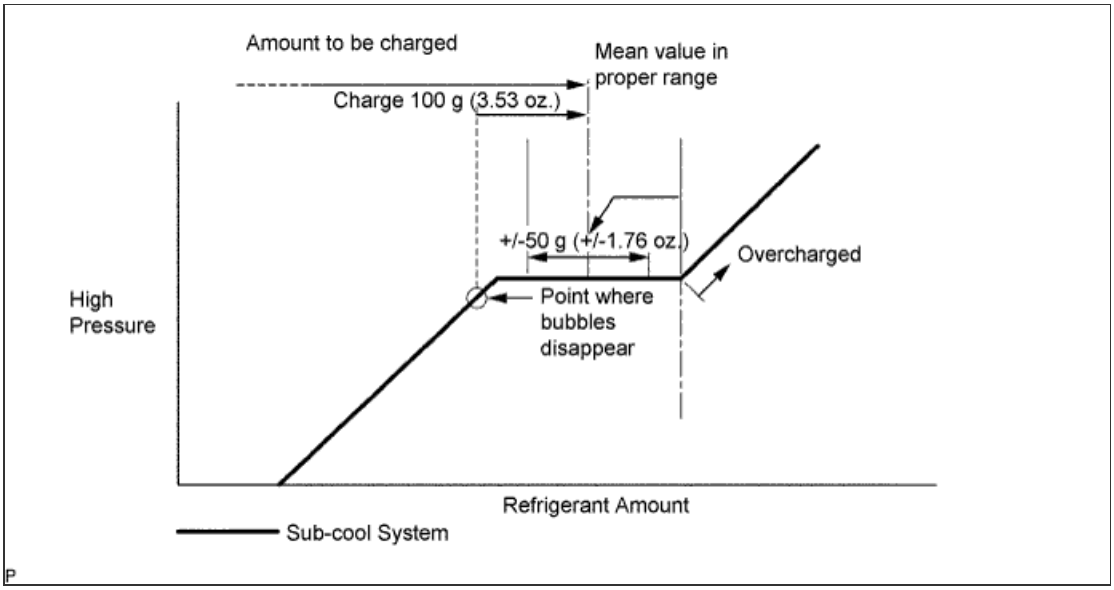

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

8. WARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

9. CHECK FOR REFRIGERANT GAS LEAK

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.


d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

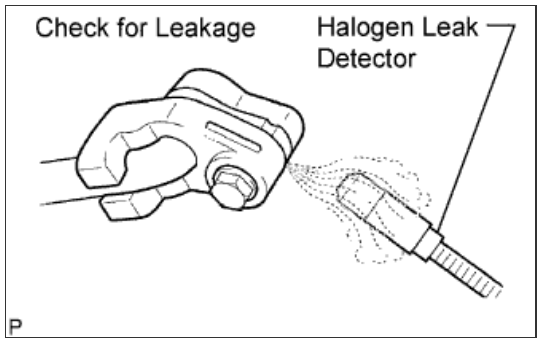



10. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Install the radiator support seal with the 7 clips.

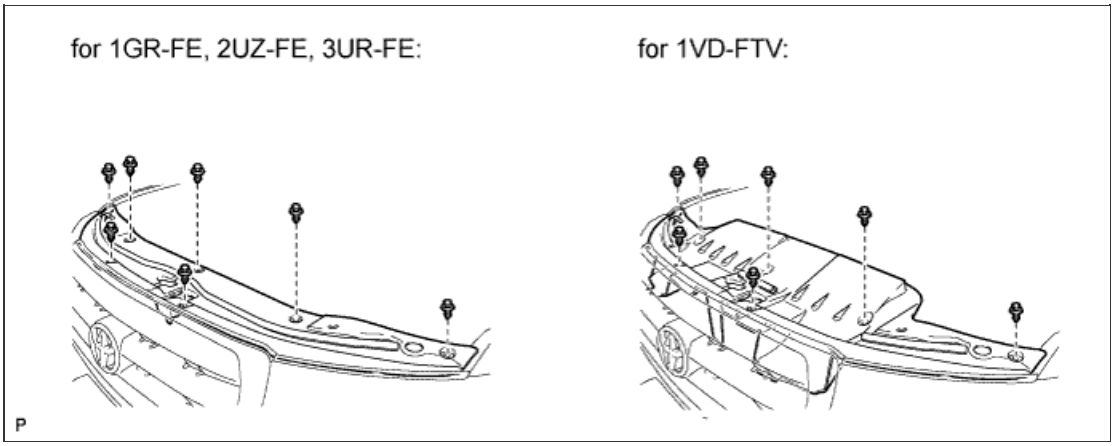

for Preparation Click here

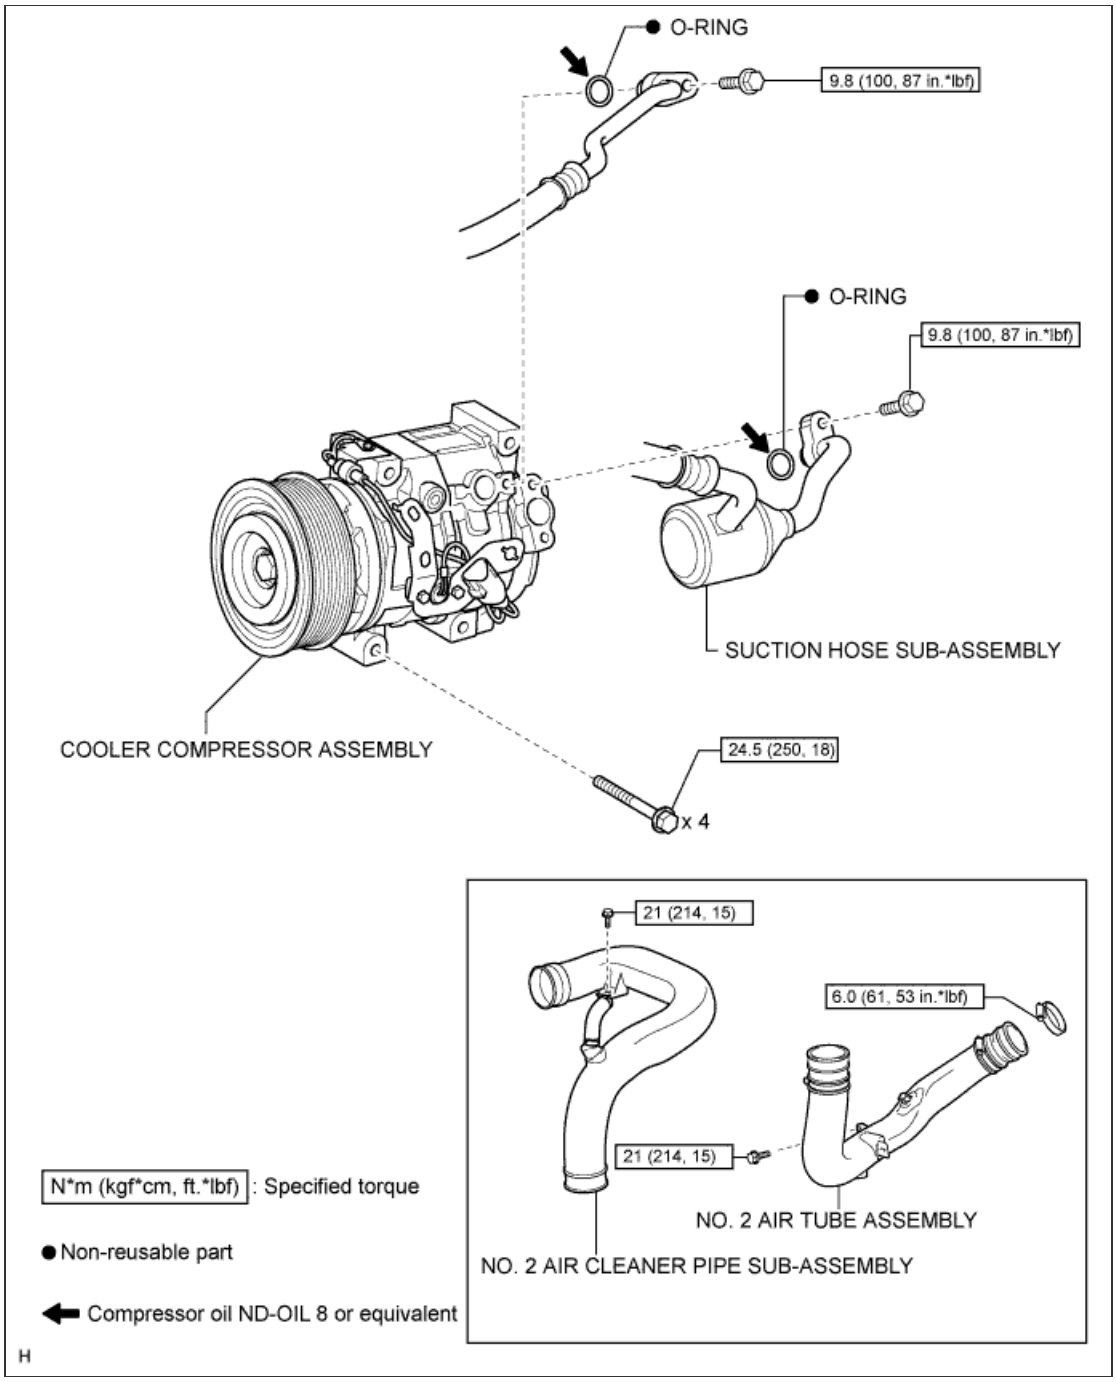

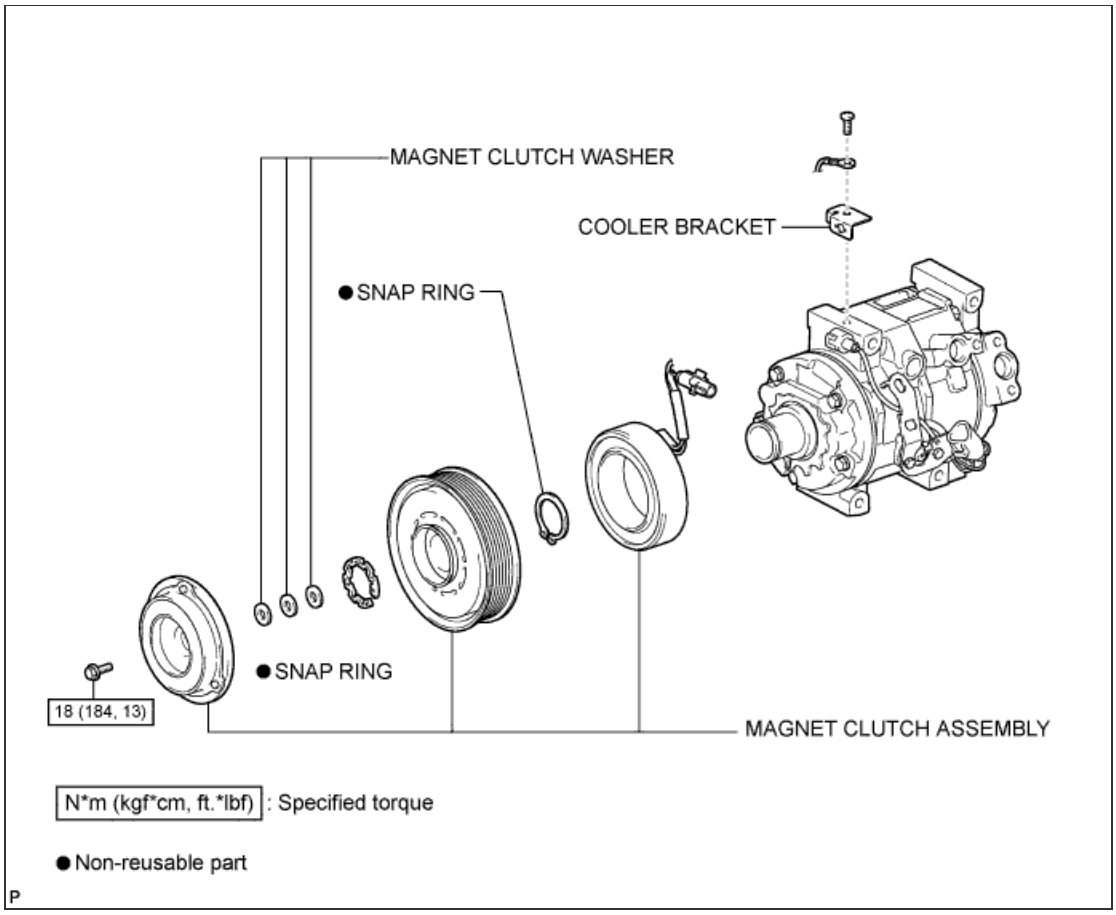
MAGNET CLUTCH WASHER
COOLER BRACKET
● SNAP RING
● SNAP RING
18 (184, 13)
MAGNET CLUTCH ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
P

for Preparation Click here

1. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

2. REMOVE RADIATOR ASSEMBLY

a. Remove the radiator assembly (Click here).

3. REMOVE INTERCOOLER ASSEMBLY


a. Remove the intercooler assembly (Click here).

4. REMOVE NO. 2 AIR CLEANER PIPE SUB-ASSEMBLY

a. Disconnect the ventilation hose from the oil separator.

b. Loosen the hose clamp.


c. Remove the bolt and No. 2 air cleaner pipe.

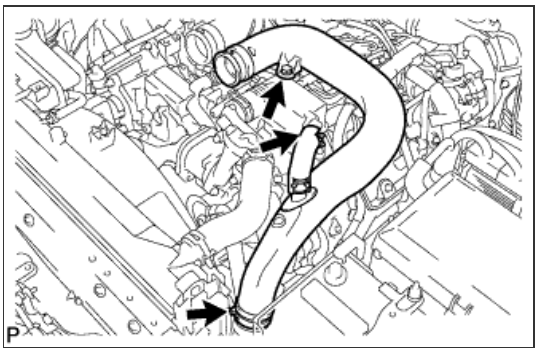

5. REMOVE NO. 2 AIR TUBE ASSEMBLY

a. Remove the bolt and No. 2 air tube.

b. Remove the O-ring.

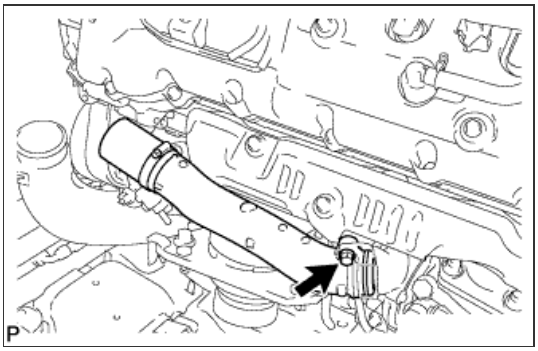


6. DISCONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

a. Remove the bolt and disconnect the discharge hose from the cooler compressor.

b. Remove the O-ring from the discharge hose.

NOTICE:

Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.

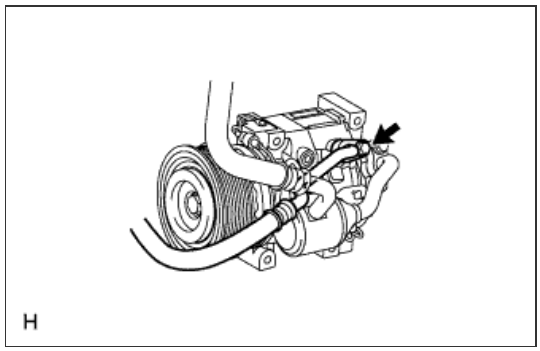


7. DISCONNECT SUCTION HOSE SUB-ASSEMBLY

a. Remove the bolt and disconnect the suction hose from the cooler compressor.

b. Remove the O-ring from the suction hose.

NOTICE:


Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.

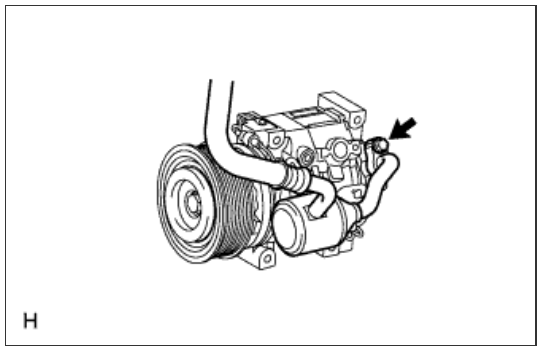


8. REMOVE COOLER COMPRESSOR ASSEMBLY

a. Disconnect the connector.

b. Remove the 4 bolts.

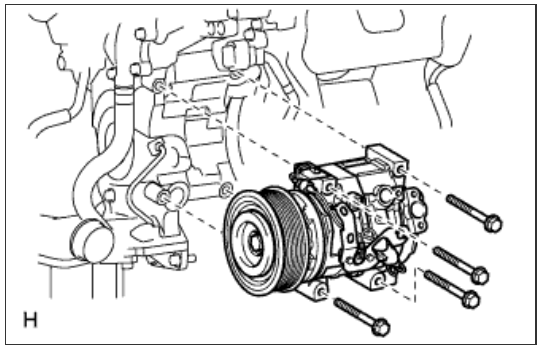

c. Remove the cooler compressor as shown in the illustration.

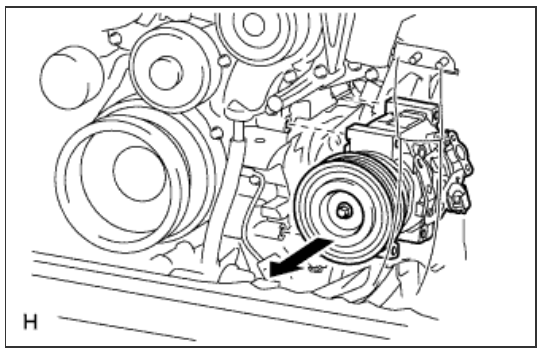


for Preparation Click here

1. REMOVE COOLER BRACKET

a. Detach the clamp.

b. Remove the screw and the cooler bracket.

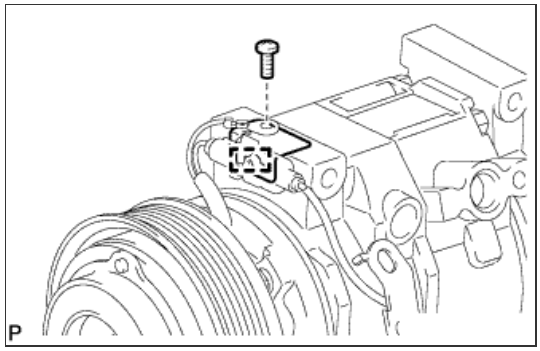

2. REMOVE MAGNET CLUTCH ASSEMBLY

SST
09985-00260


a. Clamp the cooler compressor in a vise.

b. Using SST, hold the magnet clutch hub.

c. Remove the bolt, magnet clutch hub and magnet clutch washer(s).

HINT:

There is no set number of magnet clutch washers since they are used for adjusting.

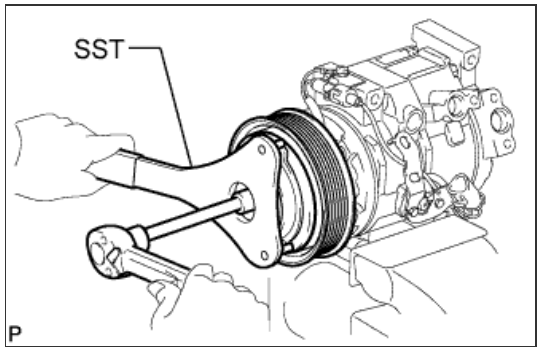


d. Using a snap ring expander, remove the snap ring and the magnet clutch rotor.


NOTICE:

Do not damage the seal cover of the bearing when removing the snap ring.

e. Disconnect the connector.

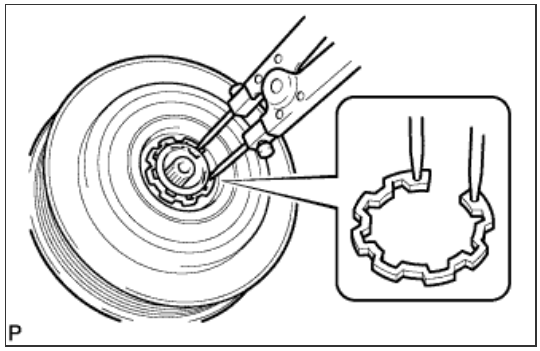

f. Using a snap ring expander, remove the snap ring and magnet clutch stator.

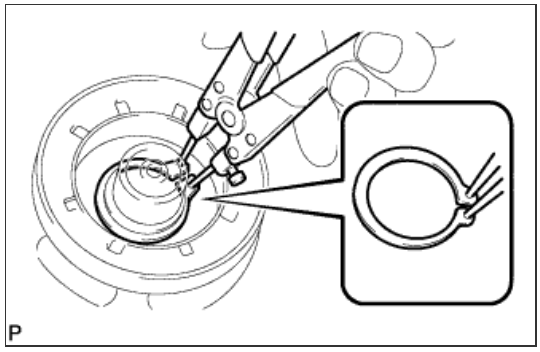

for Preparation Click here

1. INSPECT MAGNET CLUTCH ASSEMBLY


a. Check the magnet clutch operation.

i. Confirm that the magnet clutch hub and magnet clutch rotor lock when the battery positive lead is connected to terminal 3 of the magnet clutch, and the negative lead is connected to the ground wire.
If the operation is not as specified, replace the magnet clutch assembly.

b. Measure the resistance.

c. Measure the resistance between terminals 1 and 2.


Standard resistance:
65 to 125 Ω at 20°C (68°F)
If the resistance is not as specified, replace the cooler compressor assembly.

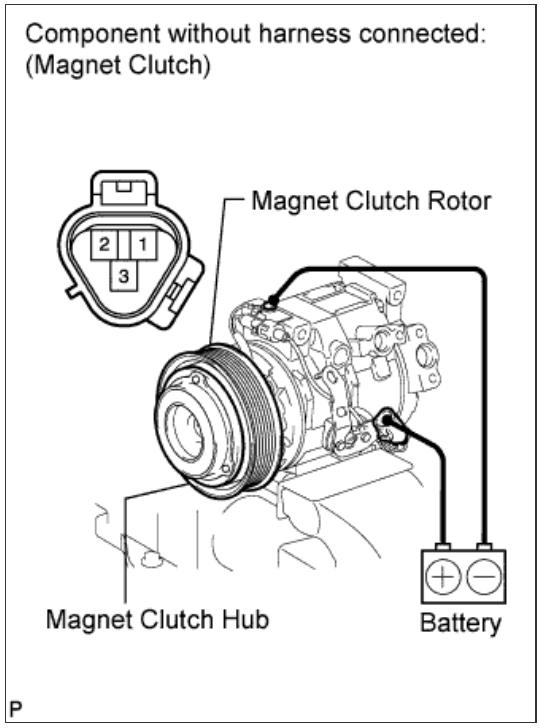

for Preparation Click here


1. INSTALL MAGNET CLUTCH ASSEMBLY

a. Install the magnet clutch stator with the parts shown in the illustration matched.

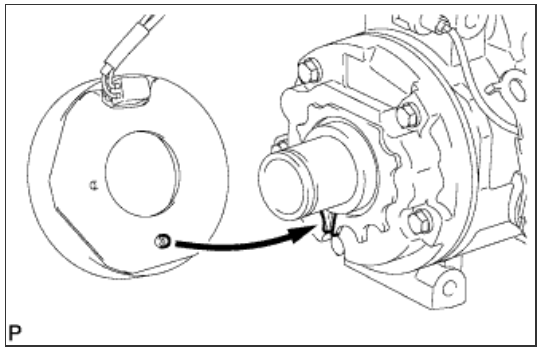

b. Using a snap ring expander, install a new snap ring with the chamfered side facing up.

c. Connect the connector.

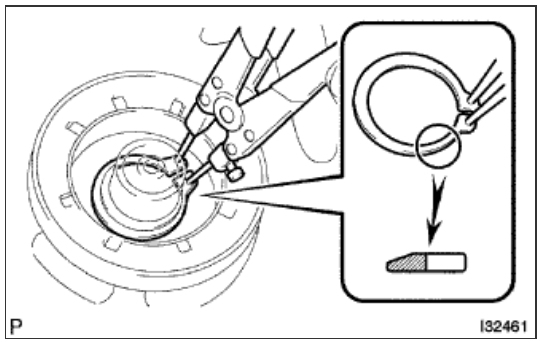

d. Using a snap ring expander, install the magnet clutch rotor and a new snap ring with the chamfered side facing up.


NOTICE:

Do not damage the seal cover of the bearing when installing the snap ring.

e. Install the compressor washer(s) and magnet clutch hub.

NOTICE:

Do not change the combination of the compressor washer(s) used before disassembly.

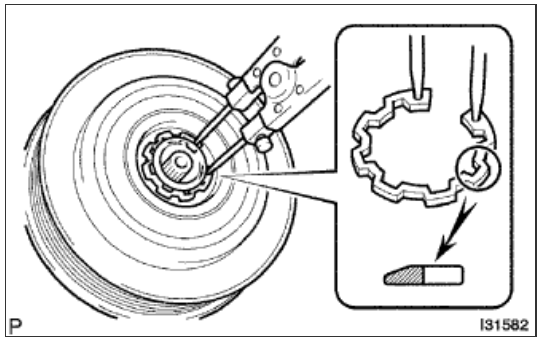


f. Using SST, hold the magnet clutch hub and install the bolt.

SST
09985-00260

Torque:
18 N 18 kgf cm , 13 ft. lbf }

NOTICE:


Make sure that there is no foreign matter or oil on the compressor shaft, bolt, and clutch hub.

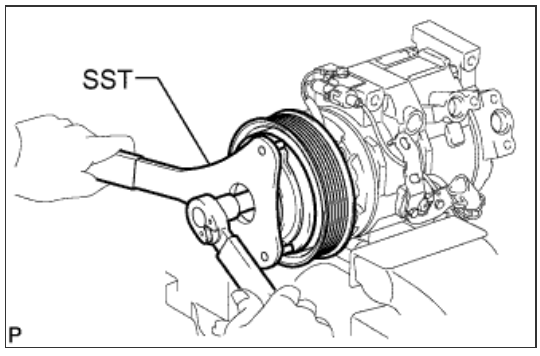

2. INSTALL COOLER BRACKET

a. Install the cooler bracket with the screw.

b. Attach the clamp.

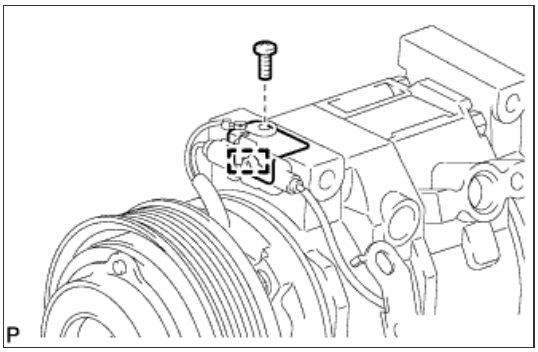

3. INSPECT MAGNET CLUTCH CLEARANCE

a. Clamp the cooler compressor in a vise.

b. Set the dial indicator to the magnet clutch hub.

c. Connect the battery positive lead to terminal 3 of the magnet clutch connector and the negative lead to the ground wire. Turn the magnet clutch on and off and measure the clearance.

Standard clearance:
0. 5 to 0.60 mm (0.01 to 0.02 in.)


If the measured value is not within the standard clearance, remove the magnet clutch hub and adjust the clearance using compressor washers to obtain the standard clearance.

Compressor washer thickness:
0.1 mm (0.00 in.)
0. mm (0.012 in.)
0.5 mm (0.020 in.)

NOTICE:

Adjustment should be performed with 3 or fewer magnet clutch washers.

d. Remove the cooler compressor from the vise.

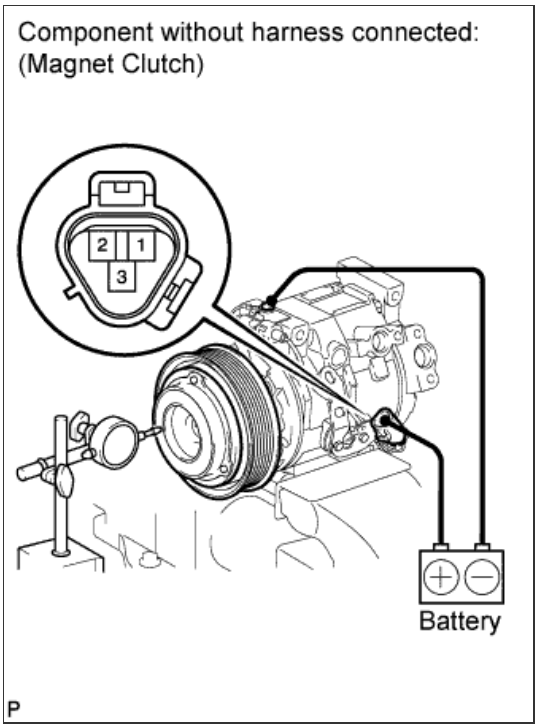

for Preparation Click here

1. ADJUST COMPRESSOR OIL

a. When replacing the compressor and magnetic clutch with a new one, gradually discharge the refrigerant gas from the service valve, and drain the following amount of oil from the new compressor and magnetic clutch before installation.

Standard:
VDJ200L-GNMNZV, GNTNZV, GPMNZV:
(Oil capacity inside the new compressor and magnetic clutch: 140 + 15 cc (4.7 + 0.51 fl.oz.)) - (Remaining oil amount in the removed compressor and magnetic clutch) = (Oil amount to be removed from the new compressor when replacing)
Except VDJ200L-GNMNZV, GNTNZV, GPMNZV:
(Oil capacity inside the new compressor and magnetic clutch: 135 + 15 cc (4.6 + 0.51 fl.oz.)) - (Remaining oil amount in the removed compressor and magnetic clutch) = (Oil amount to be removed from the new compressor when replacing)

NOTICE:

- **When checking the compressor oil level, follow the A/C system precautions.**
- **If a new compressor and magnetic clutch is installed without removing some oil remaining in the pipes of the vehicle, the oil amount will be too large. This prevents heat exchange in the refrigerant cycle and causes refrigerant failure.**
- **If the volume of oil remaining in the removed compressor and magnetic clutch is too small, check for oil leakage.**
- **Be sure to use ND-OIL 8 or equivalent for compressor oil.**

2. INSTALL COOLER COMPRESSOR ASSEMBLY


a. Install the cooler compressor with the 4 bolts.

Torque:
24.5 N*m{ 250 kgf*cm , 18 ft.*lbf }

HINT:

Tighten the bolts in the order shown in the illustration.

b. Connect the connector.

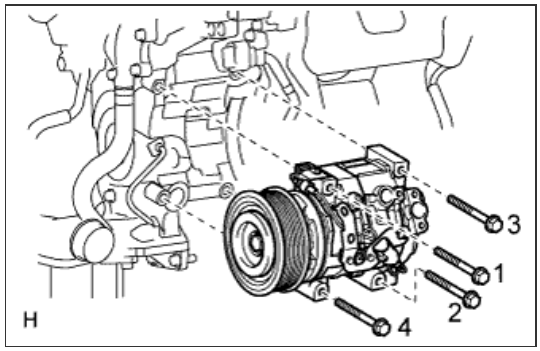

3. CONNECT SUCTION HOSE SUB-ASSEMBLY

a. Remove the attached vinyl tape from the cooler refrigerant suction hose.


b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the cooler compressor.

Compressor oil:
ND-OIL 8 or equivalent

c. Install the O-ring to the suction hose.

d. Connect the suction hose to the cooler compressor with the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

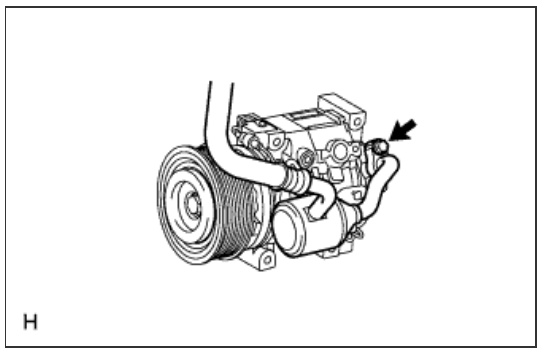

4. CONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

a. Remove the attached vinyl tape from the discharge hose.


.Sufficiently apply compressor oil to a new O-ring and the fitting surface of the cooler compressor.

Compressor oil:
ND-OIL 8 or e ivalent

c. Install the O-ring to the discharge hose.

d. Connect the discharge hose to the cooler compressor with the bolt.

Tor e:
. N m 100 kgf cm , 87 in. l f

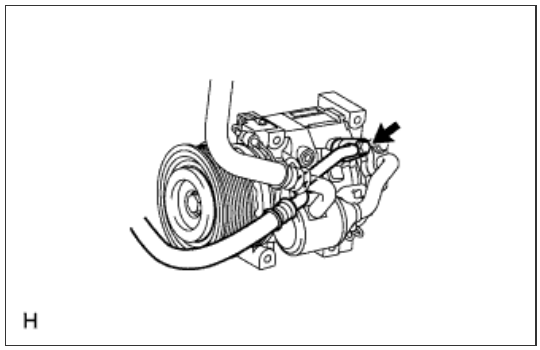


5. INSTALL NO. 2 AIR TU EASSEM L

a. Apply a light coat of washer fluid to a new O-ring, and install it to the No. 2 air tube.

.Install the No. 2 air tube with the bolt.

Tor ue:
21 N m 214 kgf cm , 15 ft. l f

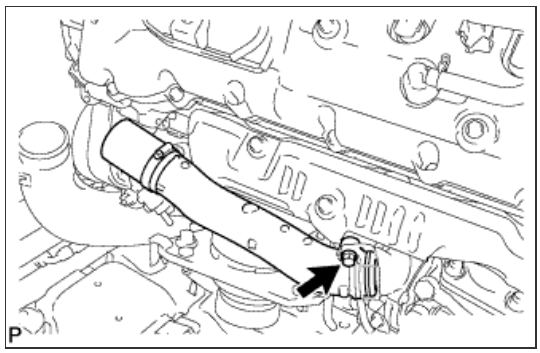

.NSTALL NO. 2 AIR CLEANER PIPE SU ASSEM L

a. Connect the No. 2 air cleaner pipe to the No. 2 intake air connector pipe.


.Connect the ventilation hose to the oil separator.

c. Install the pipe with the bolt.

Tor ue:
21 N m 214 kgf cm , 15 ft. l f

d. Tighten the hose clamp.

Tor ue:
6.3 N m 64 kgf cm , 56 in. l f

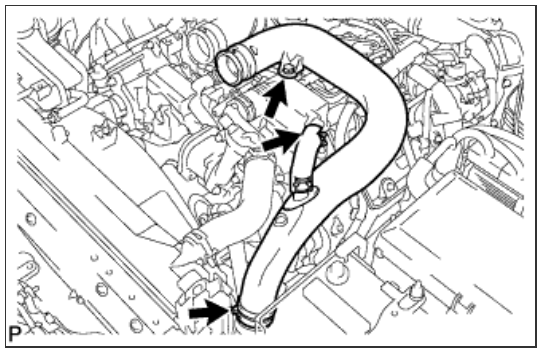

.NSTALL INTERCOOLER ASSEM L

a. Install the intercooler assembly (Click here).

8. INSTALL RADIATOR ASSEM L

a. Install the radiator assembly (Click here).

. C ARGE REFRIGERANT


SST
0 5-20010 (0 5-021 0, 0 5-02150, 0 5-020 0, 0 5-02110, 0 5-02010, 0 5-02050, 0 5-02060, 0 5-02070)

a. Perform vacuum purging using a vacuum pump.

.Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

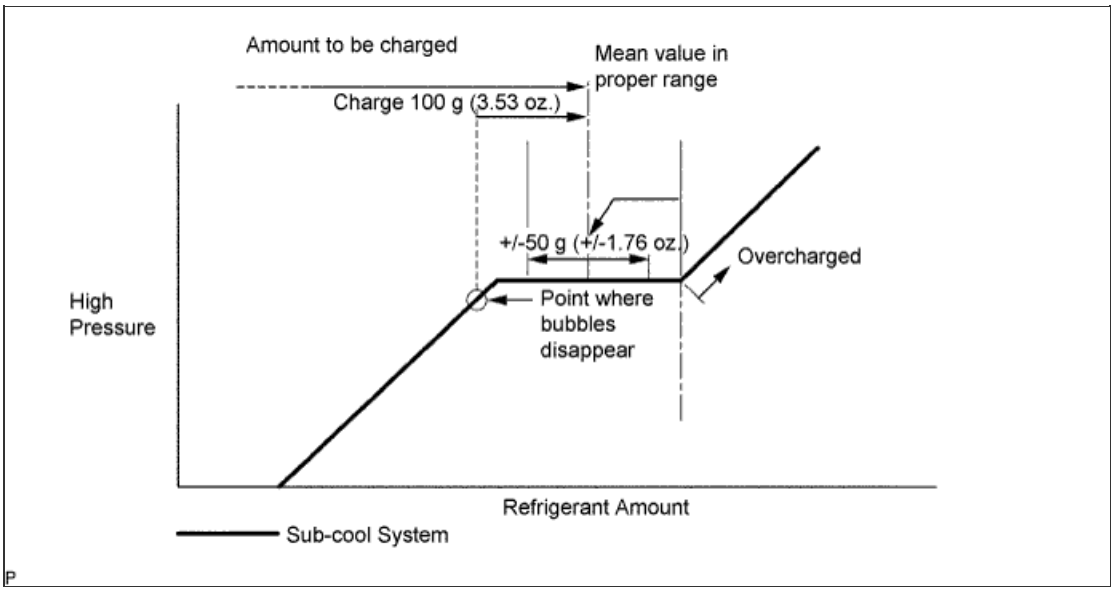

NOTICE:

- **Do not operate the cooler compressor efore charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to e charged after u es disappear. The refrigerant amount should e checked y measuring its uantity, and not with the sight glass.**

10. WARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

11. C EC FOR REFRIGERANT GAS LEAK

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


.Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).


c. Using a halogen leak detector, check the refrigerant line for leakage.


d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

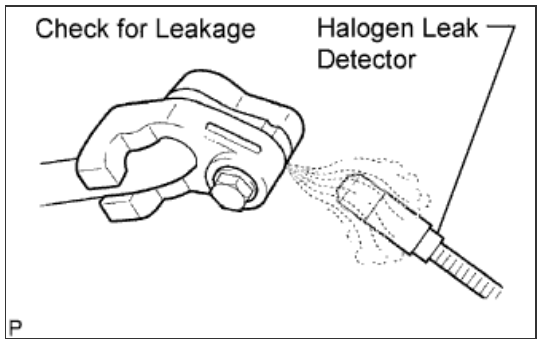

for Preparation Click here

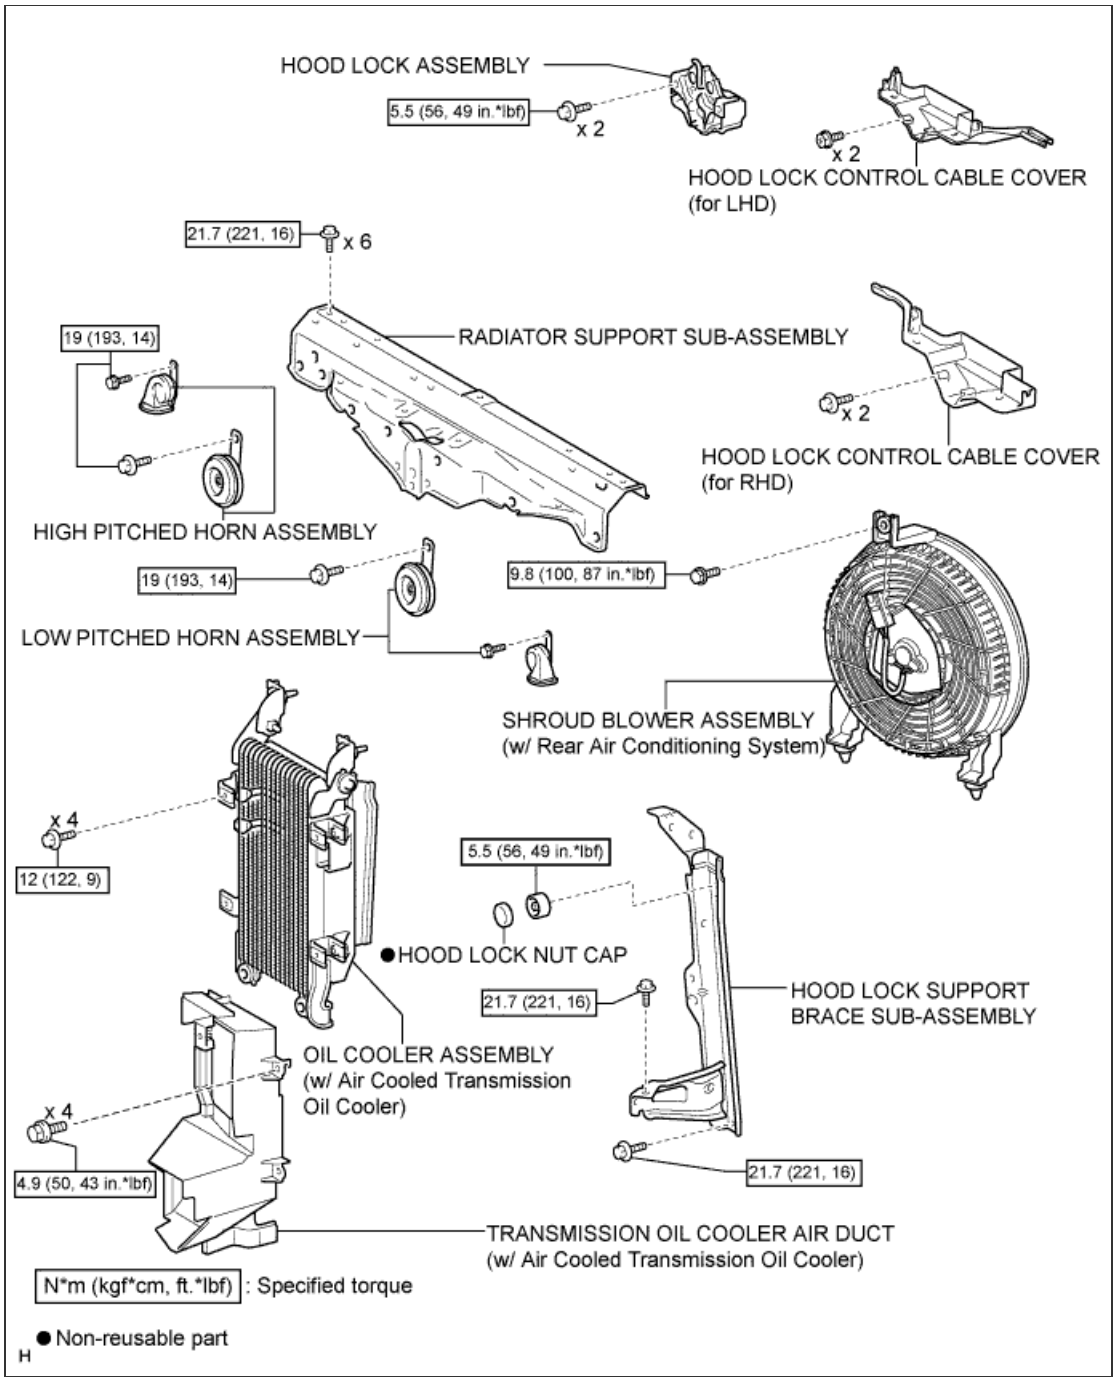

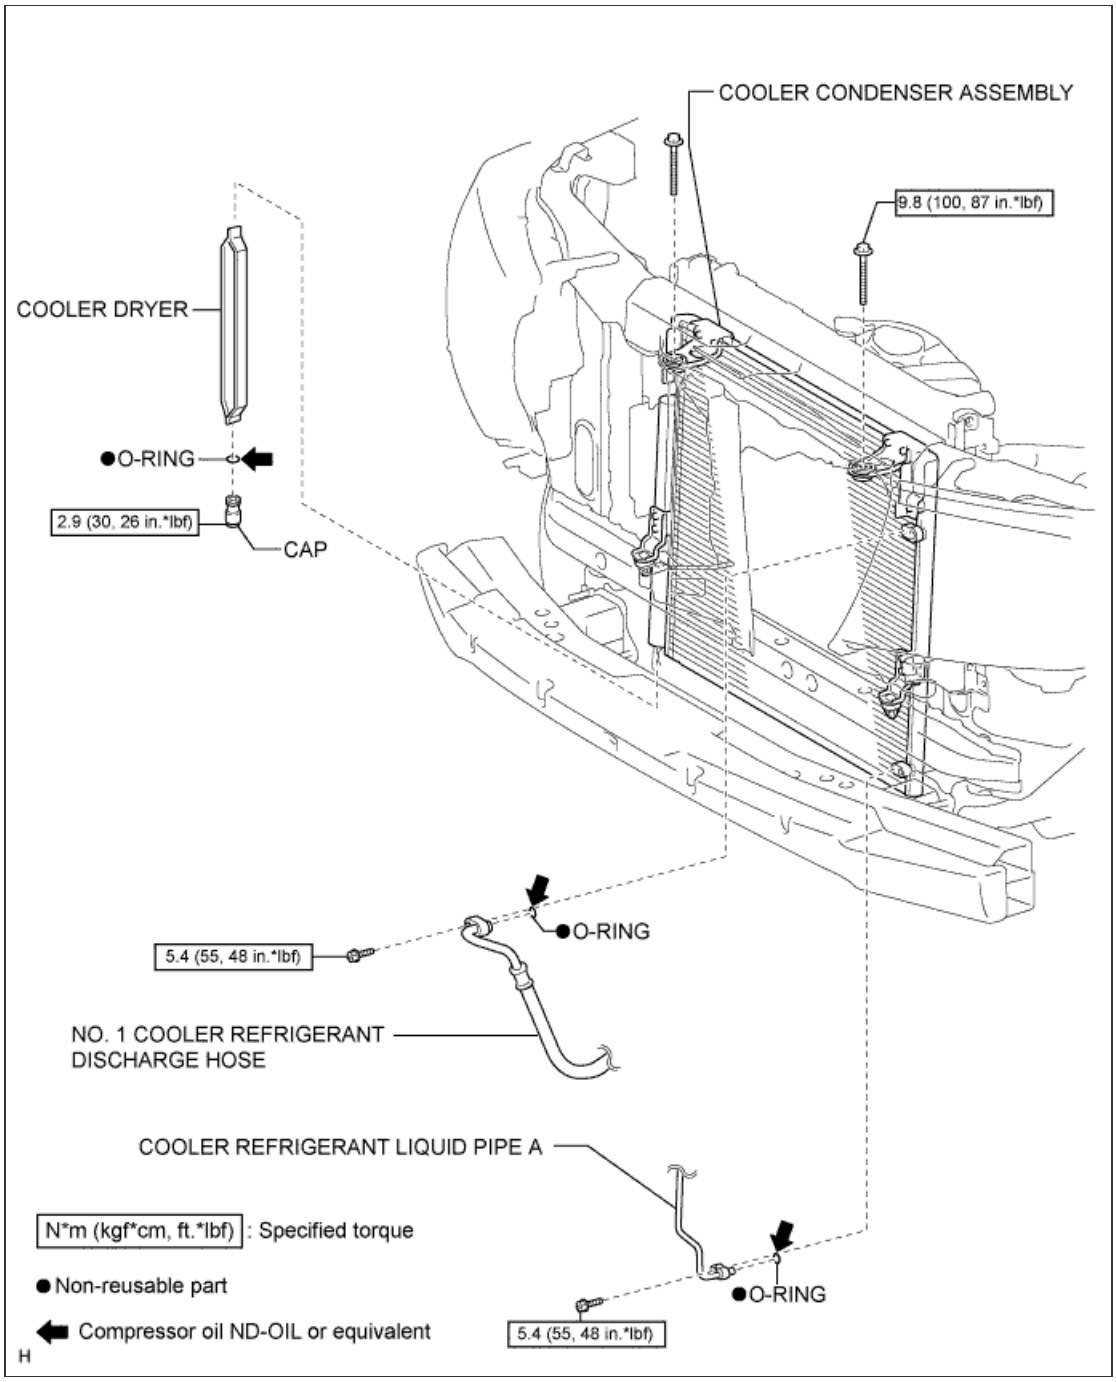
COOLER CONDENSER ASSEMBLY
9.8 (100, 87 in.*lbf)
COOLER DRYER
●O-RING
2.9 (30, 26 in.*lbf)
CAP
●O-RING
5.4 (55, 48 in.*lbf)
NO. 1 COOLER REFRIGERANT DISCHARGE HOSE
COOLER REFRIGERANT LIQUID PIPE A
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
Compressor oil ND-OIL or equivalent
●O-RING
5.4 (55, 48 in.*lbf)
H

for Preparation Click here

1. INSPECT COOLER CONDENSER ASSEMBLY

a. If the fins of the cooler condenser are dirty, clean them with water. Dry the fins with compressed air.

NOTICE:

Do not damage the fins of the condenser.

b. If a fin of the cooler condenser is bent, straighten it using a screwdriver or pliers.

2. CHECK CONDENSER FOR LEAKAGE OF REFRIGERANT


a. Using a halogen leak detector, check the pipe joints for gas leakage.

b. If gas leakage is detected in a joint, check the torque of the joint.

for Preparation Click here

1. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

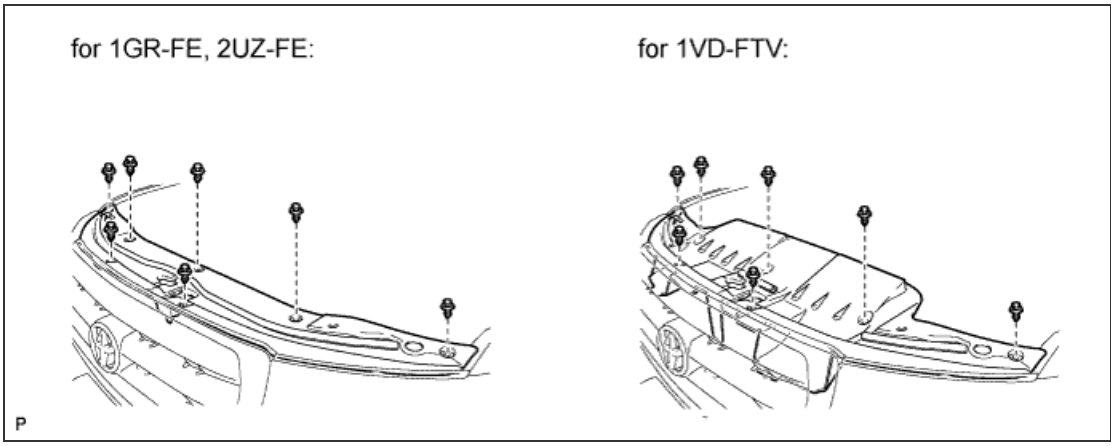

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

3. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


4. REMOVE FRONT BUMPER COVER

a. for Standard:
Remove the front bumper cover (Click here).

b. w/ Winch:
Remove the front bumper cover (Click here).

5. DISCONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

a. Remove the bolt and disconnect the discharge hose from the cooler condenser.

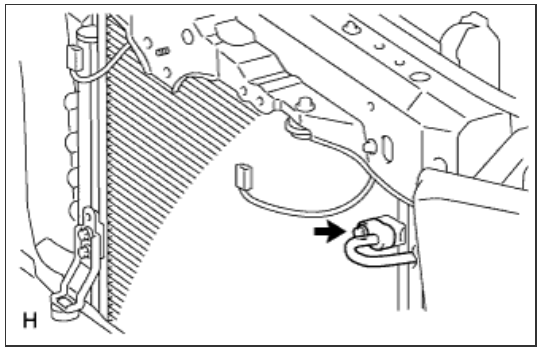

NOTICE:

- **When removing the bolt, do not allow any tools to contact the pipe.**
- **When removing the bolt, hold a part of the pipe near the connector.**


b. Remove O-ring from the discharge hose.

NOTICE:

Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.

6. DISCONNECT COOLER REFRIGERANT LIQUID PIPE A

a. Remove the 2 bolts and disconnect the liquid pipe A from the cooler condenser.

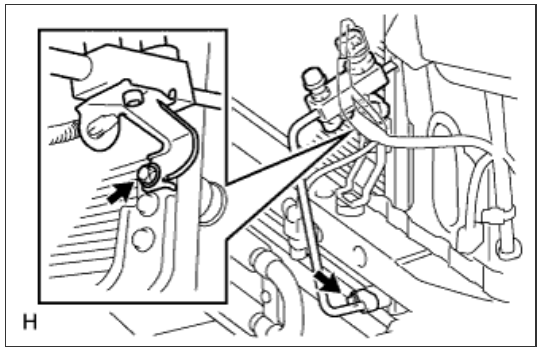

NOTICE:

- **When removing the bolt, do not allow any tools to contact the pipe.**
- **When removing the bolt, hold a part of the pipe near the connector.**

b. Remove O-ring from the liquid pipe A.


NOTICE:

Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.

7. REMOVE HIGH PITCHED HORN ASSEMBLY

a. Remove the bolt and horn.


b. Disconnect the horn connector.

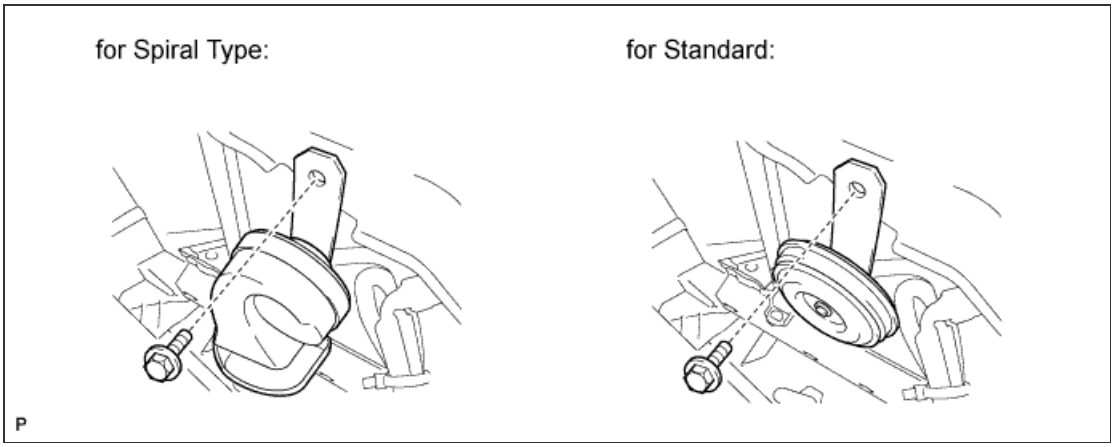

8. REMOVE LOW PITCHED HORN ASSEMBLY

a. Remove the bolt and horn.


b. Disconnect the horn connector.

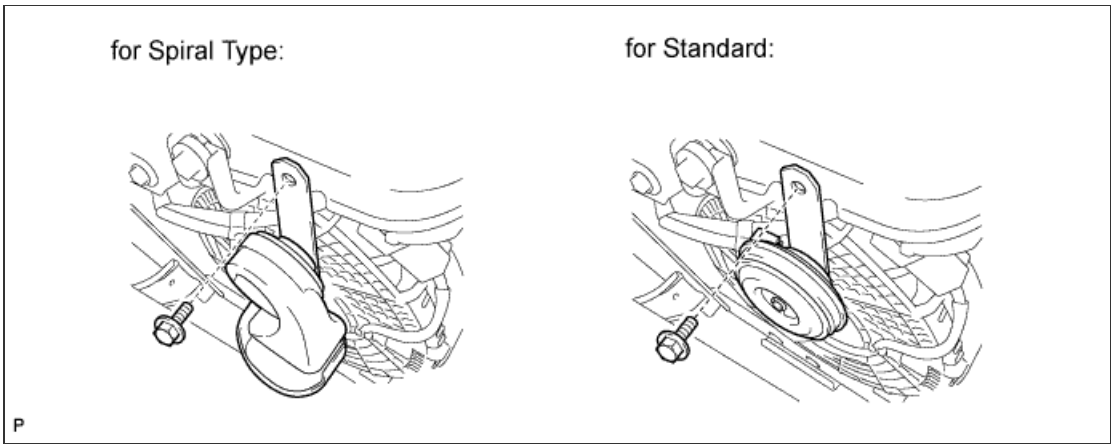

9. REMOVE SHROUD BLOWER ASSEMBLY (w/ Rear Air Conditioning System)


a. Disconnect the connector.

b. Remove the bolt and shroud blower as shown in the illustration.

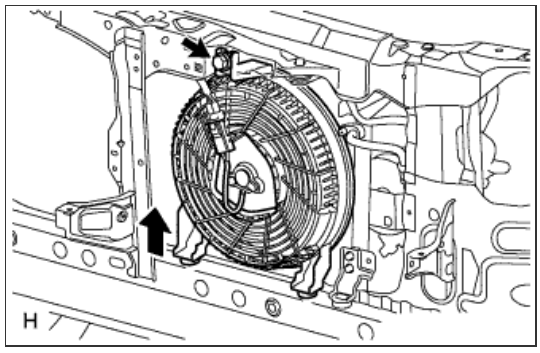


10. REMOVE TRANSMISSION OIL COOLER AIR DUCT (w/ Air Cooled Transmission Oil Cooler)

a. Remove the 4 bolts and transmission oil cooler air duct.

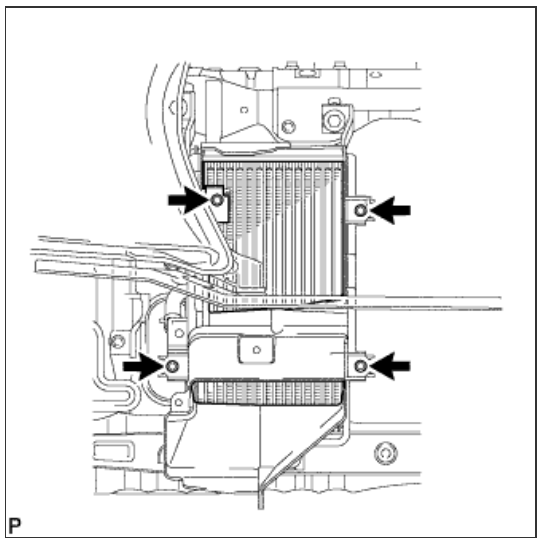

11. REMOVE OIL COOLER ASSEMBLY (w/ Air Cooled Transmission Oil Cooler)


a. Remove the 4 bolts and oil cooler.

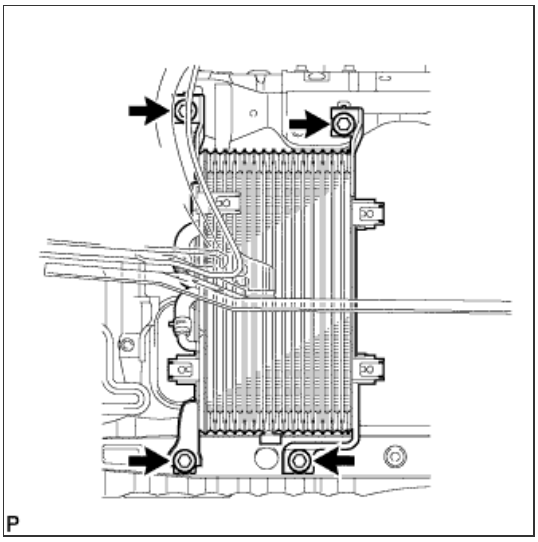

12. REMOVE HOOD LOCK SUPPORT BRACE SUB-ASSEMBLY

a. Remove the hood lock nut cap.


b. Remove the 3 bolts, nut and brace.

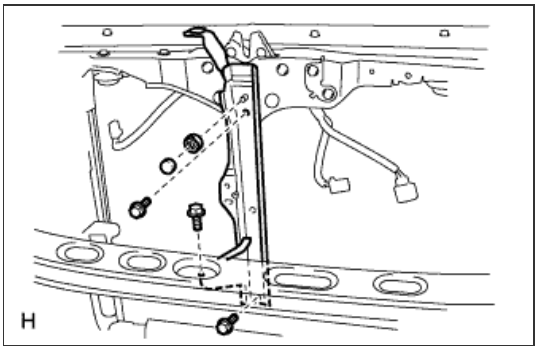

13. REMOVE HOOD LOCK CONTROL CABLE COVER

a. Remove the 3 screws.

b. Detach the claw and remove the cable cover.

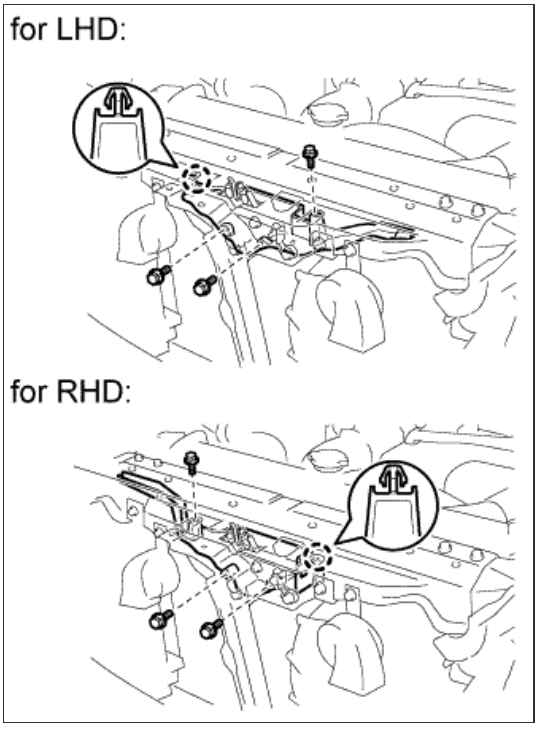


14. REMOVE HOOD LOCK ASSEMBLY


a. Remove the 2 bolts and nut.

b. Remove the hood lock.

c. Disconnect the connector.

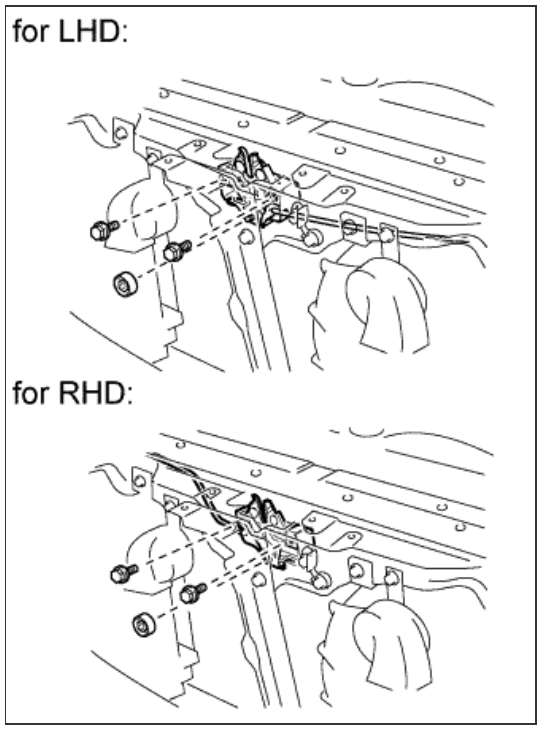


d. Disconnect the hood lock control cable.

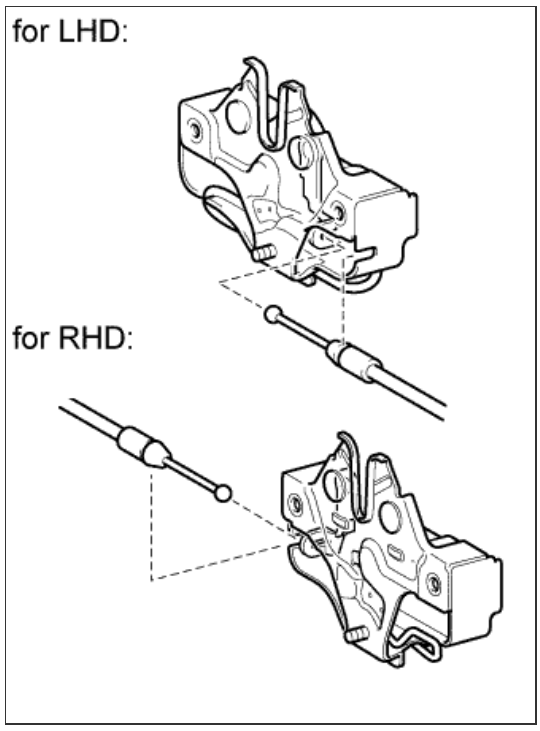


15. REMOVE RADIATOR SUPPORT SUB-ASSEMBLY

a. Remove the 8 bolts and radiator support.

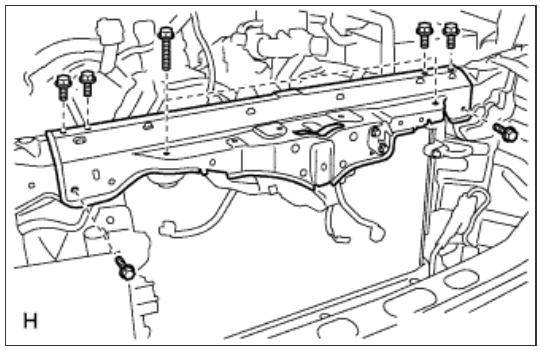


16. REMOVE COOLER CONDENSER ASSEMBLY

a. Remove the cooler condenser as shown in the illustration.

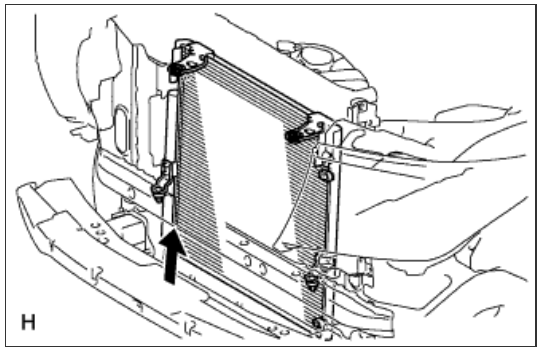


17. REMOVE COOLER DRYER


a. Using a 14 mm socket hexagon wrench, remove the cap from the modulator.

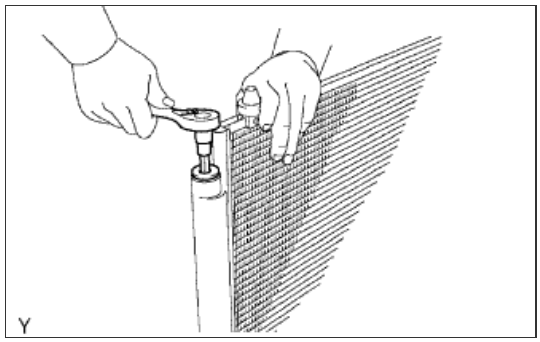

b. Remove O-ring from the cap.

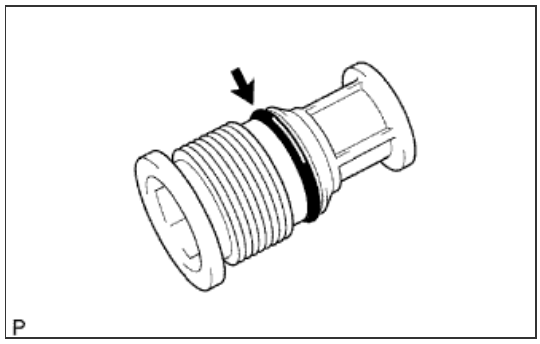


c. Using pliers, remove the cooler dryer.

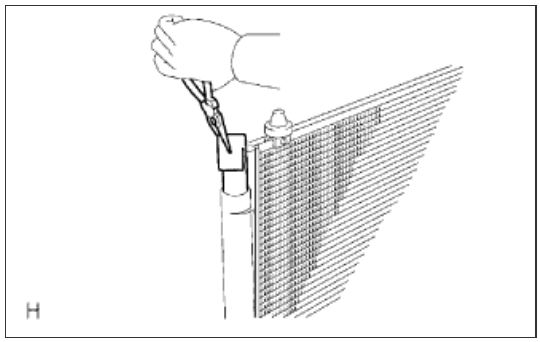

for Preparation Click here

1. REMOVE UPPER RADIATOR SUPPORT SEAL

a. Remove the 7 clips and radiator support seal.

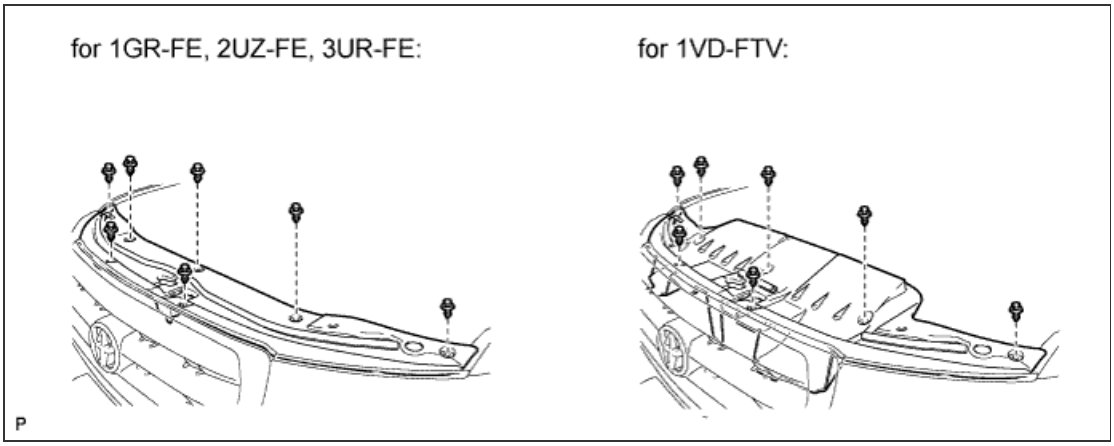

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

3. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


4. REMOVE FRONT BUMPER COVER

a. for Standard:
Remove the front bumper cover (Click here).

b. w/ Winch:
Remove the front bumper cover (Click here).

5. DISCONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

a. Remove the bolt and disconnect the discharge hose from the cooler condenser.

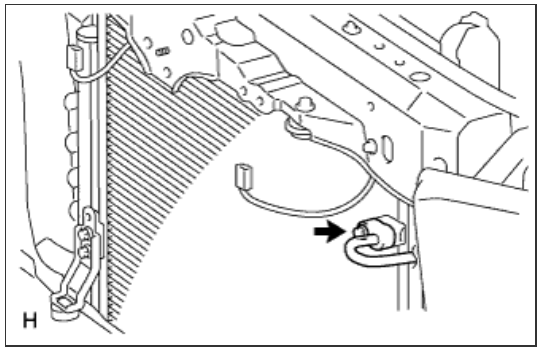

NOTICE:

- **When removing the bolt, do not allow any tools to contact the pipe.**
- **When removing the bolt, hold a part of the pipe near the connector.**


b. Remove O-ring from the discharge hose.

NOTICE:

Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.

6. DISCONNECT COOLER REFRIGERANT LIQUID PIPE A

a. Remove the 2 bolts and disconnect the liquid pipe A from the cooler condenser.

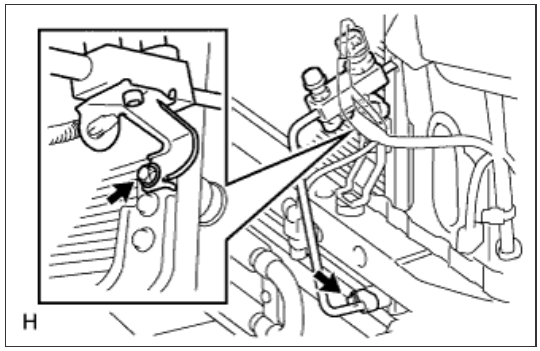

NOTICE:

- **When removing the bolt, do not allow any tools to contact the pipe.**
- **When removing the bolt, hold a part of the pipe near the connector.**

b. Remove O-ring from the liquid pipe A.


NOTICE:

Seal the openings of the disconnected parts using vinyl tape to prevent moisture and foreign matter from entering them.

7. REMOVE HIGH PITCHED HORN ASSEMBLY

a. Remove the bolt and horn.


b. Disconnect the horn connector.

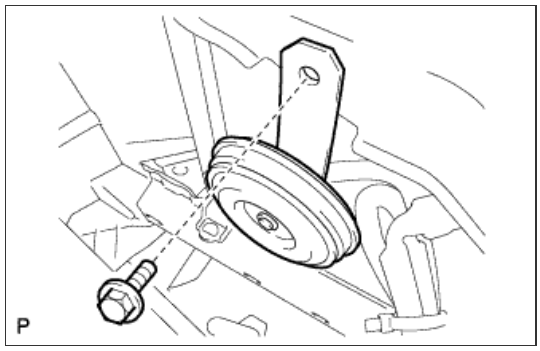

8. REMOVE LOW PITCHED HORN ASSEMBLY

a. Remove the bolt and horn.


b. Disconnect the horn connector.

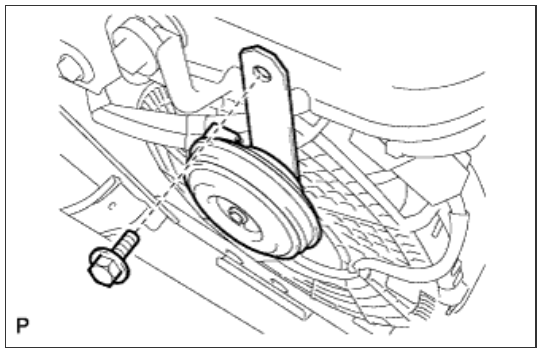

9. REMOVE SHROUD BLOWER ASSEMBLY (w/ Rear Air Conditioning System)


a. Disconnect the connector.

b. Remove the bolt and shroud blower as shown in the illustration.

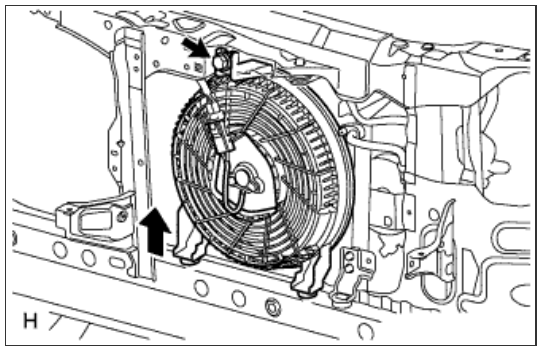


10. REMOVE TRANSMISSION OIL COOLER AIR DUCT (w/ Air Cooled Transmission Oil Cooler)

a. Remove the 4 bolts and transmission oil cooler air duct.

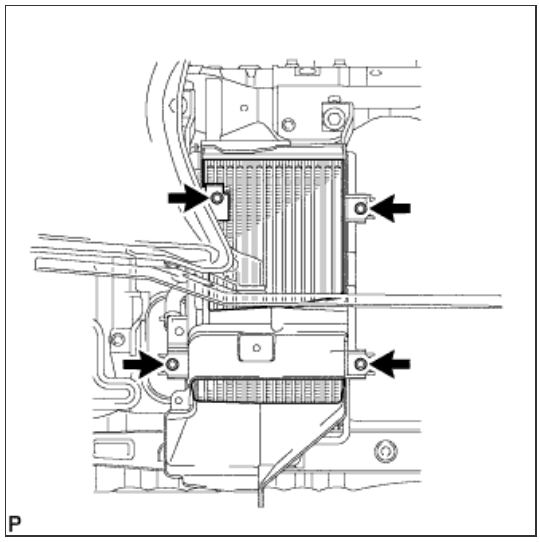

11. REMOVE OIL COOLER ASSEMBLY (w/ Air Cooled Transmission Oil Cooler)


a. Remove the 4 bolts and oil cooler.

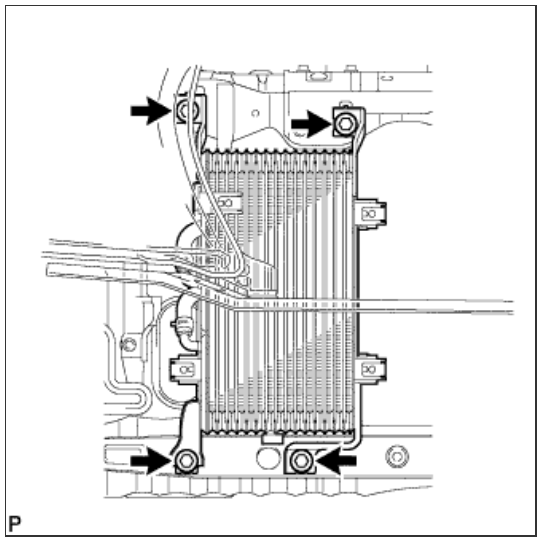

12. REMOVE HOOD LOCK SUPPORT BRACE SUB-ASSEMBLY

a. Remove the hood lock nut cap.


b. Remove the 3 bolts, nut and brace.

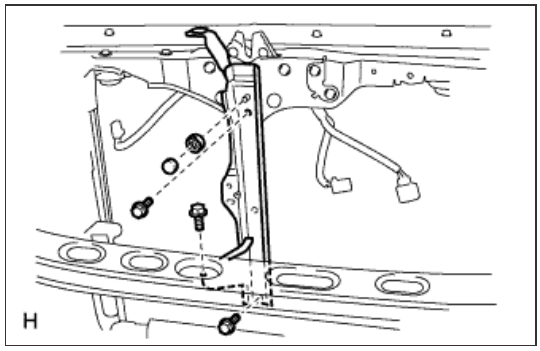

13. REMOVE HOOD LOCK CONTROL CABLE COVER

a. Remove the 3 screws.

b. Detach the claw and remove the cable cover.

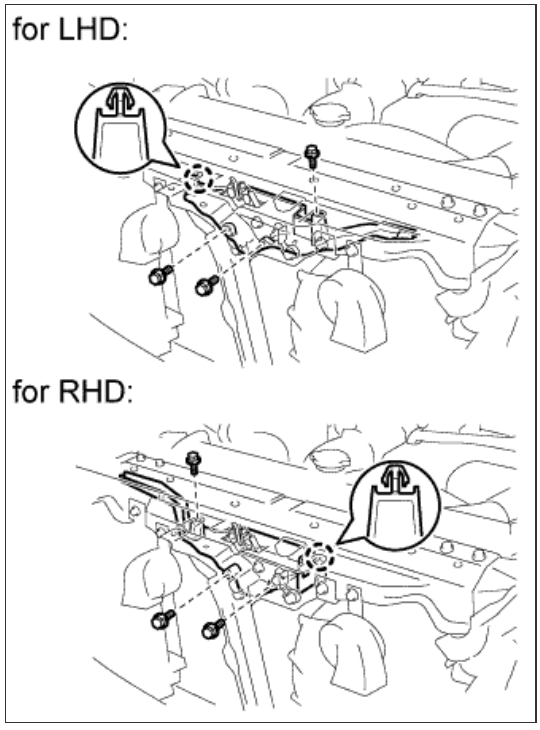


14. REMOVE HOOD LOCK ASSEMBLY


a. Remove the 2 bolts and nut.

b. Remove the hood lock.

c. Disconnect the connector.

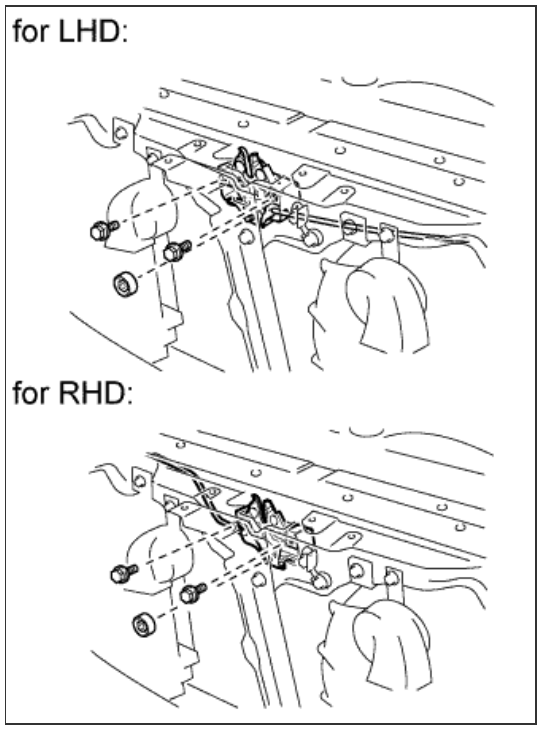


d. Disconnect the hood lock control cable.

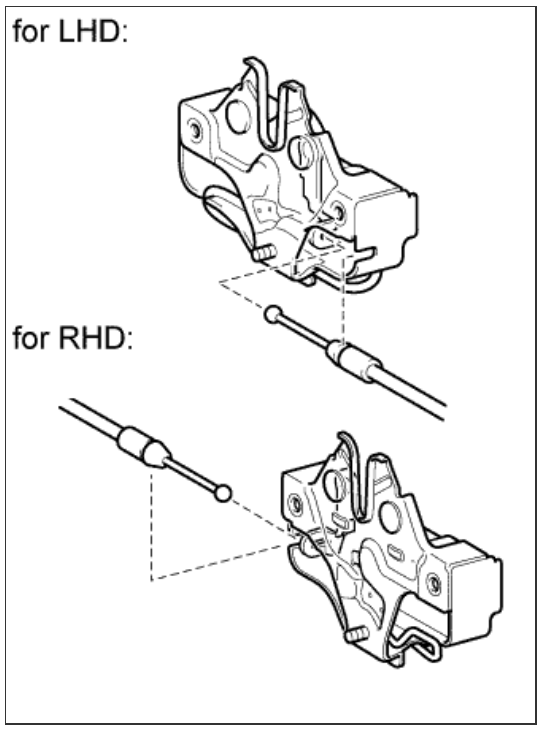


15. REMOVE RADIATOR SUPPORT SUB-ASSEMBLY

a. Remove the 8 bolts and radiator support.

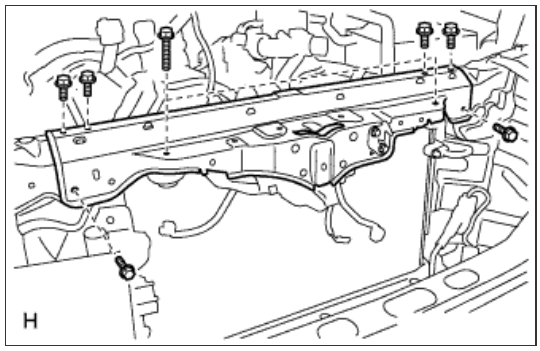


16. REMOVE COOLER CONDENSER ASSEMBLY

a. Remove the cooler condenser as shown in the illustration.

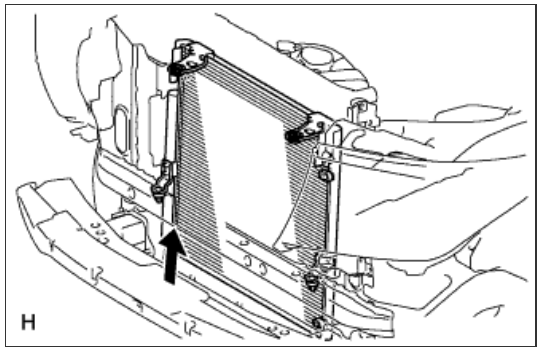


17. REMOVE COOLER DRYER


a. Using a 14 mm socket hexagon wrench, remove the cap from the modulator.

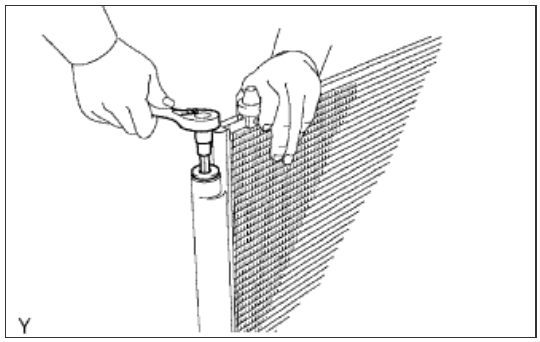

b. Remove O-ring from the cap.

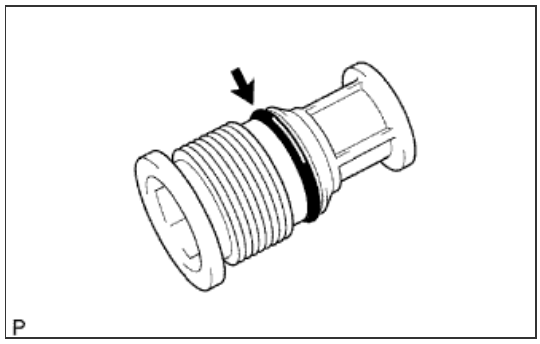


c. Using pliers, remove the cooler dryer.

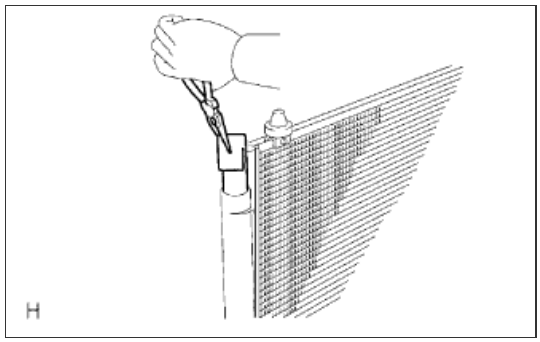

for Preparation [Click here]

1. INSTALL COOLER DRYER


a. Using pliers, install the cooler dryer.

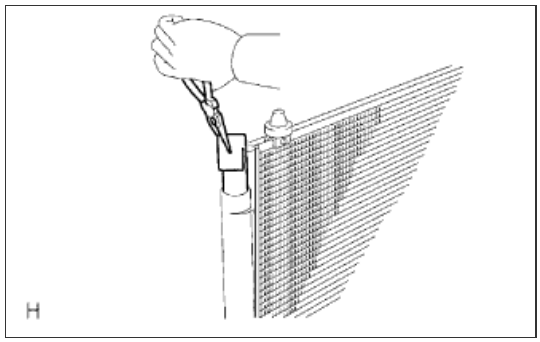

b. Apply a sufficient amount of compressor oil to the contact surfaces of a new O-ring and the cap.


Compressor oil:
ND-OIL 8 or equivalent

c. Install O-ring to the cap.

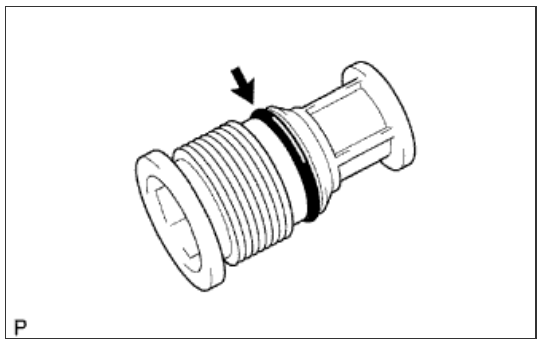


d. Using a 14 mm socket hexagon wrench, install the cap to the modulator.

Torque:
2.9 N*m{ 30 kgf*cm , 26 in.*lbf }

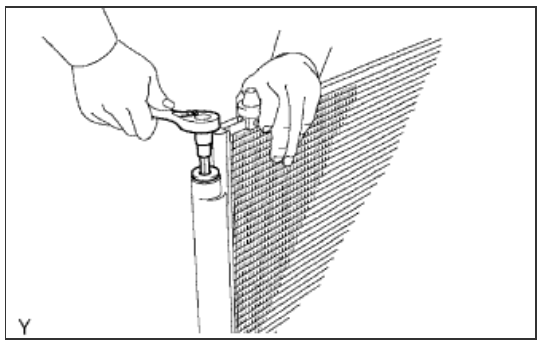

2. INSTALL COOLER CONDENSER ASSEMBLY


a. Install the cooler condenser as shown in the illustration.

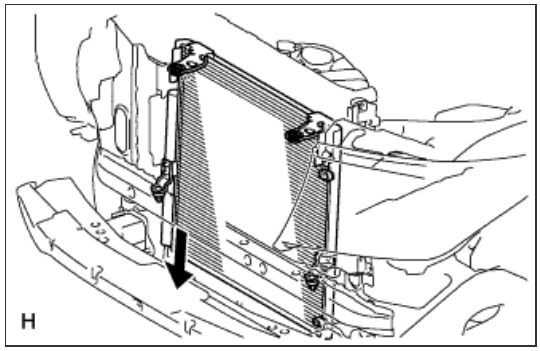

3. INSTALL RADIATOR SUPPORT SUB-ASSEMBLY


a. Install the radiator support with the 8 bolts.

Torque:
21.7 N*m{ 221 kgf*cm , 16 ft.*lbf } for bolt A
9.8 N*m{ 100 kgf*cm , 7 ft.*lbf } for bolt B

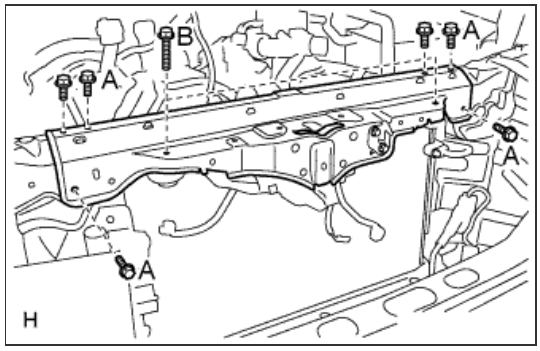


4. INSTALL HOOD LOCK ASSEMBLY

a. Apply MP grease to the sliding areas of the lock.

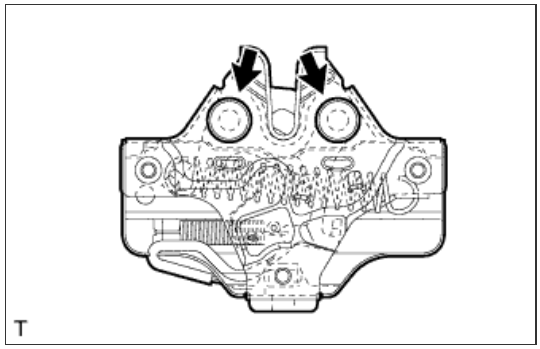

b. Connect the hood lock control cable.


c. Install the hood lock.

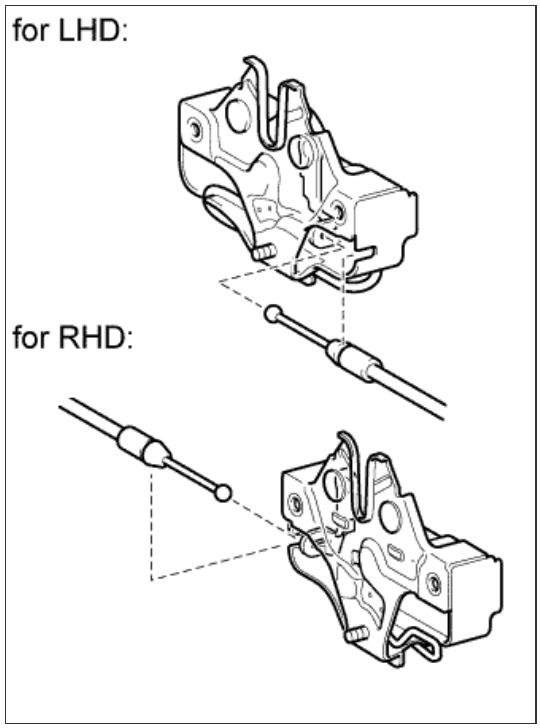

d. Install the 2 bolts and nut.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }


e. Connect the connector.

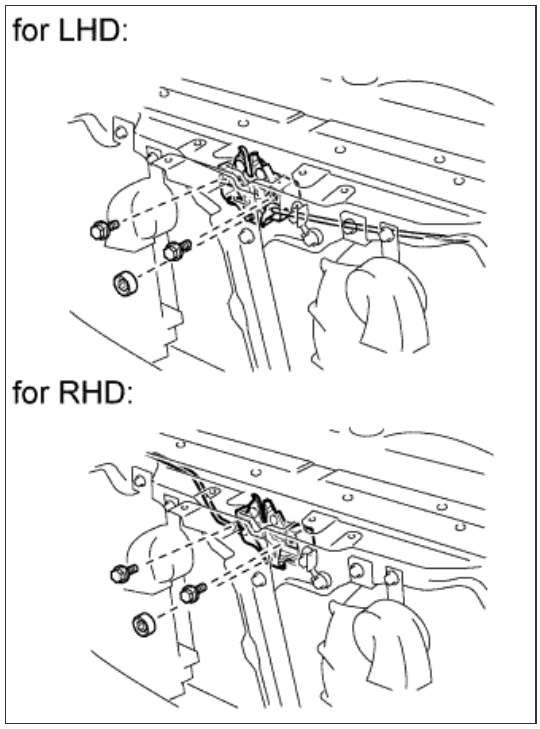

5. INSTALL HOOD LOCK CONTROL CABLE COVER

a. Attach the claw to install the cable cover.

b. Install the 3 screws.

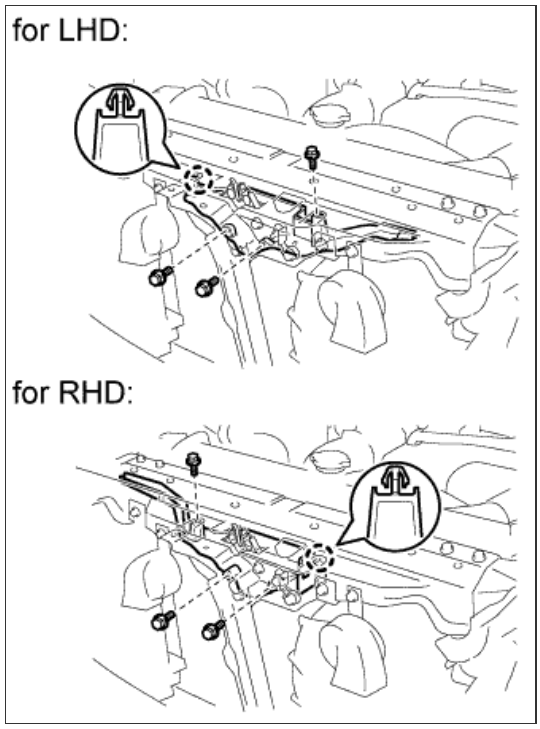


6. INSTALL HOOD LOCK SUPPORT BRACE SUB-ASSEMBLY

a. Install the brace with the 3 bolts and nut.

Torque:
21.7 N*m{ 221 kgf*cm , 16 ft.*lbf } for bolt
5.5 N*m{ 56 kgf*cm , 49 in.*lbf } for nut

b. Install the hood lock nut cap.

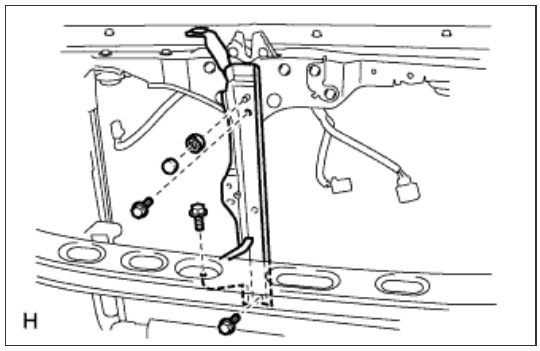

7. INSTALL OIL COOLER ASSEMBLY Air Cooled Transmission Oil Cooler


a. Temporarily install the oil cooler to the radiator support.

NOTICE:

Securely attach the 2 claws of the oil cooler into the hole of the radiator support.

b. Install the 4 bolts in the sequence shown in the illustration.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

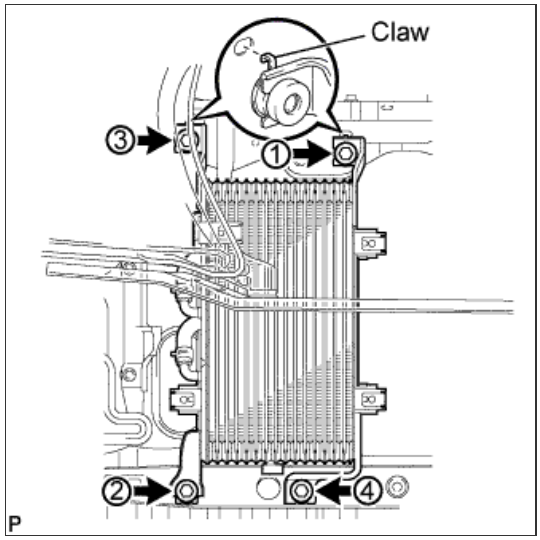

8. INSTALL TRANSMISSION OIL COOLER AIR DUCT Air Cooled Transmission Oil Cooler

a. Install the oil cooler air duct with the 4 bolts in the sequence shown in the illustration.

Torque:
4.9 N*m{ 50 kgf*cm , 43 in.*lbf }

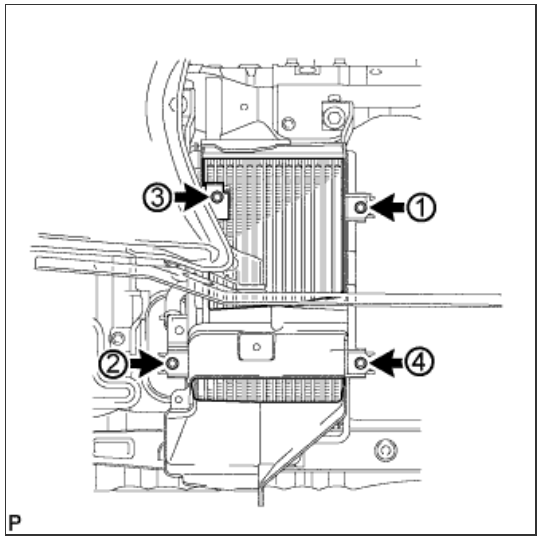


9. INSTALL SHROUD BLOWER ASSEMBLY (w/ Rear Air Conditioning System)

a. Install the shroud blower with the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 7 ft.*lbf }

b. Connect the connector.

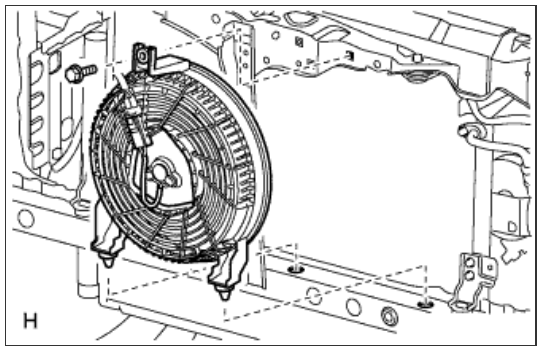


10. INSTALL LOW PITCHED HORN ASSEMBLY

a. Connect the horn connector.

b. Install the horn with the bolt.

Torque:
19 N*m{ 194 kgf*cm , 14 ft.*lbf }

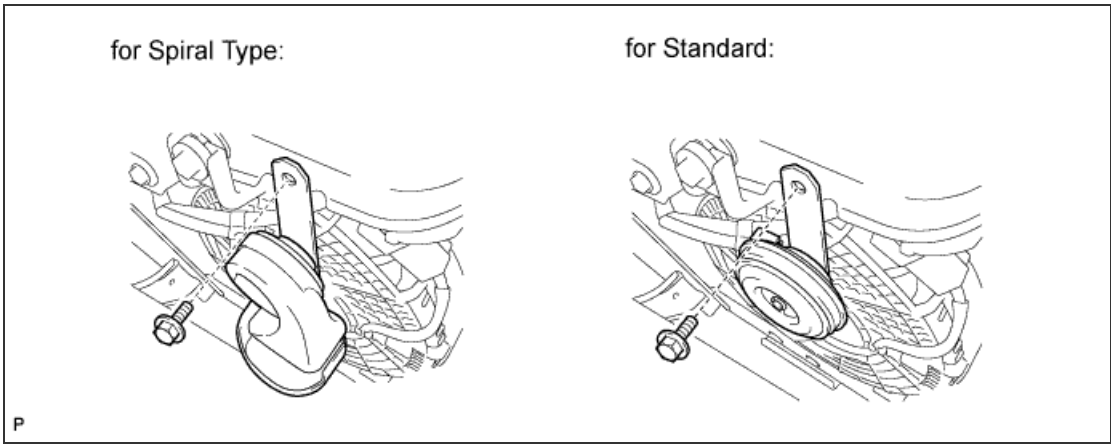


11. INSTALL HIGH PITCHED HORN ASSEMBLY


a. Connect the horn connector.

b. Install the horn with the bolt.

Torque:
19 N*m{ 194 kgf*cm , 14 ft.*lbf }

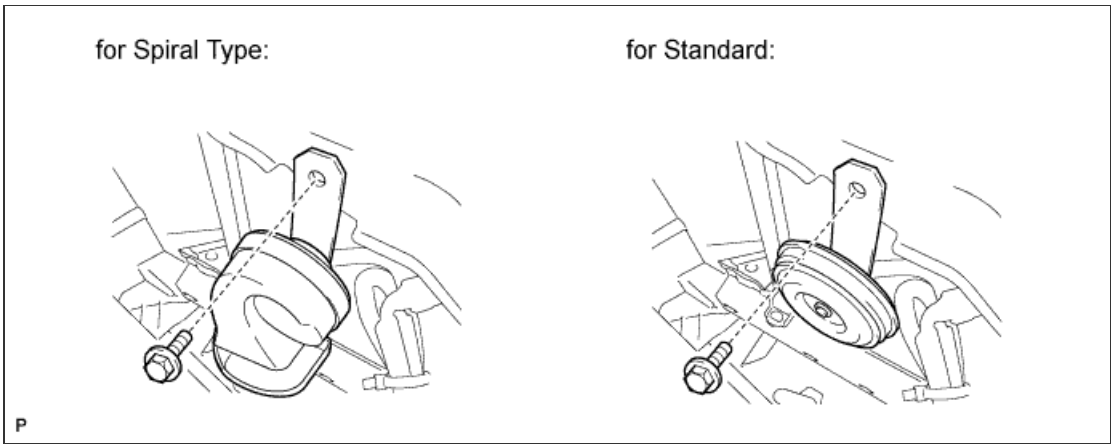

12. CONNECT COOLER RE RIGERANT LI UID PIPE A

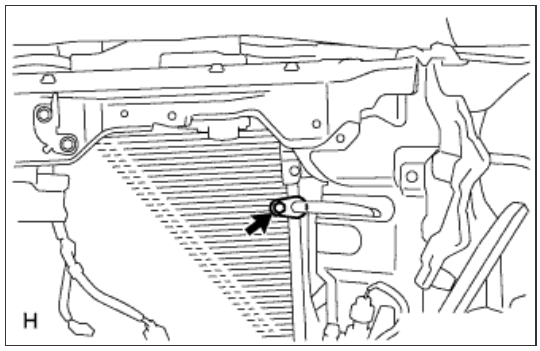

a. Remove the attached vinyl tape from the hose and the connecting part of the cooler condenser.

b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the pipe joint.

Compressor oil:
ND-OIL 8 or equivalent

c. Install O-ring on the liquid pipe A.


d. Connect the liquid pipe A to the cooler condenser with the bolt.

Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

NOTICE:

- **When tightening the bolt, do not allow any tools to contact the pipe.**
- **When tightening the bolt, hold a part of the pipe near the connector.**

13. CONNECT NO. 1 COOLER REFRIGERANT DISCHARGE HOSE

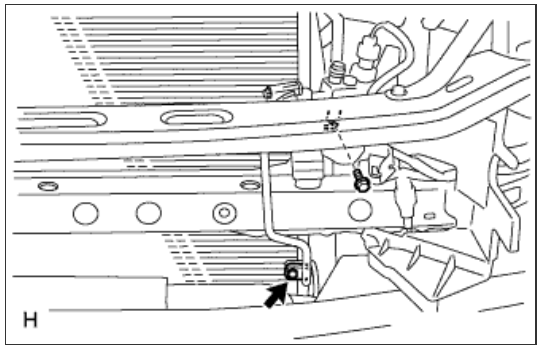

a. Remove the attached vinyl tape from the pipe and the connecting part of the cooler condenser.

b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or equivalent

c. Install O-ring on the discharge hose.

d. Connect the discharge hose to the cooler condenser with the 2 bolts.

Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

NOTICE:

- **When tightening the bolts, do not allow any tools to contact the pipe.**
- **When tightening the bolts, hold a part of the pipe near the connector.**

14. INSTALL FRONT BUMPER COVER

a. for Standard:

Install the front bumper cover (Click here).

b. w/ Winch:
Install the front bumper cover (Click here).

15. CONNECT CABLE TO NE ATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

16. C ARGE RE RIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

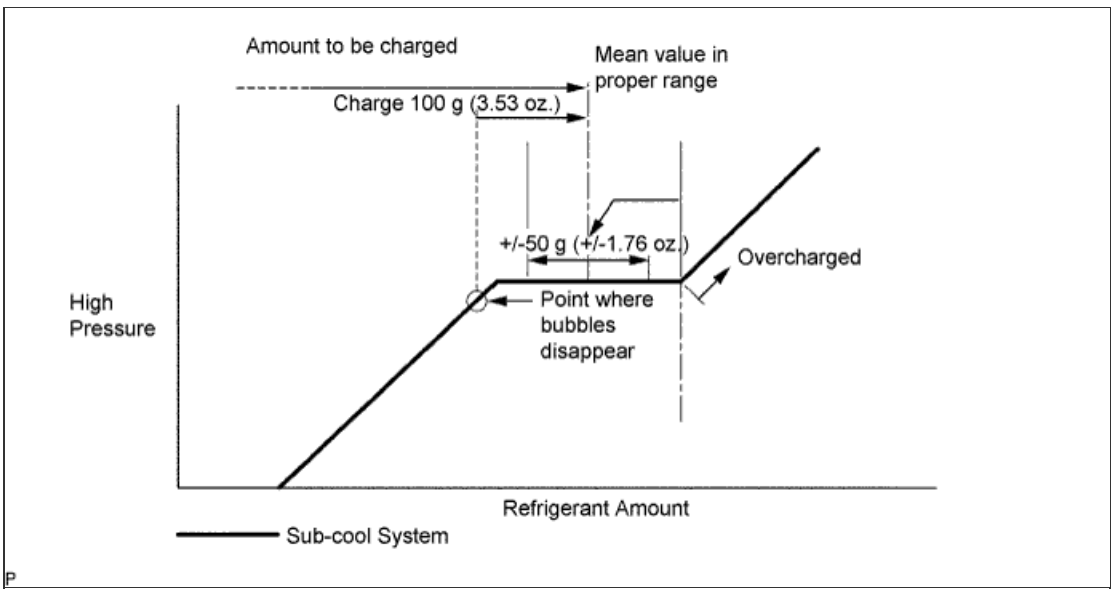

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

17. WARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

18. CHECK FOR REFRIGERANT GAS LEAK

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.

d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

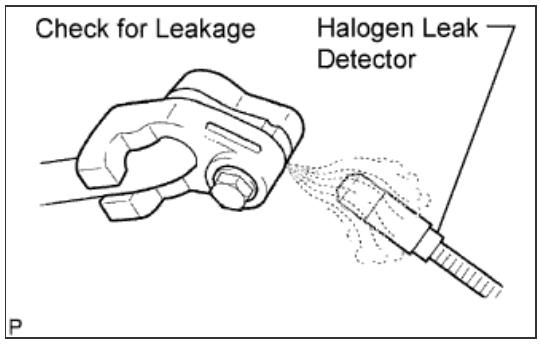


19. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

20. INSTALL UPPER RADIATOR SUPPORT SEAL


a. Install the radiator support seal with the 7 clips.

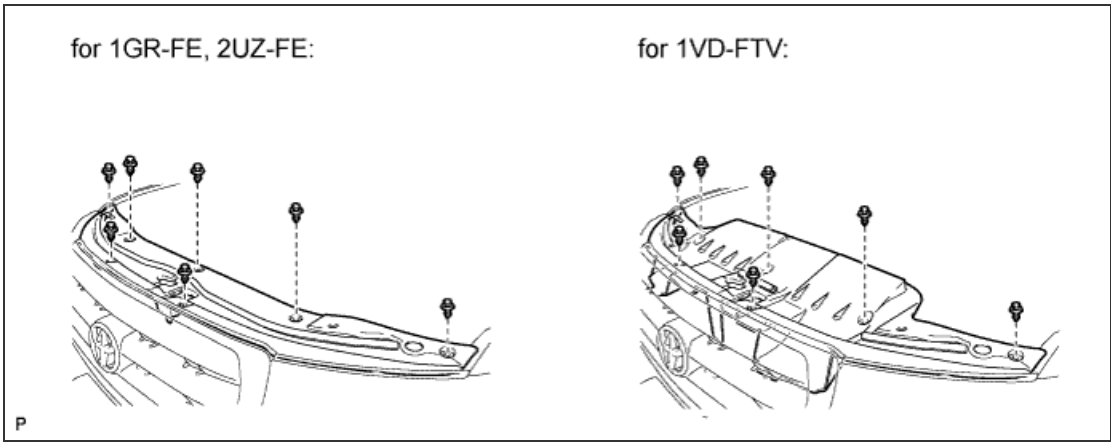

for Preparation [Click here]

1. INSTALL COOLER DRYER


a. Using pliers, install the cooler dryer.

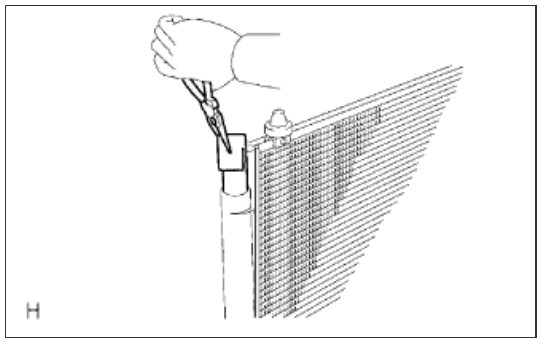

b. Apply a sufficient amount of compressor oil to the contact surfaces of a new O-ring and the cap.


Compressor oil:
ND-OIL 8 or equivalent

c. Install O-ring to the cap.

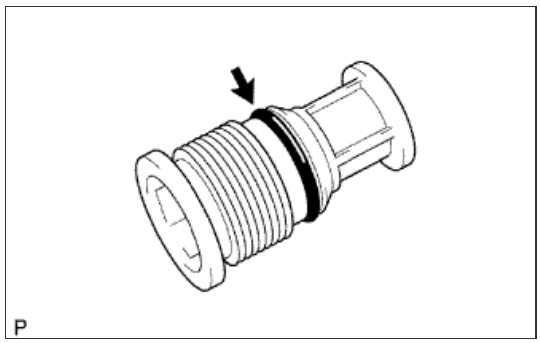


d. Using a 14 mm socket hexagon wrench, install the cap to the modulator.

Torque:
2.9 N*m{ 30 kgf*cm , 26 in.*lbf }

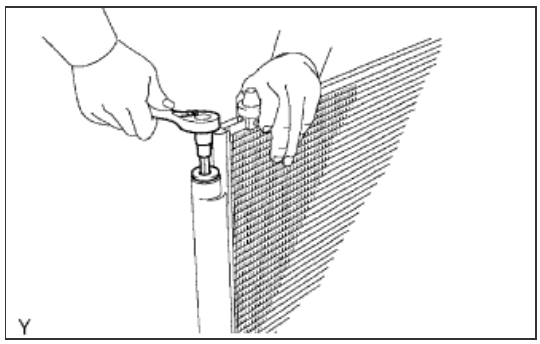

2. INSTALL COOLER CONDENSER ASSEMBLY


a. Install the cooler condenser as shown in the illustration.

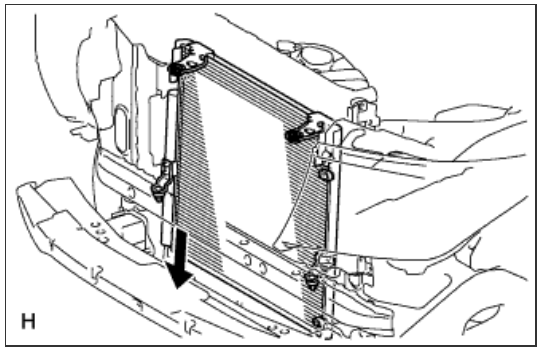

3. INSTALL RADIATOR SUPPORT SUB-ASSEMBLY


a. Install the radiator support with the 8 bolts.

Torque:
21.7 N*m{ 221 kgf*cm , 16 ft.*lbf } for bolt A
9.8 N*m{ 100 kgf*cm , 7 ft.*lbf } for bolt B

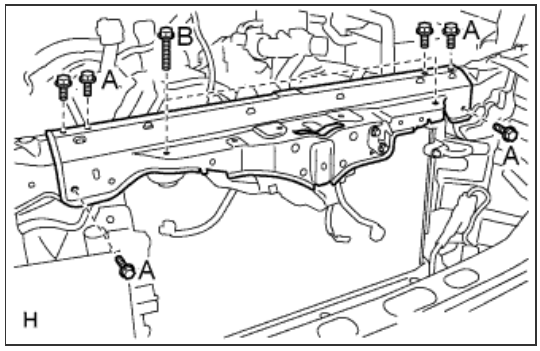


4. INSTALL HOOD LOCK ASSEMBLY

a. Apply MP grease to the sliding areas of the lock.

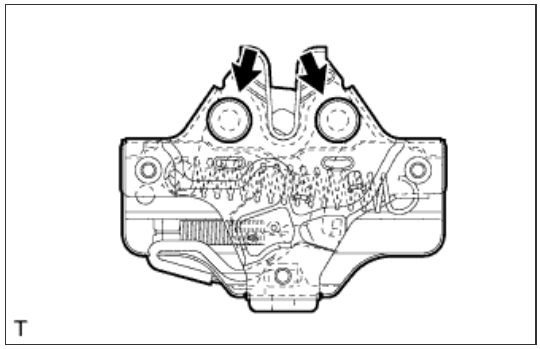

b. Connect the hood lock control cable.


c. Install the hood lock.

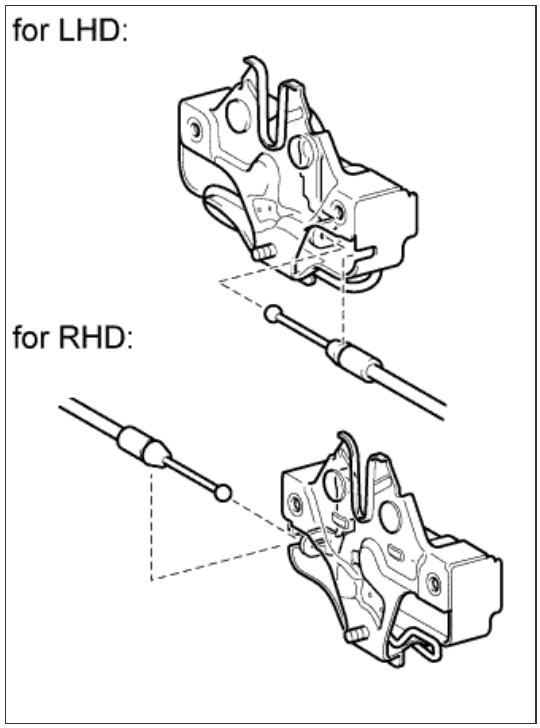

d. Install the 2 bolts and nut.

Torque:
5.5 N*m{ 56 kgf*cm , 49 in.*lbf }


e. Connect the connector.

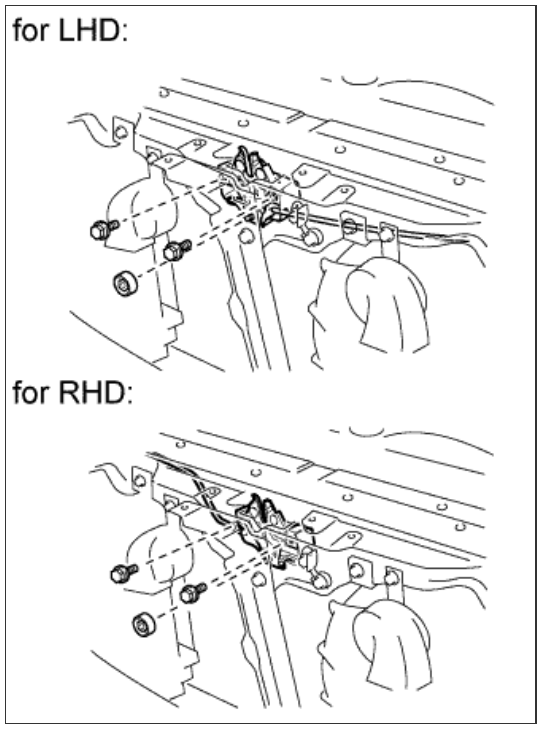

5. INSTALL HOOD LOCK CONTROL CABLE COVER

a. Attach the claw to install the cable cover.

b. Install the 3 screws.

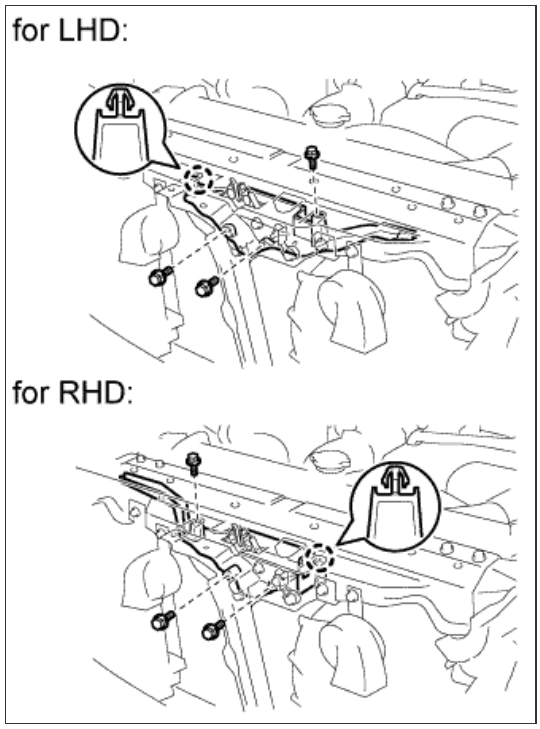


6. INSTALL HOOD LOCK SUPPORT BRACE SUB-ASSEMBLY

a. Install the brace with the 3 bolts and nut.

Torque:
21.7 N*m{ 221 kgf*cm , 16 ft.*lbf } for bolt
5.5 N*m{ 56 kgf*cm , 49 in.*lbf } for nut

b. Install the hood lock nut cap.

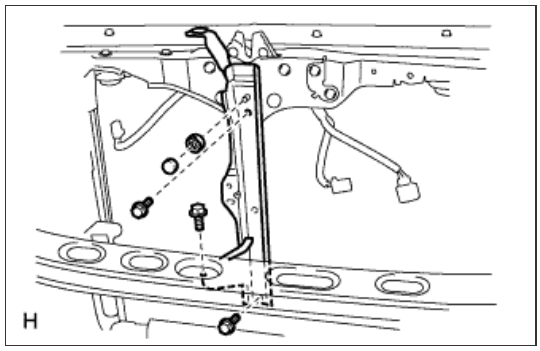

7. INSTALL OIL COOLER ASSEMBLY Air Cooled Transmission Oil Cooler


a. Temporarily install the oil cooler to the radiator support.

NOTICE:

Securely attach the 2 claws of the oil cooler into the hole of the radiator support.

b. Install the 4 bolts in the sequence shown in the illustration.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

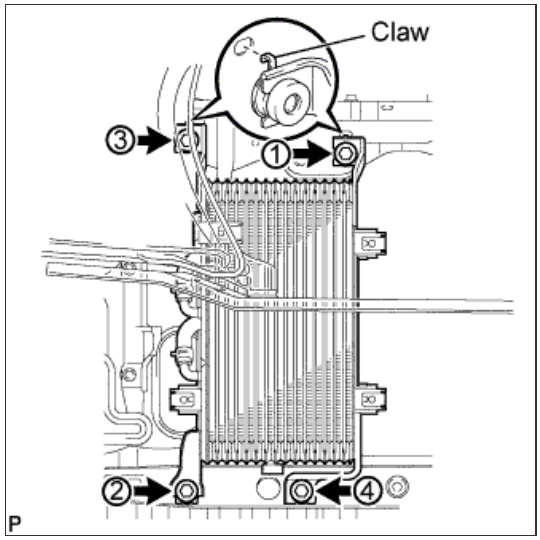

8. INSTALL TRANSMISSION OIL COOLER AIR DUCT Air Cooled Transmission Oil Cooler

a. Install the oil cooler air duct with the 4 bolts in the sequence shown in the illustration.

Torque:
4.9 N*m{ 50 kgf*cm , 43 in.*lbf }

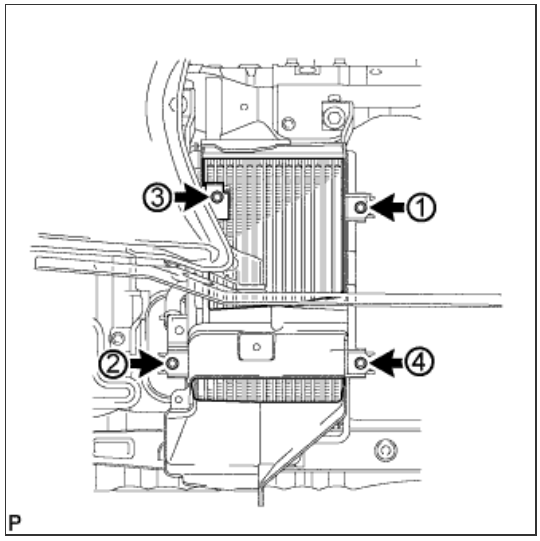


9. INSTALL SHROUD BLOWER ASSEMBLY (w/ Rear Air Conditioning System)

a. Install the shroud blower with the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 7 ft.*lbf }

b. Connect the connector.

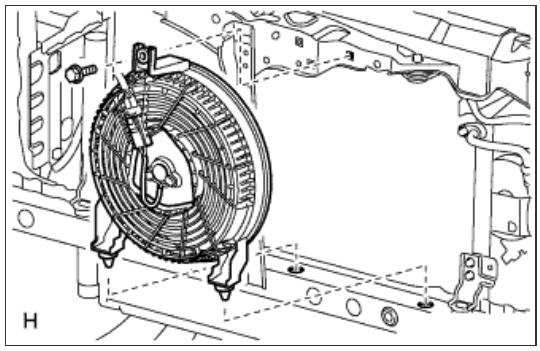


10. INSTALL LOW PITCHED HORN ASSEMBLY

a. Connect the horn connector.

b. Install the horn with the bolt.

Torque:
19 N*m{ 194 kgf*cm , 14 ft.*lbf }

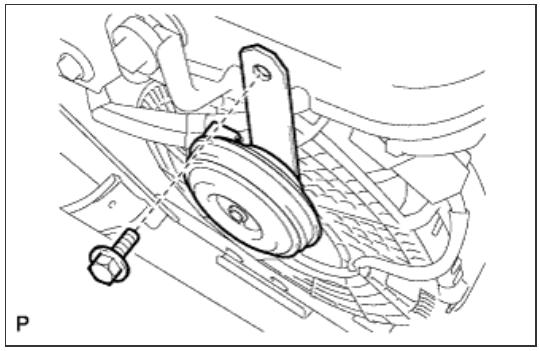


11. INSTALL HIGH PITCHED HORN ASSEMBLY

a. Connect the horn connector.

b. Install the horn with the bolt.

Torque:
19 N*m{ 194 kgf*cm , 14 ft.*lbf }

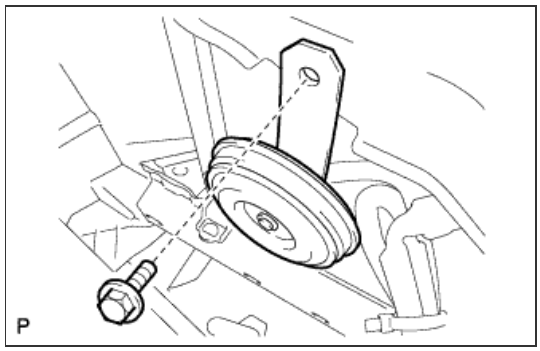

12. CONNECT COOLER REFRIGERANT LIQUID PIPE A

a. Remove the attached vinyl tape from the hose and the connecting part of the cooler condenser.


b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the pipe joint.

Compressor oil:
ND-OIL 8 or equivalent

c. Install O-ring on the liquid pipe A.

d. Connect the liquid pipe A to the cooler condenser with the bolt.


Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

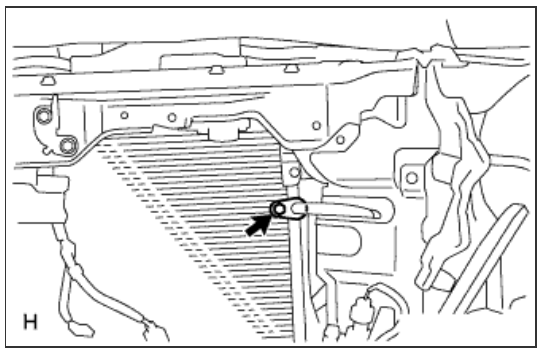

NOTICE:

- **hen tightening the bolt, do not allow an tools to contact the pipe.**
- **hen tightening the bolt, hold a part of the pipe near the connector.**

13. CONNECT NO. 1 COOLER RE IGERANT DISC ARGE SE

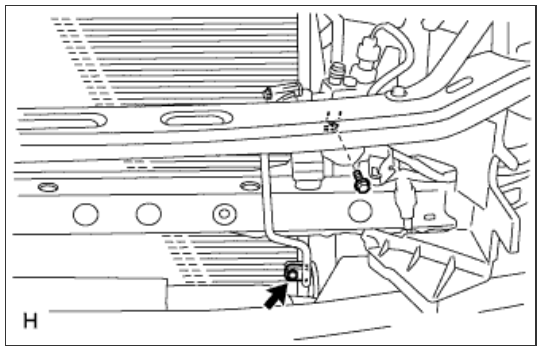

a. Remove the attached vinyl tape from the pipe and the connecting part of the cooler condenser.

b. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or equivalent

c. Install O-ring on the discharge hose.

d. Connect the discharge hose to the cooler condenser with the 2 bolts.

Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

NOTICE:

- **When tightening the bolts, do not allow any tools to contact the pipe.**
- **When tightening the bolts, hold a part of the pipe near the connector.**

14. INSTALL FRONT BUMPER COVER

a. for Standard:
Install the front bumper cover (Click here).

b. w/ Winch:
Install the front bumper cover (Click here).

15. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

16. CHARGE REFRIGERANT

SST

09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)


a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (R134a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	Refrigerant Charging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)

	w/ Rear Cooler	w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

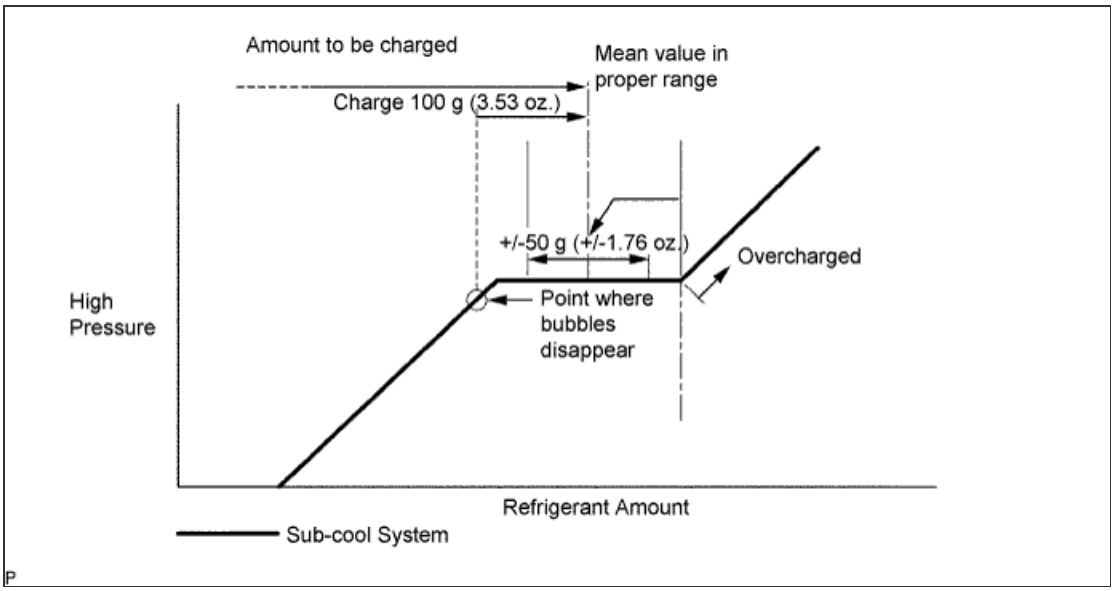

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properl without an refrigerant, and will overheat.**
- **Appro imatel 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

17. WARM UP ENGINE

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

18. CHECK FOR REFRIGERANT GAS LEAK

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- Repeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.

d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

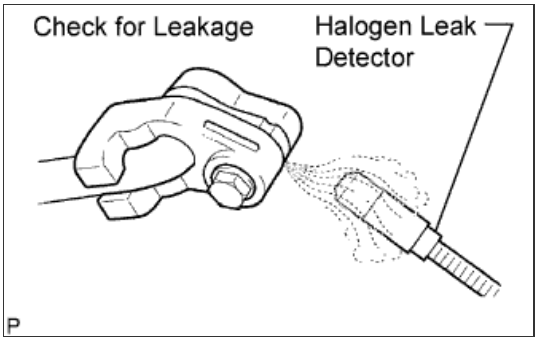


19. CHECK SRS WARNING LIGHT


a. Check the SRS warning light (Click here).

20. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Install the radiator support seal with the 7 clips.

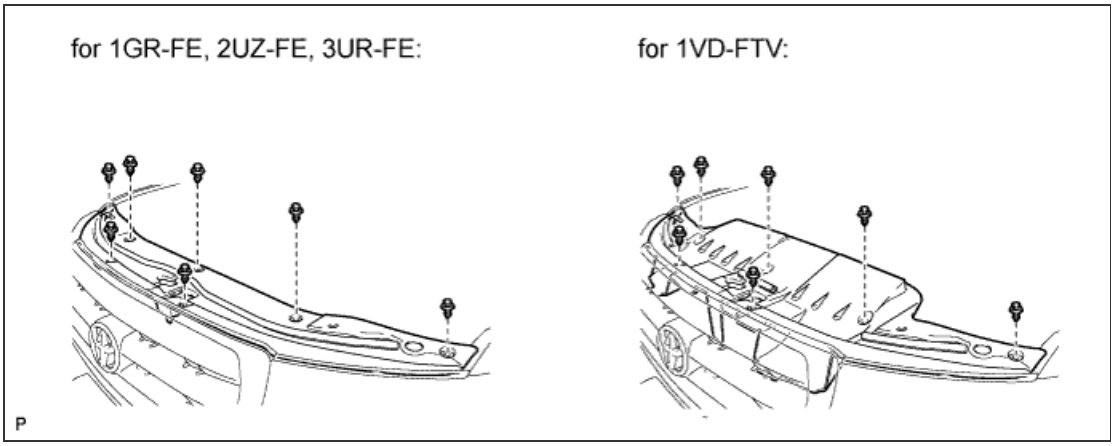

for Preparation Click here

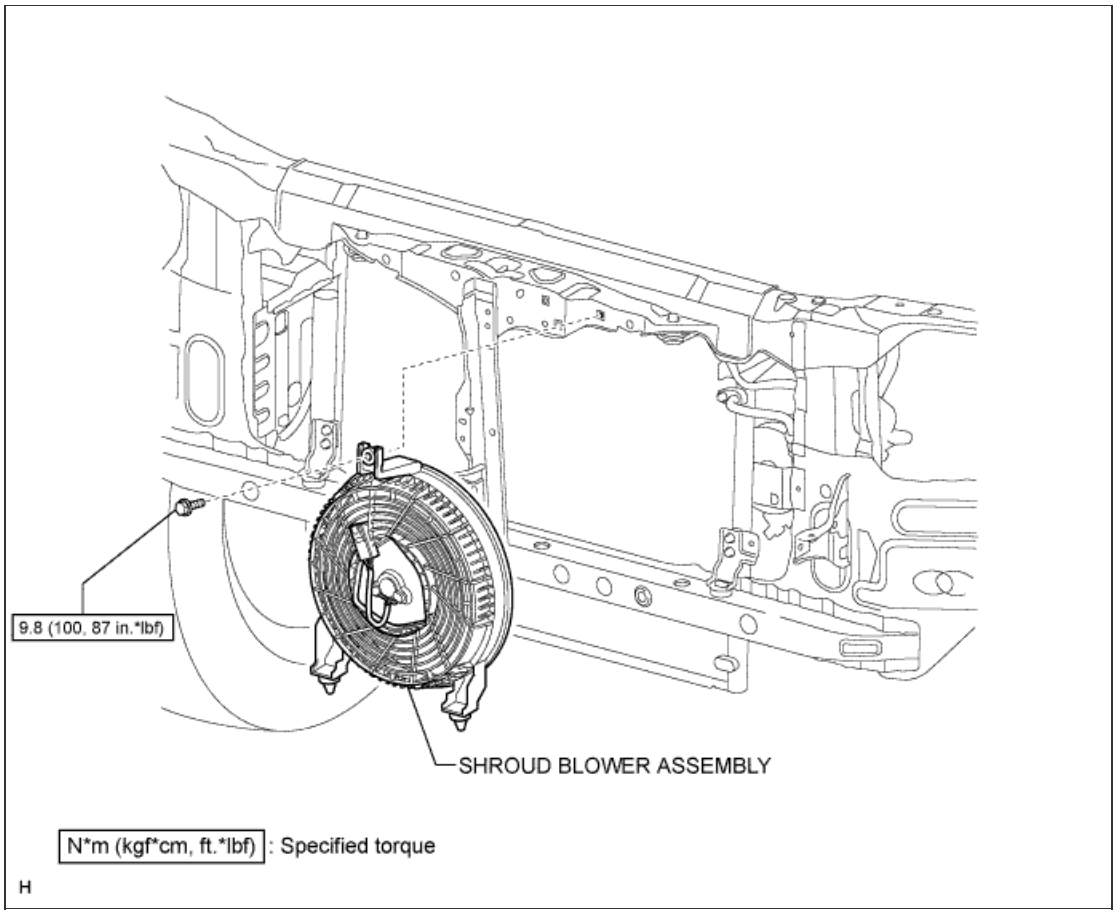

CONDENSER FAN > REMOVAL

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT BUMPER COVER


a. for Standard:
Remove the front bumper cover (Click here).

b. w/ Winch:
Remove the front bumper cover (Click here).

. REMOVE SHROUD BLOWER ASSEMBLY

a. Disconnect the connector.

b. Remove the bolt and shroud blower as shown in the illustration.

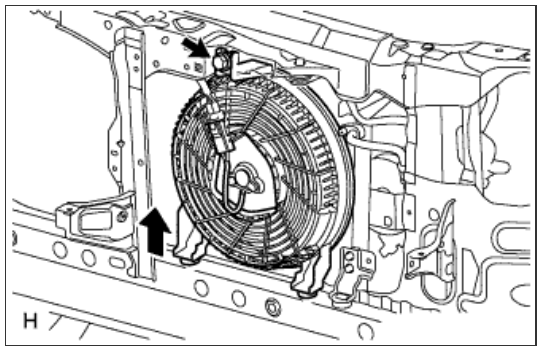

CONDENSER FAN > REMOVAL

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT BUMPER COVER


a. for Standard:
Remove the front bumper cover (Click here).

b. w/ Winch:
Remove the front bumper cover (Click here).

. REMOVE SHROUD BLOWER ASSEMBLY

a. Disconnect the connector.

b. Remove the bolt and shroud blower as shown in the illustration.

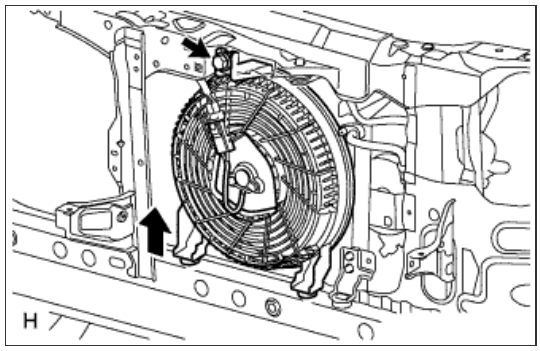

for Preparation Click here


1. INSPECT SHROUD BLOWER ASSEMBLY

a. Apply battery voltage and check operation of the horn, as shown in the table.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1 Battery negative (-) → Terminal 2	Motor operates smoothly

If the result is not as specified, replace the shroud blower assembly.

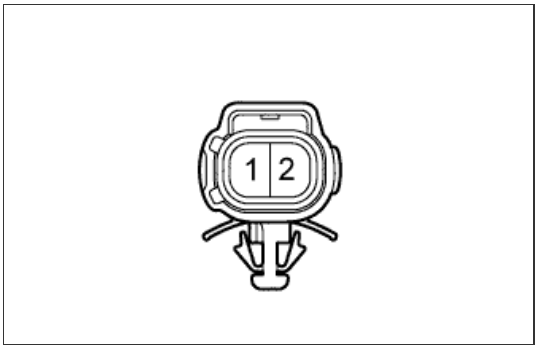


for Preparation Click here

1. INSTALL SHROUD BLOWER ASSEMBLY

a. Install the shroud blower with the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 7 ft.*lbf }

b. Connect the connector.

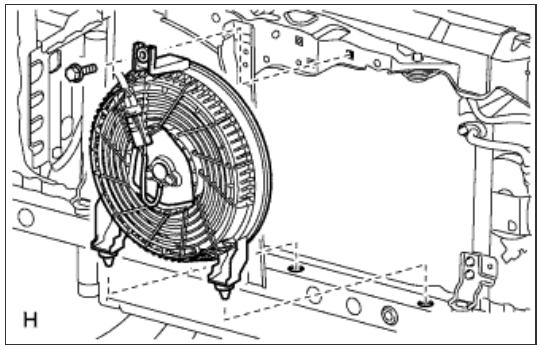

2. INSTALL FRONT BUMPER COVER

a. for Standard:
Install the front bumper cover (Click here).

b. w/ Winch:
Install the front bumper cover (Click here).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


for Preparation Click here

1. INSTALL SHROUD BLOWER ASSEMBLY

a. Install the shroud blower with the bolt.

Torque:
9.8 N*m{ 100 kgf*cm , 7 ft.*lbf }

b. Connect the connector.

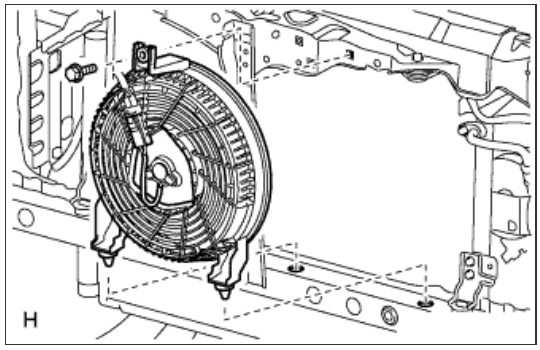

2. INSTALL FRONT BUMPER COVER

a. for Standard:
Install the front bumper cover (Click here).


b. w/ Winch:
Install the front bumper cover (Click here).

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

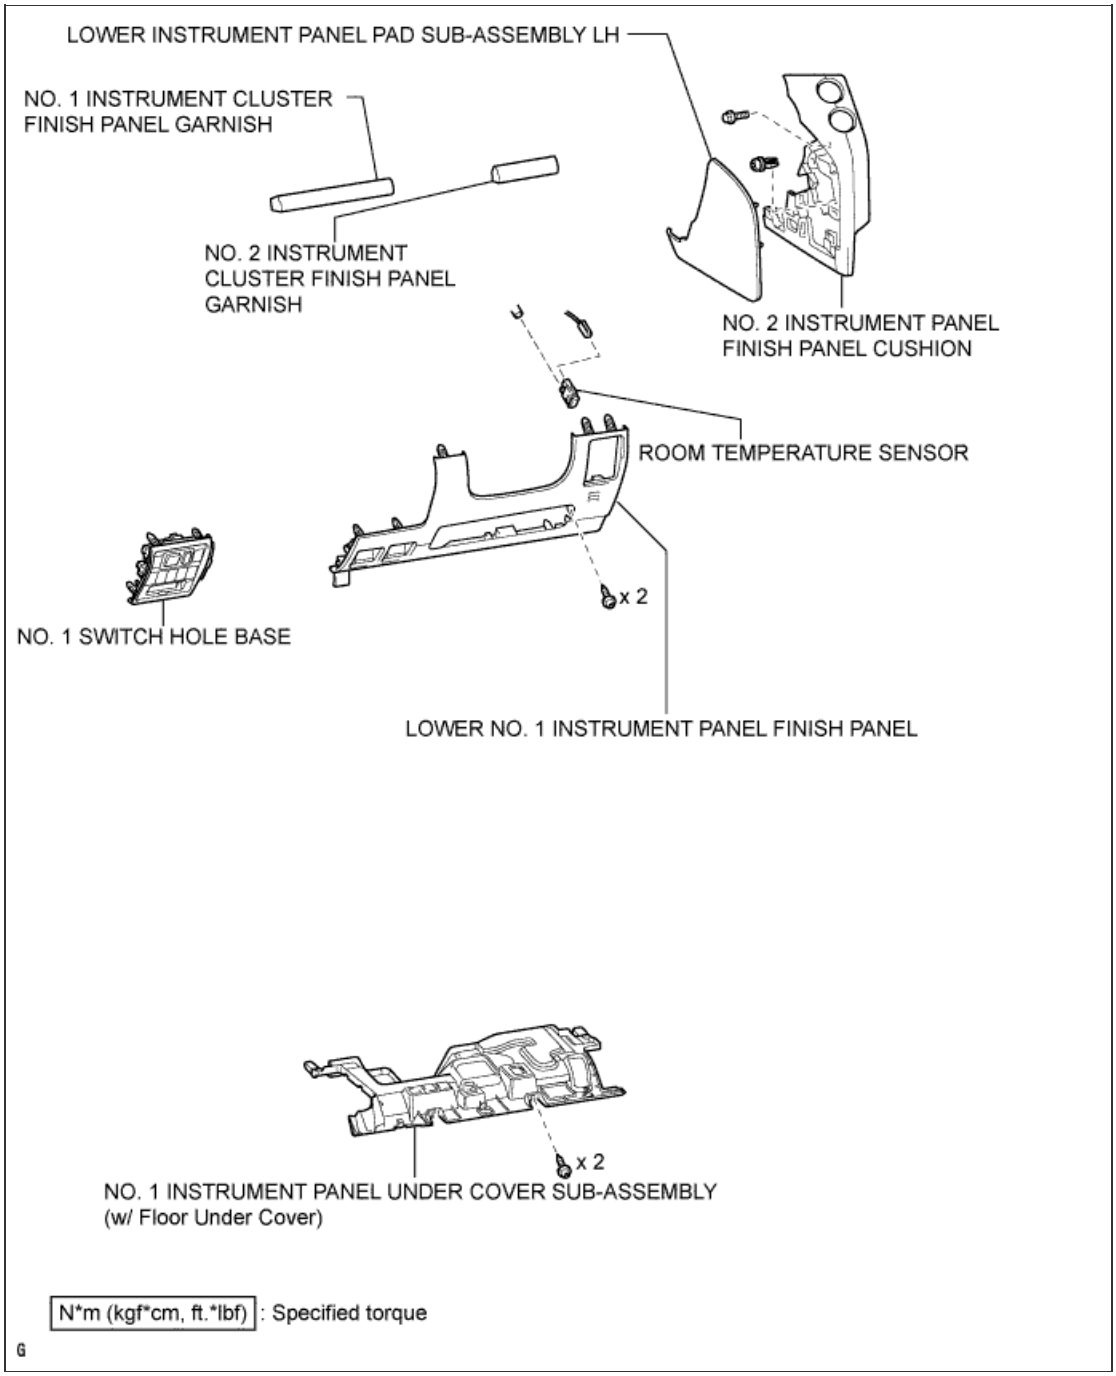

for Preparation Click here


HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

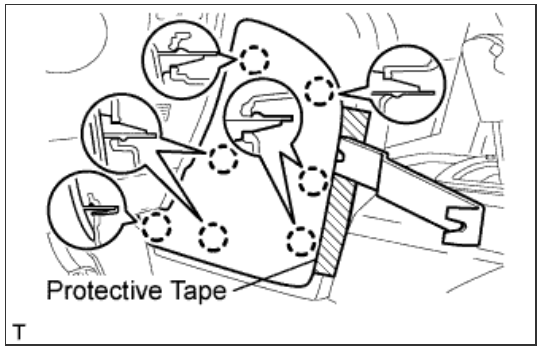


2. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

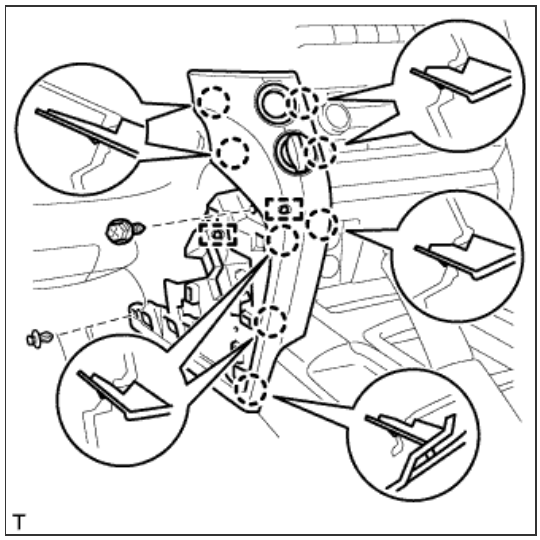

3. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

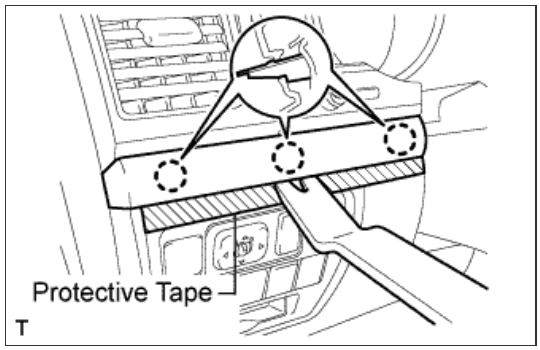

4. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

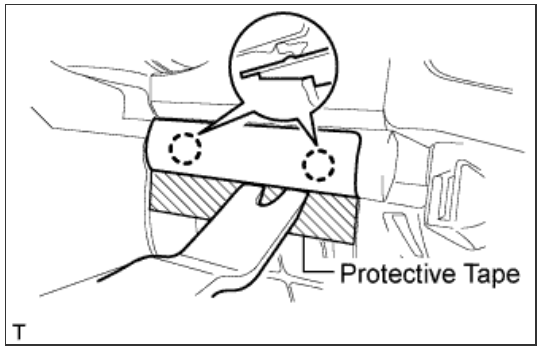


5. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.


c. Remove the under cover and disconnect the connectors.

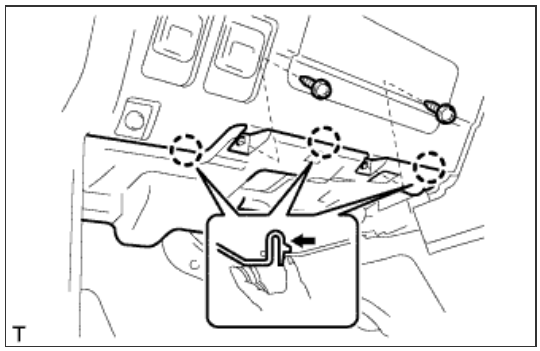

6. REMOVE NO. 1 SWITCH HOLE BASE

a. Detach the 4 claws.

b. Remove the switch hole base and then disconnect the connectors.

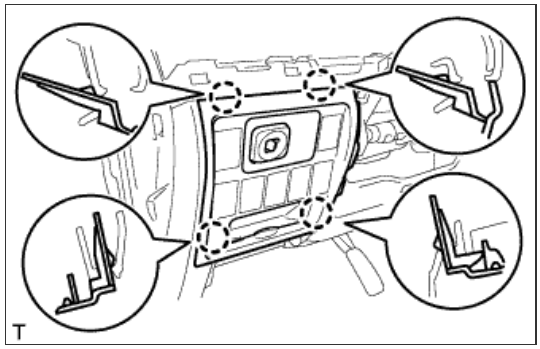


7. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

b. Open the hole cover.

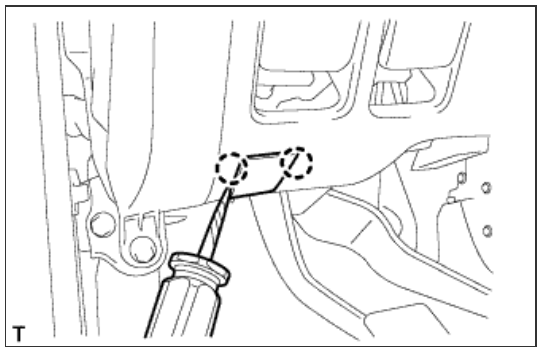


c. Remove the 2 bolts.

d. Detach the 14 claws.

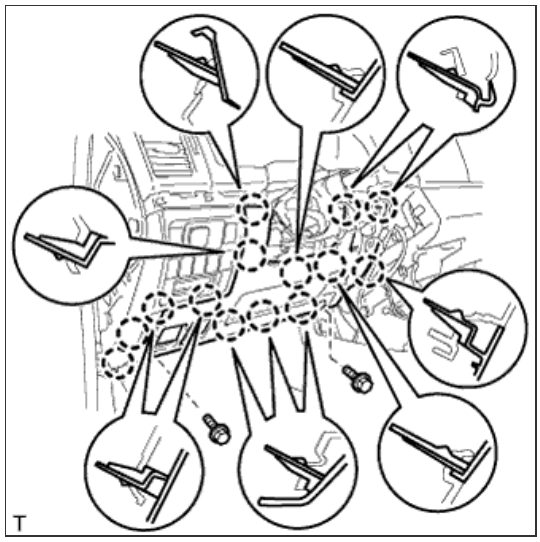


e. Detach the 2 claws and remove the sensor.

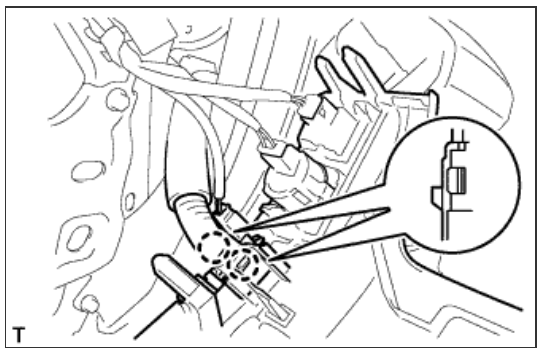

f. Detach the 2 claws and disconnect the 2 control cables.


g. Remove the finish panel and then disconnect the connectors.

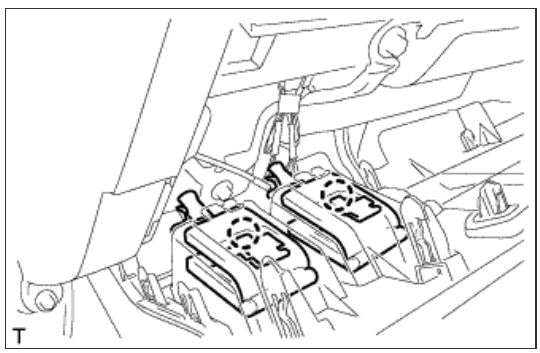

8. REMOVE ROOM TEMPERATURE SENSOR

a. Disconnect the connector.

b. Disconnect the hose and remove the sensor.

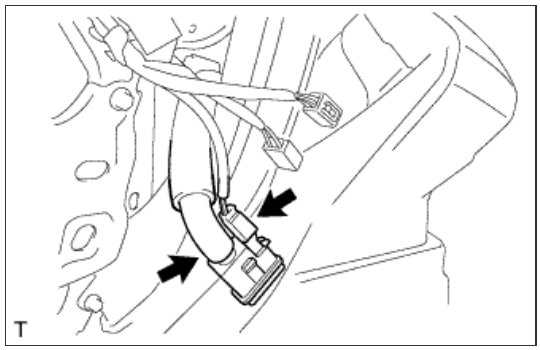

for Preparation Click here


HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

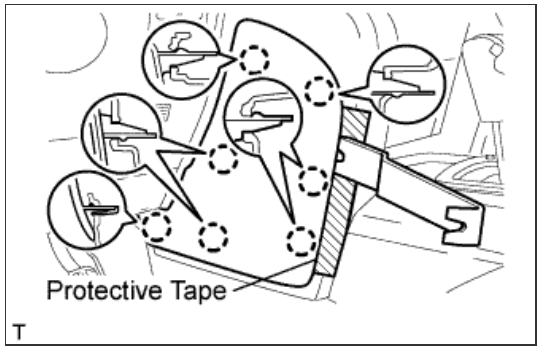


2. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.


d. Remove the panel pad and disconnect the connectors and 2 clamps.

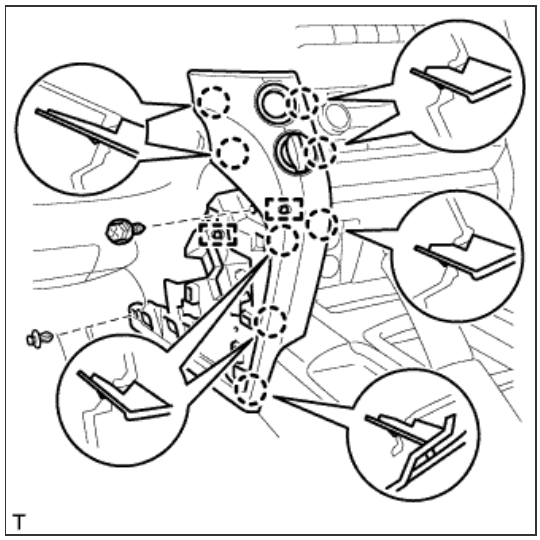

3. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

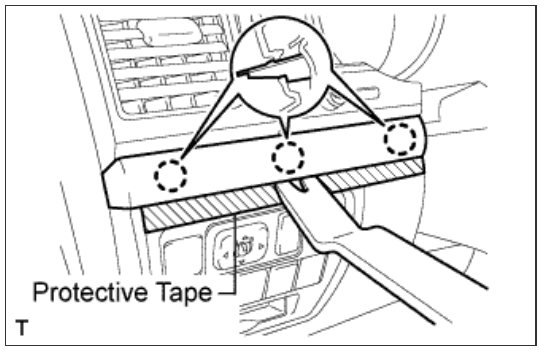

4. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

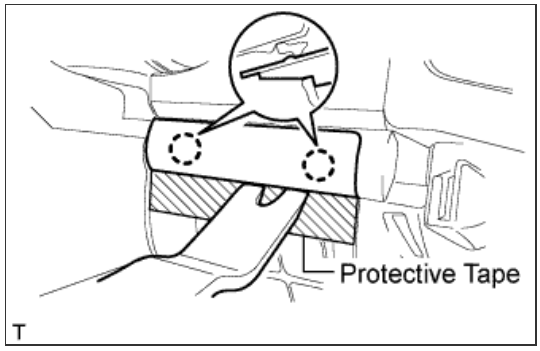


5. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.


c. Remove the under cover and disconnect the connectors.

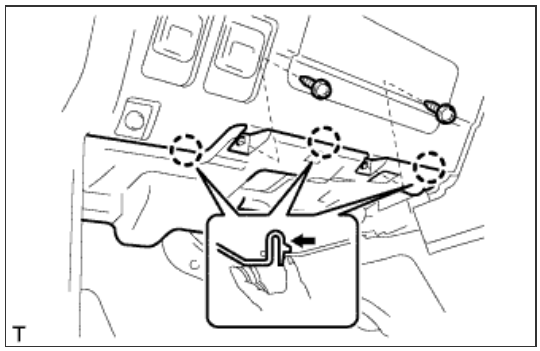

6. REMOVE NO. 1 SWITCH HOLE BASE

a. Detach the 4 claws.

b. Remove the switch hole base and then disconnect the connectors.

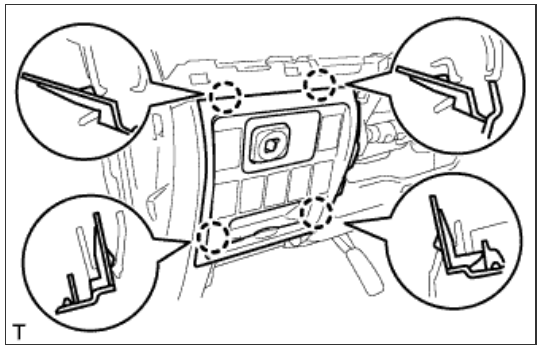


7. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

b. Open the hole cover.

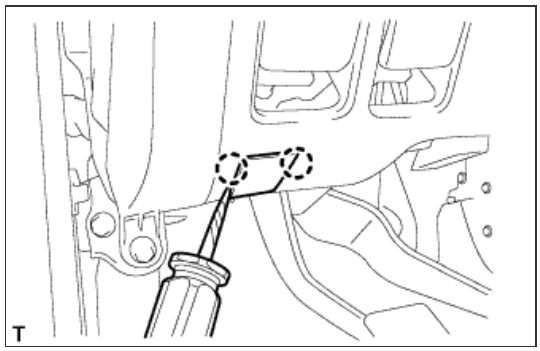


c. Remove the 2 bolts.

d. Detach the 14 claws.

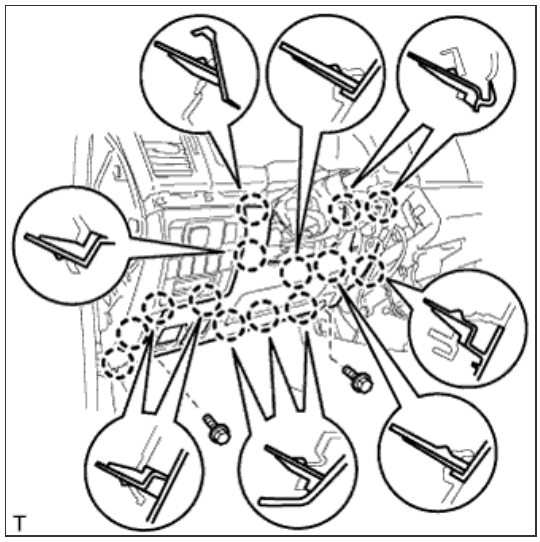


e. Detach the 2 claws and remove the sensor.

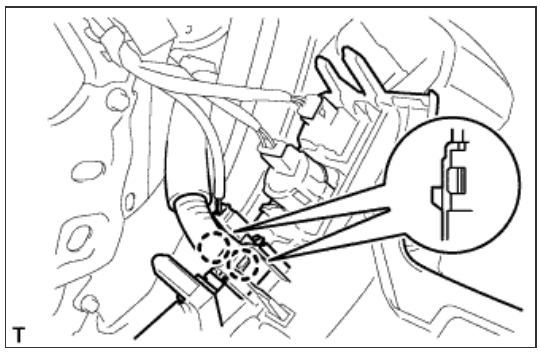

f. Detach the 2 claws and disconnect the 2 control cables.


g. Remove the finish panel and then disconnect the connectors.

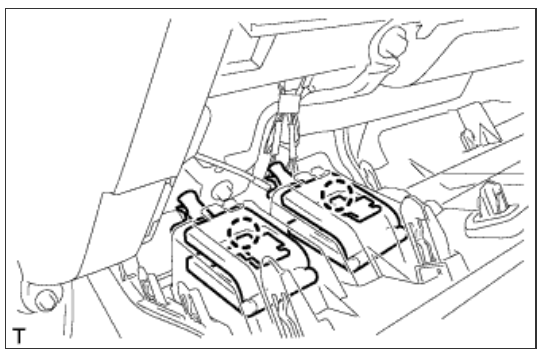

8. REMOVE ROOM TEMPERATURE SENSOR

a. Disconnect the connector.

b. Disconnect the hose and remove the sensor.

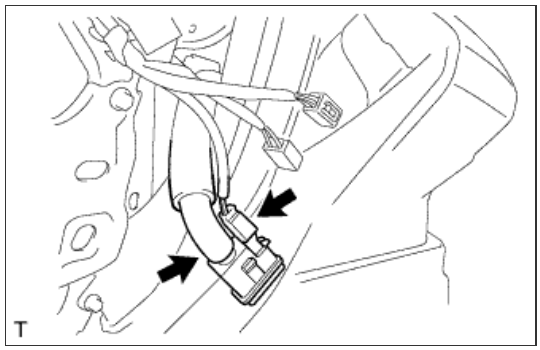

for Preparation Click here

1. INSPECT ROOM TEMPERATURE SENSOR

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	10°C (50°F)	3.00 to 3.73 kΩ
1 - 2	15°C (59°F)	2.45 to 2.88 kΩ
1 - 2	20°C (68°F)	1.95 to 2.30 kΩ
1 - 2	25°C (77°F)	1.60 to 1.80 kΩ
1 - 2	30°C (86°F)	1.28 to 1.47 kΩ
1 - 2	35°C (95°F)	1.00 to 1.22 kΩ
1 - 2	40°C (104°F)	0.80 to 1.00 kΩ
1 - 2	45°C (113°F)	0.65 to 0.85 kΩ
1 - 2	50°C (122°F)	0.50 to 0.70 kΩ
1 - 2	55°C (131°F)	0.44 to 0.60 kΩ
1 - 2	60°C (140°F)	0.36 to 0.50 kΩ


If the result is not as specified, replace the room temperature sensor.

NOTICE:

- **Touching the sensor even slightly may change the resistance value. Hold the connector of the sensor.**
- **When measuring the resistance, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (See the graph).

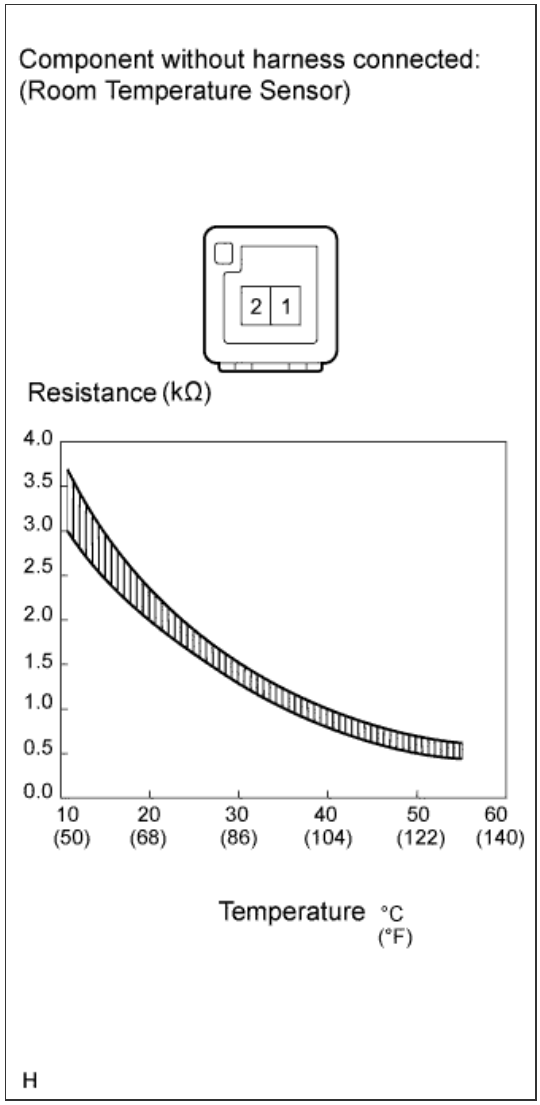

for Preparation Click here


HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. INSTALL ROOM TEMPERATURE SENSOR

a. Connect the hose to install the sensor.


b. Connect the connector.

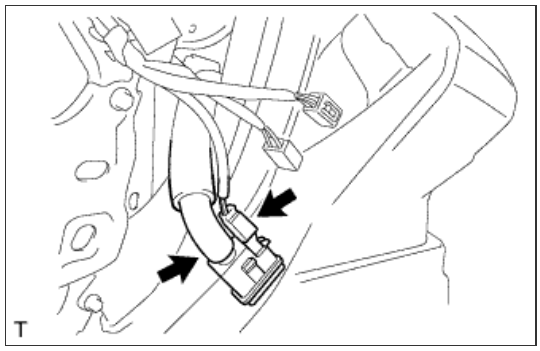


2. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

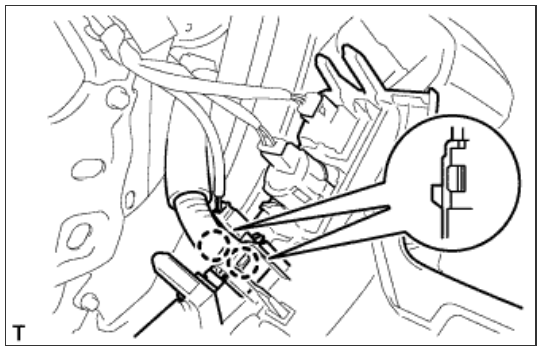


c. Attach the 2 claws to connect the 2 control cables.

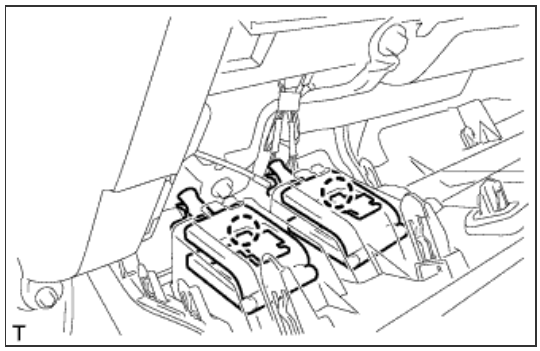


d. Attach the 14 claws to install the finish panel.

e. Install the 2 bolts.

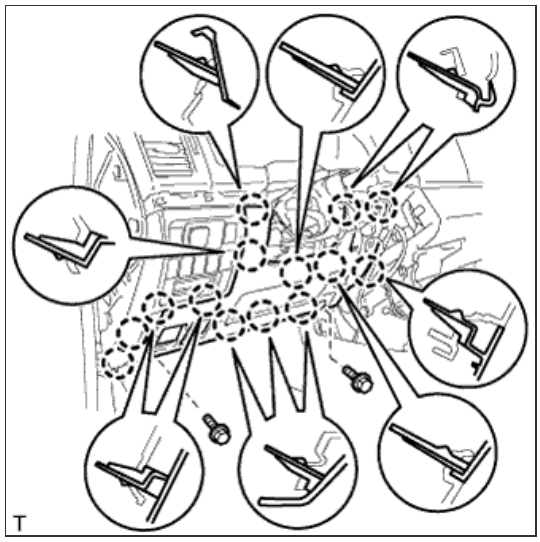


f. Attach the 2 claws to close the hole cover.

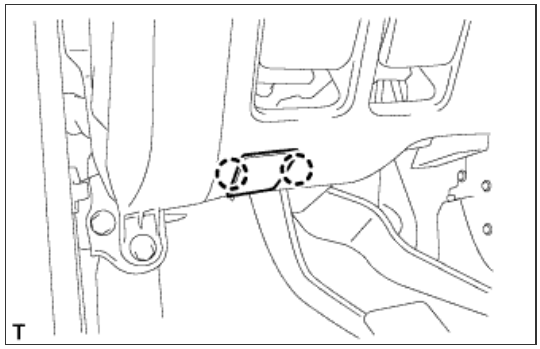

3. INSTALL NO. 1 SWITCH HOLE BASE

a. Connect the connectors.

b. Attach the 4 claws to install the switch hole base.

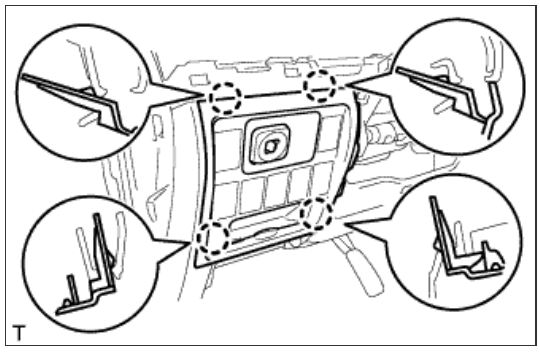


4. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.


b. Attach the 3 claws to install the under cover.

c. Install the 2 screws.

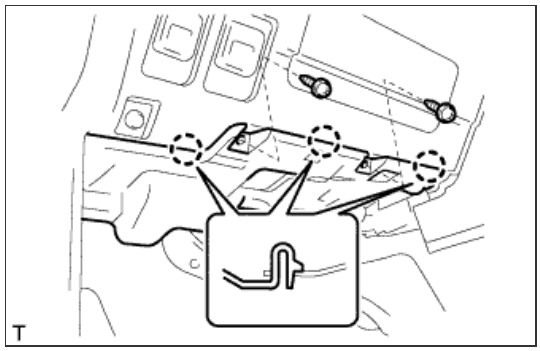


5. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

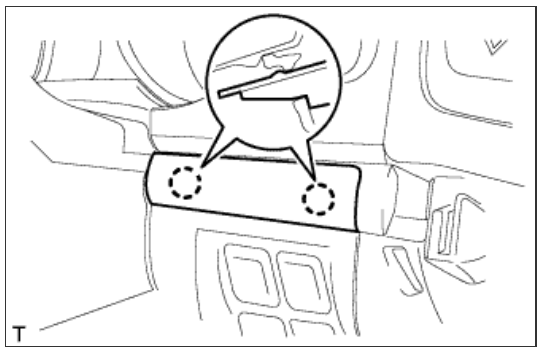

6. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

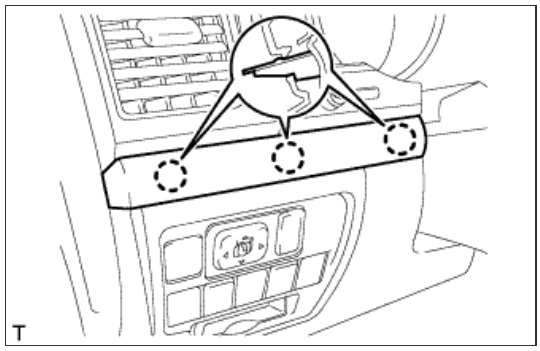


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

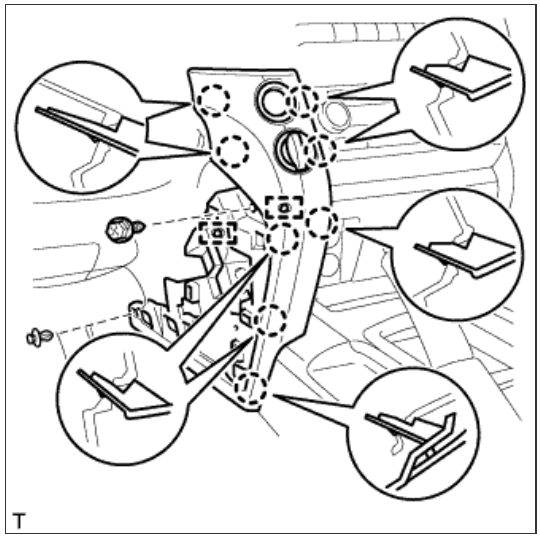

8. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

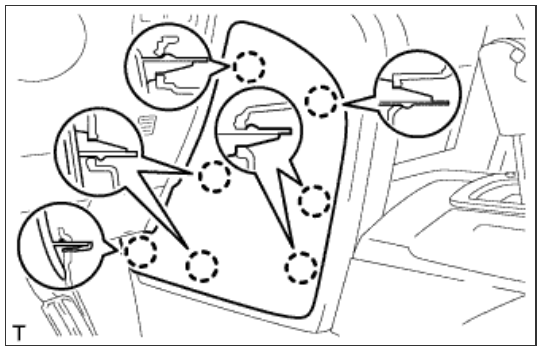
T

for Preparation Click here


HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. INSTALL ROOM TEMPERATURE SENSOR

a. Connect the hose to install the sensor.


b. Connect the connector.

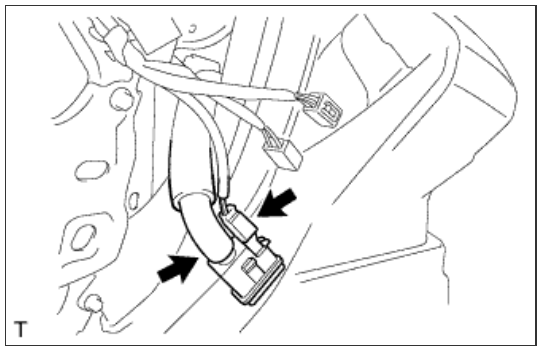


2. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

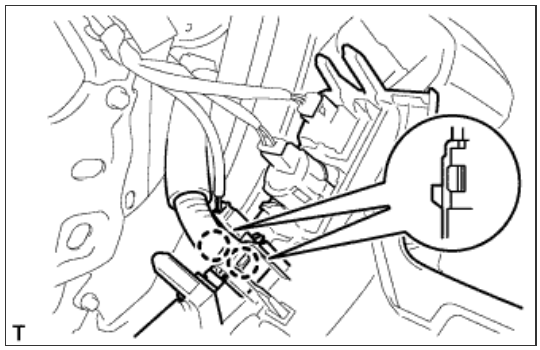


c. Attach the 2 claws to connect the 2 control cables.

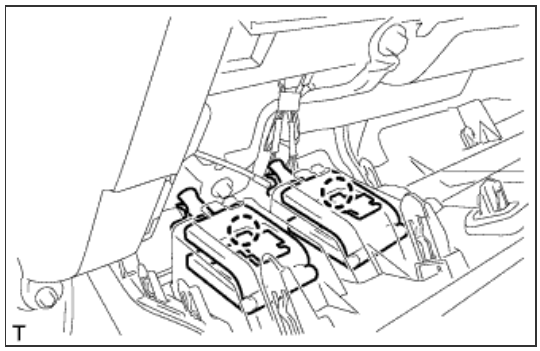


d. Attach the 14 claws to install the finish panel.

e. Install the 2 bolts.

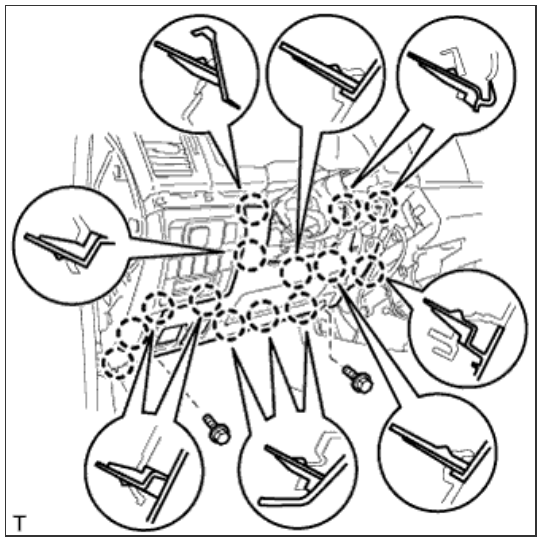


f. Attach the 2 claws to close the hole cover.

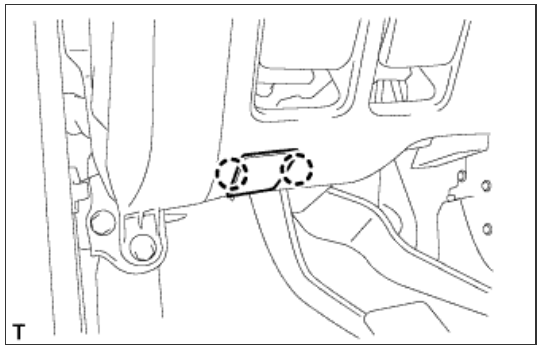

3. INSTALL NO. 1 SWITCH HOLE BASE

a. Connect the connectors.

b. Attach the 4 claws to install the switch hole base.

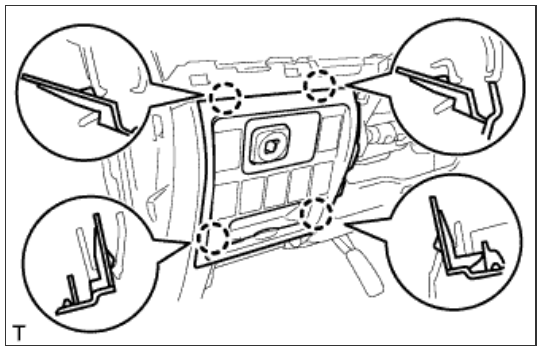


4. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.


b. Attach the 3 claws to install the under cover.

c. Install the 2 screws.

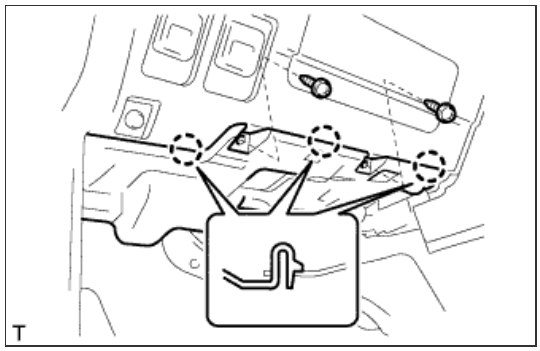


5. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

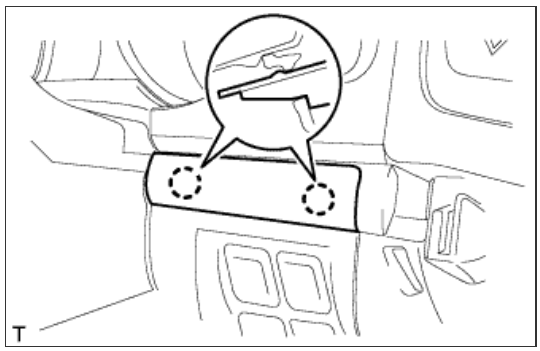

6. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

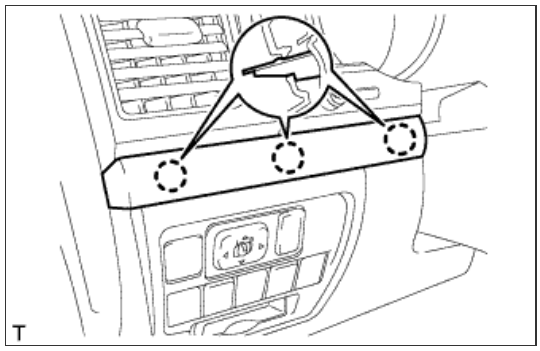


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

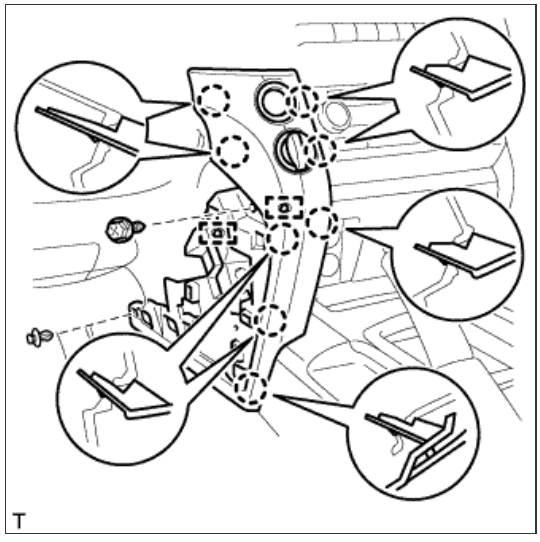


8. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

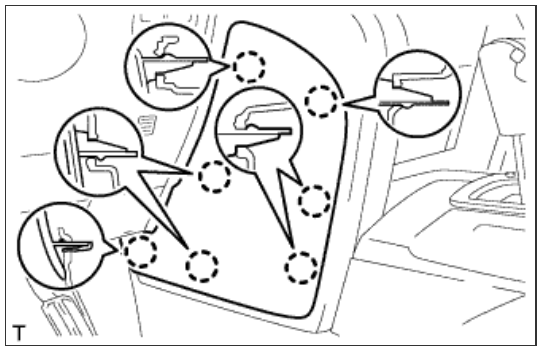
T

for Preparation Click here

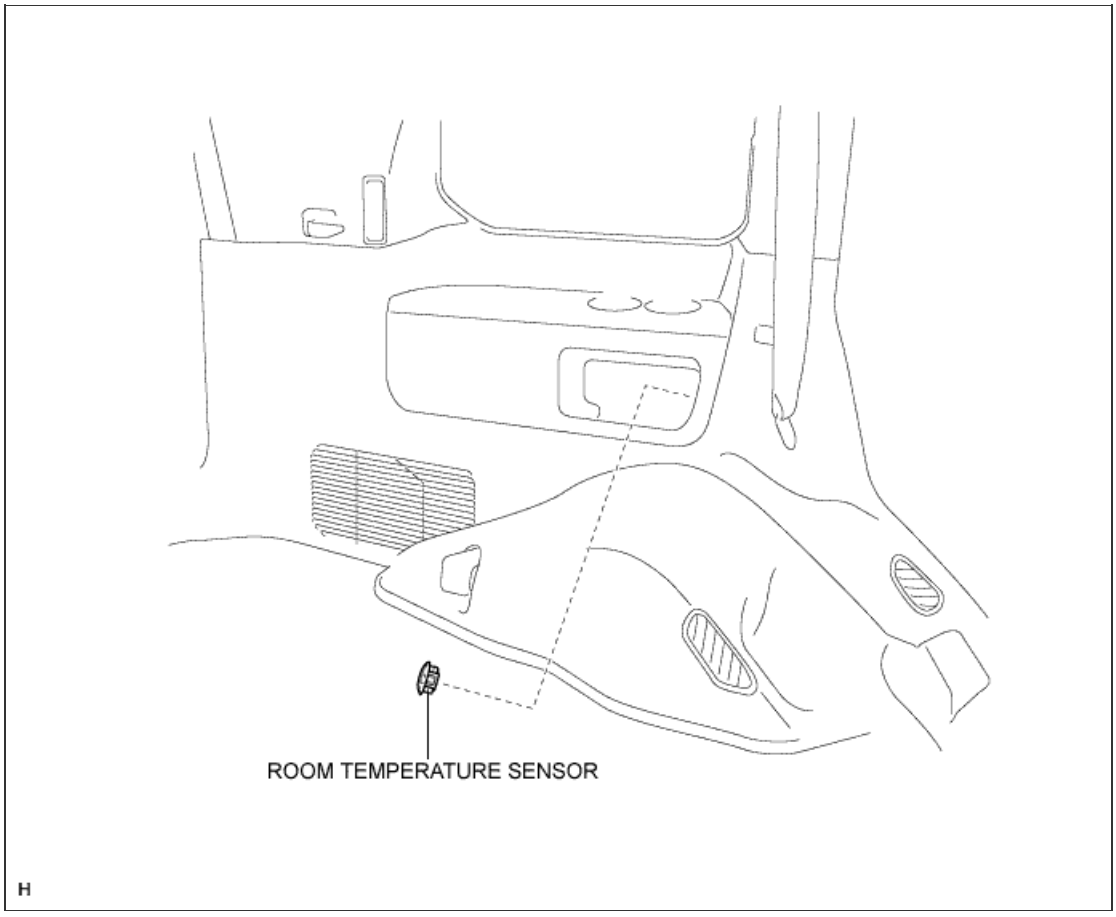


for Preparation Click here

HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**

1. REMOVE ROOM TEMPERATURE SENSOR

a. Using a screwdriver, detach the 4 claws and remove the sensor, and then disconnect the connector.

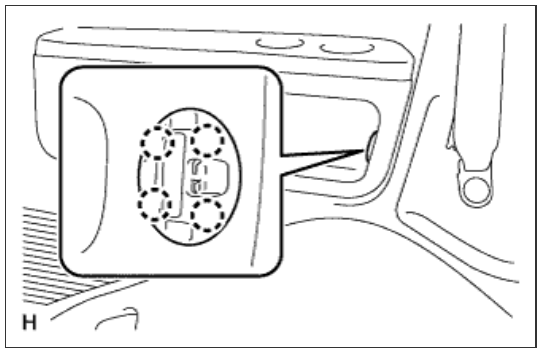

for Preparation Click here

1. INSPECT ROOM TEMPERATURE SENSOR

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	10°C (50°F)	3.00 to 3.73 kΩ
1 - 2	15°C (59°F)	2.45 to 2.88 kΩ
1 - 2	20°C (68°F)	1.95 to 2.30 kΩ
1 - 2	25°C (77°F)	1.60 to 1.80 kΩ
1 - 2	30°C (86°F)	1.28 to 1.47 kΩ
1 - 2	35°C (95°F)	1.00 to 1.22 kΩ
1 - 2	40°C (104°F)	0.80 to 1.00 kΩ
1 - 2	45°C (113°F)	0.65 to 0.85 kΩ
1 - 2	50°C (122°F)	0.50 to 0.70 kΩ
1 - 2	55°C (131°F)	0.44 to 0.60 kΩ
1 - 2	60°C (140°F)	0.36 to 0.50 kΩ


If the result is not as specified, replace the room temperature sensor.

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (See the graph).

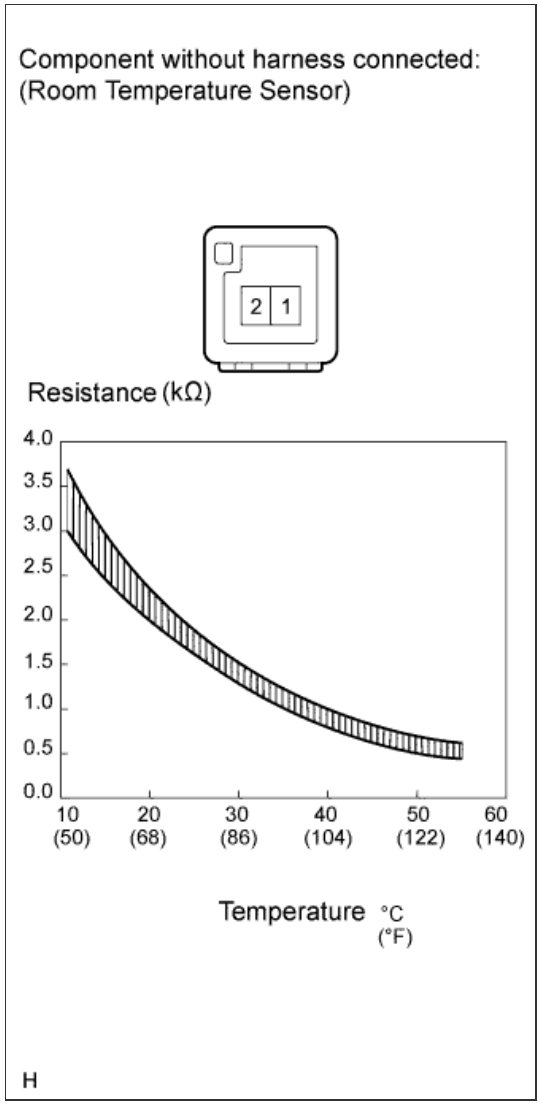

for Preparation Click here


HINT:

- **Use the same procedures for the LH side and RH side.**
- **The procedures listed below are for the LH side.**


1. INSTALL ROOM TEMPERATURE SENSOR

a. Connect the connector.

b. Attach the 4 claws to install the sensor.

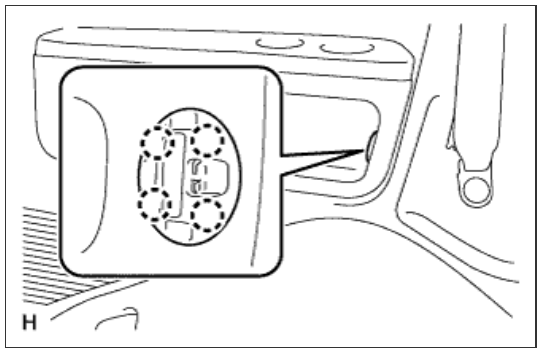

for Preparation [Click here]

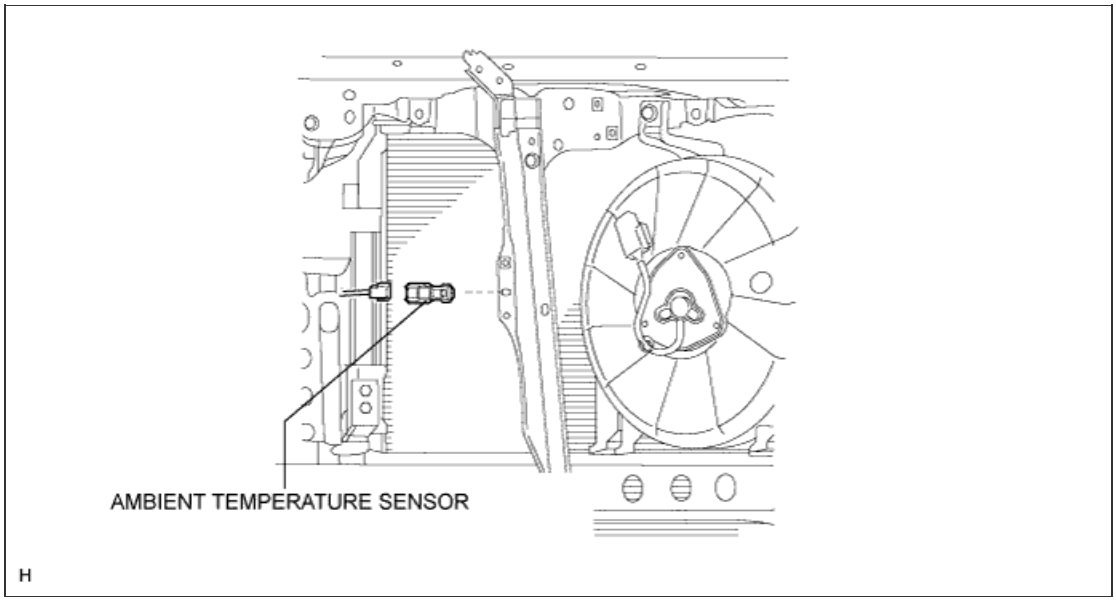

AMBIENT TEMPERATURE SENSOR > REMOVAL

for Preparation Click here

1. REMOVE FRONT BUMPER COVER

a. for Standard:
Remove the front bum er ver here

b. nch:
Remove the front bum er ver here


2. REMOVE AMBIENT TEMPERATURE SENSOR

a. nneo the conne to

b. n a re dr ver deta h the c am and remove the en o

HINT:

a e the re dr ver t before u e.

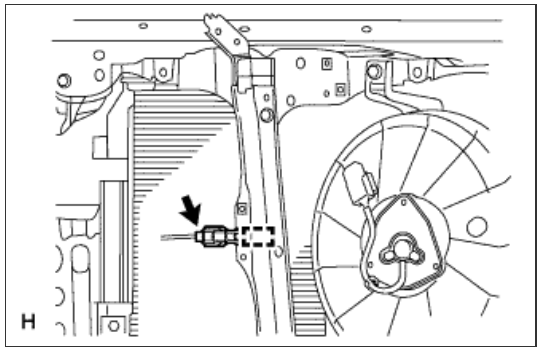

AMBIENT TEMPERATURE SENSOR > REMOVAL

for Preparation Click here

1. REMOVE FRONT BUMPER COVER

a. for Standard:
Remove the front bum er ver here

b. nch:
Remove the front bum er ver here


2. REMOVE AMBIENT TEMPERATURE SENSOR

a. nneo the conne to

b. n a re dr ver deta h the c am and remove the en o

HINT:

a e the re dr ver t before u e.

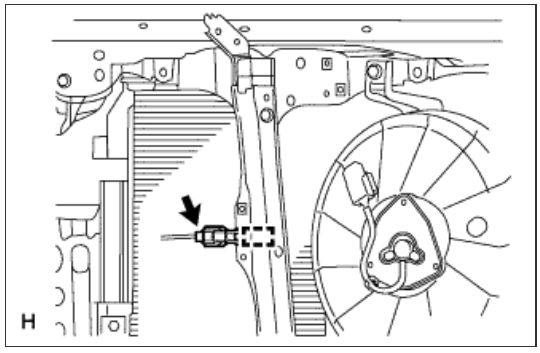

for Preparation Click here

1. INSPECT AMBIENT TEMPERATURE SENSOR

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	10°C (50°F)	3.00 to 3.73 kΩ
	15°C (59°F)	2.45 to 2.88 kΩ
	20°C (68°F)	1.95 to 2.30 kΩ
	25°C (77°F)	1.60 to 1.80 kΩ
	30°C (86°F)	1.28 to 1.47 kΩ
	35°C (95°F)	1.00 to 1.22 kΩ
	40°C (104°F)	0.80 to 1.00 kΩ
	45°C (113°F)	0.65 to 0.85 kΩ
	50°C (122°F)	0.50 to 0.70 kΩ
	55°C (131°F)	0.44 to 0.60 kΩ
	60°C (140°F)	0.36 to 0.50 kΩ


If the result is not as specified, replace the ambient temperature sensor.

NOTICE:

- **Touching the sensor even slightly may change the resistance value. Hold the connector of the sensor.**
- **When measuring the resistance, the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (See the graph).

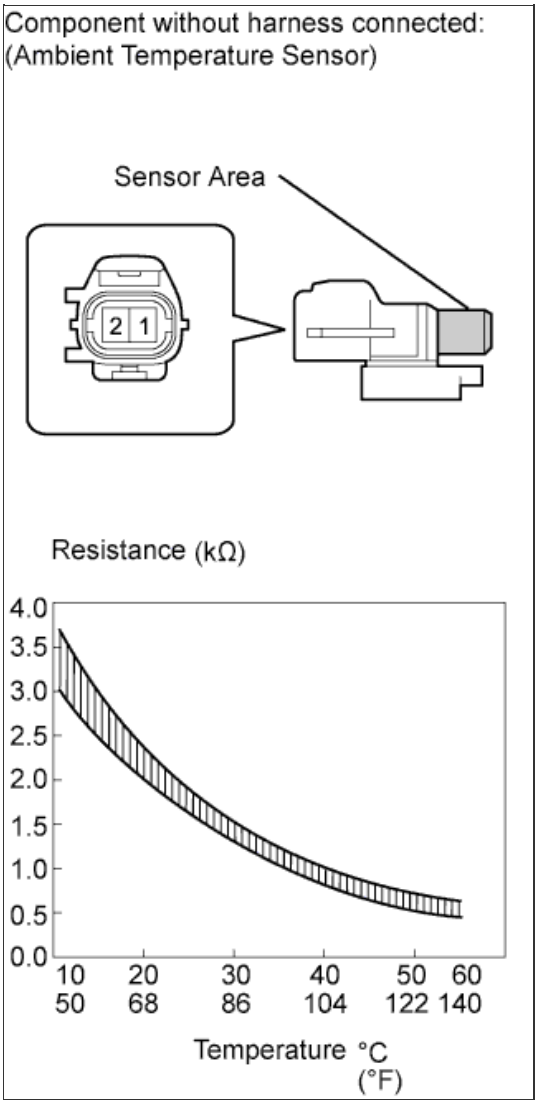


for Preparation Click here

1. INSTALL AMBIENT TEMPERATURE SENSOR

a. Attach the clamp to install the sensor.

b. Connect the connector.

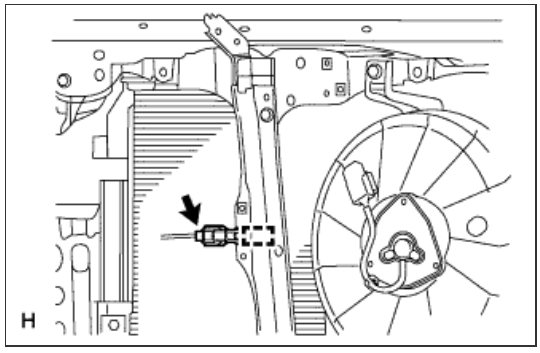

2. INSTALL FRONT BUMPER CO ER

a. for Standard:
Install the front bumper cover (Click here).


b. w/ Winch:
Install the front bumper cover (Click here).

for Preparation Click here

1. INSTALL AMBIENT TEMPERATURE SENSOR

a. Attach the clamp to install the sensor.

b. Connect the connector.

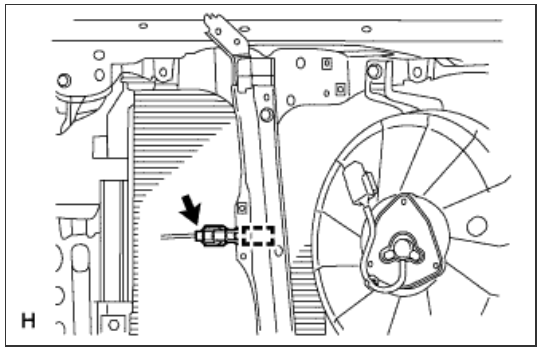



2. INSTALL FRONT BUMPER CO ER


a. for Standard:
Install the front bumper cover (Click here).

b. w/ Winch:
Install the front bumper cover (Click here).

for Preparation Click here

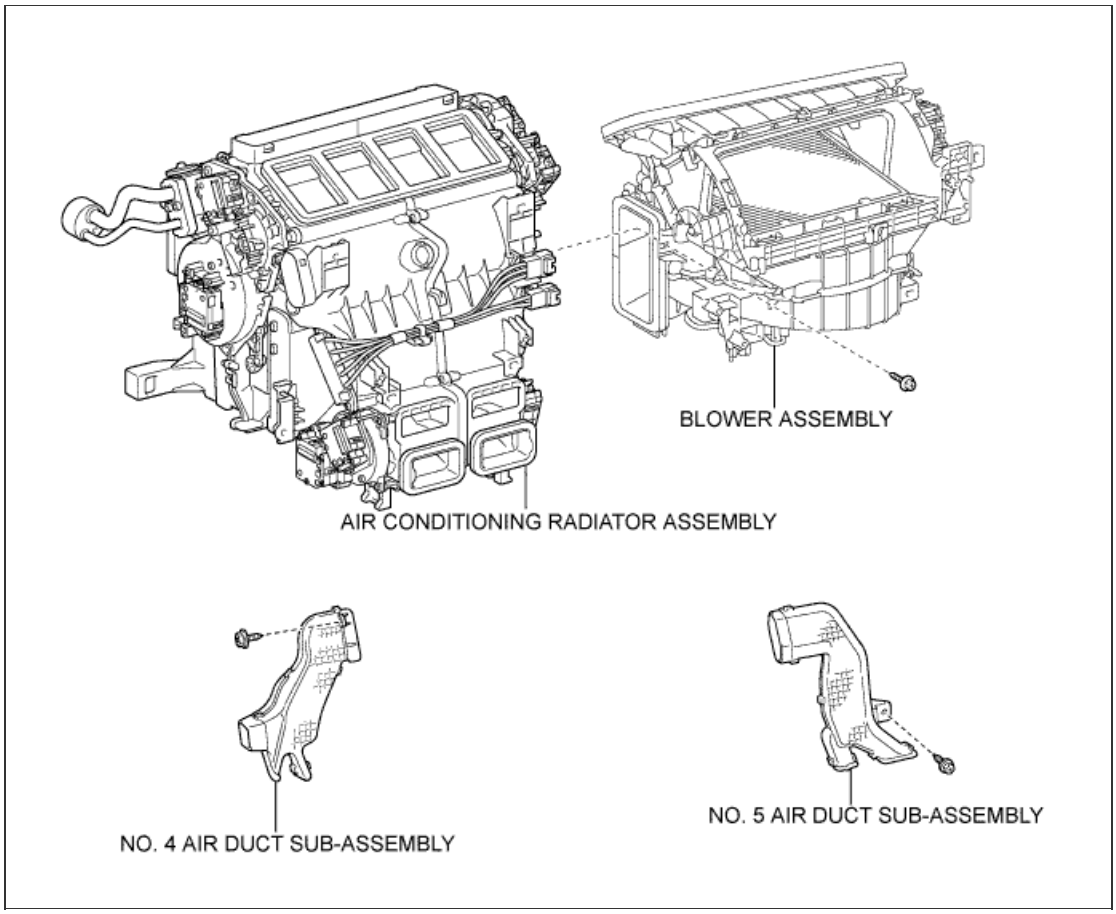

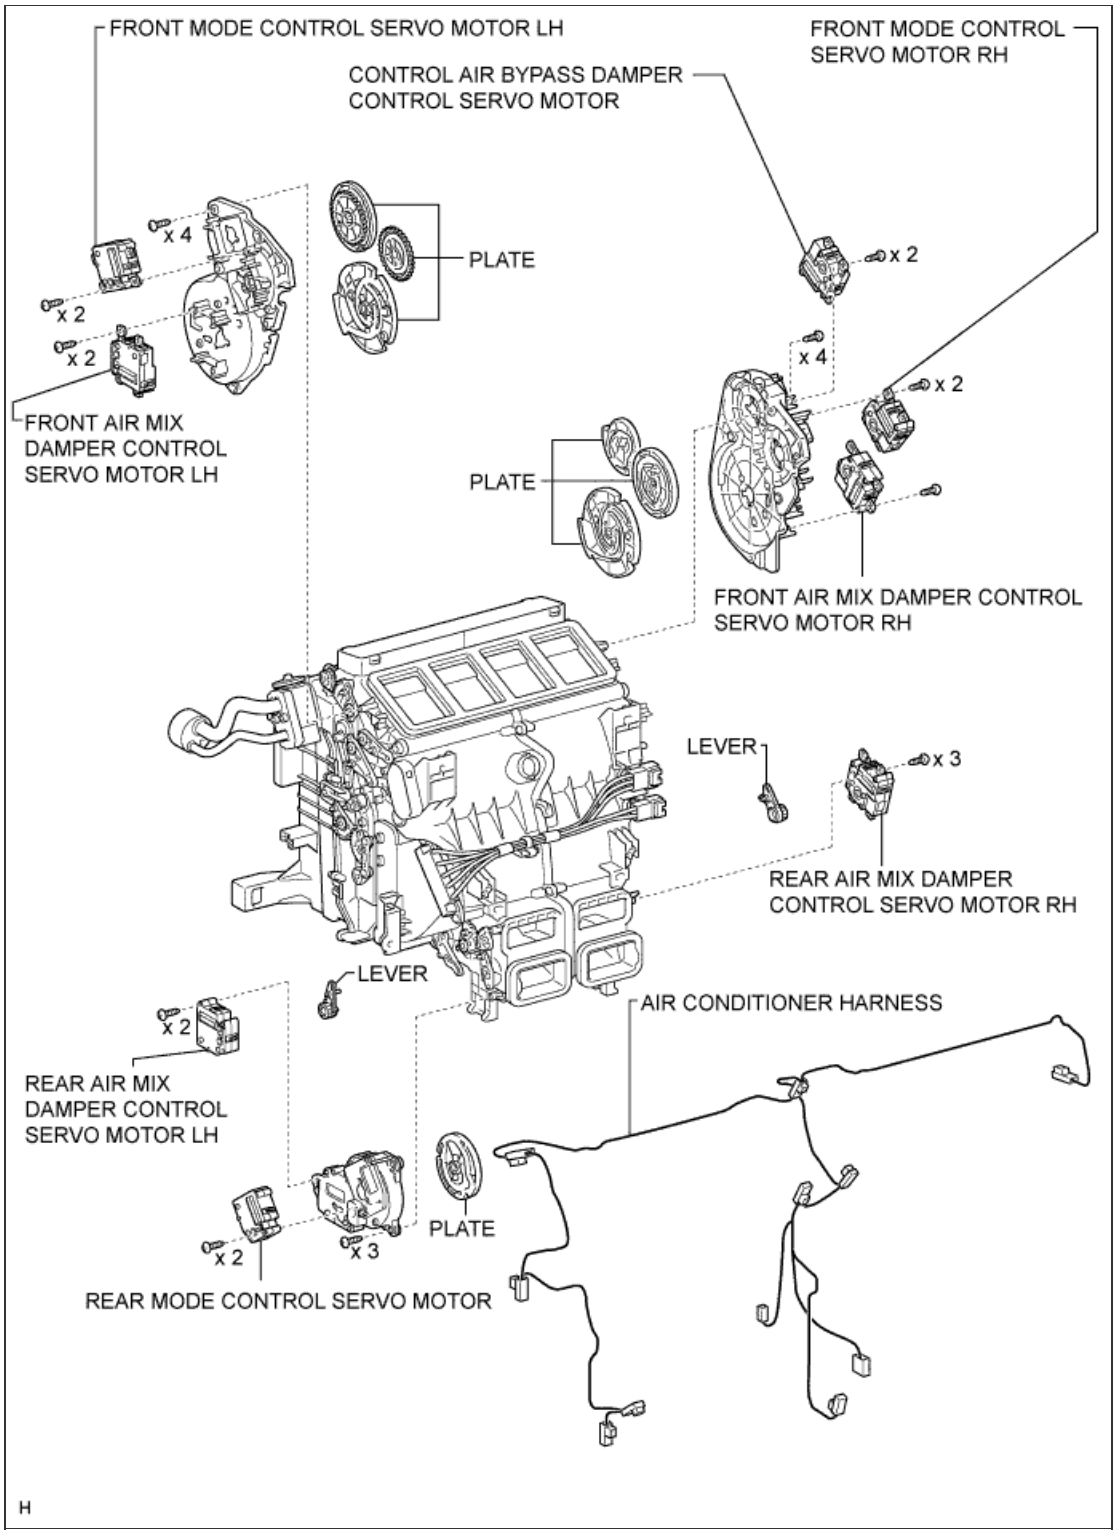
FRONT MODE CONTROL SERVO MOTOR LH
FRONT MODE CONTROL SERVO MOTOR RH
CONTROL AIR BYPASS DAMPER CONTROL SERVO MOTOR
PLATE
x 4
x 2
x 2
x 2
x 4
x 2
FRONT AIR MIX DAMPER CONTROL SERVO MOTOR LH
PLATE
FRONT AIR MIX DAMPER CONTROL SERVO MOTOR RH
LEVER
x 3
REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH
LEVER
AIR CONDITIONER HARNESS
x 2
REAR AIR MIX DAMPER CONTROL SERVO MOTOR LH
PLATE
x 2
x 3
REAR MODE CONTROL SERVO MOTOR
H

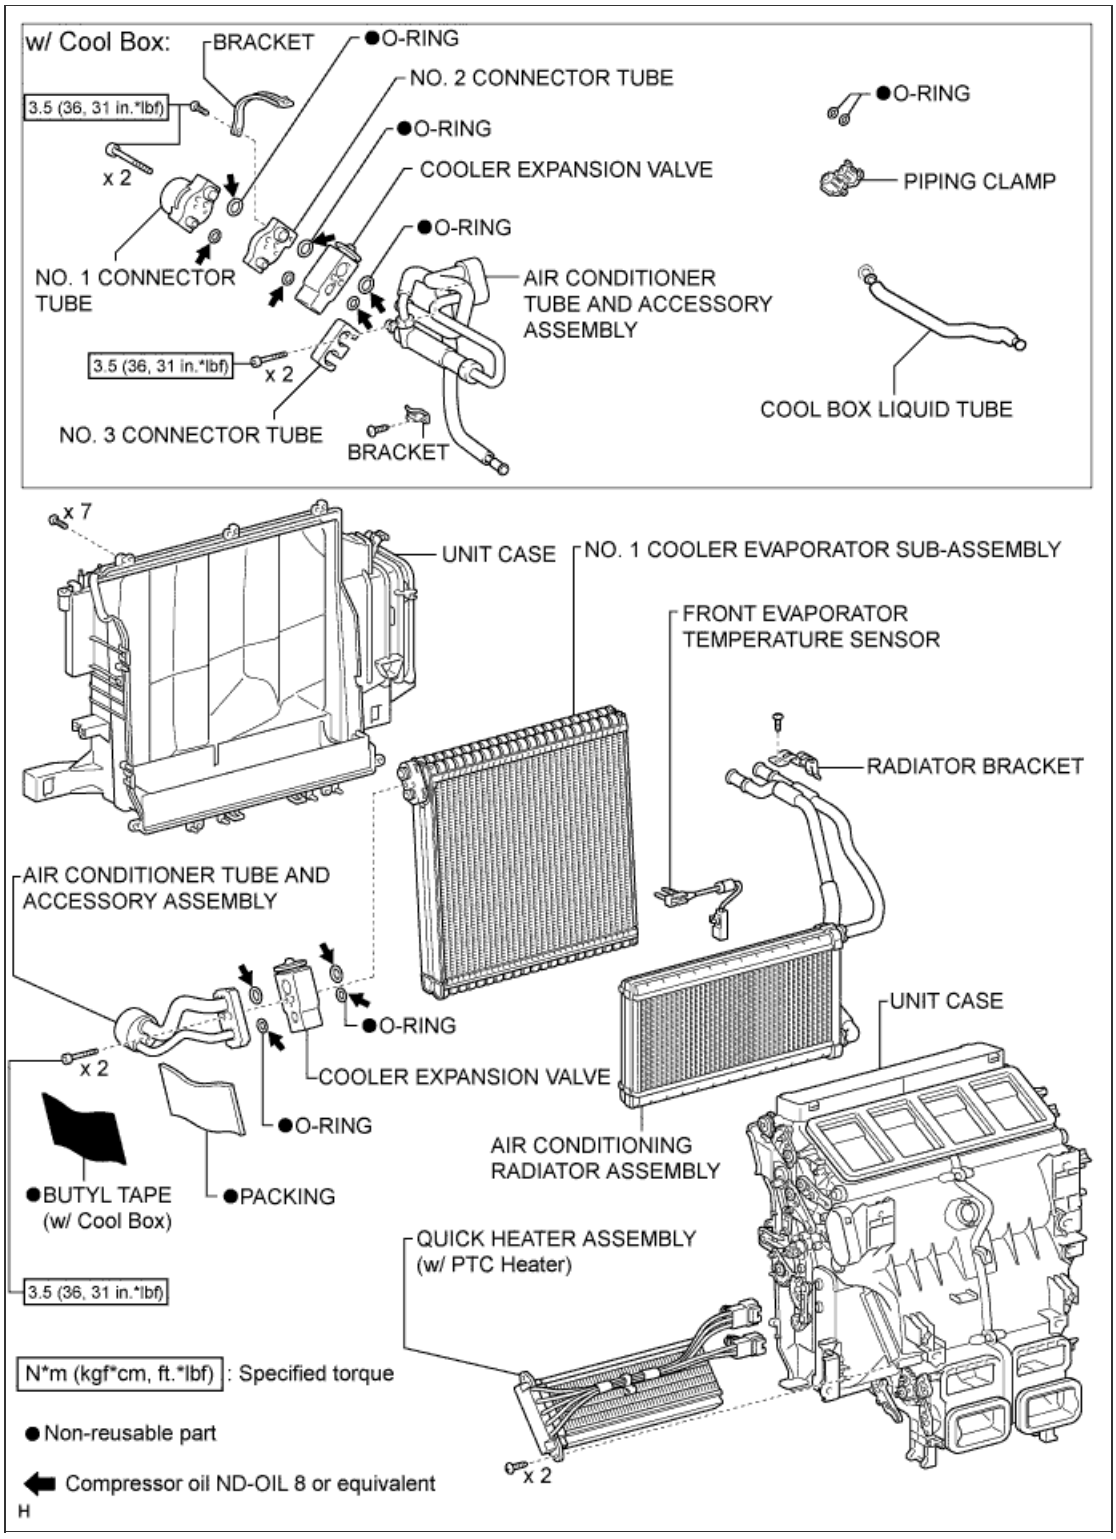
w/ Cool Box:
BRACKET
O-RING
NO. 2 CONNECTOR TUBE
O-RING
COOLER EXPANSION VALVE
O-RING
3.5 (36, 31 in.*lbf)
x 2
NO. 1 CONNECTOR TUBE
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
3.5 (36, 31 in.*lbf)
x 2
NO. 3 CONNECTOR TUBE
BRACKET
O-RING
PIPING CLAMP
COOL BOX LIQUID TUBE
x 7
UNIT CASE
NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY
FRONT EVAPORATOR TEMPERATURE SENSOR
RADIATOR BRACKET
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
O-RING
x 2
COOLER EXPANSION VALVE
O-RING
BUTYL TAPE (w/ Cool Box)
PACKING
3.5 (36, 31 in.*lbf)
UNIT CASE
AIR CONDITIONING RADIATOR ASSEMBLY
QUICK HEATER ASSEMBLY (w/ PTC Heater)
x 2
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
Compressor oil ND-OIL 8 or equivalent
H

FRONT EVAPORATOR TEMPERATURE SENSOR (for LHD) > REMOVAL

for Preparation Click here

1. REMOVE AIR CONDITIONING UNIT ASSEMBLY

a. Remove the air conditioning unit assembly (Click here).

FRONT EVAPORATOR TEMPERATURE SENSOR (for LHD) > REMOVAL

for Preparation Click here

1. REMOVE AIR CONDITIONING UNIT

a. Remove the air conditioning unit (Click here).


for Preparation Click here

1. REMOVE BLOWER ASSEMBLY

a. Remove the screw.


b. Disconnect the connector and clamp.

c. Detach the claw and remove the blower unit.

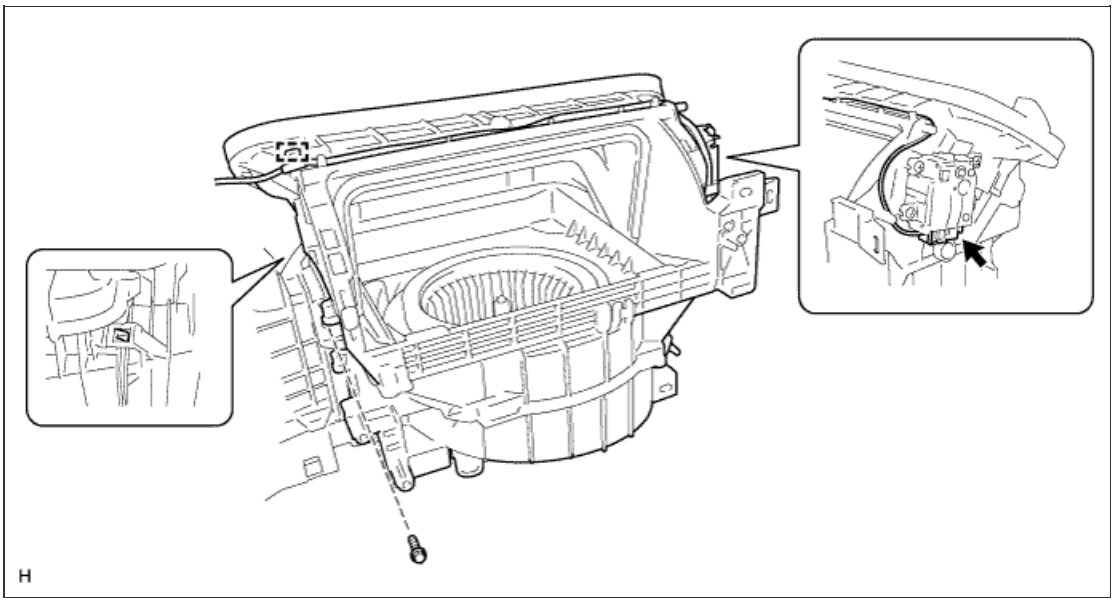


2. REMOVE NO. 4 AIR DUCT SUB-ASSEMBLY

a. Remove the screw and duct.

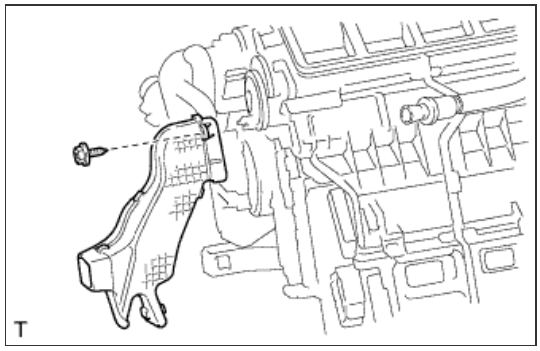


3. REMOVE NO. 5 AIR DUCT SUB-ASSEMBLY

a. Remove the screw and duct.

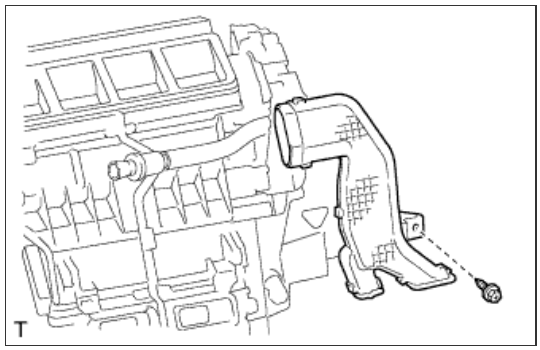


4. REMOVE ASPIRATOR

a. Detach the 2 claws and remove the aspirator.

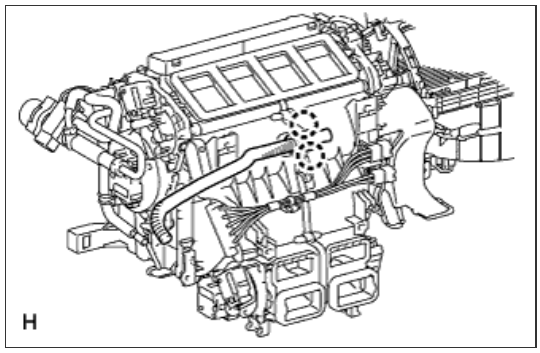

5. REMOVE COOL BOX LIQUID TUBE (w/ Cool Box)

a. Detach the clamp.

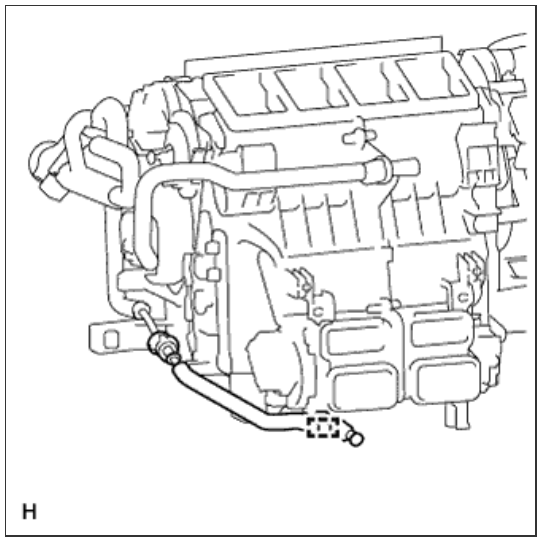


b. Using SST, remove the piping clamp.

SST
09870-00025

i. Attach SST to the piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST by referring to the illustration on the caution label.

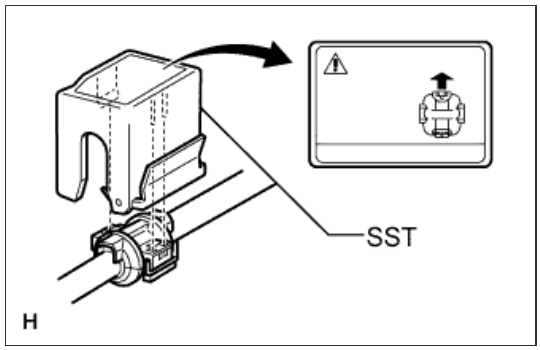


ii. Push down SST and release the clamp lock.

NOTICE:

Be careful not to deform the tubes when pushing SST.

iii. Pull SST slightly and push the release lever, then remove the piping clamp with SST.

iv. Remove the piping clamp from SST.

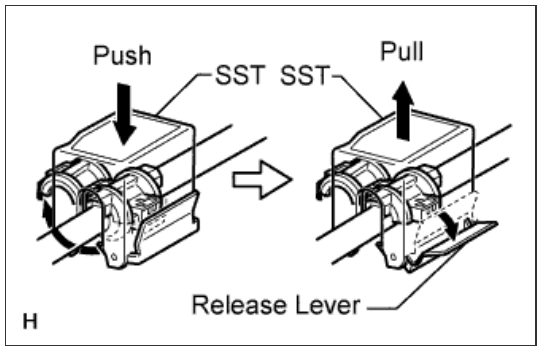

c. Disconnect the tube.

NOTICE:


Cap the open fittings immediately to keep moisture or dirt out of the system.

d. Remove the 2 O-rings from the liquid tube.


6. REMOVE QUICK HEATER ASSEMBLY (w/ PTC Heater)

a. Detach the 3 clamps.

b. Remove the 2 screws and quick heater.

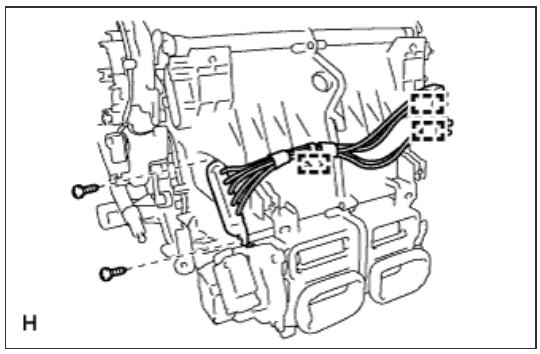

7. REMOVE AIR CONDITIONER HARNESS

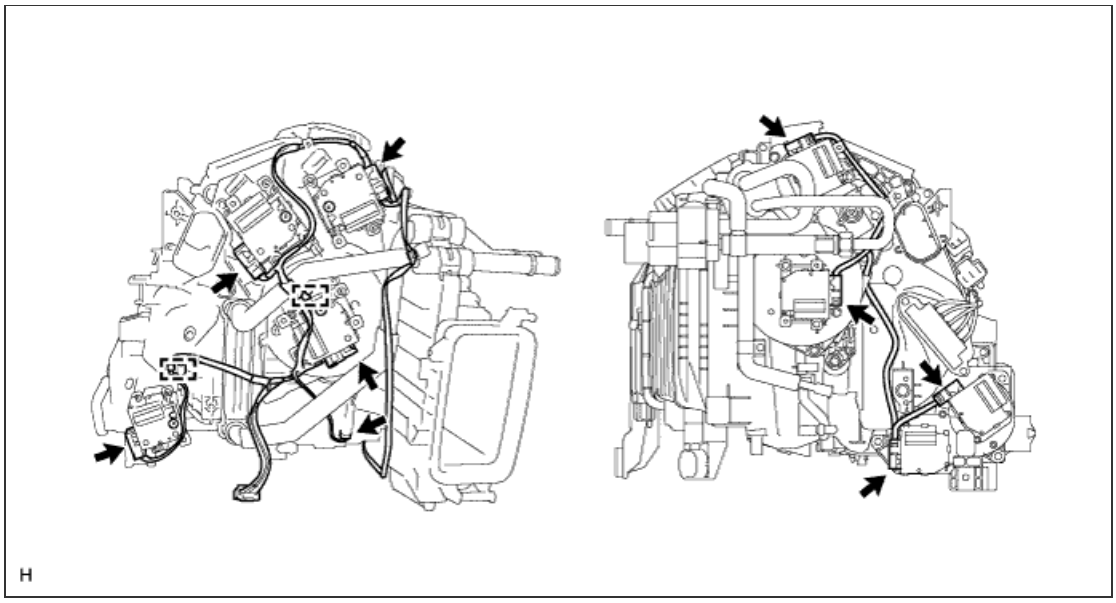


a. Disconnect the connectors.

b. Detach the clamps and remove the harness.

8. REMOVE AIR CONDITIONING RADIATOR ASSEMBLY


a. Remove the screw and radiator bracket.

b. Remove the radiator.

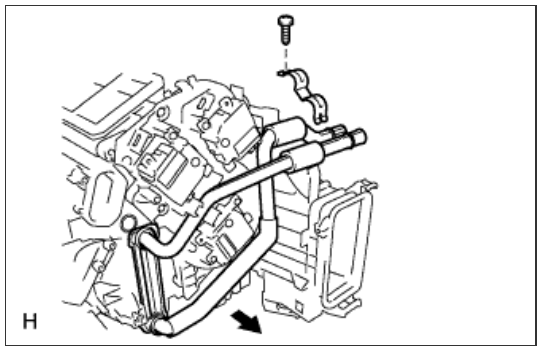


9. REMOVE COOLER EXPANSION VALVE (w/ Cool Box)


a. Remove the packing.

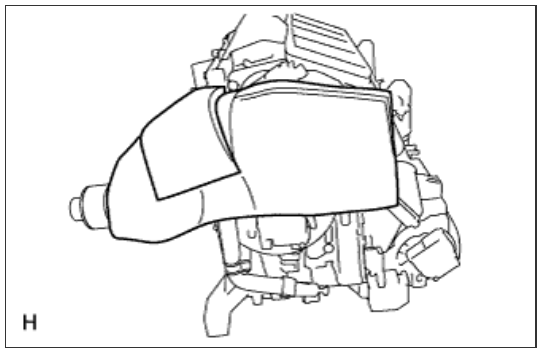

b. Remove the butyl tape.

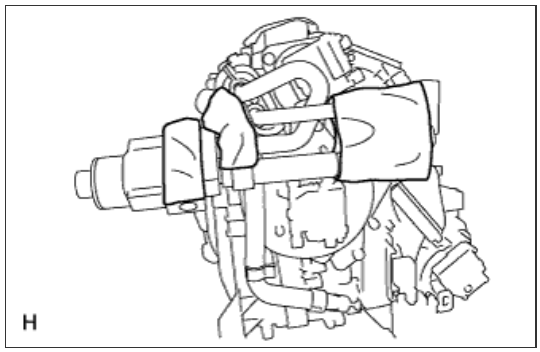


c. Using a 4 mm hexagon wrench, remove the hexagon bolt, screw and bracket.

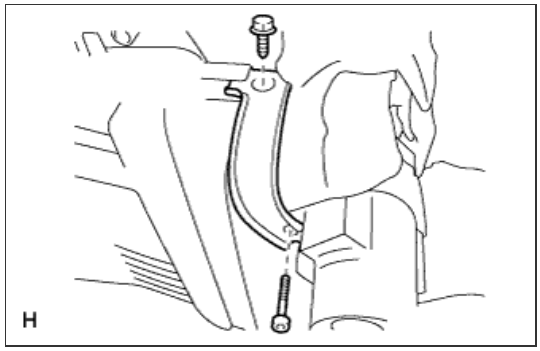

d. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts and No. 1 connector tube.

e. Remove the 2 O-rings from the No. 1 connector tube.

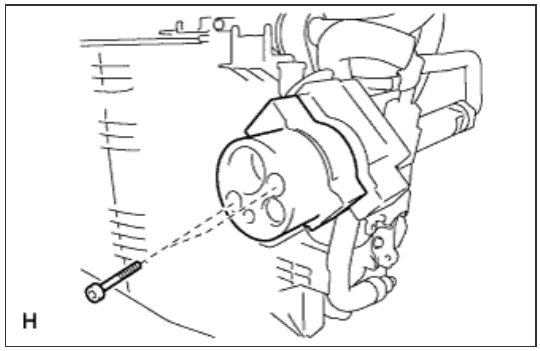

f. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts, No. 2 connector tube, expansion valve and No. 3 connector tube.

g. Remove the 2 O-rings from the No. 2 connector tube.




10. REMOVE AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY (w/ Cool Box)

a. Remove the screw and bracket.


b. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts and air conditioner tube and accessory assembly.

c. Remove the 2 O-rings from the air conditioner tube and accessory assembly.

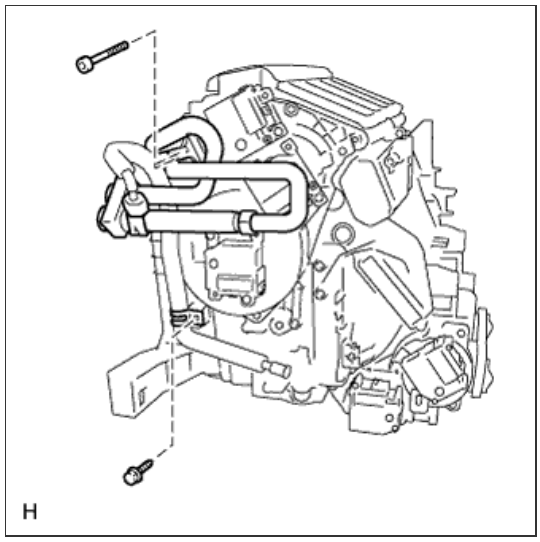

11. REMOVE COOLER EXPANSION VALVE (w/o Cool Box)


a. Remove the packing.

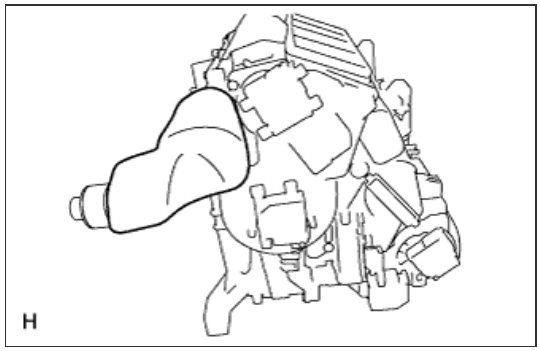

b. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts, air conditioner tube and accessory assembly and expansion valve.


c. Remove the 2 O-rings from the air conditioner tube and accessory assembly.

d. Remove the 2 O-rings from the expansion valve.

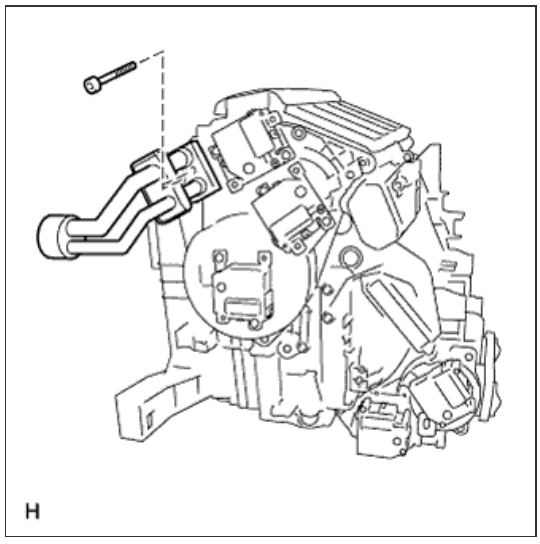


12. REMOVE REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH (for 4 Zone Type)

a. Remove the 3 screws and servo motor.

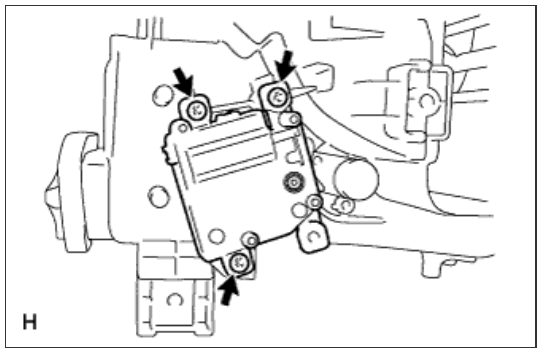

13. REMOVE SERVO MOTOR

a. Remove the 4 screws and servo motor unit.

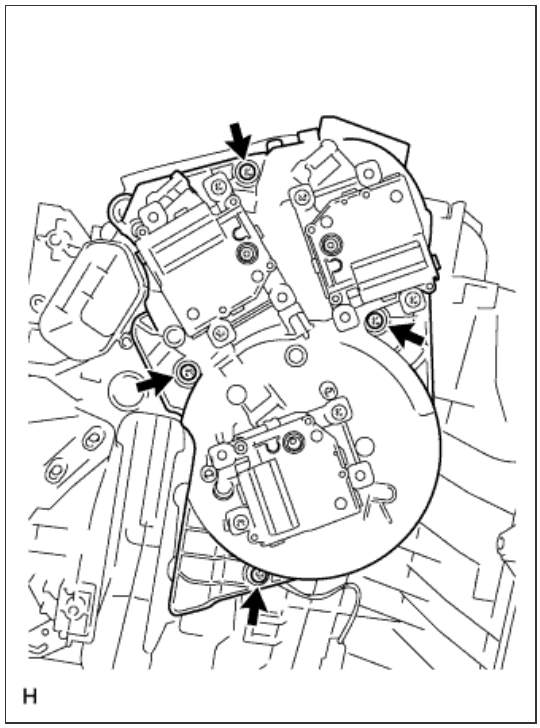


b. for 4 Zone Type:
Remove the front mode control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

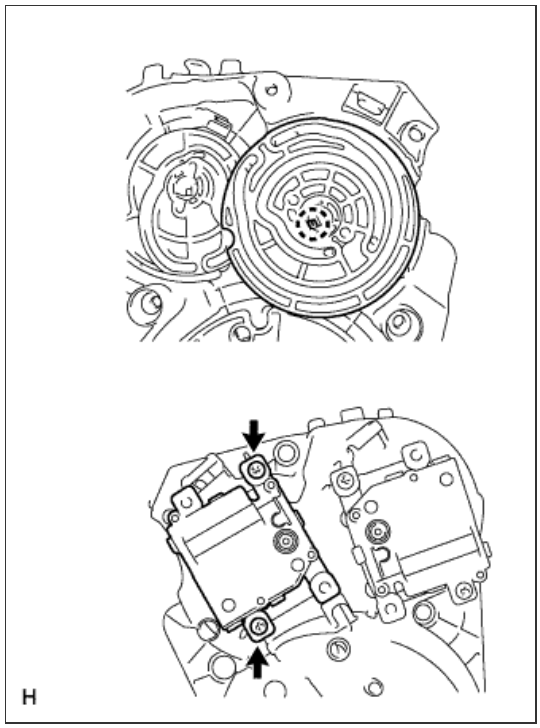


c. Remove the control bypass damper control servo motor.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

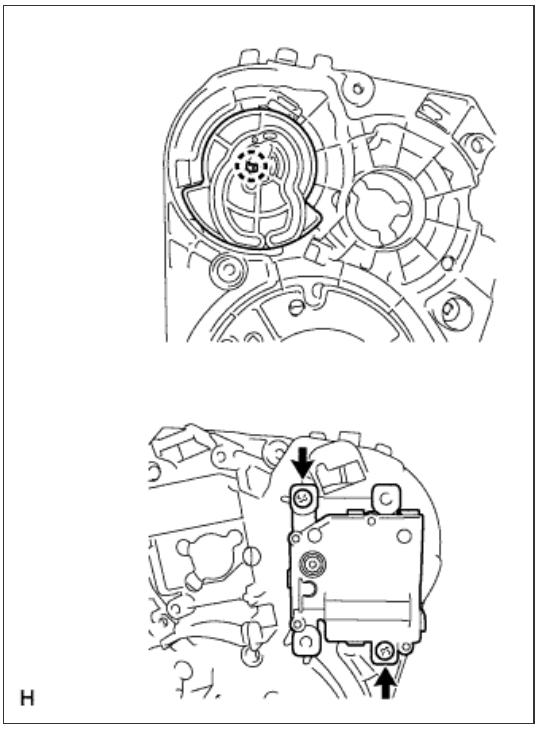


d. Remove the front air mix damper control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.


NOTICE:

Be careful not to damage the claw of the plate.

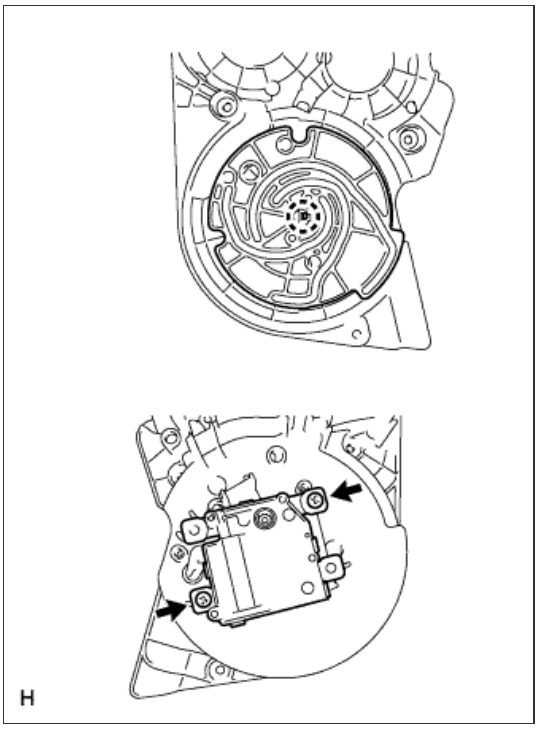

14. REMOVE SERVO MOTOR


a. Remove the 4 screws and servo motor unit.

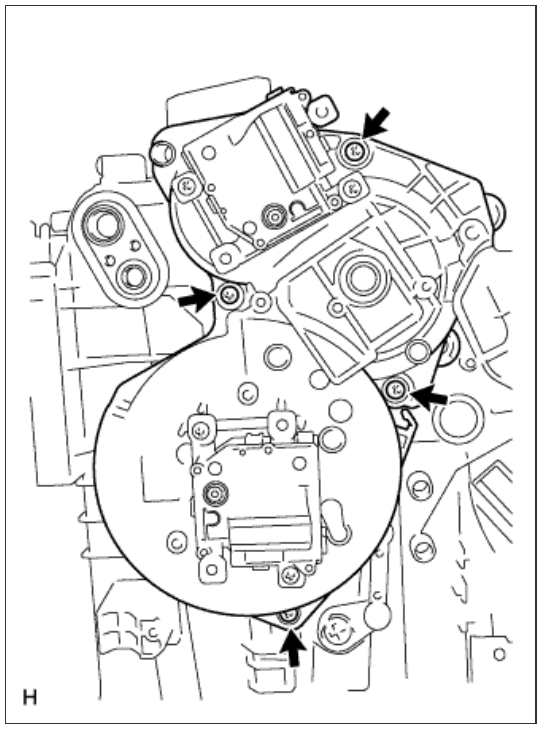

b. Detach the 3 claws and remove the plate.

NOTICE:

Be careful not to damage the claw of the plate.

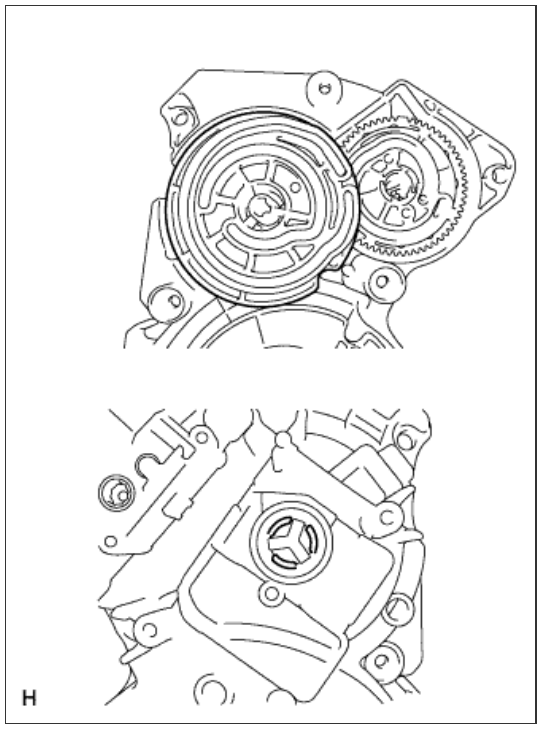


c. Remove the front mode control servo motor LH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

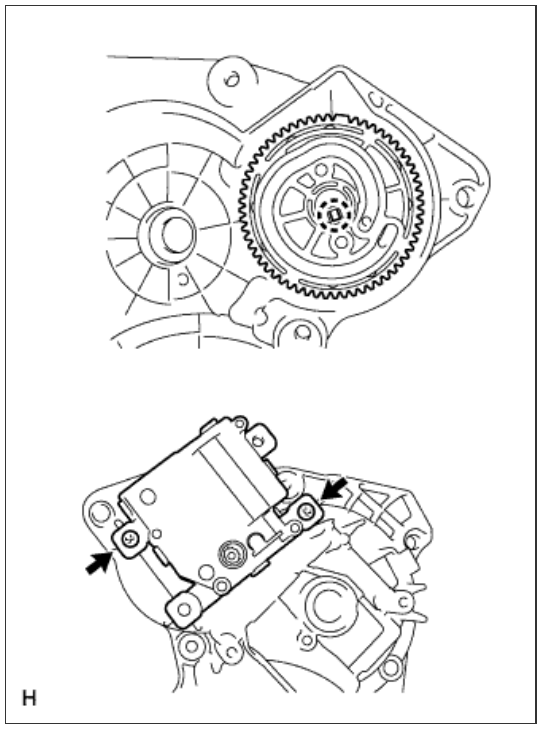


d. Remove the front air mix damper control servo motor LH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.


NOTICE:

Be careful not to damage the claw of the plate.

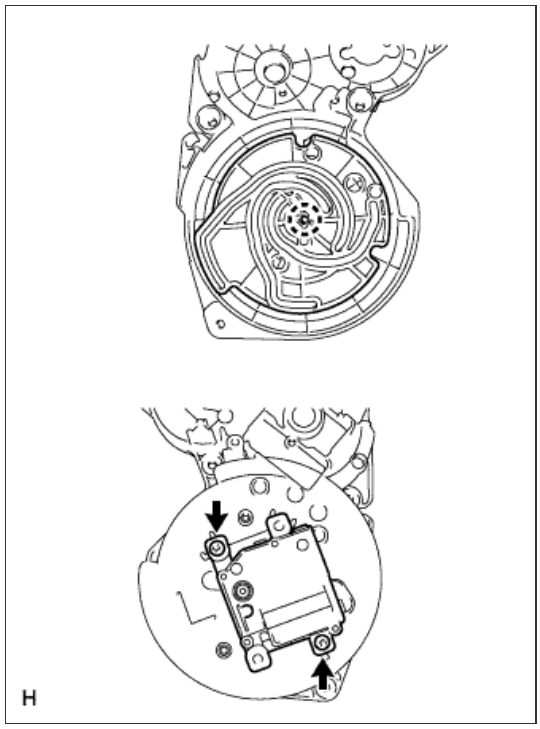


15. REMOVE SERVO MOTOR

a. Remove the 3 screws and servo motor unit.

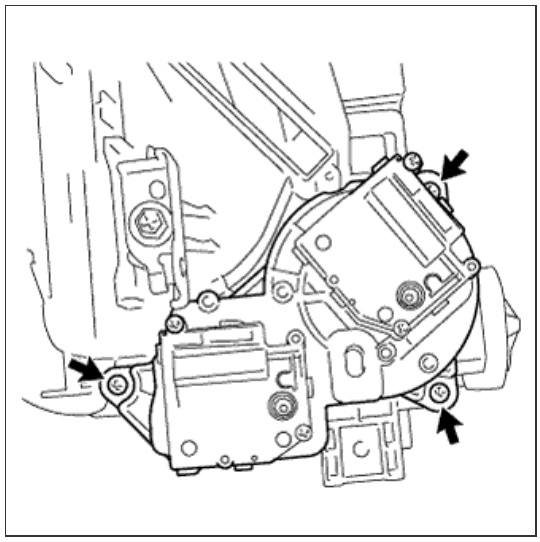

b. Remove the rear mode control servo motor.

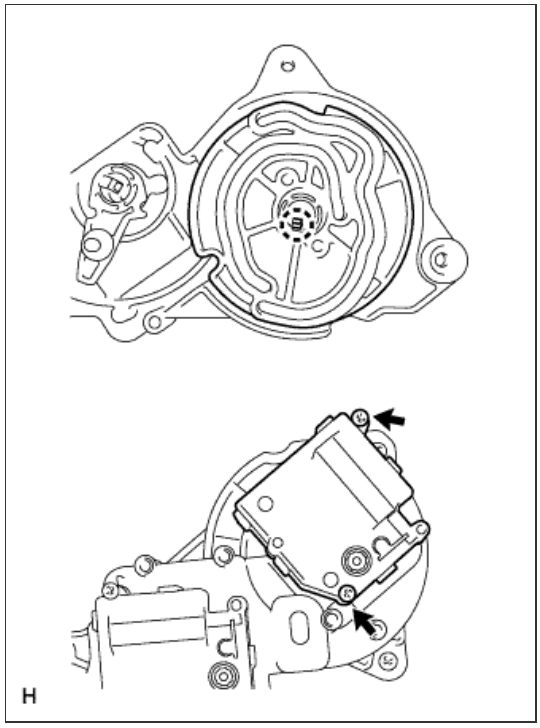

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.


c. Remove the rear air mix damper control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the lever and servo motor.

NOTICE:

Be careful not to damage the claw of the lever.

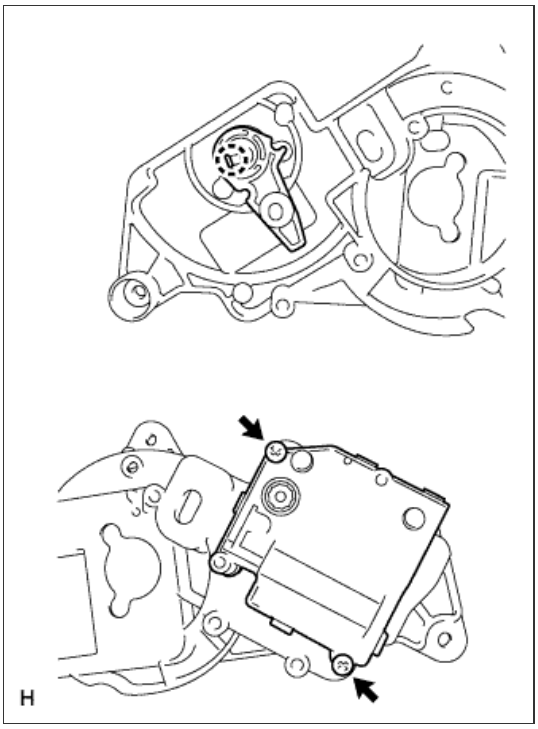


16. REMOVE NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY

a. Remove the 7 screws.

b. Detach the 6 claws and remove the unit case.

c. Remove the evaporator.

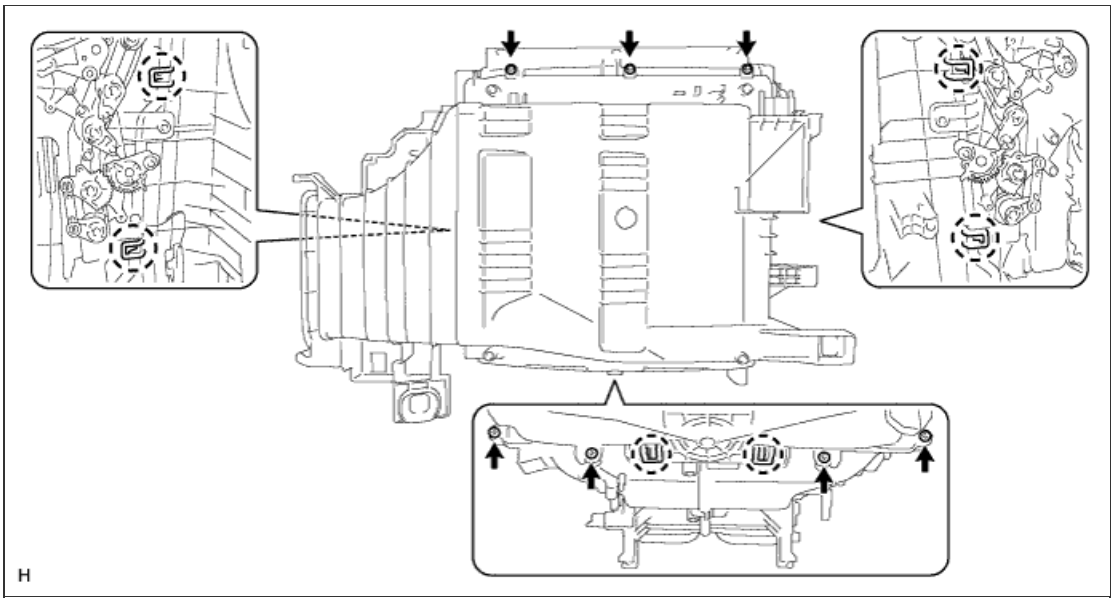

17. REMOVE FRONT EVAPORATOR TEMPERATURE SENSOR


for Preparation Click here

1. INSPECT FRONT EVAPORATOR TEMPERATURE SENSOR

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	-10°C (14°F)	7.30 to 9.10 kΩ
1 - 2	-5°C (23°F)	5.65 to 6.95 kΩ
1 - 2	0°C (32°F)	4.40 to 5.35 kΩ
1 - 2	5°C (41°F)	3.40 to 4.15 kΩ
1 - 2	10°C (50°F)	2.70 to 3.25 kΩ
1 - 2	15°C (59°F)	2.14 to 2.58 kΩ
1 - 2	20°C (68°F)	1.71 to 2.05 kΩ
1 - 2	25°C (77°F)	1.38 to 1.64 kΩ
1 - 2	30°C (86°F)	1.11 to 1.32 kΩ

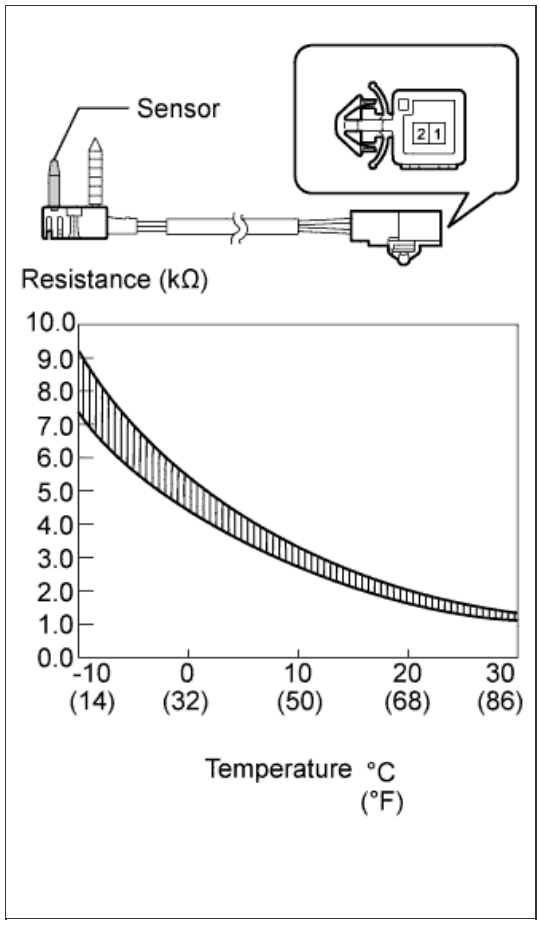

If the result is not as specified, replace the front evaporator temperature sensor.

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be almost the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

for Preparation Click here

1. INSTALL FRONT EVAPORATOR TEMPERATURE SENSOR


NOTICE:

If reusing the evaporator, do not insert the sensor into a location where the sensor was previously inserted.

a. Insert the sensor to a location that is 1 fin to the right or left of its previous location.

Standard Dimension:

Area	Specified Condition
a	50 mm (1.97 in.)
b	34.3 mm (1.35 in.)
c	20.9 mm (1.97 in.)

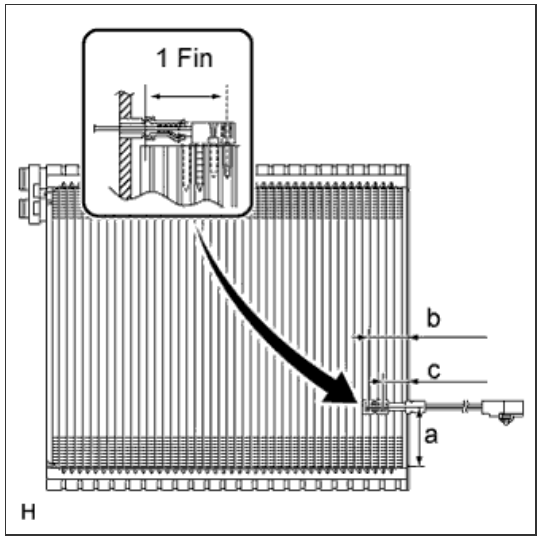


2. INSTALL NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY

a. Install the evaporator.

b. Attach the 6 claws to install the unit case.

c. Install the 7 screws.

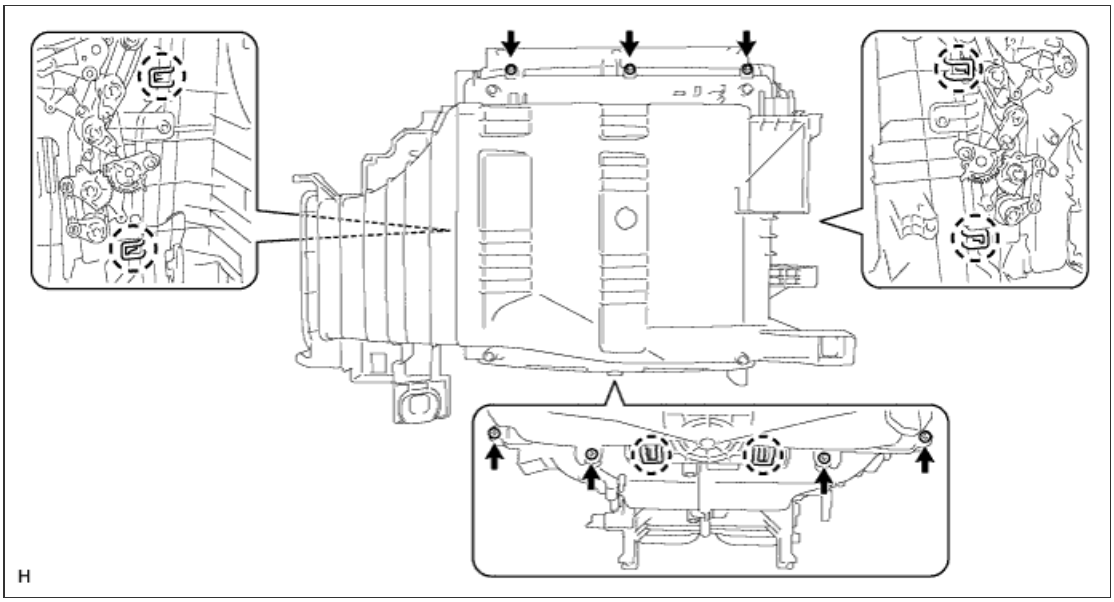


3. INSTALL SERVO MOTOR

a. Install the rear air mix damper control servo motor RH.

i. Attach the claw to install the lever and servo motor.

ii. Install the 2 screws.

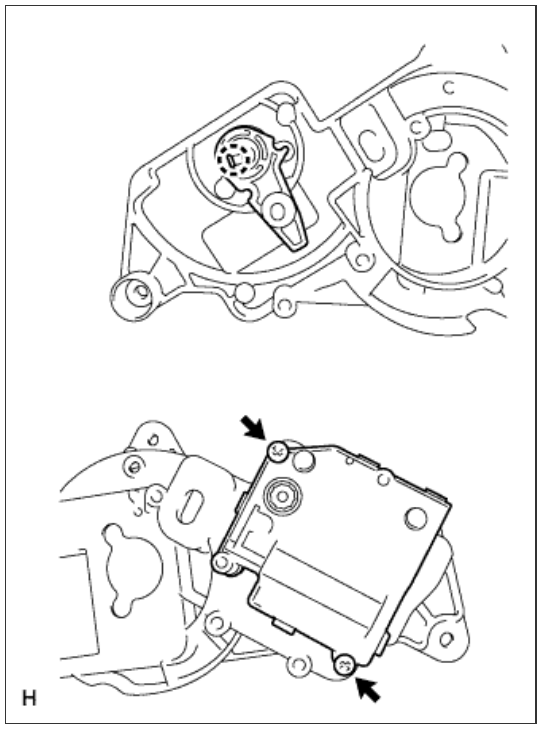


b. Install the rear mode control servo motor.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

c. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

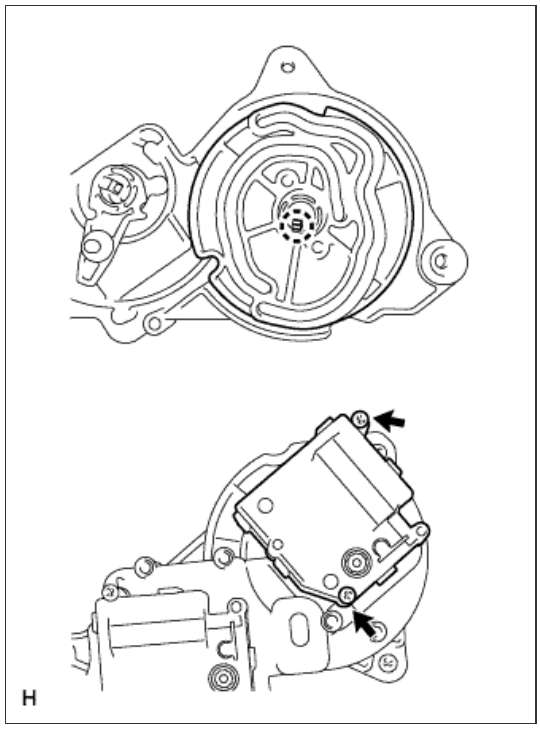

d. Install the 3 screws.

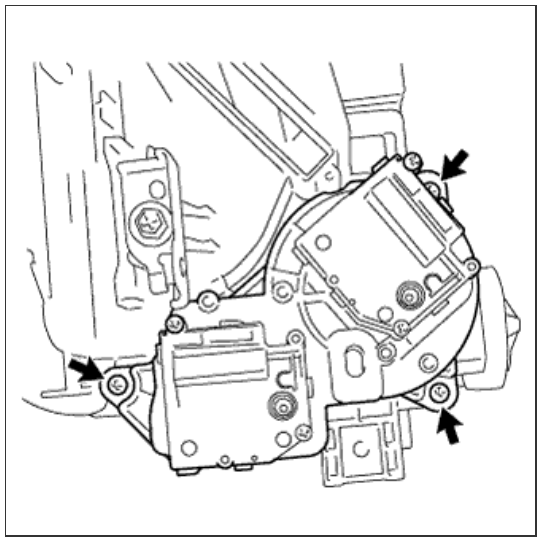


4. INSTALL SERVO MOTOR

a. Install the front air mix damper control servo motor LH.

i. Attach the claw to install the plate and servo motor.


ii. Install the 2 screws.

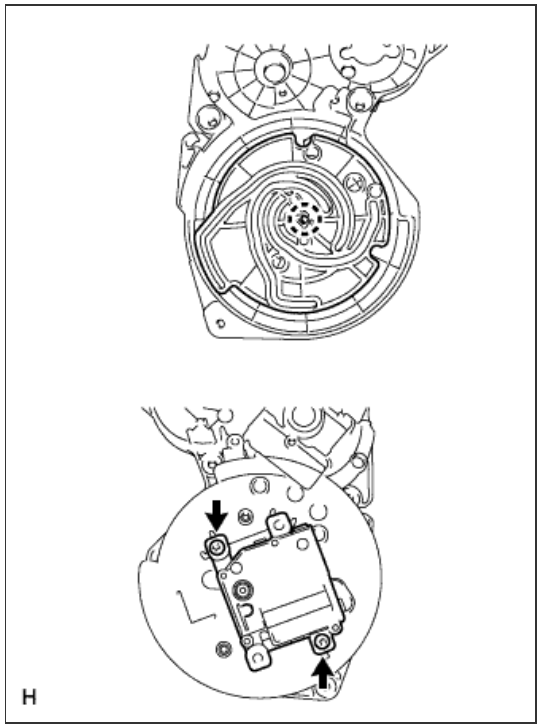

b. Install the front mode control servo motor LH.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

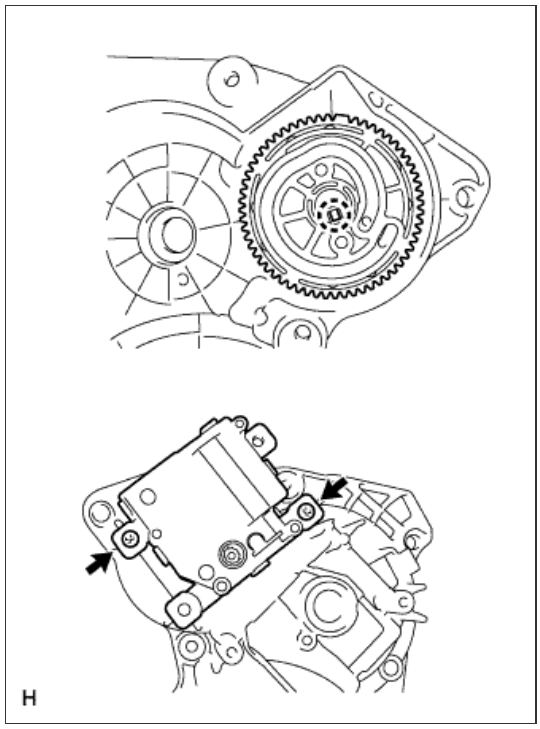


c. Attach the 3 claws to install the plate.

d. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

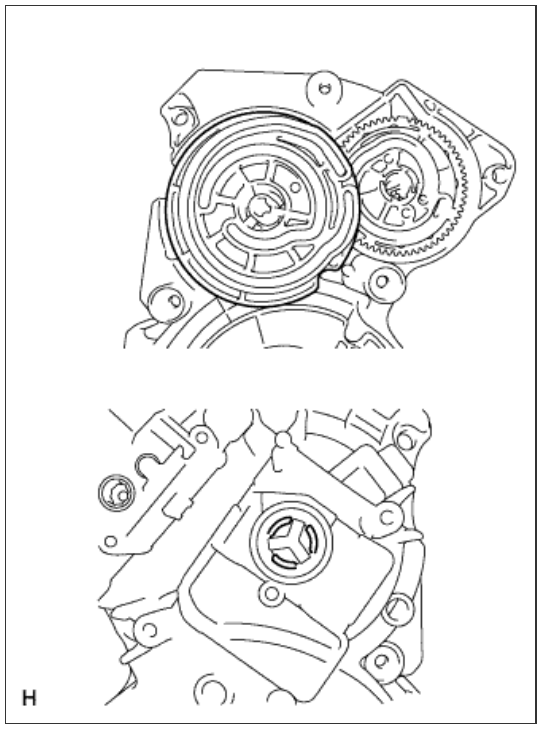


e. Install the 4 screws.

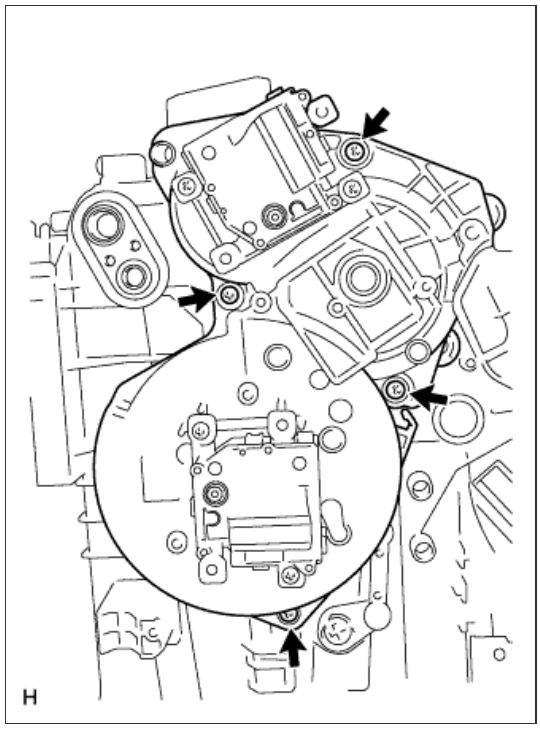

5. INSTALL SERVO MOTOR

a. Install the front air mix damper control servo motor RH.

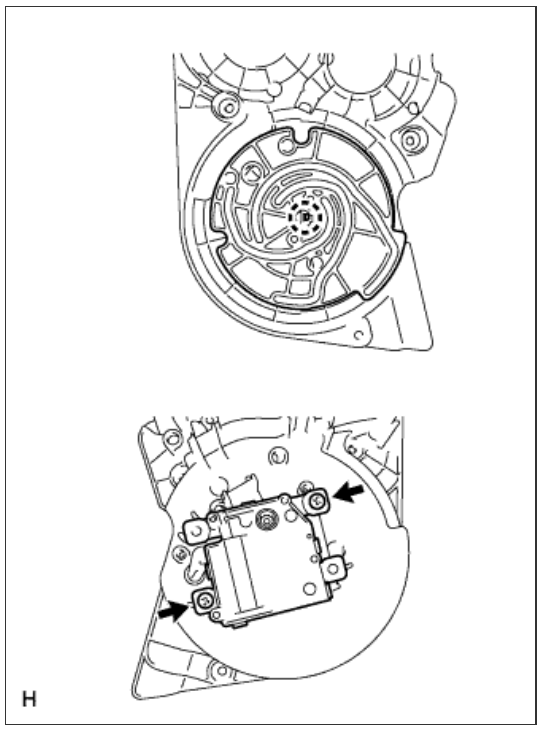


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

b. Install the control air bypass damper control servo motor.

i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

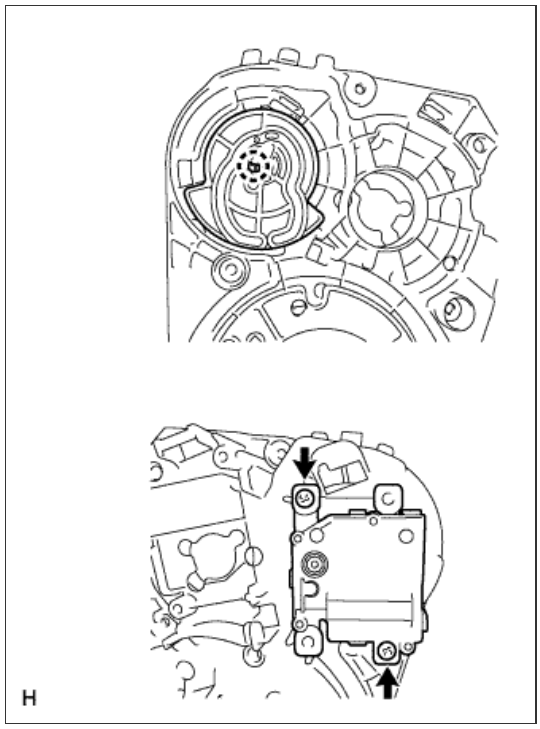


c. for 4 Zone Type:
Install the front mode control servo motor RH.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

d. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

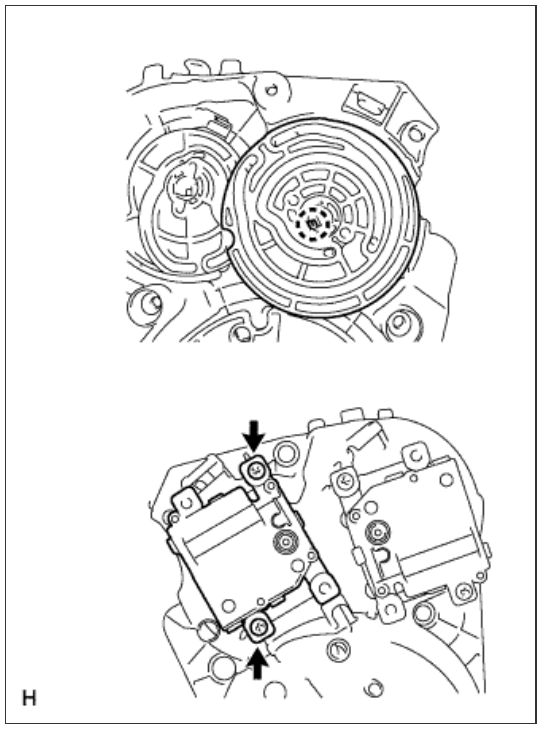


e. Install the 4 screws.

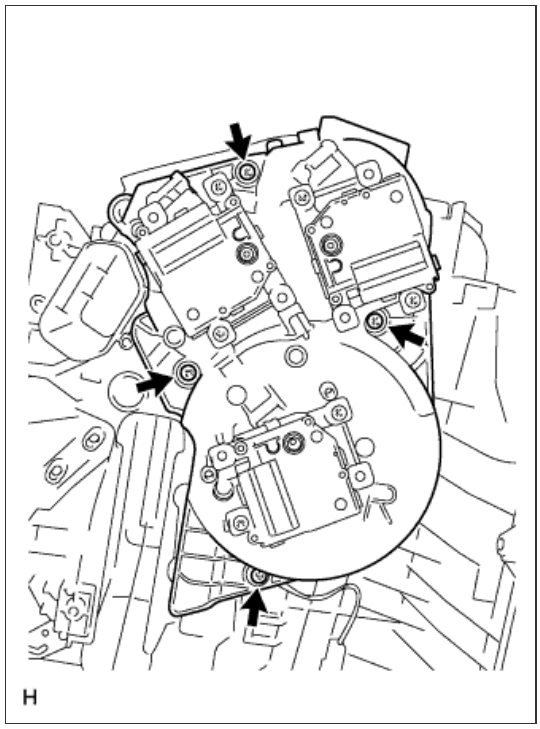

6. INSTALL REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH (for 4 Zone Type)

a. Install the servo motor with the 3 screws.

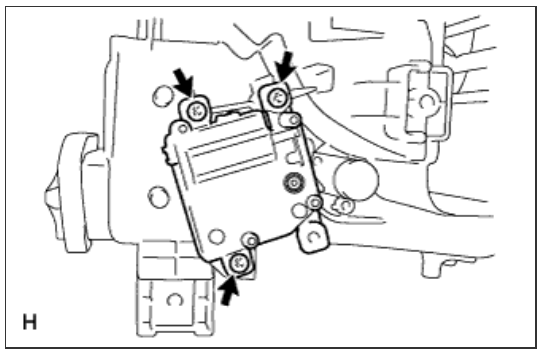

7. INSTALL COOLER EXPANSION VALVE (w/o Cool Box)

a. Sufficiently apply compressor oil to 4 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or eq i alent


b. Install the 2 O-rings to the cooler evaporator.

c. Install the 2 O-rings to the air conditioner tube and accessory assembly.


d. Install the cooler expansion valve and air conditioner tube and accessory assembly to the evaporator.

e. Using a 4 mm hexagon wrench, install the 2 bolts.

Torq e:
3.5 N m 36 kgf cm 31 in. lbf

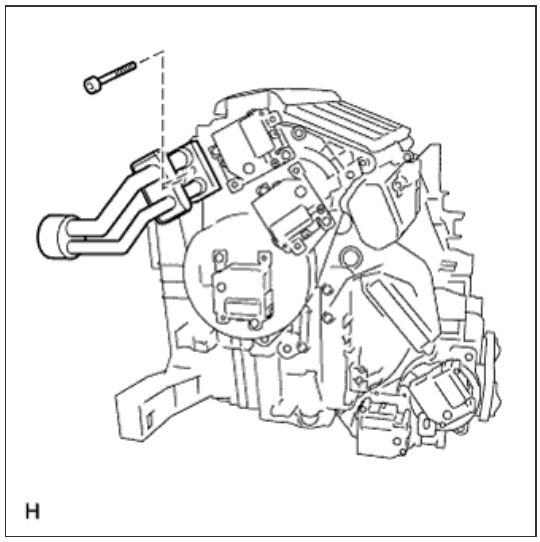

f. Install new packing.

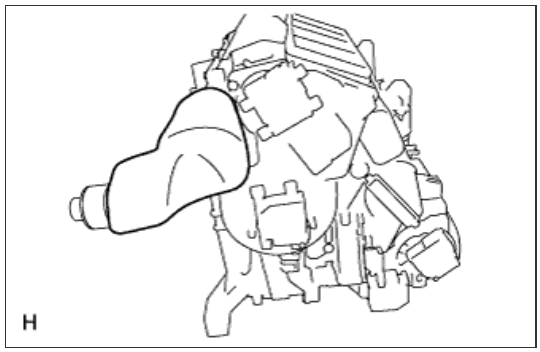

8. INSTALL AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY (w/ Cool Box)

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or eq i alent


b. Install the 2 O-rings to the air conditioner tube and accessory assembly.

c. Install the air conditioner tube and accessory assembly to the evaporator.

d. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.

Torq e:
3.5 N m 36 kgf cm 31 in. lbf

e. Install the bracket with the screw.

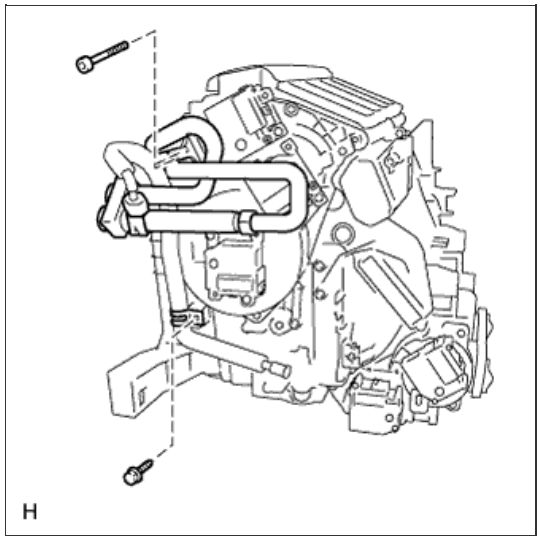

9. INSTALL COOLER EXPANSION VALVE (w/ Cool Box)

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or eq i alent

b. Install the 2 O-rings to the No. 2 connector tube.

c. Install the No. 2 connector tube, expansion valve and No. 3 connector tube.

d. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.

Torq e:
3.5 N m 36 kgf cm 31 in. lbf



e. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.


Compressor oil:
ND-OIL 8 or eq i alent

f. Install the 2 O-rings to the No. 1 connector tube.


g. Install the No. 1 connector tube.

h. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.


Torq e:
3.5 N m 36 kgf cm 31 in. lbf

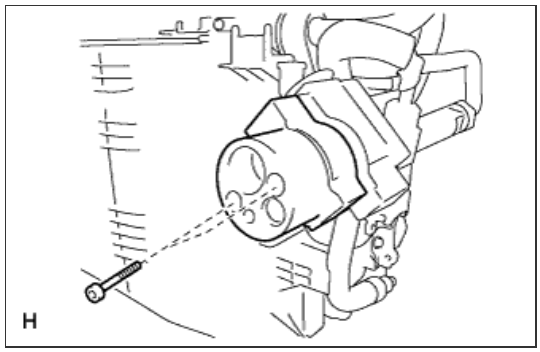


i. Using a 4 mm hexagon wrench, install the bracket with the hexagon bolt and screw.

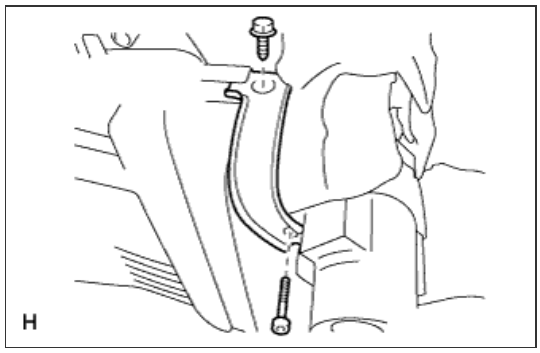

. Install new butyl tape.

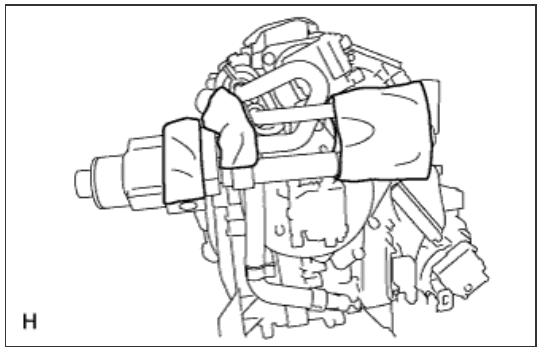


k. Install new packing.

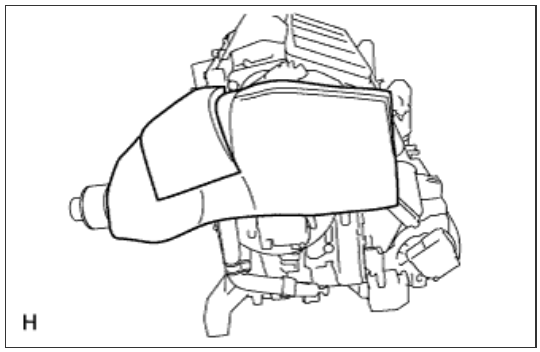

10. INSTALL AIR CONDITIONIN RADIATOR ASSEMBLY

a. Install the radiator.


b. Install the bracket with the screw.

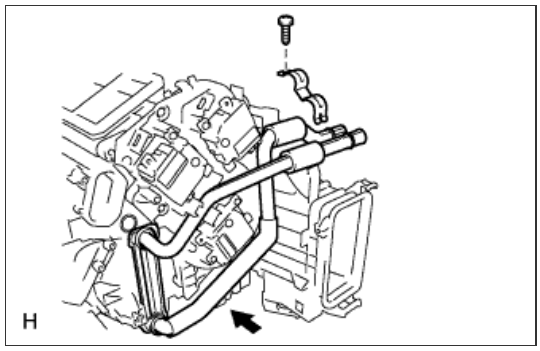

11. INSTALL AIR CONDITIONER HARNESS

a. Attach the clamps to install the harness.


b. Connect the connectors.

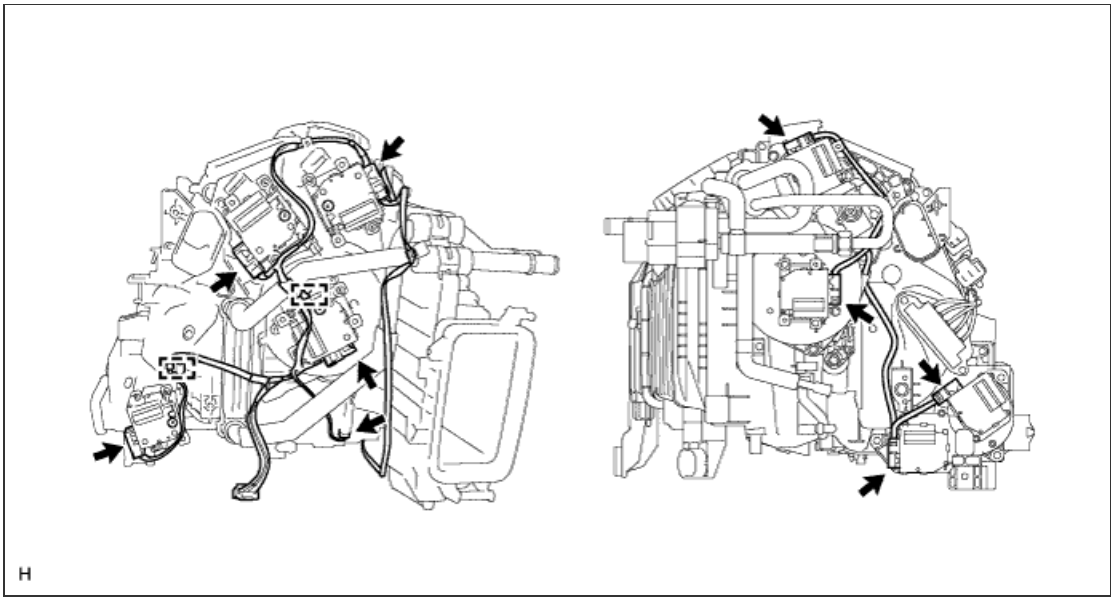

12. INSTALL UIC HEATER ASSEMBLY (w/ PTC Heater)

a. Install the quick heater with the 2 screws.

b. Attach the 3 clamps.

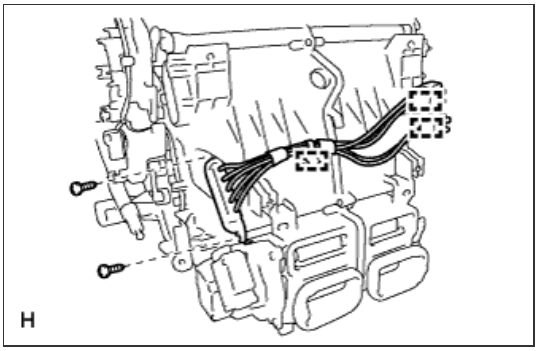

13. INSTALL COOL BOX LI UID TUBE (w/ Cool Box)


a. Lubricate 2 new O-rings with compressor oil and install them to the liquid tube.

Compressor oil:
ND-OIL 8 or eq i alent


b. Connect the liquid tube with the piping clamp.

NOTICE:

After connection, check the claw engagement of the piping clamp.

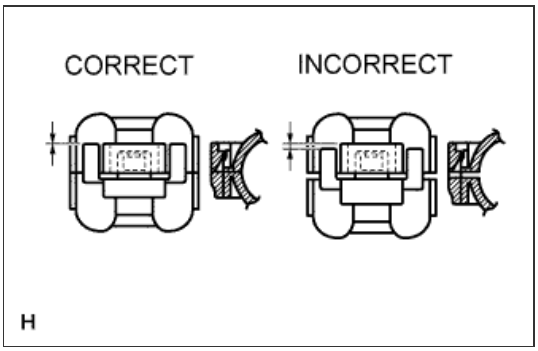


c. Attach the clamp.

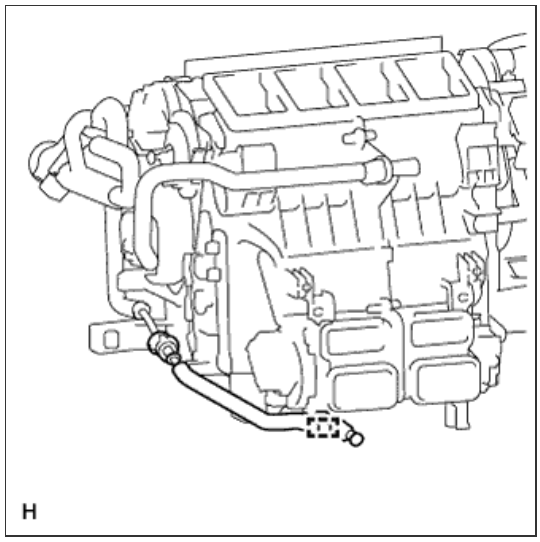


14. INSTALL ASPIRATOR

a. Attach the 2 claws to install the aspirator.

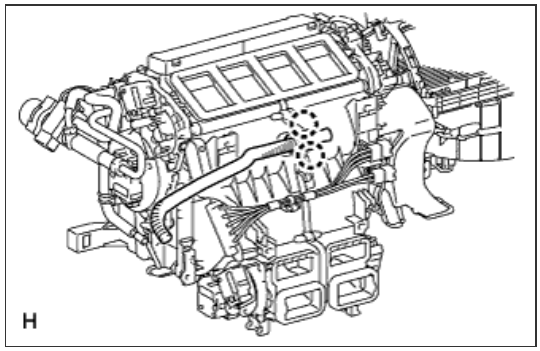


15. INSTALL NO. 4 AIR DUCT SUB-ASSEMBLY

a. Install the duct with the screw.

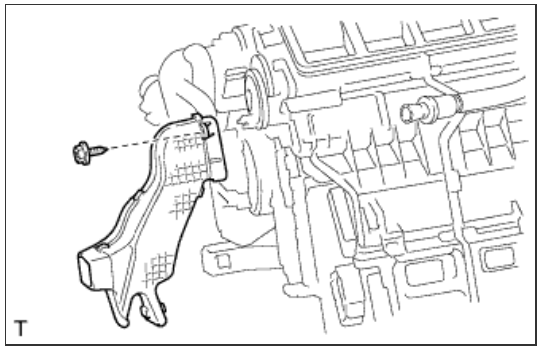


16. INSTALL NO. 5 AIR DUCT SUB-ASSEMBLY

a. Install the duct with the screw.

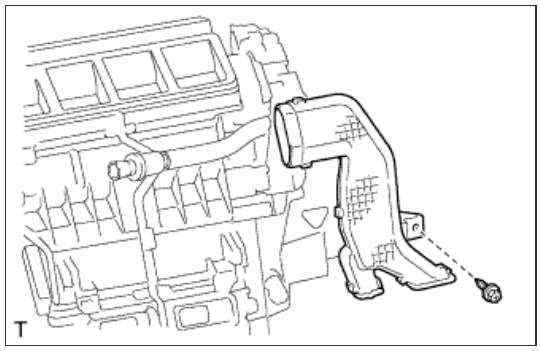

17. INSTALL BLO ER ASSEMBLY

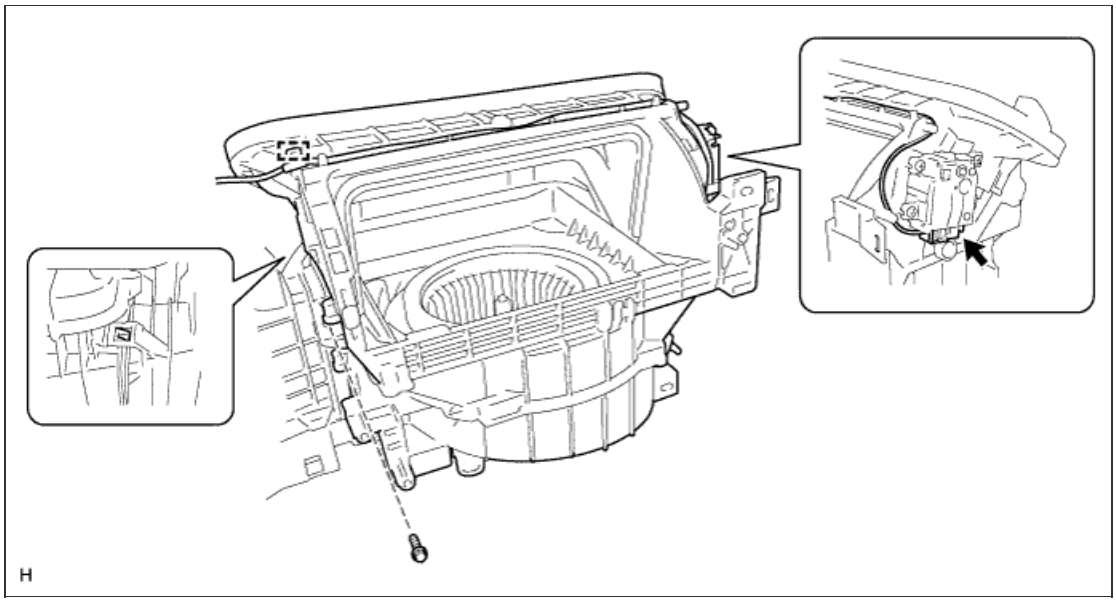

a. Attach the claw to install the blower unit.

b. Connect the connector and clamp.

c. Install the screw.

for Preparation Click here

1. INSTALL AIR CONDITIONING UNIT ASSEMBLY


a. Install the air conditioning unit assembly (Click here).


for Preparation Click here


1. INSTALL AIR CONDITIONING UNIT

a. Install the air conditioning unit (Click here).

for Preparation Click here

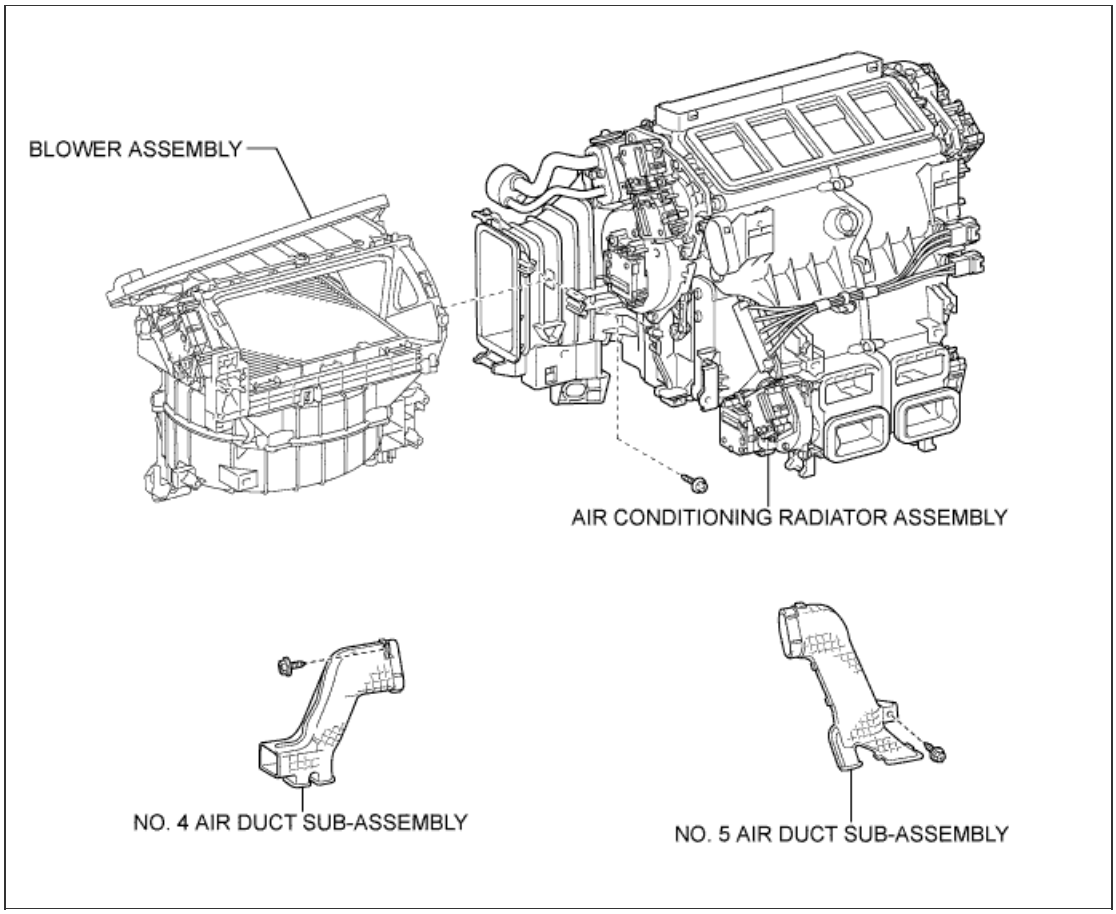

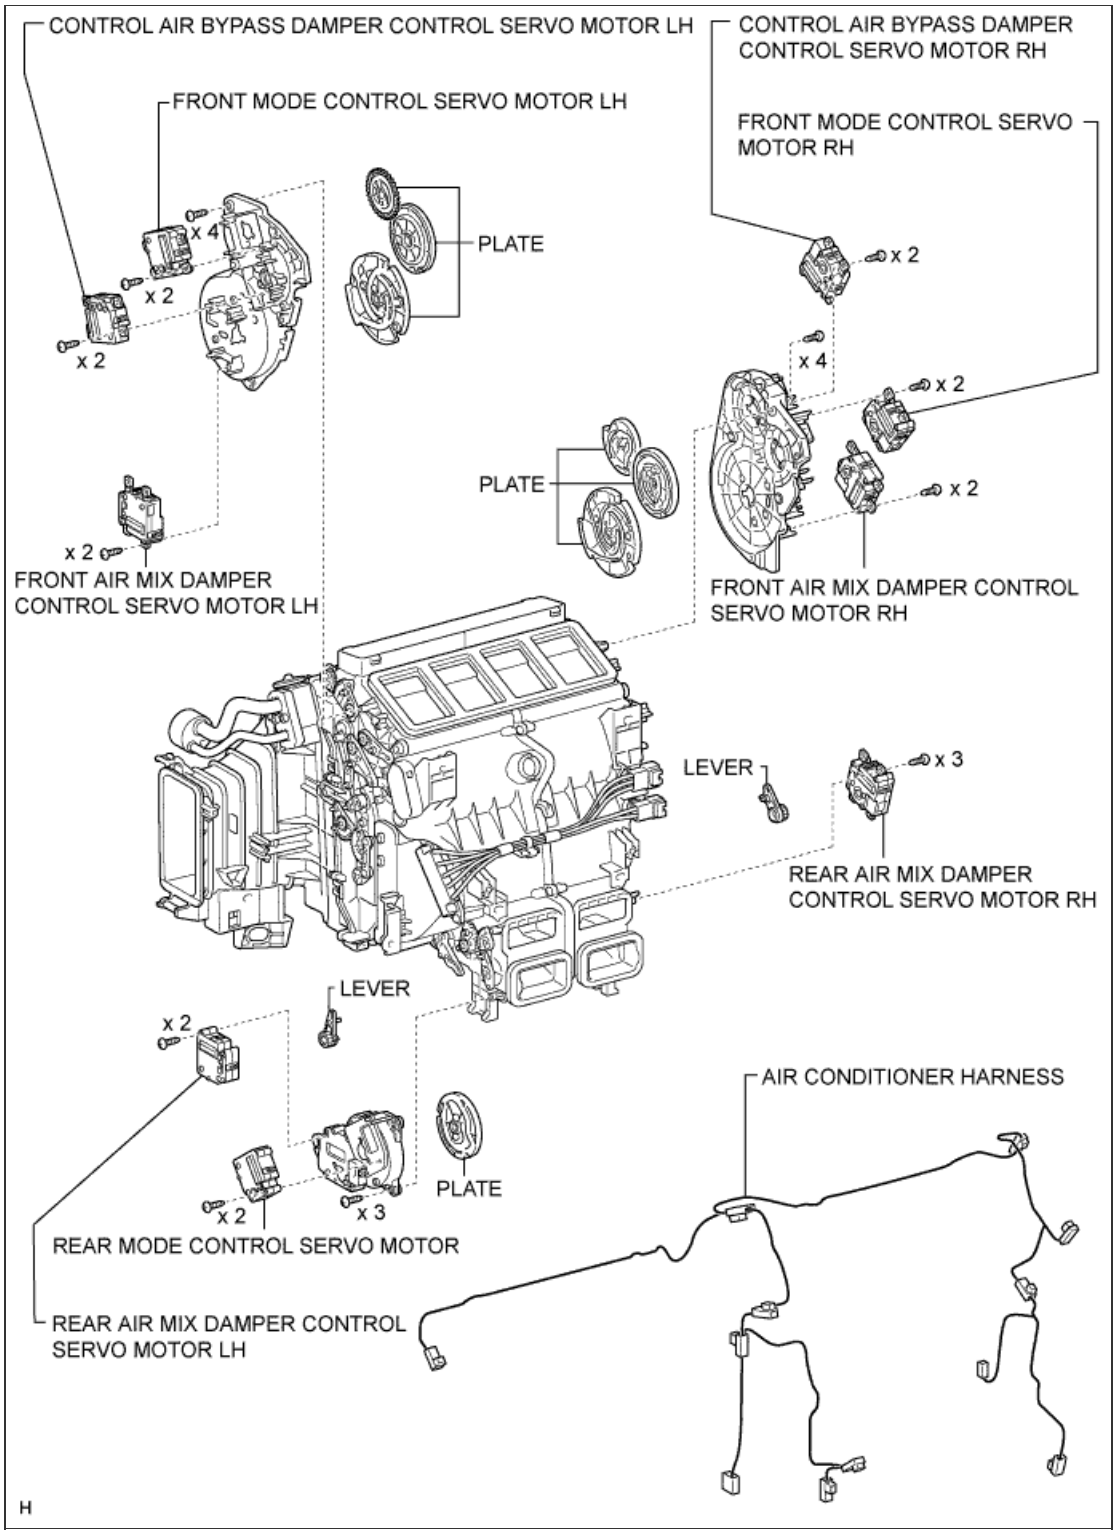
CONTROL AIR BYPASS DAMPER CONTROL SERVO MOTOR LH
CONTROL AIR BYPASS DAMPER CONTROL SERVO MOTOR RH
FRONT MODE CONTROL SERVO MOTOR LH
FRONT MODE CONTROL SERVO MOTOR RH
PLATE
x 4
x 2
x 2
x 2
x 4
x 2
x 2
PLATE
x 2
FRONT AIR MIX DAMPER CONTROL SERVO MOTOR LH
FRONT AIR MIX DAMPER CONTROL SERVO MOTOR RH
LEVER
x 3
REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH
LEVER
x 2
AIR CONDITIONER HARNESS
PLATE
x 2
x 3
REAR MODE CONTROL SERVO MOTOR
REAR AIR MIX DAMPER CONTROL SERVO MOTOR LH
H

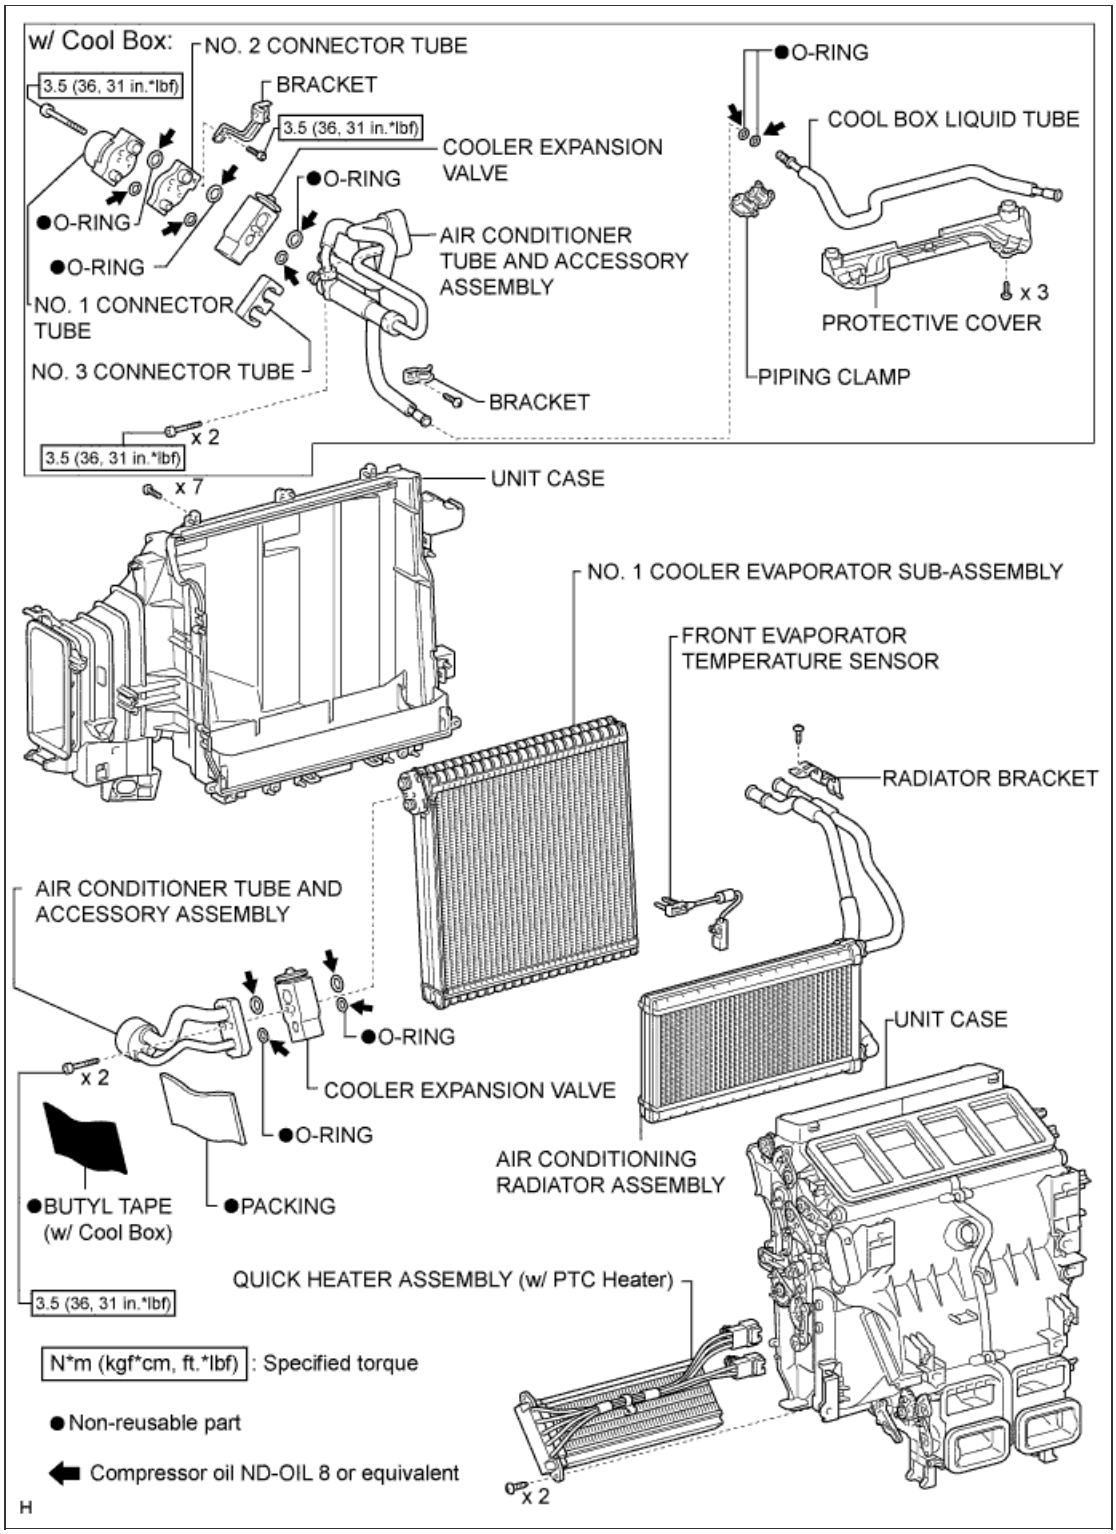
w/ Cool Box:
NO. 2 CONNECTOR TUBE
3.5 (36, 31 in.*lbf)
BRACKET
3.5 (36, 31 in.*lbf)
COOLER EXPANSION VALVE
●O-RING
●O-RING
●O-RING
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
NO. 1 CONNECTOR TUBE
NO. 3 CONNECTOR TUBE
BRACKET
x 2
3.5 (36, 31 in.*lbf)
●O-RING
COOL BOX LIQUID TUBE
x 3
PROTECTIVE COVER
PIPING CLAMP
x 7
UNIT CASE
NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY
FRONT EVAPORATOR TEMPERATURE SENSOR
RADIATOR BRACKET
AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY
●O-RING
x 2
COOLER EXPANSION VALVE
●O-RING
●BUTYL TAPE (w/ Cool Box)
●PACKING
3.5 (36, 31 in.*lbf)
UNIT CASE
AIR CONDITIONING RADIATOR ASSEMBLY
QUICK HEATER ASSEMBLY (w/ PTC Heater)
x 2
N*m (kgf*cm, ft.*lbf) : Specified torque
● Non-reusable part
Compressor oil ND-OIL 8 or equivalent
H

FRONT EVAPORATOR TEMPERATURE SENSOR (for RHD) > REMOVAL

for Preparation Click here

1. REMOVE AIR CONDITIONING UNIT

a. Remove the air conditioning unit assembly (Click here).

FRONT EVAPORATOR TEMPERATURE SENSOR (for RHD) > REMOVAL

for Preparation Click here

1. REMOVE AIR CONDITIONING UNIT

a. Remove the air conditioning unit (Click here).


for Preparation Click here

1. REMOVE BLOWER ASSEMBLY

a. Remove the screw.


b. Disconnect the connector and clamp.

c. Detach the claw and remove the blower unit.

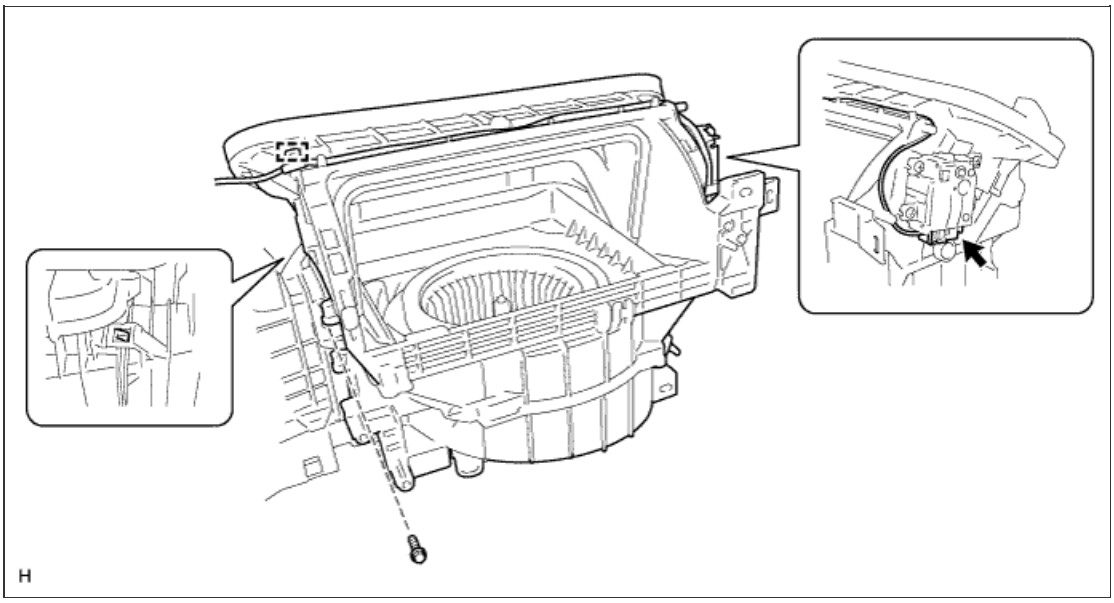


2. REMOVE NO. 4 AIR DUCT SUB-ASSEMBLY

a. Remove the screw and duct.

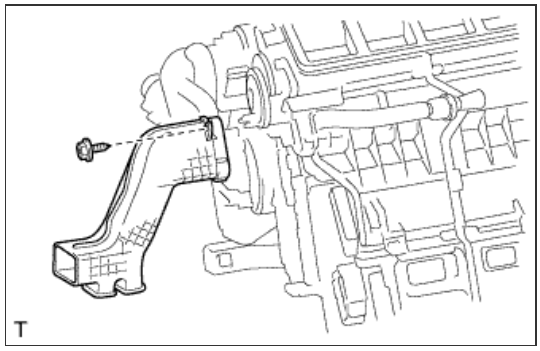


3. REMOVE NO. 5 AIR DUCT SUB-ASSEMBLY

a. Remove the screw and duct.

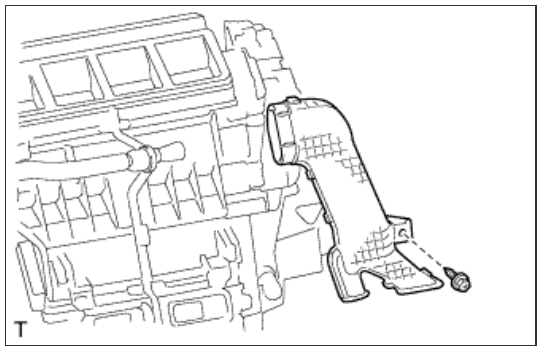

4. REMOVE ASPIRATOR


a. Detach the 2 claws and remove the aspirator.

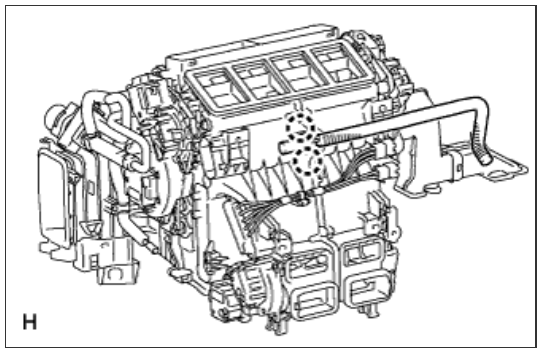

5. REMOVE COOL BOX LIQUID TUBE (w/ Cool Box)

a. Remove the 3 screws.

b. Detach the 2 claws and remove the protective cover.

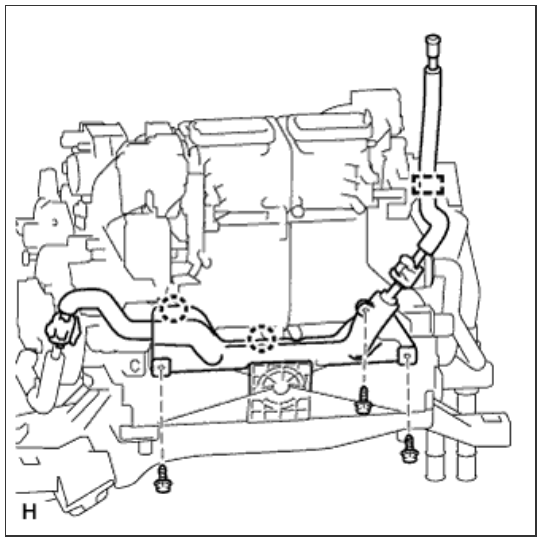


c. Using SST, remove the piping clamp.

SST
09870-00025

i. Attach SST to the piping clamp.

HINT:

Confirm the direction of the piping clamp claw and SST by referring to the illustration on the caution label.

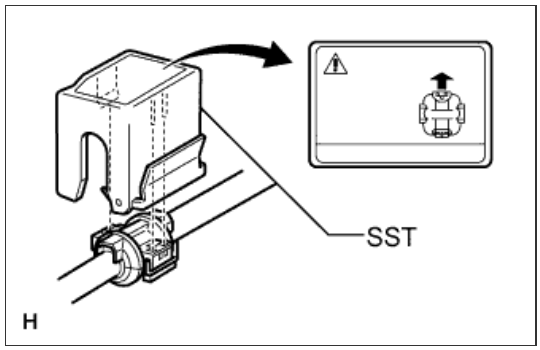


ii. Push down SST and release the clamp lock.

NOTICE:

Be careful not to deform the tubes when pushing SST.

iii. Pull SST slightly and push the release lever, then remove the piping clamp with SST.

iv. Remove the piping clamp from SST.

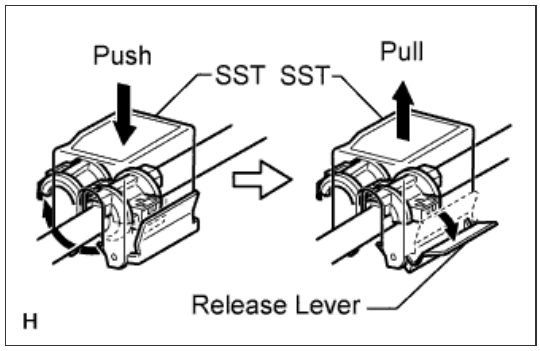

d. Disconnect the tube.

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.


e. Detach the clamp and remove the liquid tube.

f. Remove the 2 O-rings from the liquid tube.


6. REMOVE QUICK HEATER ASSEMBLY (w/ PTC Heater)

a. Detach the 3 clamps.

b. Remove the 2 screws and quick heater.

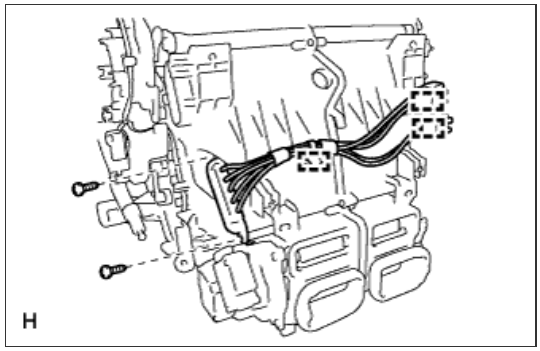

7. REMOVE AIR CONDITIONER HARNESS

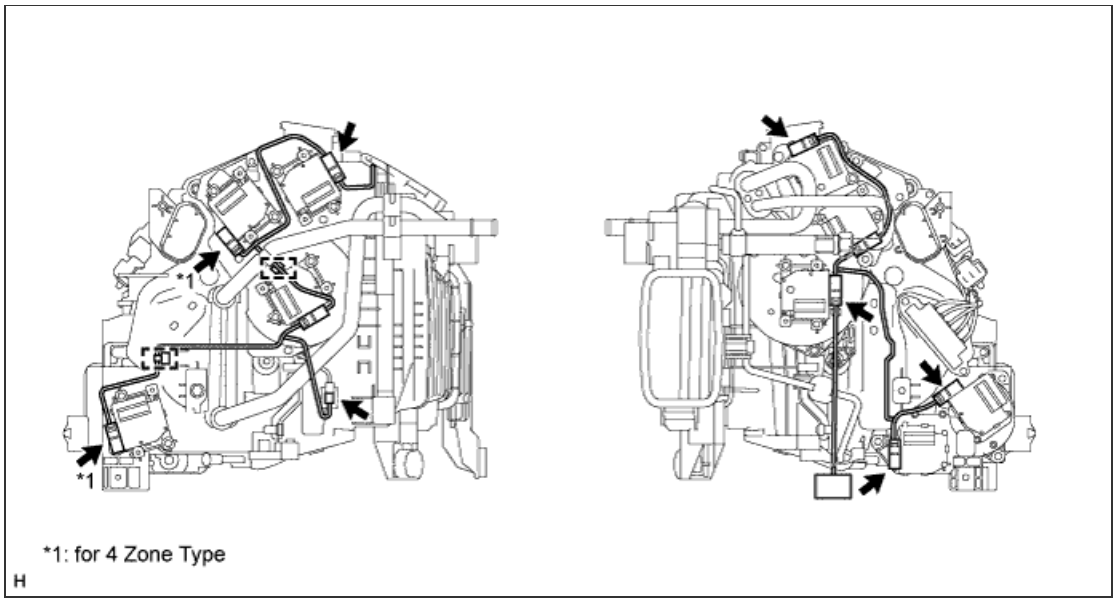


a. Disconnect the connectors.

b. Detach the clamps and remove the harness.

8. REMOVE AIR CONDITIONING RADIATOR ASSEMBLY


a. Remove the screw and radiator bracket.

b. Remove the radiator.

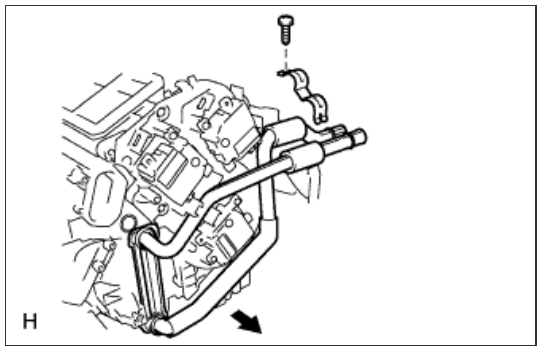


9. REMOVE COOLER EXPANSION VALVE (w/ Cool Box)


a. Remove the packing.

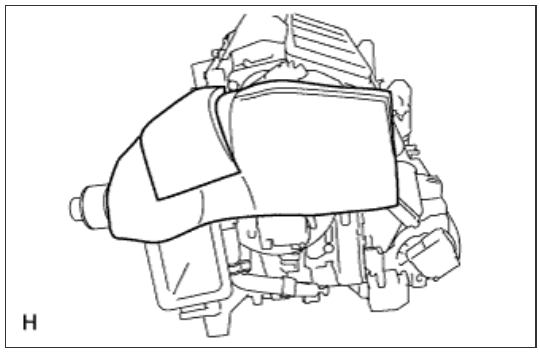

b. Remove the butyl tape.

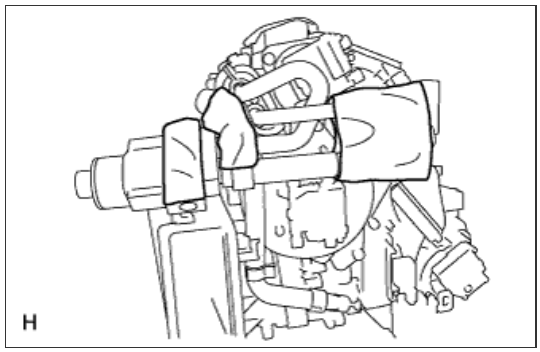


c. Using a 4 mm hexagon wrench, remove the hexagon bolt, screw and bracket.

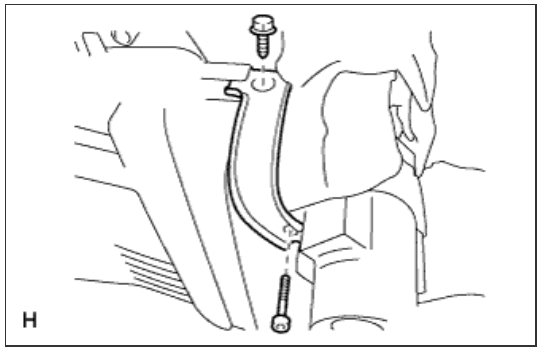

d. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts and No. 1 connector tube.

e. Remove the 2 O-rings from the No. 1 connector tube.

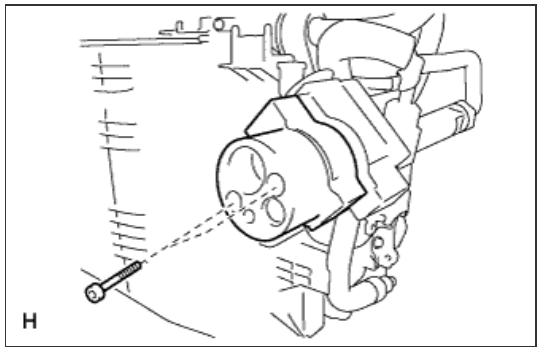

f. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts, No. 2 connector tube, expansion valve and No. 3 connector tube.

g. Remove the 2 O-rings from the No. 2 connector tube.




10. REMOVE AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY (w/ Cool Box)

a. Remove the screw and bracket.


b. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts and air conditioner tube and accessory assembly.

c. Remove the 2 O-rings from the air conditioner tube and accessory assembly.

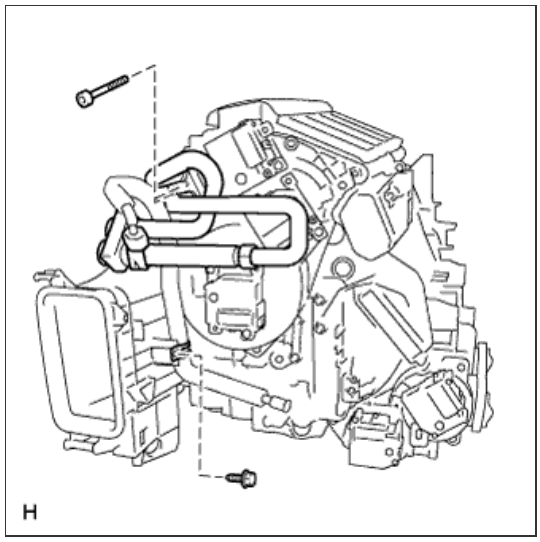

11. REMOVE COOLER EXPANSION VALVE (w/o Cool Box)


a. Remove the packing.

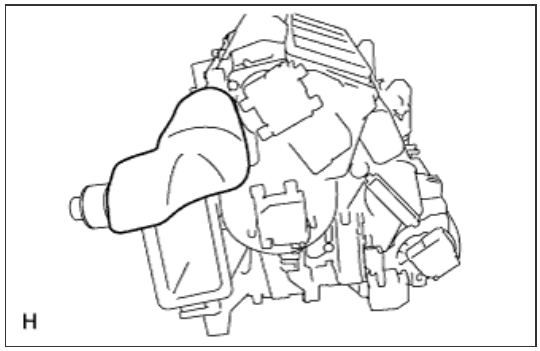

b. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts, air conditioner tube and accessory assembly and expansion valve.


c. Remove the 2 O-rings from the air conditioner tube and accessory assembly.

d. Remove the 2 O-rings from the expansion valve.

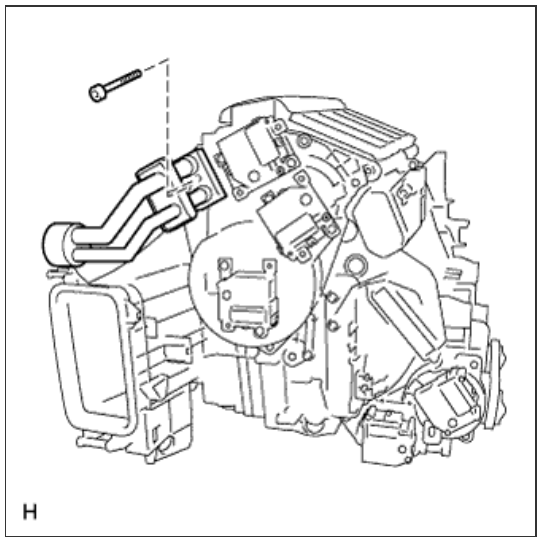


12. REMOVE REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH (for 4 Zone Type)

a. Remove the 3 screws and servo motor.

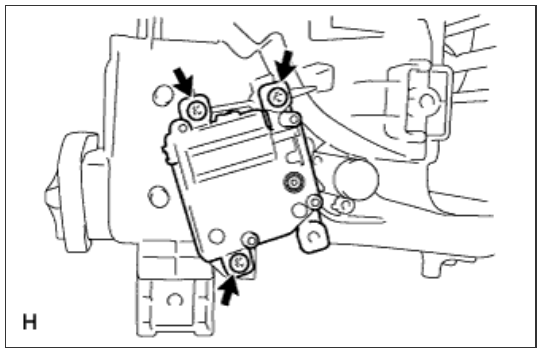

13. REMOVE SERVO MOTOR

a. Remove the 4 screws and servo motor unit.

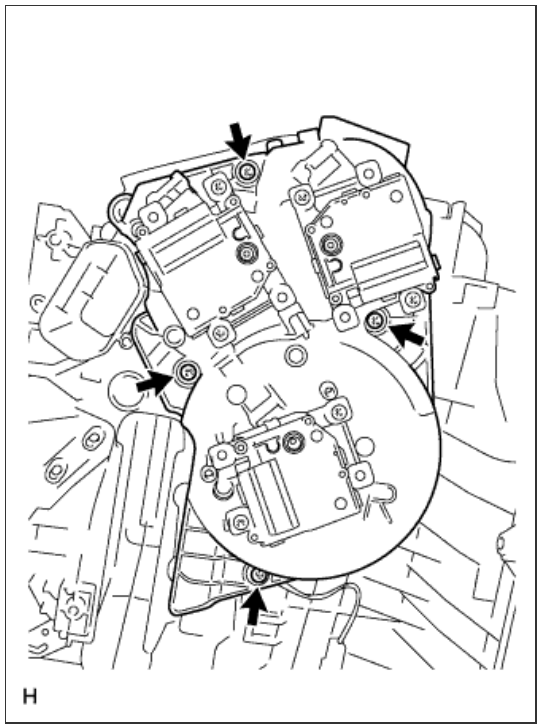


b. for 4 Zone Type:
Remove the front mode control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

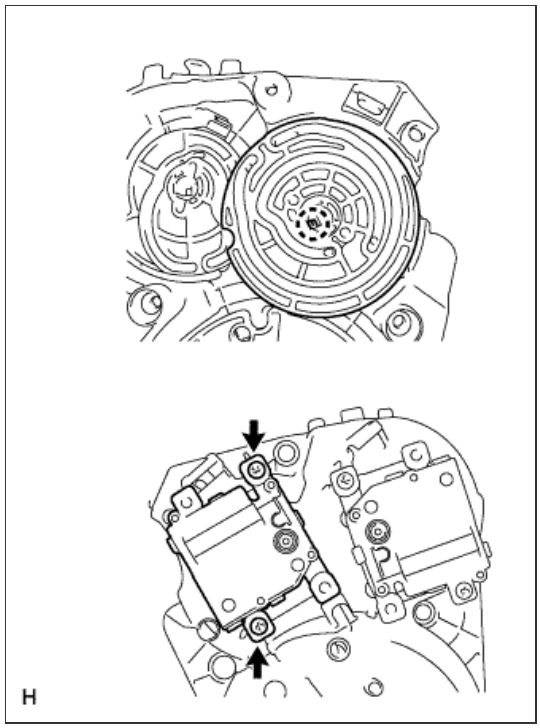


c. Remove the control air bypass damper control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

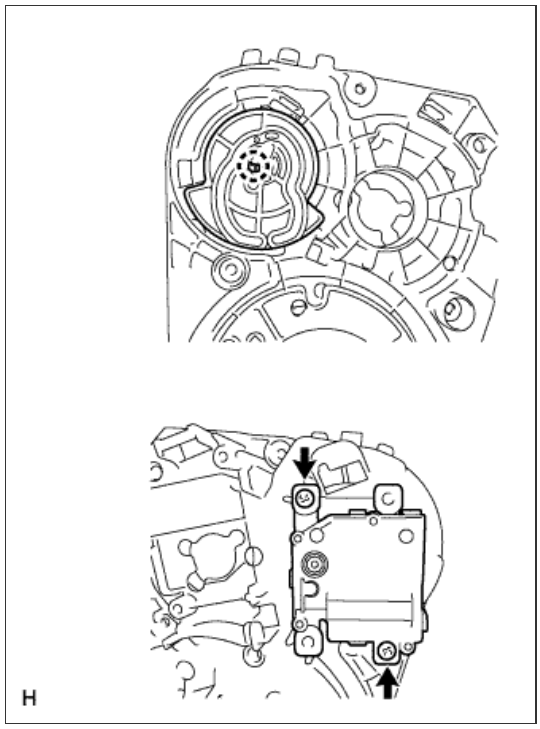


d. Remove the front air mix damper control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.


NOTICE:

Be careful not to damage the claw of the plate.

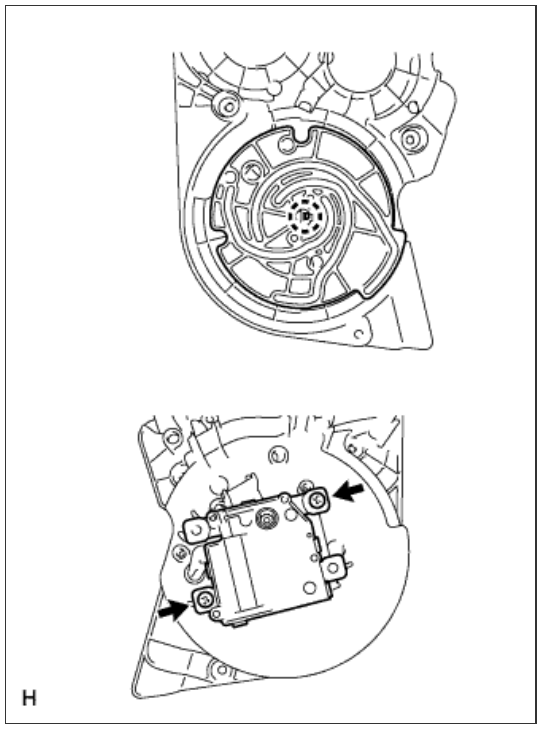


14. REMOVE SERVO MOTOR

a. Remove the 4 screws and servo motor unit.

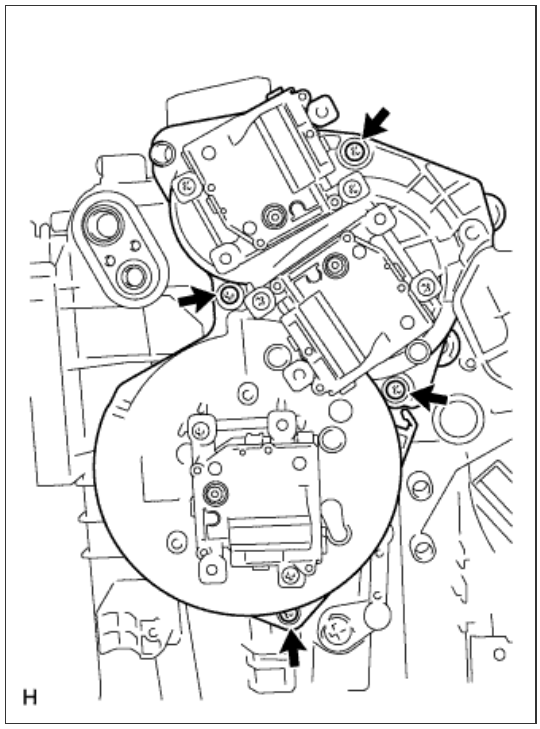

b. Remove the control air bypass damper control servo motor LH.

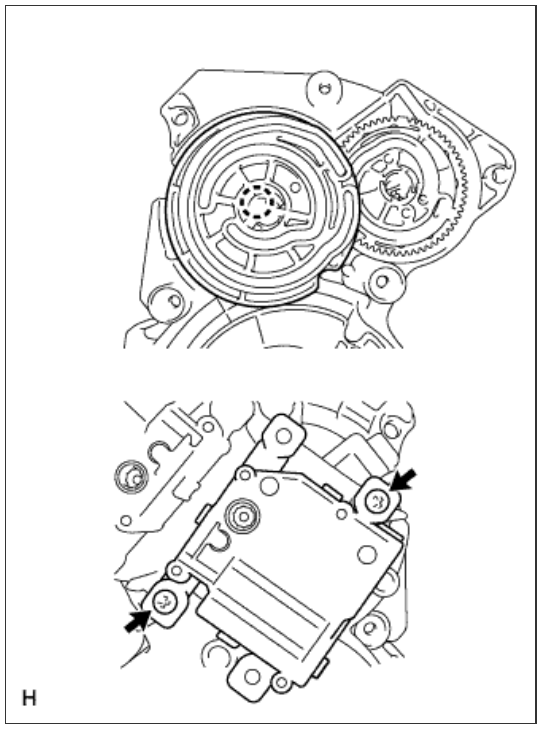

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.


c. Remove the front mode control servo motor LH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.

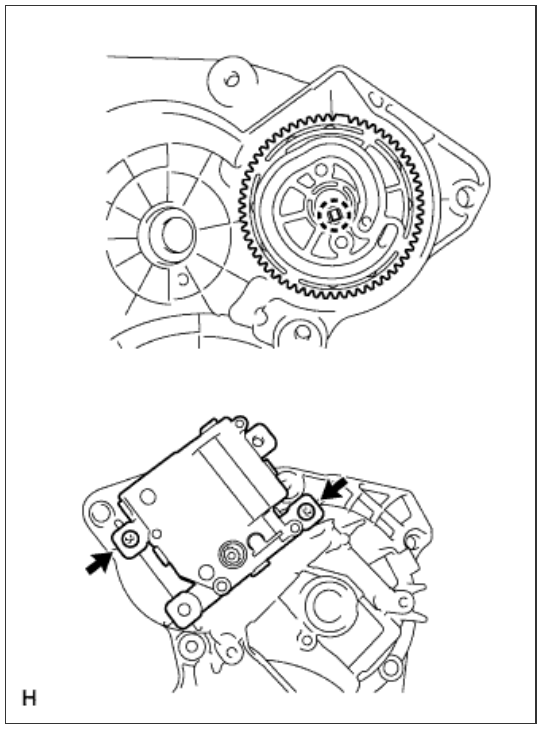


d. Remove the front air mix damper control servo motor LH.

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.


NOTICE:

Be careful not to damage the claw of the plate.

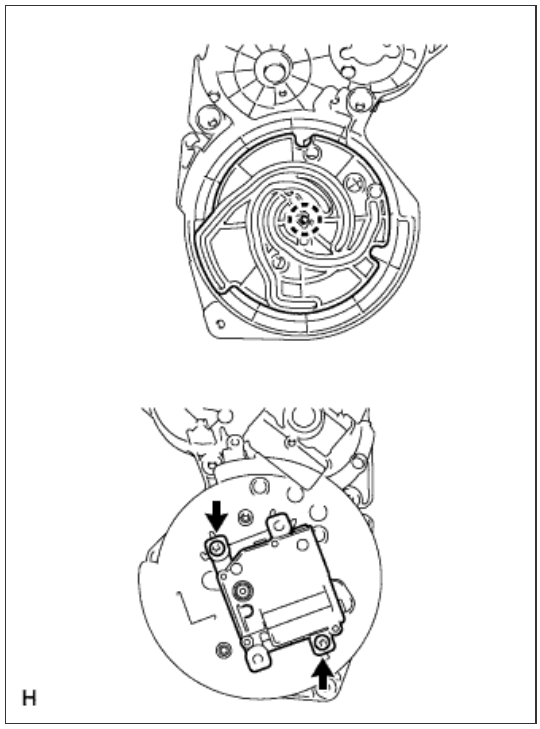


15. REMOVE SERVO MOTOR

a. Remove the 3 screws and servo motor unit.

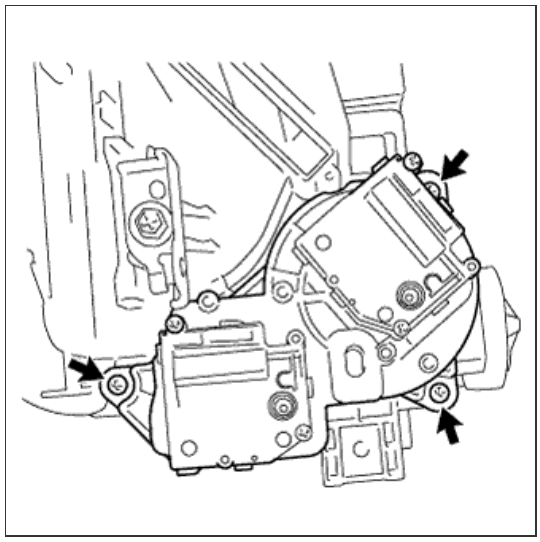

b. Remove the rear mode control servo motor.

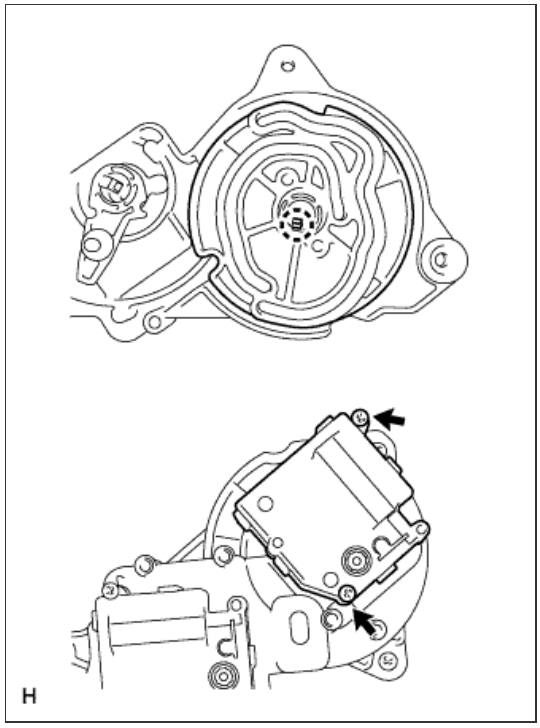

i. Remove the 2 screws.

ii. Detach the claw and remove the plate and servo motor.

NOTICE:

Be careful not to damage the claw of the plate.


c. Remove the rear air mix damper control servo motor RH.

i. Remove the 2 screws.

ii. Detach the claw and remove the lever and servo motor.

NOTICE:

Be careful not to damage the claw of the lever.

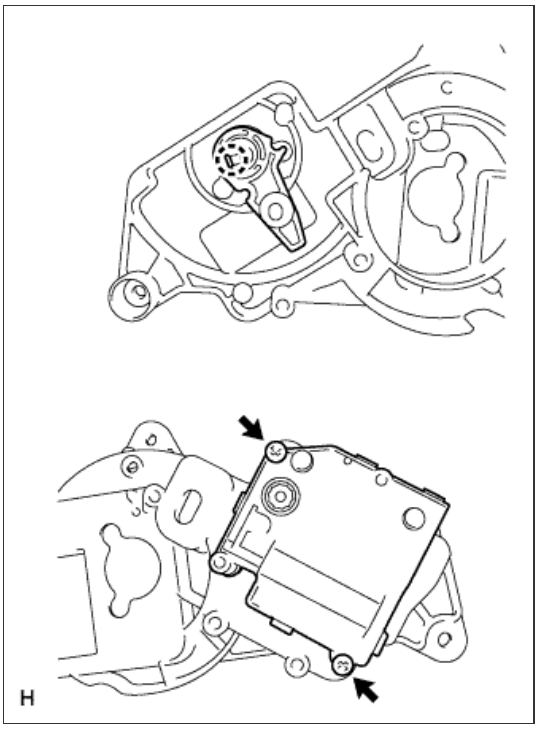


16. REMOVE NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY

a. Remove the 7 screws.

b. Detach the 6 claws and remove the unit case.

c. Remove the evaporator.

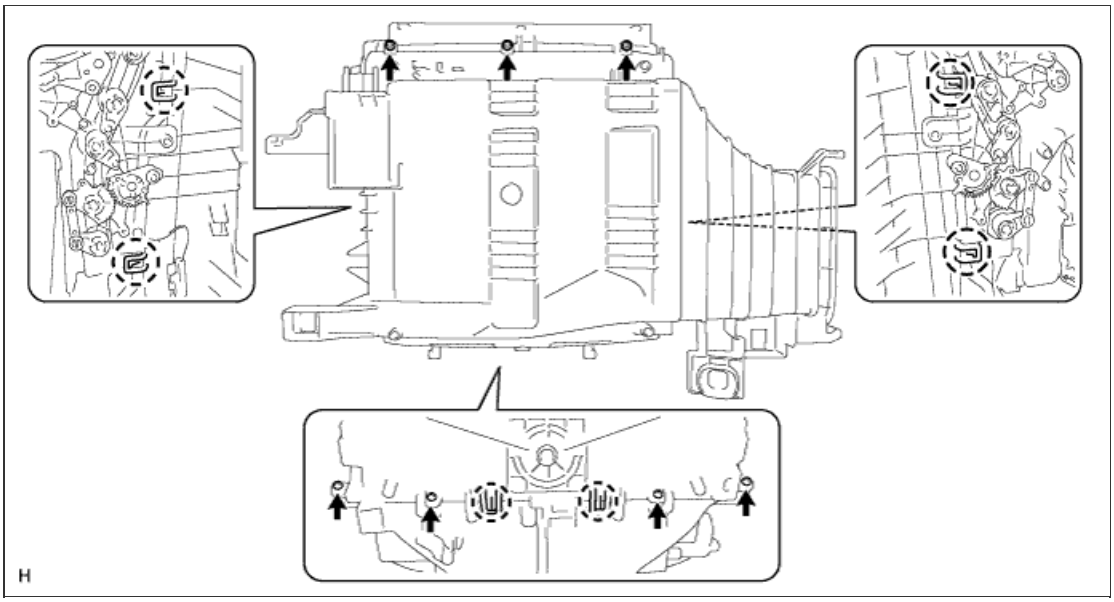

17. REMOVE FRONT EVAPORATOR TEMPERATURE SENSOR

for Preparation Click here

1. INSPECT FRONT EVAPORATOR TEMPERATURE SENSOR

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	-10°C (14°F)	7.30 to 9.10 kΩ
1 - 2	-5°C (23°F)	5.65 to 6.95 kΩ
1 - 2	0°C (32°F)	4.40 to 5.35 kΩ
1 - 2	5°C (41°F)	3.40 to 4.15 kΩ
1 - 2	10°C (50°F)	2.70 to 3.25 kΩ
1 - 2	15°C (59°F)	2.14 to 2.58 kΩ
1 - 2	20°C (68°F)	1.71 to 2.05 kΩ
1 - 2	25°C (77°F)	1.38 to 1.64 kΩ
1 - 2	30°C (86°F)	1.11 to 1.32 kΩ


If the result is not as specified, replace the front evaporator temperature sensor.

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be almost the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

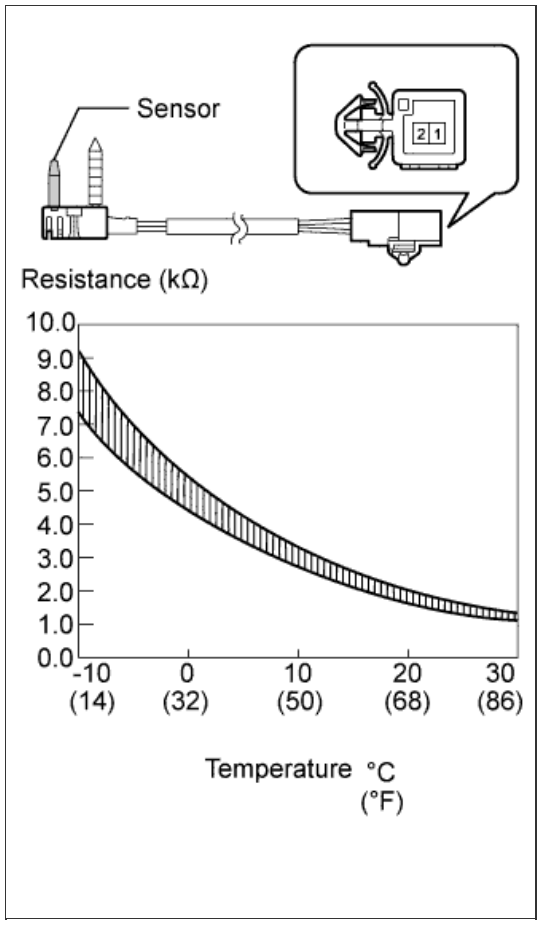

for Preparation Click here

1. INSTALL FRONT EVAPORATOR TEMPERATURE SENSOR


NOTICE:

If reusing the evaporator, do not insert the sensor into a location where the sensor was previously inserted.

a. Insert the sensor to a location that is 1 fin to the right or left of its previous location.

Standard Dimension:

Area	Specified Condition
a	50 mm (1.97 in.)
b	34.3 mm (1.35 in.)
c	20.9 mm (1.97 in.)

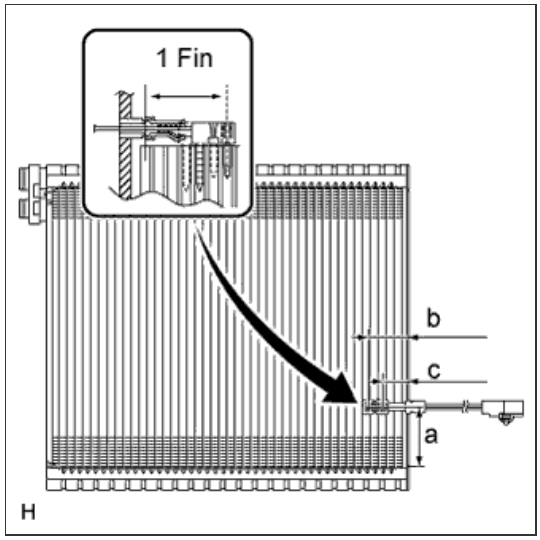


2. INSTALL NO. 1 COOLER EVAPORATOR SUB-ASSEMBLY

a. Install the evaporator.

b. Attach the 6 claws to install the unit case.

c. Install the 7 screws.

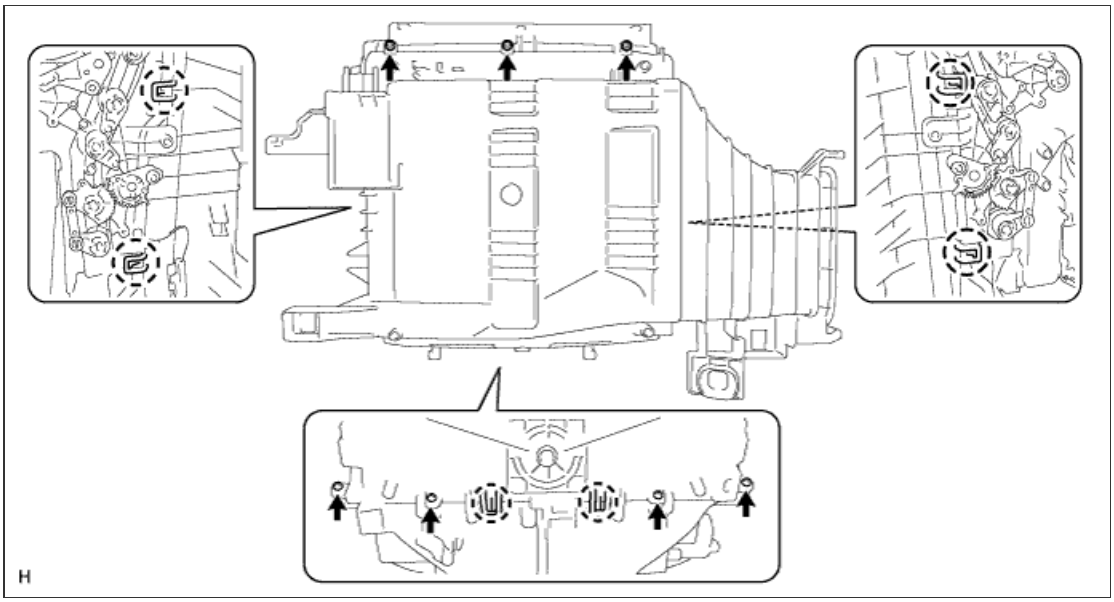


3. INSTALL SERVO MOTOR

a. Install the rear air mix damper control servo motor RH.

i. Attach the claw to install the lever and servo motor.

ii. Install the 2 screws.

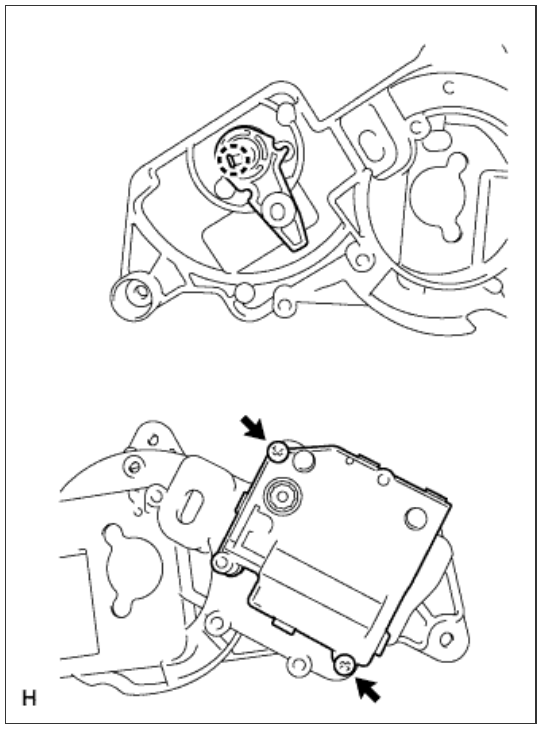


b. Install the rear mode control servo motor.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

c. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

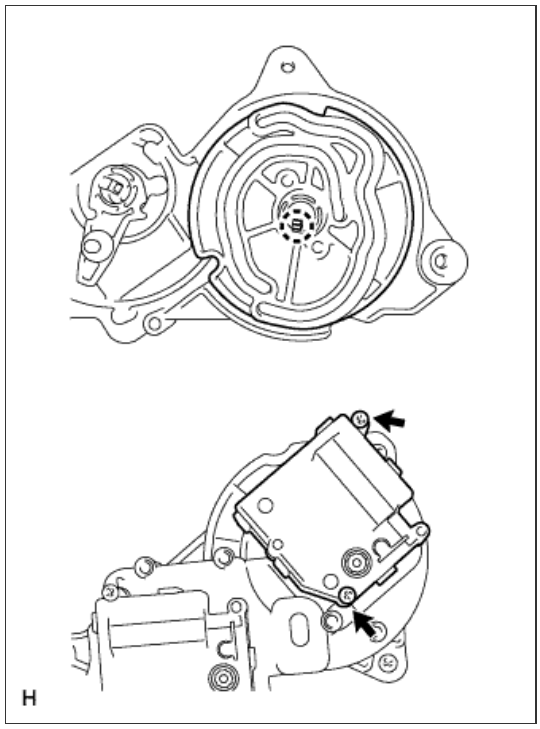

d. Install the 3 screws.

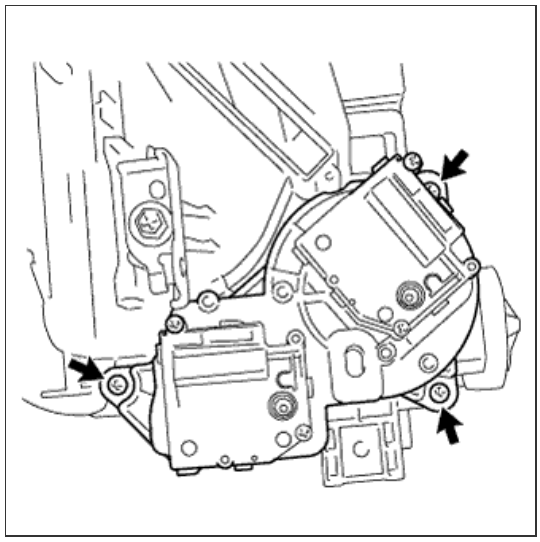


4. INSTALL SERVO MOTOR

a. Install the front air mix damper control servo motor LH.

i. Attach the claw to install the plate and servo motor.


ii. Install the 2 screws.

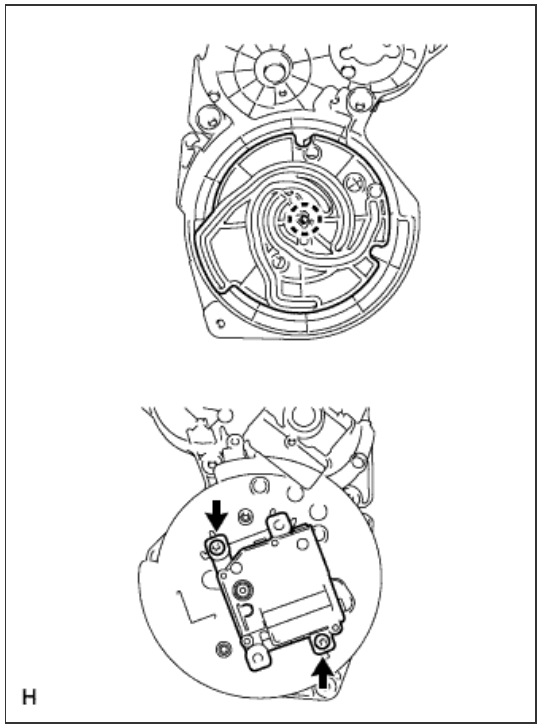

b. Install the front mode control servo motor LH.

i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

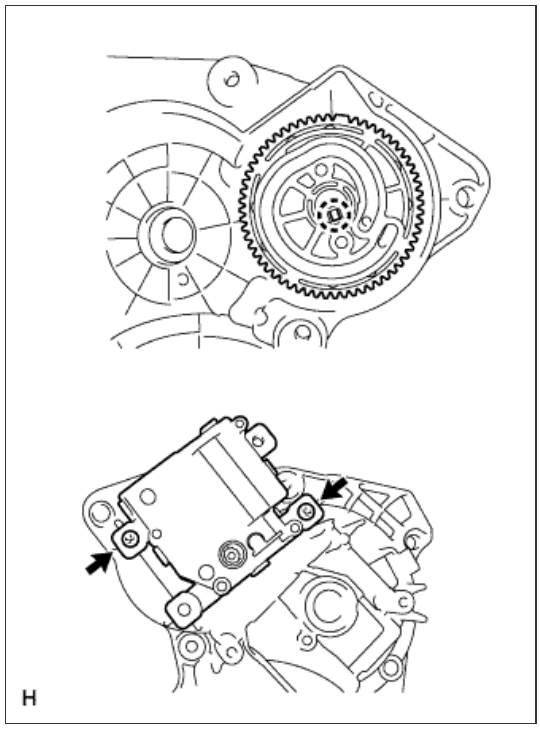


c. Install the control air bypass damper control servo motor LH.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

d. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

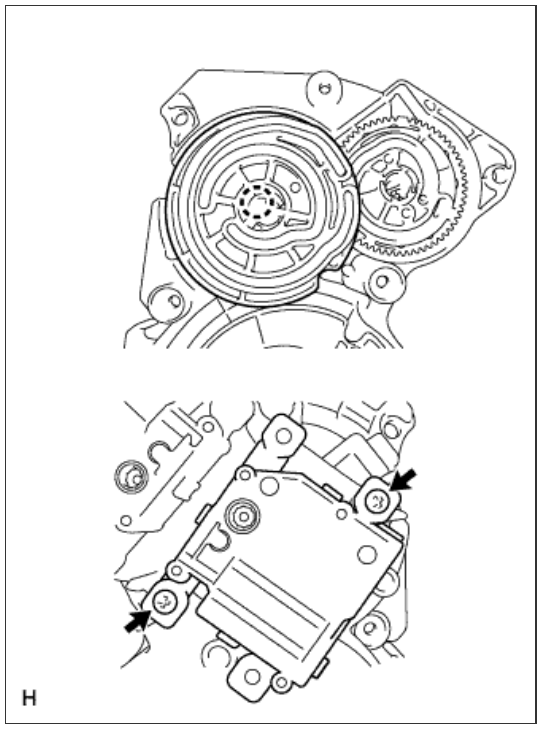


e. Install the 4 screws.

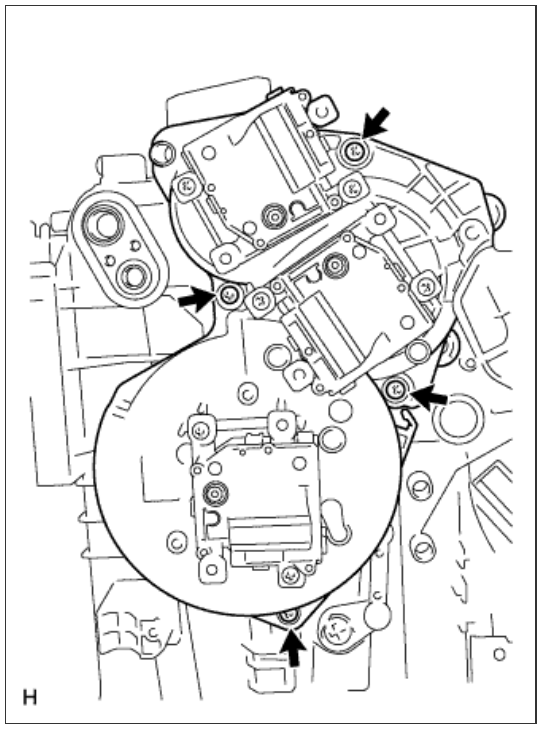

5. INSTALL SERVO MOTOR

a. Install the front air mix damper control servo motor RH.

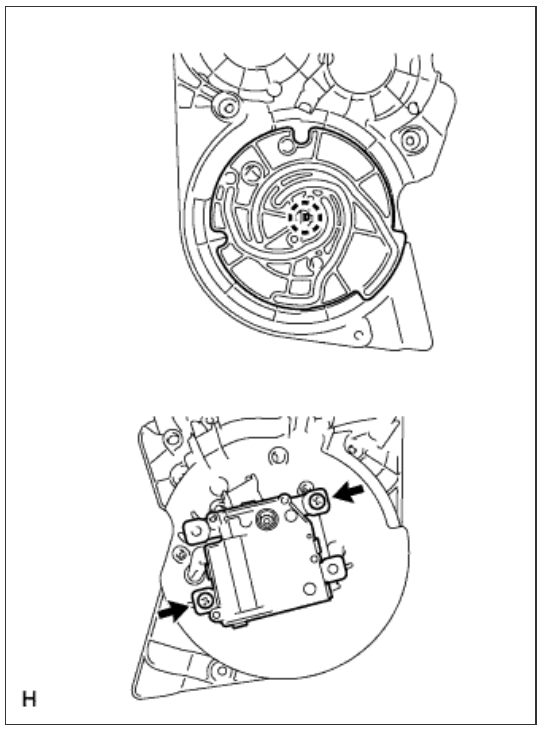


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

b. Install the control air bypass damper control servo motor RH.

i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

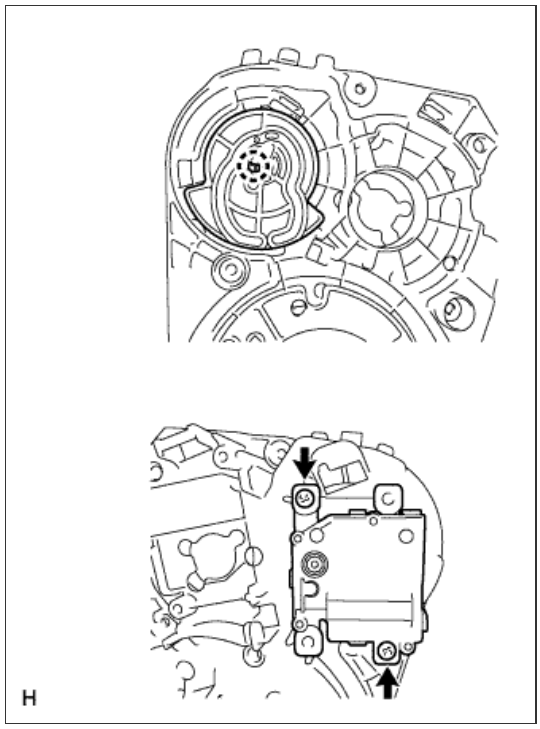


c. for 4 Zone Type:
Install the front mode control servo motor RH.


i. Attach the claw to install the plate and servo motor.

ii. Install the 2 screws.

d. Set the damper servo so that the cutout part engages with the tooth of the gear, and attach the claw to install the servo motor unit.

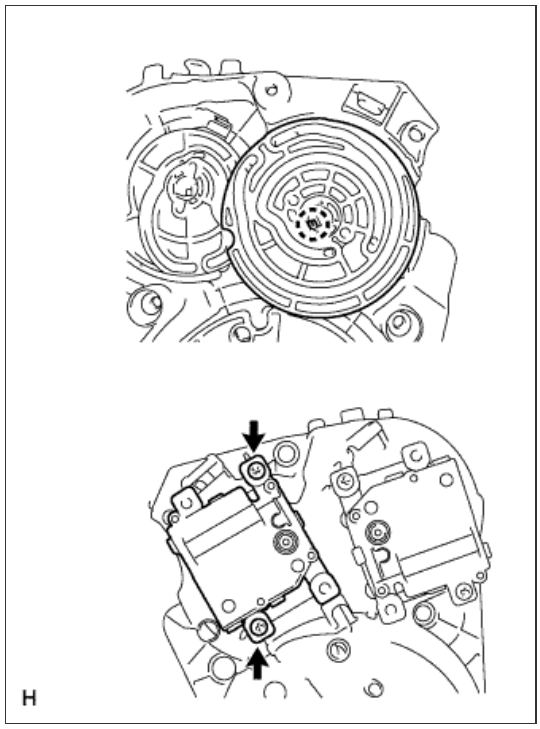


e. Install the 4 screws.

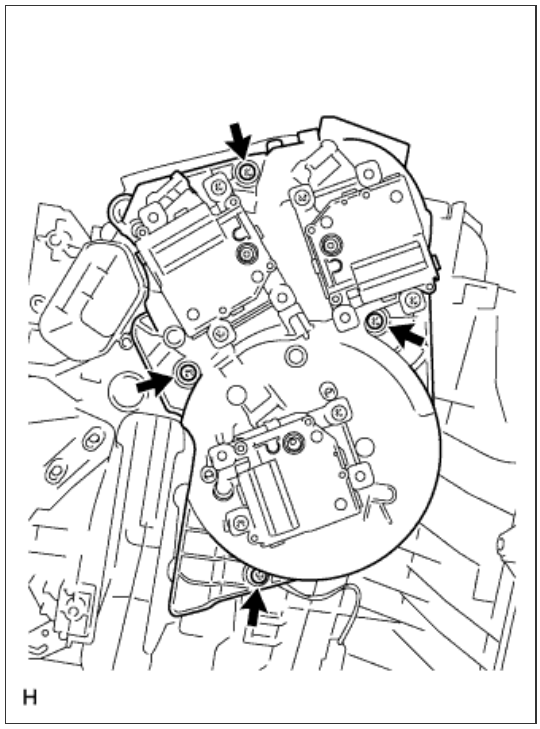

6. INSTALL REAR AIR MIX DAMPER CONTROL SERVO MOTOR RH (for 4 Zone Type)

a. Install the servo motor with the 3 screws.

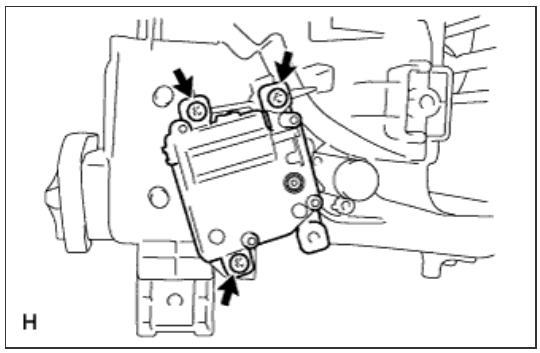

7. INSTALL COOLER EXPANSION VALVE (w/o Cool Box)

a. Sufficiently apply compressor oil to 4 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or eq i alent


b. Install the 2 O-rings to the cooler evaporator.

c. Install the 2 O-rings to the air conditioner tube and accessory assembly.


d. Install the cooler expansion valve and air conditioner tube and accessory assembly to the evaporator.

e. Using a 4 mm hexagon wrench, install the 2 bolts.

Torq e:
3.5 N m 36 kgf cm 31 in. lbf

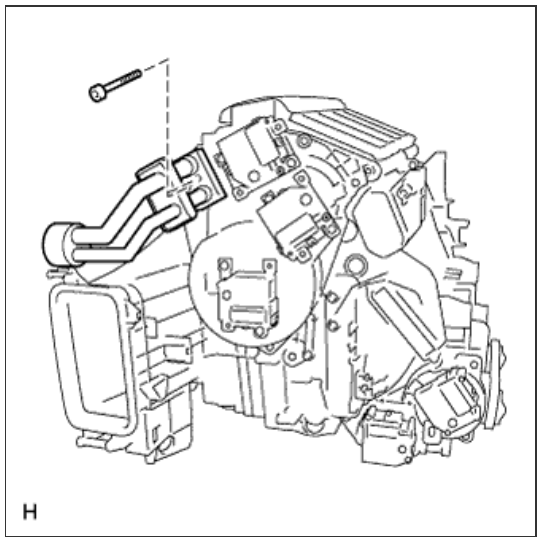

f. Install new packing.

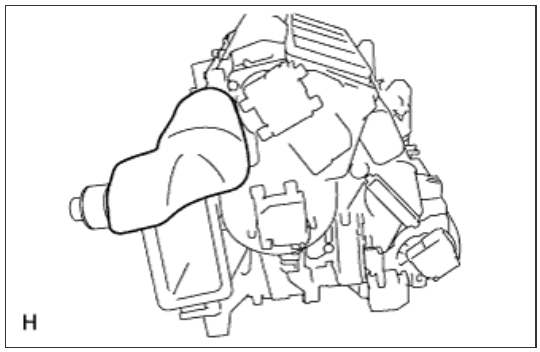

8. INSTALL AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY (w/ Cool Box)

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or eq i alent


b. Install the 2 O-rings to the air conditioner tube and accessory assembly.

c. Install the air conditioner tube and accessory assembly to the evaporator.

d. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.

Torq e:
3.5 N m 36 kgf cm 31 in. lbf

e. Install the bracket with the screw.

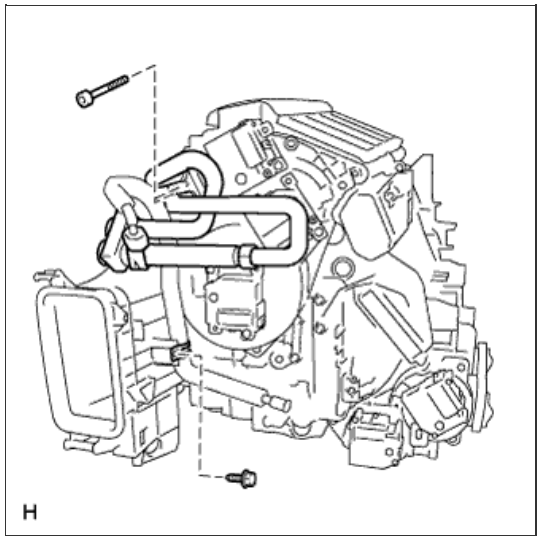

9. INSTALL COOLER EXPANSION VALVE (w/ Cool Box)

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or eq i alent

b. Install the 2 O-rings to the No. 2 connector tube.

c. Install the No. 2 connector tube, expansion valve and No. 3 connector tube.

d. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.

Torq e:
3.5 N m 36 kgf cm 31 in. lbf



e. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.


Compressor oil:
ND-OIL 8 or eq i alent

f. Install the 2 O-rings to the No. 1 connector tube.


g. Install the No. 1 connector tube.

h. Using a 4 mm hexagon wrench, install the 2 hexagon bolts.


Torq e:
3.5 N m 36 kgf cm 31 in. lbf

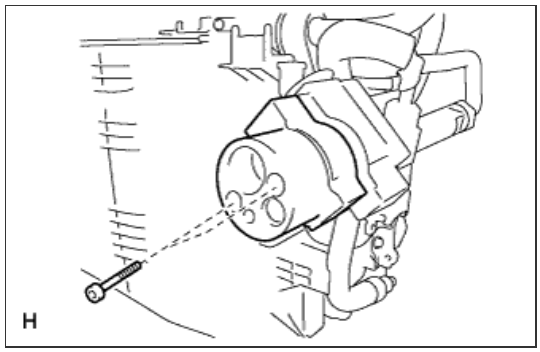


i. Using a 4 mm hexagon wrench, install the bracket with the hexagon bolt and screw.

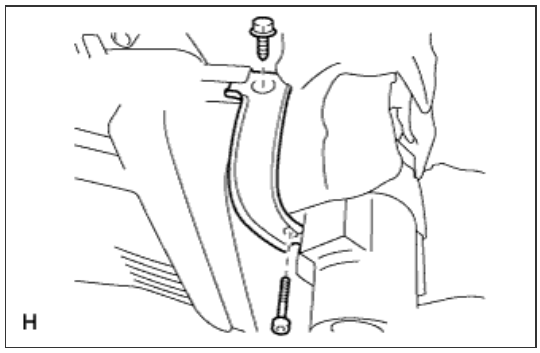

. Install new butyl tape.

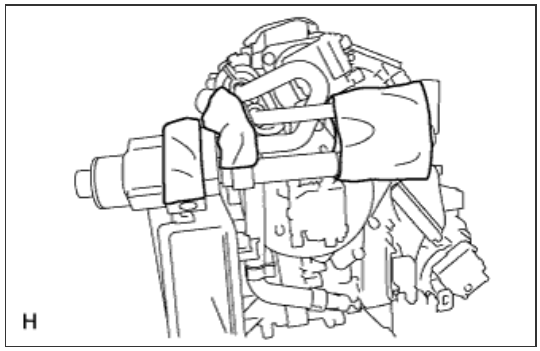


k. Install new packing.

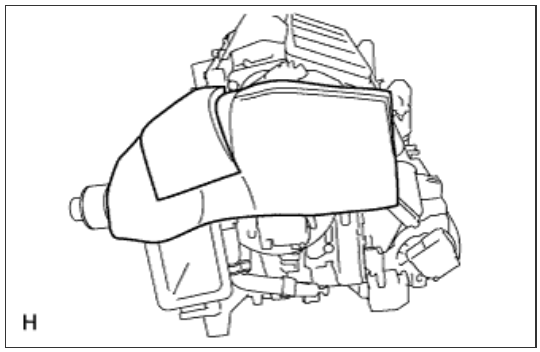

10. INSTALL AIR CONDITIONIN RADIATOR ASSEMBLY

a. Install the radiator.


b. Install the bracket with the screw.

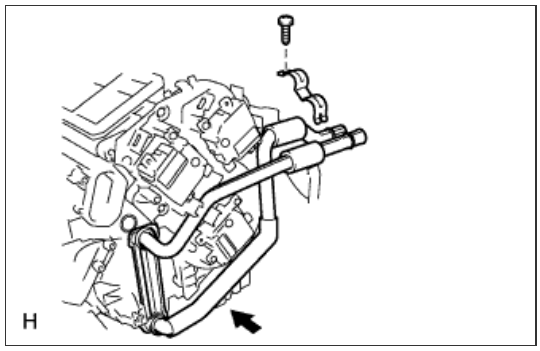

11. INSTALL AIR CONDITIONER HARNESS

a. Attach the clamps to install the harness.


b. Connect the connectors.

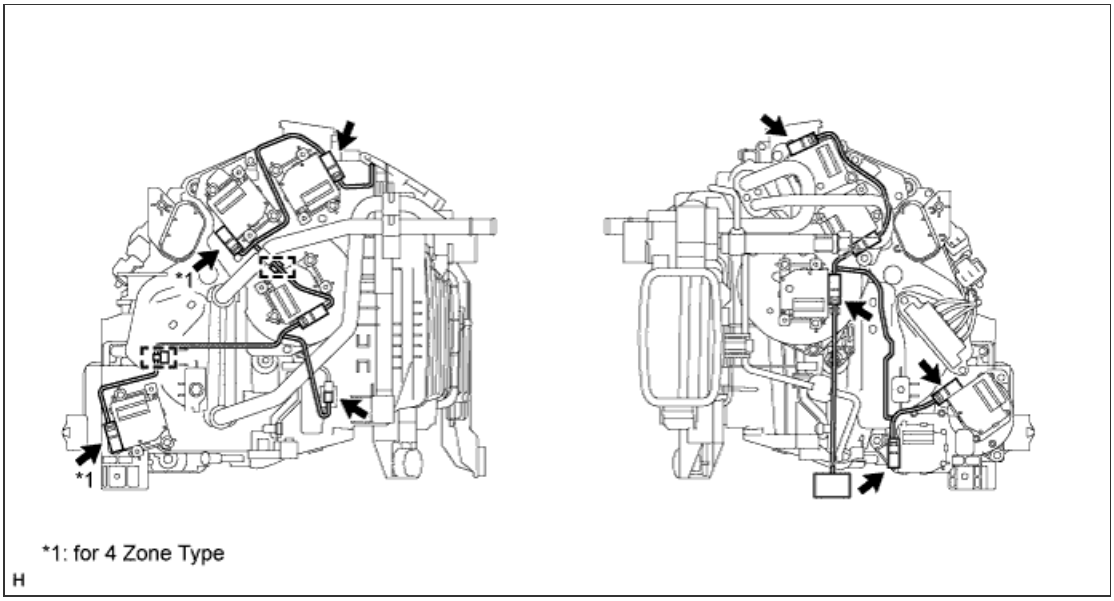

12. INSTALL UIC HEATER ASSEMBLY (w/ PTC Heater)

a. Install the quick heater with the 2 screws.

b. Attach the 3 clamps.

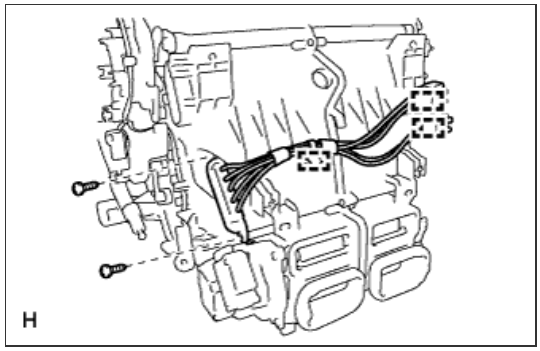

13. INSTALL COOL BOX LI UID TUBE (w/ Cool Box)


a. Lubricate 2 new O-rings with compressor oil and install them to the liquid tube.

Compressor oil:
ND-OIL 8 or eq i alent

b. Connect the liquid tube with the piping clamp.

NOTICE:


After connection, check the claw engagement of the piping clamp.

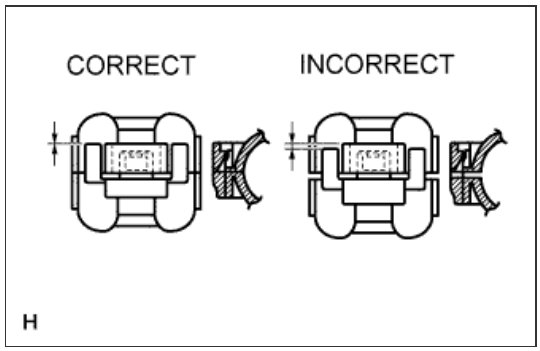

c. Attach the clamp.


d. Attach the 2 claws to install the protective cover.

e. Install the 3 screws.

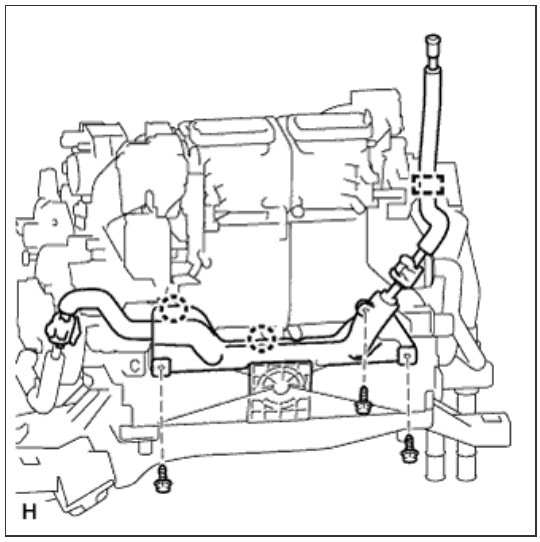


14. INSTALL ASPIRATOR

a. Attach the 2 claws to install the aspirator.

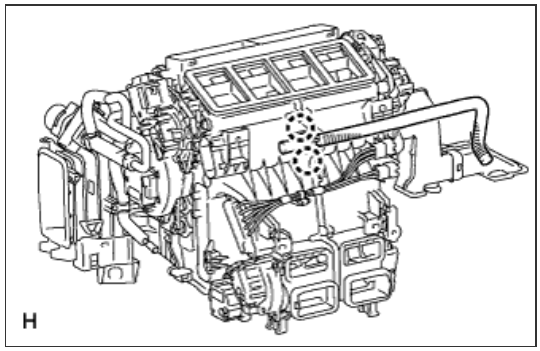


15. INSTALL NO. 4 AIR DUCT SUB-ASSEMBLY

a. Install the duct with the screw.

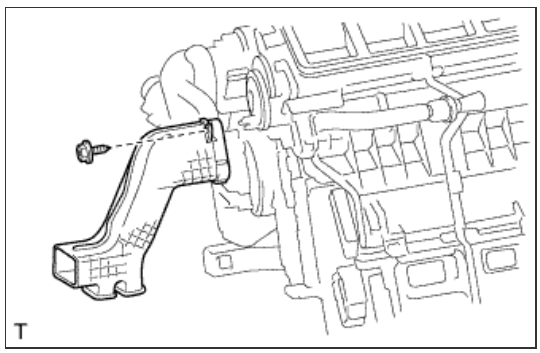


16. INSTALL NO. 5 AIR DUCT SUB-ASSEMBLY

a. Install the duct with the screw.

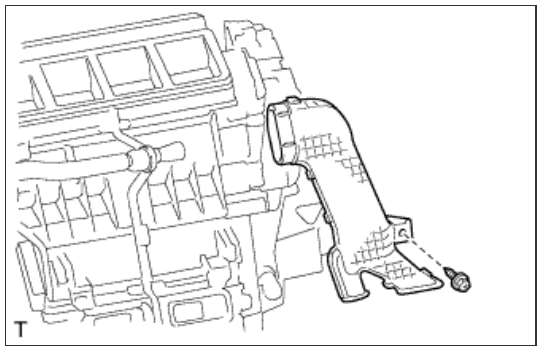

17. INSTALL BLO ER ASSEMBLY

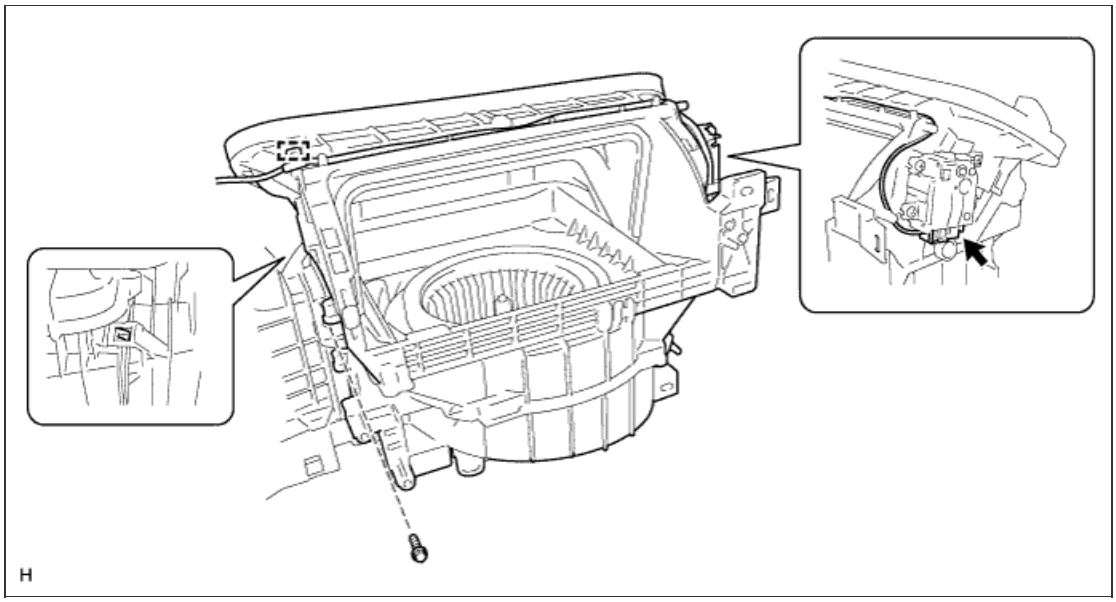

a. Attach the claw to install the blower unit.

b. Connect the connector and clamp.

c. Install the screw.

for Preparation Click here

1. INSTALL AIR CONDITIONING UNIT ASSEMBLY


a. Install the air conditioning unit assembly (Click here).


for Preparation Click here

1. INSTALL AIR CONDITIONING UNIT

a. Install the air conditioning unit (Click here).

for Preparation Click here

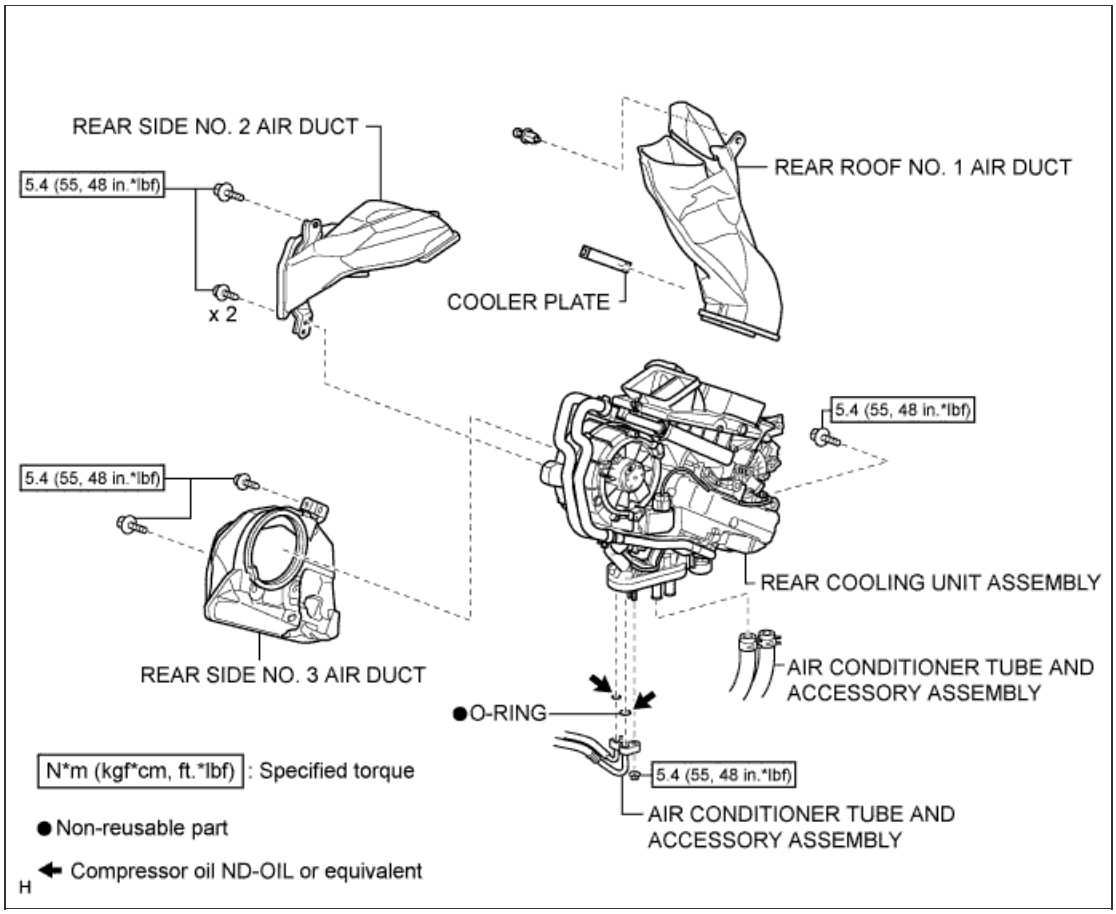

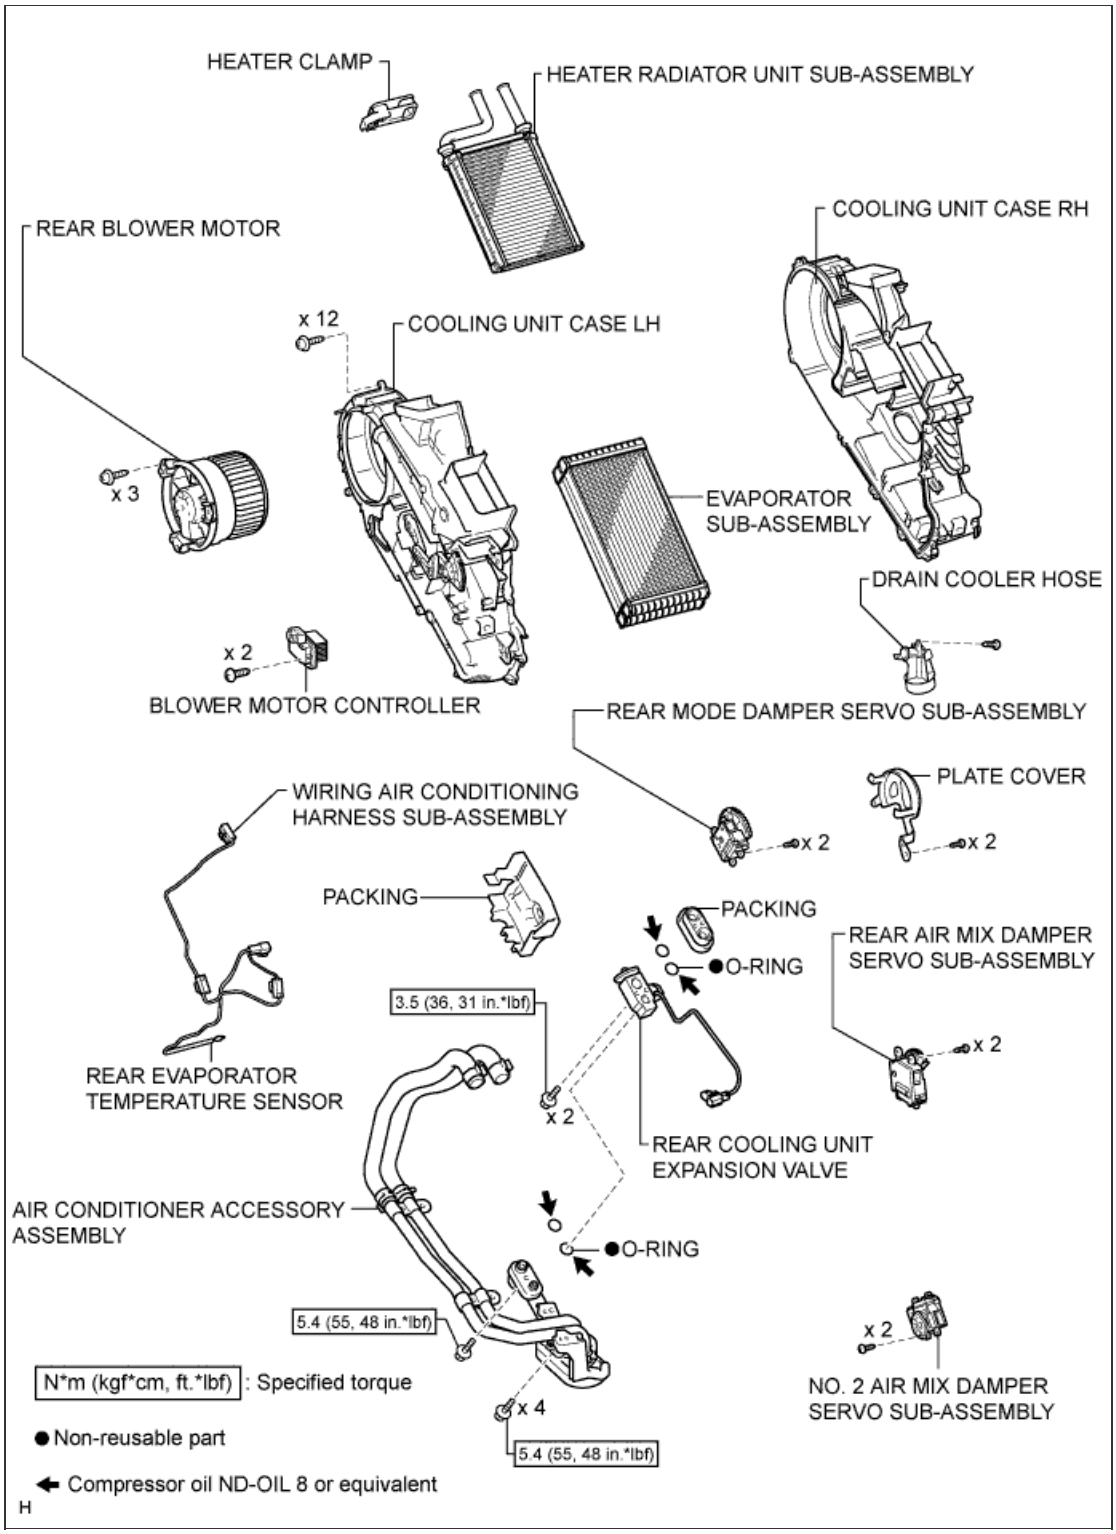
HEATER CLAMP
HEATER RADIATOR UNIT SUB-ASSEMBLY
REAR BLOWER MOTOR
COOLING UNIT CASE RH
x 12
COOLING UNIT CASE LH
x 3
EVAPORATOR SUB-ASSEMBLY
DRAIN COOLER HOSE
x 2
BLOWER MOTOR CONTROLLER
REAR MODE DAMPER SERVO SUB-ASSEMBLY
PLATE COVER
WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY
x 2
x 2
PACKING
PACKING
O-RING
REAR AIR MIX DAMPER SERVO SUB-ASSEMBLY
3.5 (36, 31 in.*lbf)
x 2
REAR EVAPORATOR TEMPERATURE SENSOR
REAR COOLING UNIT EXPANSION VALVE
AIR CONDITIONER ACCESSORY ASSEMBLY
O-RING
5.4 (55, 48 in.*lbf)
x 2
N*m (kgf*cm, ft.*lbf) : Specified torque
x 4
5.4 (55, 48 in.*lbf)
NO. 2 AIR MIX DAMPER SERVO SUB-ASSEMBLY
Non-reusable part
Compressor oil ND-OIL 8 or equivalent
H

REAR EVAPORATOR TEMPERATURE SENSOR (w/ Heater) > REMOVAL

for Preparation Click here

1. REMOVE REAR COOLING UNIT ASSEMBLY

a. Remove the rear cooling unit assembly (Click here).

REAR EVAPORATOR TEMPERATURE SENSOR (w/ Heater) > REMOVAL

for Preparation Click here


1. REMOVE REAR COOLING UNIT ASSEMBLY

a. Remove the rear cooling unit assembly (Click here).

for Preparation Click here


1. REMOVE REAR SIDE NO. 2 AIR DUCT

a. Remove the 3 screws and duct.

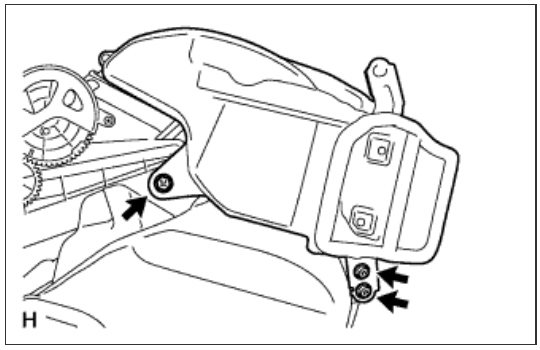

2. REMOVE REAR SIDE NO. 3 AIR DUCT


a. Remove the 2 screws and duct.

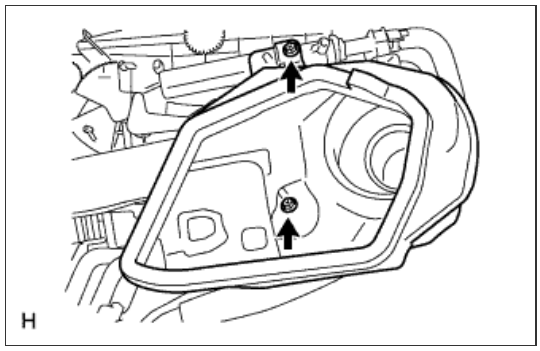

3. REMOVE DRAIN COOLER HOSE

a. Remove the screw.


b. Detach the claw and remove the drain hose.

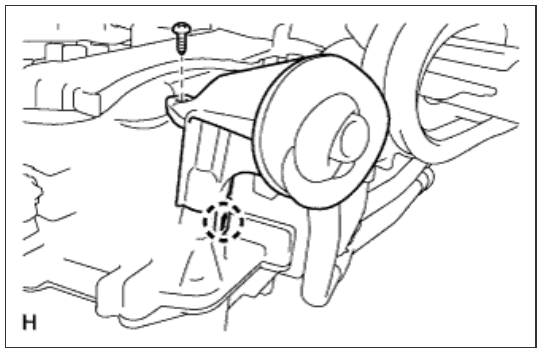

4. REMOVE REAR AIR MIX DAMPER SERVO SUB-ASSEMBLY


a. Disconnect the connector.

b. Remove the 2 screws and damper servo.

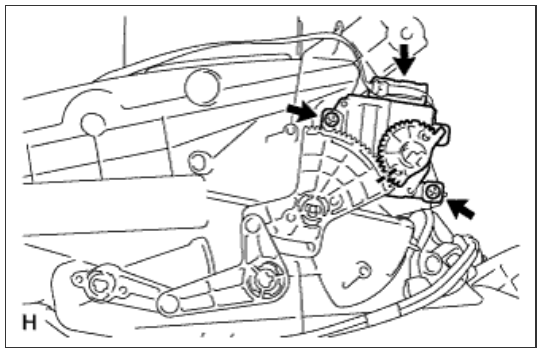


5. REMOVE REAR MODE DAMPER SERVO SUB-ASSEMBLY

a. Remove the 2 screws and plate cover.

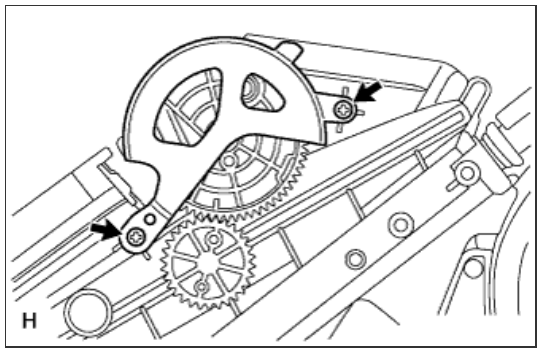

b. Disconnect the connector.


c. Remove the 2 screws and damper servo.

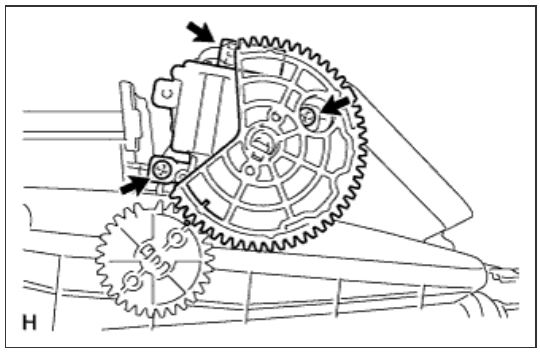

6. REMOVE NO. 2 AIR MIX DAMPER SERVO SUB-ASSEMBLY


a. Disconnect the connector.

b. Remove the 2 screws and damper servo.

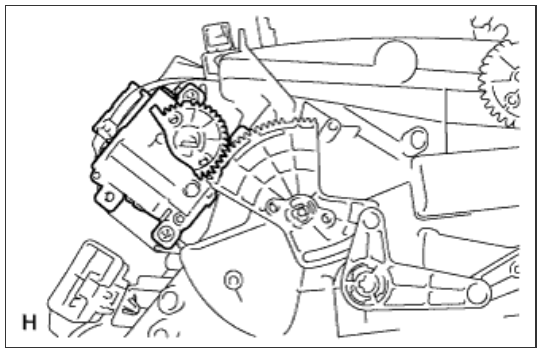

7. REMOVE AIR CONDITIONER ACCESSORY ASSEMBLY

a. Remove the packing.

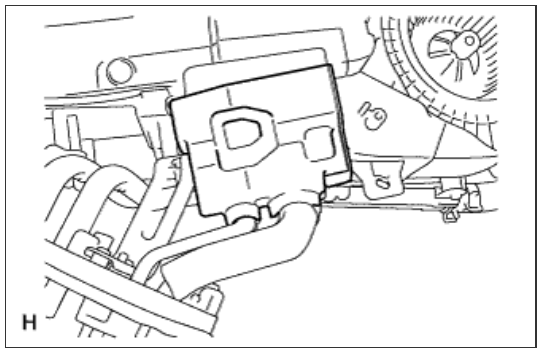


b. Remove the bolt and 4 screws.

c. Using pliers, grip the claws of the clips and slide the 2 clips.

d. Remove the air conditioner accessory assembly.

e. Remove the 2 O-rings from the air conditioner accessory assembly.

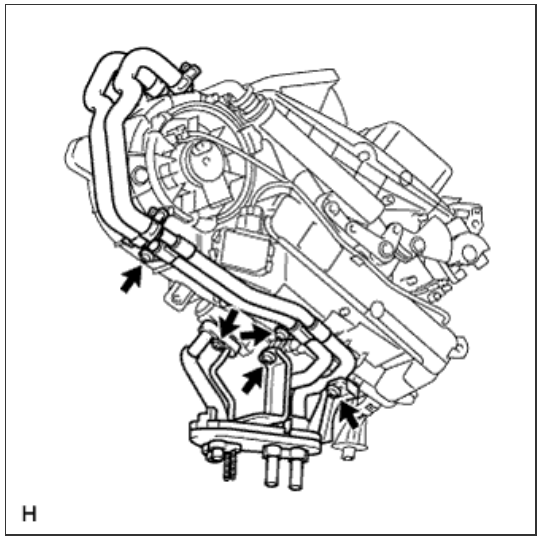


8. REMOVE REAR COOLING UNIT EXPANSION VALVE

a. Disconnect the connector.

b. Detach the clamp.


c. Using a 4 mm hexagon wrench, remove the 2 hexagon bolts and expansion valve.

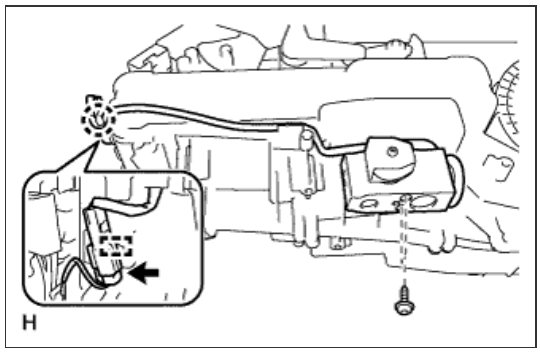


9. REMOVE HEATER RADIATOR UNIT SUB-ASSEMBLY

a. Remove the screw and detach the claw.

b. Remove the heater clamp.

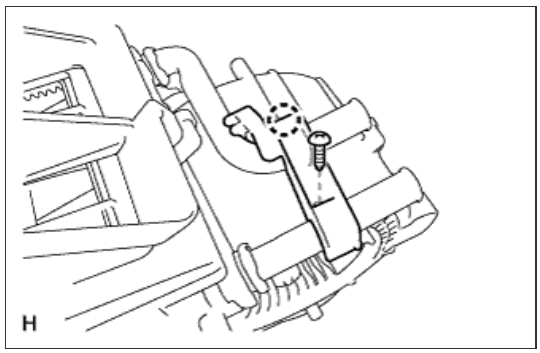


c. Remove the heater radiator.

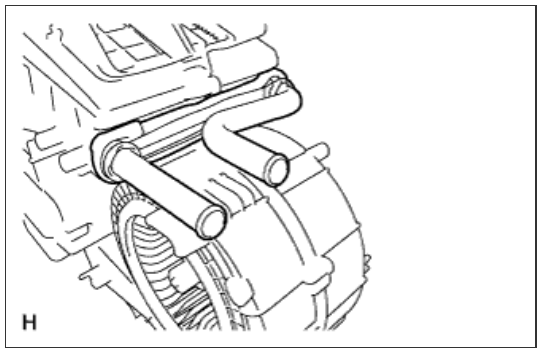

10. REMOVE REAR BLOWER MOTOR

a. Disconnect the connector.


b. Remove the 3 screws and blower motor.

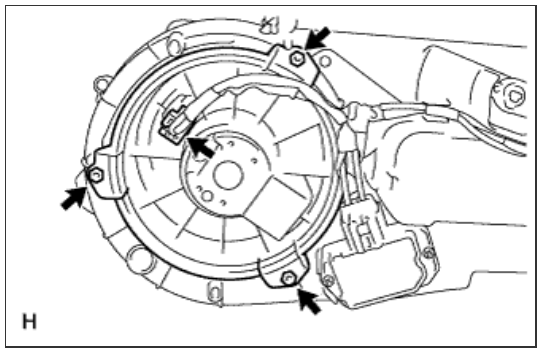

11. REMOVE BLOWER MOTOR CONTROLLER

a. Disconnect the connector.


b. Remove the 2 screws and blower motor controller.

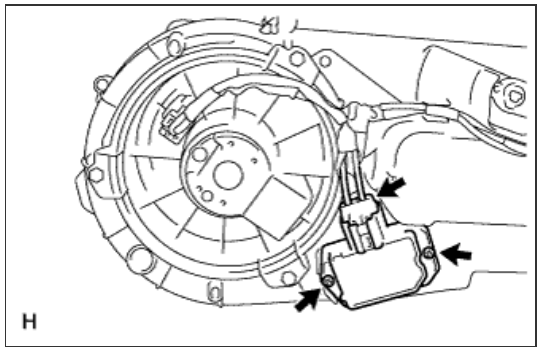


12. REMOVE EVAPORATOR SUB-ASSEMBLY

a. Remove the 12 screws and rear cooling unit case LH.

b. Remove the evaporator.

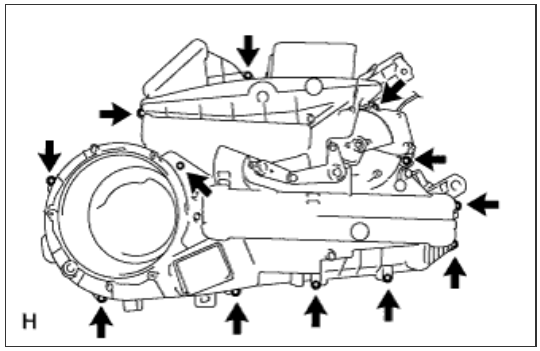


c. Remove the 2 O-rings from the evaporator.

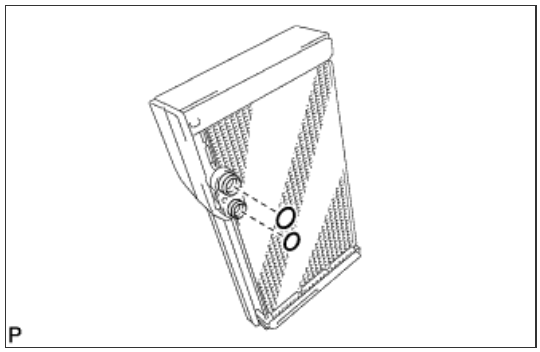

13. REMOVE REAR EVAPORATOR TEMPERATURE SENSOR

a. Detach the 2 claws and remove the sensor.

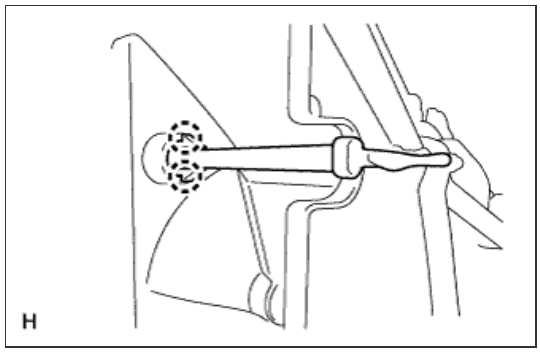

14. REMOVE WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY

for Preparation Click here

1. INSPECT REAR EVAPORATOR TEMPERATURE SENSOR

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
8 - 7	-10°C (14°F)	7.30 to 9.10 kΩ
8 - 7	-5°C (23°F)	5.65 to 6.95 kΩ
8 - 7	0°C (32°F)	4.40 to 5.35 kΩ
8 - 7	5°C (41°F)	3.40 to 4.15 kΩ
8 - 7	10°C (50°F)	2.70 to 3.25 kΩ
8 - 7	15°C (59°F)	2.14 to 2.58 kΩ
8 - 7	20°C (68°F)	1.71 to 2.05 kΩ
8 - 7	25°C (77°F)	1.38 to 1.64 kΩ
8 - 7	30°C (86°F)	1.11 to 1.32 kΩ


If the result is not as specified, replace the rear evaporator temperature sensor.

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring the sensor temperature must be the same as the ambient temperature.**

HINT:

As the temperature increases, the resistance decreases (see the graph).

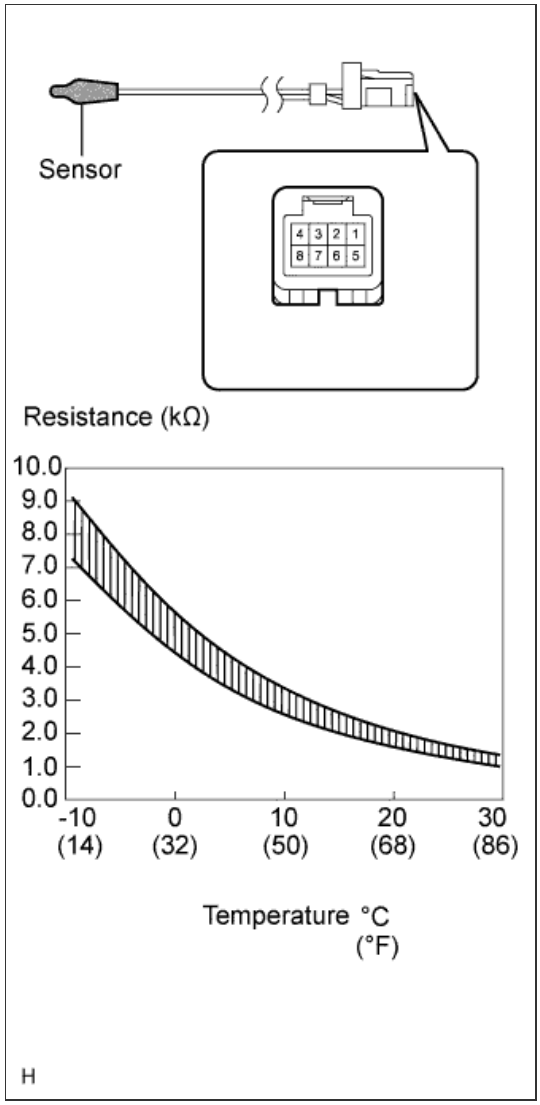


for Preparation Click here

1. INSTALL WIRING AIR CONDITIONING HARNESS SUB-ASSEMBLY

2. INSTALL REAR EVAPORATOR TEMPERATURE SENSOR

a. Attach the 2 claws to install the sensor.

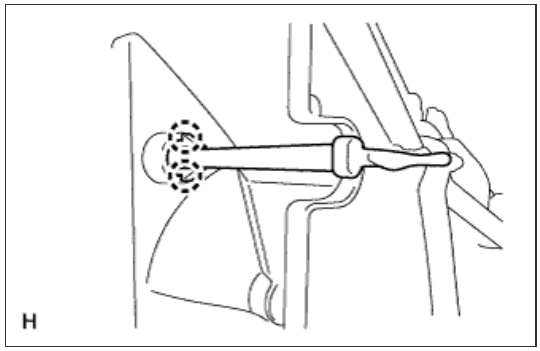


3. INSTALL EVAPORATOR SUB-ASSEMBLY

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.


Compressor oil:
ND-OIL 8 or equivalent

b. Install the 2 O-rings to the evaporator.

c. Install the evaporator.

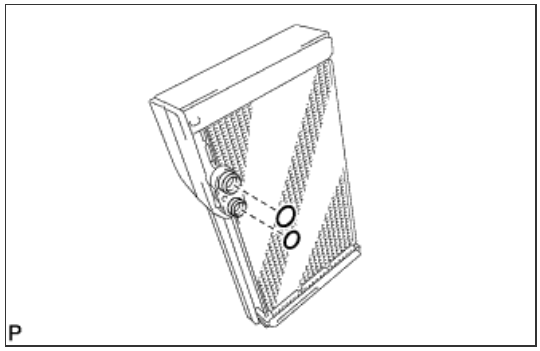


d. Install the rear cooling unit case LH with the 12 screws.

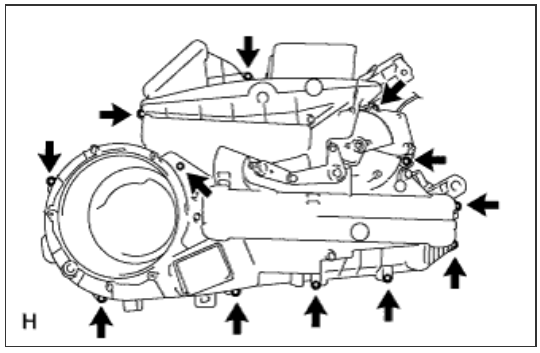

4. INSTALL BLOWER MOTOR CONTROLLER

a. Install the blower motor controller with the 2 screws.


b. Connect the connector.

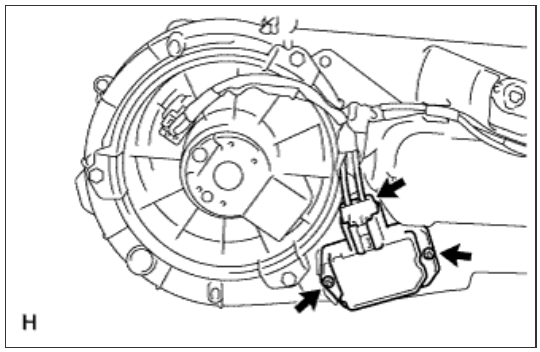

5. INSTALL REAR BLOWER MOTOR


a. Install the blower motor with the 3 screws.

b. Connect the connector.

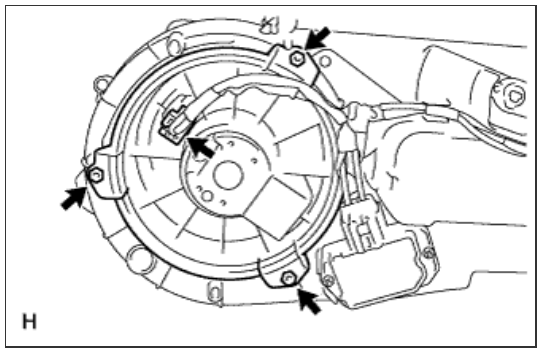


6. INSTALL HEATER RADIATOR UNIT SUB-ASSEMBLY

a. Install the radiator unit to the rear cooling unit.

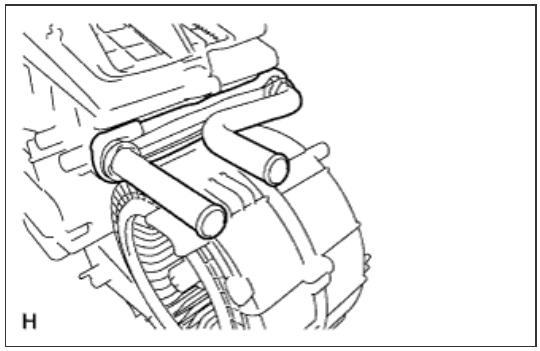

b. Install the heater clamp with the screw and attach the claw.

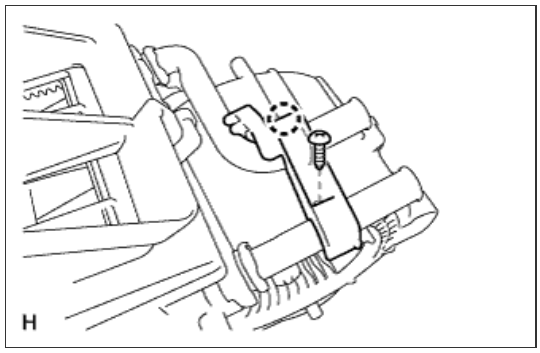

7. INSTALL REAR COOLING UNIT EXPANSION VALVE


a. Using a 4 mm hexagon wrench, install the expansion valve with the 2 hexagon bolts.

Torque:

3.5 N*m{ 36 kgf*cm , 31 in.*lbf }

b. Attach the clamp.

c. Connect the connector.

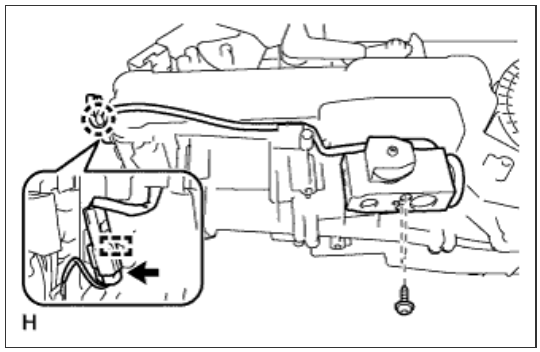

8. INSTALL AIR CONDITIONER ACCESSORY ASSEMBLY

a. Sufficiently apply compressor oil to 2 new O-rings and the fitting surface of the hose joint.

Compressor oil:
ND-OIL 8 or equivalent


b. Install the 2 O-rings to the air conditioner accessory assembly.

c. Install the air conditioner accessory assembly.


d. Using pliers, grip the claws of the clips and slide the 2 clips.

e. Install the bolt and 4 screws.

Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

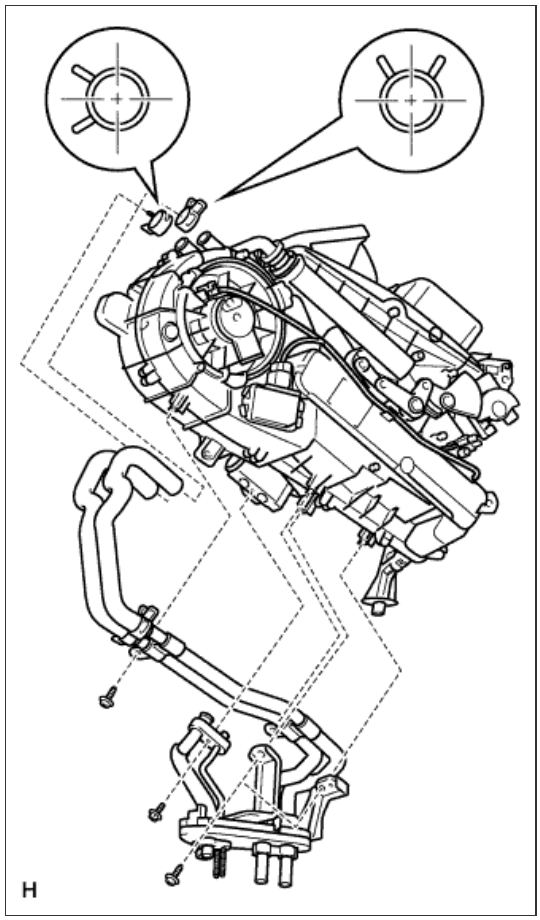


f. Install new packing as shown in the illustration.

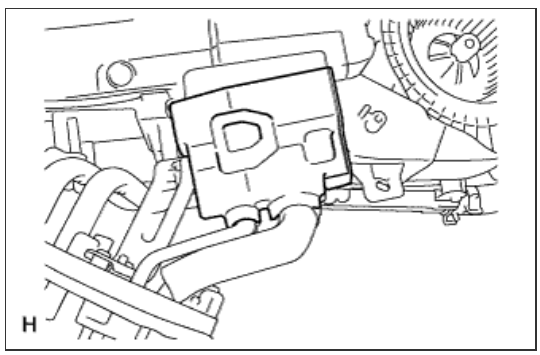


9. INSTALL REAR MODE DAMPER SERVO SUB-ASSEMBLY

a. Align the damper servo as shown in the illustration, and install it with the 2 screws.

b. Connect the connector.

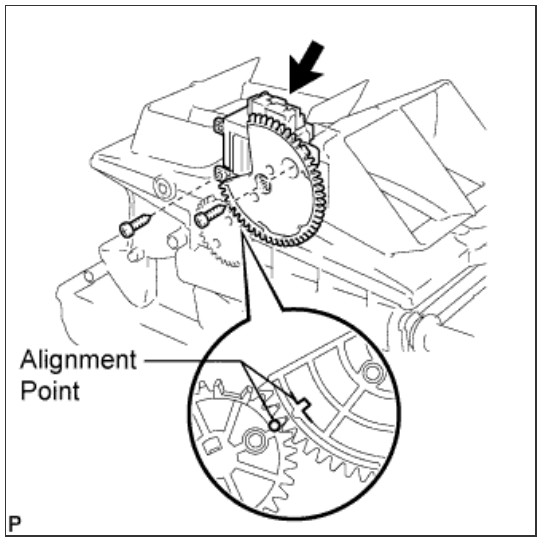


c. Install the plate cover with the 2 screws.

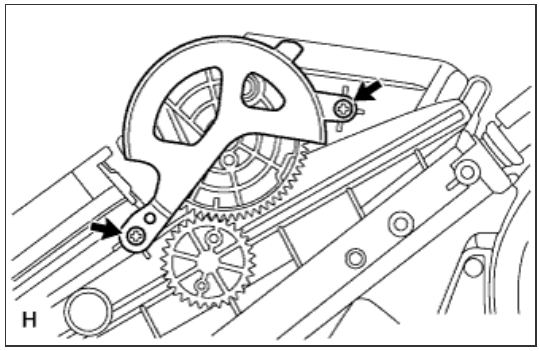

10. INSTALL NO. 2 AIR MIX DAMPER SERVO SUB-ASSEMBLY

a. Align the damper servo as shown in the illustration, and install it with the 2 screws.


b. Connect the connector.

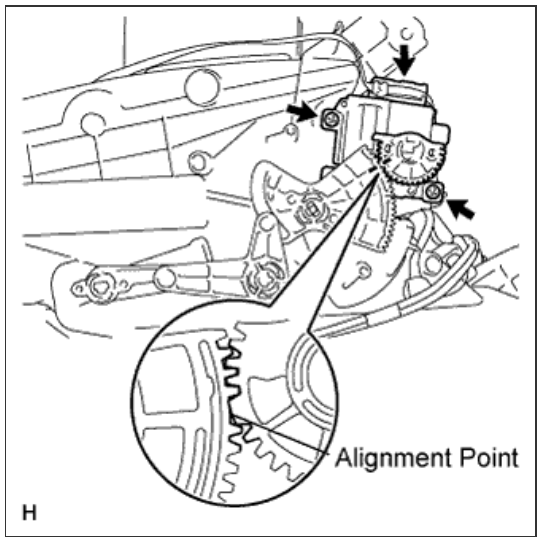

11. INSTALL REAR AIR MIX DAMPER SERVO SUB-ASSEMBLY

a. Align the damper servo as shown in the illustration, and install it with the 2 screws.


b. Connect the connector.

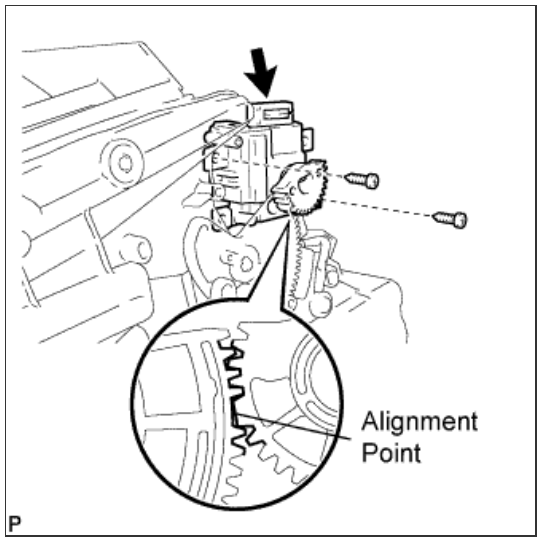

12. INSTALL DRAIN COOLER HOSE

a. Attach the claw to install the drain hose.


b. Install the screw.

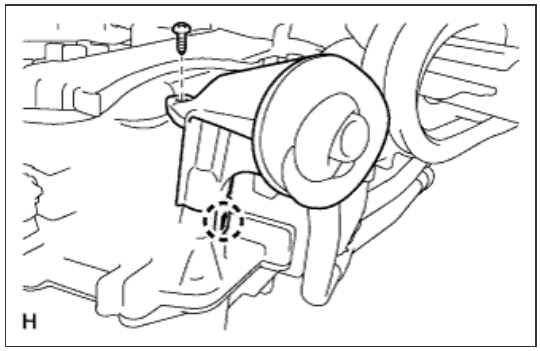

13. INSTALL REAR SIDE NO. 3 AIR DUCT

a. Install the duct with the 2 screws.


Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

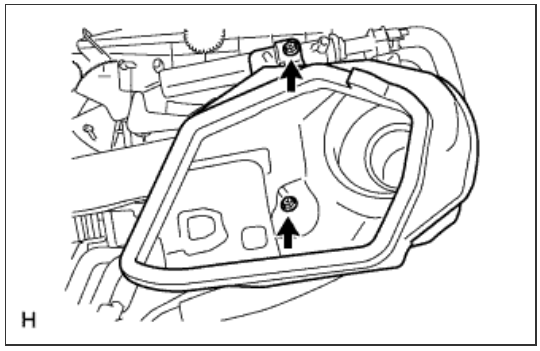

14. INSTALL REAR SIDE NO. 2 AIR DUCT

a. Install the duct with the 3 screws.

Torque:
5.4 N*m{ 55 kgf*cm , 48 in.*lbf }

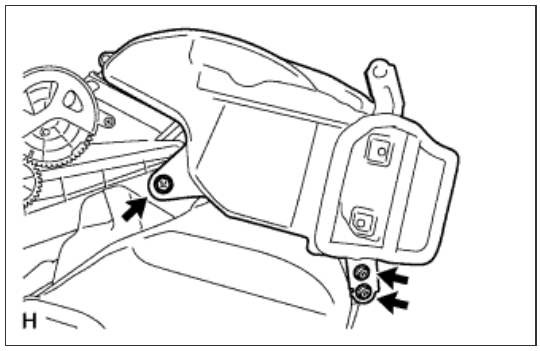
H

for Preparation Click here

1. INSTALL REAR COOLING UNIT ASSEMBLY


a. Install the rear cooling unit assembly (Click here).

for Preparation Click here

1. INSTALL REAR COOLING UNIT ASSEMBLY

a. Install the rear cooling unit assembly (Click here).


for Preparation Click here

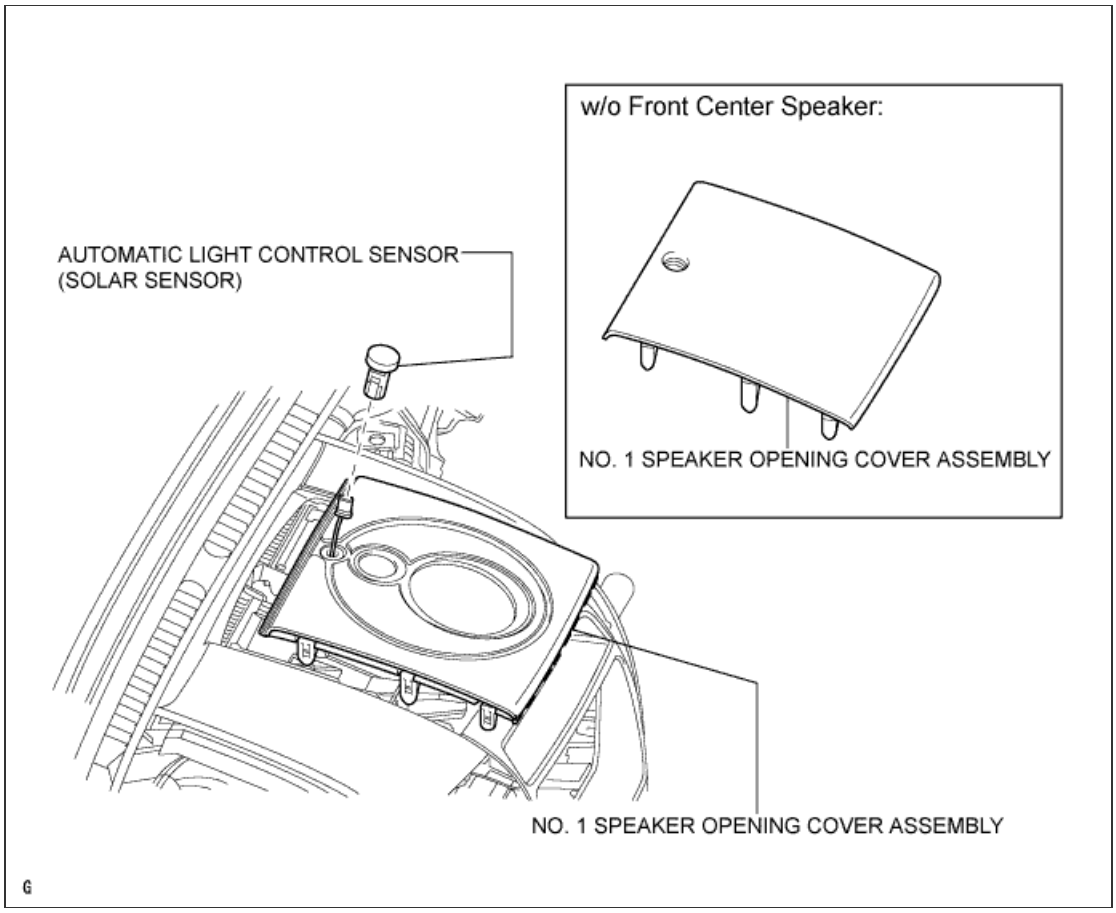

for Preparation Click here


1. REMOVE NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Detach the 8 claws and remove the opening cover.

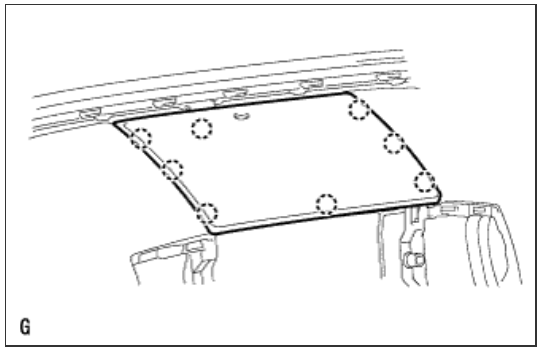

2. REMOVE AUTOMATIC LIGHT CONTROL SENSOR (SOLAR SENSOR)


a. Detach the 2 claws and remove the sensor.

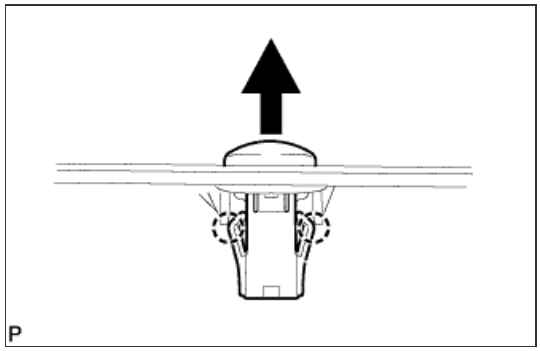

for Preparation Click here


1. REMOVE NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Detach the 8 claws and remove the opening cover.

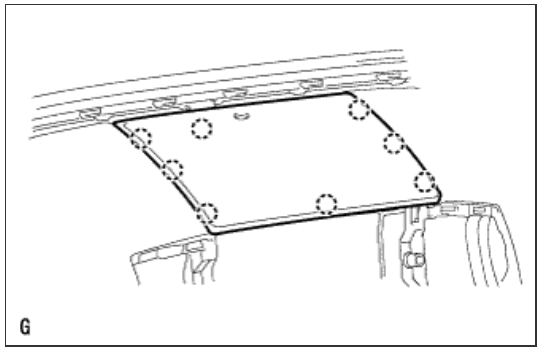

2. REMOVE AUTOMATIC LIGHT CONTROL SENSOR (SOLAR SENSOR)


a. Detach the 2 claws and remove the sensor.

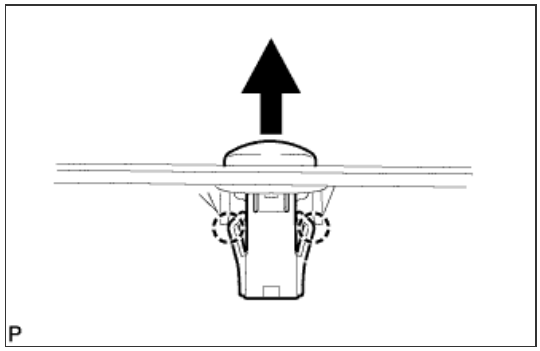

for Preparation Click here

1. INSPECT AUTOMATIC LIGHT CONTROL SENSOR (SOLAR SENSOR)

a. Connect the battery positive (+) lead to terminal 6 and the negative (-) lead to terminal 3, then measure the according to the value(s) in the table below.

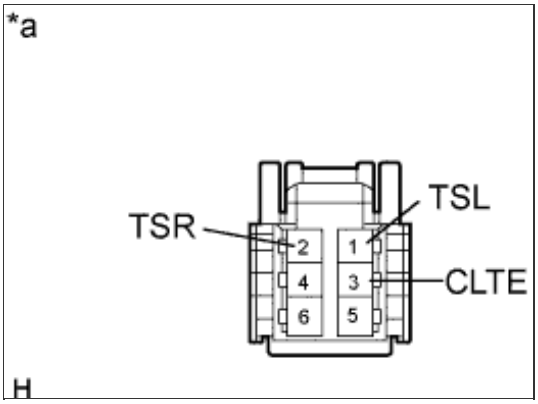

Standard Voltage:

Tester Connection	Condition	Specified Condition
1 (TSL) - 3 (CLTE)	Sensor subject to electric light	0.5 V to 3.0 V
1 (TSL) - 3 (CLTE)	Sensor covered with a cloth	0.5 V or less
2 (TSR) - 3 (CLTE)	Sensor subject to electric light	0.5 V to 3.0 V
2 (TSR) - 3 (CLTE)	Sensor covered with a cloth	0.8 V or less

If the result is not as specified, replace the automatic light control sensor (solar sensor).

NOTICE:

The connection procedure for using a digital tester such as a TOYOTA electrical tester is shown above.


HINT:

- **As the inspection light is moved away from the sensor, the voltage increases.**
- **Use an incandescent lamp for inspection. Bring it within 30 cm (11.8 in.) of the A/C solar sensor.**

for Preparation Click here


1. INSTALL AUTOMATIC LIGHT CONTROL SENSOR (SOLAR SENSOR)

a. Attach the 2 claws to install the sensor.

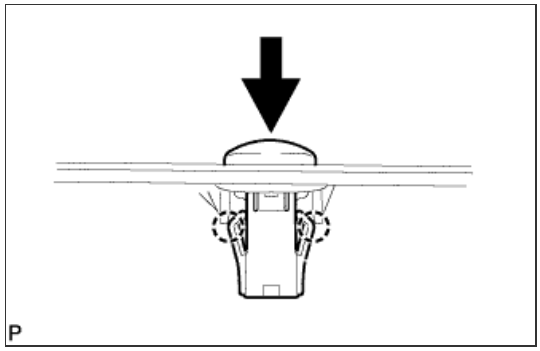

2. INSTALL NO. 1 SPEAKER OPENING COVER ASSEMBLY


a. Attach the 8 claws to install the opening cover.

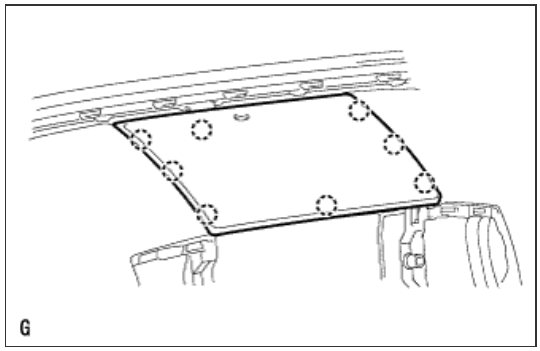

for Preparation Click here


1. INSTALL AUTOMATIC LIGHT CONTROL SENSOR (SOLAR SENSOR)

a. Attach the 2 claws to install the sensor.

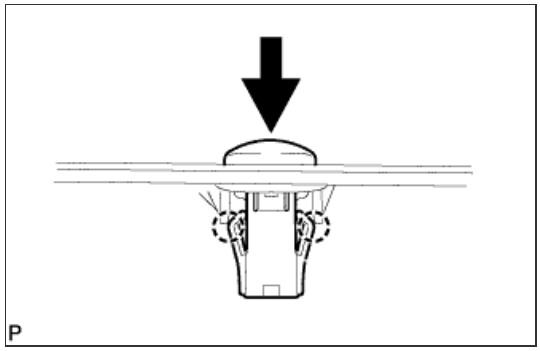



2. INSTALL NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Attach the 8 claws to install the opening cover.

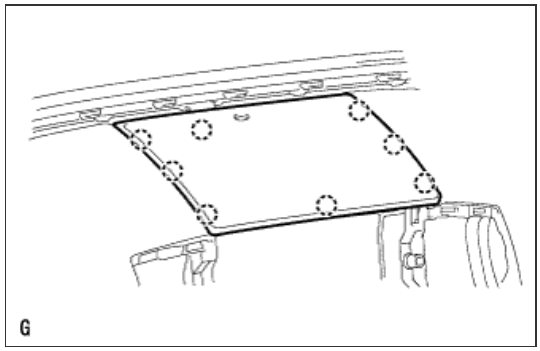


for Preparation Click here

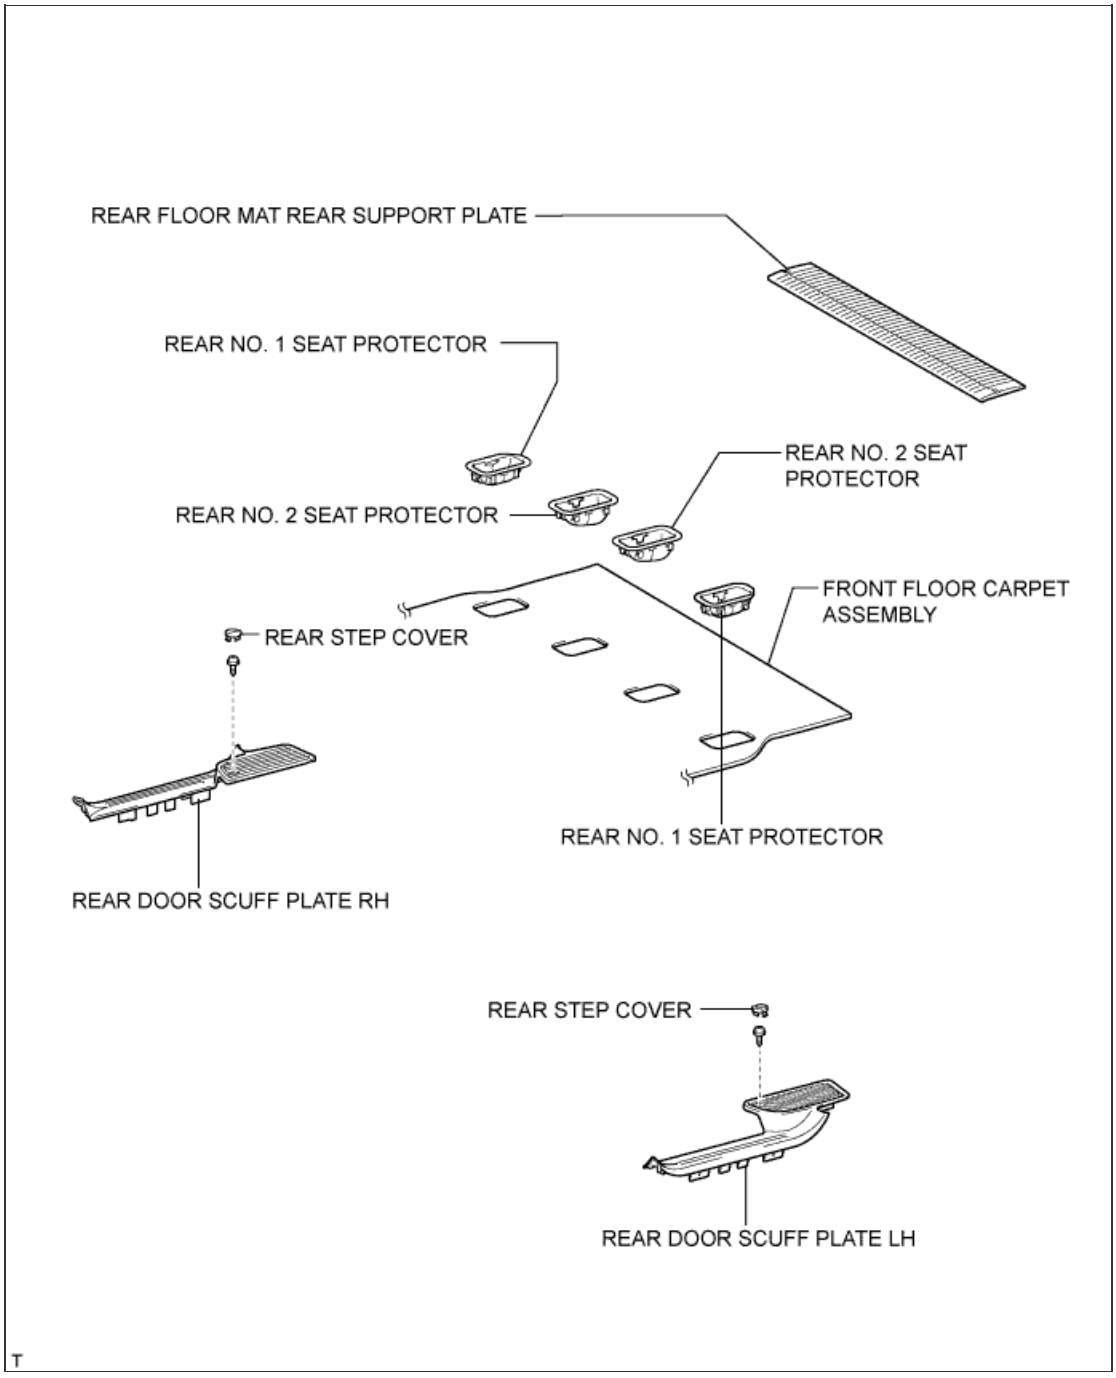

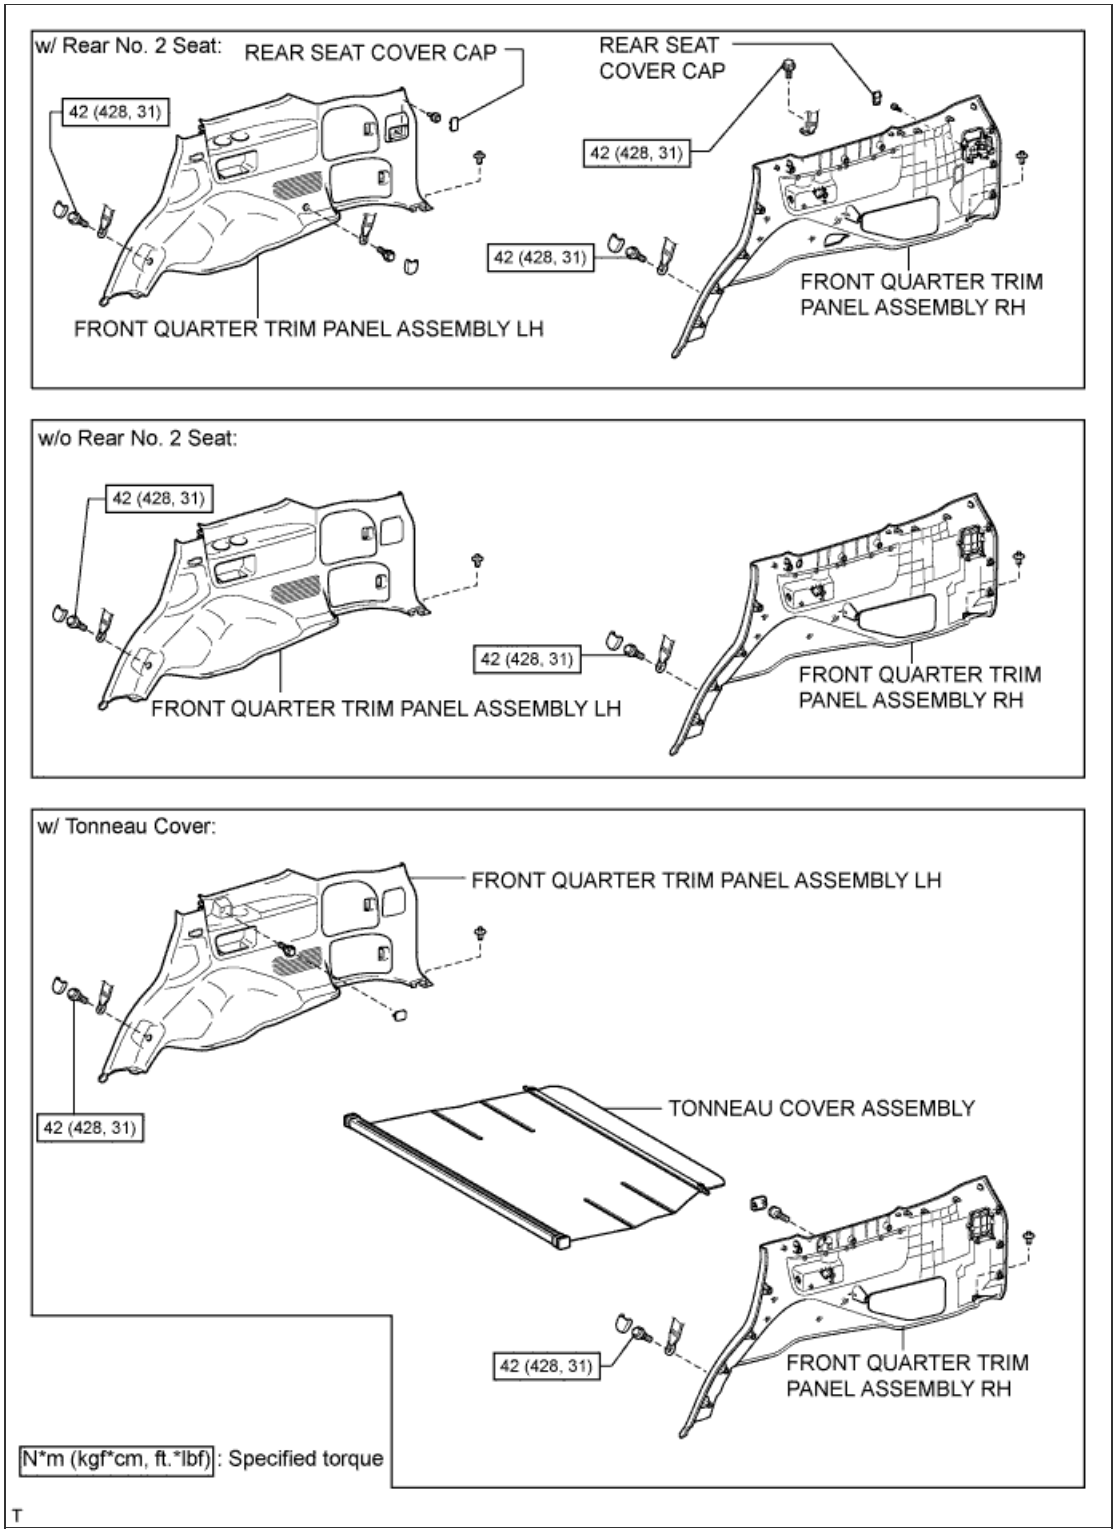
w/ Rear No. 2 Seat:
REAR SEAT COVER CAP
42 (428, 31)
FRONT QUARTER TRIM PANEL ASSEMBLY LH
REAR SEAT COVER CAP
42 (428, 31)
42 (428, 31)
FRONT QUARTER TRIM PANEL ASSEMBLY RH
w/o Rear No. 2 Seat:
42 (428, 31)
FRONT QUARTER TRIM PANEL ASSEMBLY LH
42 (428, 31)
FRONT QUARTER TRIM PANEL ASSEMBLY RH
w/ Tonneau Cover:
FRONT QUARTER TRIM PANEL ASSEMBLY LH
42 (428, 31)
TONNEAU COVER ASSEMBLY
42 (428, 31)
FRONT QUARTER TRIM PANEL ASSEMBLY RH
N*m (kgf*cm, ft.*lbf): Specified torque

T

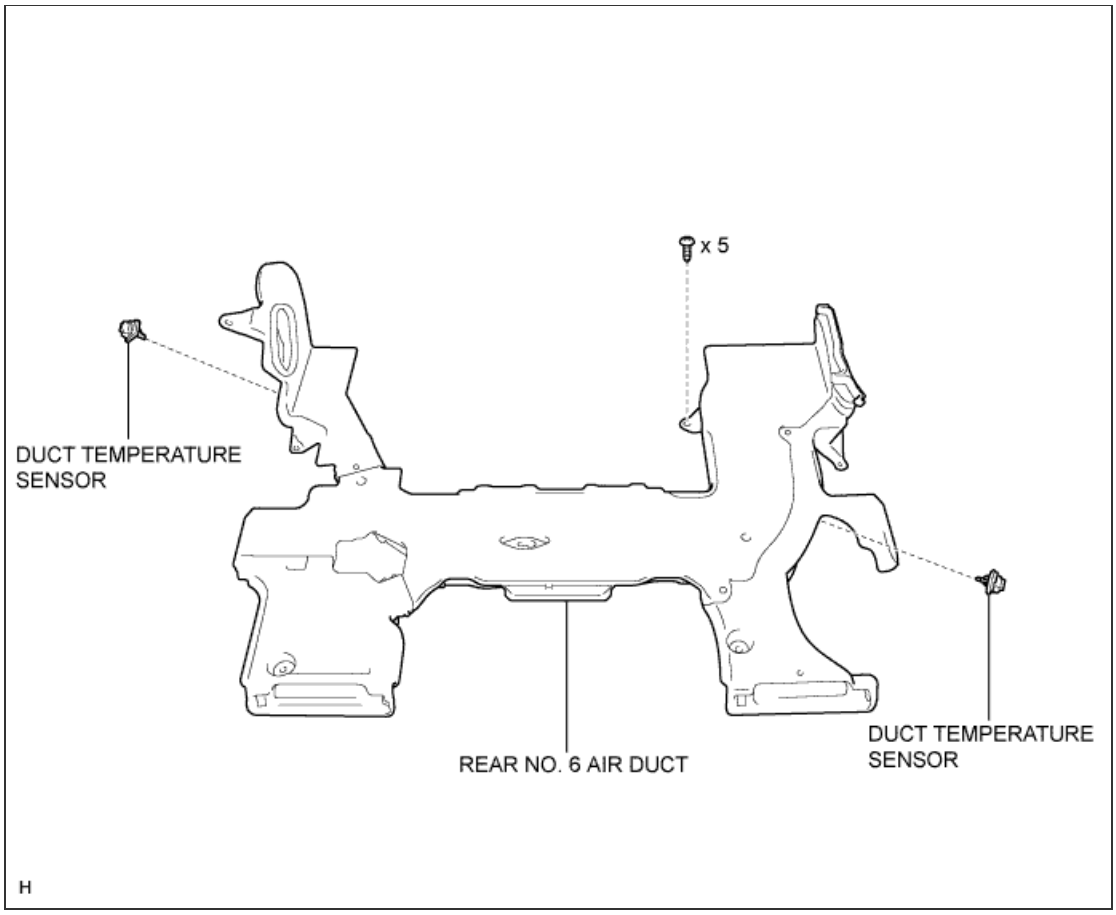
x 5
DUCT TEMPERATURE SENSOR
REAR NO. 6 AIR DUCT
DUCT TEMPERATURE SENSOR
H

DUCT TEMPERATURE SENSOR (w/ Heater) > REMOVAL

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. for 60/40 Split Seat Type 40 Side:
Remove the rear No. 1 seat assembly (Click here).

b. for 60/40 Split Seat Type 60 Side:
Remove the rear No. 1 seat assembly (Click here).

3. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. for 60/40 Split Seat Type 40 Side:
Remove the rear No. 1 seat assembly (Click here).

b. for 60/40 Split Seat Type 60 Side:
Remove the rear No. 1 seat assembly (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY LH

a. for Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

5. REMOVE REAR NO. 2 SEAT ASSEMBLY RH

a. for Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

6. REMOVE REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Remove the rear door sc ff plate (Click here).

b. w/o Sliding Roof:
Remove the rear door sc ff plate (Click here).

7. REMOVE REAR DOOR SCUFF PLATE RH

a. w/ Sliding Roof:
Remove the rear door sc ff plate (Click here).

b. w/o Sliding Roof:
Remove the rear door sc ff plate (Click here).

8. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Remove the rear floor mat rear s rt plate (Click here).

b. w/o Sliding Roof:
Remove the rear floor mat rear s rt plate (Click here).

9. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

10. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Remove the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Remove the rear seat cover cap (Click here).

11. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front q arter trim panel (Click here).

b. w/o Sliding Roof:
Remove the front q arter trim panel (Click here).

12. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Remove the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Remove the rear seat cover cap (Click here).


13. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Remove the front q arter trim panel (Click here).

b. w/o Sliding Roof:
Remove the front q arter trim panel (Click here).


14. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

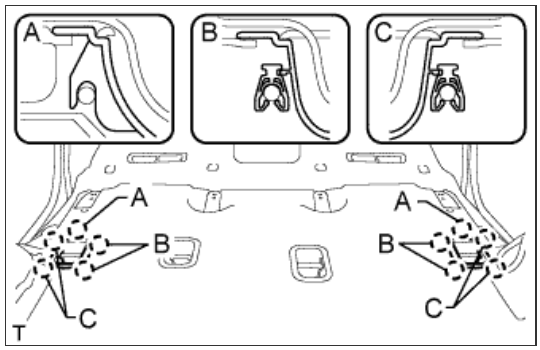

15. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

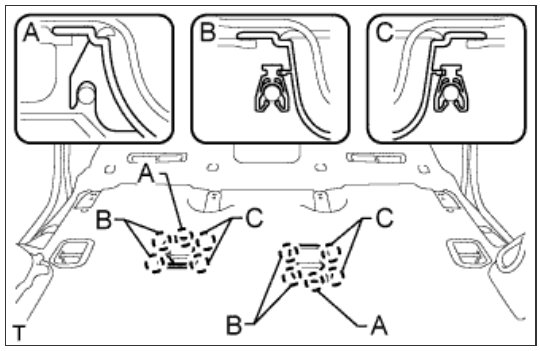


16. REMOVE FRONT FLOOR CARPET ASSEMBLY

a. Fold back the floor carpet.

HINT:


Fold back the carpet ntil it is possible to remove the rear No. 6 air d ct.

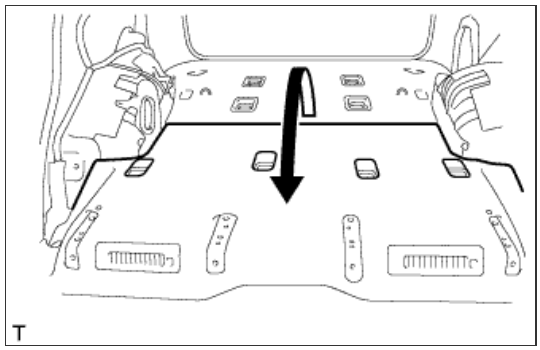

17. REMOVE REAR NO. 6 AIR DUCT


a. Disconnect the 2 connectors.

b. Remove the 5 screws and d ct.

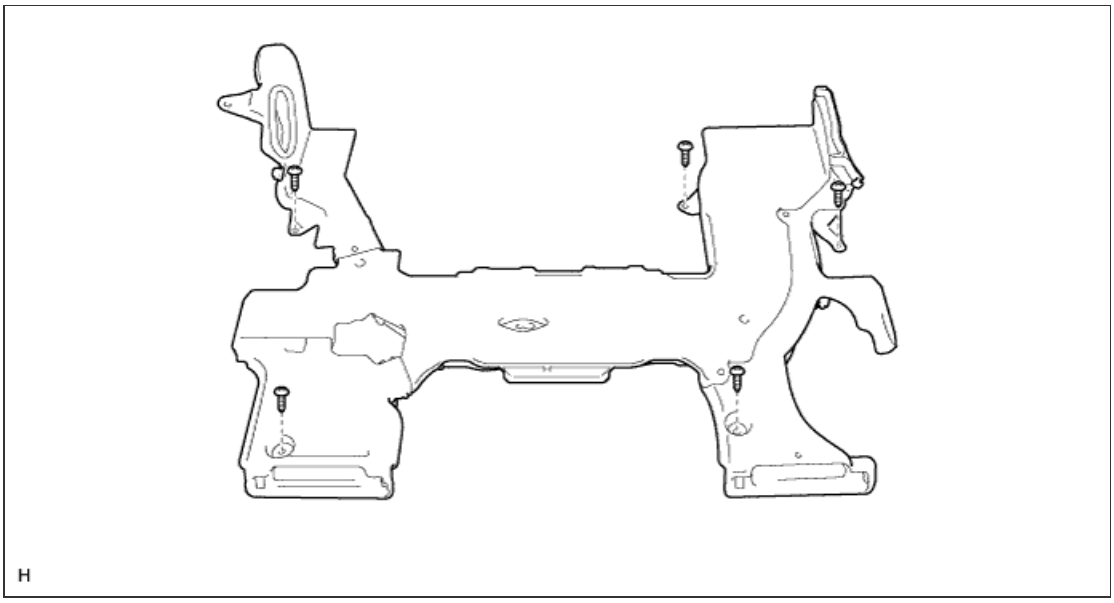

18. REMOVE DUCT TEMPERATURE SENSOR

a. Detach the 4 claws and remove the 2 sensors.

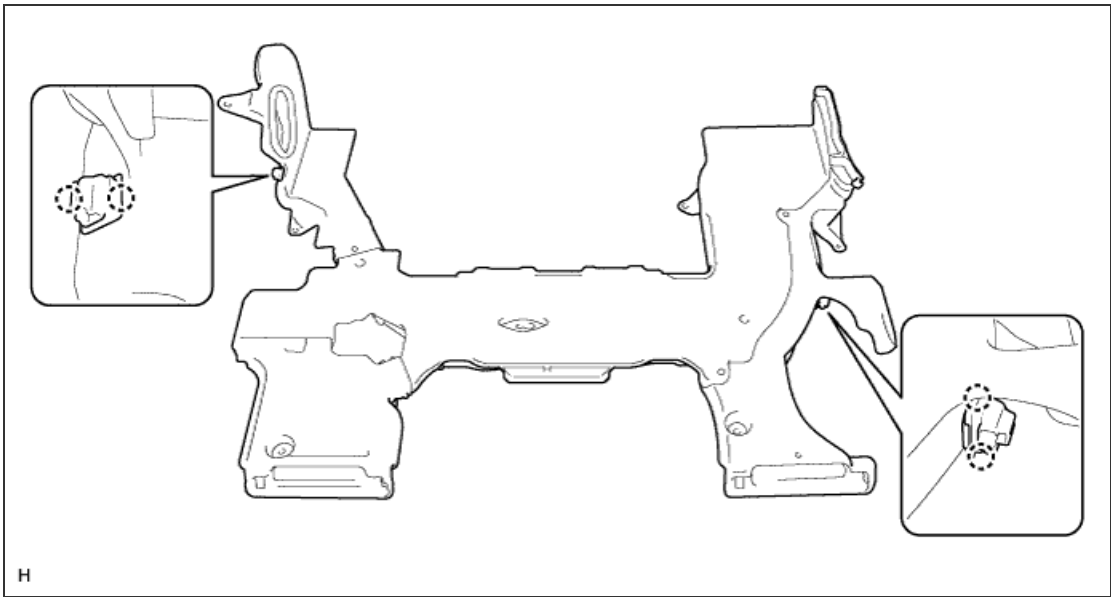

DUCT TEMPERATURE SENSOR (w/ Heater) > REMOVAL

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. for 60/40 Split Seat Type 40 Side:
Remove the rear No. 1 seat assembly (Click here).

b. for 60/40 Split Seat Type 60 Side:
Remove the rear No. 1 seat assembly (Click here).

3. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. for 60/40 Split Seat Type 40 Side:
Remove the rear No. 1 seat assembly (Click here).

b. for 60/40 Split Seat Type 60 Side:
Remove the rear No. 1 seat assembly (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY LH

a. for Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

5. REMOVE REAR NO. 2 SEAT ASSEMBLY RH

a. for Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

6. REMOVE REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Remove the rear door sc ff plate (Click here).

b. w/o Sliding Roof:
Remove the rear door sc ff plate (Click here).

7. REMOVE REAR DOOR SCUFF PLATE RH

a. w/ Sliding Roof:
Remove the rear door sc ff plate (Click here).

b. w/o Sliding Roof:
Remove the rear door sc ff plate (Click here).

8. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Remove the rear floor mat rear s rt plate (Click here).

b. w/o Sliding Roof:
Remove the rear floor mat rear s rt plate (Click here).

9. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

10. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Remove the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Remove the rear seat cover cap (Click here).

11. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front q arter trim panel (Click here).

b. w/o Sliding Roof:
Remove the front q arter trim panel (Click here).

12. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Remove the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Remove the rear seat cover cap (Click here).


13. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Remove the front q arter trim panel (Click here).

b. w/o Sliding Roof:
Remove the front q arter trim panel (Click here).


14. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

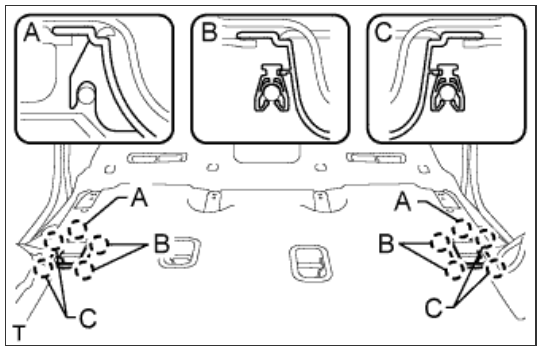

15. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

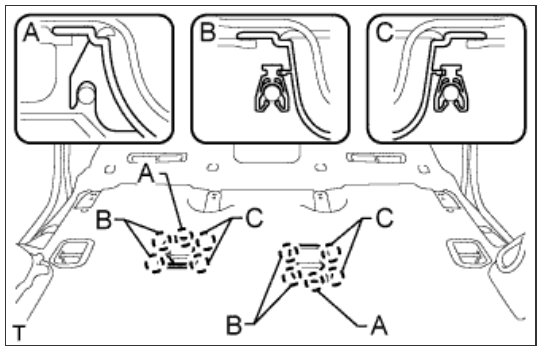


16. REMOVE FRONT FLOOR CARPET ASSEMBLY

a. Fold back the floor carpet.

HINT:


Fold back the carpet ntil it is possible to remove the rear No. 6 air d ct.

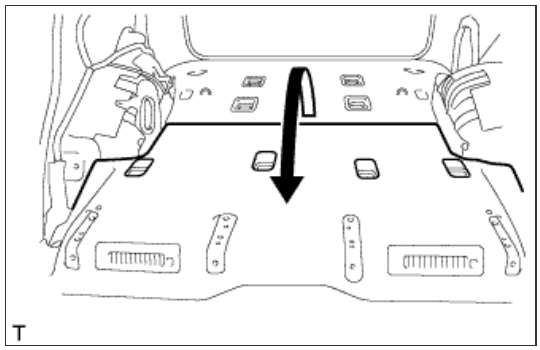

17. REMOVE REAR NO. 6 AIR DUCT


a. Disconnect the 2 connectors.

b. Remove the 5 screws and d ct.

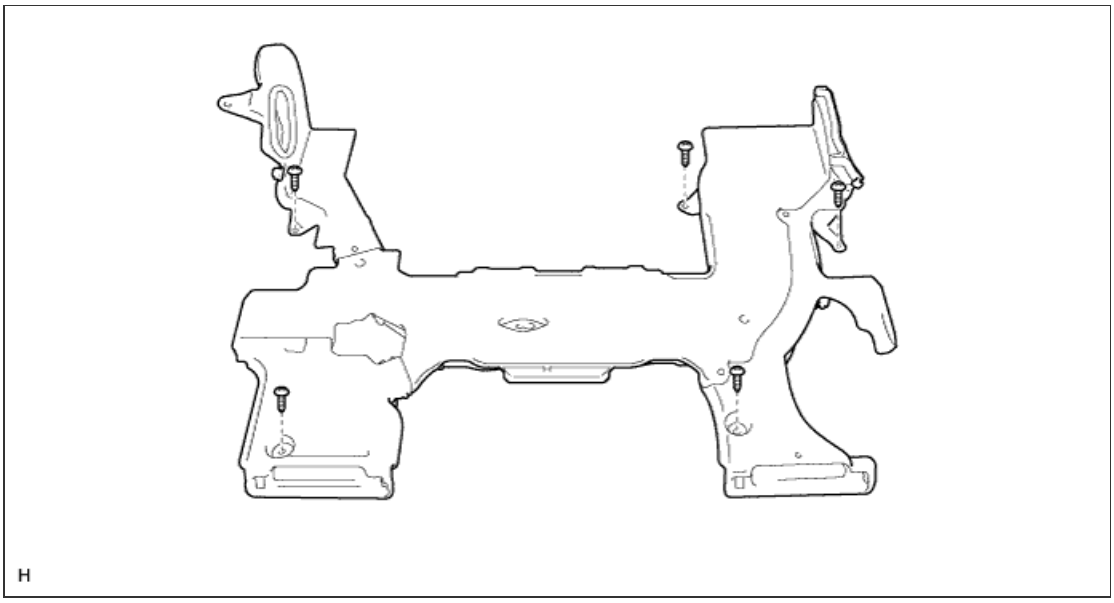

18. REMOVE DUCT TEMPERATURE SENSOR

a. Detach the 4 claws and remove the 2 sensors.

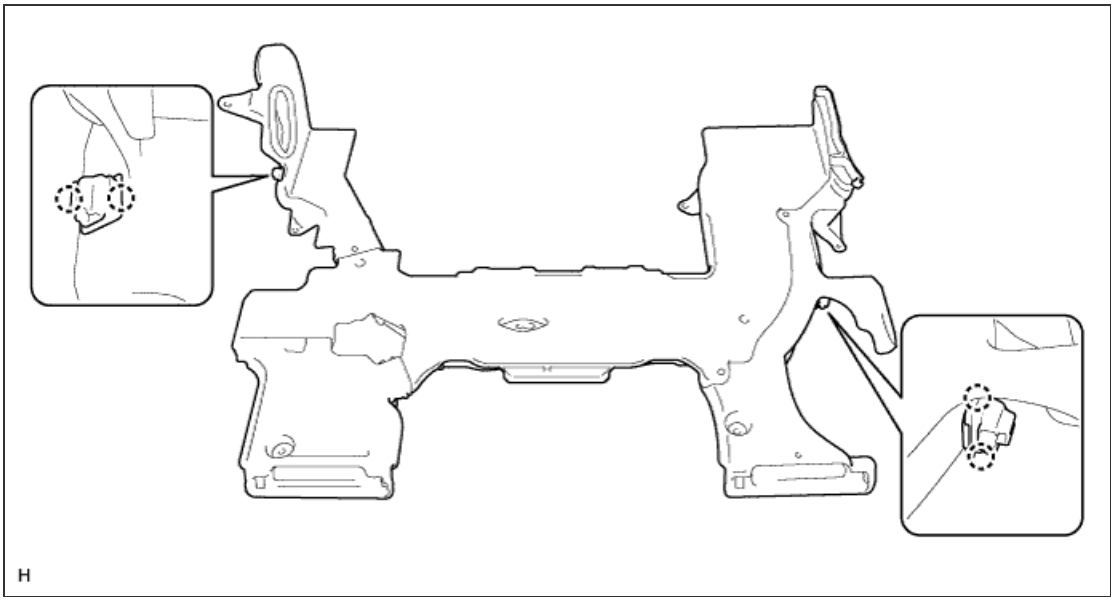

DUCT TEMPERATURE SENSOR (w/ Heater) > REMOVAL

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 1 SEAT ASSEMBLY LH

a. for 60/40 Split Seat Type 40 Side:
Remove the rear No. 1 seat assembly (Click here).

b. for 60/40 Split Seat Type 60 Side:
Remove the rear No. 1 seat assembly (Click here).

3. REMOVE REAR NO. 1 SEAT ASSEMBLY RH

a. for 60/40 Split Seat Type 40 Side:
Remove the rear No. 1 seat assembly (Click here).

b. for 60/40 Split Seat Type 60 Side:
Remove the rear No. 1 seat assembly (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY LH

a. for Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

5. REMOVE REAR NO. 2 SEAT ASSEMBLY RH

a. for Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Remove the rear No. 2 seat assembly (Click here).

6. REMOVE REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Remove the rear door sc ff plate (Click here).

b. w/o Sliding Roof:
Remove the rear door sc ff plate (Click here).

7. REMOVE REAR DOOR SCUFF PLATE RH

a. w/ Sliding Roof:
Remove the rear door sc ff plate (Click here).

b. w/o Sliding Roof:
Remove the rear door sc ff plate (Click here).

8. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Remove the rear floor mat rear s rt plate (Click here).

b. w/o Sliding Roof:
Remove the rear floor mat rear s rt plate (Click here).

9. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

a. Remove the tonnea cover.

10. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Remove the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Remove the rear seat cover cap (Click here).

11. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Remove the front q arter trim panel (Click here).

b. w/o Sliding Roof:
Remove the front q arter trim panel (Click here).

12. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Remove the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Remove the rear seat cover cap (Click here).


13. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Remove the front q arter trim panel (Click here).

b. w/o Sliding Roof:
Remove the front q arter trim panel (Click here).


14. REMOVE REAR NO. 1 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

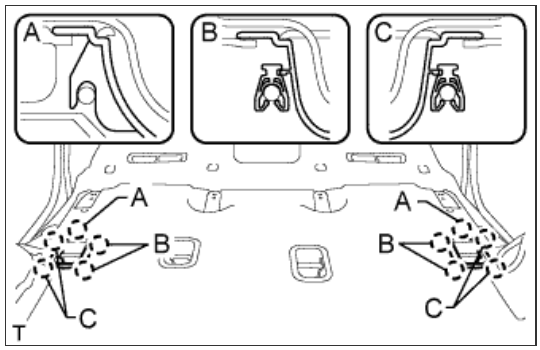

15. REMOVE REAR NO. 2 SEAT PROTECTOR

a. Detach the 10 claws and remove the 2 seat protectors.

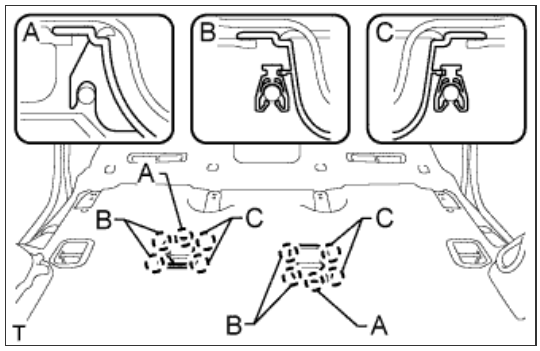


16. REMOVE FRONT FLOOR CARPET ASSEMBLY

a. Fold back the floor carpet.

HINT:


Fold back the carpet ntil it is possible to remove the rear No. 6 air d ct.

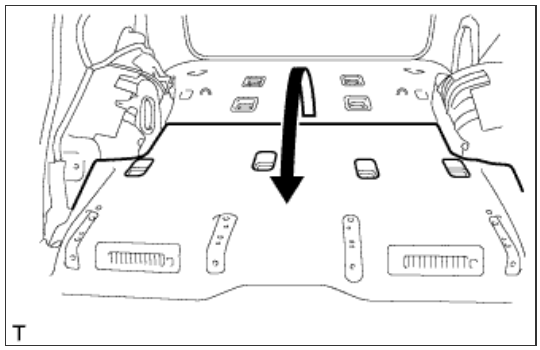

17. REMOVE REAR NO. 6 AIR DUCT


a. Disconnect the 2 connectors.

b. Remove the 5 screws and d ct.

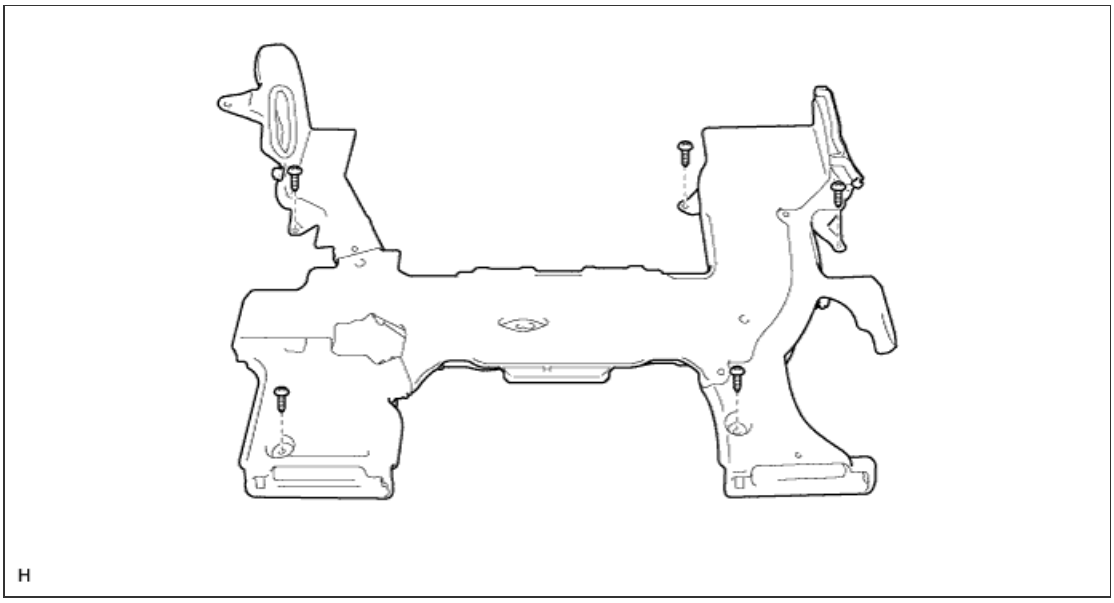

18. REMOVE DUCT TEMPERATURE SENSOR

a. Detach the 4 claws and remove the 2 sensors.

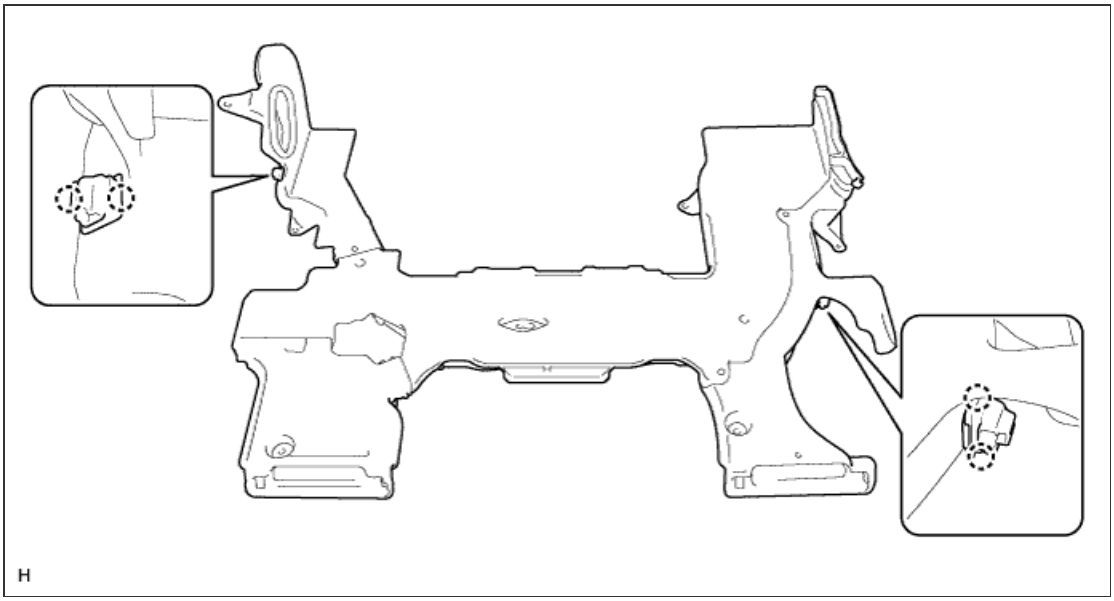

for Preparation Click here

1. INSPECT DUCT TEMPERATURE SENSOR

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	at 10 (50)	to 10.5 kΩ
1 - 2	at 15 (5)	7.5 to 8.3 kΩ
1 - 2	at 20 (68)	6.0 to 6.5 kΩ
1 - 2	at 25 (77)	4.8 to 5.2 kΩ
1 - 2	at 30 (86)	3.8 to 4.2 kΩ
1 - 2	at 35 ( )	3.1 to 3.4 kΩ
1 - 2	at 40 (104)	2.5 to 2.8 kΩ
1 - 2	at 45 (113)	2.0 to 2.3 kΩ
1 - 2	at 50 (122)	1.6 to 2.0 kΩ
1 - 2	at 55 (131)	1.3 to 1.6 kΩ
1 - 2	at 60 (140)	1.1 to 1.4 kΩ


If the result is not as specified, replace the duct te erature sensor.

NOTICE:

- **Touching the sensor even slightly may change the resistance value. Hold the connector of the sensor.**
- **When measuring the resistance, the sensor temperature must be the same as the ambient temperature.**

HINT:


As the te erature increases, the resistance decreases (See the graph).

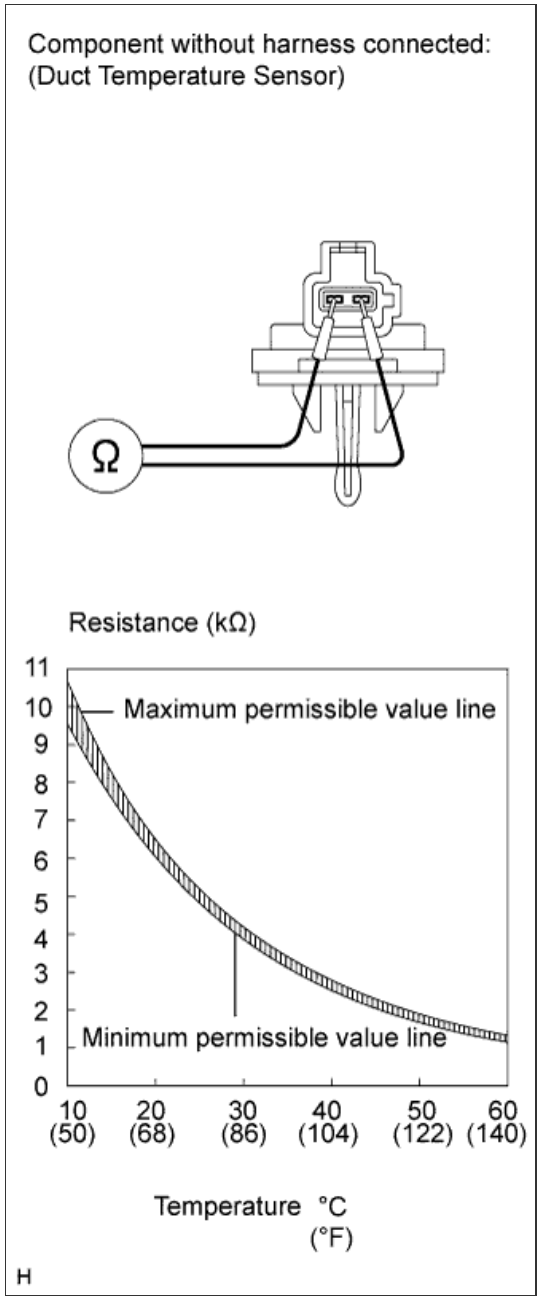

for Preparation Click here

1. INSTALL DUCT TEMPERATURE SENSOR


a. Attach the 4 claws to install the 2 sensors.

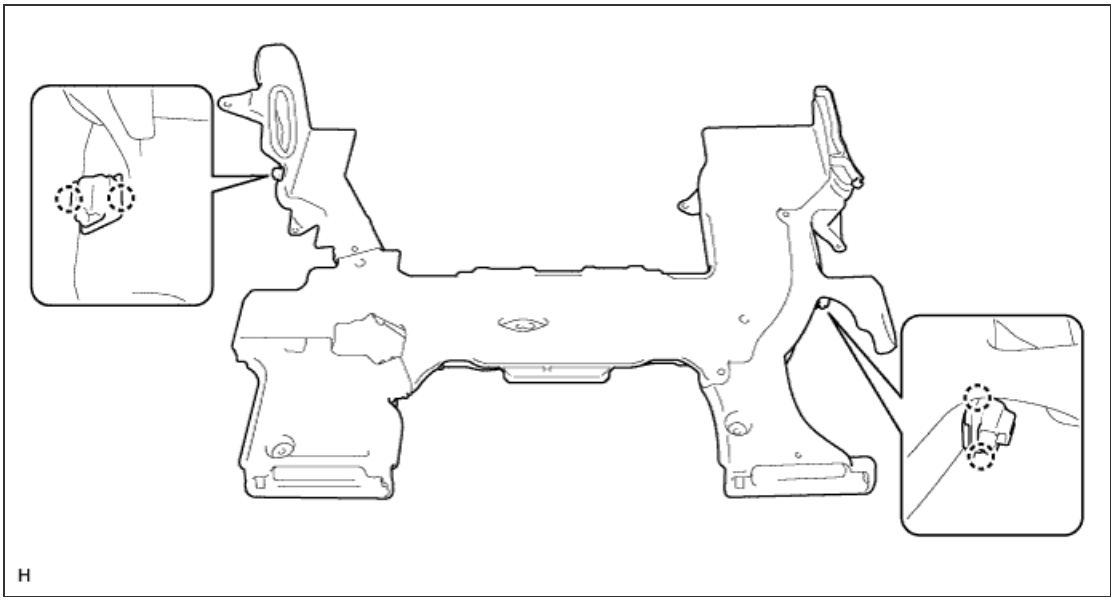

2. INSTALL REAR NO. 6 AIR DUCT

a. Install the duct with the 5 screws.

b. Connect the 2 connectors.

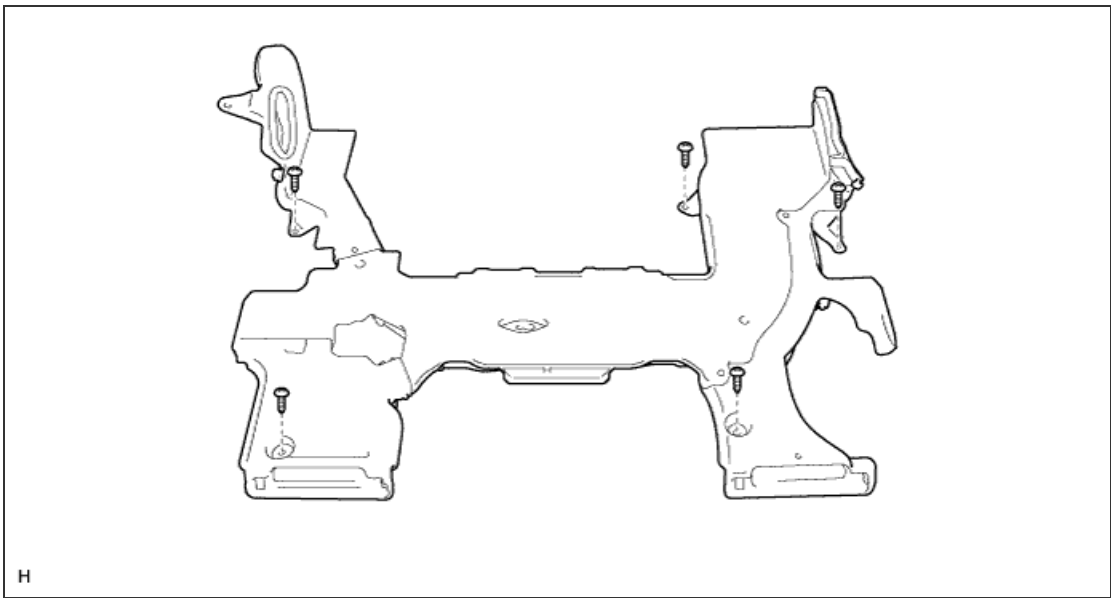


3. INSTALL FRONT FLOOR CARPET ASSEMBLY

a. Install the floor carpet.


4. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

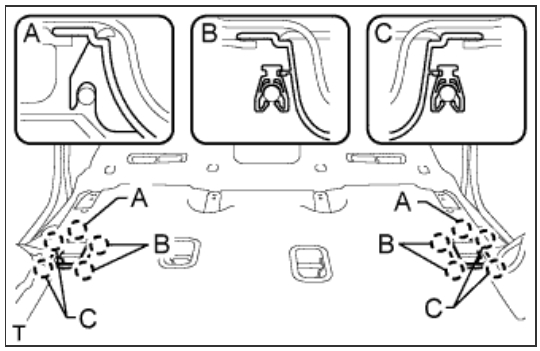

5. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

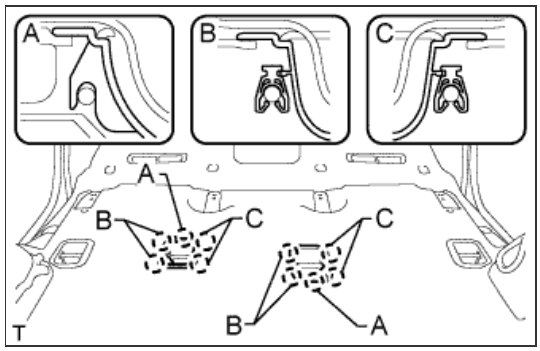

6. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Install the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Install the rear seat cover cap (Click here).

7. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel (Click here).

8. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Install the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Install the rear seat cover cap (Click here).

9. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Install the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel (Click here).

10. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

11. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Install the rear floor mat rear support plate (Click here).

b. w/o Sliding Roof:
Install the rear floor mat rear support plate (Click here).

12. INSTALL REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Install the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Install the rear door scuff plate (Click here).

13. INSTALL REAR DOOR SCUFF PLATE RH

a. w/ Sliding Roof:
Install the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Install the rear door scuff plate (Click here).

14. INSTALL REAR NO. 2 SEAT ASSEMBLY LH

a. for Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

15. INSTALL REAR NO. 2 SEAT ASSEMBLY RH

a. for Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

16. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. for 4 lit eat de: e 4 i
Install the rear No. 1 seat assembly (Click here).

b. for 4 lit eat de: e i
Install the rear No. 1 seat assembly (Click here).

17. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. for 4 lit eat de: e 4 i
Install the rear No. 1 seat assembly (Click here).

b. for 4 lit eat de: e i
Install the rear No. 1 seat assembly (Click here).

18. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

herdisconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


19. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

1. INSTALL DUCT TEMPERATURE SENSOR


a. Attach the 4 claws to install the 2 sensors.

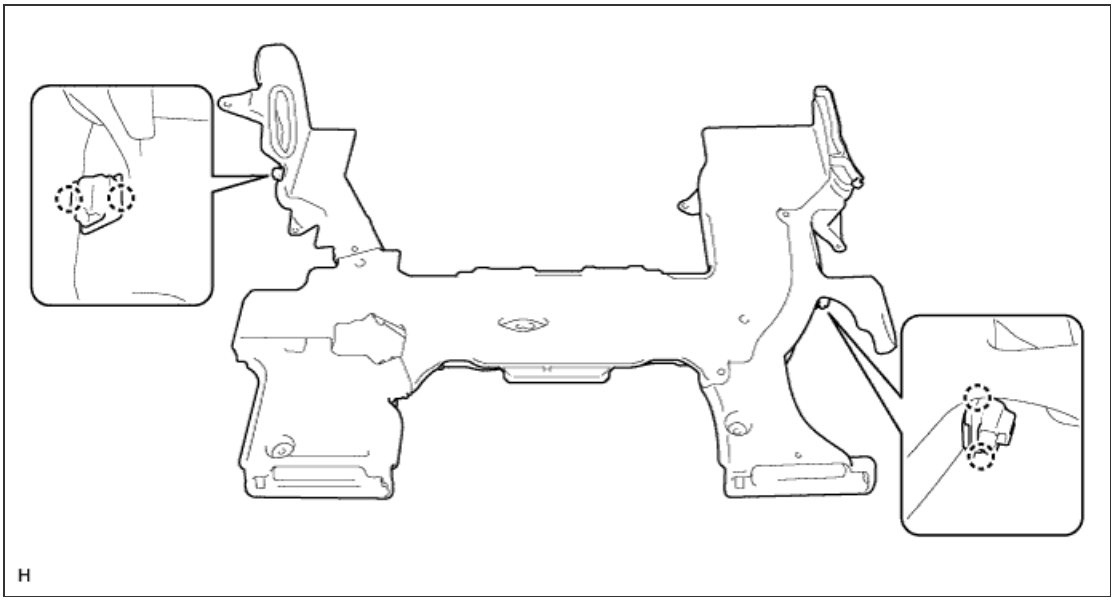

2. INSTALL REAR NO. 6 AIR DUCT

a. Install the duct with the 5 screws.

b. Connect the 2 connectors.

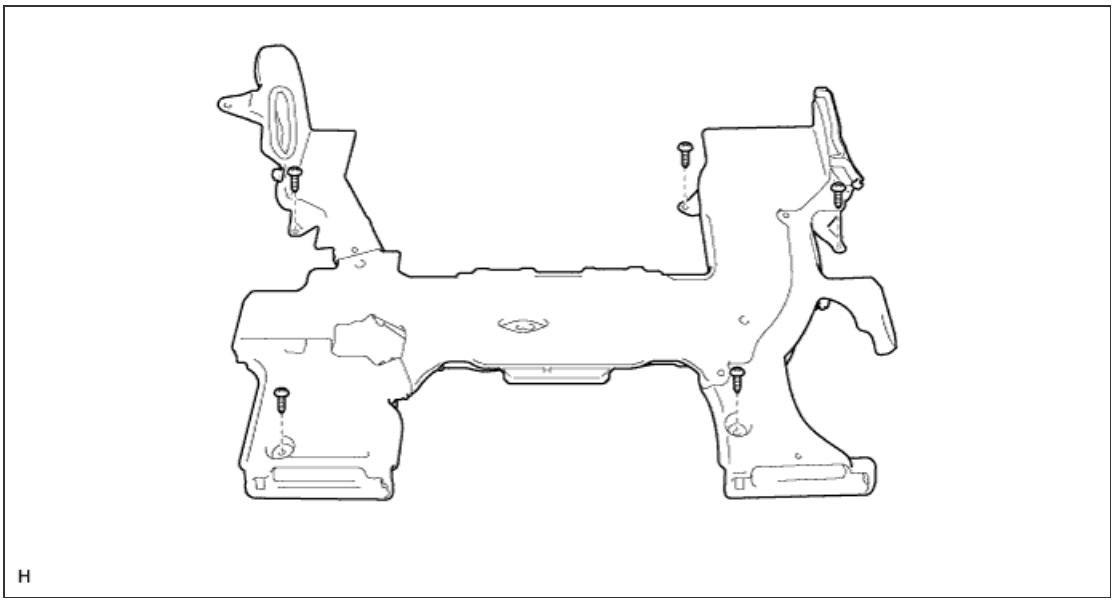


3. INSTALL FRONT FLOOR CARPET ASSEMBLY

a. Install the floor carpet.


4. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

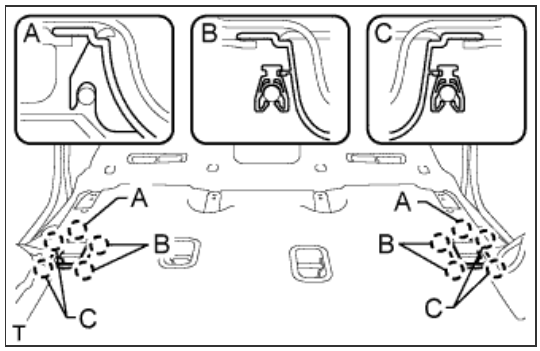

5. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

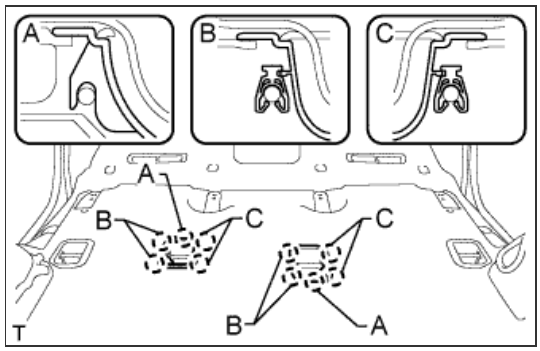

6. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Install the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Install the rear seat cover cap (Click here).

7. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel (Click here).

8. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Install the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Install the rear seat cover cap (Click here).

9. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Install the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel (Click here).

10. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

11. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Install the rear floor mat rear support plate (Click here).

b. w/o Sliding Roof:
Install the rear floor mat rear support plate (Click here).

12. INSTALL REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Install the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Install the rear door scuff plate (Click here).

13. INSTALL REAR DOOR SCUFF PLATE RH

a. w/ Sliding Roof:
Install the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Install the rear door scuff plate (Click here).

14. INSTALL REAR NO. 2 SEAT ASSEMBLY LH

a. for Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

15. INSTALL REAR NO. 2 SEAT ASSEMBLY RH

a. for Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

16. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. for 4 lit eat de: e 4 i
Install the rear No. 1 seat assembly (Click here).

b. for 4 lit eat de: e i
Install the rear No. 1 seat assembly (Click here).

17. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. for 4 lit eat de: e 4 i
Install the rear No. 1 seat assembly (Click here).

b. for 4 lit eat de: e i
Install the rear No. 1 seat assembly (Click here).

18. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

herdisconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


19. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

1. INSTALL DUCT TEMPERATURE SENSOR


a. Attach the 4 claws to install the 2 sensors.

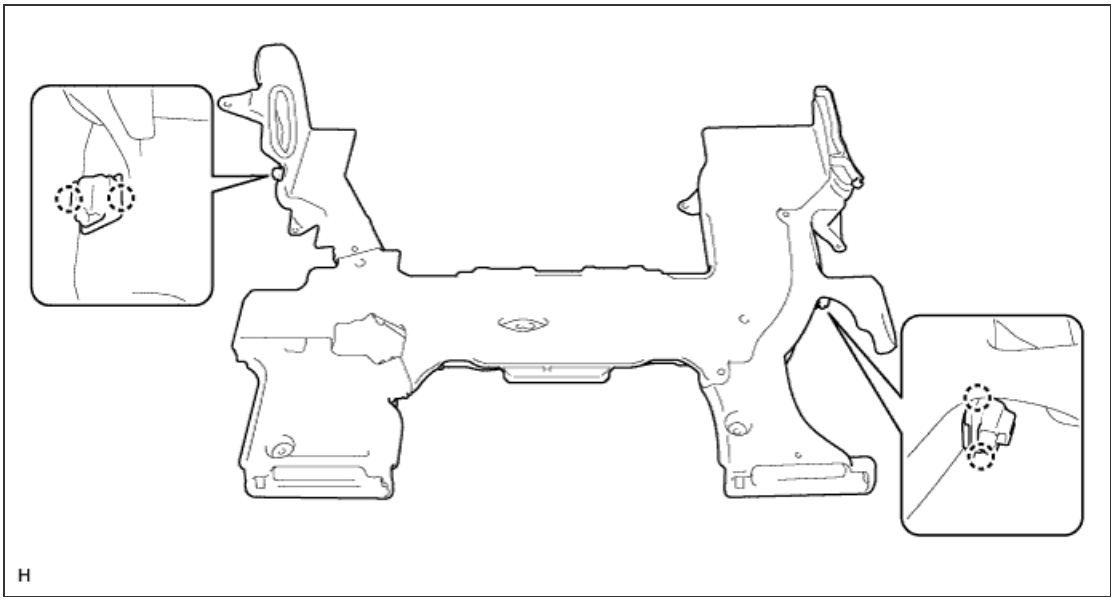

2. INSTALL REAR NO. 6 AIR DUCT

a. Install the duct with the 5 screws.

b. Connect the 2 connectors.

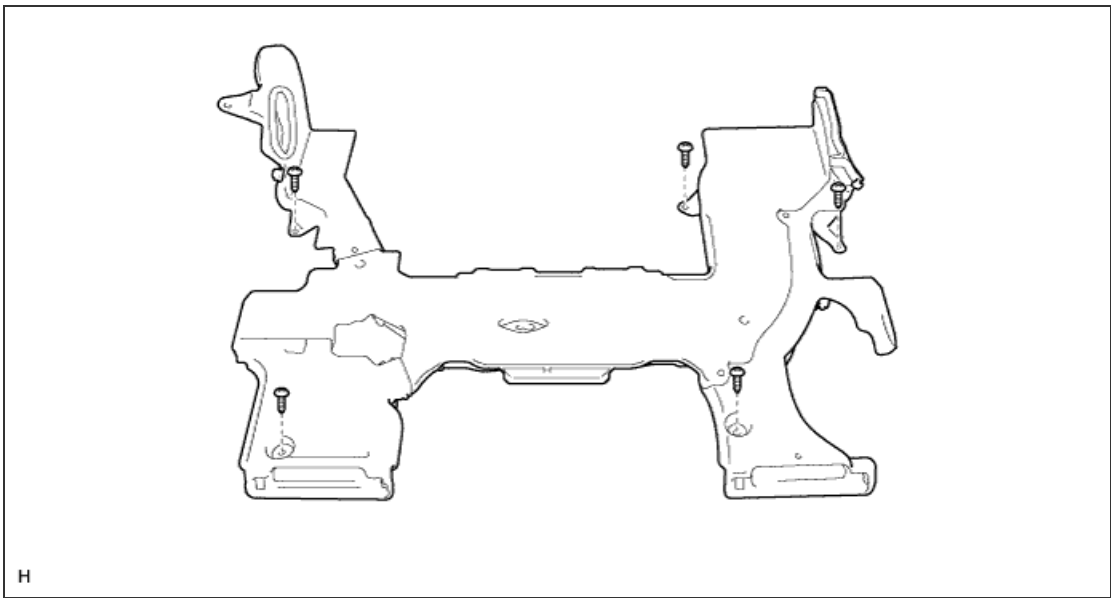


3. INSTALL FRONT FLOOR CARPET ASSEMBLY

a. Install the floor carpet.


4. INSTALL REAR NO. 1 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

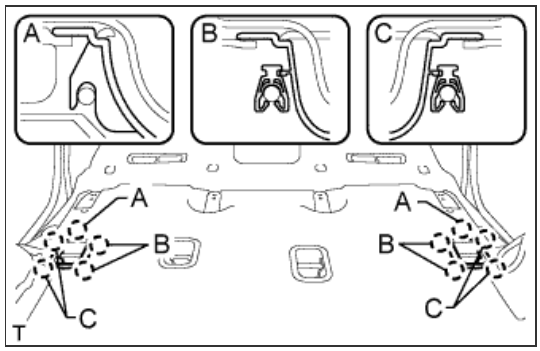

5. INSTALL REAR NO. 2 SEAT PROTECTOR

a. Attach the 10 claws to install the 2 seat protectors.

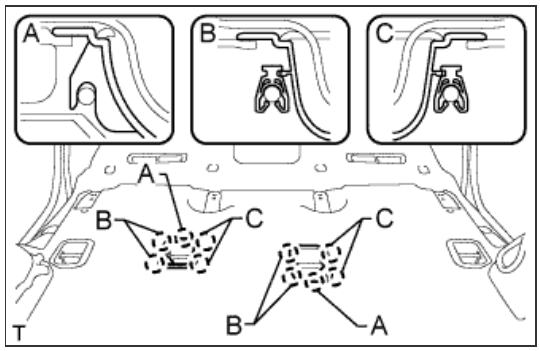

6. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Install the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Install the rear seat cover cap (Click here).

7. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

a. w/ Sliding Roof:
Install the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel (Click here).

8. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat)

a. w/ Sliding Roof:
Install the rear seat cover cap (Click here).

b. w/o Sliding Roof:
Install the rear seat cover cap (Click here).

9. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

a. w/ Sliding Roof:
Install the front quarter trim panel (Click here).

b. w/o Sliding Roof:
Install the front quarter trim panel (Click here).

10. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

a. Install the tonneau cover assembly.

11. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE

a. w/ Sliding Roof:
Install the rear floor mat rear support plate (Click here).

b. w/o Sliding Roof:
Install the rear floor mat rear support plate (Click here).

12. INSTALL REAR DOOR SCUFF PLATE LH

a. w/ Sliding Roof:
Install the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Install the rear door scuff plate (Click here).

13. INSTALL REAR DOOR SCUFF PLATE RH

a. w/ Sliding Roof:
Install the rear door scuff plate (Click here).

b. w/o Sliding Roof:
Install the rear door scuff plate (Click here).

14. INSTALL REAR NO. 2 SEAT ASSEMBLY LH

a. for Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

15. INSTALL REAR NO. 2 SEAT ASSEMBLY RH

a. for Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

b. except Face to Face Seat Type:
Install the rear No. 2 seat assembly (Click here).

16. INSTALL REAR NO. 1 SEAT ASSEMBLY LH

a. for 4 lit eat de: e 4 i
Install the rear No. 1 seat assembly (Click here).

b. for 4 lit eat de: e i
Install the rear No. 1 seat assembly (Click here).

17. INSTALL REAR NO. 1 SEAT ASSEMBLY RH

a. for 4 lit eat de: e 4 i
Install the rear No. 1 seat assembly (Click here).

b. for 4 lit eat de: e i
Install the rear No. 1 seat assembly (Click here).

18. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL


NOTICE:

herdisconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

19. CHECK SRS WARNING LIGHT

a. Check the SRS warning light (Click here).

for Preparation Click here

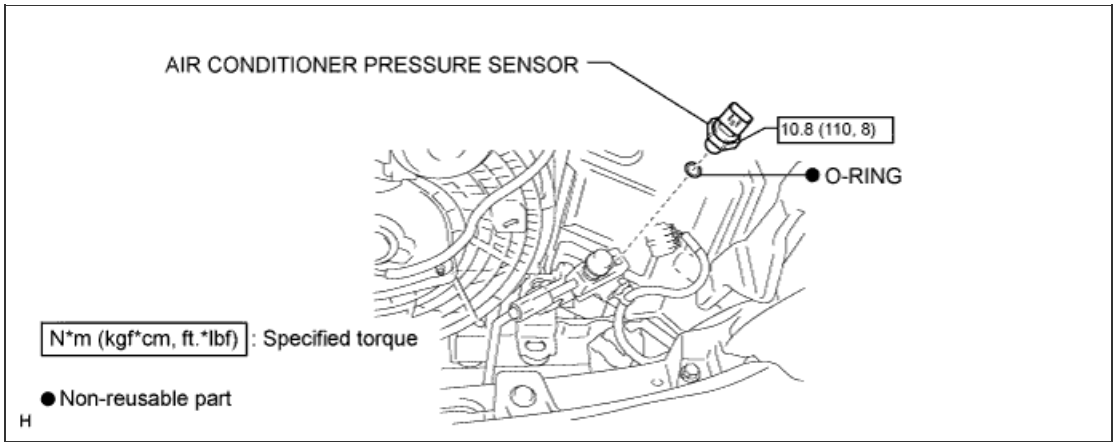

AIR CONDITIONING PRESSURE SENSOR > REMOVAL

for Preparation Click here

1. REMOVE FRONT BUMPER COVER

a. for Standard:
Remove the front bumper cover (Click here).

b. w/ Winch:
Remove the front bumper cover (Click here).

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C tch on.

c. Operate the cooler compre or while the engine ped i appro mately 1000 rpm for 5 to 6 minute to circulate the refrigerant and collect the compre or oil remaining in each component into the cooler compre or.

d. Stop the engine.

e. Recover the refrigerant from the A/C tem u ng a refrigerant recovery unit.

3. REMOVE AIR CONDITIONER PRESSURE SENSOR


a. Di connect the connector.

b. Remove the pre ure en or.

c. Remove O-ring from the pre ure en or.

NOTICE:

Seal the opening of the di connected part u ng vinyl tape to prevent moi ture and foreign matter from entering them.

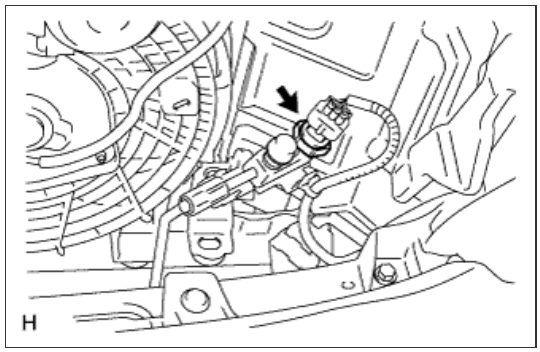

AIR CONDITIONING PRESSURE SENSOR > REMOVAL

for Preparation Click here

1. REMOVE FRONT BUMPER COVER

a. for Standard:
Remove the front bumper cover (Click here).

b. w/ Winch:
Remove the front bumper cover (Click here).

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C tch on.

c. Operate the cooler compre or while the engine ped i appro mately 1000 rpm for 5 to 6 minute to circulate the refrigerant and collect the compre or oil remaining in each component into the cooler compre or.

d. Stop the engine.

e. Recover the refrigerant from the A/C tem u ng a refrigerant recovery unit.

3. REMOVE AIR CONDITIONER PRESSURE SENSOR


a. Di connect the connector.

b. Remove the pre ure en or.

c. Remove O-ring from the pre ure en or.

NOTICE:

Seal the opening of the di connected part u ng vinyl tape to prevent moi ture and foreign matter from entering them.

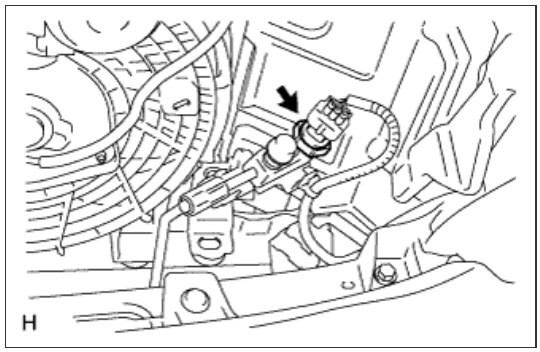

for Preparation Click here

1. INSTALL AIR CONDITIONER PRESSURE SENSOR

a. Sufficiently apply compressor oil to a new O-ring and t e fitting surface of t e pressure sensor.


Compressor oil:
ND-OIL 8 or equivalent

b. Install O-ring on t e pressure switc

c. nstall t e pressure sensor.

Torque:
10.8 N*m{ 110 kgf*cm , 8 ft.*lbf }

d. Connect t e connector.

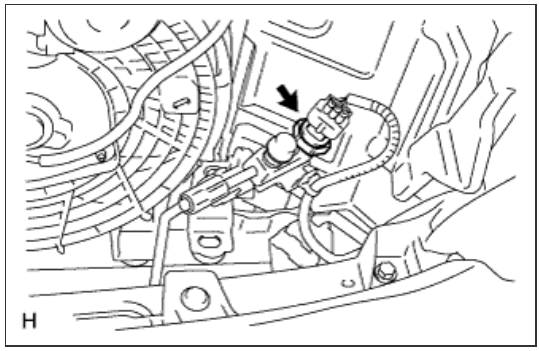

2. CHARGE REFRIGERANT


SST
09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. C arge refrigerant H -134a (R134a).

Standard:

Condenser Core T ickness	Air Conditioning Type	Cool Box	Refrigerant C arging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

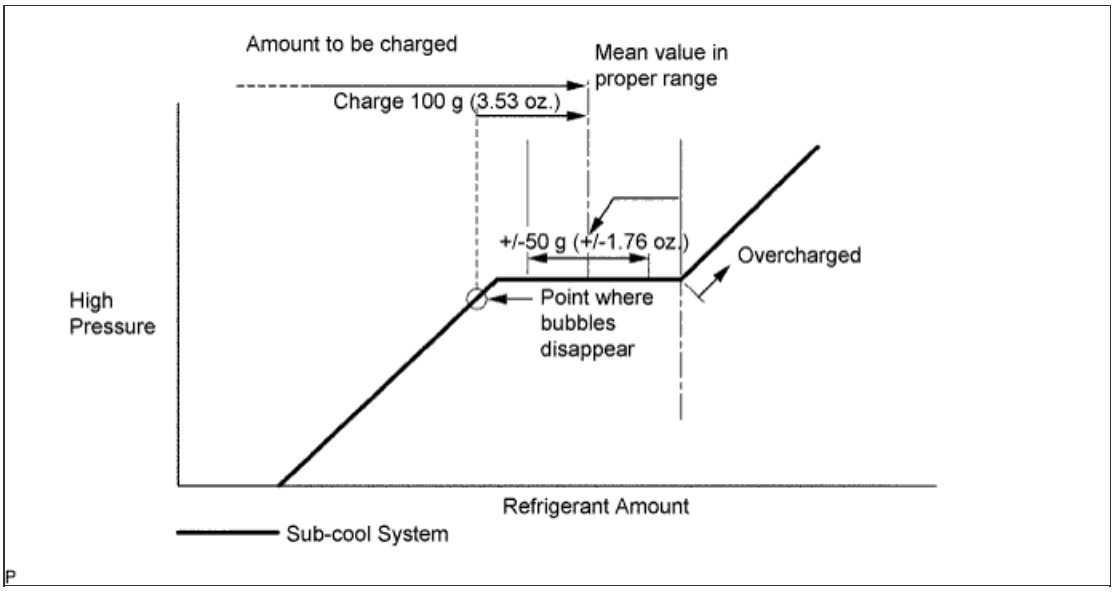

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor ill not ork properly ithout any refrigerant, and ill overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not ith the sight glass.**

3. WAR UP ENGINE

a. Warm up t e engine at less t an 1850 rpm for 2 minutes or more after c arging t e refrigerant.

NOTICE:

Be sure to warm up t e compressor w en turning t e A/C switc is on after removing and installing t e cooler refrigerant lines (including t e compressor), to prevent damage to t e compressor.

4. CHEC REFRIGERANT GAS LEA

a. After rec arging t e refrigerant gas, c eck for refrigerant gas leakage using a alogen leak detector.


b. Perform t e operation under t ese conditions:

- Stop t e engine.
- Secure good ventilation (t e alogen leak detector may react to volatile gases ot er t an refrigerant, suc as evaporated gasoline or ex aust gas).
- Repeat t e test 2 or 3 times.
- Make sure t at some refrigerant remains in t e refrigeration system. W en compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a alogen leak detector, c eck t e refrigerant line for leakage.

d. If a gas leak is not detected on t e drain ose, remove t e blower motor control (blower resistor) from t e cooling unit. Insert t e alogen leak detector sensor into t e unit and perform t e test.

e. Disconnect t e connector and wait for approximately 20 minutes. Bring t e alogen leak detector close to t e pressure switc and perform t e test.

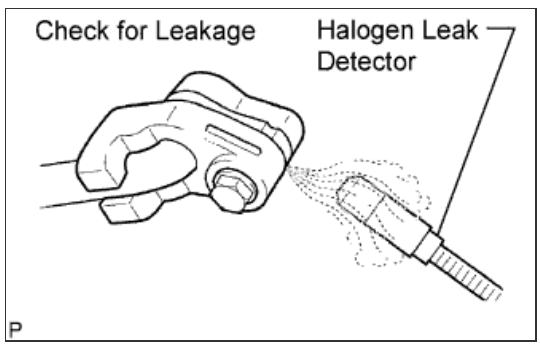

5. INSTALL FRONT U PER CO ER

a. for Standard:
Install t e front bumper cover (Click ere).

b. w/ Winc
nstall t e front bumper cover (Click ere).

for Preparation Click here

1. INSTALL AIR CONDITIONER PRESSURE SENSOR

a. Sufficiently apply compressor oil to a new O-ring and t e fitting surface of t e pressure sensor.


Compressor oil:
ND-OIL 8 or equivalent

b. Install O-ring on t e pressure switc

c. nstall t e pressure sensor.

Torque:
10.8 N*m{ 110 kgf*cm , 8 ft.*lbf }

d. Connect t e connector.

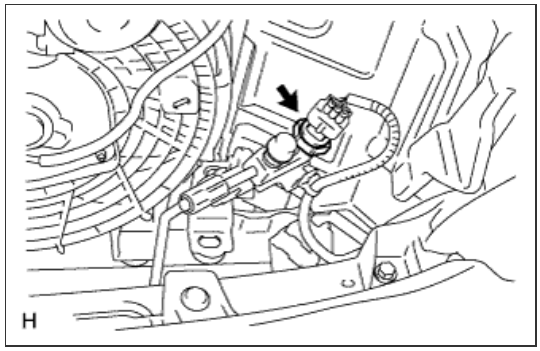

2. CHARGE REFRIGERANT


SST
09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. C arge refrigerant H -134a (R134a).

Standard:

Condenser Core T ickness	Air Conditioning Type	Cool Box	Refrigerant C arging Amount
22 mm (0.866 in.)	w/o Rear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o Rear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ Rear Cooler	w/ Cool Box	970 +/-30 g (34.2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

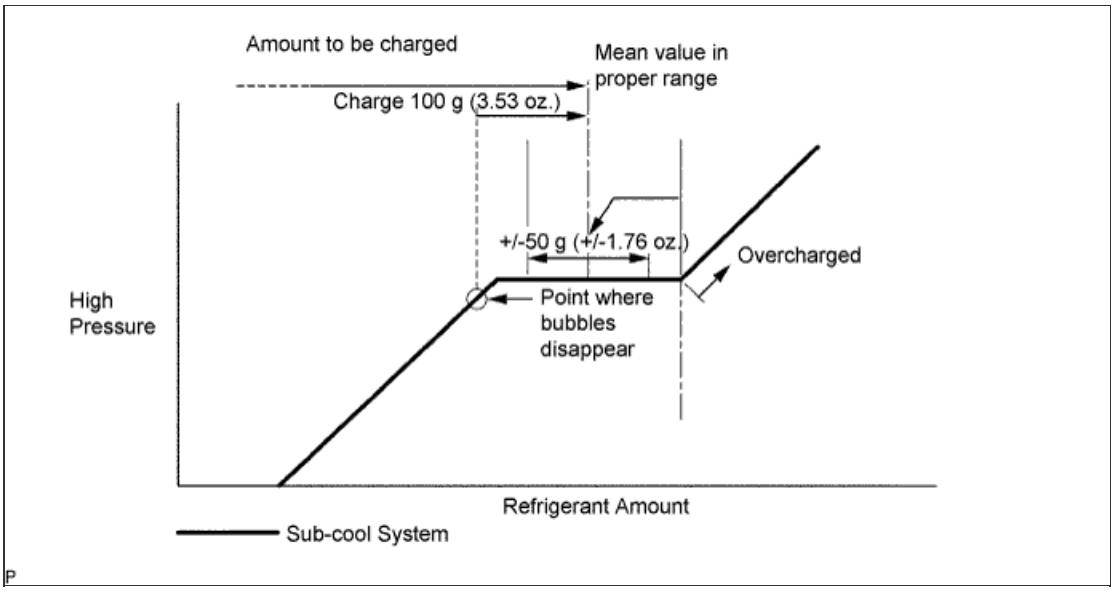

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor ill not ork properly ithout any refrigerant, and ill overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not ith the sight glass.**

3. WAR UP ENGINE

a. Warm up t e engine at less t an 1850 rpm for 2 minutes or more after c arging t e refrigerant.

NOTICE:

Be sure to warm up t e compressor w en turning t e A/C switc is on after removing and installing t e cooler refrigerant lines (including t e compressor), to prevent damage to t e compressor.

4. CHEC REFRIGERANT GAS LEA

a. After rec arging t e refrigerant gas, c eck for refrigerant gas leakage using a alogen leak detector.


b. Perform t e operation under t ese conditions:

- Stop t e engine.
- Secure good ventilation (t e alogen leak detector may react to volatile gases ot er t an refrigerant, suc as evaporated gasoline or ex aust gas).
- Repeat t e test 2 or 3 times.
- Make sure t at some refrigerant remains in t e refrigeration system. W en compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a alogen leak detector, c eck t e refrigerant line for leakage.

d. If a gas leak is not detected on t e drain ose, remove t e blower motor control (blower resistor) from t e cooling unit. Insert t e alogen leak detector sensor into t e unit and perform t e test.

e. Disconnect t e connector and wait for approximately 20 minutes. Bring t e alogen leak detector close to t e pressure switc and perform t e test.

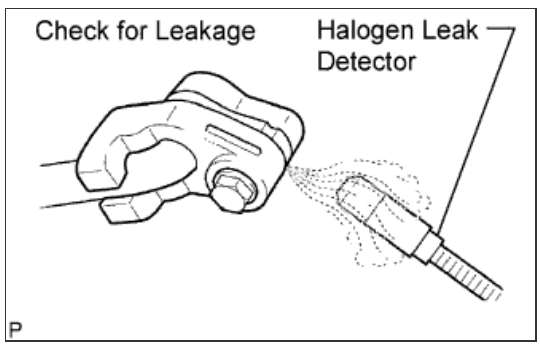



5. INSTALL FRONT U PER CO ER


a. for Standard:
Install t e front bumper cover (Click ere).

b. w/ Winc
nstall t e front bumper cover (Click ere).

for Preparation Click here

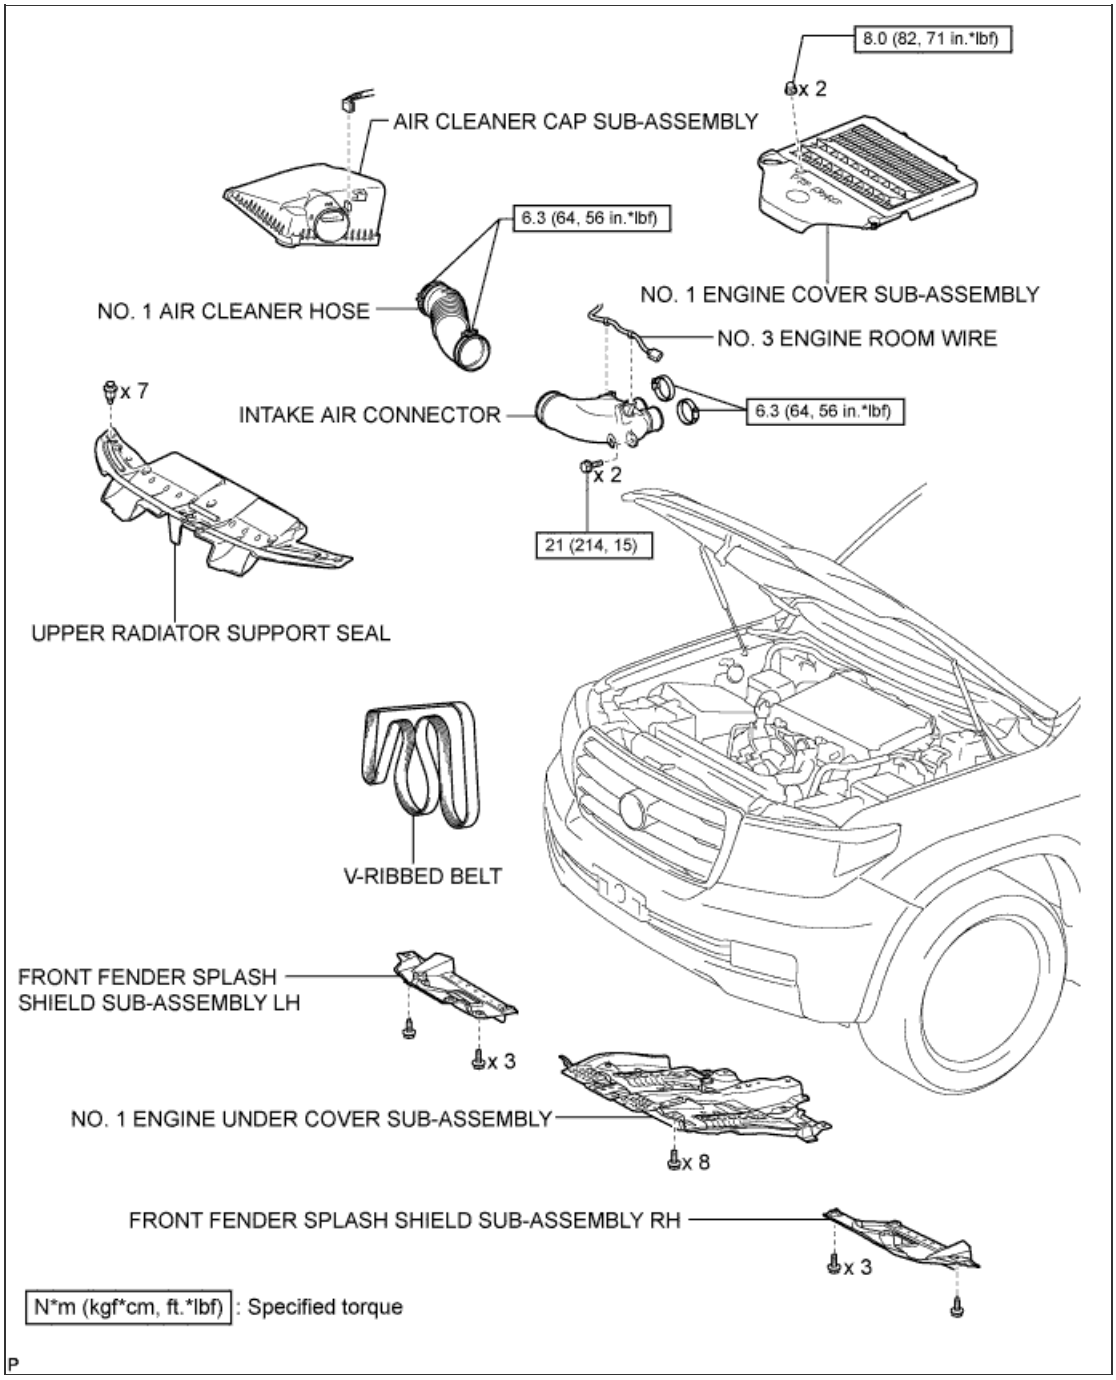

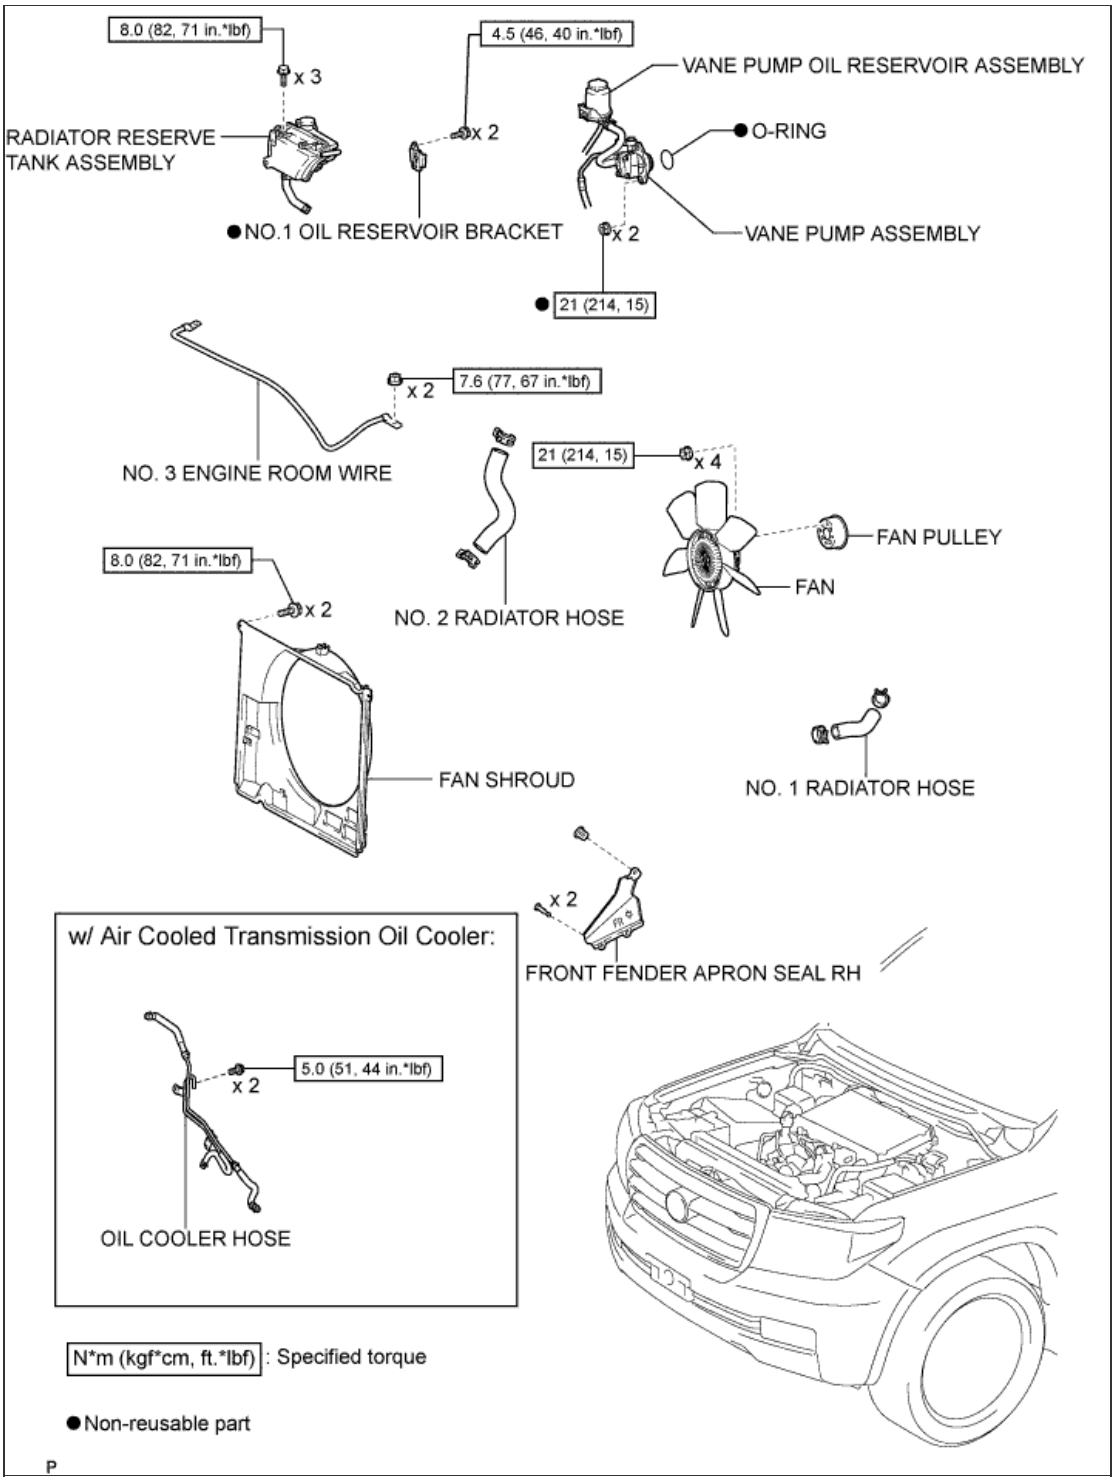
8.0 (82, 71 in.*lbf)
x 3
RADIATOR RESERVE TANK ASSEMBLY
4.5 (46, 40 in.*lbf)
x 2
VANE PUMP OIL RESERVOIR ASSEMBLY
O-RING
VANE PUMP ASSEMBLY
x 2
21 (214, 15)
NO.1 OIL RESERVOIR BRACKET
x 2
7.6 (77, 67 in.*lbf)
NO. 3 ENGINE ROOM WIRE
21 (214, 15)
x 4
FAN PULLEY
FAN
NO. 2 RADIATOR HOSE
8.0 (82, 71 in.*lbf)
x 2
FAN SHROUD
NO. 1 RADIATOR HOSE
x 2
FRONT FENDER APRON SEAL RH
w/ Air Cooled Transmission Oil Cooler:
5.0 (51, 44 in.*lbf)
x 2
OIL COOLER HOSE
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
P

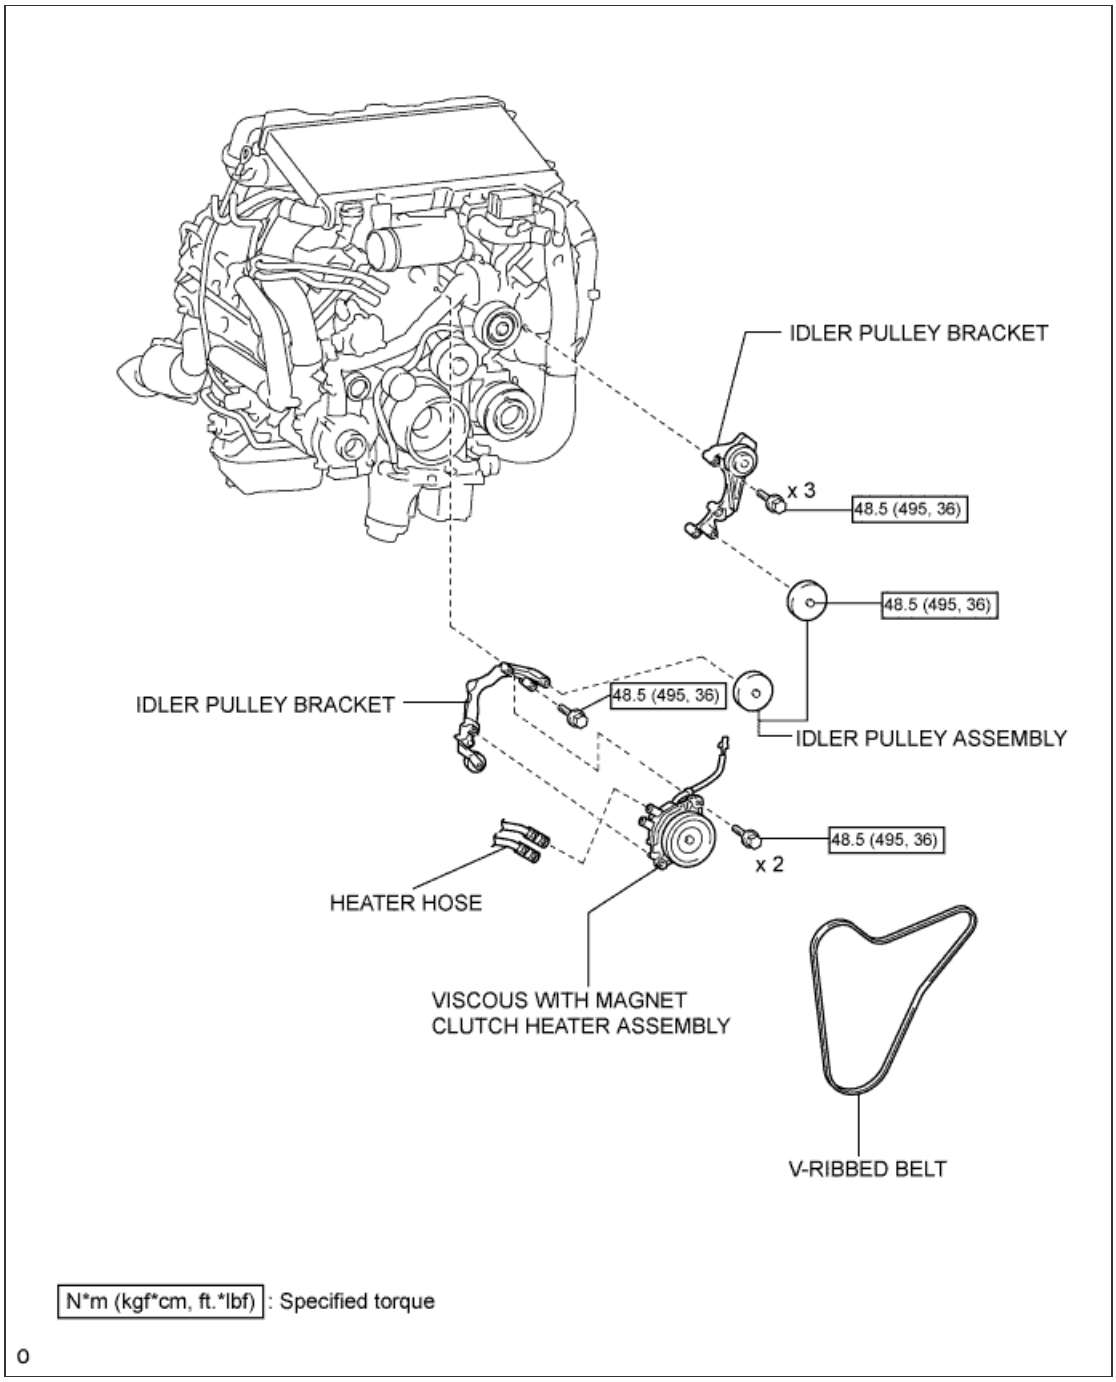
IDLER PULLEY BRACKET
x 3
48.5 (495, 36)
48.5 (495, 36)
IDLER PULLEY BRACKET
48.5 (495, 36)
IDLER PULLEY ASSEMBLY
48.5 (495, 36)
x 2
HEATER HOSE
VISCOUS WITH MAGNET
CLUTCH HEATER ASSEMBLY
V-RIBBED BELT
N*m (kgf*cm, ft.*lbf) : Specified torque
o

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).


3. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).

4. REMOVE NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. Remove the 10 bolts and No. 1 engine under cover.

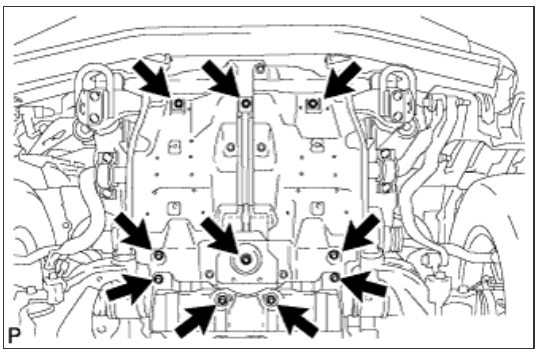

5. DRAIN ENGINE COOLANT


a. for 1
rain engine coolant (Click here).

b. for 2U
rain engine coolant (Click here).

c. for 1GR-FE:
Drain engine coolant (Click here).

6. REMOVE UPPER RADIATOR SUPPORT SEAL


a. Remove the 7 clips and radiator support seal.

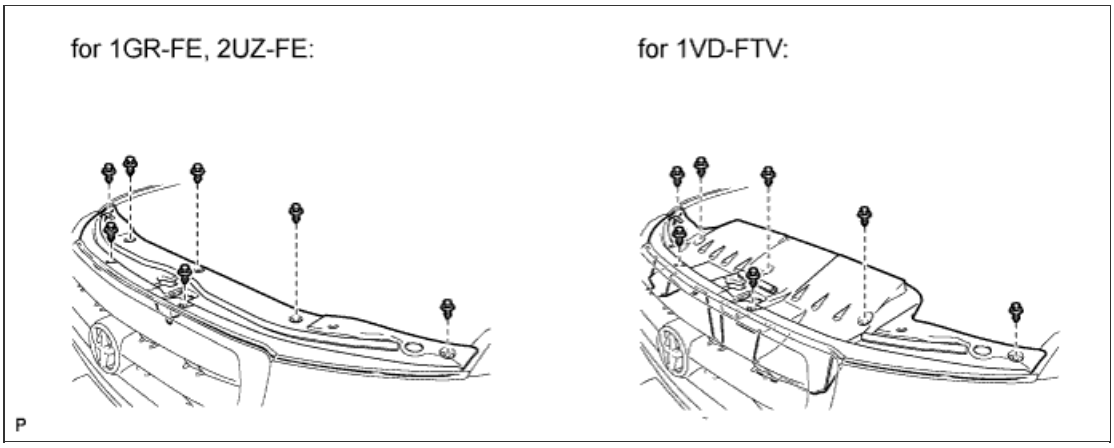

7. REMOVE NO. 3 ENGINE ROOM WIRE


a. Disconnect the 4 wire harness clamps.

b. Remove the 2 nuts and No. 3 engine room wire.

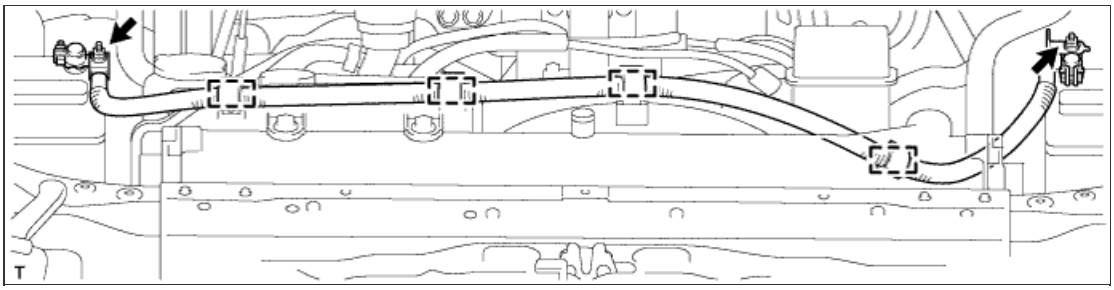

8. REMOVE NO. 1 ENGINE COVER SUB-ASSEMBLY


a. Remove the 2 nuts and No. 1 engine cover.

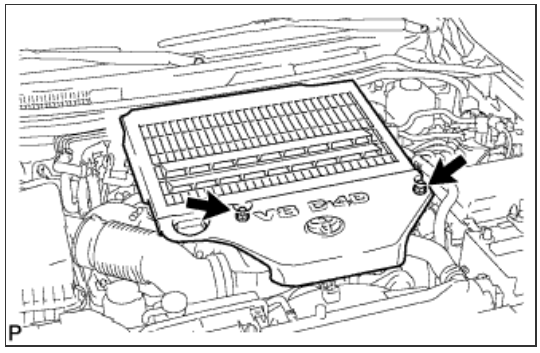

9. REMOVE AIR CLEANER CAP SUB-ASSEMBLY


a. oosen the hose clamp and disconnect the connector.

b. Using a clip remover, detach the 3 clamps and remove the air cleaner cap.

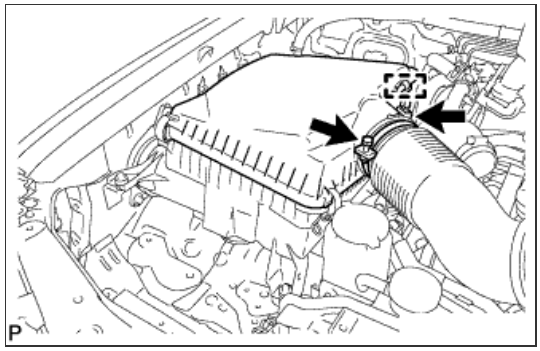

10. REMOVE NO. 1 AIR CLEANER HOSE


a. oosen the hose clamp and remove the No. 1 air cleaner hose.

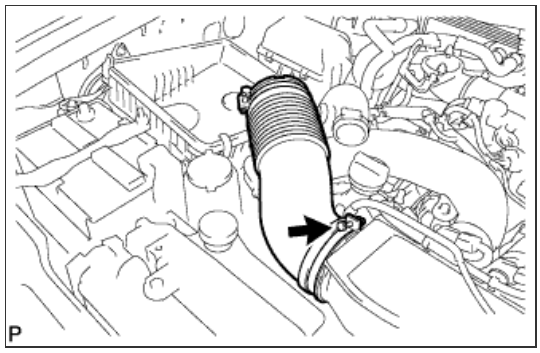


11. REMOVE INTAKE AIR CONNECTOR

a. Disconnect the 2 connectors from the viscous heater and water temperature sensor.

b. Using a clip remover, detach the 3 wire harness clamps.

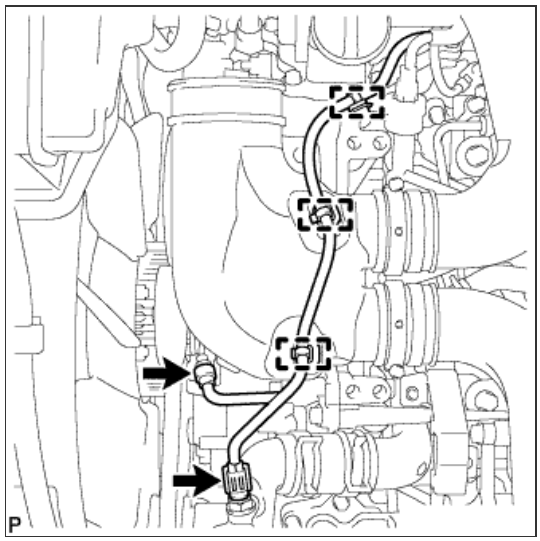


c. oosen the 2 hose clamps and remove the 2 bolts and intake air connector.

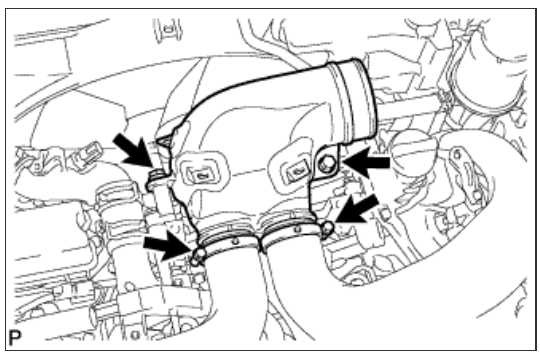

12. REMOVE V-RIBBED BELT


a. oosen the lock nut and turn the bolt counterclockwise.

b. Remove the ribbed belt.

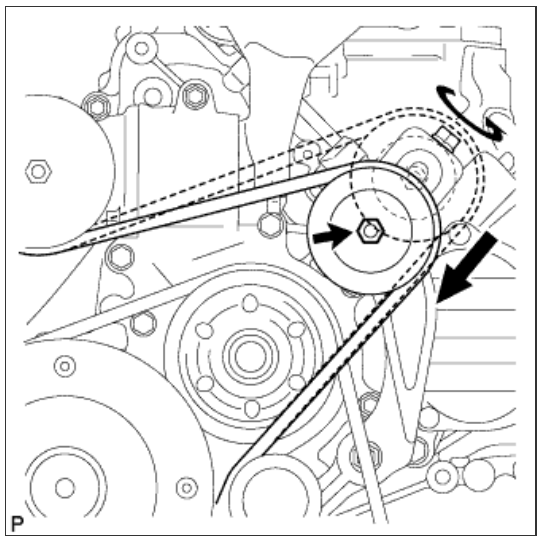

13. REMOVE VANE PUMP OIL RESERVOIR ASSEMBLY


a. Insert a screwdriver between the reservoir and oil reservoir bracket, push the claw, and then disconnect the reservoir by pulling it upwards.

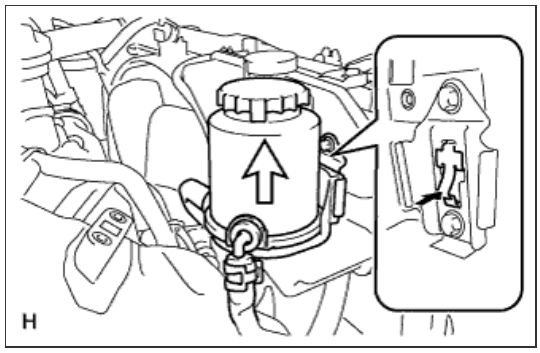

14. REMOVE VANE PUMP ASSEMBLY

a. Remove the 2 nuts and vane pump.

b. Remove the O-ring from the vane pump.

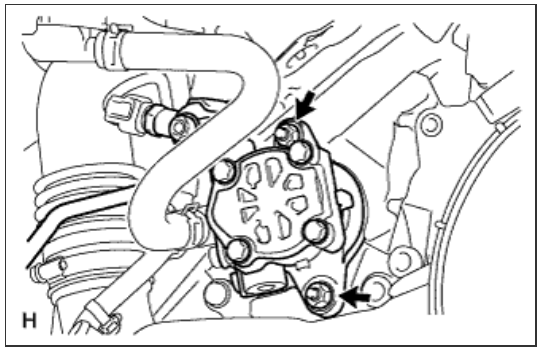


15. REMOVE NO. 1 RADIATOR HOSE


16. REMOVE NO. 2 RADIATOR HOSE

17. REMOVE OIL COOLER HOSE (w/ Air Cooled Transmission Oil Cooler)


a. Disconnect the inlet and outlet No. 1 oil cooler hose.

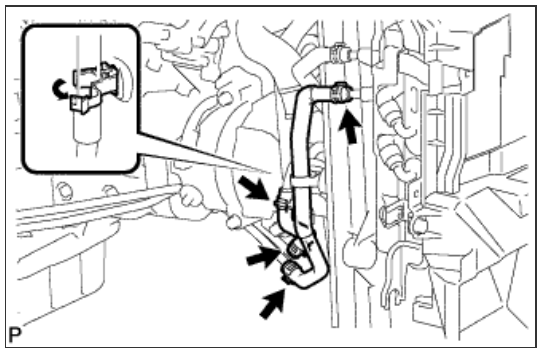


b. Disconnect the inlet No. 2 and No. 3 oil cooler hoses.

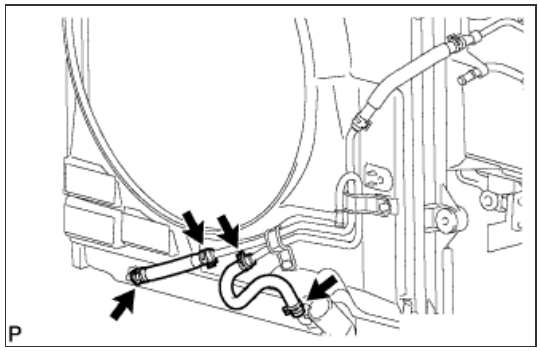

c. Disconnect the inlet No. 4 oil cooler hose.

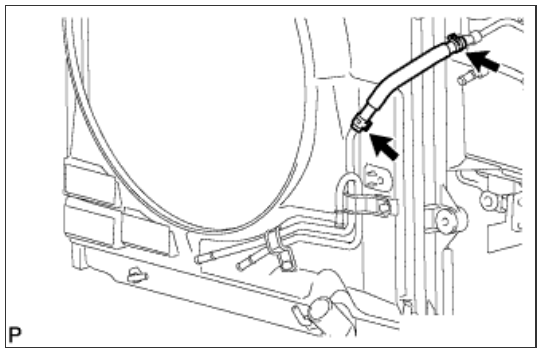


d. Remove the 2 bolts and transmission oil cooler tube.

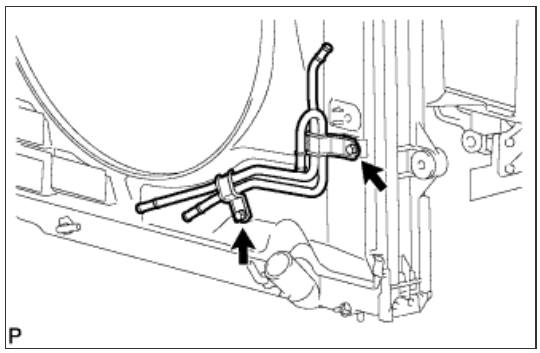


18. REMOVE FAN SHROUD WITH FAN


a. oosen the 4 nuts holding the fluid coupling fan.

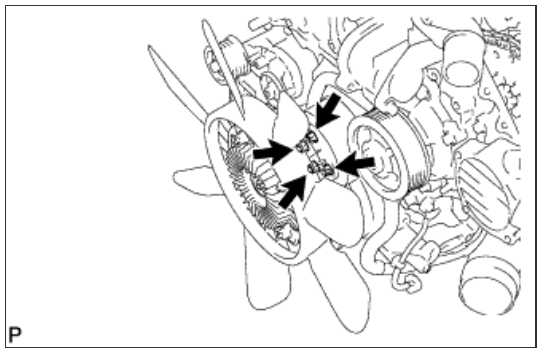

b. Remove the 2 bolts holding the fan shroud.

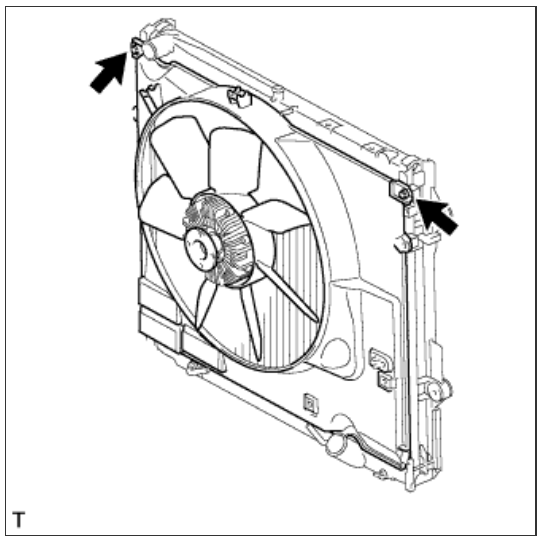


c. Remove the 4 nuts of the fluid coupling fan, and then remove the shroud together with the fluid coupling fan.

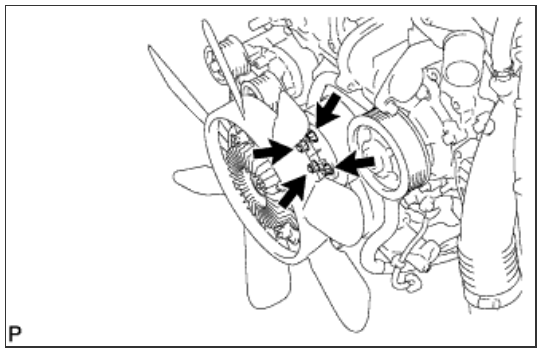

19. REMOVE RADIATOR RESERVE TANK ASSEMBLY

a. Disconnect the 2 hoses.

b. Remove the 3 bolts and radiator reservoir.

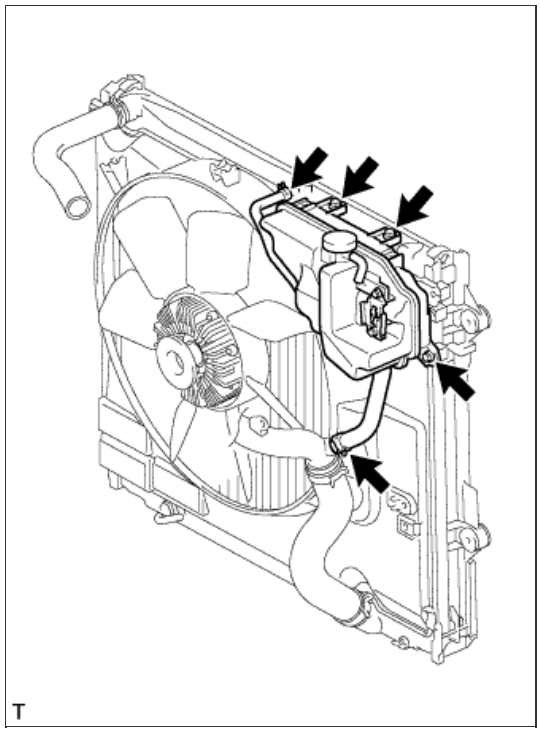


20. REMOVE RADIATOR ASSEMBLY

a. Remove the radiator assembly (Click here).

21. REMOVE IDLER PULLEY ASSEMBLY

a. Remove the 2 bolts and 2 idler pulleys.

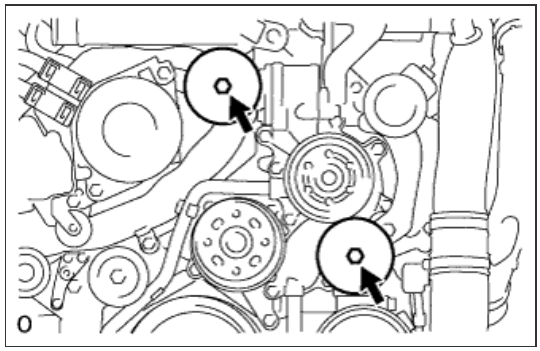


22. REMOVE VISCOUS WITH MAGNET CLUTCH HEATER ASSEMBLY

a. Disconnect the connector and detach the clamp.

b. Using pliers, grip the claws of the clips and slide the 2 clips.


c. Disconnect the 2 heater hoses.

d. Remove the 2 bolts and heater assembly.

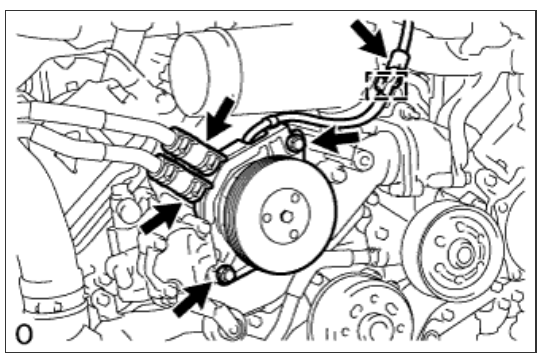


23. REMOVE IDLER PULLEY BRACKET

a. Remove the bolt and bracket.

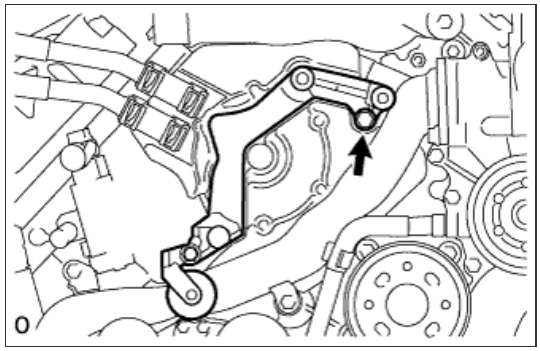

24. REMOVE IDLER PULLEY BRACKET (for Belt Tension Side)

a. Remove the 3 bolts and bracket.

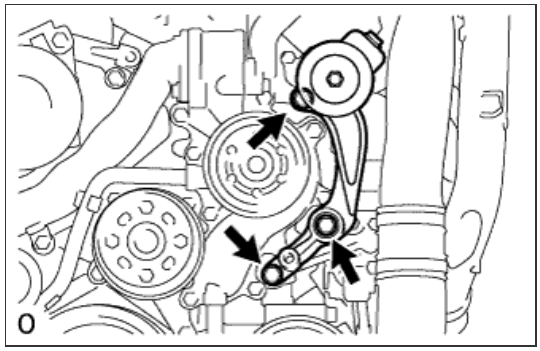

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).


3. REMOVE FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard:
Remove the front fender splash shield (Click here).

b. w/ Winch:
Remove the front fender splash shield (Click here).

4. REMOVE NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. Remove the 10 bolts and under cover.

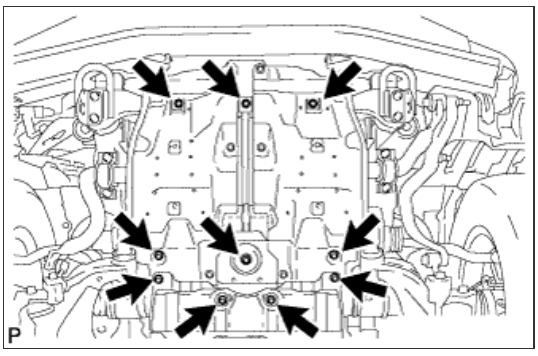

5. DRAIN ENGINE COOLANT

CAUTION:

Do not remove the radiator reservoir cap while the engine and radiator are still hot. Pressurized, hot engine coolant and steam may be released and cause serious burns.


HINT:

Collect the coolant in a container and dispose of it according to the regulations in your area.

a. Loosen the radiator drain cock plug.

b. Remove the radiator reservoir cap to drain the coolant in the radiator.


c. Loosen the oil filter bracket drain cock plug to drain the coolant in the engine.

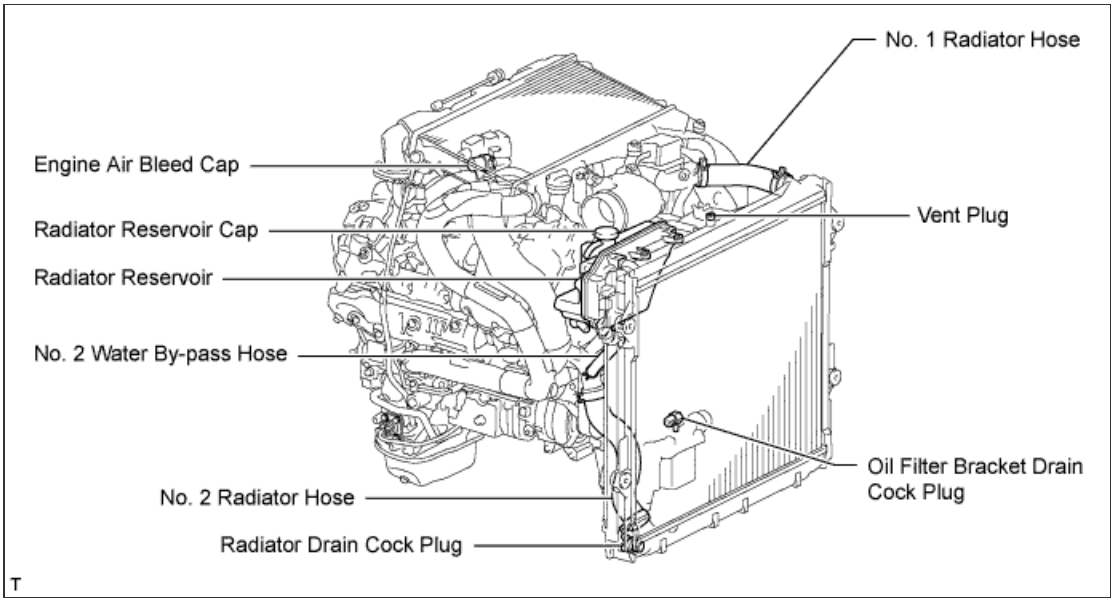

d. Tighten the radiator drain cock plug by hand.


e. Tighten the oil filter bracket drain cock plug.

Torque:
13 N*m{ 133 kgf*cm , 10 ft.*lbf }

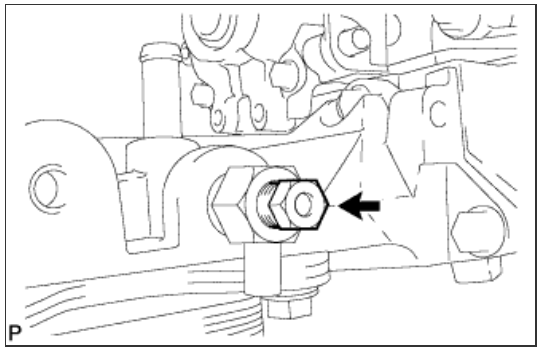

6. REMOVE UPPER RADIATOR SUPPORT SEAL


a. Remove the clips and radiator support seal.

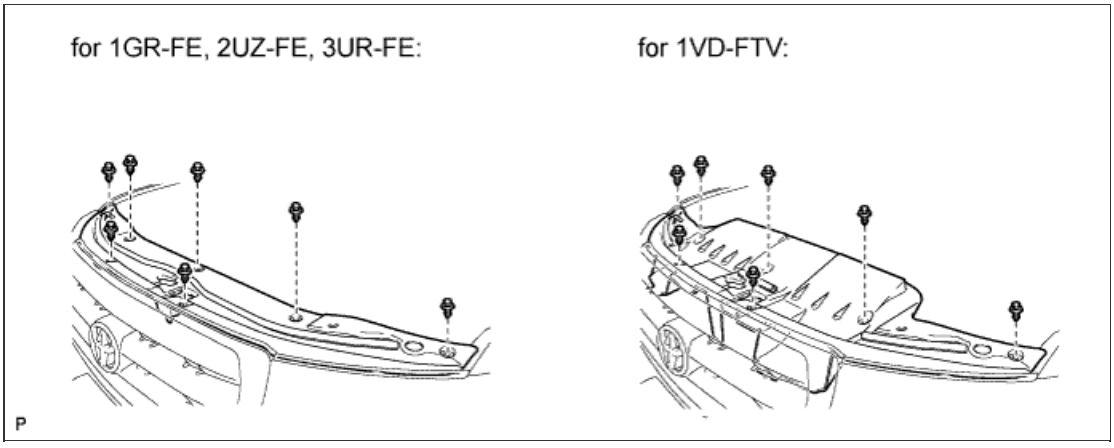

7. REMOVE NO. 3 ENGINE ROOM WIRE


a. Disconnect the 4 wire harness clamps.

b. Remove the 2 nuts and No. 3 engine room wire.

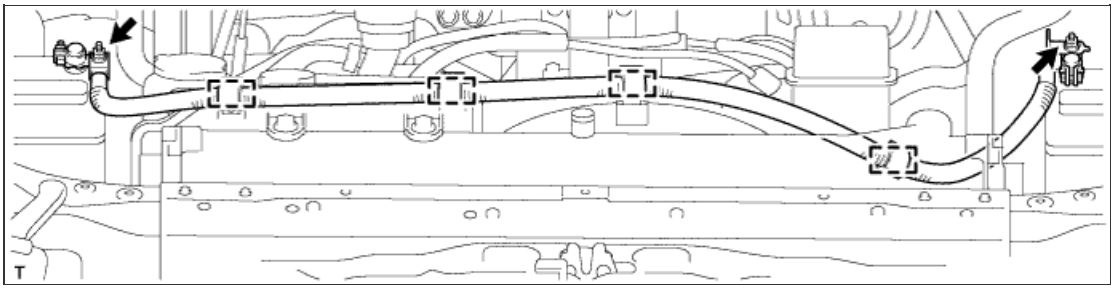

. REMOVE NO. 1 ENGINE COVER SUB-ASSEMBLY


a. Remove the 2 nuts and No. 1 engine cover.

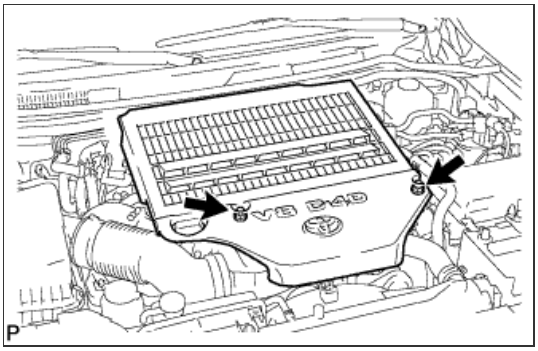

. REMOVE AIR CLEANER CAP SUB-ASSEMBLY


a. Loosen the hose clamp and disconnect the connector.

b. Using a clip remover, detach the 3 clamps and remove the air cleaner cap.

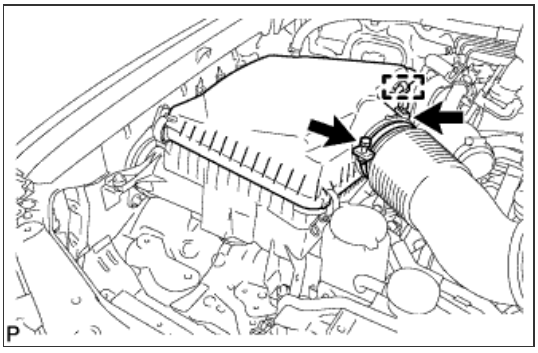

10. REMOVE NO. 1 AIR CLEANER HOSE


a. Loosen the hose clamp and remove the No. 1 air cleaner hose.

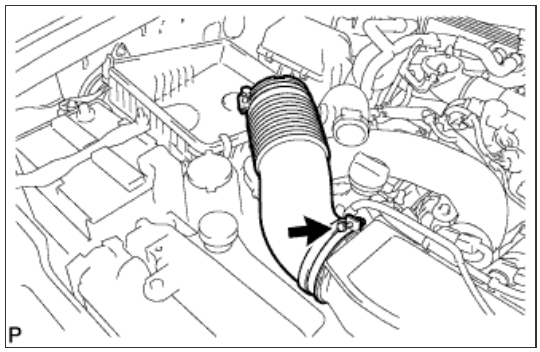


11. REMOVE INTAKE AIR CONNECTOR

a. Disconnect the 2 connectors from the viscous heater and water temperature sensor.

b. Using a clip remover, detach the 3 wire harness clamps.

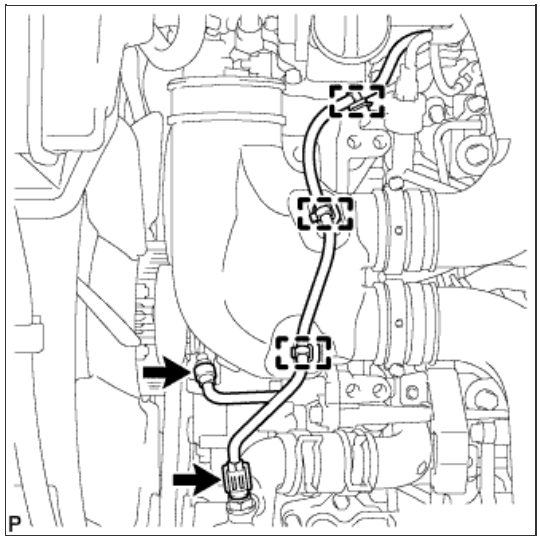


c. Loosen the 2 hose clamps and remove the 2 bolts and intake air connector.

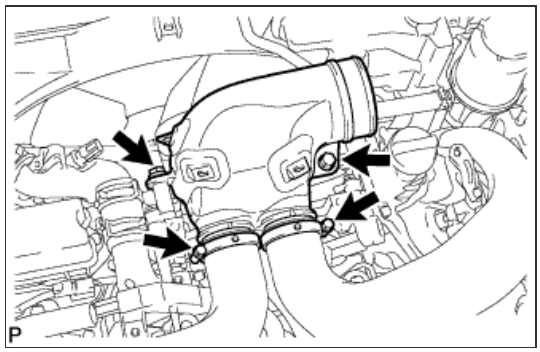

12. REMOVE V-RIBBED BELT


a. Loosen the lock nut and turn the bolt counterclockwise.

b. Remove the V-ribbed belt.

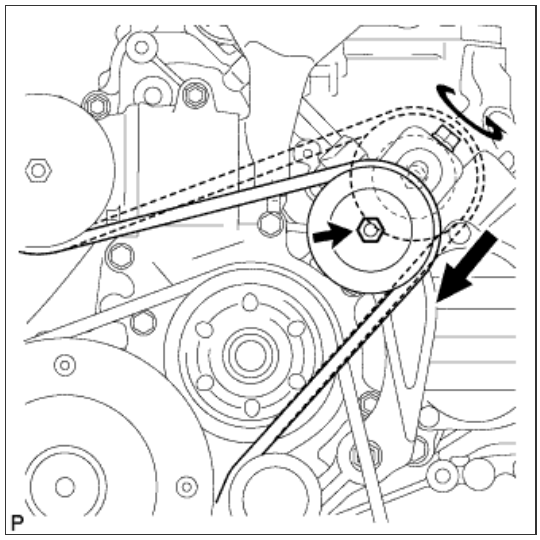

13. REMOVE VANE PUMP OIL RESERVOIR ASSEMBLY


a. Insert a screwdriver between the reservoir and oil reservoir bracket, push the claw, and then disconnect the reservoir by pulling it upwards.

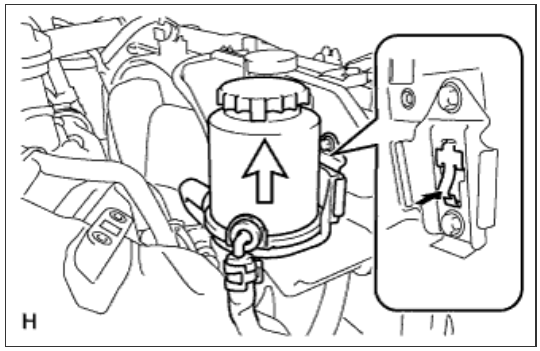

14. REMOVE VANE PUMP ASSEMBLY

a. Remove the 2 nuts and vane pump.

b. Remove the O-ring from the vane pump.

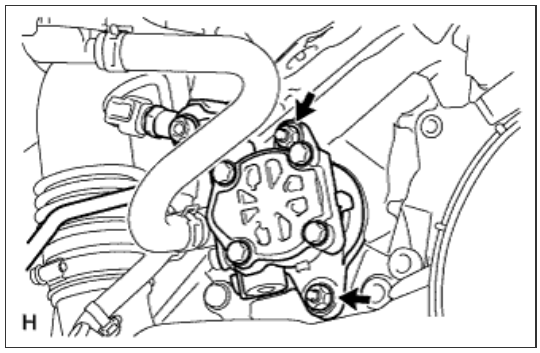


15. REMOVE NO. 1 RADIATOR HOSE


1 . REMOVE NO. 2 RADIATOR HOSE

1 . REMOVE OIL COOLER HOSE (w/ Air Cooled Transmission Oil Cooler)


a. Disconnect the inlet and outlet No. 1 oil cooler hose.

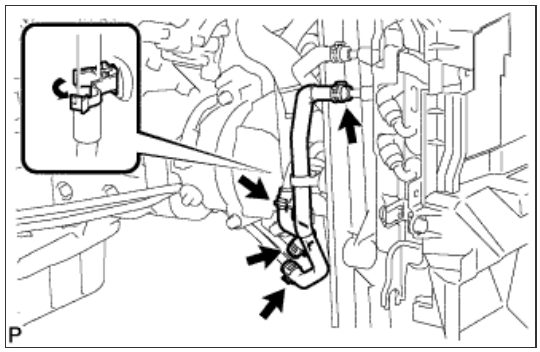


b. Disconnect the inlet No. 2 and No. 3 oil cooler hoses.

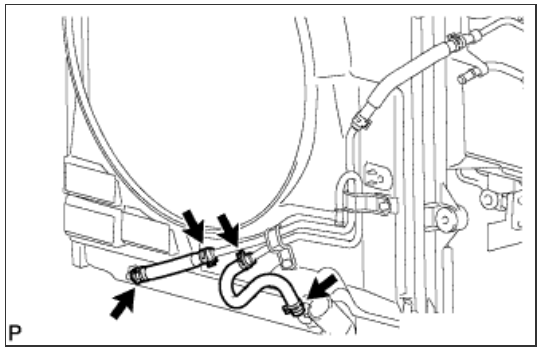

c. Disconnect the inlet No. 4 oil cooler hose.

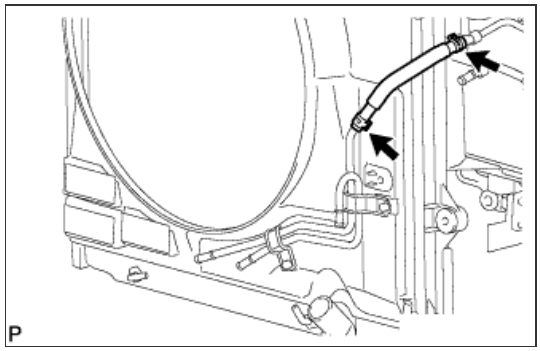


d. Remove the 2 bolts and transmission oil cooler tube.

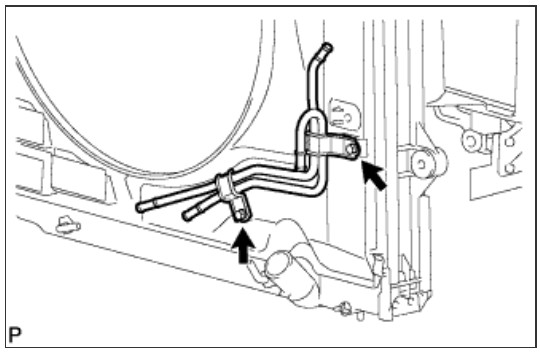


18. REMOVE FAN SHROUD WITH FAN


a. Loosen the 4 nuts holding the fluid coupling fan.

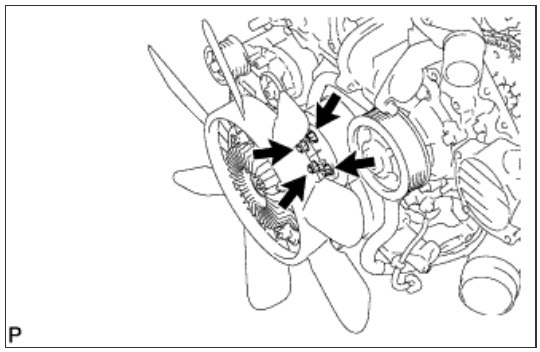

b. Remove the 2 bolts holding the fan shroud.

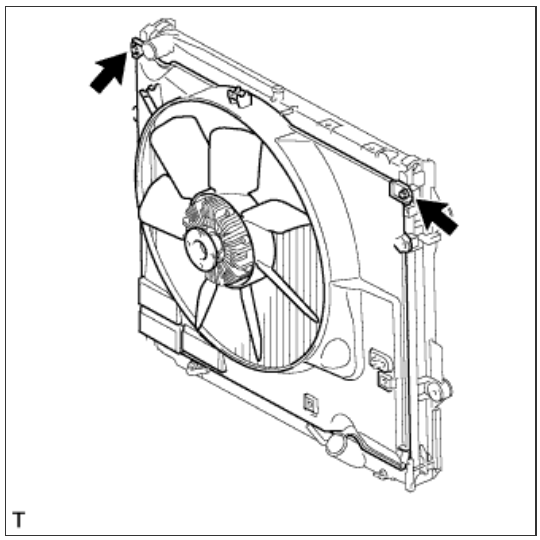


c. Remove the 4 nuts of the fluid coupling fan, and then remove the shroud together with the fluid coupling fan.

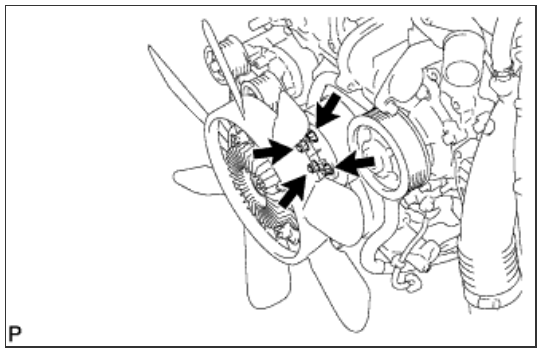

19. REMOVE RADIATOR RESERVE TAN ASSEMBLY

a. Disconnect the 2 hoses.

b. Remove the 3 bolts and radiator reservoir.

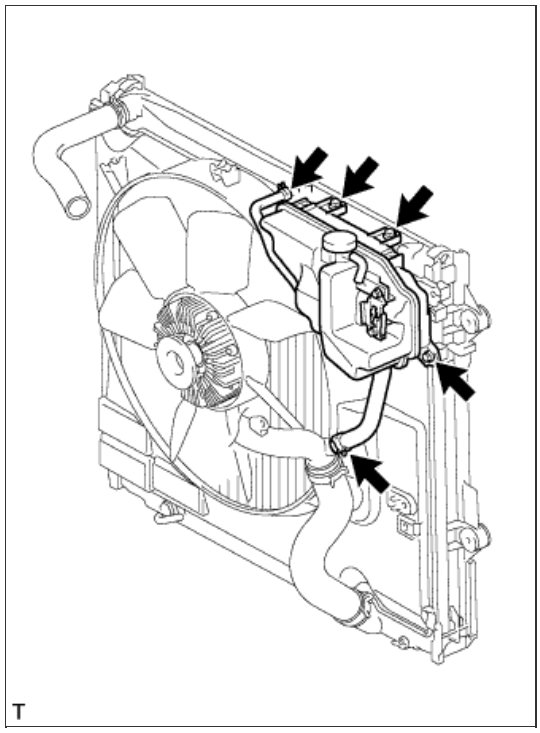


20. REMOVE RADIATOR ASSEMBLY

a. Remove the radiator assembly (Click here).

21. REMOVE IDLER PULLEY ASSEMBLY

a. Remove the 2 bolts and 2 idler pulleys.

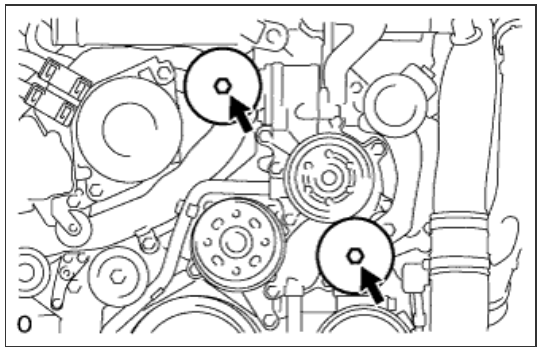


22. REMOVE VISCOUS WITH MAGNET CLUTCH HEATER ASSEMBLY

a. Disconnect the connector and detach the clamp.

b. Using pliers, grip the claws of the clips and slide the 2 clips.


c. Disconnect the 2 heater hoses.

d. Remove the 2 bolts and heater assembly.

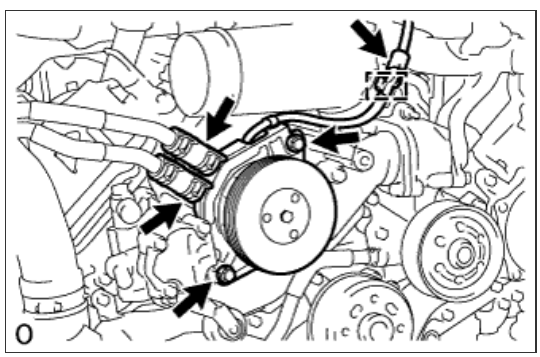


23. REMOVE IDLER PULLEY BRAC E

a. Remove the bolt and bracket.

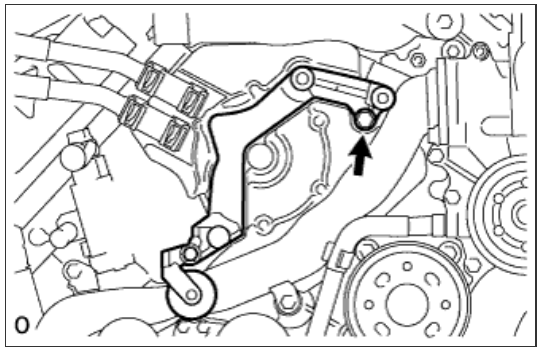

24. REMOVE IDLER PULLEY BRAC E (for Belt Tension Side)

a. Remove the 3 bolts and bracket.

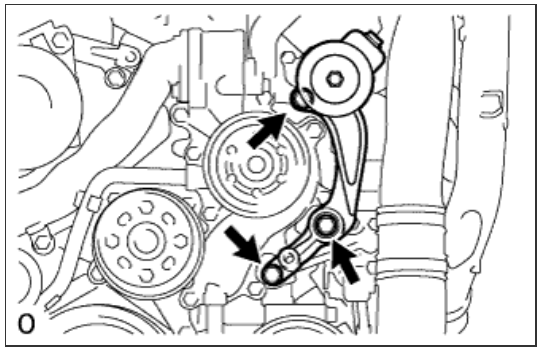


for Preparation Click here

1. INSTALL IDLER PULLEY BRACKET (w/ Belt Tension Side)

a. Install the bracket with the 3 bolts.


Torque:
48.5 N*m{ 495 kgf*cm , 36 ft.*lbf }

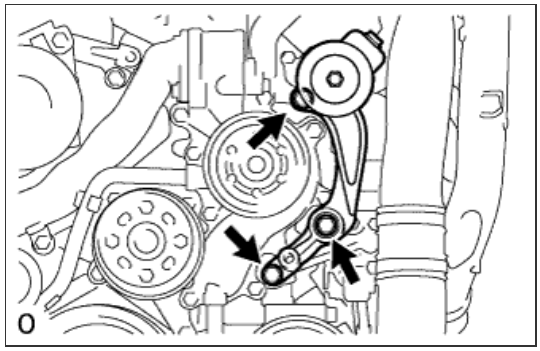

2. INSTALL IDLER PULLEY BRACKET

a. Install the bracket with the bolt.

Torque:
48.5 N*m{ 495 kgf*cm , 36 ft.*lbf }

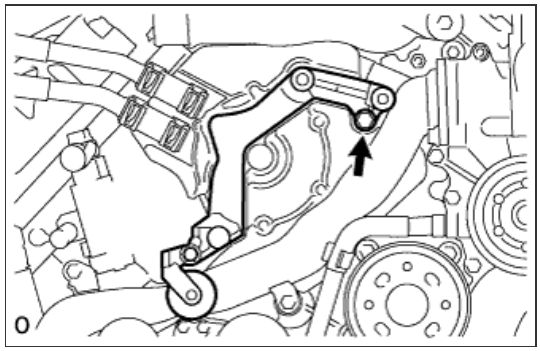

3. INSTALL VISCOUS WITH MAGNET CLUTCH HEATER ASSEMBLY


a. Install the heater assembly with the 2 bolts.

Torque:
48.5 N*m{ 495 kgf*cm , 36 ft.*lbf }

b. Connect the 2 heater hoses.

c. Using pliers, grip the claws of the clips and slide the 2 clips.


d. Connect the connector and attach the clamp.

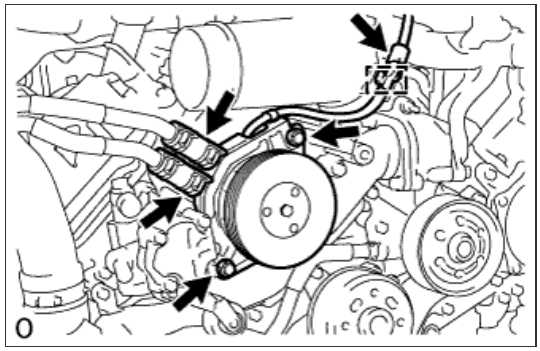

4. INSTALL IDLER PULLEY ASSEMBLY

a. Install the 2 idler pulleys with the 2 bolts.

Torque:
48.5 N*m{ 495 kgf*cm , 36 ft.*lbf }

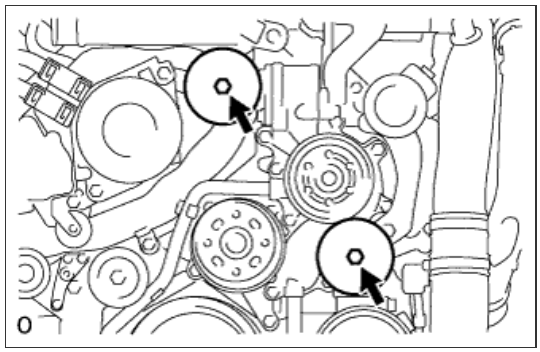

5. INSTALL RADIATOR ASSEMBLY

a. Install the radiator assembly (Click here).


6. INSTALL RADIATOR RESERVE TANK ASSEMBLY

a. Install the radiator reservoir with the 3 bolts.

b. Connect the 2 hoses to the upper radiator tank and water inlet.

HINT:

Make sure the directions of the hose clamps are as shown in the illustration.

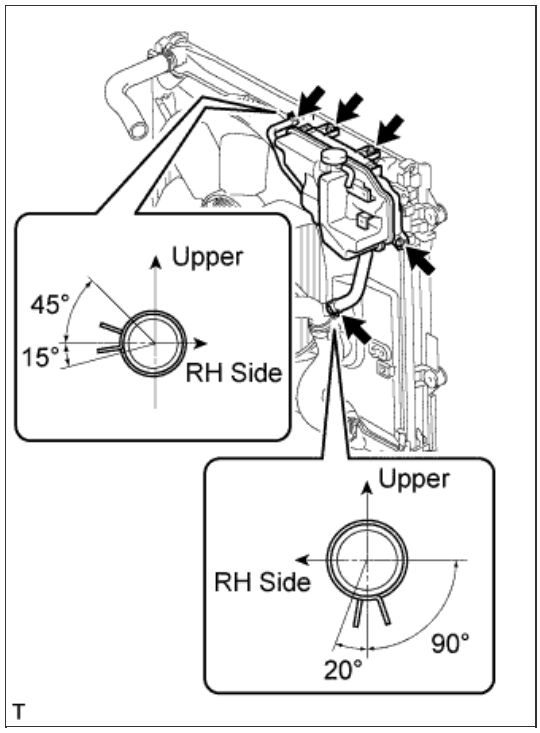

7. INSTALL FAN SHROUD WITH FAN

a. Install the shroud together with the fluid coupling fan between the radiator and engine components.


NOTICE:

Be careful not to damage the radiator core.

b. Temporarily install the fluid coupling fan to the fan bracket with the 4 nuts.

HINT:


Tighten the nuts as much as possible by hand.

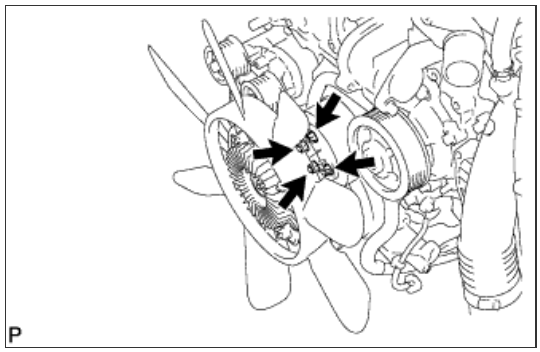

c. Attach the shroud claws to the radiator.


d. Install the shroud with the 2 bolts.

Torque:
8.0 N*m{ 82 kgf*cm , 71 in.*lbf }

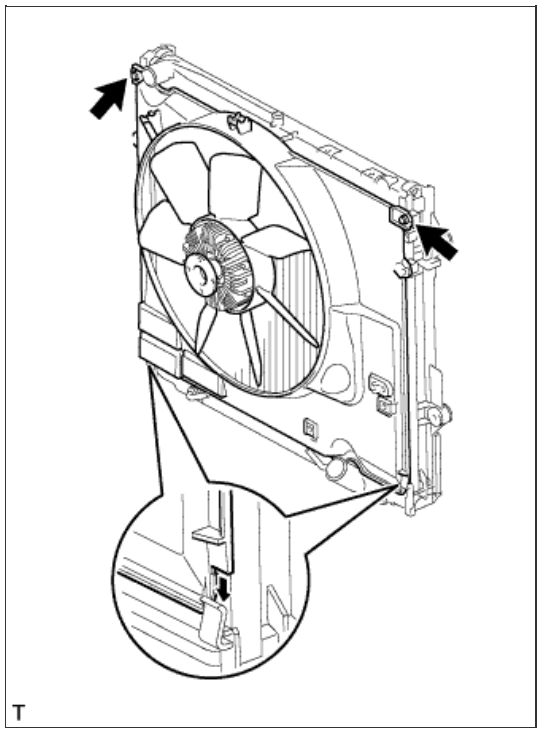

e. Tighten the 4 nuts of the fluid coupling fan.


Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

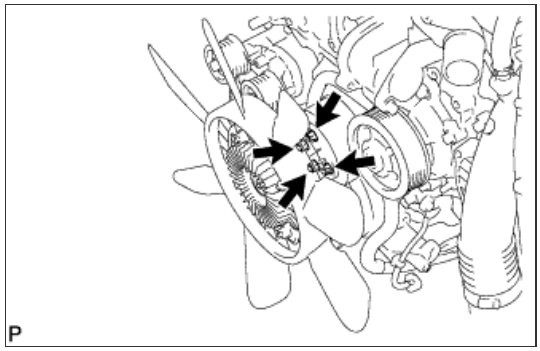

8. INSTALL OIL COOLER HOSE (w/ Air Cooled Transmission Oil Cooler)

a. Temporarily install the oil cooler tube to the fan shroud with the bolt labeled A. Install the bolt labeled B. Then tighten the bolt labeled A to the specified torque.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

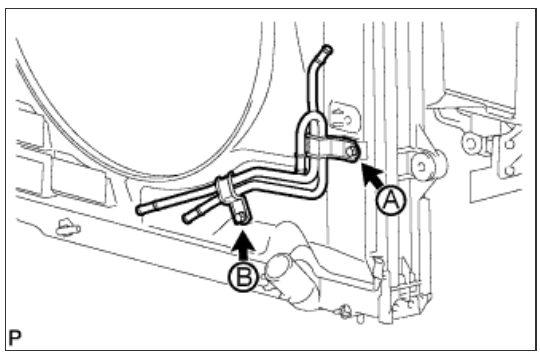

.Connect the inlet No. 4 oil cooler hose as shown in the illustration.

NOTICE:


Make sure the pinching portion of each clip is facing the direction shown in the illustration.

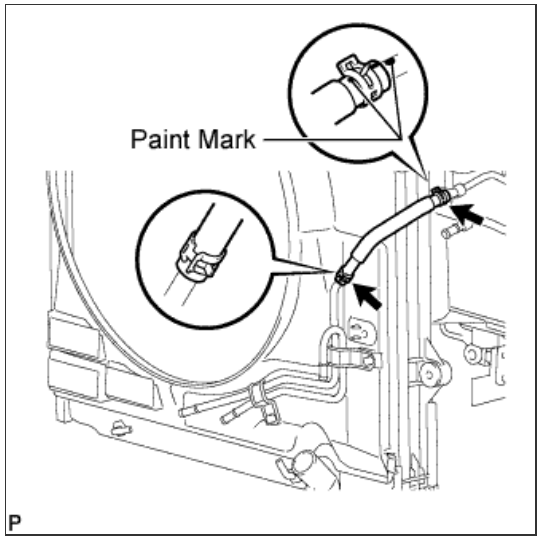

c. Connect the inlet No. 2 and No. 3 oil cooler hoses as shown in the illustration.

NOTICE:

Make sure the pinching portion of each clip is facing the direction shown in the illustration.

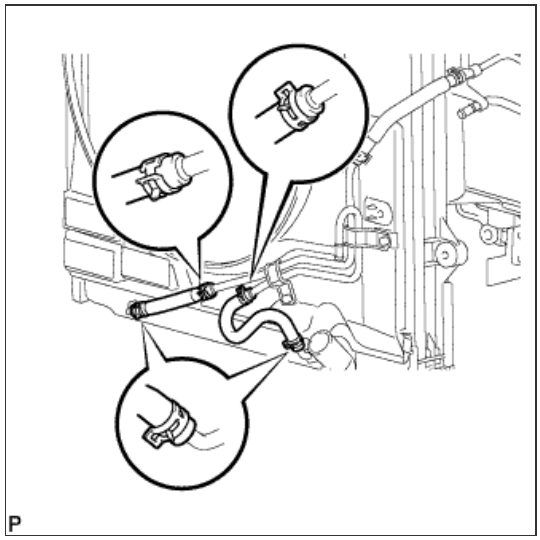


d. Connect the inlet and outlet No. 1 oil cooler hoses as shown in the illustration.

NOTICE:

Make sure the pinching portion of each clip is facing the direction shown in the illustration.

e. Pass the hose through the flexible hose clamp and close the clamp shown in the illustration.

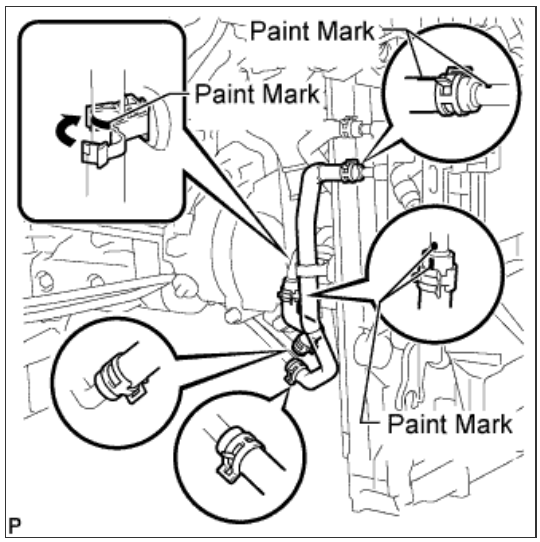

9. INSTALL NO. 2 RADIATOR HOSE


10. INSTALL NO. 1 RADIATOR HOSE

11. INSTALL VANE PUMP ASSEMBLY

a. Apply a light coat of engine oil to a new O-ring, and install it to the vane pump.


.Install the vane pump with 2 new nuts.

Torque:
29 N*m{ 296 kgf*cm , 21 ft.*lbf }

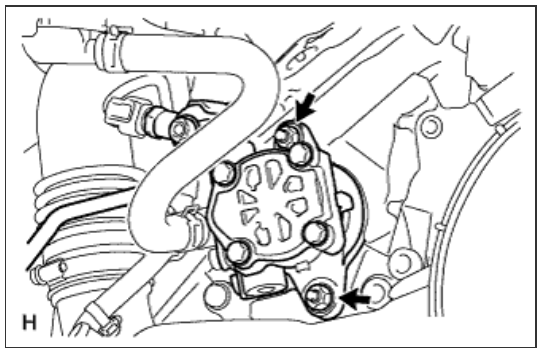


12. INSTALL VANE PUMP OIL RESERVOIR ASSEMBLY

a. Install the vane pump oil reservoir to the bracket.

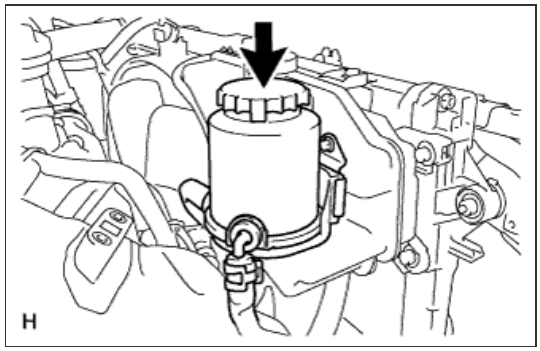


13. INSTALL V-RIBBED BELT

a. Install the V-ribbed belt as shown in the illustration.

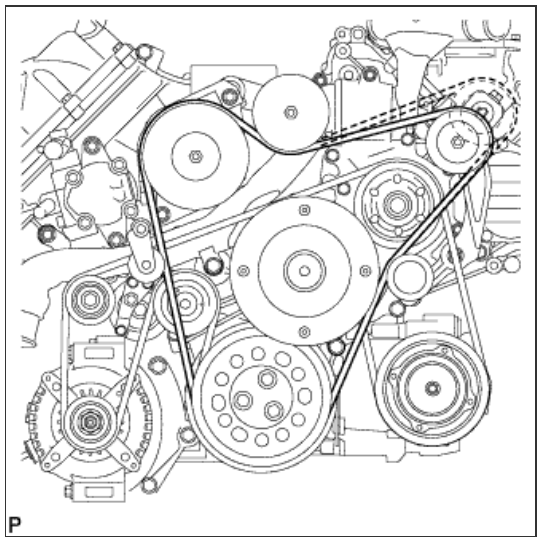

b. Temporarily install the lock nut, and turn the bolt clockwise.

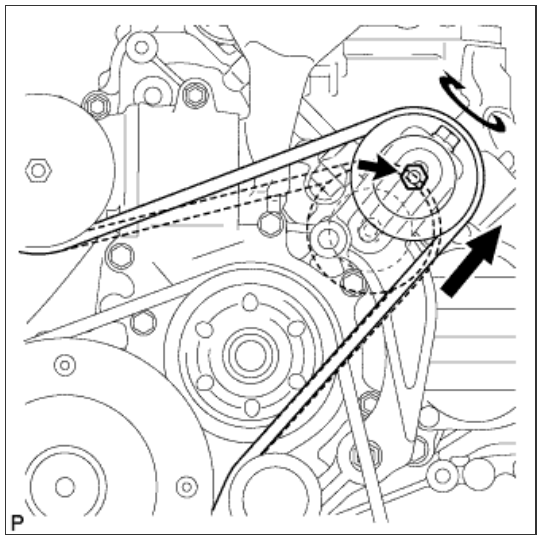


c. Using a belt tension gauge, ad st belt tension.

Standard Belt Tension:

Item	Specified Condition
New belt	400 to 650 N (41 to 66 kgf, 89.9 to 146.1 lbf)
Used belt	300 to 500 N (31 to 51 kgf, 67.4 to 112.4 lbf)


HINT:

- **A "new belt" is a belt which has been used for less than 5 minutes on a running engine.**
- **A "used belt" is a belt which has been used on a running engine for 5 minutes or more.**
- **After installing a new belt, run the engine for approximately 5 minutes and then recheck the tension.**

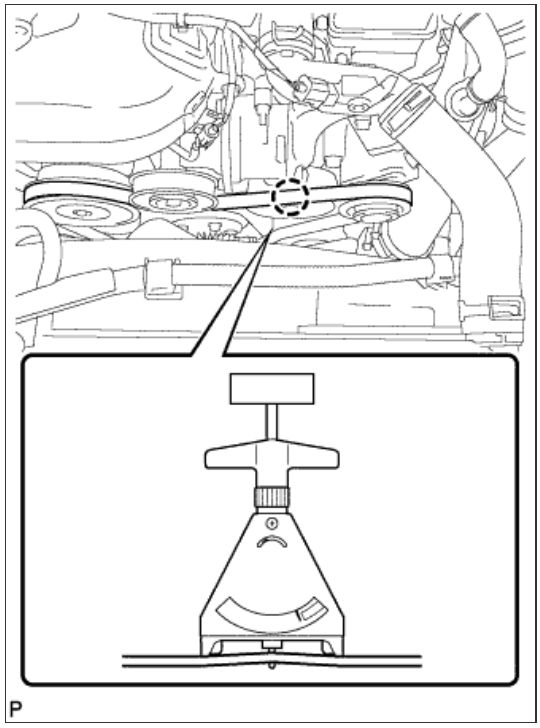

d. Tighten the nut.

Torque:
40 N*m{ 408 kgf*cm , 30 ft.*lbf }

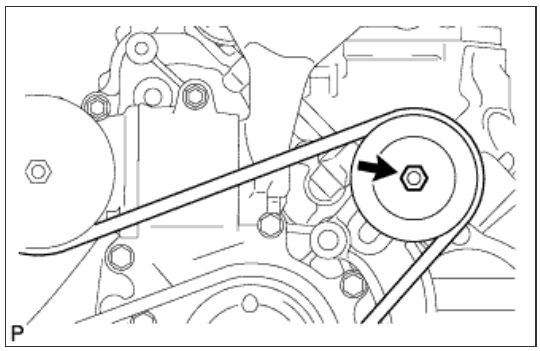


e. Check that the belt fits properly in the ribbed grooves.

HINT:

Check with your hand to confirm that the belt has not slipped out of the groove on the bottom of the pulley.

If it has slipped out, replace the V-ribbed belt. Install a new V-ribbed belt.

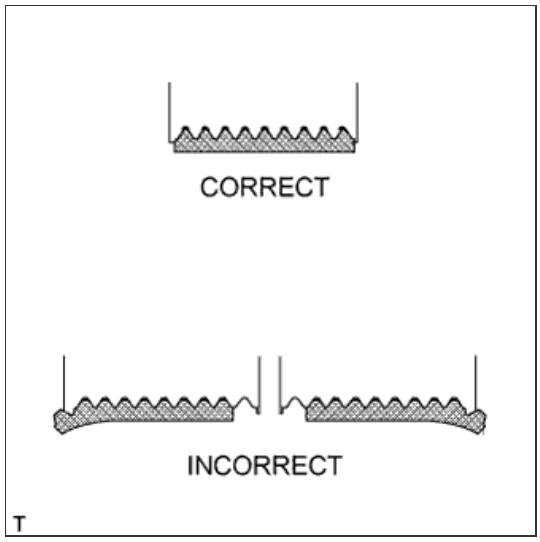

14. INSTALL INTAKE AIR CONNECTOR


a. Connect the intake air connector to the No. 1 and No. 2 air cleaner pipes.

b. Install the connector with the 2 bolts.

Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }


c. Tighten the 2 hose clamps.

Torque:
6.3 N*m{ 64 kgf*cm , 56 in.*lbf }

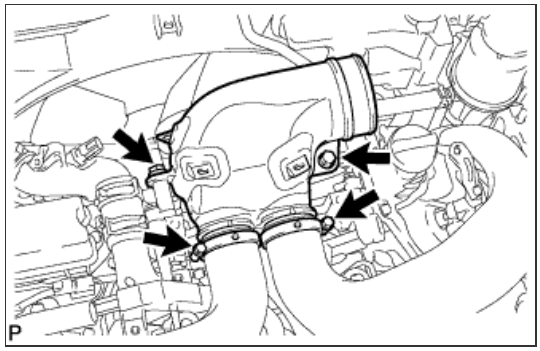


d. Attach the 3 wire harness clamps.

e. Connect the 2 connectors to the water temperature sensor and viscous heater.

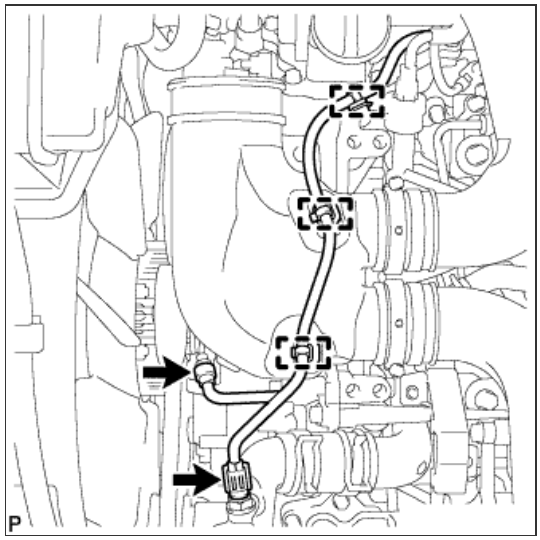


15. TEMPORARILY INSTALL NO. 1 AIR CLEANER HOSE

a. Temporarily install the air cleaner hose to the intake air connector.

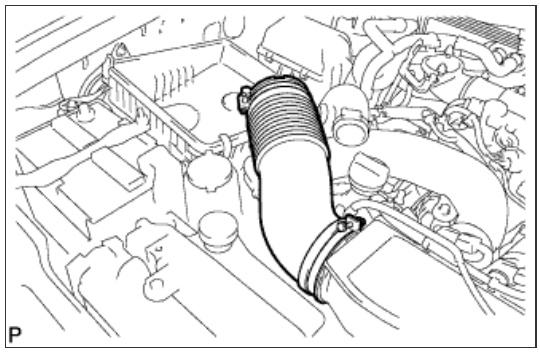

16. INSTALL AIR CLEANER CAP SUB-ASSEMBLY


a. Align the protrusion of the air cleaner cap and concave portion of the air cleaner hose.

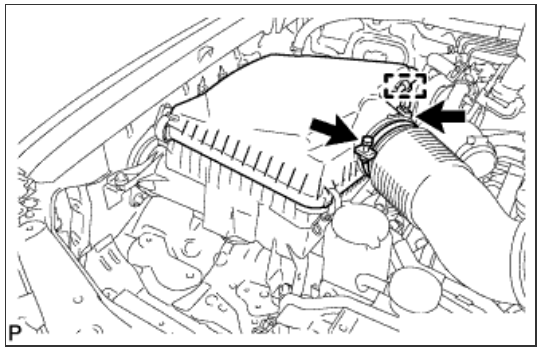

b. Connect the air cleaner cap to the air cleaner hose, and install the air cleaner cap with the 3 clamps.

c. Tighten the 2 hose clamps and connect the connector.


Torque:
6.3 N*m{ 64 kgf*cm , 56 in.*lbf }

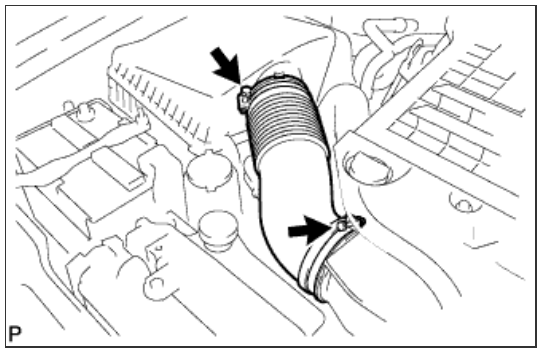

17. INSTALL NO. 1 ENGINE COVER SUB-ASSEMBLY

a. Install the engine cover with the 2 nuts.

Torque:
8.0 N*m{ 82 kgf*cm , 71 in.*lbf }

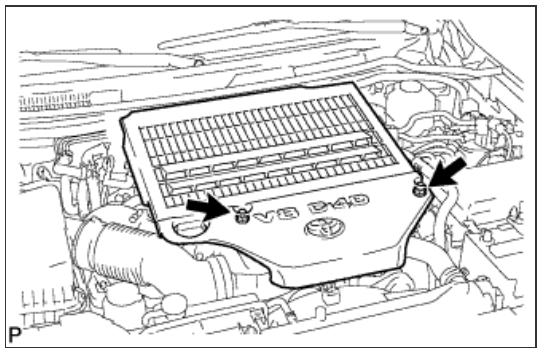


18. INSTALL NO. 3 ENGINE ROOM WIRE

a. Install the No. 3 engine room wire to the main battery and sub-battery positive terminals with the 2 nuts.


Torque:
7.6 N*m{ 77 kgf*cm , 67 in.*lbf }

.Connect the No. 3 engine room wire with the 4 clamps.

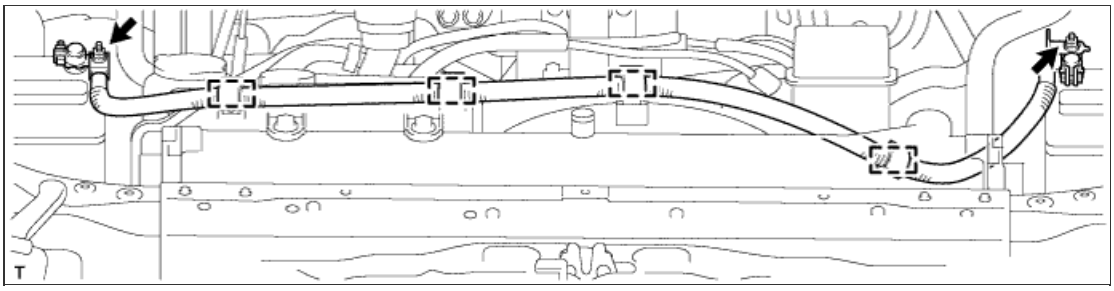


19. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Install the radiator support seal with the 7 clips.

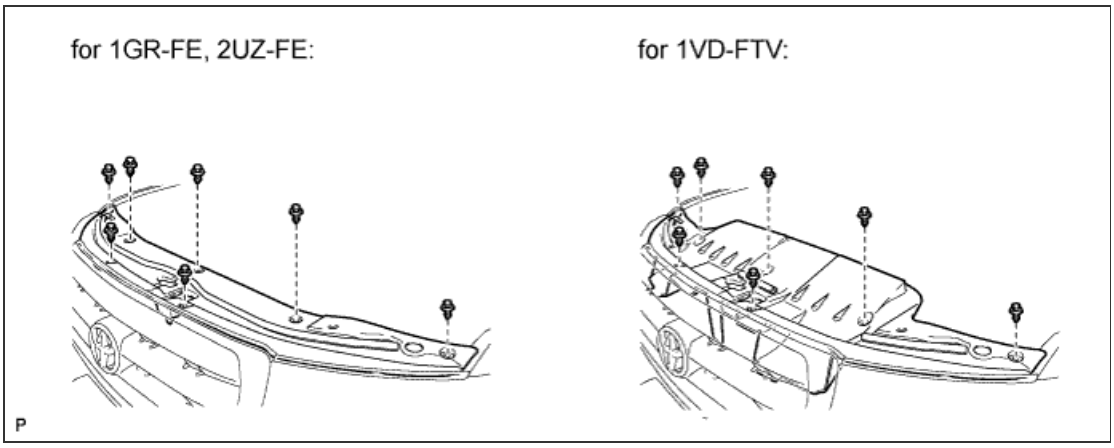


20. ADD ENGINE COOLANT


a. emove the engine air bleed cap.

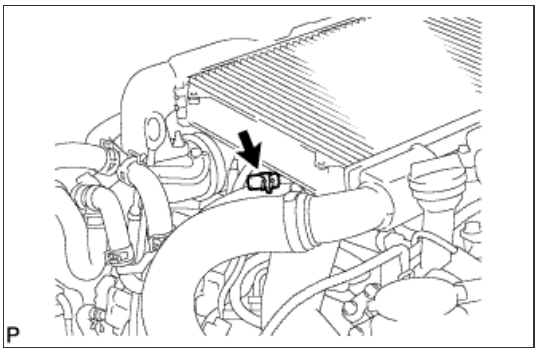


b. Connect a clear hose to the engine air bleed pipe.

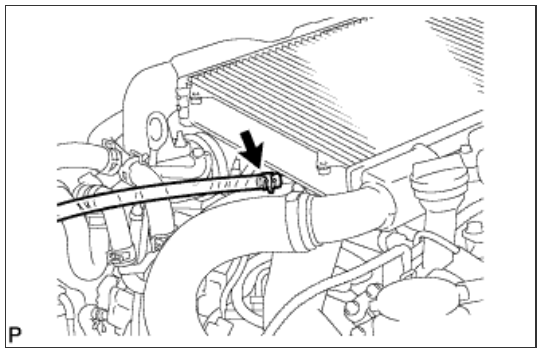

c. Using a wrench, remove the vent plug.

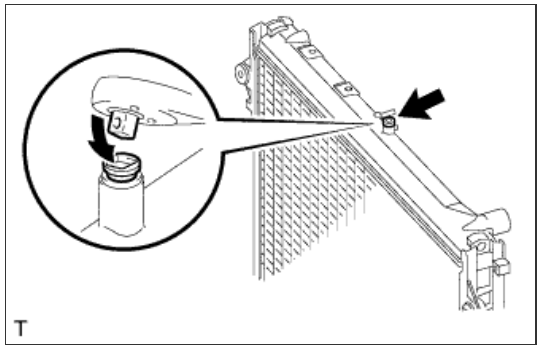

d. Fill the radiator with TO SLLC to the radiator reservoir filler neck.

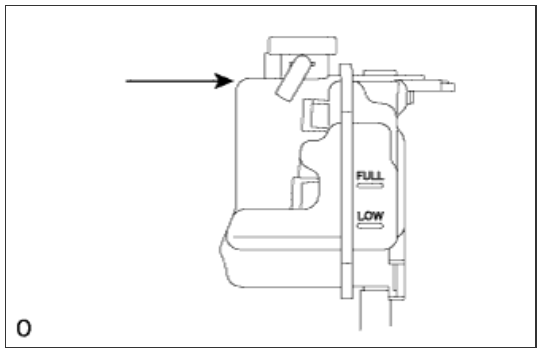

HINT:

Pour TO SLLC until it spills out of the engine air bleed pipe.

Standard Capacity (for Automatic Transmission):

Item	Specified Condition
Front heater only	14.8 liters (15.6 US qts, 13.0 Imp. qts)
Front heater and rear heater	17.6 liters (18.6 US qts, 15.5 Imp. qts)
Front heater with viscous heater	15.2 liters (16.1 US qts, 13.4 Imp. qts)
Front heater and rear heater with viscous heater	18.0 liters (19.0 US qts, 15.4 Imp. qts)

Standard capacity (for Manual Transmission):
15.4 liters (16.3 US qts, 13.5 Imp. qts)

NOTICE:

Do not substitute plain water for engine coolant.

HINT:


TO vehicles are filled with TO SLLC at the factory. In order to avoid damage to the engine cooling system and other technical problems, only use TO SLLC or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology consists of a combination of low phosphates and organic acids).

e. Install the vent plug.


Torque:
2.0 N*m{ 20 kgf*cm , 18 in.*lbf }

NOTICE:

Do not tighten the plug to 5.0 N*m (51 kgf*cm, 44 in.*lbf) or more, as the plug will be damaged.

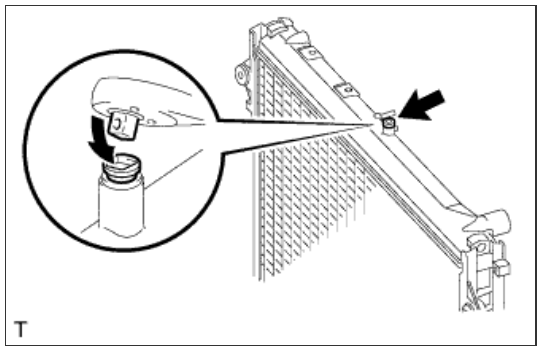


f. Disconnect the clear hose from the engine air bleed pipe.

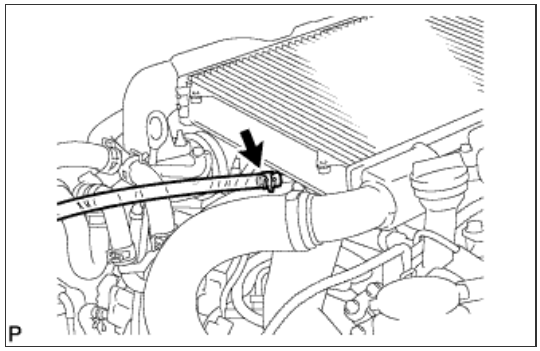

g. Install the engine air bleed cap when coolant comes out.

h. Install the radiator reservoir cap.

i. Start the engine.

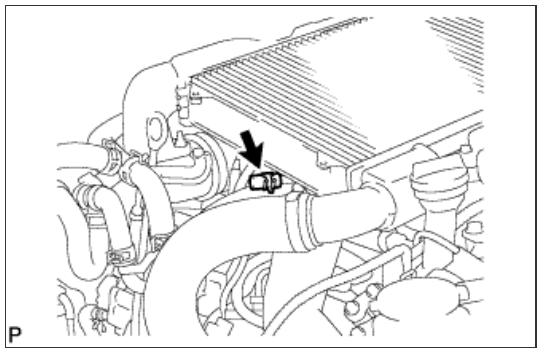

NOTICE:

Immediately after starting the engine, if the radiator reservoir does not have any coolant, perform the following 1) stop the engine, 2) wait until the coolant has cooled down, and 3) add coolant until the coolant is filled to the FULL line.

.Maintain an engine speed of 3000 rpm for approximately 10 minutes so that the thermostat opens and air bleeding is performed.

CAUTION:

When pressing the radiator hoses:

- **Wear protective gloves.**
- **Be careful as the radiator hoses are hot.**
- **Keep your hands away from the radiator fan**

NOTICE:

- **Pay attention to the needle of the water temperature meter. Make sure that the needle does not show an abnormally high temperature.**
- **If there is not enough coolant, the engine may burn out or overheat.**

HINT:


The thermostat opening timing can be confirmed by pressing the No. 2 radiator hose by hand, and checking when the engine coolant starts to flow inside the hose.

k. Stop the engine, and wait until the engine coolant cools down to ambient temperature.

CAUTION:

Do not remove the radiator reservoir cap while the engine and radiator are still hot. Pressurized, hot engine coolant and steam may be released and cause serious burns.


l. Check that the coolant level is between the FULL and LO lines.
If the coolant level is above the FULL line, drain coolant so that the coolant level is between the FULL and LO lines.

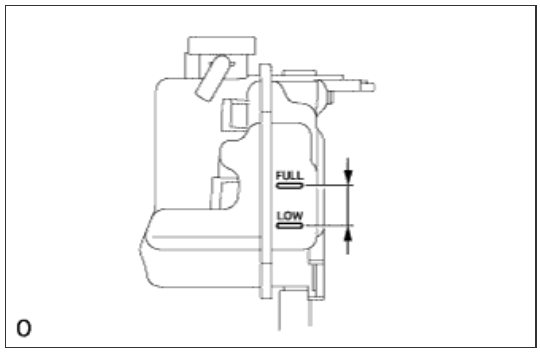

1INSTALL NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. Install the No. 1 engine under cover with the 10 bolts.

Torque:
29 N*m{ 296 kgf*cm , 21 ft.*lbf }

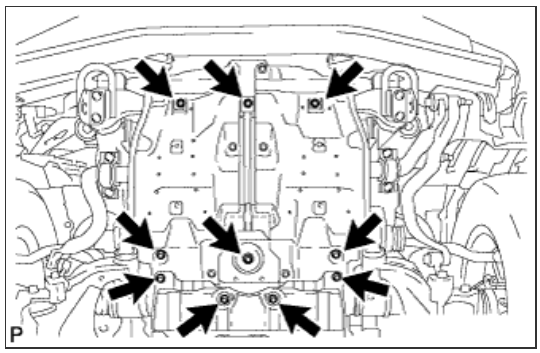

22. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard
Install the front fender splash shield (Click here).

b. w inch
Install the front fender splash shield (Click here).

23. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard
Install the front fender splash shield (Click here).

b. w inch
Install the front fender splash shield (Click here).

24. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

hø disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

25. CHECK FOR ENGINE COOLANT LEAKS


CAUTION:

Do not remove the radiator reservoir cap while the engine and radiator are still hot. Pressurized, hot engine coolant and steam may be released and cause serious burns.

a. Fill the radiator with coolant and attach a radiator cap tester to the radiator reservoir.

. arm up the engine.

c. Using the radiator cap tester, increase the pressure inside the radiator to 123 kPa (1.3 kgf cm^2, 17.8 psi), and check that the pressure does not drop.
If the pressure drops, check the hoses, radiator and water pump for leaks.
If no external leaks are found, check the cylinder block and cylinder head.

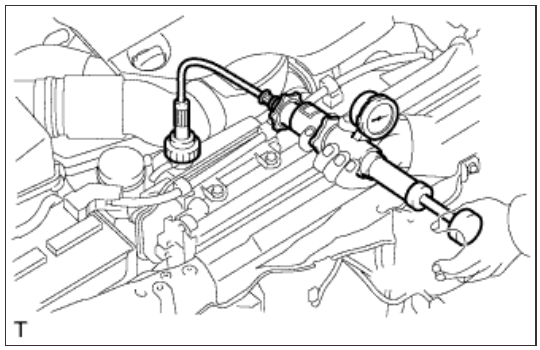


for Preparation Click here

1. INSTALL IDLER PULLEY BRACKET (w/ Belt Tension Side)

a. Install the bracket with the 3 bolts.


Torque:
48.5 N*m{ 495 kgf*cm , 36 ft.*lbf }

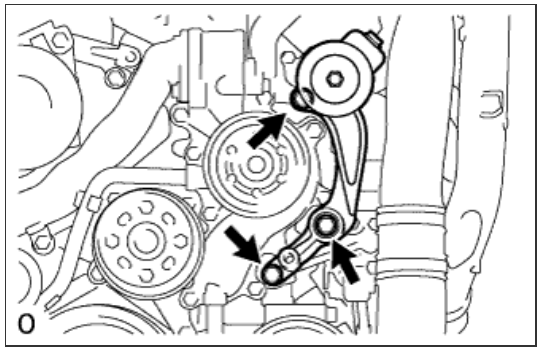

2. INSTALL IDLER PULLEY BRACKET

a. Install the bracket with the bolt.

Torque:
48.5 N*m{ 495 kgf*cm , 36 ft.*lbf }

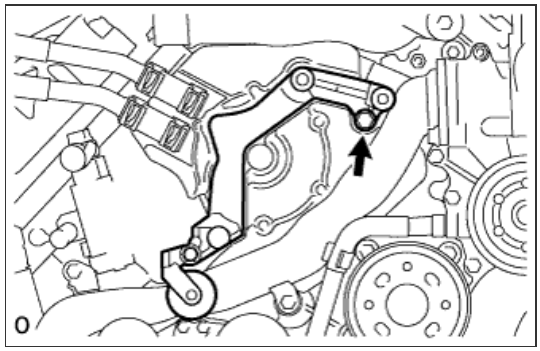

3. INSTALL VISCOUS WITH MAGNET CLUTCH HEATER ASSEMBLY


a. Install the heater assembly with the 2 bolts.

Torque:
48.5 N*m{ 495 kgf*cm , 36 ft.*lbf }

b. Connect the 2 heater hoses.

c. Using pliers, grip the claws of the clips and slide the 2 clips.


d. Connect the connector and attach the clamp.

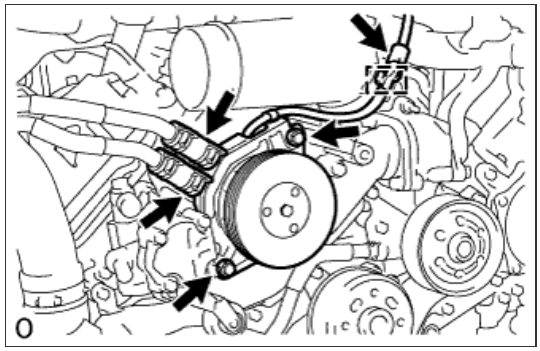

4. INSTALL IDLER PULLEY ASSEMBLY

a. Install the 2 idler pulleys with the 2 bolts.

Torque:
48.5 N*m{ 495 kgf*cm , 36 ft.*lbf }

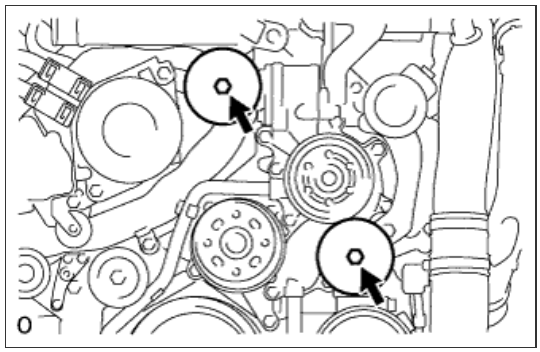

5. INSTALL RADIATOR ASSEMBLY

a. Install the radiator assembly (Click here).


6. INSTALL RADIATOR RESERVE TANK ASSEMBLY

a. Install the radiator reservoir with the 3 bolts.

b. Connect the 2 hoses to the upper radiator tank and water inlet.

HINT:

Make sure the directions of the hose clamps are as shown in the illustration.

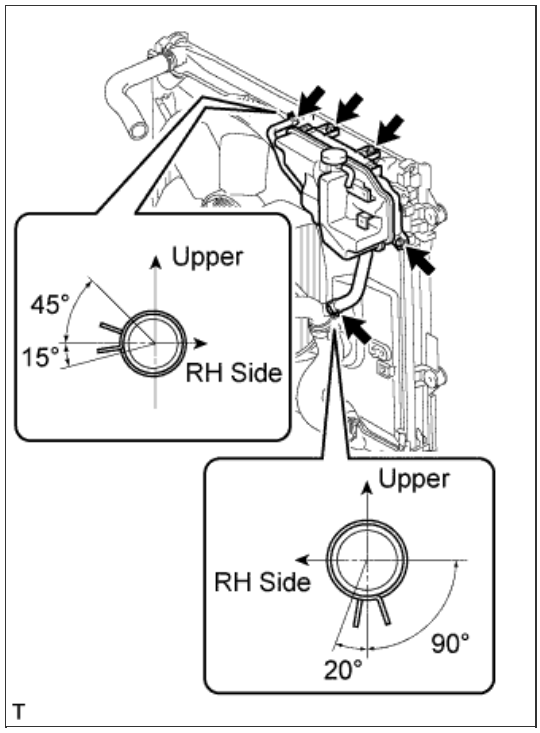

7. INSTALL FAN SHROUD WITH FAN

a. Install the shroud together with the fluid coupling fan between the radiator and engine components.


NOTICE:

Be careful not to damage the radiator core.

b. Temporarily install the fluid coupling fan to the fan bracket with the 4 nuts.

HINT:


Tighten the nuts as much as possible by hand.

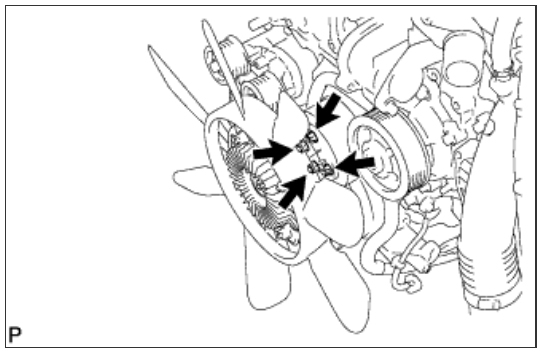

c. Attach the shroud claws to the radiator.


d. Install the shroud with the 2 bolts.

Torque:
8.0 N*m{ 82 kgf*cm , 71 in.*lbf }

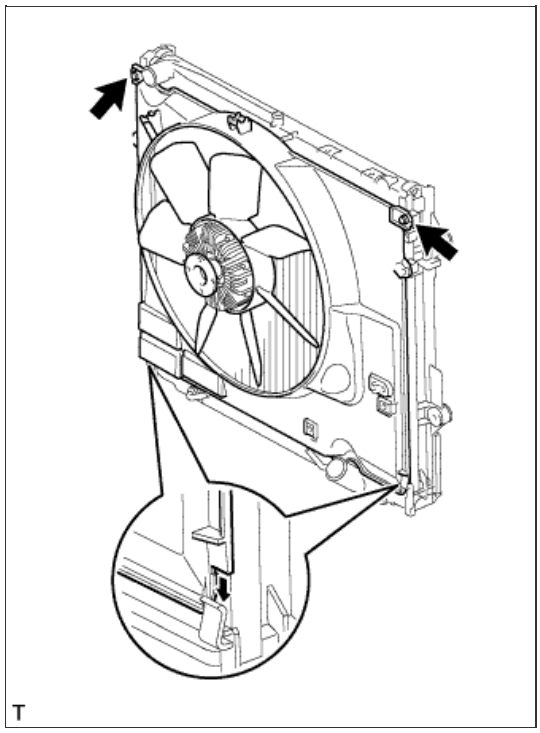

e. Tighten the 4 nuts of the fluid coupling fan.


Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }

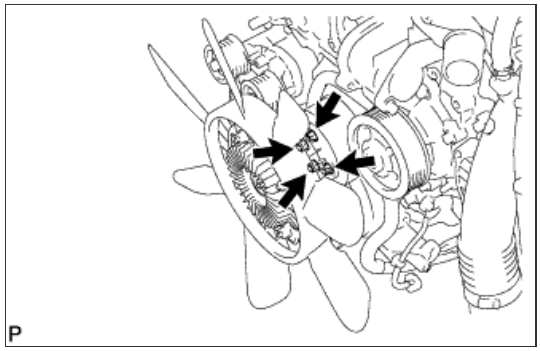

8. INSTALL OIL COOLER HOSE (w/ Air Cooled Transmission Oil Cooler)

a. Temporarily install the oil cooler tube to the fan shroud with the bolt labeled A. Install the bolt labeled B. Then tighten the bolt labeled A to the specified torque.


Torque:
5.0 N*m{ 51 kgf*cm , 44 in.*lbf }

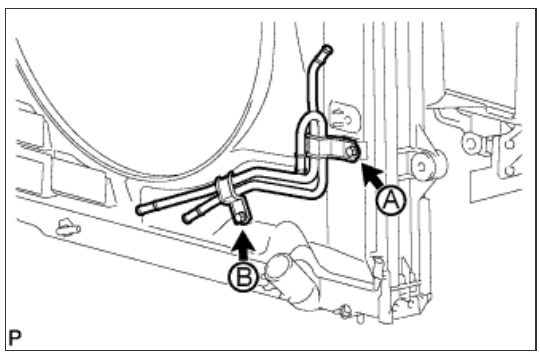

.Connect the inlet No. 4 oil cooler hose as shown in the illustration.

NOTICE:


Make sure the pinching portion of each clip is facing the direction shown in the illustration.

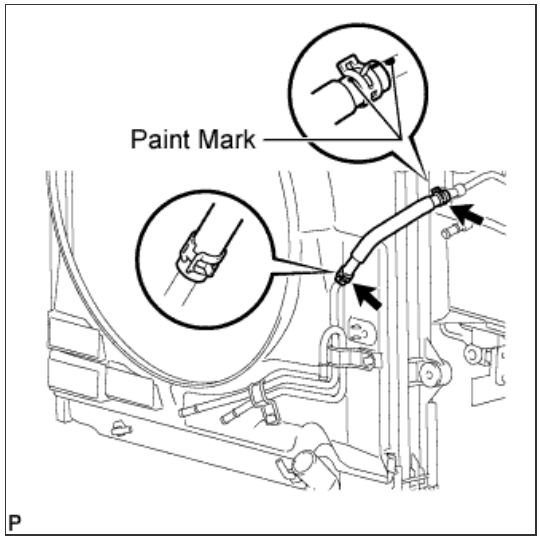

c. Connect the inlet No. 2 and No. 3 oil cooler hoses as shown in the illustration.

NOTICE:

Make sure the pinching portion of each clip is facing the direction shown in the illustration.

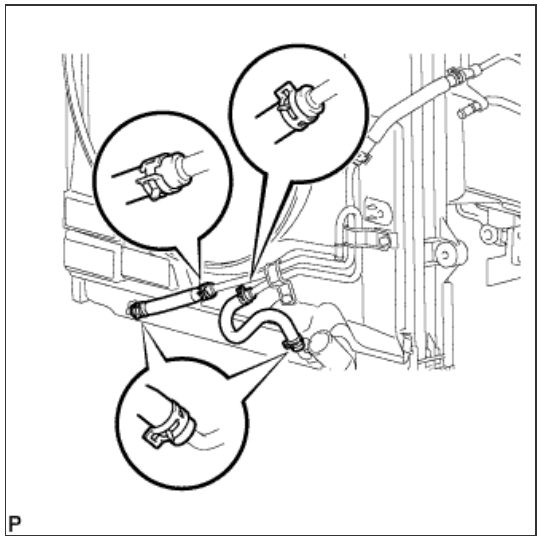


d. Connect the inlet and outlet No. 1 oil cooler hoses as shown in the illustration.

NOTICE:

Make sure the pinching portion of each clip is facing the direction shown in the illustration.

e. Pass the hose through the flexible hose clamp and close the clamp shown in the illustration.

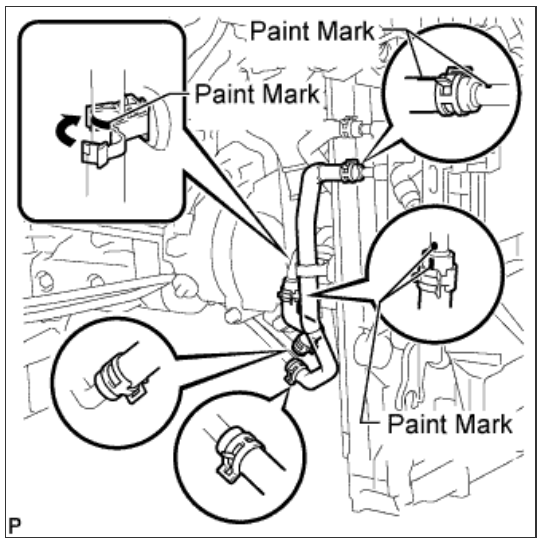

9. INSTALL NO. 2 RADIATOR HOSE


10. INSTALL NO. 1 RADIATOR HOSE

11. INSTALL VANE PUMP ASSEMBLY

a. Apply a light coat of engine oil to a new O-ring, and install it to the vane pump.


.Install the vane pump with 2 new nuts.

Torque:
29 N*m{ 296 kgf*cm , 21 ft.*lbf }

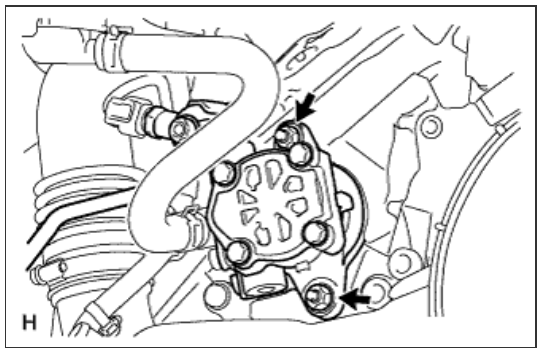


12. INSTALL VANE PUMP OIL RESERVOIR ASSEMBLY

a. Install the vane pump oil reservoir to the bracket.

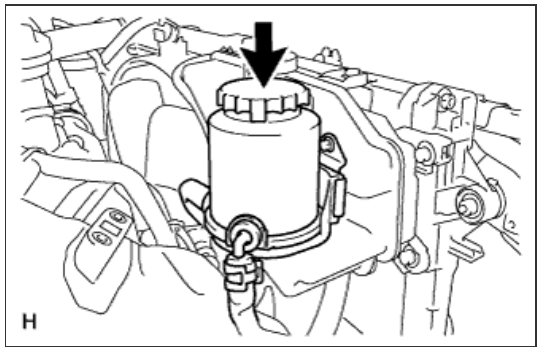


13. INSTALL V-RIBBED BELT

a. Install the V-ribbed belt as shown in the illustration.

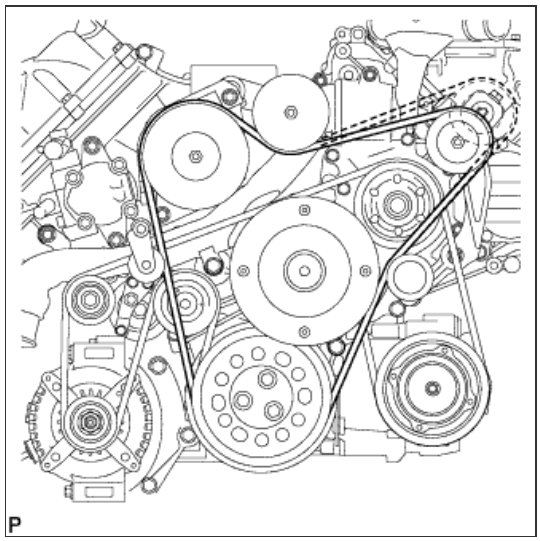

b. Temporarily install the lock nut, and turn the bolt clockwise.

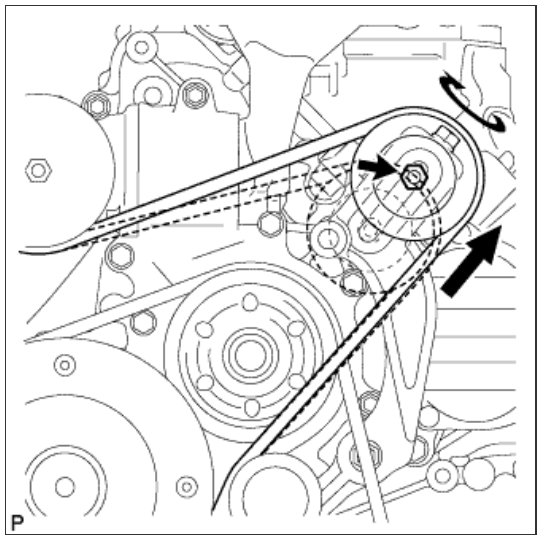


c. Using a belt tension gauge, ad ust belt tension.

Standard Belt Tension:

Item	Specified Condition
New belt	400 to 650 N (41 to 66 kgf, 89.9 to 146.1 lbf)
Used belt	300 to 500 N (31 to 51 kgf, 67.4 to 112.4 lbf)


HINT:

- **A "new belt" is a belt which has been used for less than 5 minutes on a running engine.**
- **A "used belt" is a belt which has been used on a running engine for 5 minutes or more.**
- **After installing a new belt, run the engine for approximately 5 minutes and then recheck the tension.**

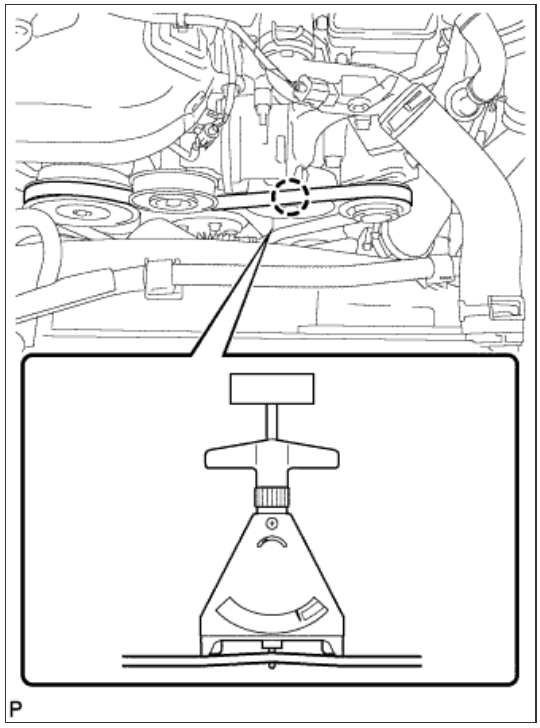

d. Tighten the nut.

Torque:
40 N*m{ 408 kgf*cm , 30 ft.*lbf }

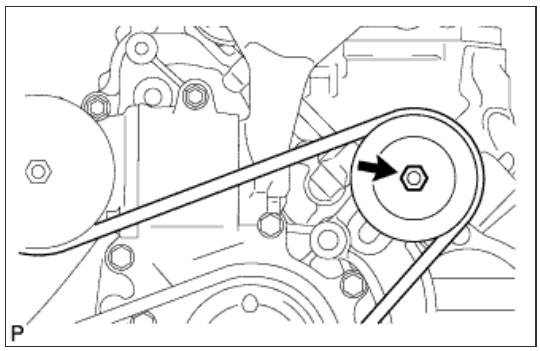


e. Check that the belt fits properly in the ribbed grooves.

HINT:

Check with your hand to confirm that the belt has not slipped out of the groove on the bottom of the pulley.

If it has slipped out, replace the V-ribbed belt. Install a new V-ribbed belt.

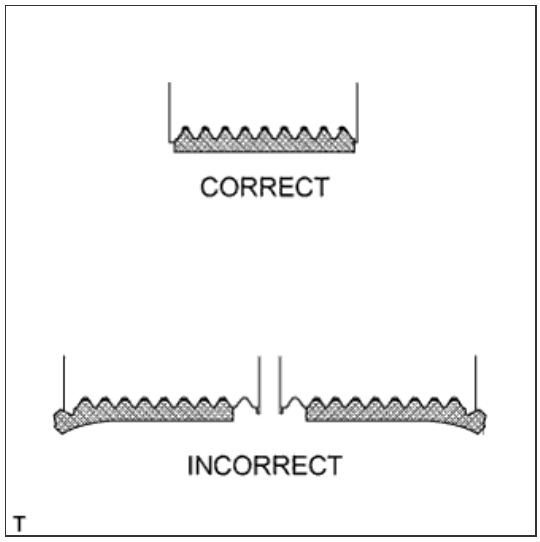

14. INSTALL INTAKE AIR CONNECTOR


a. Connect the intake air connector to the No. 1 and No. 2 air cleaner pipes.

b. Install the connector with the 2 bolts.

Torque:
21 N*m{ 214 kgf*cm , 15 ft.*lbf }


c. Tighten the 2 hose clamps.

Torque:
6.3 N*m{ 64 kgf*cm , 56 in.*lbf }

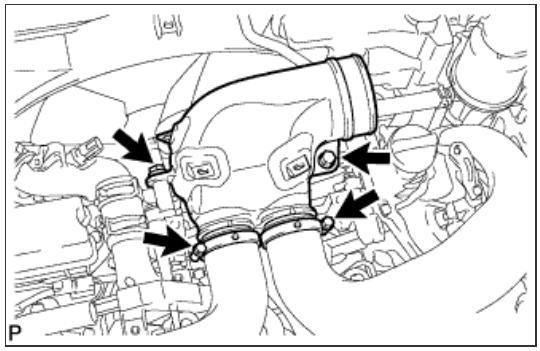


d. Attach the 3 wire harness clamps.

e. Connect the 2 connectors to the water temperature sensor and viscous heater.

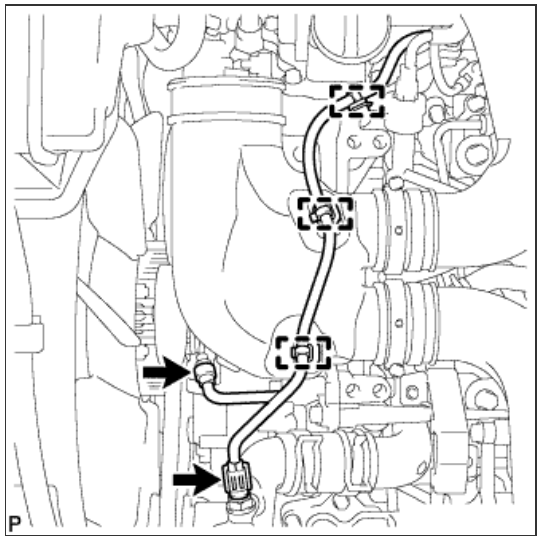


15. TEMPORARILY INSTALL NO. 1 AIR CLEANER HOSE

a. Temporarily install the air cleaner hose to the intake air connector.

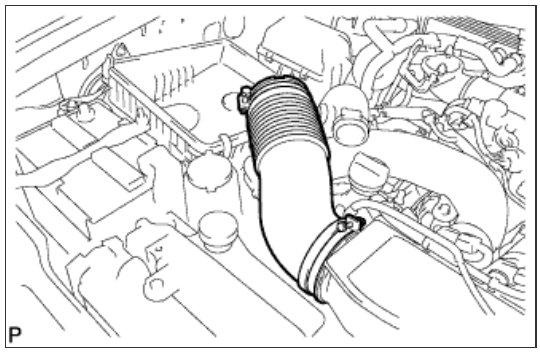

16. INSTALL AIR CLEANER CAP SUB-ASSEMBLY


a. Align the protrusion of the air cleaner cap and concave portion of the air cleaner hose.

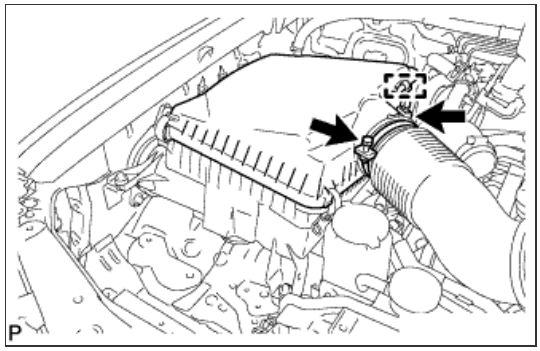

b. Connect the air cleaner cap to the air cleaner hose, and install the air cleaner cap with the 3 clamps.

c. Tighten the 2 hose clamps and connect the connector.


Torque:
6.3 N*m{ 64 kgf*cm , 56 in.*lbf }

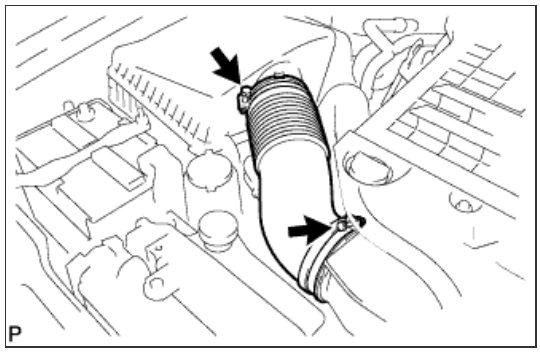

17. INSTALL NO. 1 ENGINE COVER SUB-ASSEMBLY

a. Install the engine cover with the 2 nuts.

Torque:
8.0 N*m{ 82 kgf*cm , 71 in.*lbf }

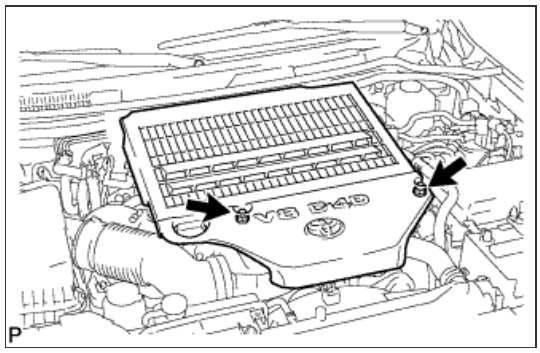


18. INSTALL NO. 3 ENGINE ROOM WIRE

a. Install the No. 3 engine room wire to the main battery and sub-battery positive terminals with the 2 nuts.


Torque:
7.6 N*m{ 77 kgf*cm , 67 in.*lbf }

.Connect the No. 3 engine room wire with the 4 clamps.

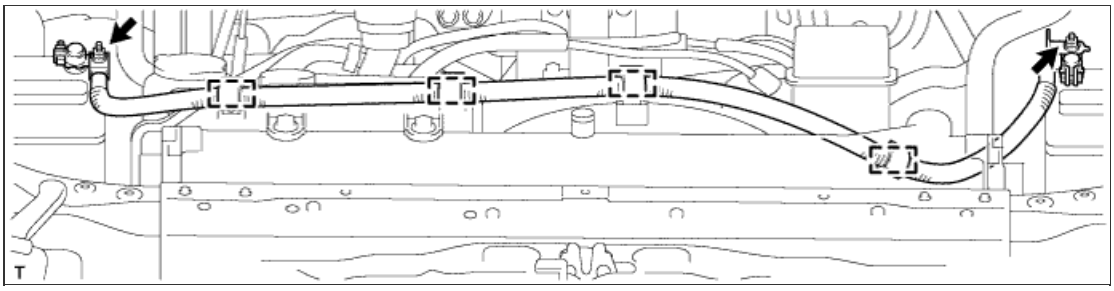


19. INSTALL UPPER RADIATOR SUPPORT SEAL

a. Install the radiator support seal with the 7 clips.

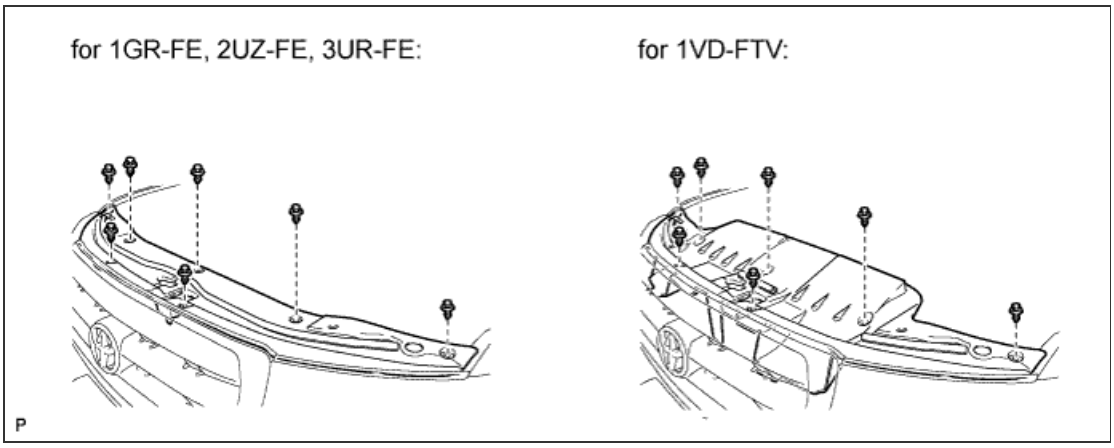


20. ADD ENGINE COOLANT


a. Remove the engine air bleed cap.

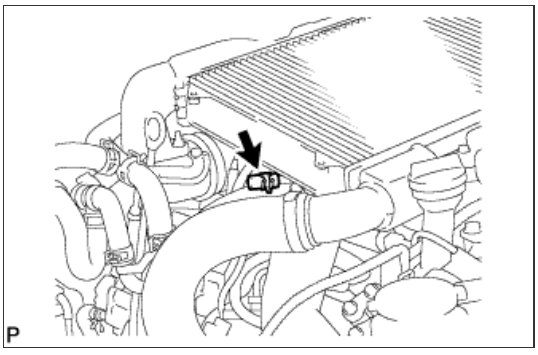

b. Connect a clear hose to the engine air bleed pipe.

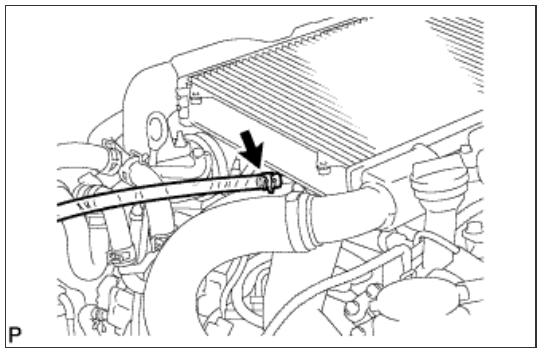

c. Using a wrench, remove the vent plug.

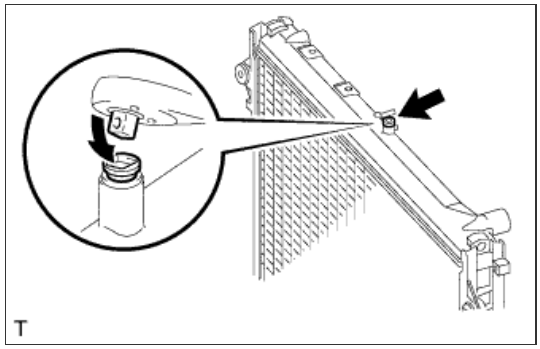


d. Fill the radiator with TOYOTA SLLC to the radiator reservoir filler neck.

HINT:

Pour TOYOTA SLLC until it spills out of the engine air bleed pipe.

Standard Capacity (for Automatic Transmission):

Item	Specified Condition
Front heater only	14.8 liters (15.6 US qts, 13.0 Imp. qts)
Front heater and rear heater	17.6 liters (18.6 US qts, 15.5 Imp. qts)
Front heater with viscous heater	15.2 liters (16.1 US qts, 13.4 Imp. qts)
Front heater and rear heater with viscous heater	18.0 liters (19.0 US qts, 15.4 Imp. qts)

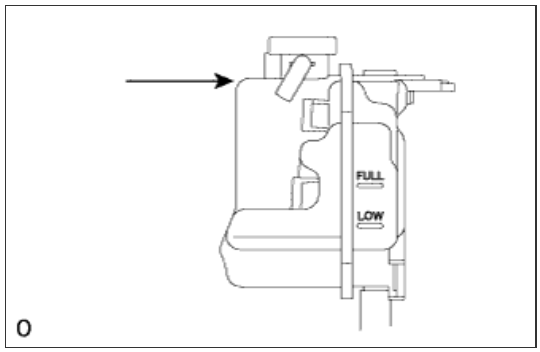

Standard capacity (for Manual Transmission):
15.4 liters (16.3 US qts, 13.5 Imp. qts)

NOTICE:

Do not substitute plain water for engine coolant.

HINT:


TOYOTA vehicles are filled with TOYOTA SLLC at the factory. In order to avoid damage to the engine cooling system and other technical problems, only use TOYOTA SLLC or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology consists of a combination of low phosphates and organic acids).

e. Install the vent plug.


Torque:
2.0 N*m{ 20 kgf*cm , 18 in.*lbf }

NOTICE:

Do not tighten the plug to 5.0 N*m (51 kgf*cm, 44 in.*lbf) or more, as the plug will be damaged.

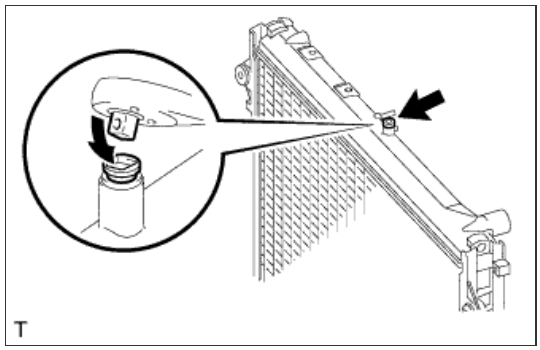


f. Disconnect the clear hose from the engine air bleed pipe.

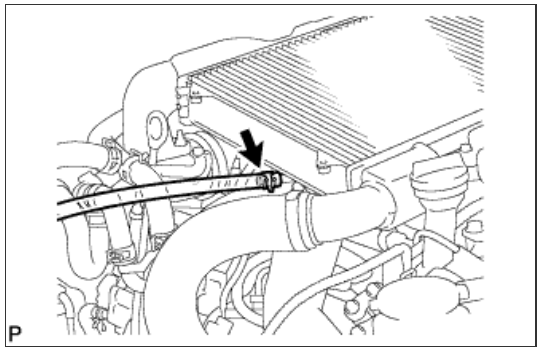

g. Install the engine air bleed cap when coolant comes out.

h. Install the radiator reservoir cap.

i. Start the engine.

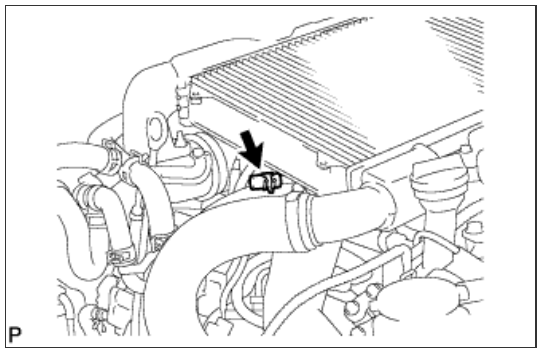

NOTICE:

Immediately after starting the engine, if the radiator reservoir does not have any coolant, perform the following 1) stop the engine, 2) wait until the coolant has cooled down, and 3) add coolant until the coolant is filled to the FULL line.

.Maintain an engine speed of 3000 rpm for approximately 10 minutes so that the thermostat opens and air bleeding is performed.

CAUTION:

When pressing the radiator hoses:

- **Wear protective gloves.**
- **Be careful as the radiator hoses are hot.**
- **Keep your hands away from the radiator fan**

NOTICE:

- **Pay attention to the needle of the water temperature meter. Make sure that the needle does not show an abnormally high temperature.**
- **If there is not enough coolant, the engine may burn out or overheat.**

HINT:


The thermostat opening timing can be confirmed by pressing the No. 2 radiator hose by hand, and checking when the engine coolant starts to flow inside the hose.

k. Stop the engine, and wait until the engine coolant cools down to ambient temperature.

CAUTION:

Do not remove the radiator reservoir cap while the engine and radiator are still hot. Pressurized, hot engine coolant and steam may be released and cause serious burns.


l. Check that the coolant level is between the FULL and LO ines.
If the coolant level is above the FULL line, drain coolant so that the coolant level is between the FULL and LO ines.

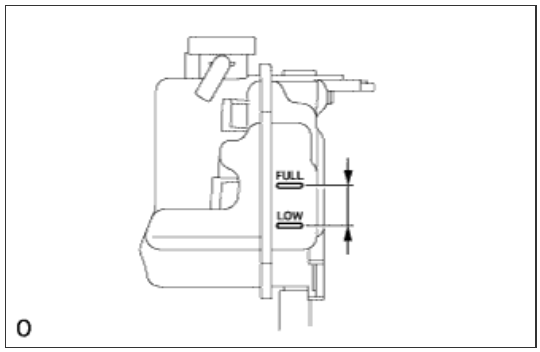

1INSTALL NO. 1 ENGINE UNDER COVER SUB-ASSEMBLY

a. Install the engine under cover with the 10 bolts.

Torque:
29 N*m{ 296 kgf*cm , 21 ft.*lbf }

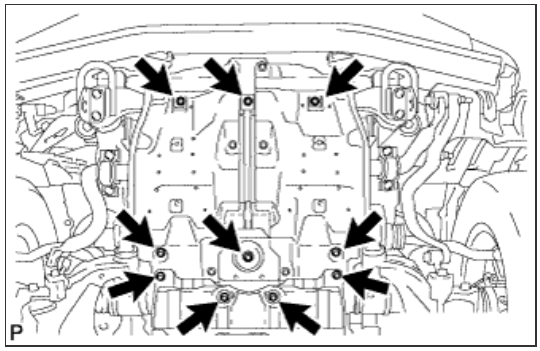

22. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY LH

a. for Standard
Install the front fender splash shield (Click here).

b. w inch
Install the front fender splash shield (Click here).

23. INSTALL FRONT FENDER SPLASH SHIELD SUB-ASSEMBLY RH

a. for Standard
Install the front fender splash shield (Click here).

b. w inch
Install the front fender splash shield (Click here).

24. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

herdisconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

25. CHECK FOR ENGINE COOLANT LEAKS


CAUTION:

Do not remove the radiator reservoir cap while the engine and radiator are still hot. Pressurized, hot engine coolant and steam may be released and cause serious burns.


a. Fill the radiator with coolant and attach a radiator cap tester to the radiator reservoir.

. arm up the engine.

c. Using the radiator cap tester, increase the pressure inside the radiator to 123 kPa (1.3 kgf cm^2, 17.8 psi), and check that the pressure does not drop.
If the pressure drops, check the hoses, radiator and water pump for leaks.
If no external leaks are found, check the cylinder block and cylinder head.

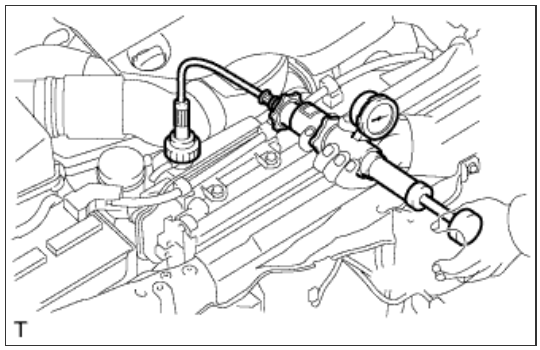

f P pa ti Click he

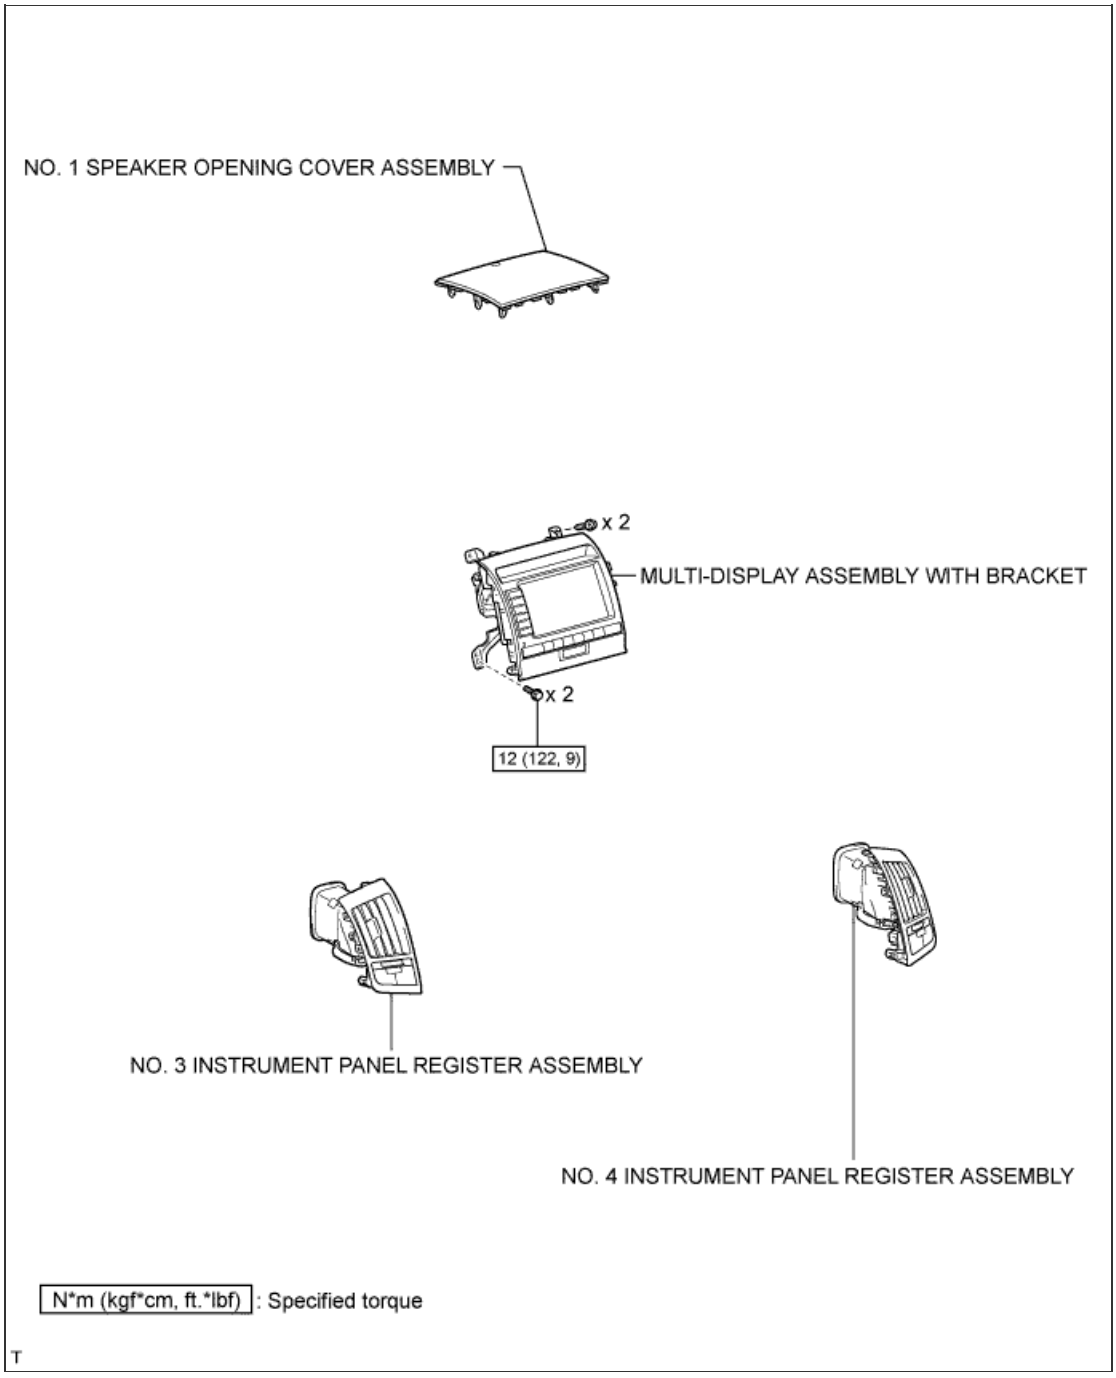

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Detach the 8 claws and remove the opening cover.

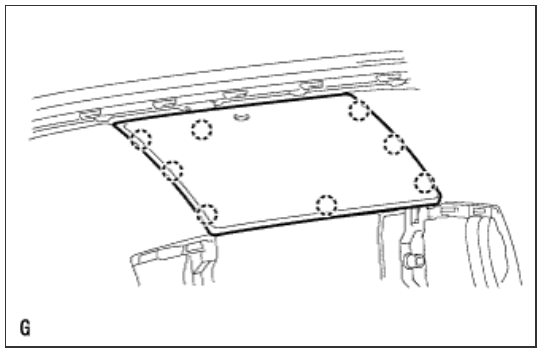

3. REMOVE NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.



4. REMOVE NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.




5. REMOVE MULTI-DISPLAY ASSEMBLY WITH BRACKET

a. Remove the 4 bolts.

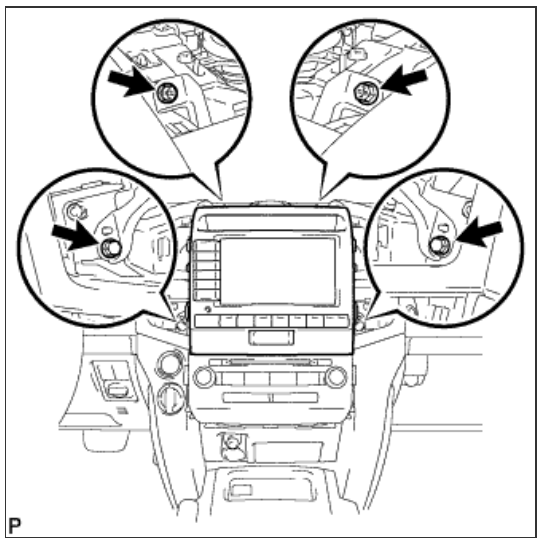

b. Pull the radio receiver to detach the 8 claws on the backside of the radio receiver.

c. Disconnect the connectors and remove the radio receiver.

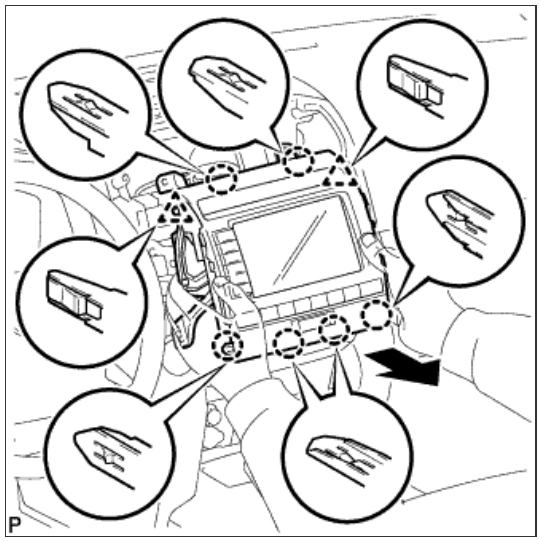

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Detach the 8 claws and remove the opening cover.

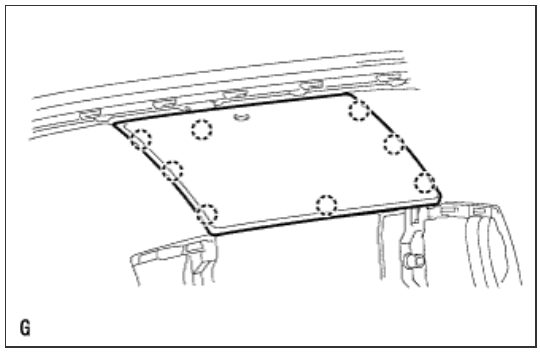

3. REMOVE NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.



4. REMOVE NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.




5. REMOVE MULTI-DISPLAY ASSEMBLY WITH BRACKET

a. Remove the 4 bolts.

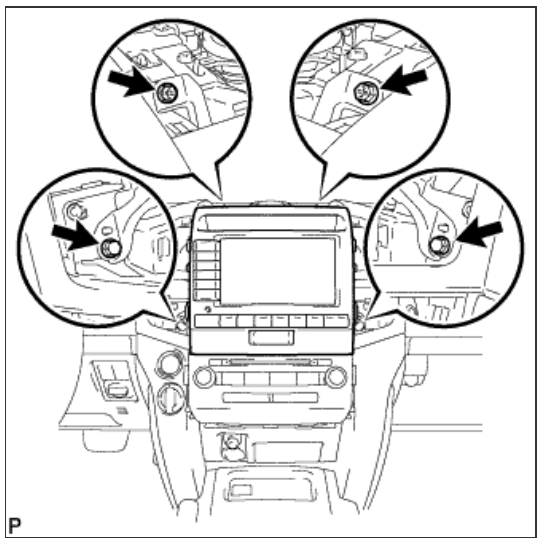

b. Pull the radio receiver to detach the 8 claws on the backside of the radio receiver.

c. Disconnect the connectors and remove the radio receiver.

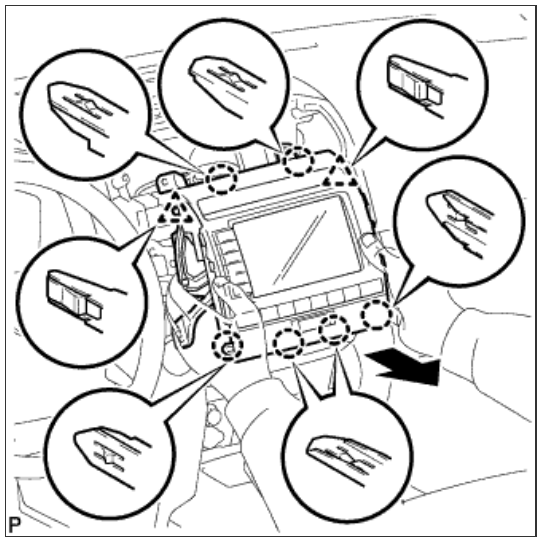

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**


1. INSTALL MULTI-DISPLAY ASSEMBLY WITH BRACKET

a. Connect the connectors.


b. Insert the radio receiver and attach the 8 claws on its backside.

NOTICE:

When inserting the radio receiver, do not press the knobs on it.

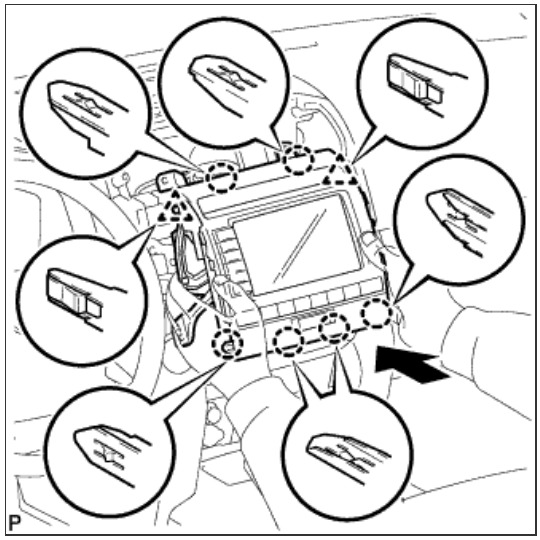


c. Install the radio receiver with the 4 bolts.

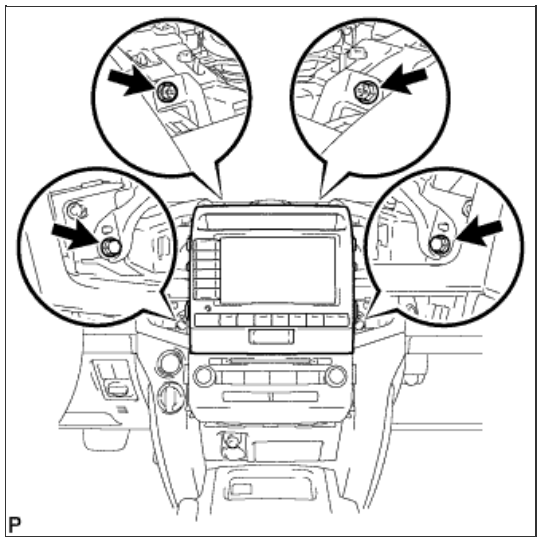

2. INSTALL NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Connect the connector.


b. Attach the 6 claws to install the register.

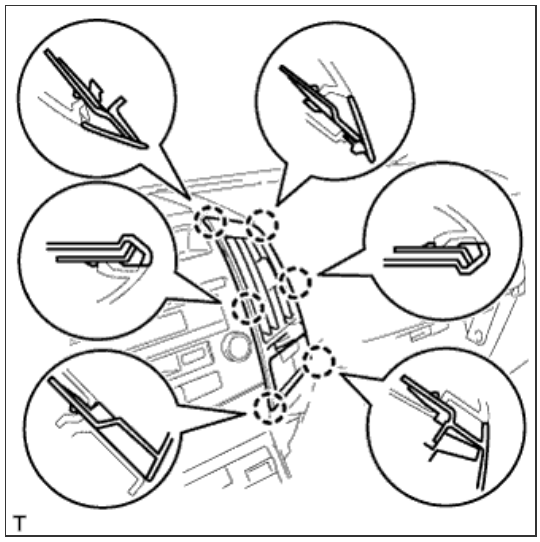

3. INSTALL NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Connect the connector.

b. Attach the 6 claws to install the register.

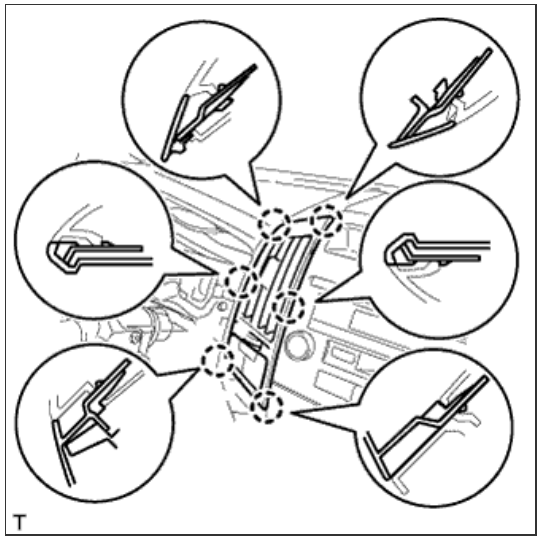

4. INSTALL NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Attach the 8 claws to install the opening cover.

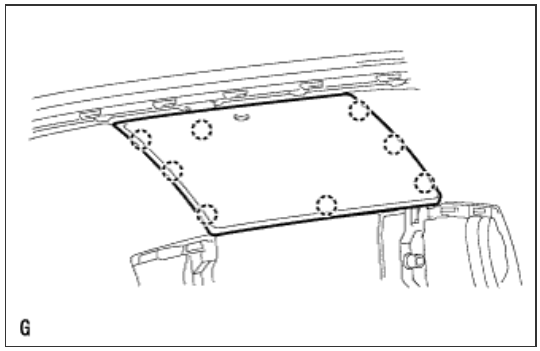

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**


1. INSTALL MULTI-DISPLAY ASSEMBLY WITH BRACKET

a. Connect the connectors.


b. Insert the radio receiver and attach the 8 claws on its backside.

NOTICE:

When inserting the radio receiver, do not press the knobs on it.

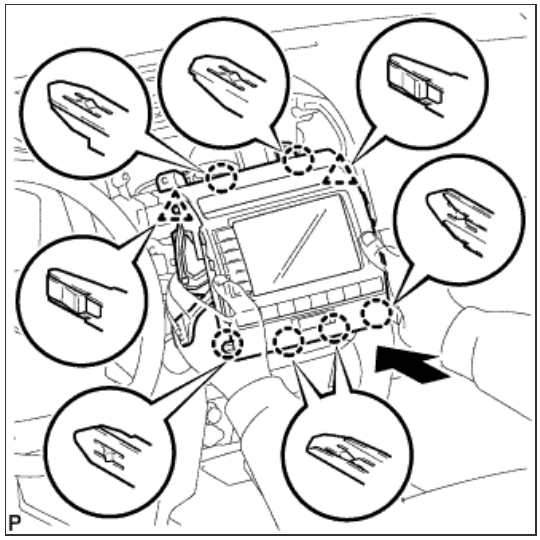


c. Install the radio receiver with the 4 bolts.

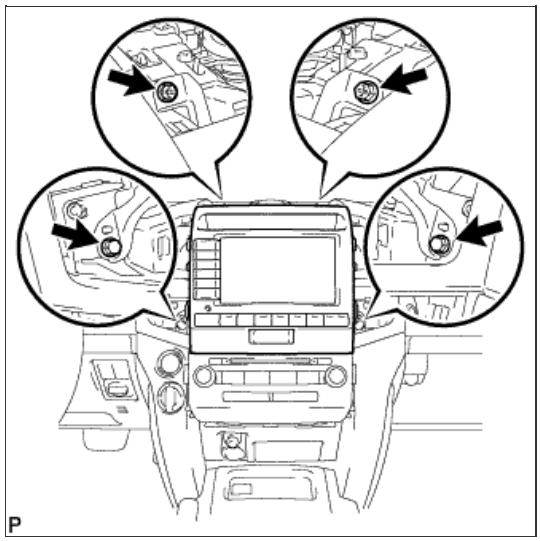

2. INSTALL NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Connect the connector.


b. Attach the 6 claws to install the register.

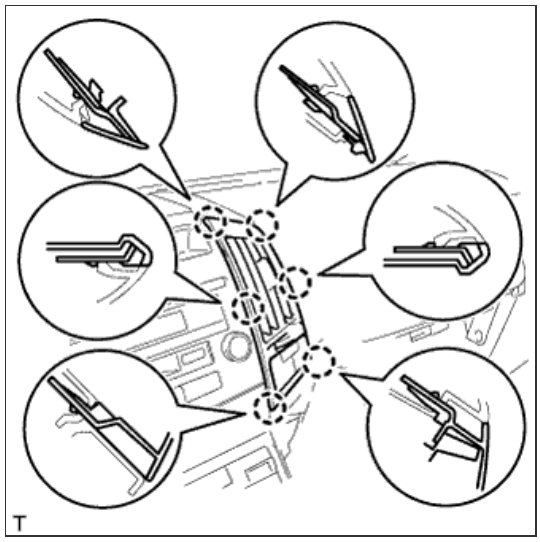

3. INSTALL NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Connect the connector.

b. Attach the 6 claws to install the register.

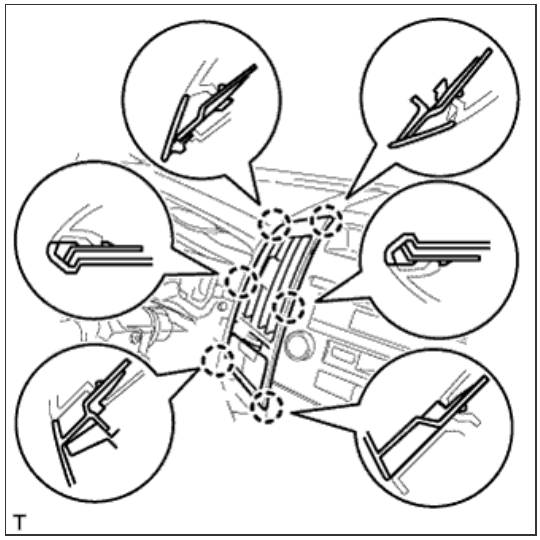

4. INSTALL NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Attach the 8 claws to install the opening cover.

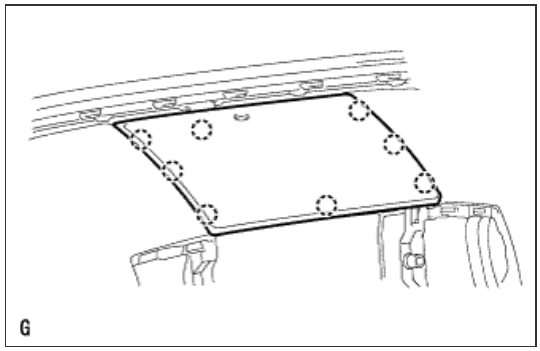

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

1.PRECAUTIONS FOR REPLACEMENT

NOTICE:

When replacing electronic parts, if there is a possibility that your body may contact a circuit board, etc., observe all precautions to prevent damage to the system by electrostatic discharge (ESD).

a. Procedures where static electricity countermeasures are necessary:

   i. Center cluster module circuit replacement.

   ii. Internal wiring connection/disconnection, inspection and replacement.

b. General precautions:


   i. Before performing any procedures, touch an unpainted metal part or ground bolt of the vehicle to discharge any static electricity.


   ii. To prevent damage to electrical equipment, disconnect the battery power supply before removing or installing electrical equipment.

   iii. Never touch the electronic parts of a circuit board or the pins of an integrated circuit.

   iv. When performing procedures, do not allow clothing to come near or contact parts.

for Preparation Click here

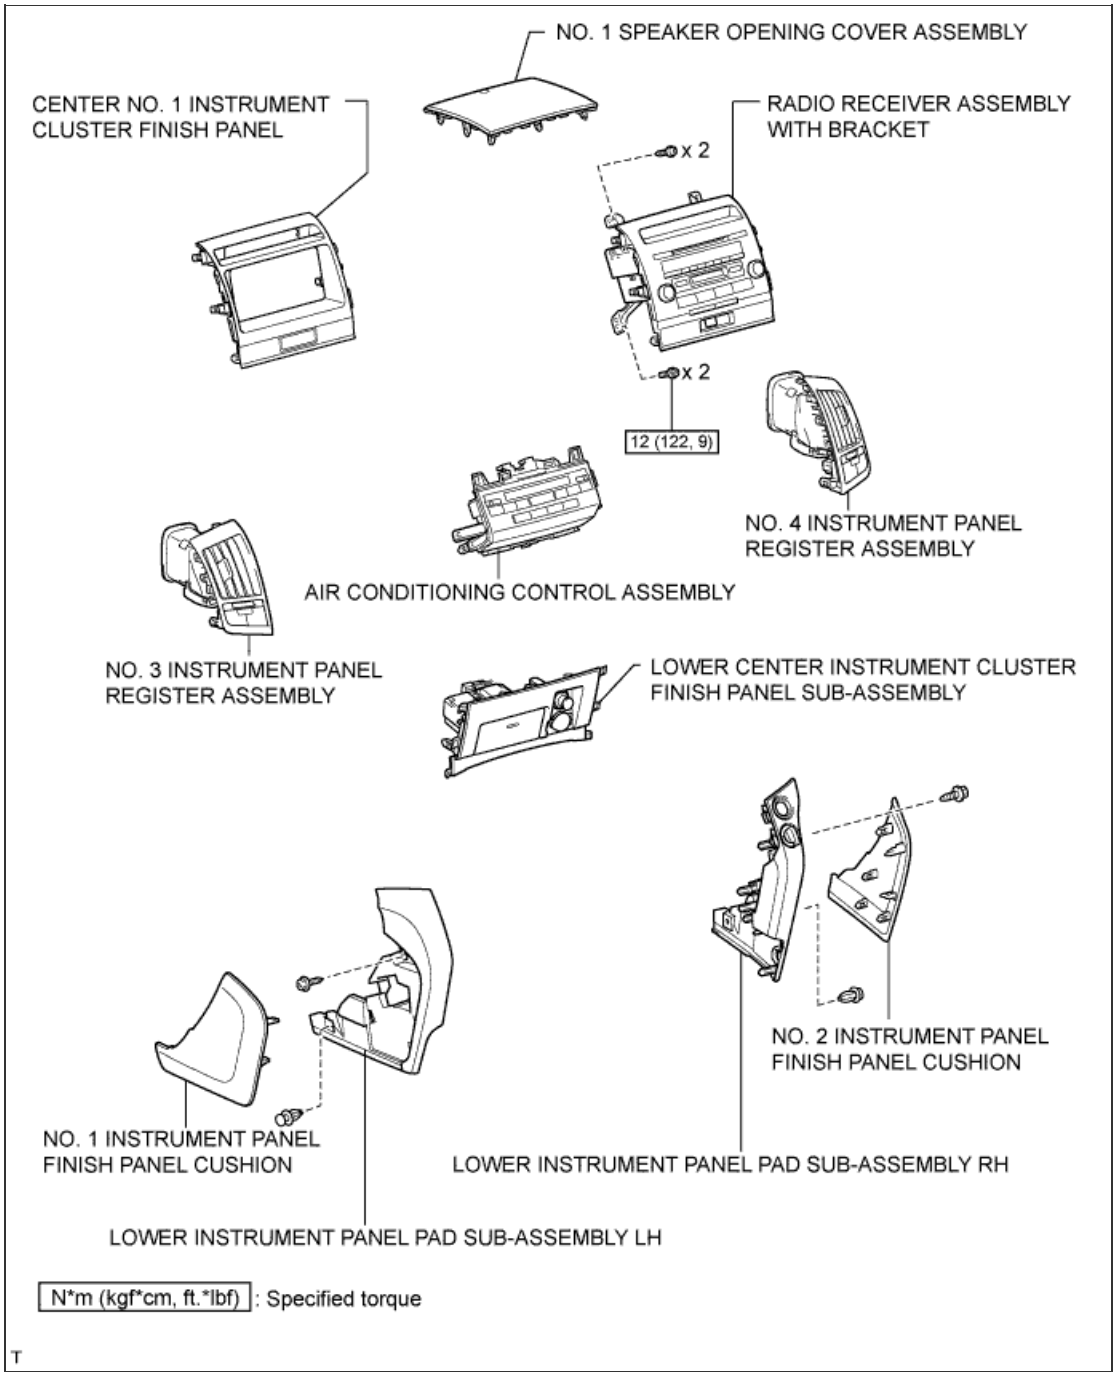

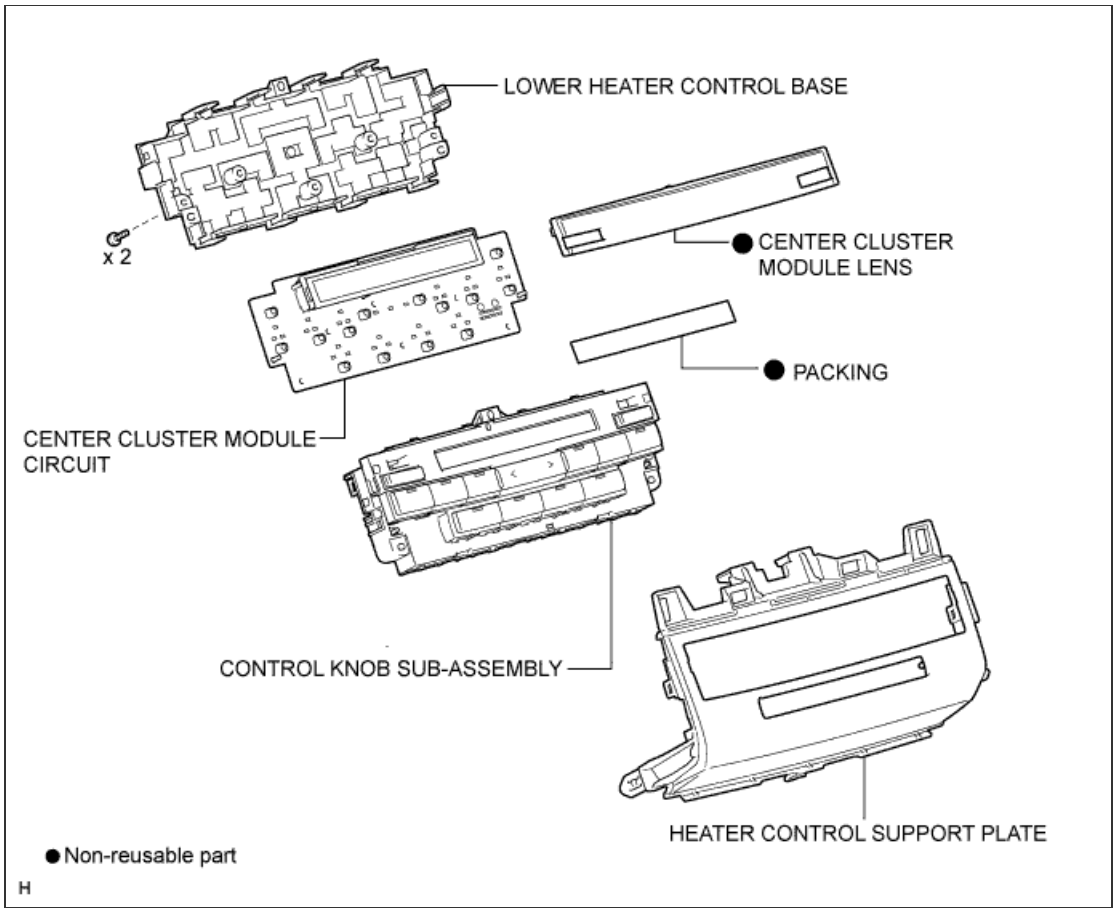
LOWER HEATER CONTROL BASE
x 2
CENTER CLUSTER MODULE LENS
PACKING
CENTER CLUSTER MODULE CIRCUIT
CONTROL KNOB SUB-ASSEMBLY
HEATER CONTROL SUPPORT PLATE
● Non-reusable part
H

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Detach the 8 claws and remove the opening cover.

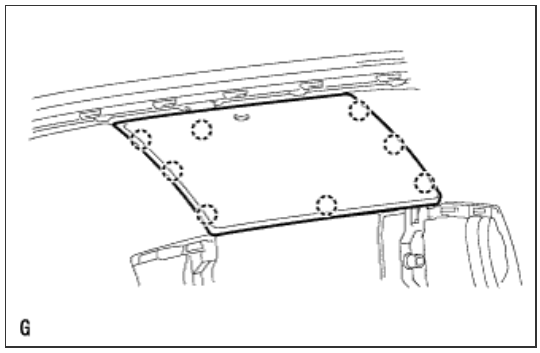

3. REMOVE NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.



4. REMOVE NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.



5. REMOVE RADIO RECEIVER ASSEMBLY WITH BRACKET

a. w/ Cassette Tape Player:
Remove the radio receiver assembly with bracket (Click here).


b. w/o Multi-dsplay:
Remove the radio receiver assembly with bracket (Click here).

6. REMOVE CENTER NO. 1 INSTRUMENT CLUSTER FINISH PANEL

7. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

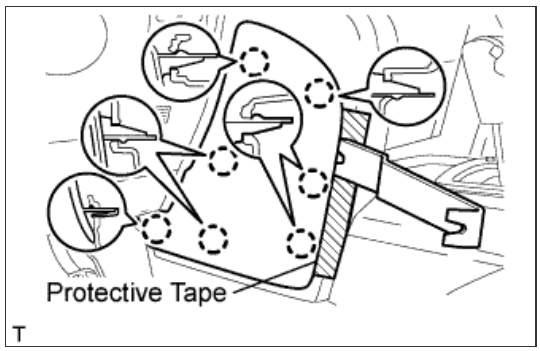


8. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

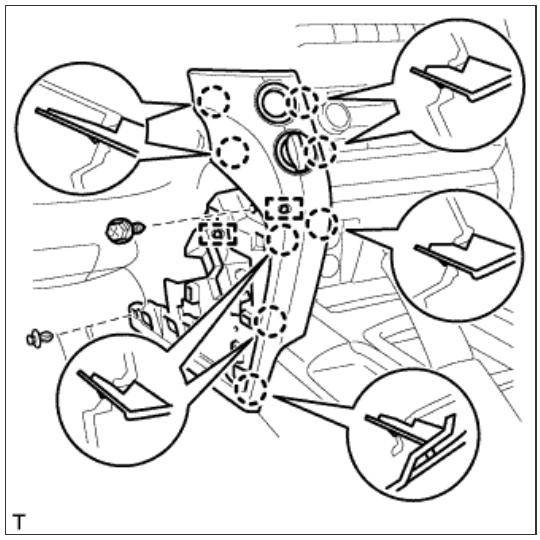

9. REMOVE NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




10. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.

b. Remove the screw.


c. Detach the 7 claws and remove the panel.

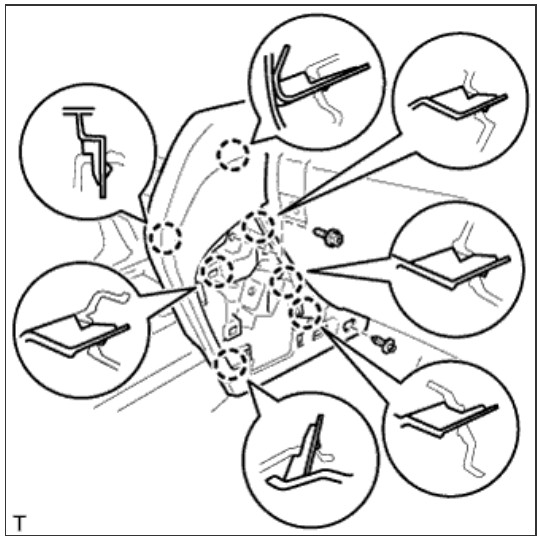

11. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

a. Detach the 7 claws.


b. Disconnect the connectors and remove the panel.

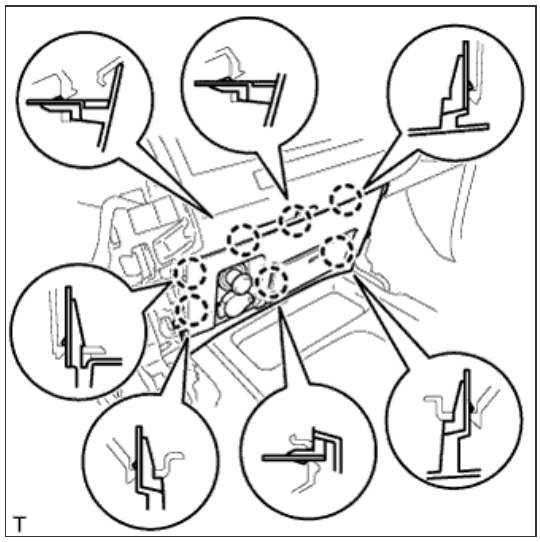

12. REMOVE AIR CONDITIONING CONTROL ASSEMBLY

a. Pull the radio receiver to detach the 5 claws on the backside of the radio receiver.

b. Disconnect the connectors and remove the radio receiver.

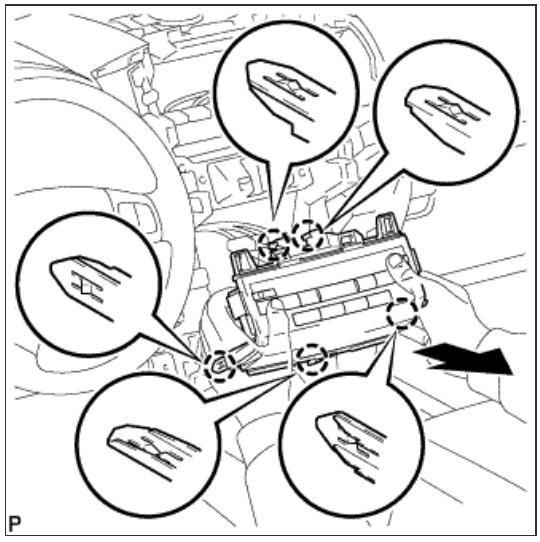


for Pr paration Click h

REMOVE LOWER HEATER CONTROL BASE

a. Remove the 2 screws.

b. Detach the 7 claws and remove the lower heater control base.

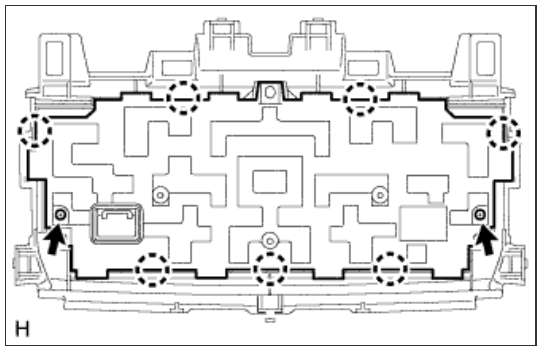


2. REMOVE CENTER CLUSTER MODULE CIRCUIT

NOTICE:

As the electronic parts of the circuit board may be damaged by static electricity, do not touch the electronic parts of the circuit board or the soldered areas with bare hands.

a. Remove the center cluster module circuit.

b. Remove the packing.

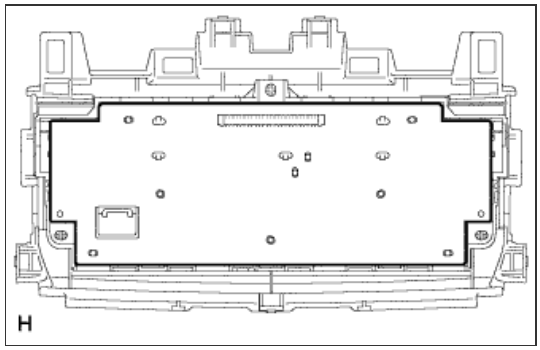


3. REMOVE CENTER CLUSTER MODULE LENS

a. Remove the double-sided tape and center cluster module lens.


Text in Illustration

*1	Double-sided Tape

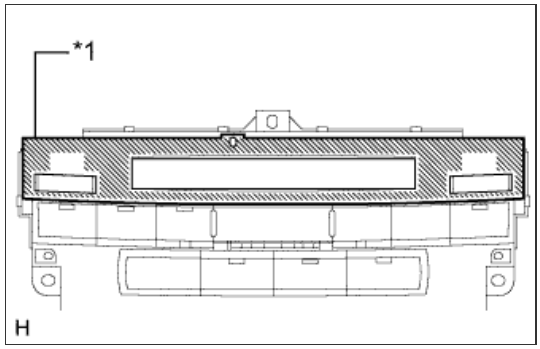

4. REMOVE CONTROL KNOB SUB-ASSEMBLY


a. Detach the 10 claws and remove the control knob sub-assembly.

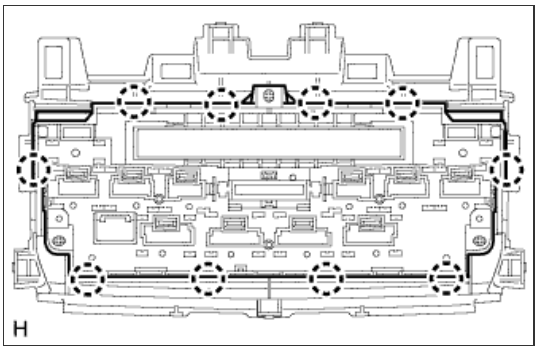

for Preparation Click here

1. INSTALL CONTROL KNOB SUB-ASSEMBLY

a. Attach the 10 claws to install the control knob sub-assembly.

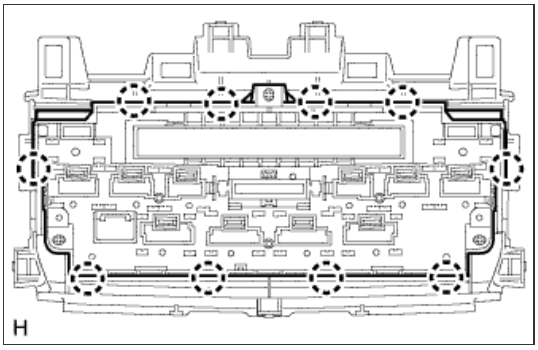

2. INSTALL CENTER CLUSTER MODULE LENS

a. Remove the double-sided tape from the control knob sub-assembly.

Text in Illustration

1	Double-sided Tape

b. Wipe off any tape adhesive residue with cleaner.

c. Remove the peeling paper from the new center cluster module lens.


HINT:

After removing the peeling paper, keep the exposed adhesive free from foreign matter.

d. Install the center cluster module lens.

NOTICE:

Do not reuse the center cluster module lens after removing it.

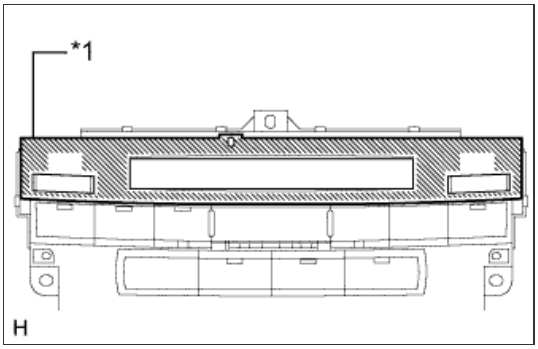


3. INSTALL CENTER CLUSTER MODULE CIRCUIT

NOTICE:

As the electronic parts of the circuit board may be damaged by static electricity, do not touch the electronic parts of the circuit board or the soldered areas with bare hands.

a. Install new packing.


b. Install the center cluster module circuit.

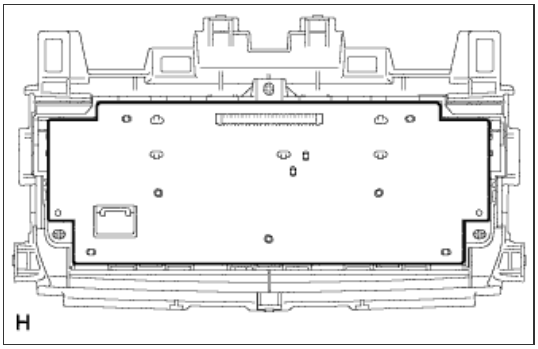

4. INSTALL LOWER HEATER CONTROL BASE

a. Attach the 7 claws to install the lower heater control base.

b. Install the 2 screws.

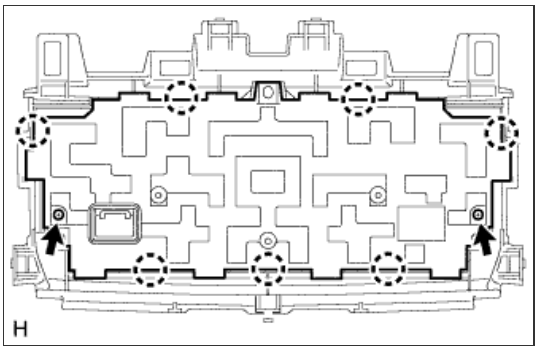

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**


1. INSTALL AIR CONDITIONING CONTROL ASSEMBLY

a. Connect the connectors.

b. Insert the radio receiver and attach the 5 claws on its backside.

NOTICE:


When inserting the radio receiver, do not press the knobs on it.

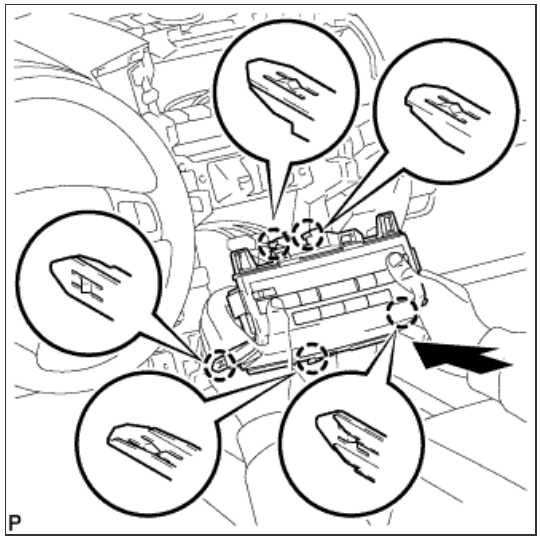

2. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

a. Connect the connectors.

b. Attach the 7 claws to install the panel.

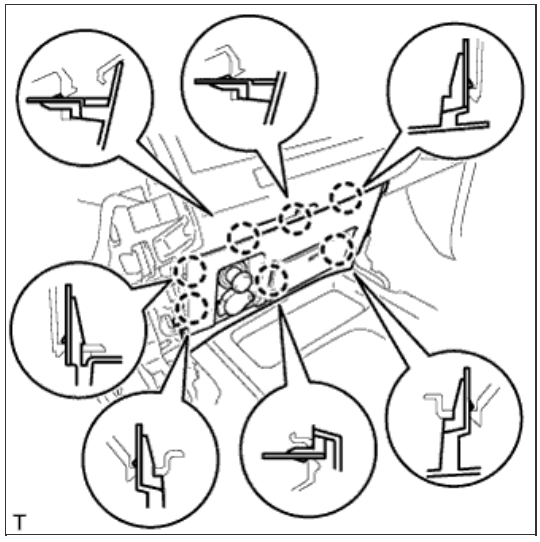


3. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

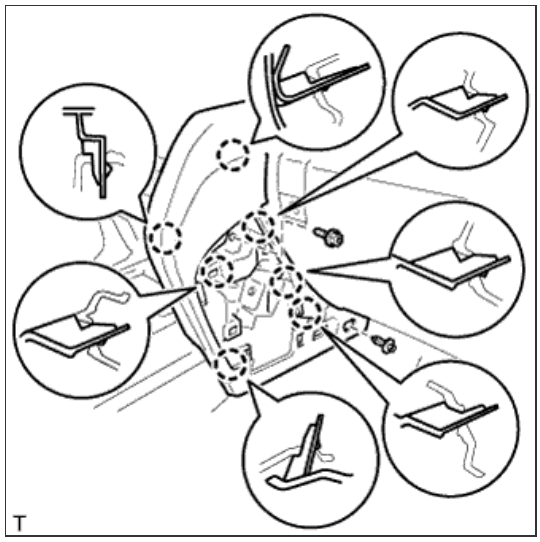

4. INSTALL NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

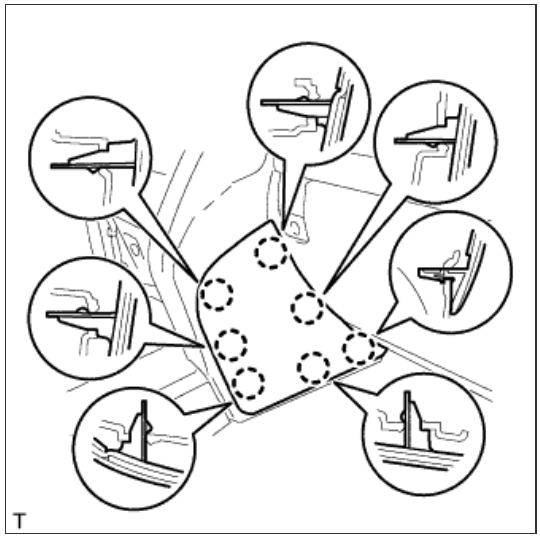


5. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

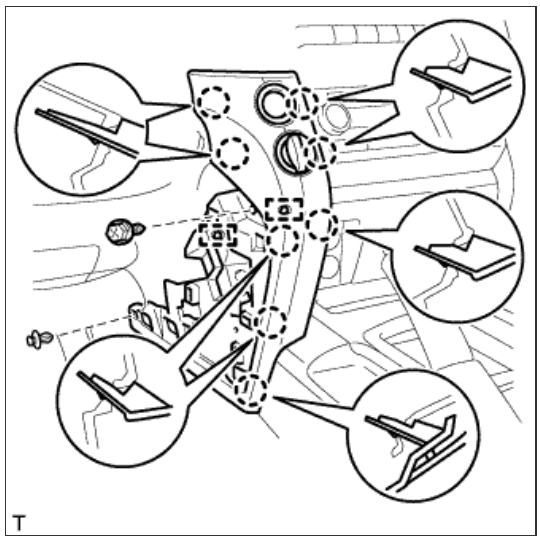

6. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

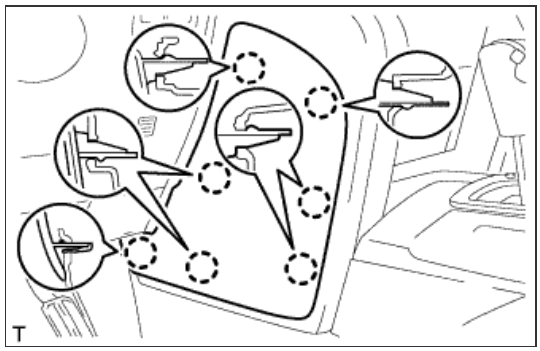

7. INSTALL RADIO RECEIVER ASSEMBLY WITH BRACKET

a. w/ Cassette Tape Player:
Install the radio receiver assembly with bracket (Click here).


b. w/o Multi-display:
Install the radio receiver assembly with bracket (Click here).

8. INSTALL CENTER NO. 1 INSTRUMENT CLUSTER FINISH PANEL

9. INSTALL NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Connect the connector.


b. Attach the 6 claws to install the register.

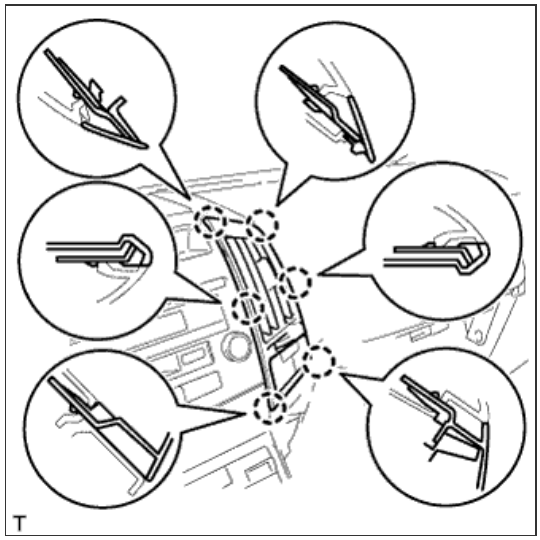

10. INSTALL NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Connect the connector.

b. Attach the 6 claws to install the register.

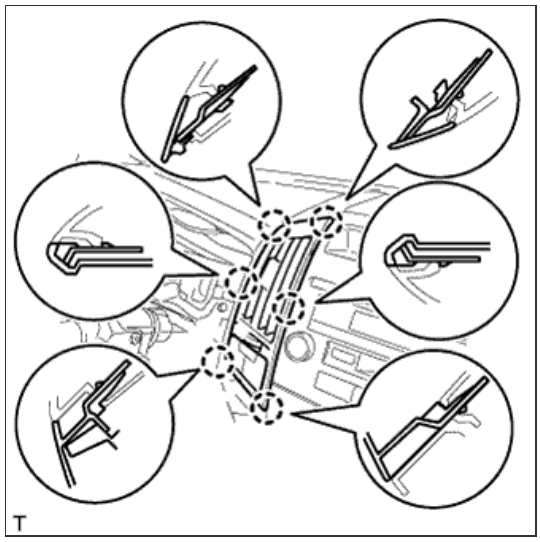

11. INSTALL NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Attach the 8 claws to install the opening cover.

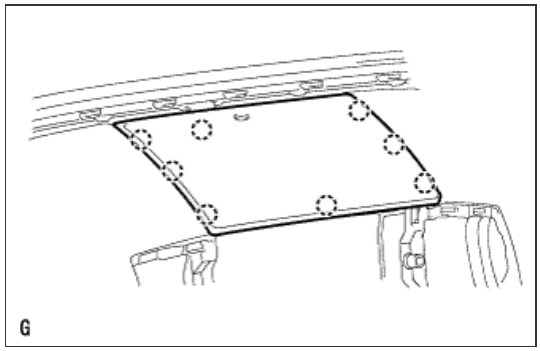



12. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

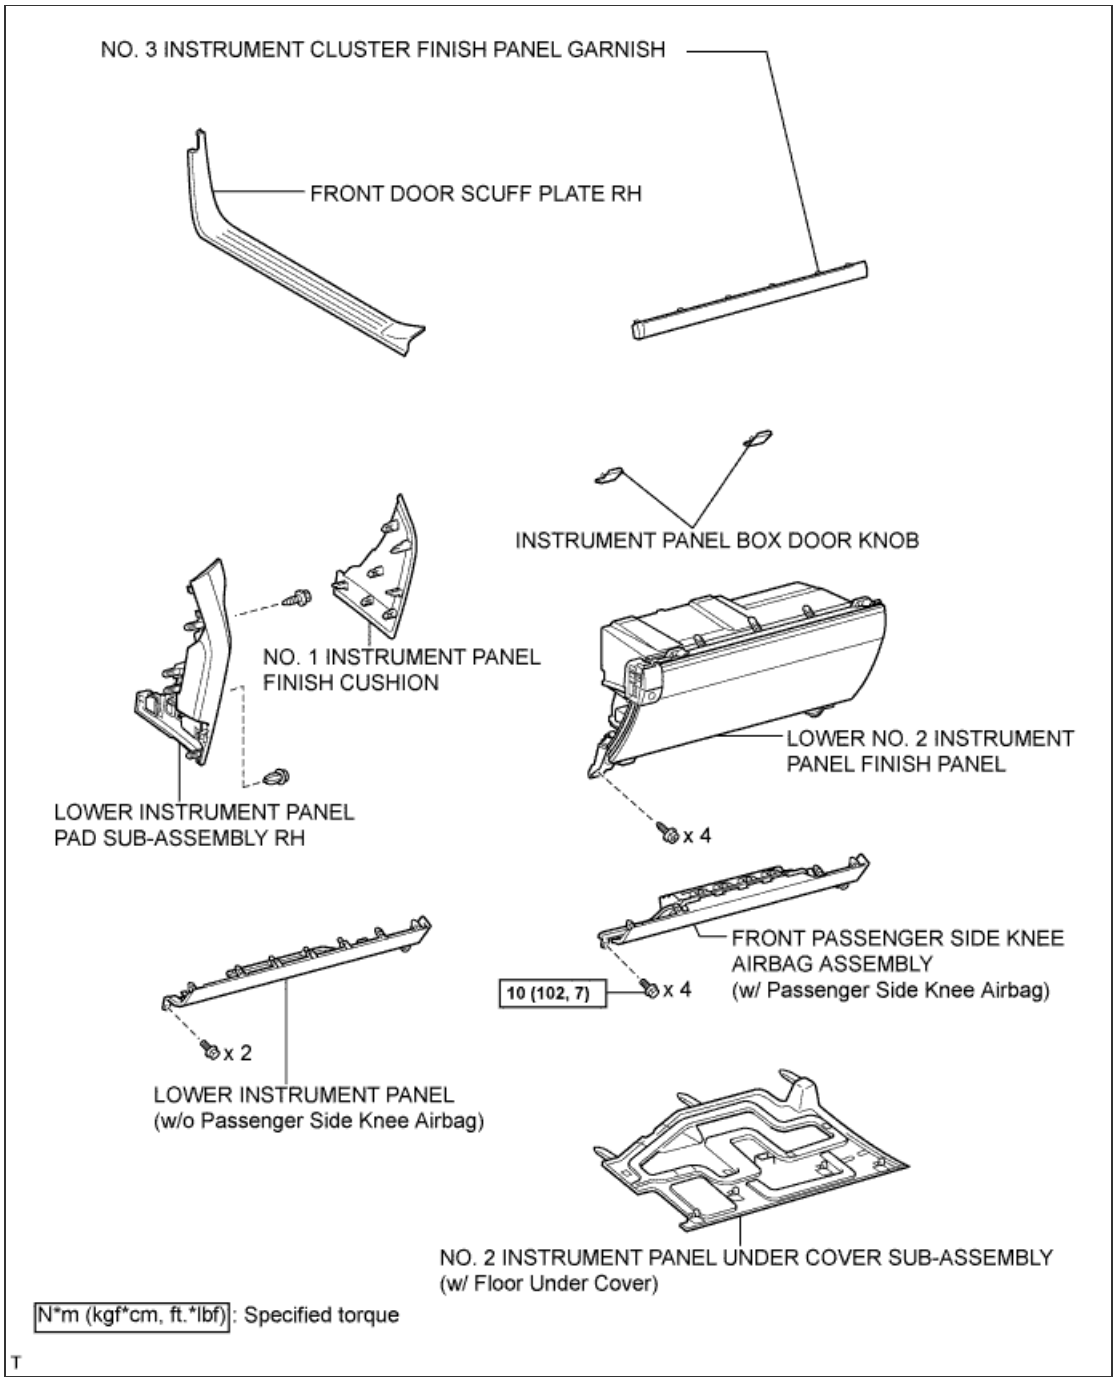

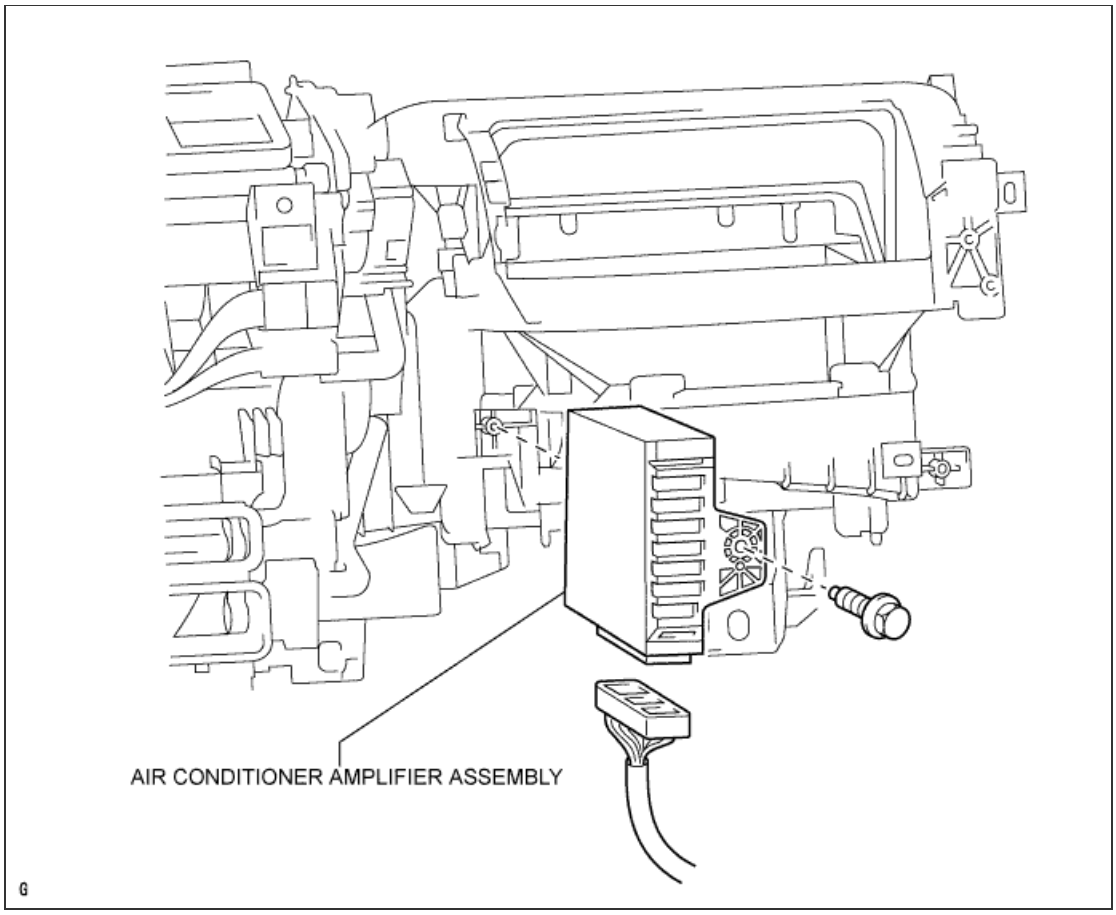
AIR CONDITIONER AMPLIFIER ASSEMBLY
G

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (w/ Passenger Side Knee Airbag)

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT DOOR SCUFF PLATE RH

a. w/ Sliding Roof:
Remove the front door scuff plate (Click here).

b. w/o Sliding Roof:
Remove the front door scuff plate (Click here).

3. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

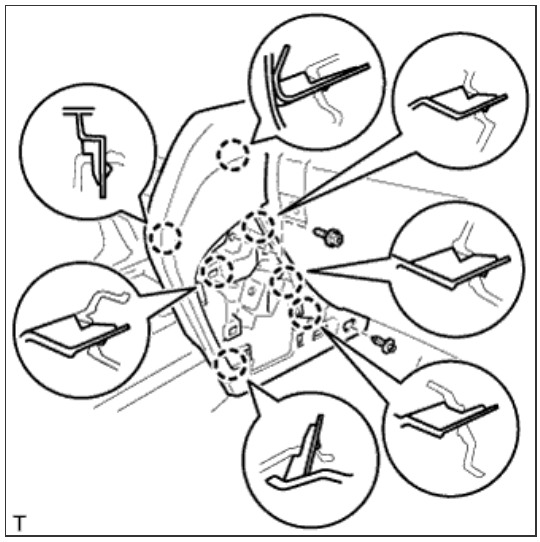

5. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Detach the 4 claws and remove the under cover.

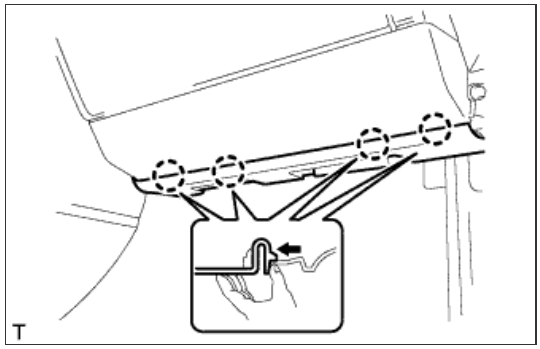

6. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)


a. Remove the 4 bolts.

b. Detach the 4 claws and remove the front passenger side knee airbag.

c. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

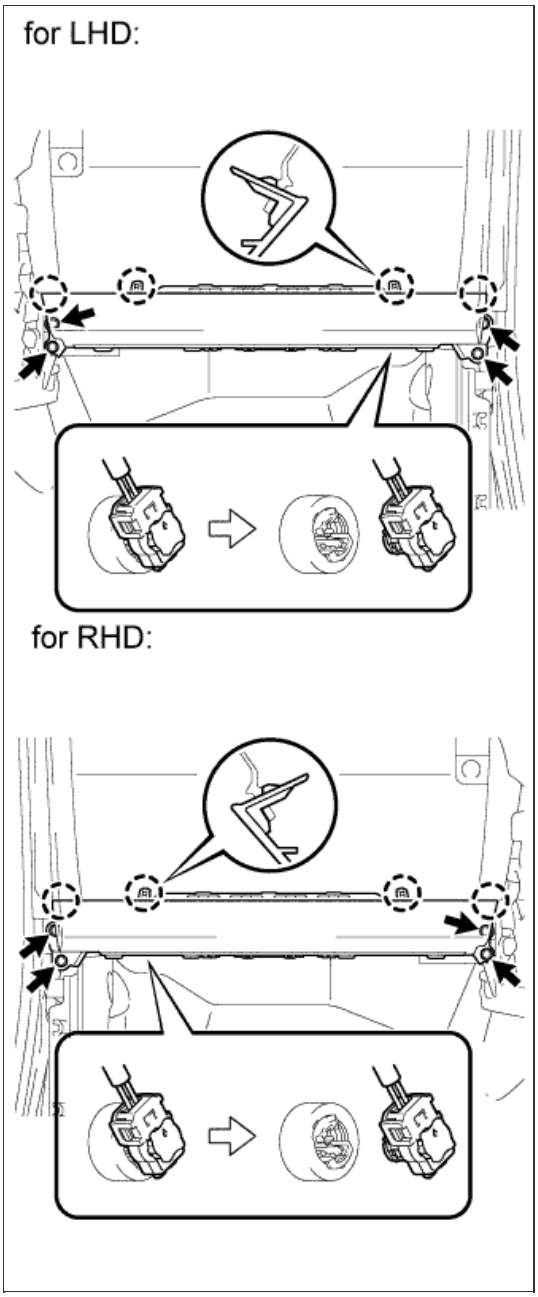

7. REMOVE LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Remove the 2 bolts.


b. Detach the 4 claws and remove the instrument panel.

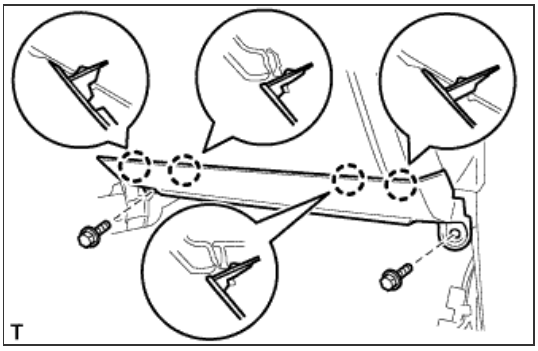

8. REMOVE NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the claws and remove the panel garnish.

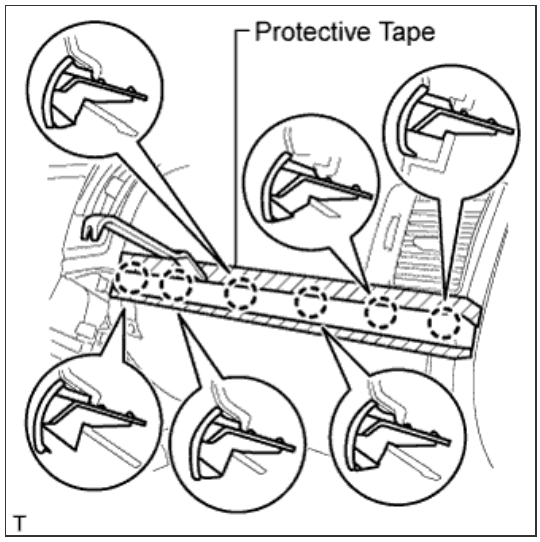


9. REMOVE LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Remove the 4 bolts.

b. Detach the 3 claws.


c. Remove the finish panel and then disconnect the connector.

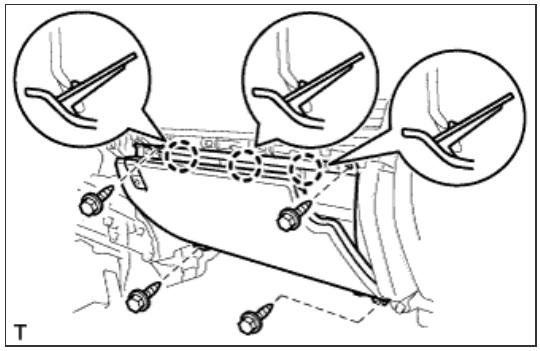

10. REMOVE AIR CONDITIONER AMPLIFIER ASSEMBLY

a. Disconnect the connector.

b. Remove the screw and amplifier.

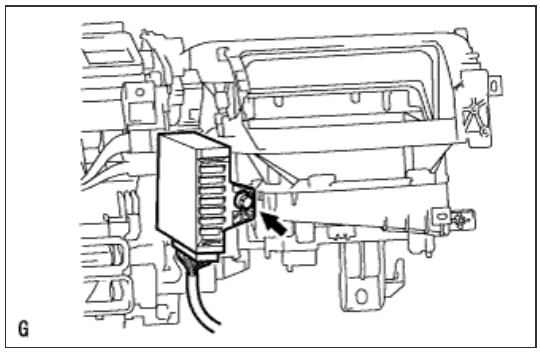

for Preparation Click here

HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL (w/ Passenger Side Knee Airbag)

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE FRONT DOOR SCUFF PLATE RH

a. w/ Sliding Roof:
Remove the front door scuff plate (Click here).

b. w/o Sliding Roof:
Remove the front door scuff plate (Click here).

3. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

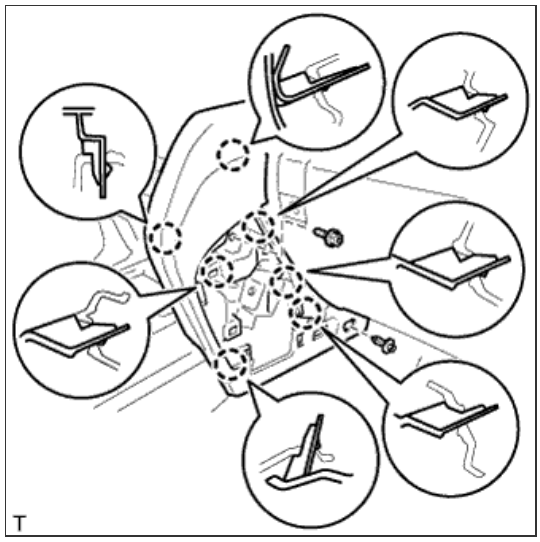

5. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Detach the 4 claws and remove the under cover.

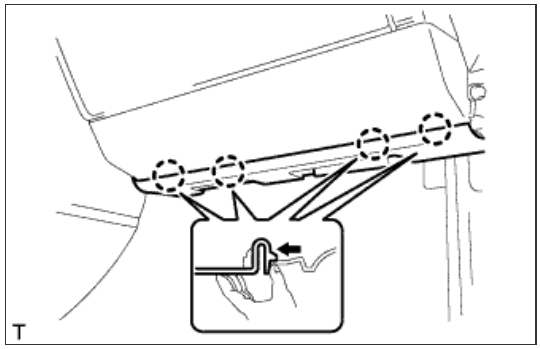

6. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)


a. Remove the 4 bolts.

b. Detach the 4 claws and remove the front passenger side knee airbag.

c. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

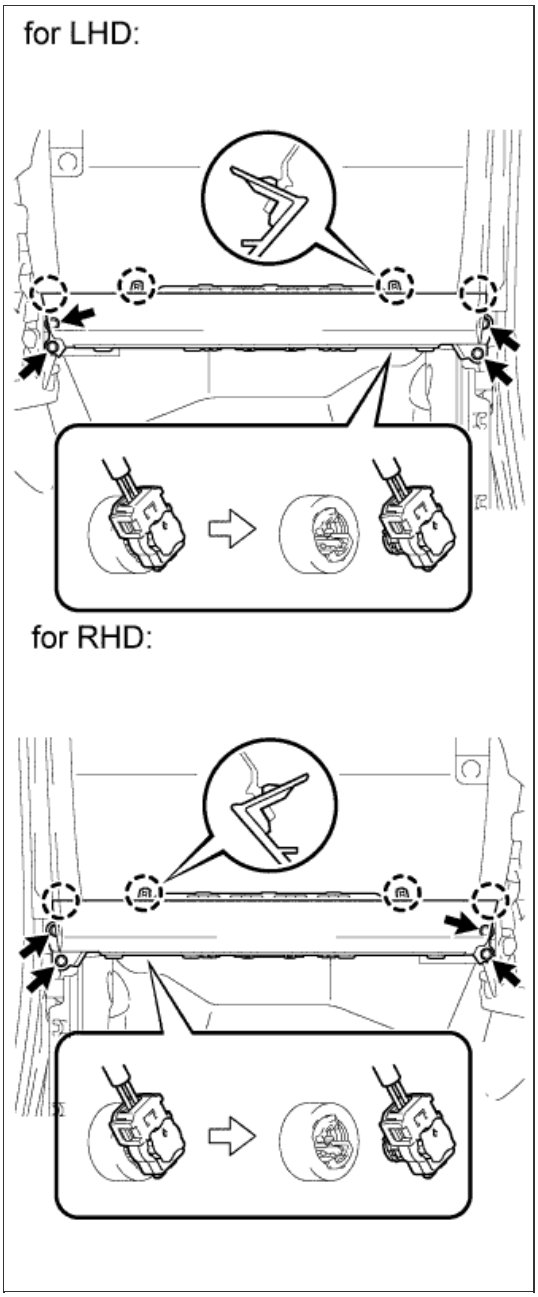

7. REMOVE LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Remove the 2 bolts.


b. Detach the 4 claws and remove the instrument panel.

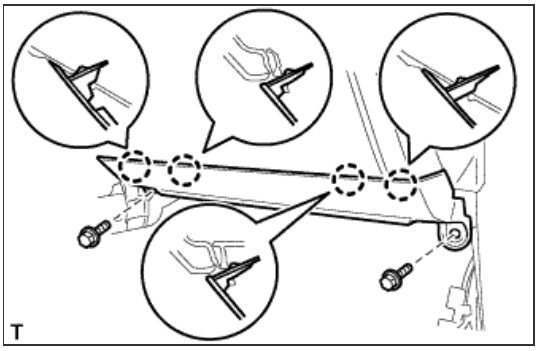

8. REMOVE NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the claws and remove the panel garnish.

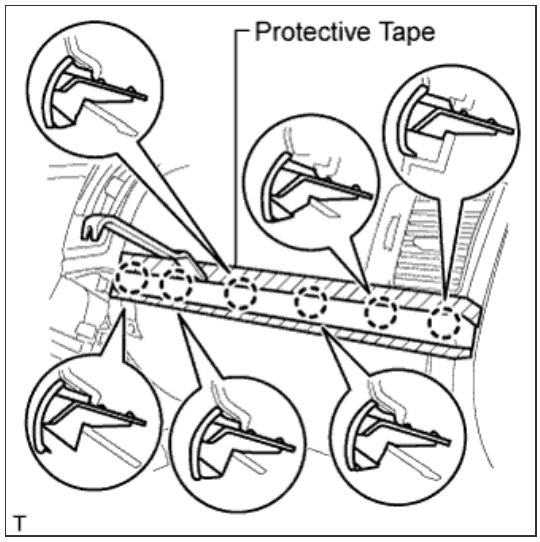


9. REMOVE LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Remove the 4 bolts.

b. Detach the 3 claws.


c. Remove the finish panel and then disconnect the connector.

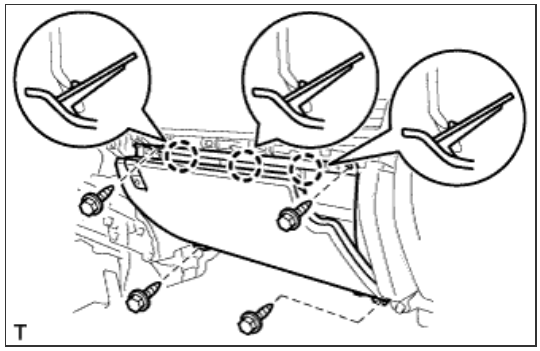

10. REMOVE AIR CONDITIONER AMPLIFIER ASSEMBLY

a. Disconnect the connector.

b. Remove the screw and amplifier.

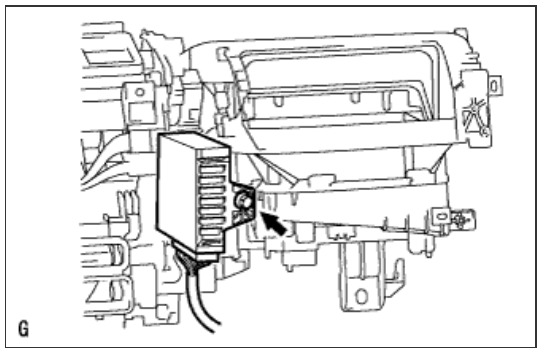

for Preparation Click here


HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. INSTALL AIR CONDITIONER AMPLIFIER ASSEMBLY

a. Install the amplifier with the screw.

b. Connect the connector.

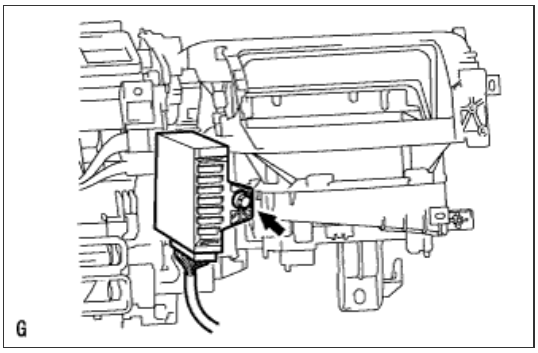


2. INSTALL LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Connect the connector.


b. Attach the 3 claws to install the finish panel.

c. Install the 4 bolts.

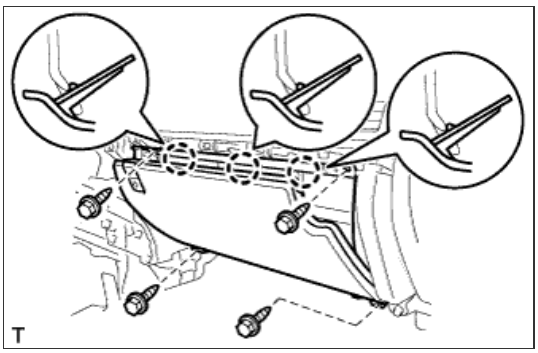

3. INSTALL NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 6 claws to install the panel garnish.

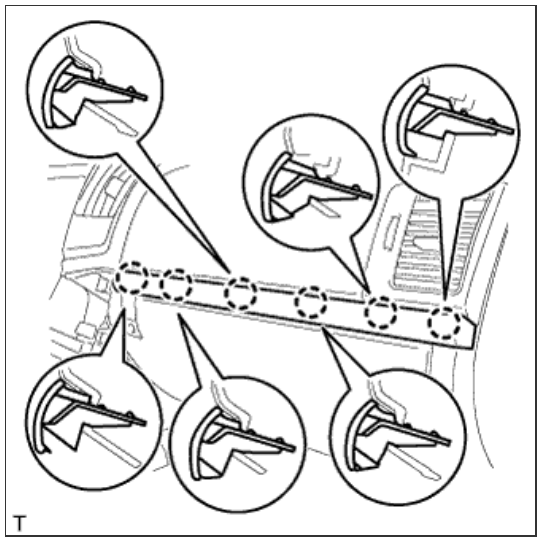

4. INSTALL FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)

a. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Attach the 4 claws to install the front passenger side knee airbag.

c. Install the 4 bolts.


Tor ue:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

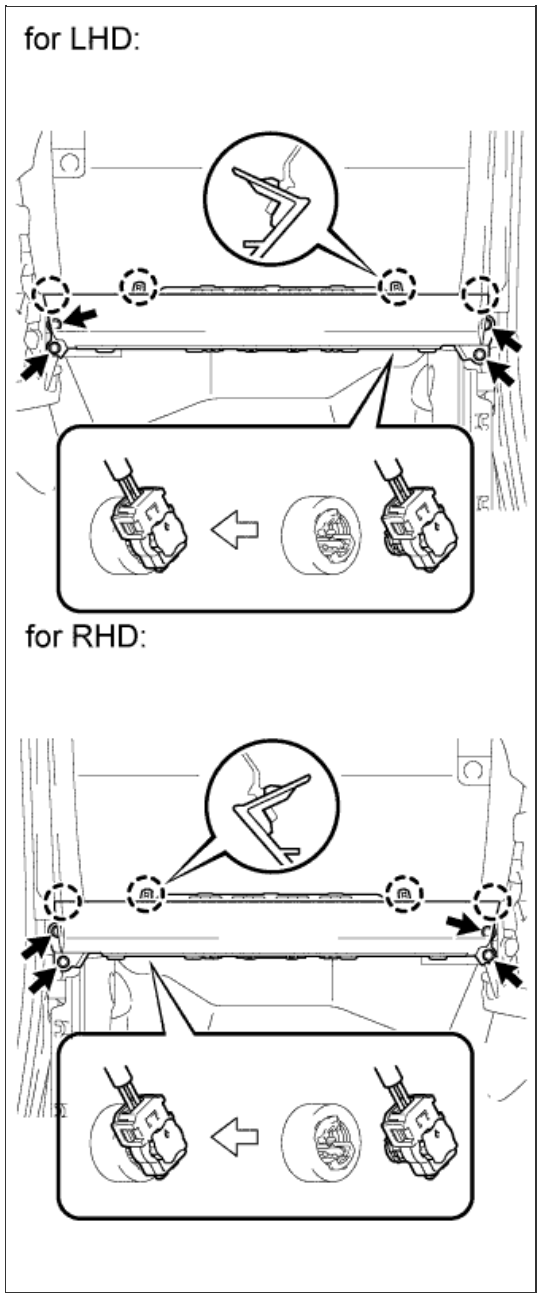

5. INSTALL LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)


a. Attach the 4 claws to install the instrument panel.

b. Install the 2 bolts.

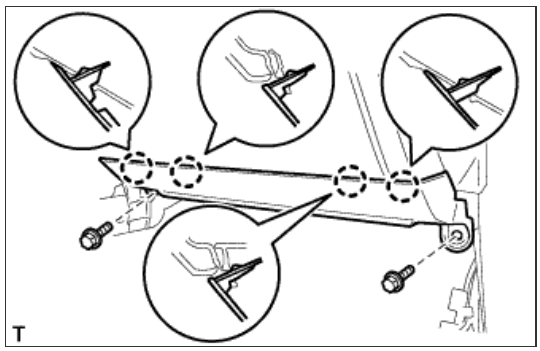

6. INSTALL NO. 2 INSTRUMENT PANEL UNDER CO ERSUB-ASSEMBLY (w/ Floor Under Cover)

a. Attach the 4 claws to install the under cover.

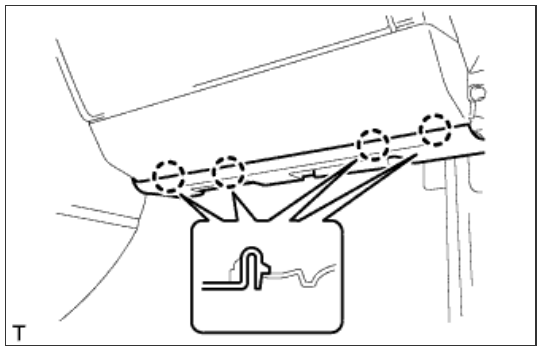


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

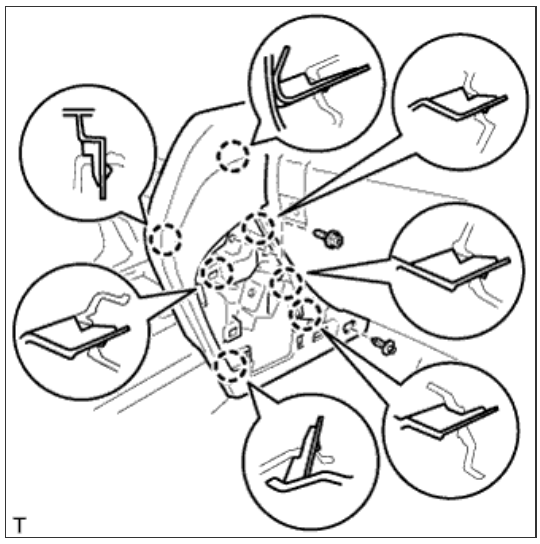

8. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

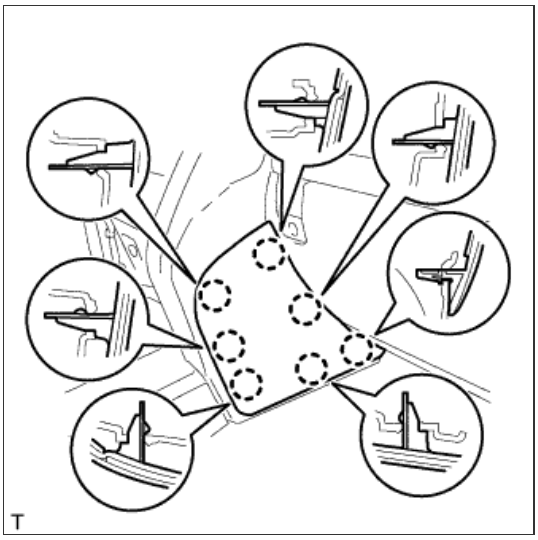

9. INSTALL FRONT DOOR SCUFF PLATE RH

a. w/ Sliding Roof:
Remove the front door scuff plate (Click here).

b. w/o Sliding Roof:
Remove the front door scuff plate (Click here).

10. CONNECT CABLE TO NEGATI E BATTERY TERMINAL (w/ Passenger Side Knee Airbag)

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

11. CHECK SRS WARNING LIGHT (w/ Passenger Side Knee Airbag)

a. Check the SRS warning light (Click here).

for Preparation Click here


HINT:

- **Use the same procedures for the LHD vehicle and RHD vehicle.**
- **The procedures listed below are for the LHD vehicle.**

1. INSTALL AIR CONDITIONER AMPLIFIER ASSEMBLY

a. Install the amplifier with the screw.

b. Connect the connector.

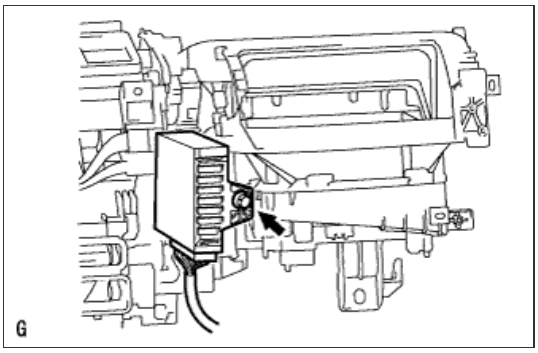


2. INSTALL LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Connect the connector.


b. Attach the 3 claws to install the finish panel.

c. Install the 4 bolts.

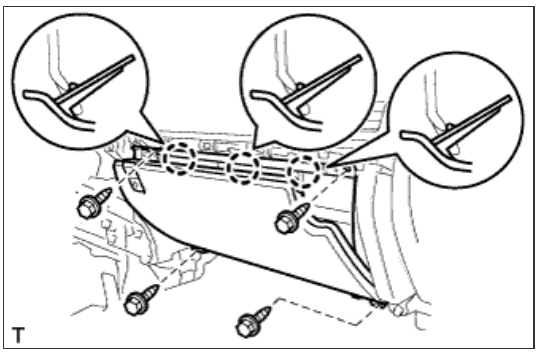

3. INSTALL NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 6 claws to install the panel garnish.

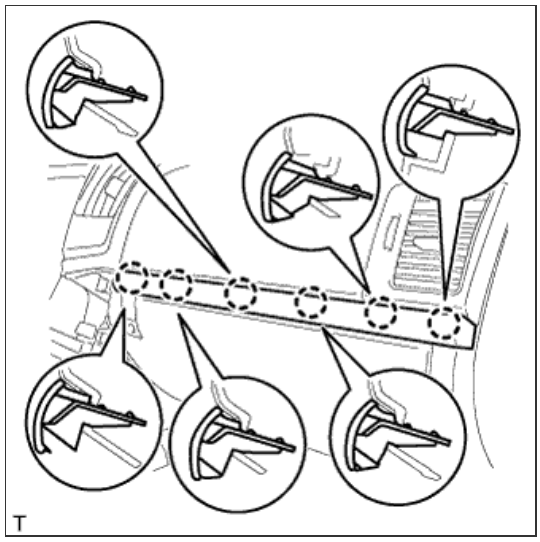

4. INSTALL FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)

a. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Attach the 4 claws to install the front passenger side knee airbag.

c. Install the 4 bolts.


Tor ue:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

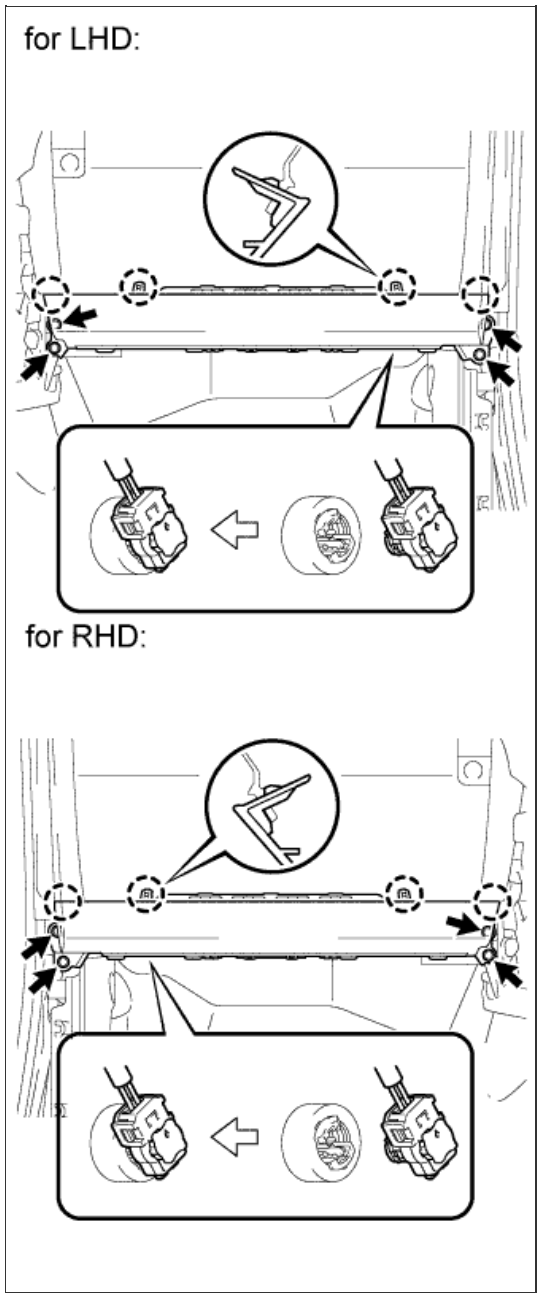

5. INSTALL LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)


a. Attach the 4 claws to install the instrument panel.

b. Install the 2 bolts.

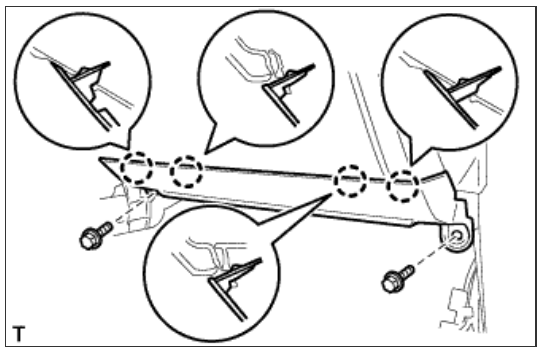

6. INSTALL NO. 2 INSTRUMENT PANEL UNDER CO ERSUB-ASSEMBLY (w/ Floor Under Cover)

a. Attach the 4 claws to install the under cover.

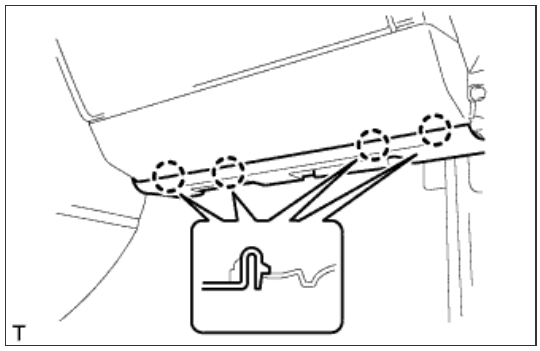


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

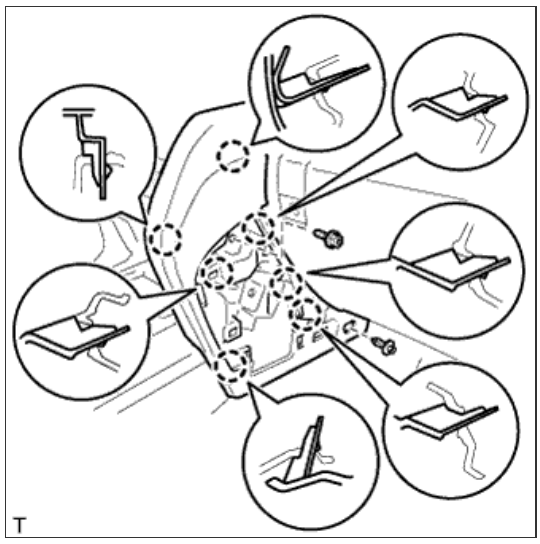

8. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

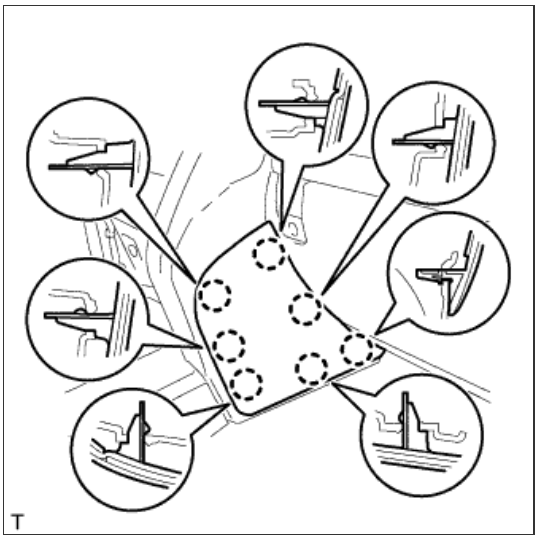

9. INSTALL FRONT DOOR SCUFF PLATE RH

a. w/ Sliding Roof:
Remove the front door scuff plate (Click here).

b. w/o Sliding Roof:
Remove the front door scuff plate (Click here).

10. CONNECT CABLE TO NEGATI E BATTERY TERMINAL (w/ Passenger Side Knee Airbag)

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

11. CHECK SRS WARNING LIGHT (w/ Passenger Side Knee Airbag)

a. Check the SRS warning light (Click here).

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE VISCOUS HEATER RELAY

a. Remove the viscous heater relay from the engine room relay block.

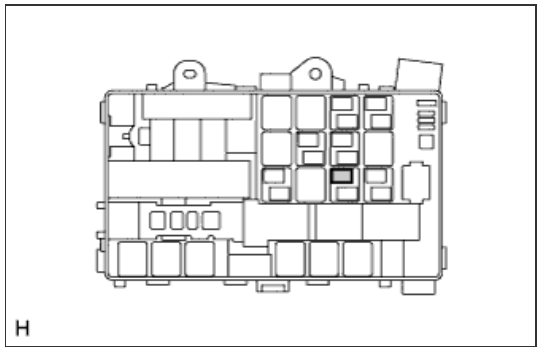


3. INSPECT VISCOUS HEATER RELAY

a. Measure the resistance of the viscous heater relay.

Standard Resistance:


Tester Connection	Condition	Specified Condition
3 - 5	Battery voltage not applied between terminals 1 and 2	10 kΩ or higher
	Battery voltage applied to terminal 1 and 2	Below 1 Ω

If the result is not as specified, replace the relay.

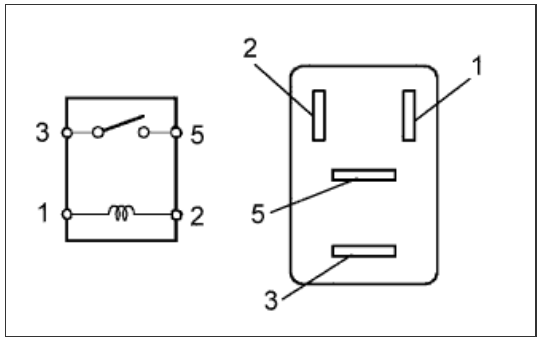

4. INSTALL VISCOUS HEATER RELAY

a. Install the viscous heater relay to the engine room relay block.

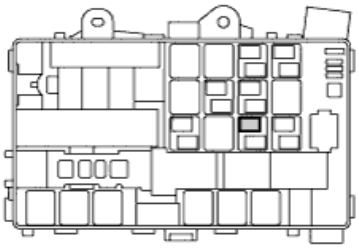

H

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE MAGNET CLUTCH RELAY

a. Remove the magnet clutch relay from the engine room relay block.

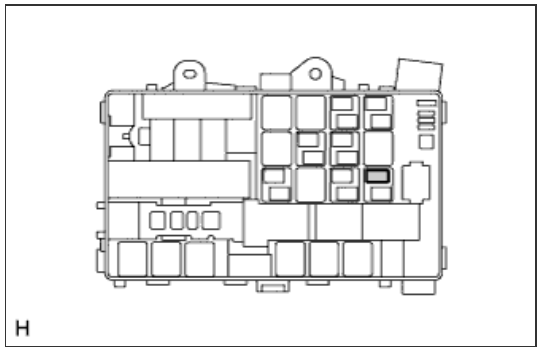


3. INSPECT MAGNET CLUTCH RELAY

a. Measure the resistance of the magnet clutch relay.

Standard Resistance:


Tester Connection	Condition	Specified Condition
3 - 5	Battery voltage not applied between terminals 1 and 2	10 kΩ or higher
	Battery voltage applied to terminal 1 and 2	Below 1 Ω

If the result is not as specified, replace the relay.

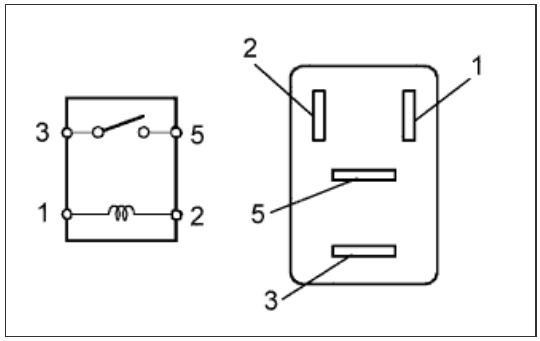

4. INSTALL MAGNET CLUTCH RELAY

a. Install the magnet clutch relay to the engine room relay block.

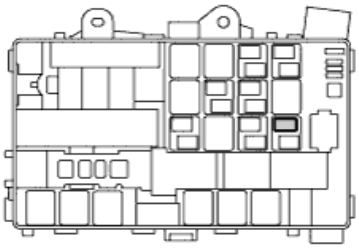

H

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR COOLER RELAY

a. Remove the rear cooler relay from the engine room relay block.

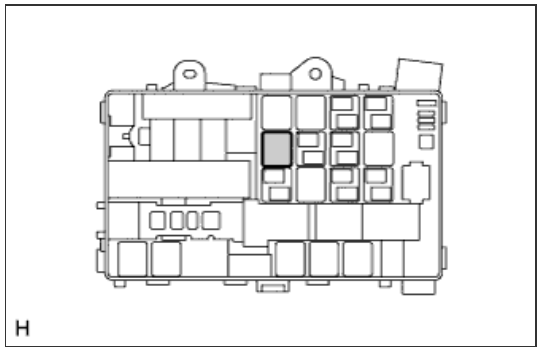


3. INSPECT REAR COOLER RELAY

a. Measure the resistance of the relay.


Standard Resistance:

Tester Connection	Specified Condition
3 - 4	Below 1 Ω
3 - 5	10 kΩ or higher
3 - 4	10 kΩ or higher (Battery voltage is applied to terminals 1 and 2)
3 - 5	Below 1 Ω (Battery voltage is applied to terminals 1 and 2)

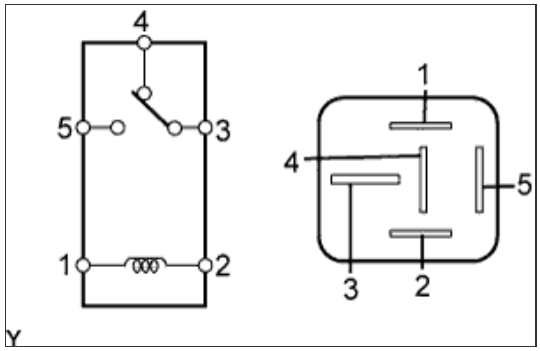

4. INSTALL REAR COOLER RELAY

a. Install the rear cooler relay to the engine room relay block.

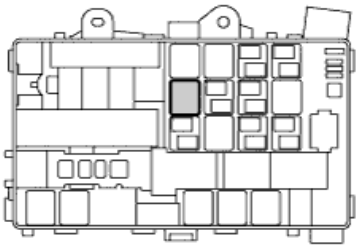

H

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE PTC HEATER RELAY (PTC HTR 1, PTC HTR 2, PTC HTR 3)

a. Remove the 3 PTC heater relays from the engine room relay block.

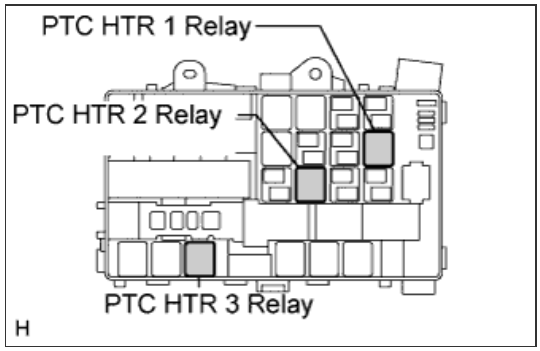


3. INSPECT PTC HEATER RELAY (PTC HTR 1, PTC HTR 2, PTC HTR 3)

a. Measure the resistance of the relay.

Standard Resistance:


Tester Connection	Condition	Specified Condition
3 - 5	Battery voltage not applied between terminals 1 and 2	10 kΩ or higher
	Battery voltage applied to terminal 1 and 2	Below 1 Ω

If the result is not as specified, replace the relay.

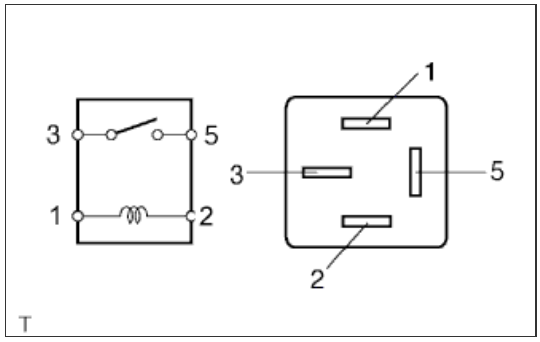

4. INSTALL PTC HEATER RELAY (PTC HTR 1, PTC HTR 2, PTC HTR 3)

a. Install the 3 PTC heater relays to the engine room relay block.

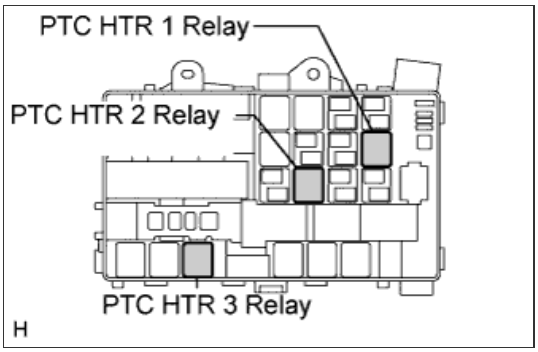

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

for Preparation Click here

1.PRECAUTIONS FOR REPLACEMENT

NOTICE:

When replacing electronic parts, if there is a possibility that your body may contact a circuit board, etc., observe all precautions to prevent damage to the system by electrostatic discharge (ESD).

a. Procedures where static electricity countermeasures are necessary:

   i. Integration board sub-assembly replacement.

   ii. Internal wiring connection/disconnection, inspection and replacement.

b. General precautions:


   i. Before performing any procedures, touch an unpainted metal part or ground bolt of the vehicle to discharge any static electricity.


   ii. To prevent damage to electrical equipment, disconnect the battery power supply before removing or installing electrical equipment.

   iii. Never touch the electronic parts of a circuit board or the pins of an integrated circuit.

   iv. When performing procedures, do not allow clothing to come near or contact parts.

for Preparation Click here

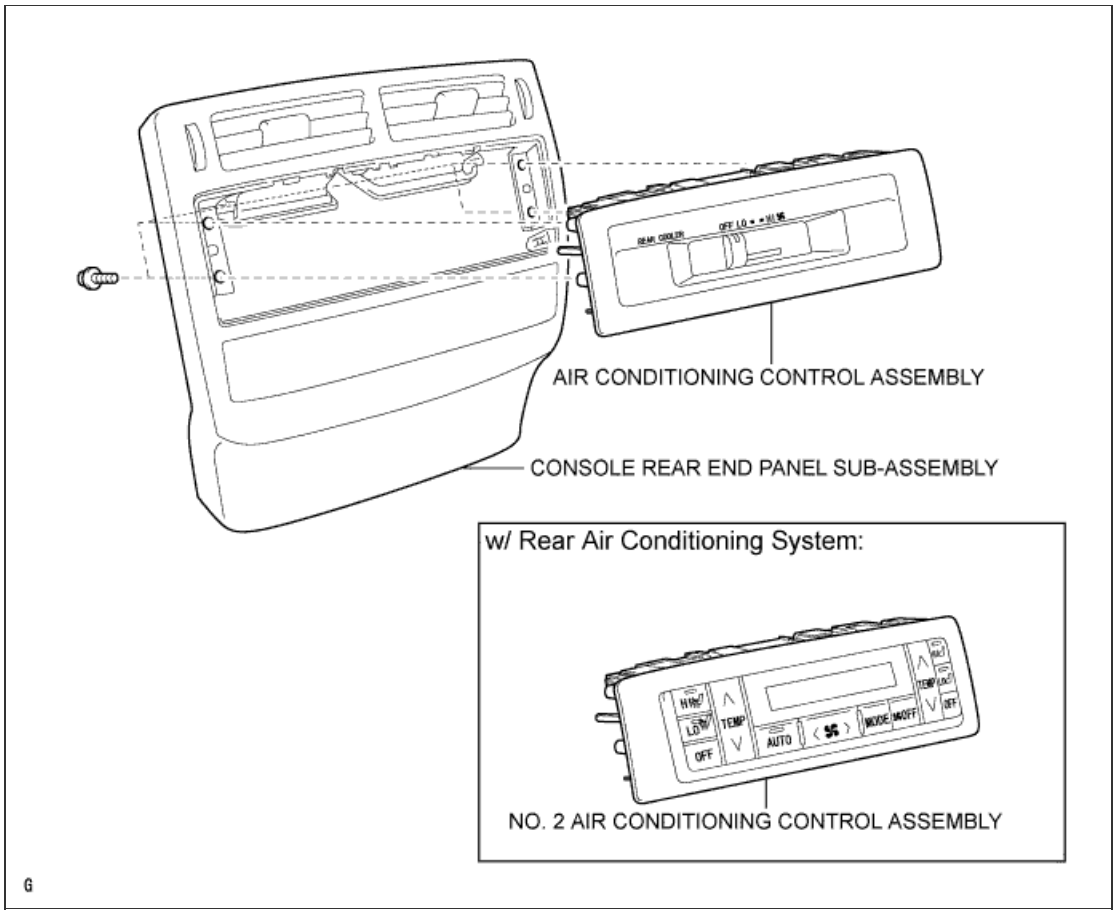

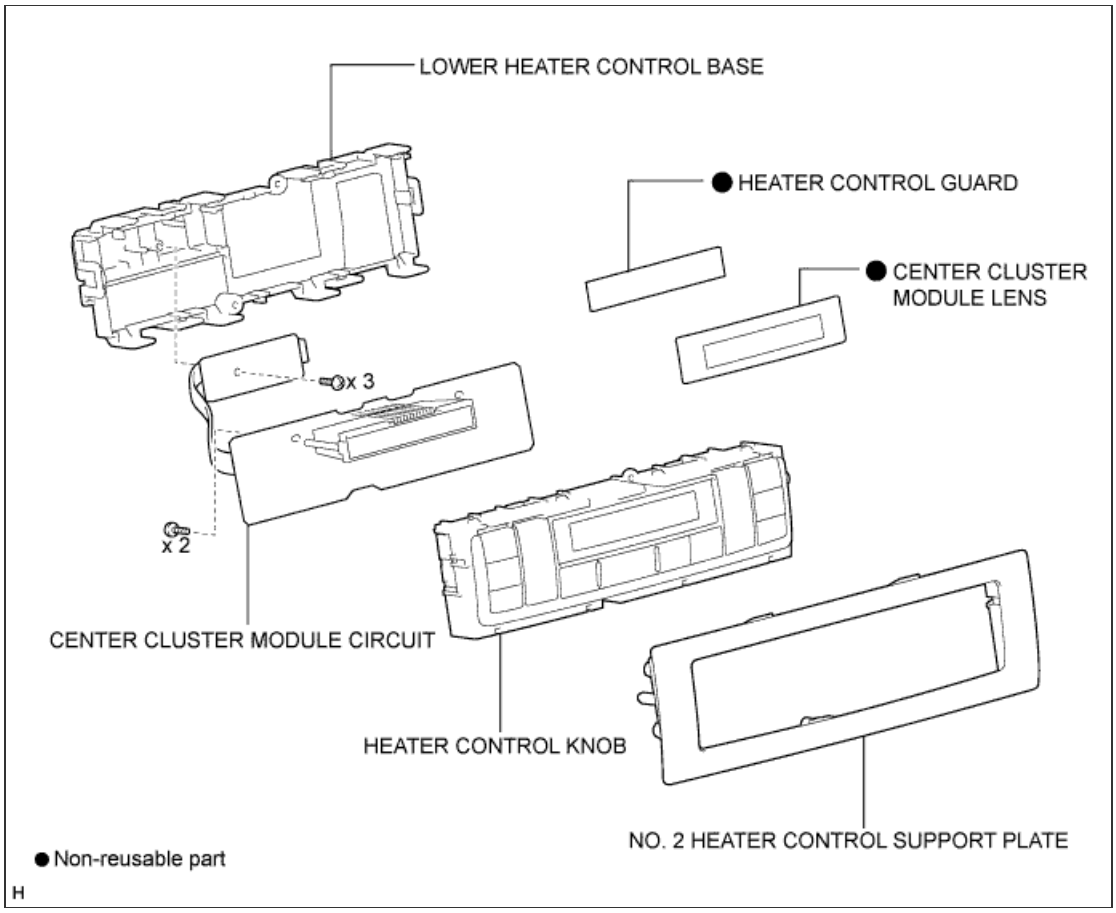
LOWER HEATER CONTROL BASE
● HEATER CONTROL GUARD
● CENTER CLUSTER MODULE LENS
x 3
x 2
CENTER CLUSTER MODULE CIRCUIT
HEATER CONTROL KNOB
NO. 2 HEATER CONTROL SUPPORT PLATE
● Non-reusable part
H

for Preparation Click here

1. REMOVE CONSOLE REAR END PANEL SUB-ASSEMBLY


a. w/o Cool Box:
Remove the console rear end panel (Click here).

b. w/o Cool Box:
Remove the console rear end panel (Click here).

2. REMOVE NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (w/ Rear Air Conditioning System)

a. Remove the 4 screws.


b. Detach the 5 claws and remove the air conditioning control.

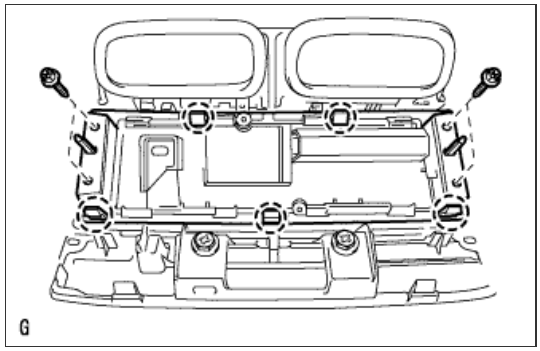

3. REMOVE AIR CONDITIONING CONTROL ASSEMBLY (w/o Rear Air Conditioning System)

a. Remove the 4 screws.

b. Detach the 5 claws and remove the air conditioning control.

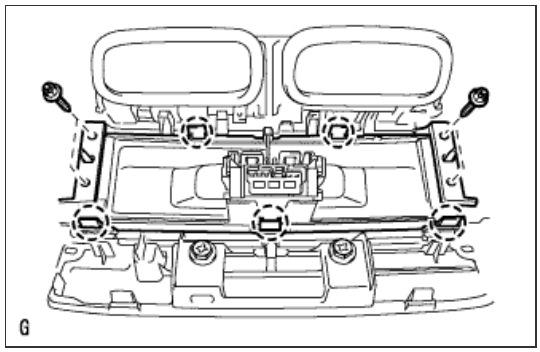


for Preparation Click here

1. REMOVE LOWER HEATER CONTROL BASE


NOTICE:

As the electronic parts of the circuit board may be damaged by static electricity, do not touch the electronic parts of the circuit board or the soldered areas with bare hands.

a. Detach the 6 claws.

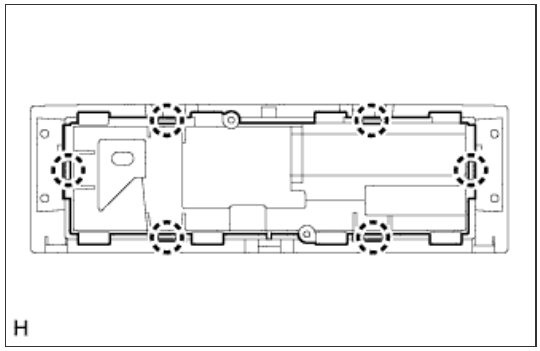

b. Remove the 3 screws and lower heater control base.

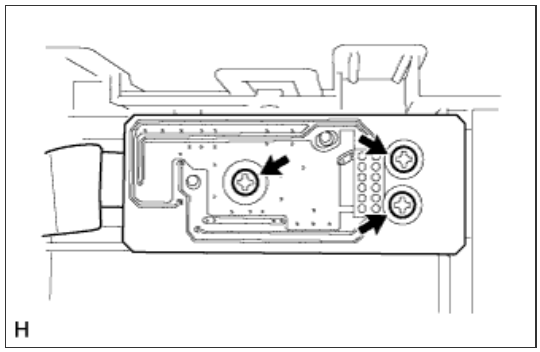


2. REMOVE CENTER CLUSTER MODULE CIRCUIT

NOTICE:

As the electronic parts of the circuit board may be damaged by static electricity, do not touch the electronic parts of the circuit board or the soldered areas with bare hands.

a. Remove the 2 screws and center cluster module circuit.

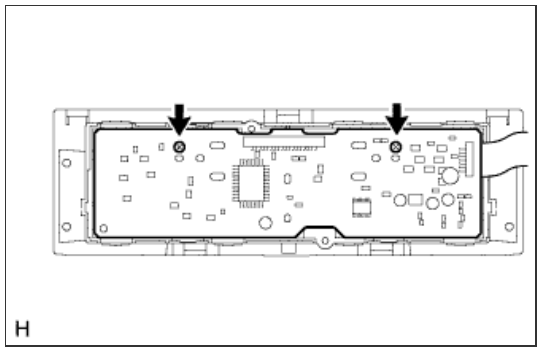


3. REMOVE HEATER CONTROL GUARD

a. Remove the heater control guard.


Text in Illustration

*1	Heater Control Guard

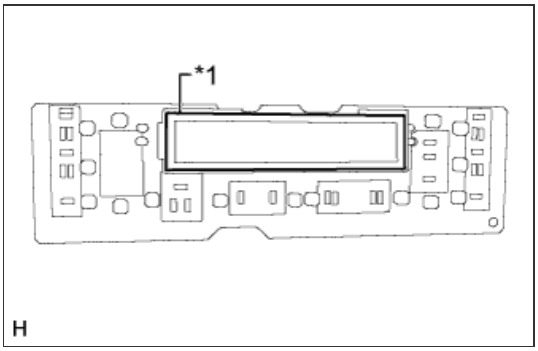

4. REMOVE HEATER CONTROL KNOB

a. Detach the 8 claws and remove the heater control knob.

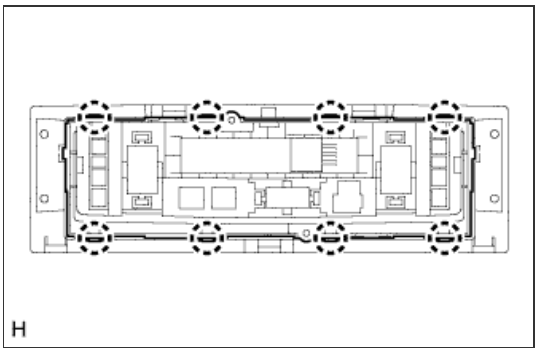


5. REMOVE CENTER CLUSTER MODULE LENS

a. Remove the double-sided tape and center cluster module lens.

Text in Illustration

*1	Double-sided Tape

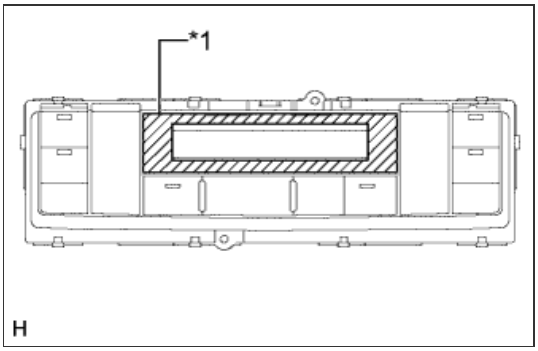

for Preparation Click here

1. INSTALL CENTER CLUSTER MODULE LENS

a. Remove the double-sided tape from the control knob sub-assembly.

Text in Illustration

*1	Double-sided Tape

b. Wipe off any tape adhesive residue with cleaner.

c. Remove the peeling paper from a new center cluster module lens.


HINT:

After removing the peeling paper, keep the exposed adhesive free from foreign matter.

d. Install the center cluster module lens.


NOTICE:

Do not reuse the center cluster module lens after removing it.

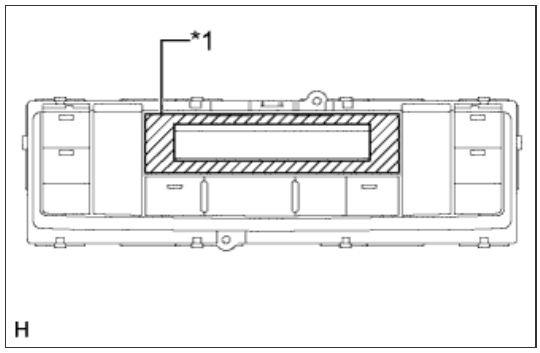

2. INSTALL HEATER CONTROL KNOB

a. Attach the 8 claws to install the heater control knob.

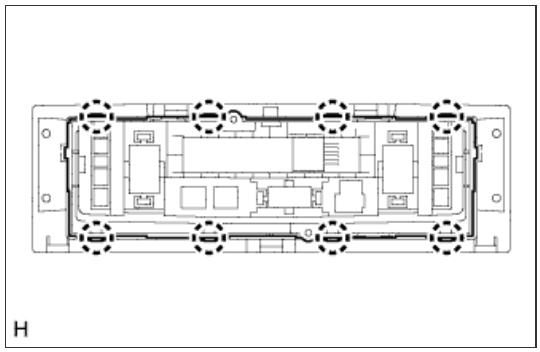


3. INSTALL HEATER CONTROL GUARD

a. Install a new heater control guard.

Text in Illustration

*1	Heater Control Guard

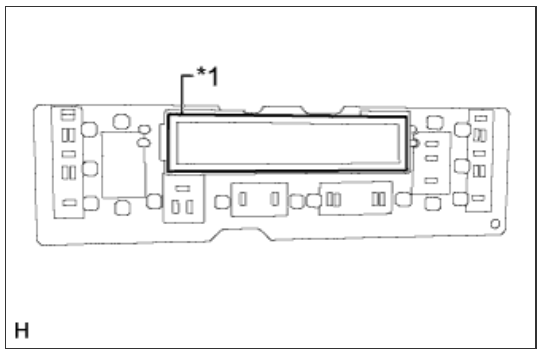


4. INSTALL CENTER CLUSTER MODULE CIRCUIT

NOTICE:

As the electronic parts of the circuit board may be damaged by static electricity, do not touch the electronic parts of the circuit board or the soldered areas with bare hands.

a. Install the center cluster module circuit with the 2 screws.

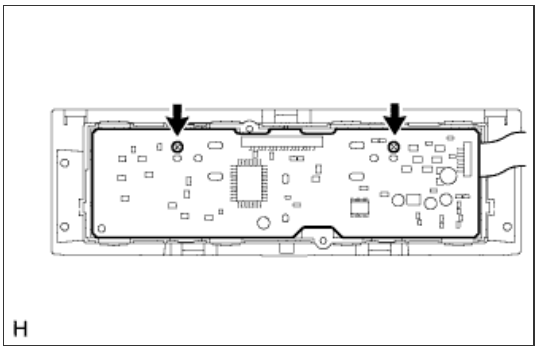


5. INSTALL LOWER HEATER CONTROL BASE


NOTICE:

As the electronic parts of the circuit board may be damaged by static electricity, do not touch the electronic parts of the circuit board or the soldered areas with bare hands.

a. Install the 3 screws.

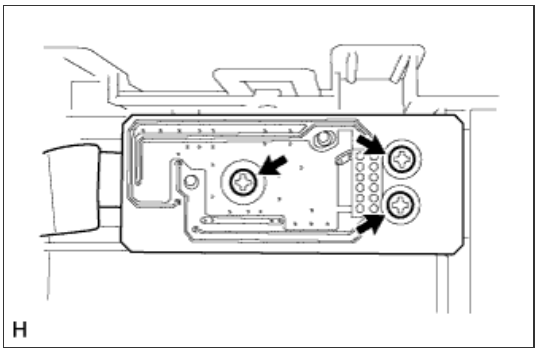

b. Attach the 6 claws to install the lower heater control base.

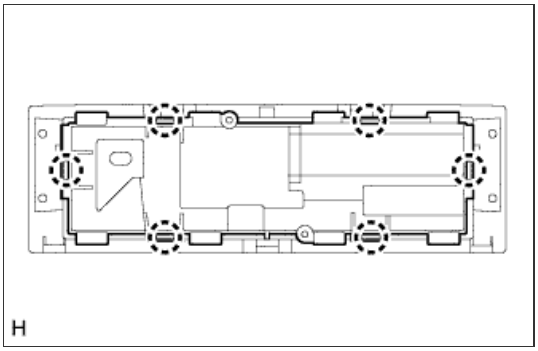


for Preparation Click here

1. INSTALL NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (w/ Rear Air Conditioning System)

a. Attach the 5 claws to install the air conditioning control.


b. Install the 4 screws.

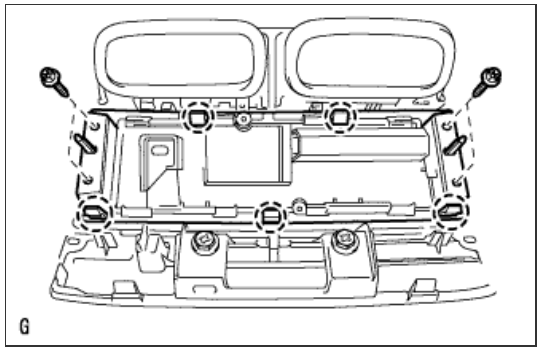

2. INSTALL AIR CONDITIONING CONTROL ASSEMBLY (w/o Rear Air Conditioning System)

a. Attach the 5 claws to install the air conditioning control.

b. Install the 4 screws.

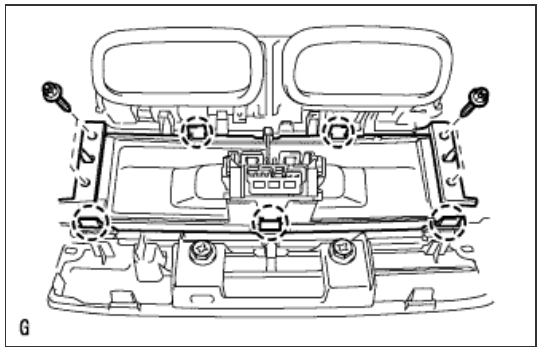


3. INSTALL CONSOLE REAR END PANEL SUB-ASSEMBLY

a. w/o Cool Box:
Install the console rear end panel (Click here).

b. w/o Cool Box:
Install the console rear end panel (Click here).

for Preparation Click here

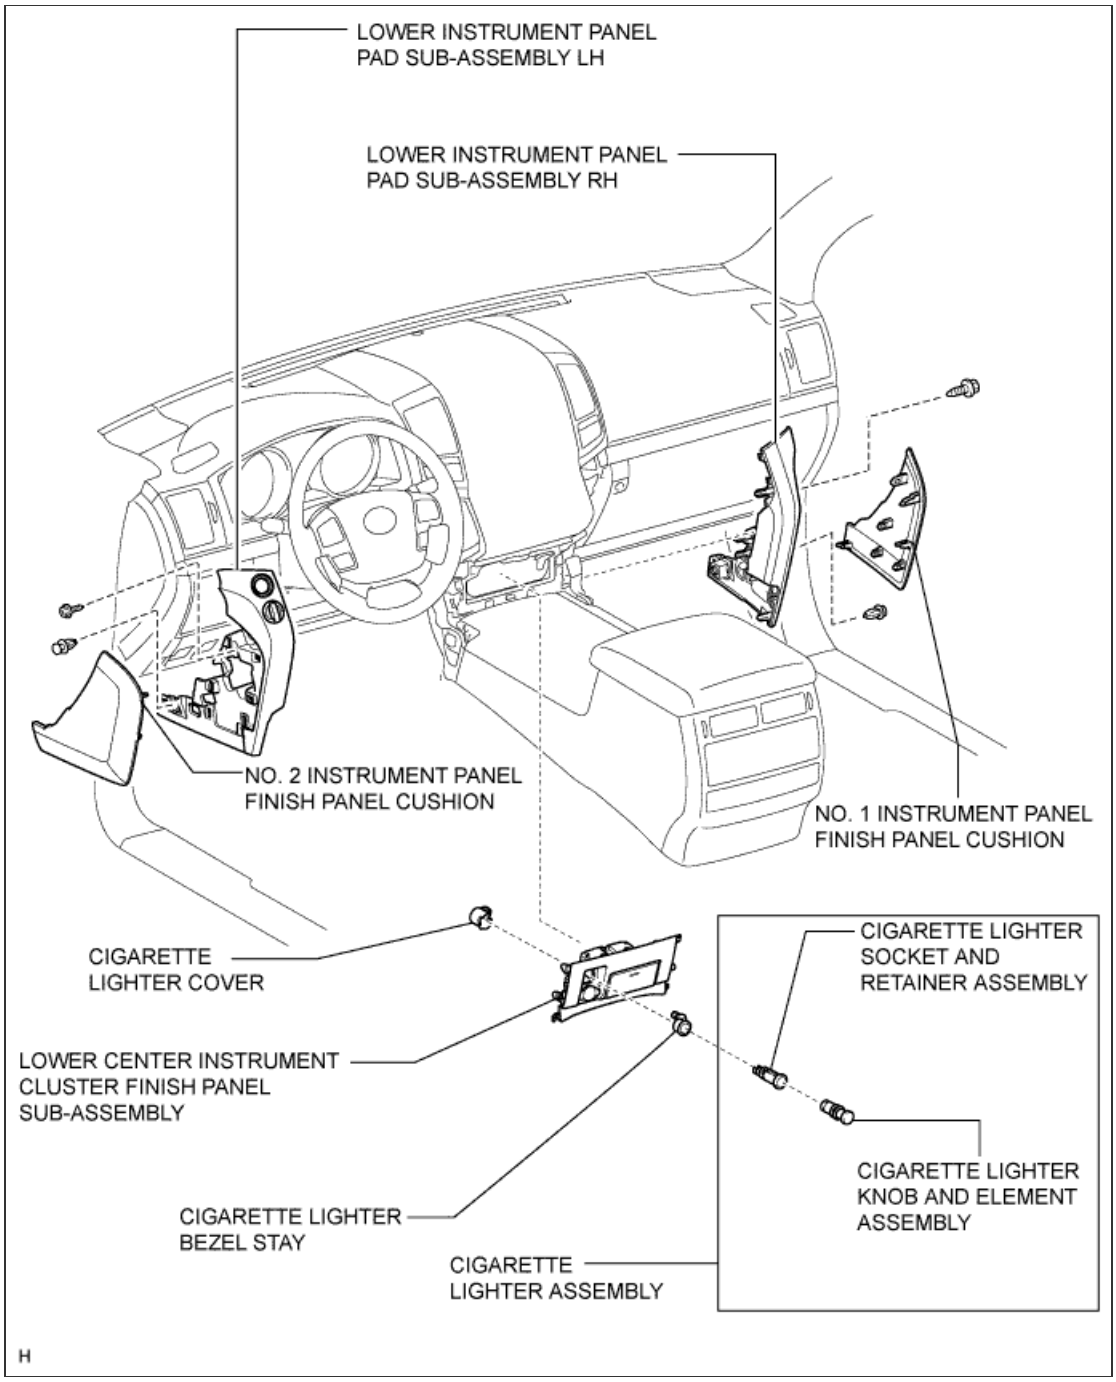

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

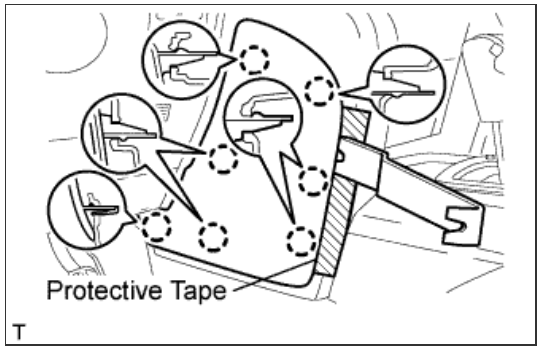


2. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

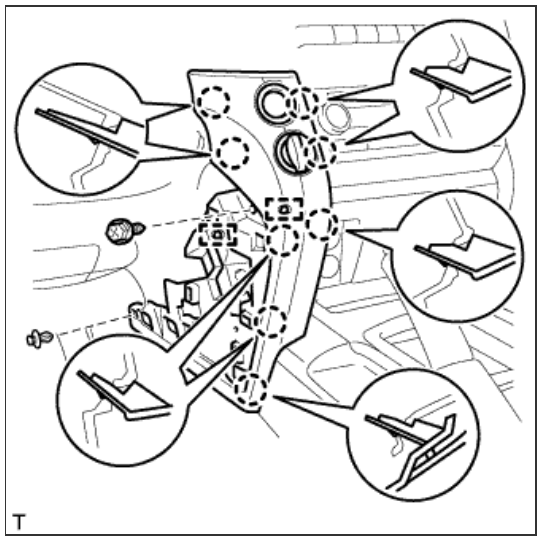

3. REMOVE NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.

b. Remove the screw.


c. Detach the 7 claws and remove the panel.

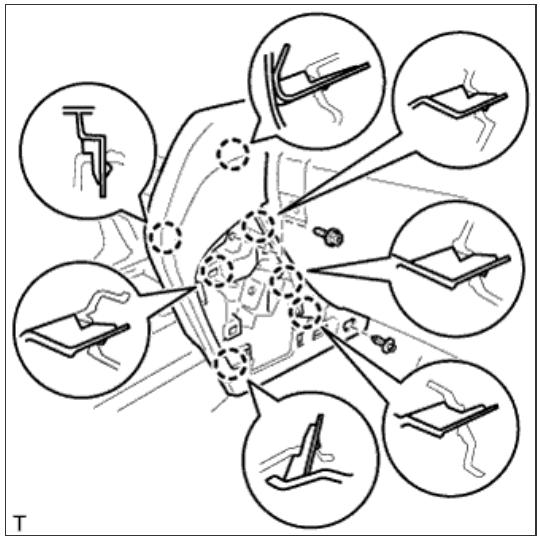

5. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 7 claws.

b. Disconnect the connectors and remove the panel.

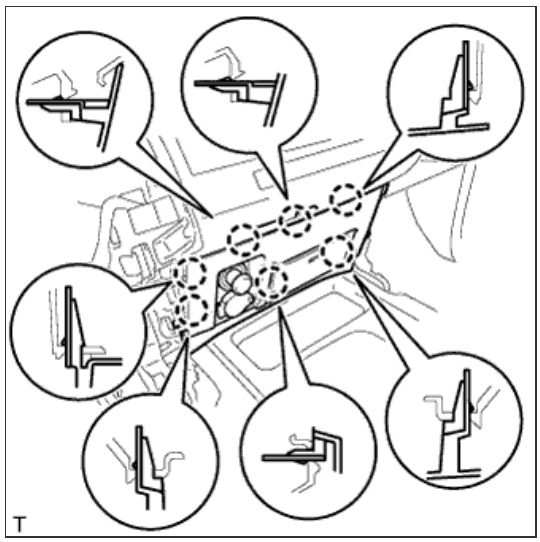

6. REMOVE CIGARETTE LIGHTER COVER

&




5& ++ . 0

&


' &

!

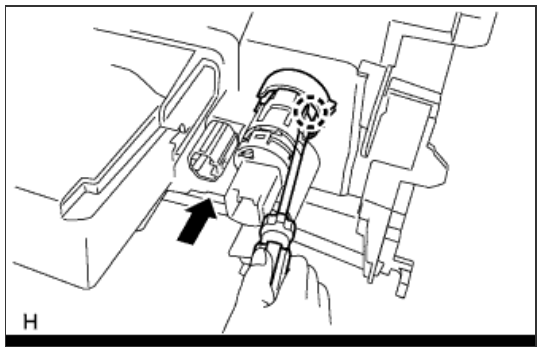

6 & . 7 + 0

& "

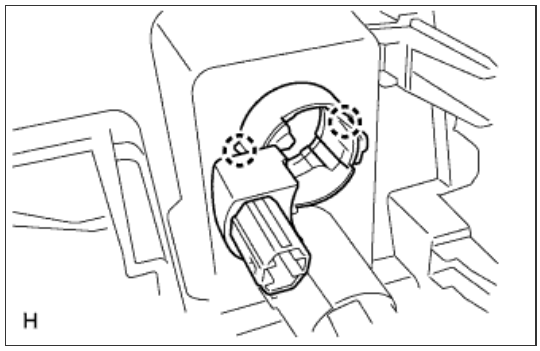


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. INSTALL CIGARETTE LIGHTER BEZEL STAY


a. Attach the 2 claws to install the ezel stay.



2. INSTALL CIGARETTE LIGHTER ASSEMBLY

a. Attach the claw to install the cigarette lighter socket and retainer assembly.

b. Install the cigarette lighter knob and element assembly.



3. INSTALL CIGARETTE LIGHTER COVER


a. Attach the 2 claws to install the cover.



4. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

a. Connect the connectors.

b. Attach the 7 claws to install the panel.

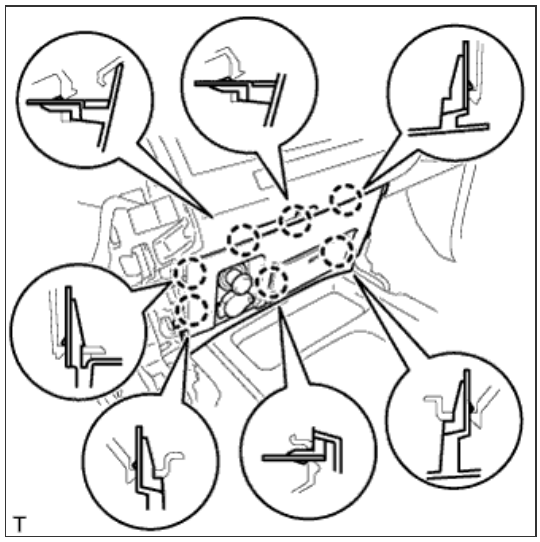


5. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

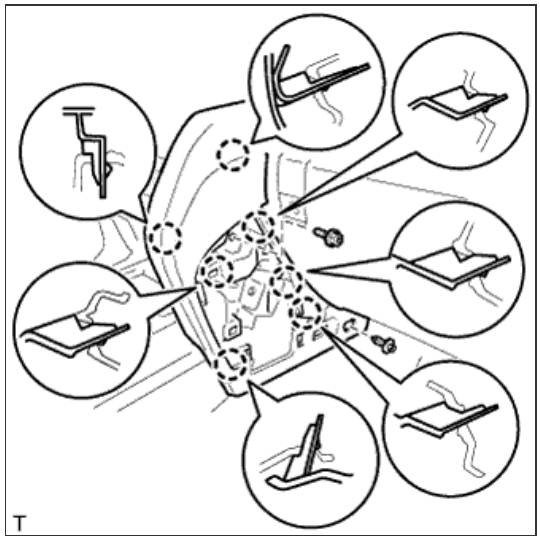

6. INSTALL NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

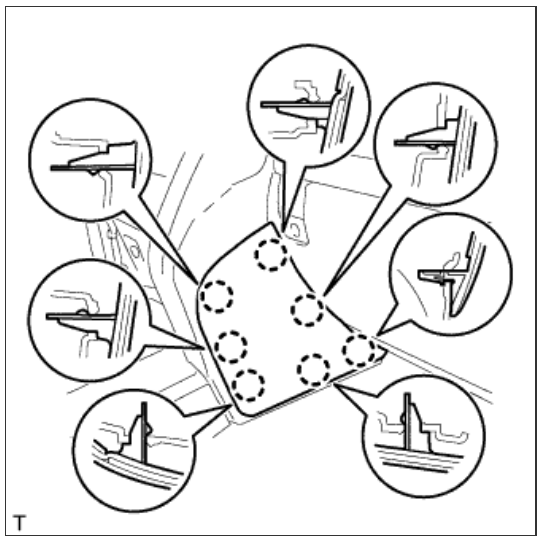


7. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

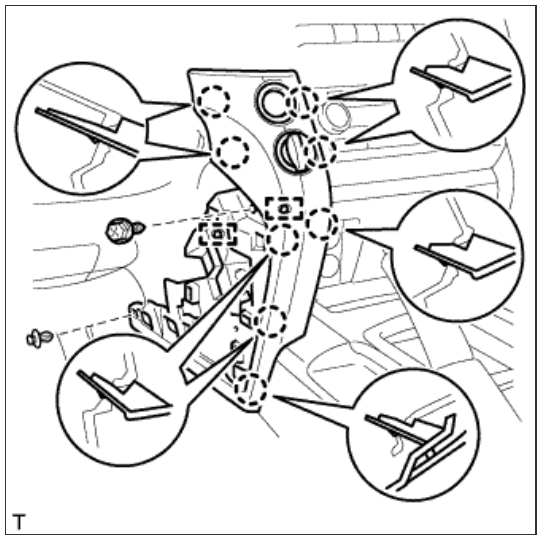


8. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

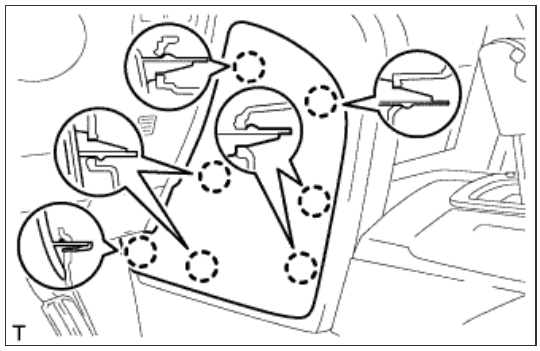

for Preparation Click here

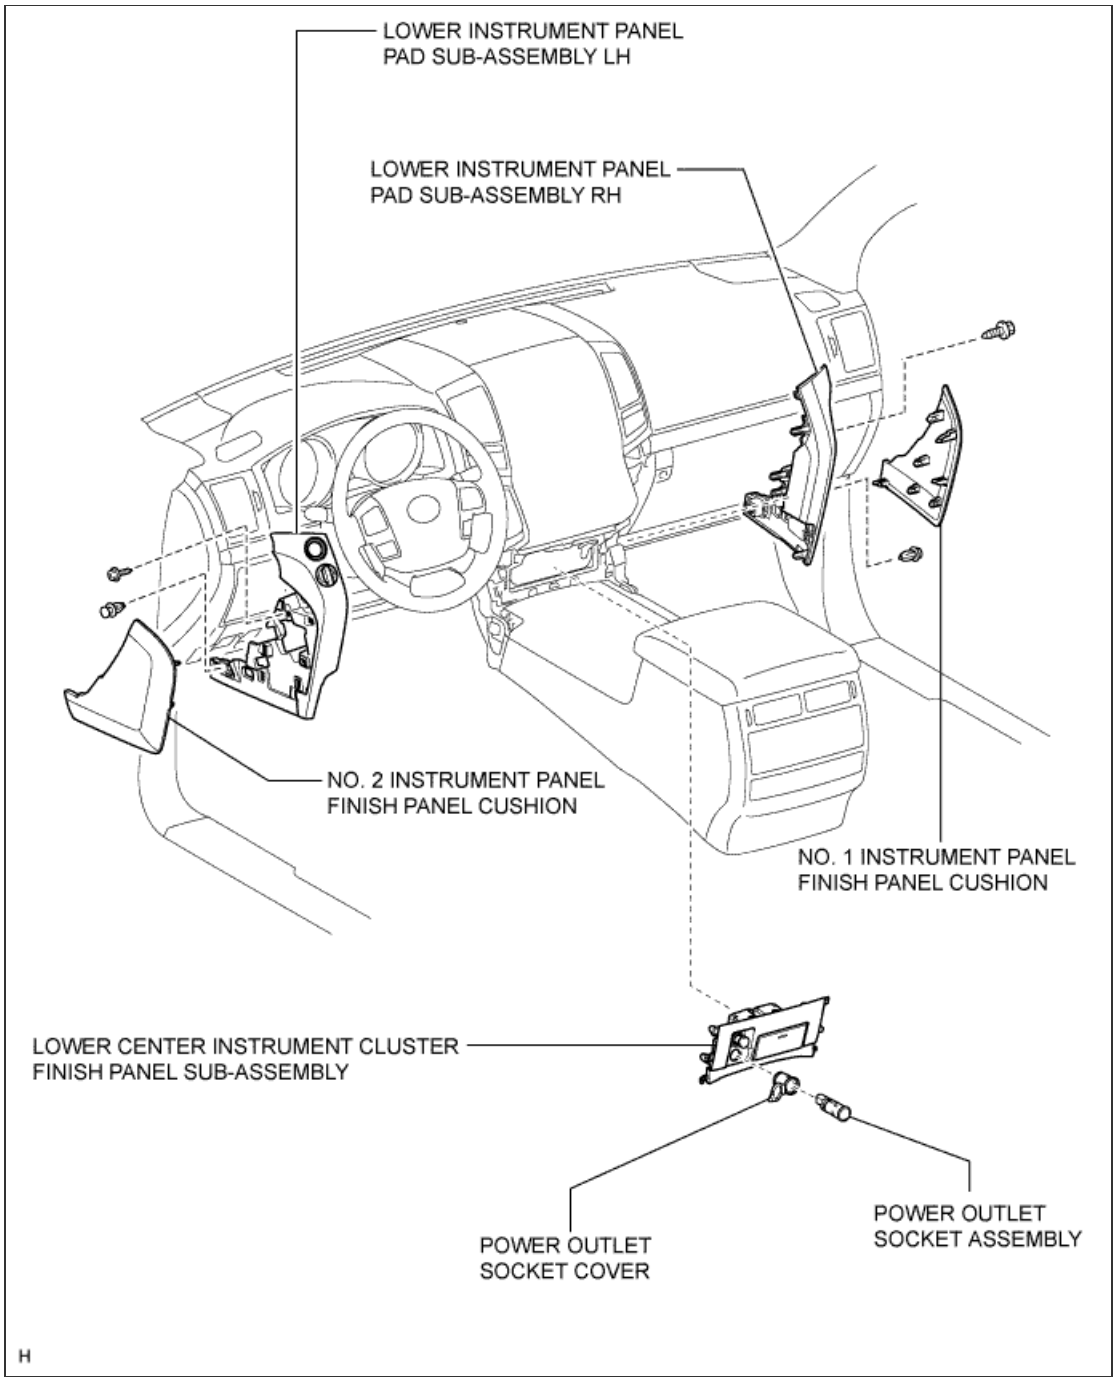

for Preparation Click here


HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**

1. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

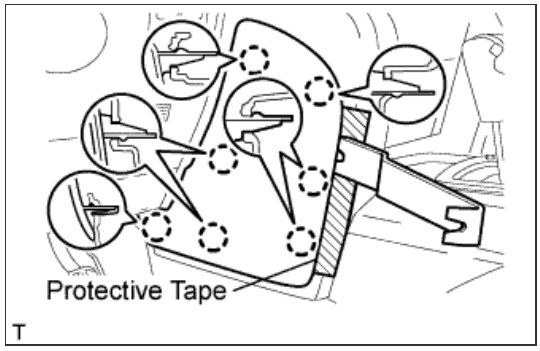


2. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

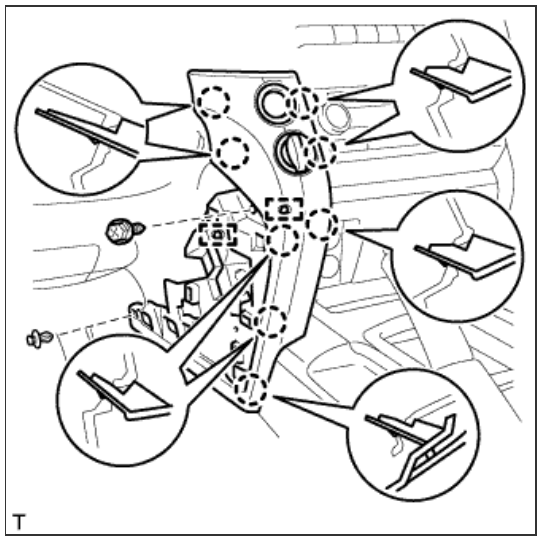

3. REMOVE NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.

b. Remove the screw.


c. Detach the 7 claws and remove the panel.

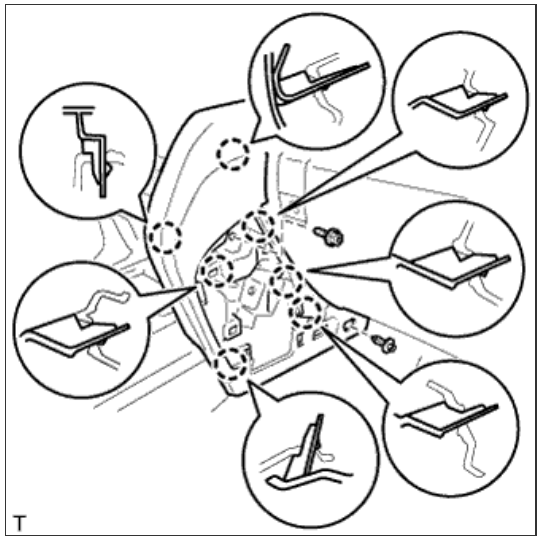

5. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 7 claws.

b. Disconnect the connectors and remove the panel.

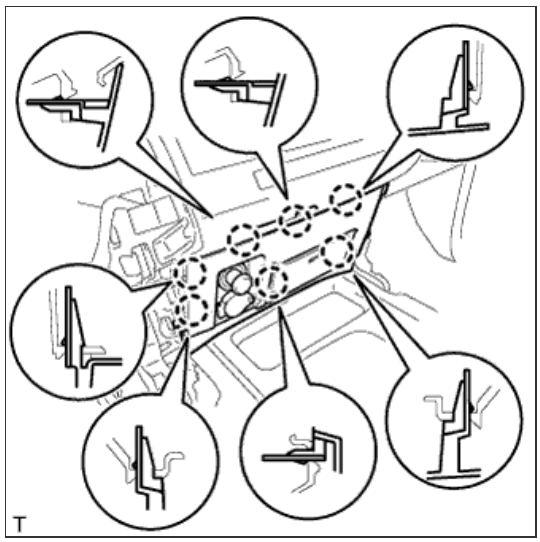


6. REMOVE POWER OUTLET SOCKET ASSEMBLY

a. Rotate the socket to disengage the notch.

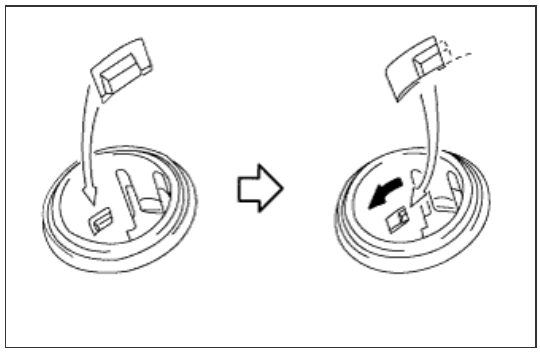


b. Pull out the socket halfway and rotate the socket until its protrusion is aligned with the groove of the cover. Then remove the power outlet socket.

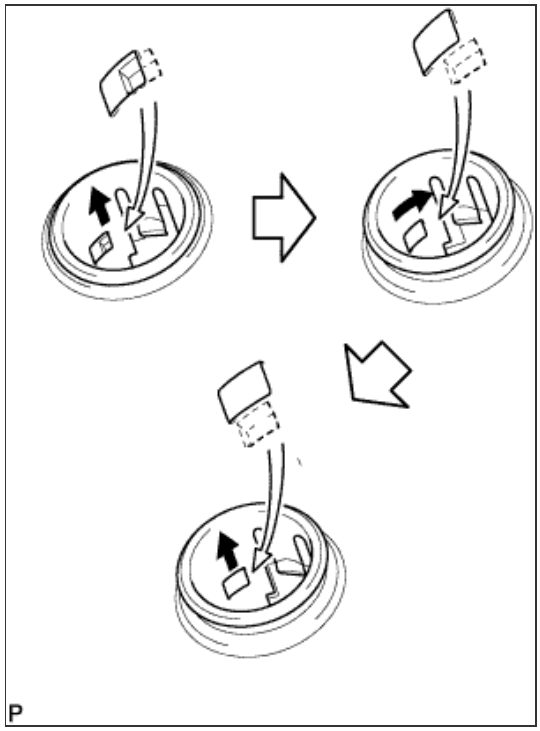

7. REMOVE POWER OUTLET SOCKET COVER

a. Detach the 2 claws and remove the cover.

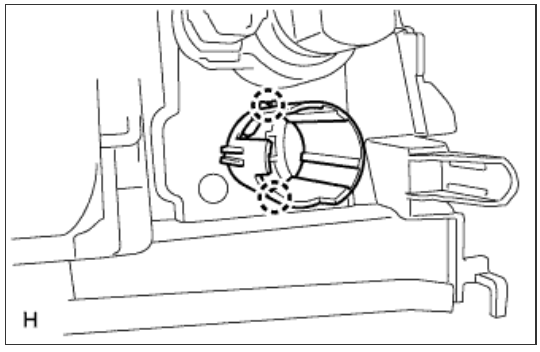


for Preparation Click here

HINT:

- **Use the same procedures for LHD and RHD vehicles.**
- **The procedures listed below are for LHD vehicles.**


1. INSTALL POWER OUTLET SOCKET COVER

a. Attach the 2 claws to install the socket cover.

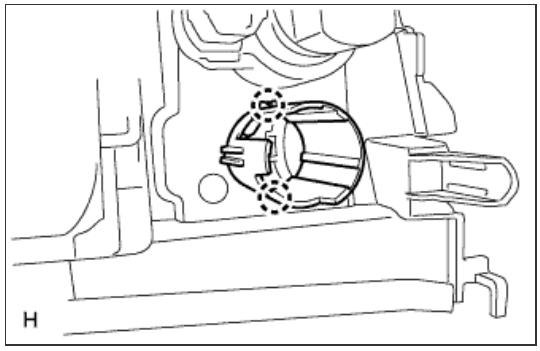

2. INSTALL POWER OUTLET SOCKET ASSEMBLY


a. Align the protrusion on the backside of the socket with the groove of the cover. Then push the socket into the cover.

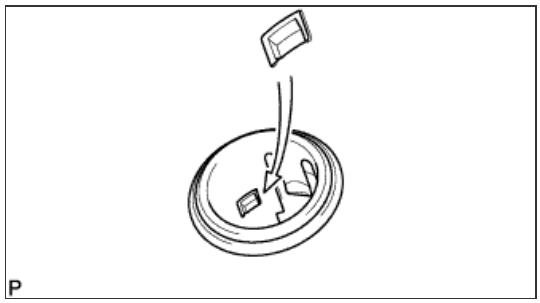

3. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

a. Connect the connectors.

b. Attach the 7 claws to install the panel.

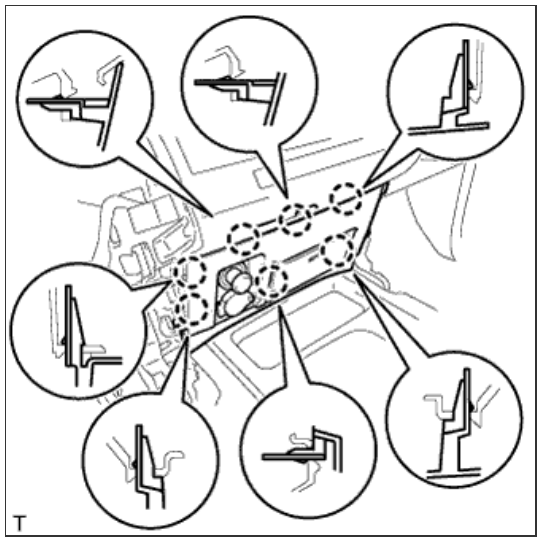


4. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

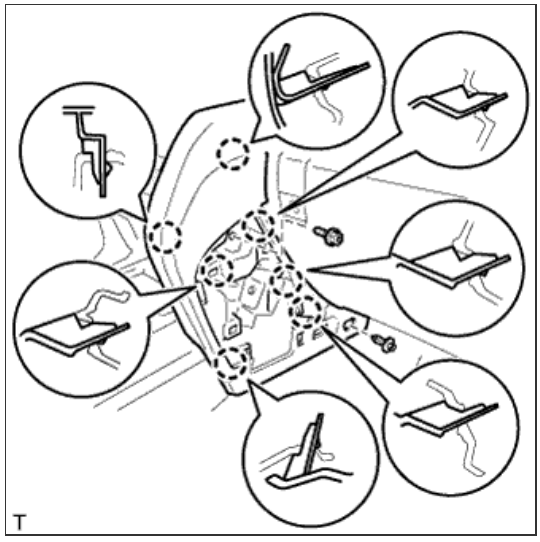

5. INSTALL NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

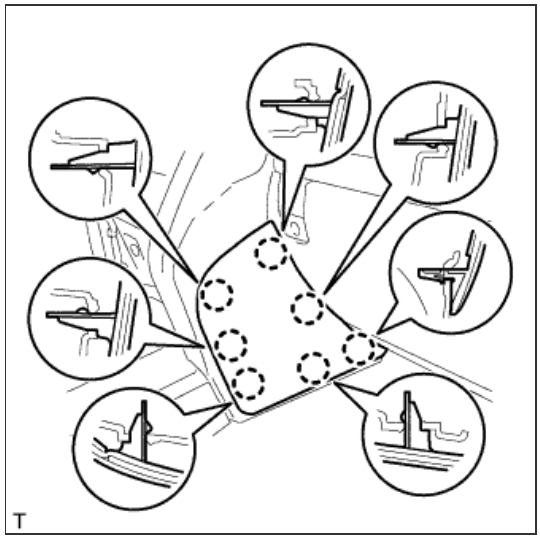


6. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

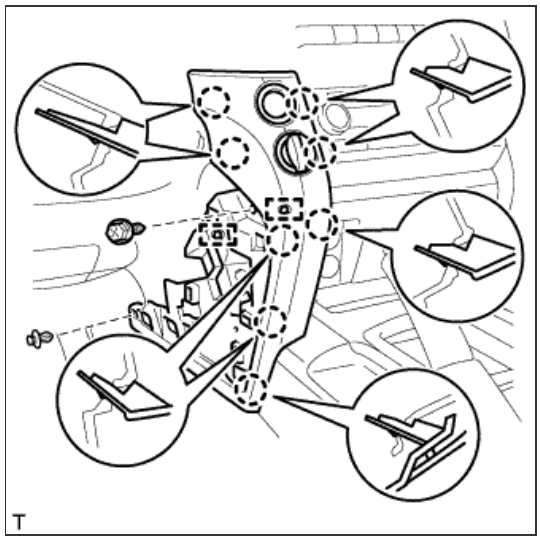


7. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

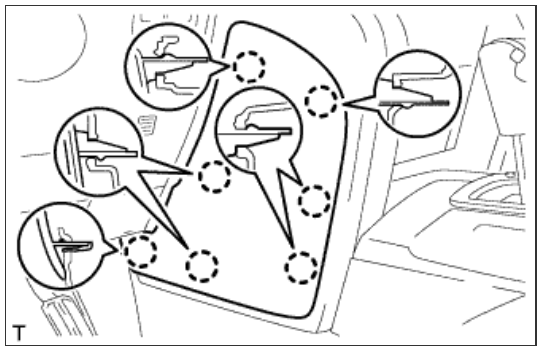

for Preparation Click here


w/ Tonneau Cover:

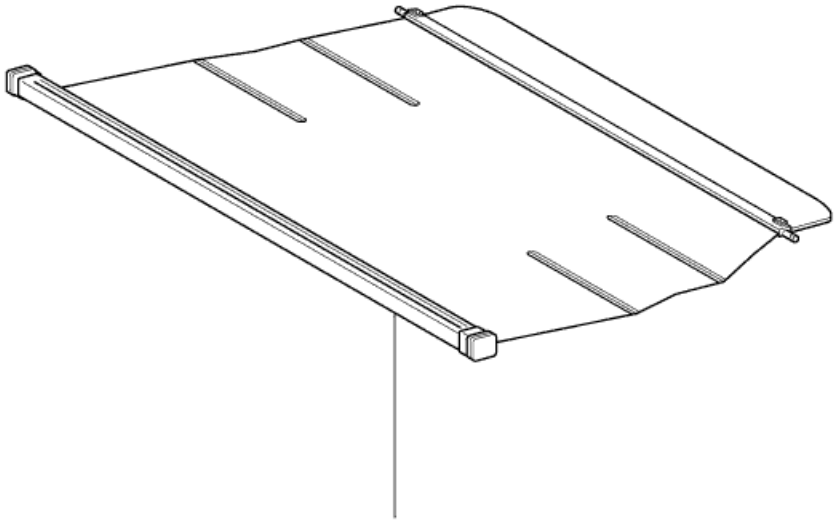



T

except Face to Face Seat Type:

w/ Rear Center Seat Headrest:

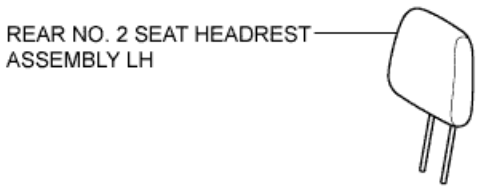

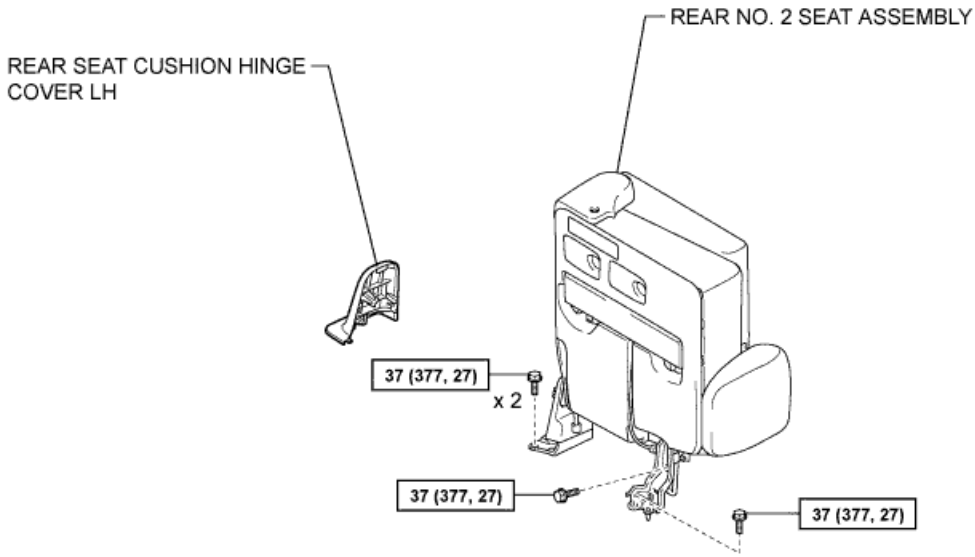




N*m (kgf*cm, ft.*lbf) : Specified torque


P


for Face to Face Seat Type:

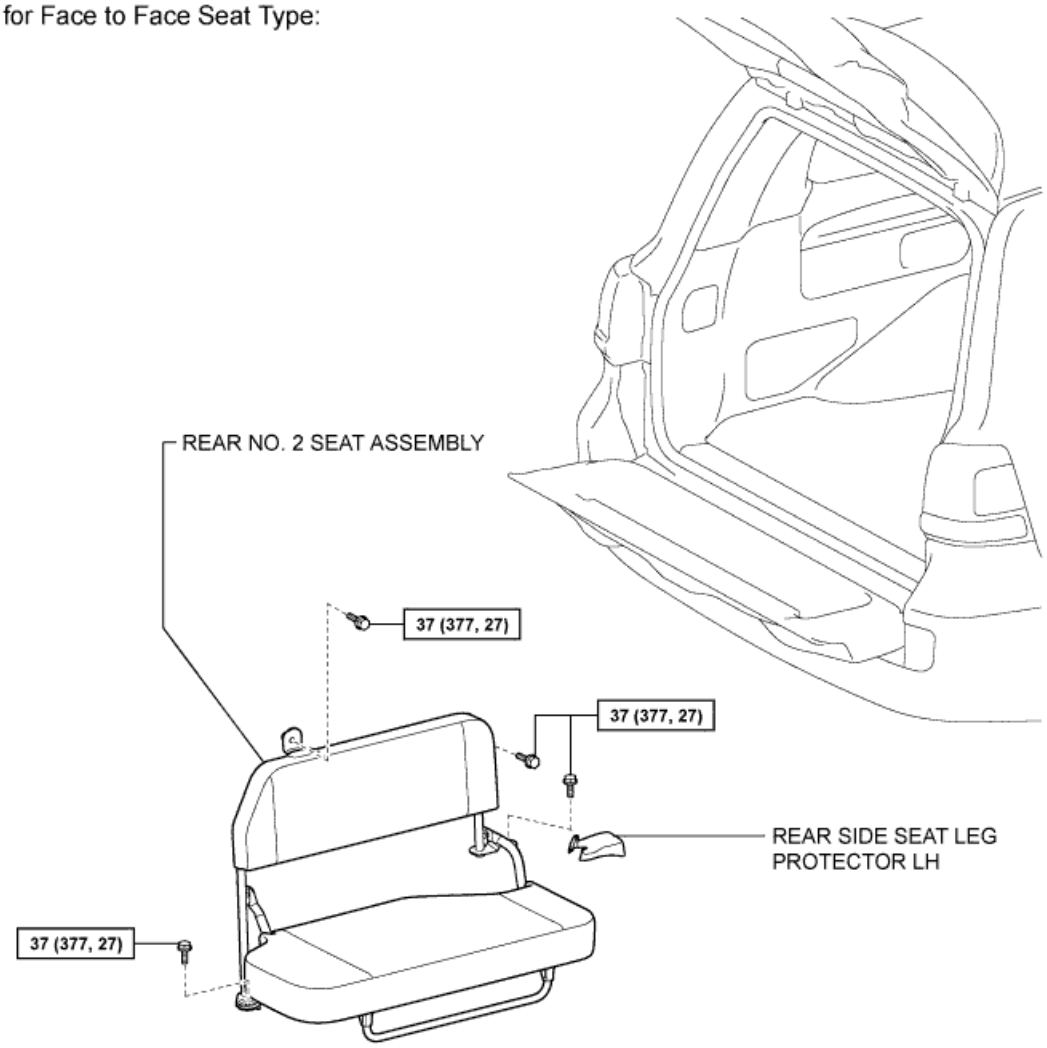

N*m (kgf*cm, ft.*lbf) : Specified torque

P

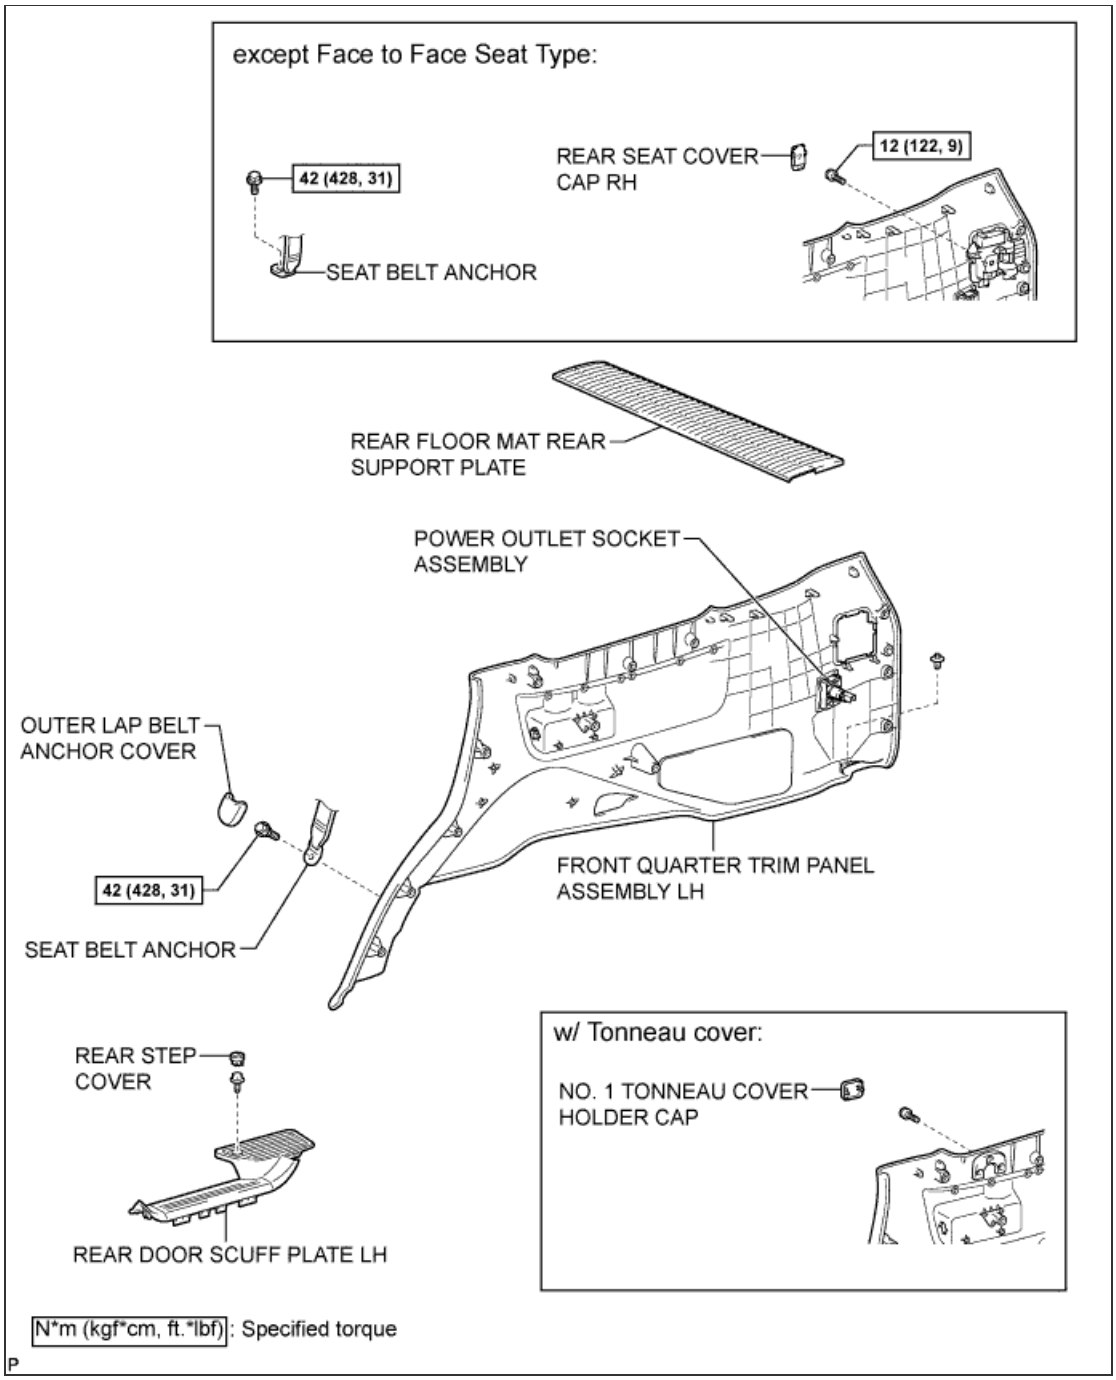
except Face to Face Seat Type:
42 (428, 31)
SEAT BELT ANCHOR
REAR SEAT COVER CAP RH
12 (122, 9)
REAR FLOOR MAT REAR SUPPORT PLATE
POWER OUTLET SOCKET ASSEMBLY
OUTER LAP BELT ANCHOR COVER
42 (428, 31)
SEAT BELT ANCHOR
FRONT QUARTER TRIM PANEL ASSEMBLY LH
REAR STEP COVER
REAR DOOR SCUFF PLATE LH
w/ Tonneau cover:
NO. 1 TONNEAU COVER HOLDER CAP
N*m (kgf*cm, ft.*lbf): Specified torque
P

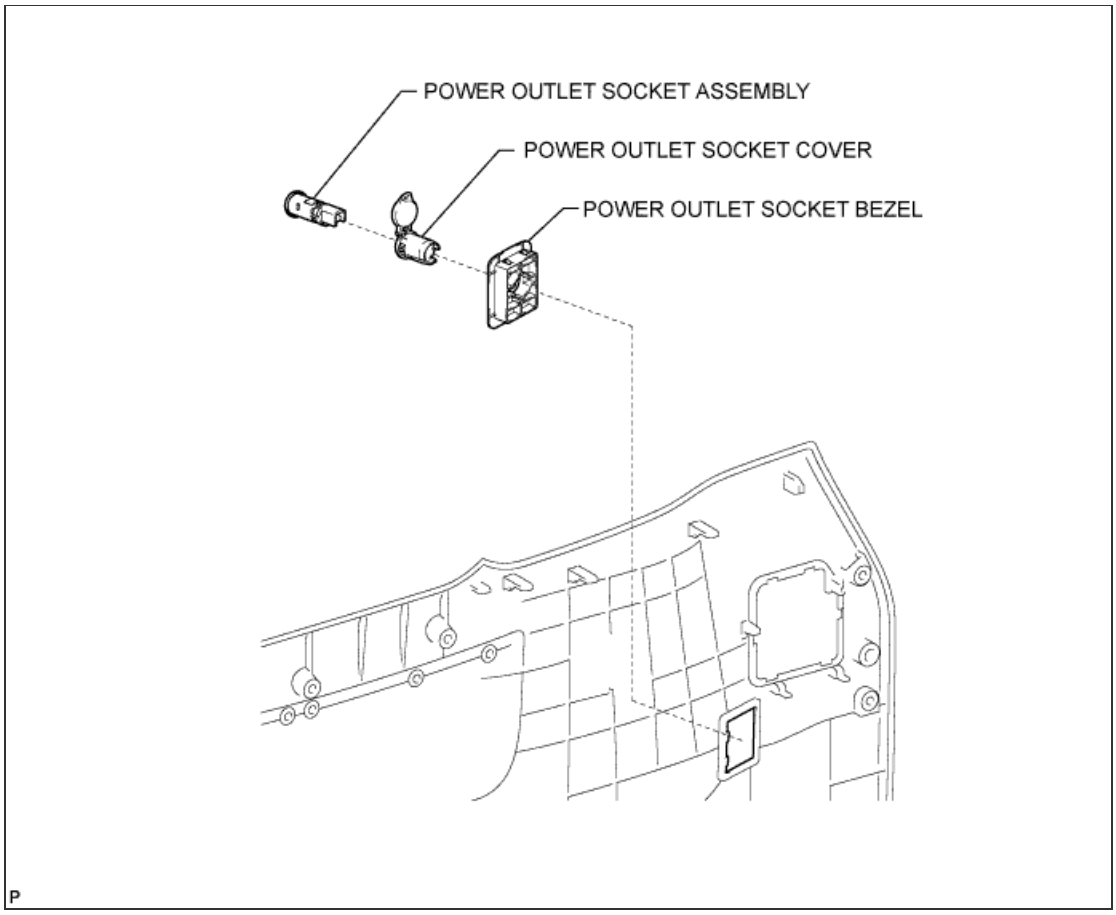
POWER OUTLET SOCKET ASSEMBLY
POWER OUTLET SOCKET COVER
POWER OUTLET SOCKET BEZEL
P

for Preparation Click here


1. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

a. Remove the tonneau cover.


2. REMOVE REAR NO. 2 SEAT HEADREST ASSEMBLY LH (w/ Rear Center Seat Headrest)

3. REMOVE REAR SEAT CUSHION HINGE COVER LH (except Face to Face Seat Type)


a. Operate the rear seat headrest handle and lower the headrest.

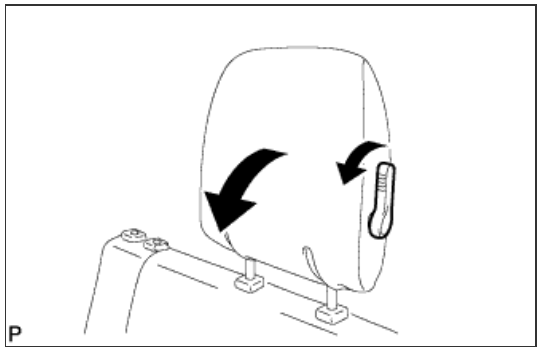

b. Operate the reclining adjuster release handle and fold down the seat.

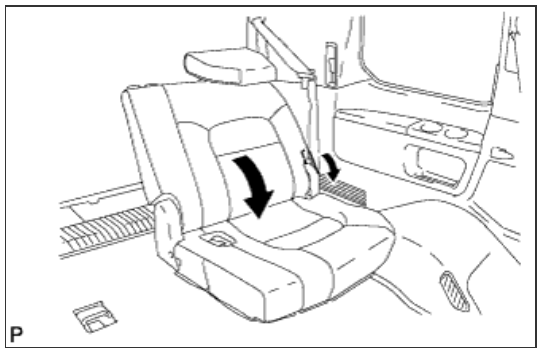


c. Operate the seat cushion lock release lever and move the seat to the storage position.

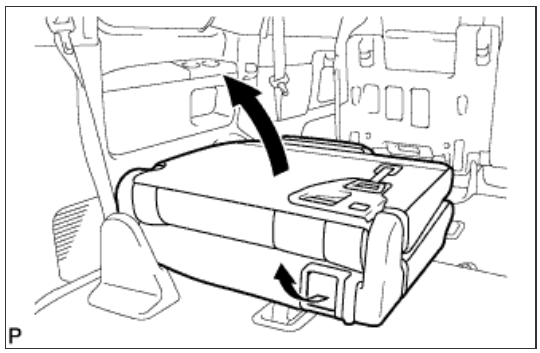

d. Using a screwdriver, detach the 3 claws and remove the cover.


HINT:

Tape the screwdriver tip before use.

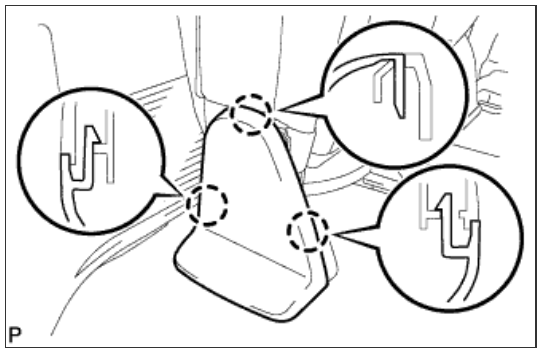

4. REMOVE REAR NO. 2 SEAT HINGE COVER LH (except Face to Face Seat Type)

a. Detach the 2 claws and clip, and then remove the cover.

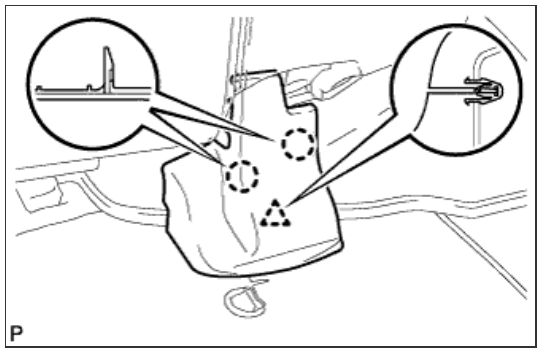


5. REMOVE REAR NO. 2 SEAT ASSEMBLY (except Face to Face Seat Type)

a. Remove the bolts and seat assembly.

NOTICE:

Be careful not to damage the vehicle body.

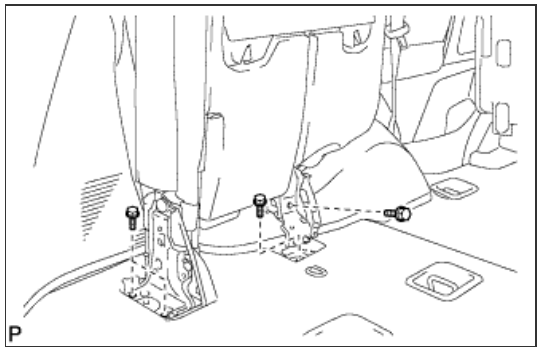


6. REMOVE REAR SIDE SEAT LEG PROTECTOR LH (for Face to Face Seat Type)

a. Using a screwdriver, detach the 2 claws and remove the protector.


HINT:

Tape the screwdriver tip before use.

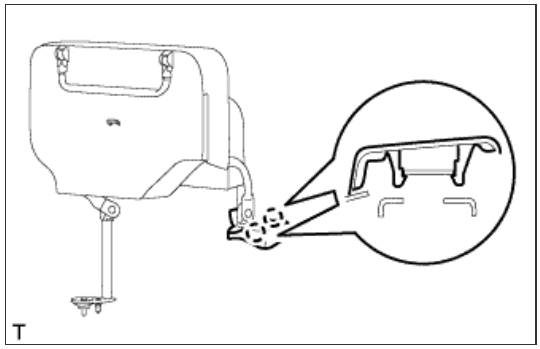

7. REMOVE REAR NO. 2 SEAT ASSEMBLY (for Face to Face Seat Type)

a. Remove the bolts and rear No. 2 seat.

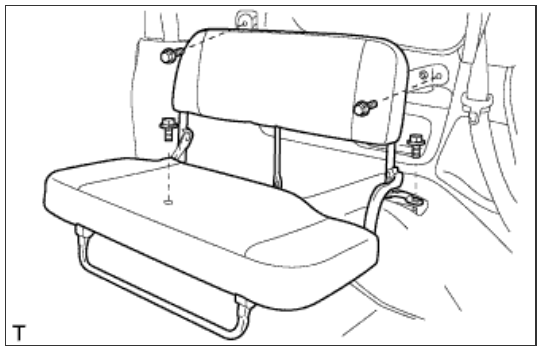


. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

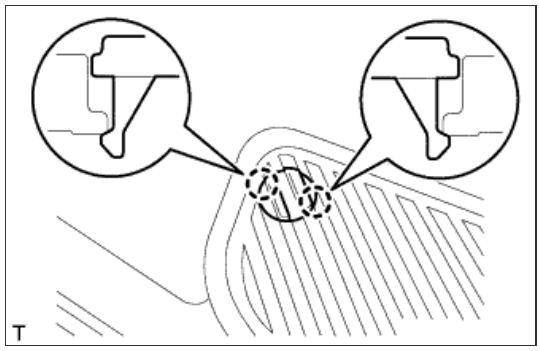

9. REMOVE REAR DOOR SCUFF PLATE LH


a. Remove the screw.

b. Detach the 3 claws and clips, and remove the scuff plate.

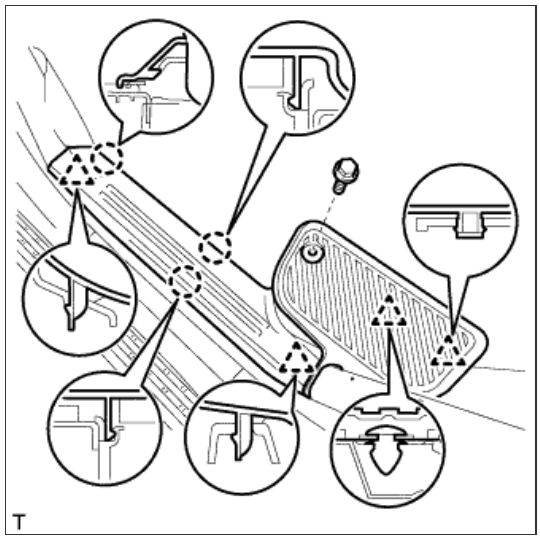

10. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

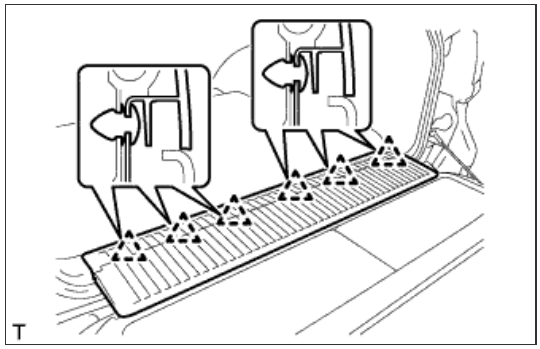


11. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

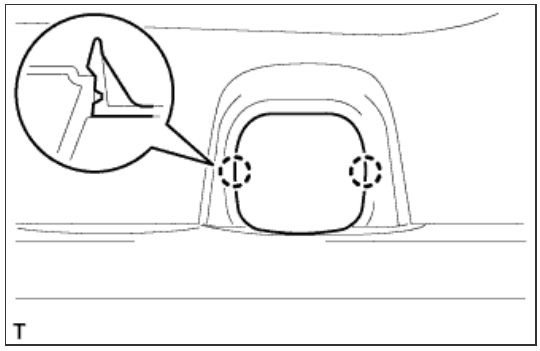

12. REMOVE REAR SEAT COVER CAP RH (except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


Tape the screwdriver tip before use.

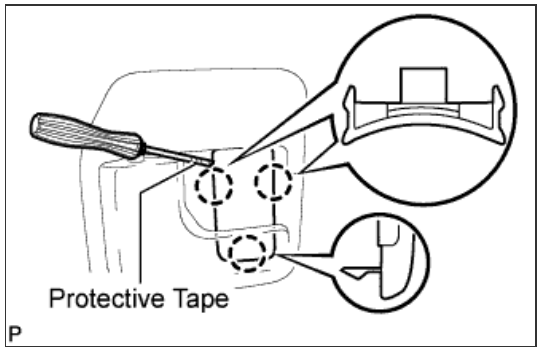


13. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

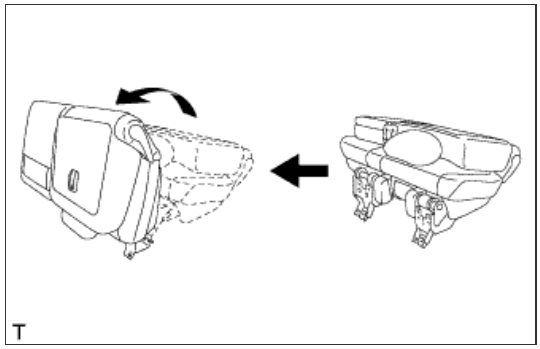


a. Detach the 3 claws and remove the cover.

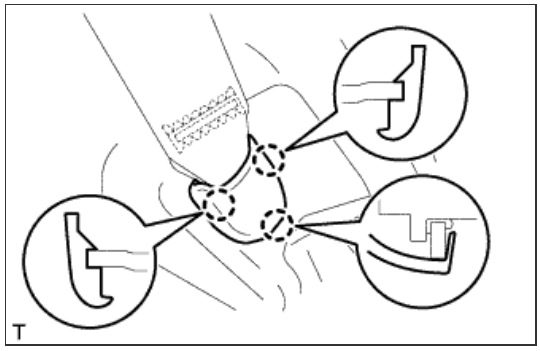

b. Remove the bolt and rear No. 1 seat belt anchor.

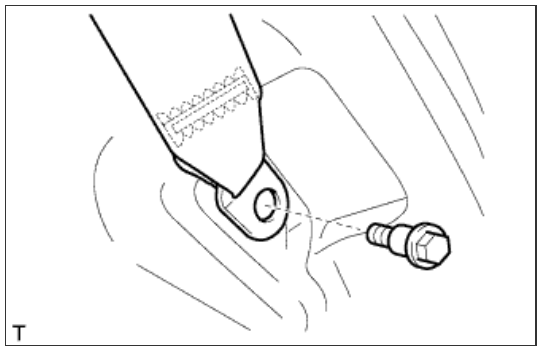

c. w Rear No. 2 Seat, e cept Face to Face Seat Type
Remove the bolt and rear No. 2 seat belt anchor.

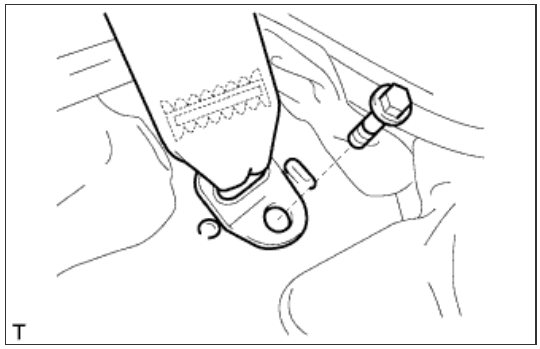


d. w Rear No. 2 Seat, e cept Face to Face Seat Type

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w o Rear Air onditioning System
isconnect the rear seat lock control lever cable and then remove the quarter trim panel.


iv. w Rear Air onditioning System
isconnect the thermistor connector and rear seat lock control lever cable, and then remove the quarter trim panel.

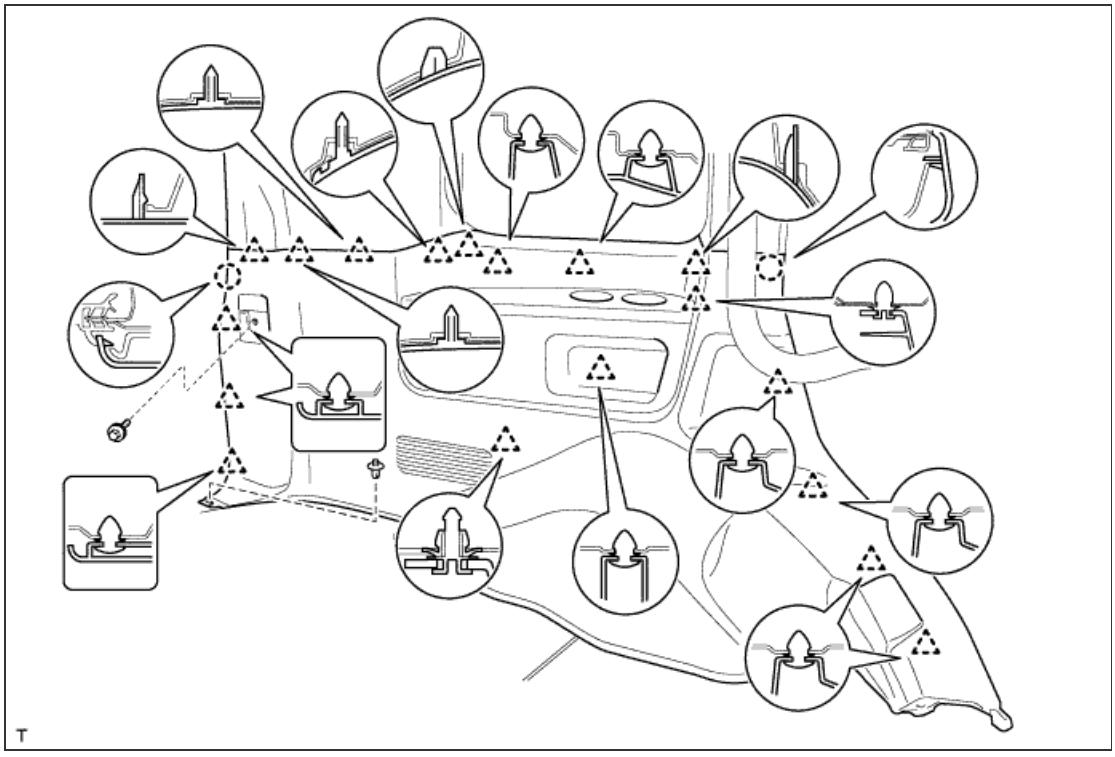

e. w o Rear No. 2 Seat or w Rear No. 2 Seat, for Face to Face Seat Type

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

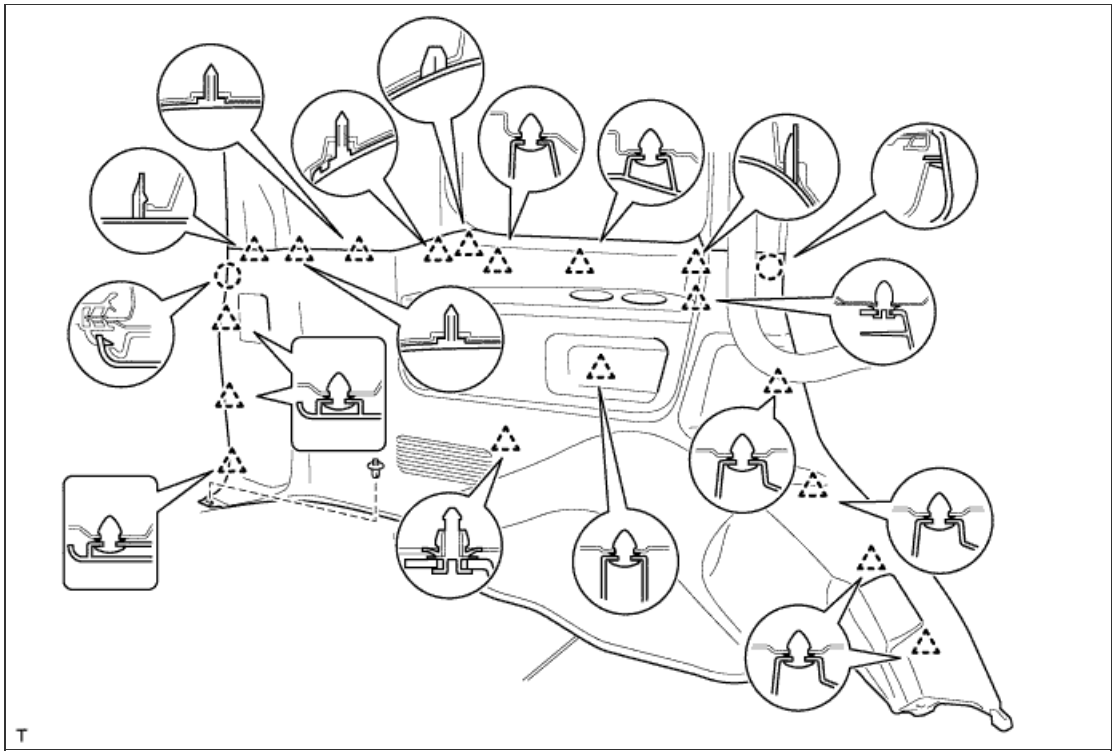

f. w Tonneau over


i. Remove the screw and clip.

ii. Detach the 18 clips and 2 claws, and remove the quarter trim panel.

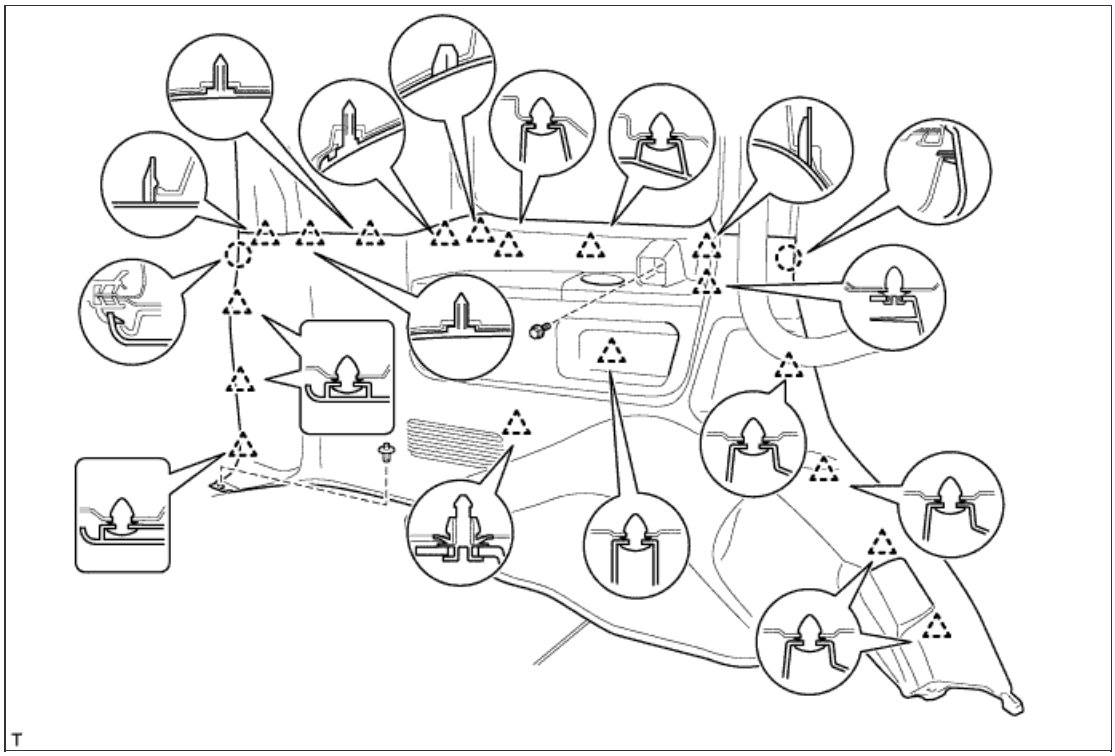

14. REMOVE POWER OUTLET SOCKET ASSEMBLY


a. Disengage the claws and remove the power outlet socket bezel.

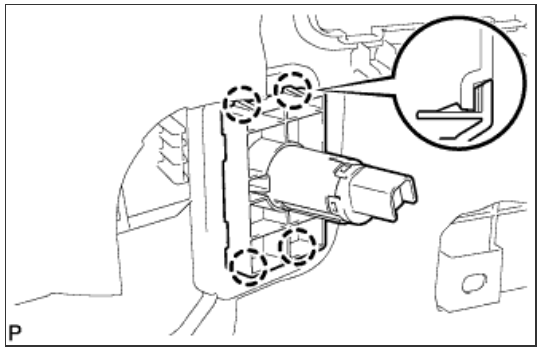

b. Using a screwdriver with its tip wrapped in protective tape, disengage the claw and remove the power outlet socket assembly.


Text in Illustration

	rotective Tape

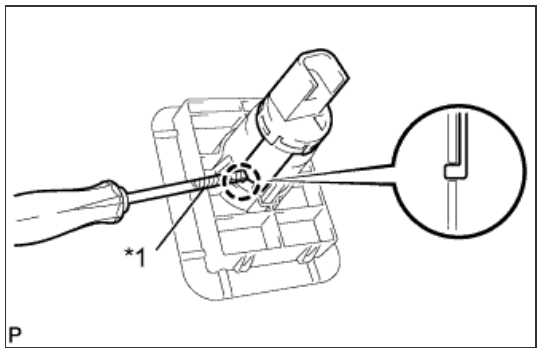

15. REMOVE POWER OUTLET SOCKET COVER

a. Disengage the 2 claws and remove the power outlet socket cover.

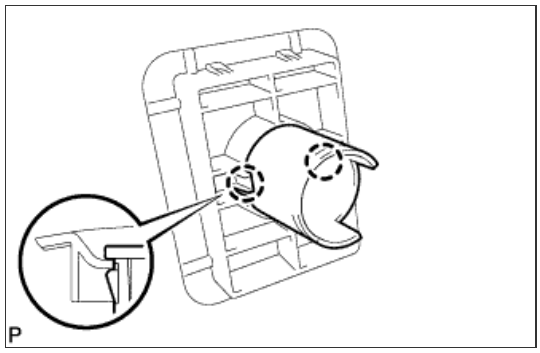
P

for Preparation Click here

1. INSTALL POWER OUTLET SOCKET COVER

a. Engage the 2 claws and install the power outlet socket cover.

2. INSTALL POWER OUTLET SOCKET ASSEMBLY


a. Engage the claw and install the power outlet socket assembly.

b. Engage the 4 claws and install the power outlet socket bezel.

3. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

When installing the front quarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

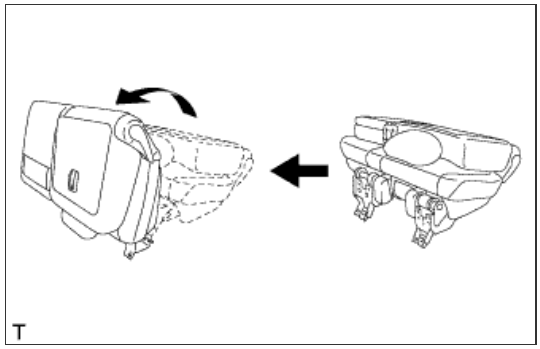

a. w/ Rear No. 2 Seat, except Face to Face Seat Type:


i. w/o Rear Air Conditioning System:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning System:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

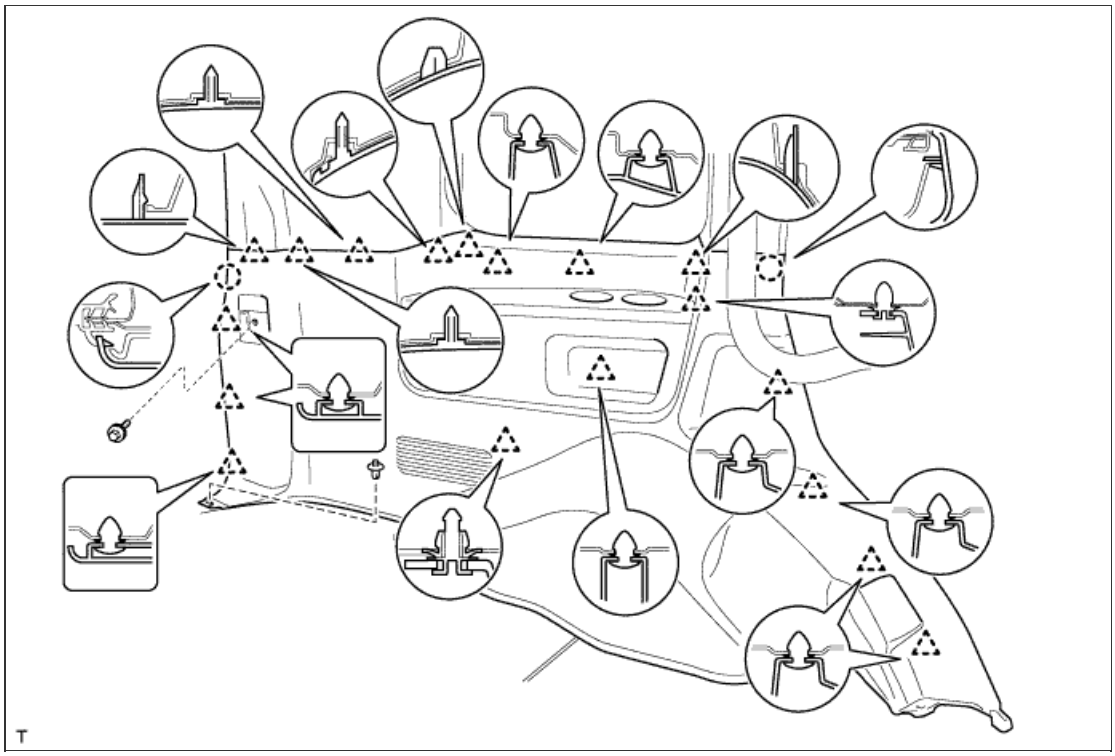

b. w/o ear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

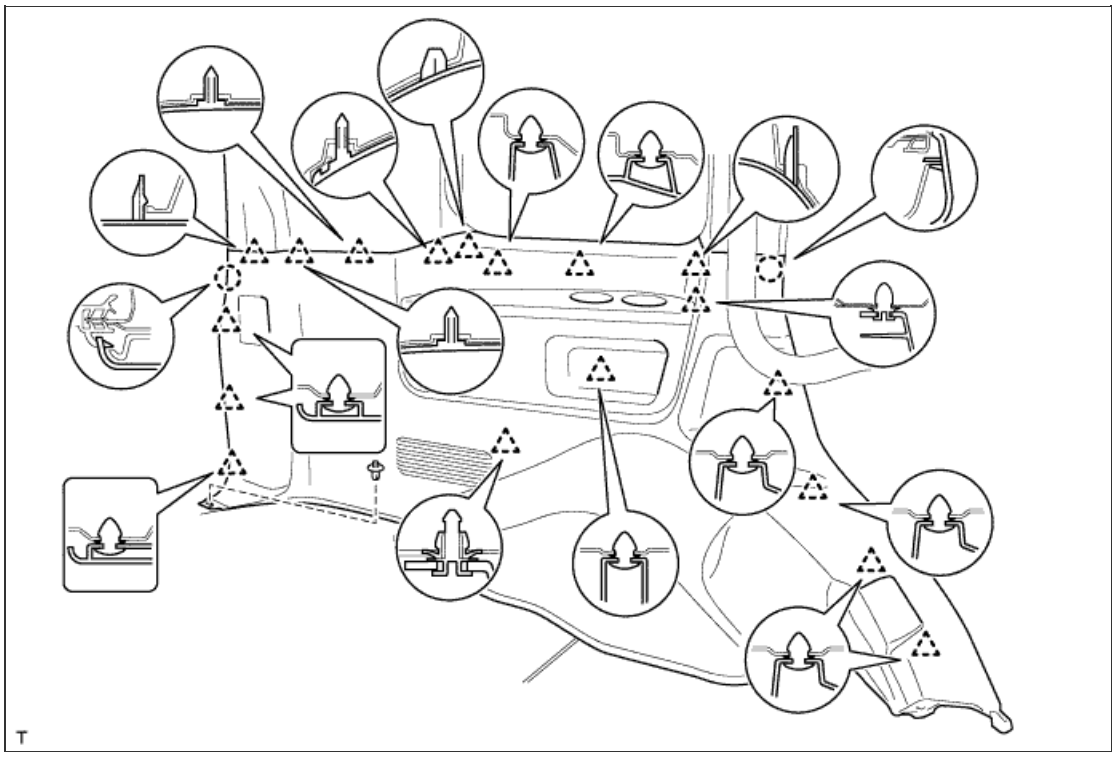

c. w/ Tonneau Cover:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the screw and clip.

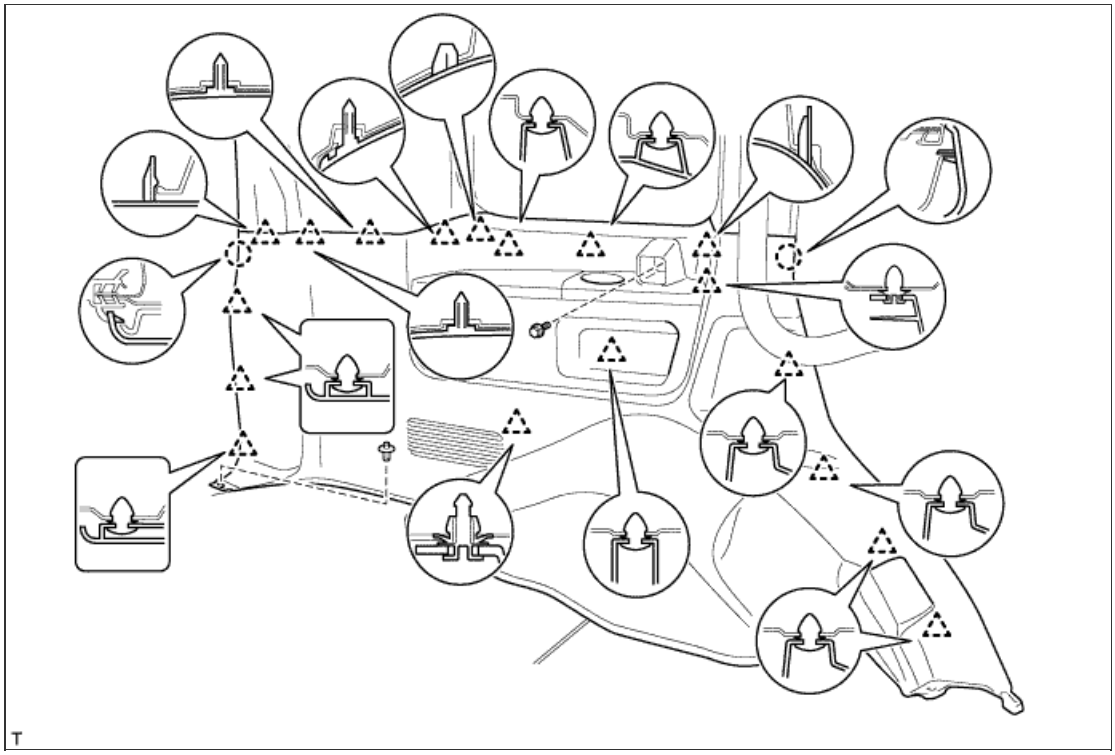


d. w/ Rear No. 2 Seat, except Face to Face Seat Type:
Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }


NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle body.

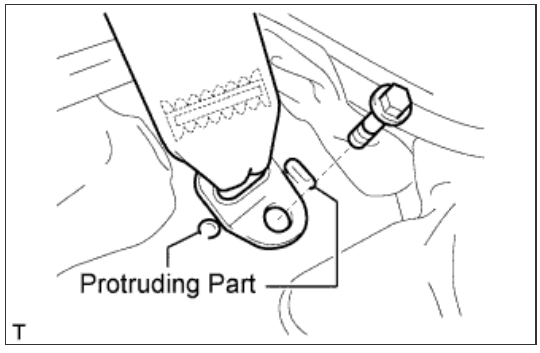


e. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

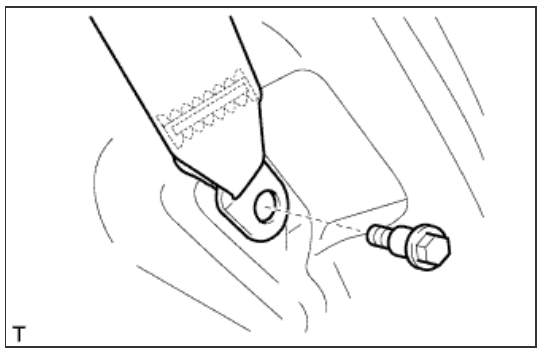

f. Attach the 3 claws to install the cover.

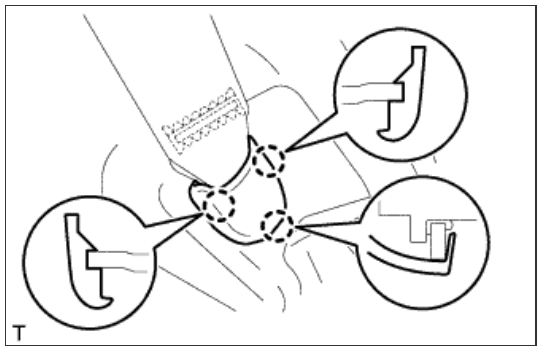


4. INSTALL REAR SEAT COVER CAP RH (except Face to Face Seat Type)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

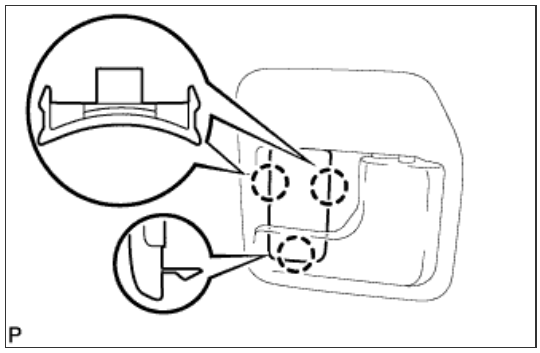


5. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:


Use the same procedure to install the tonneau cover holder cap on the other side.

a. Attach the 2 claws to install the tonneau cover holder cap.

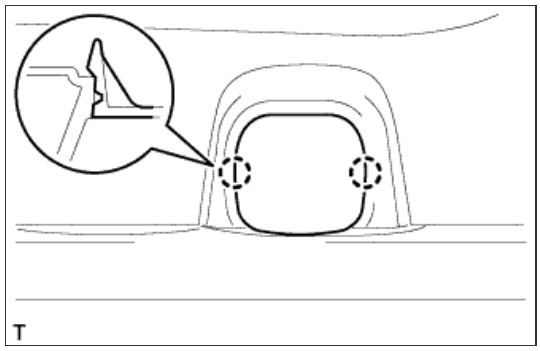

6. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE


a. Attach the 6 clips to install the support plate.

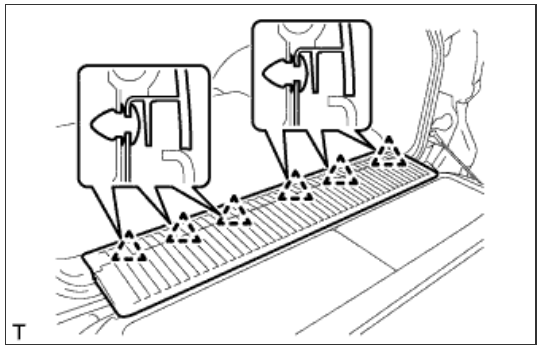

7. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

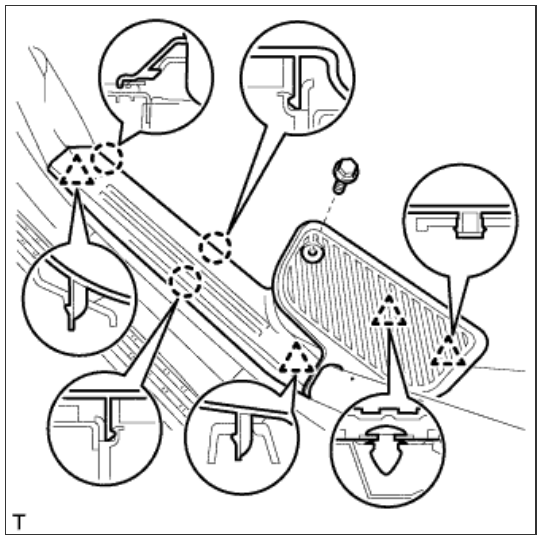


8. INSTALL REAR STEP COVER

HINT:

Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

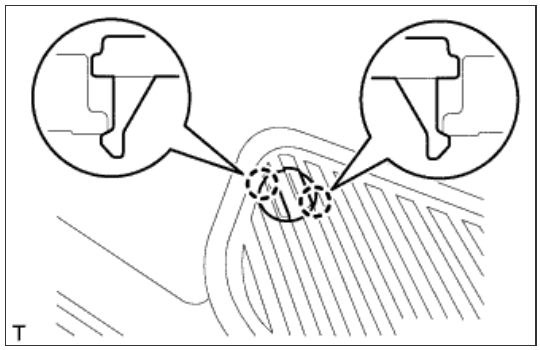

9. INSTALL REAR NO. 2 SEAT ASSEMBLY (except Face to Face Seat Type)


a. Temporarily install the seat assembly with the 4 bolts.

NOTICE:

Be careful not to damage the vehicle body.

b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

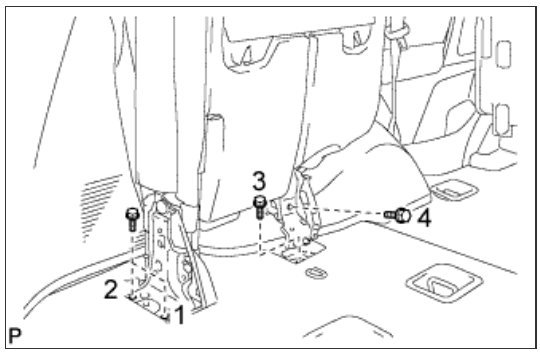

10. INSTALL REAR NO. 2 SEAT HINGE COVER LH (except Face to Face Seat Type)

a. Attach the clip and 2 claws to install the cover.

11. INSTALL REAR SEAT CUSHION HINGE COVER LH (except Face to Face Seat Type)

a. Attach the 3 claws to install the cover.

b. Return the seat to the upright position.


12. INSTALL REAR NO. 2 SEAT HEADREST ASSEMBLY LH (w/ Rear Center Seat Headrest)

13. INSTALL REAR NO. 2 SEAT ASSEMBLY (for Face to Face Seat Type)

a. Temporarily install the rear No. 2 seat with the 4 bolts.


b. Tighten the bolts in the order shown in the illustration.

Torque:
37 N*m{ 377 kgf*cm , 27 ft.*lbf }

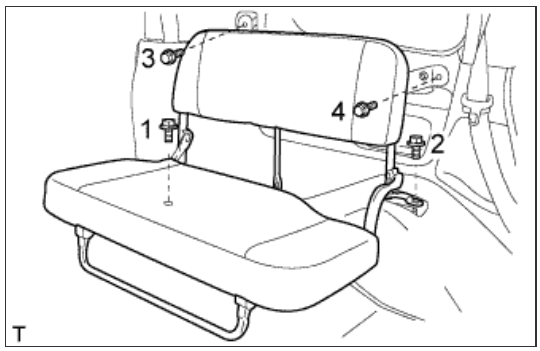

14. INSTALL REAR SIDE SEAT LEG PROTECTOR LH (for Face to Face Seat Type)

a. Attach the 2 claws to install the protector.

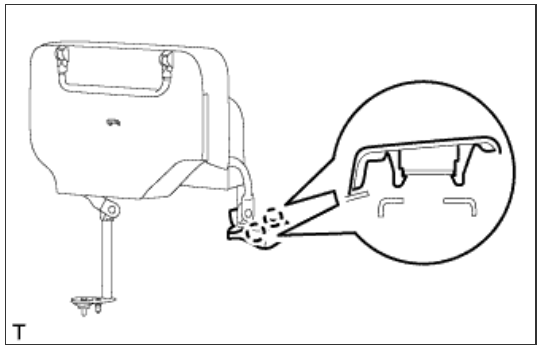

15. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)


a. Install the tonneau cover assembly.


for Preparation Click here

1.PRECAUTION FOR VEHICLE WITH SRS AIRBAG AND SEAT BELT PRETENSIONER


a. Some operations in this section may affect the SRS airbags. Prior to performing the corresponding operations, read the SRS airbag Precaution (Click here).

for Preparation Click here

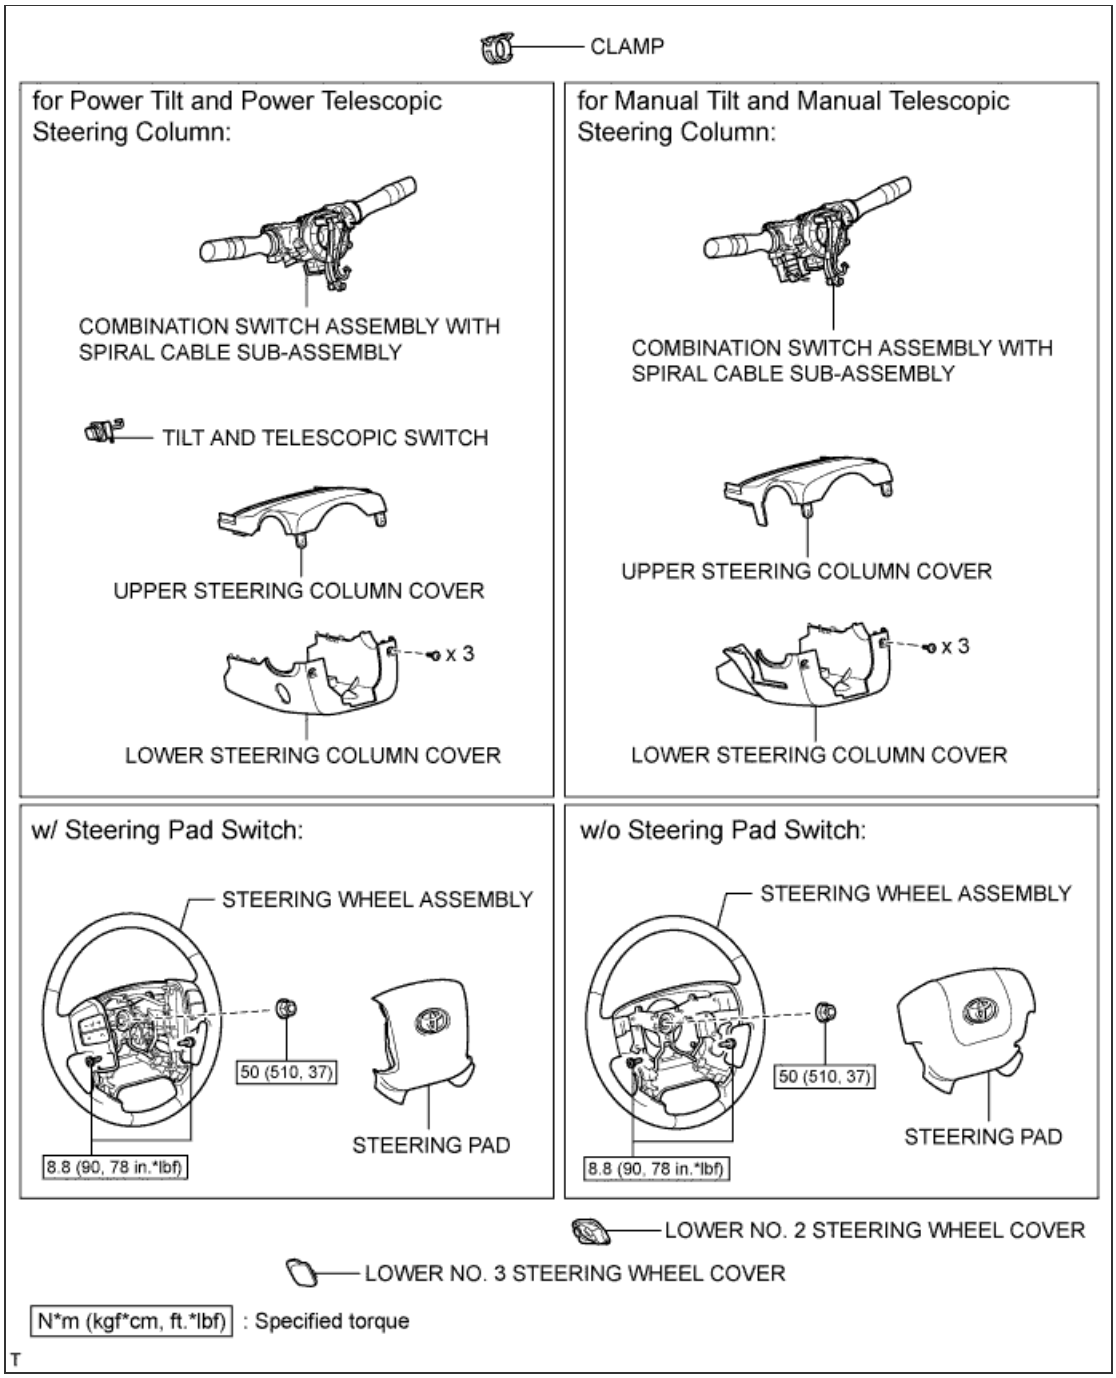


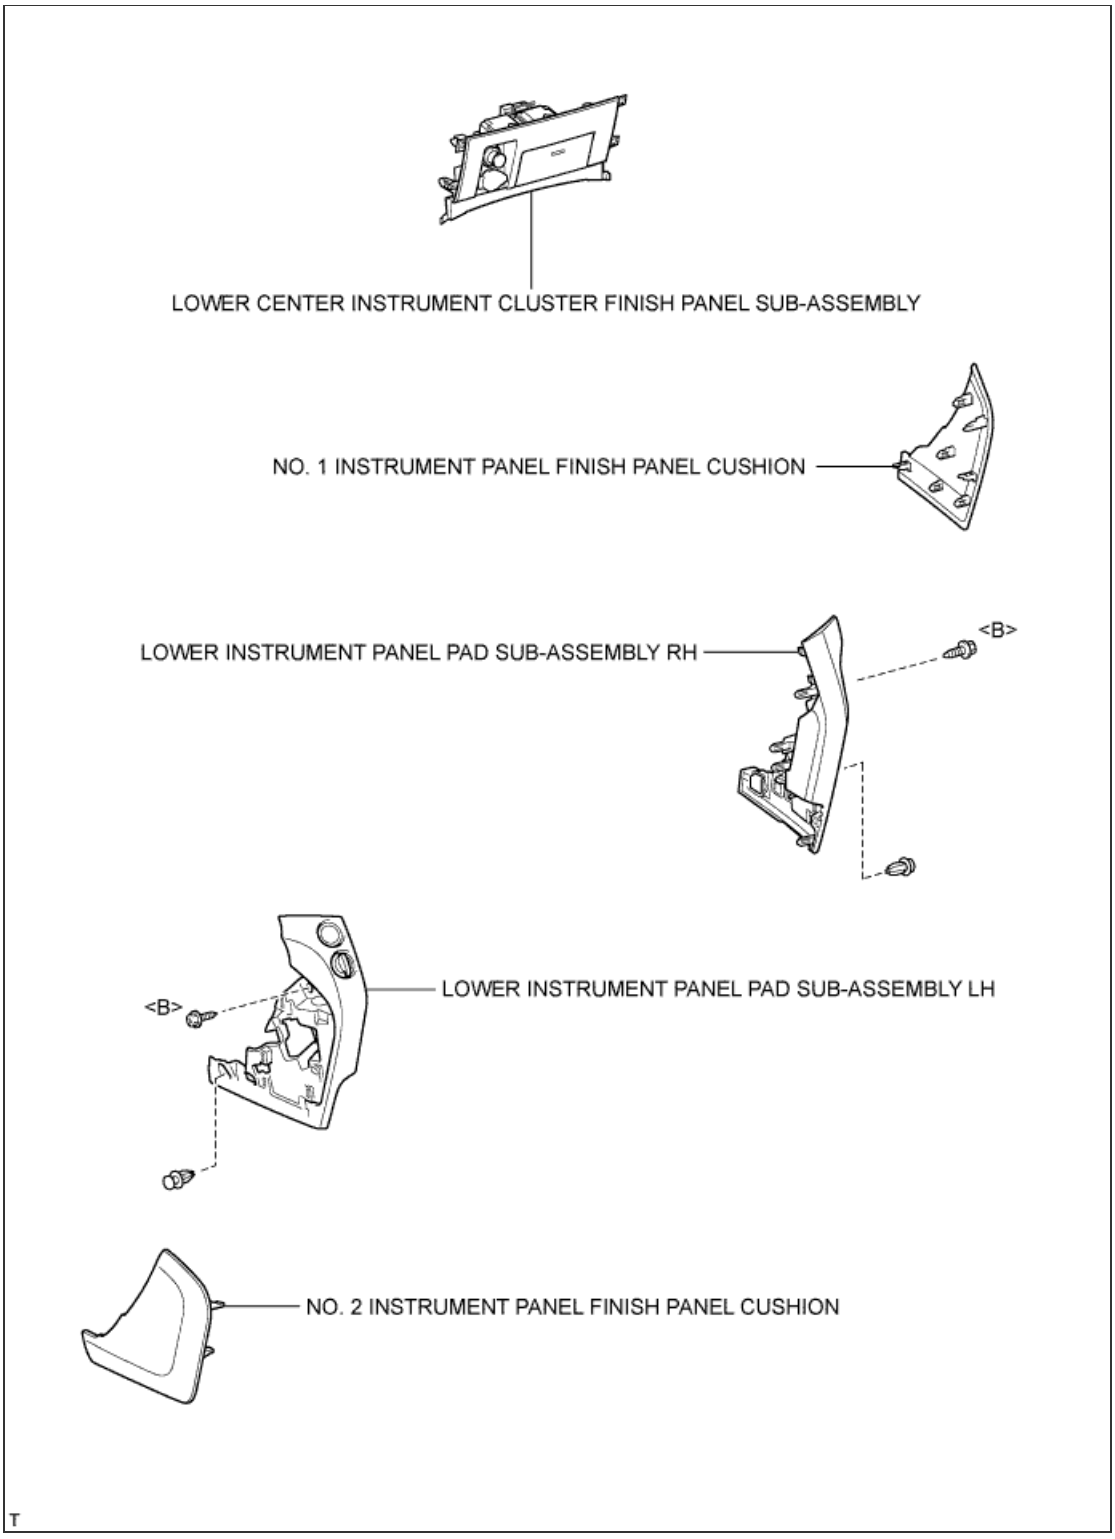

LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY
NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION
LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH
<B>
<B>
LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH
NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION
T

for Automatic Transmission:

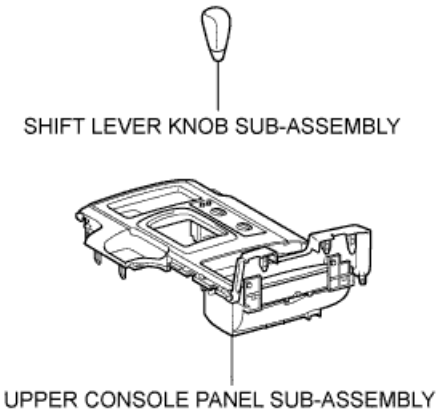


for Manual Transmission:

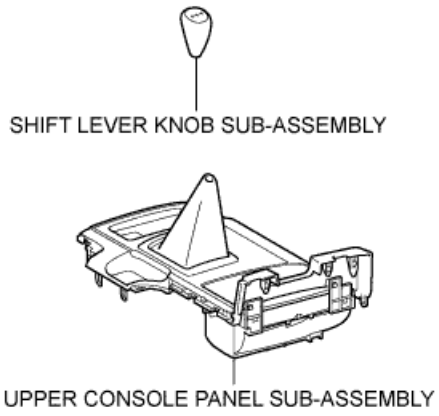


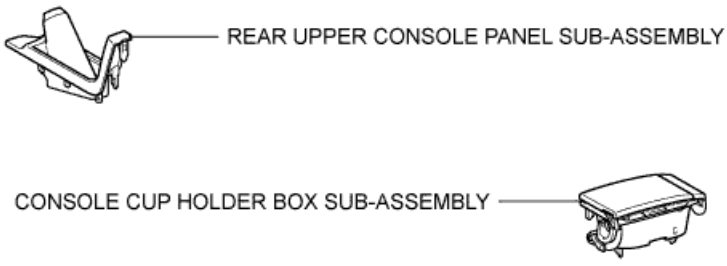

T

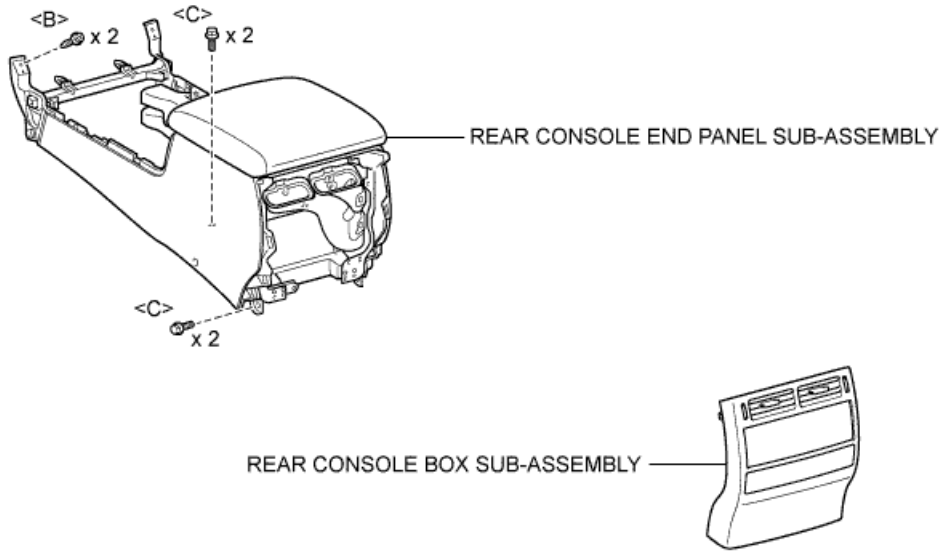

w/ Cool Box:

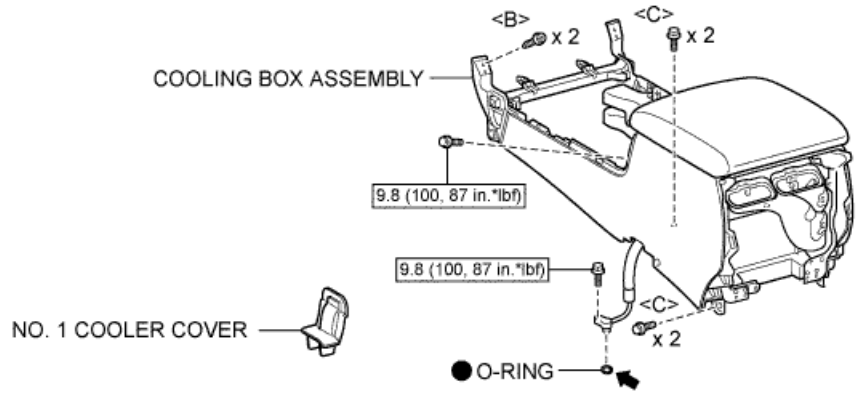


N*m (kgf*cm, ft.*lbf) : Specified torque


● Non-reusable part

⬅ Compressor oil ND-OIL 8 or equivalent

T

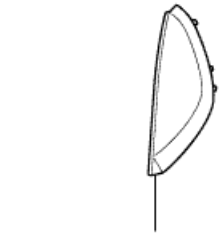


INSTRUMENT SIDE PANEL LH

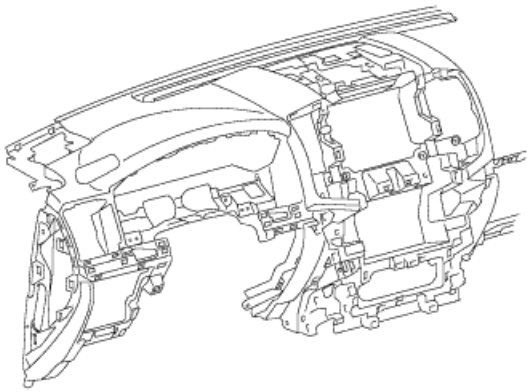




NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY

w/ Multi-information Display:

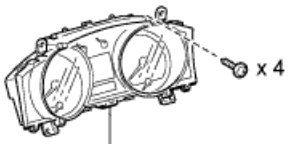


x 4

COMBINATION METER ASSEMBLY

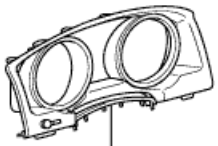

INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY

w/o Multi-information Display:

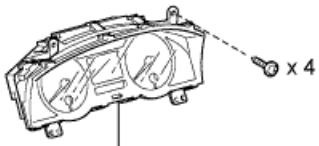

x 4

COMBINATION METER ASSEMBLY



INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH






NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

T

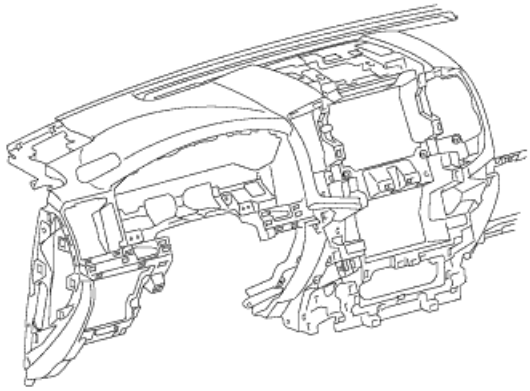


w/o Driver Side Knee Airbag:

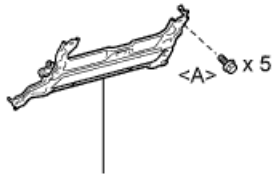


LOWER INSTRUMENT PANEL SUB-ASSEMBLY

w/ Driver Side Knee Airbag:

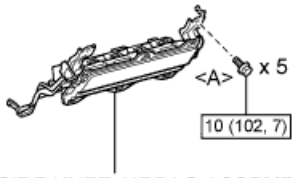

DRIVER SIDE KNEE AIRBAG ASSEMBLY


LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

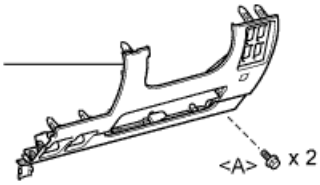



NO. 1 SWITCH HOLE BASE


w/ Floor Under Cover:

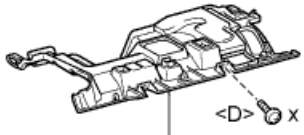


NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY


N*m (kgf*cm, ft.*lbf) : Specified torque


T

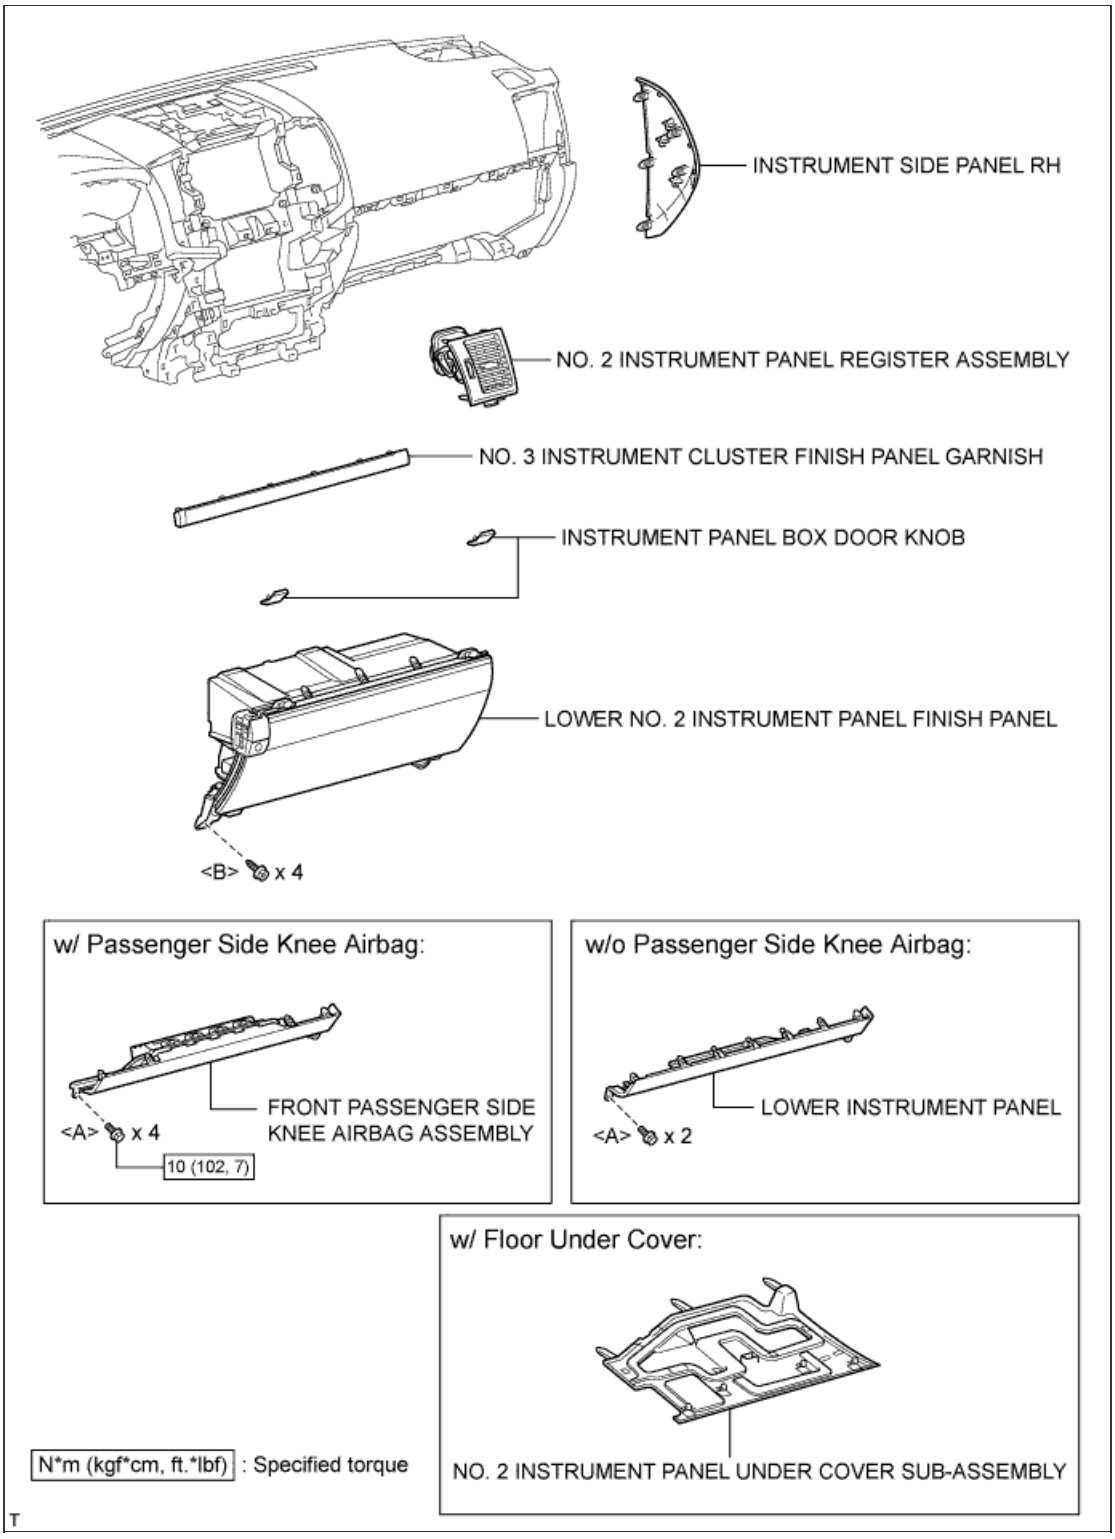

INSTRUMENT SIDE PANEL RH
NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY
NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH
INSTRUMENT PANEL BOX DOOR KNOB
LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL
<B> x 4
w/ Passenger Side Knee Airbag:
FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY
<A> x 4
10 (102, 7)
w/o Passenger Side Knee Airbag:
LOWER INSTRUMENT PANEL
<A> x 2
w/ Floor Under Cover:
NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque

T

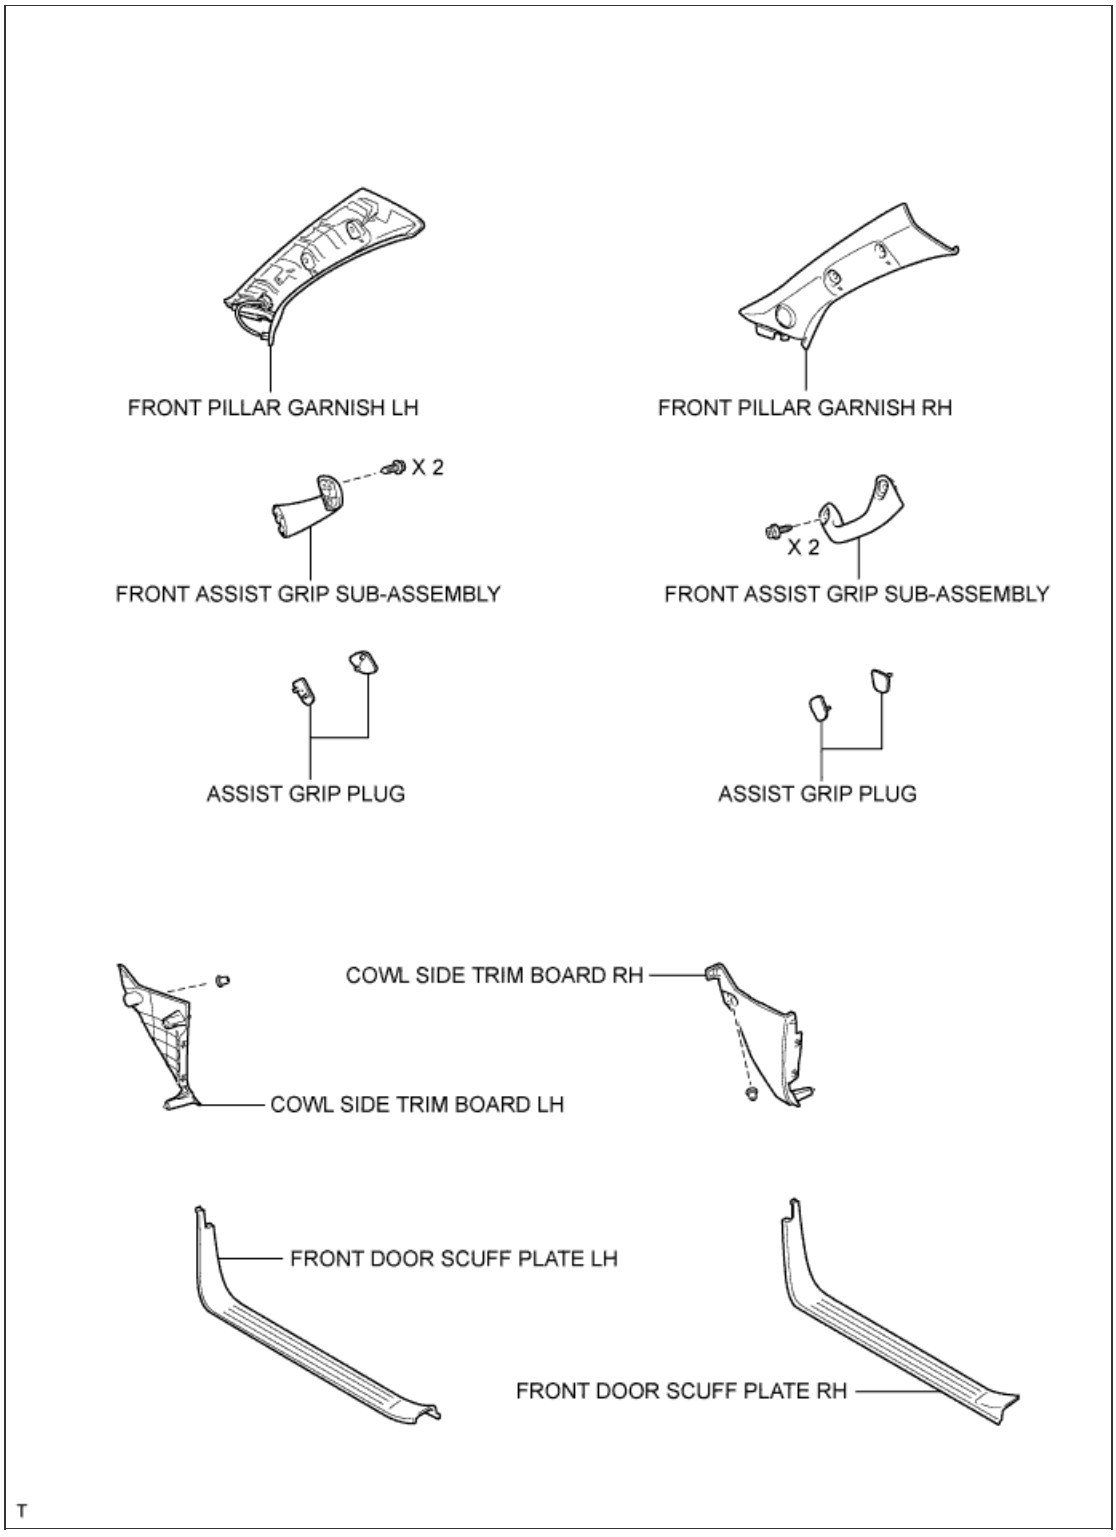

FRONT PILLAR GARNISH LH
FRONT PILLAR GARNISH RH
X 2
FRONT ASSIST GRIP SUB-ASSEMBLY
X 2
FRONT ASSIST GRIP SUB-ASSEMBLY
ASSIST GRIP PLUG
ASSIST GRIP PLUG
COWL SIDE TRIM BOARD RH
COWL SIDE TRIM BOARD LH
FRONT DOOR SCUFF PLATE LH
FRONT DOOR SCUFF PLATE RH
T

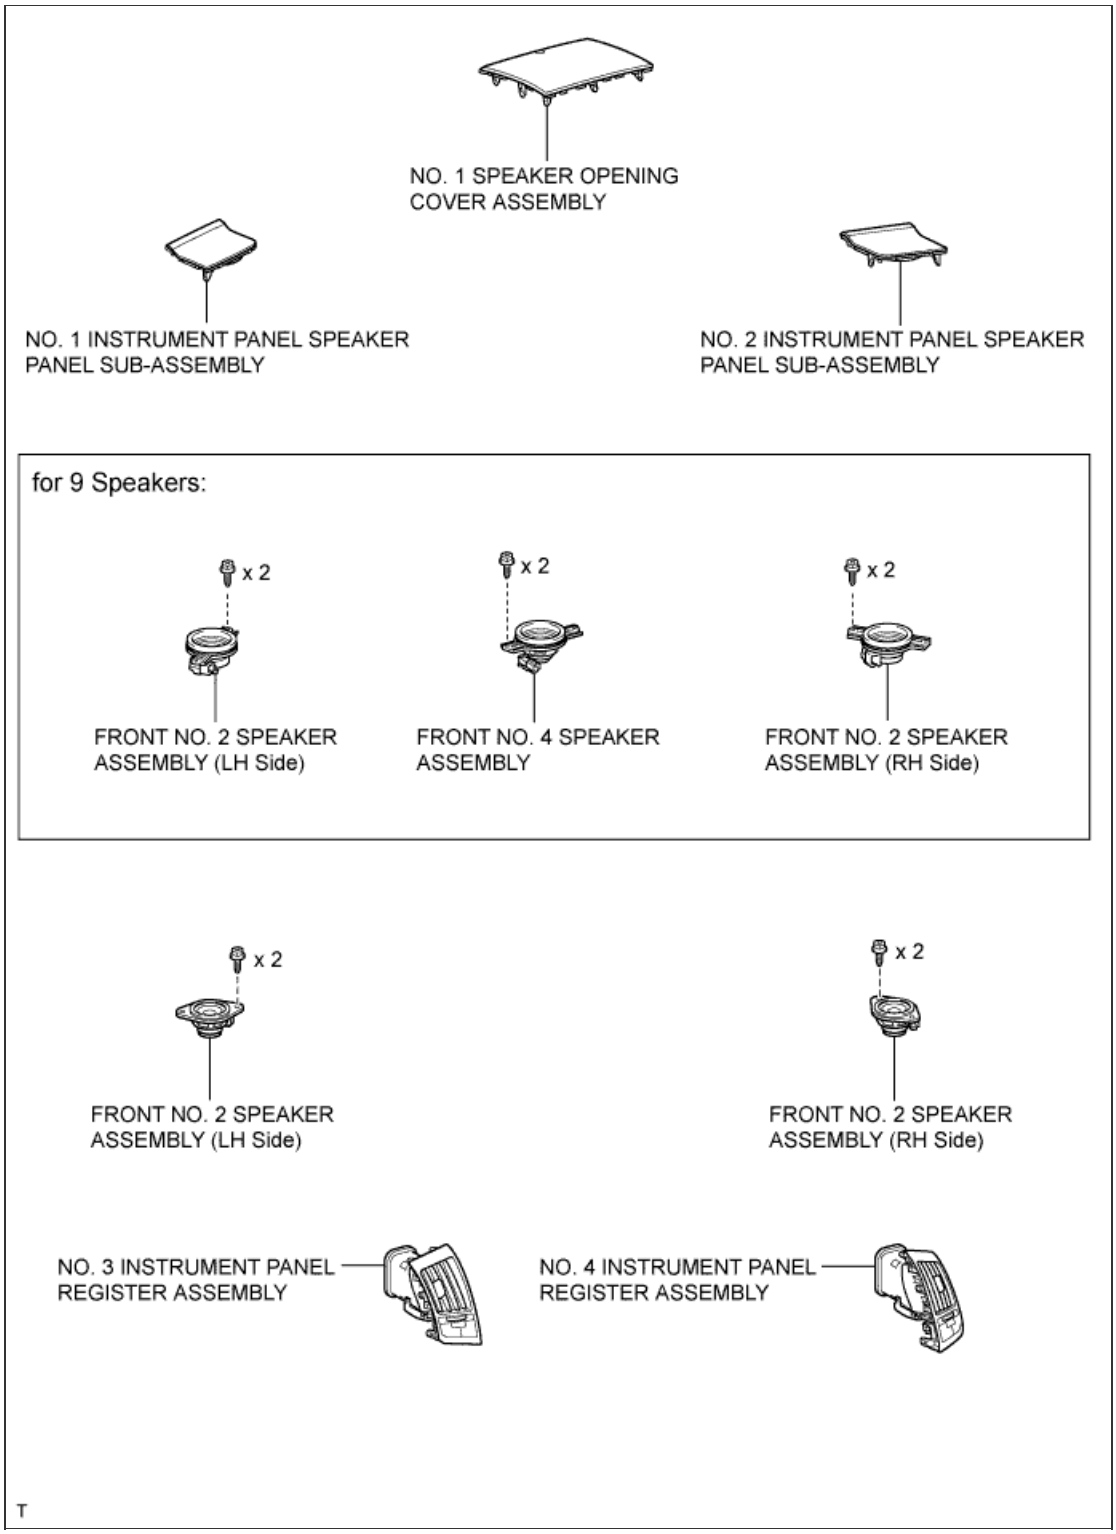
NO. 1 SPEAKER OPENING COVER ASSEMBLY
NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY
NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY
for 9 Speakers:
x 2
FRONT NO. 2 SPEAKER ASSEMBLY (LH Side)
x 2
FRONT NO. 4 SPEAKER ASSEMBLY
x 2
FRONT NO. 2 SPEAKER ASSEMBLY (RH Side)
x 2
FRONT NO. 2 SPEAKER ASSEMBLY (LH Side)
x 2
FRONT NO. 2 SPEAKER ASSEMBLY (RH Side)
NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY
NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY
T

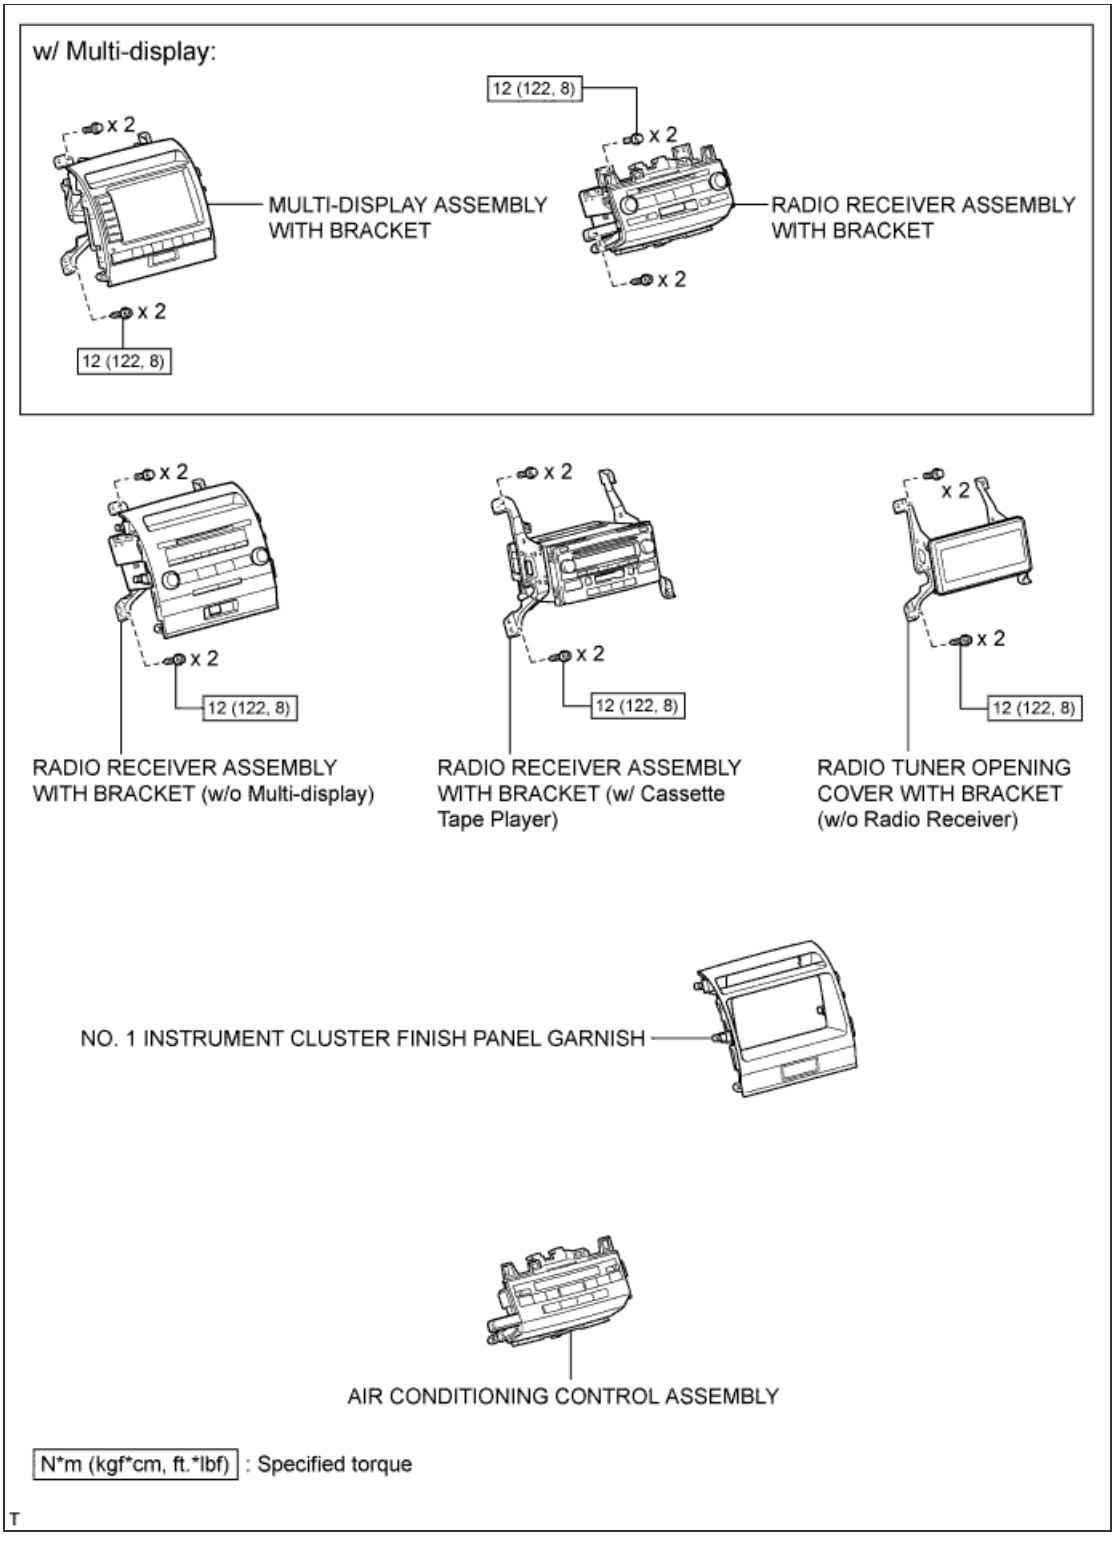

w/ Multi-display:
x 2
MULTI-DISPLAY ASSEMBLY WITH BRACKET
x 2
12 (122, 8)
12 (122, 8)
x 2
RADIO RECEIVER ASSEMBLY WITH BRACKET
x 2
x 2
RADIO RECEIVER ASSEMBLY WITH BRACKET (w/o Multi-display)
12 (122, 8)
x 2
x 2
RADIO RECEIVER ASSEMBLY WITH BRACKET (w/ Cassette Tape Player)
12 (122, 8)
x 2
x 2
RADIO TUNER OPENING COVER WITH BRACKET (w/o Radio Receiver)
12 (122, 8)
NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH
AIR CONDITIONING CONTROL ASSEMBLY
N*m (kgf*cm, ft.*lbf) : Specified torque
T

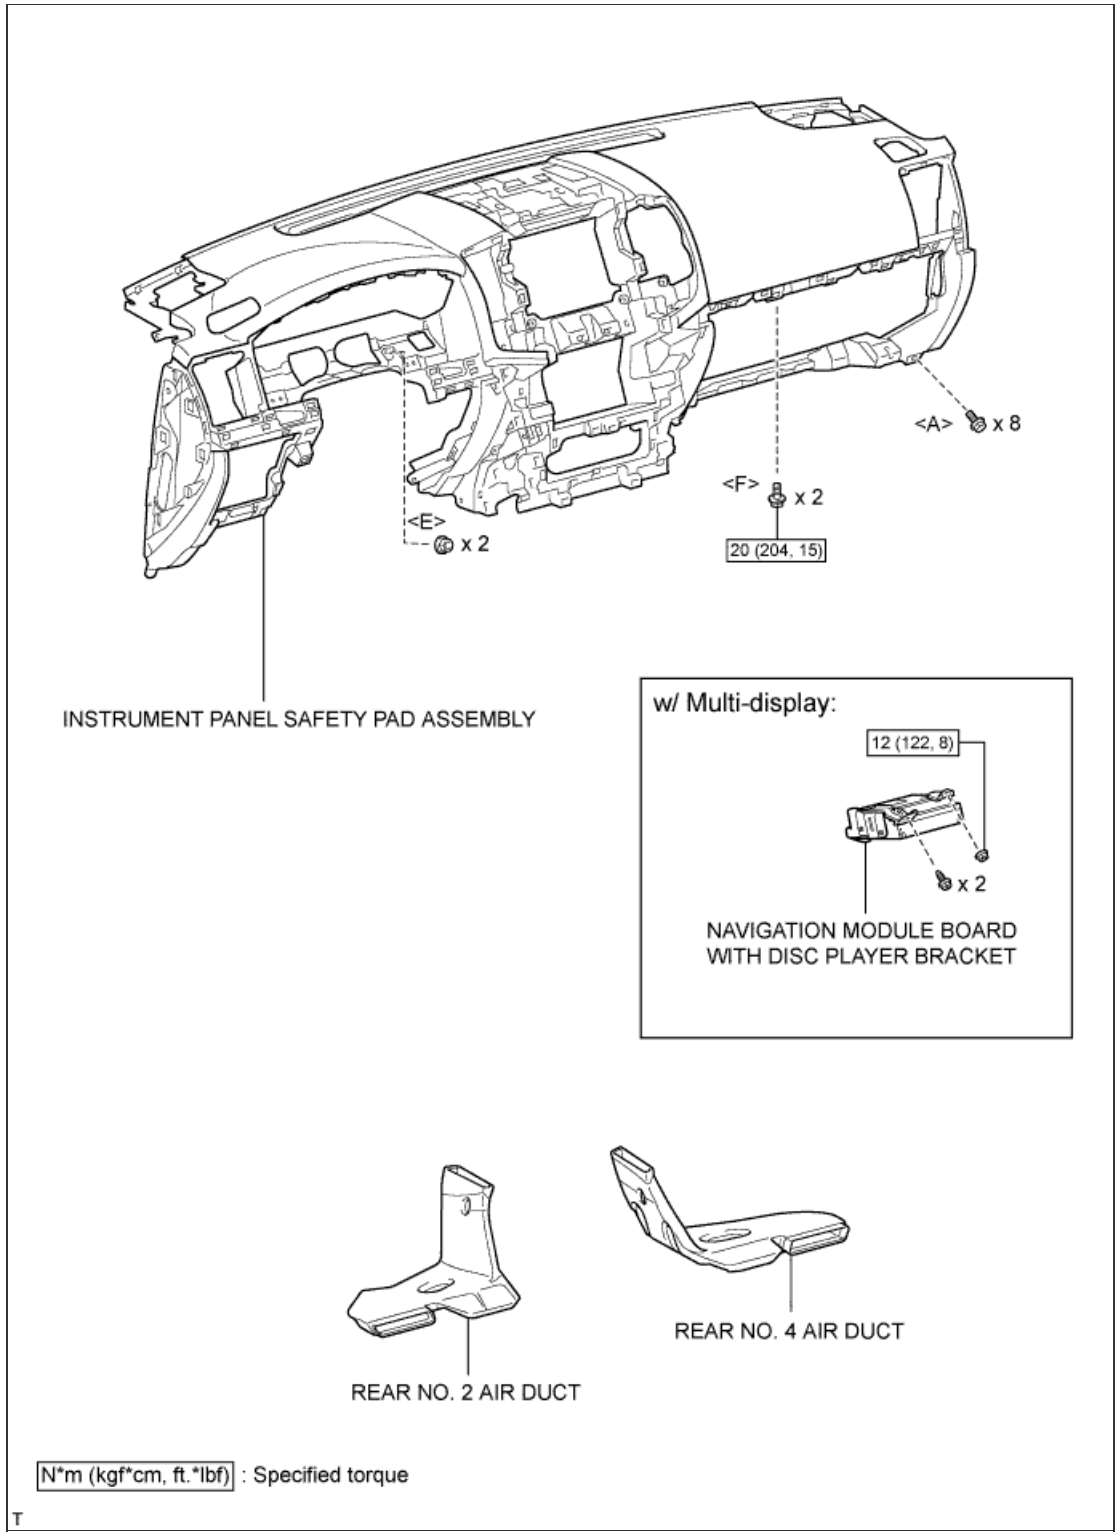

<A> x 8
<F> x 2
20 (204, 15)
<E> x 2
INSTRUMENT PANEL SAFETY PAD ASSEMBLY
w/ Multi-display:
12 (122, 8)
x 2
NAVIGATION MODULE BOARD
WITH DISC PLAYER BRACKET
REAR NO. 4 AIR DUCT
REAR NO. 2 AIR DUCT
N*m (kgf*cm, ft.*lbf) : Specified torque

T

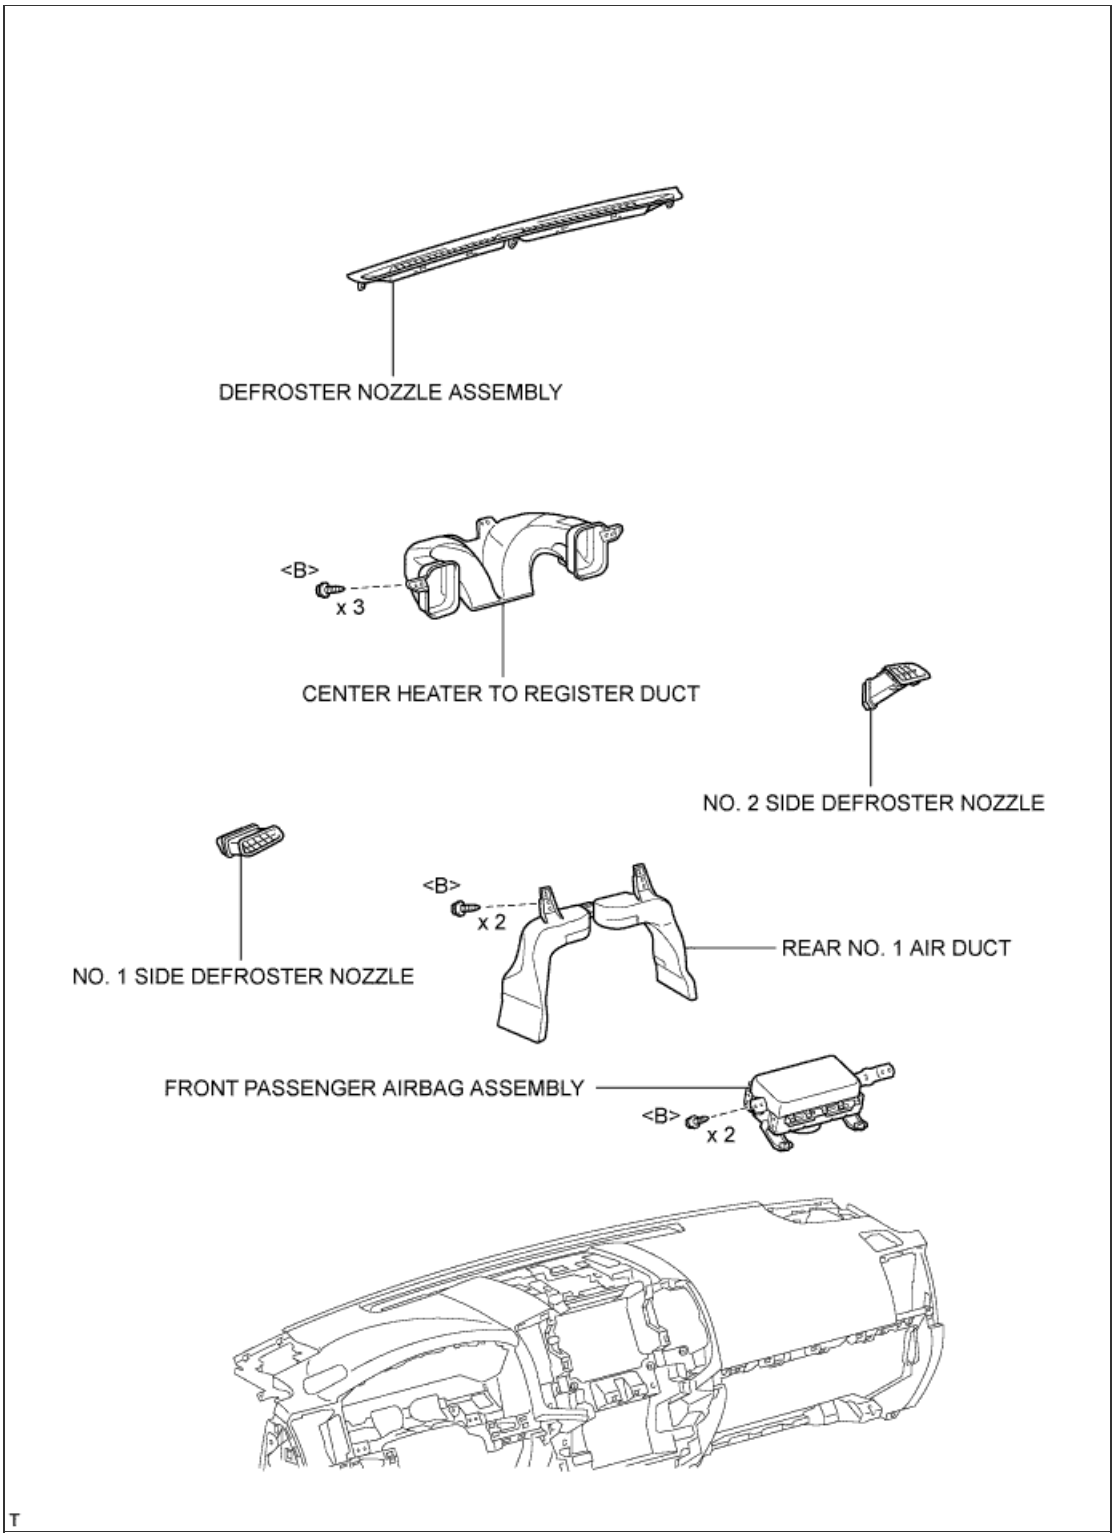
DEFROSTER NOZZLE ASSEMBLY
<B>
x 3
CENTER HEATER TO REGISTER DUCT
NO. 2 SIDE DEFROSTER NOZZLE
NO. 1 SIDE DEFROSTER NOZZLE
<B>
x 2
REAR NO. 1 AIR DUCT
FRONT PASSENGER AIRBAG ASSEMBLY
<B>
x 2
T

for LHD:

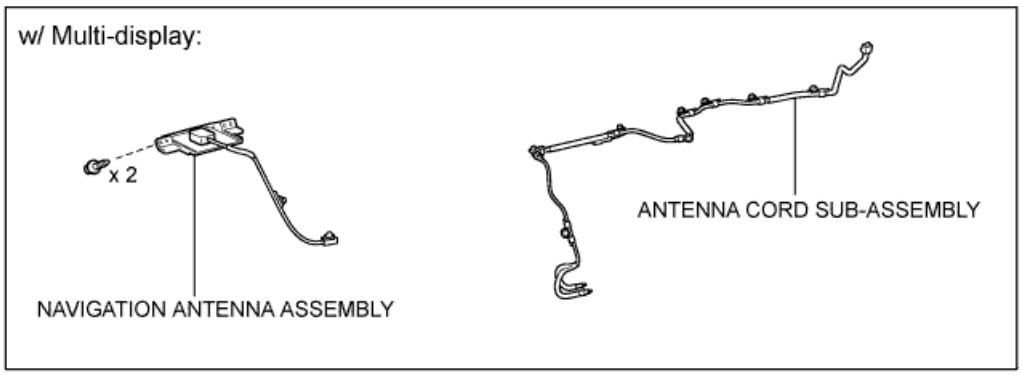

w/ Multi-display:
x 2
NAVIGATION ANTENNA ASSEMBLY
ANTENNA CORD SUB-ASSEMBLY

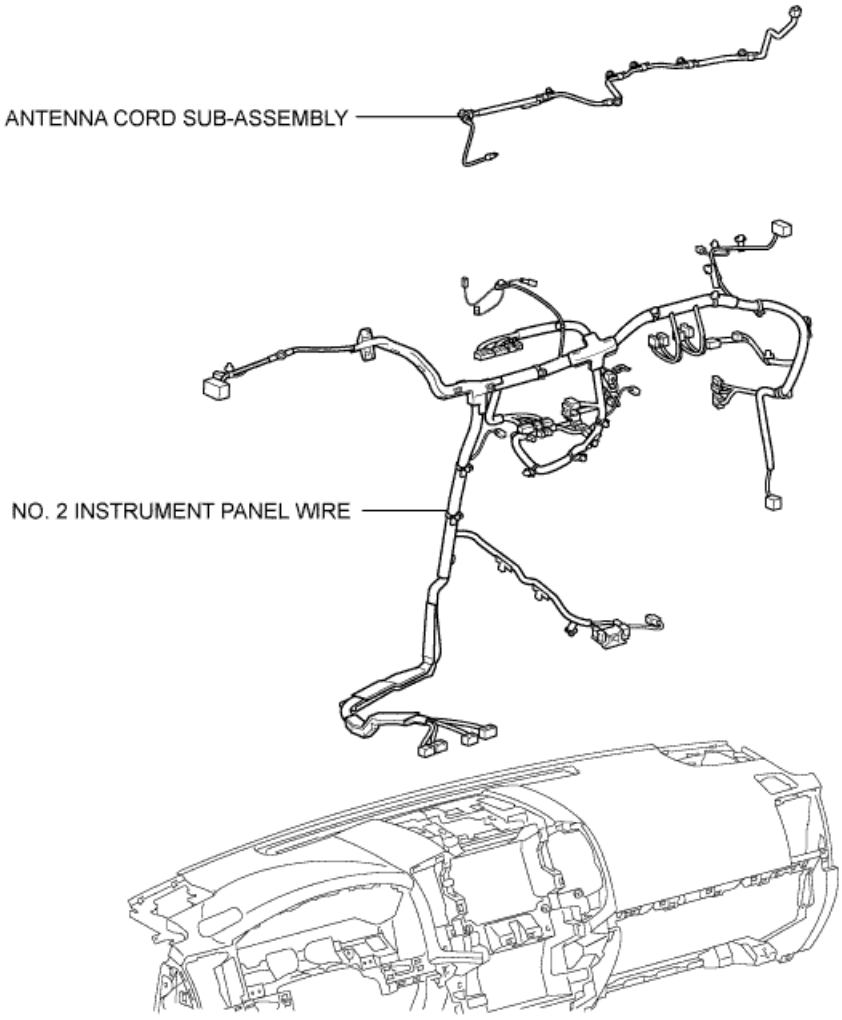

ANTENNA CORD SUB-ASSEMBLY
NO. 2 INSTRUMENT PANEL WIRE


T


for RHD:

w/ Multi-display:

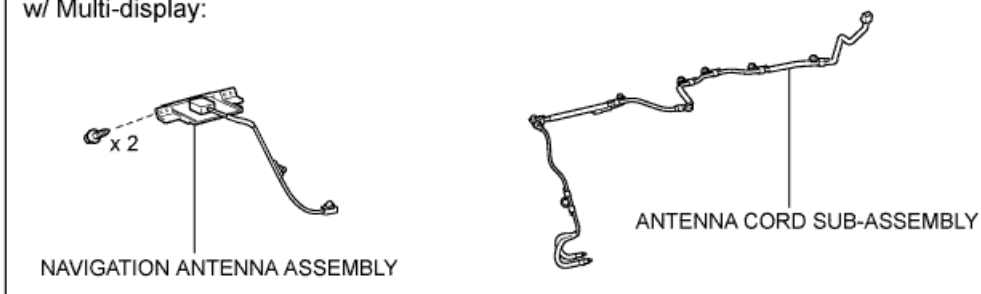

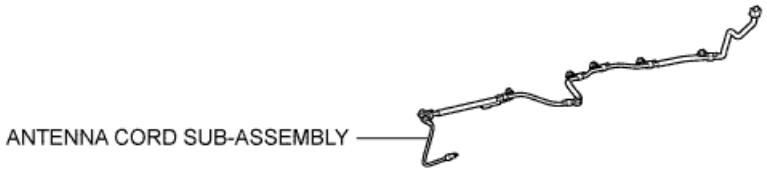

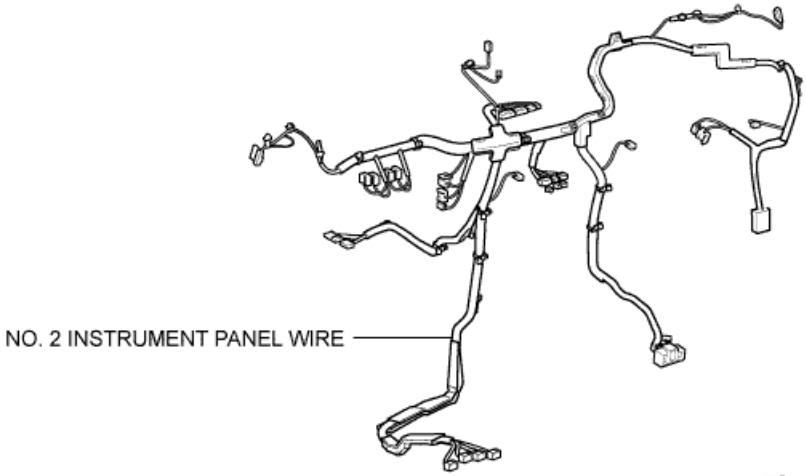

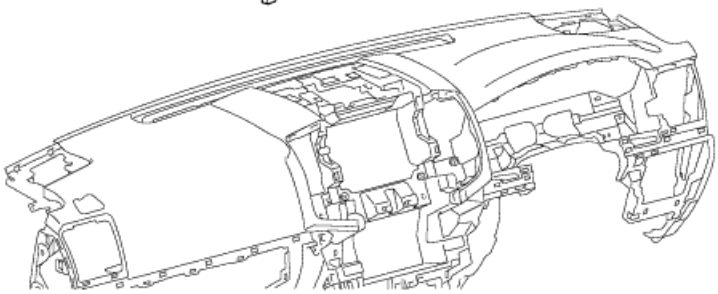

T






for Preparation Click here

1. TABLE OF BOLT, SCREW AND NUT

HINT:

All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet code in the table below.

mm (in.) (L = Length)

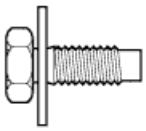Code	Shape	Code	Shape	Code	Shape
<A>	 φ 6 (0.236) L=16 (0.630)	<B>	 φ 5 (0.197) L=18 (0.709)	<C>	 φ 6 (0.236) L=22 (0.866)
<D>	 φ 5 (0.197) L=15 (0.59)	<E>	 φ 6 (0.236)	<F>	 φ 8 (0.315) L=20 (0.787)

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM (w/ Cool Box)

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

3. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

a. for Power Tilt and Power Telescopic:

i. Disable the Autoaway/Return function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:

Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.

ii. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully extend and lower the steering column.

b. Turn the engine switch off and disconnect the cable from the negative (-) battery terminal.

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


4. REMOVE LOWER NO. 3 STEERING WHEEL COVER

a. Detach the 2 claws and remove the steering wheel cover.

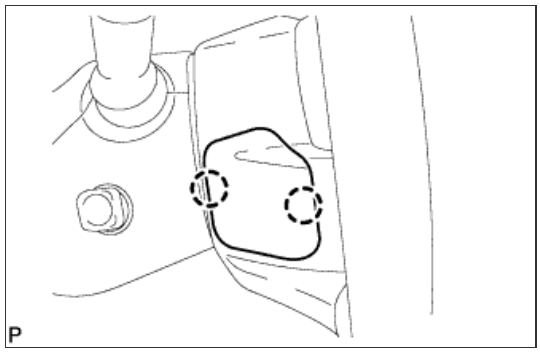

5. REMOVE LOWER NO. 2 STEERING WHEEL COVER


a. Detach the 2 claws and remove the steering wheel cover.

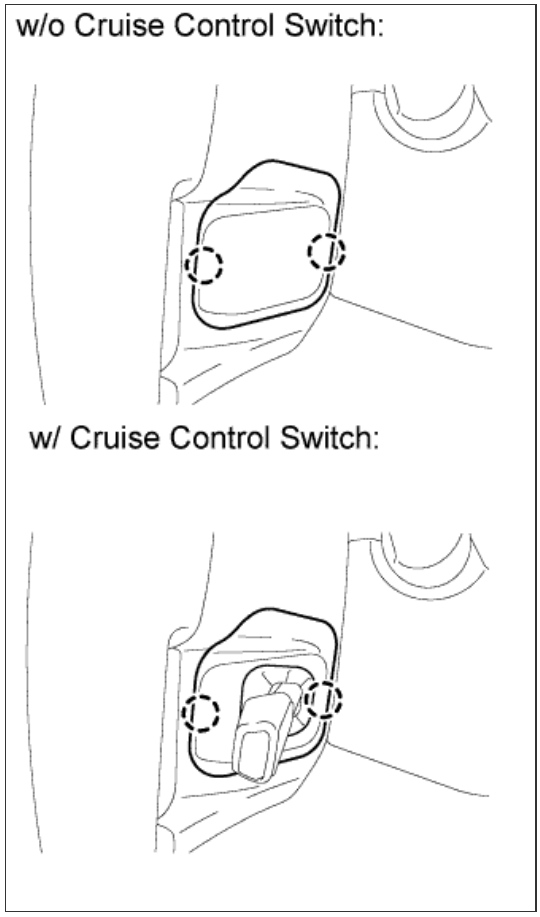

6. REMOVE STEERING PAD

a. Using a T30 "TORX" socket wrench, loosen the 2 screws until the groove along

the screw circumference catches on the screw case.

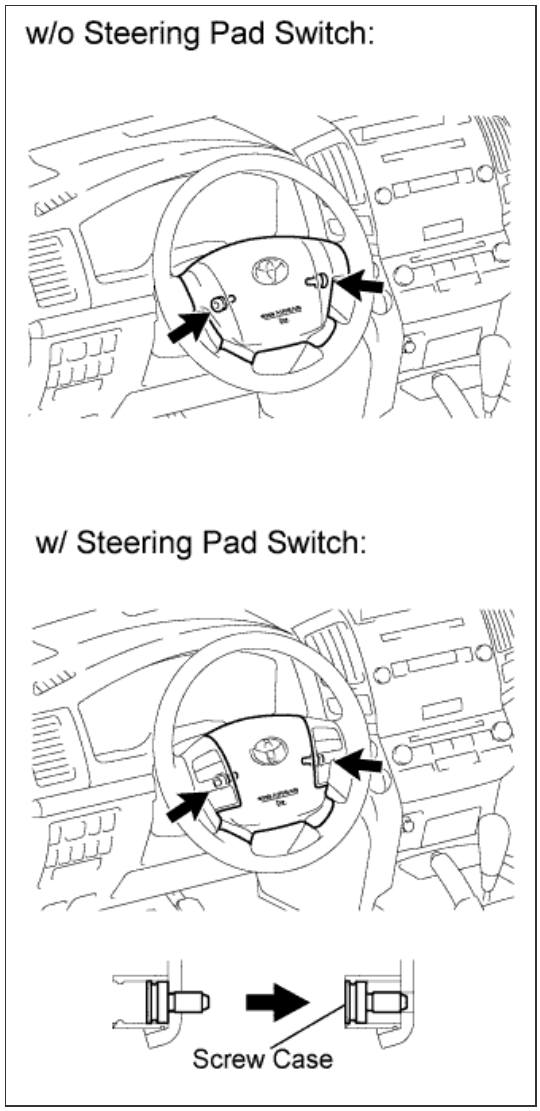

b. Pull out the steering pad from the steering wheel, as shown in the illustration. Then support the steering pad with one hand.

NOTICE:


When removing the steering pad, do not pull the airbag wire harness.

c. Disconnect the horn connector.

d. Disconnect the 2 connectors and remove the steering pad.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

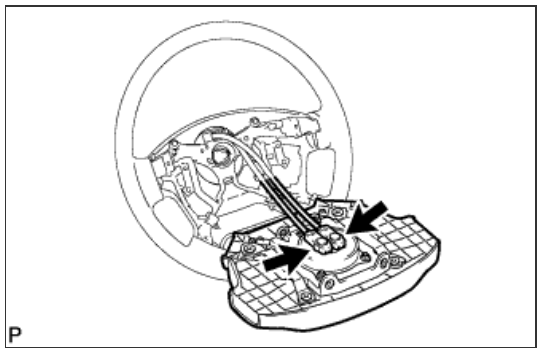

7. REMOVE STEERING WHEEL ASSEMBLY


a. Remove the steering wheel set nut.

b. Put matchmarks on the steering wheel and main shaft.

c. Using SST, remove the steering wheel assembly.

SST

09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05011)

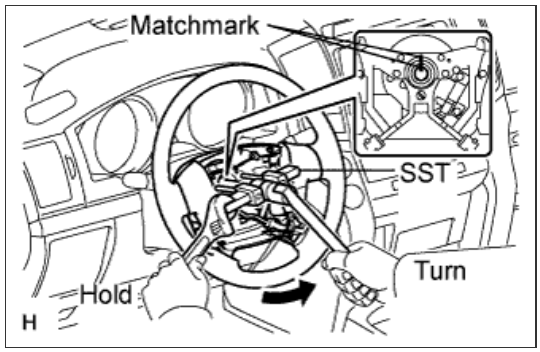


8. REMOVE LOWER STEERING COLUMN COVER (for Power Tilt and Power Telescopic Steering Column)

a. Remove the 3 screws.

b. Detach the 2 claws to remove the lower steering column cover.

NOTICE:

Do not damage the tilt and telescopic switch.

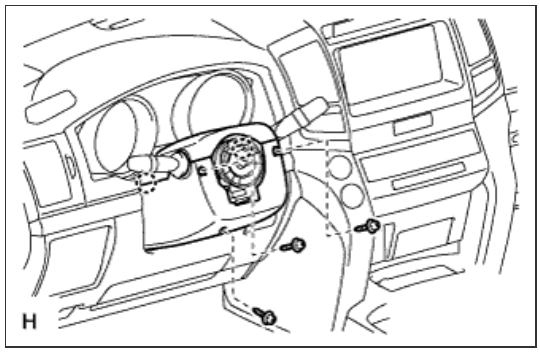


9. REMOVE LOWER STEERING COLUMN COVER (for Manual Tilt and Manual Telescopic Steering Column)

a. Remove the 3 screws.

b. Detach the 2 claws to remove the lower steering column cover.

NOTICE:


Do not damage the tilt and telescopic switch.

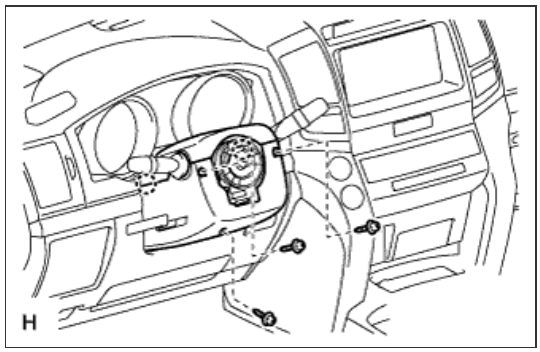

10. REMOVE UPPER STEERING COLUMN COVER (for Power Tilt and Power Telescopic Steering Column)

a. Detach the 4 clips.


b. Detach the claw to remove the upper steering column cover.

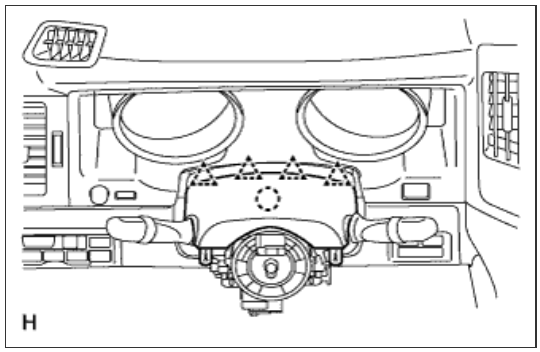

11. REMOVE UPPER STEERING COLUMN COVER (for Manual Tilt and Manual Telescopic Steering Column)

a. Detach the 4 clips.

b. Detach the claw to remove the upper steering column cover.

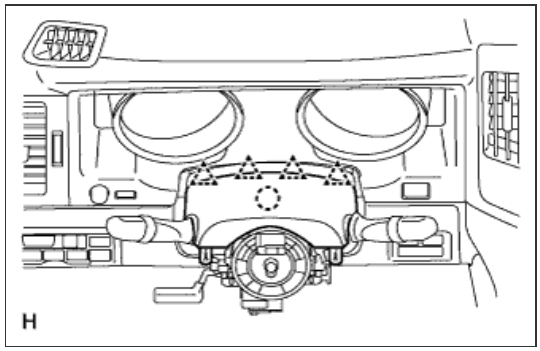

12. REMOVE TILT AND TELESCOPIC SWITCH (for Power Tilt and Power Telescopic Steering Column)

a. Disconnect the switch connector.


b. Using a screwdriver, detach the claw and pull out the switch.

NOTICE:

Pushing on the claw too hard will break the claw.


HINT:

Tape the screwdriver tip before use.

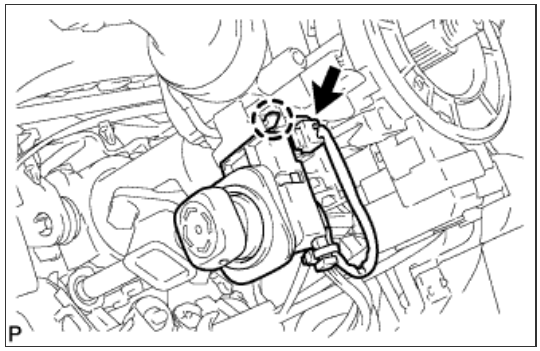


13. REMOVE COMBINATION SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (for Power Tilt and Power Telescopic Steering Column)

a. Disconnect the 5 connectors from the turn signal switch with spiral cable.

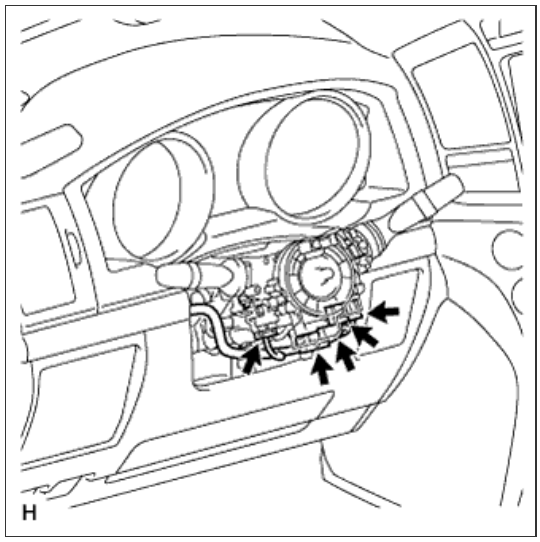


b. Using pliers, grip the claws of the clamp and remove the turn signal switch with spiral cable from the steering column.

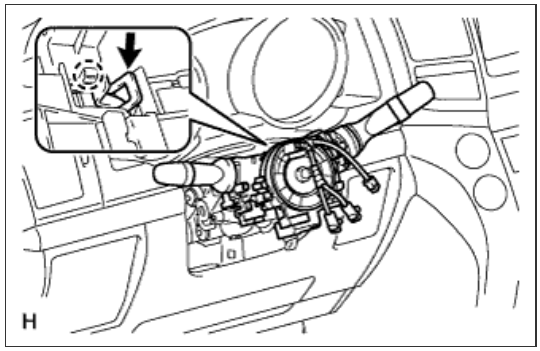


14. REMOVE COMBINATION SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (for Manual Tilt and Manual Telescopic Steering Column)

a. Disconnect the 5 connectors from the combination switch with spiral cable.

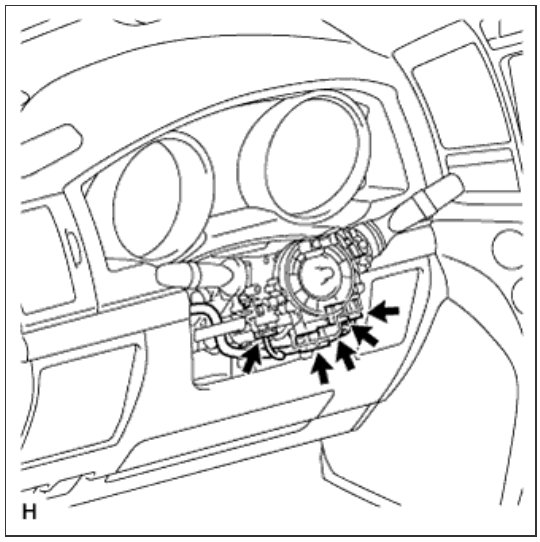

b. Using pliers, grip the claws of the clamp and remove the combination switch with spiral cable from the steering column.

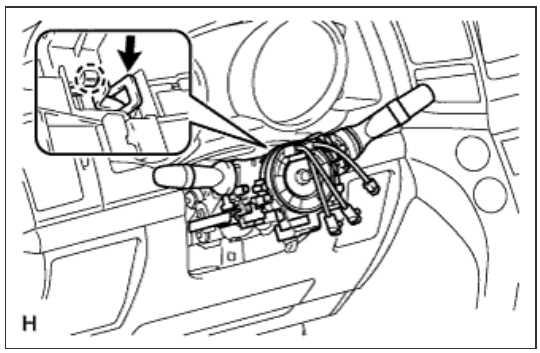

15. REMOVE FRONT SEAT ASSEMBLY LH (for Power Seat)

a. Remove the front seat assembly LH (Click here).

16. REMOVE FRONT SEAT ASSEMBLY LH (for Manual Seat)

a. Remove the front seat assembly LH (Click here).

17. REMOVE FRONT SEAT ASSEMBLY RH (for Power Seat)

a. Remove the front seat assembly RH (Click here).


18. REMOVE FRONT SEAT ASSEMBLY RH (for Manual Seat)

a. Remove the front seat assembly RH (Click here).

19. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

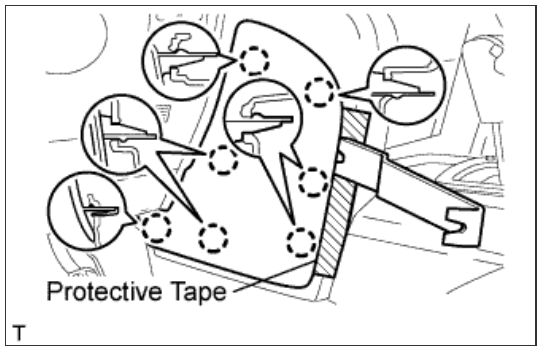


20. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

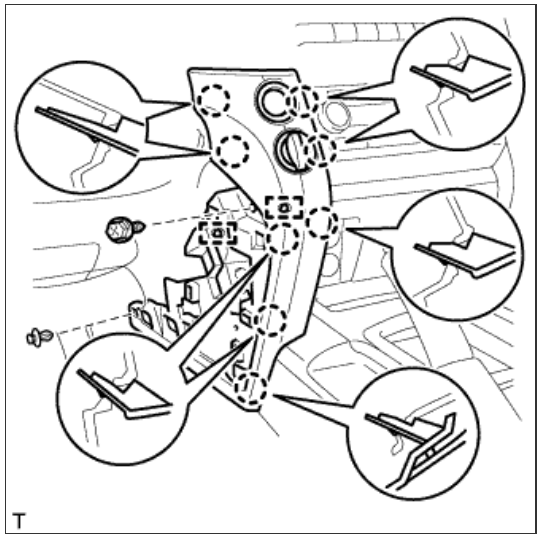

21. REMOVE NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




22. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

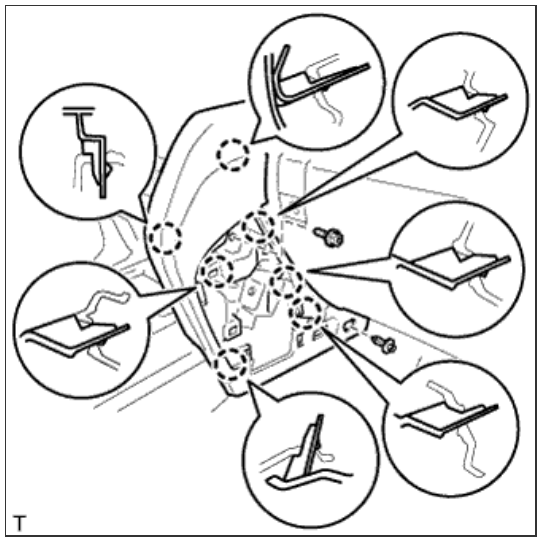

23. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


a. Twist the shift lever knob in the direction indicated by the arrow and remove it.

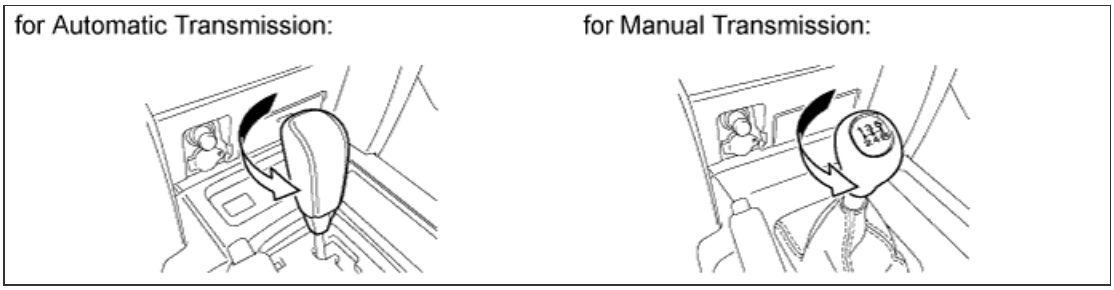

24. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 7 claws.

b. Disconnect the connectors and remove the panel.

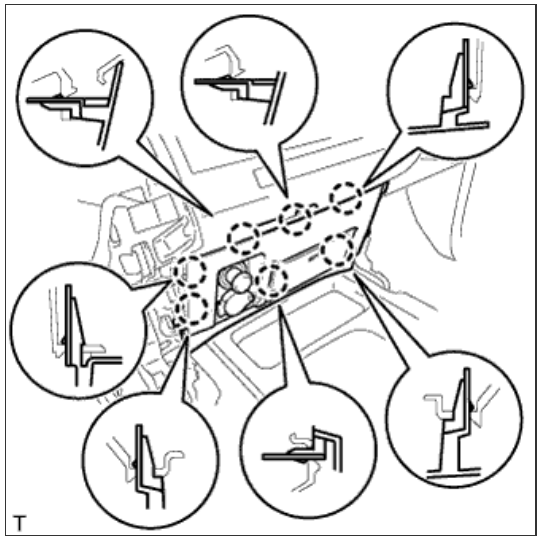


25. REMOVE REAR UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 9 claws and remove the panel.

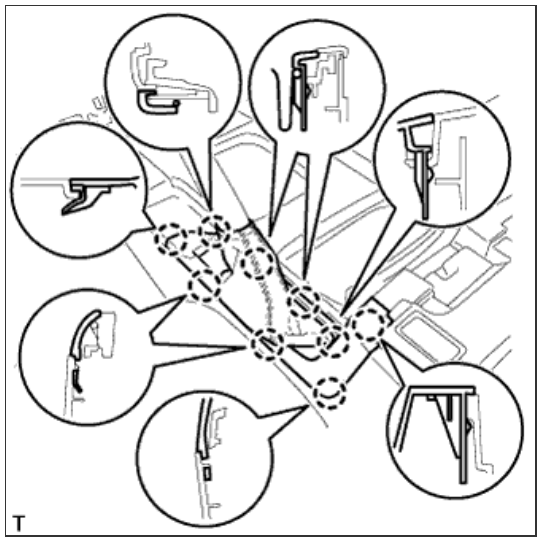

26. REMOVE CONSOLE CUP HOLDER BOX SUB-ASSEMBLY


a. Detach the 4 claws and remove the box.

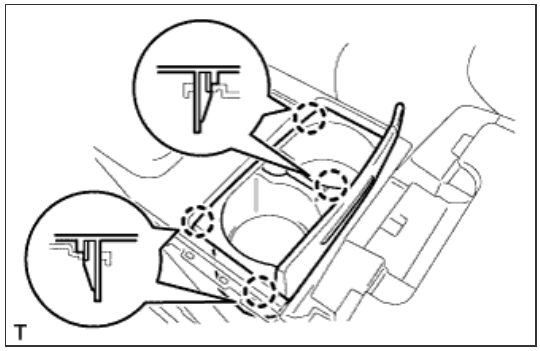

27. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Detach the 14 claws.

b. Disconnect the connectors and remove the console panel.

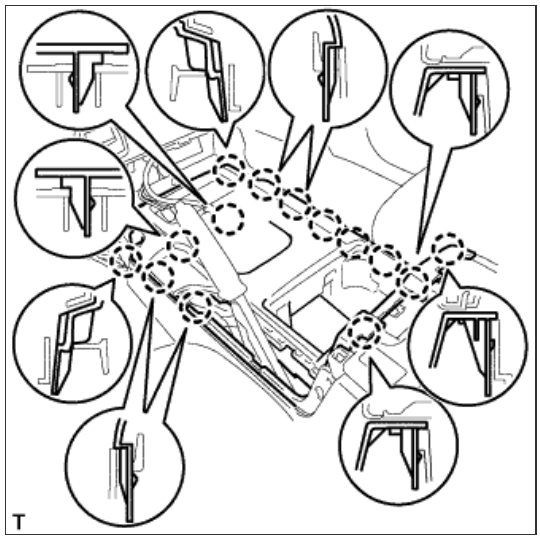

28. REMOVE NO. 1 COOLER COVER (w/ Cool Box)

a. Detach the clamp on the lower part of the cooler cover, and then pull the cooler cover upward to remove it.

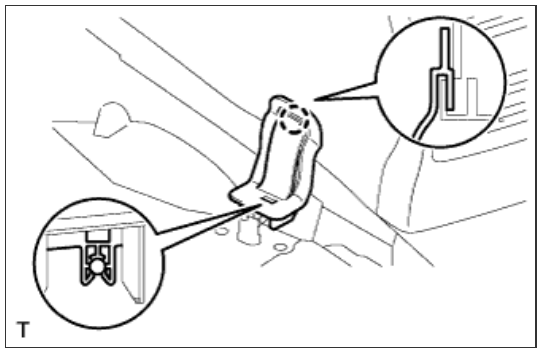


29. REMOVE REAR CONSOLE END PANEL SUB-ASSEMBLY


a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 8 claws.

c. Remove the end panel and disconnect the connectors and 2 clamps.

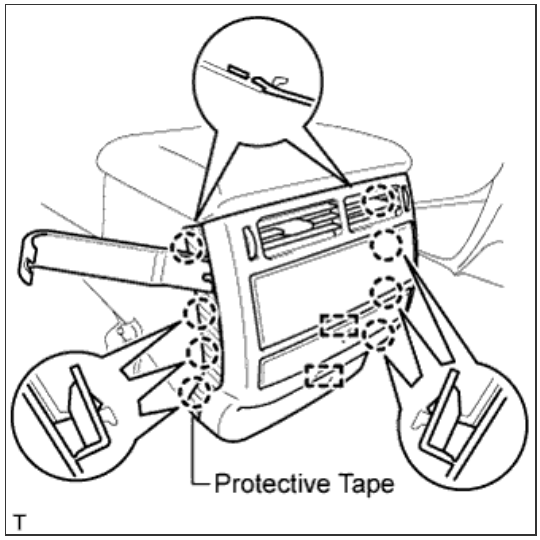


30. REMOVE REAR CONSOLE BOX SUB-ASSEMBLY (w/o Cool Box)

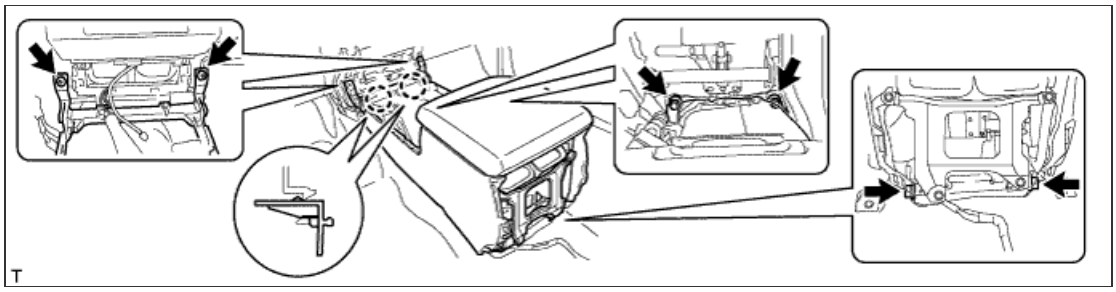

a. Remove the 4 bolts and 2 screws.

b. Detach the 2 claws and remove the console box.

31. REMOVE COOLING BOX ASSEMBLY (w/ Cool Box)

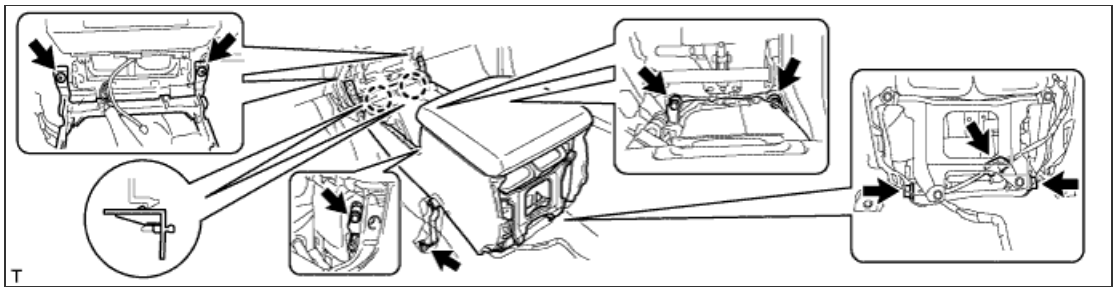

a. Remove the 4 bolts and 2 screws.

b. Remove the 2 bolts and disconnect the 2 cooler pipes.

c. Remove the 2 O-rings from the cooler pipes.


d. Disconnect the connector.

e. Detach the 2 claws and remove the cooling box.

32. REMOVE INSTRUMENT SIDE PANEL LH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 6 claws and remove the side panel.

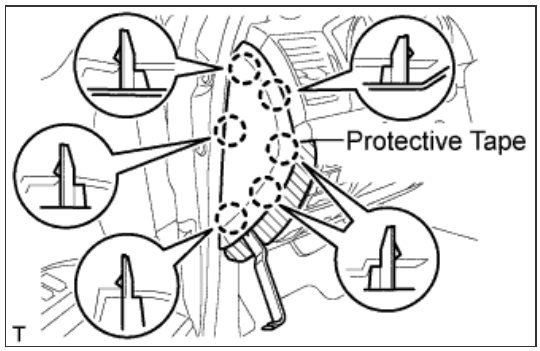

33. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

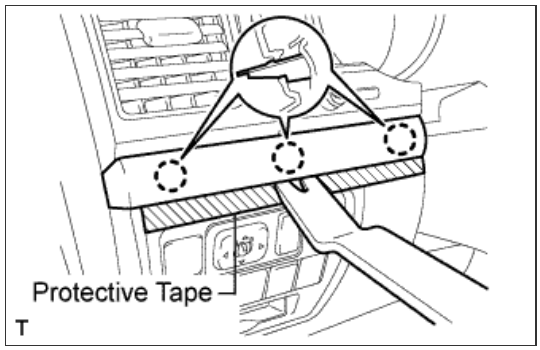

34. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

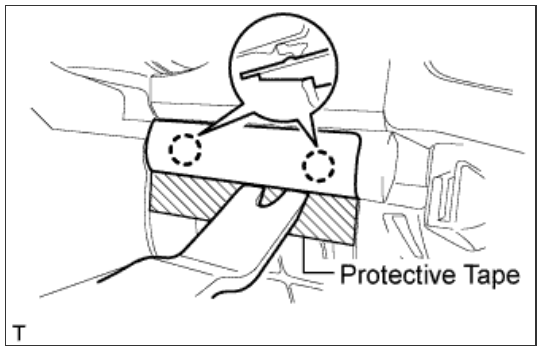

35. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (w/ Multi-information Display)


a. Detach the 9 claws.

b. Remove the finish panel and then disconnect the connector.

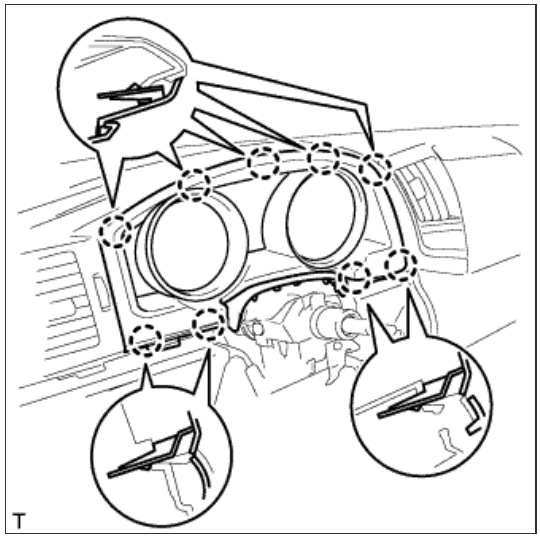

36. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (w/o Multi-information Display)


a. Detach the 9 claws remove the finish panel.

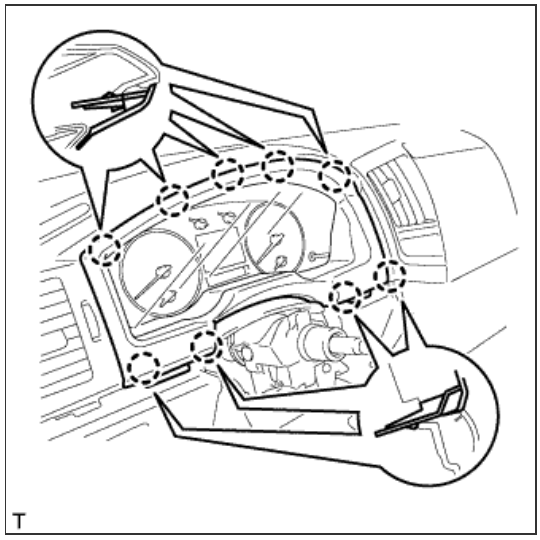

37. REMOVE COMBINATION METER ASSEMBLY (w/ Multi-information Display)

a. Remove the 4 screws.


b. Disconnect the connectors and remove the combination meter.

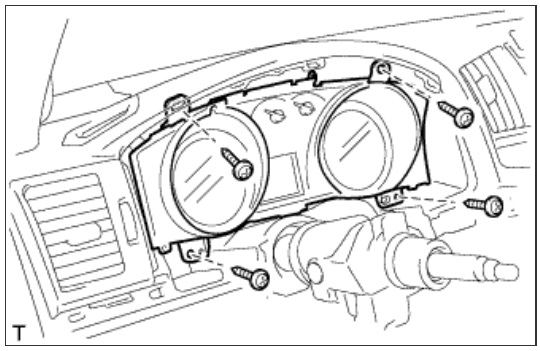

38. REMOVE COMBINATION METER ASSEMBLY (w/o Multi-information Display)


a. Remove the 4 screws.

b. Disconnect the connectors and remove the combination meter.

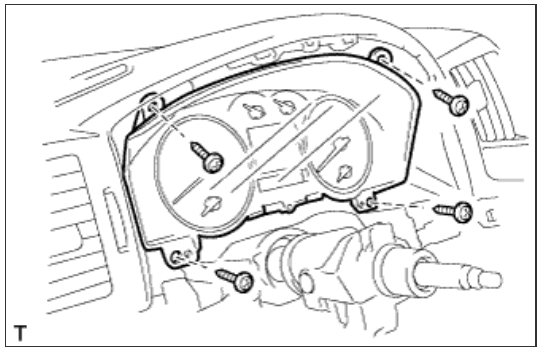


39. REMOVE FRONT DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

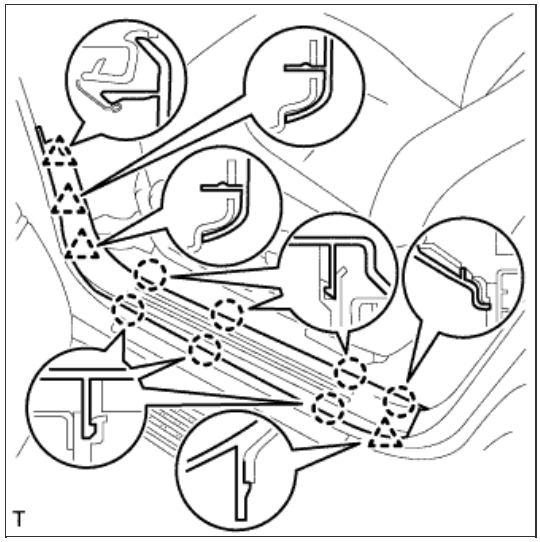

40. REMOVE FRONT DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

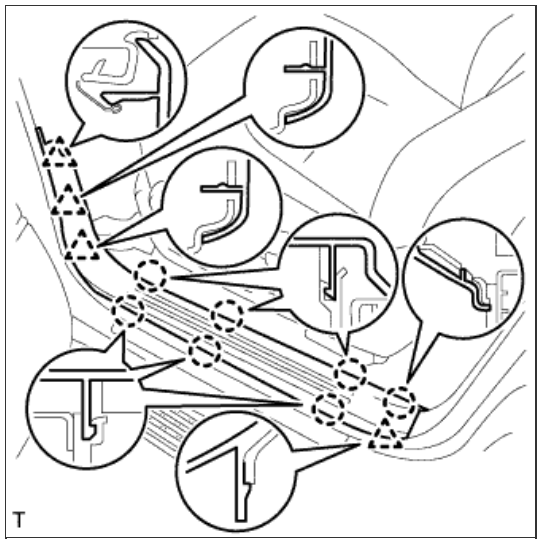


41. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.


c. Remove the under cover and disconnect the connectors.

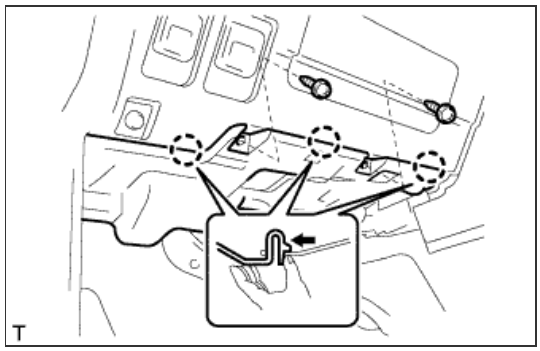

42. REMOVE COWL SIDE TRIM BOARD LH

a. Remove the cap nut.

b. Detach the 2 clips and remove the trim board.

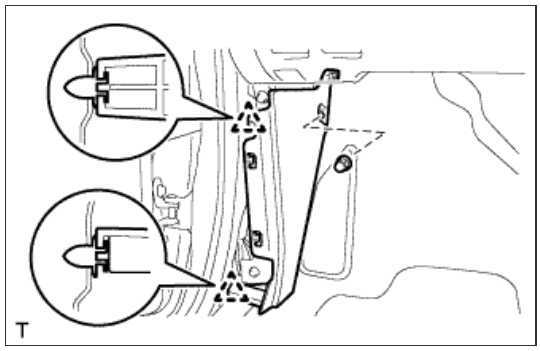


43. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

b. Open the hole cover.

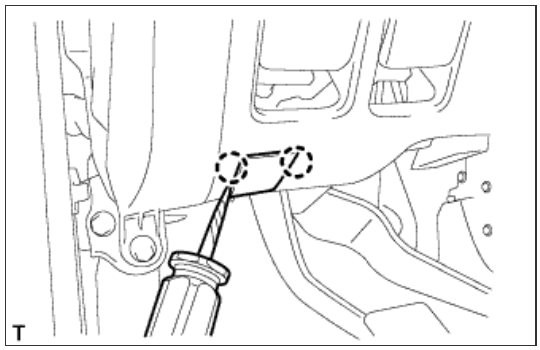


c. Remove the 2 bolts.

d. Detach the 14 claws.

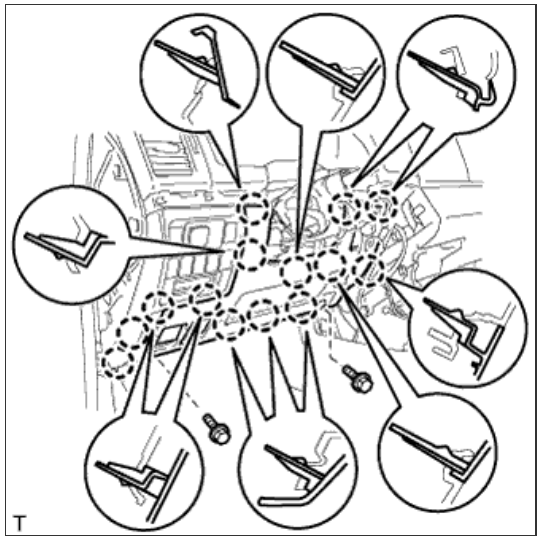


e. Detach the 2 claws and remove the sensor.

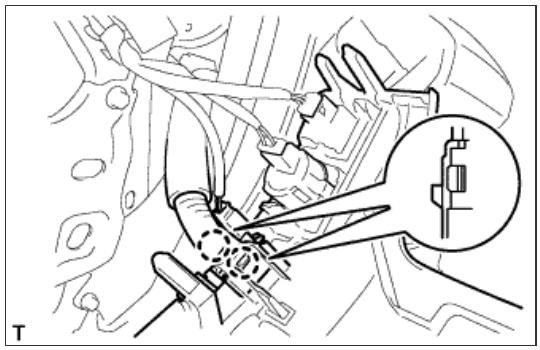

f. Detach the 2 claws and disconnect the 2 control cables.


g. Remove the finish panel and then disconnect the connectors.

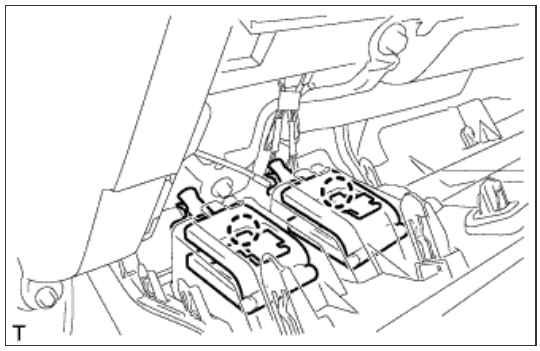

44. REMOVE NO. 1 SWITCH HOLE BASE

a. Detach the 4 claws.

b. Remove the switch hole base and then disconnect the connectors.

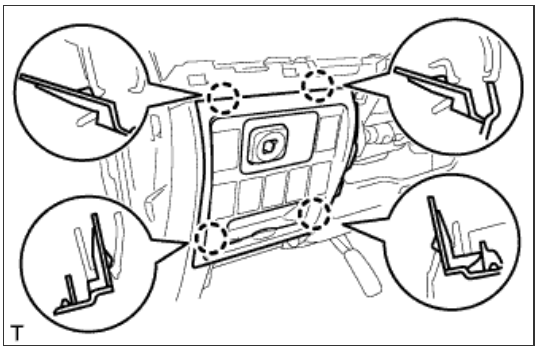


45. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)

a. Remove the 5 bolts and driver side knee airbag.

b. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

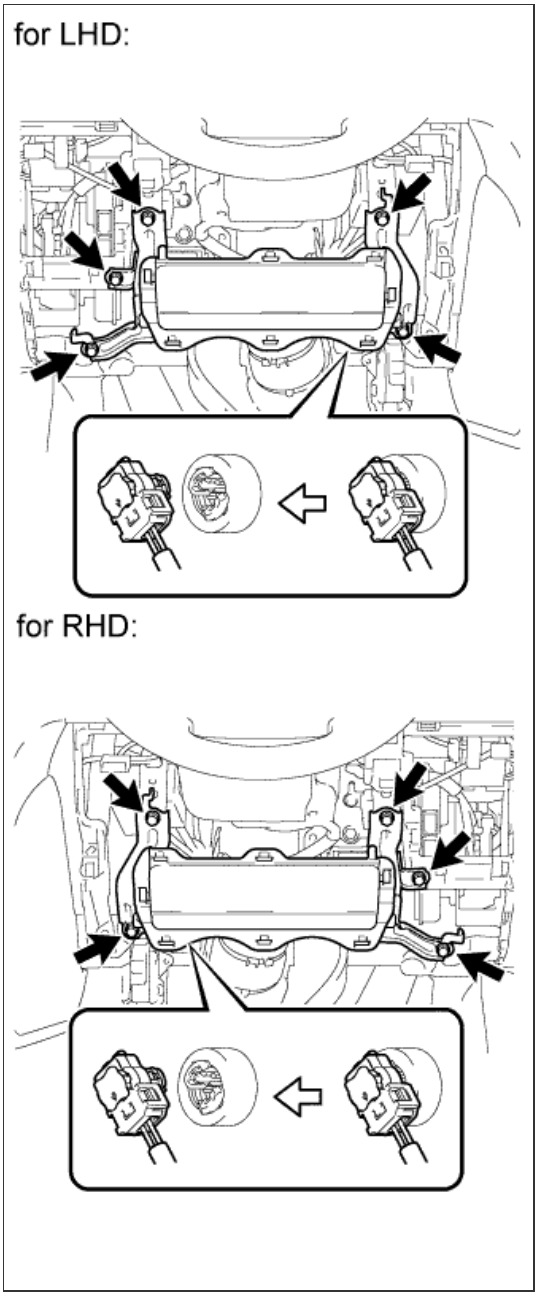

46. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)


a. Detach the 2 claws and disconnect the DLC3.

b. Remove the 5 bolts and instrument panel.

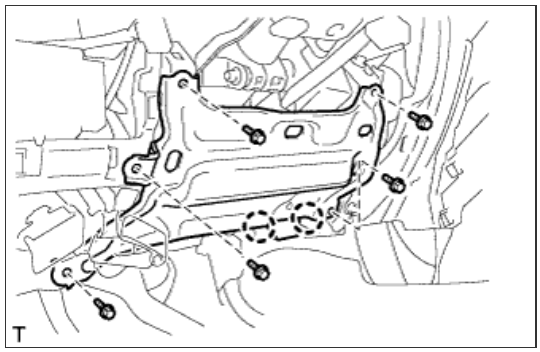

47. REMOVE NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Detach the 4 claws and remove the register.

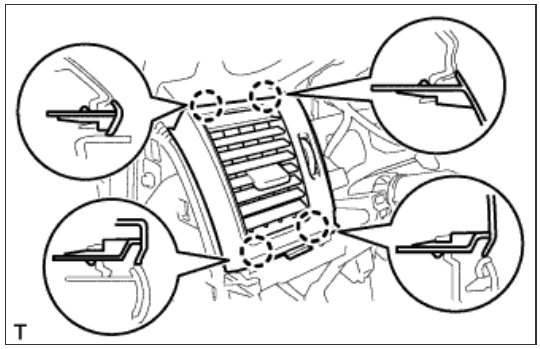

48. REMOVE INSTRUMENT SIDE PANEL RH (w/o Airbag Cut Off Switch)

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws and remove the side panel.

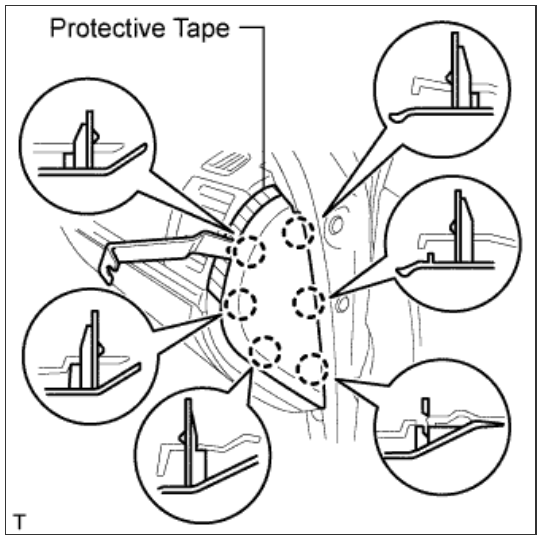


49. REMOVE INSTRUMENT SIDE PANEL RH (w/ Airbag Cut Off Switch)

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.

c. Remove the side panel and disconnect the connector.

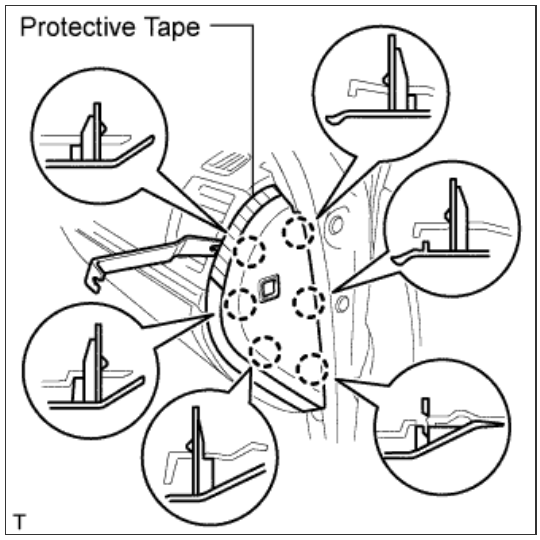

50. REMOVE FRONT DOOR SCUFF PLATE RH (w/o Sliding Roof)

HINT:

Use the same procedures described for the LH side.


51. REMOVE FRONT DOOR SCUFF PLATE RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

52. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)


a. Detach the 4 claws and remove the under cover.

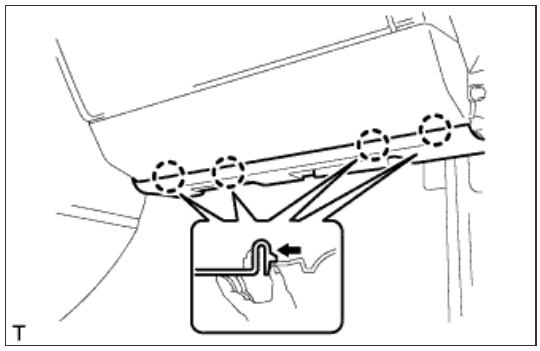

53. REMOVE COWL SIDE TRIM BOARD RH

a. Remove the cap nut.

b. Detach the 2 clips and remove the trim board.

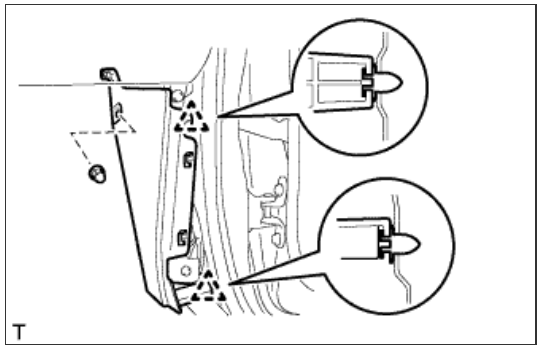

54. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)


a. Remove the 4 bolts.

b. Detach the 4 claws and remove the front passenger side knee airbag.

c. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

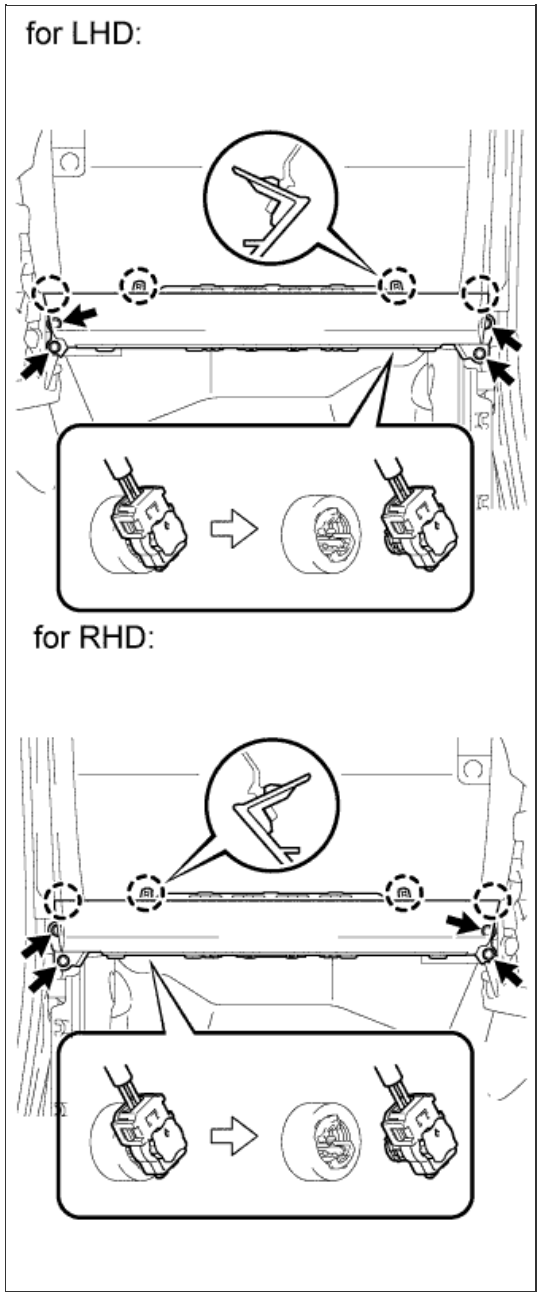

55. REMOVE LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Remove the 2 bolts.


b. Detach the 4 claws and remove the instrument panel.

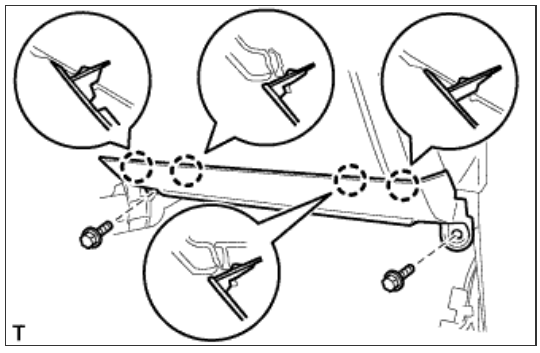

56. REMOVE NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws and remove the panel garnish.

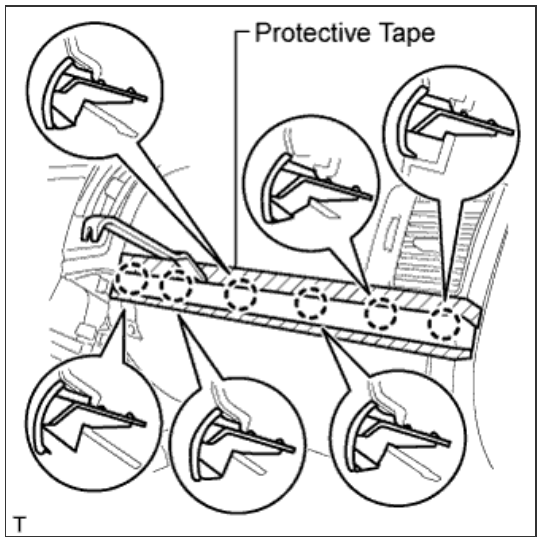

57. REMOVE INSTRUMENT PANEL BOX DOOR KNOB

a. Using a moulding remover, detach the 2 claws and remove the knob.

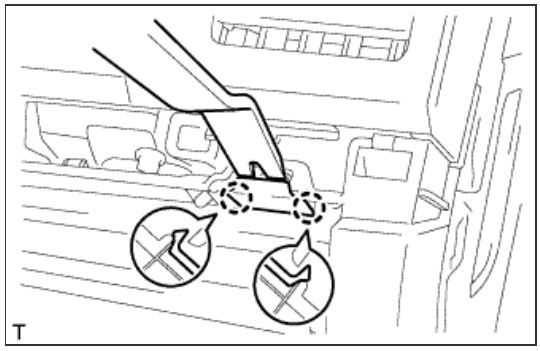


58. REMOVE LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Remove the 4 bolts.


b. Detach the 3 claws.

c. Remove the finish panel and then disconnect the connector.

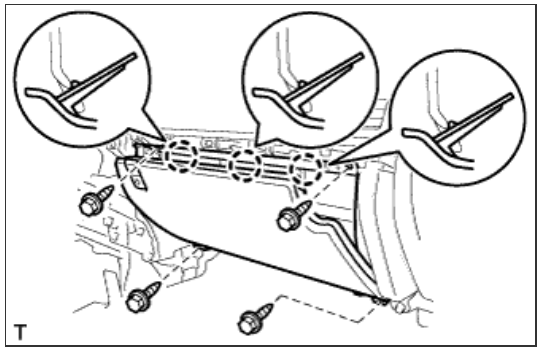

59. REMOVE NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Detach the 4 claws and remove the register.

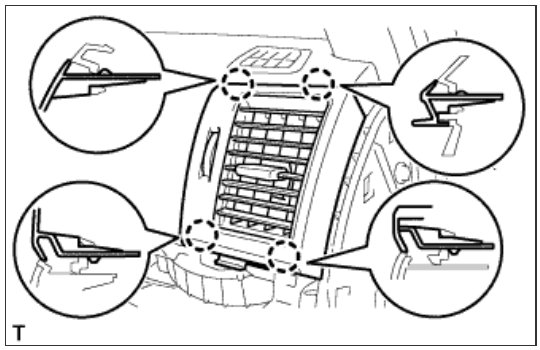


60. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY (w/o Sliding Roof)

HINT:


Use the same procedure to remove the front assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

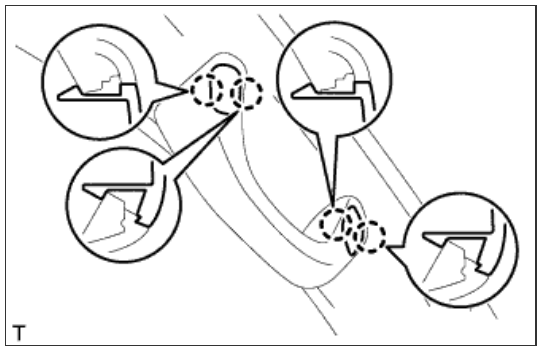

b. Remove the 2 bolts.

c. Detach the 2 claws and remove the front assist grip.

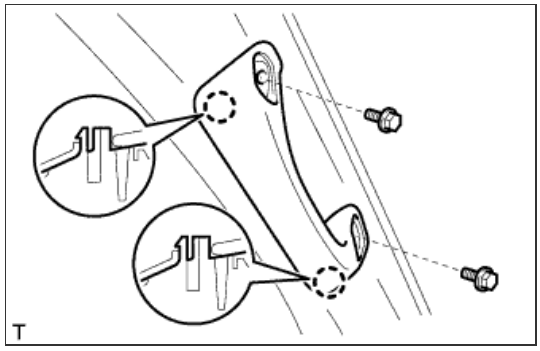


61. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY (w/ Sliding Roof)

HINT:


Use the same procedure to remove the front assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

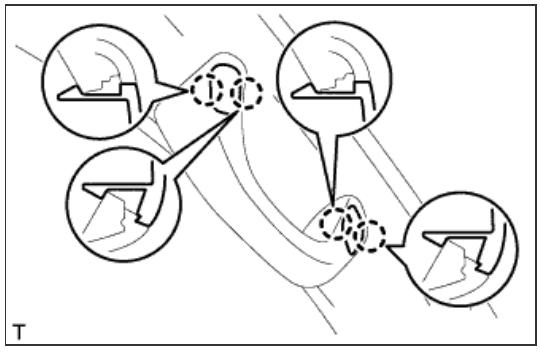

b. Remove the 2 bolts.


c. Detach the 2 claws and remove the front assist grip.

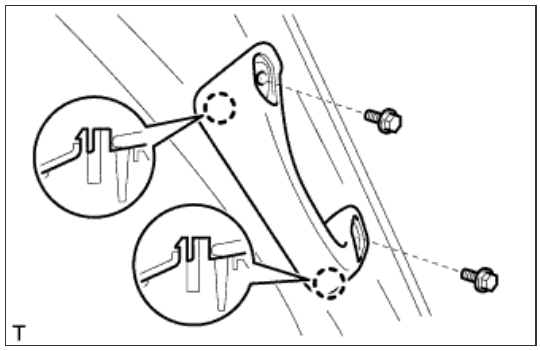

62. REMOVE FRONT PILLAR GARNISH LH (w/o Sliding Roof)

a. Detach the clip and 3 guides, and remove the front pillar garnish.

b. for 9 Speakers:
Disconnect the speaker connector and then remove the front pillar garnish.

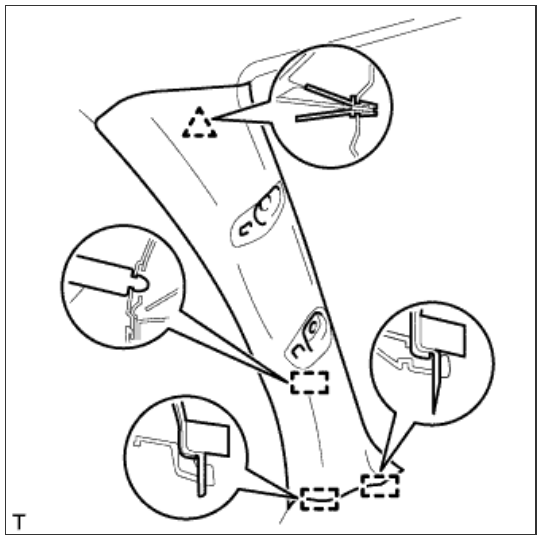


c. Protect the curtain shield airbag.

i. Thoroughly cover the airbag with a cloth or nylon sheet and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:


Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

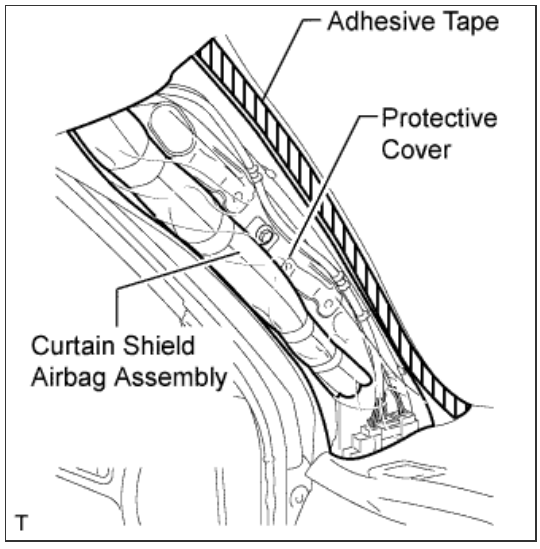

63. REMOVE FRONT PILLAR GARNISH LH (w/ Sliding Roof)

a. Detach the clip 3 guides, and remove the front pillar garnish.

b. for 9 Speakers:
Disconnect the speaker connector and then remove the front pillar garnish.

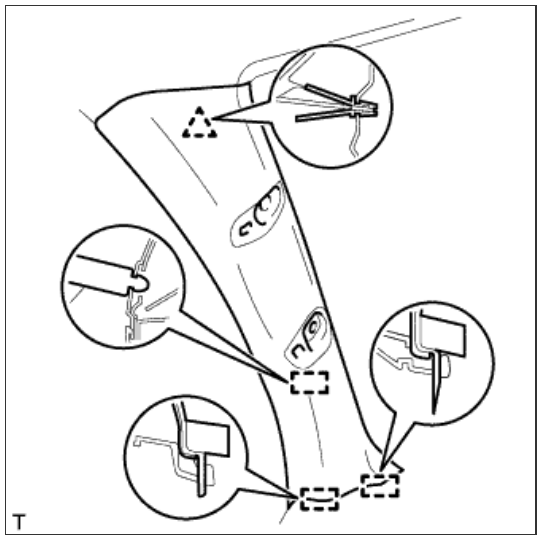


c. Protect the curtain shield airbag.

i. Thoroughly cover the airbag with a cloth or nylon sheet and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

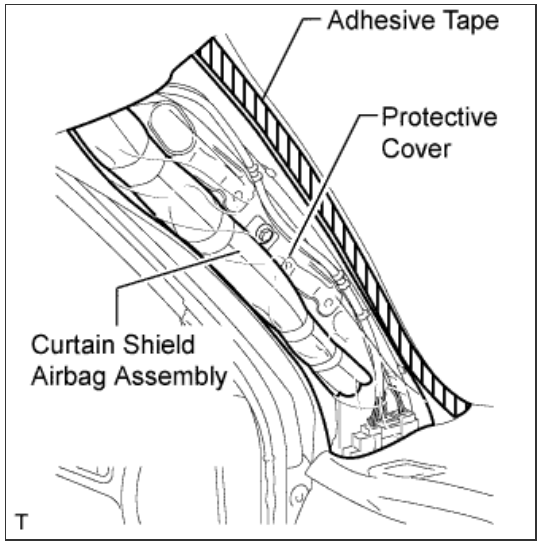

64. REMOVE FRONT PILLAR GARNISH RH (w/o Sliding Roof)

HINT:

Use the same procedures described for the LH side.


65. REMOVE FRONT PILLAR GARNISH RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

66. REMOVE NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Detach the 8 claws and remove the opening cover.

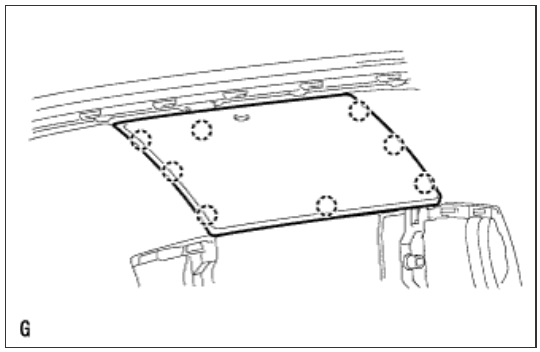


67. REMOVE FRONT NO. 4 SPEAKER ASSEMBLY

a. Remove the 2 bolts.

b. Remove the speaker and then disconnect the speaker connector.


NOTICE:

Do not touch the cone part of the speaker.

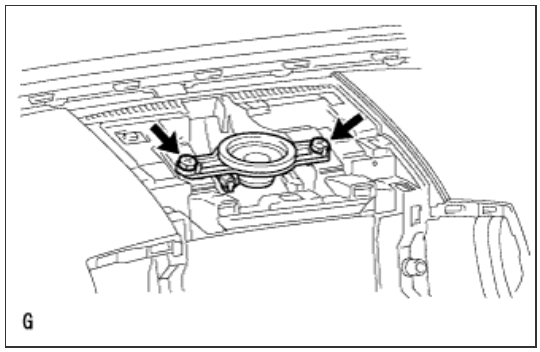

68. REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

a. Detach the 4 claws and remove the speaker panel.

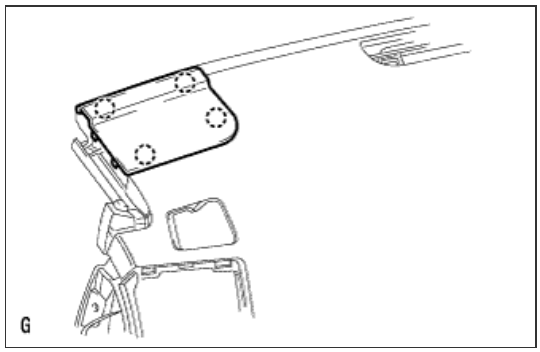

69. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (LH Side)


a. for 9 Speakers Models:

i. Remove the 2 bolts.


ii. Remove the speaker and then disconnect the speaker connector.

NOTICE:

Do not touch the cone part of the speaker.

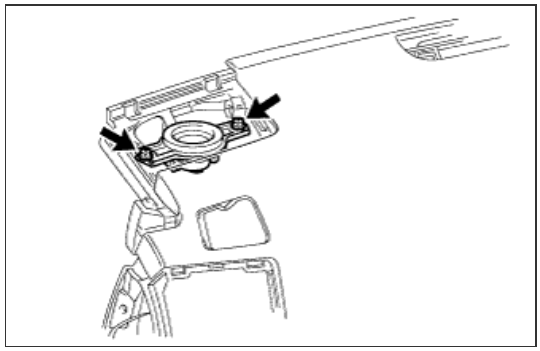

b. except 9 Speakers Models:

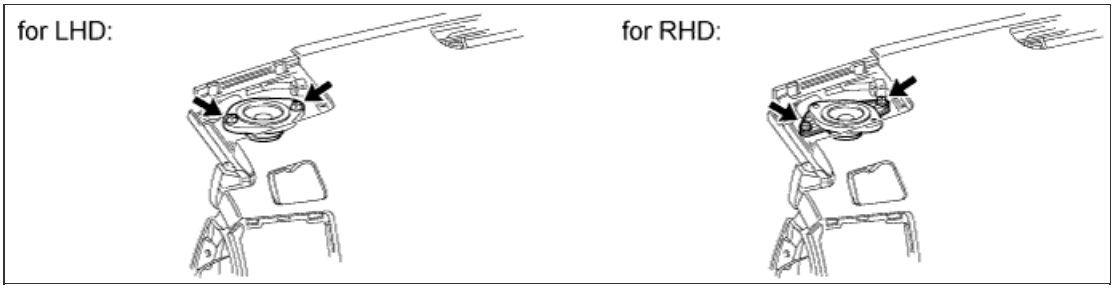

i. Remove the 2 bolts.


ii. Remove the speaker and then disconnect the speaker connector.

NOTICE:

Do not touch the cone part of the speaker.


70. REMOVE NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

a. Detach the 4 claws and remove the speaker panel.

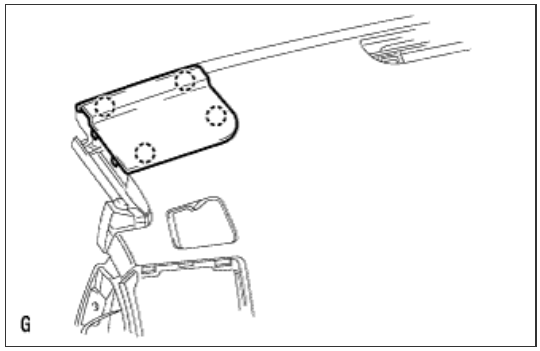

71. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (RH Side)

a. for 9 Speakers Models:

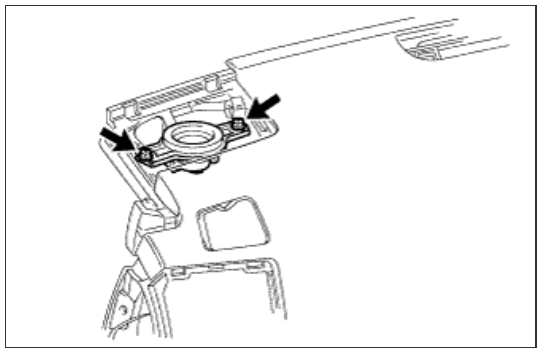


i. Remove the 2 bolts.

ii. Remove the speaker and then disconnect the speaker connector.

NOTICE:

Do not touch the cone part of the speaker.

b. except 9 Speakers Models:

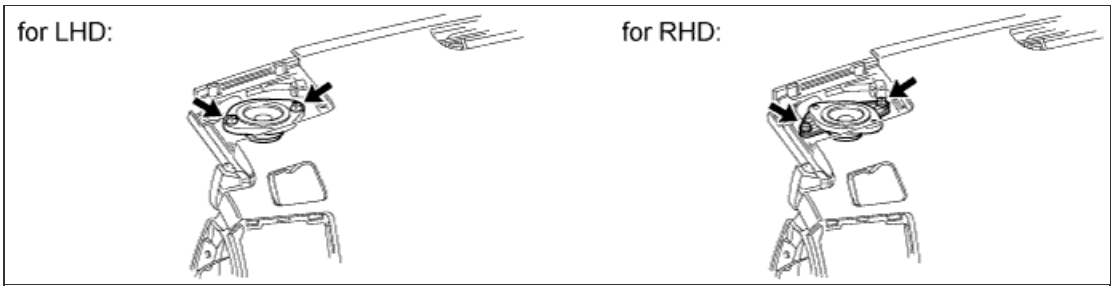

i. Remove the 2 bolts.

ii. Remove the speaker and then disconnect the speaker connector.

NOTICE:

Do not touch the cone part of the speaker.

72. REMOVE NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.



73. REMOVE NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.




74. REMOVE MULTI-DISPLAY ASSEMBLY WITH BRACKET (w/ Multi-display)

a. Remove the 2 screws and 2 bolts.

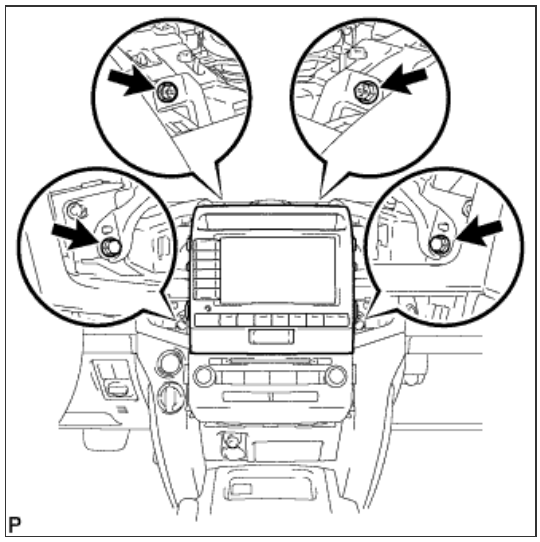

b. Pull the radio receiver to detach the 2 clips and 6 claws on the backside of the display.

c. Disconnect the connectors and remove the display.

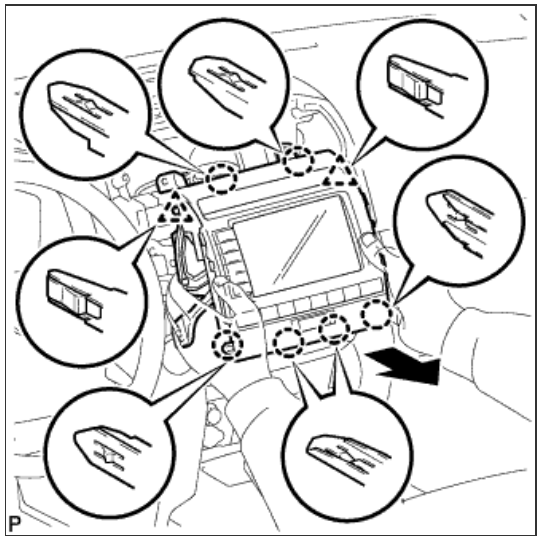


75. REMOVE RADIO RECEIVER ASSEMBLY WITH BRACKET (w/o Multi-display)

a. Remove the 2 screws and 2 bolts.



b. Pull the radio receiver to detach the 10 claws on the backside of the radio receiver.


c. Disconnect the connectors and remove the radio receiver.

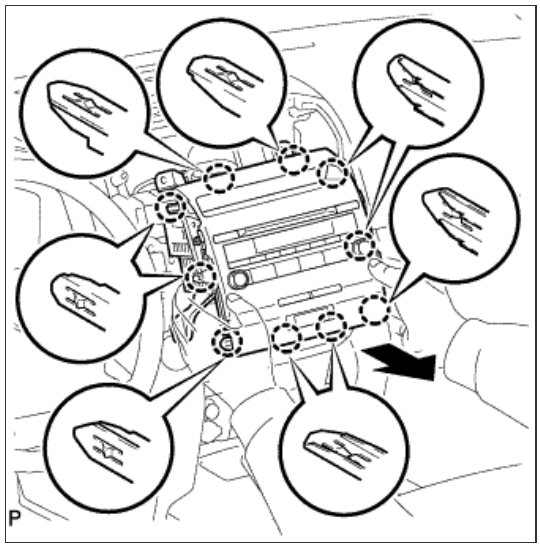

76. REMOVE NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL

a. Detach the 10 claws.


b. Remove the finish panel and then disconnect the connectors.

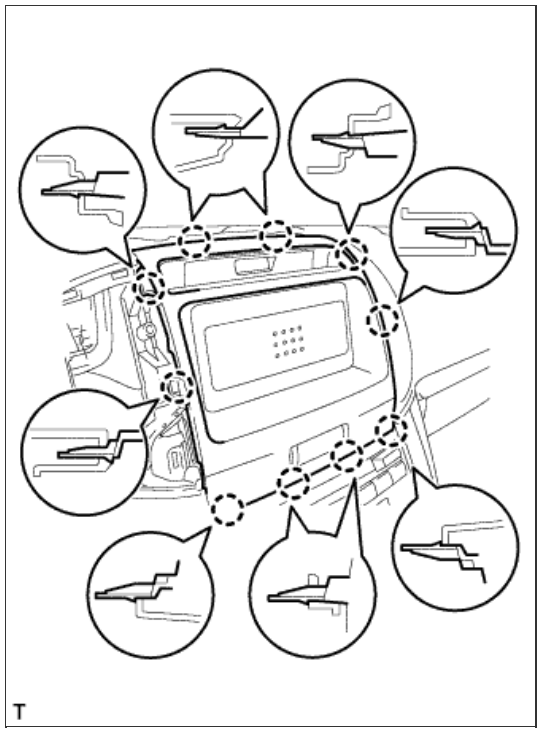

77. REMOVE RADIO RECEIVER ASSEMBLY WITH BRACKET (w/ Cassette Tape Player)

a. Remove the 2 screws and 2 bolts.


b. Disconnect the connectors and remove the radio receiver.

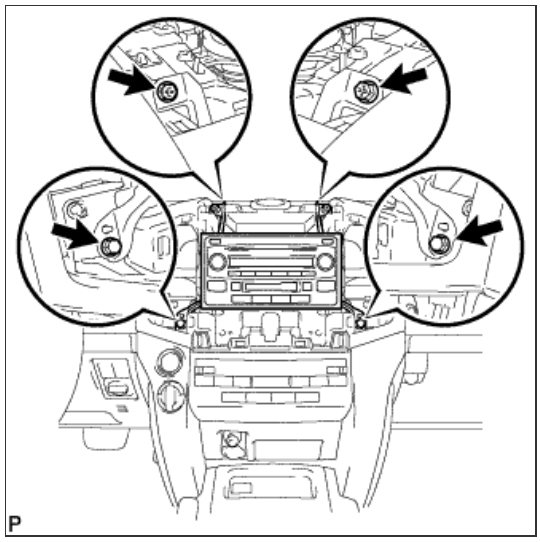

78. REMOVE RADIO TUNER OPENING COVER WITH BRACKET (w/o Radio Receiver)


a. Remove the 2 bolts.

b. Remove the 2 screws and opening cover with bracket.

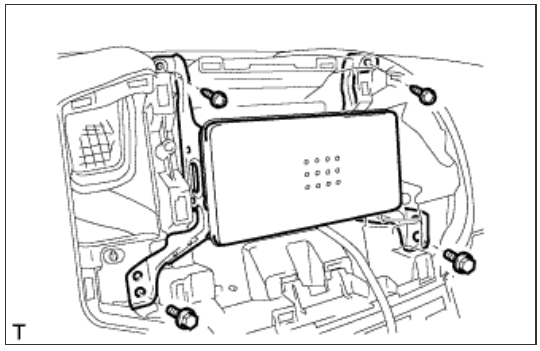


79. REMOVE RADIO RECEIVER ASSEMBLY WITH BRACKET (w/ Multi-display)

a. Remove the 2 screws and 2 bolts.

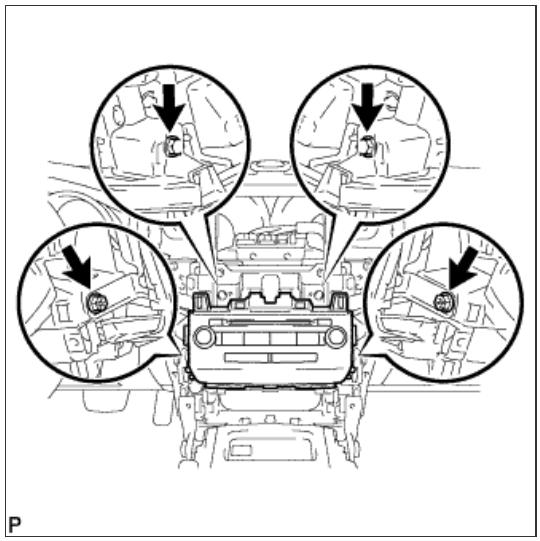

b. Pull the radio receiver to detach the 5 claws on the backside of the radio receiver.


c. Disconnect the connectors and remove the radio receiver.

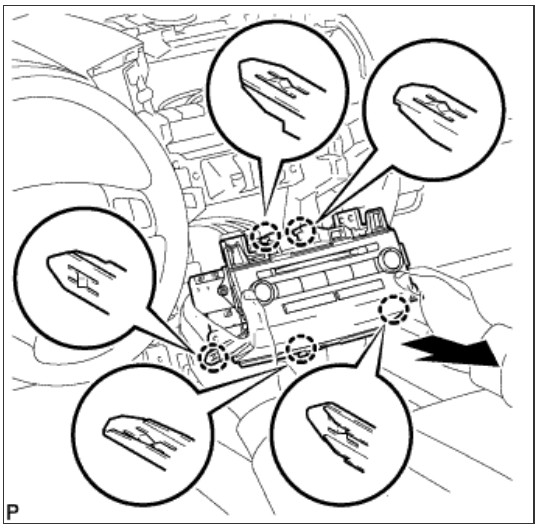

80. REMOVE AIR CONDITIONING CONTROL ASSEMBLY

a. Pull the radio receiver to detach the 5 claws on the backside of the radio receiver.

b. Disconnect the connectors and remove the radio receiver.

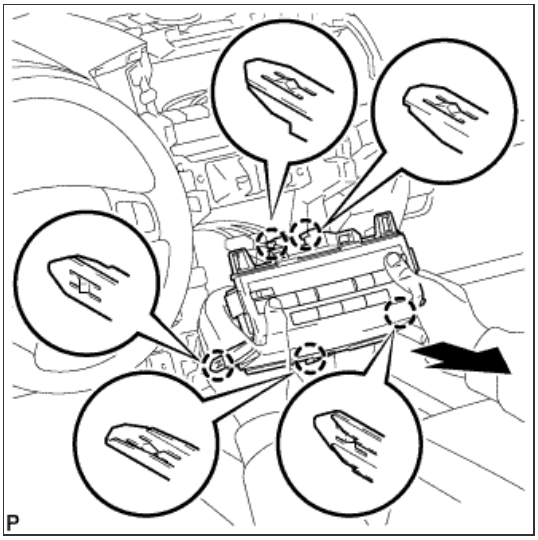


81. REMOVE NAVIGATION MODULE BOARD WITH DISC PLAYER BRACKET (w/ Multi-display)

a. Detach the clamp.

b. Remove the 2 screws and nut.


c. Disconnect the navigation module board connectors and remove the navigation module board with disc player bracket.

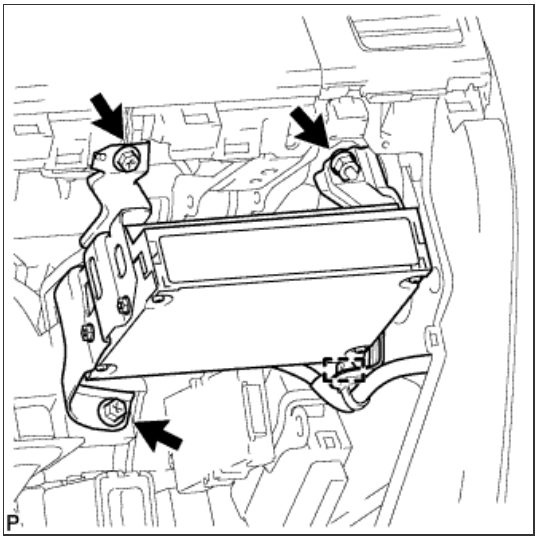

82. REMOVE REAR NO. 2 AIR DUCT

a. Fold back the front floor carpet.


b. Detach the clip and remove the air duct.

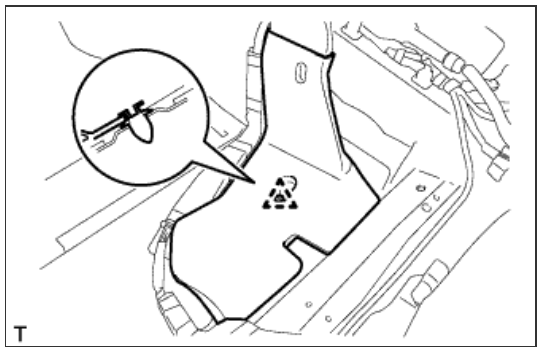

83. REMOVE REAR NO. 4 AIR DUCT


a. Fold back the front floor carpet.

b. Detach the clip and remove the air duct.

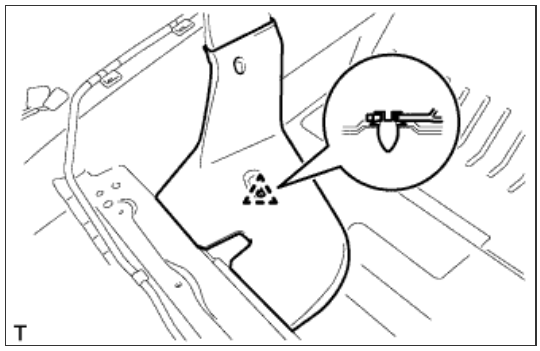


84. REMOVE INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for LHD)

a. Disconnect the connector.

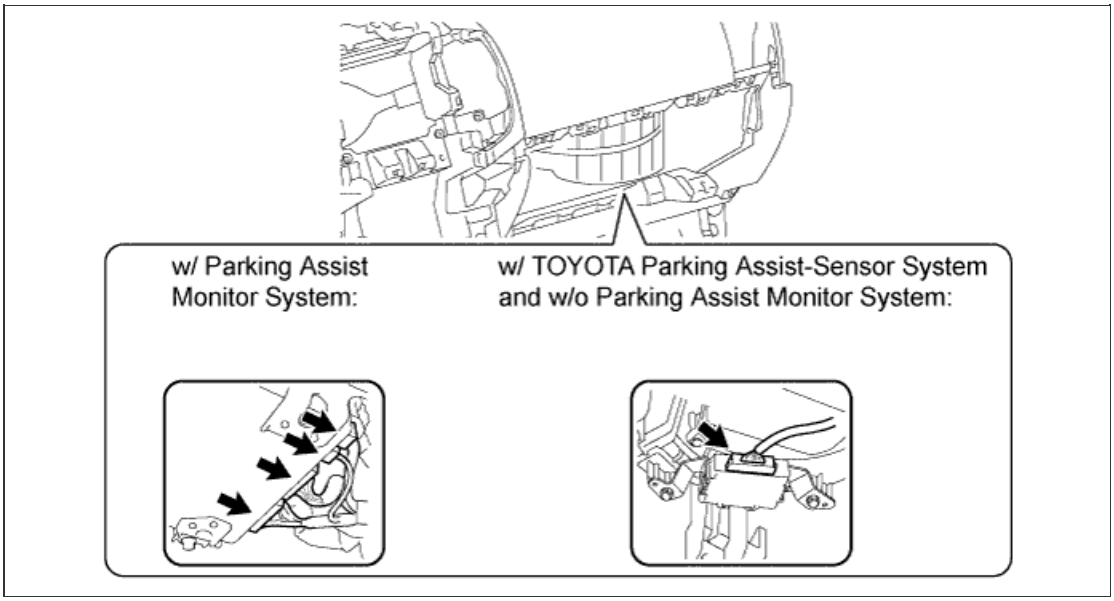


b. Disconnect the connectors and clamps.

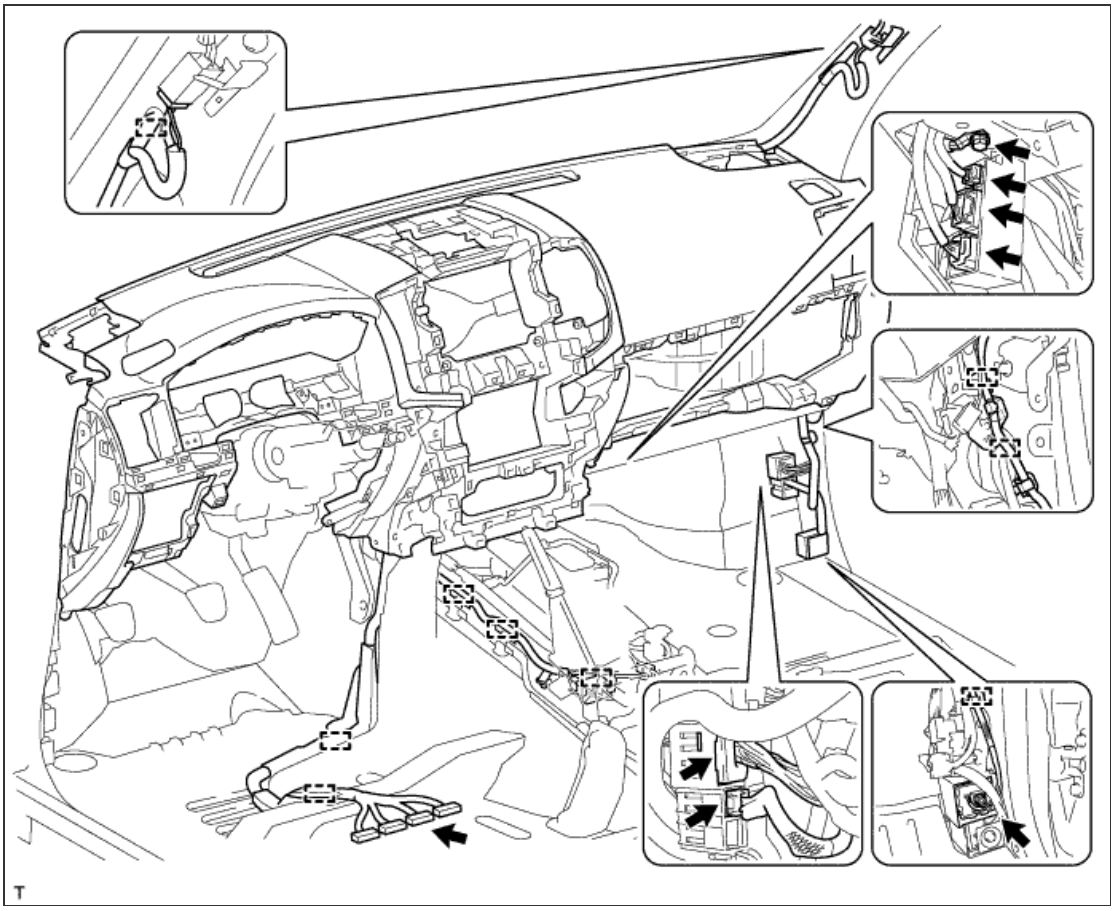

c. Remove the bolt and disconnect the wire harness.

d. Remove the 2 passenger airbag bolts.

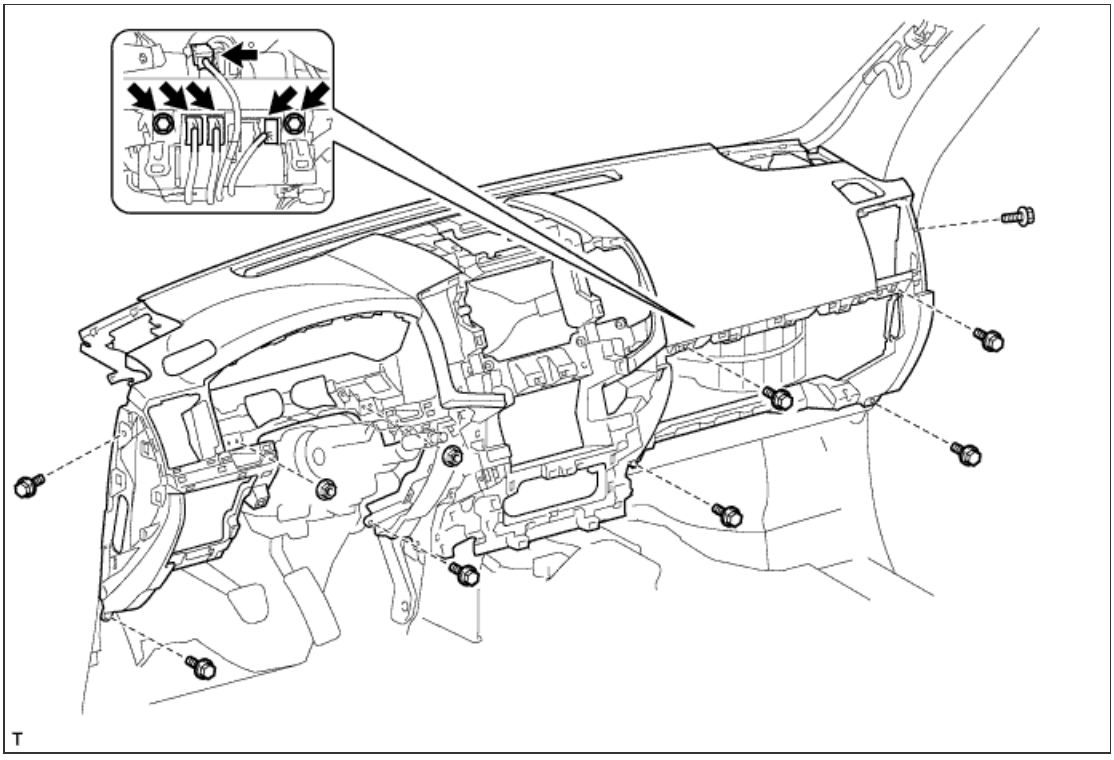


e. Disconnect the connectors.

f. Remove the 8 bolts.


g. Remove the 2 nuts and safety pad.

85. REMOVE INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for RHD)

a. Disconnect the connector.

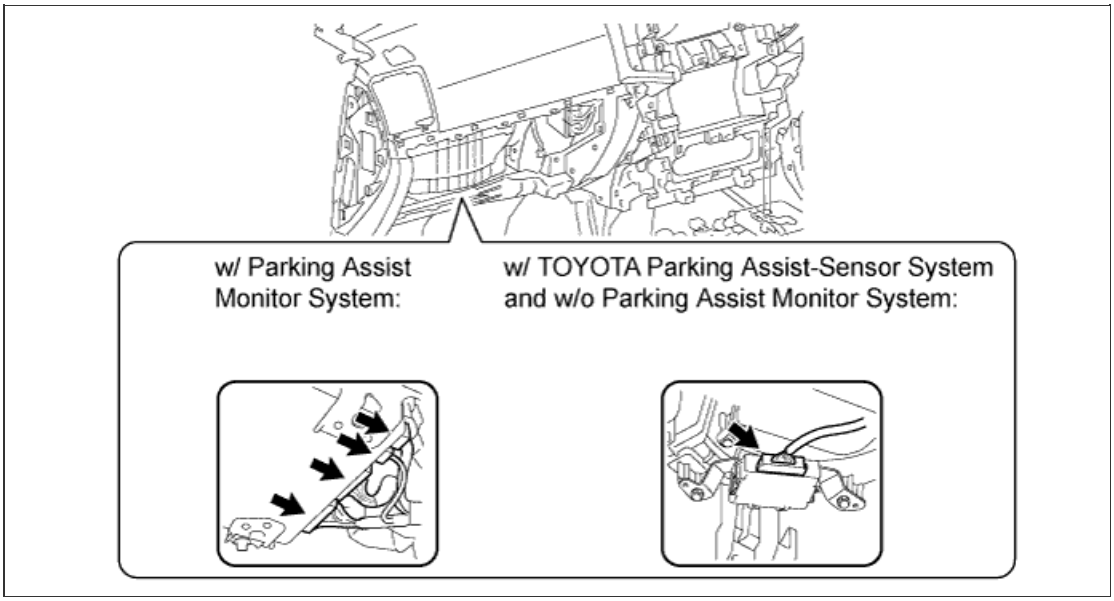


b. Disconnect the connectors and clamps.

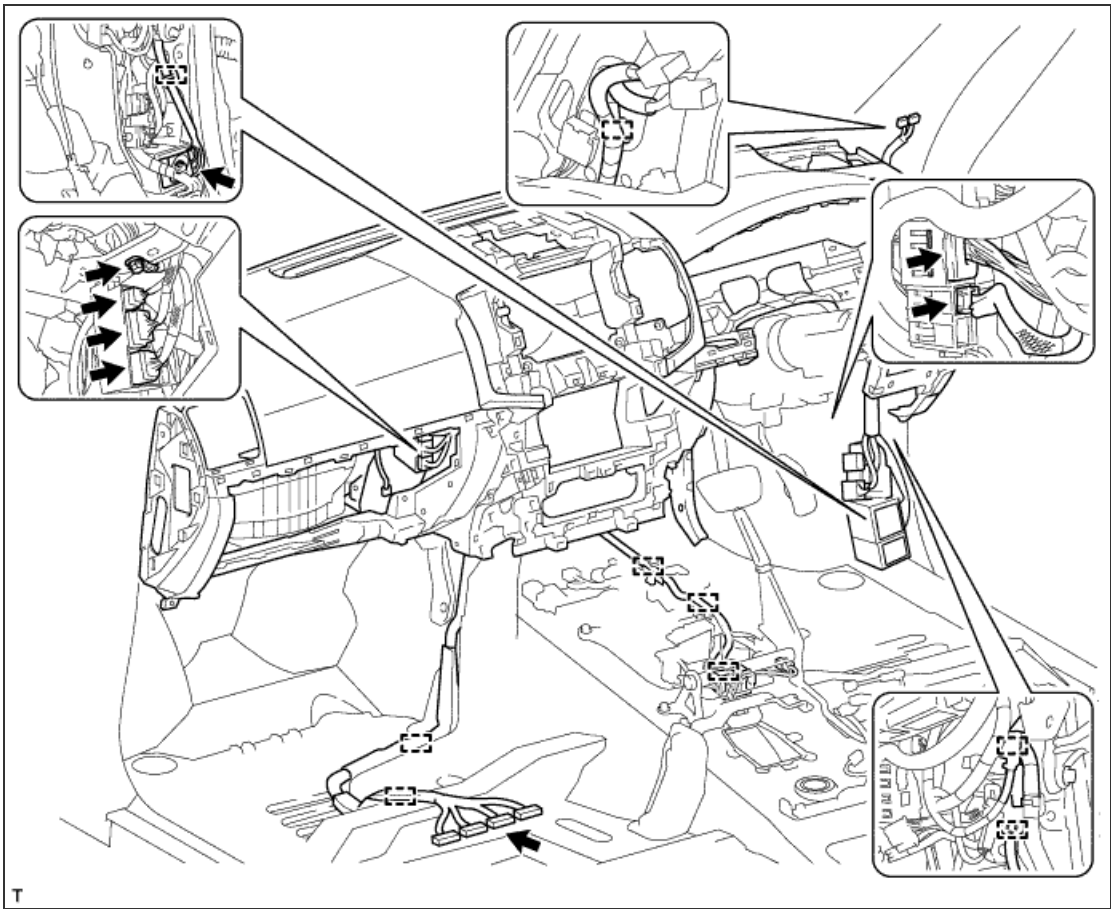

c. Remove the bolt and disconnect the wire harness.

d. Remove the 2 passenger airbag bolts.

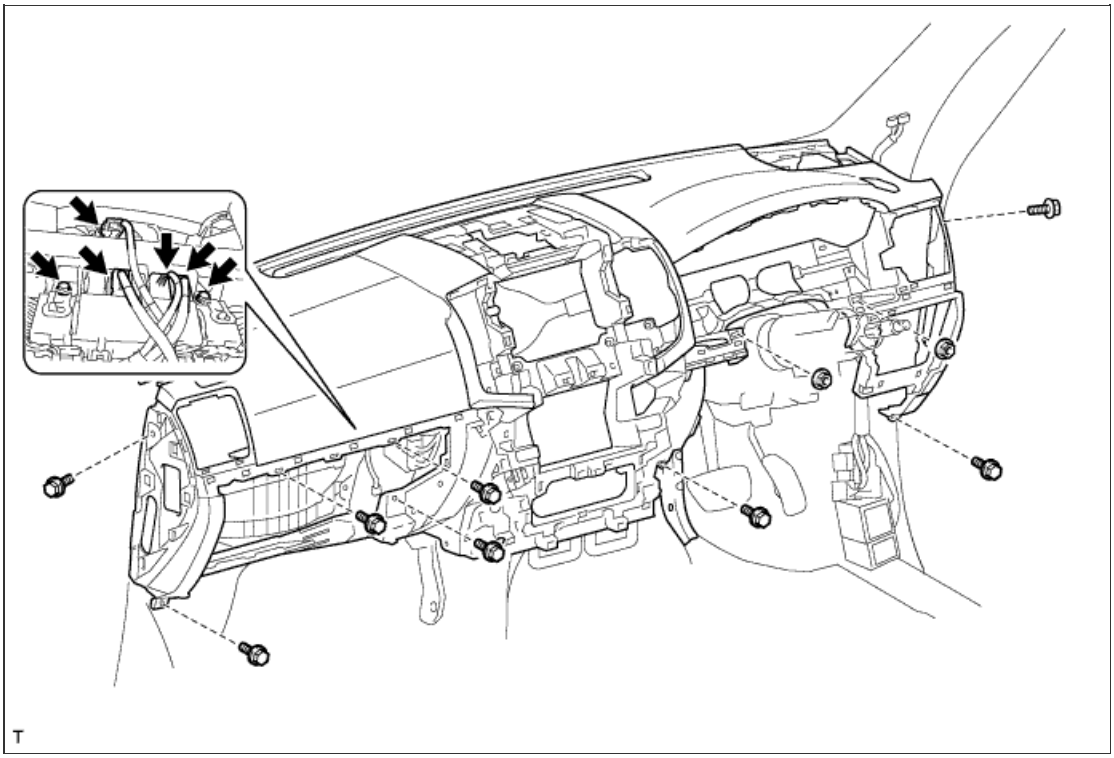

e. Disconnect the connectors.

f. Remove the 8 bolts.

g. Remove the 2 nuts and safety pad.






for Preparation Click here

1. TABLE OF BOLT, SCREW AND NUT

HINT:

All bolts, screws and nuts relevant to installing and removing the instrument panel are shown along with their alphabet code in the table below.

mm (in.) (L = Length)

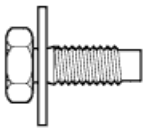Code	Shape	Code	Shape	Code	Shape
<A>	 φ 6 (0.236) L=16 (0.630)	<B>	 φ 5 (0.197) L=18 (0.709)	<C>	 φ 6 (0.236) L=22 (0.866)
<D>	 φ 5 (0.197) L=15 (0.59)	<E>	 φ 6 (0.236)	<F>	 φ 8 (0.315) L=20 (0.787)

2. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM (w/ Cool Box)

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

3. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

a. for Power Tilt and Power Telescopic:

i. Disable the Autoaway/Return function by changing the customize parameter (Click here).

NOTICE:

Record the current customize parameter setting (whether the Autoaway/Return function is enabled or disabled) in order to restore the current setting after finishing the operation.

HINT:

Performing the above operation causes the Autoaway/Return function to be disabled when the engine switch is turned off.

ii. Turn the engine switch on (IG). Operate the tilt and telescopic switch to fully extend and lower the steering column.

b. Turn the engine switch off and disconnect the cable from the negative (-) battery terminal.

CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).


4. REMOVE LOWER NO. 3 STEERING WHEEL COVER

a. Detach the 2 claws and remove the steering wheel cover.

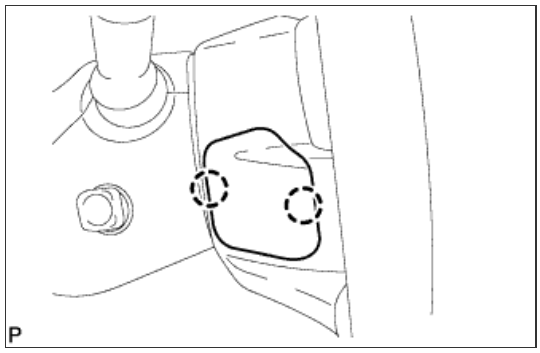

5. REMOVE LOWER NO. 2 STEERING WHEEL COVER


a. Detach the 2 claws and remove the steering wheel cover.

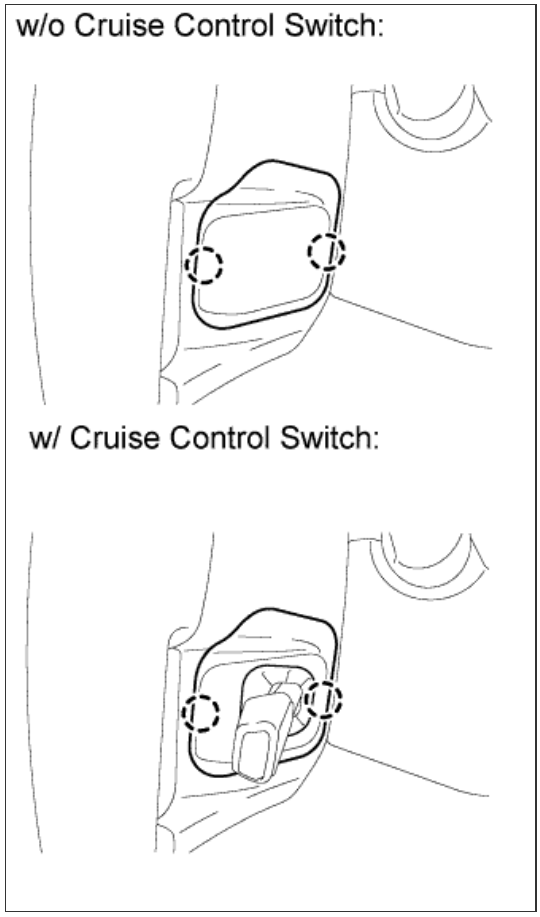

6. REMOVE STEERING PAD

a. Using a T30 "TORX" socket wrench, loosen the 2 screws until the groove along

the screw circumference catches on the screw case.

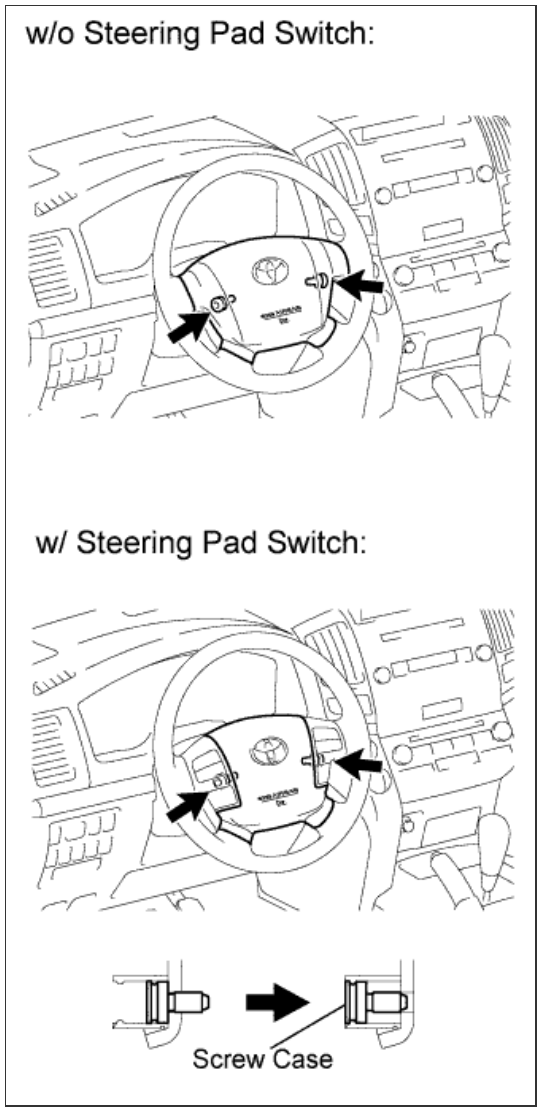

b. Pull out the steering pad from the steering wheel, as shown in the illustration. Then support the steering pad with one hand.

NOTICE:


When removing the steering pad, do not pull the airbag wire harness.

c. Disconnect the horn connector.

d. Disconnect the 2 connectors and remove the steering pad.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

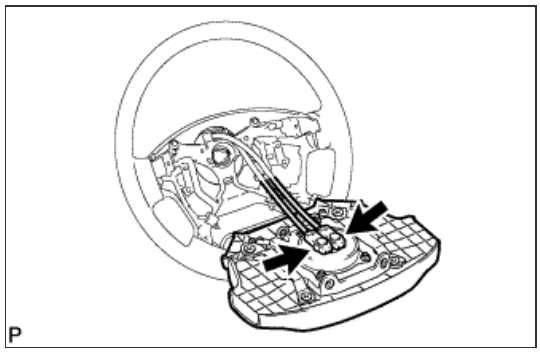

7. REMOVE STEERING WHEEL ASSEMBLY


a. Remove the steering wheel set nut.

b. Put matchmarks on the steering wheel and main shaft.

c. Using SST, remove the steering wheel assembly.

SST

09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05011)

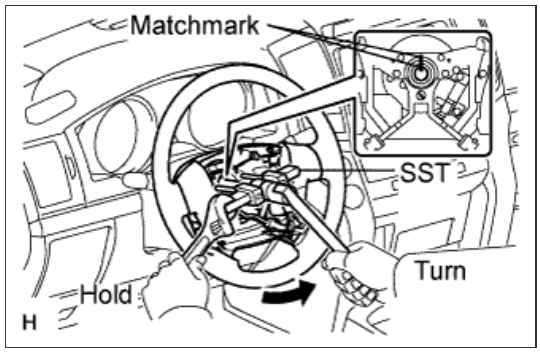


8. REMOVE LOWER STEERING COLUMN COVER (for Power Tilt and Power Telescopic Steering Column)

a. Remove the 3 screws.

b. Detach the 2 claws to remove the lower steering column cover.

NOTICE:

Do not damage the tilt and telescopic switch.

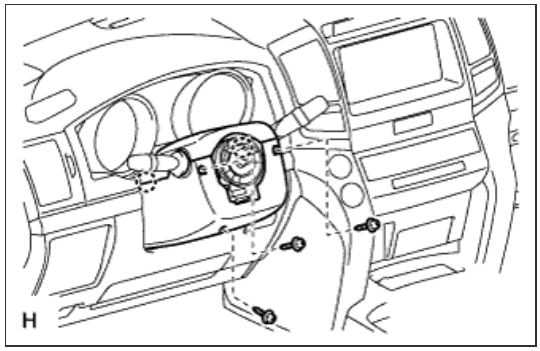


9. REMOVE LOWER STEERING COLUMN COVER (for Manual Tilt and Manual Telescopic Steering Column)

a. Remove the 3 screws.

b. Detach the 2 claws to remove the lower steering column cover.

NOTICE:


Do not damage the tilt and telescopic switch.

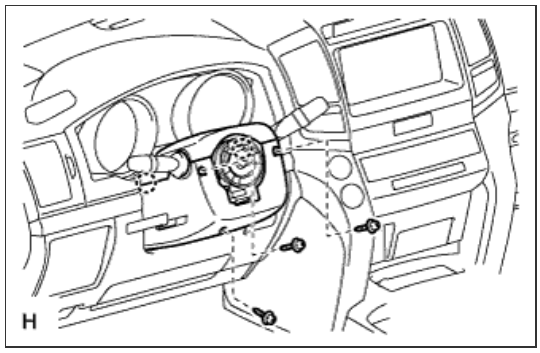

10. REMOVE UPPER STEERING COLUMN COVER (for Power Tilt and Power Telescopic Steering Column)

a. Detach the 4 clips.


b. Detach the claw to remove the upper steering column cover.

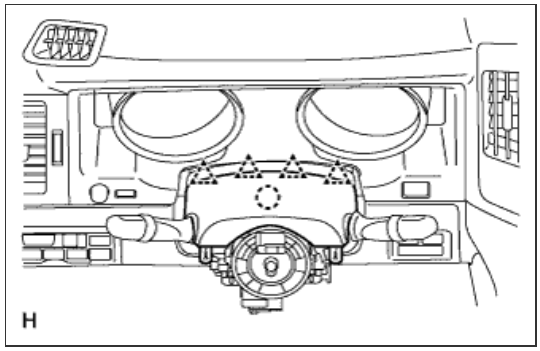

11. REMOVE UPPER STEERING COLUMN COVER (for Manual Tilt and Manual Telescopic Steering Column)

a. Detach the 4 clips.

b. Detach the claw to remove the upper steering column cover.

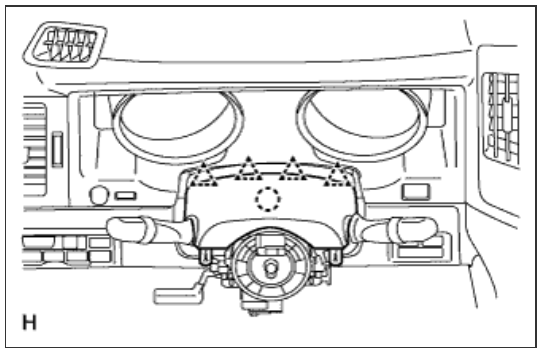

12. REMOVE TILT AND TELESCOPIC SWITCH (for Power Tilt and Power Telescopic Steering Column)

a. Disconnect the switch connector.


b. Using a screwdriver, detach the claw and pull out the switch.

NOTICE:

Pushing on the claw too hard will break the claw.


HINT:

Tape the screwdriver tip before use.

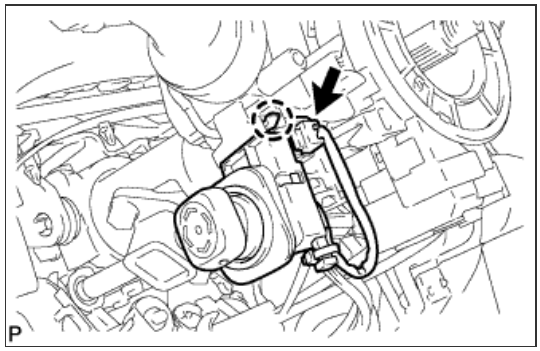


13. REMOVE COMBINATION SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (for Power Tilt and Power Telescopic Steering Column)

a. Disconnect the 5 connectors from the turn signal switch with spiral cable.

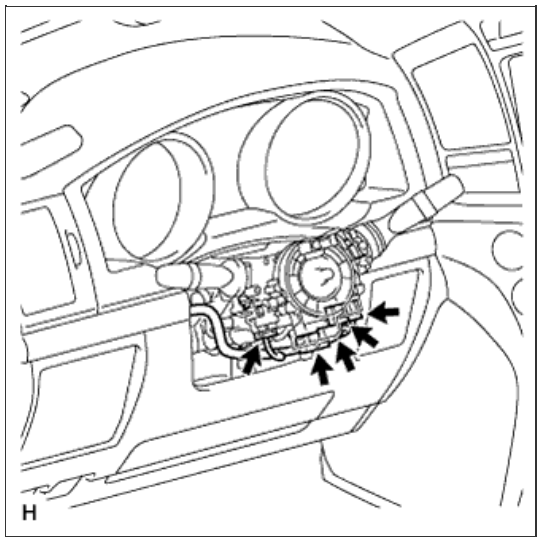


b. Using pliers, grip the claws of the clamp and remove the turn signal switch with spiral cable from the steering column.

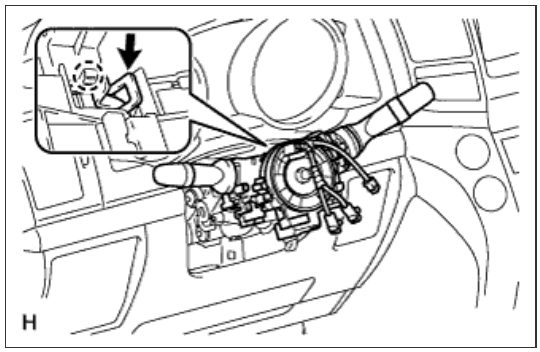


14. REMOVE COMBINATION SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (for Manual Tilt and Manual Telescopic Steering Column)

a. Disconnect the 5 connectors from the combination switch with spiral cable.

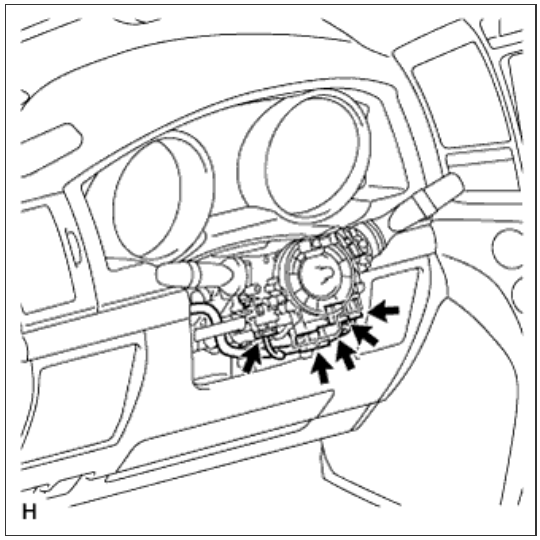

b. Using pliers, grip the claws of the clamp and remove the combination switch with spiral cable from the steering column.

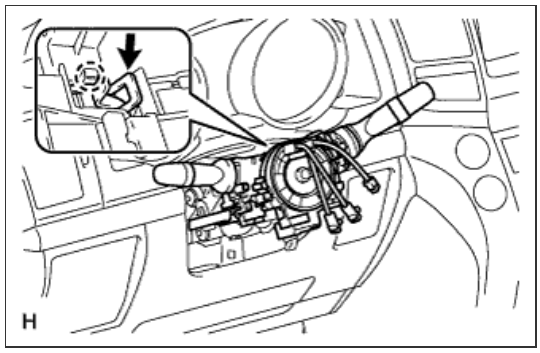

15. REMOVE FRONT SEAT ASSEMBLY LH (for Power Seat)

a. Remove the front seat assembly LH (Click here).

16. REMOVE FRONT SEAT ASSEMBLY LH (for Manual Seat)

a. Remove the front seat assembly LH (Click here).

17. REMOVE FRONT SEAT ASSEMBLY RH (for Power Seat)

a. Remove the front seat assembly RH (Click here).


18. REMOVE FRONT SEAT ASSEMBLY RH (for Manual Seat)

a. Remove the front seat assembly RH (Click here).

19. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

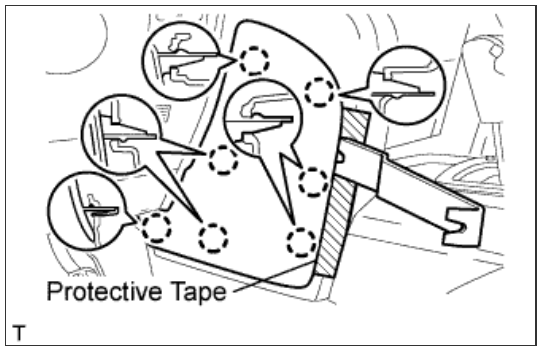


20. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

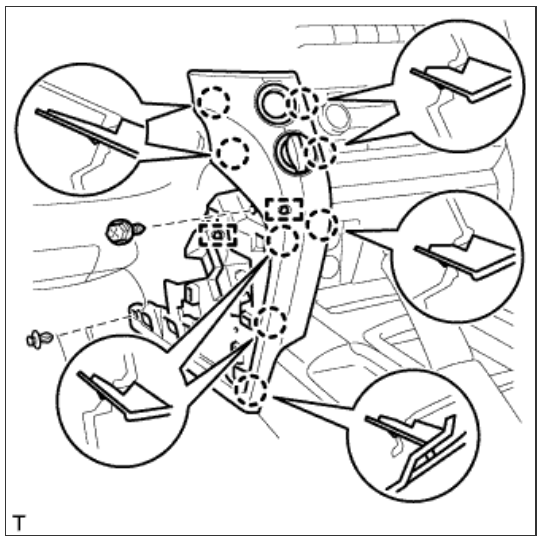

21. REMOVE NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




22. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

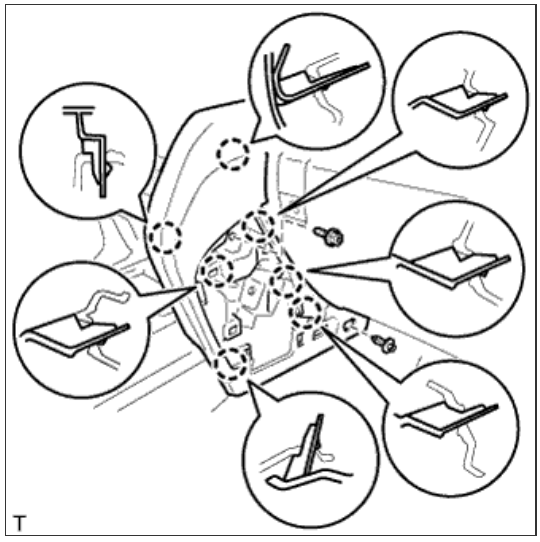

23. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


a. Twist the shift lever knob in the direction indicated by the arrow and remove it.

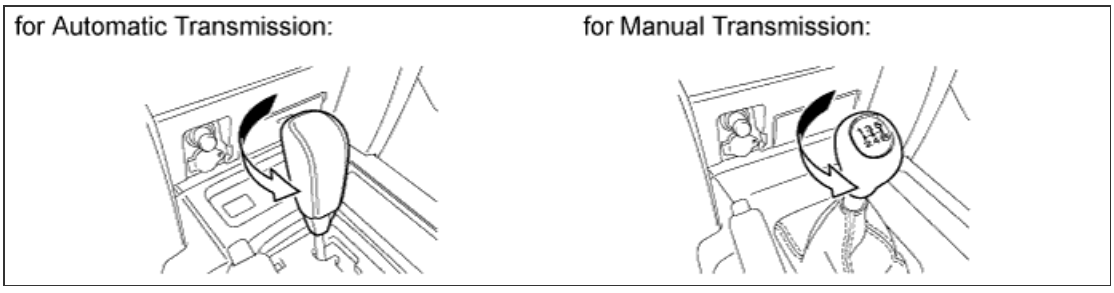

24. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 7 claws.

b. Disconnect the connectors and remove the panel.

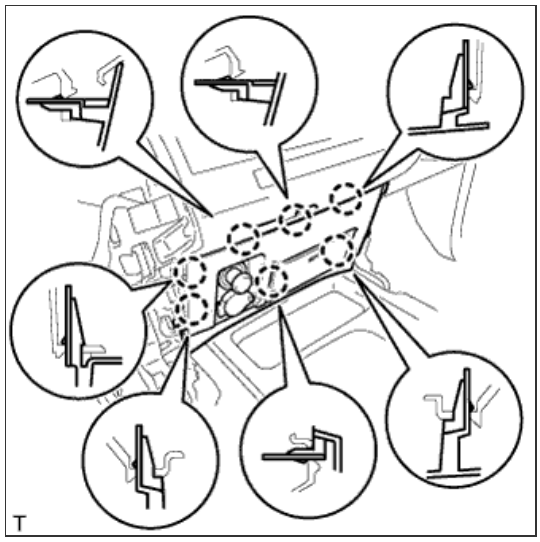


25. REMOVE REAR UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 9 claws and remove the panel.

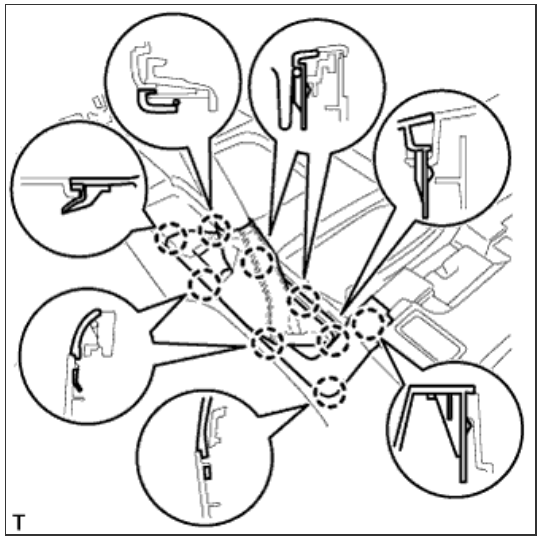

26. REMOVE CONSOLE CUP HOLDER BOX SUB-ASSEMBLY


a. Detach the 4 claws and remove the box.

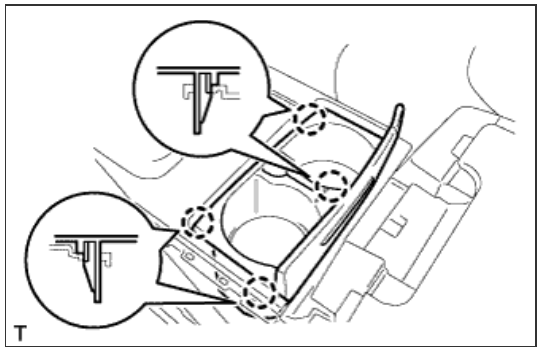

27. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Detach the 14 claws.

b. Disconnect the connectors and remove the console panel.

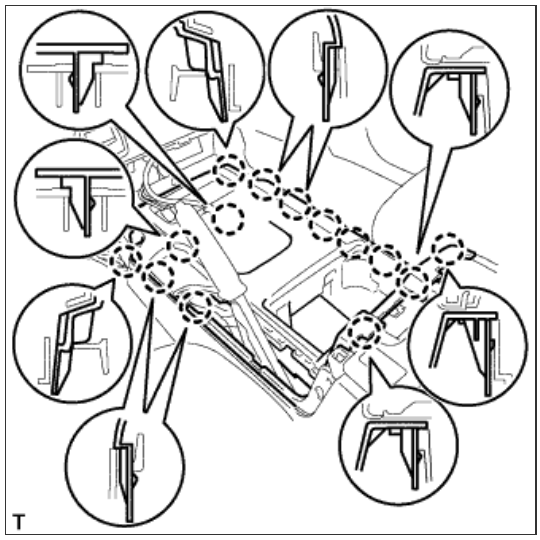

28. REMOVE NO. 1 COOLER COVER (w/ Cool Box)

a. Detach the clamp on the lower part of the cooler cover, and then pull the cooler cover upward to remove it.

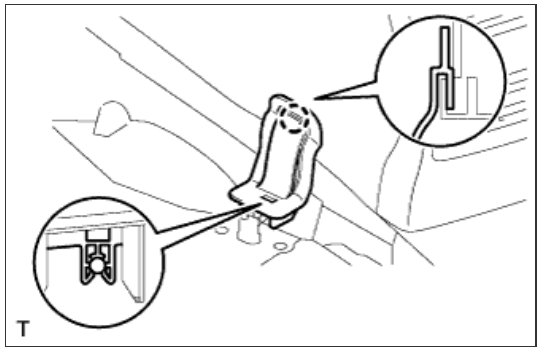


29. REMOVE REAR CONSOLE END PANEL SUB-ASSEMBLY


a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 8 claws.

c. Remove the end panel and disconnect the connectors and 2 clamps.

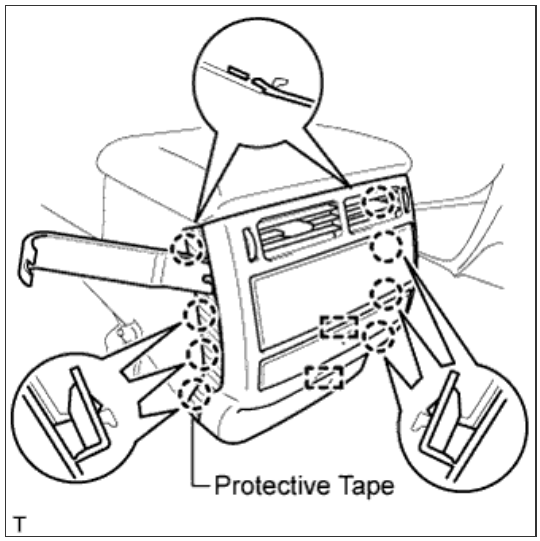


30. REMOVE REAR CONSOLE BOX SUB-ASSEMBLY (w/o Cool Box)

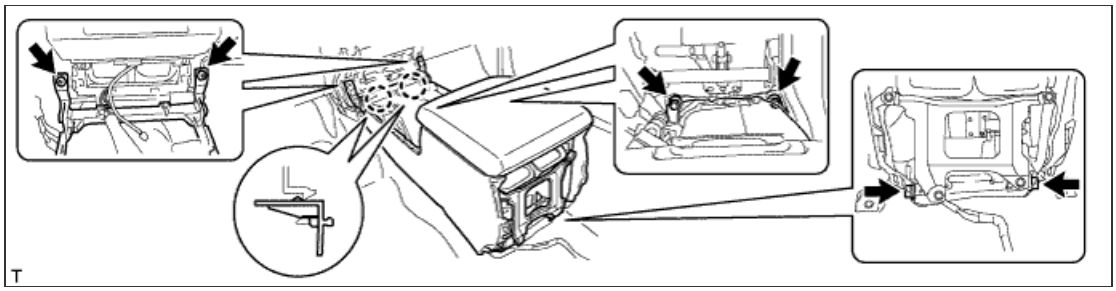

a. Remove the 4 bolts and 2 screws.

b. Detach the 2 claws and remove the console box.

31. REMOVE COOLING BOX ASSEMBLY (w/ Cool Box)

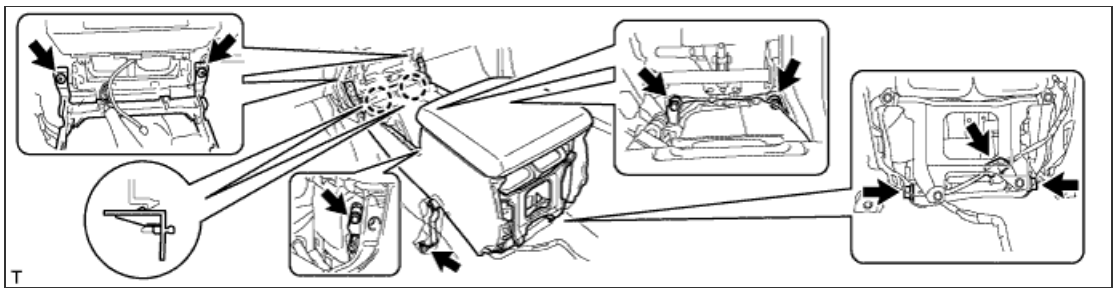

a. Remove the 4 bolts and 2 screws.

b. Remove the 2 bolts and disconnect the 2 cooler pipes.

c. Remove the 2 O-rings from the cooler pipes.


d. Disconnect the connector.

e. Detach the 2 claws and remove the cooling box.

32. REMOVE INSTRUMENT SIDE PANEL LH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 6 claws and remove the side panel.

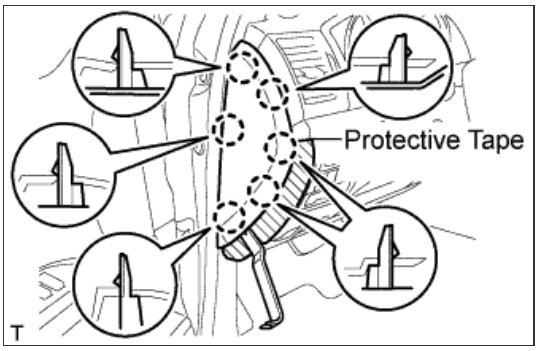

33. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 3 claws and remove the panel garnish.

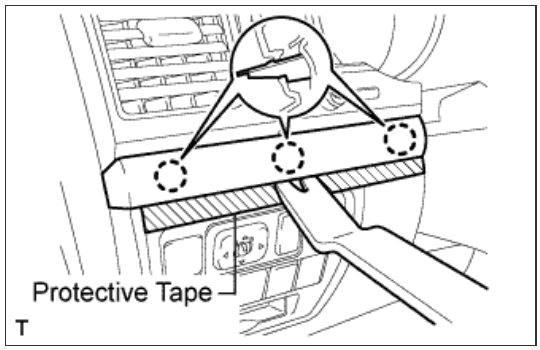

34. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 2 claws and remove the panel garnish.

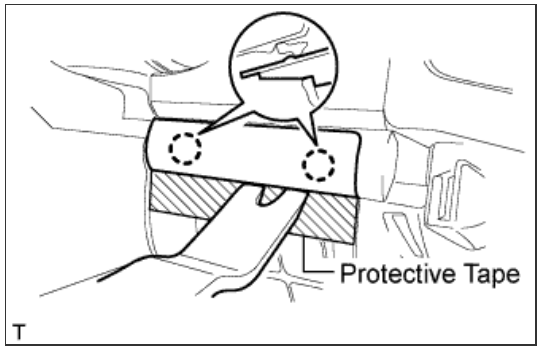

35. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (w/ Multi-information Display)


a. Detach the 9 claws.

b. Remove the finish panel and then disconnect the connector.

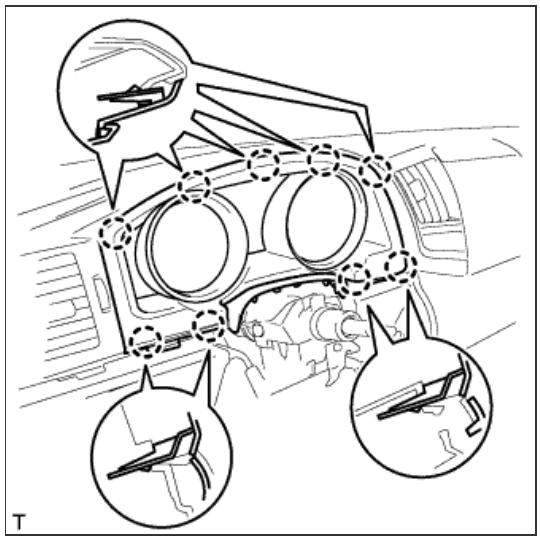

36. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (w/o Multi-information Display)


a. Detach the 9 claws remove the finish panel.

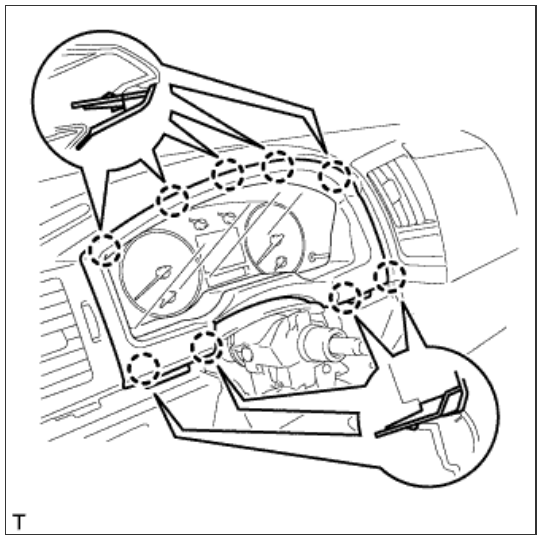

37. REMOVE COMBINATION METER ASSEMBLY (w/ Multi-information Display)

a. Remove the 4 screws.


b. Disconnect the connectors and remove the combination meter.

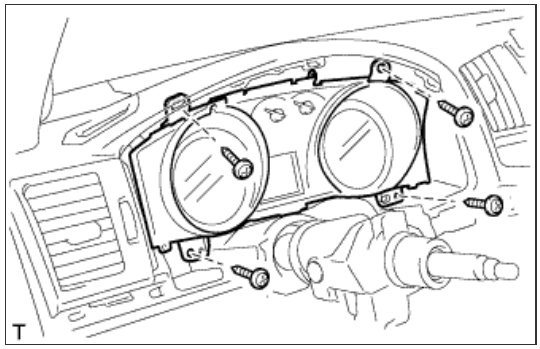

38. REMOVE COMBINATION METER ASSEMBLY (w/o Multi-information Display)


a. Remove the 4 screws.

b. Disconnect the connectors and remove the combination meter.

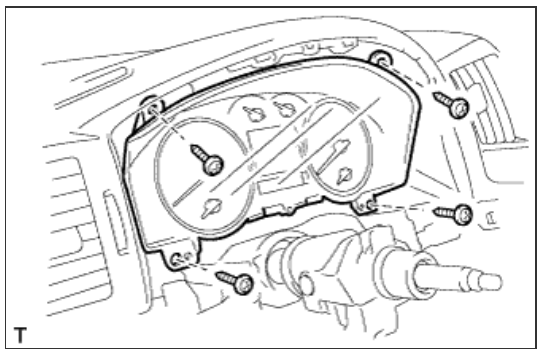


39. REMOVE FRONT DOOR SCUFF PLATE LH (w/o Sliding Roof)

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

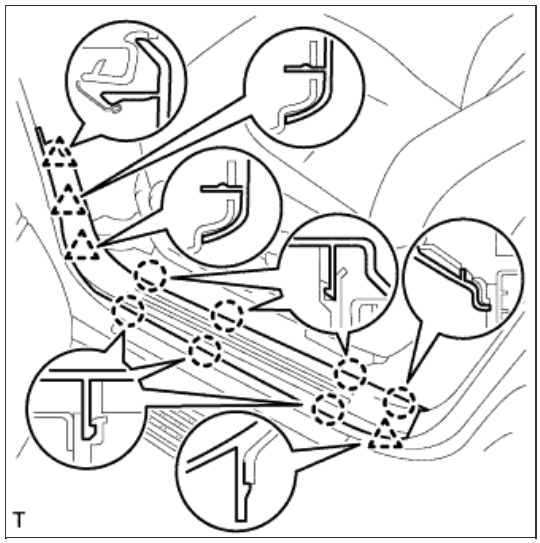

40. REMOVE FRONT DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

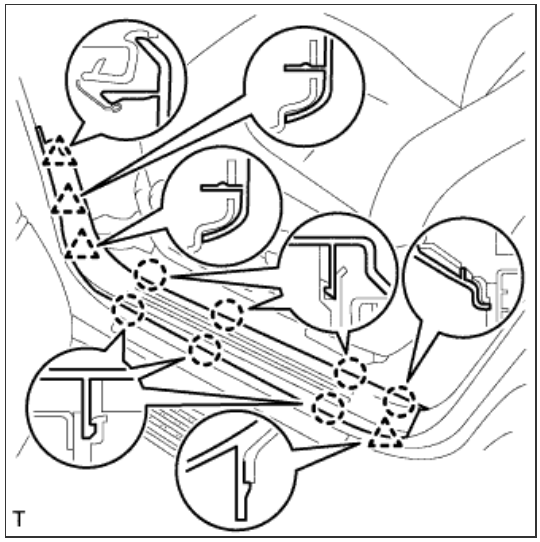


41. REMOVE NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Remove the 2 screws.

b. Detach the 3 claws.


c. Remove the under cover and disconnect the connectors.

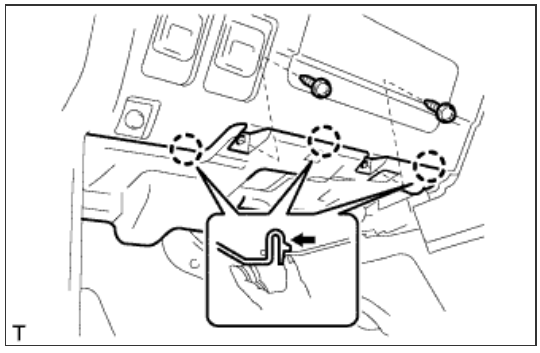

42. REMOVE COWL SIDE TRIM BOARD LH

a. Remove the cap nut.

b. Detach the 2 clips and remove the trim board.

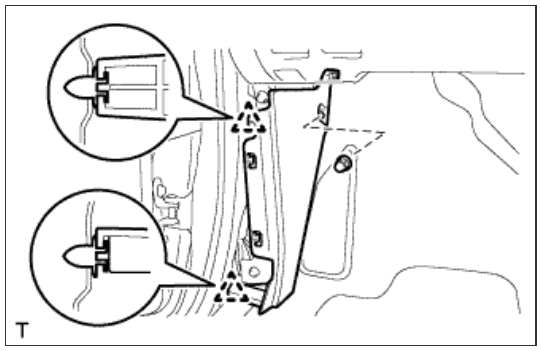


43. REMOVE LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Using a screwdriver, detach the 2 claws.

HINT:


Tape the screwdriver tip before use.

b. Open the hole cover.

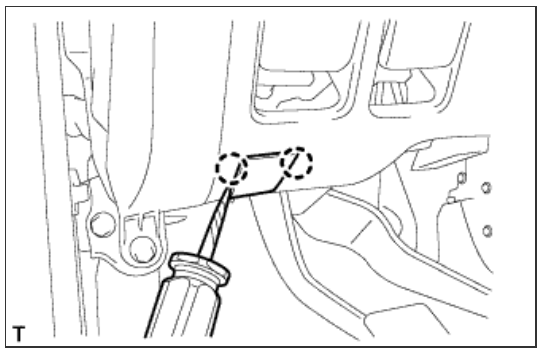


c. Remove the 2 bolts.

d. Detach the 14 claws.

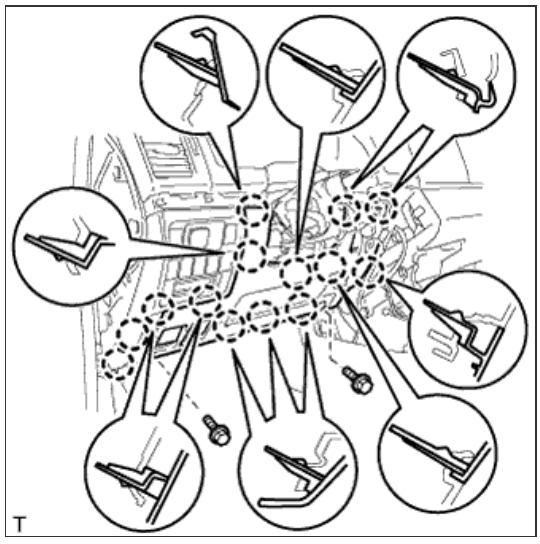


e. Detach the 2 claws and remove the sensor.

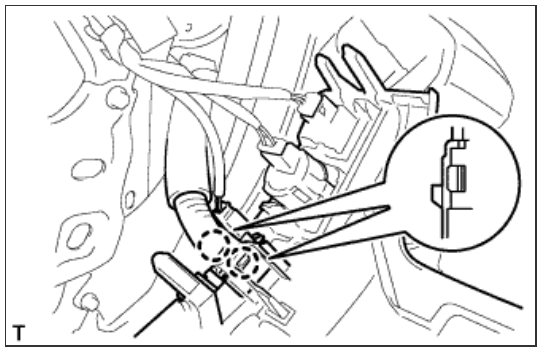

f. Detach the 2 claws and disconnect the 2 control cables.


g. Remove the finish panel and then disconnect the connectors.

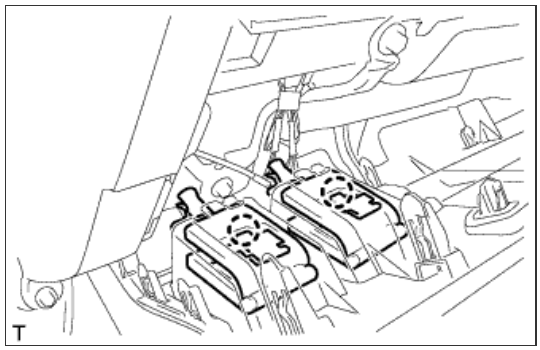

44. REMOVE NO. 1 SWITCH HOLE BASE

a. Detach the 4 claws.

b. Remove the switch hole base and then disconnect the connectors.

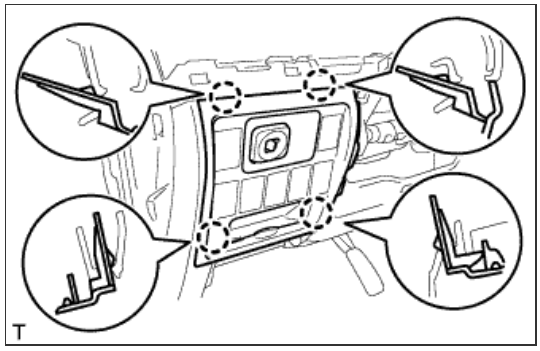


45. REMOVE DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)

a. Remove the 5 bolts and driver side knee airbag.

b. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

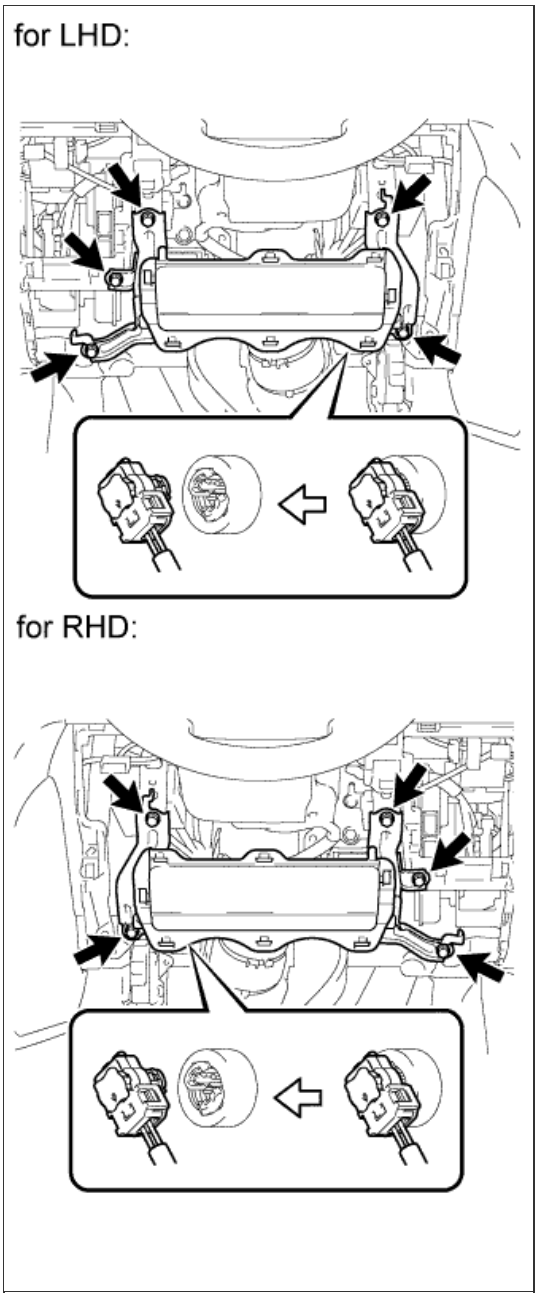

46. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)


a. Detach the 2 claws and disconnect the DLC3.

b. Remove the 5 bolts and instrument panel.

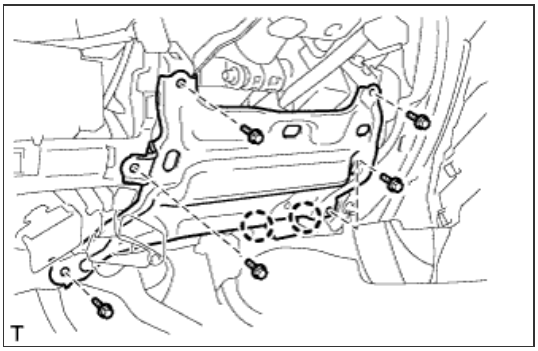

47. REMOVE NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Detach the 4 claws and remove the register.

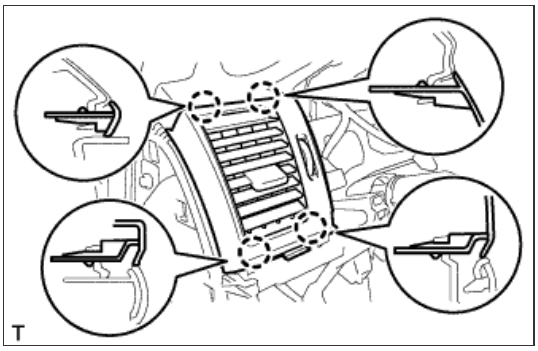

48. REMOVE INSTRUMENT SIDE PANEL RH (w/o Airbag Cut Off Switch)

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws and remove the side panel.

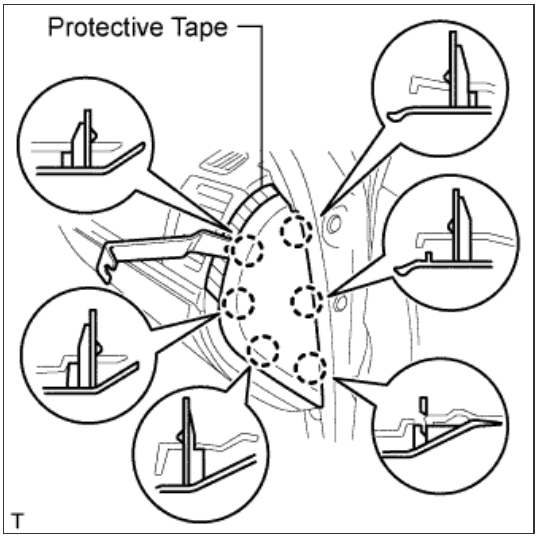


49. REMOVE INSTRUMENT SIDE PANEL RH (w/ Airbag Cut Off Switch)

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.

c. Remove the side panel and disconnect the connector.

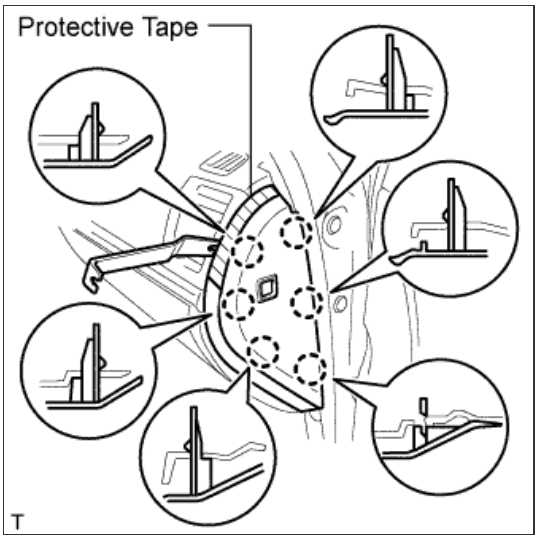

50. REMOVE FRONT DOOR SCUFF PLATE RH (w/o Sliding Roof)

HINT:

Use the same procedures described for the LH side.


51. REMOVE FRONT DOOR SCUFF PLATE RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

52. REMOVE NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)


a. Detach the 4 claws and remove the under cover.

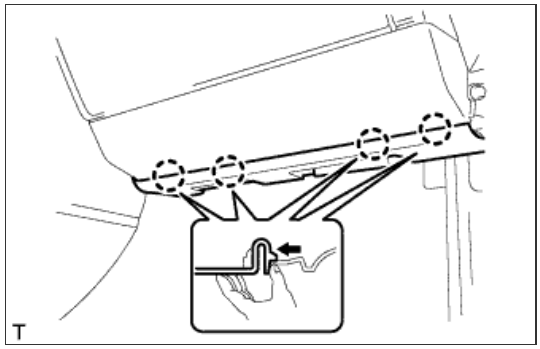

53. REMOVE COWL SIDE TRIM BOARD RH

a. Remove the cap nut.

b. Detach the 2 clips and remove the trim board.

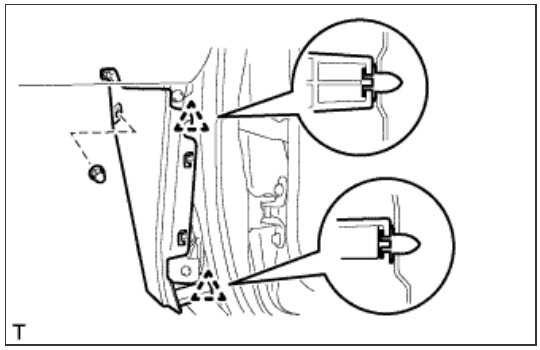

54. REMOVE FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)


a. Remove the 4 bolts.

b. Detach the 4 claws and remove the front passenger side knee airbag.

c. Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

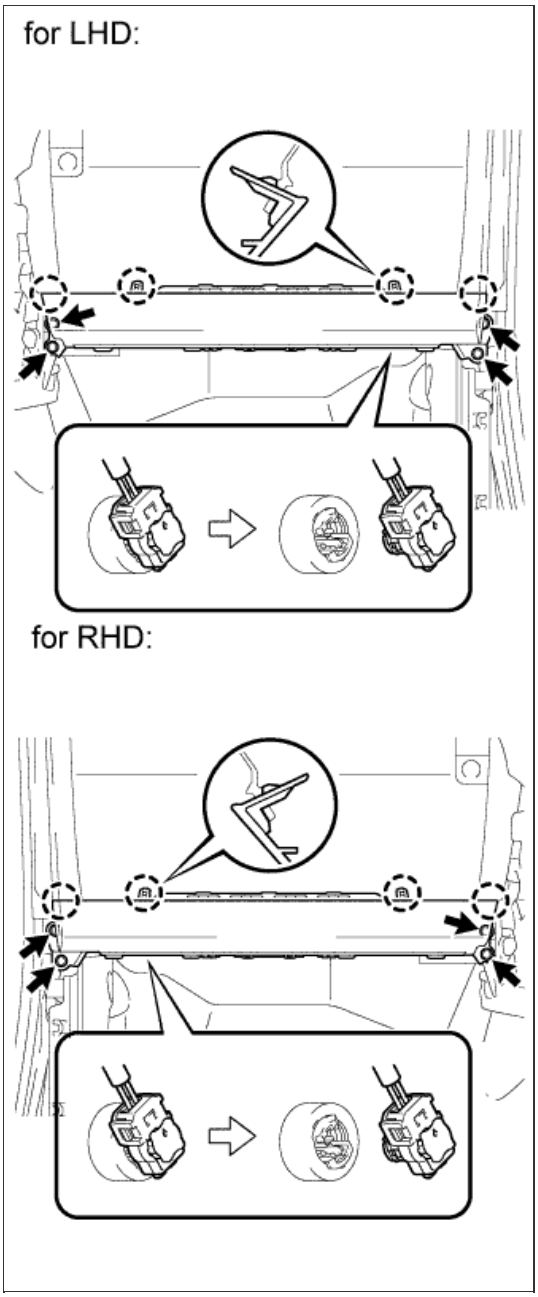

55. REMOVE LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Remove the 2 bolts.


b. Detach the 4 claws and remove the instrument panel.

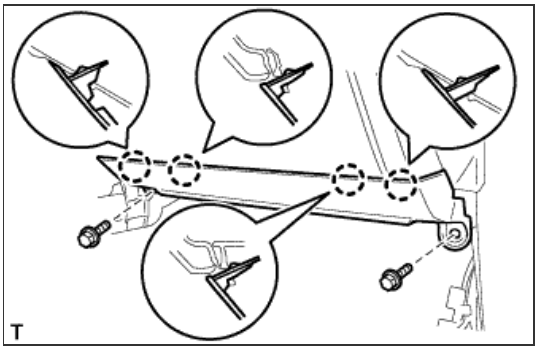

56. REMOVE NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws and remove the panel garnish.

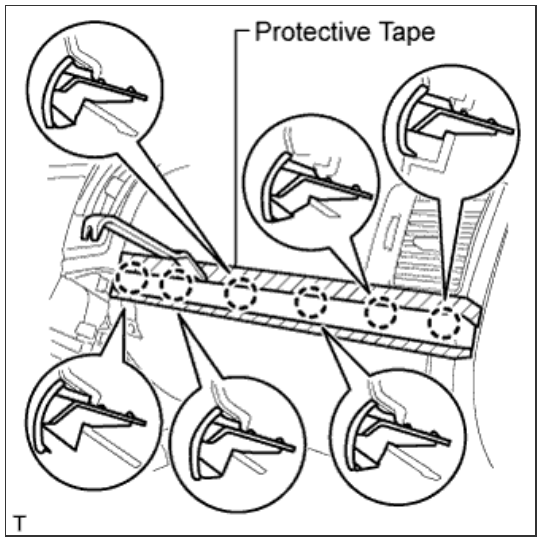

57. REMOVE INSTRUMENT PANEL BOX DOOR KNOB

a. Using a moulding remover, detach the 2 claws and remove the knob.

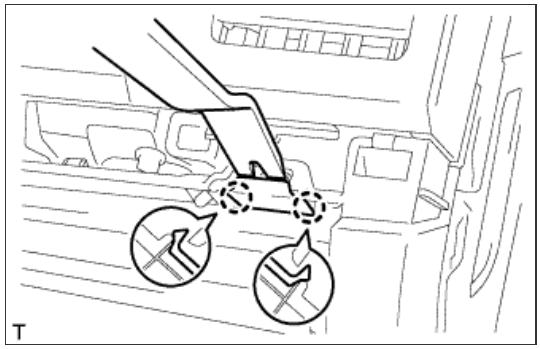


58. REMOVE LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Remove the 4 bolts.


b. Detach the 3 claws.

c. Remove the finish panel and then disconnect the connector.

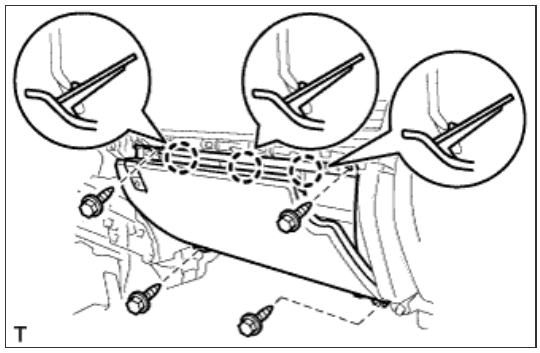

59. REMOVE NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Detach the 4 claws and remove the register.

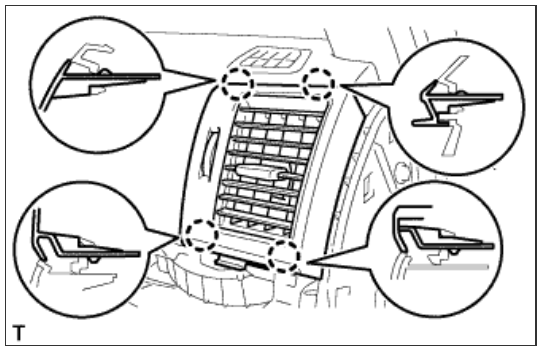


60. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY (w/o Sliding Roof)

HINT:


Use the same procedure to remove the front assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

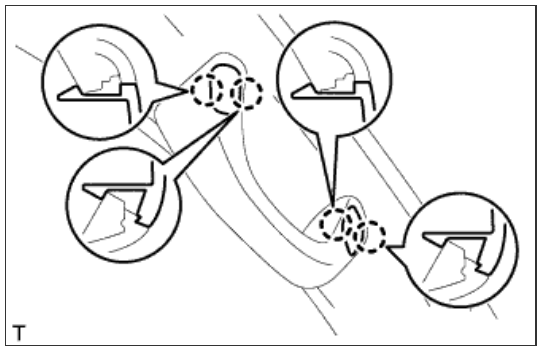

b. Remove the 2 bolts.

c. Detach the 2 claws and remove the front assist grip.

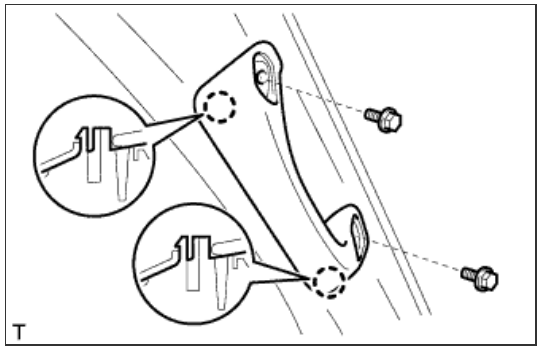


61. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY (w/ Sliding Roof)

HINT:


Use the same procedure to remove the front assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

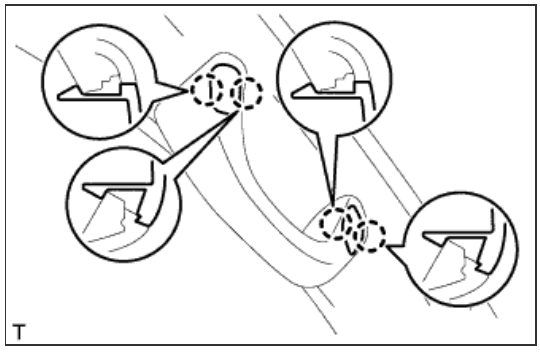

b. Remove the 2 bolts.


c. Detach the 2 claws and remove the front assist grip.

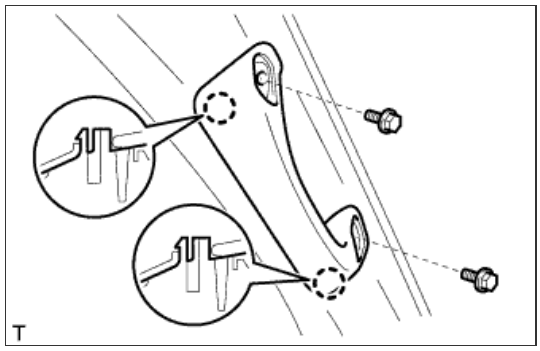

62. REMOVE FRONT PILLAR GARNISH LH (w/o Sliding Roof)

a. Detach the clip and 3 guides, and remove the front pillar garnish.

b. for 9, 14 Speakers:
Disconnect the speaker connector and then remove the front pillar garnish.

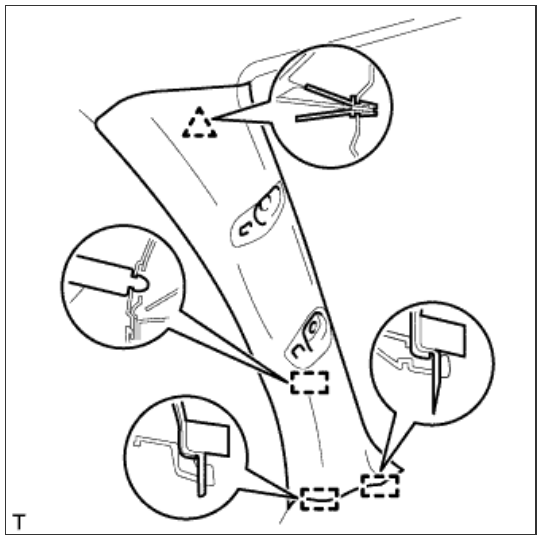


c. Protect the curtain shield airbag.

i. Thoroughly cover the airbag with a cloth or nylon sheet and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:


Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

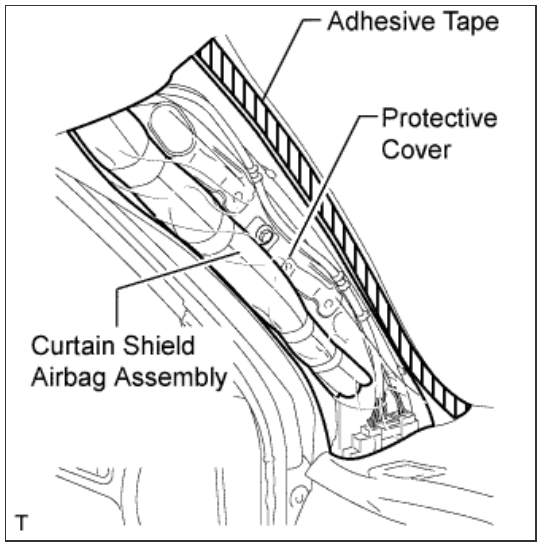

63. REMOVE FRONT PILLAR GARNISH LH (w/ Sliding Roof)

a. Detach the clip 3 guides, and remove the front pillar garnish.

b. for 9, 14 Speakers:
Disconnect the speaker connector and then remove the front pillar garnish.

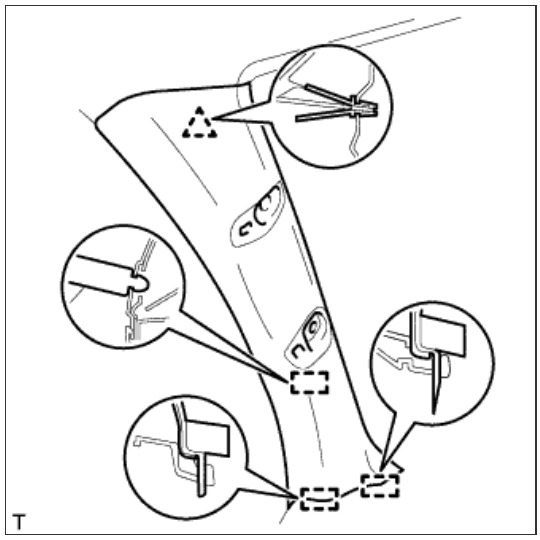


c. Protect the curtain shield airbag.

i. Thoroughly cover the airbag with a cloth or nylon sheet and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

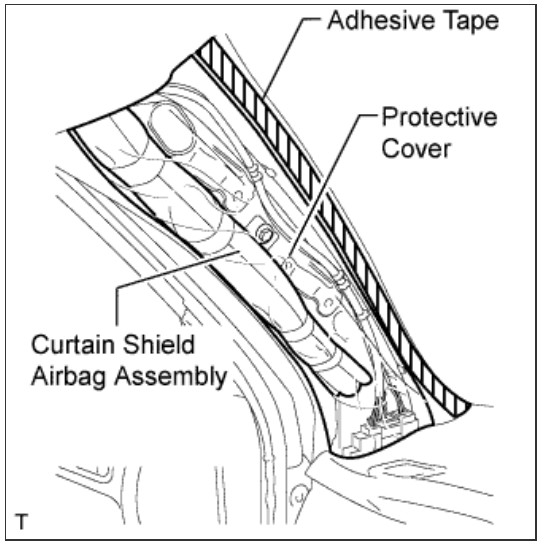

64. REMOVE FRONT PILLAR GARNISH RH (w/o Sliding Roof)

HINT:

Use the same procedures described for the LH side.


65. REMOVE FRONT PILLAR GARNISH RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

66. REMOVE NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Detach the 8 claws and remove the opening cover.

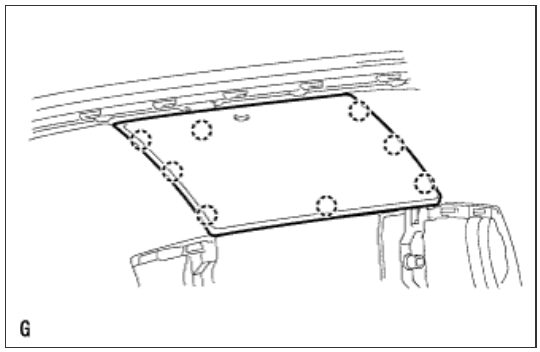


67. REMOVE FRONT NO. 4 SPEAKER ASSEMBLY

a. Remove the 2 bolts.

b. Remove the speaker and then disconnect the speaker connector.


NOTICE:

Do not touch the cone part of the speaker.

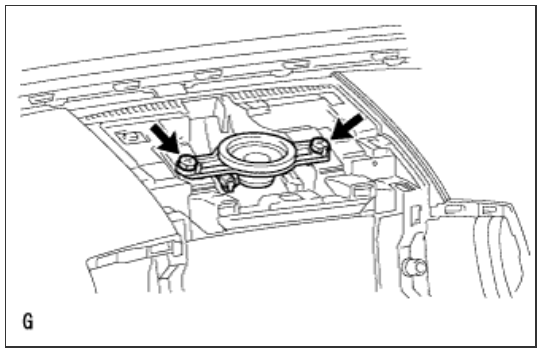

68. REMOVE NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

a. Detach the 4 claws and remove the speaker panel.

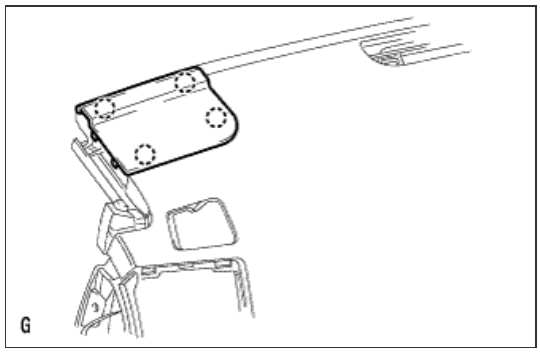

69. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (LH Side)


a. for 9 Speakers Models:

i. Remove the 2 bolts.


ii. Remove the speaker and then disconnect the speaker connector.

NOTICE:

Do not touch the cone part of the speaker.

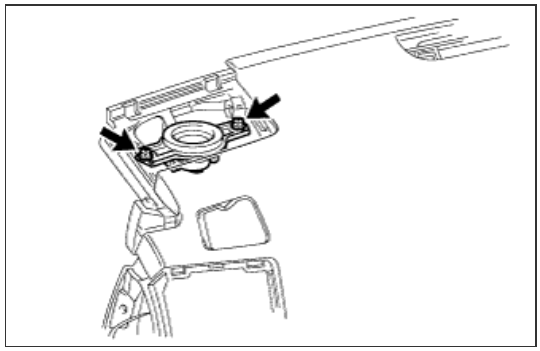

b. except 9 Speakers Models:

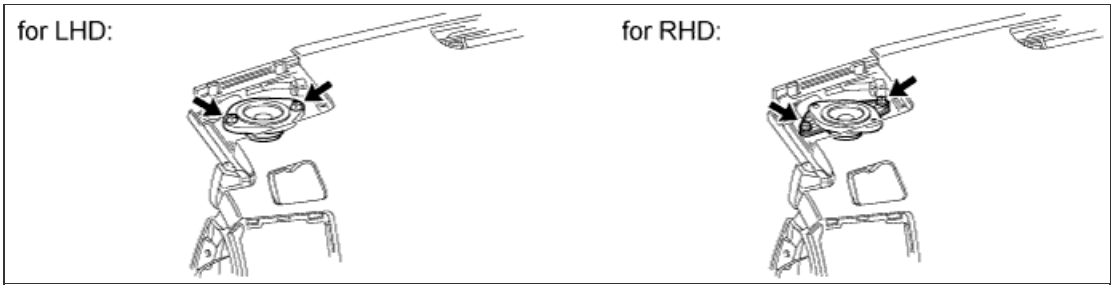

i. Remove the 2 bolts.


ii. Remove the speaker and then disconnect the speaker connector.

NOTICE:

Do not touch the cone part of the speaker.


70. REMOVE NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

a. Detach the 4 claws and remove the speaker panel.

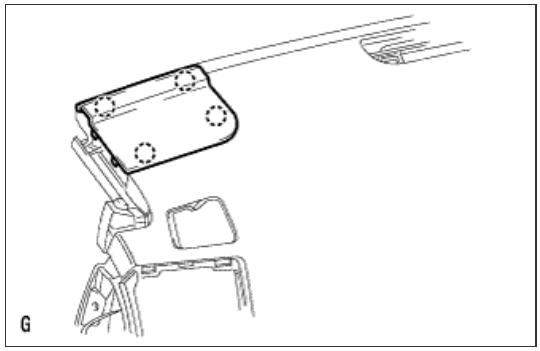

71. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (RH Side)

a. for 9 Speakers Models:

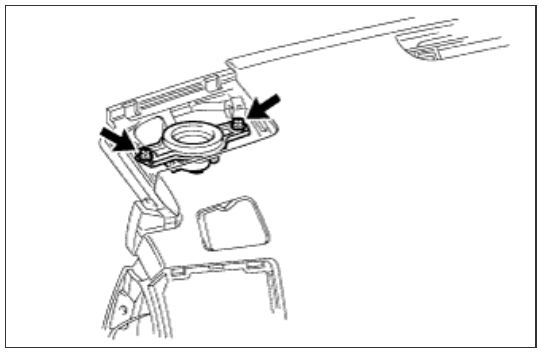


i. Remove the 2 bolts.

ii. Remove the speaker and then disconnect the speaker connector.

NOTICE:

Do not touch the cone part of the speaker.

b. except 9 Speakers Models:

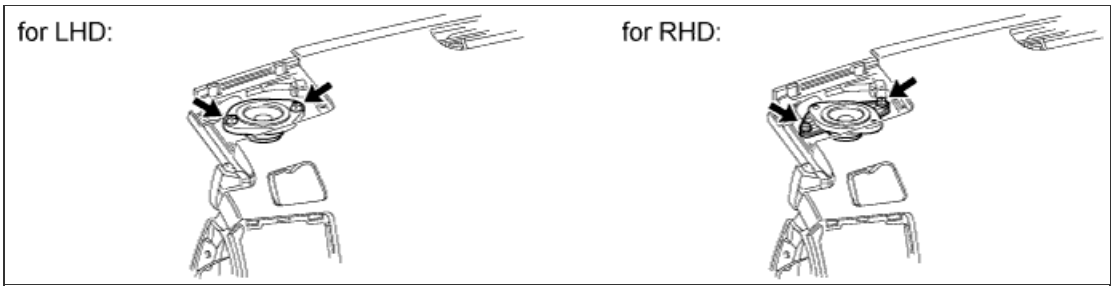

i. Remove the 2 bolts.

ii. Remove the speaker and then disconnect the speaker connector.

NOTICE:

Do not touch the cone part of the speaker.

72. REMOVE NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.



73. REMOVE NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Place protective tape as shown in the illustration.


b. Using a moulding remover, detach the 6 claws.

c. Remove the register and then disconnect the connector.




74. REMOVE MULTI-DISPLAY ASSEMBLY WITH BRACKET (w/ Multi-display)

a. Remove the 2 screws and 2 bolts.

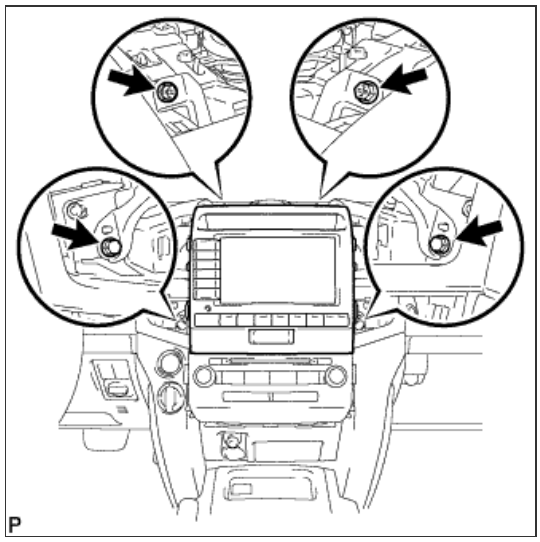

b. Pull the radio receiver to detach the 2 clips and 6 claws on the backside of the display.

c. Disconnect the connectors and remove the display.

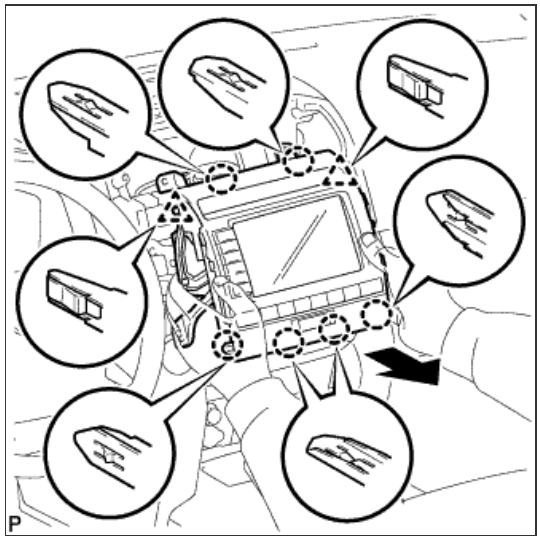


75. REMOVE RADIO RECEIVER ASSEMBLY WITH BRACKET (w/o Multi-display)

a. Remove the 2 screws and 2 bolts.



b. Pull the radio receiver to detach the 10 claws on the backside of the radio receiver.


c. Disconnect the connectors and remove the radio receiver.

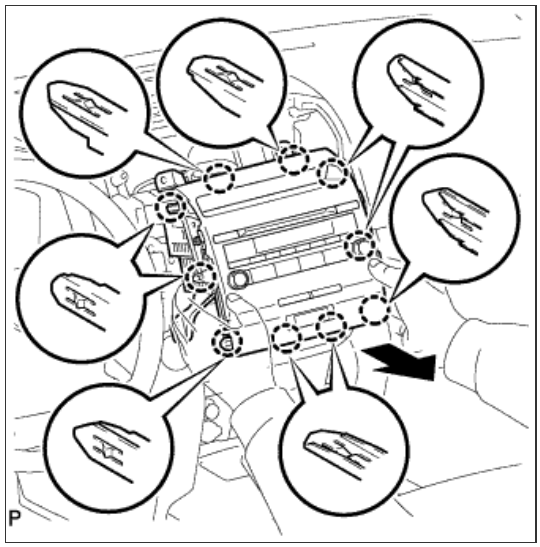

76. REMOVE NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL

a. Detach the 10 claws.


b. Remove the finish panel and then disconnect the connectors.

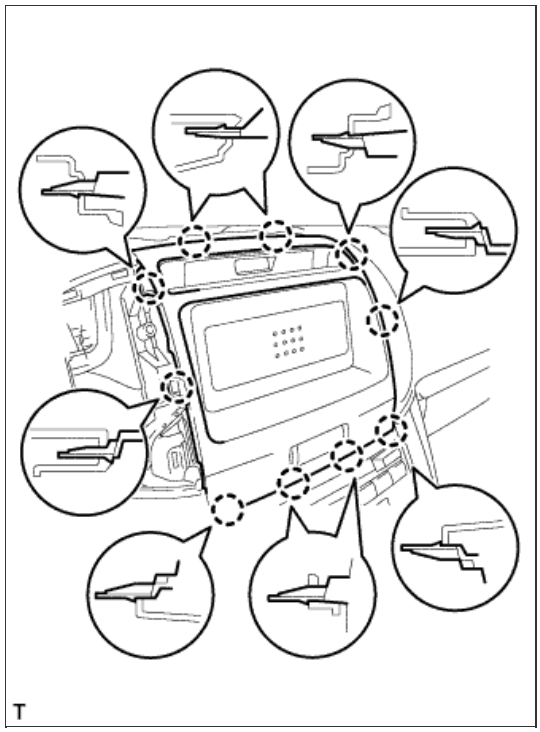

77. REMOVE RADIO RECEIVER ASSEMBLY WITH BRACKET (w/ Cassette Tape Player)

a. Remove the 2 screws and 2 bolts.


b. Disconnect the connectors and remove the radio receiver.

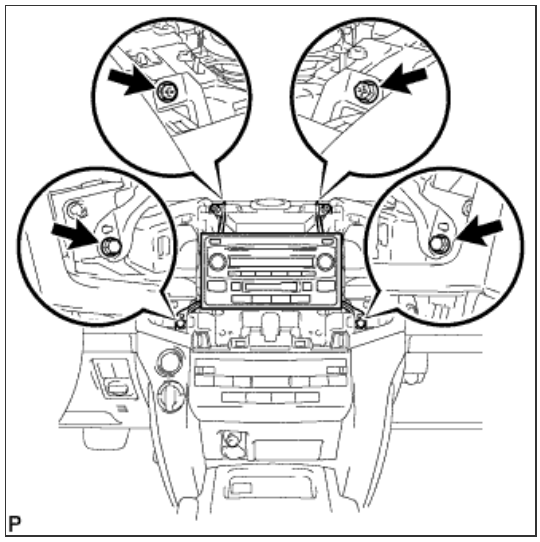

78. REMOVE RADIO TUNER OPENING COVER WITH BRACKET (w/o Radio Receiver)

a. Remove the 2 bolts.

b. Remove the 2 screws and opening cover with bracket.

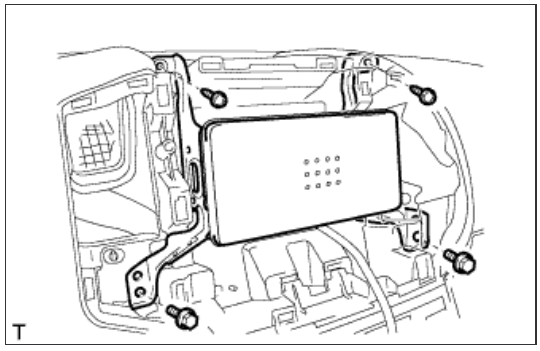


79. REMOVE RADIO RECEIVER ASSEMBLY WITH BRACKET (w/ Multi-display)

a. Remove the 2 screws and 2 bolts.



b. Pull the radio receiver to detach the 10 claws on the backside of the radio receiver.


c. Disconnect the connectors and remove the radio receiver.

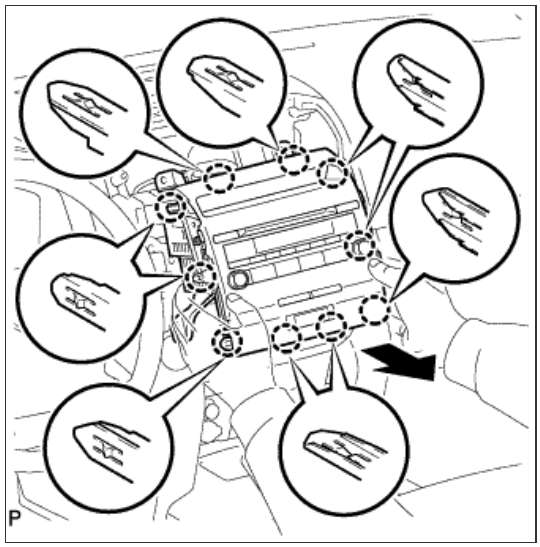

80. REMOVE AIR CONDITIONING CONTROL ASSEMBLY

a. Pull the radio receiver to detach the 5 claws on the backside of the radio receiver.

b. Disconnect the connectors and remove the radio receiver.

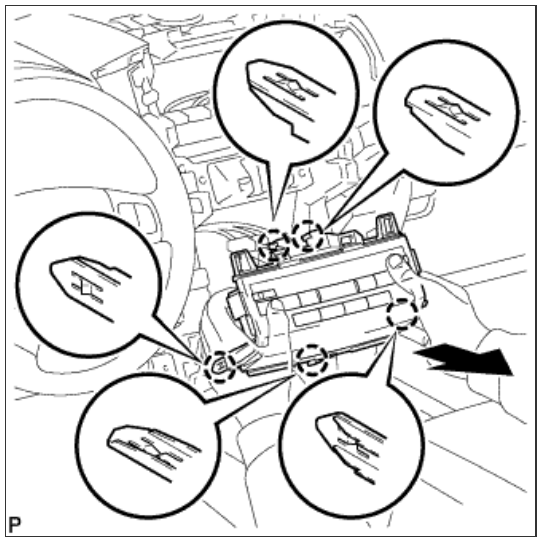


81. REMOVE NAVIGATION MODULE BOARD WITH DISC PLAYER BRACKET (w/ Multi-display)

a. Detach the clamp.

b. Remove the 2 screws and nut.


c. Disconnect the navigation module board connectors and remove the navigation module board with disc player bracket.

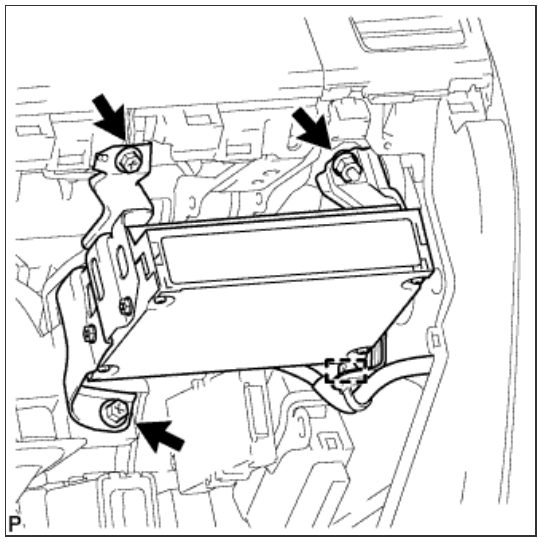

82. REMOVE REAR NO. 2 AIR DUCT

a. Fold back the front floor carpet.


b. Detach the clip and remove the air duct.

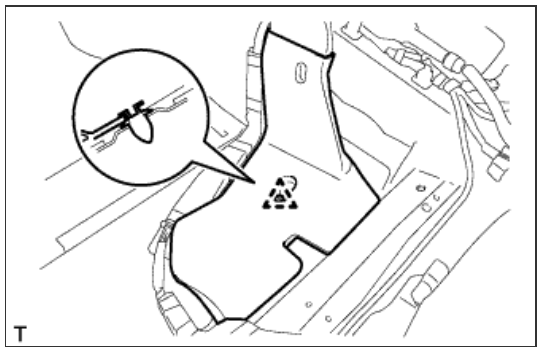

83. REMOVE REAR NO. 4 AIR DUCT


a. Fold back the front floor carpet.

b. Detach the clip and remove the air duct.

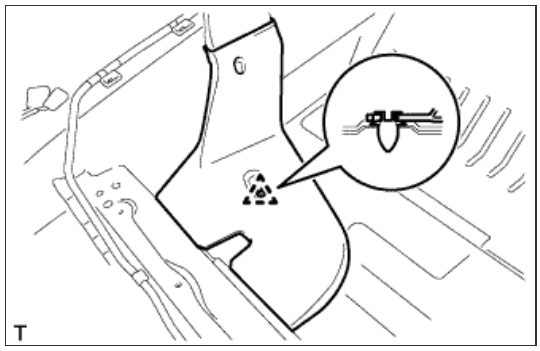


84. REMOVE INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for LHD)

a. Disconnect the connector.

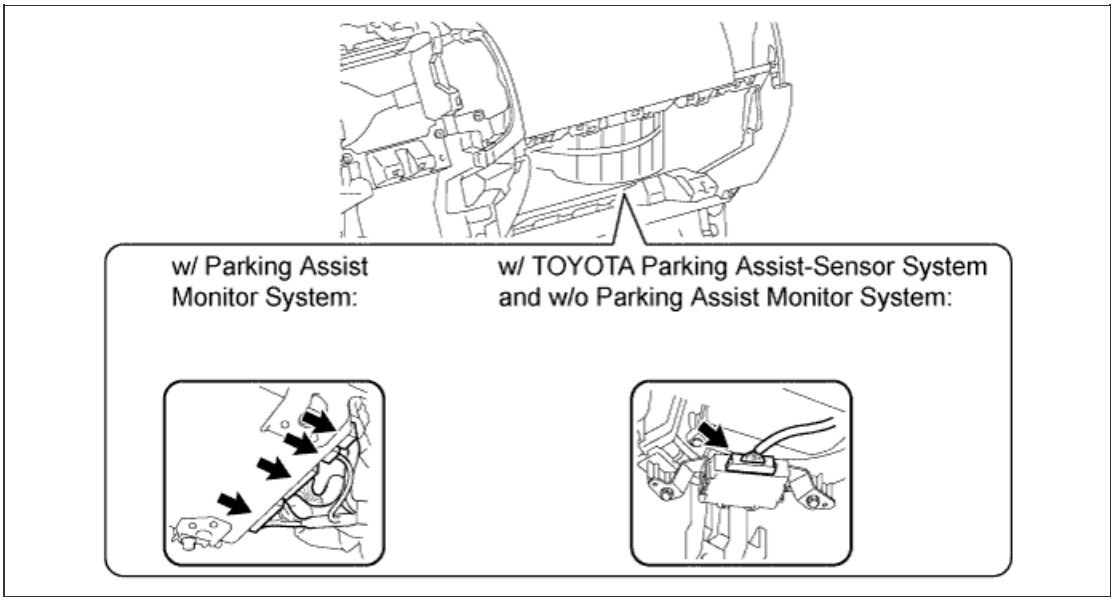


b. Disconnect the connectors and clamps.

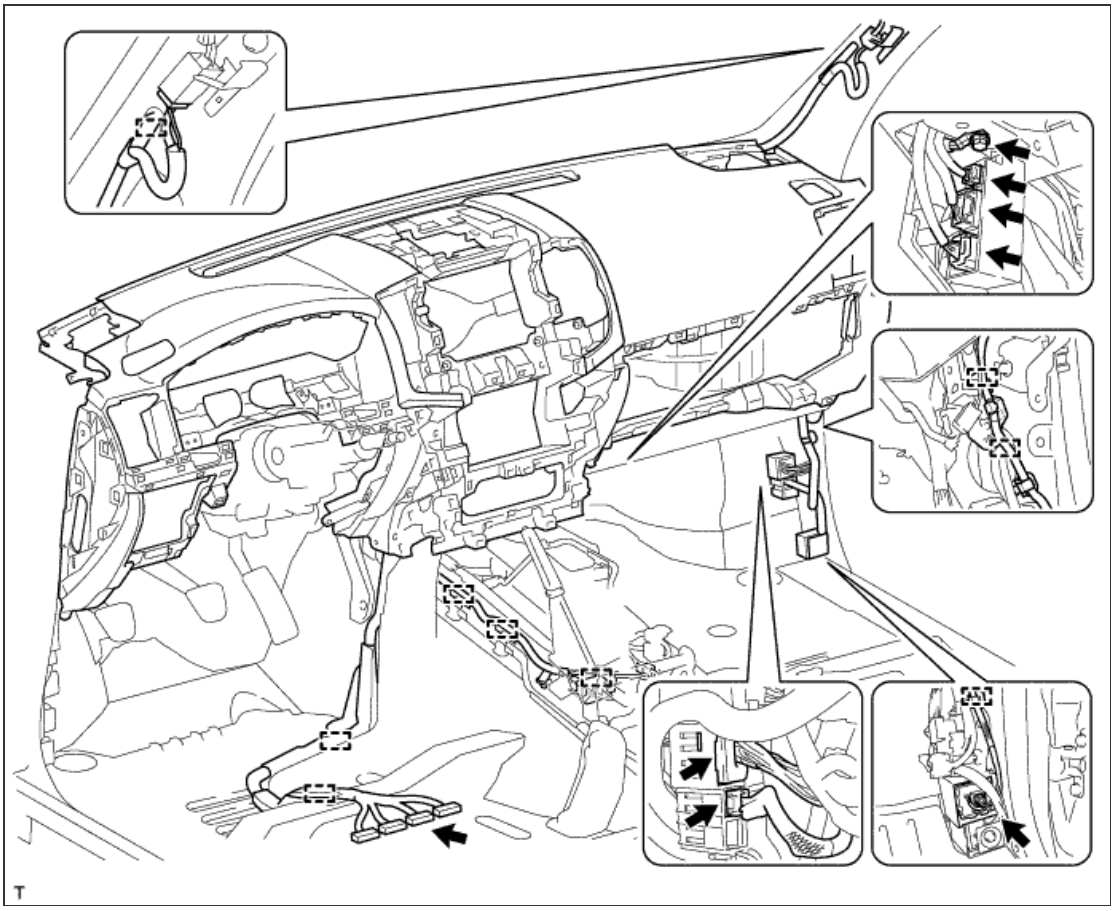

c. Remove the bolt and disconnect the wire harness.

d. Remove the 2 passenger airbag bolts.

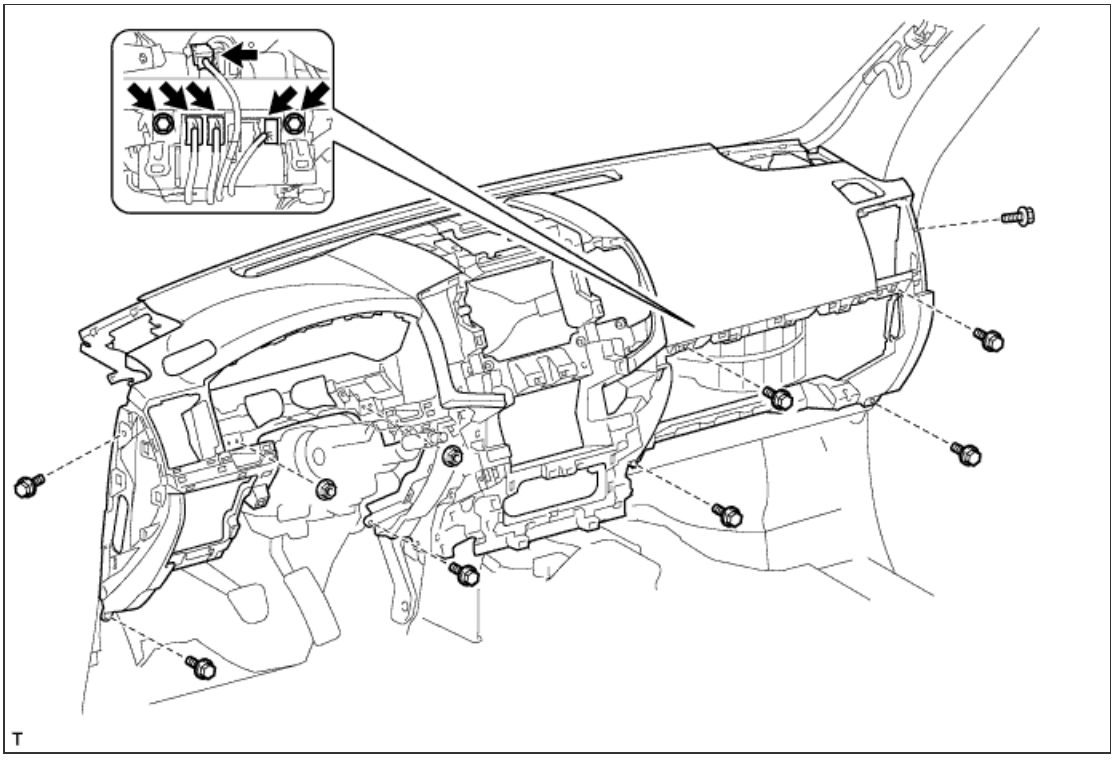


e. Disconnect the connectors.

f. Remove the 8 bolts.


g. Remove the 2 nuts and safety pad.

85. REMOVE INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for RHD)

a. Disconnect the connector.

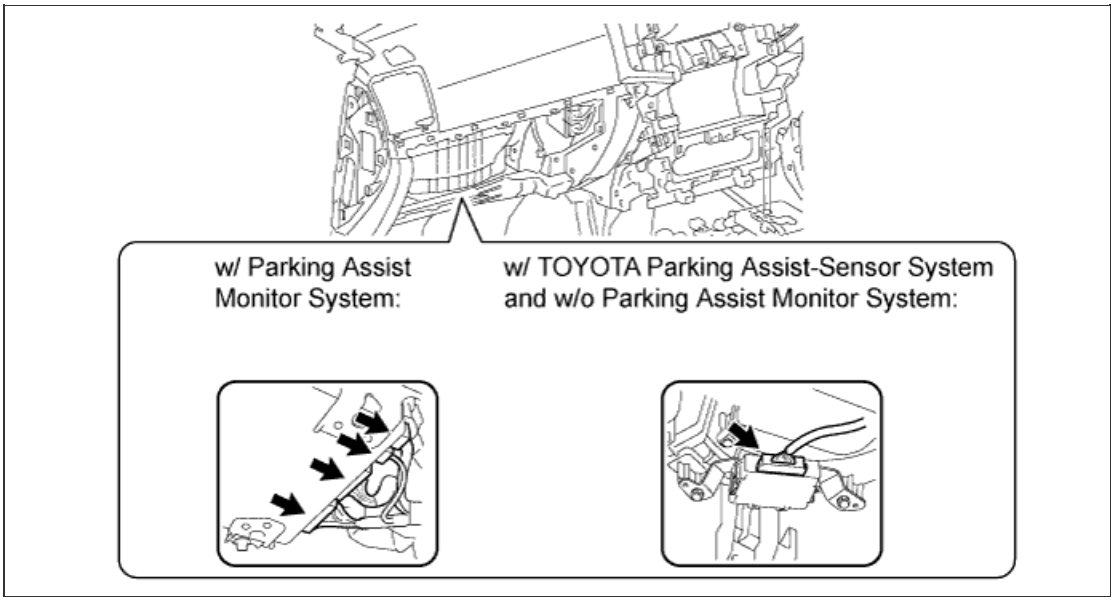


b. Disconnect the connectors and clamps.

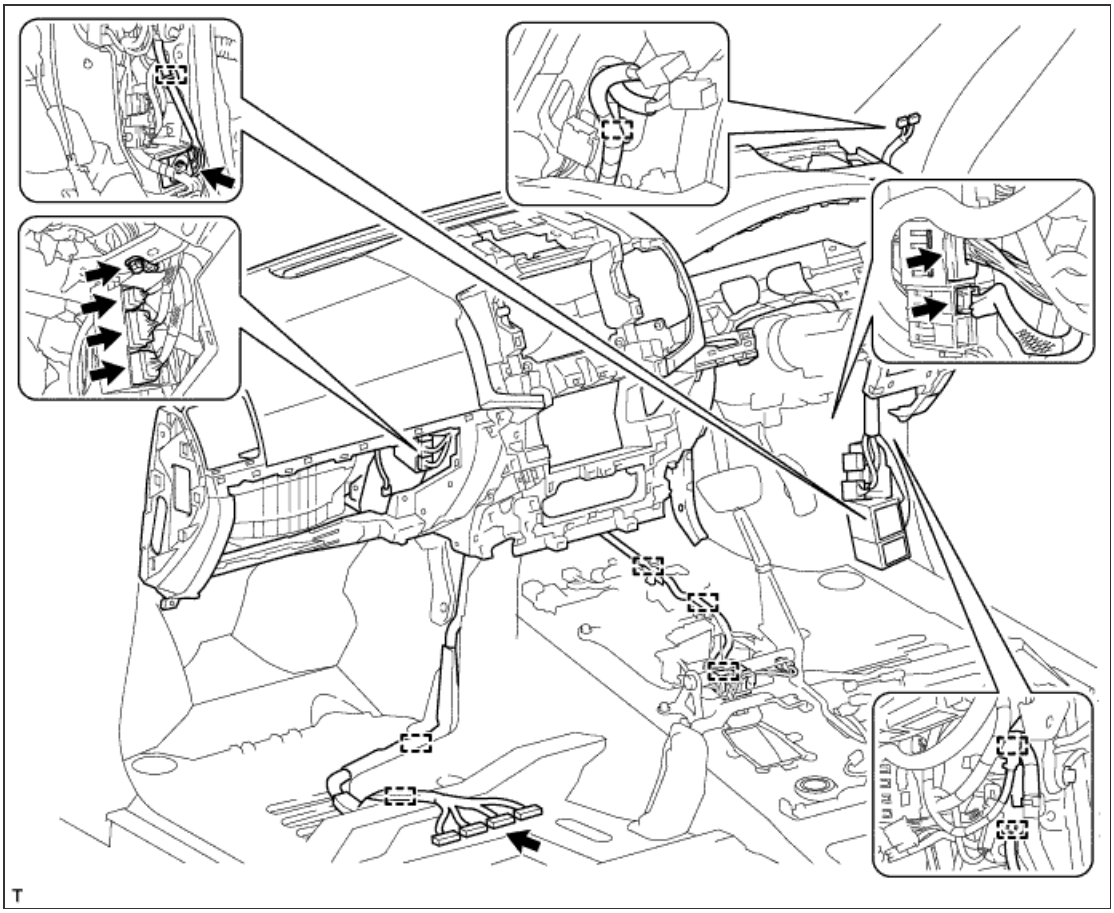

c. Remove the bolt and disconnect the wire harness.

d. Remove the 2 passenger airbag bolts.

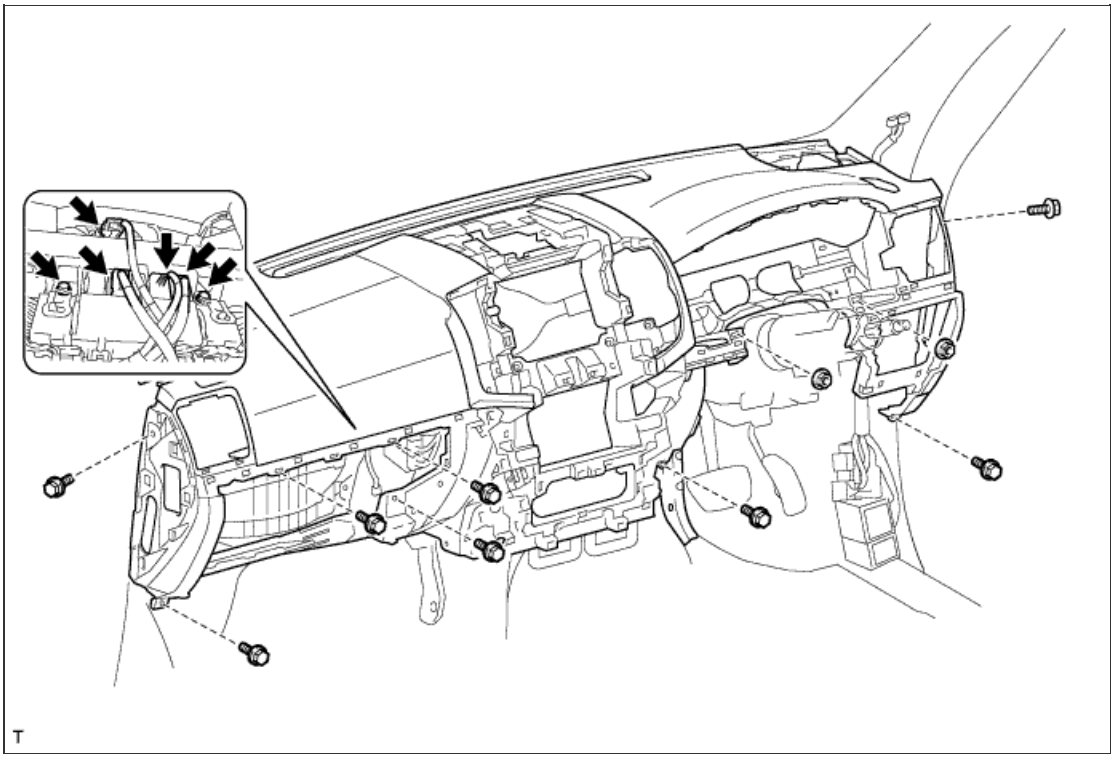

e. Disconnect the connectors.


f. Remove the 8 bolts.

g. Remove the 2 nuts and safety pad.

for Preparation Click here


1. REMOVE CENTER HEATER TO REGISTER DUCT

a. Remove the 3 screws and duct.

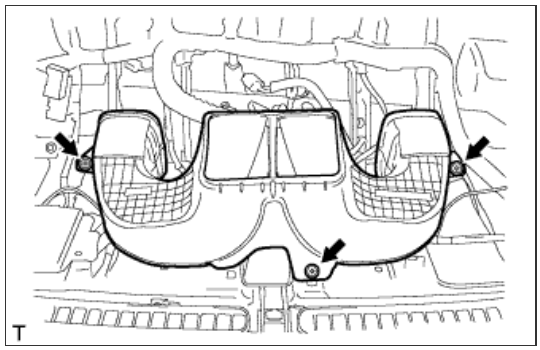

2. REMOVE REAR NO. 1 AIR DUCT

a. Remove the 2 screws and duct.

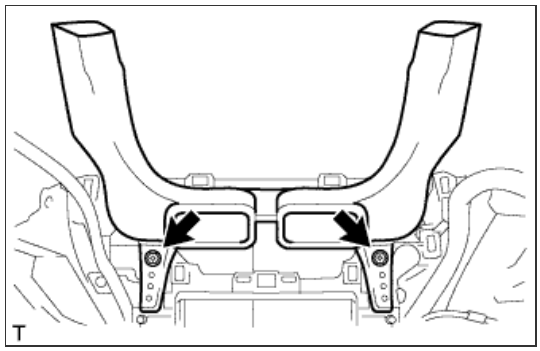


3. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY

a. Detach the claw and remove the wire.


b. Disconnect the 2 connectors and remove the instrument panel wire from the front passenger airbag.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

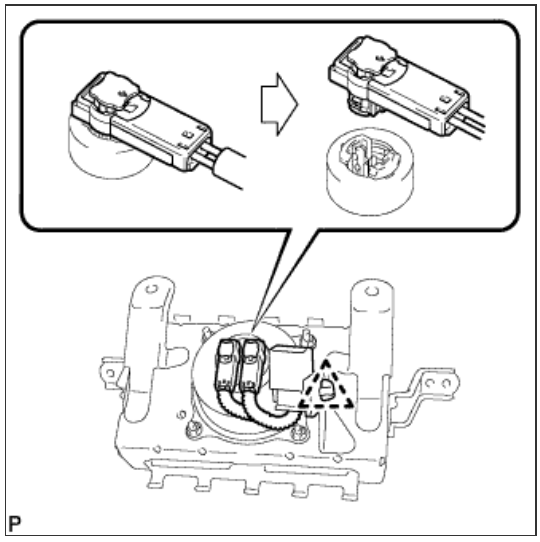


c. Remove the 2 screws.

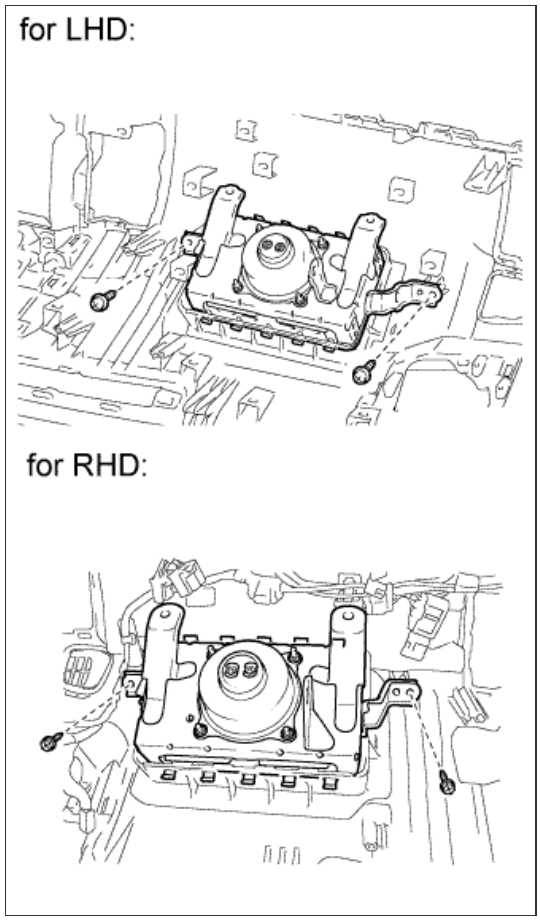

d. Detach the 5 hooks (A).


e. Detach the 5 hooks (B) and remove the front passenger airbag from the instrument panel.

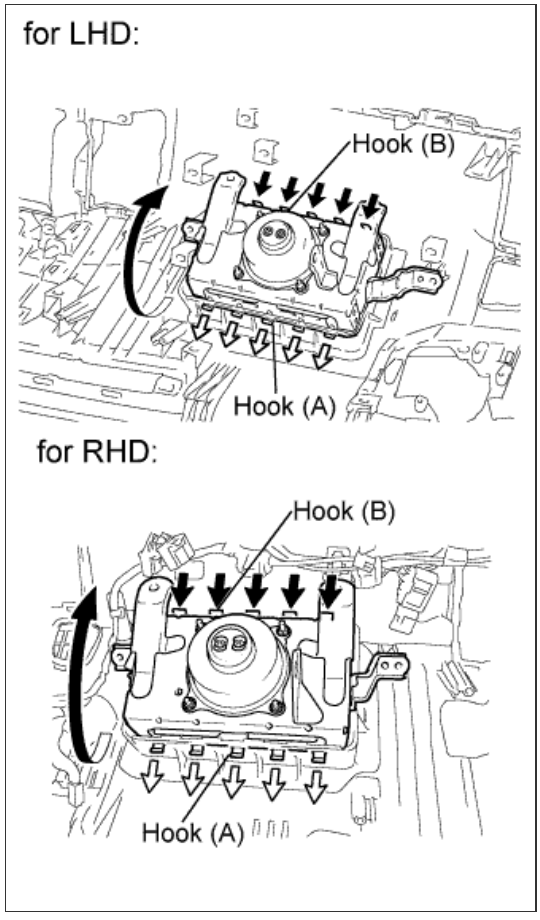

4. REMOVE DEFROSTER NOZZLE ASSEMBLY


a. Detach the 11 claws and remove the nozzle.

a. Detach the 11 claws and remove the nozzle.

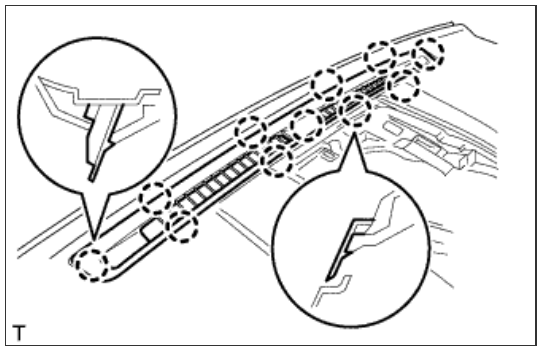


5. REMOVE NO. 1 SIDE DEFROSTER NOZZLE

a. Detach the 2 claws and remove the nozzle.

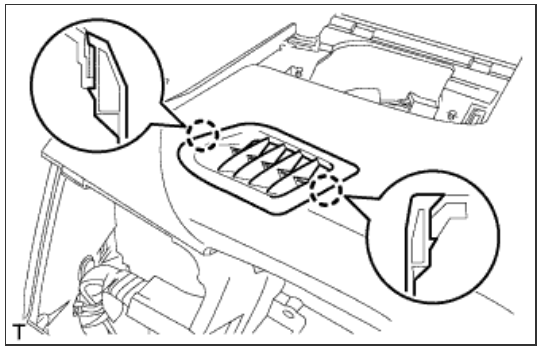

6. REMOVE NO. 2 SIDE DEFROSTER NOZZLE


a. Detach the 3 claws and remove the nozzle.

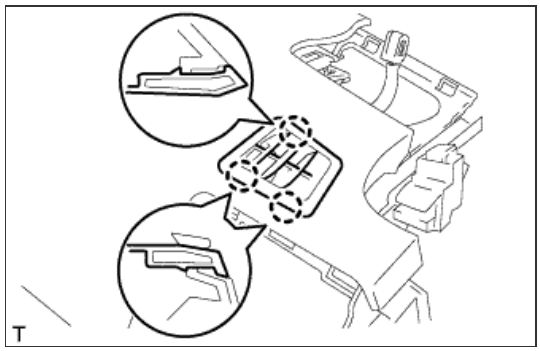

7. REMOVE NAVIGATION ANTENNA ASSEMBLY (w/ Multi-display)


a. Detach the 2 clamps.

b. Remove the 2 screws and antenna.

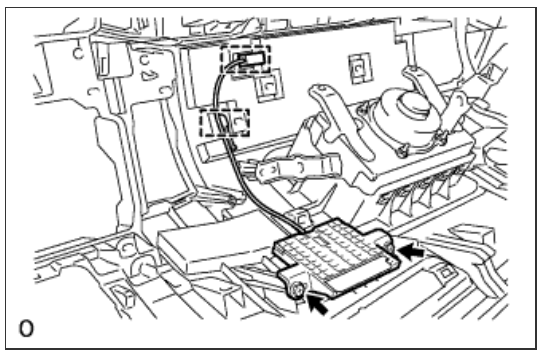


8. REMOVE ANTENNA CORD SUB-ASSEMBLY (w/ Multi-display)

a. for LHD:
Detach the 8 clamps and remove the antenna cord.

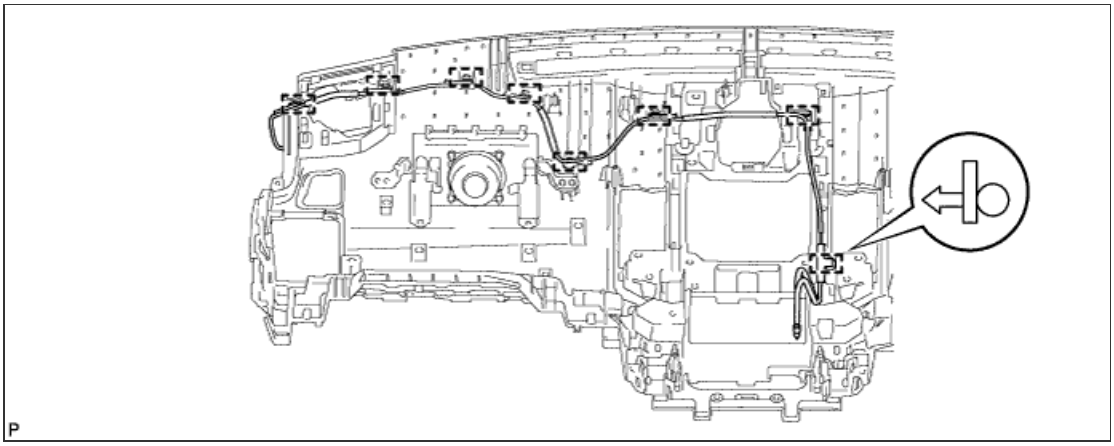


b. for RHD:
Detach the 6 clamps and remove the antenna cord.

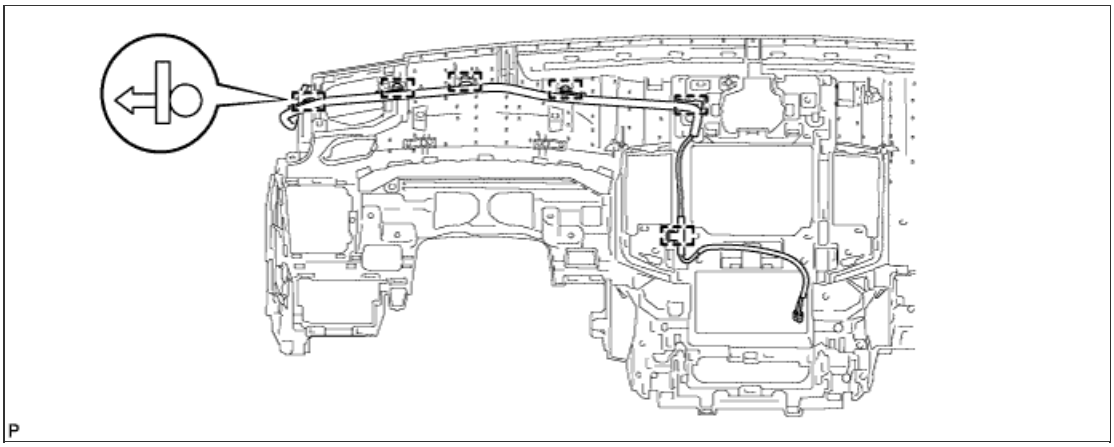


9. REMOVE ANTENNA CORD SUB-ASSEMBLY (w/o Multi-display)

a. for LHD:
Detach the 7 clamps and remove the antenna cord.

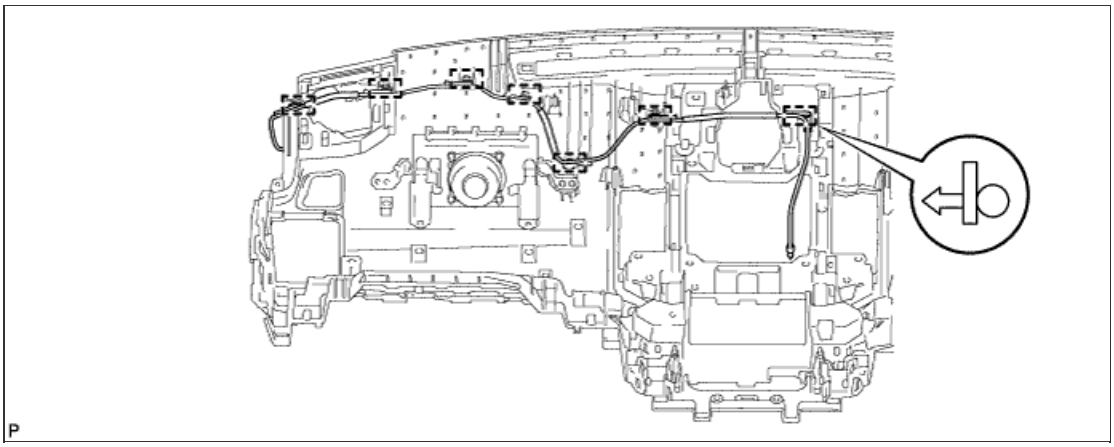


b. for RHD:
Detach the 5 clamps and remove the antenna cord.

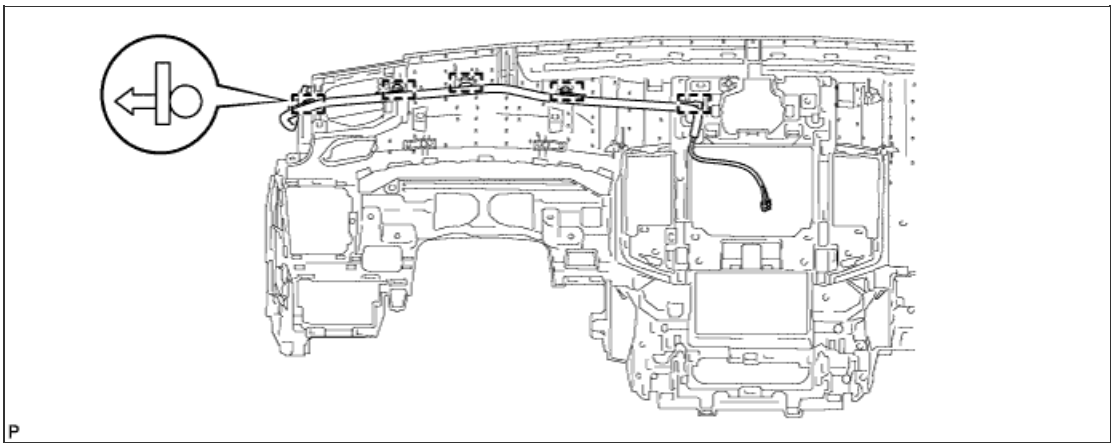


10. REMOVE NO. 2 INSTRUMENT PANEL WIRE (for LHD)

a. Detach the wire from the clamps and remove the wire from the instrument panel.

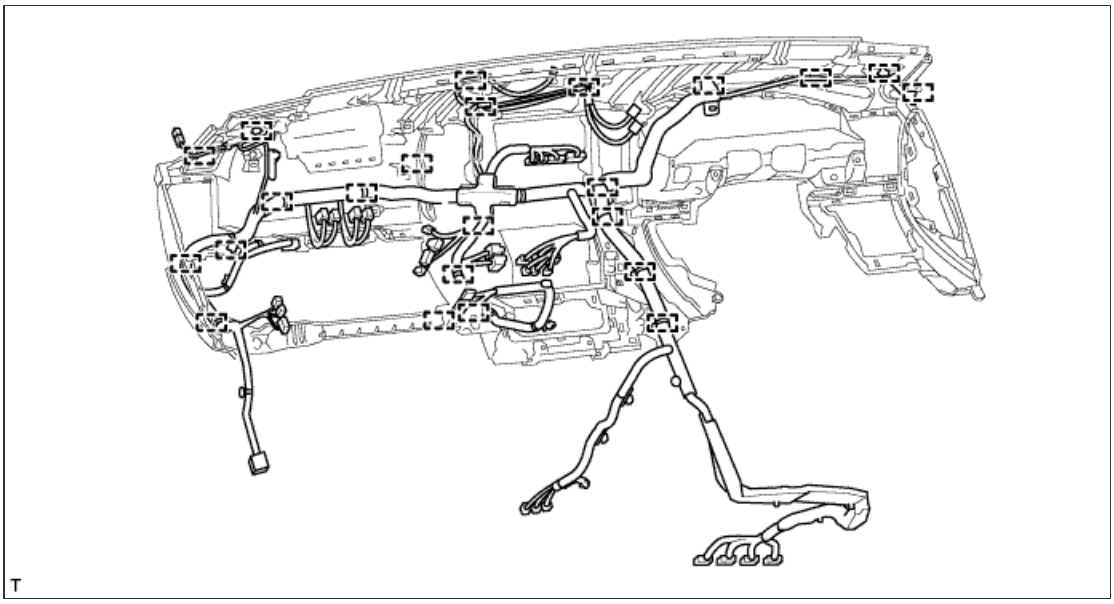

11. REMOVE NO. 2 INSTRUMENT PANEL WIRE (for RHD)

a. Detach the wire from the clamps and remove the wire from the instrument panel.

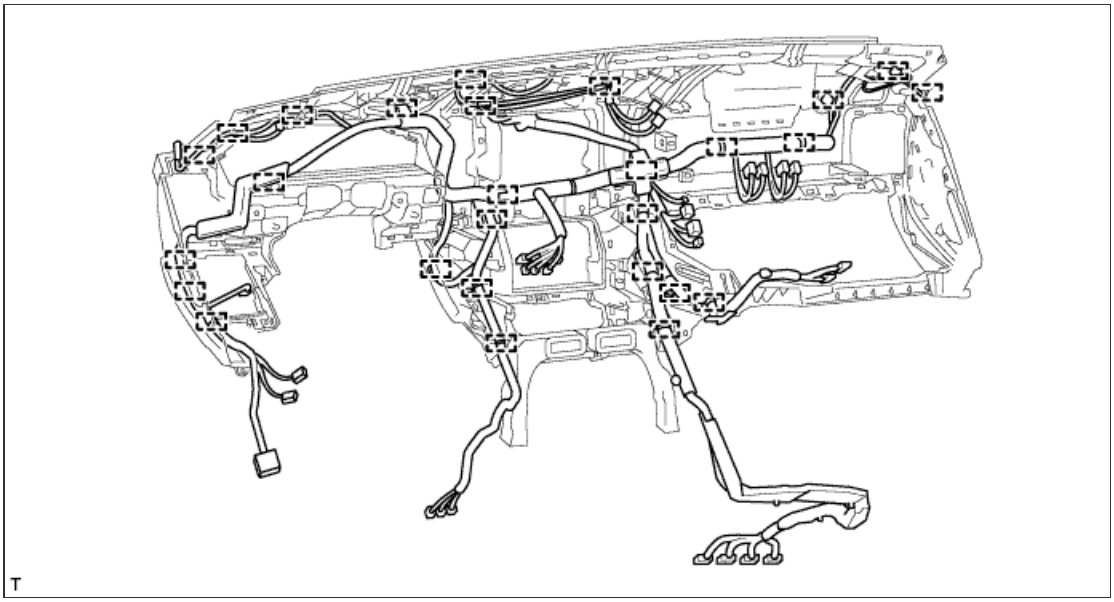


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).


1. INSTALL NO. 2 INSTRUMENT PANEL WIRE (for LHD)

a. Attach the wire to the clamps to install the wire to the instrument panel.

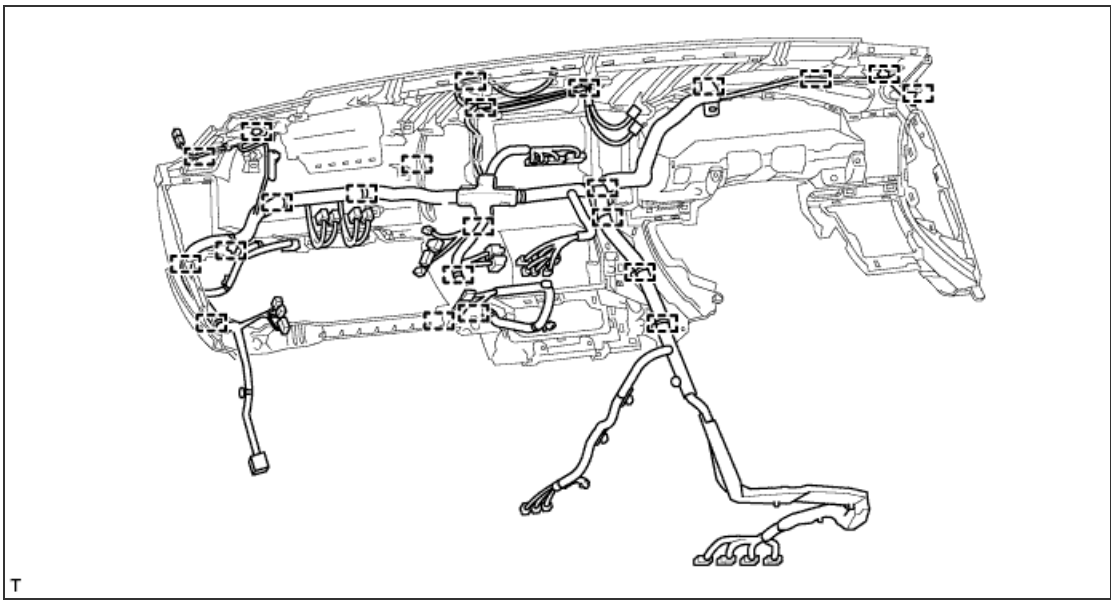


2. INSTALL NO. 2 INSTRUMENT PANEL WIRE (for RHD)

a. Attach the wire to the clamps to install the wire to the instrument panel.

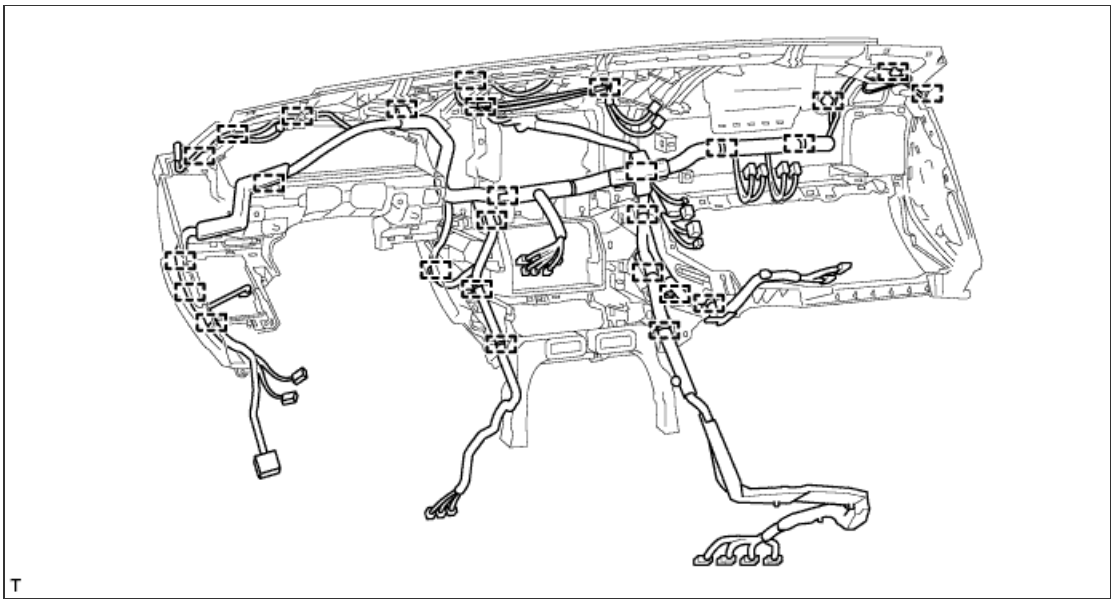


3. INSTALL ANTENNA CORD SUB-ASSEMBLY (w/o Multi-display)

a. for LHD:
Attach the 7 clamps to install the antenna cord.

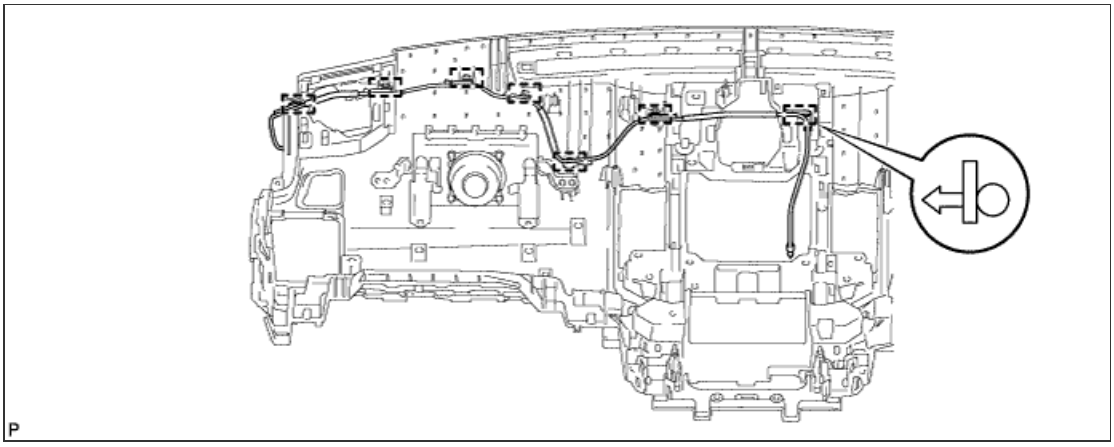


b. for RHD:
Attach the 5 clamps to install the antenna cord.

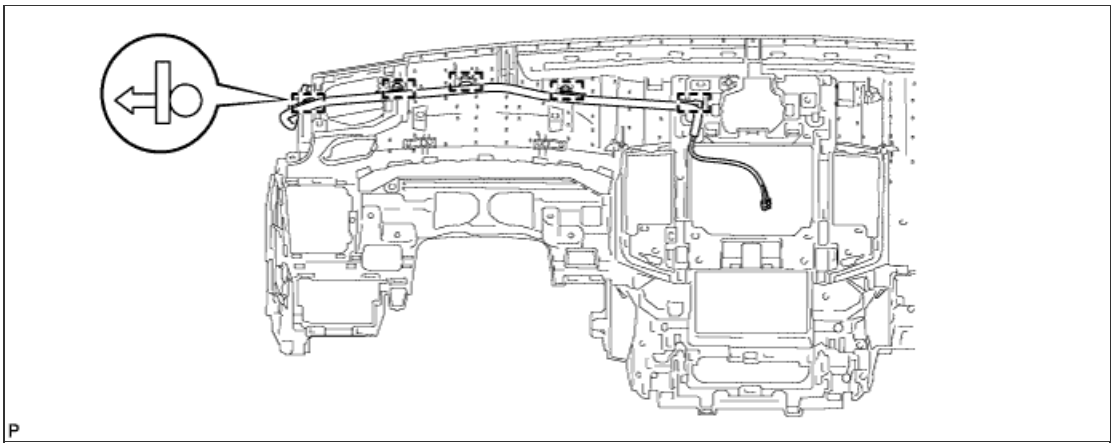


4. INSTALL ANTENNA CORD SUB-ASSEMBLY (w/ Multi-display)

a. for LHD:
Attach the 8 clamps to install the antenna cord.

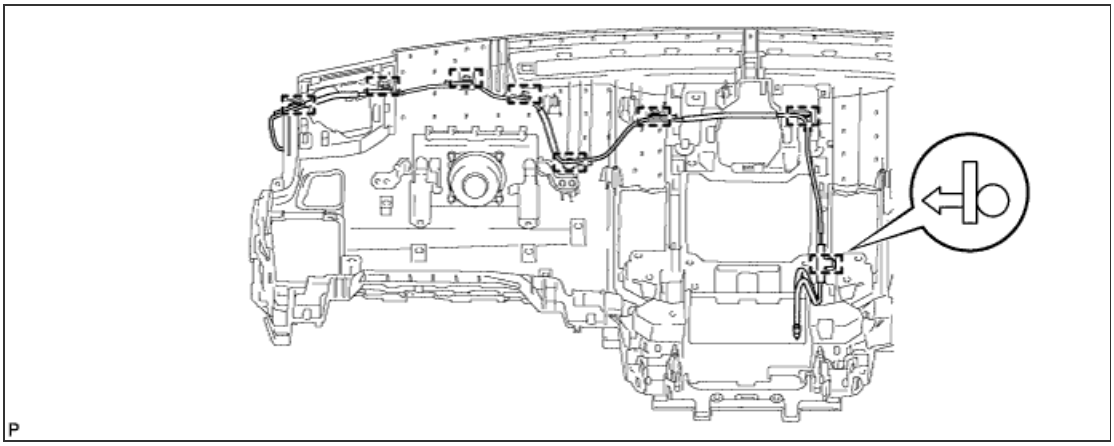


b. for RHD:
Attach the 6 clamps to install the antenna cord.

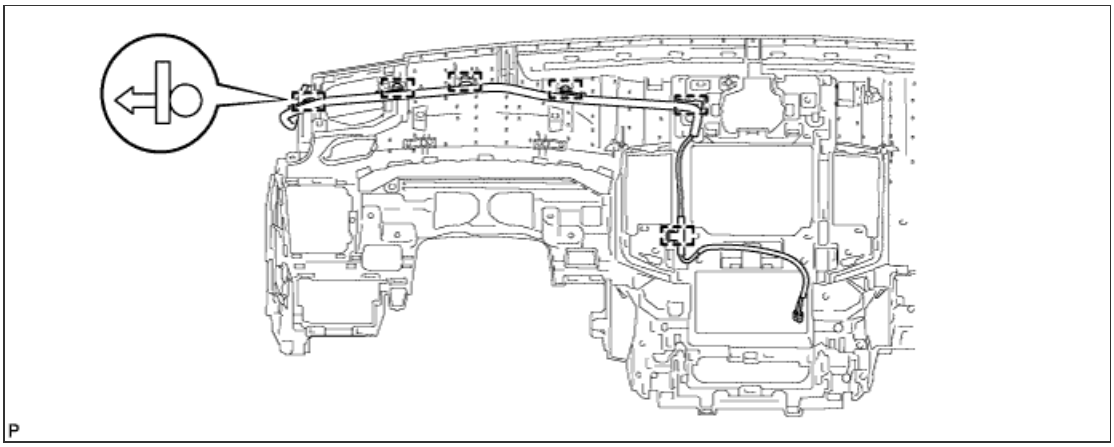

5. INSTALL NAVIGATION ANTENNA ASSEMBLY (w/ Multi-display)


a. Install the antenna with the 2 screws.

b. Attach the 2 clamps.

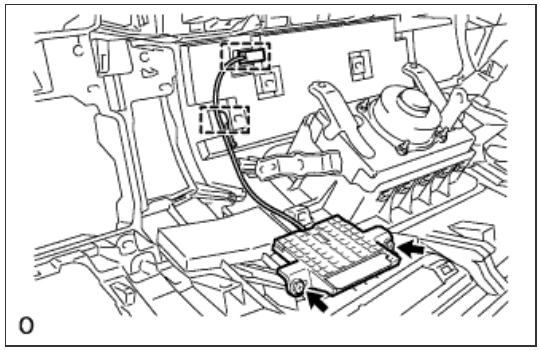


6. INSTALL NO. 2 SIDE DEFROSTER NOZZLE

a. Attach the 3 claws to install the nozzle.

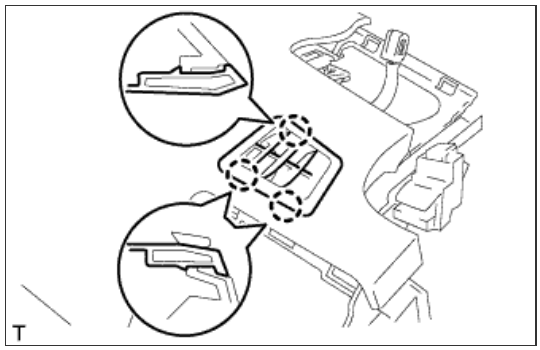


7. INSTALL NO. 1 SIDE DEFROSTER NOZZLE

a. Attach the 2 claws to install the nozzle.

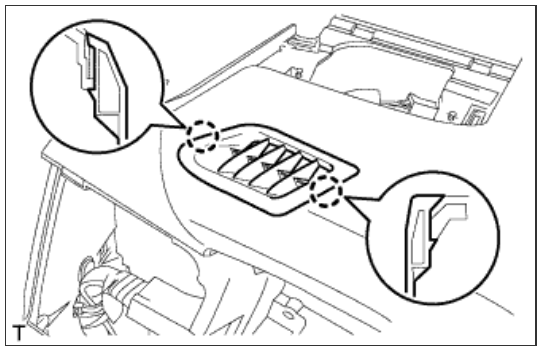

8. INSTALL DEFROSTER NOZZLE ASSEMBLY


a. Attach the 11 claws to install the nozzle.

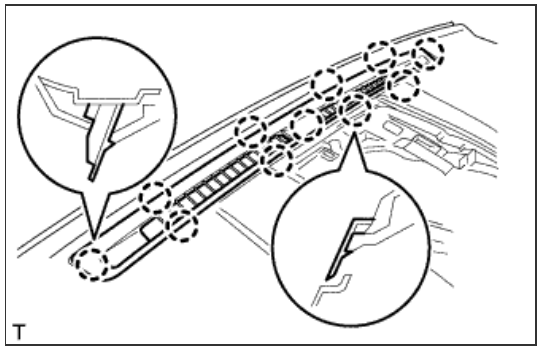


9. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY

a. Attach the 5 hooks (A).

b. Attach the 5 hooks (B) to install the front passen er airba on the instrument panel.

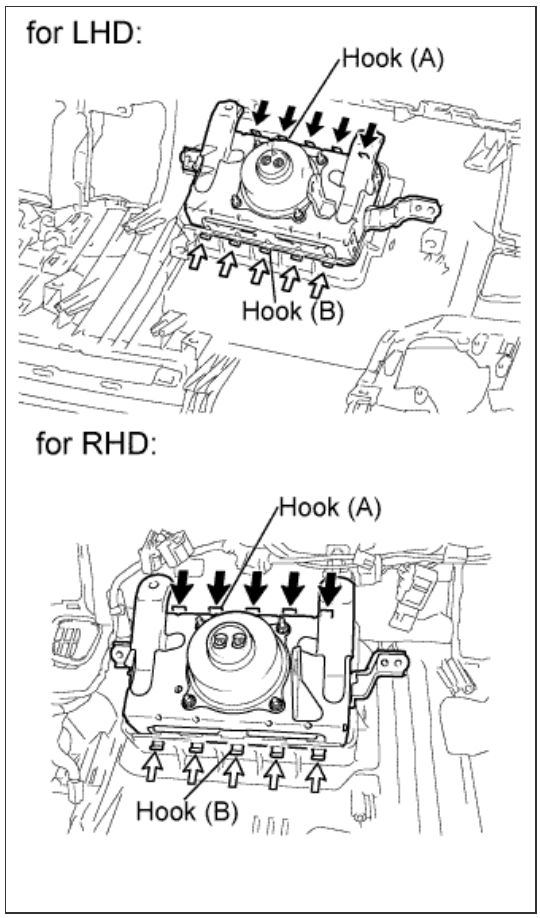

c. Install the 2 screws.

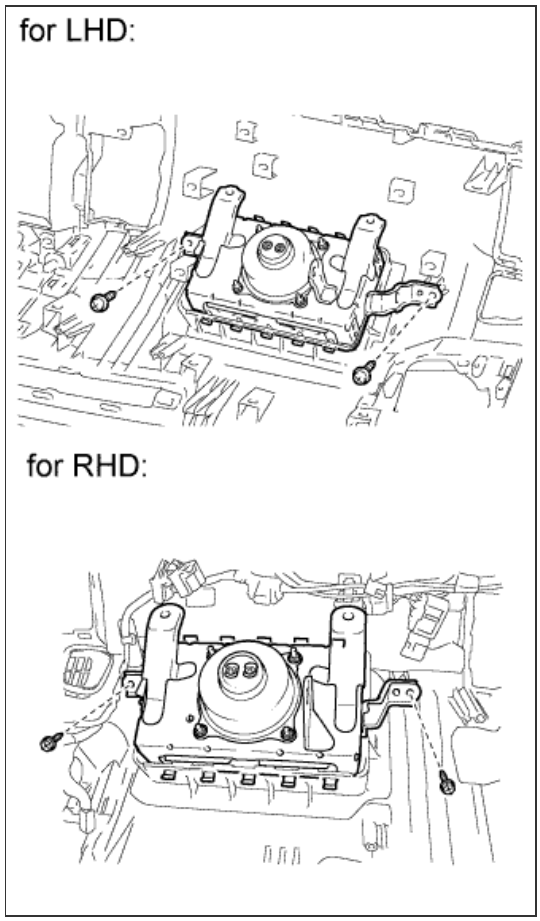


d. Connect the 2 connectors and install the instrument panel wire assembl to the front passen er airba .

NOTICE:


When handlin the airba connector, take care not to dama e the airba wire harness.

e. Attach the claw and install the wire.

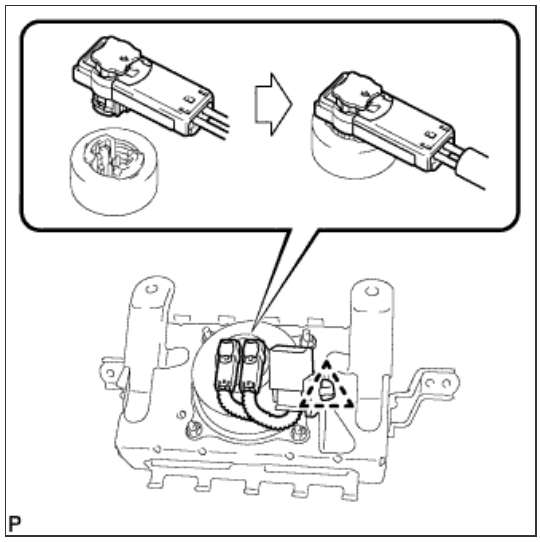


10. INSTALL REAR NO. 1 AIR DUCT

a. Install the duct with the 2 screws.

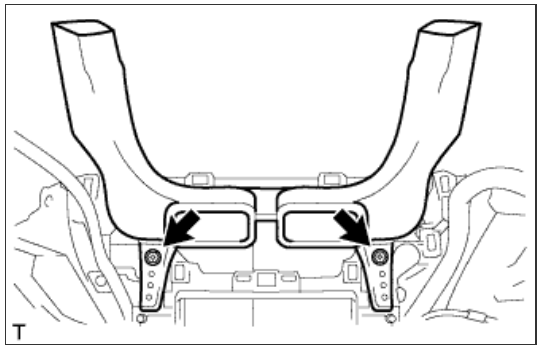

11. INSTALL CENTER HEATER TO REGISTER DUCT

a. Install the duct with the 3 screws.

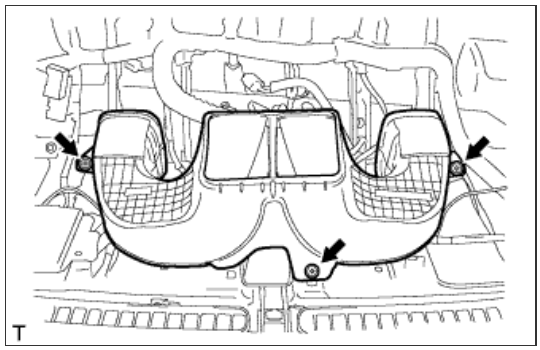


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for LHD)


a. Install the safety pad with the 8 bolts and 2 nuts.

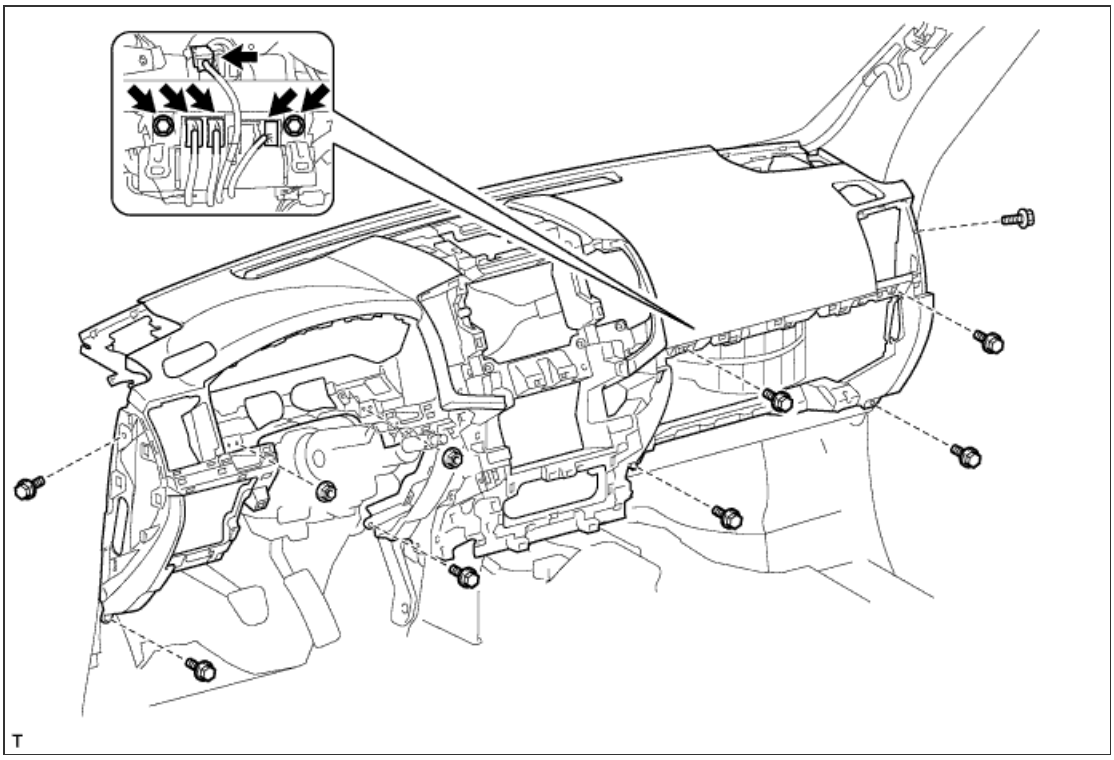

b. Install the 2 passenger airbag bolts.


Torque:
20 N*m{ 204 kgf*cm , 15 ft.*lbf }

c. Connect the wire harness with the bolt.

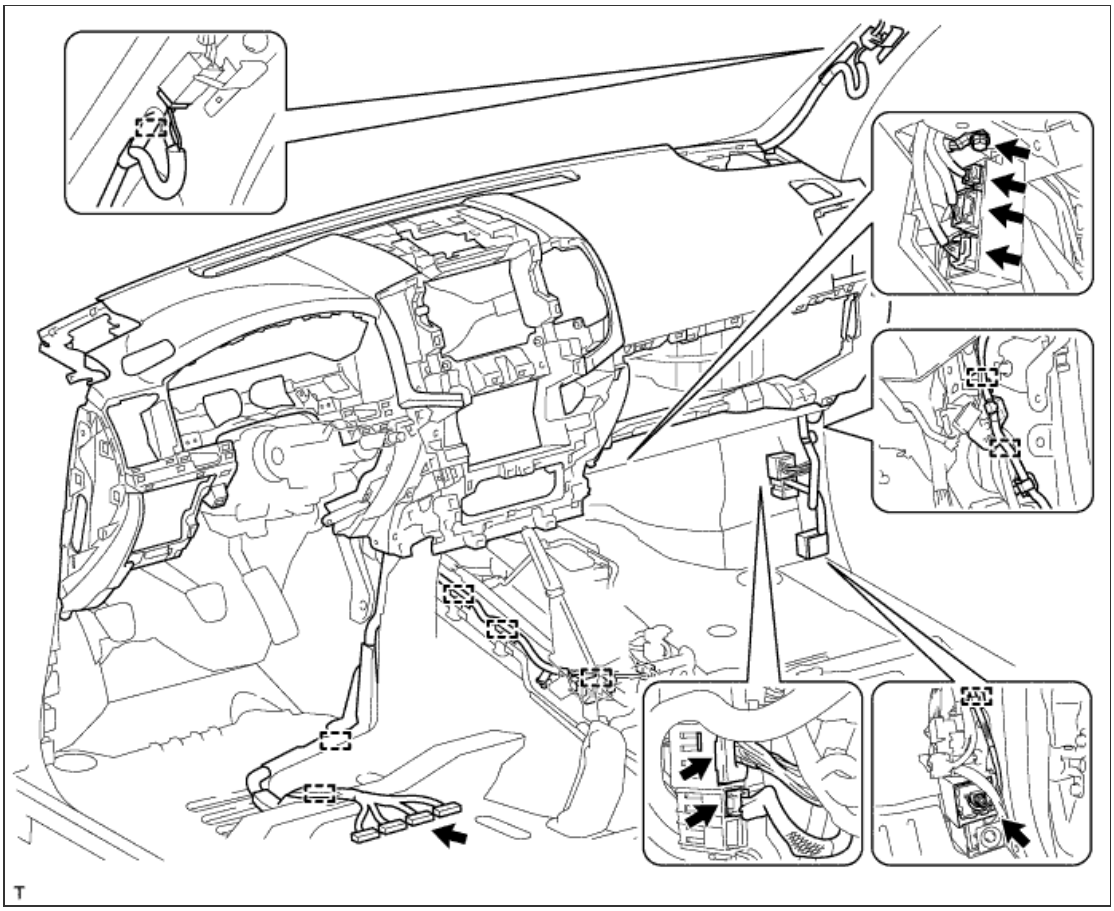


d. Connect the connectors and clamps.

e. Connect the connectors.

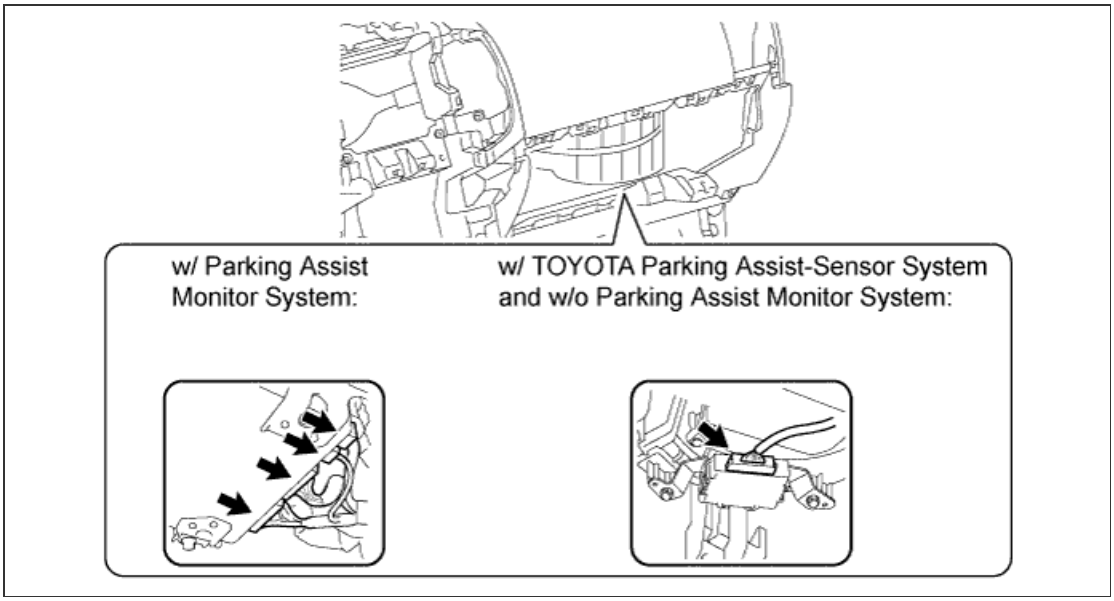

2. INSTALL INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for RHD)

a. Install the safety pad with the 8 bolts and 2 nuts.

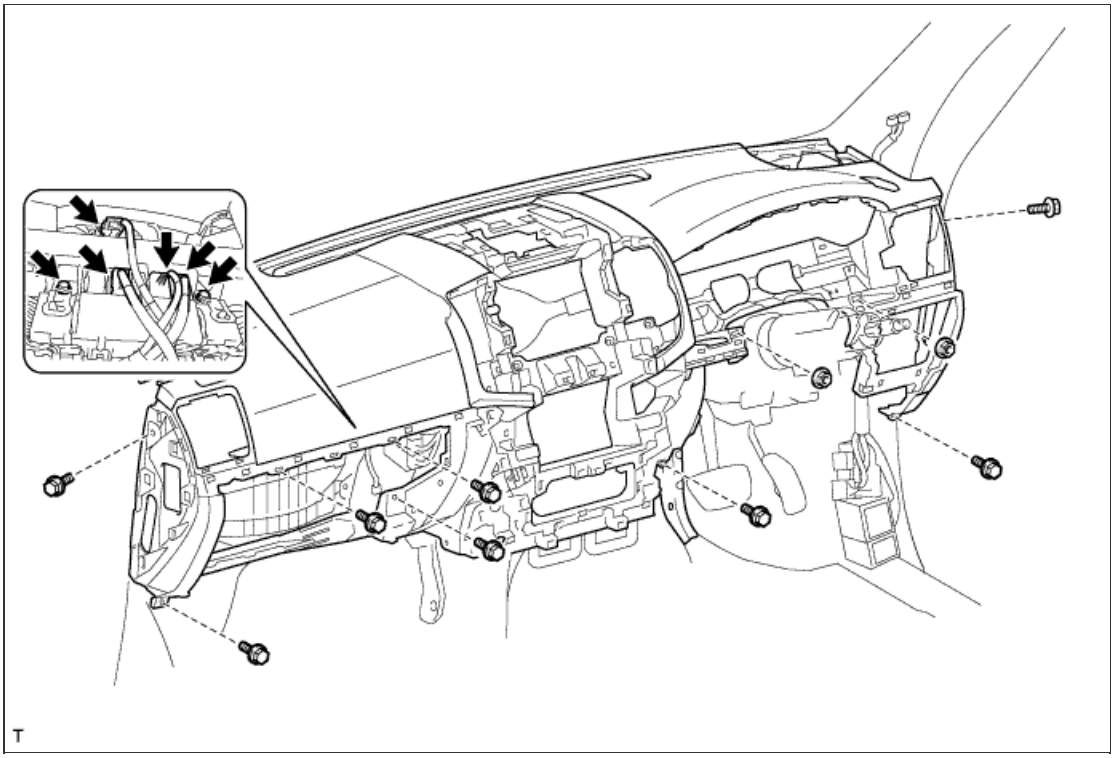


b. Connect the connectors.

c. Install the 2 passenger airbag bolts.


Torque:
20 N*m{ 204 kgf*cm , 15 ft.*lbf }

d. Connect the wire harness with the bolt.

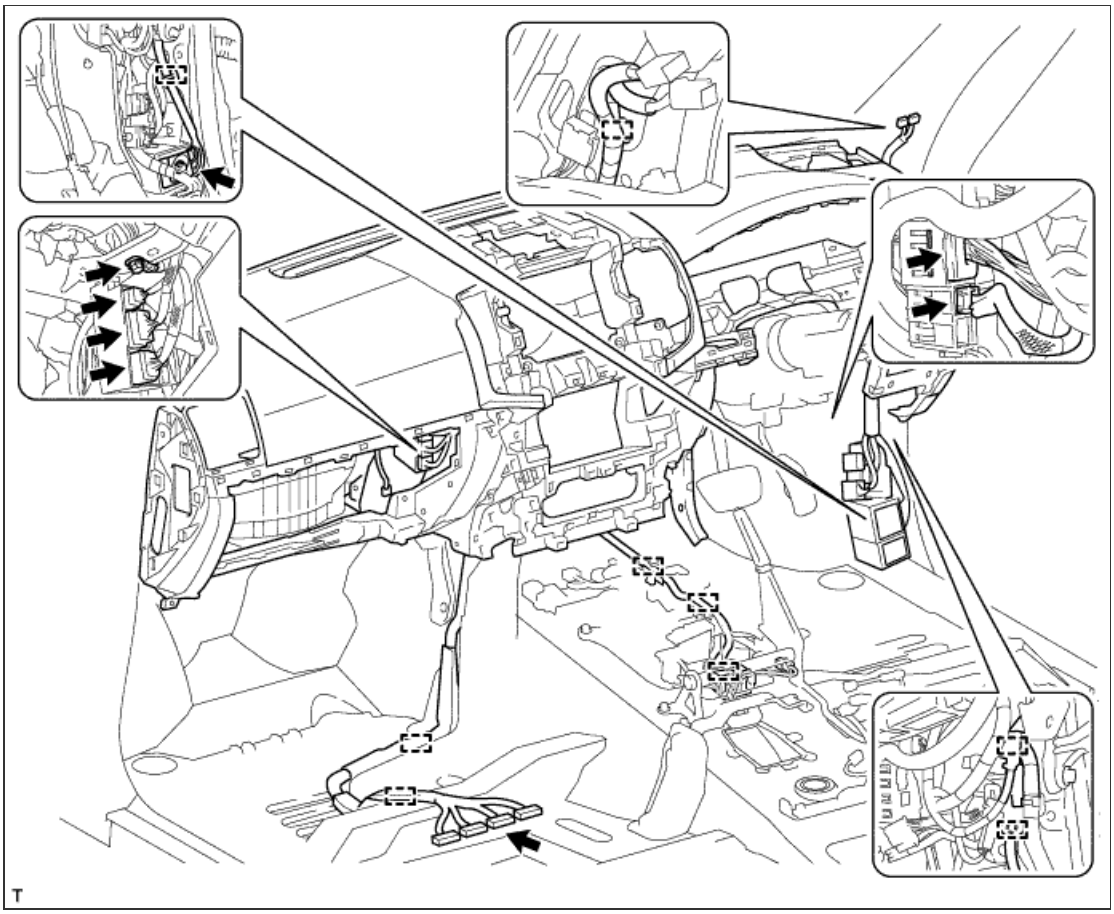


e. Connect the connectors and clamps.

f. Connect the connectors.

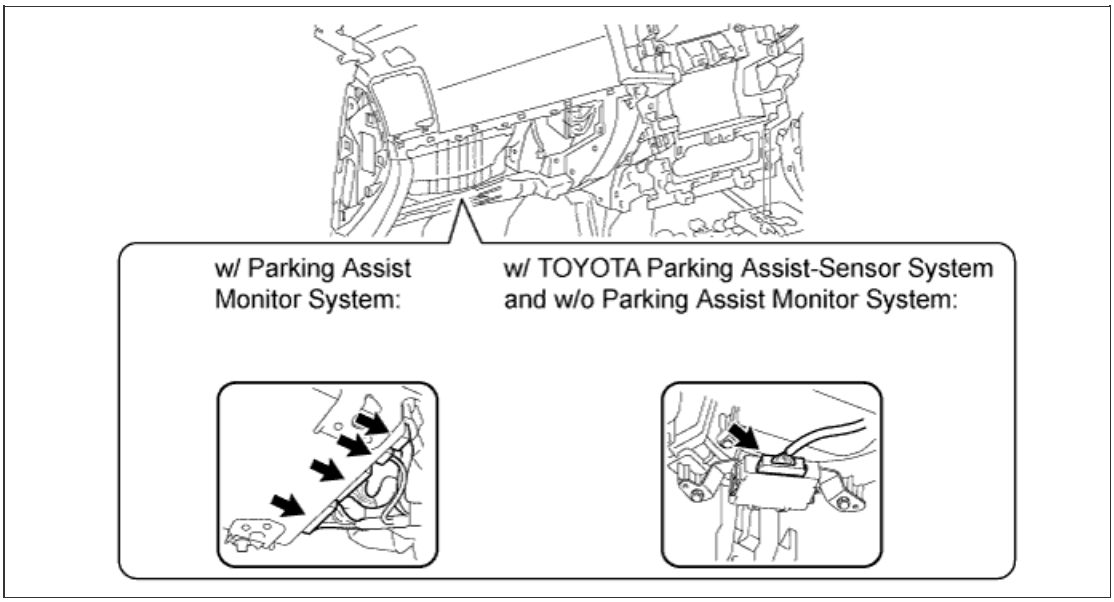


3. INSTALL REAR NO. 4 AIR DUCT

a. Attach the clip to install the air duct.

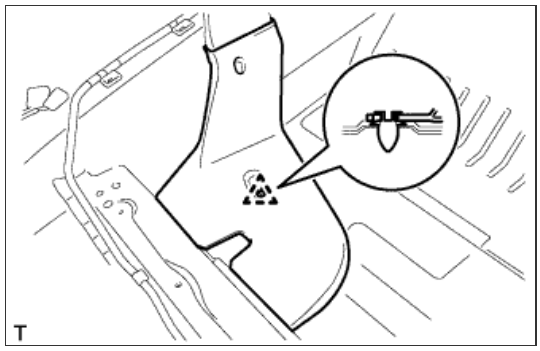

4. INSTALL REAR NO. 2 AIR DUCT

a. Attach the clip to install the air duct.

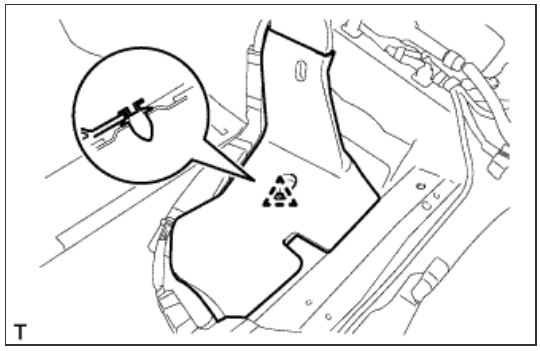


5. INSTALL NAVIGATION MODULE BOARD WITH DISC PLAYER BRACKET (w/ Multi-display)

a. Connect the navigation module board connectors.

b. Install the navigation module board with disc player bracket with the nut and 2 screws.

Torque:
Nut:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }

c. Attach the clamp.

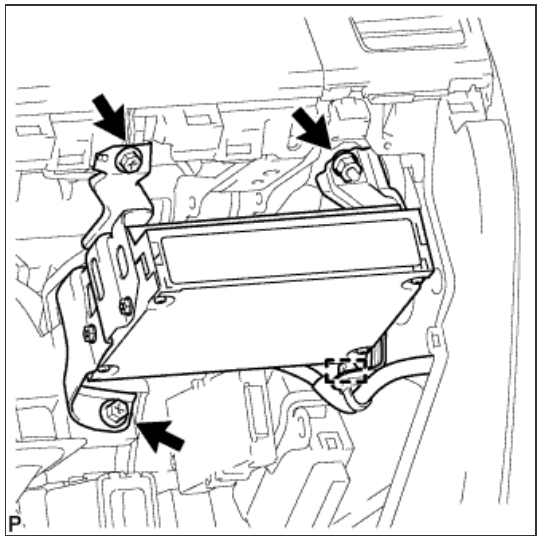


6. INSTALL AIR CONDITIONING CONTROL ASSEMBLY

a. Connect the connectors.

b. Insert the radio receiver and attach the 5 claws on its backside.

NOTICE:

When inserting the radio receiver, do not press the knobs on it.

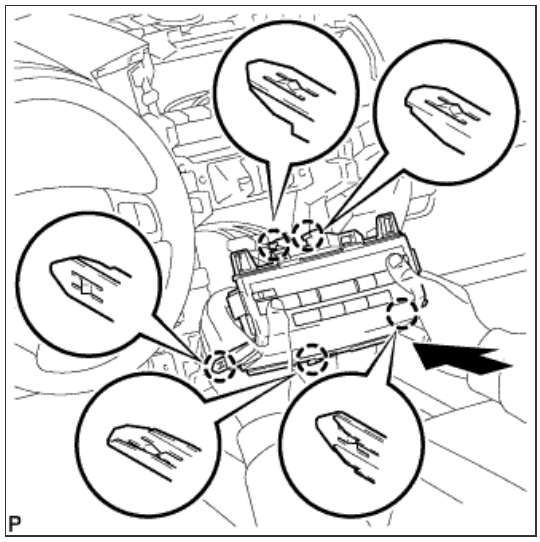


7. INSTALL RADIO RECEIVER ASSEMBLY WITH BRACKET (w/ Multi-display)

a. Connect the connectors.

b. Insert the radio receiver to attach the 5 claws on its backside.


NOTICE:

When inserting the radio receiver, do not press the knobs on it.

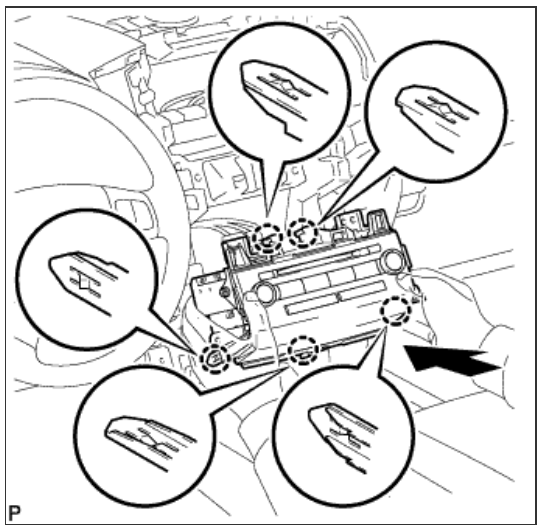


c. Install the radio receiver with the 2 screws and 2 bolts.

Torque:
Bolt:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }

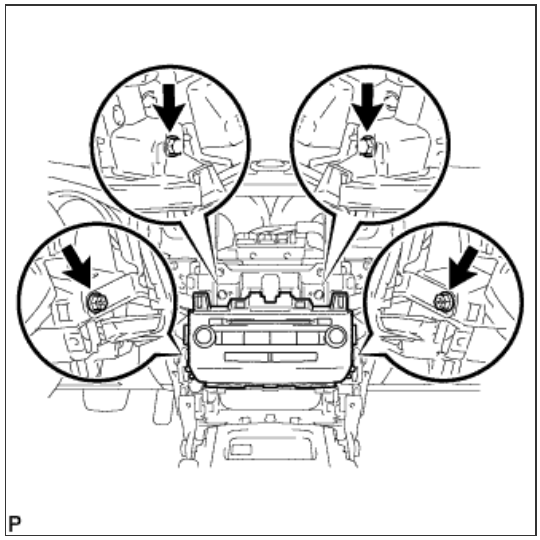

8. INSTALL RADIO TUNER OPENING COVER WITH BRACKET (w/o Radio Receiver)

a. Install the opening cover with the 2 bolts and 2 screws.

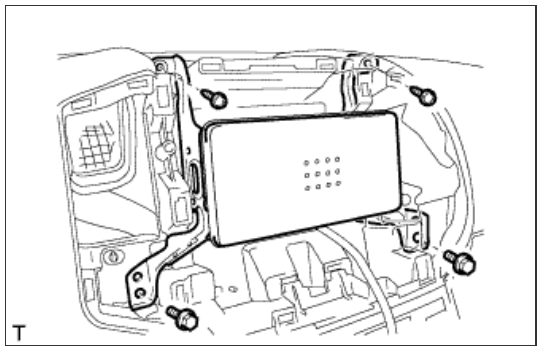


9. INSTALL RADIO RECEIVER ASSEMBLY WITH BRACKET (w/ Cassette Tape Player)

a. Connect the connectors.

b. Install the radio receiver with the 2 screws and 2 bolts.


Torque:
Bolt:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }

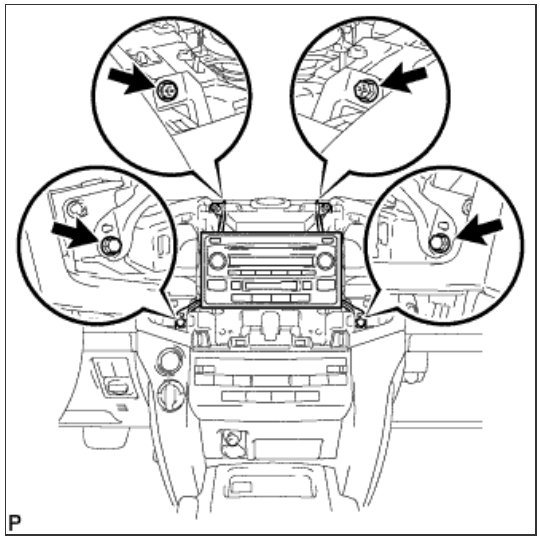

10. INSTALL NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL

a. Connect the connector.

b. Attach the 10 claws to install the finish panel.

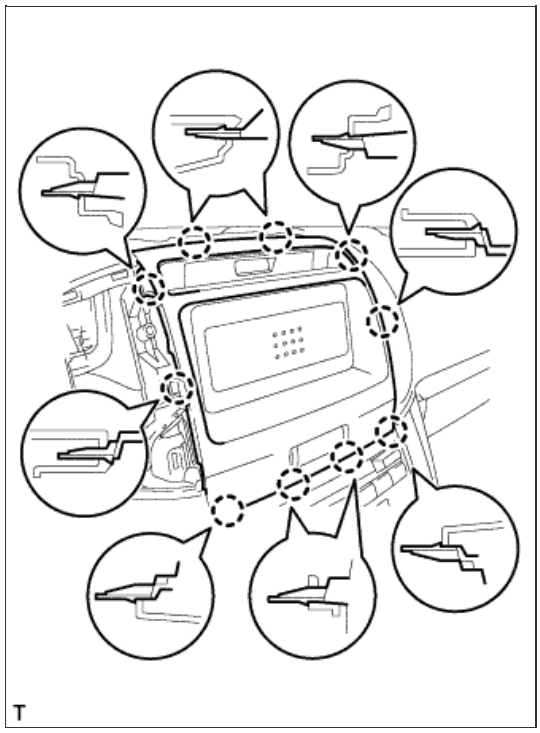


11. INSTALL RADIO RECEIVER ASSEMBLY WITH BRACKET (w/o Multi-display)

a. Connect the connectors.

b. Insert the radio receiver to attach the 10 claws on its backside.

NOTICE:

When inserting the radio receiver, do not press the knobs on it.

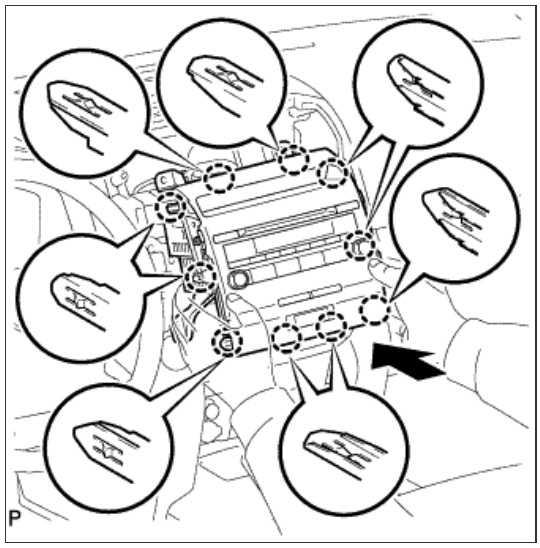

c. Install the radio receiver with the 2 screws and 2 bolts.

Torque:
Bolt:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }




12. INSTALL MULTI-DISPLAY ASSEMBLY WITH BRACKET (w/ Multi-display)

a. Connect the connectors.

b. Insert the display and attach the 2 clips and 6 claws on its backside.


NOTICE:

When inserting the display, do not press the knobs on it.

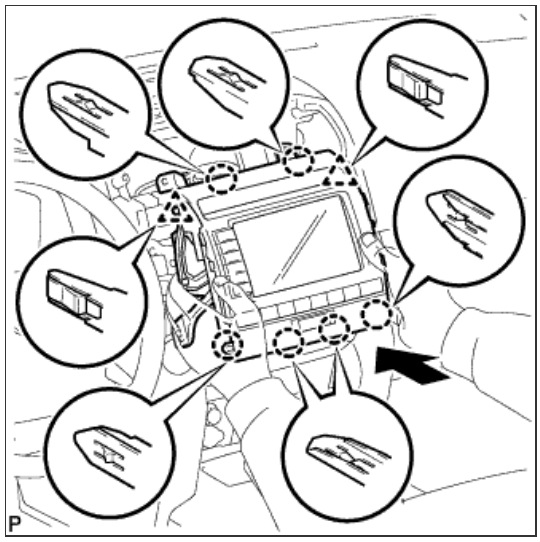

c. Install the display with the 2 screws and 2 bolts.


Torque:
Bolt:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }

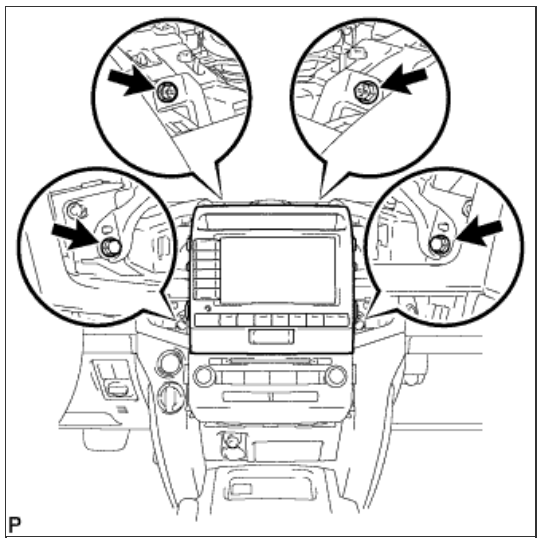

13. INSTALL NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Connect the connector.


b. Attach the 6 claws to install the register.

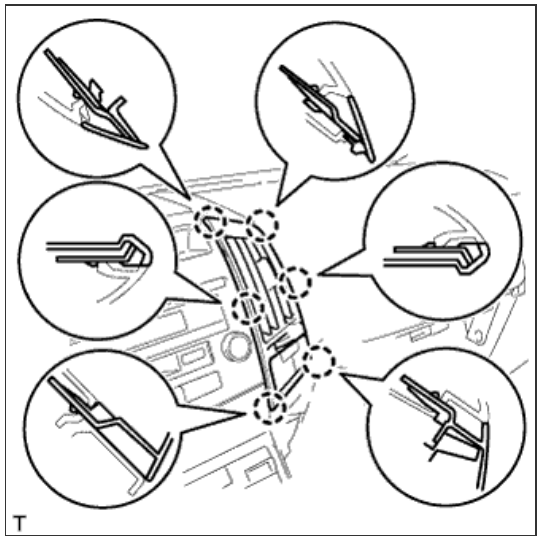

14. INSTALL NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Connect the connector.

b. Attach the 6 claws to install the register.

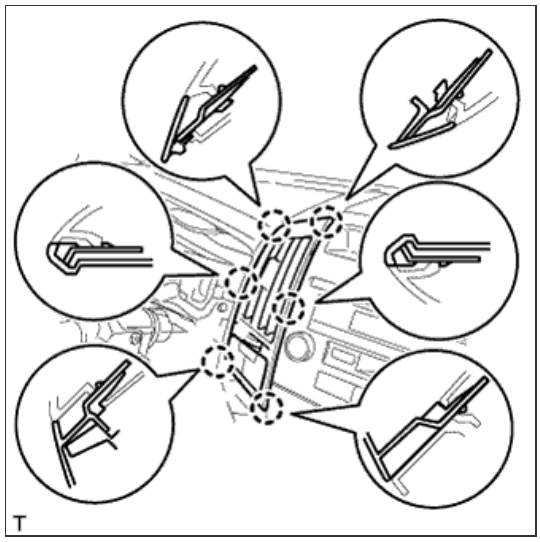

15. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (RH Side)

a. for 9 Speakers Models:

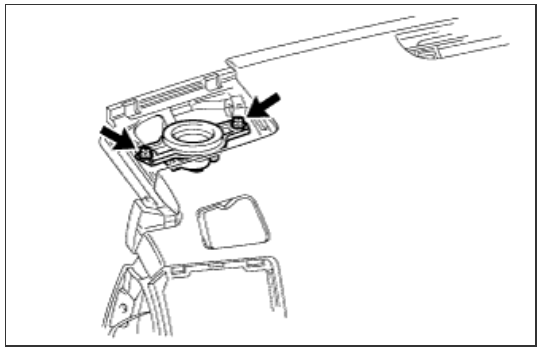

i. Connect the connector.


ii. Temporarily install the speaker by aligning the positioning pins of the speaker with the instrument panel.

iii. Install the speaker with the 2 bolts.

NOTICE:

- **Do not touch the cone part of the speaker.**
- **When installing the speaker to the instrument panel be careful that the wires do not get caught between the parts.**

b. except 9 Speakers Models:

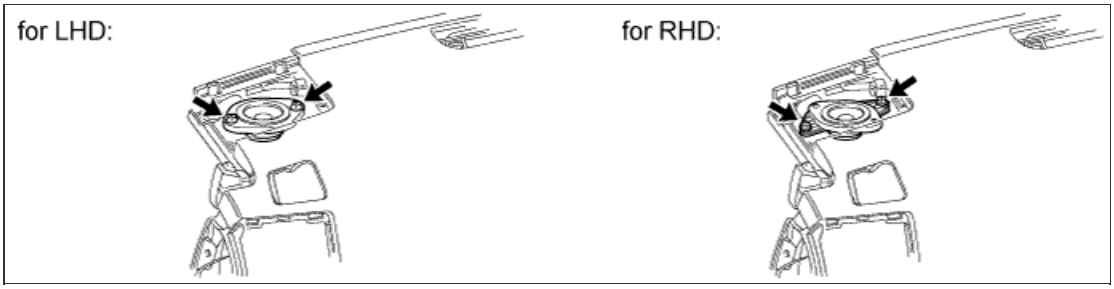

i. Connect the connector.

ii. Temporarily install the speaker by aligning the positioning pins of the speaker with the instrument panel.


iii. Install the speaker with the 2 bolts.

NOTICE:

- **Do not touch the cone part of the speaker.**
- **When installing the speaker to the instrument panel be careful that the wires do not get caught between the parts.**


16. INSTALL NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

a. Attach the claws to install the panel.

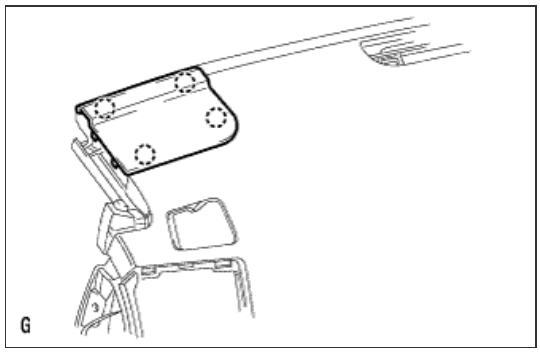

17. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (LH Side)

a. for 9 Speakers Models:

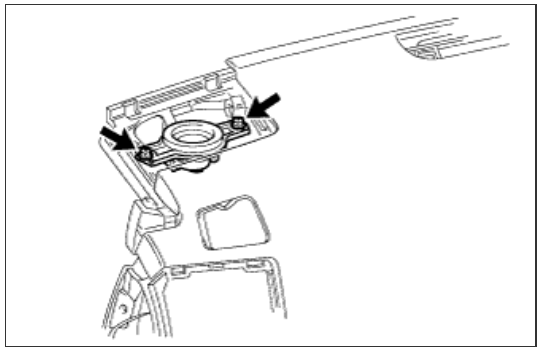

i. Connect the connector.


ii. Temporarily install the speaker by aligning the positioning pins of the speaker with the instrument panel.

iii. Install the speaker with the 2 bolts.

NOTICE:

- **Do not touch the cone part of the speaker.**
- **When installing the speaker to the instrument panel be careful that the wires do not get caught between the parts.**

b. except 9 Speakers Models:

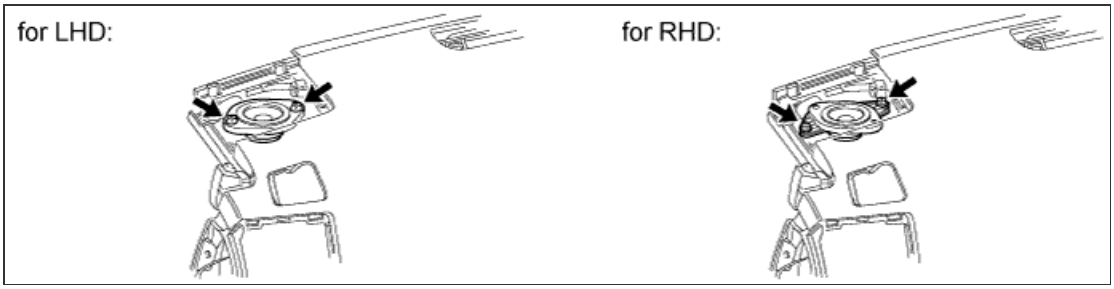

i. Connect the connector.

ii. Temporarily install the speaker by aligning the positioning pins of the speaker with the instrument panel.


iii. Install the speaker with the 2 bolts.

NOTICE:

- **Do not touch the cone part of the speaker.**
- **When installing the speaker to the instrument panel be careful that the wires do not get caught between the parts.**

18. INSTALL NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

a. Attach the claws to install the panel.

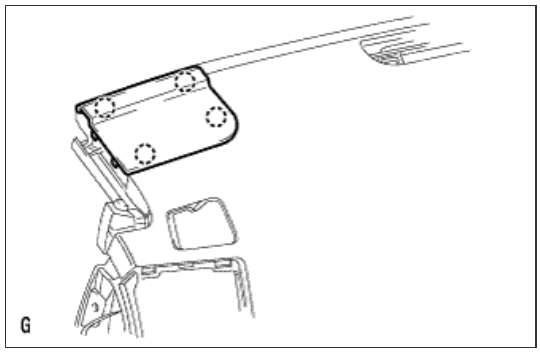

19. INSTALL FRONT NO. 4 SPEAKER ASSEMBLY


a. Connect the speaker connector.

b. Temporarily install the speaker by aligning the positioning pins of the speaker with the instrument panel.

c. Install the speaker with the 2 bolts.


NOTICE:

- **Do not touch the cone part of the speaker.**
- **When installing the speaker to the instrument panel be careful that the wires do not get caught between the parts.**

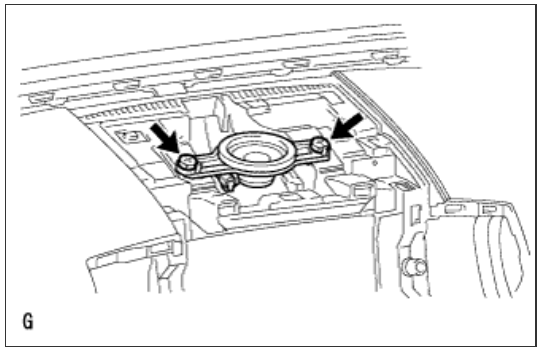

20. INSTALL NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Attach the 8 claws to install the opening cover.

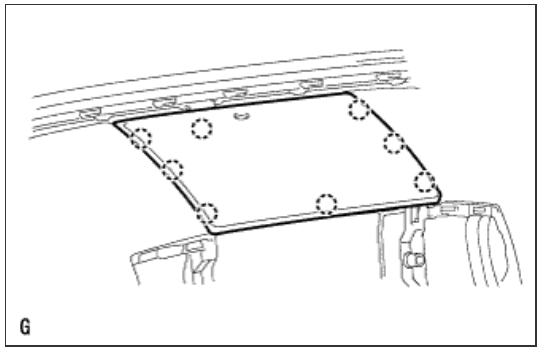

21. INSTALL FRONT PILLAR GARNISH RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

22. INSTALL FRONT PILLAR GARNISH RH (w/o Sliding Roof)


HINT:

Use the same procedures described for the LH side.

23. INSTALL FRONT PILLAR GARNISH LH (w/ Sliding Roof)

a. for 9 Speakers:
Connect the speaker connector.


b. Attach the clip and 3 guides to install the front pillar garnish.

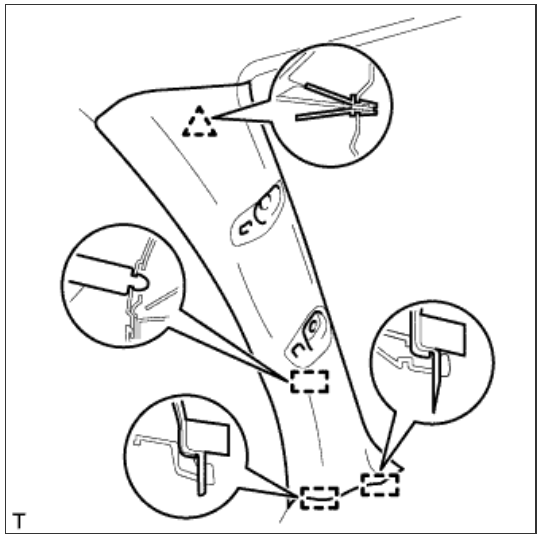

24. INSTALL FRONT PILLAR GARNISH LH (w/o Sliding Roof)

a. for 9 Speakers:
Connect the speaker connector.

b. Attach the clip and 3 guides to install the front pillar garnish.

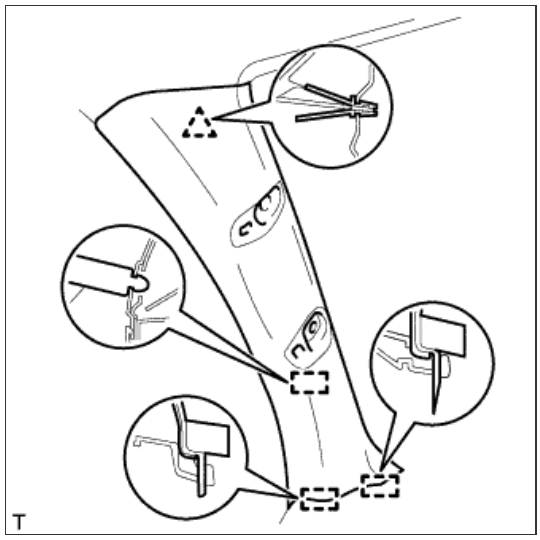


25. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY (w/ Sliding Roof)

HINT:


Use the same procedure to install the front assist grip on the other side.

a. Attach the 2 claws to install the front assist grip.

b. Install the 2 bolts.

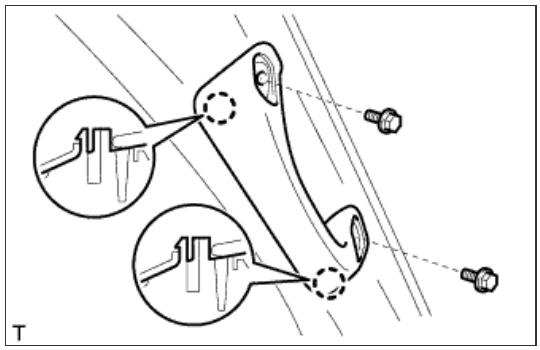

c. Attach the claws to install the 2 assist grip plugs.

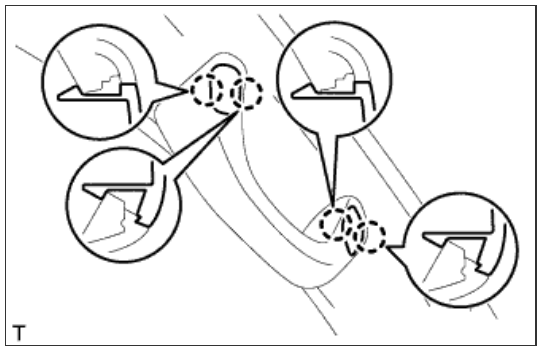


26. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY (w/o Sliding Roof)

HINT:


Use the same procedure to install the front assist grip on the other side.

a. Attach the 2 claws to install the front assist grip.

b. Install the 2 bolts.

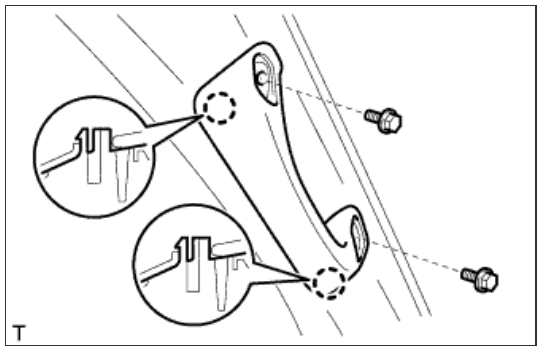


c. Attach the claws to install the 2 assist grip plugs.

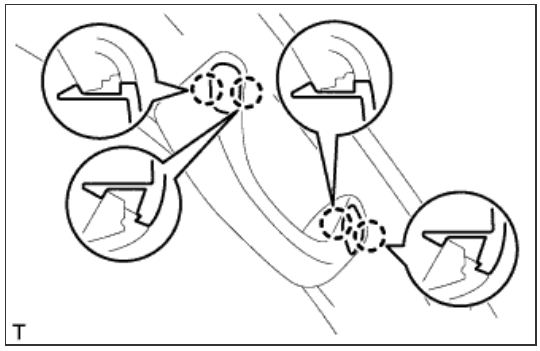

27. INSTALL NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Attach the claws to install the register.

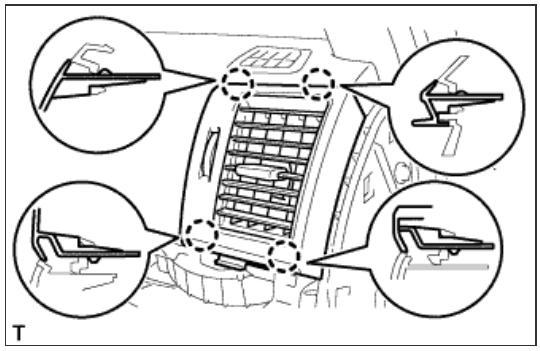


28. INSTALL LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Connect the connector.


b. Attach the 3 claws to install the finish panel.

c. Install the bolts.

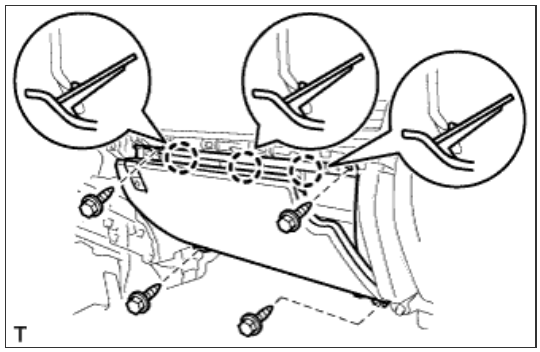


29. INSTALL INSTRUMENT PANEL BOX DOOR KNOB

a. Attach the 2 claws to install the knob.

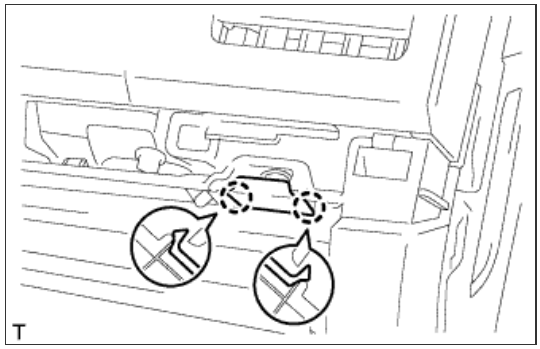

30. INSTALL NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Attach the 6 claws to install the panel garnish.

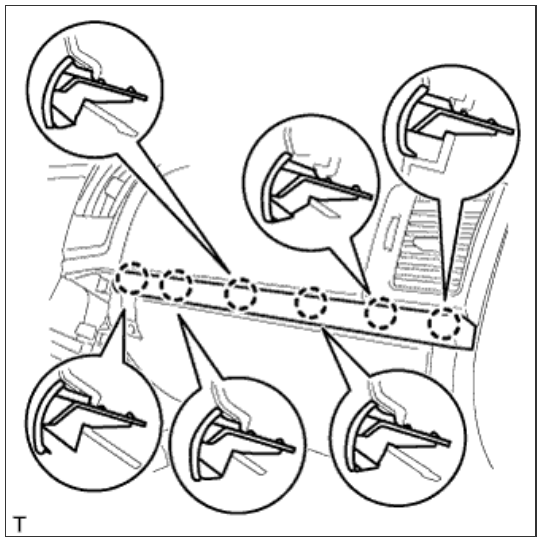

31. INSTALL LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Attach the claws to install the instrument panel.

b. Install the 2 bolts.

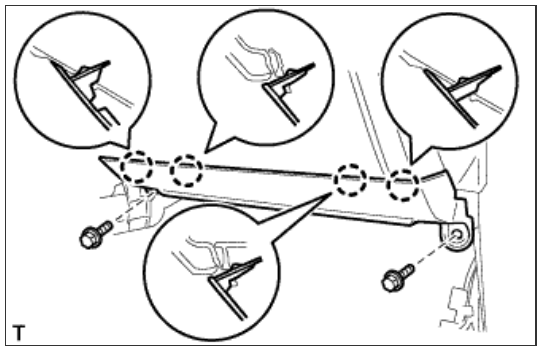

32. INSTALL FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)

a. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Attach the claws to install the front passenger side knee airbag.

c. Install the bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

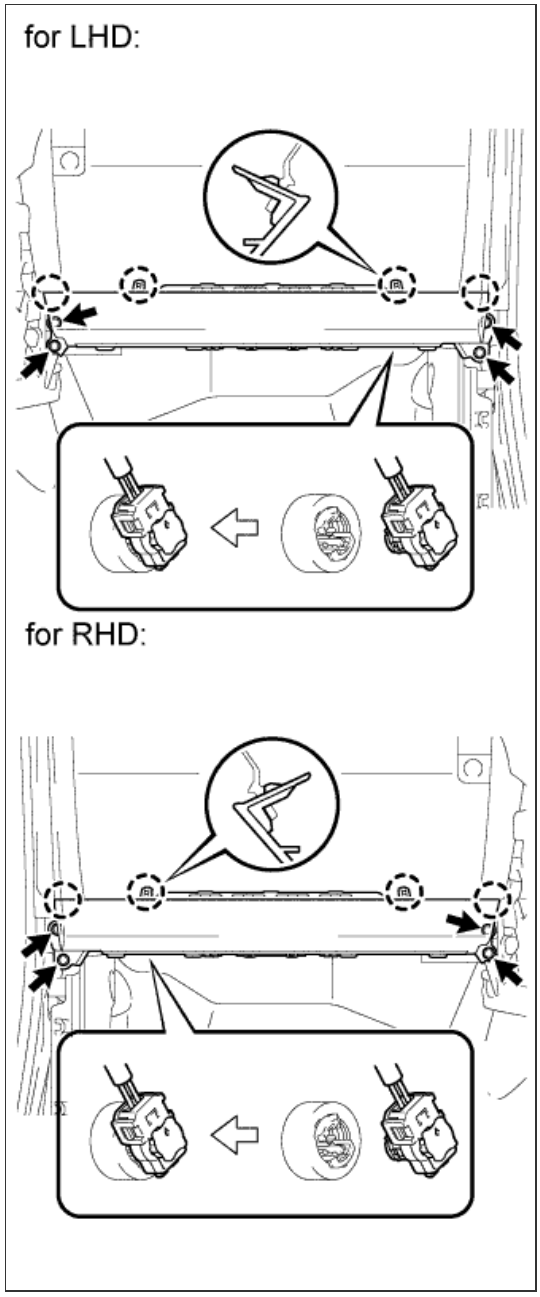

33. INSTALL COWL SIDE TRIM BOARD RH


a. Attach the 2 clips to install the trim board.

b. Install the cap nut.

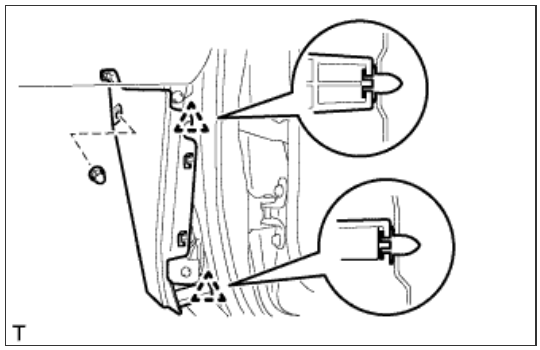

34. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Attach the claws to install the under cover.

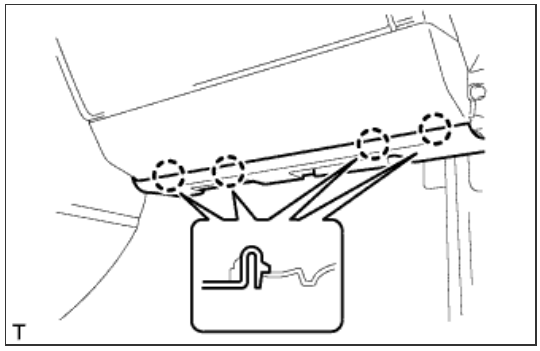

35. INSTALL FRONT DOOR SCUFF PLATE RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

36. INSTALL FRONT DOOR SCUFF PLATE RH (w/o Sliding Roof)


HINT:

Use the same procedures described for the LH side.

37. INSTALL INSTRUMENT SIDE PANEL RH (w/ Airbag Cut Off Switch)


a. Connect the connector.

b. Attach the 6 claws to install the side panel.

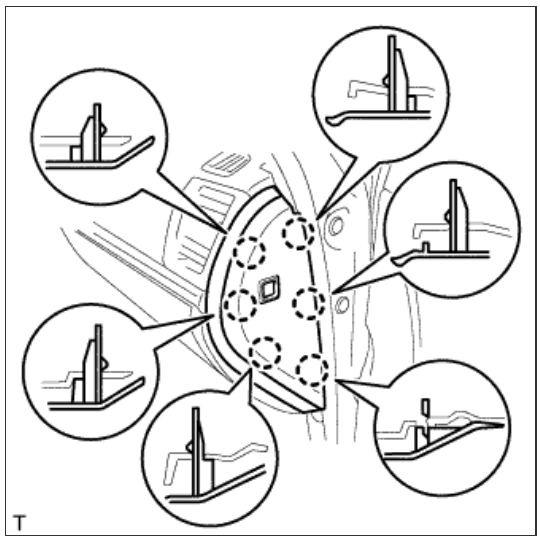


38. INSTALL INSTRUMENT SIDE PANEL RH (w/o Airbag Cut Off Switch)

a. Attach the 6 claws to install the side panel.

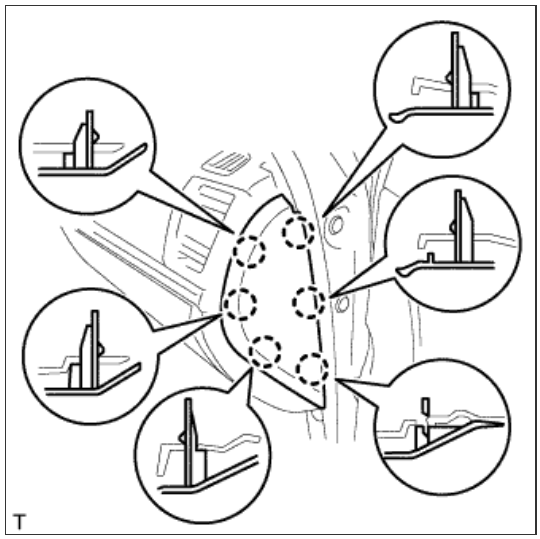

39. INSTALL NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Attach the claws to install the register.

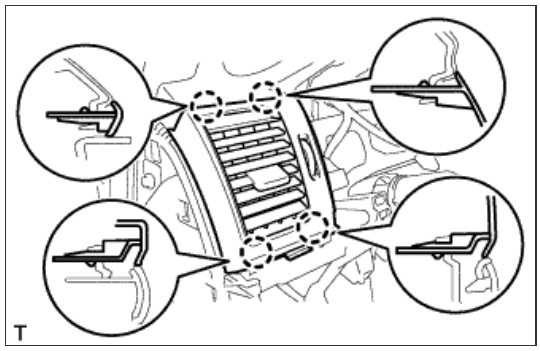

40. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)

a. Attach the claws and connect the DLC3.

b. Install the instrument panel with the 5 bolts.

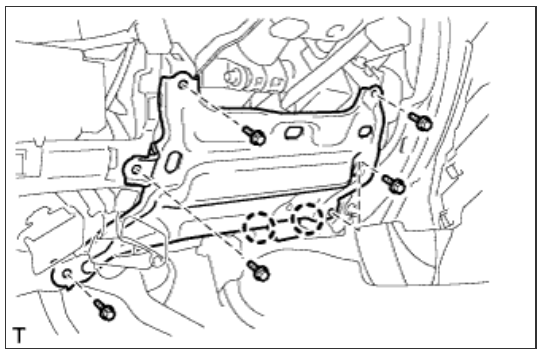

41. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)


a. Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Install the driver side knee airbag with the 5 bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

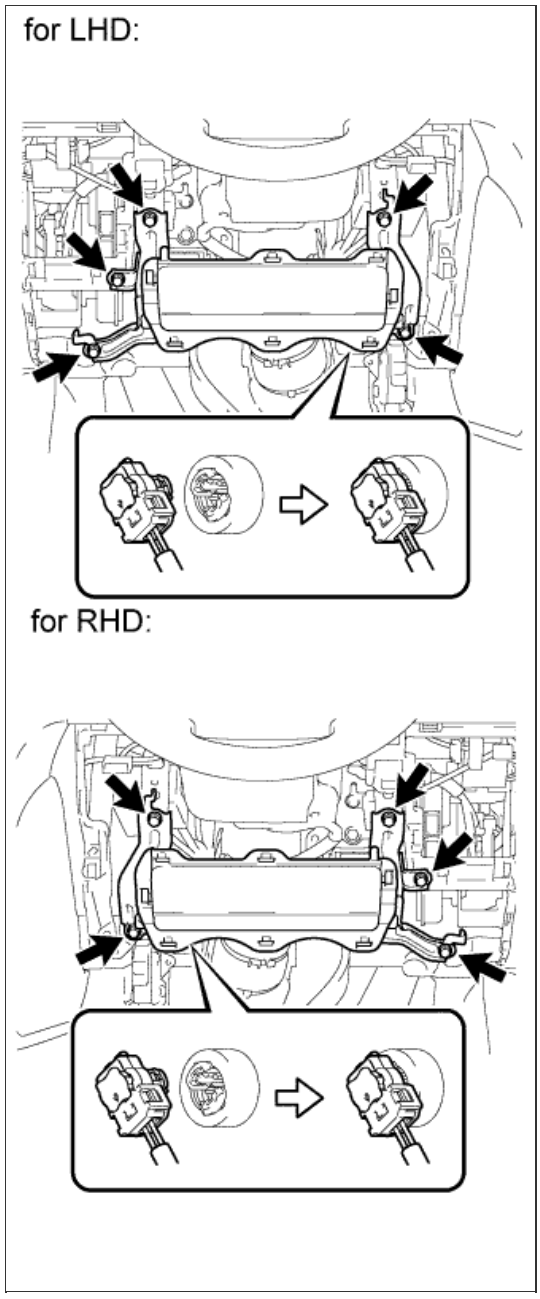

42. INSTALL NO. 1 SWITCH HOLE BASE

a. Connect the connectors.


b. Attach the claws to install the switch hole base.

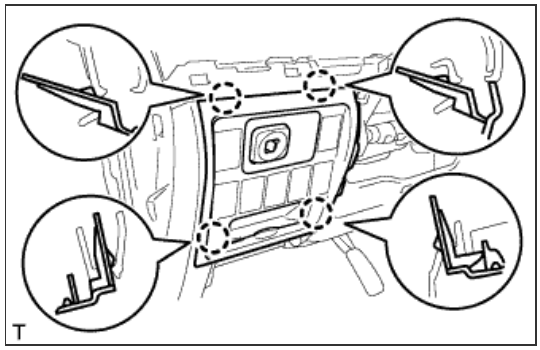


43. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

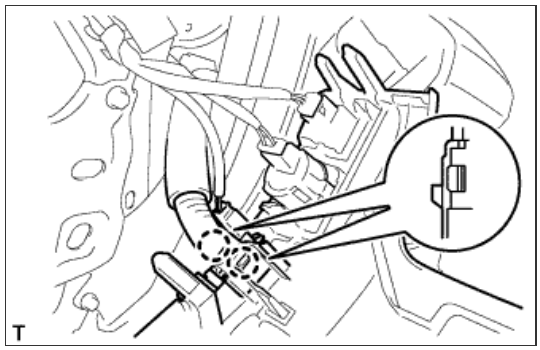


c. Attach the 2 claws to connect the 2 control cables.

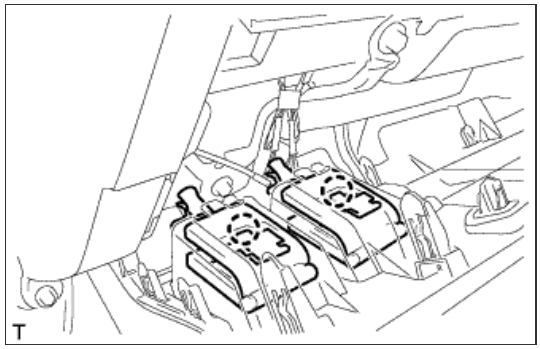


d. Attach the 1 claws to install the finish panel.

e. Install the 2 bolts.

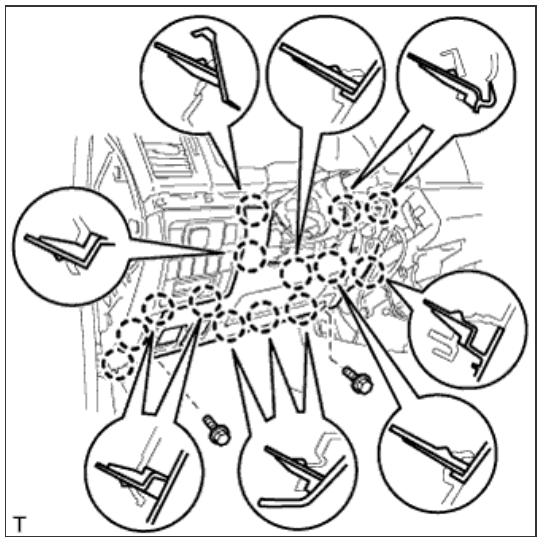


f. Attach the 2 claws to close the hole cover.

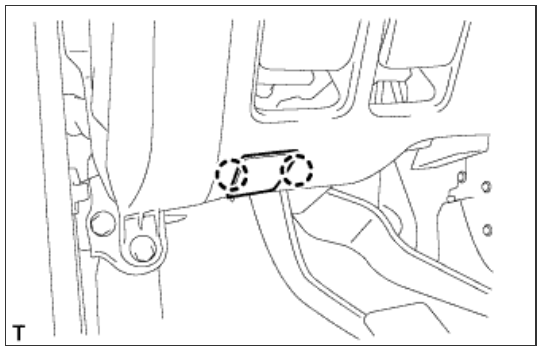

44. INSTALL COWL SIDE TRIM BOARD LH

a. Attach the 2 clips to install the trim board.

b. Install the cap nut.

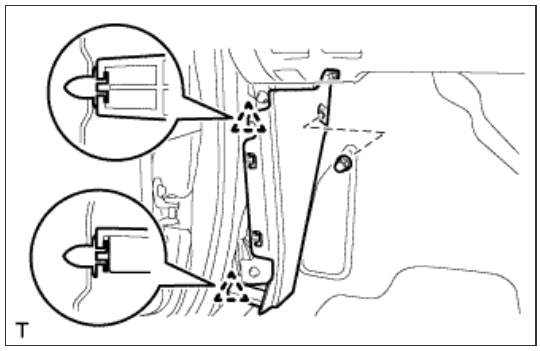


45. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.


b. Attach the 3 claws to install the under cover.

c. Install the 2 screws.

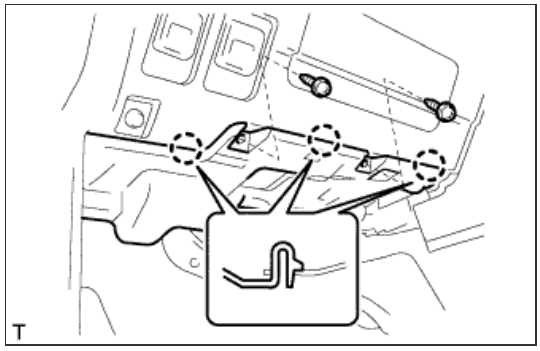


46. INSTALL FRONT DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Attach the 7 claws and clips to install the scuff plate.

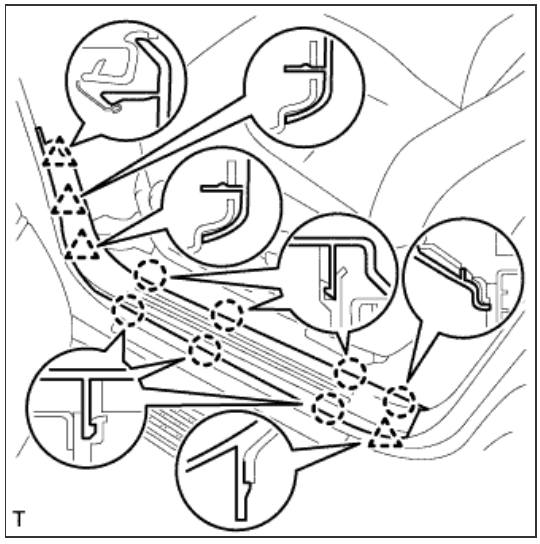

47. INSTALL FRONT DOOR SCUFF PLATE LH (w/o Sliding Roof)


a. Attach the 7 claws and clips to install the scuff plate.

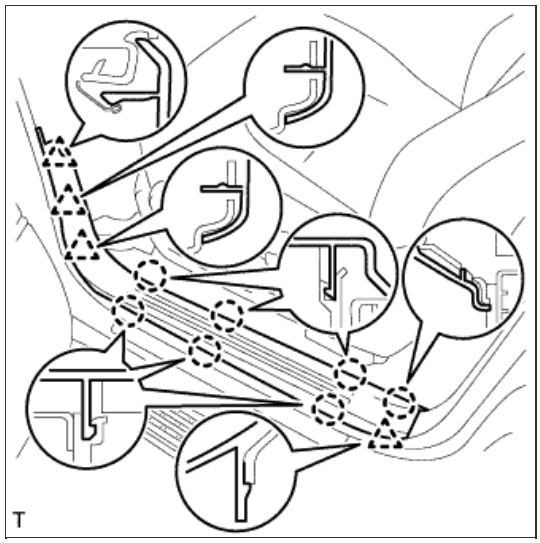

48. INSTALL COMBINATION METER ASSEMBLY (w/o Multi-information Display)

a. Connect the connectors.


b. Install the combination meter with the screws.

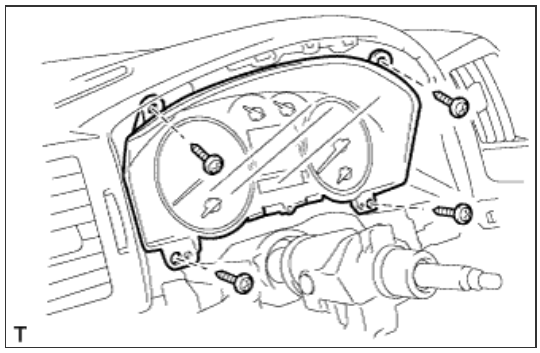

49. INSTALL COMBINATION METER ASSEMBLY (w/ Multi-information Display)


a. Connect the connectors.

b. Install the combination meter with the screws.

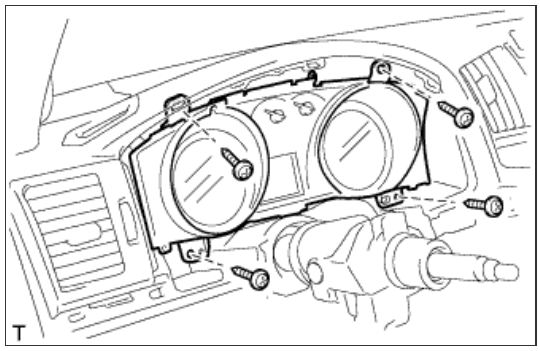

50. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (w/o Multi-information Display)


a. Attach the 9 claws to install the finish panel.

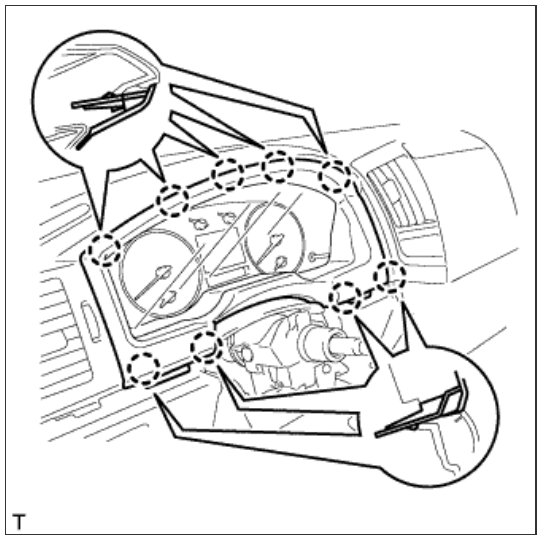

51. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (w/ Multi-information Display)


a. Connect the connector.

b. Attach the 9 claws to install the finish panel.

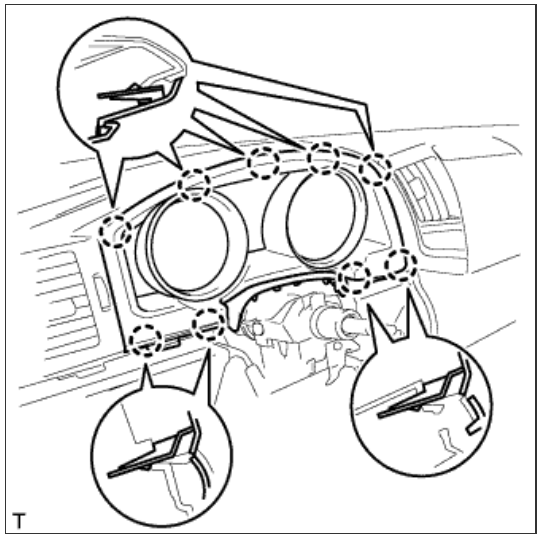


52. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

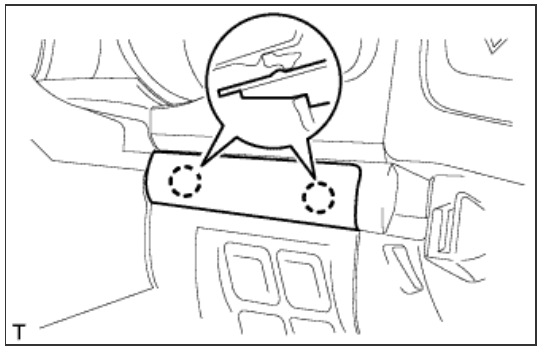


53. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

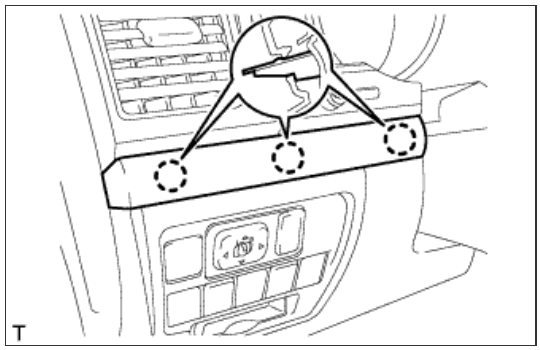


54. INSTALL INSTRUMENT SIDE PANEL LH

a. Attach the 6 claws to install the side panel.

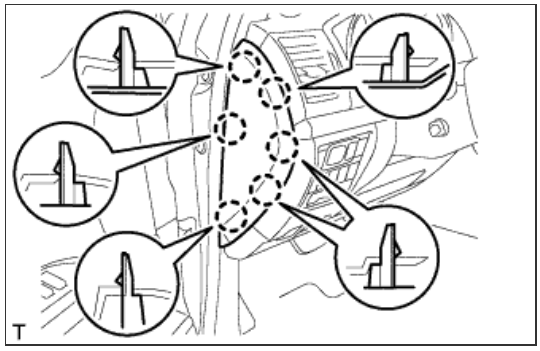

55. INSTALL COOLING BOX ASSEMBLY (w/ Cool Box)

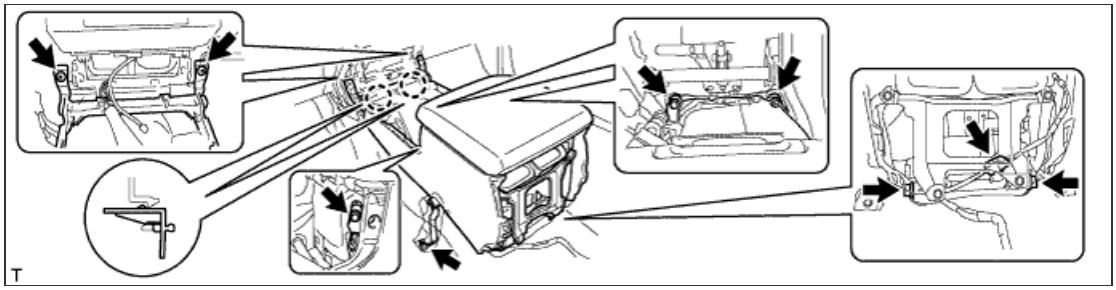

a. Attach the 2 claws.

b. Connect the connector.

c. Sufficiently apply compressor oil to 2 new O-rings.

Compressor oil:
ND-OIL 8 or equivalent


d. Install the 2 O-rings on the 2 cooler pipes.

e. Connect the 2 cooler pipes with the 2 bolts.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

f. Install the cooling box with the bolts and 2 screws.

56. INSTALL REAR CONSOLE BOX SUB-ASSEMBLY (w/o Cool Box)

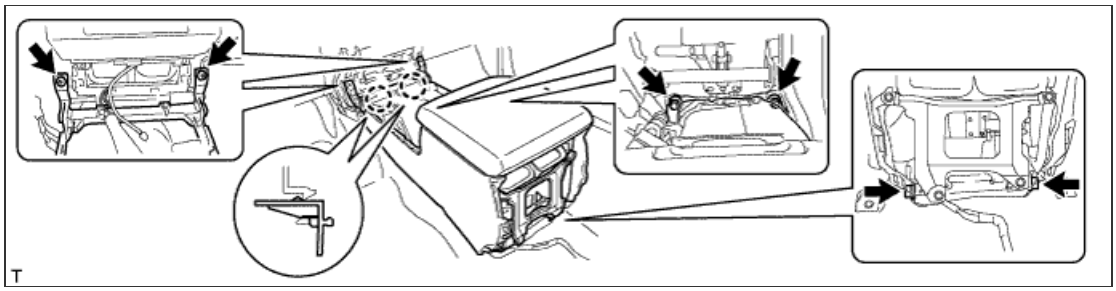


a. Attach the 2 claws.

b. Install the console box with the bolts and 2 screws.

57. INSTALL REAR CONSOLE END PANEL SUB-ASSEMBLY


a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the end panel.

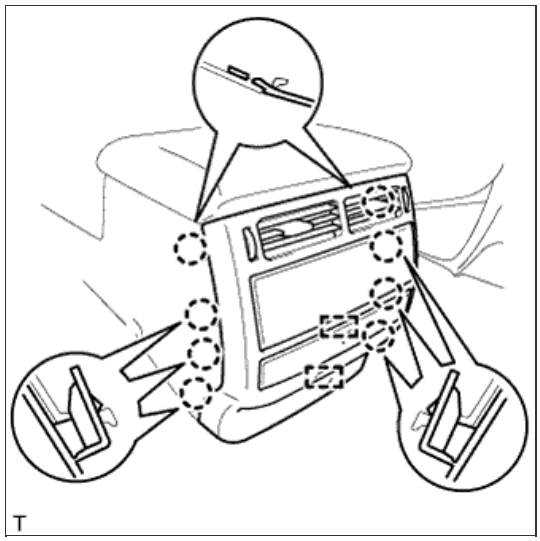

58. INSTALL NO. 1 COOLER COVER (w/ Cool Box)


a. Attach the claw on the upper part of the cooler cover, and then attach the clamp on the lower part of the cooler cover to install it.

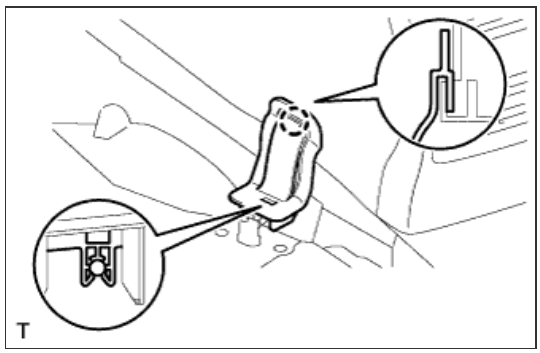

59. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 1 claws to install the console panel.

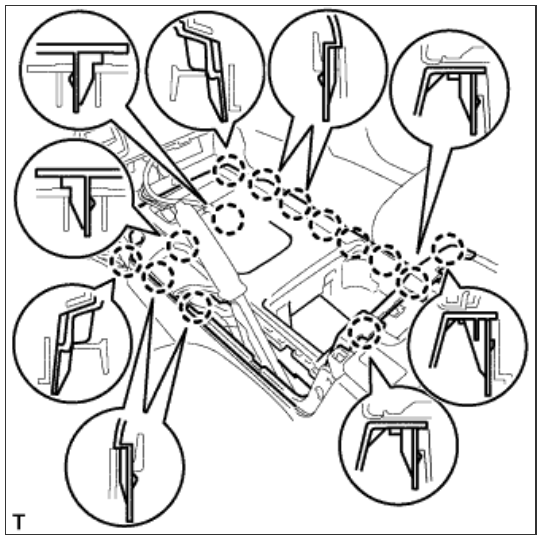


60. INSTALL CONSOLE CUP HOLDER BOX SUB-ASSEMBLY

a. Attach the claws to install the box.

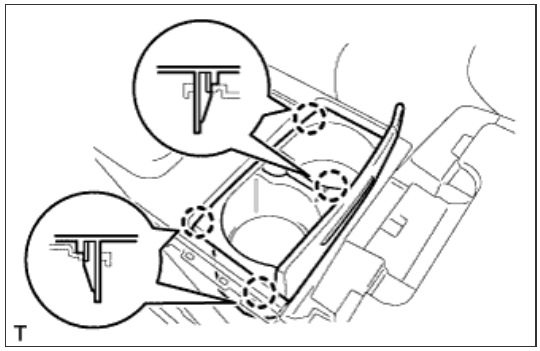

61. INSTALL REAR UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Attach the 9 claws to install the panel.

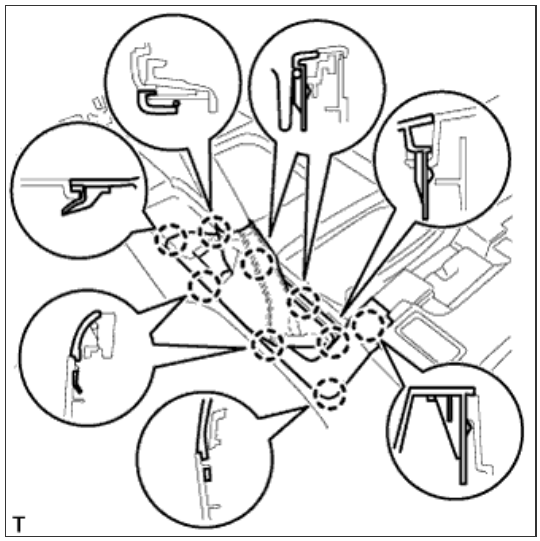

62. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 7 claws to install the panel.

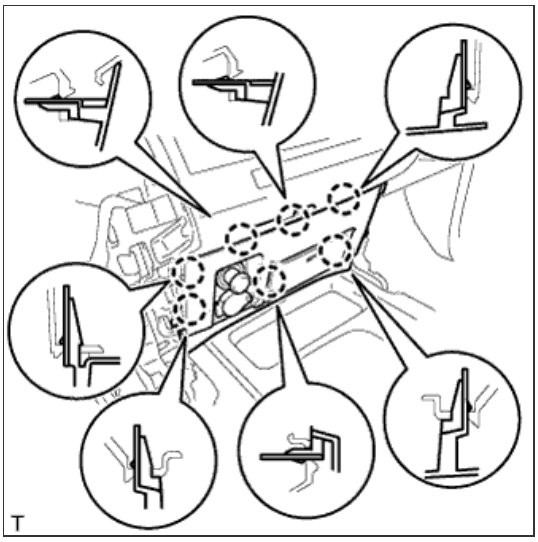

63. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

a. Install the shift lever knob and twist it in the direction indicated by the arrow.

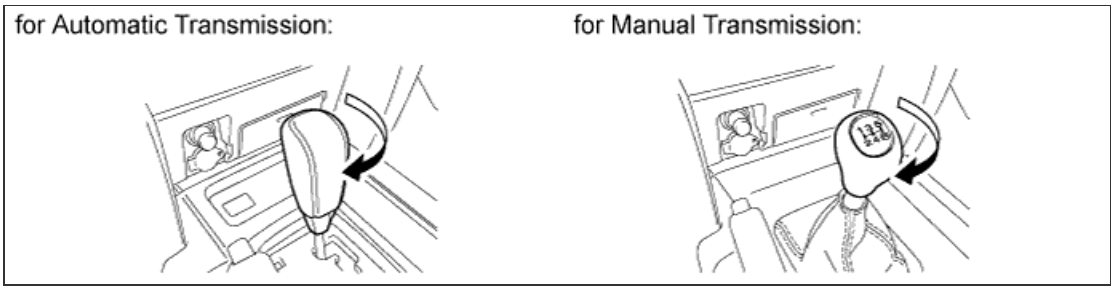


64. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

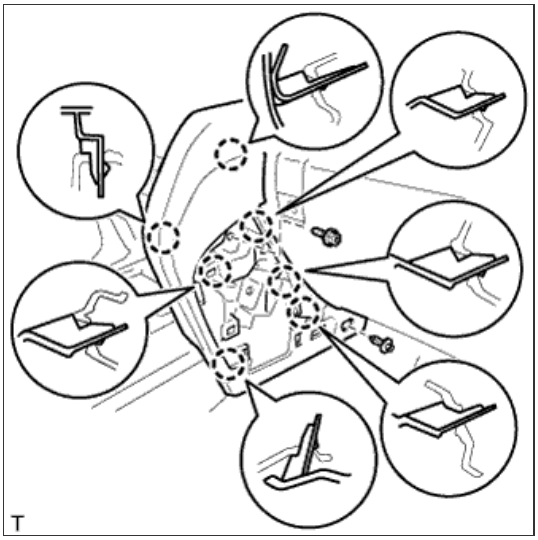

65. INSTALL NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

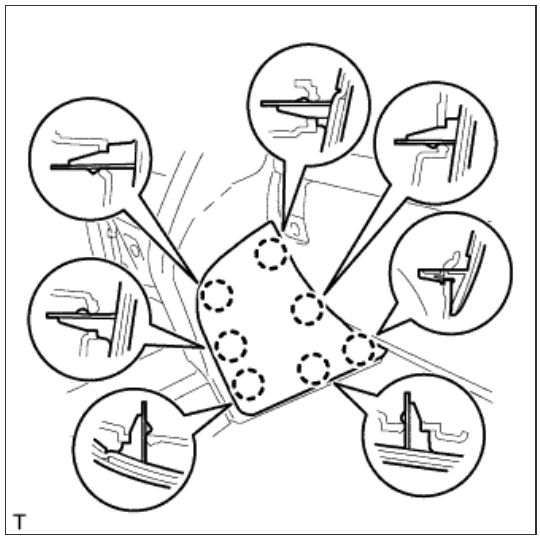


66. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

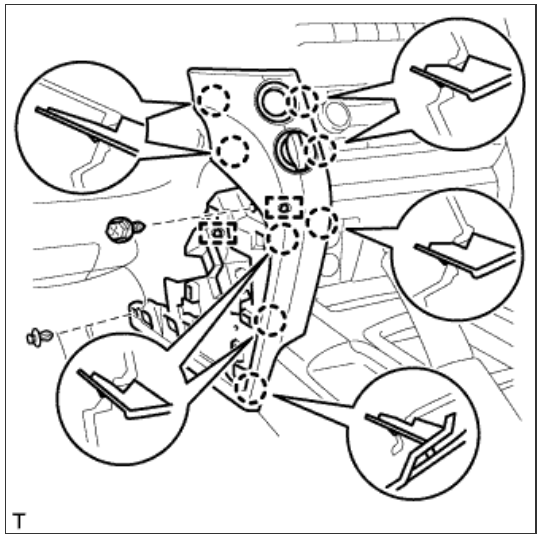

67. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

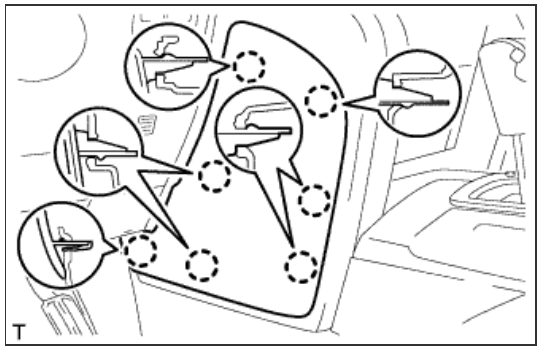

68. INSTALL FRONT SEAT ASSEMBLY RH (for Manual Seat)

a. Install the front seat assembly (Click here).

69. INSTALL FRONT SEAT ASSEMBLY RH (for Power Seat)

a. Install the front seat assembly (Click here).

70. INSTALL FRONT SEAT ASSEMBLY LH (for Manual Seat)


a. Install the front seat assembly LH (Click here).

71. INSTALL FRONT SEAT ASSEMBLY LH (for Power Seat)


a. Install the front seat assembly LH (Click here).

72. INSTALL COMBINATION SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (for Manual Tilt and Manual Telescopic Steering Column)

a. Using pliers, grip the claws of the clamp and install the combination switch assembly with spiral cable sub-assembly to the steering column assembly with the clamp.

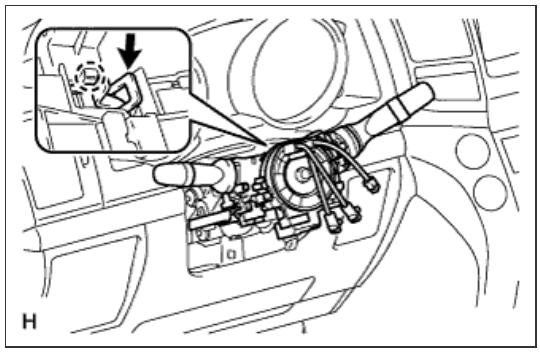


b. Connect the 5 connectors to the combination switch with spiral cable.

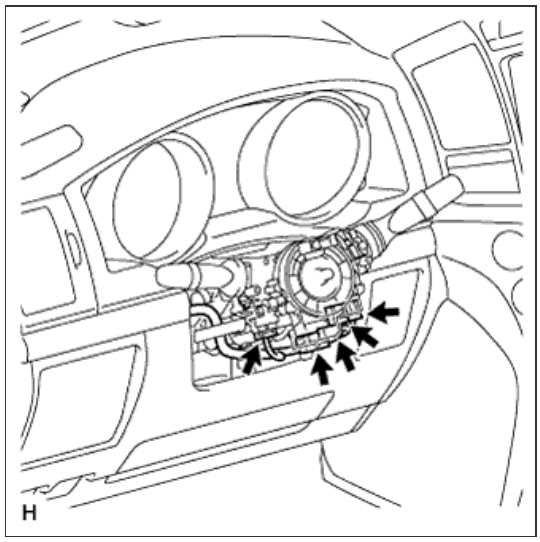


73. INSTALL COMBINATION SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (for Power Tilt and Power Telescopic Steering Column)

a. Using pliers, grip the claws of the clamp and install the turn signal switch assembly with spiral cable sub-assembly to the steering column assembly with the clamp.

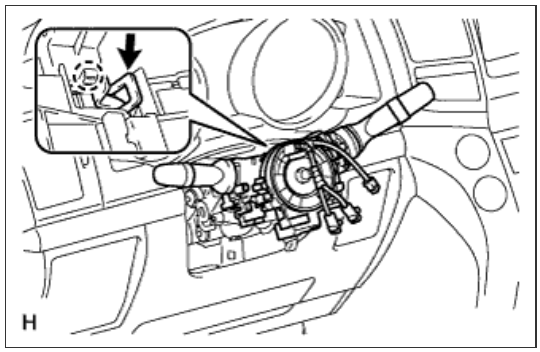


b. Connect the 5 connectors to the turn signal switch with spiral cable.

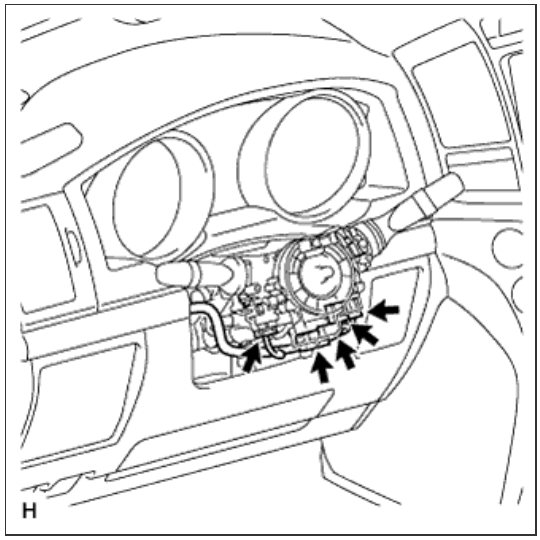

74. INSTALL TILT AND TELESCOPIC SWITCH (for Power Tilt and Power Telescopic Steering Column)

a. Attach the claw to install the switch.


b. Connect the switch connector.

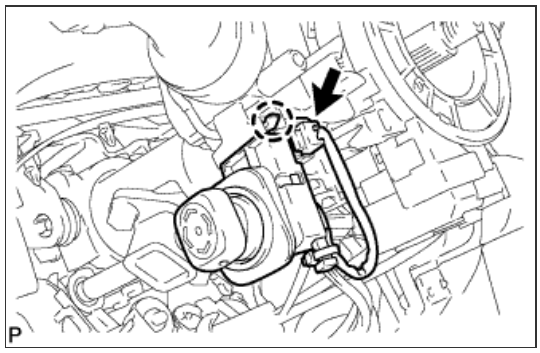

75. INSTALL UPPER STEERING COLUMN COVER (for Manual Tilt and Manual Telescopic Steering Column)

a. Attach the claw to install the upper steering column cover.


b. Attach the clips to install the upper steering column cover onto the instrument cluster finish panel.

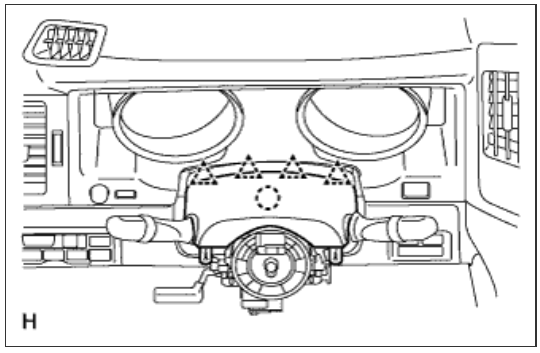

76. INSTALL UPPER STEERING COLUMN COVER (for Power Tilt and Power Telescopic Steering Column)

a. Attach the claw to install the upper steering column cover.

b. Attach the clips to install the upper steering column cover onto the instrument cluster finish panel.

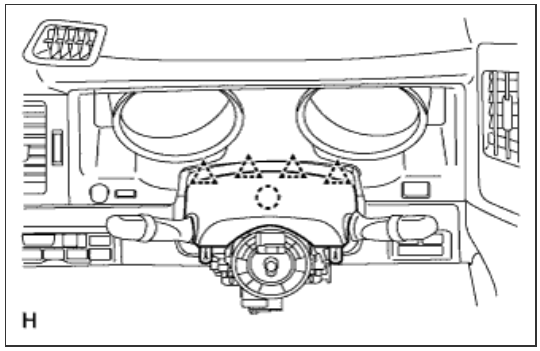

77. INSTALL LOWER STEERING COLUMN COVER (for Manual Tilt and Manual Telescopic Steering Column)


a. Attach the 2 claws to install the lower steering column cover.

NOTICE:

Do not damage the tilt and telescopic switch.

b. Install the 3 screws.

Torque:
2.0 N*m{ 20 kgf*cm , 18 in.*lbf }

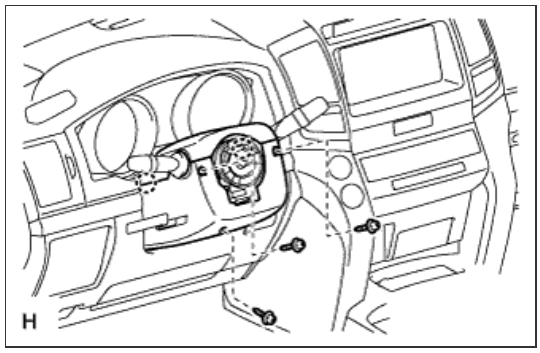

78. INSTALL LOWER STEERING COLUMN COVER (for Power Tilt and Power Telescopic Steering Column)


a. Attach the 2 claws to install the lower steering column cover.

NOTICE:

Do not damage the tilt and telescopic switch.

b. Install the 3 screws.

Torque:
1.5 N*m{ 15 kgf*cm , 13 in.*lbf }

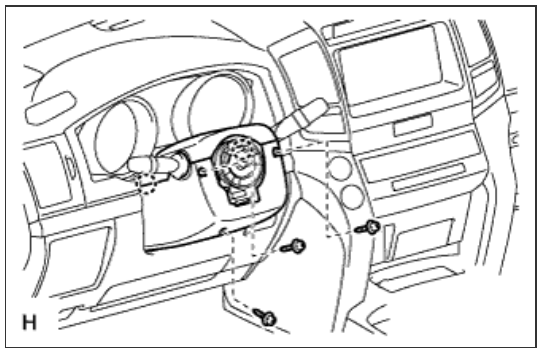


79. INSTALL STEERING WHEEL ASSEMBLY

a. Align the matchmarks on the steering wheel assembly and steering main shaft assembly.

b. Install the steering wheel assembly set nut.

Torque:
50 N*m{ 510 kgf*cm , 37 ft.*lbf }

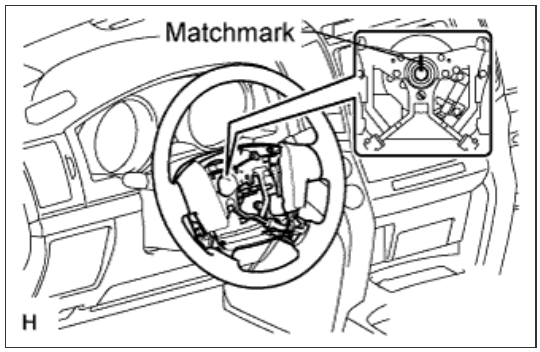

80. INSTALL STEERING PAD

a. Support the steering pad with one hand.

b. Connect the 2 connectors to the steering pad.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

c. Connect the horn connector.

d. Confirm that the circumference groove of the screw fits in the screw case, and place the steering pad onto the steering wheel.


e. Using a T30 socket wrench, tighten the 2 screws.

Torque:
8.8 N*m{ 90 kgf*cm , 78 in.*lbf }

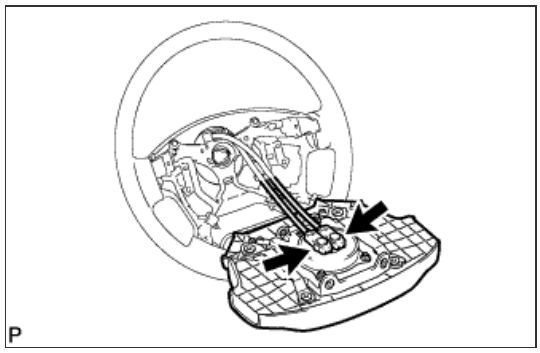


81. INSTALL LOWER NO. 2 STEERING WHEEL COVER

a. Attach the 2 claws to install the cover.

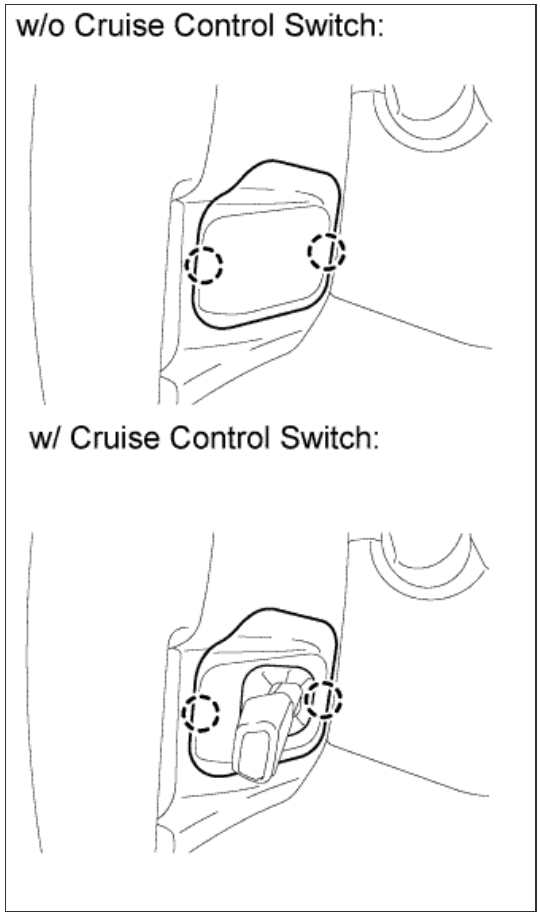

82. INSTALL LOWER NO. 3 STEERING WHEEL COVER

a. Attach the 2 claws to install the cover.

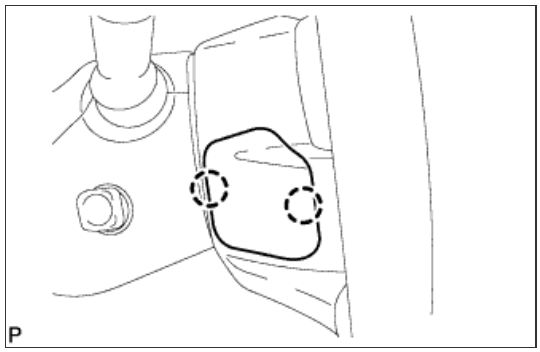

83. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

- **Reset the Autoaway/Return function setting to the previous condition by changing the customize parameter (Click here).**
- **When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).**

84. CHARGE REFRIGERANT (w/ Cool Box)

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-13 a (13 a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	efrigerant Charging Amount
22 mm (0.866 in.)	w/o ear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ ear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o ear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ ear Cooler	w/ Cool Box	970 +/-30 g (3 .2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

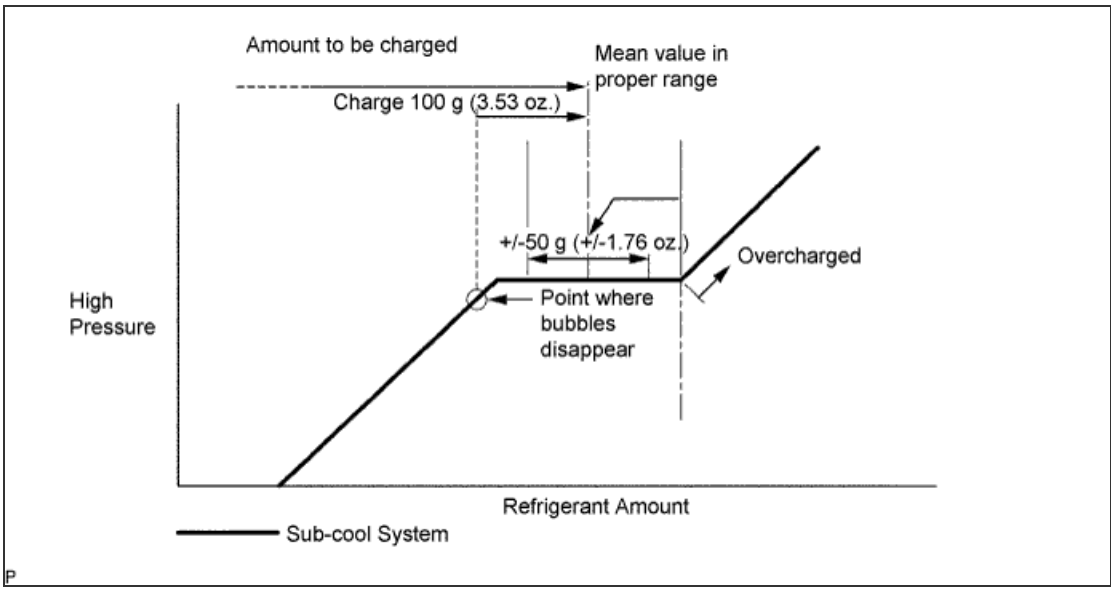

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

85. WARM UP ENGINE (w/ Cool Box)

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

86. CHECK FOR REFRIGERANT GAS LEAK (w/ Cool Box)

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- epeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.

d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

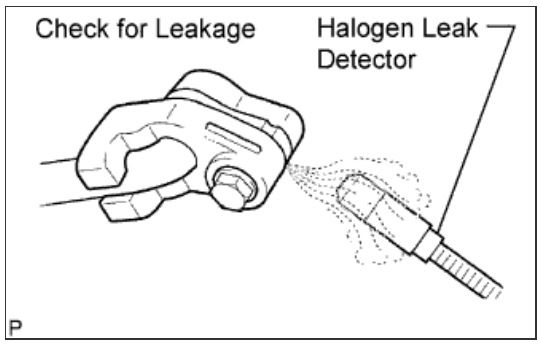

87. CHECK SRS WARNING LIGHT

a. Check the S Swarning light (Click here).


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for LHD)


a. Install the safety pad with the 8 bolts and 2 nuts.

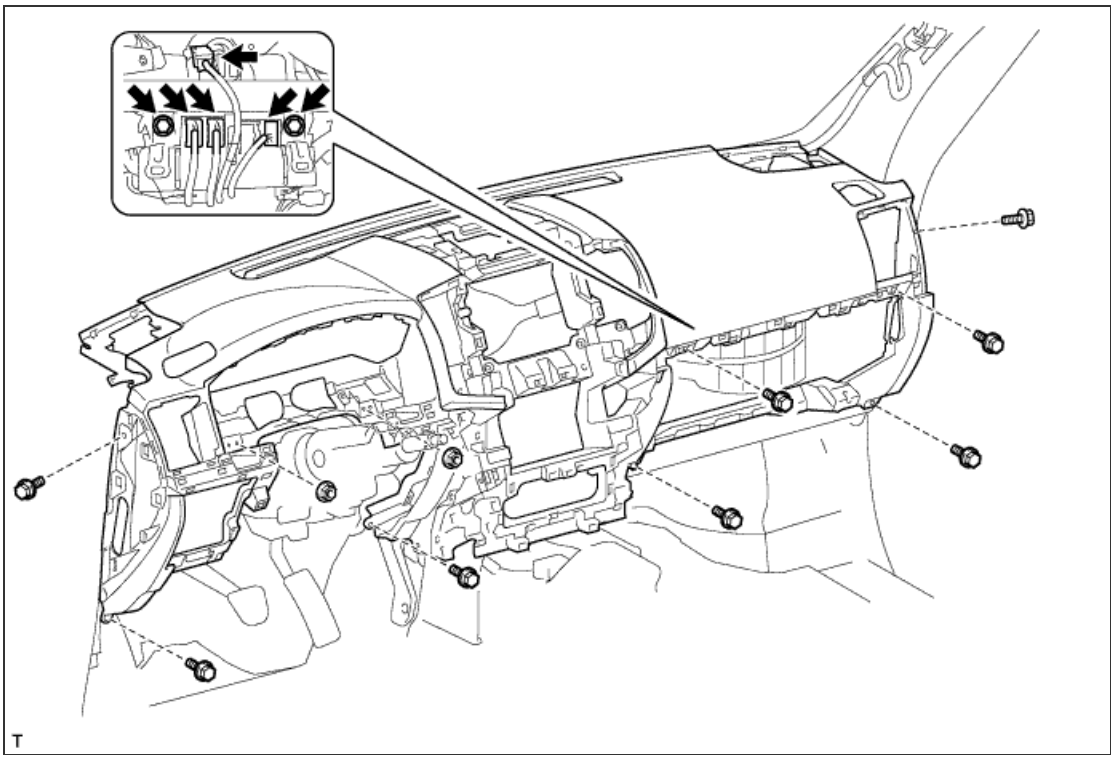

b. Install the 2 passenger airbag bolts.


Torque:
20 N*m{ 204 kgf*cm , 15 ft.*lbf }

c. Connect the wire harness with the bolt.

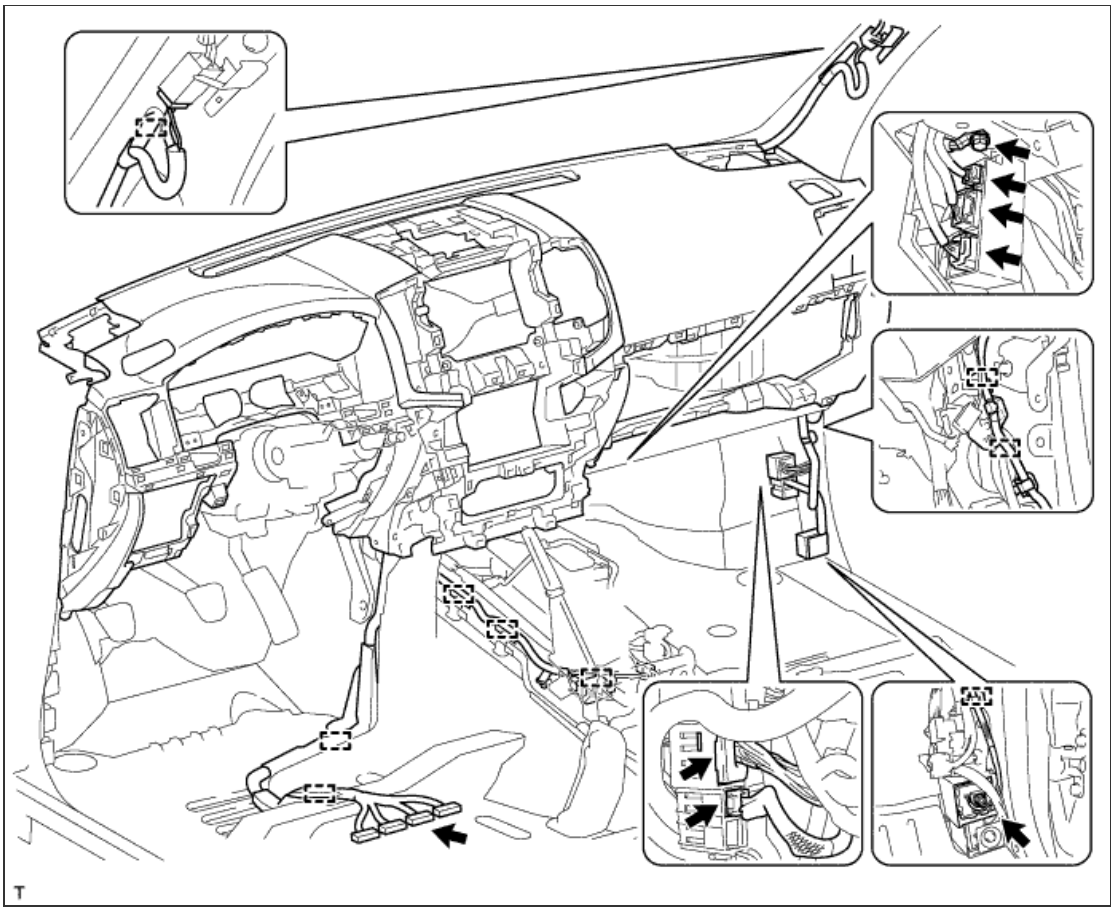


d. Connect the connectors and clamps.

e. Connect the connectors.

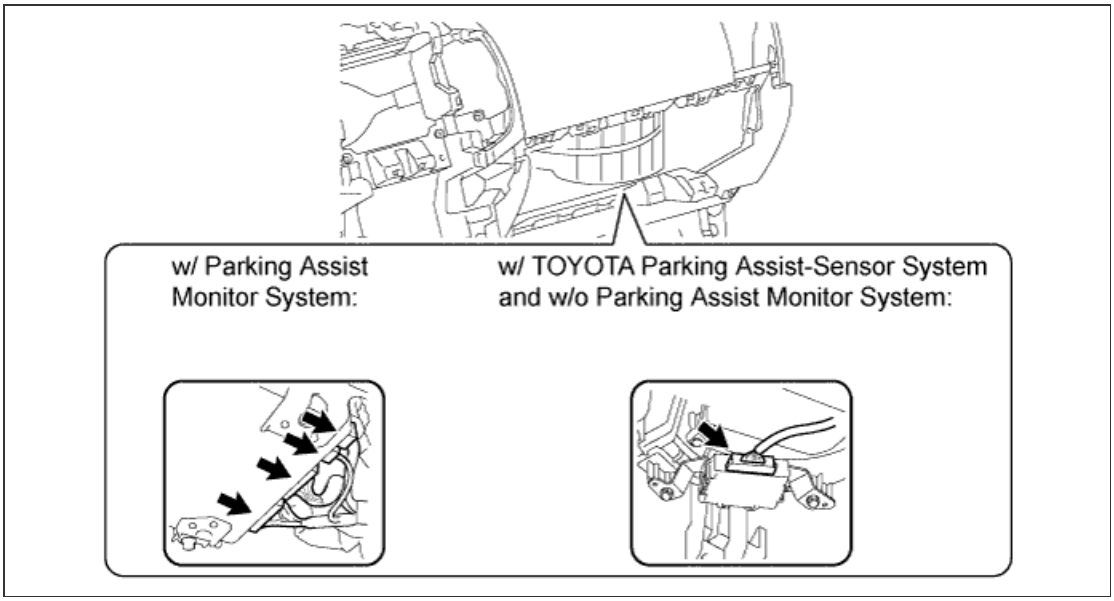

2. INSTALL INSTRUMENT PANEL SAFETY PAD ASSEMBLY (for RHD)

a. Install the safety pad with the 8 bolts and 2 nuts.

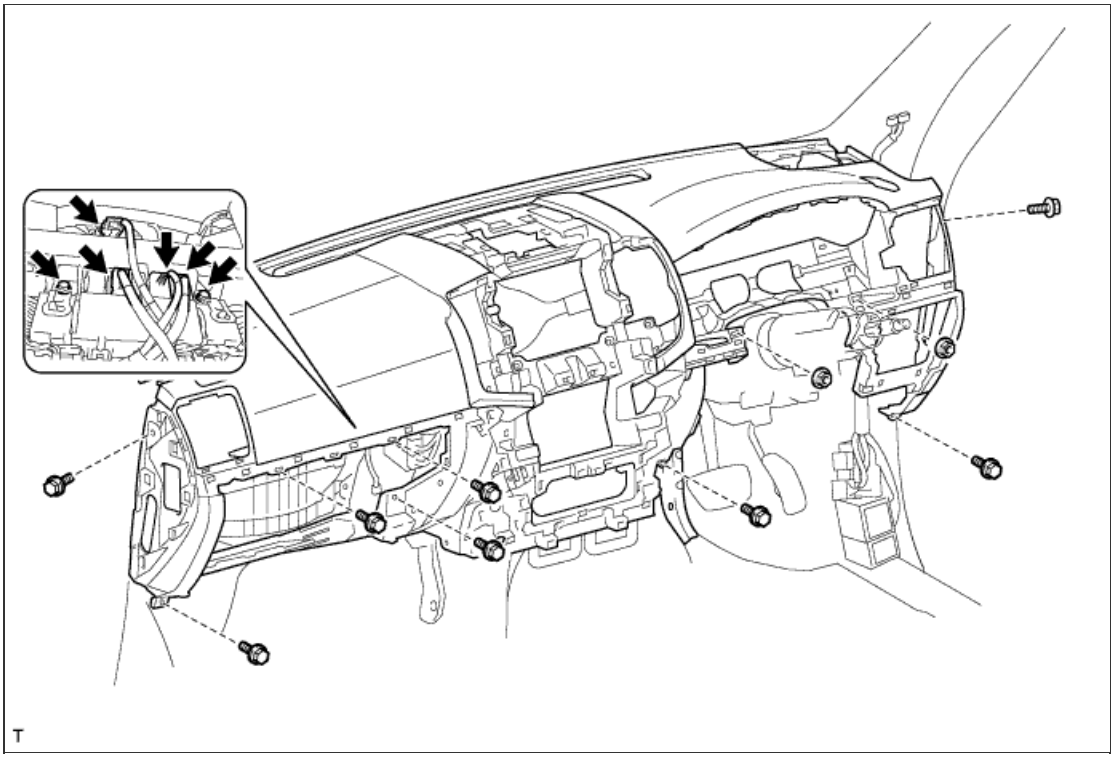


b. Connect the connectors.

c. Install the 2 passenger airbag bolts.


Torque:
20 N*m{ 204 kgf*cm , 15 ft.*lbf }

d. Connect the wire harness with the bolt.

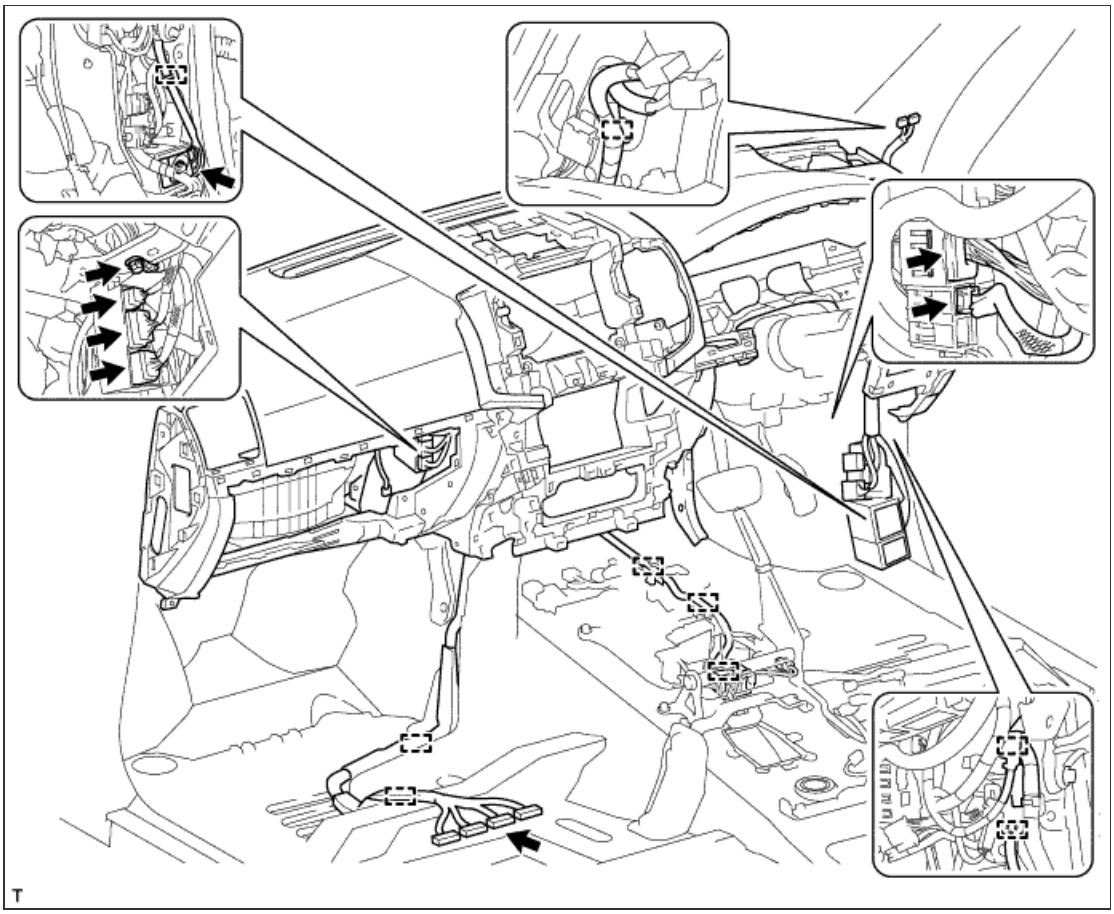


e. Connect the connectors and clamps.

f. Connect the connectors.

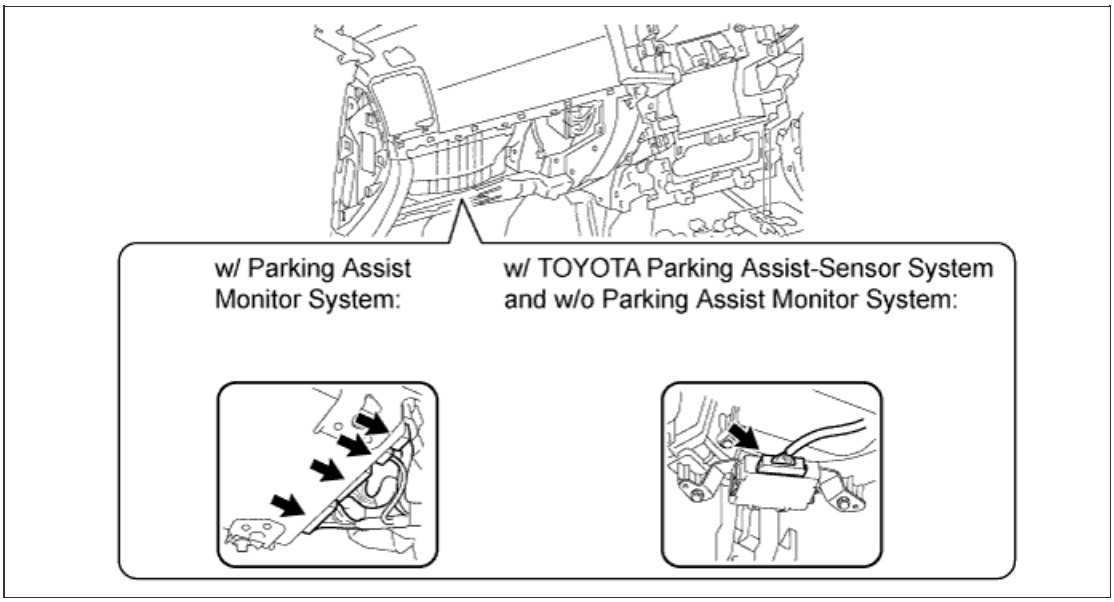


3. INSTALL REAR NO. 4 AIR DUCT

a. Attach the clip to install the air duct.

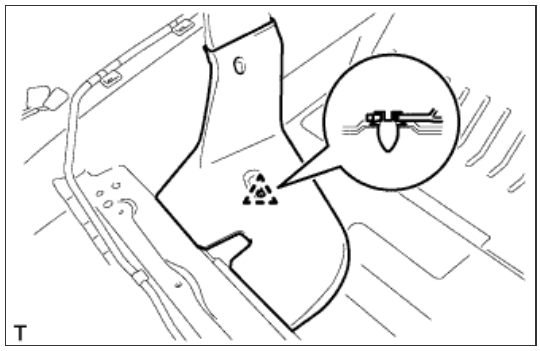

4. INSTALL REAR NO. 2 AIR DUCT

a. Attach the clip to install the air duct.

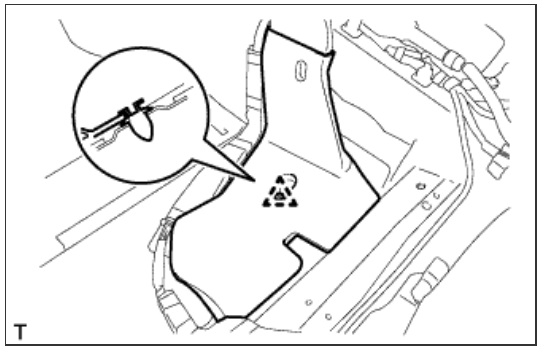


5. INSTALL NAVIGATION MODULE BOARD WITH DISC PLAYER BRACKET (w/ Multi-display)

a. Connect the navigation module board connectors.

b. Install the navigation module board with disc player bracket with the nut and 2 screws.

Torque:
Nut:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }

c. Attach the clamp.

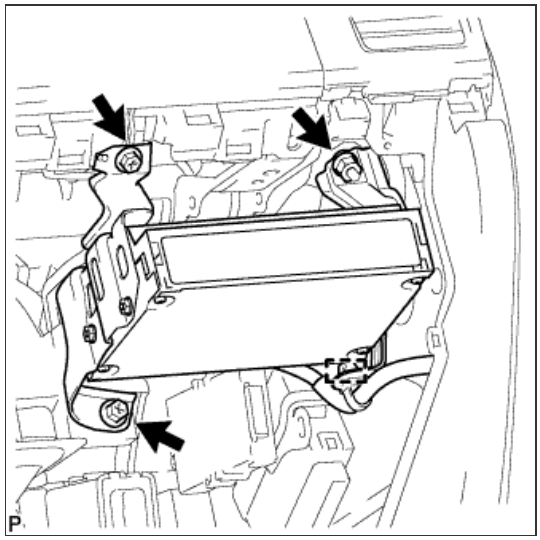


6. INSTALL AIR CONDITIONING CONTROL ASSEMBLY

a. Connect the connectors.

b. Insert the radio receiver and attach the 5 claws on its backside.

NOTICE:

When inserting the radio receiver, do not press the knobs on it.

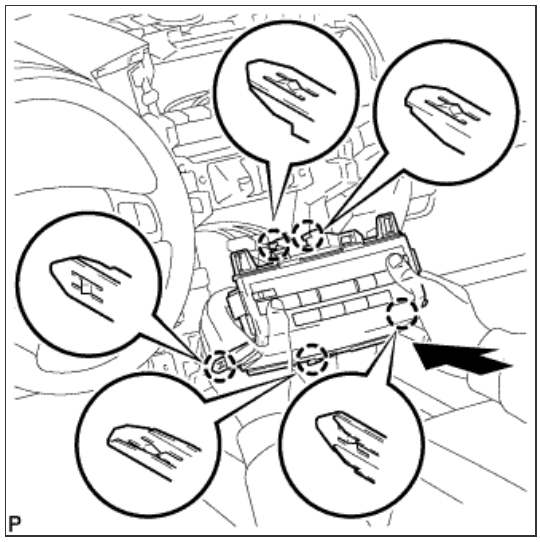


7. INSTALL RADIO RECEIVER ASSEMBLY WITH BRACKET (w/ Multi-display)

a. Connect the connectors.

b. Insert the radio receiver to attach the 5 claws on its backside.


NOTICE:

When inserting the radio receiver, do not press the knobs on it.

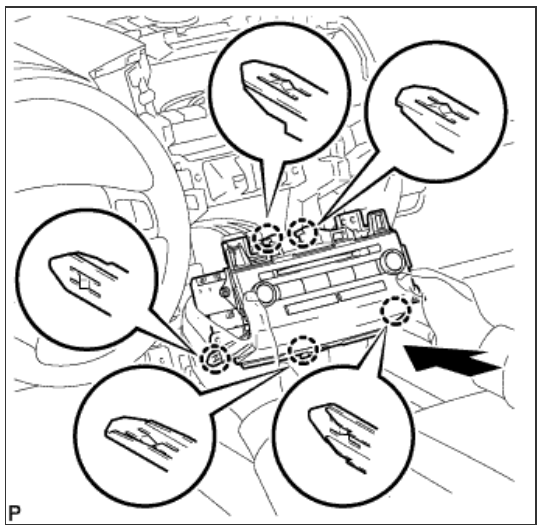


c. Install the radio receiver with the 2 screws and 2 bolts.

Torque:
Bolt:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }

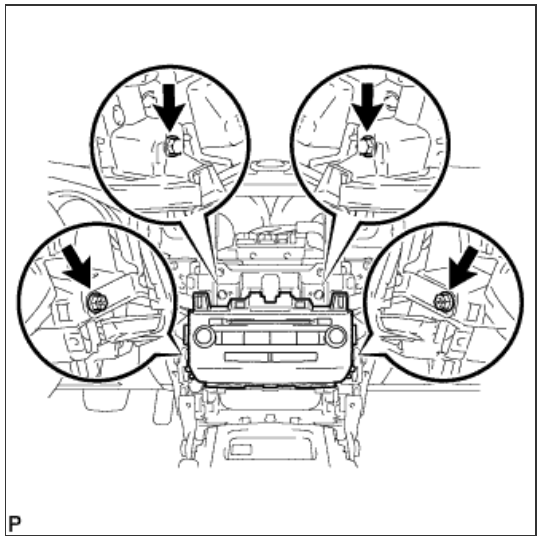

8. INSTALL RADIO TUNER OPENING COVER WITH BRACKET (w/o Radio Receiver)

a. Install the opening cover with the 2 bolts and 2 screws.

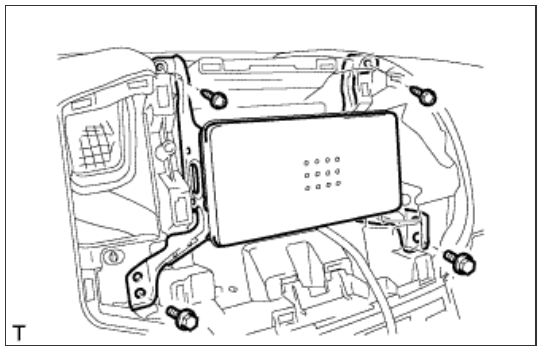


9. INSTALL RADIO RECEIVER ASSEMBLY WITH BRACKET (w/ Cassette Tape Player)

a. Connect the connectors.

b. Install the radio receiver with the 2 screws and 2 bolts.


Torque:
Bolt:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }

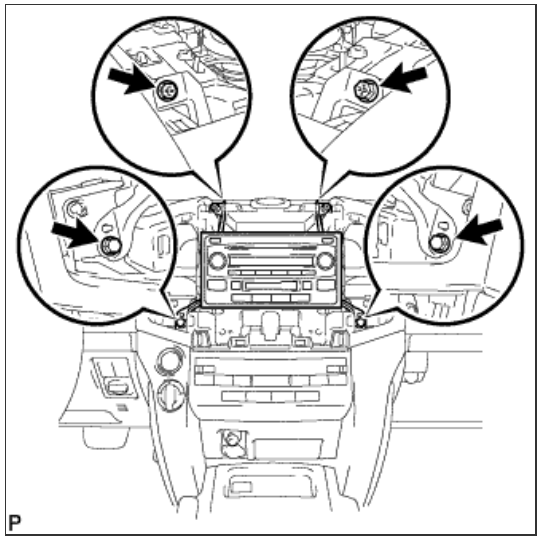

10. INSTALL NO. 1 CENTER INSTRUMENT CLUSTER FINISH PANEL

a. Connect the connector.

b. Attach the 10 claws to install the finish panel.

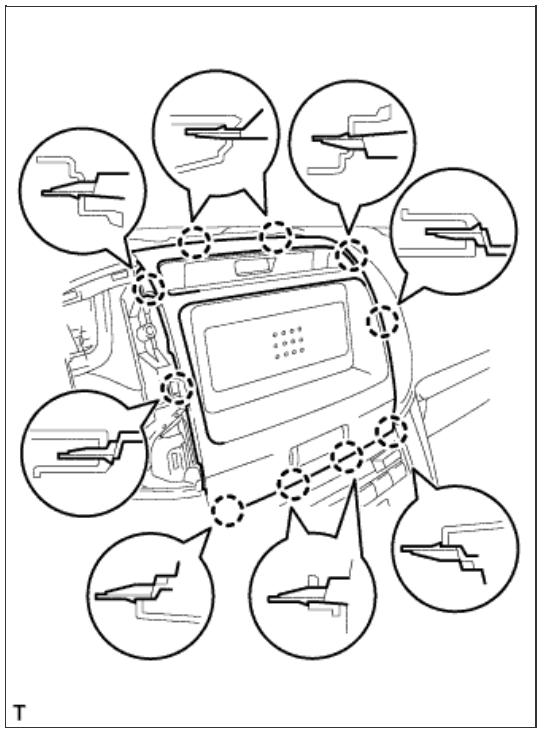


11. INSTALL RADIO RECEIVER ASSEMBLY WITH BRACKET (w/o Multi-display)

a. Connect the connectors.

b. Insert the radio receiver to attach the 10 claws on its backside.

NOTICE:

When inserting the radio receiver, do not press the knobs on it.

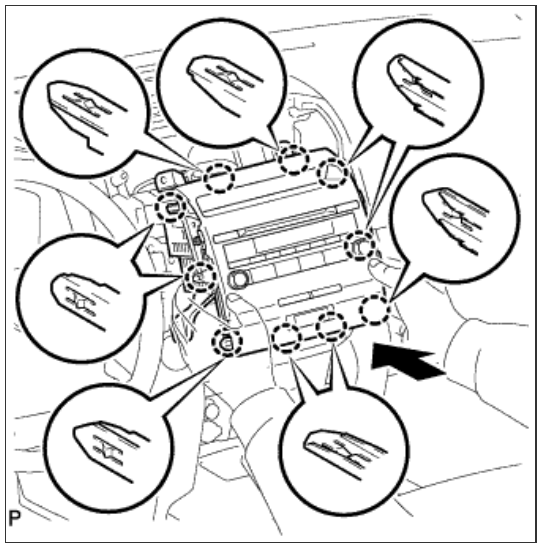

c. Install the radio receiver with the 2 screws and 2 bolts.

Torque:
Bolt:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }




12. INSTALL MULTI-DISPLAY ASSEMBLY WITH BRACKET (w/ Multi-display)

a. Connect the connectors.

b. Insert the display and attach the 2 clips and 6 claws on its backside.


NOTICE:

When inserting the display, do not press the knobs on it.

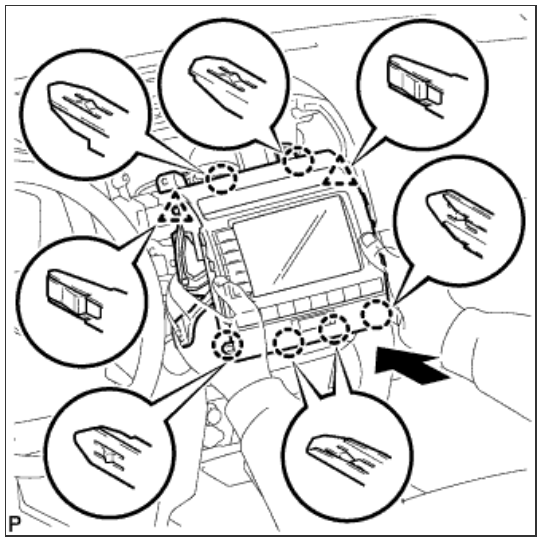

c. Install the display with the 2 screws and 2 bolts.


Torque:
Bolt:
12 N*m{ 122 kgf*cm , 8 ft.*lbf }

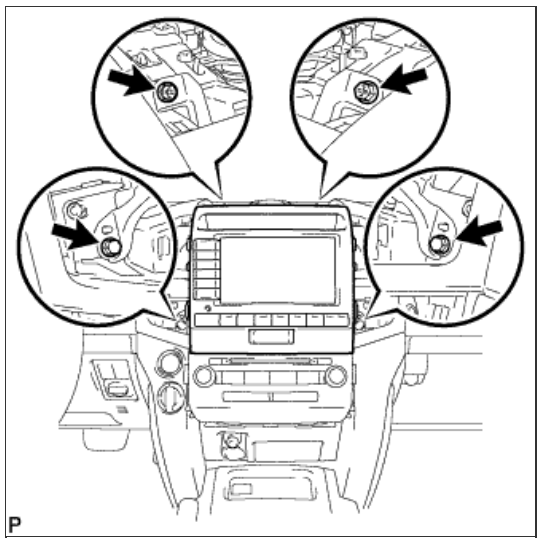

13. INSTALL NO. 4 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Connect the connector.


b. Attach the 6 claws to install the register.

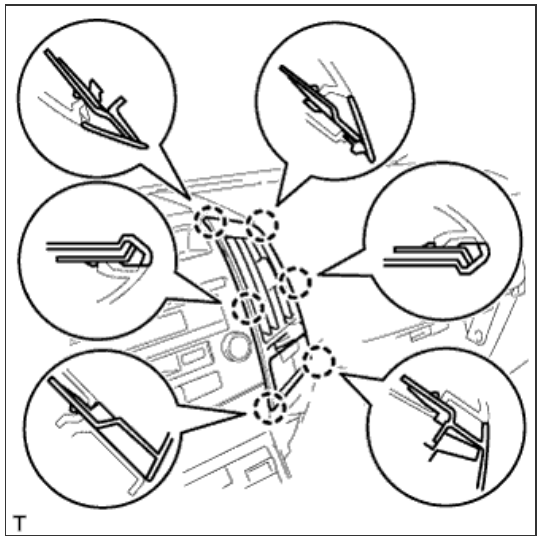

14. INSTALL NO. 3 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Connect the connector.

b. Attach the 6 claws to install the register.

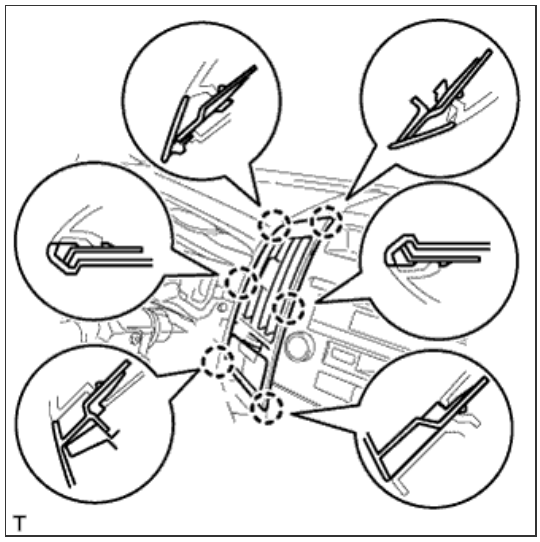

15. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (RH Side)

a. for 9 Speakers Models:

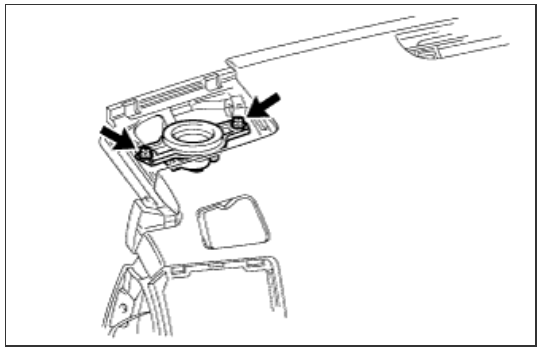

i. Connect the connector.


ii. Temporarily install the speaker by aligning the positioning pins of the speaker with the instrument panel.

iii. Install the speaker with the 2 bolts.

NOTICE:

- **Do not touch the cone part of the speaker.**
- **When installing the speaker to the instrument panel be careful that the wires do not get caught between the parts.**

b. except 9 Speakers Models:

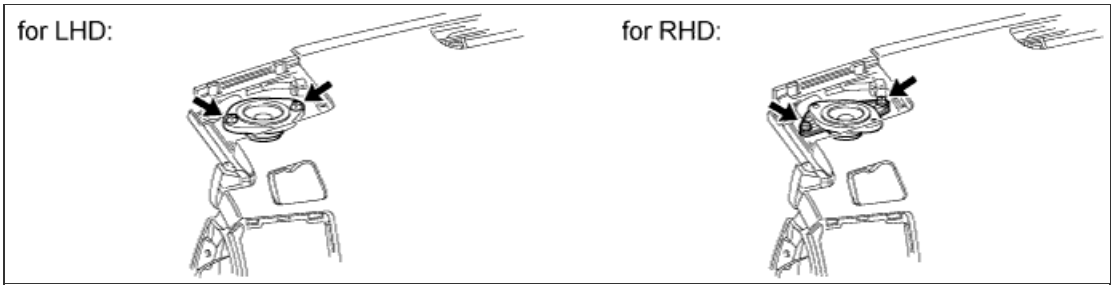

i. Connect the connector.

ii. Temporarily install the speaker by aligning the positioning pins of the speaker with the instrument panel.


iii. Install the speaker with the 2 bolts.

NOTICE:

- **Do not touch the cone part of the speaker.**
- **When installing the speaker to the instrument panel be careful that the wires do not get caught between the parts.**


16. INSTALL NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

a. Attach the claws to install the panel.

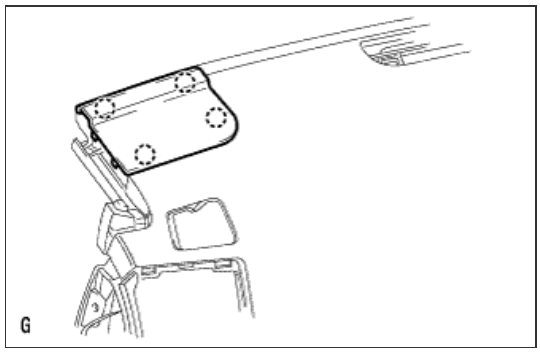

17. INSTALL FRONT NO. 2 SPEAKER ASSEMBLY (LH Side)

a. for 9 Speakers Models:

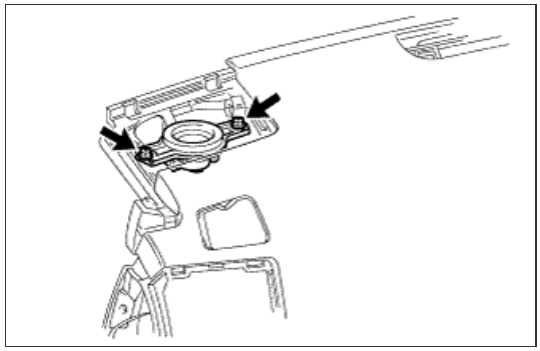

i. Connect the connector.


ii. Temporarily install the speaker by aligning the positioning pins of the speaker with the instrument panel.

iii. Install the speaker with the 2 bolts.

NOTICE:

- **Do not touch the cone part of the speaker.**
- **When installing the speaker to the instrument panel be careful that the wires do not get caught between the parts.**

b. except 9 Speakers Models:

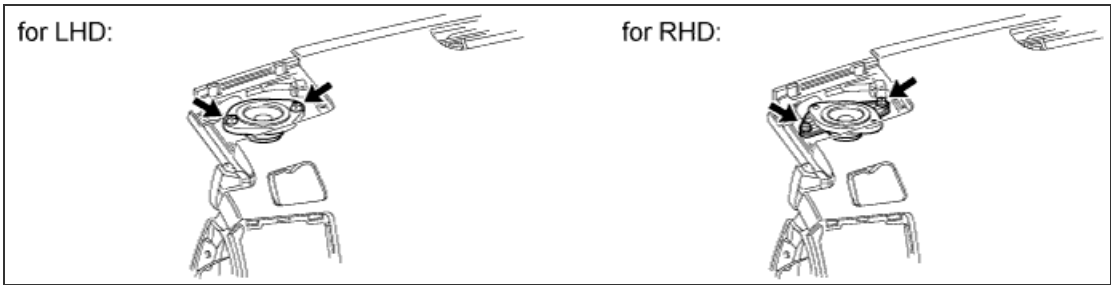

i. Connect the connector.

ii. Temporarily install the speaker by aligning the positioning pins of the speaker with the instrument panel.


iii. Install the speaker with the 2 bolts.

NOTICE:

- **Do not touch the cone part of the speaker.**
- **When installing the speaker to the instrument panel be careful that the wires do not get caught between the parts.**

18. INSTALL NO. 1 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY

a. Attach the claws to install the panel.

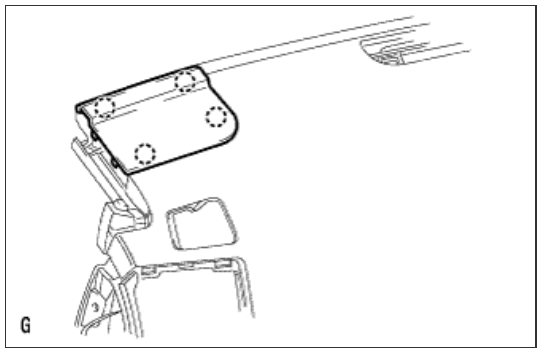

19. INSTALL FRONT NO. 4 SPEAKER ASSEMBLY


a. Connect the speaker connector.

b. Temporarily install the speaker by aligning the positioning pins of the speaker with the instrument panel.

c. Install the speaker with the 2 bolts.


NOTICE:

- **Do not touch the cone part of the speaker.**
- **When installing the speaker to the instrument panel be careful that the wires do not get caught between the parts.**

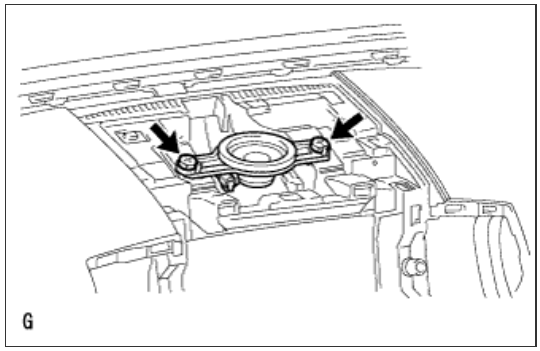

20. INSTALL NO. 1 SPEAKER OPENING COVER ASSEMBLY

a. Attach the 8 claws to install the opening cover.

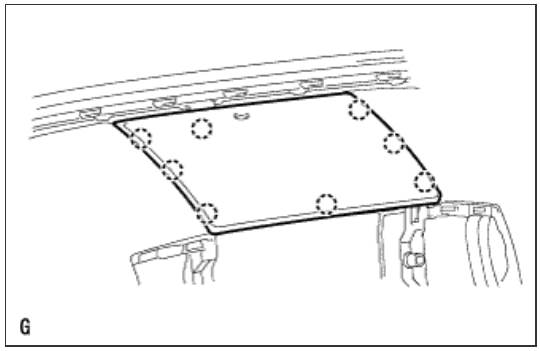

21. INSTALL FRONT PILLAR GARNISH RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

22. INSTALL FRONT PILLAR GARNISH RH (w/o Sliding Roof)


HINT:

Use the same procedures described for the LH side.

23. INSTALL FRONT PILLAR GARNISH LH (w/ Sliding Roof)

a. for 9, 1 Speakers:
Connect the speaker connector.


b. Attach the clip and 3 guides to install the front pillar garnish.

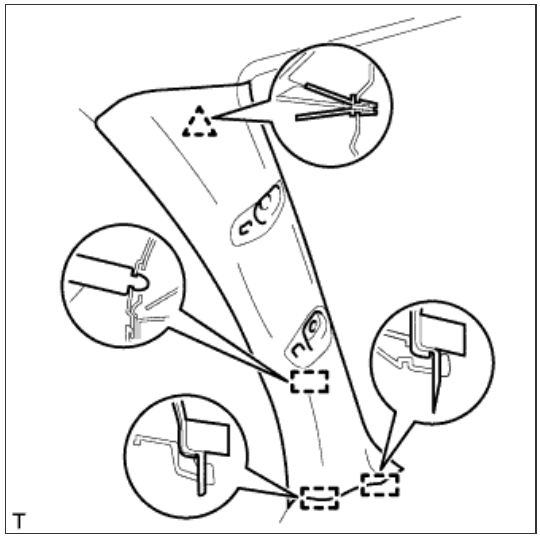

24. INSTALL FRONT PILLAR GARNISH LH (w/o Sliding Roof)

a. for 9, 1 Speakers:
Connect the speaker connector.

b. Attach the clip and 3 guides to install the front pillar garnish.

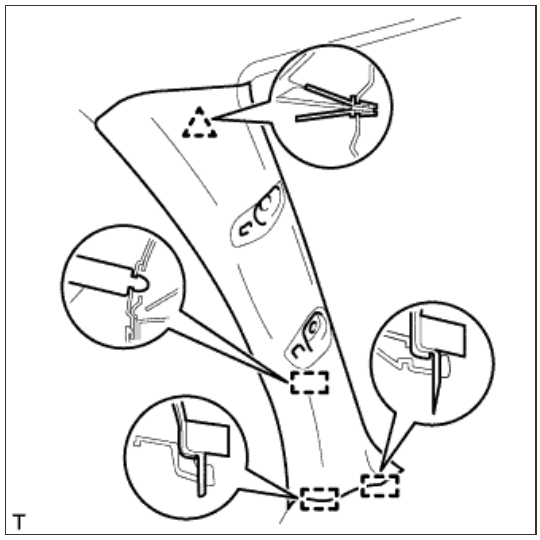


25. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY (w/ Sliding Roof)

HINT:


Use the same procedure to install the front assist grip on the other side.

a. Attach the 2 claws to install the front assist grip.

b. Install the 2 bolts.

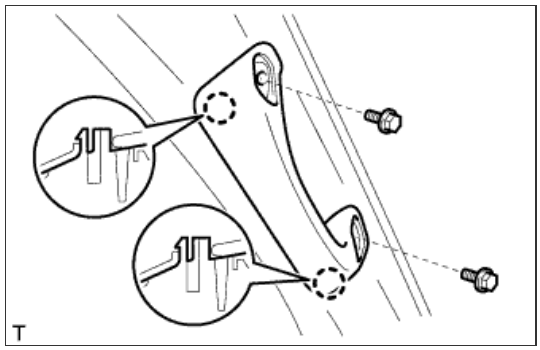

c. Attach the claws to install the 2 assist grip plugs.

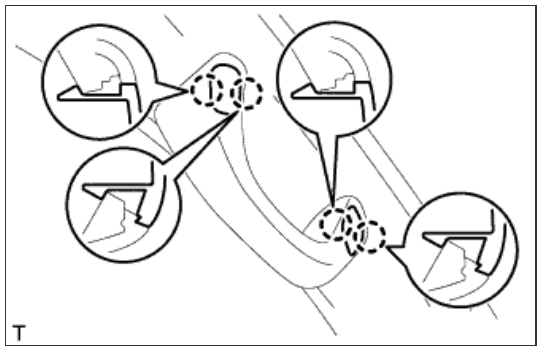


26. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY (w/o Sliding Roof)

HINT:


Use the same procedure to install the front assist grip on the other side.

a. Attach the 2 claws to install the front assist grip.

b. Install the 2 bolts.

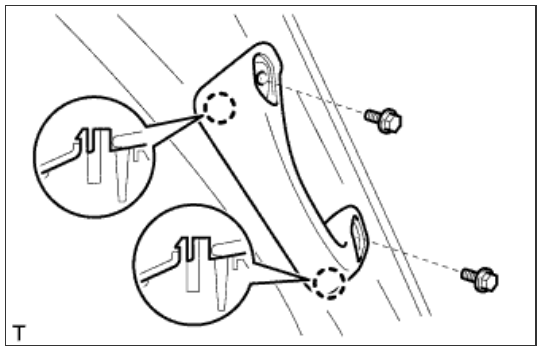


c. Attach the claws to install the 2 assist grip plugs.

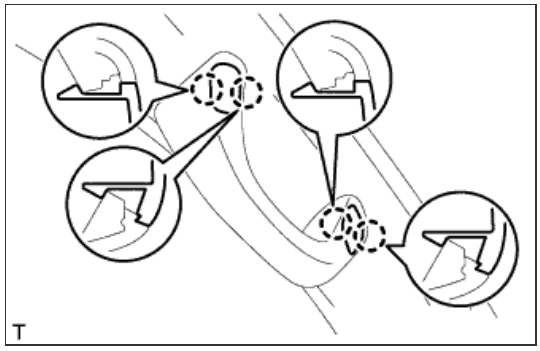

27. INSTALL NO. 2 INSTRUMENT PANEL REGISTER ASSEMBLY

a. Attach the claws to install the register.

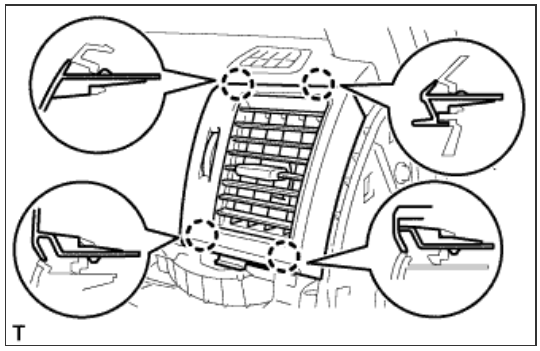


28. INSTALL LOWER NO. 2 INSTRUMENT PANEL FINISH PANEL

a. Connect the connector.


b. Attach the 3 claws to install the finish panel.

c. Install the bolts.

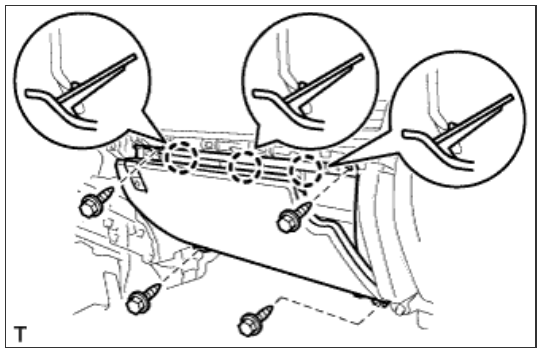


29. INSTALL INSTRUMENT PANEL BOX DOOR KNOB

a. Attach the 2 claws to install the knob.

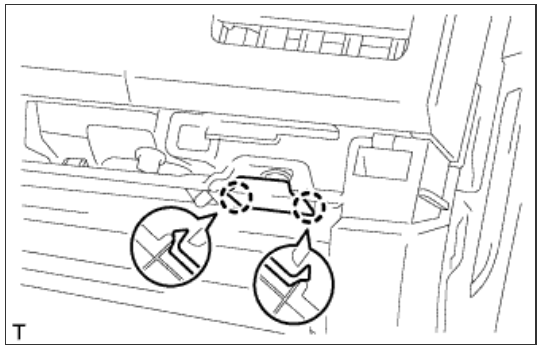

30. INSTALL NO. 3 INSTRUMENT CLUSTER FINISH PANEL GARNISH


a. Attach the 6 claws to install the panel garnish.

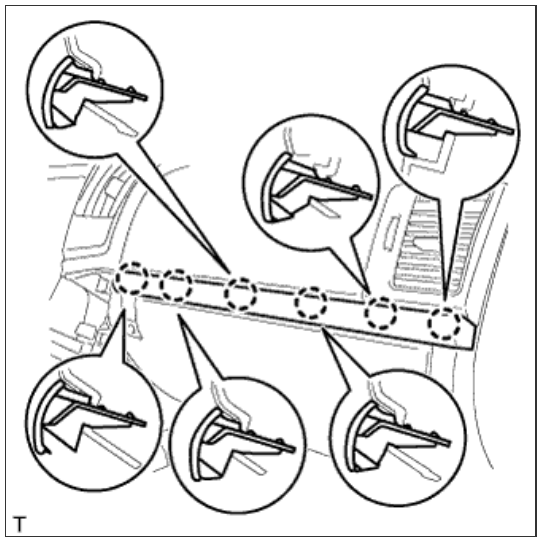

31. INSTALL LOWER INSTRUMENT PANEL (w/o Passenger Side Knee Airbag)

a. Attach the claws to install the instrument panel.

b. Install the 2 bolts.

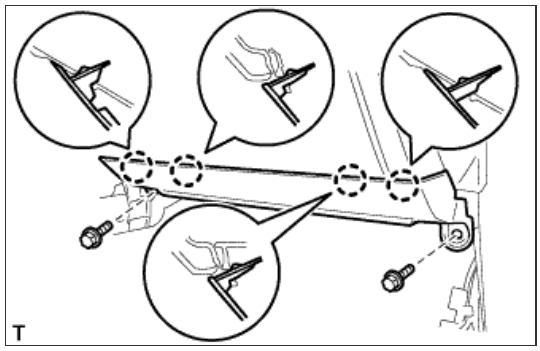

32. INSTALL FRONT PASSENGER SIDE KNEE AIRBAG ASSEMBLY (w/ Passenger Side Knee Airbag)

a. Connect the connector.


NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Attach the claws to install the front passenger side knee airbag.

c. Install the bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

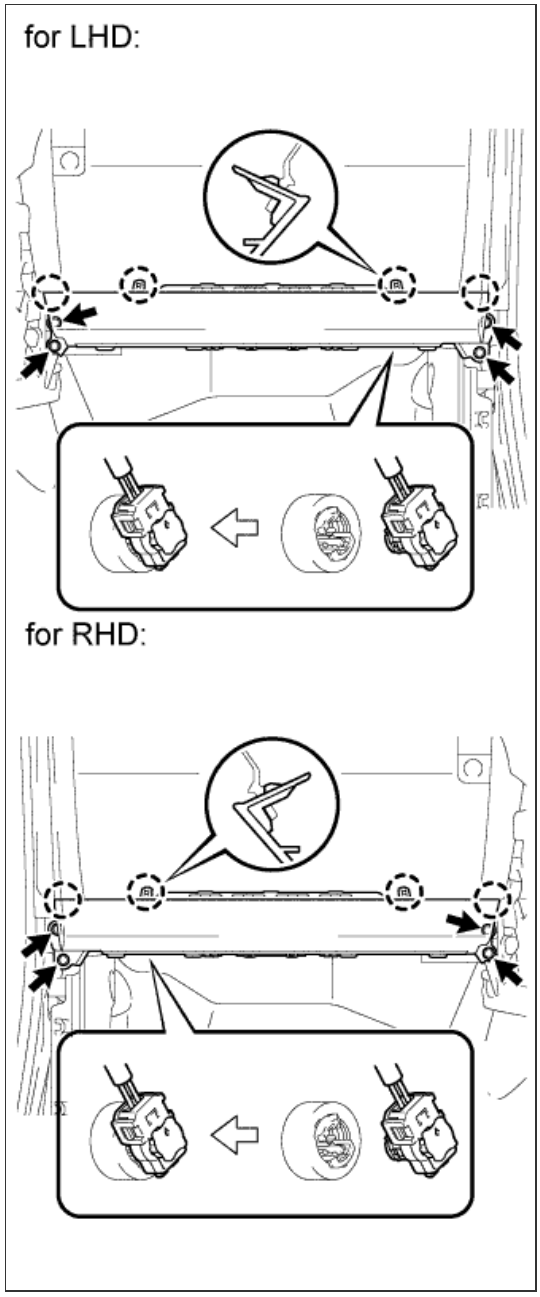

33. INSTALL COWL SIDE TRIM BOARD RH


a. Attach the 2 clips to install the trim board.

b. Install the cap nut.

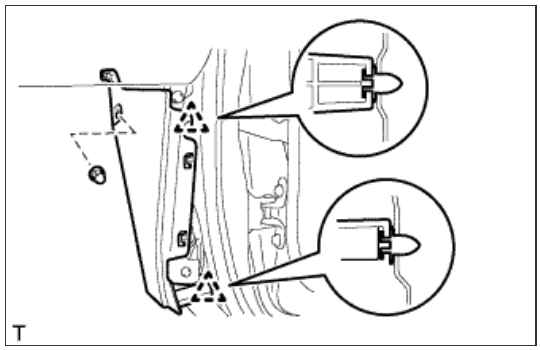

34. INSTALL NO. 2 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Attach the claws to install the under cover.

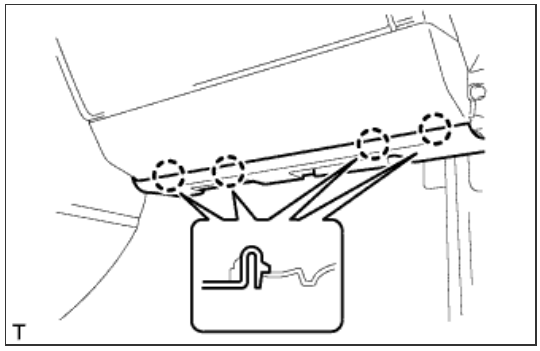

35. INSTALL FRONT DOOR SCUFF PLATE RH (w/ Sliding Roof)

HINT:

Use the same procedures described for the LH side.

36. INSTALL FRONT DOOR SCUFF PLATE RH (w/o Sliding Roof)


HINT:

Use the same procedures described for the LH side.

37. INSTALL INSTRUMENT SIDE PANEL RH (w/ Airbag Cut Off Switch)


a. Connect the connector.

b. Attach the 6 claws to install the side panel.

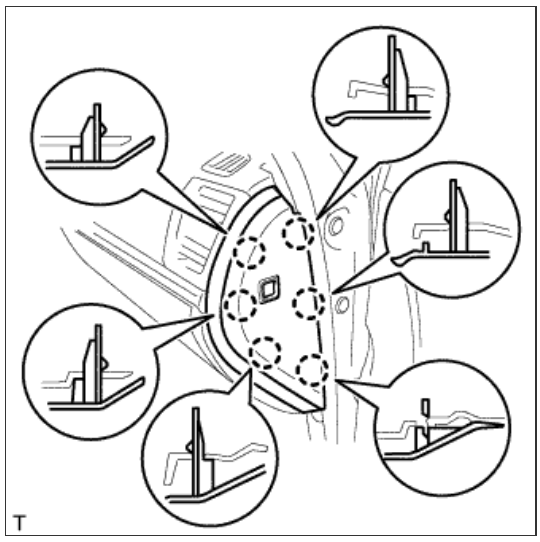


38. INSTALL INSTRUMENT SIDE PANEL RH (w/o Airbag Cut Off Switch)

a. Attach the 6 claws to install the side panel.

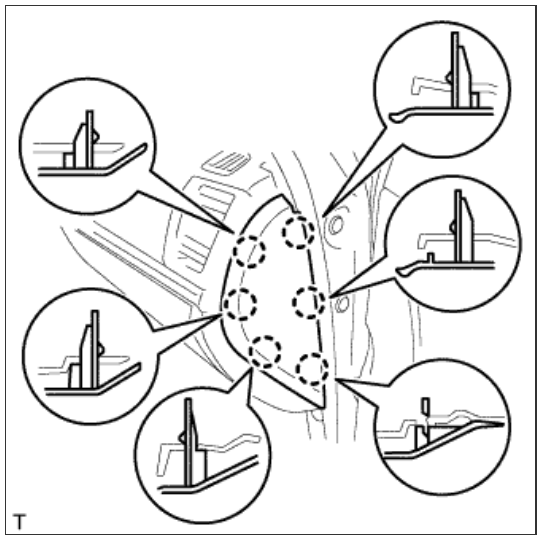

39. INSTALL NO. 1 INSTRUMENT PANEL REGISTER ASSEMBLY


a. Attach the claws to install the register.

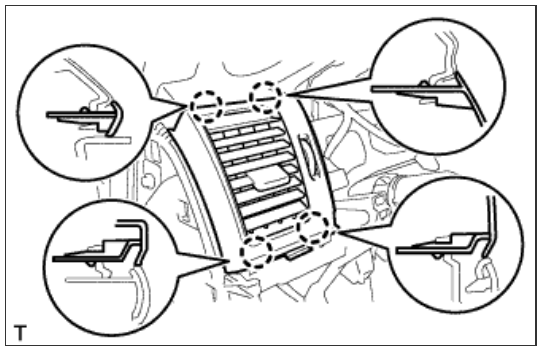

40. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY (w/o Driver Side Knee Airbag)

a. Attach the claws and connect the DLC3.

b. Install the instrument panel with the 5 bolts.

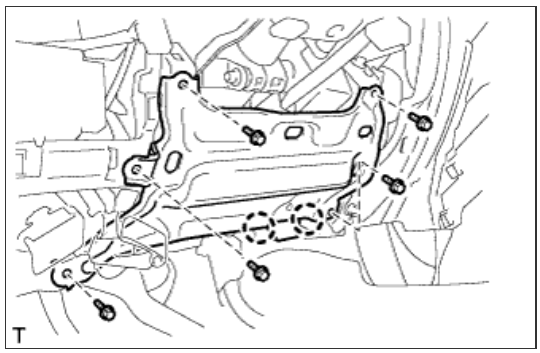

41. INSTALL DRIVER SIDE KNEE AIRBAG ASSEMBLY (w/ Driver Side Knee Airbag)


a. Connect the connector.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

b. Install the driver side knee airbag with the 5 bolts.


Torque:
10 N*m{ 102 kgf*cm , 7 ft.*lbf }

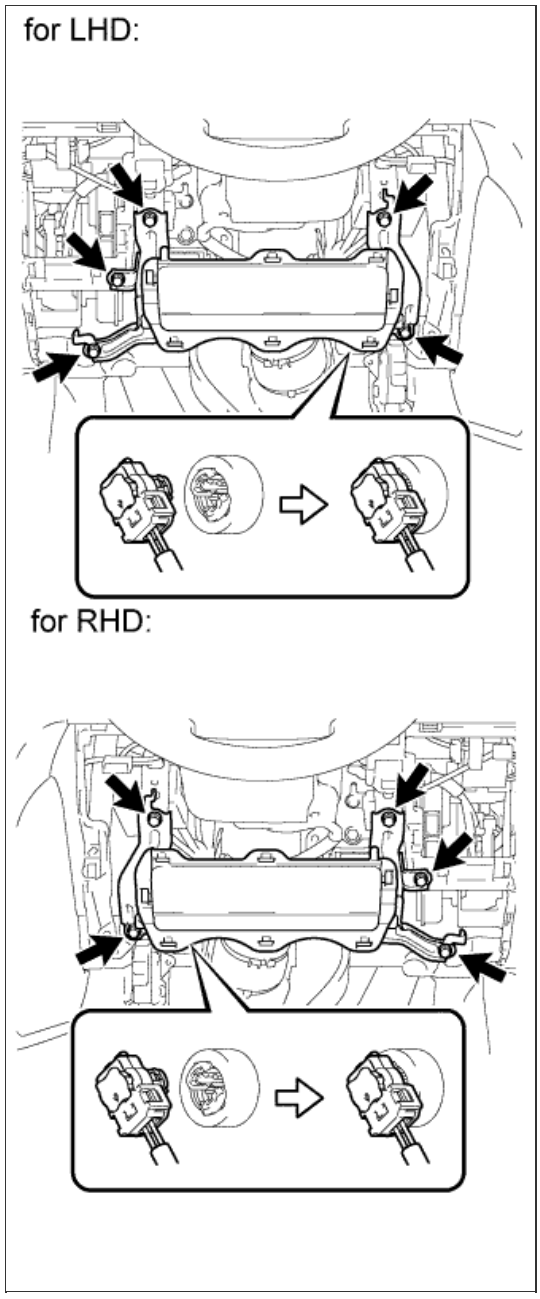

42. INSTALL NO. 1 SWITCH HOLE BASE

a. Connect the connectors.


b. Attach the claws to install the switch hole base.

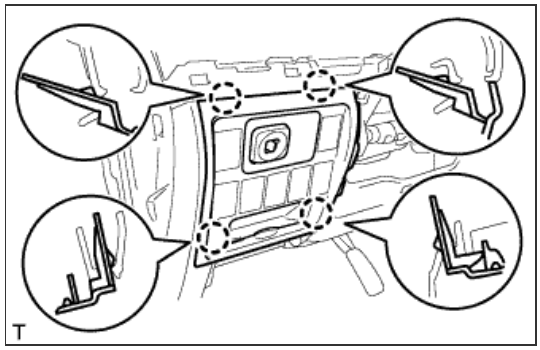


43. INSTALL LOWER NO. 1 INSTRUMENT PANEL FINISH PANEL

a. Connect the connectors.

b. Attach the 2 claws to install the sensor.

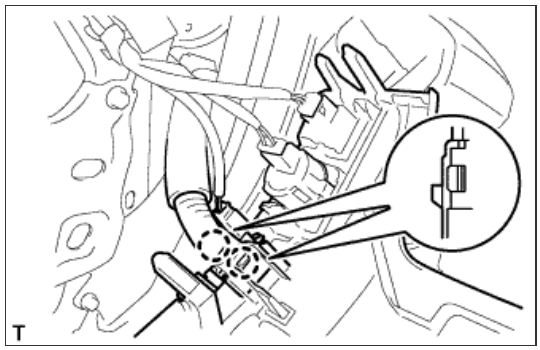


c. Attach the 2 claws to connect the 2 control cables.

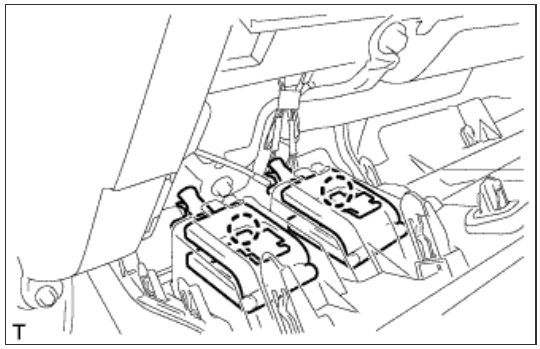


d. Attach the 1 claws to install the finish panel.

e. Install the 2 bolts.

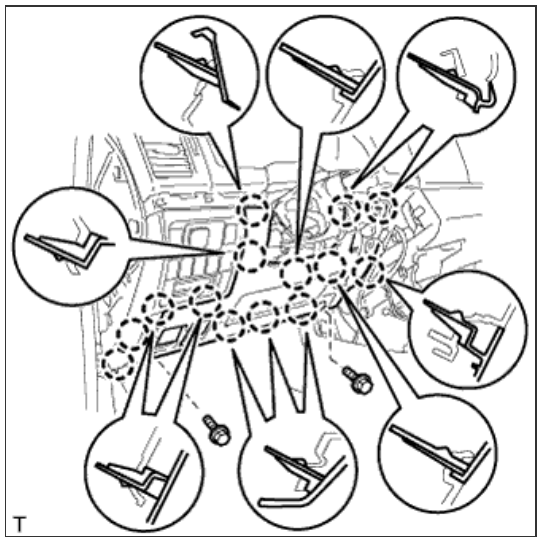


f. Attach the 2 claws to close the hole cover.

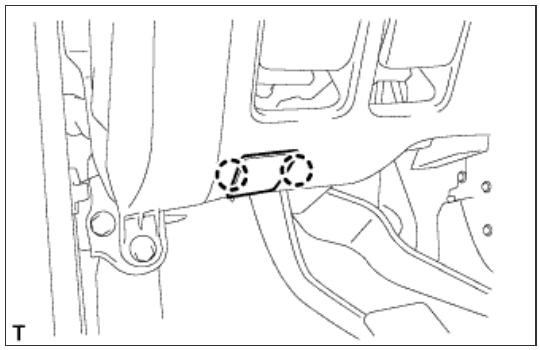

44. INSTALL COWL SIDE TRIM BOARD LH

a. Attach the 2 clips to install the trim board.

b. Install the cap nut.

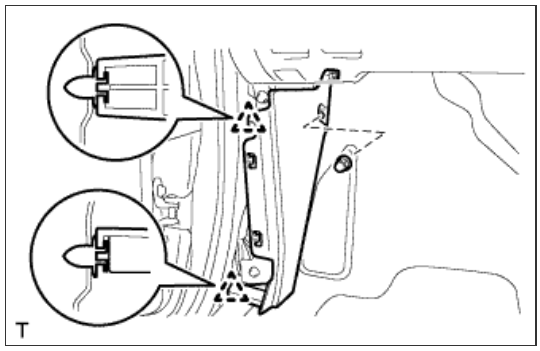


45. INSTALL NO. 1 INSTRUMENT PANEL UNDER COVER SUB-ASSEMBLY (w/ Floor Under Cover)

a. Connect the connectors.


b. Attach the 3 claws to install the under cover.

c. Install the 2 screws.

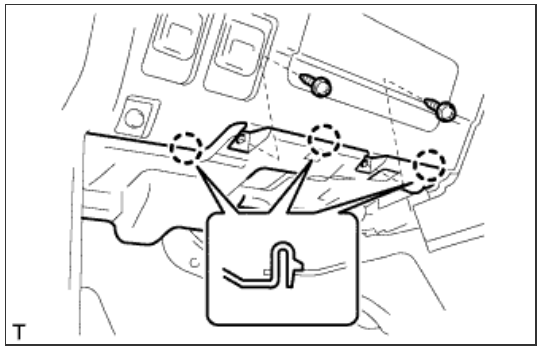


46. INSTALL FRONT DOOR SCUFF PLATE LH (w/ Sliding Roof)

a. Attach the 7 claws and clips to install the scuff plate.

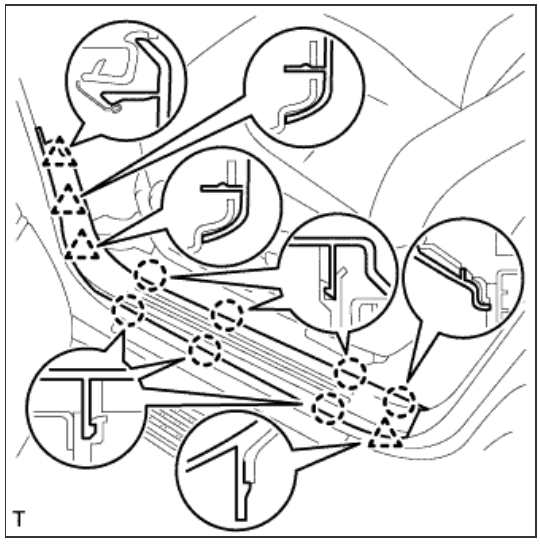

47. INSTALL FRONT DOOR SCUFF PLATE LH (w/o Sliding Roof)


a. Attach the 7 claws and clips to install the scuff plate.

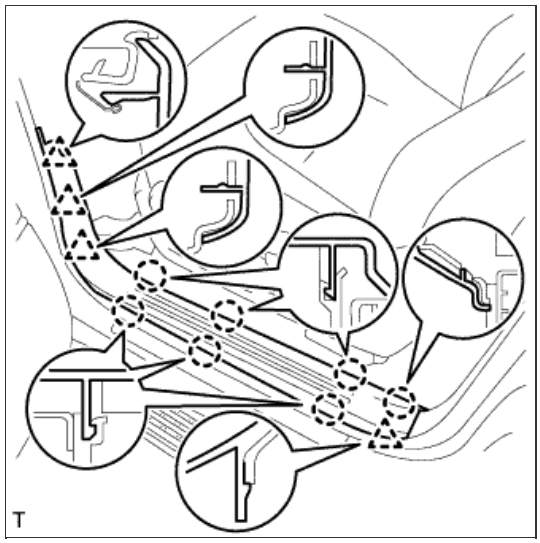

48. INSTALL COMBINATION METER ASSEMBLY (w/o Multi-information Display)

a. Connect the connectors.


b. Install the combination meter with the screws.

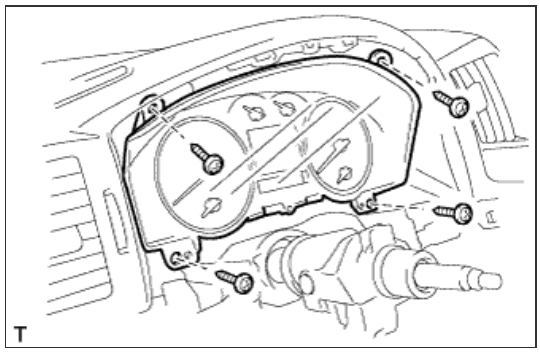

49. INSTALL COMBINATION METER ASSEMBLY (w/ Multi-information Display)


a. Connect the connectors.

b. Install the combination meter with the screws.

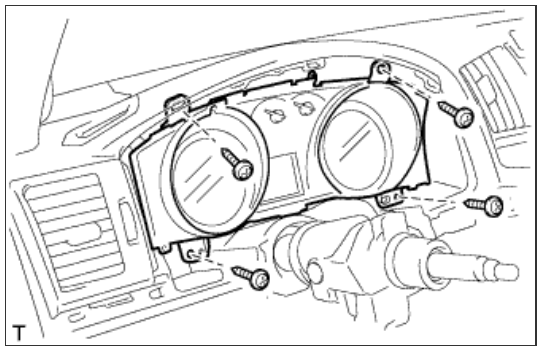

50. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (w/o Multi-information Display)


a. Attach the 9 claws to install the finish panel.

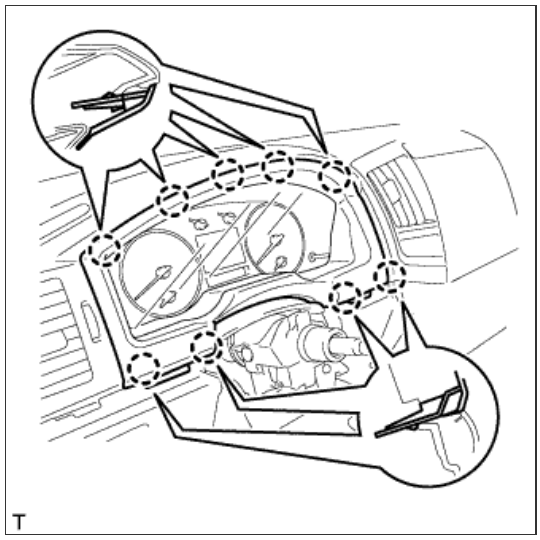

51. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (w/ Multi-information Display)


a. Connect the connector.

b. Attach the 9 claws to install the finish panel.

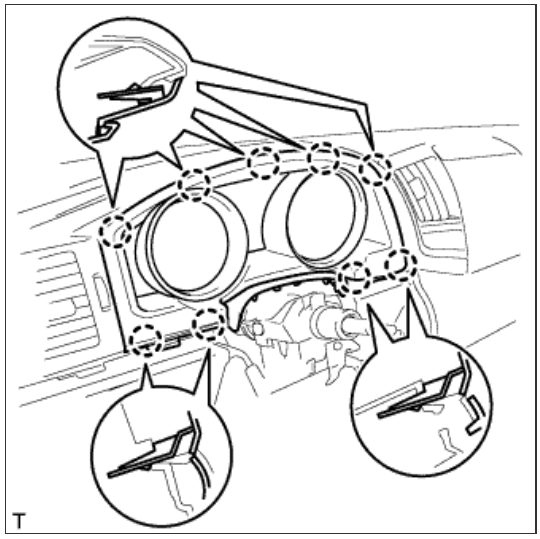


52. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 2 claws to install the panel garnish.

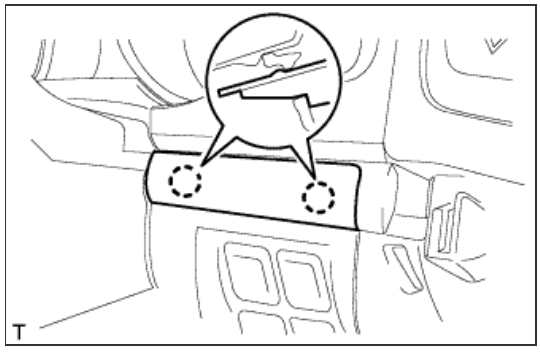


53. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH

a. Attach the 3 claws to install the panel garnish.

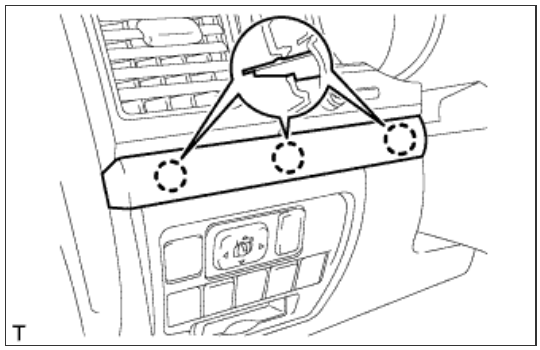


54. INSTALL INSTRUMENT SIDE PANEL LH

a. Attach the 6 claws to install the side panel.

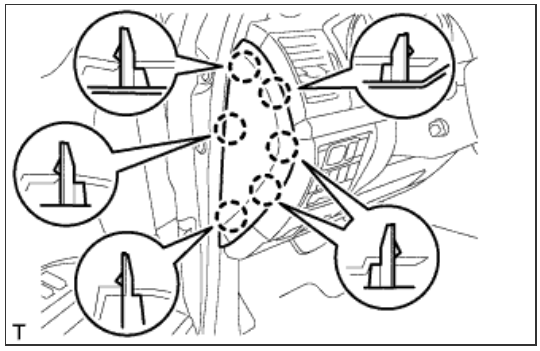

55. INSTALL COOLING BOX ASSEMBLY (w/ Cool Box)

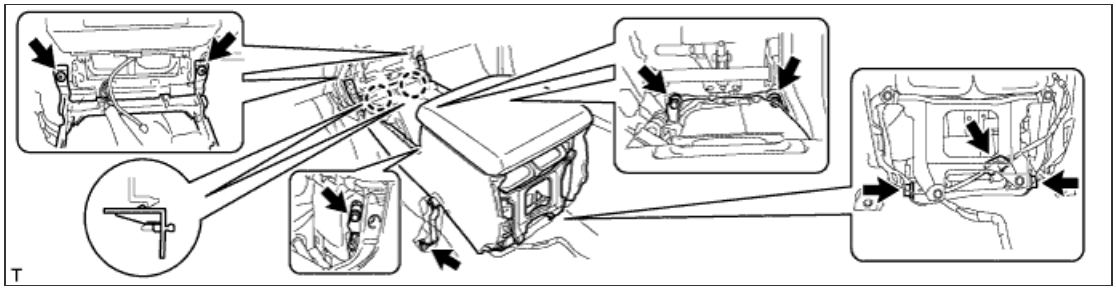

a. Attach the 2 claws.

b. Connect the connector.

c. Sufficiently apply compressor oil to 2 new O-rings.

Compressor oil:
ND-OIL 8 or equivalent


d. Install the 2 O-rings on the 2 cooler pipes.

e. Connect the 2 cooler pipes with the 2 bolts.

Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

f. Install the cooling box with the bolts and 2 screws.

56. INSTALL REAR CONSOLE BOX SUB-ASSEMBLY (w/o Cool Box)

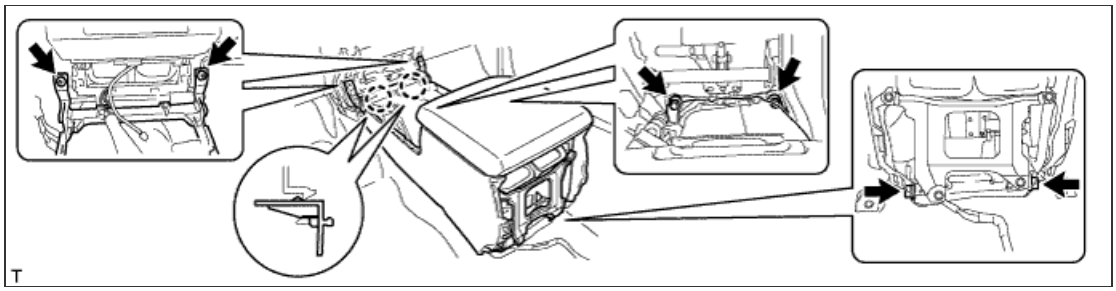


a. Attach the 2 claws.

b. Install the console box with the bolts and 2 screws.

57. INSTALL REAR CONSOLE END PANEL SUB-ASSEMBLY


a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the end panel.

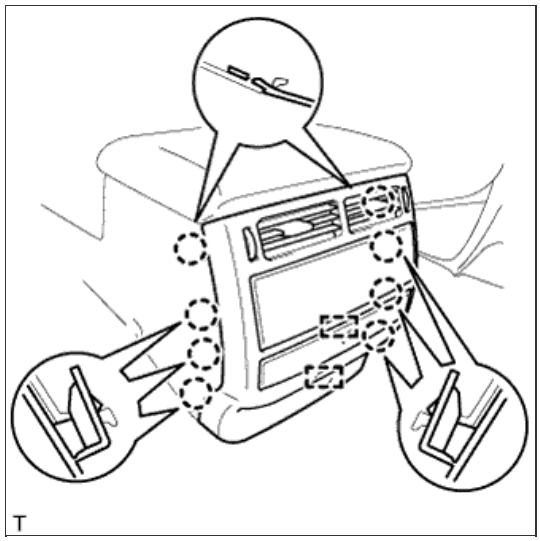

58. INSTALL NO. 1 COOLER COVER (w/ Cool Box)


a. Attach the claw on the upper part of the cooler cover, and then attach the clamp on the lower part of the cooler cover to install it.

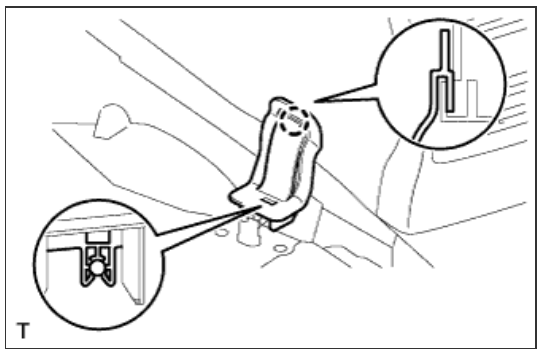

59. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 1 claws to install the console panel.

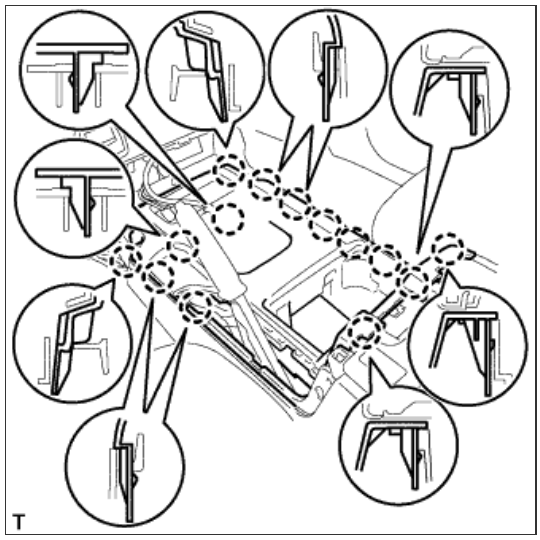


60. INSTALL CONSOLE CUP HOLDER BOX SUB-ASSEMBLY

a. Attach the claws to install the box.

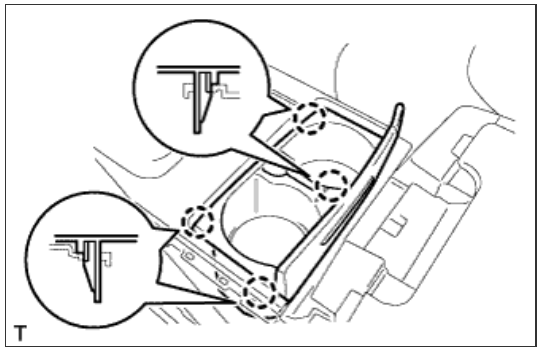

61. INSTALL REAR UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Attach the 9 claws to install the panel.

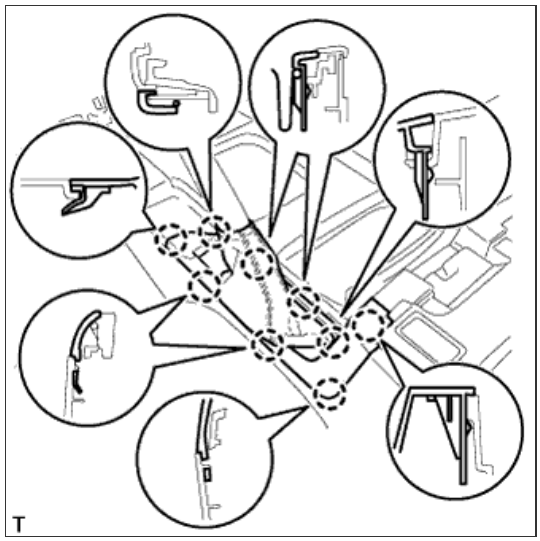

62. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 7 claws to install the panel.

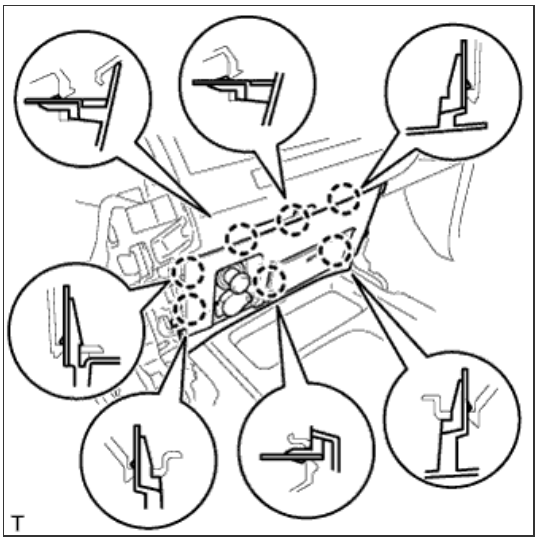

63. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

a. Install the shift lever knob and twist it in the direction indicated by the arrow.

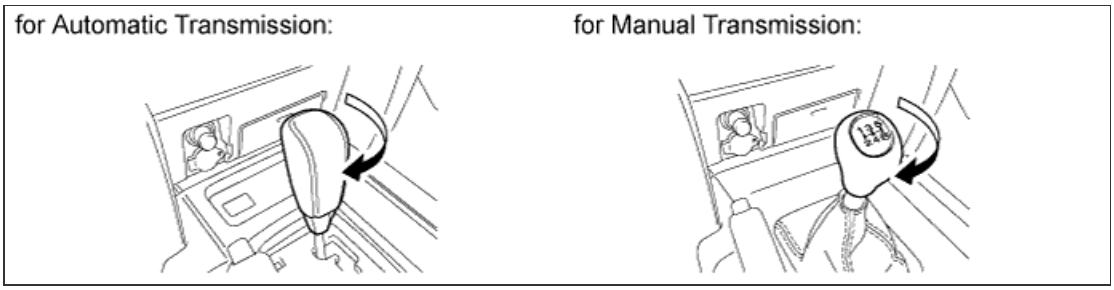


64. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

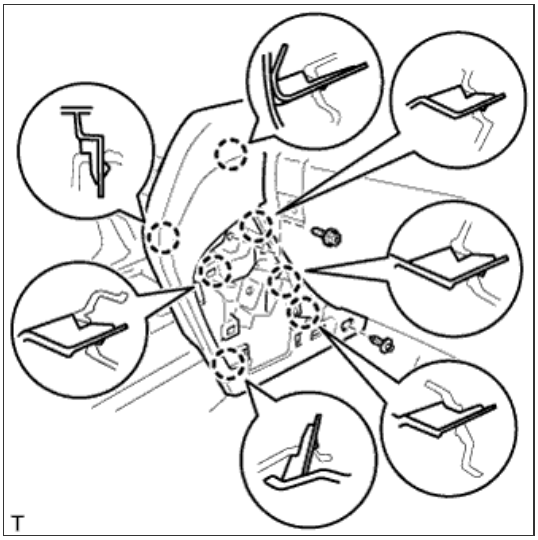

65. INSTALL NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

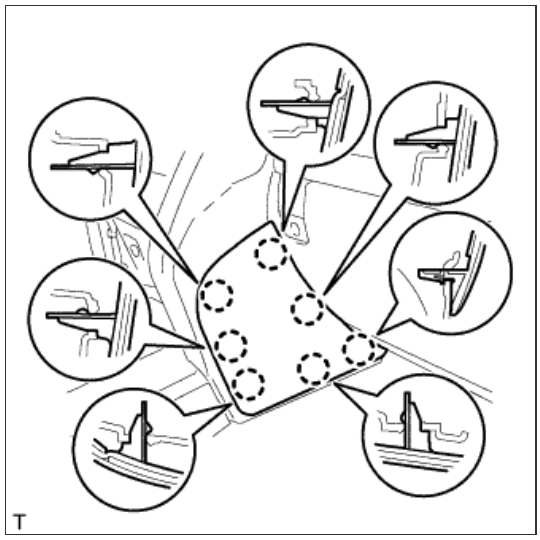


66. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

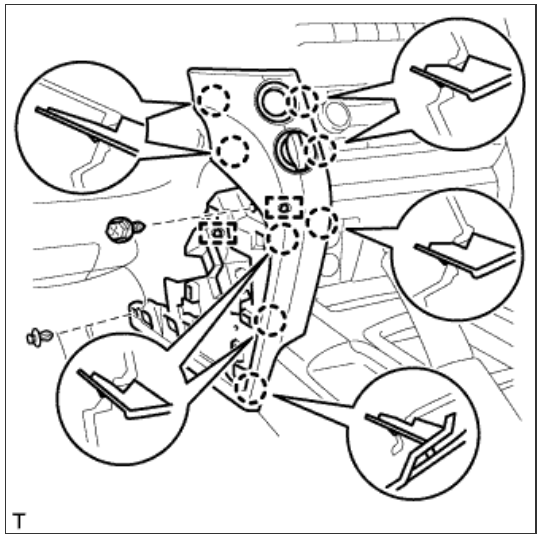

67. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

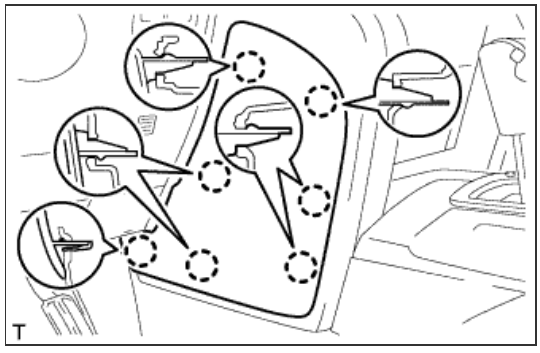

68. INSTALL FRONT SEAT ASSEMBLY RH (for Manual Seat)

a. Install the front seat assembly (Click here).

69. INSTALL FRONT SEAT ASSEMBLY RH (for Power Seat)

a. Install the front seat assembly (Click here).

70. INSTALL FRONT SEAT ASSEMBLY LH (for Manual Seat)


a. Install the front seat assembly LH (Click here).

71. INSTALL FRONT SEAT ASSEMBLY LH (for Power Seat)


a. Install the front seat assembly LH (Click here).

72. INSTALL COMBINATION SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (for Manual Tilt and Manual Telescopic Steering Column)

a. Using pliers, grip the claws of the clamp and install the combination switch assembly with spiral cable sub-assembly to the steering column assembly with the clamp.

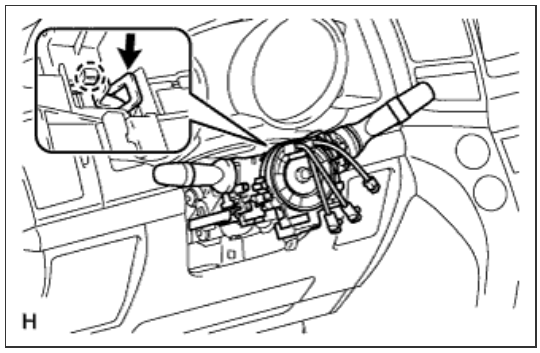


b. Connect the 5 connectors to the combination switch with spiral cable.

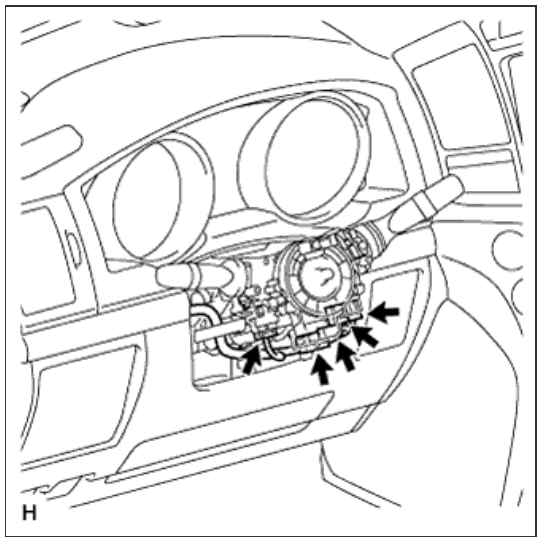


73. INSTALL COMBINATION SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (for Power Tilt and Power Telescopic Steering Column)

a. Using pliers, grip the claws of the clamp and install the turn signal switch assembly with spiral cable sub-assembly to the steering column assembly with the clamp.

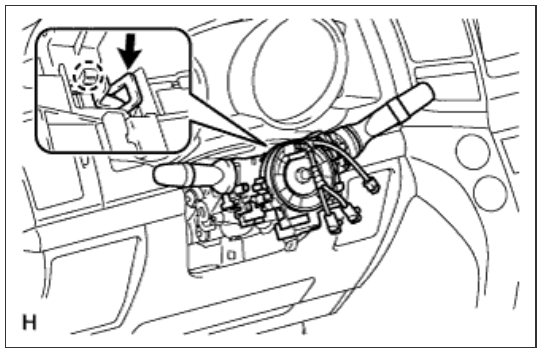


b. Connect the 5 connectors to the turn signal switch with spiral cable.

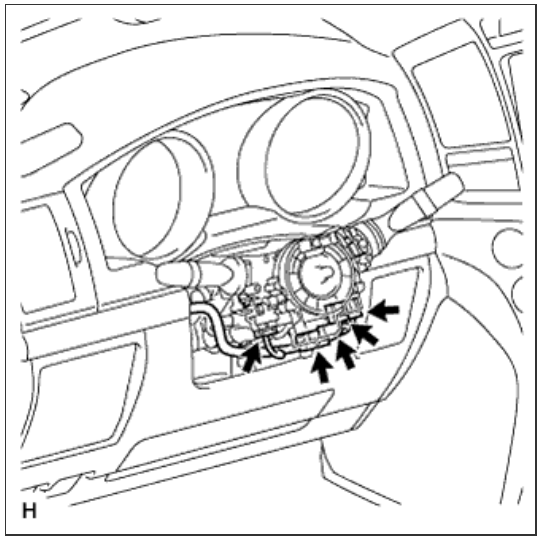

74. INSTALL TILT AND TELESCOPIC SWITCH (for Power Tilt and Power Telescopic Steering Column)

a. Attach the claw to install the switch.


b. Connect the switch connector.

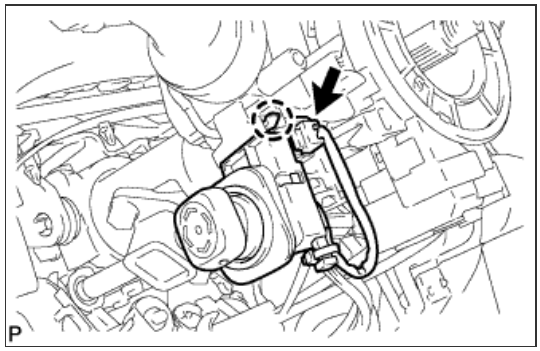

75. INSTALL UPPER STEERING COLUMN COVER (for Manual Tilt and Manual Telescopic Steering Column)

a. Attach the claw to install the upper steering column cover.


b. Attach the clips to install the upper steering column cover onto the instrument cluster finish panel.

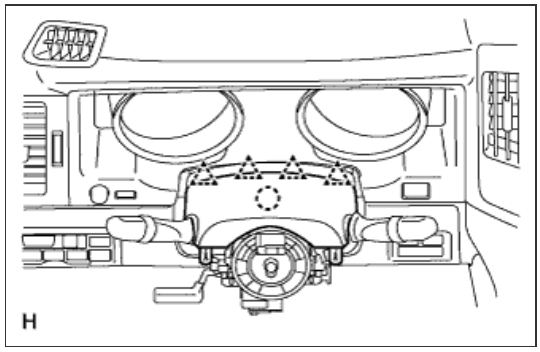

76. INSTALL UPPER STEERING COLUMN COVER (for Power Tilt and Power Telescopic Steering Column)

a. Attach the claw to install the upper steering column cover.

b. Attach the clips to install the upper steering column cover onto the instrument cluster finish panel.

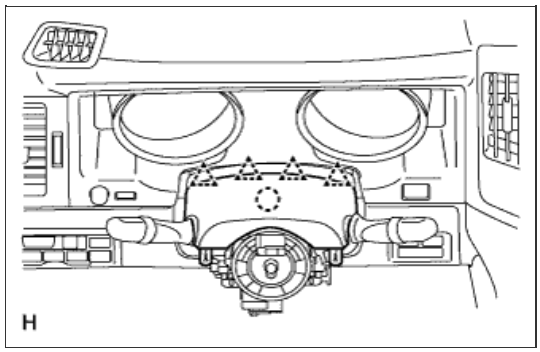

77. INSTALL LOWER STEERING COLUMN COVER (for Manual Tilt and Manual Telescopic Steering Column)


a. Attach the 2 claws to install the lower steering column cover.

NOTICE:

Do not damage the tilt and telescopic switch.

b. Install the 3 screws.

Torque:
2.0 N*m{ 20 kgf*cm , 18 in.*lbf }

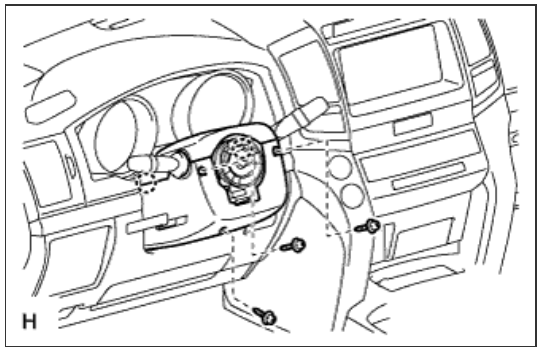

78. INSTALL LOWER STEERING COLUMN COVER (for Power Tilt and Power Telescopic Steering Column)


a. Attach the 2 claws to install the lower steering column cover.

NOTICE:

Do not damage the tilt and telescopic switch.

b. Install the 3 screws.

Torque:
1.5 N*m{ 15 kgf*cm , 13 in.*lbf }

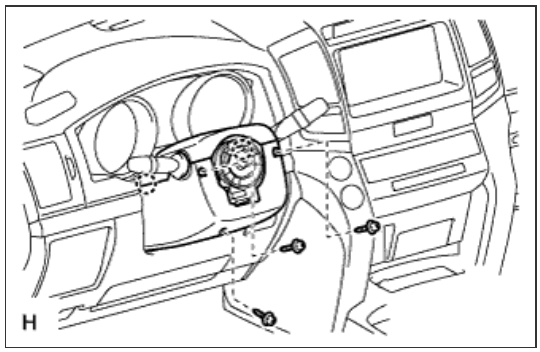


79. INSTALL STEERING WHEEL ASSEMBLY


a. Align the matchmarks on the steering wheel assembly and steering main shaft assembly.

b. Install the steering wheel assembly set nut.

Torque:
50 N*m{ 510 kgf*cm , 37 ft.*lbf }

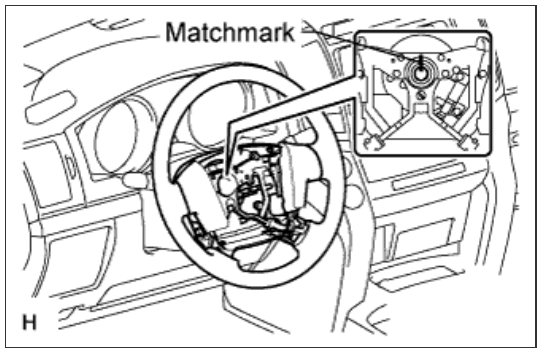

80. INSTALL STEERING PAD

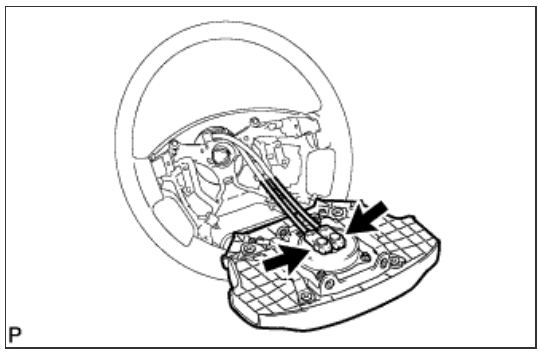

a. Support the steering pad with one hand.

b. Connect the 2 connectors to the steering pad.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

c. Connect the horn connector.


d. Confirm that the circumference groove of the screw fits in the screw case, and place the steering pad onto the steering wheel.

e. Using a T30 socket wrench, tighten the 2 screws.

Torque:
8.8 N*m{ 90 kgf*cm , 78 in.*lbf }


81. INSTALL LOWER NO. 2 STEERING WHEEL COVER

a. Attach the 2 claws to install the cover.

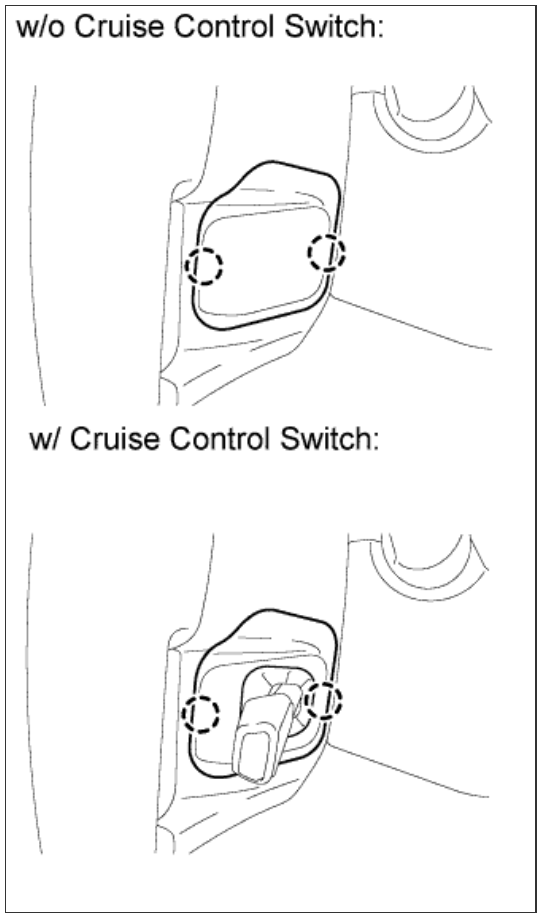

82. INSTALL LOWER NO. 3 STEERING WHEEL COVER

a. Attach the 2 claws to install the cover.

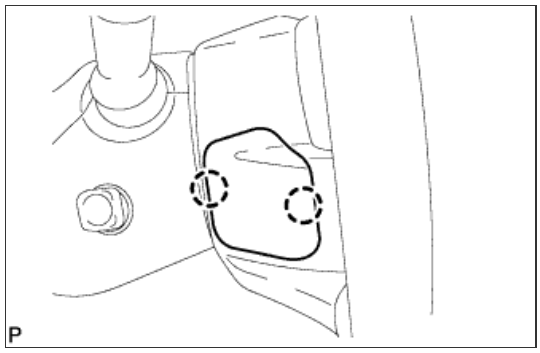

83. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

- **Reset the Autoaway/Return function setting to the previous condition by changing the customize parameter (Click here).**
- **When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).**

84. CHARGE REFRIGERANT (w/ Cool Box)

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-13 a (13 a).

Standard:

Condenser Core Thickness	Air Conditioning Type	Cool Box	efrigerant Charging Amount
22 mm (0.866 in.)	w/o ear Cooler	w/ Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
		w/o Cool Box	870 +/-30 g (30.7 +/-1.1 oz.)
	w/ ear Cooler	w/ Cool Box	1010 +/-30 g (35.6 +/-1.1 oz.)
		w/o Cool Box	960 +/-30 g (33.9 +/-1.1 oz.)
16 mm (0.630 in.)	w/o ear Cooler	w/ Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
		w/o Cool Box	770 +/-30 g (27.2 +/-1.1 oz.)
	w/ ear Cooler	w/ Cool Box	970 +/-30 g (3 .2 +/-1.1 oz.)
		w/o Cool Box	920 +/-30 g (32.5 +/-1.1 oz.)

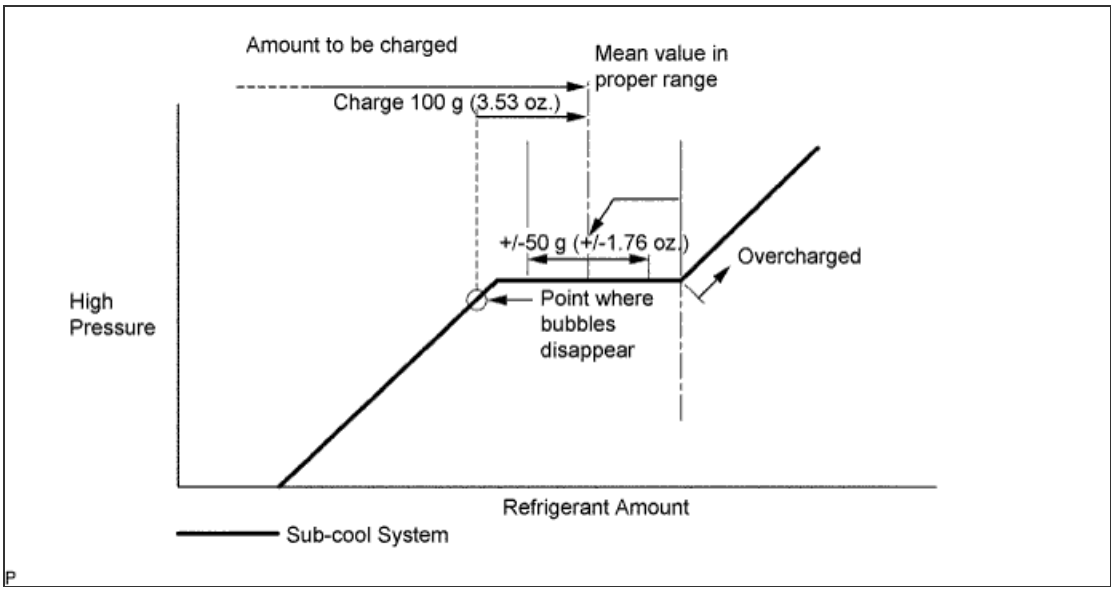

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

85. WARM UP ENGINE (w/ Cool Box)

a. Warm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

86. CHECK FOR REFRIGERANT GAS LEAK (w/ Cool Box)

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- epeat the test 2 or 3 times.
- Make sure that some refrigerant remains in the refrigeration system. When compressor is off: approximately 392 to 588 kPa (.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.

d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.


e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

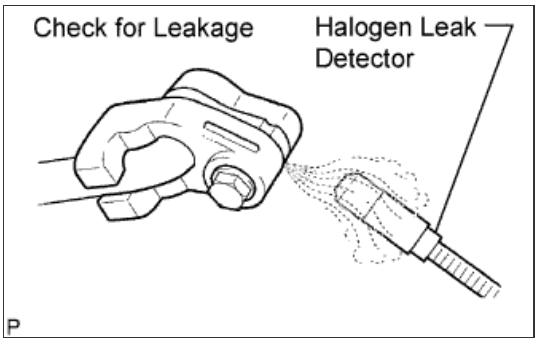



87. CHECK SRS WARNING LIGHT


a. Check the S Swarning light (Click here).

for Preparation Click here

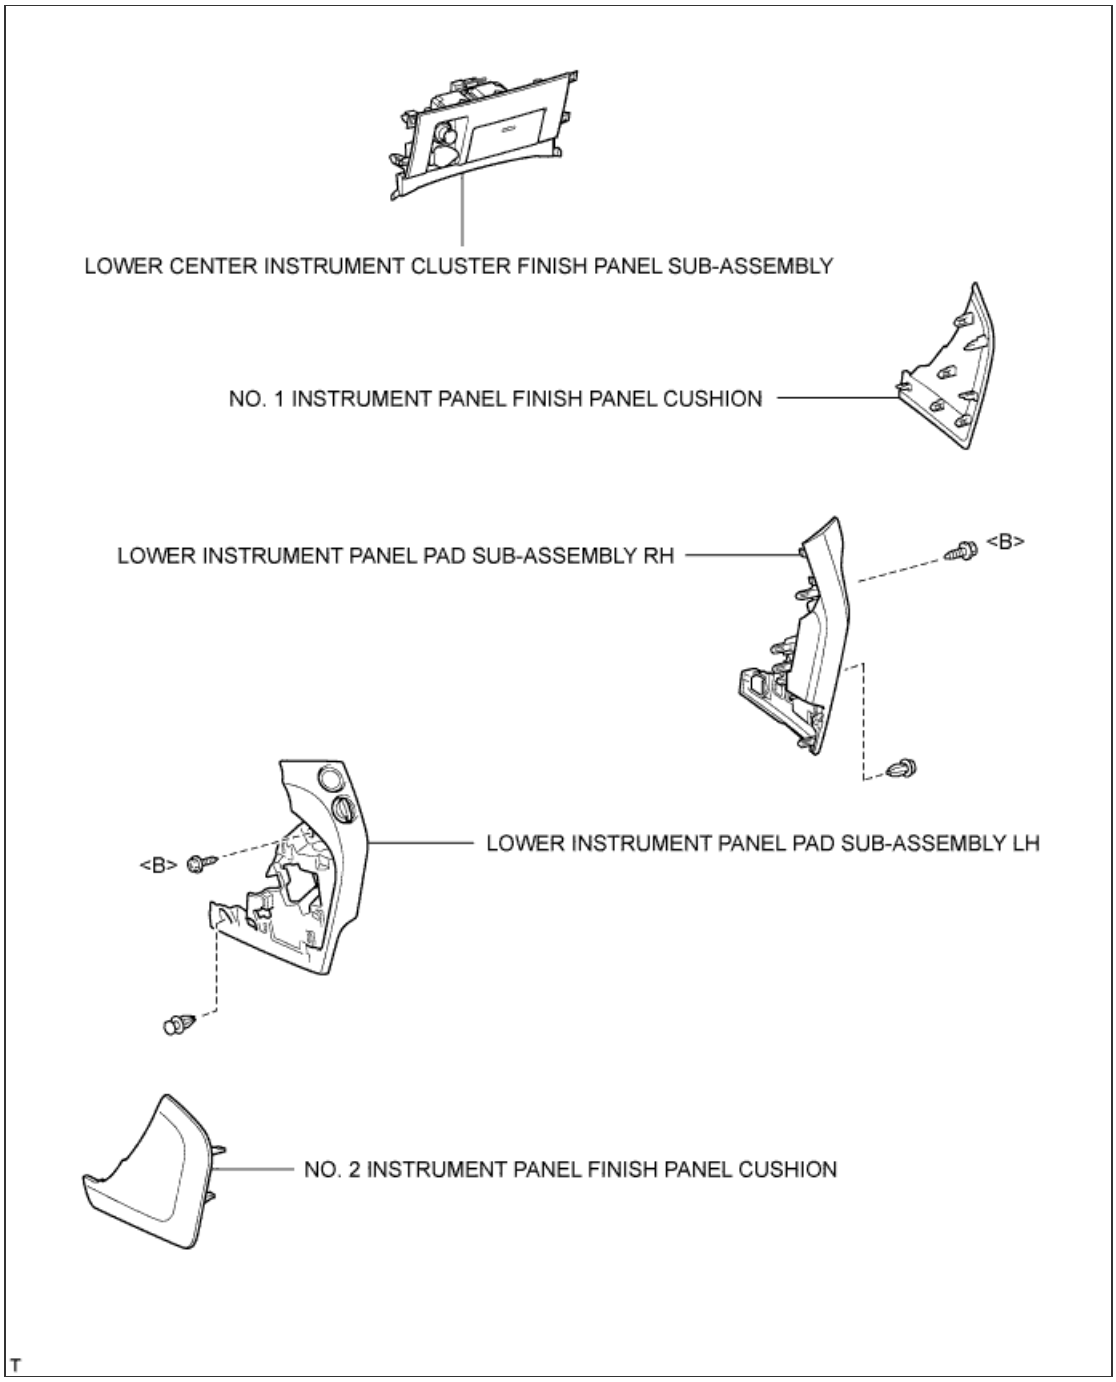


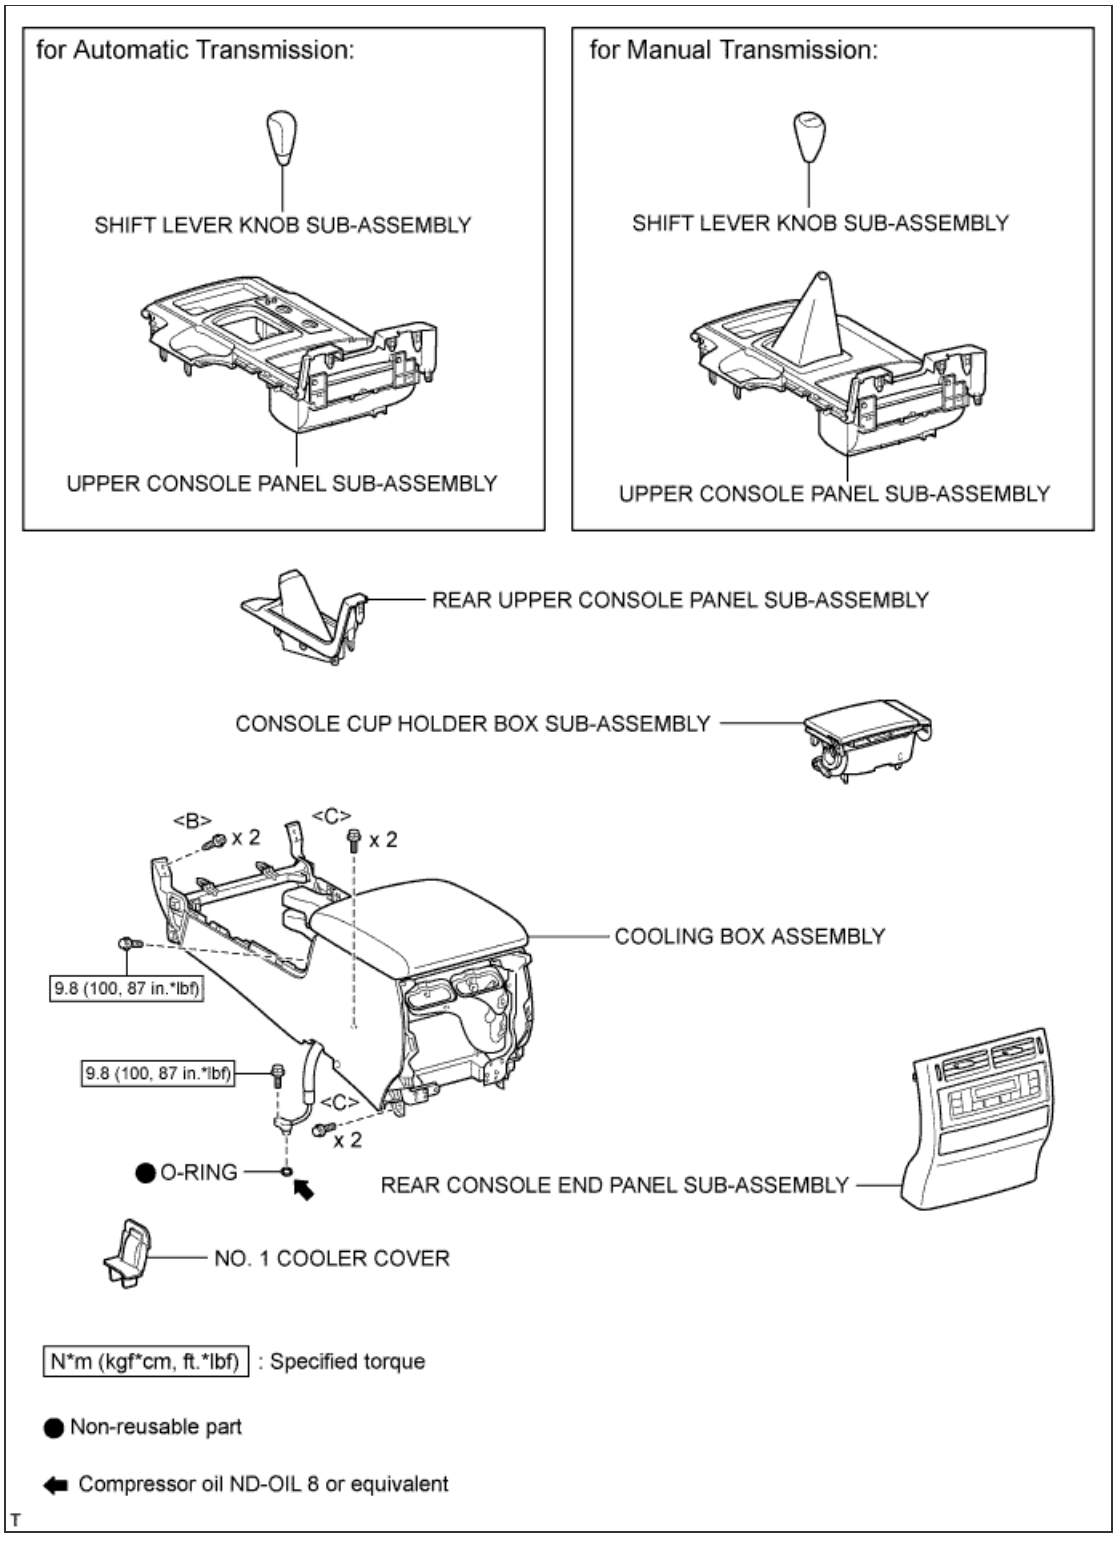
for Automatic Transmission:
SHIFT LEVER KNOB SUB-ASSEMBLY
UPPER CONSOLE PANEL SUB-ASSEMBLY
for Manual Transmission:
SHIFT LEVER KNOB SUB-ASSEMBLY
UPPER CONSOLE PANEL SUB-ASSEMBLY
REAR UPPER CONSOLE PANEL SUB-ASSEMBLY
CONSOLE CUP HOLDER BOX SUB-ASSEMBLY
<B>
x 2
<C>
x 2
COOLING BOX ASSEMBLY
9.8 (100, 87 in.*lbf)
9.8 (100, 87 in.*lbf)
<C>
x 2
O-RING
REAR CONSOLE END PANEL SUB-ASSEMBLY
NO. 1 COOLER COVER
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
Compressor oil ND-OIL 8 or equivalent
T

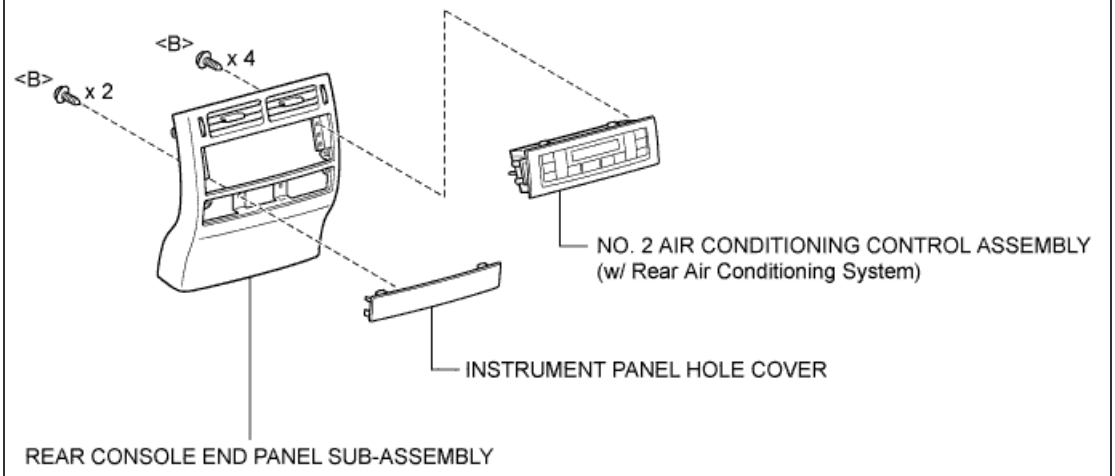


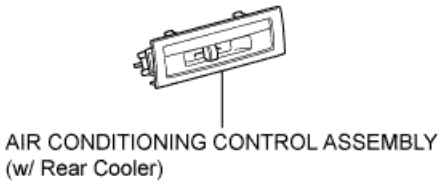


w/o Rear Cooler:

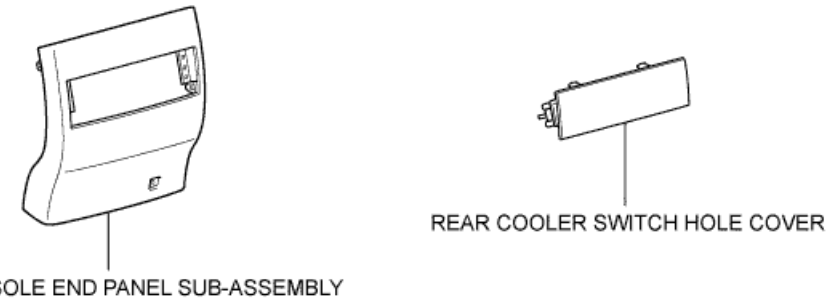


T

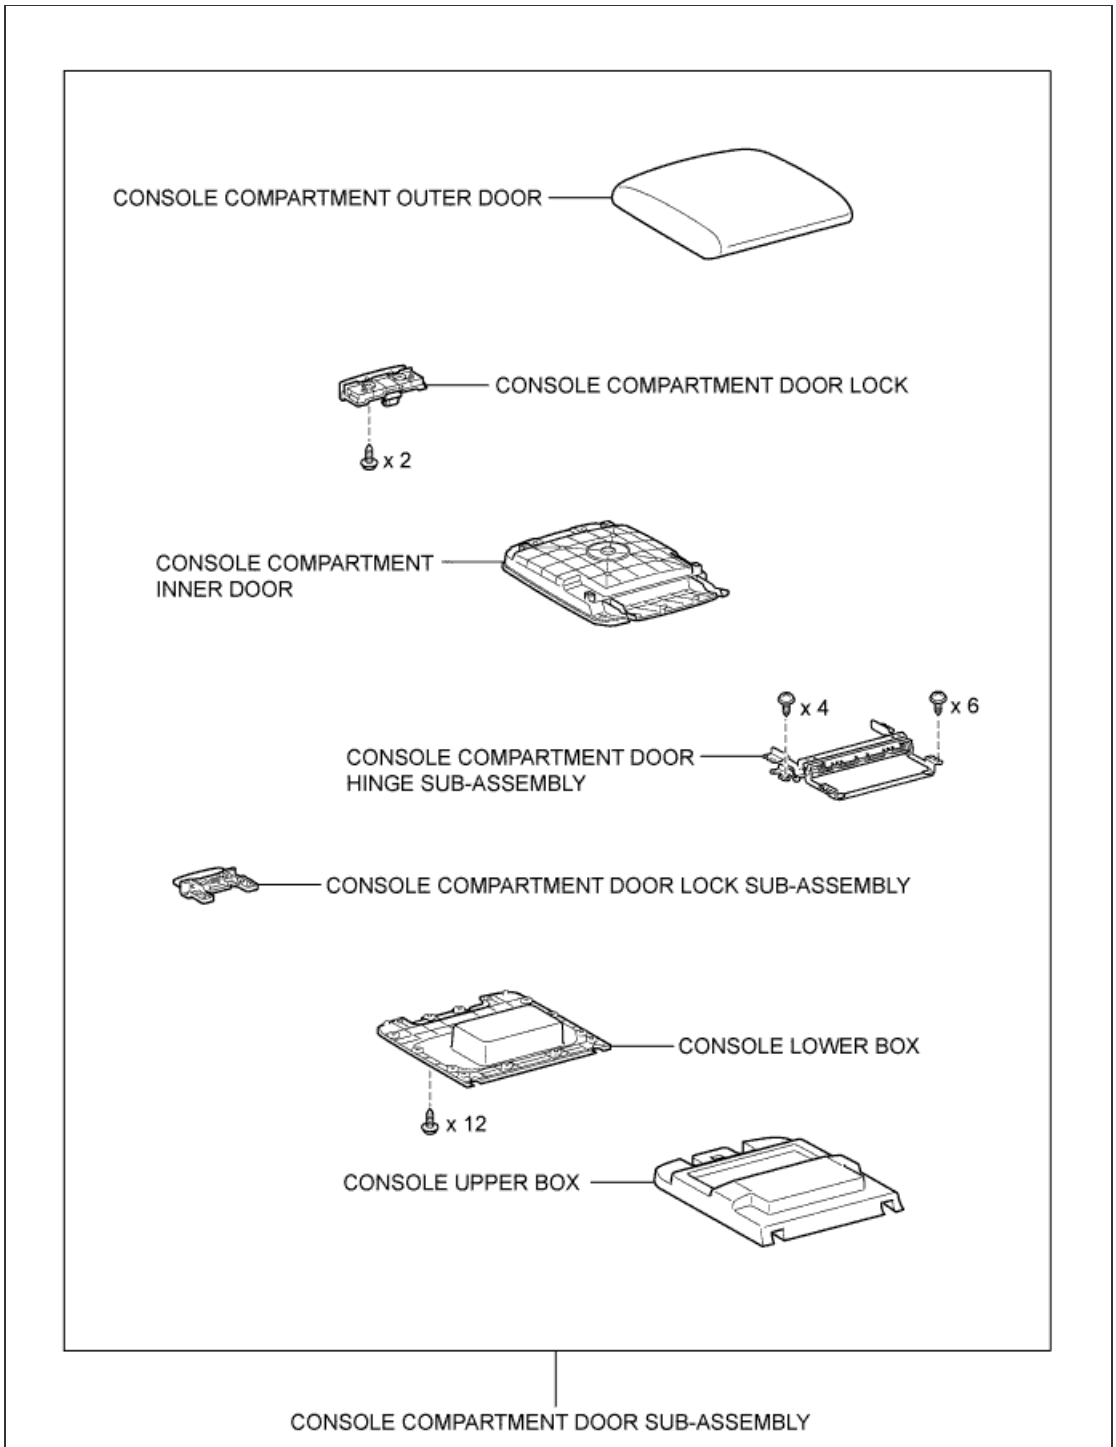
CONSOLE COMPARTMENT OUTER DOOR
CONSOLE COMPARTMENT DOOR LOCK
x 2
CONSOLE COMPARTMENT
INNER DOOR
x 4
x 6
CONSOLE COMPARTMENT DOOR
HINGE SUB-ASSEMBLY
CONSOLE COMPARTMENT DOOR LOCK SUB-ASSEMBLY
CONSOLE LOWER BOX
x 12
CONSOLE UPPER BOX
CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY

T

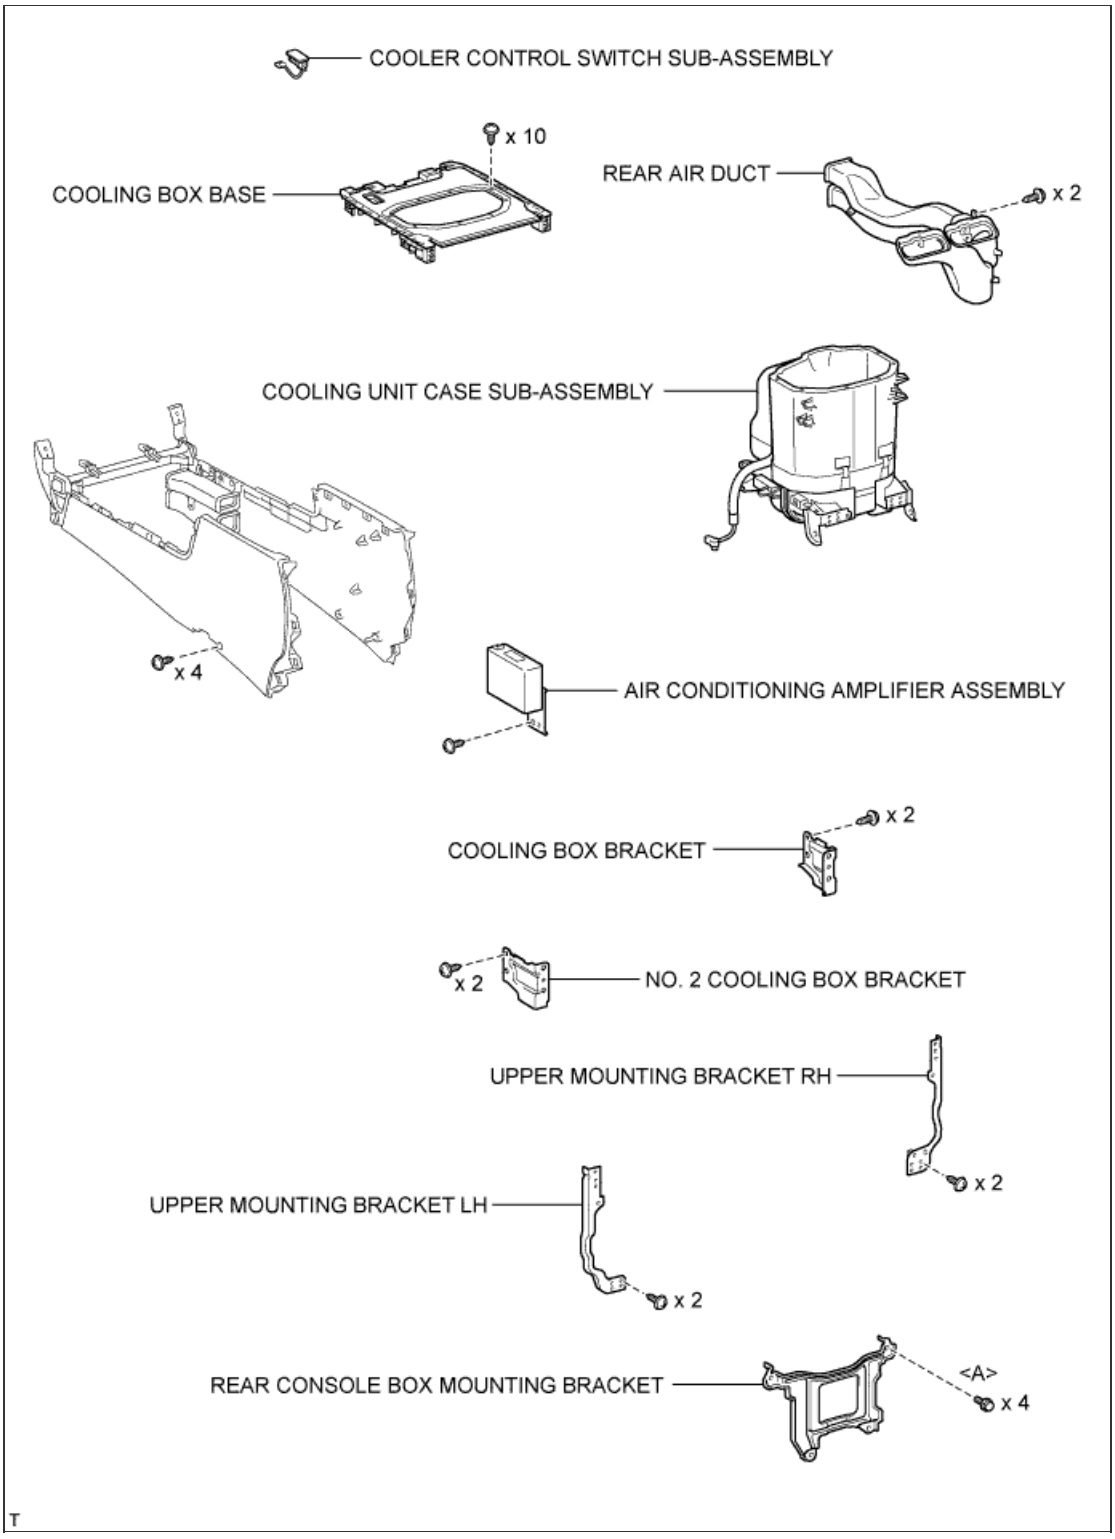
COOLER CONTROL SWITCH SUB-ASSEMBLY
x 10
COOLING BOX BASE
REAR AIR DUCT
x 2
COOLING UNIT CASE SUB-ASSEMBLY
x 4
AIR CONDITIONING AMPLIFIER ASSEMBLY
x 2
COOLING BOX BRACKET
x 2
NO. 2 COOLING BOX BRACKET
UPPER MOUNTING BRACKET RH
x 2
UPPER MOUNTING BRACKET LH
x 2
REAR CONSOLE BOX MOUNTING BRACKET
<A>
x 4
T

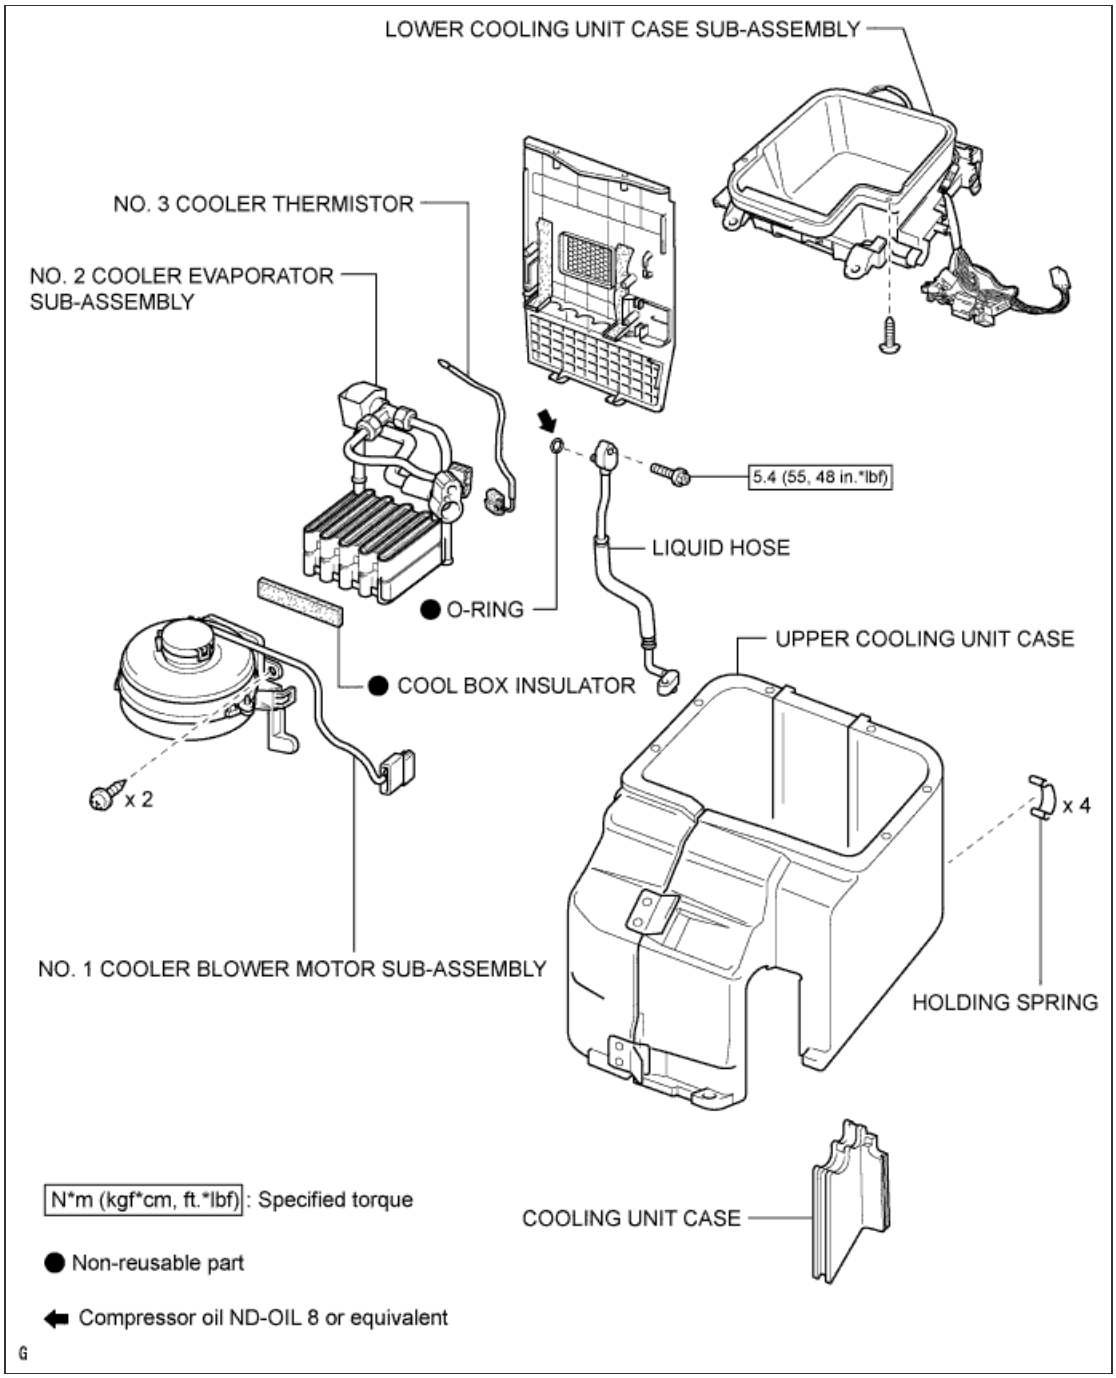
LOWER COOLING UNIT CASE SUB-ASSEMBLY
NO. 3 COOLER THERMISTOR
NO. 2 COOLER EVAPORATOR SUB-ASSEMBLY
5.4 (55, 48 in.*lbf)
LIQUID HOSE
O-RING
UPPER COOLING UNIT CASE
COOL BOX INSULATOR
x 2
x 4
NO. 1 COOLER BLOWER MOTOR SUB-ASSEMBLY
HOLDING SPRING
COOLING UNIT CASE
N*m (kgf*cm, ft.*lbf): Specified torque
Non-reusable part
Compressor oil ND-OIL 8 or equivalent
G

for Preparation Click here

1. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

2. REMOVE FRONT SEAT ASSEMBLY LH (for Power Seat)

a. Remove the front seat assembly LH (Click here).


3. REMOVE FRONT SEAT ASSEMBLY LH (for Manual Seat)

a. Remove the front seat assembly LH (Click here).

4. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

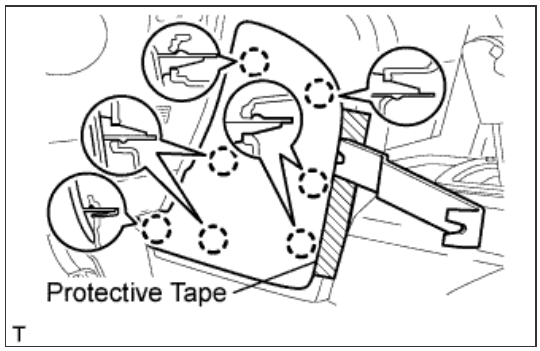


5. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

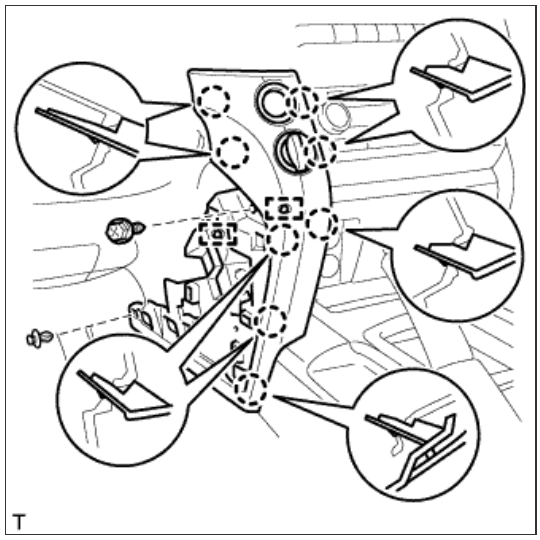

6. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




7. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

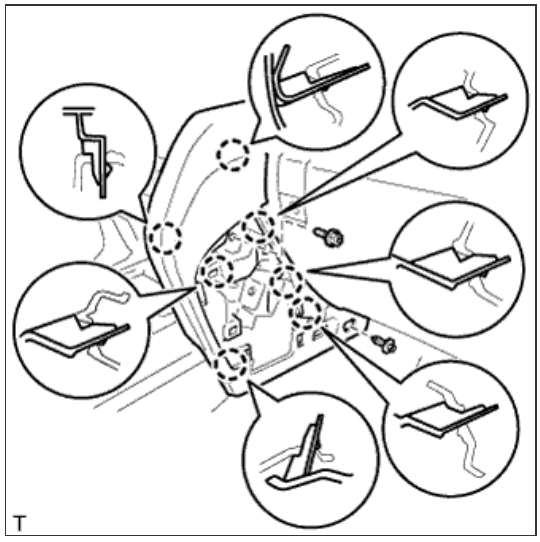

8. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


a. Twist the shift lever knob in the direction indicated by the arrow and remove it.

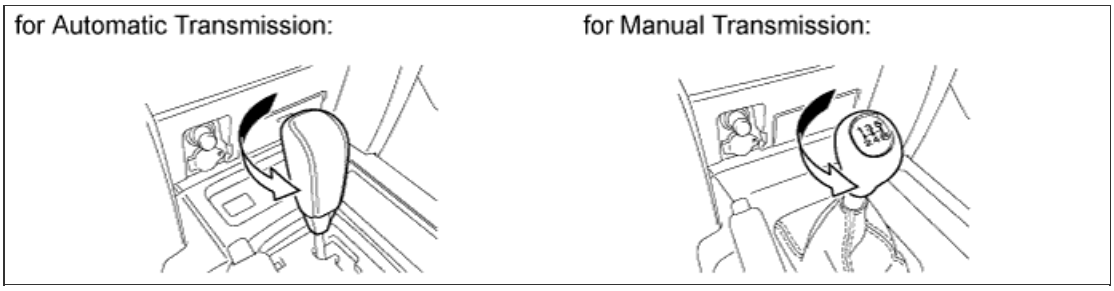

9. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 7 claws.

b. Disconnect the connectors and remove the panel.

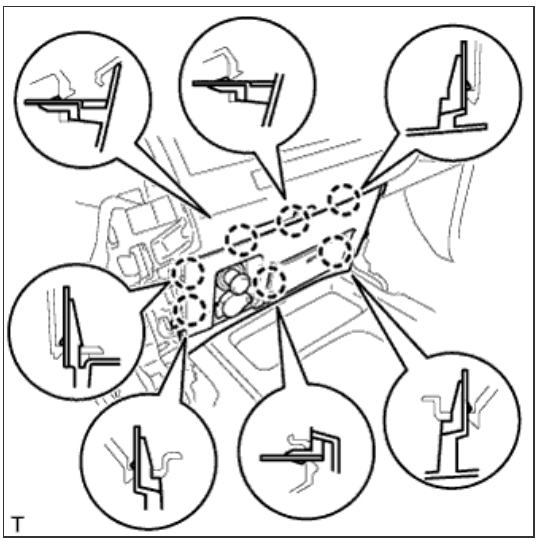


10. REMOVE REAR UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 9 claws and remove the panel.

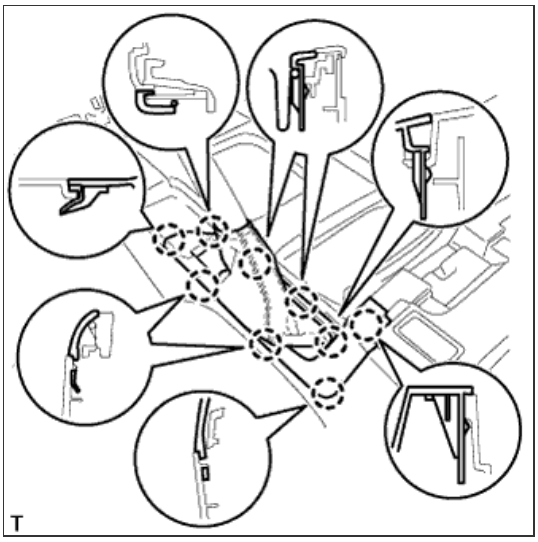

11. REMOVE CONSOLE CUP HOLDER BOX SUB-ASSEMBLY


a. Detach the 4 claws and remove the box.

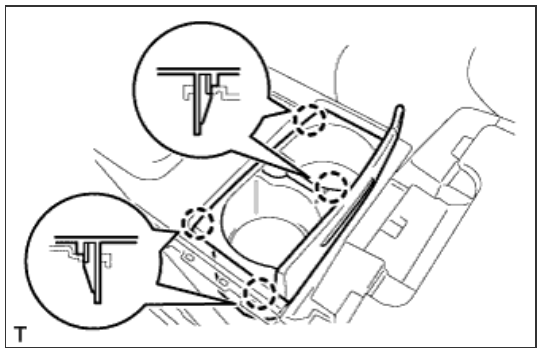

12. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Detach the 14 claws.

b. Disconnect the connectors and remove the console panel.

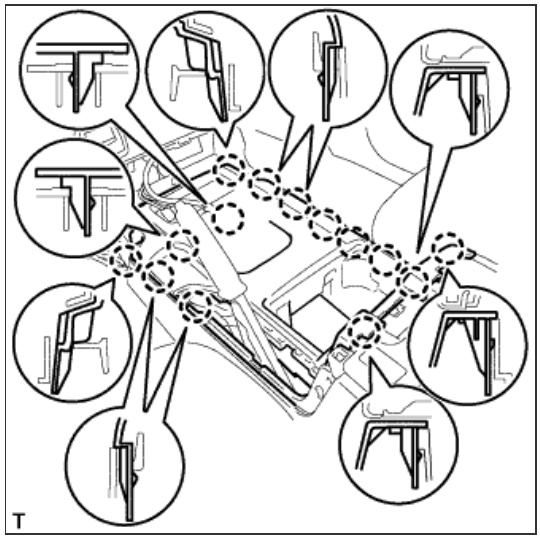

13. REMOVE NO. 1 COOLER COVER

a. Detach the clamp on the lower part of the cooler cover, and then pull the cooler cover upward to remove it.

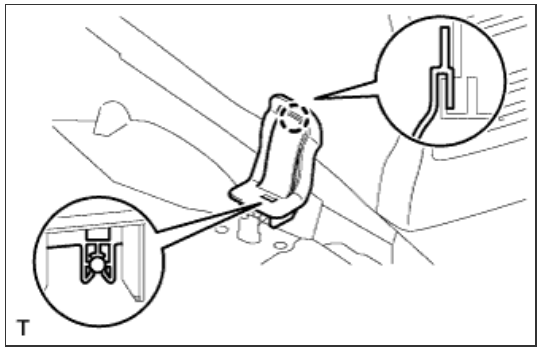


14. REMOVE REAR CONSOLE END PANEL SUB-ASSEMBLY


a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 8 claws.

c. Remove the end panel and disconnect the connectors and 2 clamps.

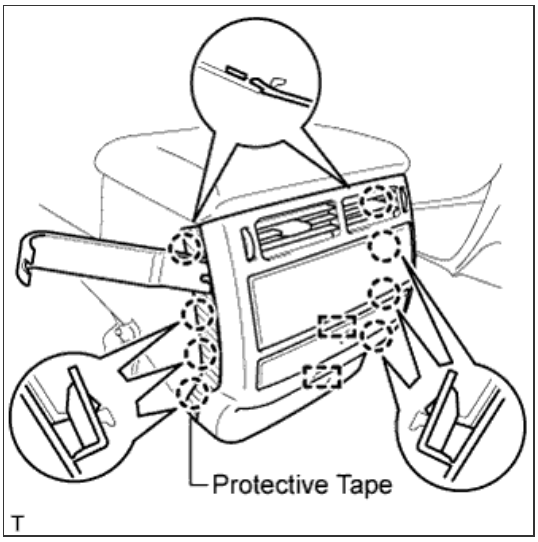

15. REMOVE COOLING BOX ASSEMBLY

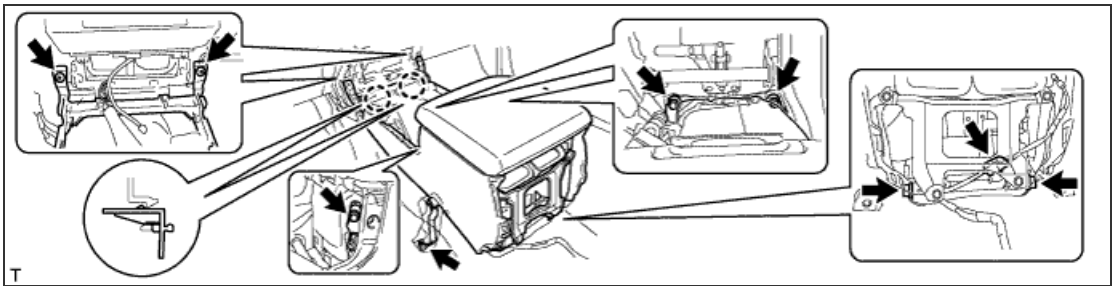

a. Remove the 4 bolts and 2 screws.

b. Remove the 2 bolts and disconnect the 2 cooler pipes.

c. Remove the 2 O-rings from the cooler pipes.

d. Disconnect the connector.

e. Detach the 2 claws and remove the cooling box.

for Preparation Click here

1. RECOVER REFRIGERANT FROM REFRIGERATION SYSTEM

a. Start the engine.

b. Turn the A/C switch on.

c. Operate the cooler compressor while the engine speed is approximately 1000 rpm for 5 to 6 minutes to circulate the refrigerant and collect the compressor oil remaining in each component into the cooler compressor.

d. Stop the engine.

e. Recover the refrigerant from the A/C system using a refrigerant recovery unit.

2. REMOVE FRONT SEAT ASSEMBLY LH (for Power Seat)

a. Remove the front seat assembly LH (Click here).


3. REMOVE FRONT SEAT ASSEMBLY LH (for Manual Seat)

a. Remove the front seat assembly LH (Click here).

4. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

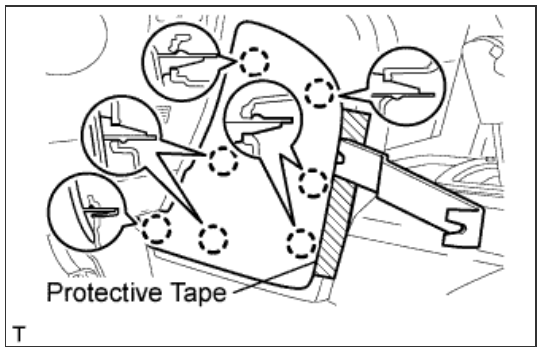


5. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

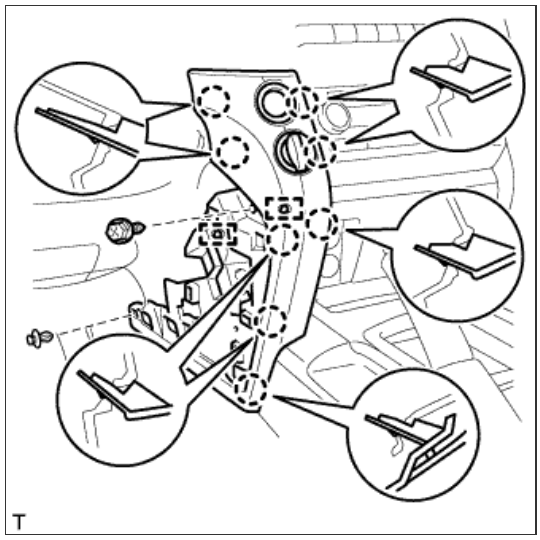

6. REMOVE NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




7. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

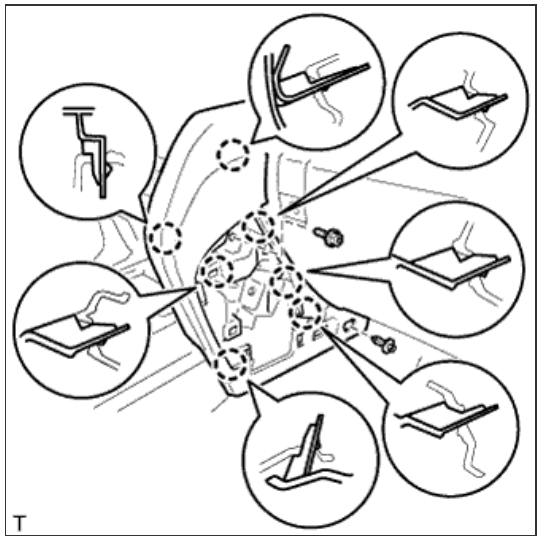

8. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


a. Twist the shift lever knob in the direction indicated by the arrow and remove it.

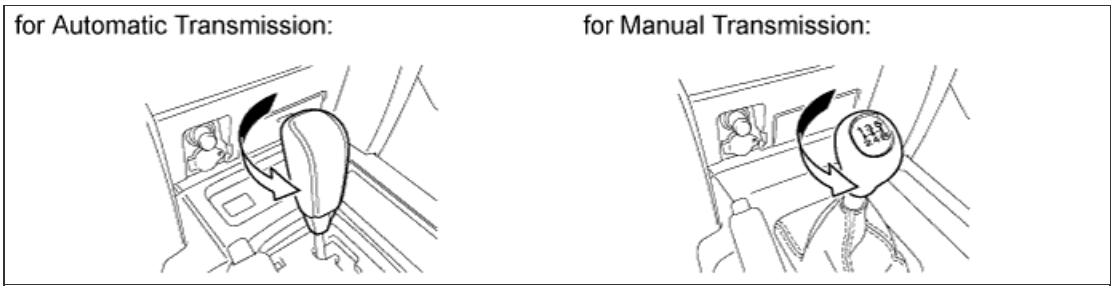

9. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 7 claws.

b. Disconnect the connectors and remove the panel.

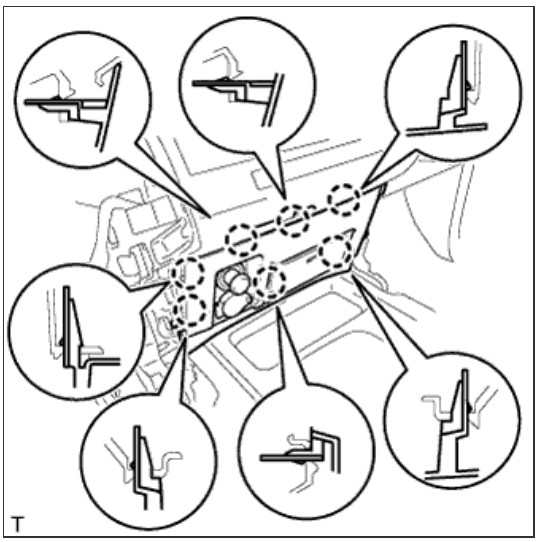


10. REMOVE REAR UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 9 claws and remove the panel.

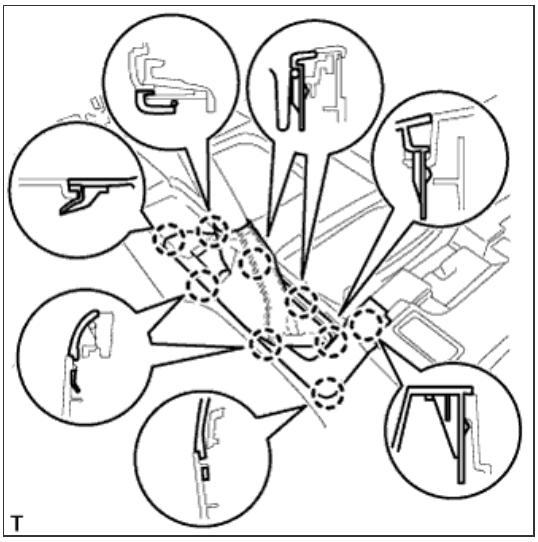

11. REMOVE CONSOLE CUP HOLDER BOX SUB-ASSEMBLY


a. Detach the 4 claws and remove the box.

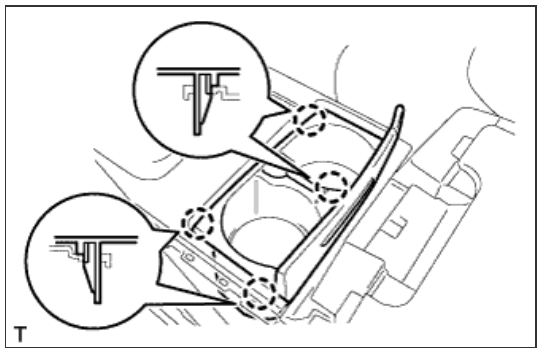

12. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Detach the 14 claws.

b. Disconnect the connectors and remove the console panel.

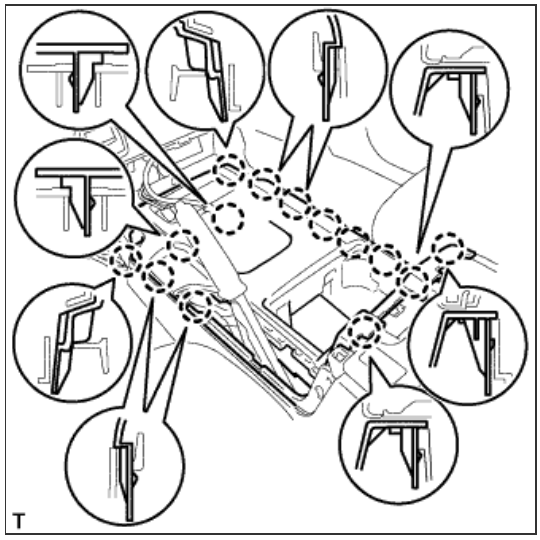

13. REMOVE NO. 1 COOLER COVER

a. Detach the clamp on the lower part of the cooler cover, and then pull the cooler cover upward to remove it.

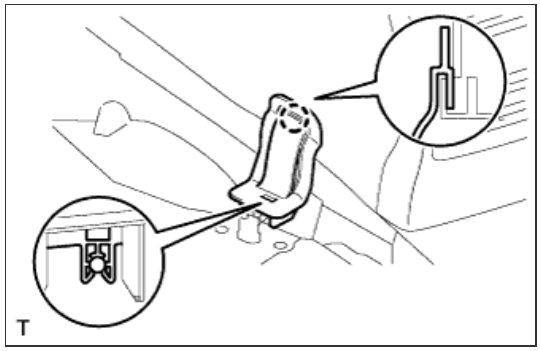


14. REMOVE REAR CONSOLE END PANEL SUB-ASSEMBLY


a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 8 claws.

c. Remove the end panel and disconnect the connectors and 2 clamps.

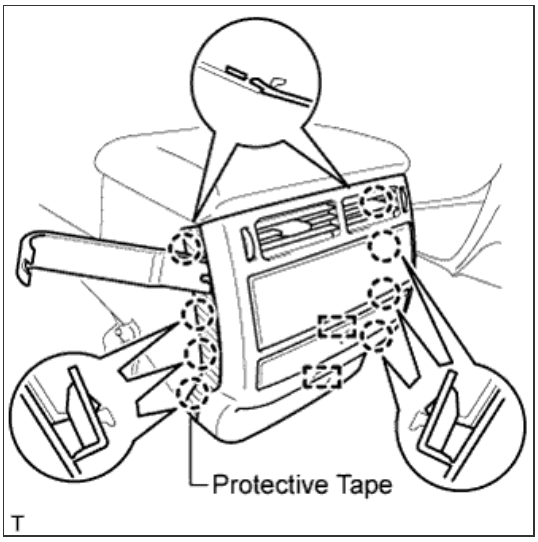

15. REMOVE COOLING BOX ASSEMBLY

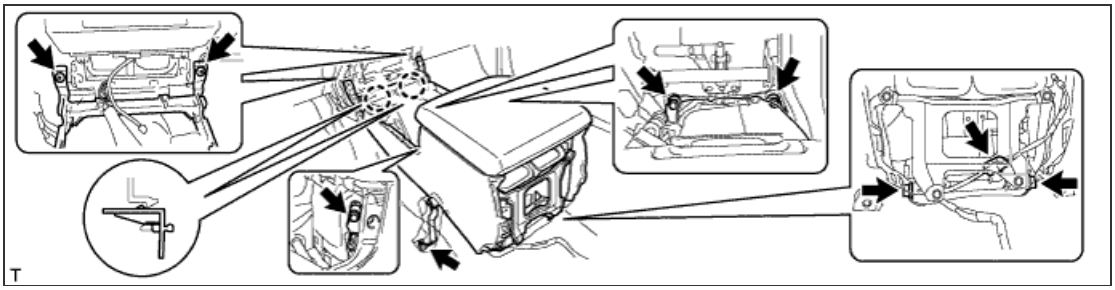

a. Remove the 4 bolts and 2 screws.

b. Remove the 2 bolts and disconnect the 2 cooler pipes.

c. Remove the 2 O-rings from the cooler pipes.

d. Disconnect the connector.


e. Detach the 2 claws and remove the cooling box.

for Preparation Click here

1. REMOVE NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (w/ Rear Air Conditioning System)

a. Remove the 4 screws.


b. Detach the 5 claws and remove the air conditioning control.

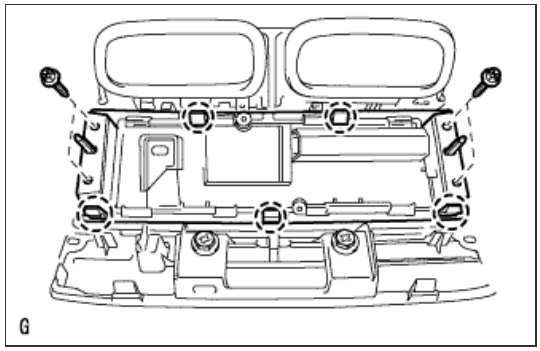

2. REMOVE AIR CONDITIONING CONTROL ASSEMBLY (w/ Rear Cooler)

a. Remove the 4 screws.


b. Detach the 5 claws and remove the air conditioning control.

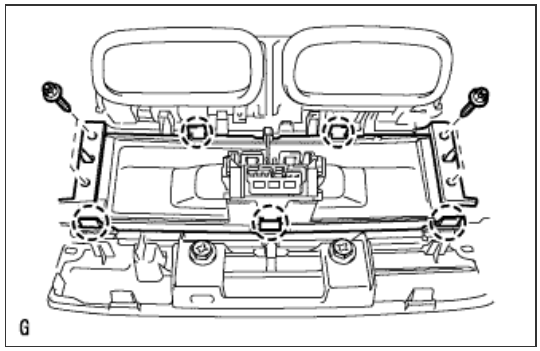

3. REMOVE REAR COOLER SWITCH HOLE COVER (w/o Rear Cooler)

a. Remove the 4 screws.


b. Detach the 5 claws and remove the hole cover.

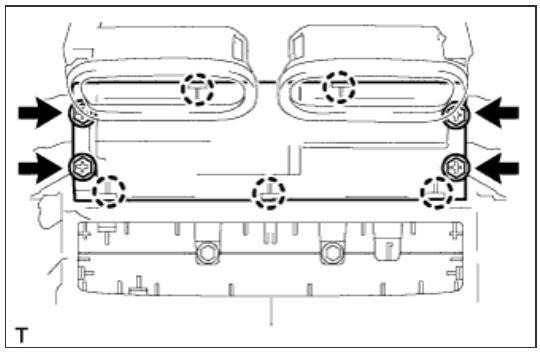

4. REMOVE INSTRUMENT PANEL HOLE COVER


a. Remove the 2 screws.

b. Detach the 7 claws and remove the hole cover.

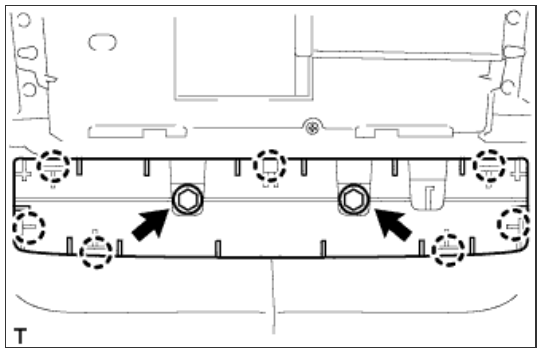


5. REMOVE REAR CONSOLE BOX MOUNTING BRACKET

a. Remove the 4 screws and bracket.

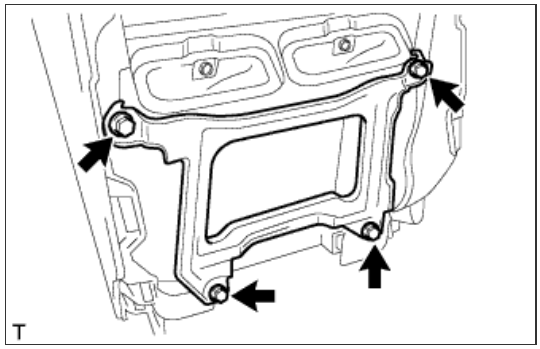


6. REMOVE CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY

a. Remove the 6 screws and door.

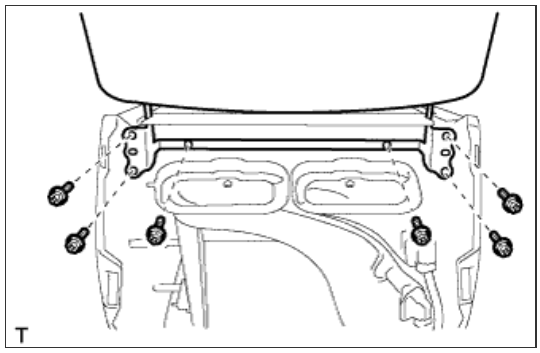


7. REMOVE CONSOLE COMPARTMENT DOOR LOCK SUB-ASSEMBLY

a. Remove the 12 screws, lower box and door lock.

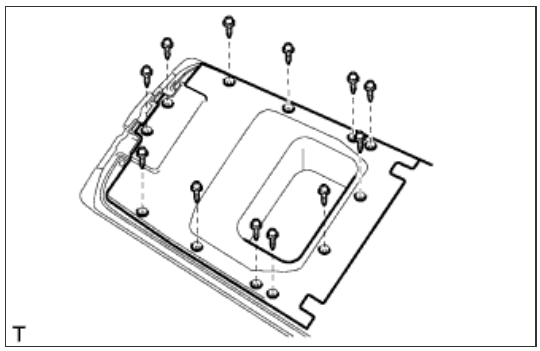


8. REMOVE CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY

a. Using a moulding remover, detach the 12 claws and remove the inner door.

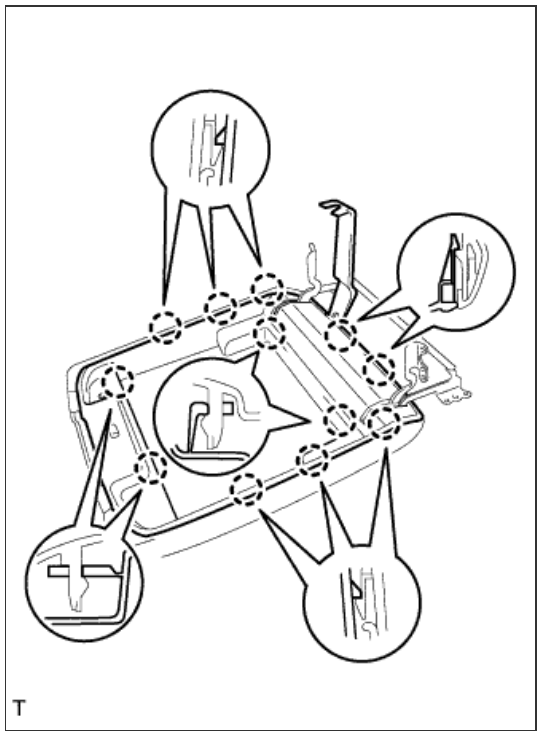


b. Remove the 4 screws and door hinge.

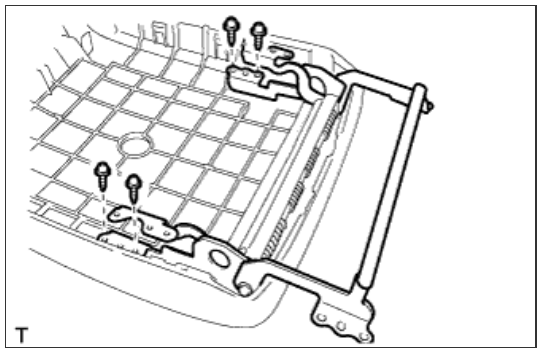

9. REMOVE CONSOLE COMPARTMENT DOOR LOCK


a. Remove the 2 screws and door lock.

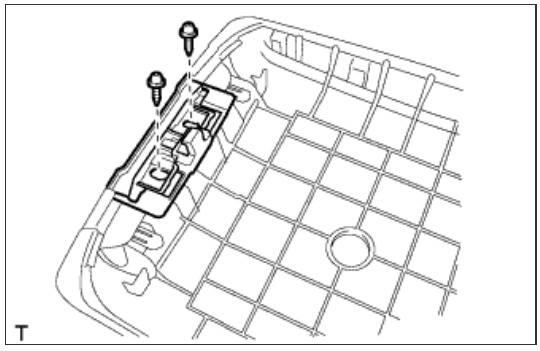

10. REMOVE COOLING BOX ASSEMBLY

a. Remove the 4 screws.


b. Detach the 10 claws and remove the cooling box.

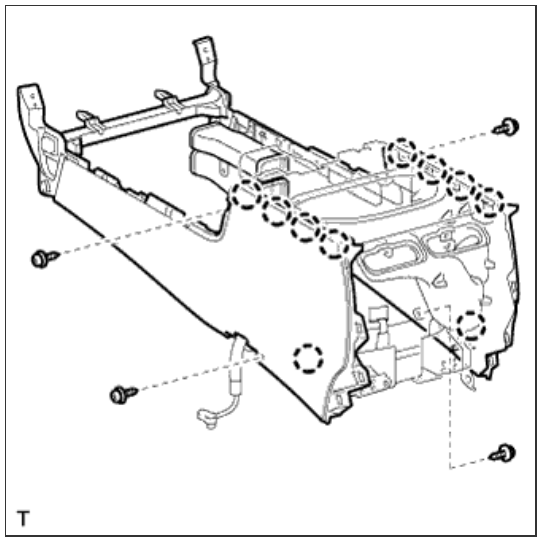

11. REMOVE AIR CONDITIONING AMPLIFIER ASSEMBLY

a. Disconnect the connector.


b. Remove the screw and amplifier.

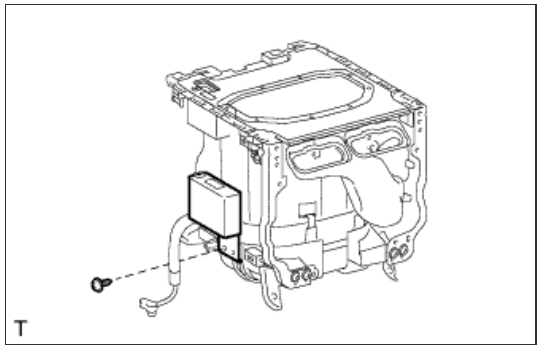

12. REMOVE COOLER CONTROL SWITCH SUB-ASSEMBLY


a. Detach the 2 claws.

b. Disconnect the connector and remove the switch.

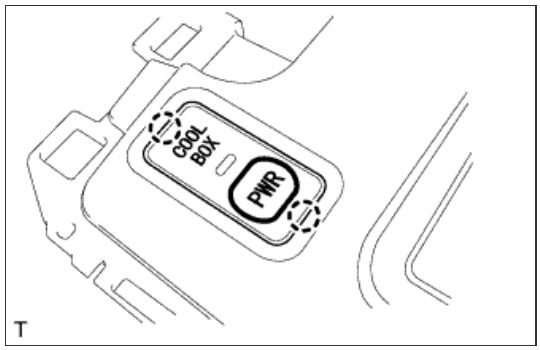


13. REMOVE NO. 2 COOLING BOX BRACKET

a. Remove the 2 screws and mounting bracket.

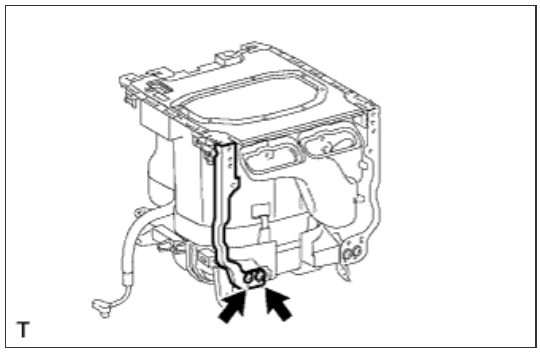


b. Remove the 2 screws and bracket.

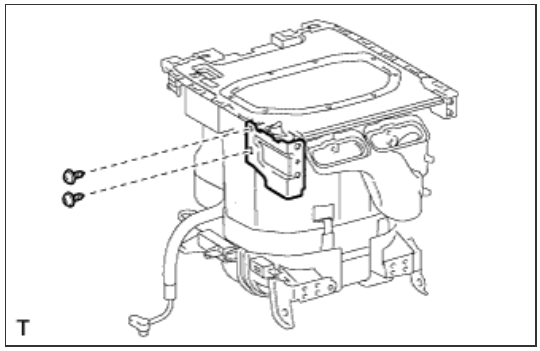


14. REMOVE COOLING BOX BRACKET

a. Remove the 2 screws and mounting bracket.

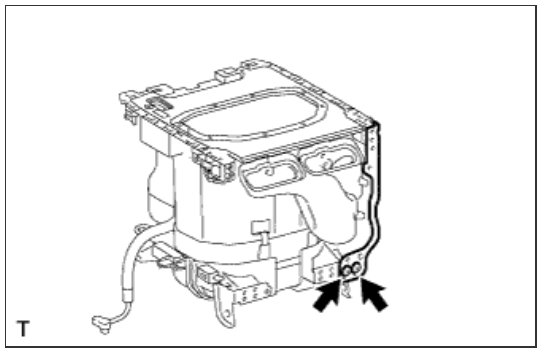


b. Remove the 2 screws and bracket.

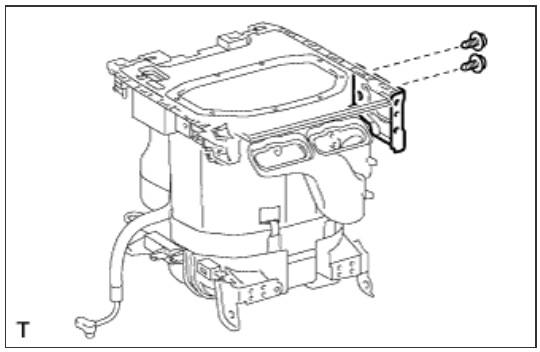


15. REMOVE COOLING BOX BASE

a. Remove the 10 screws and cooling box base.

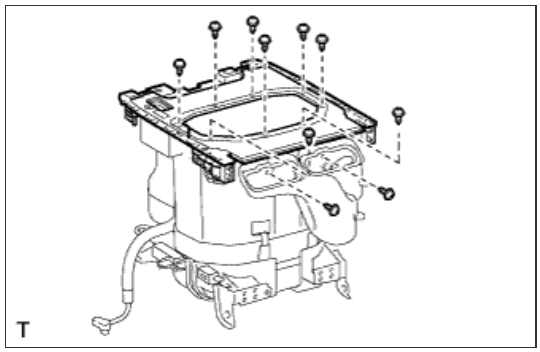

16. REMOVE COOLING UNIT CASE SUB-ASSEMBLY


a. Remove the 2 screws and air duct from the case.

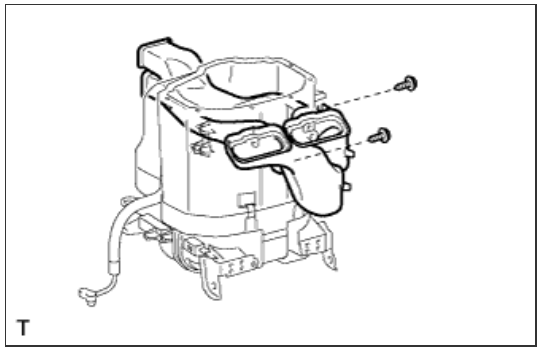

17. REMOVE LI UID HOSE

a. Remove the bolt and liquid hose.

b. Remove the O-ring from the liquid hose.

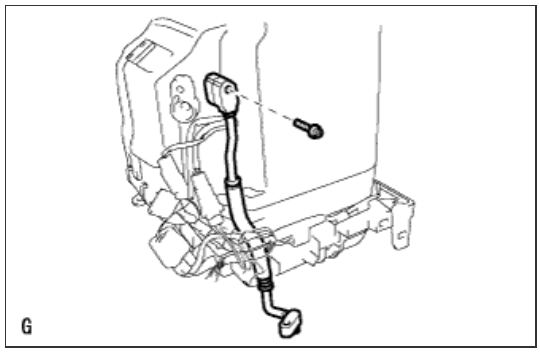


18. REMOVE LOWER COOLING UNIT CASE SUB-ASSEMBLY

a. Remove the screw.


b. Disconnect the 3 connectors.

c. Remove the 4 holding springs and lower cooling unit case.

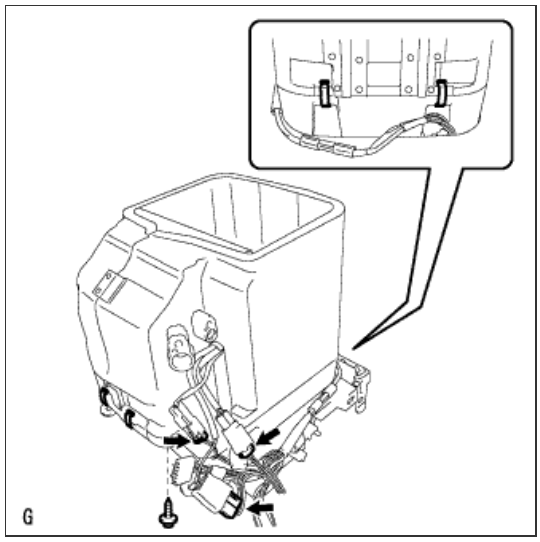


19. REMOVE UPPER COOLING UNIT CASE

a. Remove the cooling unit case.

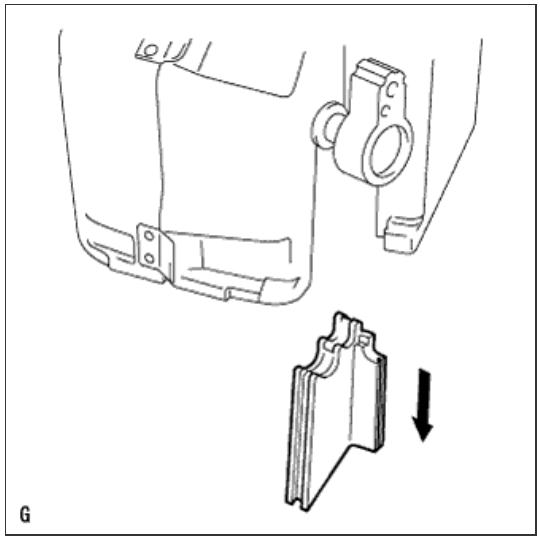


b. Detach the 2 hooks and open the case, as shown in the illustration.

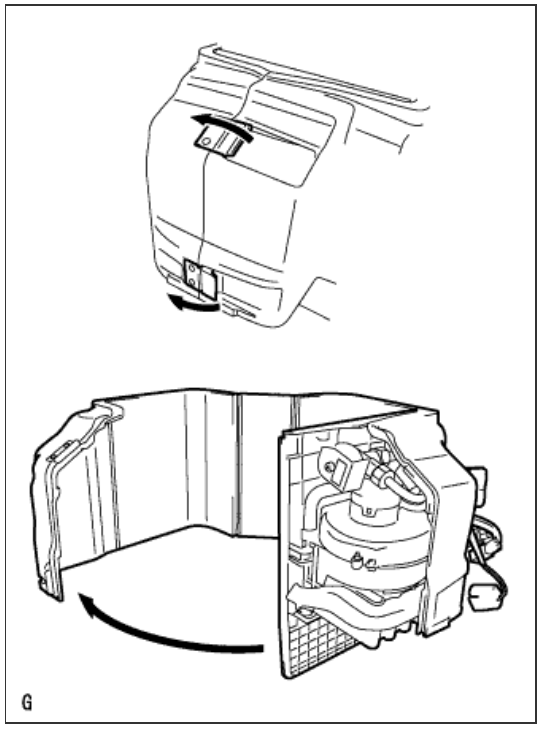


20. REMOVE NO. 3 COOLER THERMISTOR

a. Remove the cool box insulator.

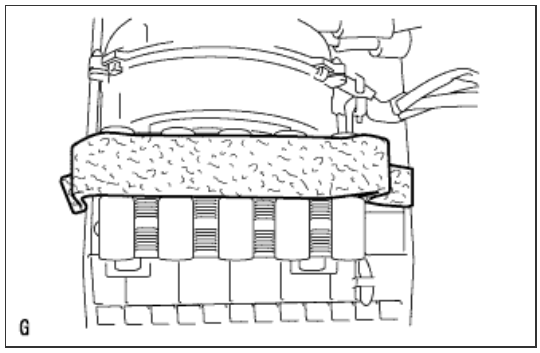


b. Remove the thermistor.

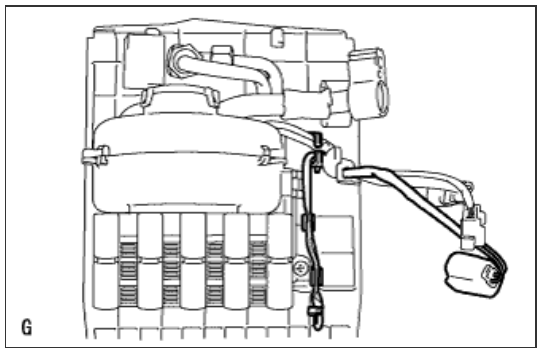

21. REMOVE NO. 1 COOLER BLOWER MOTOR SUB-ASSEMBLY


a. Remove the 2 screws.

b. Detach the 4 claws and remove the blower motor.

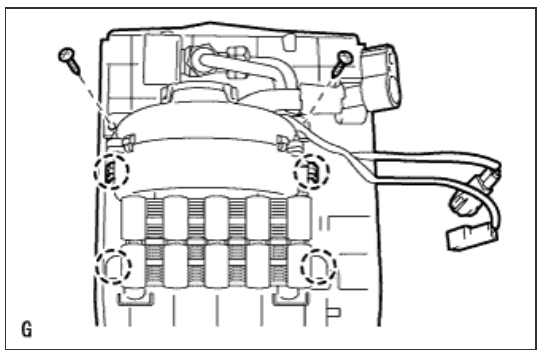

22. REMOVE NO. 2 COOLER EVAPORATOR SUB-ASSEMBLY

a. Remove the evaporator.

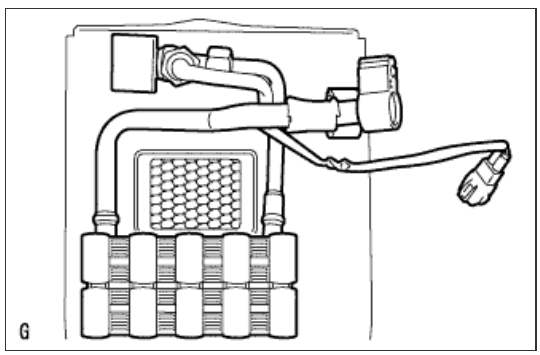

for Preparation Click here

1. INSPECT COOLER CONTROL SWITCH SUB-ASSEMBLY

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Switch Condition	Specified Condition
1 - 2	On	Below 1 Ω
1 - 2	Off	10 kΩ or higher


b. Apply battery voltage to the cooler control switch connector and check that the indicator illuminates.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 3 Battery negative (-) → Terminal 4	indicator illuminates

If the result is not as specified, replace the cooler control switch.

Component without harness connected:
(Cooler Control Switch)

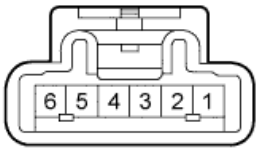

2. INSPECT NO. 1 COOLER BLOWER MOTOR SUB-ASSEMBLY

a. Apply battery voltage to the blower motor connector and check the operation of the blower motor.

OK:

Measurement Condition	Specified Condition
Battery positive (+) → Terminal 1 Battery negative (-) → Terminal 2	Motor operates smoothly

If the result is not as specified, replace the blower motor.

Component without harness connected:
(No. 1 Cooler Blower Motor)



3. INSPECT NO. 3 COOLER THERMISTOR

a. Measure the resistance according to the value(s) in the table below.

Standard Resistance:

Tester Connection	Condition	Specified Condition
1 - 2	-10 C (14)	7.40 to 9.20 kΩ
1 - 2	-5 C (23)	5.65 to 7.00 kΩ
1 - 2	0 C (32)	4.35 to 5.40 kΩ
1 - 2	5 C (41)	3.40 to 4.20 kΩ
1 - 2	10 C (50)	2.68 to 3.30 kΩ
1 - 2	15 C (59)	2.10 to 2.60 kΩ
1 - 2	20 C (68)	1.66 to 2.10 kΩ


1 - 2	25°C (77°F)	1.32 to 1.66 kΩ
	30°C (86°F)	1.05 to 1.35 kΩ

NOTICE:

- **Even slightly touching the sensor may change the resistance value. Be sure to hold the connector of the sensor.**
- **When measuring, the sensor temperature must be the same as the ambient temperature.**

HINT:


- **As the temperature increases, the resistance decreases (see the graph).**
- **If the result is not as specified, replace the cooler thermistor.**

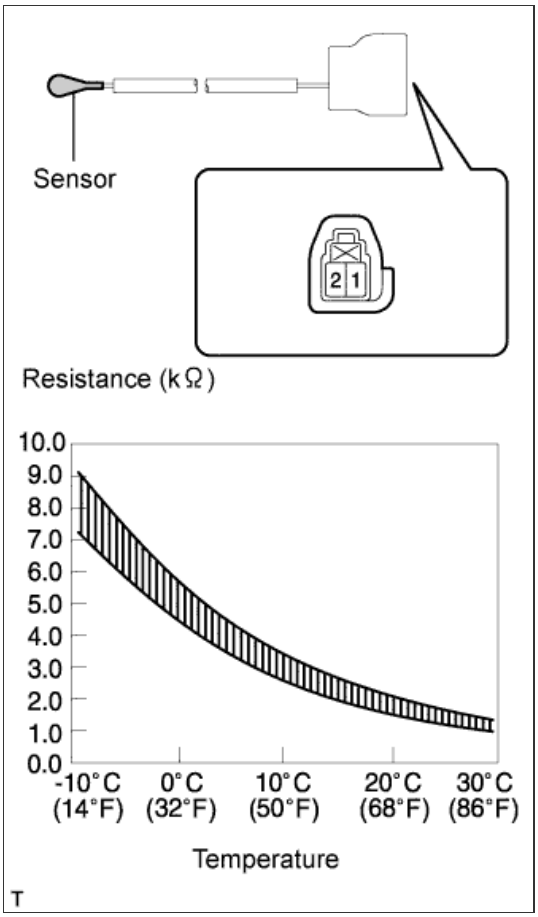

for Preparation Click here

1. INSTALL NO. 2 COOLER EVAPORATOR SUB-ASSEMBLY


a. Install the evaporator.

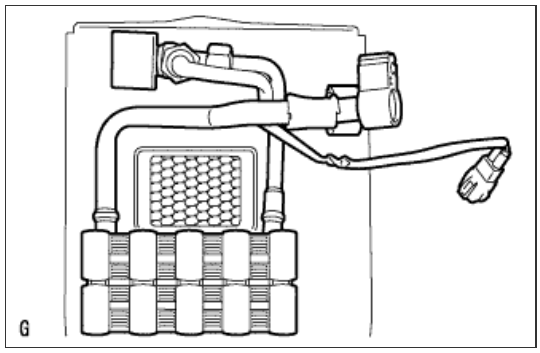

2. INSTALL NO. 1 COOLER BLOWER MOTOR SUB-ASSEMBLY


a. Attach the 4 claws to install the blower motor.

b. Install the 2 screws.

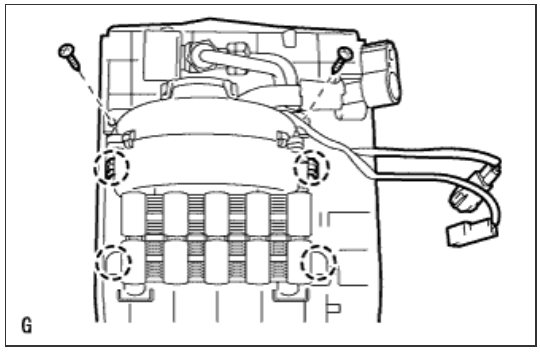


3. INSTALL NO. 3 COOLER THERMISTOR

a. Install the thermistor.

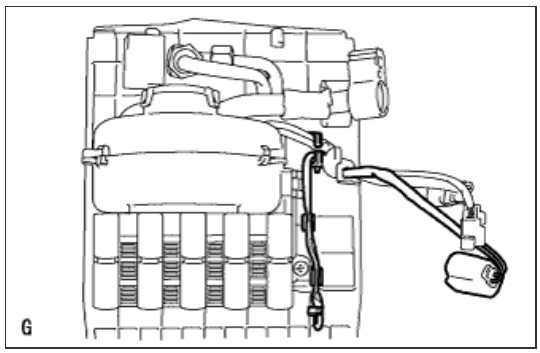


b. Install a new cool box insulator, as shown in the illustration.

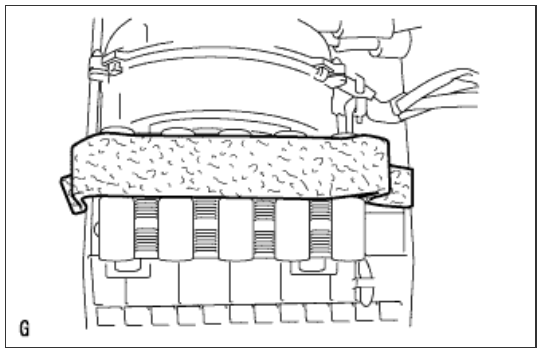


4. INSTALL UPPER COOLING UNIT CASE

a. Attach the 2 hooks and close the case, as shown in the illustration.

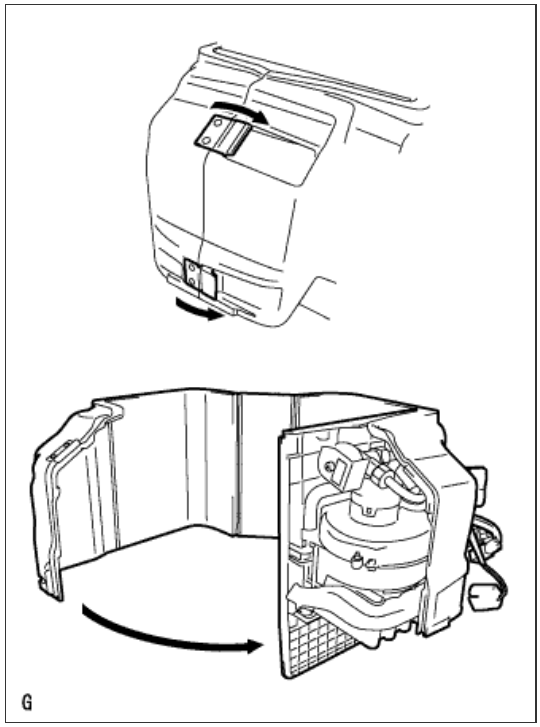

b. Install the cooling unit case.

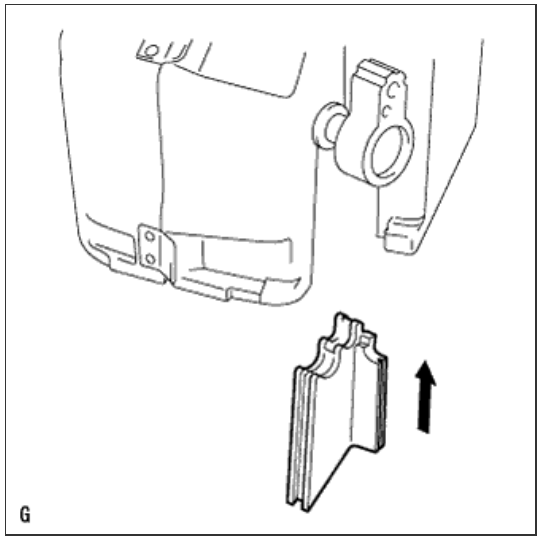


5. INSTALL LOWER COOLING UNIT CASE SUB-ASSEMBLY

a. Install the lower cooling unit case with the 4 holding springs.

b. Connect the 3 connectors.

c. Install the screw.

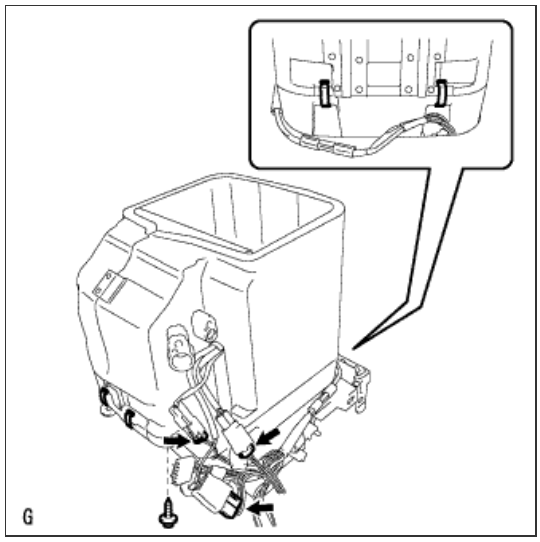

6. INSTALL LIQUID HOSE


a. Sufficiently apply compressor oil to a new O-ring and the fitting surface of the cooler evaporator.

Compressor oil:
ND-OIL 8 or equivalent

b. Install the O-ring on the liquid hose.


c. Install the liquid hose to the evaporator with the bolt.

Torque:
5.4 N m 55 kgf cm , 48 in. lbf

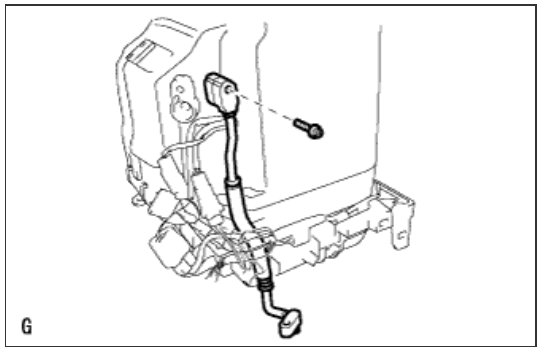


. INSTALL COOLING UNIT CASE SUB-ASSEMBLY

a. Install the air duct to the case with the 2 screws.

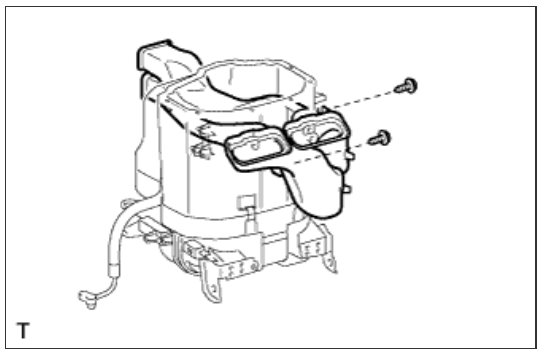


8. INSTALL COOLING BOX BASE

a. Install the cooling box base with the 10 screws.

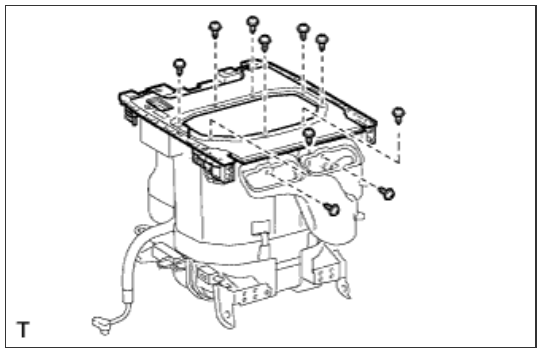


9. INSTALL COOLING BOX BRACKET

a. Install the bracket with the 2 screws.

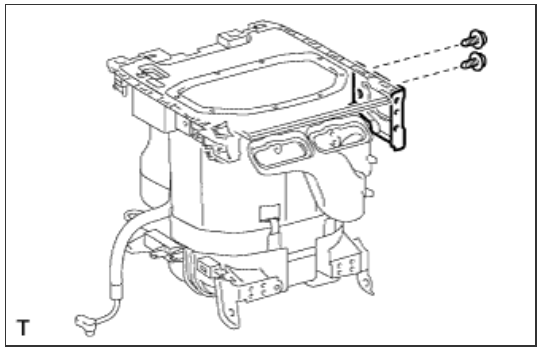


b. Install the mounting bracket with the 2 screws.

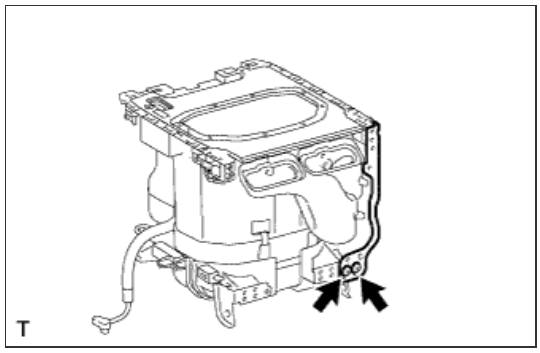


10. INSTALL NO. 2 COOLING BOX BRACKET

a. Install the bracket with the 2 screws.

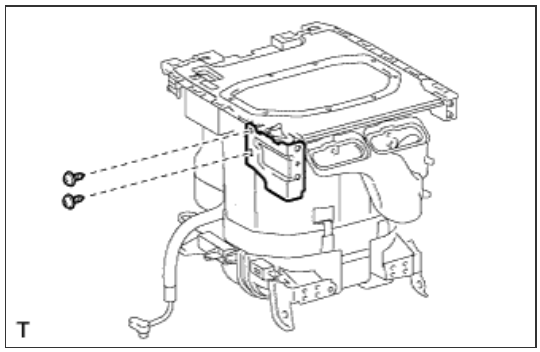


b. Install the mounting bracket with the 2 screws.

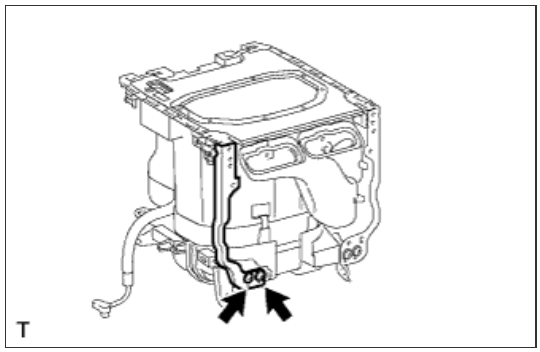

11. INSTALL COOLER CONTROL SWITCH SUB-ASSEMBLY

a. Connect the connector.


b. Attach the 2 claws to install the switch.

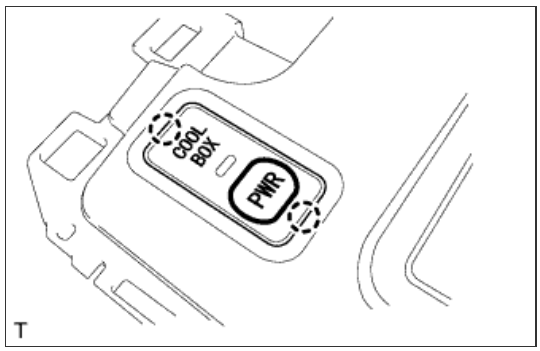

12. INSTALL AIR CONDITIONING AMPLIFIER ASSEMBLY

a. Install the amplifier with the screw.


b. Connect the connector.

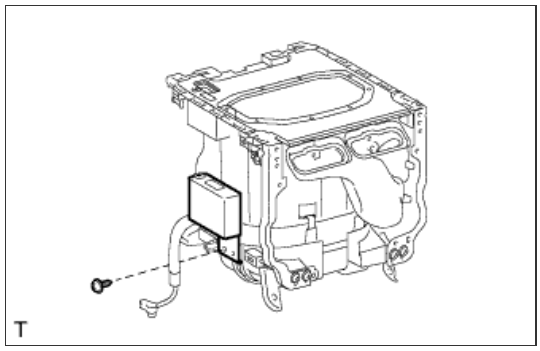

13. INSTALL COOLING BOX ASSEMBLY


a. Attach the 10 claws to install the cooling box.

b. Install the 4 screws.

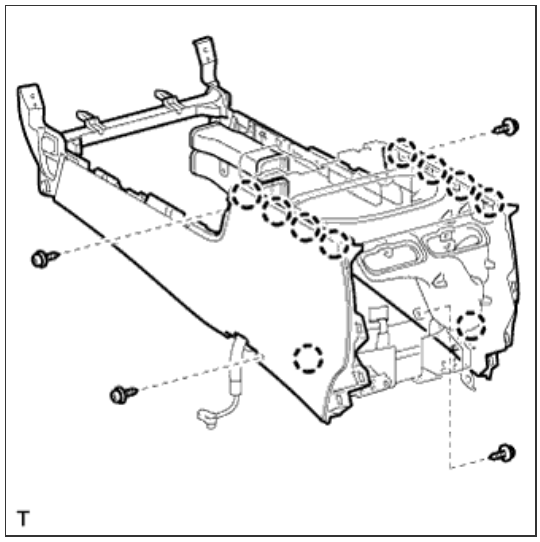


14. INSTALL CONSOLE COMPARTMENT DOOR LOCK

a. Install the door lock with the 2 screws.

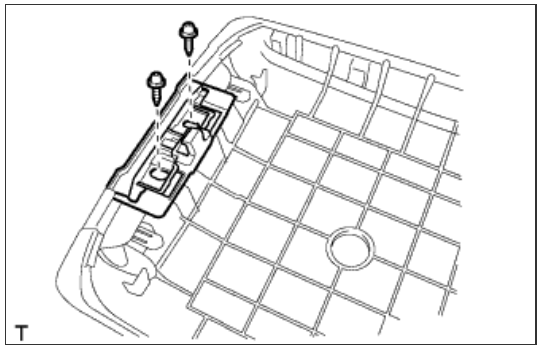


15. INSTALL CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY

a. Install the door hinge with the 4 screws.

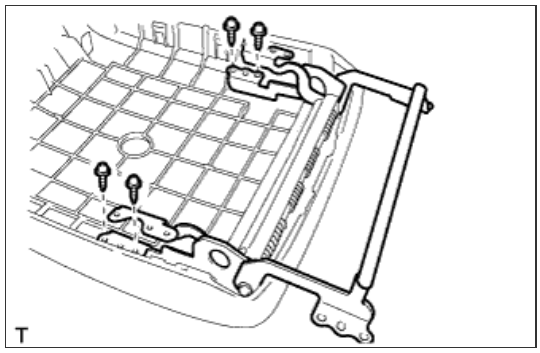


b. Attach the 12 claws to install the inner door.

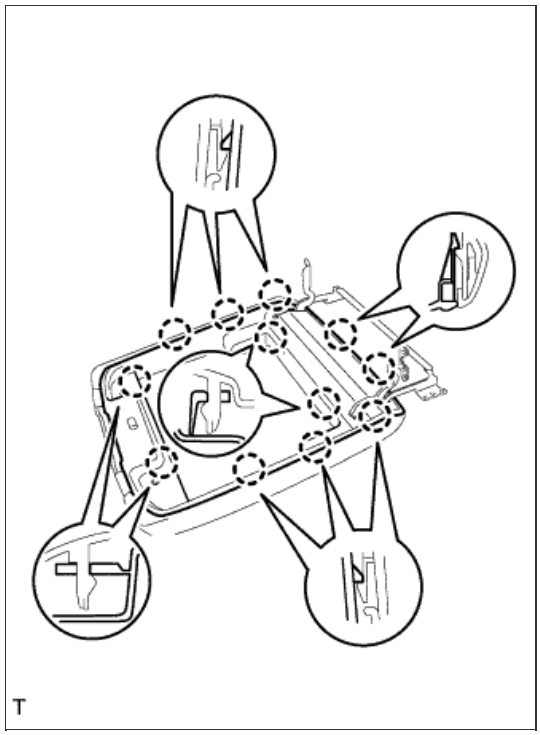


16. INSTALL CONSOLE COMPARTMENT DOOR LOCK SUB-ASSEMBLY

a. Install the door lock. Then install the lower box with the 12 screws.

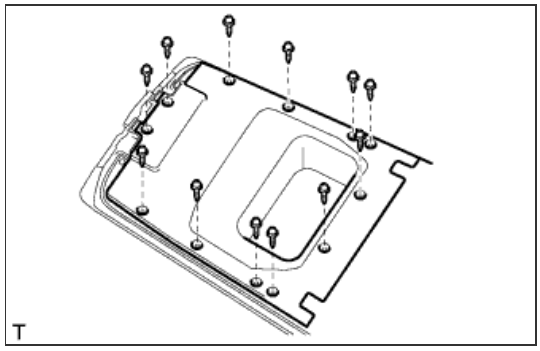


17. INSTALL CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY

a. Install the door with the 6 screws.

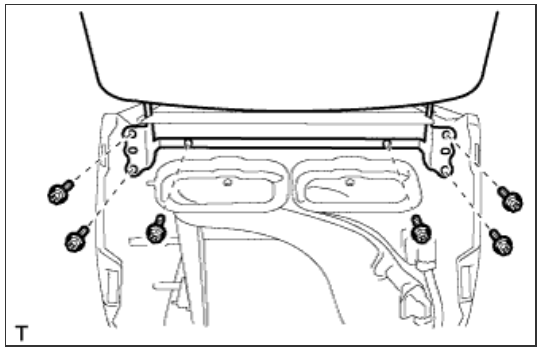

18. INSTALL REAR CONSOLE BOX MOUNTING BRACKET


a. Install the bracket with the 4 bolts.

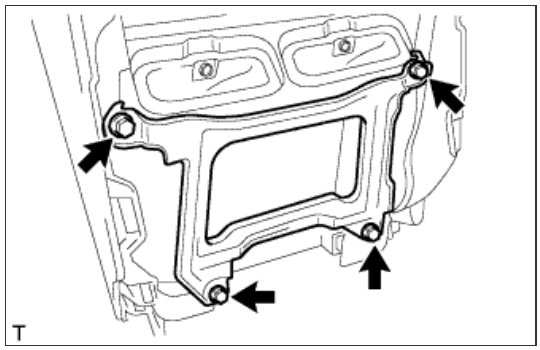

19. INSTALL INSTRUMENT PANEL HOLE COVER

a. Attach the 7 claws to install the hole cover.


b. Install the 2 screws.

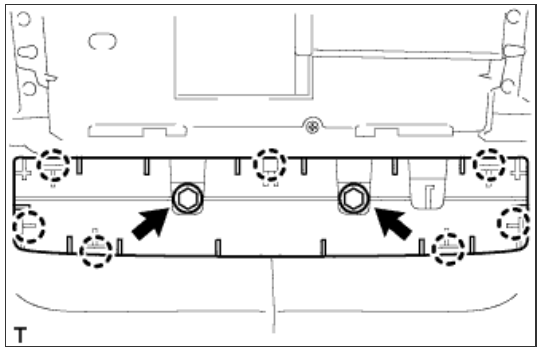

20. INSTALL REAR COOLER SWITCH HOLE COVER (w/o Rear Cooler)

a. Attach the 5 claws.


b. Install the hole cover with the 4 screws.

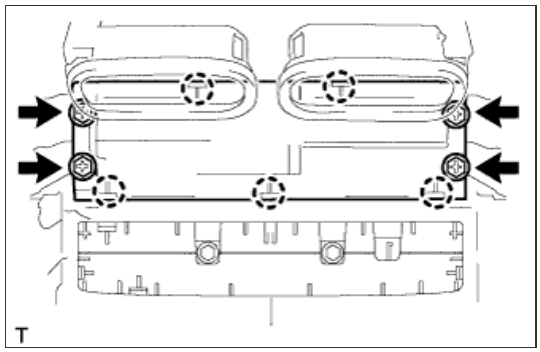

21. INSTALL AIR CONDITIONING CONTROL ASSEMBLY (w/ Rear Cooler)

a. Attach the 5 claws to install the air conditioning control.


b. Install the 4 screws.

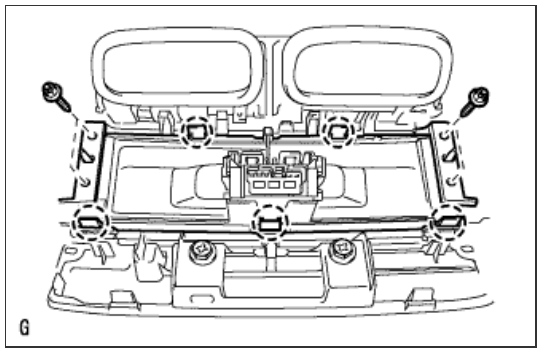

22. INSTALL NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (w/ Rear Air Con itioning S stem)

a. Attach the 5 claws to install the air conditioning control.

b. Install the 4 screws.

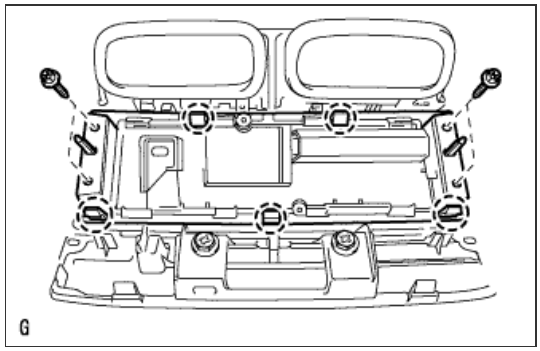


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL COOLING BOX ASSEMBLY

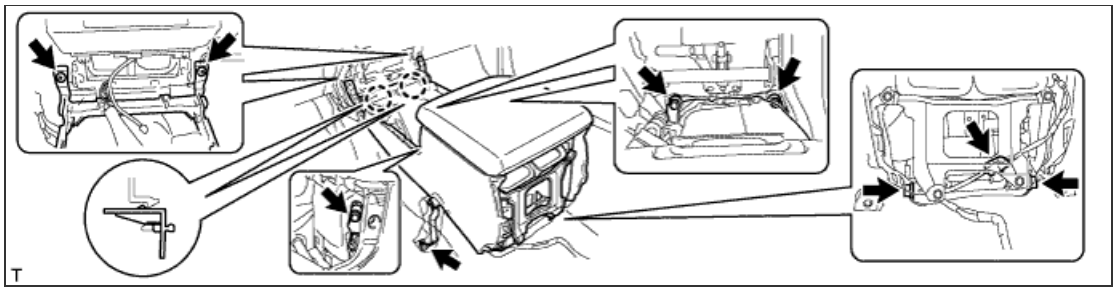

a. Attach the 2 claws.

b. Connect the connector.

c. Sufficiently apply compressor oil to 2 new O-rings.

Compressor oil:
ND-OIL 8 or equivalent

d. Install the 2 O-rings on the 2 cooler pipes.

e. Connect the 2 cooler pipes with the 2 bolts.


Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

f. Install the cooling box with the 4 bolts and 2 screws.

2. INSTALL REAR CONSOLE END PANEL SUB-ASSEMBLY


a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the end panel.

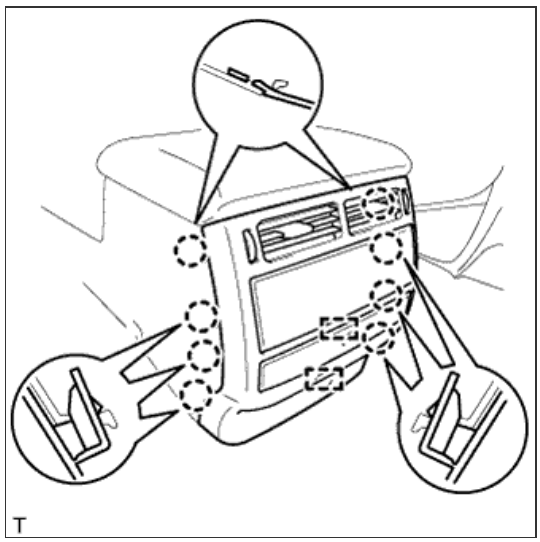

3. INSTALL NO. 1 COOLER COVER


a. Attach the claw on the upper part of the cooler cover, and then attach the clamp on the lower part of the cooler cover to install it.

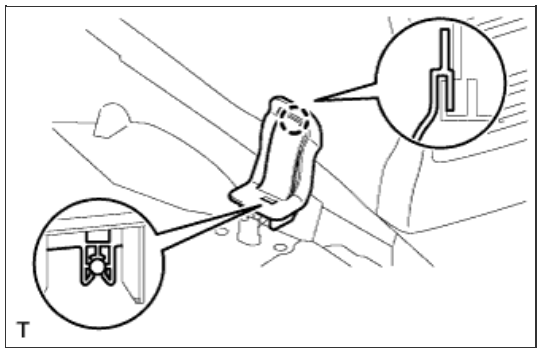

4. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 14 claws to install the console panel.

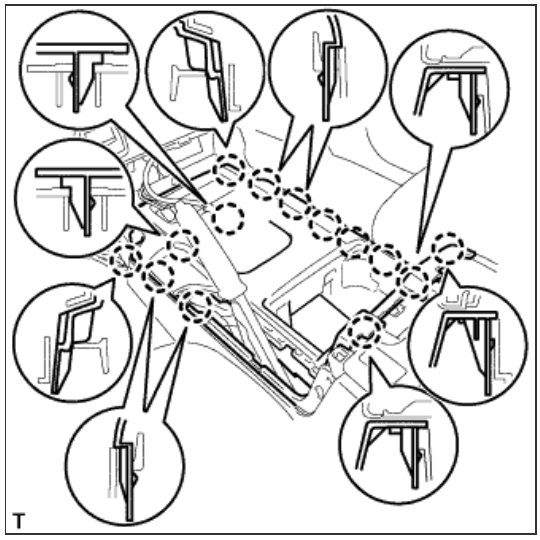


5. INSTALL CONSOLE CUP HOLDER BOX SUB-ASSEMBLY

a. Attach the 4 claws to install the box.

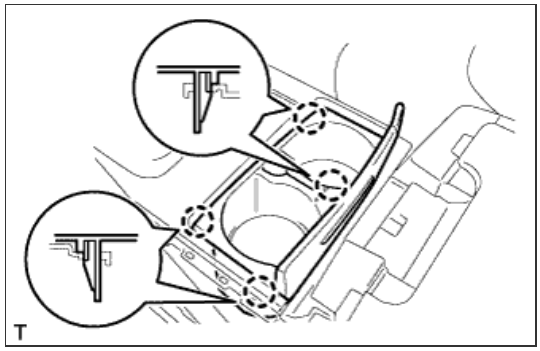

6. INSTALL REAR UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Attach the 9 claws to install the panel.

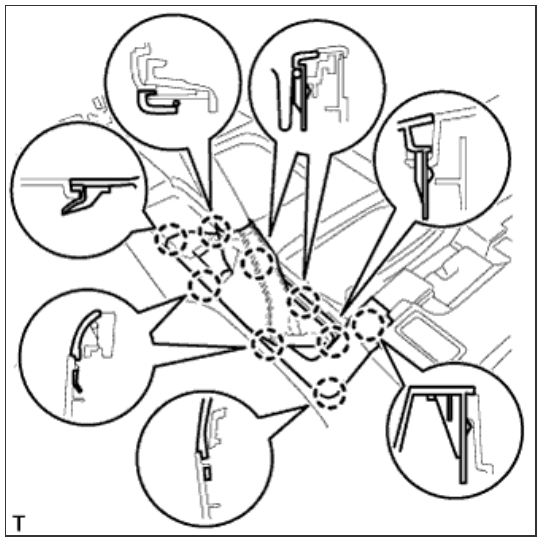

7. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 7 claws to install the panel.

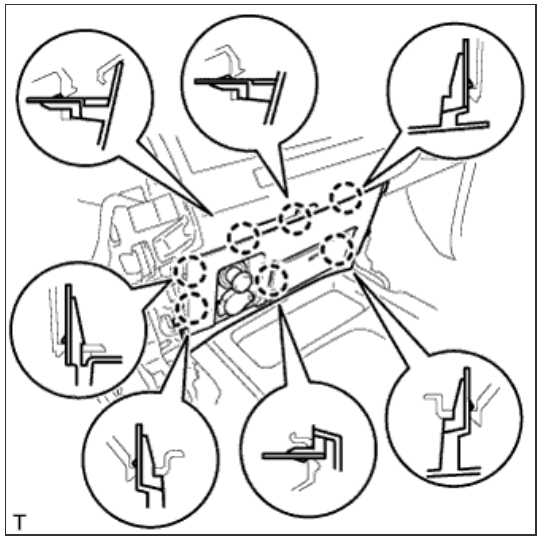

8. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

a. Install the shift lever knob and twist it in the direction indicated by the arrow.

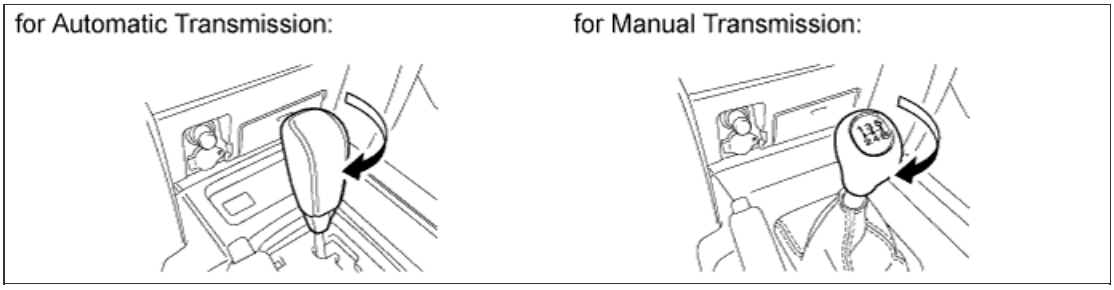


9. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

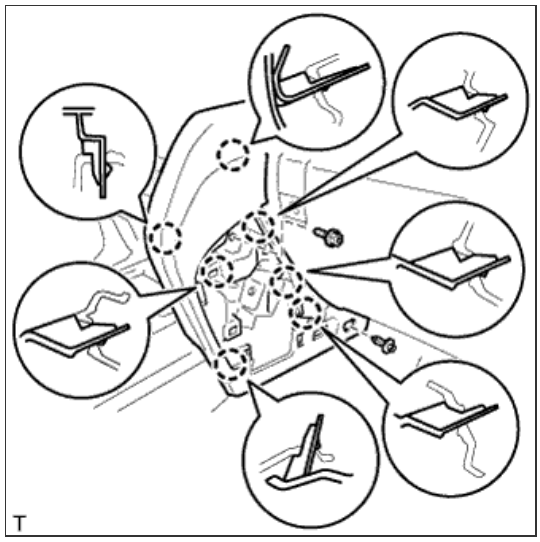

10. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

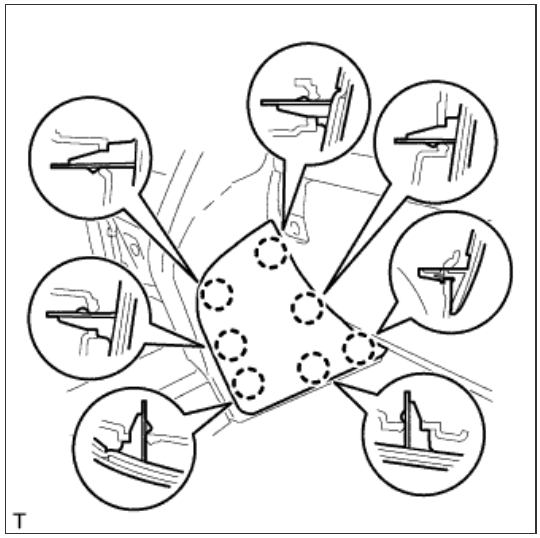


11. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

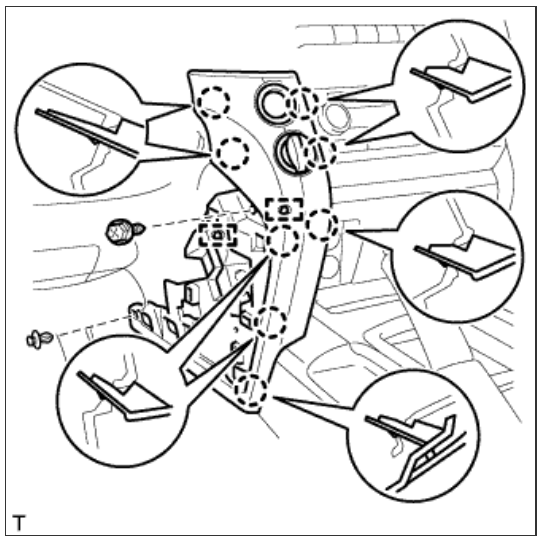

12. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

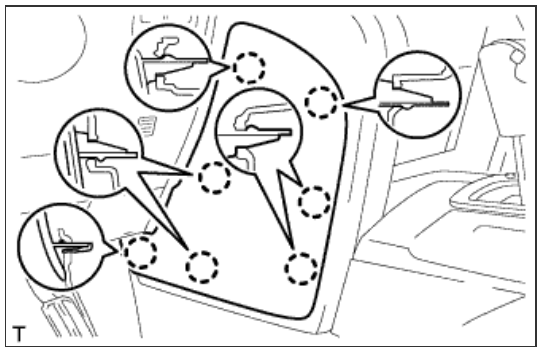

13. INSTALL FRONT SEAT ASSEMBLY LH (for Manual Seat)

a. Install the front seat assembly LH (Click here).

14. INSTALL FRONT SEAT ASSEMBLY LH (for Power Seat)

a. Install the front seat assembly LH (Click here).

15. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (134a).

Standard:

Condenser Core hickness	Air Conditioning ype	Cool Box	efrigerant Charging Amount
22 mm (0.8 in.)	w/o ear Cooler	w/ Cool Box	870 -30 g (30.7 -1.1 oz.)
		w/o Cool Box	870 -30 g (30.7 -1.1 oz.)
	w/ ear Cooler	w/ Cool Box	1010 -30 g (35.6 -1.1 oz.)
		w/o Cool Box	960 -30 g (33.9 -1.1 oz.)
16 mm (0.630 in.)	w/o ear Cooler	w/ Cool Box	770 -30 g (27.2 -1.1 oz.)
		w/o Cool Box	770 -30 g (27.2 -1.1 oz.)
	w/ ear Cooler	w/ Cool Box	970 -30 g (34.2 -1.1 oz.)
		w/o Cool Box	920 -30 g (32.5 -1.1 oz.)

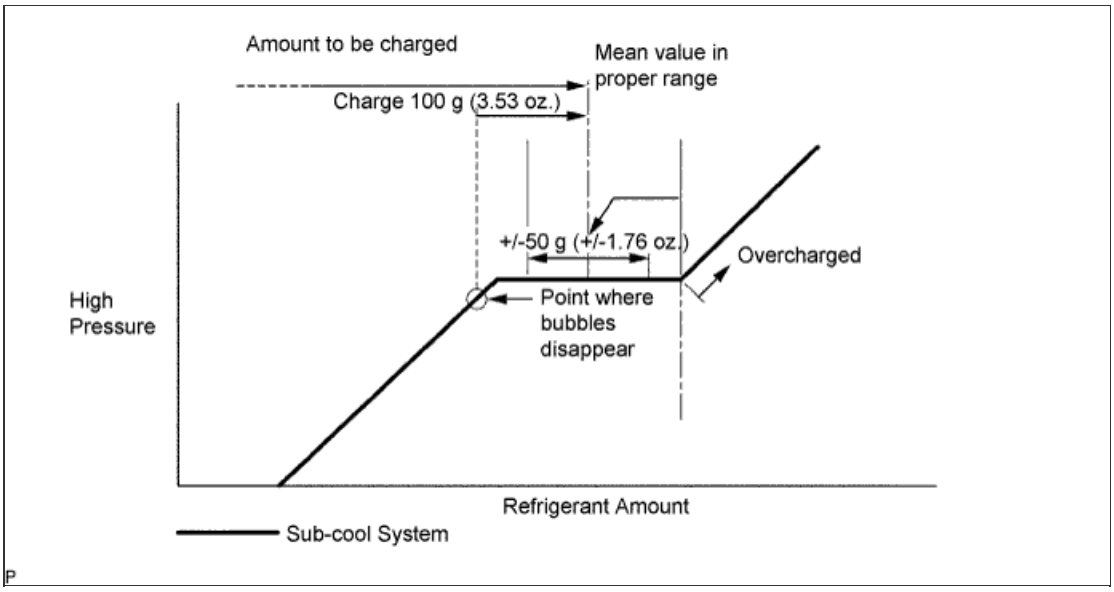

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

16. WARM UP ENGINE

a. arm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

17. CHECK FOR REFRIGERANT GAS LEAK

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- epeat the test 2 or 3 times.
- ake sure that some refrigerant remains in the refrigeration system. hen compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).

c. Using a halogen leak detector, check the refrigerant line for leakage.

d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.

e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

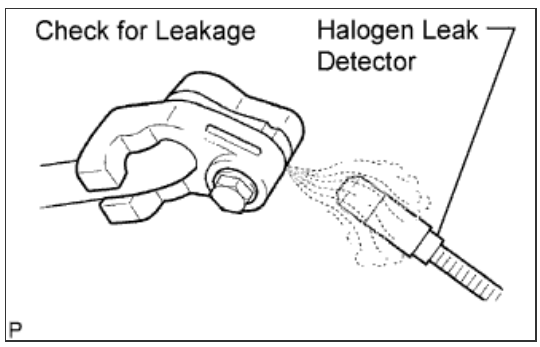


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL COOLING BOX ASSEMBLY

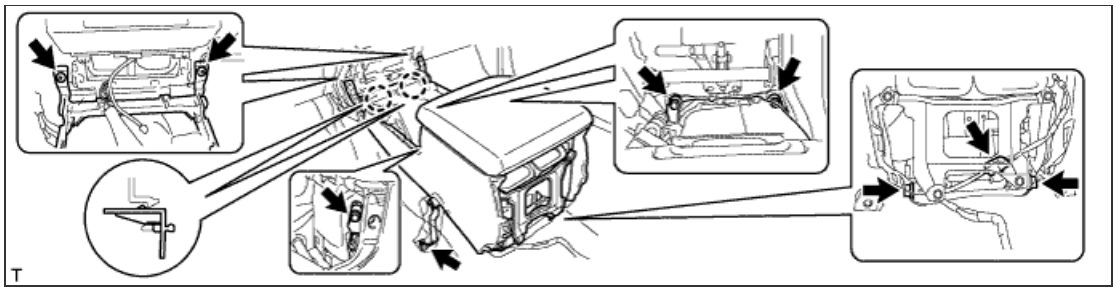

a. Attach the 2 claws.

b. Connect the connector.

c. Sufficiently apply compressor oil to 2 new O-rings.

Compressor oil:
ND-OIL 8 or equivalent

d. Install the 2 O-rings on the 2 cooler pipes.

e. Connect the 2 cooler pipes with the 2 bolts.


Torque:
9.8 N*m{ 100 kgf*cm , 87 in.*lbf }

f. Install the cooling box with the 4 bolts and 2 screws.

2. INSTALL REAR CONSOLE END PANEL SUB-ASSEMBLY


a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the end panel.

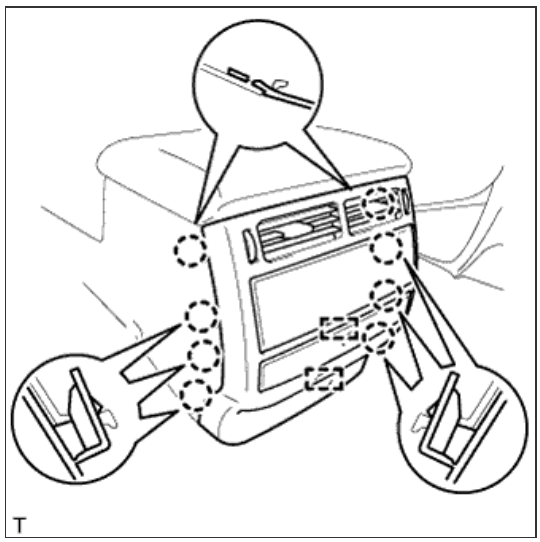

3. INSTALL NO. 1 COOLER COVER


a. Attach the claw on the upper part of the cooler cover, and then attach the clamp on the lower part of the cooler cover to install it.

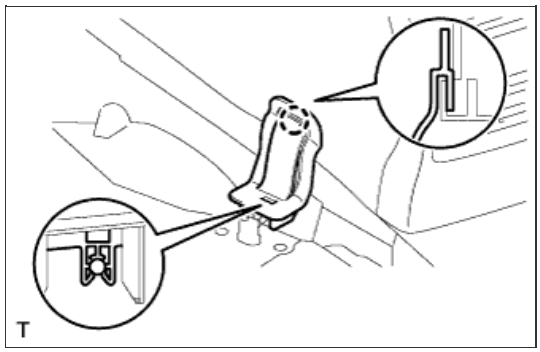

4. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 14 claws to install the console panel.

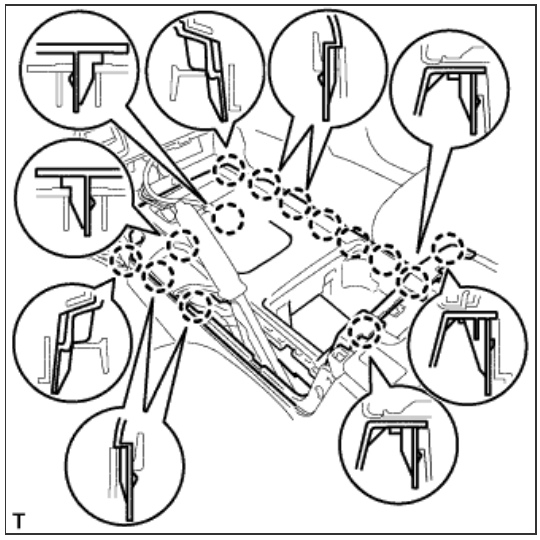


5. INSTALL CONSOLE CUP HOLDER BOX SUB-ASSEMBLY

a. Attach the 4 claws to install the box.

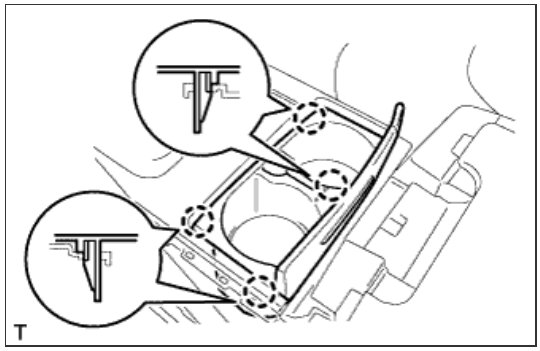

6. INSTALL REAR UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Attach the 9 claws to install the panel.

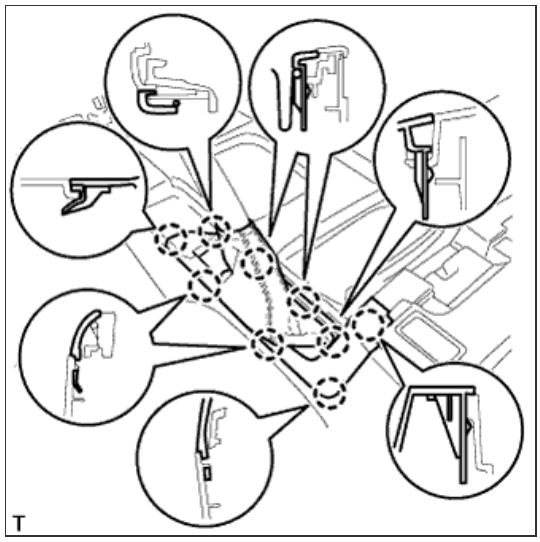

7. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 7 claws to install the panel.

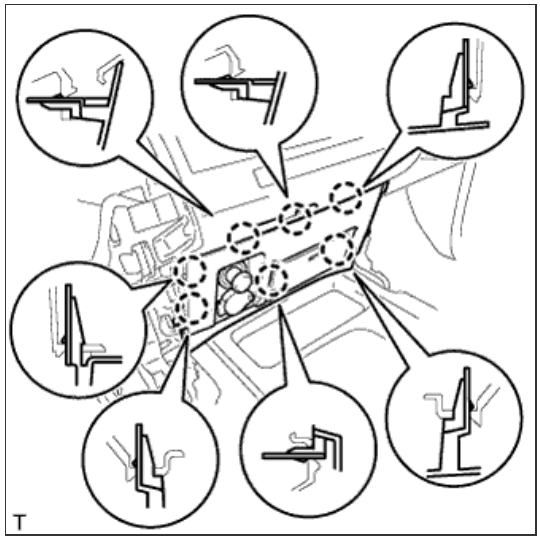

8. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

a. Install the shift lever knob and twist it in the direction indicated by the arrow.

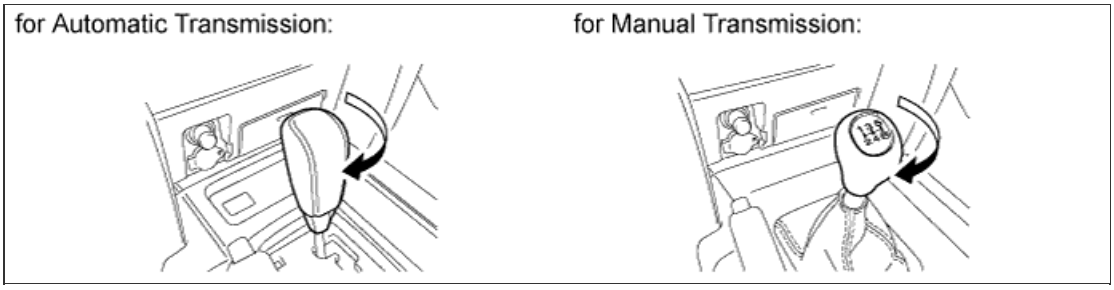


9. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

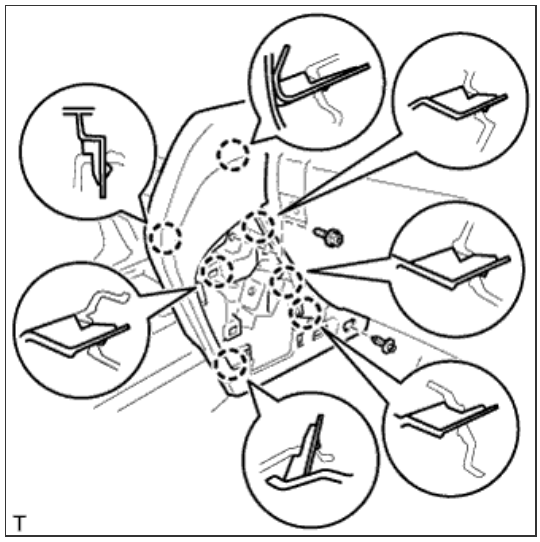

10. INSTALL NO. 1 INSTRUMENT PANEL FINISH CUSHION

a. Attach the 7 claws to install the panel cushion.

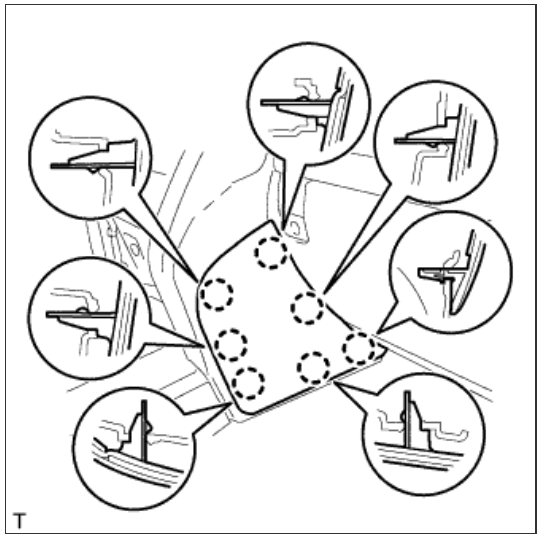


11. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

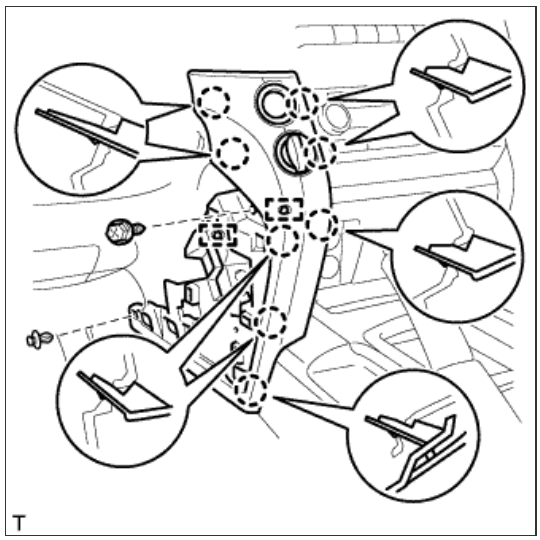

12. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

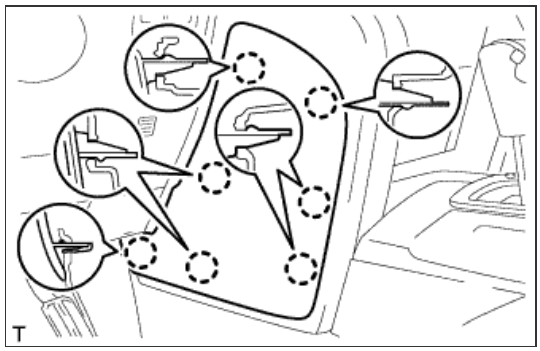

13. INSTALL FRONT SEAT ASSEMBLY LH (for Manual Seat)

a. Install the front seat assembly LH (Click here).

14. INSTALL FRONT SEAT ASSEMBLY LH (for Power Seat)

a. Install the front seat assembly LH (Click here).

15. CHARGE REFRIGERANT

SST


09985-20010 (09985-02130, 09985-02150, 09985-02090, 09985-02110, 09985-02010, 09985-02050, 09985-02060, 09985-02070)

a. Perform vacuum purging using a vacuum pump.

b. Charge refrigerant HFC-134a (134a).

Standard:

Condenser Core hickness	Air Conditioning ype	Cool Box	efrigerant Charging Amount
22 mm (0.866 in.)	w/o ear Cooler	w/ Cool Box	870 -30 g (30.7 -1.1 oz.)
		w/o Cool Box	870 -30 g (30.7 -1.1 oz.)
	w/ ear Cooler	w/ Cool Box	1010 -30 g (35.6 -1.1 oz.)
		w/o Cool Box	960 -30 g (33.9 -1.1 oz.)
16 mm (0.630 in.)	w/o ear Cooler	w/ Cool Box	770 -30 g (27.2 -1.1 oz.)
		w/o Cool Box	770 -30 g (27.2 -1.1 oz.)
	w/ ear Cooler	w/ Cool Box	970 -30 g (34.2 -1.1 oz.)
		w/o Cool Box	920 -30 g (32.5 -1.1 oz.)

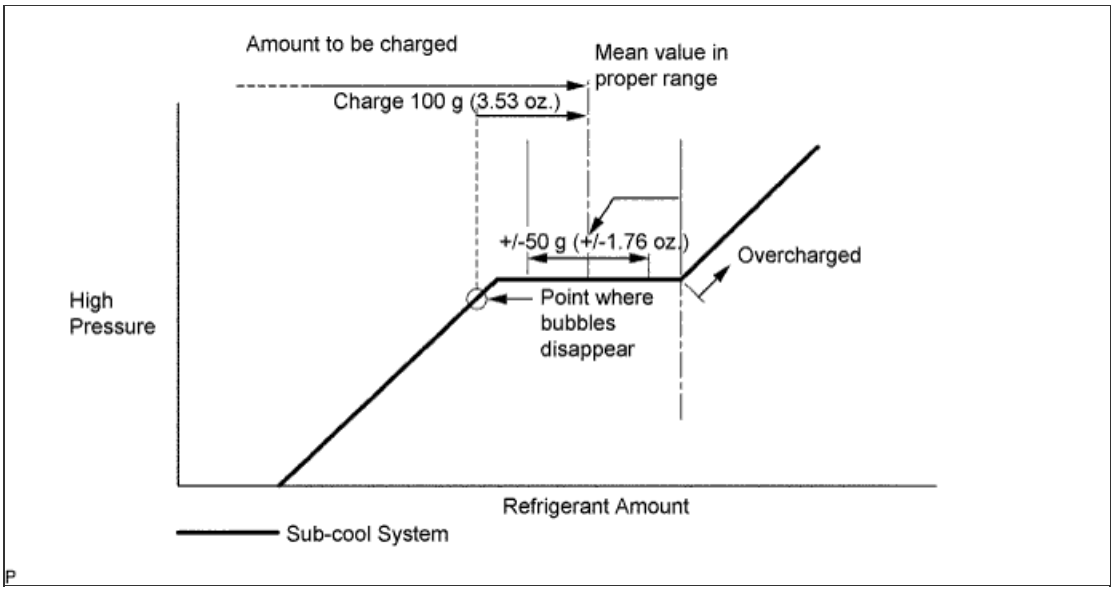

NOTICE:

- **Do not operate the cooler compressor before charging refrigerant as the cooler compressor will not work properly without any refrigerant, and will overheat.**
- **Approximately 200 g (7.05 oz.) of refrigerant may need to be charged after bubbles disappear. The refrigerant amount should be checked by measuring its quantity, and not with the sight glass.**

16. WARM UP ENGINE

a. arm up the engine at less than 1850 rpm for 2 minutes or more after charging the refrigerant.

NOTICE:

Be sure to warm up the compressor when turning the A/C switch is on after removing and installing the cooler refrigerant lines (including the compressor), to prevent damage to the compressor.

17. CHECK FOR REFRIGERANT GAS LEAK

a. After recharging the refrigerant gas, check for refrigerant gas leakage using a halogen leak detector.


b. Perform the operation under these conditions:

- Stop the engine.
- Secure good ventilation (the halogen leak detector may react to volatile gases other than refrigerant, such as evaporated gasoline or exhaust gas).
- epeat the test 2 or 3 times.
- ake sure that some refrigerant remains in the refrigeration system. hen compressor is off: approximately 392 to 588 kPa (4.0 to 6.0 kgf/cm^2, 57 to 85 psi).


c. Using a halogen leak detector, check the refrigerant line for leakage.


d. If a gas leak is not detected on the drain hose, remove the blower motor control (blower resistor) from the cooling unit. Insert the halogen leak detector sensor into the unit and perform the test.


e. Disconnect the connector and wait for approximately 20 minutes. Bring the halogen leak detector close to the pressure switch and perform the test.

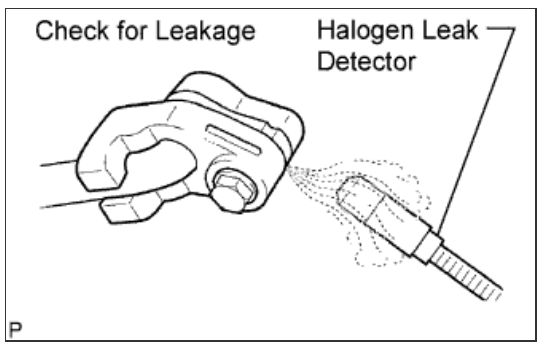


for Preparation Click here

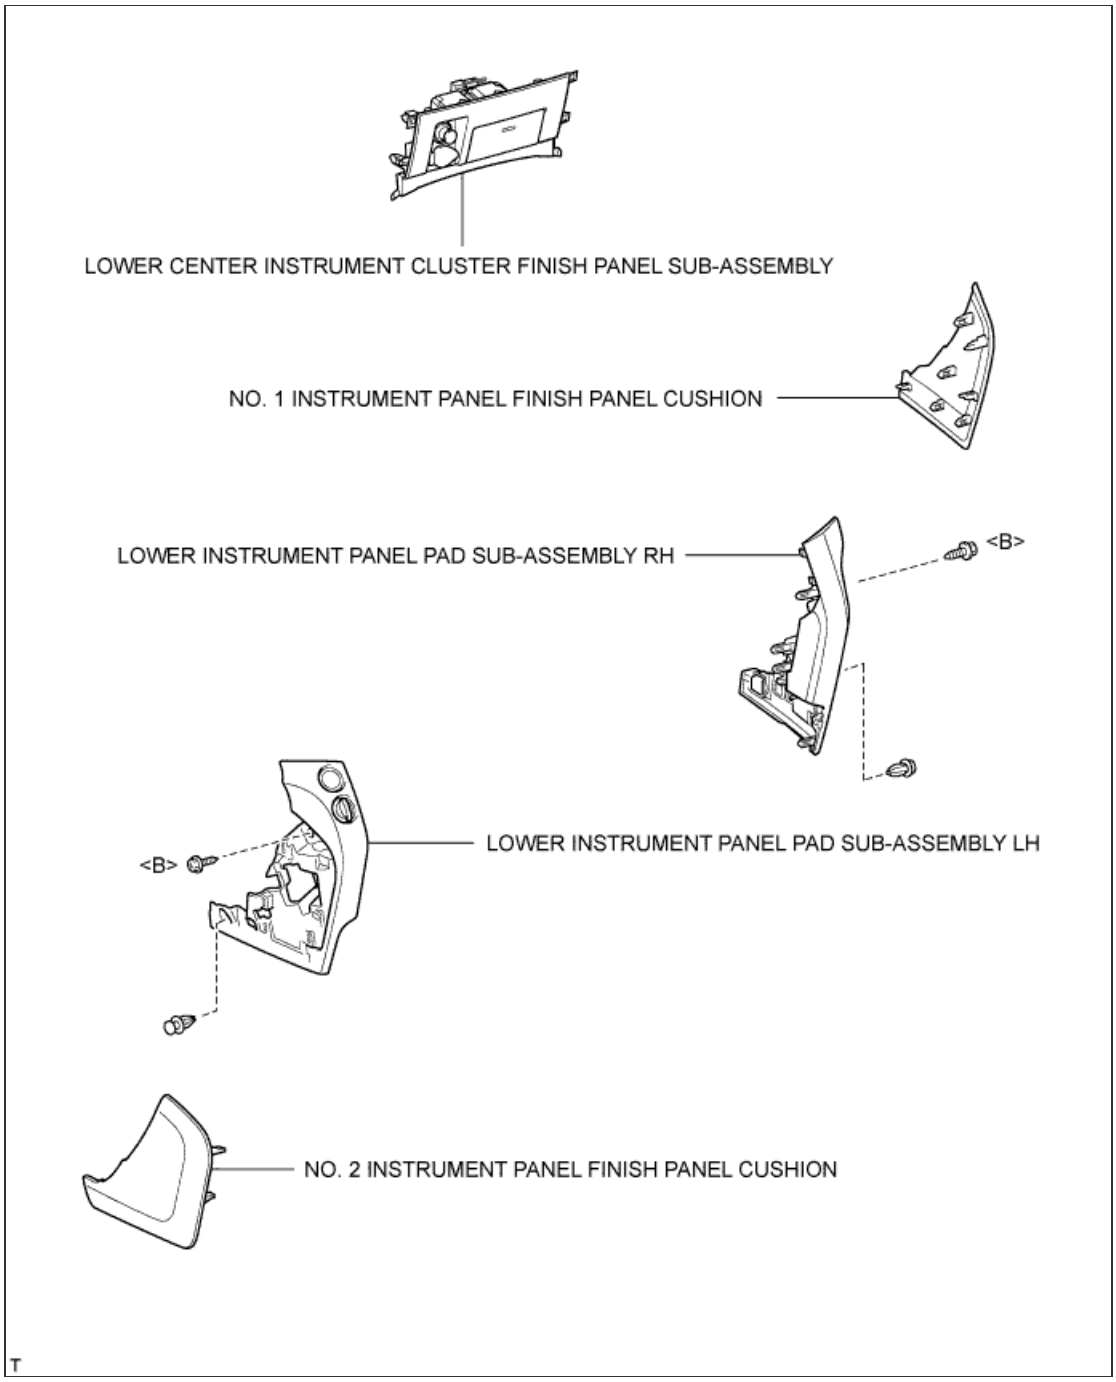

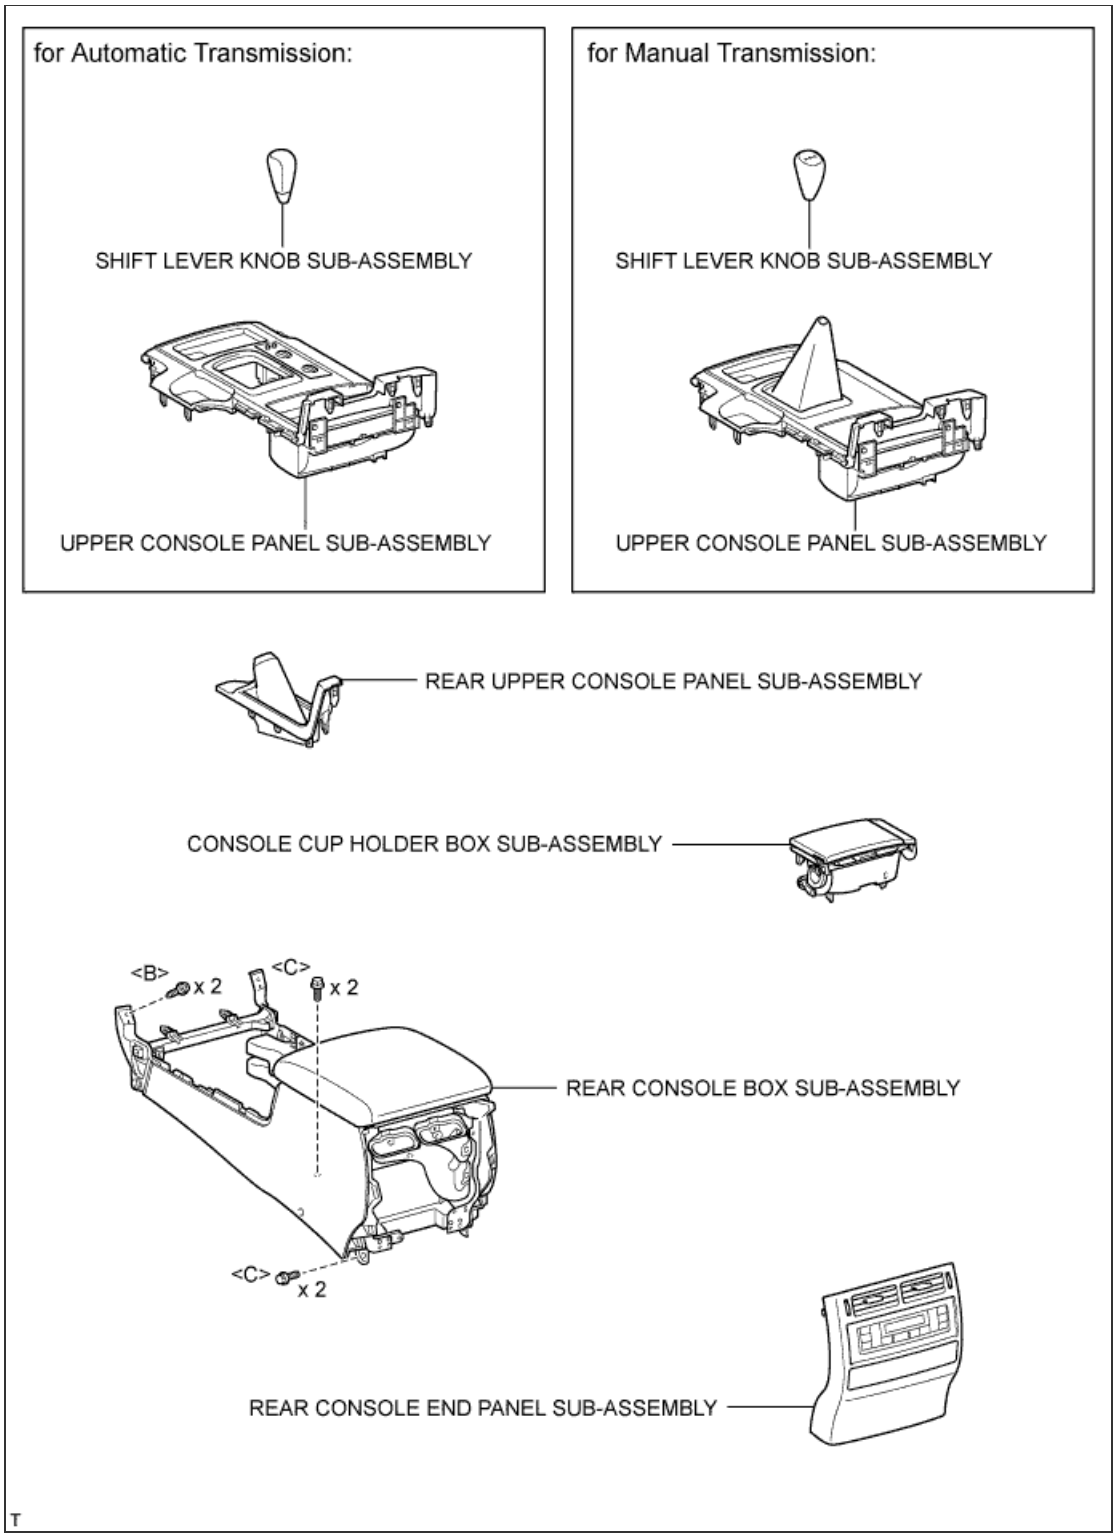
for Automatic Transmission:
SHIFT LEVER KNOB SUB-ASSEMBLY
UPPER CONSOLE PANEL SUB-ASSEMBLY
for Manual Transmission:
SHIFT LEVER KNOB SUB-ASSEMBLY
UPPER CONSOLE PANEL SUB-ASSEMBLY
REAR UPPER CONSOLE PANEL SUB-ASSEMBLY
CONSOLE CUP HOLDER BOX SUB-ASSEMBLY
<B>
x 2
<C>
x 2
REAR CONSOLE BOX SUB-ASSEMBLY
<C>
x 2
REAR CONSOLE END PANEL SUB-ASSEMBLY
T

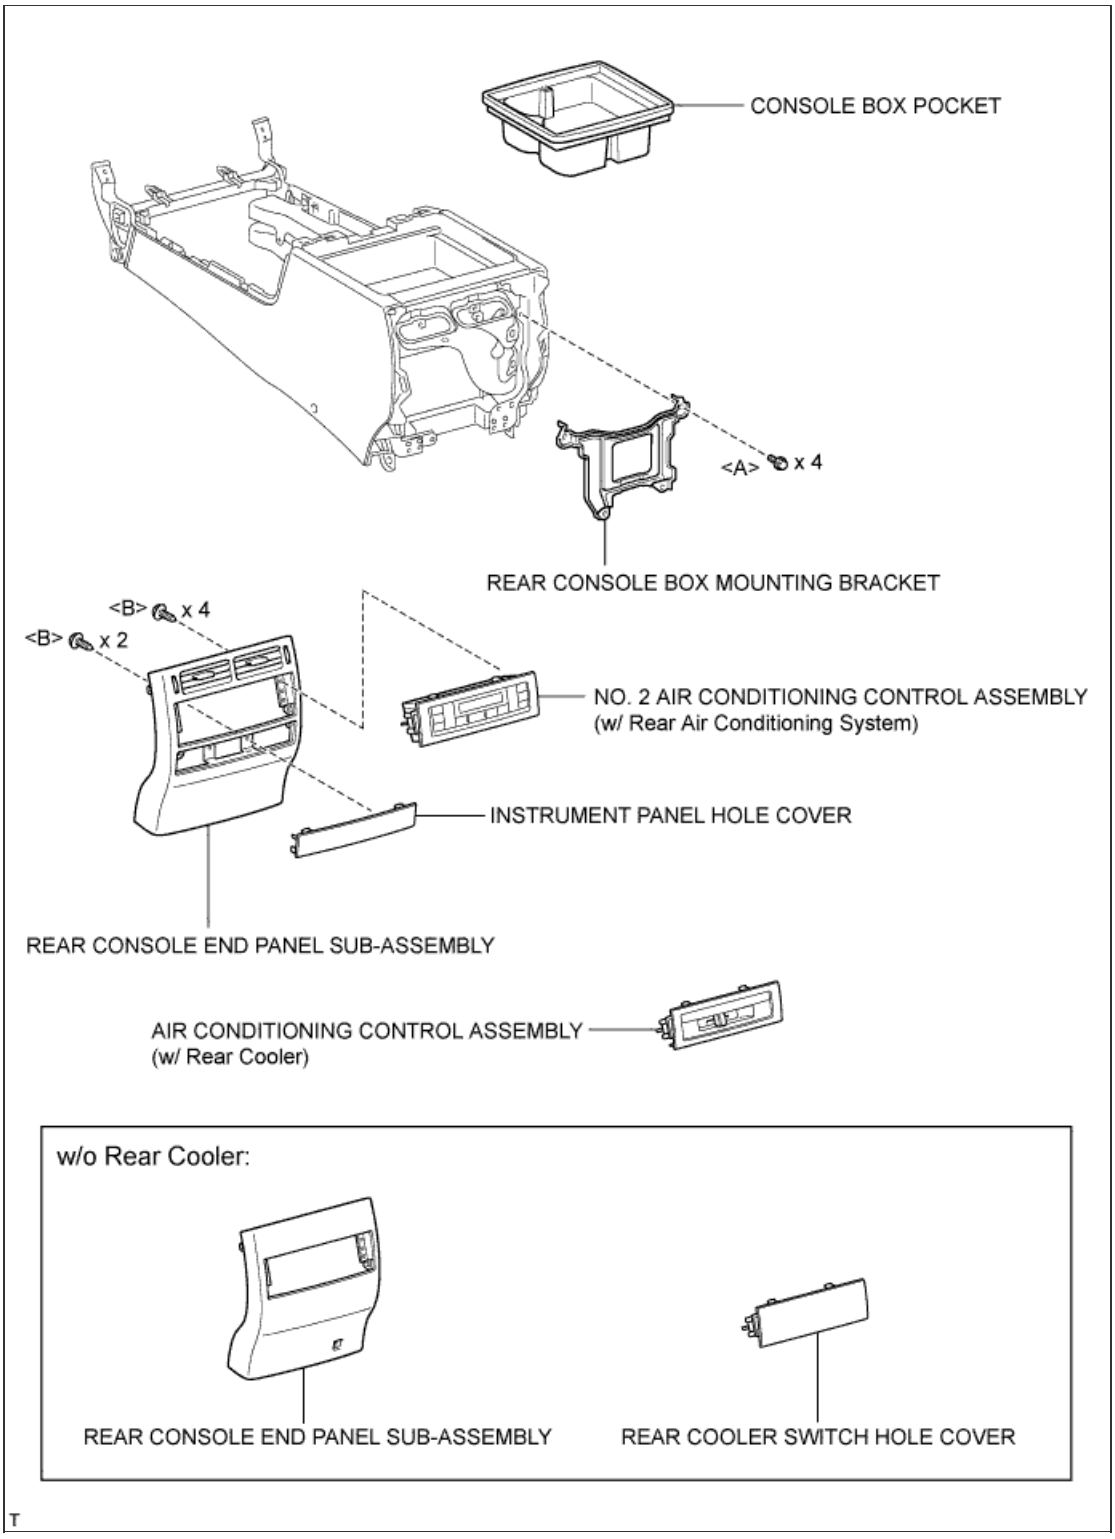
CONSOLE BOX POCKET
<A> x 4
REAR CONSOLE BOX MOUNTING BRACKET
<B> x 4
<B> x 2
NO. 2 AIR CONDITIONING CONTROL ASSEMBLY
(w/ Rear Air Conditioning System)
INSTRUMENT PANEL HOLE COVER
REAR CONSOLE END PANEL SUB-ASSEMBLY
AIR CONDITIONING CONTROL ASSEMBLY
(w/ Rear Cooler)
w/o Rear Cooler:
REAR CONSOLE END PANEL SUB-ASSEMBLY
REAR COOLER SWITCH HOLE COVER

T

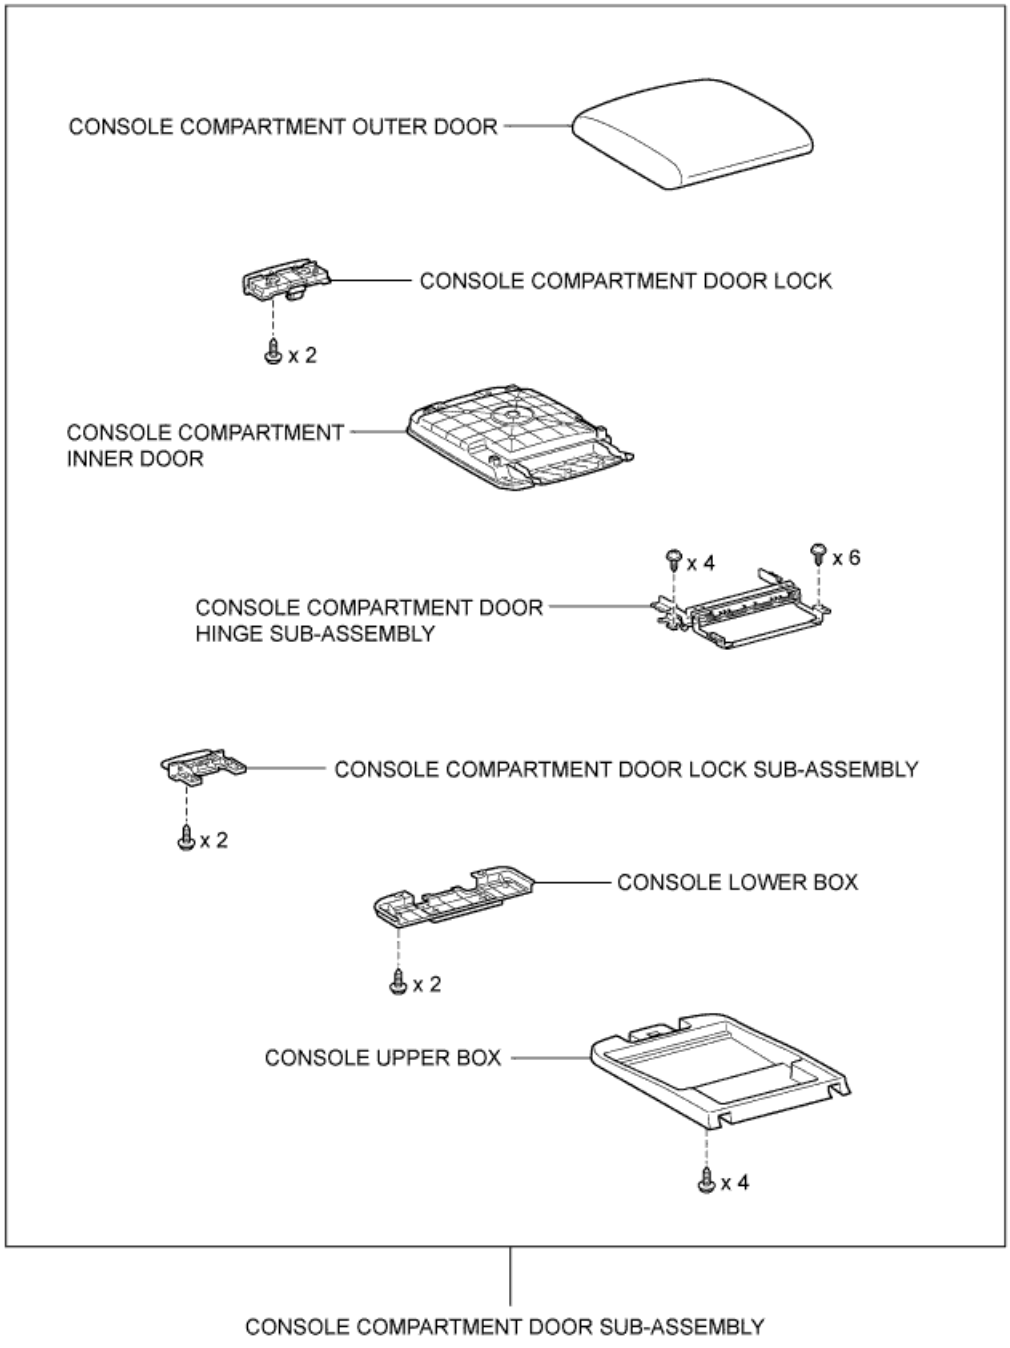
CONSOLE COMPARTMENT OUTER DOOR
CONSOLE COMPARTMENT DOOR LOCK
x 2
CONSOLE COMPARTMENT
INNER DOOR
x 4
x 6
CONSOLE COMPARTMENT DOOR
HINGE SUB-ASSEMBLY
CONSOLE COMPARTMENT DOOR LOCK SUB-ASSEMBLY
x 2
CONSOLE LOWER BOX
x 2
CONSOLE UPPER BOX
x 4
CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY


T

for Preparation Click here

1. REMOVE NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.

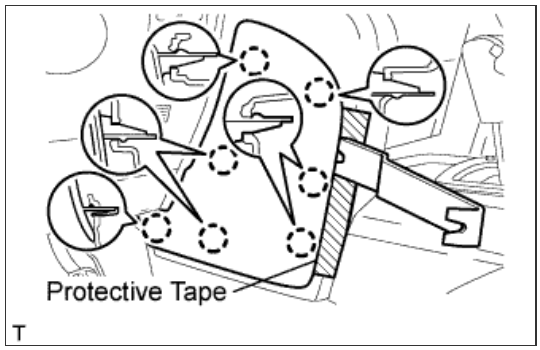


2. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Remove the clip.

b. Remove the screw.

c. Detach the 8 claws.

d. Remove the panel pad and disconnect the connectors and 2 clamps.

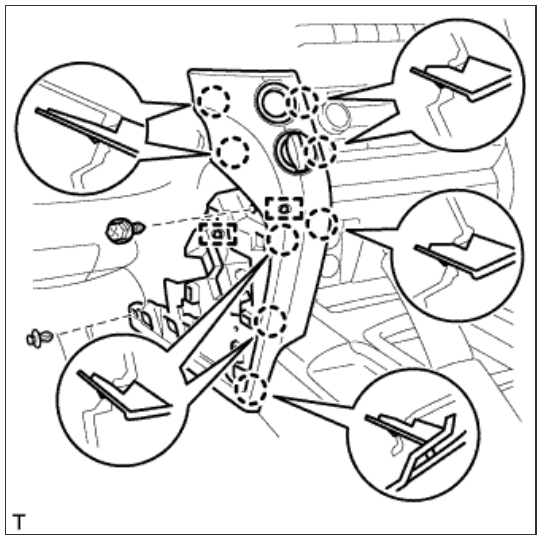

3. REMOVE NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 7 claws and remove the panel cushion.




4. REMOVE LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Remove the clip.


b. Remove the screw.

c. Detach the 7 claws and remove the panel.

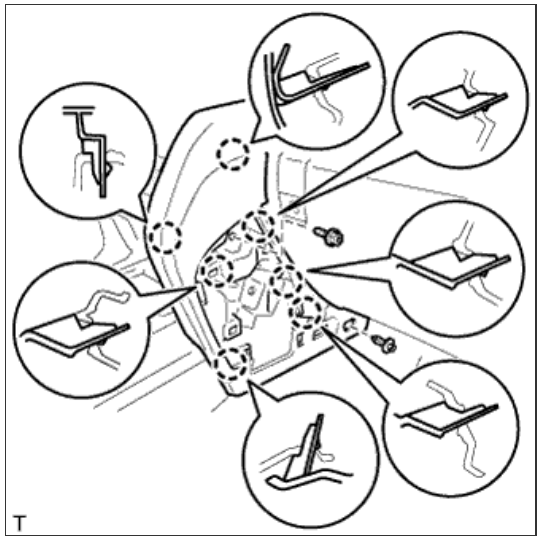

5. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY


a. Twist the shift lever knob in the direction indicated by the arrow and remove it.

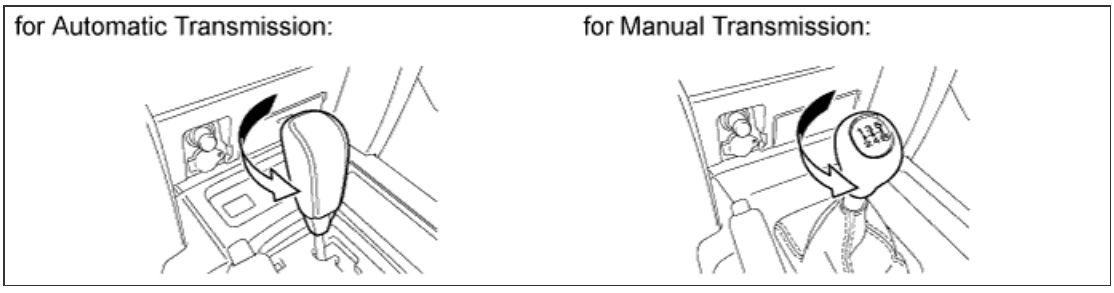

6. REMOVE LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Detach the 7 claws.

b. Disconnect the connectors and remove the panel.

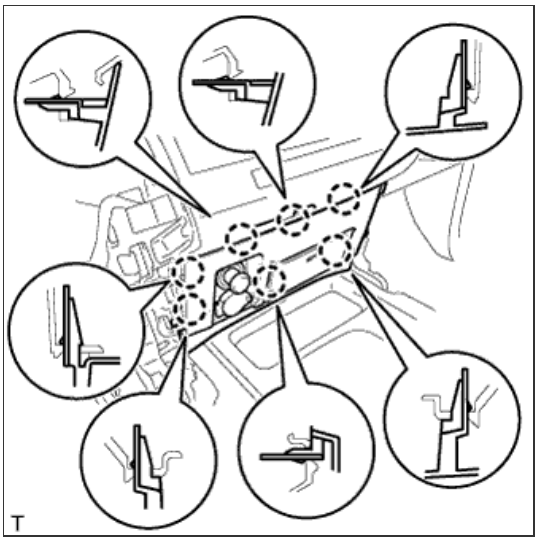


7. REMOVE REAR UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 9 claws and remove the panel.

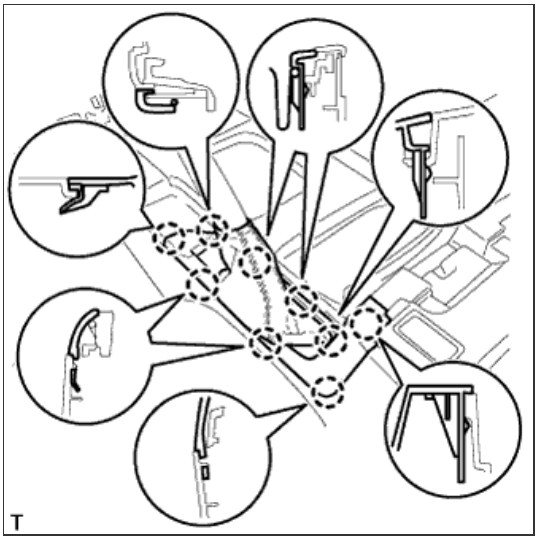

8. REMOVE CONSOLE CUP HOLDER BOX SUB-ASSEMBLY


a. Detach the 4 claws and remove the box.

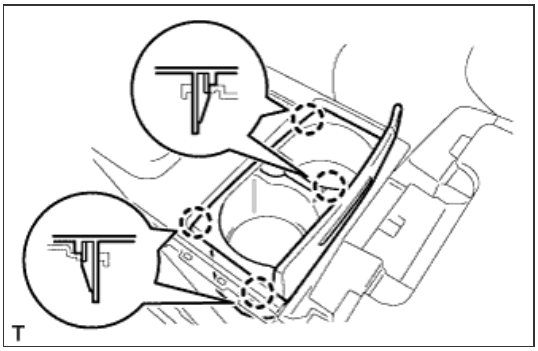

9. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY

a. Detach the 14 claws.

b. Disconnect the connectors and remove the console panel.

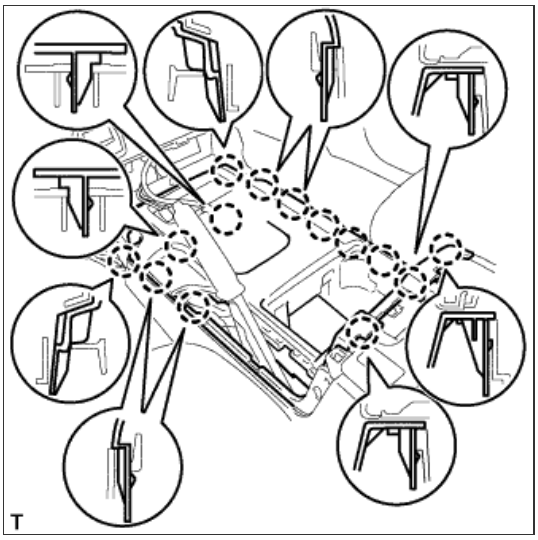


10. REMOVE REAR CONSOLE END PANEL SUB-ASSEMBLY


a. Place protective tape as shown in the illustration.

b. Using a moulding remover, detach the 8 claws.

c. Remove the end panel and disconnect the connectors and 2 clamps.

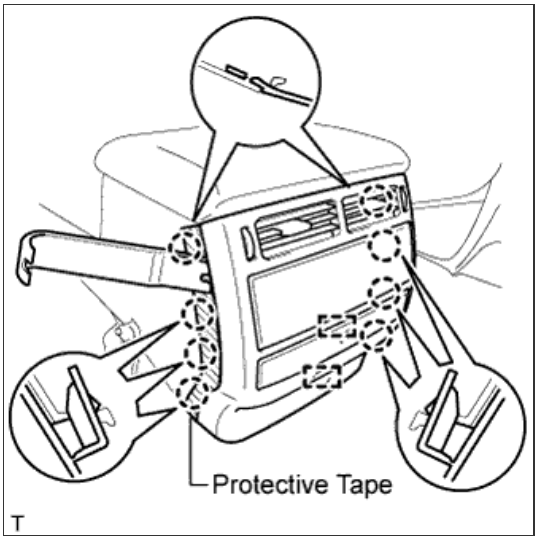

11. REMOVE REAR CONSOLE BOX SUB-ASSEMBLY

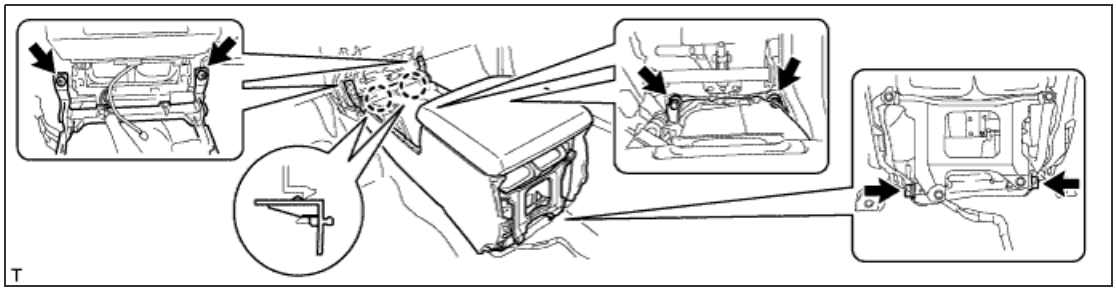

a. Remove the 4 bolts and 2 screws.


b. Detach the 2 claws and remove the console box.

for Preparation Click here

1. REMOVE NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (w/ Rear Air Conditioning System)

a. Remove the 4 screws.


b. Detach the 5 claws and remove the air conditioning control.

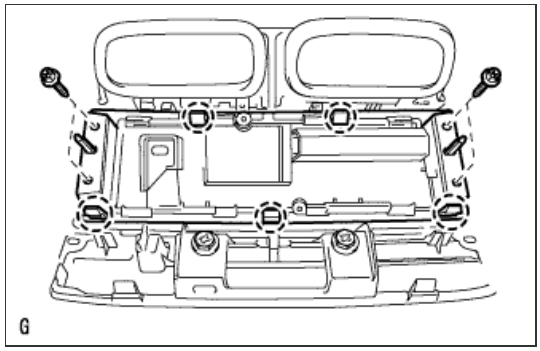

2. REMOVE AIR CONDITIONING CONTROL ASSEMBLY (w/ Rear Cooler)

a. Remove the 4 screws.


b. Detach the 5 claws and remove the air conditioning control.

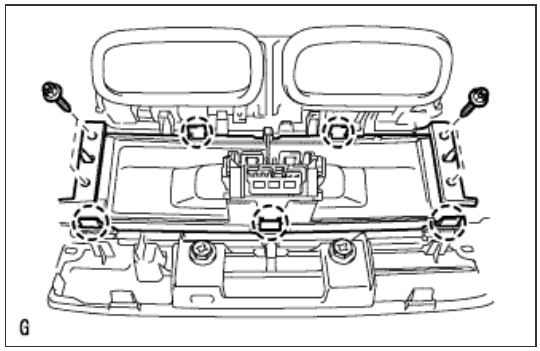

3. REMOVE REAR COOLER SWITCH HOLE COVER (w/o Rear Cooler)

a. Remove the 4 screws.


b. Detach the 5 claws and remove the hole cover.

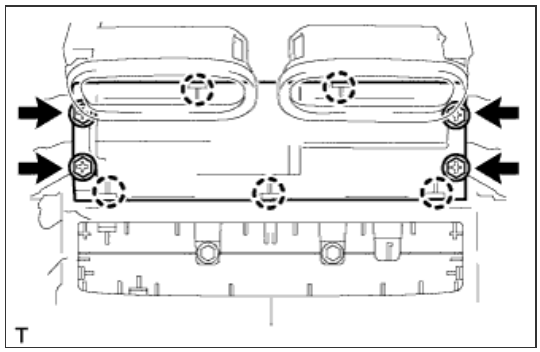

4. REMOVE INSTRUMENT PANEL HOLE COVER

a. Remove the 2 screws.

b. Detach the 7 claws and remove the hole cover.

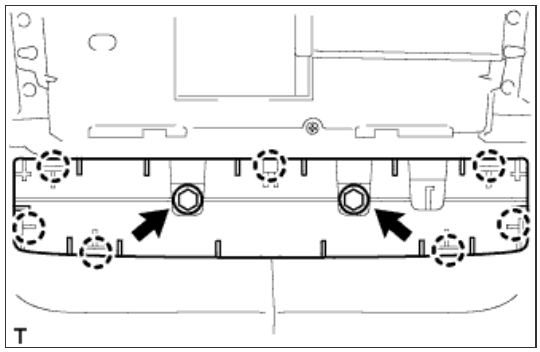


5. REMOVE CONSOLE BOX POCKET

a. Remove the box pocket.


6. REMOVE REAR CONSOLE BOX MOUNTING BRACKET

a. Remove the 4 screws and bracket.

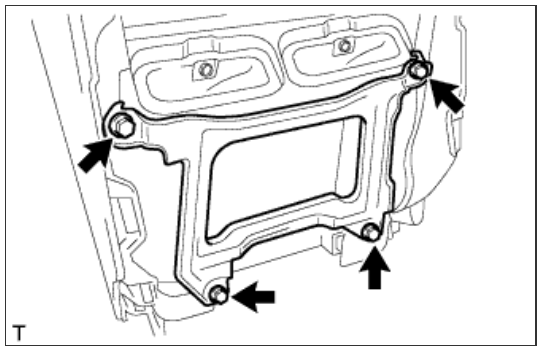


7. REMOVE CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY

a. Remove the 6 screws and door.

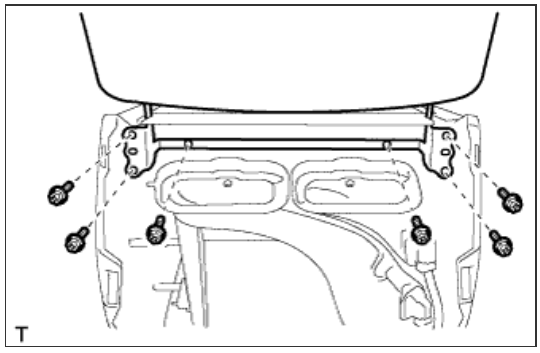


8. REMOVE CONSOLE COMPARTMENT DOOR LOCK SUB-ASSEMBLY

a. Remove the 2 screws and lower box.

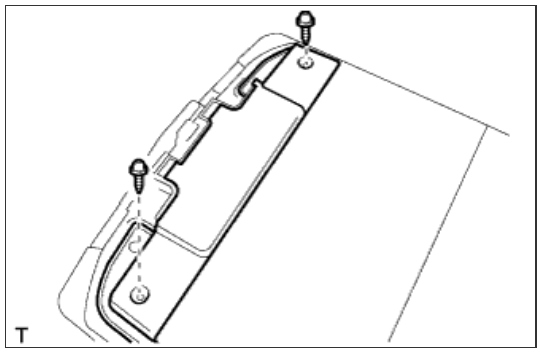


b. Remove the 2 screws and door lock.

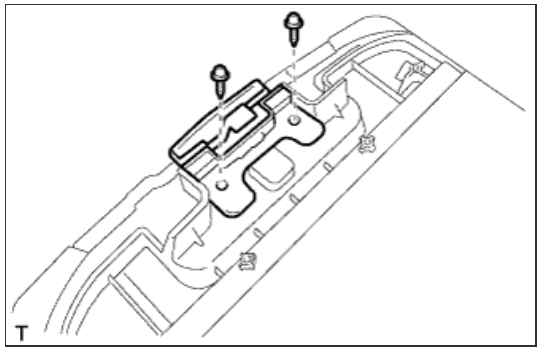


9. REMOVE CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY


a. Remove the 4 screws and upper box.

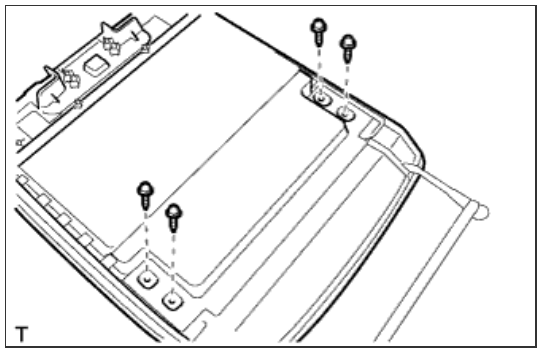

b. Using a moulding remover, detach the 12 claws and remove the inner door.

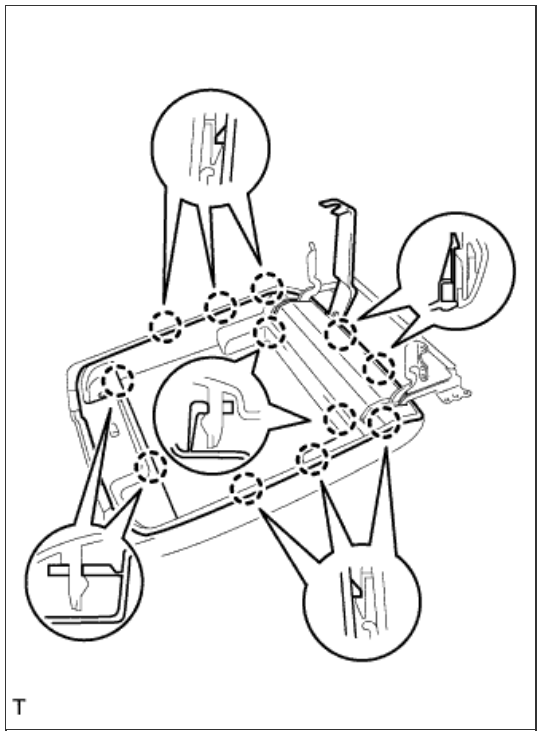


c. Remove the 4 screws and door hinge.

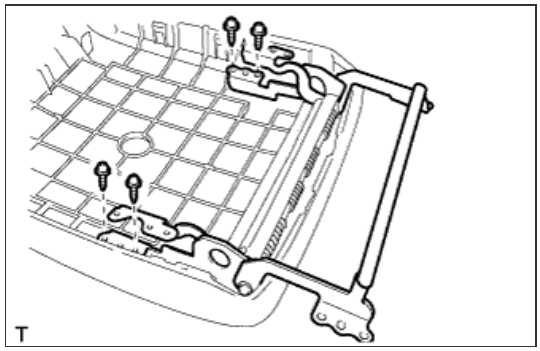

10. REMOVE CONSOLE COMPARTMENT DOOR LOCK


a. Remove the 2 screws and door lock.

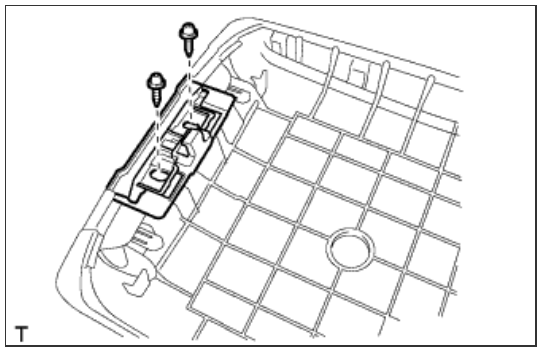

for Preparation Click here


1. INSTALL CONSOLE COMPARTMENT DOOR LOCK

a. Install the door lock with the 2 screws.

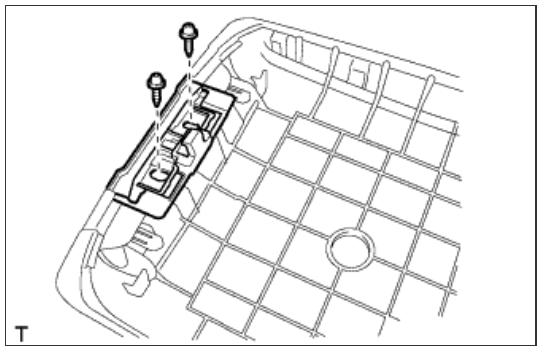


2. INSTALL CONSOLE COMPARTMENT DOOR HINGE SUB-ASSEMBLY


a. Install the door hinge with the 4 screws.

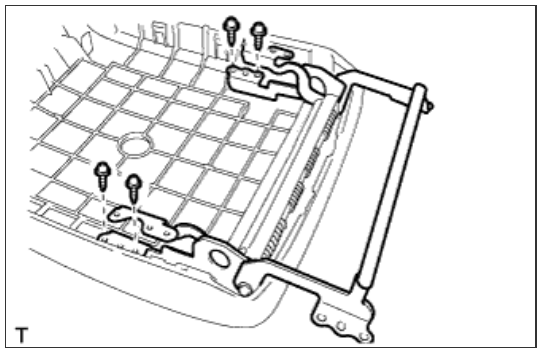

b. Attach the 12 claws to install the inner door.

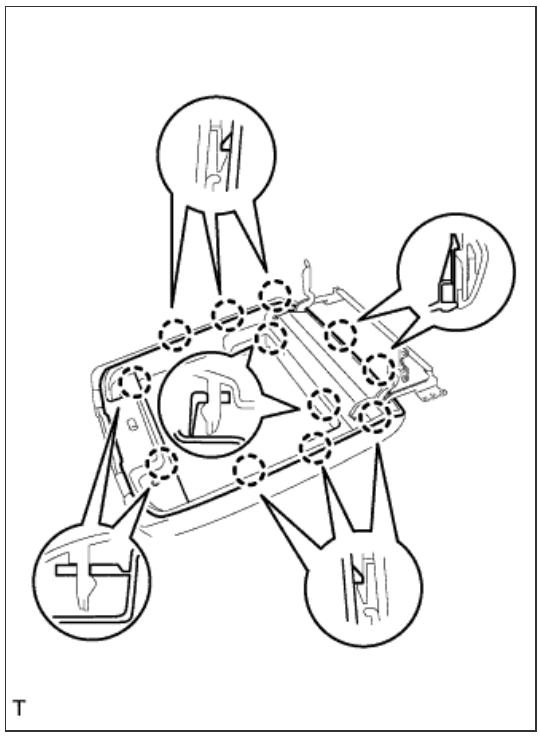


c. Install the upper box with the 4 screws.

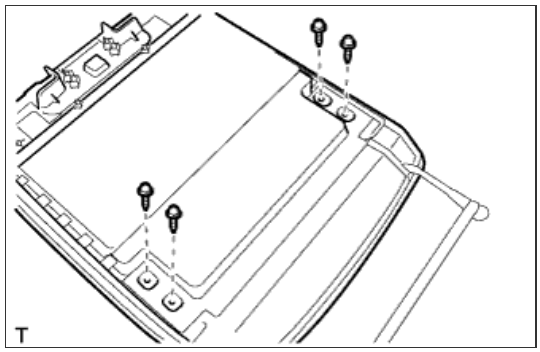


3. INSTALL CONSOLE COMPARTMENT DOOR LOCK SUB-ASSEMBLY

a. Install the door lock with the 2 screws.

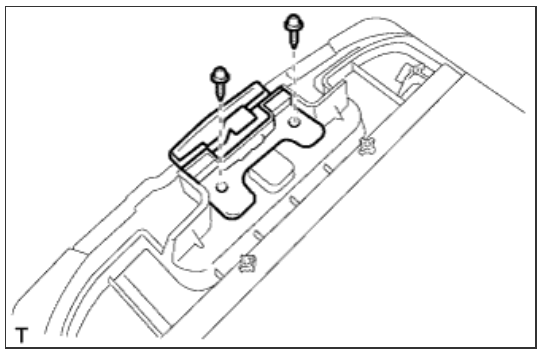


b. Install the lower box with the 2 screws.

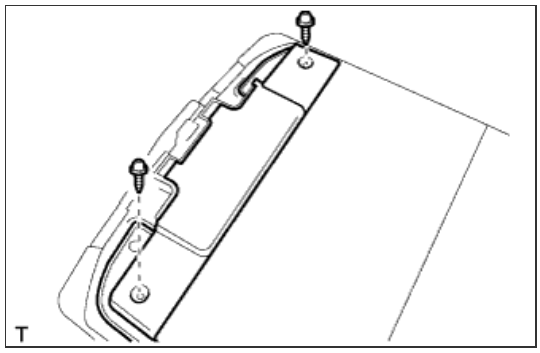


4. INSTALL CONSOLE COMPARTMENT DOOR SUB-ASSEMBLY

a. Install the door with the 6 screws.

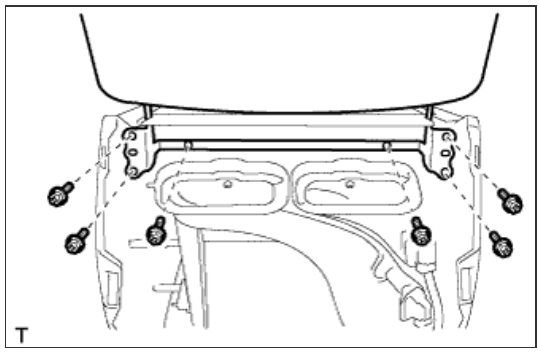

5. INSTALL REAR CONSOLE BOX MOUNTING BRACKET

a. Install the bracket with the 4 bolts.

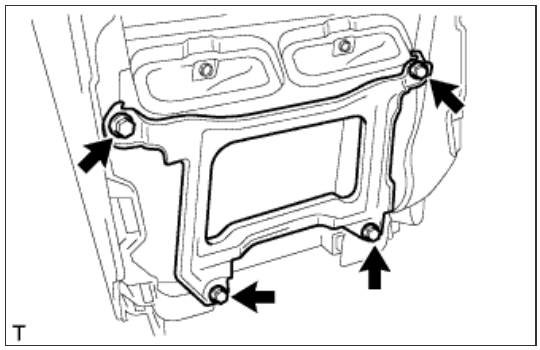


6. INSTALL CONSOLE BOX POCKET

a. Install the box pocket.

7. INSTALL INSTRUMENT PANEL HOLE COVER

a. Attach the 7 claws to install the hole cover.


b. Install the 2 screws.

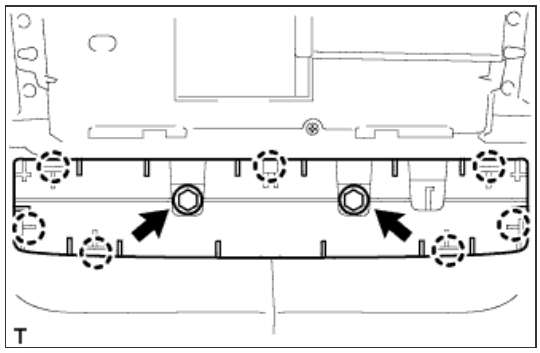

8. INSTALL REAR COOLER SWITCH HOLE COVER (w/o Rear Cooler)

a. Attach the 5 claws to install the hole cover.


b. Install the 4 screws.

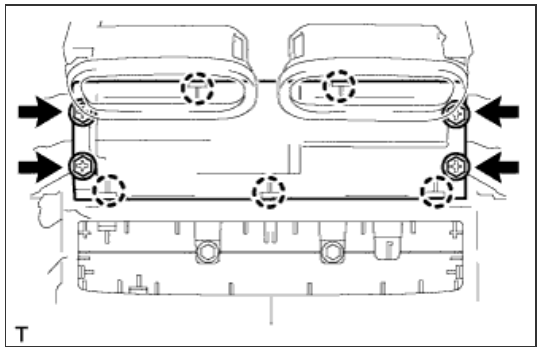

9. INSTALL AIR CONDITIONING CONTROL ASSEMBLY (w/ Rear Cooler)

a. Attach the 5 claws to install the air conditioning control.


b. Install the 4 screws.

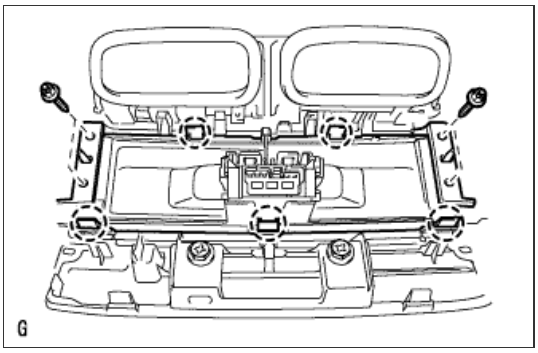

10. INSTALL NO. 2 AIR CONDITIONING CONTROL ASSEMBLY (w/ Rear Air Conditioning System)

a. Attach the 5 claws to install the air conditioning control.

b. Install the 4 screws.

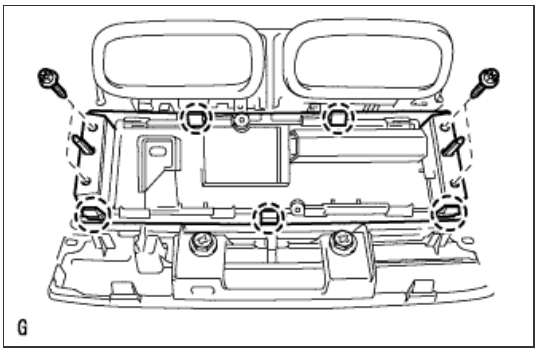


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL REAR CONSOLE BOX SUB-ASSEMBLY

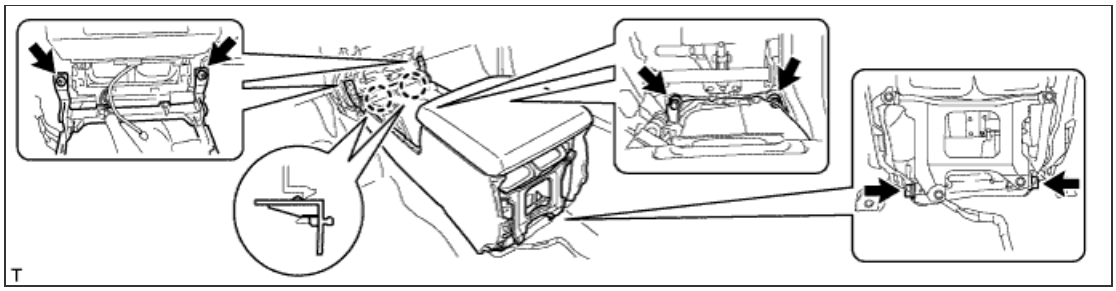


a. Attach the 2 claws.

b. Install the console box with the 4 bolts and 2 screws.

2. INSTALL REAR CONSOLE END PANEL SUB-ASSEMBLY

a. Connect the connectors and 2 clamps.


b. Attach the 8 claws to install the end panel.

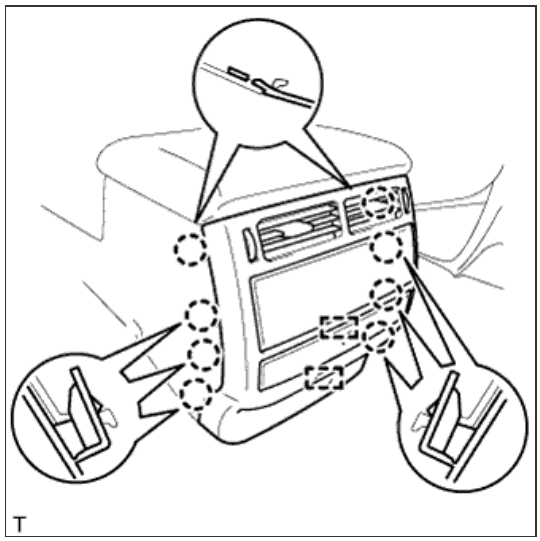

3. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 14 claws to install the console panel.

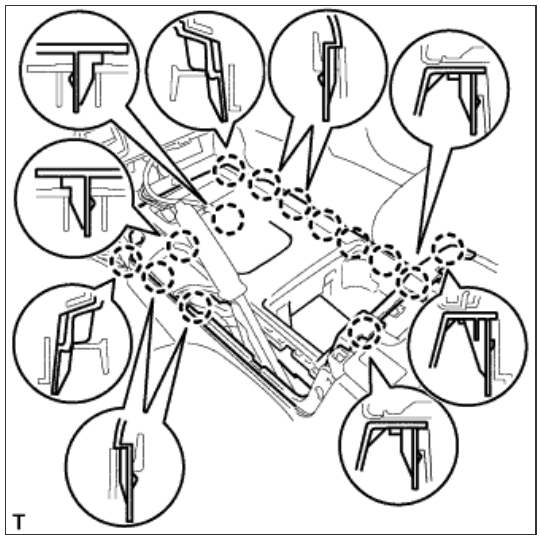


4. INSTALL CONSOLE CUP HOLDER BOX SUB-ASSEMBLY

a. Attach the 4 claws to install the box.

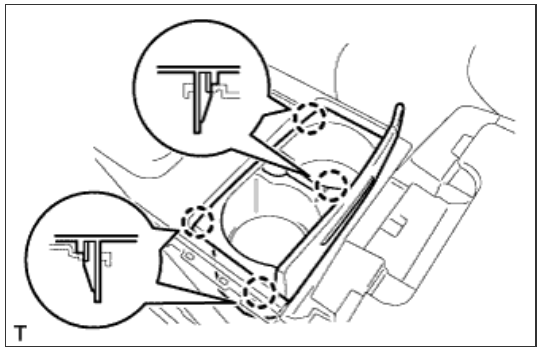

5. INSTALL REAR UPPER CONSOLE PANEL SUB-ASSEMBLY


a. Attach the 9 claws to install the panel.

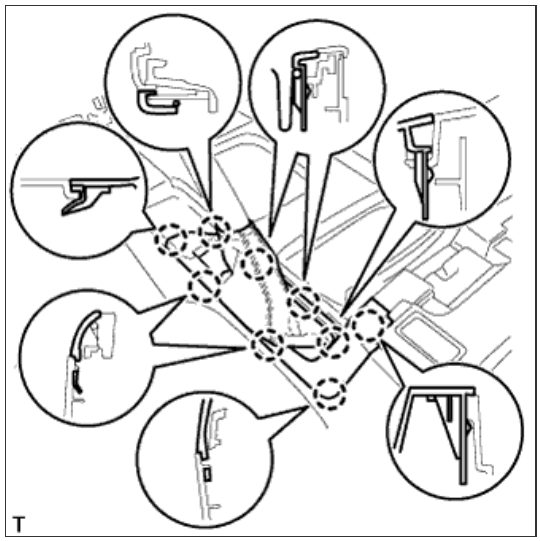

6. INSTALL LOWER CENTER INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY


a. Connect the connectors.

b. Attach the 7 claws to install the panel.

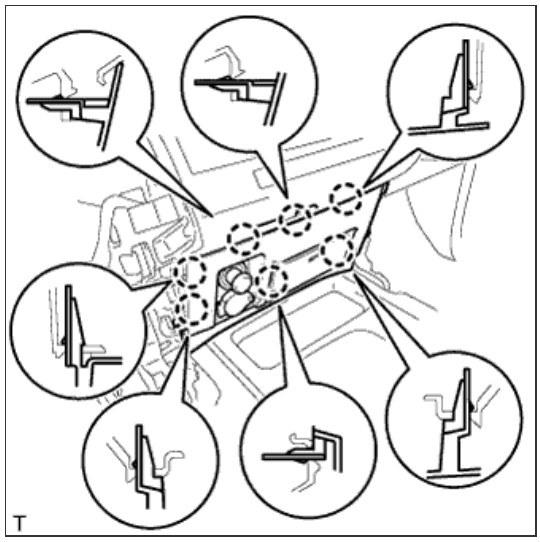

7. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY

a. Install the shift lever knob and twist it in the direction indicated by the arrow.

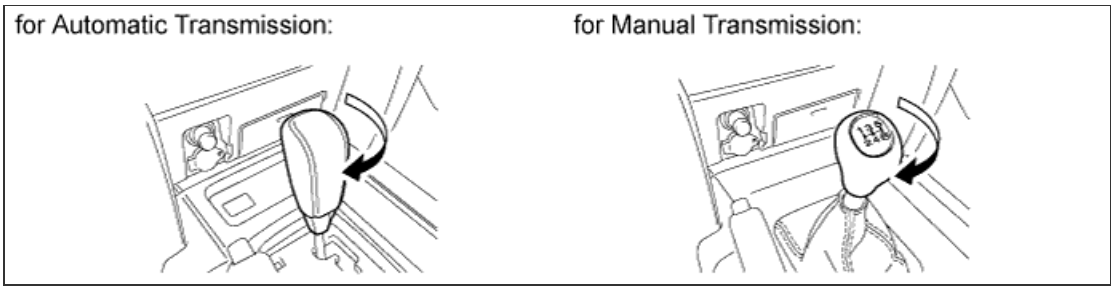


8. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY RH

a. Attach the 7 claws to install the panel pad.


b. Install the screw.

c. Install the clip.

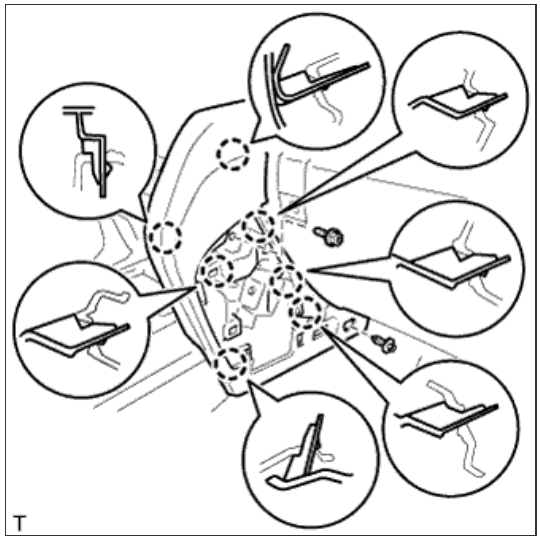

9. INSTALL NO. 1 INSTRUMENT PANEL FINISH PANEL CUSHION

a. Attach the 7 claws to install the panel cushion.

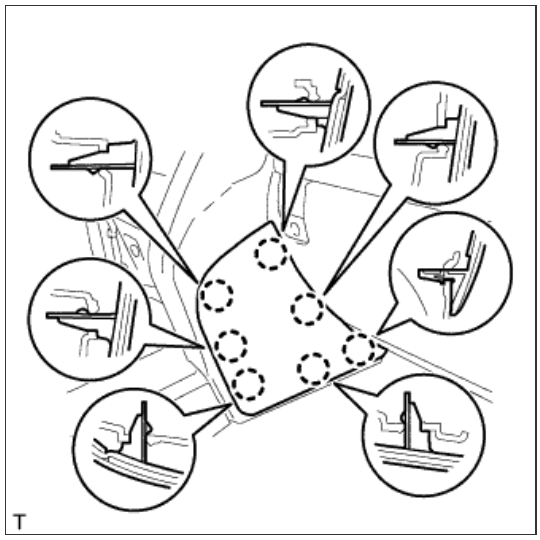


10. INSTALL LOWER INSTRUMENT PANEL PAD SUB-ASSEMBLY LH

a. Connect the connectors and 2 clamps.

b. Attach the 8 claws to install the panel pad.


c. Install the screw.

d. Install the clip.

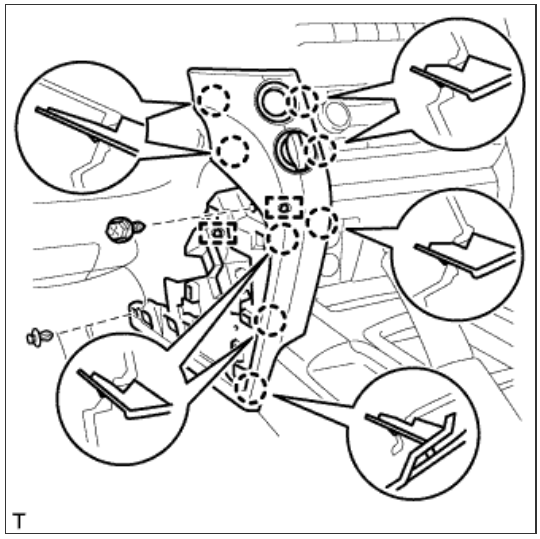



11. INSTALL NO. 2 INSTRUMENT PANEL FINISH PANEL CUSHION


a. Attach the 7 claws to install the panel cushion.

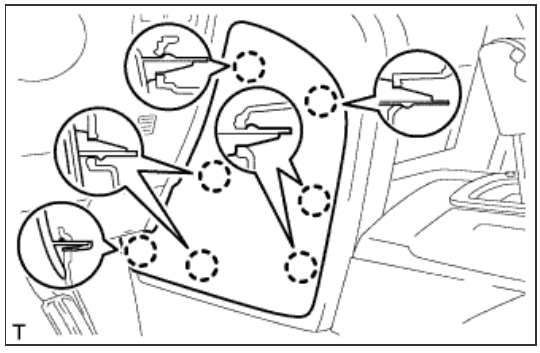


for Preparation Click here

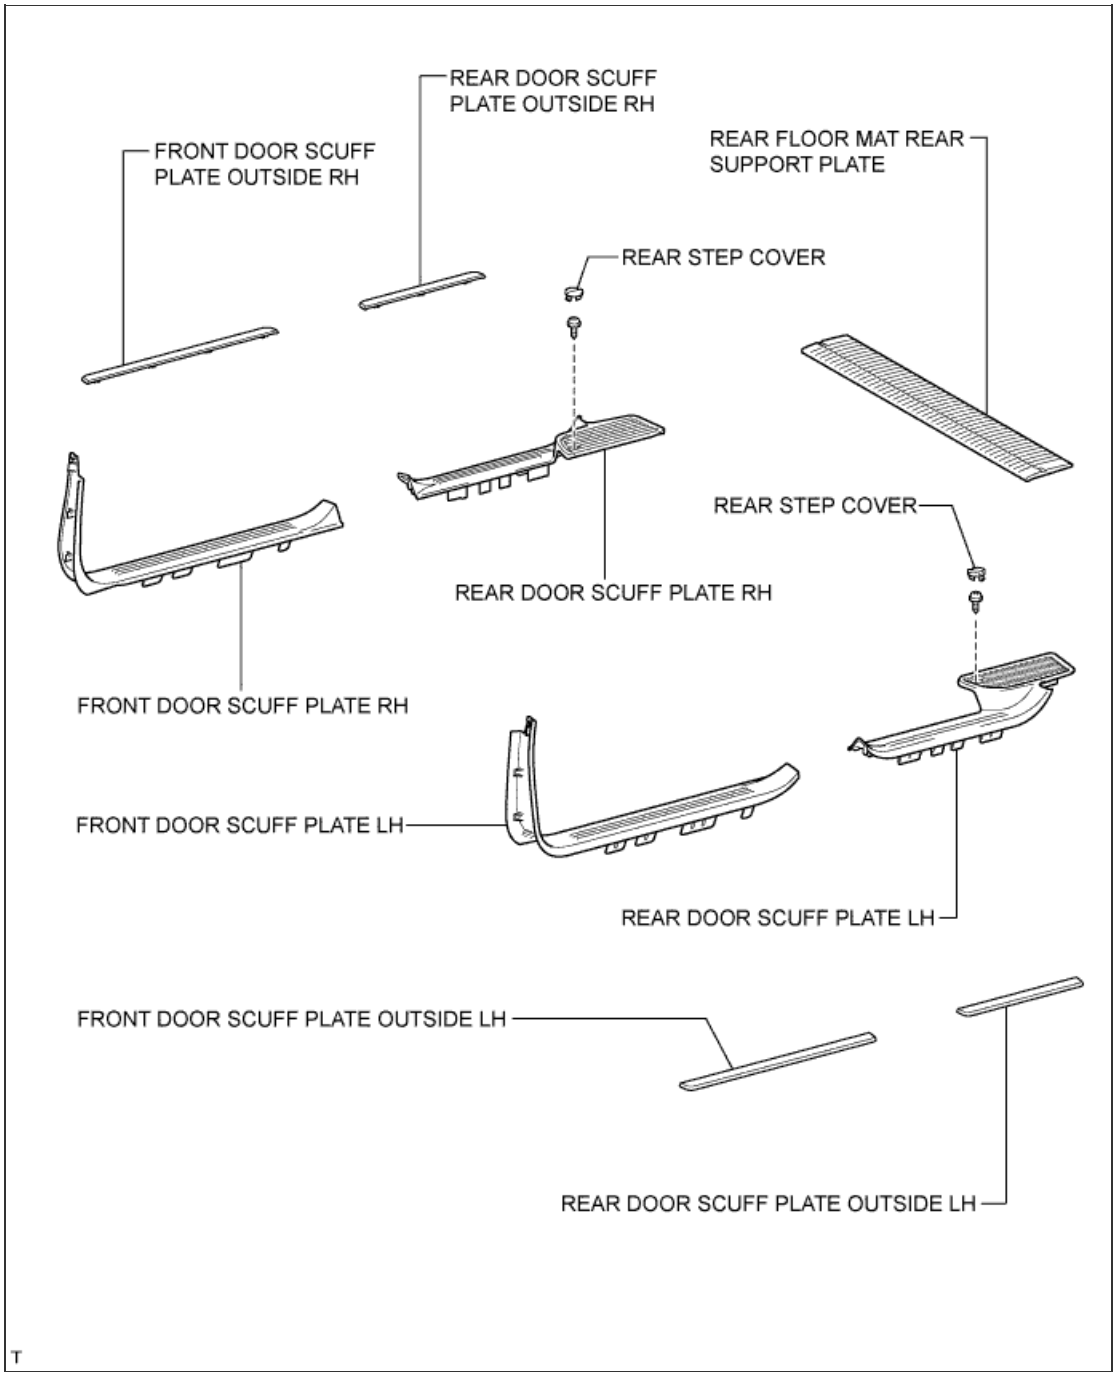

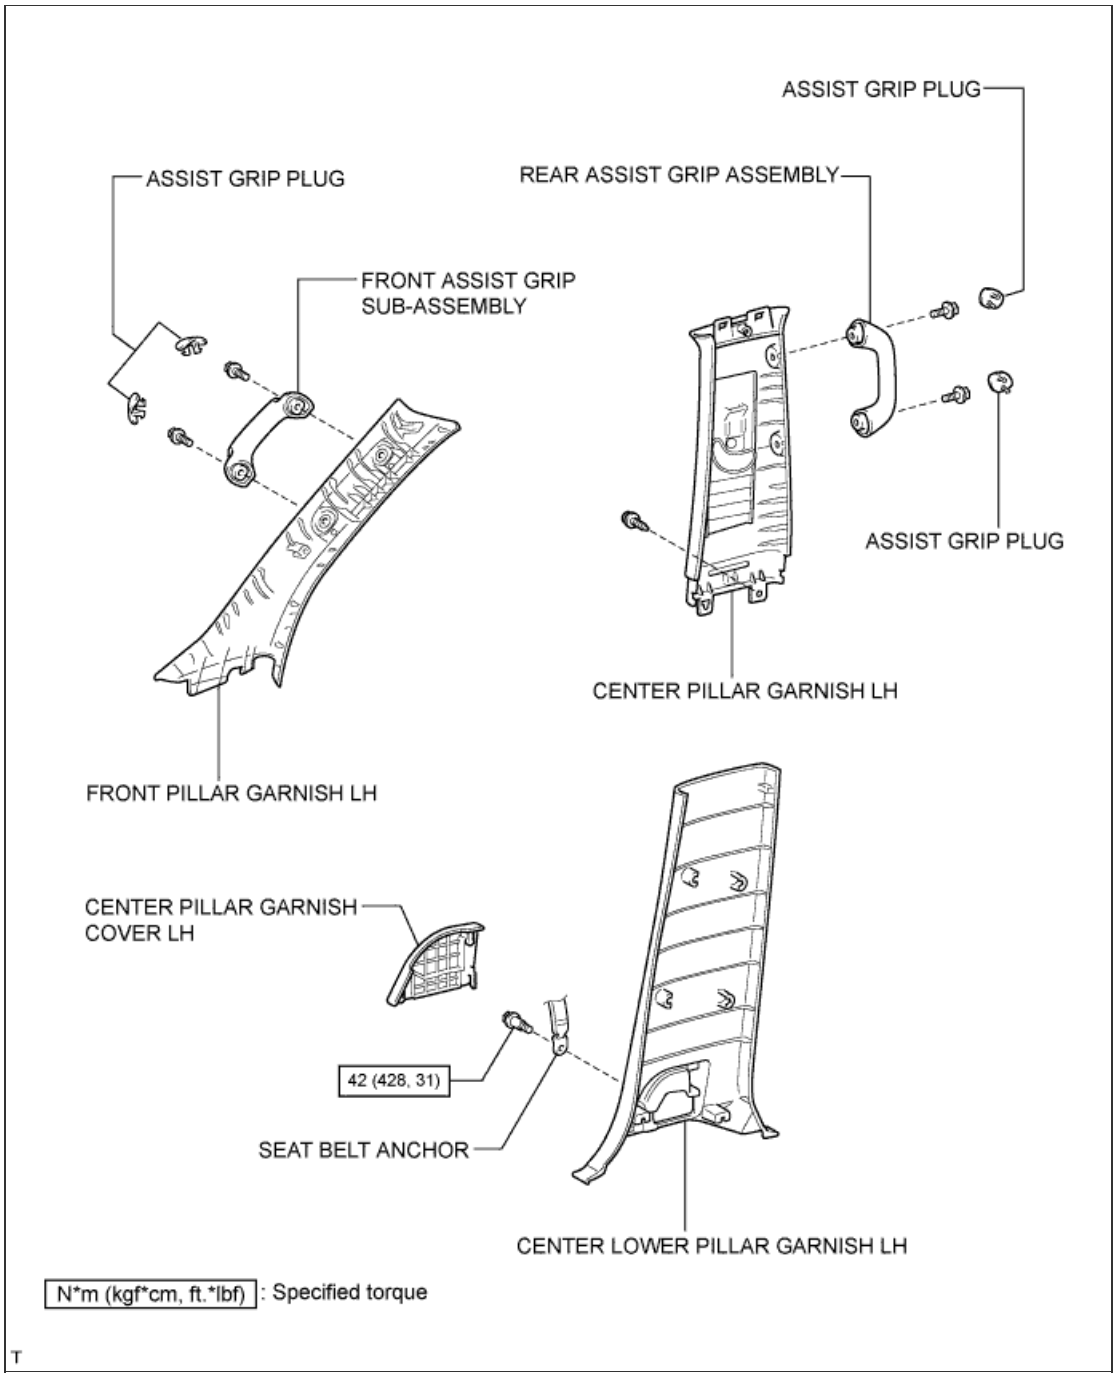
ASSIST GRIP PLUG
ASSIST GRIP PLUG
REAR ASSIST GRIP ASSEMBLY
FRONT ASSIST GRIP SUB-ASSEMBLY
ASSIST GRIP PLUG
CENTER PILLAR GARNISH LH
FRONT PILLAR GARNISH LH
CENTER PILLAR GARNISH COVER LH
42 (428, 31)
SEAT BELT ANCHOR
CENTER LOWER PILLAR GARNISH LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T

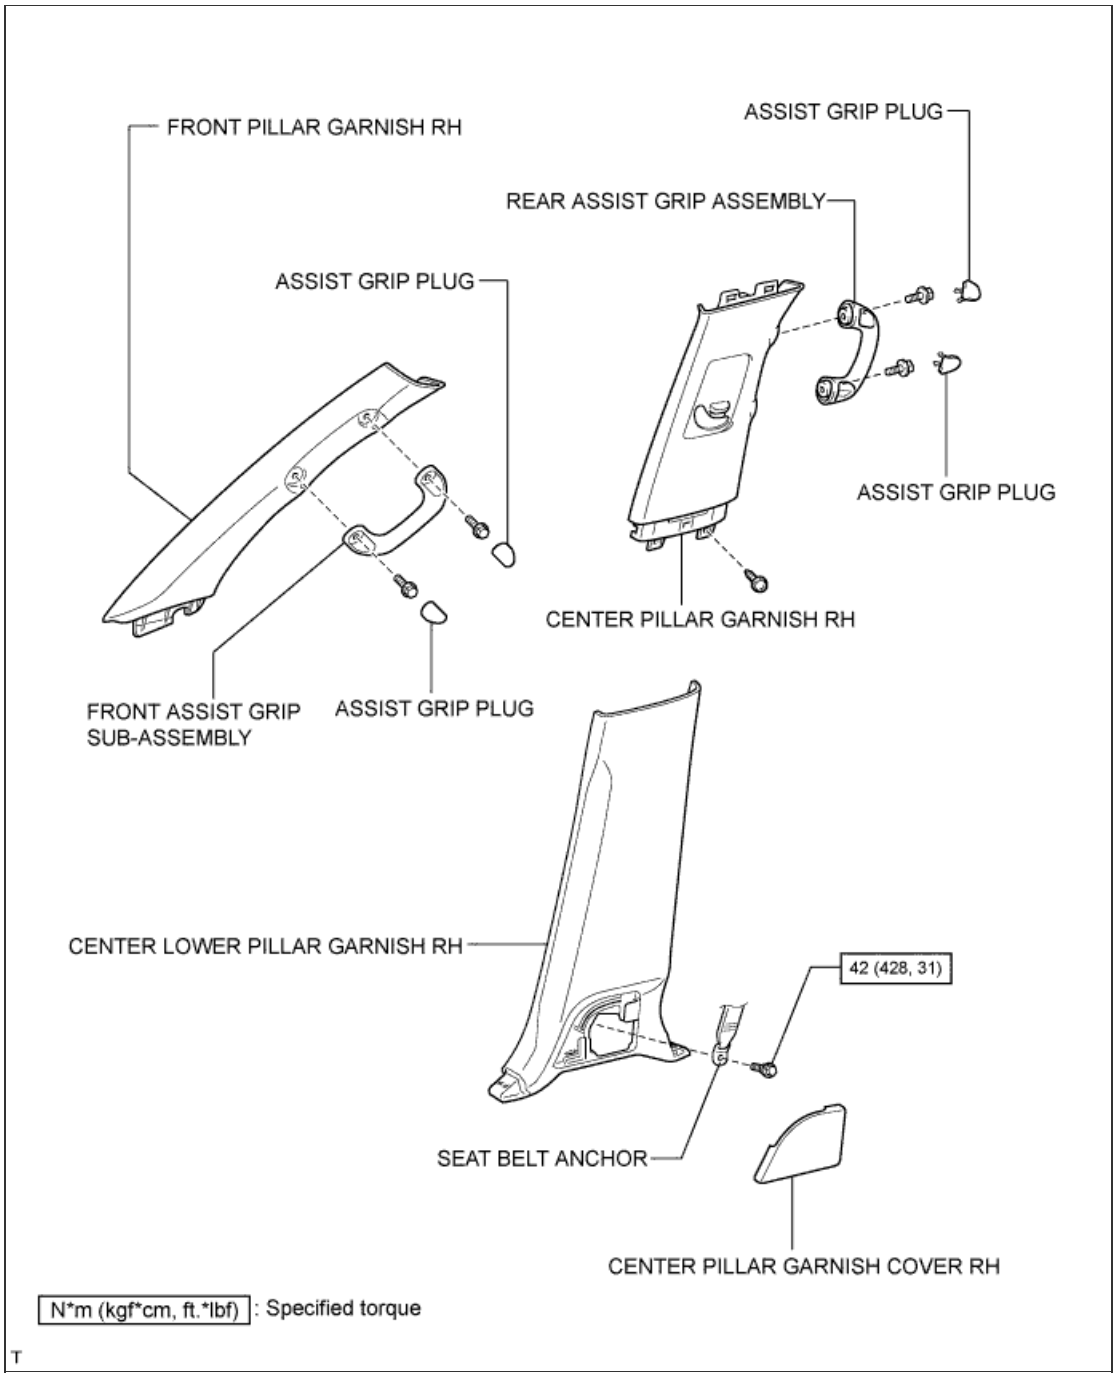
FRONT PILLAR GARNISH RH
ASSIST GRIP PLUG
REAR ASSIST GRIP ASSEMBLY
ASSIST GRIP PLUG
ASSIST GRIP PLUG
CENTER PILLAR GARNISH RH
FRONT ASSIST GRIP SUB-ASSEMBLY
ASSIST GRIP PLUG
CENTER LOWER PILLAR GARNISH RH
42 (428, 31)
SEAT BELT ANCHOR
CENTER PILLAR GARNISH COVER RH
N*m (kgf*cm, ft.*lbf) : Specified torque
T


w/ Rear No. 2 Seat, except Face to Face Seat Type:

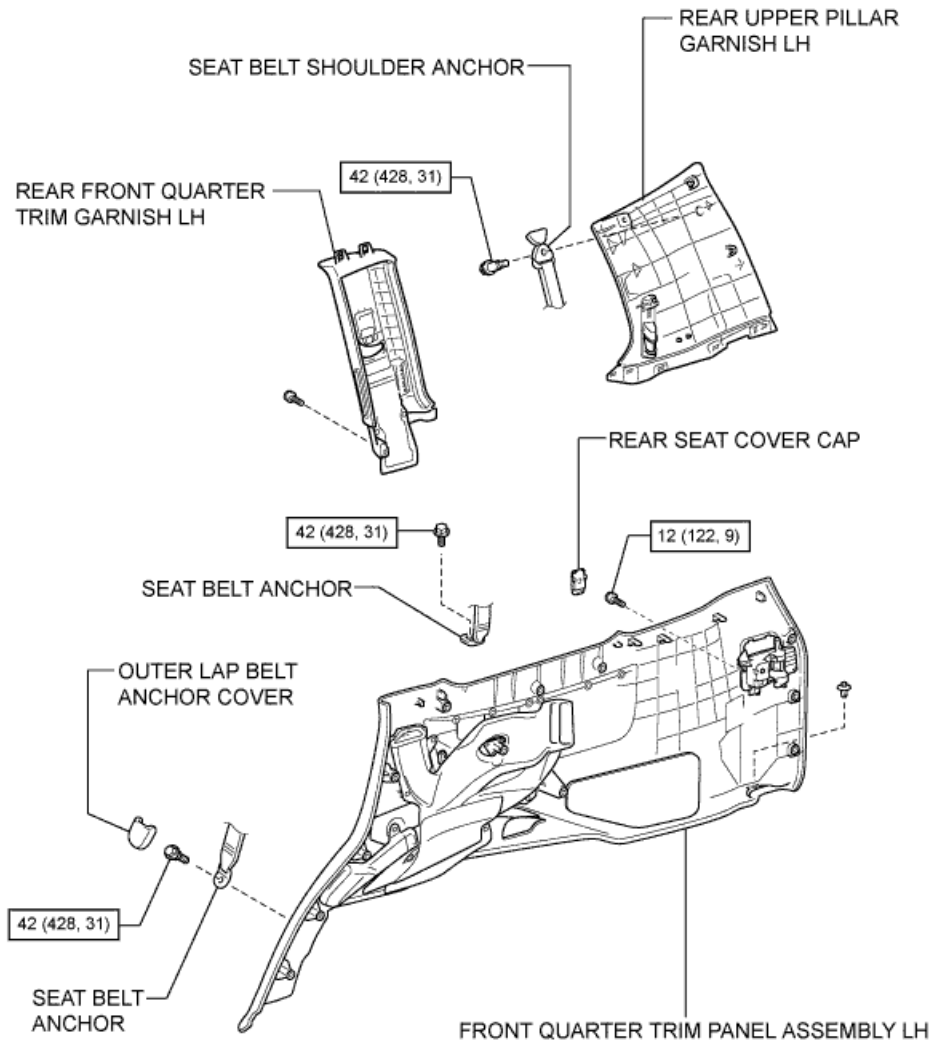

N*m (kgf*cm, ft.*lbf) : Specified torque

T

w/ Rear No. 2 Seat, except Face to Face Seat Type:

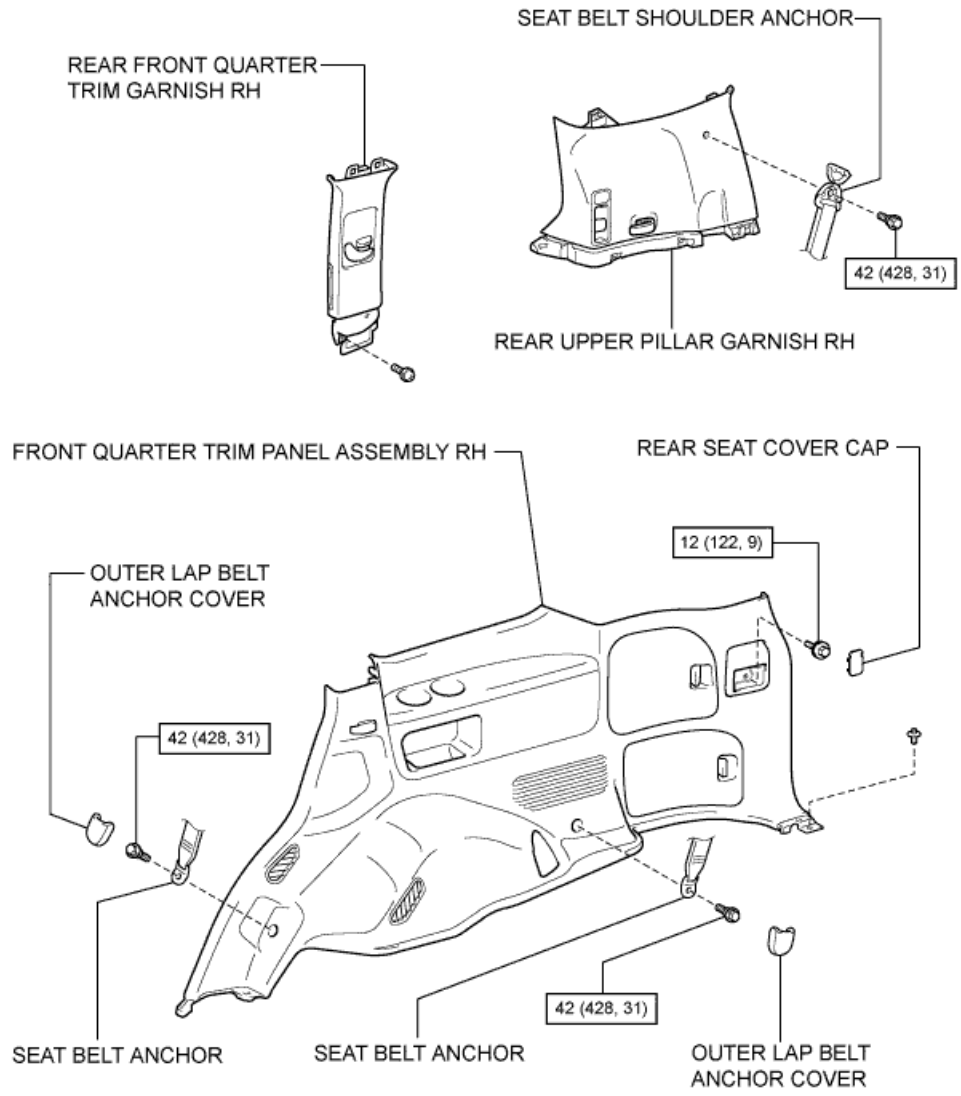


N*m (kgf*cm, ft.*lbf) : Specified torque

T

w/ Rear No. 2 Seat, for Face to Face Seat Type:

w/o Rear No. 2 Seat:

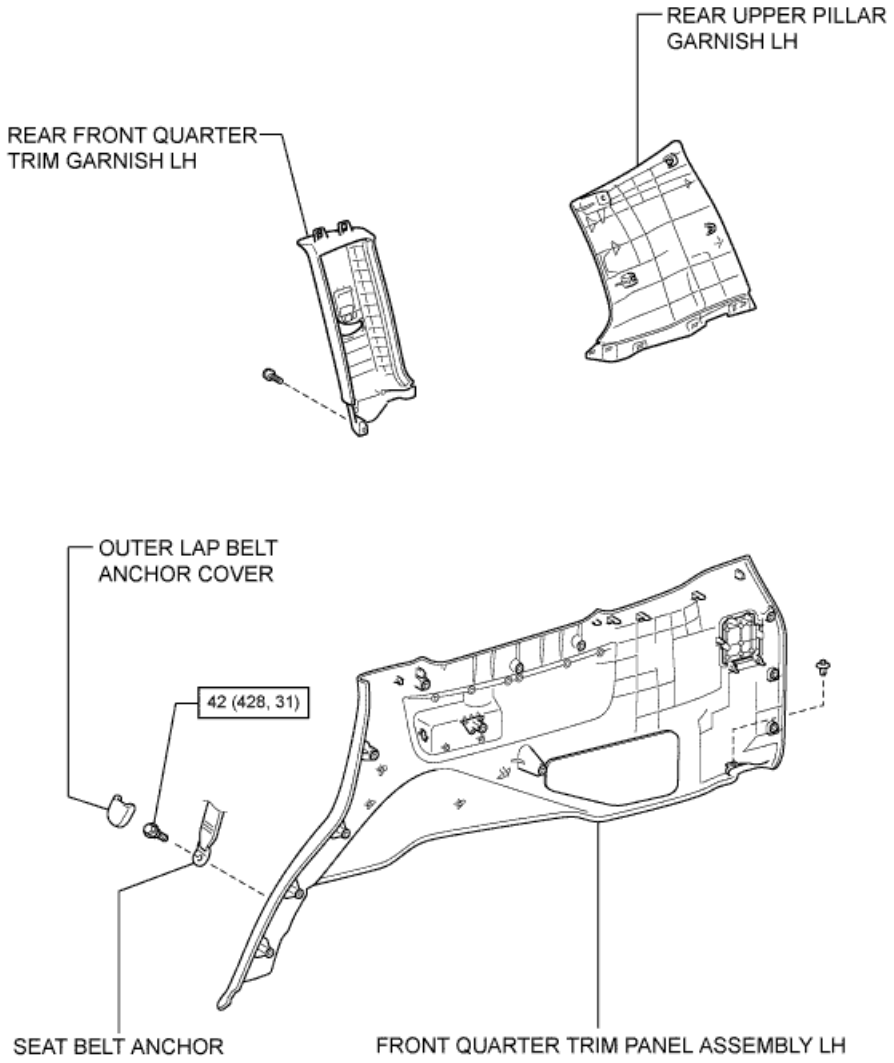


N*m (kgf*cm, ft.*lbf) : Specified torque

T

w/ Rear No. 2 Seat, for Face to Face Seat Type:


w/o Rear No. 2 Seat:

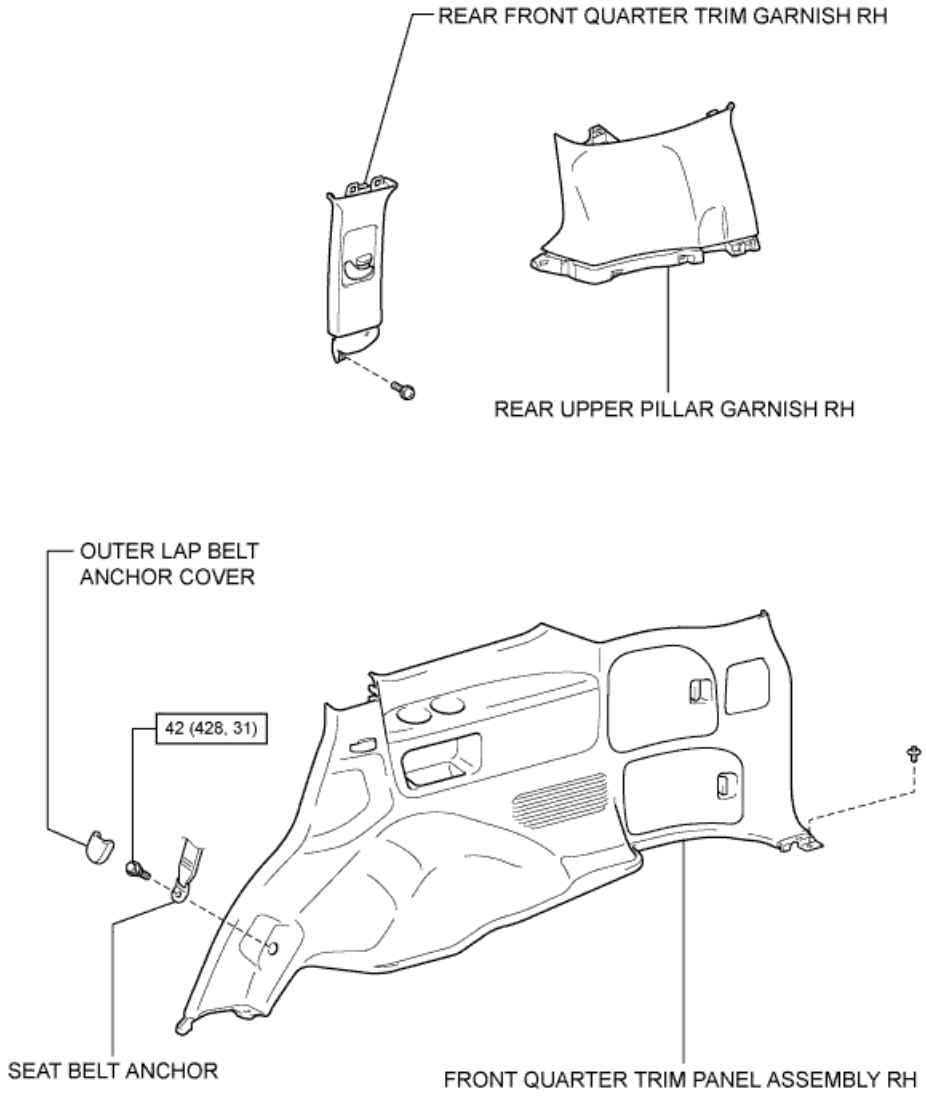


N*m (kgf*cm, ft.*lbf) : Specified torque

T


w/ Rear No. 2 Seat, except Face to Face Seat Type:

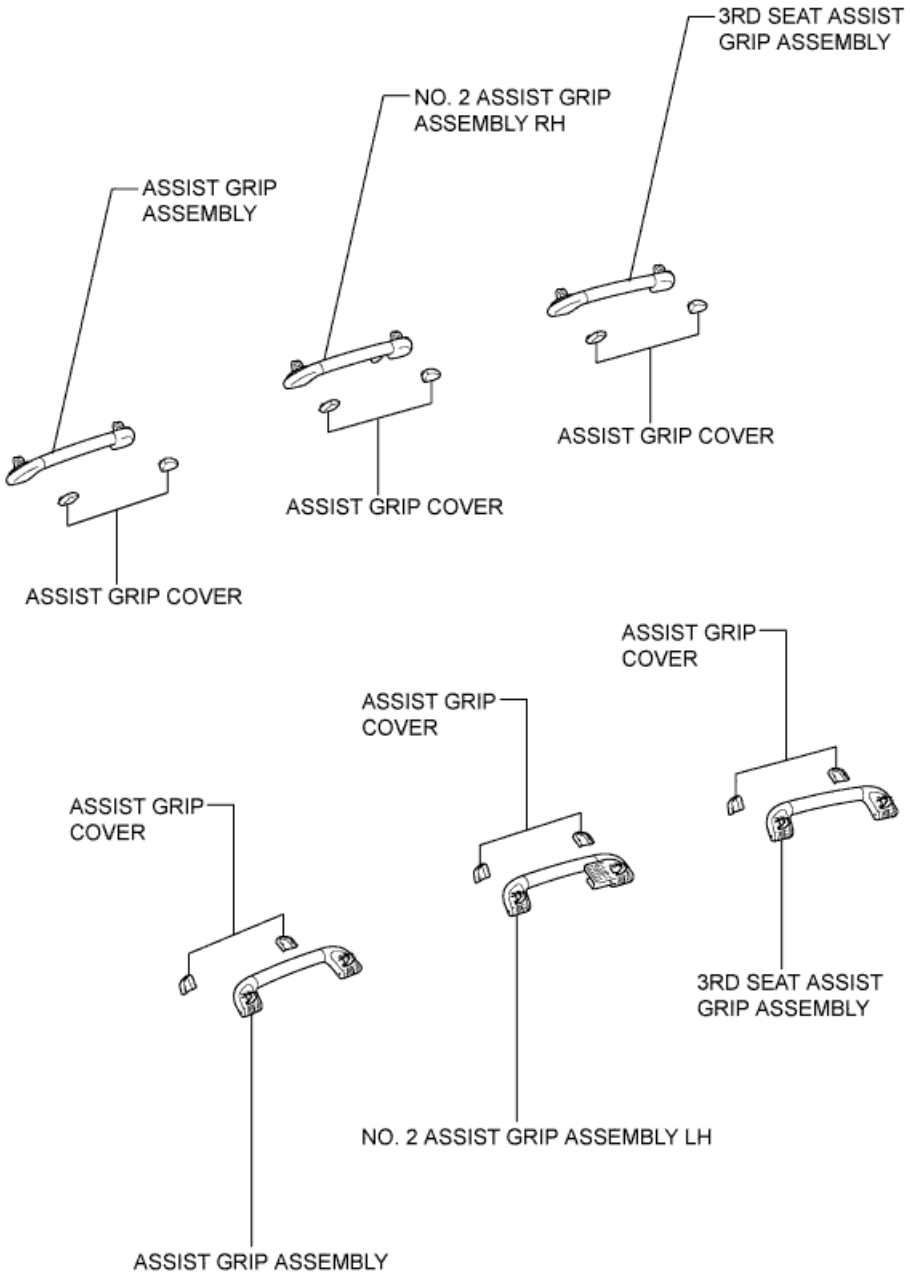


w/o Rear No. 2 Seat:

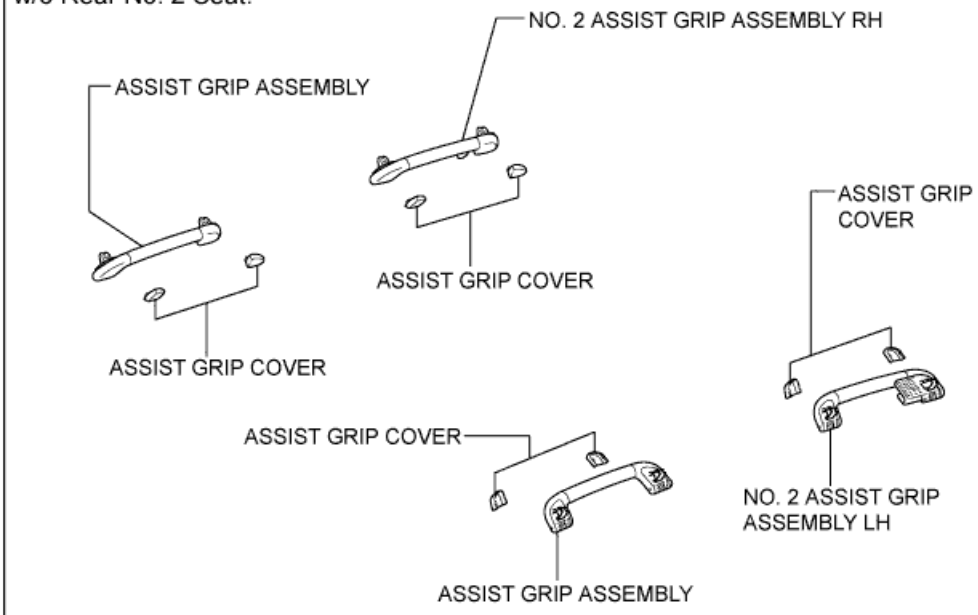


w/ Rear No. 2 Seat, for Face to Face Seat Type:

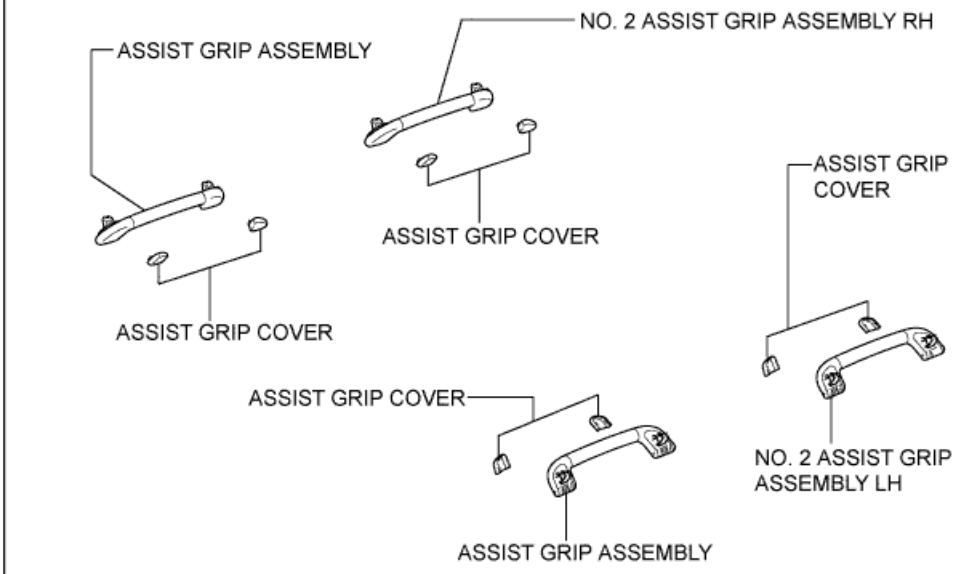


w/ Sub Visor:

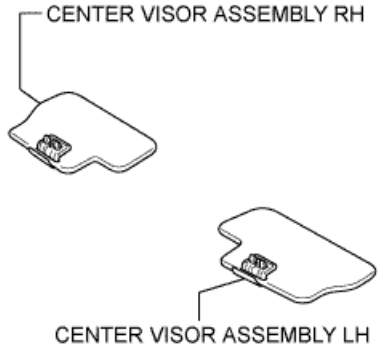

for 3 Person Seat Type Rear No. 2 Seat:

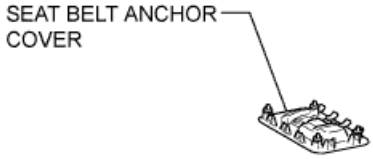


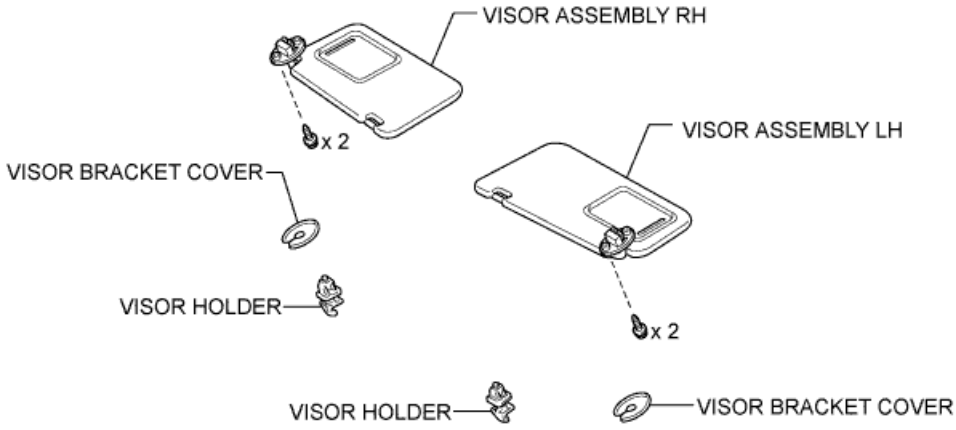


w/ EC Mirror:




w/ Rain Sensor:





for 3 Person Seat Type Rear No. 2 Seat:

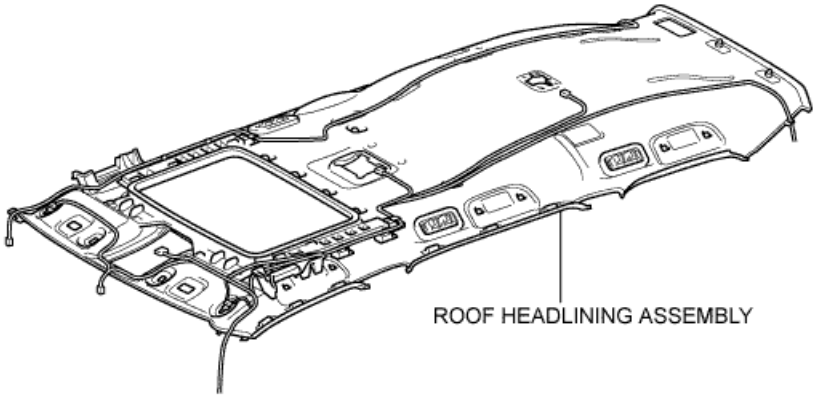


except 3 Person Seat Type Rear No. 2 Seat:

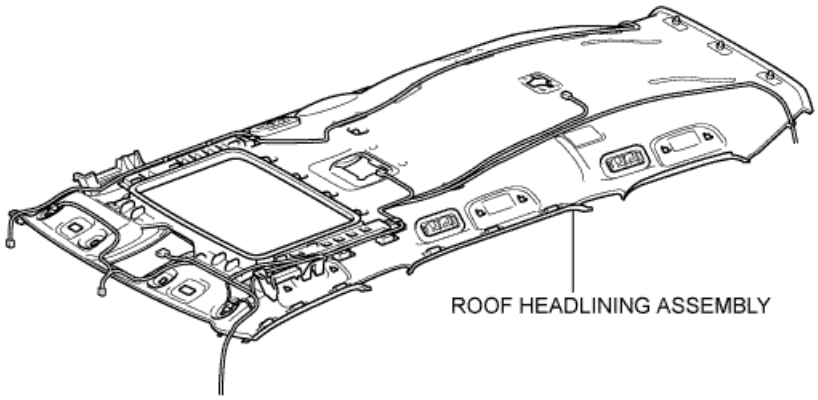

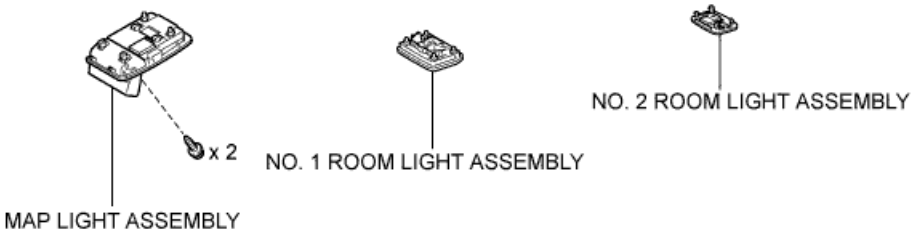


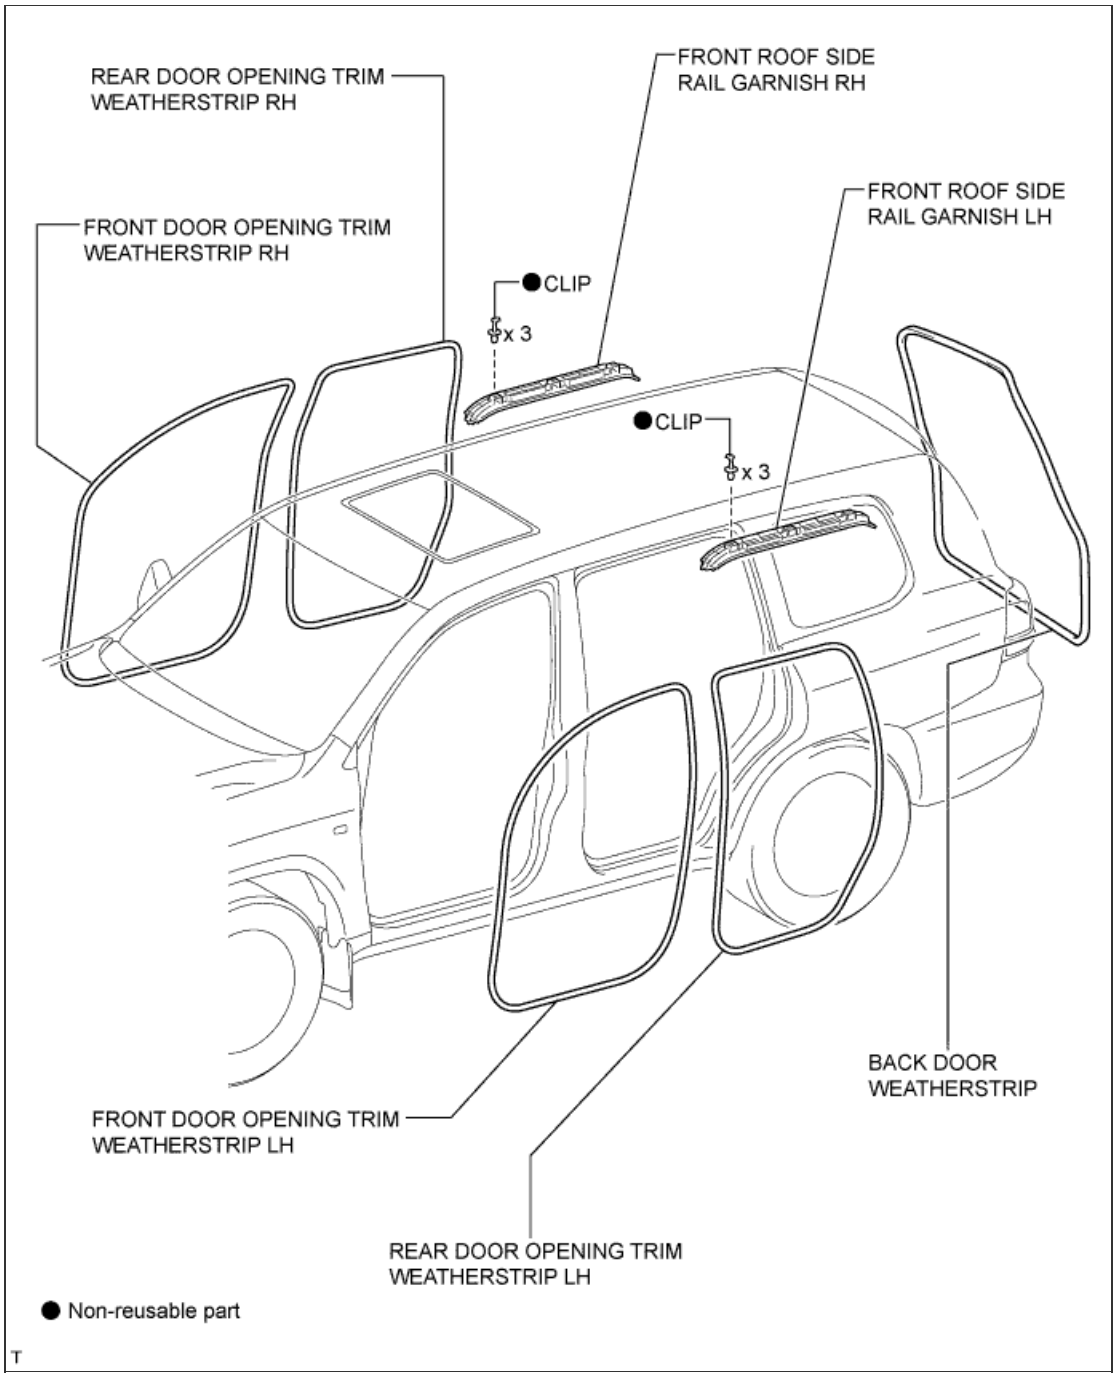
REAR DOOR OPENING TRIM WEATHERSTRIP RH
FRONT ROOF SIDE RAIL GARNISH RH
FRONT ROOF SIDE RAIL GARNISH LH
FRONT DOOR OPENING TRIM WEATHERSTRIP RH
CLIP
x 3
CLIP
x 3
BACK DOOR WEATHERSTRIP
FRONT DOOR OPENING TRIM WEATHERSTRIP LH
REAR DOOR OPENING TRIM WEATHERSTRIP LH
Non-reusable part

T

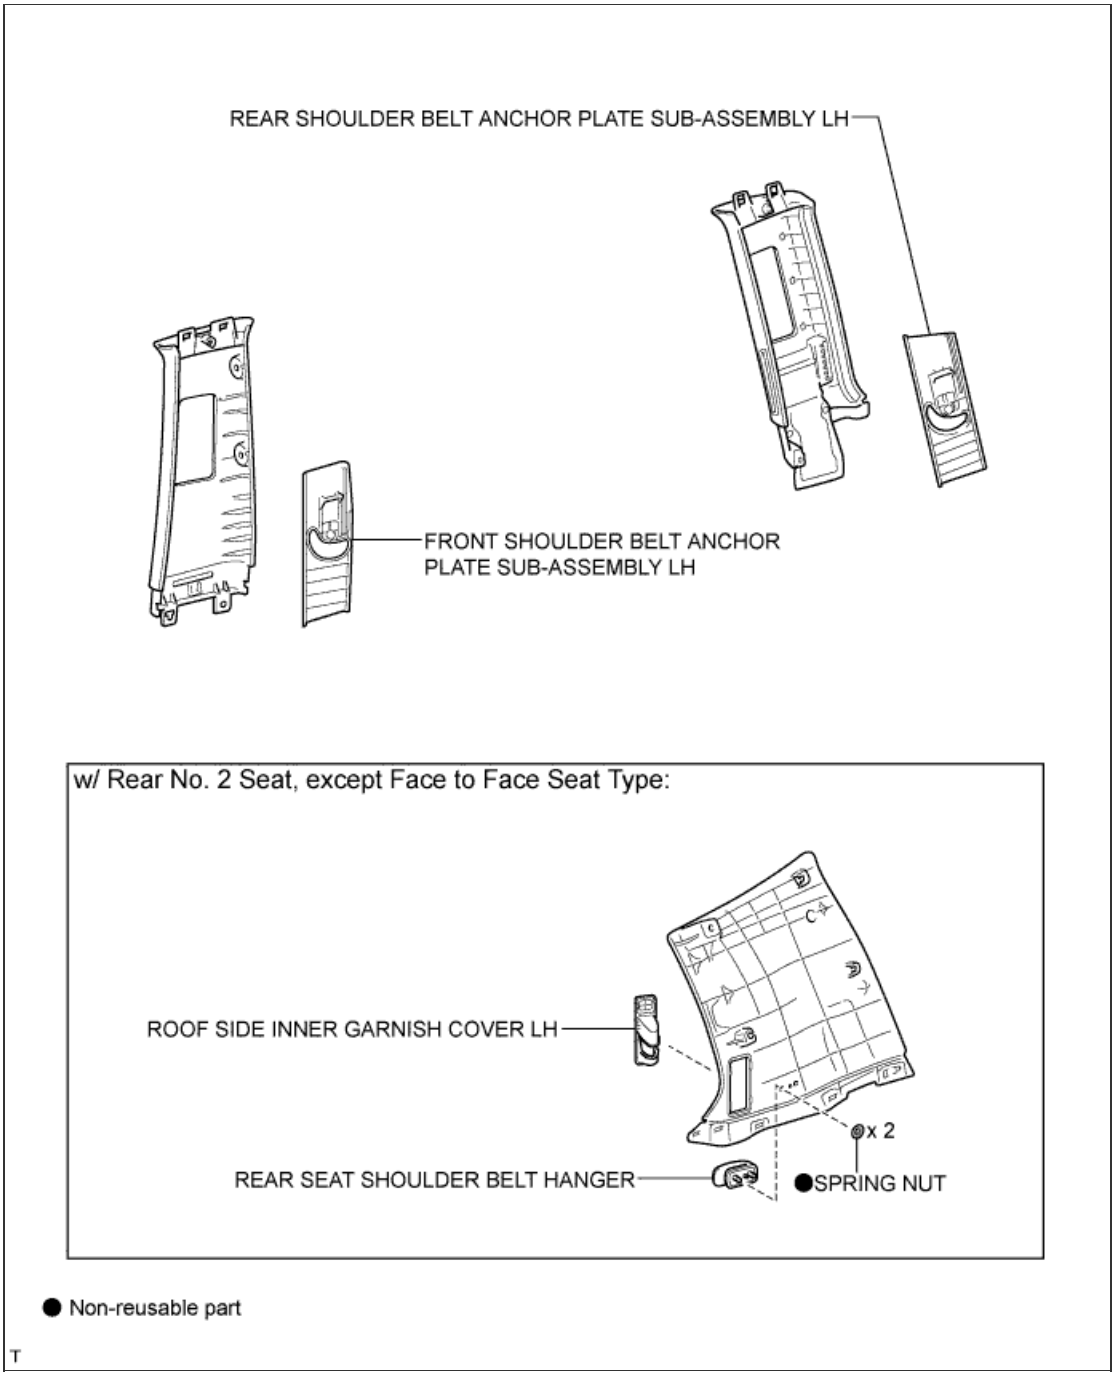
REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH
FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH
w/ Rear No. 2 Seat, except Face to Face Seat Type:
ROOF SIDE INNER GARNISH COVER LH
x 2
REAR SEAT SHOULDER BELT HANGER
SPRING NUT
Non-reusable part


T

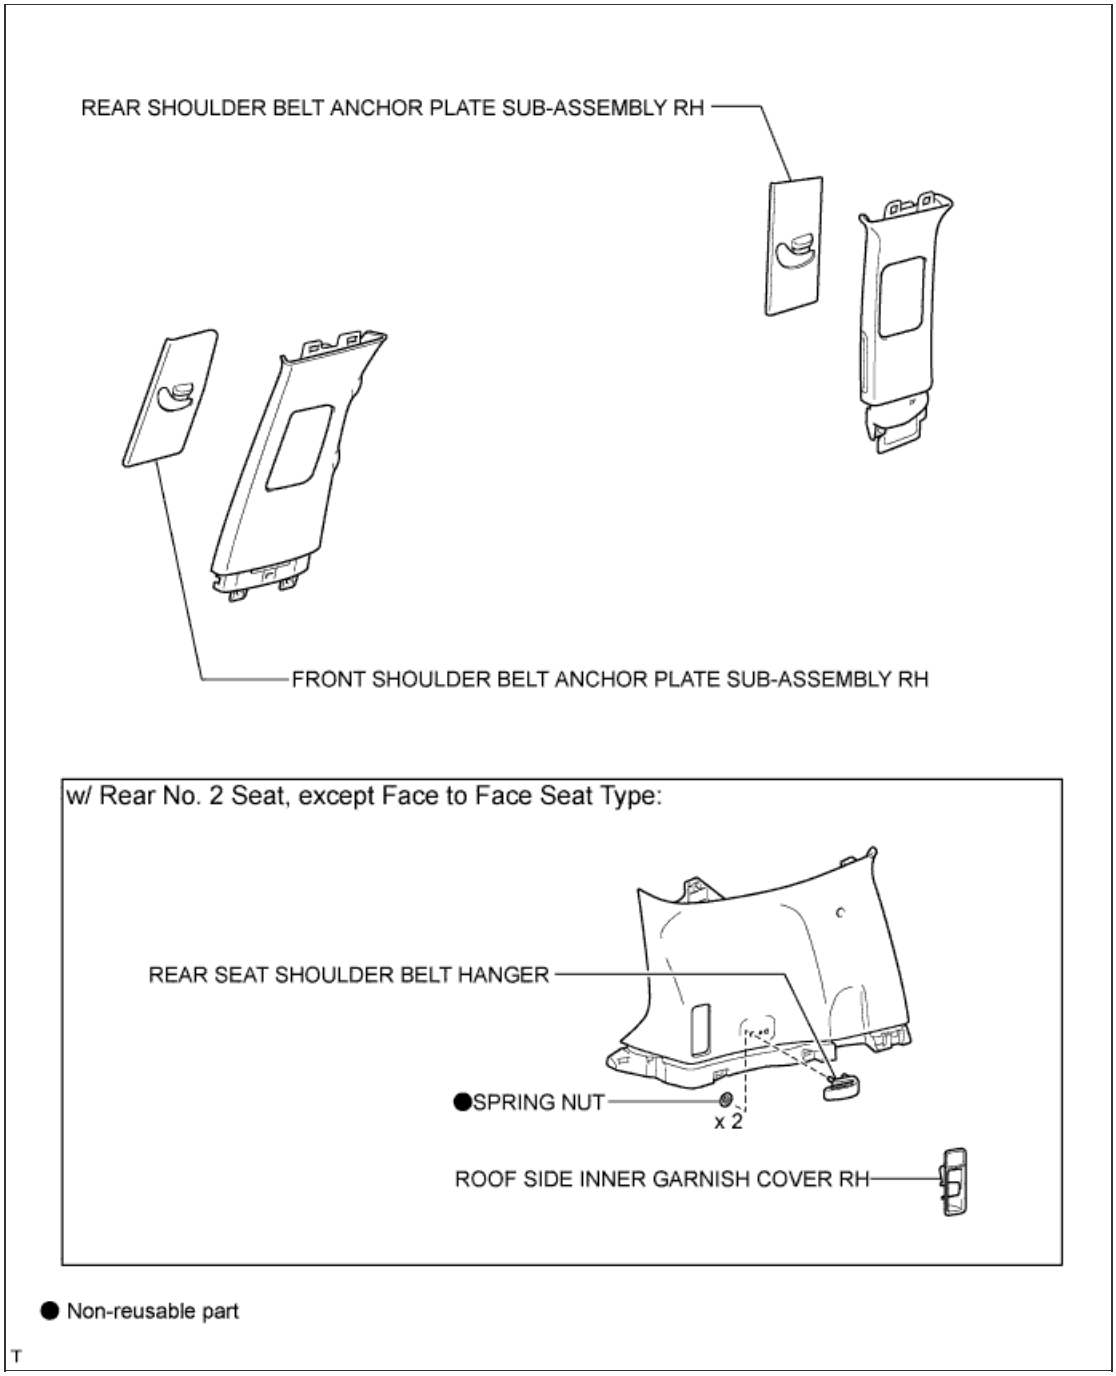


● Non-reusable part

T

w/ Rear No. 2 Seat, except Face to Face Seat Type:

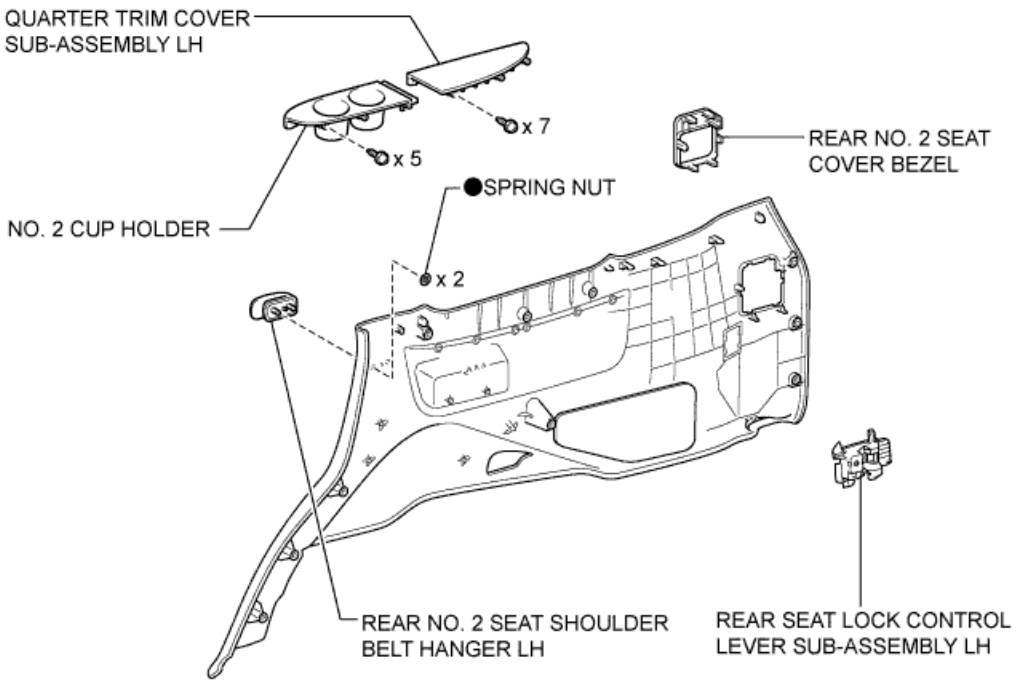


w/ Rear Heater:

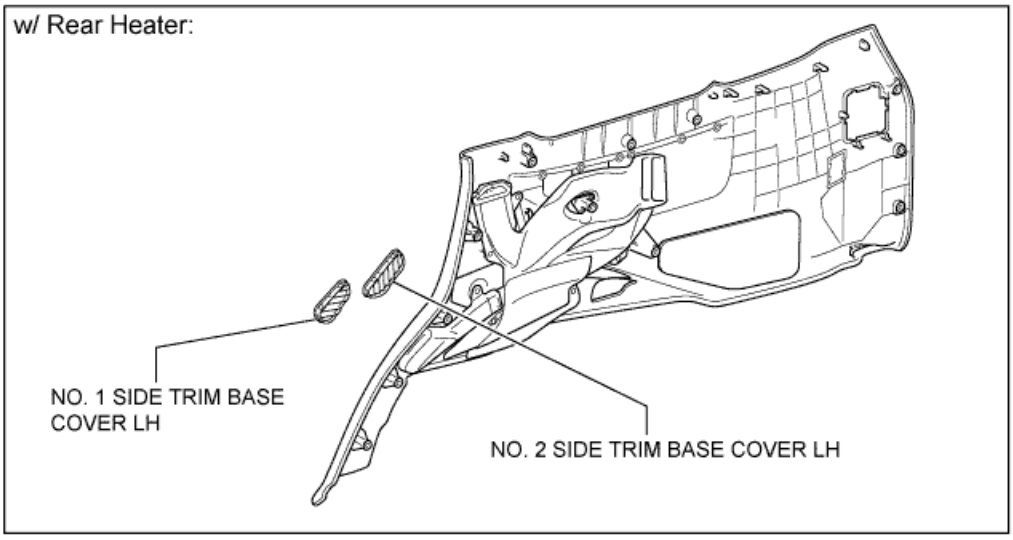


● Non-reusable part

w/ Rear No. 2 Seat, except Face to Face Seat Type:

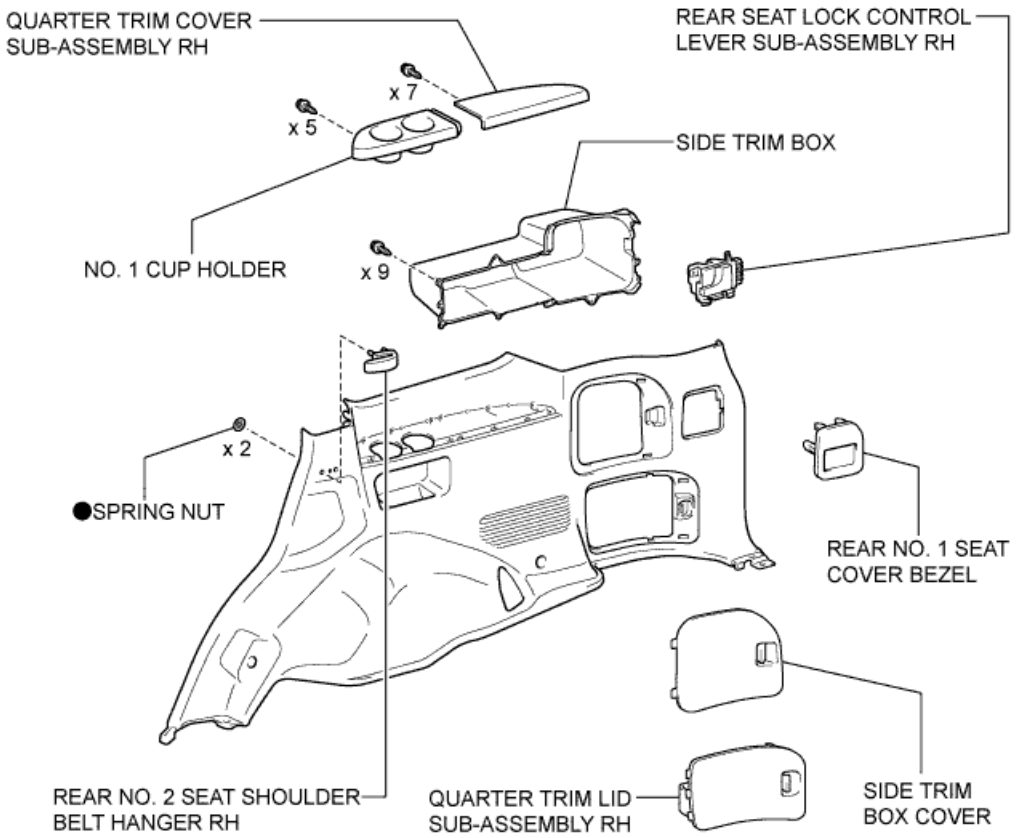


w/ Rear Heater:

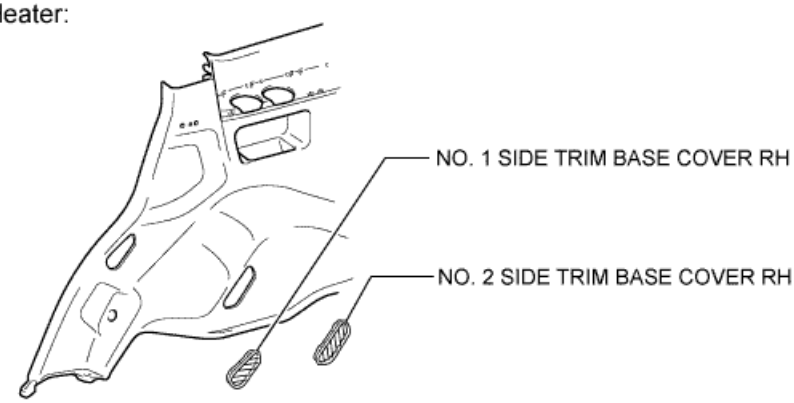

● Non-reusable part

w/ Rear No. 2 Seat, for Face to Face Seat Type:

w/o Rear No. 2 Seat:

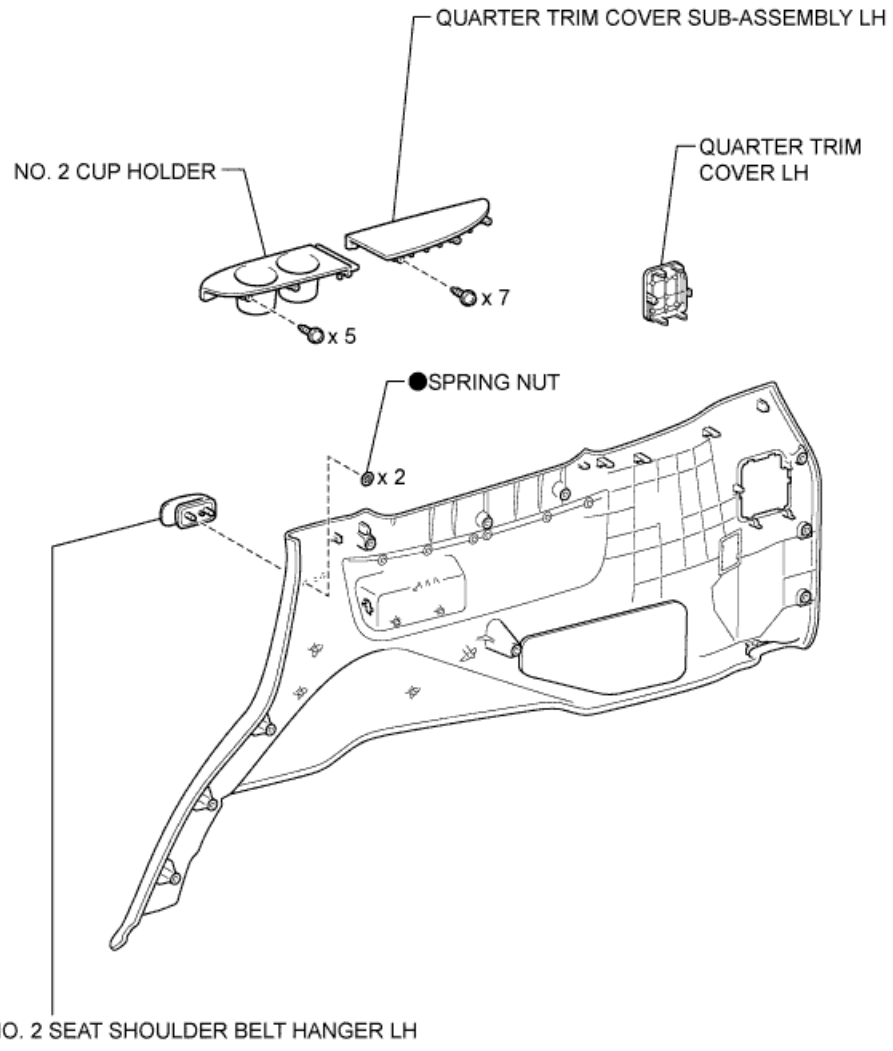


● Non-reusable part

T


w/ Rear No. 2 Seat, for Face to Face Seat Type:

w/o Rear No. 2 Seat:

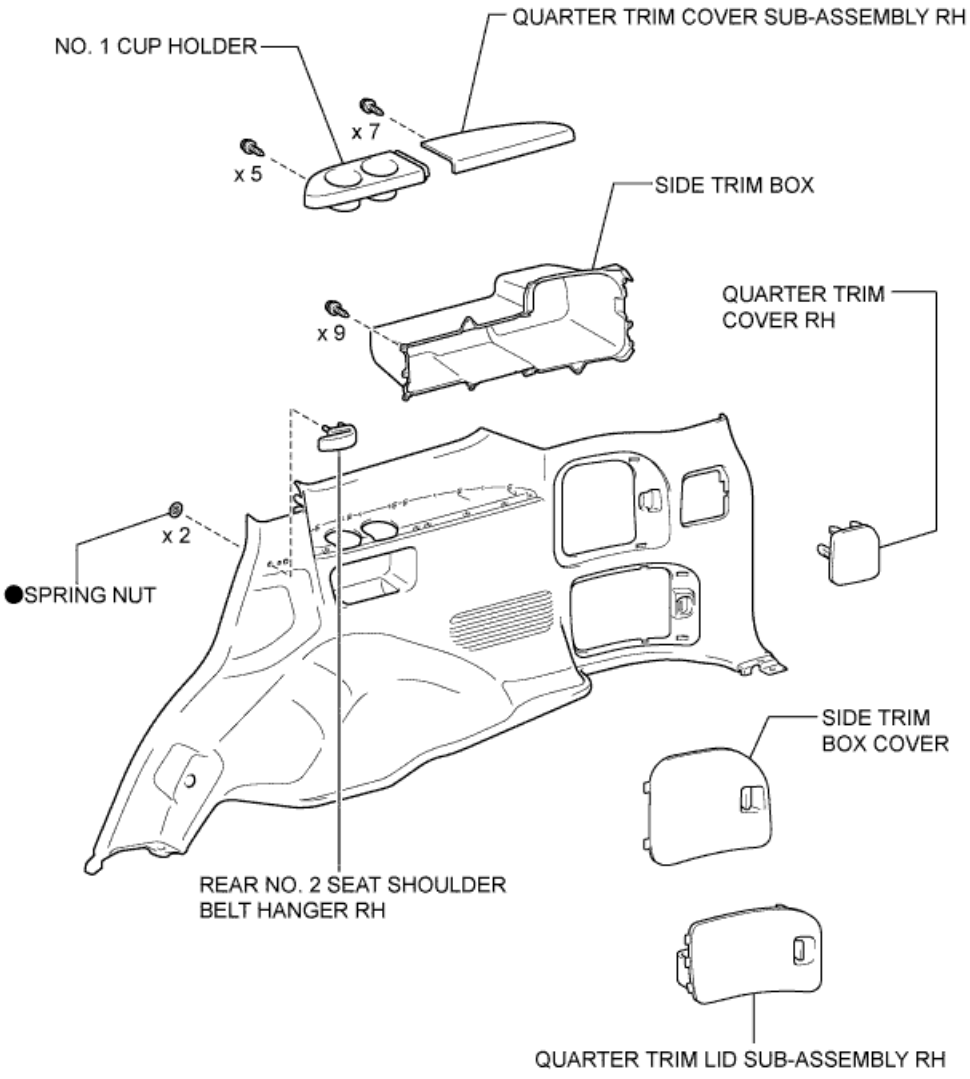



● Non-reusable part



T

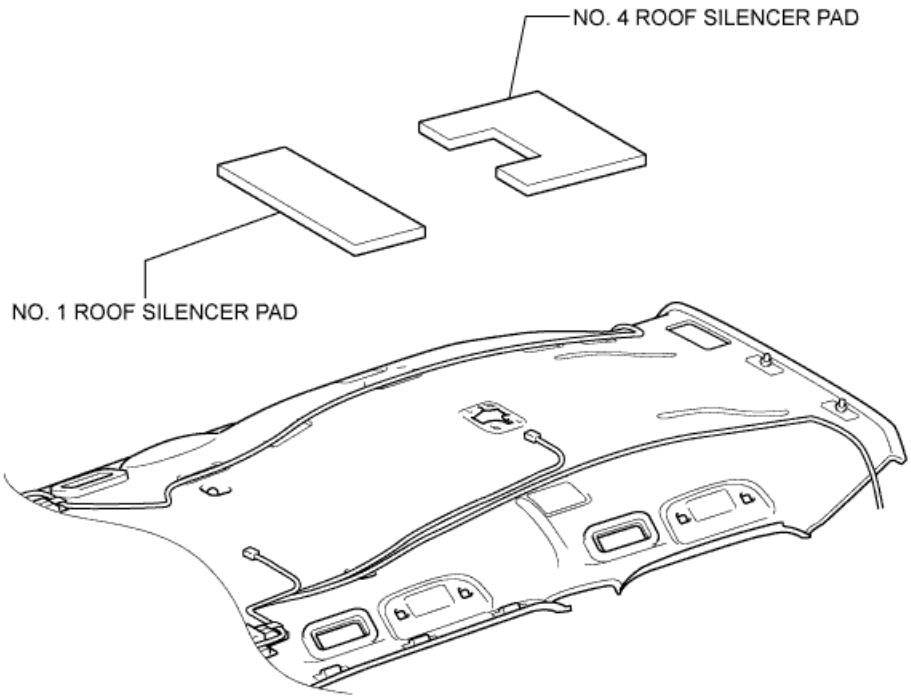


w/ Rear Air Conditioning System:

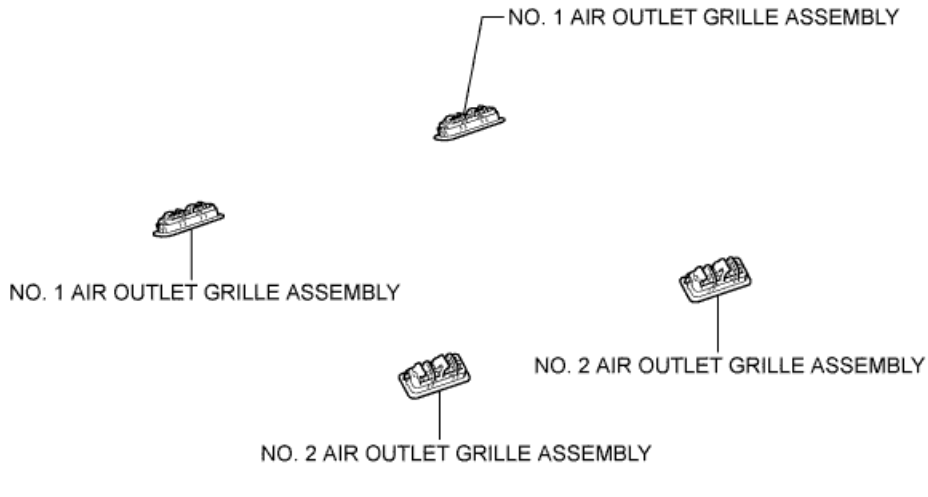

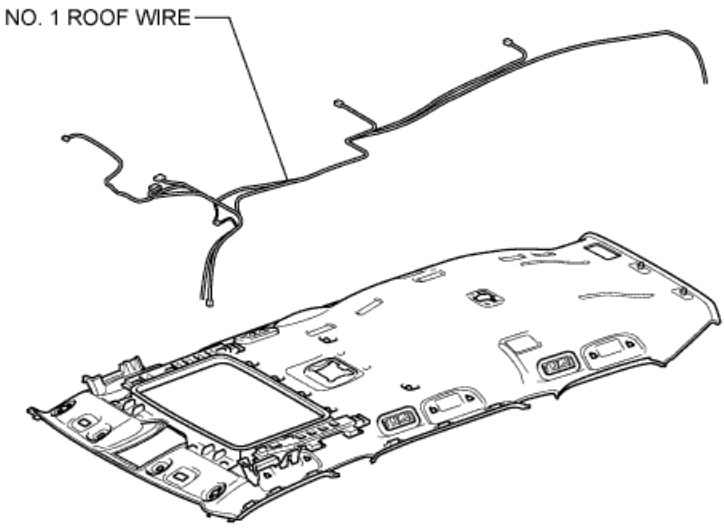

w/ EC Mirror:  	for LHD, w/ Rain Sensor:  	for RHD, w/ Rain Sensor: 
for LHD, w/ Rain Sensor, w/ EC Mirror:  	for RHD, w/ Rain Sensor, w/ EC Mirror:  	

T

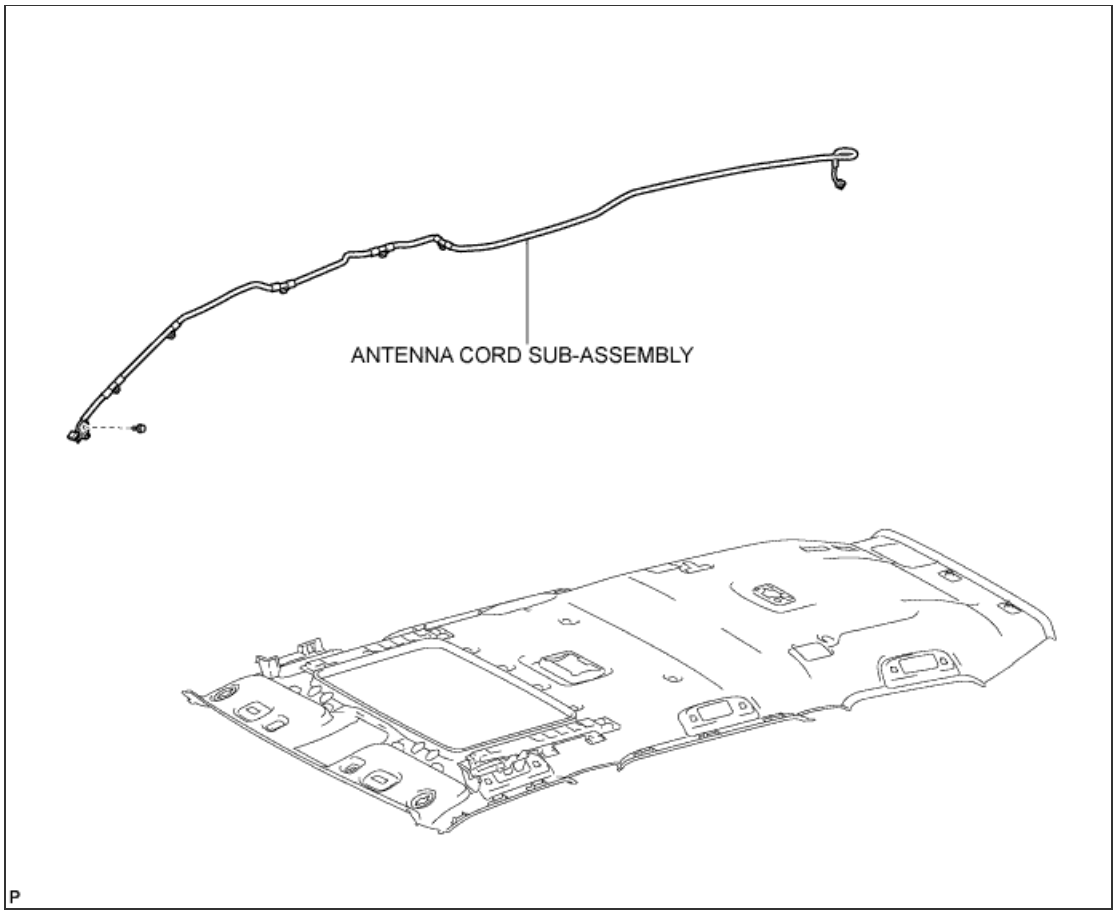
ANTENNA CORD SUB-ASSEMBLY
P

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

4. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).


5. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

6. REMOVE FRONT DOOR SCUFF PLATE LH

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

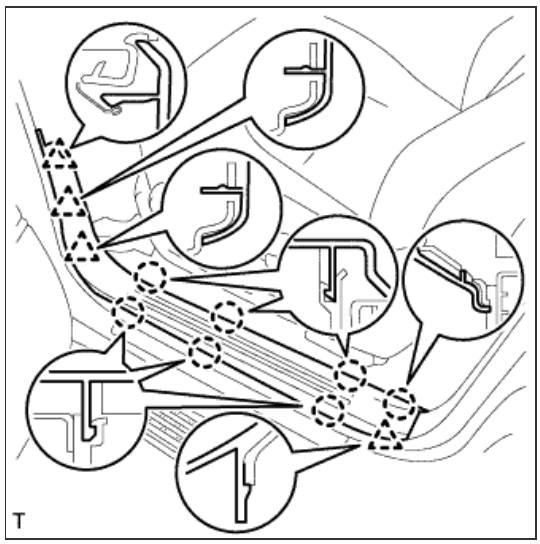

7. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

8. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

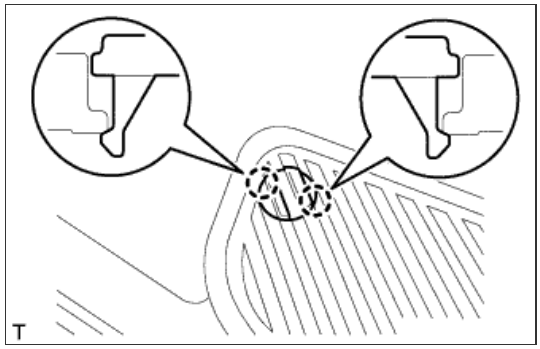

9. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

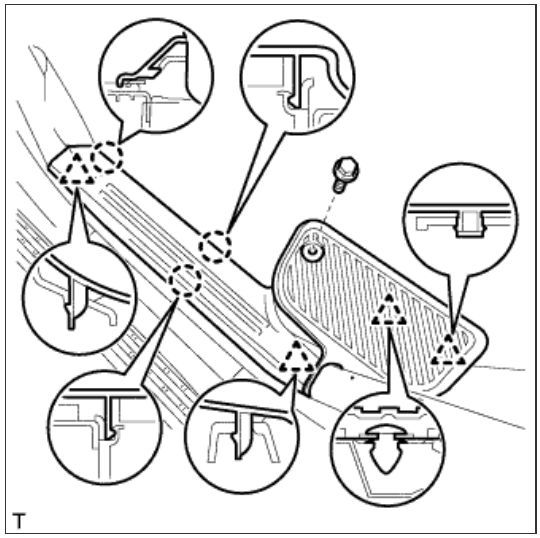


10. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

11. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

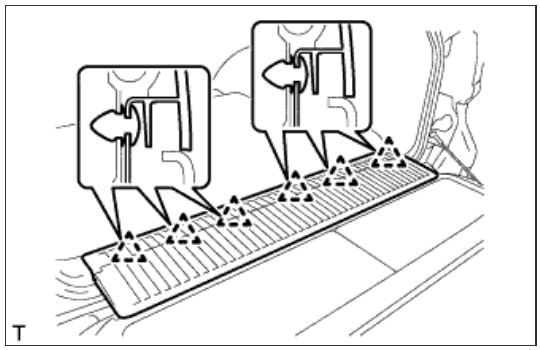


12. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY

HINT:


Use the same procedure to remove the front assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

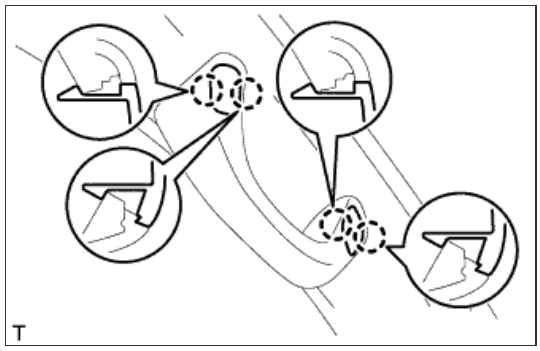

b. Remove the 2 bolts.


c. Detach the 2 claws and remove the front assist grip.

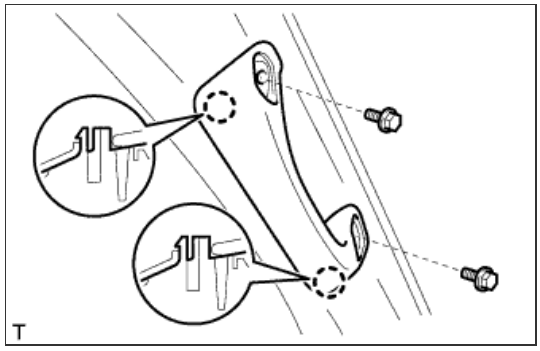

13. REMOVE FRONT PILLAR GARNISH LH

a. Detach the clip 3 guides, and remove the front pillar garnish.

b. for 9 Speakers:
Disconnect the speaker connector and then remove the front pillar garnish.

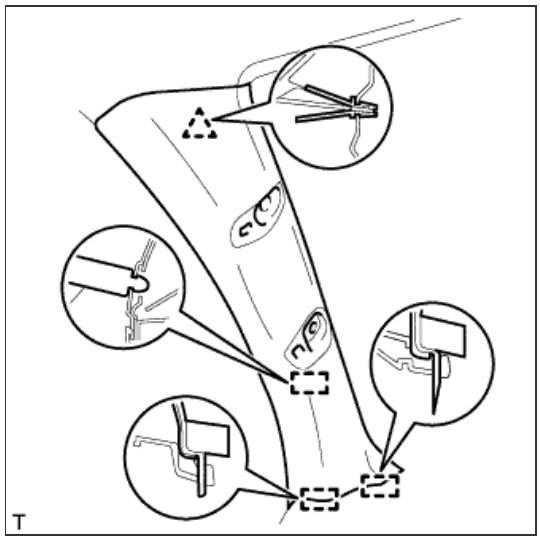


c. Protect the curtain shield airbag.

i. horoughly cover the airbag with a cloth or nylon sheet and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

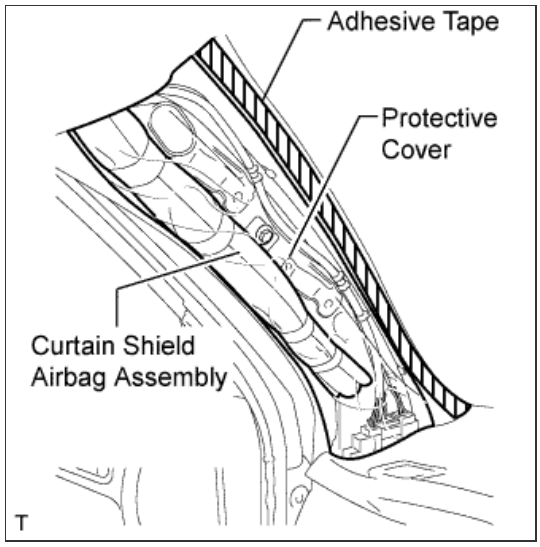

14. REMOVE FRONT PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

15. REMOVE CENTER PILLAR GARNISH COVER LH

HINT:

- **for Manual Seat:**
  When removing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When removing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Detach the 2 clips and 2 guides, and remove the cover.

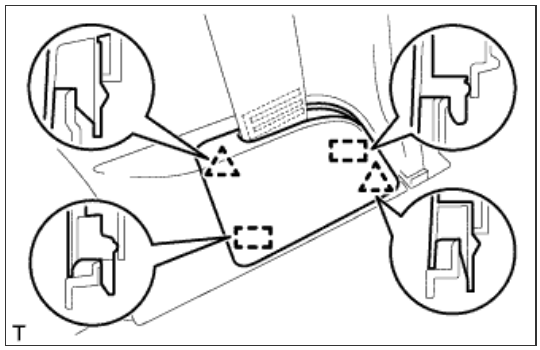

16. REMOVE CENTER PILLAR GARNISH COVER RH

HINT:

Use the same procedures described for the LH side.

17. REMOVE CENTER LOWER PILLAR GARNISH LH


HINT:

- **for Manual Seat:**
  When removing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When removing the center lower pillar garnish, connect the cable to the negative (-) battery terminal and operate the power seat


switch to move the front seat and seatback to the foremost upright position.

- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Remove the bolt and seat belt anchor.

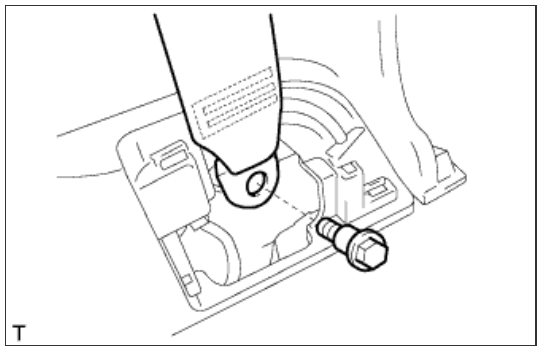

b. Detach the 2 claws and 7 clips, and remove the center lower pillar garnish.

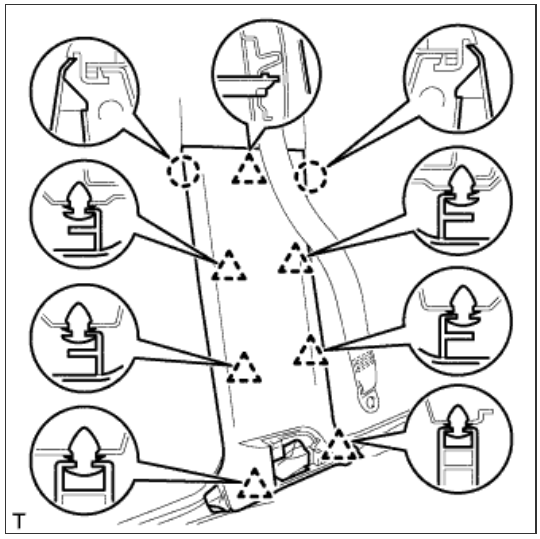

18. REMOVE CENTER LOWER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

19. REMOVE REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to remove the rear assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

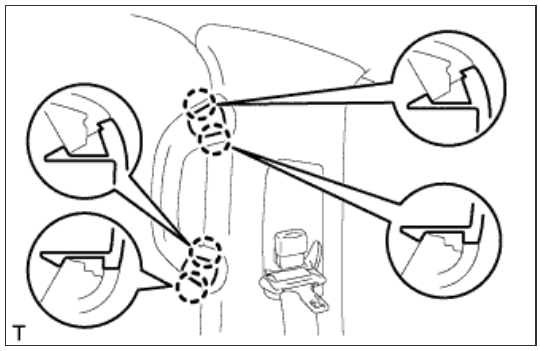

b. Remove the 2 bolts.

c. Detach the 2 claws and remove the rear assist grip.

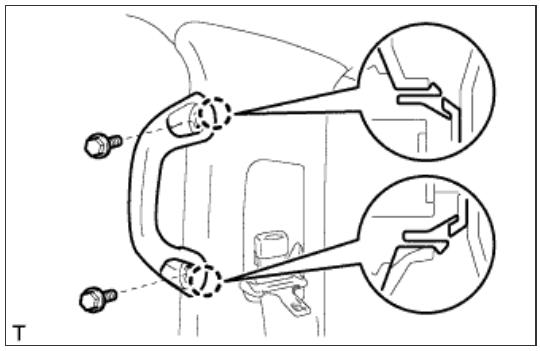


20. REMOVE CENTER PILLAR GARNISH LH

a. Remove the bolt.

b. Detach the 2 clips and 2 guides.

c. Pass the seat belt anchor through the center pillar garnish, and remove the center pillar garnish.

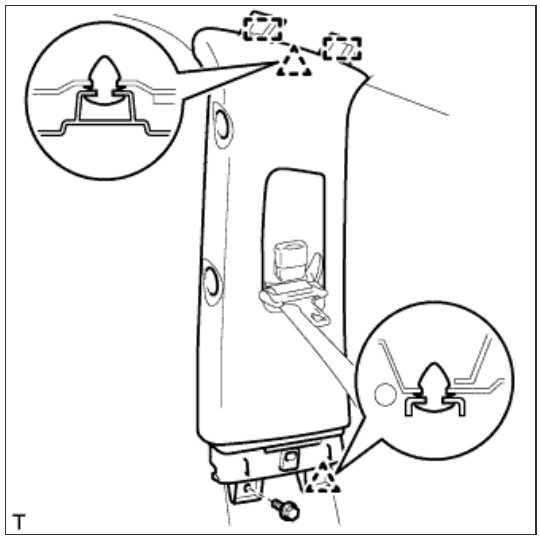

21. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

22. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


ape the screwdriver tip before use.

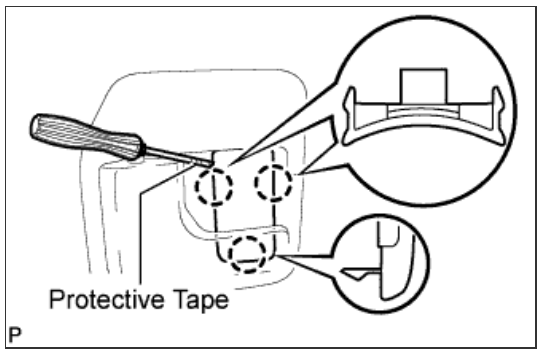


23. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front arter trim panel, operate the reclining ad ster release handle and move the No. 1 rear seat to the position shown in the illustration.

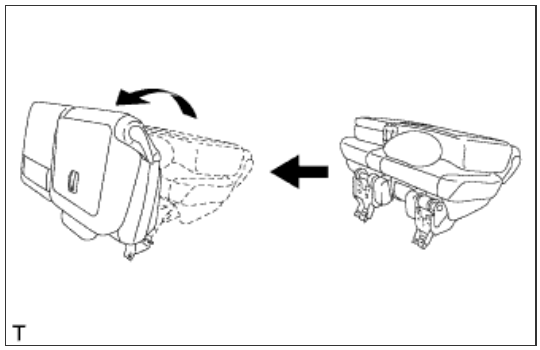


a. Detach the 3 claws and remove the cover.

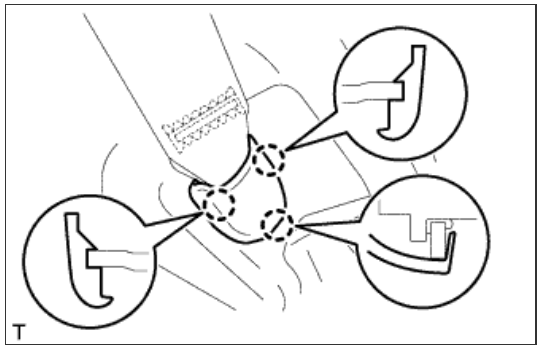

b. Remove the bolt and rear No. 1 seat belt anchor.

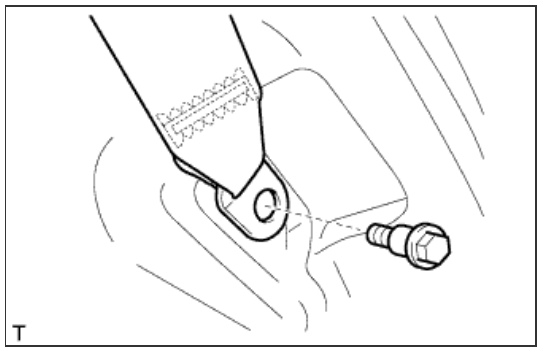

c. w/ Rear No. 2 Seat, except Face to Face Seat ype:
Remove the bolt and rear No. 2 seat belt anchor.

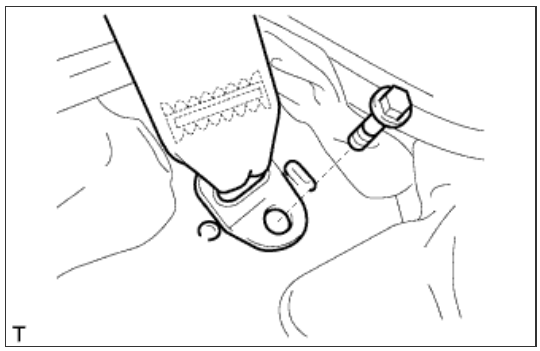


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the arter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the arter trim panel.

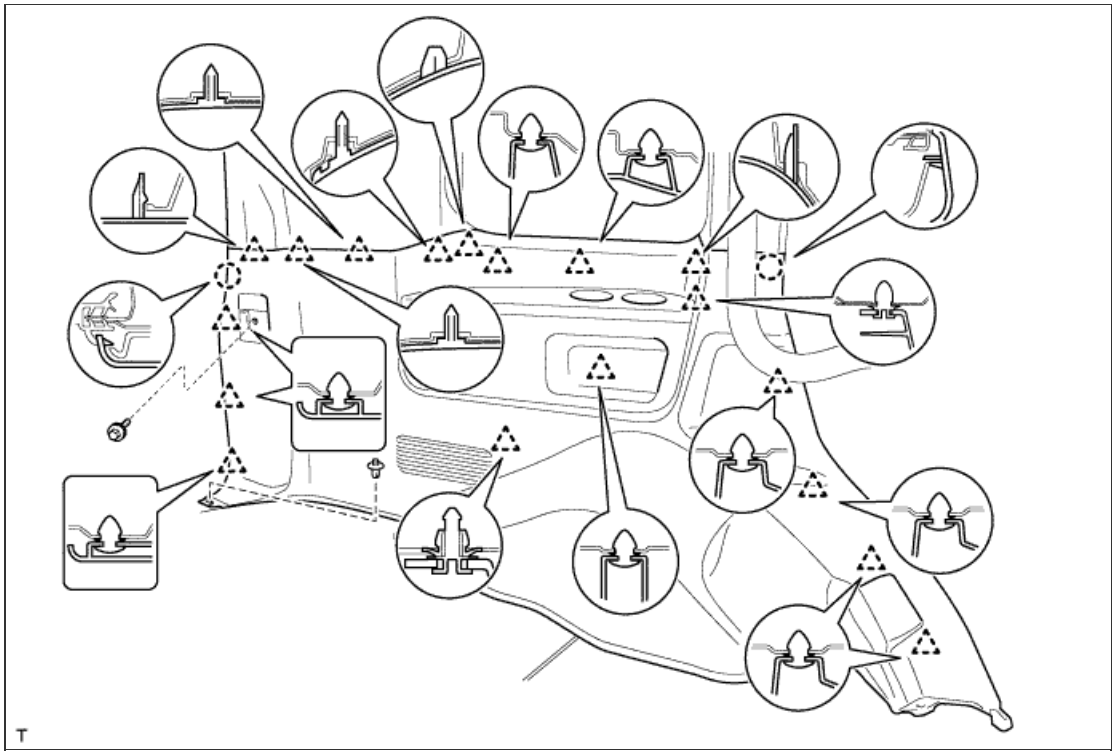

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the arter trim panel.

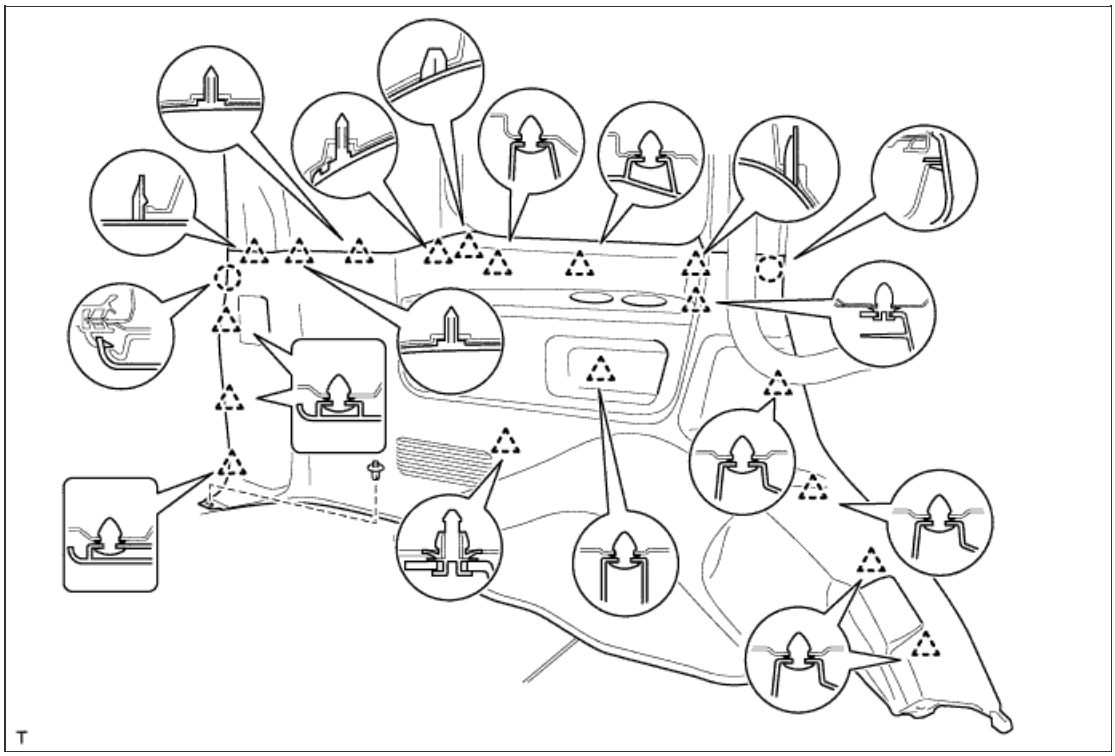


24. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:


When removing the front arter trim panel, operate the reclining ad ster release handle and move the No. 1 rear seat to the position shown in the illustration.

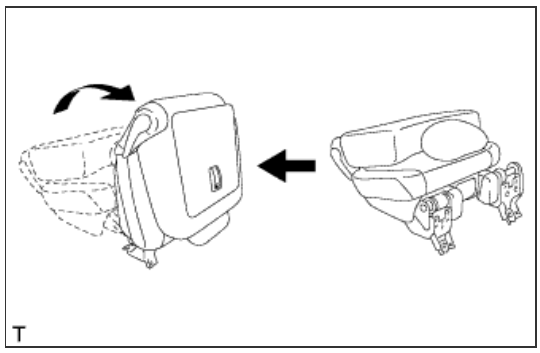


a. Detach the 3 claws and remove the cover.

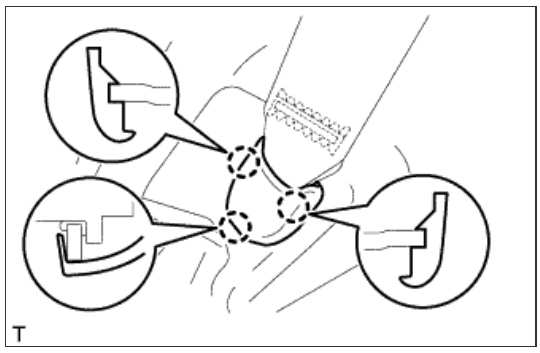

b. Remove the bolt and rear No. 1 seat belt anchor.

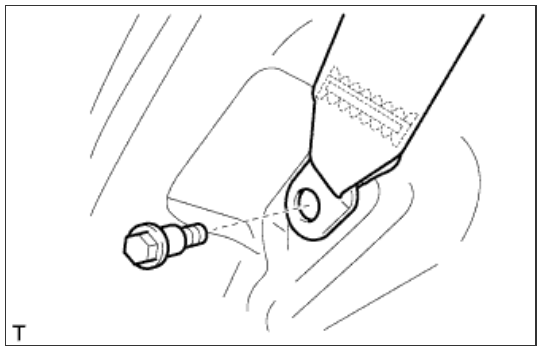


c. w/ Rear No. 2 Seat, except Face to Face Seat ype:

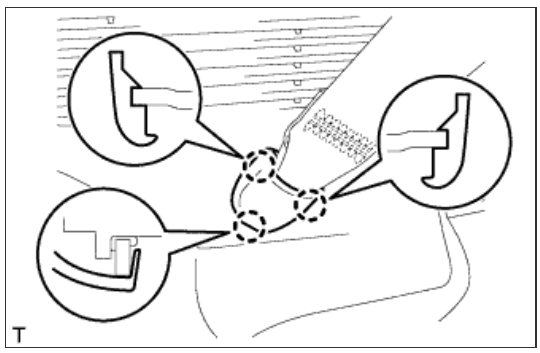

i. Detach the 3 claws and remove the cover.

ii. Remove the bolt and rear No. 2 seat belt anchor.

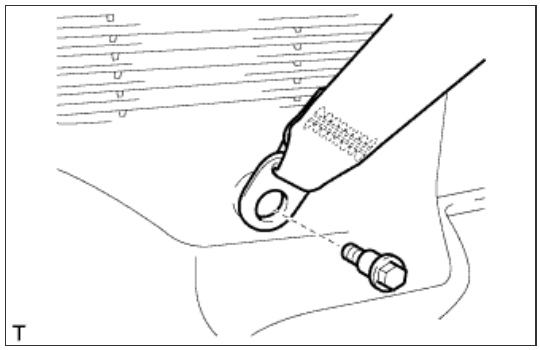


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 16 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the arter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the arter trim panel.

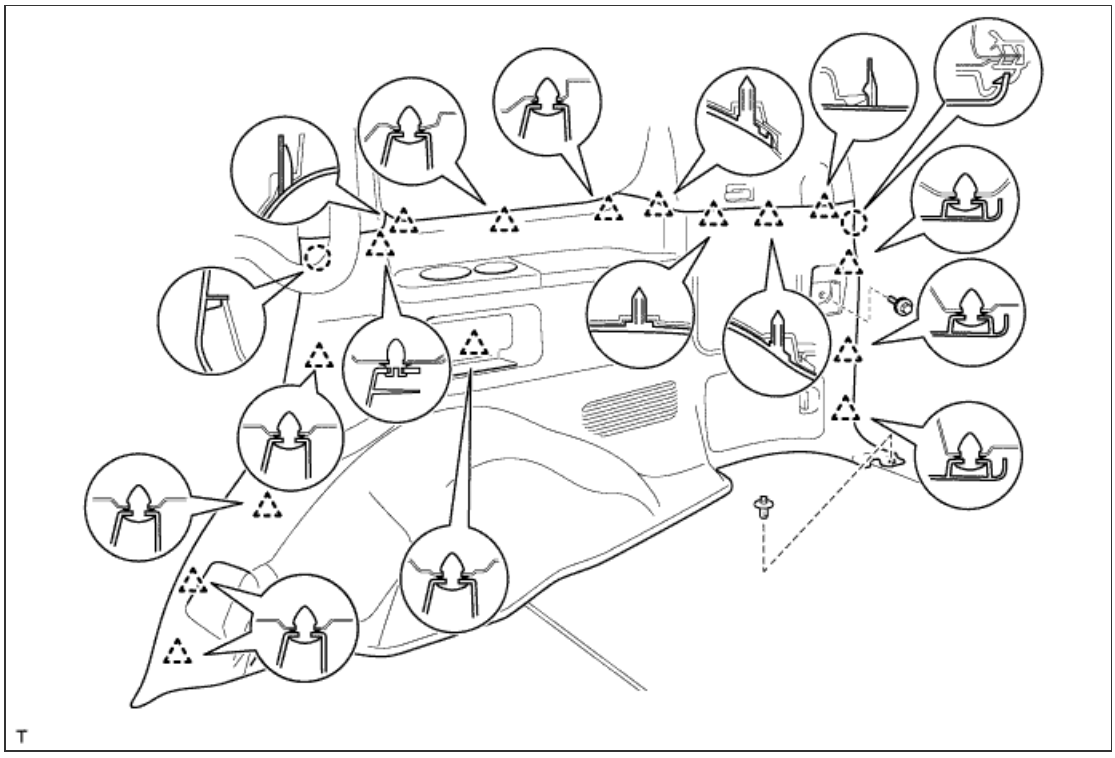

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.

ii. Detach the 16 clips and 2 claws, and remove the arter trim panel.

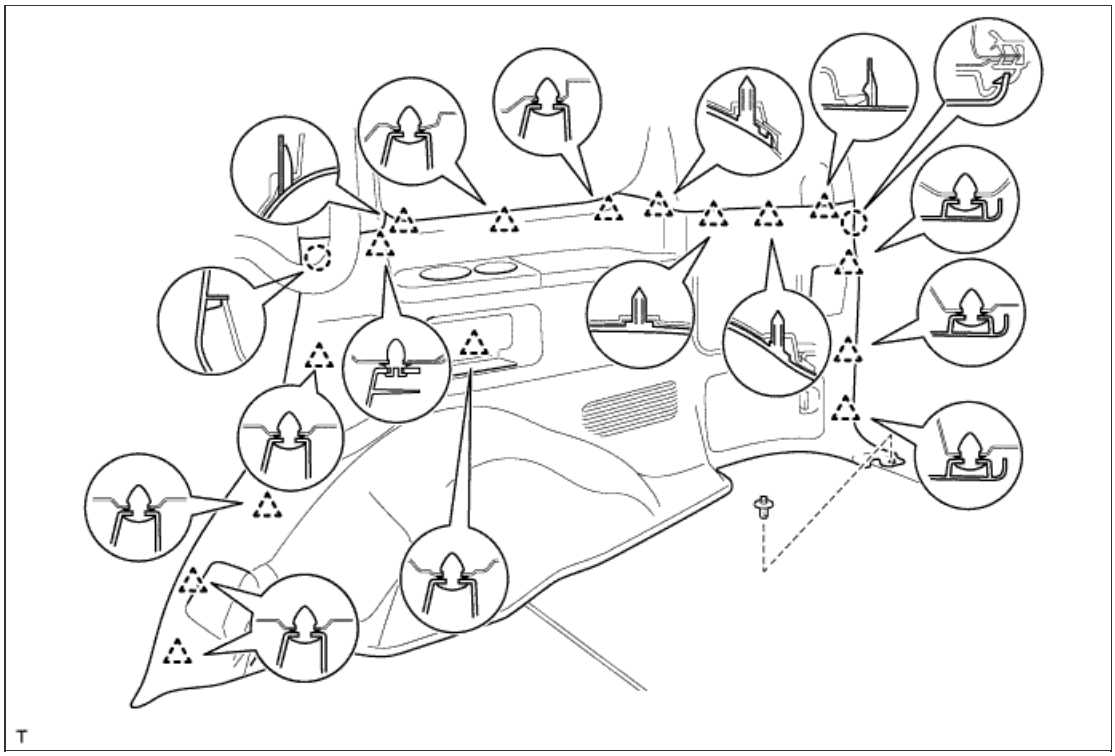


25. REMOVE REAR FRONT QUARTER TRIM GARNISH LH

a. Remove the screw.

b. Detach the clip and 2 guides.

c. Pass the seat belt anchor through the arter trim garnish, and remove the arter trim garnish.

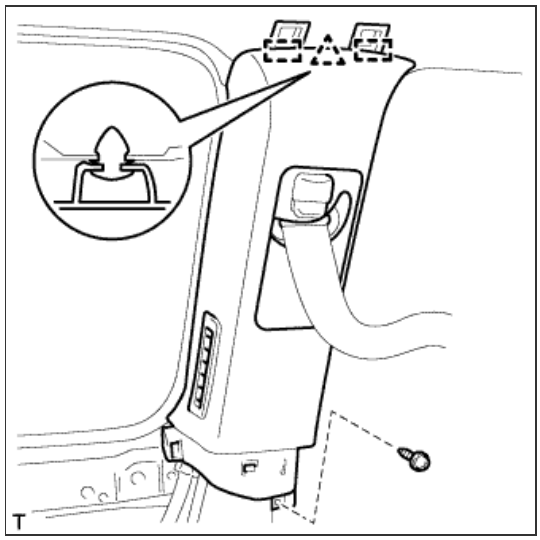

26. REMOVE REAR FRONT QUARTER TRIM GARNISH RH

HINT:

Use the same procedures described for the LH side.

27. REMOVE REAR UPPER PILLAR GARNISH LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype


i. Using a screwdriver, detach the 2 claws and open the seat belt shoulder anchor cover.

HINT:


ape the screwdriver tip before use.



ii. Remove the bolt and seat belt shoulder anchor.

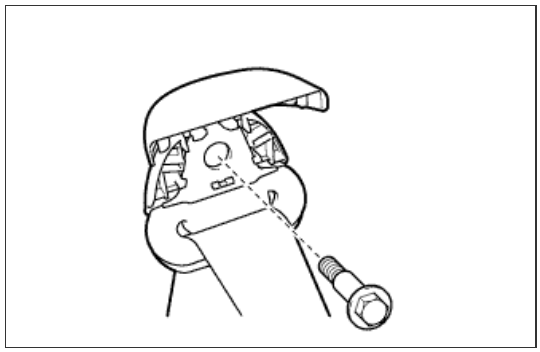

b. Detach the 5 clips and remove the rear upper pillar garnish.

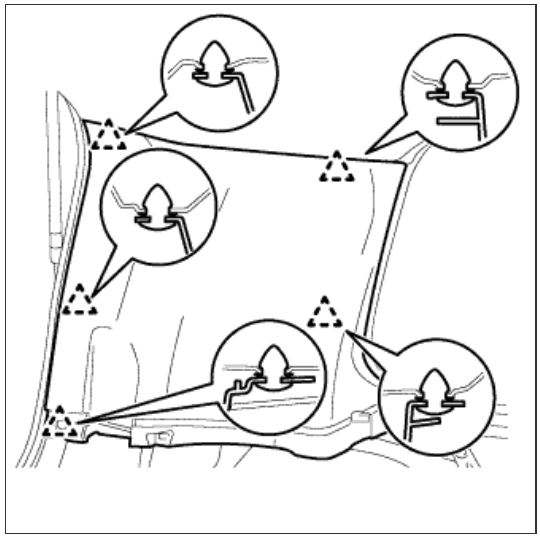

28. REMOVE REAR UPPER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

29. REMOVE MAP LIGHT ASSEMBLY

a. Using a screwdriver, detach the 2 claws and open the 2 covers.


HINT:

ape the screwdriver tip before use.

b. Remove the 2 screws.

c. Detach the 2 clips and 2 guides.


d. Disconnect the connector and then remove the map light.

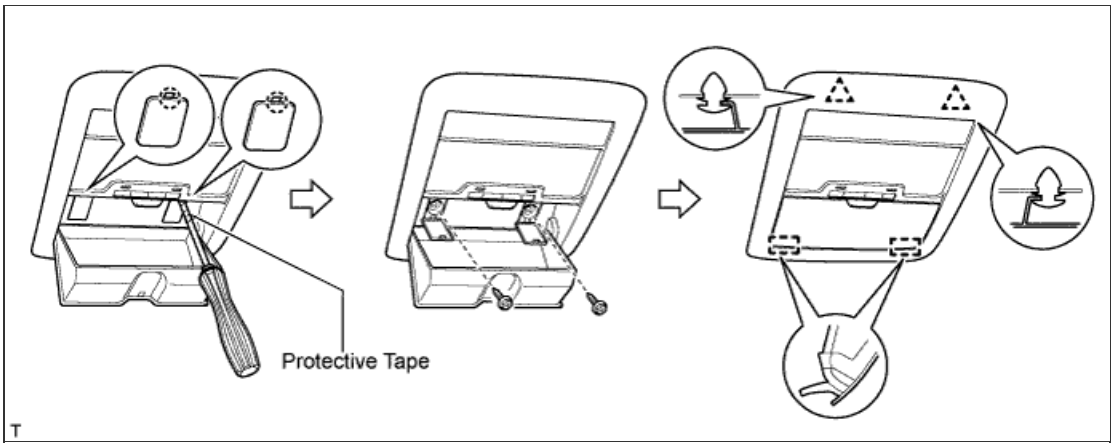

30. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

a. Detach the 4 clips.

b. Disconnect the connector and then remove the room light.

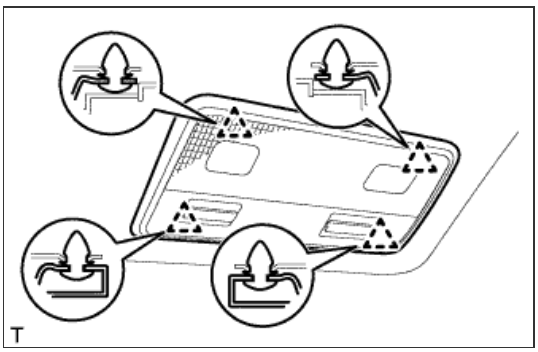


31. REMOVE NO. 2 ROOM LIGHT ASSEMBLY


a. Using a screwdriver, detach the 4 claws and remove the room light lens.

HINT:

ape the screwdriver tip before use.

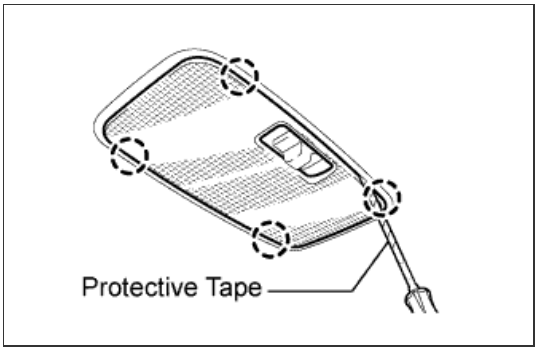


b. Remove the 2 covers.

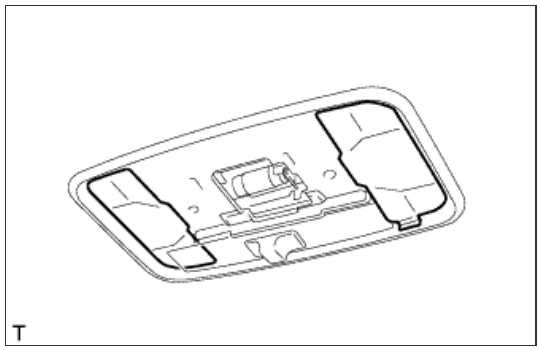


c. Using a screwdriver, push the 2 levers in the direction of the arrows in the illustration, and detach the 2 claws labeled A.

d. Detach the 2 claws labeled .

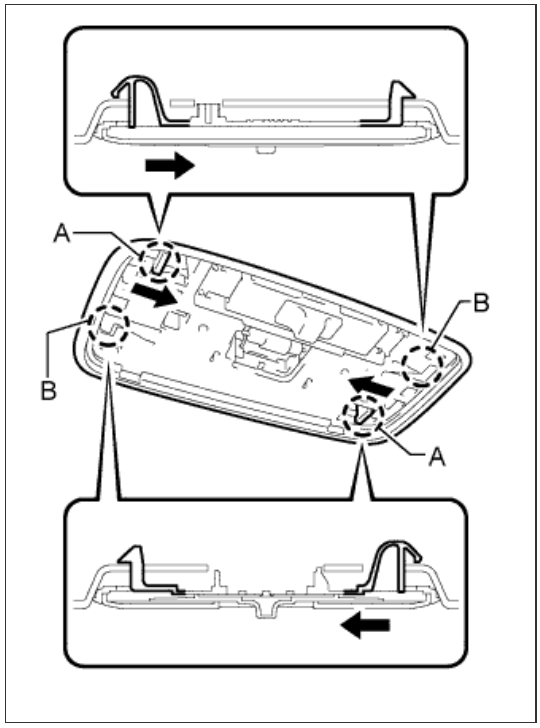

e. Detach the 4 claws and remove the room light from the room light switch base.

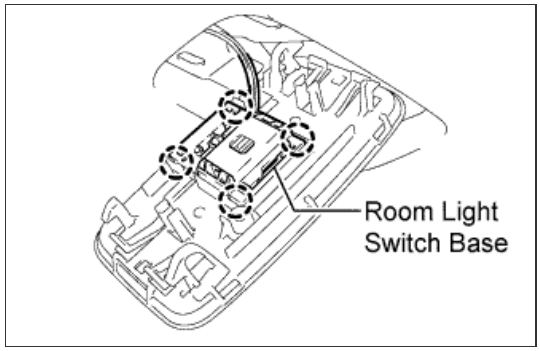


32. REMOVE VISOR BRACKET COVER

HINT:


Use the same procedure to remove the visor bracket cover on the other side.

a. Detach the 4 claws and remove the visor bracket cover.

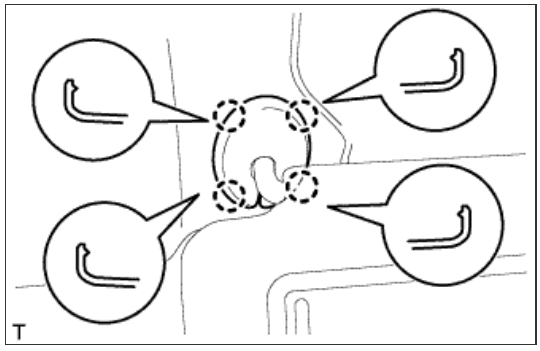

33. REMOVE VISOR ASSEMBLY LH

a. Remove the 2 screws and visor.

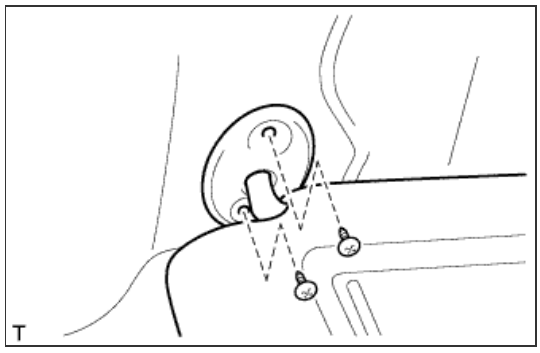

34. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


35. REMOVE VISOR HOLDER

HINT:

Use the same procedure to remove the visor holder on the other side.

a. rn the visor holder approximately 45° and pull it out as shown in the illustration.

b. Detach the 2 claws and remove the visor holder.

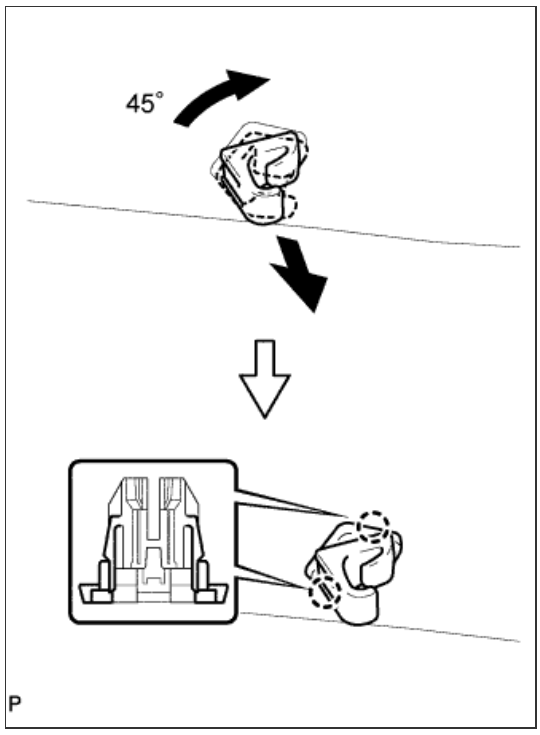


36. REMOVE CENTER VISOR ASSEMBLY LH (w/ Sub Visor)

a. Using a screwdriver, pry off the cover to detach the 2 clips and remove the center visor.

HINT:

ape the screwdriver tip before use.

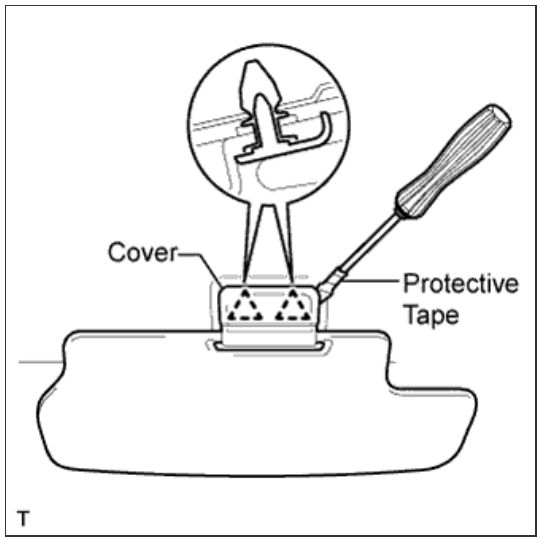


37. REMOVE CENTER VISOR ASSEMBLY RH (w/ Sub Visor)

HINT:

Use the same procedures described for the LH side.


38. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Detach the 2 claws and remove the cover as shown in the illustration.

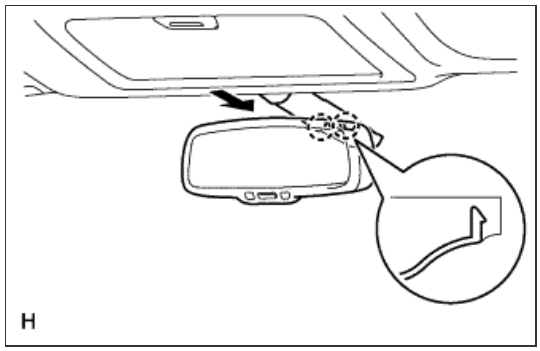

39. REMOVE RAIN SENSOR COVER (w/ Rain Sensor)


a. Slide the No. 2 cover in the direction of the arrow labeled (1).

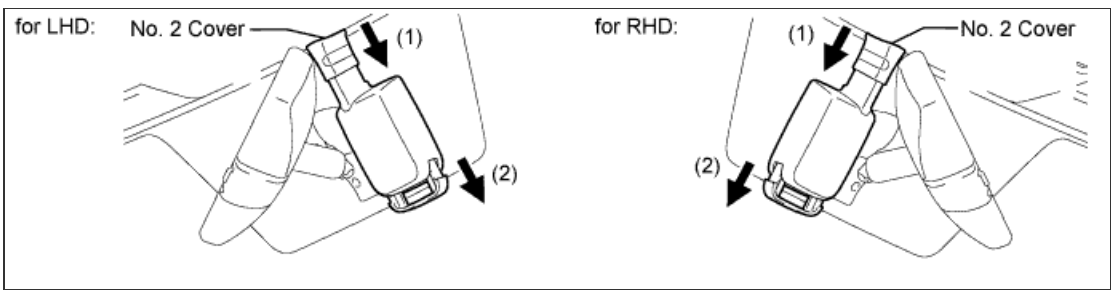

b. Pull the stopper in the direction of the arrow labeled (2) to remove the No. 2 cover.

40. REMOVE SEAT BELT ANCHOR COVER (for 3 Person Seat Type Rear No. 2 Seat)

a. Detach the 4 clips and 4 guides, and remove the seat belt anchor cover.

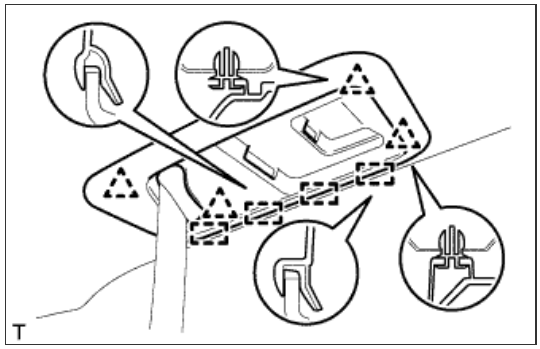

41. REMOVE ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to remove the assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.

c. Remove the 2 clips from the vehicle body.

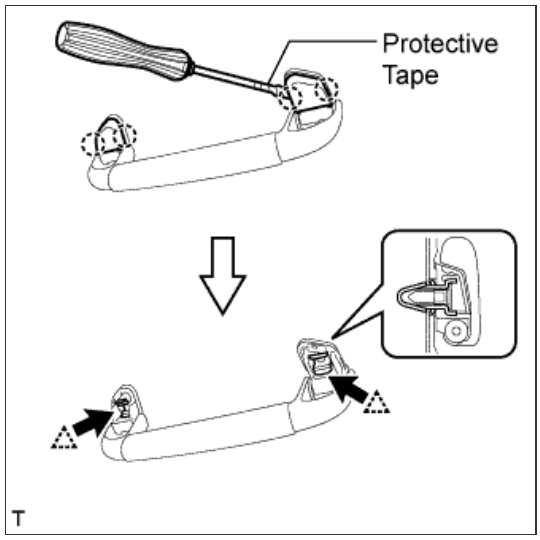

42. REMOVE NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype or w/o Rear No. 2 Seat:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

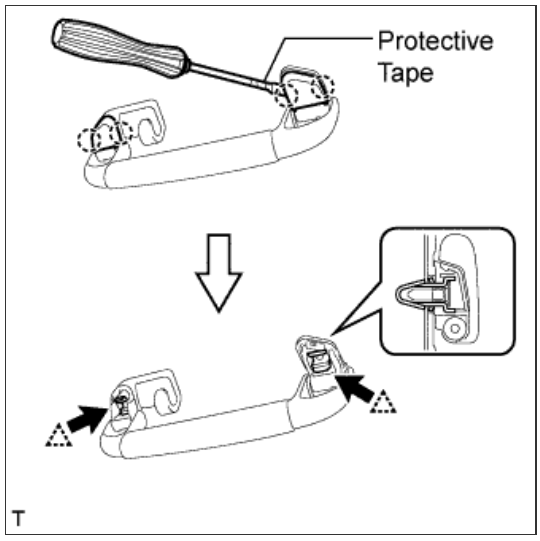

b. w/ Rear No. 2 Seat, for Face to Face Seat ype:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

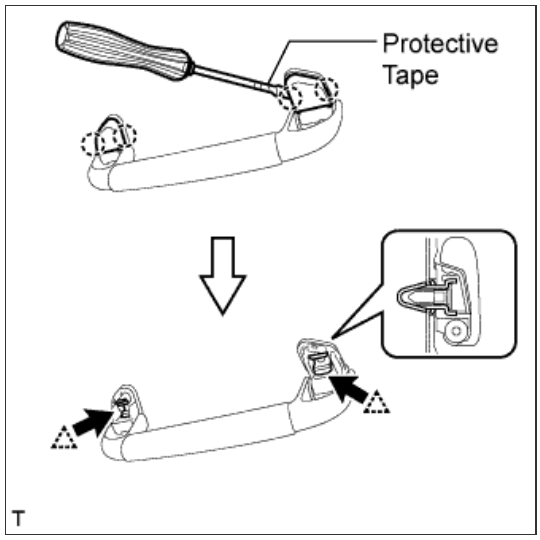

43. REMOVE NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

44. REMOVE 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to remove the 3rd seat assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.


c. Remove the 2 clips from the vehicle body.

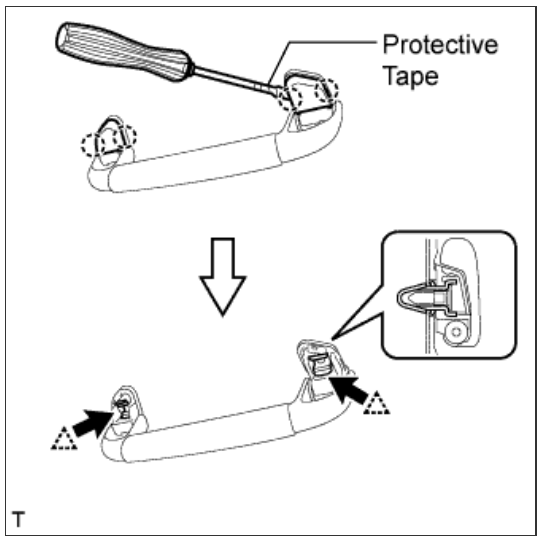

45. REMOVE ROOF HEADLINING ASSEMBLY


HINT:

- **for Manual Seat:**
  When removing the roof headlining, move the front seat and rear No. 1 seat to the position shown in the illustration.
- **for Power Seat:**
  When removing the roof headlining, connect the cable to the negative (-) battery terminal and move the front seat and No. 1 rear seat to the position shown in the illustration.
- **for Power Seat:**
  After moving the seats, disconnect the cable from the negative (-) battery terminal.

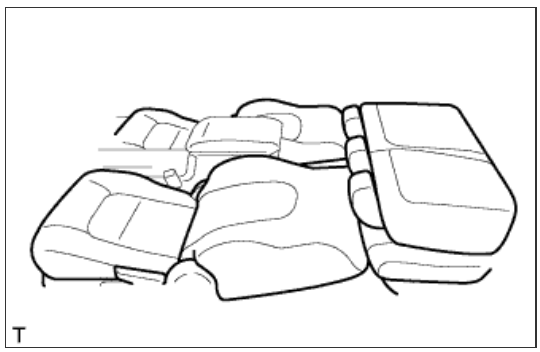


a. w/ EC Mirror


a. w/ EC Mirror:
Disconnect the inner mirror connector.

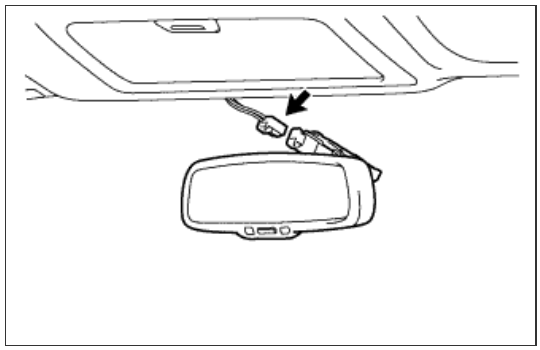

b. w/ Rain Sensor:
Disconnect the rain sensor connector.

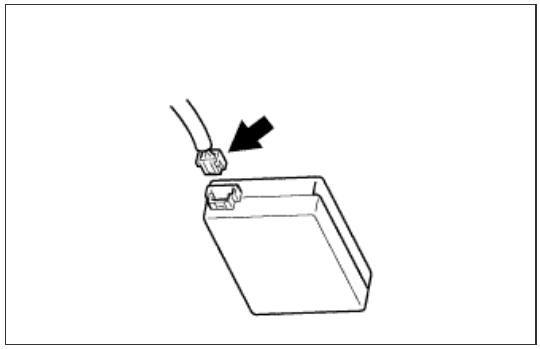


c. Disconnect the drive gear connector.

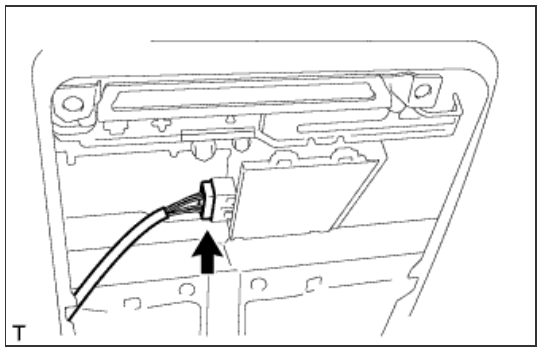


d. Disconnect the 3 roof wire connectors and washer hose.

e. Detach the 4 clamps.

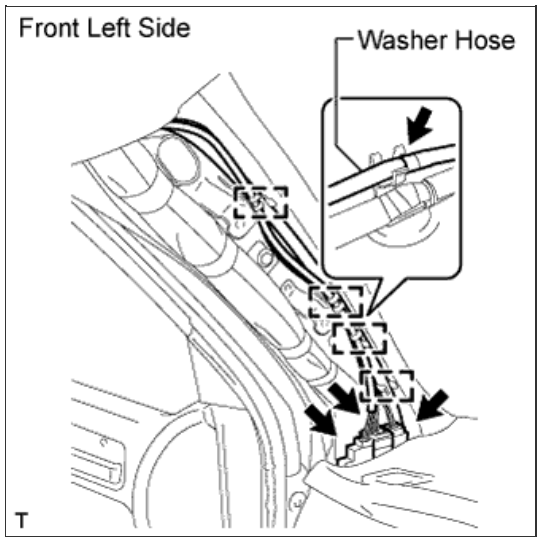


f. Remove the bolt.


g. Disconnect the antenna cord connector and detach the 2 clamps.

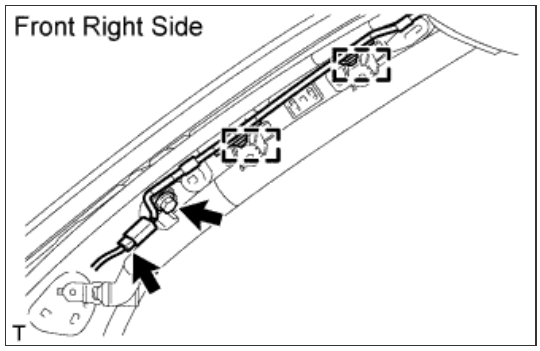


h. Disconnect the antenna cord connector.

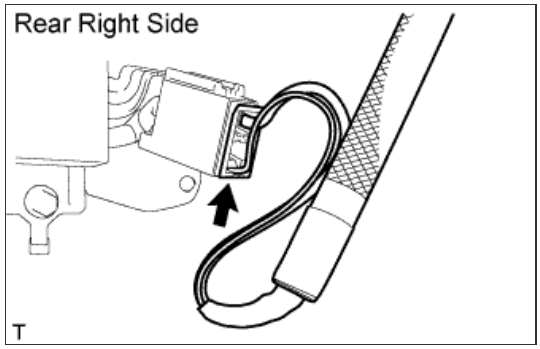

i. Disconnect the washer hose.

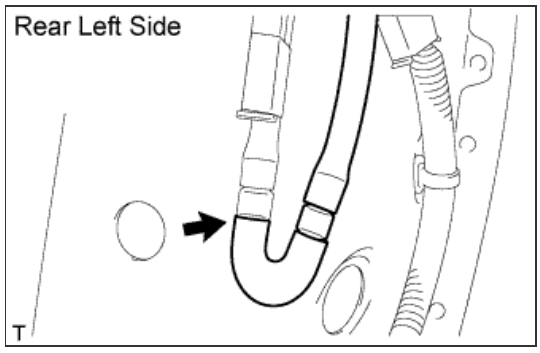


j. for 3 Person Seat ype Rear No. 2 Seat:
Detach the 12 claws, 2 clips, 2 guides and 16 fasteners.

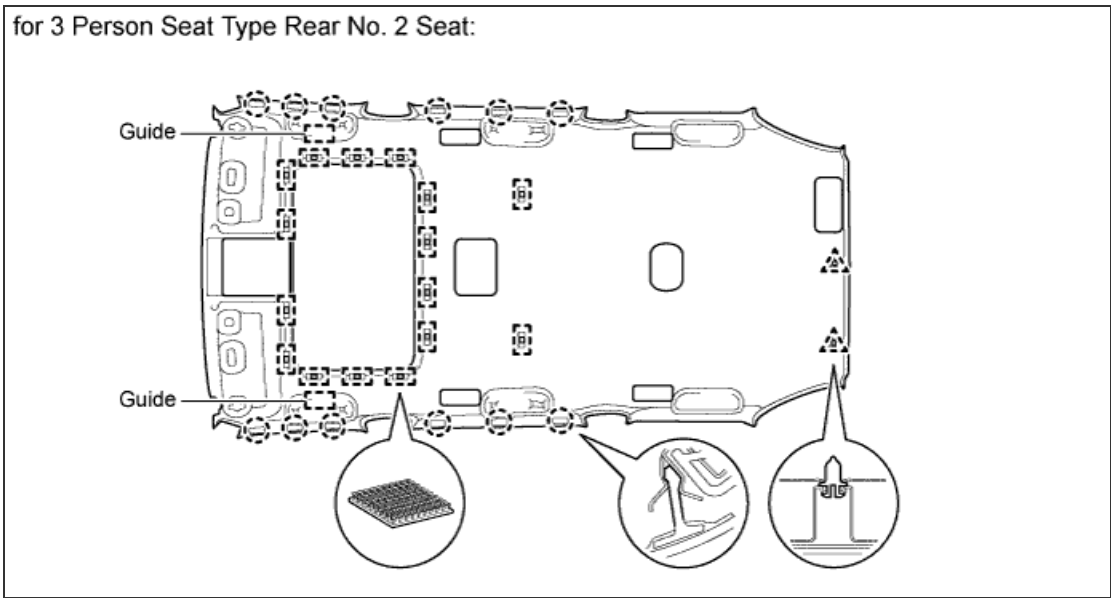

k. except 3 Person Seat ype Rear No. 2 Seat:

k. except 3 Person Seat Type Rear No. 2 Seat:
Detach the 12 claws, 3 clips, 2 guides and 16 fasteners.


except 3 Person Seat Type Rear No. 2 Seat:

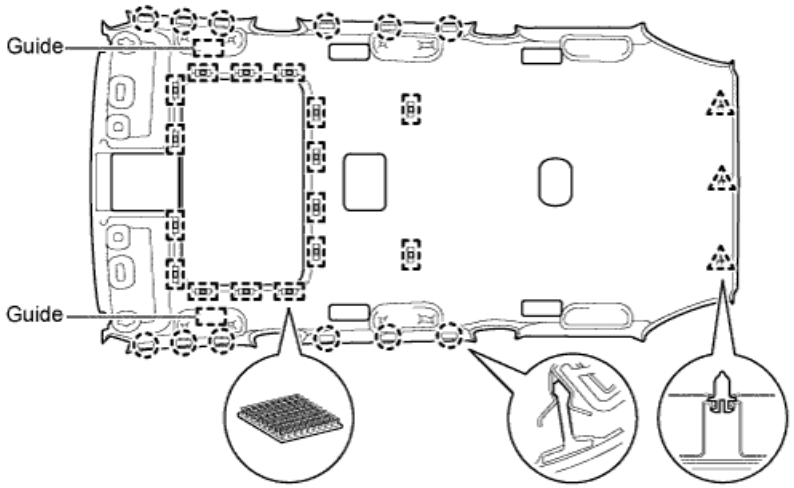

l. Remove the headlining from the rear of the vehicle as shown in the illustration.

NOTICE:

e careful not to damage the roof headlining when taking it out.

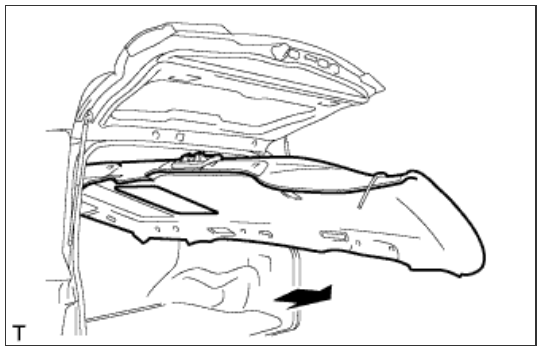


46. REMOVE FRONT ROOF SIDE RAIL GARNISH LH

a. Detach the 3 clips.

b. Cut off the 3 clips and remove the roof side rail garnish.

c. Remove 3 clips from the vehicle body.

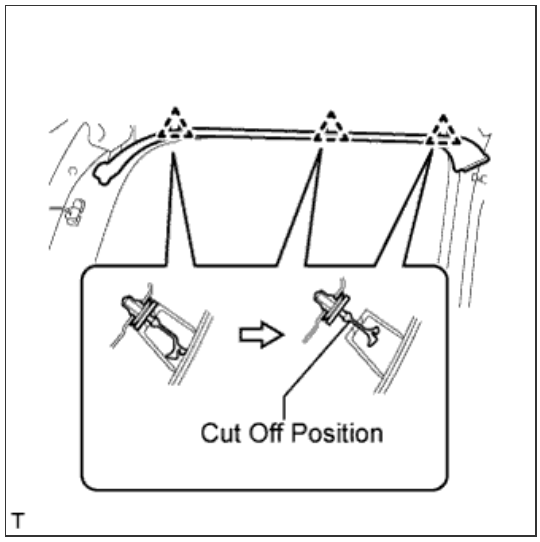


47. REMOVE FRONT ROOF SIDE RAIL GARNISH RH

HINT:

Use the same procedures described for the LH side.

48. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

a. Remove the front door opening trim weatherstrip.

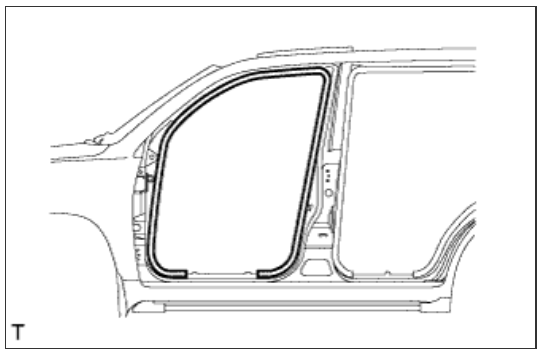


49. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

50. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

a. Remove the rear door opening trim weatherstrip.

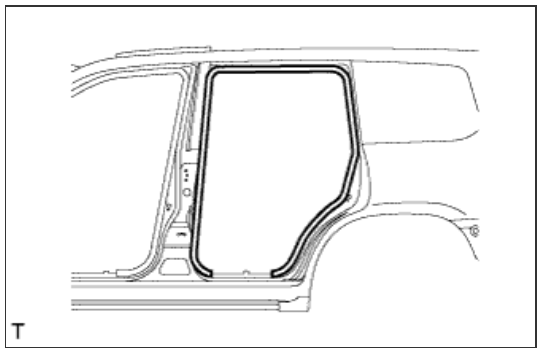


51. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

52. REMOVE BACK DOOR WEATHERSTRIP


a. Remove the back door weatherstrip.

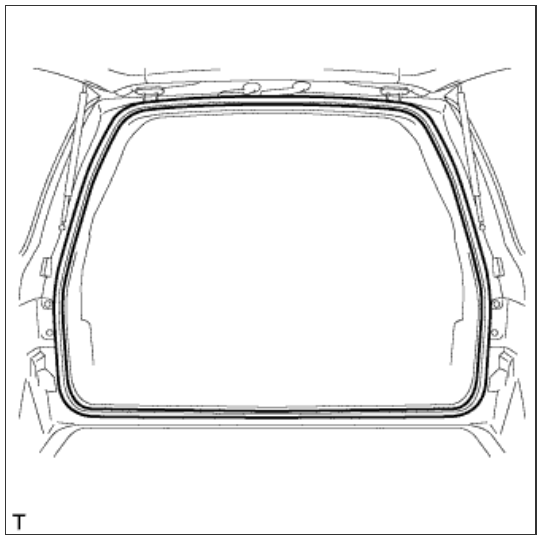

53. REMOVE FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the front door scuff plate outside.

b. Detach the 4 clips and remove the front door scuff plate outside.

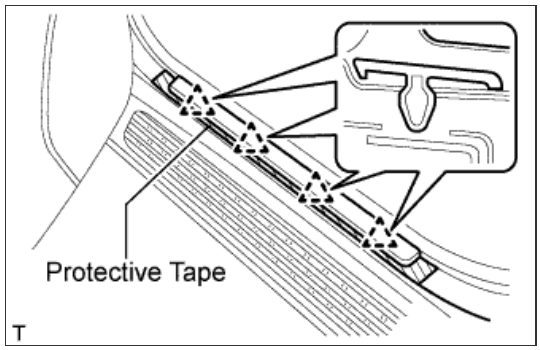

54. REMOVE FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

55. REMOVE REAR DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the rear door scuff plate outside.

b. Detach the 3 clips and remove the rear door scuff plate outside.

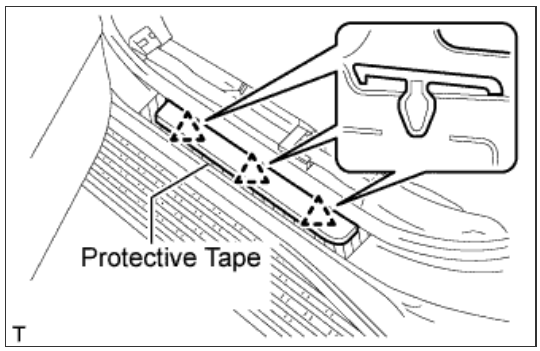


56. REMOVE REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

57. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws of the plate, and slide the plate in the direction of the arrow to remove it.

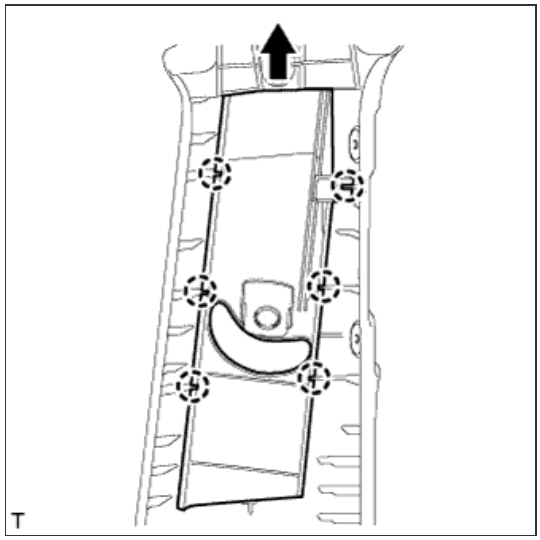


58. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

59. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws and remove the plate.

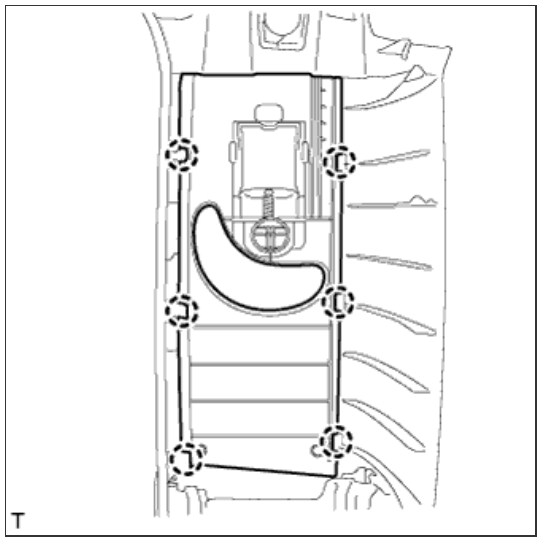


60. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

61. REMOVE ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 7 claws and remove the cover.

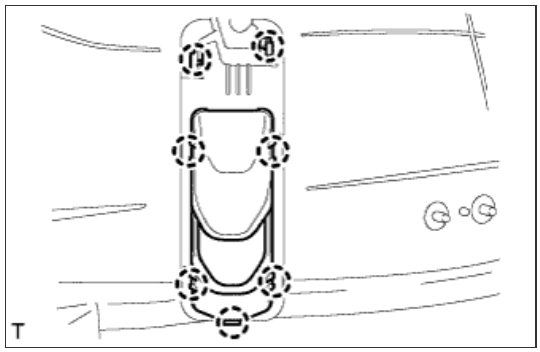

62. REMOVE ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedures described for the LH side.

63. REMOVE REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to remove the hanger on the other side.

a. Remove the 2 spring nuts and hanger.

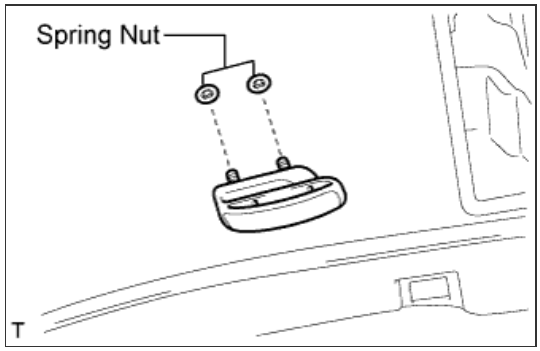

64. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Remove the 2 spring nuts and hanger.

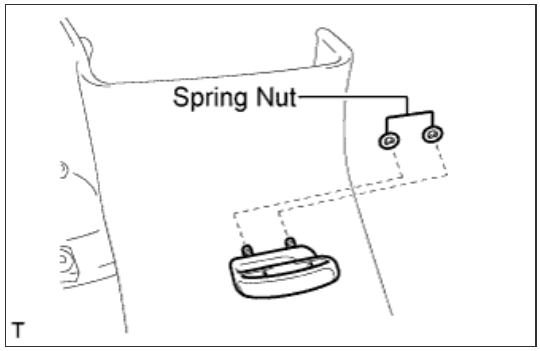


65. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:

Use the same procedures described for the LH side.


66. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY LH

a. w/ Rear Heater:
Remove the 8 screws and duct.

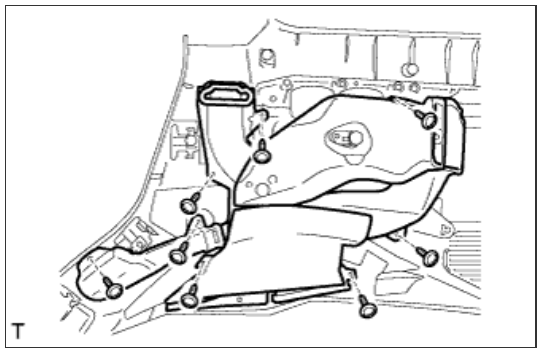

b. Remove the 7 screws.


c. Detach the 4 claws and remove the arter trim cover.

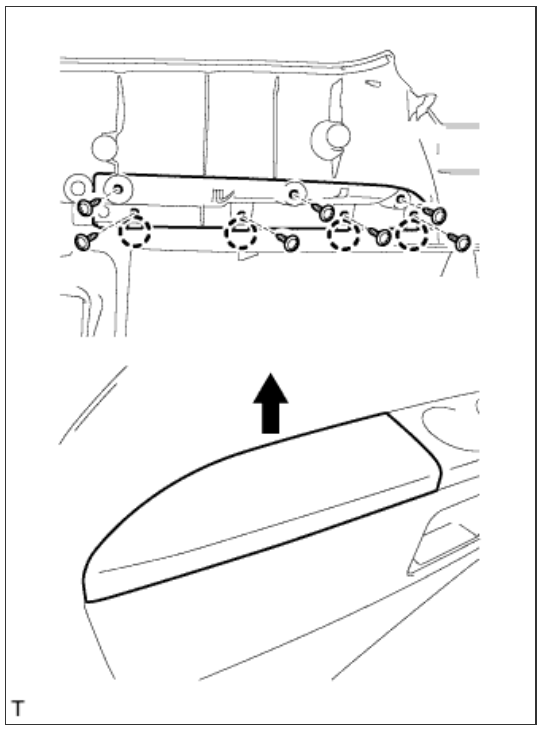

67. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY RH

a. Remove the 7 screws.


b. Detach the 4 claws and remove the arter trim cover.

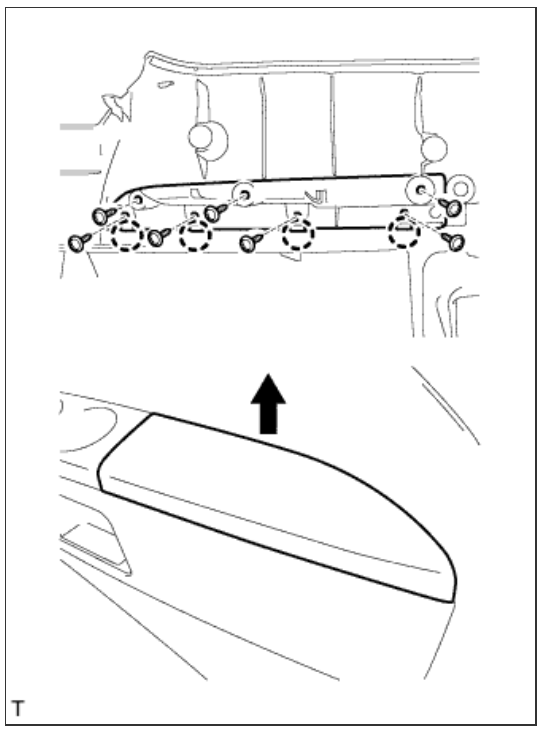

68. REMOVE NO. 2 CUP HOLDER

a. Remove the 5 screws.


b. Detach the 3 claws and remove the cup holder.

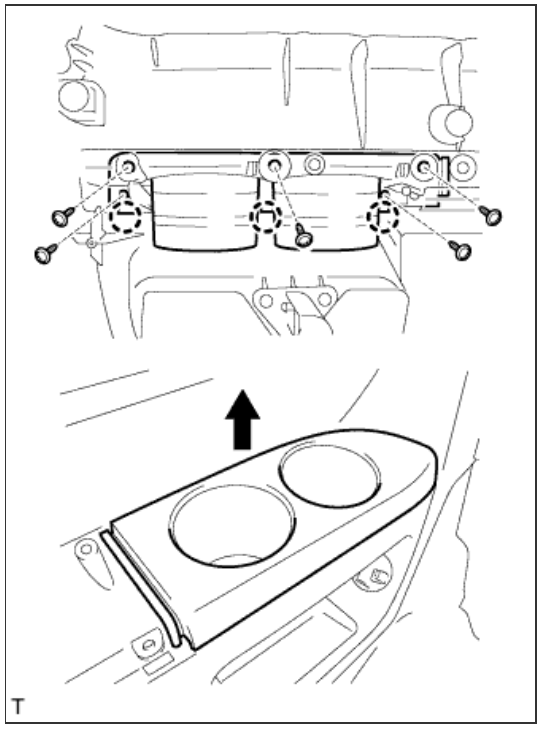

69. REMOVE NO. 1 CUP HOLDER


a. Remove the 5 screws.

b. Detach the 3 claws and remove the cup holder.

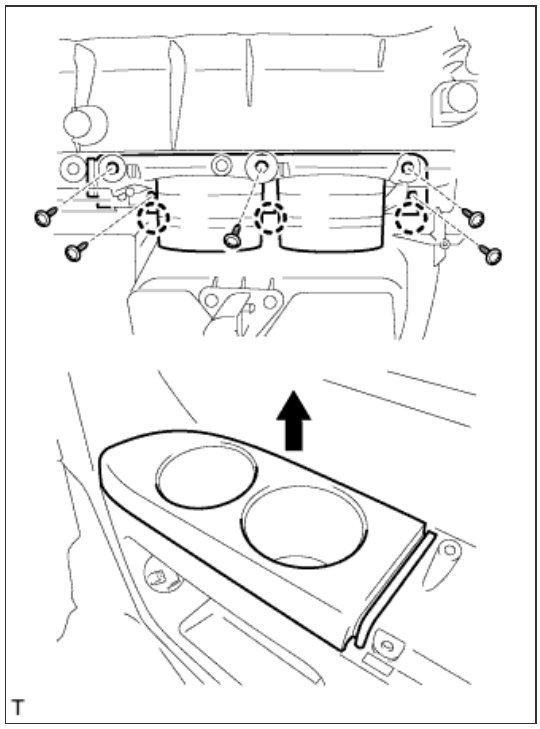


70. REMOVE NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

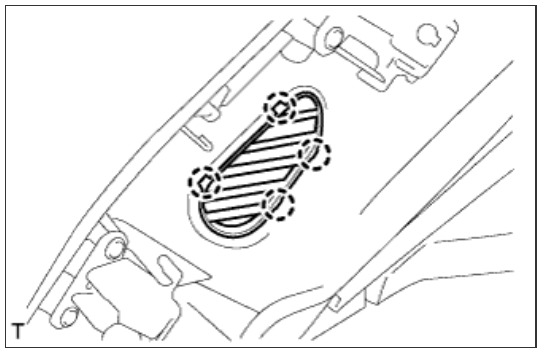


71. REMOVE NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Remove the 6 screws and duct.

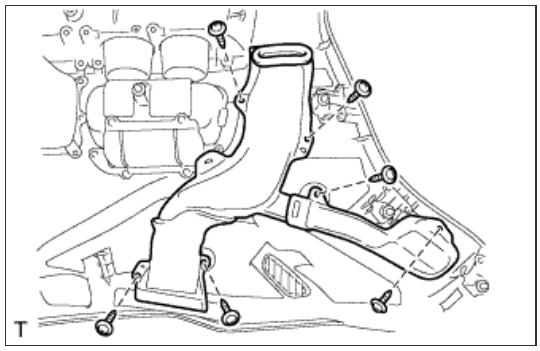


b. Detach the 4 claws and remove the cover.

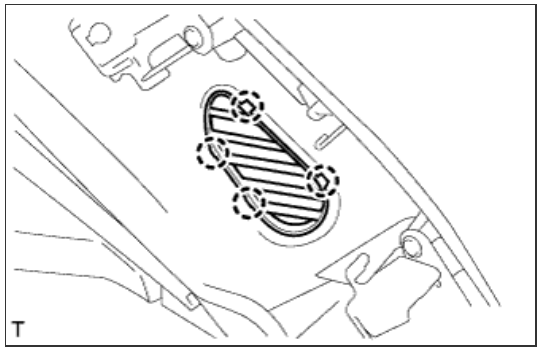

72. REMOVE NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

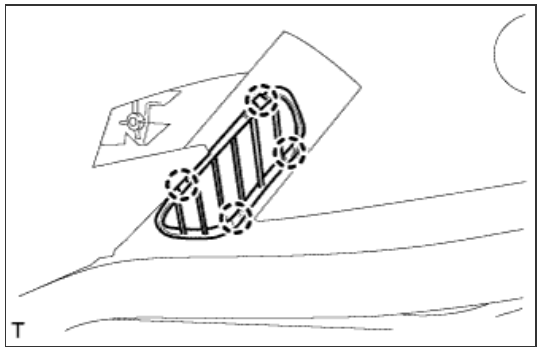

73. REMOVE NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.

74. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 4 claws and remove the seat lock control lever.


75. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

76. REMOVE REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

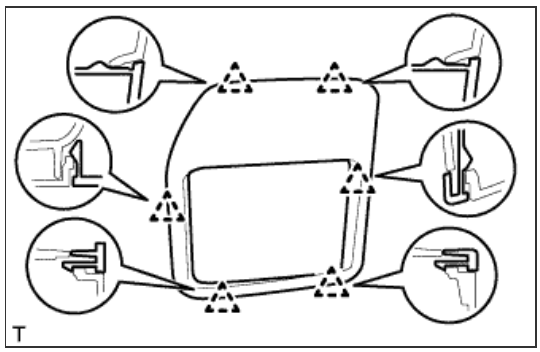


77. REMOVE REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

78. REMOVE QUARTER TRIM COVER LH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

a. Detach the 6 clips and remove the arter trim cover.

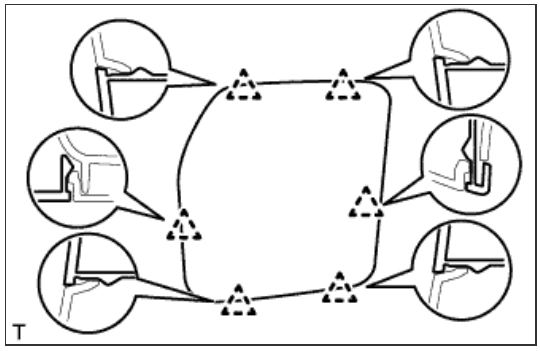

79. REMOVE QUARTER TRIM COVER RH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

80. REMOVE QUARTER TRIM LID SUB-ASSEMBLY RH


a. Remove the arter trim lid.

81. REMOVE SIDE TRIM BOX COVER

a. Remove the side trim box cover.

82. REMOVE SIDE TRIM BOX

a. Remove the 9 screws and side trim box.

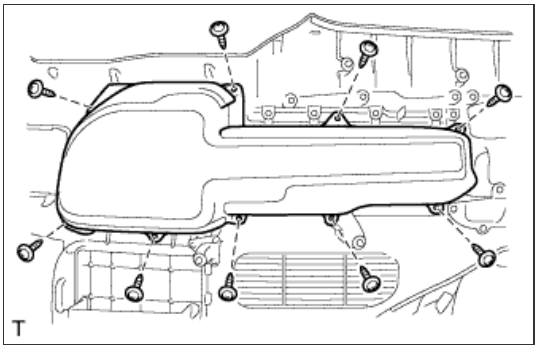

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

4. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).


5. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

6. REMOVE FRONT DOOR SCUFF PLATE LH

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

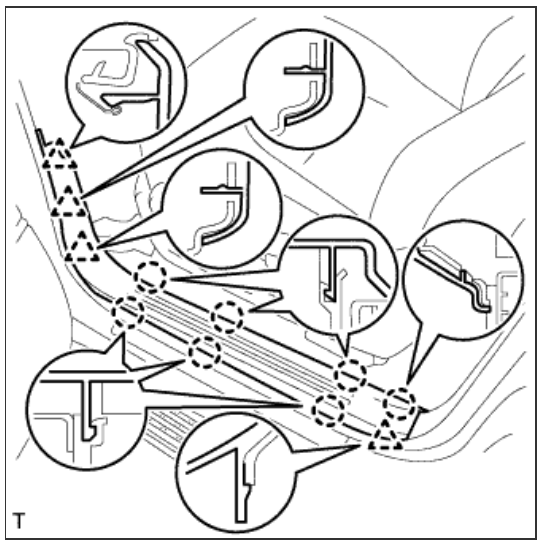

7. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

8. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

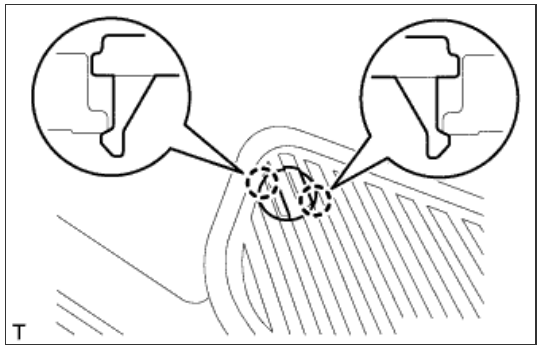

9. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

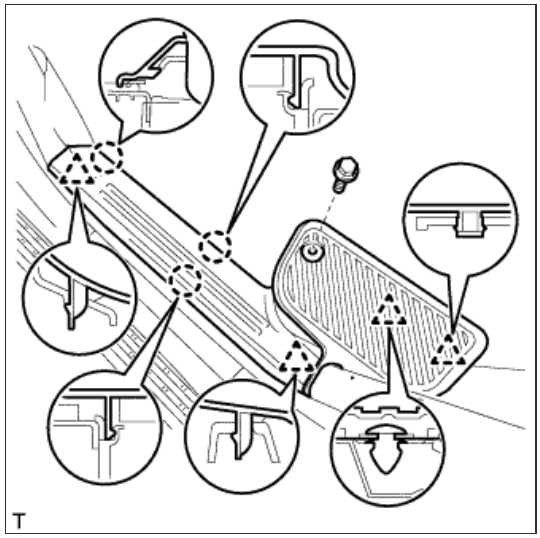


10. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

11. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

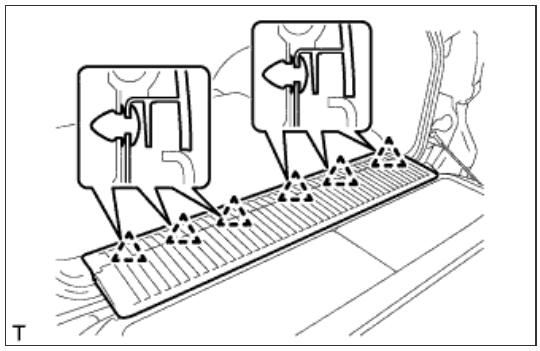


12. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY

HINT:


Use the same procedure to remove the front assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

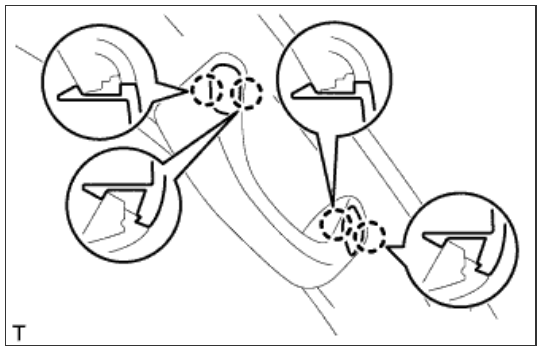

b. Remove the 2 bolts.


c. Detach the 2 claws and remove the front assist grip.

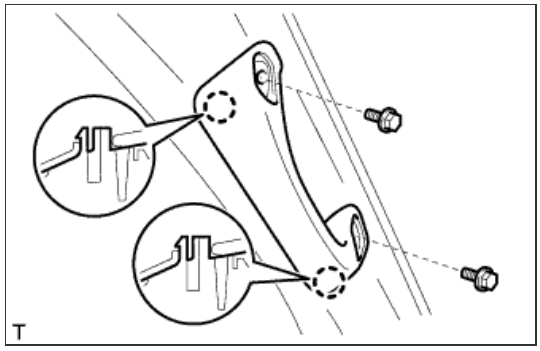

13. REMOVE FRONT PILLAR GARNISH LH

a. Detach the clip 3 guides, and remove the front pillar garnish.

b. for 9, 14 Speakers:
Disconnect the speaker connector and then remove the front pillar garnish.

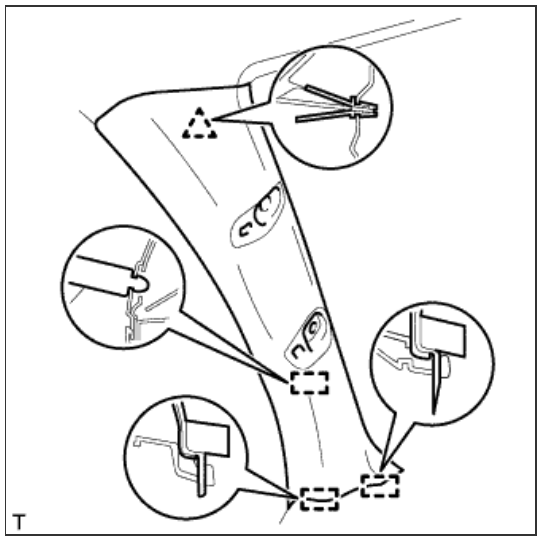


c. Protect the curtain shield airbag.

i. horoughly cover the airbag with a cloth or nylon sheet and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

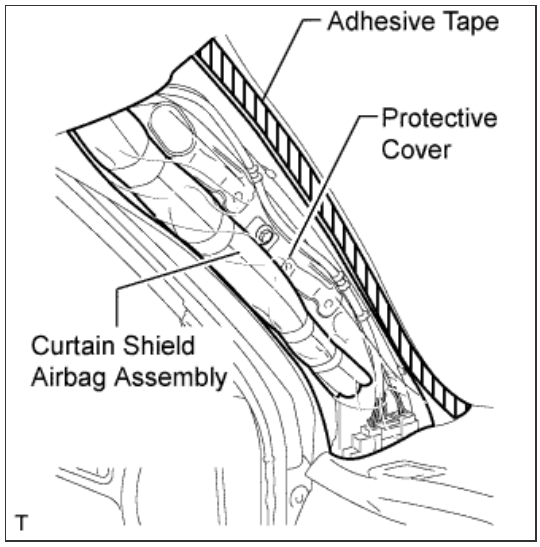

14. REMOVE FRONT PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

15. REMOVE CENTER PILLAR GARNISH COVER LH

HINT:

- **for Manual Seat:**
  When removing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When removing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Detach the 2 clips and 2 guides, and remove the cover.

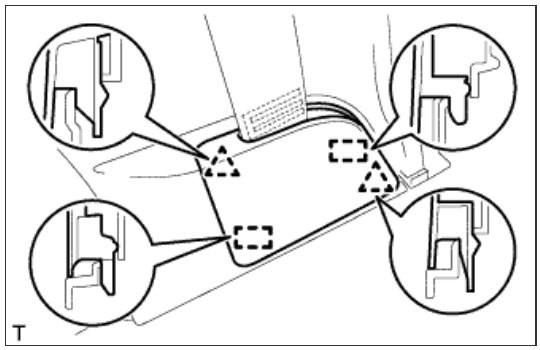

16. REMOVE CENTER PILLAR GARNISH COVER RH

HINT:

Use the same procedures described for the LH side.

17. REMOVE CENTER LOWER PILLAR GARNISH LH


HINT:

- **for Manual Seat:**
  When removing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When removing the center lower pillar garnish, connect the cable to the negative (-) battery terminal and operate the power seat


switch to move the front seat and seatback to the foremost upright position.

- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Remove the bolt and seat belt anchor.

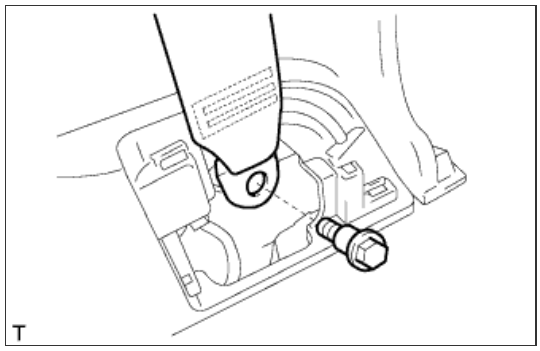

b. Detach the 2 claws and 7 clips, and remove the center lower pillar garnish.

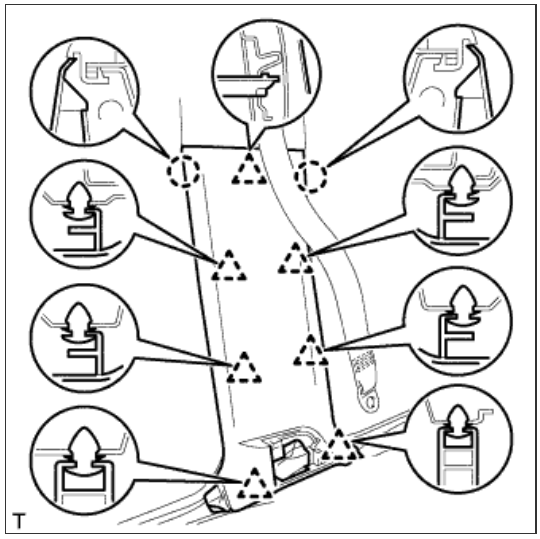

18. REMOVE CENTER LOWER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

19. REMOVE REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to remove the rear assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

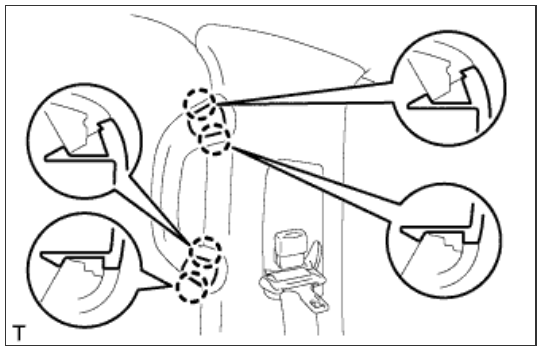

b. Remove the 2 bolts.

c. Detach the 2 claws and remove the rear assist grip.

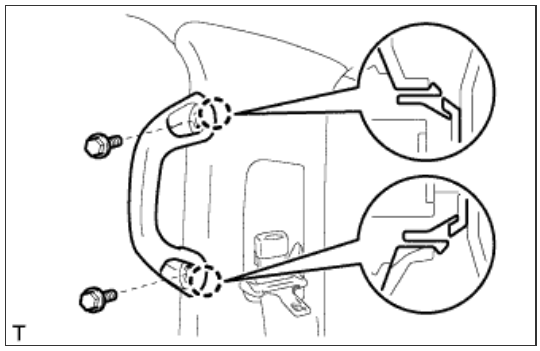


20. REMOVE CENTER PILLAR GARNISH LH

a. Remove the bolt.

b. Detach the 2 clips and 2 guides.

c. Pass the seat belt anchor through the center pillar garnish, and remove the center pillar garnish.

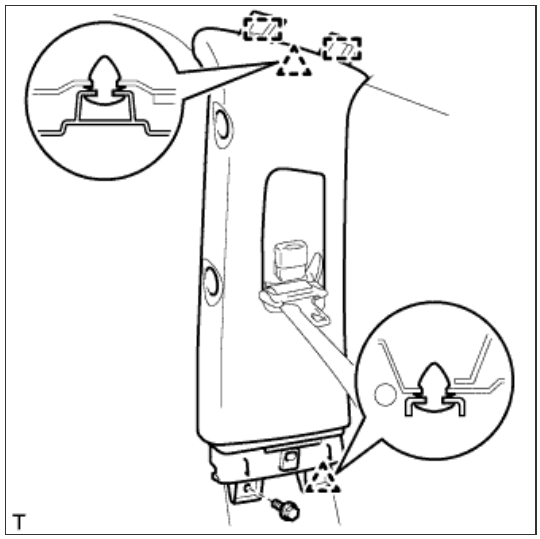

21. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

22. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


ape the screwdriver tip before use.

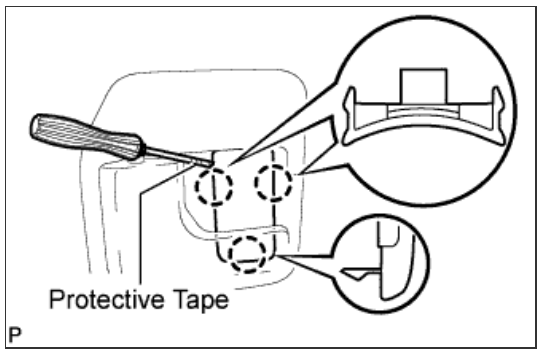


23. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front arter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

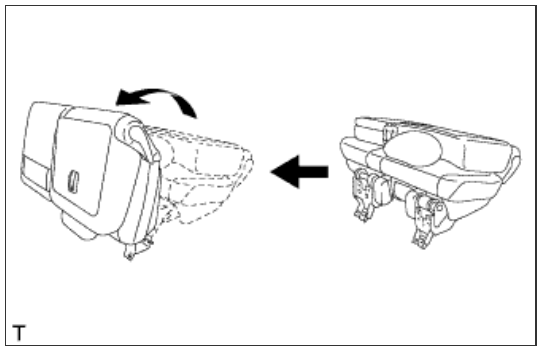


a. Detach the 3 claws and remove the cover.

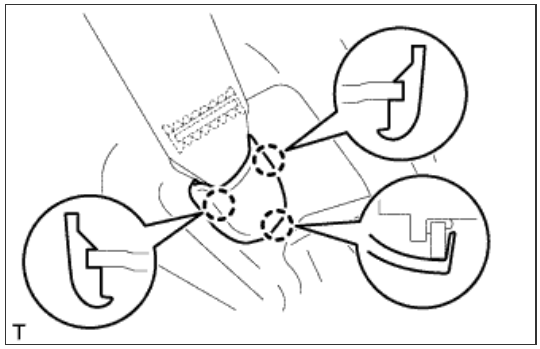

b. Remove the bolt and rear No. 1 seat belt anchor.

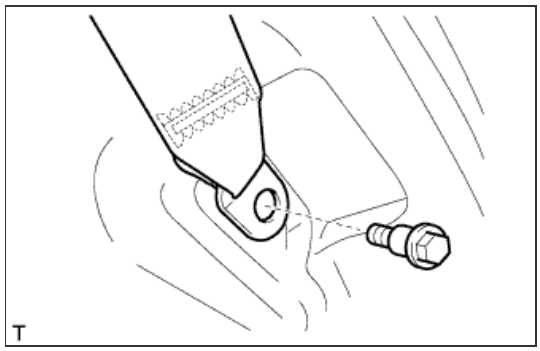

c. w/ Rear No. 2 Seat, except Face to Face Seat ype:
Remove the bolt and rear No. 2 seat belt anchor.

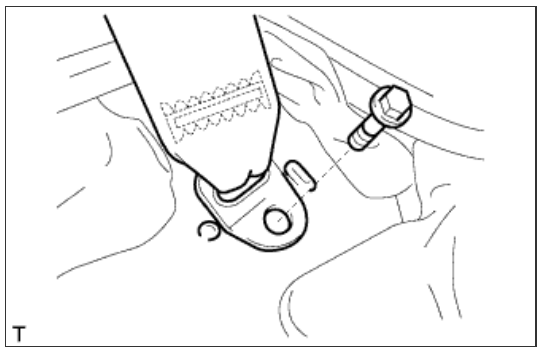


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the arter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the arter trim panel.

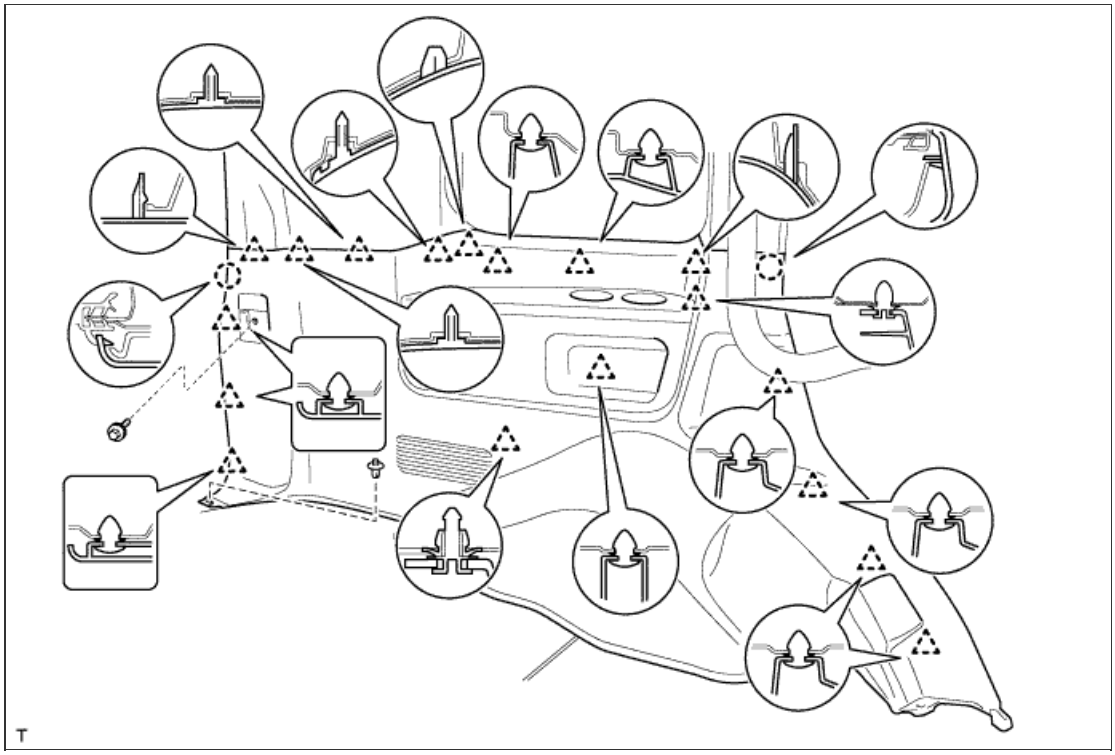

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the arter trim panel.

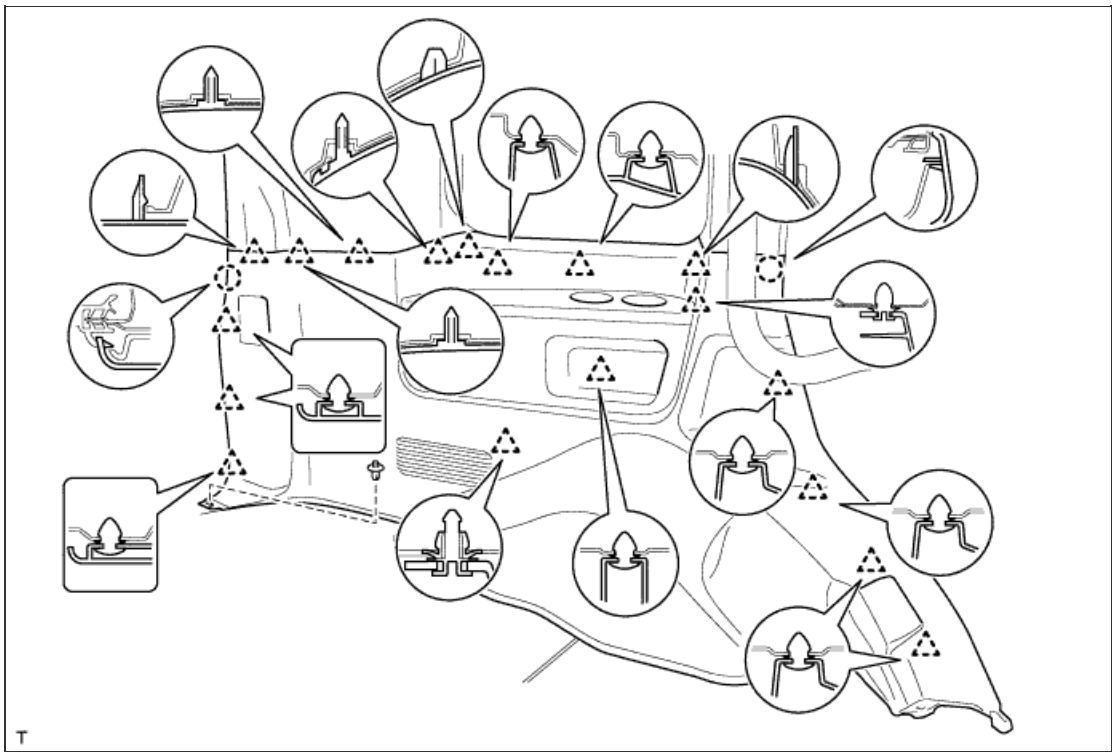


24. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:


When removing the front arter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

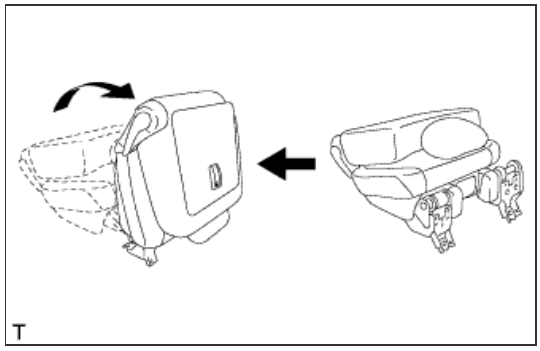


a. Detach the 3 claws and remove the cover.

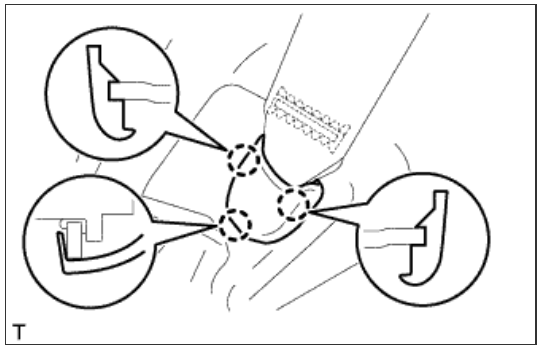

b. Remove the bolt and rear No. 1 seat belt anchor.

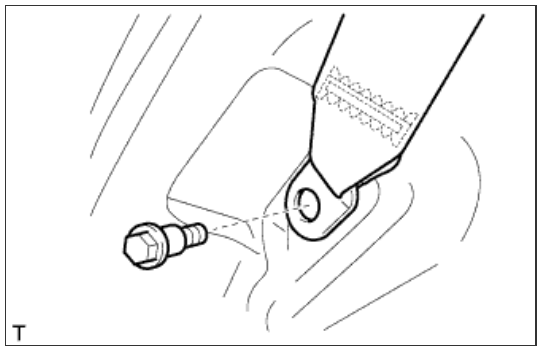


c. w/ Rear No. 2 Seat, except Face to Face Seat ype:

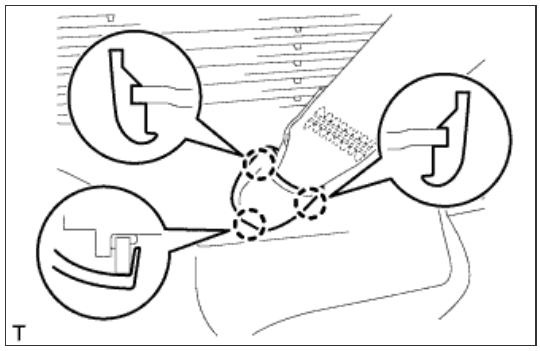

i. Detach the 3 claws and remove the cover.

ii. Remove the bolt and rear No. 2 seat belt anchor.

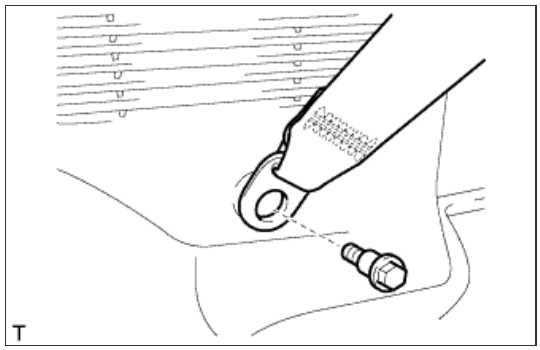


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 16 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the arter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the arter trim panel.

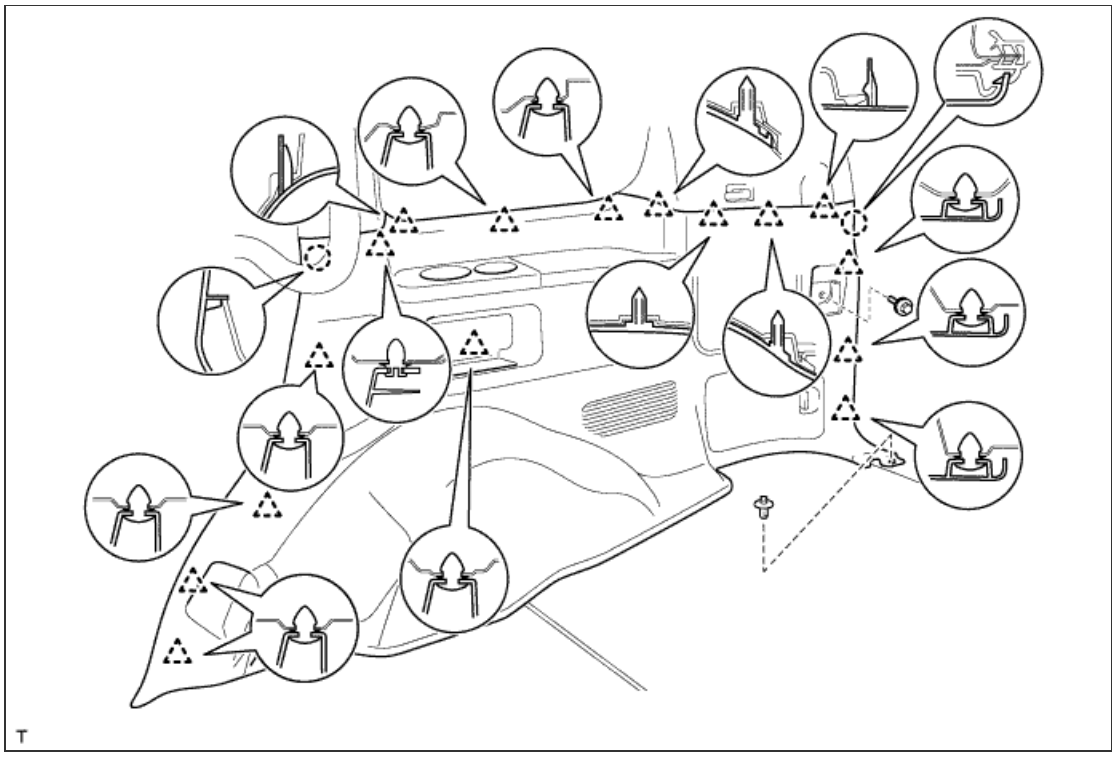

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.

ii. Detach the 16 clips and 2 claws, and remove the arter trim panel.

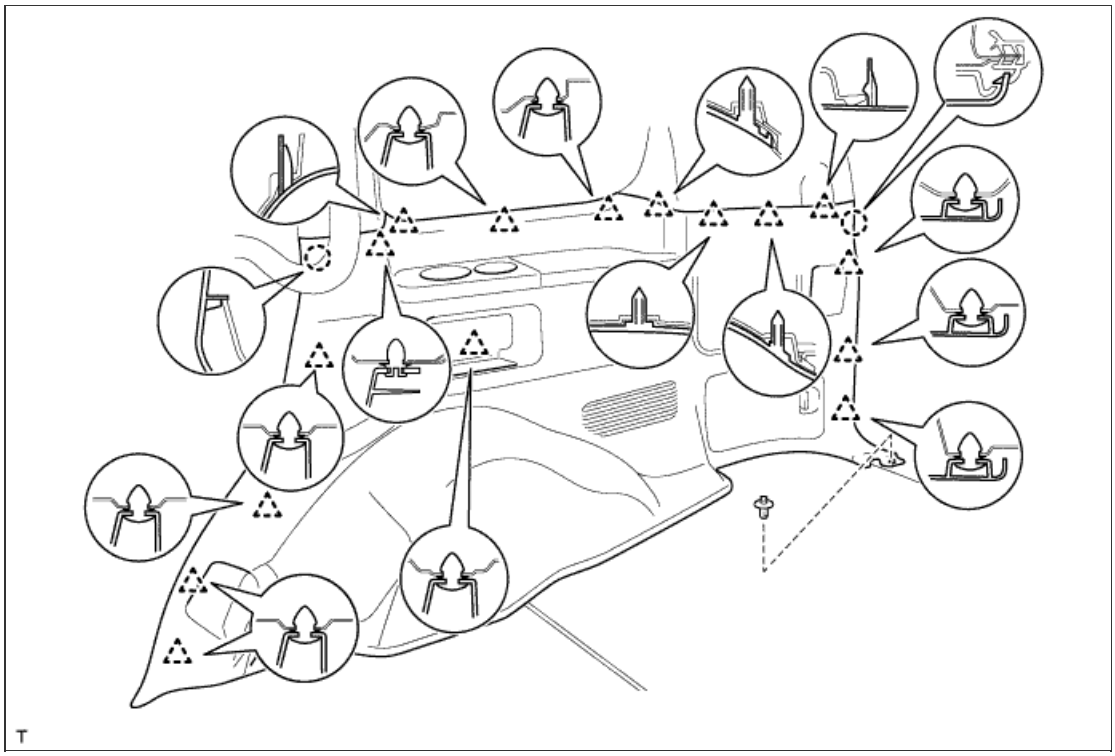


25. REMOVE REAR FRONT QUARTER TRIM GARNISH LH

a. Remove the screw.

b. Detach the clip and 2 guides.

c. Pass the seat belt anchor through the arter trim garnish, and remove the arter trim garnish.

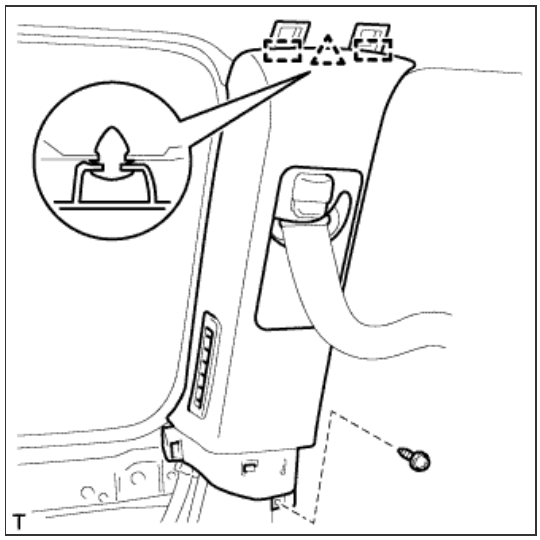

26. REMOVE REAR FRONT QUARTER TRIM GARNISH RH

HINT:

Use the same procedures described for the LH side.

27. REMOVE REAR UPPER PILLAR GARNISH LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype


i. Using a screwdriver, detach the 2 claws and open the seat belt shoulder anchor cover.

HINT:


ape the screwdriver tip before use.



ii. Remove the bolt and seat belt shoulder anchor.

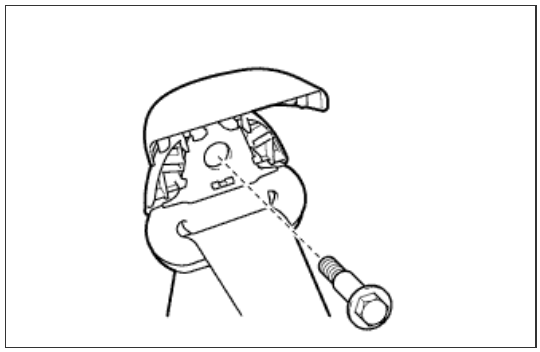

b. Detach the 5 clips and remove the rear upper pillar garnish.

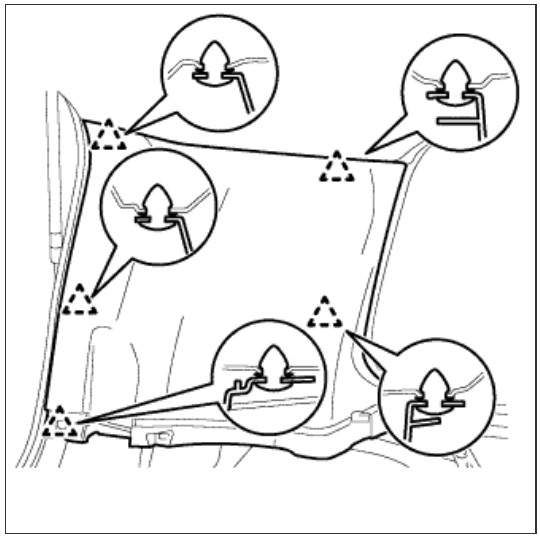

28. REMOVE REAR UPPER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

29. REMOVE MAP LIGHT ASSEMBLY

a. Using a screwdriver, detach the 2 claws and open the 2 covers.


HINT:

ape the screwdriver tip before use.

b. Remove the 2 screws.

c. Detach the 2 clips and 2 guides.


d. Disconnect the connector and then remove the map light.

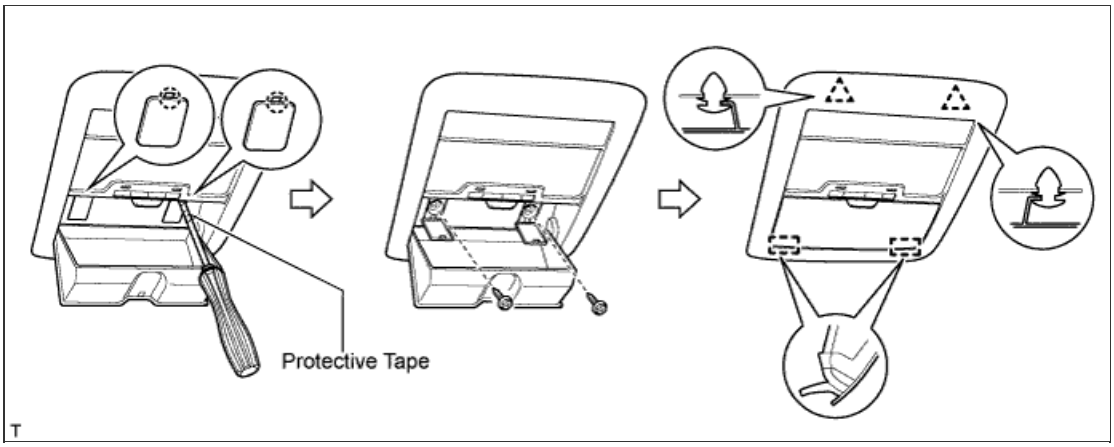

30. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

a. Detach the 4 clips.

b. Disconnect the connector and then remove the room light.

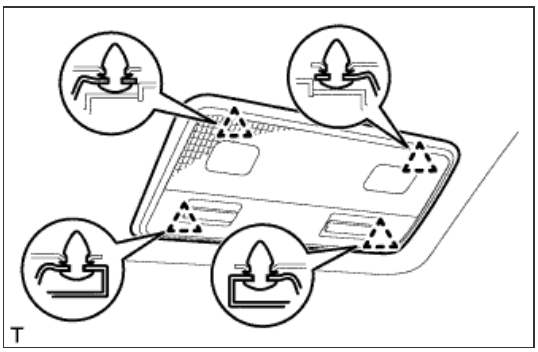


31. REMOVE NO. 2 ROOM LIGHT ASSEMBLY


a. Using a screwdriver, detach the 4 claws and remove the room light lens.

HINT:

ape the screwdriver tip before use.

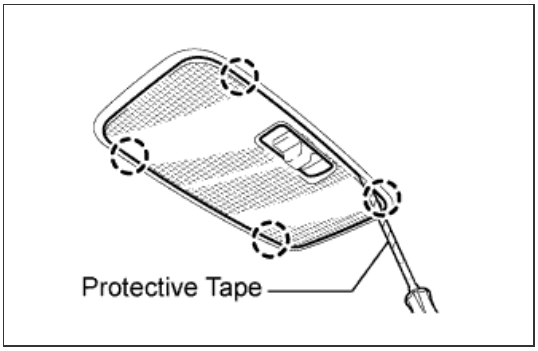


b. Remove the 2 covers.

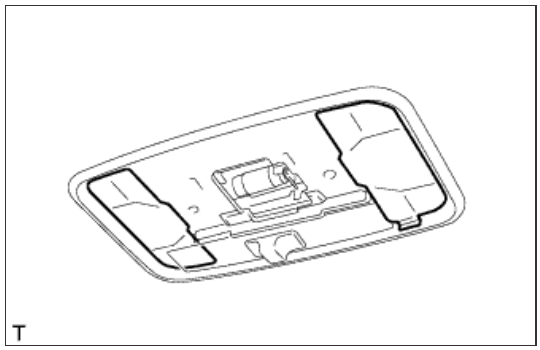


c. Using a screwdriver, push the 2 levers in the direction of the arrows in the illustration, and detach the 2 claws labeled A.

d. Detach the 2 claws labeled .

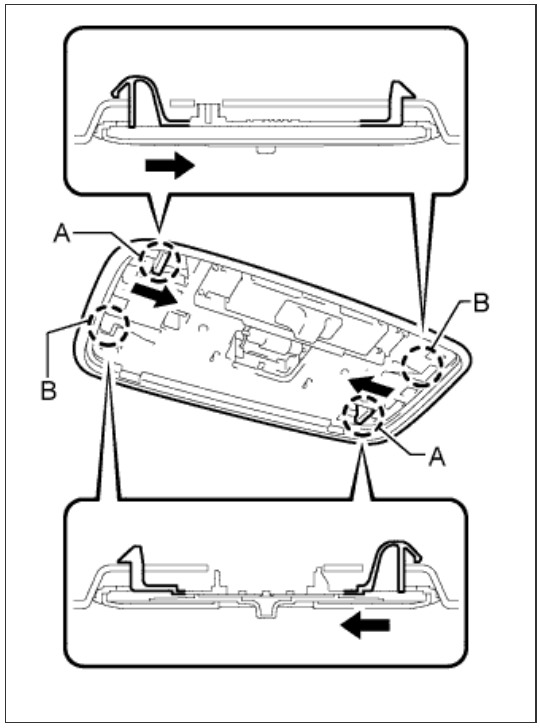

e. Detach the 4 claws and remove the room light from the room light switch base.

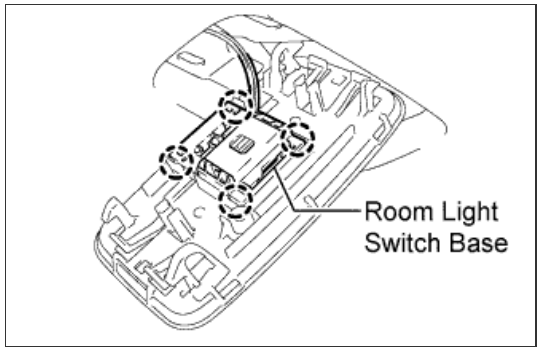


32. REMOVE VISOR BRACKET COVER

HINT:


Use the same procedure to remove the visor bracket cover on the other side.

a. Detach the 4 claws and remove the visor bracket cover.

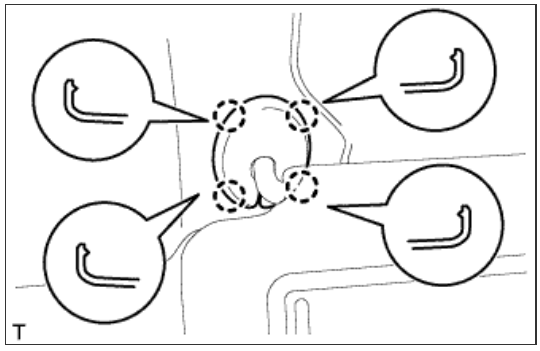

33. REMOVE VISOR ASSEMBLY LH

a. Remove the 2 screws and visor.

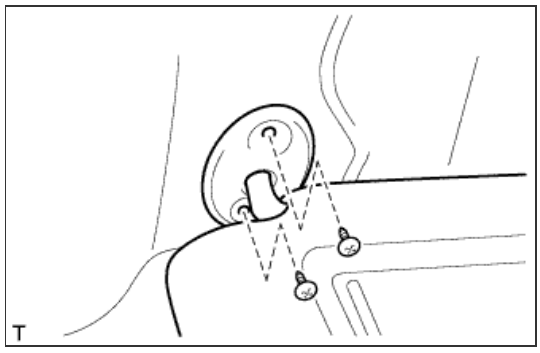

34. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


35. REMOVE VISOR HOLDER

HINT:

Use the same procedure to remove the visor holder on the other side.

a. rn the visor holder approximately 45° and pull it out as shown in the illustration.

b. Detach the 2 claws and remove the visor holder.

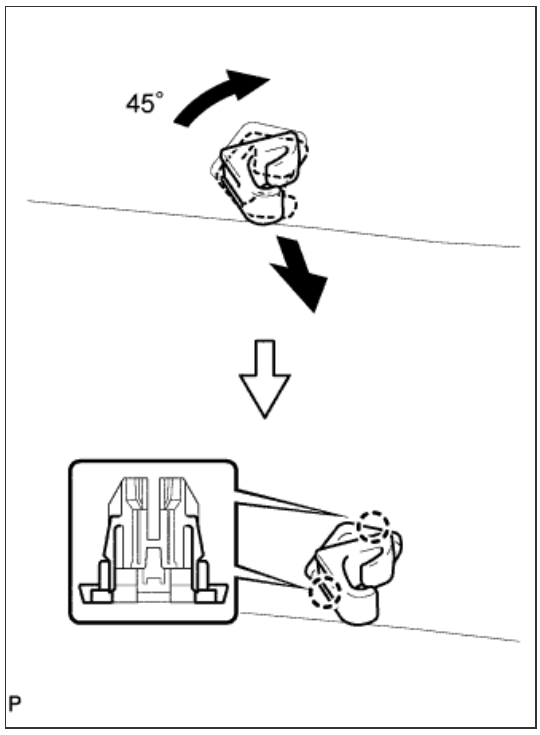


36. REMOVE CENTER VISOR ASSEMBLY LH (w/ Sub Visor)

a. Using a screwdriver, pry off the cover to detach the 2 clips and remove the center visor.

HINT:

ape the screwdriver tip before use.

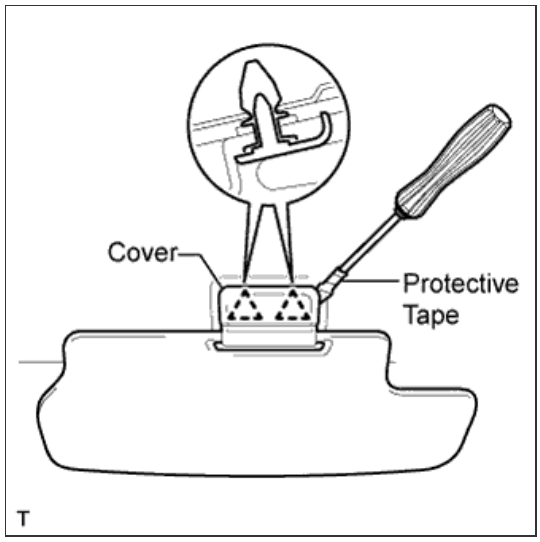


37. REMOVE CENTER VISOR ASSEMBLY RH (w/ Sub Visor)

HINT:

Use the same procedures described for the LH side.


38. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Detach the 2 claws and remove the cover as shown in the illustration.

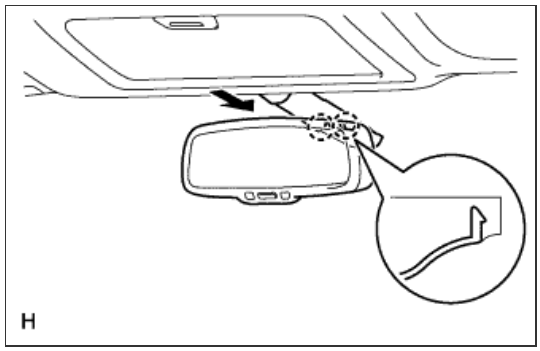

39. REMOVE RAIN SENSOR COVER (w/ Rain Sensor)


a. Slide the No. 2 cover in the direction of the arrow labeled (1).

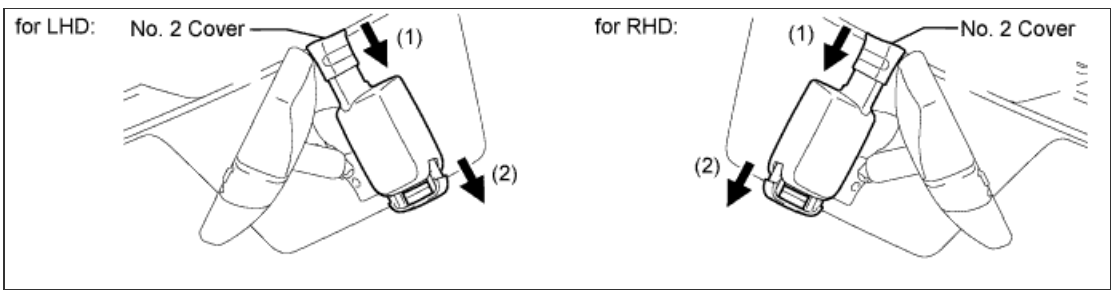

b. Pull the stopper in the direction of the arrow labeled (2) to remove the No. 2 cover.

40. REMOVE SEAT BELT ANCHOR COVER (for 3 Person Seat Type Rear No. 2 Seat)

a. Detach the 4 clips and 4 guides, and remove the seat belt anchor cover.

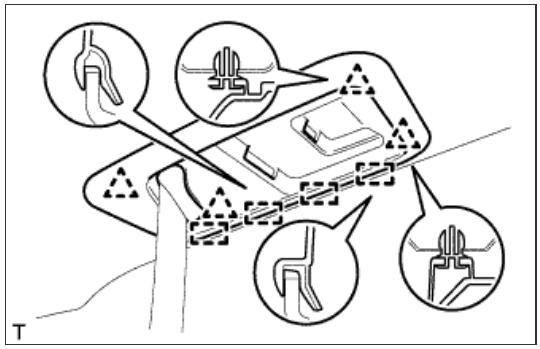

41. REMOVE ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to remove the assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.

c. Remove the 2 clips from the vehicle body.

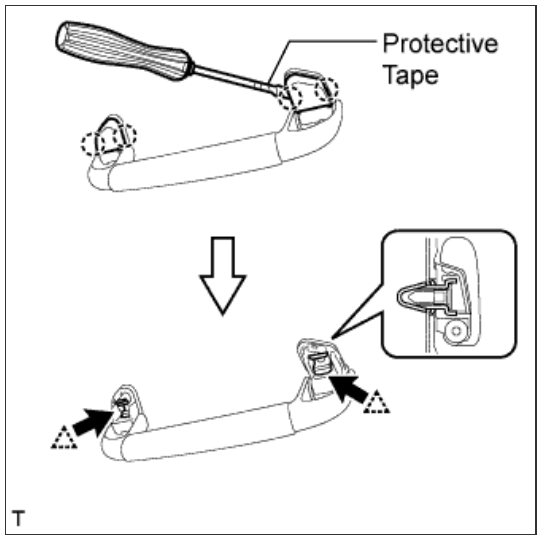

42. REMOVE NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype or w/o Rear No. 2 Seat:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

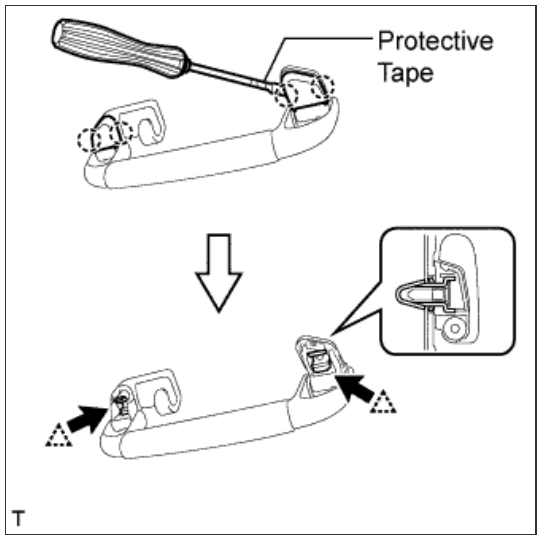

b. w/ Rear No. 2 Seat, for Face to Face Seat ype:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

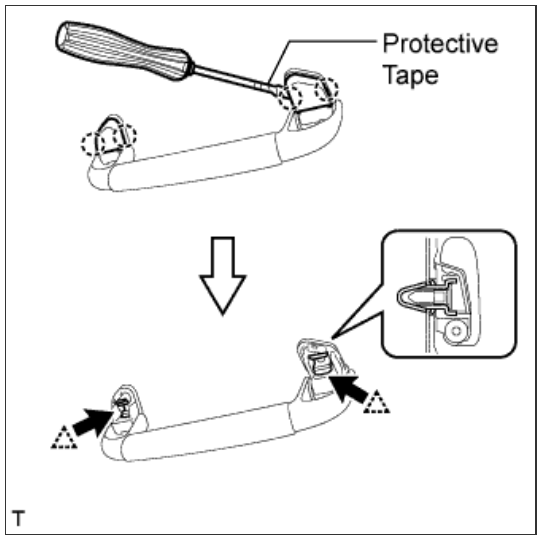

43. REMOVE NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

44. REMOVE 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to remove the 3rd seat assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.


c. Remove the 2 clips from the vehicle body.

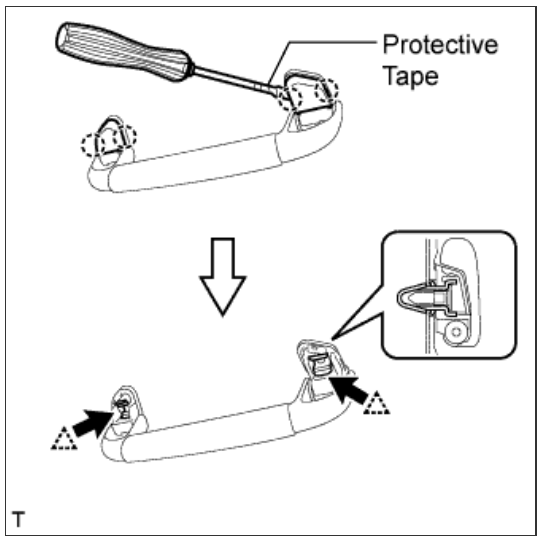

45. REMOVE ROOF HEADLINING ASSEMBLY


HINT:

- **for Manual Seat:**
  When removing the roof headlining, move the front seat and rear No. 1 seat to the position shown in the illustration.
- **for Power Seat:**
  When removing the roof headlining, connect the cable to the negative (-) battery terminal and move the front seat and No. 1 rear seat to the position shown in the illustration.
- **for Power Seat:**
  After moving the seats, disconnect the cable from the negative (-) battery terminal.

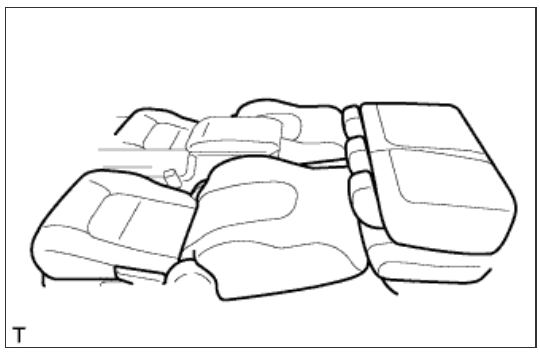


a. w/ EC Mirror


a. w/ EC Mirror:
Disconnect the inner mirror connector.

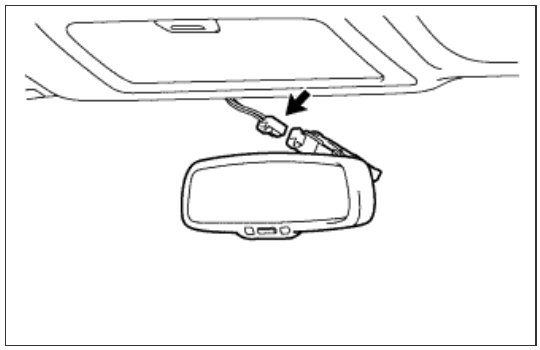

b. w/ Rain Sensor:
Disconnect the rain sensor connector.

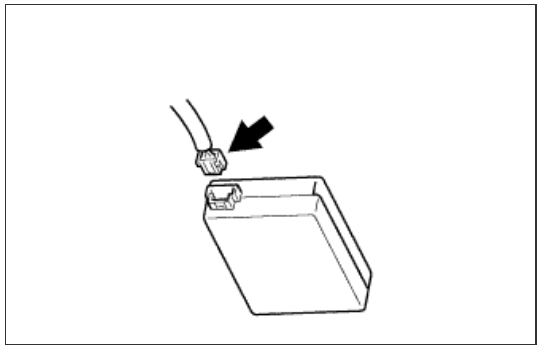


c. Disconnect the drive gear connector.

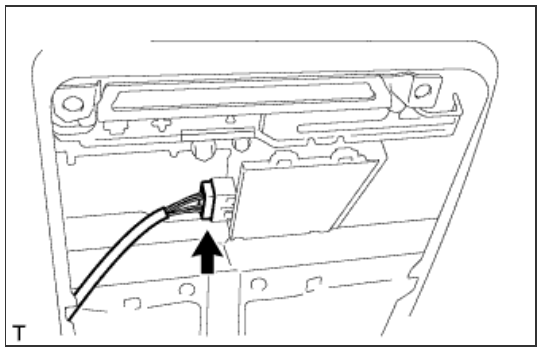


d. Disconnect the 3 roof wire connectors and washer hose.

e. Detach the 4 clamps.

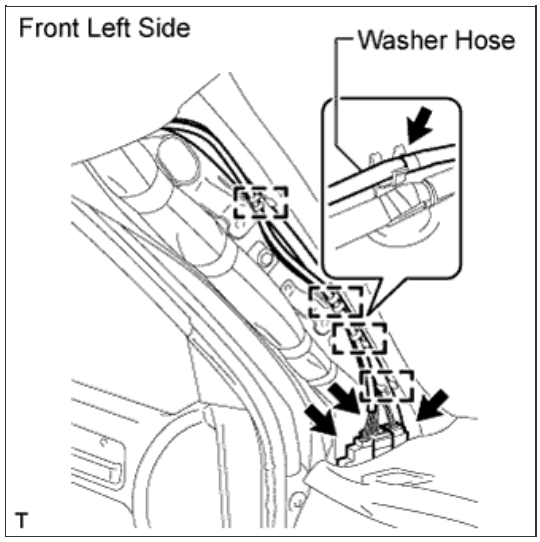


f. Remove the bolt.


g. Disconnect the antenna cord connector and detach the 2 clamps.

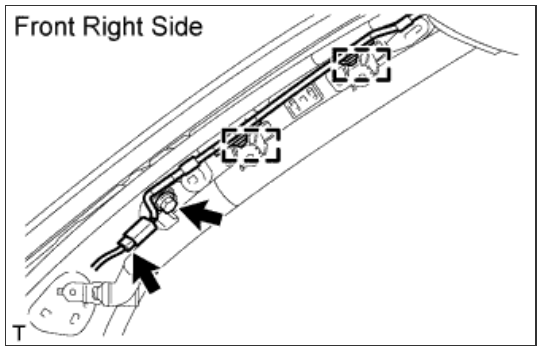


h. Disconnect the antenna cord connector.

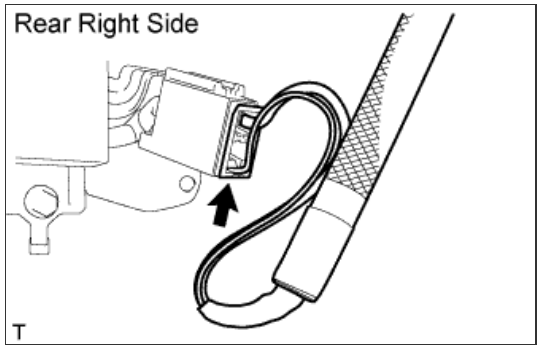

i. Disconnect the washer hose.

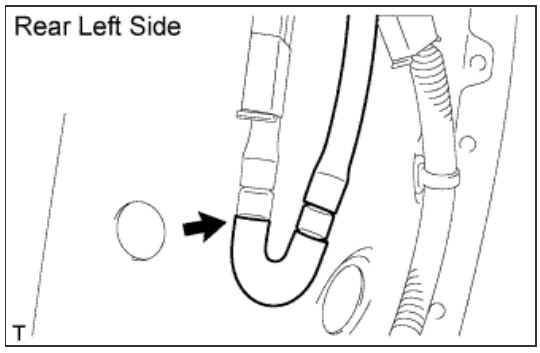


j. for 3 Person Seat ype Rear No. 2 Seat:
Detach the 12 claws, 2 clips, 2 guides and 16 fasteners.

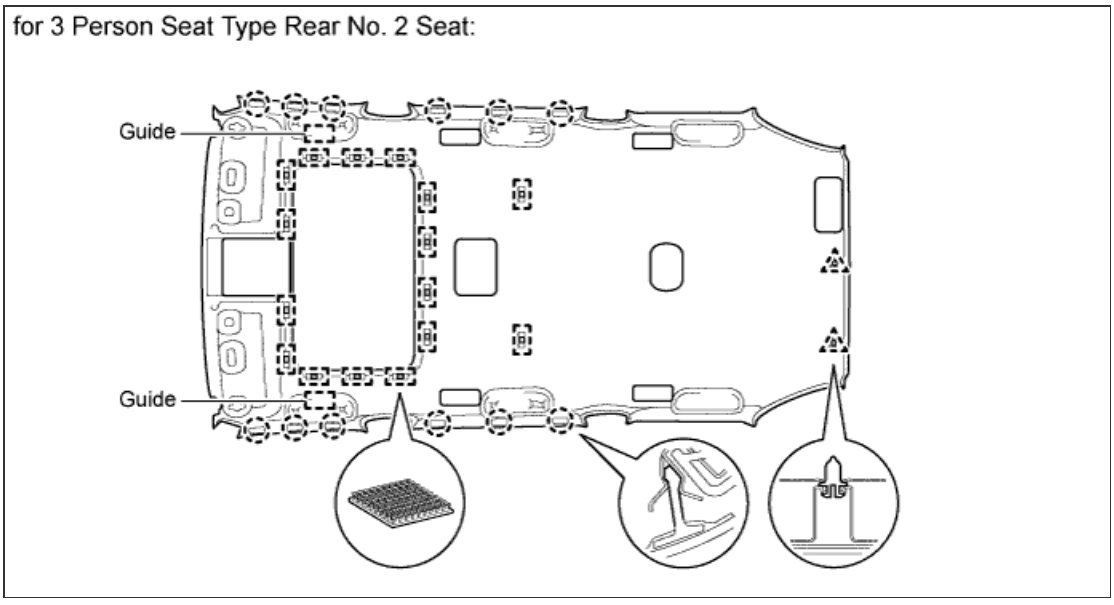

k. except 3 Person Seat ype Rear No. 2 Seat:

k. except 3 Person Seat Type Rear No. 2 Seat:
Detach the 12 claws, 3 clips, 2 guides and 16 fasteners.


except 3 Person Seat Type Rear No. 2 Seat:

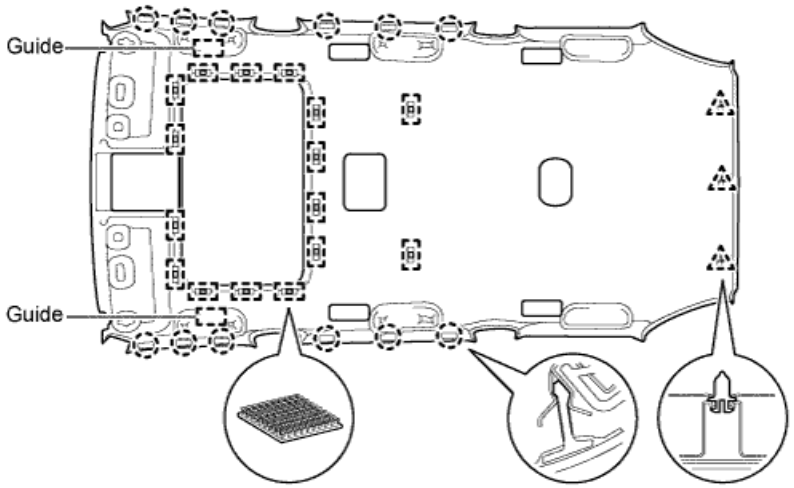

l. Remove the headlining from the rear of the vehicle as shown in the illustration.

NOTICE:

e careful not to damage the roof headlining when taking it out.

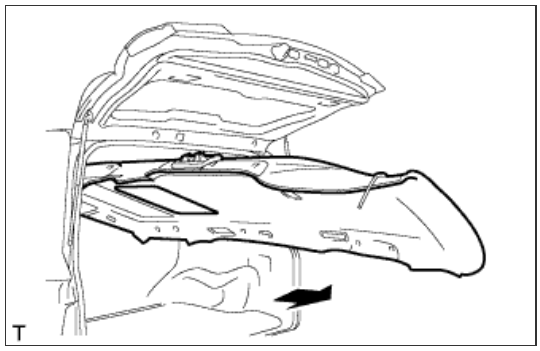


46. REMOVE FRONT ROOF SIDE RAIL GARNISH LH

a. Detach the 3 clips.

b. Cut off the 3 clips and remove the roof side rail garnish.

c. Remove 3 clips from the vehicle body.

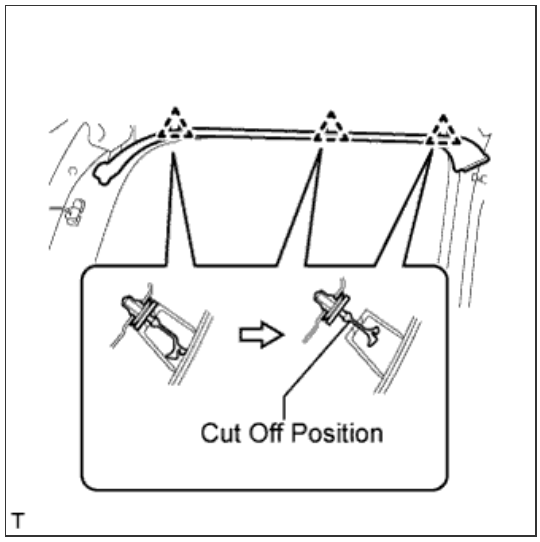


47. REMOVE FRONT ROOF SIDE RAIL GARNISH RH

HINT:

Use the same procedures described for the LH side.

48. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

a. Remove the front door opening trim weatherstrip.

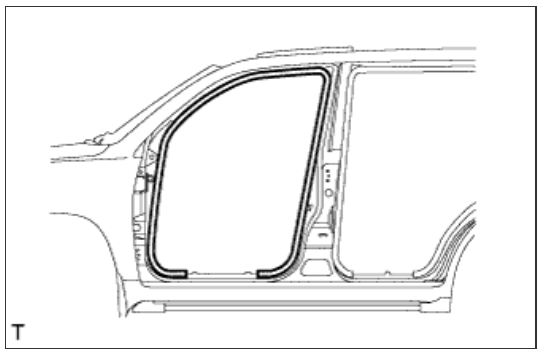


49. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

50. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

a. Remove the rear door opening trim weatherstrip.

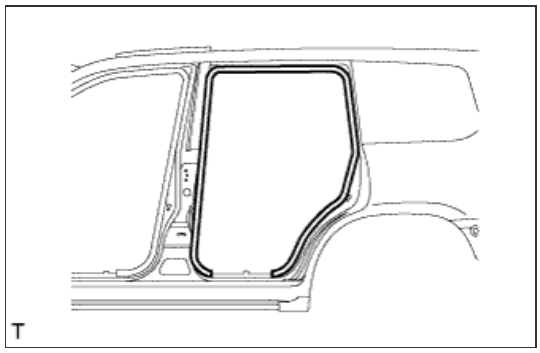


51. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

52. REMOVE BACK DOOR WEATHERSTRIP


a. Remove the back door weatherstrip.

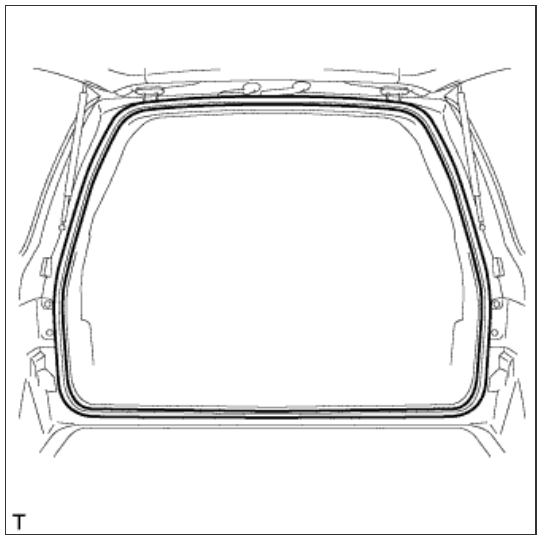

53. REMOVE FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the front door scuff plate outside.

b. Detach the 4 clips and remove the front door scuff plate outside.

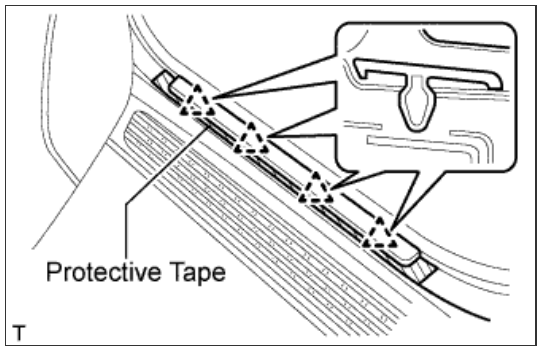

54. REMOVE FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

55. REMOVE REAR DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the rear door scuff plate outside.

b. Detach the 3 clips and remove the rear door scuff plate outside.

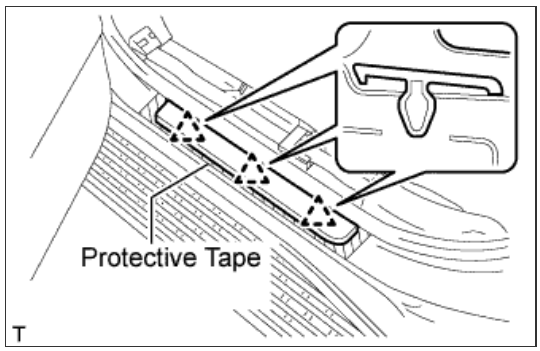


56. REMOVE REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

57. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws of the plate, and slide the plate in the direction of the arrow to remove it.

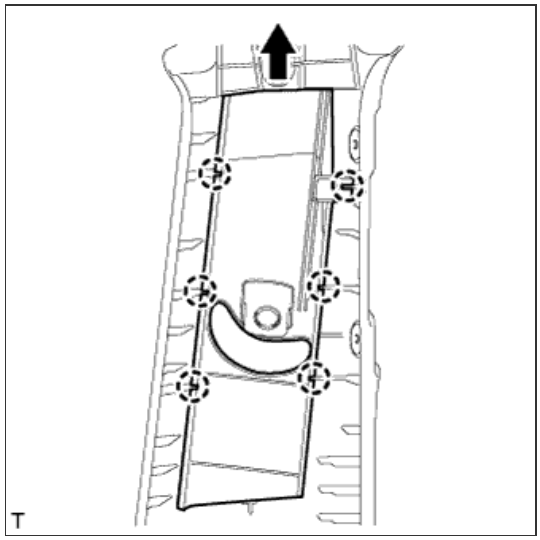


58. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

59. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws and remove the plate.

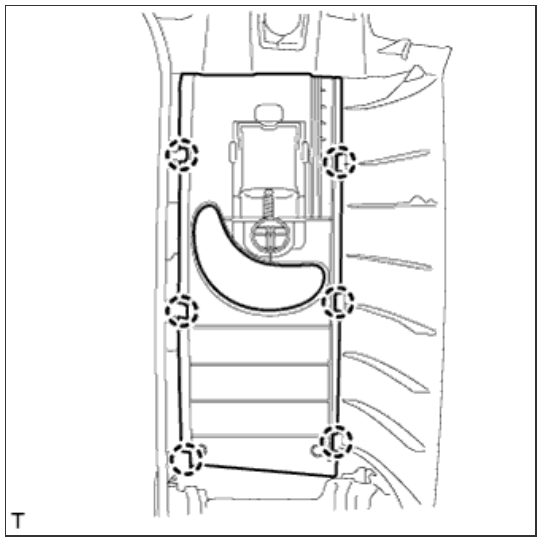


60. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

61. REMOVE ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 7 claws and remove the cover.

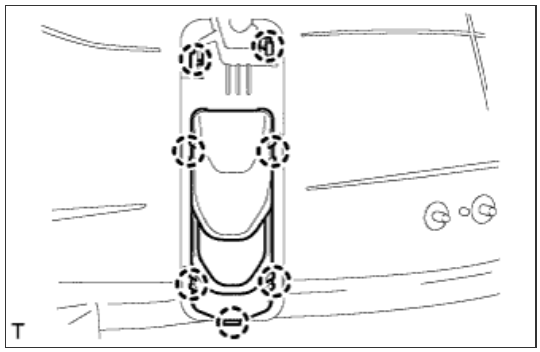

62. REMOVE ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedures described for the LH side.

63. REMOVE REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to remove the hanger on the other side.

a. Remove the 2 spring nuts and hanger.

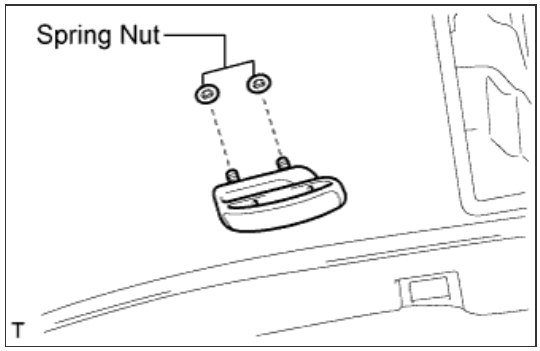

64. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Remove the 2 spring nuts and hanger.

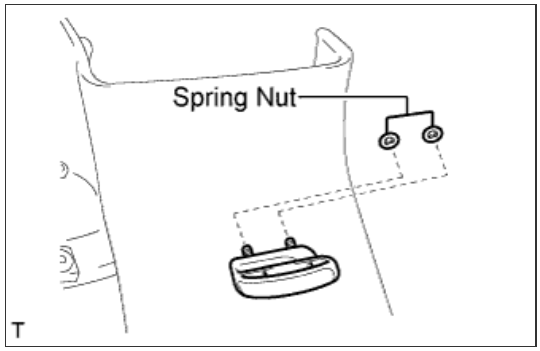


65. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:

Use the same procedures described for the LH side.


66. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY LH

a. w/ Rear Heater:
Remove the 8 screws and duct.

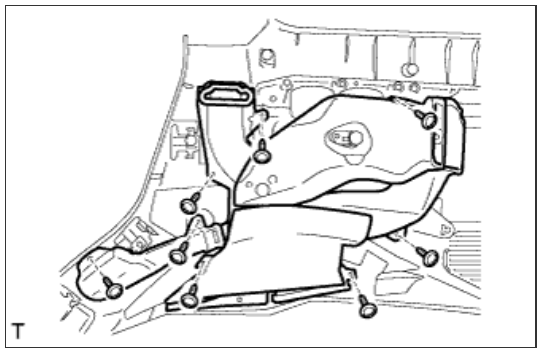

b. Remove the 7 screws.


c. Detach the 4 claws and remove the arter trim cover.

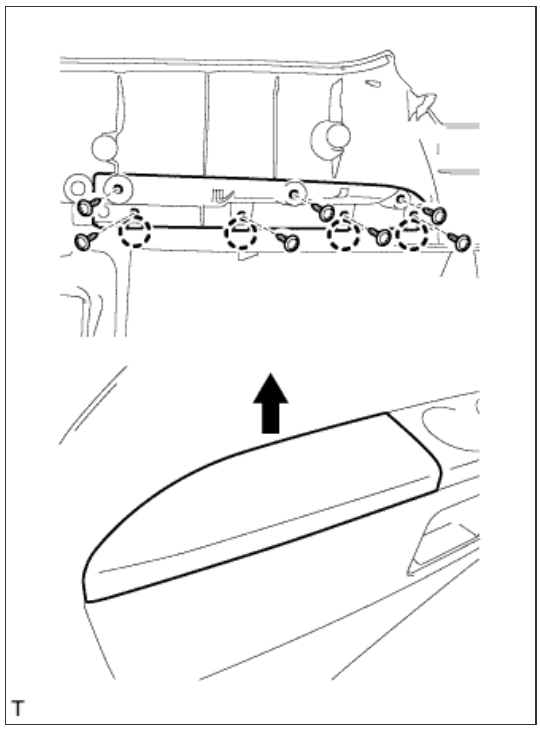

67. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY RH

a. Remove the 7 screws.


b. Detach the 4 claws and remove the arter trim cover.

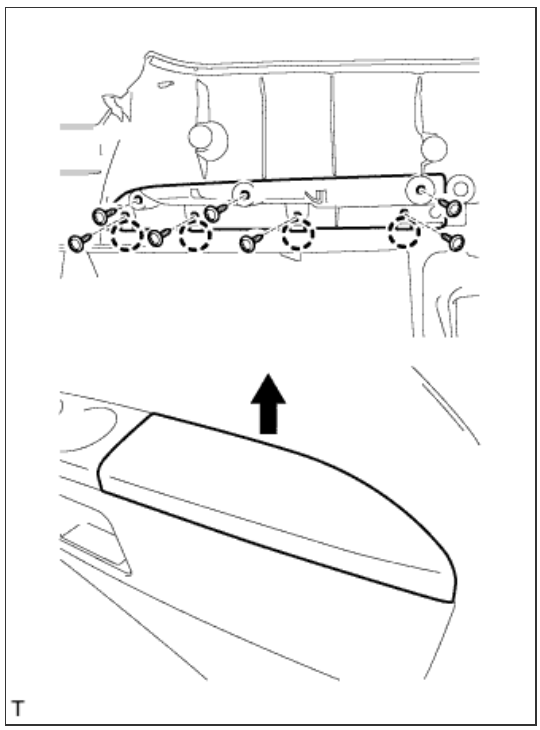

68. REMOVE NO. 2 CUP HOLDER

a. Remove the 5 screws.


b. Detach the 3 claws and remove the cup holder.

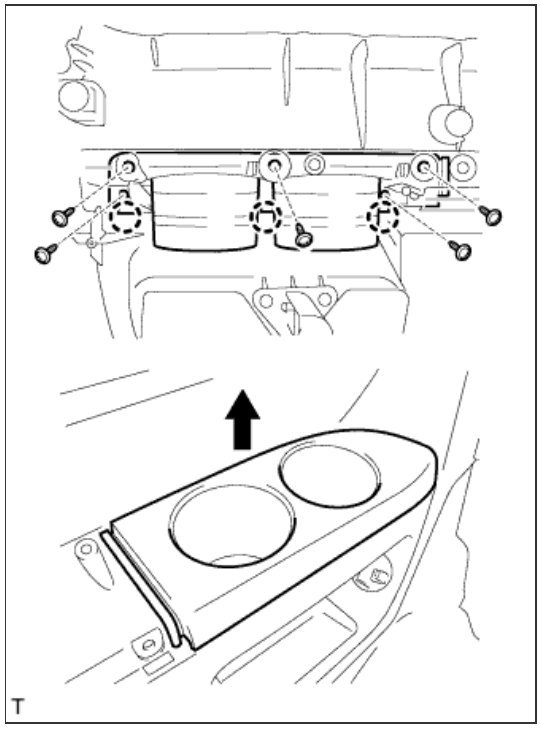

69. REMOVE NO. 1 CUP HOLDER


a. Remove the 5 screws.

b. Detach the 3 claws and remove the cup holder.

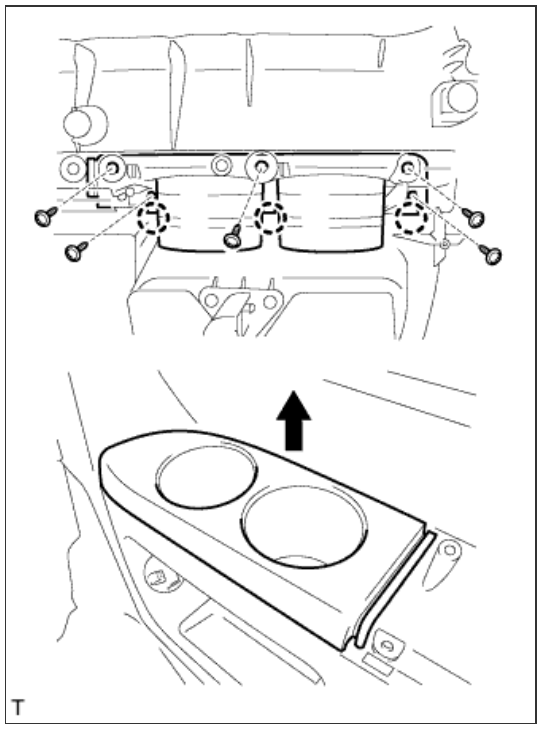


70. REMOVE NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

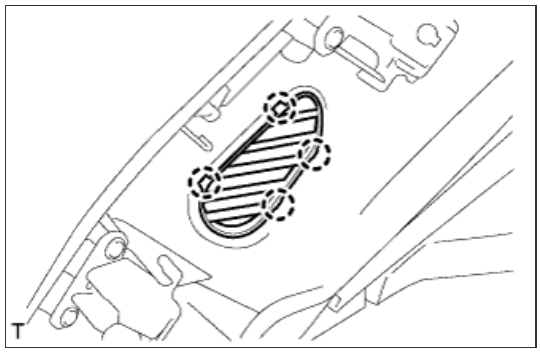


71. REMOVE NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Remove the 6 screws and duct.

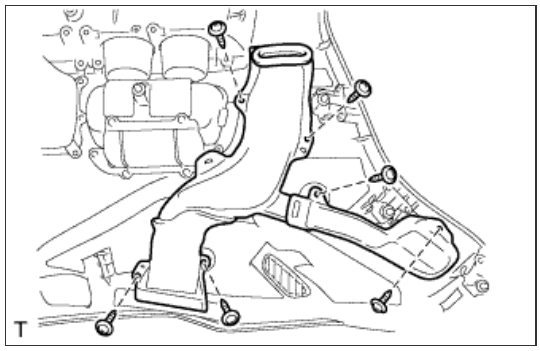


b. Detach the 4 claws and remove the cover.

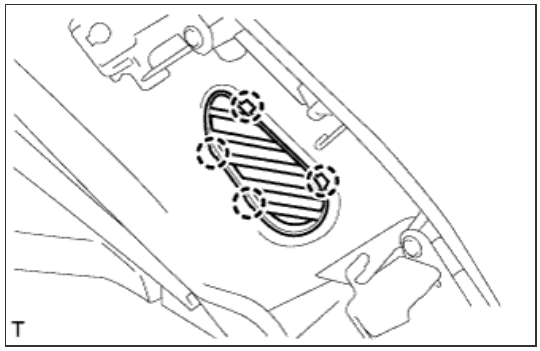

72. REMOVE NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

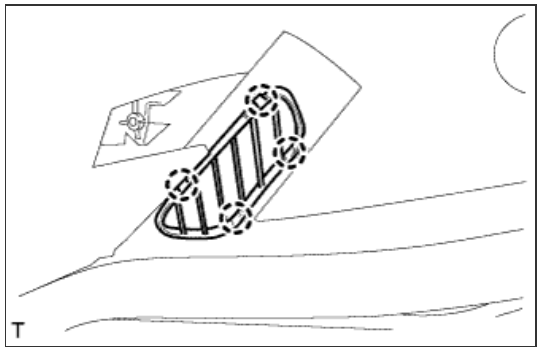

73. REMOVE NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.

74. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 4 claws and remove the seat lock control lever.


75. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

76. REMOVE REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

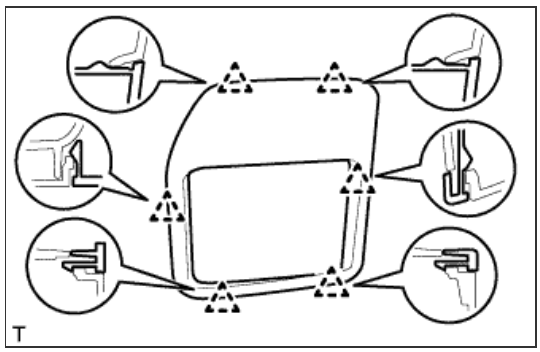


77. REMOVE REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

78. REMOVE QUARTER TRIM COVER LH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

a. Detach the 6 clips and remove the arter trim cover.

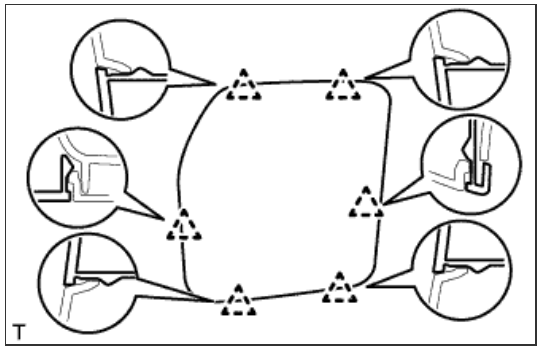

79. REMOVE QUARTER TRIM COVER RH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

80. REMOVE QUARTER TRIM LID SUB-ASSEMBLY RH


a. Remove the arter trim lid.

81. REMOVE SIDE TRIM BOX COVER

a. Remove the side trim box cover.

82. REMOVE SIDE TRIM BOX

a. Remove the 9 screws and side trim box.

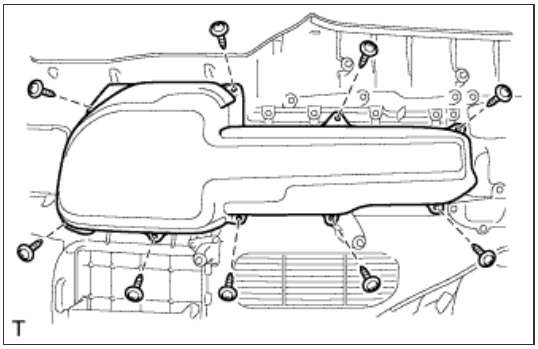

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

3. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

4. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).


5. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

6. REMOVE FRONT DOOR SCUFF PLATE LH

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

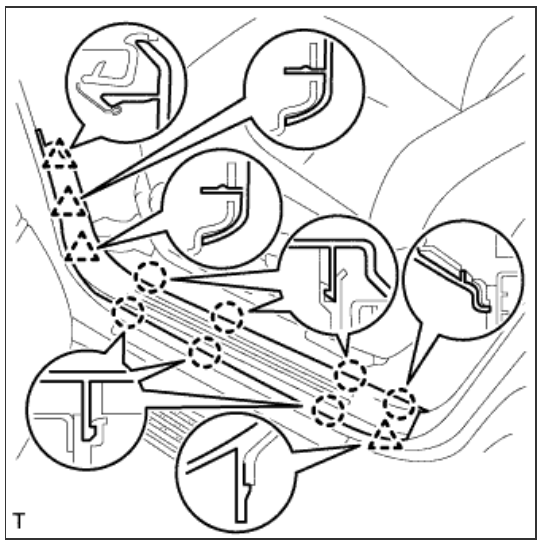

7. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

8. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.


a. Detach the 2 claws and remove the step cover.

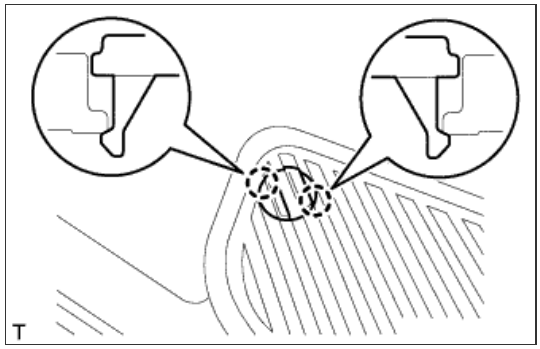

9. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

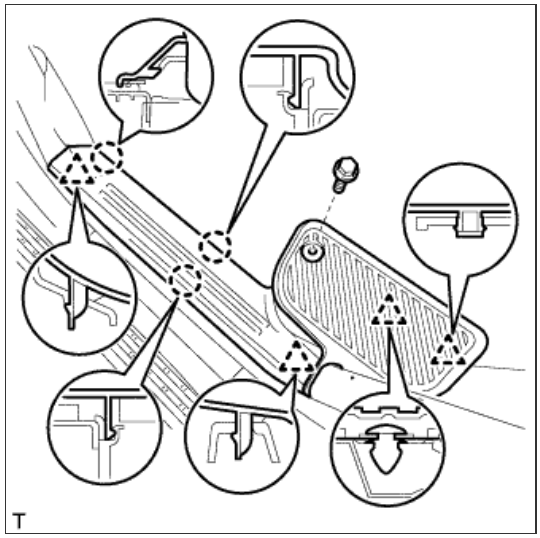


10. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

11. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

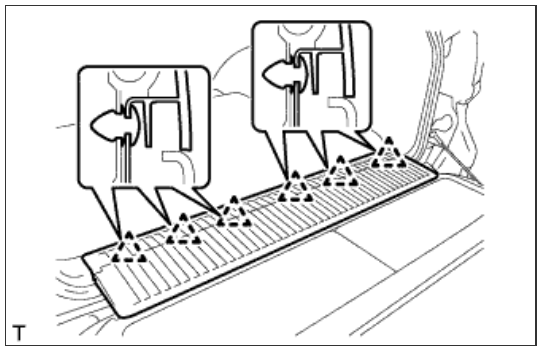


12. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY

HINT:


Use the same procedure to remove the front assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

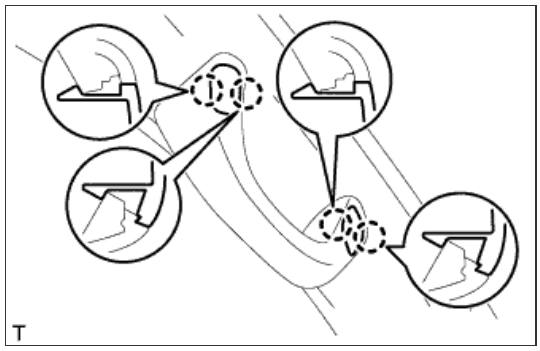

b. Remove the 2 bolts.


c. Detach the 2 claws and remove the front assist grip.

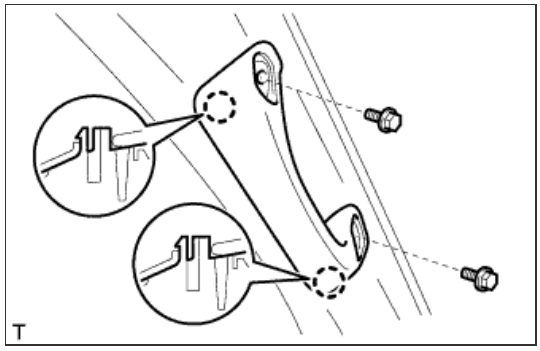

13. REMOVE FRONT PILLAR GARNISH LH

a. Detach the clip 3 guides, and remove the front pillar garnish.

b. for 9, 14 Speakers:
Disconnect the speaker connector and then remove the front pillar garnish.

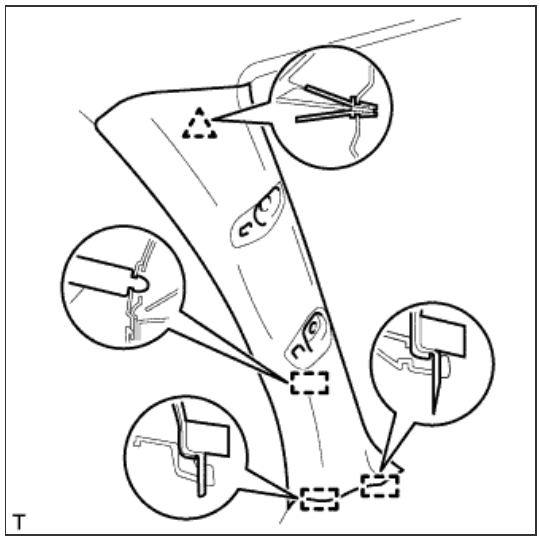


c. Protect the curtain shield airbag.

i. horoughly cover the airbag with a cloth or nylon sheet and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

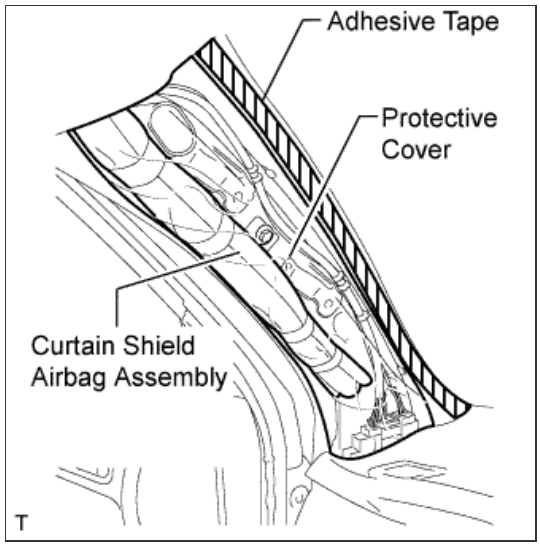

14. REMOVE FRONT PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

15. REMOVE CENTER PILLAR GARNISH COVER LH

HINT:

- **for Manual Seat:**
  When removing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When removing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Detach the 2 clips and 2 guides, and remove the cover.

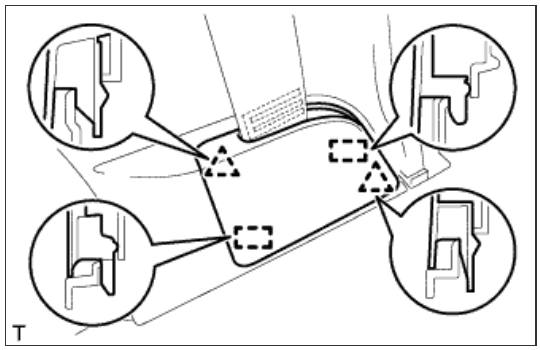

16. REMOVE CENTER PILLAR GARNISH COVER RH

HINT:

Use the same procedures described for the LH side.

17. REMOVE CENTER LOWER PILLAR GARNISH LH


HINT:

- **for Manual Seat:**
  When removing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When removing the center lower pillar garnish, connect the cable to the negative (-) battery terminal and operate the power seat


switch to move the front seat and seatback to the foremost upright position.

- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Remove the bolt and seat belt anchor.

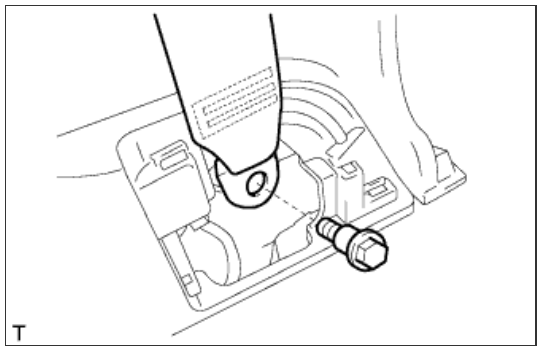

b. Detach the 2 claws and 7 clips, and remove the center lower pillar garnish.

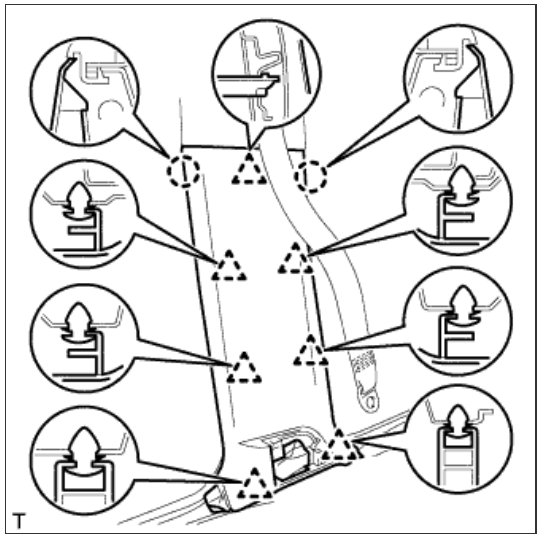

18. REMOVE CENTER LOWER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

19. REMOVE REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to remove the rear assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

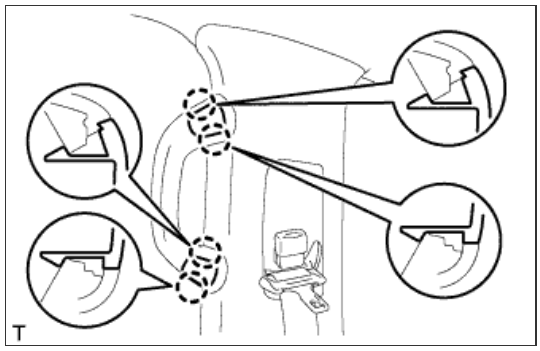

b. Remove the 2 bolts.

c. Detach the 2 claws and remove the rear assist grip.

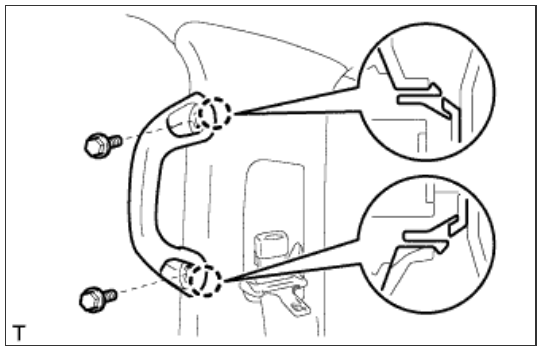


20. REMOVE CENTER PILLAR GARNISH LH

a. Remove the bolt.

b. Detach the 2 clips and 2 guides.

c. Pass the seat belt anchor through the center pillar garnish, and remove the center pillar garnish.

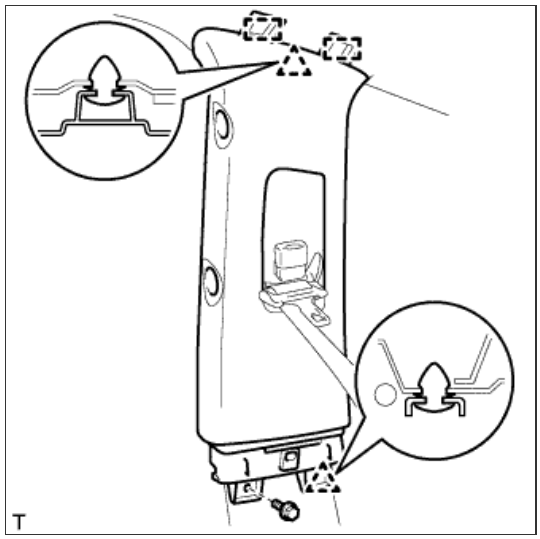

21. REMOVE CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

22. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


ape the screwdriver tip before use.

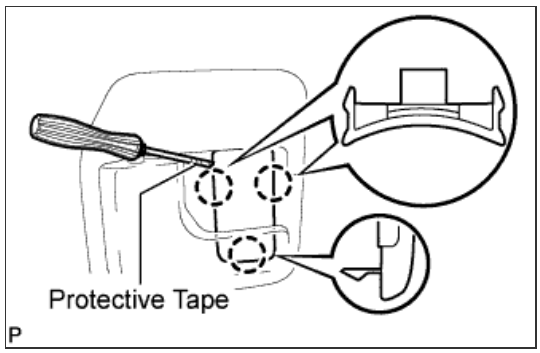


23. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front arter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

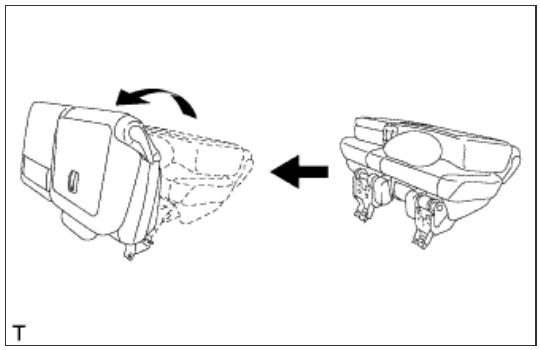


a. Detach the 3 claws and remove the cover.

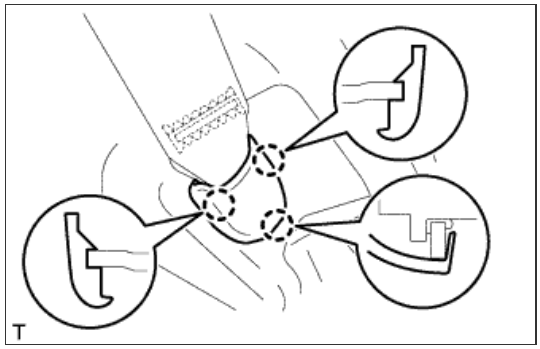

b. Remove the bolt and rear No. 1 seat belt anchor.

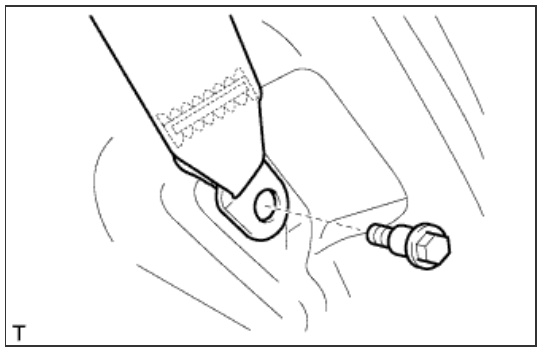

c. w/ Rear No. 2 Seat, except Face to Face Seat ype:
Remove the bolt and rear No. 2 seat belt anchor.

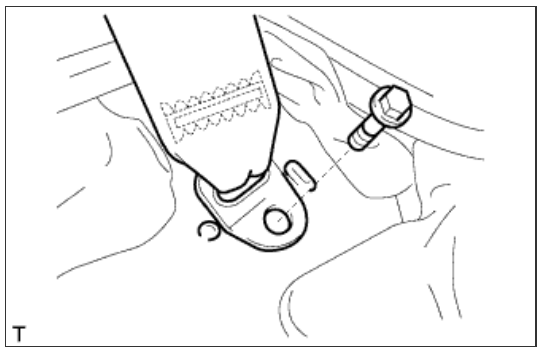


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the arter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the arter trim panel.

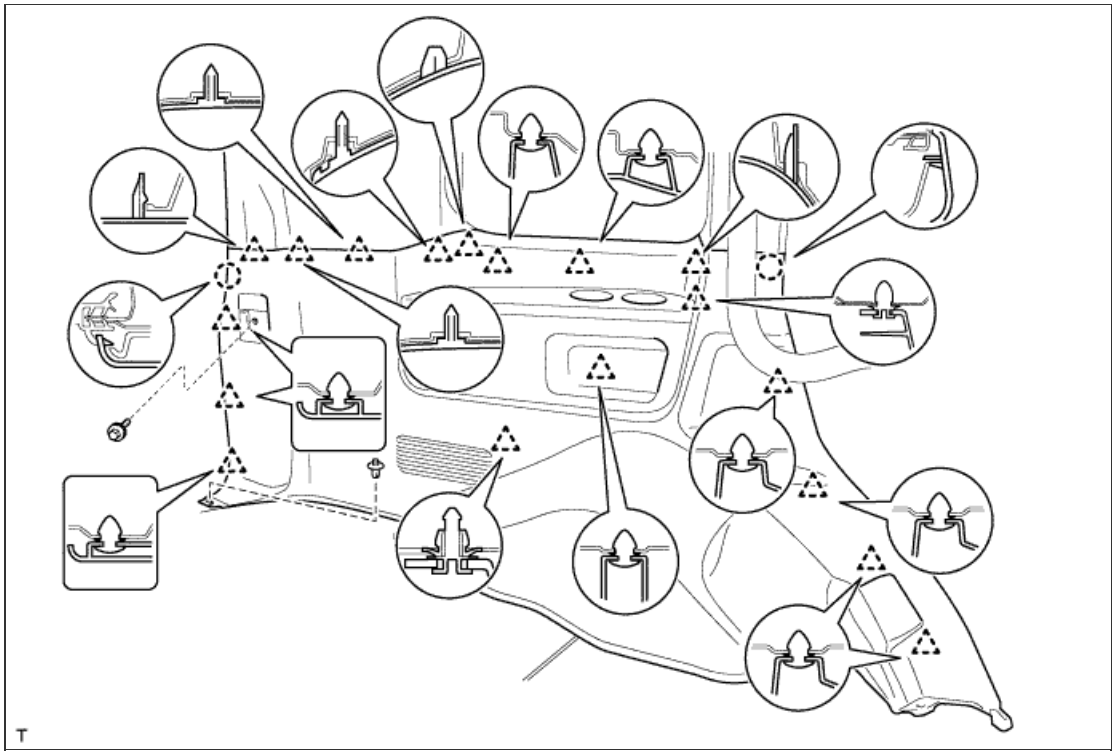

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the arter trim panel.

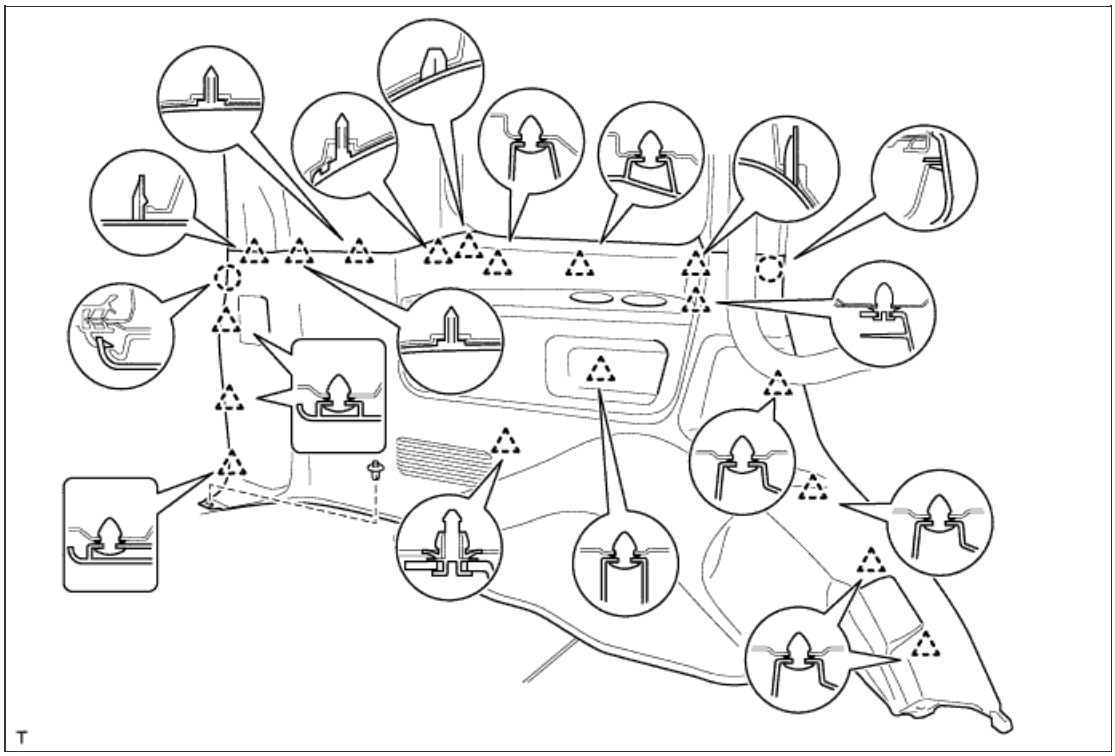


24. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:


When removing the front arter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

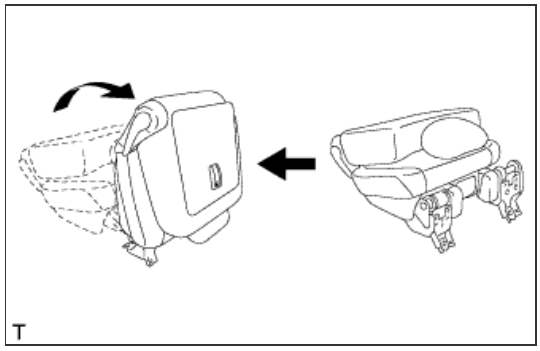


a. Detach the 3 claws and remove the cover.

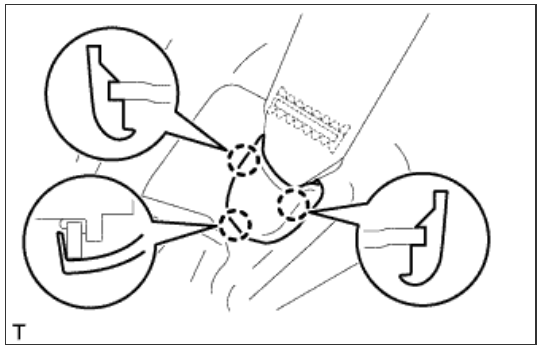

b. Remove the bolt and rear No. 1 seat belt anchor.

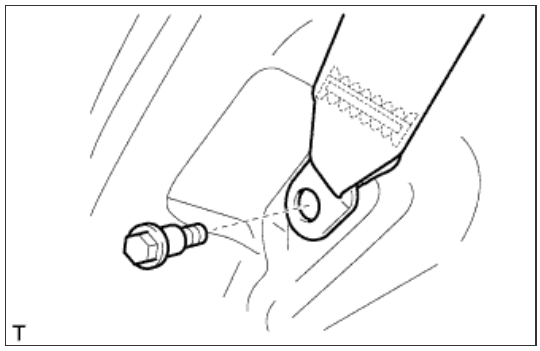


c. w/ Rear No. 2 Seat, except Face to Face Seat ype:

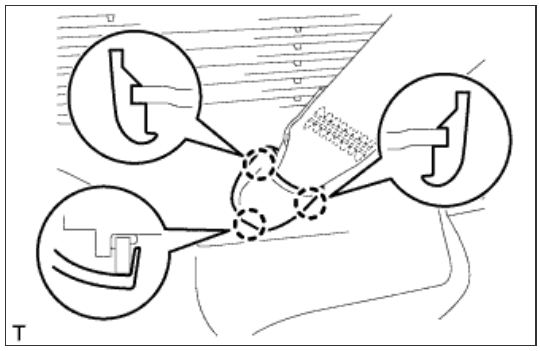

i. Detach the 3 claws and remove the cover.

ii. Remove the bolt and rear No. 2 seat belt anchor.

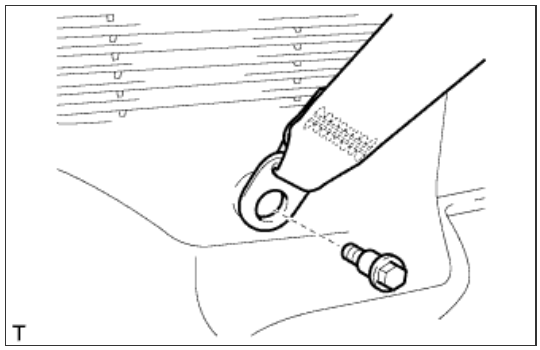


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 16 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the arter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the arter trim panel.

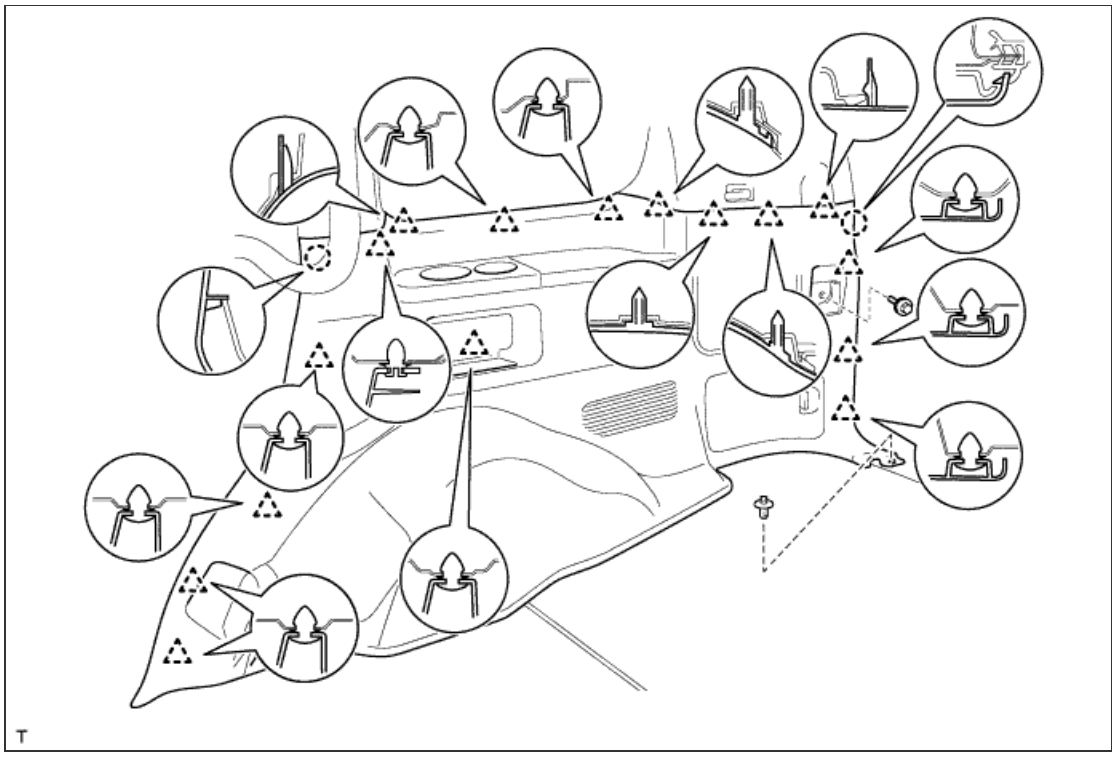

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.

ii. Detach the 16 clips and 2 claws, and remove the arter trim panel.

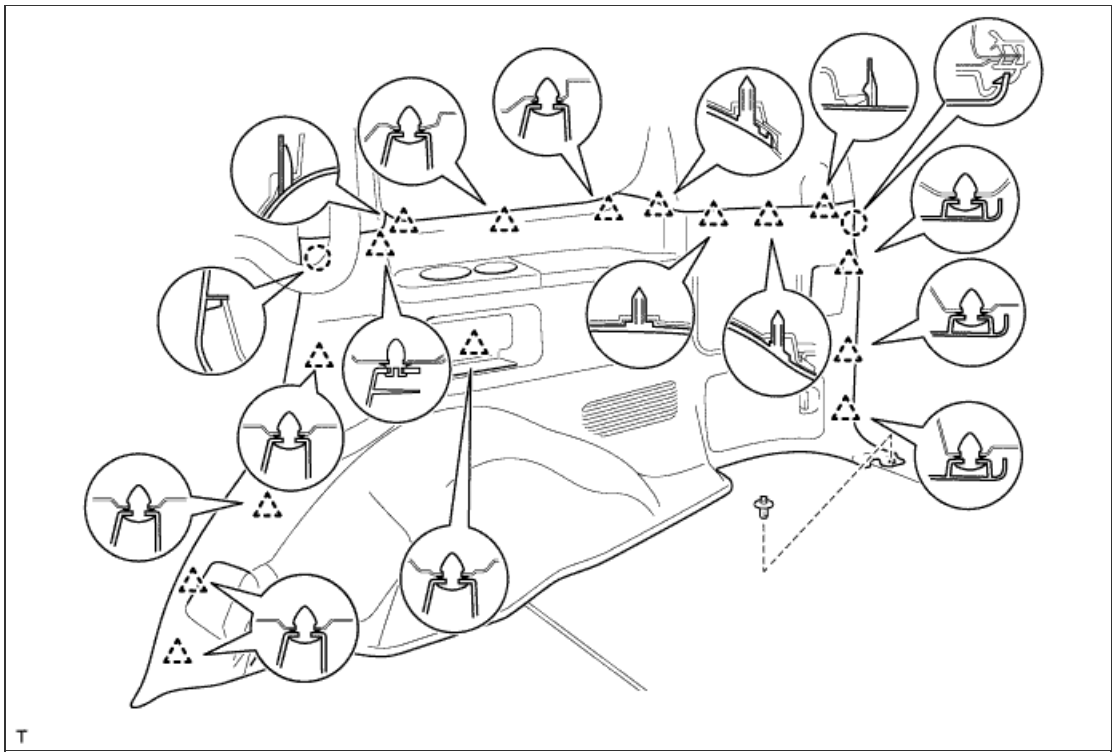


25. REMOVE REAR FRONT QUARTER TRIM GARNISH LH

a. Remove the screw.

b. Detach the clip and 2 guides.

c. Pass the seat belt anchor through the arter trim garnish, and remove the arter trim garnish.

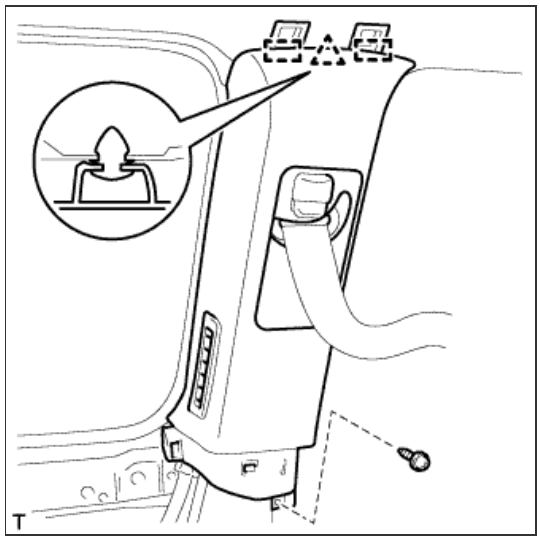

26. REMOVE REAR FRONT QUARTER TRIM GARNISH RH

HINT:

Use the same procedures described for the LH side.

27. REMOVE REAR UPPER PILLAR GARNISH LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype


i. Using a screwdriver, detach the 2 claws and open the seat belt shoulder anchor cover.

HINT:


ape the screwdriver tip before use.



ii. Remove the bolt and seat belt shoulder anchor.

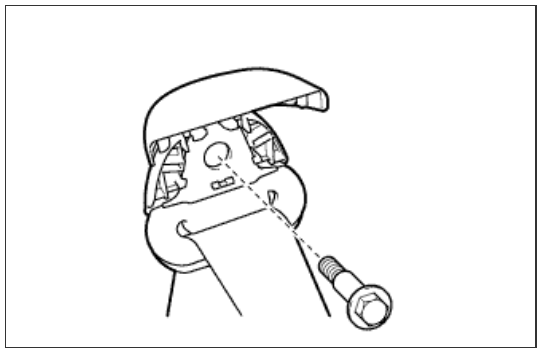

b. Detach the 5 clips and remove the rear upper pillar garnish.

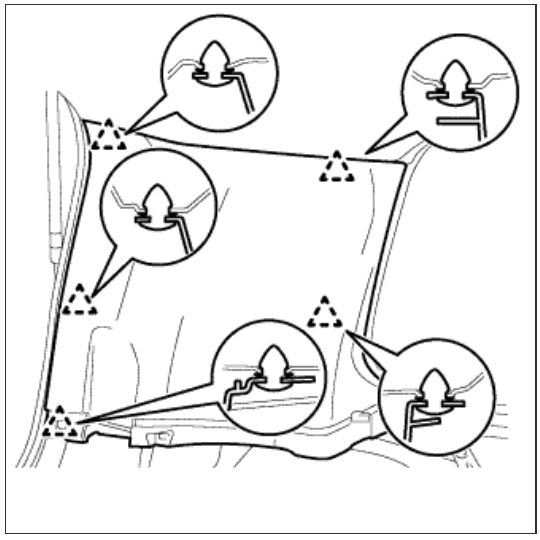

28. REMOVE REAR UPPER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

29. REMOVE MAP LIGHT ASSEMBLY

a. Using a screwdriver, detach the 2 claws and open the 2 covers.


HINT:

ape the screwdriver tip before use.

b. Remove the 2 screws.

c. Detach the 2 clips and 2 guides.


d. Disconnect the connector and then remove the map light.

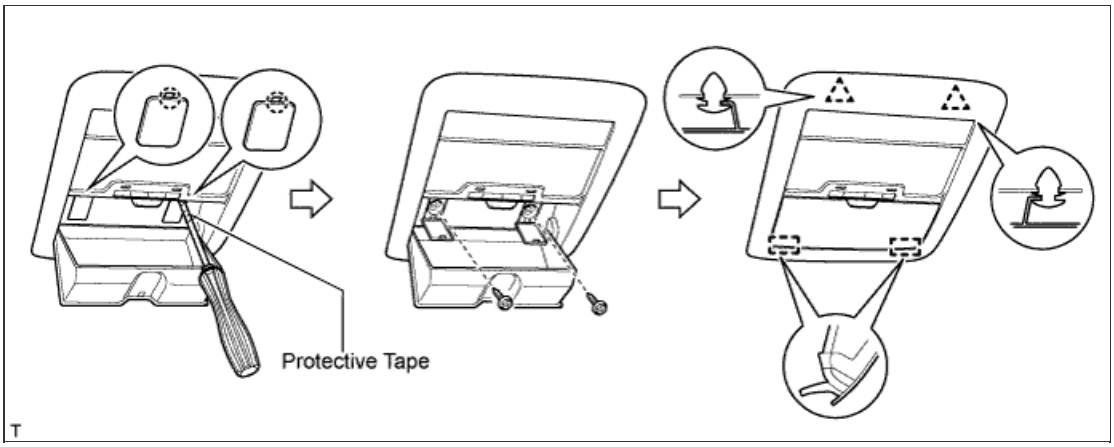

30. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

a. Detach the 4 clips.

b. Disconnect the connector and then remove the room light.

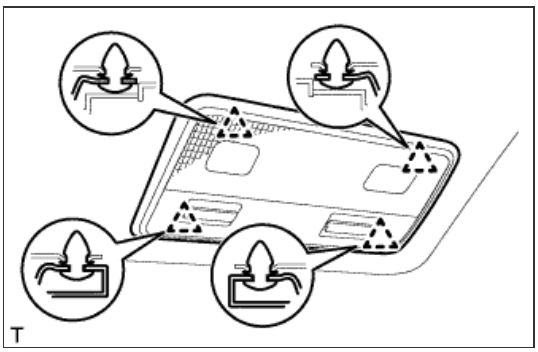


31. REMOVE NO. 2 ROOM LIGHT ASSEMBLY


a. Using a screwdriver, detach the 4 claws and remove the room light lens.

HINT:

ape the screwdriver tip before use.

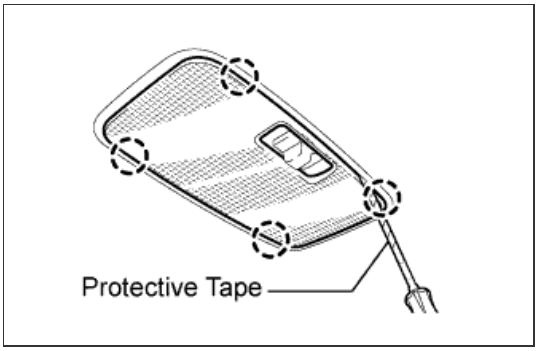


b. Remove the 2 covers.

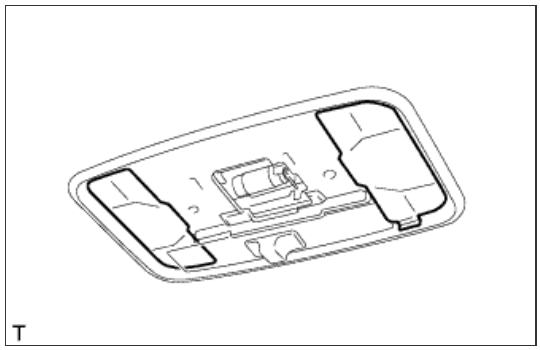


c. Using a screwdriver, push the 2 levers in the direction of the arrows in the illustration, and detach the 2 claws labeled A.

d. Detach the 2 claws labeled .

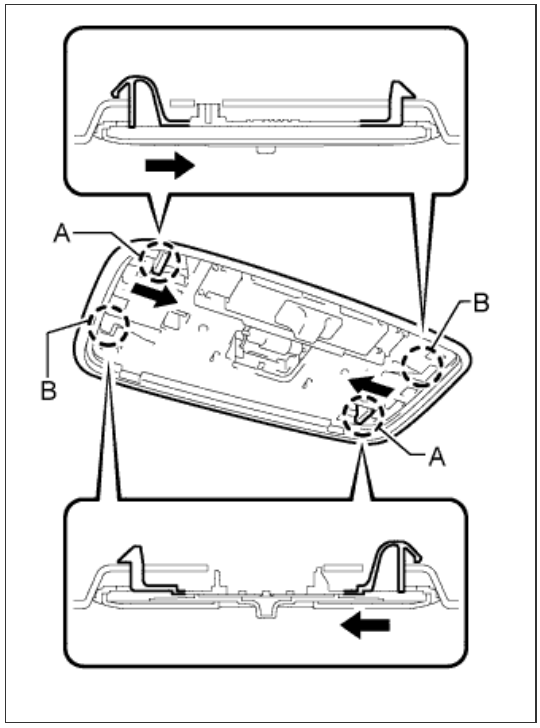

e. Detach the 4 claws and remove the room light from the room light switch base.

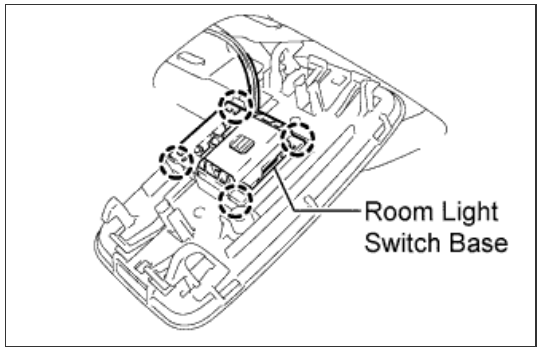


32. REMOVE VISOR BRACKET COVER

HINT:


Use the same procedure to remove the visor bracket cover on the other side.

a. Detach the 4 claws and remove the visor bracket cover.

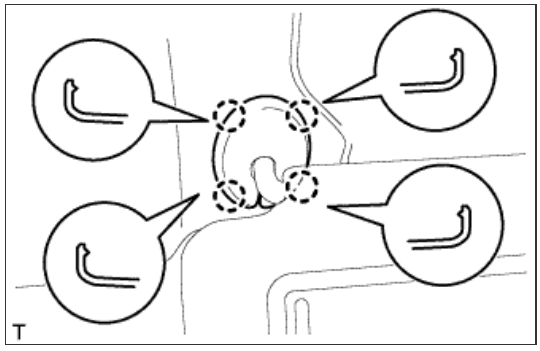

33. REMOVE VISOR ASSEMBLY LH

a. Remove the 2 screws and visor.

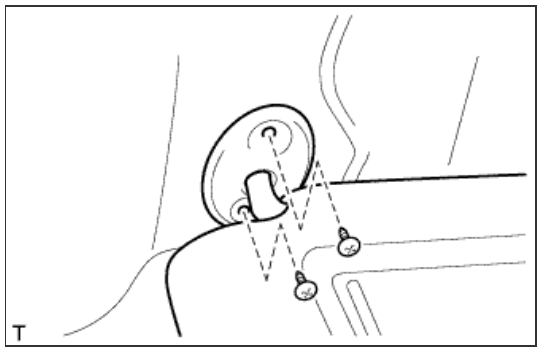

34. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


35. REMOVE VISOR HOLDER

HINT:

Use the same procedure to remove the visor holder on the other side.

a. rn the visor holder approximately 45° and pull it out as shown in the illustration.

b. Detach the 2 claws and remove the visor holder.

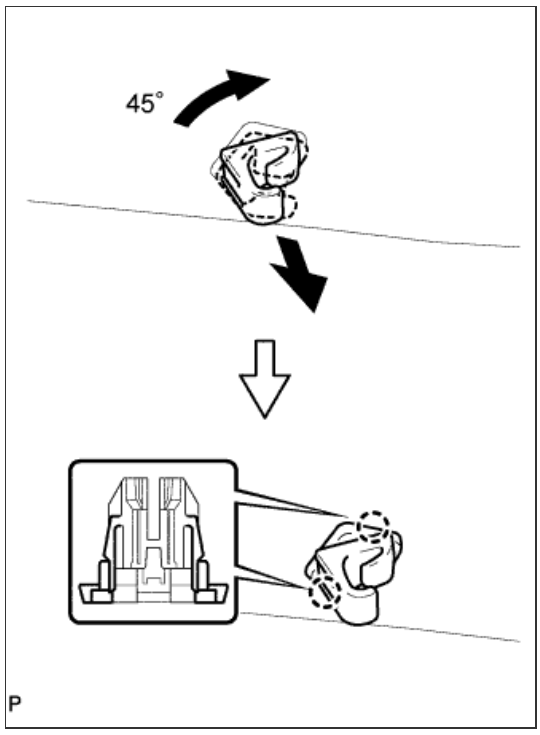


36. REMOVE CENTER VISOR ASSEMBLY LH (w/ Sub Visor)

a. Using a screwdriver, pry off the cover to detach the 2 clips and remove the center visor.

HINT:

ape the screwdriver tip before use.

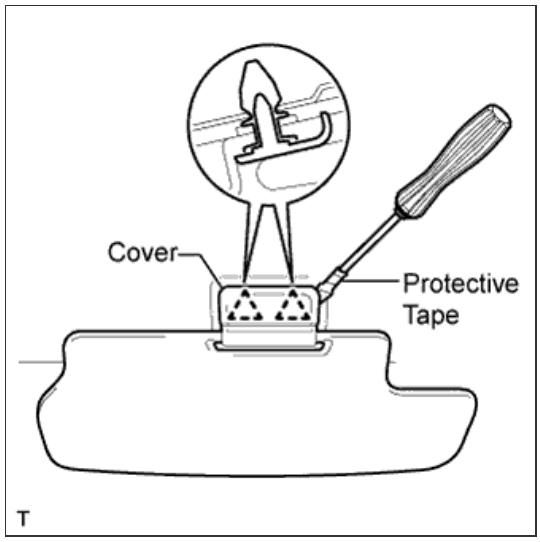


37. REMOVE CENTER VISOR ASSEMBLY RH (w/ Sub Visor)

HINT:

Use the same procedures described for the LH side.


38. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Detach the 2 claws and remove the cover as shown in the illustration.

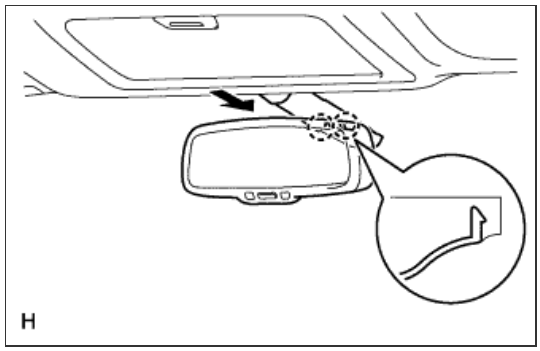

39. REMOVE RAIN SENSOR COVER (w/ Rain Sensor)


a. Slide the No. 2 cover in the direction of the arrow labeled (1).

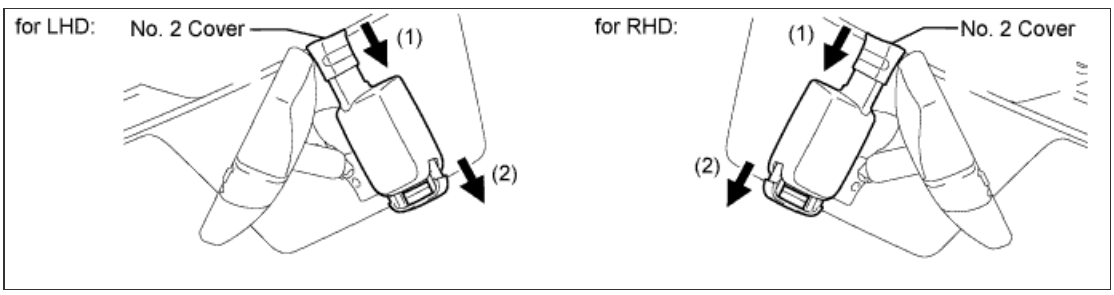

b. Pull the stopper in the direction of the arrow labeled (2) to remove the No. 2 cover.

40. REMOVE SEAT BELT ANCHOR COVER (for 3 Person Seat Type Rear No. 2 Seat)

a. Detach the 4 clips and 4 guides, and remove the seat belt anchor cover.

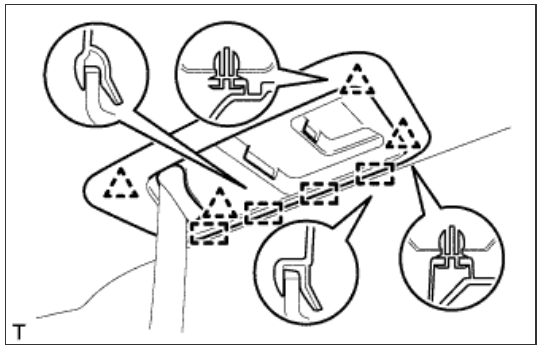

41. REMOVE ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to remove the assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.

c. Remove the 2 clips from the vehicle body.

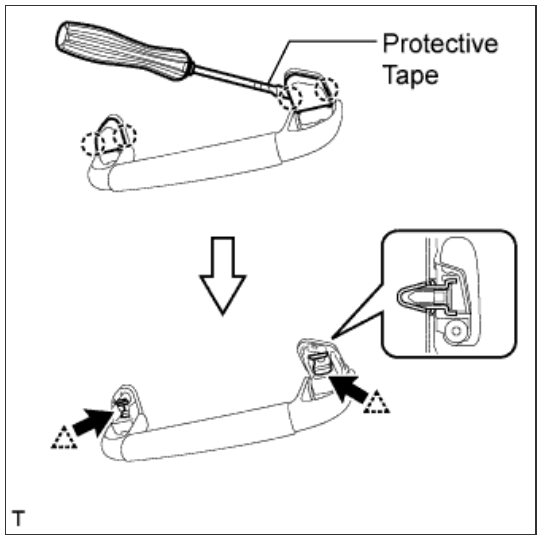

42. REMOVE NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype or w/o Rear No. 2 Seat:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

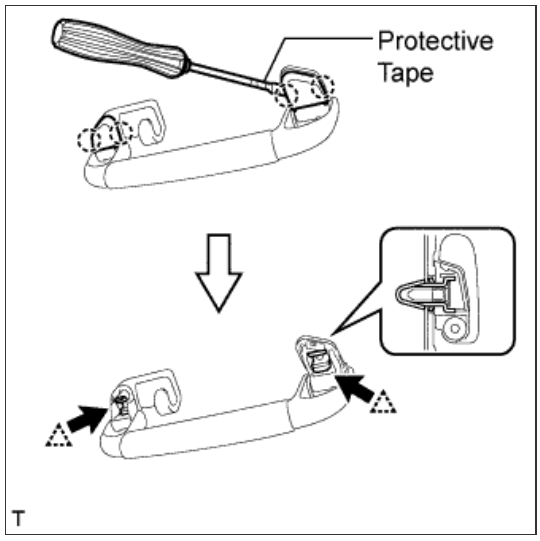

b. w/ Rear No. 2 Seat, for Face to Face Seat ype:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

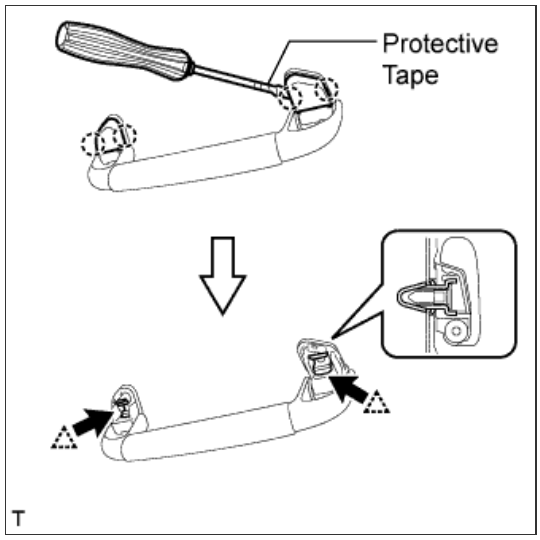

43. REMOVE NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

44. REMOVE 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to remove the 3rd seat assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.


c. Remove the 2 clips from the vehicle body.

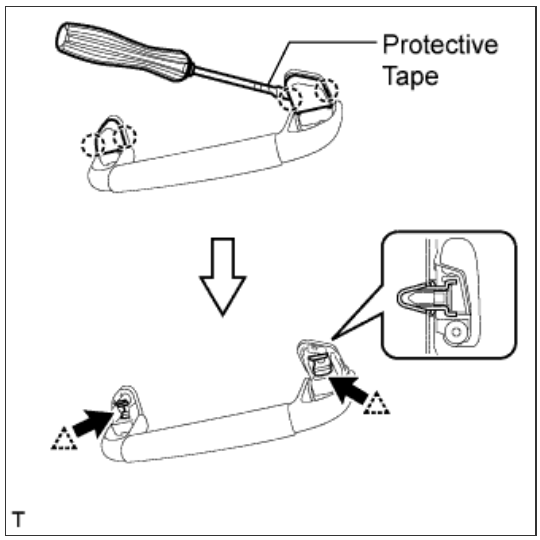

45. REMOVE ROOF HEADLINING ASSEMBLY


HINT:

- **for Manual Seat:**
  When removing the roof headlining, move the front seat and rear No. 1 seat to the position shown in the illustration.
- **for Power Seat:**
  When removing the roof headlining, connect the cable to the negative (-) battery terminal and move the front seat and No. 1 rear seat to the position shown in the illustration.
- **for Power Seat:**
  After moving the seats, disconnect the cable from the negative (-) battery terminal.

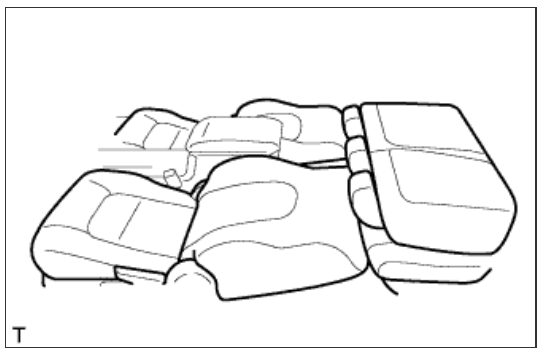


a. w/ EC Mirror


a. w/ EC Mirror:
Disconnect the inner mirror connector.

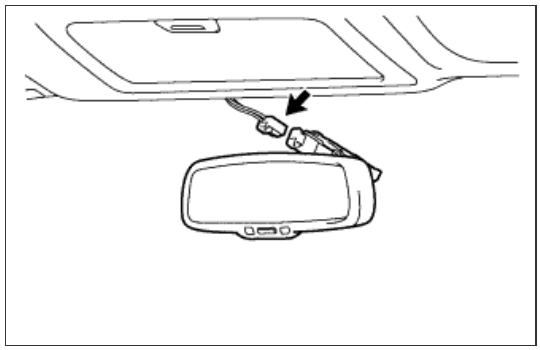

b. w/ Rain Sensor:
Disconnect the rain sensor connector.

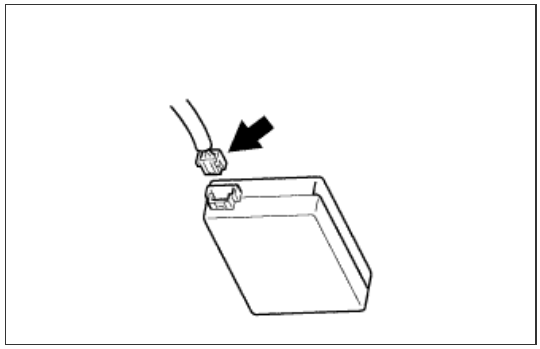


c. Disconnect the drive gear connector.

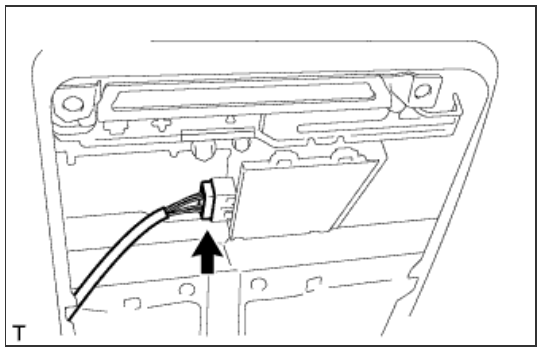


d. Disconnect the 3 roof wire connectors and washer hose.

e. Detach the 4 clamps.

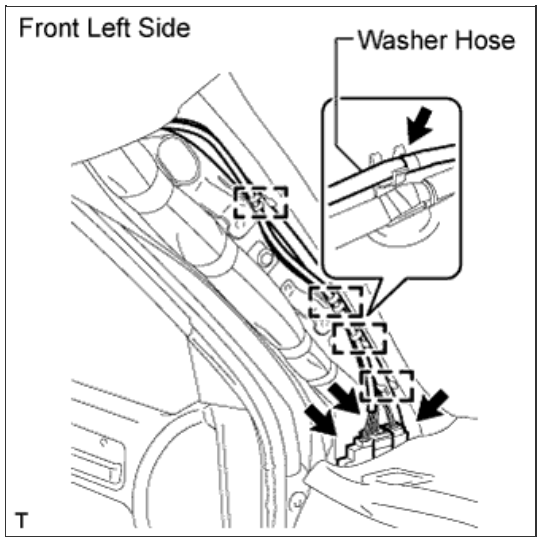


f. Remove the bolt.


g. Disconnect the antenna cord connector and detach the 2 clamps.

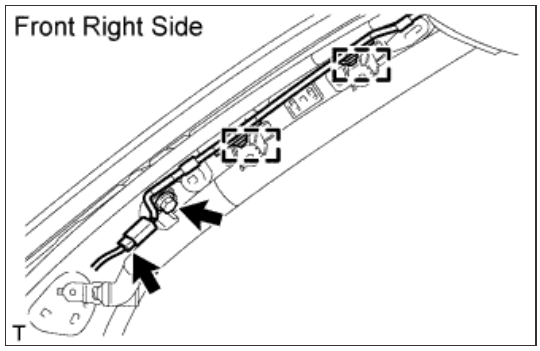


h. Disconnect the antenna cord connector.

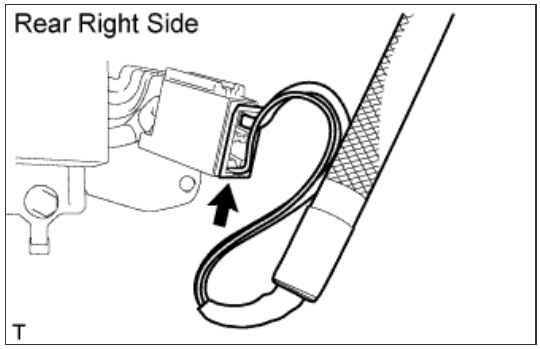

i. Disconnect the washer hose.

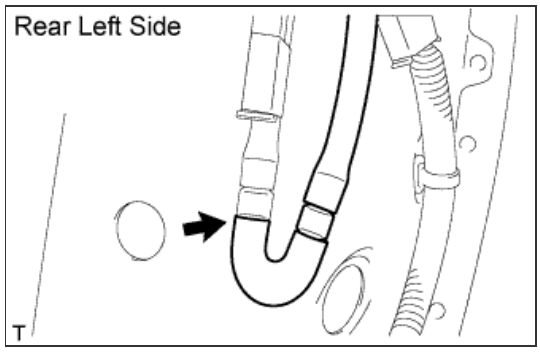


j. for 3 Person Seat ype Rear No. 2 Seat:
Detach the 12 claws, 2 clips, 2 guides and 16 fasteners.

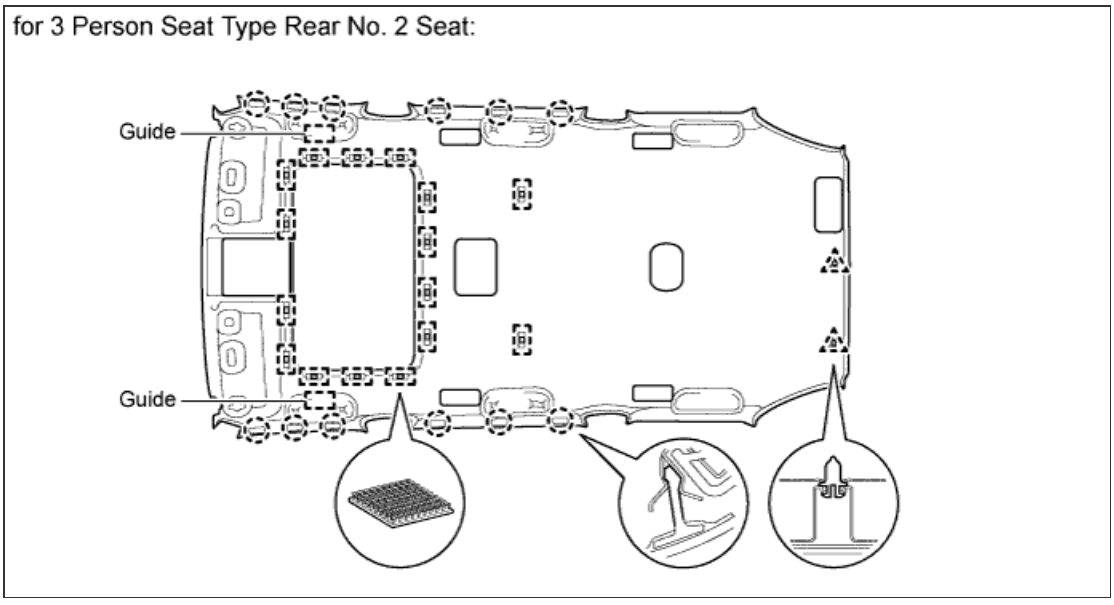

k. except 3 Person Seat ype Rear No. 2 Seat:

k. except 3 Person Seat Type Rear No. 2 Seat:
Detach the 12 claws, 3 clips, 2 guides and 16 fasteners.


except 3 Person Seat Type Rear No. 2 Seat:

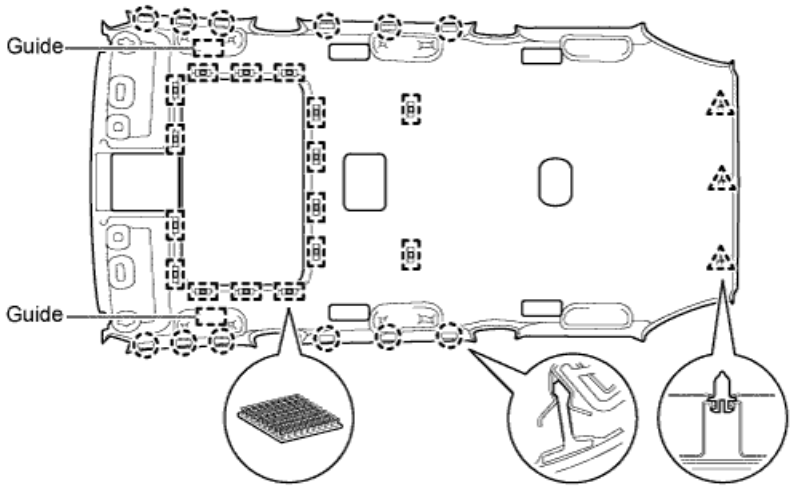

l. Remove the headlining from the rear of the vehicle as shown in the illustration.

NOTICE:

e careful not to damage the roof headlining when taking it out.

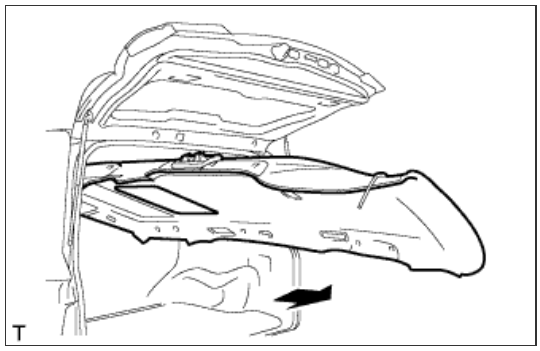


46. REMOVE FRONT ROOF SIDE RAIL GARNISH LH

a. Detach the 3 clips.

b. Cut off the 3 clips and remove the roof side rail garnish.

c. Remove 3 clips from the vehicle body.

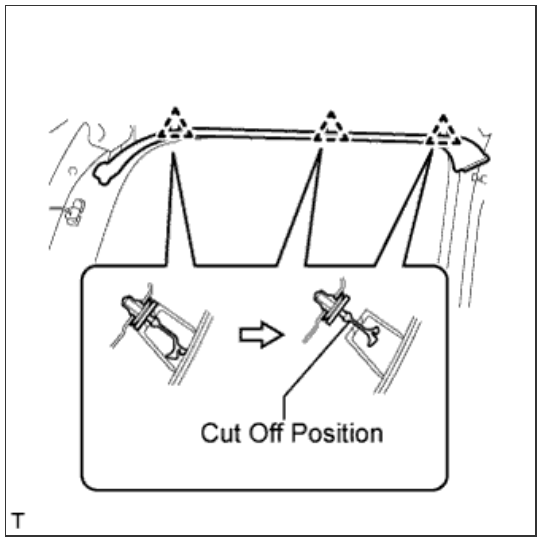


47. REMOVE FRONT ROOF SIDE RAIL GARNISH RH

HINT:

Use the same procedures described for the LH side.

48. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

a. Remove the front door opening trim weatherstrip.

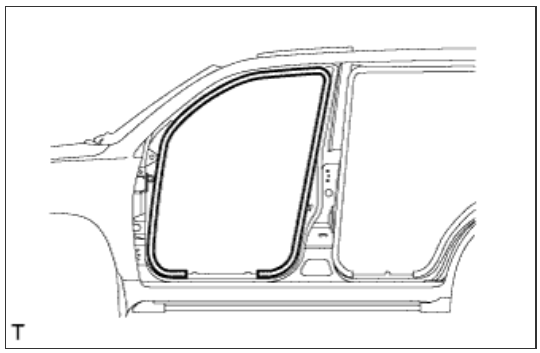


49. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

50. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

a. Remove the rear door opening trim weatherstrip.

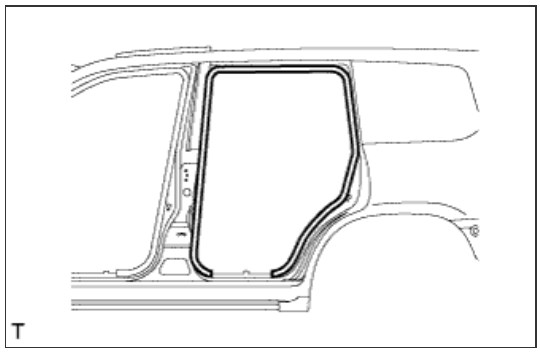


51. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

52. REMOVE BACK DOOR WEATHERSTRIP


a. Remove the back door weatherstrip.

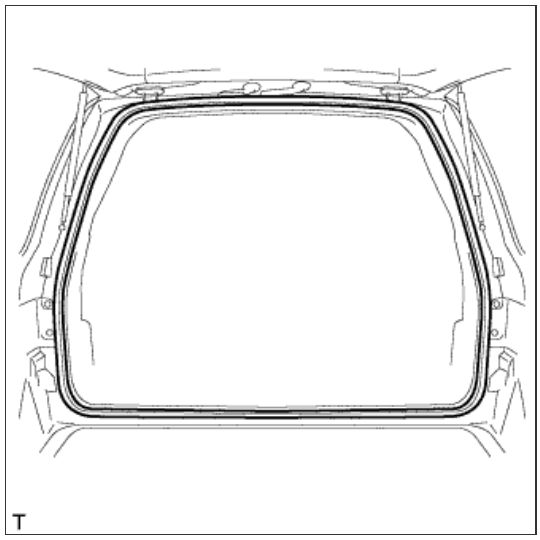

53. REMOVE FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the front door scuff plate outside.

b. Detach the 4 clips and remove the front door scuff plate outside.

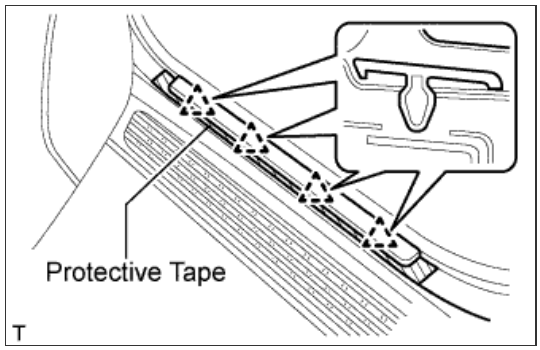

54. REMOVE FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

55. REMOVE REAR DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the rear door scuff plate outside.

b. Detach the 3 clips and remove the rear door scuff plate outside.

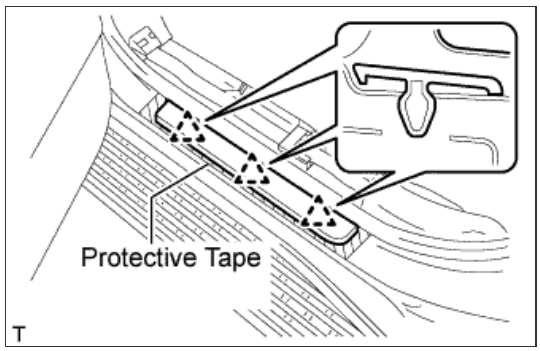


56. REMOVE REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

57. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws of the plate, and slide the plate in the direction of the arrow to remove it.

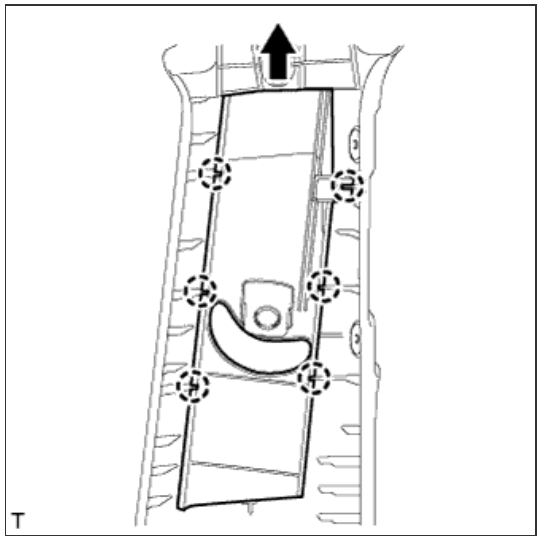


58. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

59. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws and remove the plate.

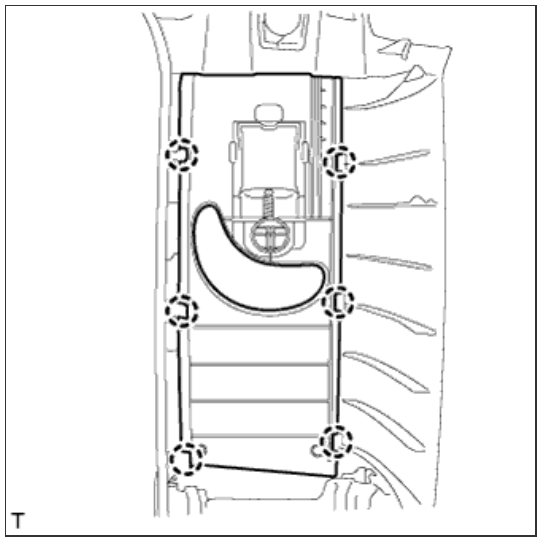


60. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

61. REMOVE ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 7 claws and remove the cover.

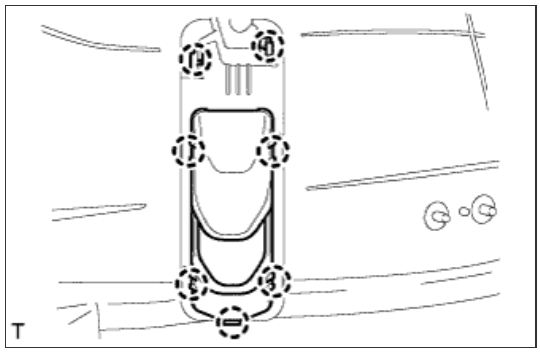

62. REMOVE ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedures described for the LH side.

63. REMOVE REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to remove the hanger on the other side.

a. Remove the 2 spring nuts and hanger.

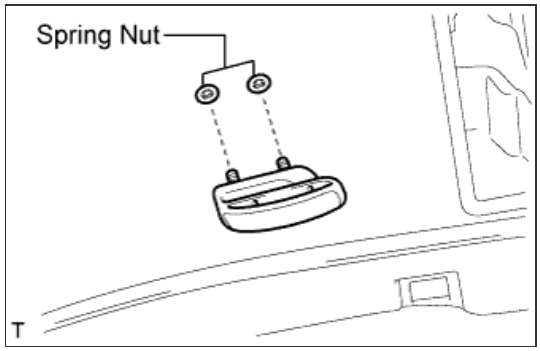

64. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Remove the 2 spring nuts and hanger.

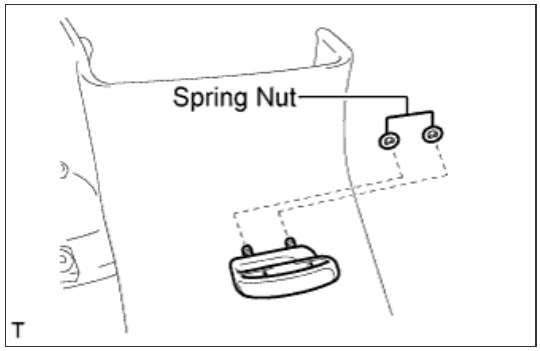


65. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:

Use the same procedures described for the LH side.


66. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY LH

a. w/ Rear Heater:
Remove the 8 screws and duct.

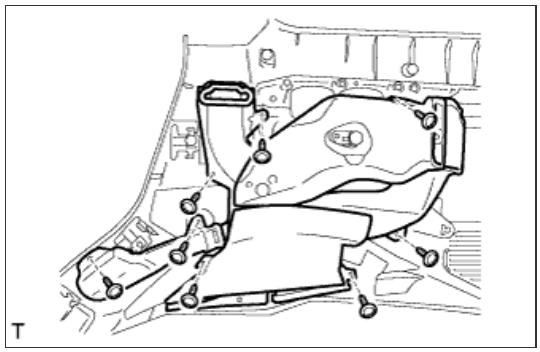

b. Remove the 7 screws.


c. Detach the 4 claws and remove the arter trim cover.

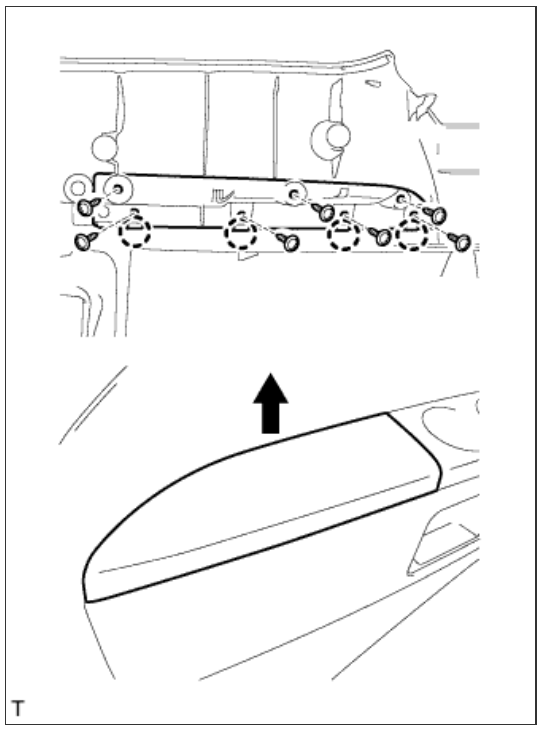

67. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY RH

a. Remove the 7 screws.


b. Detach the 4 claws and remove the arter trim cover.

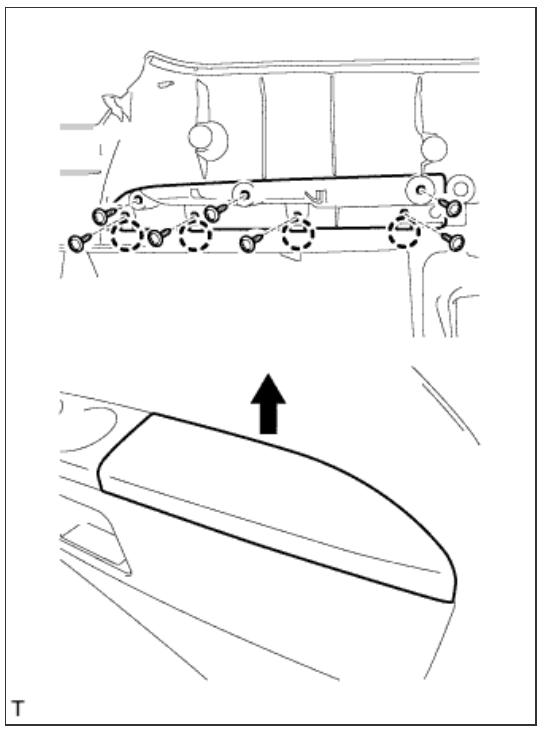

68. REMOVE NO. 2 CUP HOLDER

a. Remove the 5 screws.


b. Detach the 3 claws and remove the cup holder.

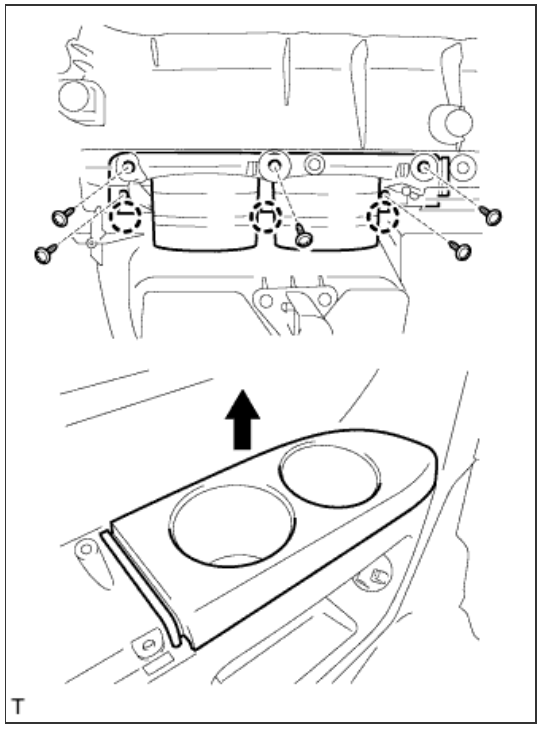

69. REMOVE NO. 1 CUP HOLDER


a. Remove the 5 screws.

b. Detach the 3 claws and remove the cup holder.

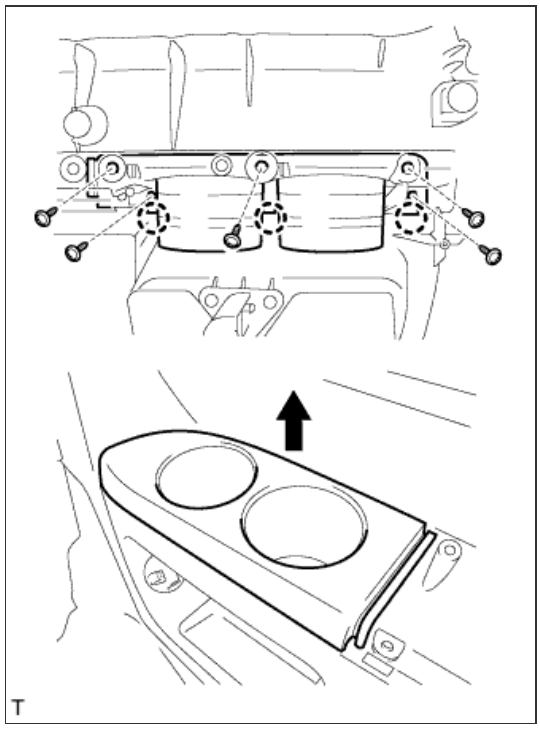


70. REMOVE NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

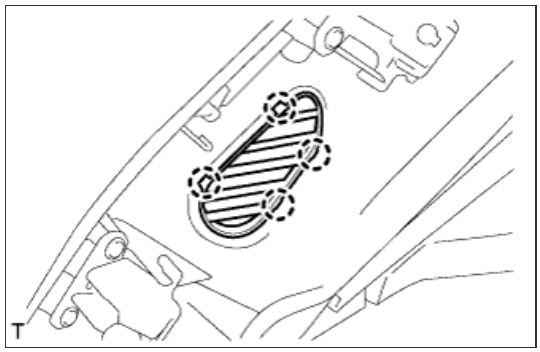


71. REMOVE NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Remove the 6 screws and duct.

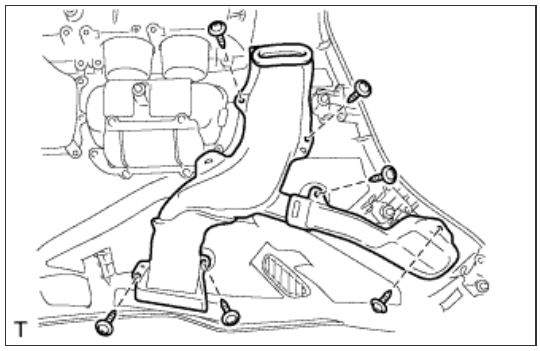


b. Detach the 4 claws and remove the cover.

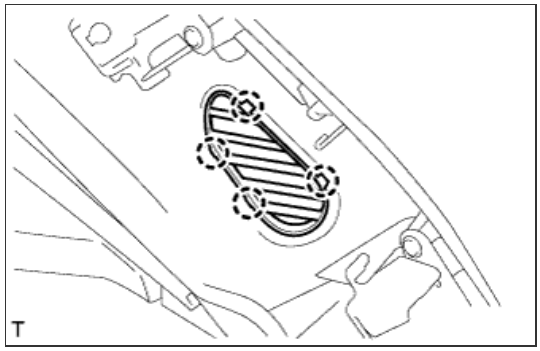

72. REMOVE NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

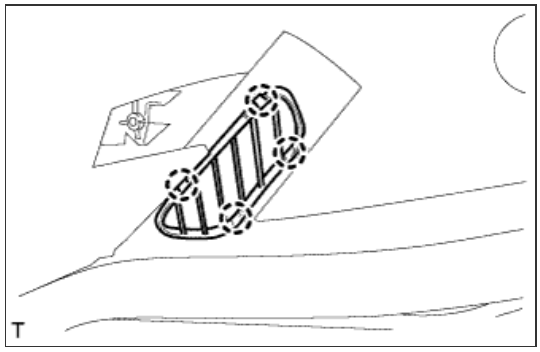

73. REMOVE NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.

74. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 4 claws and remove the seat lock control lever.


75. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

76. REMOVE REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

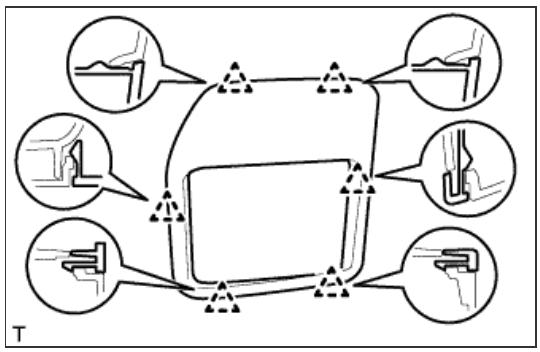


77. REMOVE REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

78. REMOVE QUARTER TRIM COVER LH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

a. Detach the 6 clips and remove the arter trim cover.

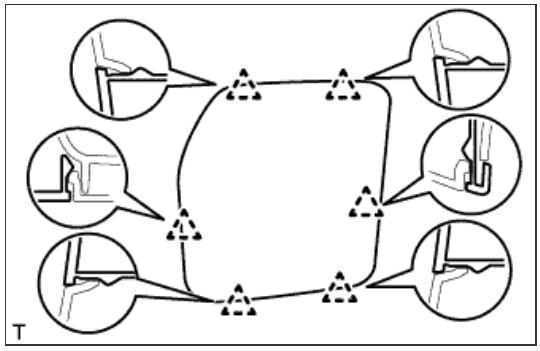

79. REMOVE QUARTER TRIM COVER RH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

80. REMOVE QUARTER TRIM LID SUB-ASSEMBLY RH


a. Remove the arter trim lid.

81. REMOVE SIDE TRIM BOX COVER

a. Remove the side trim box cover.

82. REMOVE SIDE TRIM BOX

a. Remove the 9 screws and side trim box.

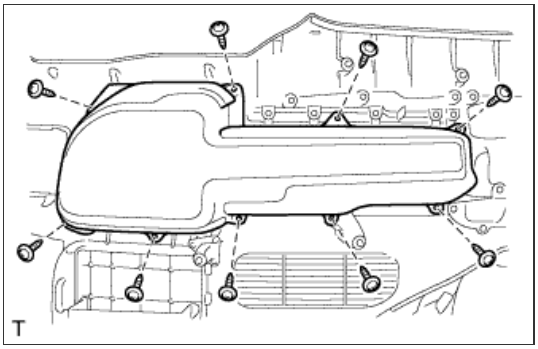


for Preparation Click here

1. REMOVE NO. 2 AIR OUTLET GRILLE ASSEMBLY (w/ Rear Air Conditioning System)

HINT:

Use the same procedures to remove the air outlet grille on the other side.

a. Detach 6 claws and remove the air outlet grille.

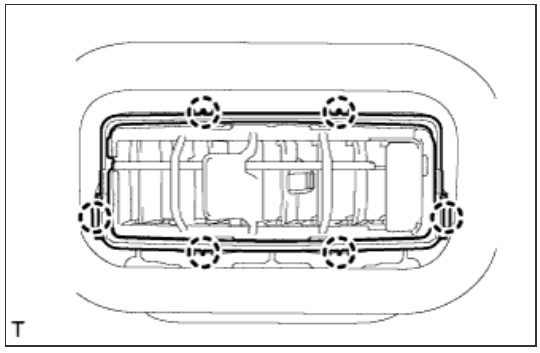


2. REMOVE NO. 1 AIR OUTLET GRILLE ASSEMBLY (w/ Rear Air Conditioning System)

HINT:

Use the same procedures described for the No. 2 air outlet grille.


3. REMOVE NO. 1 ROOF SILENCER PAD

a. Remove the roof silencer pad.

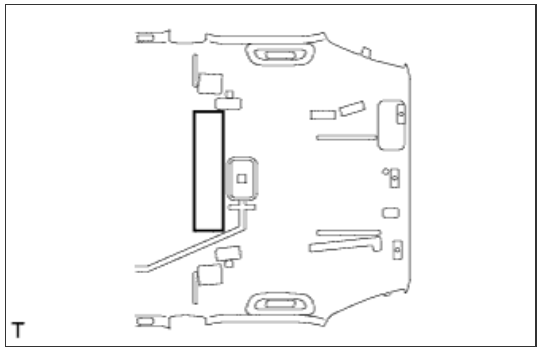

4. REMOVE NO. 4 ROOF SILENCER PAD

a. Remove the roof silencer pad.

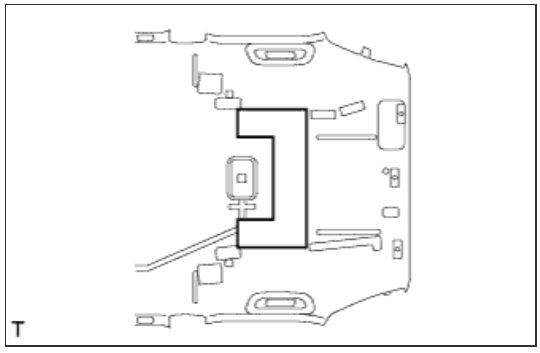


5. REMOVE NO. 1 ROOF WIRE

a. Turn the visor connectors approximately 90 clockwise and remove them from the roof headlining.

b. Remove the 6 pieces of tape from the roof headlining.

c. Detach each clamp, and remove the roof wire and washer hose.


d. Remove the double-sided tape remaining on the headlining.

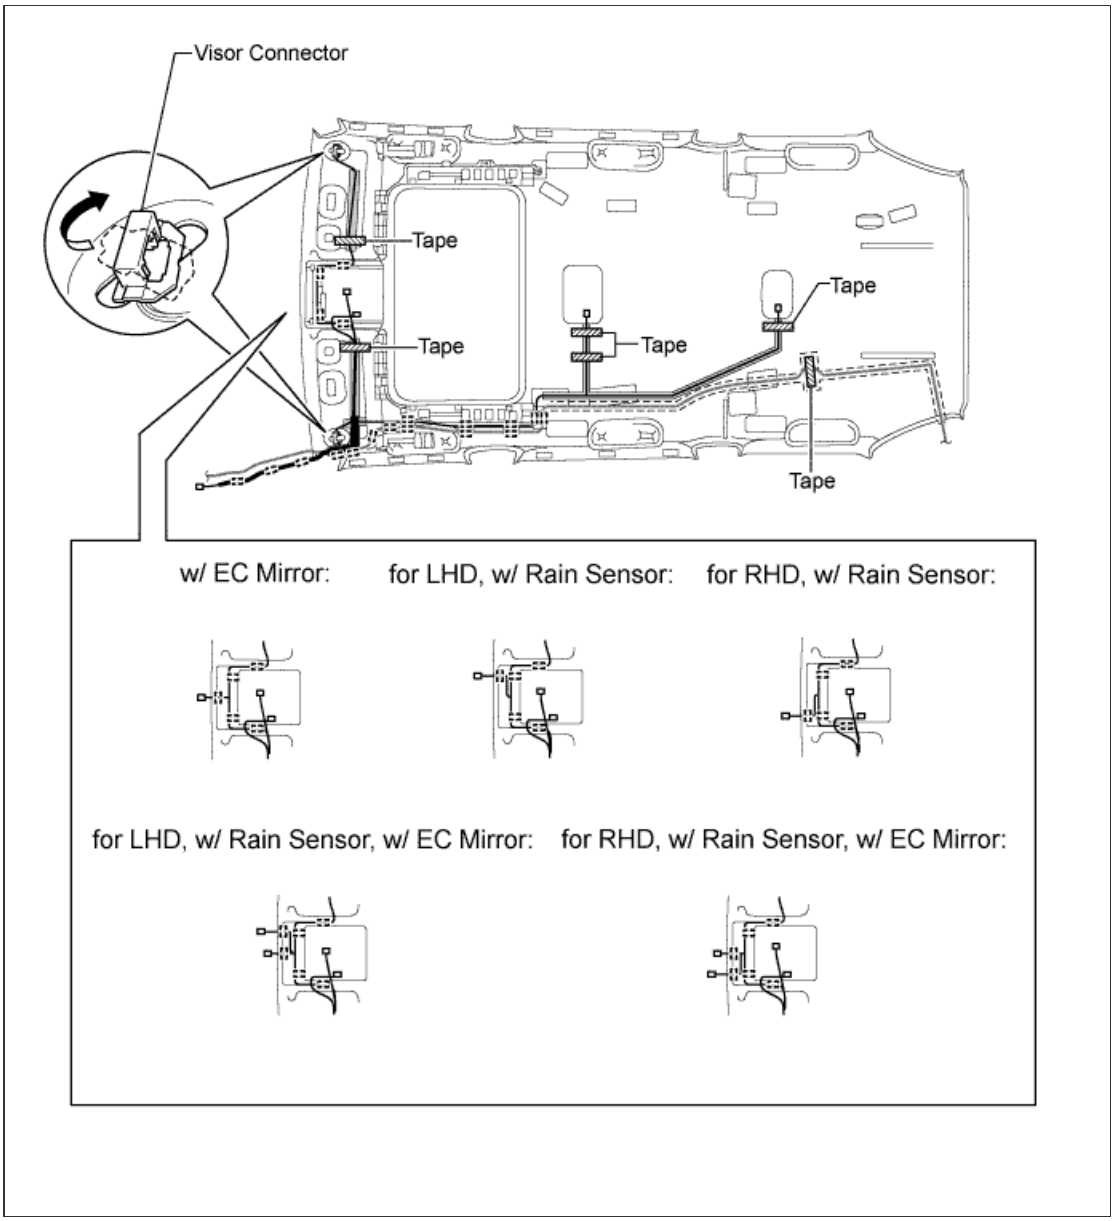

6. REMOVE ANTENNA CORD SUB-ASSEMBLY

a. w/o Sliding Roof:

i. Detach the 2 clamps and remove the antenna from the notch on the rear of the roof headlining.

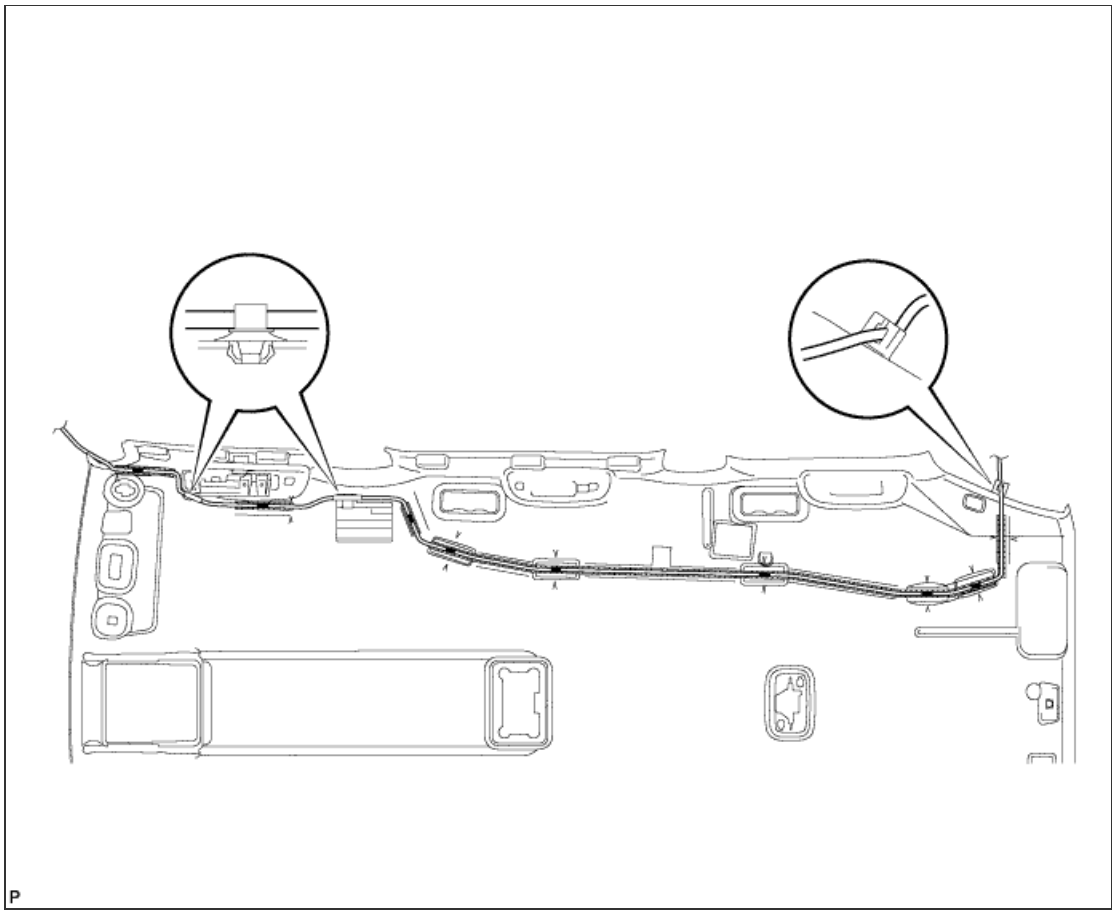


ii. Remove the antenna cord from the roof headlining.

iii. Remove the double-sided tape from the roof headlining.

b. w/ Sliding Roof:

i. Detach the 4 clamps and remove the antenna from the notch on the rear of the roof headlining.

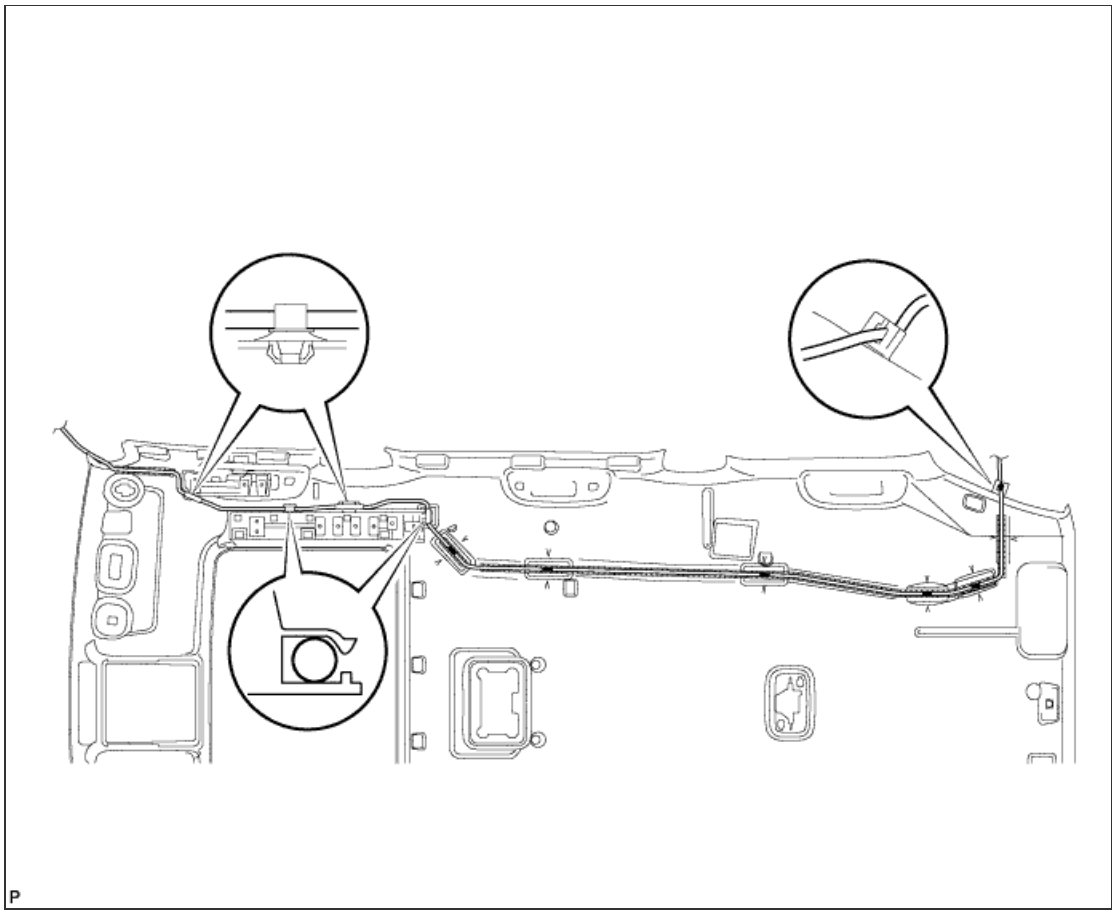

ii. Remove the antenna cord from the roof headlining.

iii. Remove the double-sided tape from the roof headlining.

for Preparation Click here


1. INSTALL ANTENNA CORD SUB-ASSEMBLY

a. w/o Sliding Roof:

i. Apply new double-sided tape as shown in the illustration.

HINT:

Attach double-sided tape to the hatched areas shown in the illustration below.

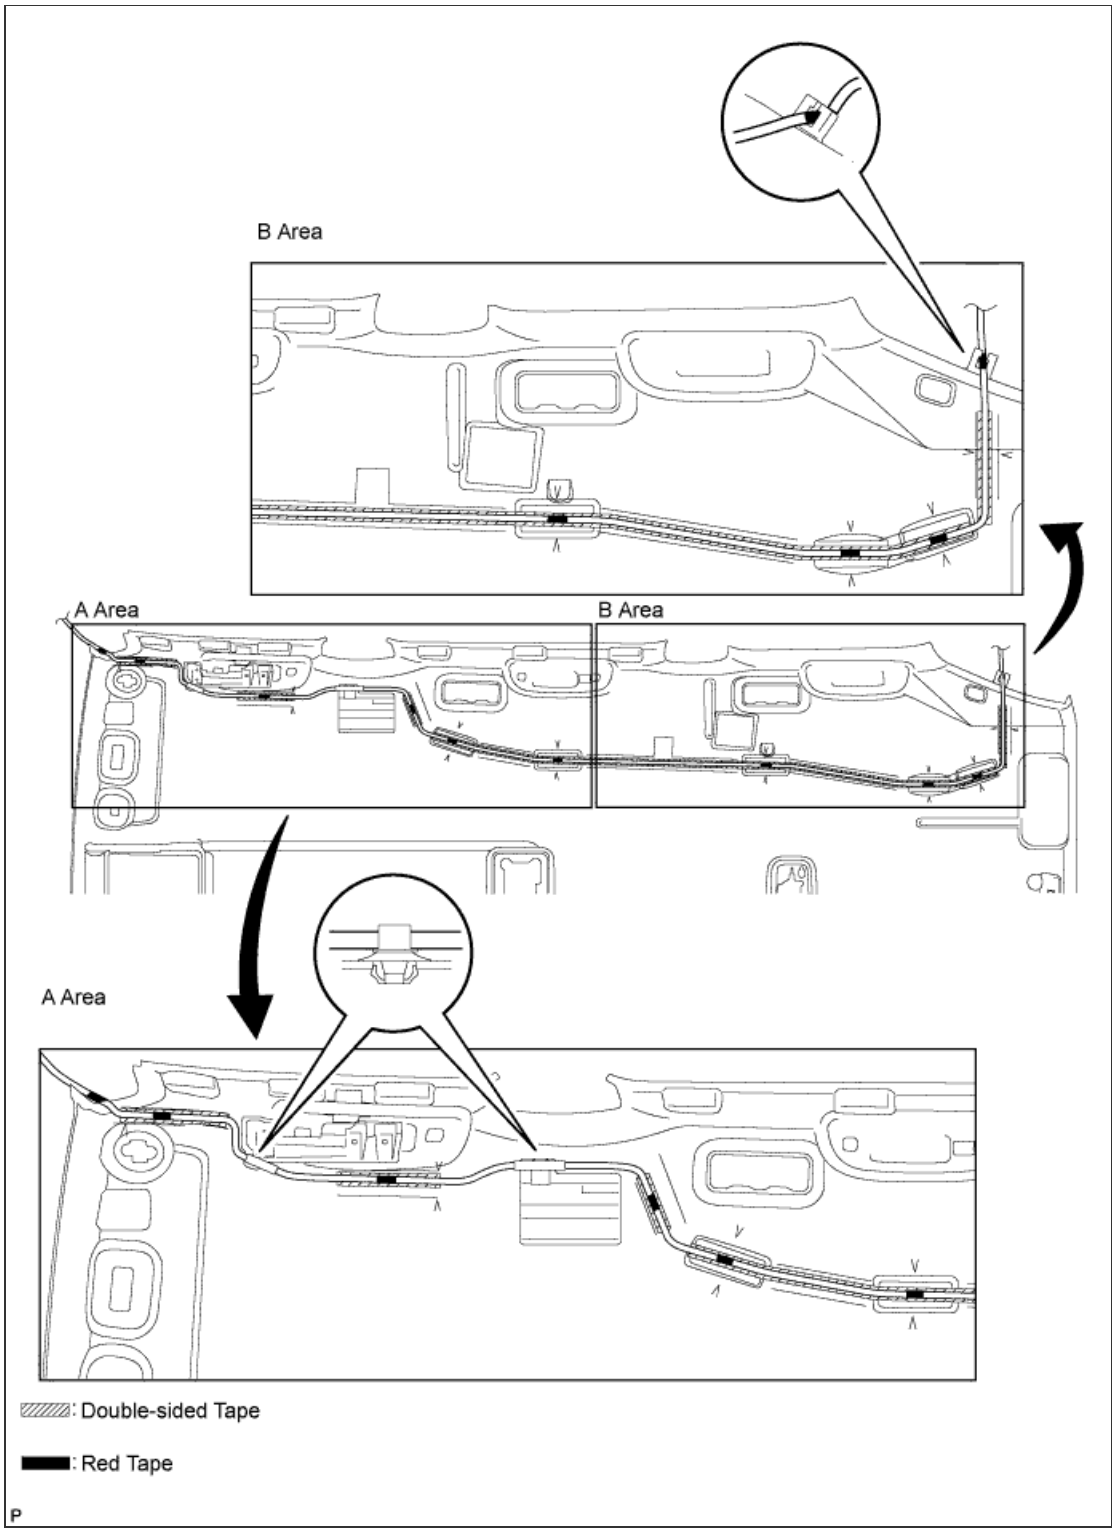

ii. Align the red tape wound around the antenna cord with the V markings on the roof headlining and the notch at the rear of the headlining, and attach the antenna cord to the double-sided tape.


iii. Attach the 2 clamps and fit the antenna into the notch.

b. w/ Sliding Roof:

i. Apply new double-sided tape as shown in the illustration.

HINT:

Attach double-sided tape to the hatched areas shown in the illustration below.

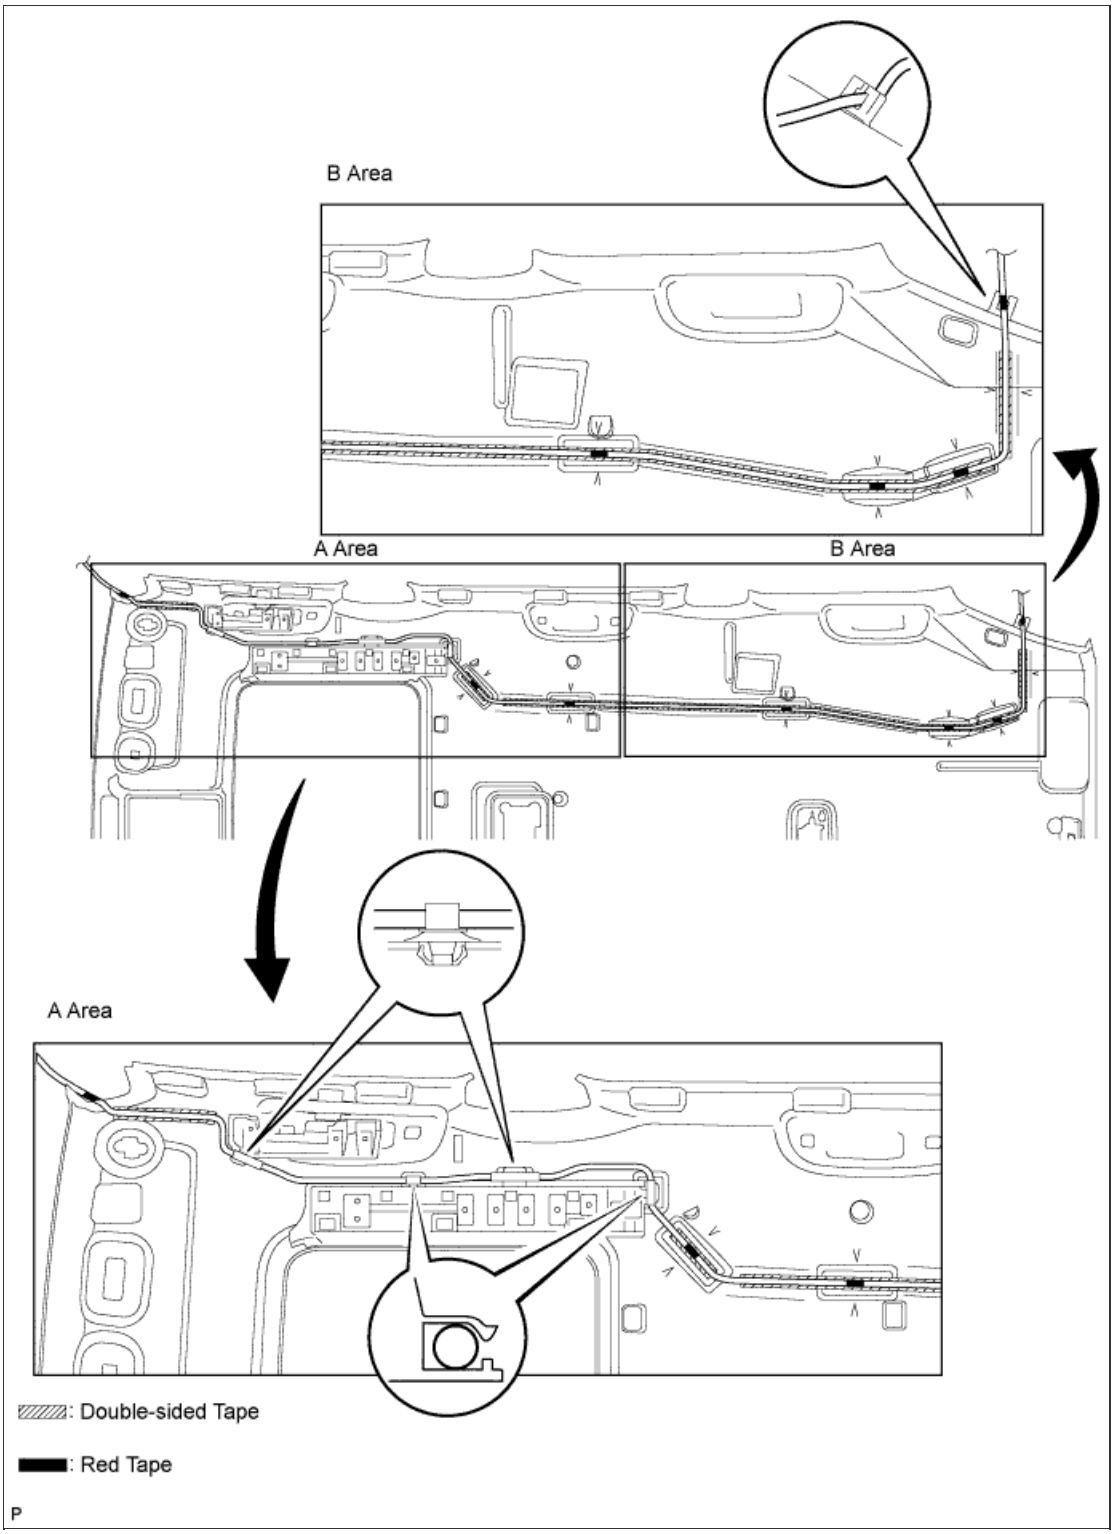

ii. Align the red tape wound around the antenna cord with the V markings on the roof headlining and the notch at the rear of the headlining, and attach the antenna cord to the double-sided tape.


iii. Attach the 4 clamps and fit the antenna into the notch.

2. INSTALL NO. 1 ROOF WIRE

a. Place double-sided tape along the center of the harness marking and washer marking.

HINT:

ake sure that the double-sided tape is not peeling off or misaligned.

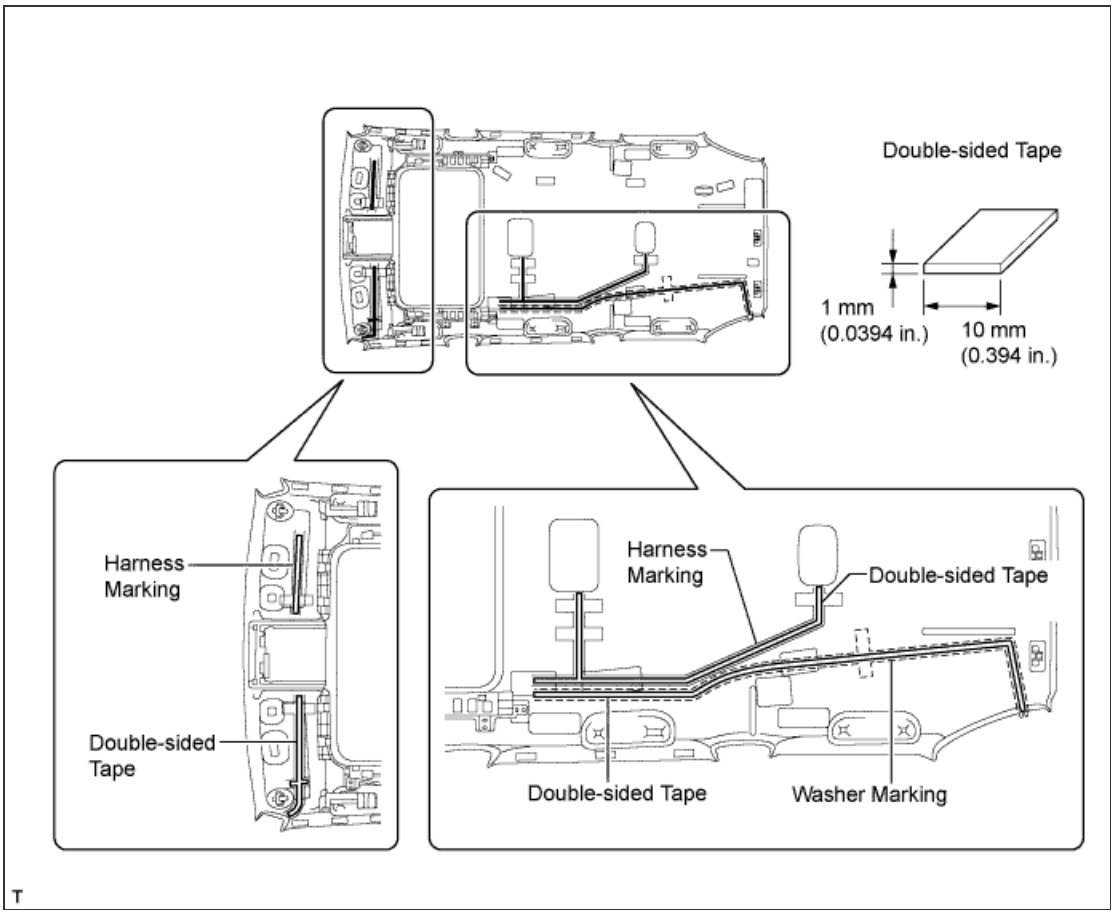


b. Remove the peeling paper from the double-sided tape while not touching the adhesive side.

c. Align the triangle mark of the roof wire protector with the V mark of the headlining as shown in the illustration, and then attach the roof wire protector.

d. Attach each clamp as shown in the illustration.

HINT:

The positions of the clamps at the front of the roof headlining are shown in illustration D.

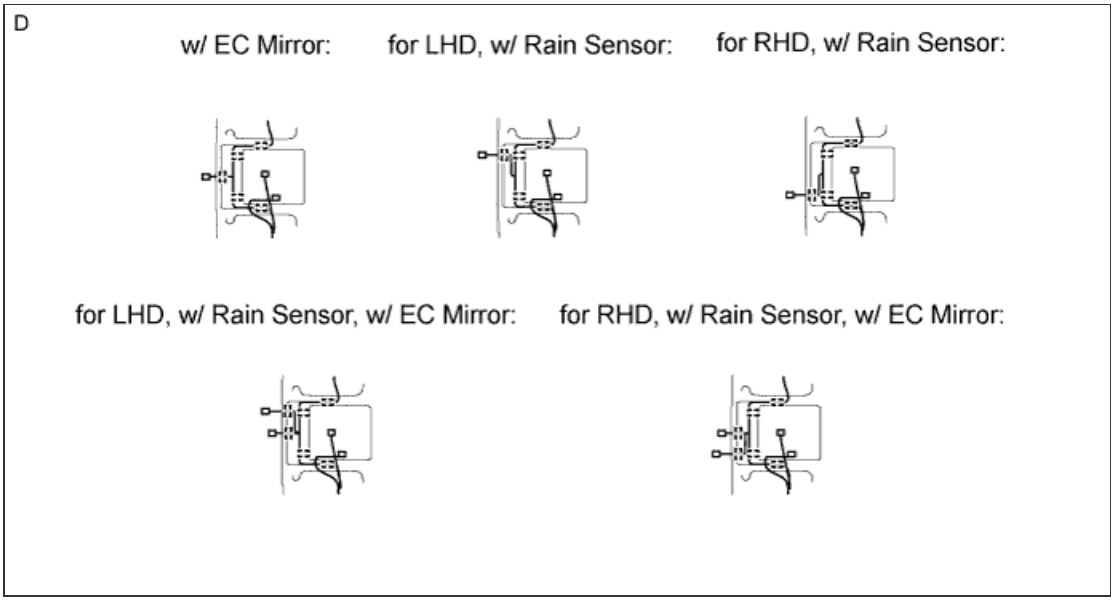


e. Align the roof wire and washer hose with the V marks of the headlining as shown in the illustration, and attach them to the headlining.

HINT:

- **Attach the washer hose from the front to the point labeled A, and attach the washer hose from the rear to the point labeled B as shown in the illustration.**
- **Attach the extra length of the washer hose to the part labeled C in the illustration.**


f. Turn the visor connectors approximately 90 clockwise to install them to the roof headlining.

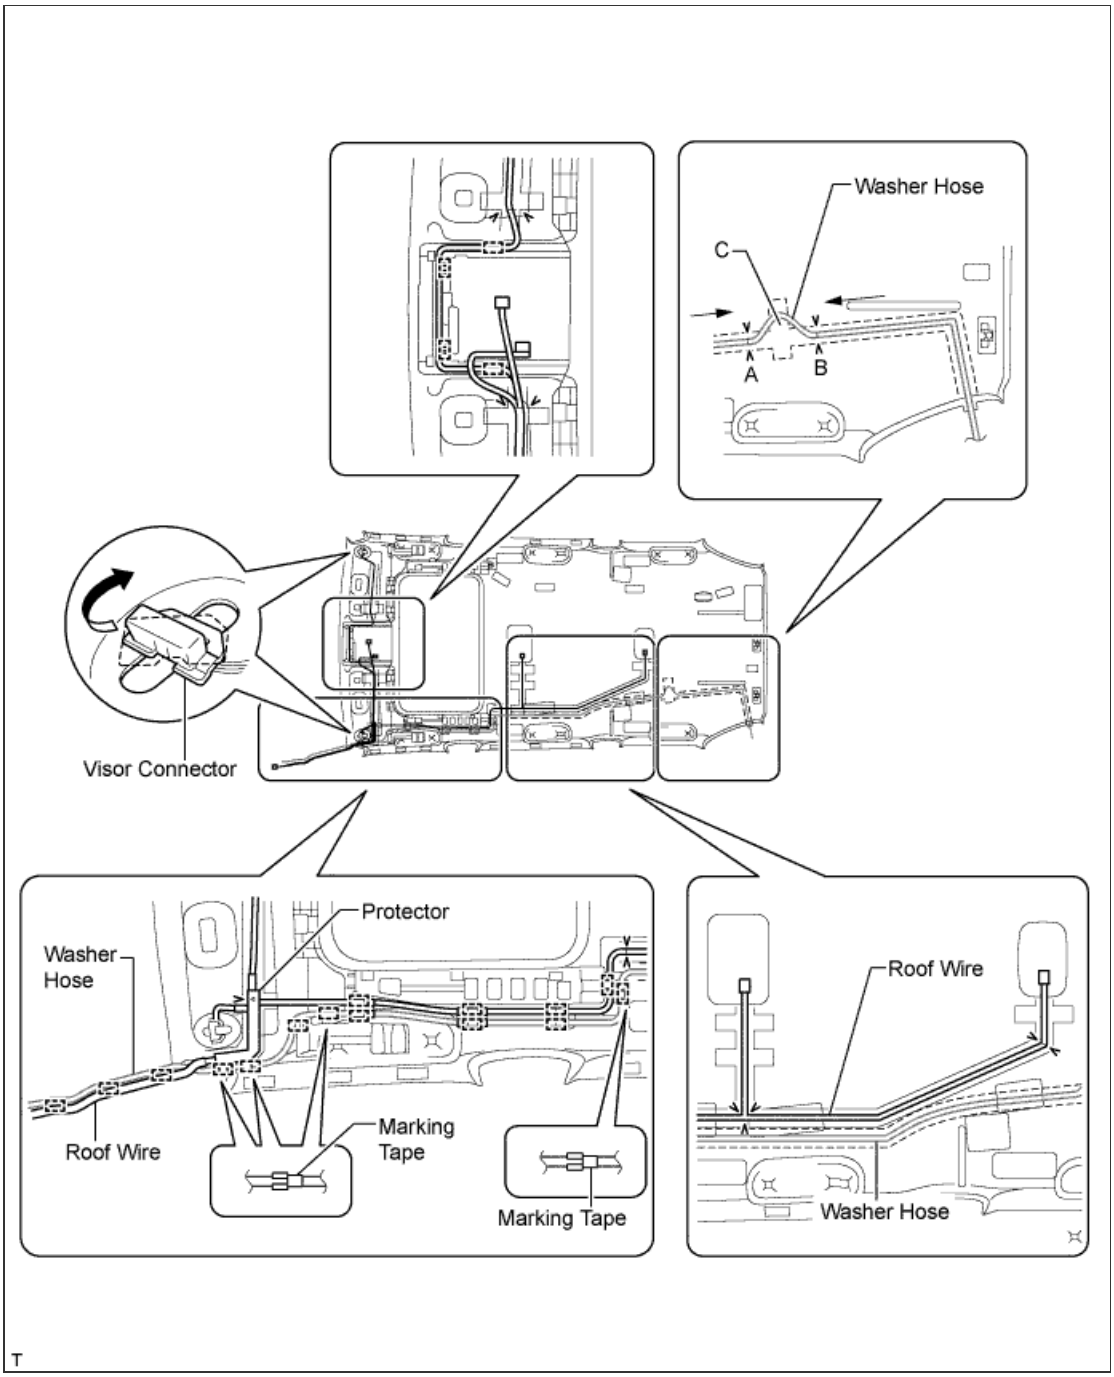

g. Place tape at the wire harness marking and washer marking locations as shown in the illustration to fix the roof wire and washer hose in place.


HINT:

Apply sufficient pressure when placing tape.

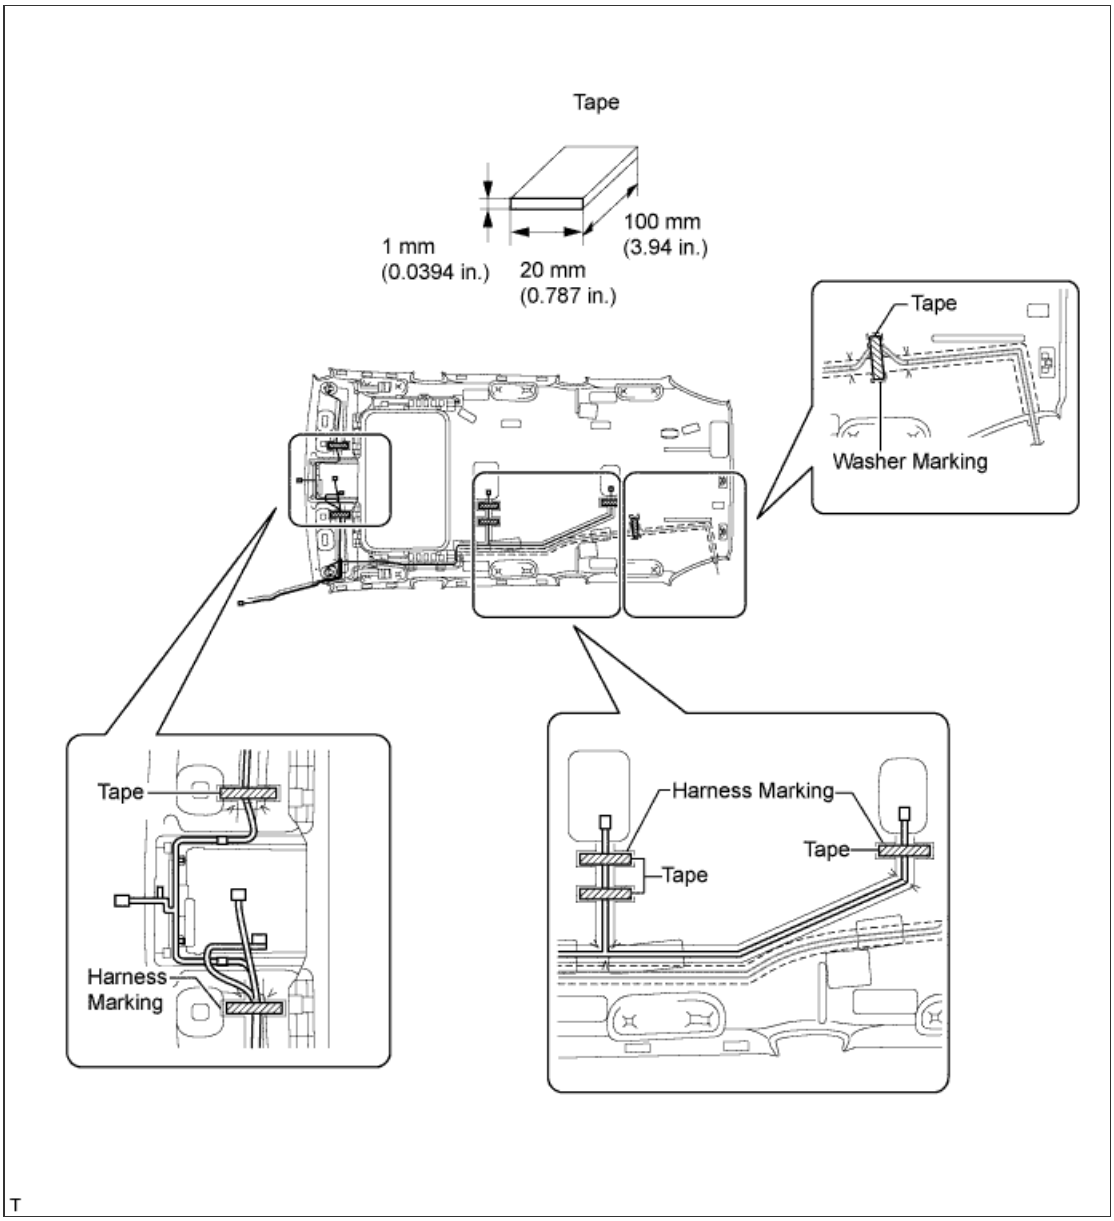


3. INSTALL NO. 4 ROOF SILENCER PAD

a. Align the silencer marking on the roof headlining with the roof silencer pad and install the pad using double-sided tape as shown in the illustration.

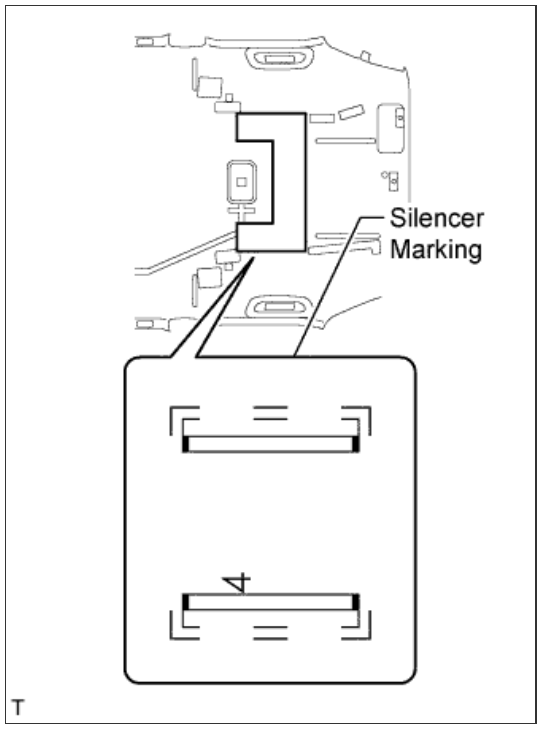

4. INSTALL NO. 1 ROOF SILENCER PAD

a. Align the silencer marking on the roof headlining with the roof silencer pad and install the pad using double-sided tape as shown in the illustration.

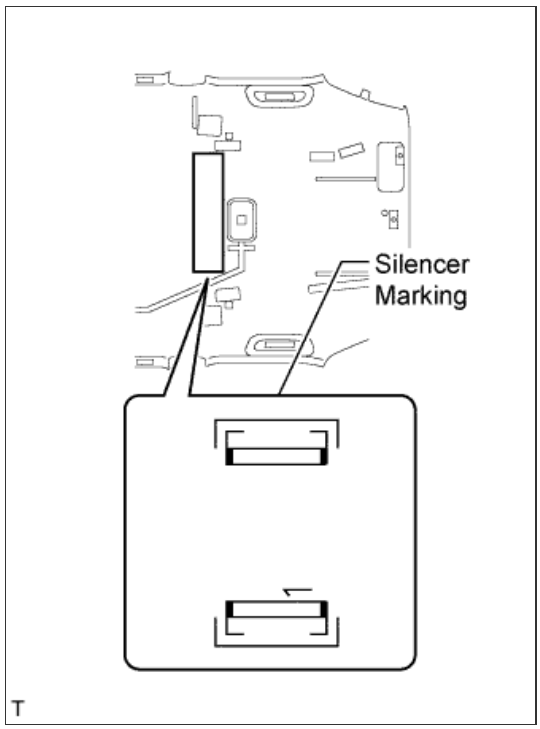


5. INSTALL NO. 2 AIR OUTLET GRILLE ASSEMBLY (w/ Rear Air Conditioning System)

HINT:

Use the same procedures to install the air outlet grille on the other side.

a. Attach the claws to install the air outlet grille.

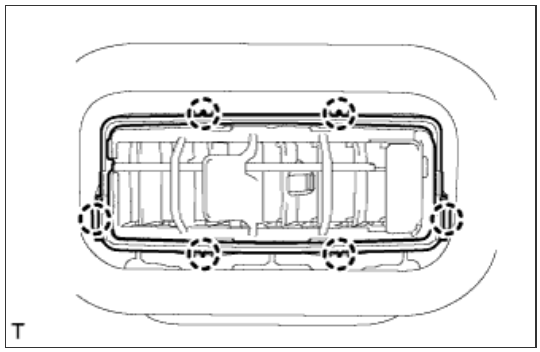

6. INSTALL NO. 1 AIR OUTLET GRILLE ASSEMBLY (w/ Rear Air Conditioning System)

HINT:

Use the same procedures described for the No. 2 air outlet grille.


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL SIDE TRIM BOX

a. Install the side trim box with the 9 screws.

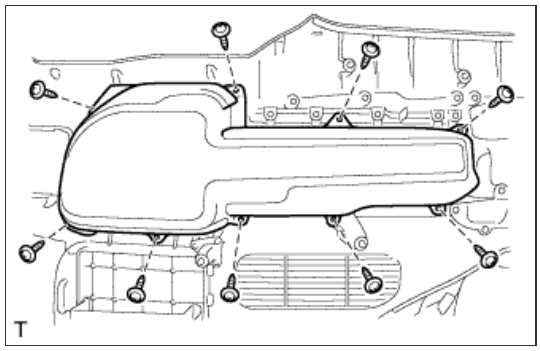

2. INSTALL SIDE TRIM BOX COVER


a. Install the side trim box cover.

3. INSTALL QUARTER TRIM LID SUB-ASSEMBLY RH

a. Install the quarter trim lid.

4. INSTALL QUARTER TRIM COVER LH (w/o Rear No. 2 Seat, w/ Rear No. 2 Seat for Face to Face Seat Type)

a. Attach the 6 clips to install the quarter trim cover.

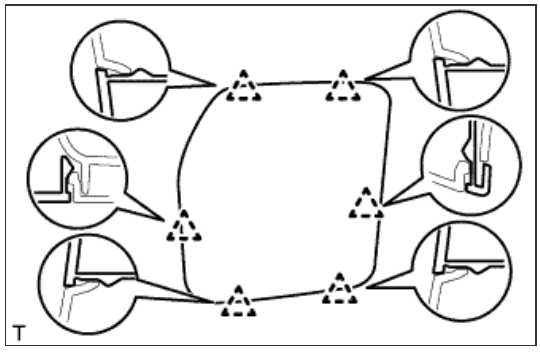


5. INSTALL QUARTER TRIM COVER RH (w/o Rear No. 2 Seat, w/ Rear No. 2 Seat for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

6. INSTALL REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 6 clips to install the rear No. 2 seat cover be el.

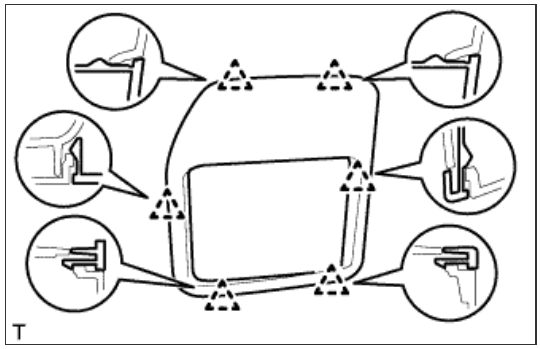

7. INSTALL REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover be el.

8. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the claws to install the seat lock controlever.


9. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

10. INSTALL NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

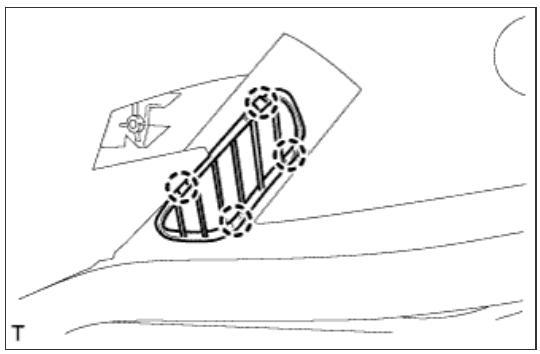


11. INSTALL NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.


12. INSTALL NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

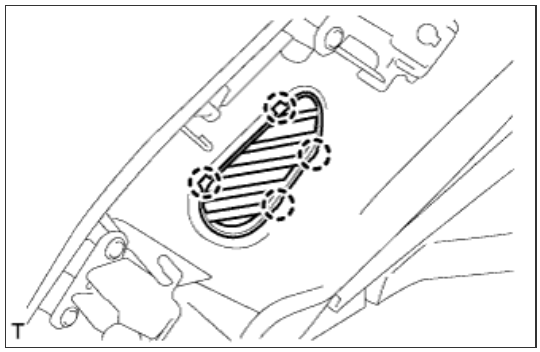


13. INSTALL NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

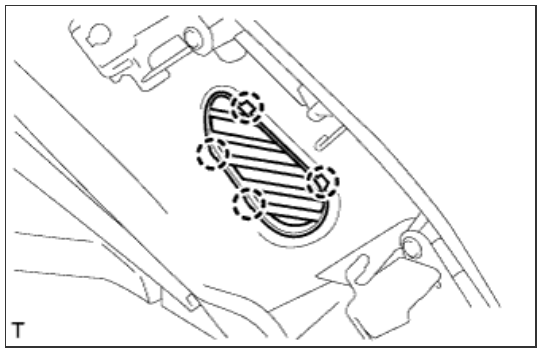


b. Install the duct with the 6 screws.

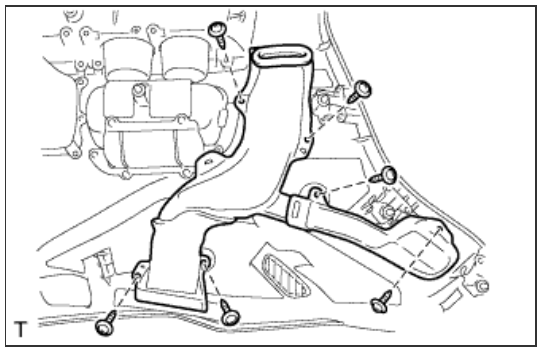

14. INSTALL NO. 2 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


b. Install the 5 screws.

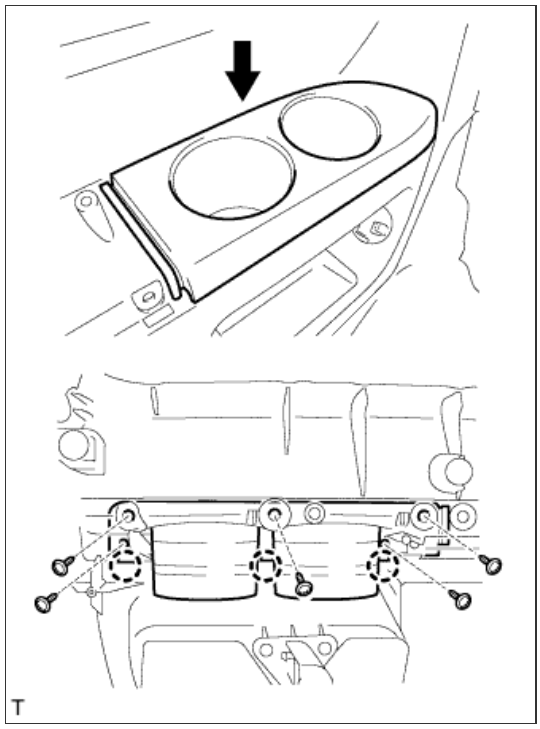

15. INSTALL NO. 1 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


b. Install the 5 screws.

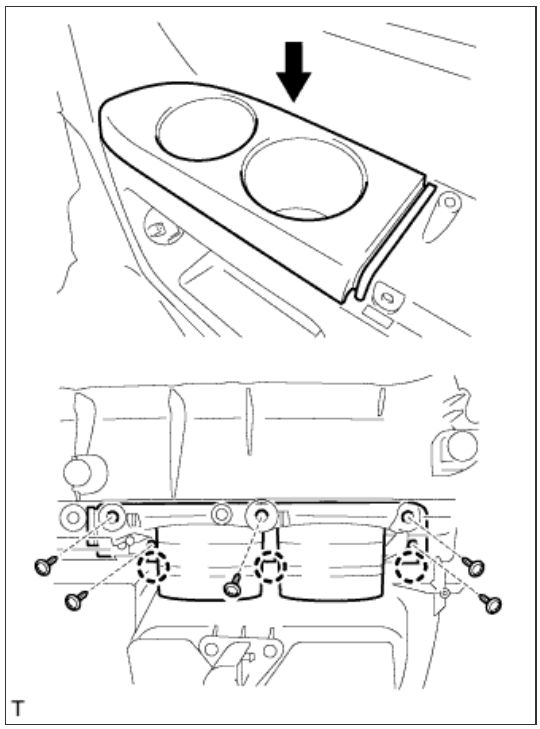


16. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

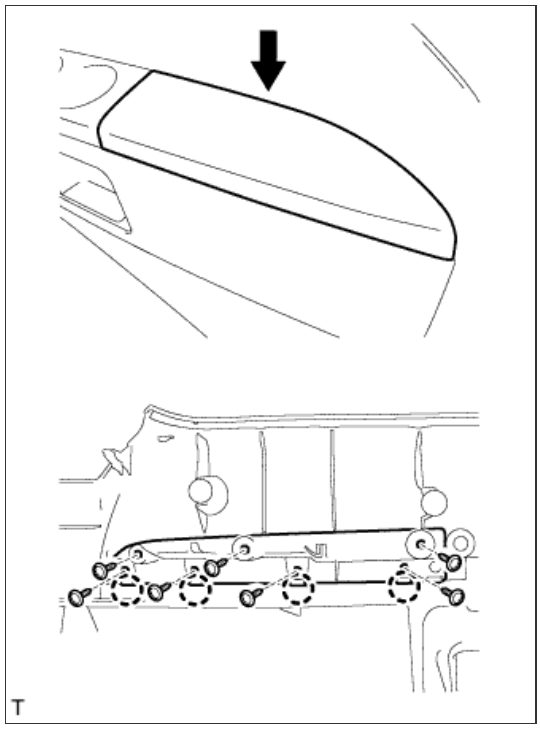


c. w/ Rear Heater:
Install the duct with the 8 screws.

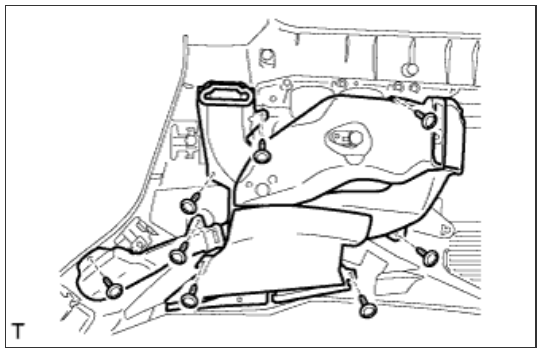

17. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY RH


a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

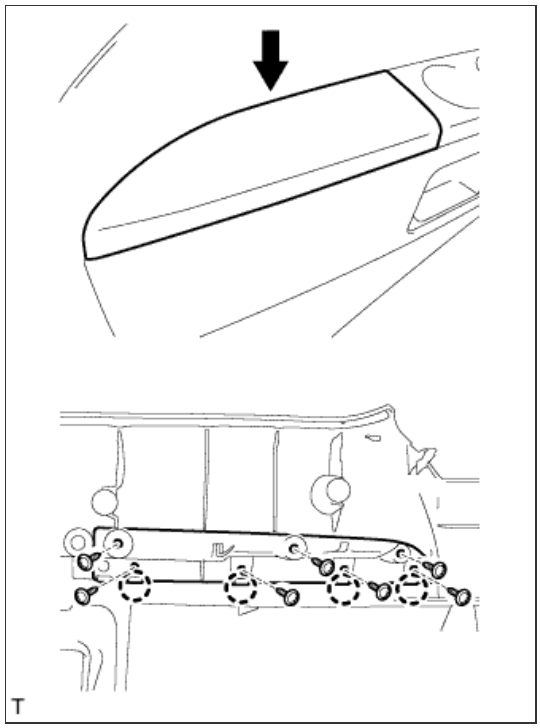

18. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Install the han er with 2 new sprin nuts.

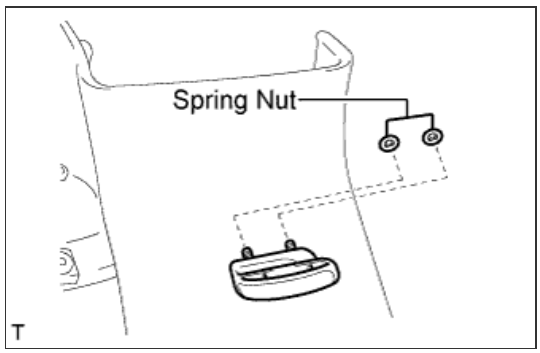

19. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:


Use the same procedures described for the LH side.

20. INSTALL REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to install the han er on the other side.

a. Install the han er with 2 new sprin nuts.

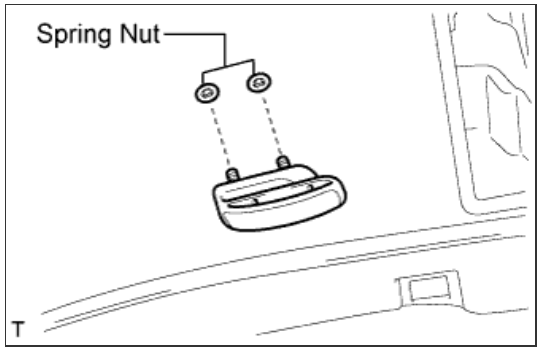

21. INSTALL ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the claws to install the cover.

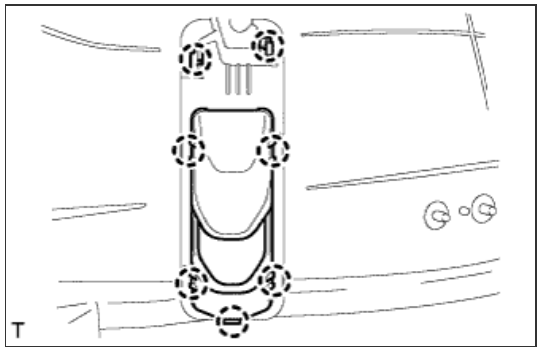


22. INSTALL ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

23. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Attach the 6 claws to install the plate.

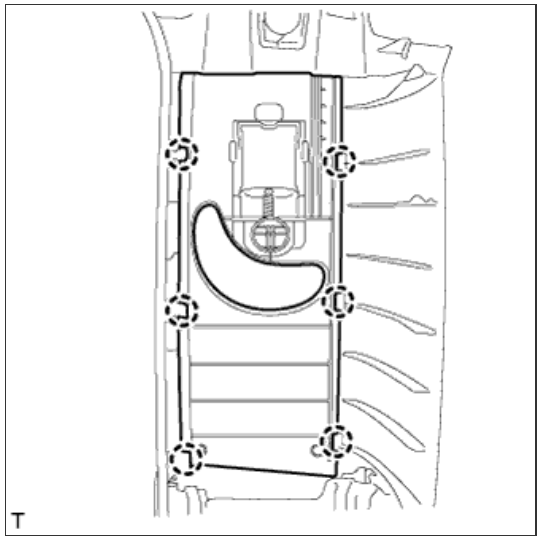


24. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

25. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Slide the plate in the direction shown in the illustration and attach the 6 claws to install the plate.

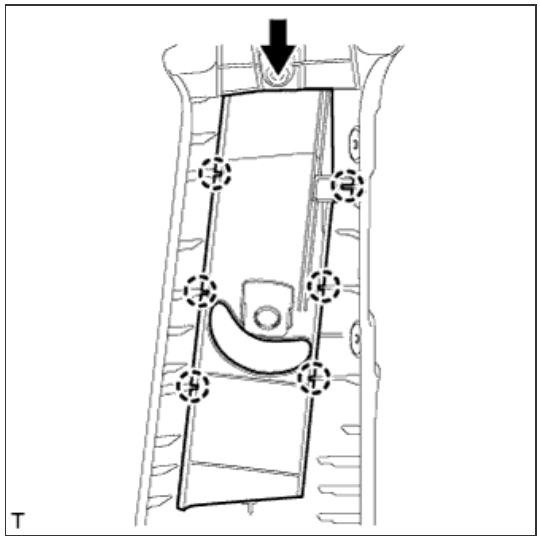


26. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

27. INSTALL REAR DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 3 clips to install the rear door scuff plate outside.

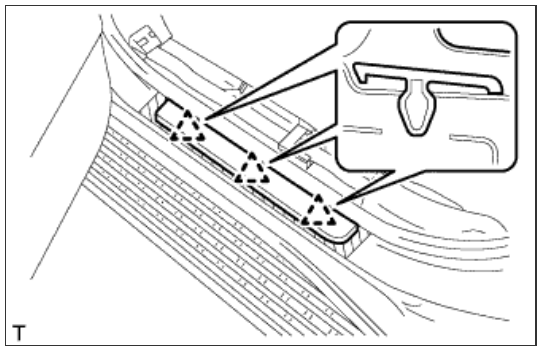


28. INSTALL REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

29. INSTALL FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 4 clips to install the front door scuff plate outside.

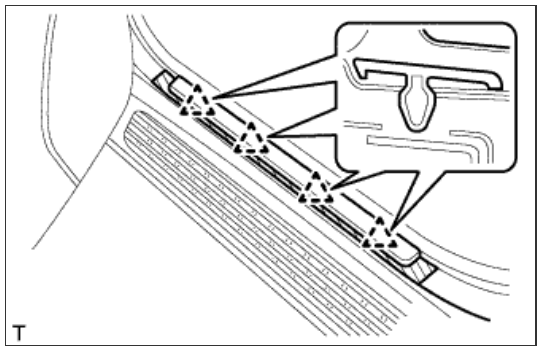


30. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.


31. INSTALL BACK DOOR WEATHERSTRIP

a. Install the back door weatherstrip as shown in the illustration.

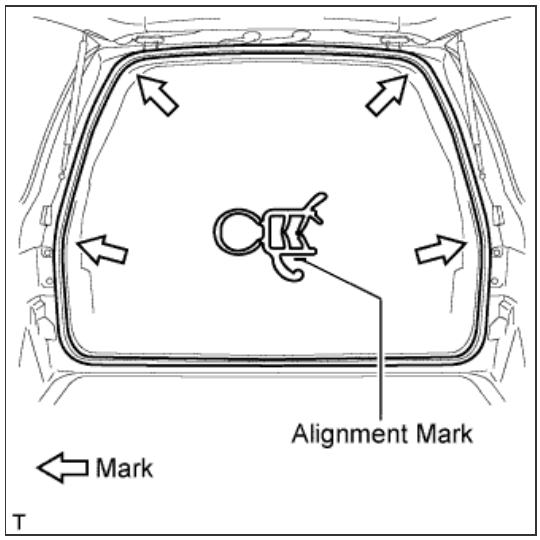

32. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH

a. Install the rear door openin trim weatherstrip as shown in the illustration.

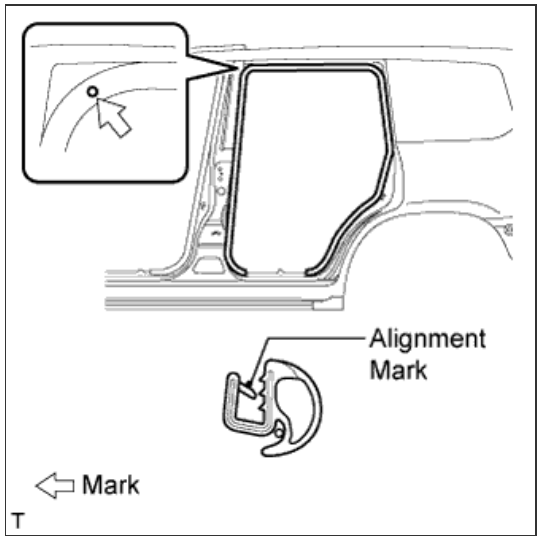


33. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

34. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

a. Install the front door openin trim weatherstrip as shown in the illustration.

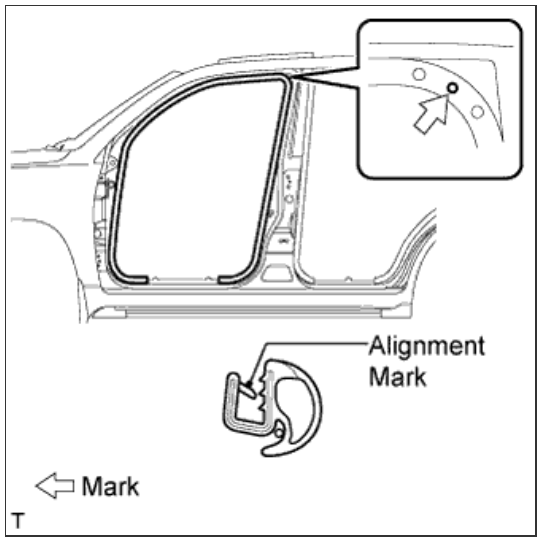

35. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.


36. INSTALL ROOF HEADLINING ASSEMBLY

HINT:

- **for Manual Seat:**

hen in talling the roof headlining, move the front seat and rear No. 1 seat to the position shown in the illustration.


- **for Power Seat:**
  When installing the roof headlining, connect the cable to the negative (-) battery terminal and move the front seat and No. 1 rear seat to the position shown in the illustration.
- **for Power Seat:**
  After moving the seats, disconnect the cable from the negative (-) battery terminal.

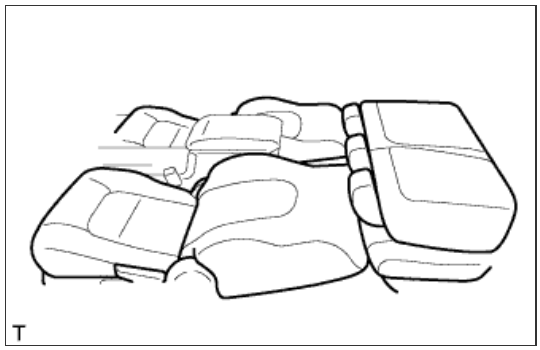


a. Place the headlinin in the cabin fro the rear of the vehicle as shown in the illustration.

NOTICE:

Be careful not to dama e the roof headlinin when placin it in the cabin

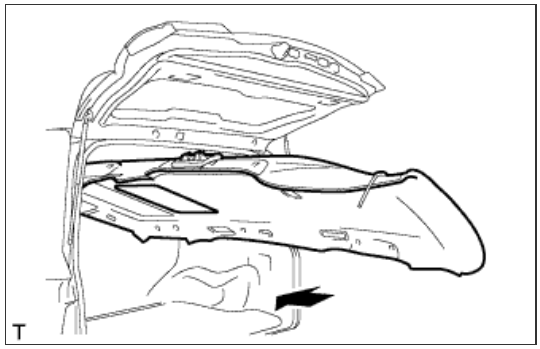


b. for erson eat pe No. 2 Seat:
Attach the 12 claws 2 clips 2 uides and 6 fasteners to install the headlinin .

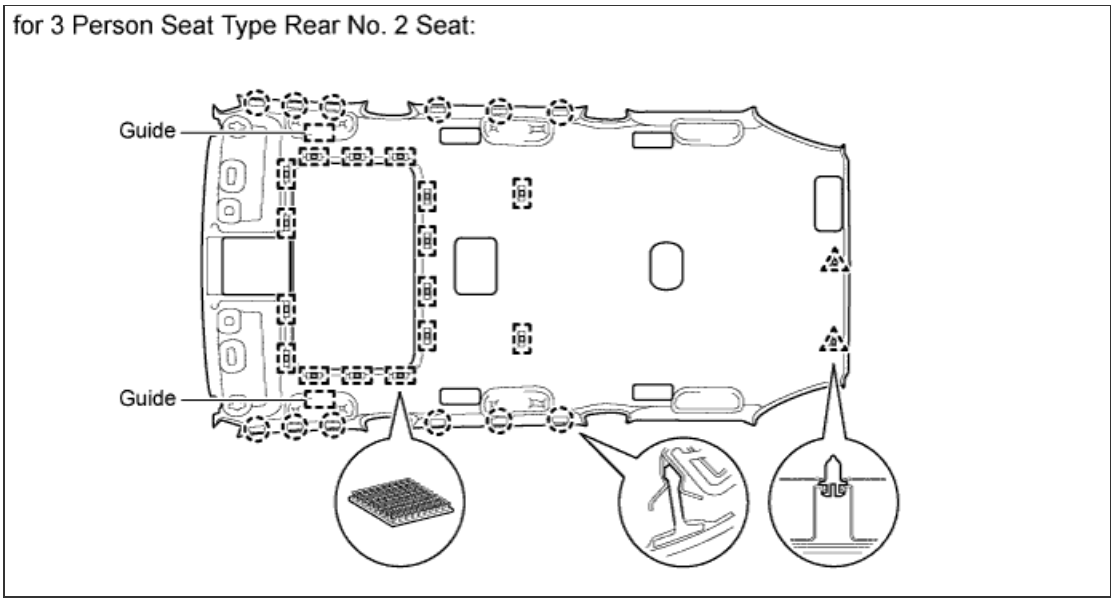


c. except erson eat pe No. 2 Seat:
Attach the 12 claws clip 2 uides and 6 fasteners to install the headlinin .


except 3 Person Seat Type Rear No. 2 Seat:

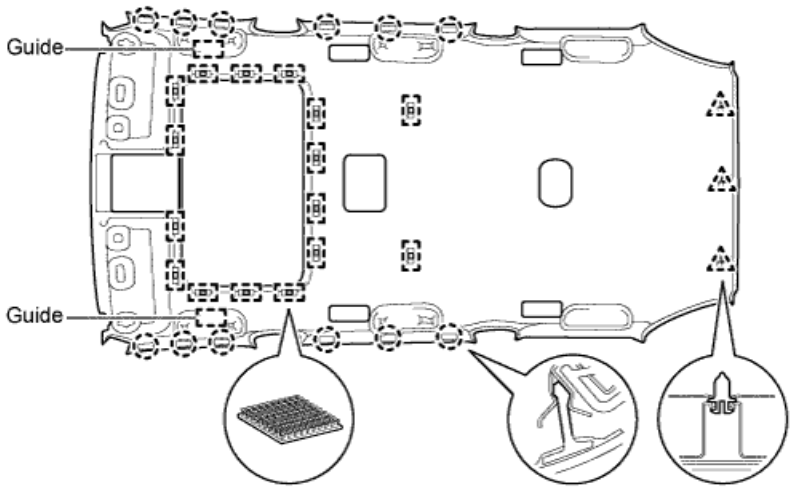

d. Connect the washer hose.

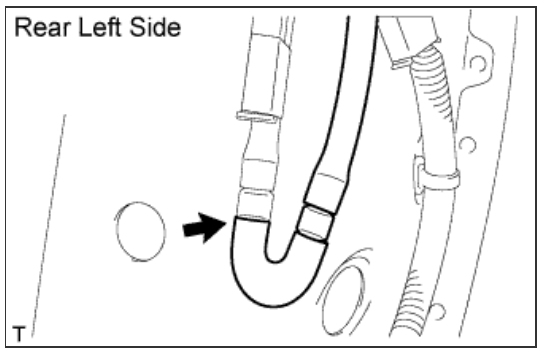


e. Connect the antenna cord connector.

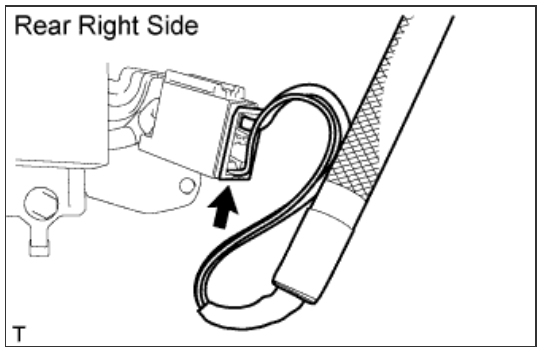


f. Connect the antenna cord connector and attach the 2 clamps.

g. Install the bolt.

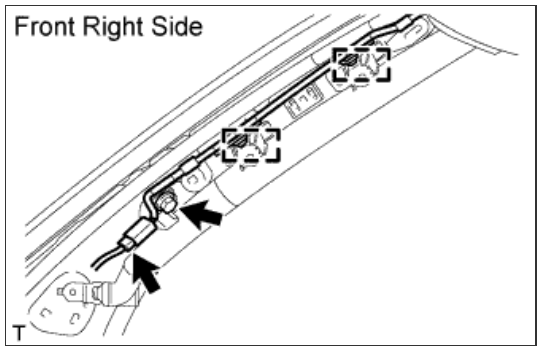


h. Connect the 3 roof wire connectors and washer hose.


i. Attach the 4 clamps.

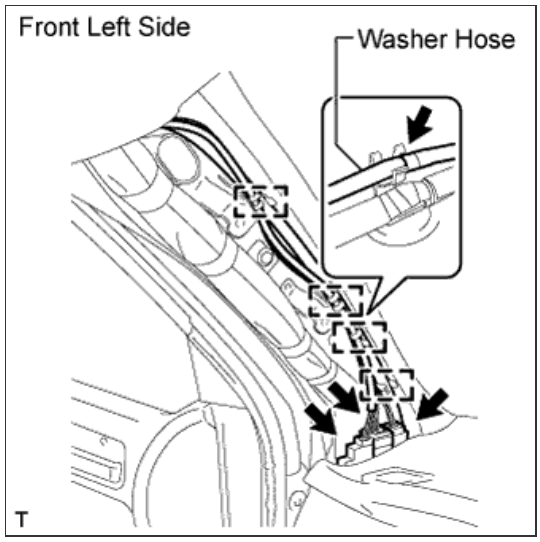


. Connect the drive ear connector.

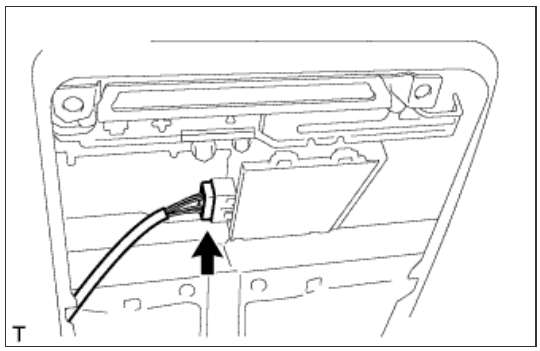

k. w ain ensor
isconnect the rain sensor connector.

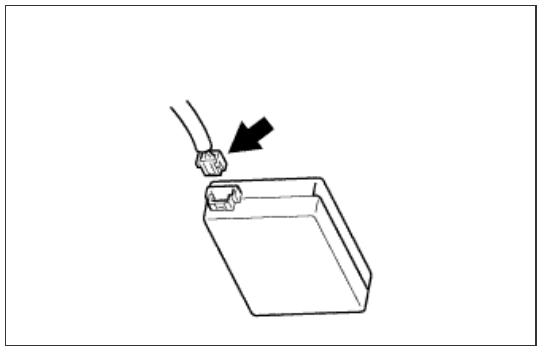


l. w C irror
Connect the inner mirror connector.

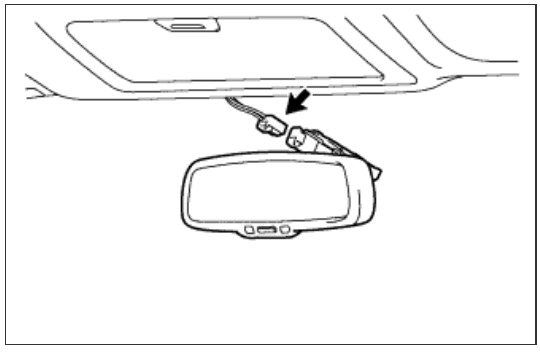

37. INSTALL FRONT ROOF SIDE RAIL GARNISH LH

a. Install 3 new clips to the roof side rail arnish.

b. Attach the clips to install the roof side rail rnish.

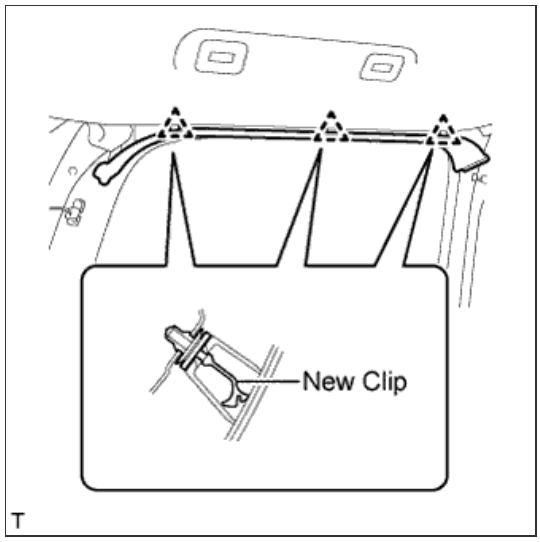

38. INSTALL FRONT ROOF SIDE RAIL GARNISH RH

HINT:

Use the same procedures described for the LH side.


39. INSTALL 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the 3rd seat assist rip on the other side.

a. Assemble the assist rip2 clips and 2 covers as shown in the illustration.

b. Install the assist rip.

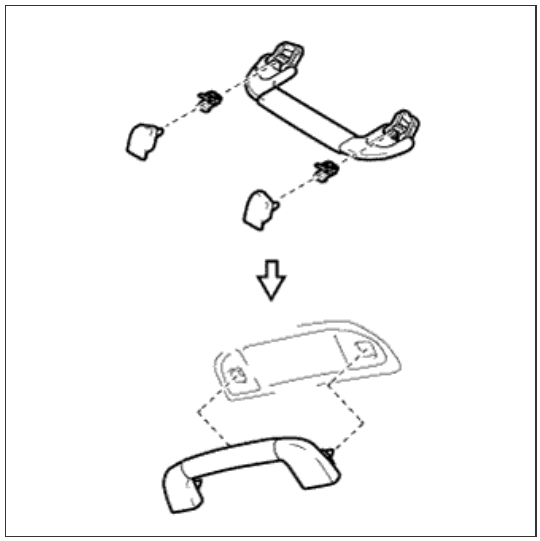


40. INSTALL NO. 2 ASSIST GRIP ASSEMBLY LH

a. w eat No. 2 Seat except ace to ace eat pe or w No. 2 Seat: Install the No. 2 assist rip assembl .

i. Assemble the assist rip2 clips and 2 covers as shown in the illustration.


ii. Install the assist rip.

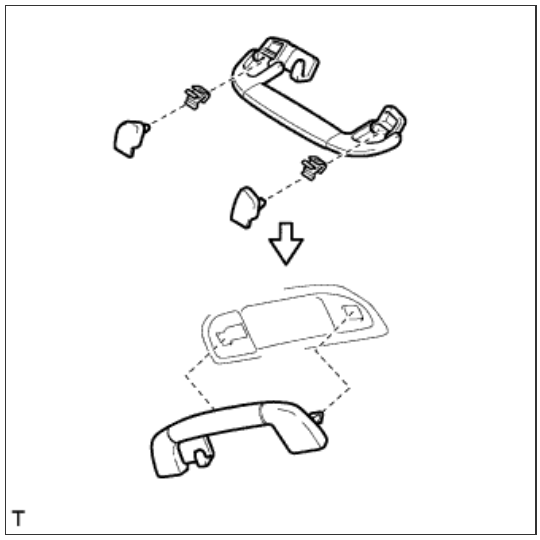

. w/ Rear No. 2 Seat for ace to ace eat pe
Install the No. 2 assist rip assembl .

i. Assemble the assist rip2 clips and 2 covers as shown in the illustration.

ii. Install the assist rip.

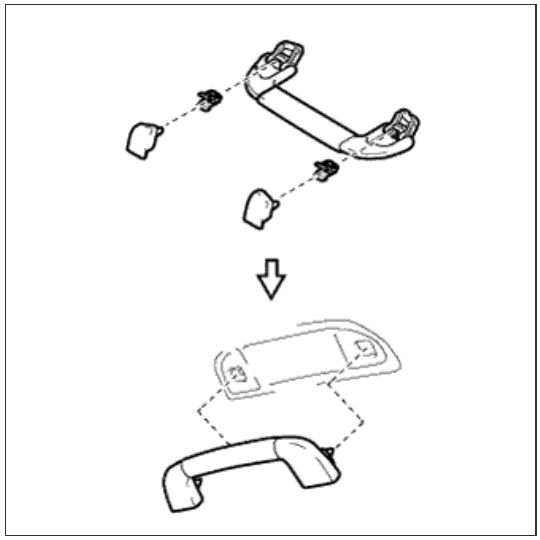

41. INSTALL NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


42. INSTALL ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to install the assist rip on the other side.


a. Assemble the assist rip2 clips and 2 covers as shown in the illustration.

b. Install the assist rip.

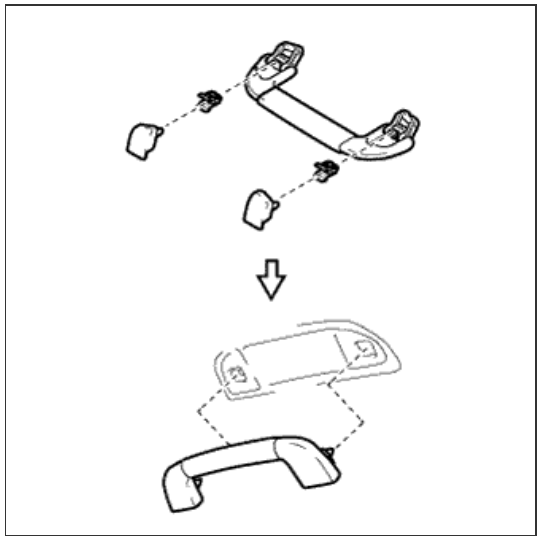


43. INSTALL SEAT BELT ANCHOR COVER (for 3 Person Seat Type Rear No. 2 Seat)

a. Attach the 4 uides and clips to install the seat belt anchoover.

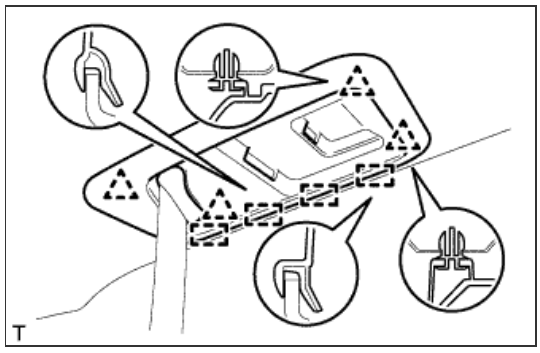

44. INSTALL RAIN SENSOR COVER (w/ Rain Sensor)


a. Push in the stopper in the direction of the arrow labeled (1) to install the rain sensor cover.

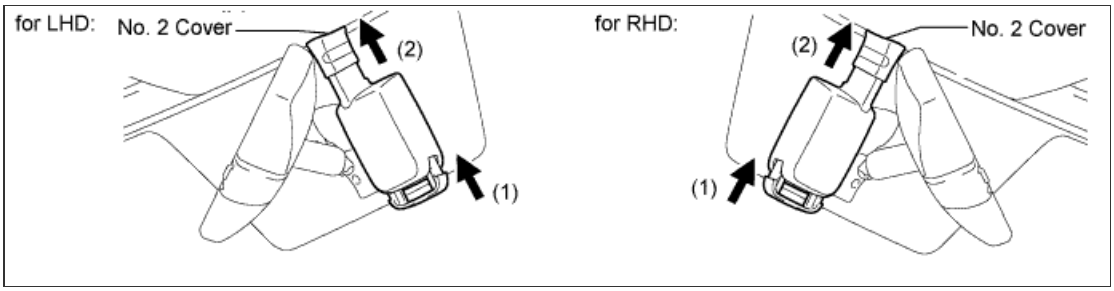

b. Slide the No. 2 cover in the direction of the arrow labeled (2) to fix it in place.


45. INSTALL INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Attach the 2 claws to install the cover.

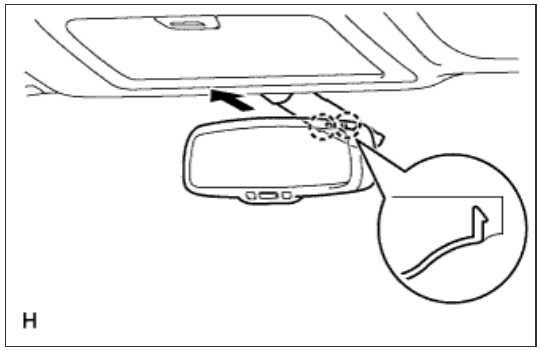

46. INSTALL CENTER VISOR ASSEMBLY LH (w/ Sub Visor)

a. Attach the 2 clips to install the center visor.

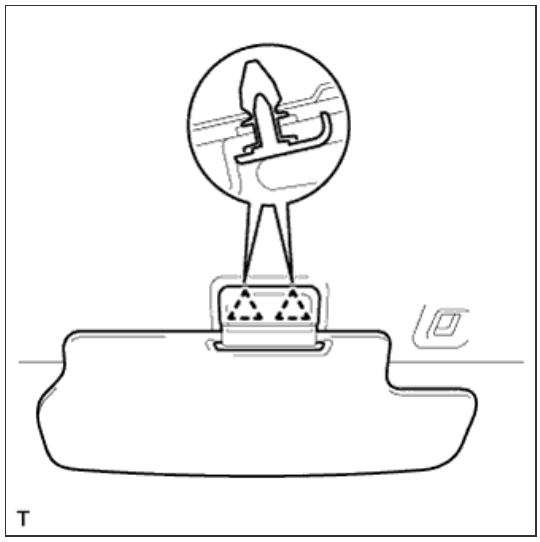

47. INSTALL CENTER VISOR ASSEMBLY RH (w/ Sub Visor)

HINT:

Use the same procedures described for the LH side.


48. INSTALL VISOR HOLDER

HINT:

Use the same procedures to install the visor holder on the other side.


a. Attach the 2 claws.

b. Push the visor holder in to install it.

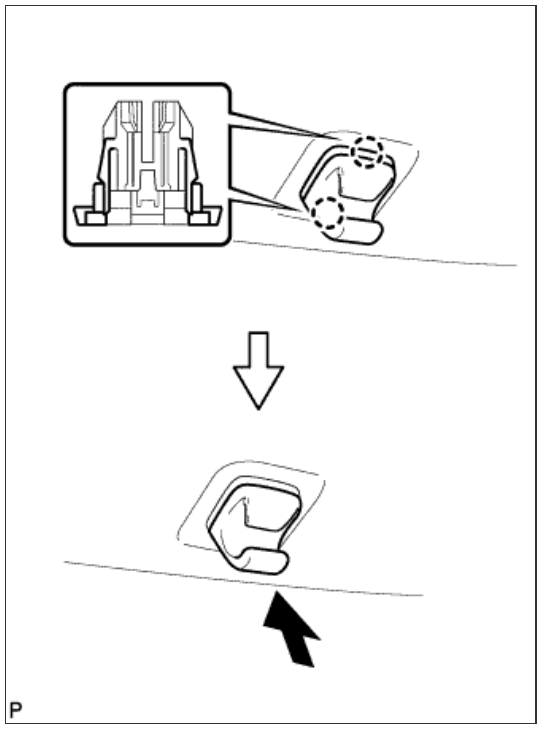

49. INSTALL VISOR ASSEMBLY LH

a. Install the visor with the 2 screws.

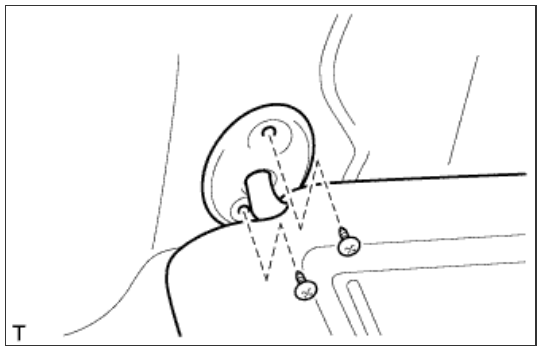

50. INSTALL VISOR ASSEMBLY RH

HINT:


Use the same procedures described for the LH side.

51. INSTALL VISOR BRACKET COVER

HINT:


Use the same procedure to install the visor bracket cover on the other side.

a. Attach the 4 claws to install the visor bracket cover.

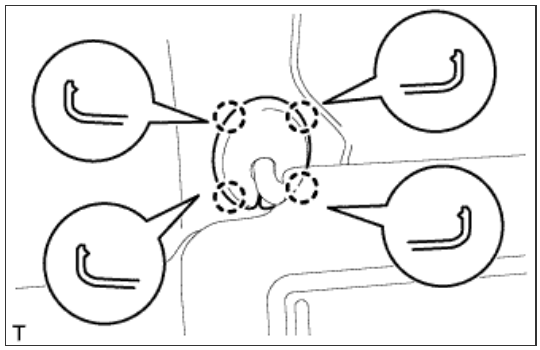


52. INSTALL NO. 2 ROOM LIGHT ASSEMBLY


a. Install the 2 covers.

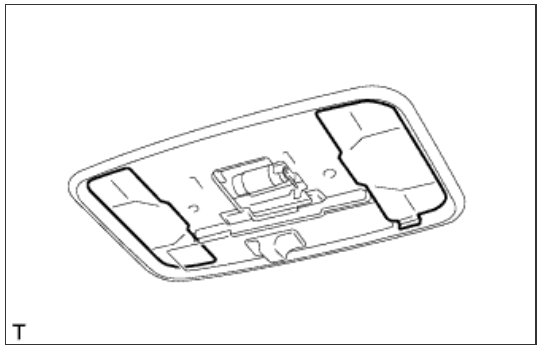


b. Attach the 4 claws to install the room li ht lens.

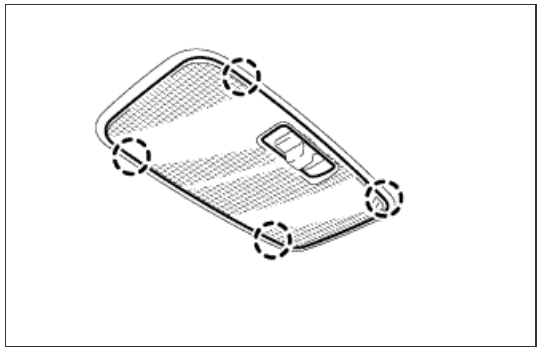

c. Attach the 4 claws to install the room li ht to the roo n li ht switch base.

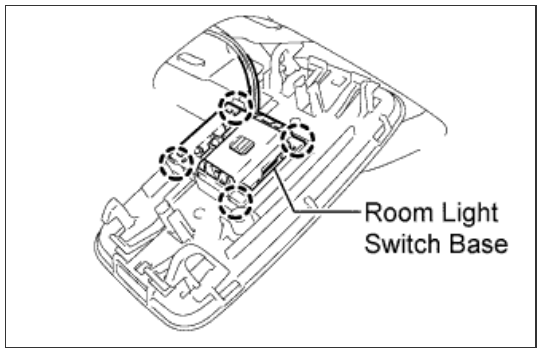


d. Attach the claws to install the roo n li ht.

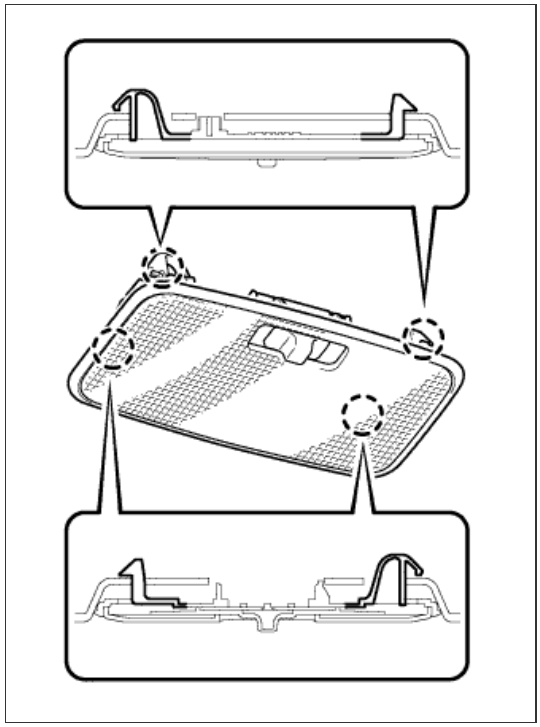

53. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

a. Connect the connector.

b. Attach the clips to install the roo n li ht.

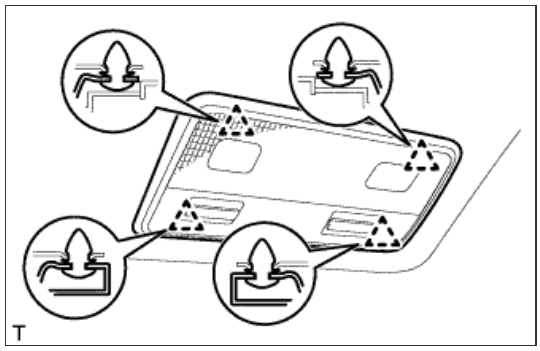


54. INSTALL MAP LIGHT ASSEMBLY

a. Connect the connector.

b. Attach the 2 clips and 2 uides to install the map li ht.


c. Install the 2 screws.

d. Attach the 2 claws to close the 2 covers.

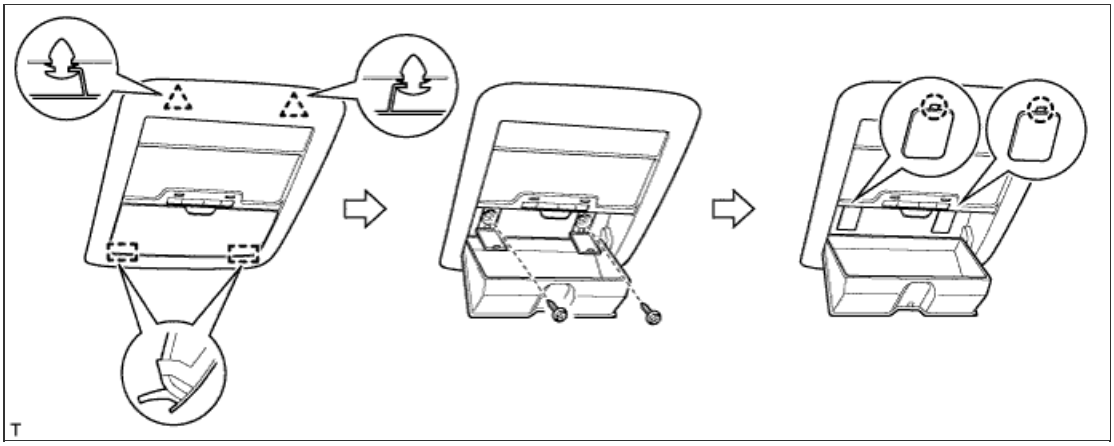

55. INSTALL REAR UPPER PILLAR GARNISH LH


a. Attach the 5 clips to install the rear upper pillar arnish.

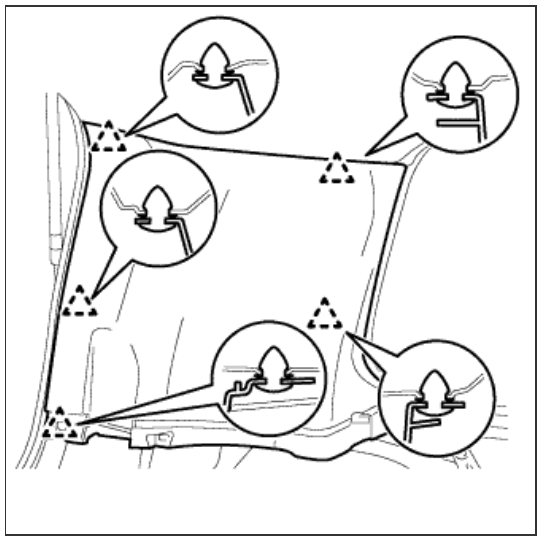


b. w e No. 2 Seat except ace to ace eat pe

i. Install the seat belt shoulder anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

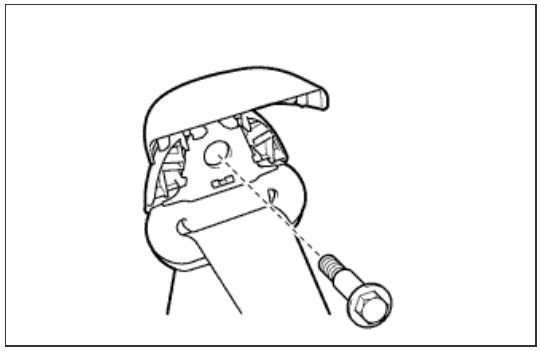

ii. Attach the 2 claws to close the seat belt shoulder anchor cover.

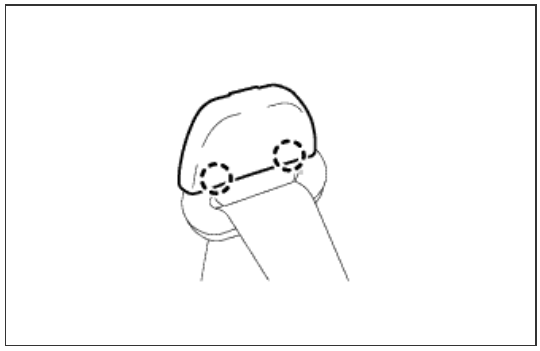

56. INSTALL REAR UPPER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

57. INSTALL REAR FRONT QUARTER TRIM GARNISH LH

a. Pass the seat belt anchor throu h the quarter trim arnish.

b. Attach the clip and 2 uides to install the quarter trim arnish.

c. Install the screw.

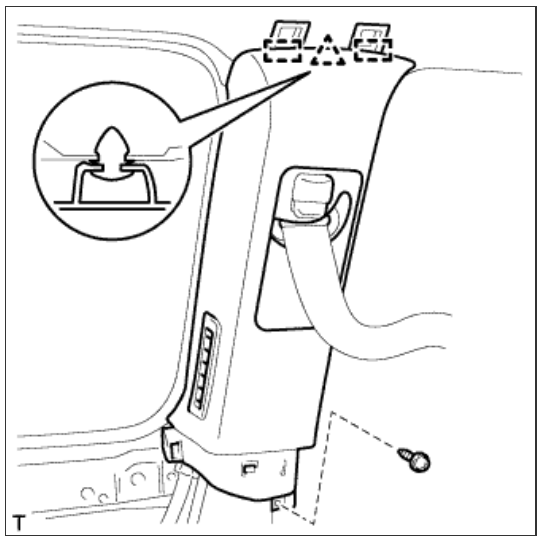

58. INSTALL REAR FRONT QUARTER TRIM GARNISH RH


HINT:

Use the same procedures described for the LH side.

59. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

hen installin the front quarterrimpanel operate the reclinin ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

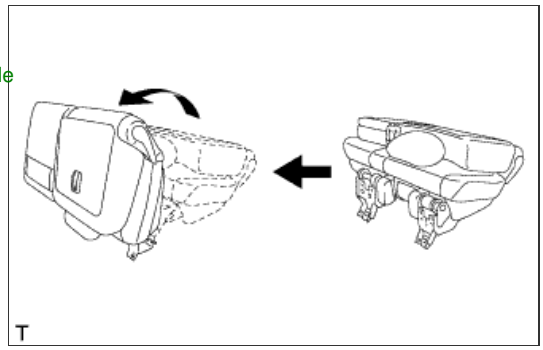

a. w/ Rear No. 2 Seat except ace to ace eat pe


i. w o ear Air Conditionin m: ste
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditionin nste
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

i . Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

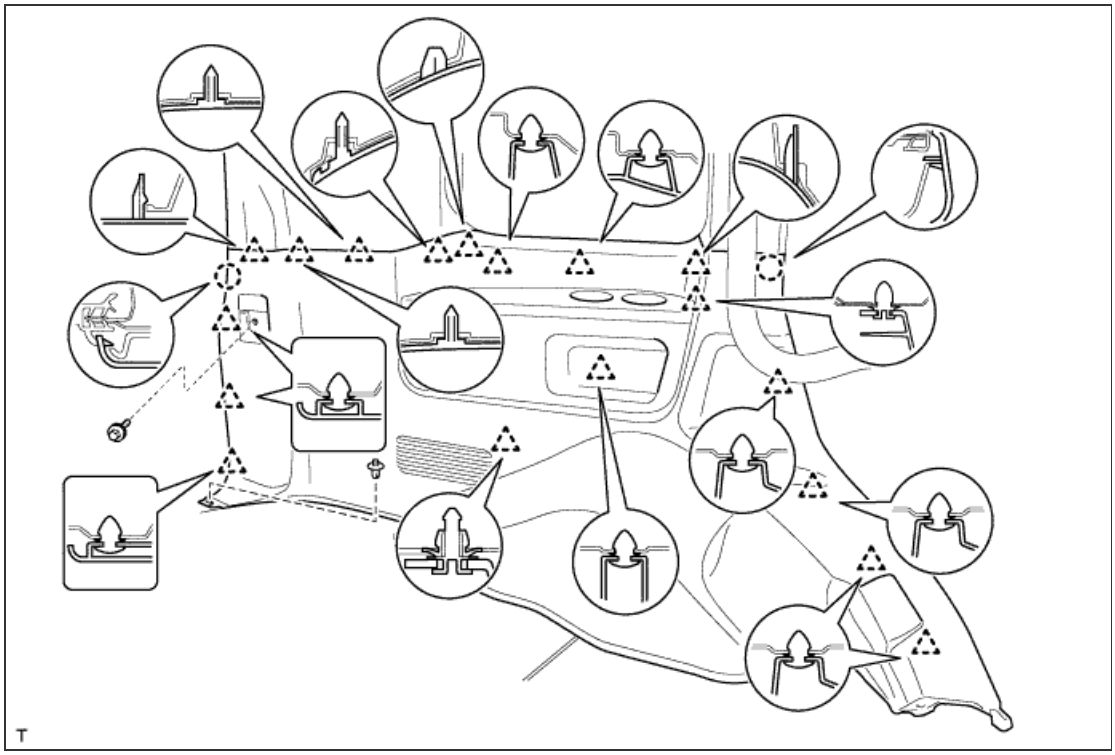

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat for ace to ace eat pe

i. Attach the clips and 2 claws to install the quarter trim panel.

ii. Install the clip.

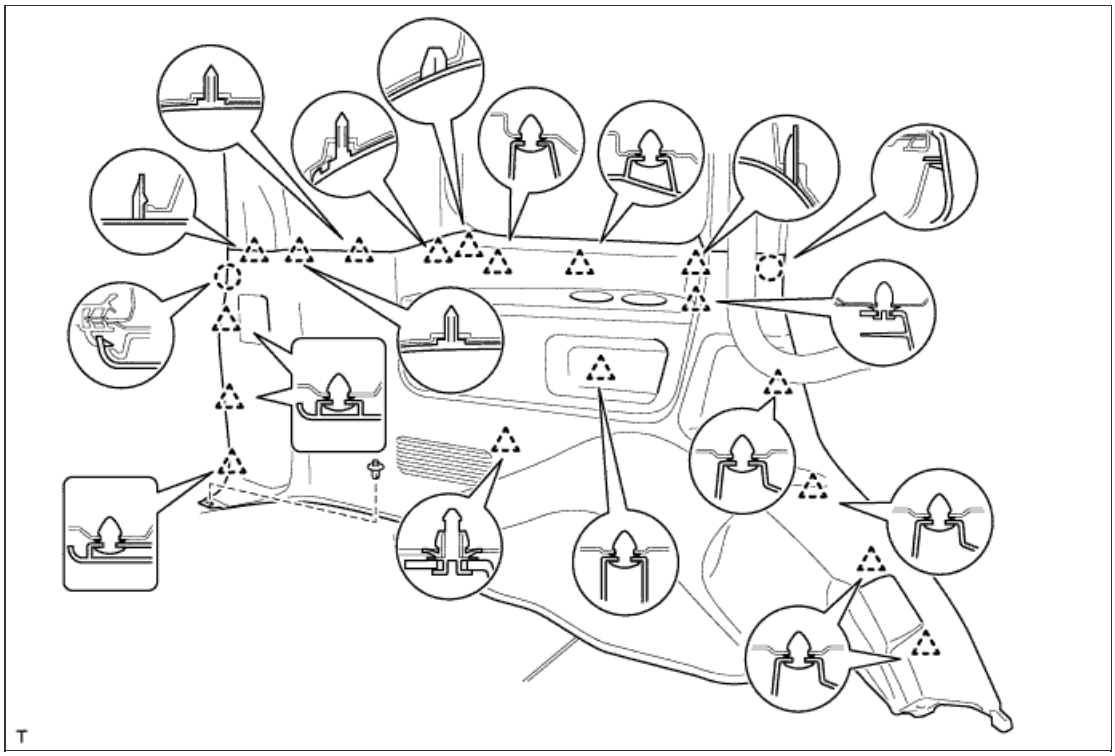


c. w/ Rear No. 2 Seat except ace to ace eat pe
Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }


NOTICE:

Do not overlap the anchor part of the seat belt and protrudin parts of the vehicle bod .

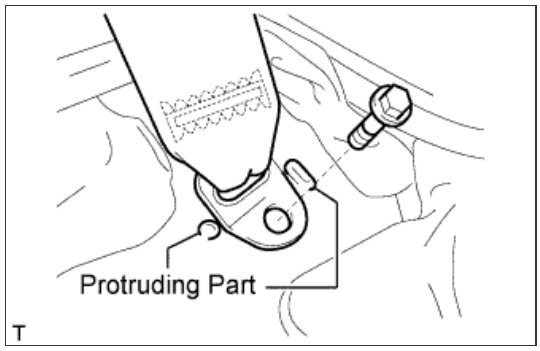


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

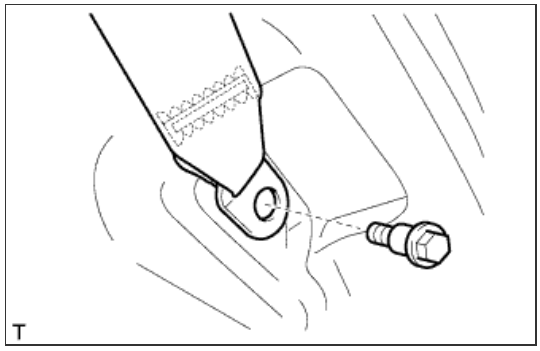


e. Attach the 3 claws to install the cover.

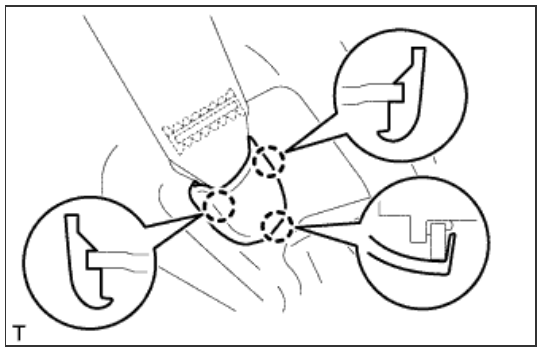

60. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:

hen installin the front quarterrimpanel operate the reclinin ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

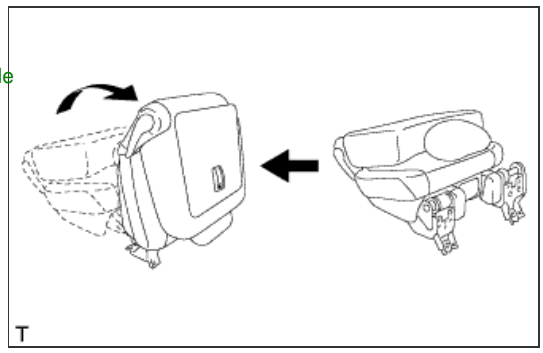

a. w/ Rear No. 2 Seat except ace to ace eat pe


i. w o ear Air Conditionin m: ste
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditionin nste
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 16 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

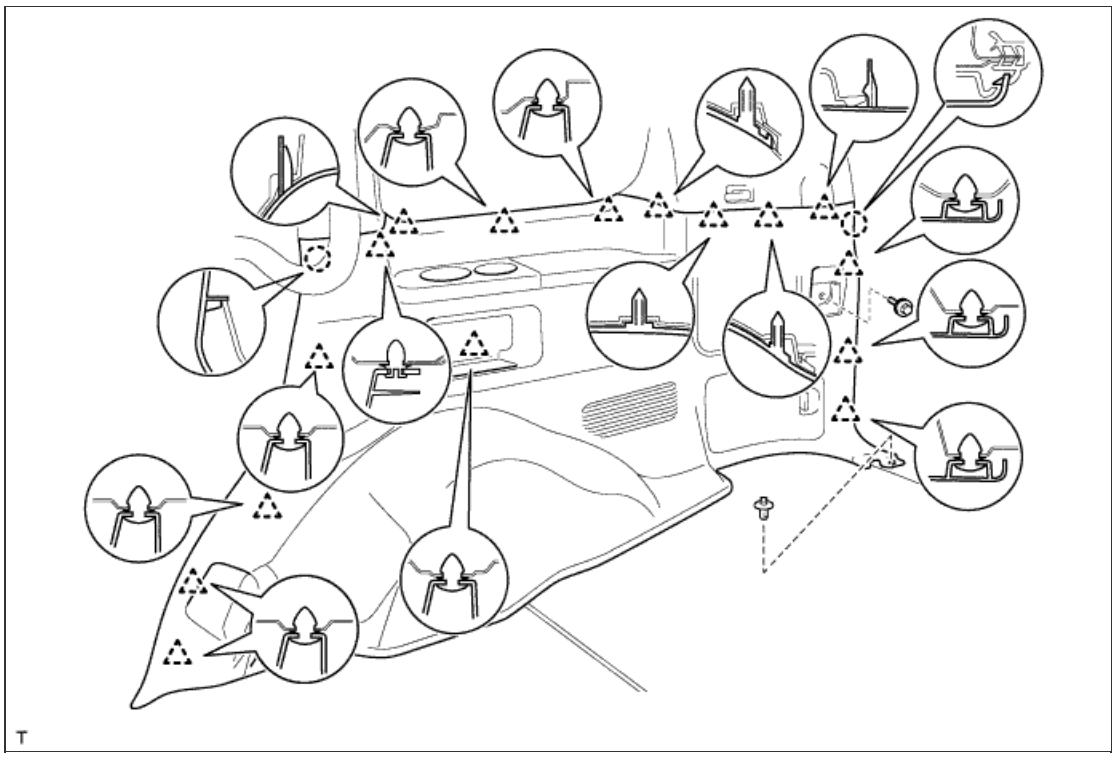


b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat for ace to ace eat pe

i. Attach the 6 clips and 2 claws to install the quarter trim panel.

ii. Install the clip.

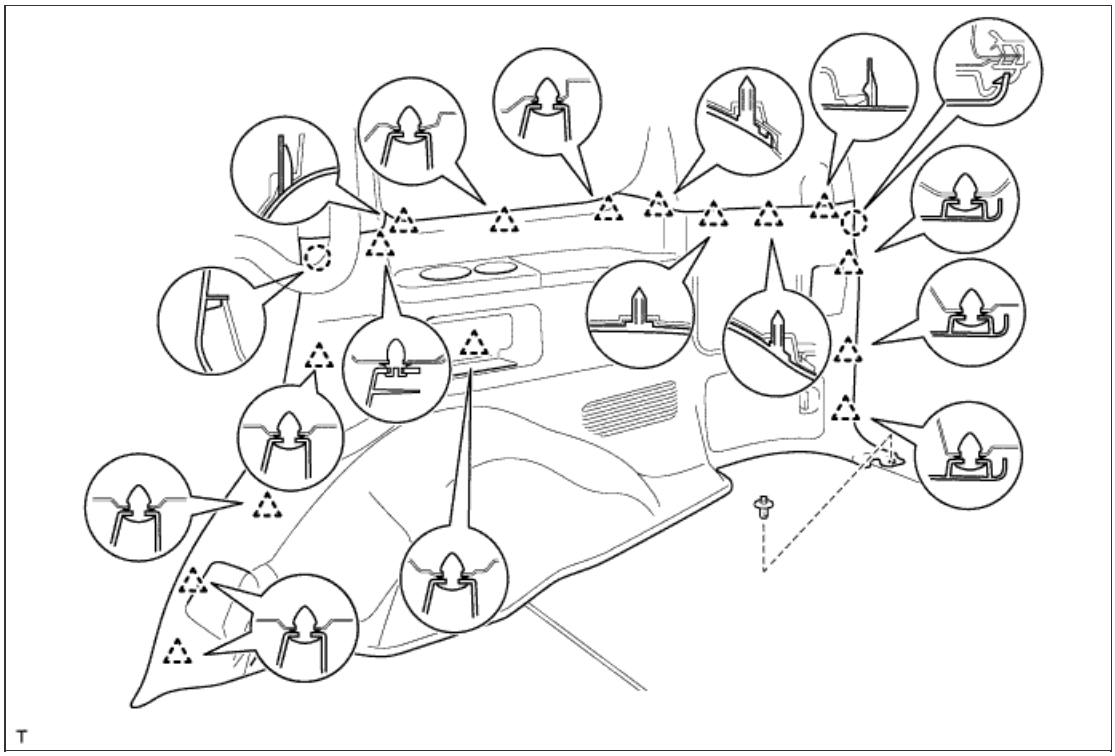


c. w/ Rear No. 2 Seat except ace to ace eat pe

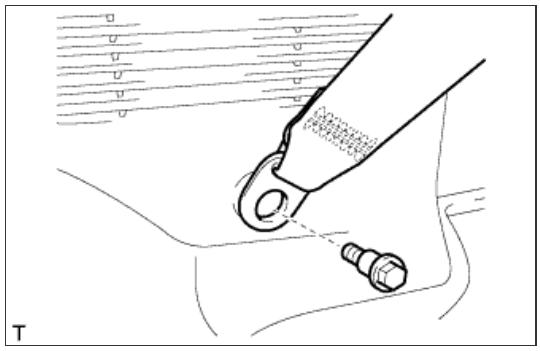

i. Install the rear No. 2 seat belt anchor with the bolt.


Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

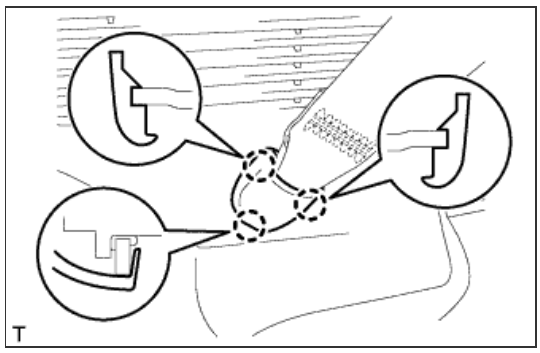


ii. Attach the 3 claws to install the cover.

d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

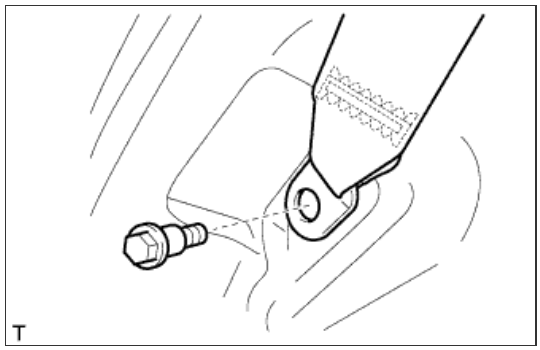

e. Attach the 3 claws to install the cover.

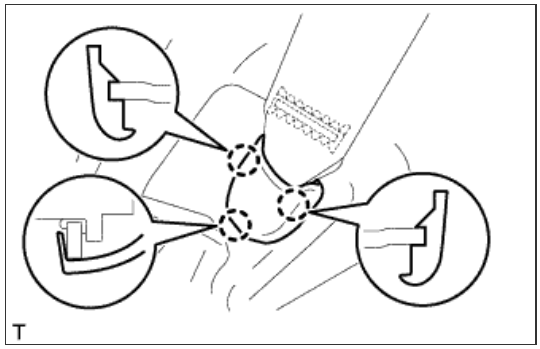


61. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

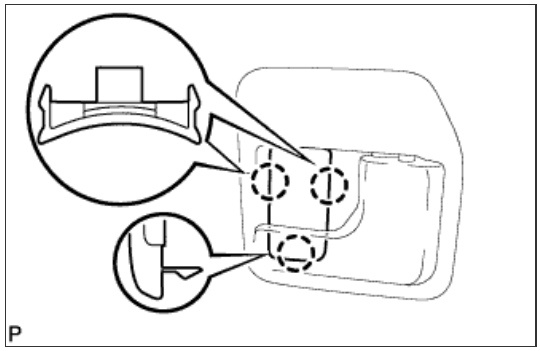


62. INSTALL CENTER PILLAR GARNISH LH

a. Pass the seat belt anchor throu h the center pillar arnish.

b. Attach the 2 clips and 2 uides to install the center pillar arnish.

c. Install the bolt.

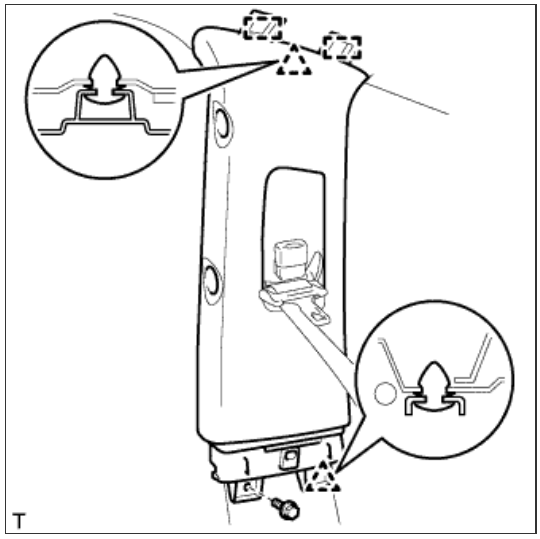

63. INSTALL CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.


64. INSTALL REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to install the rear assist rip on the other side.

a. Attach the 2 claws to install the rear assist rip.

b. Install the 2 bolts.

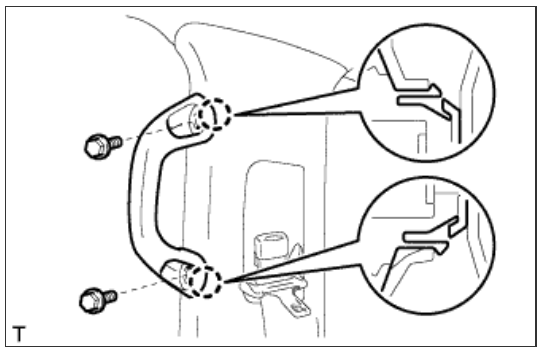

c. Attach the 4 claws to install the 2 assist rip plu s.

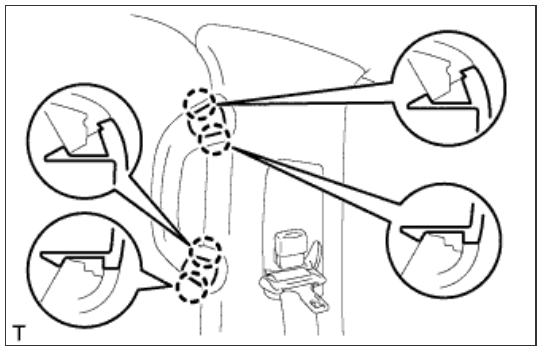


65. INSTALL CENTER LOWER PILLAR GARNISH LH

HINT:


- **for Manual Seat:**
  When installing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When installing the center lower pillar garnish, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Attach the 2 claws and 7 clips to install the center lower pillar arnish.

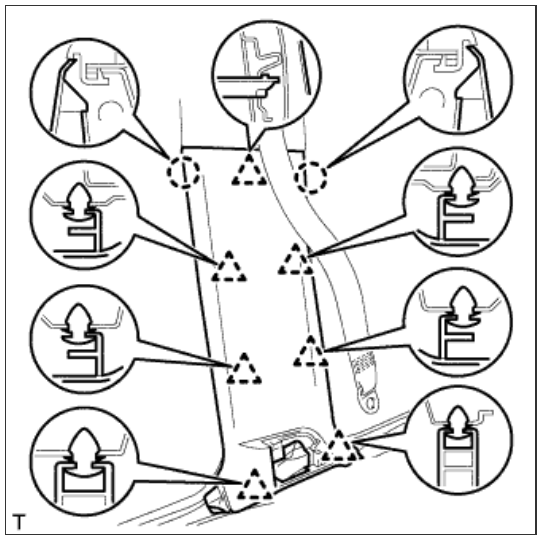

. Install the seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

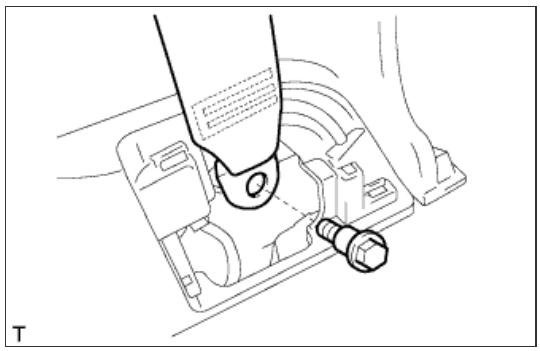

66. INSTALL CENTER LOWER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

67. INSTALL CENTER PILLAR GARNISH COVER LH

HINT:

- **for Manual Seat:**
  When installing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When installing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Attach the 2 clips and 2 guides to install the cover.

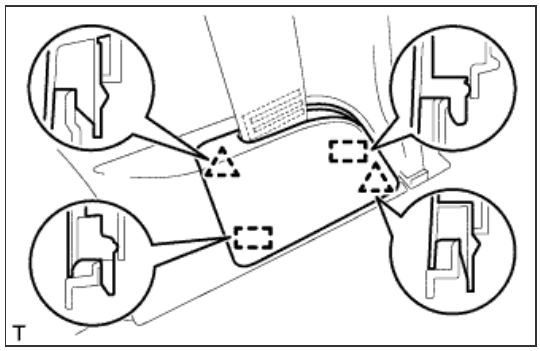

68. INSTALL CENTER PILLAR GARNISH COVER RH


HINT:

Use the same procedures described for the LH side.

69. INSTALL FRONT PILLAR GARNISH LH

a. for 9 Speakers:
Connect the speaker connector.

b. Attach the clip and 3 guides to install the front pillar garnish.

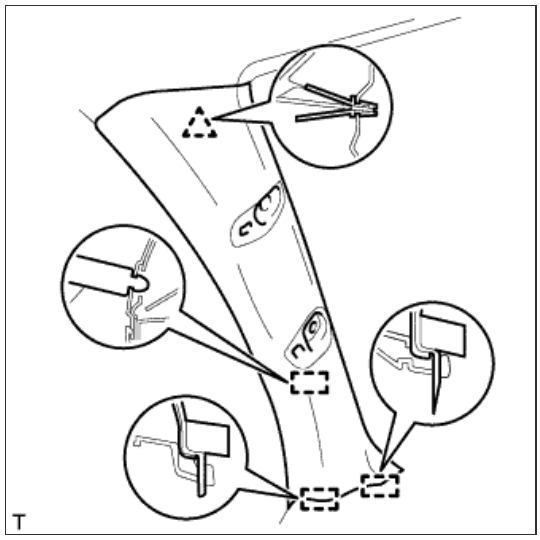

70. INSTALL FRONT PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

71. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY


HINT:

Use the same procedure to install the front assist rip on the other side.

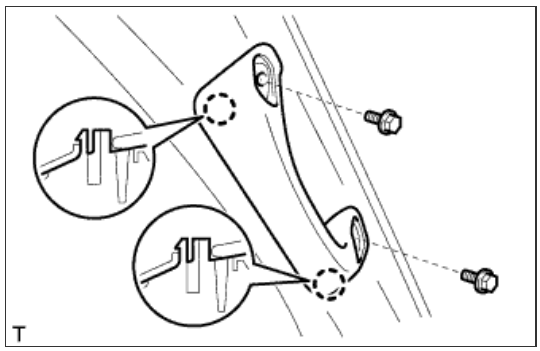

a. Attach the 2 claws to install the front assist rip.


b. Install the 2 bolts.

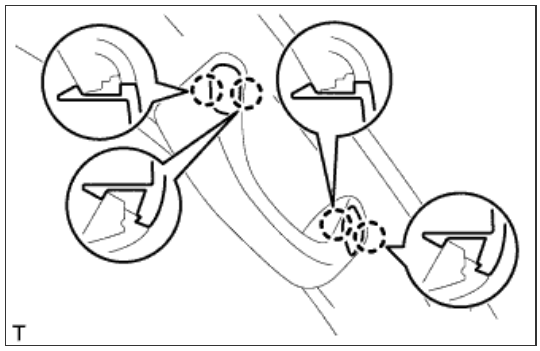

c. Attach the 4 claws to install the 2 assist rip plu s.

72. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE


a. Attach the 6 clips to install the support plate.

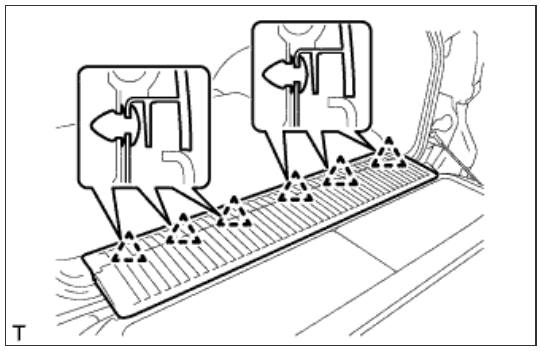

73. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

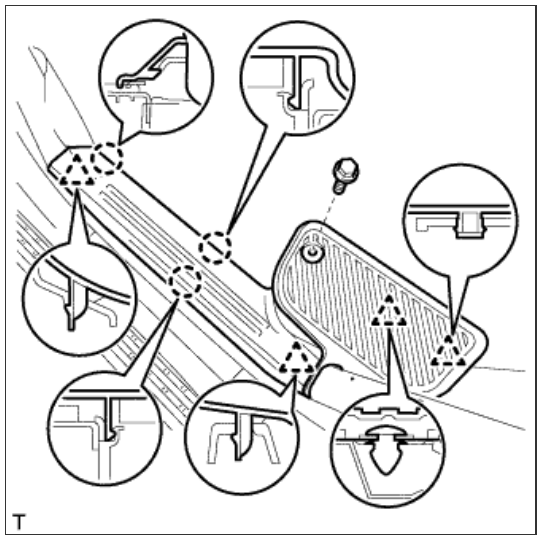

74. INSTALL REAR DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

75. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

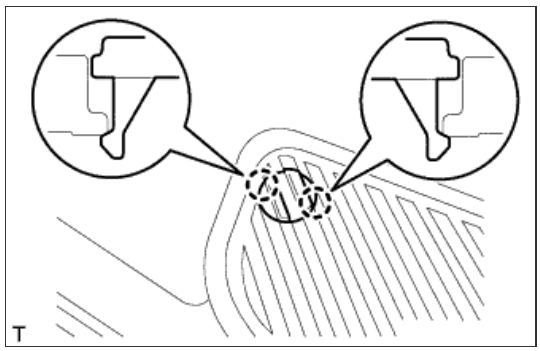

76. INSTALL FRONT DOOR SCUFF PLATE LH

a. Attach the 7 claws and 4 clips to install the scuff plate.

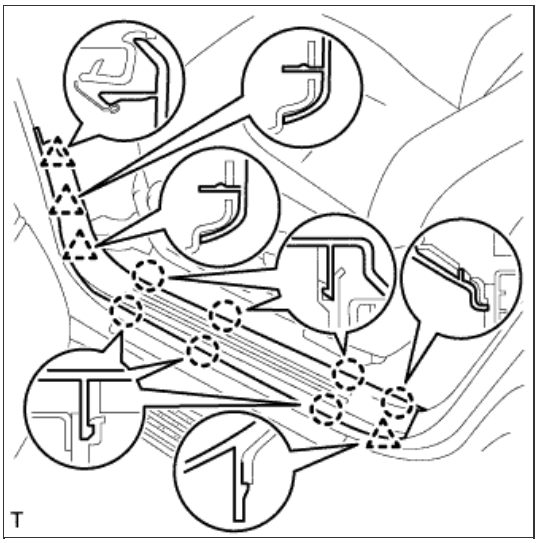

77. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

78. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

79. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

80. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

81. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

82. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

hen disconnectin the cable mes sts need to be initiali ed after the cable is reconnected (Click here).


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL SIDE TRIM BOX

a. Install the side trim box with the 9 screws.

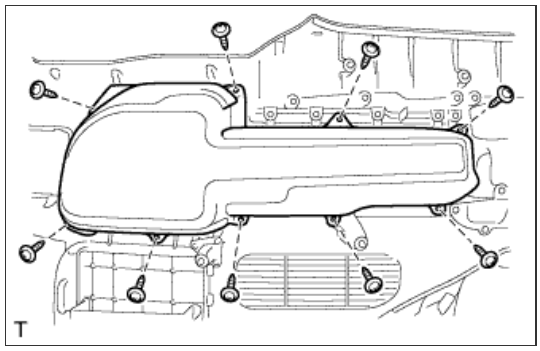

2. INSTALL SIDE TRIM BOX COVER


a. Install the side trim box cover.

3. INSTALL QUARTER TRIM LID SUB-ASSEMBLY RH

a. Install the quarter trim lid.

4. INSTALL QUARTER TRIM COVER LH (w/o Rear No. 2 Seat, w/ Rear No. 2 Seat for Face to Face Seat Type)

a. Attach the 6 clips to install the quarter trim cover.

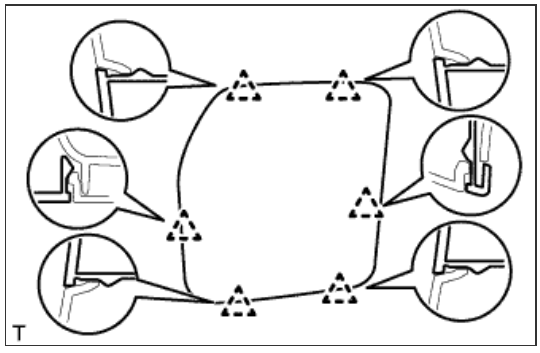


5. INSTALL QUARTER TRIM COVER RH (w/o Rear No. 2 Seat, w/ Rear No. 2 Seat for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

6. INSTALL REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 6 clips to install the rear No. 2 seat cover bezel.

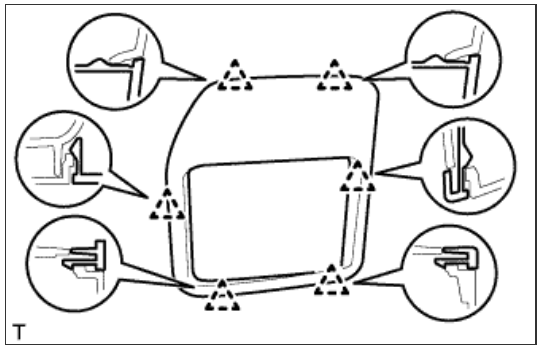

7. INSTALL REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

8. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 4 claws to install the seat lock control lever.


9. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

10. INSTALL NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

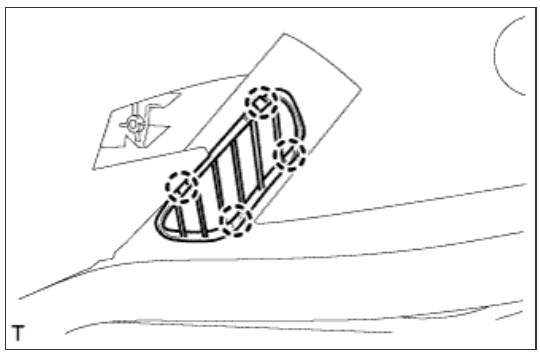


11. INSTALL NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.


12. INSTALL NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

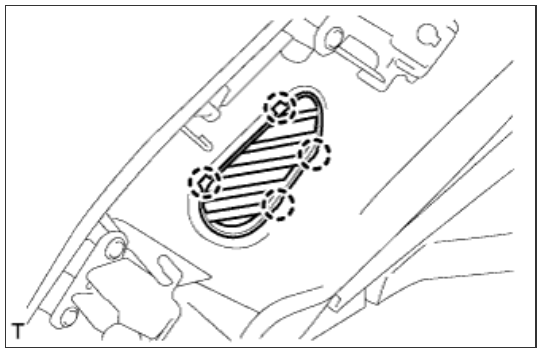


13. INSTALL NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

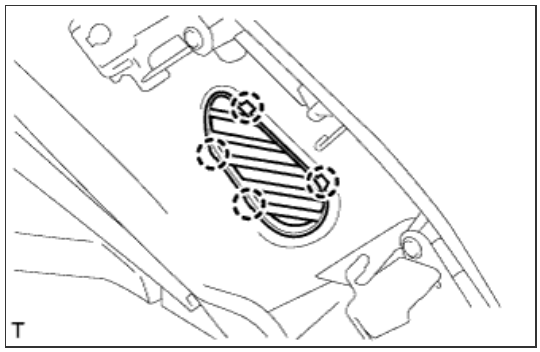


b. Install the duct with the 6 screws.

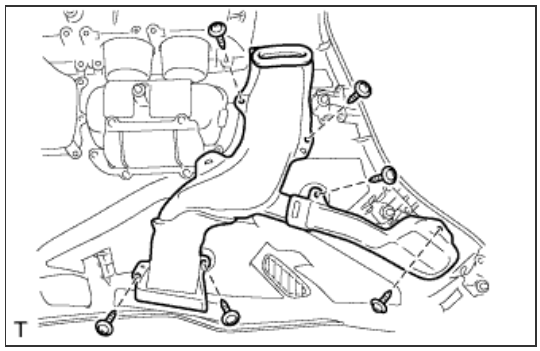

14. INSTALL NO. 2 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


b. Install the 5 screws.

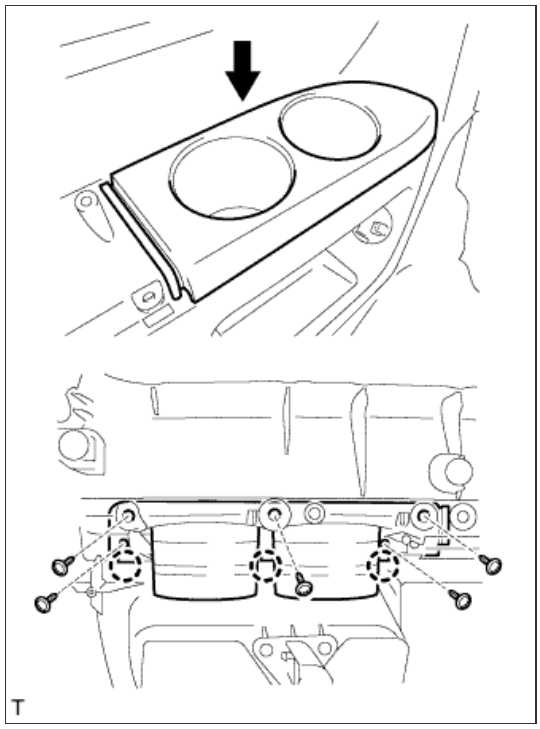

15. INSTALL NO. 1 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


b. Install the 5 screws.

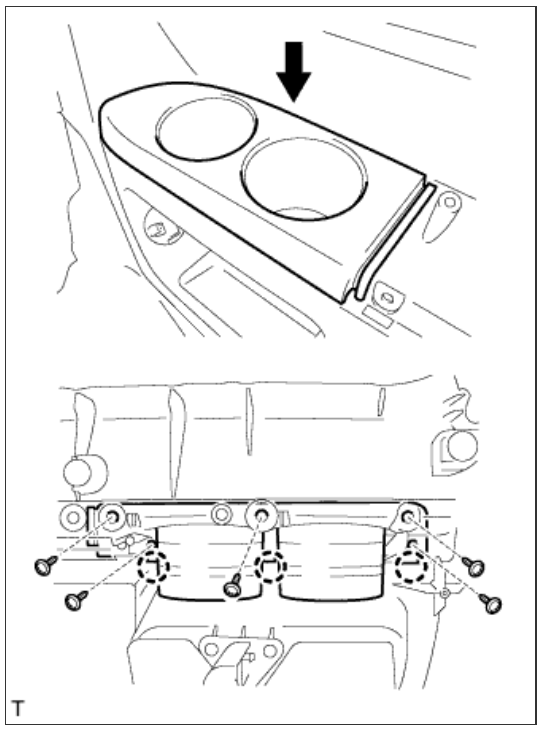


16. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

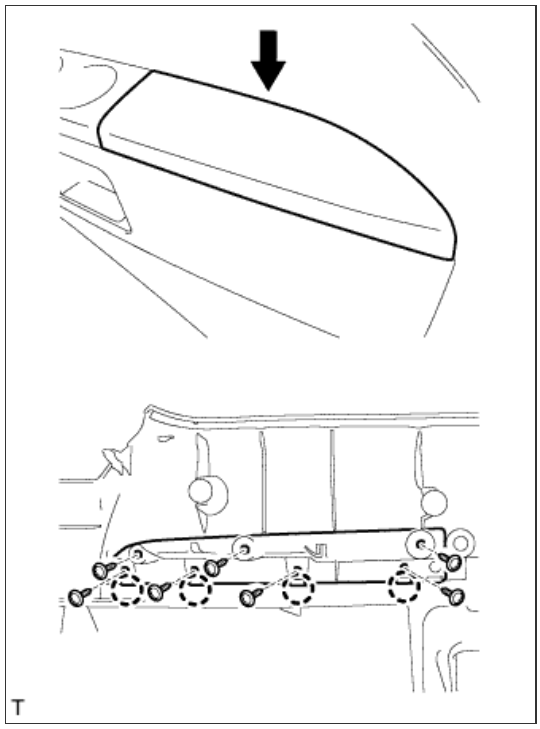


c. w/ Rear Heater:
Install the duct with the 8 screws.

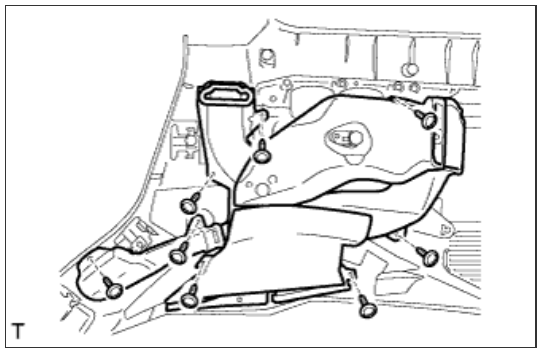

17. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY RH


a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

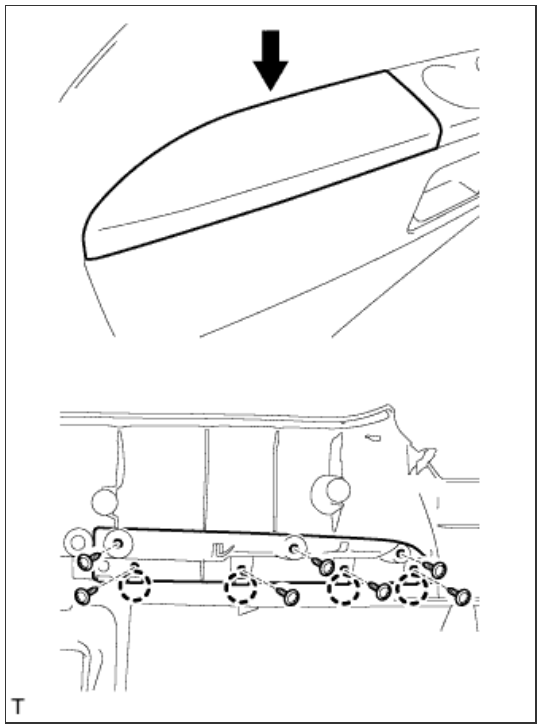

18. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Install the han er with 2 new sprin nuts.

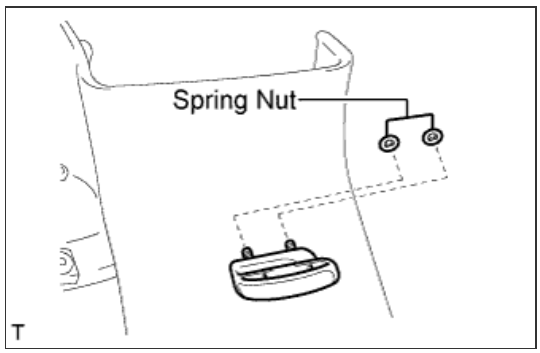

19. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:


Use the same procedures described for the LH side.

20. INSTALL REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to install the han er on the other side.

a. Install the han er with 2 new sprin nuts.

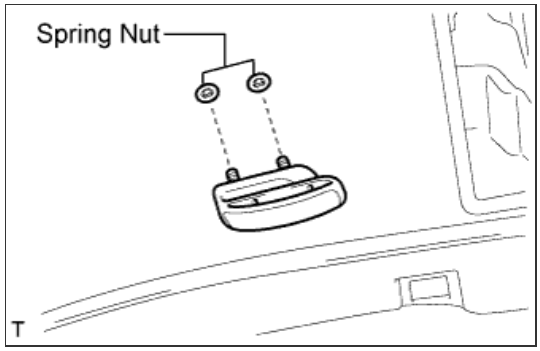

21. INSTALL ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 7 claws to install the cover.

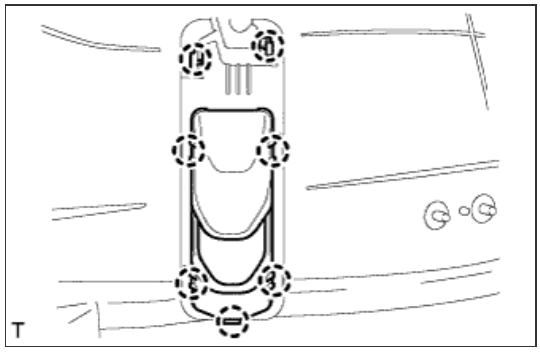


22. INSTALL ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

23. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Attach the 6 claws to install the plate.

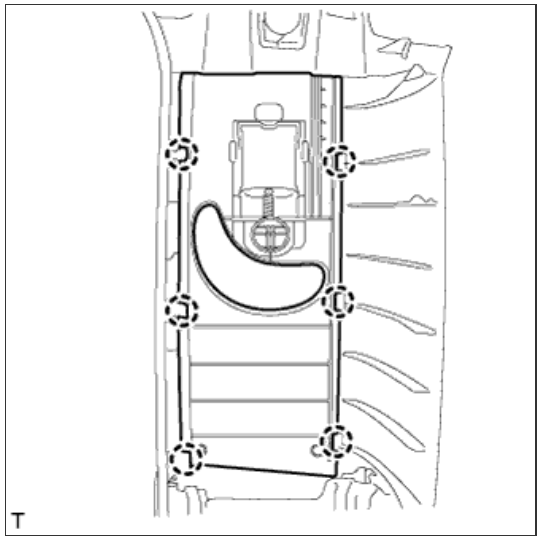


24. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

25. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Slide the plate in the direction shown in the illustration and attach the 6 claws to install the plate.

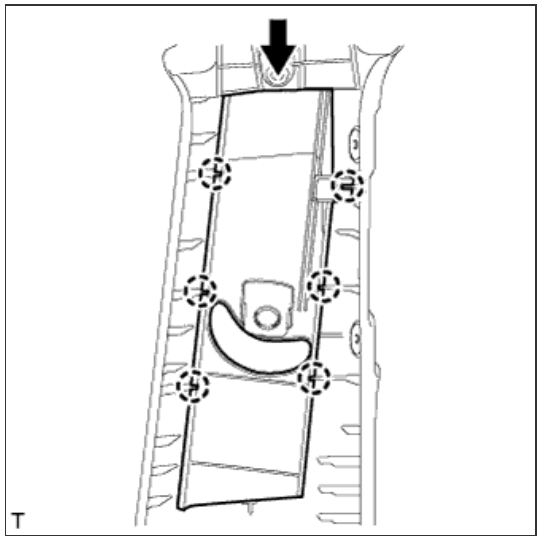


26. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

27. INSTALL REAR DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 3 clips to install the rear door scuff plate outside.

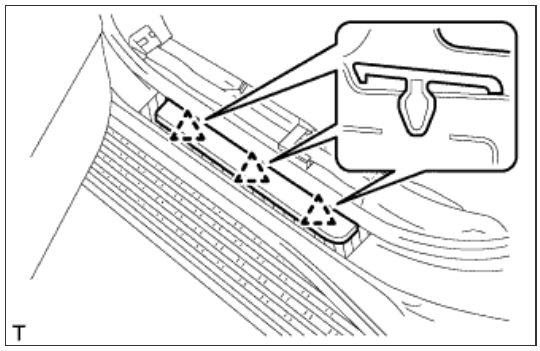


28. INSTALL REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

29. INSTALL FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 4 clips to install the front door scuff plate outside.

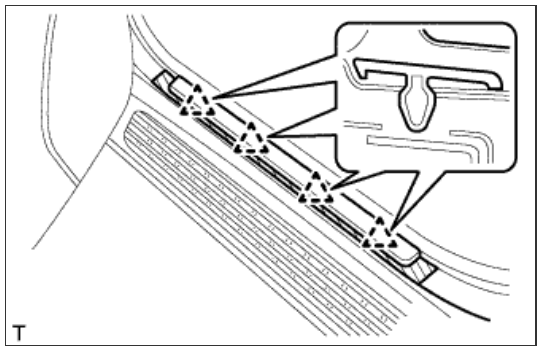


30. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.


31. INSTALL BACK DOOR WEATHERSTRIP

a. Install the back door weatherstrip as shown in the illustration.

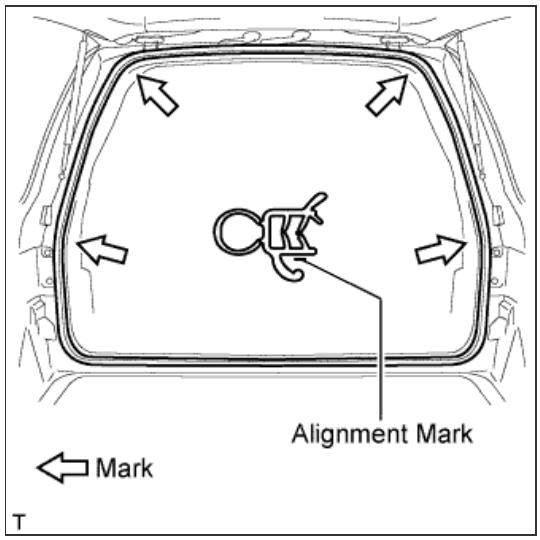

32. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH

a. Install the rear door openin trim weatherstrip as shown in the illustration.

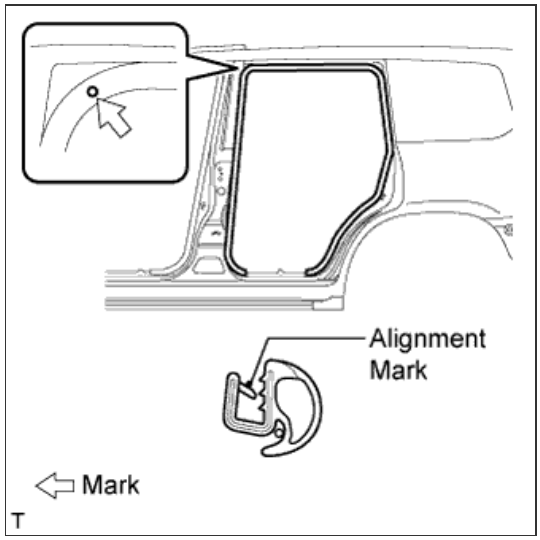


33. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

34. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

a. Install the front door openin trim weatherstrip as shown in the illustration.

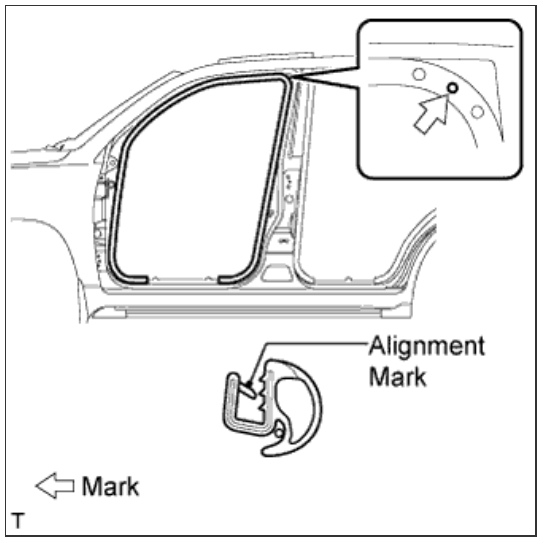

35. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.


36. INSTALL ROOF HEADLINING ASSEMBLY

HINT:

- **for Manual Seat:**

hen in talling the roof headlining, move the front seat and rear No. 1 seat to the position shown in the illustration.


- **for Power Seat:**
  When installing the roof headlining, connect the cable to the negative (-) battery terminal and move the front seat and No. 1 rear seat to the position shown in the illustration.
- **for Power Seat:**
  After moving the seats, disconnect the cable from the negative (-) battery terminal.

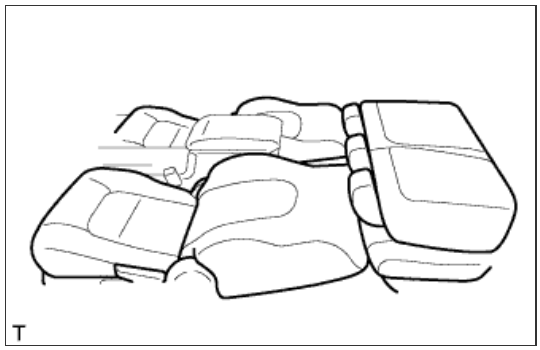


a. Place the headlinin in the cabin from the rear of the vehicle as shown in the illustration.

NOTICE:

Be careful not to dama e the roof headlinin when placin it in the cabin.

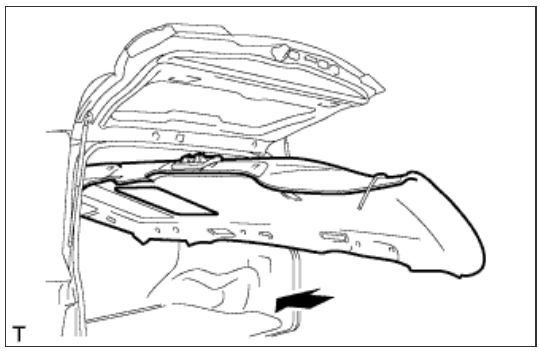


b. for 3 Person Seat pe Rear No. 2 Seat:
Attach the 12 claws 2 clips 2 uides and 16 fasteners to install the headlinin .

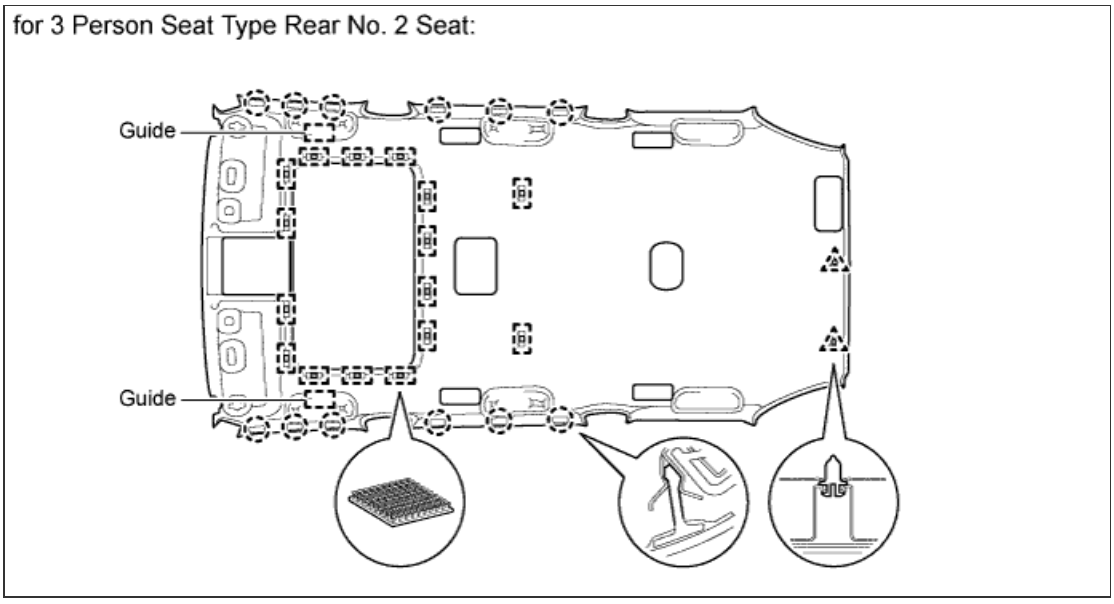


c. except 3 Person Seat pe Rear No. 2 Seat:
Attach the 12 claws 3 clips 2 uides and 16 fasteners to install the headlinin .


except 3 Person Seat Type Rear No. 2 Seat:

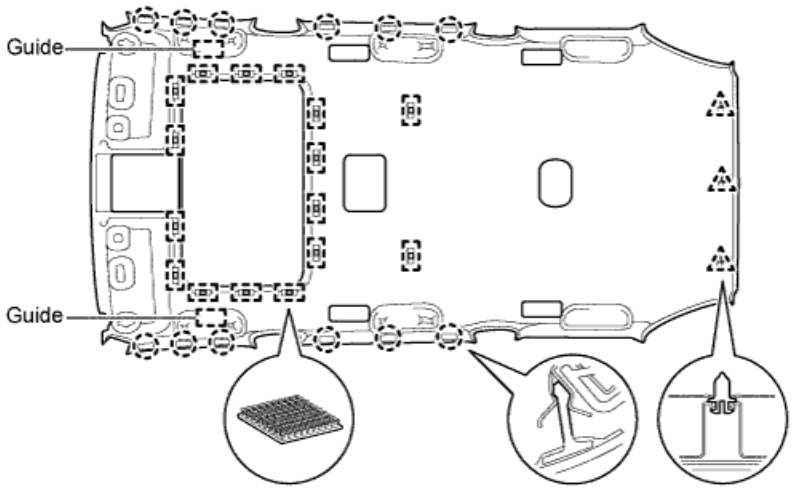

d. Connect the washer hose.

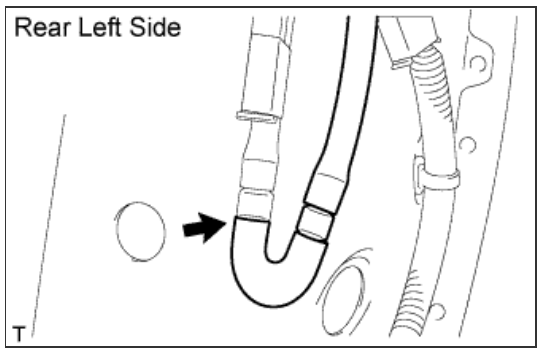


e. Connect the antenna cord connector.

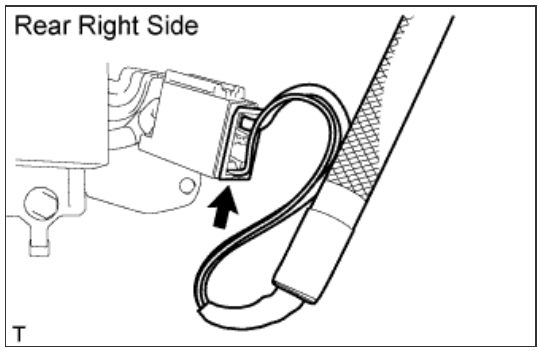


f. Connect the antenna cord connector and attach the 2 clamps.

g. Install the bolt.

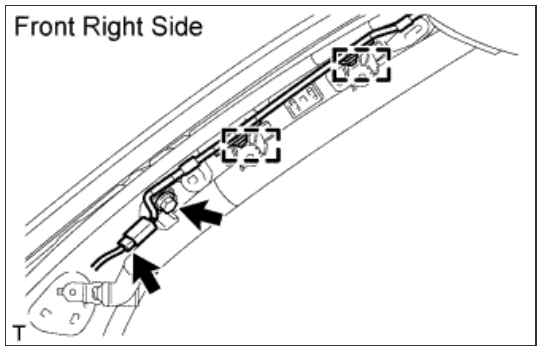


h. Connect the 3 roof wire connectors and washer hose.


i. Attach the 4 clamps.

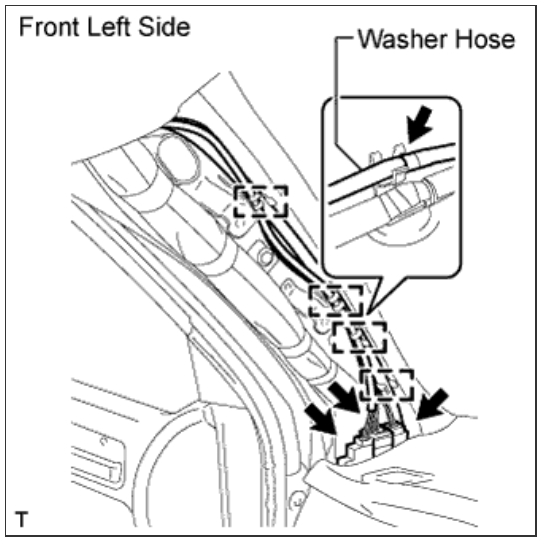


. Connect the drive ear connector.

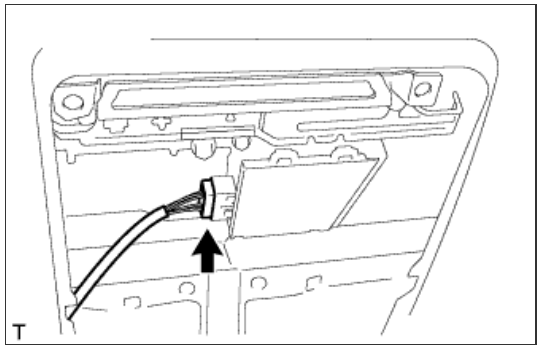

k. w/ Rain Sensor:
Disconnect the rain sensor connector.

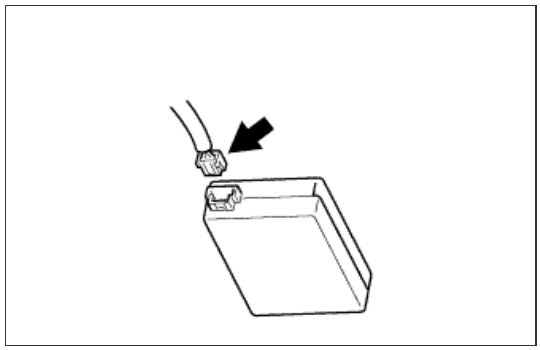


l. w/ C Mirror:
Connect the inner mirror connector.

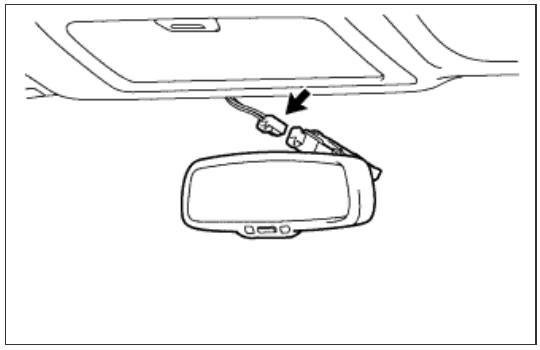

37. INSTALL FRONT ROOF SIDE RAIL GARNISH LH

a. Install 3 new clips to the roof side rail arnish.

b. Attach the 3 clips to install the roof side rail arnish.

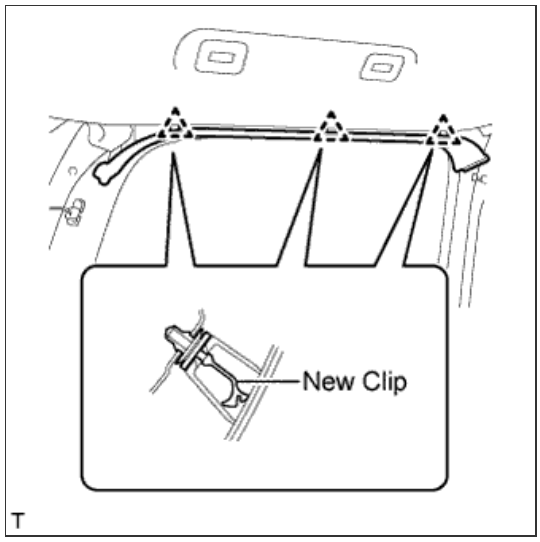

38. INSTALL FRONT ROOF SIDE RAIL GARNISH RH


HINT:

Use the same procedures described for the LH side.

39. INSTALL 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the 3rd seat assist rip on the other side.

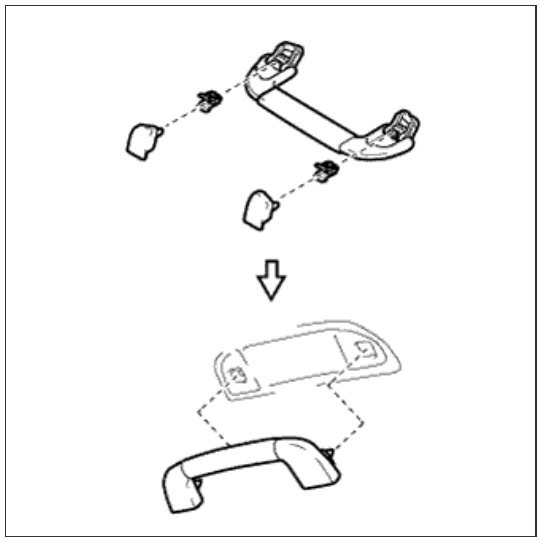

a. Assemble the assist rip 2 clips and 2 covers as shown in the illustration.


b. Install the assist rip.

40. INSTALL NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat except ace to ace Seat pe or w/o Rear No. 2 Seat:
Install the No. 2 assist rip assembl .

i. Assemble the assist rip 2 clips and 2 covers as shown in the illustration.


ii. Install the assist rip.

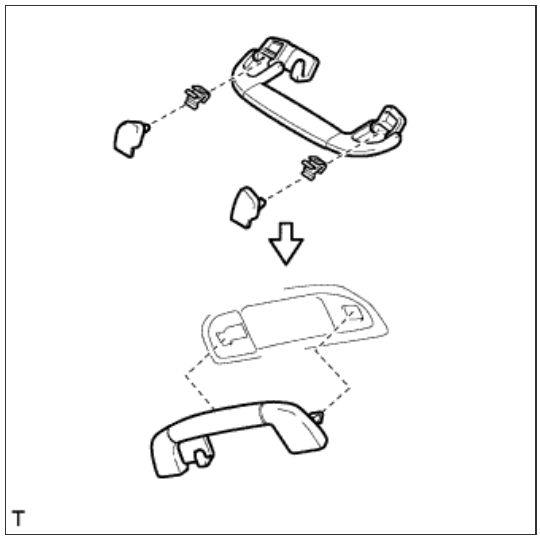

. w/ Rear No. 2 Seat for ace to ace Seat pe:
Install the No. 2 assist rip assembl .

i. Assemble the assist rip 2 clips and 2 covers as shown in the illustration.

ii. Install the assist rip.

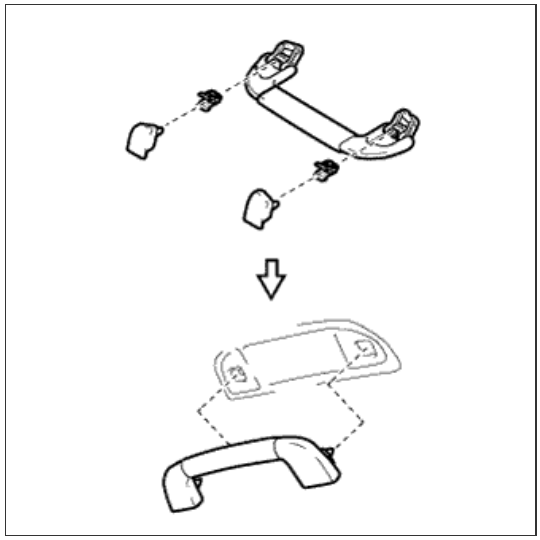

41. INSTALL NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


42. INSTALL ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to install the assist rip on the other side.


a. Assemble the assist rip 2 clips and 2 covers as shown in the illustration.

b. Install the assist rip.

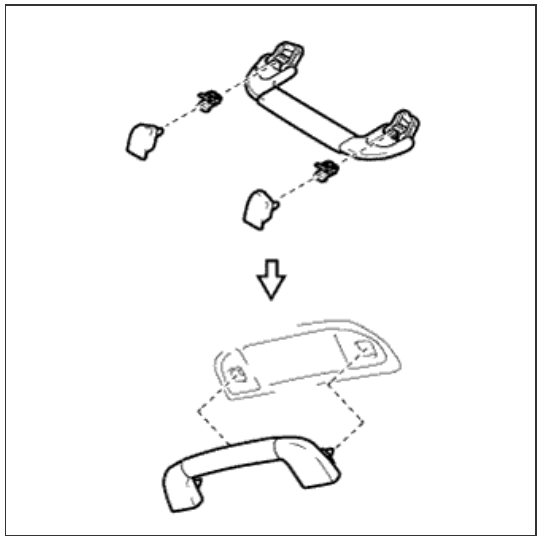


43. INSTALL SEAT BELT ANCHOR COVER (for 3 Person Seat Type Rear No. 2 Seat)

a. Attach the 4 guides and 4 clips to install the seat belt anchor cover.

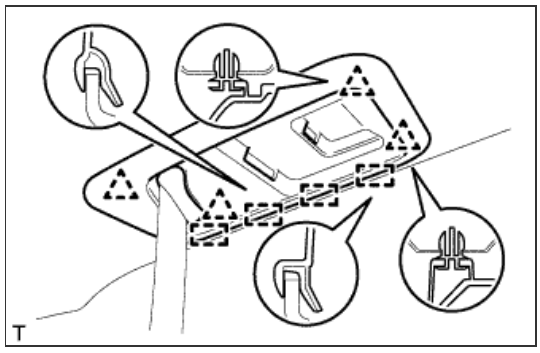

44. INSTALL RAIN SENSOR COVER (w/ Rain Sensor)


a. Push in the stopper in the direction of the arrow labeled (1) to install the rain sensor cover.

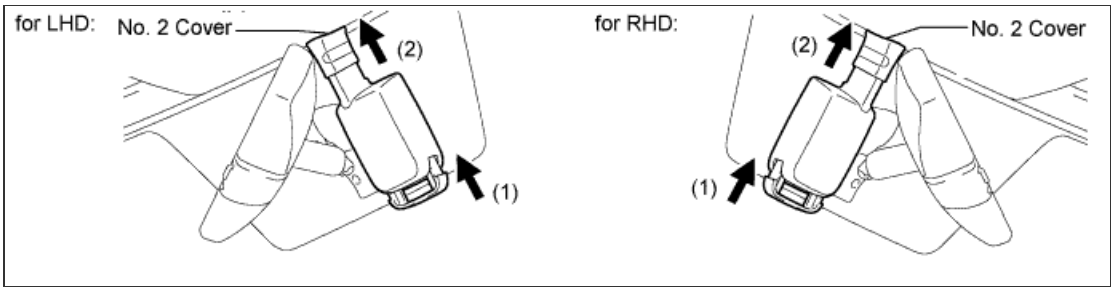

b. Slide the No. 2 cover in the direction of the arrow labeled (2) to fix it in place.


45. INSTALL INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Attach the 2 claws to install the cover.

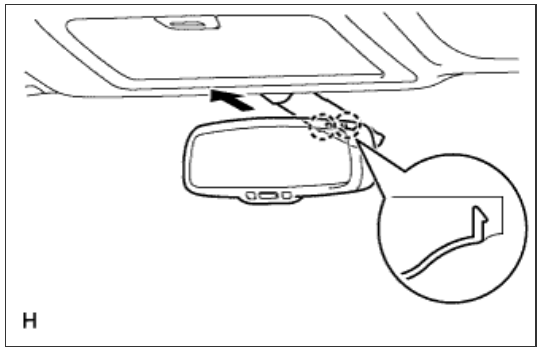

46. INSTALL CENTER VISOR ASSEMBLY LH (w/ Sub Visor)

a. Attach the 2 clips to install the center visor.

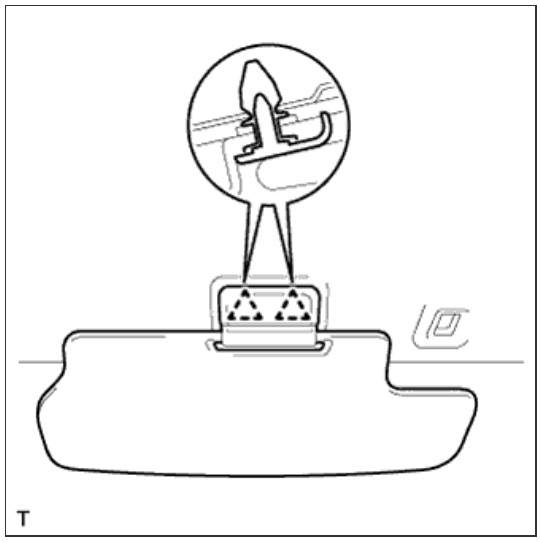

47. INSTALL CENTER VISOR ASSEMBLY RH (w/ Sub Visor)

HINT:

Use the same procedures described for the LH side.


48. INSTALL VISOR HOLDER

HINT:

Use the same procedures to install the visor holder on the other side.


a. Attach the 2 claws.

b. Push the visor holder in to install it.

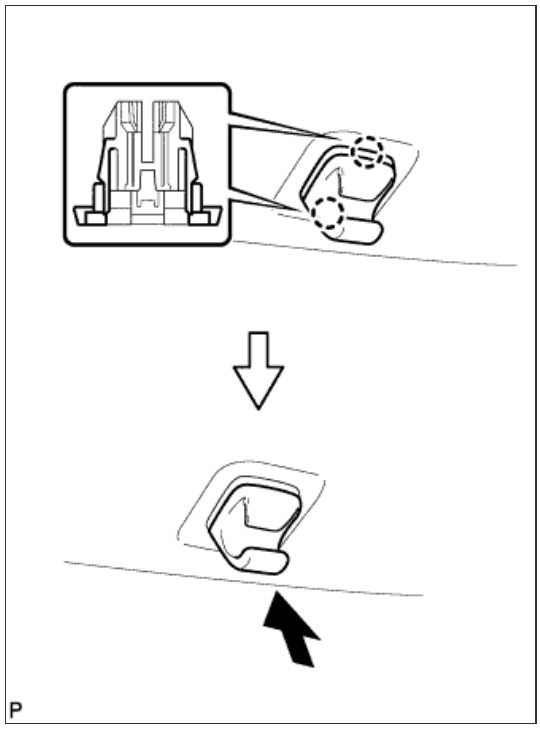

49. INSTALL VISOR ASSEMBLY LH

a. Install the visor with the 2 screws.

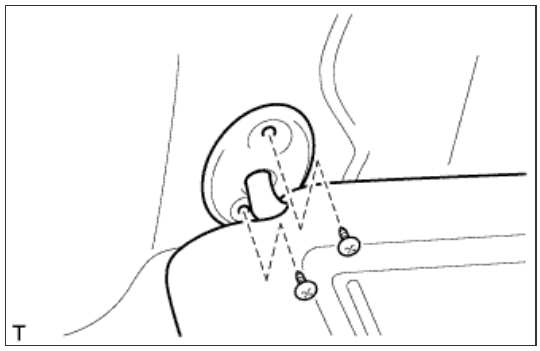

50. INSTALL VISOR ASSEMBLY RH

HINT:


Use the same procedures described for the LH side.

51. INSTALL VISOR BRACKET COVER

HINT:


Use the same procedure to install the visor bracket cover on the other side.

a. Attach the 4 claws to install the visor bracket cover.

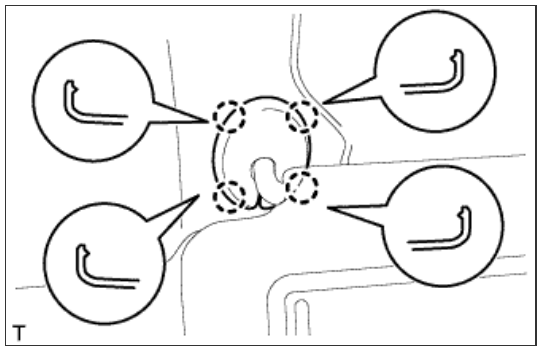


52. INSTALL NO. 2 ROOM LIGHT ASSEMBLY


a. Install the 2 covers.

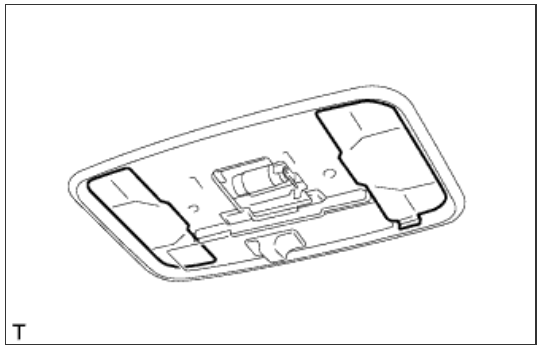


b. Attach the 4 claws to install the room li ht lens.

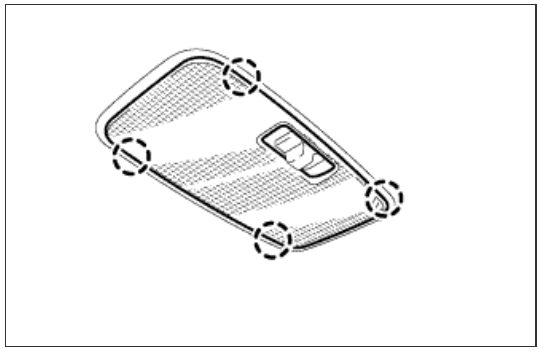

c. Attach the 4 claws to install the room li ht to the room li ht switch base.

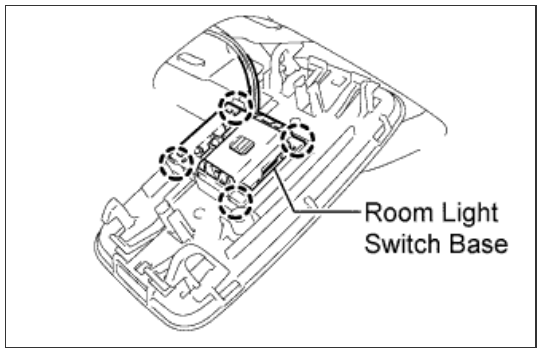


d. Attach the 4 claws to install the room li ht.

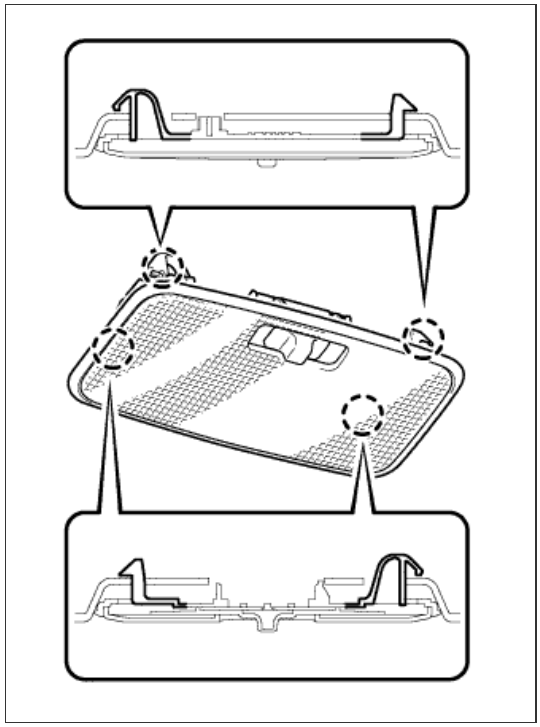

53. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

a. Connect the connector.

b. Attach the 4 clips to install the room li ht.

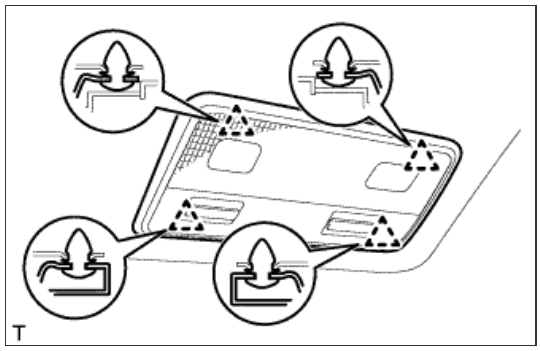


54. INSTALL MAP LIGHT ASSEMBLY

a. Connect the connector.

b. Attach the 2 clips and 2 uides to install the map li ht.


c. Install the 2 screws.

d. Attach the 2 claws to close the 2 covers.

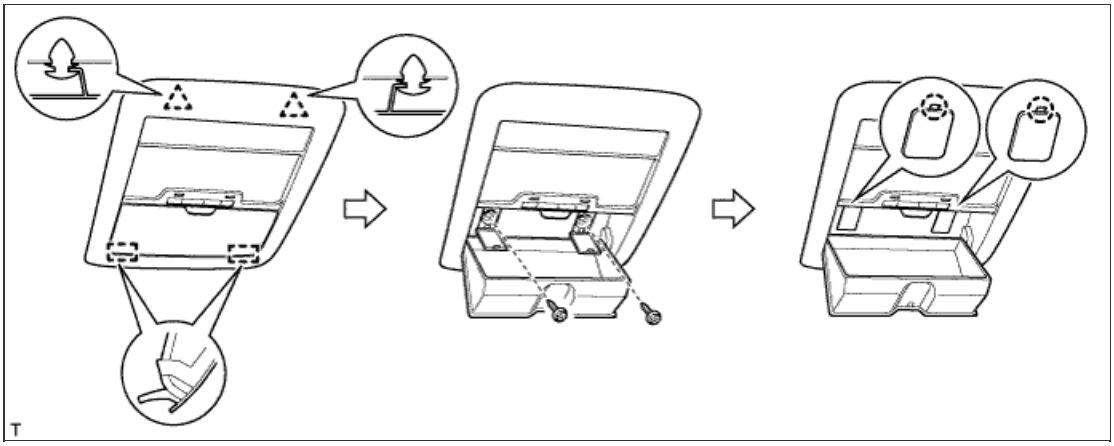


55. INSTALL REAR UPPER PILLAR GARNISH LH

a. Attach the 5 clips to install the rear upper pillar arnish.

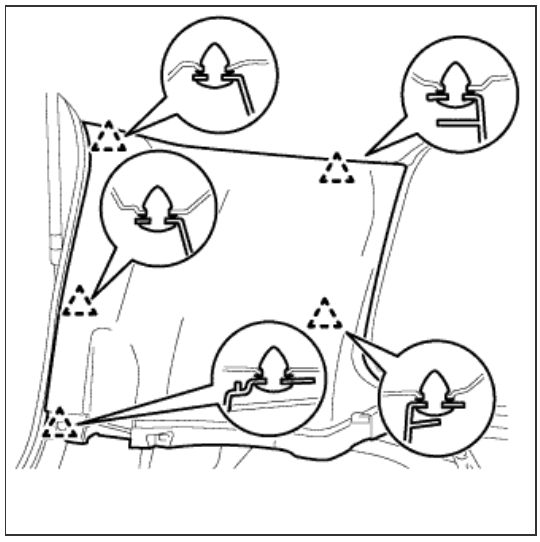


b. w/ Rear No. 2 Seat except ace to ace Seat pe:

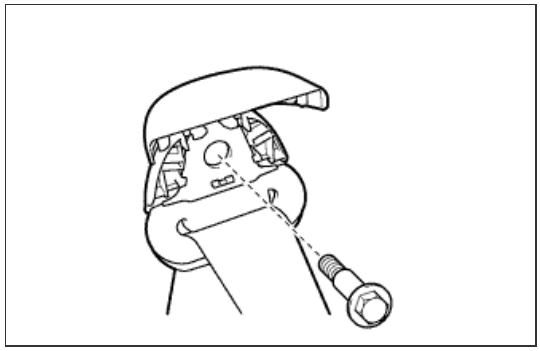

i. Install the seat belt shoulder anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

ii. Attach the 2 claws to close the seat belt shoulder anchor cover.

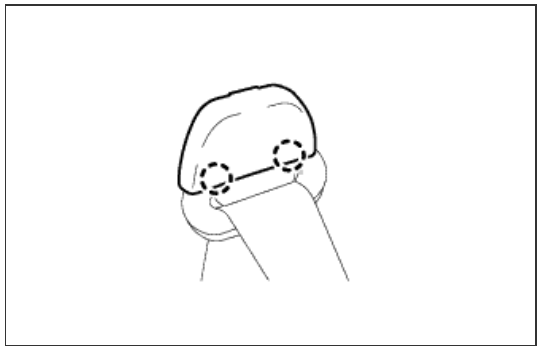

56. INSTALL REAR UPPER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

57. INSTALL REAR FRONT QUARTER TRIM GARNISH LH

a. Pass the seat belt anchor throu h the quarter trim arnish.

b. Attach the clip and 2 uides to install the quarter trim arnish.

c. Install the screw.

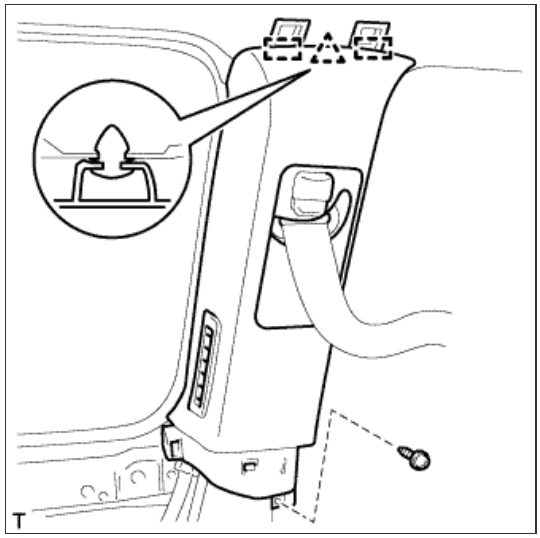

58. INSTALL REAR FRONT QUARTER TRIM GARNISH RH


HINT:

Use the same procedures described for the LH side.

59. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

hen installin the front quarter trim panel operate the reclinin adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

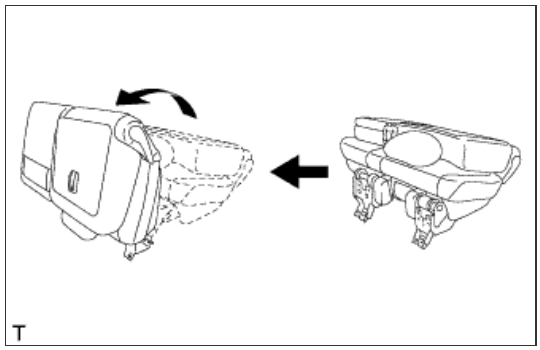

a. w/ Rear No. 2 Seat except ace to ace Seat pe:


i. w/o Rear Air Conditionin S stem:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditionin S stem:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

i . Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

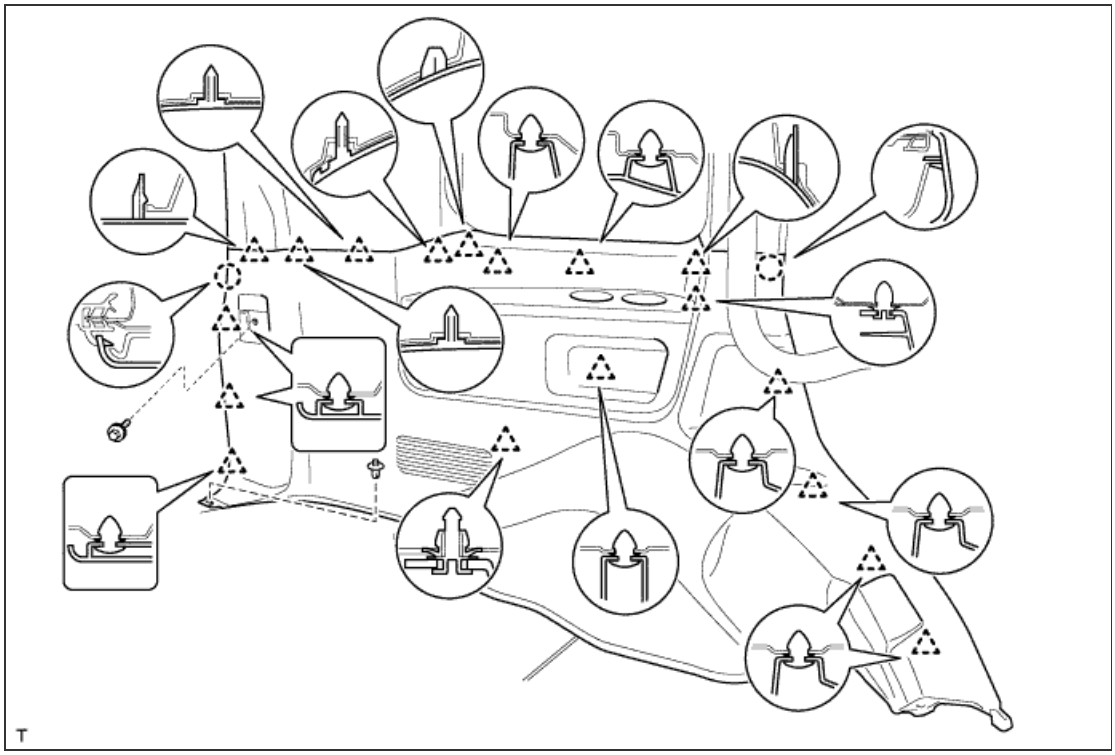

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat for ace to ace Seat pe:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the clip.

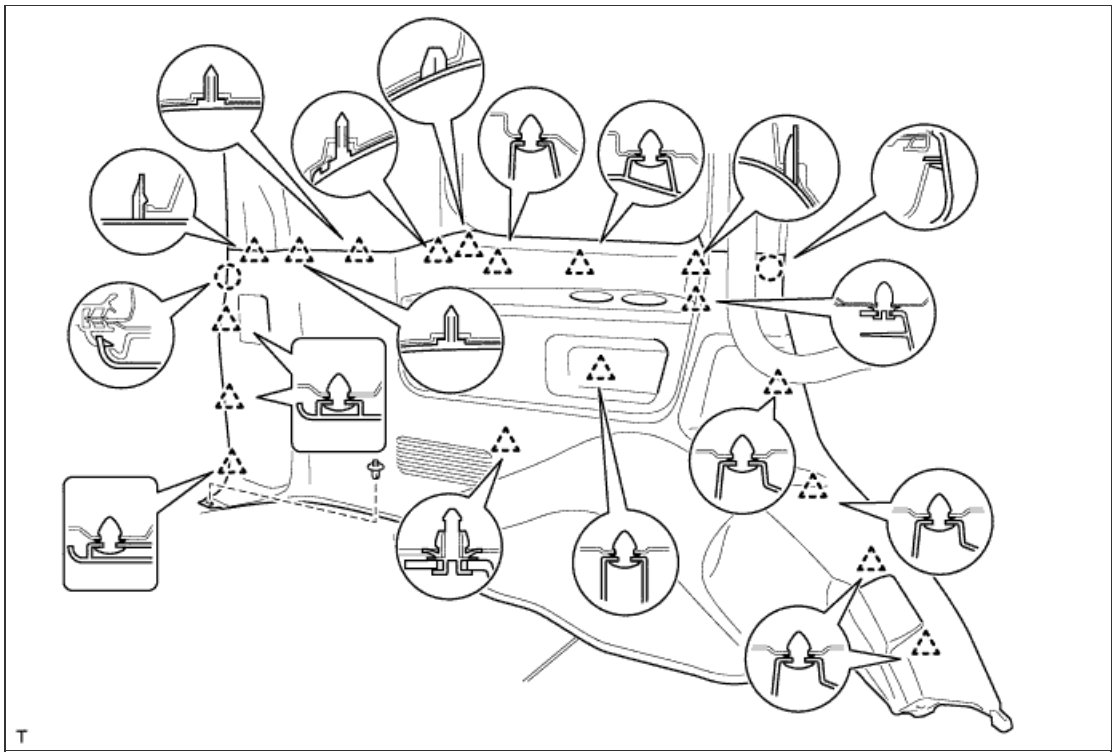


c. w/ Rear No. 2 Seat except ace to ace Seat pe:
Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }


NOTICE:

Do not overlap the anchor part of the seat belt and protrudin parts of the vehicle bod .

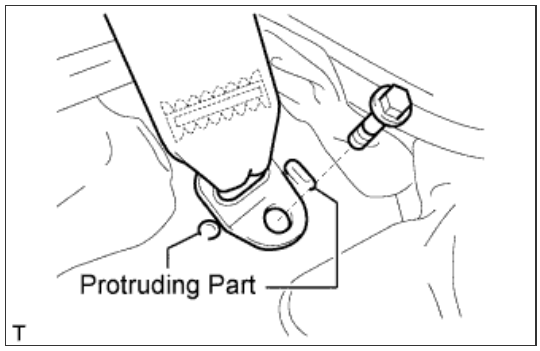


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

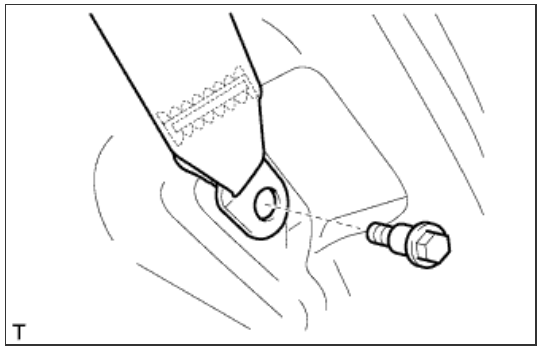


e. Attach the 3 claws to install the cover.

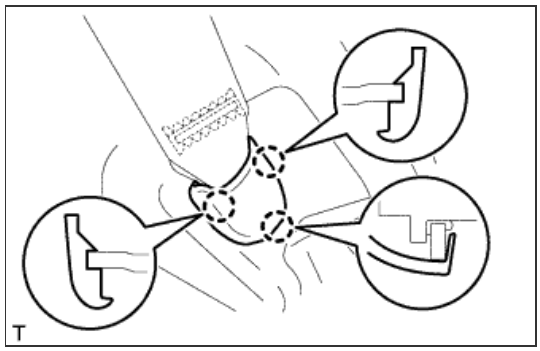

60. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:

hen installin the front quarter trim panel operate the reclinin adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

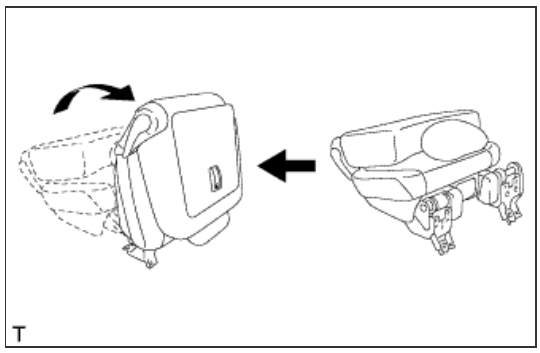

a. w/ Rear No. 2 Seat except ace to ace Seat pe:


i. w/o Rear Air Conditionin S stem:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditionin S stem:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 16 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

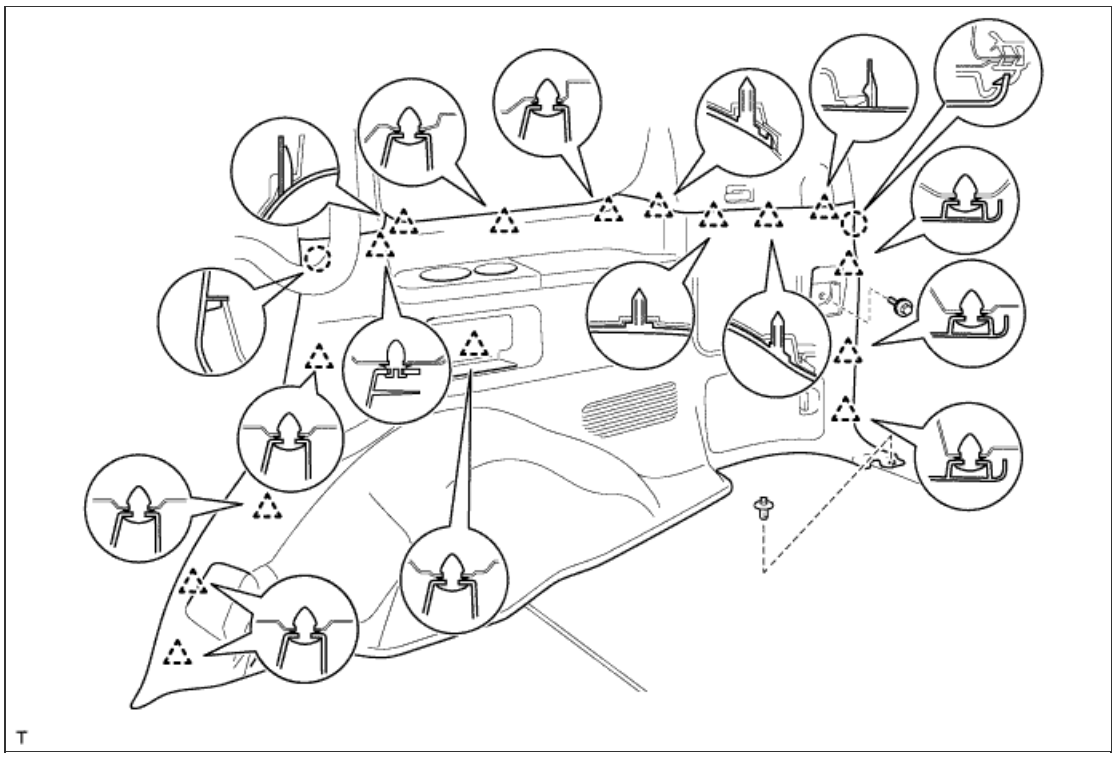

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat for ace to ace Seat pe:

i. Attach the 16 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

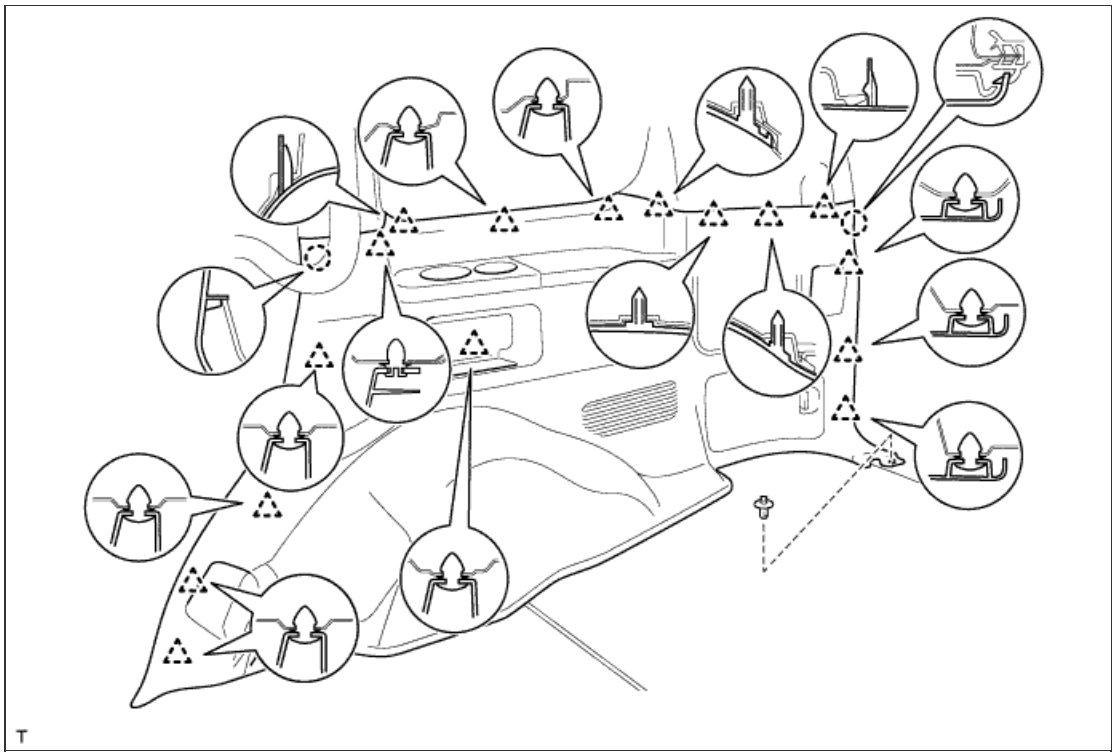


c. w/ Rear No. 2 Seat except ace to ace Seat pe:

i. Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

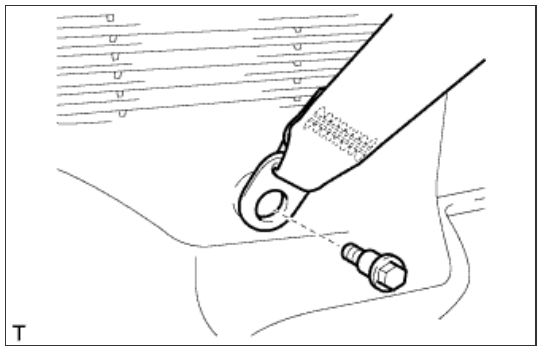


ii. Attach the 3 claws to install the cover.

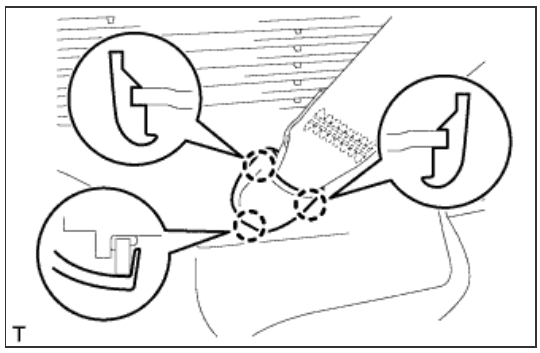


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

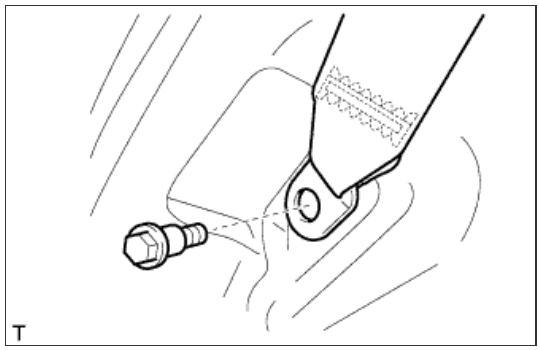

e. Attach the 3 claws to install the cover.

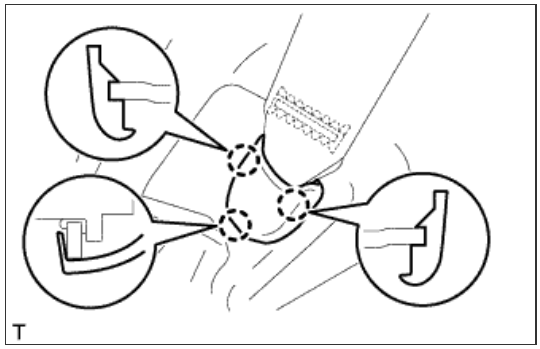


61. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

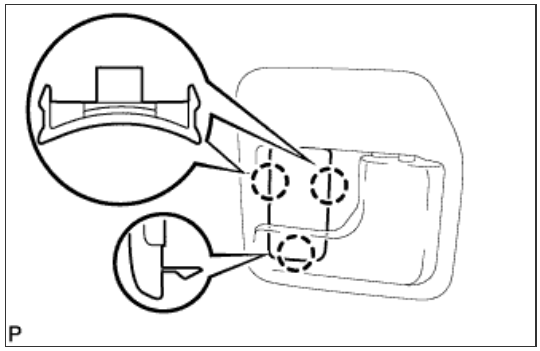


62. INSTALL CENTER PILLAR GARNISH LH

a. Pass the seat belt anchor throu h the center pillar arnish.

b. Attach the 2 clips and 2 uides to install the center pillar arnish.

c. Install the bolt.

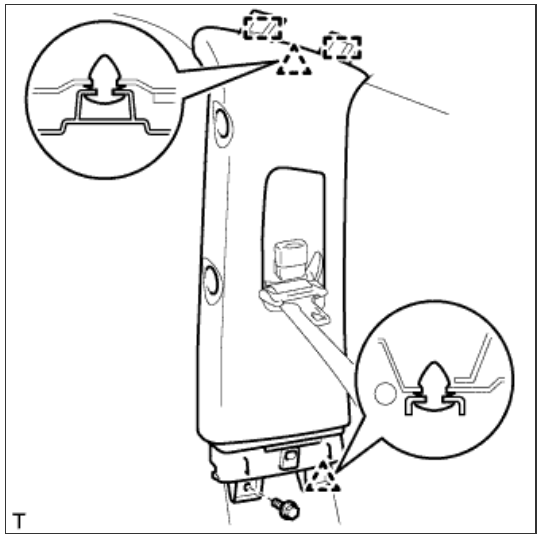

63. INSTALL CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.


64. INSTALL REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to install the rear assist rip on the other side.

a. Attach the 2 claws to install the rear assist rip.

b. Install the 2 bolts.

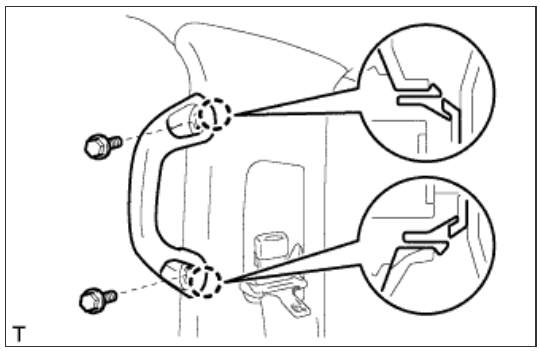

c. Attach the 4 claws to install the 2 assist rip plu s.

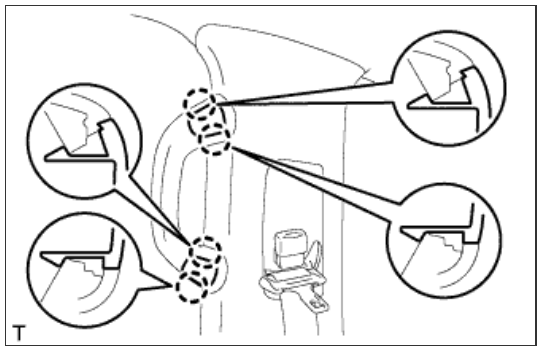


65. INSTALL CENTER LOWER PILLAR GARNISH LH

HINT:


- **for Manual Seat:**
  When installing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When installing the center lower pillar garnish, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Attach the 2 claws and 7 clips to install the center lower pillar arnish.

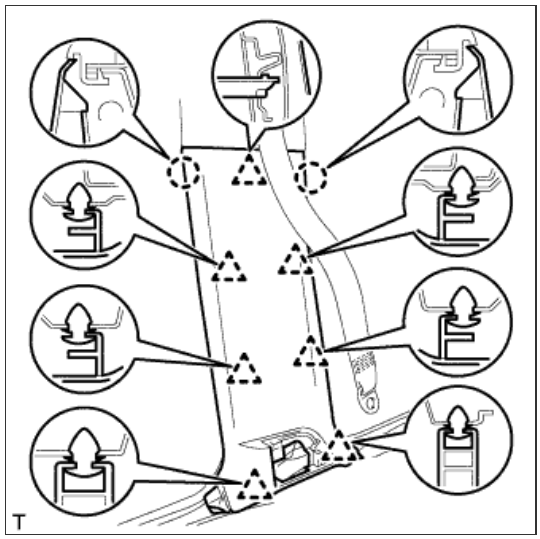

. Install the seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

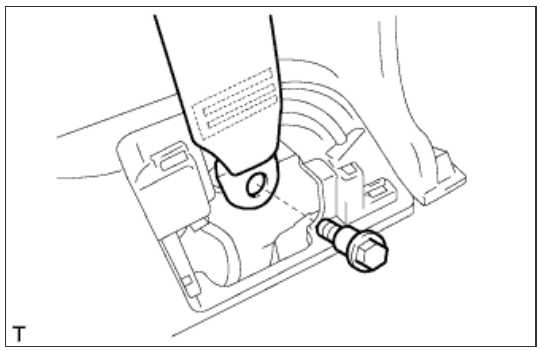

66. INSTALL CENTER LOWER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

67. INSTALL CENTER PILLAR GARNISH COVER LH

HINT:

- **for Manual Seat:**
  When installing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When installing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Attach the 2 clips and 2 guides to install the cover.

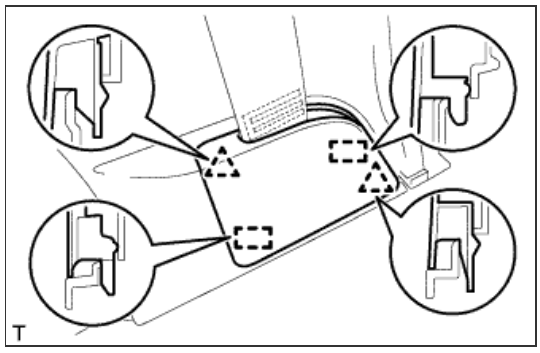

68. INSTALL CENTER PILLAR GARNISH COVER RH


HINT:

Use the same procedures described for the LH side.

69. INSTALL FRONT PILLAR GARNISH LH

a. for 9 14 Speakers:
Connect the speaker connector.

b. Attach the clip and 3 guides to install the front pillar garnish.

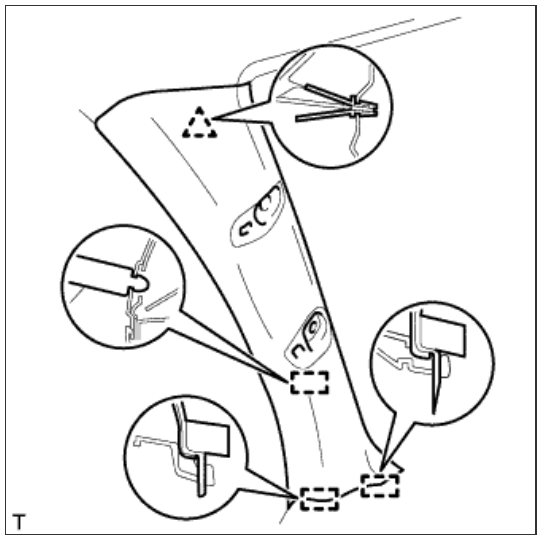

70. INSTALL FRONT PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

71. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY


HINT:

Use the same procedure to install the front assist rip on the other side.

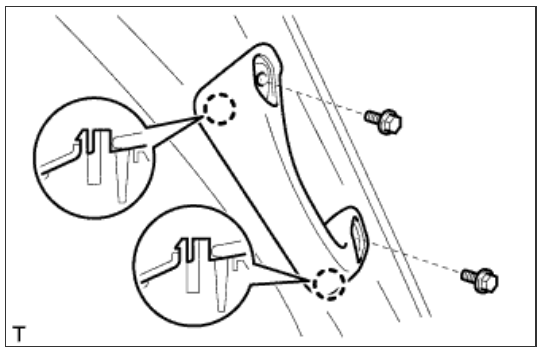

a. Attach the 2 claws to install the front assist rip.


b. Install the 2 bolts.

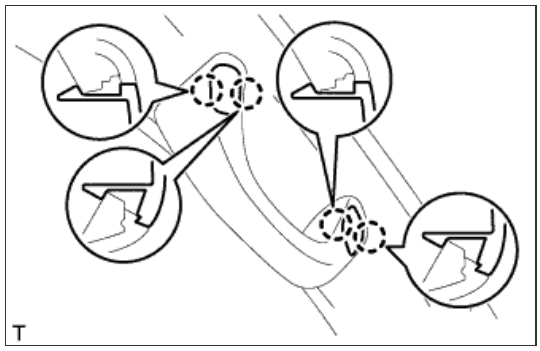

c. Attach the 4 claws to install the 2 assist rip plu s.

72. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE


a. Attach the 6 clips to install the support plate.

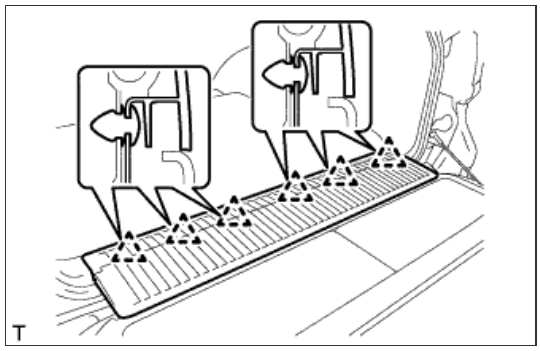

73. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

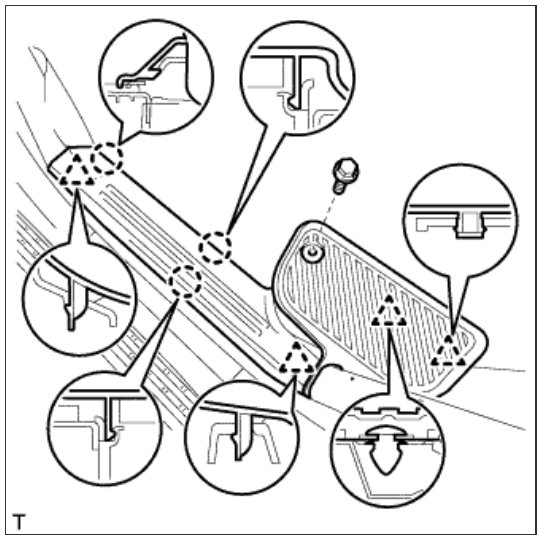

74. INSTALL REAR DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

75. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

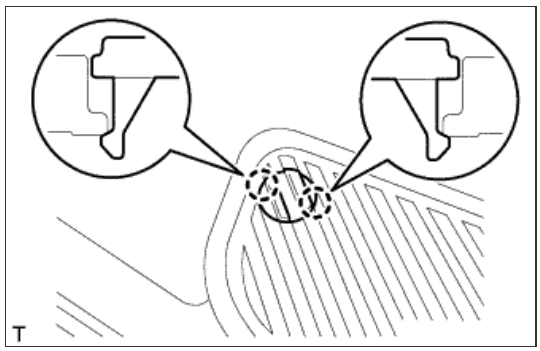

76. INSTALL FRONT DOOR SCUFF PLATE LH

a. Attach the 7 claws and 4 clips to install the scuff plate.

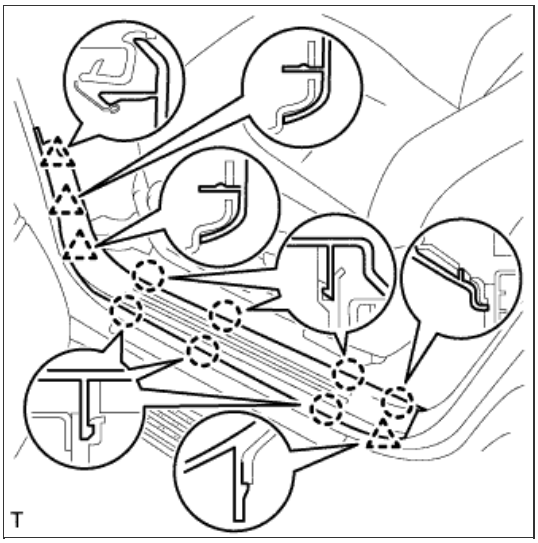

77. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

78. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

79. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

80. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

81. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

82. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

hen disconnectin the cable some s stems need to be initialized after the cable is reconnected (Click here).


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL SIDE TRIM BOX

a. Install the side trim box with the 9 screws.

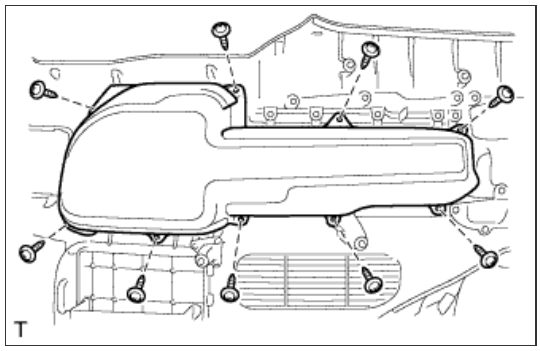

2. INSTALL SIDE TRIM BOX COVER


a. Install the side trim box cover.

3. INSTALL QUARTER TRIM LID SUB-ASSEMBLY RH

a. Install the quarter trim lid.

4. INSTALL QUARTER TRIM COVER LH (w/o Rear No. 2 Seat, w/ Rear No. 2 Seat for Face to Face Seat Type)

a. Attach the 6 clips to install the quarter trim cover.

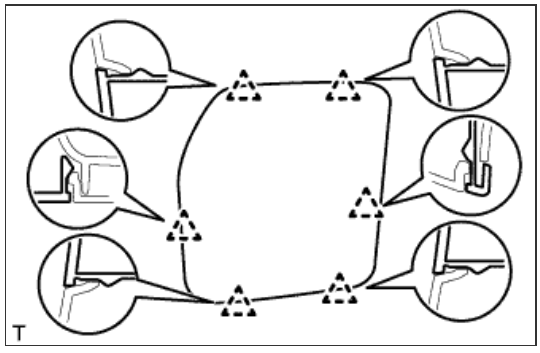


5. INSTALL QUARTER TRIM COVER RH (w/o Rear No. 2 Seat, w/ Rear No. 2 Seat for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

6. INSTALL REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 6 clips to install the rear No. 2 seat cover bezel.

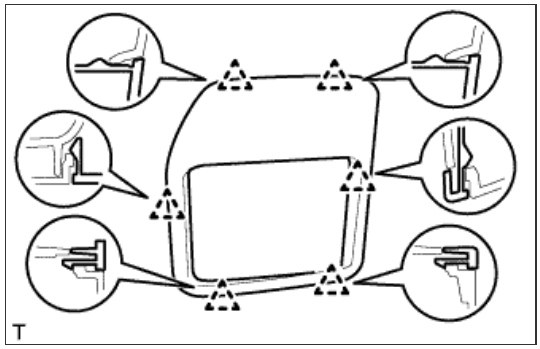

7. INSTALL REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

8. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 4 claws to install the seat lock control lever.


9. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

10. INSTALL NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

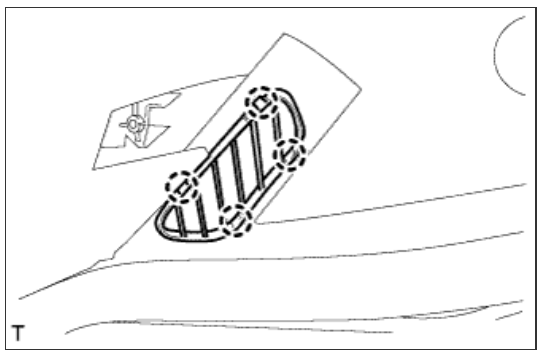


11. INSTALL NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.


12. INSTALL NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

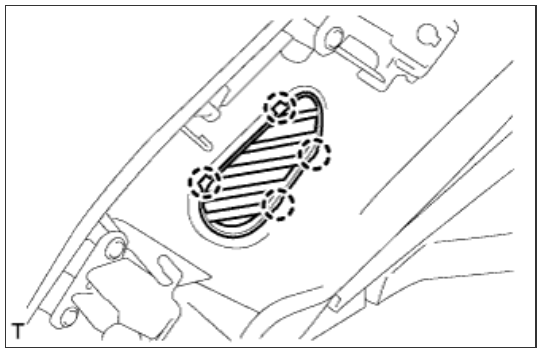


13. INSTALL NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

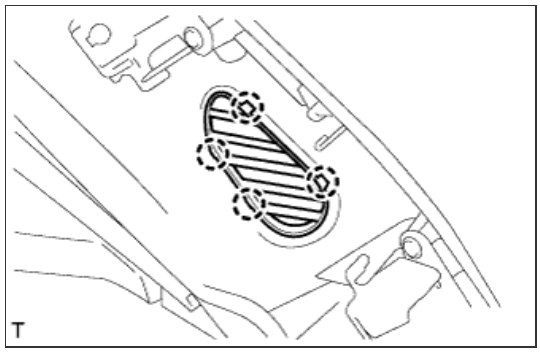


b. Install the duct with the 6 screws.

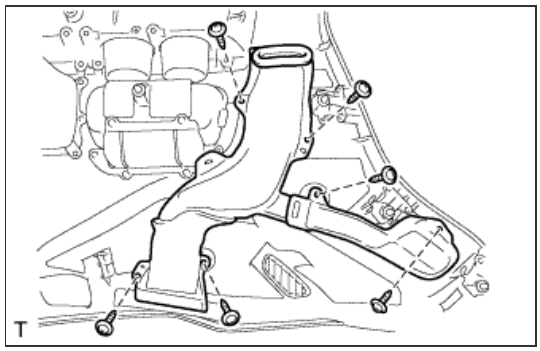

14. INSTALL NO. 2 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


b. Install the 5 screws.

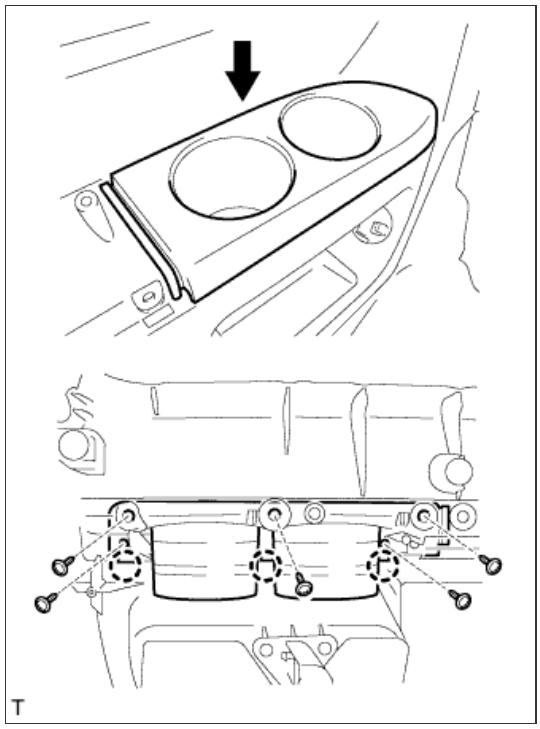

15. INSTALL NO. 1 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


b. Install the 5 screws.

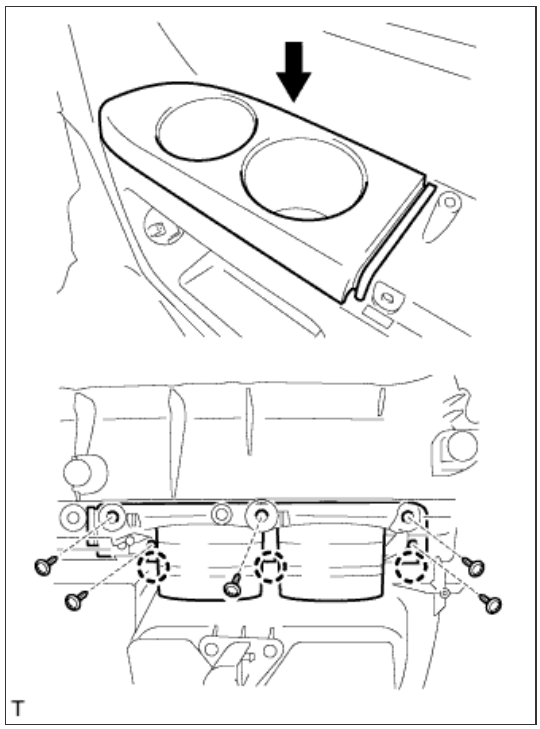


16. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

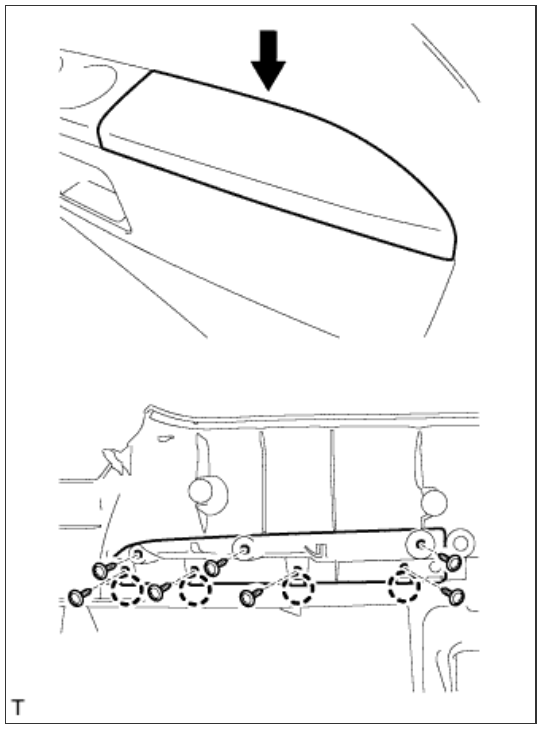


c. w/ Rear Heater:
Install the duct with the 8 screws.

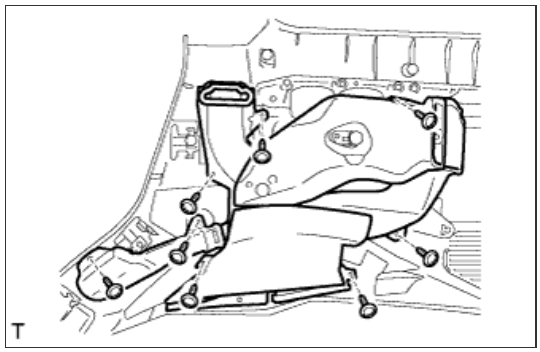

17. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY RH


a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

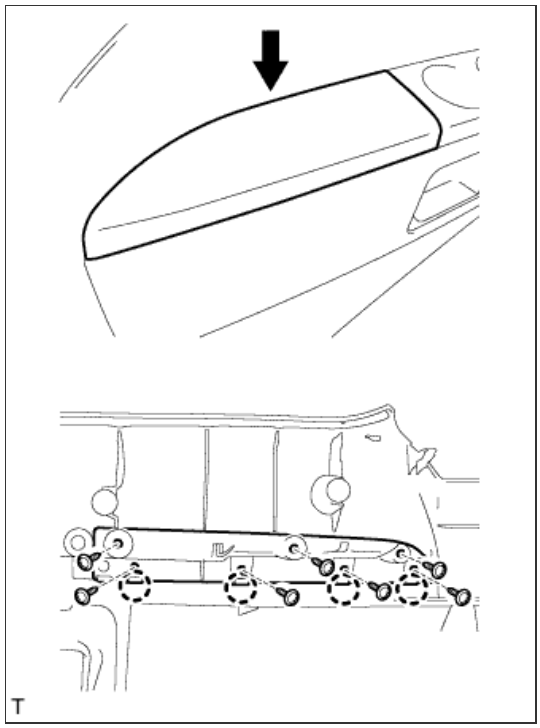

18. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Install the han er with 2 new sprin nuts.

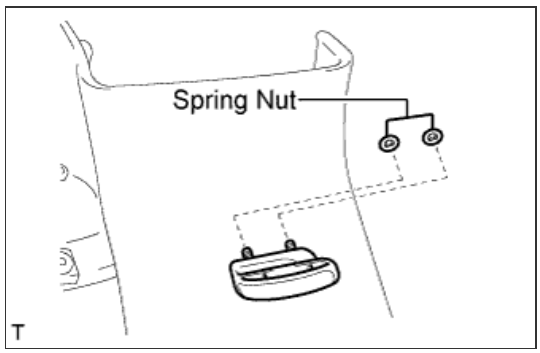

19. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:


Use the same procedures described for the LH side.

20. INSTALL REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to install the han er on the other side.

a. Install the han er with 2 new sprin nuts.

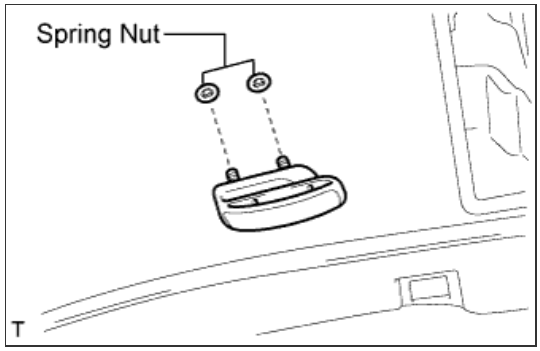

21. INSTALL ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 7 claws to install the cover.

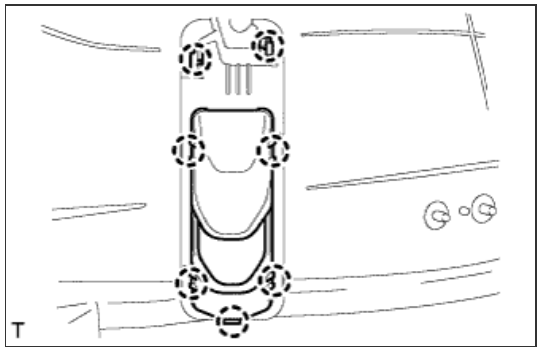


22. INSTALL ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

23. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Attach the 6 claws to install the plate.

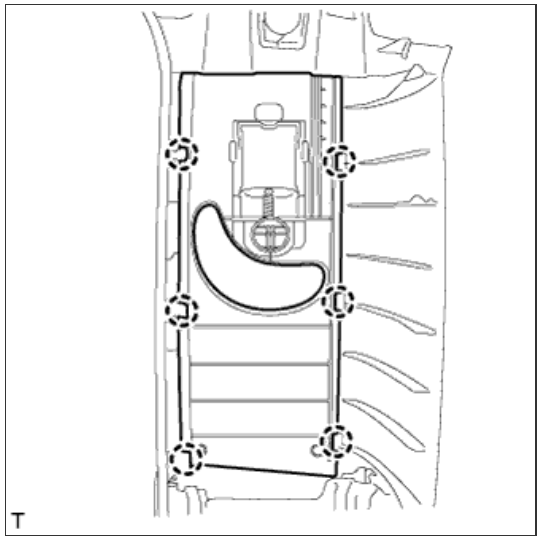


24. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

25. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Slide the plate in the direction shown in the illustration and attach the 6 claws to install the plate.

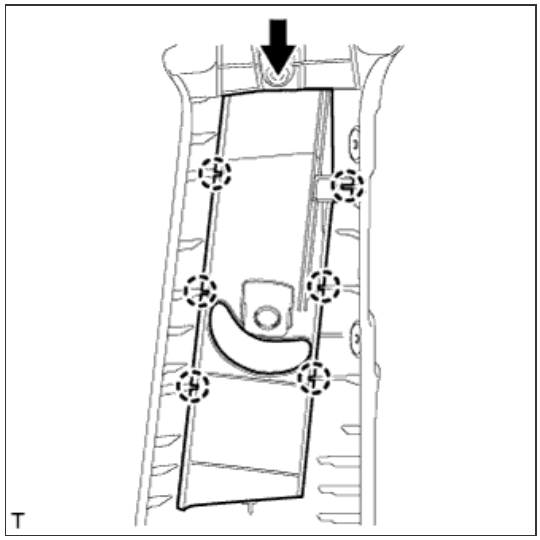


26. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

27. INSTALL REAR DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 3 clips to install the rear door scuff plate outside.

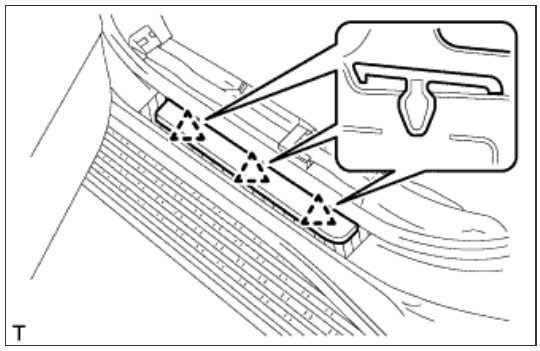


28. INSTALL REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

29. INSTALL FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 4 clips to install the front door scuff plate outside.

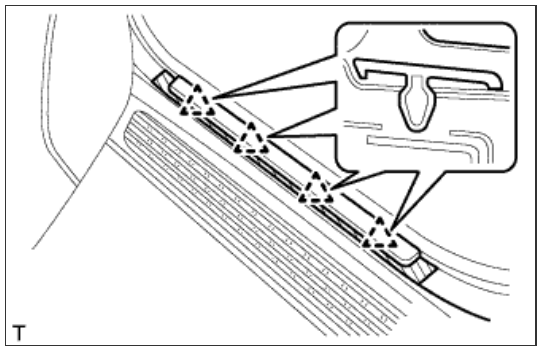


30. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.


31. INSTALL BACK DOOR WEATHERSTRIP

a. Install the back door weatherstrip as shown in the illustration.

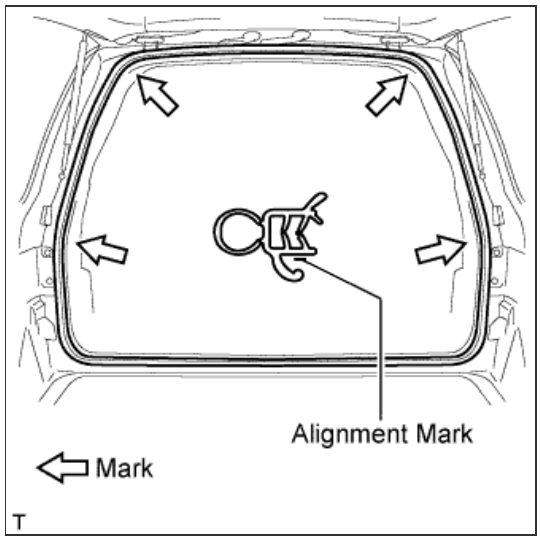

32. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH

a. Install the rear door openin trim weatherstrip as shown in the illustration.

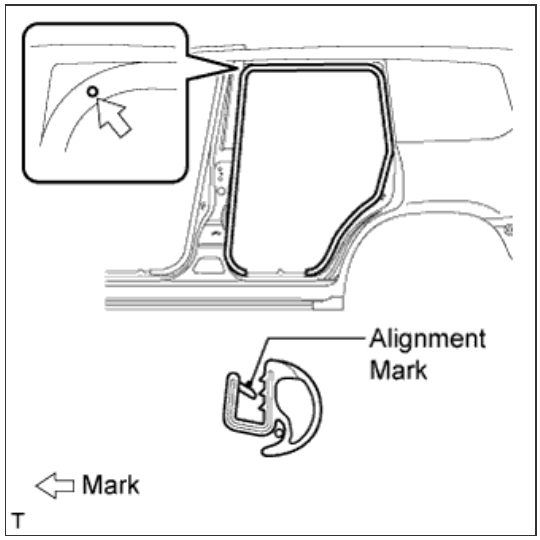


33. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

34. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

a. Install the front door openin trim weatherstrip as shown in the illustration.

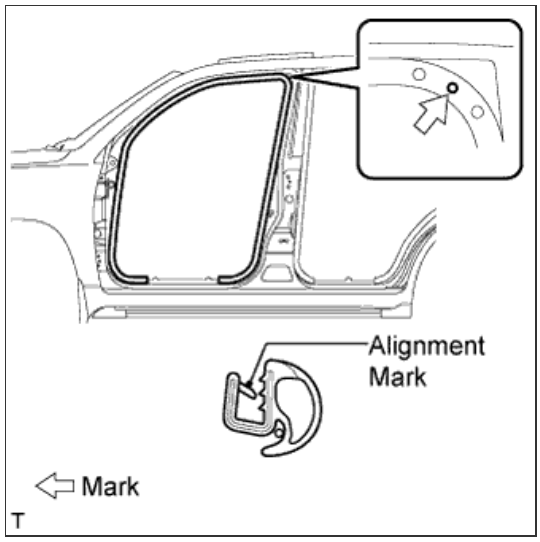

35. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.


36. INSTALL ROOF HEADLINING ASSEMBLY

HINT:

- **for Manual Seat:**

hen in talling the roof headlining, move the front seat and rear No. 1 seat to the position shown in the illustration.


- **for Power Seat:**
  When installing the roof headlining, connect the cable to the negative (-) battery terminal and move the front seat and No. 1 rear seat to the position shown in the illustration.
- **for Power Seat:**
  After moving the seats, disconnect the cable from the negative (-) battery terminal.

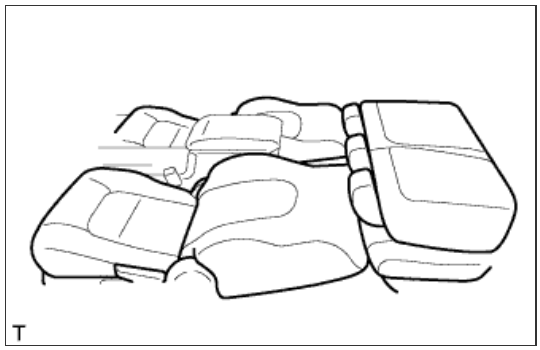


a. Place the headlinin in the cabin from the rear of the vehicle as shown in the illustration.

NOTICE:

Be careful not to dama e the roof headlinin when placin it in the cabin.

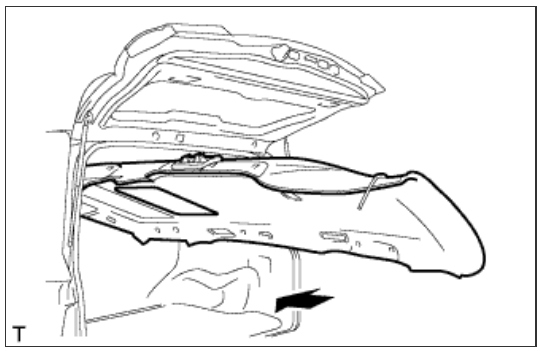


b. for 3 Person Seat pe Rear No. 2 Seat:
Attach the 12 claws 2 clips 2 uides and 16 fasteners to install the headlinin .

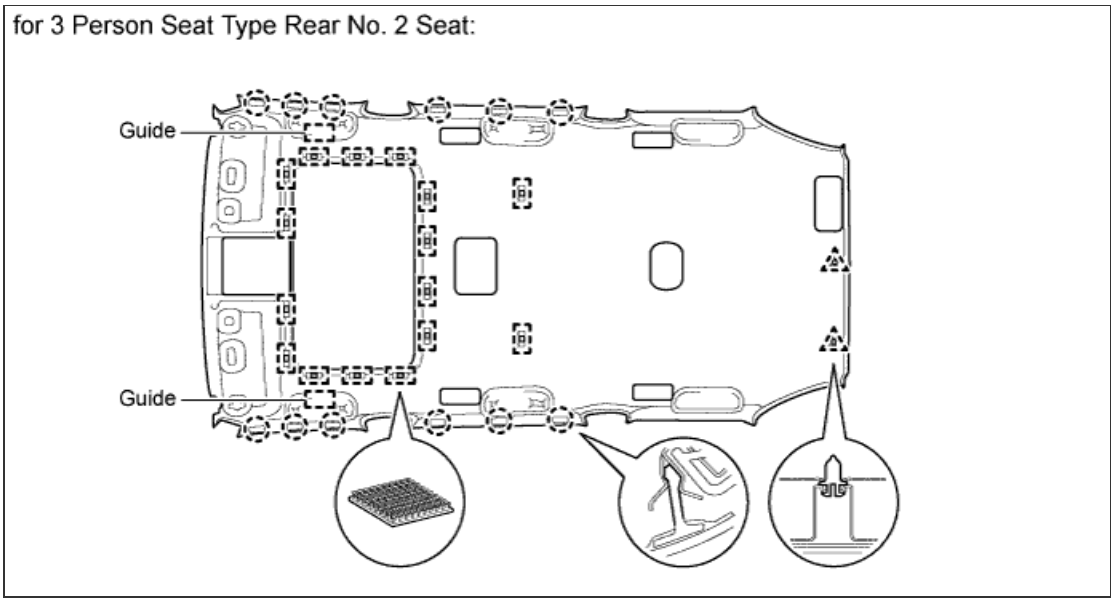


c. except 3 Person Seat pe Rear No. 2 Seat:
Attach the 12 claws 3 clips 2 uides and 16 fasteners to install the headlinin .


except 3 Person Seat Type Rear No. 2 Seat:

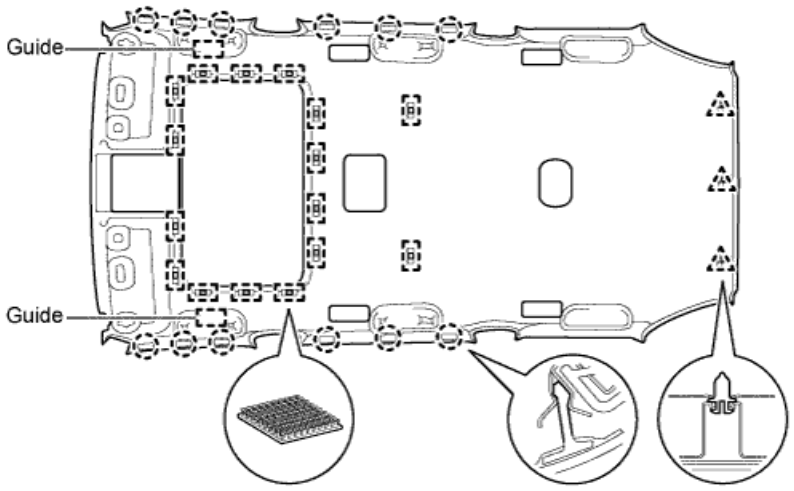

d. Connect the washer hose.

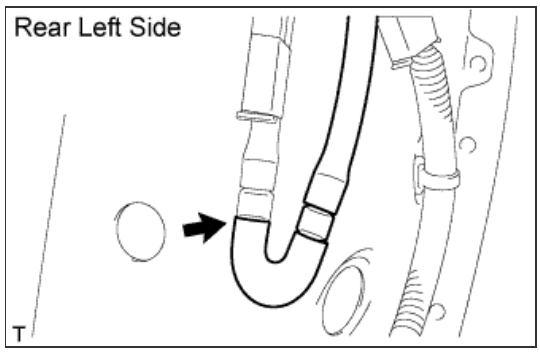


e. Connect the antenna cord connector.

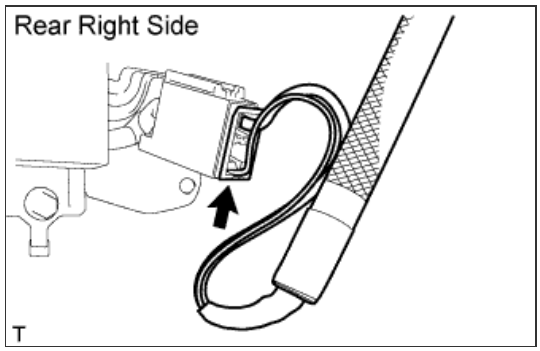


f. Connect the antenna cord connector and attach the 2 clamps.

g. Install the bolt.

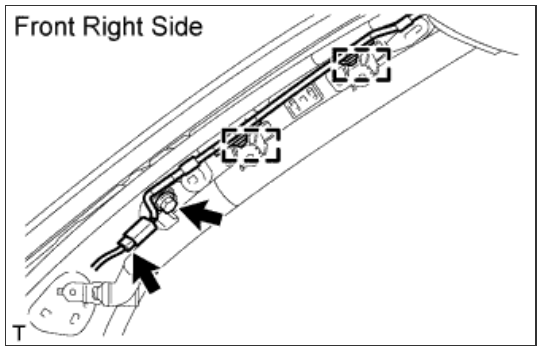


h. Connect the 3 roof wire connectors and washer hose.


i. Attach the 4 clamps.

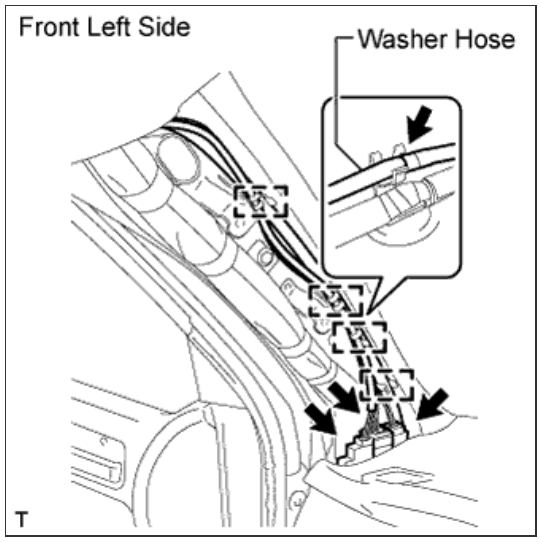


. Connect the drive ear connector.

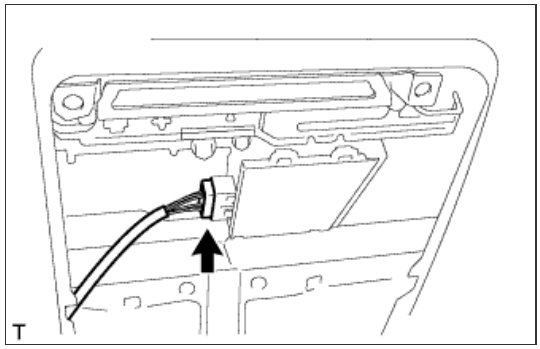

k. w/ Rain Sensor:
Disconnect the rain sensor connector.

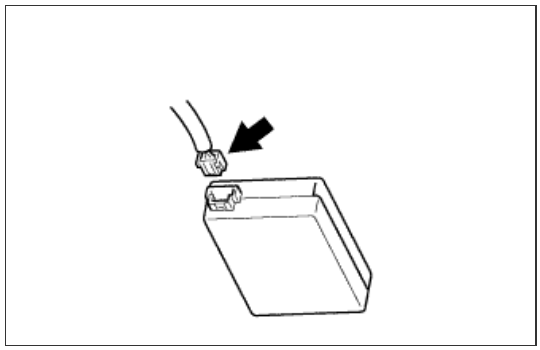


l. w/ C Mirror:
Connect the inner mirror connector.

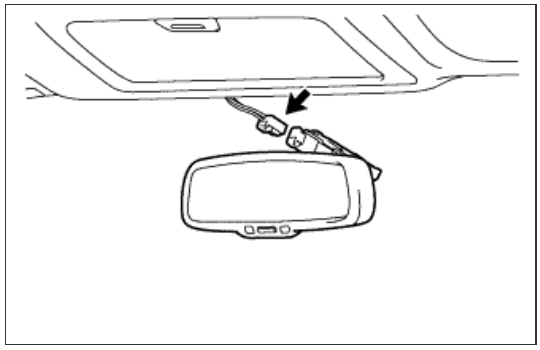

37. INSTALL FRONT ROOF SIDE RAIL GARNISH LH

a. Install 3 new clips to the roof side rail arnish.

b. Attach the 3 clips to install the roof side rail arnish.

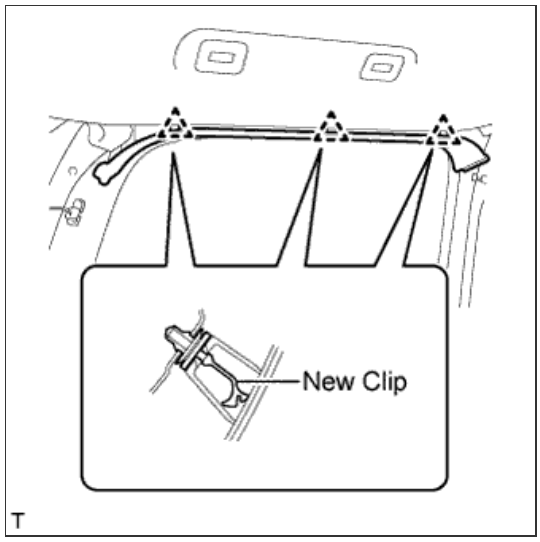

38. INSTALL FRONT ROOF SIDE RAIL GARNISH RH


HINT:

Use the same procedures described for the LH side.

39. INSTALL 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the 3rd seat assist rip on the other side.

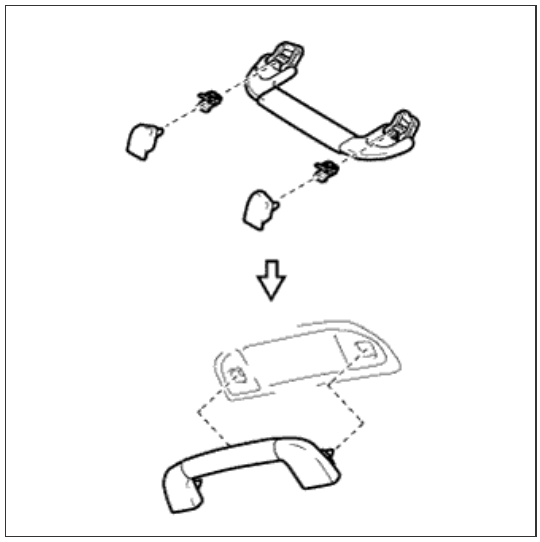

a. Assemble the assist rip 2 clips and 2 covers as shown in the illustration.


b. Install the assist rip.

40. INSTALL NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat except ace to ace Seat pe or w/o Rear No. 2 Seat:
Install the No. 2 assist rip assembl .

i. Assemble the assist rip 2 clips and 2 covers as shown in the illustration.


ii. Install the assist rip.

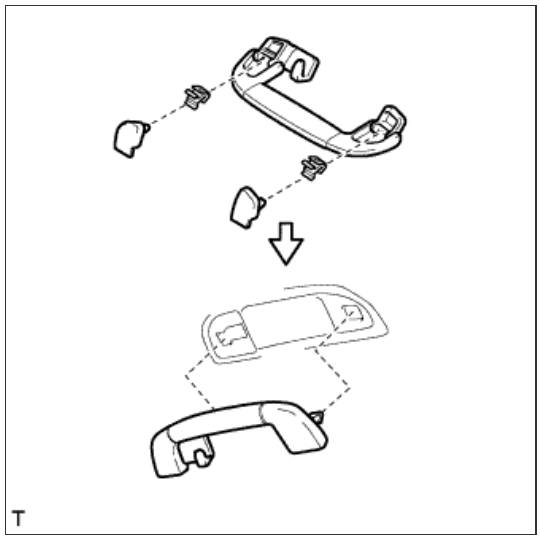

. w/ Rear No. 2 Seat for ace to ace Seat pe:
Install the No. 2 assist rip assembl .

i. Assemble the assist rip 2 clips and 2 covers as shown in the illustration.

ii. Install the assist rip.

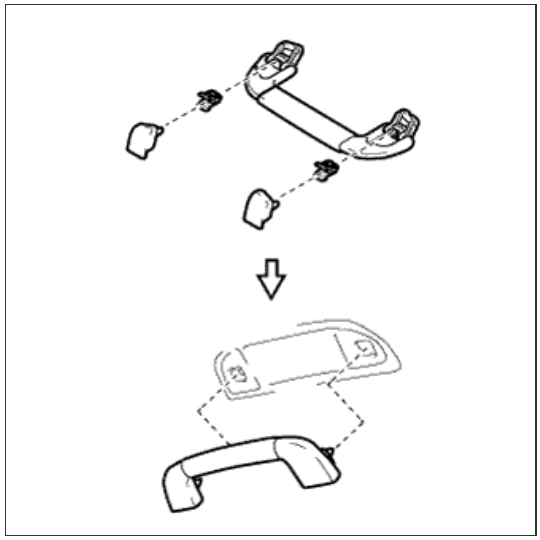

41. INSTALL NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


42. INSTALL ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to install the assist rip on the other side.


a. Assemble the assist rip 2 clips and 2 covers as shown in the illustration.

b. Install the assist rip.

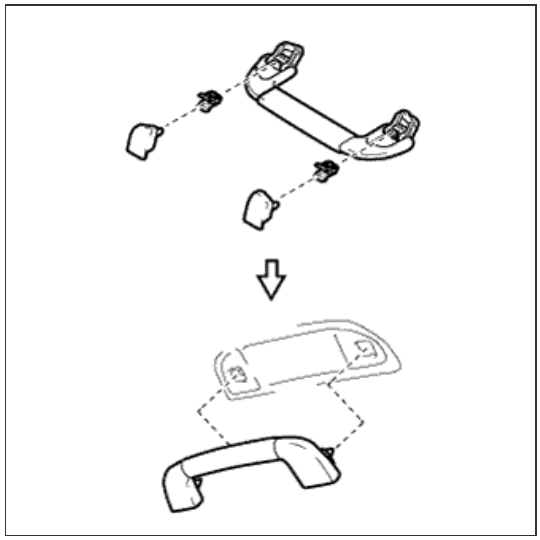


43. INSTALL SEAT BELT ANCHOR COVER (for 3 Person Seat Type Rear No. 2 Seat)

a. Attach the 4 guides and 4 clips to install the seat belt anchor cover.

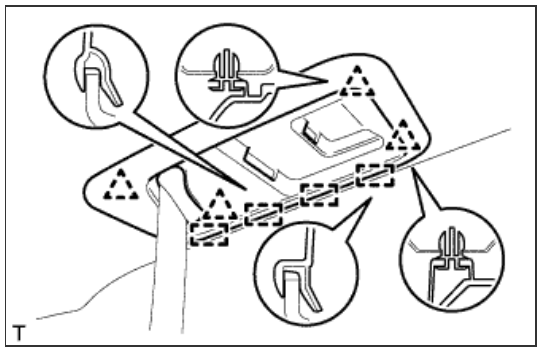

44. INSTALL RAIN SENSOR COVER (w/ Rain Sensor)


a. Push in the stopper in the direction of the arrow labeled (1) to install the rain sensor cover.

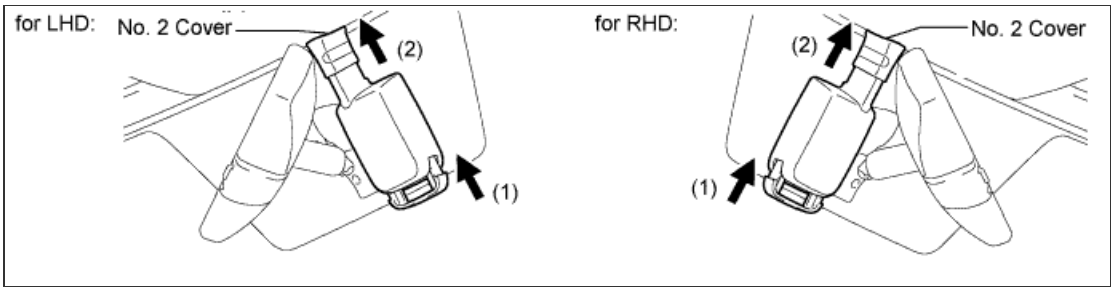

b. Slide the No. 2 cover in the direction of the arrow labeled (2) to fix it in place.


45. INSTALL INNER REAR VIEW MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Attach the 2 claws to install the cover.

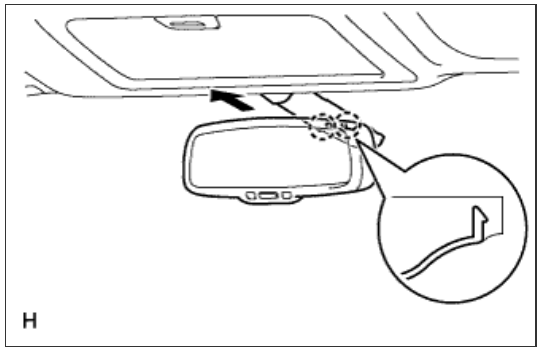

46. INSTALL CENTER VISOR ASSEMBLY LH (w/ Sub Visor)

a. Attach the 2 clips to install the center visor.

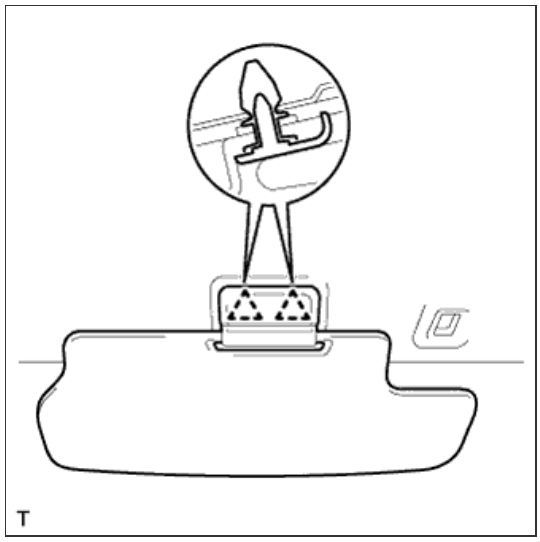

47. INSTALL CENTER VISOR ASSEMBLY RH (w/ Sub Visor)

HINT:

Use the same procedures described for the LH side.


48. INSTALL VISOR HOLDER

HINT:

Use the same procedures to install the visor holder on the other side.


a. Attach the 2 claws.

b. Push the visor holder in to install it.

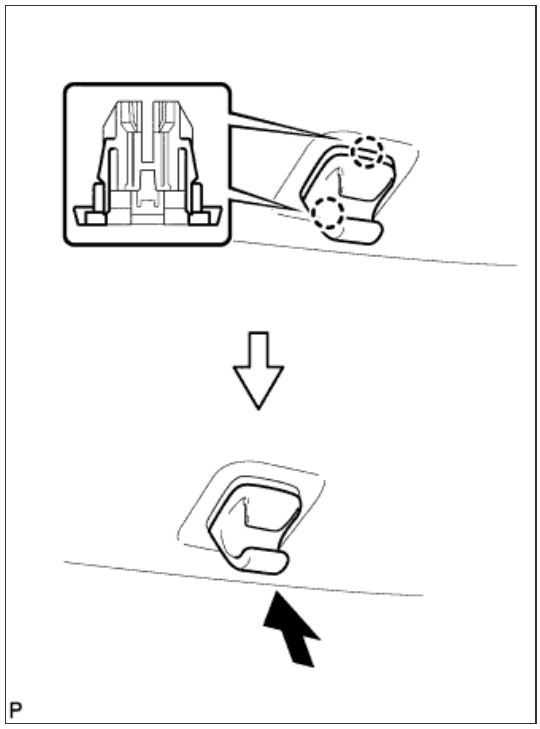

49. INSTALL VISOR ASSEMBLY LH

a. Install the visor with the 2 screws.

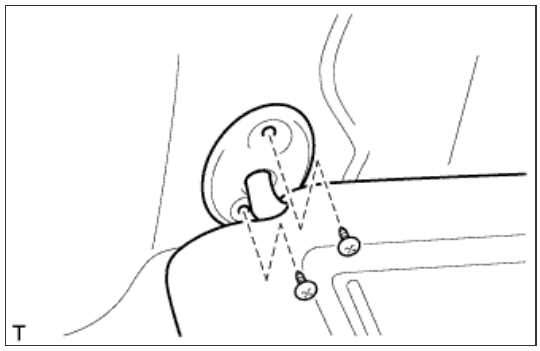

50. INSTALL VISOR ASSEMBLY RH

HINT:


Use the same procedures described for the LH side.

51. INSTALL VISOR BRACKET COVER

HINT:


Use the same procedure to install the visor bracket cover on the other side.

a. Attach the 4 claws to install the visor bracket cover.

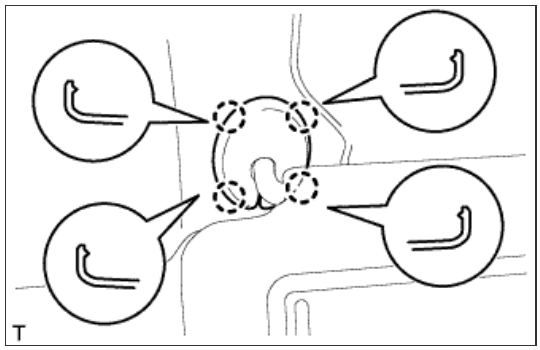


52. INSTALL NO. 2 ROOM LIGHT ASSEMBLY


a. Install the 2 covers.

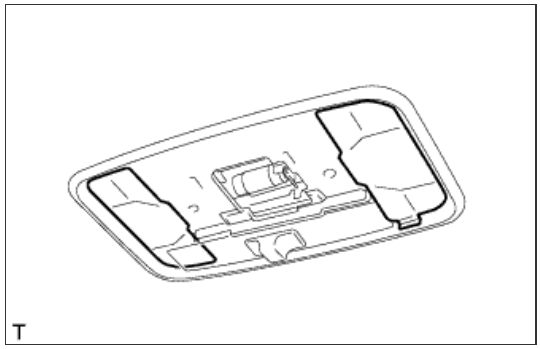


b. Attach the 4 claws to install the room li ht lens.

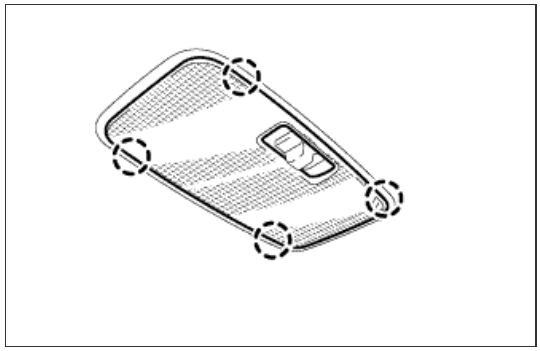

c. Attach the 4 claws to install the room li ht to the room li ht switch base.

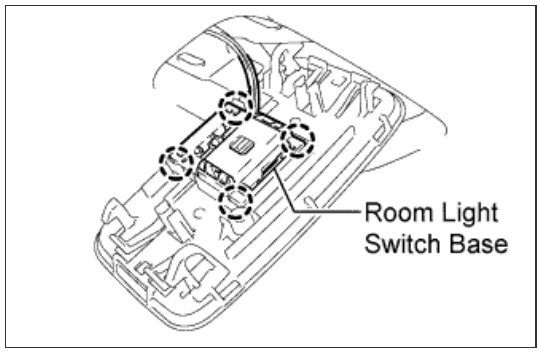


d. Attach the 4 claws to install the room li ht.

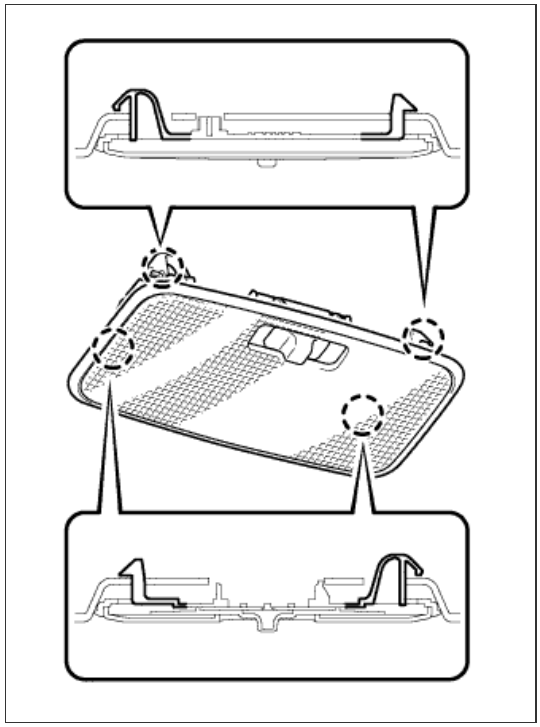

53. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

a. Connect the connector.

b. Attach the 4 clips to install the room li ht.

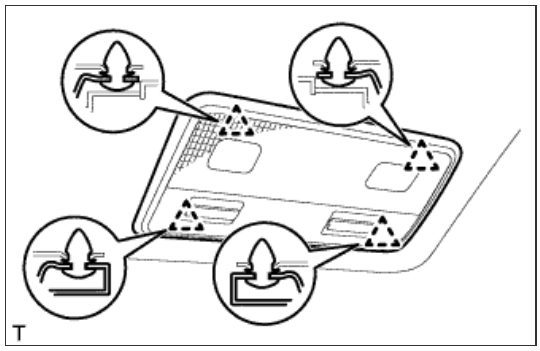


54. INSTALL MAP LIGHT ASSEMBLY

a. Connect the connector.

b. Attach the 2 clips and 2 uides to install the map li ht.


c. Install the 2 screws.

d. Attach the 2 claws to close the 2 covers.

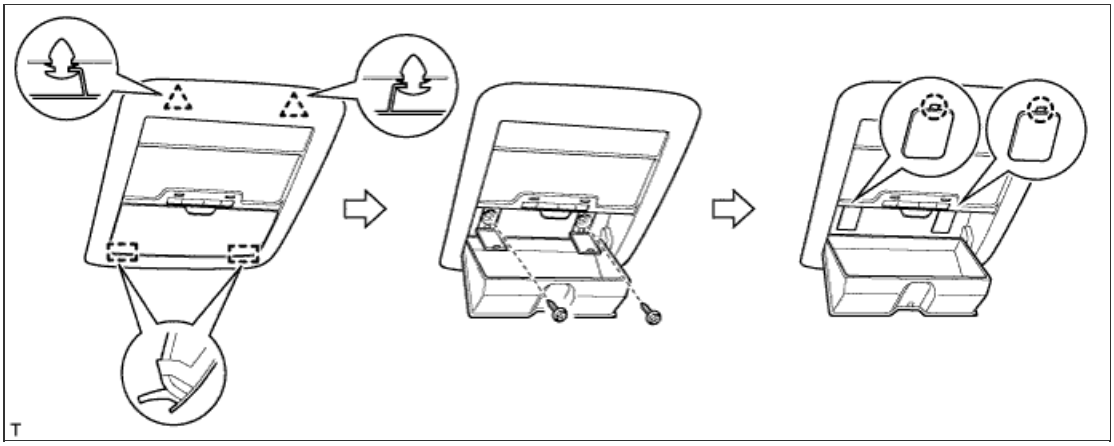


55. INSTALL REAR UPPER PILLAR GARNISH LH

a. Attach the 5 clips to install the rear upper pillar arnish.

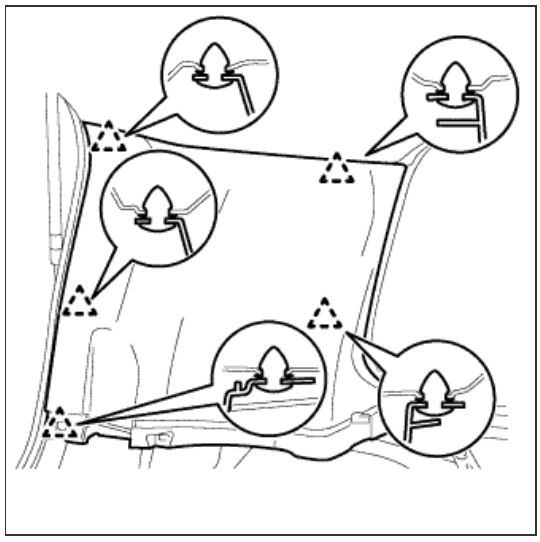


b. w/ Rear No. 2 Seat except ace to ace Seat pe:

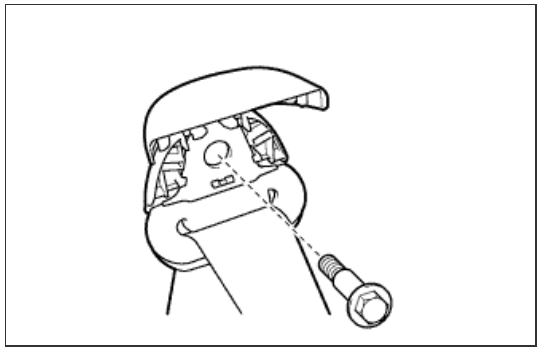

i. Install the seat belt shoulder anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

ii. Attach the 2 claws to close the seat belt shoulder anchor cover.

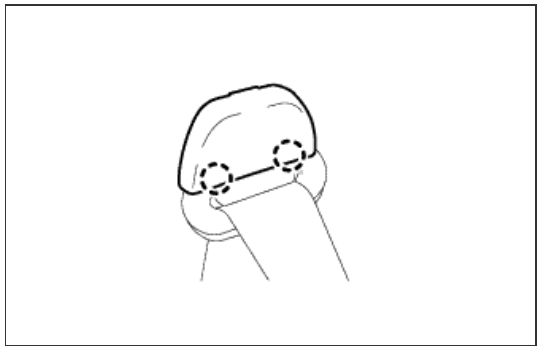

56. INSTALL REAR UPPER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

57. INSTALL REAR FRONT QUARTER TRIM GARNISH LH

a. Pass the seat belt anchor throu h the quarter trim arnish.

b. Attach the clip and 2 uides to install the quarter trim arnish.

c. Install the screw.

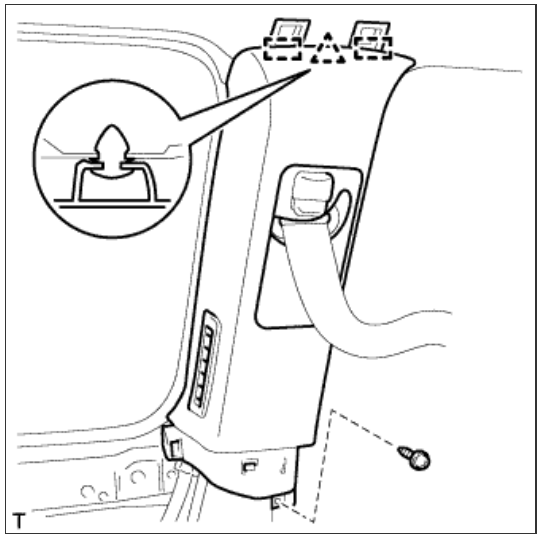

58. INSTALL REAR FRONT QUARTER TRIM GARNISH RH


HINT:

Use the same procedures described for the LH side.

59. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

hen installin the front quarter trim panel operate the reclinin adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

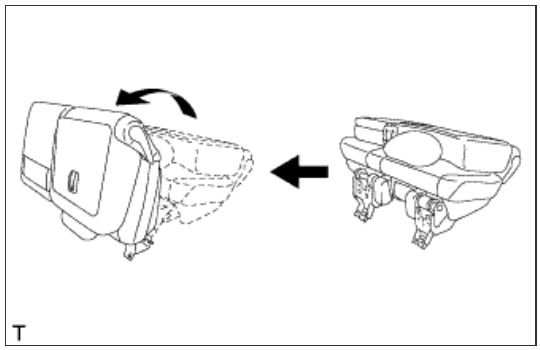

a. w/ Rear No. 2 Seat except ace to ace Seat pe:


i. w/o Rear Air Conditionin S stem:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditionin S stem:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

i . Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

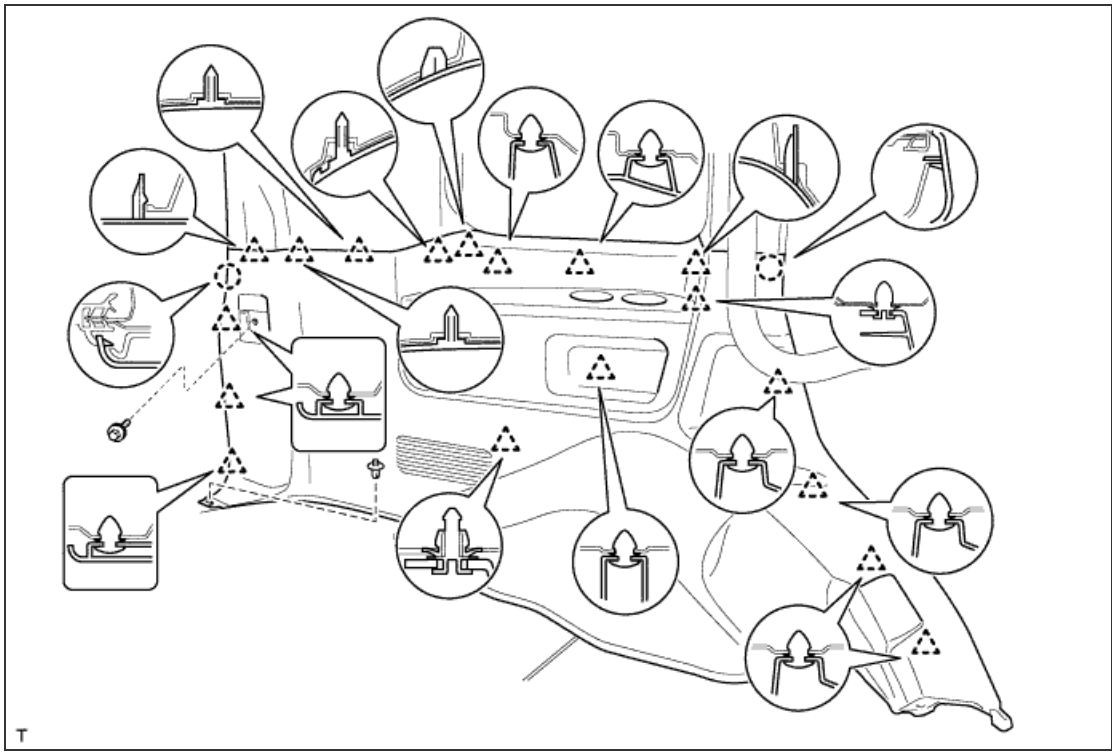

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat for ace to ace Seat pe:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the clip.

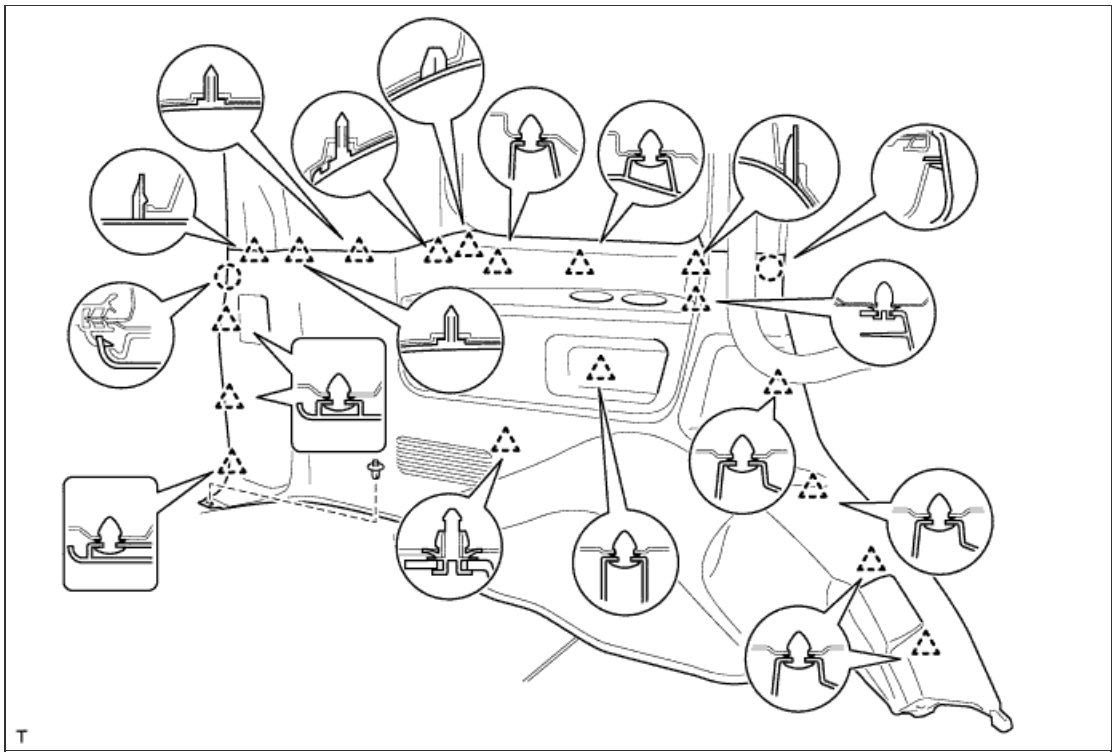


c. w/ Rear No. 2 Seat except ace to ace Seat pe:
Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }


NOTICE:

Do not overlap the anchor part of the seat belt and protrudin parts of the vehicle bod .

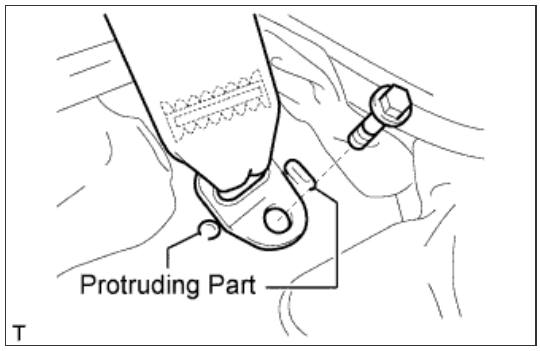


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

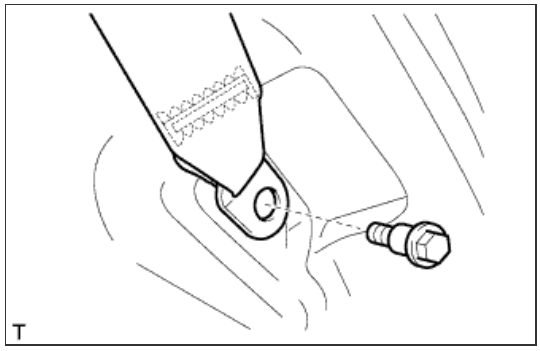


e. Attach the 3 claws to install the cover.

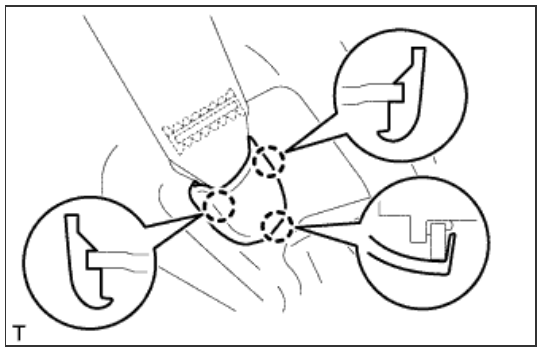

60. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:

hen installin the front quarter trim panel operate the reclinin adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

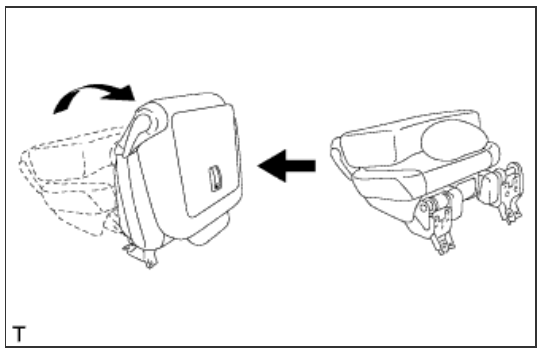

a. w/ Rear No. 2 Seat except ace to ace Seat pe:


i. w/o Rear Air Conditionin S stem:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditionin S stem:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 16 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Torque:
12 N*m{ 122 kgf*cm , 9 ft.*lbf }

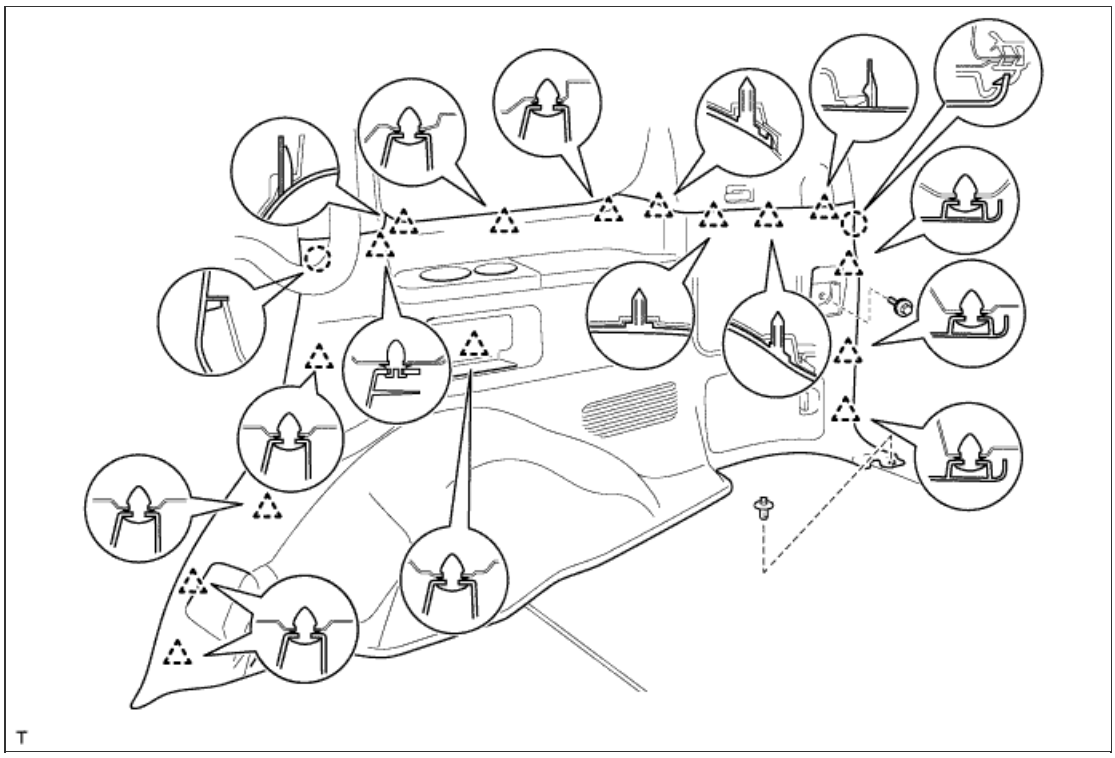

b. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat for ace to ace Seat pe:

i. Attach the 16 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

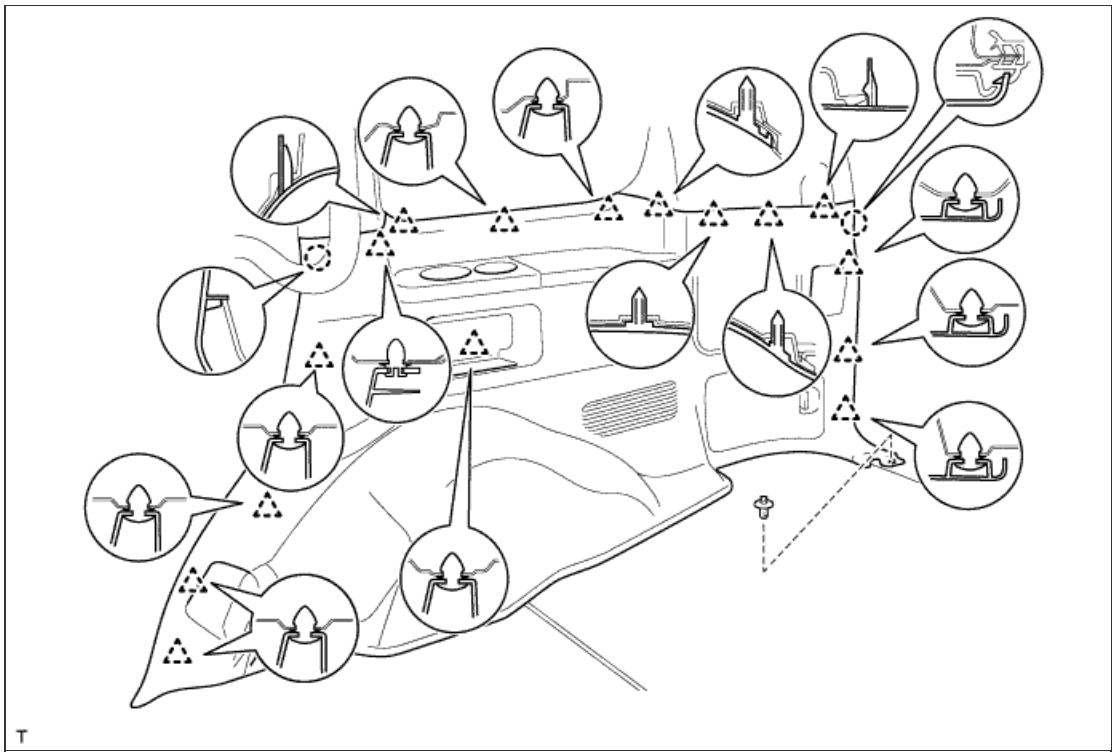


c. w/ Rear No. 2 Seat except ace to ace Seat pe:

i. Install the rear No. 2 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

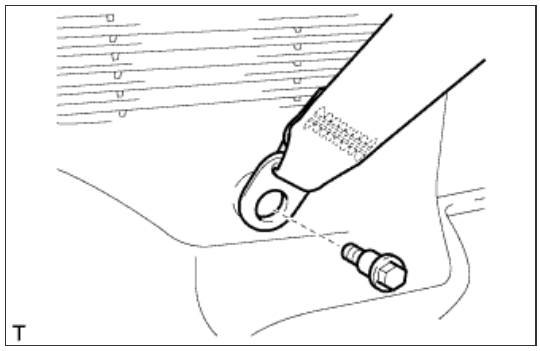


ii. Attach the 3 claws to install the cover.

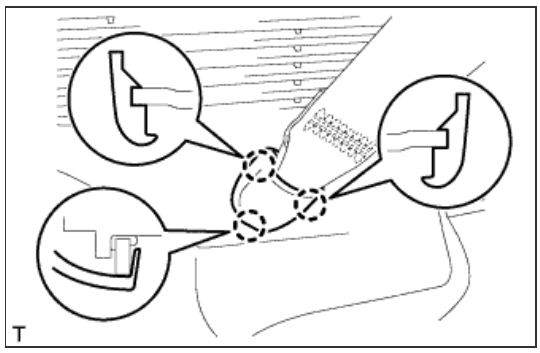


d. Install the rear No. 1 seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

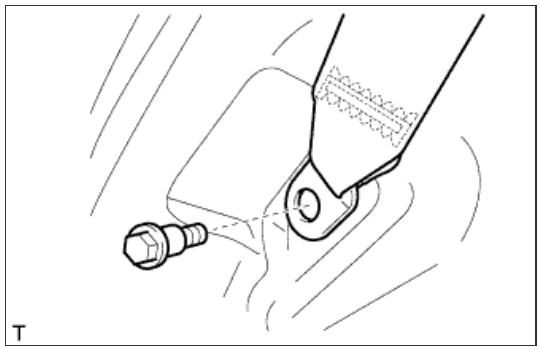

e. Attach the 3 claws to install the cover.

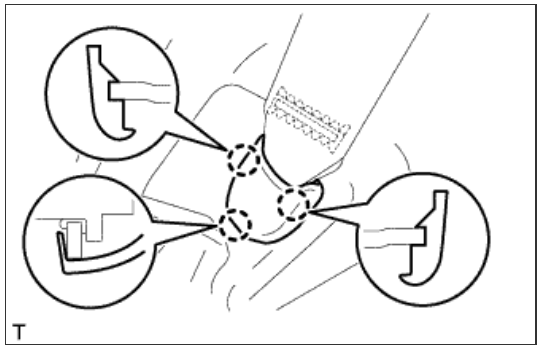


61. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

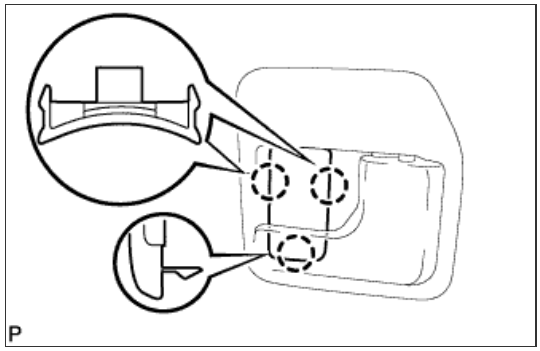


62. INSTALL CENTER PILLAR GARNISH LH

a. Pass the seat belt anchor throu h the center pillar arnish.

b. Attach the 2 clips and 2 uides to install the center pillar arnish.

c. Install the bolt.

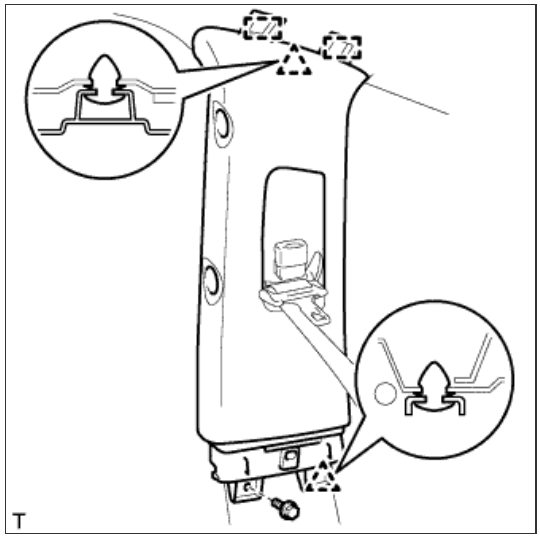

63. INSTALL CENTER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.


64. INSTALL REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to install the rear assist rip on the other side.

a. Attach the 2 claws to install the rear assist rip.

b. Install the 2 bolts.

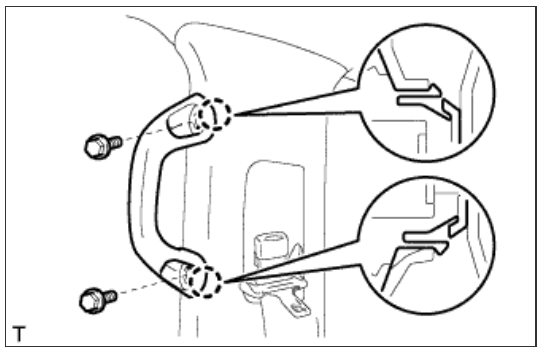

c. Attach the 4 claws to install the 2 assist rip plu s.

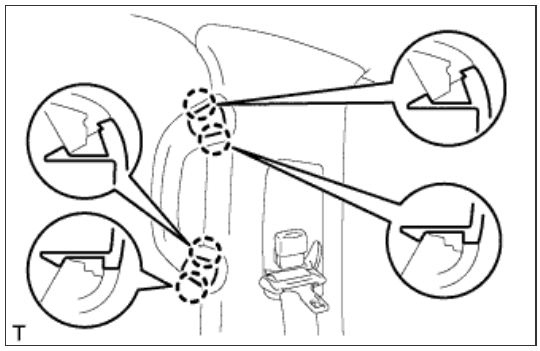


65. INSTALL CENTER LOWER PILLAR GARNISH LH

HINT:


- **for Manual Seat:**
  When installing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When installing the center lower pillar garnish, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Attach the 2 claws and 7 clips to install the center lower pillar arnish.

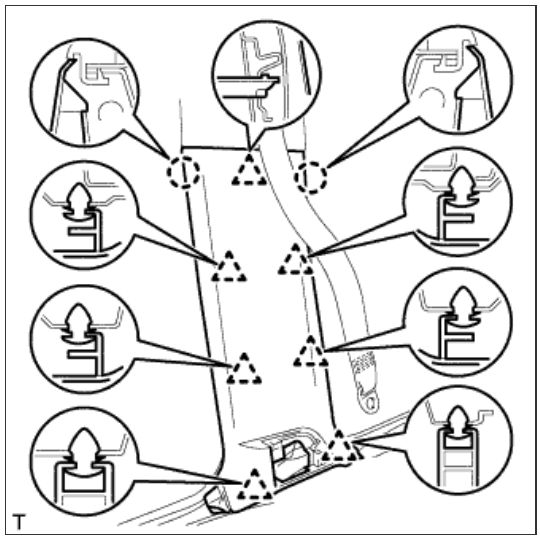

. Install the seat belt anchor with the bolt.

Torque:
42 N*m{ 428 kgf*cm , 31 ft.*lbf }

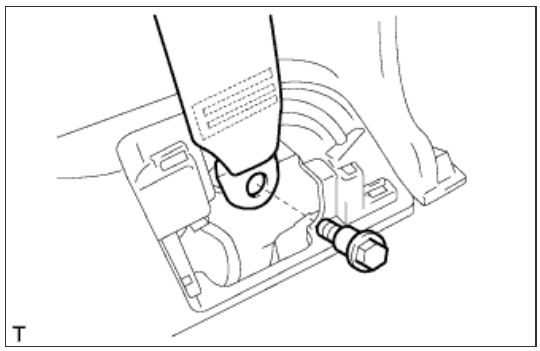

66. INSTALL CENTER LOWER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

67. INSTALL CENTER PILLAR GARNISH COVER LH

HINT:

- **for Manual Seat:**
  When installing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  When installing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Attach the 2 clips and 2 guides to install the cover.

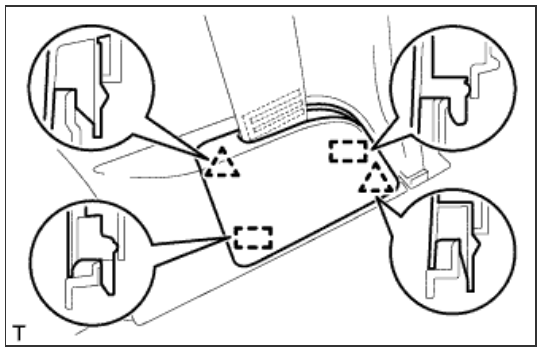

68. INSTALL CENTER PILLAR GARNISH COVER RH


HINT:

Use the same procedures described for the LH side.

69. INSTALL FRONT PILLAR GARNISH LH

a. for 9 14 Speakers:
Connect the speaker connector.

b. Attach the clip and 3 guides to install the front pillar garnish.

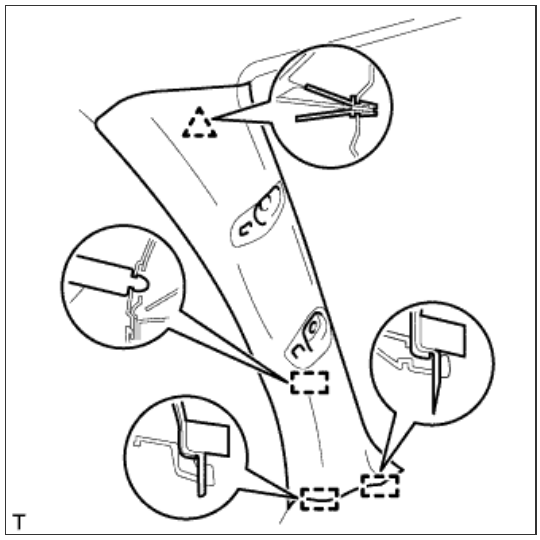

70. INSTALL FRONT PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

71. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY


HINT:

Use the same procedure to install the front assist rip on the other side.

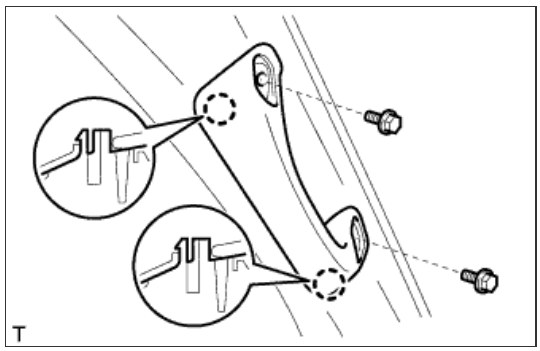

a. Attach the 2 claws to install the front assist rip.


b. Install the 2 bolts.

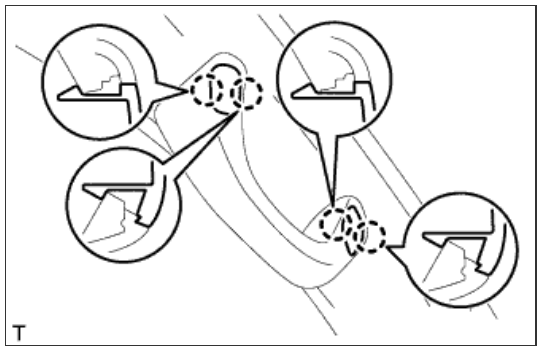

c. Attach the 4 claws to install the 2 assist rip plu s.

72. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE


a. Attach the 6 clips to install the support plate.

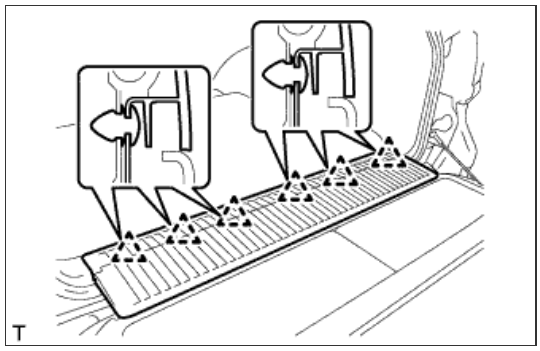

73. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

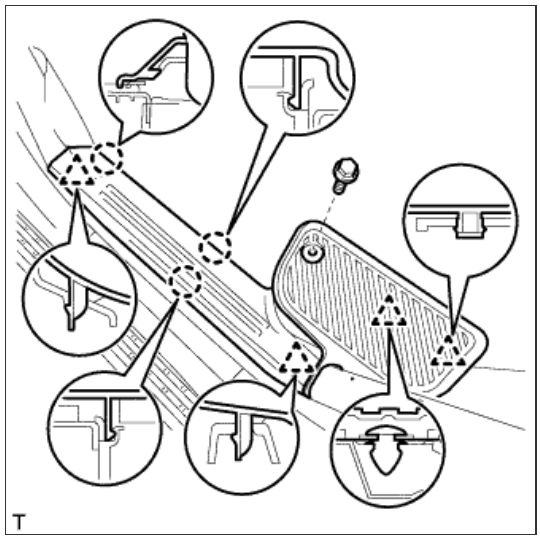

74. INSTALL REAR DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

75. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

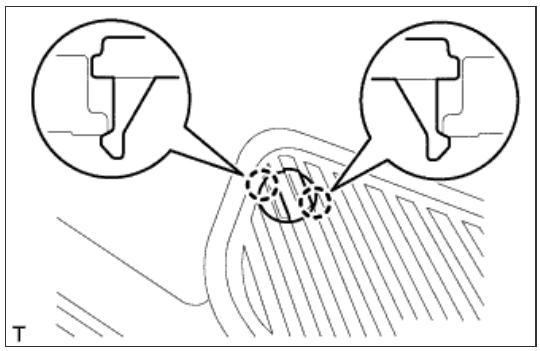

76. INSTALL FRONT DOOR SCUFF PLATE LH

a. Attach the 7 claws and 4 clips to install the scuff plate.

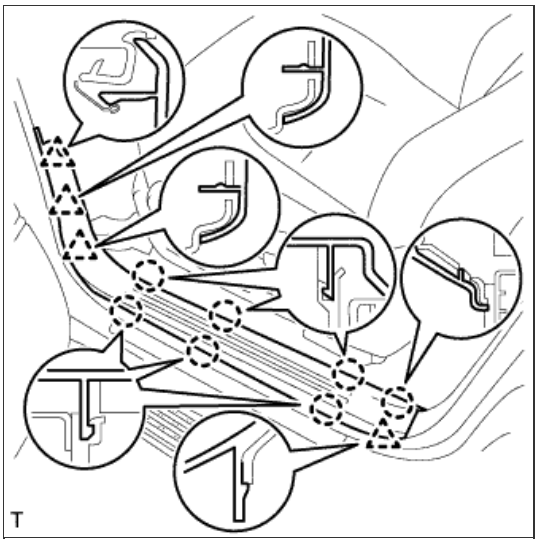

77. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

78. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

79. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

80. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

81. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.


82. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:


hen disconnectin the cable some s stems need to be initialized after the cable is reconnected (Click here).


for Preparation Click here


w/ Tonneau Cover:

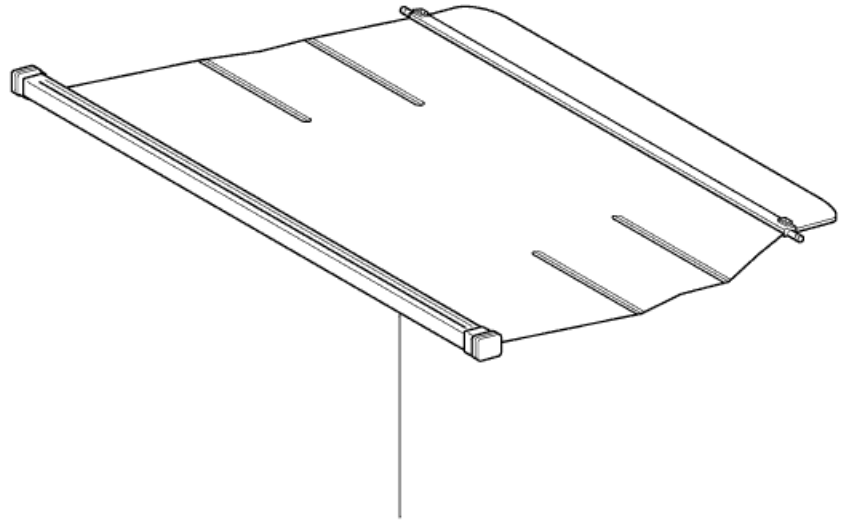


T

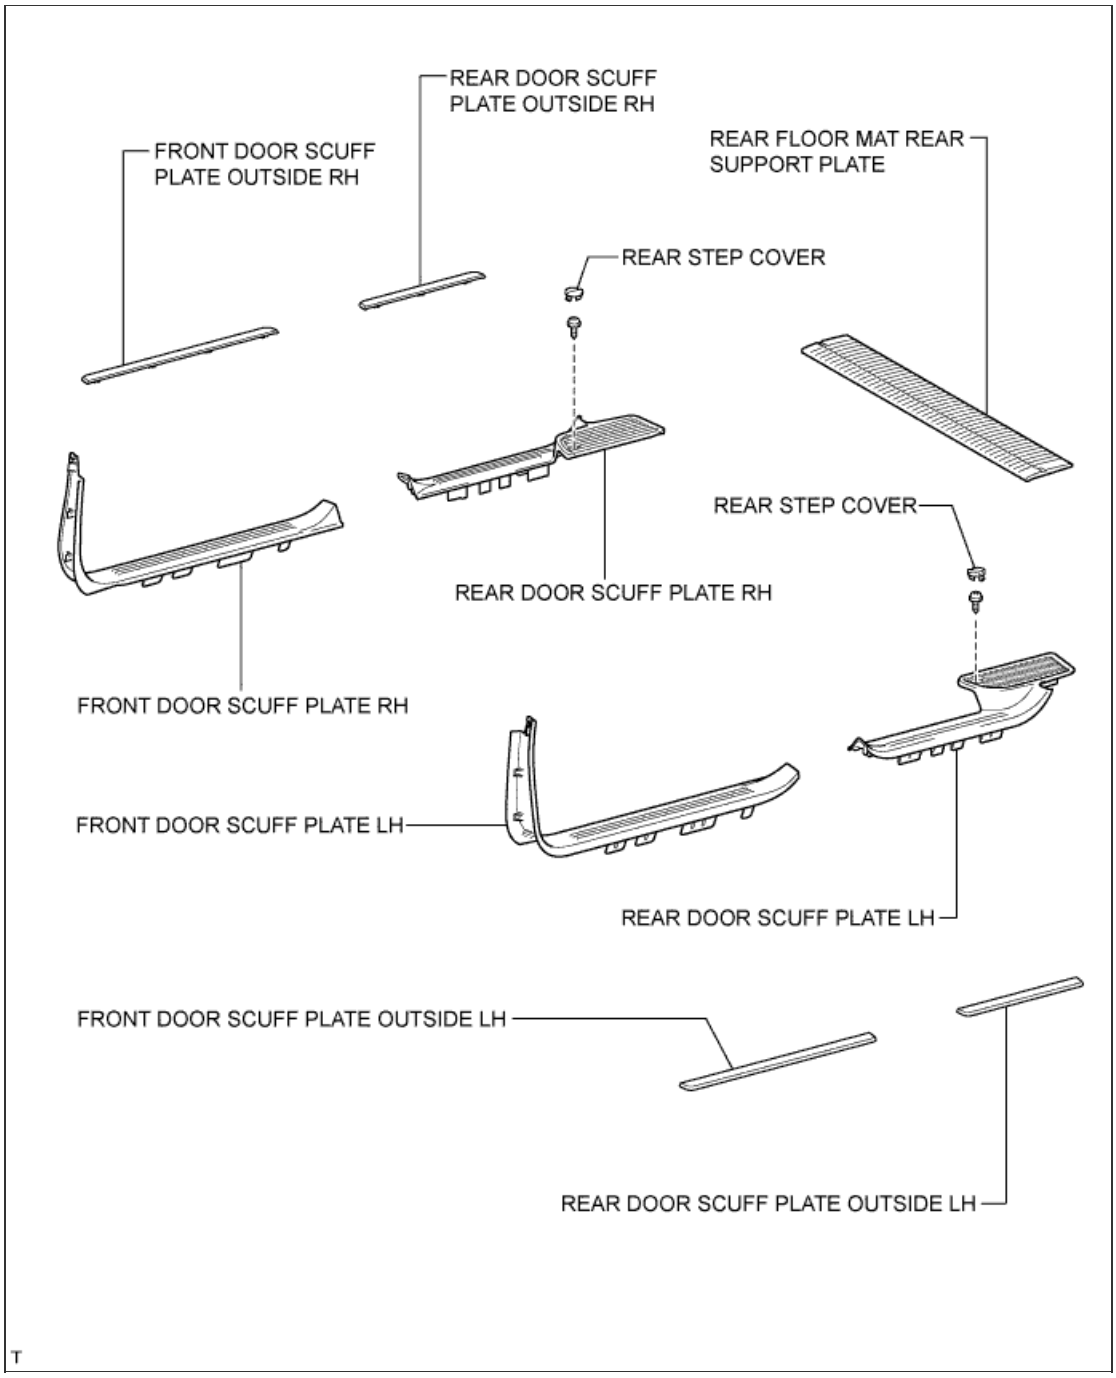
REAR DOOR SCUFF PLATE OUTSIDE RH
FRONT DOOR SCUFF PLATE OUTSIDE RH
REAR FLOOR MAT REAR SUPPORT PLATE
REAR STEP COVER
REAR STEP COVER
REAR DOOR SCUFF PLATE RH
FRONT DOOR SCUFF PLATE RH
FRONT DOOR SCUFF PLATE LH
REAR DOOR SCUFF PLATE LH
FRONT DOOR SCUFF PLATE OUTSIDE LH
REAR DOOR SCUFF PLATE OUTSIDE LH
T

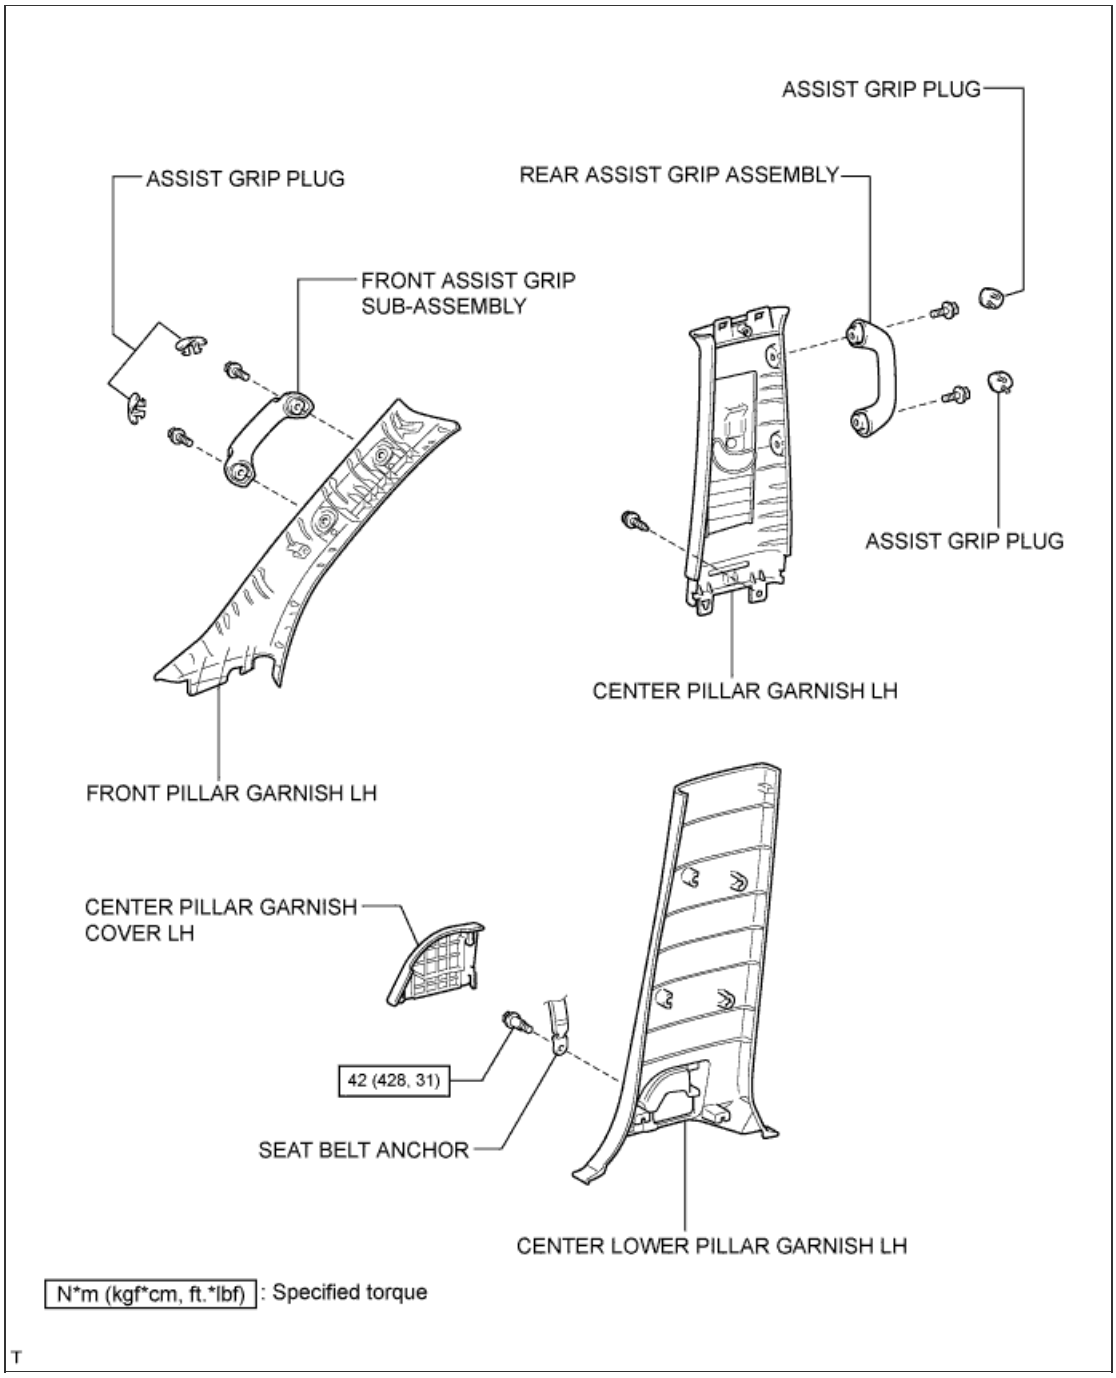
ASSIST GRIP PLUG
ASSIST GRIP PLUG
REAR ASSIST GRIP ASSEMBLY
FRONT ASSIST GRIP SUB-ASSEMBLY
ASSIST GRIP PLUG
CENTER PILLAR GARNISH LH
FRONT PILLAR GARNISH LH
CENTER PILLAR GARNISH COVER LH
42 (428, 31)
SEAT BELT ANCHOR
CENTER LOWER PILLAR GARNISH LH
N*m (kgf*cm, ft.*lbf) : Specified torque
T

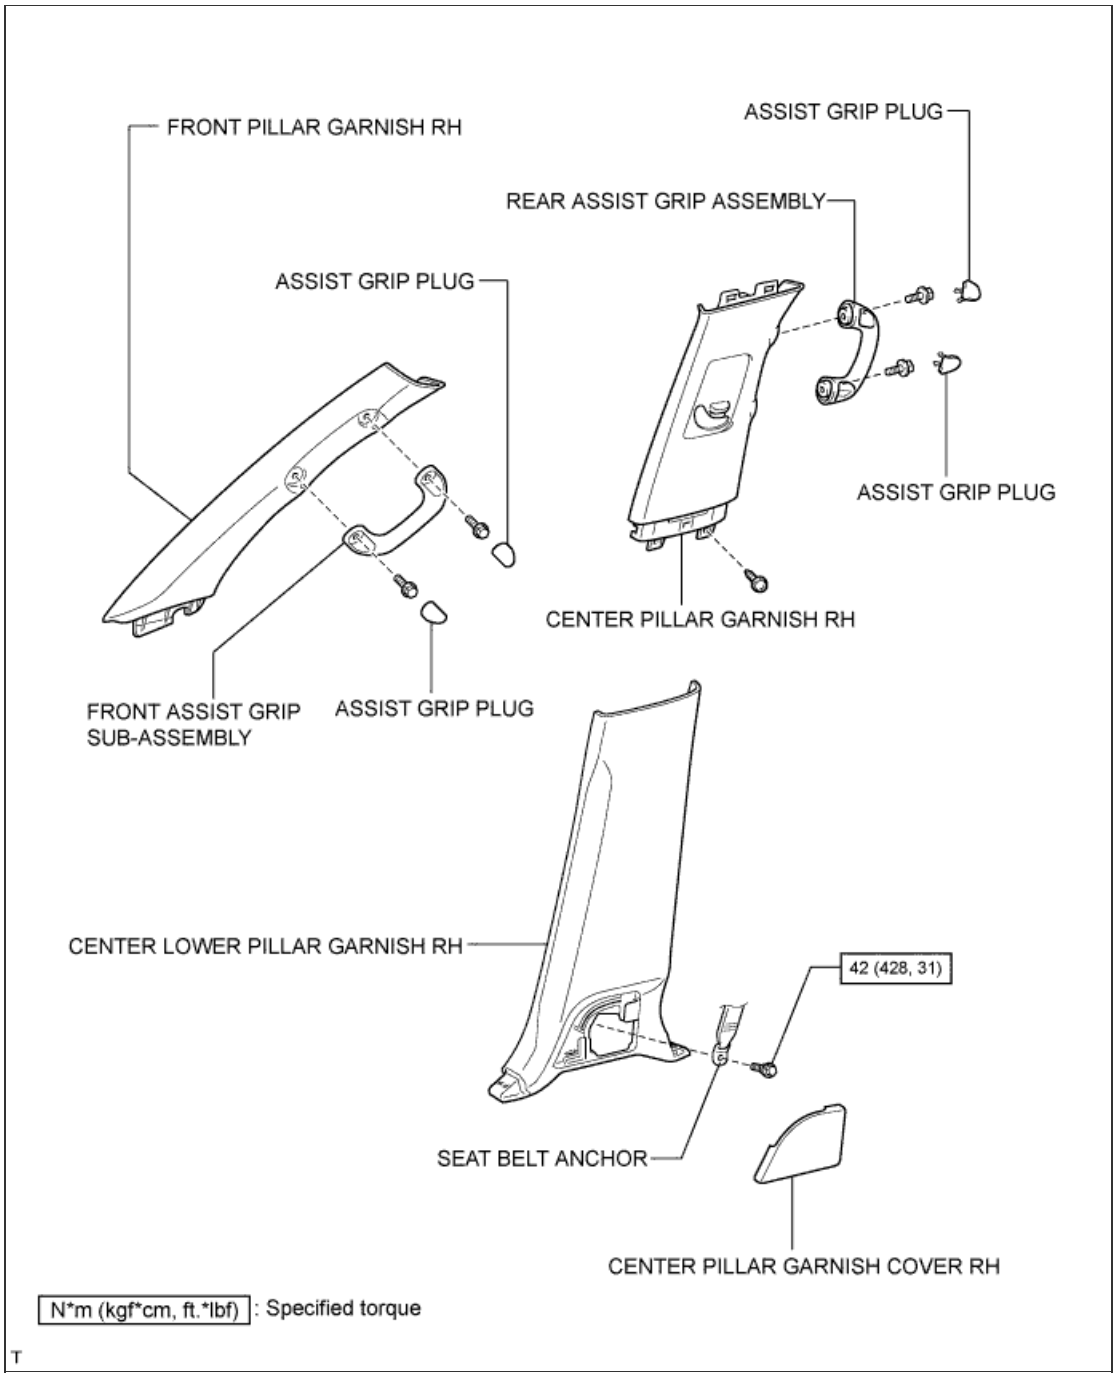
FRONT PILLAR GARNISH RH
ASSIST GRIP PLUG
REAR ASSIST GRIP ASSEMBLY
ASSIST GRIP PLUG
ASSIST GRIP PLUG
CENTER PILLAR GARNISH RH
FRONT ASSIST GRIP SUB-ASSEMBLY
ASSIST GRIP PLUG
CENTER LOWER PILLAR GARNISH RH
42 (428, 31)
SEAT BELT ANCHOR
CENTER PILLAR GARNISH COVER RH
N*m (kgf*cm, ft.*lbf) : Specified torque
T


w/ Rear No. 2 Seat, except Face to Face Seat Type:

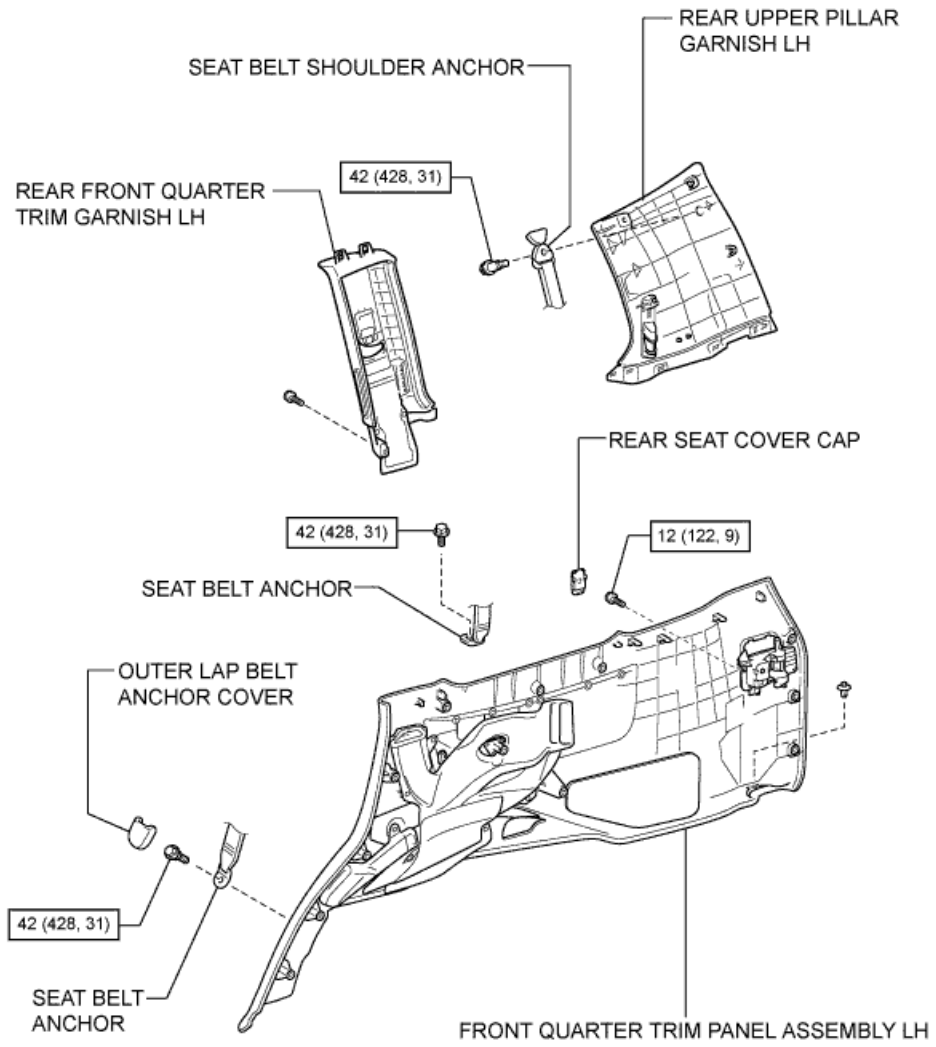

N*m (kgf*cm, ft.*lbf) : Specified torque

T

w/ Rear No. 2 Seat, except Face to Face Seat Type:

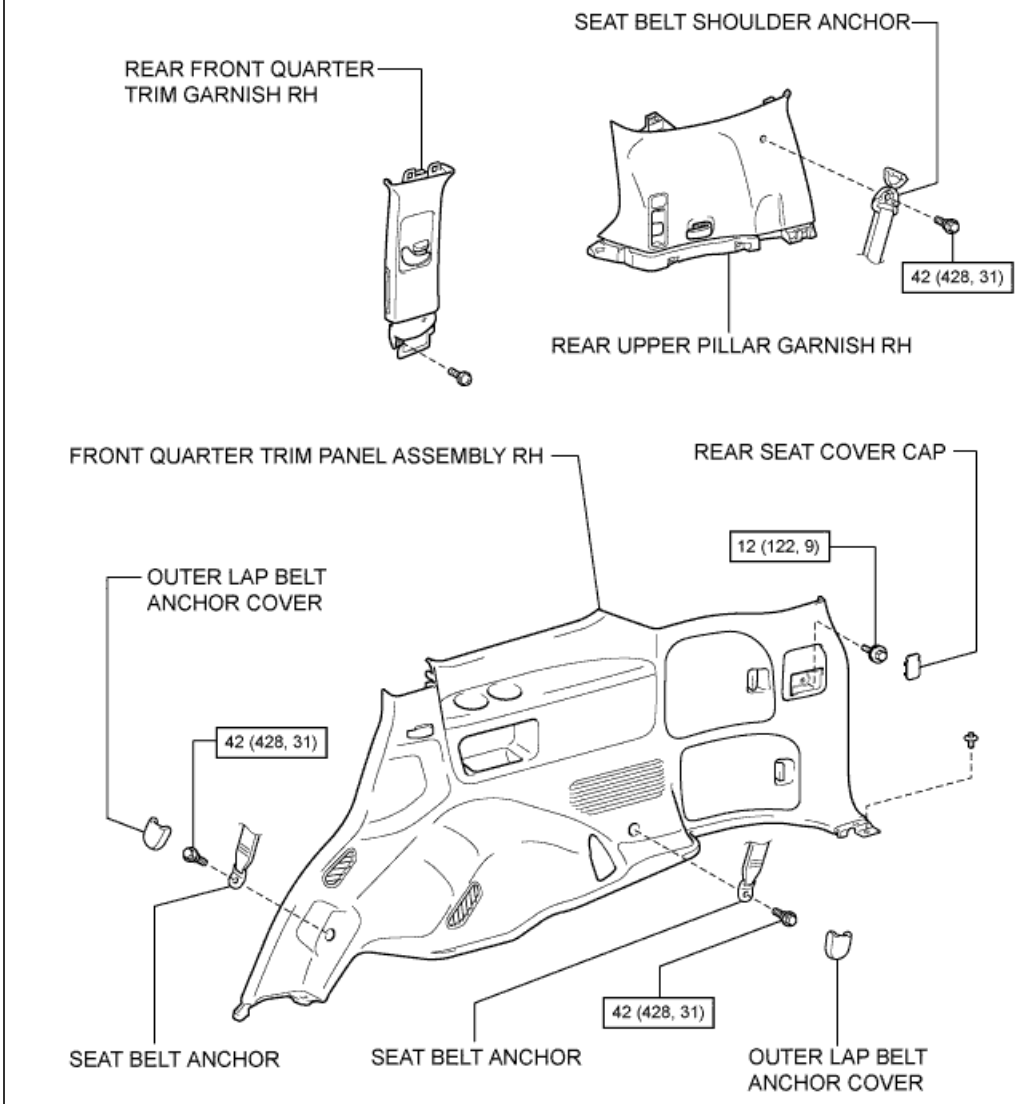


N*m (kgf*cm, ft.*lbf) : Specified torque

T

w/ Rear No. 2 Seat, for Face to Face Seat Type:

w/o Rear No. 2 Seat:

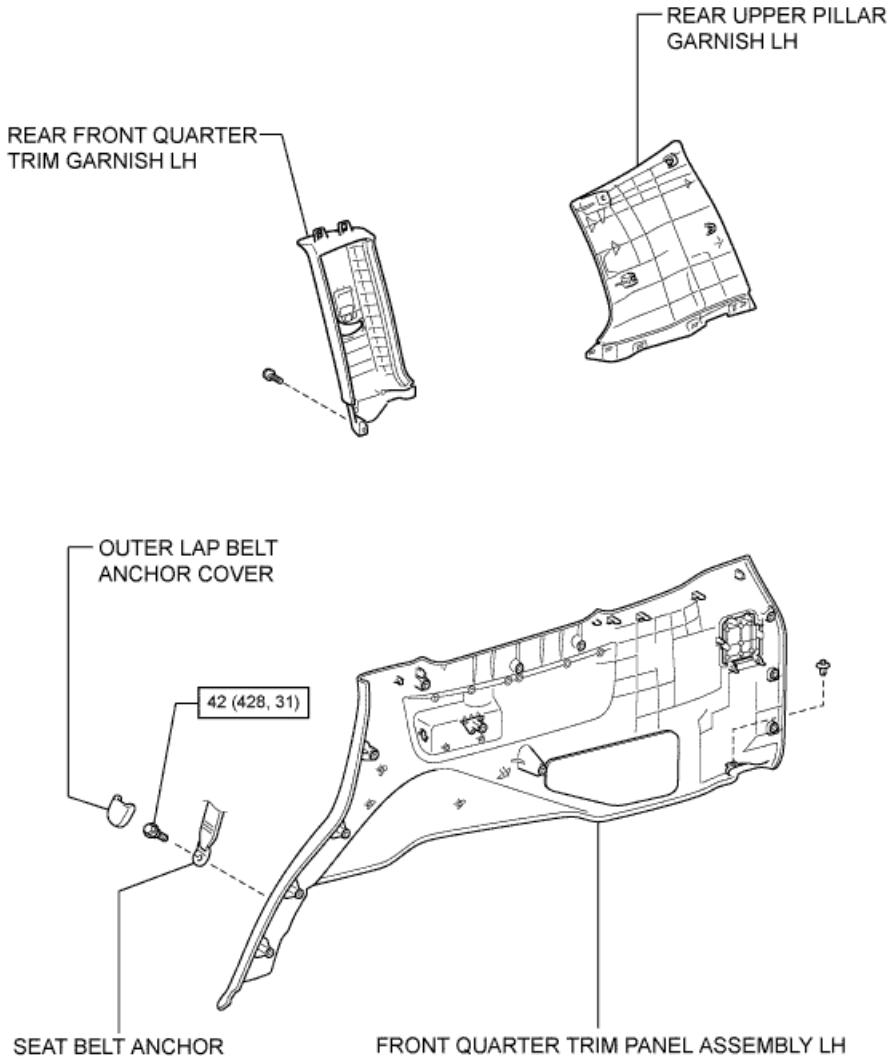


N*m (kgf*cm, ft.*lbf) : Specified torque

T

w/ Rear No. 2 Seat, for Face to Face Seat Type:


w/o Rear No. 2 Seat:

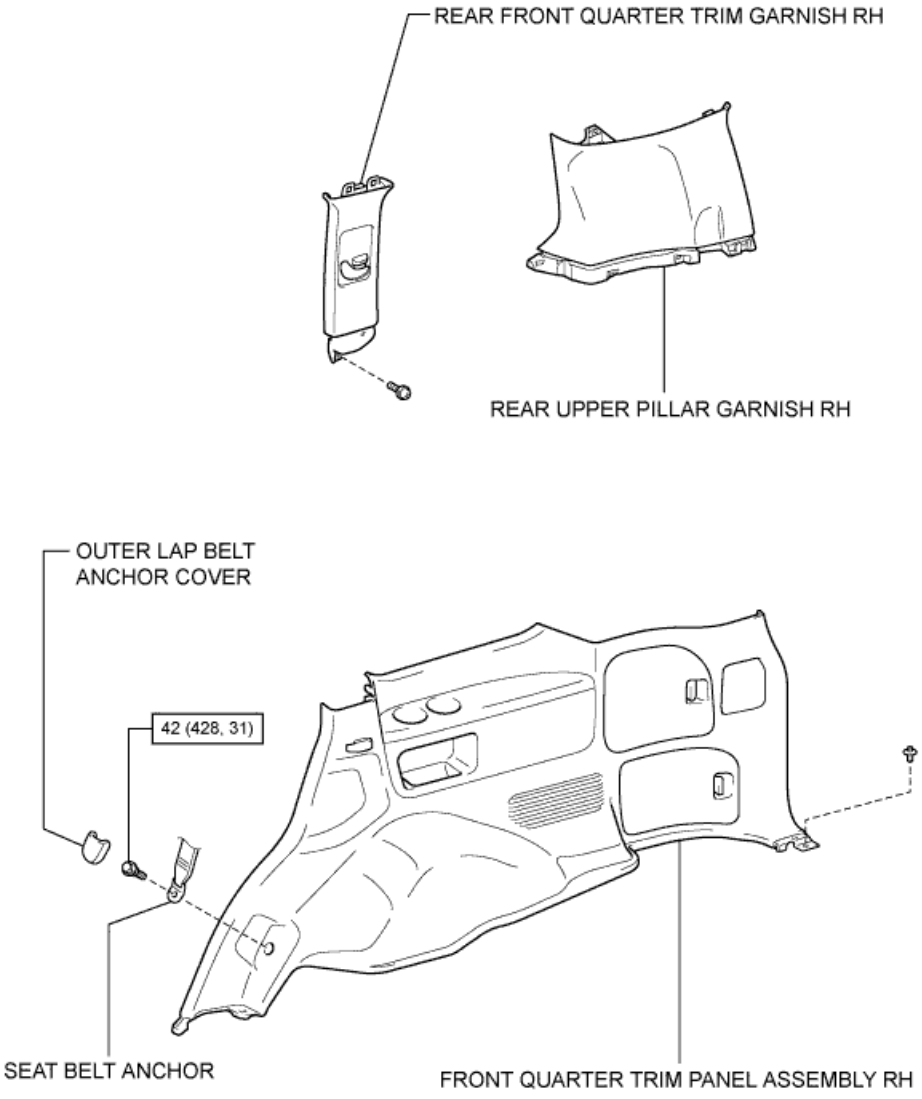

N*m (kgf*cm, ft.*lbf) : Specified torque

T


w/ Tonneau Cover:

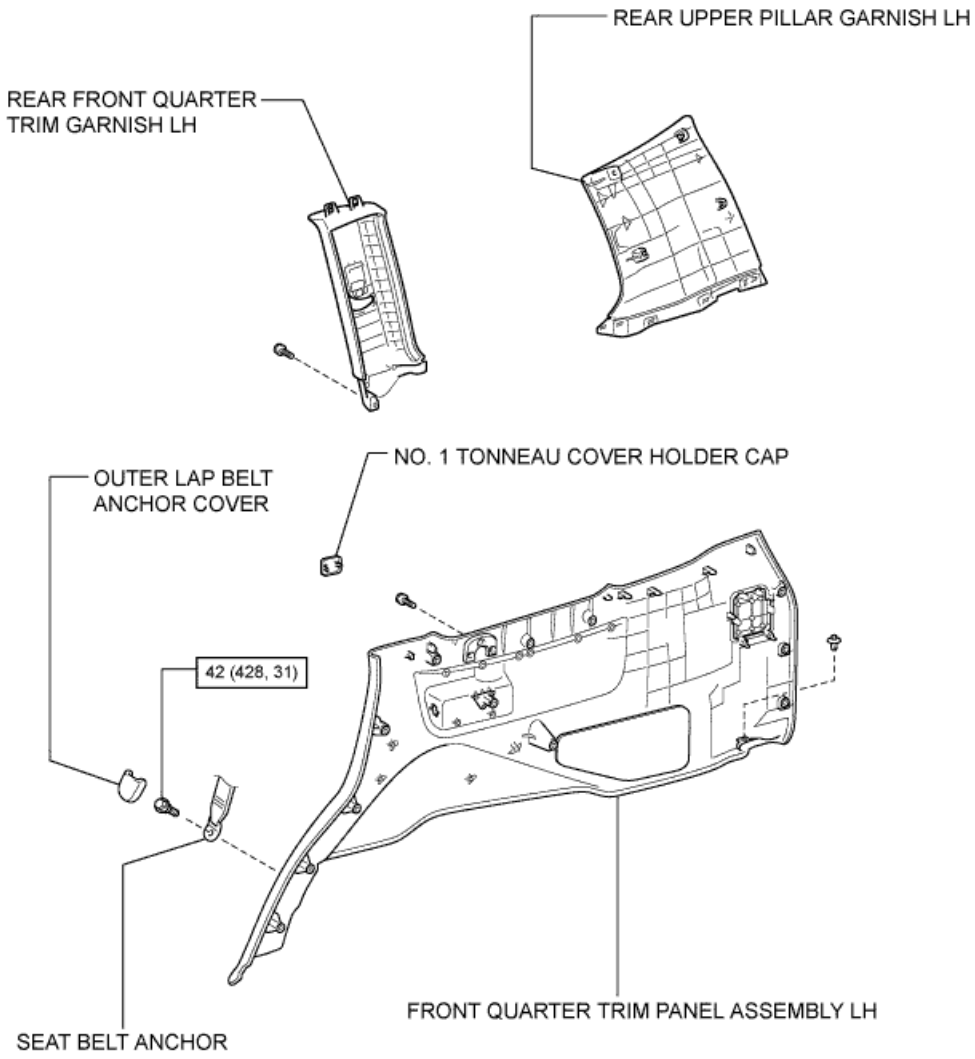

N*m (kgf*cm, ft.*lbf) : Specified torque

T


w/ Tonneau Cover:

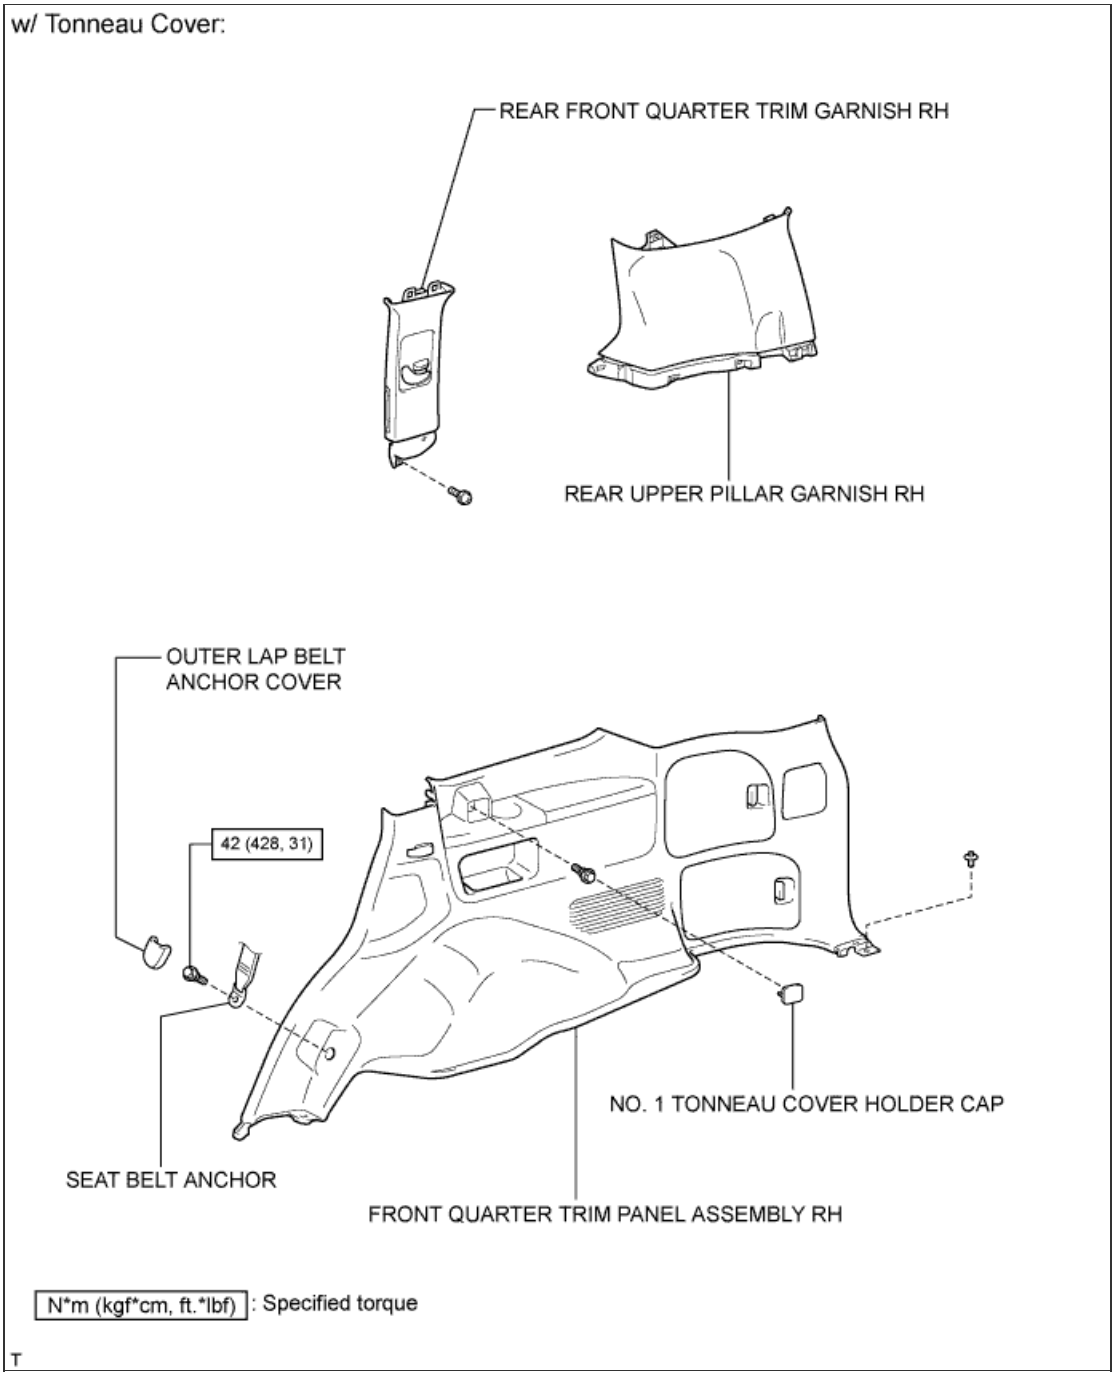


N*m (kgf*cm, ft.*lbf) : Specified torque

T


w/ Rear No. 2 Seat, except Face to Face Seat Type:

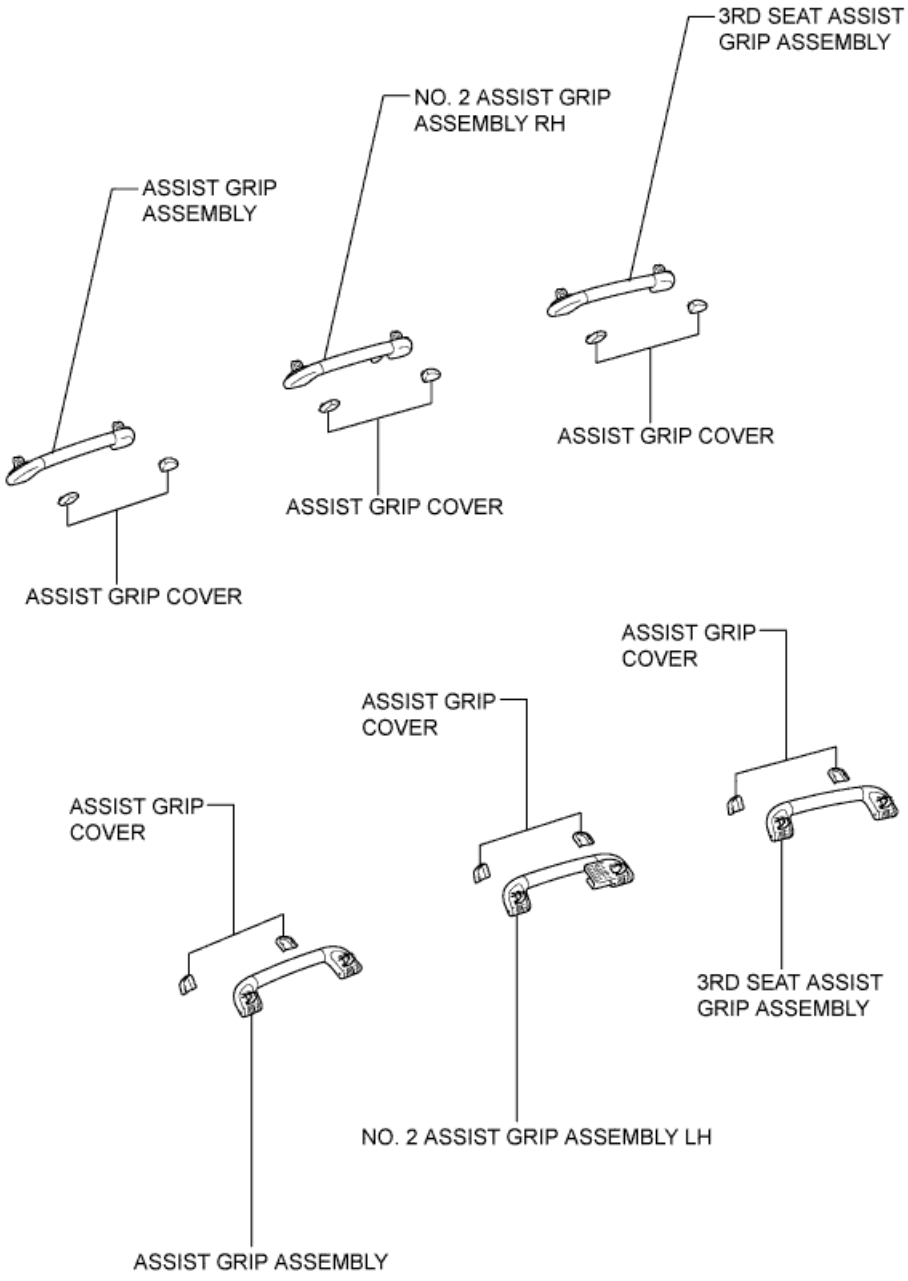


w/o Rear No. 2 Seat:

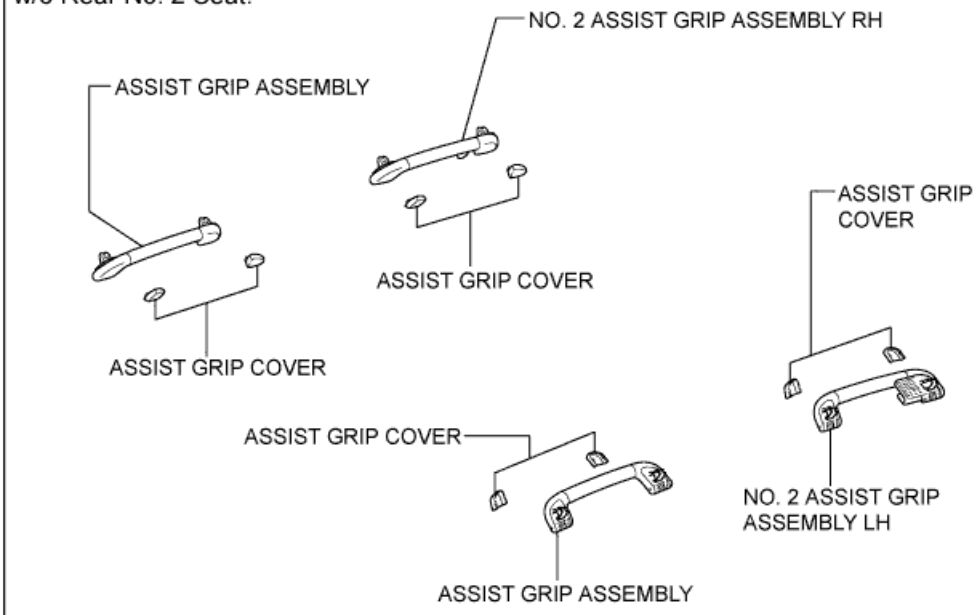


w/ Rear No. 2 Seat, for Face to Face Seat Type:

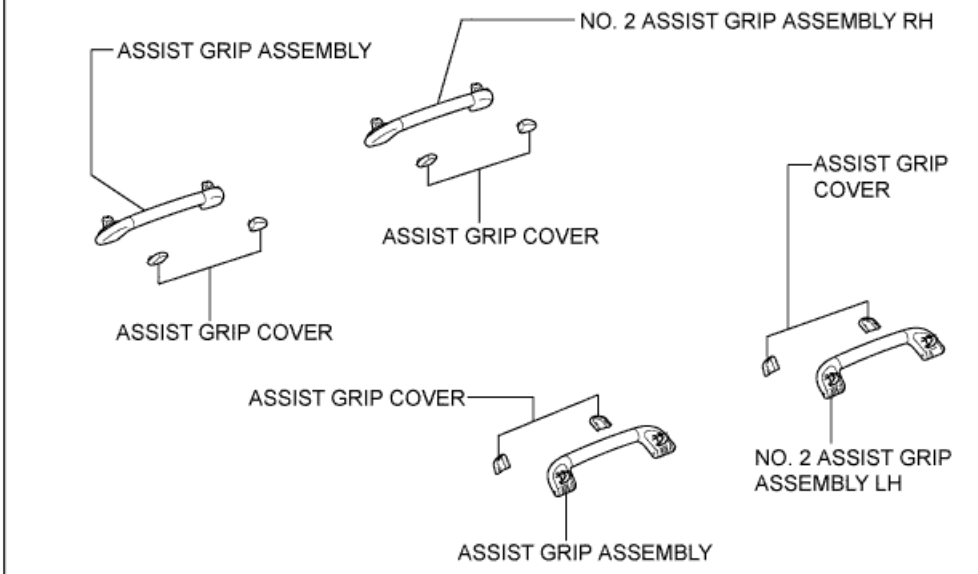


w/ Sub Visor:

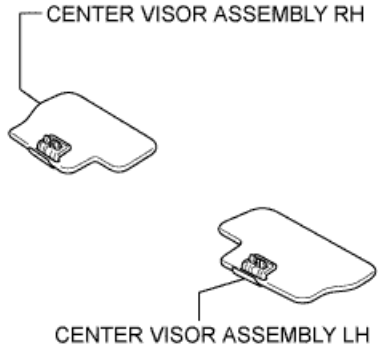

for 3 Person Seat Type Rear No. 2 Seat:

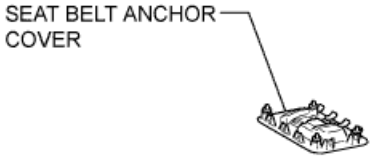


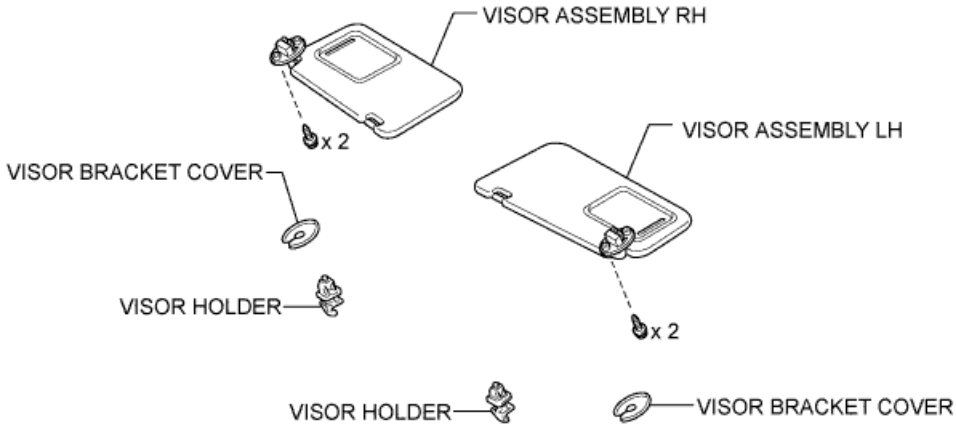

w/ EC Mirror:




w/ Rain Sensor:





w/ Map Light:

for 3 Person Seat Type Rear No. 2 Seat:

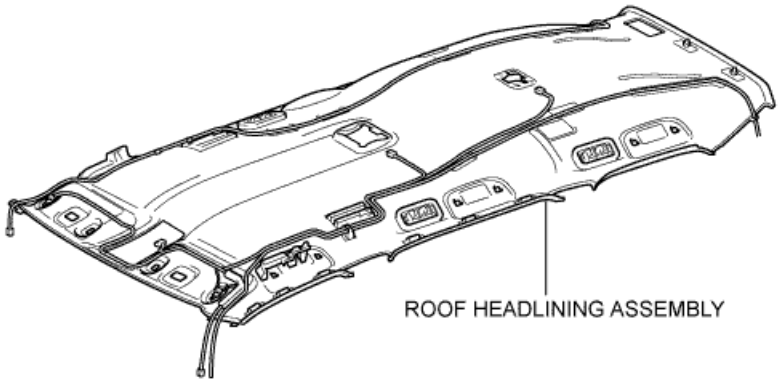


except 3 Person Seat Type Rear No. 2 Seat:

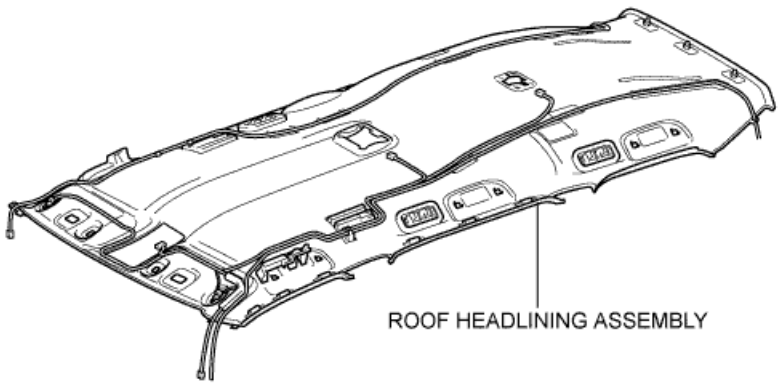


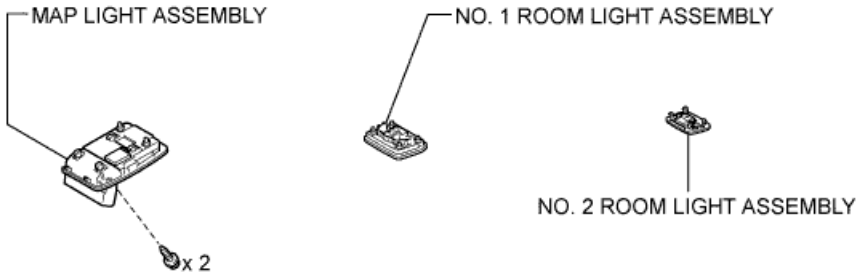


w/o Map Light:

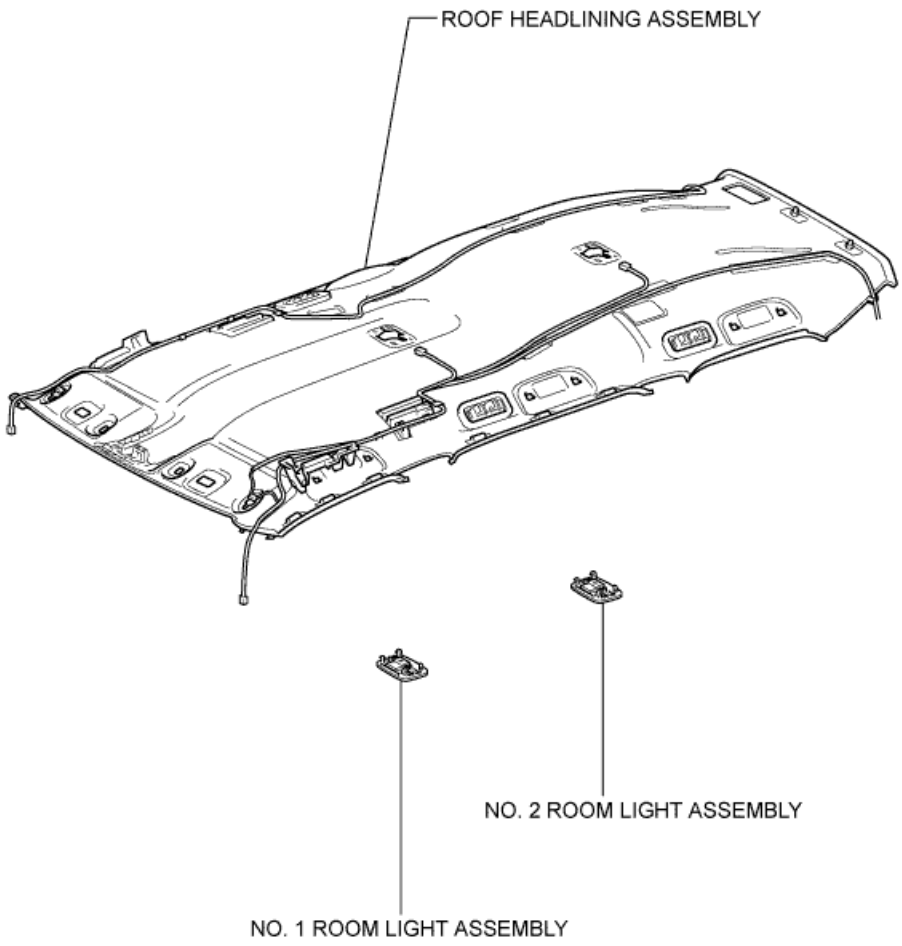

T

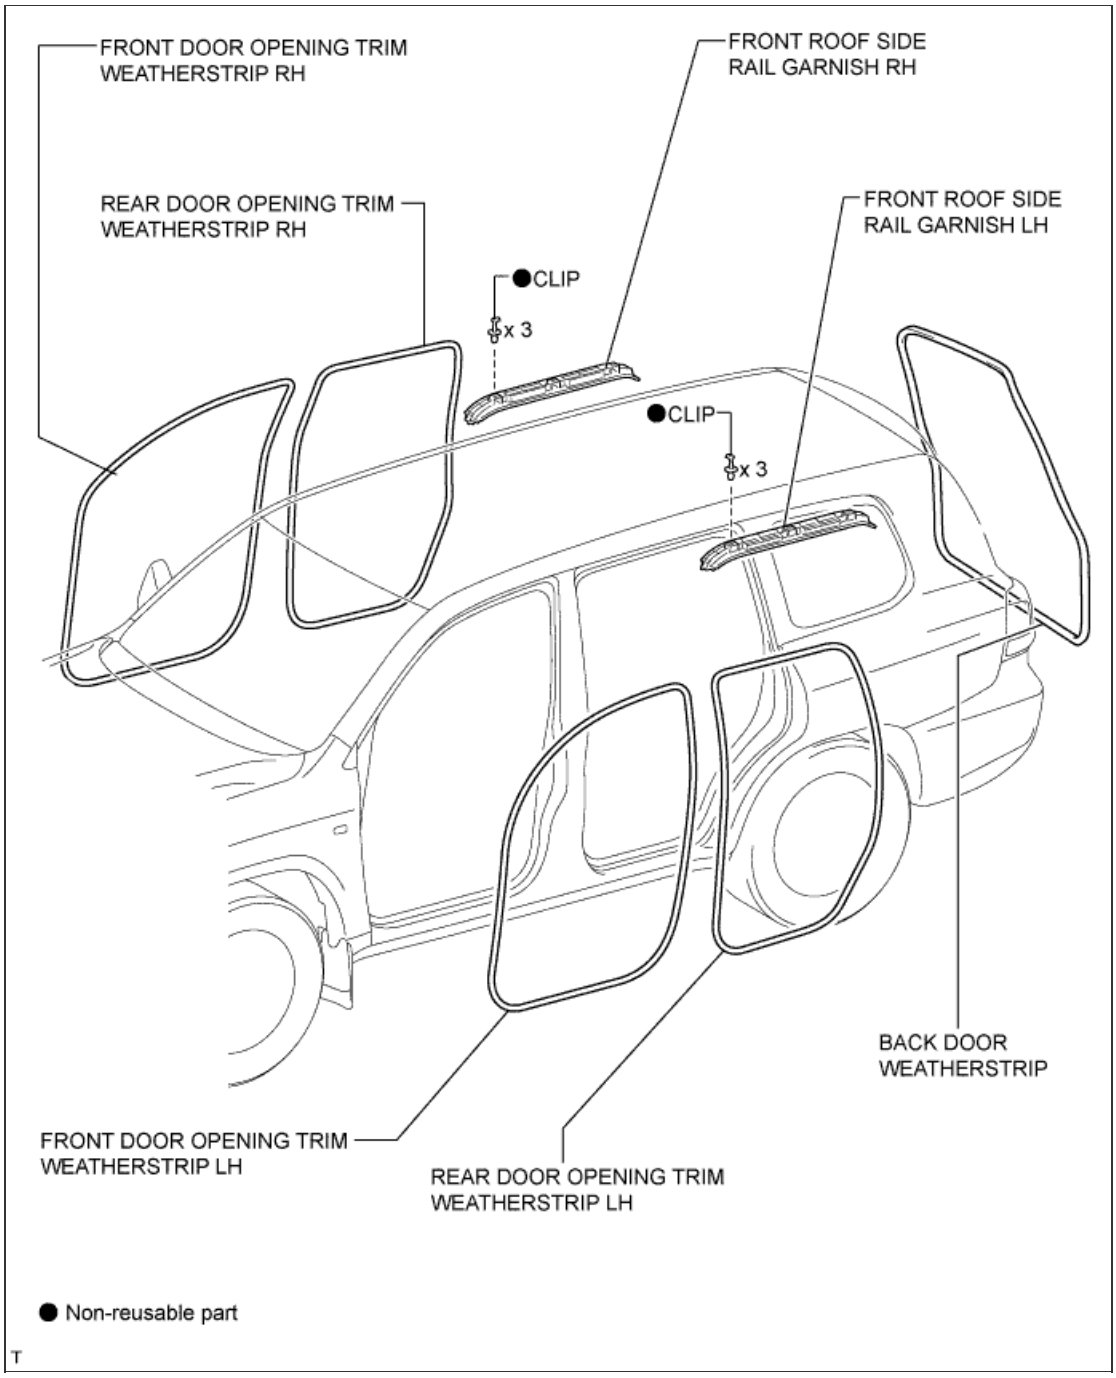

FRONT DOOR OPENING TRIM WEATHERSTRIP RH
FRONT ROOF SIDE RAIL GARNISH RH
REAR DOOR OPENING TRIM WEATHERSTRIP RH
FRONT ROOF SIDE RAIL GARNISH LH
●CLIP
x 3
●CLIP
x 3
BACK DOOR WEATHERSTRIP
FRONT DOOR OPENING TRIM WEATHERSTRIP LH
REAR DOOR OPENING TRIM WEATHERSTRIP LH
● Non-reusable part

T

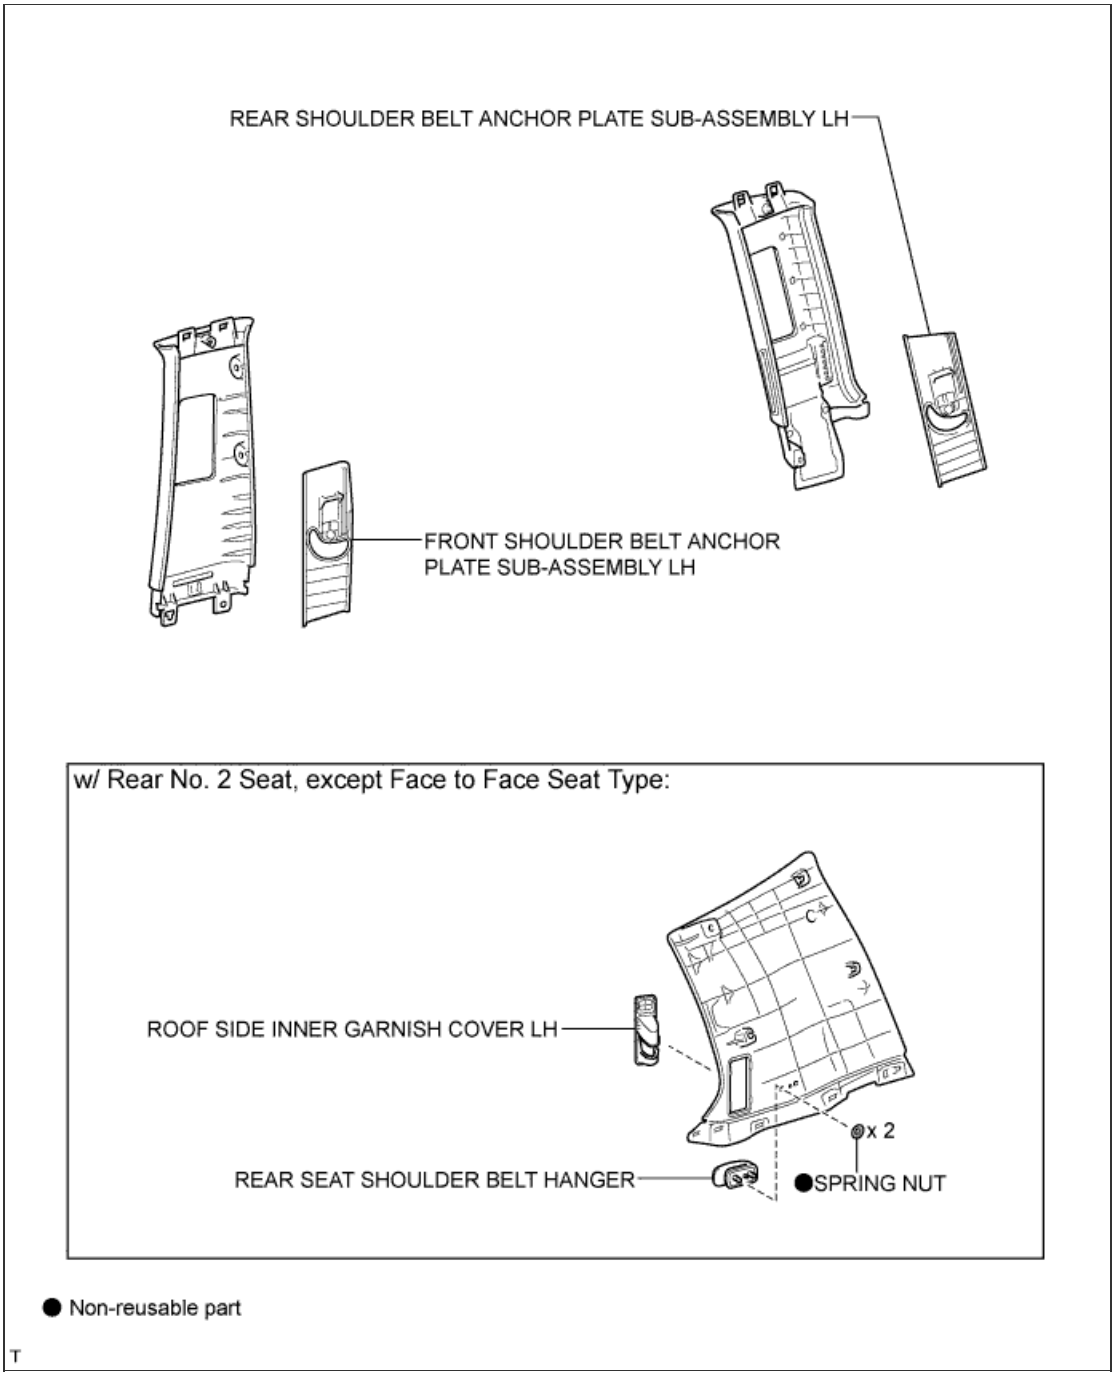

● Non-reusable part


T

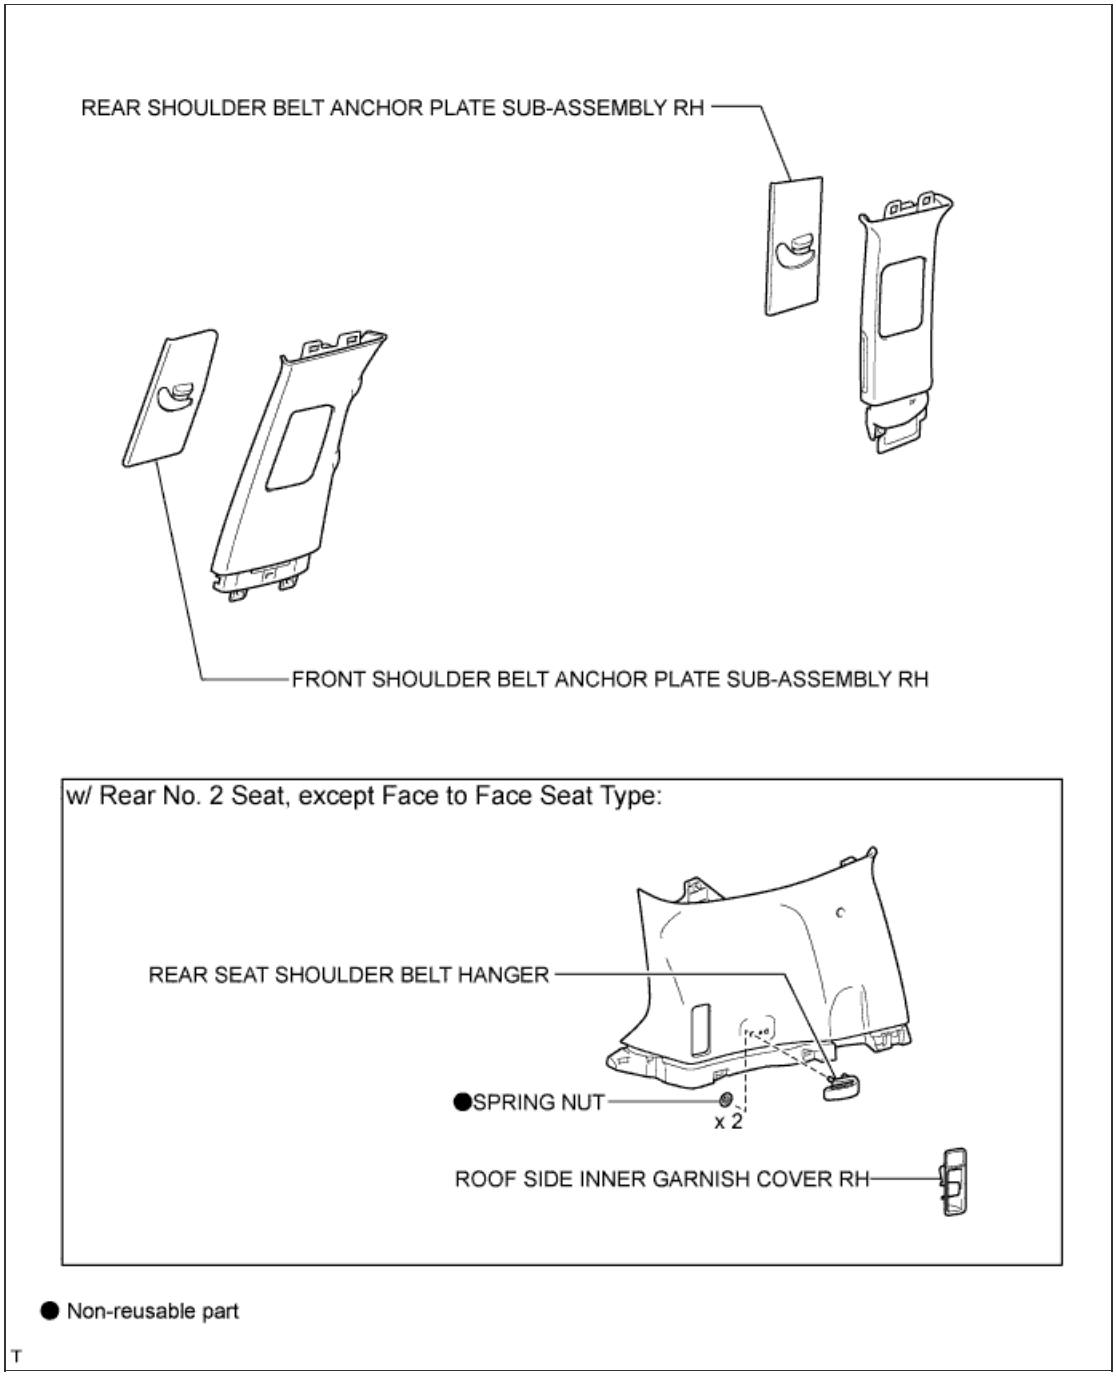


● Non-reusable part

T

w/ Rear No. 2 Seat, except Face to Face Seat Type:

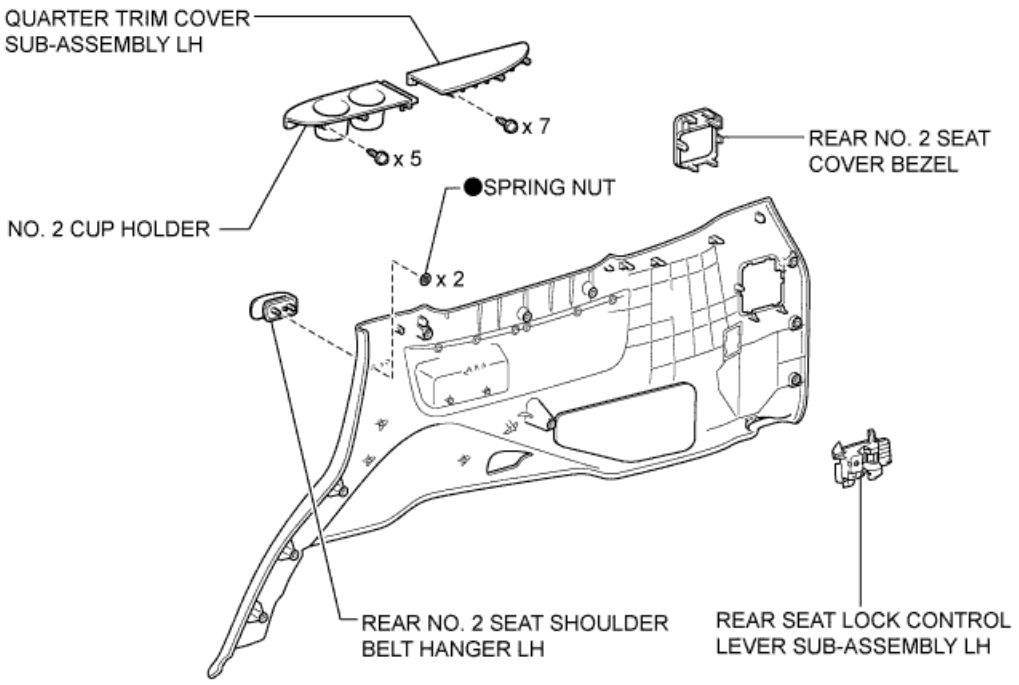


w/ Rear Heater:

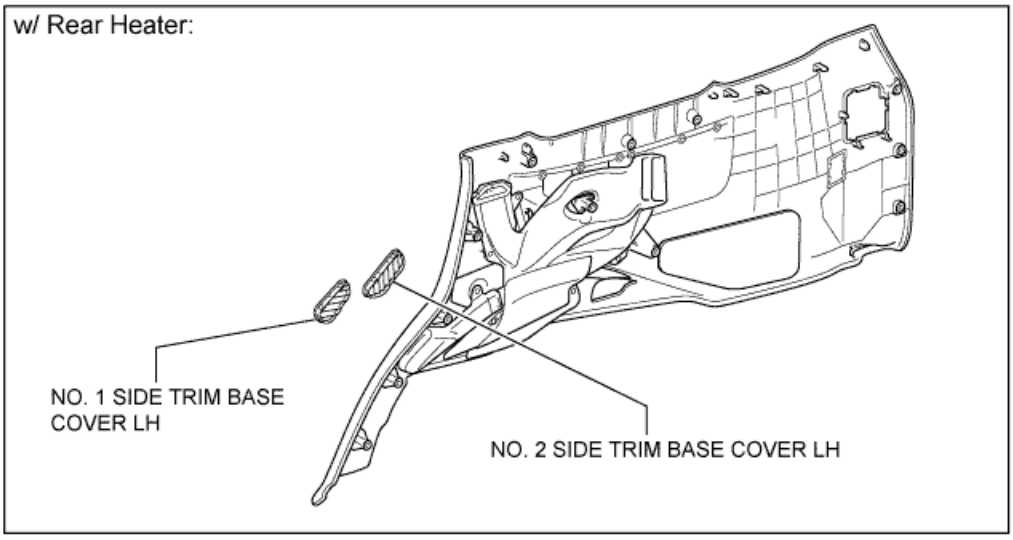


● Non-reusable part

w/ Rear No. 2 Seat, except Face to Face Seat Type:

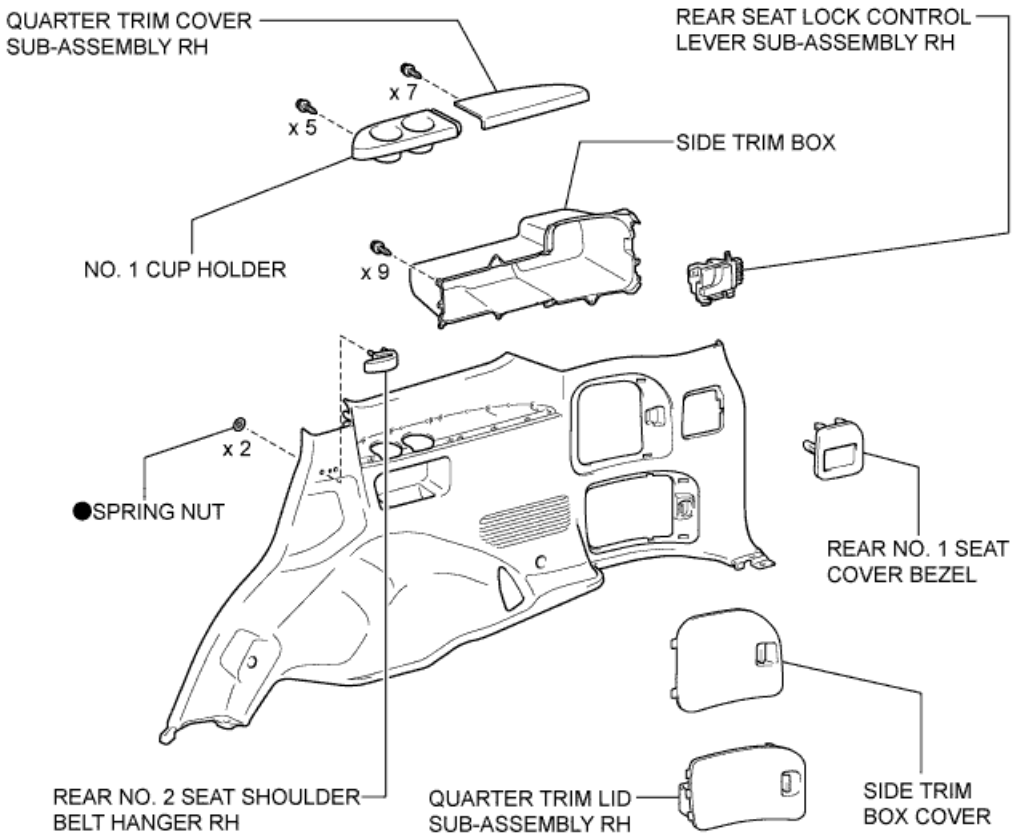


w/ Rear Heater:

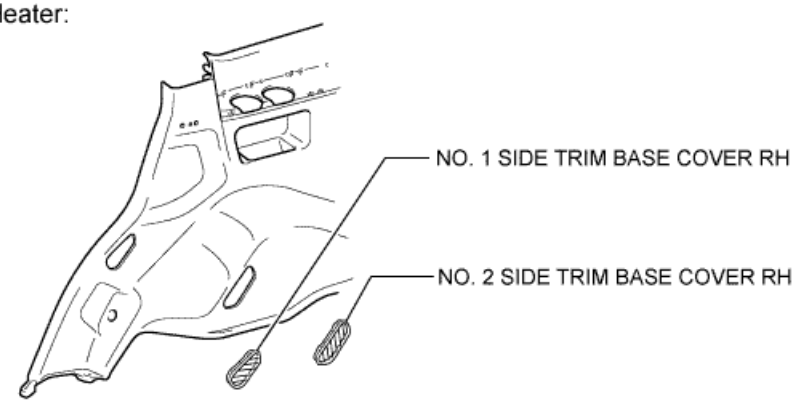

● Non-reusable part

w/ Rear No. 2 Seat, for Face to Face Seat Type:

w/o Rear No. 2 Seat:

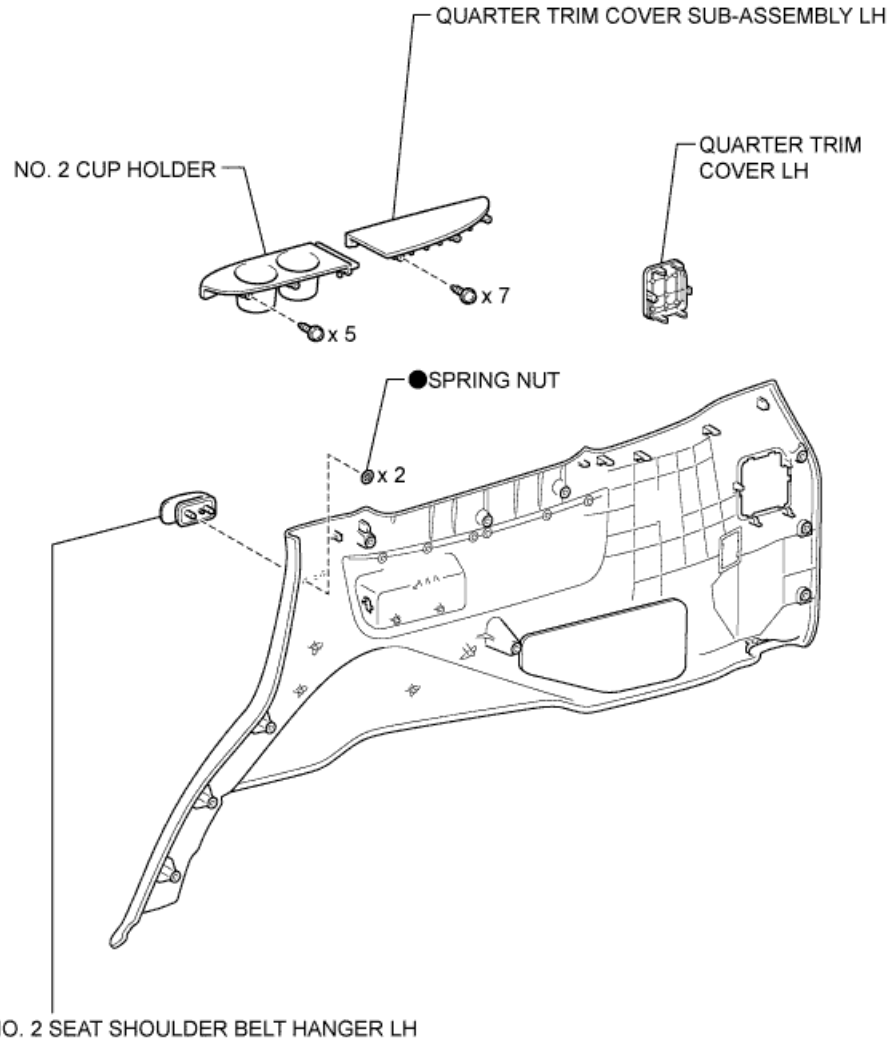


● Non-reusable part

T

w/ Rear No. 2 Seat, for Face to Face Seat Type:


w/o Rear No. 2 Seat:

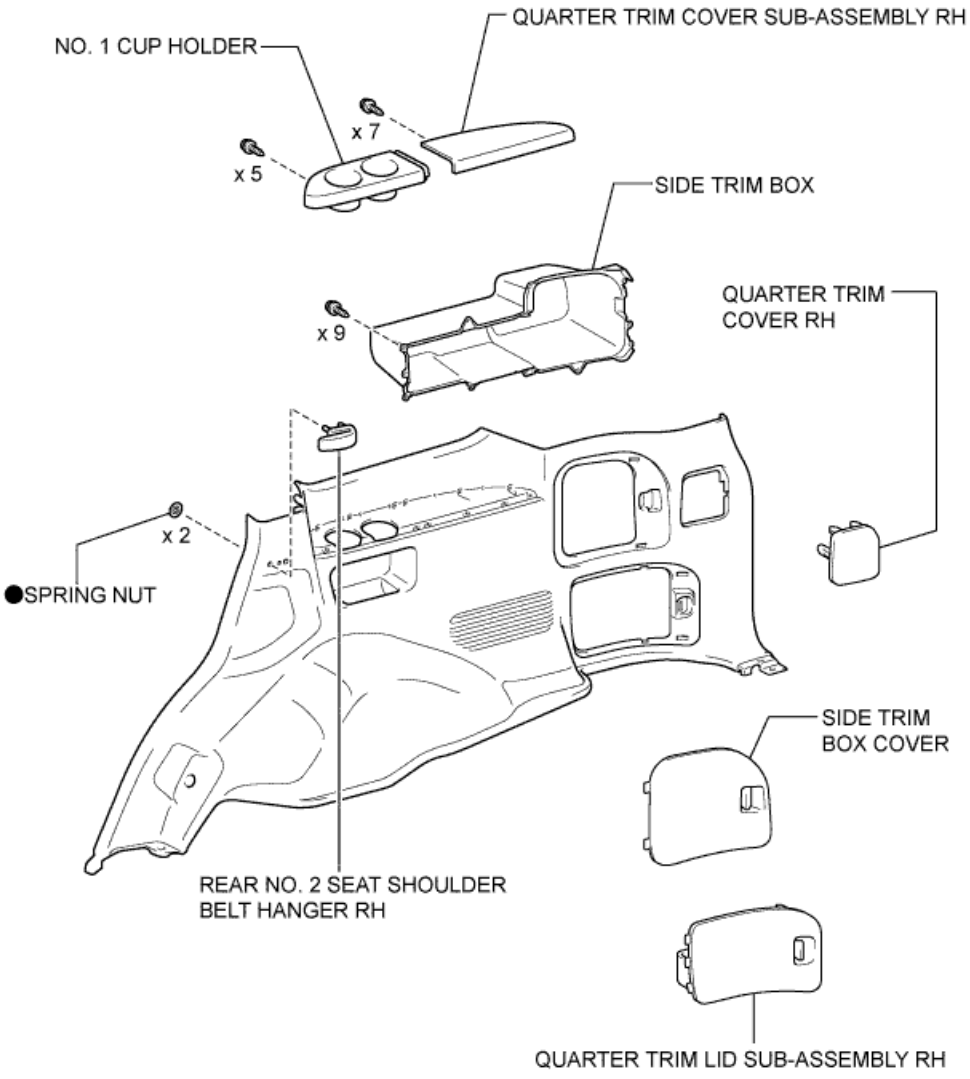

● Non-reusable part

T


w/ Tonneau Cover:

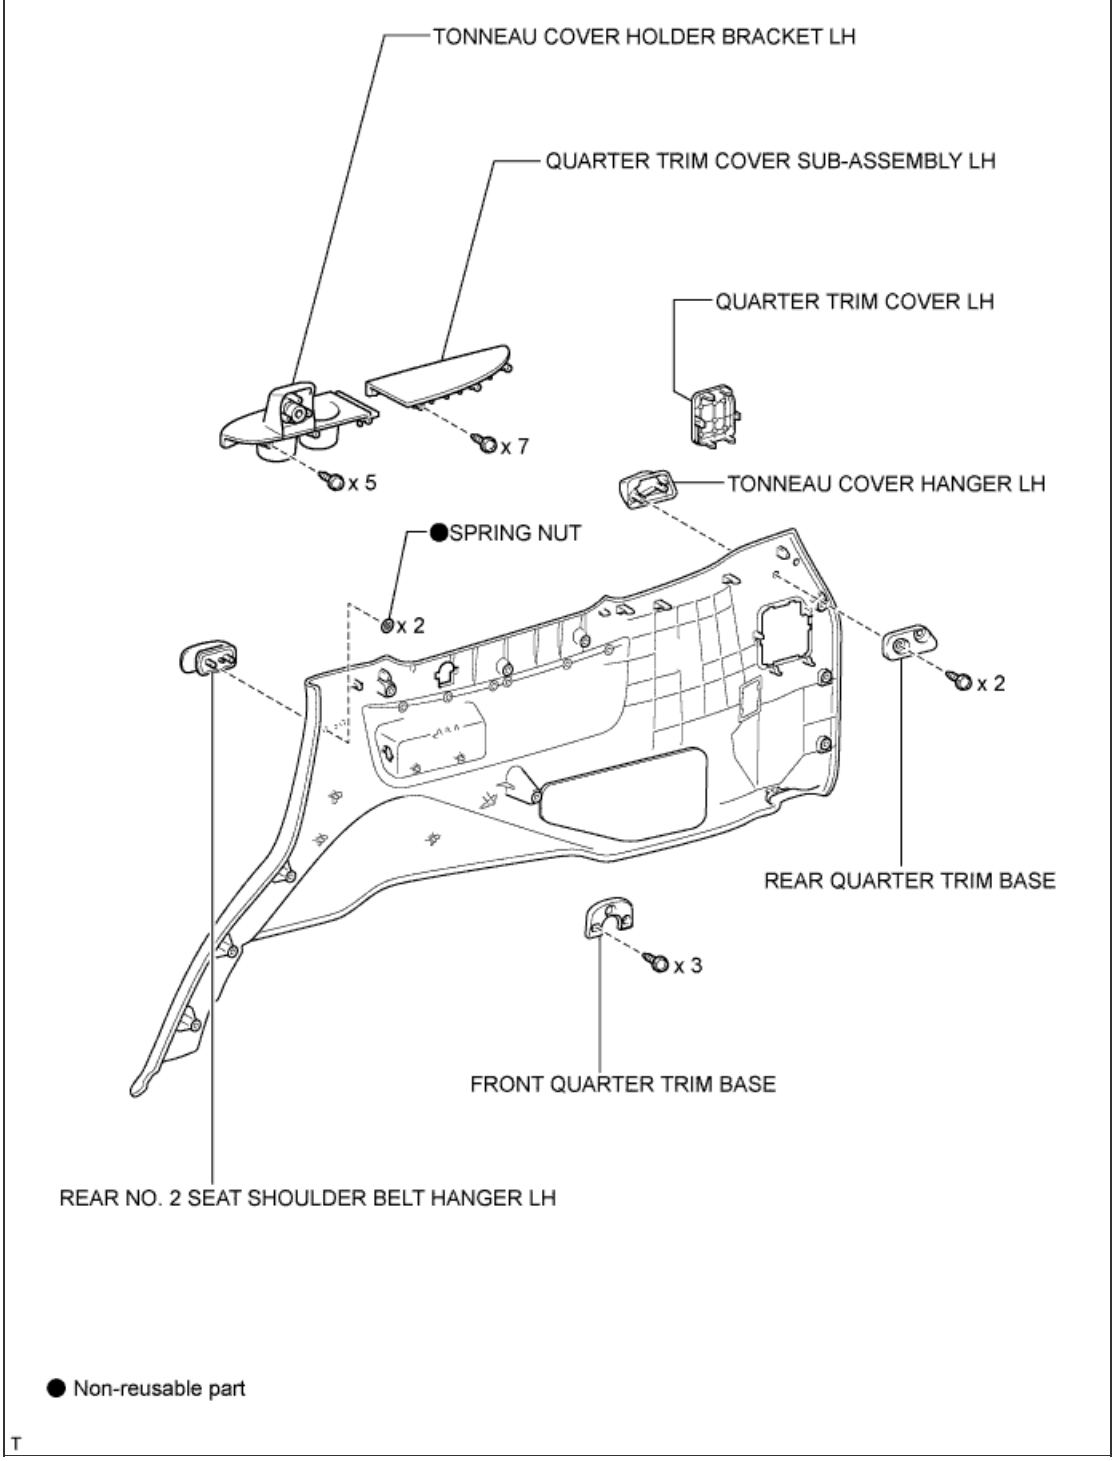

● Non-reusable part


T


w/ Tonneau Cover:





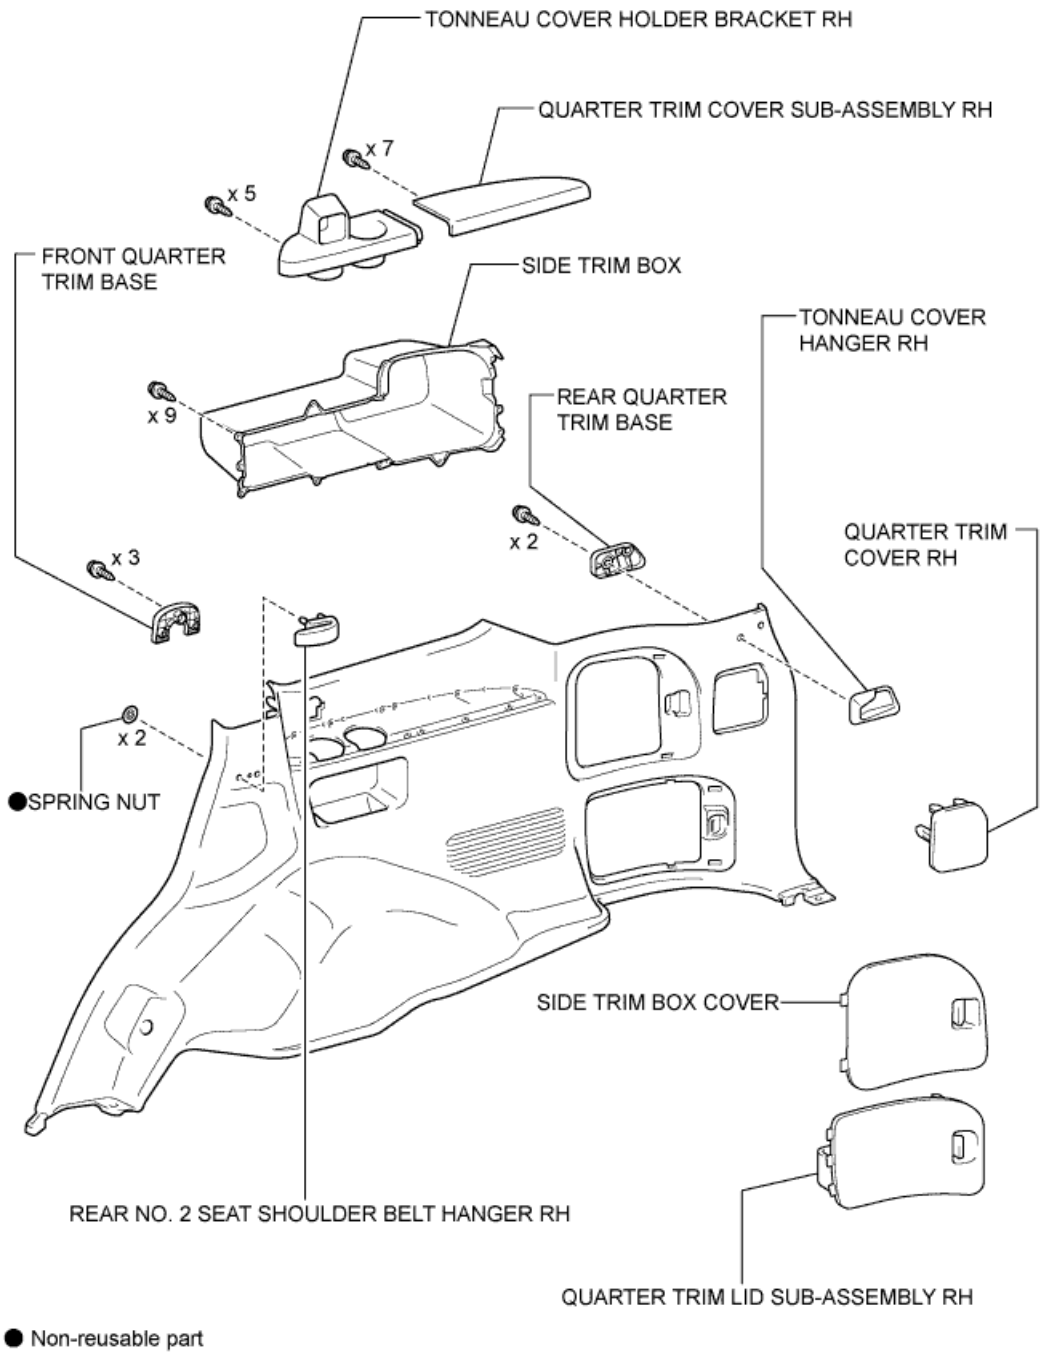


● Non-reusable part


T

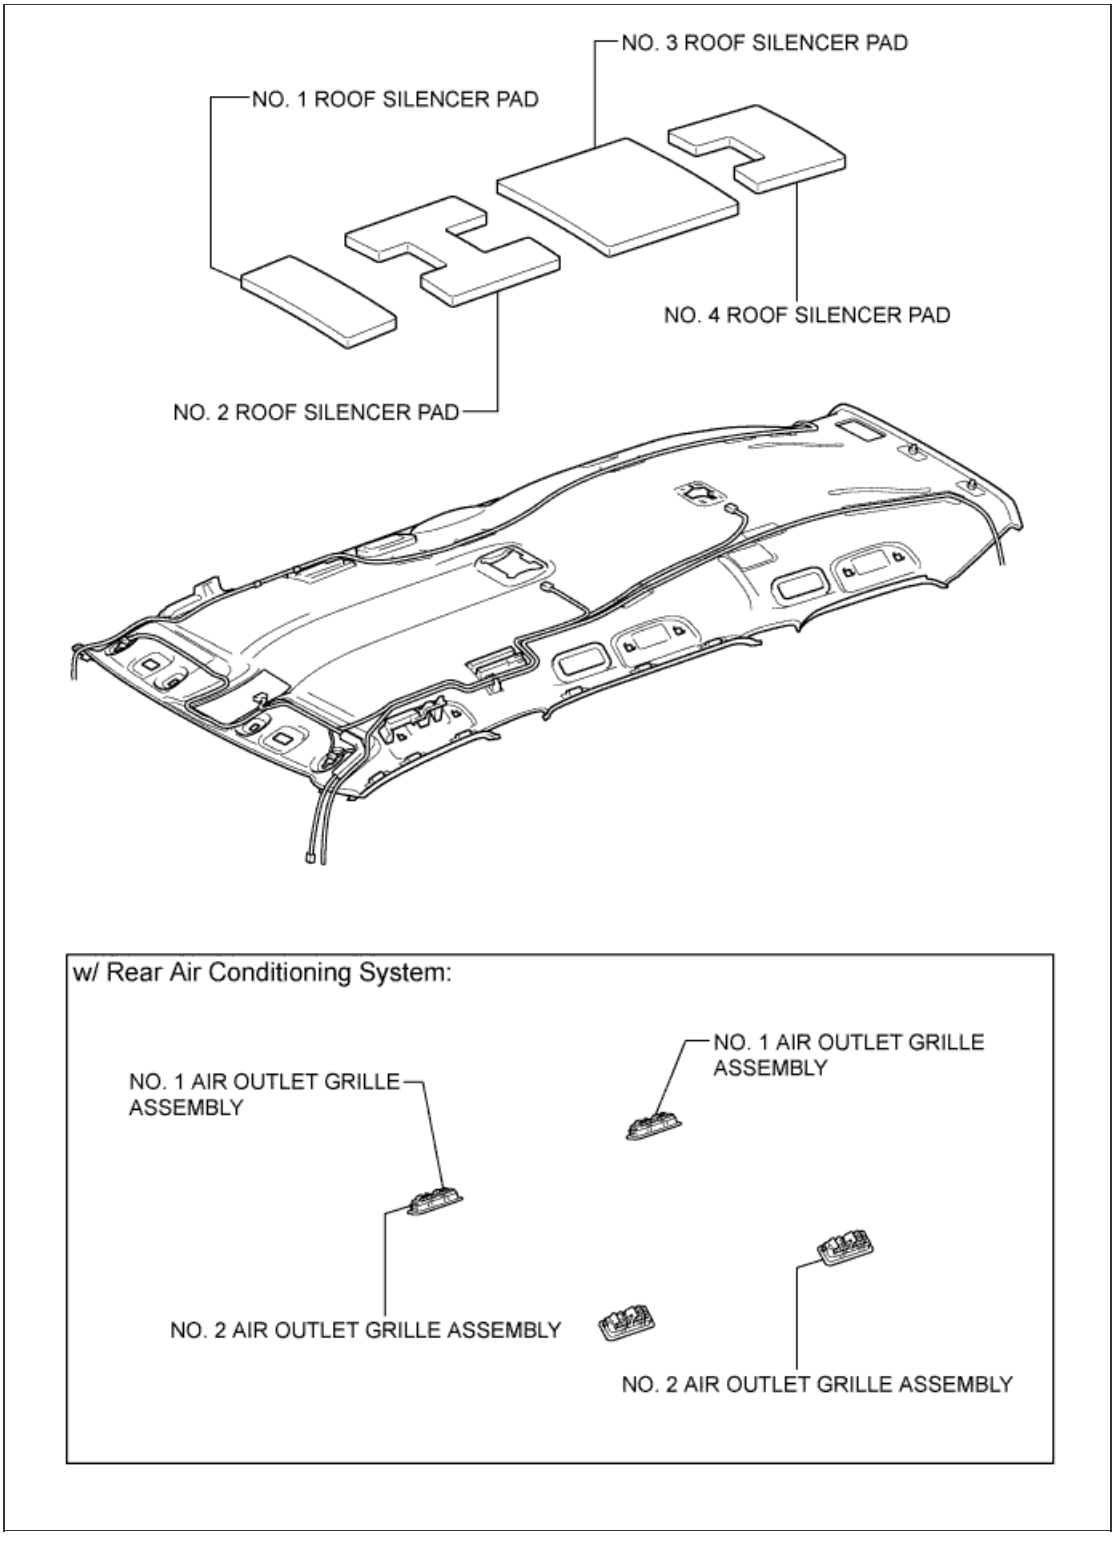
NO. 3 ROOF SILENCER PAD
NO. 1 ROOF SILENCER PAD
NO. 4 ROOF SILENCER PAD
NO. 2 ROOF SILENCER PAD
w/ Rear Air Conditioning System:
NO. 1 AIR OUTLET GRILLE ASSEMBLY
NO. 1 AIR OUTLET GRILLE ASSEMBLY
NO. 2 AIR OUTLET GRILLE ASSEMBLY
NO. 2 AIR OUTLET GRILLE ASSEMBLY

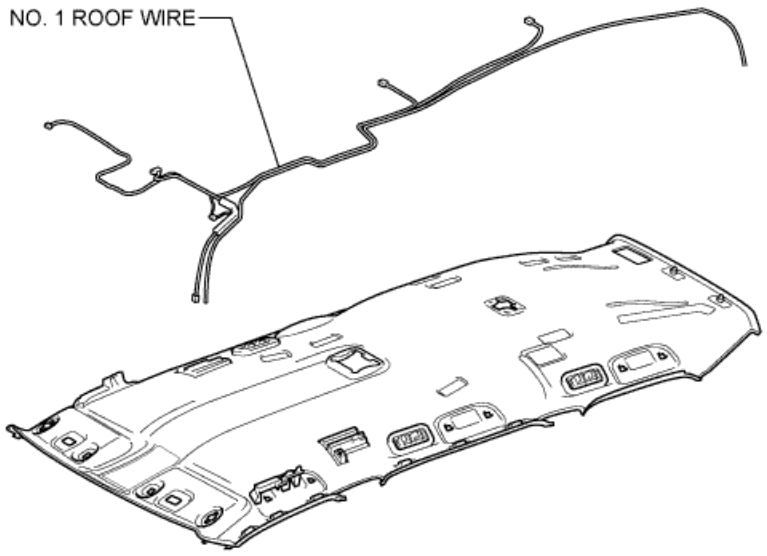

w/ EC Mirror:  	for LHD, w/ Rain Sensor:  	for RHD, w/ Rain Sensor: 
for LHD, w/ Rain Sensor, w/ EC Mirror:  	for RHD, w/ Rain Sensor, w/ EC Mirror:  	

T

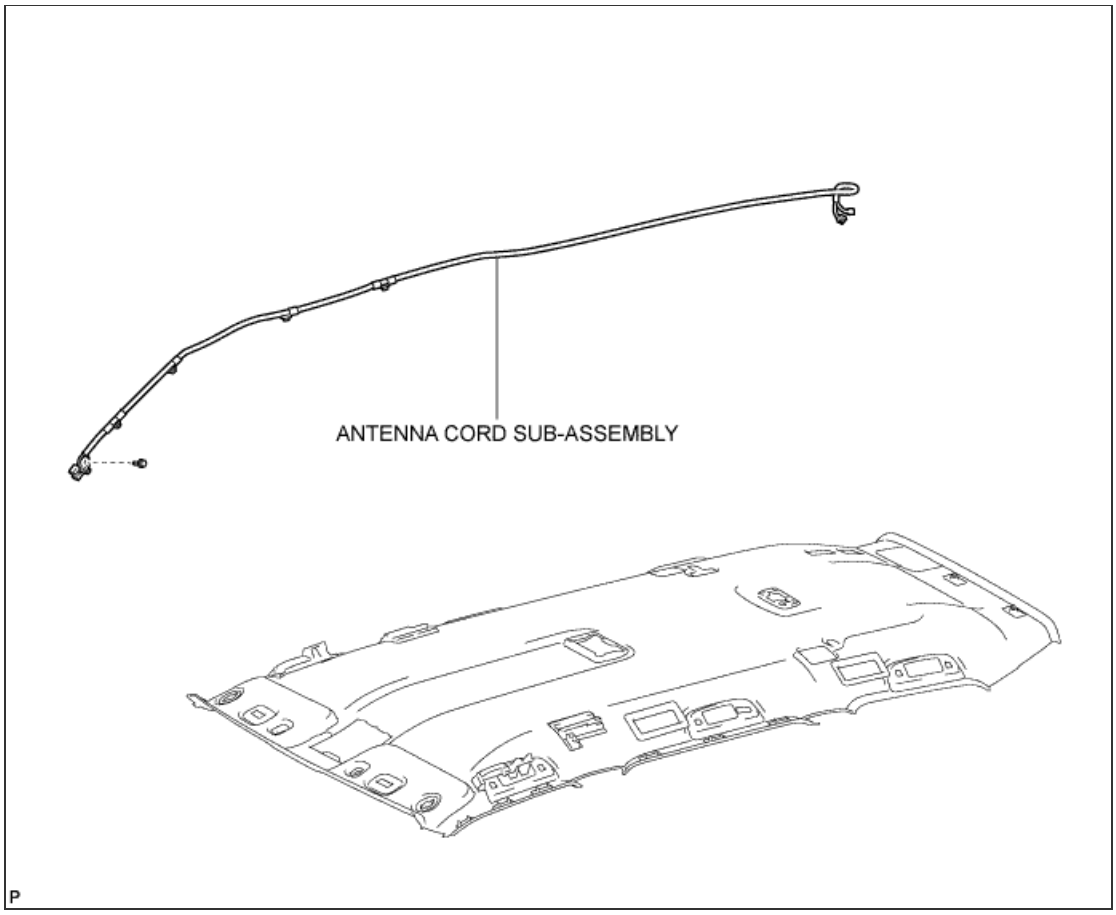
ANTENNA CORD SUB-ASSEMBLY
P

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

a. Remove the tonneau cover.

3. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

5. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).


6. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

7. REMOVE FRONT DOOR SCUFF PLATE LH

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

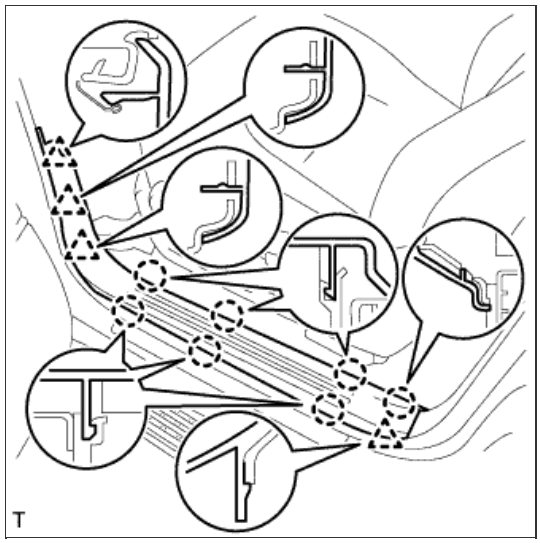

8. REMOVE FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

9. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.

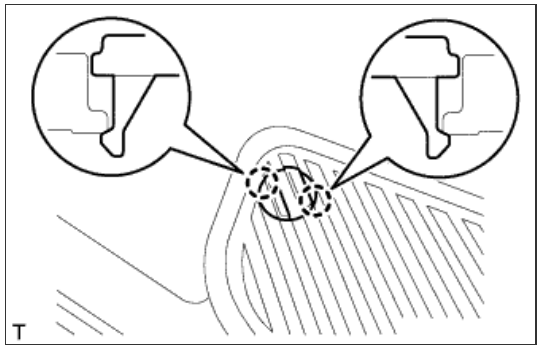


a. Detach the 2 claws and remove the step cover.

10. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

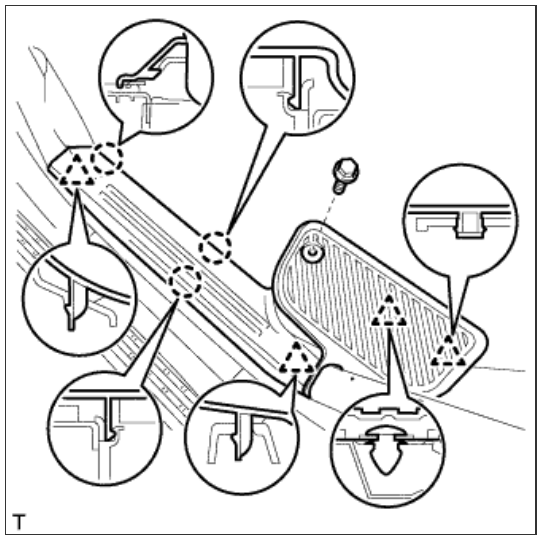


11. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

12. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

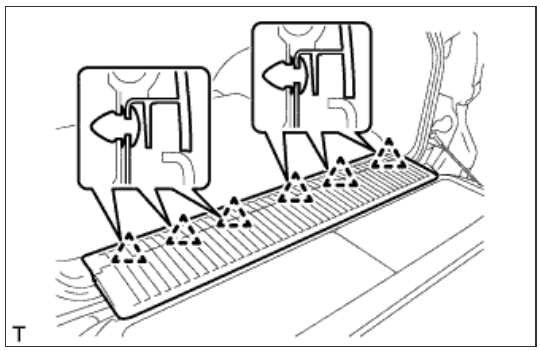


13. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY

HINT:


Use the same procedure to remove the front assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

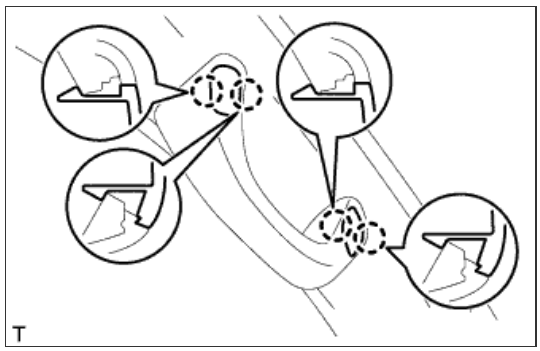

b. Remove the 2 bolts.


c. Detach the 2 claws and remove the front assist grip.

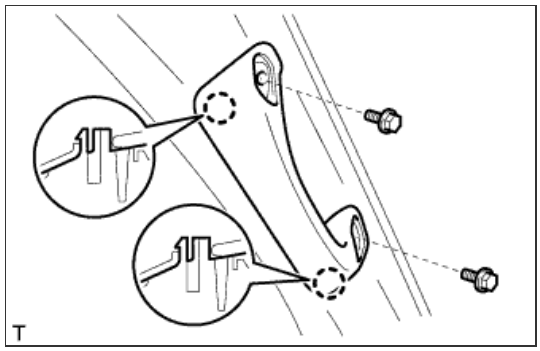

14. REMOVE FRONT PILLAR GARNISH LH

a. Detach the clip and 3 guides, and remove the front pillar garnish.

b. for 9 Speakers:
Disconnect the speaker connector and then remove the front pillar garnish.

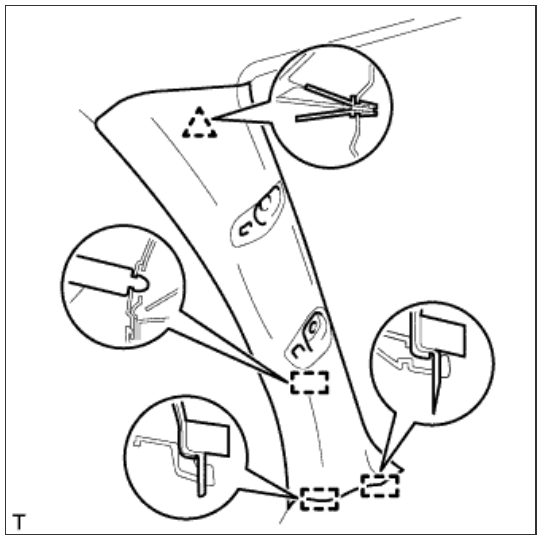


c. Protect the curtain shield airbag.

i. horoughly cover the airbag with a cloth or nylon sheet and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

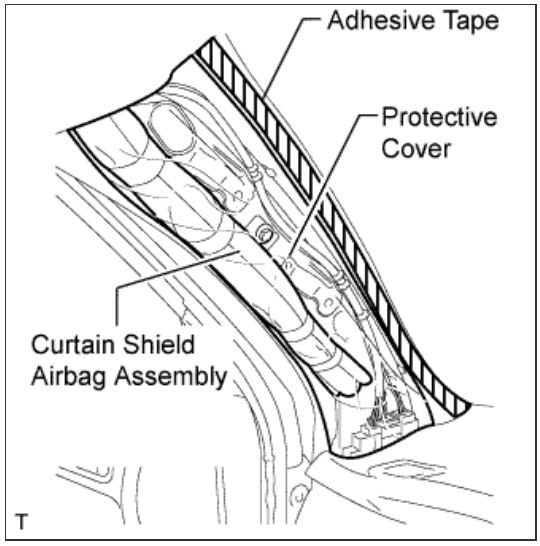

15. REMOVE FRONT PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

16. REMOVE CENTER PILLAR GARNISH COVER LH

HINT:

- **for Manual Seat:**
  hen removing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  hen removing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Detach the 2 clips and 2 guides, and remove the cover.

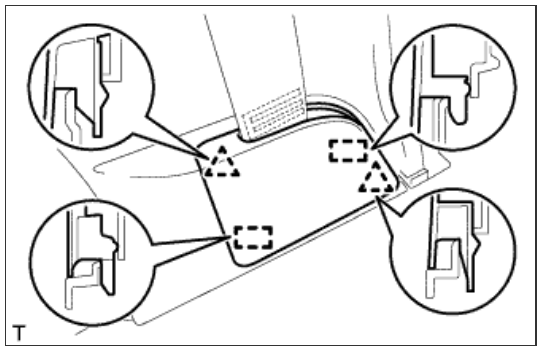

17. REMOVE CENTER PILLAR GARNISH COVER RH

HINT:


Use the same procedures described for the LH side.

18. REMOVE CENTER LO ER PILLAR GARNISH LH


HINT:

- **for Manual Seat:**
  hen removing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  hen removing the center lower pillar garnish, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Remove the bolt and seat belt anchor.

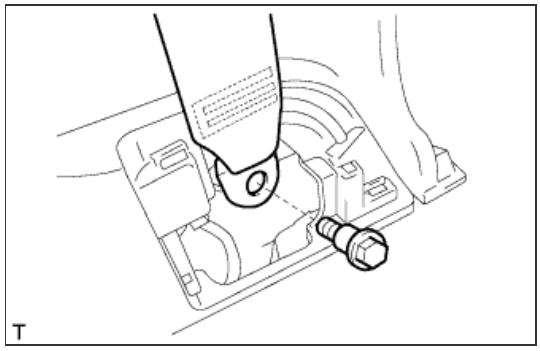

b. Detach the 2 claws and 7 clips, and remove the center lower pillar garnish.

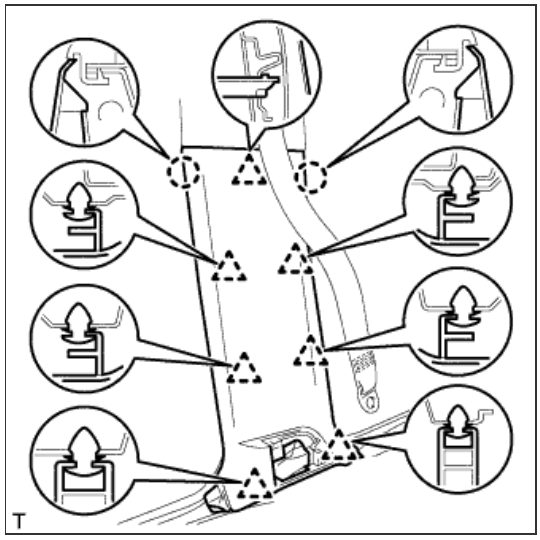

19. REMOVE CENTER LO ER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

20. REMOVE REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to remove the rear assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

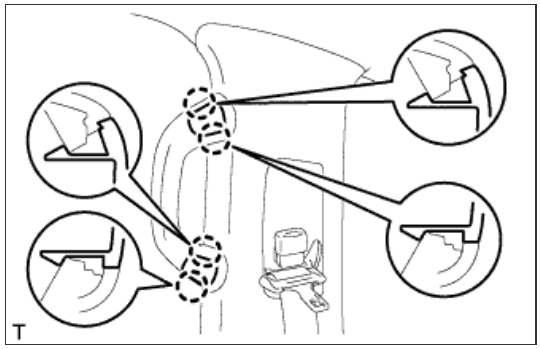

b. Remove the 2 bolts.

c. Detach the 2 claws and remove the rear assist grip.

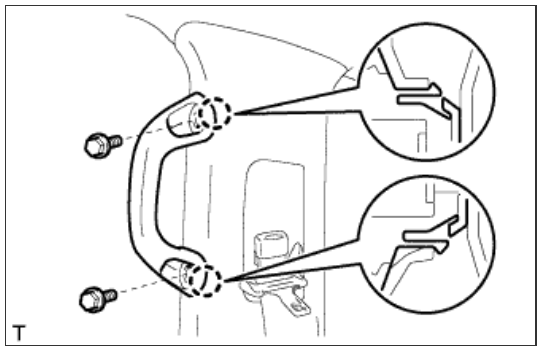


21. REMOVE CENTER PILLAR GARNISH LH

a. Remove the bolt.

b. Detach the 2 clips and 2 guides.

c. Pass the seat belt anchor through the center pillar garnish, and remove the center pillar garnish.

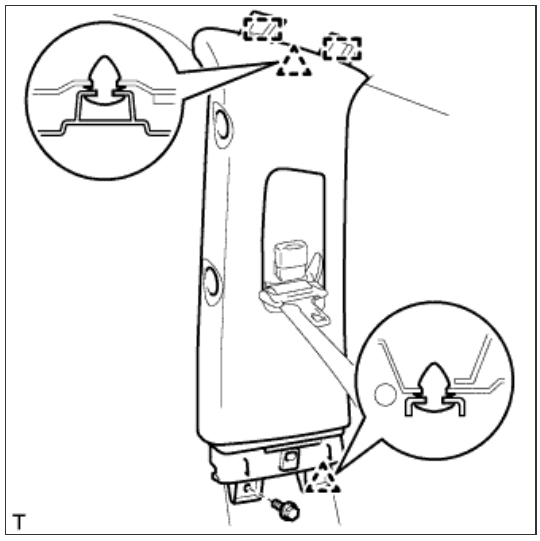

22. REMOVE CENTER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

23. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

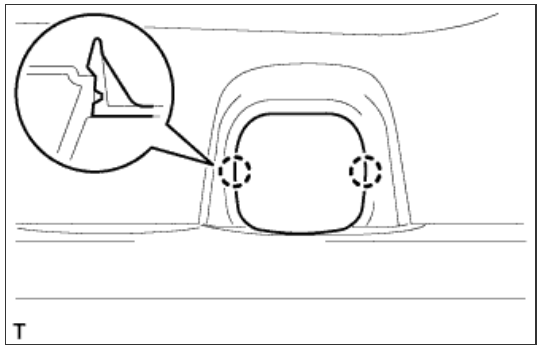

24. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


ape the screwdriver tip before use.

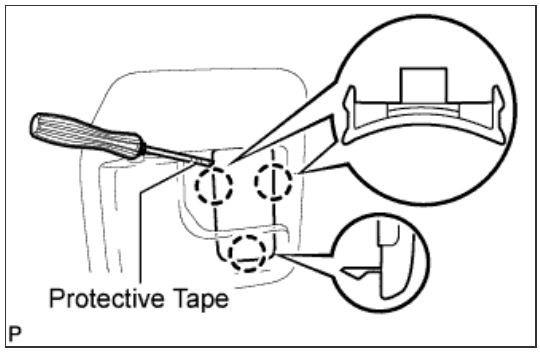


25. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front uarter trim panel, operate the reclining ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

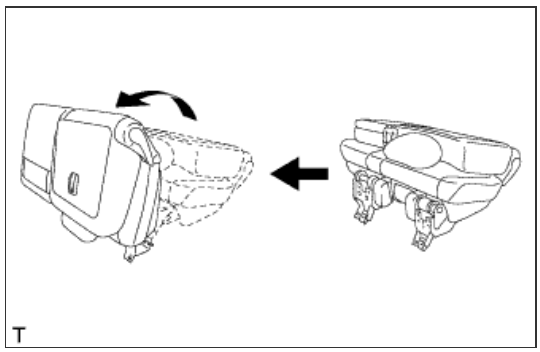


a. Detach the 3 claws and remove the cover.

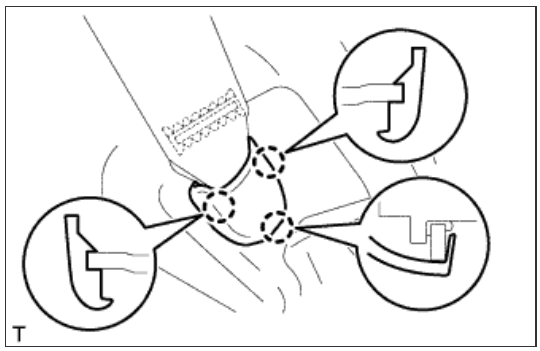

b. Remove the bolt and rear No. 1 seat belt anchor.

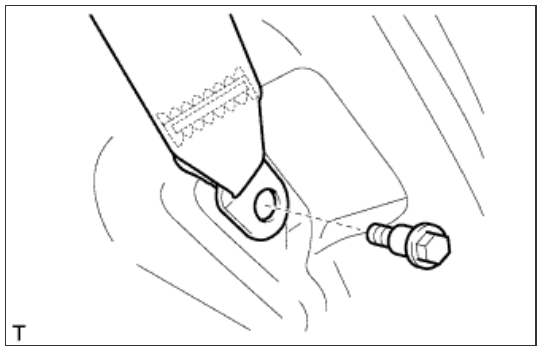

c. w/ Rear No. 2 Seat, except Face to Face Seat ype:
Remove the bolt and rear No. 2 seat belt anchor.

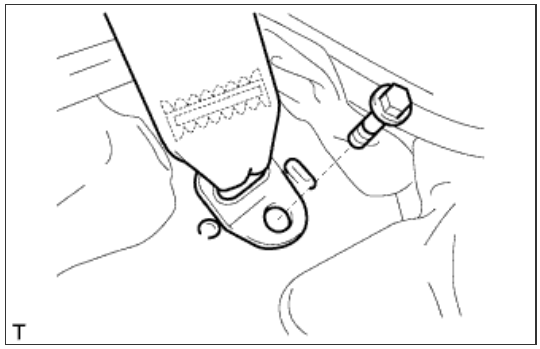


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the uarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the uarter trim panel.

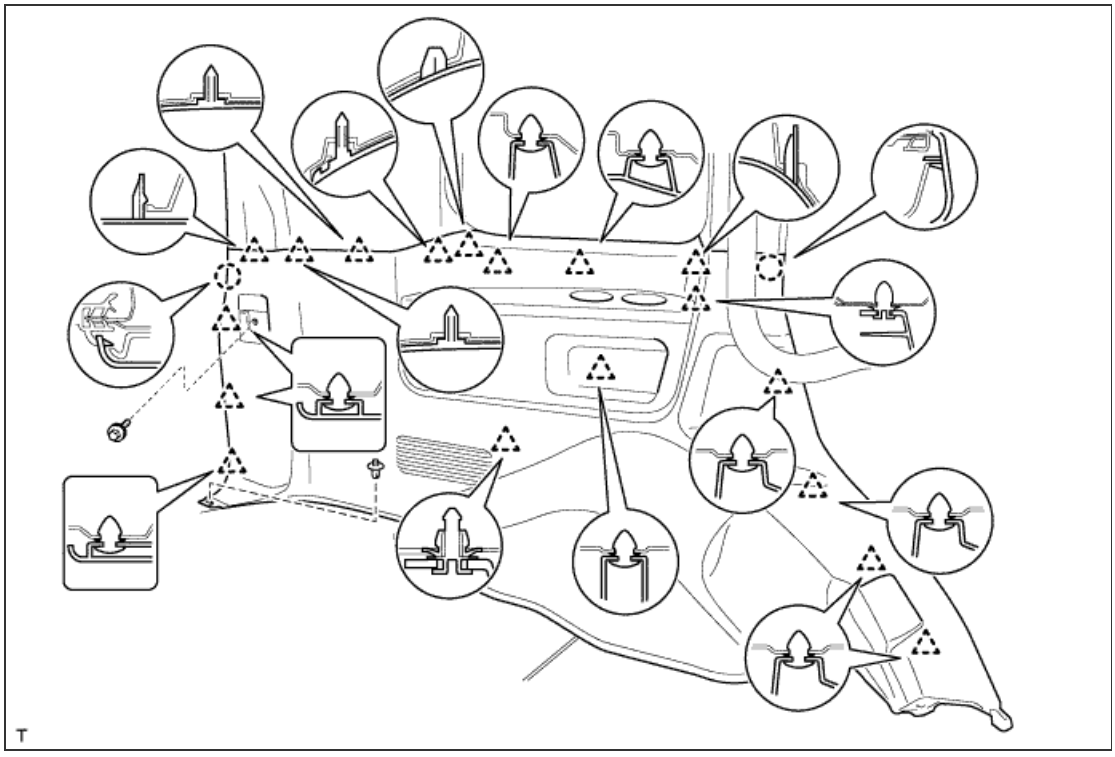

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the uarter trim panel.

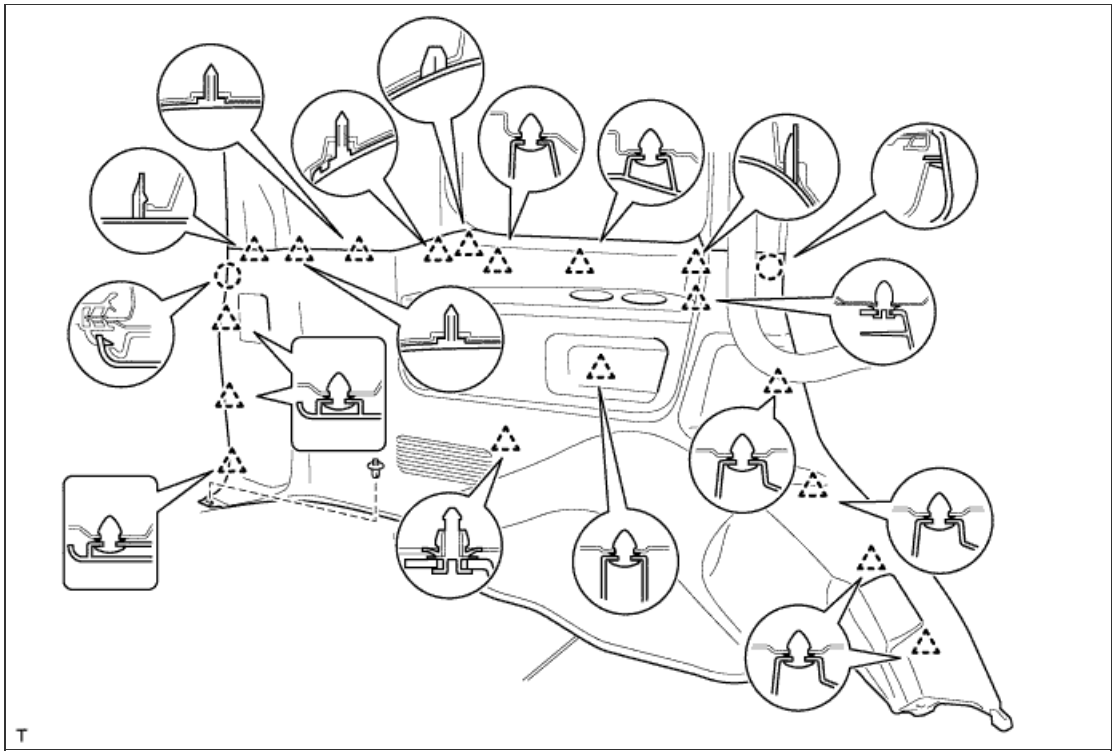

f. w/ onneau Cover:

i. Remove the screw and clip.


ii. Detach the 18 clips and 2 claws, and remove the uarter trim panel.

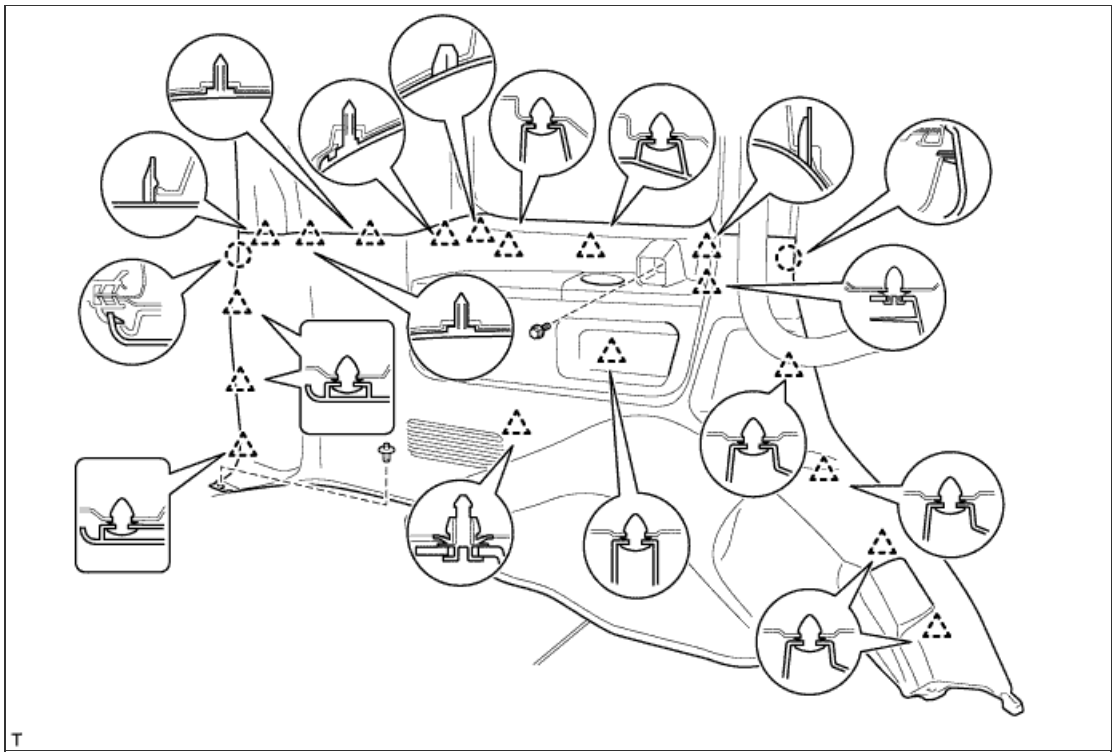


26. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:


When removing the front uarter trim panel, operate the reclining ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

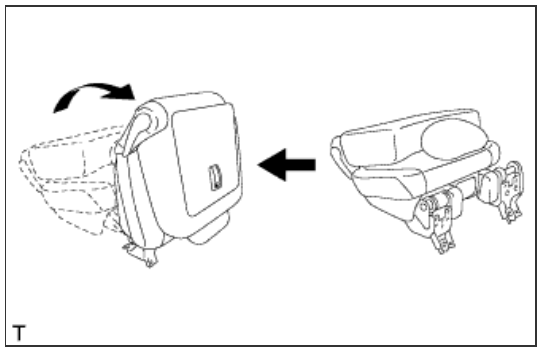

a. Detach the 3 claws and remove the cover.

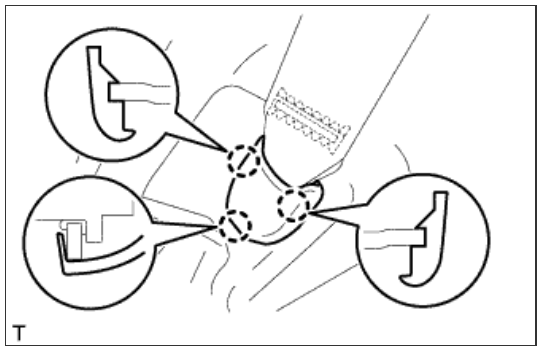


b. Remove the bolt and rear No. 1 seat belt anchor.

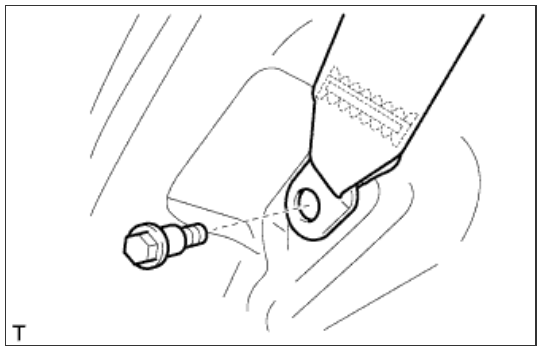


c. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Detach the 3 claws and remove the cover.

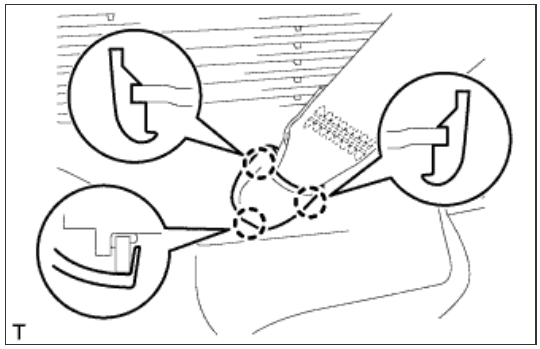

ii. Remove the bolt and rear No. 2 seat belt anchor.

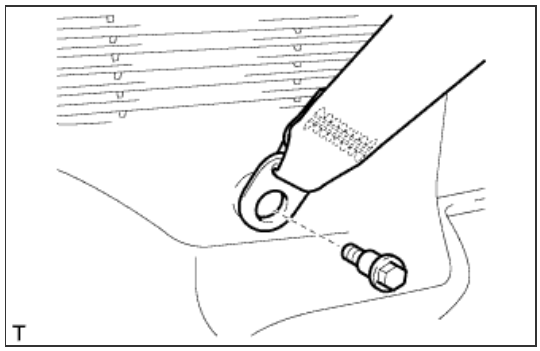


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 16 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the uarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the uarter trim panel.

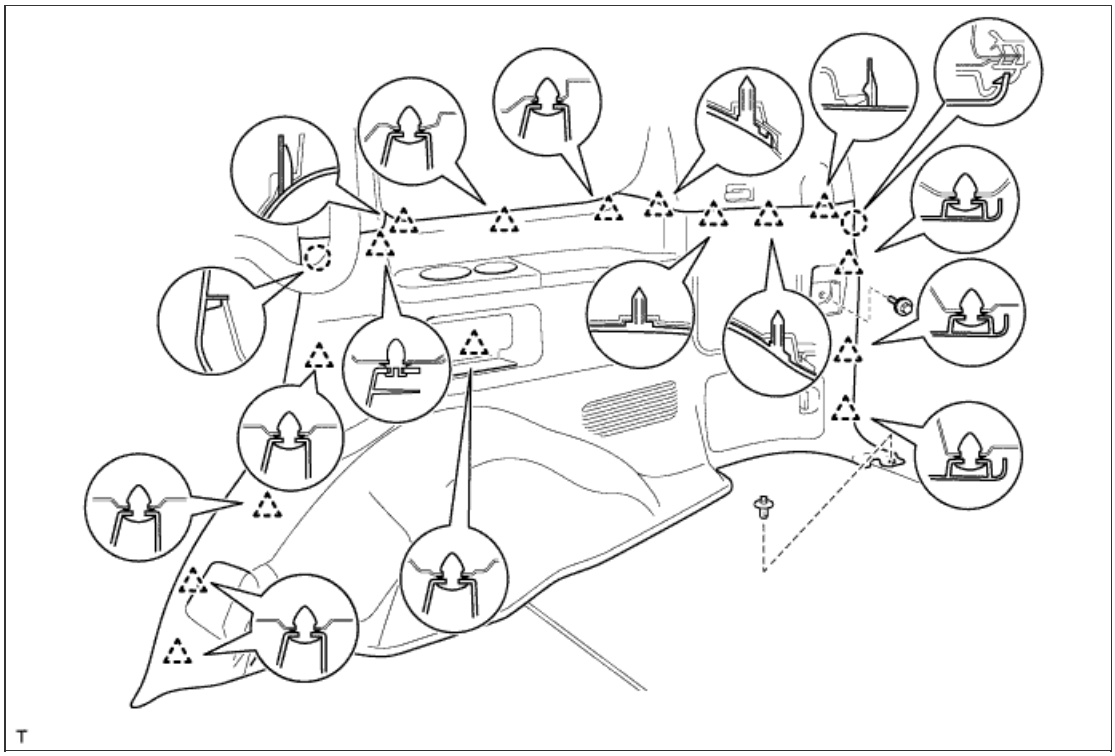

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.


ii. Detach the 16 clips and 2 claws, and remove the uarter trim panel.

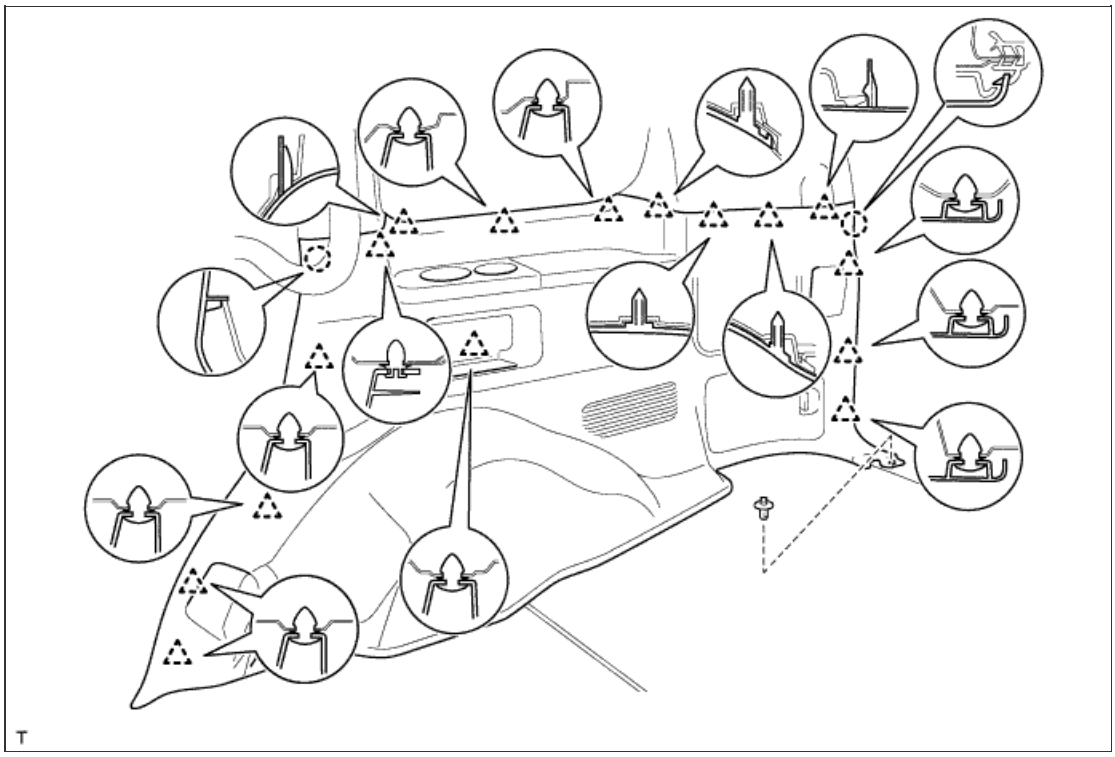

f. w/ onneau Cover:

i. Remove the screw and clip.

ii. Detach the 16 clips and 2 claws, and remove the uarter trim panel.

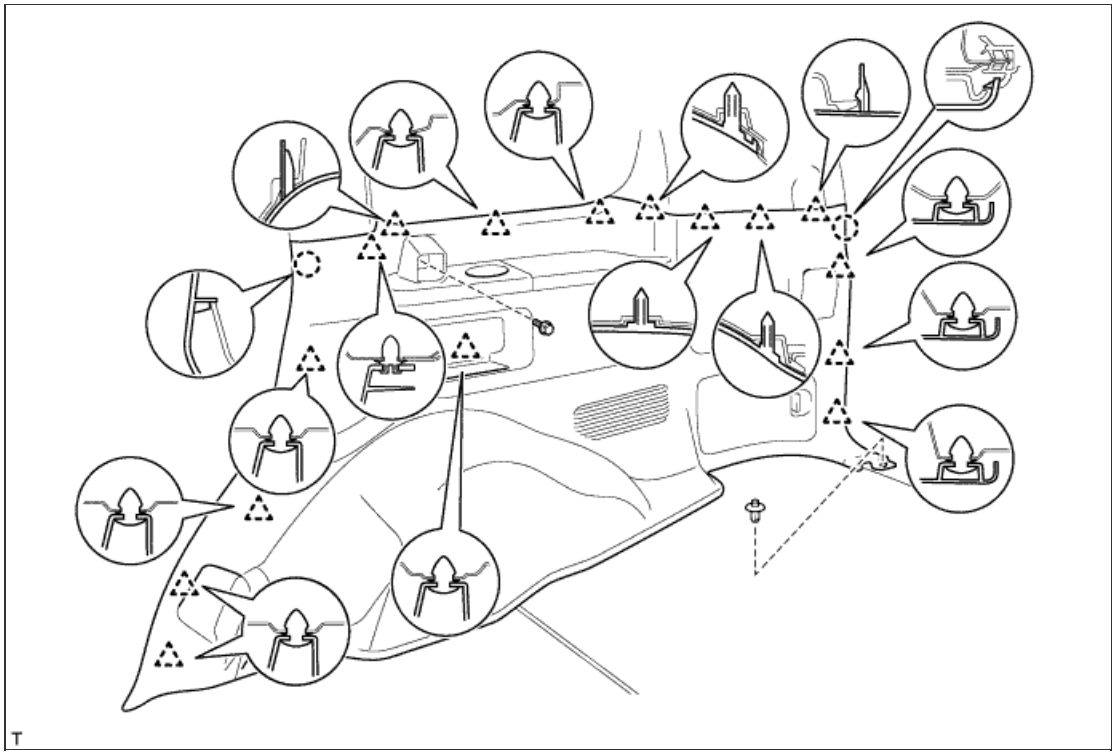


27. REMOVE REAR FRONT QUARTER TRIM GARNISH LH

a. Remove the screw.

b. Detach the clip and 2 guides.

c. Pass the seat belt anchor through the uarter trim garnish, and remove the uarter trim garnish.

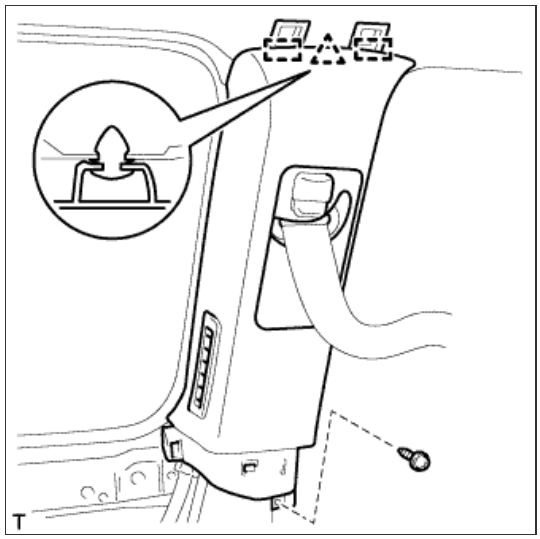

28. REMOVE REAR FRONT QUARTER TRIM GARNISH RH

HINT:

Use the same procedures described for the LH side.

29. REMOVE REAR UPPER PILLAR GARNISH LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype:


i. Using a screwdriver, detach the 2 claws and open the seat belt shoulder anchor cover.

HINT:


ape the screwdriver tip before use.



ii. Remove the bolt and seat belt shoulder anchor.

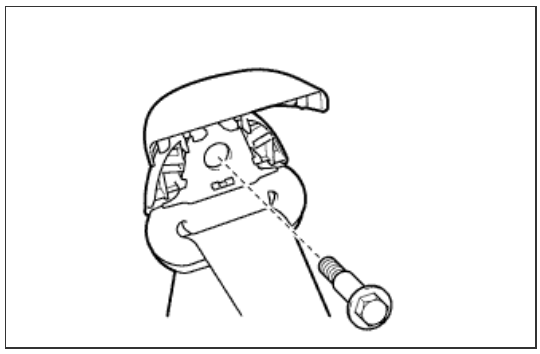

b. Detach the 5 clips and remove the rear upper pillar garnish.

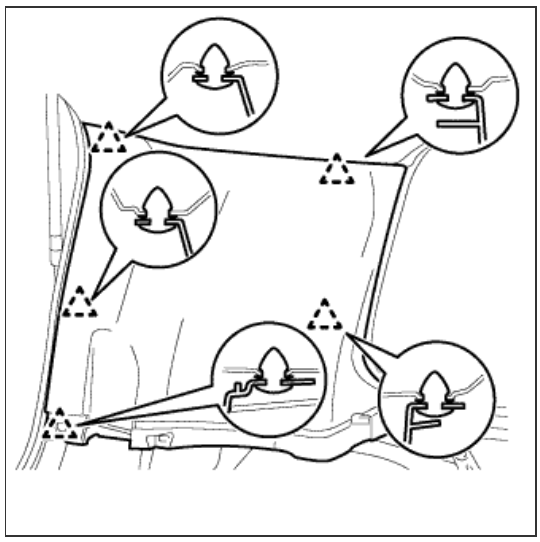

30. REMOVE REAR UPPER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

31. REMOVE MAP LIGHT ASSEMBLY (w/ Map Light)

a. Using a screwdriver, detach the 2 claws and open the 2 covers.


HINT:

ape the screwdriver tip before use.

b. Remove the 2 screws.

c. Detach the 2 clips and 2 guides.

d. Disconnect the connector and then remove the map light.

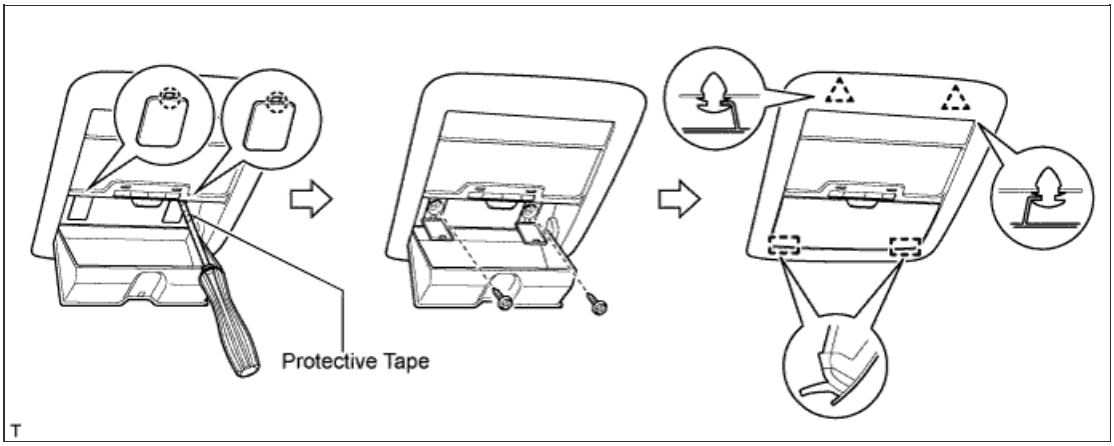


32. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

a. w/ ap Light:
Remove the No. 1 room light assembly.

i. Detach the 4 clips.

ii. Disconnect the connector and then remove the room light.

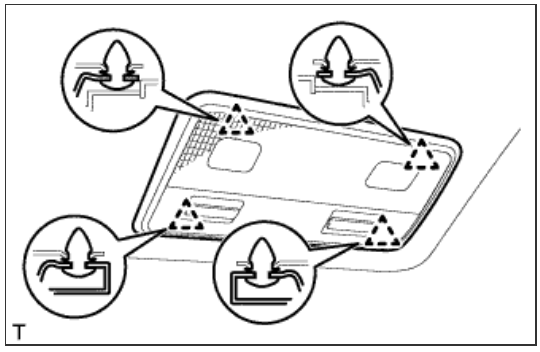


b. w/o ap Light:
Remove the No. 1 room light assembly.


i. Using a screwdriver, detach the 4 claws and remove the room light lens.

HINT:

ape the screwdriver tip before use.

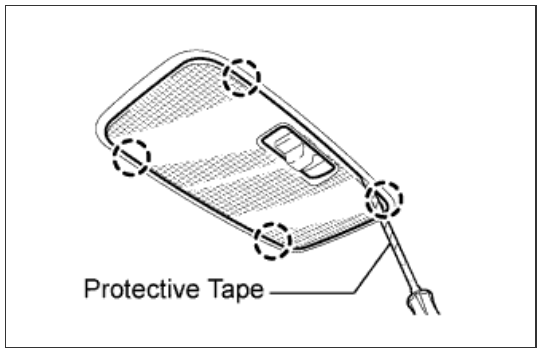


ii. Remove the 2 covers.

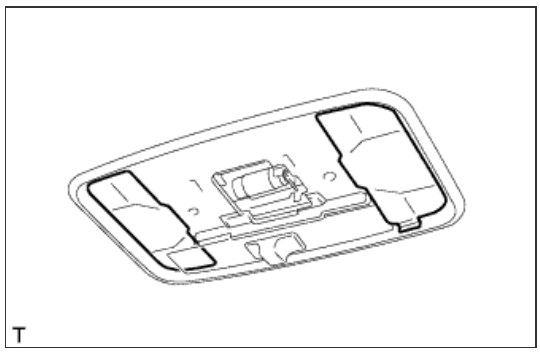


iii. Using a screwdriver, push the 2 levers in the direction of the arrows in the illustration, and detach the 2 claws labeled A.

iv. Detach the 2 claws labeled B.

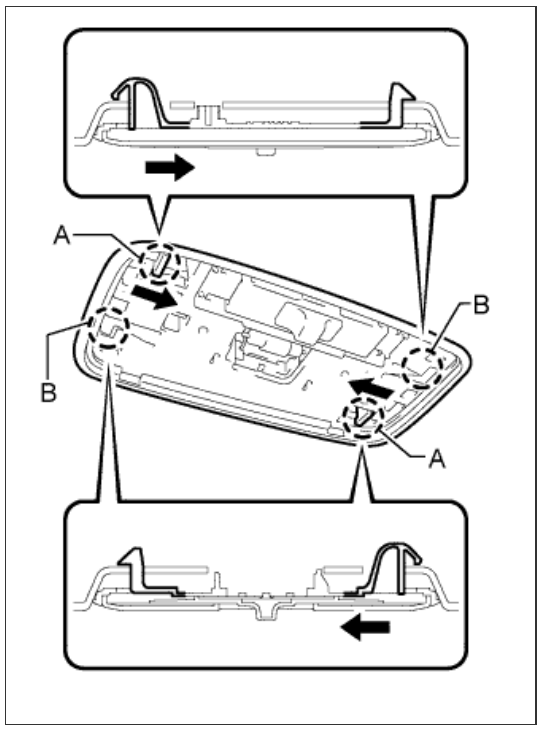

v. Detach the 4 claws and remove the room light from the room light switch base.

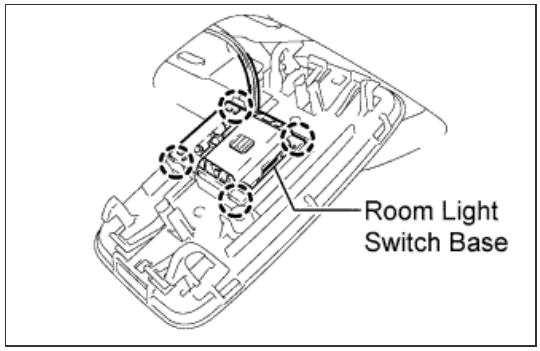


33. REMOVE NO. 2 ROOM LIGHT ASSEMBLY


a. Using a screwdriver, detach the 4 claws and remove the room light lens.

HINT:

ape the screwdriver tip before use.

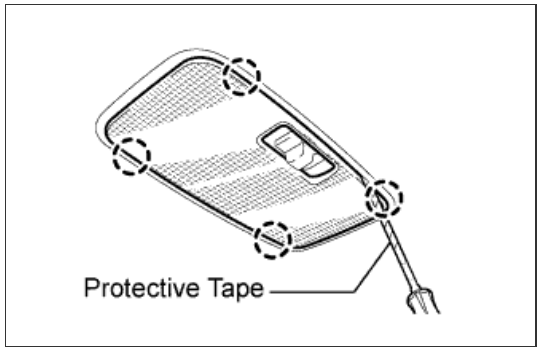


b. Remove the 2 covers.

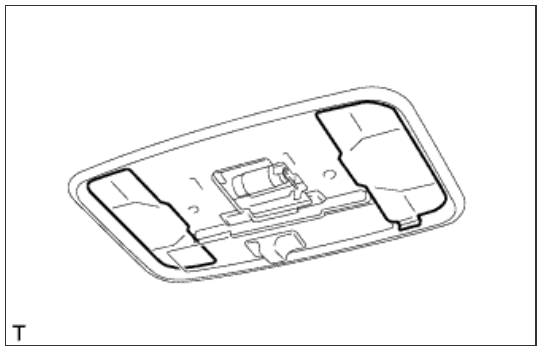


c. Using a screwdriver, push the 2 levers in the direction of the arrows in the illustration, and detach the 2 claws labeled A.

d. Detach the 2 claws labeled B.

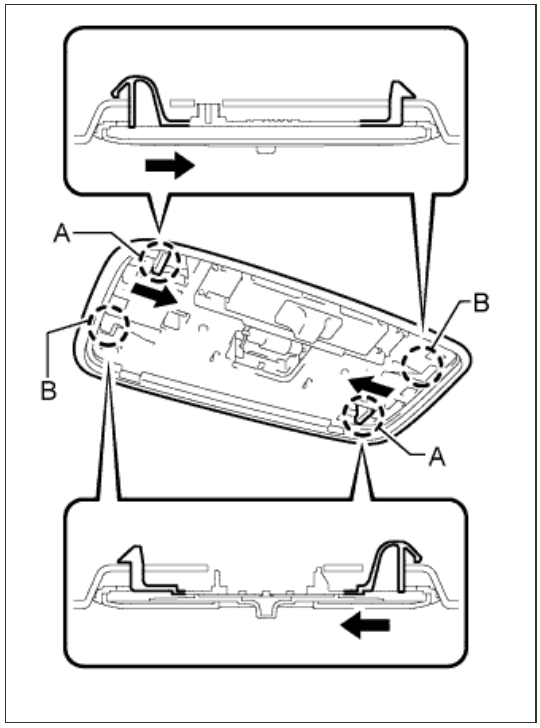

e. Detach the 4 claws and remove the room light from the room light switch base.

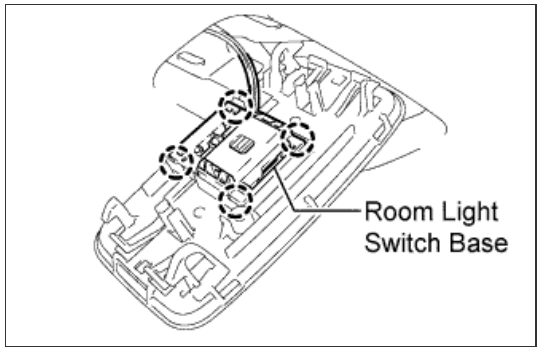


34. REMOVE VISOR BRACKET COVER

HINT:


Use the same procedure to remove the visor bracket cover on the other side.

a. Detach the 4 claws and remove the visor bracket cover.

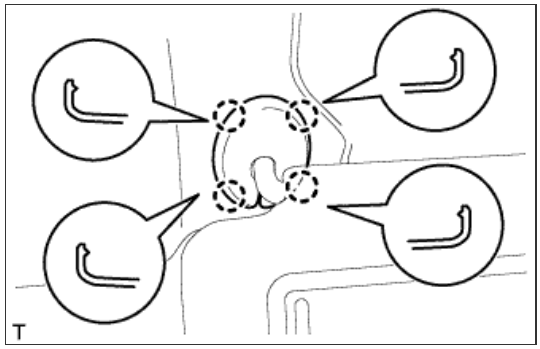

35. REMOVE VISOR ASSEMBLY LH

a. Remove the 2 screws and visor.

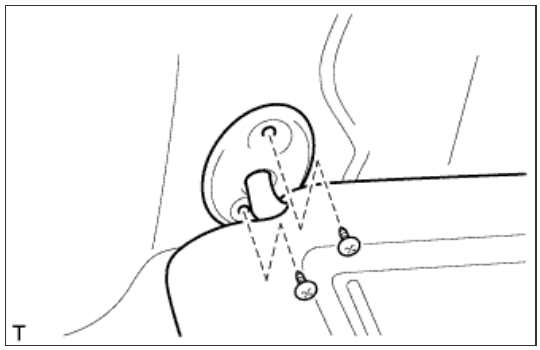

36. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


37. REMOVE VISOR HOLDER

HINT:

Use the same procedure to remove the visor holder on the other side.

a. urn the visor holder approximately 45° and pull it out as shown in the illustration.

b. Detach the 2 claws and remove the visor holder.

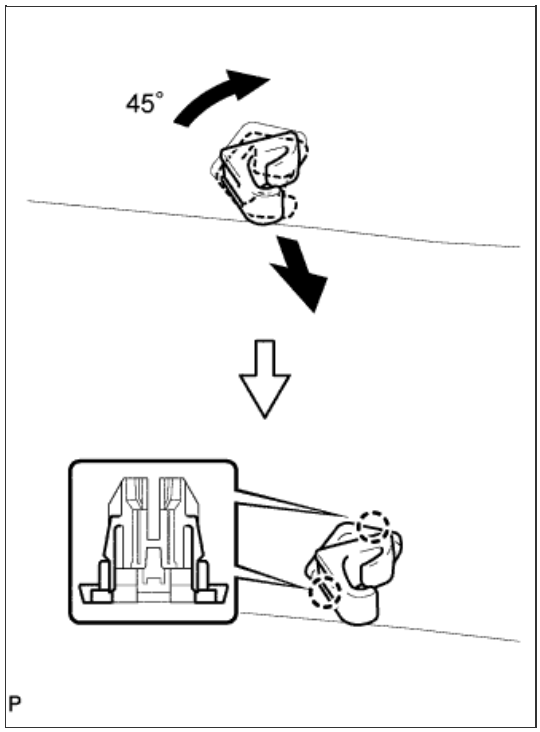


38. REMOVE CENTER VISOR ASSEMBLY LH (w/ Sub Visor)

a. Using a screwdriver, pry off the cover to detach the 2 clips and remove the center visor.

HINT:

ape the screwdriver tip before use.

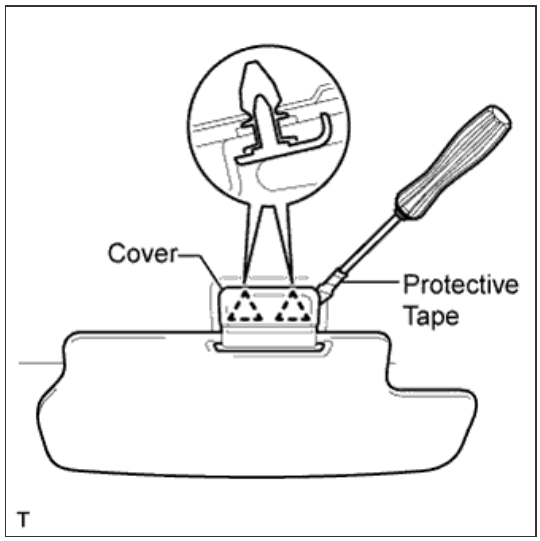


39. REMOVE CENTER VISOR ASSEMBLY RH (w/ Sub Visor)

HINT:

Use the same procedures described for the LH side.


40. REMOVE INNER REAR VIE MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Detach the 2 claws and remove the cover as shown in the illustration.

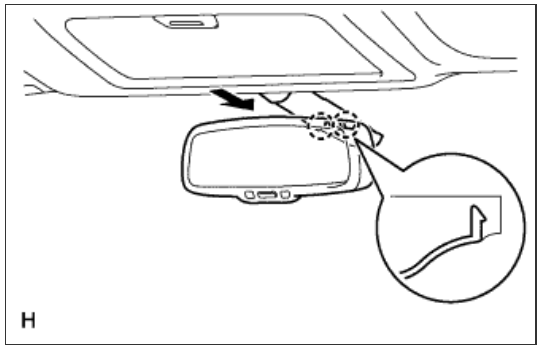

41. REMOVE RAIN SENSOR COVER (w/ Rain Sensor)


a. Slide the No. 2 cover in the direction of the arrow labeled (1).

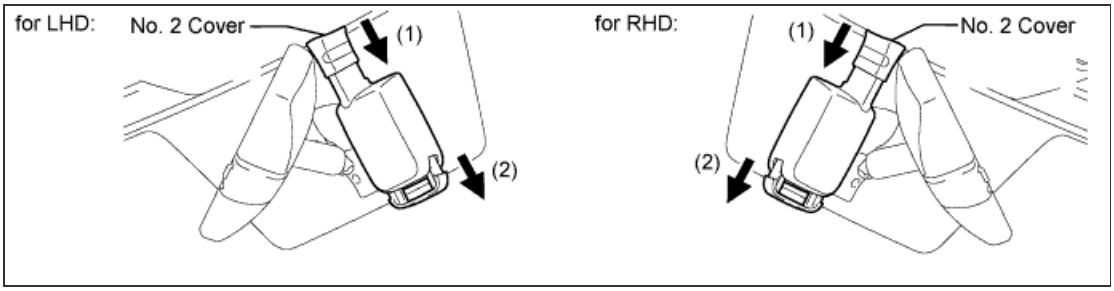

b. Pull the stopper in the direction of the arrow labeled (2) to remove the No. 2 cover.

42. REMOVE SEAT BELT ANCHOR COVER (for 3 Person Seat Type Rear No. 2 Seat)

a. Detach the 4 clips and 4 guides, and remove the seat belt anchor cover.

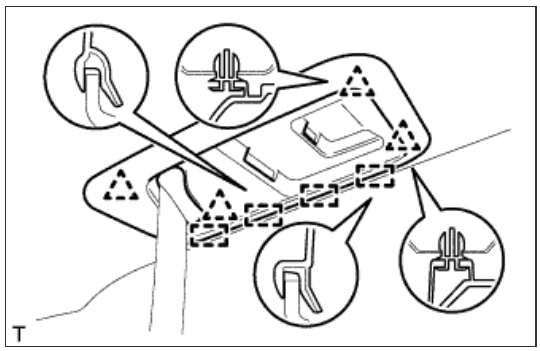

43. REMOVE ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to remove the assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.

c. Remove the 2 clips from the vehicle body.

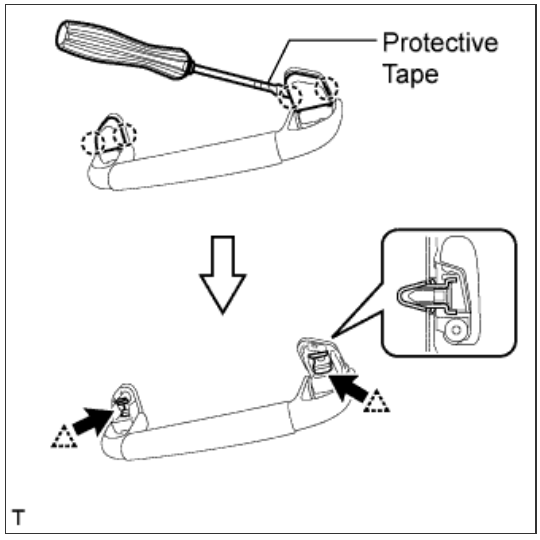

44. REMOVE NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype or w/o Rear No. 2 Seat:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

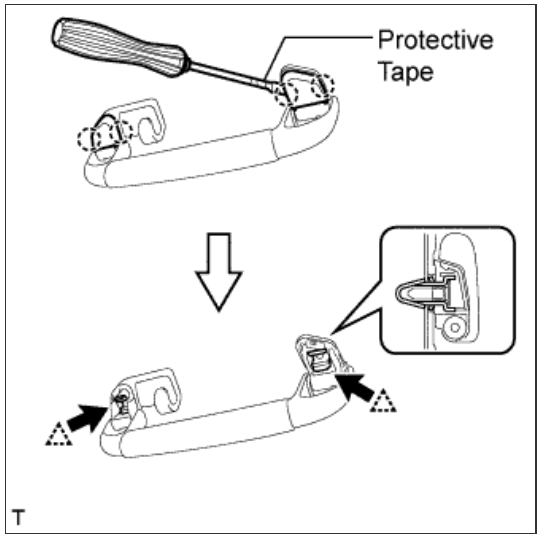

b. w/ Rear No. 2 Seat, for Face to Face Seat ype:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

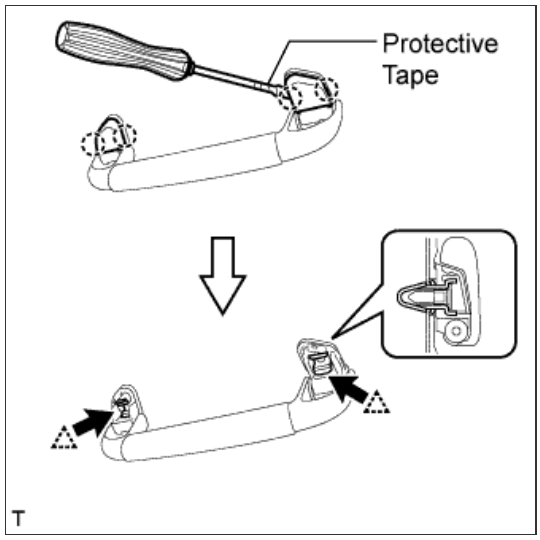

45. REMOVE NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

46. REMOVE 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat except Face to Face Seat Type)

HINT:

Use the same procedure to remove the 3rd seat assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.


c. Remove the 2 clips from the vehicle body.

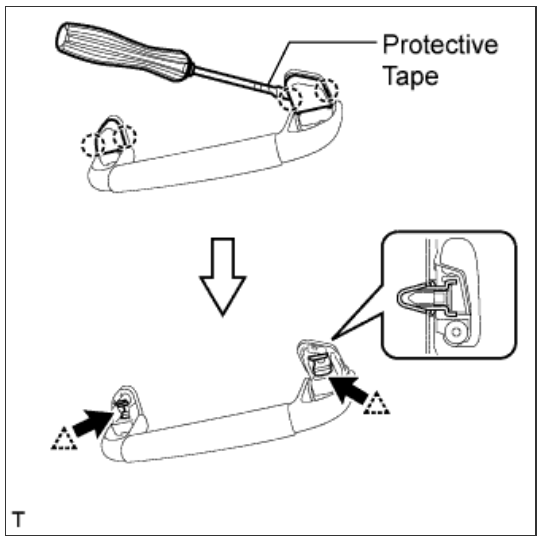


47. REMOVE ROOF HEADLINING ASSEMBLY

HINT:


- **for Manual Seat:**
  hen removing the roof headlining, move the front seat and rear No. 1 seat to the position shown in the illustration.
- **for Power Seat:**
  hen removing the roof headlining, connect the cable to the negative (-) battery terminal and move the front seat and No. 1 rear seat to the position shown in the illustration.
- **for Power Seat:**
  After moving the seats, disconnect the cable from the negative (-) battery terminal.

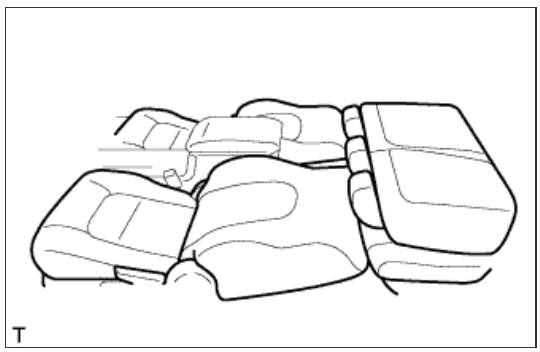

a. w/ EC Mirror:
Disconnect the inner mirror connector.

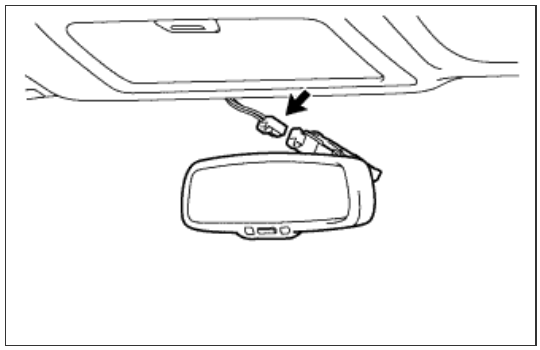


b. w/ Rain Sensor:
Disconnect the rain sensor connector.

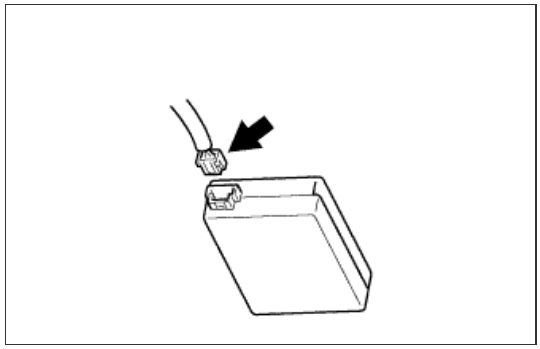

c. Disconnect the 3 roof wire connectors.


i. w/ Rear Wiper:
Disconnect the washer hose.

d. Detach the 4 clamps.

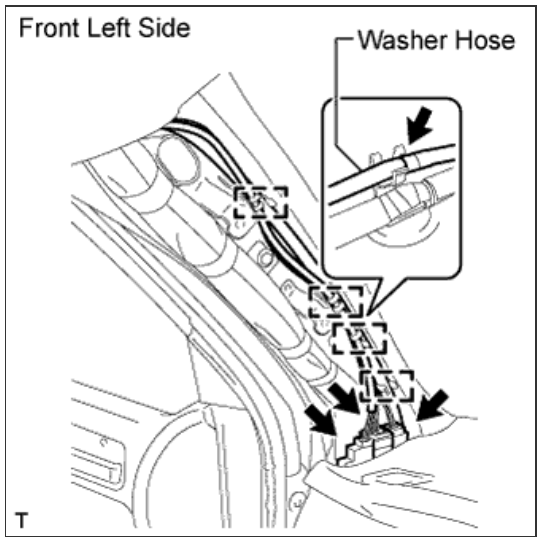


e. Remove the bolt.


f. Disconnect the antenna cord connector and detach the 2 clamps.

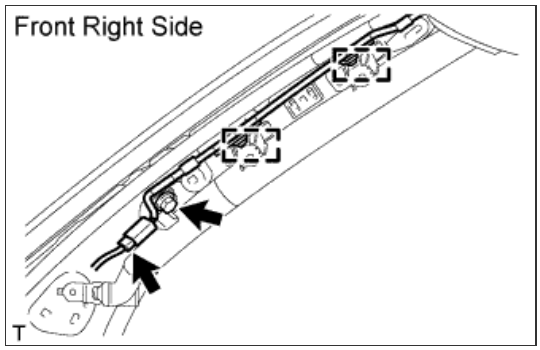


g. Disconnect the antenna cord connector.

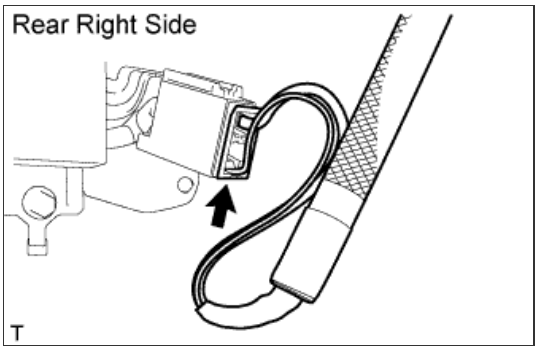

h. w/ Rear Wiper:
Disconnect the washer hose.

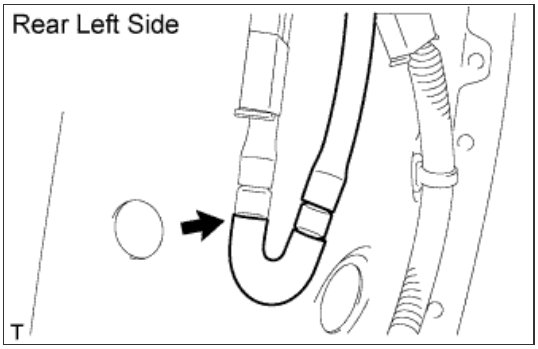


i. for 3 Person Seat ype Rear No. 2 Seat:
Detach the 12 claws, 2 clips and 2 guides.

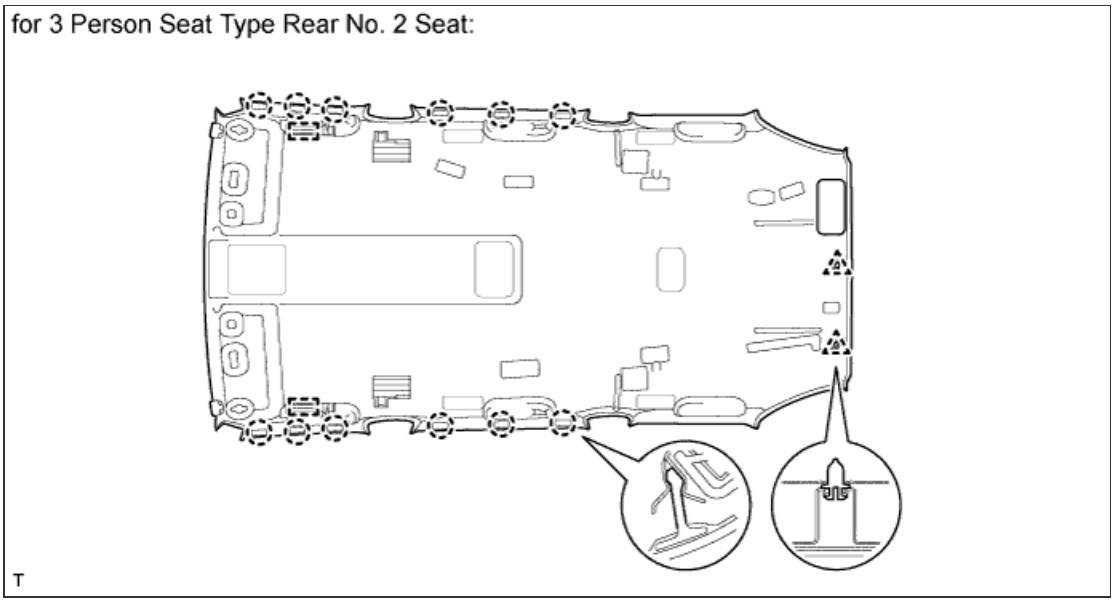


j. except 3 Person Seat ype Rear No. 2 Seat:
Detach the 12 claws, 3 clips and 2 guides.

except 3 Person Seat Type Rear No. 2 Seat:

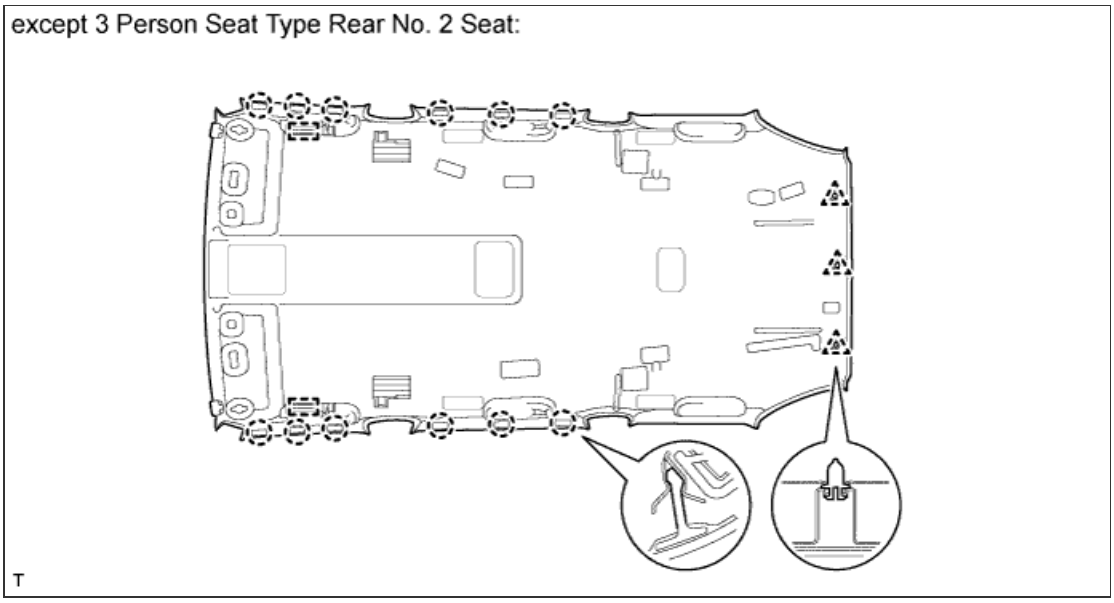

T

k. Remove the headlining from the rear of the vehicle as shown in the illustration.

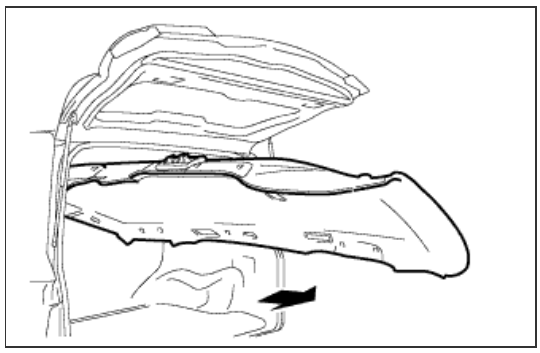

NOTICE:


Be careful not to damage the roof headlining when taking it out.

48. REMOVE FRONT ROOF SIDE RAIL GARNISH LH

a. Detach the 3 clips.

b. Cut off the 3 clips and remove the roof side rail garnish.

c. Remove 3 clips from the vehicle body.

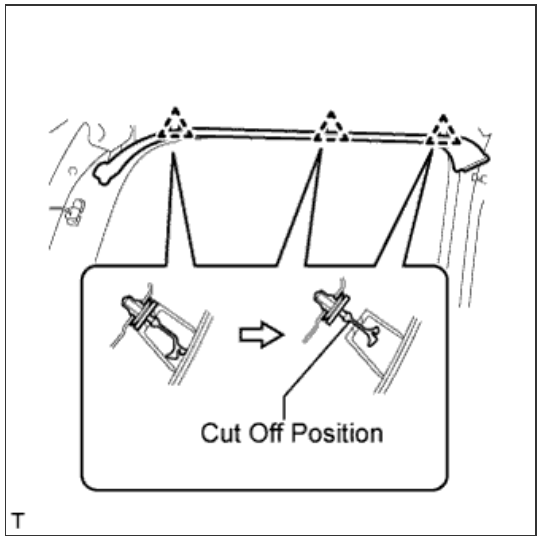

T


49. REMOVE FRONT ROOF SIDE RAIL GARNISH RH

HINT:

Use the same procedures described for the LH side.

50. REMOVE FRONT DOOR OPENING TRIM EATHERSTRIP LH

a. Remove the front door opening trim weatherstrip.

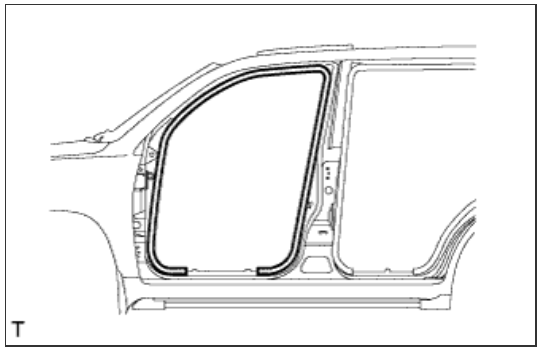


51. REMOVE FRONT DOOR OPENING TRIM EATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

52. REMOVE REAR DOOR OPENING TRIM EATHERSTRIP LH

a. Remove the rear door opening trim weatherstrip.

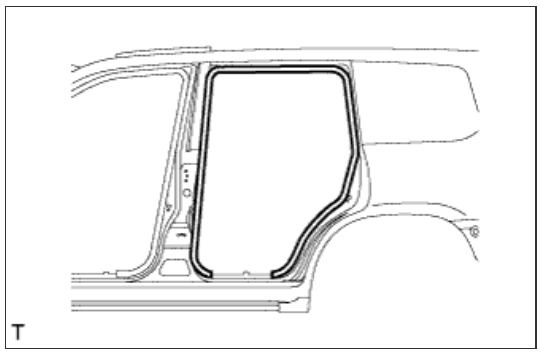


53. REMOVE REAR DOOR OPENING TRIM EATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

54. REMOVE BACK DOOR EATHERSTRIP


a. Remove the back door weatherstrip.

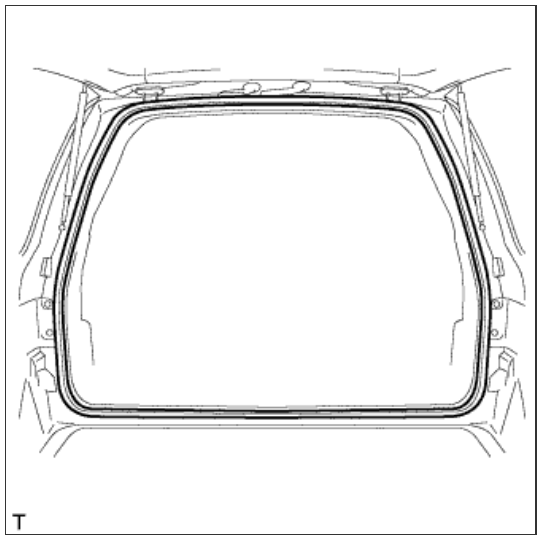

55. REMOVE FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the front door scuff plate outside.

b. Detach the 4 clips and remove the front door scuff plate outside.

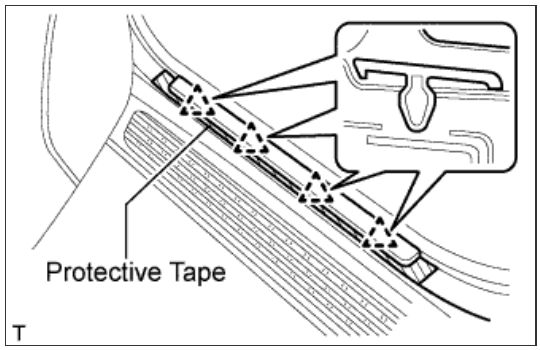

56. REMOVE FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

57. REMOVE REAR DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the rear door scuff plate outside.

b. Detach the 3 clips and remove the rear door scuff plate outside.

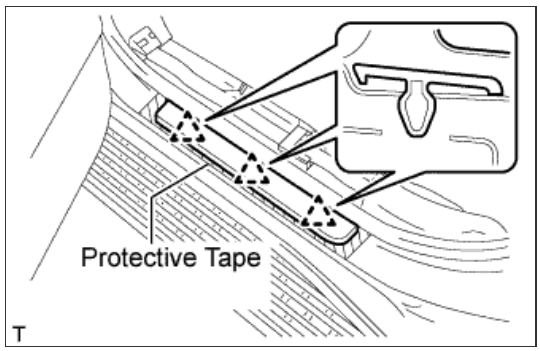


58. REMOVE REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

59. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws of the plate, and slide the plate in the direction of the arrow to remove it.

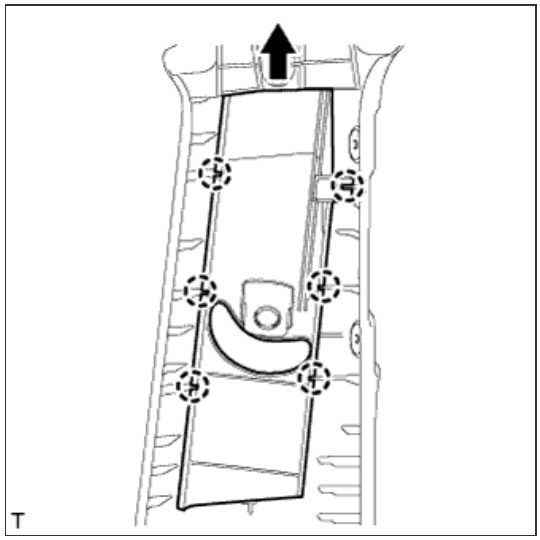


60. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

61. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws and remove the plate.

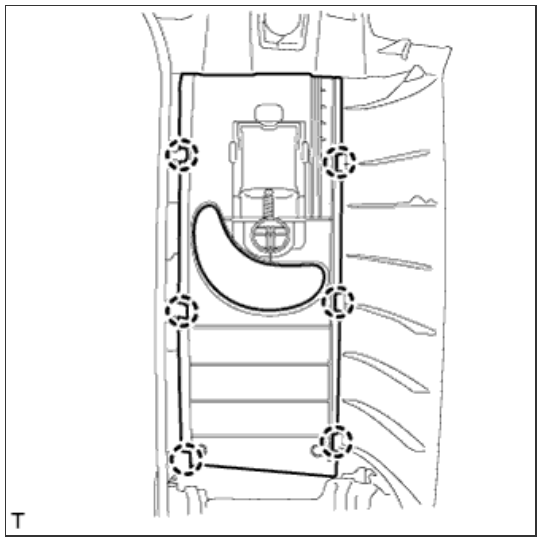


62. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

63. REMOVE ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 7 claws and remove the cover.

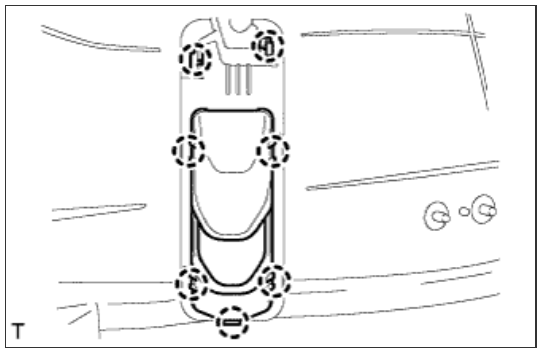

64. REMOVE ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedures described for the LH side.

65. REMOVE REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to remove the hanger on the other side.

a. Remove the 2 spring nuts and hanger.

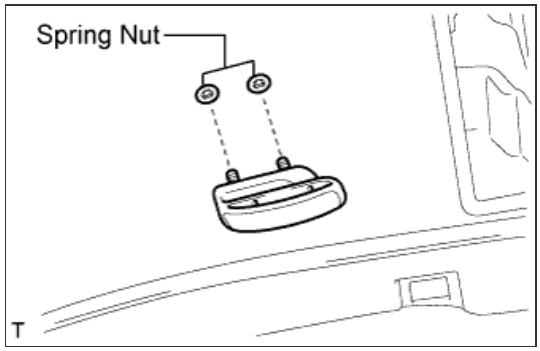

66. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Remove the 2 spring nuts and hanger.

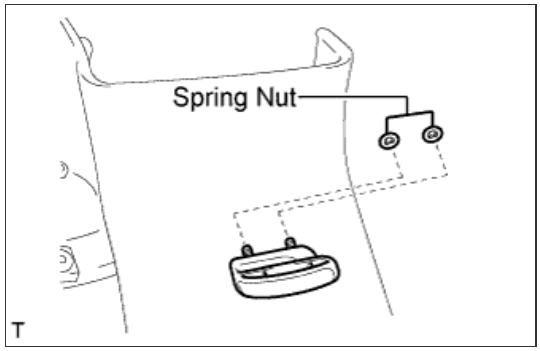


67. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:

Use the same procedures described for the LH side.


68. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY LH

a. w/ Rear Heater:
Remove the 8 screws and duct.

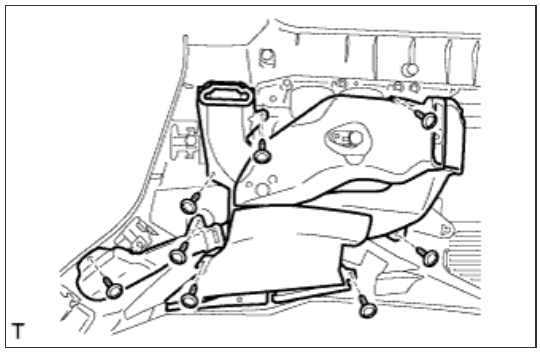

b. Remove the 7 screws.


c. Detach the 4 claws and remove the uarter trim cover.

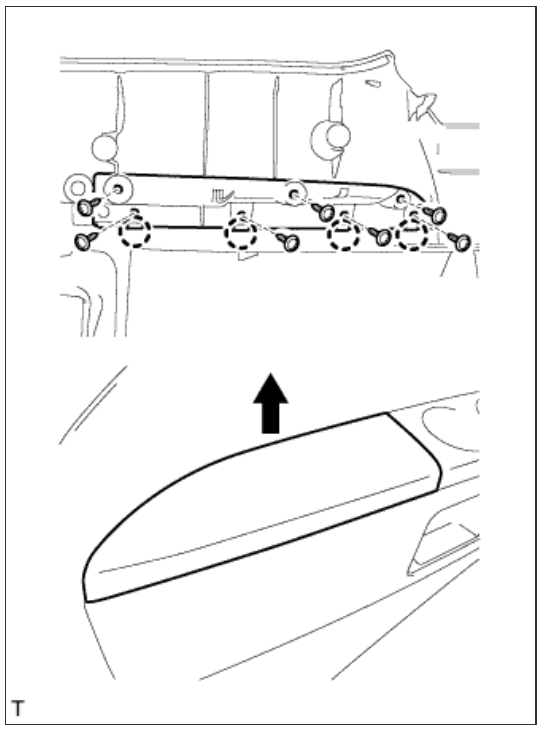

69. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY RH

a. Remove the 7 screws.


b. Detach the 4 claws and remove the uarter trim cover.

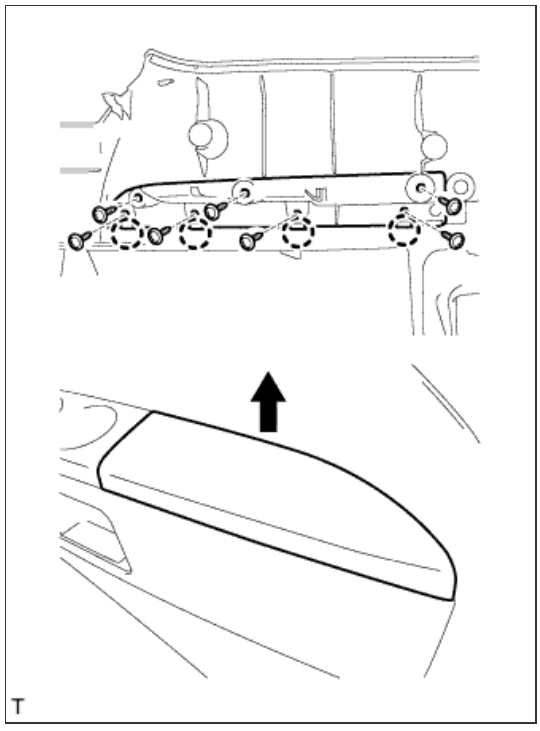

70. REMOVE NO. 2 CUP HOLDER

a. Remove the 5 screws.


b. Detach the 3 claws and remove the cup holder.

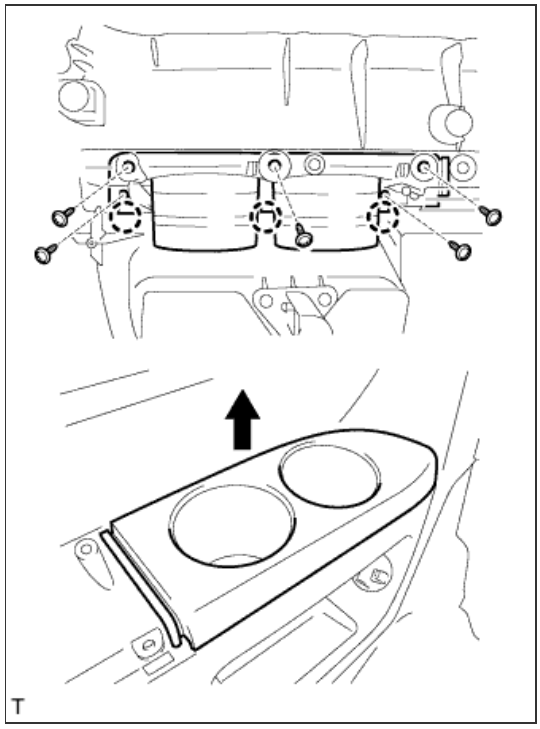

71. REMOVE NO. 1 CUP HOLDER

a. Remove the 5 screws.


b. Detach the 3 claws and remove the cup holder.

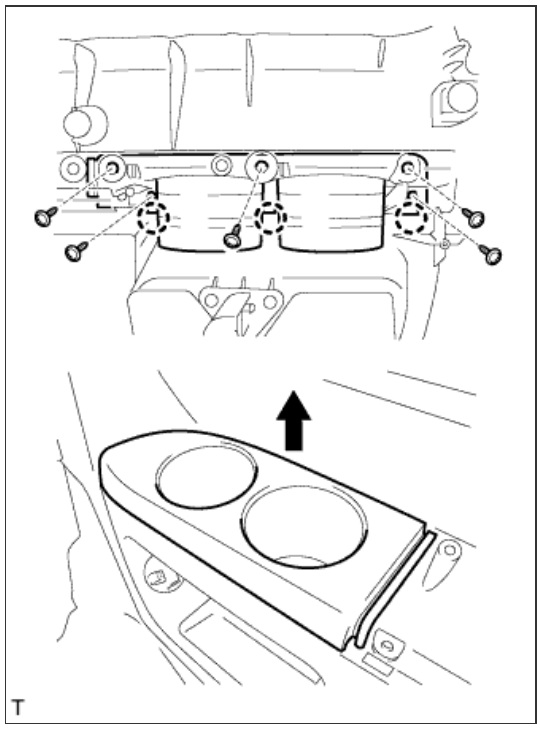

72. REMOVE TONNEAU COVER HOLDER BRACKET LH (w/ Tonneau Cover)

a. Remove the 8 screws.

b. Detach the 3 claws and remove the tonneau cover holder bracket and front uarter trim base.

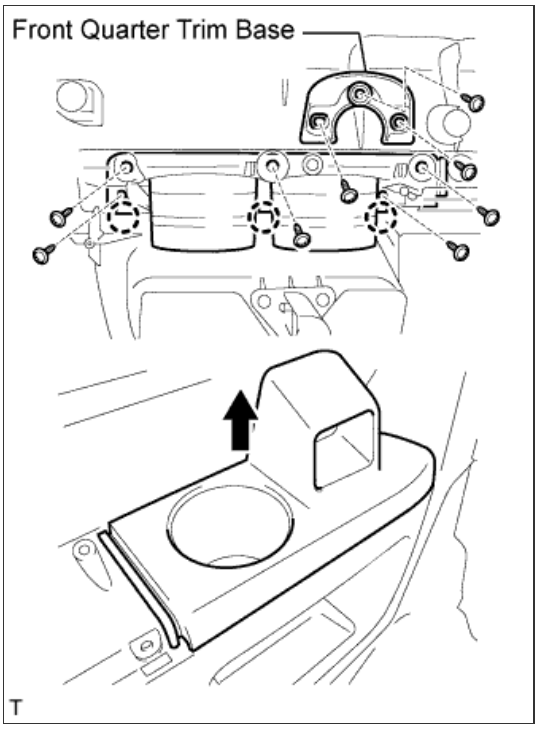


73. REMOVE TONNEAU COVER HOLDER BRACKET RH (w/ Tonneau Cover)

HINT:

Use the same procedures described for the LH side.

74. REMOVE TONNEAU COVER HANGER LH (w/ Tonneau Cover)

a. Remove the 2 screws, tonneau cover hanger and rear uarter trim base.

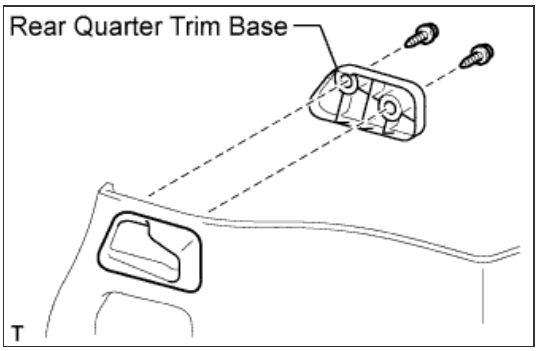


75. REMOVE TONNEAU COVER HANGER RH (w/ Tonneau Cover)

HINT:

Use the same procedures described for the LH side.


76. REMOVE NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

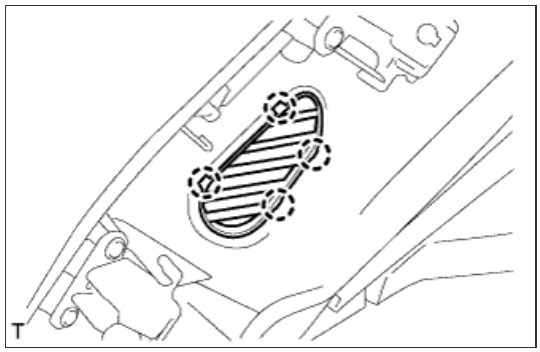


77. REMOVE NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Remove the 6 screws and duct.

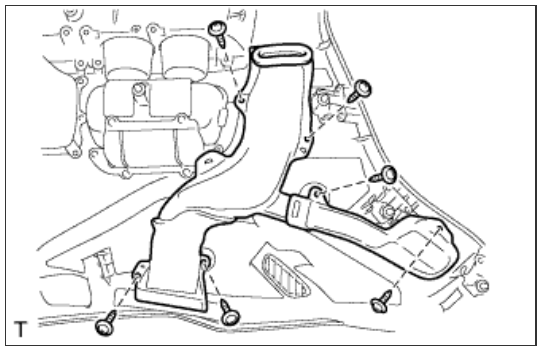


b. Detach the 4 claws and remove the cover.

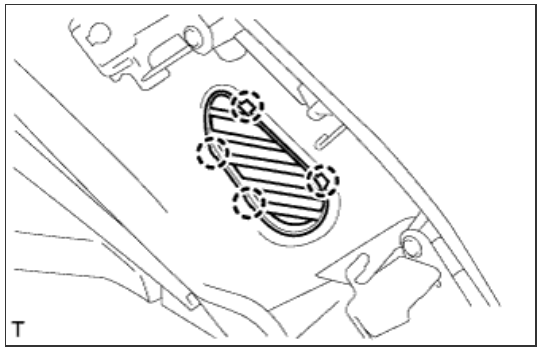

78. REMOVE NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

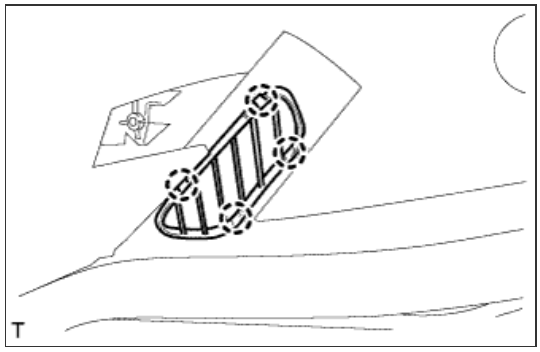

79. REMOVE NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.

80. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 4 claws and remove the seat lock control lever.


81. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

82. REMOVE REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

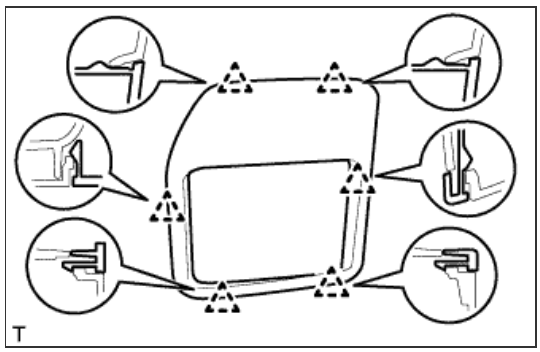


83. REMOVE REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

84. REMOVE QUARTER TRIM COVER LH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

a. Detach the 6 clips and remove the uarter trim cover.

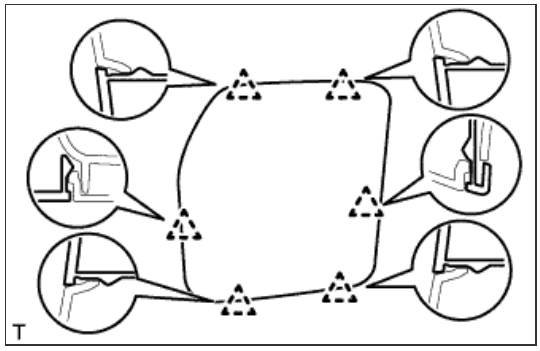

85. REMOVE QUARTER TRIM COVER RH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

86. REMOVE QUARTER TRIM LID SUB-ASSEMBLY RH


a. Remove the uarter trim lid.

87. REMOVE SIDE TRIM BOX COVER

a. Remove the side trim box cover.

88. REMOVE SIDE TRIM BOX

a. Remove the 9 screws and side trim box.

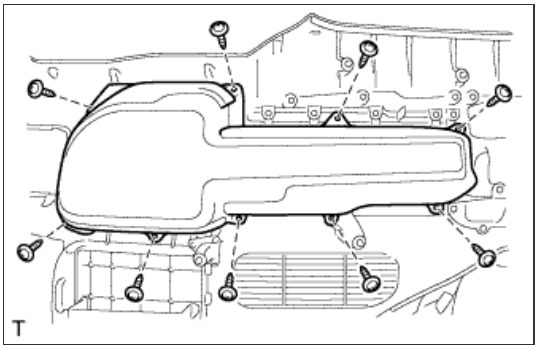

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

a. Remove the tonneau cover.

3. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

5. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).


6. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

7. REMOVE FRONT DOOR SCUFF PLATE LH

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

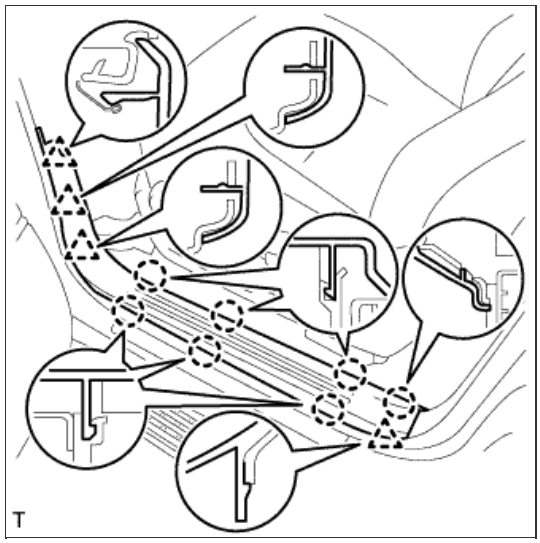

8. REMOVE FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

9. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.

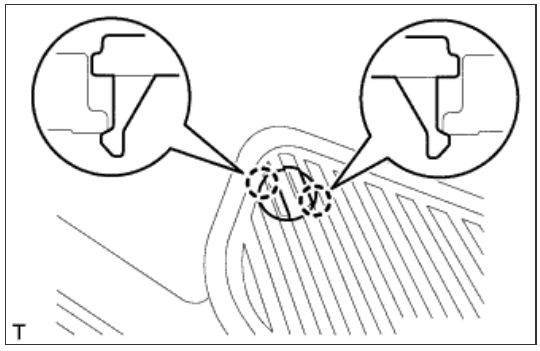


a. Detach the 2 claws and remove the step cover.

10. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

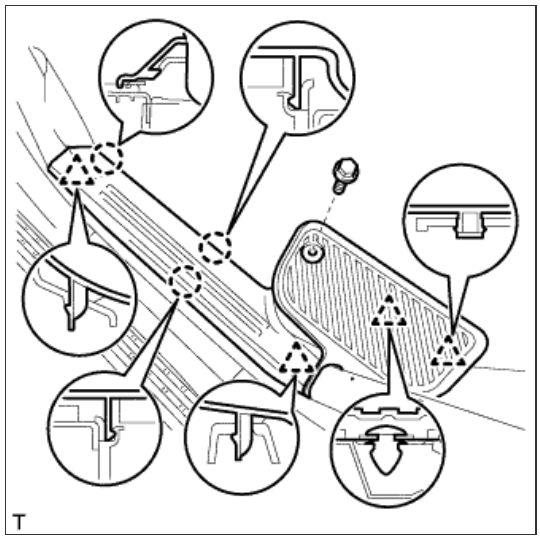


11. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

12. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

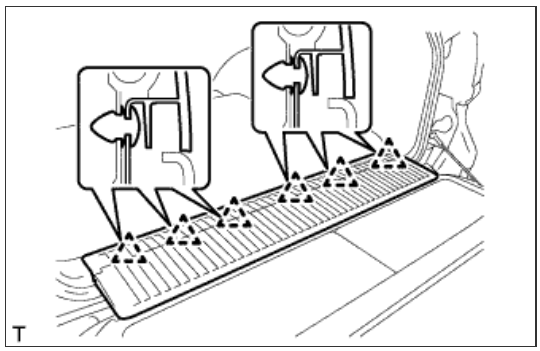


13. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY

HINT:


Use the same procedure to remove the front assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

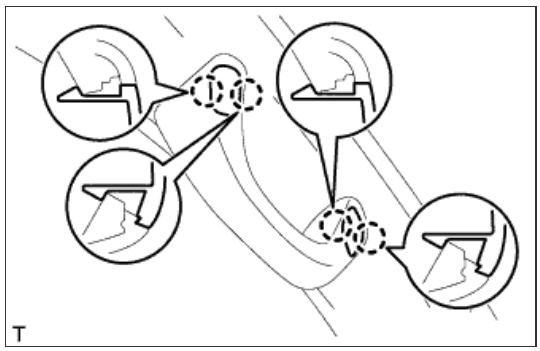

b. Remove the 2 bolts.


c. Detach the 2 claws and remove the front assist grip.

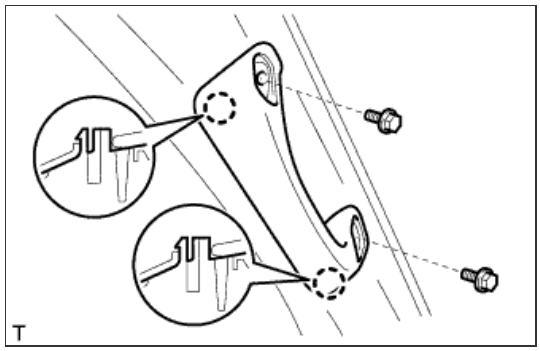

14. REMOVE FRONT PILLAR GARNISH LH

a. Detach the clip and 3 guides, and remove the front pillar garnish.

b. for 9, 14 Speakers:
Disconnect the speaker connector and then remove the front pillar garnish.

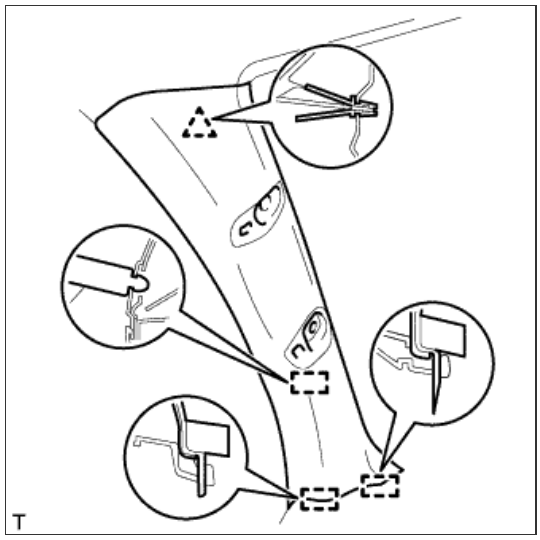


c. Protect the curtain shield airbag.

i. horoughly cover the airbag with a cloth or nylon sheet and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

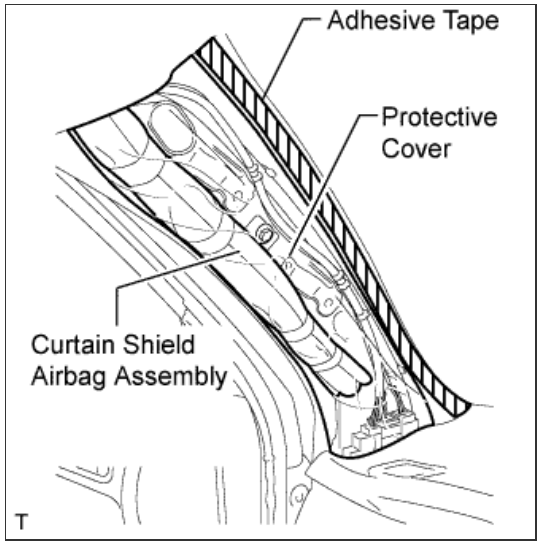

15. REMOVE FRONT PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

16. REMOVE CENTER PILLAR GARNISH COVER LH

HINT:

- **for Manual Seat:**
  hen removing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  hen removing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Detach the 2 clips and 2 guides, and remove the cover.

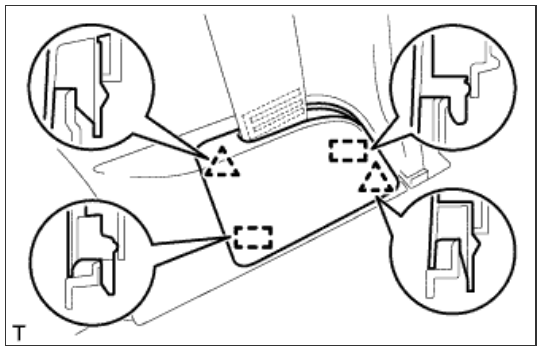

17. REMOVE CENTER PILLAR GARNISH COVER RH

HINT:


Use the same procedures described for the LH side.

18. REMOVE CENTER LO ER PILLAR GARNISH LH


HINT:

- **for Manual Seat:**
  hen removing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  hen removing the center lower pillar garnish, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Remove the bolt and seat belt anchor.

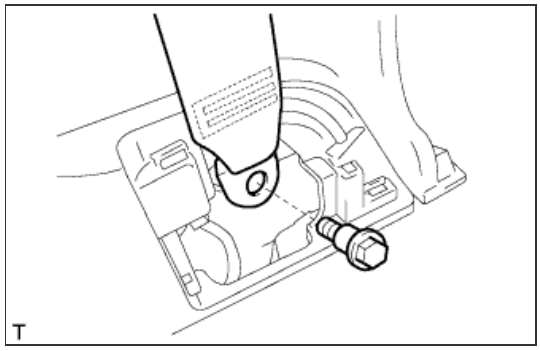

b. Detach the 2 claws and 7 clips, and remove the center lower pillar garnish.

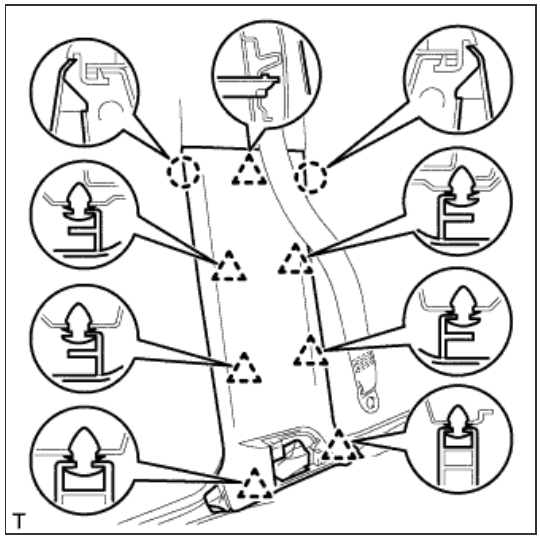

19. REMOVE CENTER LO ER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

20. REMOVE REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to remove the rear assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

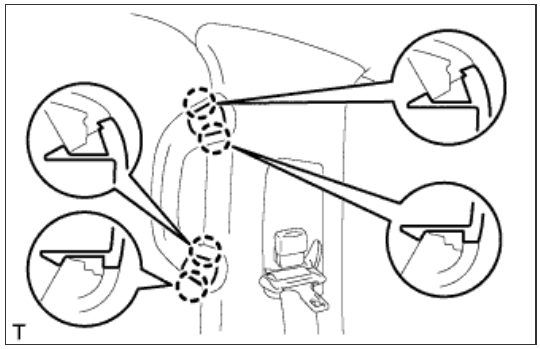

b. Remove the 2 bolts.

c. Detach the 2 claws and remove the rear assist grip.

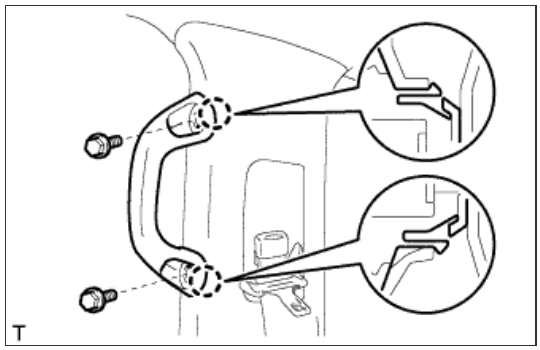


21. REMOVE CENTER PILLAR GARNISH LH

a. Remove the bolt.

b. Detach the 2 clips and 2 guides.

c. Pass the seat belt anchor through the center pillar garnish, and remove the center pillar garnish.

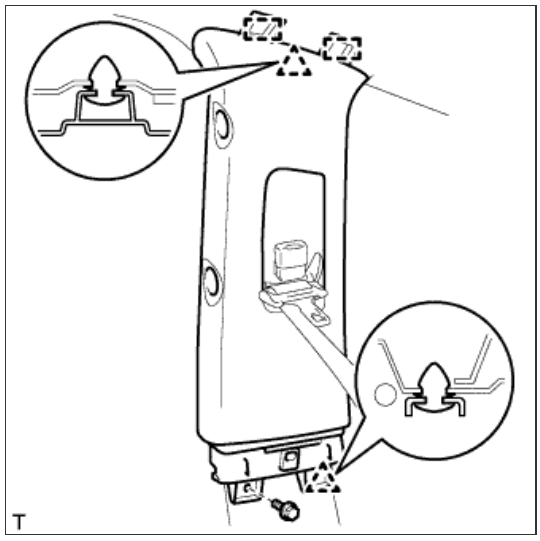

22. REMOVE CENTER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

23. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

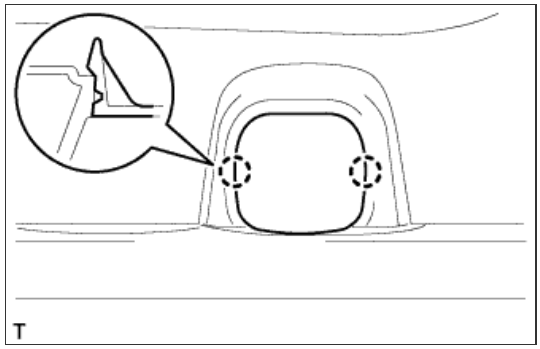

24. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


ape the screwdriver tip before use.

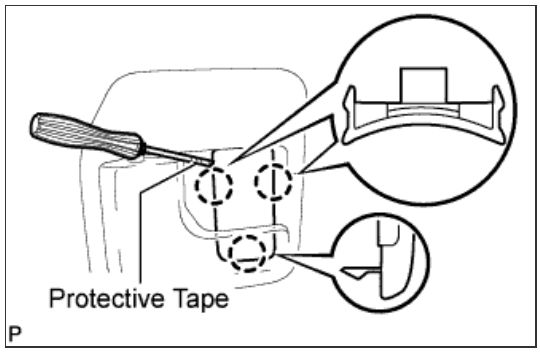


25. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front uarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

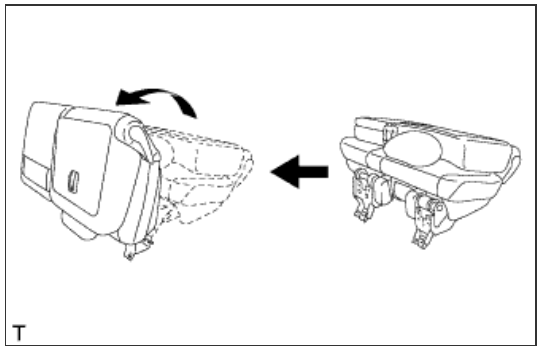


a. Detach the 3 claws and remove the cover.

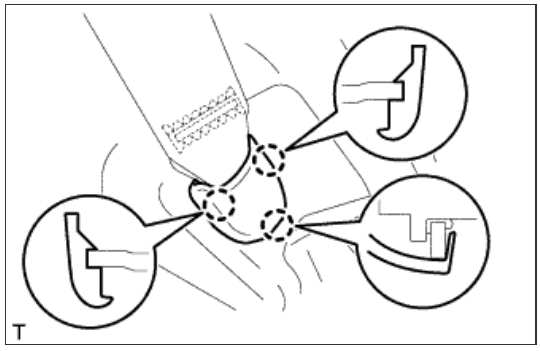

b. Remove the bolt and rear No. 1 seat belt anchor.

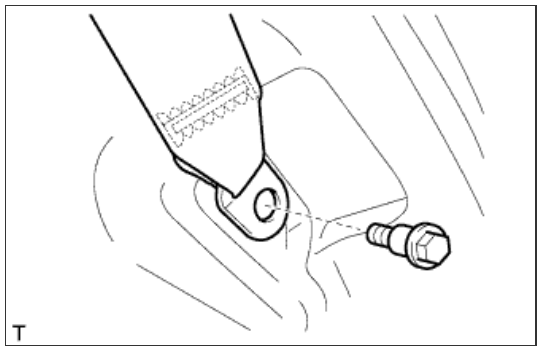

c. w/ Rear No. 2 Seat, except Face to Face Seat ype:
Remove the bolt and rear No. 2 seat belt anchor.

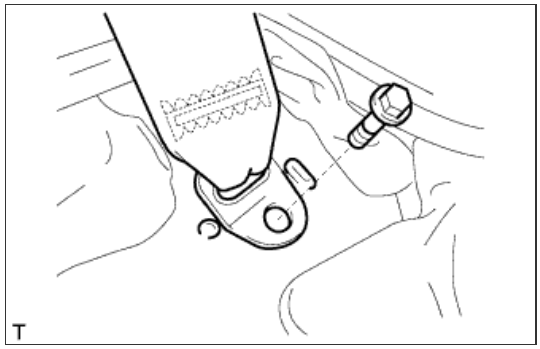


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the uarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the uarter trim panel.

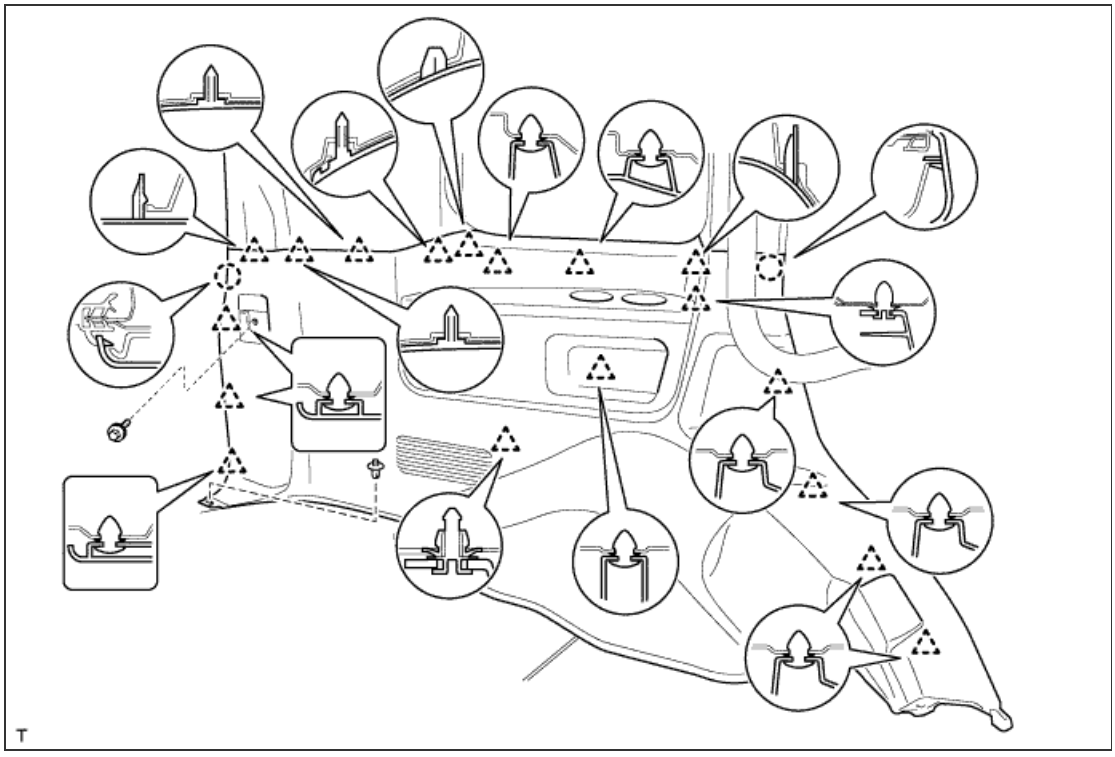

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the uarter trim panel.

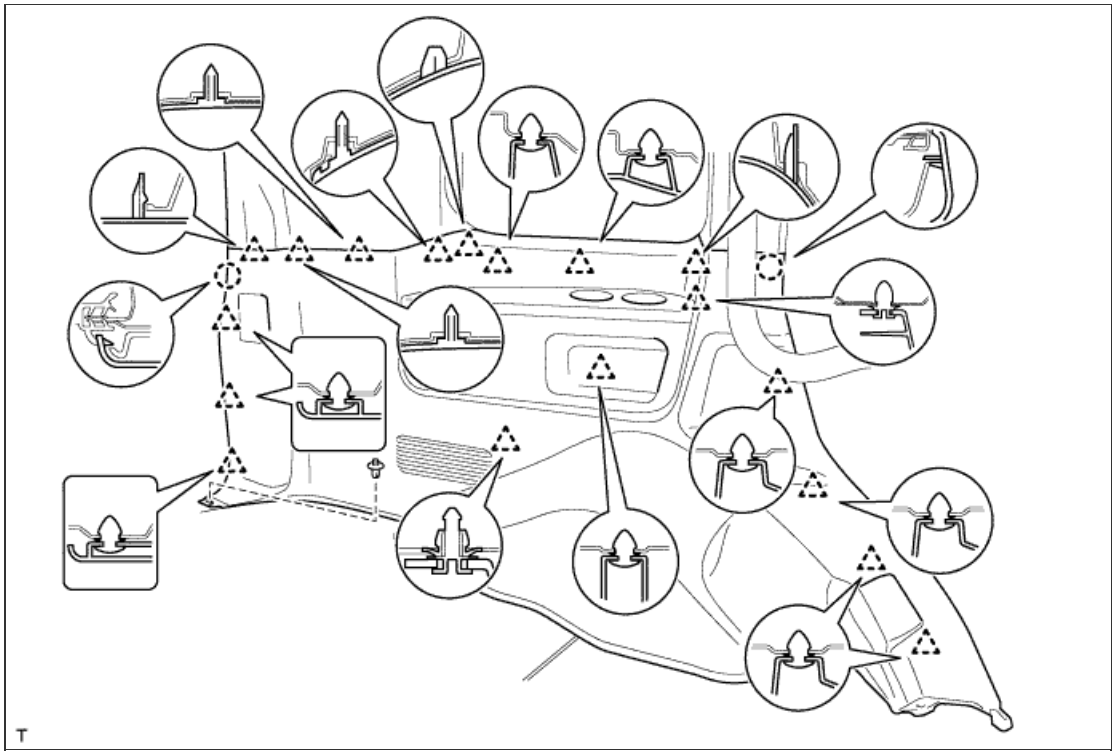

f. w/ onneau Cover:

i. Remove the screw and clip.


ii. Detach the 18 clips and 2 claws, and remove the uarter trim panel.

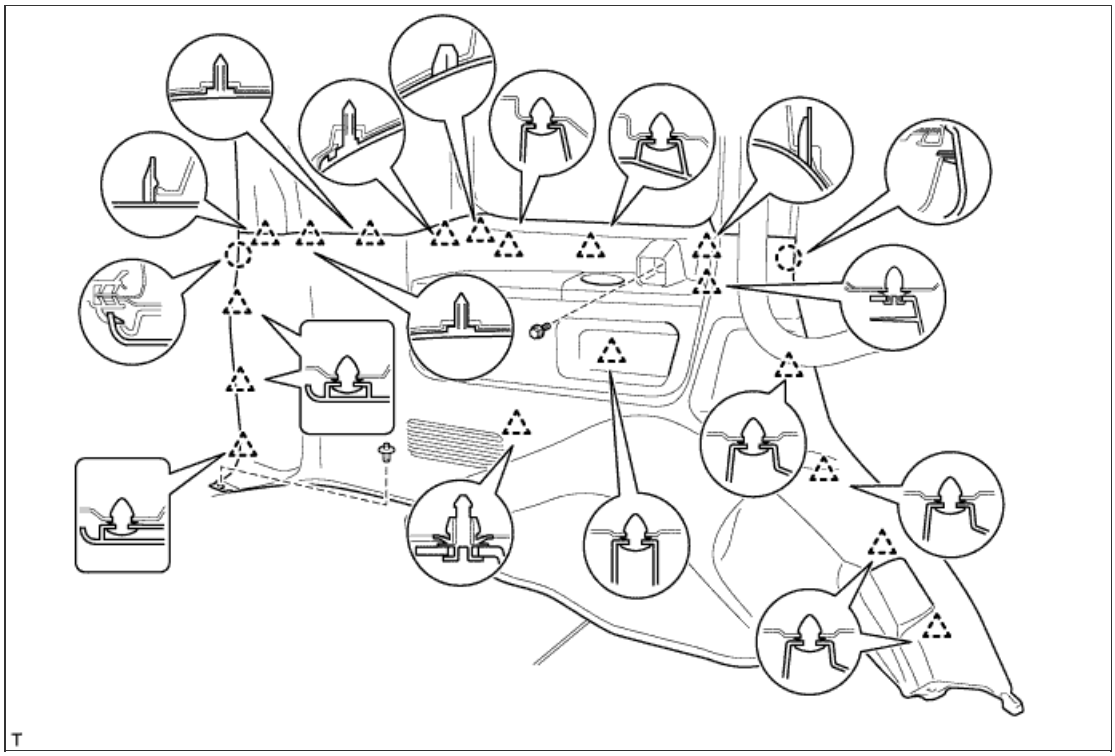


26. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:


When removing the front uarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

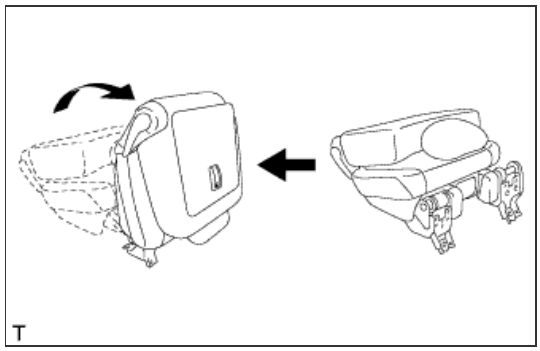

a. Detach the 3 claws and remove the cover.

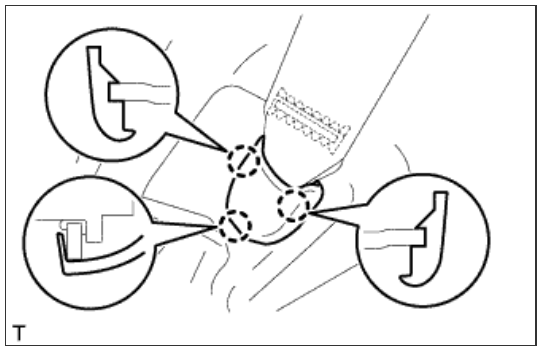


b. Remove the bolt and rear No. 1 seat belt anchor.

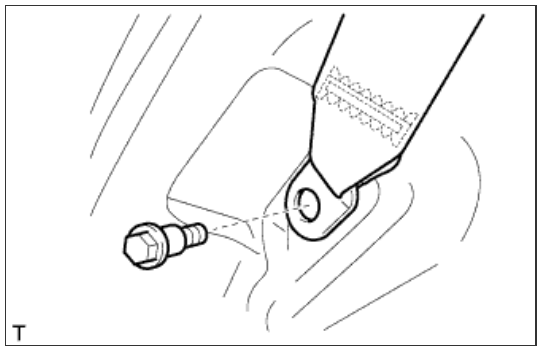


c. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Detach the 3 claws and remove the cover.

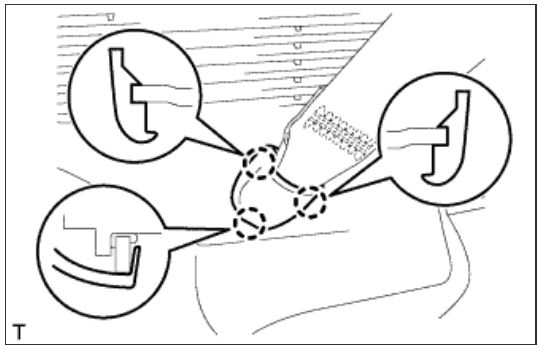

ii. Remove the bolt and rear No. 2 seat belt anchor.

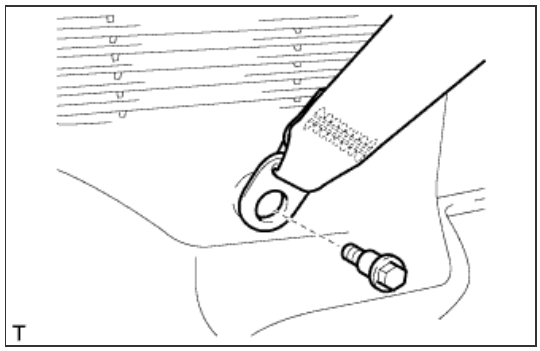


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 16 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the uarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the uarter trim panel.

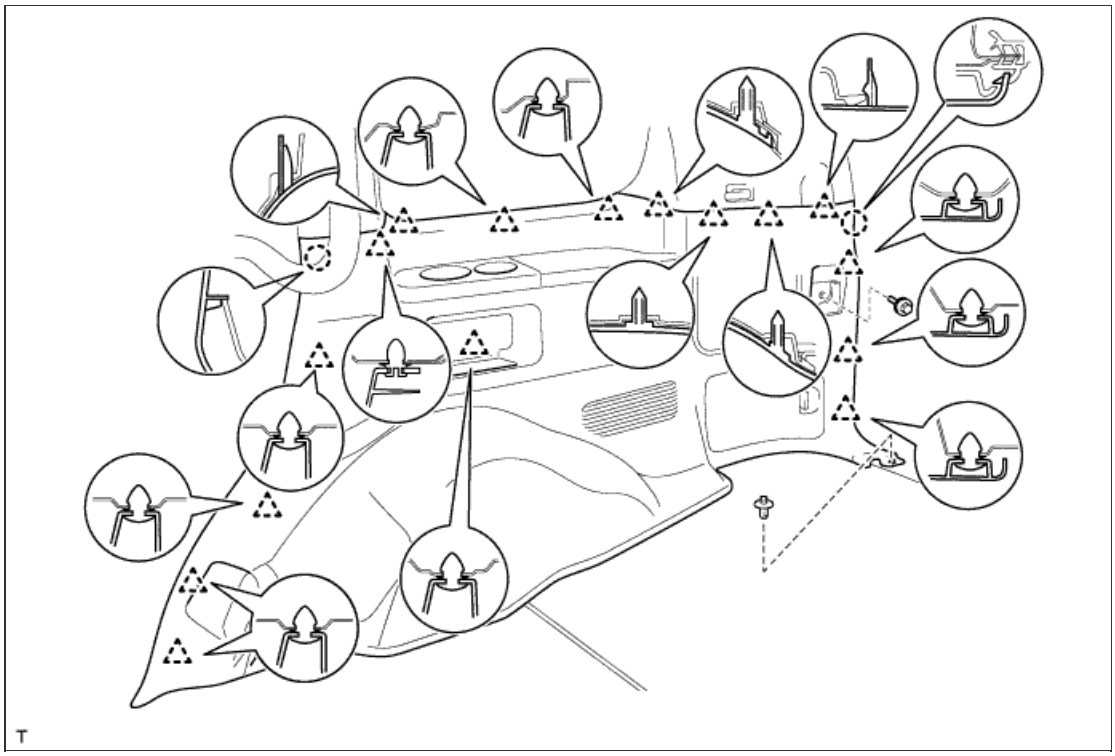

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.


ii. Detach the 16 clips and 2 claws, and remove the uarter trim panel.

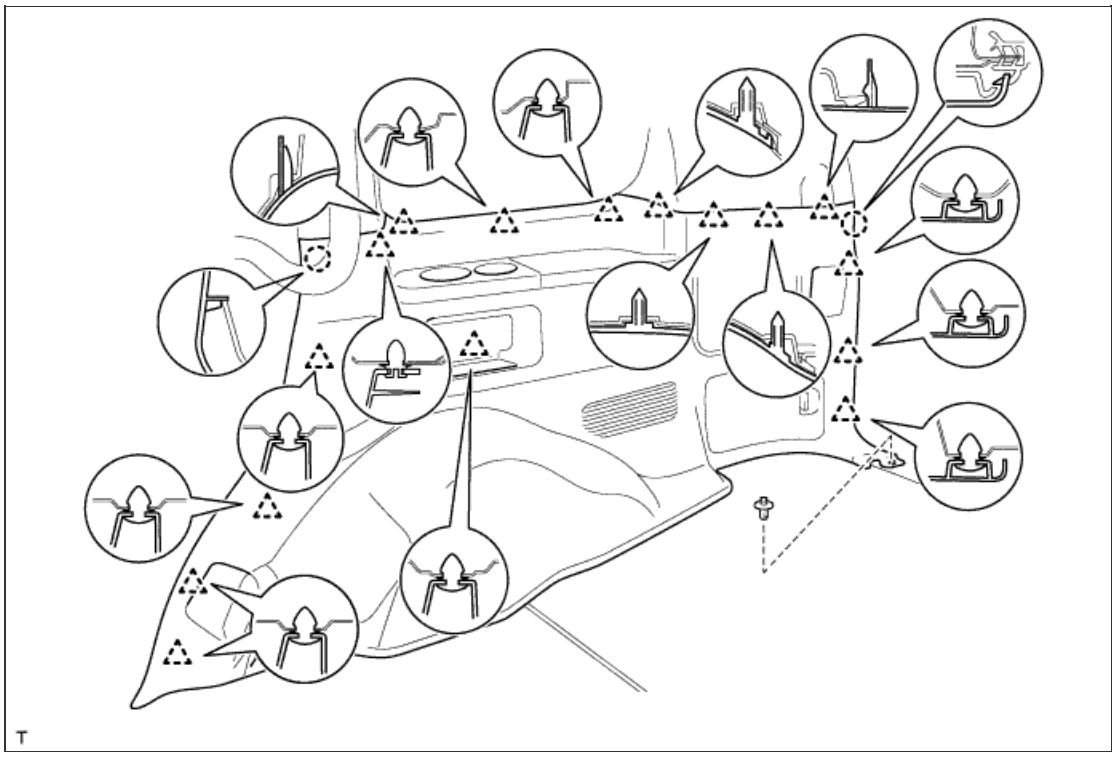

f. w/ onneau Cover:

i. Remove the screw and clip.

ii. Detach the 16 clips and 2 claws, and remove the uarter trim panel.

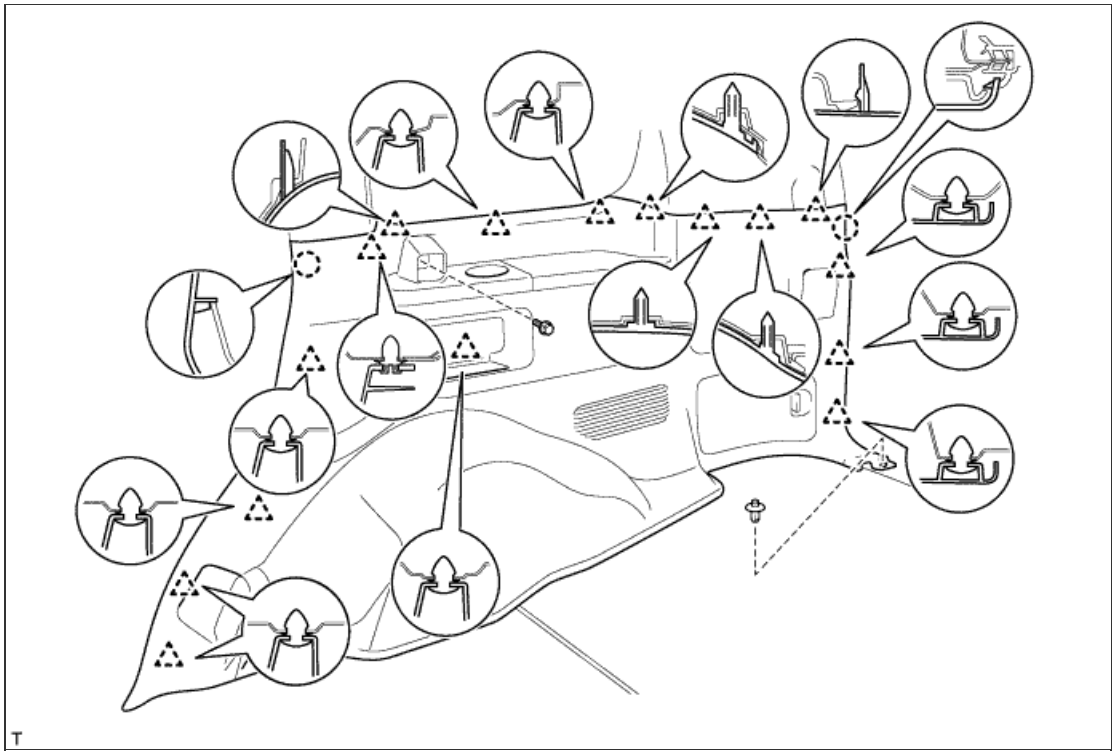


27. REMOVE REAR FRONT QUARTER TRIM GARNISH LH

a. Remove the screw.

b. Detach the clip and 2 guides.

c. Pass the seat belt anchor through the uarter trim garnish, and remove the uarter trim garnish.

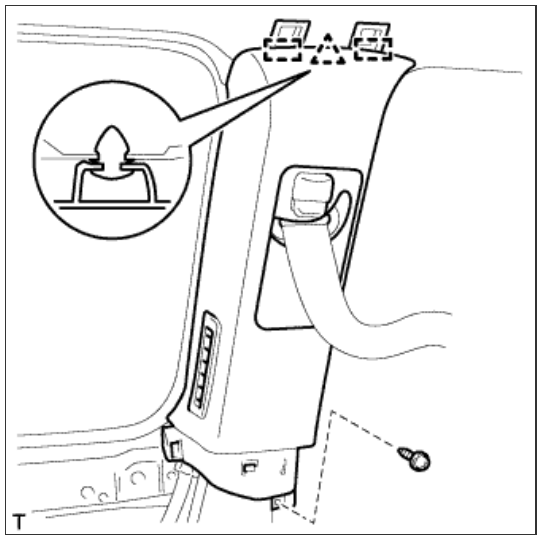

28. REMOVE REAR FRONT QUARTER TRIM GARNISH RH

HINT:

Use the same procedures described for the LH side.

29. REMOVE REAR UPPER PILLAR GARNISH LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype:


i. Using a screwdriver, detach the 2 claws and open the seat belt shoulder anchor cover.

HINT:


ape the screwdriver tip before use.



ii. Remove the bolt and seat belt shoulder anchor.

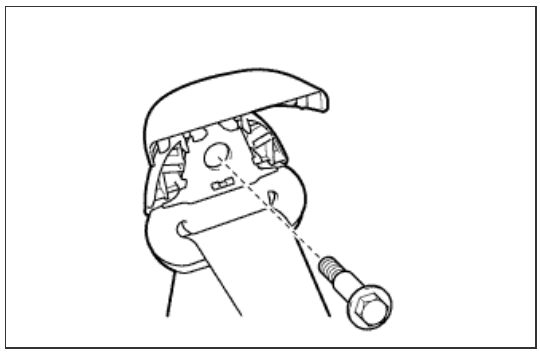

b. Detach the 5 clips and remove the rear upper pillar garnish.

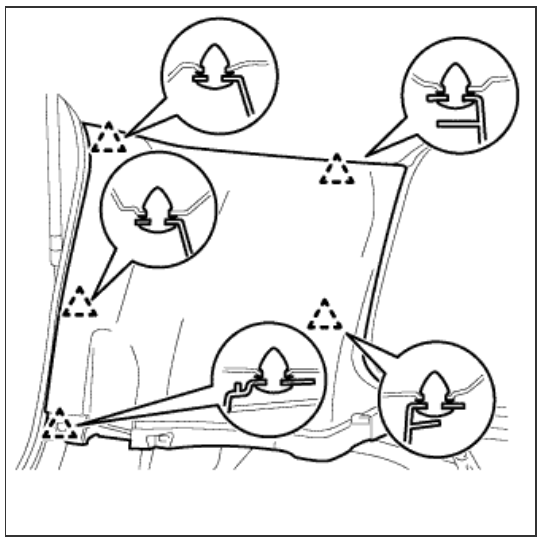

30. REMOVE REAR UPPER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

31. REMOVE MAP LIGHT ASSEMBLY (w/ Map Light)

a. Using a screwdriver, detach the 2 claws and open the 2 covers.


HINT:

ape the screwdriver tip before use.

b. Remove the 2 screws.

c. Detach the 2 clips and 2 guides.

d. Disconnect the connector and then remove the map light.

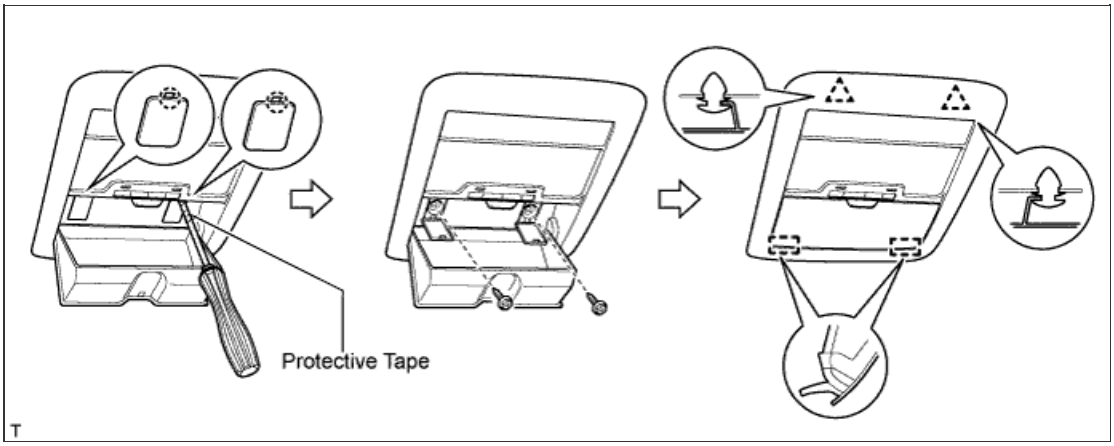


32. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

a. w/ ap Light:
Remove the No. 1 room light assembly.

i. Detach the 4 clips.

ii. Disconnect the connector and then remove the room light.

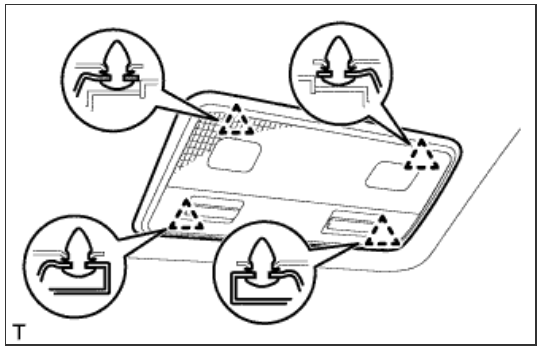


b. w/o ap Light:
Remove the No. 1 room light assembly.


i. Using a screwdriver, detach the 4 claws and remove the room light lens.

HINT:

ape the screwdriver tip before use.

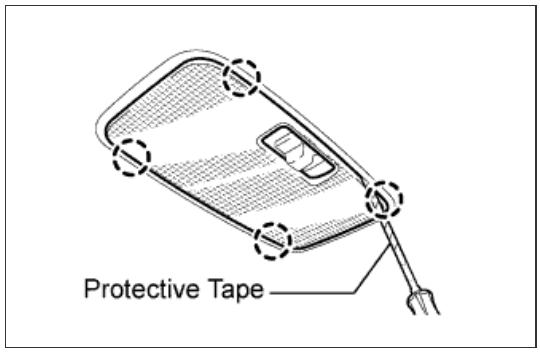


ii. Remove the 2 covers.

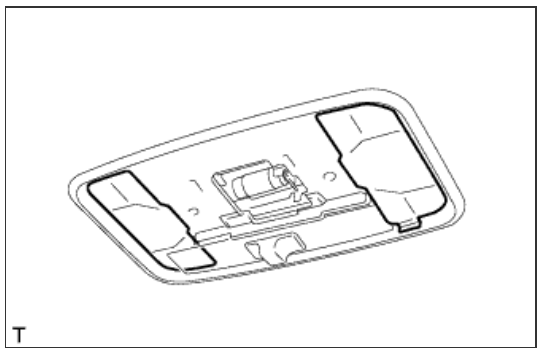


iii. Using a screwdriver, push the 2 levers in the direction of the arrows in the illustration, and detach the 2 claws labeled A.

iv. Detach the 2 claws labeled B.

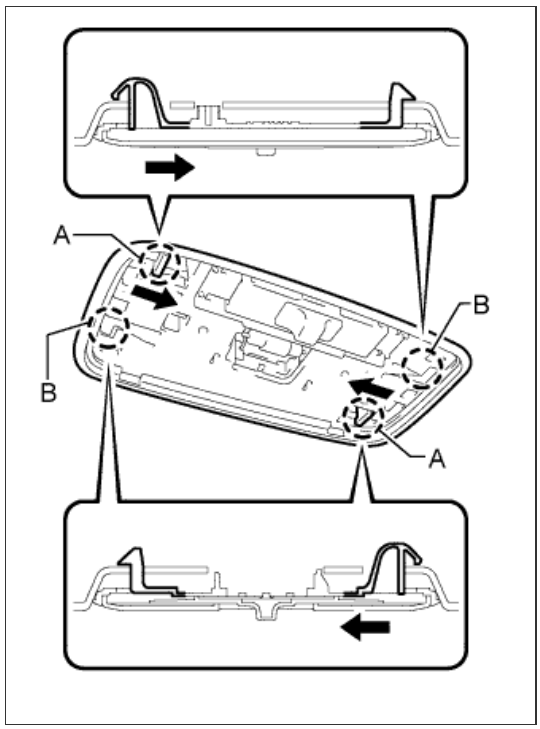

v. Detach the 4 claws and remove the room light from the room light switch base.

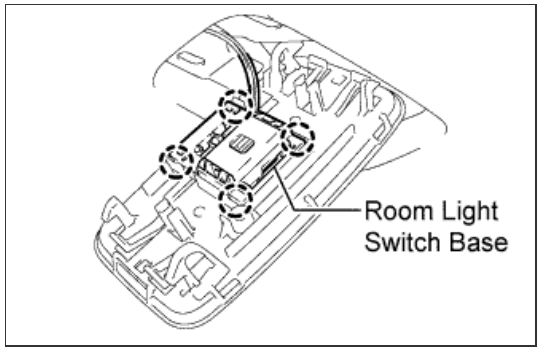


33. REMOVE NO. 2 ROOM LIGHT ASSEMBLY


a. Using a screwdriver, detach the 4 claws and remove the room light lens.

HINT:

ape the screwdriver tip before use.

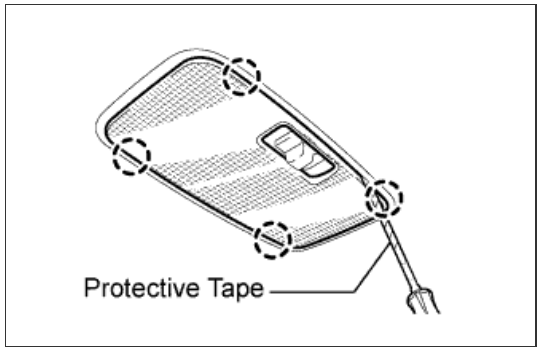


b. Remove the 2 covers.

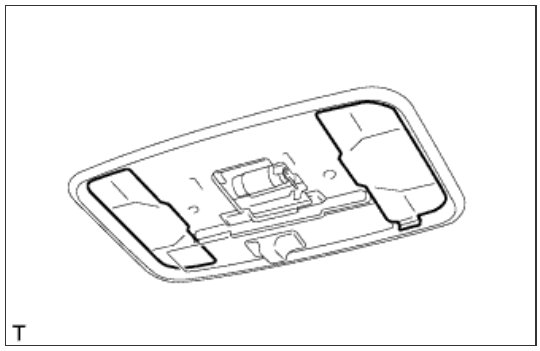


c. Using a screwdriver, push the 2 levers in the direction of the arrows in the illustration, and detach the 2 claws labeled A.

d. Detach the 2 claws labeled B.

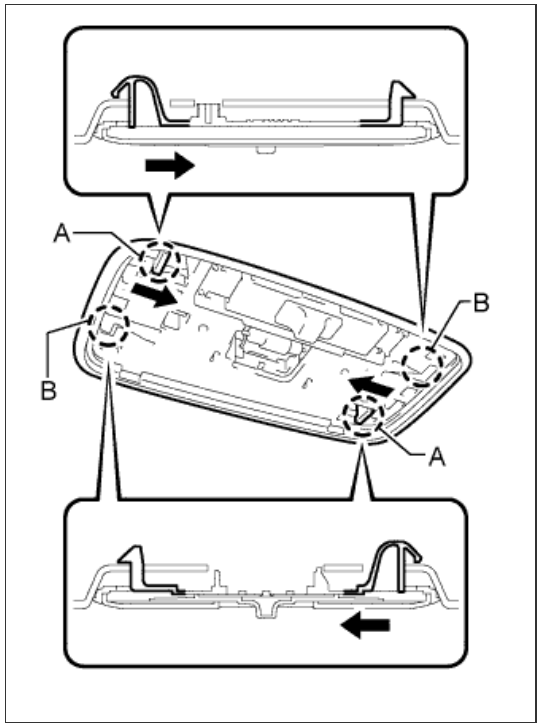

e. Detach the 4 claws and remove the room light from the room light switch base.

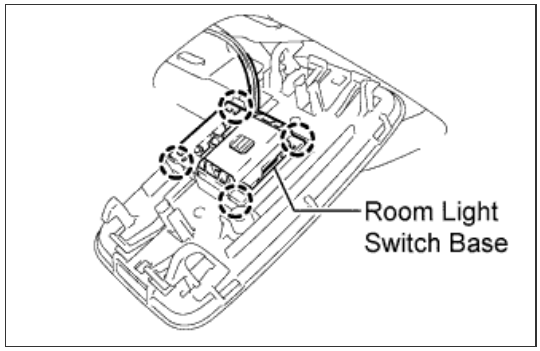


34. REMOVE VISOR BRACKET COVER

HINT:


Use the same procedure to remove the visor bracket cover on the other side.

a. Detach the 4 claws and remove the visor bracket cover.

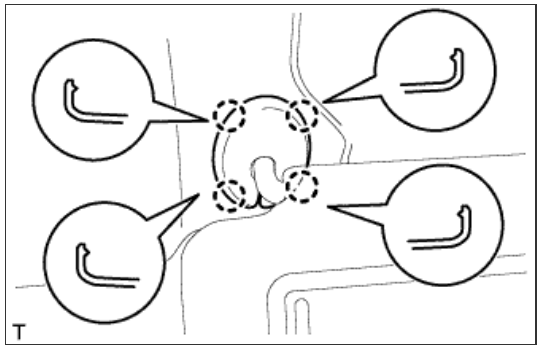

35. REMOVE VISOR ASSEMBLY LH

a. Remove the 2 screws and visor.

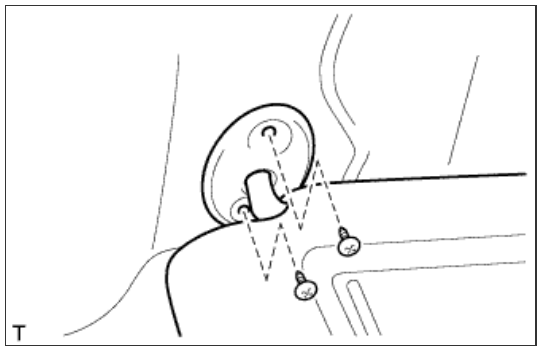

36. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


37. REMOVE VISOR HOLDER

HINT:

Use the same procedure to remove the visor holder on the other side.

a. urn the visor holder approximately 45° and pull it out as shown in the illustration.

b. Detach the 2 claws and remove the visor holder.

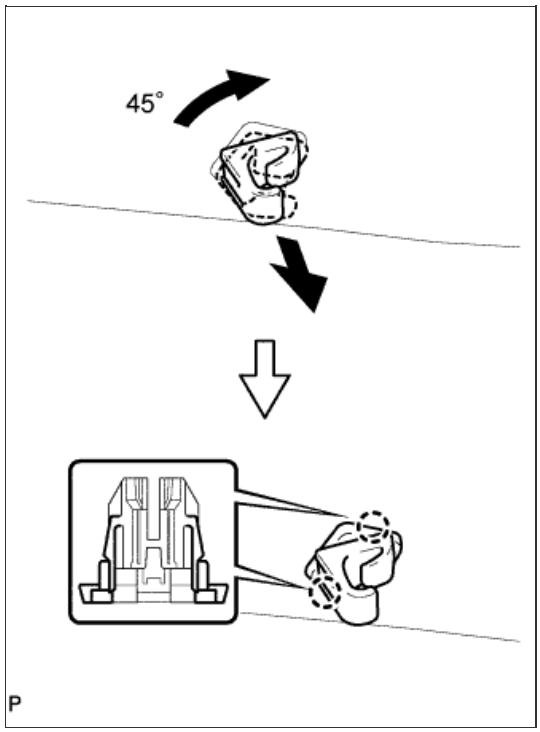


38. REMOVE CENTER VISOR ASSEMBLY LH (w/ Sub Visor)

a. Using a screwdriver, pry off the cover to detach the 2 clips and remove the center visor.

HINT:

ape the screwdriver tip before use.

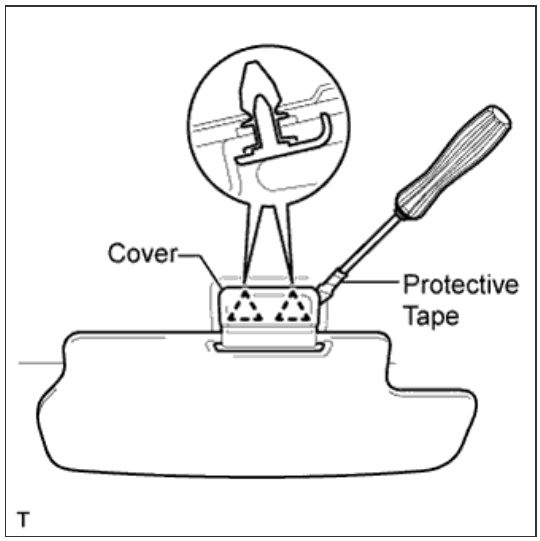


39. REMOVE CENTER VISOR ASSEMBLY RH (w/ Sub Visor)

HINT:

Use the same procedures described for the LH side.


40. REMOVE INNER REAR VIE MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Detach the 2 claws and remove the cover as shown in the illustration.

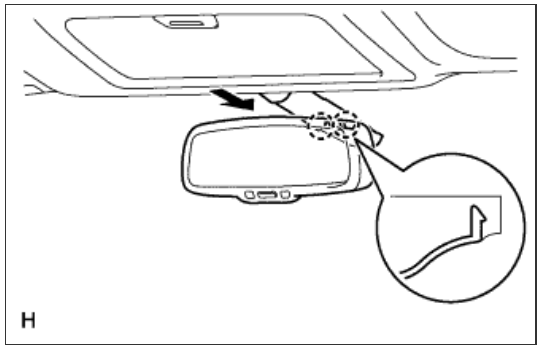

41. REMOVE RAIN SENSOR COVER (w/ Rain Sensor)


a. Slide the No. 2 cover in the direction of the arrow labeled (1).

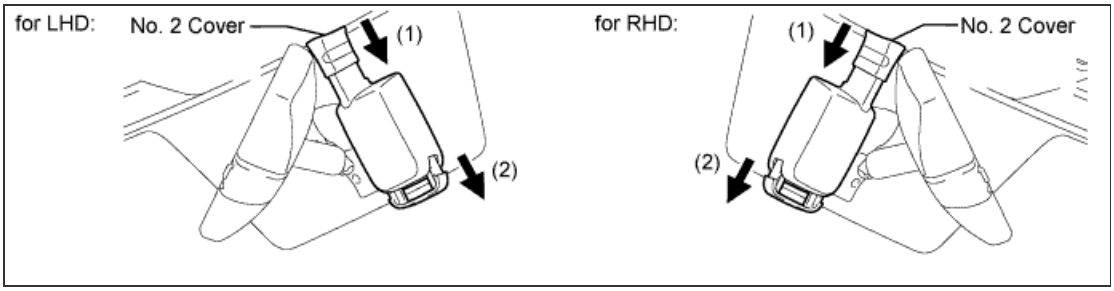

b. Pull the stopper in the direction of the arrow labeled (2) to remove the No. 2 cover.

42. REMOVE SEAT BELT ANCHOR COVER (for 3 Person Seat Type Rear No. 2 Seat)

a. Detach the 4 clips and 4 guides, and remove the seat belt anchor cover.

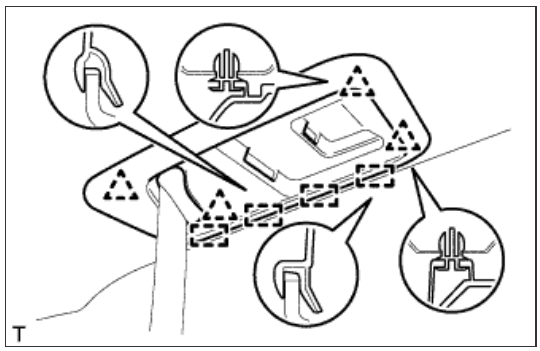

43. REMOVE ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to remove the assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.

c. Remove the 2 clips from the vehicle body.

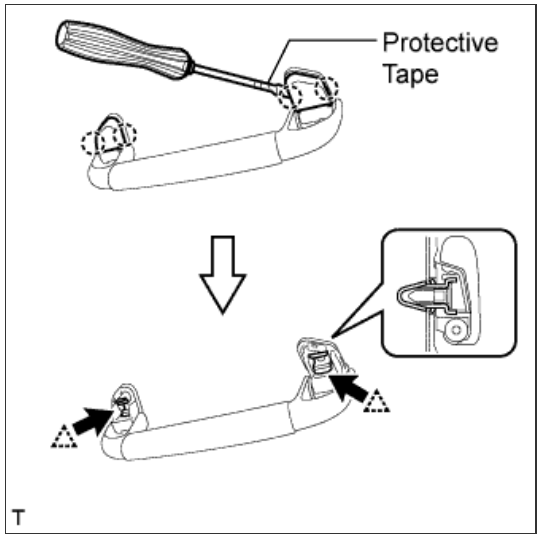

44. REMOVE NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype or w/o Rear No. 2 Seat:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

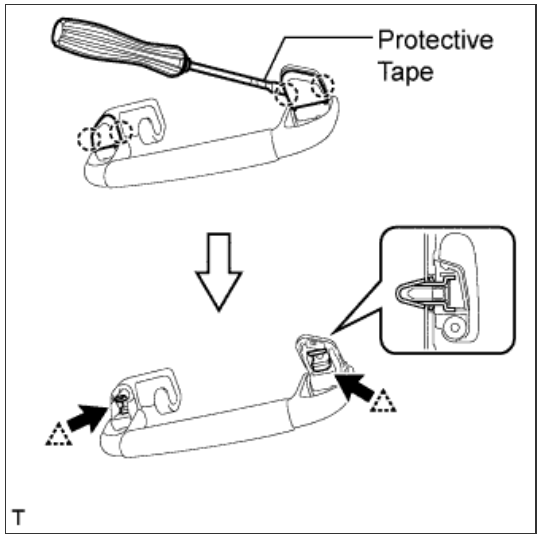

b. w/ Rear No. 2 Seat, for Face to Face Seat ype:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

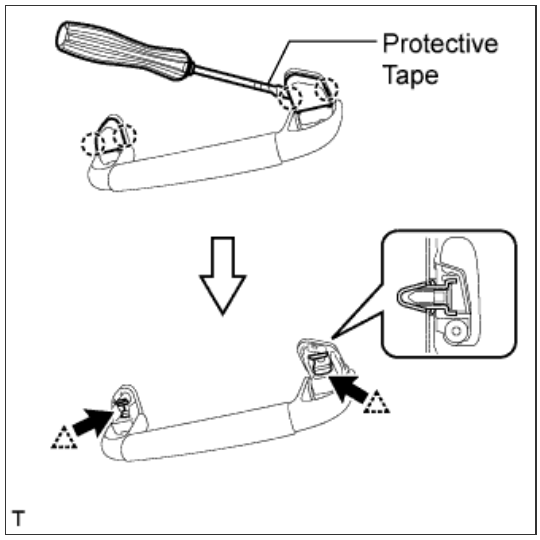

45. REMOVE NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

46. REMOVE 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat except Face to Face Seat Type)

HINT:

Use the same procedure to remove the 3rd seat assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.


c. Remove the 2 clips from the vehicle body.

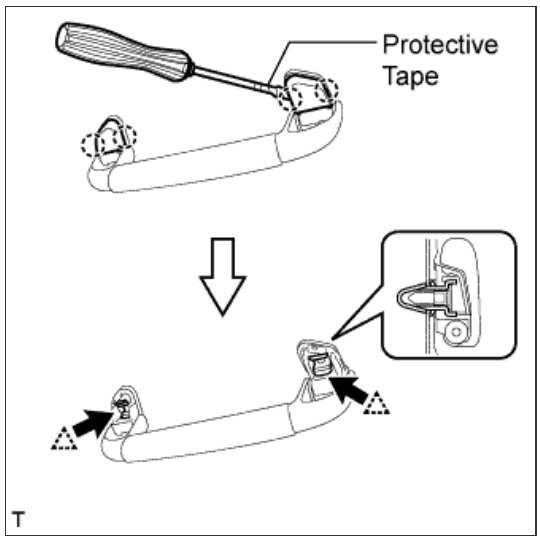


47. REMOVE ROOF HEADLINING ASSEMBLY

HINT:


- **for Manual Seat:**
  hen removing the roof headlining, move the front seat and rear No. 1 seat to the position shown in the illustration.
- **for Power Seat:**
  hen removing the roof headlining, connect the cable to the negative (-) battery terminal and move the front seat and No. 1 rear seat to the position shown in the illustration.
- **for Power Seat:**
  After moving the seats, disconnect the cable from the negative (-) battery terminal.

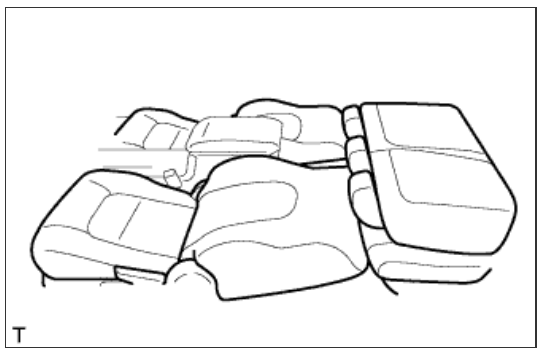

a. w/ EC Mirror:
Disconnect the inner mirror connector.

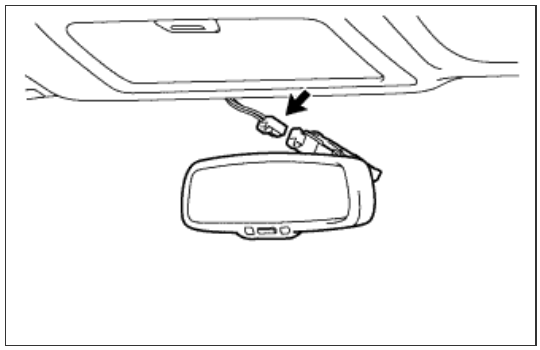


b. w/ Rain Sensor:
Disconnect the rain sensor connector.

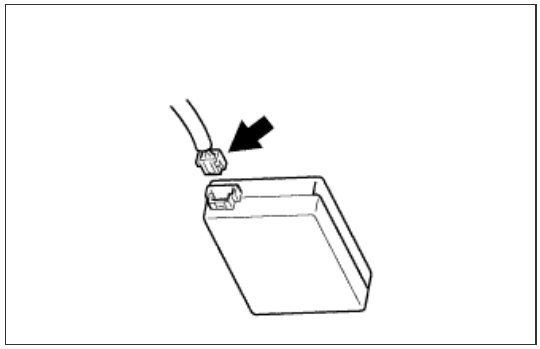

c. Disconnect the 3 roof wire connectors.


i. w/ Rear Wiper:
Disconnect the washer hose.

d. Detach the 4 clamps.

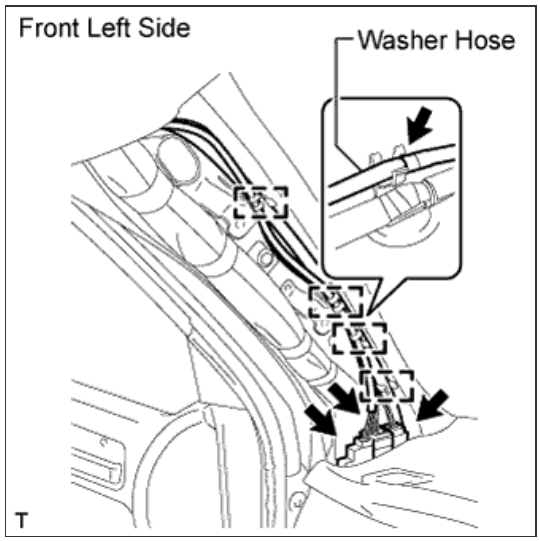


e. Remove the bolt.


f. Disconnect the antenna cord connector and detach the 2 clamps.

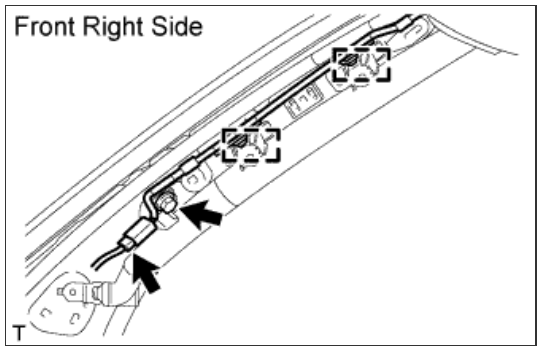


g. Disconnect the antenna cord connector.

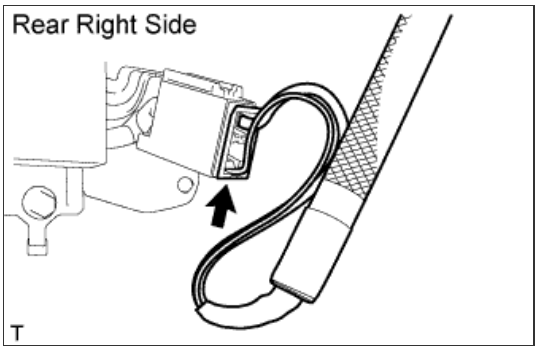

h. w/ Rear Wiper:
Disconnect the washer hose.

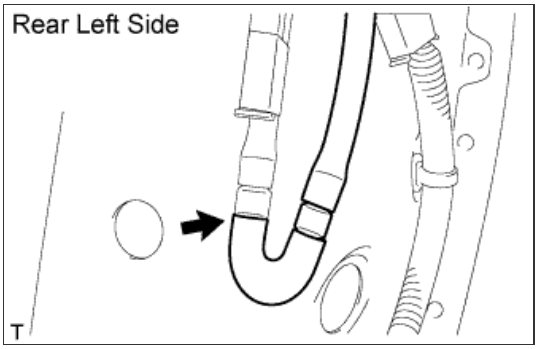


i. for 3 Person Seat ype Rear No. 2 Seat:
Detach the 12 claws, 2 clips and 2 guides.

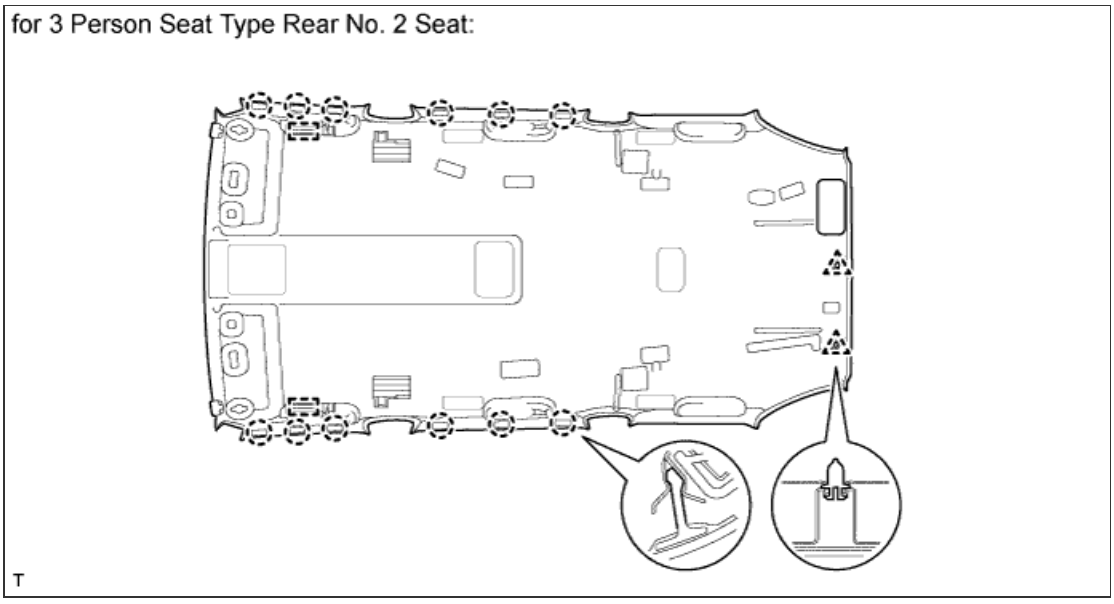


j. except 3 Person Seat ype Rear No. 2 Seat:
Detach the 12 claws, 3 clips and 2 guides.

except 3 Person Seat Type Rear No. 2 Seat:

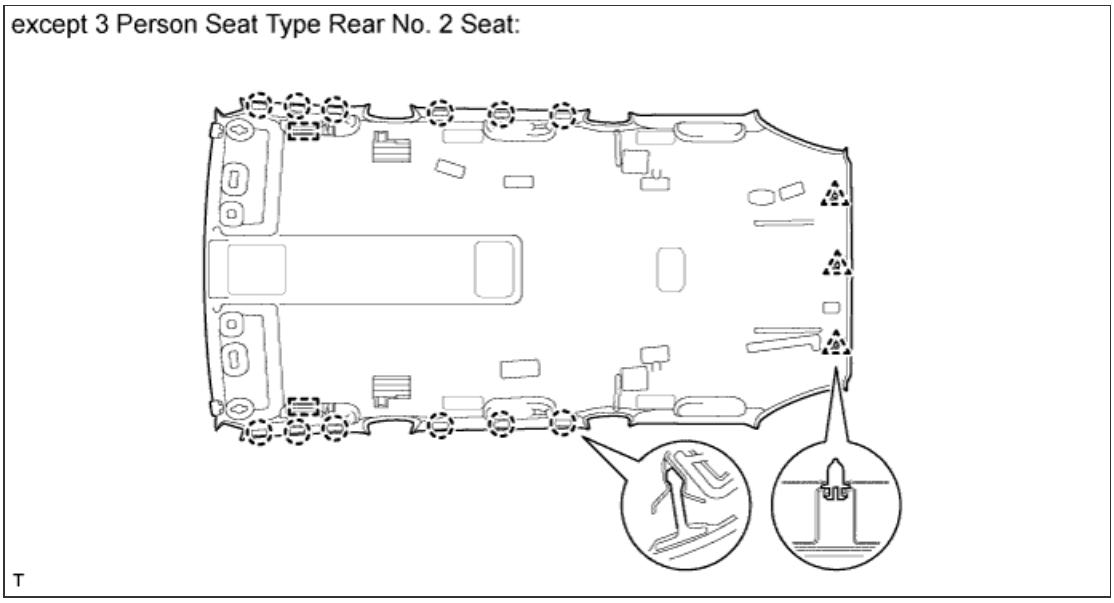

T

k. Remove the headlining from the rear of the vehicle as shown in the illustration.

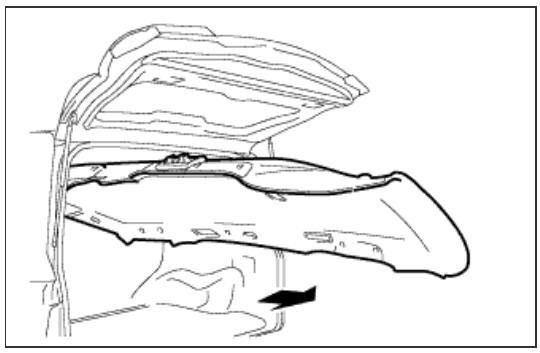

NOTICE:


Be careful not to damage the roof headlining when taking it out.

48. REMOVE FRONT ROOF SIDE RAIL GARNISH LH

a. Detach the 3 clips.

b. Cut off the 3 clips and remove the roof side rail garnish.

c. Remove 3 clips from the vehicle body.

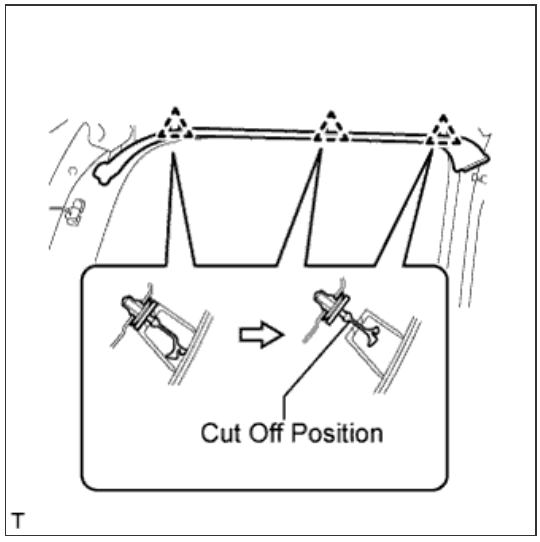

T


49. REMOVE FRONT ROOF SIDE RAIL GARNISH RH

HINT:

Use the same procedures described for the LH side.

50. REMOVE FRONT DOOR OPENING TRIM EATHERSTRIP LH

a. Remove the front door opening trim weatherstrip.

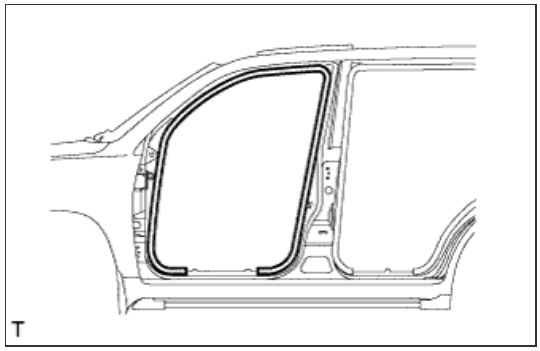


51. REMOVE FRONT DOOR OPENING TRIM EATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

52. REMOVE REAR DOOR OPENING TRIM EATHERSTRIP LH

a. Remove the rear door opening trim weatherstrip.

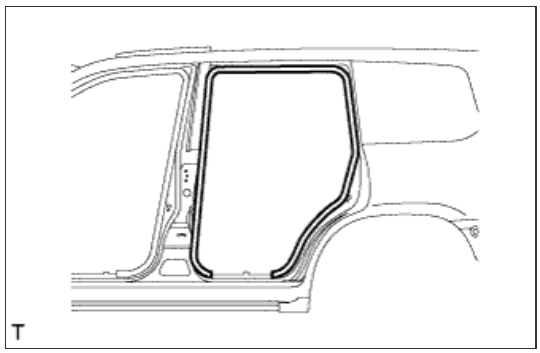


53. REMOVE REAR DOOR OPENING TRIM EATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

54. REMOVE BACK DOOR EATHERSTRIP


a. Remove the back door weatherstrip.

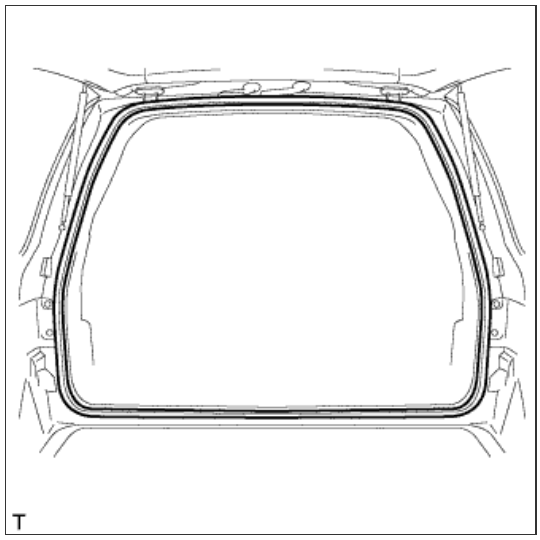

55. REMOVE FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the front door scuff plate outside.

b. Detach the 4 clips and remove the front door scuff plate outside.

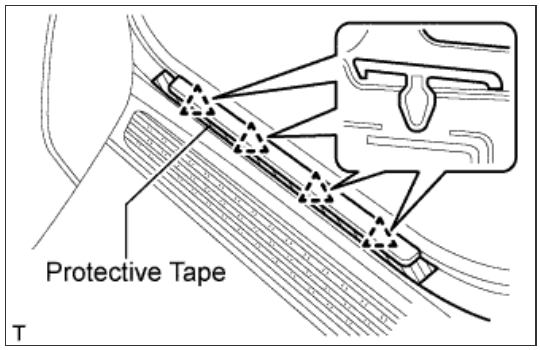

56. REMOVE FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

57. REMOVE REAR DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the rear door scuff plate outside.

b. Detach the 3 clips and remove the rear door scuff plate outside.

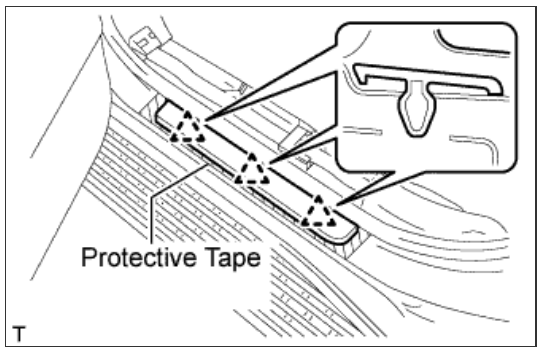


58. REMOVE REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

59. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws of the plate, and slide the plate in the direction of the arrow to remove it.

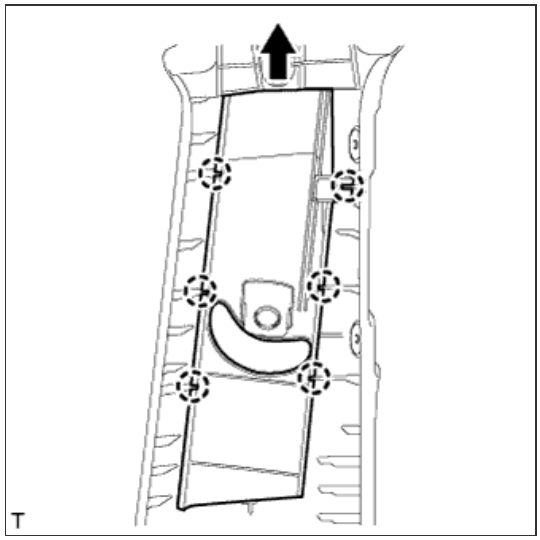


60. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

61. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws and remove the plate.

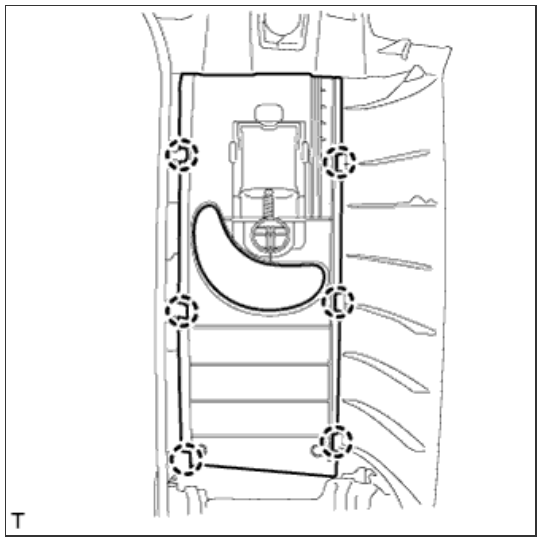


62. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

63. REMOVE ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 7 claws and remove the cover.

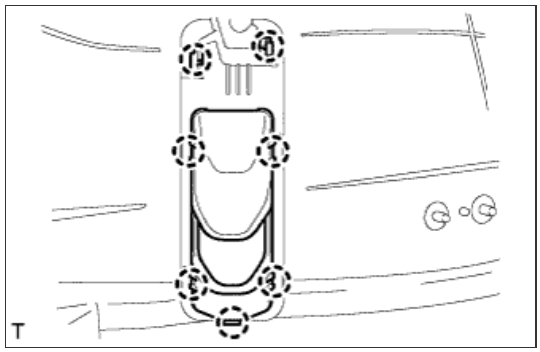

64. REMOVE ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedures described for the LH side.

65. REMOVE REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to remove the hanger on the other side.

a. Remove the 2 spring nuts and hanger.

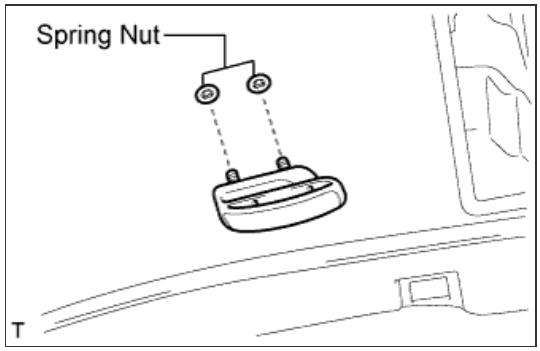

66. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Remove the 2 spring nuts and hanger.

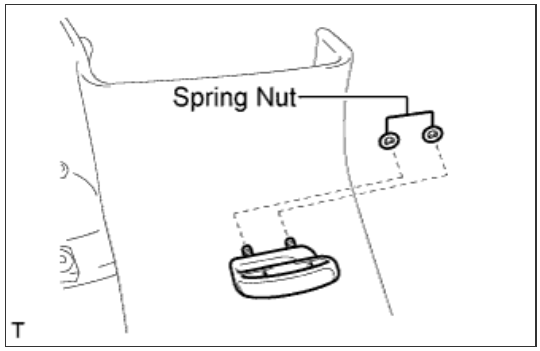


67. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:

Use the same procedures described for the LH side.


68. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY LH

a. w/ Rear Heater:
Remove the 8 screws and duct.

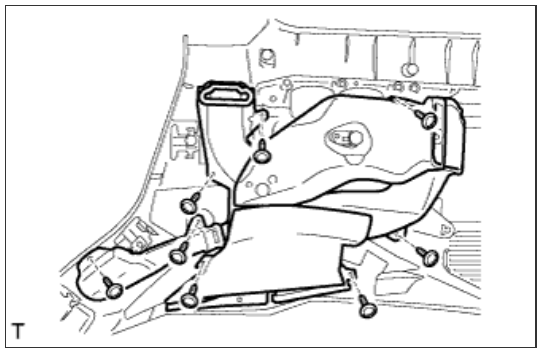

b. Remove the 7 screws.


c. Detach the 4 claws and remove the uarter trim cover.

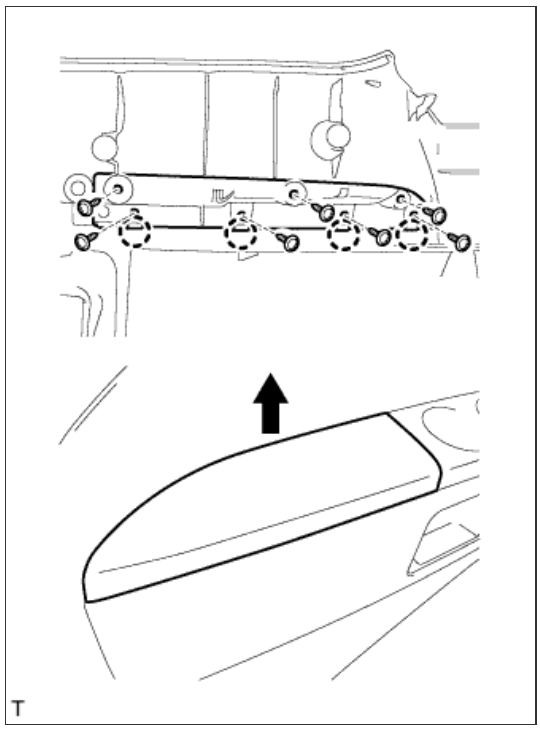

69. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY RH

a. Remove the 7 screws.


b. Detach the 4 claws and remove the uarter trim cover.

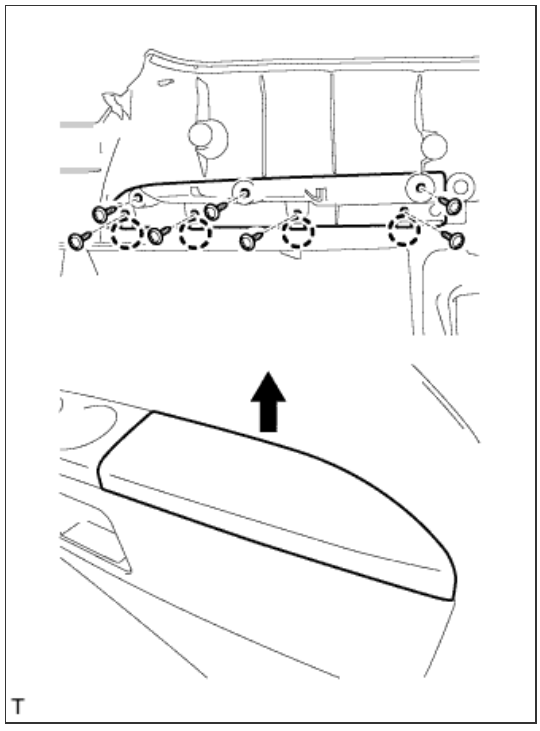

70. REMOVE NO. 2 CUP HOLDER

a. Remove the 5 screws.


b. Detach the 3 claws and remove the cup holder.

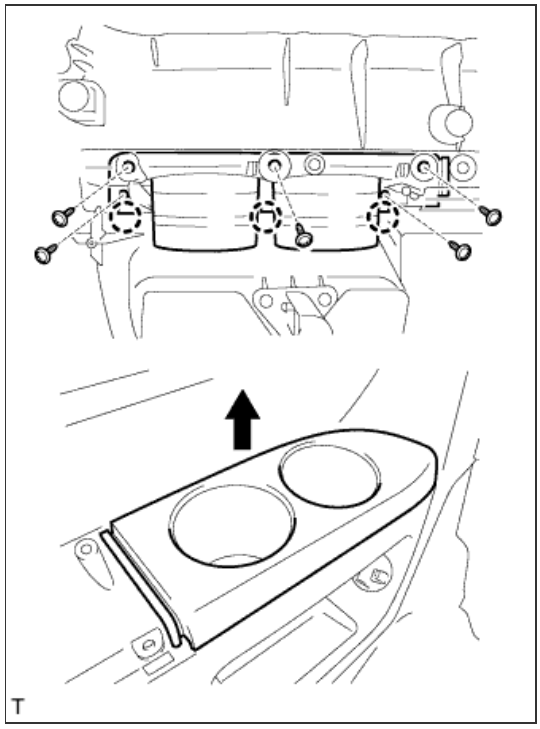

71. REMOVE NO. 1 CUP HOLDER

a. Remove the 5 screws.


b. Detach the 3 claws and remove the cup holder.

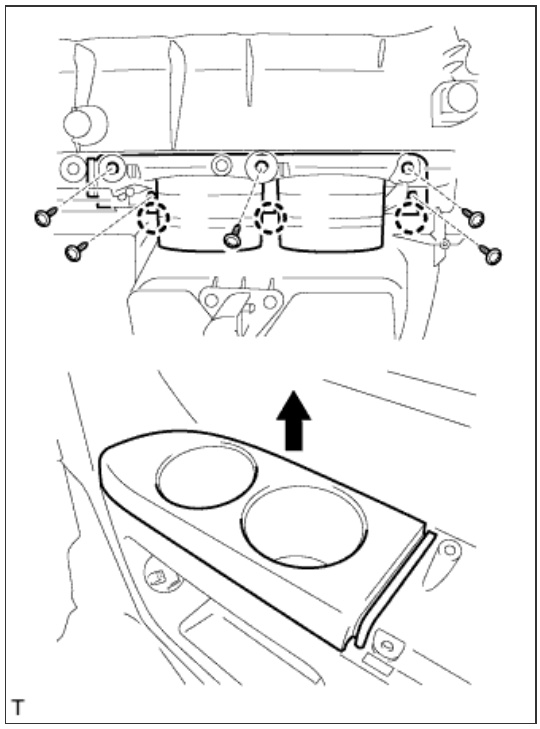

72. REMOVE TONNEAU COVER HOLDER BRACKET LH (w/ Tonneau Cover)

a. Remove the 8 screws.

b. Detach the 3 claws and remove the tonneau cover holder bracket and front uarter trim base.

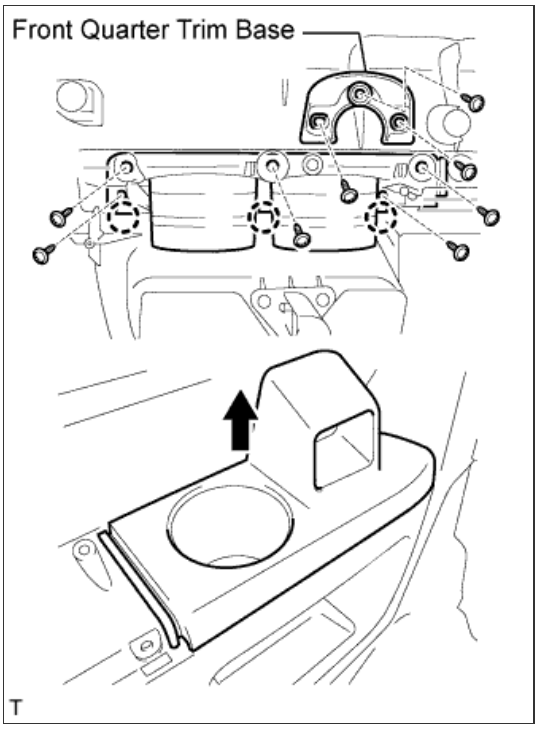


73. REMOVE TONNEAU COVER HOLDER BRACKET RH (w/ Tonneau Cover)

HINT:

Use the same procedures described for the LH side.

74. REMOVE TONNEAU COVER HANGER LH (w/ Tonneau Cover)

a. Remove the 2 screws, tonneau cover hanger and rear uarter trim base.

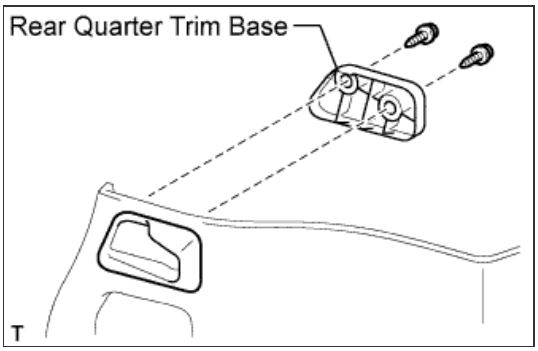


75. REMOVE TONNEAU COVER HANGER RH (w/ Tonneau Cover)

HINT:

Use the same procedures described for the LH side.


76. REMOVE NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

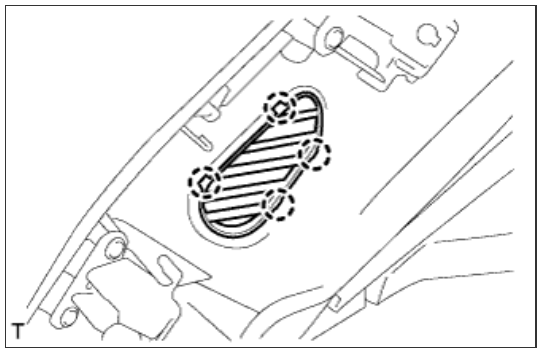


77. REMOVE NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Remove the 6 screws and duct.

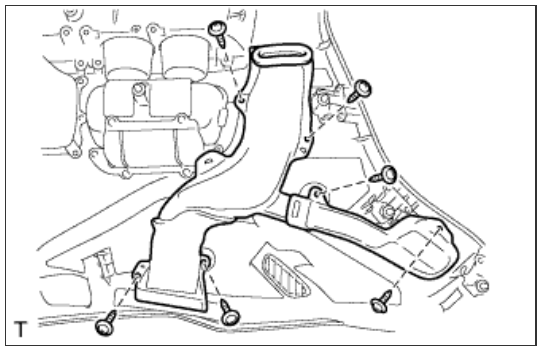


b. Detach the 4 claws and remove the cover.

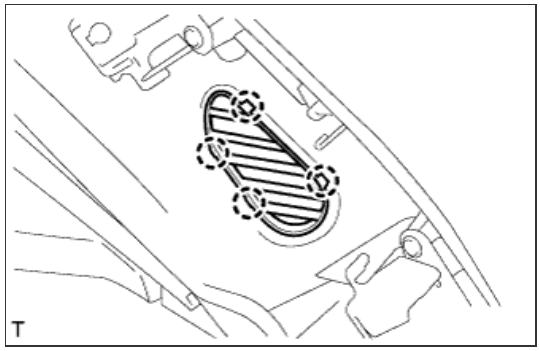

78. REMOVE NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

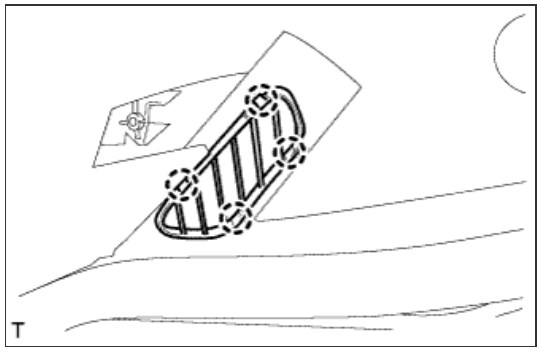

79. REMOVE NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.

80. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 4 claws and remove the seat lock control lever.


81. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

82. REMOVE REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

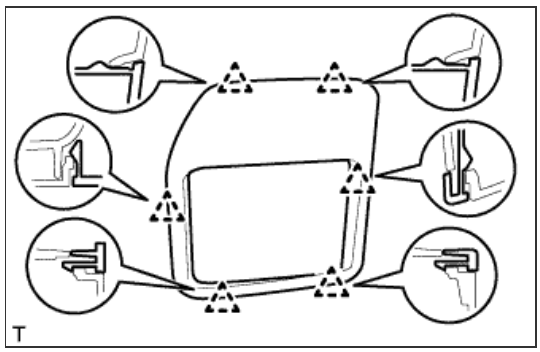


83. REMOVE REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

84. REMOVE QUARTER TRIM COVER LH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

a. Detach the 6 clips and remove the uarter trim cover.

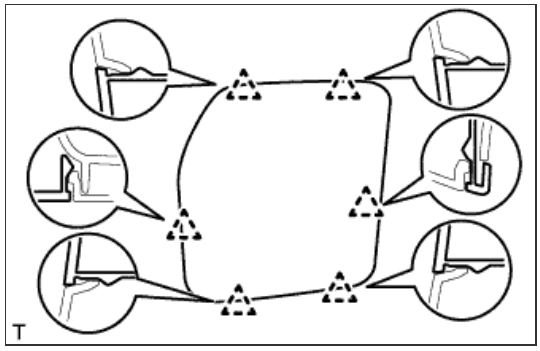

85. REMOVE QUARTER TRIM COVER RH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

86. REMOVE QUARTER TRIM LID SUB-ASSEMBLY RH


a. Remove the uarter trim lid.

87. REMOVE SIDE TRIM BOX COVER

a. Remove the side trim box cover.

88. REMOVE SIDE TRIM BOX

a. Remove the 9 screws and side trim box.

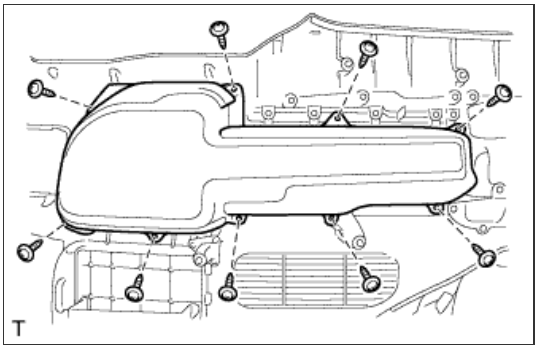

for Preparation Click here

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected (Click here).

2. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)

a. Remove the tonneau cover.

3. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).

4. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

5. REMOVE REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Remove the rear No. 2 seat assembly LH (Click here).


6. REMOVE REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

7. REMOVE FRONT DOOR SCUFF PLATE LH

a. Detach the 7 claws and 4 clips, and remove the scuff plate.

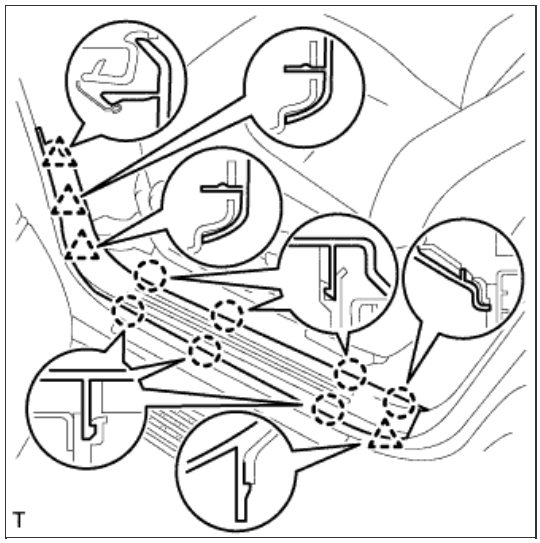

8. REMOVE FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

9. REMOVE REAR STEP COVER

HINT:

Use the same procedure to remove the step cover on the other side.

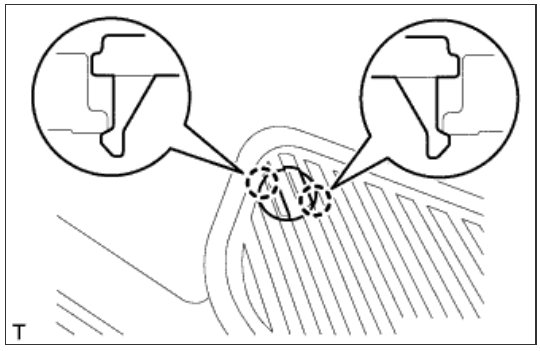


a. Detach the 2 claws and remove the step cover.

10. REMOVE REAR DOOR SCUFF PLATE LH

a. Remove the screw.

b. Detach the 3 claws and 4 clips, and remove the scuff plate.

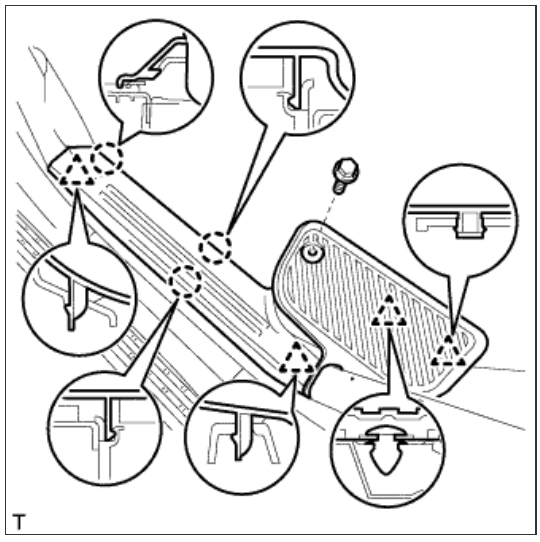


11. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

12. REMOVE REAR FLOOR MAT REAR SUPPORT PLATE

a. Detach the 6 clips and remove the support plate.

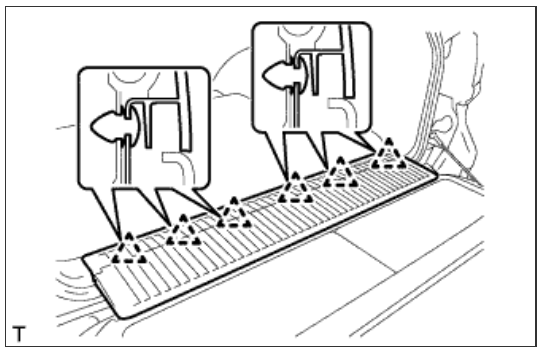


13. REMOVE FRONT ASSIST GRIP SUB-ASSEMBLY

HINT:


Use the same procedure to remove the front assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

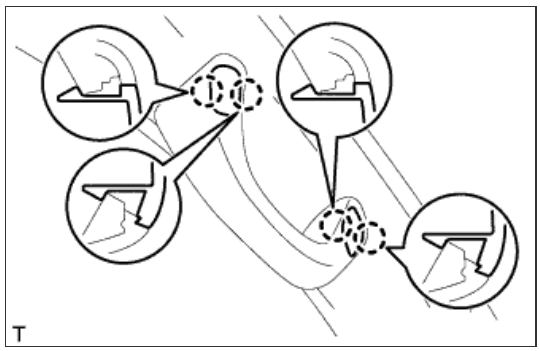

b. Remove the 2 bolts.


c. Detach the 2 claws and remove the front assist grip.

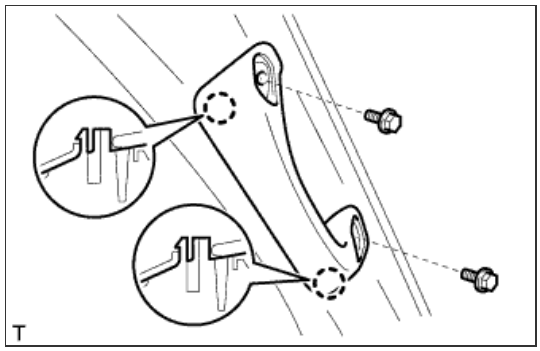

14. REMOVE FRONT PILLAR GARNISH LH

a. Detach the clip and 3 guides, and remove the front pillar garnish.

b. for 9, 14 Speakers:
Disconnect the speaker connector and then remove the front pillar garnish.

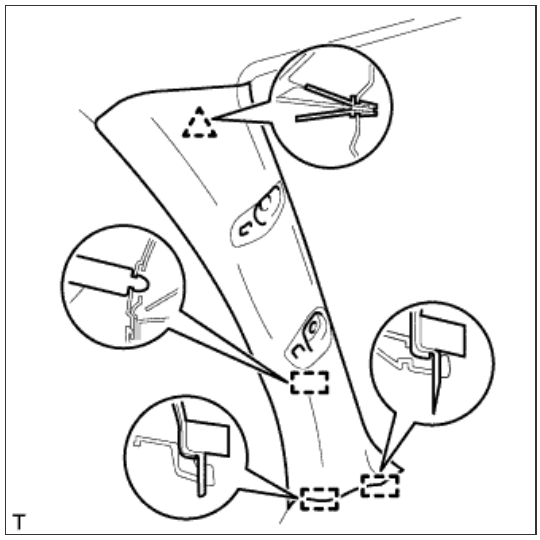


c. Protect the curtain shield airbag.

i. horoughly cover the airbag with a cloth or nylon sheet and fix the ends of the cover with adhesive tape, as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

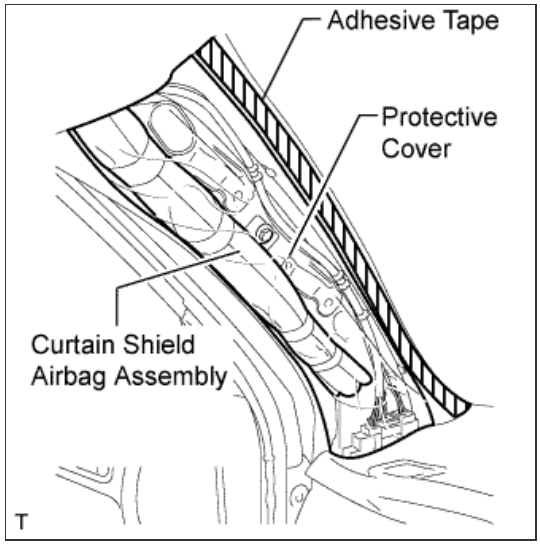

15. REMOVE FRONT PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

16. REMOVE CENTER PILLAR GARNISH COVER LH

HINT:

- **for Manual Seat:**
  hen removing the center pillar garnish cover, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  hen removing the center pillar garnish cover, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Detach the 2 clips and 2 guides, and remove the cover.

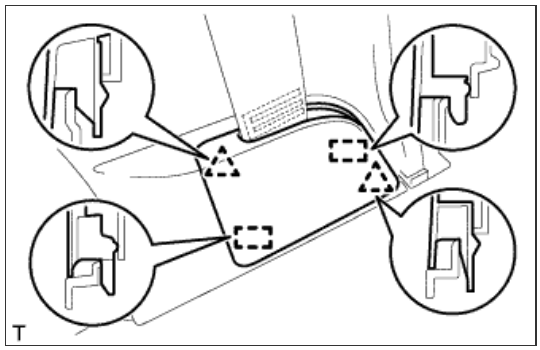

17. REMOVE CENTER PILLAR GARNISH COVER RH

HINT:


Use the same procedures described for the LH side.

18. REMOVE CENTER LO ER PILLAR GARNISH LH


HINT:

- **for Manual Seat:**
  hen removing the center lower pillar garnish, move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  hen removing the center lower pillar garnish, connect the cable to the negative (-) battery terminal and operate the power seat switch to move the front seat and seatback to the foremost upright position.
- **for Power Seat:**
  After moving the front seat, disconnect the cable from the negative (-) battery terminal.

a. Remove the bolt and seat belt anchor.

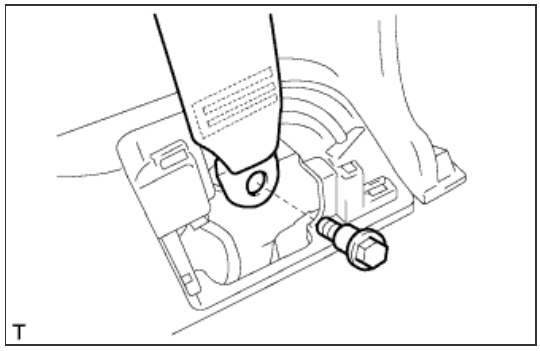

b. Detach the 2 claws and 7 clips, and remove the center lower pillar garnish.

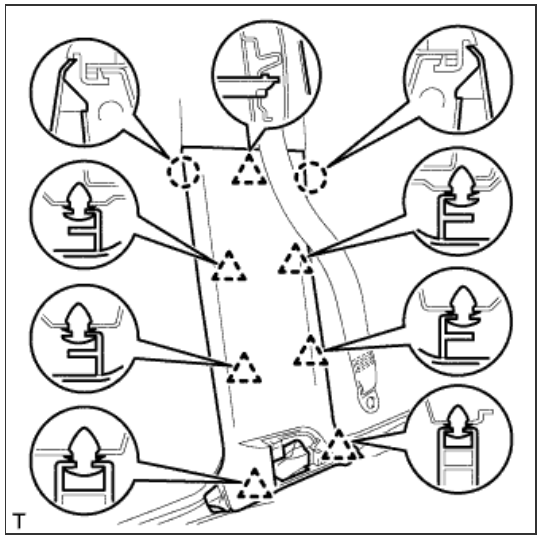

19. REMOVE CENTER LO ER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

20. REMOVE REAR ASSIST GRIP ASSEMBLY

HINT:


Use the same procedure to remove the rear assist grip on the other side.

a. Detach the 4 claws and remove the 2 assist grip plugs.

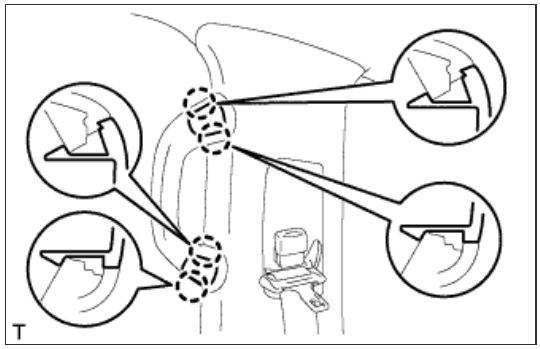

b. Remove the 2 bolts.

c. Detach the 2 claws and remove the rear assist grip.

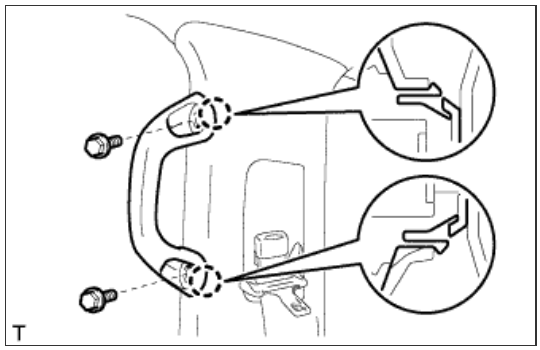


21. REMOVE CENTER PILLAR GARNISH LH

a. Remove the bolt.

b. Detach the 2 clips and 2 guides.

c. Pass the seat belt anchor through the center pillar garnish, and remove the center pillar garnish.

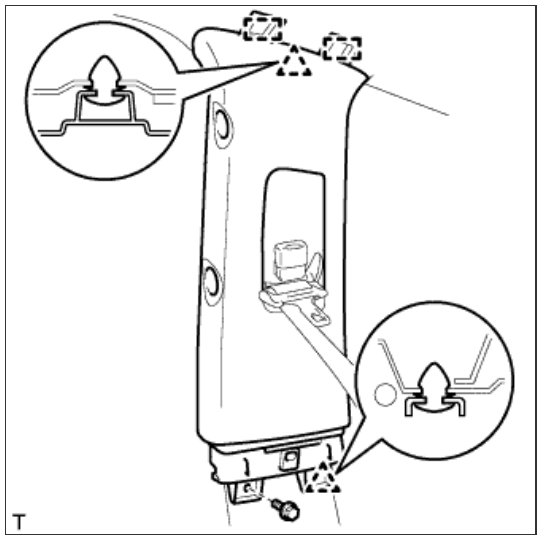

22. REMOVE CENTER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

23. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonneau Cover)

HINT:

Use the same procedure to remove the tonneau cover holder cap on the other side.

a. Detach the 2 claws and remove the tonneau cover holder cap.

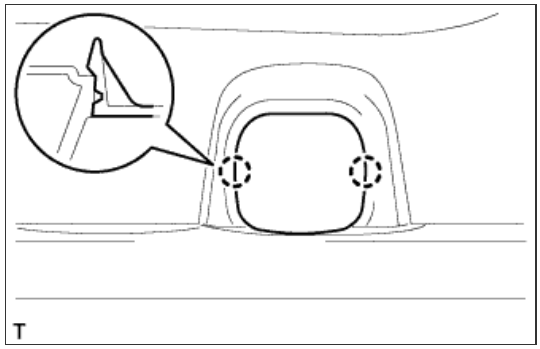

24. REMOVE REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)


HINT:

Use the same procedure to remove the rear seat cover cap on the other side.

a. Using a screwdriver, detach the 3 claws and remove the rear seat cover cap.

HINT:


ape the screwdriver tip before use.

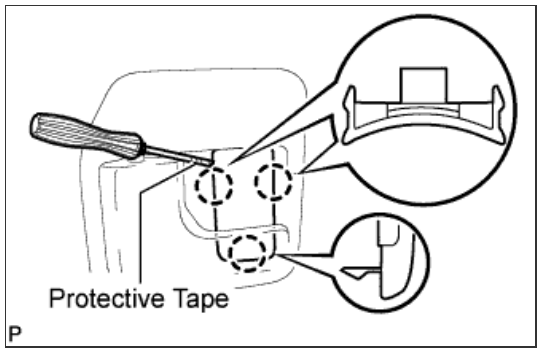


25. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:


When removing the front uarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

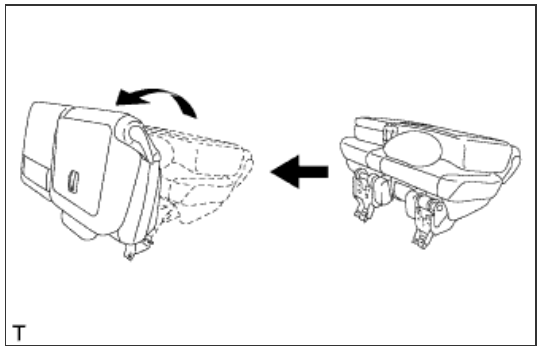


a. Detach the 3 claws and remove the cover.

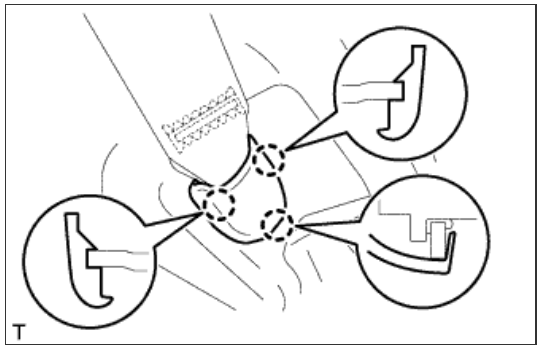

b. Remove the bolt and rear No. 1 seat belt anchor.

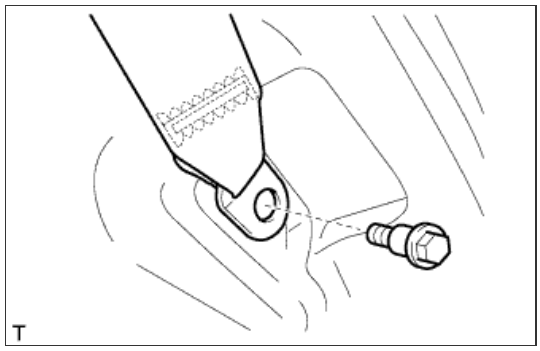

c. w/ Rear No. 2 Seat, except Face to Face Seat ype:
Remove the bolt and rear No. 2 seat belt anchor.

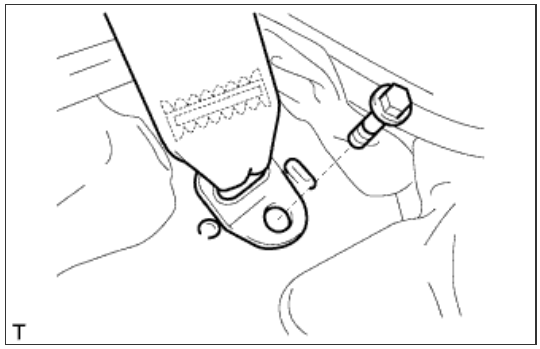


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 18 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the uarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the uarter trim panel.

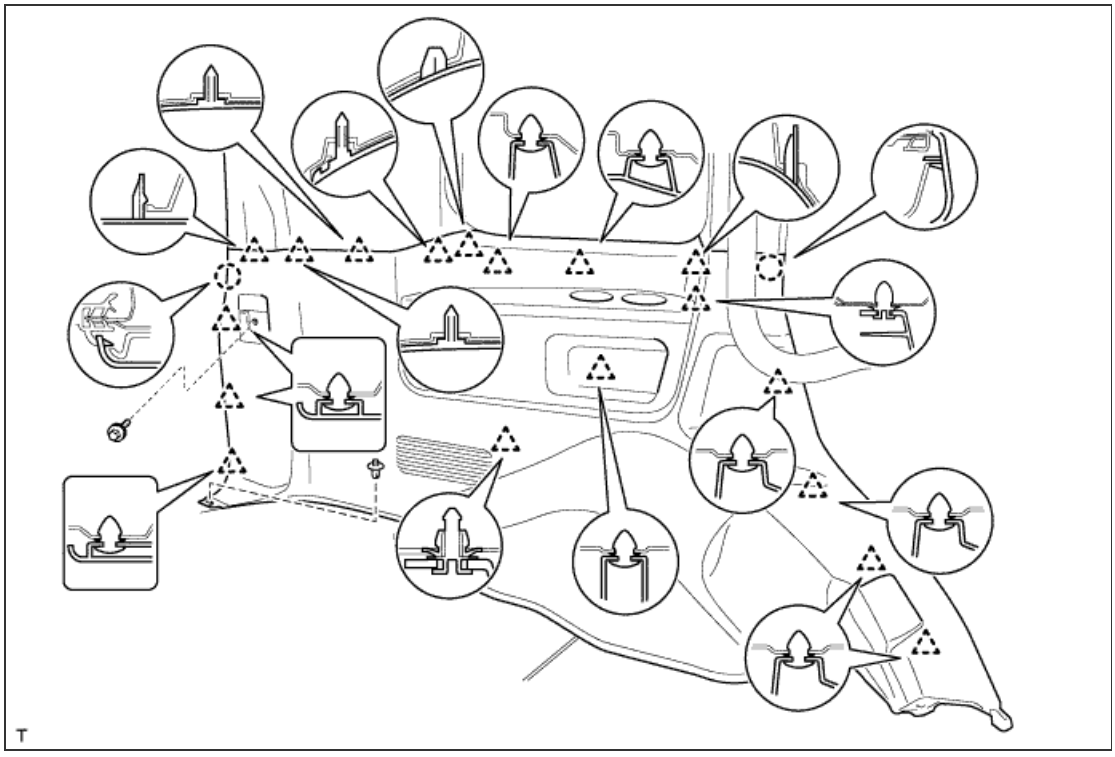

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.


ii. Detach the 18 clips and 2 claws, and remove the uarter trim panel.

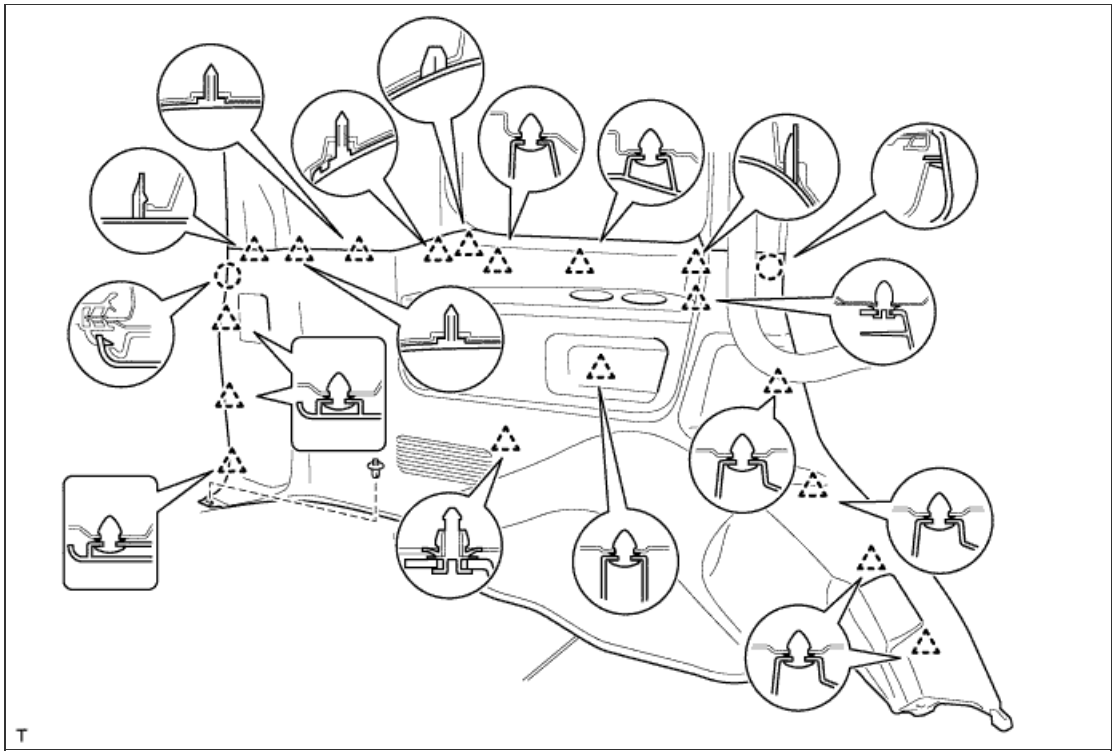

f. w/ onneau Cover:

i. Remove the screw and clip.


ii. Detach the 18 clips and 2 claws, and remove the uarter trim panel.

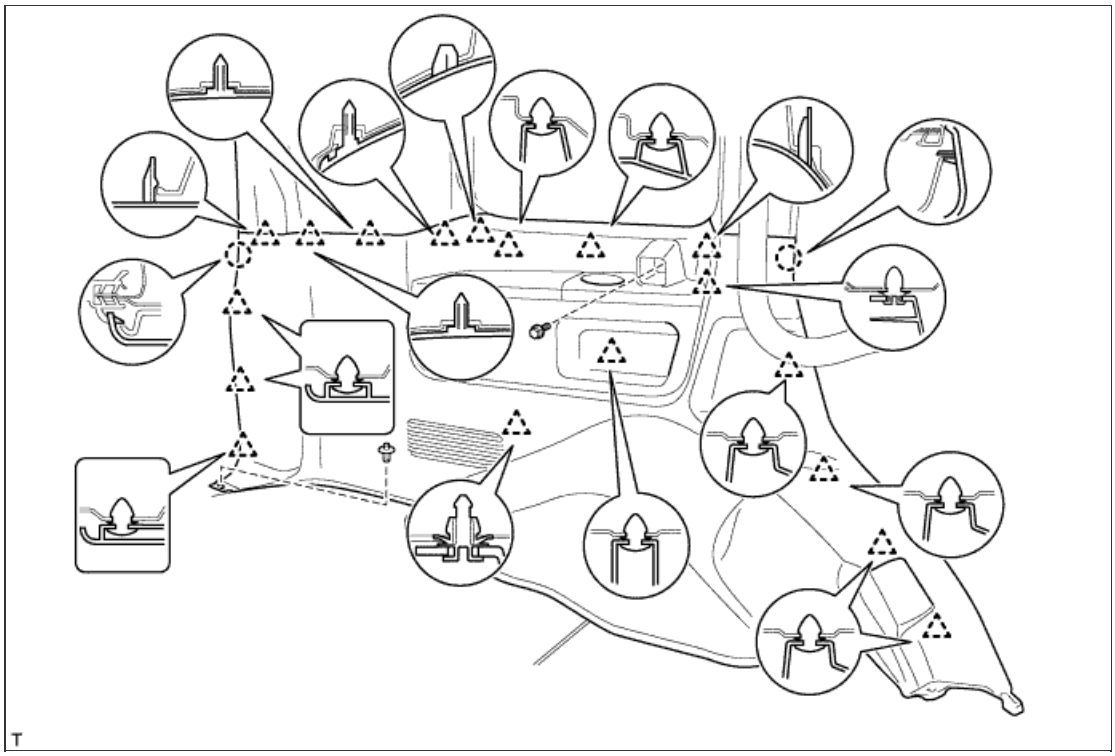


26. REMOVE FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:


When removing the front uarter trim panel, operate the reclining adjuster release handle and move the No. 1 rear seat to the position shown in the illustration.

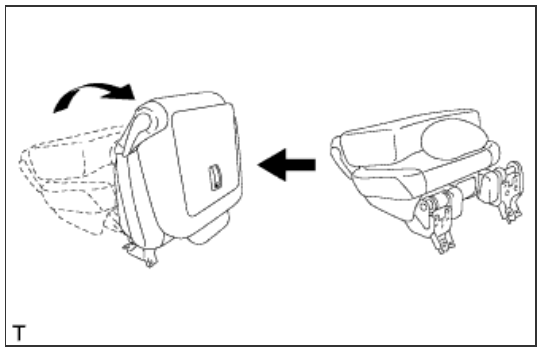

a. Detach the 3 claws and remove the cover.

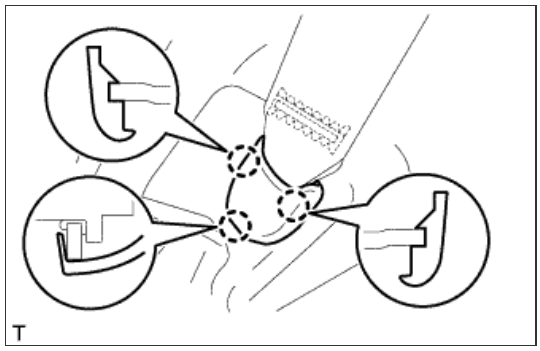


b. Remove the bolt and rear No. 1 seat belt anchor.

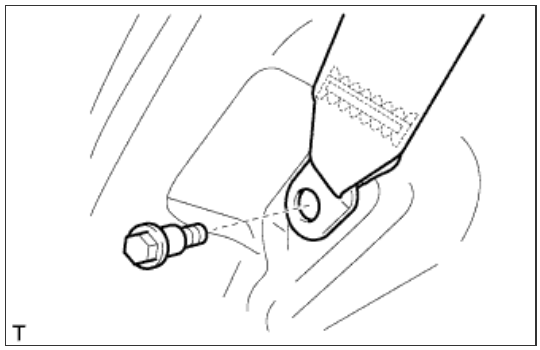


c. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Detach the 3 claws and remove the cover.

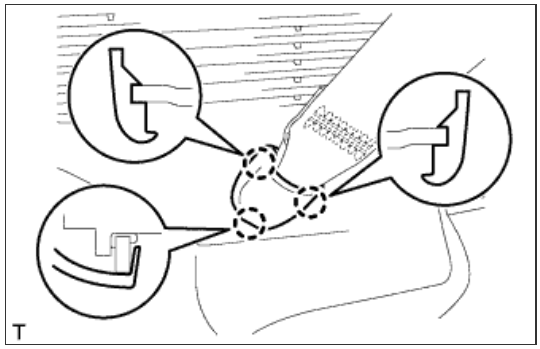

ii. Remove the bolt and rear No. 2 seat belt anchor.

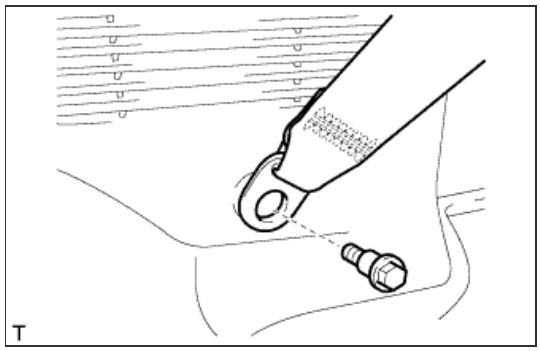


d. w/ Rear No. 2 Seat, except Face to Face Seat ype:

i. Remove the clip and bolt.

ii. Detach the 16 clips and 2 claws.

iii. w/o Rear Air Conditioning System:
Disconnect the rear seat lock control lever cable and then remove the uarter trim panel.


iv. w/ Rear Air Conditioning System:
Disconnect the thermistor connector and rear seat lock control lever cable, and then remove the uarter trim panel.

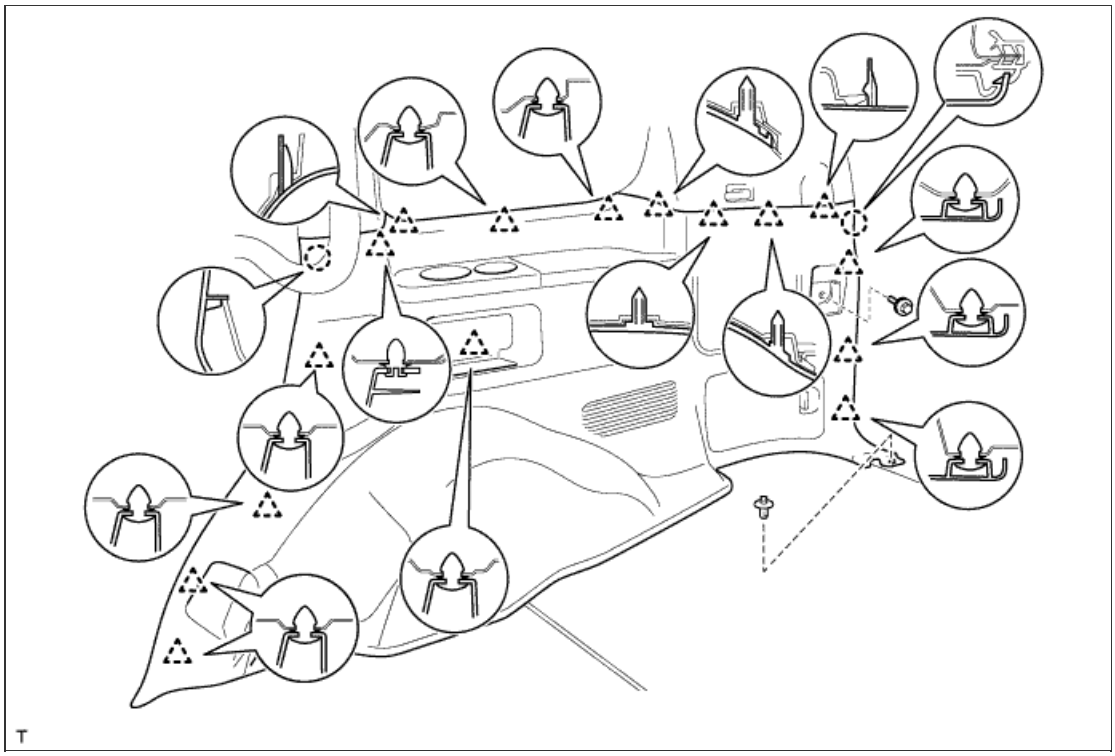

e. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat ype:

i. Remove the clip.


ii. Detach the 16 clips and 2 claws, and remove the uarter trim panel.

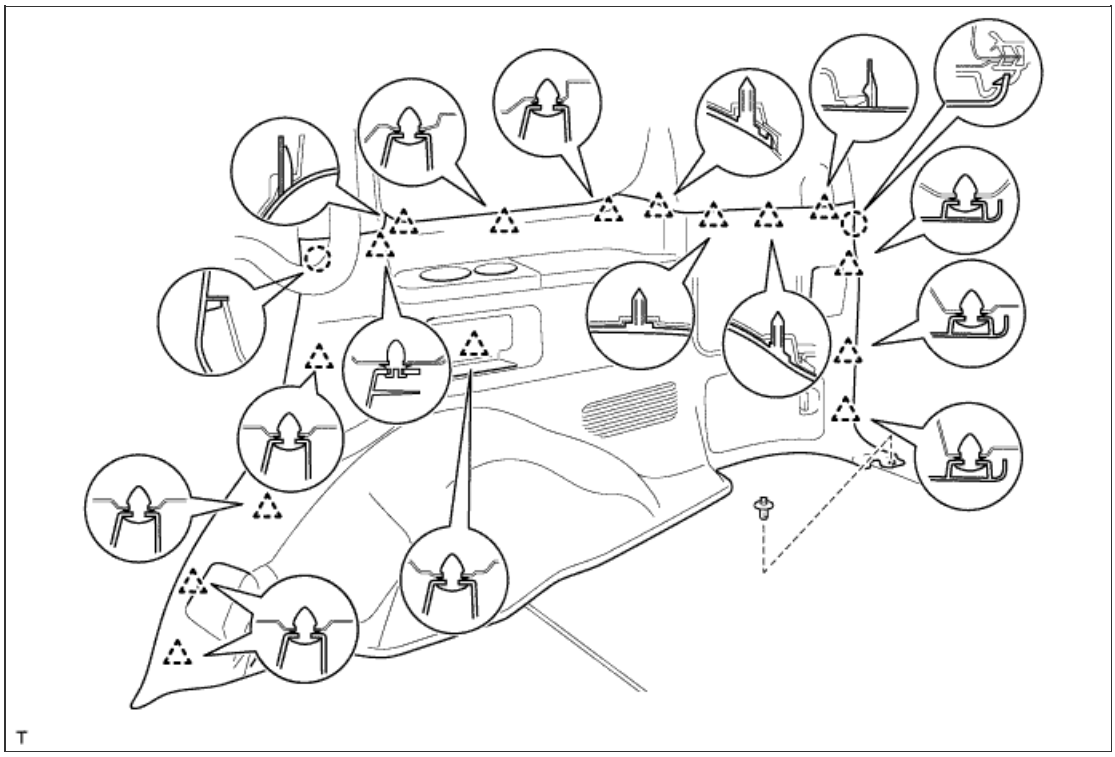

f. w/ onneau Cover:

i. Remove the screw and clip.

ii. Detach the 16 clips and 2 claws, and remove the uarter trim panel.

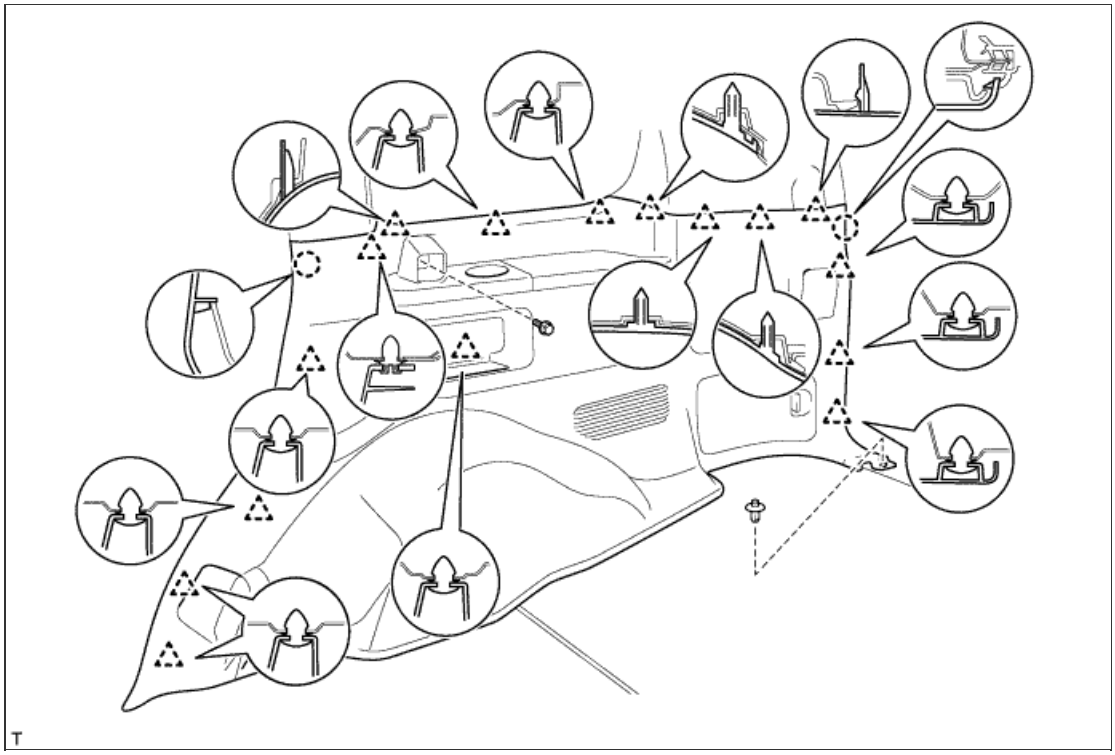


27. REMOVE REAR FRONT QUARTER TRIM GARNISH LH

a. Remove the screw.

b. Detach the clip and 2 guides.

c. Pass the seat belt anchor through the uarter trim garnish, and remove the uarter trim garnish.

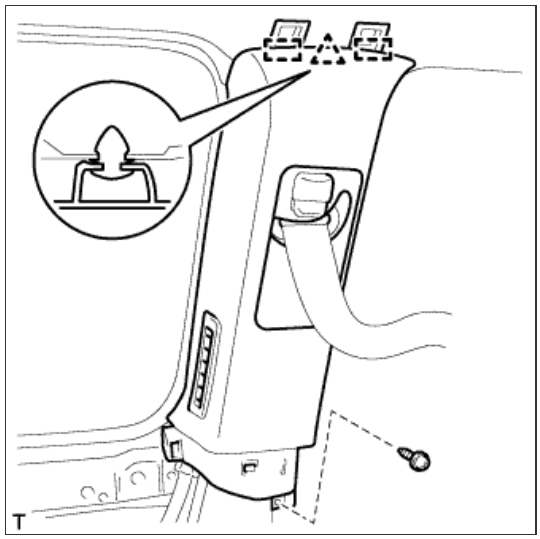

28. REMOVE REAR FRONT QUARTER TRIM GARNISH RH

HINT:

Use the same procedures described for the LH side.

29. REMOVE REAR UPPER PILLAR GARNISH LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype:


i. Using a screwdriver, detach the 2 claws and open the seat belt shoulder anchor cover.

HINT:


ape the screwdriver tip before use.



ii. Remove the bolt and seat belt shoulder anchor.

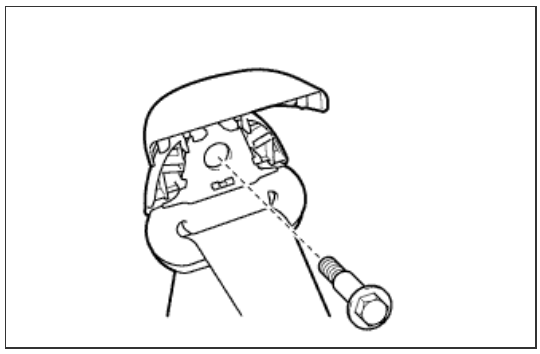

b. Detach the 5 clips and remove the rear upper pillar garnish.

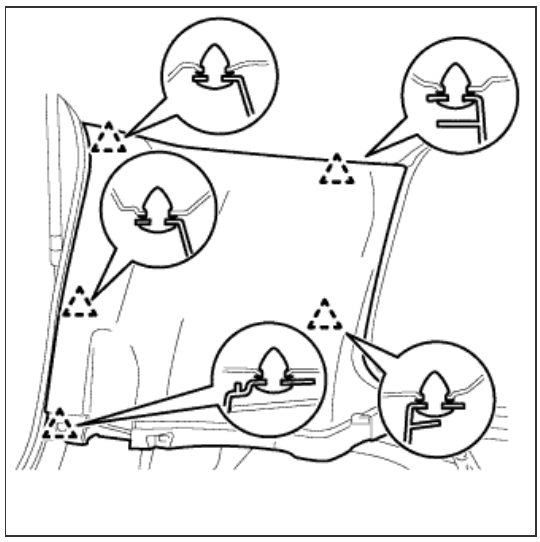

30. REMOVE REAR UPPER PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.

31. REMOVE MAP LIGHT ASSEMBLY (w/ Map Light)

a. Using a screwdriver, detach the 2 claws and open the 2 covers.


HINT:

ape the screwdriver tip before use.

b. Remove the 2 screws.

c. Detach the 2 clips and 2 guides.

d. Disconnect the connector and then remove the map light.

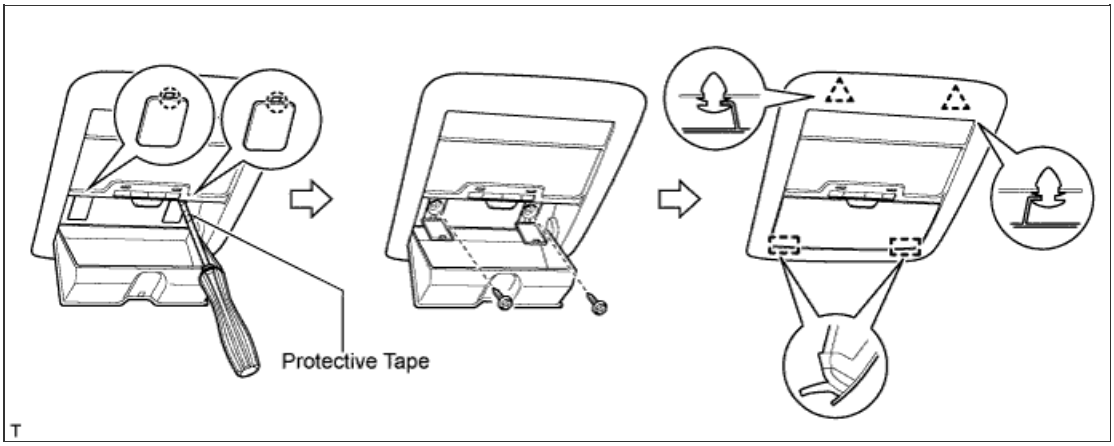


32. REMOVE NO. 1 ROOM LIGHT ASSEMBLY

a. w/ ap Light:
Remove the No. 1 room light assembly.

i. Detach the 4 clips.

ii. Disconnect the connector and then remove the room light.

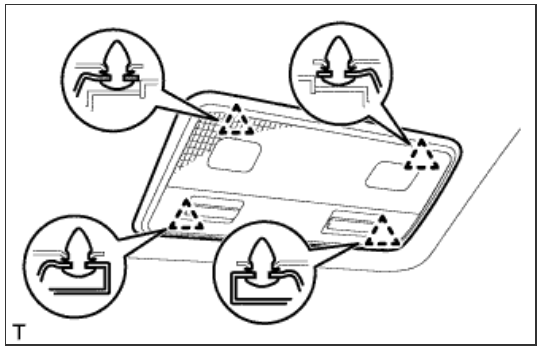


b. w/o ap Light:
Remove the No. 1 room light assembly.


i. Using a screwdriver, detach the 4 claws and remove the room light lens.

HINT:

ape the screwdriver tip before use.

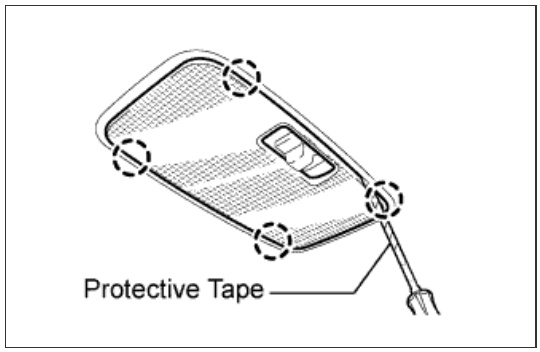


ii. Remove the 2 covers.

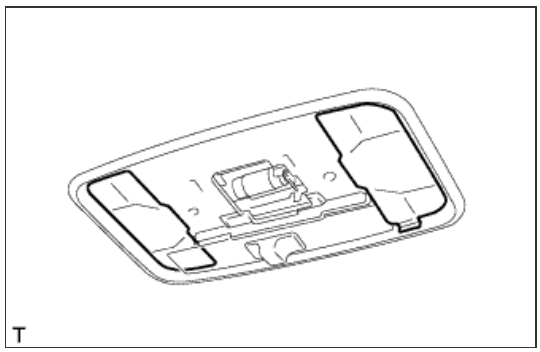


iii. Using a screwdriver, push the 2 levers in the direction of the arrows in the illustration, and detach the 2 claws labeled A.

iv. Detach the 2 claws labeled B.

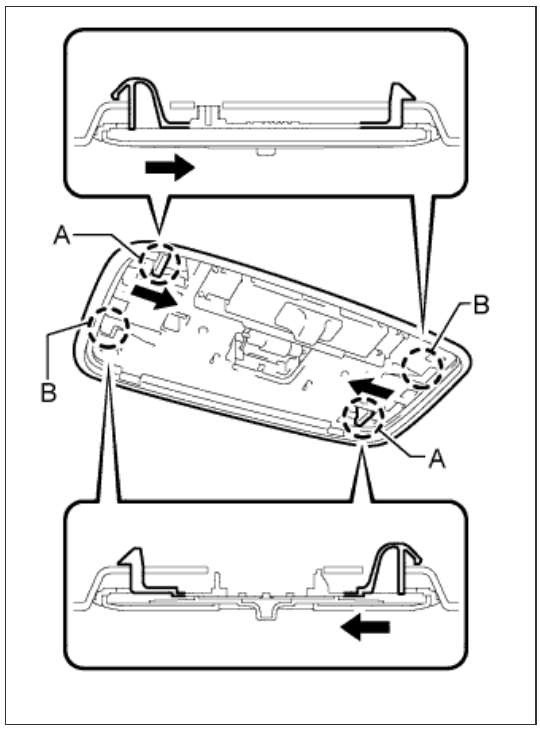

v. Detach the 4 claws and remove the room light from the room light switch base.

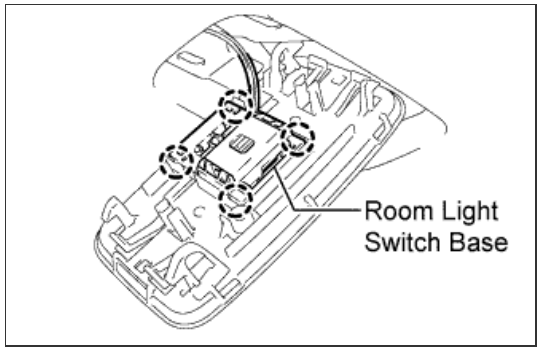


33. REMOVE NO. 2 ROOM LIGHT ASSEMBLY


a. Using a screwdriver, detach the 4 claws and remove the room light lens.

HINT:

ape the screwdriver tip before use.

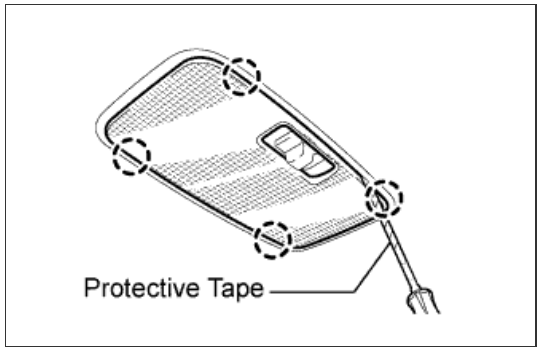


b. Remove the 2 covers.

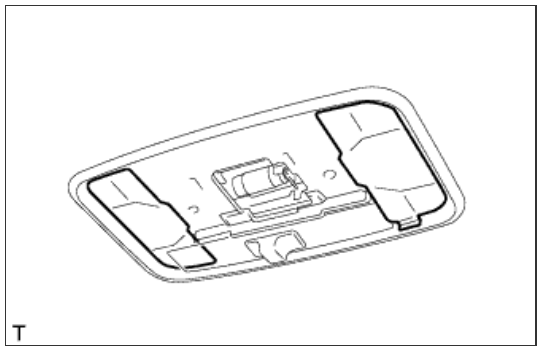


c. Using a screwdriver, push the 2 levers in the direction of the arrows in the illustration, and detach the 2 claws labeled A.

d. Detach the 2 claws labeled B.

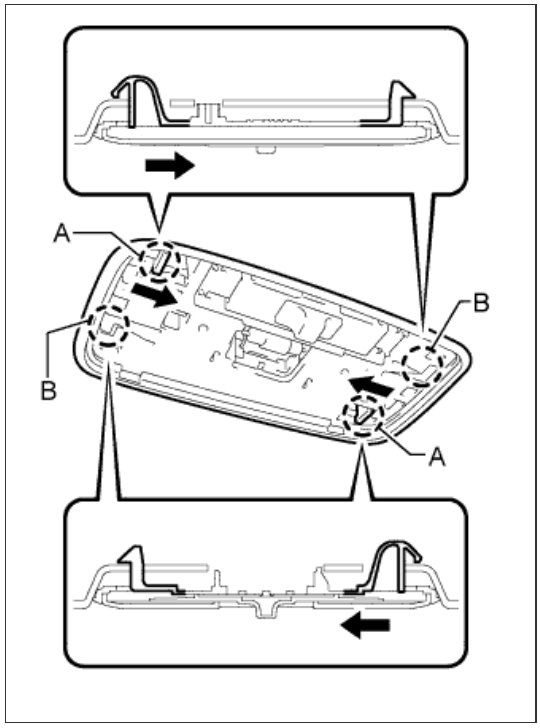

e. Detach the 4 claws and remove the room light from the room light switch base.

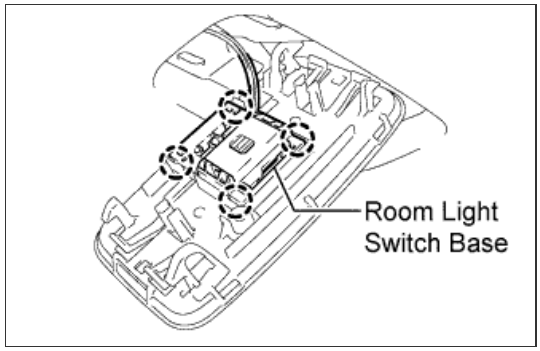


34. REMOVE VISOR BRACKET COVER

HINT:


Use the same procedure to remove the visor bracket cover on the other side.

a. Detach the 4 claws and remove the visor bracket cover.

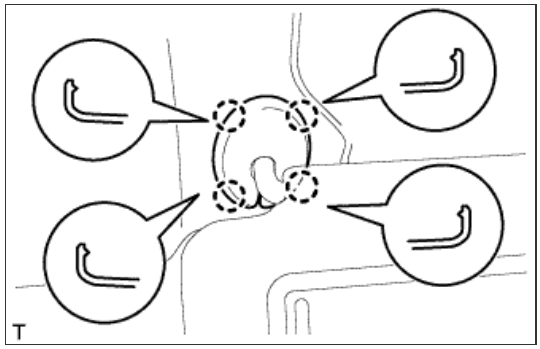

35. REMOVE VISOR ASSEMBLY LH

a. Remove the 2 screws and visor.

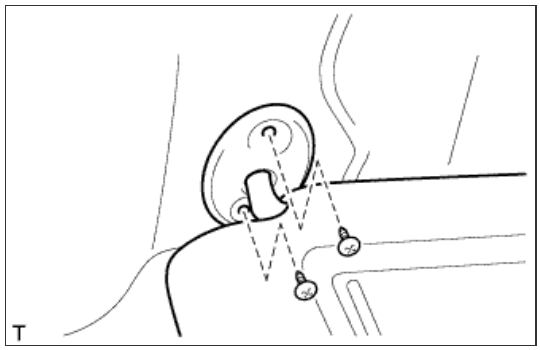

36. REMOVE VISOR ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


37. REMOVE VISOR HOLDER

HINT:

Use the same procedure to remove the visor holder on the other side.

a. urn the visor holder approximately 45° and pull it out as shown in the illustration.

b. Detach the 2 claws and remove the visor holder.

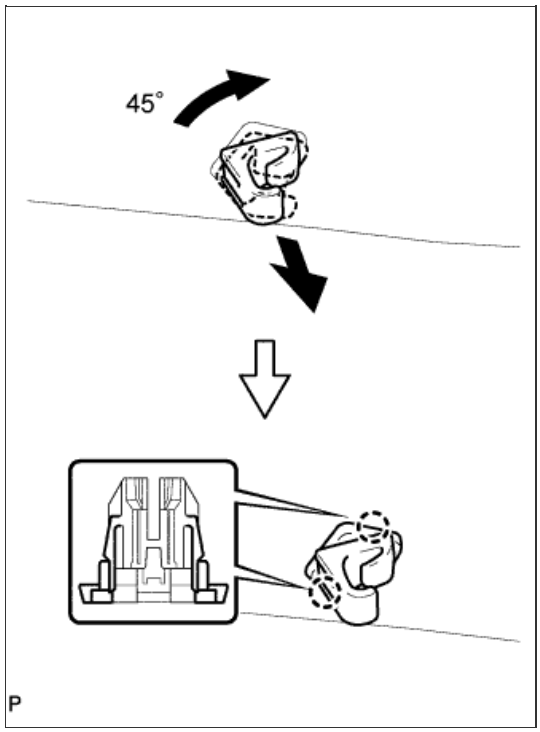


38. REMOVE CENTER VISOR ASSEMBLY LH (w/ Sub Visor)

a. Using a screwdriver, pry off the cover to detach the 2 clips and remove the center visor.

HINT:

ape the screwdriver tip before use.

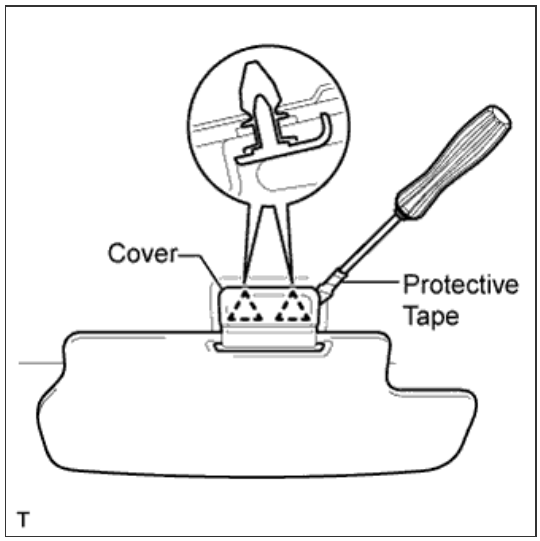


39. REMOVE CENTER VISOR ASSEMBLY RH (w/ Sub Visor)

HINT:

Use the same procedures described for the LH side.


40. REMOVE INNER REAR VIE MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Detach the 2 claws and remove the cover as shown in the illustration.

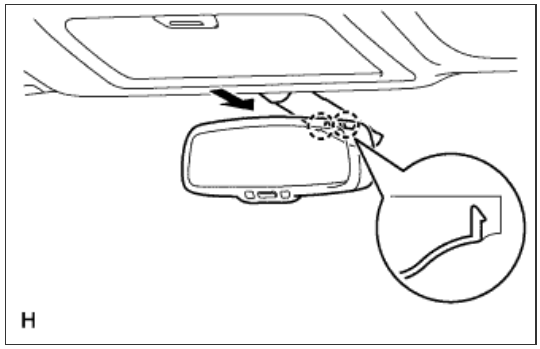

41. REMOVE RAIN SENSOR COVER (w/ Rain Sensor)


a. Slide the No. 2 cover in the direction of the arrow labeled (1).

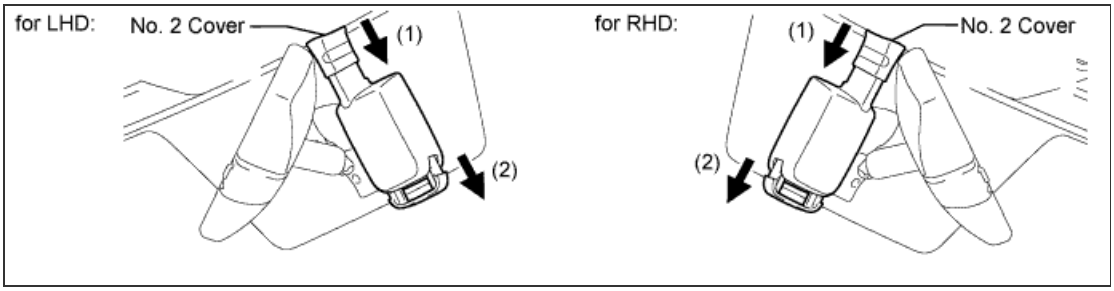

b. Pull the stopper in the direction of the arrow labeled (2) to remove the No. 2 cover.

42. REMOVE SEAT BELT ANCHOR COVER (for 3 Person Seat Type Rear No. 2 Seat)

a. Detach the 4 clips and 4 guides, and remove the seat belt anchor cover.

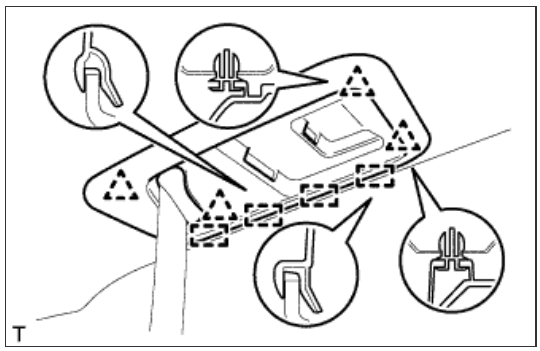

43. REMOVE ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to remove the assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.

c. Remove the 2 clips from the vehicle body.

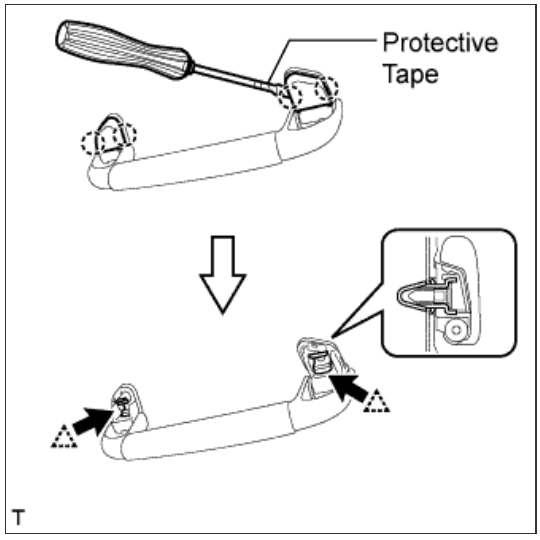

44. REMOVE NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat, except Face to Face Seat ype or w/o Rear No. 2 Seat:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

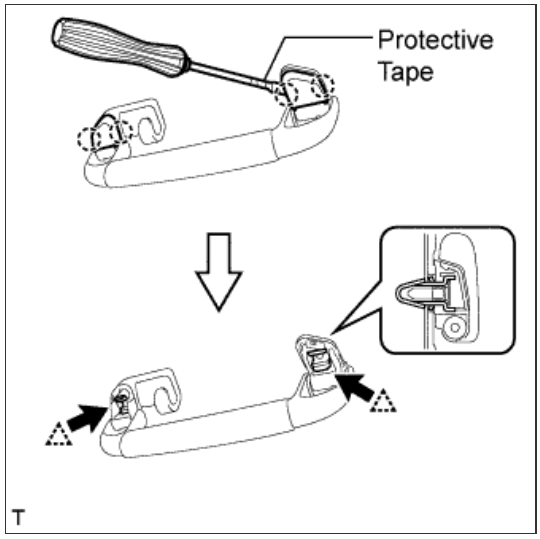

b. w/ Rear No. 2 Seat, for Face to Face Seat ype:
Remove the No. 2 assist grip assembly.


i. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

ii. Detach the 2 clips and remove the assist grip.

iii. Remove the 2 clips from the vehicle body.

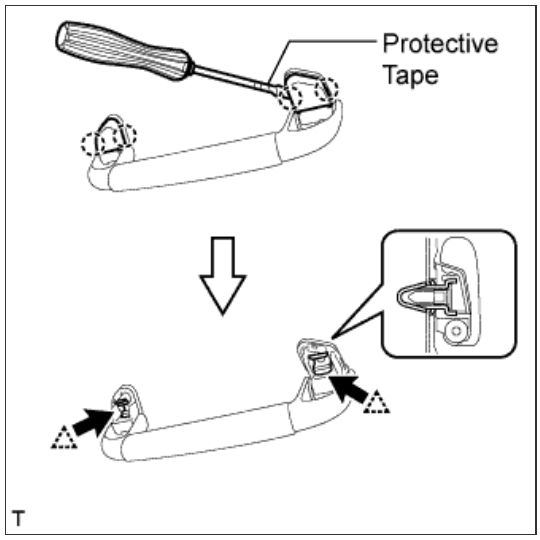

45. REMOVE NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

46. REMOVE 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat except Face to Face Seat Type)

HINT:

Use the same procedure to remove the 3rd seat assist grip on the other side.


a. Using a screwdriver, detach the 4 claws and remove the 2 assist grip covers.

HINT:

ape the screwdriver tip before use.

b. Detach the 2 clips and remove the assist grip.


c. Remove the 2 clips from the vehicle body.

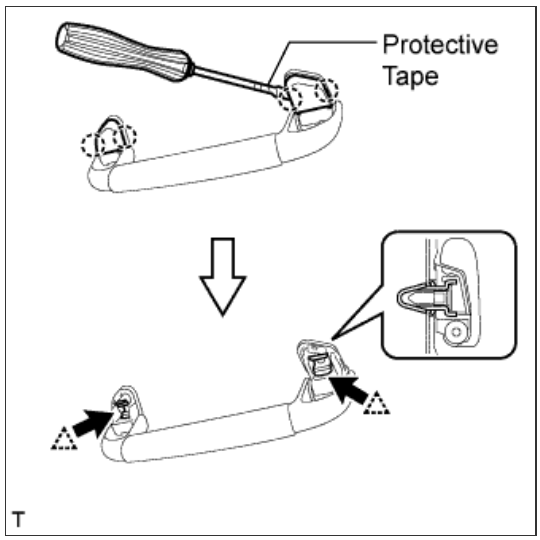


47. REMOVE ROOF HEADLINING ASSEMBLY

HINT:


- **for Manual Seat:**
  hen removing the roof headlining, move the front seat and rear No. 1 seat to the position shown in the illustration.
- **for Power Seat:**
  hen removing the roof headlining, connect the cable to the negative (-) battery terminal and move the front seat and No. 1 rear seat to the position shown in the illustration.
- **for Power Seat:**
  After moving the seats, disconnect the cable from the negative (-) battery terminal.

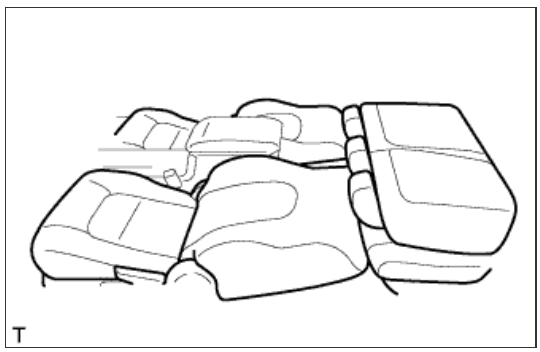

a. w/ EC Mirror:
Disconnect the inner mirror connector.

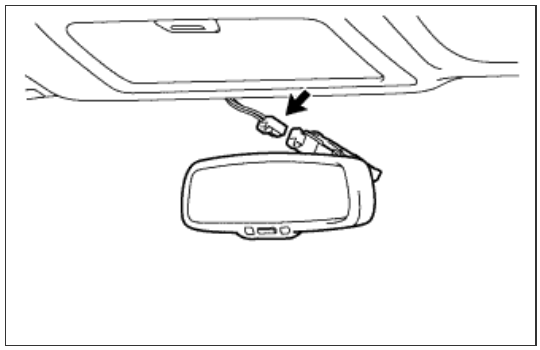


b. w/ Rain Sensor:
Disconnect the rain sensor connector.

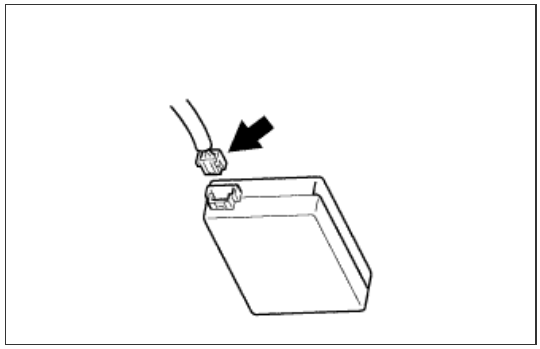

c. Disconnect the 3 roof wire connectors.


i. w/ Rear Wiper:
Disconnect the washer hose.

d. Detach the 4 clamps.

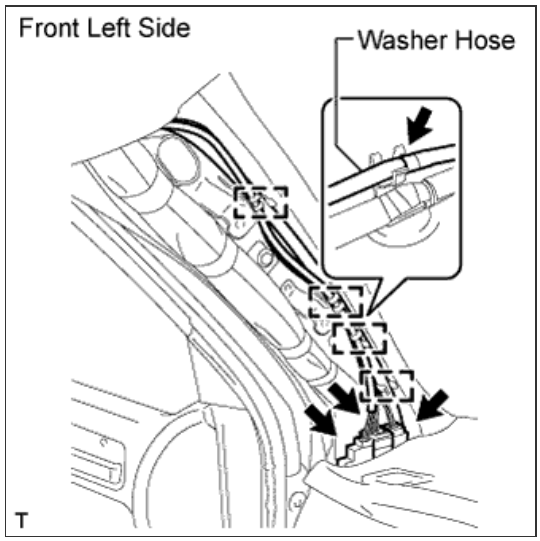


e. Remove the bolt.


f. Disconnect the antenna cord connector and detach the 2 clamps.

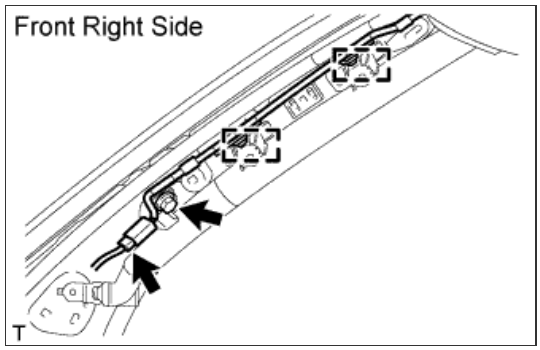


g. Disconnect the antenna cord connector.

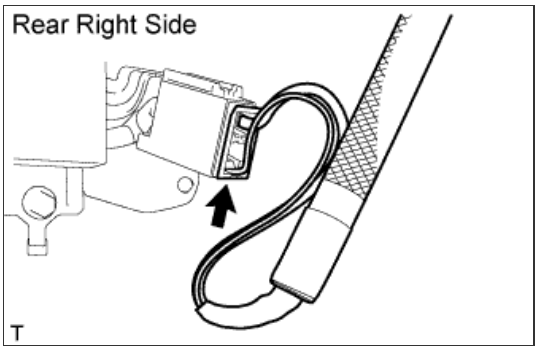

h. w/ Rear Wiper:
Disconnect the washer hose.

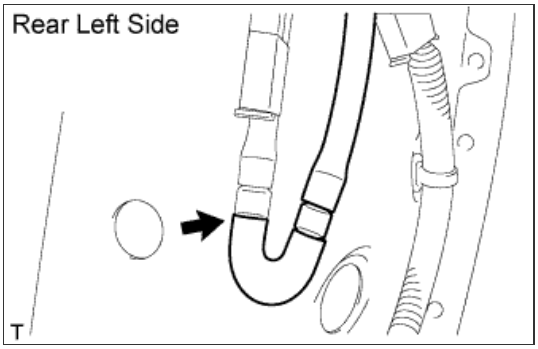


i. for 3 Person Seat ype Rear No. 2 Seat:
Detach the 12 claws, 2 clips and 2 guides.

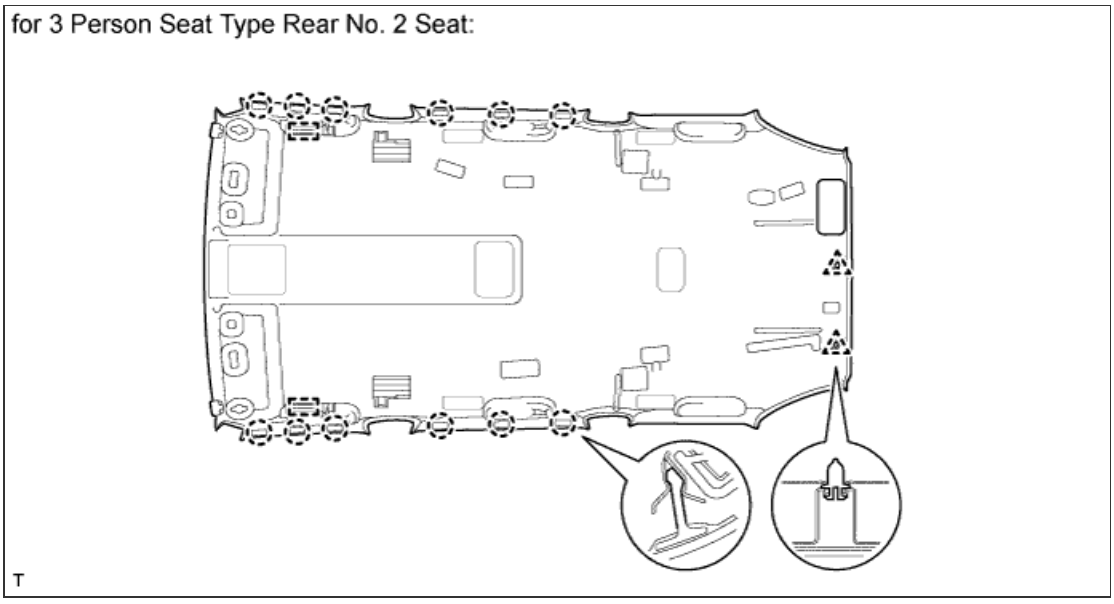


j. except 3 Person Seat ype Rear No. 2 Seat:
Detach the 12 claws, 3 clips and 2 guides.

except 3 Person Seat Type Rear No. 2 Seat:

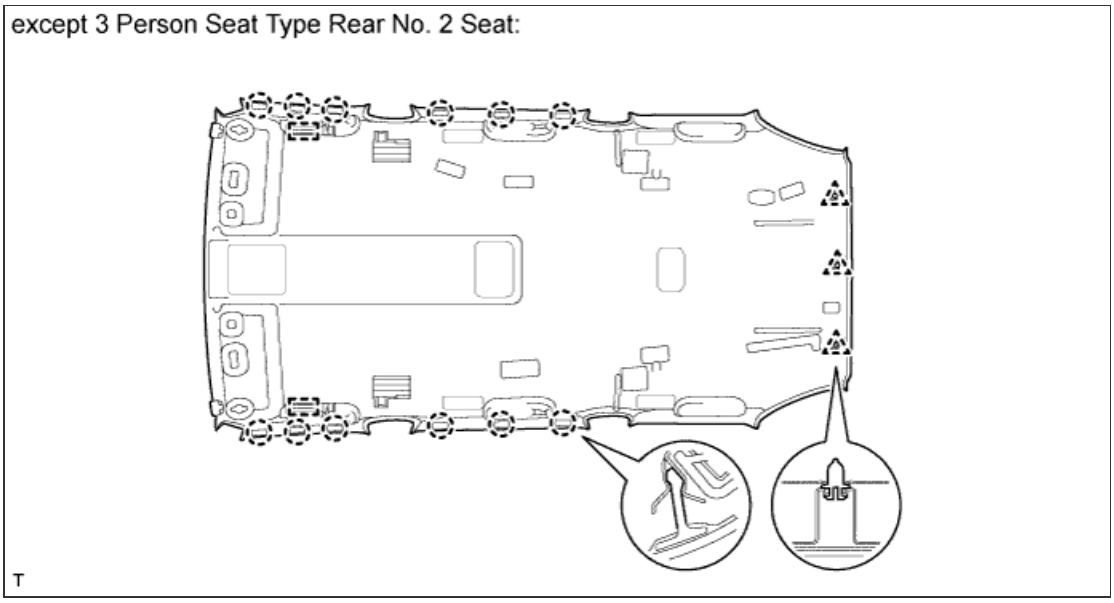

T

k. Remove the headlining from the rear of the vehicle as shown in the illustration.

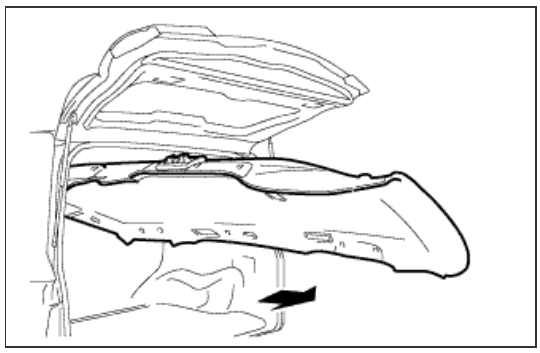

NOTICE:


Be careful not to damage the roof headlining when taking it out.

48. REMOVE FRONT ROOF SIDE RAIL GARNISH LH

a. Detach the 3 clips.

b. Cut off the 3 clips and remove the roof side rail garnish.

c. Remove 3 clips from the vehicle body.

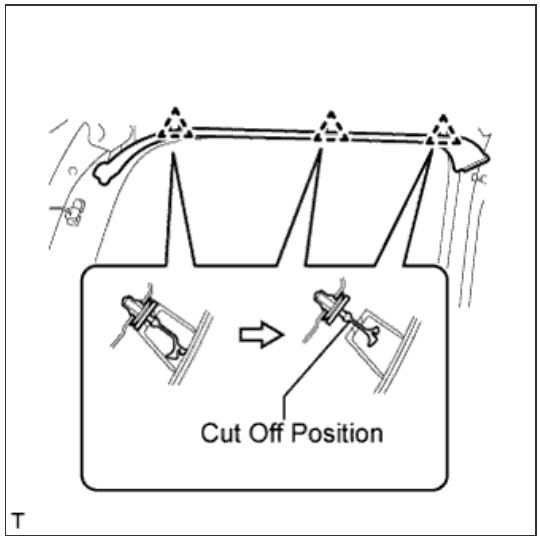

T


49. REMOVE FRONT ROOF SIDE RAIL GARNISH RH

HINT:

Use the same procedures described for the LH side.

50. REMOVE FRONT DOOR OPENING TRIM EATHERSTRIP LH

a. Remove the front door opening trim weatherstrip.

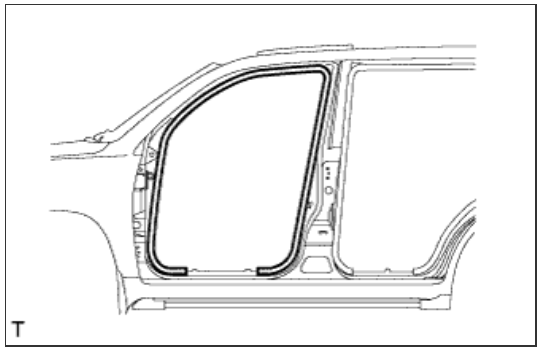


51. REMOVE FRONT DOOR OPENING TRIM EATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

52. REMOVE REAR DOOR OPENING TRIM EATHERSTRIP LH

a. Remove the rear door opening trim weatherstrip.

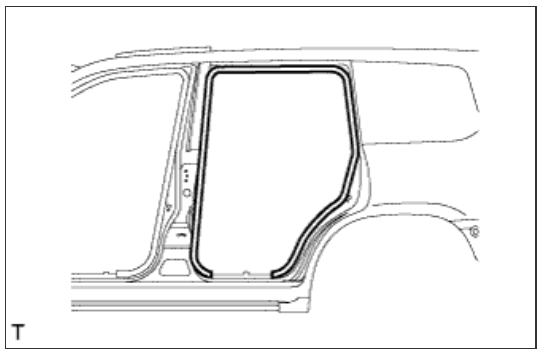


53. REMOVE REAR DOOR OPENING TRIM EATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

54. REMOVE BACK DOOR EATHERSTRIP


a. Remove the back door weatherstrip.

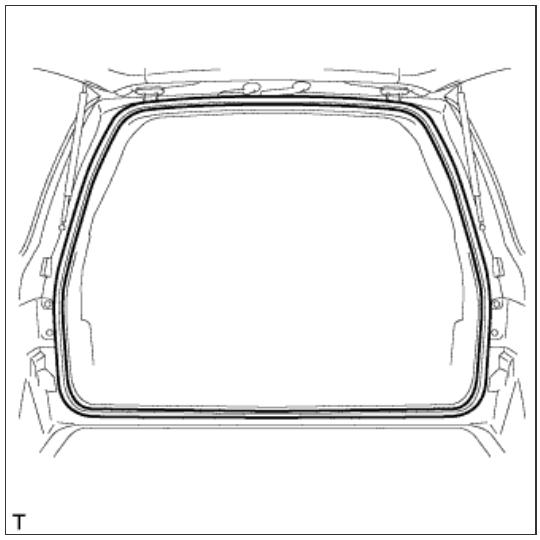

55. REMOVE FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the front door scuff plate outside.

b. Detach the 4 clips and remove the front door scuff plate outside.

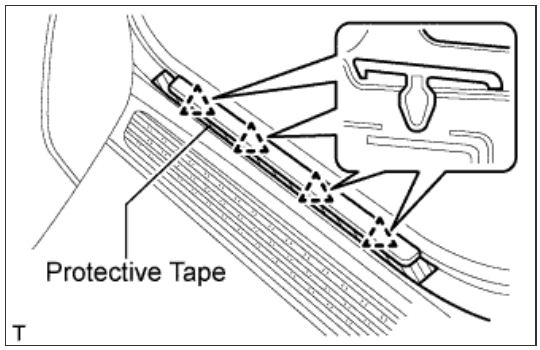

56. REMOVE FRONT DOOR SCUFF PLATE RH


HINT:

Use the same procedures described for the LH side.

57. REMOVE REAR DOOR SCUFF PLATE OUTSIDE LH

a. Put protective tape around the rear door scuff plate outside.

b. Detach the 3 clips and remove the rear door scuff plate outside.

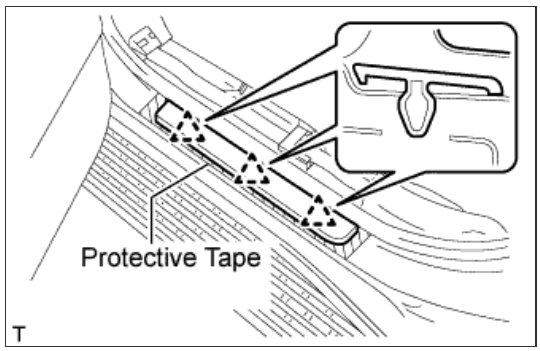


58. REMOVE REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

59. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws of the plate, and slide the plate in the direction of the arrow to remove it.

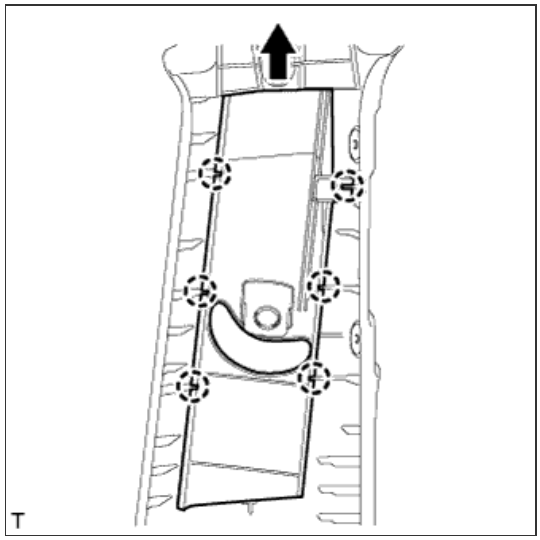


60. REMOVE FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

61. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Detach the 6 claws and remove the plate.

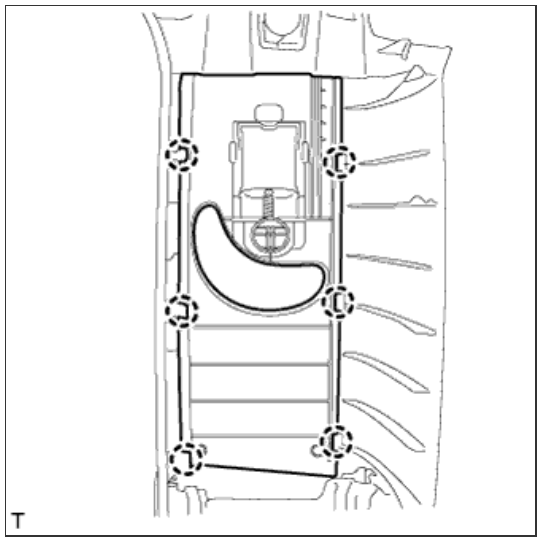


62. REMOVE REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

63. REMOVE ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 7 claws and remove the cover.

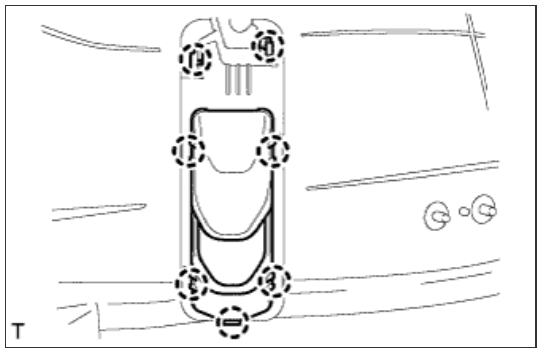

64. REMOVE ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedures described for the LH side.

65. REMOVE REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to remove the hanger on the other side.

a. Remove the 2 spring nuts and hanger.

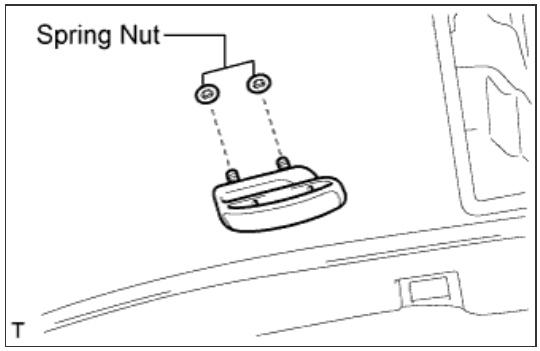

66. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Remove the 2 spring nuts and hanger.

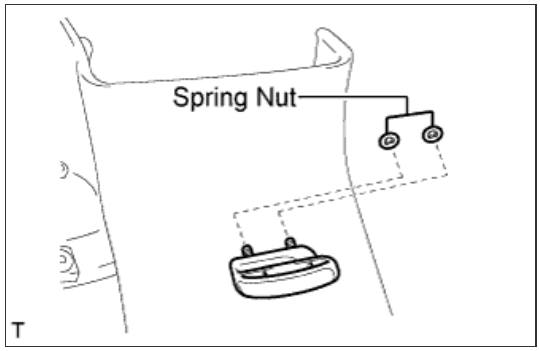


67. REMOVE REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:

Use the same procedures described for the LH side.


68. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY LH

a. w/ Rear Heater:
Remove the 8 screws and duct.

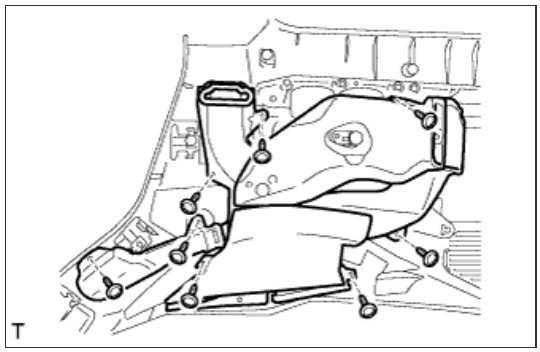

b. Remove the 7 screws.


c. Detach the 4 claws and remove the uarter trim cover.

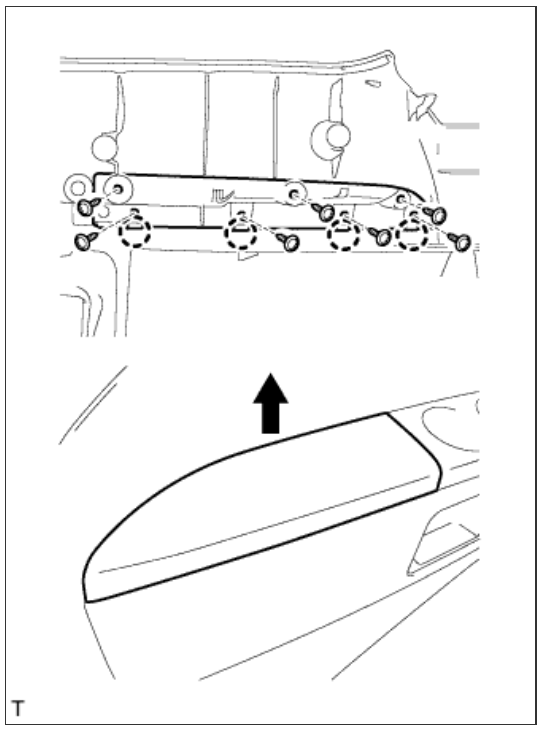

69. REMOVE QUARTER TRIM COVER SUB-ASSEMBLY RH

a. Remove the 7 screws.


b. Detach the 4 claws and remove the uarter trim cover.

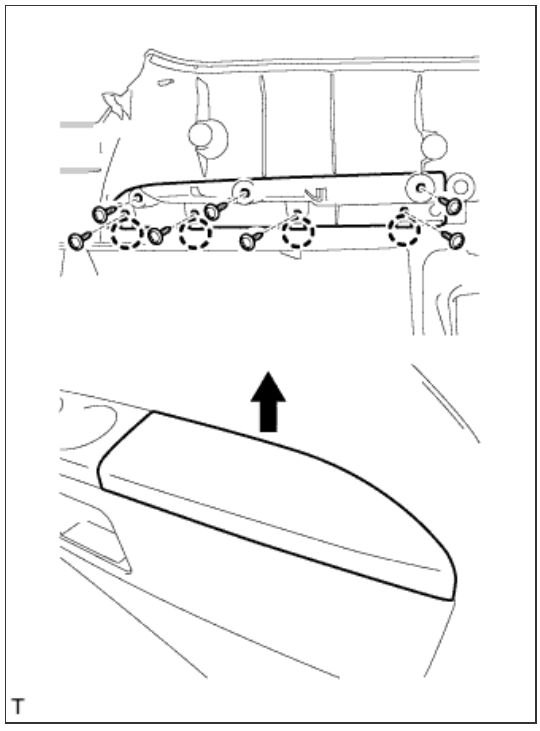

70. REMOVE NO. 2 CUP HOLDER

a. Remove the 5 screws.


b. Detach the 3 claws and remove the cup holder.

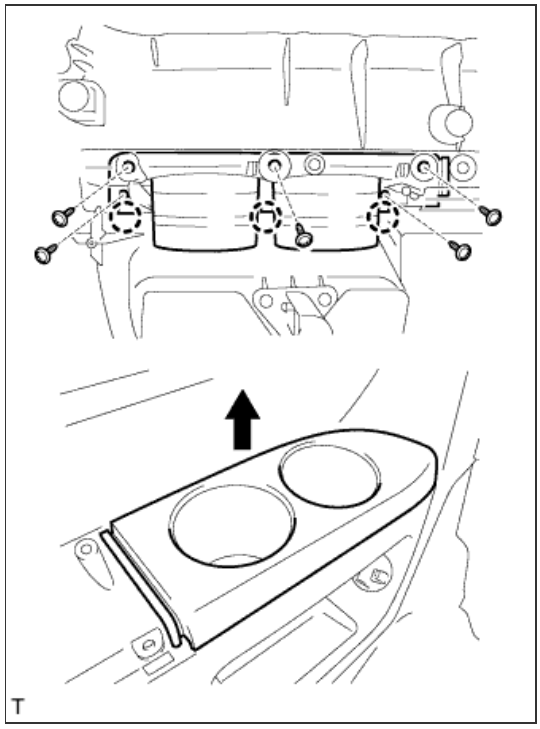

71. REMOVE NO. 1 CUP HOLDER

a. Remove the 5 screws.


b. Detach the 3 claws and remove the cup holder.

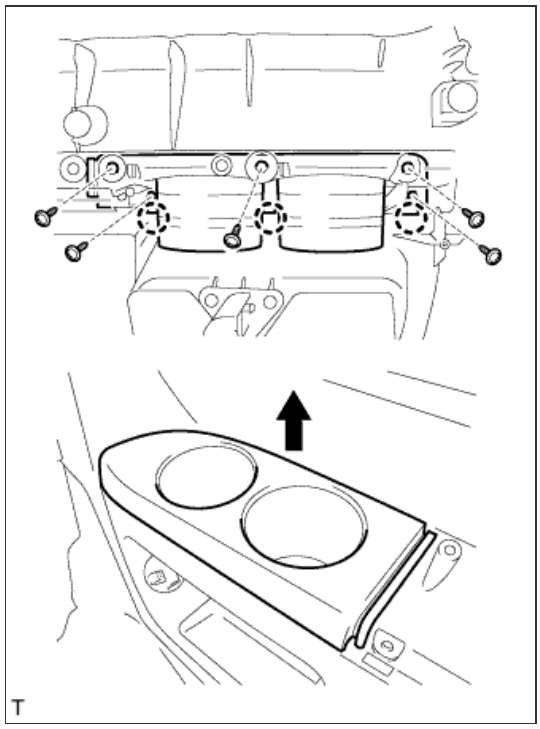

72. REMOVE TONNEAU COVER HOLDER BRACKET LH (w/ Tonneau Cover)

a. Remove the 8 screws.

b. Detach the 3 claws and remove the tonneau cover holder bracket and front uarter trim base.

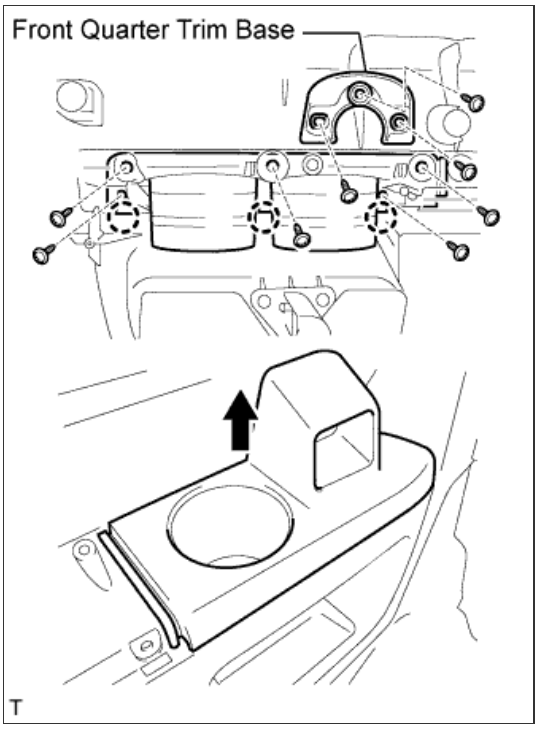


73. REMOVE TONNEAU COVER HOLDER BRACKET RH (w/ Tonneau Cover)

HINT:

Use the same procedures described for the LH side.

74. REMOVE TONNEAU COVER HANGER LH (w/ Tonneau Cover)

a. Remove the 2 screws, tonneau cover hanger and rear uarter trim base.

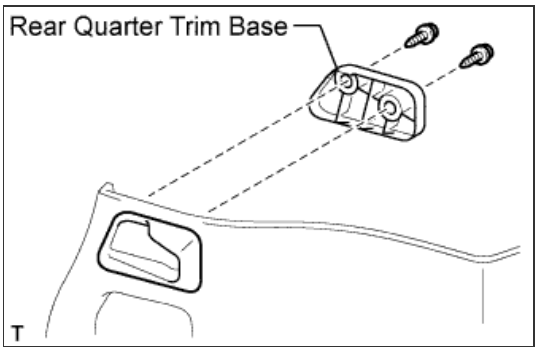


75. REMOVE TONNEAU COVER HANGER RH (w/ Tonneau Cover)

HINT:

Use the same procedures described for the LH side.


76. REMOVE NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

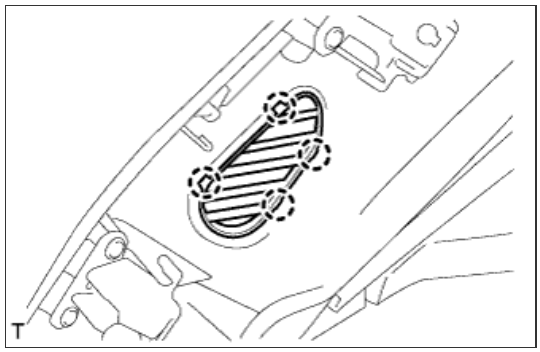


77. REMOVE NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Remove the 6 screws and duct.

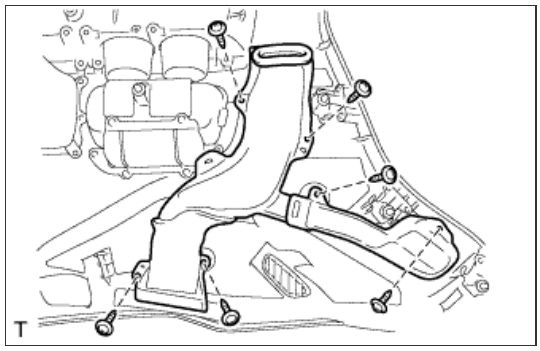


b. Detach the 4 claws and remove the cover.

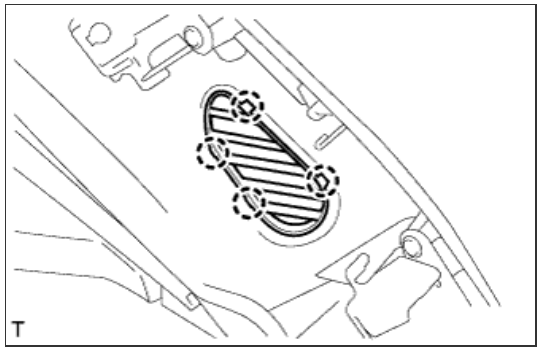

78. REMOVE NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Detach the 4 claws and remove the cover.

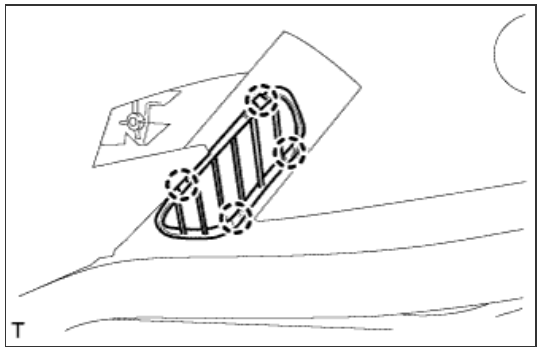

79. REMOVE NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.

80. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 4 claws and remove the seat lock control lever.


81. REMOVE REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

82. REMOVE REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Detach the 6 clips and remove the rear No. 2 seat cover bezel.

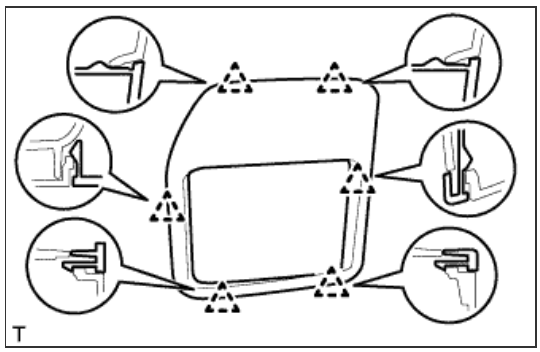


83. REMOVE REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

84. REMOVE QUARTER TRIM COVER LH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

a. Detach the 6 clips and remove the uarter trim cover.

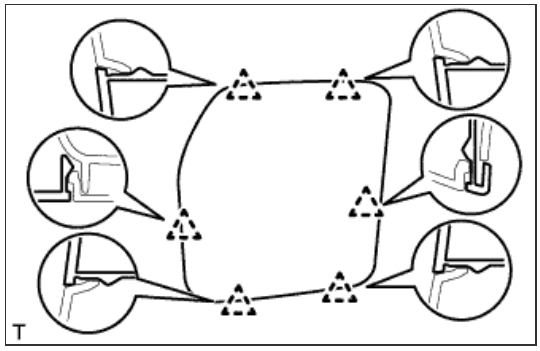

85. REMOVE QUARTER TRIM COVER RH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

86. REMOVE QUARTER TRIM LID SUB-ASSEMBLY RH


a. Remove the uarter trim lid.

87. REMOVE SIDE TRIM BOX COVER

a. Remove the side trim box cover.

88. REMOVE SIDE TRIM BOX

a. Remove the 9 screws and side trim box.

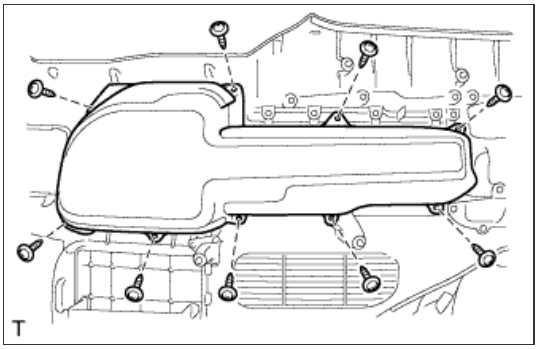


for Preparation Click here

1. REMOVE NO. 2 AIR OUTLET GRILLE ASSEMBLY (w/ Rear Air Conditioning System)

HINT:

Use the same procedures to remove the air outlet grille on the other side.

a. Detach 6 claws and remove the air outlet grille.

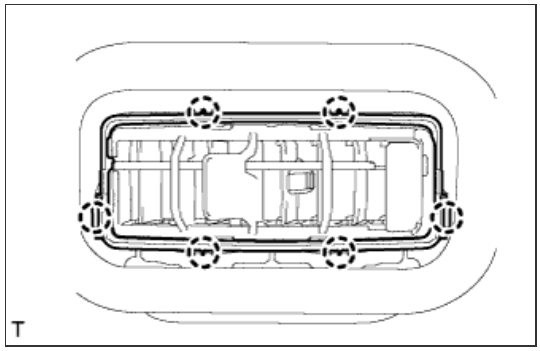


2. REMOVE NO. 1 AIR OUTLET GRILLE ASSEMBLY (w/ Rear Air Conditioning System)

HINT:

Use the same procedures described for the No. 2 air outlet grille.


3. REMOVE NO. 1 ROOF SILENCER PAD

a. Remove the roof silencer pad.

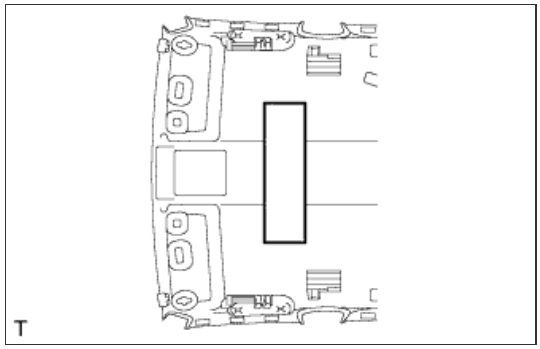


4. REMOVE NO. 2 ROOF SILENCER PAD

a. Remove the roof silencer pad.

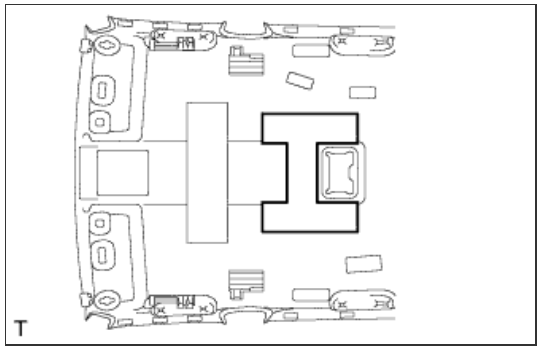


5. REMOVE NO. 3 ROOF SILENCER PAD

a. Remove the roof silencer pad.

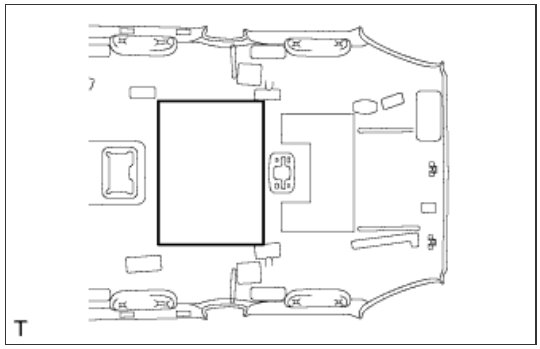

6. REMOVE NO. 4 ROOF SILENCER PAD

a. Remove the roof silencer pad.

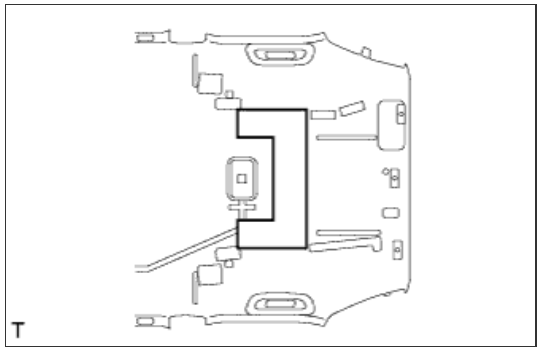


7. REMOVE NO. 1 ROOF WIRE

a. Turn the visor connectors approximately 90 clockwise and remove them from the roof headlining.

b. Remove the 6 pieces of tape from the roof headlining.

c. Detach each clamp, and remove the roof wire and washer hose.


d. Remove the double-sided tape remaining on the headlining.

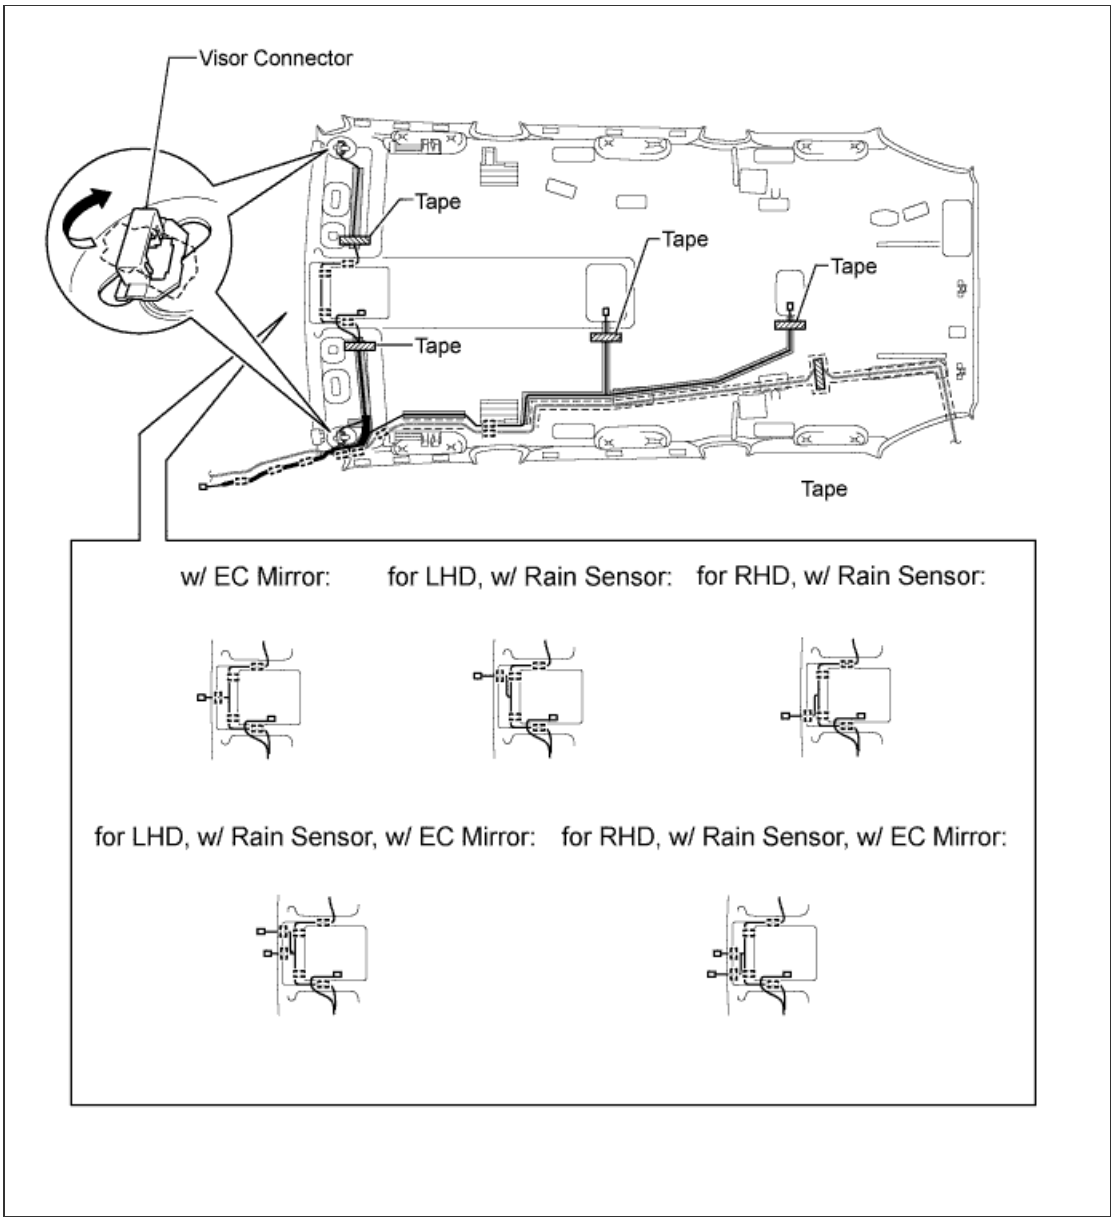

8. REMOVE ANTENNA CORD SUB-ASSEMBLY

a. w/o Sliding Roof:

i. Detach the 2 clamps and remove the antenna from the notch on the rear of the roof headlining.

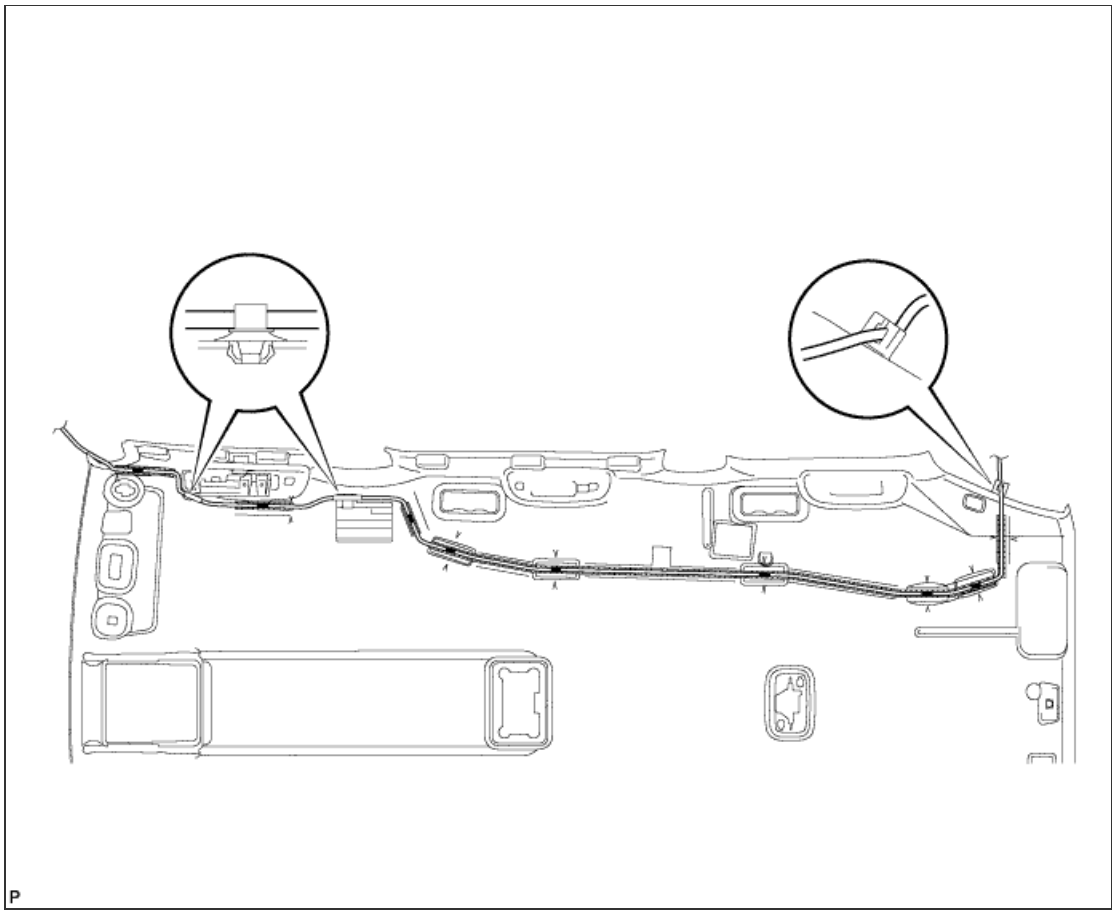


ii. Remove the antenna cord from the roof headlining.

iii. Remove the double-sided tape from the roof headlining.

b. w/ Sliding Roof:

i. Detach the 4 clamps and remove the antenna from the notch on the rear of the roof headlining.

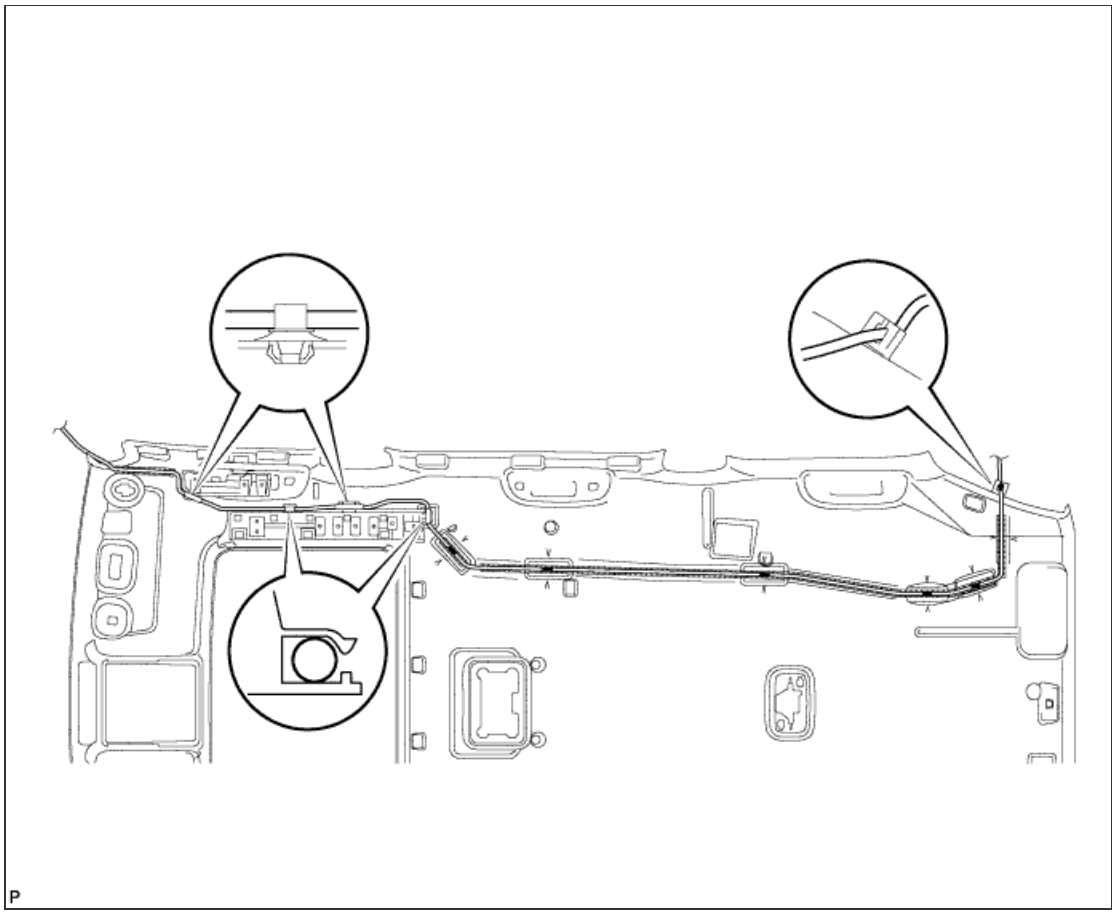

ii. Remove the antenna cord from the roof headlining.

iii. Remove the double-sided tape from the roof headlining.

for Preparation Click here


1. INSTALL ANTENNA CORD SUB-ASSEMBLY

a. w/o Sliding Roof:

i. Apply new double-sided tape as shown in the illustration.

HINT:

Attach double-sided tape to the hatched areas shown in the illustration below.

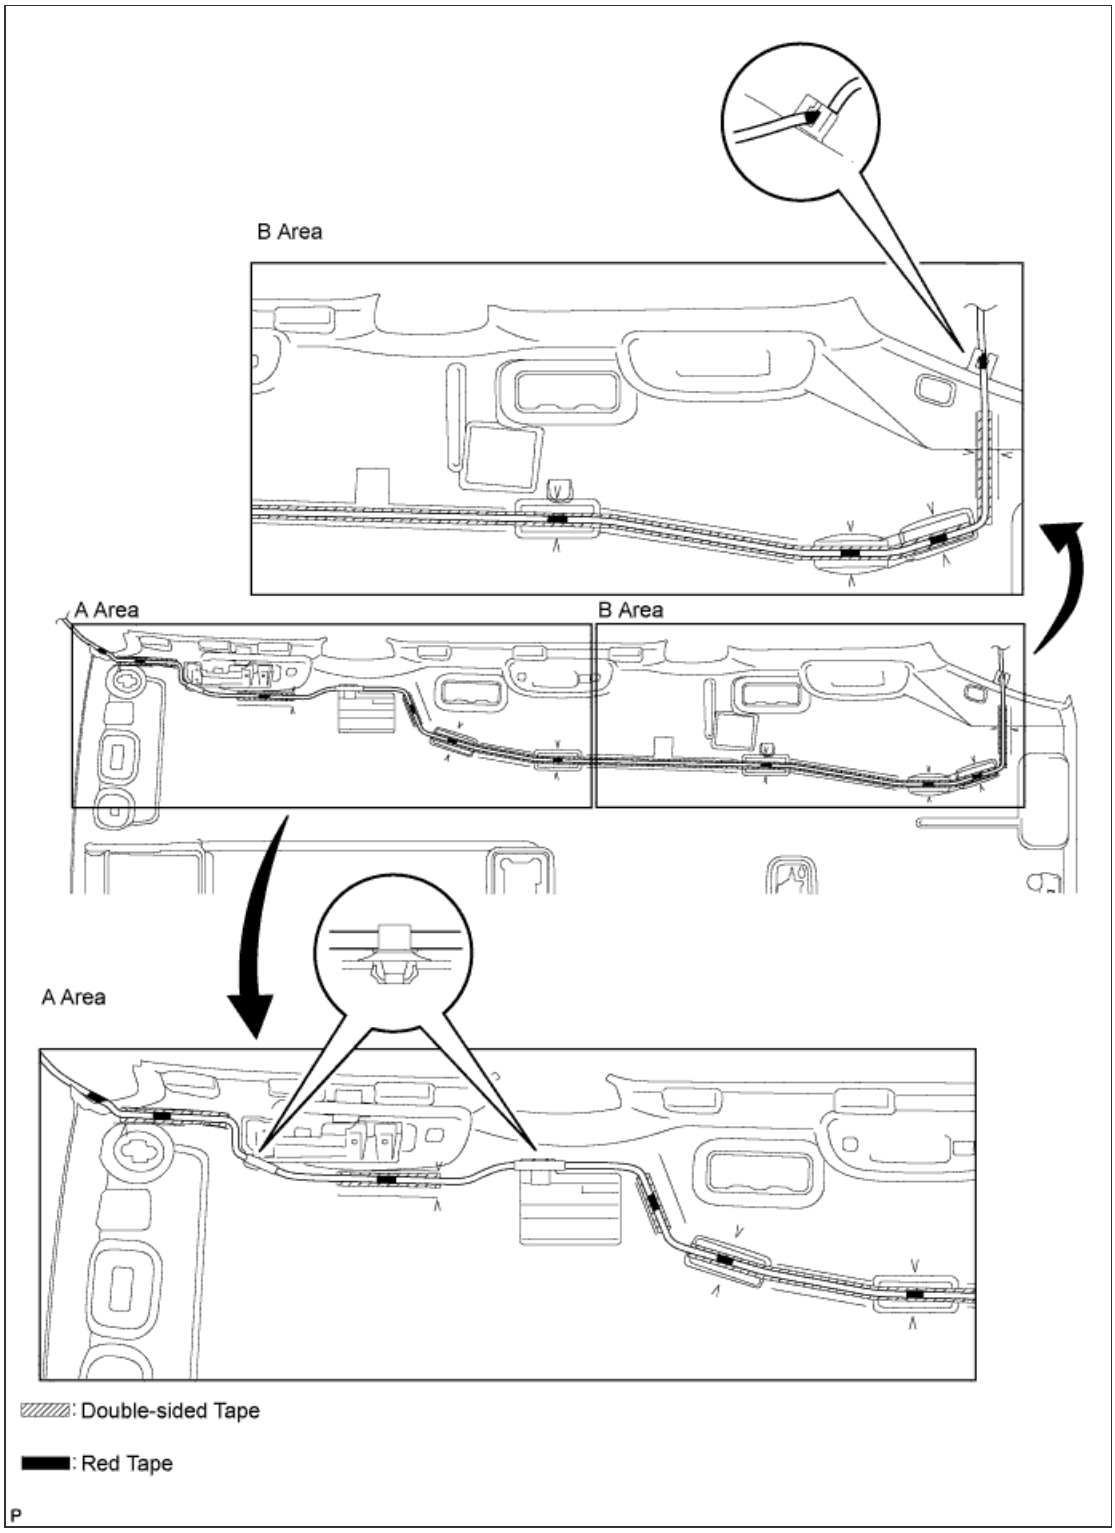

ii. Align the red tape wound around the antenna cord with the V markings on the roof headlining and the notch at the rear of the headlining, and attach the antenna cord to the double-sided tape.


iii. Attach the 2 clamps and fit the antenna into the notch.

b. w/ Sliding Roof:

i. Apply new double-sided tape as shown in the illustration.

HINT:

Attach double-sided tape to the hatched areas shown in the illustration below.

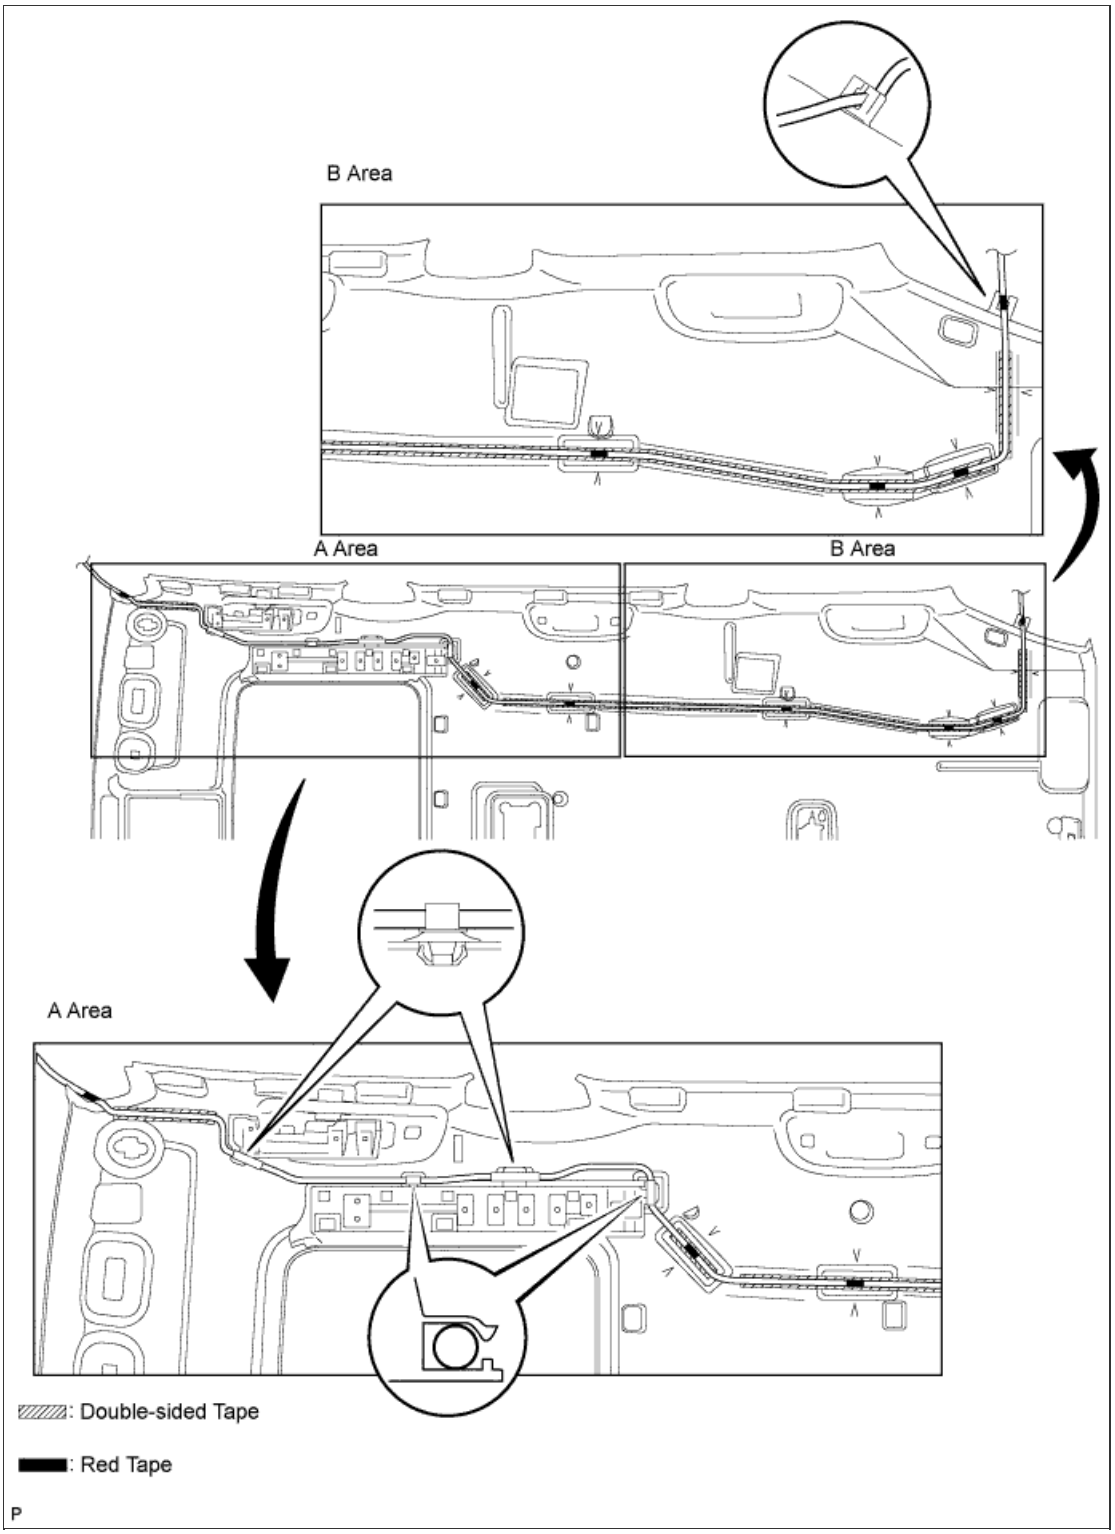

ii. Align the red tape wound around the antenna cord with the V markings on the roof headlining and the notch at the rear of the headlining, and attach the antenna cord to the double-sided tape.


iii. Attach the 4 clamps and fit the antenna into the notch.

2. INSTALL NO. 1 ROOF WIRE

a. Place double-sided tape along the center of the harness marking and washer marking.

HINT:

ake sure that the double-sided tape is not peeling off or misaligned.

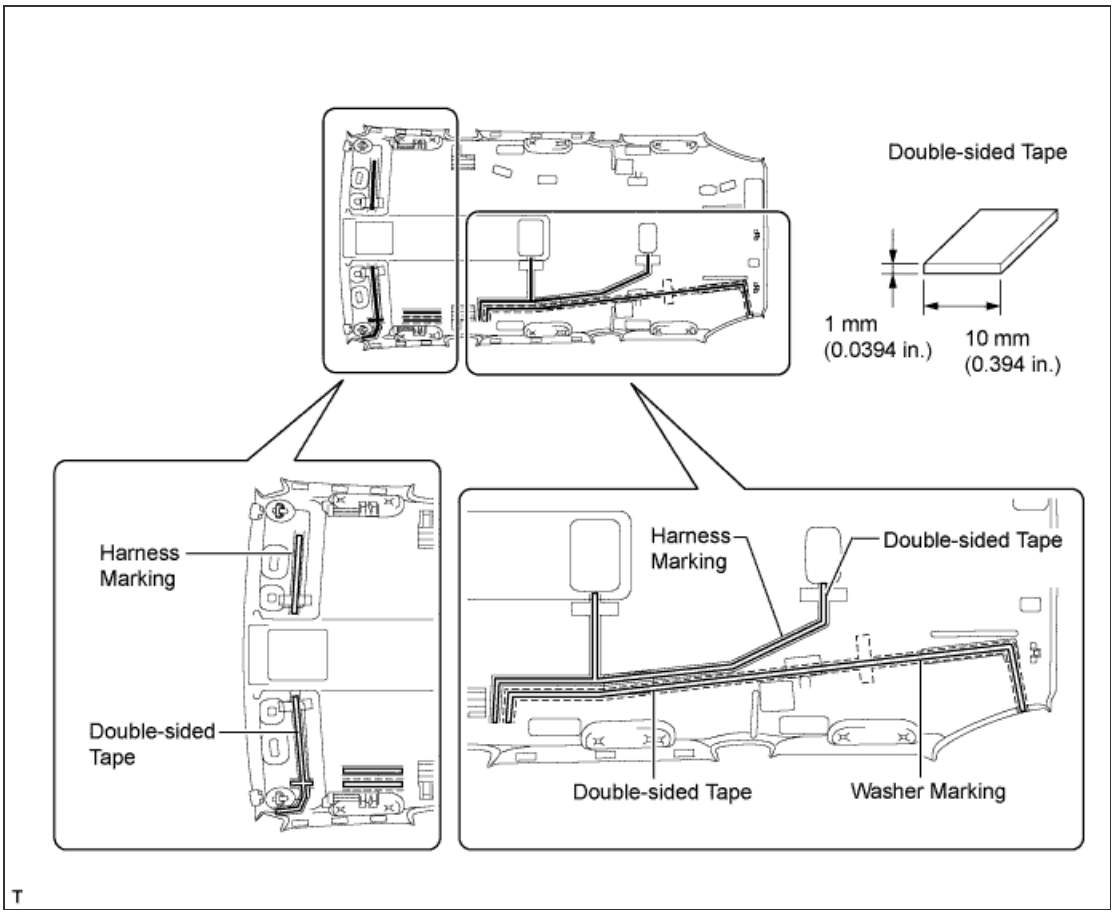


b. Remove the peeling paper from the double-sided tape while not touching the adhesive side.

c. Align the triangle mark of the roof wire protector with the V mark of the headlining as shown in the illustration, and then attach the roof wire protector.

d. Attach each clamp as shown in the illustration.

HINT:

The positions of the clamps at the front of the roof headlining are shown in illustration D.

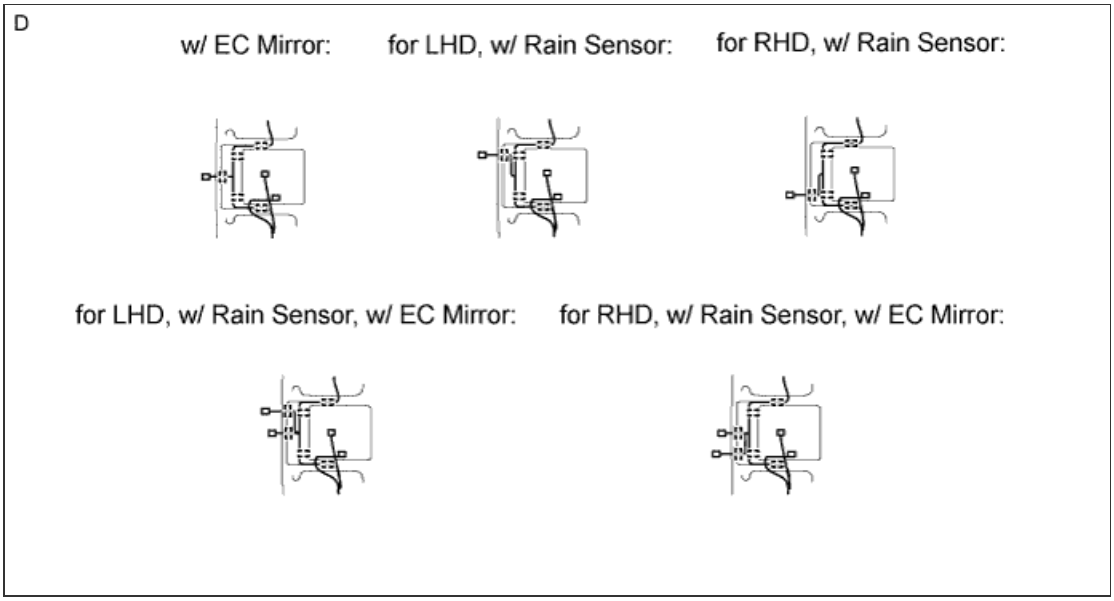


e. Align the roof wire and washer hose with the V marks of the headlining as shown in the illustration, and attach them to the headlining.

HINT:

- **Attach the washer hose from the front to the point labeled A, and attach the washer hose from the rear to the point labeled B as shown in the illustration.**
- **Attach the extra length of the washer hose to the part labeled C in the illustration.**


f. Turn the visor connectors approximately 90 clockwise to install them to the roof headlining.

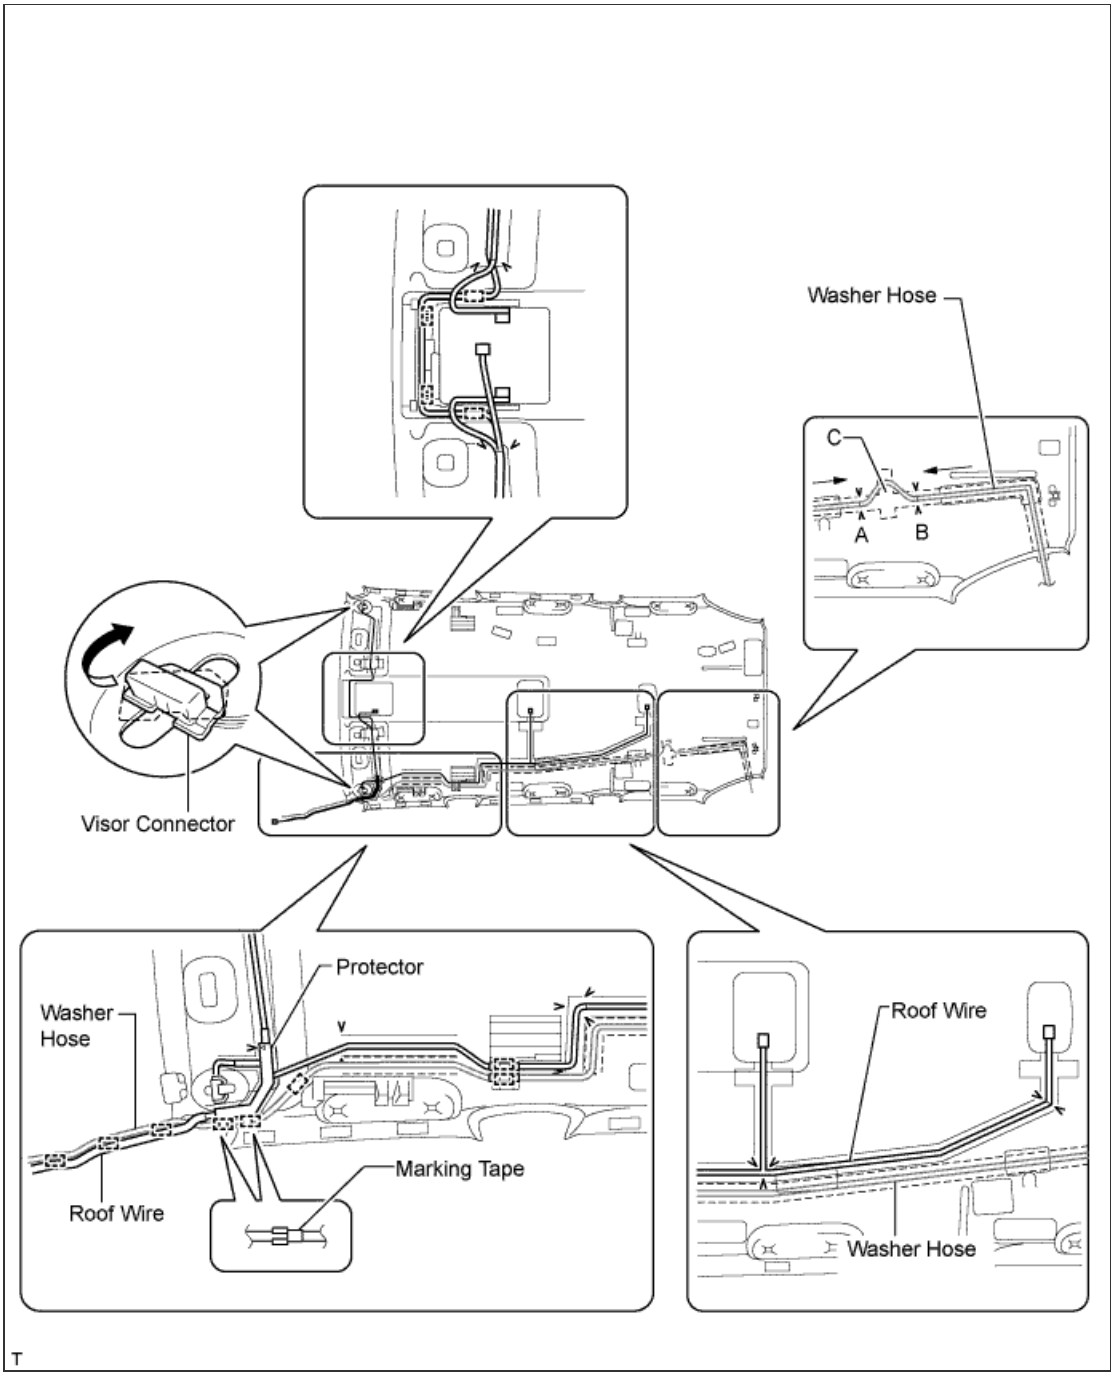

g. Place tape at the wire harness marking and washer marking locations as shown in the illustration to fix the roof wire and washer hose in place.


HINT:

Apply sufficient pressure when placing tape.

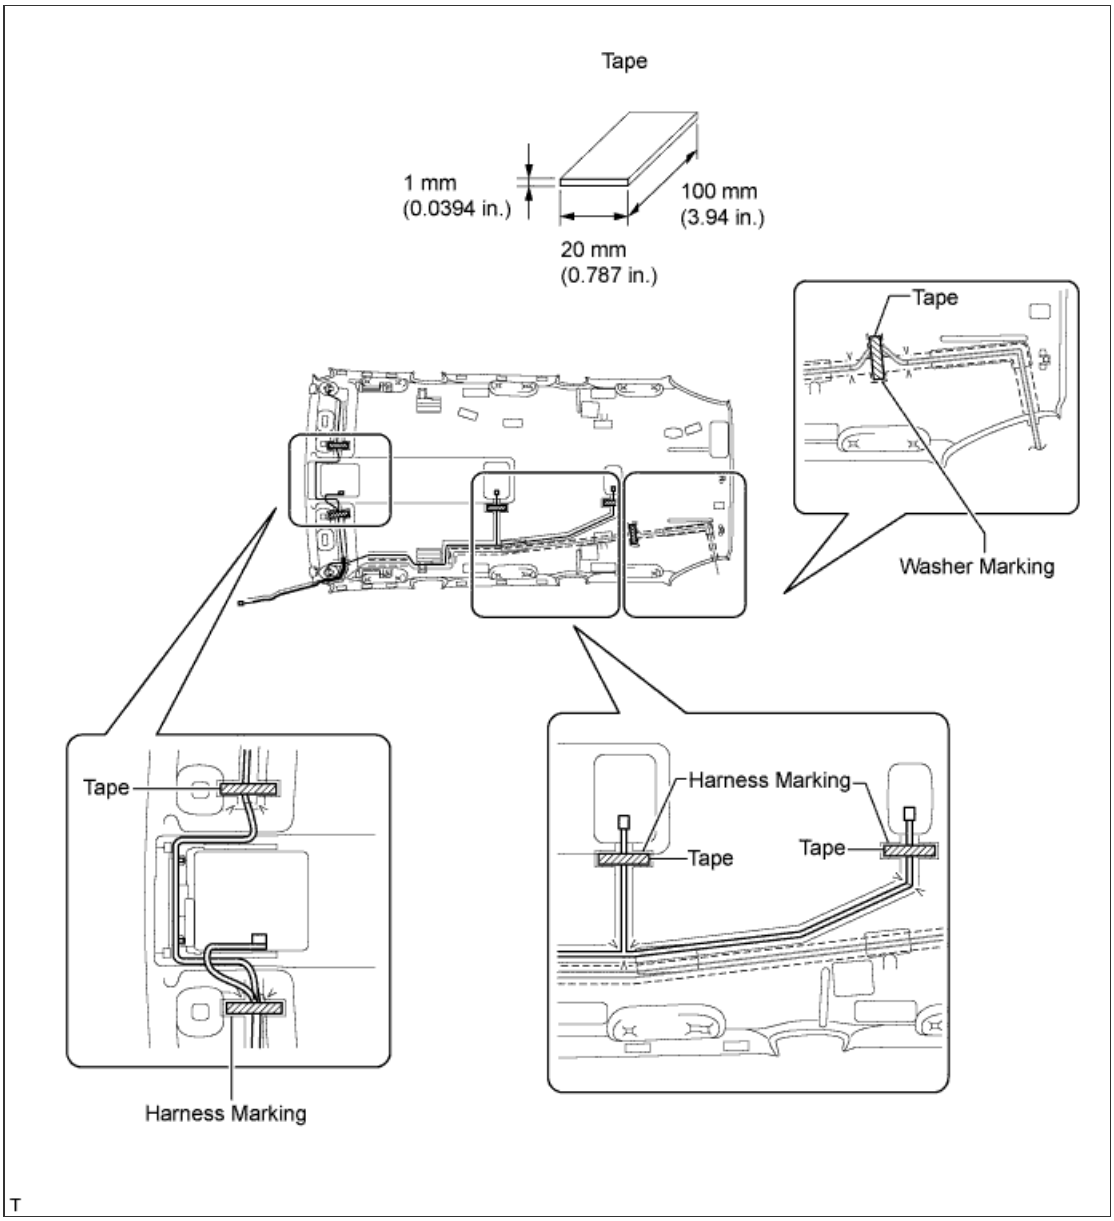


3. INSTALL NO. 4 ROOF SILENCER PAD

a. Align the silencer marking on the roof headlining with the roof silencer pad and install the pad using double-sided tape as shown in the illustration.

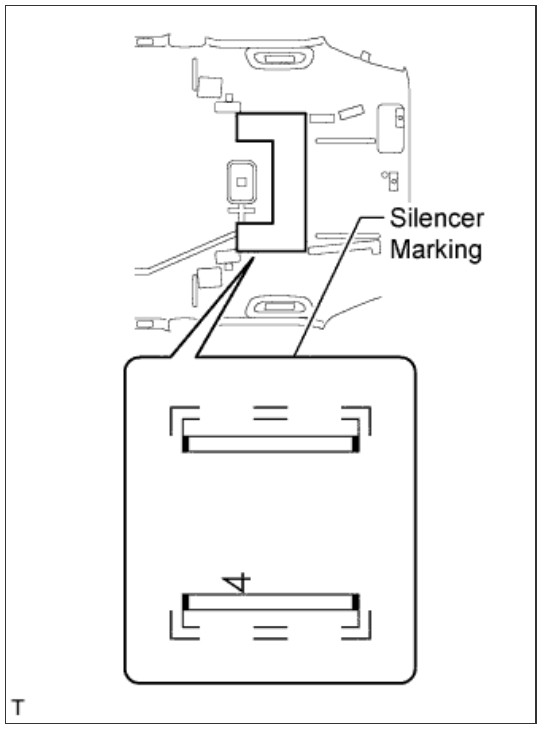


4. INSTALL NO. 3 ROOF SILENCER PAD

a. Align the silencer marking on the roof headlining with the roof silencer pad and install the pad using double-sided tape as shown in the illustration.

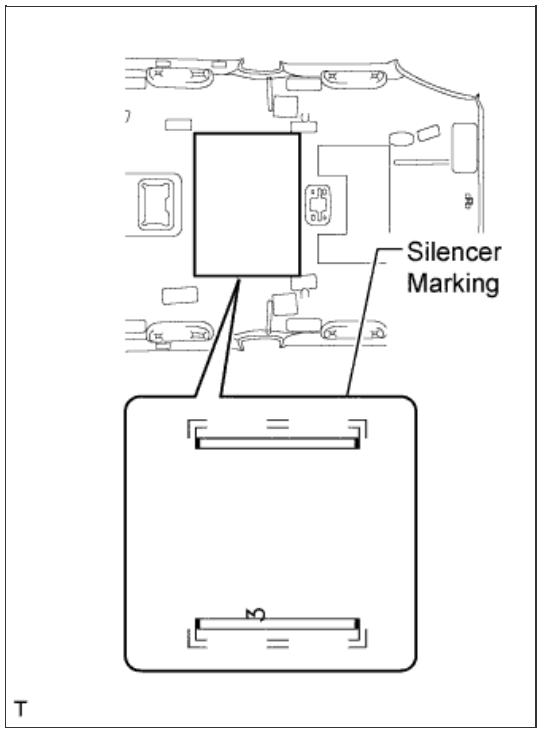


5. INSTALL NO. 2 ROOF SILENCER PAD

a. Align the silencer marking on the roof headlining with the roof silencer pad and install the pad using double-sided tape as shown in the illustration.

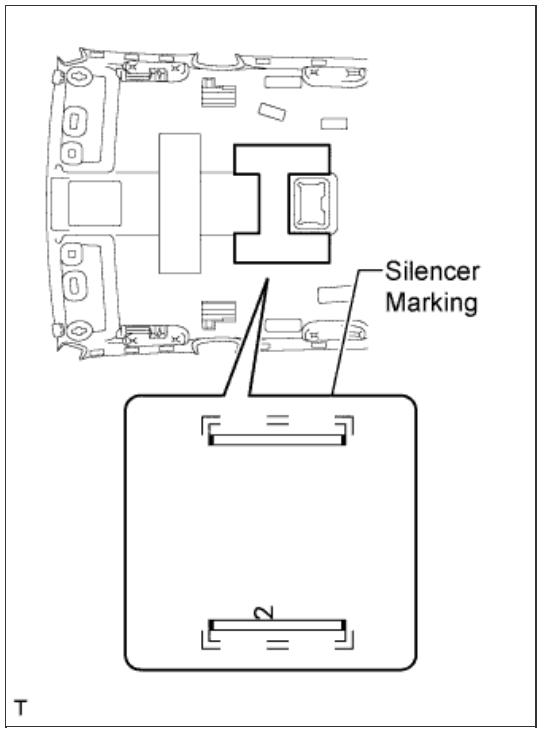

6. INSTALL NO. 1 ROOF SILENCER PAD

a. Align the silencer marking on the roof headlining with the roof silencer pad and install the pad using double-sided tape as shown in the illustration.

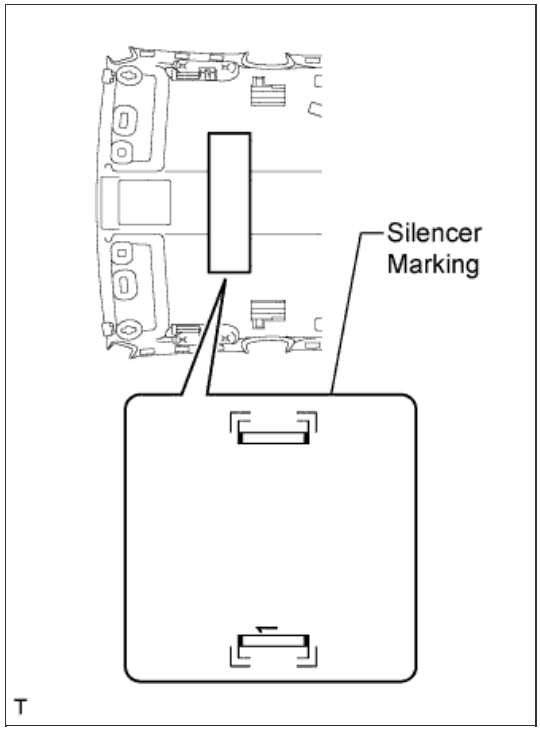


7. INSTALL NO. 2 AIR OUTLET GRILLE ASSEMBLY (w/ Rear Air Conditioning System)

HINT:

Use the same procedures to install the air outlet grille on the other side.

a. Attach the claws to install the air outlet grille.

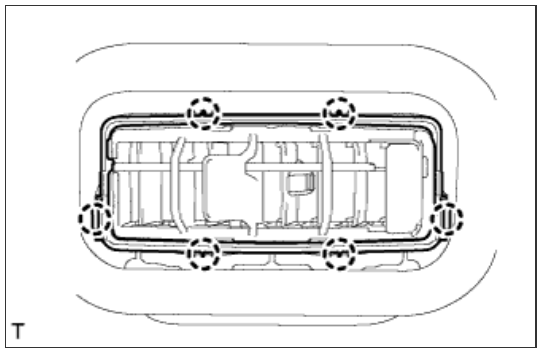

8. INSTALL NO. 1 AIR OUTLET GRILLE ASSEMBLY (w/ Rear Air Conditioning System)

HINT:

Use the same procedures described for the No. 2 air outlet grille.


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL SIDE TRIM BOX

a. Install the side trim box with the 9 screws.

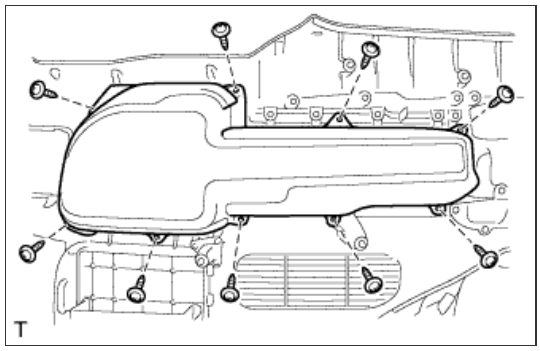

2. INSTALL SIDE TRIM BOX COVER


a. Install the side trim box cover.

3. INSTALL QUARTER TRIM LID SUB-ASSEMBLY RH

a. Install the quarter trim lid.

4. INSTALL QUARTER TRIM COVER LH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

a. Attach the 6 clips to install the quarter trim cover.

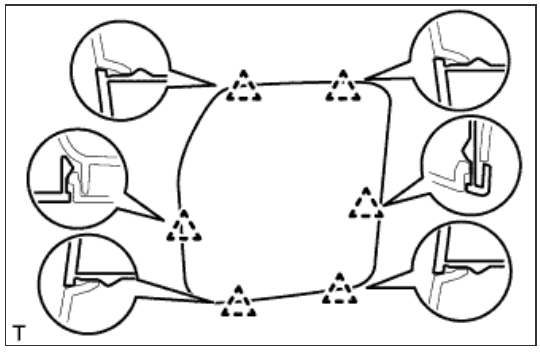


5. INSTALL QUARTER TRIM COVER RH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

6. INSTALL REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 6 clips to install the rear No. 2 seat cover bezel.

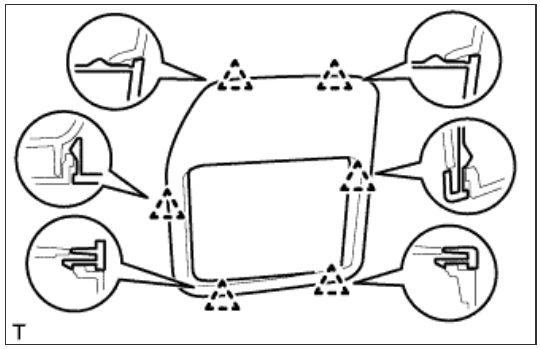

7. INSTALL REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

8. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 4 claws to install the seat lock control lever.


9. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

10. INSTALL NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

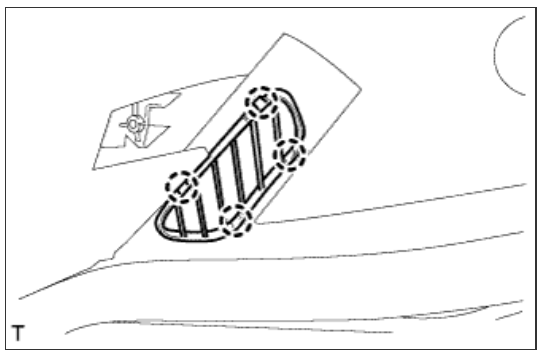


11. INSTALL NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.


12. INSTALL NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

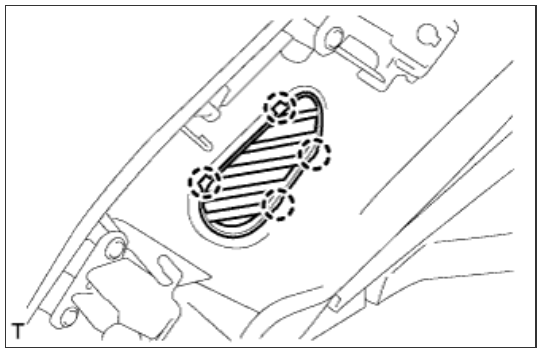


13. INSTALL NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

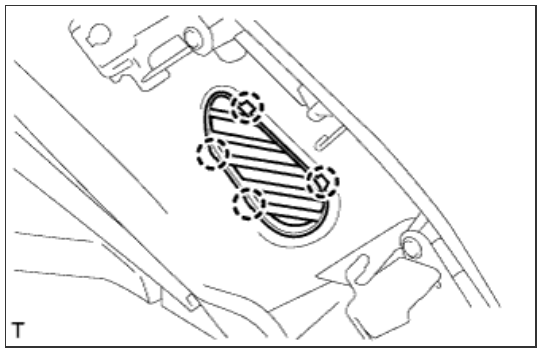


b. Install the duct with the 6 screws.

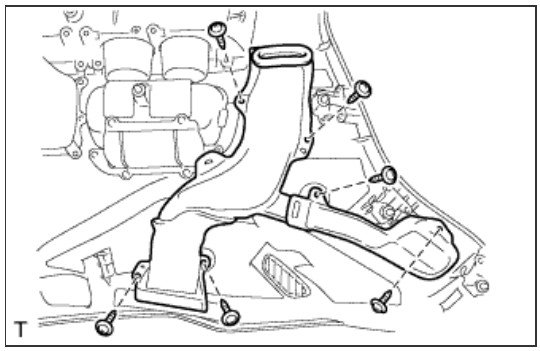

14. INSTALL TONNEAU COVER HANGER LH (w/ Tonnea Cover)

a. Install the tonneau cover hanger and rear quarter trim base with the 2 screws.

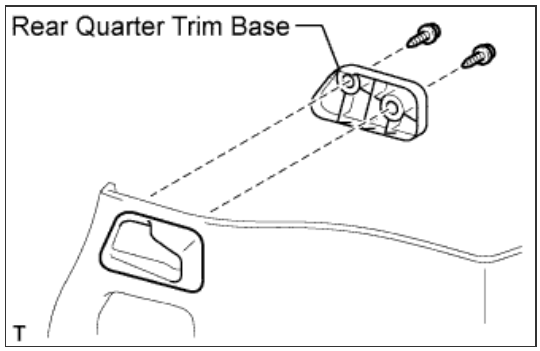

15. INSTALL TONNEAU COVER HANGER RH (w/ Tonnea Cover)


HINT:

Use the same procedures described for the LH side.

16. INSTALL TONNEAU COVER HOLDER BRACKET LH (w/ Tonnea Cover)

a. Attach the 3 claws to install the tonneau cover holder bracket.

. Install the front quarter trim base with the 3 screws and then install the remaining 5 screws.

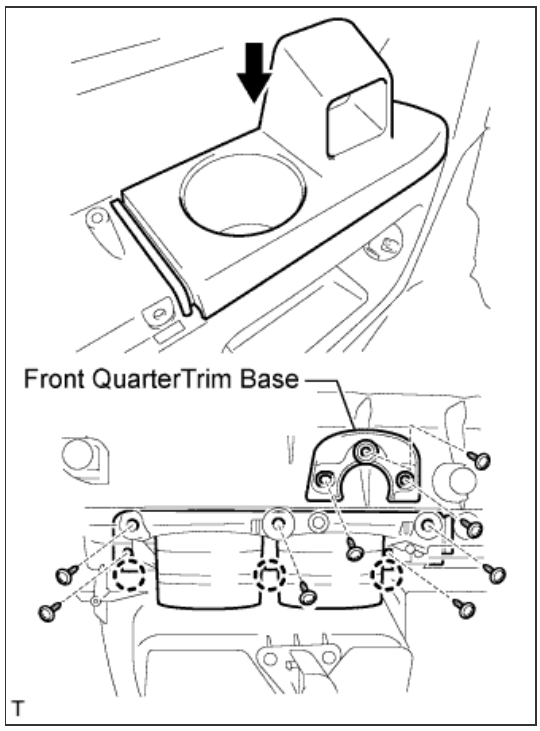

17. INSTALL TONNEAU COVER HOLDER BRACKET RH (w/ Tonnea Cover)


HINT:

Use the same procedures described for the LH side.

18. INSTALL NO. 2 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


b. Install the 5 screws.

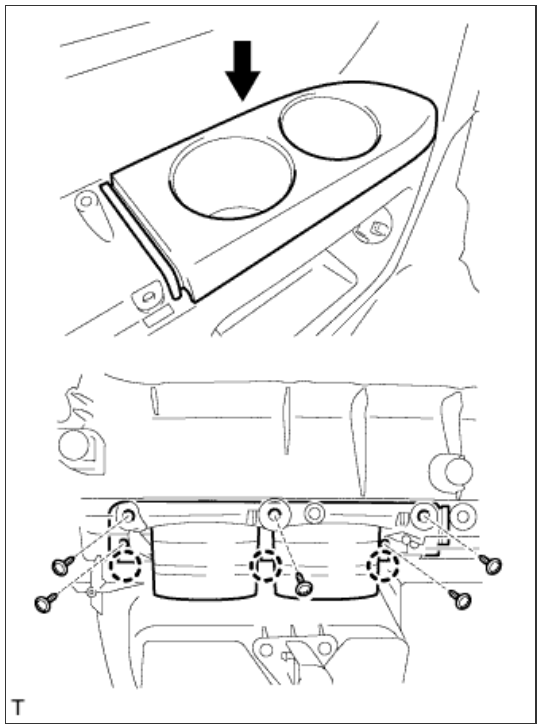

19. INSTALL NO. 1 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


. Install the 5 screws.

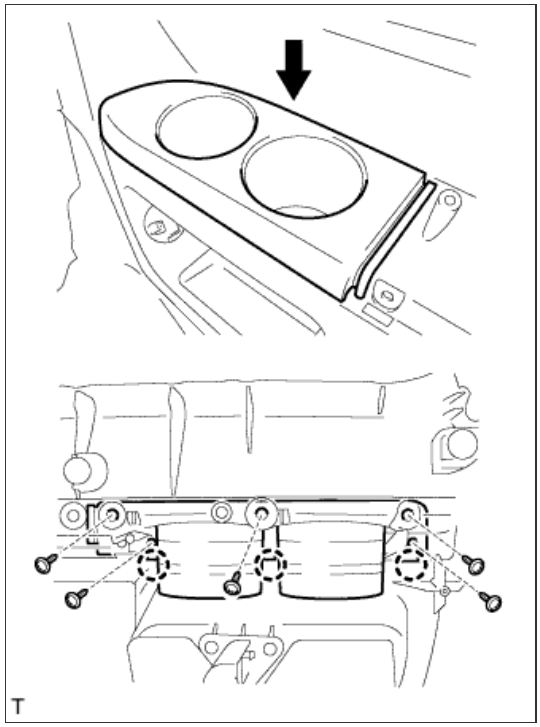


20. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

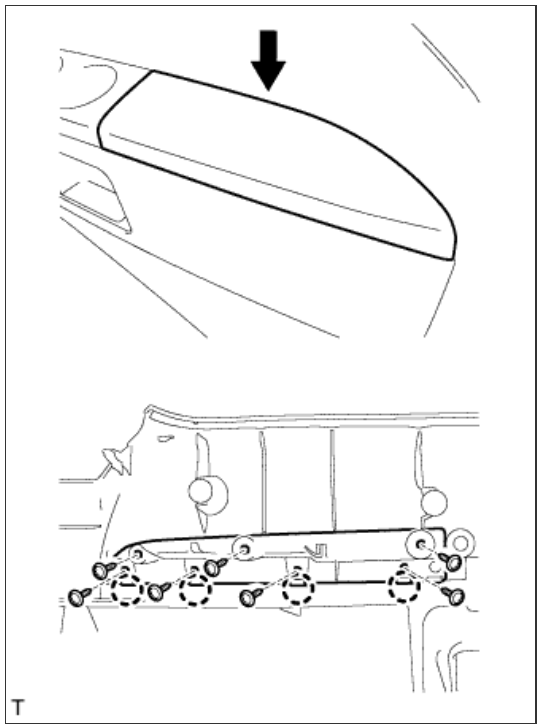


c. w/ Rear Heater:
Install the duct with the 8 screws.

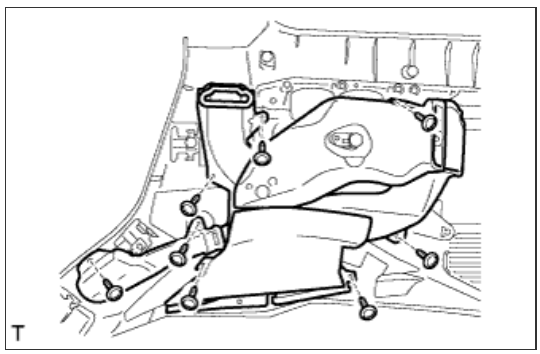

21. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY RH


a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

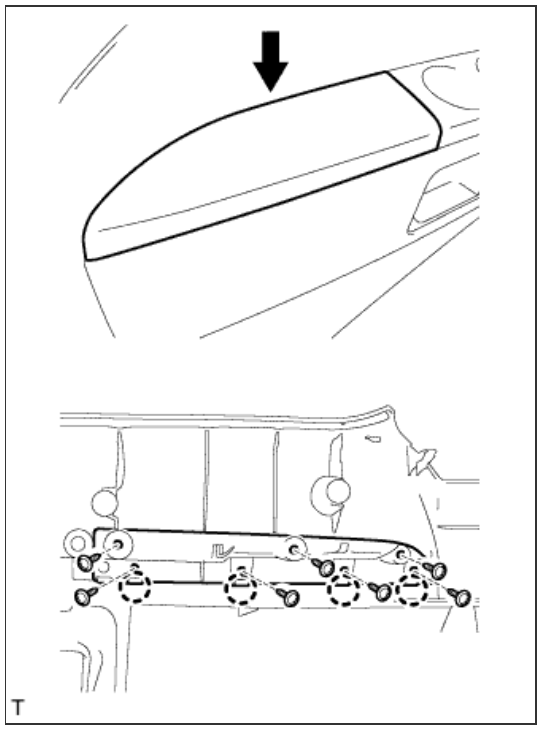

22. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Install the hanger with 2 new spring nuts.

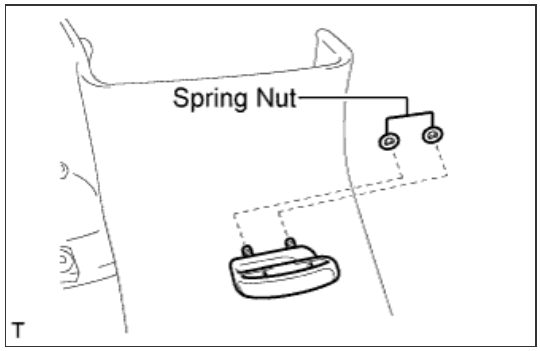

23. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:


Use the same procedures described for the LH side.

24. INSTALL REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to install the hanger on the other side.

a. Install the hanger with 2 new spring nuts.

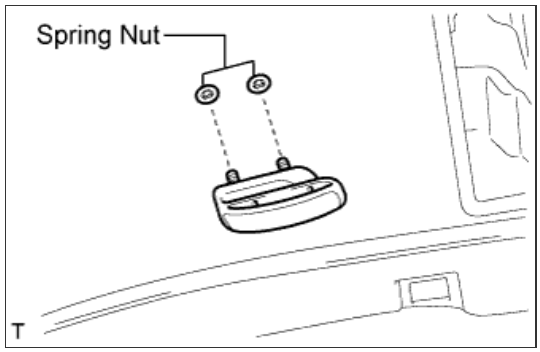

25. INSTALL ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 7 claws to install the cover.

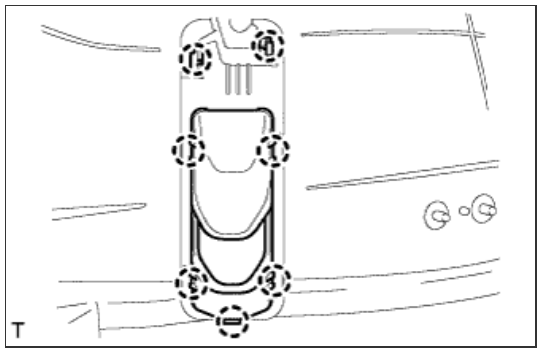


26. INSTALL ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

27. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Attach the 6 claws to install the plate.

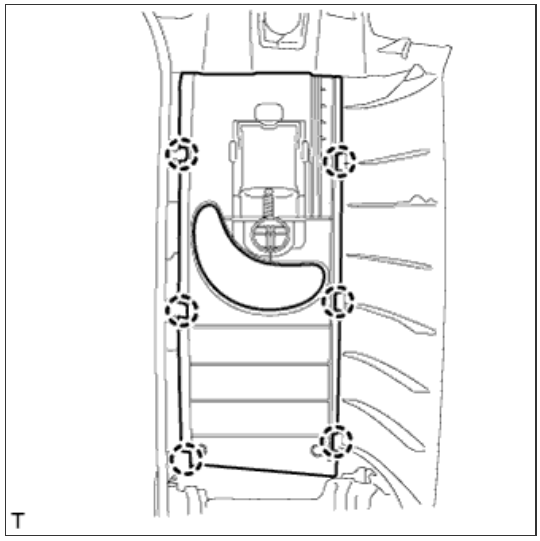


28. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

29. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Slide the plate in the direction shown in the illustration and attach the 6 claws to install the plate.

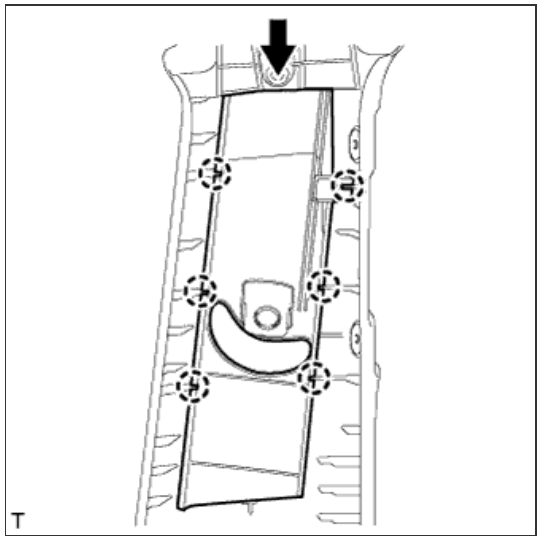


30. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

31. INSTALL REAR DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 3 clips to install the rear door scuff plate outside.

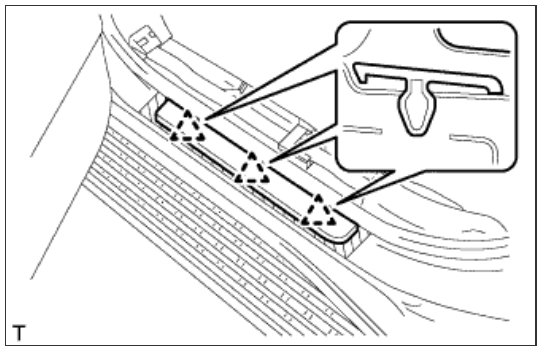


32. INSTALL REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

33. INSTALL FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 4 clips to install the front door scuff plate outside.

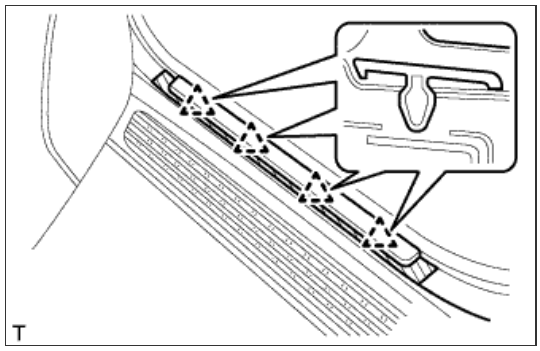


34. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.


35. INSTALL BACK DOOR EATHERSTRIP

a. Install the back door weatherstrip as shown in the illustration.

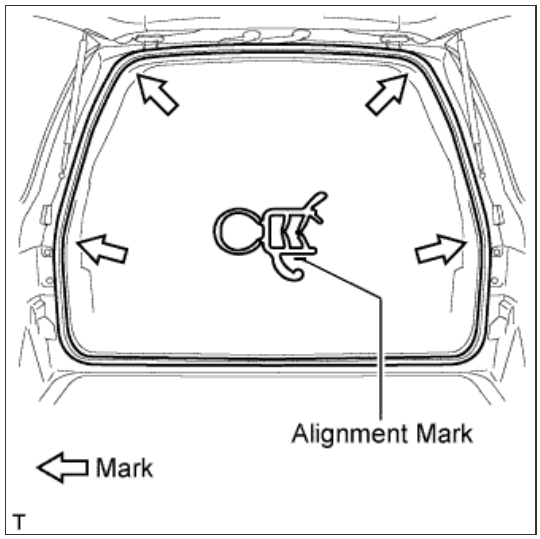

36. INSTALL REAR DOOR OPENING TRIM EATHERSTRIP LH

a. Install the rear door opening trim weatherstrip as shown in the illustration.

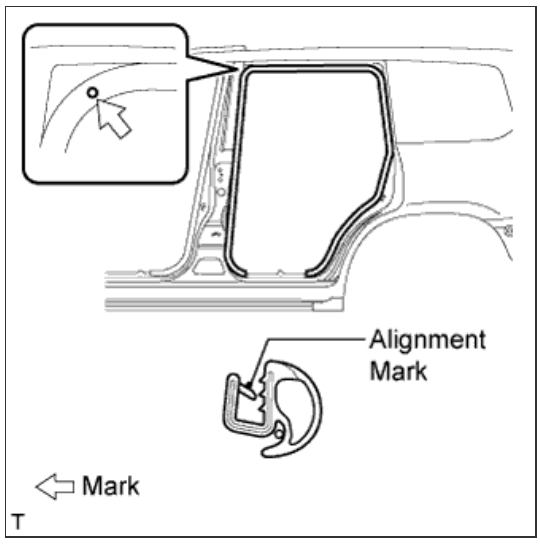


37. INSTALL REAR DOOR OPENING TRIM EATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

38. INSTALL FRONT DOOR OPENING TRIM EATHERSTRIP LH

a. Install the front door opening trim weatherstrip as shown in the illustration.

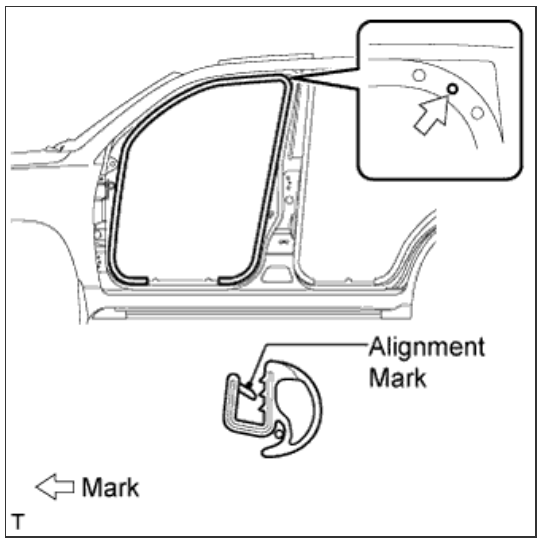

39. INSTALL FRONT DOOR OPENING TRIM EATHERSTRIP RH


HINT:

Use the same procedures described for the LH side.

40. INSTALL ROOF HEADLINING ASSEMBLY

HINT:

- **for Man al Seat:**
  hen in talling the roof headlining, oe the front eat and rear No. 1 eat to the po tion hown in the ill tration.
- **for Power Seat:**
  hen in talling the roof headlining, connect the cable to the negative (-) attery ter ial and oe the front eat and No. 1 rear eat to the po tion hown in the ill tration.
- **for Power Seat:**
  After o in the eat , di connect the cable fro the negative (-) attery ter ial.

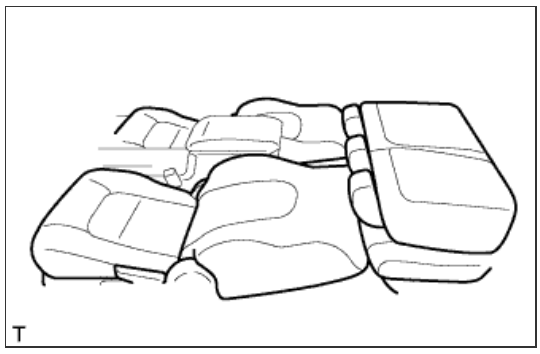

a. Place the headlining in the cabin from the rear of the vehicle as shown in the illustration.


NOTICE:

Be careful not to damage the roof headlining when placing it in the cabin.




b. for 3 Person Seat no Rear No. 2 Seat:


b. for 3 Person Seat Type Rear No. 2 Seat:
Attach the 2 guides, 12 claws and 2 clips to install the headlining.

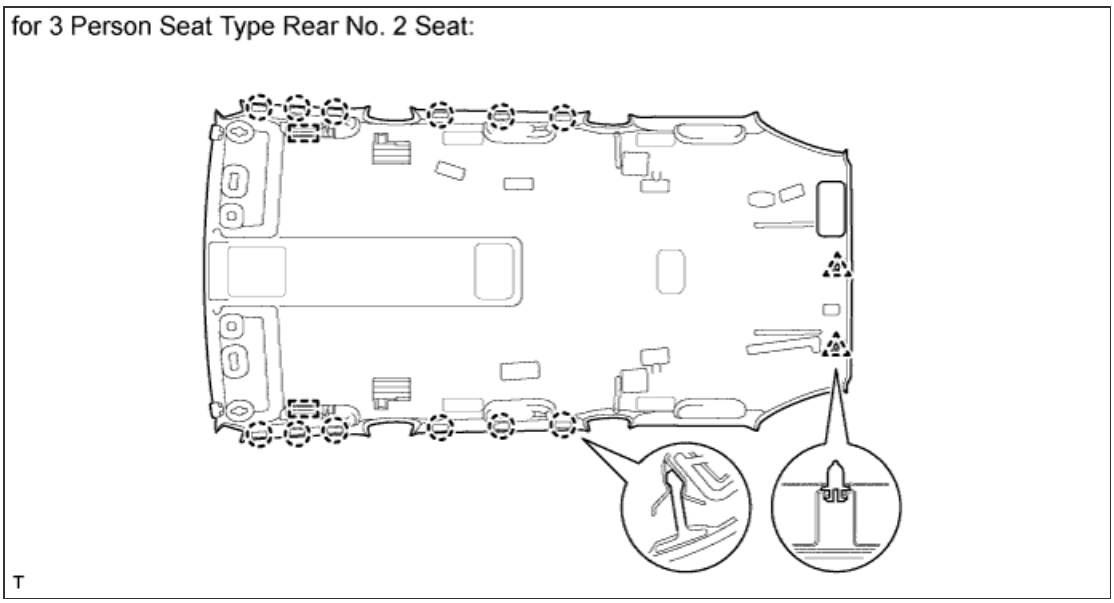


c. except 3 Person Seat Type Rear No. 2 Seat:
Attach the 2 guides, 12 claws and 3 clips to install the headlining.

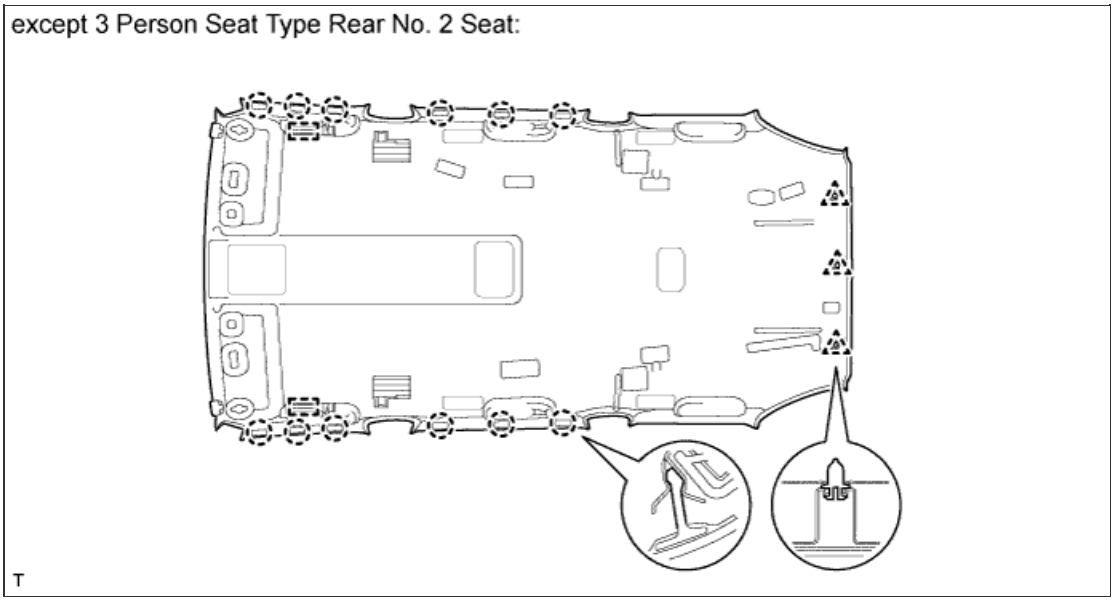

d. w/ Rear Wiper:
Connect the washer hose.

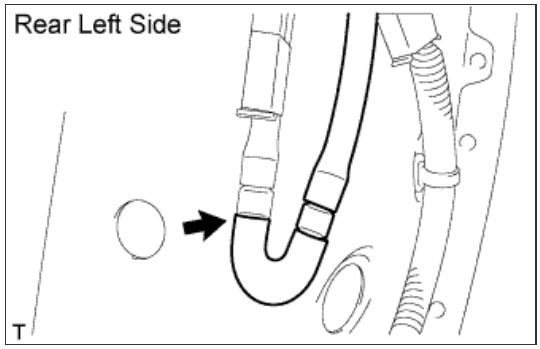


e. Connect the antenna cord connector.

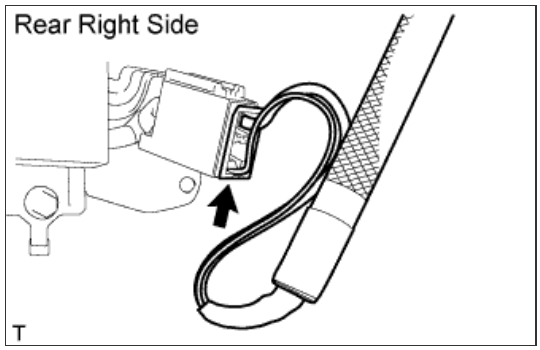


f. Connect the antenna cord connector and attach the 2 clamps.

g. Install the bolt.

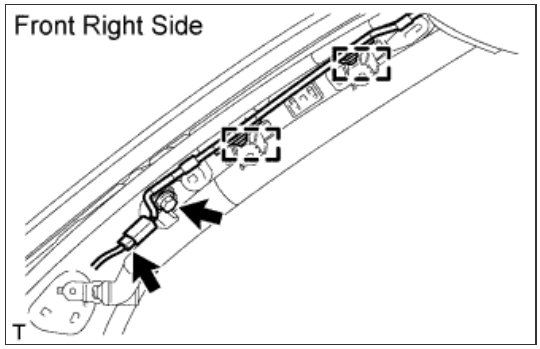


h. Connect the 3 roof wire connectors and 4 clamps.


i. w/ Rear Wiper:
Connect the washer hose.

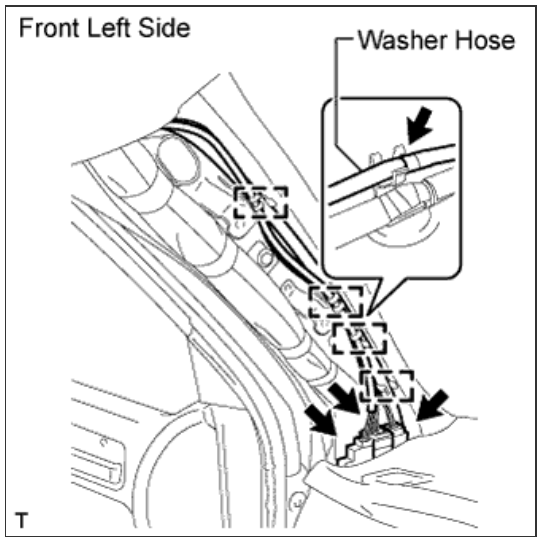

. w/ Rain Sensor:
Connect the rain sensor connector.

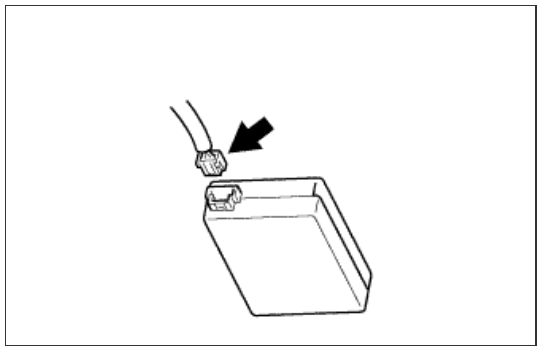


k. w/ C Mirror:
Connect the inner mirror connector.

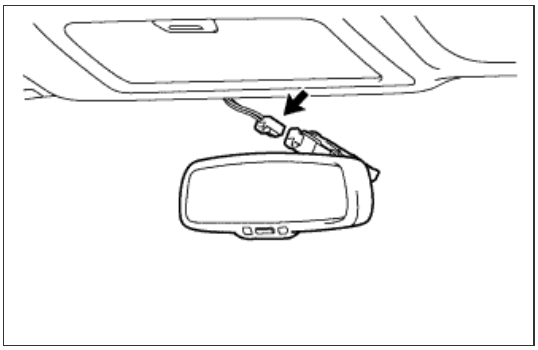

41. INSTALL FRONT ROOF SIDE RAIL GARNISH LH

a. Install 3 new clips to the roof side rail garnish.

. Attach the 3 clips to install the roof side rail garnish.

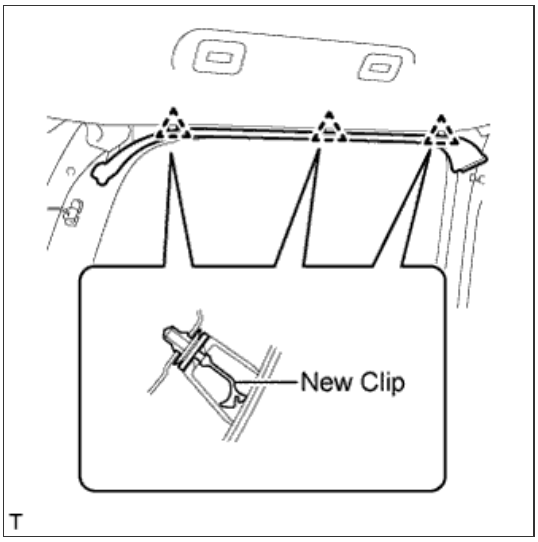

42. INSTALL FRONT ROOF SIDE RAIL GARNISH RH

HINT:

Use the same procedures described for the LH side.


43. INSTALL 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the 3rd seat assist grip on the other side.

a. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.

b. Install the assist grip.

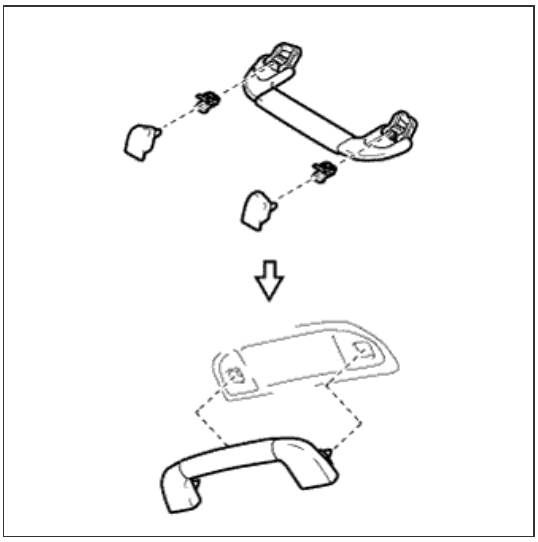


44. INSTALL NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat, except ace to ace Seat pe or w/o Rear No. 2 Seat:
Install the No. 2 assist grip assembl .

i. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.


ii. Install the assist grip.

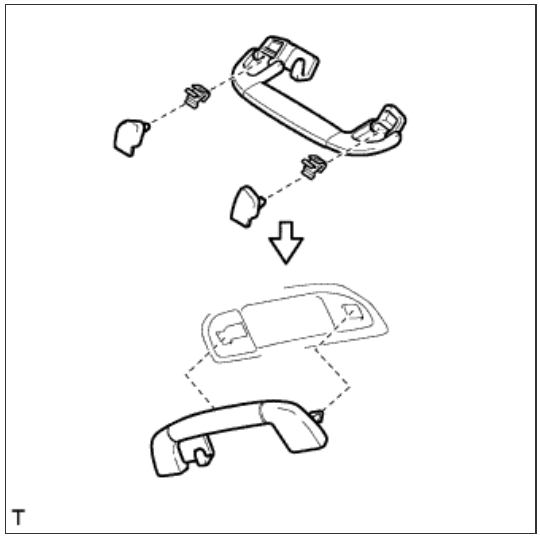

. w/ Rear No. 2 Seat, for ace to ace Seat pe:
Install the No. 2 assist grip assembl .

i. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.

ii. Install the assist grip.

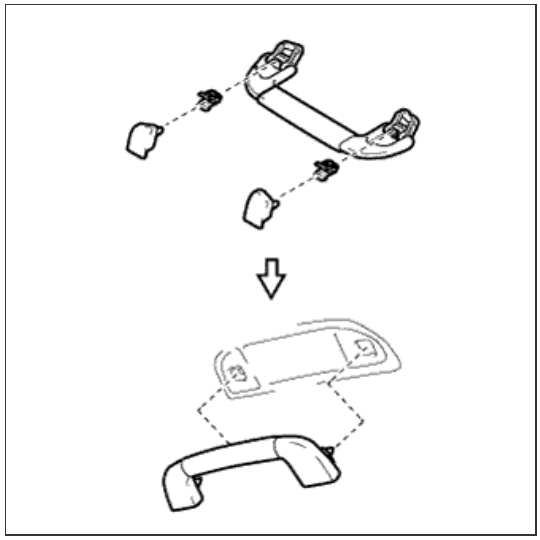

45. INSTALL NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


46. INSTALL ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to install the assist grip on the other side.


a. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.

b. Install the assist grip.

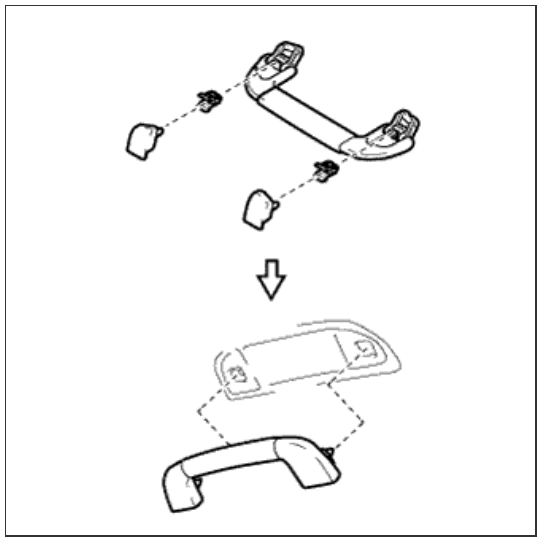


47. INSTALL SEAT BELT ANCHOR COVER (for 3 Per on Seat Type Rear No. 2 Seat)

a. Attach the 4 guides and 4 clips to install the seat belt anchor cover.

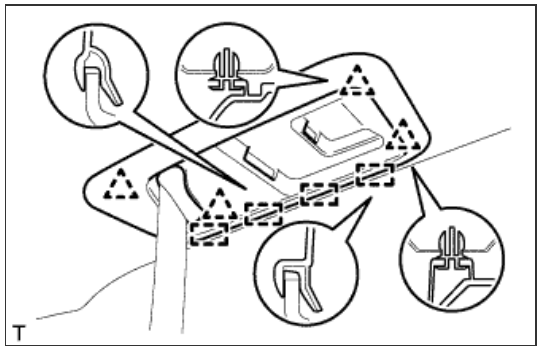

48. INSTALL RAIN SENSOR COVER (w/ Rain Sen o)


a. Push in the stopper in the direction of the arrow labeled (1) to install the rain sensor cover.

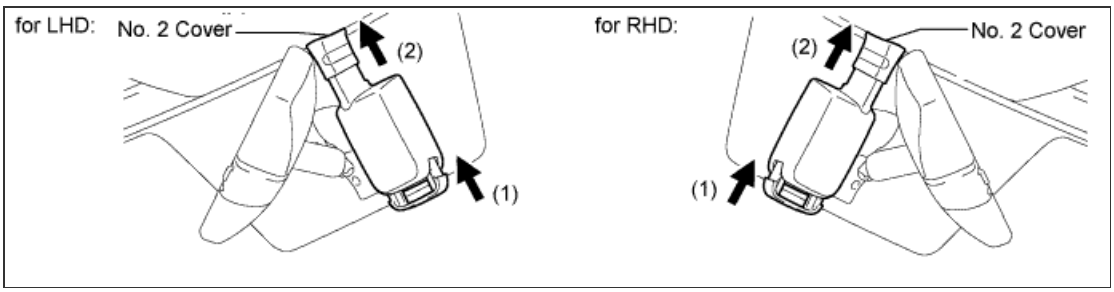

. Slide the No. 2 cover in the direction of the arrow labeled (2) to fix it in place.


49. INSTALL INNER REAR VIE MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Attach the 2 claws to install the cover.

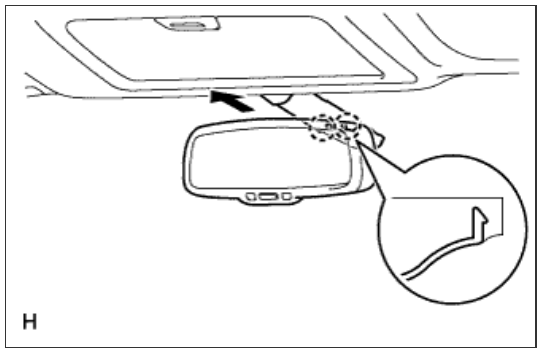

50. INSTALL CENTER VISOR ASSEMBLY LH (w/ S Vi o)

a. Attach the 2 clips to install the center visor.

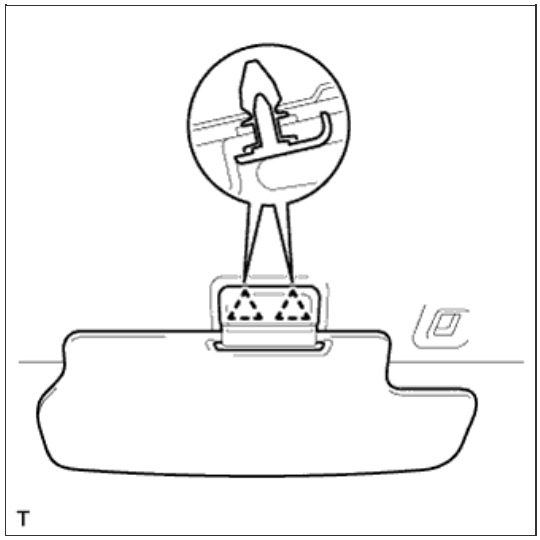

51. INSTALL CENTER VISOR ASSEMBLY RH (w/ S Vi o)

HINT:

Use the same procedures described for the LH side.


52. INSTALL VISOR HOLDER

HINT:

Use the same procedures to install the visor holder on the other side.


a. Attach the 2 claws.

b. Push the visor holder in to install it.

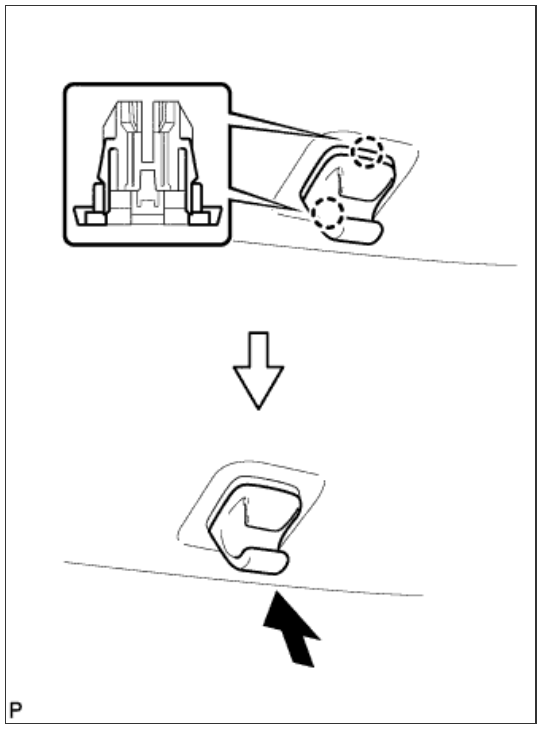

53. INSTALL VISOR ASSEMBLY LH

a. Install the visor with the 2 screws.

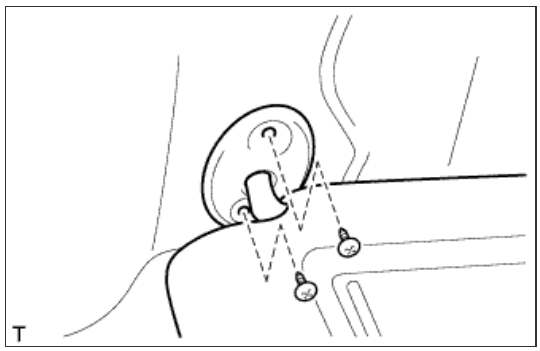

54. INSTALL VISOR ASSEMBLY RH

HINT:


Use the same procedures described for the LH side.

55. INSTALL VISOR BRACKET COVER

HINT:


Use the same procedure to install the visor bracket cover on the other side.

a. Attach the 4 claws to install the visor bracket cover.

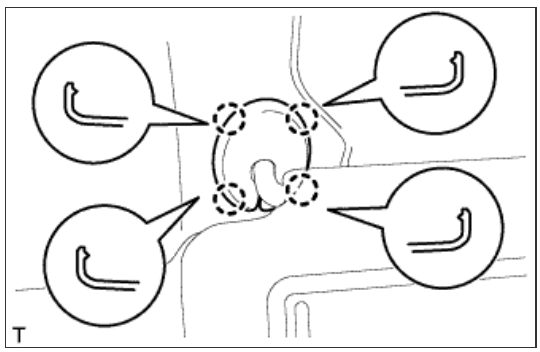


56. INSTALL NO. 2 ROOM LIGHT ASSEMBLY


a. Install the 2 covers.

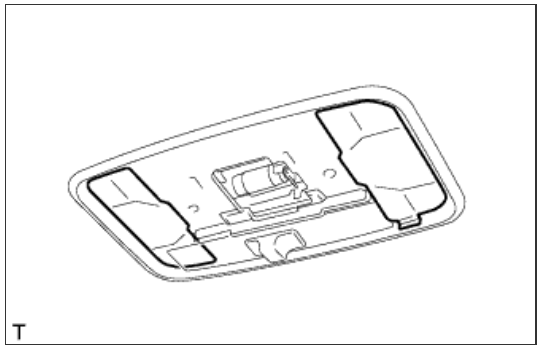


. Attach the 4 claws to install the room light lens.

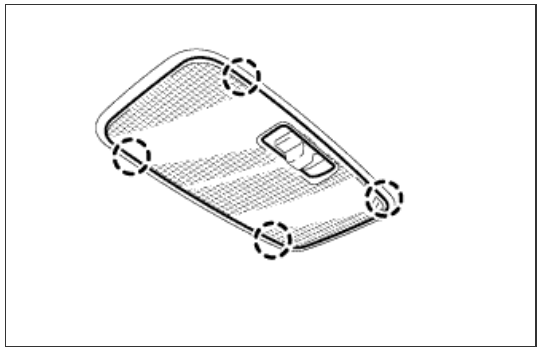

c. Attach the 4 claws to install the room light to the room light switch base.

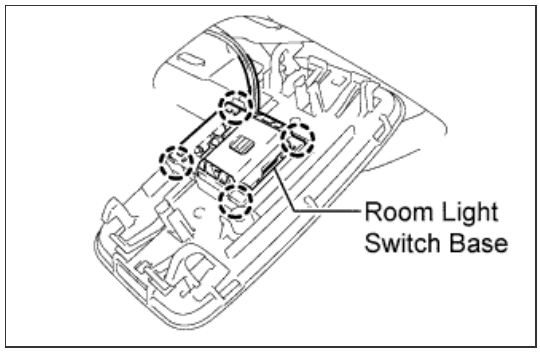


d. Attach the 4 claws to install the room light.

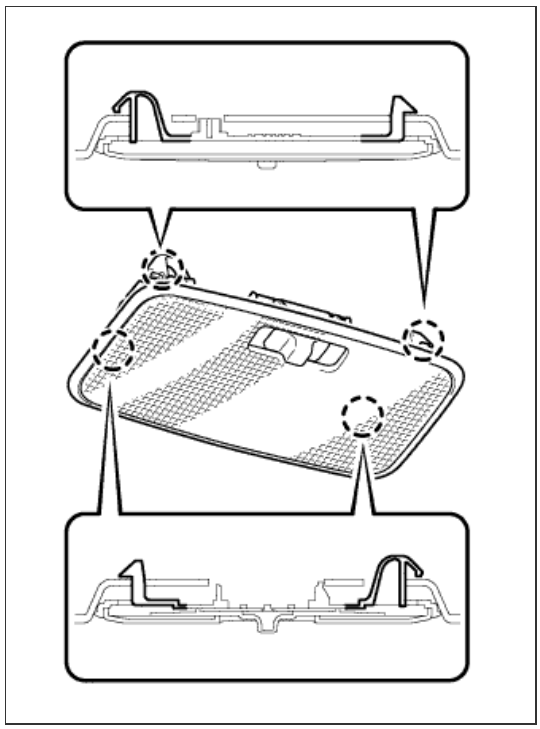

57. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

a. w/ Map Light:
Install the No. 1 room light assembl .

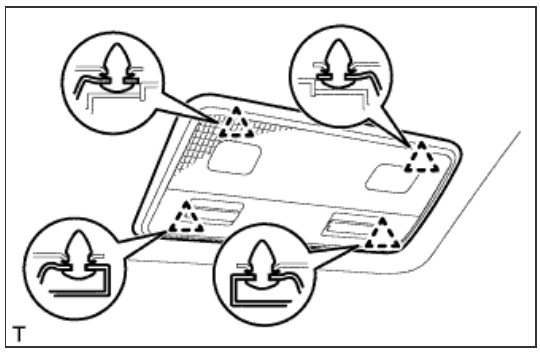


i. Connect the connector.


ii. Attach the 4 clips to install the room light.

. w/o Map Light:
Install the No. 1 room light assembl .


i. Install the 2 covers.

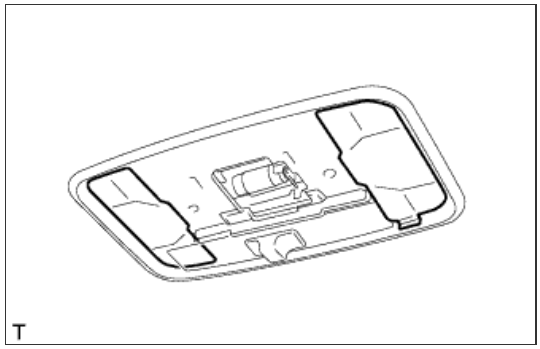


ii. Attach the 4 claws to install the room light lens.

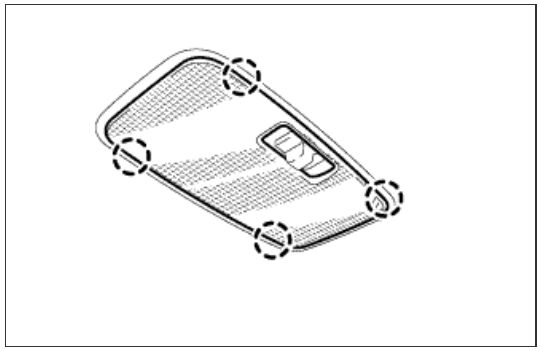

iii. Attach the 4 claws to install the room light to the room light switch base.

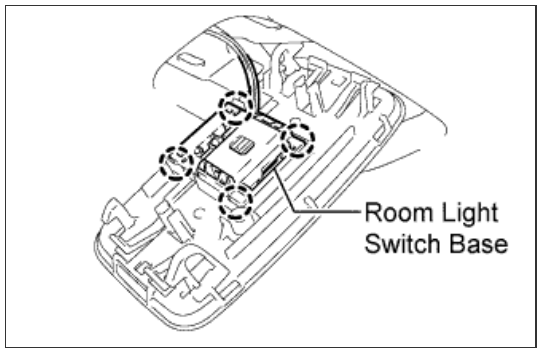

iv. Attach the 4 claws to install the room light.

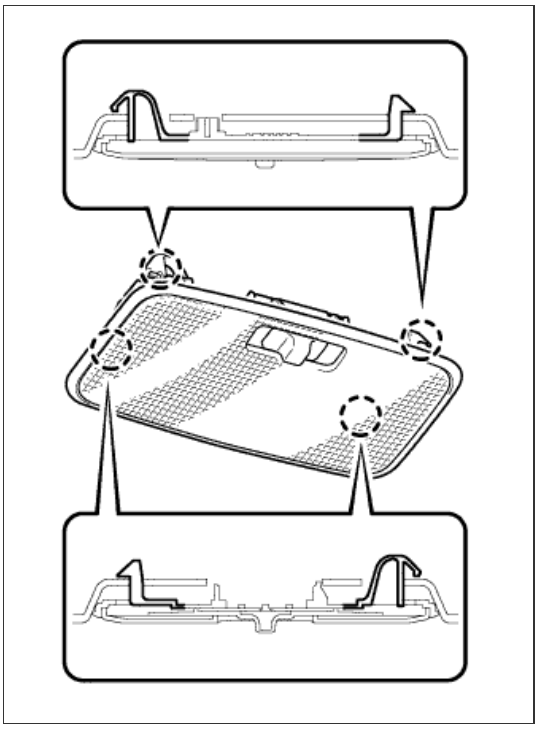


58. INSTALL MAP LIGHT ASSEMBLY (w/ Map Light)

a. Connect the connector.

b. Attach the 2 clips and 2 guides to install the map light.


c. Install the 2 screws.

d. Attach the 2 claws to close the 2 covers.

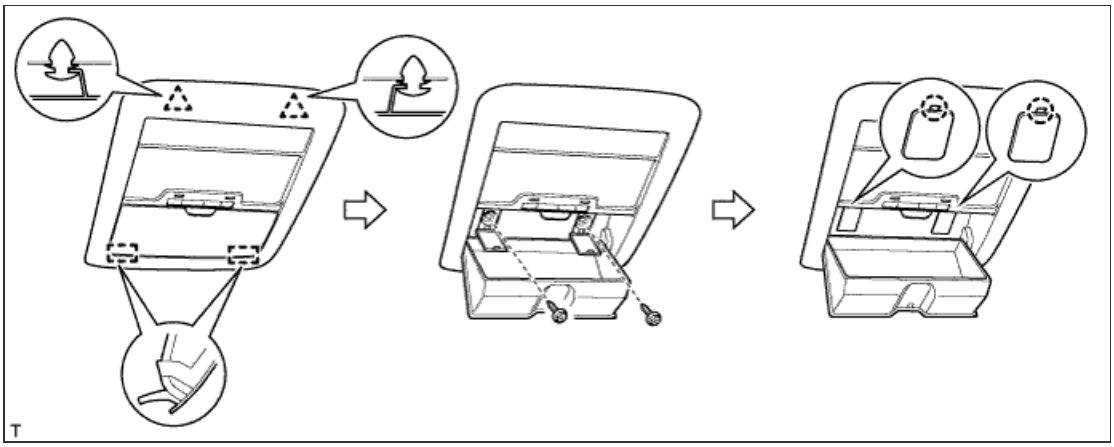


59. INSTALL REAR UPPER PILLAR GARNISH LH

a. Attach the 5 clips to install the rear upper pillar garnish.

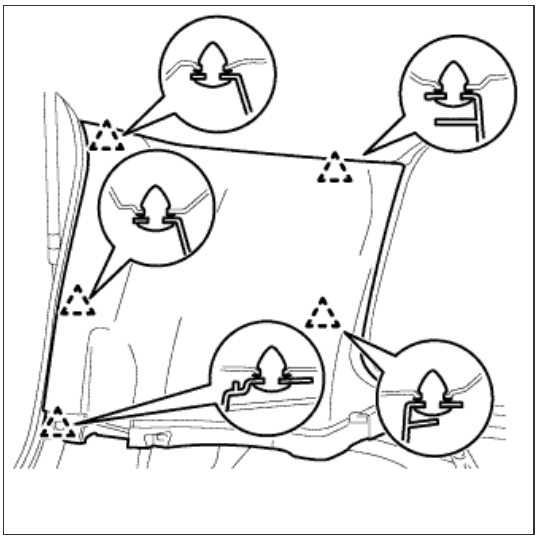


. w/ Rear No. 2 Seat, except ace to ace Seat pe:

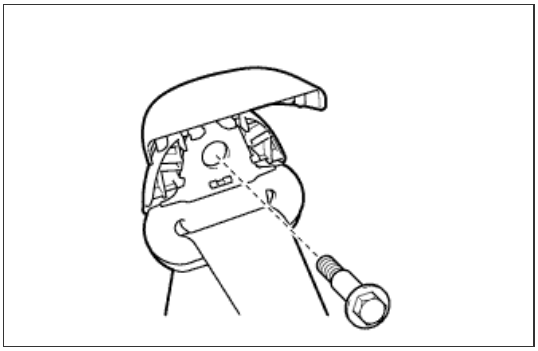

i. Install the seat belt shoulder anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

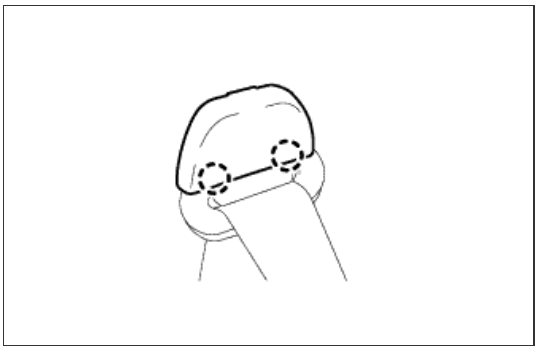

ii. Attach the 2 claws to close the seat belt shoulder anchor cover.

60. INSTALL REAR UPPER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

61. INSTALL REAR FRONT QUARTER TRIM GARNISH LH

a. Pass the seat belt anchor through the quarter trim garnish.

. Attach the clip and 2 guides to install the quarter trim garnish.

c. Install the screw.

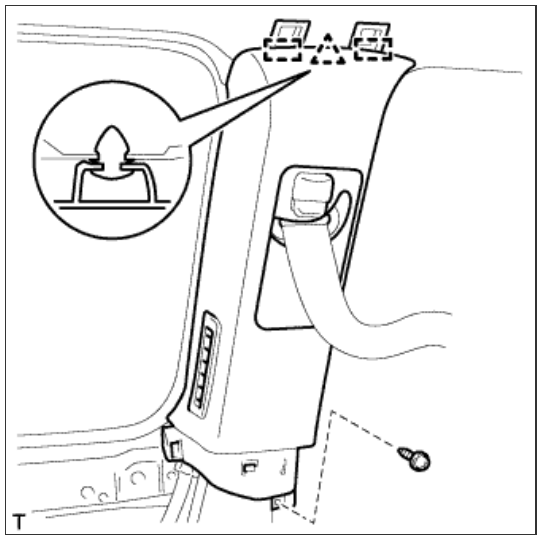

62. INSTALL REAR FRONT QUARTER TRIM GARNISH RH


HINT:

Use the same procedures described for the LH side.

63. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

When installing the front quarter trim panel, operate the reclining ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

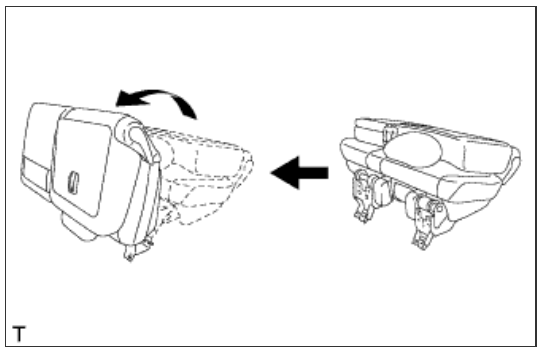

a. w/ Rear No. 2 Seat, except ace to ace Seat pe:


i. w/o Rear Air Conditioning S stem:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning S stem:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Tor e:
12 N 122 kgf c , 9 ft.*l f

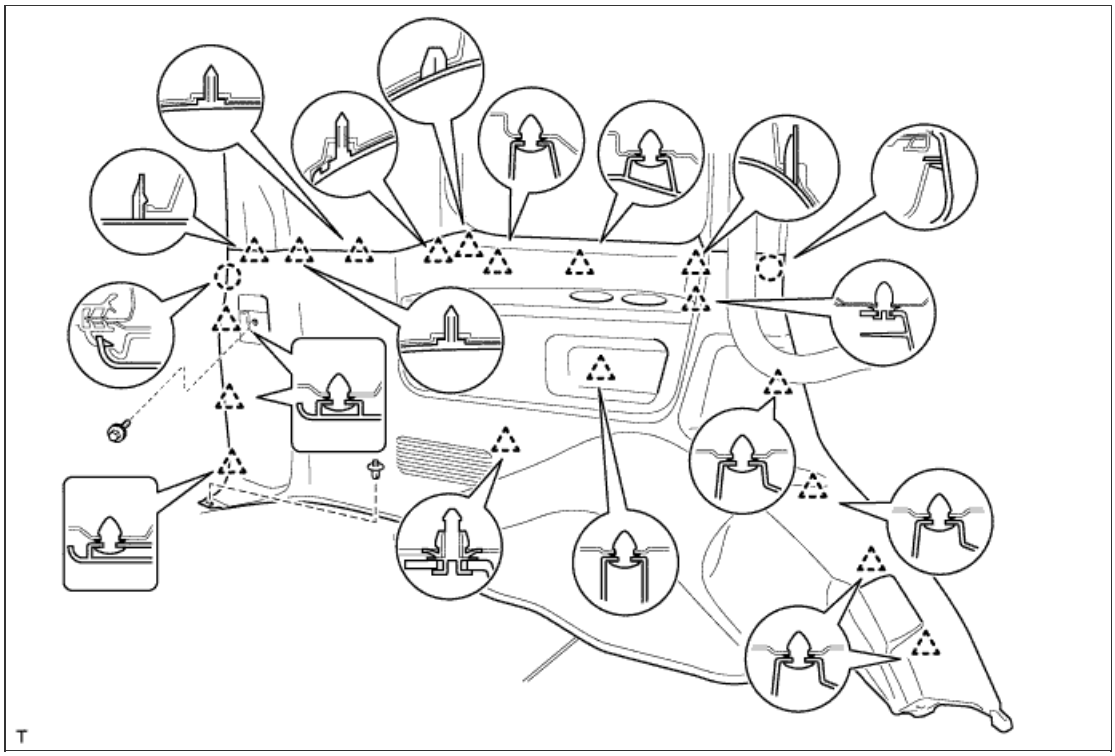

. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for ace to ace Seat pe:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

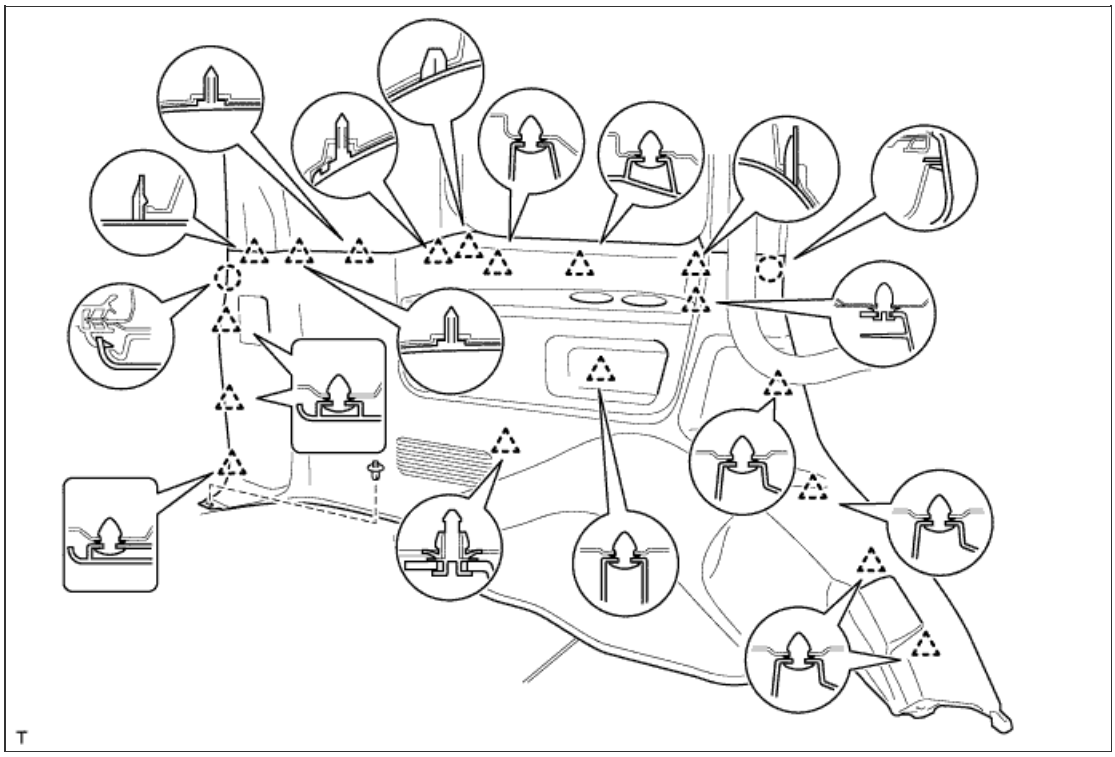

c. w/ onneau Cover:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the screw and clip.

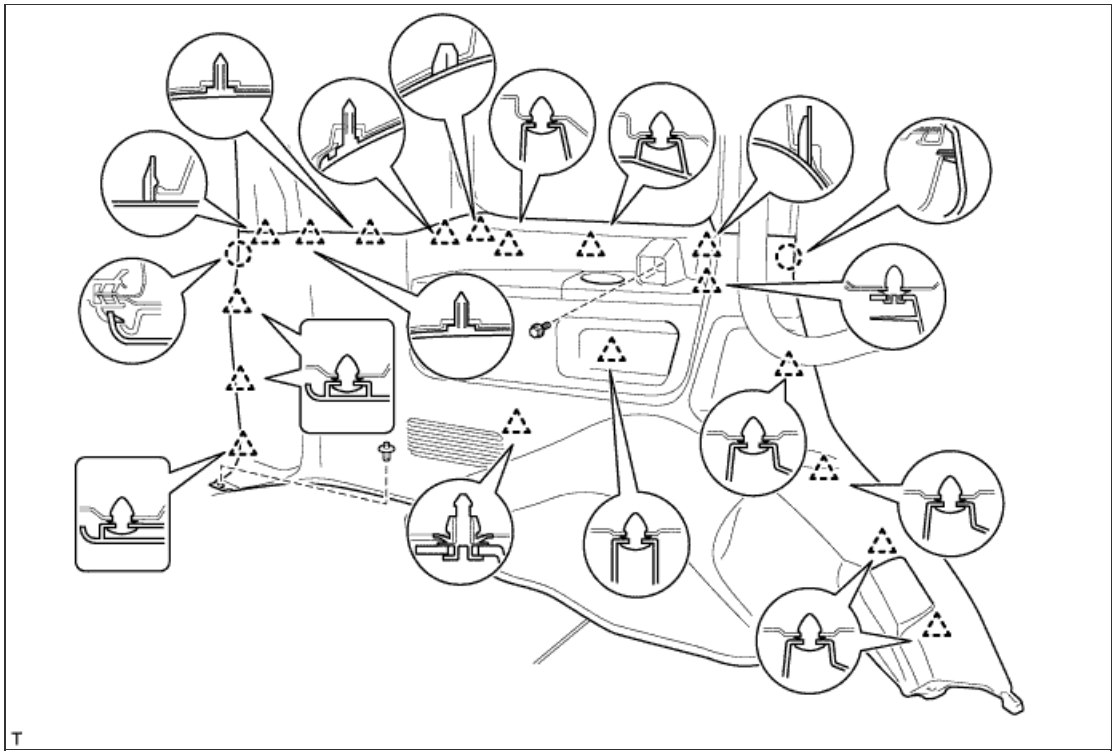


d. w/ Rear No. 2 Seat, except ace to ace Seat pe:
Install the rear No. 2 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f


NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle bod .

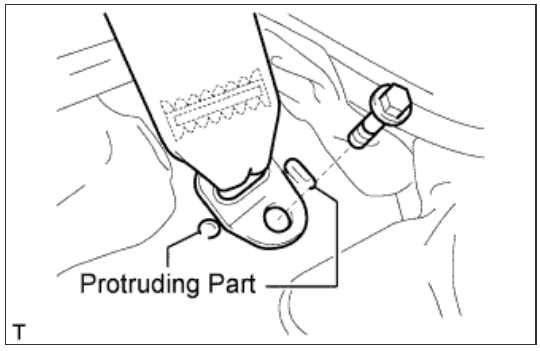


e. Install the rear No. 1 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

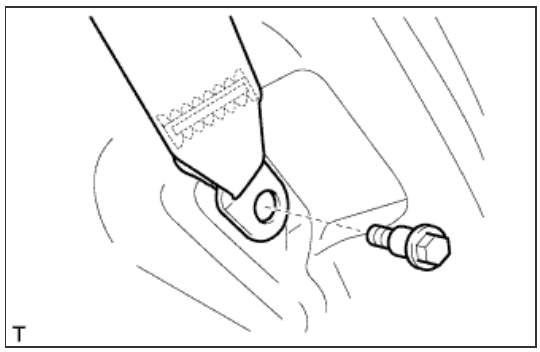


f. Attach the 3 claws to install the cover.

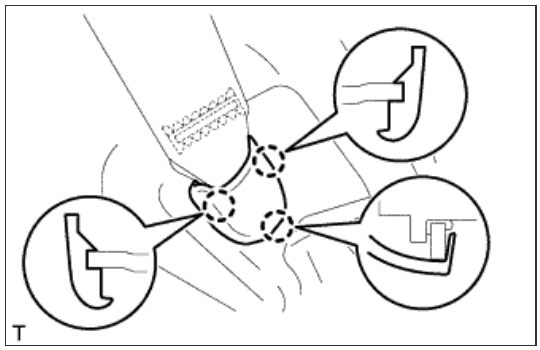

64. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:

When installing the front quarter trim panel, operate the reclining ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

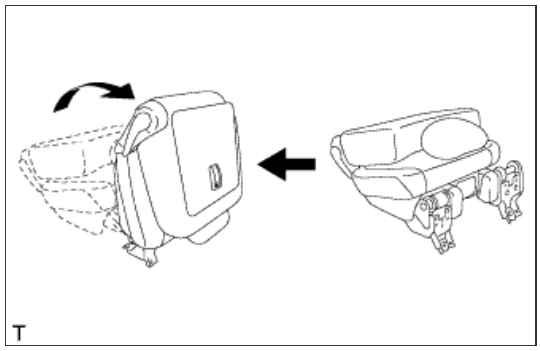

a. w/ Rear No. 2 Seat, except ace to ace Seat pe:


i. w/o Rear Air Conditioning S stem:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning S stem:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 16 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Tor e:
12 N 122 kgf c , 9 ft.*l f

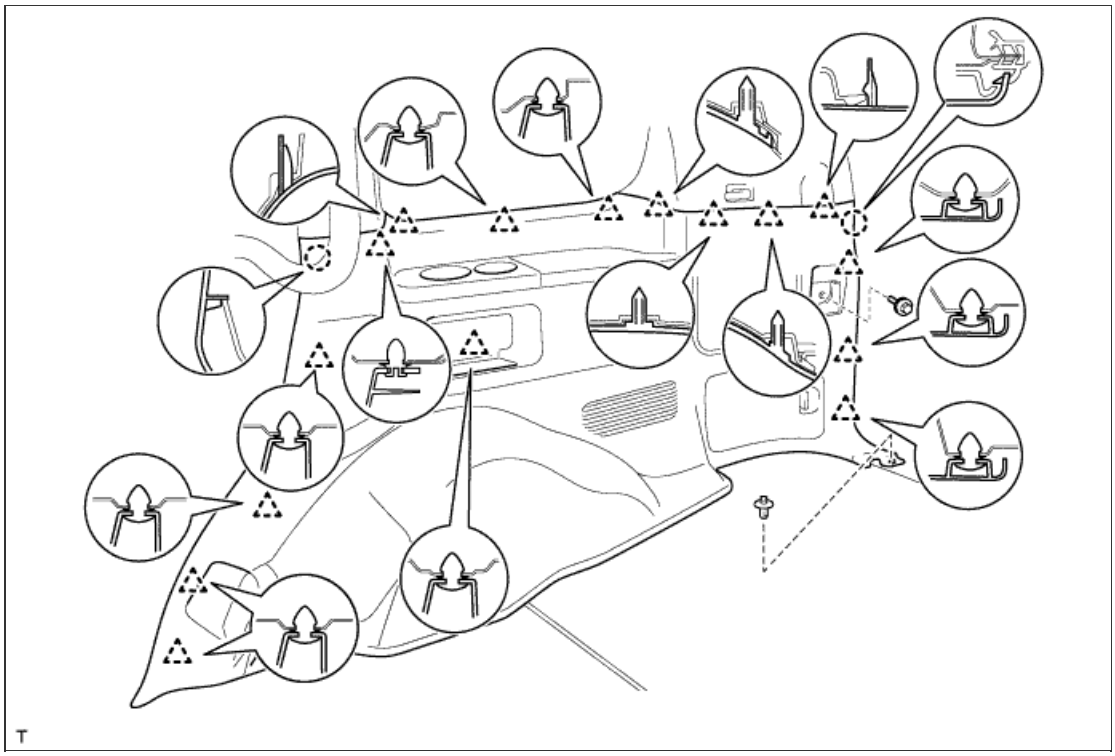

. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for ace to ace Seat pe:

i. Attach the 16 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

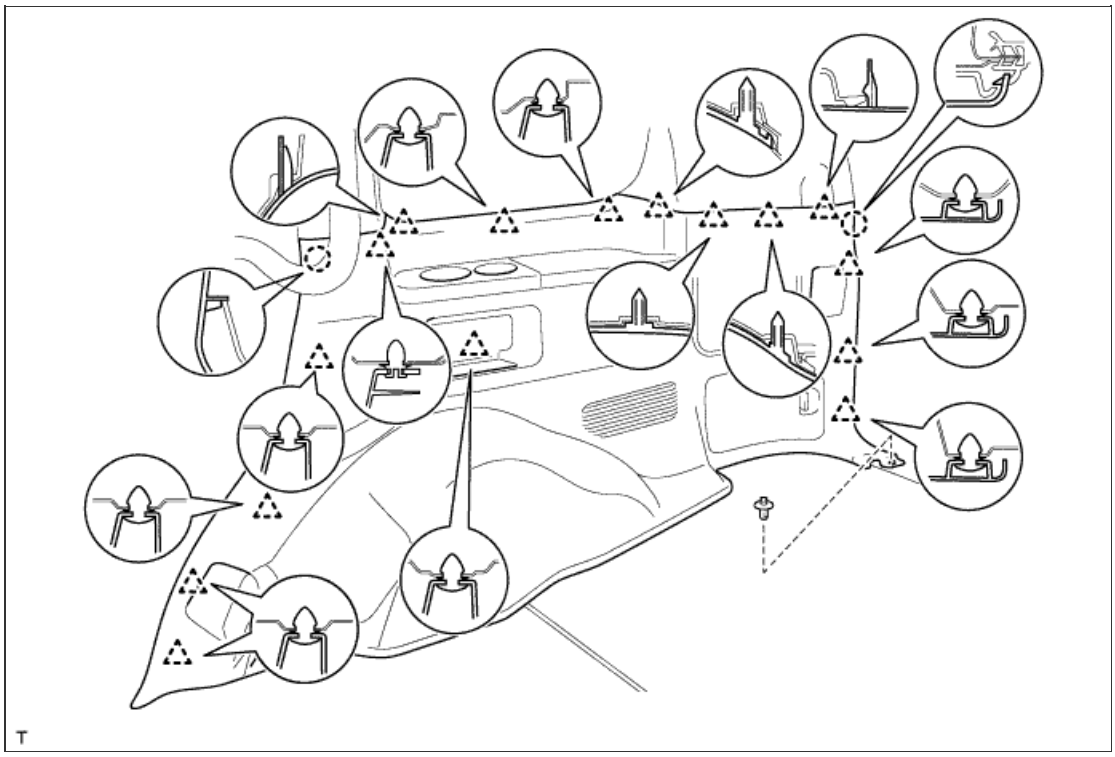

c. w/ onneau Cover:

i. Attach the 16 clips and 2 claws to install the quarter trim panel.


ii. Install the screw and clip.

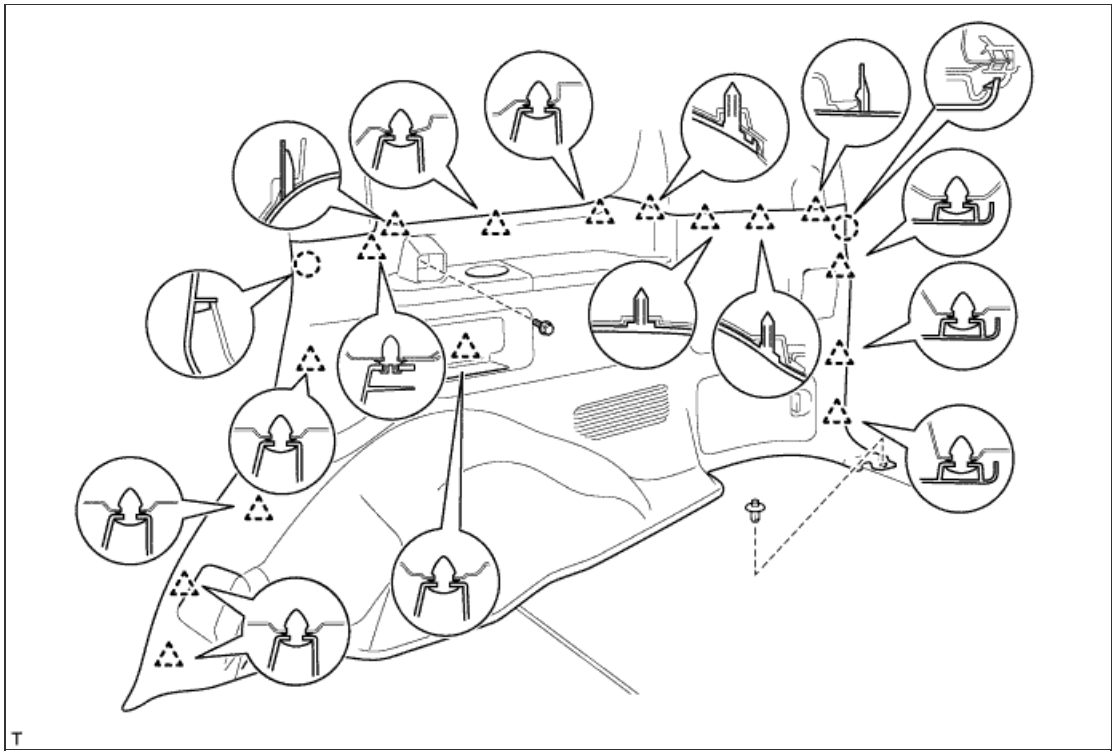


d. w/ Rear No. 2 Seat, except ace to ace Seat pe:

i. Install the rear No. 2 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

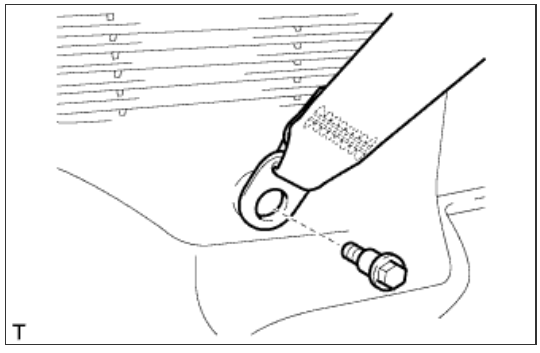


ii. Attach the 3 claws to install the cover.

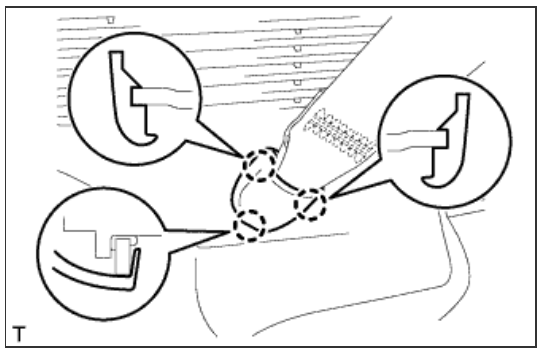


e. Install the rear No. 1 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

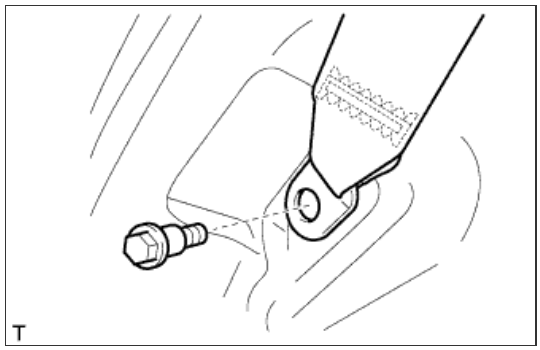

f. Attach the 3 claws to install the cover.

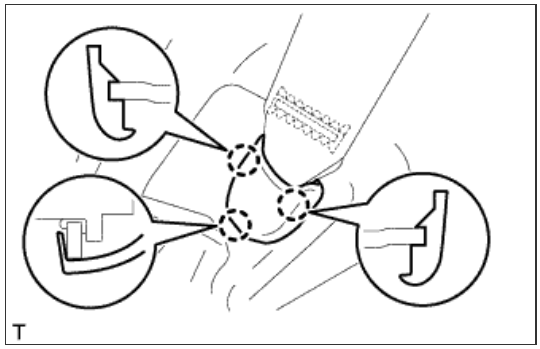


65. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

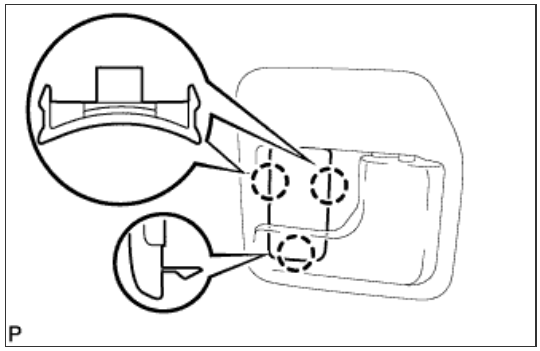


66. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonnea Cover)

HINT:

Use the same procedure to install the tonneau cover holder cap on the other side.

a. Attach the 2 claws to install the tonneau cover holder cap.

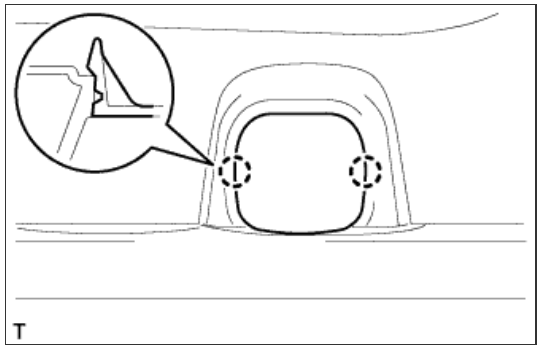


67. INSTALL CENTER PILLAR GARNISH LH

a. Pass the seat belt anchor through the center pillar garnish.

. Attach the 2 clips and 2 guides to install the center pillar garnish.

c. Install the bolt.

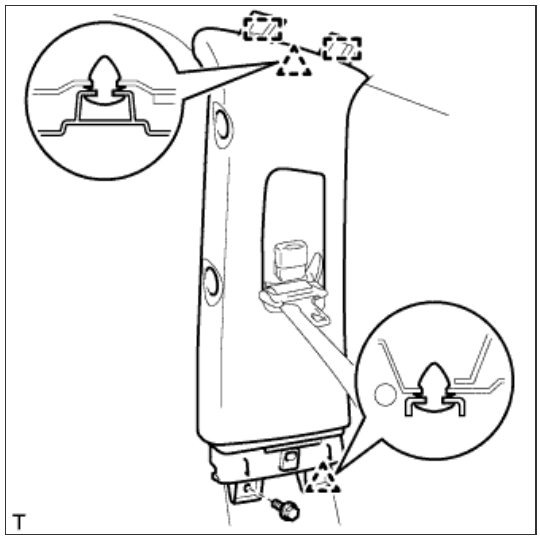

68. INSTALL CENTER PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

69. INSTALL REAR ASSIST GRIP ASSEMBLY


HINT:

Use the same procedure to install the rear assist grip on the other side.

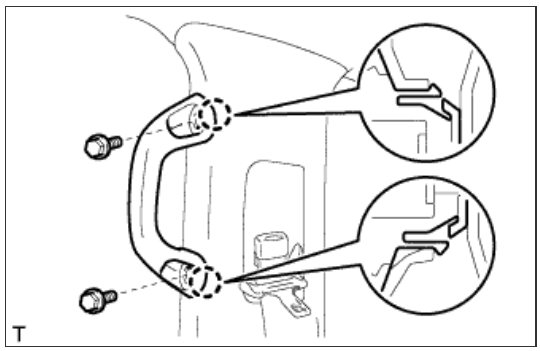

a. Attach the 2 claws to install the rear assist grip.

b. Install the 2 bolts.

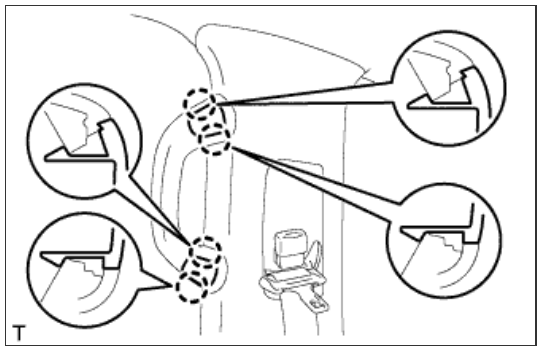


c. Attach the 4 claws to install the 2 assist grip plugs.

70. INSTALL CENTER LO EPILLAR GARNISH LH

HINT:


- **for Man al Seat:**
  hen in talling the center lower pillar garni h, oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  hen in talling the center lower pillar garni h, connect the cable to the negative (-) attery ter inal and operate the power eat wi ch to oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  After o in the front eat, di connect the cable fro the negative (-) attery ter inal.

a. Attach the 2 claws and 7 clips to install the center lower pillar garnish.

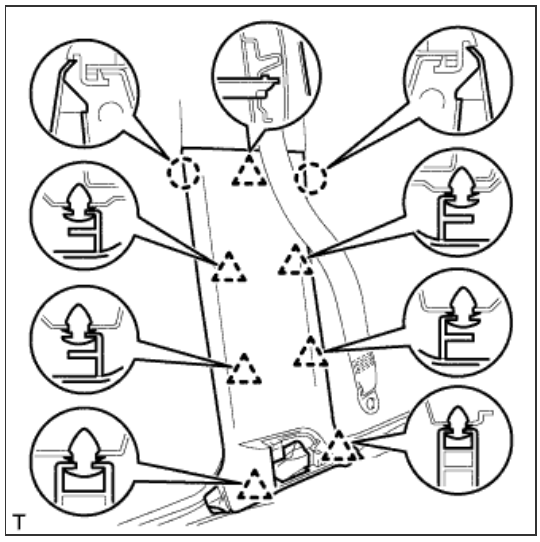

. Install the seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

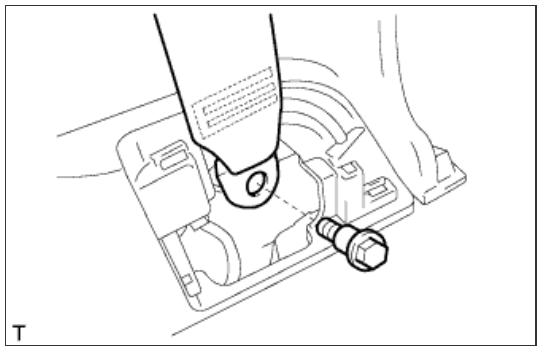

71. INSTALL CENTER LO ERPILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

72. INSTALL CENTER PILLAR GARNISH COVER LH

HINT:

- **for Man al Seat:**
  hen in talling the center pillar garni h cover, oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  hen in talling the center pillar garni h cover, connect the cable to the negative (-) attery ter ial and operate the power eat wtch to oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  After o in the front eat, di connect the cable fro the negative (-) attery ter ial.

a. Attach the 2 clips and 2 guides to install the cover.

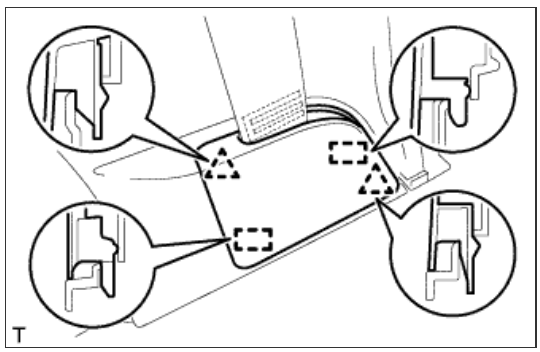

73. INSTALL CENTER PILLAR GARNISH COVER RH


HINT:

Use the same procedures described for the LH side.

74. INSTALL FRONT PILLAR GARNISH LH

a. for 9 Speakers:
Connect the speaker connector.

. Attach the clip and 3 guides to install the front pillar garnish.

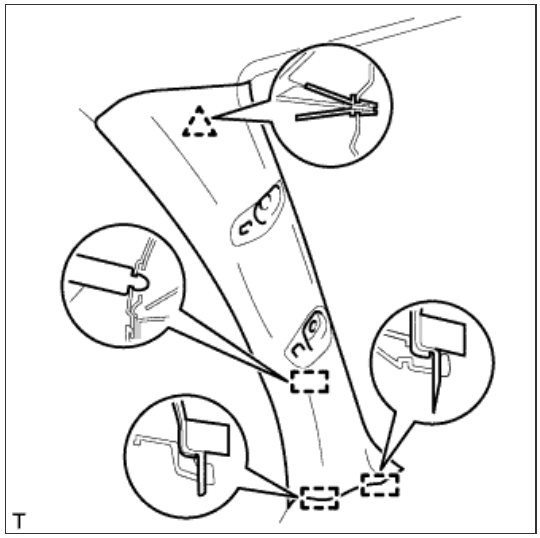

75. INSTALL FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.


76. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY

HINT:


Use the same procedure to install the front assist grip on the other side.

a. Attach the 2 claws to install the front assist grip.

b. Install the 2 bolts.

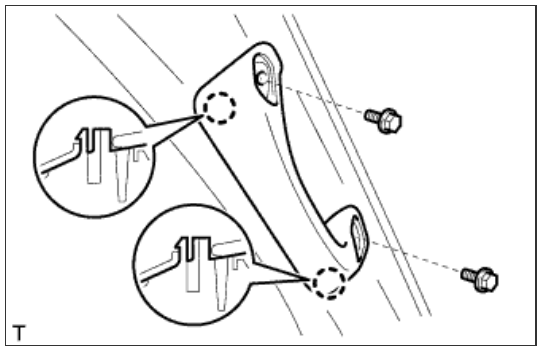


c. Attach the 4 claws to install the 2 assist grip plugs.

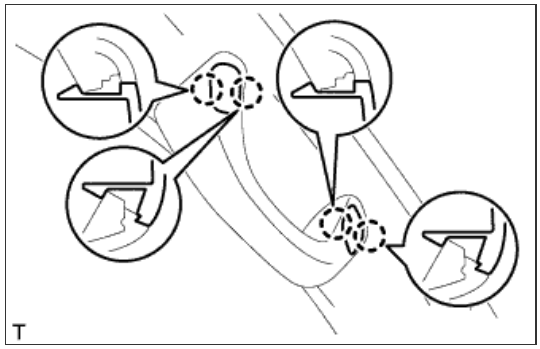

77. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE


a. Attach the 6 clips to install the support plate.

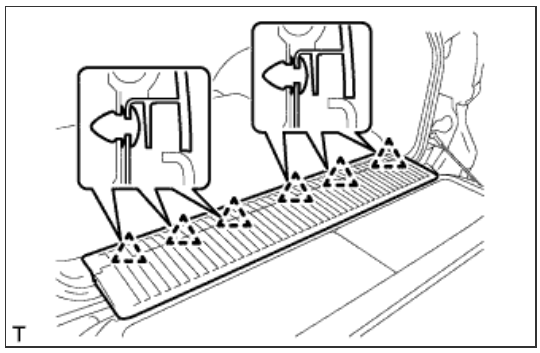

78. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

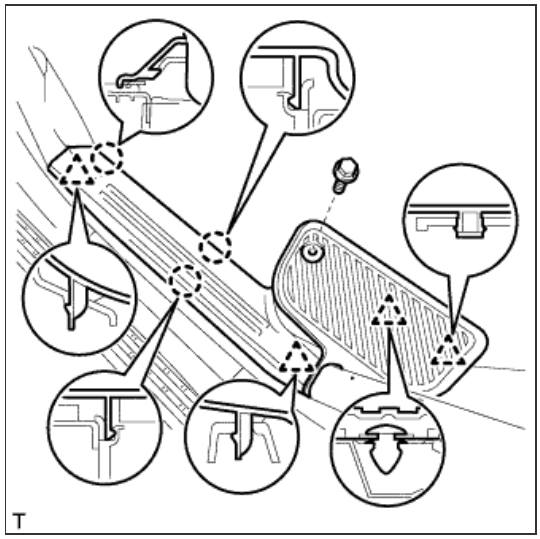

79. INSTALL REAR DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

80. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

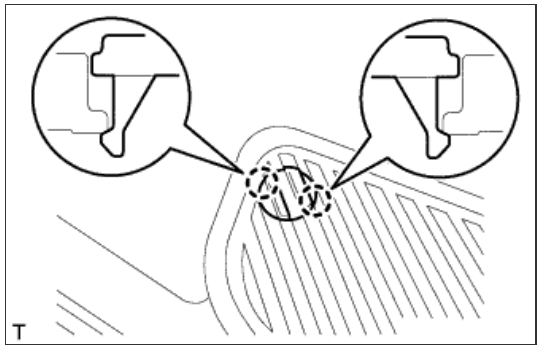

81. INSTALL FRONT DOOR SCUFF PLATE LH

a. Attach the 7 claws and 4 clips to install the scuff plate.

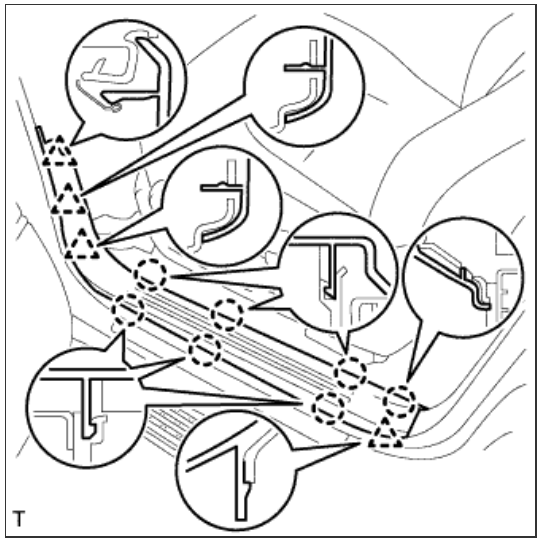

82. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

83. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

84. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

85. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

86. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

87. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonnea Cover)

a. Install the tonneau cover assembl .

88. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some s stems need to be initialized after the cable is reconnected (Click here).


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL SIDE TRIM BOX

a. Install the side trim box with the 9 screws.

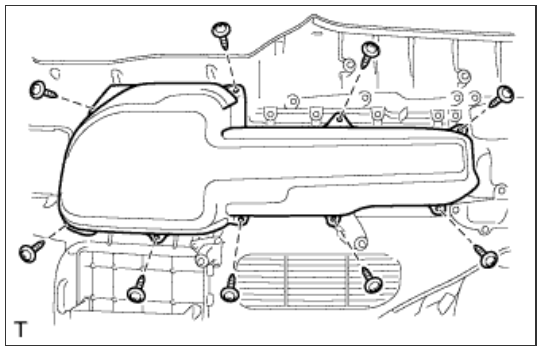

2. INSTALL SIDE TRIM BOX COVER


a. Install the side trim box cover.

3. INSTALL QUARTER TRIM LID SUB-ASSEMBLY RH

a. Install the quarter trim lid.

4. INSTALL QUARTER TRIM COVER LH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

a. Attach the 6 clips to install the quarter trim cover.

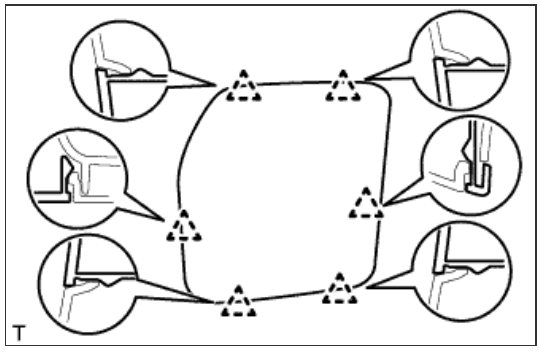


5. INSTALL QUARTER TRIM COVER RH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

6. INSTALL REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 6 clips to install the rear No. 2 seat cover bezel.

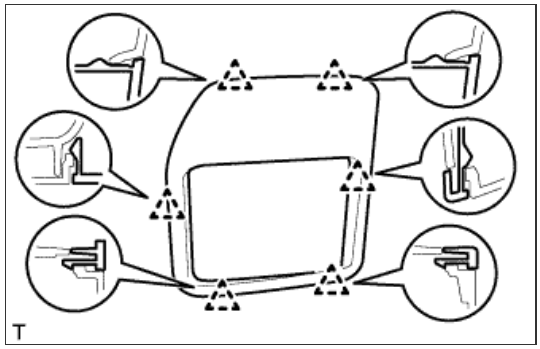

7. INSTALL REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

8. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 4 claws to install the seat lock control lever.


9. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

10. INSTALL NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

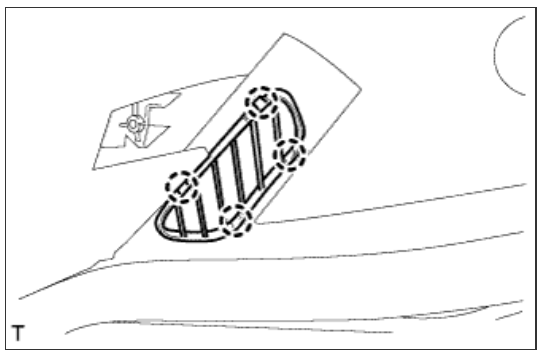


11. INSTALL NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.


12. INSTALL NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

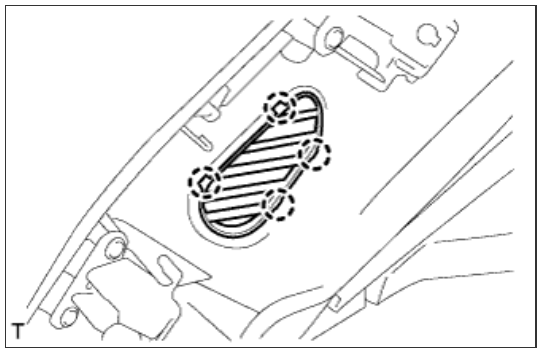


13. INSTALL NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

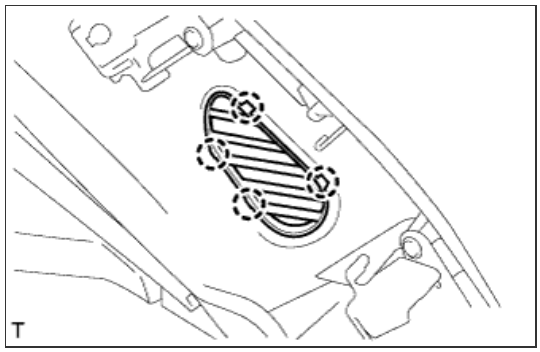


b. Install the duct with the 6 screws.

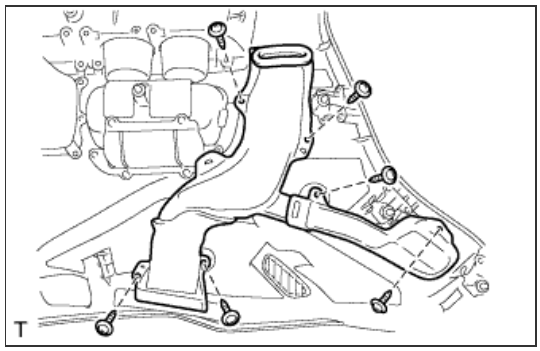

14. INSTALL TONNEAU COVER HANGER LH (w/ Tonnea Cover)

a. Install the tonneau cover hanger and rear quarter trim base with the 2 screws.

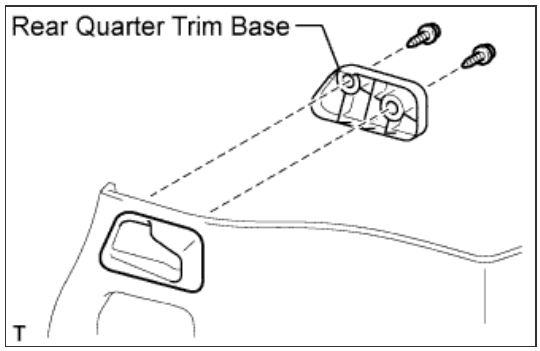

15. INSTALL TONNEAU COVER HANGER RH (w/ Tonnea Cover)


HINT:

Use the same procedures described for the LH side.

16. INSTALL TONNEAU COVER HOLDER BRACKET LH (w/ Tonnea Cover)

a. Attach the 3 claws to install the tonneau cover holder bracket.

. Install the front quarter trim base with the 3 screws and then install the remaining 5 screws.

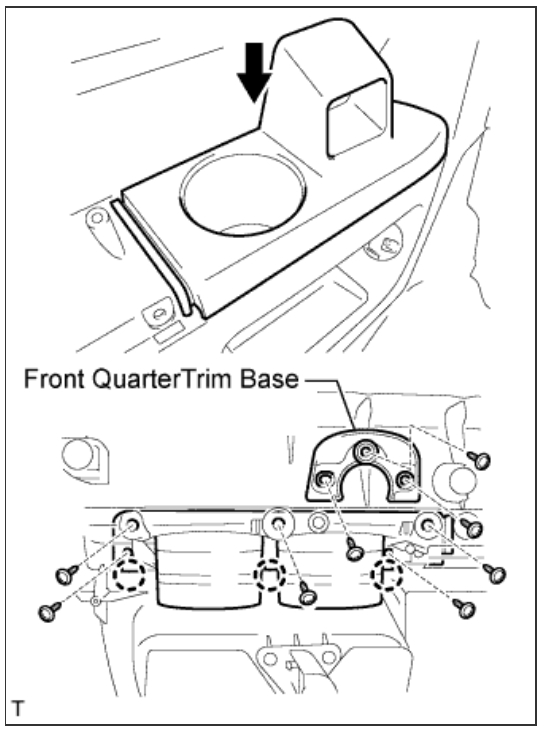

17. INSTALL TONNEAU COVER HOLDER BRACKET RH (w/ Tonnea Cover)


HINT:

Use the same procedures described for the LH side.

18. INSTALL NO. 2 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


b. Install the 5 screws.

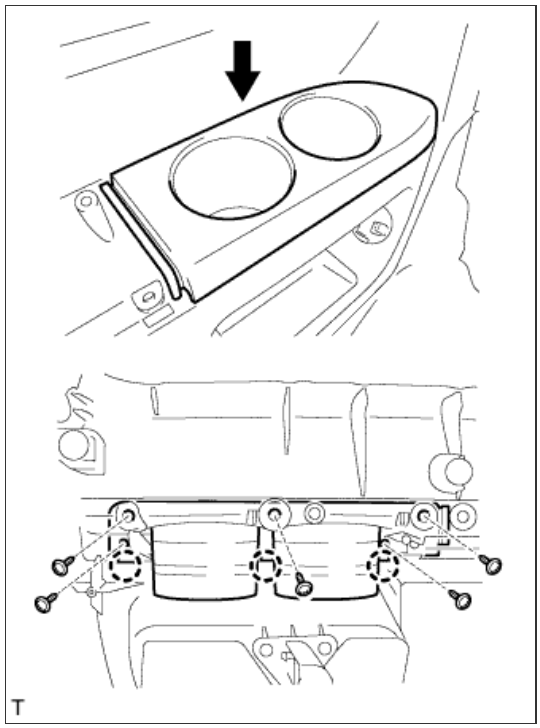

19. INSTALL NO. 1 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


. Install the 5 screws.

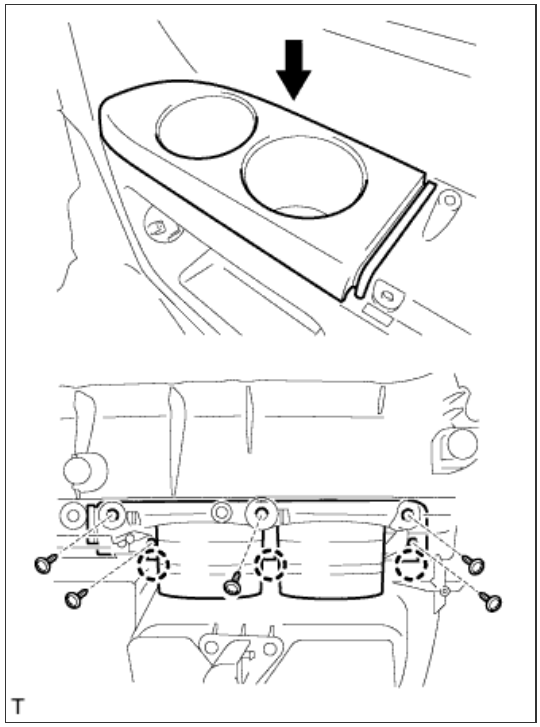


20. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

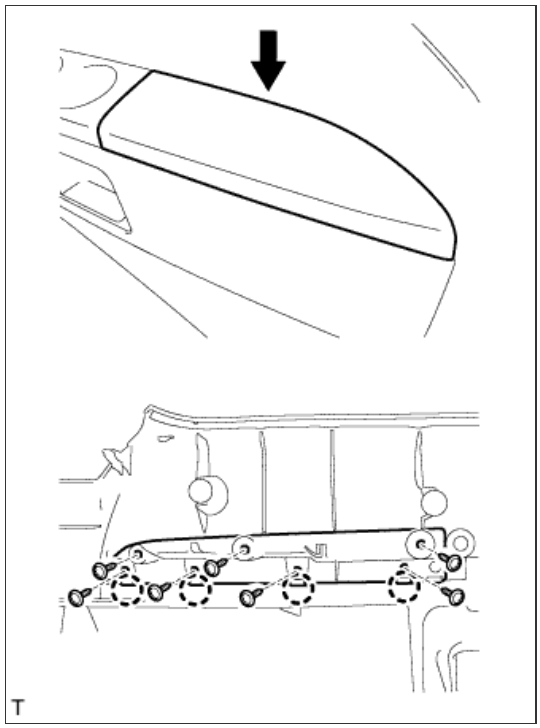


c. w/ Rear Heater:
Install the duct with the 8 screws.

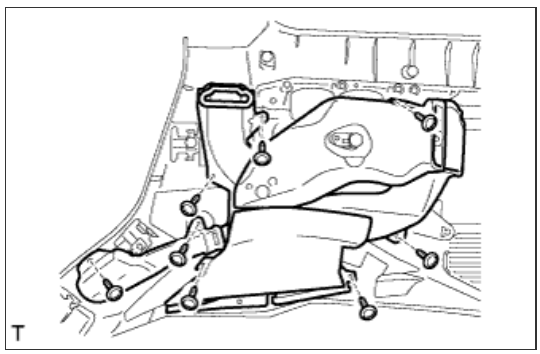

21. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY RH


a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

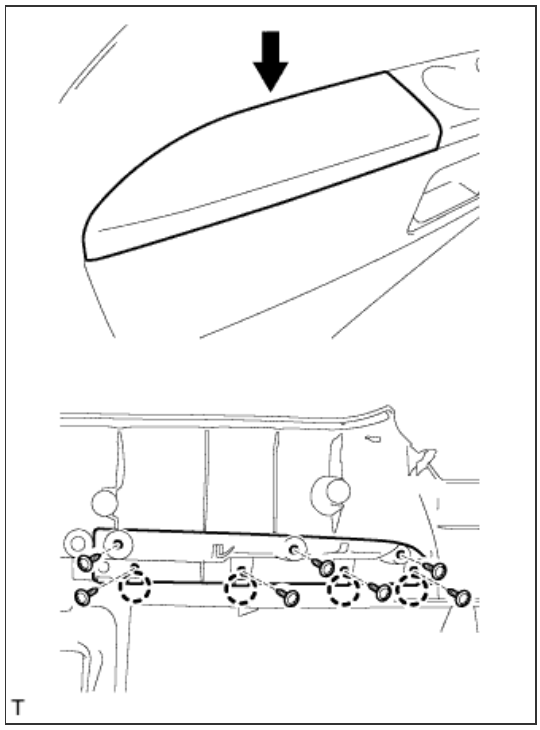

22. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Install the hanger with 2 new spring nuts.

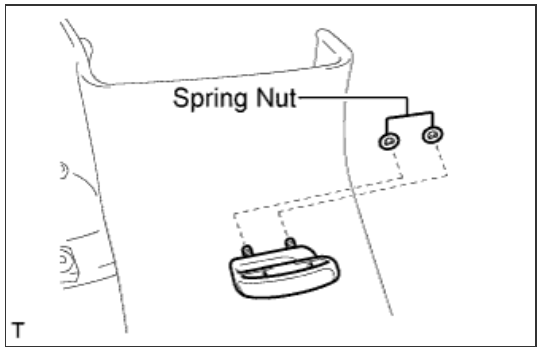

23. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:


Use the same procedures described for the LH side.

24. INSTALL REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to install the hanger on the other side.

a. Install the hanger with 2 new spring nuts.

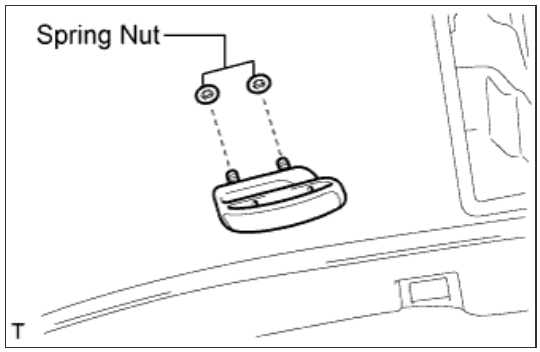

25. INSTALL ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 7 claws to install the cover.

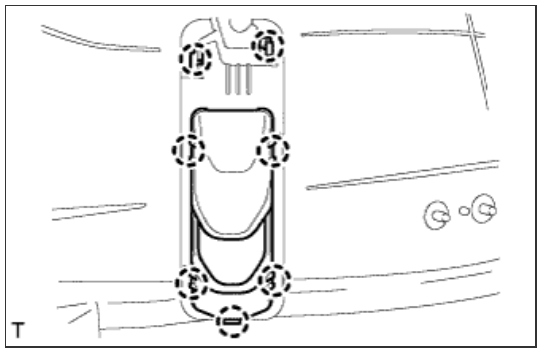


26. INSTALL ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

27. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Attach the 6 claws to install the plate.

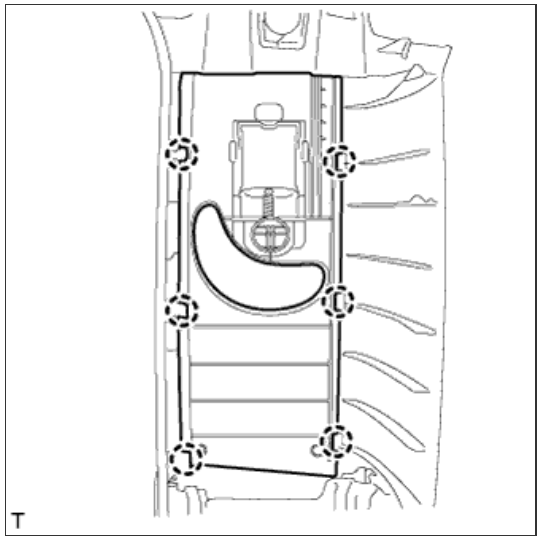


28. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

29. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Slide the plate in the direction shown in the illustration and attach the 6 claws to install the plate.

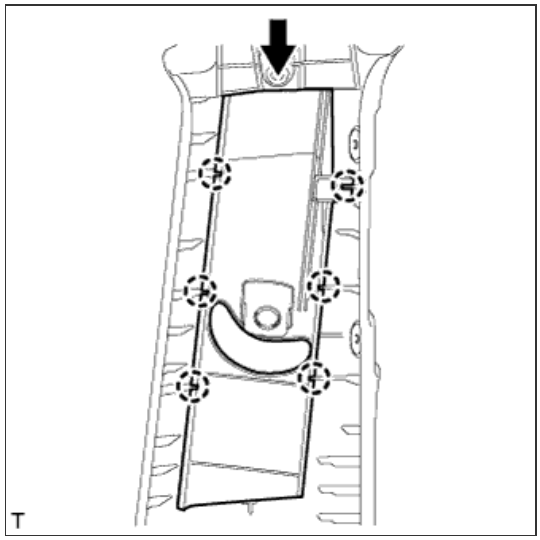


30. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

31. INSTALL REAR DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 3 clips to install the rear door scuff plate outside.

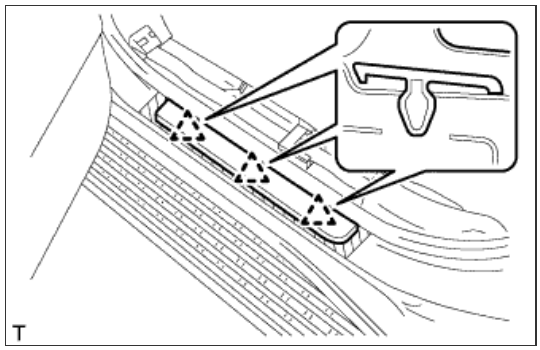


32. INSTALL REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

33. INSTALL FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 4 clips to install the front door scuff plate outside.

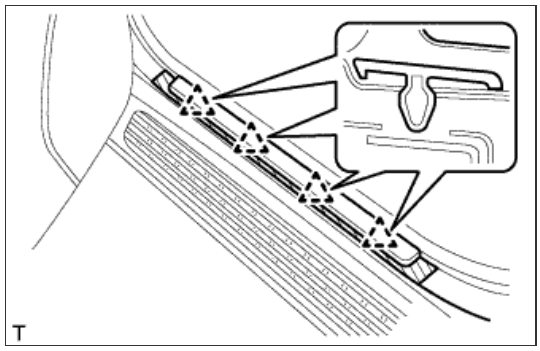


34. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.


35. INSTALL BACK DOOR EATHERSTRIP

a. Install the back door weatherstrip as shown in the illustration.

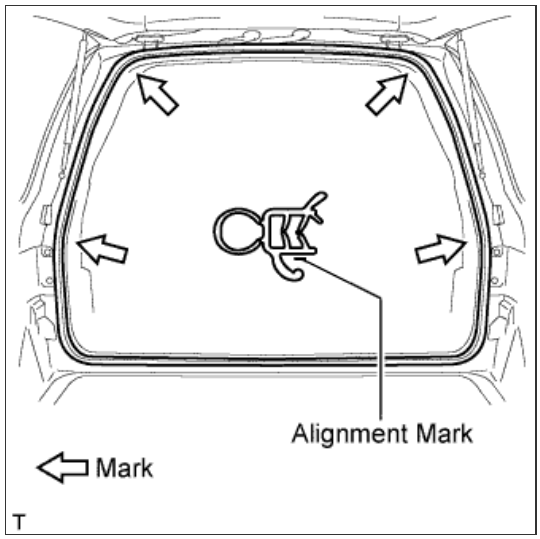

36. INSTALL REAR DOOR OPENING TRIM EATHERSTRIP LH

a. Install the rear door opening trim weatherstrip as shown in the illustration.

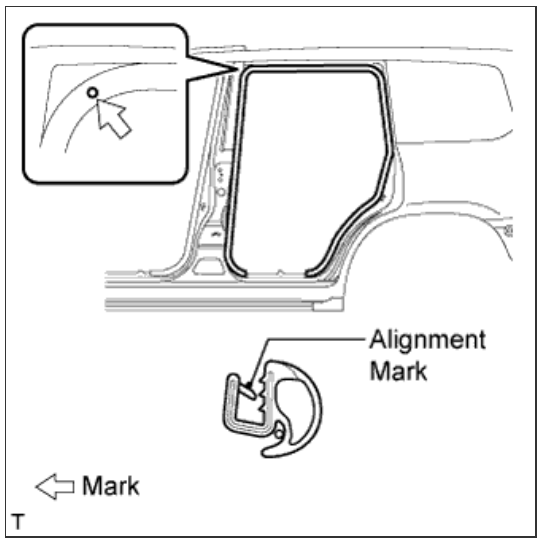


37. INSTALL REAR DOOR OPENING TRIM EATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

38. INSTALL FRONT DOOR OPENING TRIM EATHERSTRIP LH

a. Install the front door opening trim weatherstrip as shown in the illustration.

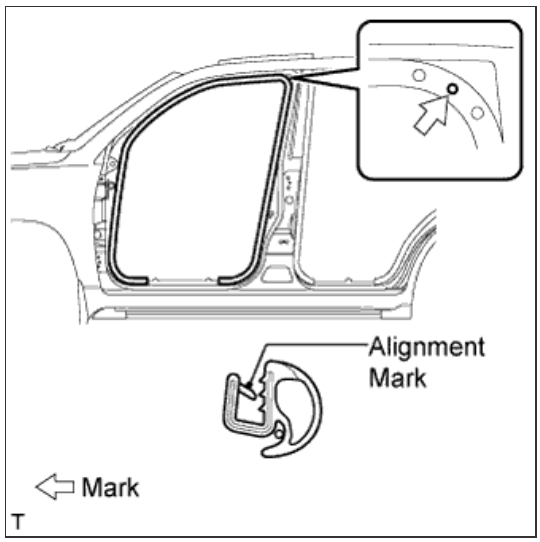

39. INSTALL FRONT DOOR OPENING TRIM EATHERSTRIP RH


HINT:

Use the same procedures described for the LH side.

40. INSTALL ROOF HEADLINING ASSEMBLY

HINT:

- **for Man al Seat:**
  hen in talling the roof headlining, oe the front eat and rear No. 1 eat to the po tion hown in the ill tration.
- **for Power Seat:**
  hen in talling the roof headlining, connect the cable to the negative (-) attery ter ial and oe the front eat and No. 1 rear eat to the po tion hown in the ill tration.
- **for Power Seat:**
  After o in the eat , di connect the cable fro the negative (-) attery ter ial.

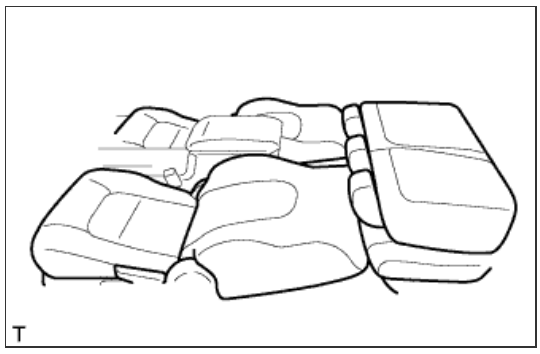

a. Place the headlining in the cabin from the rear of the vehicle as shown in the illustration.


NOTICE:

Be careful not to damage the roof headlining when placing it in the cabin.




b. for 3 Person Seat no Rear No. 2 Seat:


b. for 3 Person Seat Type Rear No. 2 Seat:
Attach the 2 guides, 12 claws and 2 clips to install the headlining.

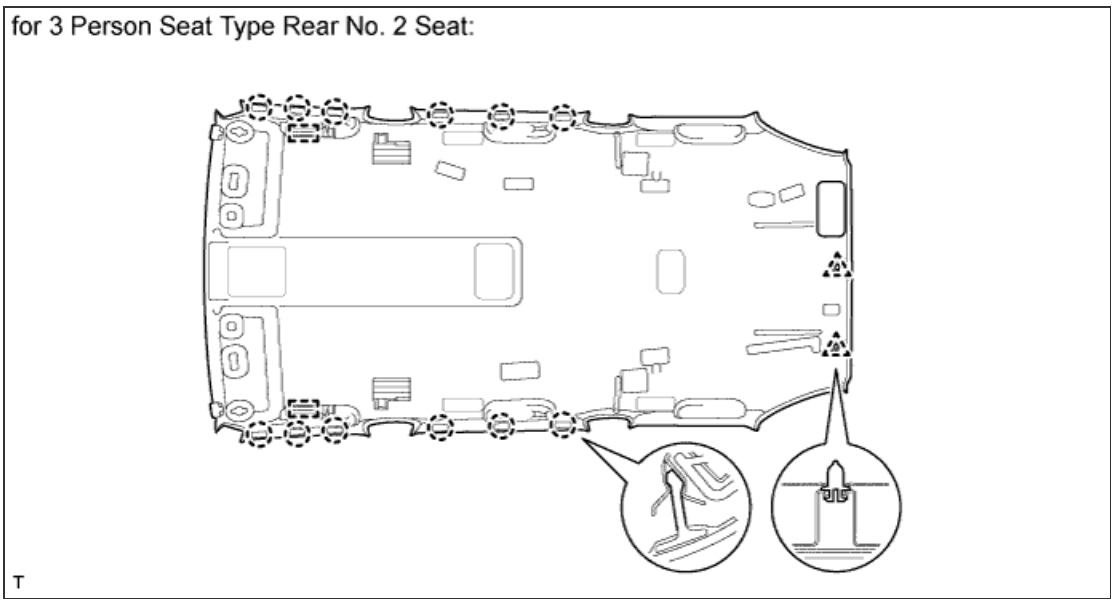


c. except 3 Person Seat Type Rear No. 2 Seat:
Attach the 2 guides, 12 claws and 3 clips to install the headlining.

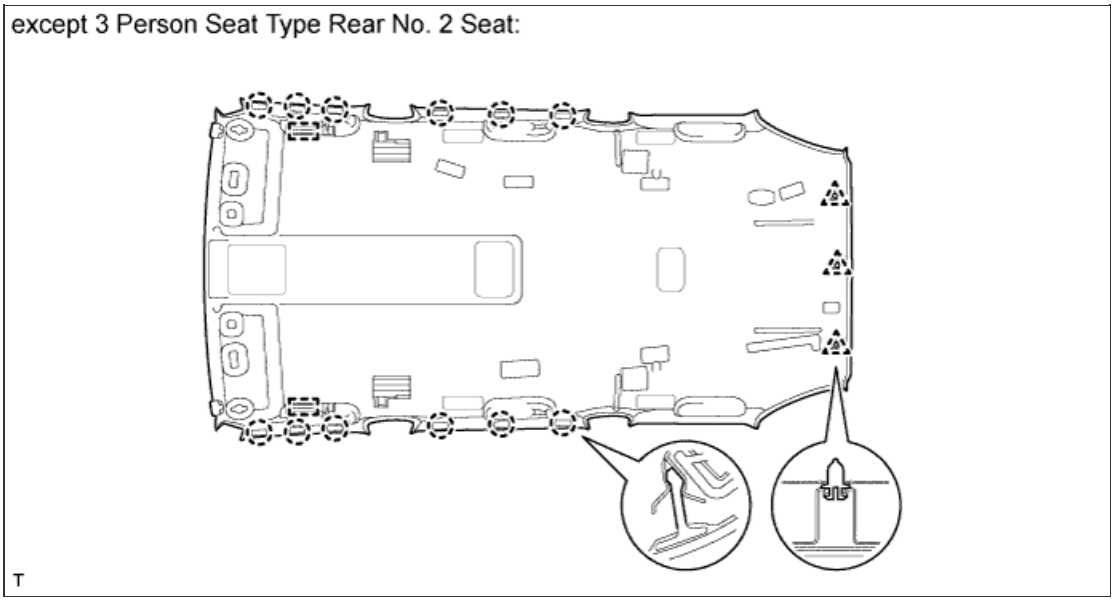

d. w/ Rear Wiper:
Connect the washer hose.

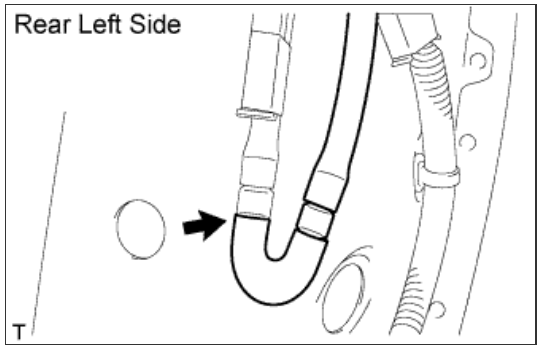


e. Connect the antenna cord connector.

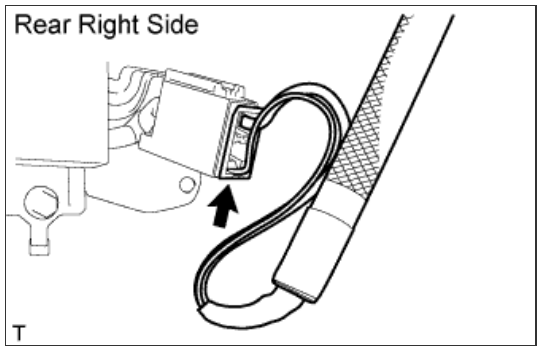


f. Connect the antenna cord connector and attach the 2 clamps.

g. Install the bolt.

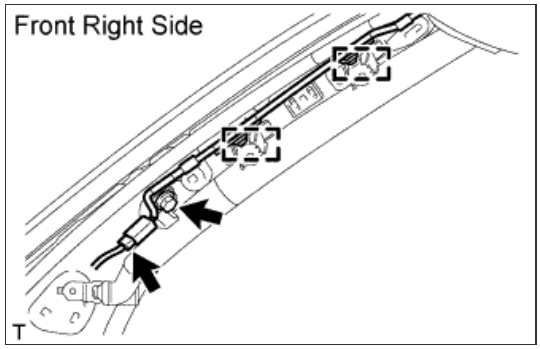


h. Connect the 3 roof wire connectors and 4 clamps.


i. w/ Rear Wiper:
Connect the washer hose.

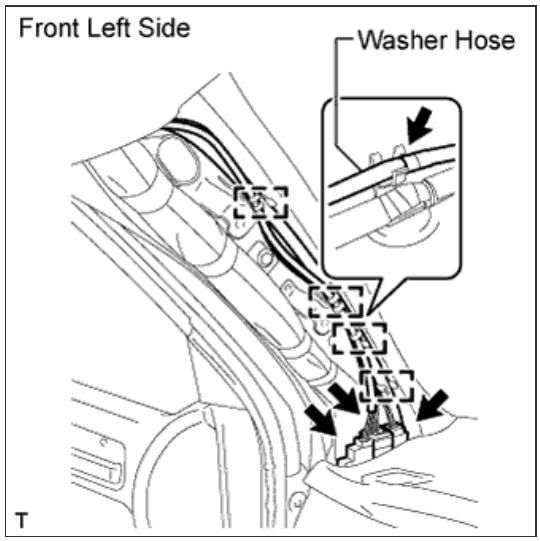

. w/ Rain Sensor:
Connect the rain sensor connector.

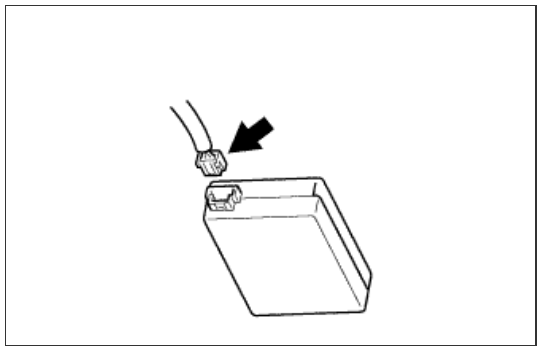


k. w/ C Mirror:
Connect the inner mirror connector.

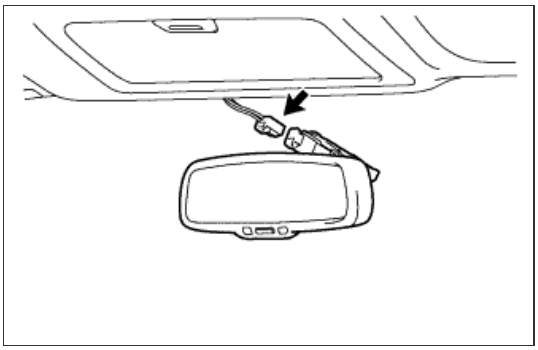

41. INSTALL FRONT ROOF SIDE RAIL GARNISH LH

a. Install 3 new clips to the roof side rail garnish.

. Attach the 3 clips to install the roof side rail garnish.

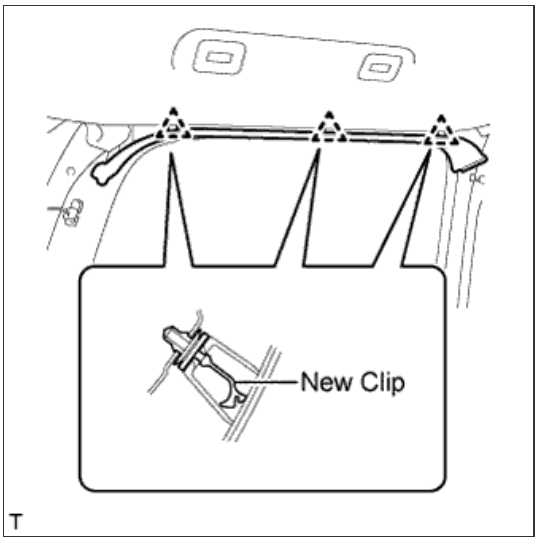

42. INSTALL FRONT ROOF SIDE RAIL GARNISH RH

HINT:

Use the same procedures described for the LH side.


43. INSTALL 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the 3rd seat assist grip on the other side.

a. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.

b. Install the assist grip.

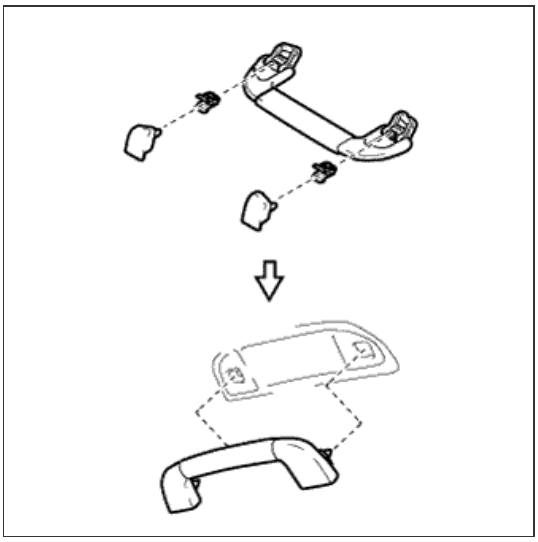


44. INSTALL NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat, except ace to ace Seat pe or w/o Rear No. 2 Seat:
Install the No. 2 assist grip assembl .

i. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.


ii. Install the assist grip.

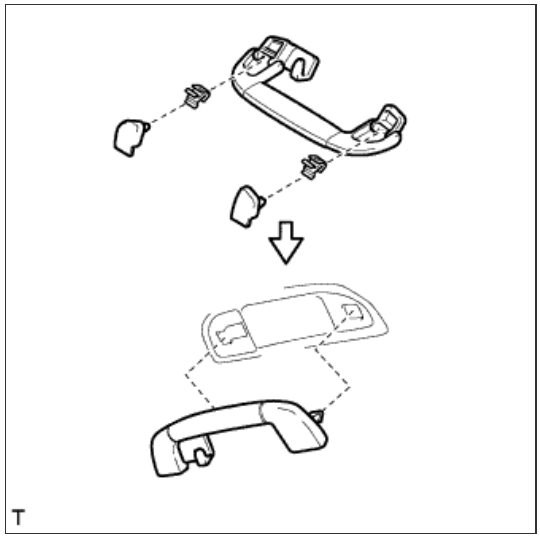

. w/ Rear No. 2 Seat, for ace to ace Seat pe:
Install the No. 2 assist grip assembl .

i. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.

ii. Install the assist grip.

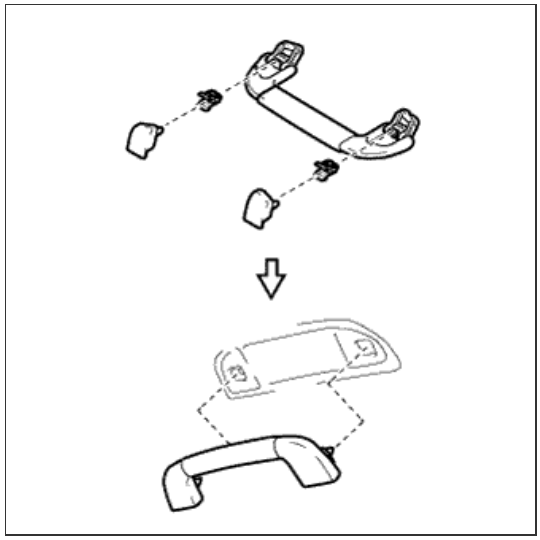

45. INSTALL NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


46. INSTALL ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to install the assist grip on the other side.


a. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.

b. Install the assist grip.

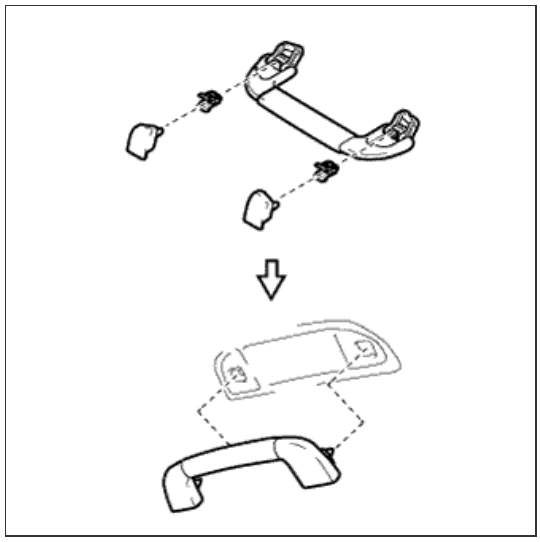


47. INSTALL SEAT BELT ANCHOR COVER (for 3 Per on Seat Type Rear No. 2 Seat)

a. Attach the 4 guides and 4 clips to install the seat belt anchor cover.

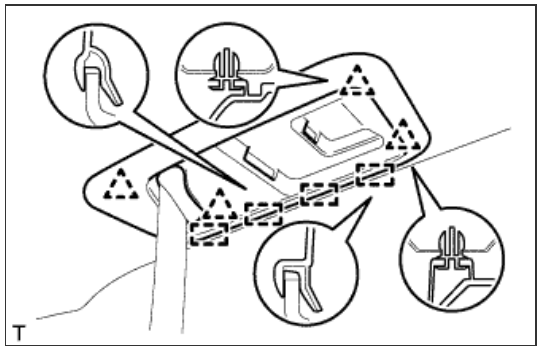

48. INSTALL RAIN SENSOR COVER (w/ Rain Sen o)


a. Push in the stopper in the direction of the arrow labeled (1) to install the rain sensor cover.

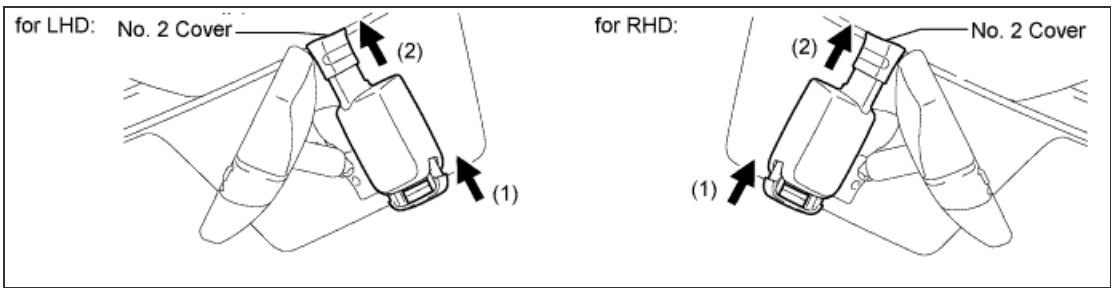

. Slide the No. 2 cover in the direction of the arrow labeled (2) to fix it in place.


49. INSTALL INNER REAR VIE MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Attach the 2 claws to install the cover.

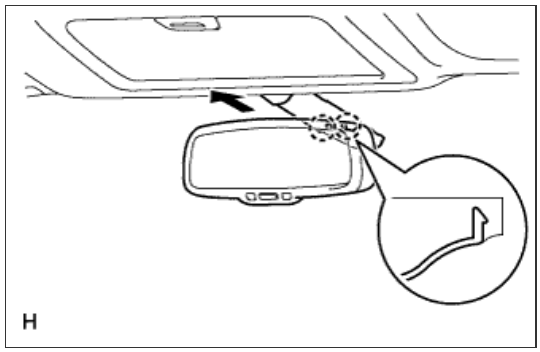

50. INSTALL CENTER VISOR ASSEMBLY LH (w/ S Vi o)

a. Attach the 2 clips to install the center visor.

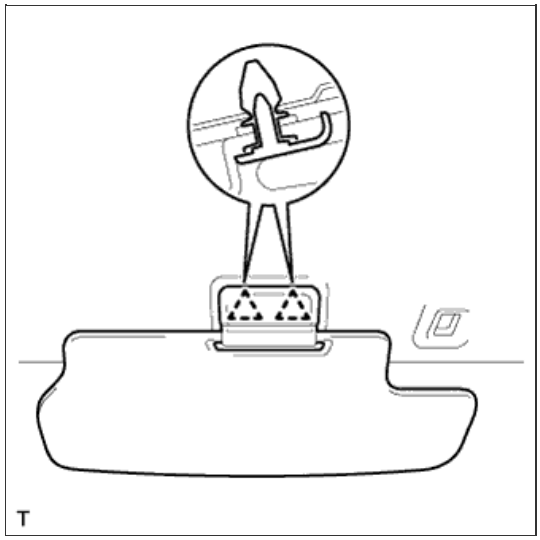

51. INSTALL CENTER VISOR ASSEMBLY RH (w/ S Vi o)

HINT:

Use the same procedures described for the LH side.


52. INSTALL VISOR HOLDER

HINT:

Use the same procedures to install the visor holder on the other side.


a. Attach the 2 claws.

b. Push the visor holder in to install it.

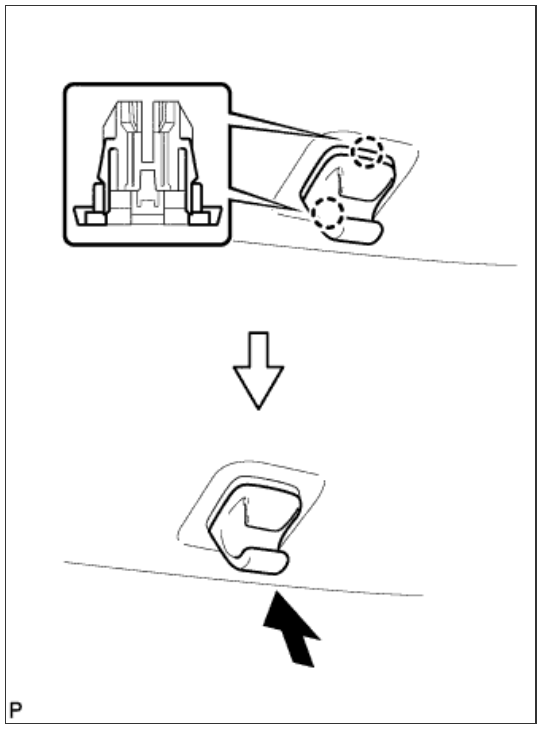

53. INSTALL VISOR ASSEMBLY LH

a. Install the visor with the 2 screws.

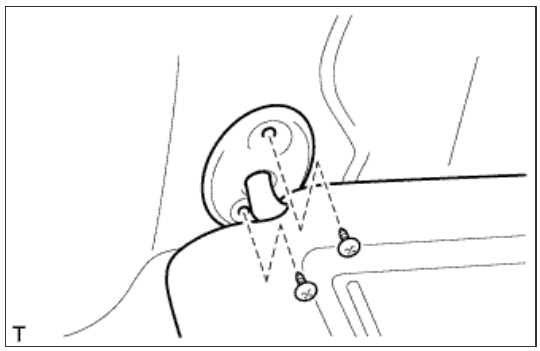

54. INSTALL VISOR ASSEMBLY RH

HINT:


Use the same procedures described for the LH side.

55. INSTALL VISOR BRACKET COVER

HINT:


Use the same procedure to install the visor bracket cover on the other side.

a. Attach the 4 claws to install the visor bracket cover.

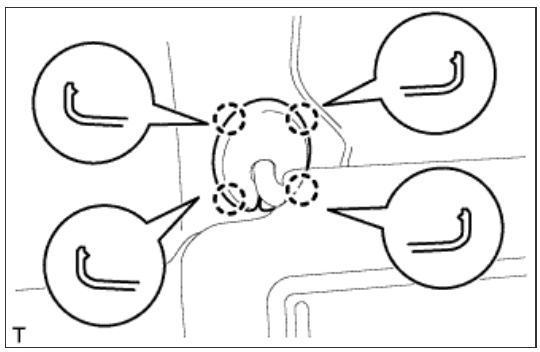


56. INSTALL NO. 2 ROOM LIGHT ASSEMBLY


a. Install the 2 covers.

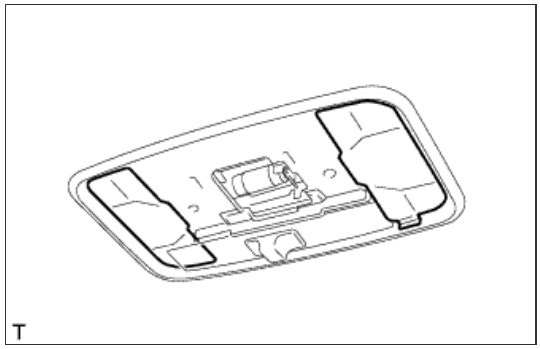


. Attach the 4 claws to install the room light lens.

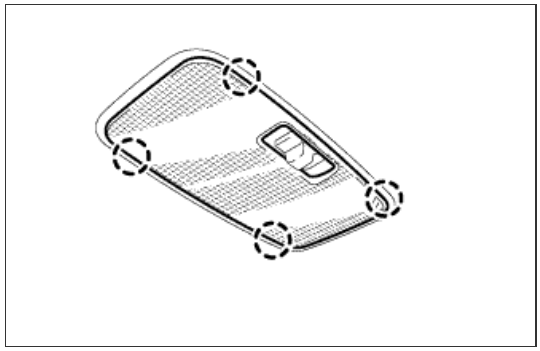

c. Attach the 4 claws to install the room light to the room light switch base.

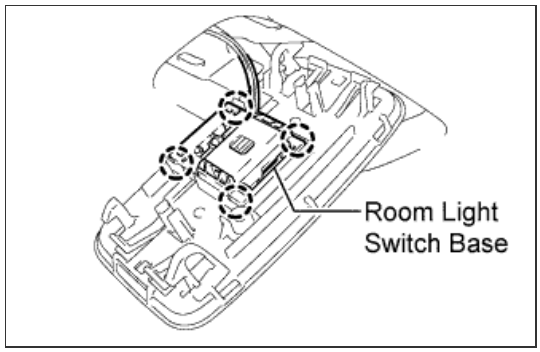


d. Attach the 4 claws to install the room light.

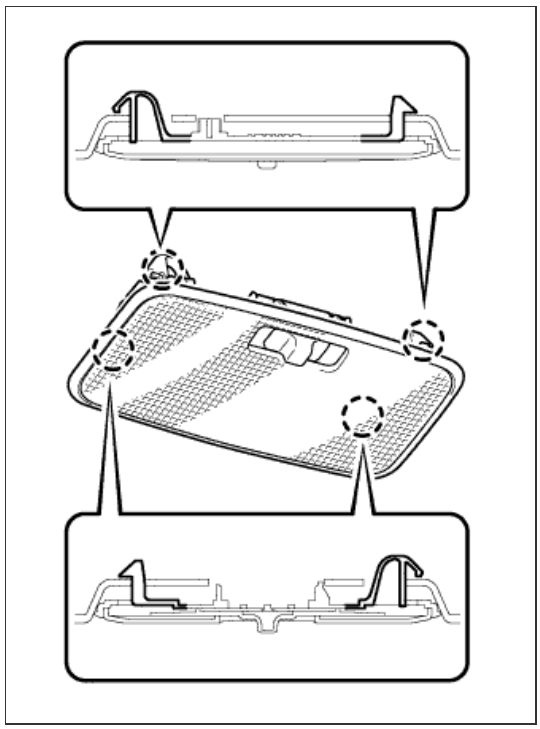

57. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

a. w/ Map Light:
Install the No. 1 room light assembl .

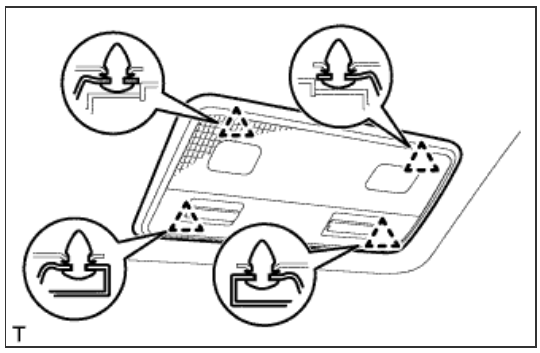


i. Connect the connector.


ii. Attach the 4 clips to install the room light.

. w/o Map Light:
Install the No. 1 room light assembl .


i. Install the 2 covers.

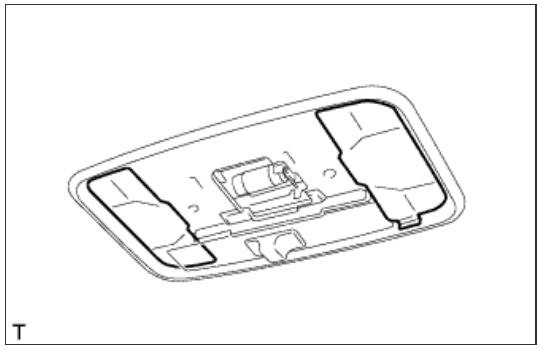


ii. Attach the 4 claws to install the room light lens.

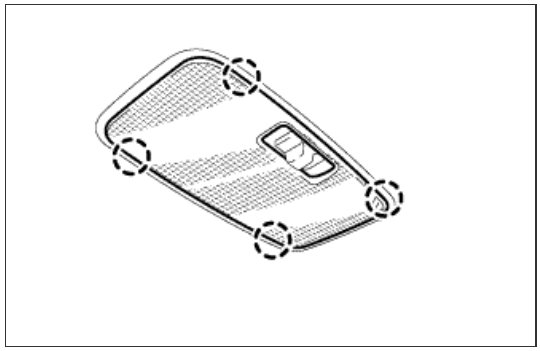

iii. Attach the 4 claws to install the room light to the room light switch base.

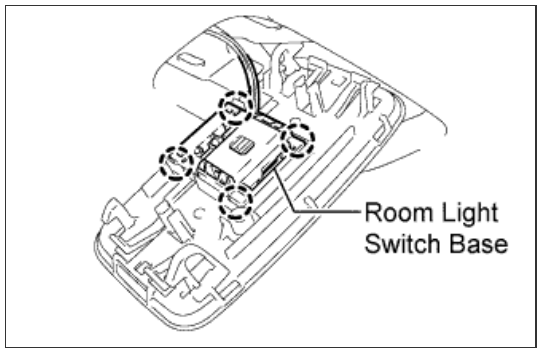

iv. Attach the 4 claws to install the room light.

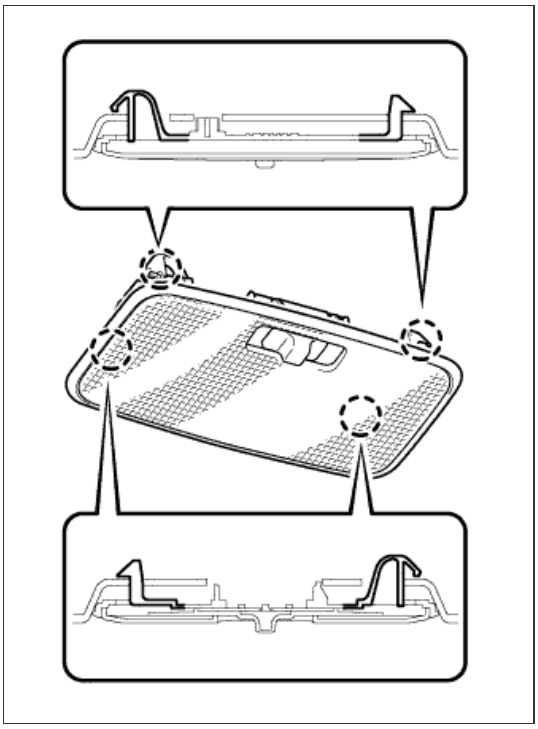


58. INSTALL MAP LIGHT ASSEMBLY (w/ Map Light)

a. Connect the connector.

b. Attach the 2 clips and 2 guides to install the map light.


c. Install the 2 screws.

d. Attach the 2 claws to close the 2 covers.

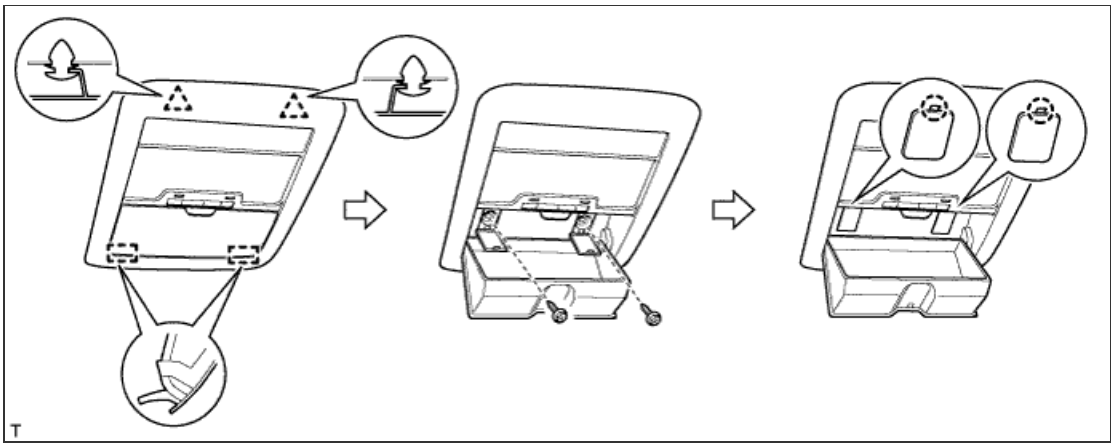


59. INSTALL REAR UPPER PILLAR GARNISH LH

a. Attach the 5 clips to install the rear upper pillar garnish.

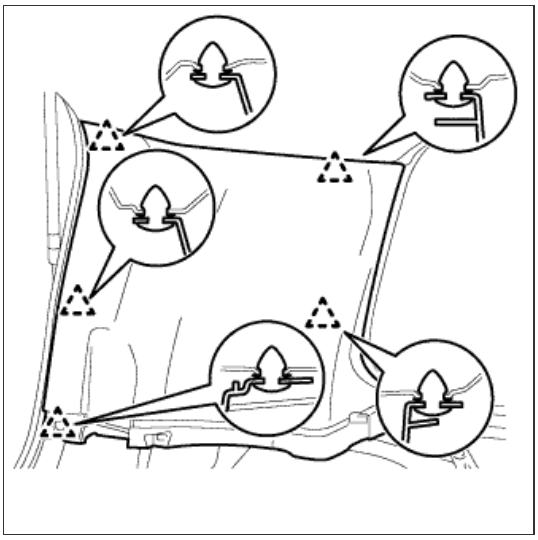


. w/ Rear No. 2 Seat, except ace to ace Seat pe:

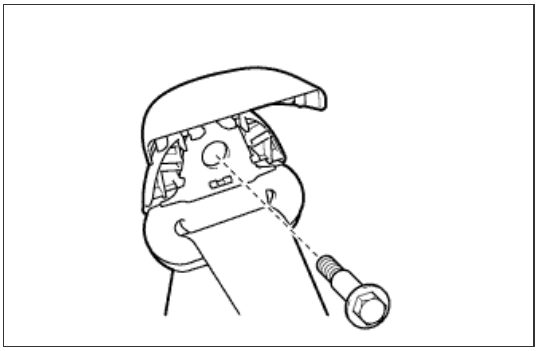

i. Install the seat belt shoulder anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

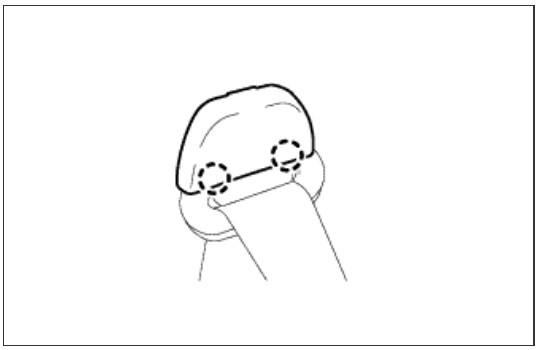

ii. Attach the 2 claws to close the seat belt shoulder anchor cover.

60. INSTALL REAR UPPER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

61. INSTALL REAR FRONT QUARTER TRIM GARNISH LH

a. Pass the seat belt anchor through the quarter trim garnish.

. Attach the clip and 2 guides to install the quarter trim garnish.

c. Install the screw.

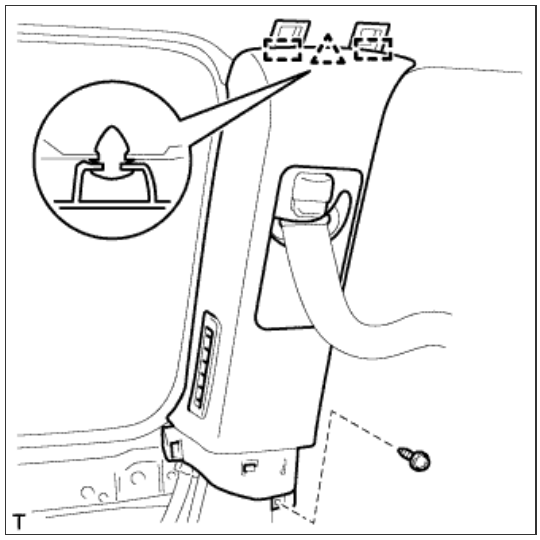

62. INSTALL REAR FRONT QUARTER TRIM GARNISH RH


HINT:

Use the same procedures described for the LH side.

63. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

When installing the front quarter trim panel, operate the reclining ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

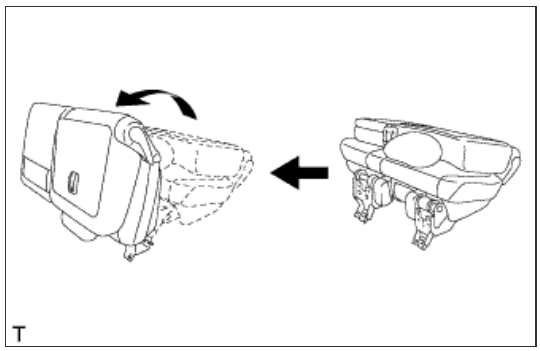

a. w/ Rear No. 2 Seat, except ace to ace Seat pe:


i. w/o Rear Air Conditioning S stem:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning S stem:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Tor e:
12 N 122 kgf c , 9 ft.*l f

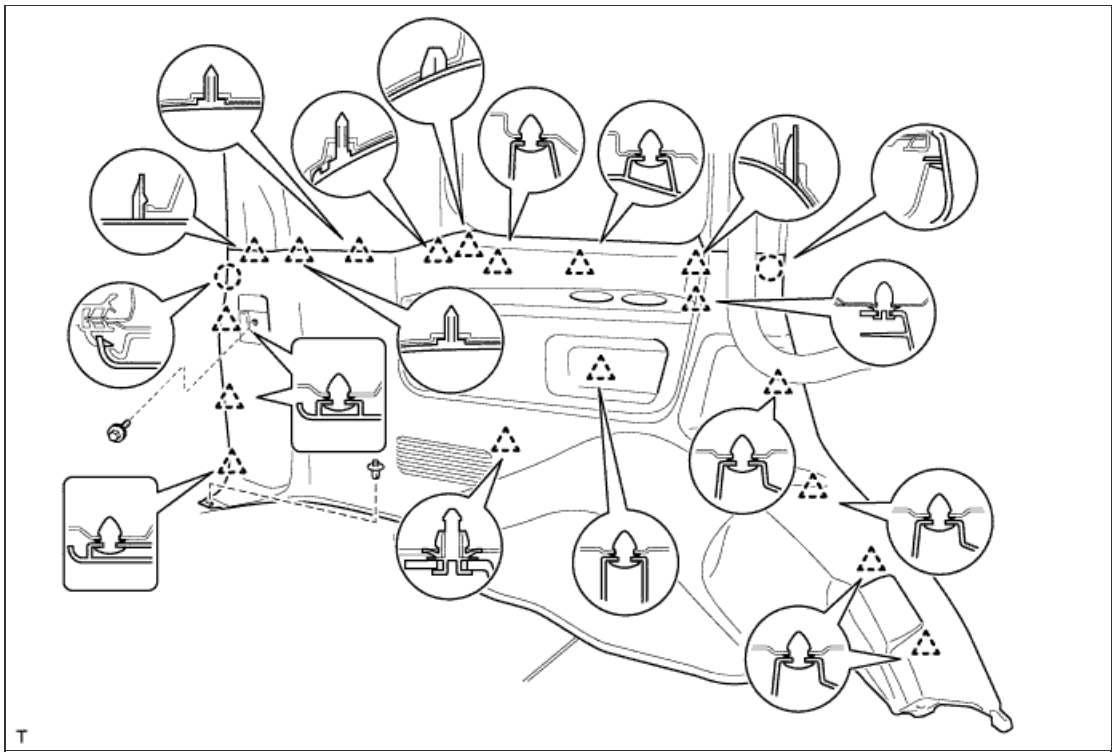

. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for ace to ace Seat pe:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

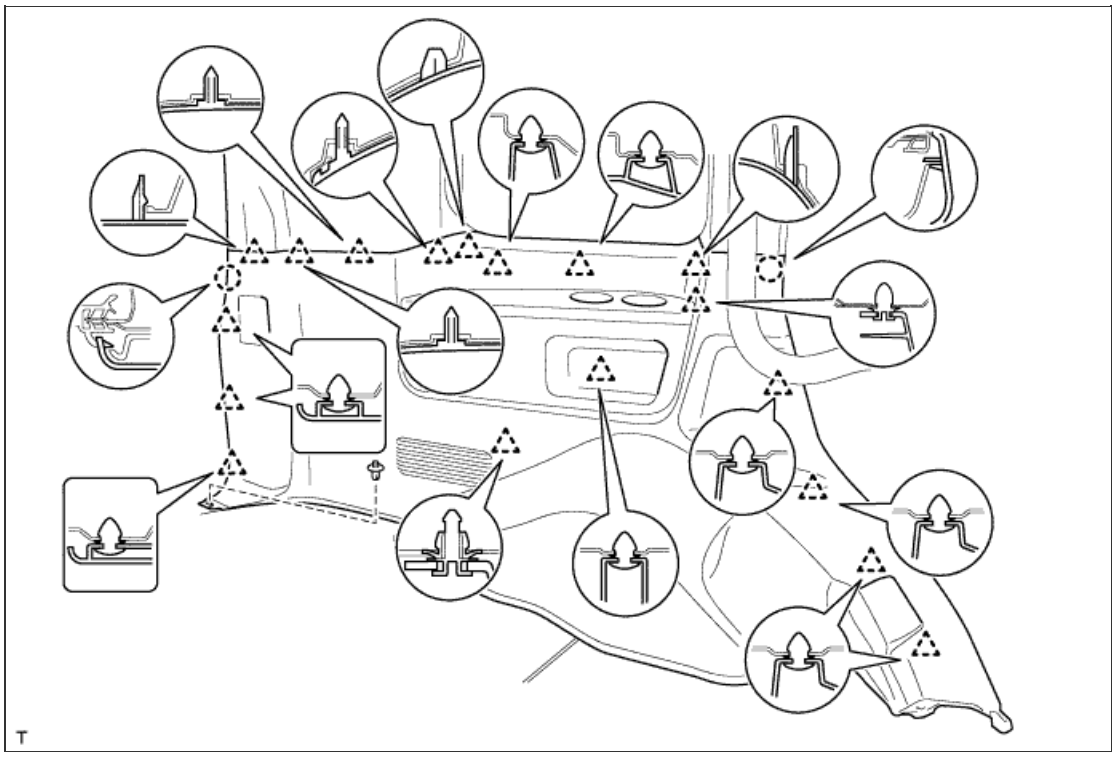

c. w/ onneau Cover:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the screw and clip.

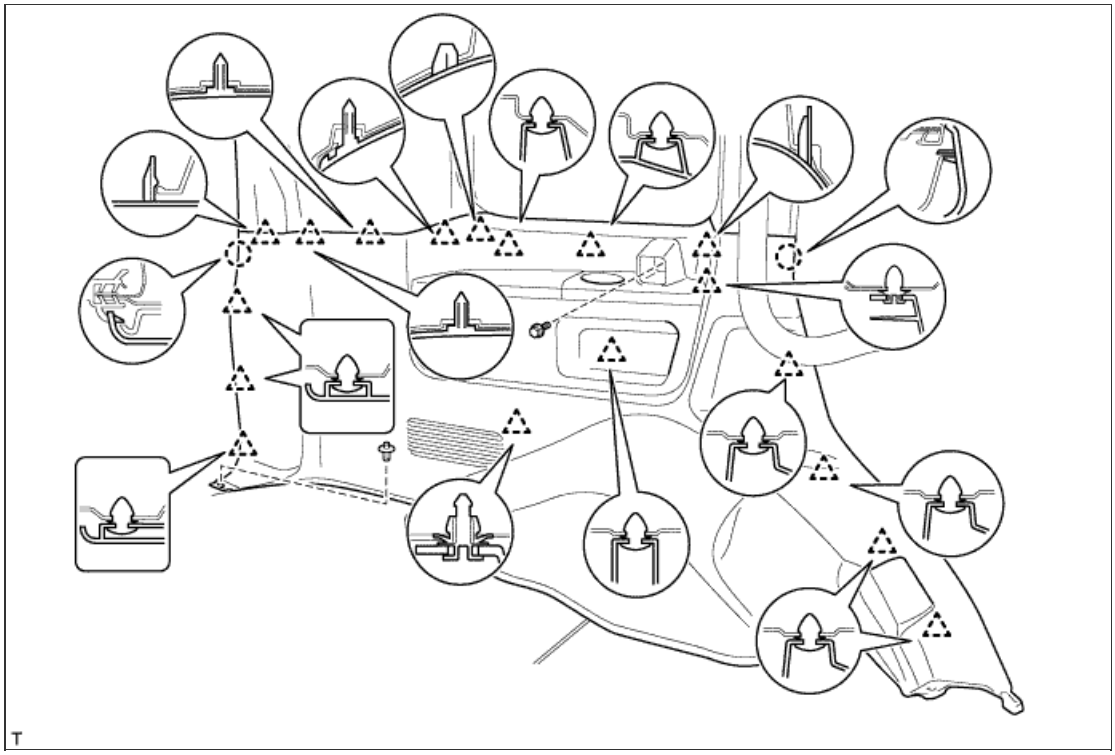


d. w/ Rear No. 2 Seat, except ace to ace Seat pe:
Install the rear No. 2 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f


NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle bod .

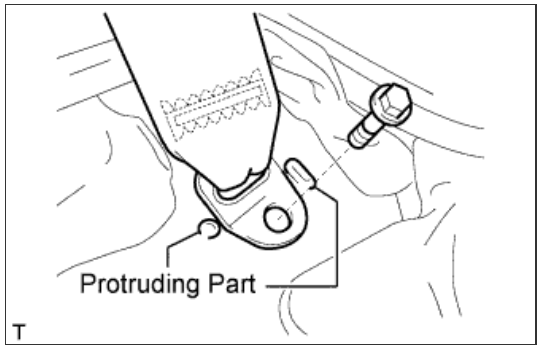


e. Install the rear No. 1 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

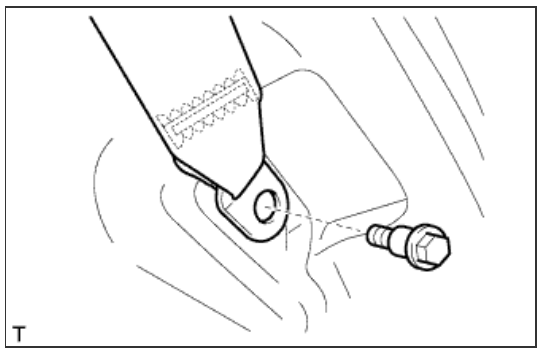


f. Attach the 3 claws to install the cover.

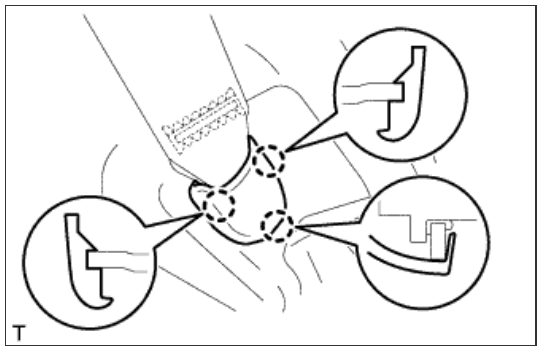

64. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:

When installing the front quarter trim panel, operate the reclining ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

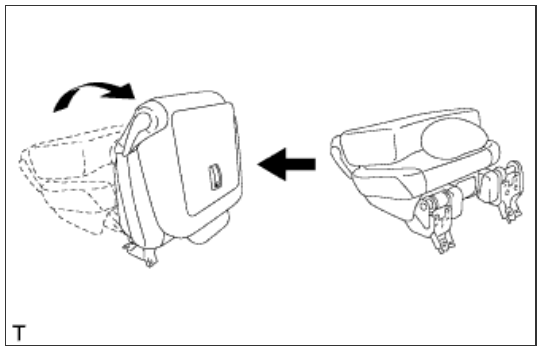

a. w/ Rear No. 2 Seat, except ace to ace Seat pe:


i. w/o Rear Air Conditioning S stem:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning S stem:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 16 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Tor e:
12 N 122 kgf c , 9 ft.*l f

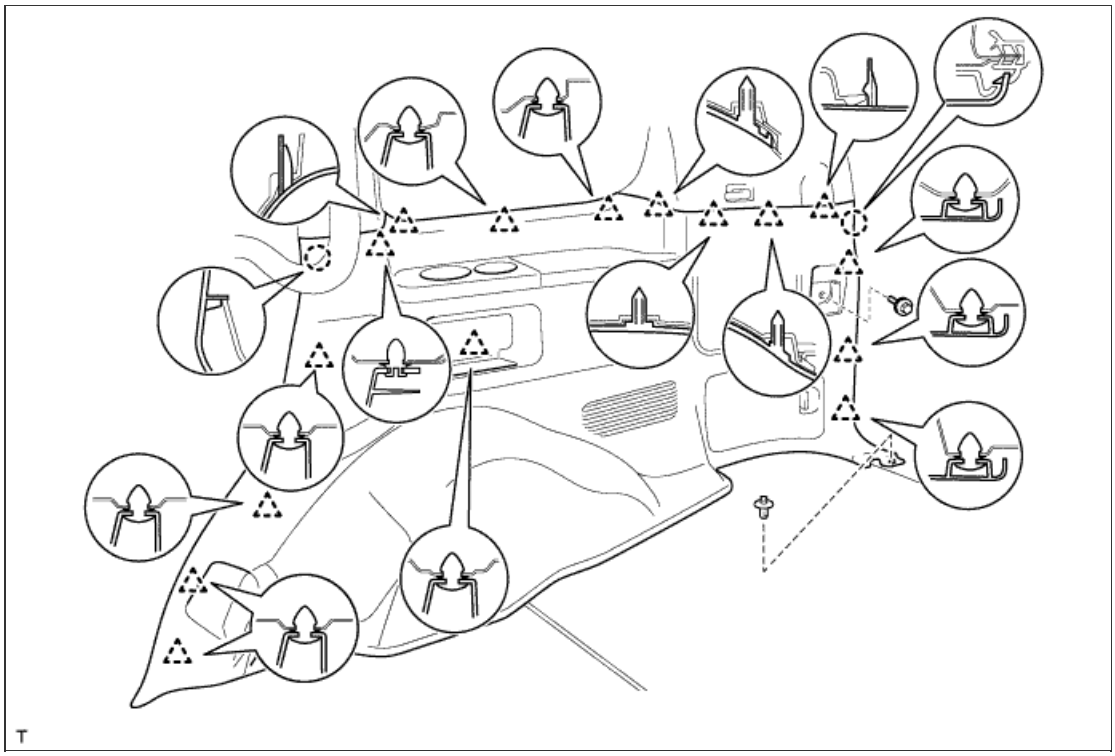

. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for ace to ace Seat pe:

i. Attach the 16 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

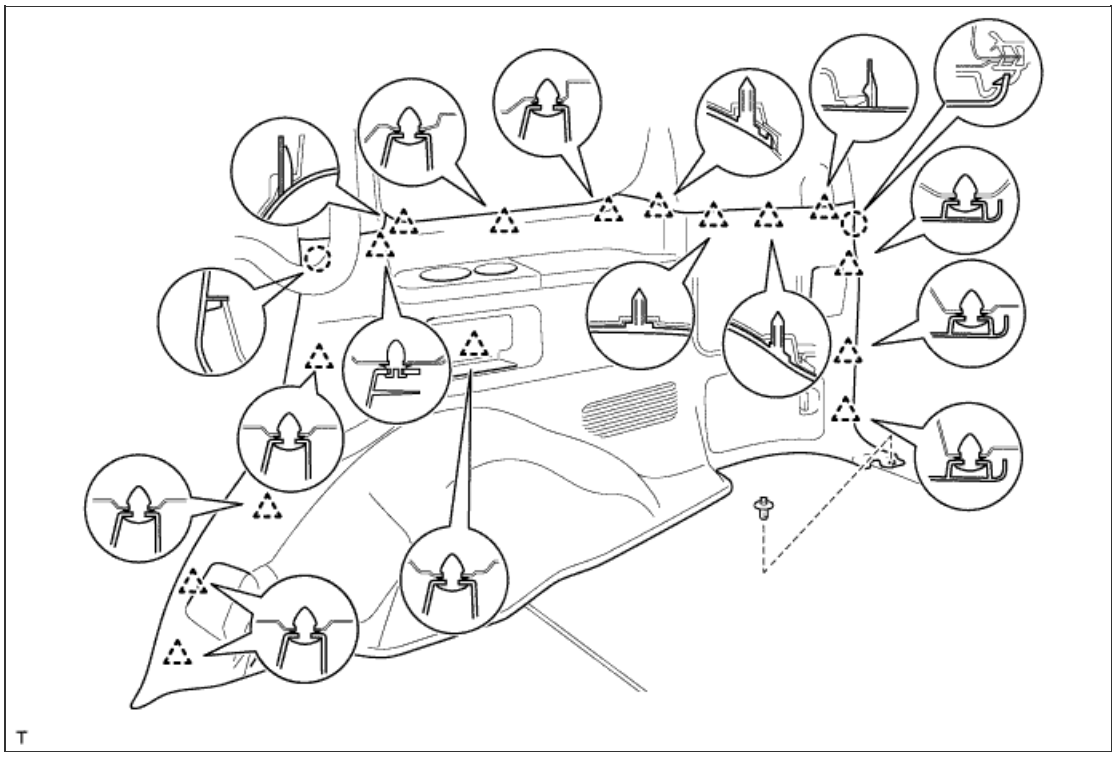

c. w/ onneau Cover:

i. Attach the 16 clips and 2 claws to install the quarter trim panel.


ii. Install the screw and clip.

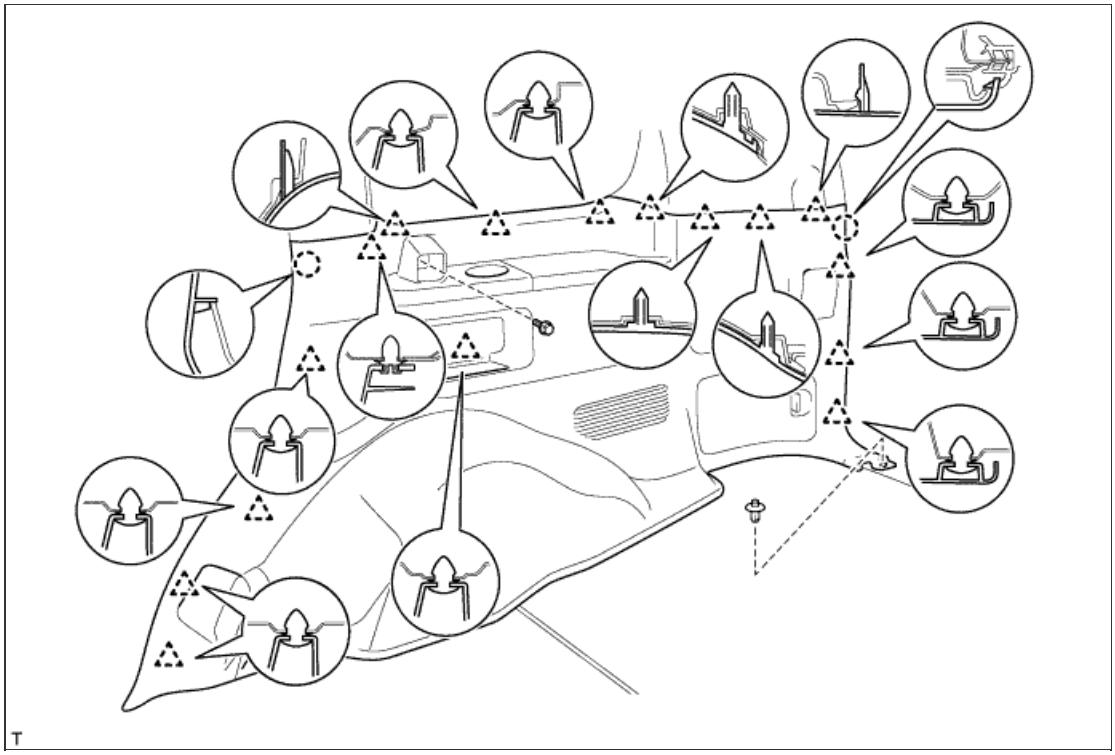


d. w/ Rear No. 2 Seat, except ace to ace Seat pe:

i. Install the rear No. 2 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

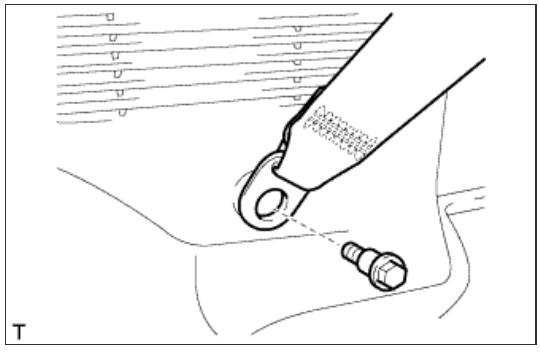


ii. Attach the 3 claws to install the cover.

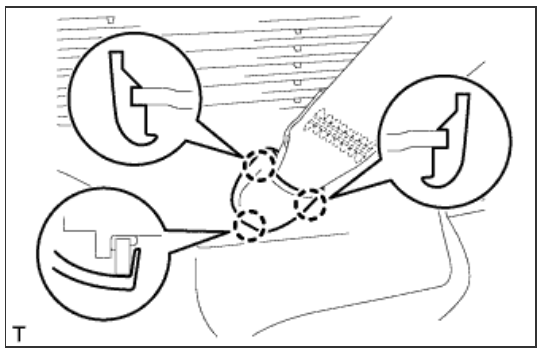


e. Install the rear No. 1 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

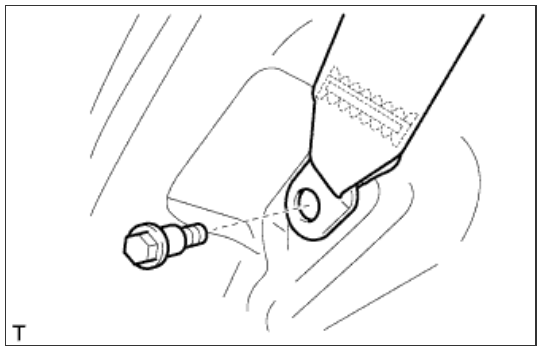

f. Attach the 3 claws to install the cover.

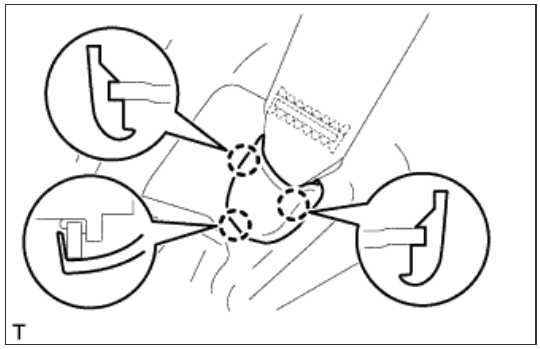


65. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

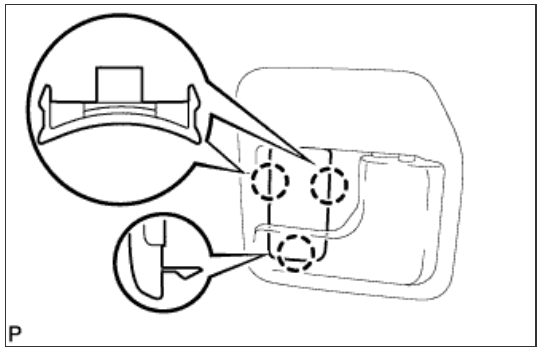


66. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonnea Cover)

HINT:

Use the same procedure to install the tonneau cover holder cap on the other side.

a. Attach the 2 claws to install the tonneau cover holder cap.

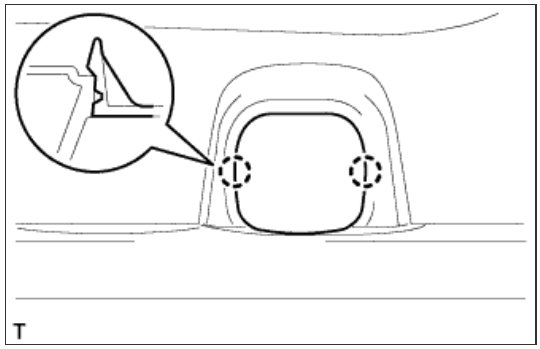


67. INSTALL CENTER PILLAR GARNISH LH

a. Pass the seat belt anchor through the center pillar garnish.

. Attach the 2 clips and 2 guides to install the center pillar garnish.

c. Install the bolt.

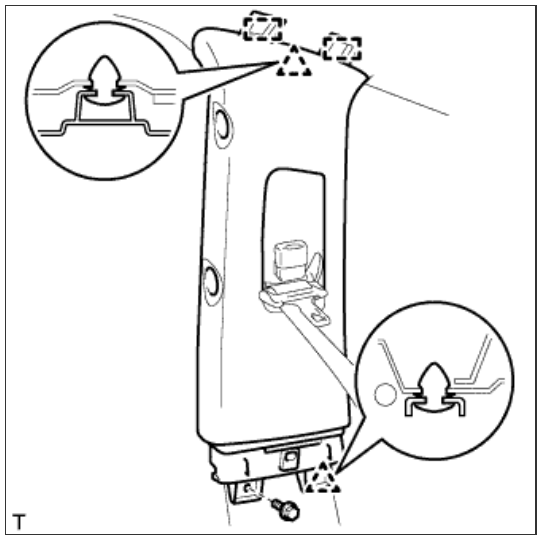

68. INSTALL CENTER PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

69. INSTALL REAR ASSIST GRIP ASSEMBLY


HINT:

Use the same procedure to install the rear assist grip on the other side.

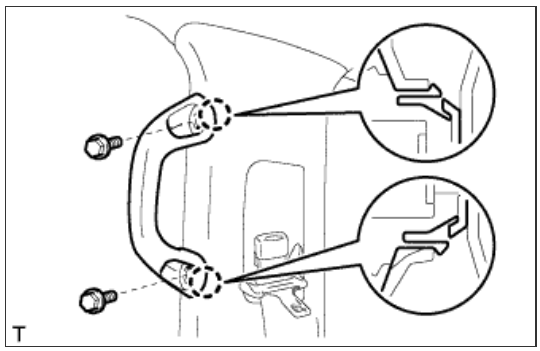

a. Attach the 2 claws to install the rear assist grip.

b. Install the 2 bolts.

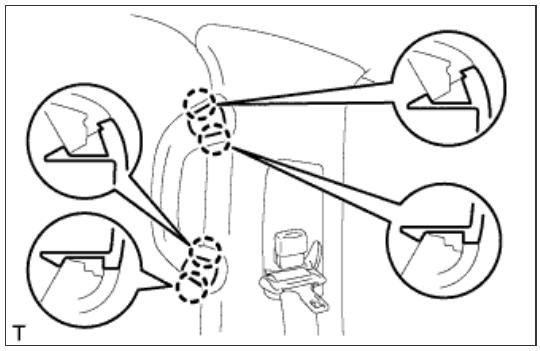


c. Attach the 4 claws to install the 2 assist grip plugs.

70. INSTALL CENTER LO EPILLAR GARNISH LH

HINT:


- **for Man al Seat:**
  hen in talling the center lower pillar garni h, oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  hen in talling the center lower pillar garni h, connect the cable to the negative (-) attery ter inal and operate the power eat wi ch to oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  After o in the front eat, di connect the cable fro the negative (-) attery ter inal.

a. Attach the 2 claws and 7 clips to install the center lower pillar garnish.

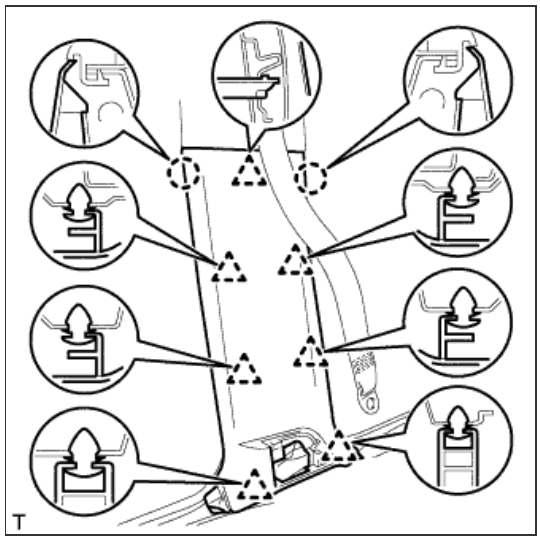

. Install the seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

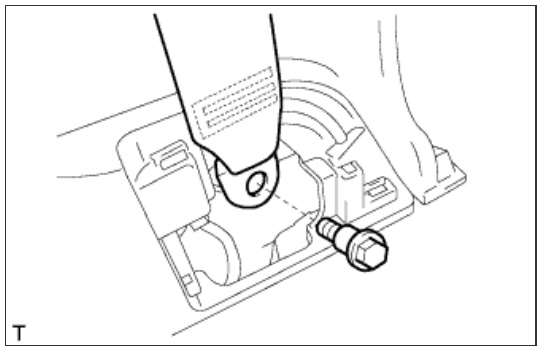

71. INSTALL CENTER LO ERPILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

72. INSTALL CENTER PILLAR GARNISH COVER LH

HINT:

- **for Man al Seat:**
  hen in talling the center pillar garni h cover, oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  hen in talling the center pillar garni h cover, connect the cable to the negative (-) attery ter ial and operate the power eat wtch to oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  After o in the front eat, di connect the cable fro the negative (-) attery ter ial.

a. Attach the 2 clips and 2 guides to install the cover.

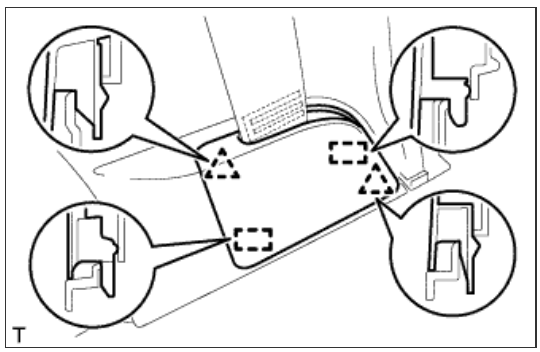

73. INSTALL CENTER PILLAR GARNISH COVER RH


HINT:

Use the same procedures described for the LH side.

74. INSTALL FRONT PILLAR GARNISH LH

a. for 9, 14 Speakers:
Connect the speaker connector.

. Attach the clip and 3 guides to install the front pillar garnish.

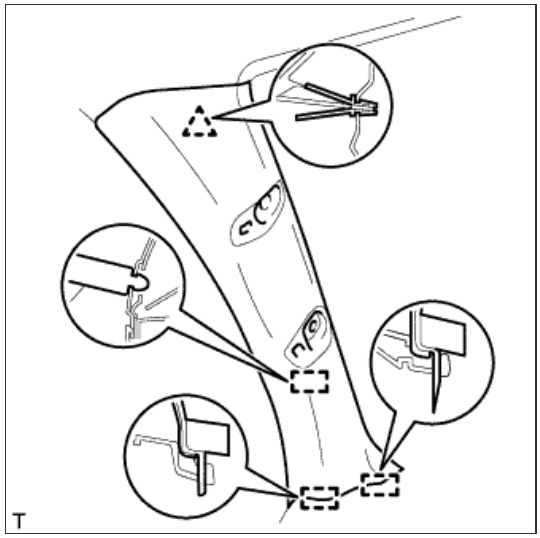

75. INSTALL FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.


76. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY

HINT:


Use the same procedure to install the front assist grip on the other side.

a. Attach the 2 claws to install the front assist grip.

b. Install the 2 bolts.

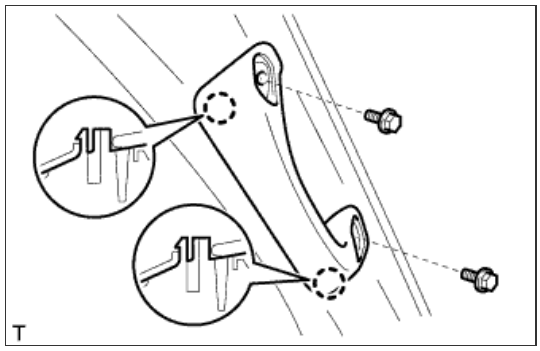


c. Attach the 4 claws to install the 2 assist grip plugs.

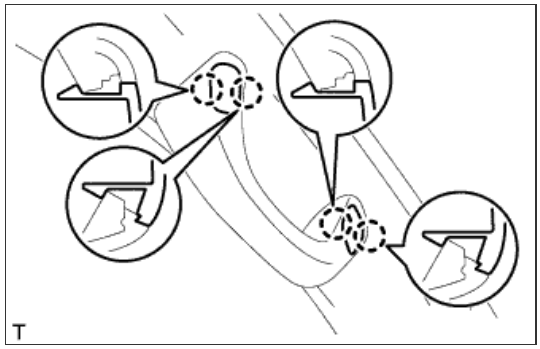

77. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE


a. Attach the 6 clips to install the support plate.

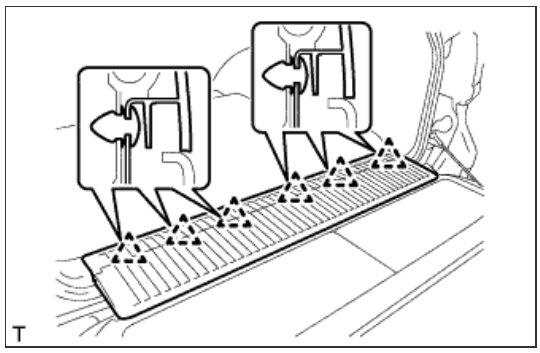

78. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

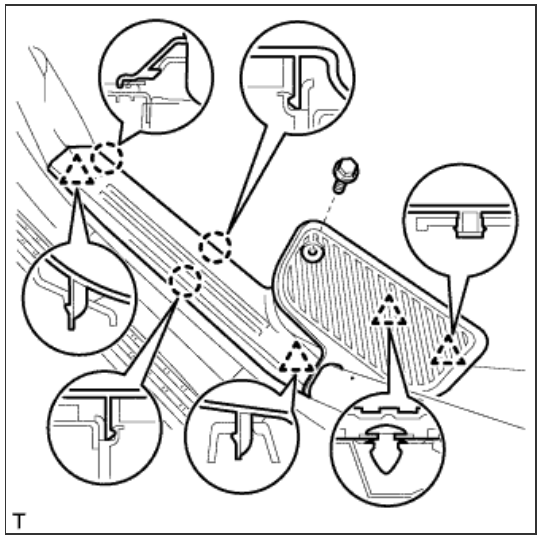

79. INSTALL REAR DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

80. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

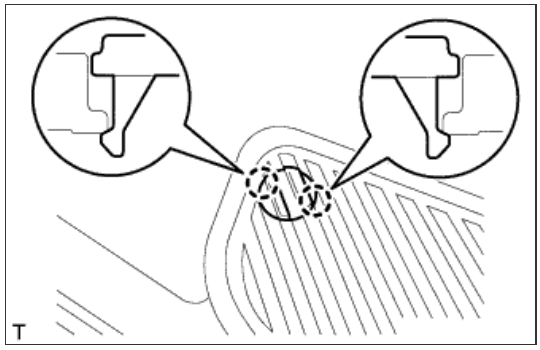

81. INSTALL FRONT DOOR SCUFF PLATE LH

a. Attach the 7 claws and 4 clips to install the scuff plate.

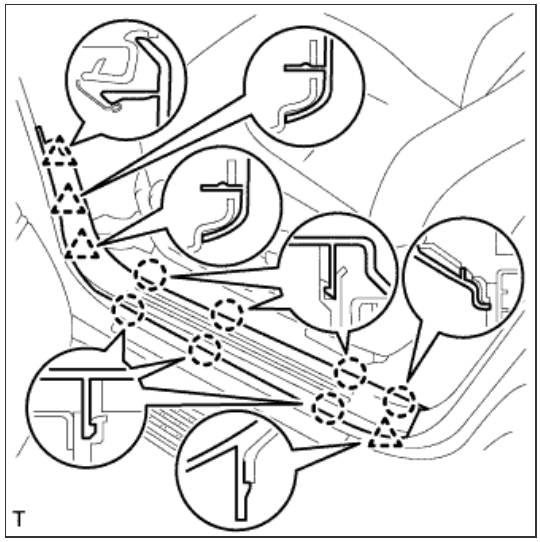

82. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

83. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

84. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

85. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

86. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

87. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonnea Cover)

a. Install the tonneau cover assembl .

88. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some s stems need to be initialized after the cable is reconnected (Click here).


for Preparation Click here

HINT:

A bolt without a torque specification is shown in the standard bolt chart (Click here).

1. INSTALL SIDE TRIM BOX

a. Install the side trim box with the 9 screws.

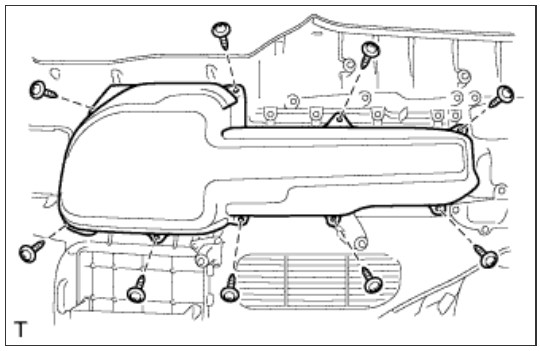

2. INSTALL SIDE TRIM BOX COVER


a. Install the side trim box cover.

3. INSTALL QUARTER TRIM LID SUB-ASSEMBLY RH

a. Install the quarter trim lid.

4. INSTALL QUARTER TRIM COVER LH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

a. Attach the 6 clips to install the quarter trim cover.

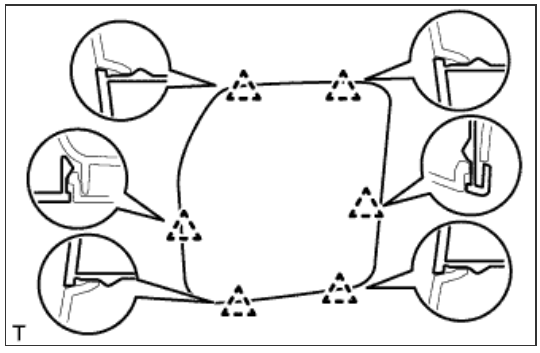


5. INSTALL QUARTER TRIM COVER RH (w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

6. INSTALL REAR NO. 2 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 6 clips to install the rear No. 2 seat cover bezel.

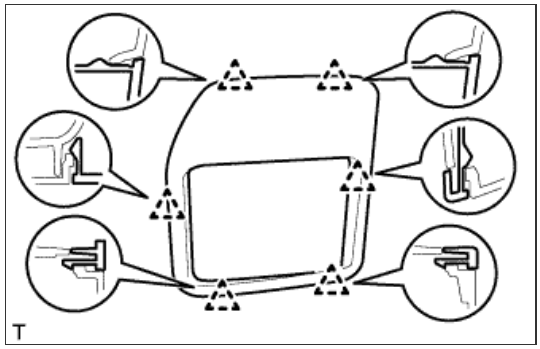

7. INSTALL REAR NO. 1 SEAT COVER BEZEL (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the rear No. 2 seat cover bezel.

8. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 4 claws to install the seat lock control lever.


9. INSTALL REAR SEAT LOCK CONTROL LEVER SUB-ASSEMBLY RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

10. INSTALL NO. 2 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

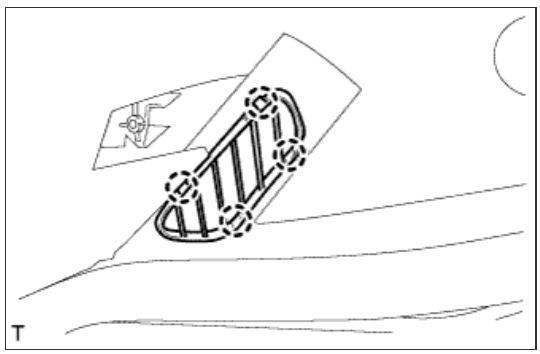


11. INSTALL NO. 2 SIDE TRIM BASE COVER RH (w/ Rear Heater)

HINT:

Use the same procedures described for the LH side.


12. INSTALL NO. 1 SIDE TRIM BASE COVER LH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

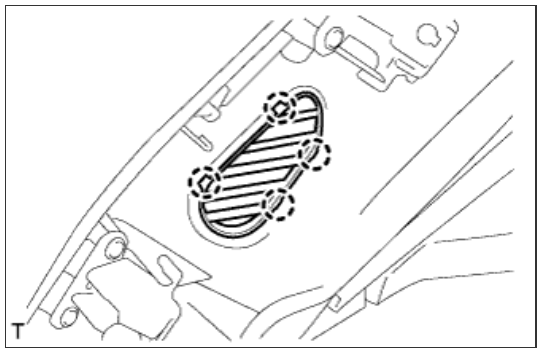


13. INSTALL NO. 1 SIDE TRIM BASE COVER RH (w/ Rear Heater)

a. Attach the 4 claws to install the cover.

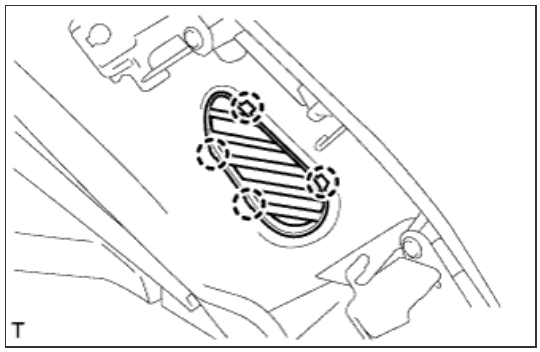


b. Install the duct with the 6 screws.

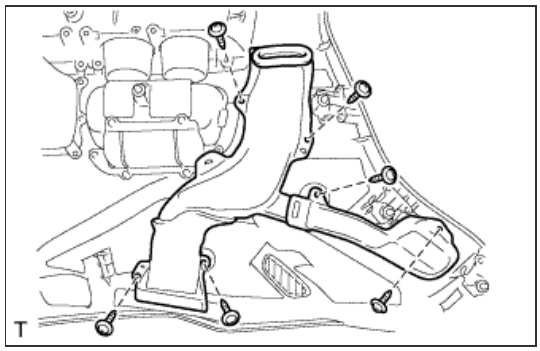

14. INSTALL TONNEAU COVER HANGER LH (w/ Tonnea Cover)

a. Install the tonneau cover hanger and rear quarter trim base with the 2 screws.

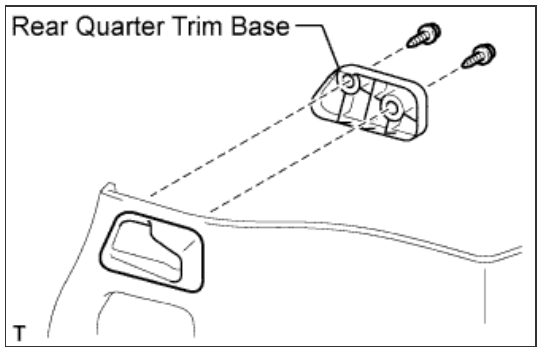

15. INSTALL TONNEAU COVER HANGER RH (w/ Tonnea Cover)


HINT:

Use the same procedures described for the LH side.

16. INSTALL TONNEAU COVER HOLDER BRACKET LH (w/ Tonnea Cover)

a. Attach the 3 claws to install the tonneau cover holder bracket.

. Install the front quarter trim base with the 3 screws and then install the remaining 5 screws.

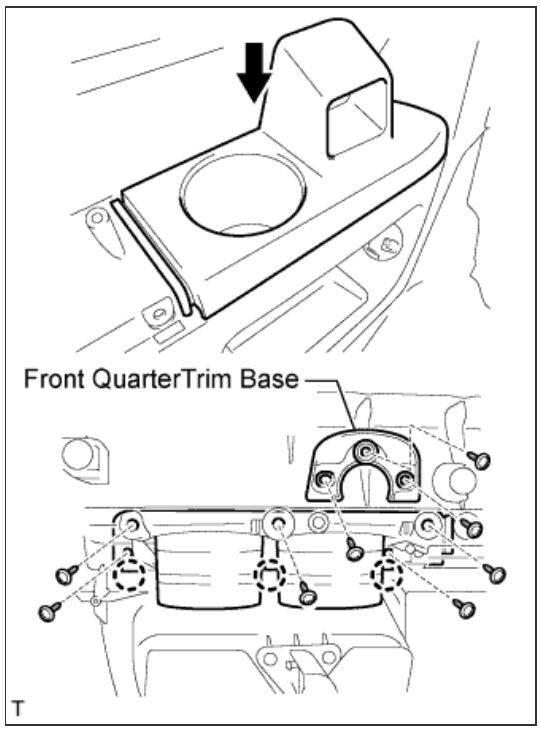

17. INSTALL TONNEAU COVER HOLDER BRACKET RH (w/ Tonnea Cover)


HINT:

Use the same procedures described for the LH side.

18. INSTALL NO. 2 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


b. Install the 5 screws.

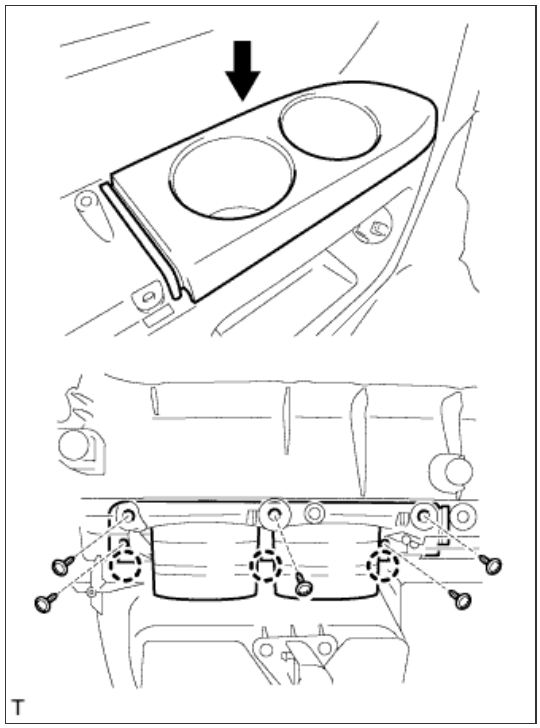

19. INSTALL NO. 1 CUP HOLDER

a. Attach the 3 claws to install the cup holder.


. Install the 5 screws.

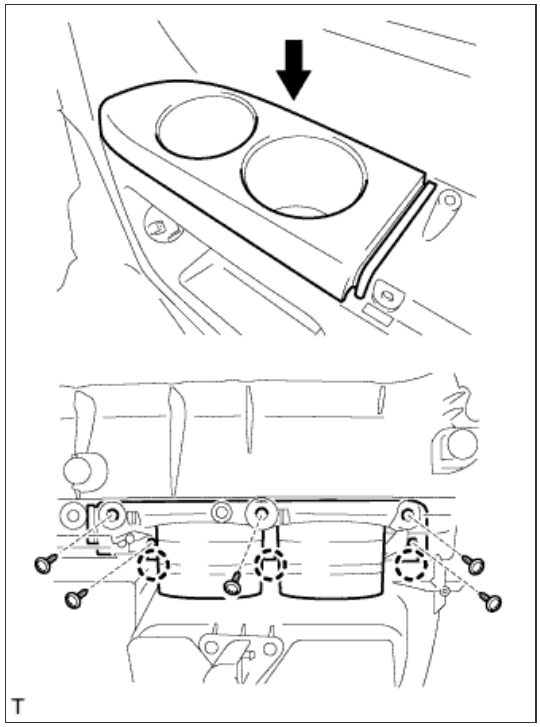


20. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY LH

a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

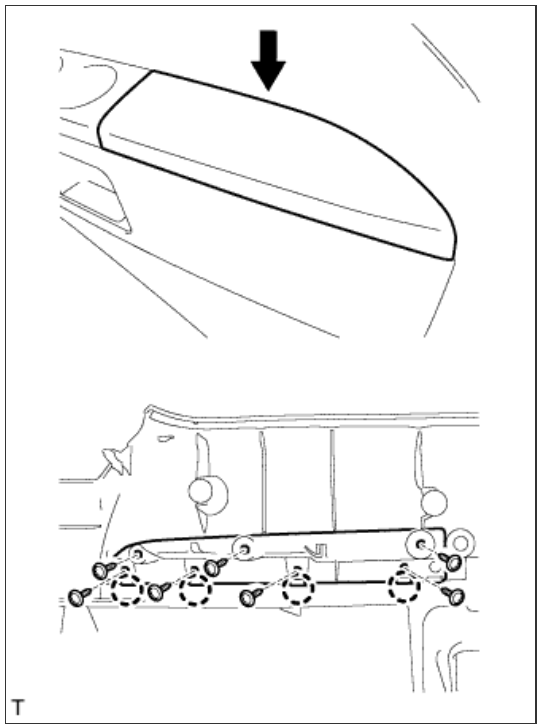


c. w/ Rear Heater:
Install the duct with the 8 screws.

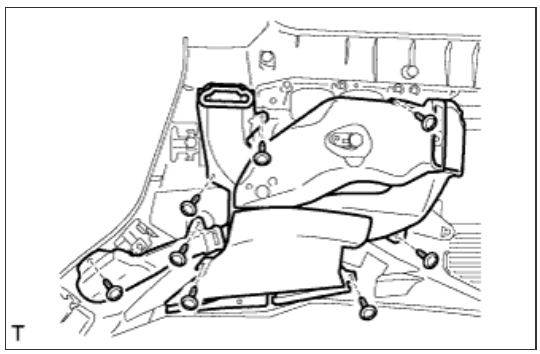

21. INSTALL QUARTER TRIM COVER SUB-ASSEMBLY RH


a. Attach the 4 claws to install the quarter trim cover.

b. Install the 7 screws.

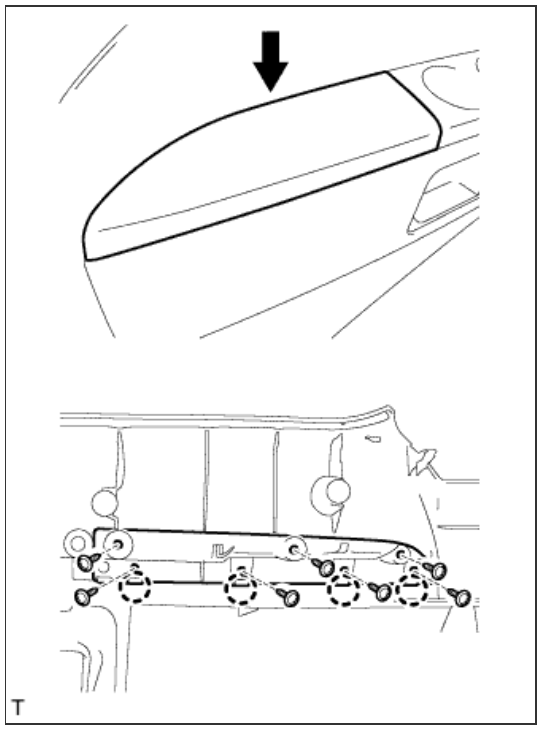

22. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER LH

a. Install the hanger with 2 new spring nuts.

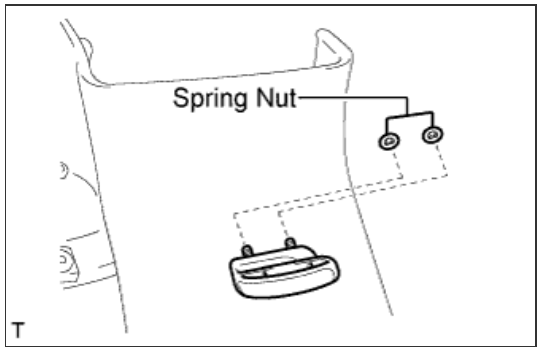

23. INSTALL REAR NO. 2 SEAT SHOULDER BELT HANGER RH

HINT:


Use the same procedures described for the LH side.

24. INSTALL REAR SEAT SHOULDER BELT HANGER (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:


Use the same procedure to install the hanger on the other side.

a. Install the hanger with 2 new spring nuts.

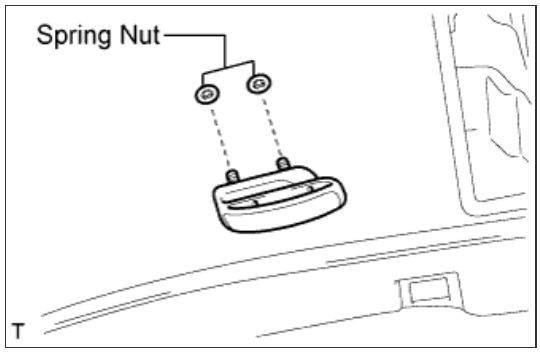

25. INSTALL ROOF SIDE INNER GARNISH COVER LH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

a. Attach the 7 claws to install the cover.

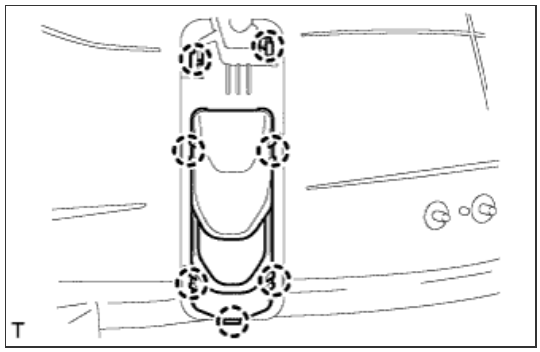


26. INSTALL ROOF SIDE INNER GARNISH COVER RH (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

27. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Attach the 6 claws to install the plate.

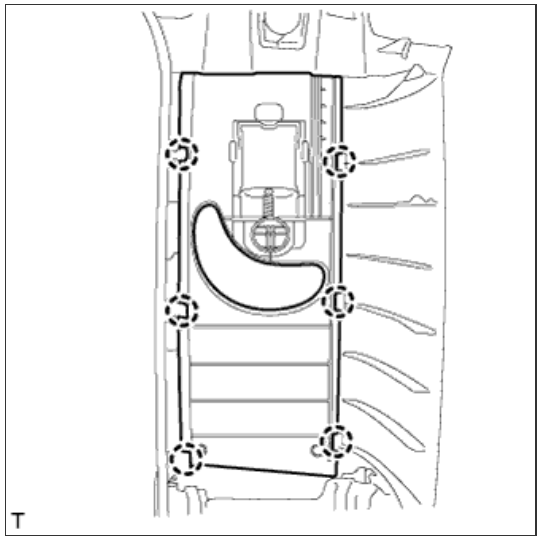


28. INSTALL REAR SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

29. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY LH

a. Slide the plate in the direction shown in the illustration and attach the 6 claws to install the plate.

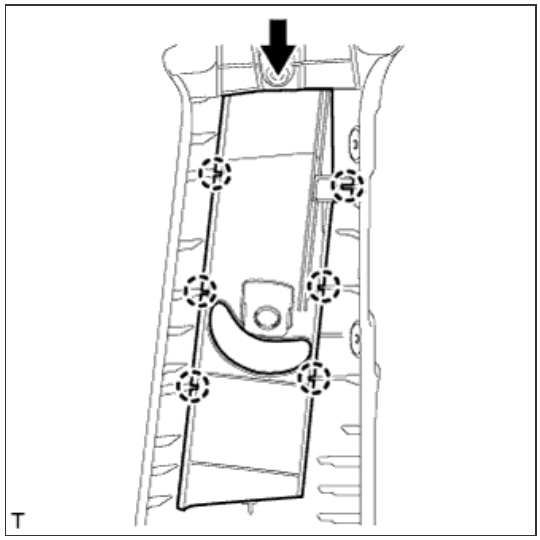


30. INSTALL FRONT SHOULDER BELT ANCHOR PLATE SUB-ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.

31. INSTALL REAR DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 3 clips to install the rear door scuff plate outside.

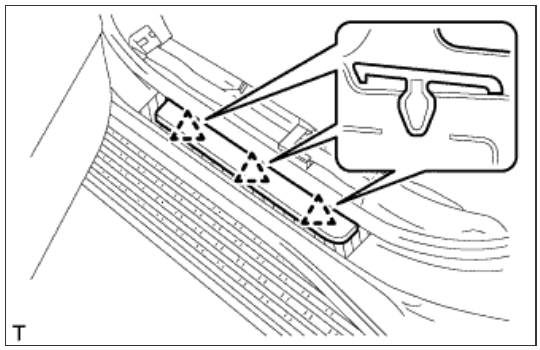


32. INSTALL REAR DOOR SCUFF PLATE OUTSIDE RH

HINT:

Use the same procedures described for the LH side.

33. INSTALL FRONT DOOR SCUFF PLATE OUTSIDE LH

a. Attach the 4 clips to install the front door scuff plate outside.

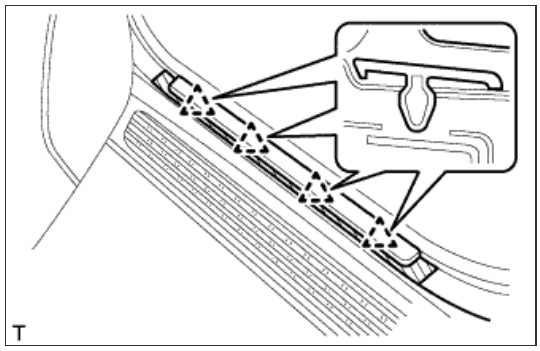


34. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.


35. INSTALL BACK DOOR EATHERSTRIP

a. Install the back door weatherstrip as shown in the illustration.

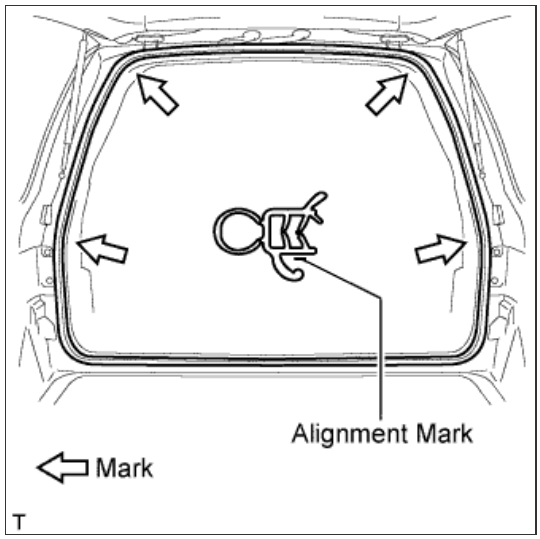

36. INSTALL REAR DOOR OPENING TRIM EATHERSTRIP LH

a. Install the rear door opening trim weatherstrip as shown in the illustration.

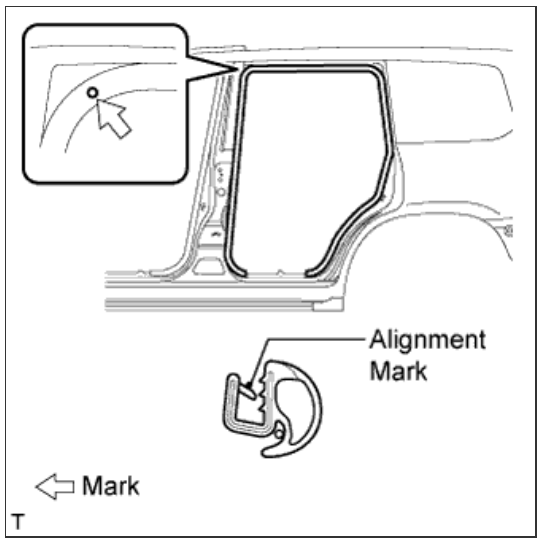


37. INSTALL REAR DOOR OPENING TRIM EATHERSTRIP RH

HINT:

Use the same procedures described for the LH side.

38. INSTALL FRONT DOOR OPENING TRIM EATHERSTRIP LH

a. Install the front door opening trim weatherstrip as shown in the illustration.

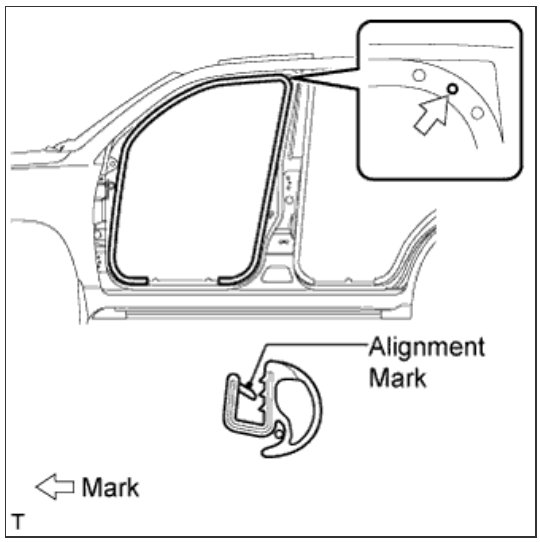

39. INSTALL FRONT DOOR OPENING TRIM EATHERSTRIP RH


HINT:

Use the same procedures described for the LH side.

40. INSTALL ROOF HEADLINING ASSEMBLY

HINT:

- **for Man al Seat:**
  hen in talling the roof headlining, oe the front eat and rear No. 1 eat to the po tion hown in the ill tration.
- **for Power Seat:**
  hen in talling the roof headlining, connect the cable to the negative (-) attery ter ial and oe the front eat and No. 1 rear eat to the po tion hown in the ill tration.
- **for Power Seat:**
  After o in the eat , di connect the cable fro the negative (-) attery ter ial.

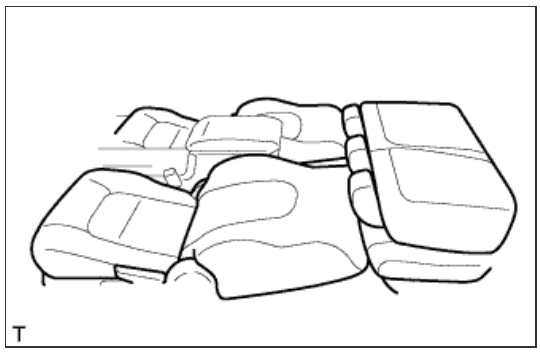

a. Place the headlining in the cabin from the rear of the vehicle as shown in the illustration.


NOTICE:

Be careful not to damage the roof headlining when placing it in the cabin.




b. for 3 Person Seat no Rear No. 2 Seat:


b. for 3 Person Seat Type Rear No. 2 Seat:
Attach the 2 guides, 12 claws and 2 clips to install the headlining.

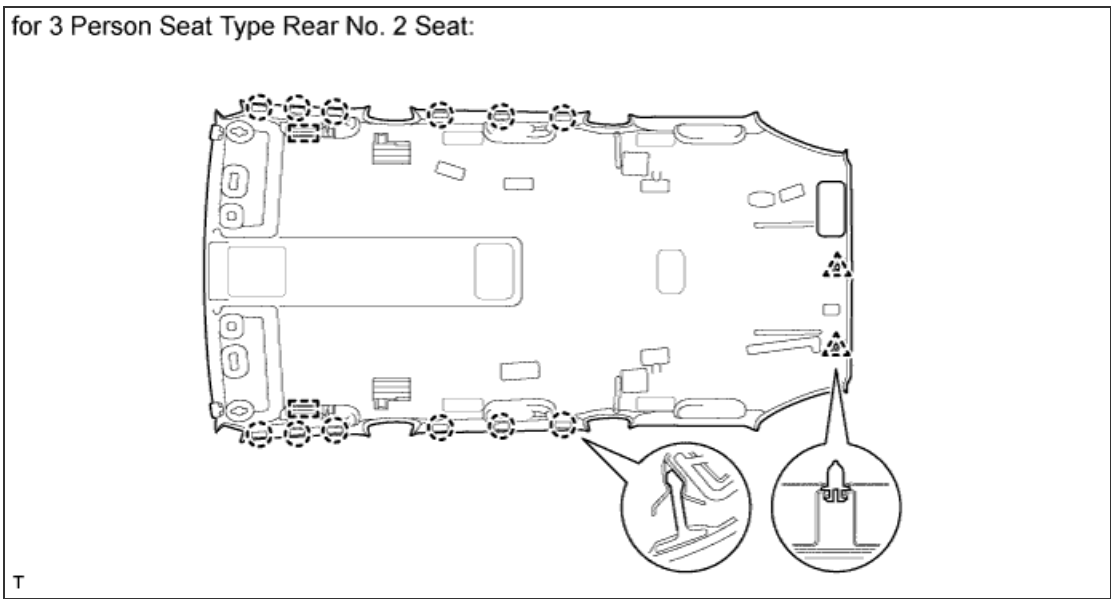


c. except 3 Person Seat Type Rear No. 2 Seat:
Attach the 2 guides, 12 claws and 3 clips to install the headlining.

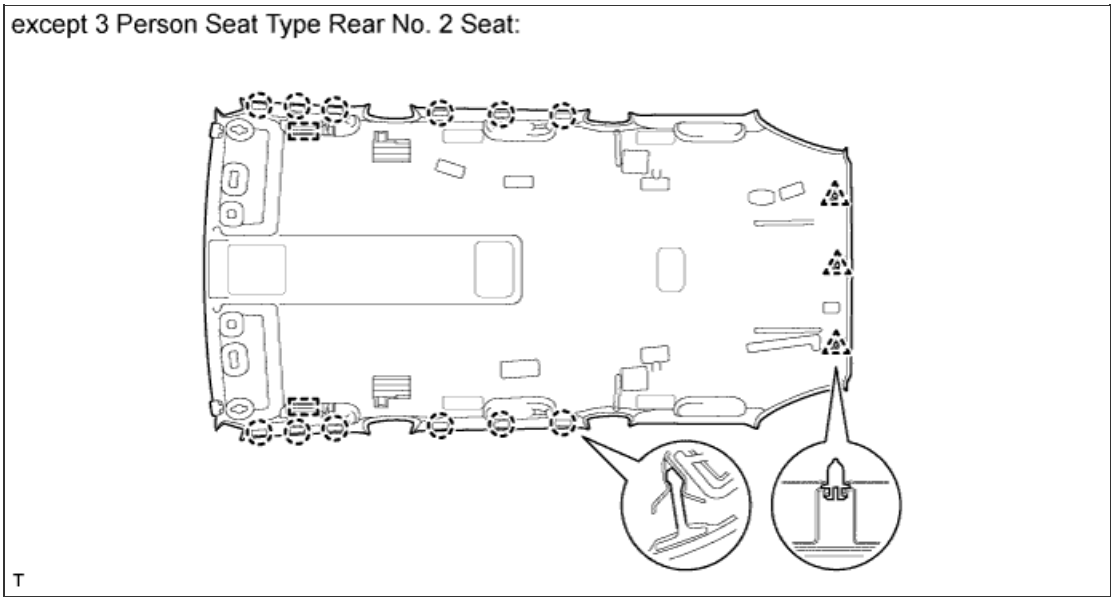

d. w/ Rear Wiper:
Connect the washer hose.

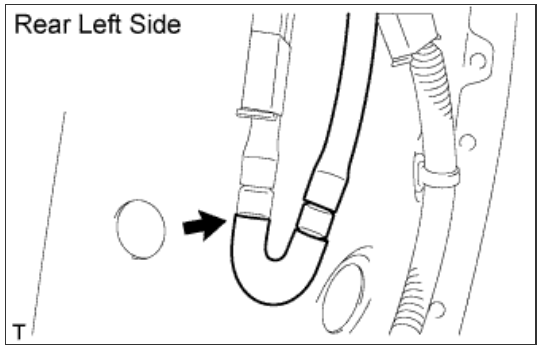


e. Connect the antenna cord connector.

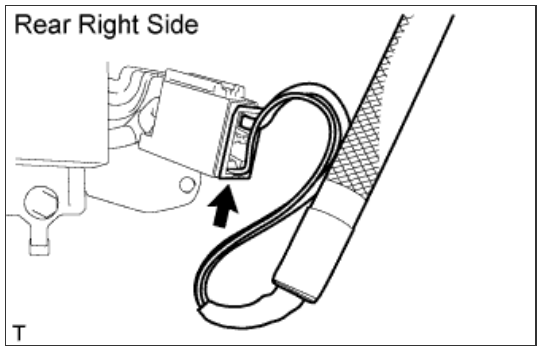


f. Connect the antenna cord connector and attach the 2 clamps.

g. Install the bolt.

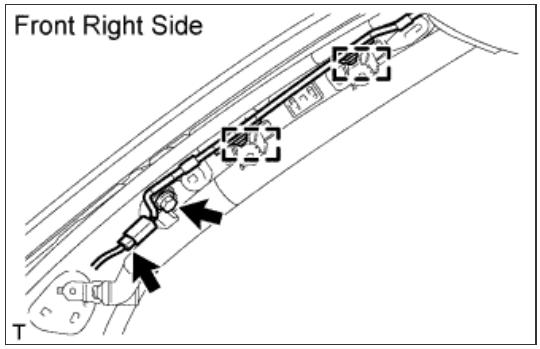


h. Connect the 3 roof wire connectors and 4 clamps.


i. w/ Rear Wiper:
Connect the washer hose.

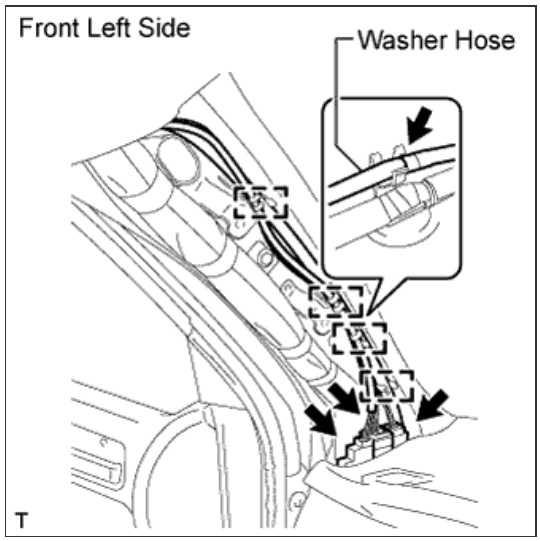

. w/ Rain Sensor:
Connect the rain sensor connector.

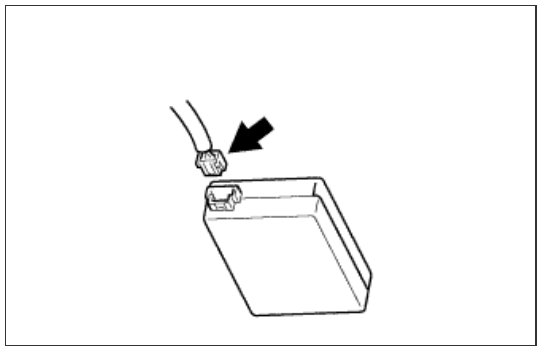


k. w/ C Mirror:
Connect the inner mirror connector.

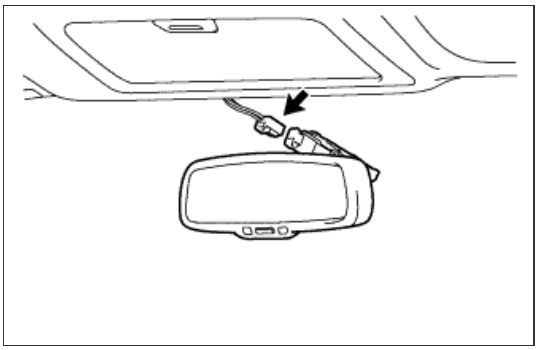

41. INSTALL FRONT ROOF SIDE RAIL GARNISH LH

a. Install 3 new clips to the roof side rail garnish.

. Attach the 3 clips to install the roof side rail garnish.

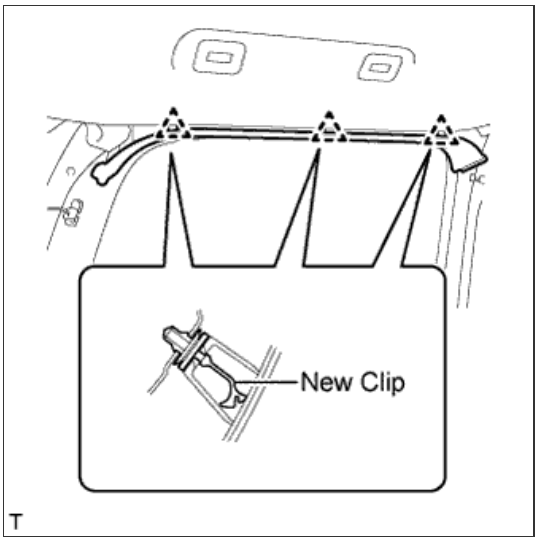

42. INSTALL FRONT ROOF SIDE RAIL GARNISH RH

HINT:

Use the same procedures described for the LH side.


43. INSTALL 3RD SEAT ASSIST GRIP ASSEMBLY (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the 3rd seat assist grip on the other side.

a. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.

b. Install the assist grip.

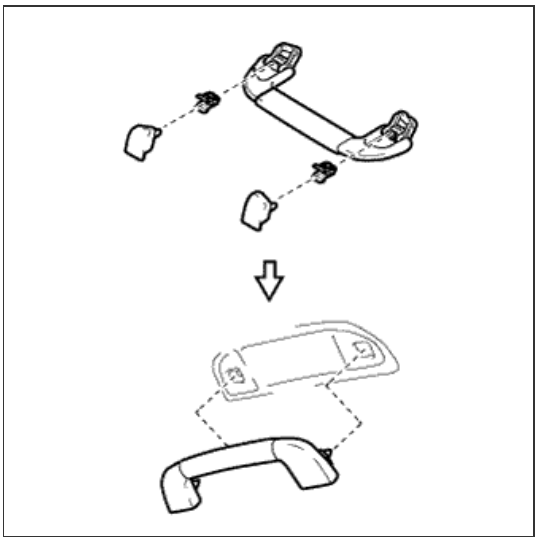


44. INSTALL NO. 2 ASSIST GRIP ASSEMBLY LH

a. w/ Rear No. 2 Seat, except ace to ace Seat pe or w/o Rear No. 2 Seat:
Install the No. 2 assist grip assembl .

i. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.


ii. Install the assist grip.

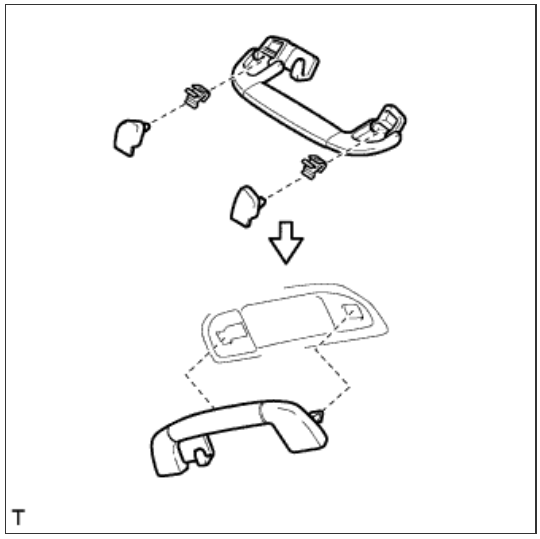

. w/ Rear No. 2 Seat, for ace to ace Seat pe:
Install the No. 2 assist grip assembl .

i. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.

ii. Install the assist grip.

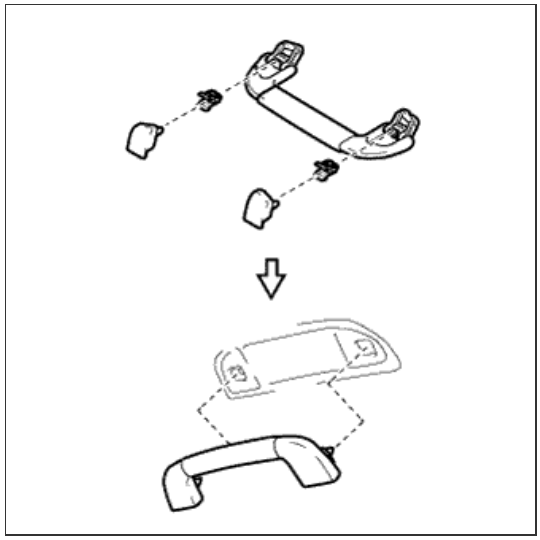

45. INSTALL NO. 2 ASSIST GRIP ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.


46. INSTALL ASSIST GRIP ASSEMBLY

HINT:

Use the same procedure to install the assist grip on the other side.


a. Assemble the assist grip, 2 clips and 2 covers as shown in the illustration.

b. Install the assist grip.

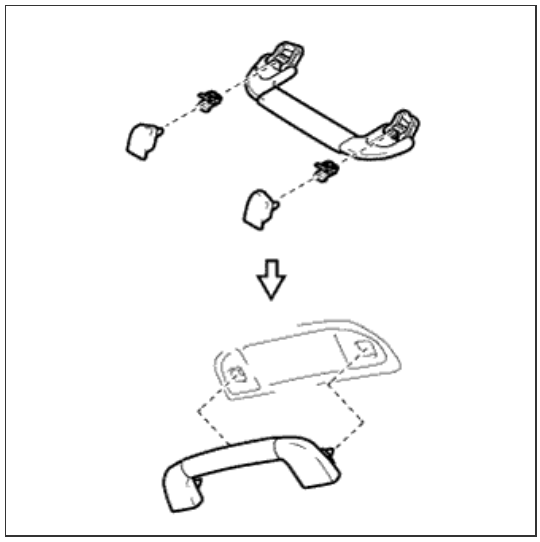


47. INSTALL SEAT BELT ANCHOR COVER (for 3 Per on Seat Type Rear No. 2 Seat)

a. Attach the 4 guides and 4 clips to install the seat belt anchor cover.

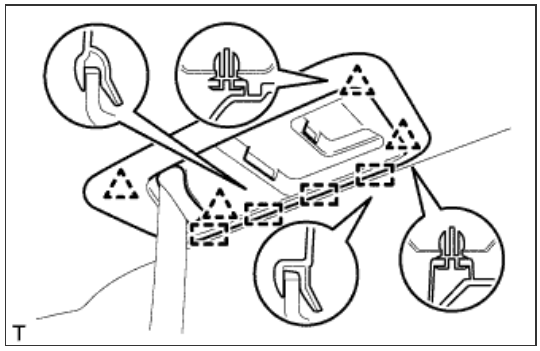

48. INSTALL RAIN SENSOR COVER (w/ Rain Sen o)


a. Push in the stopper in the direction of the arrow labeled (1) to install the rain sensor cover.

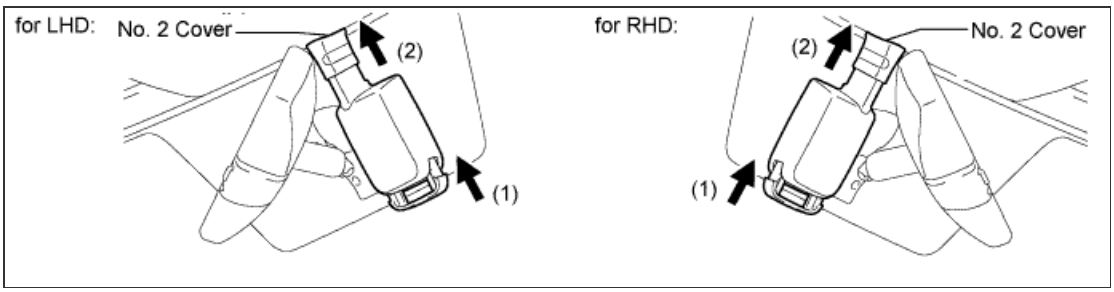

. Slide the No. 2 cover in the direction of the arrow labeled (2) to fix it in place.


49. INSTALL INNER REAR VIE MIRROR STAY HOLDER COVER (w/ EC Mirror)

a. Attach the 2 claws to install the cover.

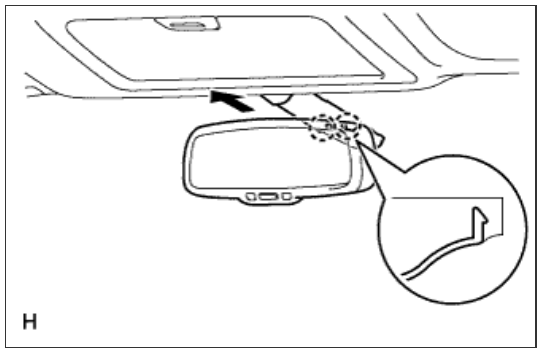

50. INSTALL CENTER VISOR ASSEMBLY LH (w/ S Vi o)

a. Attach the 2 clips to install the center visor.

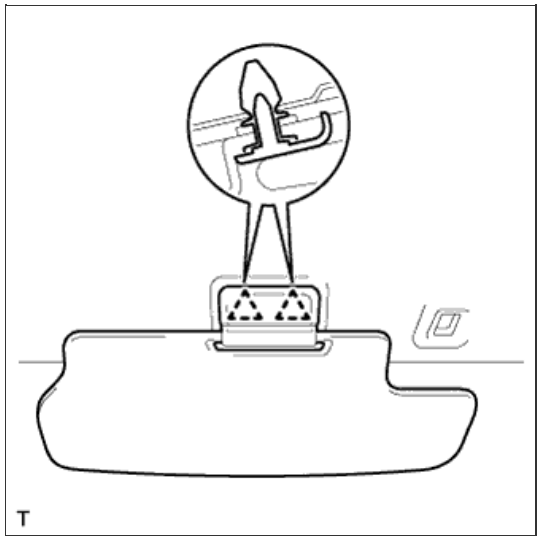

51. INSTALL CENTER VISOR ASSEMBLY RH (w/ S Vi o)

HINT:

Use the same procedures described for the LH side.


52. INSTALL VISOR HOLDER

HINT:

Use the same procedures to install the visor holder on the other side.


a. Attach the 2 claws.

b. Push the visor holder in to install it.

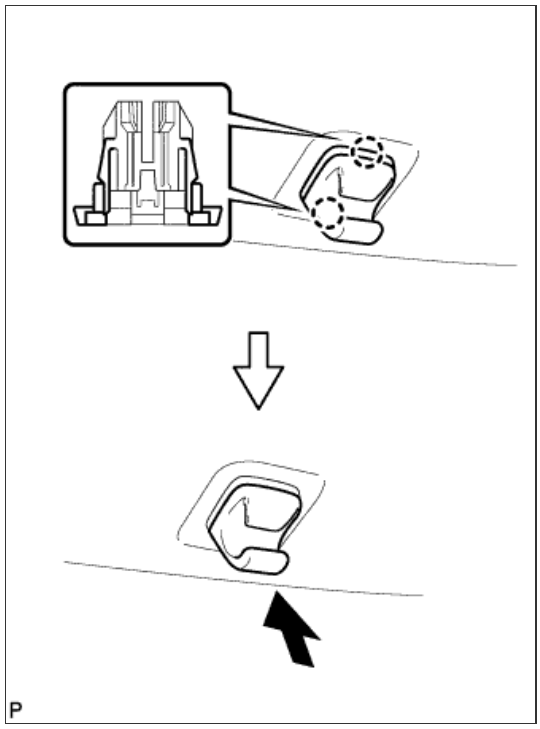

53. INSTALL VISOR ASSEMBLY LH

a. Install the visor with the 2 screws.

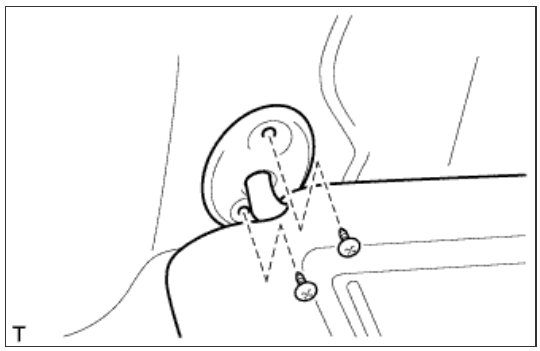

54. INSTALL VISOR ASSEMBLY RH

HINT:


Use the same procedures described for the LH side.

55. INSTALL VISOR BRACKET COVER

HINT:


Use the same procedure to install the visor bracket cover on the other side.

a. Attach the 4 claws to install the visor bracket cover.

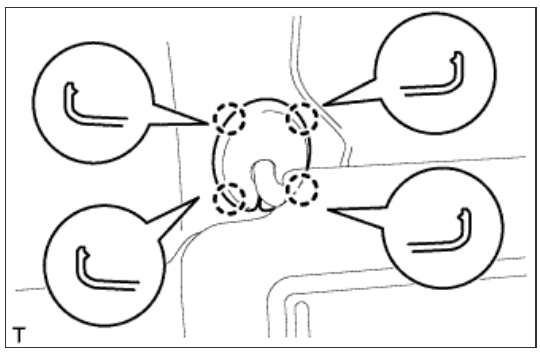


56. INSTALL NO. 2 ROOM LIGHT ASSEMBLY


a. Install the 2 covers.

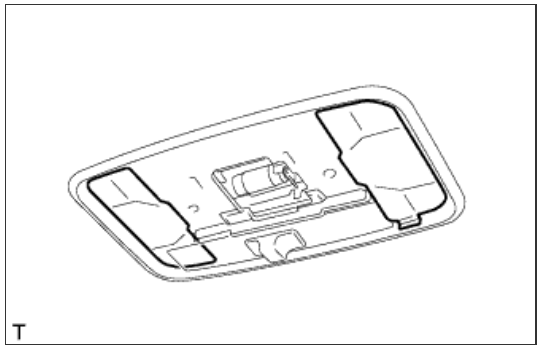


. Attach the 4 claws to install the room light lens.

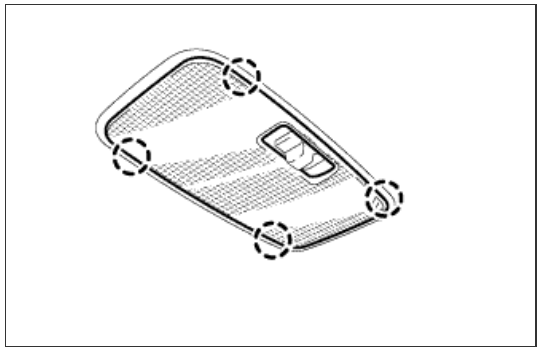

c. Attach the 4 claws to install the room light to the room light switch base.

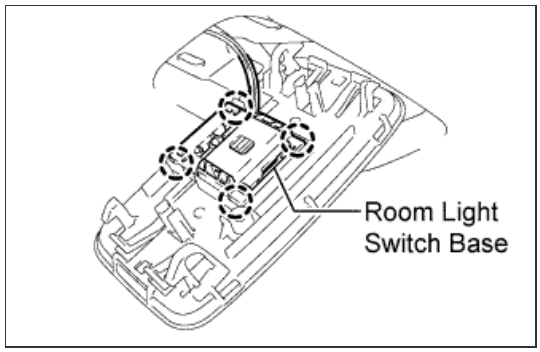


d. Attach the 4 claws to install the room light.

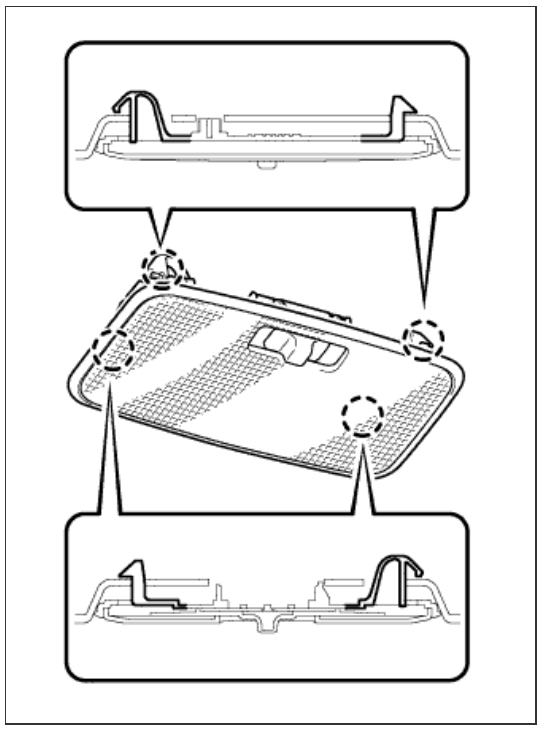

57. INSTALL NO. 1 ROOM LIGHT ASSEMBLY

a. w/ Map Light:
Install the No. 1 room light assembl .

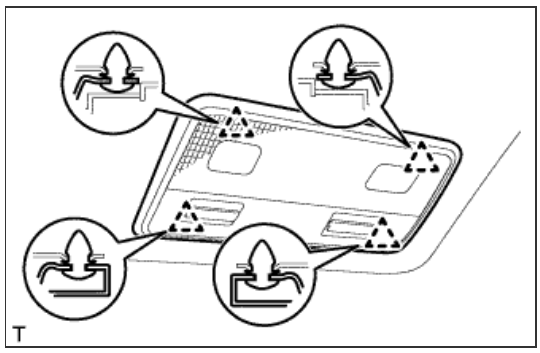


i. Connect the connector.


ii. Attach the 4 clips to install the room light.

. w/o Map Light:
Install the No. 1 room light assembl .


i. Install the 2 covers.

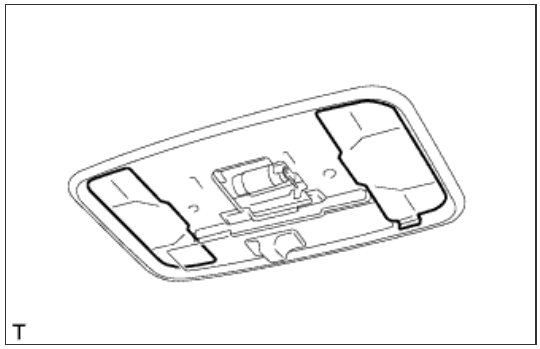


ii. Attach the 4 claws to install the room light lens.

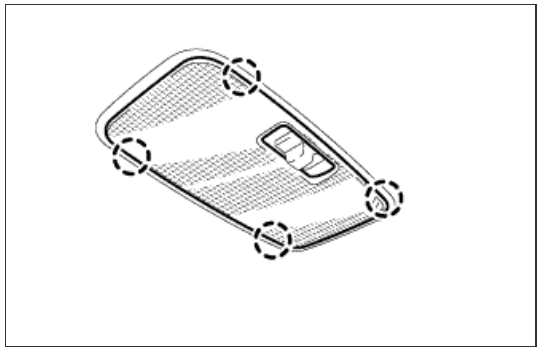

iii. Attach the 4 claws to install the room light to the room light switch base.

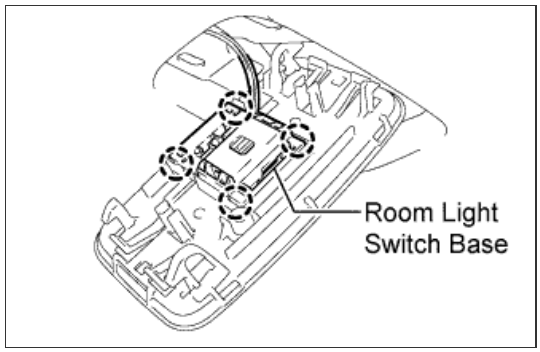

iv. Attach the 4 claws to install the room light.

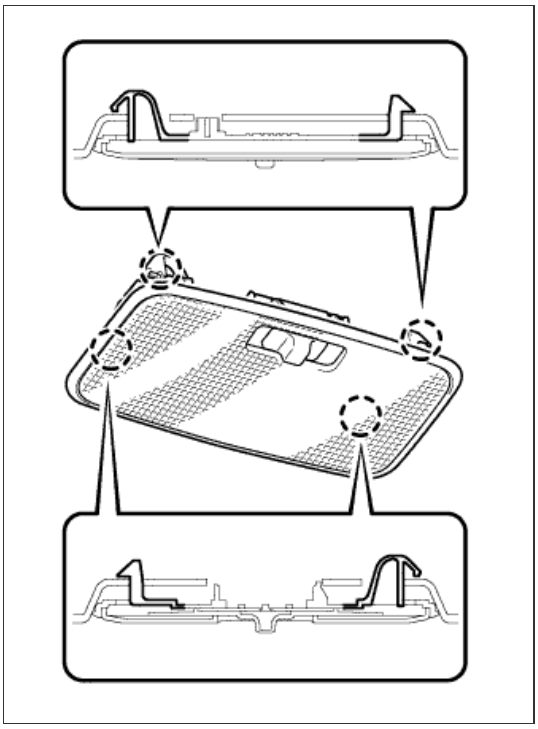


58. INSTALL MAP LIGHT ASSEMBLY (w/ Map Light)

a. Connect the connector.

b. Attach the 2 clips and 2 guides to install the map light.


c. Install the 2 screws.

d. Attach the 2 claws to close the 2 covers.

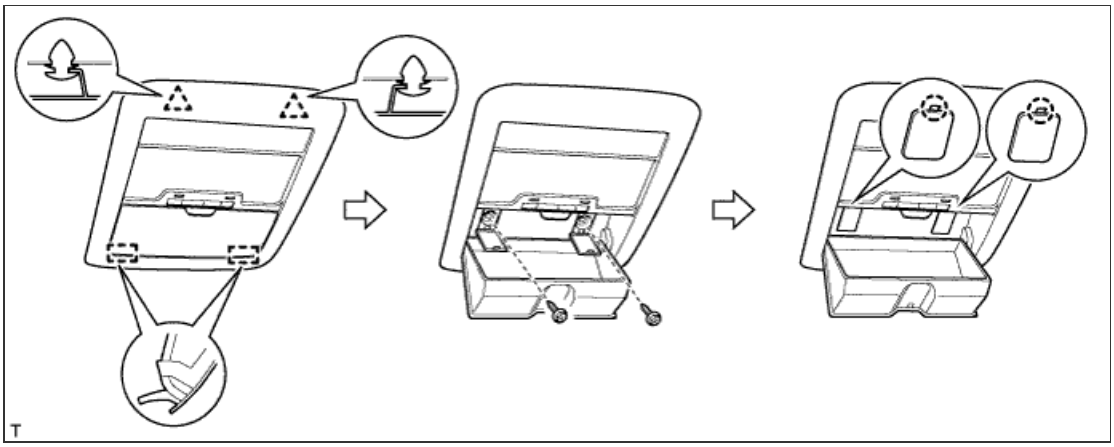


59. INSTALL REAR UPPER PILLAR GARNISH LH

a. Attach the 5 clips to install the rear upper pillar garnish.

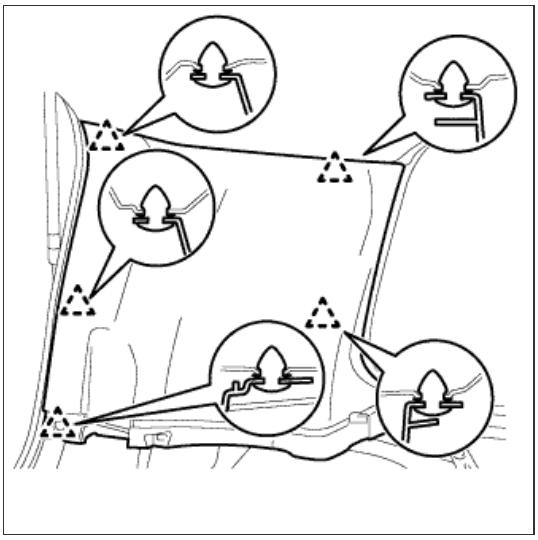


. w/ Rear No. 2 Seat, except ace to ace Seat pe:

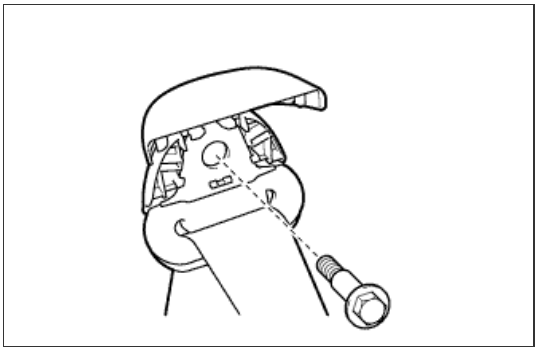

i. Install the seat belt shoulder anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

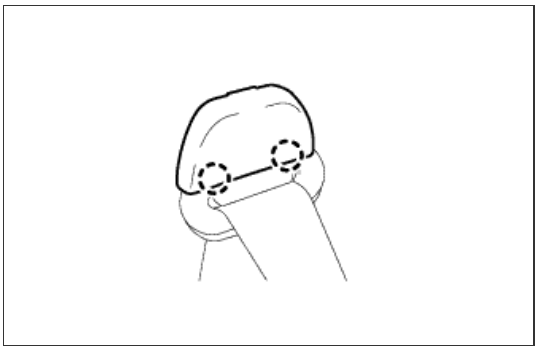

ii. Attach the 2 claws to close the seat belt shoulder anchor cover.

60. INSTALL REAR UPPER PILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

61. INSTALL REAR FRONT QUARTER TRIM GARNISH LH

a. Pass the seat belt anchor through the quarter trim garnish.

. Attach the clip and 2 guides to install the quarter trim garnish.

c. Install the screw.

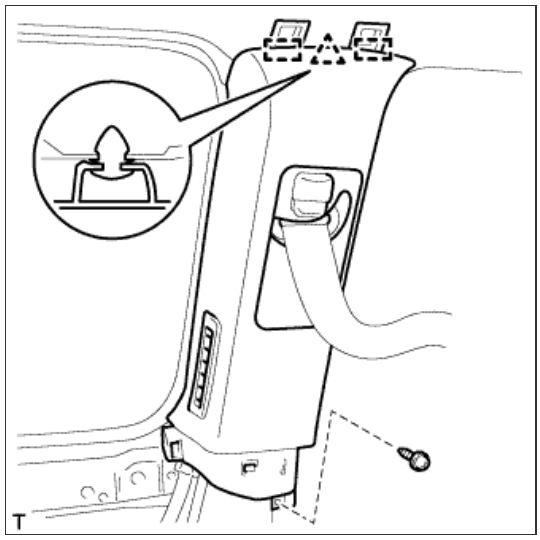

62. INSTALL REAR FRONT QUARTER TRIM GARNISH RH


HINT:

Use the same procedures described for the LH side.

63. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY LH

HINT:

When installing the front quarter trim panel, operate the reclining ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

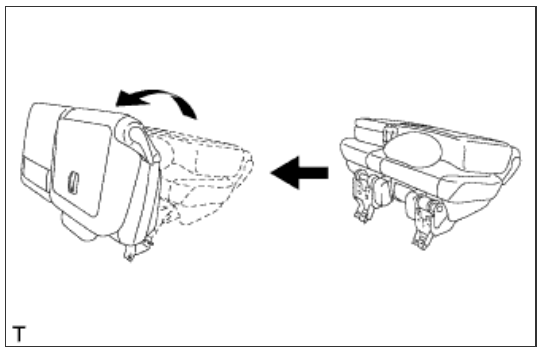

a. w/ Rear No. 2 Seat, except ace to ace Seat pe:


i. w/o Rear Air Conditioning S stem:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning S stem:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 18 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Tor e:
12 N 122 kgf c , 9 ft.*l f

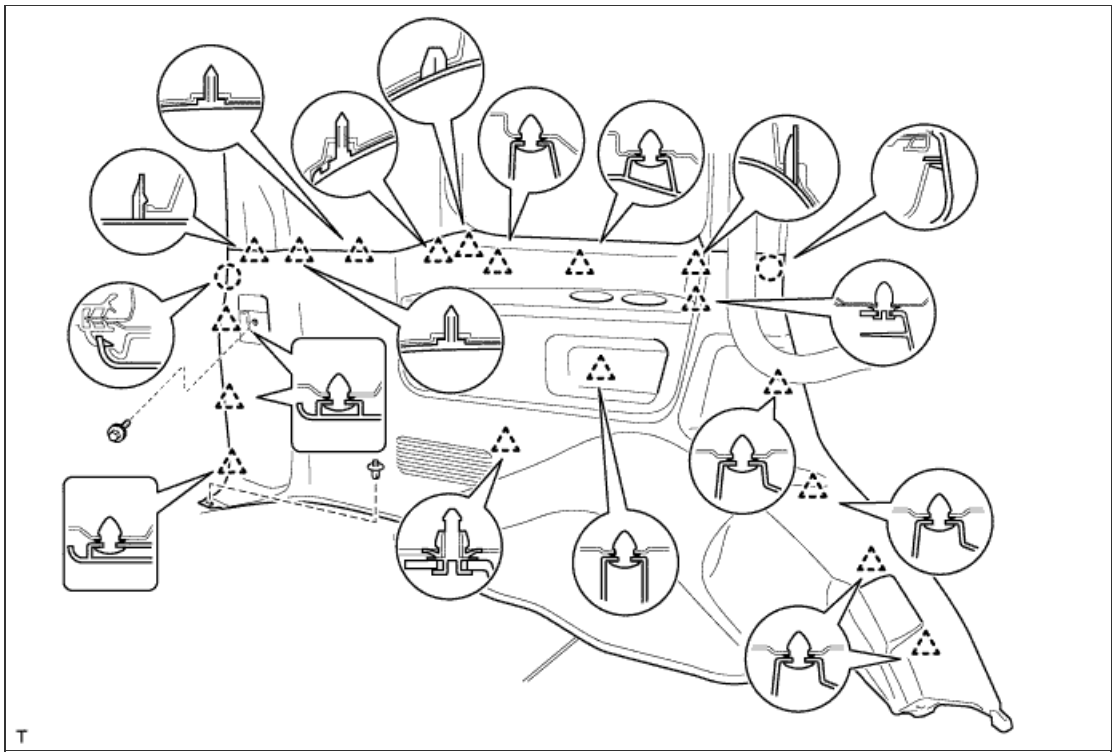

. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for ace to ace Seat pe:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

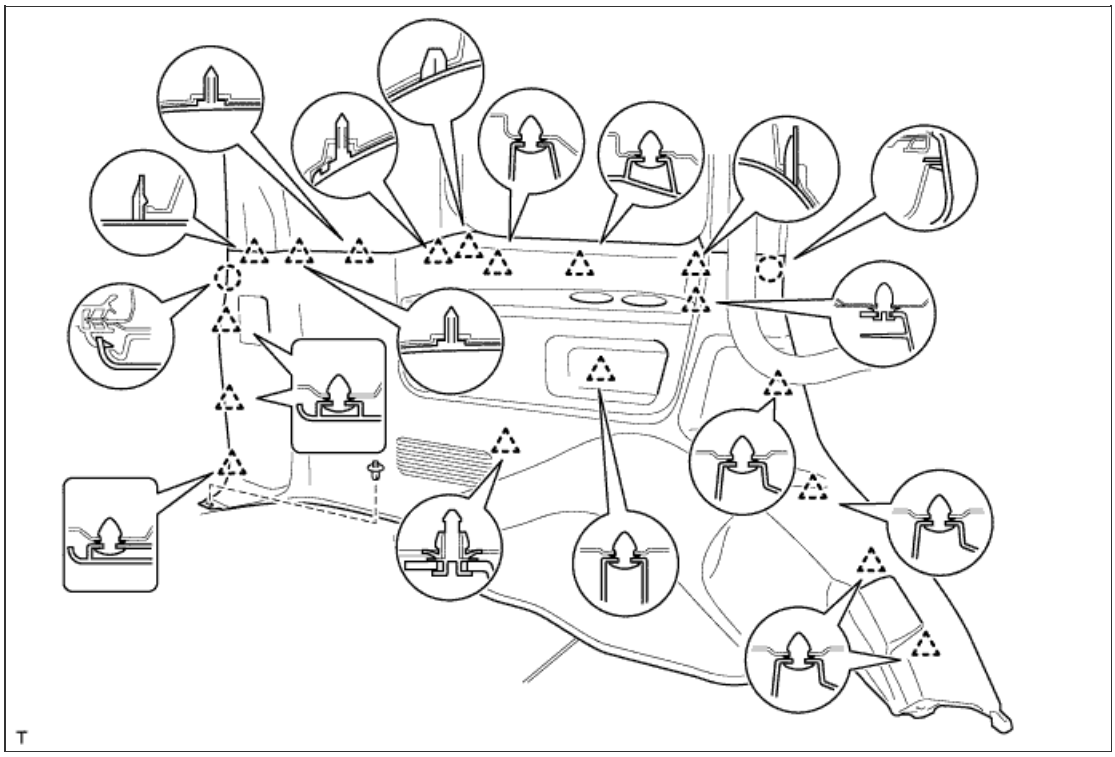

c. w/ onneau Cover:

i. Attach the 18 clips and 2 claws to install the quarter trim panel.

ii. Install the screw and clip.

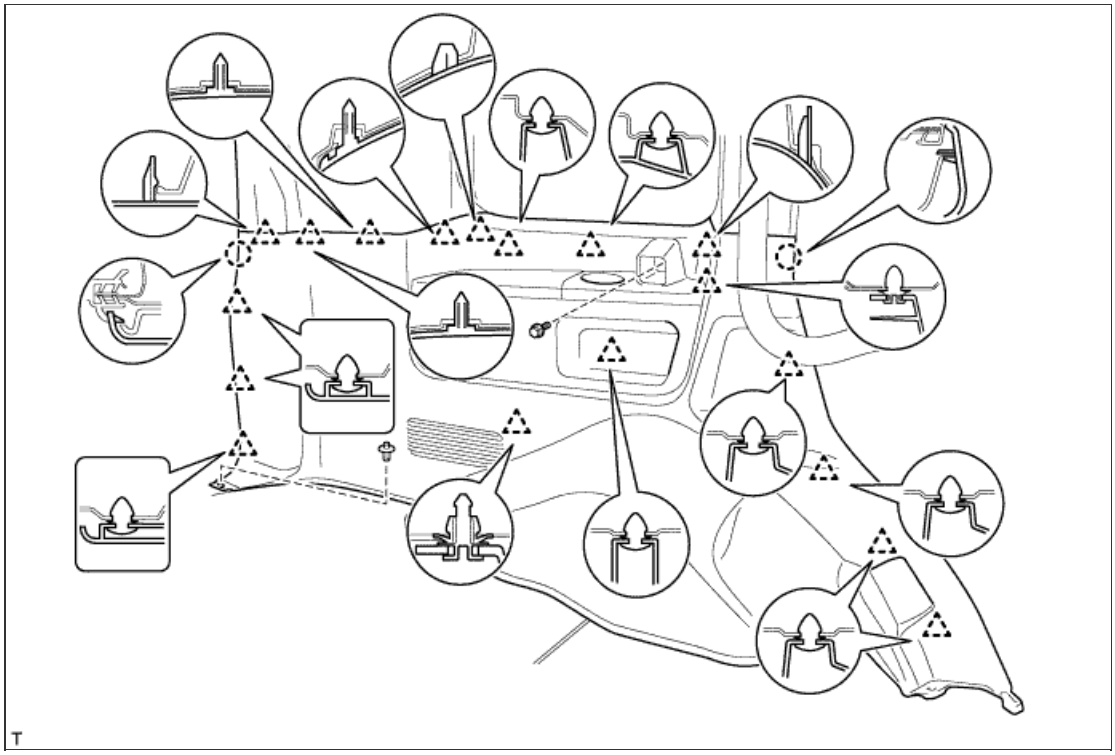


d. w/ Rear No. 2 Seat, except ace to ace Seat pe:
Install the rear No. 2 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f


NOTICE:

Do not overlap the anchor part of the seat belt and protruding parts of the vehicle bod .

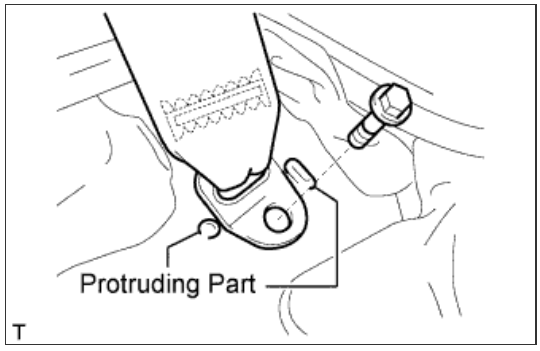


e. Install the rear No. 1 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

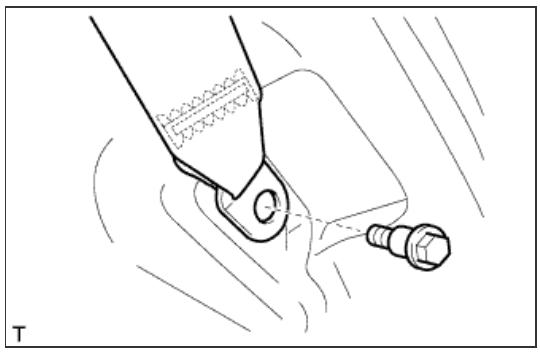


f. Attach the 3 claws to install the cover.

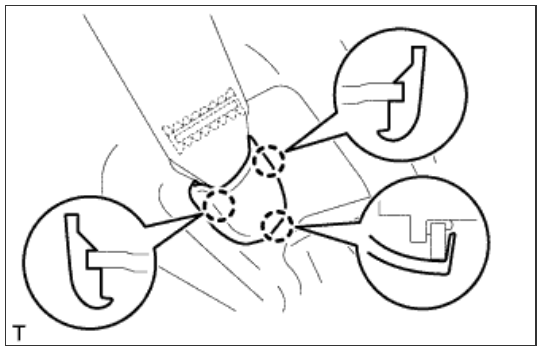

64. INSTALL FRONT QUARTER TRIM PANEL ASSEMBLY RH

HINT:

When installing the front quarter trim panel, operate the reclining ad uster release handle and move the No. 1 rear seat to the position shown in the illustration.

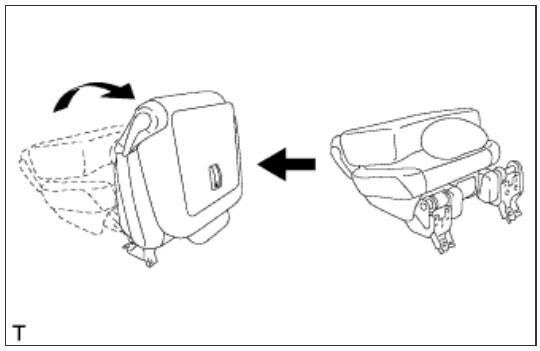

a. w/ Rear No. 2 Seat, except ace to ace Seat pe:


i. w/o Rear Air Conditioning S stem:
Connect the rear seat lock control lever cable.

ii. w/ Rear Air Conditioning S stem:
Connect the thermistor connector and rear seat lock control lever cable.

iii. Attach the 16 clips and 2 claws to install the quarter trim panel.

iv. Install the clip and bolt.


Tor e:
12 N 122 kgf c , 9 ft.*l f

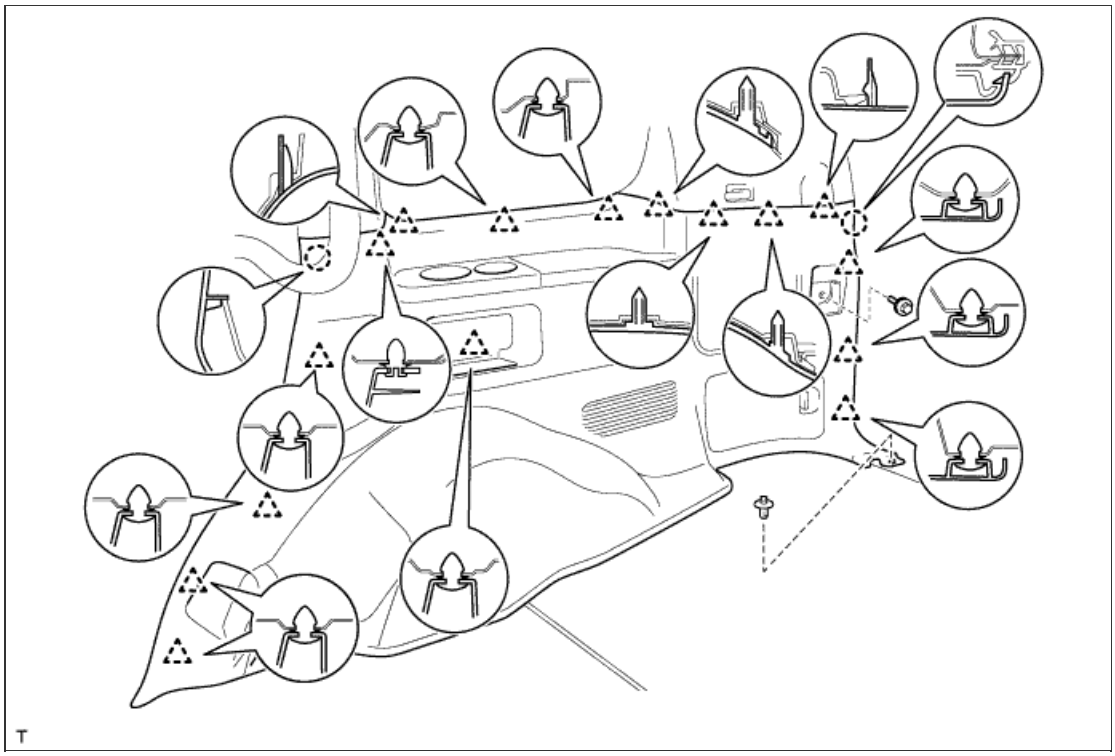

. w/o Rear No. 2 Seat or w/ Rear No. 2 Seat, for ace to ace Seat pe:

i. Attach the 16 clips and 2 claws to install the quarter trim panel.


ii. Install the clip.

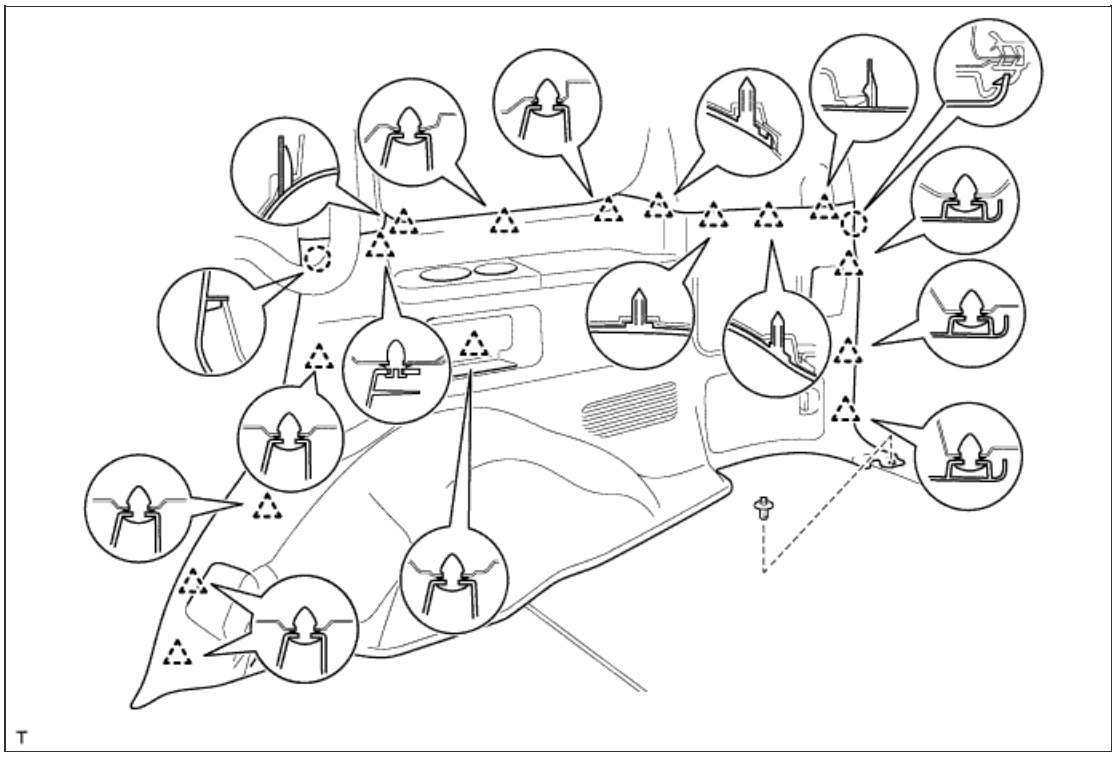

c. w/ onneau Cover:

i. Attach the 16 clips and 2 claws to install the quarter trim panel.


ii. Install the screw and clip.

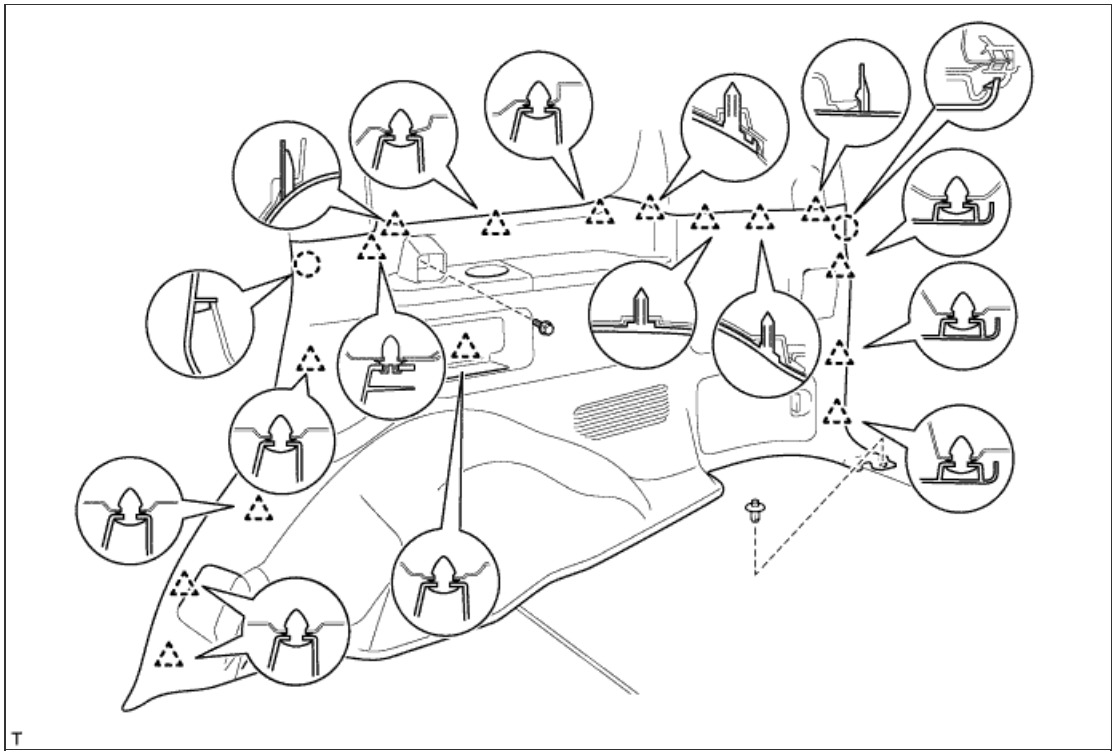


d. w/ Rear No. 2 Seat, except ace to ace Seat pe:

i. Install the rear No. 2 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

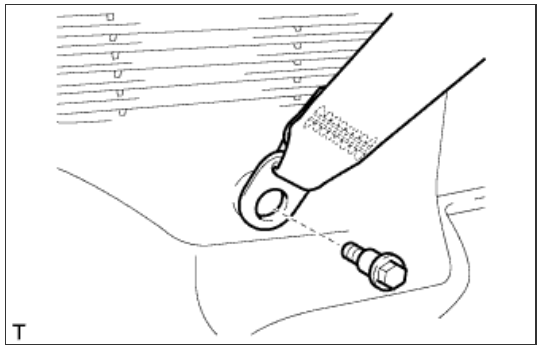


ii. Attach the 3 claws to install the cover.

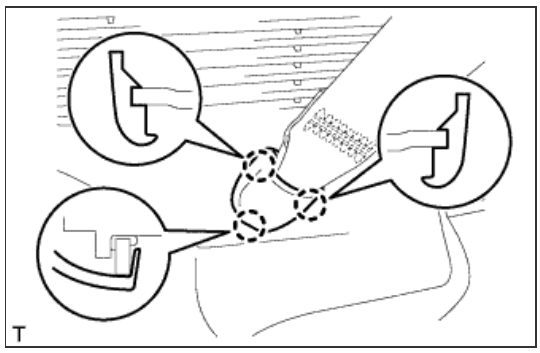


e. Install the rear No. 1 seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

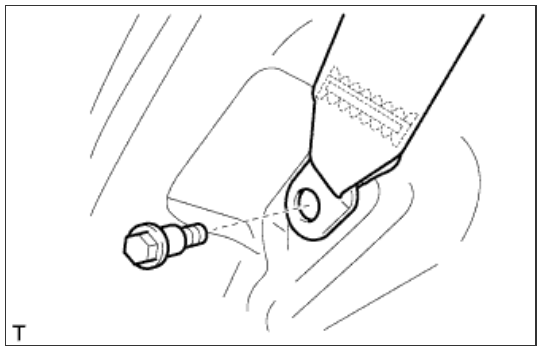

f. Attach the 3 claws to install the cover.

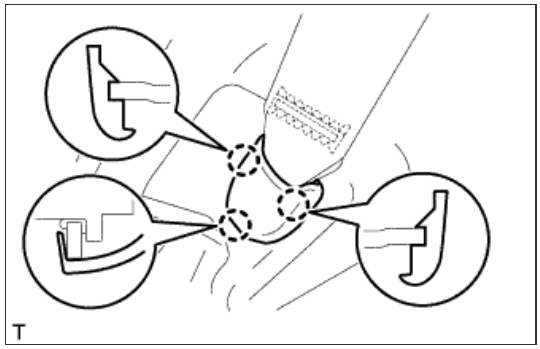


65. INSTALL REAR SEAT COVER CAP (w/ Rear No. 2 Seat, except Face to Face Seat Type)

HINT:

Use the same procedure to install the rear seat cover cap on the other side.

a. Attach the 3 claws to install the rear seat cover cap.

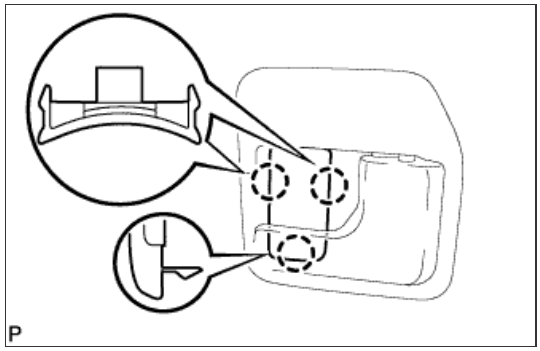


66. INSTALL NO. 1 TONNEAU COVER HOLDER CAP (w/ Tonnea Cover)

HINT:

Use the same procedure to install the tonneau cover holder cap on the other side.

a. Attach the 2 claws to install the tonneau cover holder cap.

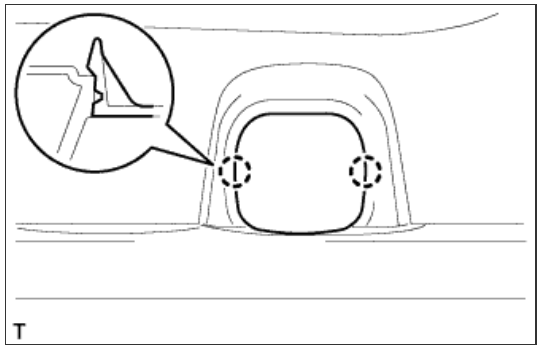


67. INSTALL CENTER PILLAR GARNISH LH

a. Pass the seat belt anchor through the center pillar garnish.

. Attach the 2 clips and 2 guides to install the center pillar garnish.

c. Install the bolt.

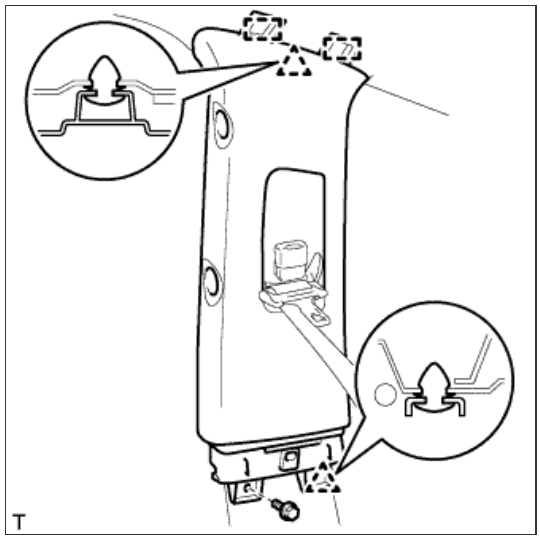

68. INSTALL CENTER PILLAR GARNISH RH


HINT:

Use the same procedures described for the LH side.

69. INSTALL REAR ASSIST GRIP ASSEMBLY


HINT:

Use the same procedure to install the rear assist grip on the other side.

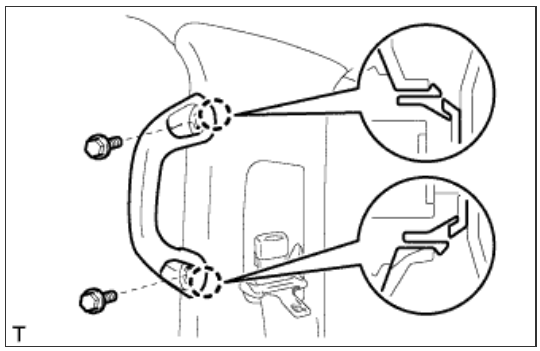

a. Attach the 2 claws to install the rear assist grip.

b. Install the 2 bolts.

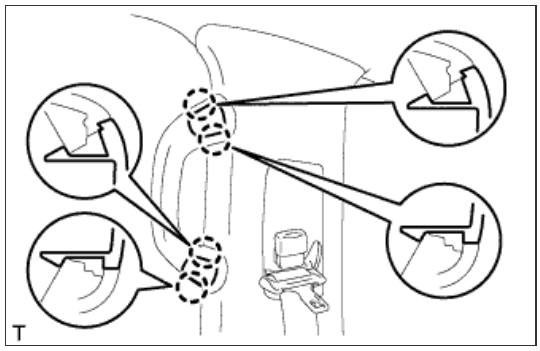


c. Attach the 4 claws to install the 2 assist grip plugs.

70. INSTALL CENTER LO EPILLAR GARNISH LH

HINT:


- **for Man al Seat:**
  hen in talling the center lower pillar garni h, oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  hen in talling the center lower pillar garni h, connect the cable to the negative (-) attery ter inal and operate the power eat wi ch to oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  After o in the front eat, di connect the cable fro the negative (-) attery ter inal.

a. Attach the 2 claws and 7 clips to install the center lower pillar garnish.

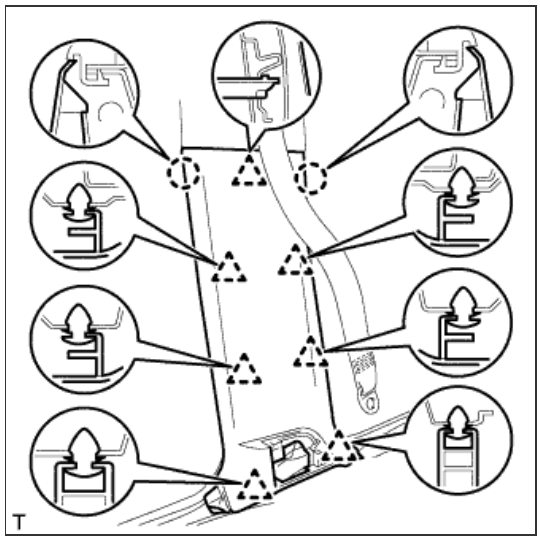

. Install the seat belt anchor with the bolt.

Tor e:
42 N 428 kgf c , 31 ft.*l f

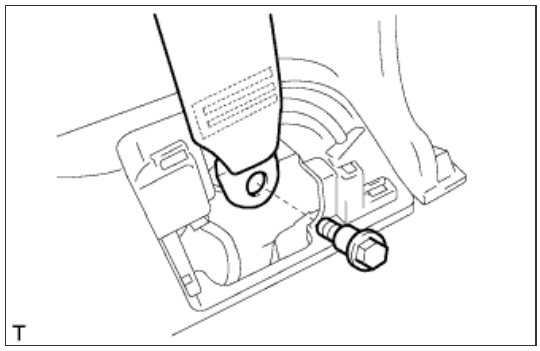

71. INSTALL CENTER LO ERPILLAR GARNISH RH

HINT:


Use the same procedures described for the LH side.

72. INSTALL CENTER PILLAR GARNISH COVER LH

HINT:

- **for Man al Seat:**
  hen in talling the center pillar garni h cover, oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  hen in talling the center pillar garni h cover, connect the cable to the negative (-) attery ter ial and operate the power eat wtch to oe the front eat and eatback to the fore ot pright po tion.
- **for Power Seat:**
  After o in the front eat, di connect the cable fro the negative (-) attery ter ial.

a. Attach the 2 clips and 2 guides to install the cover.

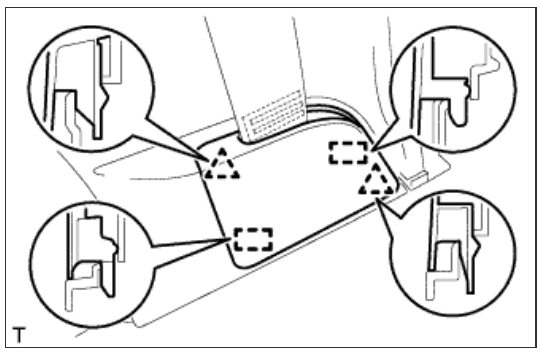

73. INSTALL CENTER PILLAR GARNISH COVER RH


HINT:

Use the same procedures described for the LH side.

74. INSTALL FRONT PILLAR GARNISH LH

a. for 9, 14 Speakers:
Connect the speaker connector.

. Attach the clip and 3 guides to install the front pillar garnish.

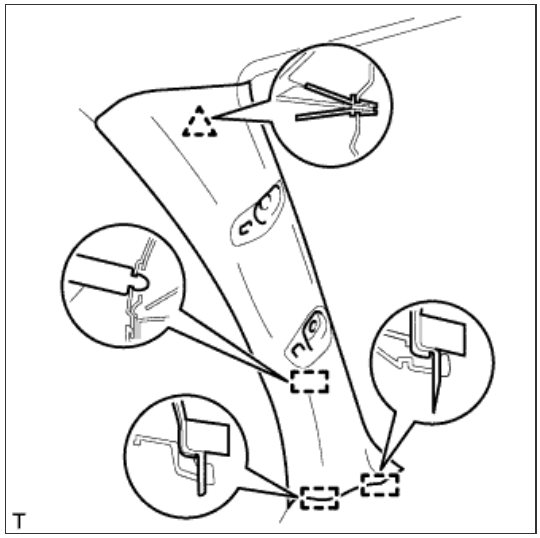

75. INSTALL FRONT PILLAR GARNISH RH

HINT:

Use the same procedures described for the LH side.


76. INSTALL FRONT ASSIST GRIP SUB-ASSEMBLY

HINT:


Use the same procedure to install the front assist grip on the other side.

a. Attach the 2 claws to install the front assist grip.

b. Install the 2 bolts.

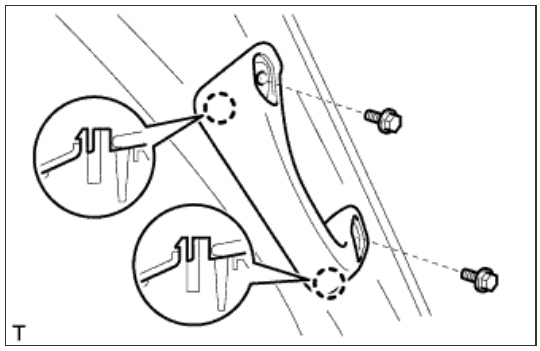


c. Attach the 4 claws to install the 2 assist grip plugs.

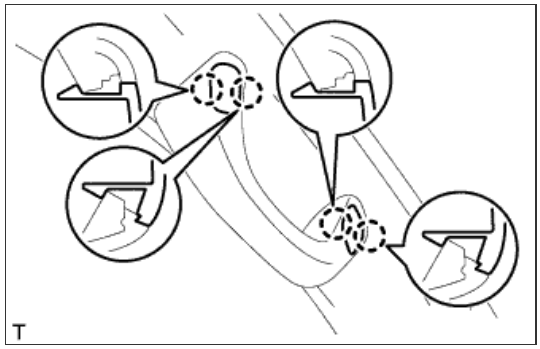

77. INSTALL REAR FLOOR MAT REAR SUPPORT PLATE


a. Attach the 6 clips to install the support plate.

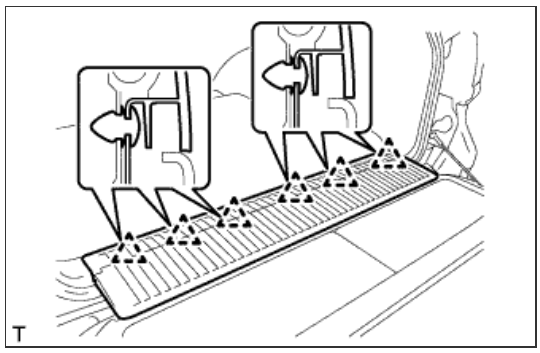

78. INSTALL REAR DOOR SCUFF PLATE LH

a. Attach the 3 claws and 4 clips to install the scuff plate.

b. Install the screw.

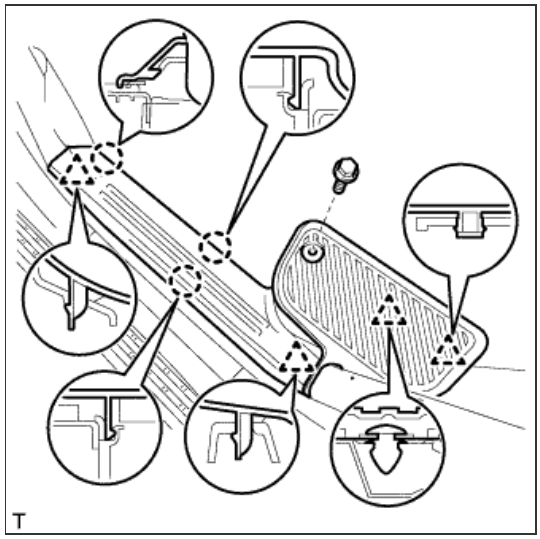

79. INSTALL REAR DOOR SCUFF PLATE RH

HINT:


Use the same procedures described for the LH side.

80. INSTALL REAR STEP COVER

HINT:


Use the same procedure to install the step cover on the other side.

a. Attach the 2 claws to install the step cover.

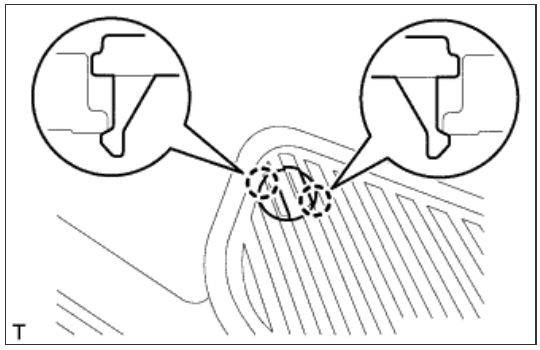

81. INSTALL FRONT DOOR SCUFF PLATE LH

a. Attach the 7 claws and 4 clips to install the scuff plate.

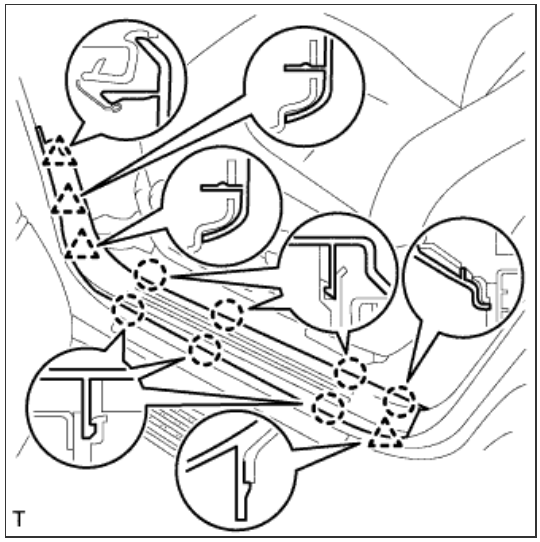

82. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Use the same procedures described for the LH side.

83. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (except Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

84. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (except Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

85. INSTALL REAR NO. 2 SEAT ASSEMBLY LH (for Face to Face Seat Type)

a. Install the rear No. 2 seat assembl LH (Click here).

86. INSTALL REAR NO. 2 SEAT ASSEMBLY RH (for Face to Face Seat Type)

HINT:

Use the same procedures described for the LH side.

87. INSTALL TONNEAU COVER ASSEMBLY (w/ Tonnea Cover)

a. Install the tonneau cover assembl .

88. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

NOTICE:

When disconnecting the cable, some s stems need to be initialized after the cable is reconnected (Click here).