

[Cowl Side J/B LH Assembly Inner Circuit]

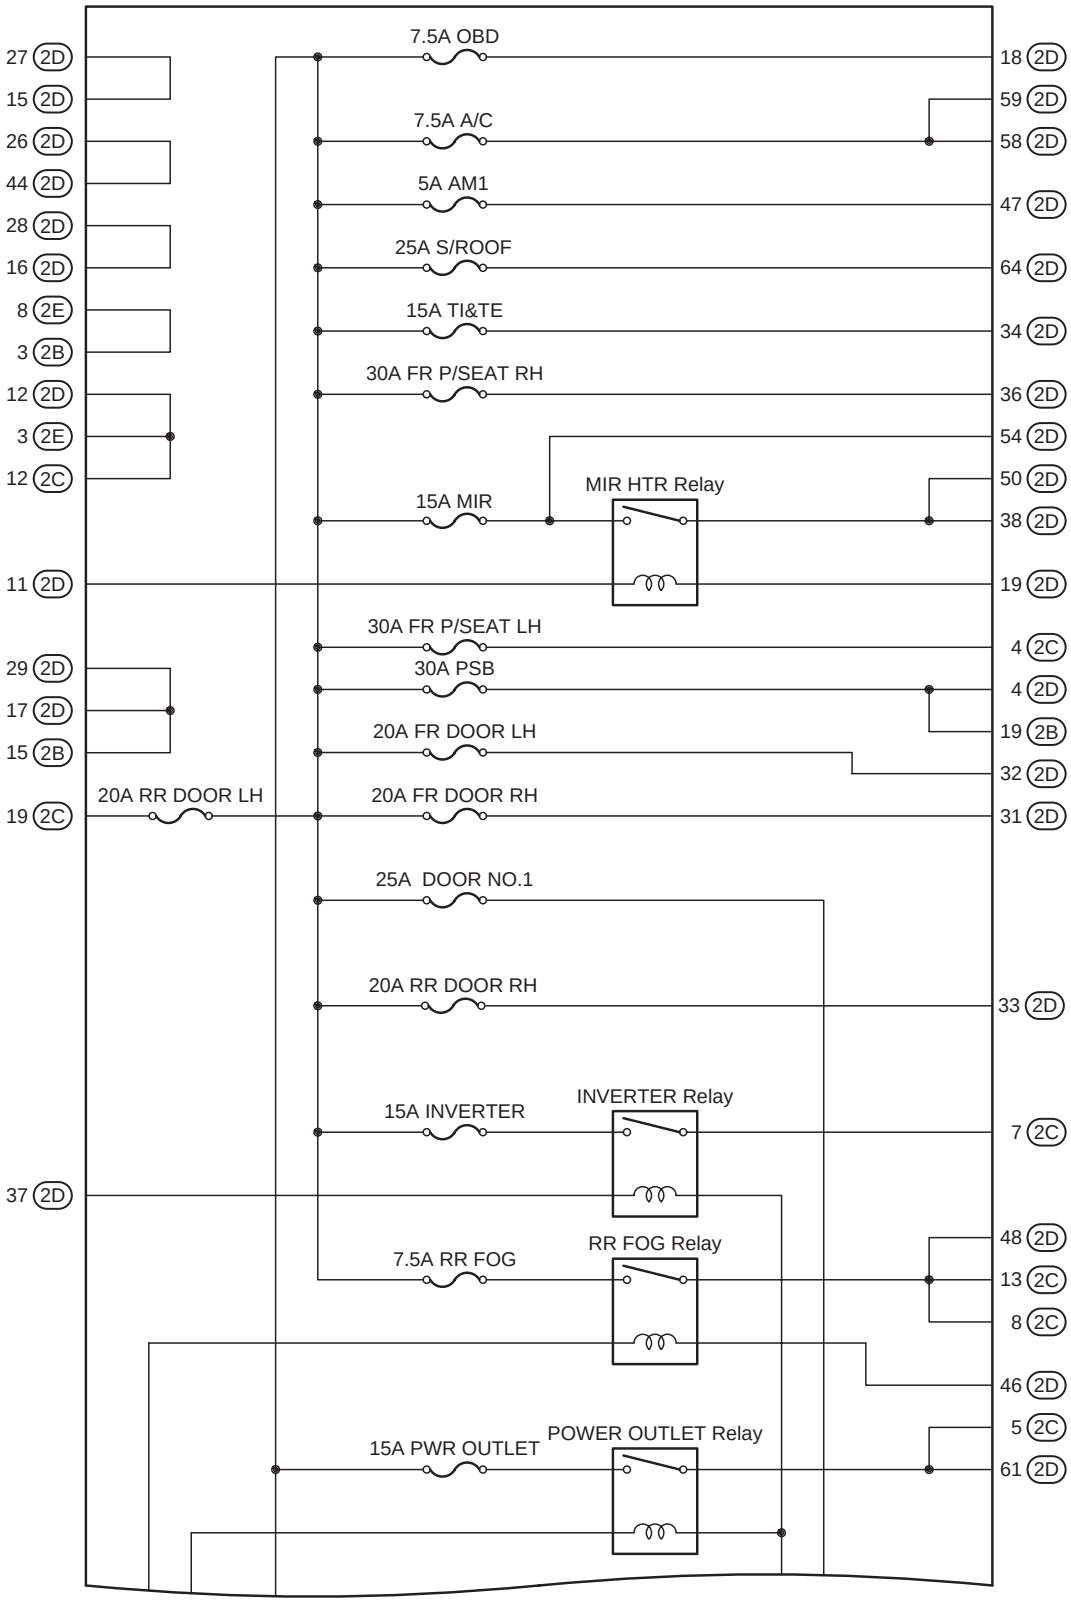


(Cont. Next Page)

(Cont'd)

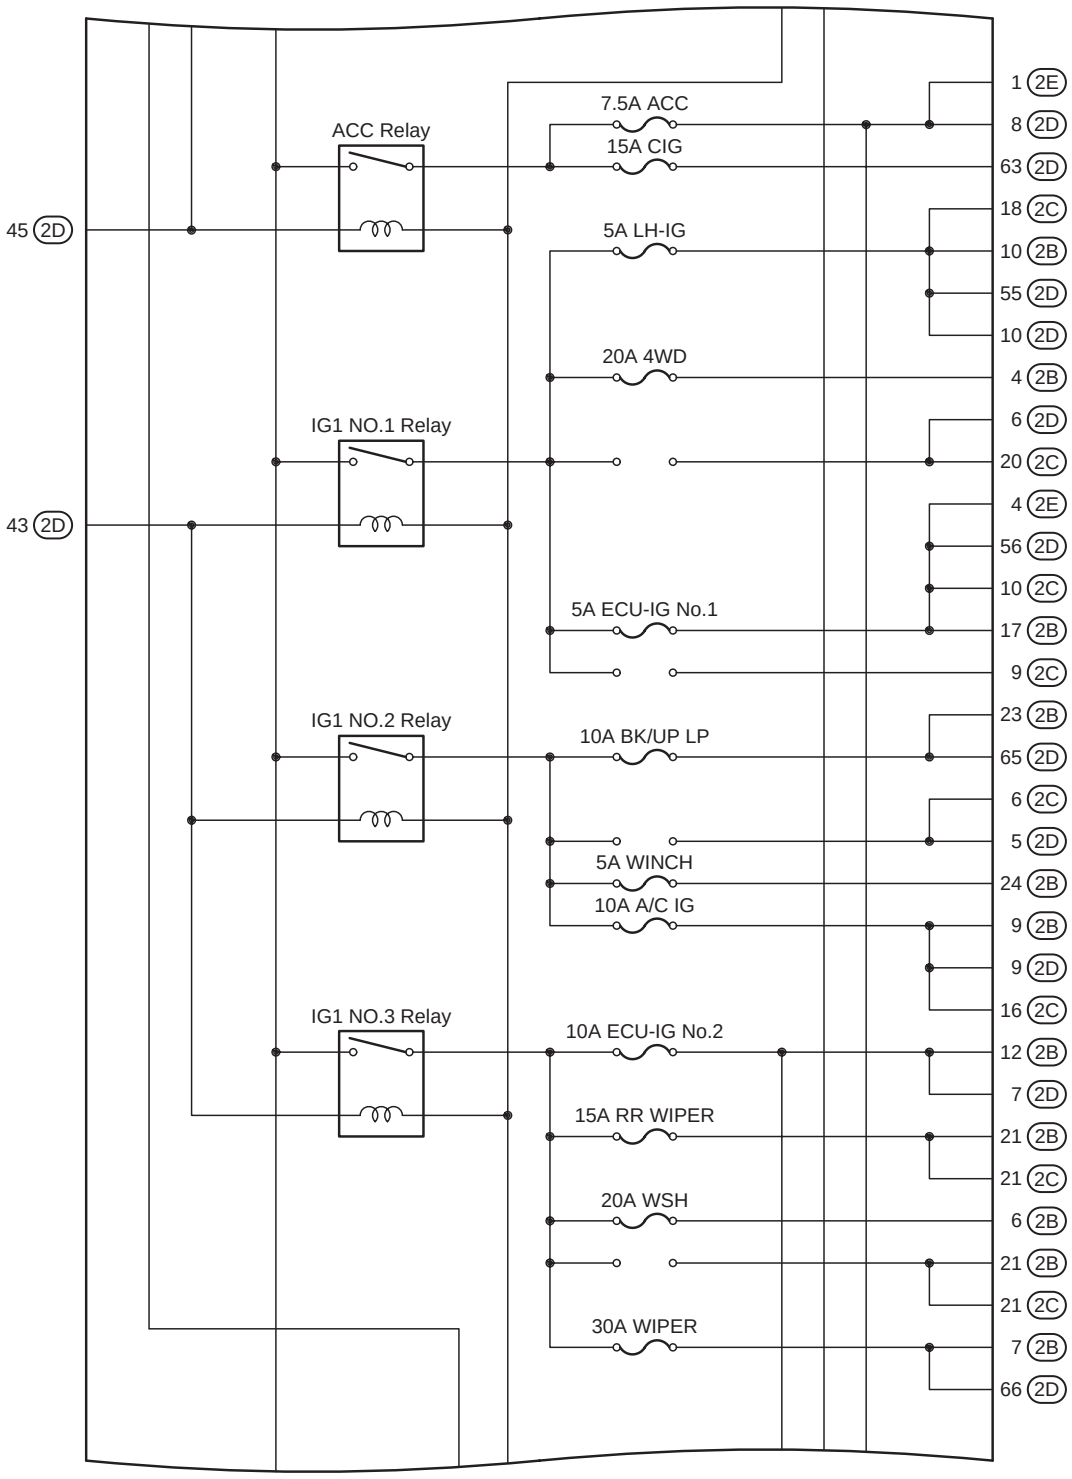


(Cont. Next Page)

[Cowl Side J/B LH Assembly Inner Circuit]

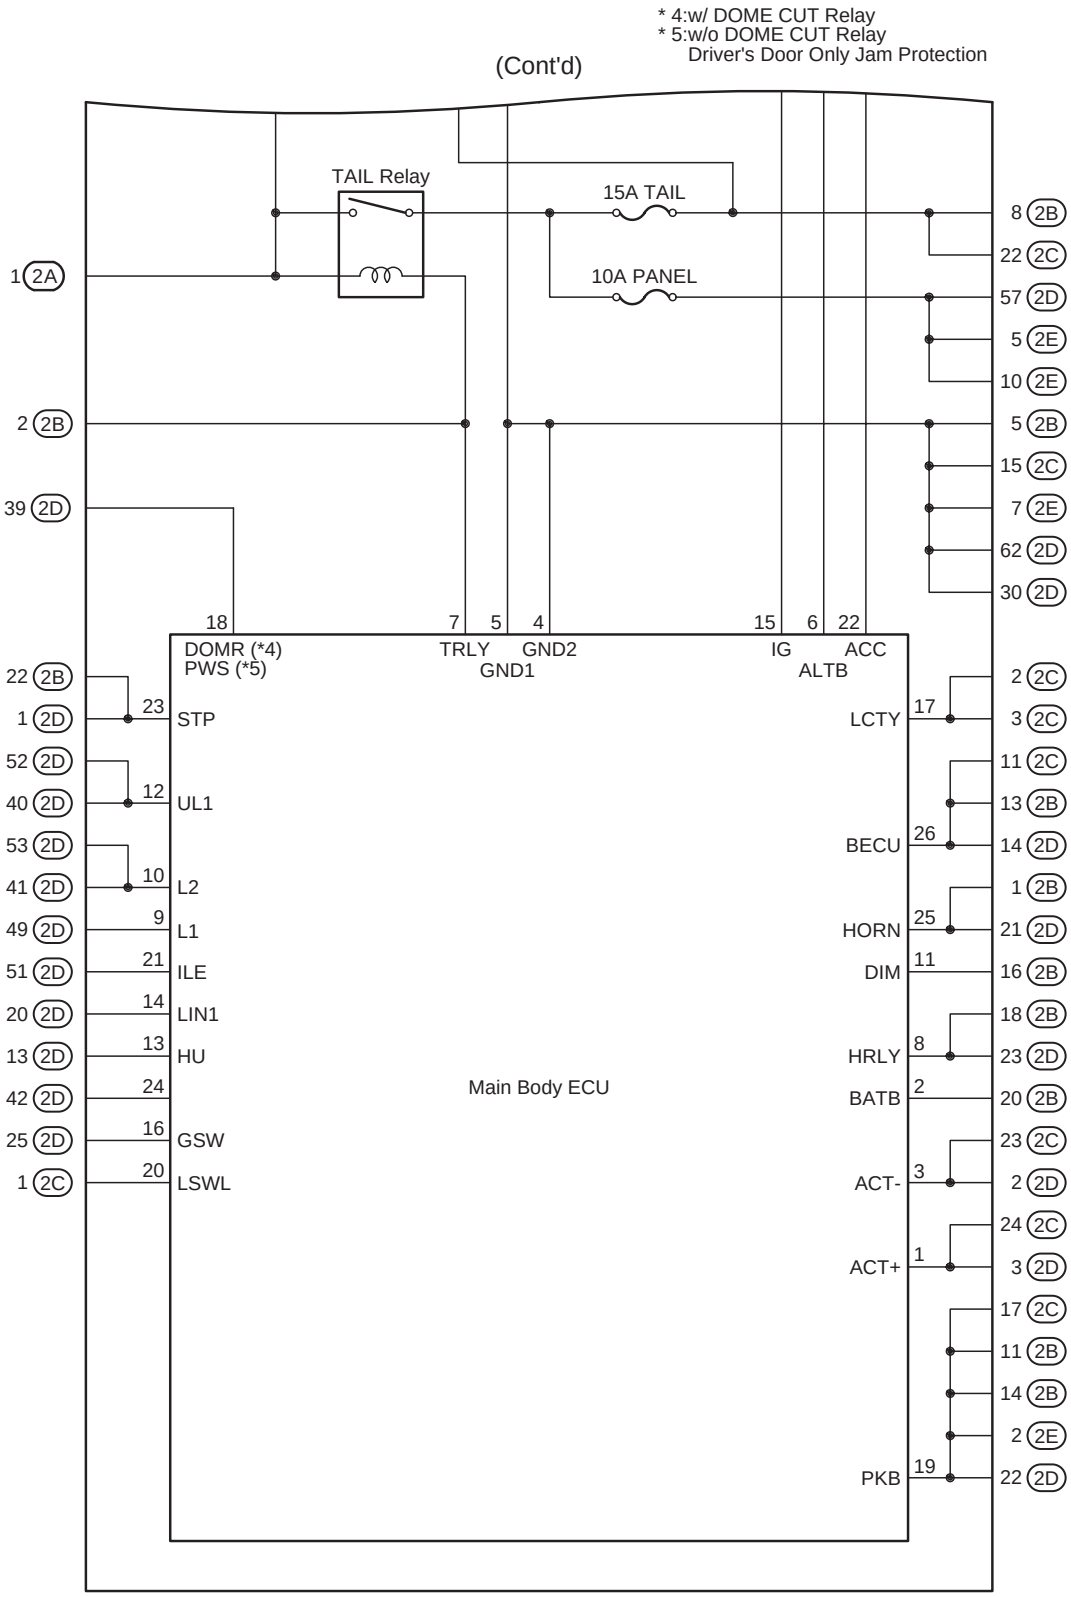


F RELAY LOCATIONS

: Cowl Side J/B LH Assembly	Cowl Side Left (See Page 21)

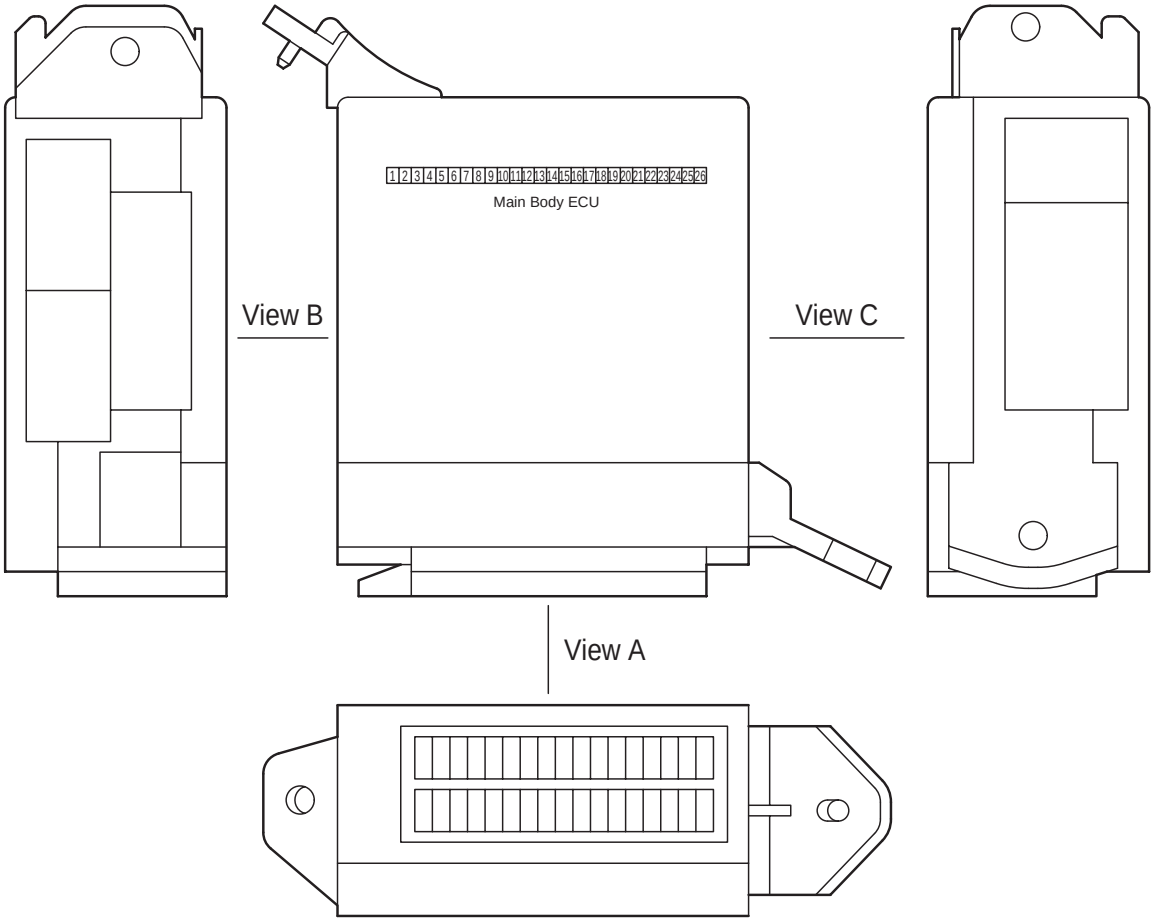


View A

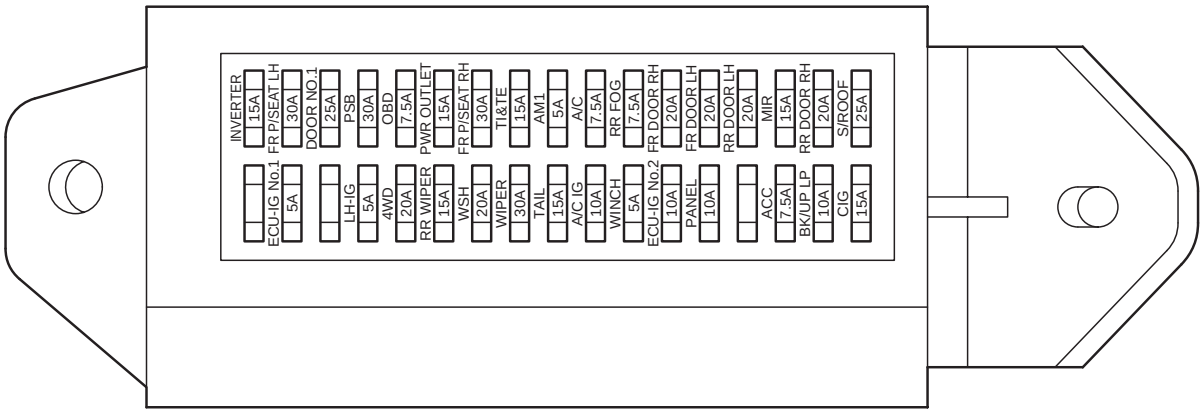

INVERTER 15A
FR P/SEAT LH 30A
DOOR NO.1 25A
PSB 30A
OBD 7.5A
PWR OUTLET 15A
FR P/SEAT RH 30A
TI&TE 15A
AM1 5A
A/C 7.5A
RR FOG 7.5A
FR DOOR RH 20A
FR DOOR LH 20A
RR DOOR LH 20A
MIR 15A
RR DOOR RH 20A
S/ROOF 25A
ECU-IG No.1 5A
LH-IG 5A
4WD 20A
RR WIPER 15A
WSH 20A
WIPER 30A
TAIL 15A
A/C IG 10A
WINCH 5A
ECU-IG No.2 10A
PANEL 10A
ACC 7.5A
BK/UP LP 10A
CIG 15A

F RELAY LOCATIONS


: Cowl Side J/B LH Assembly	Cowl Side Left (See Page 21)

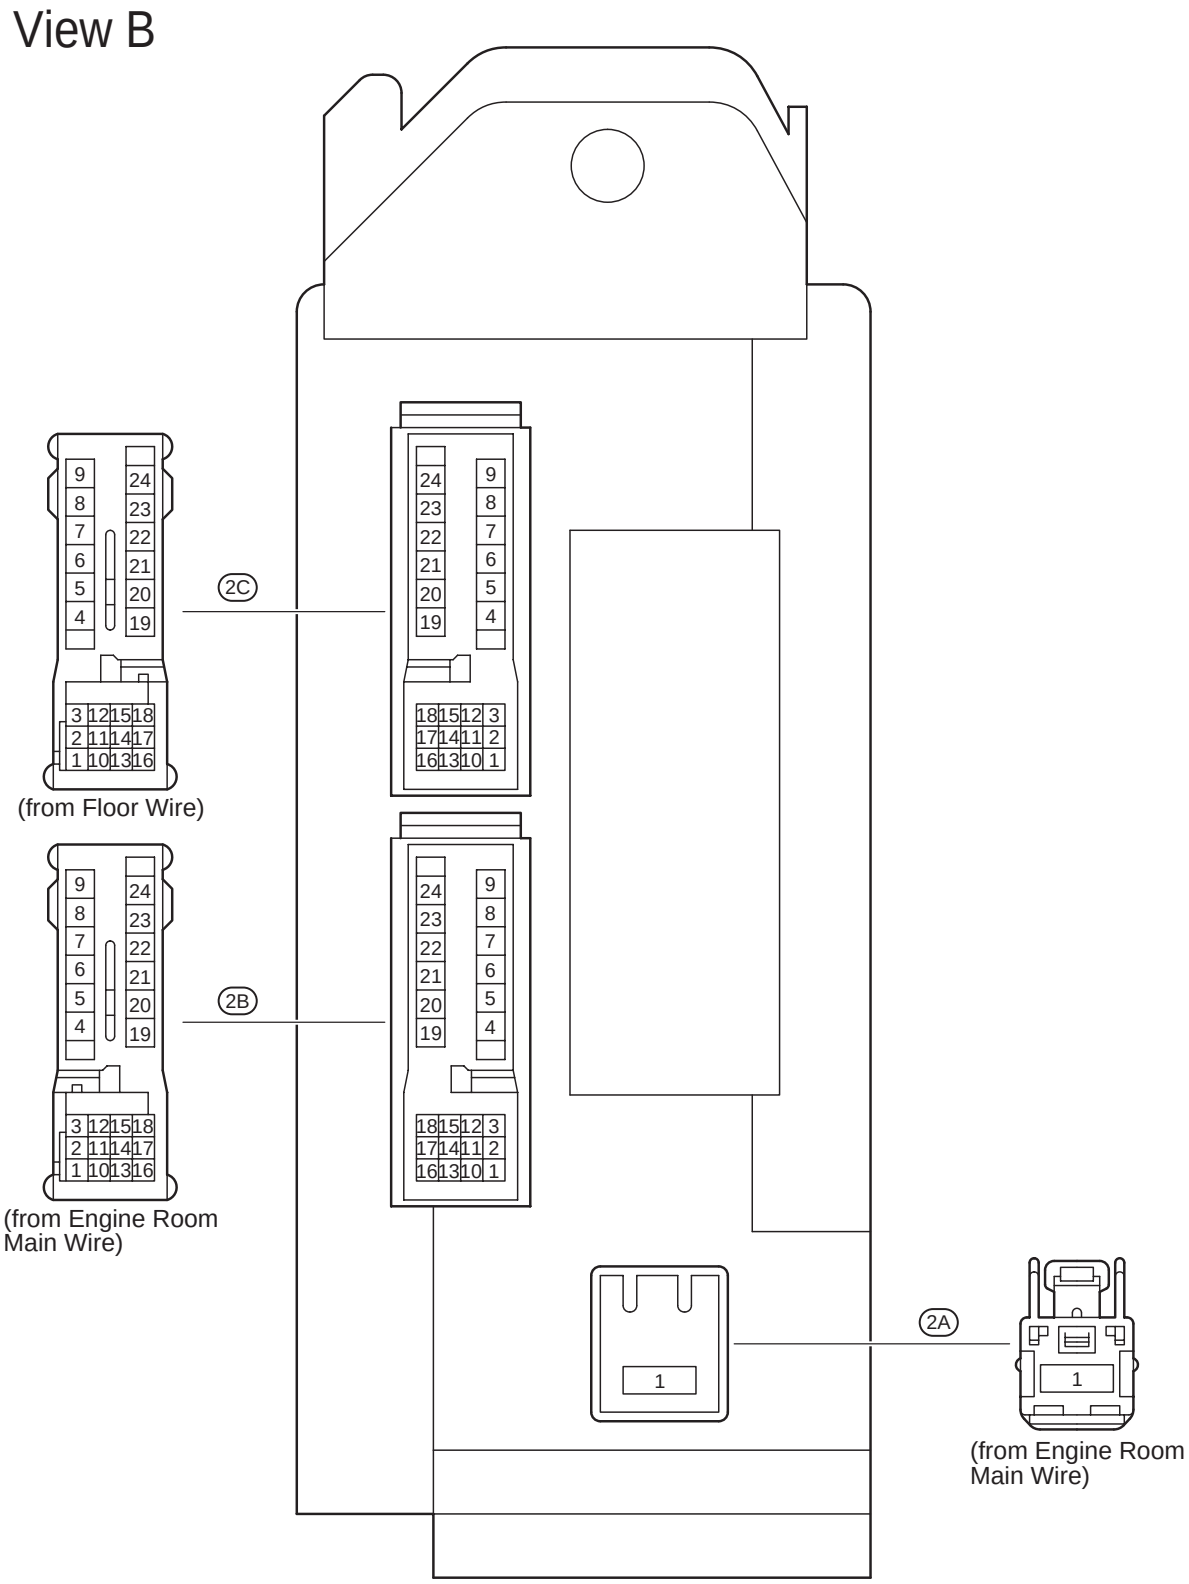


View C

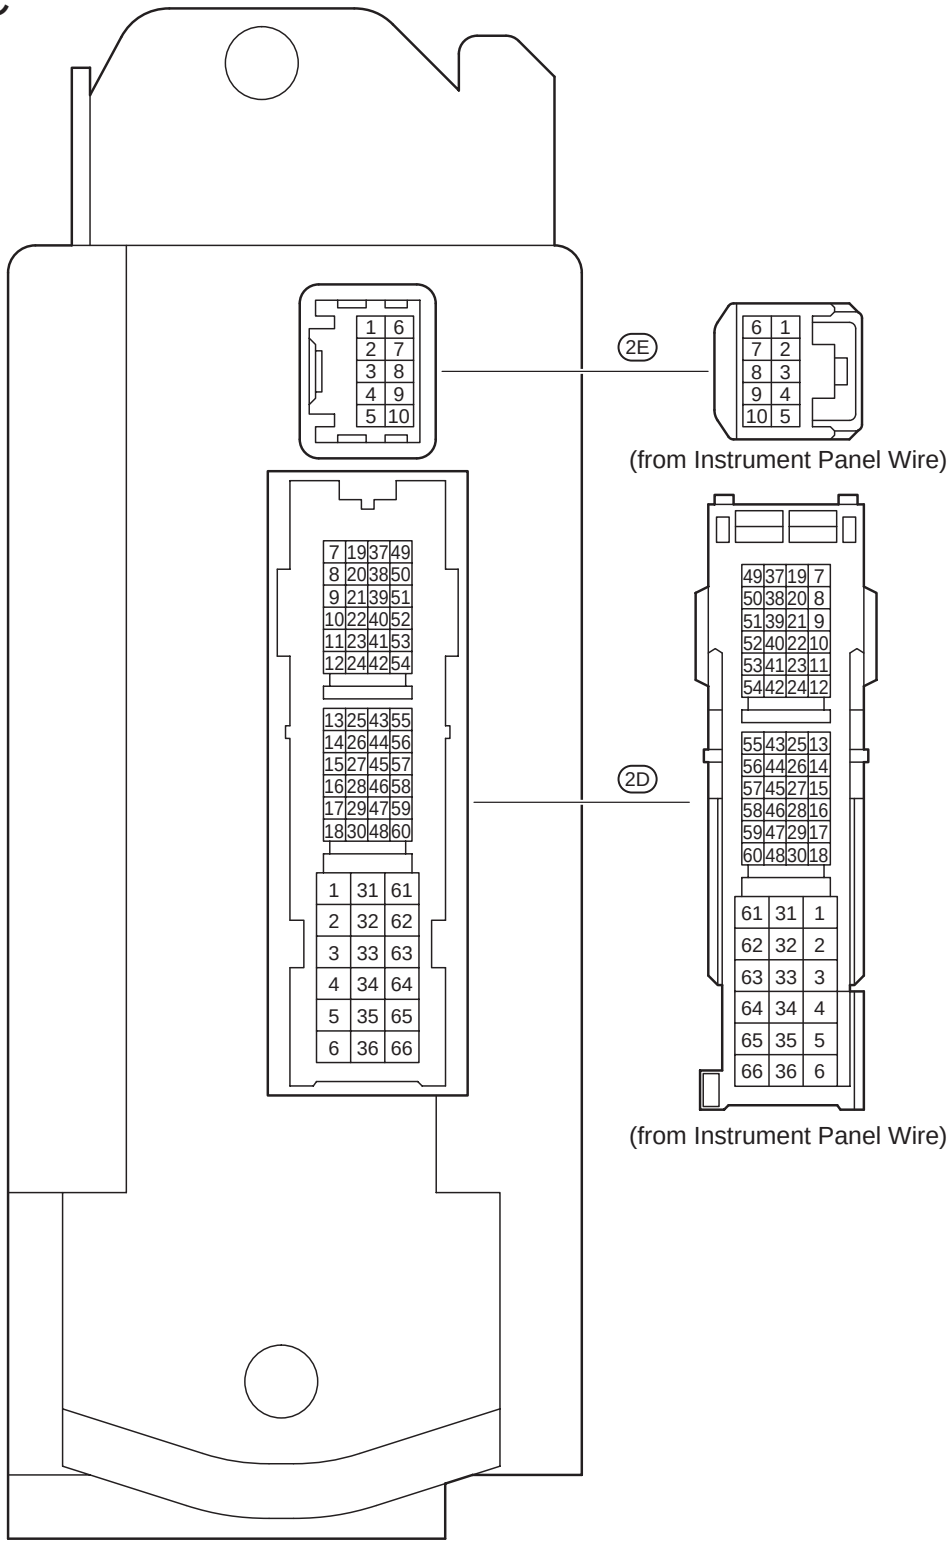
1 6
2 7
3 8
4 9
5 10
2E
6 1
7 2
8 3
9 4
10 5
(from Instrument Panel Wire)
7 19 37 49
8 20 38 50
9 21 39 51
10 22 40 52
11 23 41 53
12 24 42 54
13 25 43 55
14 26 44 56
15 27 45 57
16 28 46 58
17 29 47 59
18 30 48 60
1 31 61
2 32 62
3 33 63
4 34 64
5 35 65
6 36 66
2D
49 37 19 7
50 38 20 8
51 39 21 9
52 40 22 10
53 41 23 11
54 42 24 12
55 43 25 13
56 44 26 14
57 45 27 15
58 46 28 16
59 47 29 17
60 48 30 18
61 31 1
62 32 2
63 33 3
64 34 4
65 35 5
66 36 6
(from Instrument Panel Wire)

[Cowl Side J/B RH Assembly Inner Circuit]
(LHD)

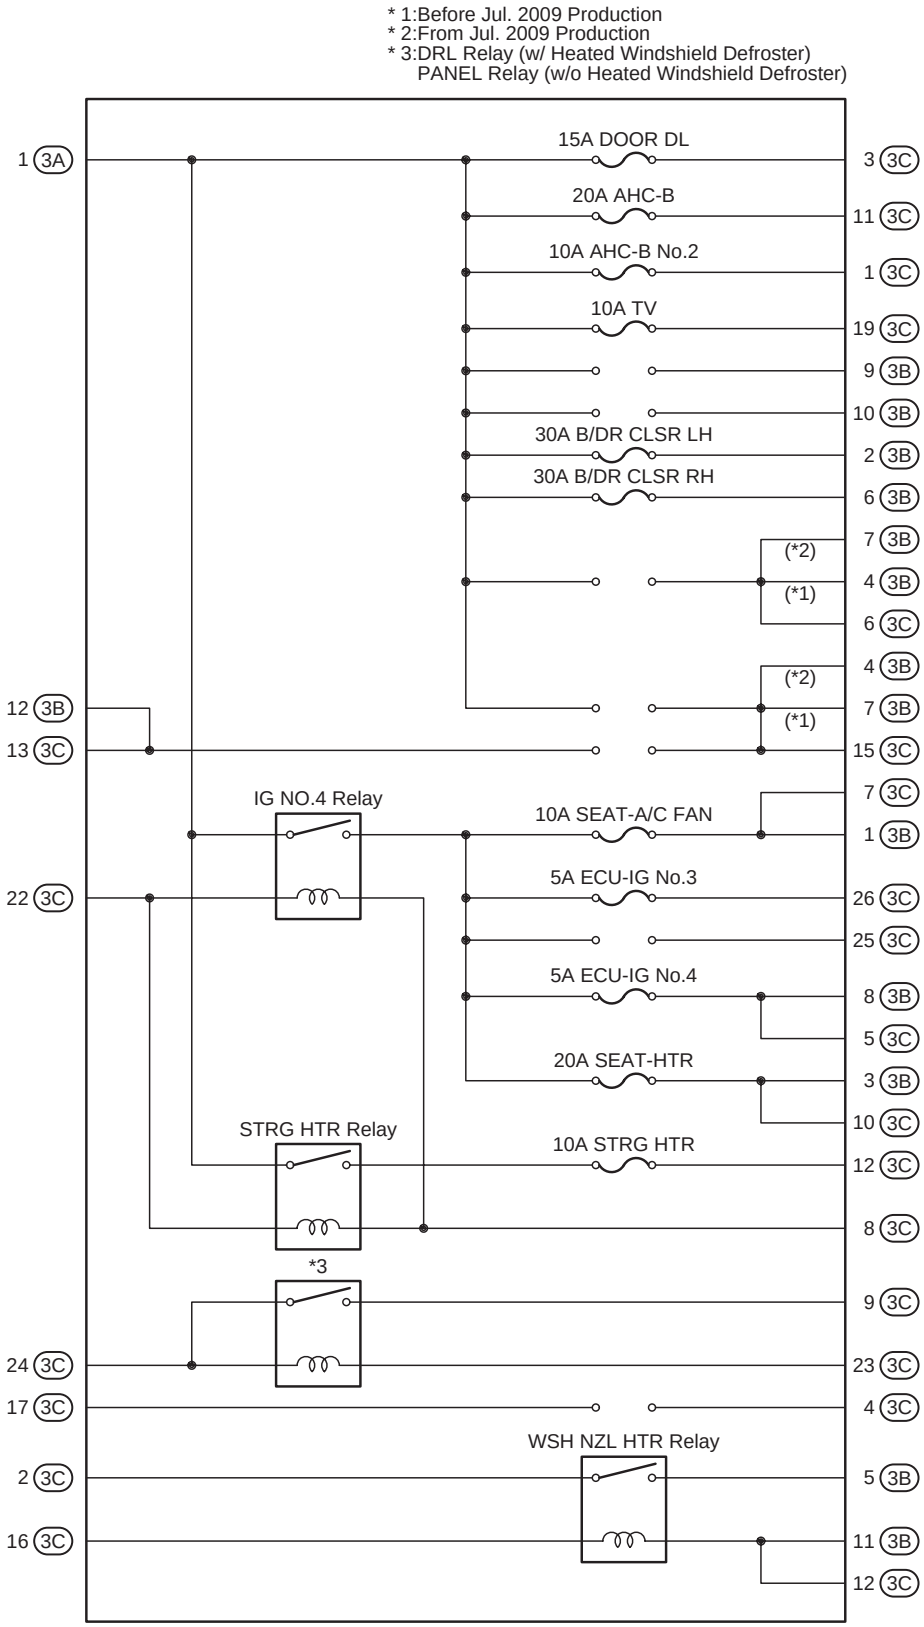


[Cowl Side J/B RH Assembly Inner Circuit]
(RHD)

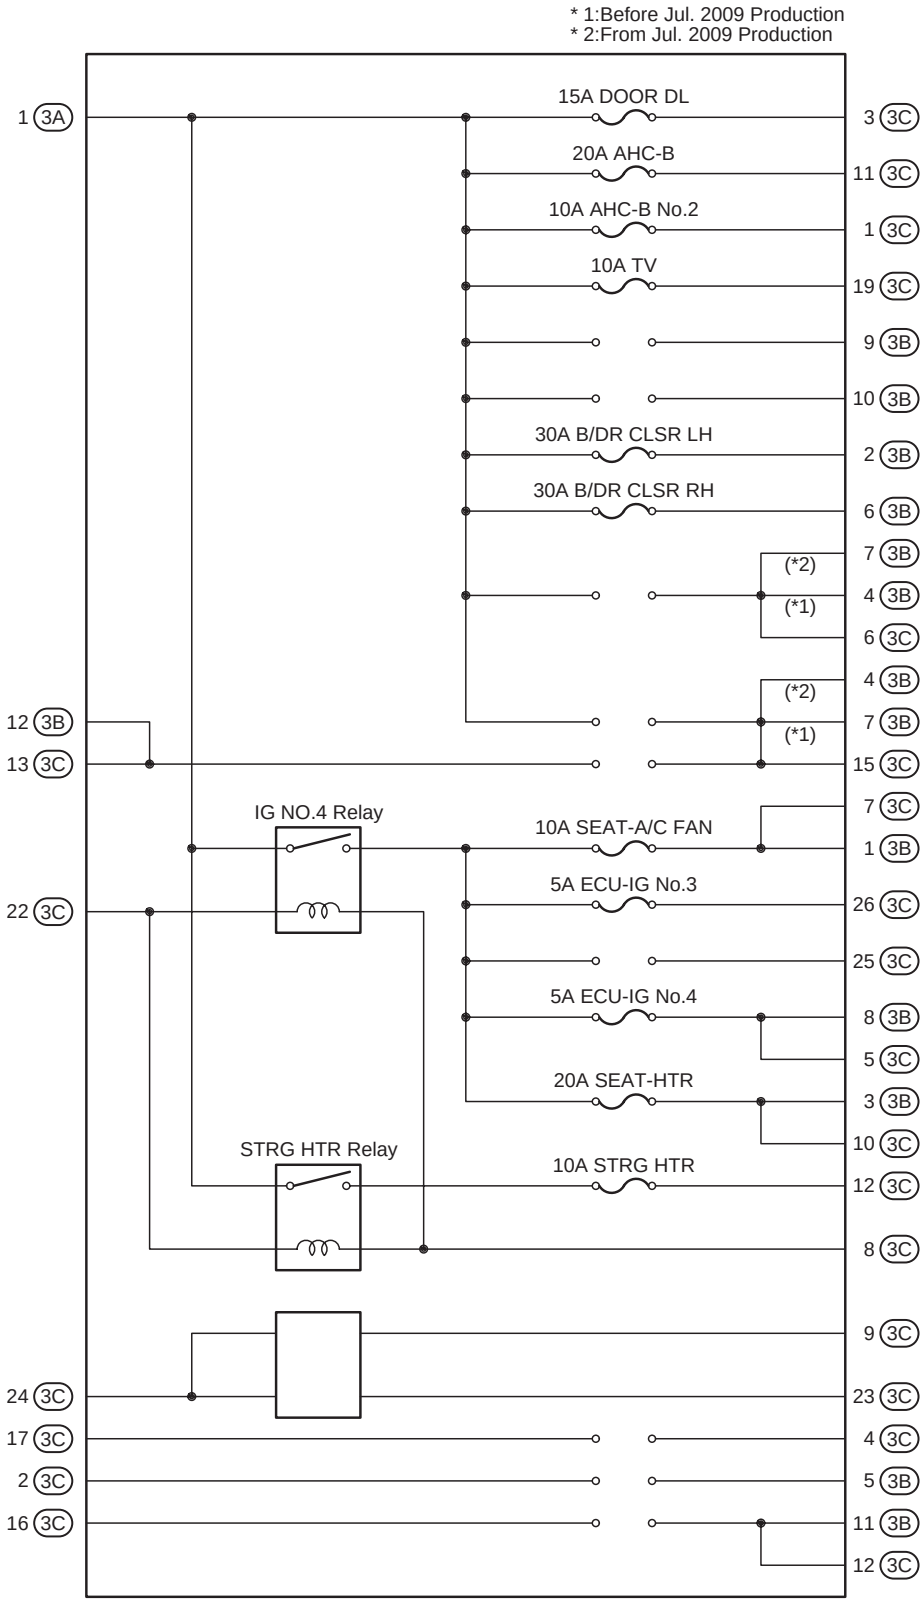

F RELAY LOCATIONS


: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)

(LHD)

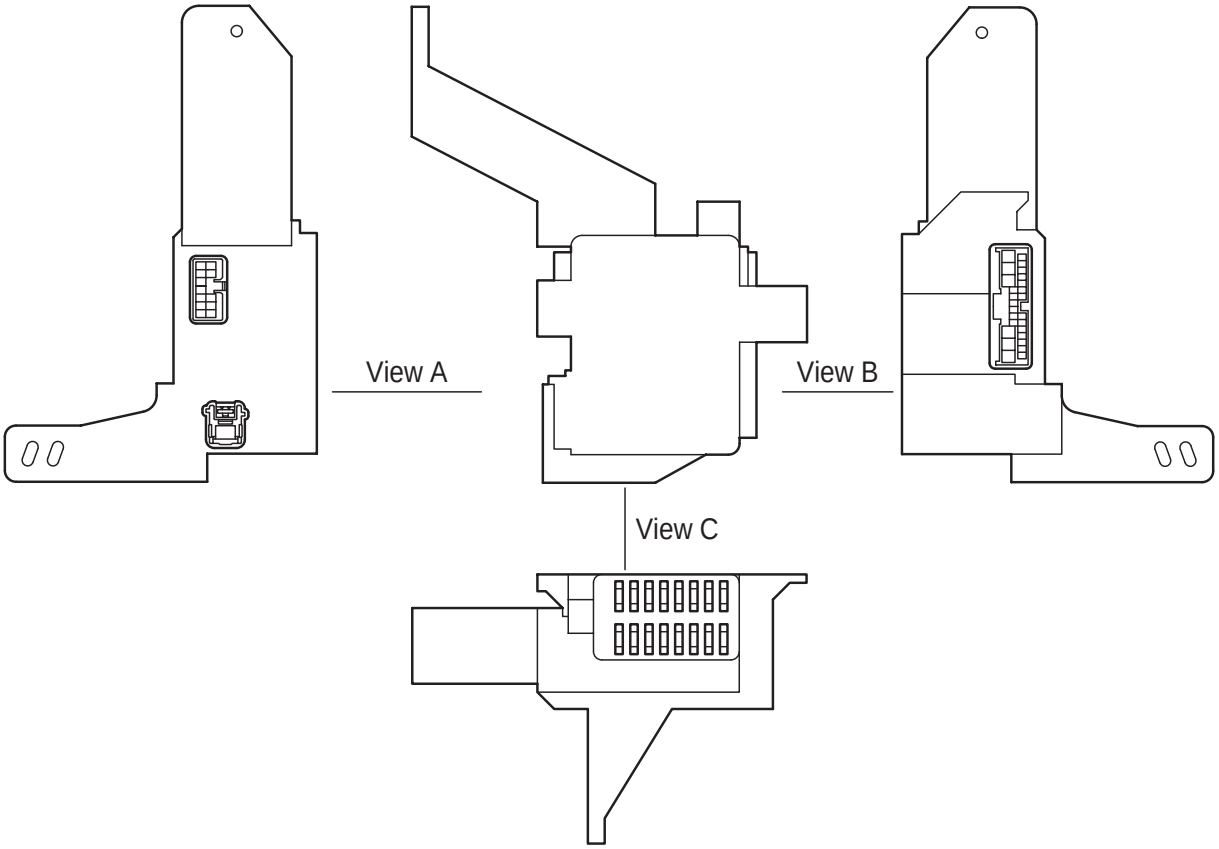

(LHD)

View A

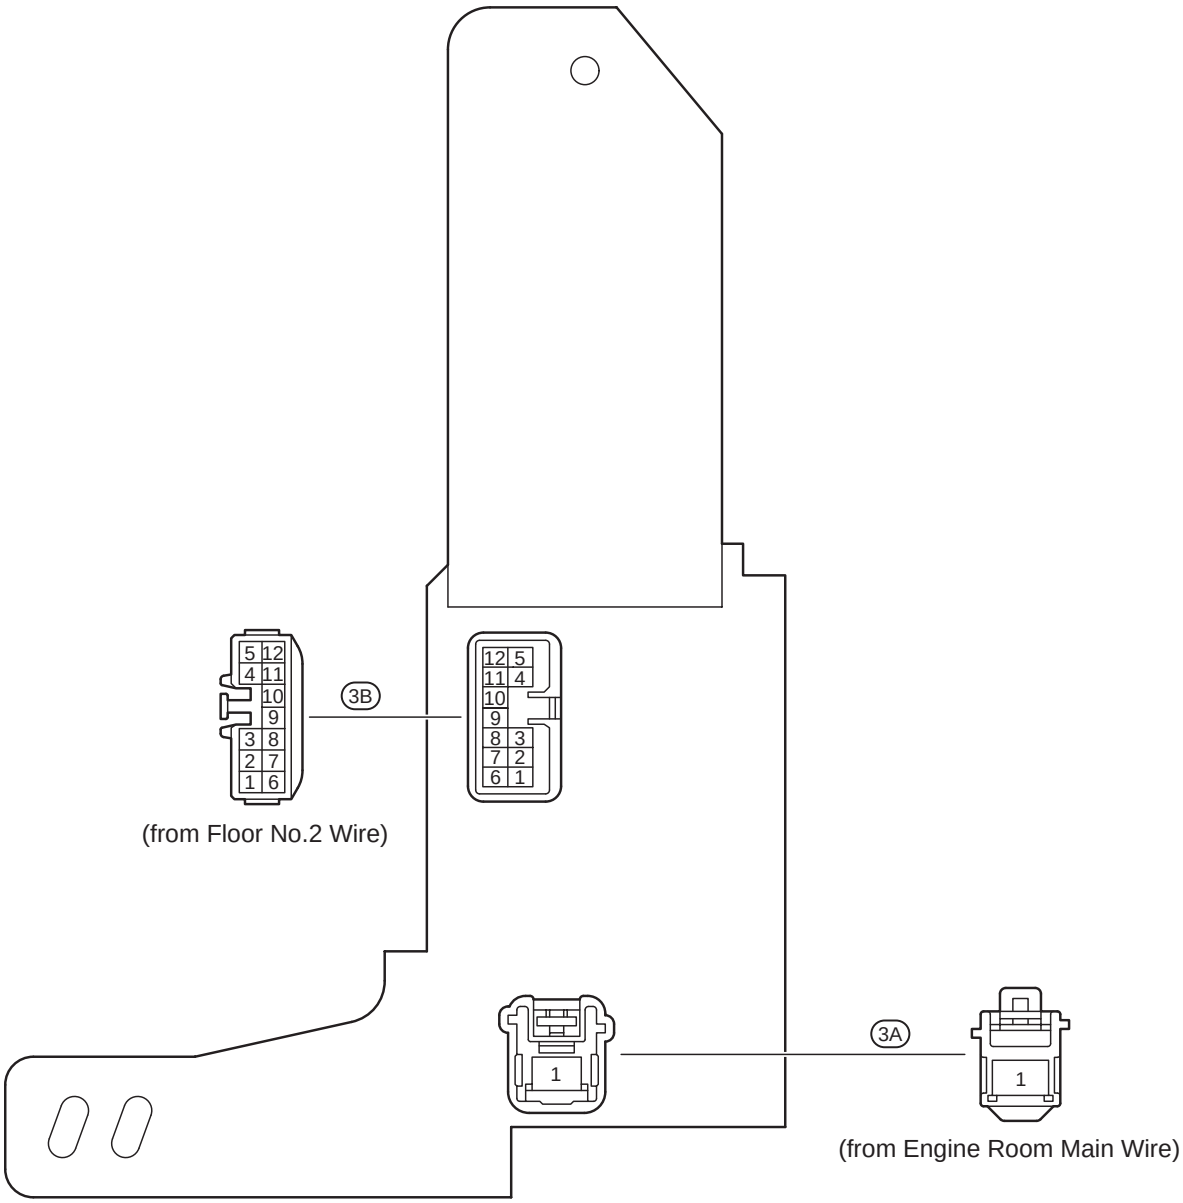

5 12
4 11
10
9
3 8
2 7
1 6
3B
12 5
11 4
10
9
8 3
7 2
6 1
(from Floor No.2 Wire)
1
3A
1
(from Engine Room Main Wire)

F RELAY LOCATIONS

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)


(LHD)

View B

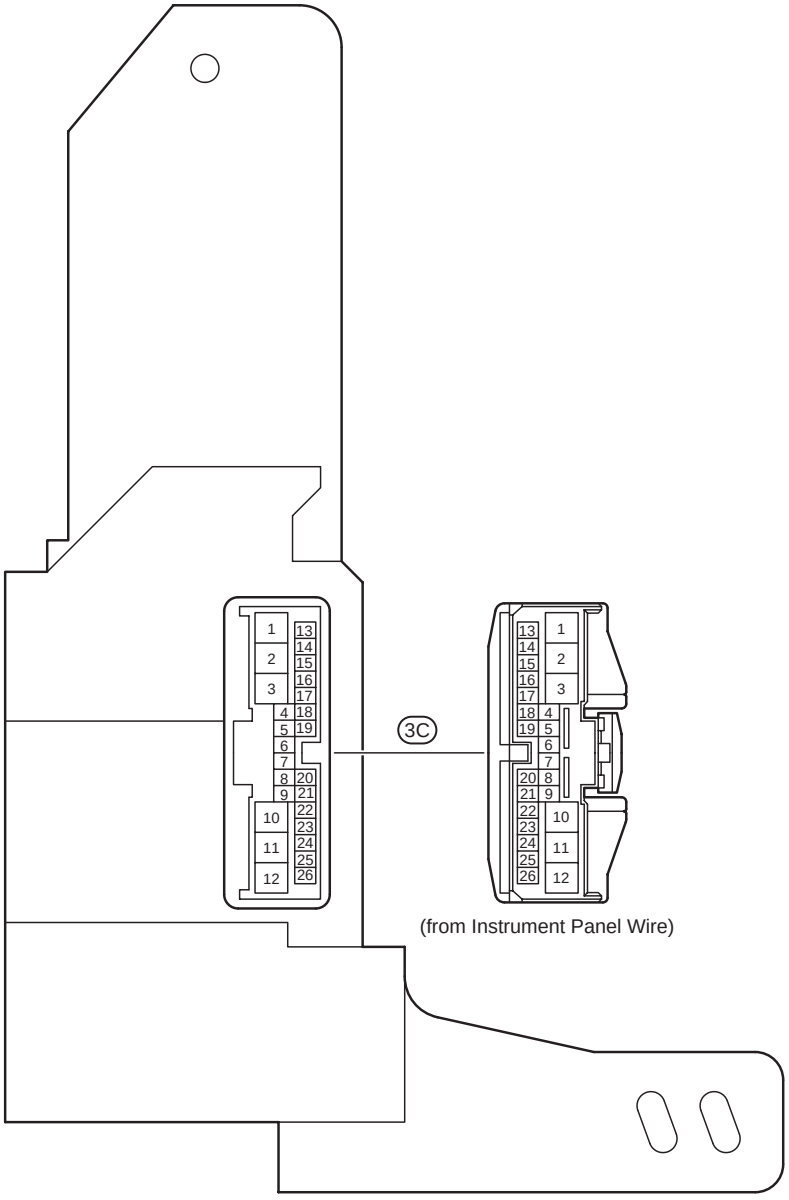

(LHD)


View C

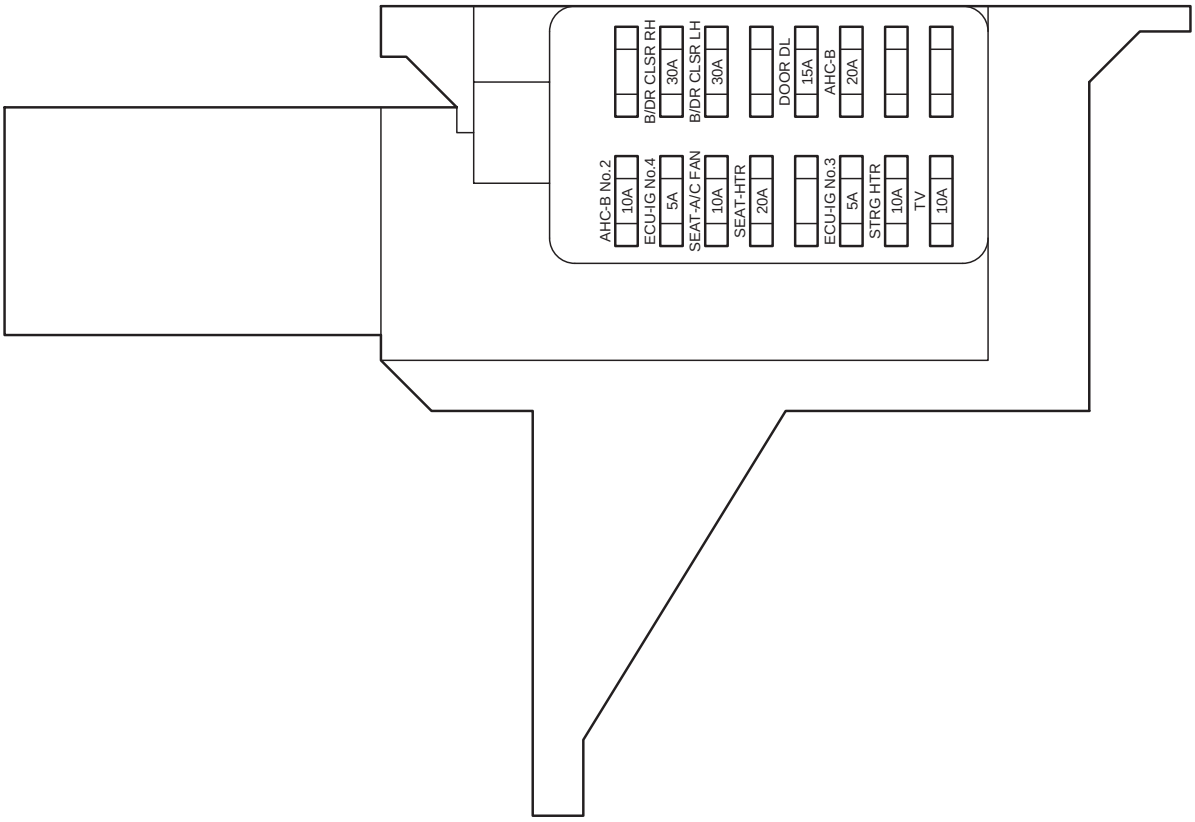
B/DR CLSR RH
30A
B/DR CLSR LH
30A
DOOR DL
15A
AHC-B
20A
AHC-B No.2
10A
ECU-IG No.4
5A
SEAT-A/C FAN
10A
SEAT-HTR
20A
ECU-IG No.3
5A
STRG HTR
10A
TV
10A

F RELAY LOCATIONS


: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)

(RHD)

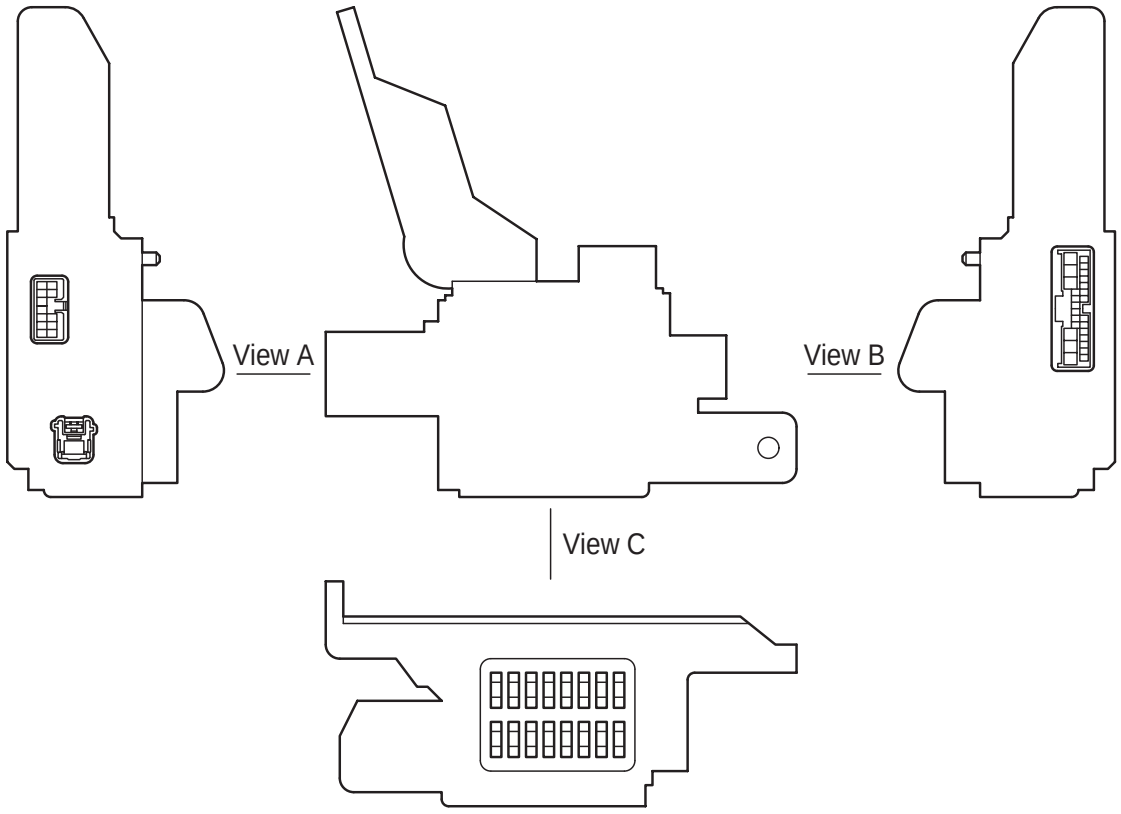

(RHD)

View A

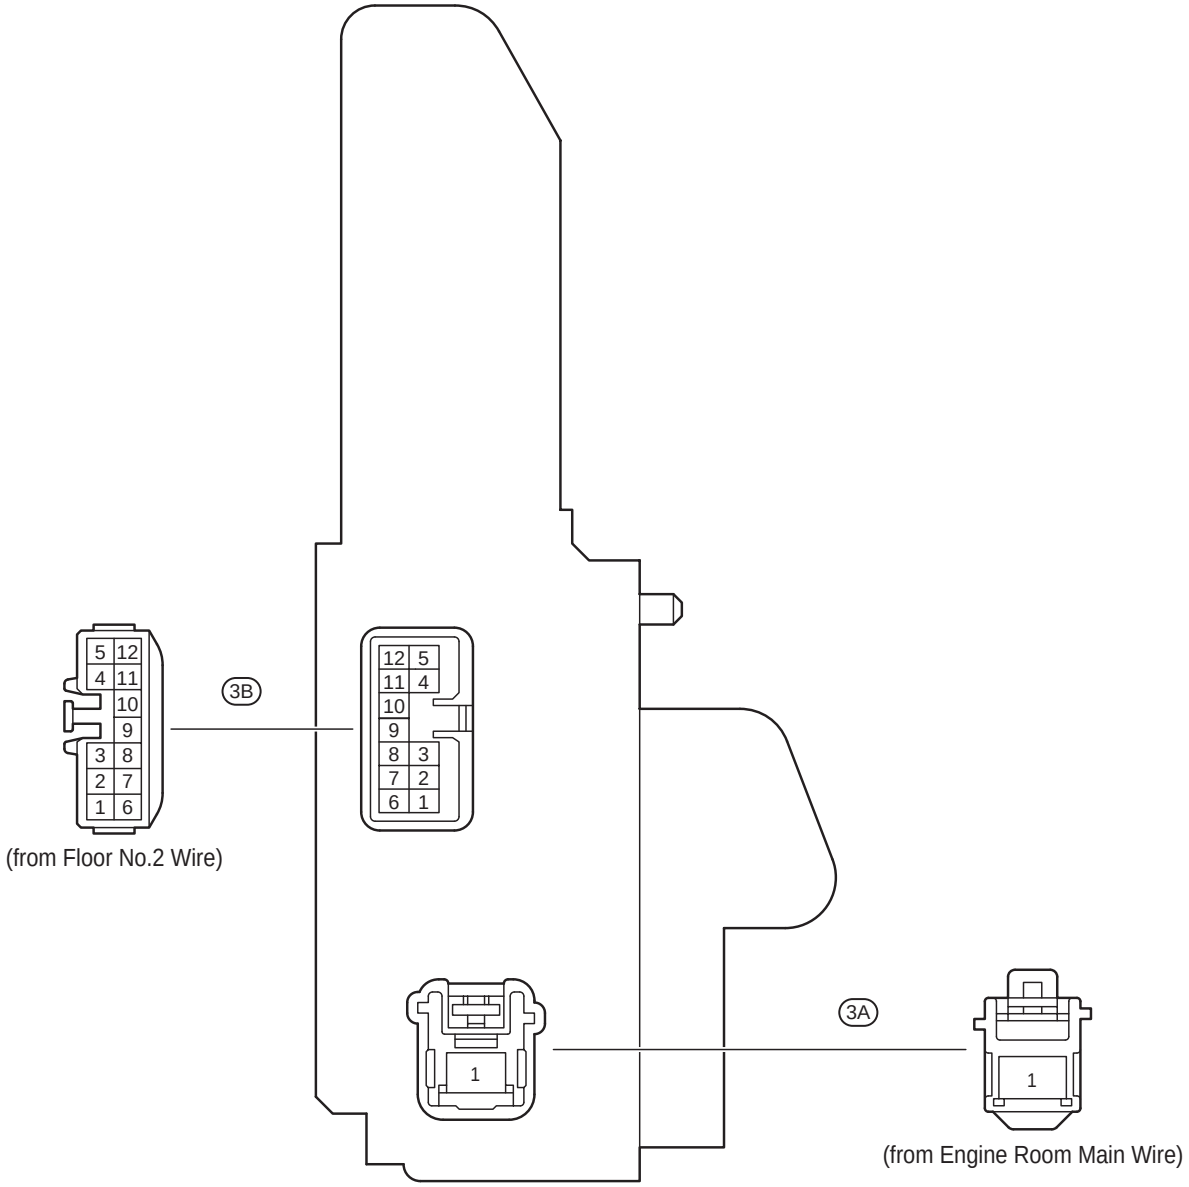

5 12
4 11
10
9
3 8
2 7
1 6
3B
12 5
11 4
10
9
8 3
7 2
6 1
(from Floor No.2 Wire)
1
3A
1
(from Engine Room Main Wire)

F RELAY LOCATIONS

: Cowl Side J/B RH Assembly	Cowl Side Right (See Page 21)


(RHD)

View B

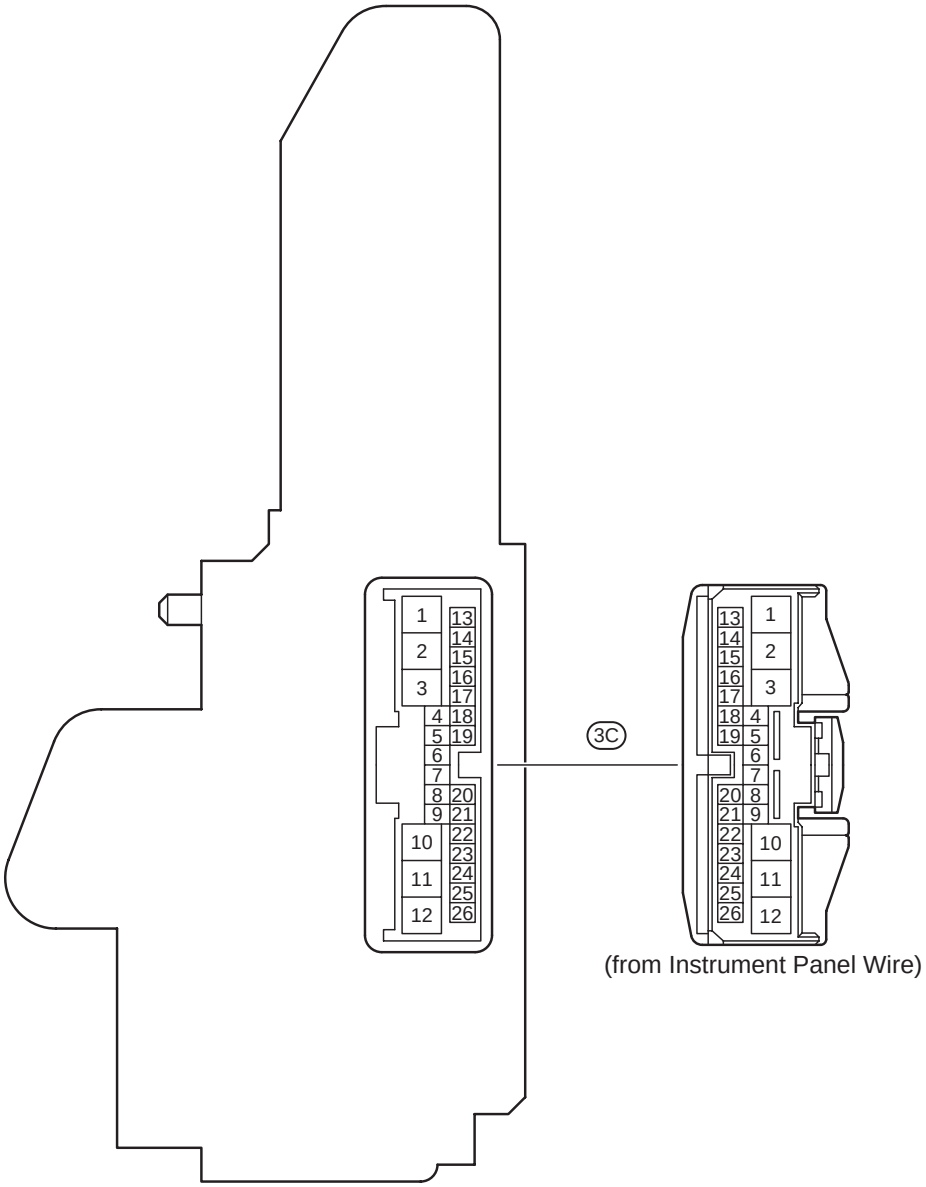


(RHD)

View C

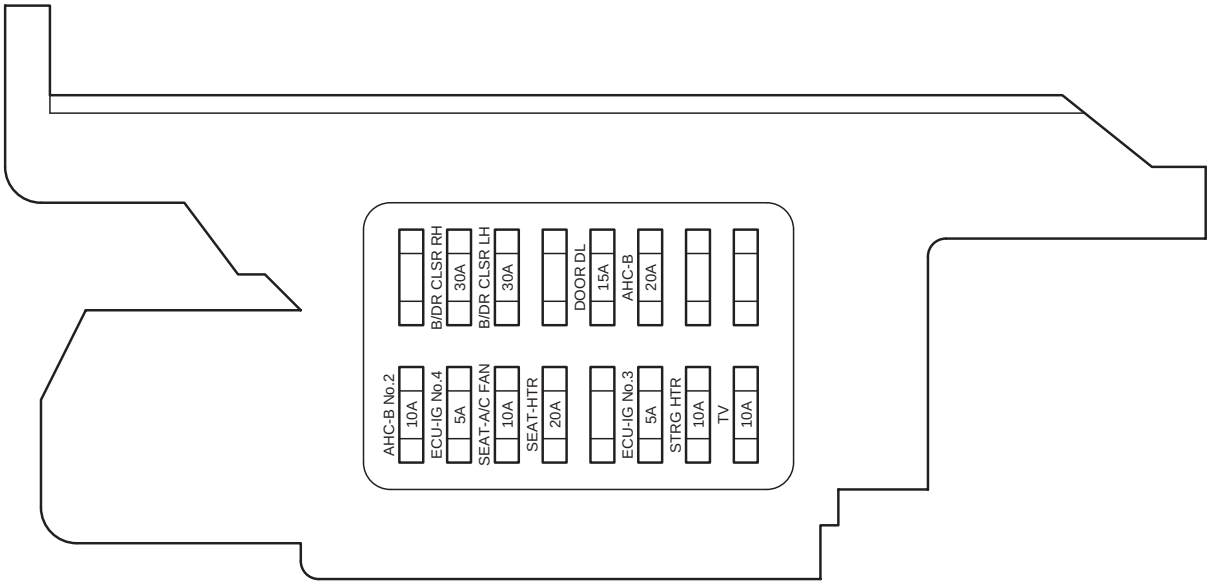

AHC-B No.2
10A
ECU-IG No.4
5A
SEAT-A/C FAN
10A
SEAT-HTR
20A
B/DR CLSR RH
30A
B/DR CLSR LH
30A
DOOR DL
15A
AHC-B
20A
ECU-IG No.3
5A
STRG HTR
10A
TV
10A

F RELAY LOCATIONS

[Engine Compartment]
(LHD)

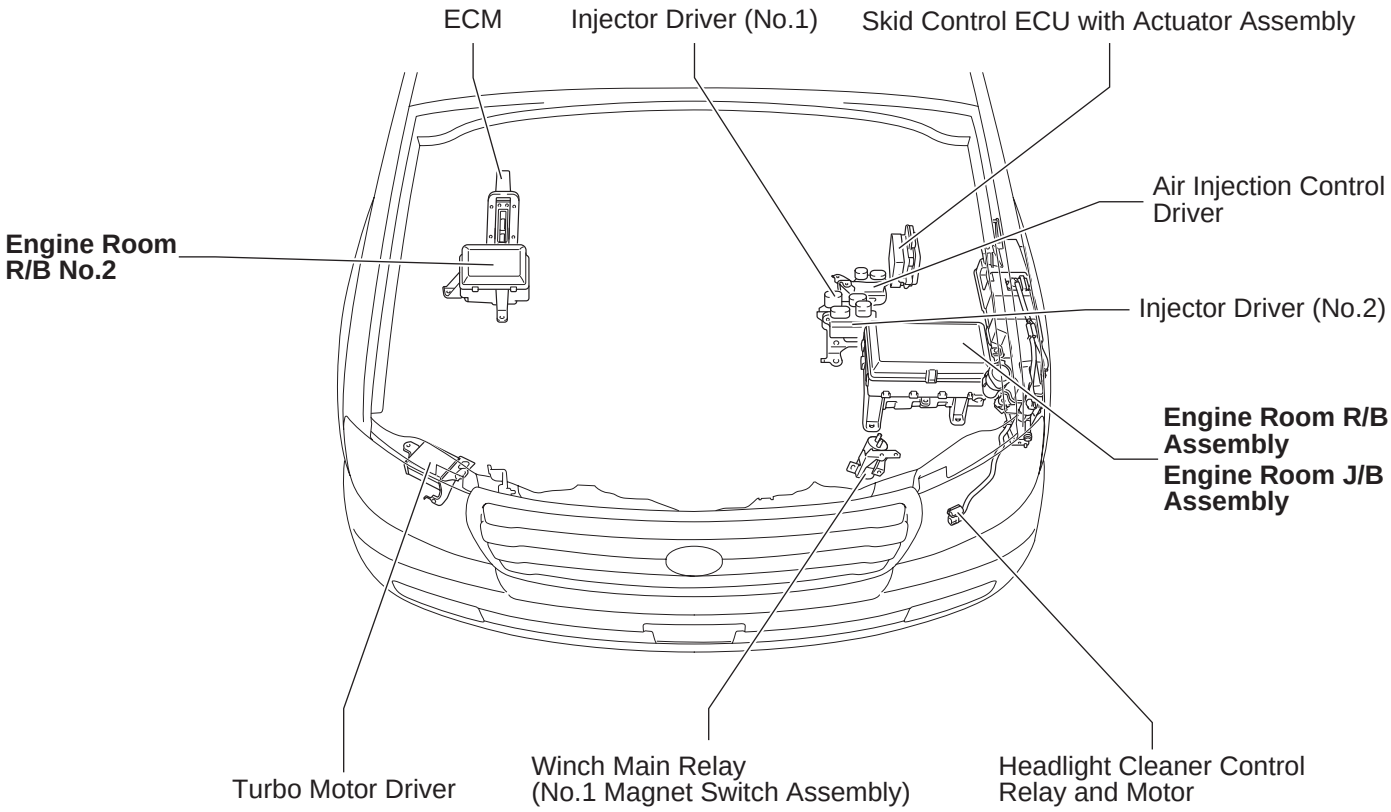


(RHD)

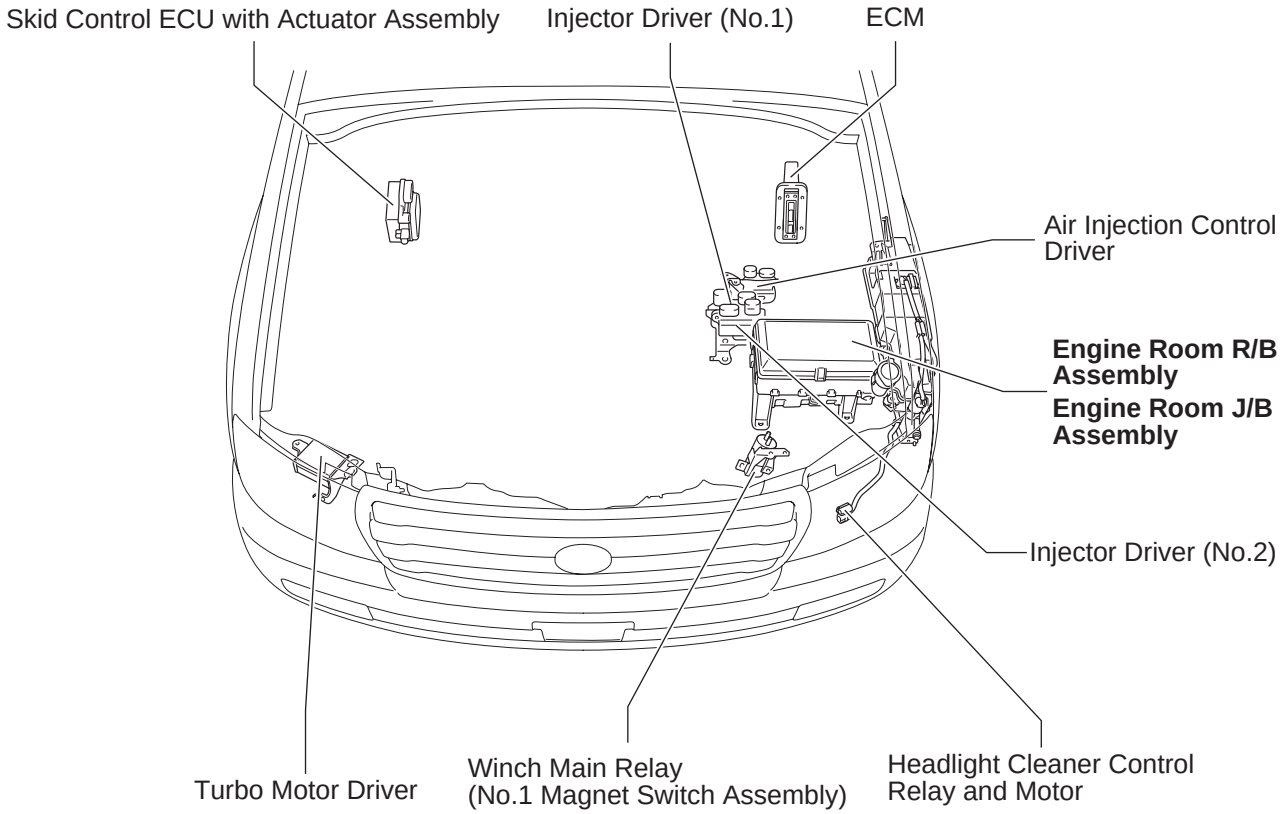


F RELAY LOCATIONS

[Engine Compartment]
(LHD)

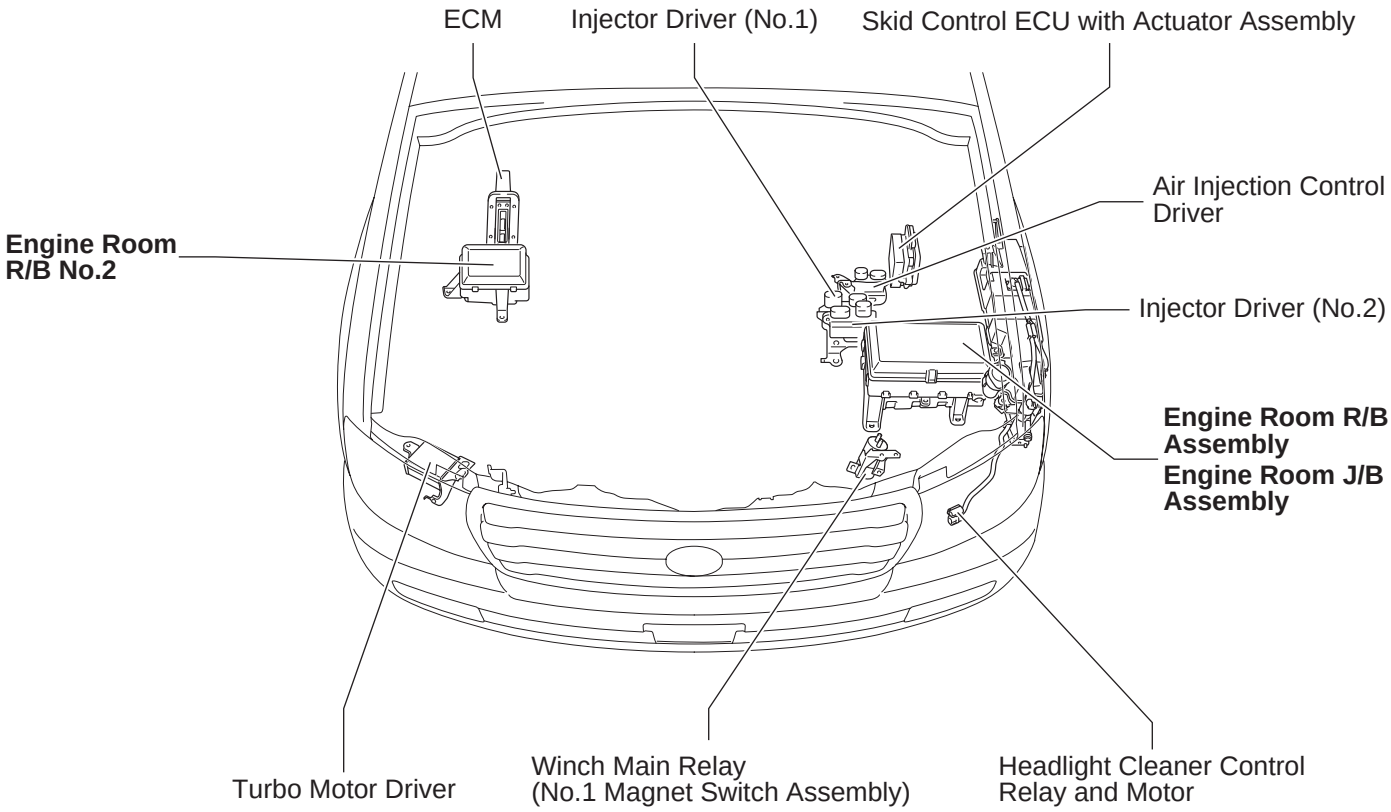


(RHD)

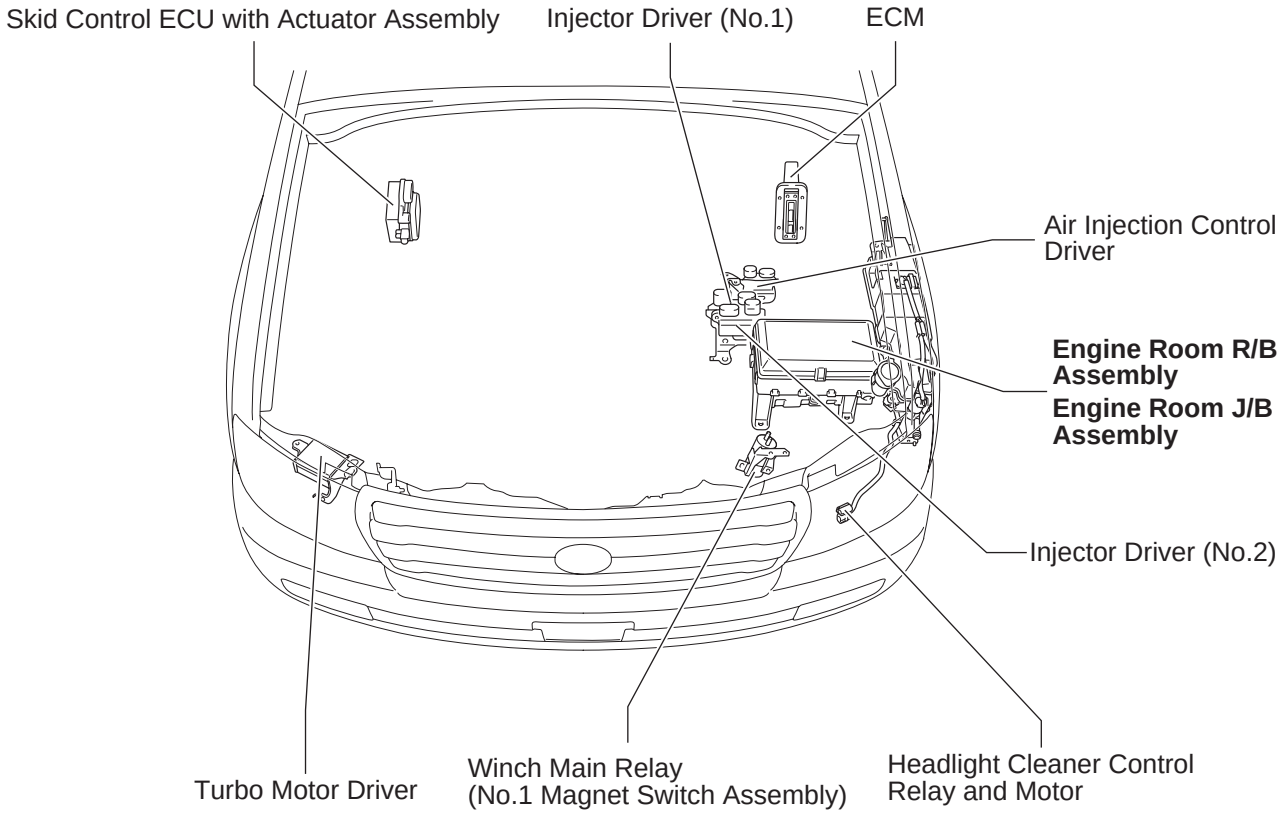

F RELAY LOCATIONS


④ : Engine Room R/B No.2	Engine Compartment Right (See Page 20)

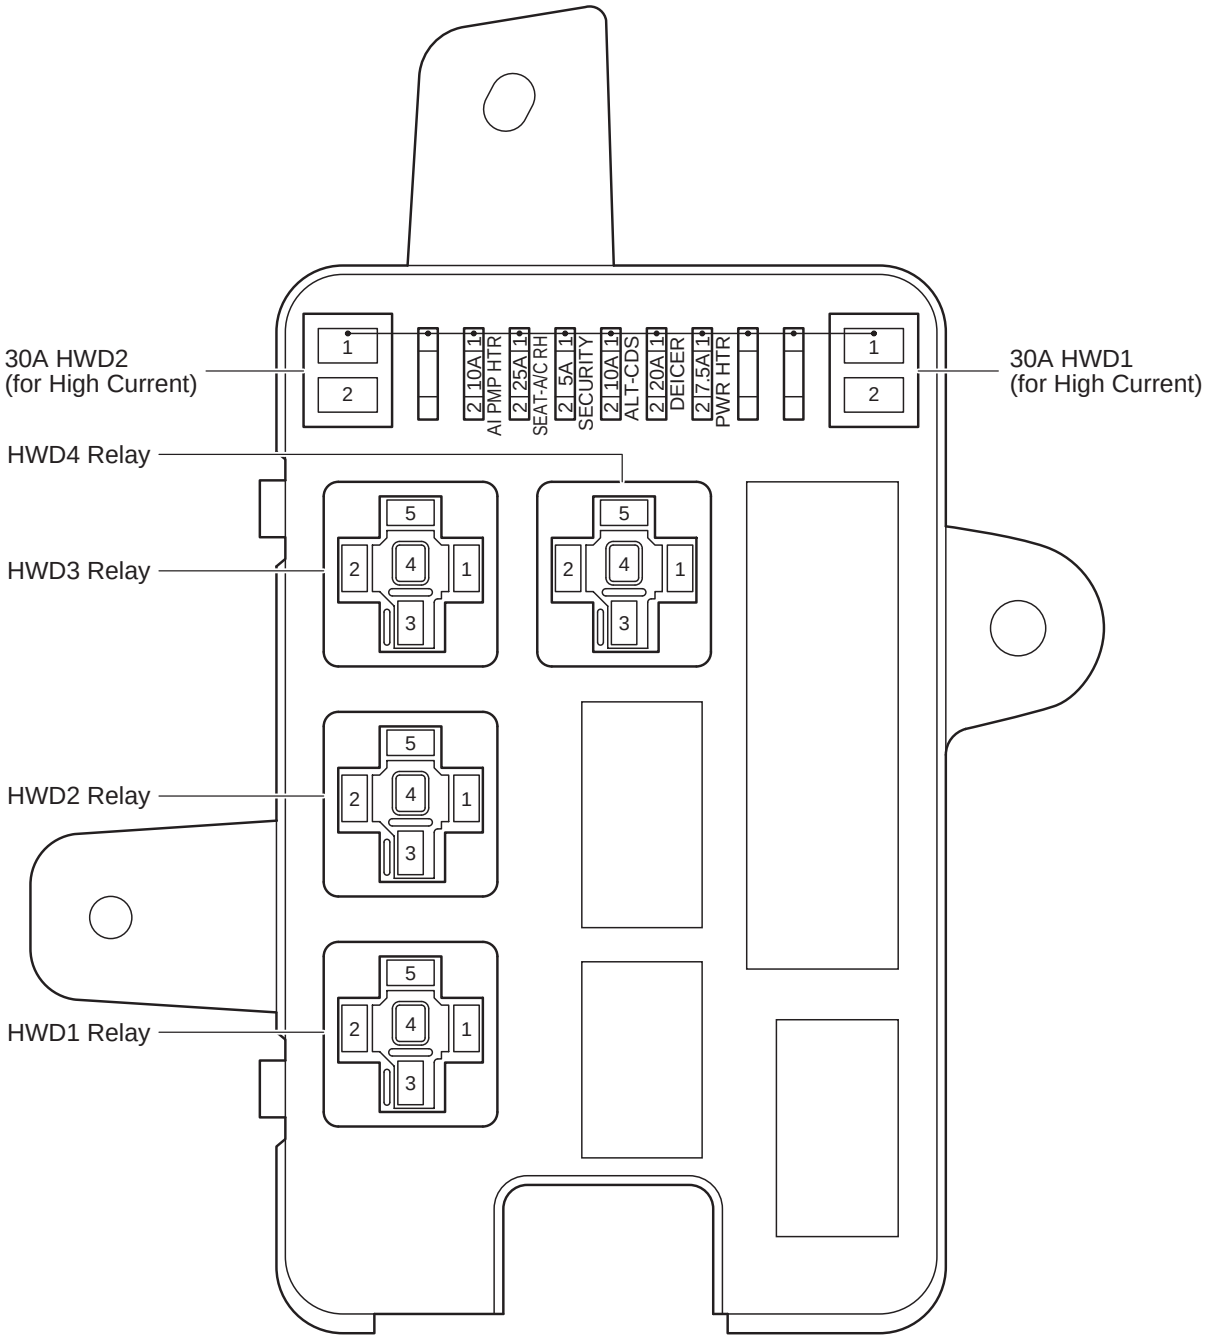


F RELAY LOCATIONS

[Engine Room R/B Assembly and Engine Room J/B Assembly Inner Circuit]

* 1:180A ALT (Except 1GR-FE)
  140A ALT (1GR-FE)
* 2:30A AMP
  (Before Jul. 2009 Production)
  30A AMP1
  (From Jul. 2009 Production)
* 3:3UR-FE, 1UR-FE (w/ Heated Windshield Defroster)
* 4:Except *3
* 5:20A EFI MAIN 2 (Gasoline)
  20A F/PMP (Diesel)
* 6:60A AHC
  (Before Jan. 2013 Production)
  100A SUB-R/B
  (w/ Heated Windshield Defroster)
* 7:5A DOME1
  (Before Jan. 2013 Production, From Jan. 2013 Production China)
  10A DOME1
  (From Jan. 2013 Production Except China)
* 9:15A A/F (1VD-FTV w/ DPF)
  10A ETCS (Gasoline)

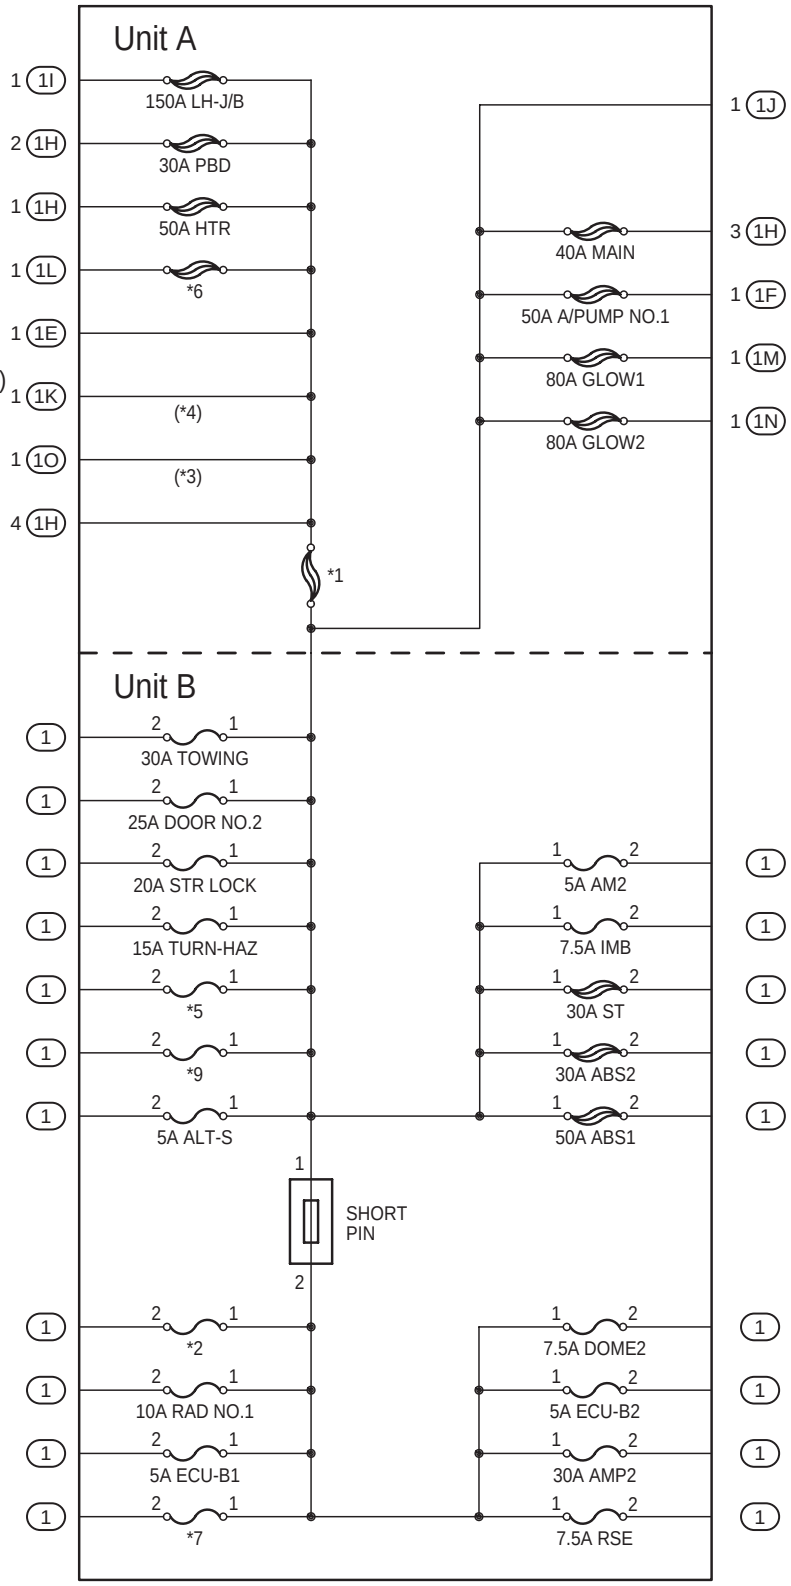


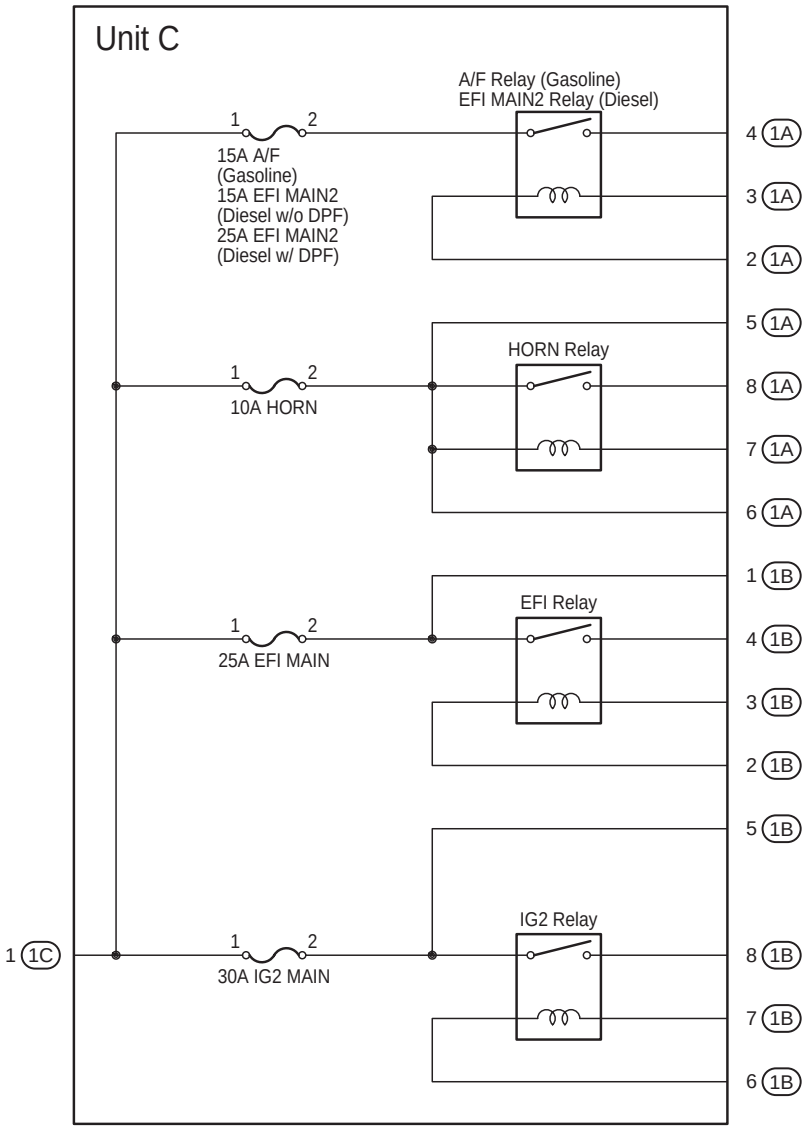
Unit C
A/F Relay (Gasoline)
EFI MAIN2 Relay (Diesel)
1
2
15A A/F
(Gasoline)
15A EFI MAIN2
(Diesel w/o DPF)
25A EFI MAIN2
(Diesel w/ DPF)
4 1A
3 1A
2 1A
5 1A
HORN Relay
1
2
10A HORN
8 1A
7 1A
6 1A
1 1B
EFI Relay
1
2
25A EFI MAIN
4 1B
3 1B
2 1B
5 1B
IG2 Relay
1 1C
1
2
30A IG2 MAIN
8 1B
7 1B
6 1B

F RELAY LOCATIONS

① : Engine Room R/B Assembly ⬭ : Engine Room J/B Assembly	**Engine Compartment Left (See Page 20)**


* 1:DEFOG Relay
* 2:EDU 2 Relay
* 3:EDU 1 Relay
* 4:IG1 NO.5 Relay
* 5:EFI NO.2 Relay (3UR-FE, 1UR-FE)
  A/F Relay (1VD-FTV w/ DPF)
* 6:RR A/C Relay
* 7:ST Relay (Gasoline Before Jan. 2013 Production,
  Gasoline From Jan. 2013 Production China)
  DOME CUT Relay (w/ DOME CUT Relay)
* 8:C/OPN Relay (Gasoline Before Jan. 2012 Production)
  AI-PMP HTR Relay (1UR-FE, 1GR-FE)
  SUB PUMP Relay (Diesel)
* 9:SECURITY
  HORN Relay
* 10:FR FOG Relay
* 11:PTC HTR1 Relay
* 12:ST CUT Relay
* 13:CDS FAN Relay
* 14:PTC HTR2 Relay
* 15:BRK LP Relay
* 16:MG CLT Relay
* 17:DEICER Relay
  (w/ Front Window Deicer)
  P/W MAIN Relay
  (Driver's Door Only Jam Protection)
* 18:PTC HTR3 Relay
* 19:ST Relay
  (Gasoline From Jan. 2013 Production
  Except China, Diesel)
* 20:HEAD HI Relay
* 21:HEAD LO Relay
* 22:60A AHC (Before Jan. 2013 Production)
  (for High Current)
  100A SUB-R/B
  (w/ Heated Windshield Defroster)
  (for High Current)
* 23:50A HTR (for High Current)
* 25:150A LH-J/B (for High Current)
* 26:180A ALT (Except 1GR-FE)
  (for High Current)
  140A ALT (1GR-FE)
  (for High Current)
* 27:50A A/PUMP NO.1 (Gasoline)
  (for High Current)
  80A GLOW1 (Diesel)
  (for High Current)
* 28:80A GLOW2 (for High Current)
* 29:40A MAIN (for High Current)
* 30:AHC Relay
* 31:GLOW 1 Relay
* 32:GLOW 2 Relay
* 33:VSCS HTR Relay (1VD-FTV)
  AI-VSV Relay
  (1UR-FE, 1GR-FE)
* 34:30A PBD (for High Current)

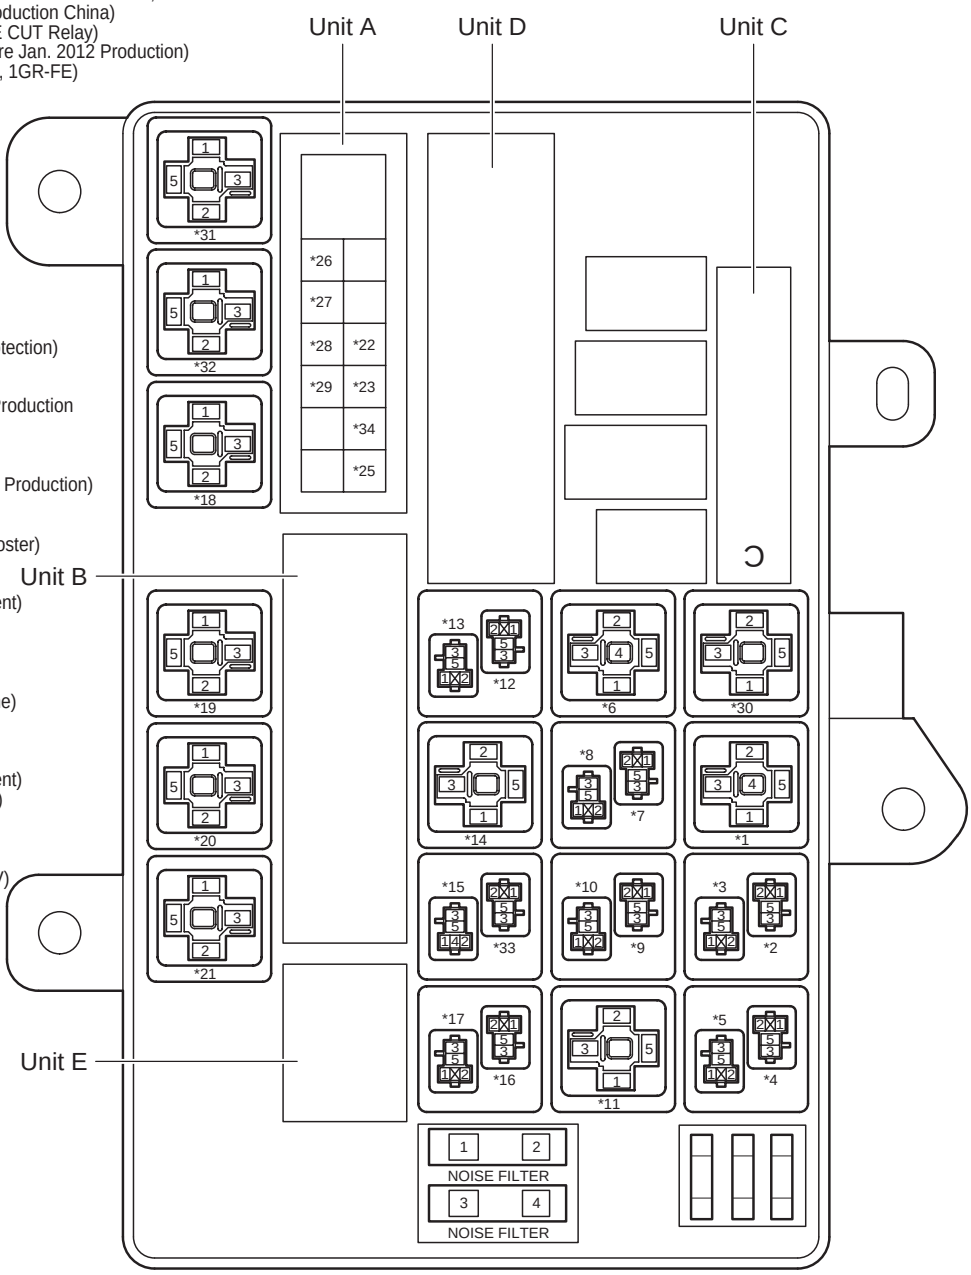

F RELAY LOCATIONS


(1) : Engine Room R/B Assembly ⬭ : Engine Room J/B Assembly	Engine Compartment Left (See Page 20)

(Gasoline)

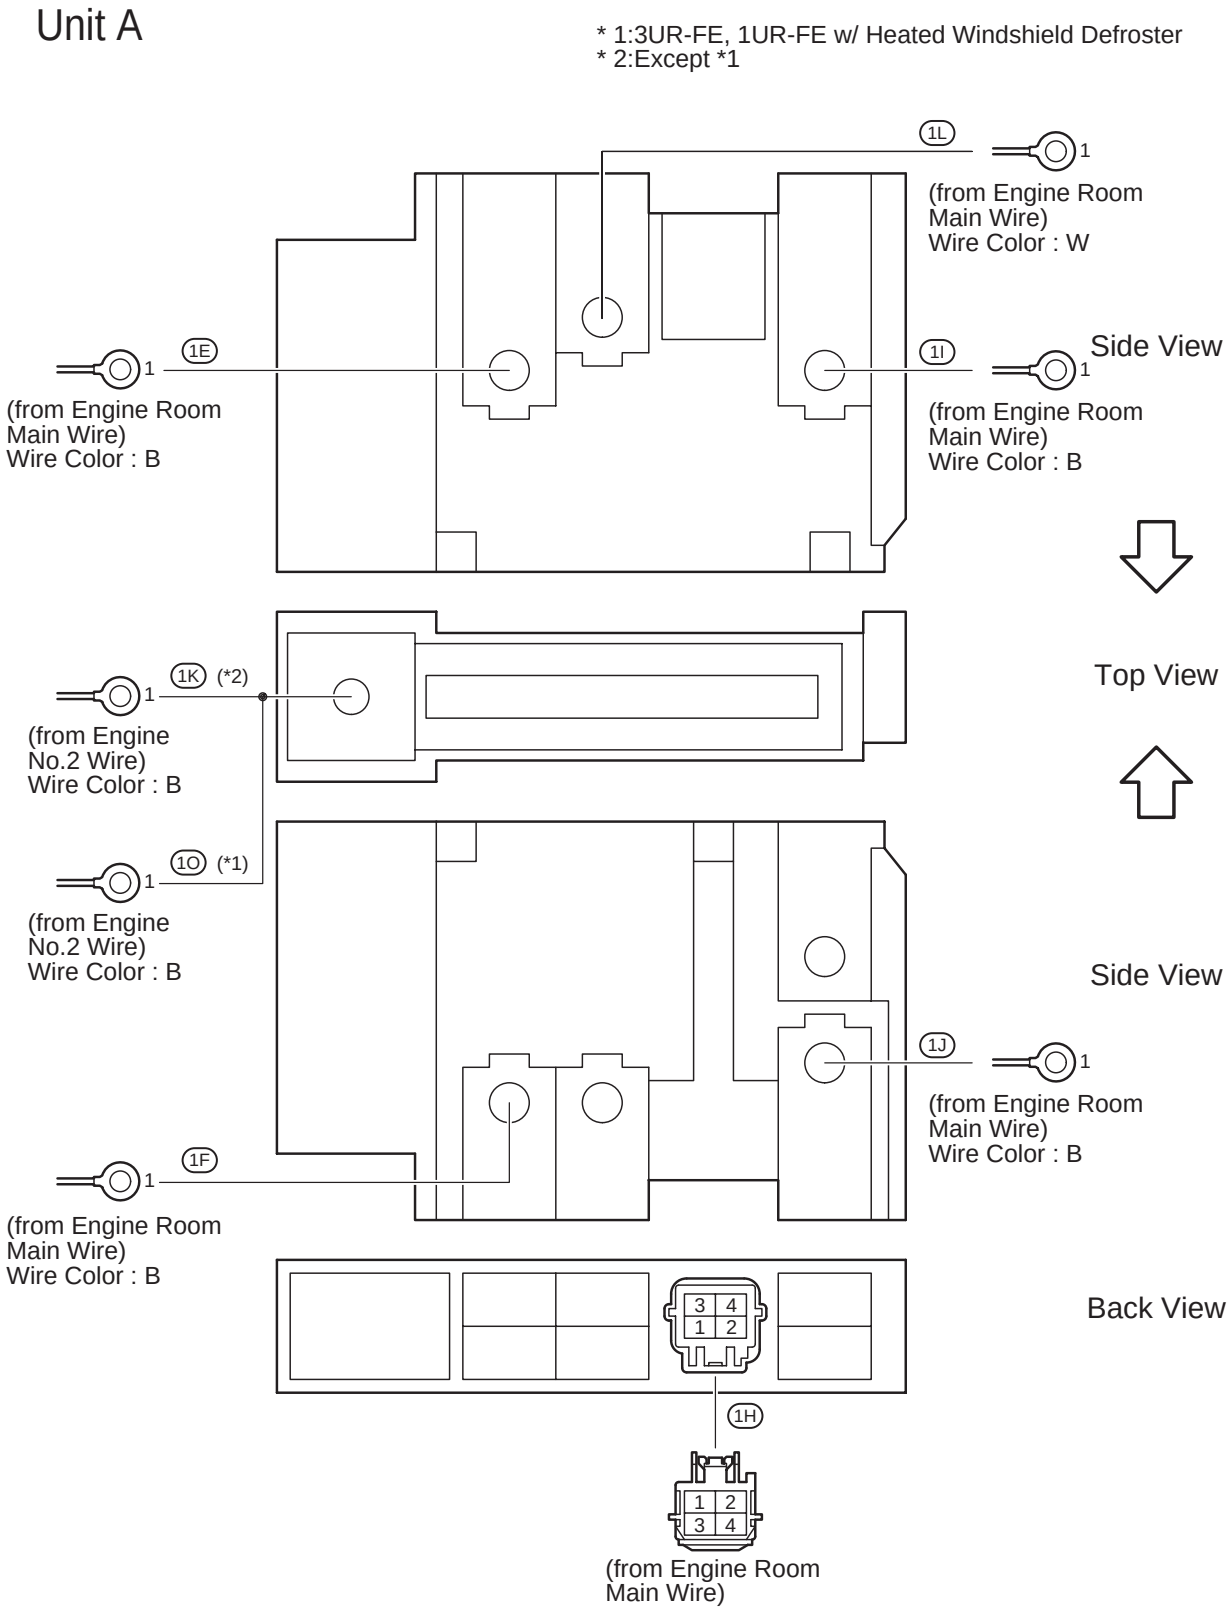

(Diesel)


Unit A

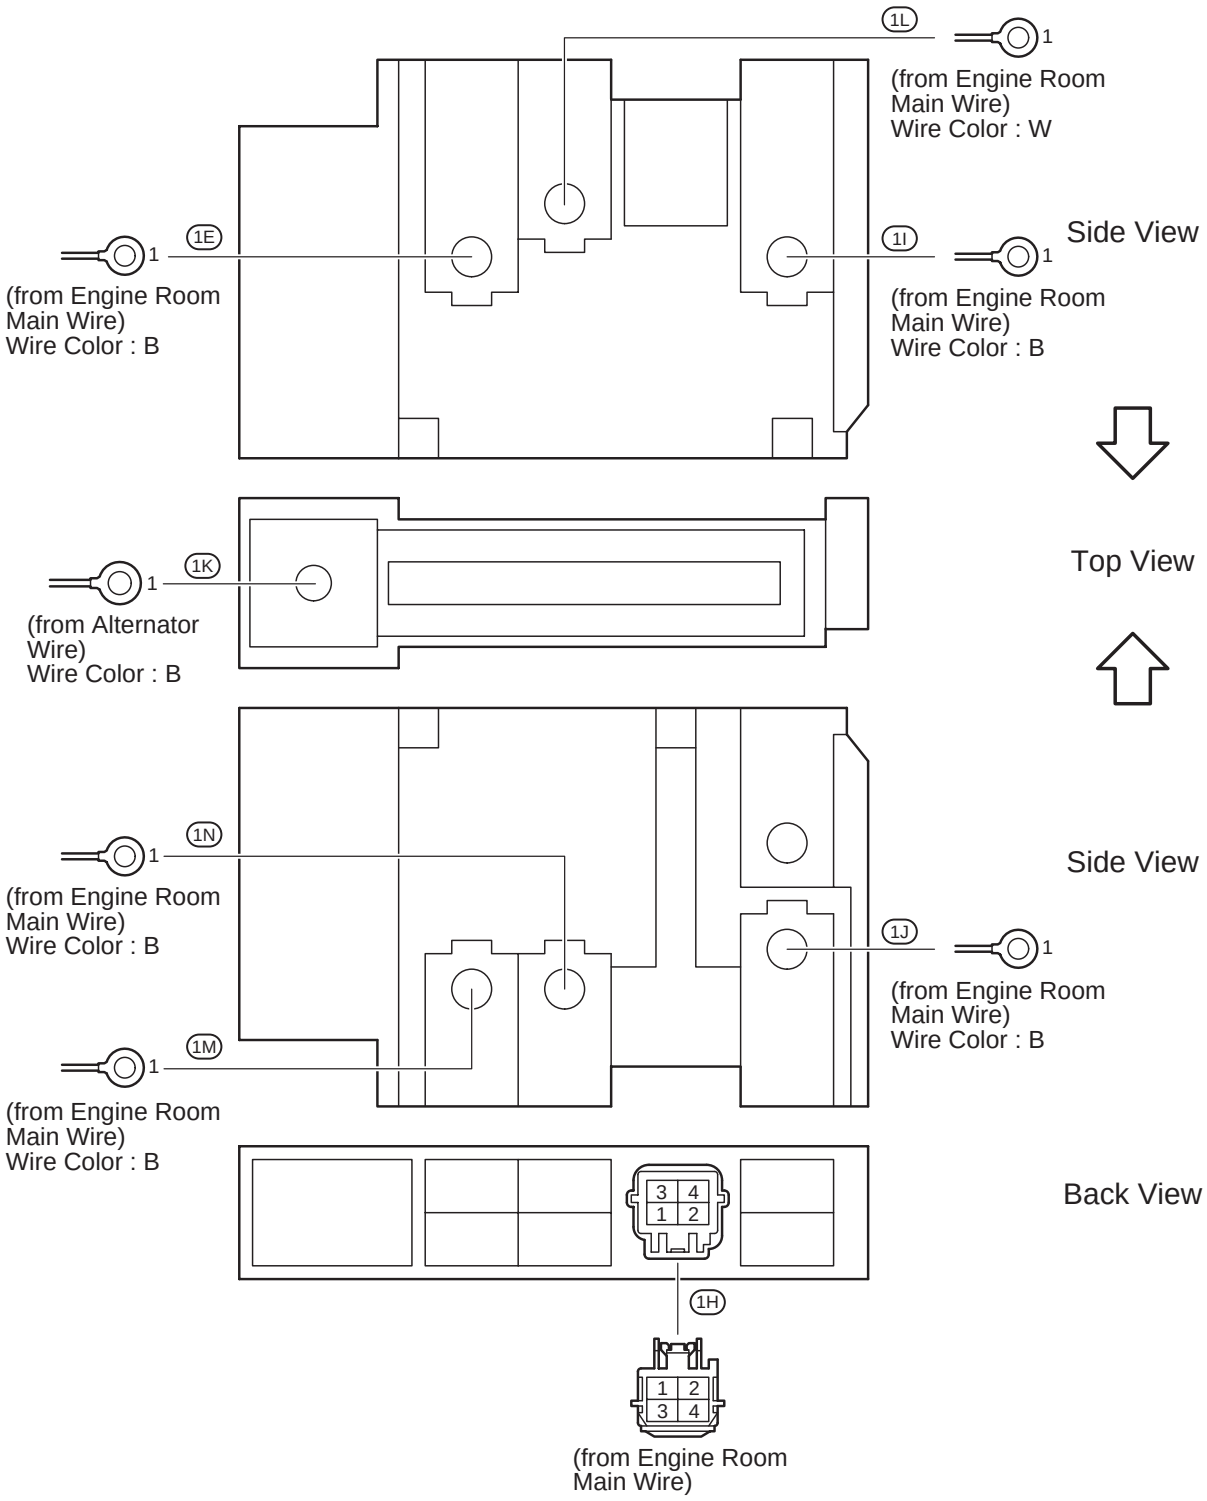


F RELAY LOCATIONS

① : Engine Room R/B Assembly ⬭ : Engine Room J/B Assembly	**Engine Compartment Left (See Page 20)**

Unit B

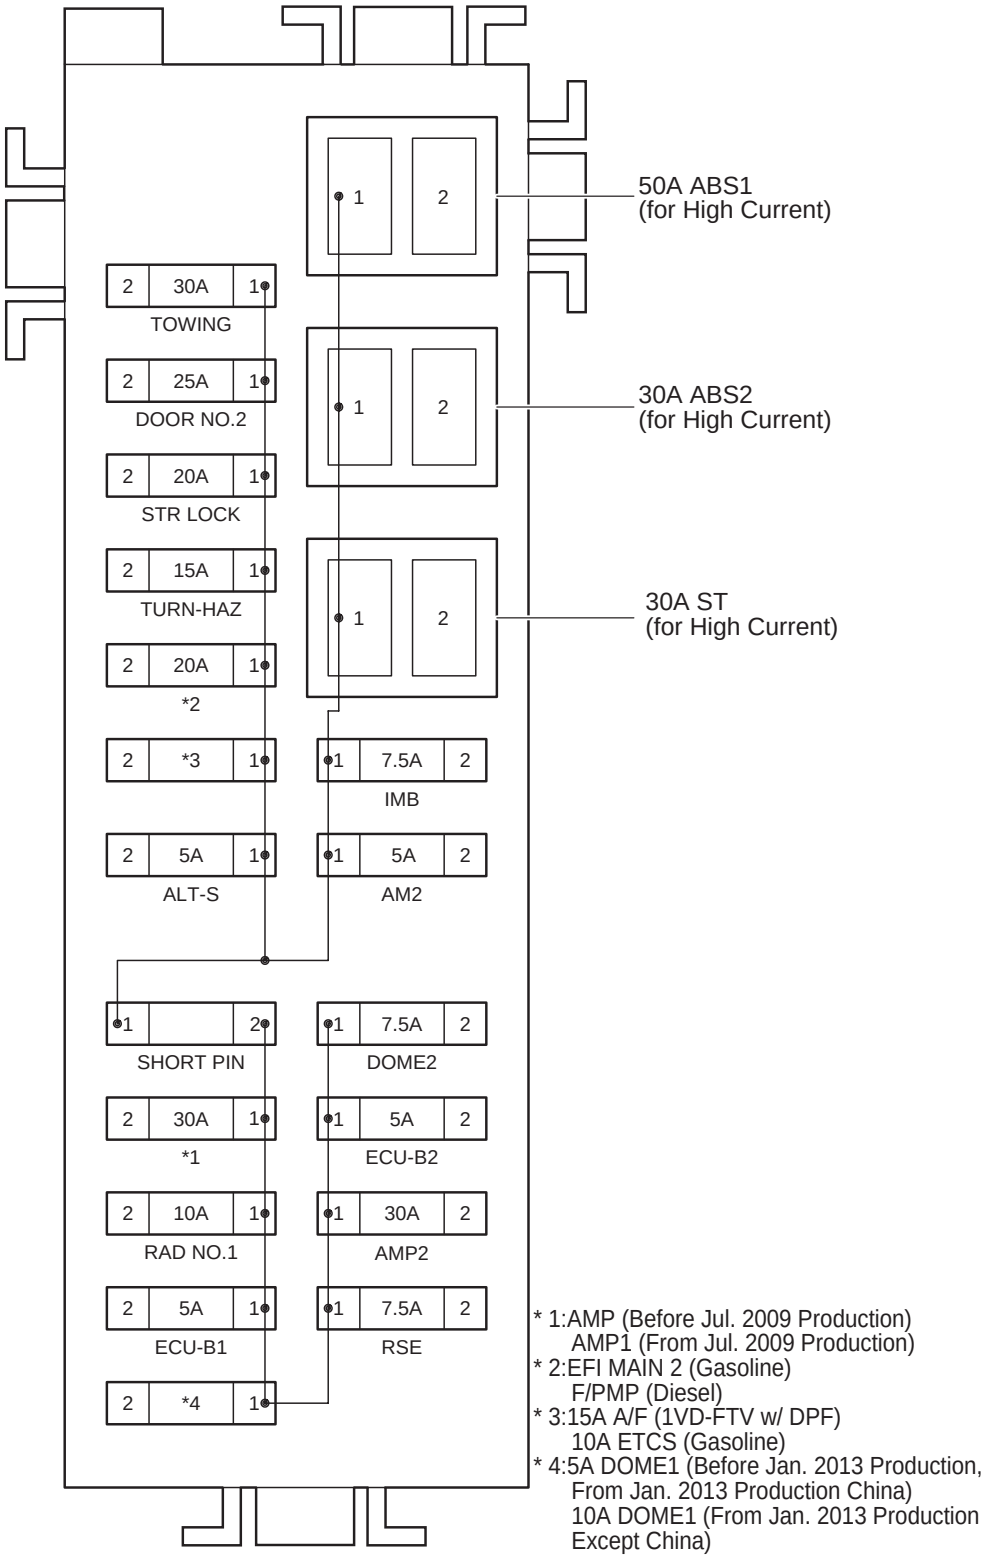


Unit E

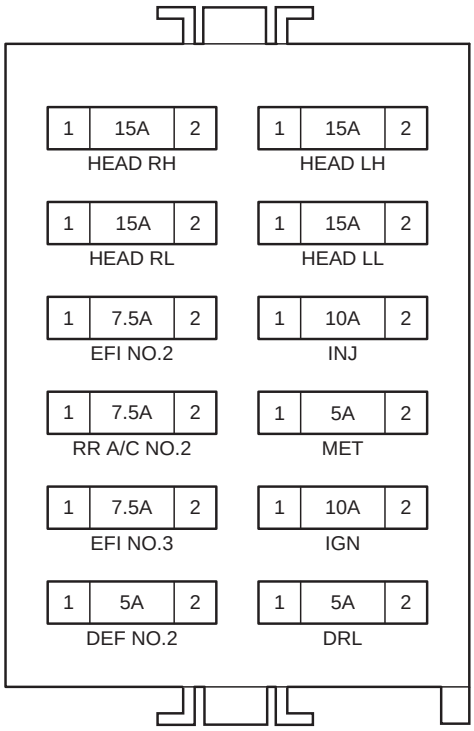

1 15A 2
HEAD RH
1 15A 2
HEAD LH
1 15A 2
HEAD RL
1 15A 2
HEAD LL
1 7.5A 2
EFI NO.2
1 10A 2
INJ
1 7.5A 2
RR A/C NO.2
1 5A 2
MET
1 7.5A 2
EFI NO.3
1 10A 2
IGN
1 5A 2
DEF NO.2
1 5A 2
DRL

F RELAY LOCATIONS

(1) : Engine Room R/B Assembly : Engine Room J/B Assembly	**Engine Compartment Left (See Page 20)**

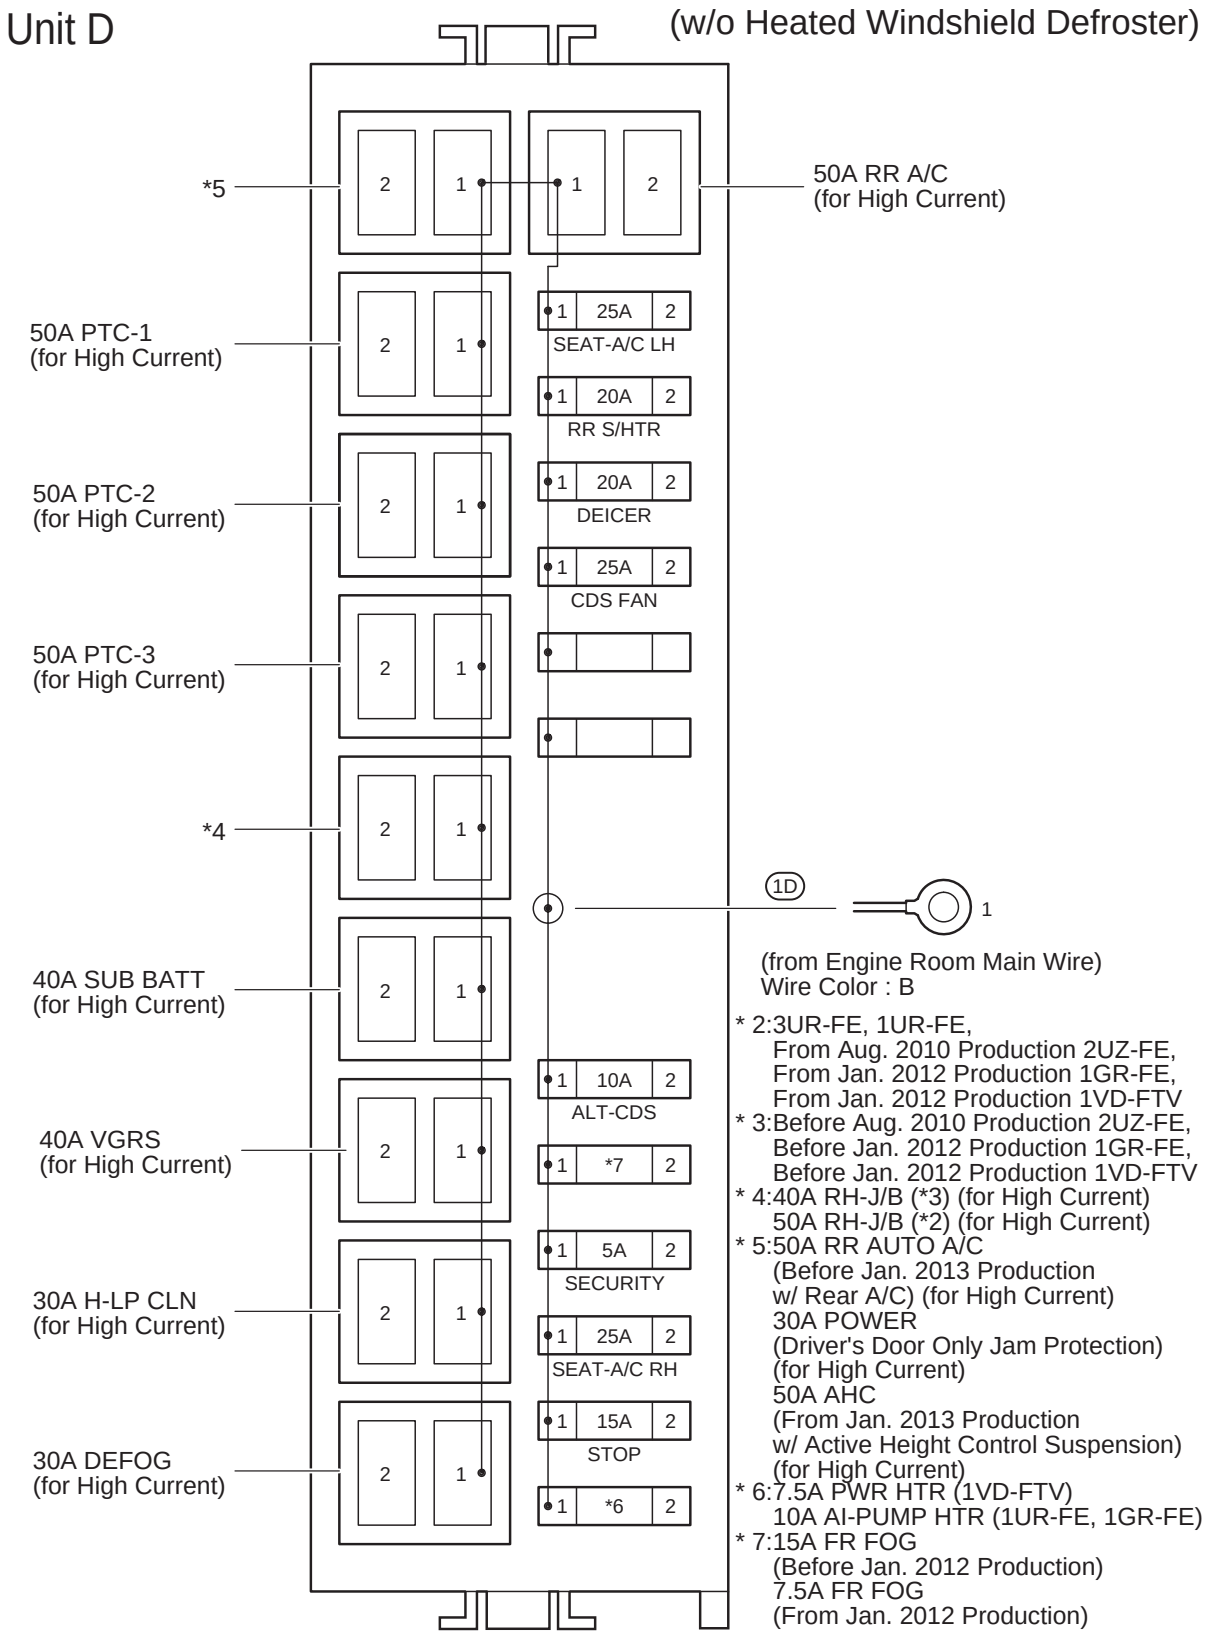

Unit D (w/ Heated Windshield Defroster)

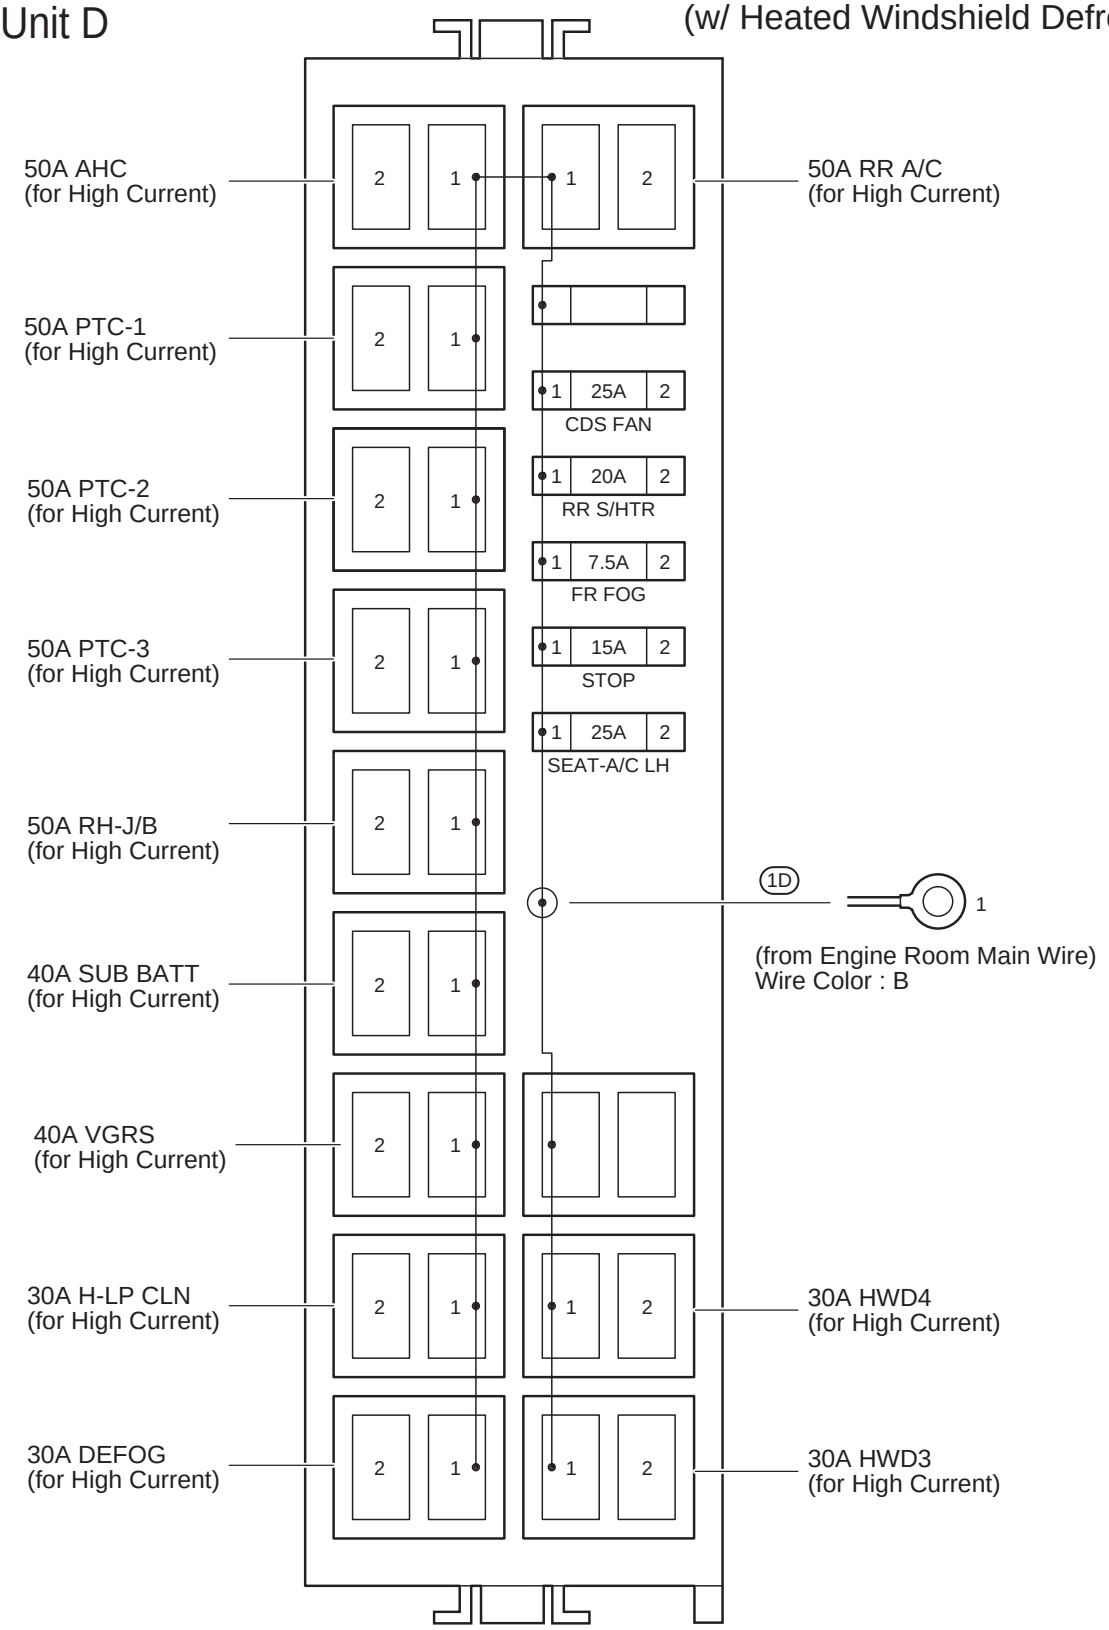


F RELAY LOCATIONS

(1) : Engine Room R/B Assembly ⬭ : Engine Room J/B Assembly	**Engine Compartment Left (See Page 20)**


Unit C

* 1:15A A/F (Gasoline)
  15A EFI MAIN2 (Diesel w/o DPF)
  25A EFI MAIN2 (Diesel w/ DPF)

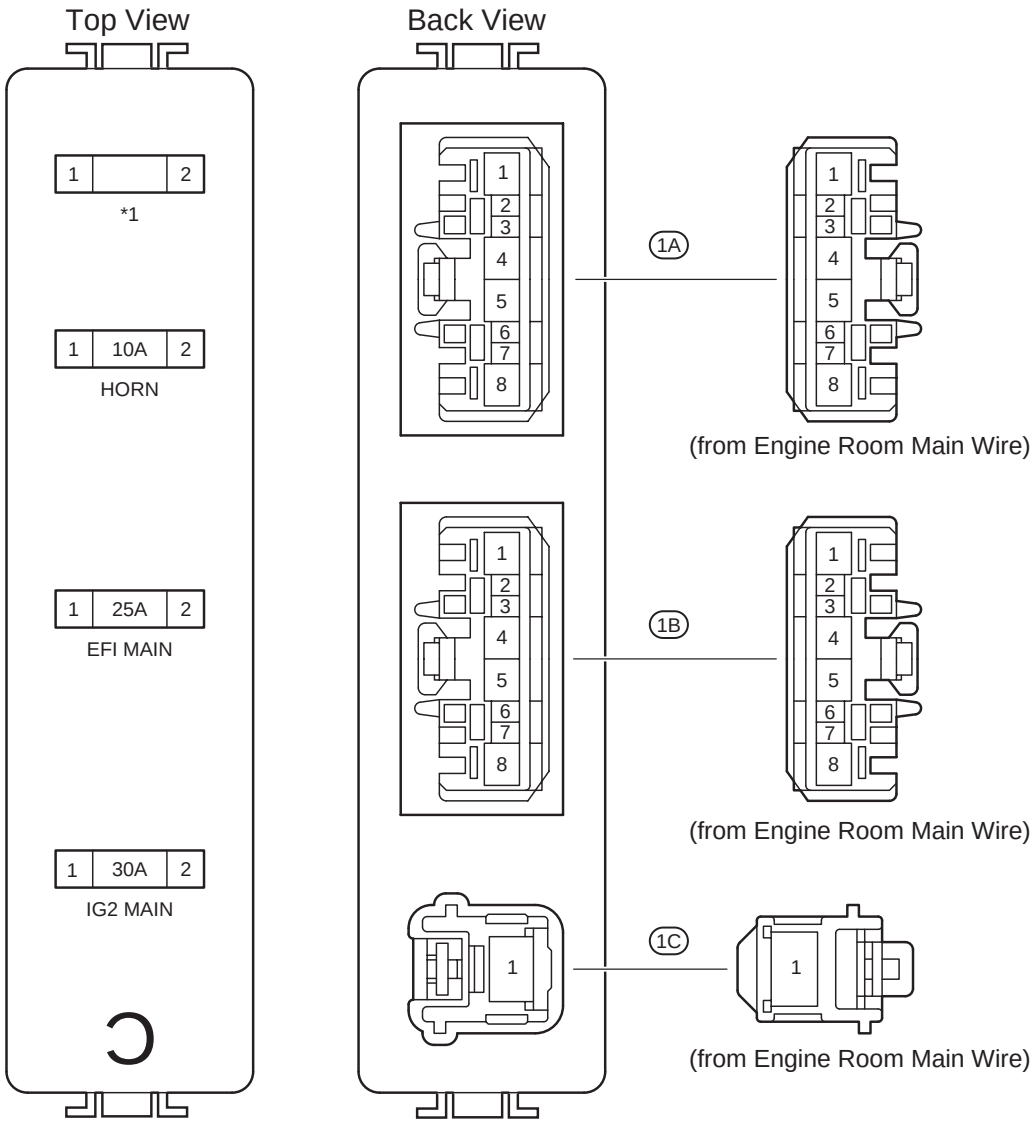


F RELAY LOCATIONS

[Seat]
(LHD Front Separate Seat)

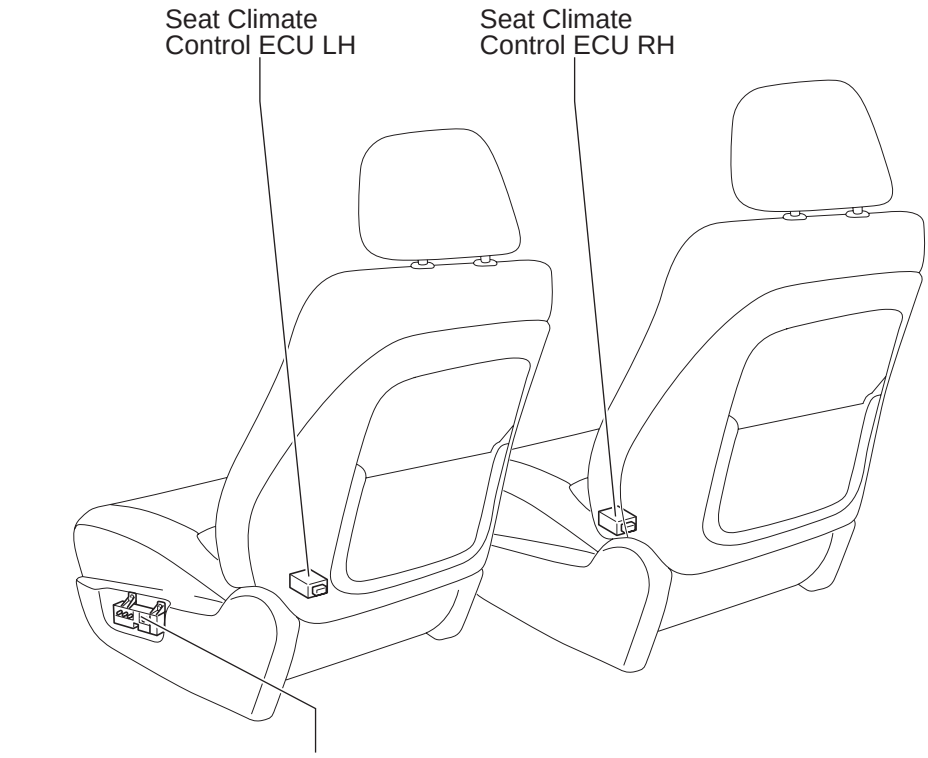


(RHD Front Separate Seat)

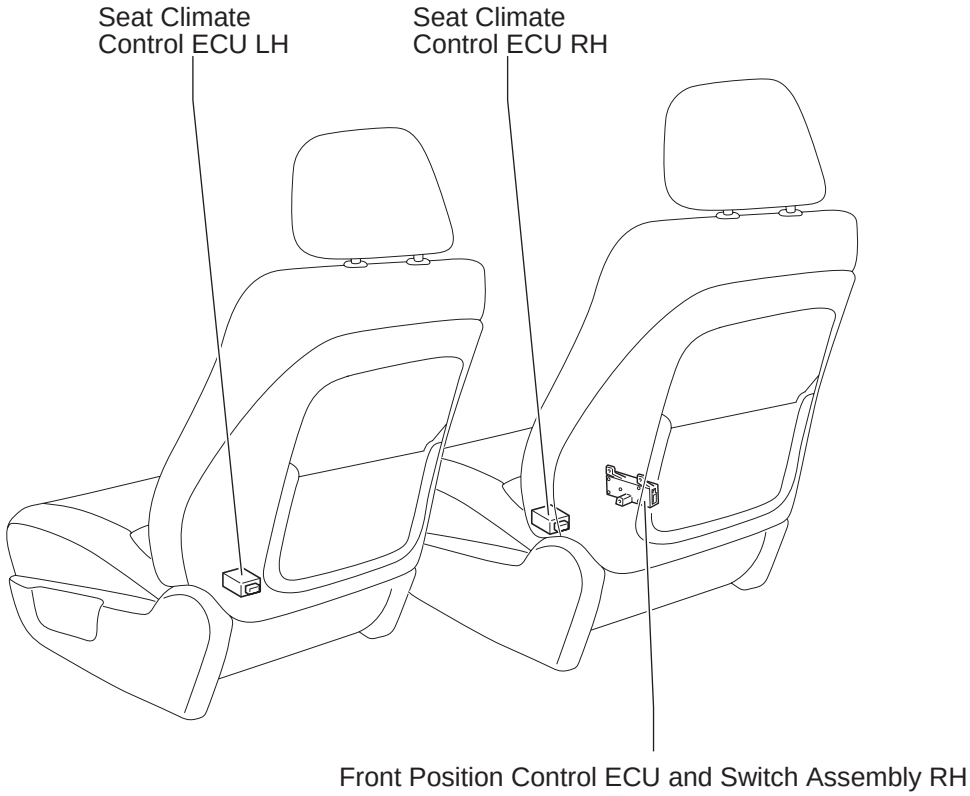


F RELAY LOCATIONS

[Seat]
(LHD Front Separate Seat)

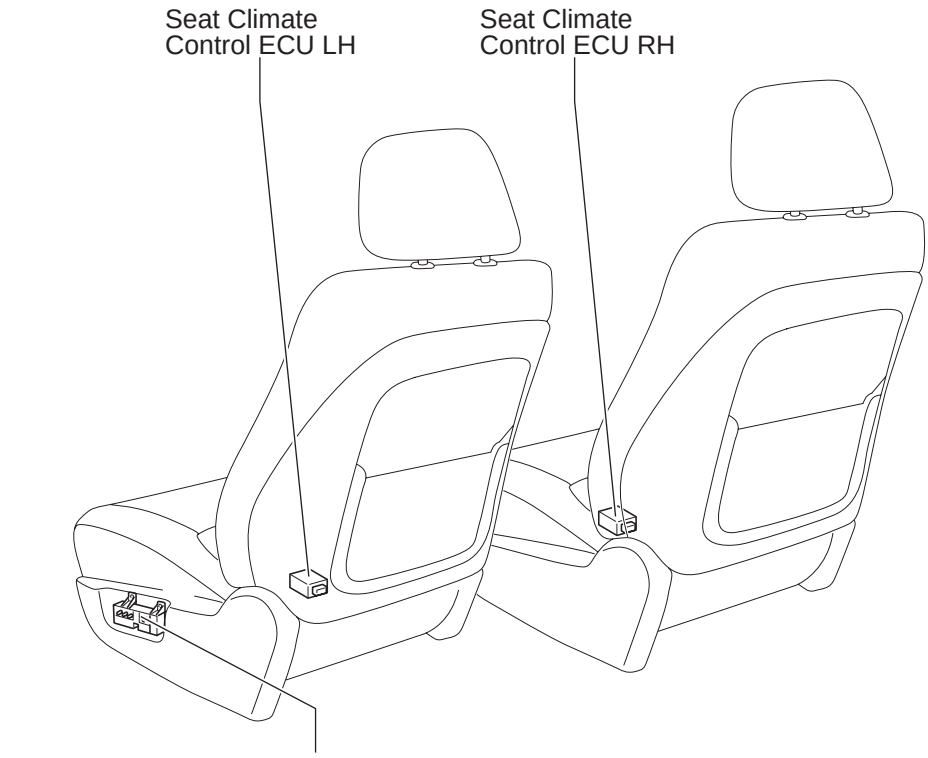


(RHD Front Separate Seat)

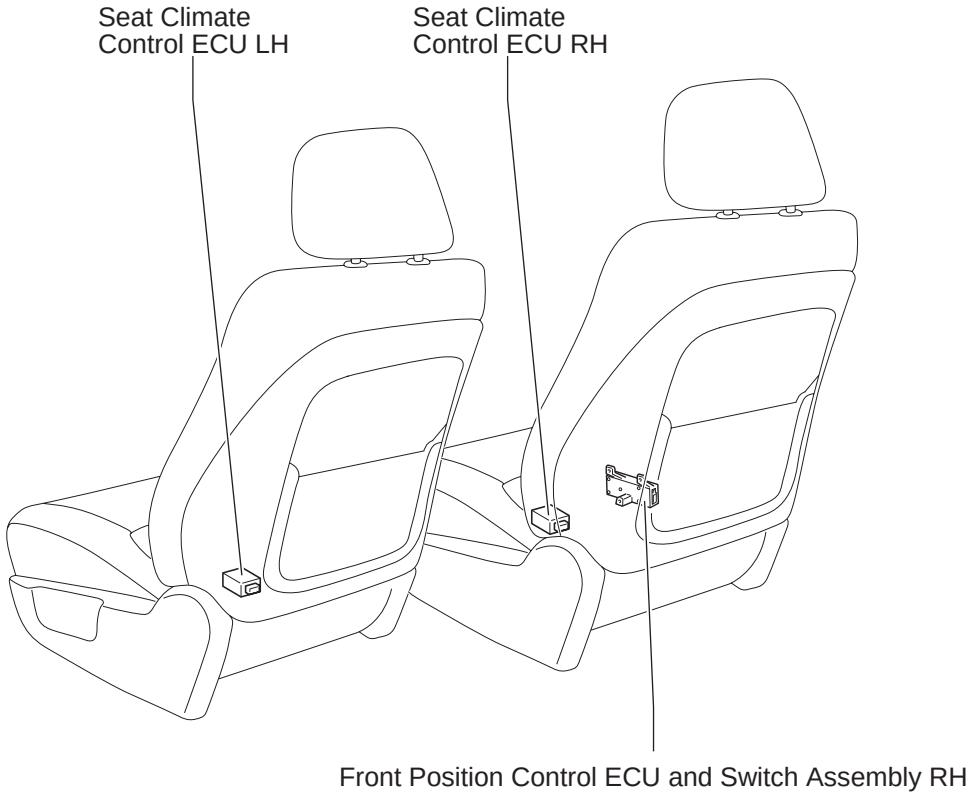


[Instrument Panel]

(LHD)

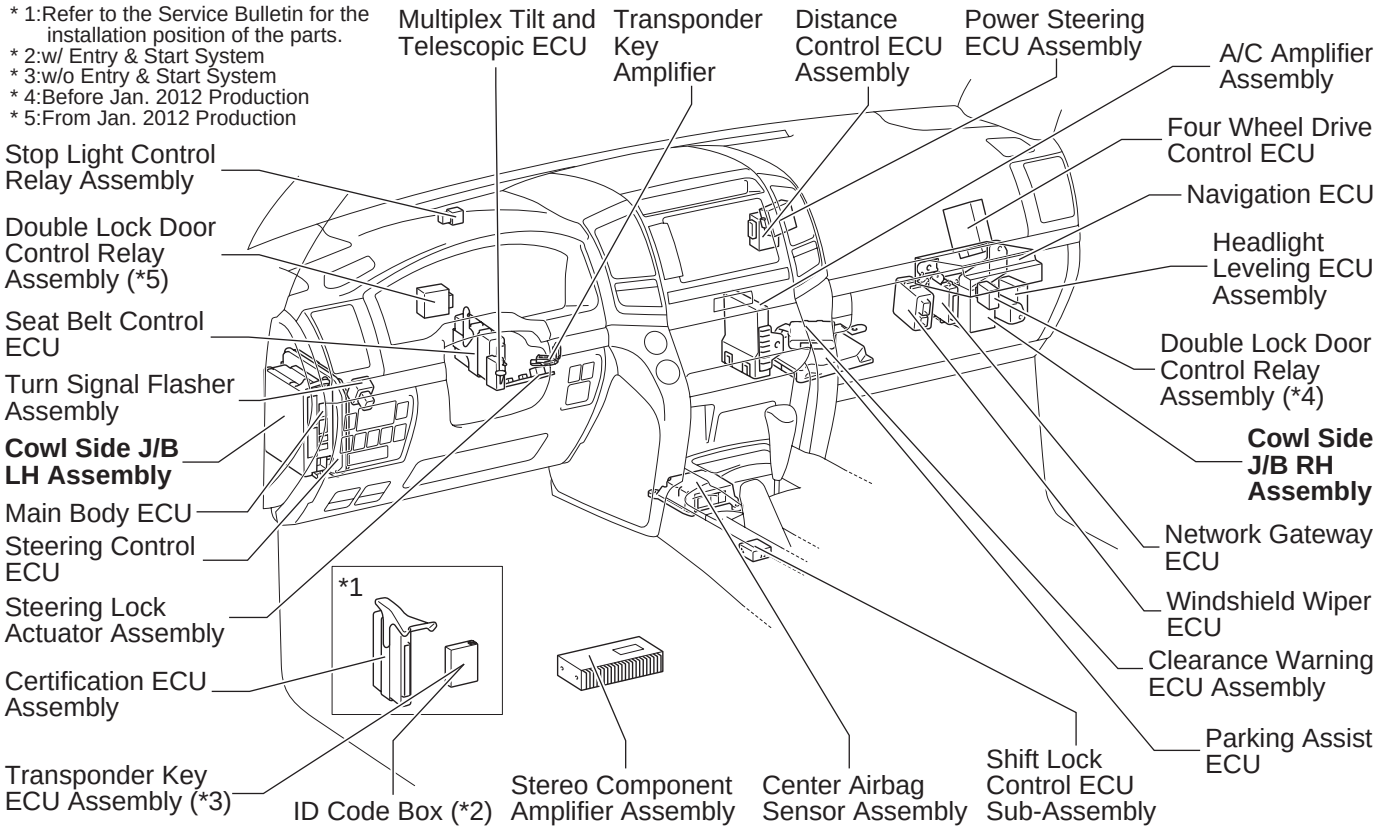


(RHD)

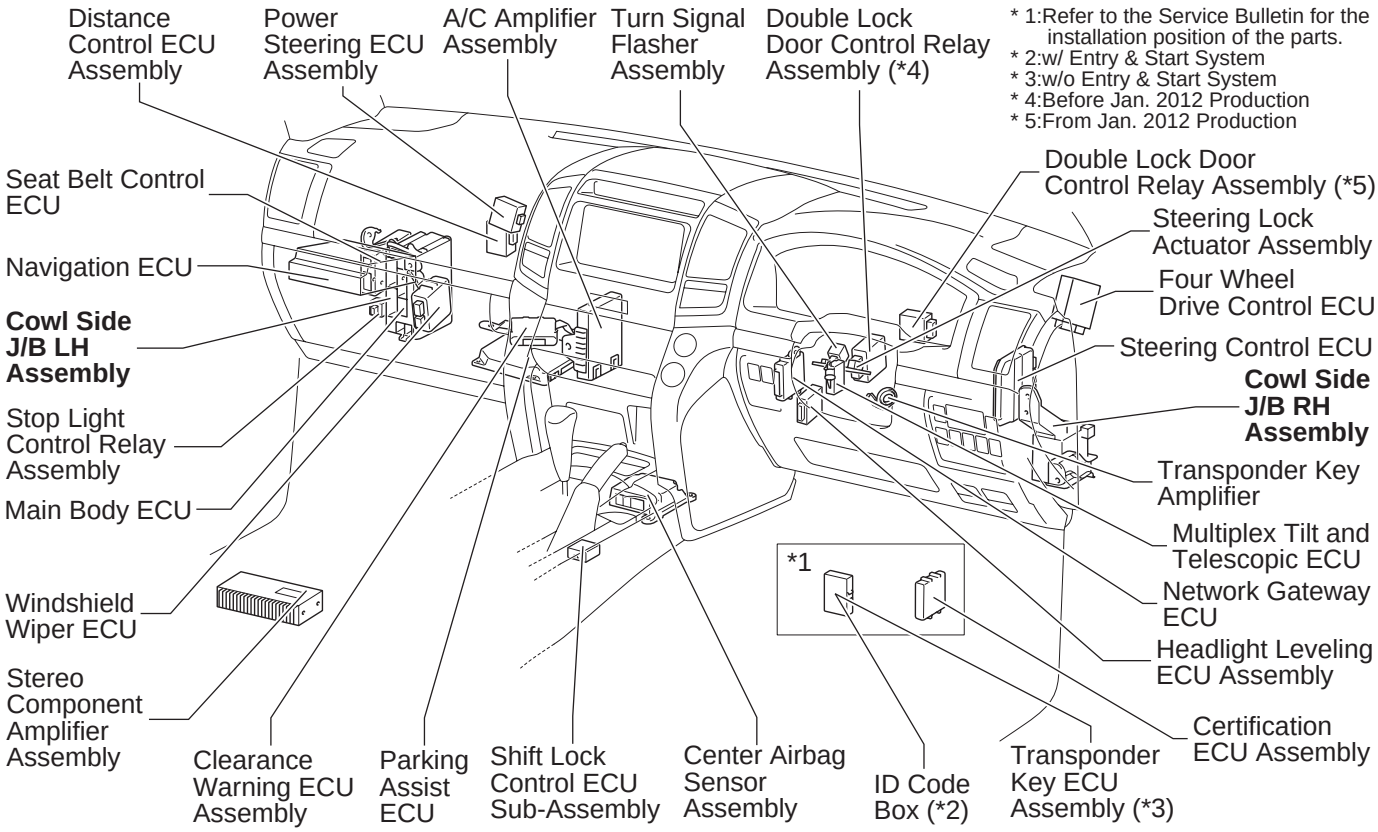


[Instrument Panel]


(LHD)

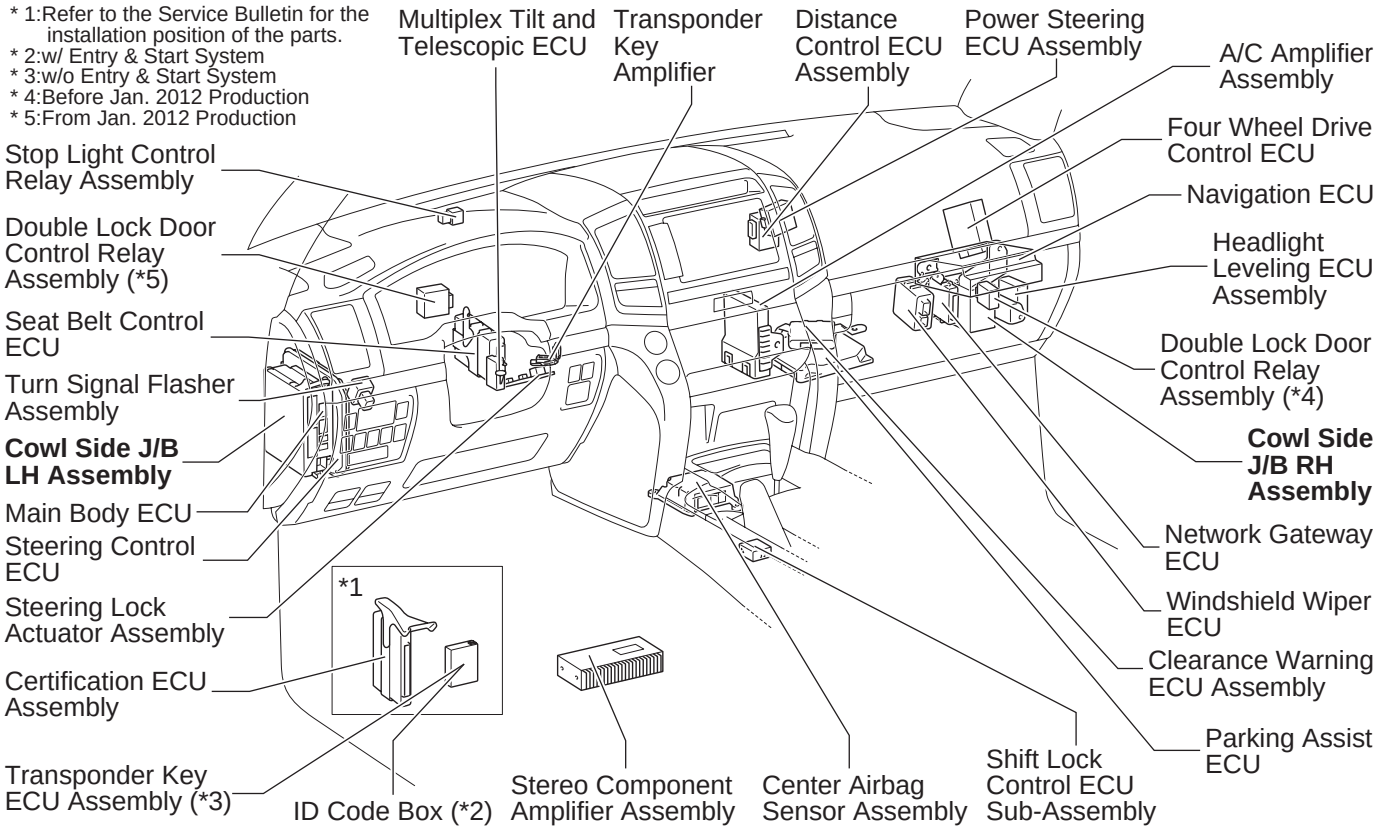

(RHD)

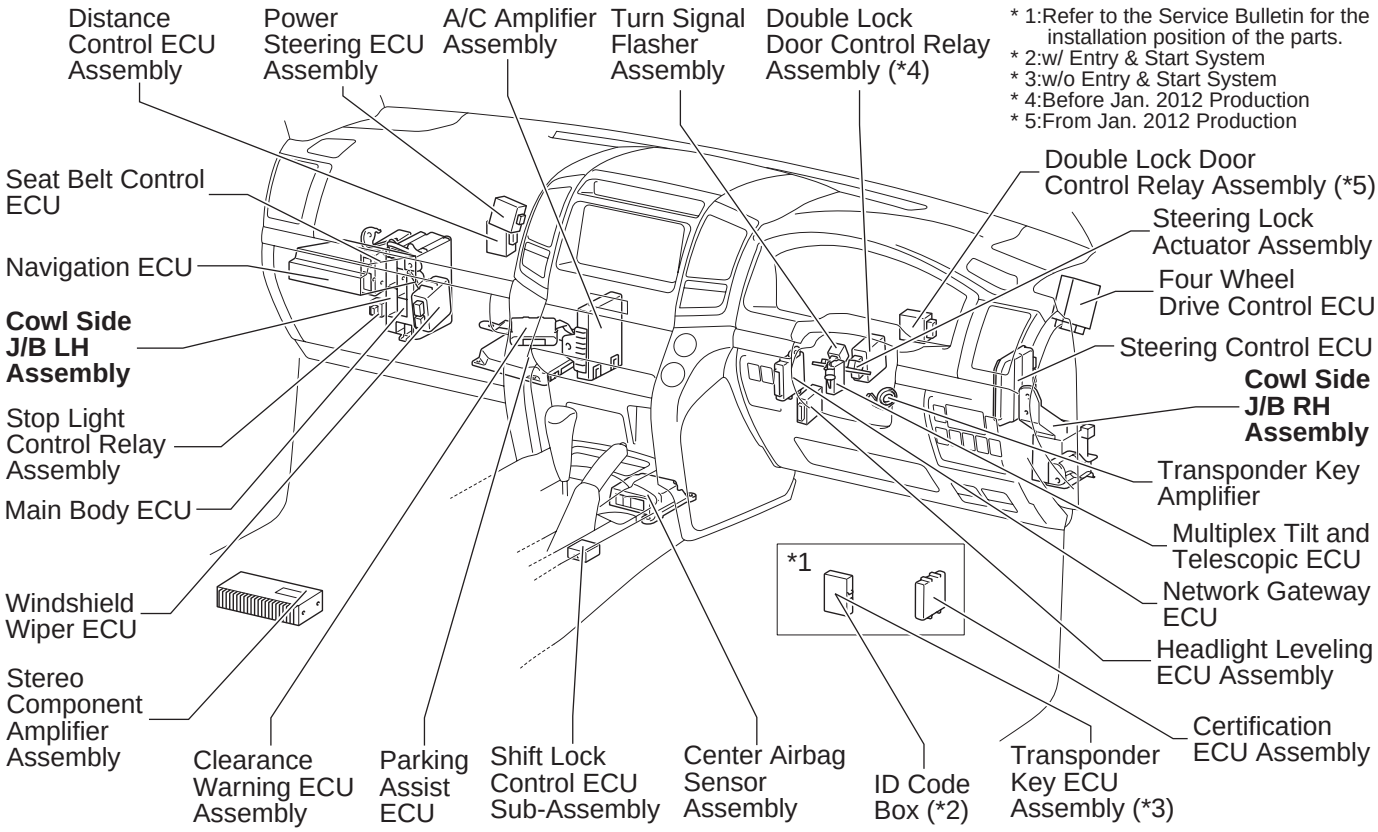


[Junction Connector (CAN No.1) Inner Circuit]

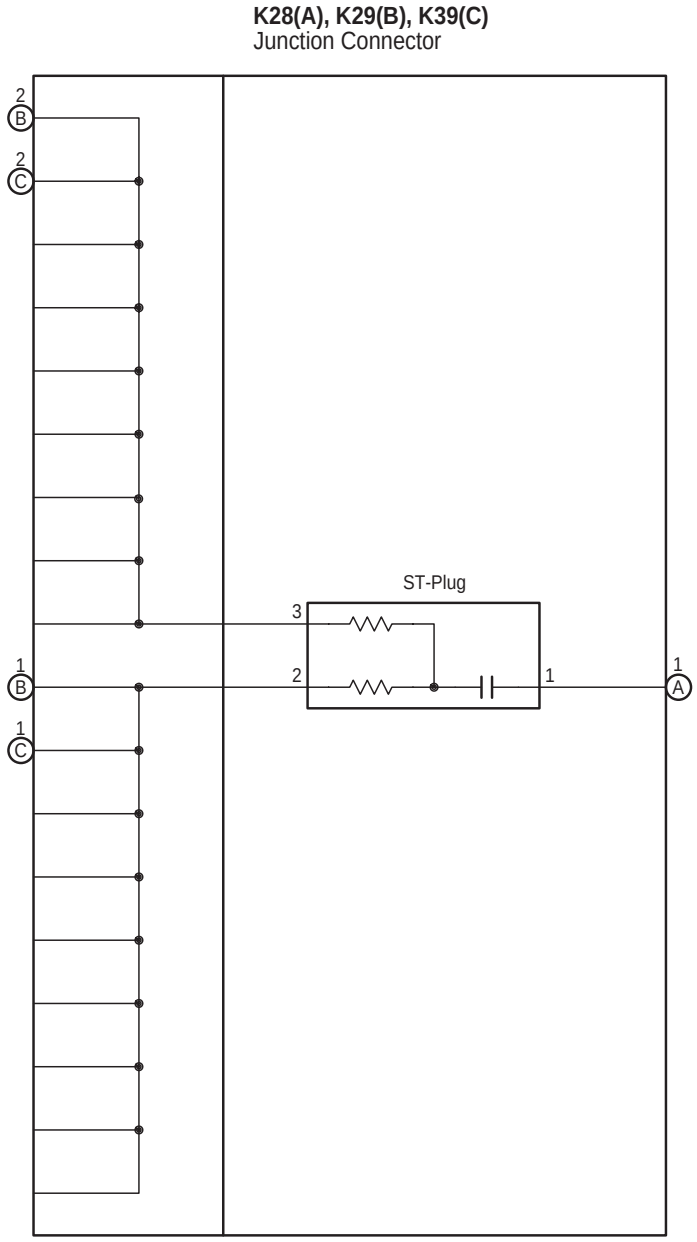


F RELAY LOCATIONS

Junction Connector (CAN No.1)	Left Luggage Compartment (See Page 22, 23)

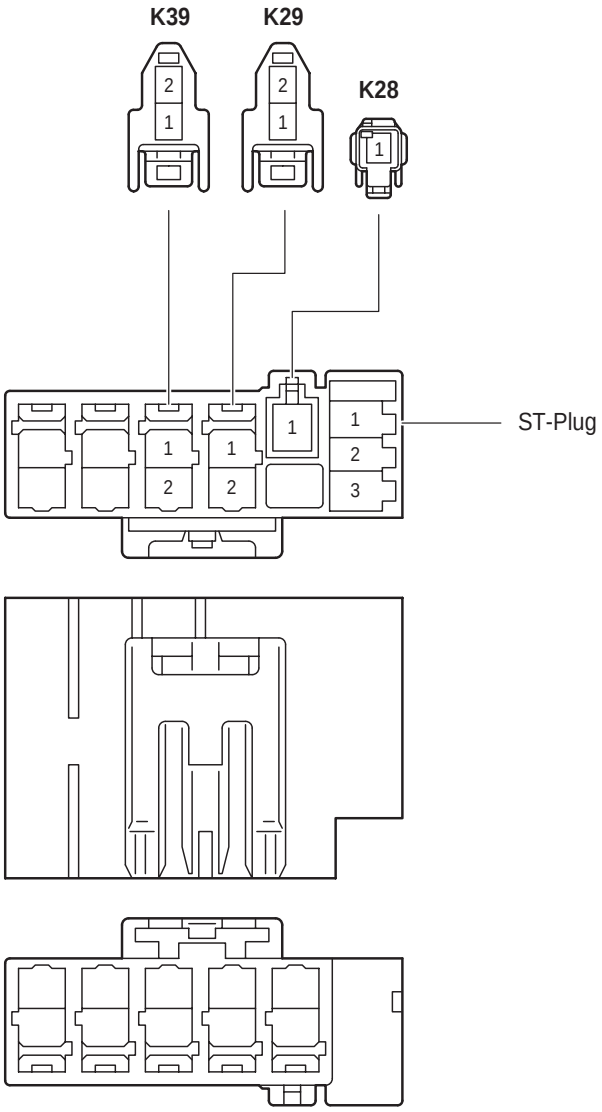


[Junction Connector (CAN No.2) Inner Circuit]

L29(A), L30(B), L54(C), L57(D), L58(E)
Junction Connector

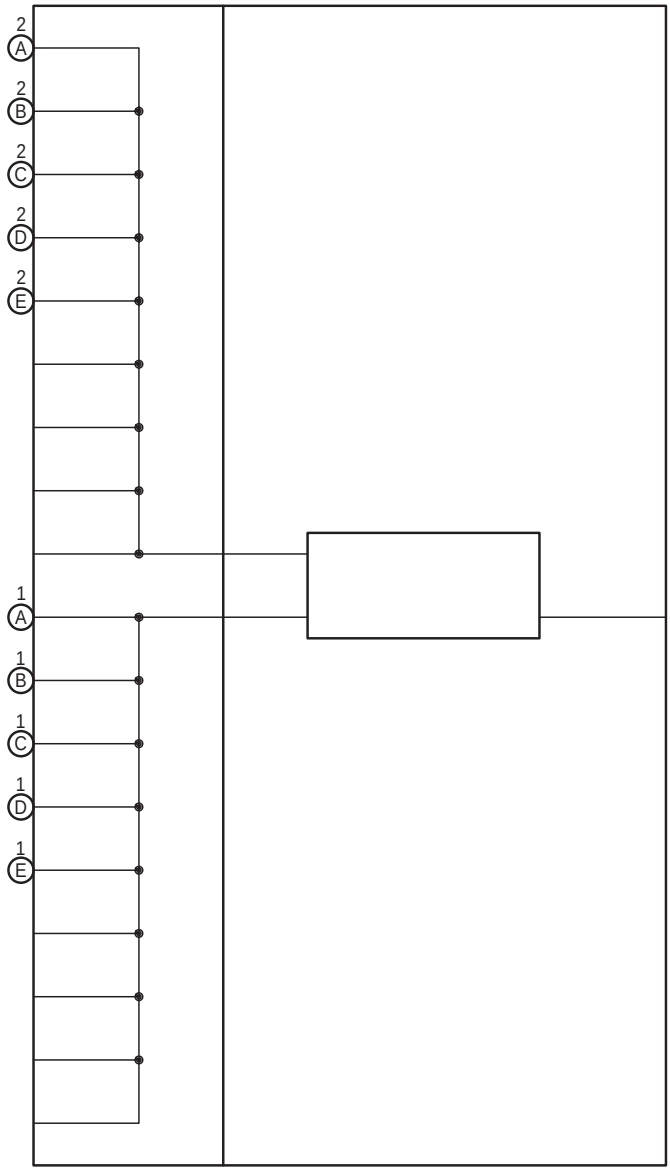


F RELAY LOCATIONS

Junction Connector (CAN No.2)	Right Luggage Compartment (See Page 22, 23)

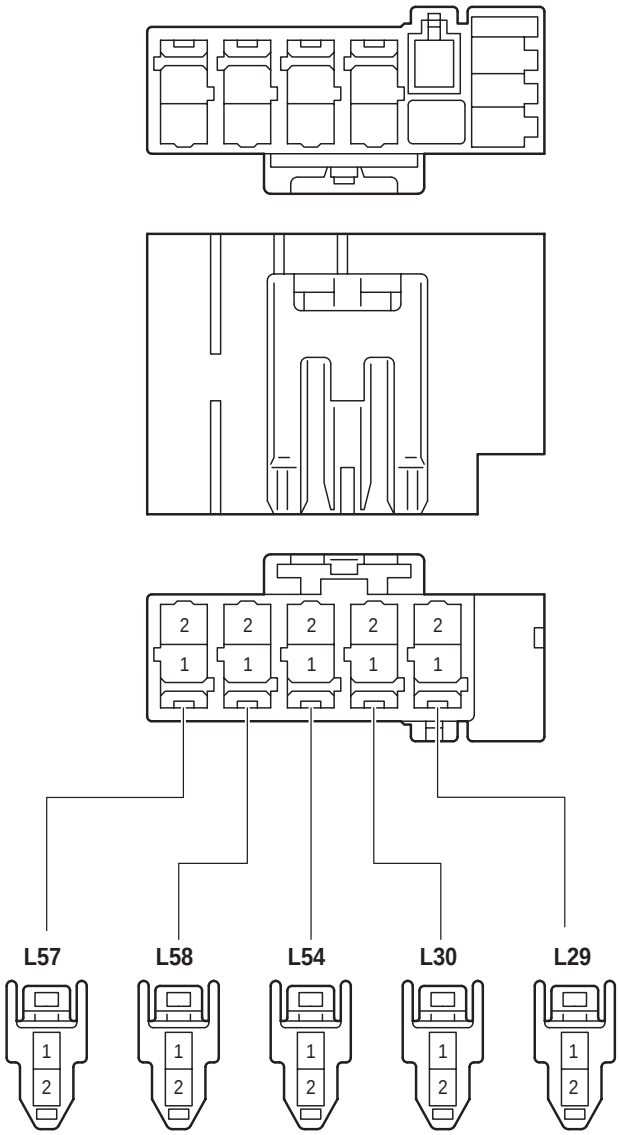


F RELAY LOCATIONS

[Body]
(LHD Liftgate Type)

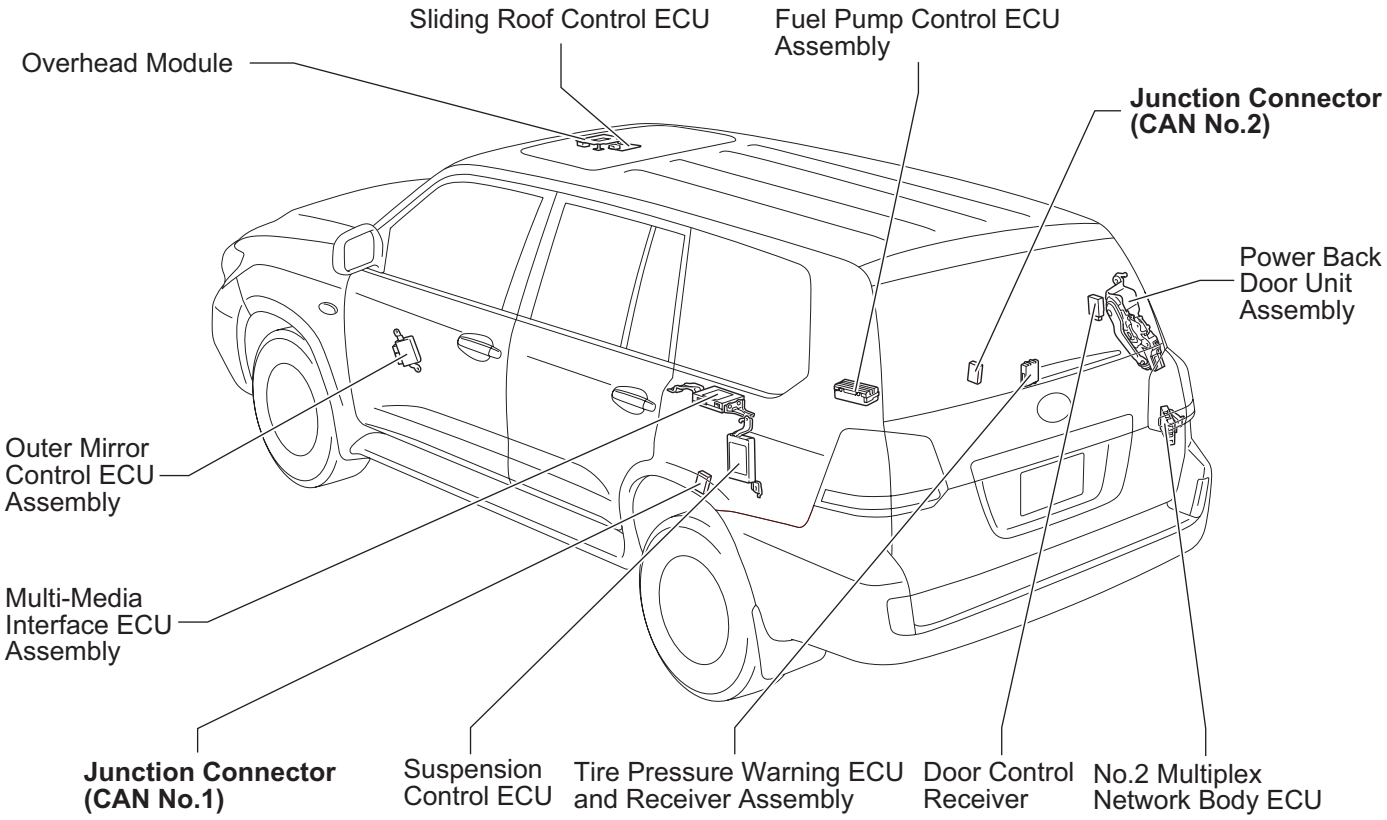


(RHD Liftgate Type)

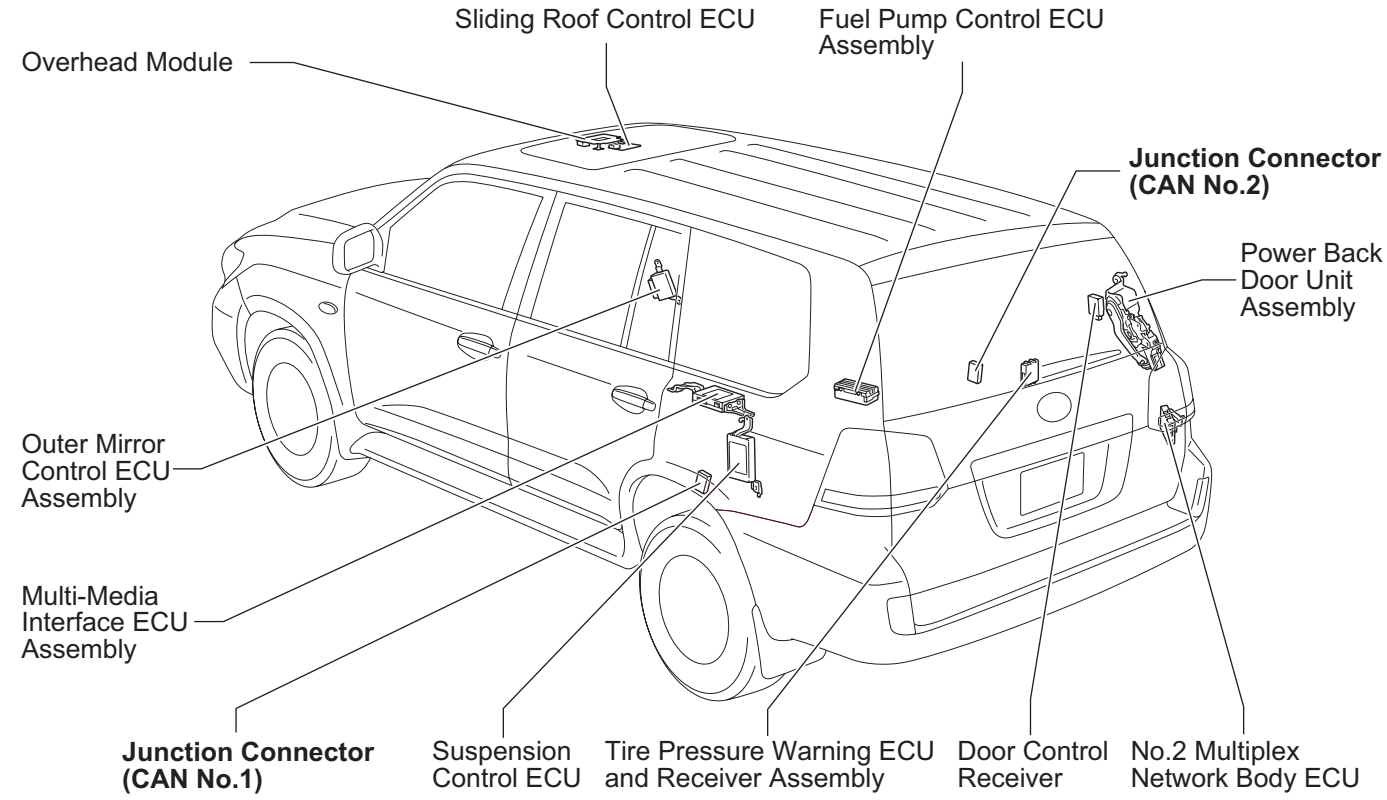


F RELAY LOCATIONS


[Body]
(LHD Liftgate Type)

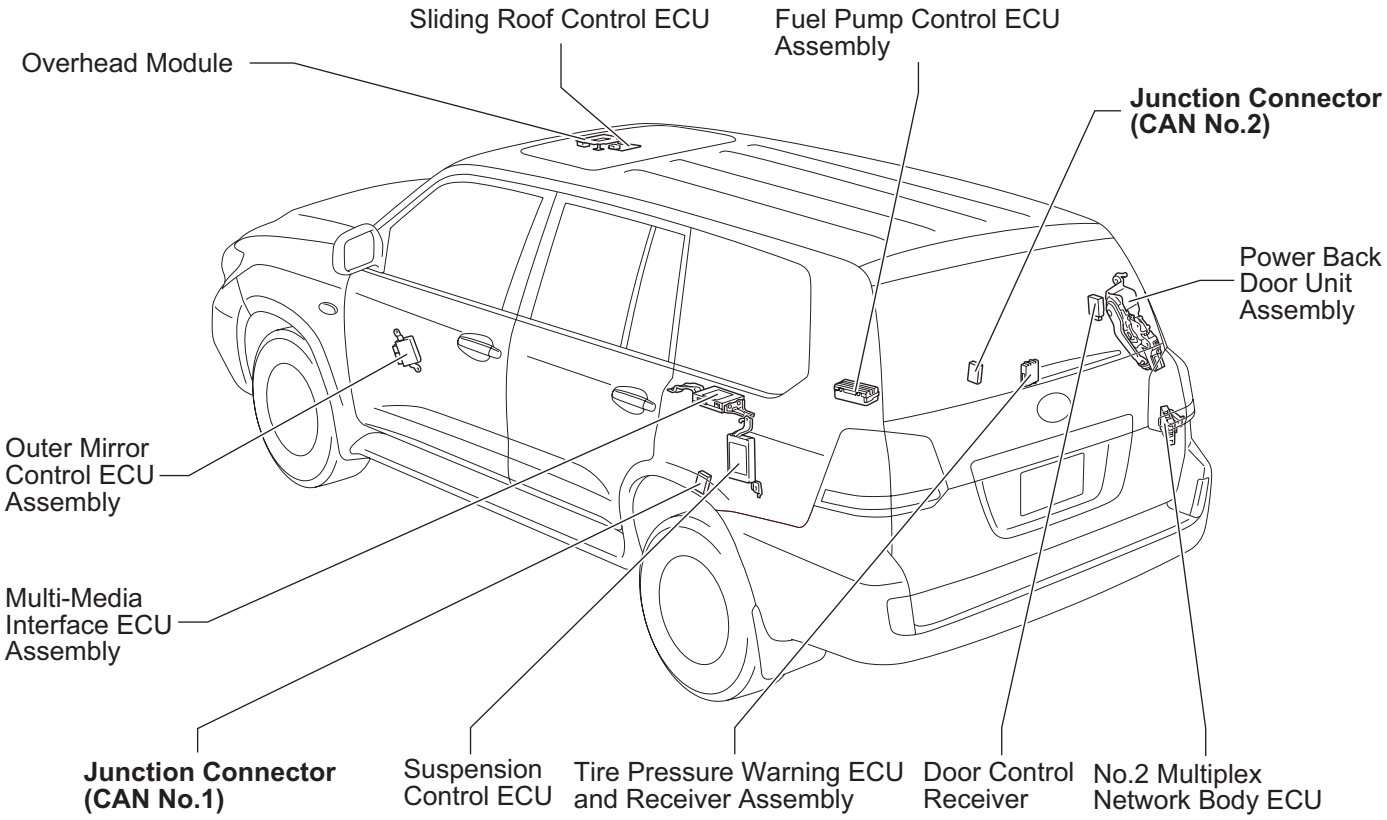


(RHD Liftgate Type)

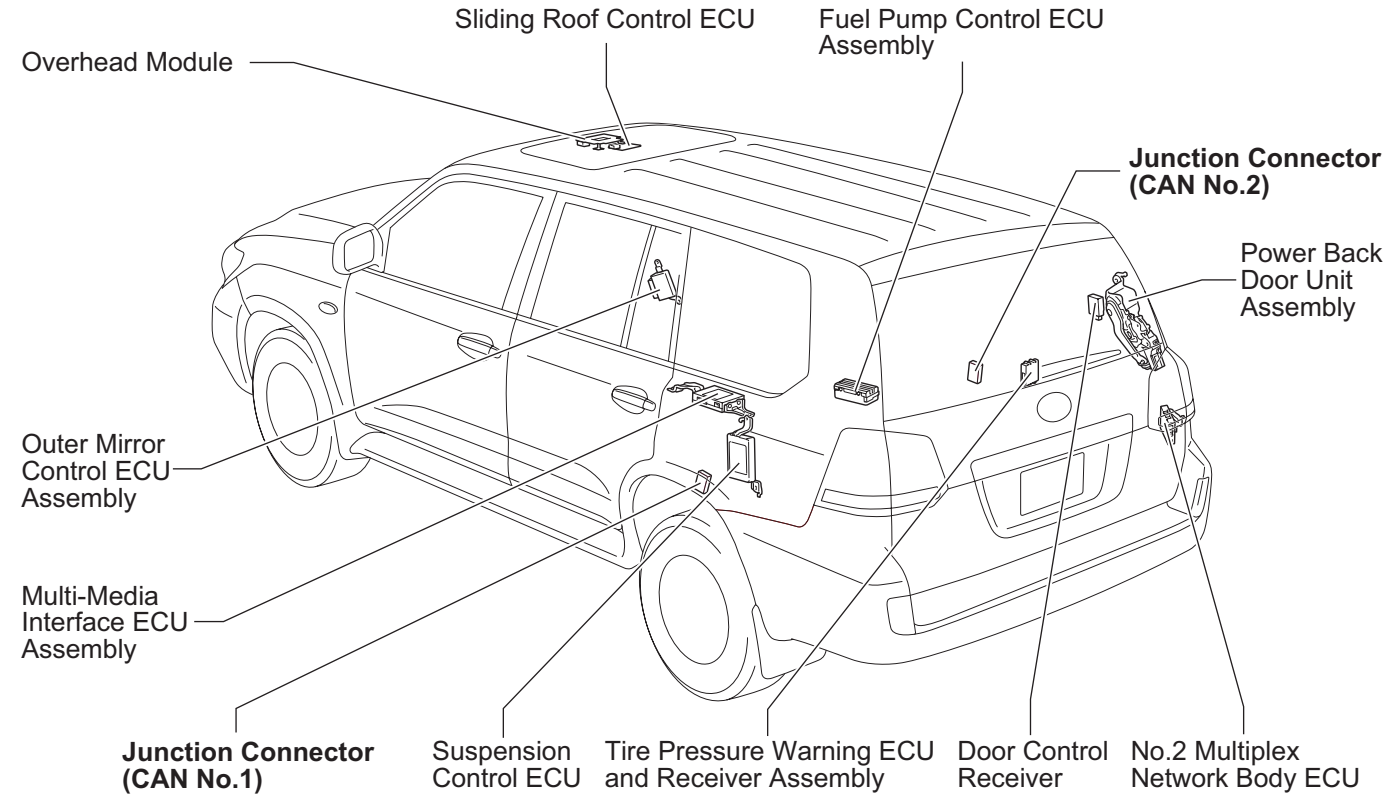


(LHD Swing Type)

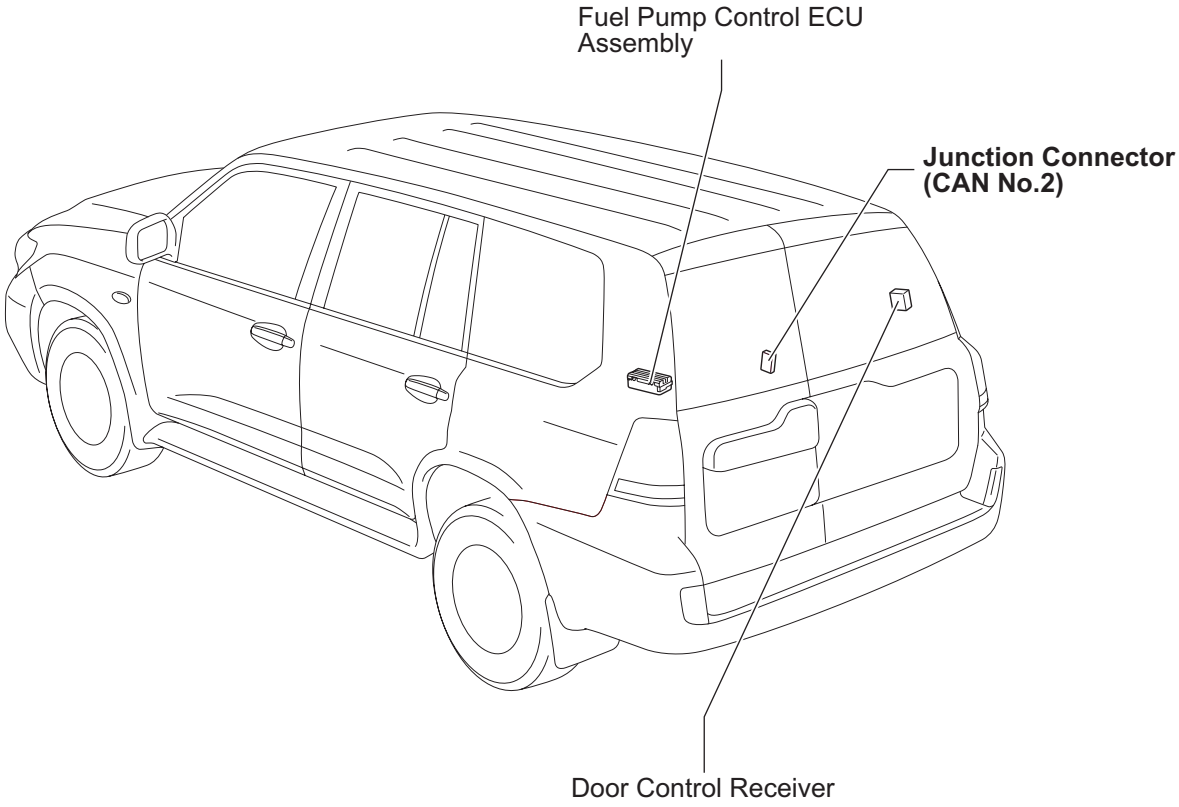

(RHD Swing Type)

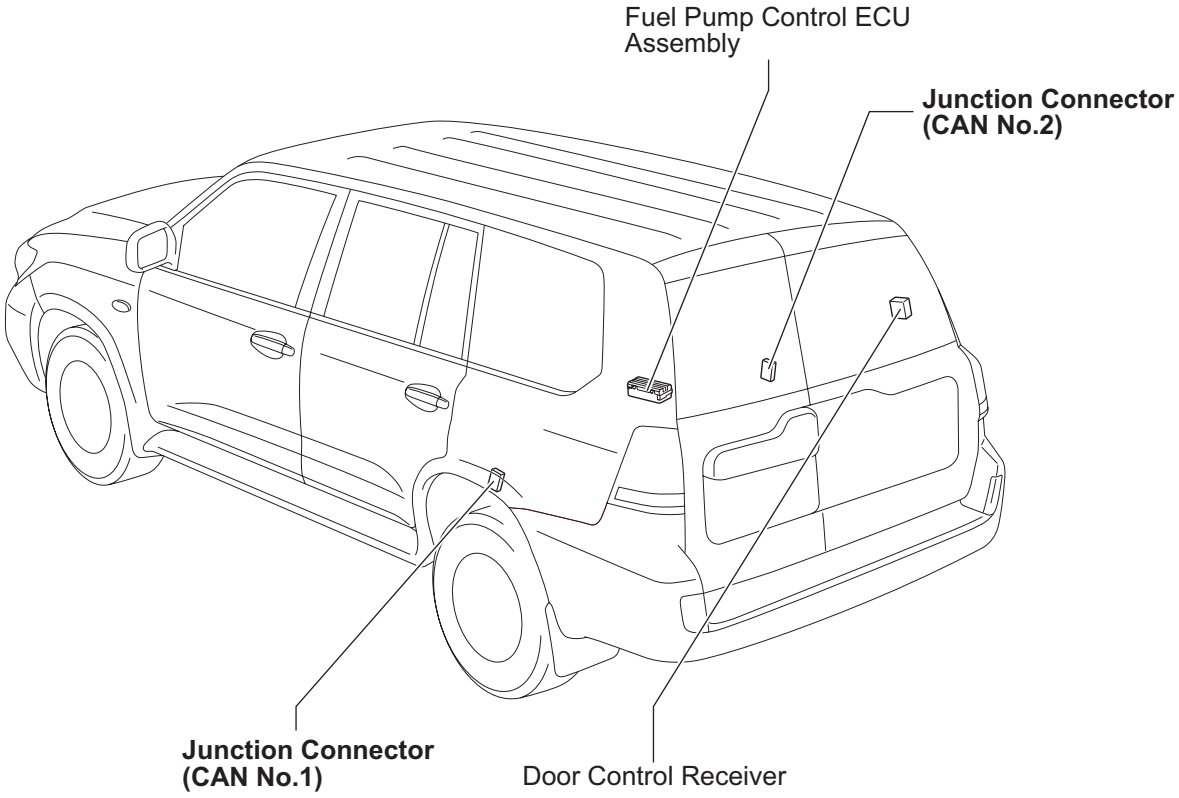

(LHD Swing Type)

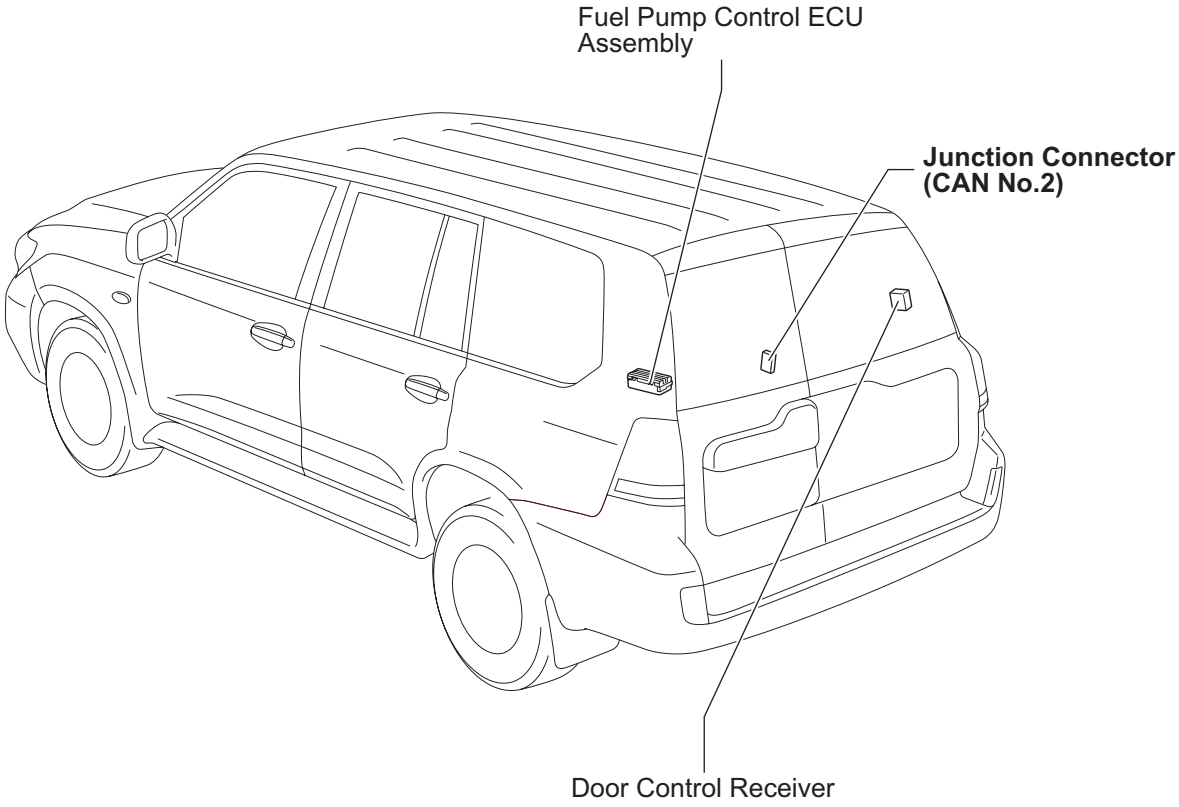

(RHD Swing Type)

