
(8708-)

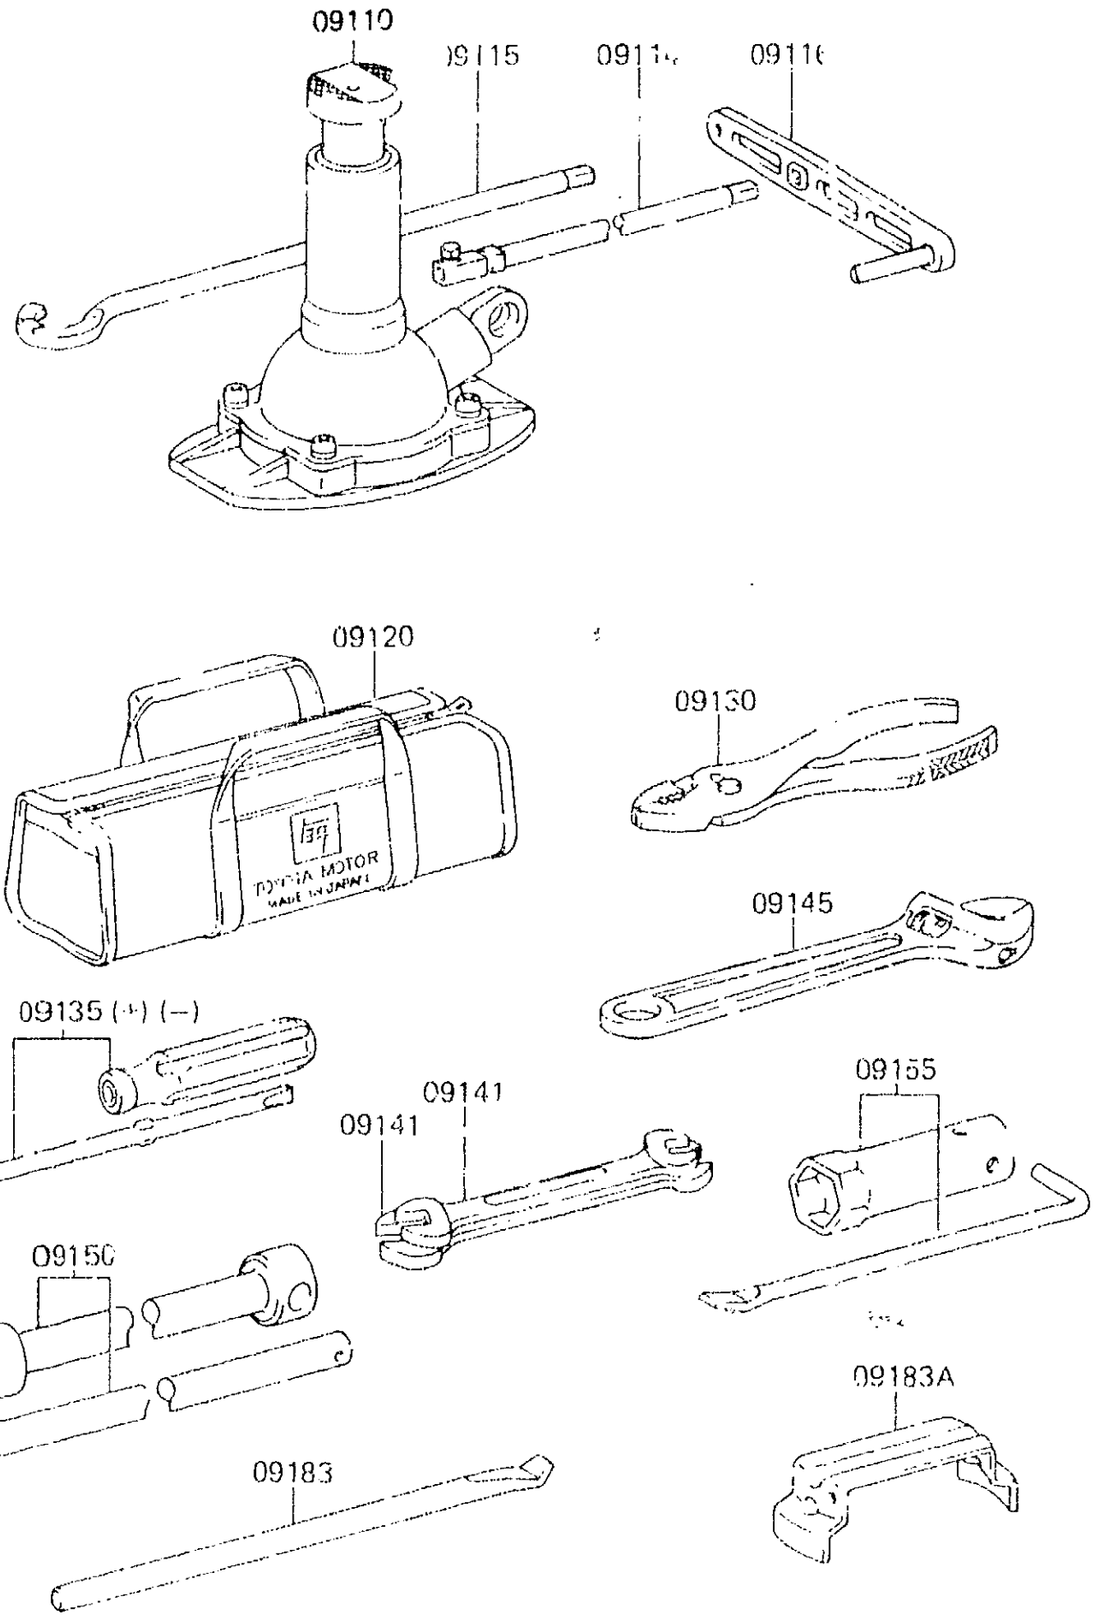

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	09110	JACK ASSY					
8708-9001	FJ62			09111-60050-	1		
	09114	EXTENSION SUB-ASSY, JACK HANDLE					
8708-9001	FJ62			09114-60050-	2		
	09115	ROD SUB-ASSY, JACK HANDLE					
8708-9001	FJ62			09115-60030-	1		
	09116	LEVER, JACK HANDLE					
8708-9001	FJ62			09116-35041-	1		
	09120	BAG, TOOL					
8708-9001	FJ62			09120-60100-	1		
	09130	PLIERS					
8708-9001	FJ62			99913-11500-	1		
	09135	DRIVER, SCREW					
8708-9001	FJ62			99915-10700-	1		
	09141	SPANNER					
8708-9001	FJ62		8X10	99914-10810-	1		
8708-9001	FJ62		12X14	99914-11214-	1		
	09145	WRENCH, MONKEY					
8708-9001	FJ62			99911-11200-	1		
	09150	WRENCH, HUB NUT BOX					
8708-9001	FJ62			09150-60020-	1		
	09155	WRENCH, SPARK PLUG					
8708-9001	FJ62			09155-44010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	11711 BEARING, CRANKSHAFT CONTINUED						
8708-9001	3FE..FJ62	MARK 3, NO.1		11701-61010-03	1		
8708-9001	3FE..FJ62	MARK 4, NO.1		11701-61010-04	1		
8708-9001	3FE..FJ62	MARK 5, NO.1		11701-61010-05	1		
	13011 RING SET, PISTON						
8708-9001	3FE..FJ62	STD		13011-61062-	1		
8708-9001	3FE..FJ62	O/S 0.50		13013-61062-	1		
8708-9001	3FE..FJ62	O/S 1.00		13015-61062-	1		
8708-9001	3FE..FJ62	O/S 1.50		13017-61062-	1		
	13041 BEARING, CONNECTING ROD						
8708-9001	3FE..FJ62	MARK A	*	13041-35020-0A	6		
8708-9001	3FE..FJ62	MARK B	*	13041-35020-0B	6		
8708-9001	3FE..FJ62	MARK C	*	13041-35020-0C	6		
	13101 PIS , SUB-ASSY, W/PIN						
8708-8801	3FE..FJ62	STD	#	13101-61031- (13101-61031-02)	6 6		
8708-8805	3FE..FJ62	O/S 1.50	#	13107-61031- (13107-61032-)	6 6		
8801-8805	3FE..FJ62	STD, MARK 1	#	13101-61031-01 (13101-61032-01)	6 6		
8801-8805	3FE..FJ62	STD, MARK 2	#	13101-61031-02 (13101-61032-02)	6 6		
8801-8805	3FE..FJ62	STD, MARK 3	#	13101-61031-03 (13101-61032-03)	6 6		
8805-9001	3FE..FJ62	MARK 1		13101-61032-01	6		
8805-9001	3FE..FJ62	MARK 2		13101-61032-02	6		
8805-9001	3FE..FJ62	MARK 3		13101-61032-03	6		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	13101 PISTON SUB-ASSY, W/PIN CONTINUED						
8805-9001	3FE..FJ62	O/S 0.50		13103-61032-	6		
8805-9001	3FE..FJ62	O/S 1.00		13105-61032-	6		
8805-9001	3FE..FJ62	O/S 1.50		13107-61032-	6		
	13101A RING, HOLE SNAP (FOR PISTON PIN)						
8708-9001	3FE..FJ62			90521-25002-	12		
	13201 ROD SUB-ASSY, CONNECTING						
8708-9001	3FE..FJ62			13201-38011-	6		
	13201A BUSH (FOR CONNECTING ROD SMALL END)						
8708-9001	3FE..FJ62			90999-73072-	6		
	13202 BEARING SET, CONNECTING ROD						
8708-9001	3FE..FJ62	U/S 0.25		13204-61020-	1		
	13265 BOLT, CONNECTING ROD						
8708-9001	3FE..FJ62			13265-39025-	12		
	13265A NUT, HEXAG R CONNECTING ROD BOLT)						
8708-9001	3FE..FJ62			90170-10198-	12		
	13411 CRANKSHAFT						
P 8708-8910	3FE..FJ62			13401-61021-	1		
B 8910-9001	3FE..FJ62..WGG			13401-61023-	1		
	13411C PIN, STRAIGHT (FOR CRANKSHAFT)						
8708-9001	3FE..FJ62			90241-10017-	1		

(8708-)

VP : Vane Pump
AL : Alternator
CK : Crankshaft
CC : Cooler Compressor
IP : Idle Pulley
WP : Water Pump
AP : Air Pump

	PNC		PNC
———	16361A	—·—·—	17610B
———	88310A		

3FE

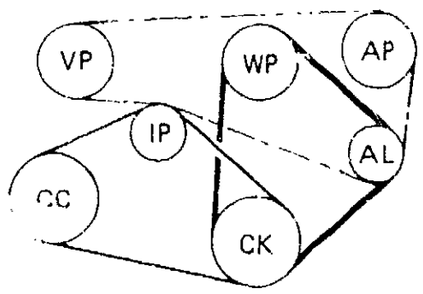

MA A059-B

PROD. DATE	JDELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	← 16361A →	BELT, V (FOR FAN AND ALTERNATOR)					
8708-9001	3FE..FJ62			90916-02141-	1		
	← 17610B →	BELT, V (FOR AIR PUMP)					
8708-9001	3FE..FJ62			90916-02193-	1		
	← 88310A →	BELT, V (FOR COOLER COMPRESSOR TO CRANKSHAFT PULLEY)					
8708-8808	FJ62			99332-11180-	1		
8808-9001	FJ62..WGG			99332-11175-	1		


FIG. 17-05 CAUTION PLATE & NAME PLATE

(8708-)


11292




11298

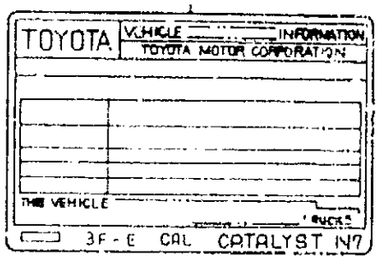


16793

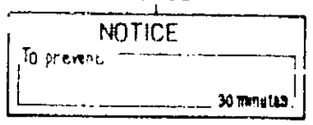

17700C

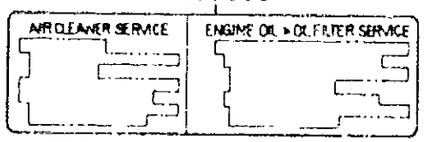

17792

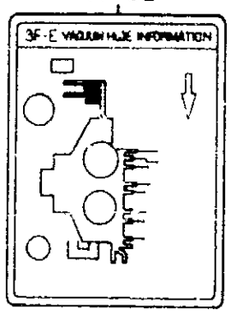

MA A061

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		11292 PLATE, ENGINE NAME, NO.2						
	8708-9001	3FE..FJ62			11292-61010-	1		
		11298 PLATE, EMISSION CONTROL INFORMATION						
	8708-8808	3FE..FJ62..USA			11298-61040-	1		
	8708-8808	3FE..FJ62..USA	CALIFORNIA SPEC		11298-61050-	1		
	8708-8808	3FE..FJ62..CND			11298-61060-	1		
N	8808-8908	3FE..FJ62..USA			11298-61041-	1		
N	8808-8908	3FE..FJ62..USA			11298-61051-	1		
S	8808-8908	3FE..FJ62..CND			11298-61061-	1		
N	8908-9001	3FE..FJ62..WGG..USA			11298-61042-	1		
N	8908-9001	3FE..FJ62..WGG..USA	EX. EMISSION CONTROL		11298-61052-	1		
N	8908-9001	3FE..FJ62..CND			11298-61062-	1		
		16793 PLATE, FAN CAUTION						
	8708-9001	3FE..FJ62			16793-61011-	1		
		17700C PLATE, AIR CLEANER CAUTION (FOR ENGINE MODEL)						
F	8708-8908	3FE..FJ62			17791-61023-	1		
B	8908-9001	3FE..FJ62..WGG			17791-61070-	1		
		17792 PLATE, ENGINE VACUUM HOSE INFORMATION						
	8708-9001	3FE..FJ62			17792-61120-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	25691	BRACKET, EGR VACUUM MODULATOR					
8708-9001	3FE..FJ62			25691-61020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

CONTENTS
(PART NUMBER - LOCATION)

04044 - 16361 ---------- A14
16363 - 35676 ---------- B14
35676 - 45130 ---------- C14
45130 - 57402 ---------- D14
57405 - 67917 ---------- E14
68111 - 81520 ---------- F14
81521 - 89668 ---------- G14
89669 - 90389 ---------- H14
90389 - 91511 ---------- I14
91511 - 99915 ---------- J14

A14

PART NUMBER	LOCATION		PART NUMBER	LOCATION		PART NUMBER	LOCATION
04044-60150-	2J7		11253-61010-	1H1		13103-61032-	1A2
04111-61070-	1E1		11292-61010-	1A4		13105-61032-	1A2
04112-61060-	1E1		11298-61040-	1A4		13107-61031-	1A2
04351-60011-	2D1	N	-61041-	1A4		-61032-	1A2
04371-10011-	2M6	N	-61041-	1A4		13201-38011-	1A2
-36030-	2K4		-61010-	1A4		13204-61020-	1A2
04412-60030-	2B5	N	-61051-	1A4		13265-39025-	1A2
04434-60012-	2E9	N	-61052-	1A4	P	13401-61021-	1A2
04443-60330-	2G8		-61060-	1A4	B	-61023-	1A2
04445-60030-	2J7	S	-61061-	1A4		13470-61030-	1B2
04445-60030-	2D7	N	-61062-	1A4		13471-61010-	1B2
-35010-	2D7		11302-61031-	1J1		13511-60040-	1C2
04455-60020-	2J7		11311-61020-	1J1		13521-61010-	1B2
04474-60010-	2J8	P	11312-61020-	1J1		13523-61010-	1C2
04476-60050-	2J8	B	-61021-	1J1		13571-61010-	1C2
04477-60010-	2B9		11328-61010-	1J1		13711-61010	1C2
04479-30030-	2H8		11369-60011-	1J1		13715-61040-	1D2
04481-60030-	2H9	P	11400-61120-	1D1		13734-60030-	1D2
04482-60040-	2H9	B	-61121-	1D1		13741-60030-	1D2
	2L9	B	11401-69306-	1H1		-61010-	1D2
04483-60050-	2L9		11452-61010-	1I1		13751-61020-	1D2
04491-60030-	2H8		11495-61010-	1H1		13755-61020-	1D2
04493-60160-	2D8		11701-61010-01	1M1		13781-61020-	1D2
04495-60010-	2J8		-61010-02	1M1		13811-61030-	1D2
-60011-	2J8		-61010-03	1M2		13812-61030-	1D2
09114-60050-	1A1		-61010-04	1A2		13901-61020-	1D2
09115-60030-	1A1		-61010-05	1A2		13952-61012-	1D2
09116-35041-	1A1		11704-61010-	1M1		13994-61020-	1D2
09121-60100-	1A1		11705-61010-	1M1		15012-60014-	1E2
09150-60020-	1A1		11802-61010-	1C2		15100-61014-	1E2
09155-44010-	1A1		11804-61010-	1C2		15121-61011-	1E2
09183-00030-	1B1		11805-61010-	1C2		15122-61011-	1E2
-60010-	1B1		12101-61030-	1I1		15125-61013-	1E2
11011-61020-	1M1		12151-61011-	1I1		15126-61013-	1E2
11012-61010-	1M1		12157-10010-	2F5		15131-24010-	1E2
11013-61010-	1M1			2H1		15132-40010-	1E2
11071-61010-01	1M1			2H6		15133-24010-	1E2
-61010-02	1M1		12180-61010-	1G1		15301-60030-	1I1
-61010-03	1M1		12195-71020-	1G1		15303-60070-	1F2
-61010-04	1M1		12204-35040-	1L1		15400-41010-	1G2
-61010-05	1M1		12221-61010-	1L1		15609-61012-	1G2
11072-61010-01	1M1		12261-61060-	1L1		15691-60010-	1G2
-61010-02	1M1		12262-61020-	1L1		15701-61010-	1H2
-61010-03	1M1		12311-61071-	1K1		15702-61010-	1H2
-61010-04	1M1		12361-61030-	1K1		15703-61030-	1H2
-61010-05	1M1	A	-61031-	1K1		16101-60195-	1I2
11073-61010-01	1M1		12371-61040-	1K1		16101-61180-	1I2
-61010-02	1M1	A	-61041-	1K1		16107-61110-	1I2
-61010-03	1M1	P	12511-61060-	1K1		16114-61110-	1I2
-61010-04	1M1	B	-61061-	1A1		16111-61071-	1I2
-61010-05	1M1		13011-61062-	1A2		16113-61070-	1I2
11101-61080-	1F1		13013-61062-	1A2		16118-41050-	1I2
11115-61020-	1F1		13015-61062-	1A2		16210-61140-	1I2
11122-61011-	1F1		13017-61062-	1A2		16219-52010-	1I2
11123-61011-	1F1		13041-35020-07	1A2		16241-61020-	1K2
11126-61011-	1G1		-35020-08	1A2		16304-61010-	1K2
11127-61011-	1G1		-35020-JC	1A2		16308-61010-	1K2
11131-61010-	1G1		13101-61031-	1A2		16311-61010-	1I2
11132-61010-	1G1		-61031-01	1A2		16313-61020-	1K2
11135-60070-	1G1		-61031-02	1A2		16314-61030-	1K2
11136-60030-	1G1		-61031-03	1A2		16341-61020-	1K2
11201-61041-	1G1		-61032-01	1A2		16343-61010-	1K2
11213-61020-	1G1		-61032-02	1A2		16360-61015-	1K2
11251-61020-	1H1		-61032-03	1A2		16361-61020-	1K2

REVISION REFERENCE CODE LIST

A15

NOTICE

FRAME NUMBER AND VEHICLE IDENTIFICATION NUMBER

1. FRAME NUMBER MX62-123456

FRAME NUMBER IS GIVEN ON THE DASH COWL IN THE ENGINE ROOM FUNCTION IN TOYOTA PARTS CATALOGS IS LISTED IN THE REVISION REFERENCE CODE LIST TO IDENTIFY ENGINEERING CHANGE PERIOD AS BEFORE SO, IN LOCATING PARTS CATALOG, TAKE A LOOK AT FRAME NUMBER ON CORRESPONDING VEHICLE

REV. REF. CODE	ENGINE NO. OR FRAME NO.
1	MX62-123456


2. NAME PLATE

NAME PLATE IS ATTACHED TO THE DASH COWL IN THE ENGINE ROOM. MODEL COLUMN INDICATES FULL MODEL CODE, SO, FOR MODEL INFORMATION, REFER TO THE NAME PLATE AS BEFORE.

PROCEDURE TO DETERMINE FRAME NUMBER FROM NAME PLATE IS.

a + b =

MX62-123456

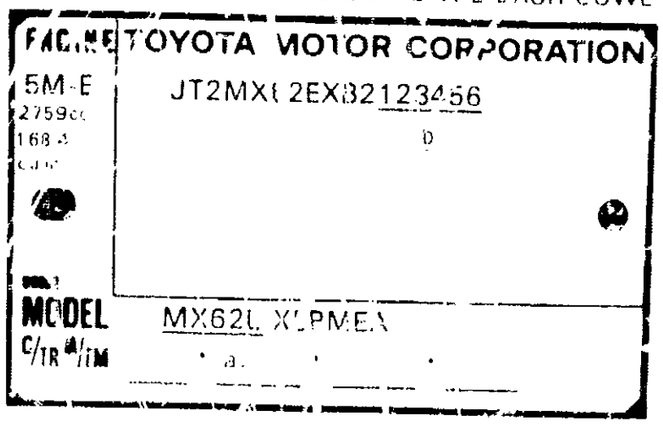

3. VEHICLE IDENTIFICATION NUMBER JT2MX62EXB2123456

VEHICLE IDENTIFICATION NUMBER IS GIVEN TO VIN PLATE ON LEFT HAND OF DASH BOARD, CERTIFICATION REGULATION PLATE ON LEFT DOOR PILLAR AND NAME PLATE

Starting Frame Number Per Each Assembly Line
(Production from Aug. '87 up to Jan. '90)

Assembly Line / Applicable Model	Toyota Motor Motomachi Plant (A21 ~ A26)
FJ62-	074006 ~

REV. REF. CODE	ENGINE NO. OR FRAME NO. OR TRANS. NO.	REV. REF. CODE	ENGINE NO. OR FRAME NO. OR TRANS. NO.	REV. REF. CODE	ENGINE NO. OR FRAME NO. OR TRANS. NO.
2	FJ62-096260				
3	FJ62-096261				

GUIDE TO CONTENTS

1. MODELS COVERED & CHARACTERISTICS ..... C 15, D 15 (included in each fiche)

2. MARK & ABBREVIATION ..... B 16 (included in each fiche)
   I 13 thru M 13 (included in the fiche No. 4 of 4)

3. INDEX

   ILLUSTRATED INDEX ..... D 16 thru K 16 (included in each fiche)

   FIGURE NUMBER INDEX ..... L 16, M 16 (included in each fiche)

4. ILLUSTRATIONS & TEXT ..... From 1-A1 (included in each fiche)

   The contents (illustrations & text) have been divided

   into groups by function in the following sequence:

   Engine

   Fuel

   Power train · Chassis

   Body

   Electrical

5. APPENDICES

   PART NAME ⇨ LOCATION LIST ..... A 12 thru H 13 (included in the fiche No. 4 of 4)

   PART NUMBER ⇨ LOCATION LIST ..... A 14 thru J 14 (included in each fiche)

   REVISION REFERENCE CODE LIST ..... A 15 (included in each fiche)

   PRODUCTION FRAME NUMBER
   REFERENCE LIST ..... B 15 (included in each fiche)

Note : SST (Special Service Tools) are not included in this parts catalog.

For related part number information can be noted in SST List, Service Bulletin and Repair Manual.


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	09183	WRENCH, WHEEL CAP					
8708-9001	FJ62			09183-00030-	1		
	09183A	REPLACER, WHEEL CAP					
8708-9001	FJ62			09183-60010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	13411D	SEAL, OIL (FOR CRANKSHAFT)					
8708-9001	3FE..FJ62			90311-93005-	1		
	13471	PULLEY, CRANKSHAFT					
8708-9001	3FE..FJ62			13470-61030-	1		
	13471A	KEY, CRANKSHAFT (FOR CRANKSHAFT PULLEY SET)					
8708-9001	3FE..FJ62			90281-07004-	1		
	13471E	NUT (FOR CRANKSHAFT PULLEY)					
8708-9001	3FE..FJ62			90179-22010-	1		
	13477	PULLEY, CRANKSHAFT, NO.2					
8708-9001	3FE..FJ62			13471-61010-	1		
	13521	GEAR OR SPROCKET, CRANKSHAFT TIMING					
8708-9001	3FE..FJ62			13521-61010-	1		
	13521A	KEY (FOR CRANKSHAFT TIMING GEAR)					
8708-9001	3FE..FJ62			90280-05010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T


(8708-)

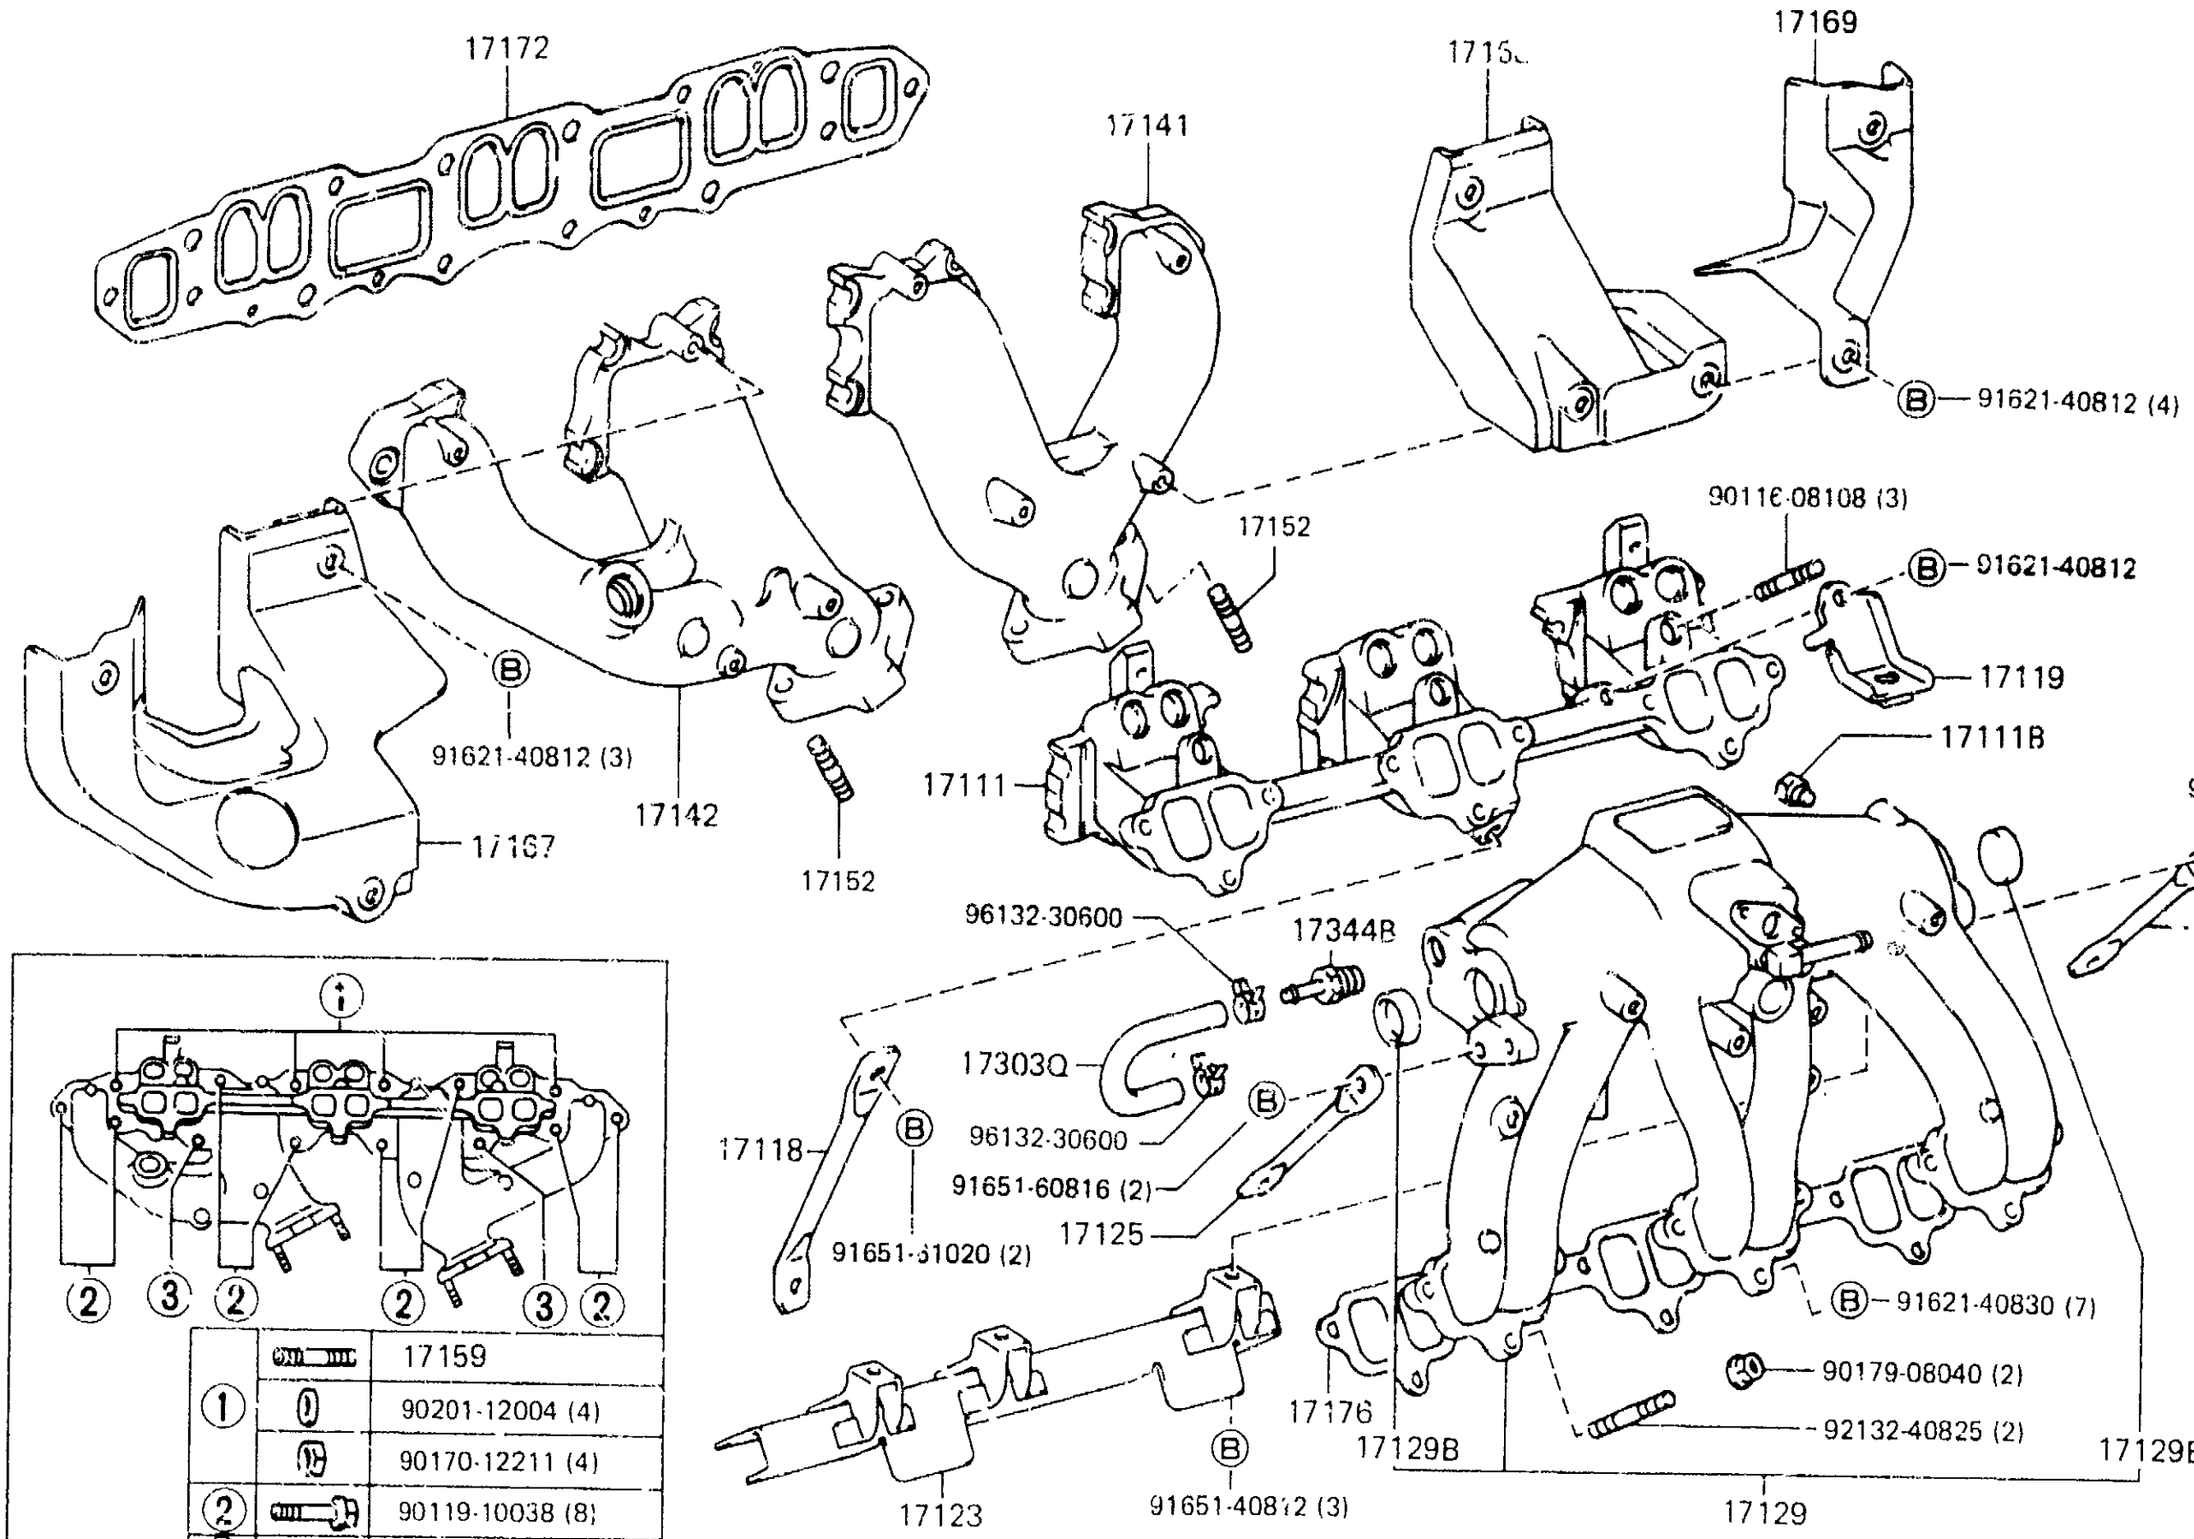

1		17159
		90201-12004 (4)
		90170-12211 (4)
2		90119-10038 (8)
3		90119-12069 (2)

MA 9880-A

(8708-)

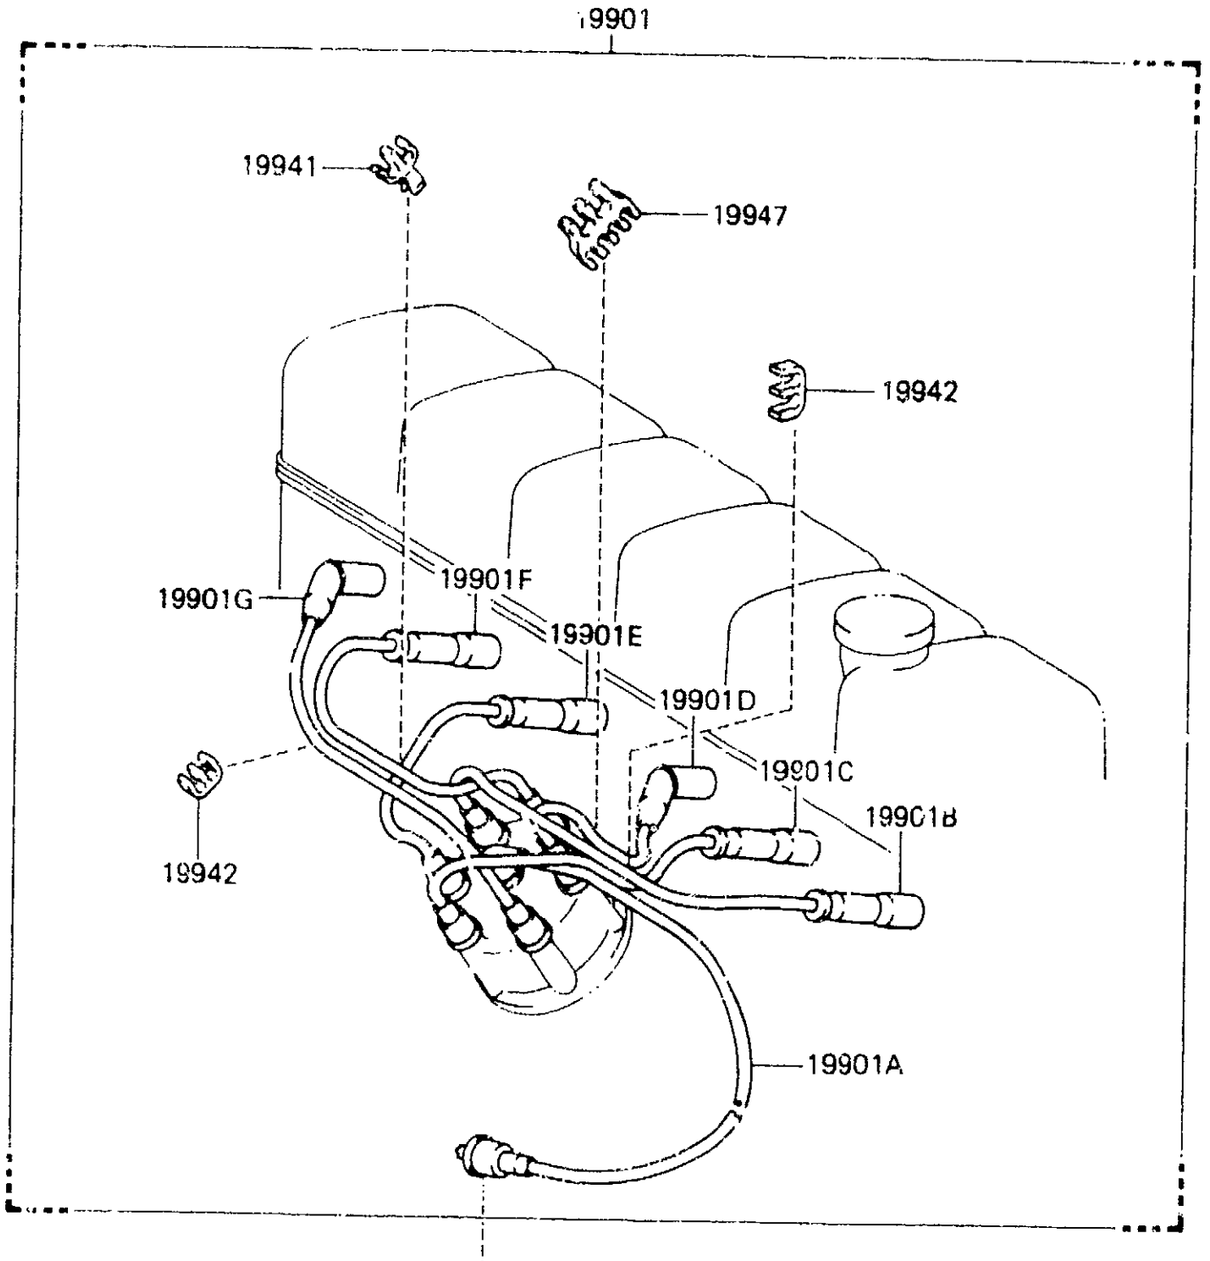

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	19100P	PLUG, SPARK					
8708-9001	3FE..FJ62	W16EXR-U		90919-01064-	6		
	19500	COIL ASSY, IGNITION					
8708-9001	3FE..FJ62			90919-02113-	1		
	19519	COVER, IGNITION COIL					
8708-9001	3FE..FJ62			19519-38030-	1		
	19901	CORD SET, COIL AND SPARK, W/RESISTIVE					
8708-9001	3FE..FJ62			90919-21410-	1		
	19901A	CORD, COIL RESISTIVE					
8708-8809	3FE..FJ62			90919-13271-	1		
A 8809-90[illegible]	3FE..FJ62..WGG			90919-13328-	1		
	19901B	CORD, SPARK PLUG RESISTIVE, NO.1					
8708-8809	3FE..FJ62			90919-12747-	1		
A 8809-9001	3FE..FJ62..WGG			90919-12951-	1		
	19901C	CORD, SPARK PLUG RESISTIVE, NO.2					
8708-8809	3FE..FJ62			90919-12748-	1		
A 8809-9001	3FE..FJ62..WGG			90919-12952-	1		
	19901D	CORD, SPARK PLUG RESISTIVE, NO.3					
8708-8809	3FE..FJ62			90919-12745-	1		
A 8809-9001	3FE..FJ62..WGG			90919-12949-	1		
	19901E	CORD, SPARK PLUG RESISTIVE, NO.4					
8708-8809	3FE..FJ62			90919-12746-	1		

PART NUMBER	LOCATION
16363-61020-	1K2
16381-61050-	1K2
16334-61010-	1K2
16400-61140-	1K2
16401-71010-	1L2
16405-61030-	1L2
-90A00-	1L2
16417-24200-	1L2
16418-24200-	1L2
16480-90A00-	1L2
16571-61110-	1L2
16572-61020-	1L2
16573-61040-	1L2
16577-61130-	1L2
16582-61010-	1L2
16583-61010-	1L2
16584-61010-	1L2
16585-61010-	1M2
16586-61010-	1M2
16611-61020-	1M2
16630-61020-	1K1
16711-61240-	1M2
A -61241-	1M2
16793-61011-	1A4
17109-61010-	1C3
17111-61040-	1C3
17118-61030-	1C3
17123-61010-	1C3
17125-61010-	1C3
17139-61010-	1C3
17141-61080-	1C3
17142-61050-	1C3
17167-61070-	1C3
17168-61030-	1C3
17169-61040-	1C3
17172-61060-	1C3
17176-61010-	1C3
17301-61010-	1I3
17303-61020-	1M3
17306-61030-	1J3
17314-61040-	1H3
17317-61020-	1K2
17318-61060-	1H3
17341-61030-	1I3
17342-61040-	1I3
17343-61030-	1I3
17344-61020-	1I3
17353-61010-	1J3
17401-61210-	1E3
17402-61010-	1E3
17403-61110-	1E3
17405-61240-	1E3
17502-61021-	1E3
17567-61030-	1E3
17571-61160-	1E3
17572-61051-	1E3
17573-6 051-	1E3
17574-61050-	1E3
-61071-	1E3
17610-61040-	1H3
17692-61020-	1M3
17700-61230-	1F3
17705-61130-	1F3
P 17791-61023-	1A4
B 17791-61070-	1A4
17792-61120-	1A4
17801-68020-	1F3
17810-61010-	1M3
17841-68010-	1F3
17845-61011-	1F3
17881-61090-	1F3
17882-61070-	1F3
17883-61020-	1G3
A 18450-61010-	1E3
-61040-	1E3
18495-38020-	1E3
P 19000-61350-	1C1
N -61351-	1C1
19100-61240-	1D4
19101-61240-	1D4
19102-61240-	1D4
19114-61040-	1D4
19115-50010-	1D4
19127-61240-	1D4
19195-61240-	1D4
19242-61240-	1D4
19519-38030-	1B4
22202-61011-	1J4
22210-61010-	1J4
22216-74010-	1J4
22233-61010-	1J4
22250-61010-	1G3
22270-61010-	1J4
22271-61010-	1K4
22275-43010-	1G3
22278-43011-	1K4
23091-61010-	1K4
23206-61010-	1K4
23207-74010-	1K4
23208-61010-	1K4
23217-35040-	1K4
P -35081-	1K4
23220-16083-	1K4
-16190-	1K4
23229-16010-	1K4
23232-28010-	1K4
23239-16010-	1K4
23249-74150-	1K4
23260-69025-	1K4
23280-61010-	1K4
23291-73010-	1L4
23293-74010-	1L4
23300-69025-	1L4
23801-61030-	1L4
23802-61040-	1L4
23803-61010-	1L4
23807-61010-	1L4
25611-61050-	1M4
25620-61110-	1M4
25627-61010-	1M4
25631-61040-	1M4
25691-61020-	1A5
25695-61010-	1M4
25702-61010-	1M3
25710-61030-	1J3
25716-61020-	1J3
25820-13020-	1M3
25860-61010-	1M3
25870-61020-	1M4
27060-61090-	1E4
27212-39050-	1E4
27310-72070-	1E4
27312-45010-	1E4
27330-72070-	1E4
27351-38051-	1E4
27359-61190-	1F4
27362-72070-	1F4
27371-31011-	1F4
27372-31011-	1F4
27410-72070-	1F4
27411-31210-	1F4
27412-45012-	1F4
27441-45050-	1F4
27700-63030-	1F4
27790-13010-	3H9
28011-26042-	1G4
28100-60070-	1G4
28110-60070-	1G4
28120-26071-	1G4
28130-34060-	1G4
28140-26070-	1G4
28150-34080-	1G4
28160-26070-	1G4
28165-26040-	1H4
28228-26040-	1H4
28229-26040-	1H4
28253-45020-	1G4
28254-45020-	1H4
28800-61030-	3K8
28897-38010-	3K8
28898-26010-	3K8
31478-30010-	2H8
	2K8
P 32000-60030-	2E1
B -60031-	2E1
-60040-	2E1
P 32101-60010-	2E1
B -60011-	2E1
P 32116-60010-	2E1
B -60011-	2E1
P 32117-60010-	2E1
B -60011-	2F1
32904-60012-	2K3
32905-60012-	2K3
32906-60012-	2K3
32923-36010-	2K3
32924-60011-	2K3
32925-60030-	2K3
32926-30020-	2L3
32928-60011-	2L3
32942-60010-	2L3
-60030-	2L3
32943-60010-	2L3
33309-60041-	2A4
-60070-	2A4
33325-60010-	2A4
-60021-	2A4
A 33403-69195-	2J1
33404-30040-	2J1
33481-60050-	2D4
-60051-	2D4
33485-30020-	2J1
33502-60040-	2A1
33503-60020-	2A1
33511-60060-	2A1
33542-30110-01	2A1
-30110-36	2A1
33555-60040-	2A1
33623-30040-56	2A1
33625-22020-	2B1
33631-60020-	2B1
33711-60040-	2B1
33723-22010-	2B1
33789-36010-	2B6
34101-60010-	2K1
34421-36010-	2M2
34601-36010-	2K1
34602-36010-	2K1
34613-36010-	2L1
34710-36010-	2L1
34713-36010-	2L1
34731-36010-	2L1
34732-36010-	2L1
34737-36010-	2L1
34738-36010-	2L1
35000-60163-	2D1
-60163-	2D1
35013-60011-	2G1
35015-60010-	2G1
-60011-	2G1
35017-60010-	2G1
35019-60010-	2G1
35035-36010-	2E1
35068-36010-	2F2
35073-60010-	2G2
35103-60011-	2G1
-60012-	2G1
P 35104-60010-	2G1
N -60011-	2G1
35106-60041-	2H1
N -60043-	2H1
35111-60010-	2H1
35112-36010-	2M2
35113-36010-	2M2
35114-36010-	2M2
35115-36010-	2M2
35116-60010-	2H1
35117-60010-	2H1
35118-60010-	2H1
35136-60010-	2H1
35138-60010-	2H1
35143-36010-	2H1
35144-36010-	2H1
35146-36010-	2I2
P 35167-60011-	2H1
N -60012-	2H1
35168-36010-	2I1
35182-36010-	2H1
35211-36010-	2M2
-36011-	2M2
35212-36010-	2A3
35213-36010-	2A3
35215-36010-	2A3
35216-36010-	2A3
35219-60010-	2A3
-60011-	2A3
35222-60010-	2A3
35223-36010-	2A3
35226-36010-	2A3
-36011-	2A3
35231-36010-	2A3
35303-60010-	2A3
35308-36010-	2F1
35313-36010-	2F1
35321-36010-	2F1
-36020-	2F1
35322-36010-	2F1
-36020-	2F1
35339-36010-	2A3
35394-30011-	2I1
35395-36010-	2I2
35396-36010-	2A3
35405-36010-	2A3
35408-36010-	2A3
35409-36010-	2B3
35415-36010-	2B3
35416-36010-	2B3
35417-36010-	2B3
35418-36010-	2B3
35419-36010-	2B3
35420-60030-	2B3
35422-32010-	2B3
-36010-	2B3
35423-36010-	2B3
35424-36010-	2B3
35425-22010-	2C3
-36010-	2C3
35427-36010-	2F1
35428-60020-	2C3
35429-36010-	2C3
35430-60090-	2C3
35432-60030-	2C3
-60040-	2B1
35433-36010-	2C3
35434-36010-	2C3
35435-36011-	2C3
35436-36011-	2C3
35437-36011-	2C3
35438-60020-	2C3
35440-60011-	2C3
35444-36010-	2C3
35445-36010-	2D3
35451-36010-	2D3
35452-36010-	2D3
35454-36010-	2D3
35455-36010-	2D3
35456-36010-	2E3
35458-36010-	2E3
35459-36010-	2E3
35462-36010-	2E3
35463-36010-	2E3
35464-36011-	2E3
35466-60010-	2E3
35467-36010-	2F3
35468-36011-	2F3
35472-36011-	2F3
35476-36010-	2F3
35477-30030-	2F3
35479-36010-	2F3
35481-36011-	2I2
35481-36012-	2I2
35482-60020-	2I2
35483-60010-	2I2
35484-60011-	2I2
35485-60010-	2J2
35486-36010-	2J2
35487-36010-	2J2
35488-60010-	2F3
35489-36010-	2G3
35491-36010-	2G3
35492-36010-	2G3
35495-36010-	2F1
35497-36010-	2G3
35498-36010-	2G3
35501-36010-	2J3
35505-36010-	2J3
-36020-	2J3
35519-60030-	3M6
35520-60050-	2J3
35556-60010-	2J3
35557-36010-	2J3
35560-36011-	2G3
35561-60010-	2J3
35569-60040-	2B1
35572-60020-	2J3
35589-36010-	2G3
35595-36010-	2J3
35599-36010-	2H3
35602-36010-	2I2
35606-36010-	2A2
35608-36010-	2D2
	2K1
35615-36010-	2A2
	2A2
35617-36010-	2F1
-36020-	2E2
	2M1
35621-36010-	2D2
	2L1
35623-36010-	2F2
35631-36010-	2A2
35632-36010-	2D2
	2M1
-36020-	2F2
35633-36010-	2D2
	2M1
-36020-	2B2
	2M1
-36030-	2F2
35634-36010-	2B2
	2M1
-36020-	2B2
-36040-	2B2
-36050-	2B2
35651-36010-	2B2
35654-36010-	2B2
35671-36010-	2F2
35672-30010-	2B2
35675-36010-	2B2
B	2L1
-36020-	2B2
-36030-	2B2
-36040-	2B2
35676-36010-	2D2

LAND CRUISER Station Wagon U. S. A.

PRODUCTION FRAME NUMBER REFERENCE LIST

Applicable Model \ Production Date / Assembly Line	8701	8702	8703	8704	8705	8706	8707	8708	8709	8710	8711	8712
FJ62	TMC Honsya Plant								074039	07[illegible]76	0077221	0078169	0081050

Applicable Model \ Production Date / Assembly Line	8801	8802	8803	8804	8805	8806	8807	8808	8809	8810	8811	8812
FJ62	TMC Honsya Plant	0083764	0086005	0088379	0090616	0092239	0093490	0094861	0096292	0097372	0098711	0100682	0102775

Applicable Model \ Production Date / Assembly Line	8901	8902	8903	8904	8905	8906	8907	8908	8909	8910	8911	8912
FJ62	TMC Honsya Plant	0104336	0105696	0107184	0109030	0110721	0111941	0113601	0115125	0116180	0117954	0119300	0120955

MARK & ABBREVIATION LIST

B16

(1) Abbreviations Under Heading MODELS in Text

Heading	Mark	Definition
MODELS	..	Among
	,	And
	+	And (Plus)
	–	Excluded (minus)
	#	All series

(2) Abbreviations Under Heading "R/P and QTY" in Text

Heading	Mark	Definition
R/P	=	Old parts number (Old)
	*	Modified old parts number which has been substituted by a multiple of parts and/or if substituted parts are specified by applicable models or other determining specifications, refer to SUBSTITUTE SUPPLY PARTS LIST (S.S.P.L.) for detailed information (New)
	┐	New main part number of set substitution (New)
	•	Part number to be attached to main part (New)
	X	Number of previously supplied but currently not supplied parts
QTY	33	Required quantity
	X	Required quantity
	Y	More than 100 units
DESCRIPTION	¥¥¥	Number of old type parts, the supply of which will be discontinued after the lapse of a certain period
	(TRIM ●)	Trim code whose third digit is ●

(3) CHANGES TO TEXT & APPENDICES


Certain codes are used to indicate changes to the text and/or appendix.

These codes appear in the marginal area of the affected page as follows:

CODE	LOCATION	EXPLANATION
C	Text	Changes of Parts Number, Model and Production Date.
B		Data with a changed part number
A		Data with a changed application model
P		Data with a changed year system (beginning end)
N	Text & Appendix	Newly available Toyota Part Number.
S	Text & Appendix	Part application expanded to include other vehicle model(s)

(8708-)


11000

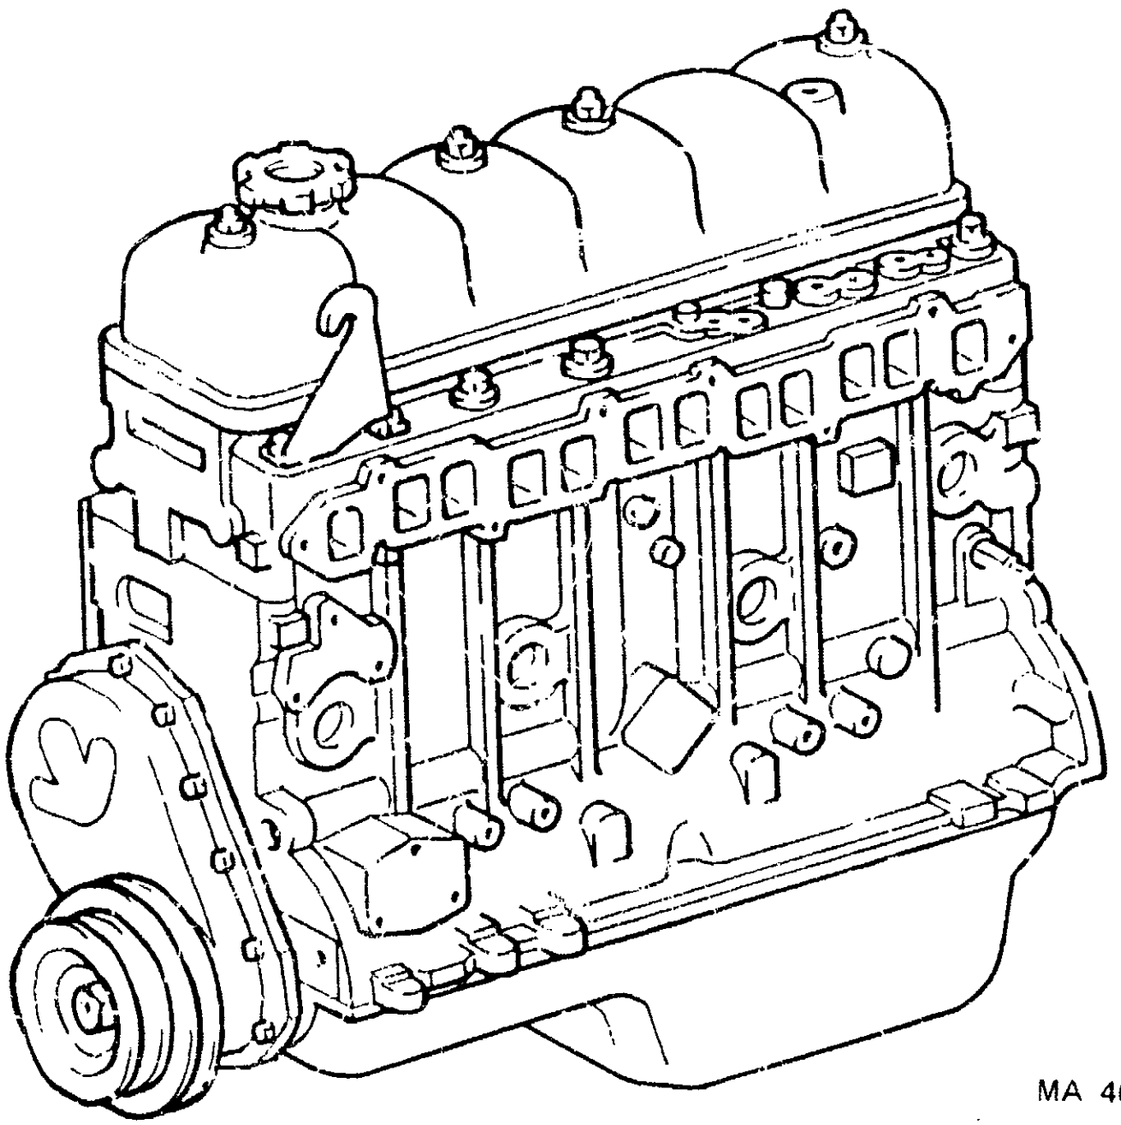

MA 4674

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		11000	ENGINE ASSY, PARTIAL					
P	8708-8910	3FE..FJ62			19000-61350-	1		
N	8910-9001	3FE..FJ62			19000-61351-	1		

(8708-)

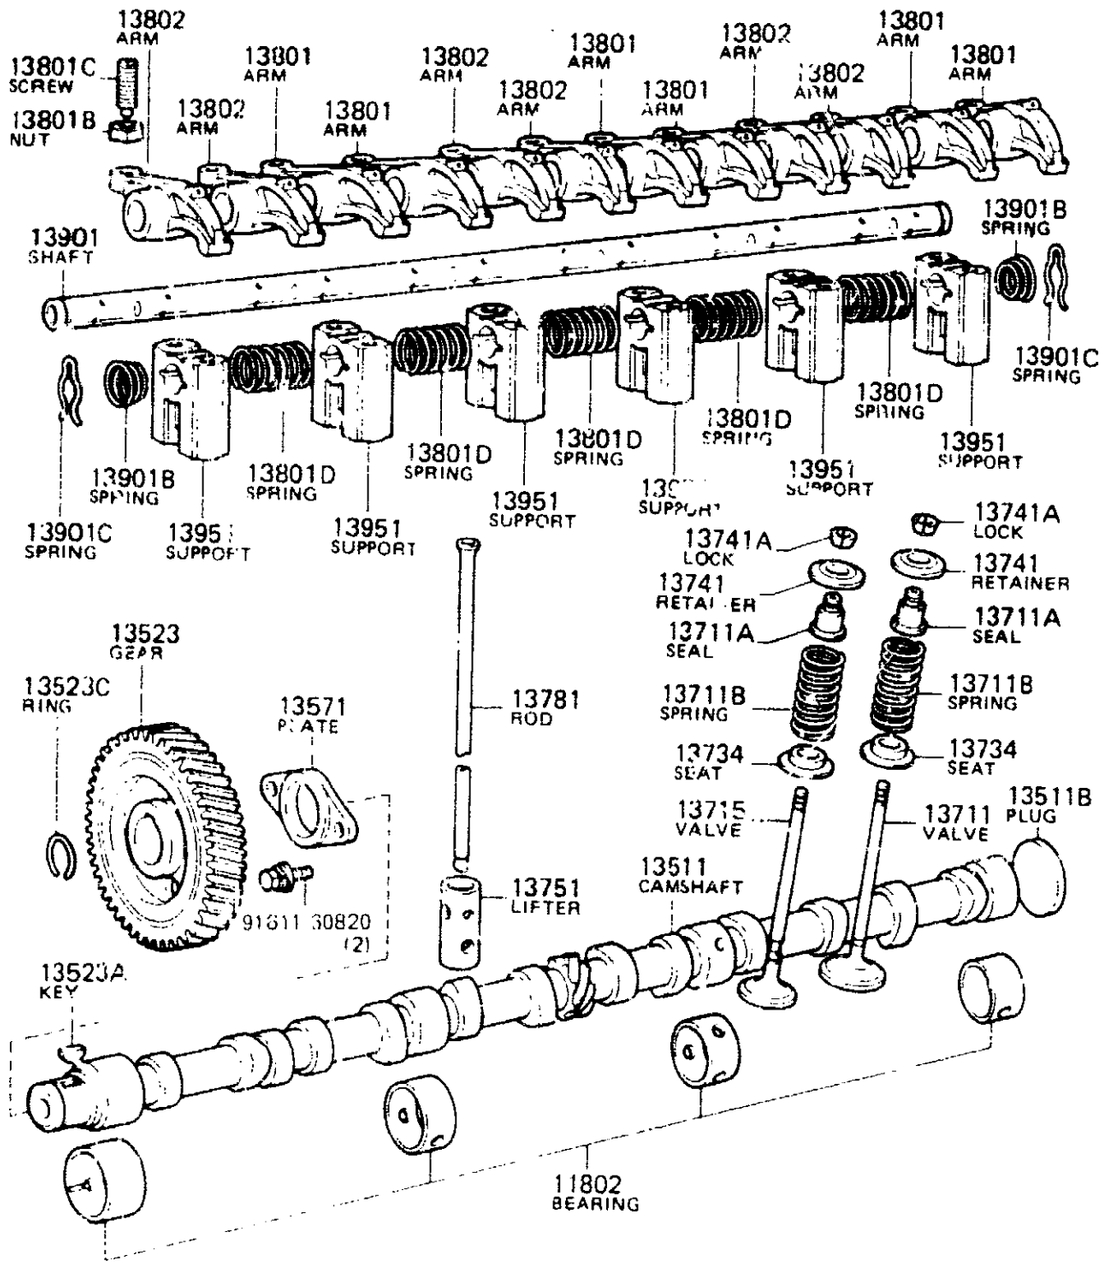

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	11802	BEARING SET, CAMSHAFT					
8708-9001	3FE..FJ62	STD		11802-61010-	1		
8708-9001	3FE..FJ62	U/S 0.25		11804-61010-	1		
8708-9001	3FE..FJ62	U/S 0.50		11805-61010-	1		
	13511	CAMSHAFT					
8708-9001	3FE..FJ62			13511-60060-	1		
	13511B	PLUG, EXPANSION (FOR CAMSHAFT)					
8708-9001	3FE..FJ62			90331-48010-	1		
	13523	GEAR OR SPROCKET, CAMSHAFT TIMING					
8708-9001	3FE..FJ62			13523-61010-	1		
	13523A	KEY, WOODRUFF (FOR TIMING GEAR)					
8708-9001	3FE..FJ62			90280-05010-	1		
	13523C	RING, SNAP CAMSHAFT (FOR TIMING GEAR)					
8708-9001	3FE..FJ62			90520-29051-	1		
	13571	PLATE, CAMSHAFT THRUST					
8708-9001	3FE..FJ62			13571-61010-	1		
	13711	VALVE, INTAKE					
8708-9001	3FE..FJ62			13711-61010-	6		
	13711A	SEAL OR RING, O (FOR VALVE STEM OIL)					
8708-9001	3FE..FJ62			90913-02048-	12		
	13711B	SPRING, COMPRESSION (FOR INNER)					
8708-9001	3FE..FJ62			90501-45342-	12		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	17111	MANIFOLD, INTAKE					
8708-9001	3FE..FJ62			17111-61040-	1		
	17111B	PLUG, NO.2					
8708-9001	3FE..FJ62			# 90345-51025- (90345-51006-)	1 1		
	17118	STAY, MANIFOLD					
8708-9001	3FE..FJ62			17118-61030-	1		
	17119	STAY, MANIFOLD, NO.2					
8708-9001	3FE..FJ62			17139-61010-	1		
	17123	COVER, SURGE TANK					
8708-9001	3FE..FJ62			17123-61010-	1		
	17125	STAY, SURGE TANK, NO.1					
8708-9001	3FE..FJ62			17125-61010-	2		
	17129	TANK, INTAKE AIR SURGE					
8708-9001	3FE..FJ62			17109-61010-	1		
	17129B	PLUG					
8708-9001	3FE..FJ62			95411-43000-	2		
	17141	MANIFOLD, EXHAUST					
8708-9001	3FE..FJ62			17141-61080-	1		
	17142	CASE, EXHAUST MANIFOLD, NO.2					
8708-9001	3FE..FJ62			17142-61050-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	17152	BOLT, STUD (FOR MANIFOLD TO EXHAUST PIPE)					
B 8708-9001	3FE..FJ62			90116-10087-	4		
	17159	BOLT, STUD (FOR MANIFOLD TO CYLINDER HEAD)					
8708-9001	3FE..FJ62			90116-12011-	4		
	17167	INSULATOR, EXHAUST MANIFOLD HEAT, NO.1					
8708-9001	3FE..FJ62			17167-61070-	1		
	17168	INSULATOR, EXHAUST MANIFOLD HEAT, NO.2					
8708-9001	3FE..FJ62			17168-61030-	1		
	17169	INSULATOR, EXHAUST MANIFOLD HEAT, NO.3					
8708-9001	3FE..FJ62			17169-61040-	1		
	17172	GASKET, MANIFOLD TO CYLINDER HEAD					
8708-9001	3FE..FJ62			17172-61060-	1		
	17176	GASKET, AIR SURGE TANK TO INTAKE MANIFOLD					
8708-9001	3FE..FJ62			17176-61010-	1		
	17303Q	HOSE (FOR PIPE TO UNION)					
8708-9001	3FE..FJ62	L=200		95333-06020-	1		
	17344B	UNION (FOR AIR HOSE)					
8708-9001	3FE..FJ62			90404-54035-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		19901E	CORD, SPARK PLUG RESISTIVE, NO.4 CONTINUED					
A	8809-9001	3FE..FJ62..WGG			90919-12953-	1		
		19901F	CORD, SPARK PLUG RESISTIVE, NO.5					
	8708-8809	3FE..FJ62			90919-12749-	1		
	8809-9001	3FE..FJ62..WGG			90919-12954-	1		
		19901G	CORD, SPARK PLUG RESISTIVE, NO.6					
	8708-8809	3FE..FJ62			90919-12750-	1		
A	8809-9001	3FE..FJ62..WGG			90919-12950-	1		
		19941	CLAMP, RESISTIVE CORD, NO.1					
	8708-9001	3FE..FJ62			90464-00105-	1		
		19942	CLAMP, RESISTIVE CORD, NO.2					
	8708-9001	3FE..FJ62			90464-00208-	2		
		19947	CLAMP, RESISTIVE CORD, NO.4					
	8708-9001	3FE..FJ62			90929-01192-	1		
		19965	BAND, IGNITION COIL, NO.1					
	8708-9001	3FE..FJ62			90919-03086-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

	PART NUMBER	LOCATION
B	35676-36010-	2L1
	-36020-	2D2
	-36030-	2D2
	-36040-	2D2
	-36070-	2F2
	-36080-	2F2
	-36090-	2F2
	35701-60010-	2B2
	35706-60011-	2E2
	35709-36010-	2E2
	35712-36010-	2C2
		2L1
	35713-36011-	2G2
	35719-60010-	2E2
	35720-60010-	2G2
	35735-36010-	2J2
	35737-36010-	2G2
	35738-60010-	2H2
	35743-60010-	2H2
	35748-36010-	2H2
	35760-60010-	2H2
	35761-60010-	2H2
	35762-60010-	2H2
	35785-36010-	2E2
		2M1
	35789-36010-	2M1
	-36020-	2B2
		2M1
	-36040-	2F1
	-36050-	2F1
	-36060-	2F1
	-36070-	2M1
	-36090-	2A2
		2B2
		2H2
	-36100-	2C2
	-36110-	2C2
	-36120-	2C2
	-36130-	2C2
	-36140-	2C2
	35790-36010-	2H2
	35791-36010-	2L1
	35847-36010-	2H3
	35893-36010-	2H3
	35906-60050-	2B1
	35921-60030-	2B1
	35971-60030-	2B1
	35972-60020-	2B1
	35974-60030-	2B1
	35975-60020-	2B1
	-60030-	2B1
	35976-60020-	2B1
	35989-60020-	2C1
	36103-60160-	2A4
	36110-6A790-	2M3
	36119-60010-	2B4
	-60020-	2B4
	-60030-	2B4
	36122-60040-	2B4
	36124-60020-	2B4
	36128-60021-	2B4
	36132-60020-	2B4
	36134-60020-	2B4
	36142-60030-	2B4

	PART NUMBER	LOCATION
	36143-60020-	2B4
	-60030-	2B4
	36144-60020-	2B4
	36152-60030-	2B4
	36164-60040-	2M4
	36212-60090-	2D4
	36215-60030-	2D4
	36221-60090-	2D4
	36222-60020-	2D4
	36225-60050-	2D4
	36231-60050-	2D4
	36234-60031-	2E4
	36235-60020-	2E4
	36237-60020-	2E4
	36241-60080-	2D4
	36242-60130-	2E4
	36251-60030-	2E4
	36303-60130-	2F4
	36307-60040-	2F4
	36308-60100-	2F4
	36311-60041-	2F4
	36312-60040-	2F4
	36313-60070-	2G4
	36314-60040-	2G4
	36324-60050-	2G4
	36327-60031-	2G4
	36337-60080-	2H4
	36338-60030-	2G4
	36343-60010-	2H4
	-60040-	2H4
	36360-60220-	2G4
	36362-60020-	2G4
	36369-60050-	3M6
	36409-60040-	2J4
	36410-60030-	2H4
	36416-36010-	2H4
	36422-36010-	2H4
	36482-60100-	2J4
	36486-60010-	2H4
	36726-60020-	2E4
	37110-60410-	2K4
	37140-60200-	2K4
	37302-36020-	2L4
	-60050-	2L4
	37305-36020-	2L4
	-60010-	2L4
	37315-36020-	2L4
	37402-10020-	2A7
	-36080-	2L4
S	38628-60010-	2C1
S	41101-60041-	2B5
		2E6
P	-60080-	2B5
		2E6
	41110-60110-	2B5
		2E6
N	-60111-	2B5
		2E6
P	-60230-	2B5
		2E6
N	-60231-	2B5
		2E6
	41114-60010-	2C5
		2E6

	PART NUMBER	LOCATION
	41201-69166-	2C5
		2E6
	41204-60030-	2C5
		2E6
	41214-26010-	2C5
		2E6
	41226-35010-	2C5
		2E6
P	41231-60020-	2C5
P		2E6
B	-60030-	2C5
B		2F6
	41252-35010-	2C5
		2F6
P	41301-60020-	2D5
P		2H6
S	-60021-	2D5
S		2H6
B	41311-60070-	2D5
B		2H6
	41315-30010-	2D5
		2F6
	41316-30010-	2D5
B		2G6
B	41331-25010-	2D5
B		2F6
	-35020-	2D5
		2F6
	-60020-	2D5
		2F6
B	41341-25010-	2E5
B		2F6
	-55012-	2D5
		2F6
B	41342-55010-	2E5
B		2F6
	-60010-	2E5
		2F6
	-60020-	2E5
		2F6
P	41343-55010-	2E5
P		2F6
	-60010-	2E5
B	-60030-	2E5
B		2G6
	41344-35010-	2E5
	41345-35010-	2E5
	41346-35010-	2E5
	41347-35010-	2E5
	41348-35010-	2E5
B	41351-25010-	2E5
B		2G6
	-35011-	2E5
		2G6
	41361-60010-	2E5
		2G6
	-60020-	2E5
		2G6
	-60030-	2E5
		2G6
	-60040-	2E5
		2G6
	41375-60010-	2E5
		2G6

	PART NUMBER	LOCATION
	41451-60010-	2E5
		2G6
P	41453-60010-	2E5
P		2G6
S	-60011-	2E5
S		2G6
	41456-60010-	2E5
		2G6
	41460-60010-	2E5
		2G6
	41464-60010-	2F5
		2G6
	41465-60010-	2F5
		2G6
	41466-60010-	2F5
		2H6
	41467-60020-	2F5
	41991-60030-	2F5
	-60040-	2F5
	42109-60050-	2F5
	42110-60190-	2F5
	-60301-	2F5
	42137-55010-	2F5
	42181-36010-	2F5
		2H6
P	-60030-	2F5
	42183-35010-	2F5
	42306-60051-	2G5
P	42311-60060-	2I5
N	-60061-	2I5
	-60080-	2I5
P	42312-60050-	2I5
N	-60051-	2I5
	-60060-	2I5
	42323-60010-	2K6
	-60020-	2F9
	42325-55010-	2I5
A	42411-60011-	2I5
	42419-60011-	2J5
A	42420-60110-	2J5
	42427-60021-	2J5
	42428-60011-	2J5
	42431-60020-	2I5
	42441-30010-	2J5
	42443-55020-	2J5
	42506-60010-	2A6
	42511-60010-	2A6
	42512-60010-	2A6
	42513-60010-	2A6
	42514-60010-	2A6
	42515-60010-	2A6
	42516-60010-	2A6
	42517-60010-	2A6
	42518-60010-	2A6
	42521-60010-	2A6
	42522-60010-	2A6
	42523-60010-	2A6
	42531-60030-	2A6
	42532-60030-	2B6
	42533-60010-	2B6
	42534-60030-	2B6
	42535-60010-	2B6
	42537-60010-	2B6
	-60020-	2B6

	PART NUMBER	LOCATION
	42538-60010-	2B6
	42540-60010-	2B6
	42541-60010-	2B6
	42550-60010-	2B6
	42560-60011-	2B6
	42562-60010-	2B6
A	42601-60221-	2K5
	42603-35080-	2K5
	-60012-	2K5
	-60052-	2K5
B	42652-60060-	2L5
	43110-60144-	2H6
	-60211-	2H6
	43204-60020-	2E9
	43209-60011-	2H6
	43211-60050-	2E9
	43212-60050-	2E9
	43232-35010-	2E9
	43233-60011-	2E9
	43234-60011-	2F9
	43235-60010-	2F9
	43236-60010-	2F9
	43237-60030-	2F9
	43238-60010-	2F9
	43239-60020-	2F9
P	43401-60012-	2F5
S	-60060-	2F5
	43405-60016-	2J6
P	43411-60020-	2J6
N	-60060-	2J6
	43412-35010-	2J6
	-60050-	2J6
	43422-60020-	2J5
		2K6
	43435-60011-	2F9
	43436-60011-	2F9
	43502-60020-	2K6
	43509-60015-	2K6
	43512-60040-	2L6
	43521-60011-	2L6
	43530-69017-	2L6
	43531-60010-	2L6
	43532-60010-	2L6
	44104-22011-	2J7
	44105-30060-	2J7
	44107-60060-	2K7
	44108-60010-	2K7
	44110-60160-	2K7
	44111-60040-	2K7
	44115-30040-	2K7
	44116-30040-	2K7
	44120-60130-	2L7
	44142-22010-	2K7
	-22020-	2L7
	44302-14010-	2D7
	44304-60021-	2D7
	44305-30020-	2D7
	44306-60070-	2F7
	44308-35030-	2D7
	44311-60010-	2D7
	44312-12010-	2E7
	44313-12010-	2E7
	-12020-	2E7
	-12030-	2E7

	PART NUMBER	LOCATION
	44313-12040-	2E7
	-12050-	2E7
	-22040-	2E7
	-22050-	2E7
	-22060-	2E7
	-22070-	2E7
	-22080-	2E7
	44320-60090-	2E7
	44325-12010-	2E7
	-12020-	2E7
	-12030-	2E7
	-12040-	2E7
	-12050-	2E7
	44330-30100-	2E7
	-30110-	2E7
	-30120-	2E7
	-30130-	2E7
	-30140-	2E7
	-30150-	2E7
	44341-12010-	2F7
	44343-12040-	2F7
	44345-12010-	2F7
	-12020-	2F7
	-12030-	2F7
	-12040-	2F7
	-12050-	2F7
	44391-14010-	2F7
	44410-60170-	2G7
	44416-60061-	2G7
	44443-60050-	2G7
	44446-60020-	2G7
	44605-30350-	2G8
	44608-17090-	2G8
	44609-17090-	2G8
	44610-60530-	2G8
	44624-20810-	2G8
	44628-20810-	2G8
	44632-27290-	2G8
	44633-20811-	2G8
	44637-20810-	2G8
	44645-10080-	2G8
	44651-20510-	2G8
	44673-20810-	2G8
	44730-24020-	2G8
	44758-60030-	2G8
	44772-60050-	2G8
	44773-60030-	2G8
	44785-35020-	2G8
	44786-60040-	2B9
	45021-60020-	2M6
P	45044-69055-	2L7
N	-69056-	2L7
A	45045-69045-	2L7
S	-69046-	2L7
P	45046-69115-	2L7
N	-69116-	2L7
P	45047-69065-	2L7
N	-69066-	2L7
	45081-22020-	2M6
	45082-60010-	2M6
P	45100-60140-03	2H
P	-60140-06	2H7
	45105-60040-	2H7
P	45130-60101-03	2H7


1. MODELS COVERED & CHARACTERISTICS

C15

TOYOTA LAND CRUISER Station Wagon (Production from Aug. '87 up to Jan. '90)

Vehicle Appearance

Station Wagon (8708–9001)

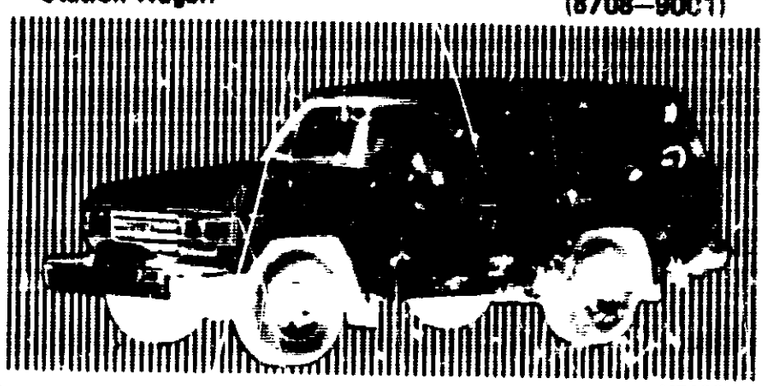

MP1965


FIG. 11-02 SHORT BLOCK ASSEMBLY

1D1

7914304-01069

(8708-)

11400

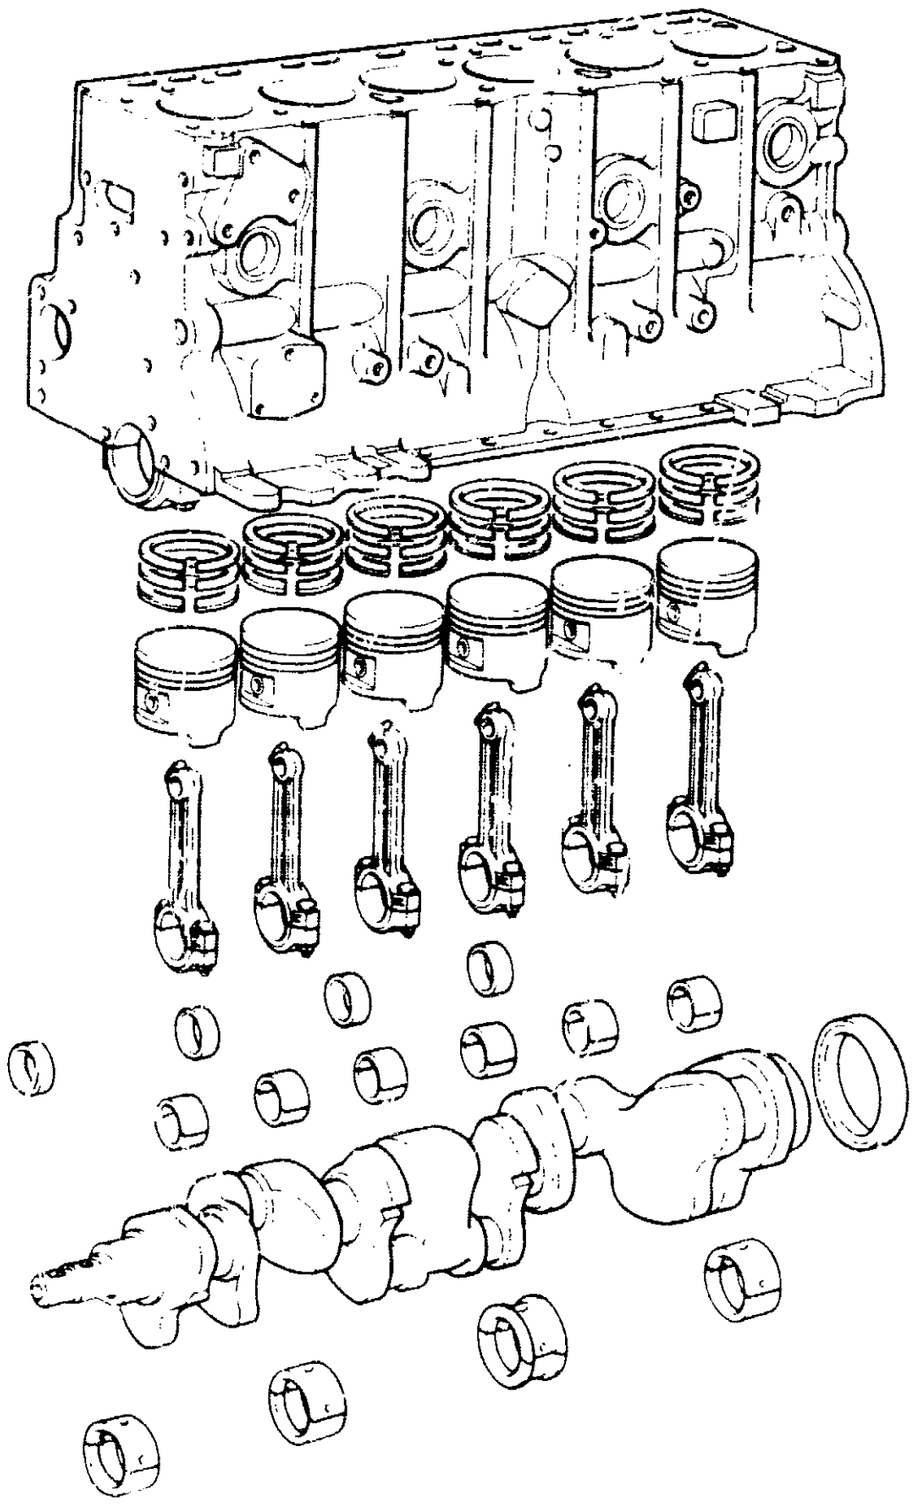

MA 4675-A


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		11400	BLOCK ASSY, SHORT					
P	8708-8910	3FE..FJ62			11400-61120-	1		
B	8910-9001	3FE..FJ62			11400-61121-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	13715 VALVE, EXHAUST						
8708-9001	3FE..FJ62			13715-61040-	6		
	13734 SEAT, VALVE SPRING						
8708-9001	3FE..FJ62			13734-60030-	12		
	13741 RETAINER, VALVE SPRING						
8708-9001	3FE..FJ62	INTAKE		13741-60030-	6		
8708-9001	3FE..FJ62	EXHAUST		13741-61010-	6		
	13741A LOCK, VALVE SPRING RETAINER						
8708-9001	3FE..FJ62	EXHAUST		90913-03005-	12		
8708-9001	3FE..FJ62	INTAKE		90913-03012-	12		
	13751 LIFTER, VALVE						
8708-9001	3FE..FJ62	STD		13751-61020-	12		
8708-9001	3FE..FJ62	O/S 0.05		13755-61020-	12		
	13781 ROD, VALVE PUSH						
8708-9001	3FE..FJ62			13781-61020-	12		
	13801 ARM SUB-ASSY, VALVE ROCKER, NO.1						
8708-9001	3FE..FJ62			13811-61030-	6		
	13801B NUT, HEXAGON (FOR VALVE ADJUSTING)						
8708-9001	3FE..FJ62			90170-08005-	12		
	13801C SCREW, VALVE ADJUSTING						
8708-9001	3FE..FJ62			90913-05020-	12		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	13801D SPRING, COMPRESSION (FOR ROCKER ARM)						
8708-9001	3FE..FJ62			90501-14087-	5		
	13802 ARM SUB-ASSY, VALVE ROCKER, NO.2						
8708-9001	3FE..FJ62			13812-61030-	6		
	13901 SHAFT SUB-ASSY, VALVE ROCKER, NO.1						
8708-9001	3FE..FJ62			13901-61020-	1		
	13901B SPRING, CONICAL (FOR VALVE ROCKER SHAFT)						
8708-9001	3FE..FJ62			90502-16004-	2		
	13901C SPRING, RETAINER (FOR VALVE ROCKER SHAFT)						
8708-9001	3FE..FJ62			90524-15008-	2		
	13951 SUPPORT, VALVE ROCKER, NO.1						
8708-9001	3FE..FJ62			13952-61012-	5		
	13951A BOLT (FOR ROCKER SUPPORT SET)						
8708-9001	3FE..FJ62	*13-1.75PX138-27		90910-01006-	1		
8708-9001	3FE..FJ62	*10-1.25PX75-20, *10-1.25PX75-20		90910-01012-	1		
	13951C BOLT, STUD (FOR ROCKER SUPPORT)						
8708-9001	3FE..FJ62			13994-61020-	4		
	13952 SUPPORT, VALVE ROCKER, NO.2						
8708-9001	3FE..FJ62			13952-61012-	1		

* — P× — — Outside diameter — Pitch × Bolt length — Thread length


(8708-)

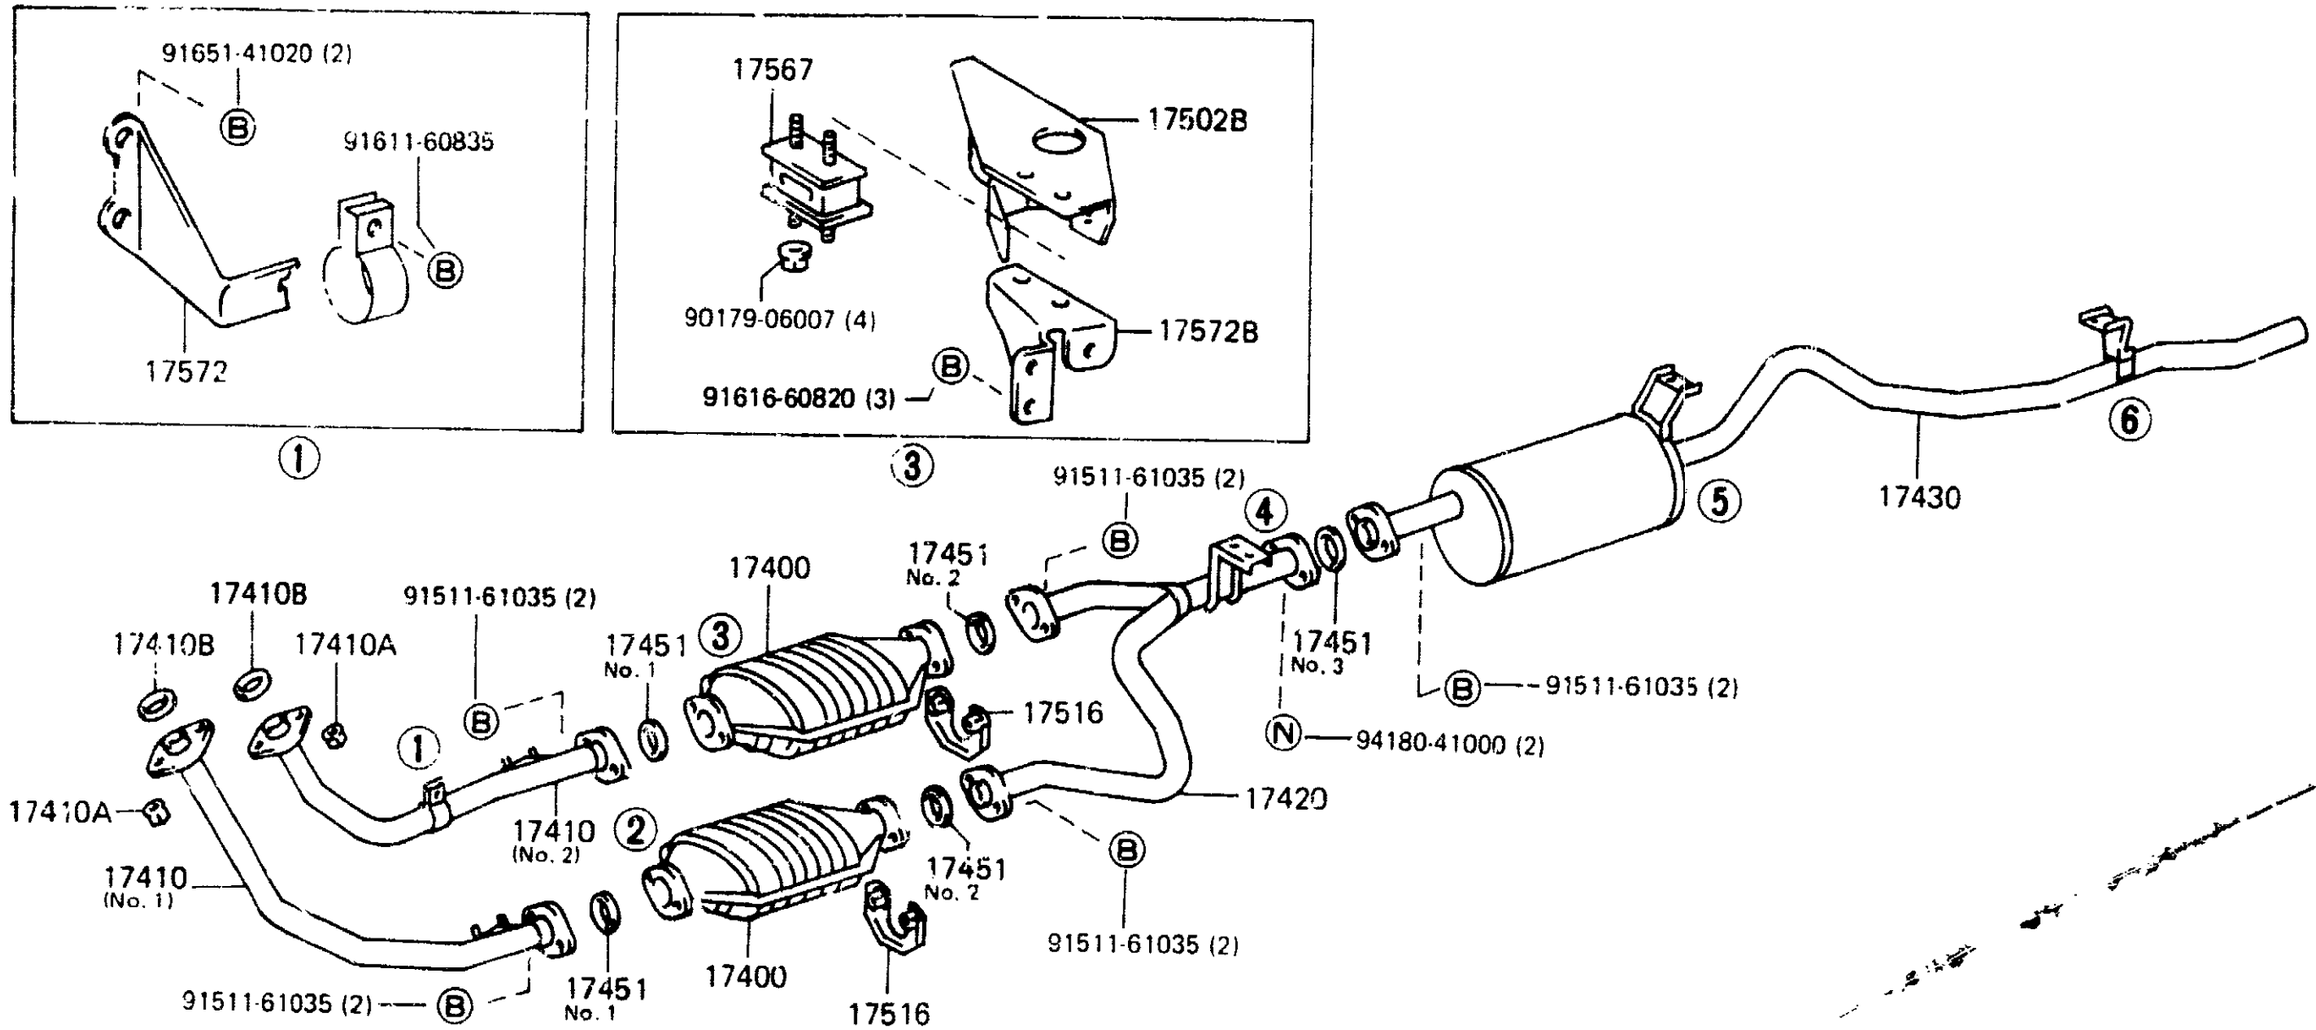


②

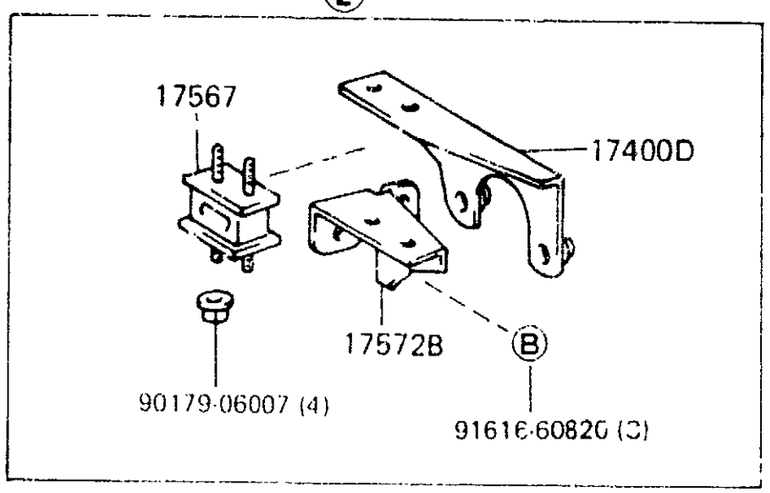


④

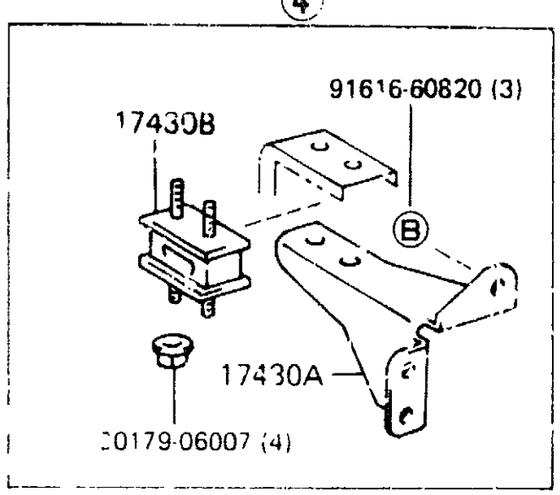

⑤

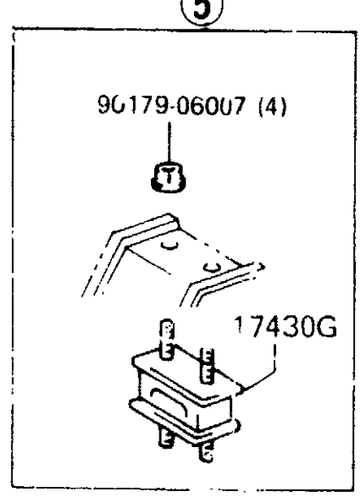


⑥

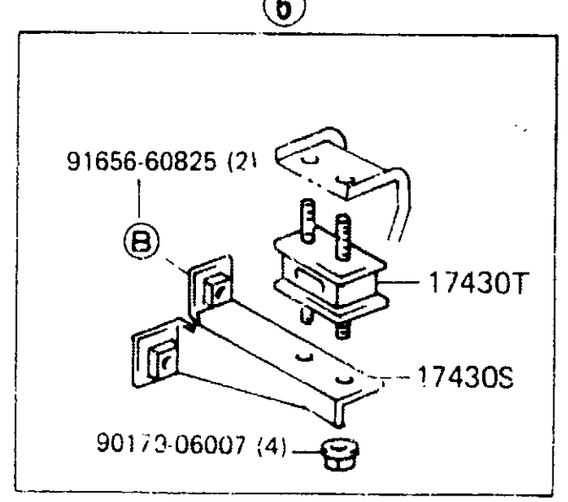

MA A060-C

(8708-)

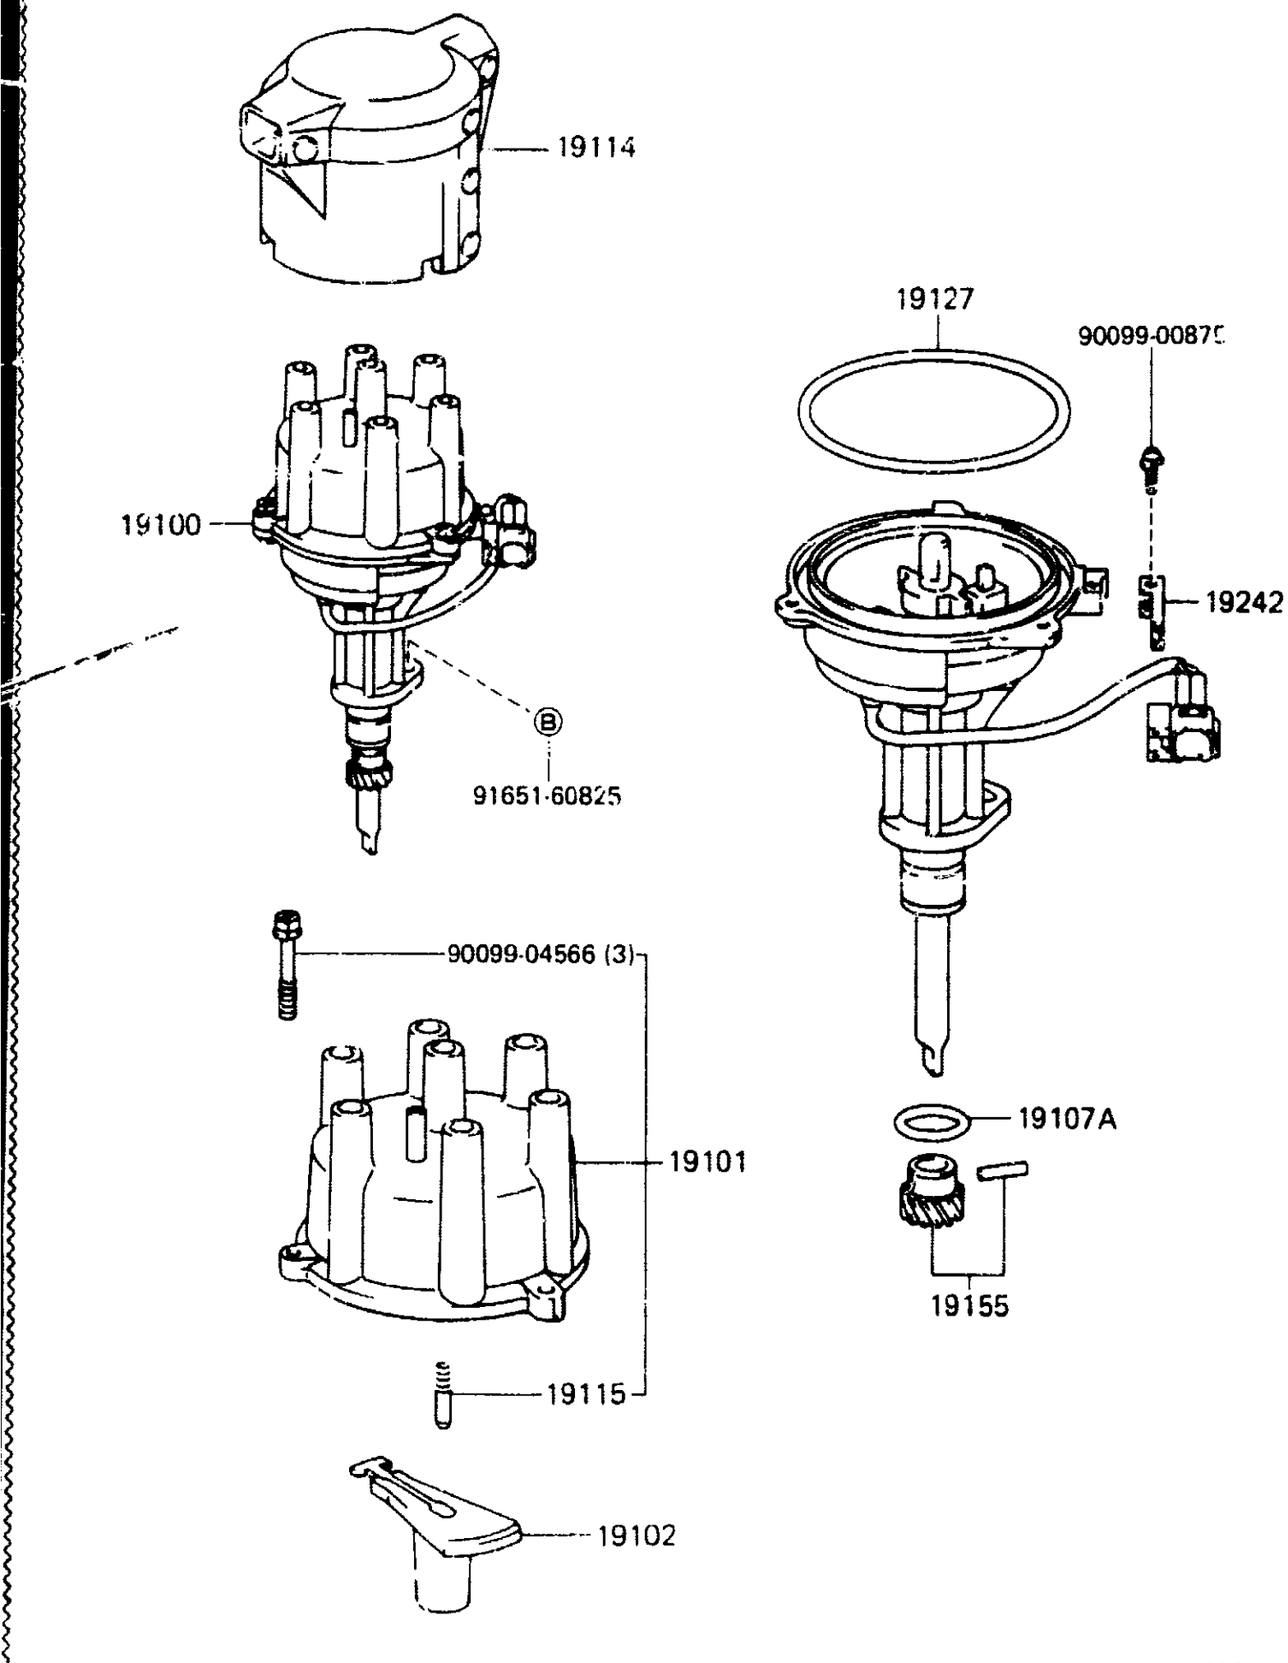

MA 9894

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	19100	DISTRIBUTOR ASSY					
8708-9001	3FE..FJ62			19100-61240-	1		
	19101	CAP SUB-ASSY, DISTRIBUTOR					
8708-9001	3FE..FJ62			19101-61240-	1		
	19102	ROTOR SUB-ASSY, DISTRIBUTOR					
8708-9001	3FE..FJ62			19102-61240-	1		
	19107A	RING, DISTRIBUTOR HOUSING O					
8708-9001	3FE..FJ62			90099-14020-	1		
	19114	COVER, WATER PROOF (FOR DISTRIBUTOR)					
8708-9001	3FE..FJ62			19114-61040-	1		
	19115	PIECE, DISTRIBUTOR CAP CENTER					
8708-9001	3FE..FJ62			19115-50010-	1		
	19127	PACKING, DUST PROOF					
8708-9001	3FE..FJ62			19127-61240-	1		
	19155	GEAR, SPIRAL, DISTRIBUTOR					
8708-9001	3FE..FJ62			19195-61240-	1		
	19242	CLAMP, CORD					
8708-9001	3FE..FJ62			19242-61240-	1		

	PART NUMBER	LOCATION
P	45130-60101-06	2H7
	45142-12050-	2H7
	45155-12030-	2H7
	45176-20030-	2H7
	45180-60021-	2H7
	45210-22050-	2A7
	45215-22011-	2A7
	45220-60050-	2A7
	45222-60031-	2A7
	45244-60020-	2A7
	45254-60030-	2A7
	45255-60010-	2A7
	45260-60080-	2A7
	45280-60260-	2A7
	45282-22010-	2A7
P	45286-60130-03	2A7
P	-60130-16	2A7
P	45287-60090-03	2A7
P	-60090-16	2A7
	45289-22020-	2A7
	45292-60030-	2A7
B	45357-22010-	2L7
	45411-60090-	2L7
	45450-69055-	2L7
	45457-60010-	2L7
A	45458-60010-	2L7
	45460-69105-	2M7
	45466-36010-	2M7
	-55020-	2L7
	45473-35010-	2M7
	45475-35010-	2M7
	45611-60040-	2M7
	45612-60040-	2M7
	45636-60090-	2B7
	45637-60060-	2B7
	45700-69025-	2M7
	45721-60030-	2B7
	45804-22010-	2B7
	45813-22010-	2B7
	-22020-	2B7
	-22030-	2B7
	-22040-	2B7
	-22050-	2B7
	45814-22010-	2B7
	-22020-	2B7
	45815-22060-	2B7
	-22070-	2B7
	-22080-	2B7
	-22090-	2B7
	-22100-	2B7
	45817-60010-	2B7
	45819-22011-	2B7
	45821-22010-	2B7
	45870-60030-	2B7
	45890-22050-	2B7
	45897-14010-	2B7
	45898-22010-	2B7
	45899-22020-	2C7
	46210-60040-01	2A8
	-60040-16	2A8
P	-60041-01	2A8
P	-60041-06	2A8
	46217-10020-01	2A8
	-10020-50	2A8
P	46243-60030-01	2A8
P	-60030-16	2A8
	46341-31010-	2A8
	46410-60101-	2A8
	46443-12020-	2B8
	46451-60030-	2B8
	46458-30020-	2B8
	46469-60020-	2B8
P	47043-60050-	2J8
B	-60090-	2J8
P	47044-60010-	2J8
B	-60040-	2J8
	47061-60011-	2K8
	47062-60011-	2K8
	47101-60150-	2C8
	47121-30050-	2C8
	47201-60340-	2D8
	47202-60390-	2D8
B	47218-11040-	2D8
B		2E8
	47231-20010-	2E8
	47234-14010-	2E8
	47264-30040-	2E8
	47265-20050-	2E8
	-20060-	2E8
	47275-22010-	2E8
	47299-14010-	2E8
	47312-60610-	2B9
	47313-60180-	2B9
	47314-60180-	2B9
	47315-60340-	2C9
	47316-60310-	2C9
	47322-60490-	2C9
	47323-60041-	2C9
	47324-60021-	2C9
	47325-60100-	2C9
	47326-60110-	2C9
	47341-60031-	2C9
	47342-60021-	2C9
	47354-60030-	2C9
	47355-60030-	2C9
	47371-35020-	2C9
	47447-60010-	2K8
	47449-60020-	2K8
	47491-20011-	2K8
	47509-60010-	2K8
	47547-20030-	2H8
	-60020-	2K8
	47548-60010-	2B9
	47550-60120-	2K8
	47611-60010-	2K8
	47612-60010-	2K8
	47616-60010-	2K8
		2L8
	47624-60010-	2L8
	47625-60010-	2L8
	47626-60010-	2L8
	47628-31020-	2L8
	47633-31020-	2L8
	47643-60010-	2L8
	47644-60010-	2L8
	47655-60010-	2L8
	47703-60031-	2H8
	47704-60031-	2H8
	47730-60021-	2H8
	47731-30020-	2H8
	47732-30010-	2H8
	47748-60010-	2I8
	47750-60021-	2I8
	47786-60020-	2I8
	47787-60020-	2I8
	47910-60060-	2C9
	47920-60020-	2C9
	47931-60020-	2C9
	-60021-	2C9
	47933-60020-	2D9
	47935-35010-	2D9
	47936-35010-	2D9
	47937-60010-	2D9
	48046-60052-	2L9
	48047-60052-	2L9
	48048-60021-	2H9
	48049-60021-	2H9
	48102-60410-	2H9
	48103-60410-	2I9
	-60411-	2I9
	48110-60410-	2H9
		2I9
	-60411-	2H9
		2I9
	48111-60410-	2H9
	48112-60410-	2H9
	48114-60410-	2I9
	-60411-	2I9
	48147-60410-	2I9
	48202-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2L9
	48203-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48210-60650-	2L9
	-60651-	2L9
	-60660-	2M9
	-60661-	2M9
	48211-60650-	2L9
	-60660-	2L9
	48212-60650-	2L9
	-60660-	2L9
	48214-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2M9
	48215-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2M9
	48217-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48218-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48247-60660-	2M9
	48252-26070-	2I9
		2M9
A	48253-15010-	2M9
	48304-60031-	2I9
	48306-60030-	2M9
	48371-60050-	2M9
	48372-23030-	2M9
	48401-60020-	2I9
	48412-60021-	2I9
	48413-60032-	2I9
	48414-60042-	2M9
	48415-60042-	2M9
	48416-60030-	2M9
	48475-60020-	2I9
	48511-69095-	2I9
	48512-60031-	2I9
	48531-69105-	2M9
	48541-69025-	2A10
	48809-60020-	2A10
	48811-60070-	2J9
	48812-60040-	2A10
	48815-20060-	2J9
	-30050-	2A10
	48817-30010-	2J9
	48823-27010-	2A10
		2J9
	48825-60010-	2J9
	-60031-	2A10
	51002-60432-	3A1
	51172-60010-	3C1
	51201-60080-	3A1
	51202-60151-	3A1
	51203-60102-	3A1
	51204-60052-	3A1
	51205-60010-	3A1
	51209-60090-	3A1
	51217-60011-	3A1
	51218-60011-	3A1
	51321-60030-	3A1
	51322-60030-	3B1
	51421-60041-	3B1
	51422-60041-	3B1
	51441-60061-	3C1
	51495-60230-	3C1
	51701-60051-	3B1
	51702-60020-	3B1
	51703-60020-	3B1
	51704-60010-	3B1
	51705-60062-	3B1
	-60110-	3B1
	51707-60030-	3B1
	51709-60020-	3B1
	51900-60100-	3D1
	51961-36040-	3C1
	-60040-	3C1
	51966-60010-	3C1
	52023-60011-	3E1
	52102-90A00-	3G1
	52103-90A00-	3G1
	52106-60010-	3H1
	52107-60010-	3H1
	52111-90A03-	3G1
	52141-60050-	3G1
	52142-60040-	3G1
	52151-60041-	3H1
	52153-60060-	3H1
	52154-60010-	3H1
	52172-60020-	3H1
	52201-25020-	3E1
	-35021-	3E1
	52202-25020-	3E1
	-35021-	3E1
	52203-60030-	3E1
		3F1
	52207-60010-	3E1
	52208-60010-	3E1
	53111-90A06-	3I1
	-90A09-	3I1
	53131-90A09-	3I1
	-90A10-	3I1
	53132-90A09-	3I1
	-90A10-	3I1
	53202-90A04-	3A2
	53203-90A05-	3A2
	53207-90A00-	3G3
	53216-90A03-	3A2
	53217-90A03-	3A2
	-90A05-	3A2
	53292-90A00-	3A2
	53301-90A01-	3J1
	53341-90A00-	3J1
	53381-90A00-	3J1
	53382-30060-	3J1
	-90K01-	3J1
	53383-90A00-	3F2
	53410-90A01-	3L1
	53420-90A01-	3L1
	53440-90A00-	3L1
	53450-90A00-	3L1
	53451-90A00-	3L1
	53452-90351-	3L1
	53510-90A02-	3L1
	53630-90A01-	3L1
	53701-90G90-	3A2
	53702-90A70-	3A2
	53738-90A00-	3A2
	53739-90A00-	3A2
	53801-90G00-	3J1
	53802-90A72-	3J1
	53931-90A06-	3J1
	55016-90A75-	3A2
	-90A76-	3A2
	55073-90A00-	3F2
	55084-90A03-	3J11
	55085-90A01-	3J11
	55086-90701-	3J11
	55087-90A01-	3J11
	55089-90A01-	3J11
	55089-90A03-	3J11
	55100-90A16-	2C8
	55210-90A12-	3A2
	55225-90A00-	3A2
P	55301-90A76-03	3C2
P	-90A76-05	3C2
	55315-90A00-	3C2
	55341-90A02-	3C2
	55342-90A01-	3C2
	55344-90A01-	3C2
	55351-90A01-	3J2
	55357-90A00-	3C2
	55366-90A02-	3C2
	55368-90A03-	3C2
	55374-90A01-	3C2
	55401-90A05-03	3C2
	-90A05-05	3C2
	-90A07-03	3C2
	-90A07-05	3C2
	55410-90G28-	3C2
P	55412-90A10-03	3C2
P	-90A10-05	3C2
	55446-90A01-	3C2
P	55446-90A02-06	3C2
P	-90A02-13	3C2
	55458-90A00-	3C2
	55477-87001-	3C2
	55499-60010-	2B1
P	55501-90A00-06	3D2
P	-90A00-23	3D2
	55505-90A00-	3D2
	55517-14010-	3D2
P	55521-14050-01	3D2
	55538-22010-	3D2
P	55539-20020-13	3E3
P	-20020-26	3E3
	-32010-01	3D2
P	55545-90A01-03	3D2
P	-90A01-06	3D2
	55547-90A00-	3D2
	55549-90A00-	3D2
	55556-90A01-	3D2
	55561-90A00-	3D2
P	55569-90A00-06	3D2
P	-90A00-23	3D2
	55581-90A06-	3D2
	55650-90A02-	3D2
	55660-90A00-	3D2
	55670-90A02-	3D2
	55700-90G17-	3F2
	55701-90A35-	3F2
	55729-90A01-	3F2
	55780-90A01-	3F2
	55843-90A03-	3J11
	55901-90A01-	3J11
	55905-12070-	3F11
	-22050-	3J11
	-90A00-	3J11
	55907-90A00-	3J11
	55908-90A00-	3J11
	55950-90A01-	3D2
	-90A03-	3D2
	55959-14010-	3E2
P	55961-90A00-03	3E2
P	-90A00-16	3E2
	55970-90A00-	3E2
	55980-90A00-	3E2
	56111-90A02-	3F2
	56121-90A01-	3G2
	-90A05-	3G2
	57104-90A03-	3A2
	57401-90A05-	3J2
	57402-90A05-	3J2

1. MODELS COVERED & CHARACTERISTICS

D15

TOYOTA LAND CRUISER Station Wagon (Production from Aug. '87 up to Jan. '90)


TOYOTA LAND CRUISER Station Wagon


Model	Engine	Production Period	Characteristic Expressions in Catalog Model Column		Model Name
FJ62LV-PNEA	3F-E	8708–8808	WGV	USA	Station Wagon
FJ62LG-PNEA	"	8708–9001	WGG	"	"
" -PNEK	"	8708–9001	"	CND	"

WGV Station Wagon
WGG Station Wagon G type


USA For United States of America
CND For Canada

ENGINE GROUP (1/2)

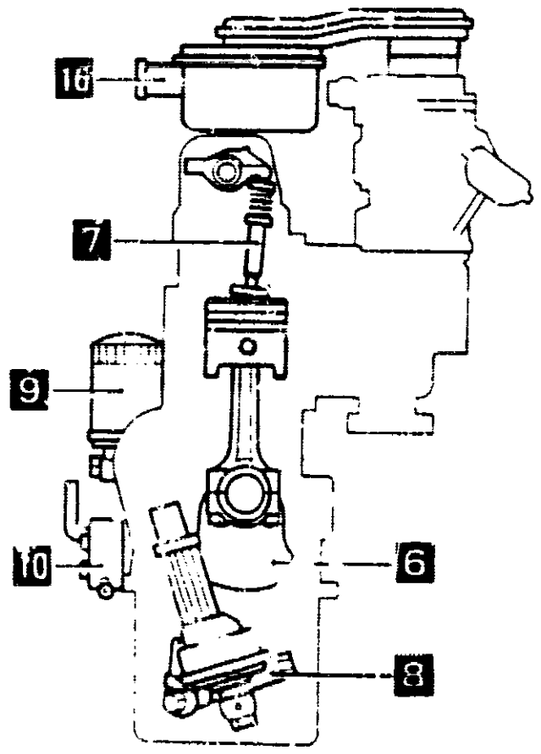

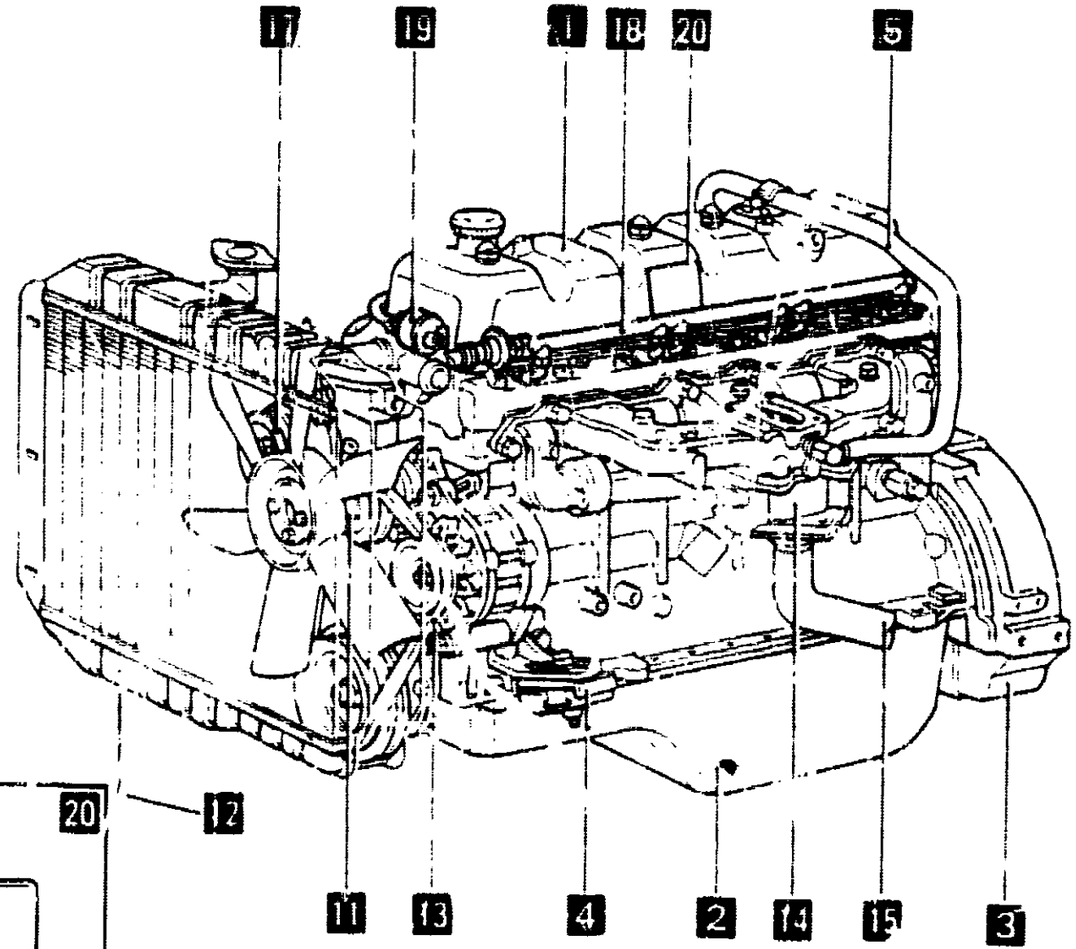


1C1 (11-01)

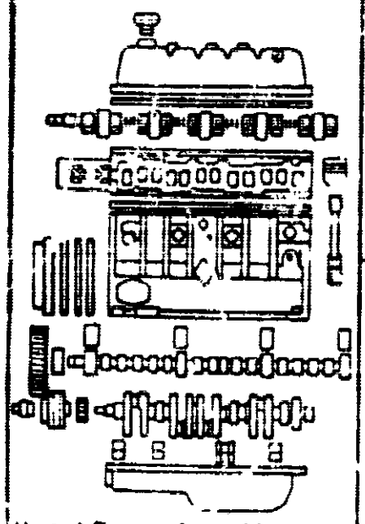


Partial Engine Assembly

1D1 (11-02)

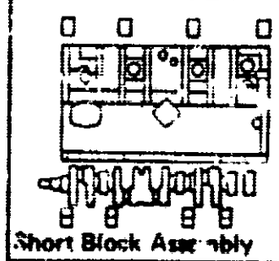


Short Block Assembly

1E1 (11-03)

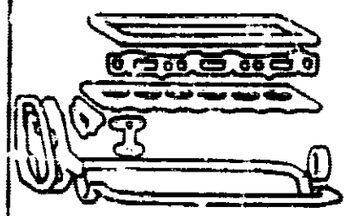


Overhaul Gasket Kit

1F1 (11-04) 1

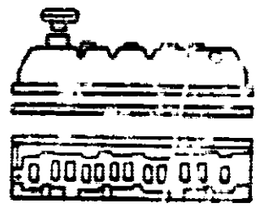


Cylinder Head

1H1 (11-05) 2

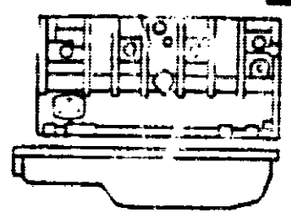


Cylinder Block

1J1 (11-06) 3

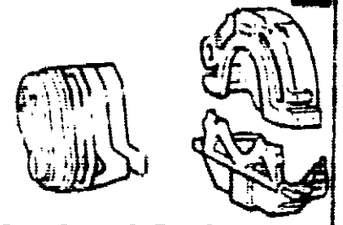


Gear Cover & End Plate

1K1 (11-07) 4

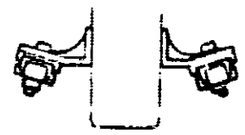


Mounting

1L1 (12-01) 5

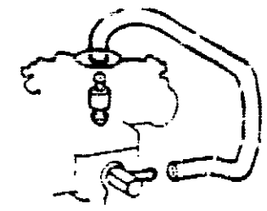


Ventilation Hose

1M1 (13-01) 6

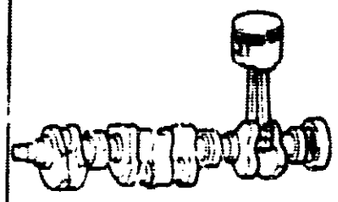


Crankshaft & Piston

1C2 (13-02) 7

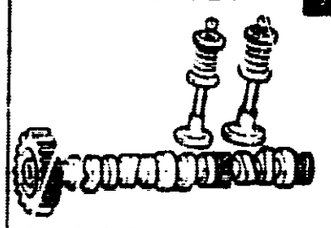


Camshaft & Valve

1E2 (15-01) 8

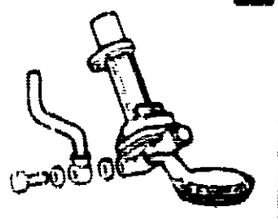


Oil Pump

1G2 (15-02) 9

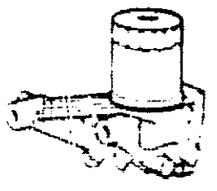


Oil Filter

1H2 (15-03) 10

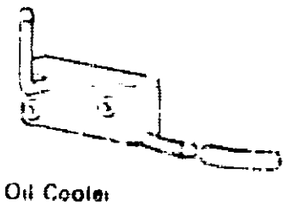


Oil Cooler

1I2 (16-01) 11

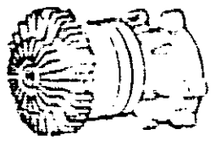

Water Pump

1J2 (16-03) 12

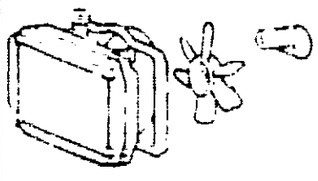


Radiator & Fan

1A3 (16-05) 13




V Belt

1B3 (17-01) 14

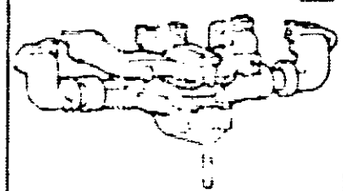


Manifold

1D3 (17-02) 15

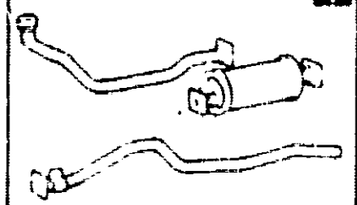


Exhaust Pipe

1F3 (17-03) 16

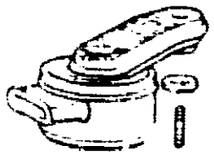

Air Cleaner

1H3 (17-05) 17

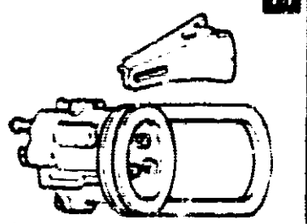

Air Pump

1I3 (17-06) 18




Manifold Al System

1X3 (17-08) 19




Vacuum Piping

1A4 (17-09) 20



Caution Plate

(8708-)

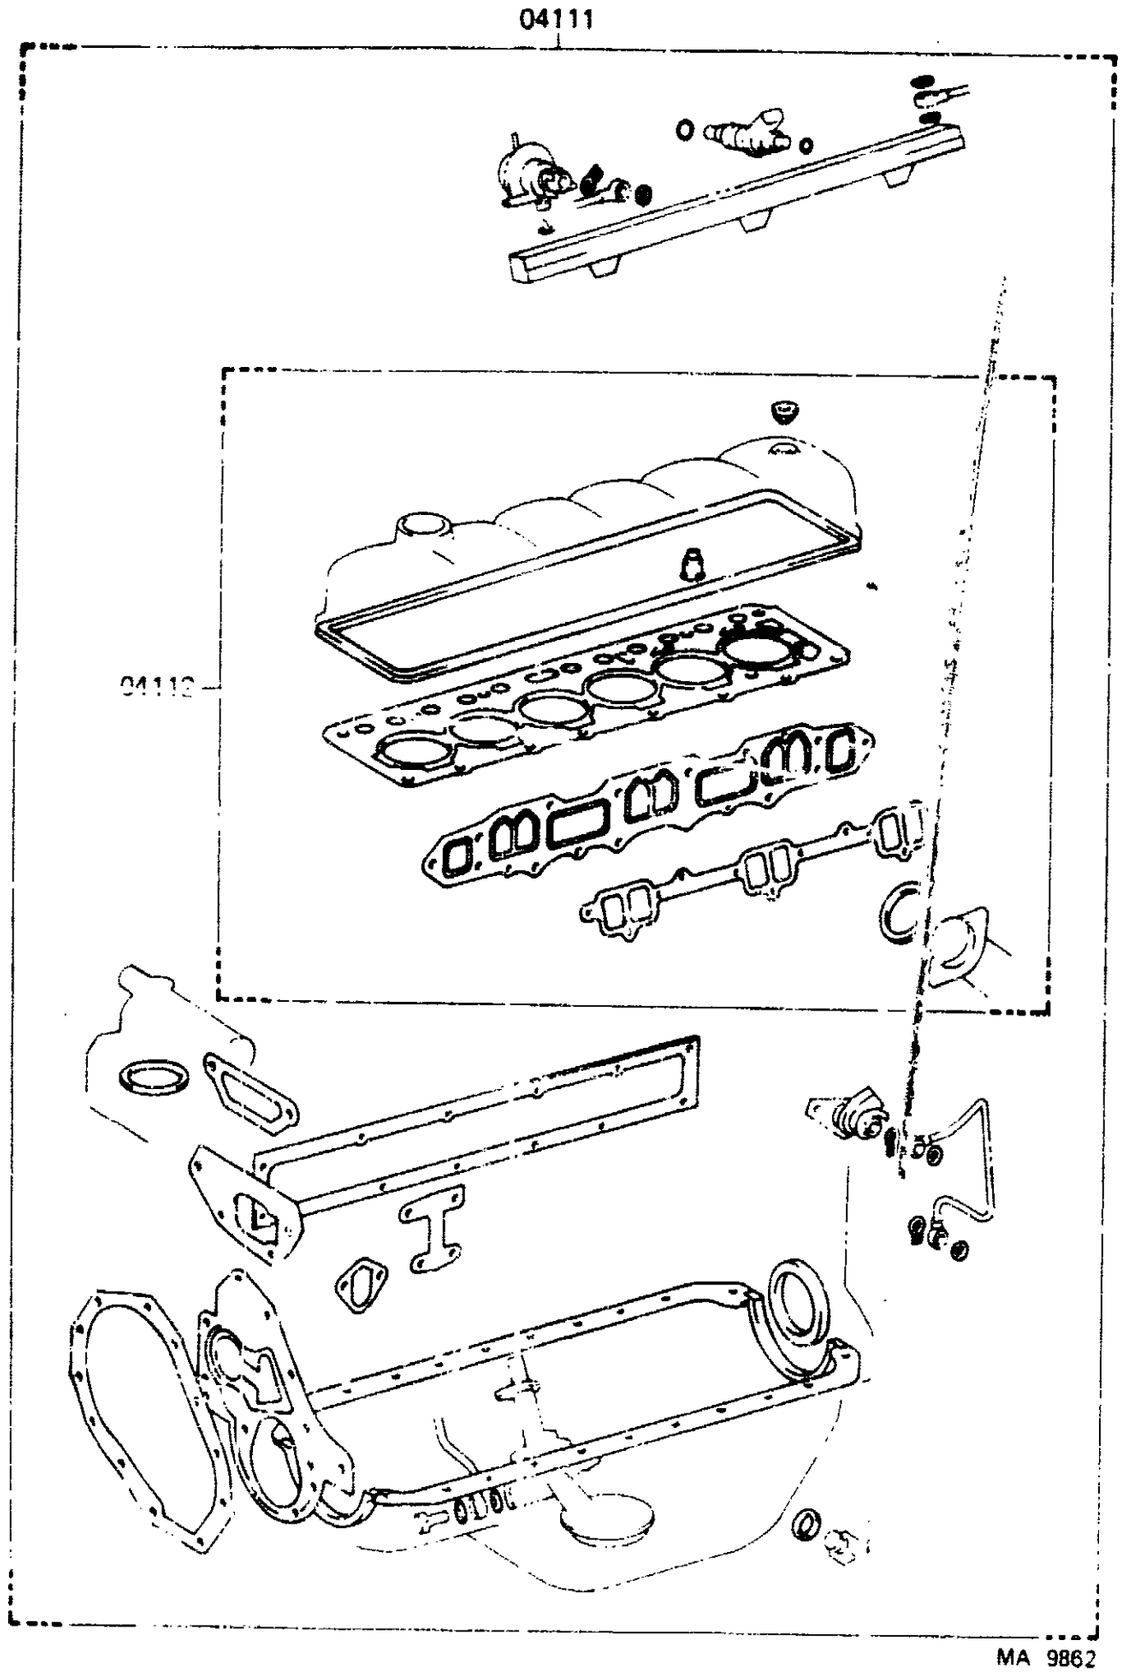


MA 9862

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	04111	GASKET KIT, ENGINE OVERHAUL					
8708-9001	3FE..FJ62			04111-61070-	1		
	04112	GASKET KIT, ENGINE VALVE GRIND					
8708-9001	3FE..FJ62			04112-61060-	1		

FIG. 15-01 OIL PUMP

1E2

(8708-)

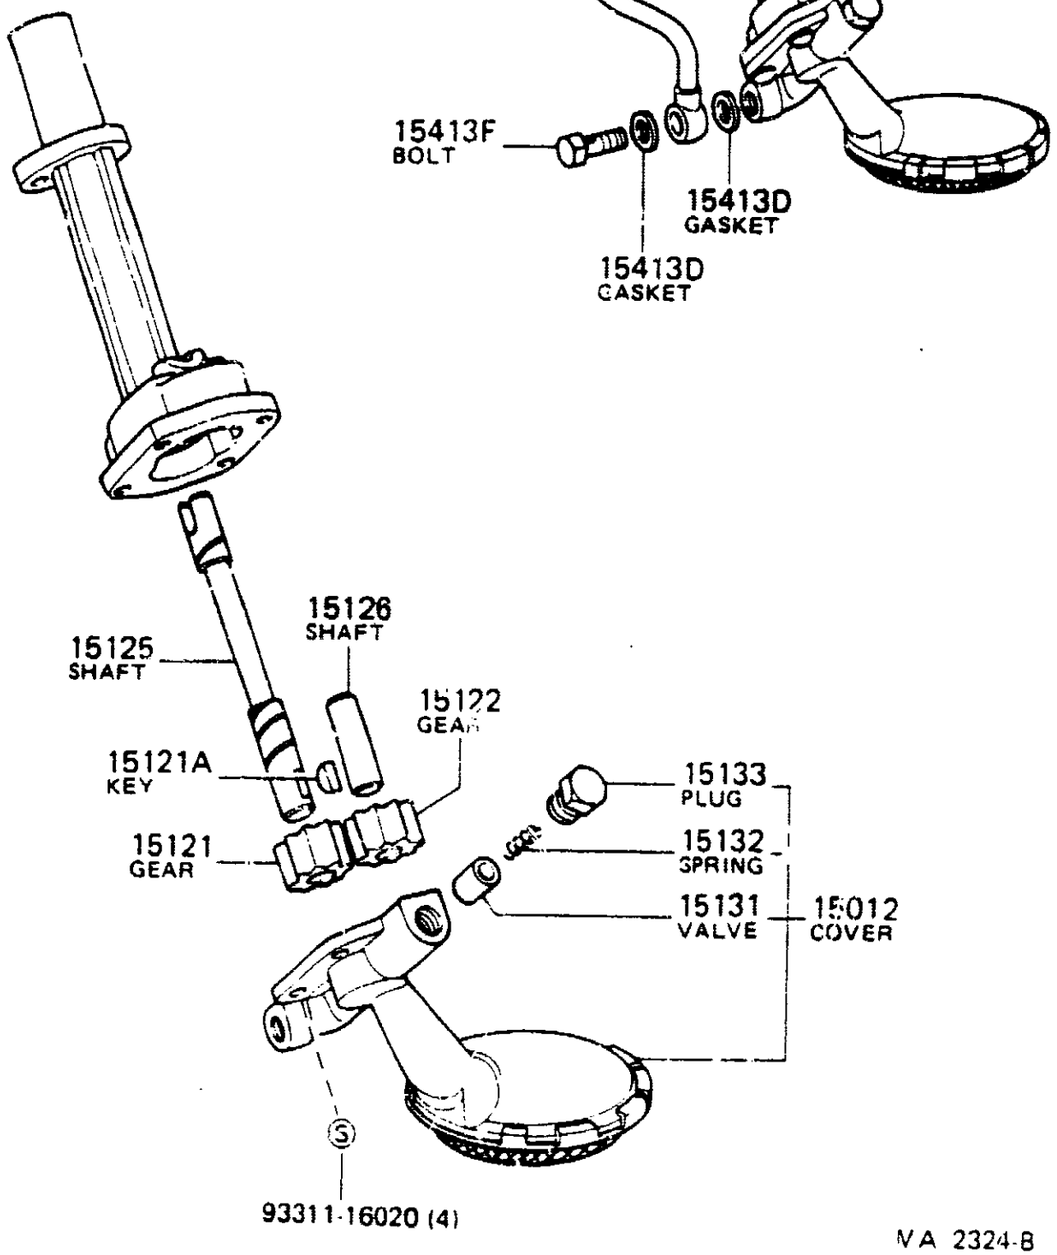


MA 2324-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	15012	COVER SUB-ASSY, OIL PUMP					
8708-9001	3FE..FJ62			15012-60014-	1		
	15100	PUMP ASSY, OIL					
8708-9001	3FE..FJ62			15100-61011-	1		
	15121	GEAR, OIL PUMP DRIVE					
8708-9001	3FE..FJ62			15121-61011-	1		
	15121A	KEY, OIL PUMP DRIVE SHAFT					
8708-9001	3FE..FJ62			90280-03009-	1		
	15122	GEAR, OIL PUMP DRIVEN					
8708-9001	3FE..FJ62			15122-61011-	1		
	15125	SHAFT, OIL PUMP					
8708-9001	3FE..FJ62			15125-60013-	1		
	15126	SHAFT, OIL PUMP DRIVEN					
8708-9001	3FE..FJ62			15126-60013-	1		
	15131	VALVE, OIL PUMP RELIEF					
8708-9001	3FE..FJ62			15131-24010-	1		
	15132	SPRING, OIL PUMP RELIEF VALVE					
8708-9001	3FE..FJ62			15132-40010-	1		
	15133	PLUG, OIL PUMP RELIEF VALVE					
8708-9001	3FE..FJ62			15133-24010-	1		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		17400 CONVERTER ASSY, W/CATALYST						
A	8708-8808	3FE..FJ62			# 18450-61010- (18450-61040-)	2 2		002
	8808-9001	3FE..FJ62..WGG			18450-61040-	2	003	
		17400D BRACKET, CATALYTIC CONVERTOR SUPPORT						
	8708-9001	3FE..FJ62			17573-61051-	1		
		17410 PIPE ASSY, EXHAUST, FRONT						
	8708-9001	3FE..FJ62	NO.1		17401-61210-	1		
	8708-9001	3FE..FJ62	NO.2		17402-61010-	1		
		17410A NUT, EXHAUST PIPE SET STUD BOLT						
	8708-9001	3FE..FJ62			90179-10070-	4		
		17410B GASKET, EXHAUST PIPE						
	8708-9001	3FE..FJ62			90917-06004-	2		
		17420 PIPE ASSY, EXHAUST, CENTER						
	8708-9001	3FE..FJ62			17403-61110-	1		
		17430 PIPE ASSY, TAIL						
	8708-9001	3FE..FJ62			17405-61240-	1		
		17430A BRACKET, TAIL PIPE (FOR FRONT)						
	8708-9001	3FE..FJ62			17574-61071-	1		
		17430B CUSHION, TAIL PIPE (FOR FRONT)						
	8708-9001	3FE..FJ62			17567-61030-	1		


PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	17430G CUSHION, TAIL PIPE (FOR CENTER)						
8708-9001	3FE..FJ62			17567-61030-	1		
	17430S BRACKET, TAIL PIPE (FOR REAR)						
8708-9001	3FE..FJ62			17574-61050-	1		
	17430T CUSHION, TAIL PIPE (FOR REAR)						
8708-9001	3FE..FJ62			17567-61030-	1		
	17451 GASKET, EXHAUST PIPE						
8708-9001	3FE..FJ62	NO.1		90917-06012-	2		
8708-9001	3FE..FJ62	NO.2		90917-06023-	2		
8708-9001	3FE..FJ62	NO.3		90917-06024-	1		
	17502B BRACKET SUB-ASSY, CATALYTIC CONVERTER, FRONT						
8708-9001	3FE..FJ62			17502-61021-	1		
	17516 RETAINER, EXHAUST PIPE, NO.2						
8708-9001	3FE..FJ62			18495-38020-	2		
	17567 CUSHION, EXHAUST PIPE SUPPORT						
8708-9001	3FE..FJ62			17567-61030-	2		
	17572 BRACKET, EXHAUST PIPE NO.1 SUPPORT						
8708-9001	3FE..FJ62			17571-61160-	1		
	17572B BRACKET, EXHAUST PIPE SUPPORT, NO.2						
8708-9001	3FE..FJ62			17572-61051-	2		


(8708-)
12V 80A

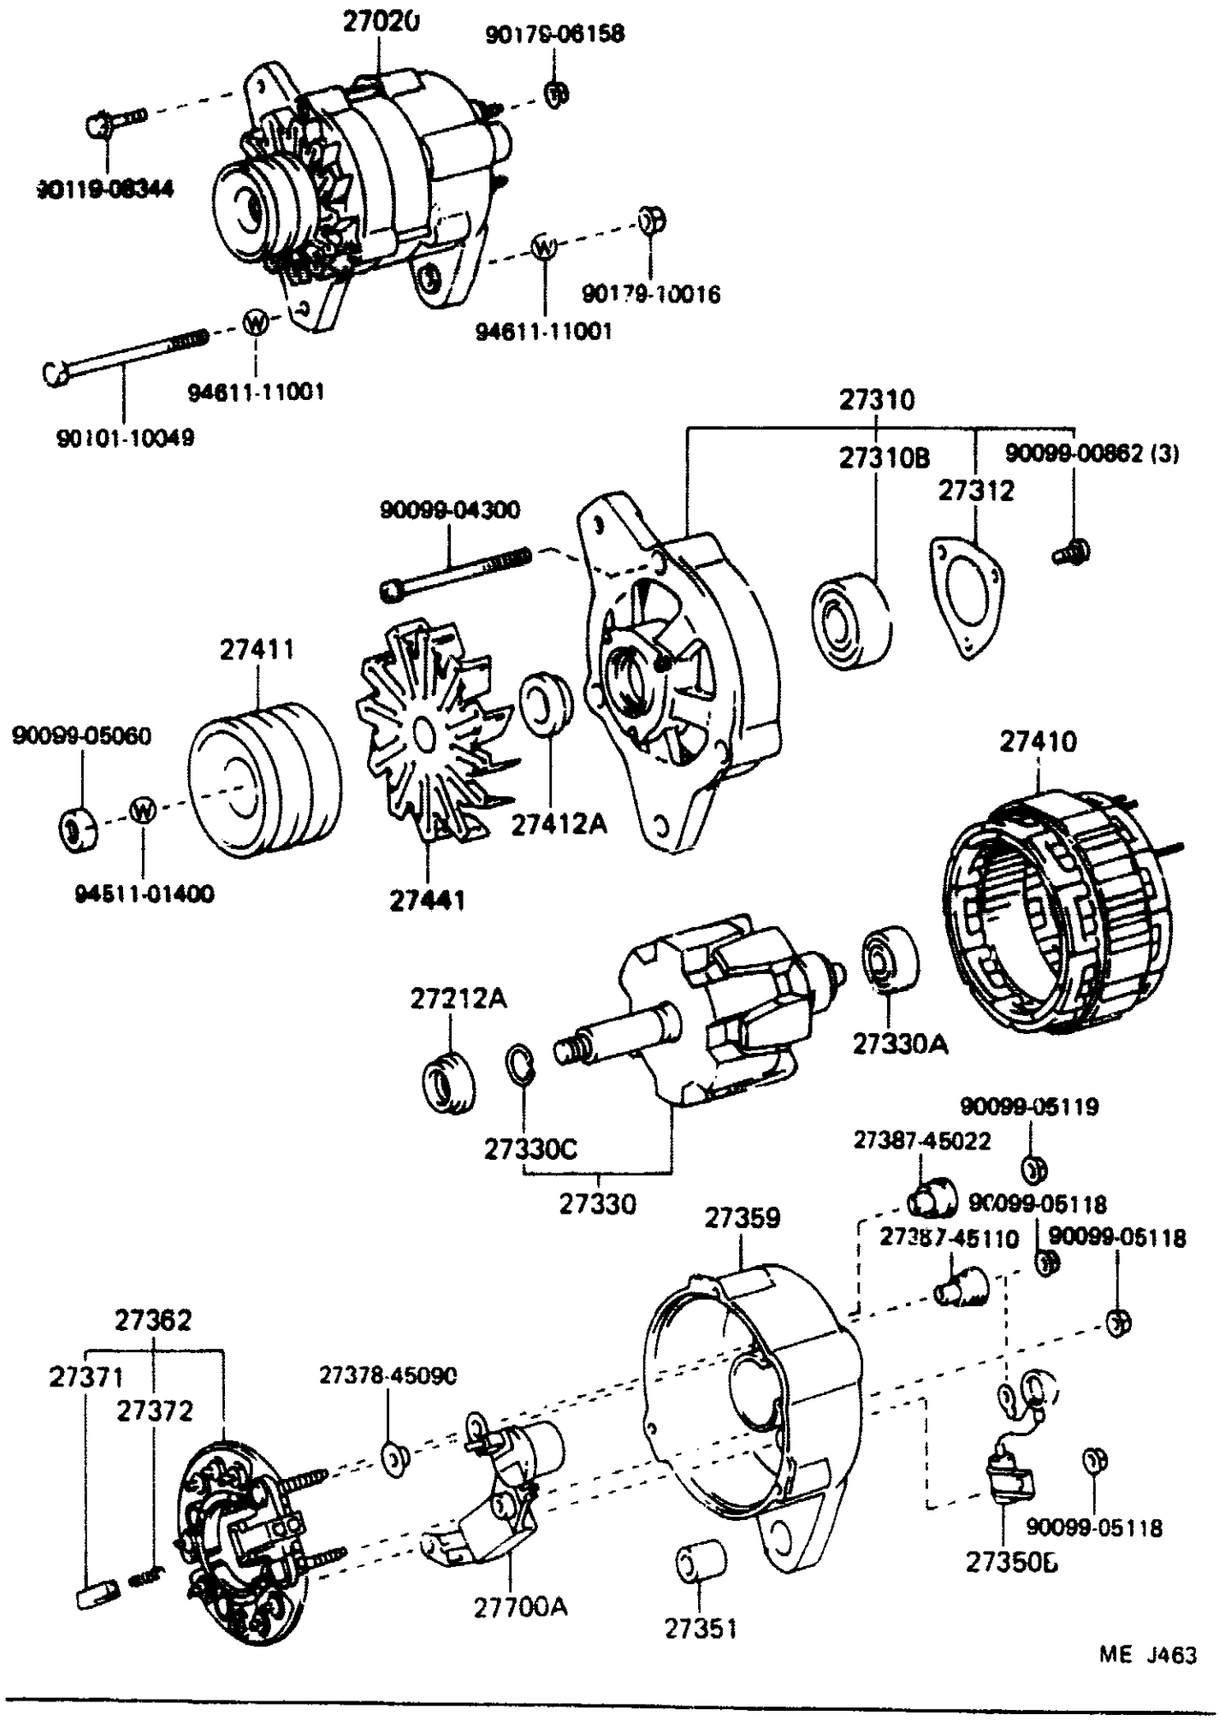



PROD. DATE	MODELS	DESCRIPTION	F/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	27020	ALTERNATOR ASSY					
8708-9001	3FE..FJ62	12V 80A		27060-61090-	1		
	27212A	RING, SPACE					
8708-9001	3FE..FJ62			27212-39050-	1		
	27310	FRAME ASSY, DRIVE END, ALTERNATOR					
8708-9001	3FE..FJ62			27310-72070-	1		
	27310B	BEARING (FOR ALTERNATOR DRIVE END FRAME)					
8708-9001	3FE..FJ62			90099-10110-	1		
	27312	PLATE, RETAINER					
8708-9001	3FE..FJ62			27312-45010-	1		
	27330	ROTOR ASSY, ALTERNATOR					
8708-9001	3FE..FJ62			27330-72070-	1		
	27330A	BEARING (FOR ALTERNATOR ROTOR)					
8708-9001	3FE..FJ62			90099-10116-	1		
	27330C	RING, SNAP					
8708-9001	3FE..FJ62			90099-07048-	1		
	27350B	CONDENSER, ALTERNATOR					
8708-9001	3FE..FJ62			90099-52065-	1		
	27351	BUSH (FOR ALTERNATOR RECTIFIER END FRAME)					
8708-9001	3FE..FJ62			27351-38051-	1		



PART NUMBER	LOCATION
57405-90A07-	3H2
57407-90A43-	3H2
-90A46-	3H2
57417-90A03-	3J2
57425-90A02-	3J2
57426-90A04-	3J2
57427-90A00-	3J2
57468-90A01-	3J2
-90A02-	3J2
57483-90A00-	3J2
57511-90A03-	3J2
57605-90A02-	3M2
57606-90A09-	3M2
57635-90A03-	3H2
57805-90A00-	3M2
58041-90A01-	3A3
58043-90A00-	3A3
58107-90A00-	3J2
58111-90A46-	3J2
58151-90A05-	3A3
58153-90A01-	3A3
58155-90A01-	3A3
58168-90A03-	3J2
58192-90A00-	3J2
58203-90A00-	3J2
58204-90A00-	3J2
58211-90A21-	3J2
-90A24-	3J2
-90A26-	3J2
-90A28-	3J2
58231-90A00-	3A3
58247-90A00-	3J2
	3K2
58248-90A00-	3J2
58255-90B00-	3A3
58261-90A04-	3K2
58263-90A02-	3K2
58268-90A05-	3K2
58279-90A00-	3J7
58290-90A04-	3K2
-90A05-	3K2
58303-90A00-	3M2
58304-90A00-	3M2
58305-90A08-	3M2
58306-90A12-	3M2
58307-90A00-	3M2
58308-90A03-	3M2
58311-90A19-	3M2
-90A20-	3M2
58315-90A07-	3M2
58316-90A07-	3M2
58325-90A00-	3M2
58339-90A00-	3M2
58344-90A01-	3A3
58345-90A00-	3A3
58348-90A00-	3M2
58367-90A00-	3M2
58410-90A00-	3G4
58418-90A00-	3G4
58457-90A00-	3G4
P 58510-90A85-03	3B3
P -90A85-06	3B3
P 58540-90A83-03	3B3
P -90A83-06	3B3
P 58570-90A28-03	3B3
P -90A28-06	3B3
-90A39-03	3B3
-90A39-06	3B3
58573-90A00-	3B3
58705-90A01-	3G7
58754-90A00-	3K2
58790-90A01-	3G7
58793-90A01-	3G7
P 58825-90A01-03	3E3
P -90A01-06	3E3
P 58841-90A01-03	3E3
P -90A01-06	3E3
P 58911-90A02-03	3E3
P -90A02-06	3E3
P -90A03-03	3E3
P -90A03-06	3E3
P -90A05-03	3E3
P -90A05-06	3E3
P -90A06-03	3E3
P -90A06-06	3E3
58918-90A00-	3E3
58936-60010-	2B1
P 58944-90A00-03	3E3
P -90A00-06	3E3
P -90A01-03	3E3
P -90A01-06	3E3
P 58947-90A03-03	3E3
P -90A03-06	3E3
P 58951-90A01-03	3E3
P -90A01-06	3E3
58959-16010-	3F3
58964-30030-	3F3
-90K00-	3F3
58965-12010-	3F3
-20020-	3F3
58976-20010-	3F3
58985-90A00-	3F3
58996-90A04-	3F3
58997-90A02-	3F3
61027-90A04-	3G3
61028-90A04-	3G3
61031-90A02-	3G3
61032-90A00-	3G3
61034-90A00-	3J3
61101-90A08-	3G3
61102-90A07-	3G3
61154-90C00-	3G4
61161-90A03-	3G3
61162-90A03-	3G3
61183-90A01-	3G3
61184-90A00-	3G3
61197-90A00-	3H3
61211-90A01-	3H3
61212-90A01-	3H3
61231-90A03-	3H3
61232-90A02-	3H3
61263-90A01-	3H3
61264-90A01-	3H3
61267-90A00-	3H3
61268-90A00-	3H3
61330-90A04-	3H3
61340-90A05-	3H3
-90A07-	3H3
61341-90A00-	3H3
61342-90A00-	3H3
61345-90A00-	3H3
61346-90A00-	3H3
61401-90A06-	3H3
61402-90A06-	3H3
61503-90A00-	3H3
61504-90A00-	3H3
61511-90A01-	3I3
61512-90A01-	3I3
61607-90A04-	3I3
-90A05-	3I3
61608-90A00-	3I3
-90A01-	3I3
61611-90A03-	3I3
61612-90A03-	3I3
61631-90A03-	3I3
61632-90A03-	3I3
61645-90A00-	3I3
61646-90A00-	3I3
61705-90A30-	3I3
-90A40-	3I3
61706-90A66-	3I3
-90A67-	3I3
61709-90A02-	3I3
61711-90A01-	3I3
61712-90A01-	3I3
61733-90A02-	3I3
-90A03-	3I3
-90A05-	3I3
61734-90A01-	3I3
-90A03-	3I3
-90A05-	3I3
61743-90A02-	3I3
61745-90A01-	3J3
61746-90A01-	3J3
61791-90B01-	3J3
61793-90A00-	3J3
P 62101-90A00-03	3C4
P -90A00-16	3C4
P 62102-90A00-03	3C4
P -90A00-16	3C4
P 62163-90A00-03	3C4
P -90A00-16	3C4
P 62164-90A00-03	3C4
P -90A00-16	3C4
62311-90A00-03	3C4
-90A00-06	3C4
P -90A01-03	3C4
P -90A01-06	3C4
62312-90A00-03	3C4
-90A00-06	3C4
P -90A01-03	3C4
P -90A01-06	3C4
62313-90A00-03	3C4
-90A00-16	3C4
P 62333-90A00-03	3C4
P -90A00-16	3C4
P 62411-90A01-03	3C4
P -90A01-16	3C4
P 62412-90A01-03	3C4
P -90A01-16	3C4
P 62471-90A00-18	3C4
P 62472-90A00-18	3C4
62505-90A03-08	3D4
62506-90A03-08	3D4
62510-90A31-03	3D4
-90A31-06	3D4
P -90A34-03	3D4
P -90A34-06	3D4
P 62520-90A44-03	3D4
P -90A44-06	3D4
-90A52-03	3D4
-90A52-06	3D4
P 62539-90A01-03	3D4
P -90A01-06	3D4
P 62549-90A00-03	3D4
P -90A00-16	3D4
62613-90A07-03	3D4
-90A07-06	3D4
P -90A09-03	3D4
P -90A09-06	3D4
62614-90A00-03	3D4
-90A00-16	3D4
P -90A02-03	3D4
-90A02-06	3D4
62633-90A09-08	3D4
P -90A11-08	3D4
62634-90A09-08	3D4
P -90A11-08	3D4
P 62640-90A17-03	3D4
P -90A17-06	3D4
P 62650-90A06-03	3D4
P -90A06-06	3D4
62711-90A12-	3K3
62712-90A11-	3K3
62741-90A01-	3K3
62795-90A00-	3D7
62903-90A00-	3A4
62904-90A00-	3A4
62905-69015-	3A4
62906-69015-	3A4
62909-22010-	3A4
63105-90A00-	3L3
63111-90A00-	3L3
-90A01-	3L3
63132-90A00-	3L3
63141-90A00-	3L3
63145-90A00-	3L3
P 63310-90A11-08	3E4
63341-90A01-	3E4
63343-90A01-	3E4
63344-90A01-	3E4
63353-90A00-	3E4
63354-90A00-	3E4
63361-90A00-	3E4
	3F4
-90A01-	3E4
	3F4
-90A02-	3E4
	3F4
63362-90A00-	3F4
-90A01-	3F4
-90A02-	3F4
63363-90A00-	3F4
-90A01-	3F4
-90A02-	3F4
63371-30050-	3F4
63372-90A00-	3F4
P 63392-90A00-18	3F4
P 63396-90A00-18	3F4
P 63397-90A00-18	3F4
63435-90A00-	3L3
63436-90A00-	3L3
63437-90A00-	3L3
63438-90A00-	3M3
63439-90A00-	3M3
63441-90A00-	3M3
63442-90A00-	3M3
63443-90A00-	3M3
63444-90A00-	3M3
63445-90A00-	3M3
63447-90A00-	3M3
63448-90A00-	3M3
63449-90A00-	3M3
63457-90A00-	3M3
63458-90A00-	3M3
63459-90A00-	3M3
P 64739-90K01-03	3D4
P -90K01-06	3D4
64777-90A00-	3G7
P 64780-90A01-13	3J5
P -90A01-16	3J5
64798-90A00-	3J5
65061-90A13-	3J5
65527-90A01-	3M2
65706-90A00-	3L5
65707-90A00-	3L5
65777-90A00-	3L5
66110-90A00-	3L5
66301-90A00-	3M2
66318-90A00-	3M2
67001-90A40-	3I4
-90A44-	3I4
67002-90A47-	3I4
-90A50-	3I4
67003-90A15-	3C5
-90A17-	3C5
67004-90A15-	3C5
-90A17-	3C5
67005-90A20-	3J5
-90A27-	3J5
67111-90A15-	3I4
-90A18-	3I4
67112-90A15-	3I4
-90A18-	3I4
67113-90A05-	3C5
67114-90A05-	3C5
67118-90A02-	3I4
-90A03-	3I4
67207-90A00-	3L5
67209-90A00-	3L5
67285-90A00-	3L5
67286-90A00-	3L5
67401-90A00-	3I4
67402-90A00-	3I4
67403-90A00-	3I4
67404-90A00-	3I4
67407-90A00-	3C5
67408-90A00-	3C5
67481-90A00-	3I4
67482-90A00-	3I4
67610-90G04-03	3I4
-90G04-06	3I4
-90G07-03	3I4
-90G07-06	3I4
P -90G42-03	3I4
P -90G42-06	3I4
P -90G49-03	3I4
P -90G49-06	3I4
67620-90G07-03	3J4
-90G07-06	3J4
-90G14-03	3J4
-90G14-06	3J4
P -90G41-03	3J4
P -90G41-06	3J4
P -90G48-03	3J4
P -90G48-06	3J4
67630-90A25-03	3C5
-90A25-06	3C5
-90A28-03	3C5
-90A28-06	3C5
P -90A33-03	3D5
P -90A33-06	3D5
P -90A36-03	3D5
P -90A36-06	3D5
67640-90A25-03	3D5
-90A25-06	3D5
-90A28-03	3D5
-90A28-06	3D5
P -90A34-03	3D5
P -90A34-06	3D5
P -90A37-03	3D5
P -90A37-06	3D5
P 67651-90A01-03	3J4
P -90A01-06	3J4
67687-90A00-	3J5
67689-90A00-	3J5
67765-90A00-	3J5
67766-90A00-	3J5
67767-90A00-	3J5
67769-90A00-	3J5
67771-22010-	3J4
-30060-	3D5
P 67777-22040-23	3J4
P -22040-36	3J4
P 67778-22030-23	3J4
P -22030-46	3J4
P 67805-90A01-	3D5
67813-90A00-	3J3
67814-90A00-	3J3
B 67832-90A04-	3J4
P -90A07-	3J4
67847-90A01-	3K5
67861-90A00-	3J4
67862-90A00-	3J4
67868-30040-	3D5
	3J4
67871-90A00-	3D5
67872-90A00-	3D5
67881-90A06-	3K5
67891-90A01-	3K5
P 67913-90A00-03	3B3
P -90A00-16	3B3
67917-90A00-03	3C3
-90A00-16	3C3

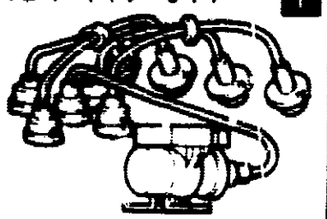
1B4 (19-01) 1

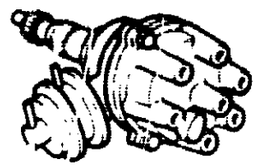Ignition Coil & Cord

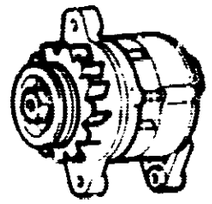1D4 (19-02) 2

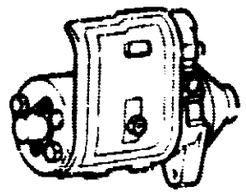Distributor

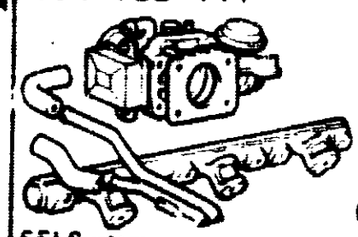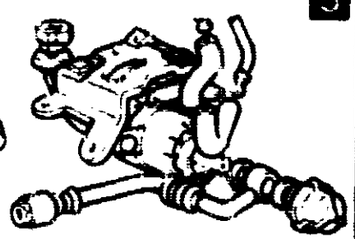
1E4 (19-03) 3

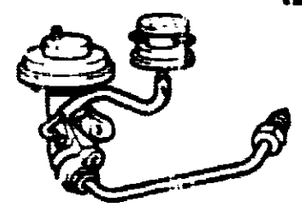Alternator


1G4 (19-04) 4

Starter

1I4 (22-11) 5

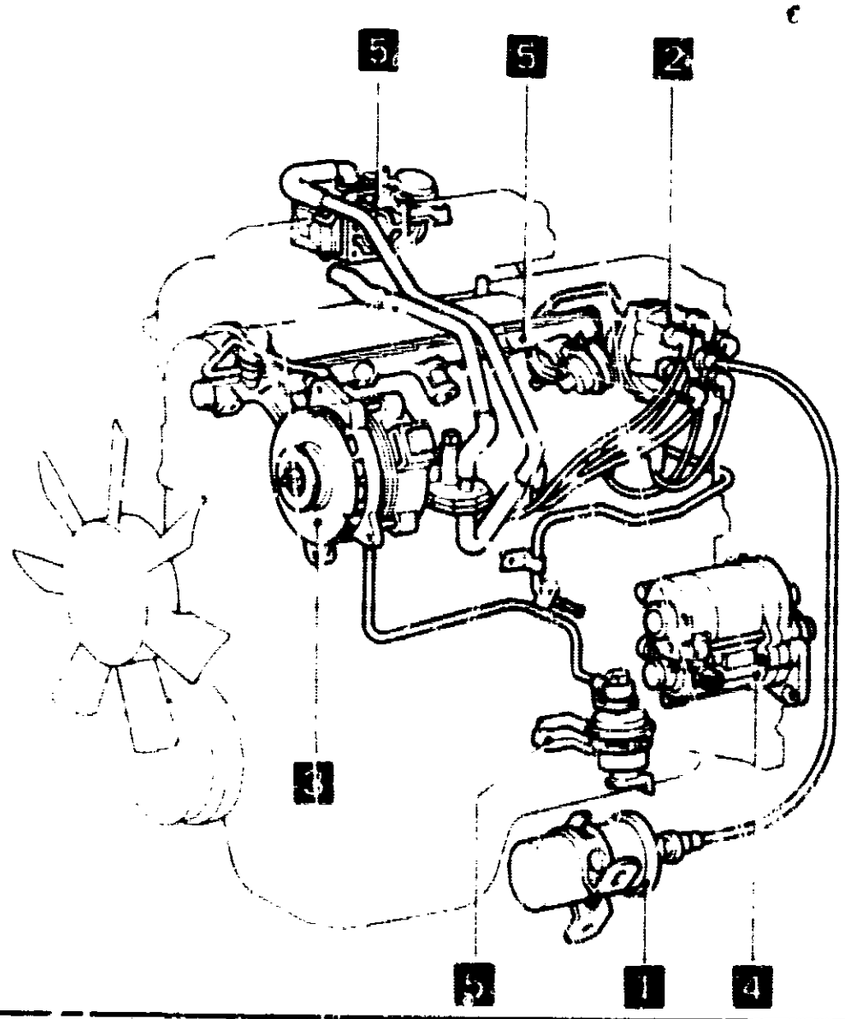
EFI System

1M4 (25-01) 6

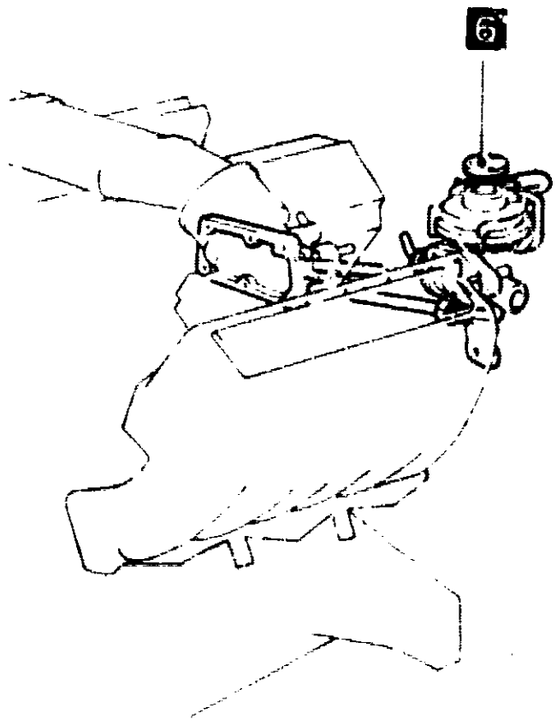EGR System


ENGINE, FUEL GROUP (2/2)





MA 8'99

(8708-)

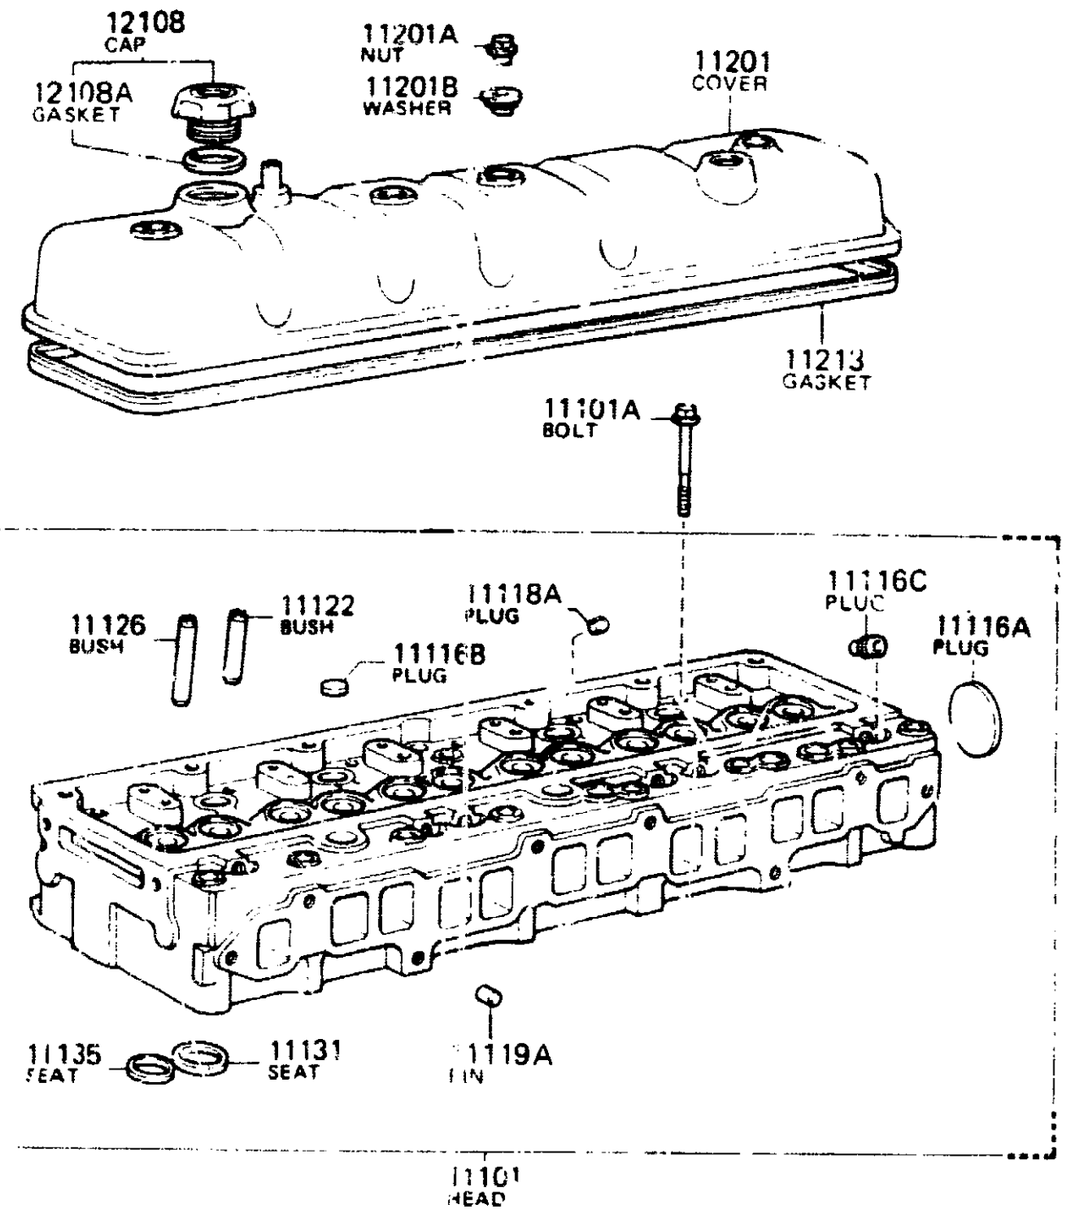

MA 9863


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	11101	HEAD SUB-ASSY, CYLINDER					
8708-9001	3FE..FJ62			11101-61080-	1		
	11101A	BOLT (FOR CYLINDER HEAD SET)					
8708-9001	3FE..FJ62	*13-1.75PX138-27		90105-13005-	2		
8708-9001	3FE..FJ62	*13-1.75PX120.5-27 ,*13-1.75PX120.5-27		90910-02050-	13		
	11115	GASKET, CYLINDER HEAD					
8708-9001	3FE..FJ62			# 11115-61020- (11115-61030-)	1 1		
	11116A	PLUG, TIGHT, NO.1					
8708-9001	3FE..FJ62			96411-45000-	1		
	11116B	PLUG, TIGHT, NO.2					
8708-9001	3FE..FJ62			96411-42500-	6		
	11116C	PLUG, TIGHT, NO.3					
8708-9001	3FE..FJ62			90340-14001-	2		
	11118A	PLUG, STRAIGHT, NO.1					
8708-9001	3FE..FJ62			90334-07009-	1		
	11119A	PIN, STRAIGHT, NO.1					
8708-9001	3FE..FJ62	L=18, OD=8		90250-08120-	4		
	11122	BUSH, VALVE GUIDE INTAKE					
8708-9001	3FE..FJ62	STD		11122-61011-	6		
8708-9001	3FE..FJ62	O/S 0.05		11123-61011-	6		

* - P... =Outside diameter - Pitch × Bolt length - Thread length

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	15413	PIPE, OIL PUMP OUTLET					
6708-9001	3FE..FJ62			15403-60020-	1		
	15413A	UNION (FOR OIL PUMP OUTLET PIPE)					
8708-9001	3FE..FJ62			90404-16008-	1		
	15413B	SLEEVE, ALL (FOR OIL PUMP OUTLET PIPE)					
8708-9001	3FE..FJ62			90410-11005-	1		
	15413C	NUT, UNION (FOR OIL PUMP OUTLET PIPE)					
8708-9001	3FE..FJ62			90402-16042-	1		
	15413D	GASKET (FOR OIL PUMP OUTLET PIPE)					
8708-9001	3FE..FJ62			90430-15261-	2		
	15413F	BOLT, UNION (FOR OIL PUMP OUTLET PIPE)					
8708-9001	3FE..FJ62			90401-14093-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)

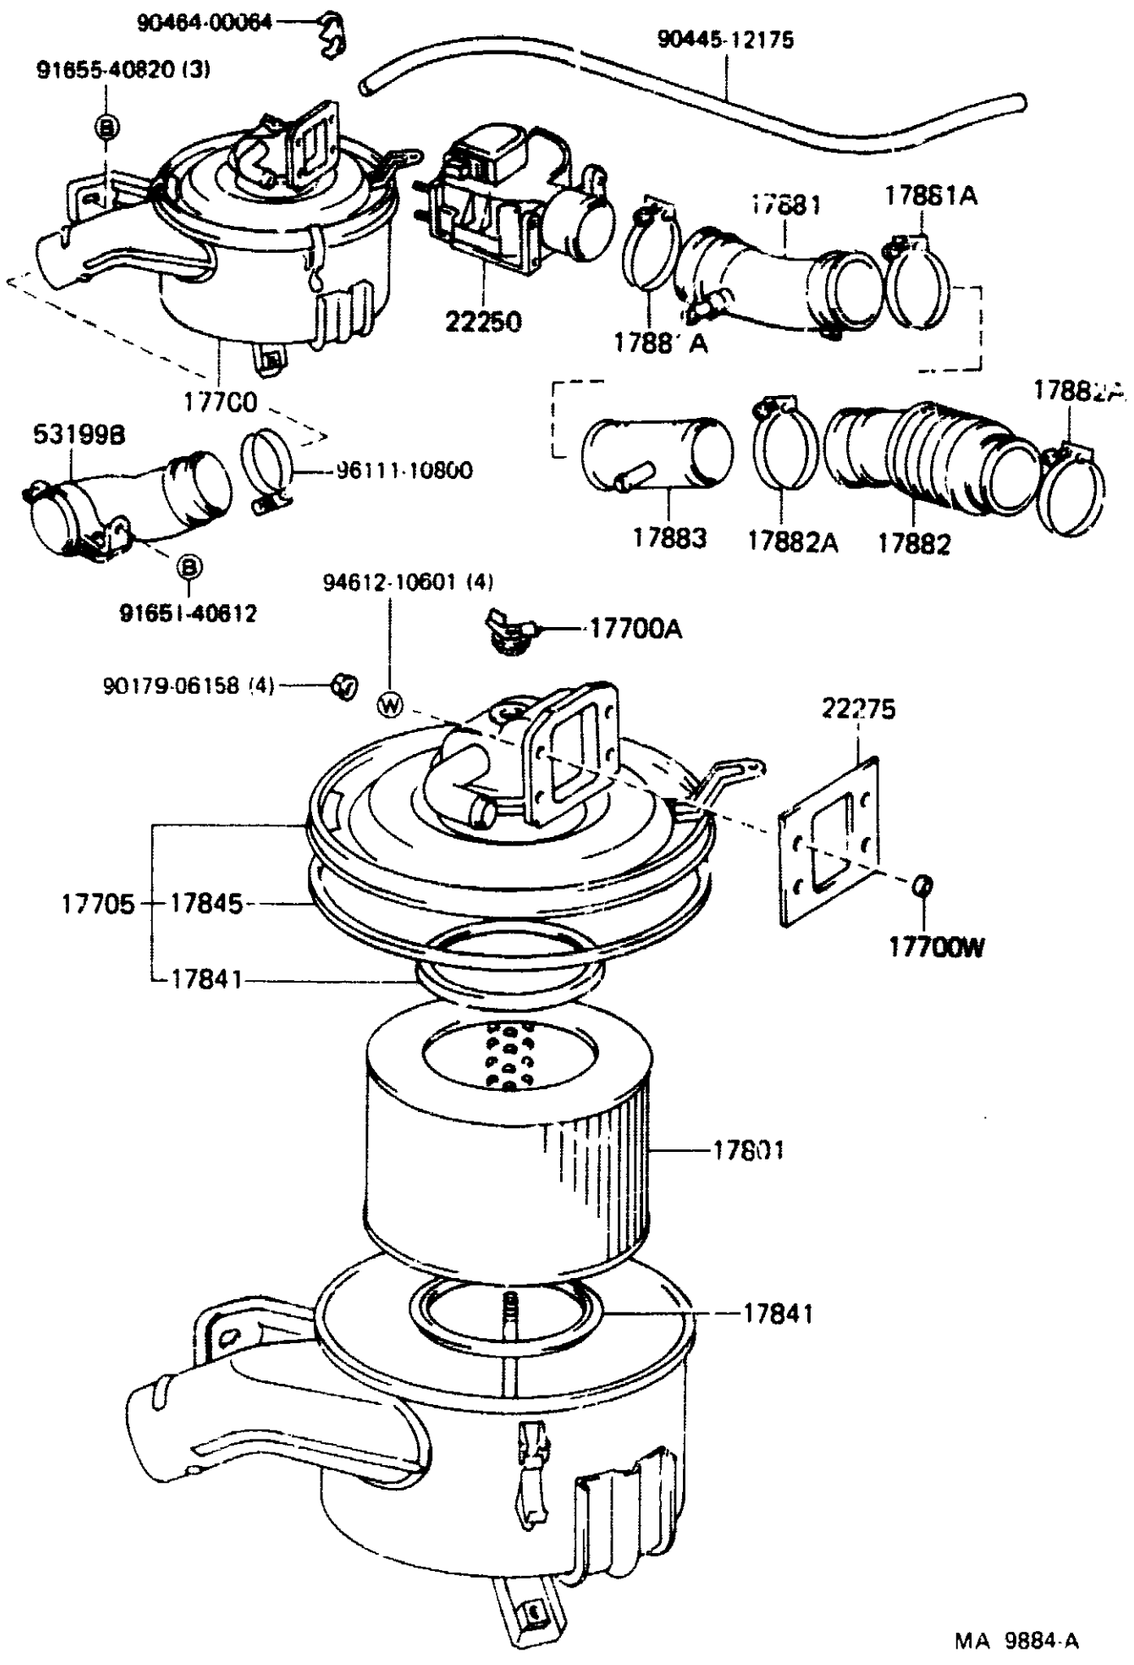

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	17700	CLEANER ASSY, AIR					
8708-3001	3FE..FJ62			17700-61230-	1		
	17700A	NUT, WING (FOR AIR CLEANER)					
8708-9001	3FE..FJ62			90175-08008-	1		
	17700W	SPACER (FOR AIR CLEANER)					
8708-9001	3FE..FJ62			90560-06009-	4		
	17705	CAP SUB-ASSY, AIR CLEANER					
8708-9001	3FE..FJ62			17705-61130-	1		
	17801	ELEMENT SUB-ASSY, AIR CLEANER FILTER					
8708-9001	3FE..FJ62			17801-68020-	1		
	17841	GASKET, FILTER ELEMENT					
8708-9001	3FE..FJ62			17841-68010-	2		
	17845	GASKET, AIR CLEANER CAP					
8708-9001	3FE..FJ62			17845-61011-	1		
	17881	HOSE, AIR CLEANER, NO.1					
8708-9001	3FE..FJ62			17881-61090-	1		
	17881A	CLAMP (FOR AIR CLEANER HOSE, NO.1)					
8708-9001	3FE..FJ62			96111-10930-	2		
	17882	HOSE, AIR CLEANER, NO.2					
8708-9001	3FE..FJ62			17882-61070-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	27359	FRAME, RECTIFIER END					
8708-9001	3FE..FJ62			27359-61190-	1		
	27362	RECTIFIER ASSY, W/BRUSH					
8708-9001	3FE..FJ62			27362-72070-	1		
	27371	BRUSH, ALTERNATOR					
8708-9001	3FE..FJ62			27371-31011-	2		
	27372	SPRING, ALTERNATOR BRUSH					
8708-9001	3FE..FJ62			27372-31011-	2		
	27410	STATOR ASSY, ALTERNATOR					
8708-9001	3FE..FJ62			27410-72070-	1		
	27411	PULLEY, ALTERNATOR					
8708-9001	3FE..FJ62			27411-61210-	1		
	27412A	COLLAR, SPACE (FOR ALTERNATOR DRIVE END FRAME)					
8708-9001	3FE..FJ62			27412-45012-	1		
	27441	FAN, ALTERNATOR					
8708-9001	3FE..FJ62			27441-45050-	1		
	27700A	REGULATOR ASSY, GENERATOR					
8708-9001	3FE..FJ62			27700-63030-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

PART NUMBER	LOCATION
68111-90A01-	3J4
68112-90A01-	3J4
68113-90A01-	3D5
68114-90A01-	3D5
68123-90A01-	3D5
68124-90A01-	3E5
68131-90A20-	3K5
68141-90A03-	3K4
68142-90A01-	3E5
68143-90A01-	3K4
68170-90A01-	3K4
68188-90A00-	3E5
68189-90A00-	3E5
68190-90A01-	3E5
68281-90A00-	3K5
68282-90A00-	3K5
68291-90A01-	3K5
68610-22010-	3K4
68617-90A01-	3E5
	3K4
68630-90A00-	3E5
68710-14020-	3A5
-30080-	3H5
68720-14020-	3A5
-30020-	3H5
68730-14020-	3A5
	3H5
68740-14020-	3A5
	3H5
68810-90A00-	3L5
68868-90A00-	3L5
68950-69045-	3M5
68961-23010-	3H5
69005-90A47-	3A6
-90A62-	3A6
69051-90A06-	3A6
69052-90A06-	3A6
69055-90A06-	3A6
-90A11-	3A6
69056-90A01-	3A6
69057-90A08-	3A6
69058-90A02-	3A6
69205-20020-	3F5
	3L4
69206-20020-	3F5
	3L4
69210-90A00-	3L4
69212-90A00-	3M5
69220-90A00-	3L4
69230-90A00-	3F5
69240-90A00-	3F5
P 69260-12010-03	3A5
P	3H5
P -12010-46	3A5
P	3H5
69273-30020-	3F5
	3L4
P 69277-16040-23	3F5
P	3L4
P -16040-36	3F5
P	3L4
69285-22010-08	3A5
	3H5
69289-90A00-	3M5

PART NUMBER	LOCATION
69310-90A02-	3L4
-90A03-	3L4
69320-90A02-	3L4
-90A03-	3L4
69330-90A00-	3F5
-90A01-	3F5
69340-90A00-	3F5
-90A01-	3F5
69350-90A03-	3M5
69380-90A01-	3M5
69390-90A00-	3M5
69410-90B00-	3G5
	3M4
69430-90A01-	3M5
69450-90A00-	3M5
69460-90A00-	3M5
69513-14010-	3A6
-90A00-	3B6
69551-13020-	3B6
-90A00-	3B6
69552-95A00-	3B6
69563-90A00-	3B6
69581-14010-	3B6
69681-20040-	3B6
69690-90A01-	3M5
69705-90A00-	3M5
P 69706-90A00-03	3M5
P -90A00-06	3M5
69711-90A00-	3M4
69712-90A00-	3M4
69713-90A00-	3G5
69714-90A00-	3G5
69722-90A00-	3M5
69736-90K00-	3G5
	3M4
P 69741-90K00-06	3G5
P	3M4
69747-20020-01	3M5
69749-12010-	3G5
	3L1
	3M4
-30020-	3M5
69751-20040-	3E5
	3K4
69759-30021-	3G5
	3M4
69764-90A00-	3M5
69767-90A00-	3M5
69770-90A02-	3G5
-90A03-	3G5
69780-90A02-	3G5
-90A03-	3G5
69801-90A00-	3A5
69802-90A00-	3A5
69803-90A00-	3H5
69804-90A00-	3H5
69810-90A02-	3A5
69820-90A02-	3A5
69830-90A01-	3H5
69840-90A01-	3H5
69901-90A03-	3B5
69902-90A02-	3B5
69905-90A03-	3I5
69906-90A03-	3I5


PART NUMBER	LOCATION
69971-90A01-	3B5
69973-90A00-	3I5
69975-90A00-	3I5
P 71071-90A35-03	3D6
P -90A35-06	3D6
P 71072-90A18-03	3D6
P -90A18-06	3D6
P 71073-90A44-03	3D6
P -90A44-06	3D6
71075-90A18-03	3D6
-90A18-06	3D6
P 71077-90A41-03	3D6
P -90A41-06	3D6
71301-90A00-	3D6
71307-90A00-	3D6
71309-90A00-	3E6
71354-90A00-	3E6
P 71410-90A33-03	3E6
P -90A33-06	3E6
P 71420-90A31-03	3E6
P -90A31-06	3E6
P 71430-90A39-03	3E6
P -90A39-06	3E6
P 71440-90A37-03	3E6
P -90A37-06	3E6
P 71460-90G12-03	3E6
P -90G12-06	3E6
P 71480-90G28-03	3E6
P -90G28-06	3E6
71739-90A00-	3E6
P 71825-90A00-03	3E6
P -90A00-16	3E6
P 71826-90A00-03	3E6
P -90A00-16	3E6
P 71827-90A00-03	3E6
P -90A00-16	3E6
P 71828-90A00-03	3E6
P -90A00-16	3E6
P 71829-90A00-03	3E6
P -90A00-16	3E6
P 71835-90A00-03	3F6
P -90A00-16	3F6
P 71836-90A00-03	3F6
P -90A00-16	3F6
P 71837-90A01-03	3F6
P -90A01-06	3F6
71887-90A00-	3F6
P 71910-90A01-03	3F6
P -90A01-16	3F6
71930-10060-33	3F6
P -10060-36	3F6
71931-10010-33	3F6
-10010-36	3F6
71955-90K00-01	3F6
71956-30020-13	3F6
P -30020-56	3F6
71990-30020-13	3F6
P -30020-56	3F6
72110-90A04-	3F6
72120-90A04-	3F6
72130-90A03-	3F6
72140-90A00-	3F6
72145-90A00-	3F6
72146-90A00-	3G6

PART NUMBER	LOCATION
72510-90A03-	3G6
72520-90A02-	3G6
P 72525-14010-13	3G6
P -14010-56	3G6
P 72526-14010-43	3G6
P -14010-56	3G6
72538-12010-	2B7
P 72551-90A00-03	3G6
P -90A00-16	3G6
P 72552-90A00-03	3G6
P -90A00-16	3G6
72607-90A00-	3G6
72630-90A17-	3G6
-90A20-	3G6
72640-90A17-	3G6
-90A20-	3G6
72645-90A00	3G6
72651-90A00-	3G6
P 72660-90A00-03	3G6
P -90A00-16	3G6
72670-90A02-	3G6
72680-90A02-	3G6
P 72694-90A00-03	3G6
P -90A00-16	3G6
73003-90A00-03	3H6
-90A00-06	3H6
73210-90A26-03	3H6
-90A26-06	3H6
P -90A29-03	3H6
P -90A29-06	3H6
73220-90A15-03	3H6
-90A15-06	3H6
P -90A17-03	3H6
P -90A17-06	3H6
P 73230-90A17-06	3H6
P -90A17-13	3H6
P 73240-90A20-03	3H6
P -90A20-06	3H6
73330-90A04-13	3I6
-90A04-16	3I6
-90A05-13	3I6
-90A05-16	3I6
-90A37-03	3I6
-90A37-06	3I6
P -90A46-03	3I6
P -90A46-06	3I6
P 73360-90A40-03	3I6
P -90A40-06	3I6
P 73380-90A20-03	3I6
P -90A20-06	3I6
74102-90A01-	3A7
74104-90A01-	3A7
P 74105-10010-10	3A7
-10010-13	3A7
74135-10030-	3A7
74137-10030-	3A7
P 74250-90A00-03	3K6
P -90A00-16	3K6
P 74310-90A28-08	3K6
P -90A52-08	3K6
P 74320-90A25-08	3K6
P -90A42-08	3K6
P 74348-12010-18	3K6
P 74372-90A00-	3C11


PART NUMBER	LOCATION
74404-90A00-	3L6
74431-90A00-	3L6
74433-90A00-	3L6
74451-90A00-	3L6
74559-12020-	3M6
-20030-	3M6
-20090-	3M6
-60010-	3M6
74564-60010-	3M6
74571-28020-	3M6
74610-10020-18	3K6
-90K00-08	3K6
74617-14010-18	3K6
-16010-08	3K6
74620-90A00-18	3K6
P 74670-90A01-03	3K6
P -90A01-06	3K6
75330-90A00-	3C7
75340-90A00-	3C7
75370-90A02-	3C7
75415-95660-	3M5
75430-90K00-	3C7
75442-90A01-	3C7
75505-90A00-	3D7
75506-90A00-	3E7
75531-90A00-	3D7
75533-90A00-	3D7
75534-90A00-	3D7
75535-90A00-	3D7
75541-90A00-	3D7
75543-90A00-	3D7
75553-90A00-	3E7
75554-90A00-	3E7
75575-90A00-	3E7
75583-90A00-	3E7
75586-90A00-	3E7
75596-90A00-	3E7
75631-90A01-	3M3
75641-90A00-	3E7
75642-90A00-	3E7
75645-90A00-	3E7
75646-90A00-	3E7
75710-90A02-	3E7
75720-90A02-	3E7
75730-90A01-	3E7
75740-90A01-	3E7
75751-90A00-	3E7
75752-90A00-	3E7
75755-90A00-	3F7
75756-90A00-	3F7
75761-90A00-	3F7
75762-90A00-	3F7
75763-90A00-	3F7
75764-90A00-	3F7
75765-90A00-	3F7
75766-90A00-	3F7
75812-90A00-	3E7
75813-90A00-	3C7
75850-69015-	3F7
75860-69015-	3F7
75867-20020-	3F7
76603-69015-	3K1
76604-69015-	3K1
76607-69015-	3J3

PART NUMBER	LOCATION
76608-69015-	3J3
76620-90A01-	3M2
77001-60220-	3J7
77030-90A01-	3J7
77037-90K00-	3J7
77169-14010-	1K4
77193-60031-	3J7
77201-60150-	3J7
77205-60140-	3J7
77209-60041-	3J7
77213-60030-	3J7
77244-60110-	3K7
77249-60040-	3J7
-60050-	3J7
77250-60080-	3J7
A -60081-	3J7
-60090-	3J7
77261-60080-	3J7
77262-60030-	3J7
77264-60030-	3K7
77293-60030-	3K7
77305-90A01-	3K7
77310-12100-	3K7
77316-12050-	3K7
77358-12020-	3K7
77366-12010-	3K7
77601-60060-	3K7
77602-60040-	3K7
77740-60130-	3K7
77751-60020-	3K7
78111-95110-	3M7
78118-90K00-	3M7
78120-90A08-	3M7
-90A09-	3M7
78180-90A24-	3M7
78184-90A01-	3M7
-90A03-	3M7
78410-90A03-	3M7
-90A08-	3M7
78471-90A00-	3M7
81105-90A27-	3A8
81106-90A27-	3A8
81110-90A28-	3A8
81111-20360-	3A8
	3B8
81113-90B04-	3A8
81114-22391-	3B8
81121-14320-	3A8
81131-28050-	3A8
81150-90A28-	3B8
81153-90B04-	3B8
81154-22391-	3A8
P 81240-22070-08	3J8
P -95A16-	3J8
P 81241-20060-	3J8
81260-22030-	3J8
P 81270-95A07-	3H8
P 81271- -0-	3H8
P 81272-1 0 0-	3H8
P 81274-95A00-	3H8
P 81510-90A13-	3C8
P 81511-90A13-	3C8
P 81515-90A13-	3C8
P 81520-90A13-	3C8

POWER TRAIN·CHASSIS GROUP (1/2)

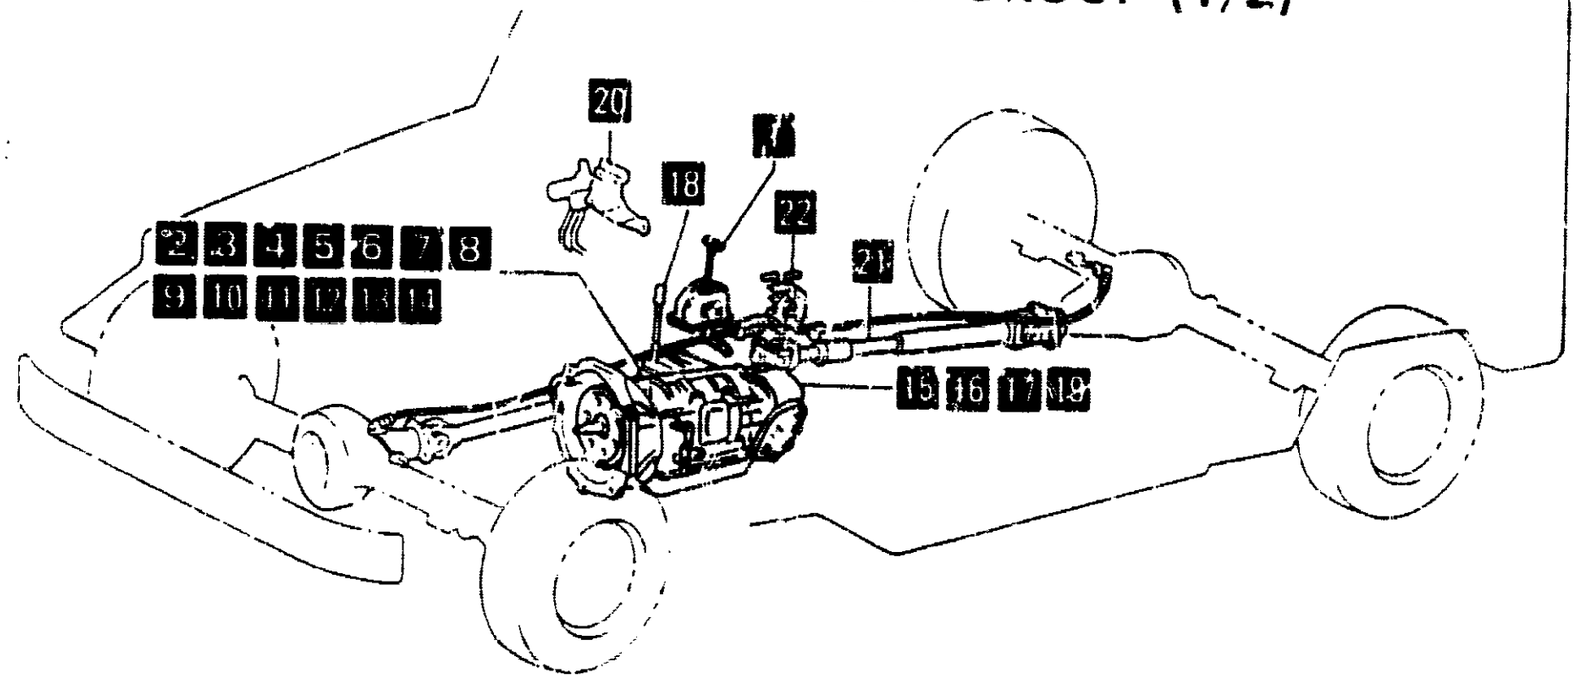


2A1 (33–12) 1

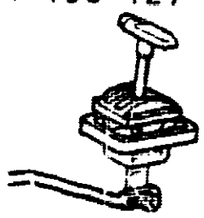


Shift Lever & Retainer

2D1 (35–01) 2

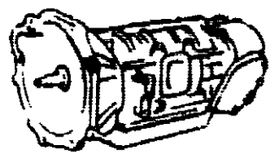

Transmission Assy

2G1 (35–03) 3

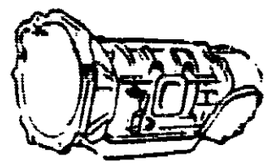


Transmission Case

2J1 (35–05) 4




Speedometer Driven Gear

2E1 (35–02) 5

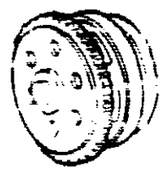

Torque Converter & Chain

2K1 (35–06) 6

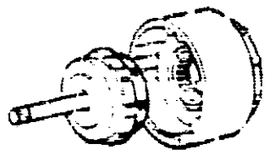


Overdrive Gear

2A2 (35–07) 7




Multiple Disc Clutch

2D2 (35–08) 8

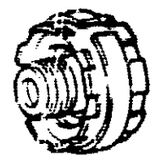


Planetary Sun Gear

2F2 (35–09) 9

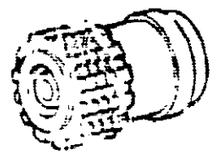


Brake No. 3

2G4 (35–10) 10

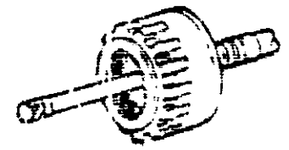


Planetary Gear

2K4 (37–01) 21

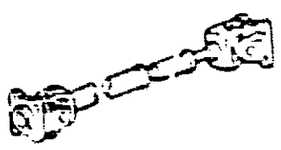

Propeller Shaft

2J4 (36–16) 20

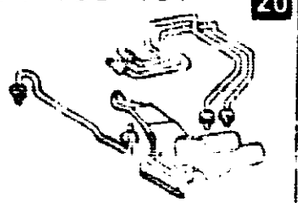

Vacuum Shift Valve

2H4 (36–12) 19



Diaphragm Cylinder

2M5 (42–01) 22




Differential Lock Control

2J2 (35–11) 11



Governor

2F4 (36–11) 18

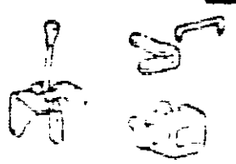


Transfer Lever

2C4 (36–10) 17




Transfer Gear

2A4 (36–09) 16

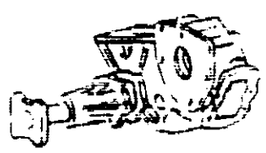

Transfer Case

2M3 (36–08) 15

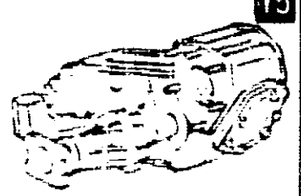


Transfer Assy

2K3 (35–14) 14



Oil Cooler & Tube

2J3 (35–13) 13

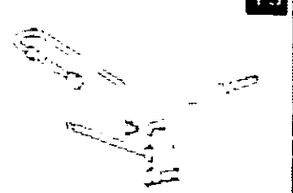

Throttle Link

2K2 (35–12) 12




Valve Body

MC F294

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	11126	BUSH, VALVE GUIDE EXHAUST					
8708-9001	3FE..FJ62	STD		11126-61011-	6		
8708-9001	3FE..FJ62	O/S 0.05		11127-61011-	6		
	11131	SEAT, VALVE INTAKE					
8708-9001	3FE..FJ62	STD		11131-61010-	6		
8708-9001	3FE..FJ62	O/S 0.03		11132-61010-	6		
	11135	SEAT, VALVE EXHAUST					
8708-9001	3FE..FJ62	STD		11135-60010-	6		
8708-9001	3FE..FJ62	O/S 0.03		11136-60030-	6		
	11201	COVER SUB-ASSY, CYLINDER HEAD					
8708-9001	3FE..FJ62			11201-61041-	1		
	11201A	NUT, CAP (FOR CYLINDER HEAD COVER)					
8708-9001	3FE..FJ62			90176-08014-	4		
	11201B	WASHER, SEAL (FOR CYLINDER HEAD COVER)					
8708-9001	3FE..FJ62			90210-15001-	4		
	11213	GASKET, CYLINDER HEAD COVER					
8708-9001	3FE..FJ62			11213-61020-	1		
	12102	CAP SUB-ASSY, OIL FILLER					
8708-9001	3FE..FJ62			12180-61010-	1		
	12108A	GASKET (FOR OIL FILLER CAP)					
8708-9001	3FE..FJ62			12195-71020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)

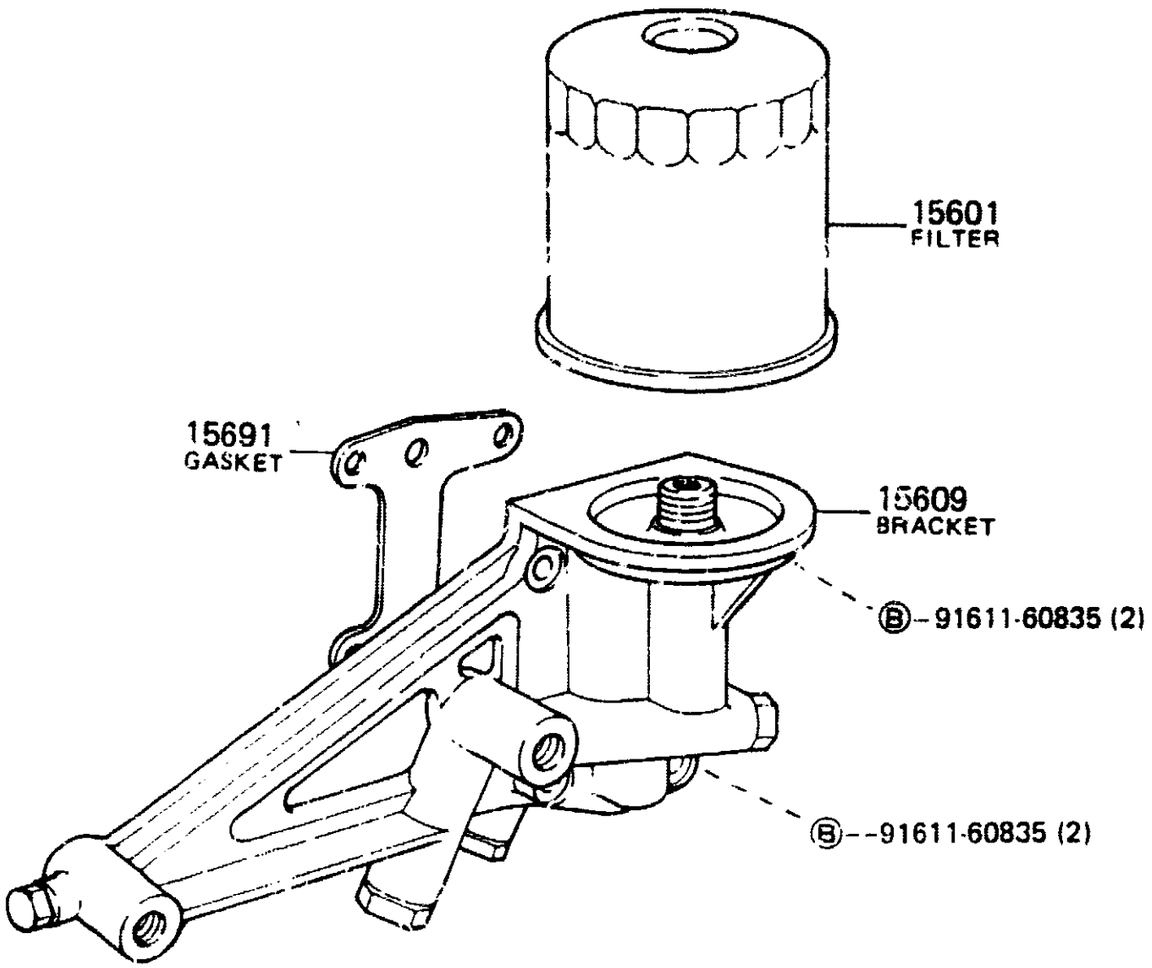


MA A220

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	15601	FILTER SUB-ASSY, OIL					
8708-9001	3FE..FJ62			15600-41010-	1		
	[illegible]	BRACKET SUB-ASSY, OIL FILTER					
8708-9001	3FE..FJ62			15609-61012-	1		
	15691	GASKET, OIL FILTER					
8708-9001	3FE..FJ62			15691-60010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	17882A	CLAMP (FOR AIR CLEANER HOSE, NO.2)					
8708-9001	3FE..FJ62			96111-10930-	2		
	17883	HOSE, AIR CLEANER, NO.3					
8708-9001	3FE..FJ62			17883-61020-	1		
	22250	METER ASSY, INTAKE AIR FLOW					
8708-9001	3FE..FJ62			22250-61010-	1		
	22275	GASKET, AIR FLOW METER					
8708-9001	3FE..FJ62			22275-43010-	1		
	53199B	DUCT SUB-ASSY, COOL AIR INTAKE					
8708-9001	FJ62			53207-9CA00-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)
12V 1.0KW

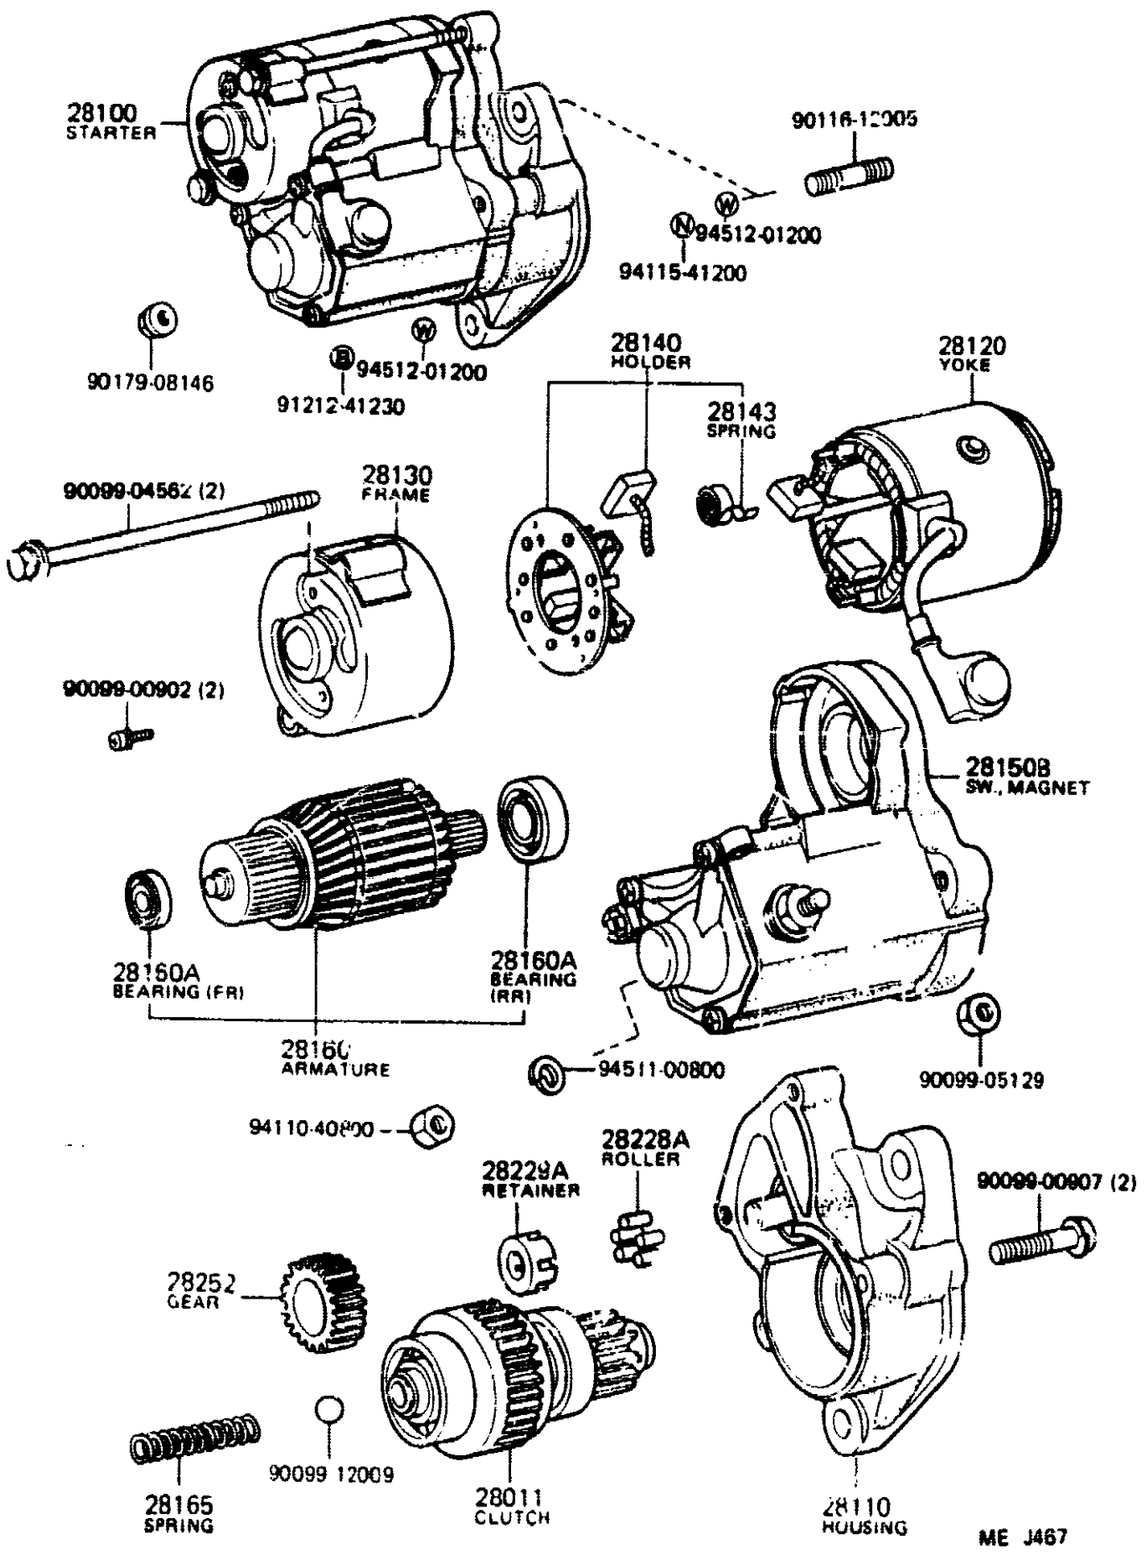

PROD.DATE	MODELS	DESCRIPTION	P/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	28011	CLUTCH SUB-ASSY, STARTER					
8708-9001	3FE..FJ62			28011-26042-	1		
	28100	STARTER ASSY					
8708-9001	3FE..FJ62	12V 1.0KW		28100-60070-	1		
	28110	HOUSING ASSY, STARTER DRIVE					
8708-9001	3FE..FJ62			28110-60070-	1		
	28120	YOKE ASSY, STARTER					
8708-9001	3FE..FJ62			28120-26071-	1		
	28130	FRAME ASSY, STARTER COMMUTATOR END					
8708-9001	3FE..FJ62			28130-34060-	1		
	28140	HOLDER ASSY, STARTER BRUSH					
8708-9001	3FE..FJ62			28140-26070-	1		
	28143	SPRING, STARTER BRUSH					
8708-9001	3FE..FJ62			90099-17112-	4		
	28150B	SWITCH ASSY,MAGNETIC					
8708-9001	3FE..FJ62			28150-34080-	1		
	28160	ARMATURE ASSY, STARTER					
8708-9001	3FE..FJ62			# 28160-26070- (28160-26071-)	1 1		
	28160A	BEARING, STARTER ARMATURE					
8708-9001	3FE..FJ62	FRONT		28253-45020-	1		
8708-9001	3FE..FJ62	REAR		90099-10113-	1		

	PART NUMBER	LOCATION
P	81521-90A13-	3C8
P	81550-90A11-	3F8
P	81551-90A00-	3F8
P	81552-90A00-	3F8
P	81554-90A12-	3F8
P	81557-90A00-	3F8
P		3G8
P	81558-90A00-	3F8
P		3G8
P	81560-90A11-	3F8
P	81561-90A00-	3F8
P	81562-90A00-	3F8
P	81564-90A12-	3F8
P	81610-90A03-	3D8
P	81611-90A00-	3D8
P	81612-90A00-	3D8
P	81615-90A03-	3D8
P	81620-90A03-	3D8
P	81621-90A00-	3D8
P	81730-14110-	3E8
A	-90A05-	3E8
P	81731-14110-	3E8
P	81740-14110-	3E8
A	-90A05-	3E8
P	81741-14110-	3E8
P	81750-91255-	3I8
P	81751-14030-	3I8
P	81754-91255-	3I8
P	81755-20060-	3I8
	81850-90A14-	3E9
	-90A15-	3E9
	-90A25-	3E9
	-90A31-	3E9
	-90A35-	3E9
	81930-90A10-	3E9
	-90A15-	3E9
	81980-16010-	3H9
	82121-90A03-	3M8
	-90A04-	3M8
	82122-90A01-	3K8
	82124-90A01-	3M8
	82125-90A09-	3M8
	82131-90G89-	3M8
	-90G98-	3M8
	82132-90A15-	3M8
	82141-90A20-	3M8
	-90A21-	3M8
	82151-90A05-	3A9
		3M8
	-90A08-	3M8
	-90A10-	3A9
	-90A13-	3A9
	82152-90A05-	3A9
	-90A06-	3A9
	82153-90A01-	3A9
	82154-90A03-	3A9
	82155-90A02-	3A9
	82161-90A40-	3A9
	82162-90A38-	3A9
	82163-90A21-	3A9
	82164-90A03-	3A9
	82166-90A00-	3A9
	82171-90A10-	3A9
	82173-90A00-	3A9

	PART NUMBER	LOCATION
	82181-90A00-	3A9
	82182-90A02-	3A9
	82183-90A01-	3A9
	82184-90A03-	3A9
	82185-90A05-	3A9
	82187-90A00-	3A9
	82282-90A04-	3B9
	-90A05-	3B9
	82291-90A02-	3B9
	82345-12050-	3B9
	-32020-	3B9
	82616-12010-	3H9
	82650-12020-	3H9
	-20011-	3H9
	82670-90K00-	3B9
	82683-90A20-	3H9
	-90A21-	3H9
	82821-12150-	3B9
	83101-14040-	3D9
	-20040-	3D9
	83110-90A46-	3D9
	-90A47-	3D9
	83132-90A04-	3D9
	83134-90A06-	3D9
	83138-90A00-	3D9
	83145-90A01-	3D9
	-90A02-	3D9
	83243-90A03-	3D9
	83244-90A02-	3D9
	83245-90A03-	3D9
	83246-90A05-	3D9
	83247-90A05-	3D9
	83270-90A10-	3D9
	-90A15-	3D9
	83320-69015-	3H9
	83361-20030-	3I9
	83420-20020-	3I9
	83520-60010-	3I9
	83710-90A06-	3D9
	-90A13-	3D9
B	-90A20-	3D9
	83910-90A11-	3D9
	84112-69295-	3I9
	84118-90A00-	3I9
	84119-90A01-	3I9
	84140-35080-	3I9
	84222-60021-	3I9
	-60030-	3I9
	-60040-	3I9
	-60071-	3I9
	84230-22051-	3I9
	84231-28010-	3I9
	84242-90A00-	3I9
	84310-60700-	3I9
	84312-20011-	3I9
	84332-69055-	3I9
	84340-22072-	3I9
	84380-20010-	3I9
	84450-60150-	3I9
	84460-22010-	2E8
	84540-60020-	3I9
	84652-69345-	3I9
	84653-32020-	3J9


	PART NUMBER	LOCATION
	84722-60070-	3J9
P	84730-90A00-	3J9
N	-90A02-	3J9
	84732-90A00-	3J9
	84760-90A01-	3J9
	84790-90A09-	3J9
P	84810-90A02-03	3J9
P	-90A02-06	3J9
P	-90A03-03	3J9
P	-90A03-06	3J9
P	84820-90A08-03	3J9
P	-90A08-06	3J9
	84870-14060-	3J9
	-22040-	3J9
	-90A00-	3J9
	84956-60030-	3J9
	85010-90A00-	3C10
P	85031-30020-	3G10
	85035-90A02-	3F10
P	-90A03-	3G10
	85120-90A35-	3A10
	85160-90A07-	3A10
A	85164-90A02-	3A10
A	85165-90A01-	3A10
	85174-12320-	3C10
	85178-12320-	3C10
	-90A00-	3A10
	85190-90A02-	3A10
	-90A06-	3C10
	85192-14010-	3A10
	85195-95700-	3C10
	85210-90A01-	3A10
	85220-16270-	3A10
	-16340-	3A10
	-90A02-	3C10
	85221-30100-	3A10
	-90A02-	3C10
	85247-90A01-	3B10
P	85271-90A00-	3G10
P	-90A01-	3G10
P	-90A02-	3G10
	85276-14010-	3G10
	85310-14080-	3D10
	-22070-	3G10
	-22080-	3F10
	85330-90A04-	3G10
	-90A07-	3D10
	-90A08-	3F10
	85332-20050-	3F10
	-90A00-	3G10
	-90A01-	3D10
	85333-20020-	3D10
	-60010-	3D10
	85336-10010-	3G10
	85338-22020-	1L2
	85341-90A05-	3D10
	-90A06-	3D10
	85348-29910-	3D10
	85349-89122-	3F10
P	85352-12010-	3G10
	85355-14481-	3F10
	-20200-	3F10
	85361-10070-	3H10
	85440-60120-	3J9

	PART NUMBER	LOCATION
	85450-90A04-	3I10
	-90A06-	3I10
	85460-90A02-	3I10
	85470-90A02-	3I10
	85480-90A02-	3I10
	85500-90A07-	3J9
	85520-14030-	3J9
	85710-90A00-	3I10
	-90A01-	3I10
	85720-90A00-	3I10
	-90A01-	3I10
	85910-14020-	3L9
	85913-30020-	3J9
	85915-60010-	3L9
	85927-60040-	3K9
	85930-90A00-	3K9
	85940-90A09-	3K9
	-90A10-	3K9
	85991-29920-	3K9
	85999-12050-	3K9
	-89101-	3K9
	86120-20680-	3K10
	-32130-	3K10
	-32211-	3K10
	-32340-	3K10
	-32370-	3K10
	-32390-	3K10
	-90A18-	3K10
	86128-17150-	3K10
B	-17190-	3K10
	-20020-	3K10
	-20040-	3K10
A	-22690-	3K10
A	-22710-	3K10
S	-28140-	3K10
S	-28160-	3K10
	-32190-	3K10
B	-32210-	3K10
	86151-90K01-	3M10
	86160-90A05-	3M10
	-90A06-	3M10
	-90K02-	3M10
	86209-90A00-	3M10
	86211-90A06-	3K10
	86212-90A03-	3K10
	86260-12180-	3K10
	-20170-	3K10
	-30250-	3K10
	86269-90K00-	3M10
	-90K01-	3M10
	86300-90A17-	3A11
	-90A25-	3A11
	86510-22120-	3B11
	86520-22120-	3B11
	86995-90A02-	3E9
	87104-90A00-	3F11
	-90K03-	3F11
	87105-14020-	3F11
	-87002-	3F11
	87107-90A04-	3F11
S	-90A06-	3F11
	87110-90A02-	3F11
	87126-16010-	3F11
	-90A01-	3F11

	PART NUMBER	LOCATION
	87130-90A01-	3F11
	87138-22030-	3F11
	-90K02-	3F11
	87150-90A14-	3F11
	87201-90A02-	3J11
	-90A04-	3J11
	87208-90A15-	3L11
	-90K06-	3L11
	87211-90A01-	3J11
	87212-90A00-	3F11
	87240-90A00-	3L11
	-90A02-	3F11
	87245-90A00-	3L11
	-90A27-	3L11
	-90A28-	3L11
	-90A29-	3L11
	-90A30-	3L11
	-90A40-	3L11
	-90A41-	3L11
	-90A50-	3L11
	-90K36-	3L11
	-90K53-	3L11
	87248-90A01-	3F11
	-90A03-	3F11
	-90A22-	3L11
	-90A24-	3L11
	-90A25-	3L11
	87286-90A01-	3J11
P	87810-90A03-	3C11
P	87828-90A00-	3C11
P	-90A01-	3C11
P	87834-14011-28	3C11
P	87910-90A18-	3C11
P	-90A19-	3C11
N	-90A20-	3C11
P	87911-90A05-	3C11
P		3D11
P	87940-90A09-	3D11
P	-90A11-	3C11
N	-90A15-	3D11
	88320-60151-	3B12
B	-60280-	3B12
	88321-14011-	3B12
B	-14021-	3B12
	88322-14011-	3B12
B	-14020-	3B12
	88335-12030-	3C12
	-12050-	3B12
B	-14010-	3C12
B	-14020-	3C12
	88341-14010-	3B12
B	-14020-	3B12
	88342-14010-	3B12
B	-14020-	3B12
	88343-14011-	3C12
B	-14020-	3C12
	88344-14011-	3C12
B	-14020-	3C12
B	88356-12010-	3C12
B	88360-14030-	3C12
	-40010-	3C12
	88371-60121-	3C12
N	60170-	3C12
P	88374-12020-	3C12

	PART NUMBER	LOCATION
P	88375-20010-	3C12
P	-30270-	3C12
P	88376-22010-	3C12
P	-22020-	3C12
	88403-12030-	3C12
B	-16011-	3C12
	88410-22080-	3C12
B	-60120-	3C12
	88411-14050-	3B12
B	-60020-	3B12
	88412-22030-	3B12
B	-28030-	3B12
	88431-60040-	3C12
	-60100-	3C12
	88440-35010-	3C12
	88460-90A14-	3M11
	88469-22010-	3M11
	88470-14010-	3M11
	88472-90A01-	3M11
	88482-90A00-	3G11
P	88501-90A07-	3G11
P	88510-90A04-	3G11
N	-90A25-	3C11
	88515-87004-	3G11
P	88539-90A00-	3G11
	88578-90A02-	3M11
P	88605-90A09-	3G11
	88610-90A07-	3G11
P	88626-90A01-	3G11
N	-90A02-	3H11
	88630-14010-	3J9
		3K9
	88645-30250-	3M11
	88648-90A00-	3M11
	88650-90A03-	3M11
	88711-90A09-	3M11
	88712-90A09-	3M11
	88716-90A27-	3M11
	-90A43-	3M11
	88721-90A07-	3M11
	-90A08-	3M11
	88723-12010-	3M11
	89412-12010-	3K9
	89422-20010-	3L9
	-30020-	3L9
	89423-60020-	3K9
	89428-14070-	3L9
	-36010-	3K9
	89437-60010-	3K9
B	89452-14050-	3L9
P	-28030-	3L9
	89462-20010-	3L9
	-20040-	3L9
	89465-69015-	3K9
A	89466-20020-	3K9
A	-30010-	3K9
	89530-60020-	3K9
	89620-14410-	3K9
	89661-60010-	3L9
	-60011-	3L9
	-60020-	3L9
	-60021-	3L9
	89667-60010-	3M9
	89668-60010-	3M9

POWER TRAIN·CHASSIS GROUP (2/2)

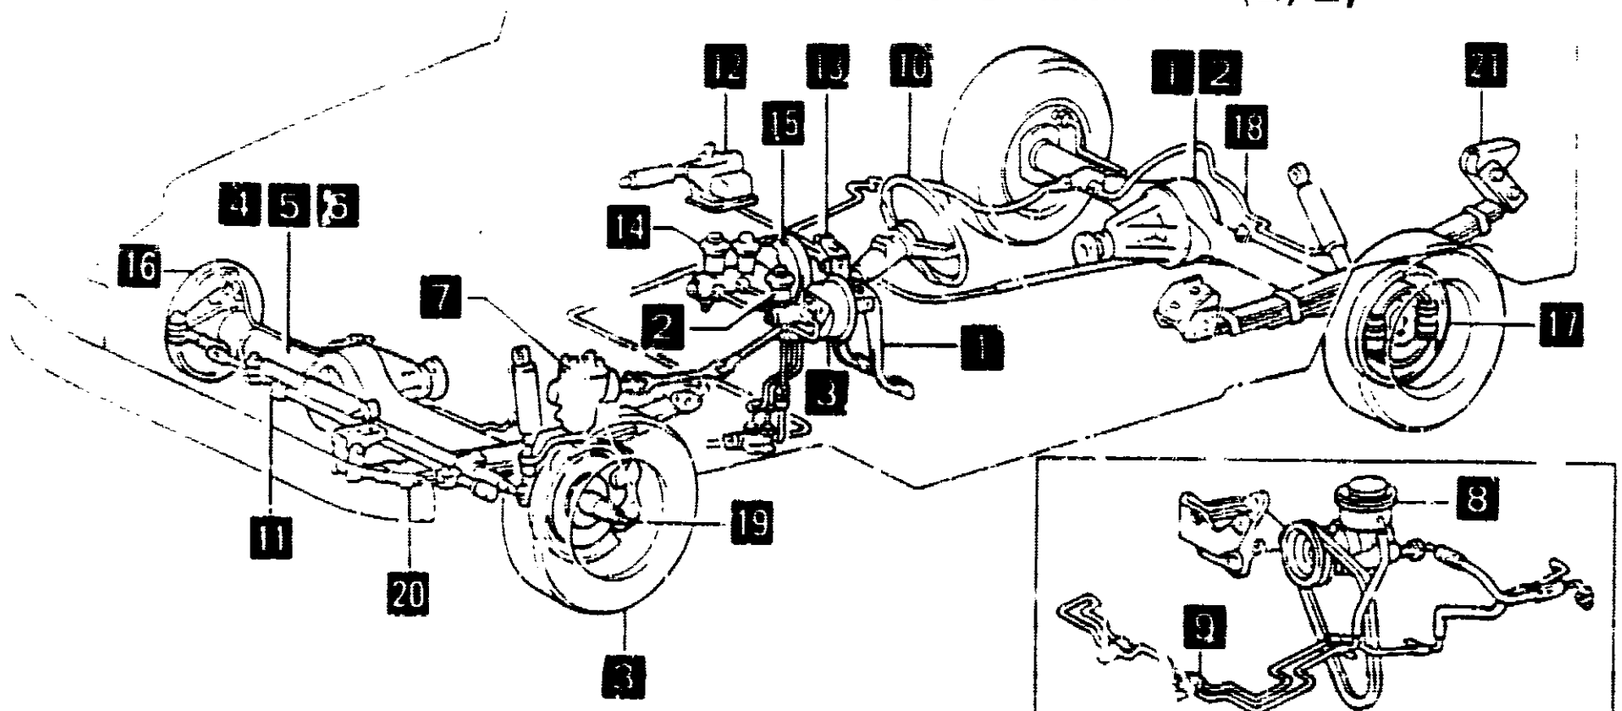

1 2H4 (41-01) — Rear Axle Housing

2 2H5 (41-02) — Rear Axle Shaft & Hub

3 2K5 (41-03) — Disc Wheel & Cap

4 2C6 (43-01) — Front Axle Housing

5 2J6 (43-02) — Drive Shaft

6 2K6 (43-03) — Front Axle Hub

7 2H6 (45-01) — Steering Column & Shaft

8 2D7 (45-02) — Vane Pump & Reservoir

9 2G7 (43-03) — Oil Cooler & Tube

10 2H7 (45-04) — Steering Wheel

11 2I7 (45-05) — Steering Gear & Link

12 2A8 (46-01) — Parking Brake & Cable

13 2C8 (47-01) — Brake Pedal & Bracket

14 2D8 (47-02) — Brake Master Cylinder

15 2F8 (47-03) — Brake [illegible]

16 2H8 (47-05) — Front Disc Brake Caliper

17 2J8 (47-06) — Rear Backing Plate


18 2M8 (47-08) — Rear Disc Brake Caliper

19 2E9 (48-02) — Front Axle Arm

20 2G9 (48-03) — [illegible]

21 2K9 (48-04) — Rear Spring


(8708-)

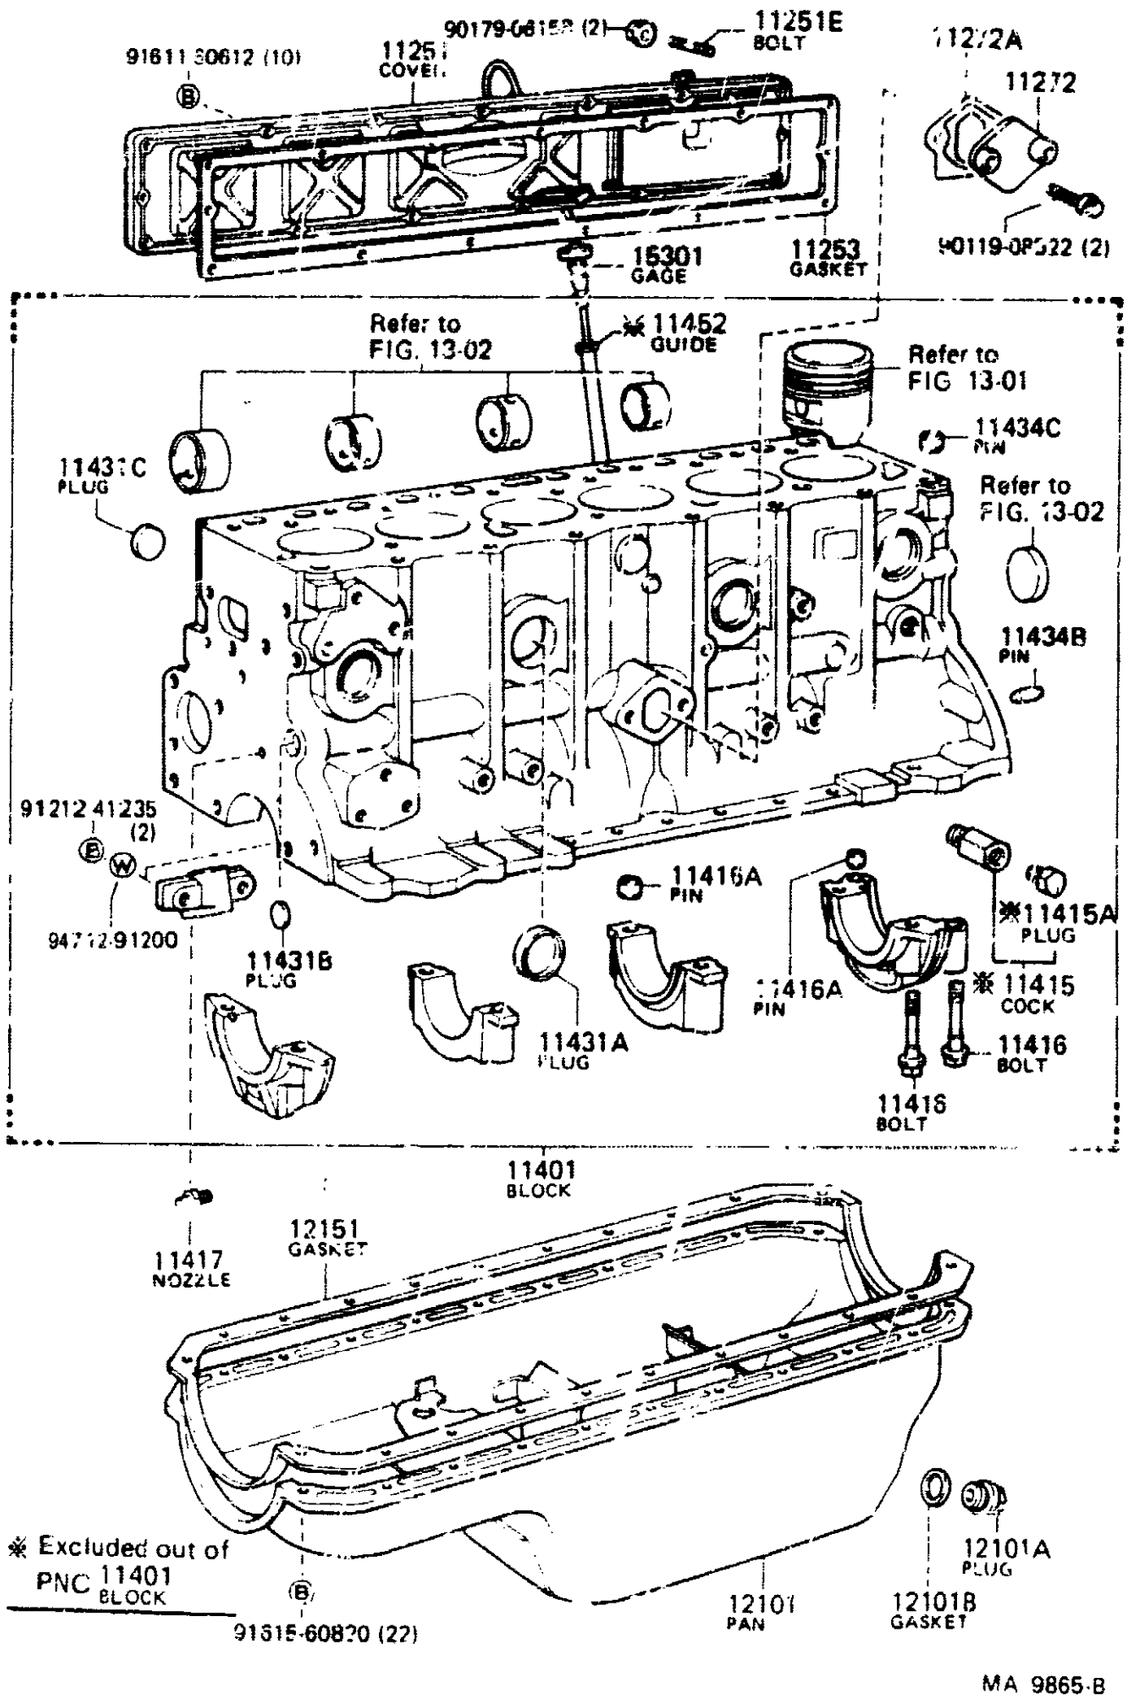

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	11251	COVER, VALVE PUSH ROD					
8708-9001	3FE..FJ62			11251-61020-	1		
	11251E	BOLT, STUD (FOR VALVE PUSH ROD COVER)					
8708-9001	3FE..FJ62			90116-06022-	2		
	11253	GASKET, VALVE PUSH ROD COVER					
8708-9001	3FE..FJ62			11253-61010-	1		
	11272	COVER, CYLINDER BLOCK SIDE, NO.2					
8708-9001	3FE..FJ62			11495-61010-	1		
	11272A	GASKET, CYLINDER BLOCK SIDE COVER, NO.2					
8708-9001	3FE..FJ62			90923-05011-	1		
	11401	BLOCK SUB-ASSY, CYLINDER					
8911-9001	3FE..FJ62		B	11401-69306-	1		
	11415	COCK SUB-ASSY, WATER DRAIN (FOR CYLINDER BLOCK)					
8708-9001	3FE..FJ62			96431-53828-	1		
	11415A	PLUG, WATER DRAIN COCK (FOR CYLINDER BLOCK)					
8708-9001	3FE..FJ62			96432-23814-	1		
	11416	BOLT (FOR CRANKSHAFT BEARING CAP SET)					
8708-9001	3FE..FJ62	NO.1,2,3, *18-2PX65 -2		90105-14033-	6		
8708-9001	3FE..FJ62	NO.4, *12-1.75PX68-26		90910-02057-	4		
	11416A	PIN, RING (FOR CRANKSHAFT BEARING CAP SET)					
8708-9001	3FE..FJ62	L=10, OD=15.5, NO.4		90253-16014-	2		

*: - P(- =Outside diameter - Pitch × Bolt length - Thread length


(8708-)

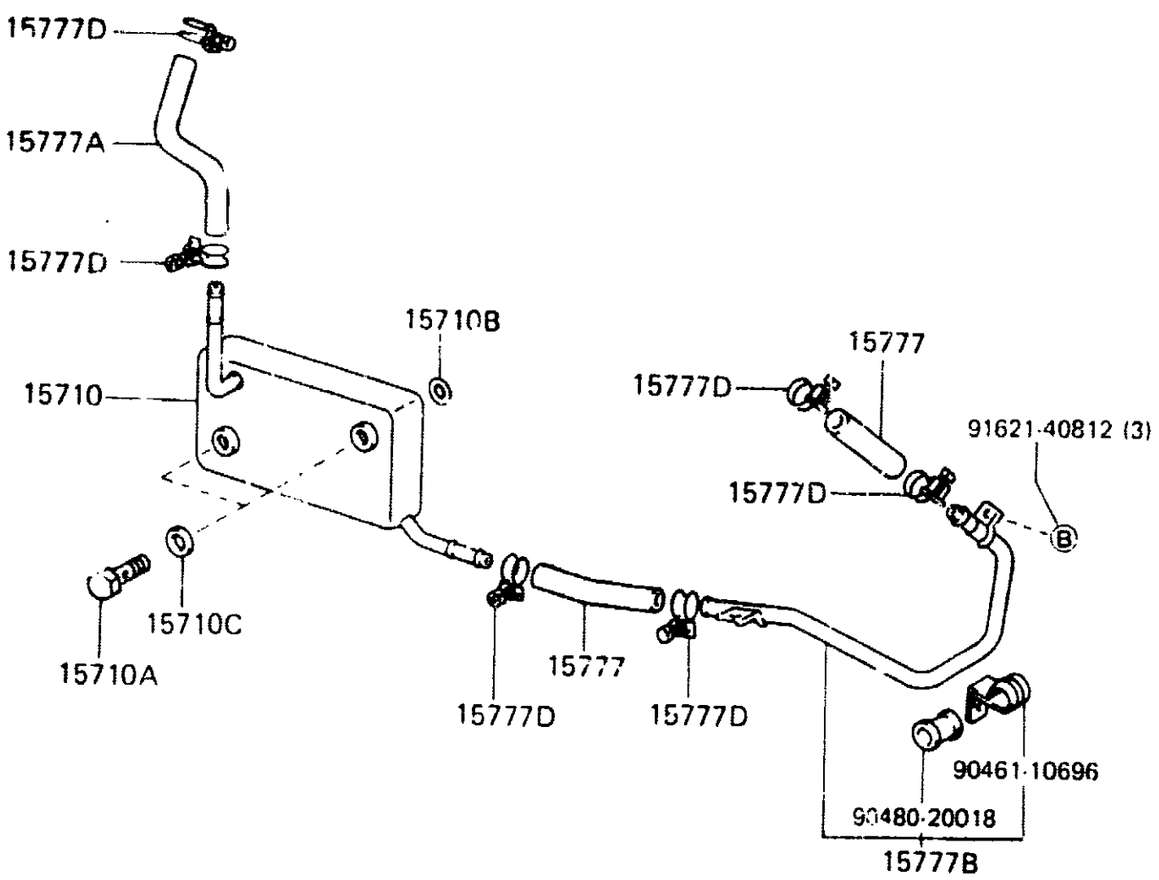

MA 9870

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	15710	COOLER ASSY, OIL					
8708-9001	3FE..FJ62			1571C-61010-	1		
	15710A	BOLT, UNION (FOR OIL COOLER)					
8708-9001	3FE..FJ62			90401-18083-	2		
	15710B	RING, O					
8708-9001	3FE..FJ62			90301-21176-	2		
	15710C	GASKET					
8708-9001	3FE..FJ62			90430-18012-	2		
	15777	HOSE, OIL COOLER					
8708-9001	3FE..FJ62	PIPE TO WATER PUMP	B	99556-30210-	1		
8708-9001	3FE..FJ62	PIPE TO OIL COOLER	B	⸗	1		
	15777A	HOSE, OIL COOLER					
8708-9001	3FE..FJ62			15777-61030-	1		
	15777B	PIPE, OIL COOLER					
8708-9001	3FE..FJ62			15770-61010-	1		
	15777D	CLAMP OR CLIP, HOSE (FOR OIL COOLER HOSE)					
8708-9001	3FE..FJ62			96112-10250-	6		

(8708-)

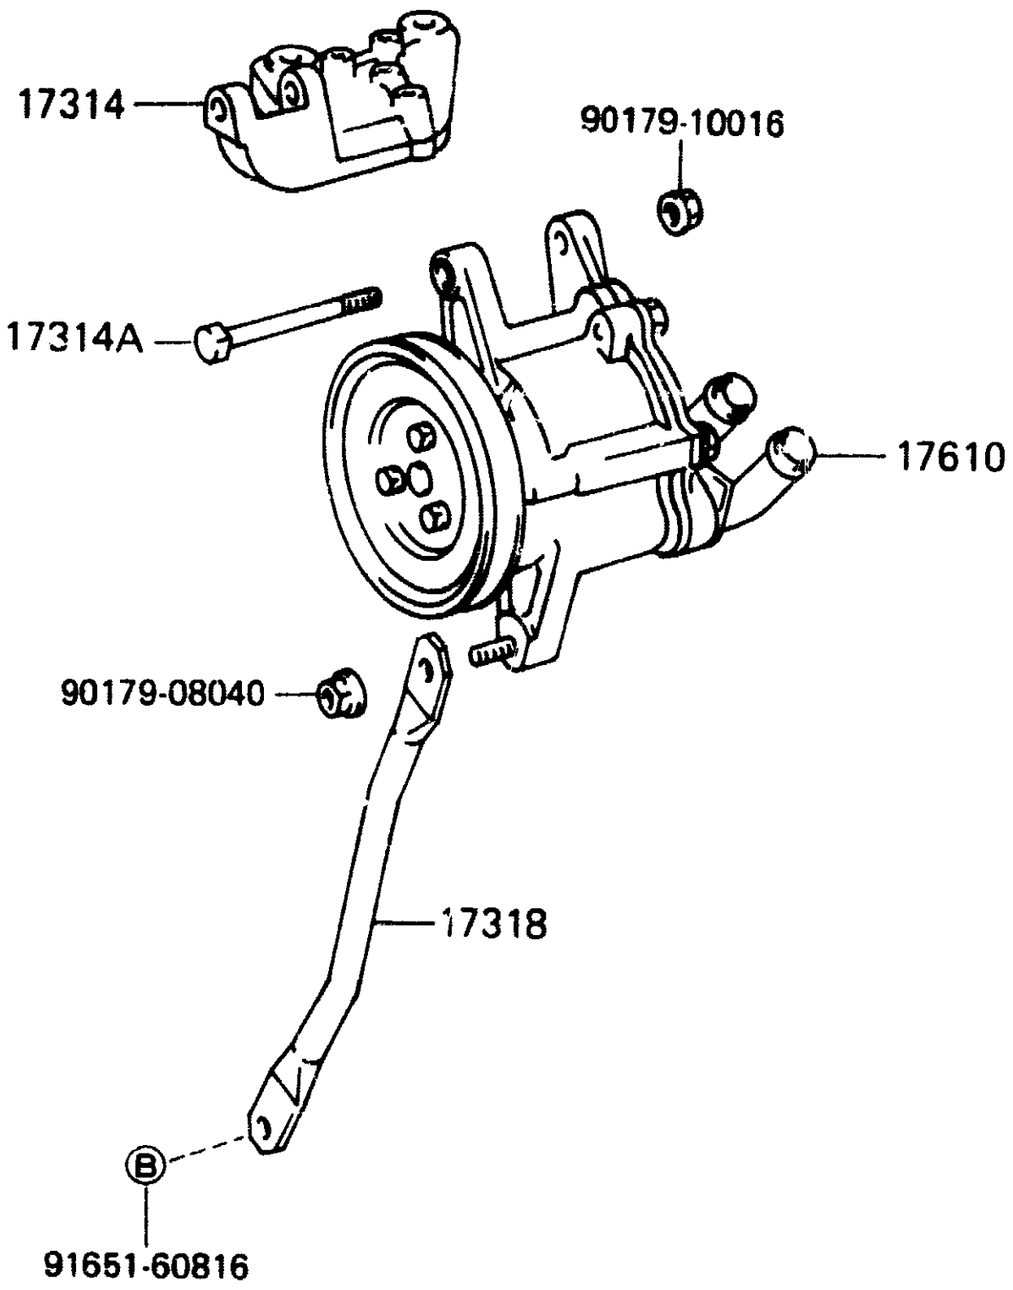

MA 9885-A


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	17314	BRACKET, AIR PUMP					
8708-9001	3FE..FJ62			17314-61040-	1		
	17314A	BOLT, HEXAGON (FOR AIR PUMP BRACKET SETTING)					
8708-9001	3FE..FJ62			90105-10221-	1		
	17318	BAR, AIR PUMP ADJUSTING #0.2					
8708-9001	3FE..FJ62			17318-61060-	1		
	17610	PUMP ASSY, AIR					
8708-9001	3FE..FJ62			17610-61040-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	28165	SPRING, STARTER MAGNET SWITCH RETURN					
8708-9001	3FE..FJ62			28165-26040-	1		
	28228A	ROLLER, STARTER CLUTCH					
8708-9001	3FE..FJ62			28228-26040-	5		
	28229A	RETAINER					
8708-9001	3FE..FJ62			28229-26040-	1		
	28252	GEAR, STARTER IDLE					
8708-9001	3FE..FJ62			28254-45020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T


	PART NUMBER	LOCATION
	89669-60010-	3M9
P	90096-90022-	3C12
	90099-01458-	3C10
	-05141-	3C10
	-07048-	1E4
	-10110-	1E4
	-10113-	1G4
	-10116-	1E4
	-10133-	3B12
	-14020-	1D4
	-17112-	1G4
	-32103-	3D10
	-33332-	3D10
		3E10
	-52065-	1E4
	90101-10439-	2I8
	-12021-	2J8
	-12060-	2H8
	90105-06052-	2F5
		2G6
	-06069-	2I2
	-08114-	2E5
		2G6
	-10096-	2E2
		2K1
P	-10115-	2E1
	-10221-	1H3
	-11013-	2K4
B	-11030-	2E1
	-12018-	3J7
	-12053-	2C5
		2E6
	-13005-	1F1
	-14033-	1H1
	90106-12022-	2E9
	90109-06028-	2D8
	-10091-	2D5
	90113-05034-	2A1
	-10003-	2I5
	90114-11124-	2A4
	90116-06022-	1H1
	-08325-	2I5
		2K6
P	-10074-	2B5
P		2E6
	-10075-	2B5
		2E6
	-10076-	2B5
B	-10087-	1C3
	-10122-	2E6
	-10124-	2B5
	-12007-	2E9
	-12011-	1C3
	90117-14032-	2L9
	-14036-	2I9
	-14051-	2I9
	-14180-	2L9
	90119-08497-	2E1
	-08523-	2E1
	90170-08005-	1D2
	-10198-	1A2
B	-22058-	2L7
	90171-00042-	2L7
	90175-08008-	1F3
	90176-08014-	1G1
	90179-06158-	3C10
	-08026-	3A10
	-10070-	1E3
	-12086-	2H7
	-22005-	2A4
	-22010-	1B2
	-22011-	2C5
		2H6
	-26004-	2G2
	90201-06566-	2B3
P	-12042-	2J3
	-16012-	2J3
	-16013-	2H1
	-22005-	2A4
	-22007-	2C5
		2H6
	-30003-	2J7
	-35002-	2E4
	-40551-	2C5
		2H6
	-40552-	2C5
		2H6
	-40553-	2C5
		2H6
	-40554-	2C5
		2I6
	-40555-	2C5
		2I6
	-40556-	2C5
		2I6
	-40557-	2C5
		2I6
	-40558-	2C5
		2I6
	-40559-	2C5
		2I6
	-40560-	2C5
		2I6
	-40561-	2C5
		2I6
	-79001-	2D5
		2F6
	-79002-	2D5
		2F6
	-79003-	2D5
		2F6
	-79004-	2D5
		2F6
	-79005-	2D5
		2F6
	-79006-	2D5
		2F6
	-79007-	2D5
		2F6
	-79008-	2D5
		2F6
	-79009-	2D5
		2F6
	-79010-	2D5
		2F6
	-79011-	2D5
		2F6
	-79012-	2D5
	90201-79012-	2F6
	-79013-	2D5
		2F6
	-79014-	2D5
		2F6
	-79015-	2D5
		2F6
	-79016-	2D5
		2F6
	-79017-	2D5
		2F6
	-79018-	2D5
		2F6
	-79019-	2D5
		2F6
	-79020-	2D5
		2F6
	-79021-	2D5
		2F6
	-79022-	2D5
		2F6
	-79023-	2D5
		2F6
	90202-10103-	2C9
P	90206-12001-	2J3
	90209-52001-	2E2
	-52002-	2E2
	-52003-	2E2
	-52004-	2E2
	90210-10001-	2L7
	-13001-	1G1
	90213-16013-	2K8
	-17010-	2K8
	90214-42030-	2L6
	90215-42020-	2L6
	90240-06158-	2I5
	-08042-	2B8
	-08128-	2G4
	-09001-	2B6
	-10148-	2A6
	-10157-	2G4
	90241-10017-	1A2
	90249-08068-	2K8
	-10017-	2C8
	90250-02016-	2D3
		2F3
	-03036-	2D3
	-03050-	2E3
	-03051-	2A3
B		2C3
		2E3
		2M2
	-04054-	2A3
	-05008-	2E7
A	-07057-	2I5
		2K6
	-08024-	2H4
	-08120-	1F1
	-10006-	2B4
	-10192-	1I1
		2G1
	90253-16014-	1H1
	-17003-	1I1
	-18003-	1I1
	90254-04012-	2J3
	-05016-	2F4
	90256-04001-	2B1
B	90280-03009-	1E2
B		
	-05008-	2E7
P	-05010-	1B2
P		1C2
	90281-07004-	1B2
	90282-03005-	2F3
B	-03006-	2D3
		2E3
		2F3
		2G3
	-03007-	2D3
		2G3
	90301-06005-	2H1
P	-06196-	2H1
	-07001-	1K4
		1L4
	-09008-	2E2
		2K1
	-09173-	2I1
	-11006-	2K3
	-14001-	2E8
	-18004-	2J1
	-19006-	1K4
	-21176-	1H2
	-22001-	2E7
	-22003-	2C3
	-24002-	2C3
	-26003-	2M2
	-28003-	2C3
	-29003-	2B3
		2M2
	-32002-	2J7
	-33002-	2K7
	-33006-	2C3
	-34004-	2D4
	-34005-	2D4
	-37004-	2B3
	-51001-	2K7
	-53002-	2F7
	-59003-	2K1
	-60001-	2D7
	-60122-	2A7
	-62004-	2A2
	-64002-	2K7
	-64005-	2K7
	-65145-	2K7
	-94002-	2F2
	-99027-	2A2
		2K1
	-99028-	2A2
	-99029-	2F1
	-99030-	2D2
		2F2
		2L1
	-99031-	2D2
		2L1
	90310-09001-	2J1
	-35001-	2I5
	90311-12002-	2J3
	-13066-	2H4
	-19002-	2K7
	90311-24001-	2D7
	-33085-	2H6
B	-38035-	2C5
B		2E6
P	-38134-	2C5
P		2E6
	-42010-	2F1
	-45008-	1J1
	-47001-	2I5
B	-48009-	2B4
	-48010-	2B4
	-62001-	2J5
		2K6
	-99005-	1B2
	90312-32002-	2K7
	90313-13001-	2F4
P	-93001-	2I5
B	-93011-	2F9
	90316-48003-	2A4
	90331-48010-	1C2
	90334-07009-	1F1
	90339-04009-	2D3
	-04010-	2F3
B	-04011-	2E3
B	-04012-	2F3
	-04014-	2A1
	-04015-	2D3
P	-04016-	2G3
P	-04017-	2D3
		2E3
		2F3
		2G3
	-04019-	2E3
B	-04021-	2F3
B	-05008-	2D3
	-05009-	2G3
	-06004-	2D3
	-06008-	2G3
	-06009-	2D3
	90340-14001-	1F1
	-25001-	2M7
P	90341-08001-	2G1
	-12012-	1I1
P	-15001-	2F4
B	-16010-	2H1
	-18006-	2B4
		2F5
B		2H6
	-18057-	2B4
		2F5
		2H1
B		2H6
	-26001-	2F5
		2G6
	90344-54003-	1I1
	90345-51025-	1C3
	-53020-	2E9
	90360-06004-	2B3
		2C3
	-06021-	2K7
	-09001-	2B3
	-10003-	2E5
		2F4
		2G6
	90363-17004-	2E7
	-18001-	2M6
	-28001-	2M6
	-30007-	2M6
	-35013-	2D4
		2E4
	-35022-	2G2
	-45008-	2G2
	90364-17010-	2E4
	-32003-	2K7
	-38012-	2D4
	-40001-	2D4
	90365-47013-	2I5
	90366-17001-	2F9
P	-30011-	2C5
P		2E6
B	-30038-	2C5
B		2E6
	-35011-	2E4
	-35054-	2E4
	-40004-	2C5
		2E6
B	-40059-	2C5
B		2E6
	-60002-	2D5
		2F6
P	90368-45046-	2D5
P		2H6
	-45087-	2J5
		2L6
	-49084-	2J5
		2K6
B	-50024-	2D5
B		2H6
	90369-22004-	2K7
	90374-25004-	2L1
	-28007-	2L1
	-30003-	2J7
	-34001-	2A2
		2B2
		2H2
		2L1
P	90381-33001-	2E9
B	-33002-	2E9
	90385-10064-	2D9
	-12029-	2A8
	-16008-	2A1
	-19003-	2I9
	-19057-	2A10
	90386-08135-	3M7
	-09009-	2F5
		2G6
	-13014-	2D6
	-13192-	2C8
	90387-06065-	2A1
	-08002-	2B7
B	-08099-	2C9
B		2D9
	-09006-	2J9
	-09011-	2A6
	-10004-	2C8
	90389-02001-	3D9
	-08005-	2B1
	-18002-	2H9


BODY GROUP (1/2)

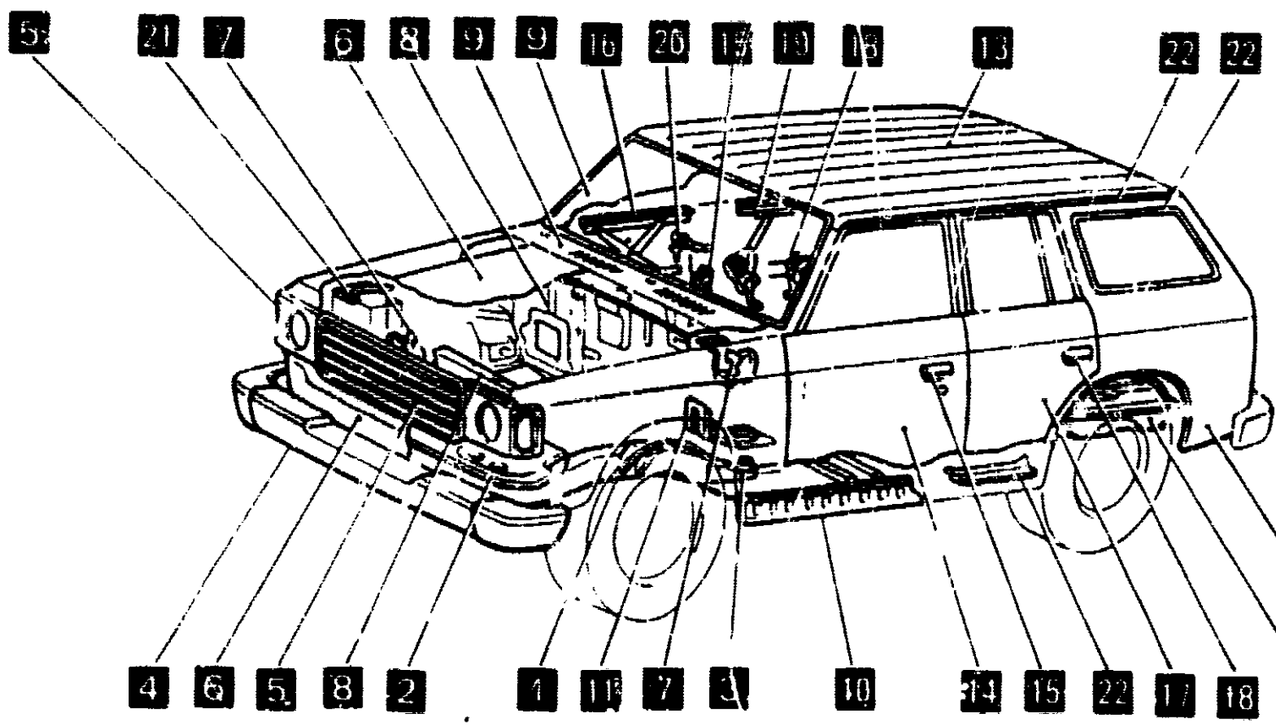



3A1 (51–51) 1


Frame

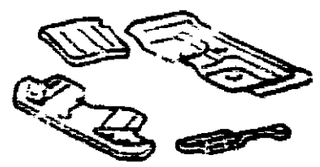
3C1 (51–52) 4

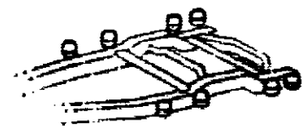Crossmember & Under Cover

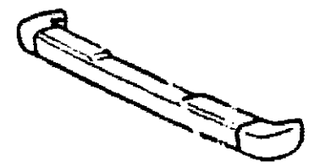
3E1 (52–51) 5

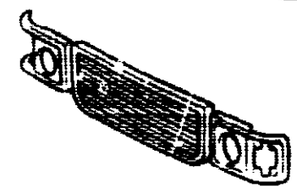Cab & Body Mounting

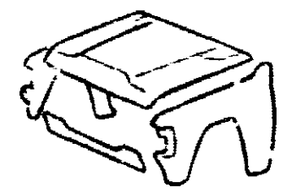
3G1 (52–52) 11

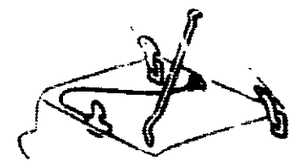Front Bumper & Stay

3I1 (53–51) 9

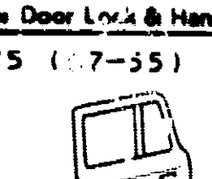Radiator Grille

3J1 (53–53) 25

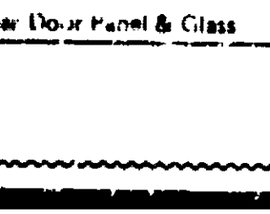Hood & Front Fender


3L1 (53–54) 7

Hood Lock & Hinge


3L6 (74–54) 21

Battery Carrier

3A6 (67–65) 20

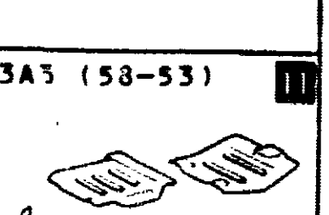Lock Cylinder Set

3H5 (67–57) 19

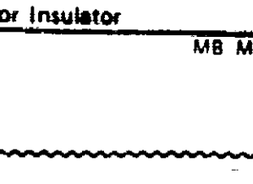
Rear Door Regulator & Hinge


3M1 (53–55) 8

Front Fender Apron

3F2 (55–53) 24

Cowl Panel & Glass

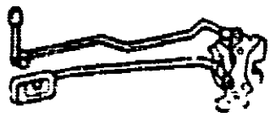3H2 (57–51) 10

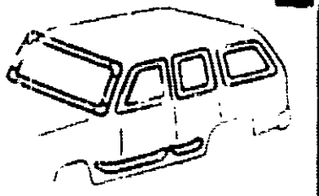
Floor Member


3F5 (67–56) 18

Rear Door Lock & Handle


3D7 (75–52) 22

Moulding

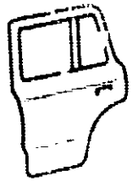3H7 (77–51) 23

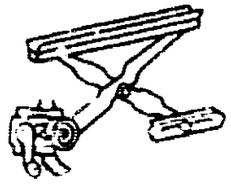Fuel Tank & Tube

3C5 (67–55) 17

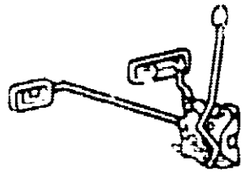Rear Door Panel & Glass

3A5 (67–54) 16

Front Door Regulator & Hinge


3L4 (67–53) 15

Front Door Lock & Handle

3H4 (67–51) 14

Front Door Panel & Glass

3L3 (61–53) 13

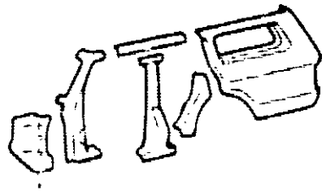Roof Panel & Back Panel

3G3 (61–51) 12

Side Member


3A3 (58–53) 11


Floor Insulator

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	11416A PIN, R'NG (FOR CRANKSHAFT BEARING CAP SET)						
	CONTINUED						
8708-9001	3FE..FJ62	NO.1,2,3		90253-18003-	6		
	11417 NOZZLE, OIL						
8708-9001	3FE..FJ62			90915-01014-	1		
	11431A PLUG, TIGHT, NO.1 (FOR CYLINDER BLOCK)						
8708-9001	3FE..FJ62			96411-45000-	5		
	11431B PLUG, TIGHT, NO.2 (FOR CYLINDER BLOCK)						
8708-9001	3FE..FJ62			90544-54003-	2		
	11431C PLUG, TIGHT, NO.3 (FOR CYLINDER BLOCK)						
8708-9001	3FE..FJ62			96411-42500-	4		
	11434B PIN, STRAIGHT (FOR CLUTCH HOUSING SET)						
8708-9001	3FE..FJ62	L=22,OD=10		90250-10192-	2		
	11434C PIN, STRAIGHT (FOR CYLINDER HEAD SET)						
8708-9001	3FE..FJ62	L=7,OD=16.5		90253-17003-	2		
	11452 GUIDE, OIL LEVEL GAGE						
8708-9001	3FE..FJ62			11452-61010-	1		
	12101 PAN SUB-ASSY, OIL						
8708-9001	3FE..FJ62			12101-61030-	1		
	12101A PLUG (FOR OIL PAN DRAIN)						
8708-9001	3FE..FJ62			90341-12012-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	12101B GASKET (FOR OIL PAN DRAIN PLUG)						
8708-8803	3FE..FJ62			# 90430-12011-	1		
				(90430-12019-)	1		
8803-9001	3FE..FJ62			90430-12019-	1		
	12151 GASKET, OIL PAN						
8708-9001	3FE..FJ62			12151-61011-	1		
	15301 GAGE SUB-ASSY, OIL LEVEL						
8708-9001	3FE..FJ62			15301-60031-	1		

(8708-)

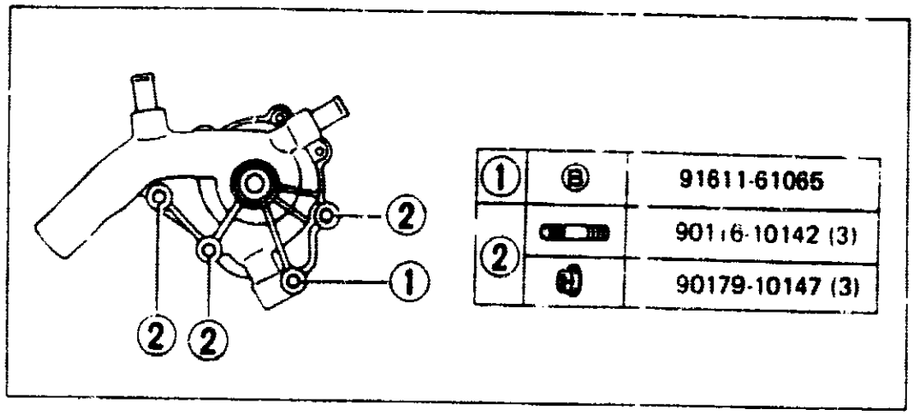


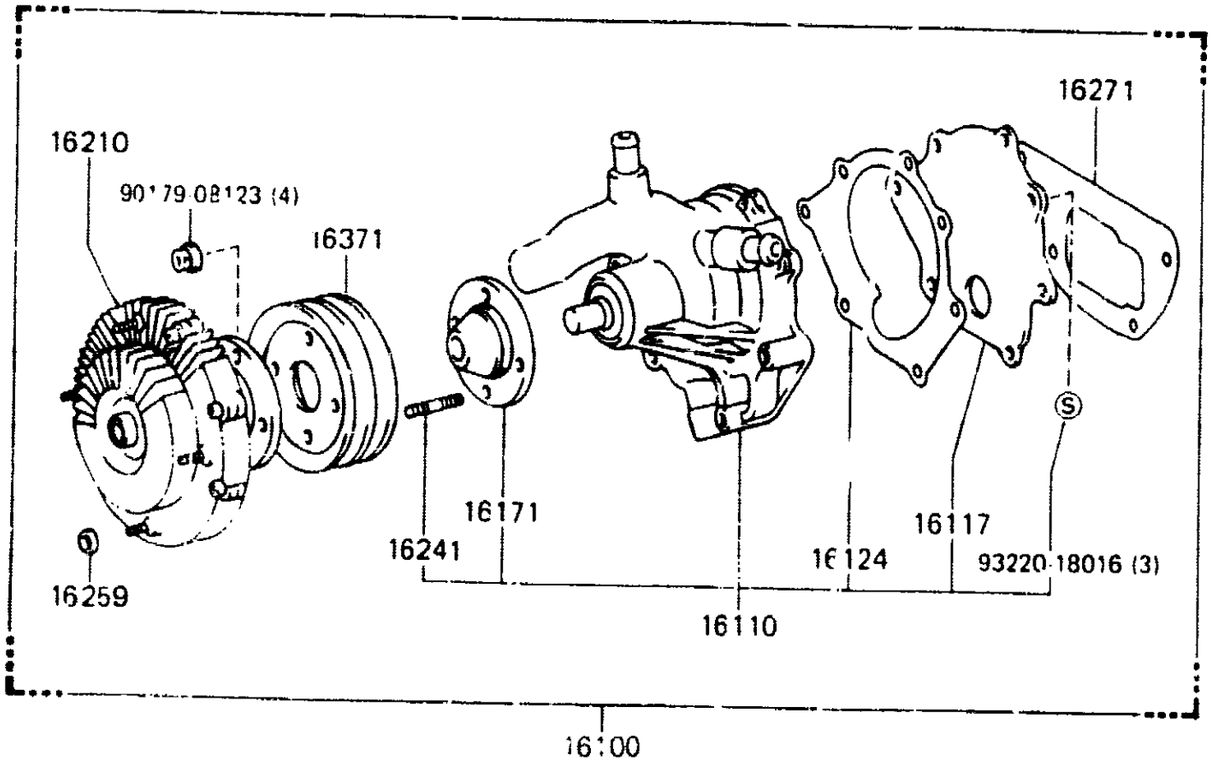

MA 9876-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	16100	PUMP ASSY, WATER					
8708-9001	3FE..FJ62			16100-69195-	1		
	16110	PUMP ASSY, WATER, W/O COUPLING					
8708-9001	3FE..FJ62			16110-61180-	1		
	16117	PLATE, WATER PUMP					
8708-9001	3FE..FJ62			16117-61110-	1		
	16124	GASKET, WATER PUMP COVER					
8708-9001	3FE..FJ62			16124-61110-	1		
	16171	SEAT, WATER PUMP PULLEY					
8708-9001	3FE..FJ62			16171-61071-	1		
	16210	COUPLING ASSY, FLUID					
8708-9001	3FE..FJ62			16210-61140-	1		
	16241	BOLT, STUD (FOR WATER PUMP COUPLING)					
8708-9001	3FE..FJ62			16198-41050-	1		
	16259	GASKET, FAN					
8801-9001	3FE..FJ62			16259-52010-	4		
	16271	GASKET, WATER PUMP					
8708-9001	3FE..FJ62			# 16271-61010- (16271-61020-)	1 1		
	16371	PULLEY, FAN					
8708-9001	3FE..FJ62			16371-61070-	1		

(8708-)

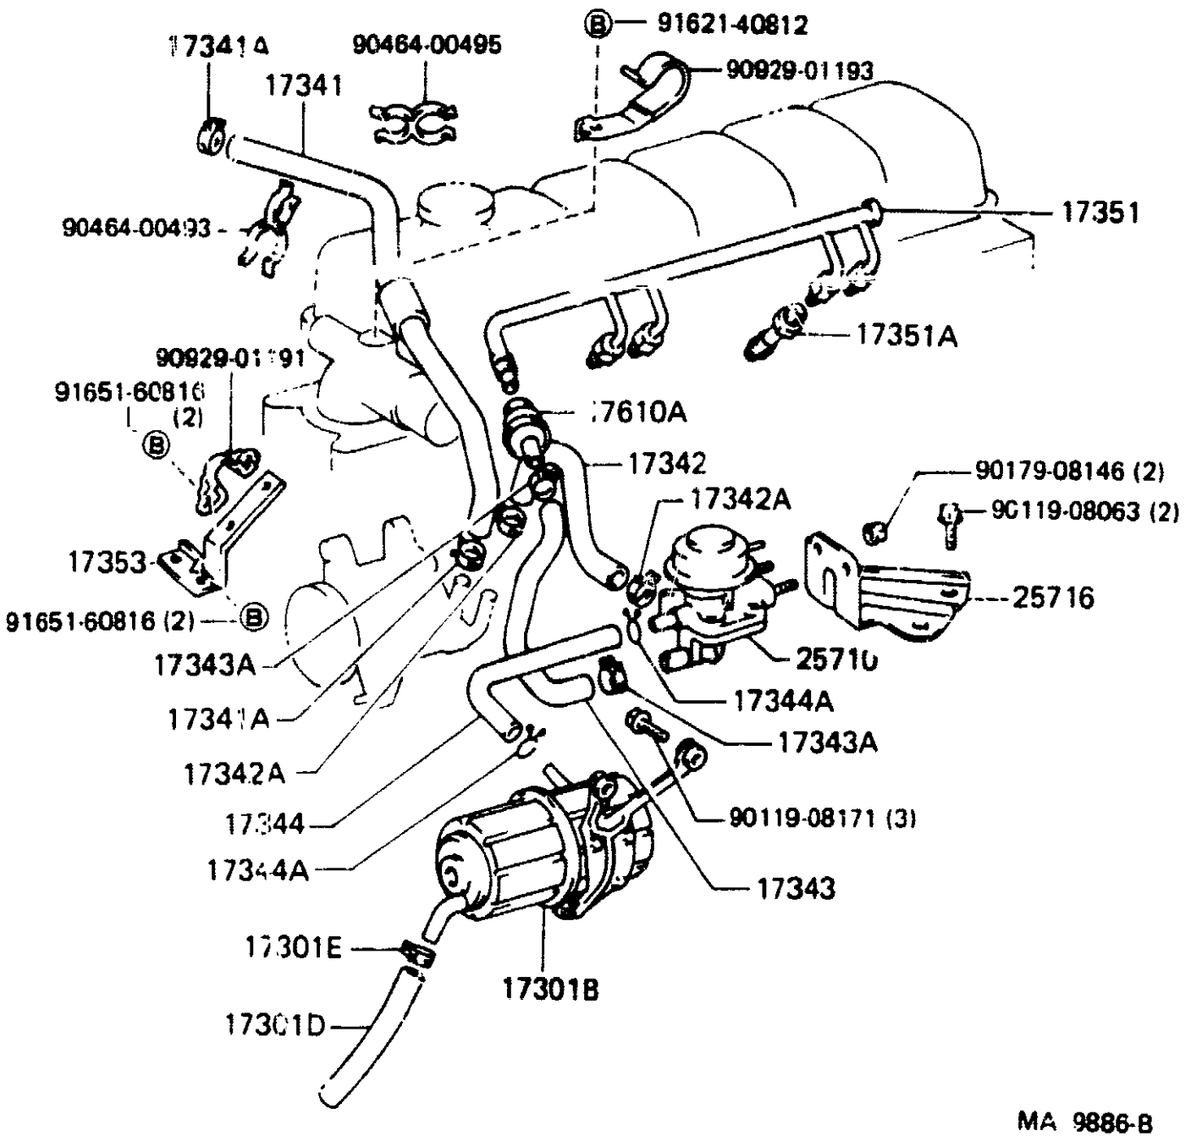


MA 9886-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	17301B	SILENCER SUB-ASSY, AIR SUCTION					
8708-9001	3FE..FJ62			17301-61010-	1		
	17301D	HOSE (FOR AIR SUCTION SILENCER)					
8708-9001	3FE..FJ62			90445-31018-	1		
	17301E	CLIP (FOR AIR SUCTION SILENCER HOSE)					
8708-9001	3FE..FJ62			90467-28003-	1		
	17341	HOSE, NO.1 (FOR AIR INJECTION SYSTEM)					
8708-9001	3FE..FJ62			17341-61030-	1		
	17341A	CLAMP OR CLIP, NO.1 (FOR AIR INJECTION SYSTEM HOSE, NO.1)					
8708-9001	3FE..FJ62			90467-28003-	1		
	17342	HOSE, NO.2 (FOR AIR INJECTION SYSTEM)					
8708-9001	3FE..FJ62			17342-61040-	1		
	17342A	CLAMP OR CLIP, NO.2 (FOR AIR INJECTION SYSTEM HOSE, NO.2)					
8708-9001	3FE..FJ62			90467-28003-	1		
	17343	HOSE, NO.3 (FOR AIR INJECTION SYSTEM)					
8708-9001	3FE..FJ62			17343-61030-	1		
	17343A	CLAMP OR CLIP, NO.3 (FOR AIR INJECTION SYSTEM HOSE, NO.3)					
8708-9001	3FE..FJ62			90467-28003-	1		
	17344	HOSE, NO.4 (FOR AIR INJECTION SYSTEM)					
8708-9001	3FE..FJ62			17344-61020-	1		

(8708·)

ILLUST.NO. 10F2

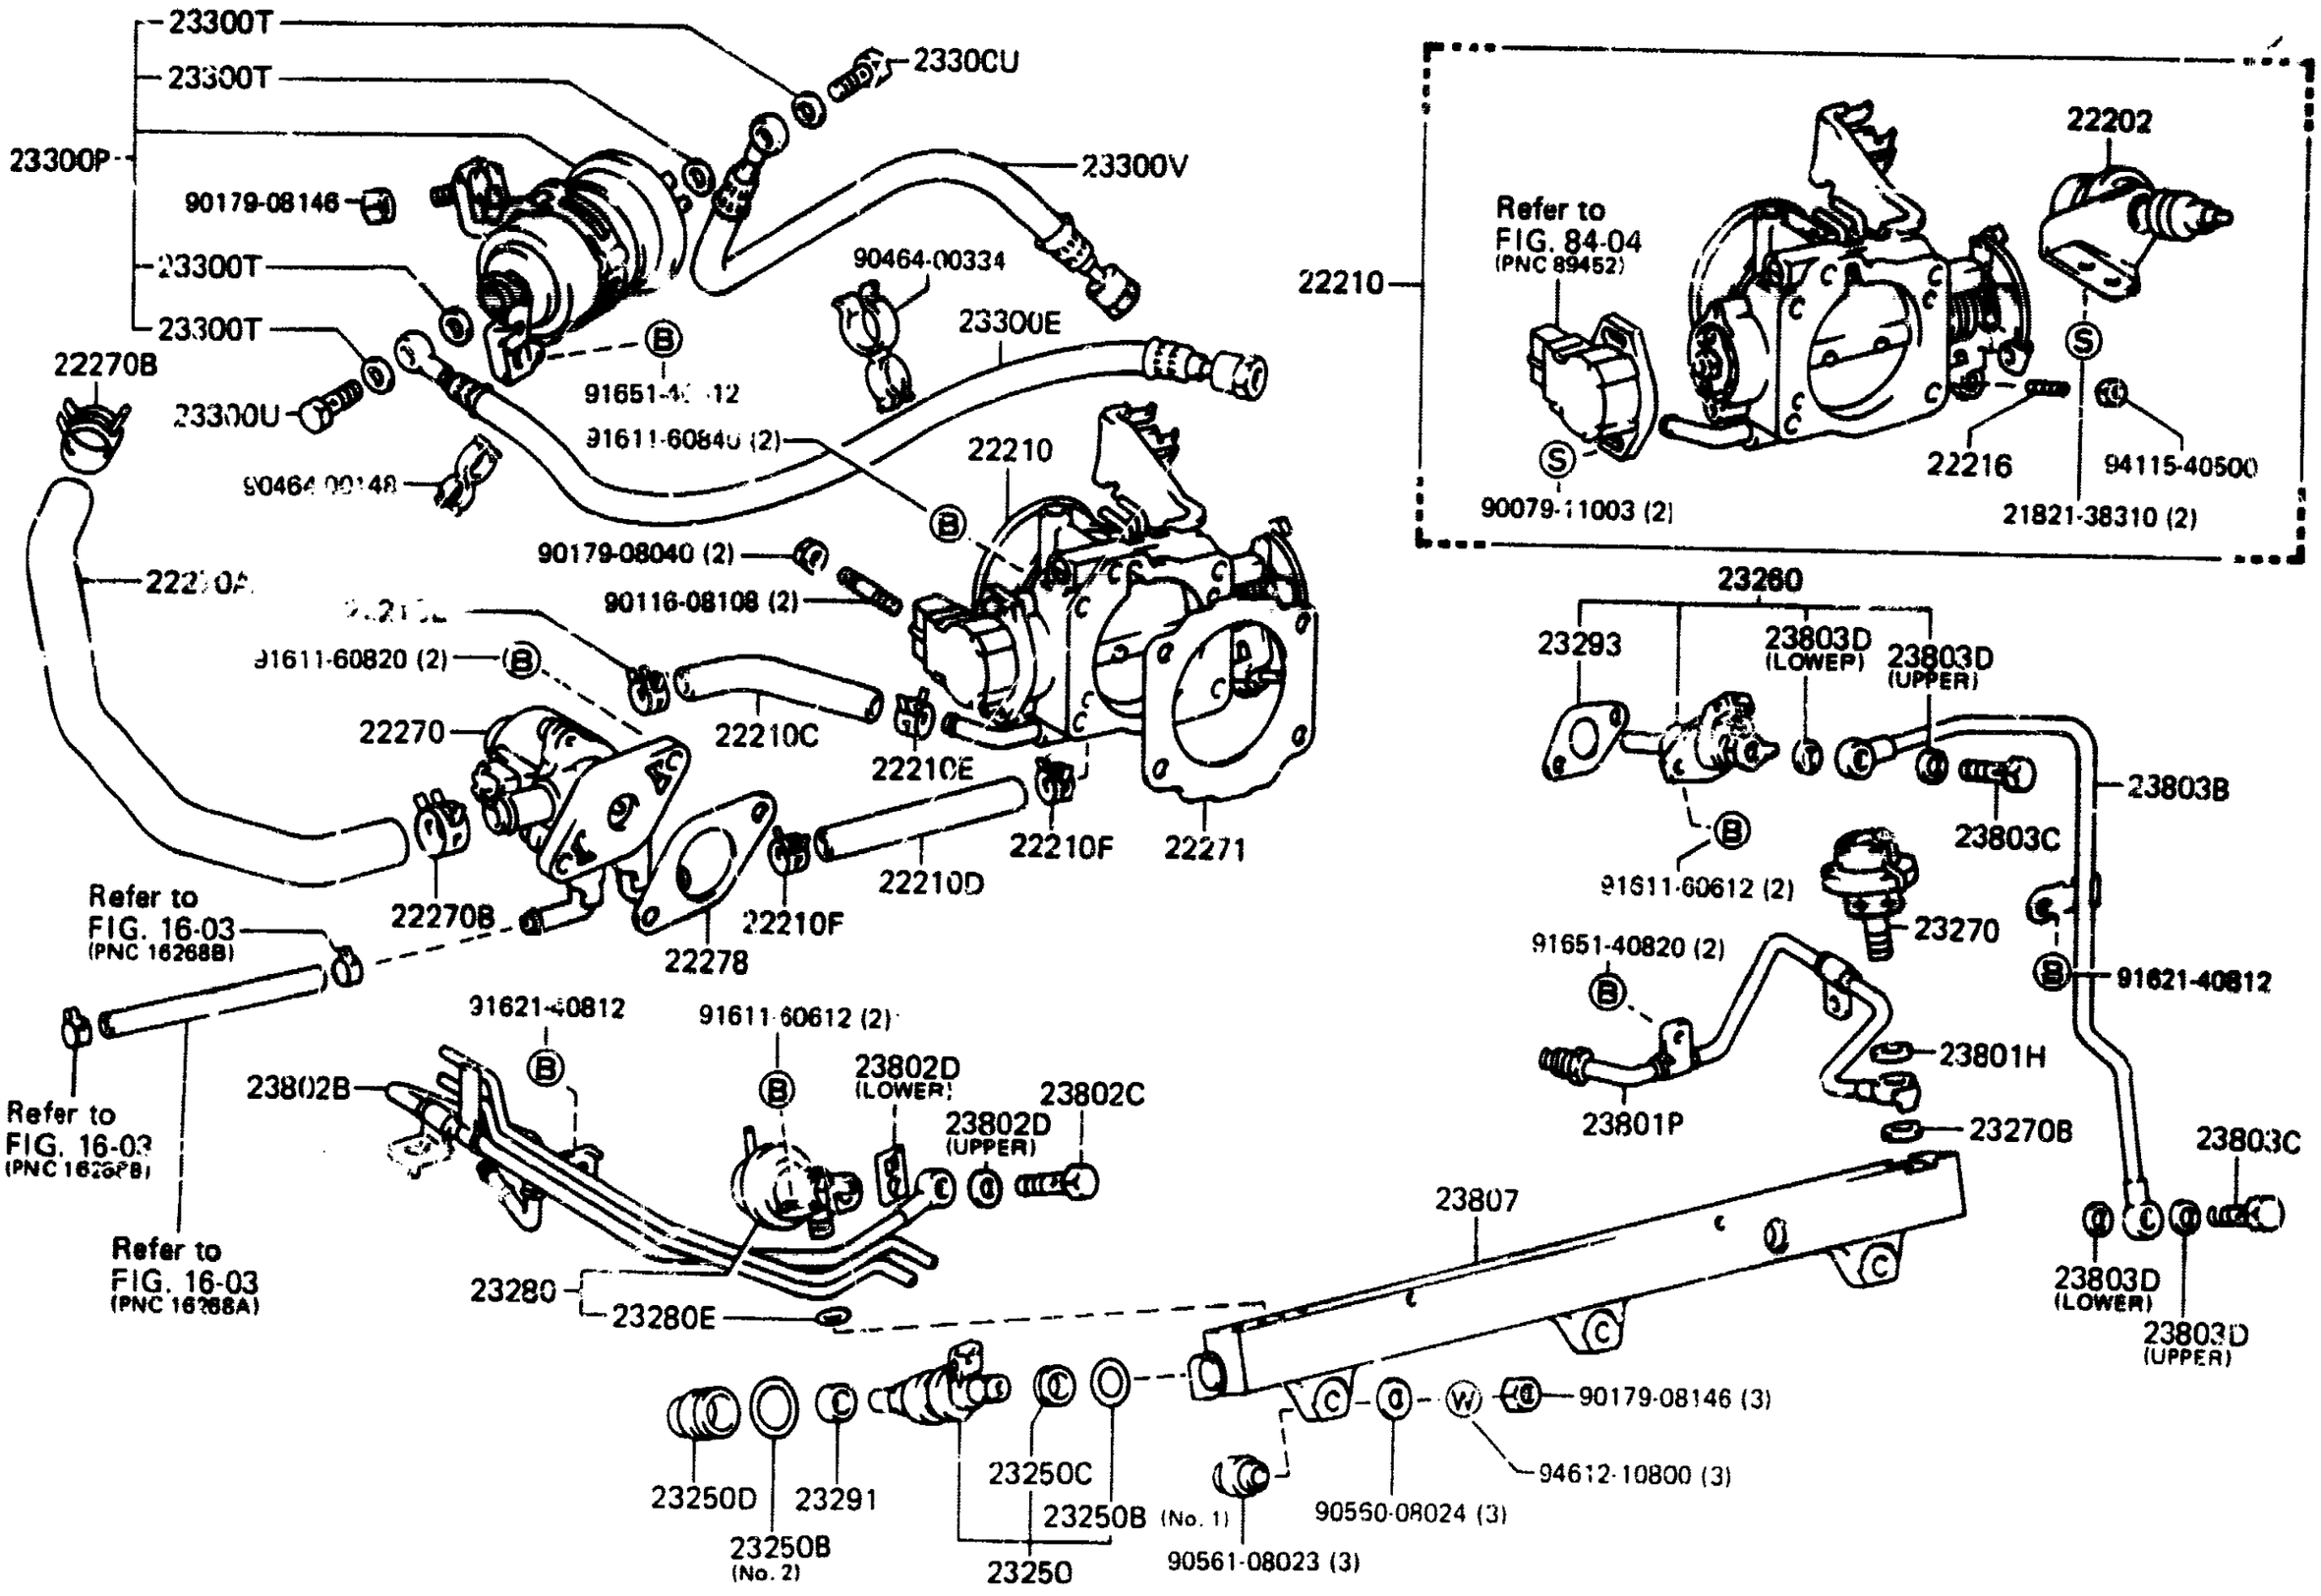

MA 9902-B

PART NUMBER	LOCATION
90389-18002-	2L9
90401-08004-	1L4
-12097-	1L4
-14093-	1F2
-18083-	1H2
90402-16042-	1F2
-26002-	1M4
90404-10018-	2G5
-10019-	2H6
-14012-	1J3
-16008-	1F2
-16022-	2K3
-26003-	1M4
-51093-	2J4
-51319-	2G8
-54035-	1C3
90407-10004-	2D8
-14005-	2K3
-16006-	2K3
-16013-	2K3
90410-11005-	1F2
-18002-	1M4
90413-04005-	2J4
-10042-	2B9
-10106-	2C9
-10214-	2B9
90430-06104-	2D8
-08009-	1L4
-08011-	1L4
-09253-	2D8
	2E8
-10022-	2I4
-12005-	1L4
-12011-	1I1
-12019-	1I1
-12245-	3J7
-15261-	1F2
-18008-	2A4
-18012-	1H2
-26002-	2F5
	2G6
-43002-	1K2
90445-11072-	2H1
-12065-	1L2
-12078-	1L2
P -14072-	3G10
-16038-	1L1
-18089-	2G7
-18090-	2G7
-22015-	3J7
-22904-	3J7
-31018-	1I3
90446-06013-	3F10
-06292-	3F10
90447-12058-	3K7
90460-01001-	2G7
90461-10387-	2H6
-10558-	2G5
90462-12038-	2K3
90464-00105-	1C4
-00208-	1C4
90467-06161-18	3E4
-07041-03	3E3
P -07041-06	3E3

PART NUMBER	LOCATION
90467-08011-	3F2
	3J1
-09014-	3J1
-11085-	1L2
P -12035-03	3B3
P -12035-06	3B3
-13001-	1J4
	1K2
	1K4
-15120-	1L1
-16001-	2E8
-16002-	2G8
-18002-	1L1
-22003-	1J4
-23001-	1J3
-28003-	1I3
-31110-	2C9
-32002-	2L7
-42001-	1L2
90468-12003-	2I8
-18071-	3E6
90480-01336-	2A6
-13005-	1K4
-13012-	2A6
-15002-	3L1
-17019-	2A6
-17158-	2A8
-17177-	2B1
-17401-	2G4
-18001-	1L1
-20016-	2A6
90501-06043-	2E3
-07005-	2B1
-07009-	2B1
-07040-	2E3
-07042-	2F3
-07049-	2E3
	2F3
-07065-	2I2
-08062-	2F3
-08075-	2G3
-08095-	2D3
-09056-	2D3
-10087-	2K1
-10092-	2A2
-10094-	2A3
-10098-	2B3
-10099-	2G3
-10107-	2C3
-10108-	2B2
-10126-	2G3
B -10138-	2A8
-10745-	2A8
-11024-	2A3
-11030-	2A3
-11041-	2E3
-12083-	2G3
-12086-	2I2
-12090-	2A3
-12099-	2H7
-12103-	2E7
-14087-	1D2
-15006-	2E3
-15115-	2F4


PART NUMBER	LOCATION
90501-17008-	2F3
-18677-	2F1
-19002-	2B3
-20012-	2J8
-20083-	2F5
	2H6
-23014-	2F7
-27008-	2B3
-29003-	2G4
-30014-	2C3
-33004-	2M2
-40008-	2B3
-45011-	2A7
-45114-	2M7
-45342-	1C2
90502-16004-	1D2
90503-04003-	2B3
90506-12031-	2K8
-12451-	2C8
-18031-	2K8
-20033-	2L8
-23009-	2M6
-26011-	2J8
-26014-	2K8
90507-14001-	2B7
90508-29017-	3M7
-30004-	2J3
90520-01002-	3A5
	3H5
-15001-	2E7
-17042-	2M6
-22013-	2H2
-27091-	2J6
-28036-	2J6
-29024-	2L4
-29025-	2L4
-29026-	2L4
-29027-	2L4
-29051-	1C2
-31001-	2K6
-33009-	2E2
-33107-	2E4
-33110-	2E4
-50001-	2A2
	2B2
	2L1
-87001-	2F2
90521-01002-	2A7
-22011-	2A7
-22012-	2A7
-22013-	2A7
-25002-	1A2
-44002-	2D7
	2K7
-75023-	2E4
-90002-	2L1
-99017-	2B2
	2L1
-99018-	2H2
-99019-	2L1
-99021-	2D2
	2F2
	2H2
	2K1

PART NUMBER	LOCATION
90521-99021-	2L1
-99040-	2H2
-99041-	2H2
-99042-	2G2
-99043-	2K1
90522-32011-	2L7
-40043-	2H8
-48044-	2H8
90523-05002-	2J2
-06004-	2B3
-06005-	2E3
	2F3
90524-15008-	1D2
90541-03015-	3D2
-06008-	2C8
-08003-	3K7
90560-06009-	1F3
-10406-	2G4
-20008-	2J3
-35008-	2D4
-35009-	2G2
-36003-	2E4
-72001-	2G2
-72002-	2G2
-72003-	2G2
90561-04010-	2H7
-06006-	2I2
-09005-	1L2
-10004-	1K4
90562-18151-	2D8
-30002-	2J7
-31002-	2K7
-32002-	2K7
-48001-	2J7
-67002-	2K7
90564-06002-	2G3
-70001-	2D4
-70002-	2D4
-70003-	2D4
-70004-	2D4
-70005-	2D4
-70006-	2D4
-70007-	2D4
-70008-	2D4
-70009-	2D4
-70010-	2D4
-70011-	2E4
-70012-	2E4
-70013-	2E4
90587-08001-	2A6
90910-01006-	1D2
-01012-	1D2
-02050-	1F1
-02057-	1H1
-04012-	3F2
-12079-	1M3
90913-02048-	1C2
-03005-	1D2
-03012-	1D2
-05020-	1D2
90915-01014-	1I1
90916-02141-	1A3
-02193-	1A3
-03052-	1K2

PART NUMBER	LOCATION
90916-03071-	1K2
90917-06004-	1E3
-06012-	1E3
-06023-	1E3
-06024-	1E3
-10049-	1M3
-10065-	2J4
-10076-	1J3
-11023-	1M3
90919-01064-	1B4
-02113-	1B4
-03086-	1C4
-12745-	1B4
-12746-	1B4
-12747-	1B4
-12748-	1B4
-12749-	1C4
-12750-	1C4
A -12949-	1B4
A -12950-	1C4
A -12951-	1B4
A -12952-	1B4
A -12953-	1C4
-12954-	1C4
-13271-	1I4
A -13328-	1C4
-21410-	1B4
90925-01349-	1L4
-01350-	1L4
-05011-	1H1
90925-03057-	1M3
90929-01189-	1M4
-01192-	1C4
90930-03075-	2B4
-03094-	2G1
90937-01117-	2I5
-01118-	2I5
-01119-	2I5
-01121-	2I5
-01122-	2I5
-01132-	2K4
-01147-	2K4
-01148-	2K4
-01149-	2K4
-01150-	2K4
-01151-	2K4
-01152-	2K4
-01184-	2K4
-01191-	2K4
-01192-	2K4
-01193-	2K4
-01194-	2K4
-01268-	2K4
-01269-	2K4
S -01408-	2I5
S -01409-	2I5
S -01410-	2I5
S -01411-	2I5
S -01412-	2I5
S -01413-	2I5
S -01414-	2I5
S -01415-	2I5
S -01416-	2I5
S -01417-	2I5

PART NUMBER	LOCATION
S 90937-01418-	2I5
S -01419-	2I5
90942-01047-	2K5
-02052-	2J5
-02053-	2K6
-03079-	2K5
-03080-	2K5
-03081-	2K5
-03082-	2K5
-03083-	2K5
-03084-	2K5
-03085-	2K5
-03086-	2K5
-03107-	2K5
-05009-	2L5
90945-02034-	2M6
-02038-	2M6
90948-01031-	2I9
-02015-	2J9
-02017-	2I9
-02032-	2J9
-02033-	2D9
-02114-	2I9
-03011-	2A10
	2I9
P 90950-01073-03	3E3
P -01073-06	3E3
S 90980-05022-	3K10
S -05067-	3K10
S -05106-	3K10
S -05110-	3K10
N -05127-	3K10
-07003-	3M8
-07048-	3M8
-07251-	3M8
90981-05034-	3A8
-05035-	3A8
P -11004-	3J8
-11010-	3E9
-11018-	3D9
	3J8
P -11020-	3E8
P	3I8
P -12010-	3D8
90982-01414-	3K8
-02207-	3K8
-05030-	3K8
-08251-	3B9
-09002-	3H9
-09003-	3H9
-09004-	3H9
-09005-	3H9
90987-01003-	3J9
-02004-	3H9
	3K9
-02006-	3J9
-03001-	3J9
-04002-	3J9
90999-00066-	3A9
-00104-	3A6
-73072-	1A2
S -92003-	2J4
91121-51070-	2C8
91511-60850-	2F1

BODY GROUP (2/2)

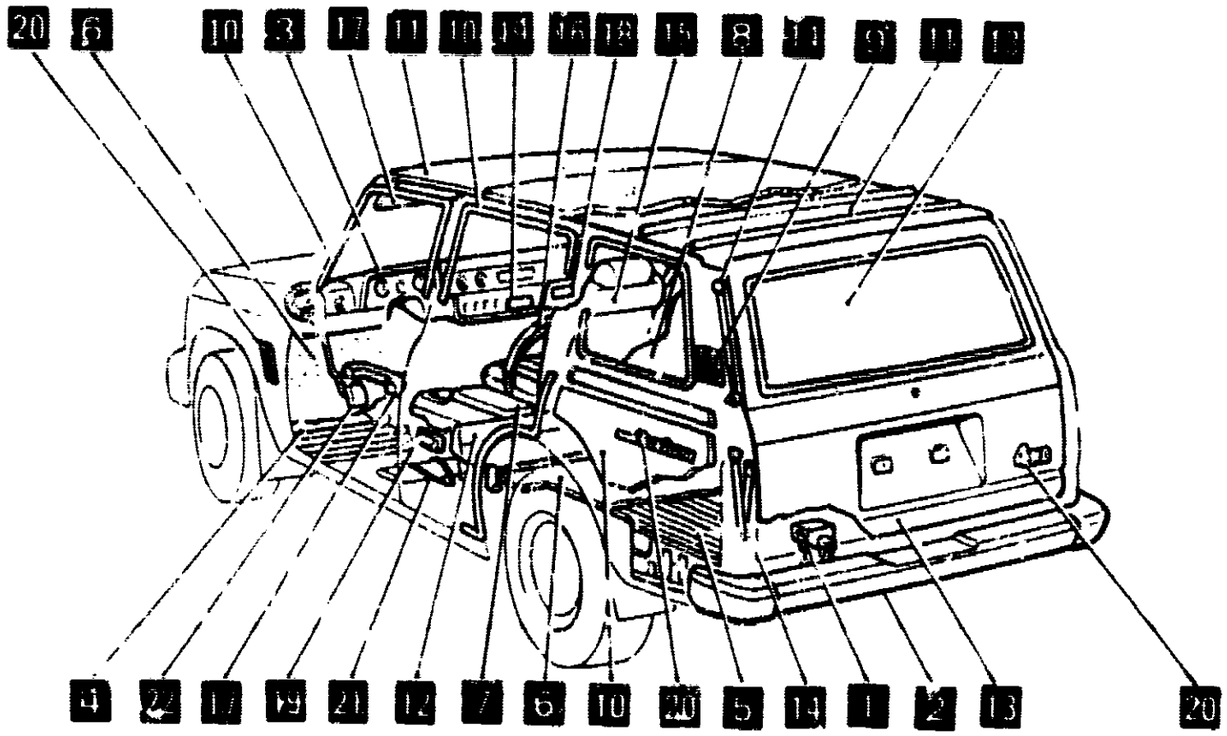

3D1 (51–53) 1

Spare Wheel Carrier

3H1 (52–53) 2

Rear Bumper & Stay

3B2 (55–51) 3

Instrument Panel

312 (58–51) 4


Front Floor Panel & Member

3L2 (58–52) 5

Rear Floor Panel & Member

3B3 (58–54) 6

Floor Mat & Pad

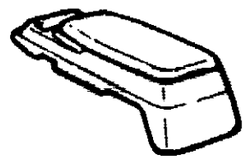
3D3 (58–55) 7

Console Box

3K3 (61–52) 8

Side Window

3A4 (61–55) 9

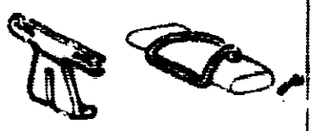Rear & Roof Ventilator


3G7 (75–54) 21

Tool Box & License Bracket

3B7 (75–51) 20


Emblem & Name Plate

3A7 (74–56) 19

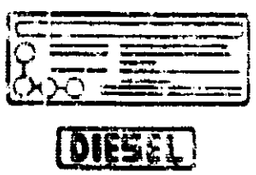
Ash Receptacle


3M6 (74–55) 18


Caution Plate

3L7 (78–51) 23

Accelerator Link

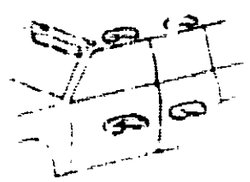3J6 (74–51) 17

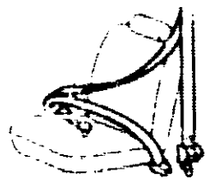Armrest & Visor


3N6 (–52) 16

Seat Belt


3C6 (71–51) 15


Seat & Seat Track

3L5 (67–62) 14

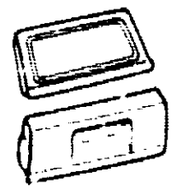Back Door Lock & Hinge

3J5 (67–61) 13

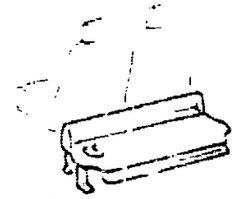Back Door Panel & Glass

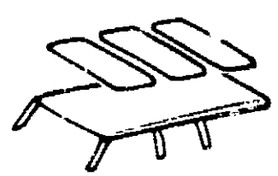3G4 (64–55) 12

Deck Board & Deck Trim Cover

3E4 (64–52) 11

Roof Headling & Pad

3B4 (64–51) 10


Inside Trim Board


MB M500

FIG. 11-06 TIMING GEAR COVER & REAR END PLATE

1J1

(8708-)

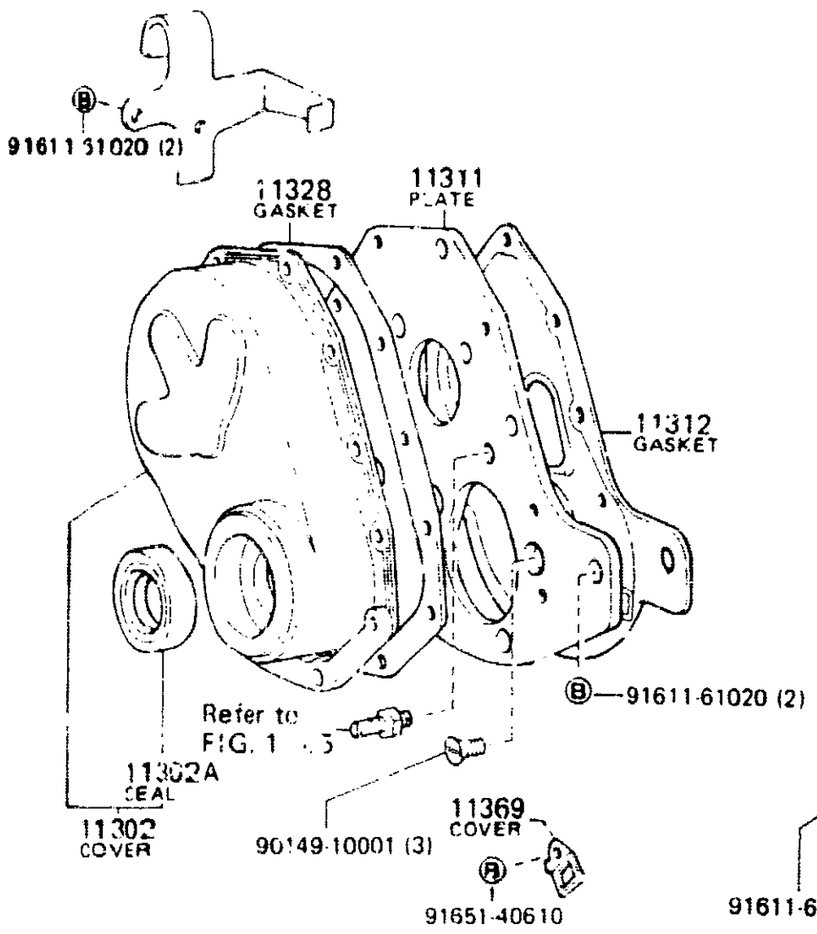

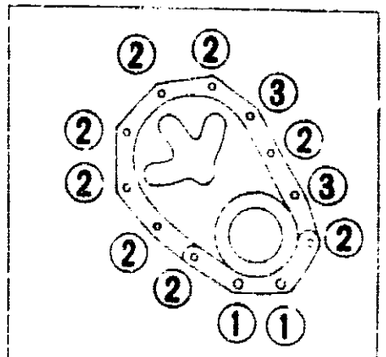

①	Ⓐ	90119-10041 (2)
②	Ⓢ	90149-60082 (6)
③	Ⓢ	90149-60081 (2)

MA B164-A


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	11302	COVER SUB-ASSY, TIMING CHAIN OR BELT					
8708-9001	3FE..FJ62			11302-61051-	1		
	11302A	SEAL, OIL (FOR TIMING GEAR COVER)					
8708-9001	3FE..FJ62			90311-45008-	1		
	11311	PLATE, FRONT END					
8708-9001	3FE..FJ62			11311-61020-	1		
	11312	GASKET, FRONT END PLATE					
P 8708-9001	3FE..FJ62			# 11312-61020- (11312-61021-)	1 1		
B 9001-9001	3FE..FJ62..WGG			11312-61021-	1		
	11328	GASKET, TIMING GEAR (OR CHAIN) COVER					
8708-9001	3FE..FJ62			11328-61010-	1		
	11369	COVER, FLYWHEEL HOUSING FRONT					
8708-9001	3FE..FJ62			11369-60011-	1		

FIG. 16-33 RADIATOR & WATER OUTLET

1J2

791430M-01088

(8708-)

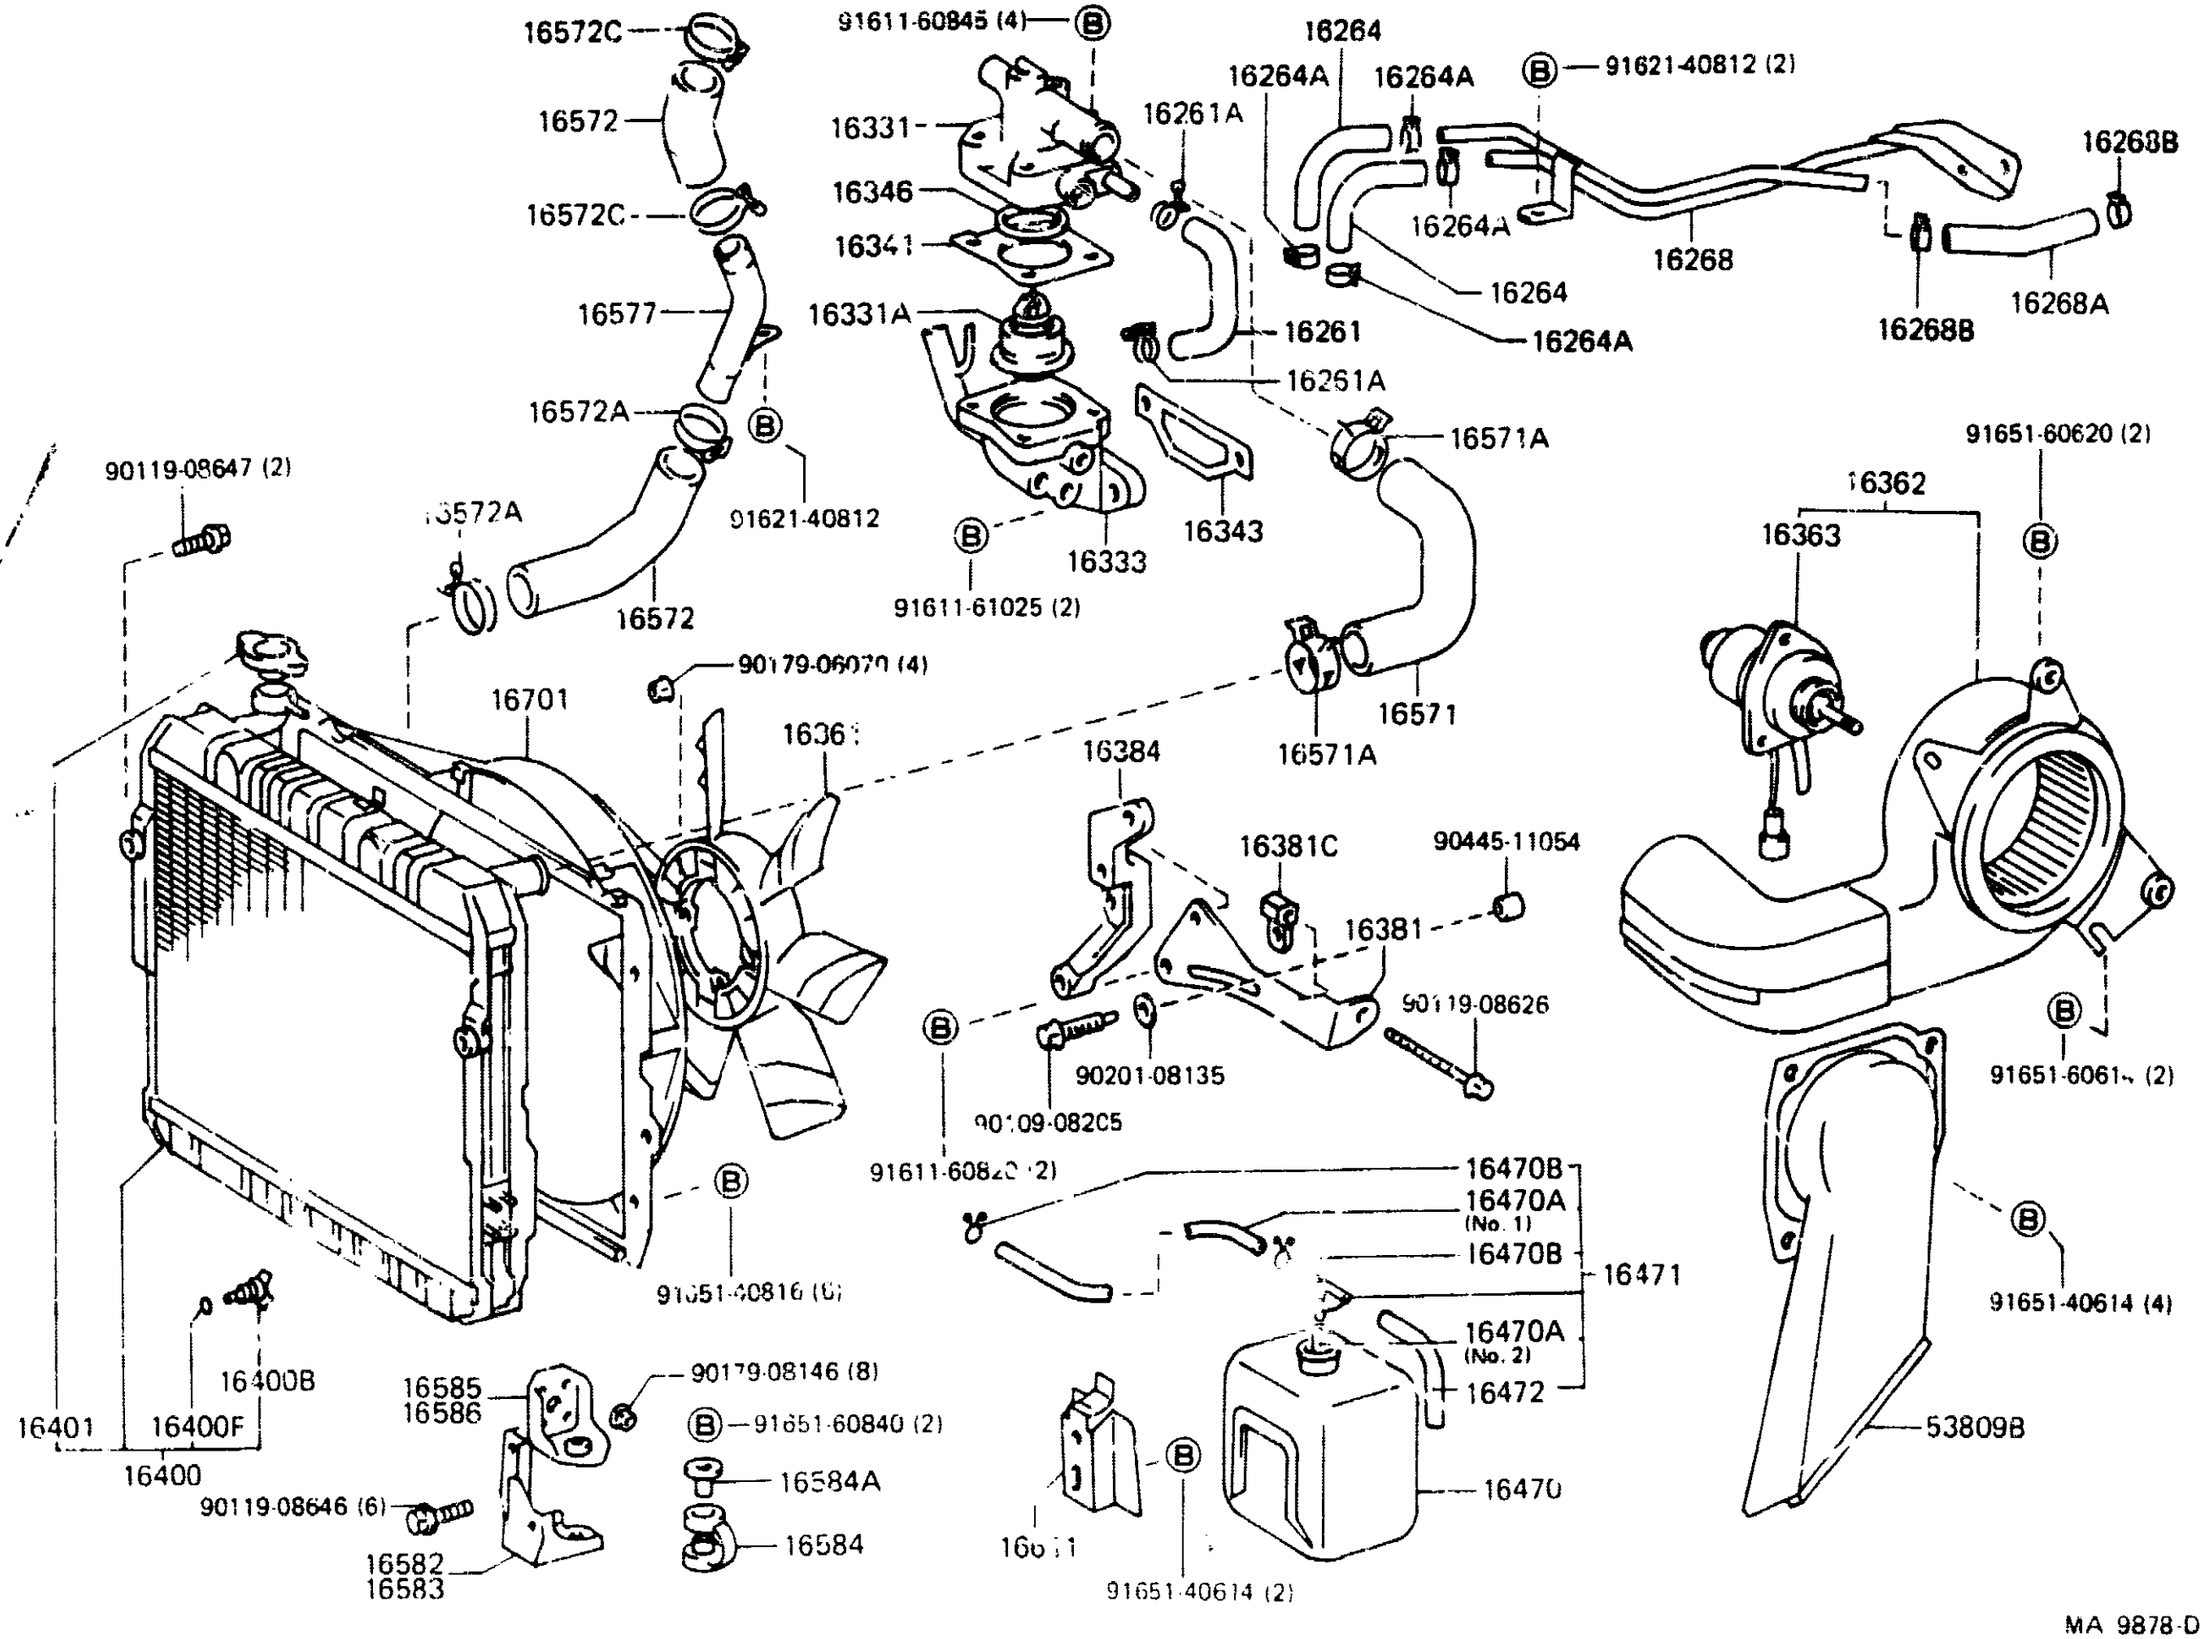


PROD DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	17344A	CLAMP OR CLIP, NO.4 (FOR AIR INJECTION SYSTEM HOSE, NO.4)					
8708-9001	3FE..FJ62			90467-23001-	2		
	17351	MANIFOLD, AIR INJECTION					
8708-9001	3FE..FJ62			17306-61030-	1		
	17351A	UNION, AIR INJECTION					
8708-9001	3FE..FJ62			90404-14012-	4		
	17353	SUPPORT, AIR INJECTION MANIFOLD					
8708-9001	3FE..FJ62			17353-61010-	1		
	17610A	VALVE, CHECK (FOR AIR INJECTION SYSTEM)					
8708-9001	3FE..FJ62			90917-10076-	1		
	25710	VALVE ASSY, AIR SWITCHING					
8708-9001	3FE..FJ62			25710-61030-	1		
	25716	BRACKET, AIR SWITCHING VALVE					
8708-9001	3FE..FJ62			25716-61020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

(8708-)


ILLUST.NO. 20F2

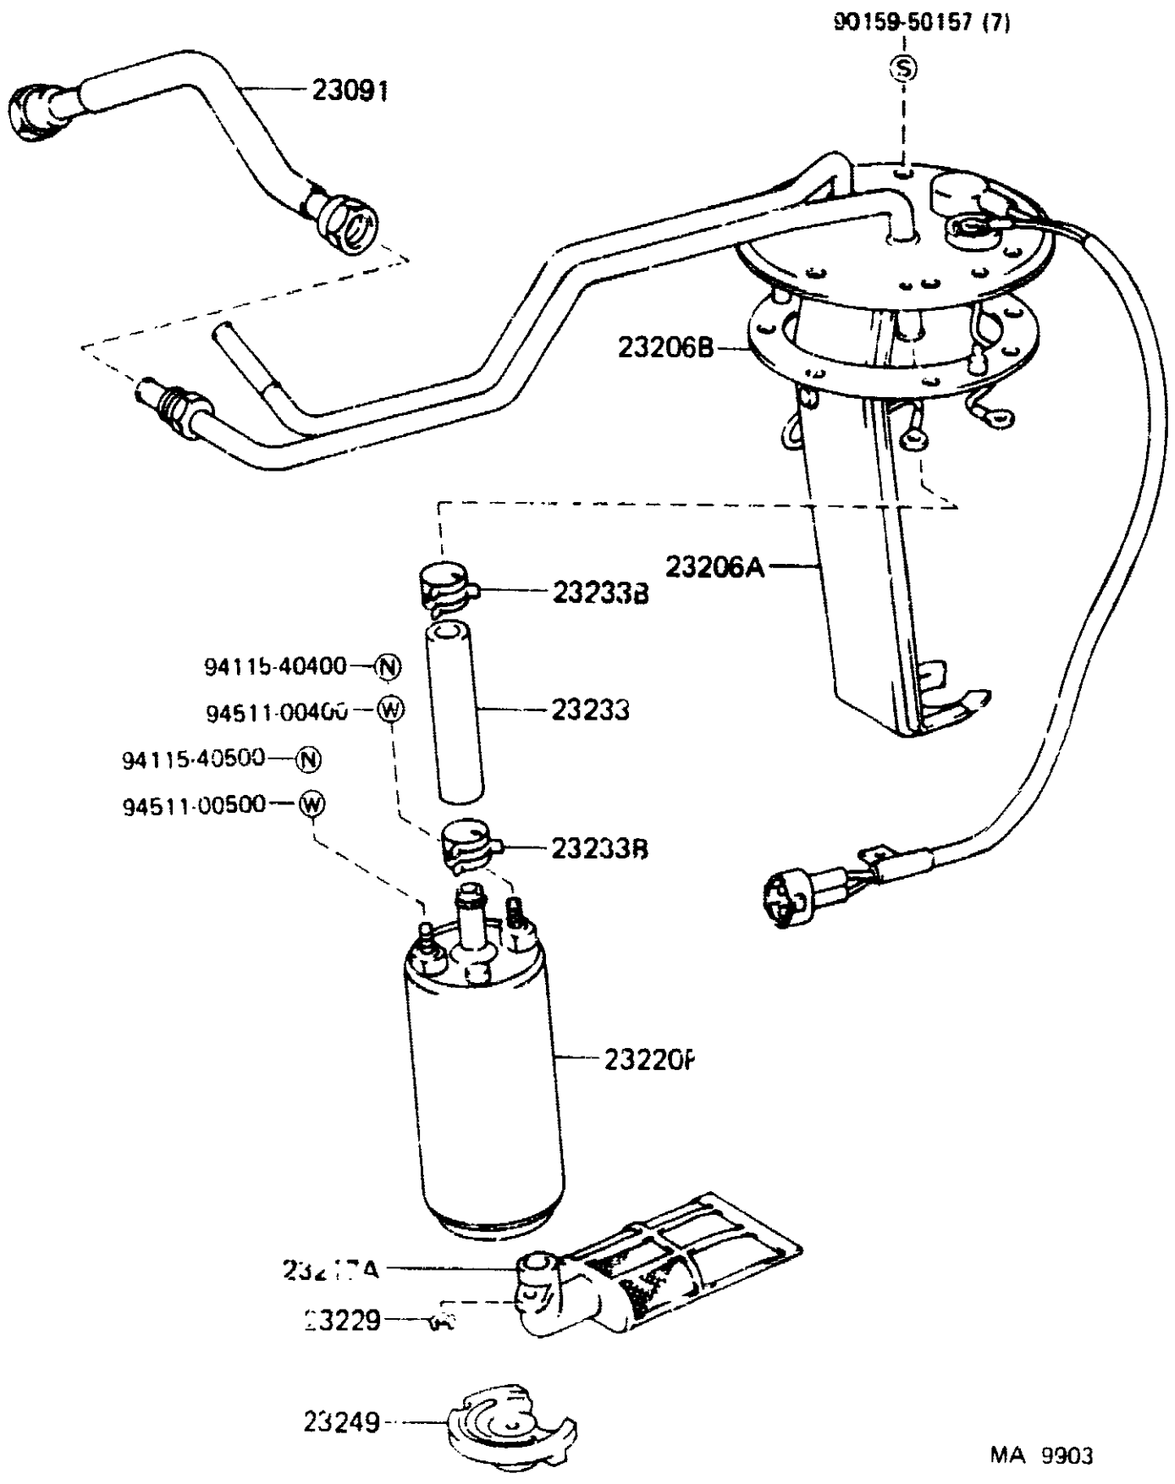


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	22202	DASHPOT SUB-ASSY					
8708-9001	3FE..FJ62			22202-61011-	1		
	22210	BODY ASSY, THROTTLE					
8708-9001	3FE..FJ62			22210-61010-	1		
	22210C	HOSE, WATER BY-PASS, NO.1					
8708-9001	3FE..FJ62			99555-10125-	1		
	22210D	HOSE, WATER BY-PASS, NO.2					
8708-9001	3FE..FJ62			99555-10125-	1		
	22210E	CLAMP OR CLIP, HOSE (FOR WATER BY-PASS HOSE, NO.1)					
8708-9001	3FE..FJ62			90467-13001-	2		
	22210F	CLAMP OR CLIP, HOSE (FOR WATER BY-PASS HOSE, NO.2)					
8708-9001	3FE..FJ62			90467-13001-	2		
	22216	SCREW, DASH POT ADJUSTING					
8708-9001	3FE..FJ62			22216-74010-	2		
	22270	VALVE ASSY, IDLE SPEED CONTROL					
8708-9001	3FE..FJ62			22270-61010-	1		
	22270A	HOSE, AIR, NO.1 (FOR IDLE SPEED CONTROL VALVE)					
8708-9001	3FE..FJ62			22233-61010-	1		
	22270B	CLIP (FOR AIR HOSE)					
8708-9001	3FE..FJ62			90467-22003-	2		

PART NUMBER	LOCATION
91611-01020-	[illegible]
91651-01030-	2A4
-01040-	2A4
94110-40600-	2J8
94115-71200-	2J8
94183-60800-	2J9
94184-61200-	2M7
95332-10024-	3J7
-10036-	3J7
95333-06010-	3K7
-06020-	1C3
-06030-	3K7
-06040-	3J7
-06060-	3J7
-06080-	3J7
95411-19930-	2J4
95441-09340-	2J4
96111-10500-	1L2
-10510-	1L2
-10930-	1F3
	1G3
96112-10250-	1H2
	1K2
96132-30600-	2G5
	2H6
96150-01600-	2J3
96151-01700-	2E7
-02000-	2D8
-02500-	2J2
96152-00300-	2M6
96160-00500-	2K8
-00600-	2K8
96411-11600-	2B4
-42500-	1F1
	1I1
-43000-	1C3
-45000-	1F1
	1I1
96431-53828-	1H1
96432-23814-	1H1
96711-19010-	2H4
	2K7
-19013-	2E7
-19014-	2F7
-19016-	2D7
-24023-	2E5
	2G6
-24045-	2A7
96940-33005-	2B9
-33805-	2C9
-39855-	2B9
P 99132-11075-	3H8
P -11270-	3C8
P	3F8
-12034-	3D9
	3E9
P -12100-	3J8
P -21270-	3F8
99332-11175-	1A3
-11180-	1A3
99555-10125-	1J4
	1K2
99556-20095-	3L11
-30100-	3L11
B 99556-30210-	1H2
99911-11200-	1A1
99913-11500-	1A1
99914-10810-	1A1
-11214-	1A1
99915-10700-	1A1

ELECTRICAL GROUP (1/2)

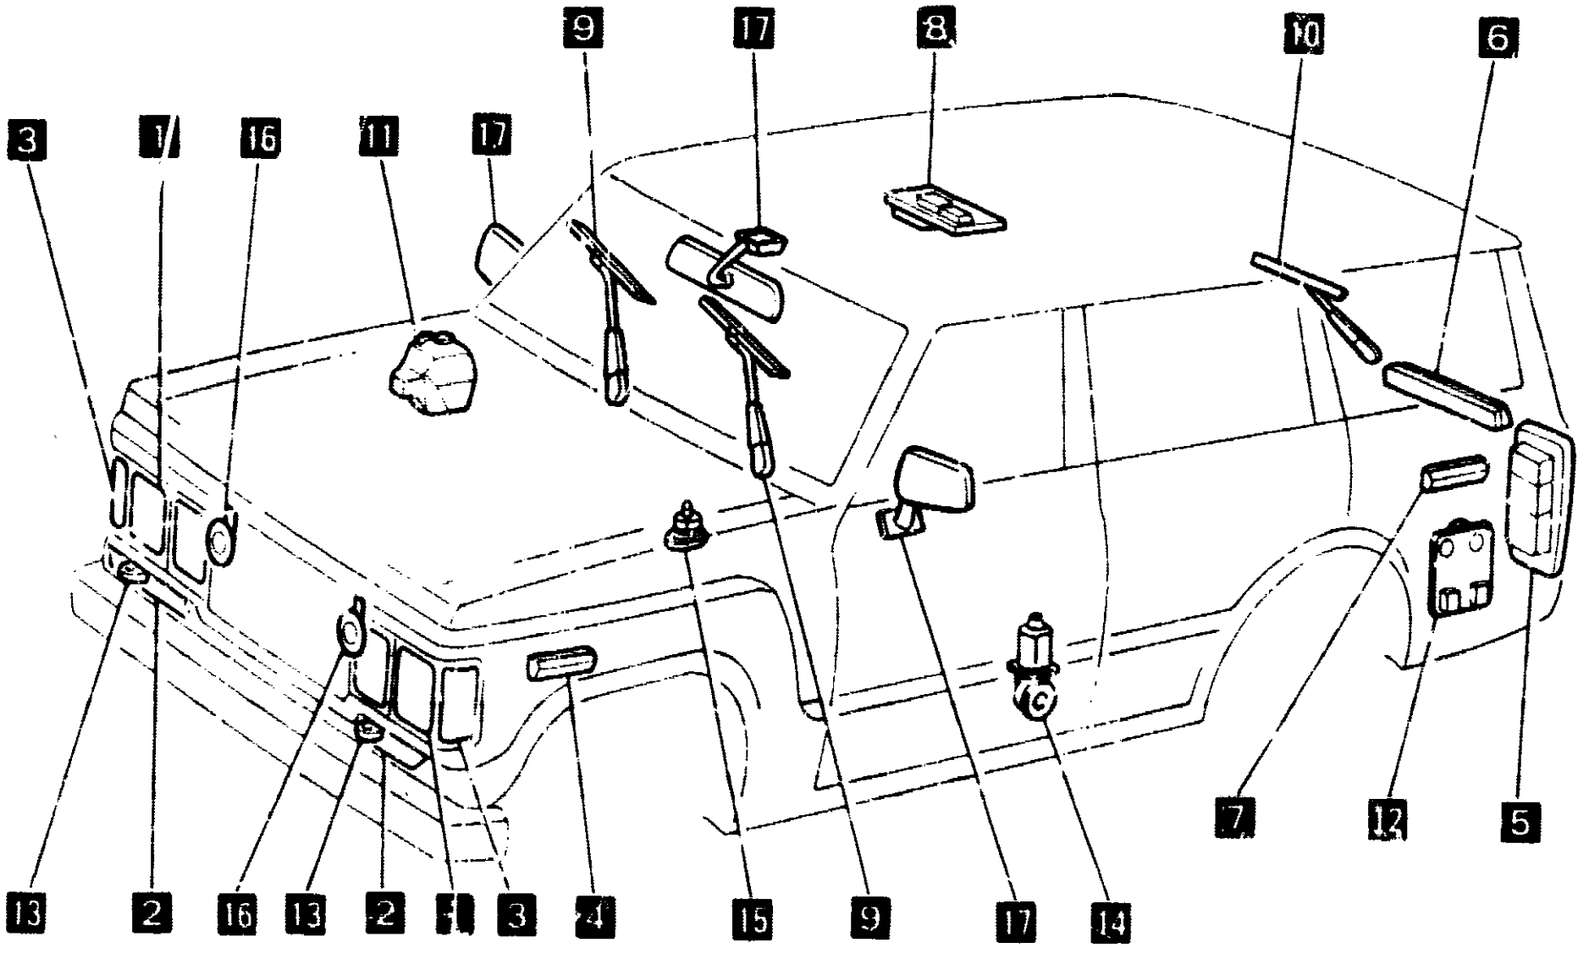


3A8 (81–01) 1

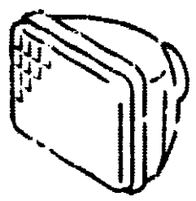


Headlamp

3C8 (81–03) 2

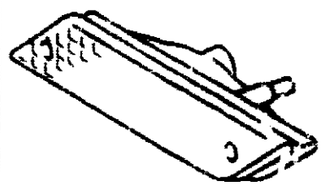


Front Turn Signal Lamp

3D8 (81–04) 3

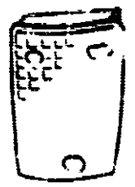


Front Clearance Lamp

3E8 (81–05) 4

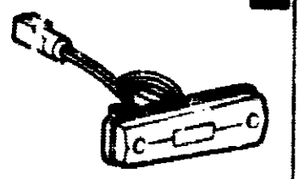


Front Marker Lamp

3F8 (81–11) 5

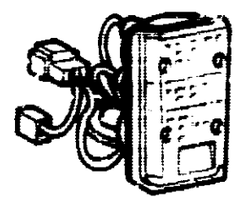


Rear Combination Lamp

3H8 (81–13) 6

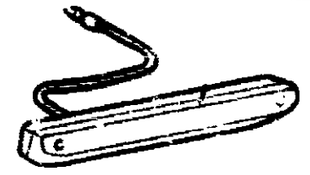

License Plate Lamp

3I8 (81–14) 7

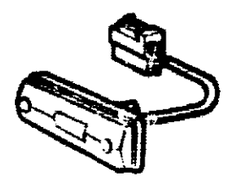


Rear Side Marker Lamp

3J8 (81–21) 8




Interior Lamp

3A10 (85–01) 9

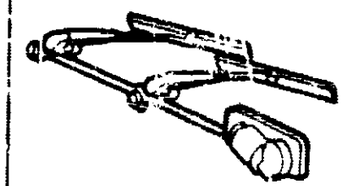


Windshield Wiper

3C10 (85–02) 10

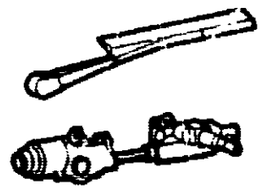


Rear Wiper

3D10 (85–03) 11

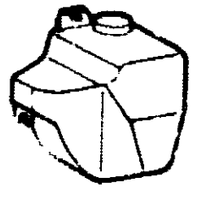

Windshield Washer

3C11 (87–01) 17

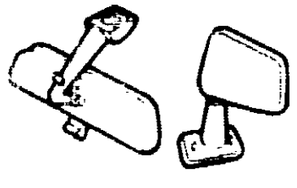


Mirror

3B11 (86–11) 16



Horn

3A11 (86–04) 15

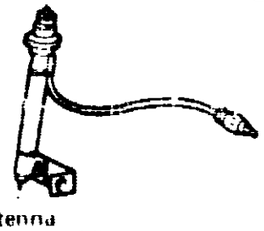


Antenna

3I10 (85–11) 14




Door Motor & Door Solenoid

3G10 (85–05) 13

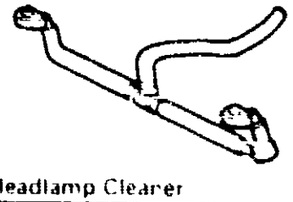

Headlamp Cleaner


3F10 (85–04) 12




Rear Washer

ME 9870

(8708-)

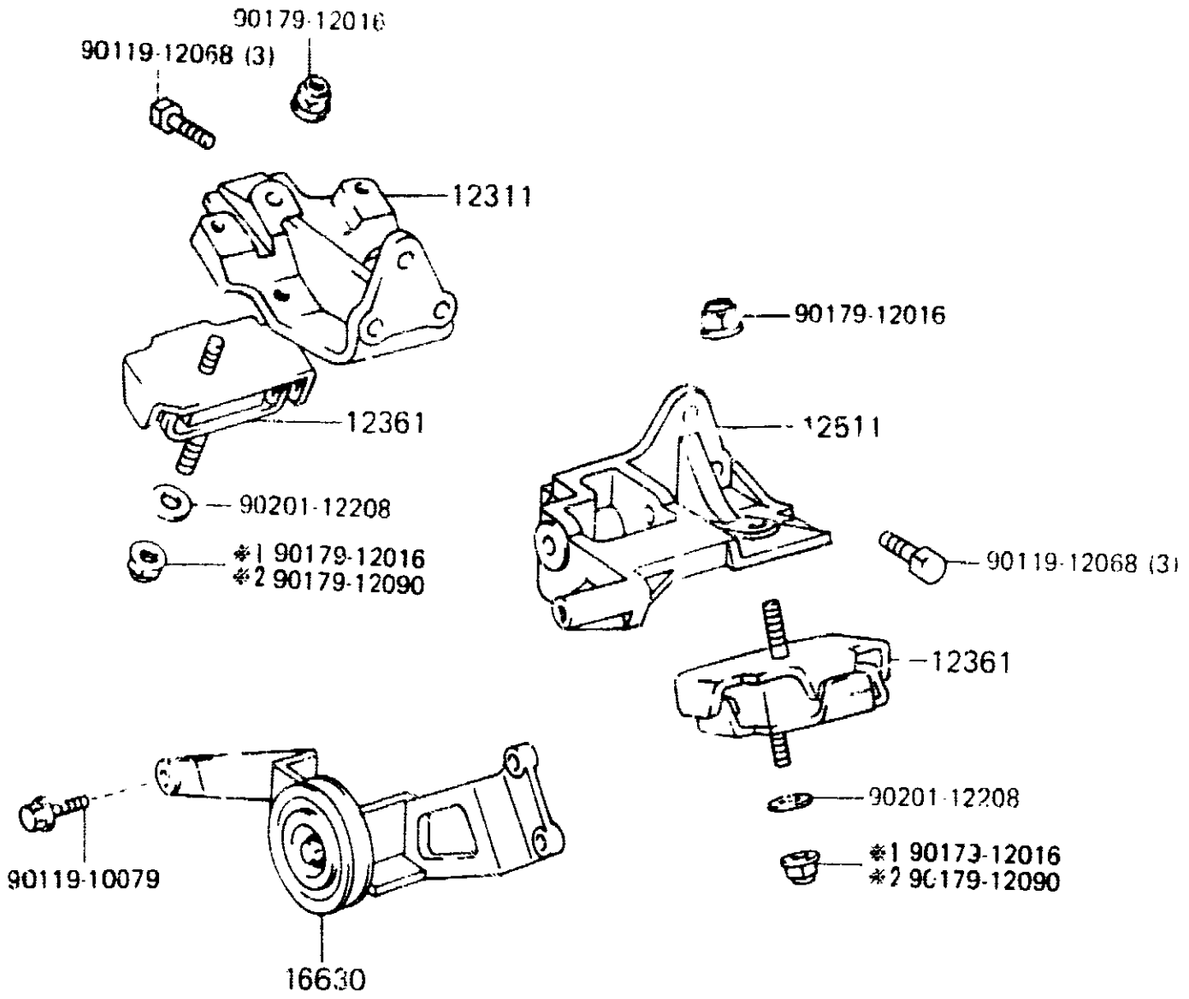

※1(-8901)
※2(8901-)

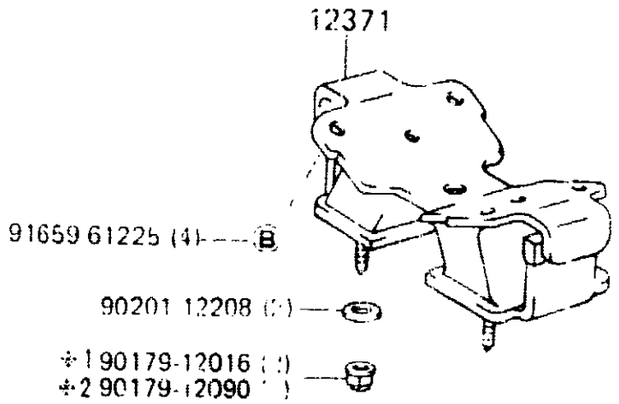

MA 9866-B

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		12311	BRACKET, ENGINE MOUNTING, FRONT NO.1 RH					
	8708-9001	3FE..FJ62			12311-61071-	1		
		12361	INSULATOR ENGINE MOUNTING, FRONT					
	8708-8809	3FE..FJ62			# 12361-61030- (12361-61031-)	2 2		
A	8809-9001	3FE..FJ62..WGG			12361-61031-	2		
		12371	INSULATOR, ENGINE MOUNTING, REAR NO.1					
	8708-8809	3FE..FJ62			# 12371-61040- (12371-61041-)	1 1		
A	8809-9001	3FE..FJ62..WGG			12371-61041-	1		
		12511	BRACKET, ALTERNATOR, NO.1					
P	8708-8909	3FE..FJ62			# 12511-61060- (12511-61061-)	1 1		
B	8909-9001	3FE..FJ62..WGG			12511-61061-	1		
		16630	PULLEY ASSY, IDLER					
	8708-9001	3FE..FJ62			16630-61020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	16261	HOSE, WATER BY-PASS					
8708-9001	3FE..FJ62			16261-61020-	1		
	16261A	CLAMP OR CLIP, HOSE (FOR WATER BY-PASS HOSE)					
8708-9001	3FE..FJ62			96112-10250-	2		
	16264	HOSE, WATER BY-PASS, NO.2					
8708-9001	3FE..FJ62			16264-61010-	2		
	16264A	CLAMP OR CLIP (FOR WATER BY-PASS HOSE, NO.2)					
8708-9001	3FE..FJ62			90467-13001-	4		
	16268	PIPE, WATER BY-PASS, NO.1					
8708-9001	3FE..FJ62			16268-61010-	1		
	16268A	HOSE (FOR WATER BY-PASS PIPE)					
8708-9001	3FE..FJ62			93555-10125-	1		
	16268B	CLAMP OR CLIP, HOSE (FOR WATER BY-PASS PIPE)					
8708-9001	3FE..FJ62			90467-13001-	2		
	16331	OUTLET, WATER					
8708-9001	3FE..FJ62			16303-61020-	1		
	16331A	THERMOSTAT					
8708-0805	3FE..FJ62	*WAX 88-100		* 90916-03071- (90916-03052-)	1 1		
8805-9001	3FE..FJ62	*WAX88-100		90916-03052-	1		
	16333	HOUSING, WATER OUTLET					
8708-9001	3FE..FJ62			16304-61030-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	16341	GASKET, WATER OUTLET					
8708-9001	3FE..FJ62			* 16341-61020- (16341-61030-)	1 1		
	16343	GASKET, WATER OUTLET HOUSING					
8708-9001	3FE..FJ62			16343-61010-	1		
	16346	GASKET, THERMOSTAT					
8708-9001	3FE..FJ62			90430-43002-	1		
	16361	FAN					
8708-9001	3FE..FJ62			16361-61020-	1		
	16362	FAN, NO.2					
8708-9001	3FE..FJ62			16360-61015-	1		
	16363	MOTOR, COOLING FAN					
8708-9001	3FE..FJ62			16363-61020-	1		
	16381	BAR, FAN BELT ADJUSTING					
8708-9001	3FE..FJ62			16381-61050-	1		
	17317	BAR, FAN BELT ADJUSTING, NO.2					
8708-9001	3FE..FJ62			17317-61020-	1		
	16384	BRACKET, FAN BELT ADJUSTING BAR					
8708-9001	3FE..FJ62			16384-61010-	1		
	16400	RADIATOR ASSY					
8708-9001	3FE..FJ62			16400-61140-	1		

*WAX - =WAX TYPE(Opening temperature-Fully open temperature)

(8708-)

Vacuum Hose Supply Method


Supply of Vacuum Hose is determined in length specified below.

Necessary Length	Part Number	Length available
Below 300 mm	90999-92002	300 mm
301 to 600 mm	90999-92003	600 mm
601 to 950 mm	90999-92004	950 mm
951 to 1300 mm	90999-92006	1300 mm
1301 to 1650 mm	90999-92007	1650 mm
1651 to 2600 mm	90999-92008	2600 mm

1. Actual replacement to vehicle could be made by cutting the hose into desired length.
2. Unlike the vacuum hose already installed in the vehicle, this replacement vacuum hose does not have the hose number printed on it. Accordingly, before installing this vacuum hose, write on it the same hose number as that written on the vacuum hose to be removed as shown below.

● Example 90999-92002 (L=220)

- 90999-92002 → Replacement P/N
- (L=220) → Required length

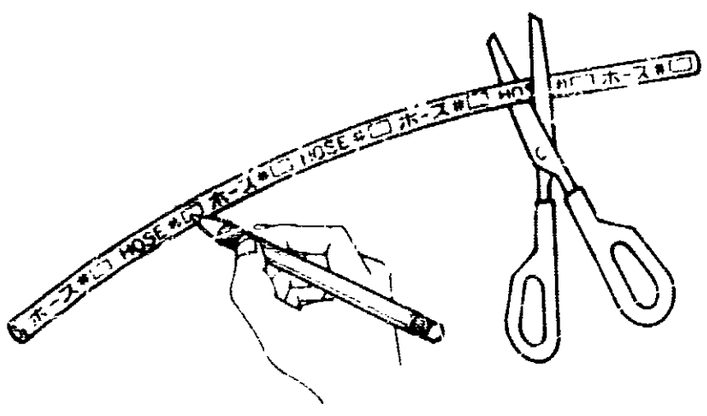

1. As hose is supplied in 300 mm length, cut off excess to meet desired length of 220 mm.
2. Using an oil-based marking pen or a ball-point pen, write the hose number at both ends of the hose, in accordance with the original hose number.

MA 9504-B


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		22271	GASKET, THROTTLE BODY					
	8708-9001	3FE..FJ62			22271-61010-	1		
		22278	GASKET, IDLE SPEED CONTROL VALVE					
	8708-9001	3FE..FJ62			22278-43011-	1		
		23091	TUBE SUB-ASSY, FUEL PUMP					
	8708-9001	3FE..FJ62			23091-61010-	1		
		23206A	BRACKET, FUEL PUMP					
	8708-9001	3FE..FJ62			23206-61010-	1		
		23206B	GASKET, FUEL PUMP BRACKET					
	8708-9001	3FE..FJ62			77169-14010-	1		
		23217A	FILTER, FUEL PUMP					
F	8708-8909	3FE..FJ62	AISAN, AISAN		# 23217-35081-	1		
					(23217-35040-)	1		
	8708-9001	3FE..FJ62	DENSO, DENSO		23217-35040-	1		
		23220P	PUMP ASSY, FUEL					
	8708-9001	3FE..FJ62	AISAN		# 23220-16083-	1		
					(23220-16084-)	1		
	8708-9001	3FE..FJ62	DENSO		23220-16190-	1		
		23229	CLIP (FOR FUEL PUMP FILTER)					
	8708-9001	3FE..FJ62			23229-16010-	1		
		23233	HOSE, FUEL PUMP					
	8708-9001	3FE..FJ62			23239-16010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	23233B	CLIP (FOR FUEL PUMP HOSE)					
8708-9001	3FE..FJ62			90467-13001-	2		
	23249	RUBBER, CUSHION (FOR FUEL PUMP)					
8708-9001	3FE..FJ62			23249-74150-	1		
	23250	INJECTOR ASSY, FUEL					
8708-9001	3FE..FJ62			23209-61010-	6		
	23250B	RING, O (FOR FUEL INJECTOR)					
8708-9001	3FE..FJ62	NO.1, NO.1		90301-07001-	6		
8708-9001	3FE..FJ62	NO.2, NO.2		90301-19006-	6		
	23250C	GROMMET (FOR FUEL INJECTOR)					
8708-9001	3FE..FJ62			90480-13005-	6		
	23250D	SPACER (FOR FUEL INJECTOR)					
8708-9001	3FE..FJ62			90561-10004-	6		
	23260	INJECTOR ASSY, COLD START FUEL					
8708-9001	3FE..FJ62			23260-69025-	1		
	23270	DAMPER ASSY, FUEL PRESSURE PULSATION					
8708-9001	3FE..FJ62			23207-74010-	1		
	23270B	GASKET (FOR PULSATION DAMPER HOSE)					
8708-9001	3FE..FJ62			23232-28010-	1		
	23280	REGULATOR ASSY, FUEL PRESSURE					
8708-9001	3FE..FJ62			23280-61010-	1		

ILLUSTRATED INDEX


K16

3K8 (82-01) 1

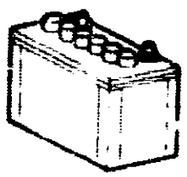

Battery & Cable

3L8 (82-02) 2

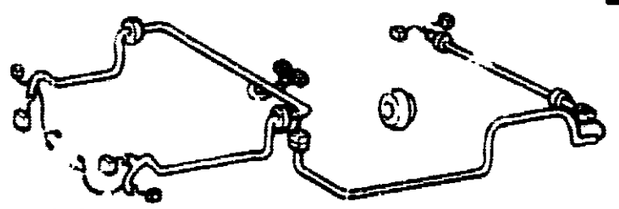


Wiring & Clamp

3C9 (83-01) 3




Meter

3E9 (83-02) 4

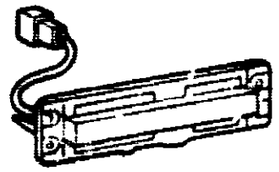


Indicator

3F9 (84-01) 5

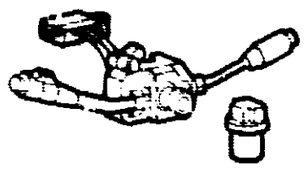


Switch & Relay

3L9 (84-04) 6

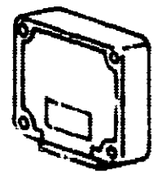


EFI

ELECTRICAL GROUP (2/2)

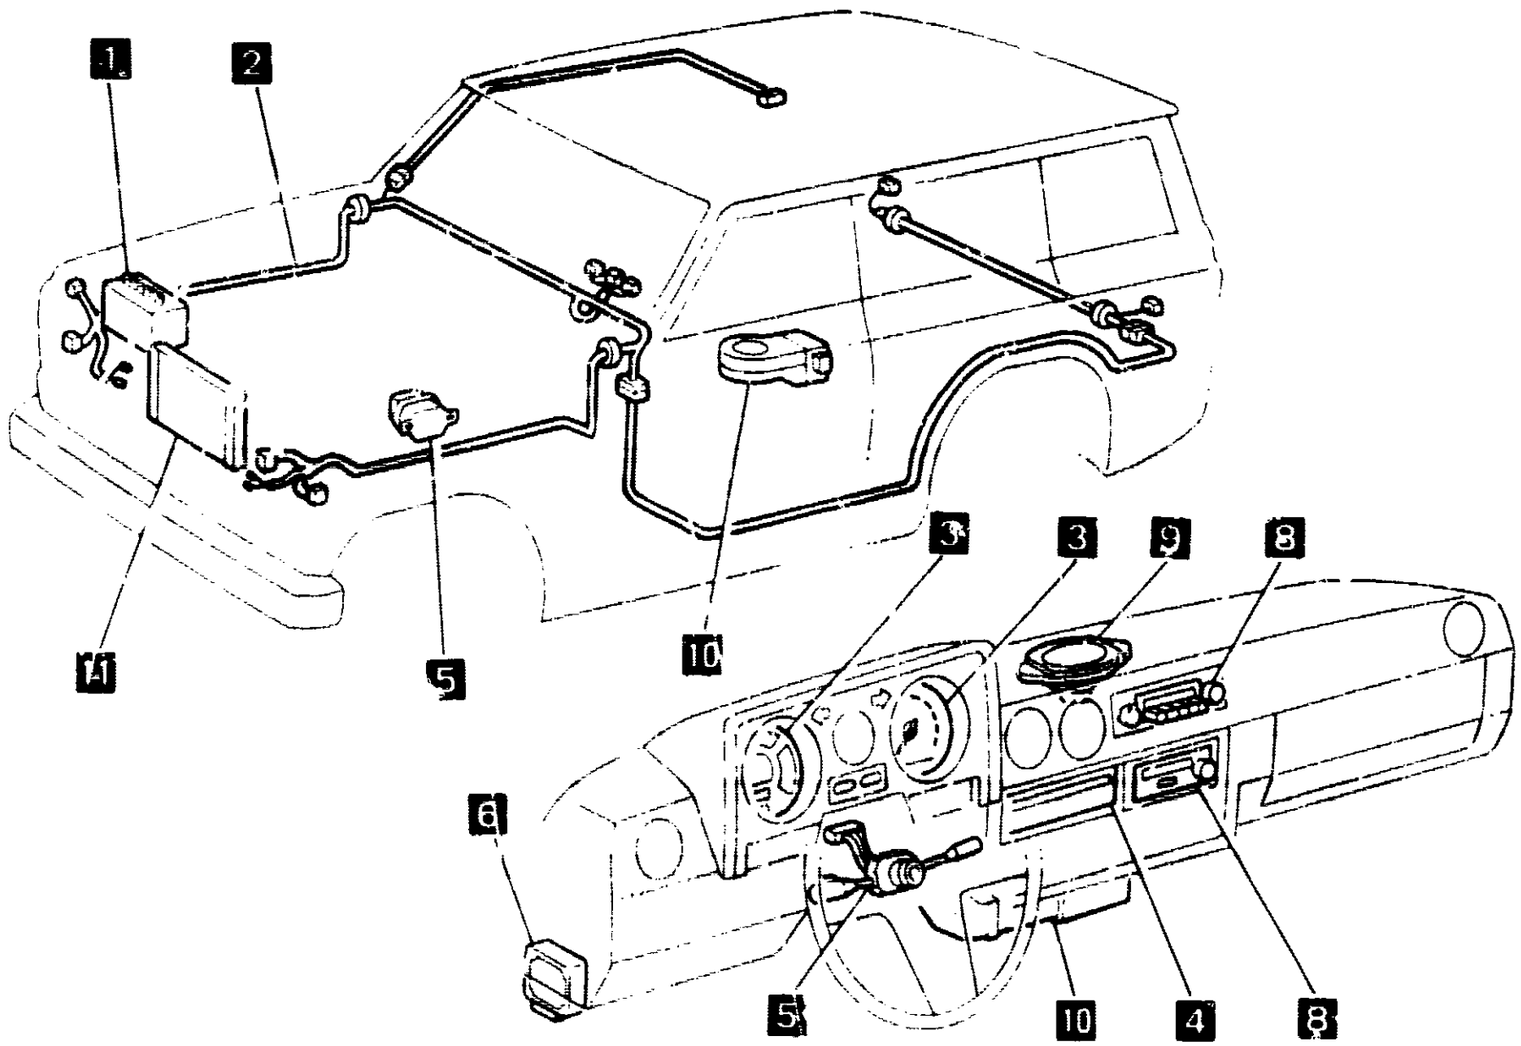


3J10 (86-01) 8

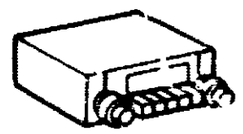

Radio & Tape Player


3L10 (86-02) 9

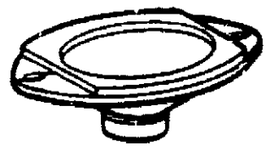

Speaker

3M11 (87-18) Piping

3A12 (87-19) Compressor

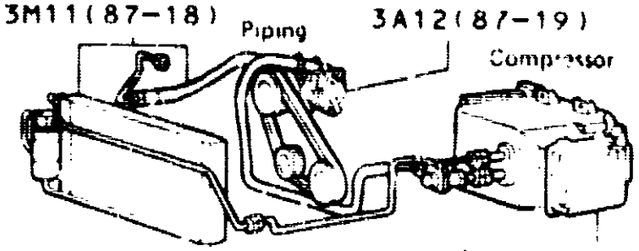


3G11 (87-14) Unit

11

3K11 (87-16) Piping

3I11 (87-15) Duct

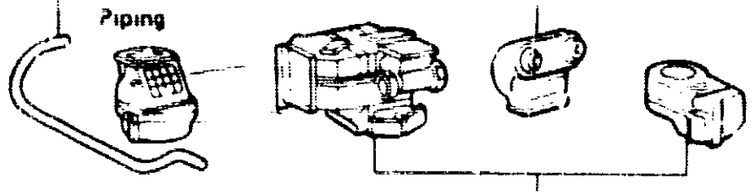


3E11 (87-12) Unit

10

FIG. 12-01 VENTILATION HOSE

791430M-01077

(8708-)

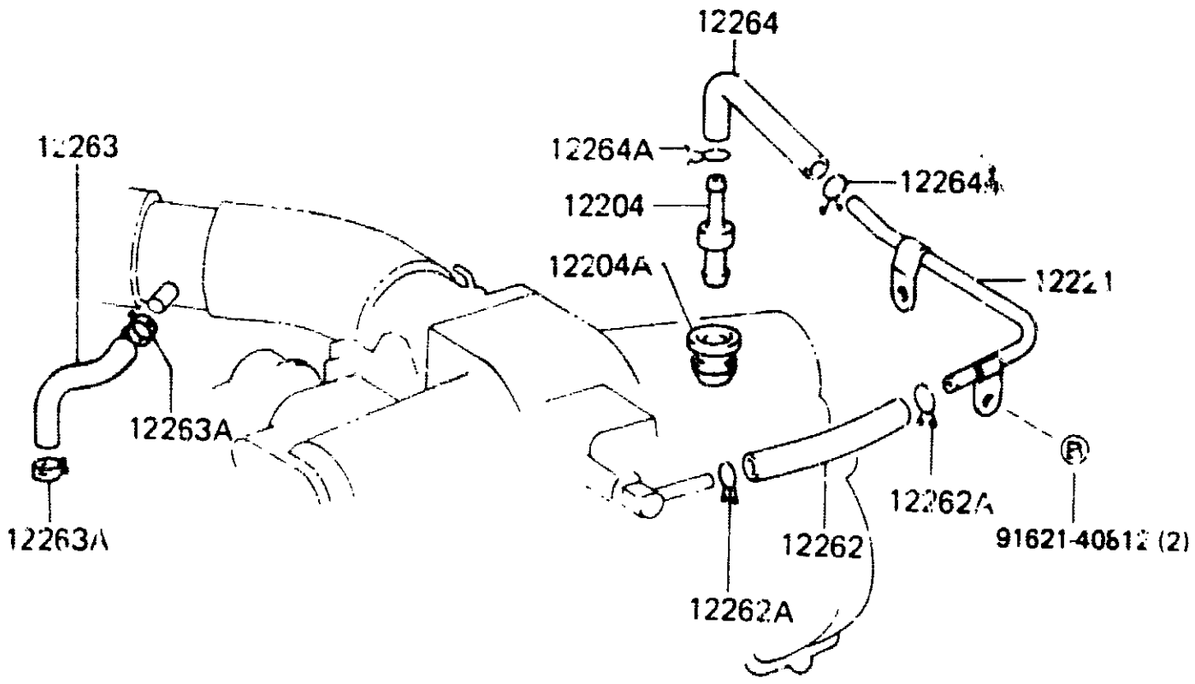

MA 9867-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	12204	VALVE SUB-ASSY, VENTILATION					
8708-9001	3FE..FJ62			12204-35040-	1		
	12204A	GROMMET (FOR VENTILATION SYSTEM)					
8708-9001	3FE..FJ62			90470-18001-	1		
	12221	TUBE, VENTILATION NO.1					
8708-9001	3FE..FJ62			12221-61010-	1		
	12262	HOSE, VENTILATION, NO.2					
8708-9001	3FE..FJ62			12261-61060-	1		
	12252A	CLIP (FOR VENTILATION HOSE NO.2)					
8708-9001	3FE..FJ62			90467-15120-	2		
	12263	HOSE, VENTILATION, NO.3					
8708-9001	3FE..FJ62			12262-61020-	1		
	12263A	CLIP (FOR VENTILATION HOSE)					
8708-9001	3FE..FJ62			90467-19002-	2		
	12264	HOSE, VENTILATION, NO.4					
8708-9001	3FE..FJ62			90445-16038-	1		
	12264A	CLIP (FOR VENTILATION HOSE)					
8708-9001	3FE..FJ62			90467-15120-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	16400B PLUG, RADIATOR DRAIN COCK						
8708-9001	3FE..FJ62			16417-24200-	1		
	16400F PACKING (FOR RADIATOR DRAIN COCK)						
8708-9001	3FE..FJ62			16418-24200-	1		
	16401 CAP SUB-ASSY, RADIATOR						
8708-9001	3FE..FJ62			16401-71010-	1		
	16480 TANK ASSY, RADIATOR RESERVE						
8708-9001	3FE..FJ62			16480-90A00-	1		
	16470A HOSE OR PIPE (FOR RADIATOR RESERVE TANK)						
8708-8808	3FE..FJ62	*H,L=670,NO.1		90445-12065-	1		
8808-9001	3FE..FJ62..WGG	*H,L=760,NO.1		〃	1		
8808-9001	3FE..FJ62..WGG	*H,L=150,NO.2		90445-12078-	1		
	16470B CLAMP OR CLIP (FOR RADIATOR RESERVE TANK HOSE)						
8708-9001	3FE..FJ62			90467-11085-	2		
	16471 CAP SUB-ASSY, RESERVE TANK						
8708-8808	3FE..FJ62			16405-90A00-	1		
8808-9001	3FE..FJ62..WGG			16405-61030-	1		
	16472 HOSE, BREATHER						
8708-9001	3FE..FJ62			85338-22020-	1		
	16571 HOSE, RADIATOR, INLET						
8708-9001	3FE..FJ62			16571-61110-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	16571A CLAMP OR CLIP, HOSE (FOR RADIATOR INLET)						
8708-9001	3FE..FJ62			90467-42001-	2		
	16572 HOSE, RADIATOR, OUTLET						
8708-9001	3FE..FJ62	WATER PUMP SIDE		16572-61020-	1		
8708-9001	3FE..FJ62	RADIATOR SIDE		16573-61040-	1		
	16572A CLAMP OR CLIP, HOSE (FOR RADIATOR OUTLET, NO.1)						
8708-8803	3FE..FJ62			96111-10510-	2		
8803-9001	3FE..FJ62			96111-10500-	2		
	16572C CLAMP OR CLIP, HOSE (FOR RADIATOR OUTLET, NO.2)						
8708-8803	3FE..FJ62			96111-10510-	2		
8803-9001	3FE..FJ62			96111-10500-	2		
	16577 PIPE, RADIATOR						
8708-9001	3FE..FJ62			16577-61130-	1		
	16582 BRACKET, RADIATOR, NO.1						
8708-9001	3FE..FJ62			16582-61010-	1		
	16583 BRACKET, RADIATOR, NO.2						
8708-9001	3FE..FJ62			16583-61010-	1		
	16584 INSULATOR, RADIATOR MOUNTING						
8708-9001	3FE..FJ62			16584-61010-	2		
	16584A SPACER, RADIATOR MOUNTING INSULATOR						
8708-9001	3FE..FJ62			90561-09005-	2		


*H,L—Cut hose to length as specified in remarks

FIG. 17-08 VACUUM PIPING

1L3

791+50M-01103

(8708-)

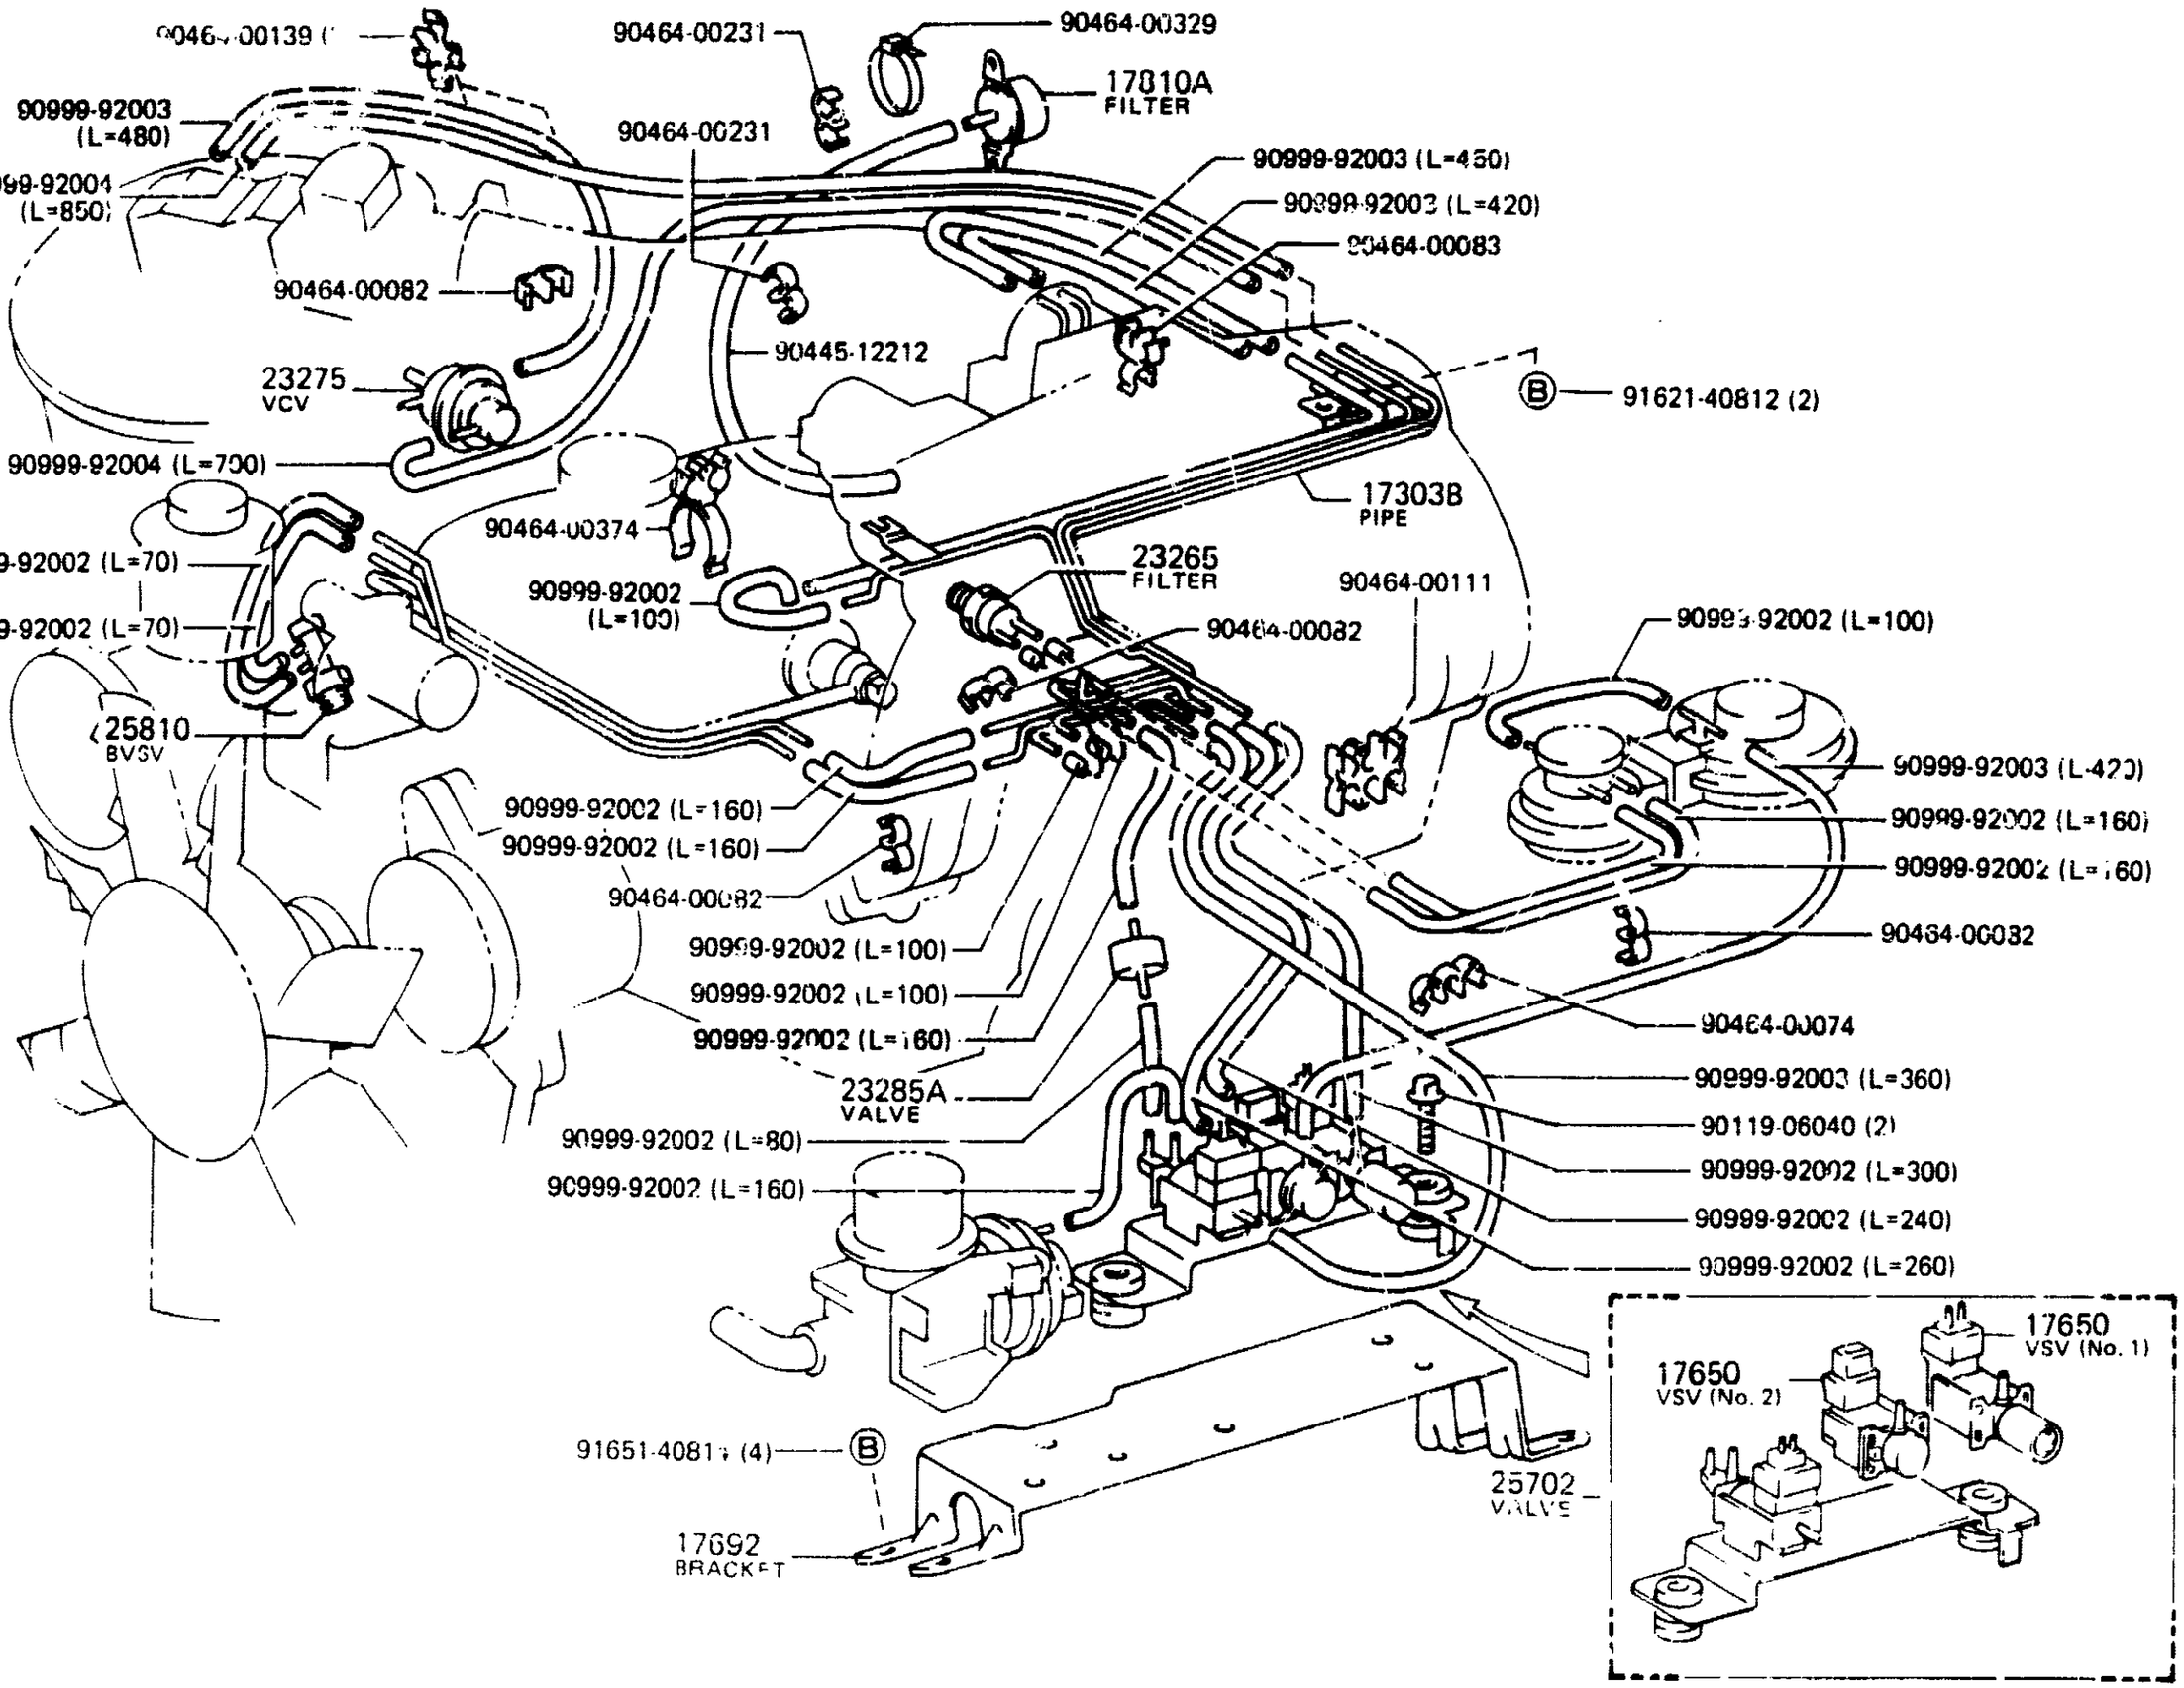

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	23280E	RING, O (FOR FUEL PRESSURE REGULATOR)					
8708-9001	3FE..FJ62			90301-07001-	1		
	23291	INSULATOR, INJECTOR VIBRATION					
8708-9001	3FE..FJ62			23291-73010-	6		
	23293	GASKET, COLD START INJECTOR					
8708-9001	3FE..FJ62			23293-74010-	1		
	23300E	HOSE, FUEL					
8708-9001	3FE..FJ62			90923-01349-	1		
	23300P	FILTER, FUEL (FOR SFI)					
8708-9001	3FE..FJ62			23300-69025-	1		
	23300T	GASKET (FOR FUEL FILTER)					
8708-9001	3FE..FJ62			90430-12005-	4		
	23300U	BOLT, UNION (FOR FUEL FILTER)					
8708-9001	3FE..FJ62			90401-12097-	2		
	23300V	HOSE, FUEL (FOR FUEL FILTER INLET)					
8708-9001	3FE..FJ62			90923-01350-	1		
	23801H	GASKET					
8708-9001	3FE..FJ62			90430-12005-	1		
	23801P	PIPE SUB-ASSY. FUEL, NO.1					
8708-9001	3FE..FJ62			23801-61030-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	23802B	PIPE SUB-ASSY, FUEL, NO.2					
8708-9001	3FE..FJ62			23802-61040-	1		
	23802C	BOLT, UNION					
8708-9001	3FE..FJ62			90401-08004-	1		
	23802D	GASKET					
8708-8710	3FE..FJ62	UPPER		90430-08009-	1		
8708-8710	3FE..FJ62	LOWER		90430-08011-	1		
8710-9001	3FE..FJ62			〃	2		
	23803B	PIPE SUB-ASSY, FULL, NO.3					
8708-9001	3FE..FJ62			23803-61010-	1		
	23803C	BOLT, UNION					
8708-9001	3FE..FJ62			90401-08004-	2		
	23803D	GASKET					
8708-8710	3FE..FJ62	UPPER		90430-08009-	2		
8708-8710	3FE..FJ62	LOWER		90430-08011-	2		
8710-9001	3FE..FJ62			〃	4		
	23807	PIPE SUB-ASSY, FUEL DELIVERY					
8708-9001	3FE..FJ62			23807-61010-	1		

FIGURE NUMBER INDEX


L16

LOCATION	FIG. No.	SUMMARY
		TOOL GROUP
1A1	09-01	STANDARD TOOL
		ENGINE GROUP
1C1	11-01	PARTIAL ENGINE ASSEMBLY
1D1	11-02	SHORT BLOCK ASSEMBLY
1E1	11-03	ENGINE OVERHAUL GASKET KIT
1F1	11-04	CYLINDER HEAD
1H1	11-05	CYLINDER BLOCK
1J1	11-06	TIMING GEAR COVER & REAR END PLATE
1K1	11-07	MOUNTING
1L1	12-01	VENTILATION HOSE
1M1	13-01	CRANKSHAFT & PISTON
1C2	13-02	CAMSHAFT & VALVE
1E2	15-01	OIL PUMP
1G2	15-02	OIL FILTER
1H2	15-03	OIL COOLER
1I2	16-01	WATER PUMP
1J2	16-03	RADIATOR & WATER OUTLET
1A3	16-05	V BELT
1B3	17-01	MANIFOLD
1D3	17-02	EXHAUST PIPE
1F3	17-03	AIR CLEANER
1H3	17-05	AIR PUMP
1I3	17-06	MANIFOLD AIR INJECTION SYSTEM
1K3	17-08	VACUUM PIPING
1A4	17-09	CAUTION PLATE & LABEL PLATE
1B4	19-01	IGNITION COIL & SPARK PLUG
1D4	19-02	DISTRIBUTOR
1C4	19-03	ALTERNATOR
1G4	19-04	STARTER
		FUEL GROUP
1I4	22-11	FUEL INJECTION SYSTEM
1M4	25-01	EXHAUST GAS RECIRCULATION SYSTEM

LOCATION	FIG. No.	SUMMARY
		POWER TRAIN · CHASSIS GROUP
2A1	33-12	SHIFT LEVER & RETAINER
2D1	35-01	TRANSAXLE OR TRANSMISSION ASSY & GASKET KIT (ATM)
2E1	35-02	TORQUE CONVERTER, FRONT OIL PUMP & CHAIN (ATM)
2G1	35-03	TRANSMISSION CASE & OIL PAN (ATM)
2J1	35-05	SPEEDOMETER DRIVEN GEAR (ATM)
2K1	35-06	OVERDRIVE GEAR (ATM)
2A2	35-07	BRAKE BAND & MULTIPLE DISC CLUTCH (ATM)
2D2	35-08	CENTER SUPPORT & PLANETARY SUN GEAR (ATM)
2F2	35-09	BRAKE NO. 3, 1ST & REVERSE BRAKE (ATM)
2G2	35-10	PLANETARY GEAR, REVERSE PISTON & COUNTER GEAR (ATM)
2I2	35-11	REAR OIL PUMP & GOVERNOR (ATM)
2K2	35-12	VALVE BODY & OIL STRAINER (ATM)
2I3	35-13	THROTTLE LINK & VALVE LEVER (ATM)
2K3	35-14	OIL COOLER & TUBE (ATM)
2M3	36-08	TRANSFER ASSEMBLY & GASKET KIT
2A4	36-09	TRANSFER CASE & EXTENSION HOUSING
2C4	36-10	TRANSFER GEAR
2F4	36-11	TRANSFER LEVER & SHIFT ROD
2H4	36-12	DIAPHRAGM CYLINDER
2J4	36-16	TRANSFER VACUUM PIPING
2K4	37-01	PROPELLER SHAFT & UNIVERSAL JOINT
2M4	41-01	REAR AXLE HOUSING & DIFFERENTIAL
2H5	41-02	REAR AXLE SHAFT & HUB
2K5	41-03	DISK WHEEL & WHEEL CAP
2M5	42-01	DIFFERENTIAL LOCK CONTROL
2C6	43-01	FRONT AXLE HOUSING & DIFFERENTIAL
2J6	43-02	DRIVE SHAFT
2K6	43-03	FRONT AXLE HUB
2M6	45-01	STEERING COLUMN & SHAFT
2D7	45-02	VANE PUMP & RESERVOIR

LOCATION	FIG. No.	SUMMARY
2G7	45-03	OIL COOLER & TUBE
2H7	45-04	STEERING WHEEL
2I7	45-05	STEERING GEAR & LINK
2A8	46-01	PARKING BRAKE & CABLE
2C8	47-01	BRAKE PEDAL & BRACKET
2D8	47-02	BRAKE MASTER CYLINDER
2F8	47-03	BRAKE BOOSTER
2H8	47-05	FRONT DISC BRAKE CALIPER & DUST COVER
2J8	47-06	REAR BACKING PLATE & WHEEL CYLINDER
2M8	47-08	BRAKE TUBE & CLAMP
2E9	48-02	FRONT AXLE ARM & STEERING KNUCKLE
2G9	48-03	FRONT SPRING & SHOCK ABSORBER
2K9	48-04	REAR SPRING & SHOCK ABSORBER

(8708-)

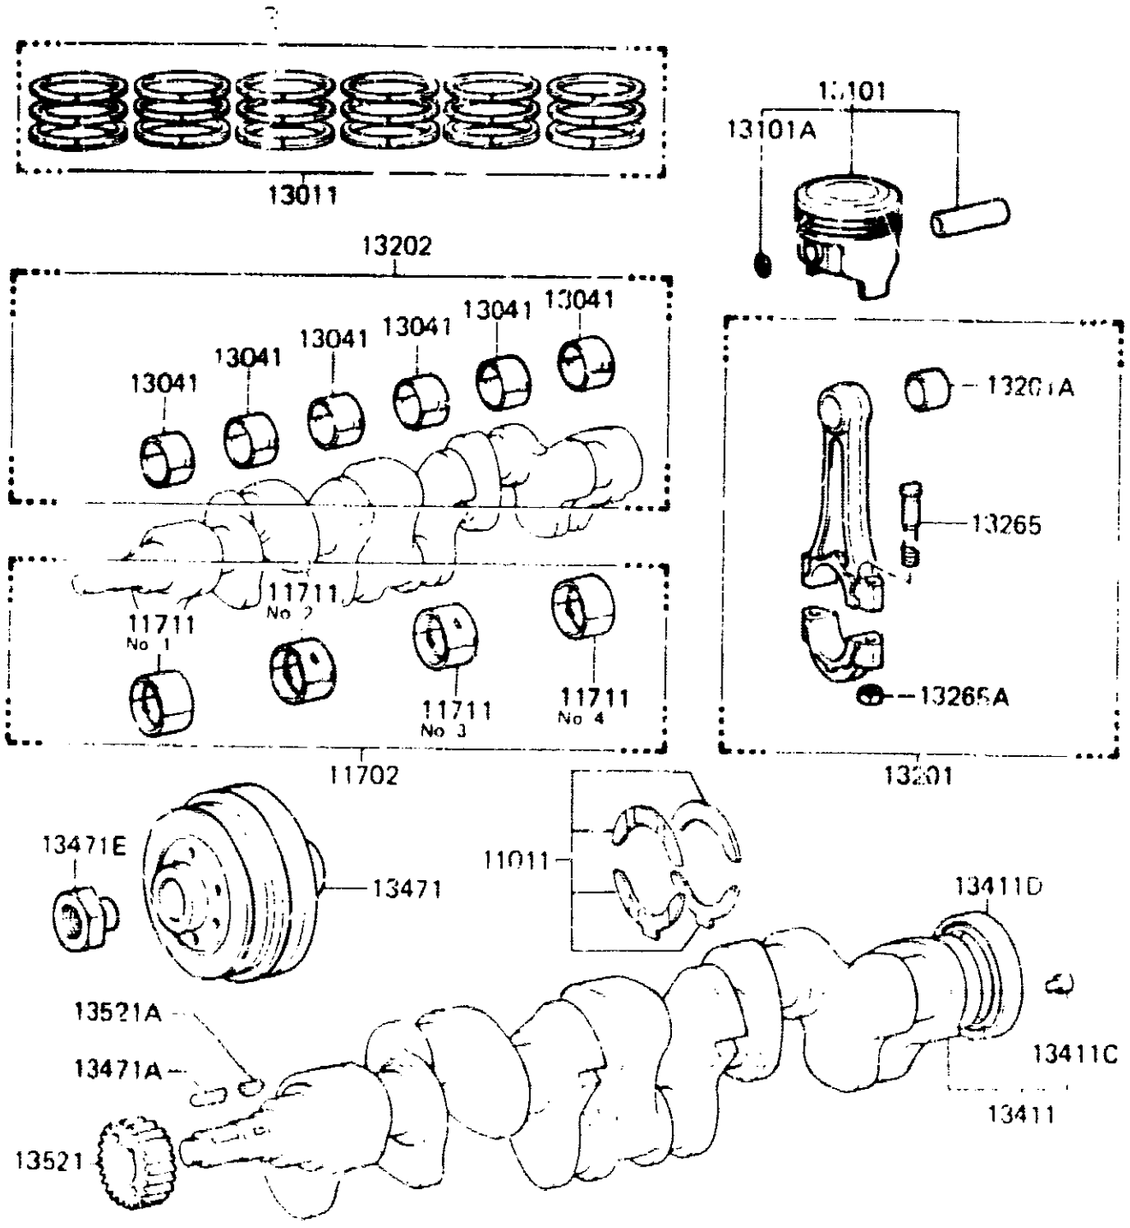

MA 9868

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	11011	WASHER SET, CRANKSHAFT THRUST					
8708-9001	3FE..FJ62	STD		11011-61010-	1		
8708-9001	3FE..FJ62	O/S 0.125		11012-61010-	1		
8708-9001	3FE..FJ62	O/S 0.250		11013-61010-	1		
	11702	BEARING SET, CRANKSHAFT					
8708-9001	3FE..FJ62	U/S 0.25		11704-61010-	1		
8708-9001	3FE..FJ62	U/S 0.50		11705-61010-	1		
	11711	BEARING, CRANKSHAFT					
8708-9001	3FE..FJ62	MARK 1,NO.2		11071-61010-01	1		
8708-9001	3FE..FJ62	MARK 2,NO.2		11071-61010-02	1		
8708-9001	3FE..FJ62	MARK 3,NO.2		11071-61010-03	1		
8708-9001	3FE..FJ62	MARK 4,NO.2		11071-61010-04	1		
8708-9001	3FE..FJ62	MARK 5,NO.2		11071-61010-05	1		
8708-9001	3FE..FJ62	MARK 1,NO.3		11072-61010-01	1		
8708-9001	3FE..FJ62	MARK 2,NO.3		11072-61010-02	1		
8708-9001	3FE..FJ62	MARK 3,NO.3		11072-61010-03	1		
8708-9001	3FE..FJ62	MARK 4,NO.3		11072-61010-04	1		
8708-9001	3FE..FJ62	MARK 5,NO.3		11072-61010-05	1		
8708-9001	3FE..FJ62	MARK 1,NO.4		11073-61010-01	1		
8708-9001	3FE..FJ62	MARK 2,NO.4		11073-61010-02	1		
8708-9001	3FE..FJ62	MARK 3,NO.4		11073-61010-03	1		
8708-9001	3FE..FJ62	MARK 4,NO.4		11073-61010-04	1		
8708-9001	3FE..FJ62	MARK 5,NO.4		11073-61010-05	1		
8708-9001	3FE..FJ62	MARK 1,NO.1		11701-61010-01	1		
8708-9001	3FE..FJ62	MARK 2,NO.1		11701-61010-02	1		


	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		16585	BRACKET, RADIATOR, NO.3					
	8708-9001	3FE..FJ62			16585-61010-	1		
		16586	BRACKET, RADIATOR, NO.4					
	8708-9001	3FE..FJ62			16586-61010-	1		
		16611	BRACKET, RADIATOR RESERVE TANK					
	8708-9001	3FE..FJ62			16611-61020-	1		
		16701	SHROUD SUB-ASSY, FAN					
	8708-8808	3FE..FJ62			16711-61240-	1		
					(16711-61241-)	1		
A	8808-9001	3FE..FJ62..WGG			16711-61241-	1		
		538098	DUCT SUB-ASSY, COOLING FAN AIR					
	8708-9001	FJ62			53809-90A00-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	17303B	PIPE SUB-ASSY, AIR, NO.1					
8708-9001	3FE..FJ62			17303-61020-	1		
	17650	VALVE ASSY, VACUUM SWITCHING					
8708-9001	3FE..FJ62	NO.1,NO.1		25860-61010-	1		
8708-9001	3FE..FJ62	NO.2,NO.2		90910-12079-	1		
	17692	BRACKET, VACUUM CONTROL VALVE, NO.2					
8708-9001	3FE..FJ62			17692-61020-	1		
	17810A	FILTER ASSY, AIR					
8708-9001	3FE..FJ62			17810-61010-	1		
	23265	FILTER, GAS, NO.1					
8708-9001	3FE..FJ62			90917-11023-	1		
	23275	VALVE, VACUUM CONTROL, NO.1					
8708-9001	3FE..FJ62			90925-03057-	1		
	23285A	VALVE, CHECK, NO.1					
8708-9001	3FE..FJ62			90917-10049-	1		
	25702	VALVE SET, EMISSION CONTROL, NO.2					
8708-9001	3FE..FJ62			25702-61010-	1		
	25819	VALVE ASSY, BIMETAL					
8708-9001	3FE..FJ62			25820-13020-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

(8708-)

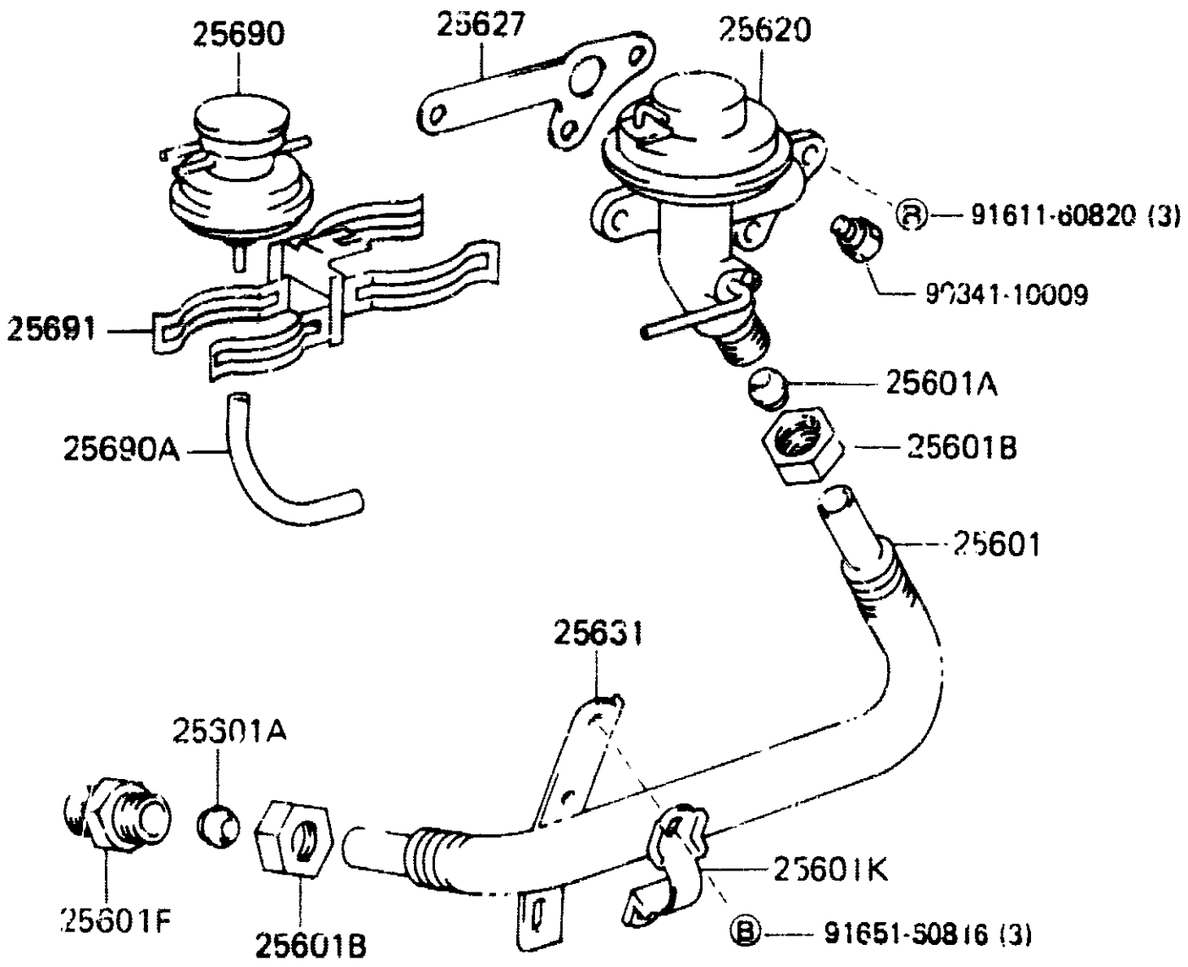

MA 9905-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	25601	PIPE SUB-ASSY, EGR, NO.1					
8708-9001	3FE..FJ62			25611-61050-	1		
	25601A	SLEEVE, BALL, EGR PIPE, NO.1					
8708-9001	3FE..FJ62			90410-18002-	2		
	25601B	NUT, UNION, EGR PIPE, NO.1					
8708-9001	3FE..FJ62			90402-26002-	2		
	25601F	UNION (FOR EGR PIPE, NO.1)					
8708-9001	3FE..FJ62			90404-26003-	1		
	25601K	CLAMP (FOR EGR PIPE)					
8708-9001	3FE..FJ62			90929-01189-	1		
	25620	VALVE ASSY, EGR					
8708-9001	3FE..FJ62			25620-61110-	1		
	25627	GASKET, EGR VALVE					
8708-9001	3FE..FJ62			25627-61010-	1		
	25631	STAY, EGR PIPE, NO.1					
8708-9001	3FE..FJ62			25631-61040-	1		
	25690	MODULATOR ASSY, EGR VACUUM					
8708-9001	3FE..FJ62			25870-61020-	1		
	25690A	HOSE (FOR EGR VACUUM MODULATOR)					
8708-9001	3FE..FJ62			25695-61010	1		

FIGURE NUMBER INDEX

M16


LOCATION	FIG. No.	SUMMARY
		BODY GROUP
3A1	51 – 51	FRAME
3C1	51 52	SUSPENSION CROSSMEMBER & UNDER COVER
3D1	51 53	SPARE WHEEL CARRIER
3E1	52 – 51	CAB MOUNTING & BODY MOUNTING
3G1	52 52	FRONT BUMPER & BUMPER STAY
3H1	52 – 53	REAR BUMPER & BUMPER STAY
3I1	53 – 51	RADIATOR GRILLE
3J1	53 53	HOOD & FRONT FENDER
3L1	53 54	HOOD LOCK & HINGE
3M1	53 55	FRONT FENDER APRON & DASH PANEL
3B2	55 – 51	INSTRUMENT PANEL & GLOVE COMPARTMENT
3F2	55 – 53	COWL PANEL & WINDSHIELD GLASS
3H2	57 51	FLOOR MEMBER
3I2	58 51	FRONT FLOOR PANEL & FRONT FLOOR MEMBER
3L2	58 52	REAR FLOOR PANEL & REAR FLOOR MEMBER
3A3	58 – 53	FLOOR INSULATOR
3B3	58 54	FLOOR MAT & SILENCER PAD
3D3	58 – 55	CONSOLE BOX & BRACKET
3G3	61 – 51	SIDE MEMBER
3K3	61 – 52	SIDE WINDOW
3L3	61 53	ROOF PANEL & BACK PANEL
3A4	61 – 55	REAR VENTILATOR & ROOF VENTILATOR
3B4	64 – 51	INSIDE TRIM BOARD
3E4	64 – 52	ROOF HEADLINING & SILENCER PAD
3G4	64 – 55	DECK BOARD & DECK TRIM COVER
3H4	67 – 51	FRONT DOOR PANEL & GLASS
3L4	67 53	FRONT DOOR LOCK & HANDLE
3A5	67 – 54	FRONT DOOR WINDOW REGULATOR & HINGE
3C5	67 – 55	REAR DOOR PANEL & GLASS
3F5	67 – 56	REAR DOOR LOCK & HANDLE
3H5	67 – 57	REAR DOOR WINDOW REGULATOR & HINGE
3J5	67 61	BACK DOOR PANEL & GLASS
3L5	67 62	BACK DOOR LOCK & HINGE
3A6	67 65	LOCK CYLINDER SET
3C6	71 – 51	SEAT & SEAT TRACK
3H6	71 – 52	SEAT BELT
3J6	74 – 51	ARMREST & VISOR
3L6	74 – 54	BATTERY CARRIER
3M6	74 55	CAUTION PLATE
3A7	74 – 56	ASH RECEPTACLE
3B7	75 51	EMBLEM & NAME PLATE
3D7	75 – 52	MOULDING
3G7	75 54	TOOL BOX & LICENSE PLATE BRACKET
3H7	77 – 51	FUEL TANK & TUBE
3L7	78 – 51	ACCELERATOR LINK
		ELECTRICAL GROUP
3A8	81 – 01	HEADLAMP
3C8	81 – 03	FRONT TURN SIGNAL LAMP
3D8	81 – 04	FRONT CLEARANCE LAMP
3E8	81 – 05	FRONT MARKER LAMP
3F8	81 11	REAR COMBINATION LAMP
3H8	81 – 13	REAR LICENSE PLATE LAMP
3I8	81 – 14	REAR SIDE MARKER LAMP
3J8	81 – 21	INTERIOR LAMP
3K8	82 01	BATTERY & BATTERY CABLE
3L8	82 02	WIRING & CLAMP
3C9	83 01	METER
3E9	83 02	INDICATOR
3F9	84 01	SWITCH & RELAY
3L9	84 04	ELECTRONIC FUEL INJECTION SYSTEM
3A10	85 01	WINDSHIELD WIPER
3C10	85 02	REAR WIPER
3D10	85 03	WINDSHIELD WASHER
3F10	85 04	REAR WASHER
3G10	85 – 5	HEADLAMP CLEANER
3I10	85 – 11	DOOR MOTOR & DOOR SOLENOID
3J10	86 – 01	RADIO & TAPE PLAYER
3L10	86 – 02	SPEAKER
3A11	86 04	ANTENNA
3B11	86 11	HORN
3C11	87 01	MIRROR
3E11	87 – 12	HEATING & AIR CONDITIONING – HEATER UNIT & BLOWER
3G11	87 – 14	HEATING & AIR CONDITIONING – COOLER UNIT
3I11	87 – 15	HEATING & AIR CONDITIONING – CONTROL & AIR DUCT
3K11	87 – 16	HEATING & AIR CONDITIONING – WATER PIPING
3M11	87 – 18	HEATING & AIR CONDITIONING – COOLER PIPING
3A12	87 – 19	HEATING & AIR CONDITIONING – COMPRESSOR

FIG. 33-12 SHIFT LEVER & RETAINER

2A1


791430M-01119

(8708-)

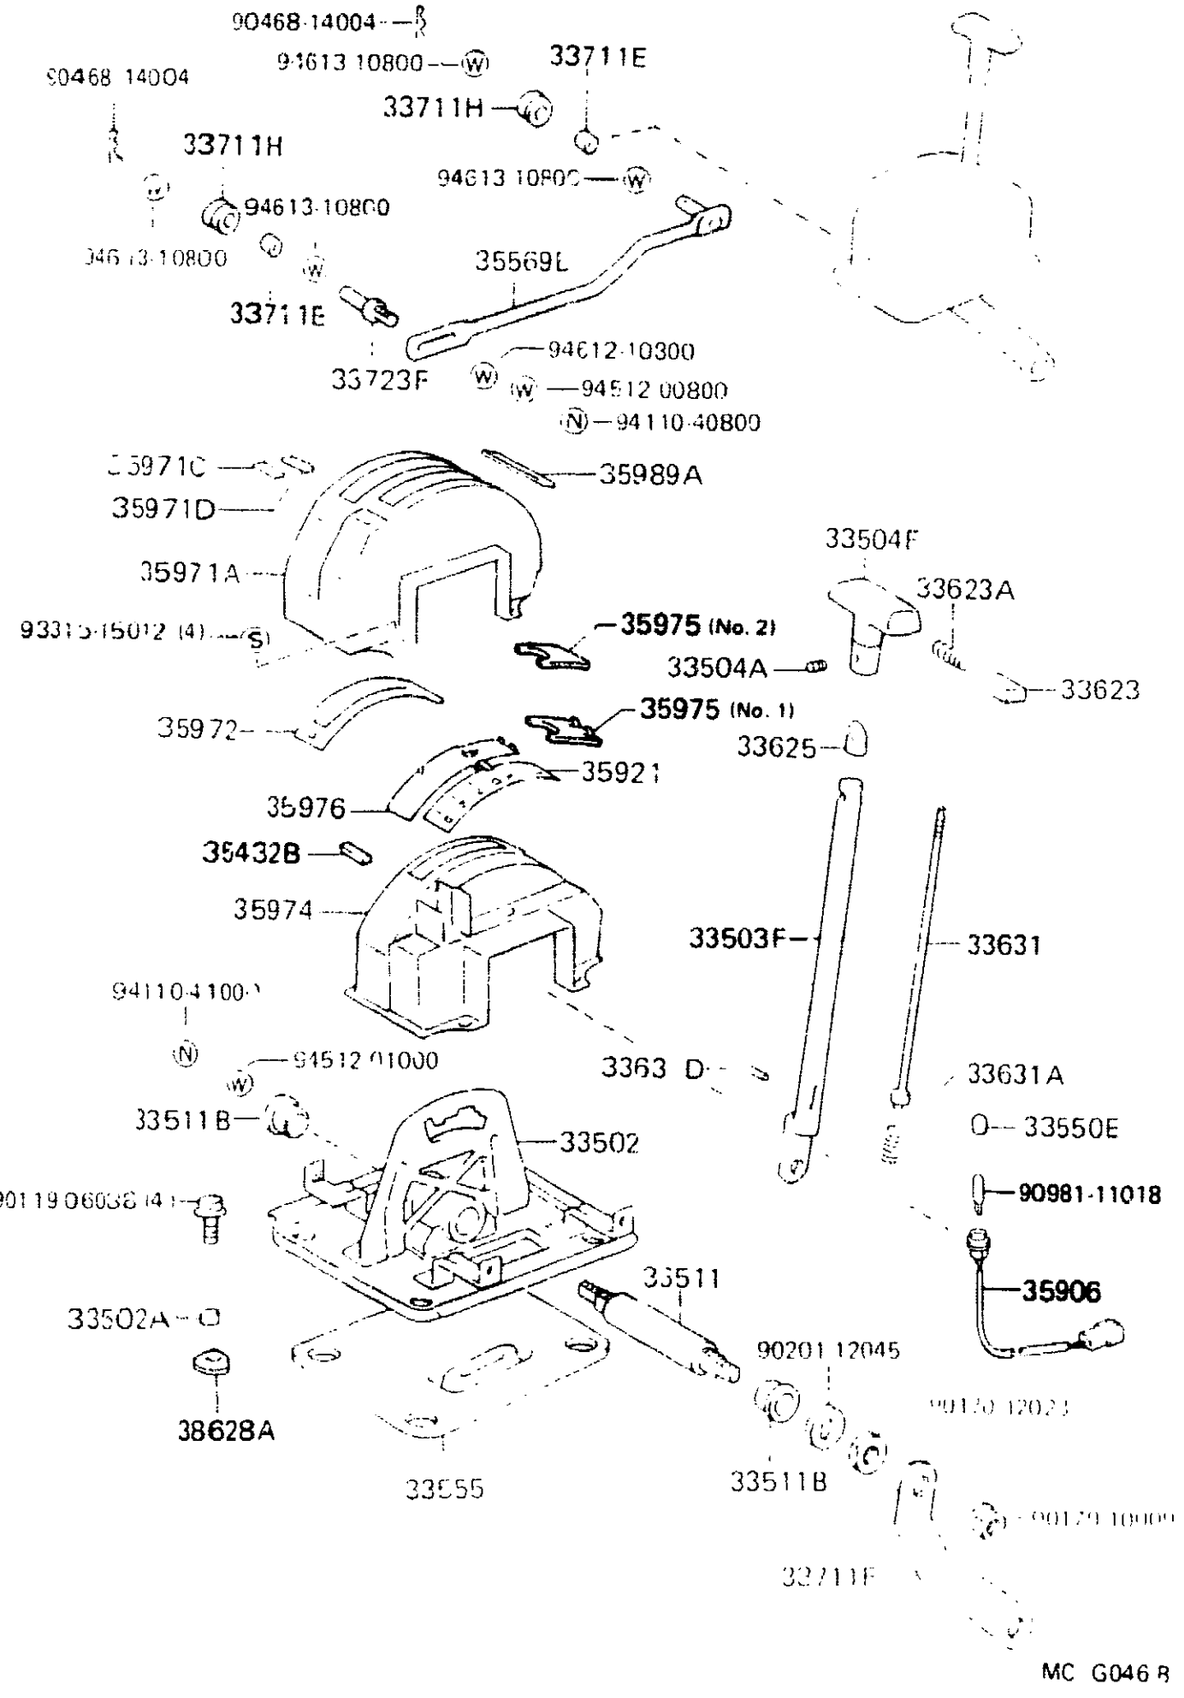

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	33502	PLATE SUB-ASSY, SHIFT LEVER					
8708-9001	FJ62			33502-60040-	1		
	33502A	COLLAR (FOR FLOOR SHIFT SETTING)					
8708-9001	FJ62			90387-0606E-	4		
	33503F	LEVER SUB-ASSY, SHIFT (FOR FLOOR SHIFT)					
8708-9001	FJ62			33503-60020-	1		
	33504A	BOLT OR PIN (FOR SHIFT LEVER KNOB SETTING)					
8708-9001	FJ62			90113-05034-	2		
	33504F	KNOB SUB-ASSY, SHIFT LEVER (FOR FLOOR SHIFT)					
8708-9001	FJ62	BLACK(TRIM1)		33542-30110-01	1		
8708-9001	FJ62	SEPIA BROWN(TRIM4)		33542-30110-36	1		
	33511	SHAFT, CONTROL (FOR FLOOR SHIFT)					
8708-9001	FJ62			33511-60060-	1		
	33511B	BUSH (FOR CONTROL SHAFT)					
8708-9001	FJ62			90385-16008-	2		
	33550E	CAP (FOR FLOOR SHIFT POSITION INDICATOR LAMP)					
8708-9001	FJ62			90339-04014-	1		
	33555	BOOT, SHIFT LEVER					
8708-9001	FJ62			33555-60040-	1		
	33623	BUTTON, SHIFT LEVER KNOB					
8708-9001	FJ62	BROWN(TRIM4)		33623-30040-56	1		

(8708-)
A440F

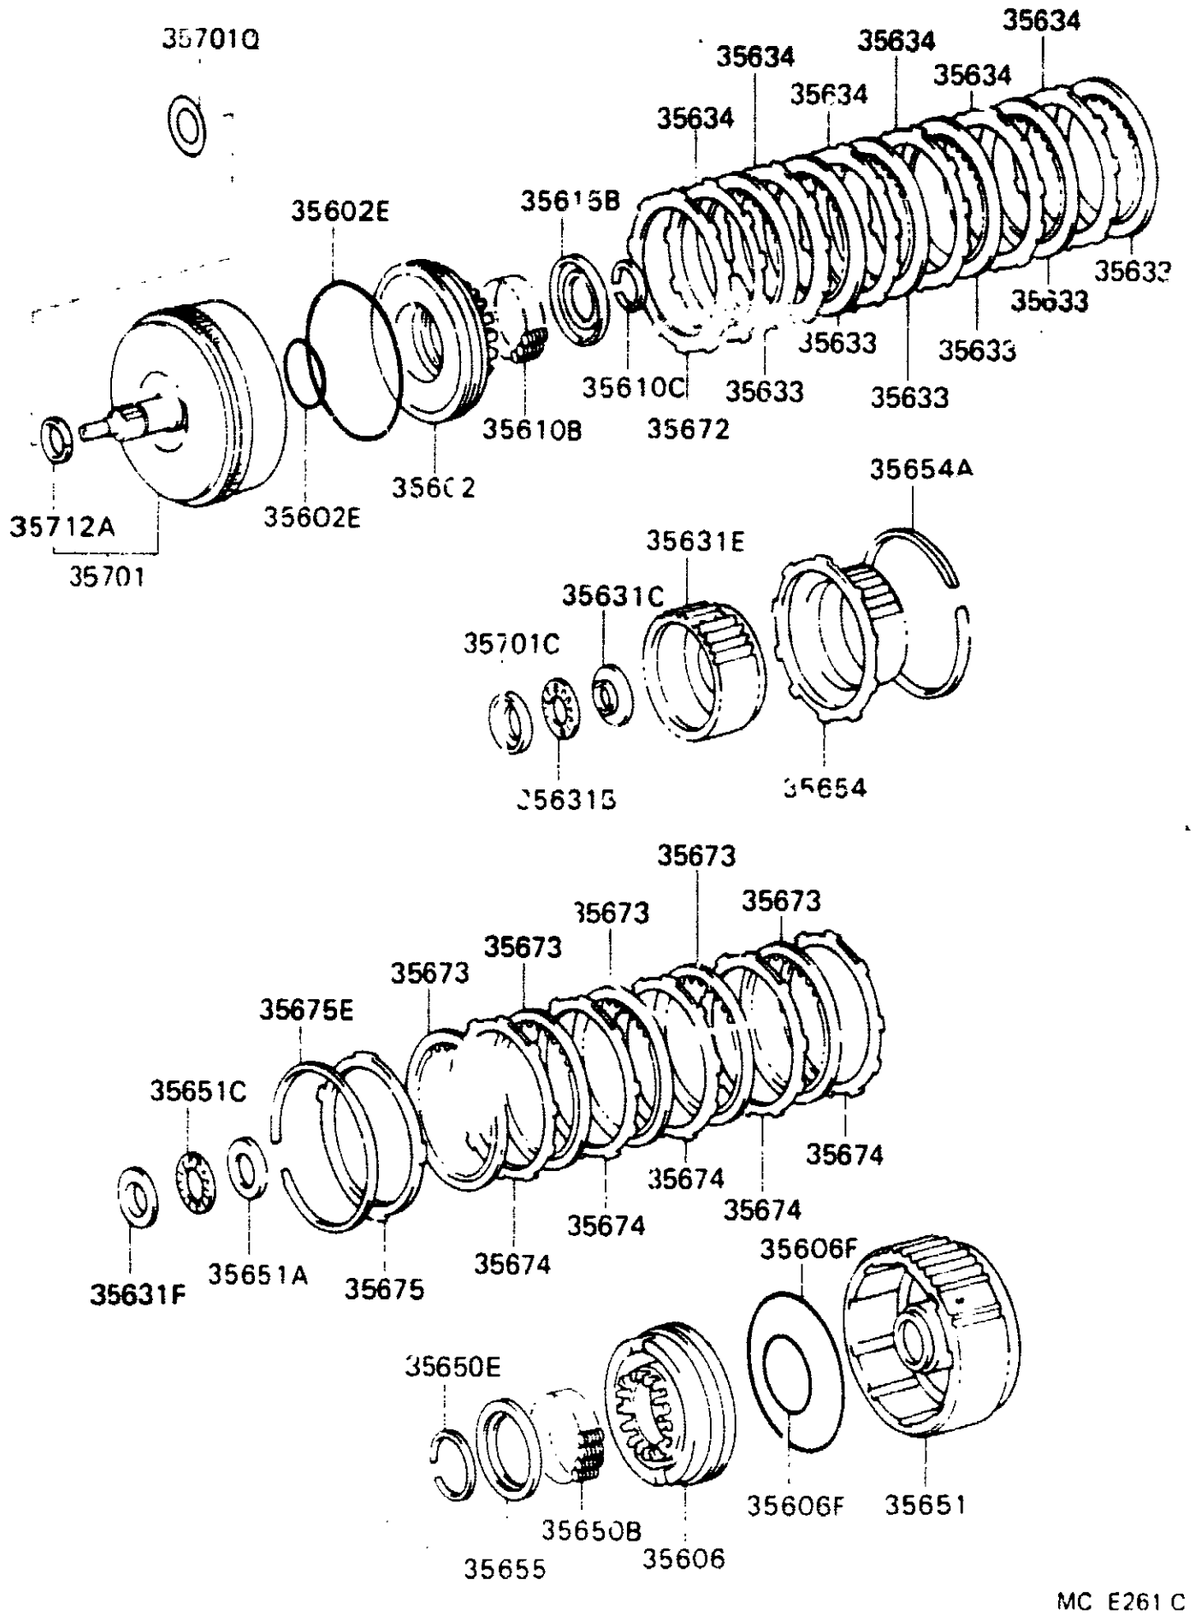


MC E261 C

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35602	PISTON SUB-ASSY, FRONT CLUTCH					
8708-9001	FJ62			35602-36010-	1		
	35602E	RING, O (FOR FRONT CLUTCH PISTON)					
8708-9001	FJ62	INNER		90301-62004-	1		
8708-9001	FJ62	OUTER		90301-99027-	1		
	35606	PISTON SUB-ASSY, REAR CLUTCH					
8708-9001	FJ62			35606-36010-	1		
	35606F	RING, O (FOR REAR CLUTCH PISTON)					
8708-9001	FJ62	INNER		90301-62004-	1		
8708-9001	FJ62	OUTER		90301-99028-	1		
	35610B	SPRING, COMPRESSION (FOR FRONT CLUTCH PISTON RETURN)					
8708-9001	FJ62			90501-10092-	22		
	35610C	RING, SHAFT SNAP (FOR FRONT CLUTCH PISTON RETURN SPRING)					
8708-9001	FJ62			90520-50001-	1		
	35615B	SEAT, FRONT CLUTCH PISTON RETURN SPRING					
8708-9001	FJ62			35615-36010-	1		
	35631B	BEARING, THRUST (FRONT CLUTCH HUB)					
8708-9001	FJ62			90374-34001-	2		
	35631C	RACE, THRUST BEARING (FOR FRONT CLUTCH HUB FRONT)					
8708-9001	FJ62			35789-36090-	2		
	35631E	HUB, FRONT CLUTCH					
8708-9001	FJ62			35631-36010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35211B	SPRING, COMPRESSION (FOR LOCK UP SIGNAL VALVE)					
8708-9001	FJ62			90501-12090-	1		
	35212	VALVE, LOCK UP RELAY					
8708-9001	FJ62			35212-36010-	1		
	35212B	SPRING, COMPRESSION (FOR LOCK UP RELAY VALVE)					
8708-9001	FJ62			90501-11024-	1		
	35213	VALVE, LOCK UP RELAY CONTROL					
8708-9001	FJ62			35213-36010-	1		
	35215B	PIN, STRAIGHT (FOR LOCK UP RELAY VALVE SLEEVE)					
8708-9001	FJ62	SLEEVE NO.2 SIDE		90250-03051-	1		
8708-900	62	SLEEVE NO.1 SIDE		90250-04054-	1		
	35215C	SLEEVE, LOCK UP RELAY VALVE, NO.1					
8708-9001	FJ62			35215-36010-	1		
	35216A	SLEEVE, LOCK UP RELAY VALVE, NO.2					
8708-9001	FJ62			35216-36010-	1		
	35219	PLUG, LOCK UP SIGNAL VALVE					
8708-8709	FJ62			# 35219-60010-	1		
				(35219-60011-)	1		
8709-9001	FJ62			35219-60011-	1		
	35222	PLATE, LOCK UP RELAY VALVE BODY					
8708-9001	FJ62			35222-60010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35223	ASKET, LOCK UP RELAY VALVE BODY					
8708-9001	FJ62			35223-36010-	1		
	35226	SEAT, LOCK UP SIGNAL VALVE SPRING					
8708-8709	FJ62			# 35226-36010-	1		
				(35226-36011-)	1		
8709-9001	FJ62			35226-36011-	1		
	35231	TUBE, LOCK UP SIGNAL VALVE APPLY					
8708-9001	FJ62			35231-36010-	1		
	35303	STRAINER SUB-ASSY, OIL					
8708-9001	FJ62			35303-60010-	1		
	35339	GASKET, OIL STRAINER					
8708-9001	FJ62			35339-36010-	1		
	35396	STRAINER, THROTTLE OIL					
8708-9001	FJ62			35396-36010-	1		
	35405	PLUG SUB-ASSY, SECONDARY DOWN SHIFT					
8708-9001	FJ62			35405-36010-	1		
	35405A	SPRING, COMPRESSION (FOR SECONDARY DOWN SHIFT PLUG)					
8708-9001	FJ62			90501-10094-	1		
	35408	PLUG SUB-ASSY, PRIMARY DOWN SHIFT					
8708-9001	FJ62			35408-3[illegible]			
	35408A	SPRING, COMPRESSION (FOR PRIMARY DOWN SHIFT PLUG)					
8708-9001	FJ62			90501-11030-	1		

(8708-)

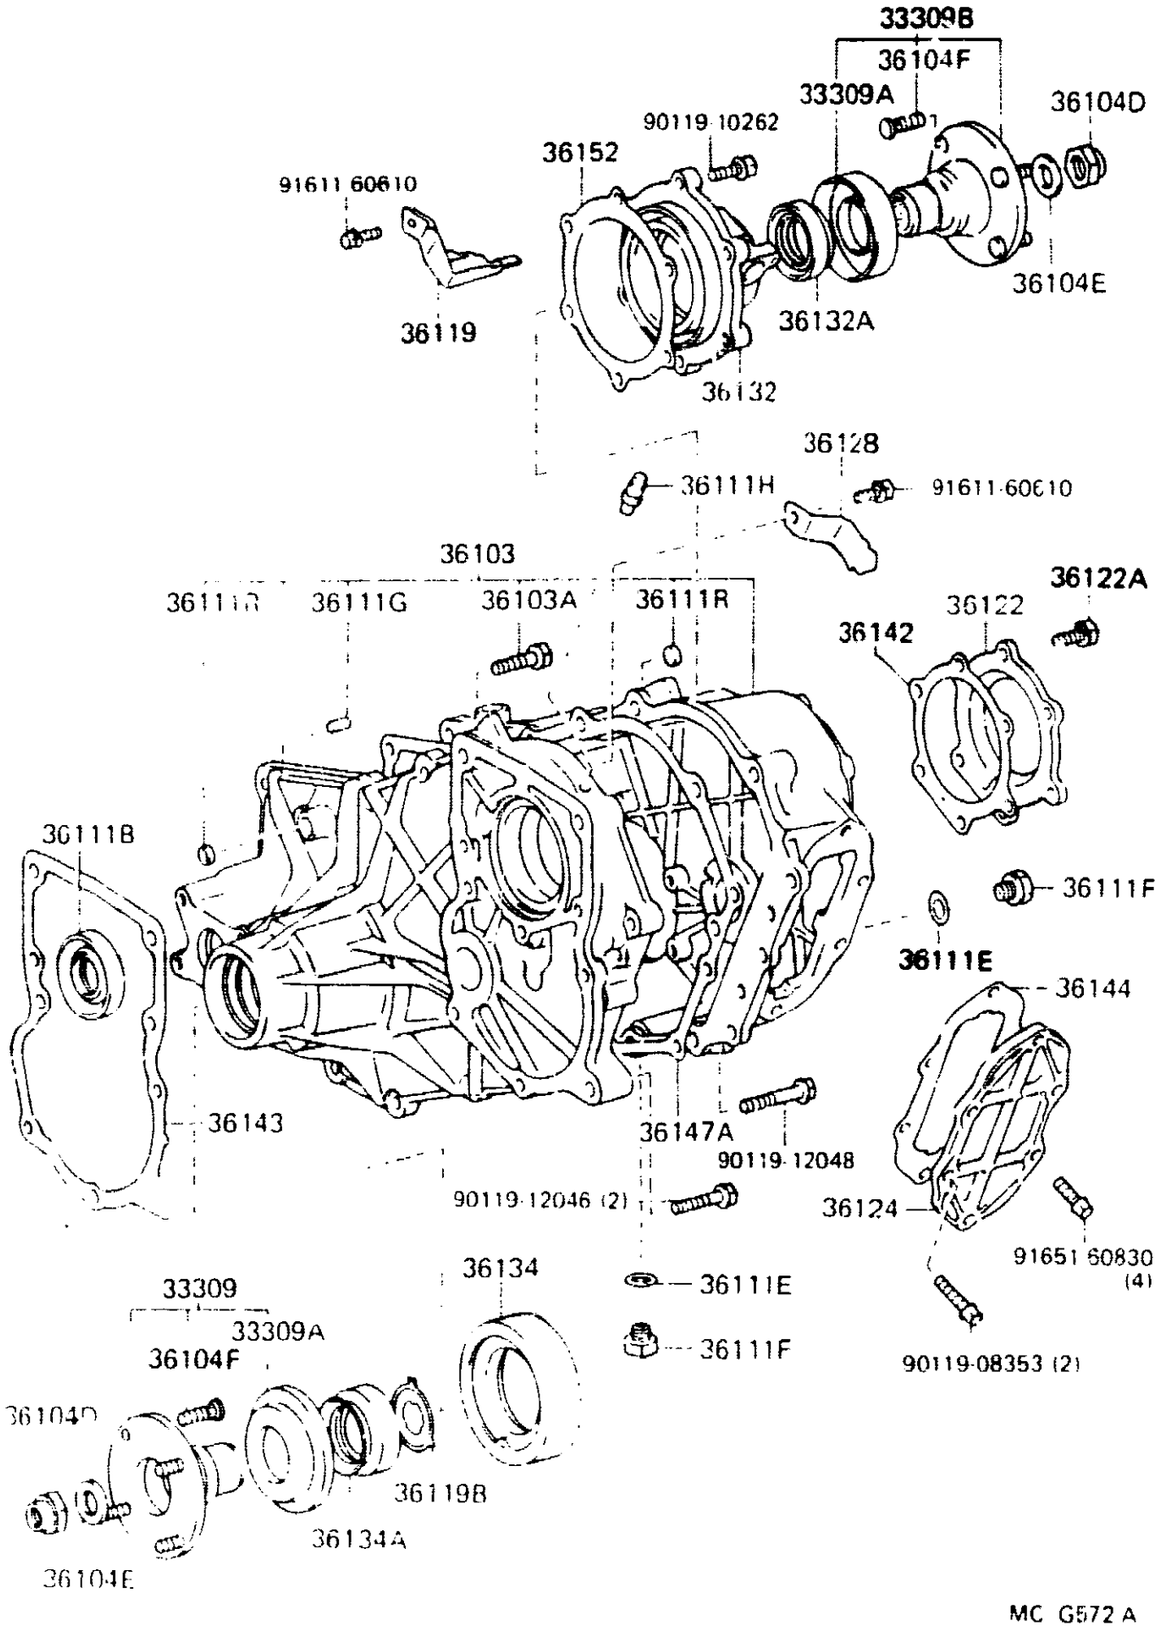


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	33309 FLANGE SUB-ASSY, TRANSFER OUTPUT SHAFT COMPANION						
8708-9001	FJ62			33309-60070-	1		
	33309A DEFLECTOR, DUST						
8708-9001	FJ62	FR		33325-60010-	1		
8708-9001	FJ62	RR		33325-60021-	1		
	33309B FLANGE SUB-ASSY, OUTPUT SHAFT COMPANION						
8708-9001	FJ62			33309-60041-	1		
	36103 CASE SUB-ASSY, TRANSFER						
8708-9001	FJ62			36103-60160-	1		
	36103A BOLT (FOR TRANSFER CASE)						
8708-9001	FJ62	*10-1.25PX30-30		91651-61030-	3		
8708-9001	FJ62	*10-1.25PX40-30		91651-61040-	8		
	36104D NUT (FOR TRANSFER OUTPUT SHAFT)						
8708-9001	FJ62			90179-22005-	2		
	36104E WASHER, PLATE (FOR TRANSFER OUTPUT SHAFT)						
8708-9001	FJ62			90201-22005-	2		
	36104F BOLT (FOR TRANSFER OUTPUT SHAFT COMPANION FLANGE)						
8708-9001	FJ62			90114-11124-	8		
	36111B SEAL, OIL (FOR TRANSFER CASE)						
8708-9001	FJ62			90316-48003-	1		
	36111E GASKET (FOR TRANSFER CASE)						
8708-9001	FJ62			90430-18008-	2		

* — Px — = Outside diameter – Pitch × Bolt length – Thread length

(8708-)

ILLUST.NO. 20F3

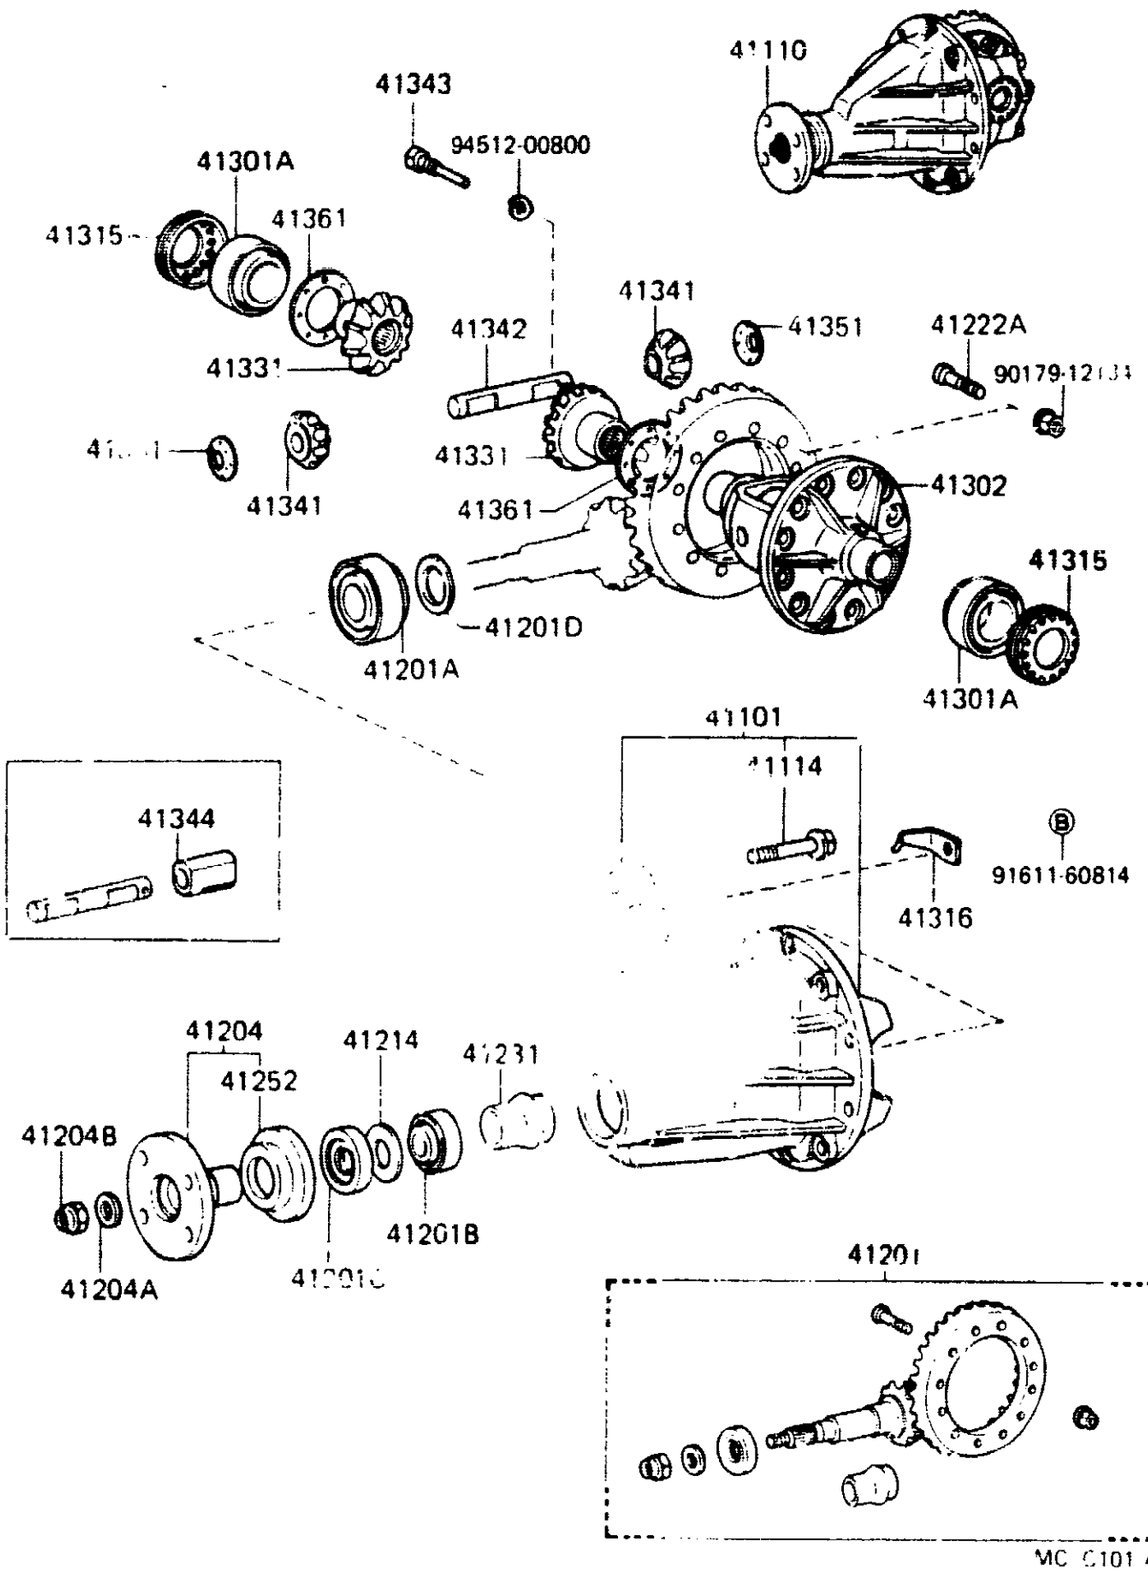


MC C101 A

(8708-)

W/ Differential Lock

ILLUST.NO. 20F3

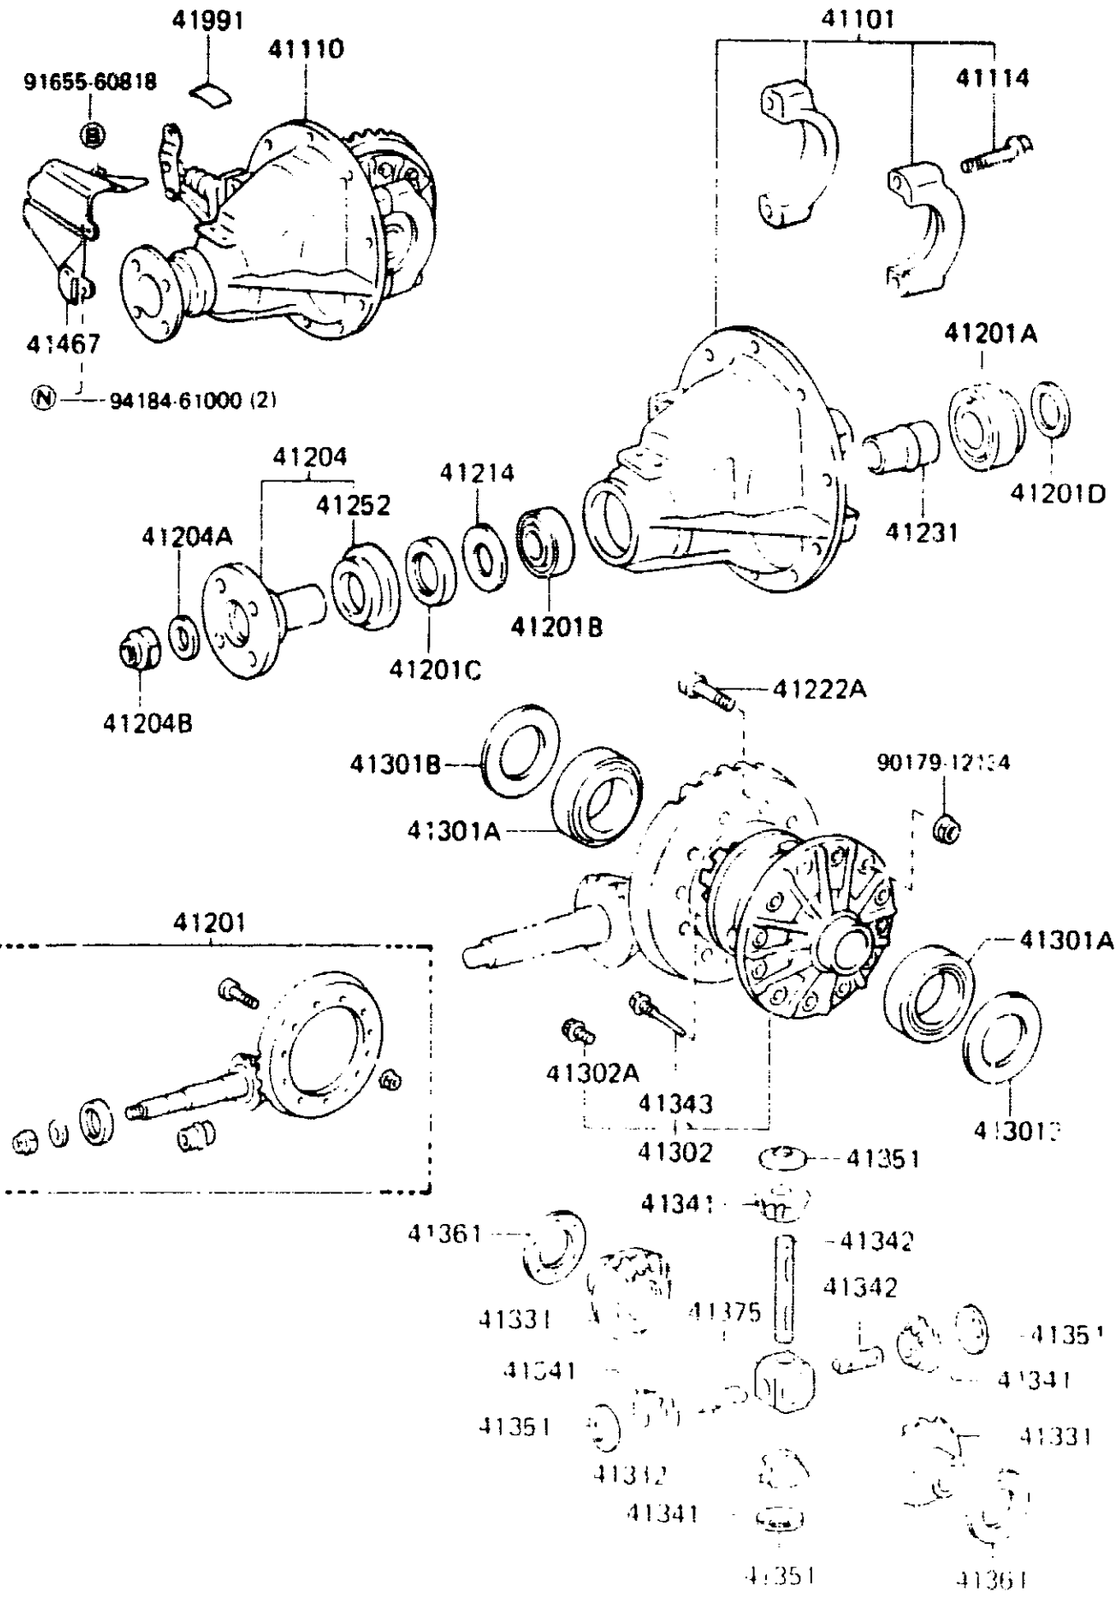

MC C382 A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	42506	ROD SUB-ASSY, DIFFERENTIAL LOCK CABLE LINK					
8708-9001	FJ62			42506-60010-	2		
	42510C	PIN, W/HOLE (FOR DIFFERENTIAL LOCK LEVER)					
8708-9001	FJ62			90240-10148-	2		
	42511	LEVER, DIFFERENTIAL LOCK, FRONT					
8708-9001	FJ62			42511-60010-	1		
	42512	LEVER, DIFFERENTIAL LOCK, REAR					
8708-9001	FJ62			42512-60010-	1		
	42513	BRACKET, DIFFERENTIAL LOCK					
8708-9001	FJ62	W(DIFFERENTIAL LOCK)		42513-60010-	1		
	42513A	GROMMET (FOR DIFFERENTIAL LOCK LEVER)					
8708-9001	FJ62			90480-17019-	2		
	42513B	GROMMET (FOR DIFFERENTIAL LOCK BRACKET)					
8708-9001	FJ62			90480-13012-	3		
	42513C	COLLER (FOR DIFFERENTIAL LOCK BRACKET)					
8708-9001	FJ62			90387-09011-	3		
	42514	KNOB, DIFFERENTIAL LOCK, FRONT					
8708-9001	FJ62			42514-60010-	1		
	42515	KNOB, DIFFERENTIAL LOCK, REAR					
8708-9001	FJ62			42515-60010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	42516	LINK, DIFFERENTIAL LOCK, FRONT					
8708-9001	FJ62			42516-60010-	1		
	42517	LINK, DIFFERENTIAL LOCK, REAR					
8708-9001	FJ62			17-60010-	1		
	42518	SHAFT, DIFFERENTIAL LOCK LIN					
8708-9001	FJ62			42518-60010-	1		
	42520A	TURN BUCKLE (FOR DIFFERENTIAL LOCK ROD)					
8708-9001	FJ62			90587-08001-	2		
	42520B	GROMMET (FOR DIFFERENTIAL LOCK ROD)					
8708-9001	FJ62			90480-01336-	1		
	42520C	GROMMET (FOR DIFFERENTIAL LOCK ROD)					
8708-9001	FJ62			90480-20016-	2		
	42521	ROD, DIFFERENTIAL LOCK, NO.1					
8708-9001	FJ62			42521-60010-	2		
	42522	ROD, DIFFERENTIAL LOCK, NO.2					
8708-9001	FJ62			42522-60010-	2		
	42523	COVER, DIFFERENTIAL LOCK GROMMET					
8708-9001	FJ62			42523-60010-	1		
	42531	SHAFT, DIFFERENTIAL LOCK CONTROL, FRONT					
8708-9001	FJ62			42531-60030-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	45201F	RING, O (FOR STEERING MAIN SHAFT)					
8708-9001	FJ62			96711-24045-	1		
	45201G	SPRING, COMPRESSION (FOR STEERING MAIN SHAFT)					
8708-9001	FJ62			90501-45011-	1		
	45205E	RING, SNAP (FOR STEERING COLUMN TUBE)					
8708-9001	FJ62			90521-01002-	1		
	45210	SHAFT ASSY, STEERING MAIN					
8708-9001	FJ62			45210-22050-	1		
	45215	COLLAR, MAIN SHAFT BEARING THRUST					
8708-9001	FJ62			45215-22011-	1		
	45220	SHAFT ASSY, STEERING INTERMEDIATE					
8708-9001	FJ62			45220-60050-	1		
	45222F	COVER, DU[illegible]					
8708-9001	FJ62			45222-60031-	1		
	45231C	BEARING, UNIVERSAL JOINT SPIDER (FOR STEERING MAIN SHAFT)					
8708-9001	FJ62			37402-10020-	4		
	45231D	RING, HOLE SNAP (FOR STEERING MAIN SHAFT)					
8708-9001	FJ62	T=1.2		90521-22011-	4		
8708-9001	FJ62	T=1.25		90521-22012-	4		
8708-9001	FJ62	T=1.30		90521-22013-	4		
	45244	YOKE, STEERING WORM					
8708-9001	FJ62			45244-60020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	45254	SHIELD, STEERING COLUMN HOLE					
8708-9001	FJ62			45254-60030-	1		
	45255	PLATE, STEERING COLUMN HOLE COVER					
8708-9001	FJ62			45255-60010-	1		
	45255A	GROMMET OR RING, O (FOR STEERING COLUMN CLAMP)					
8708-9001	FJ62			90301-60122-	1		
	45260	SHAFT ASSY, STEERING INTERMEDIATE, NO.2					
8708-9001	FJ62			45260-60080-	1		
	45280A	BRACKET ASSY, STEERING COLUMN, UPPER					
8708-9001	FJ62			45280-60260-	1		
	45286	COVER, STEERING COLUMN					
P 8708-9001	FJ62	GRAY(TRIM1),UPR		45286-60130-03	1		
P 8708-9001	FJ62	SEPIA BROWN(TRIM4),UPR		45286-60130-16	1		
P 8708-9001	FJ62	GRAY(TRIM1),LWR		45287-60090-03	1		
P 8708-9001	FJ62	SEPIA BROWN(TRIM4),LWR		45287-60090-16	1		
	45289A	SUPPORT, STEERING COLUMN COVER					
8708-9001	FJ62			45289-22020-	1		
	45291	SEAL,MAIN SHAFT UPPER DUST					
8708-9001	FJ62			45282-22010-	1		
	45292	SEAL, MAIN SHAFT LOWER DUST					
8708-9001	FJ62			45292-60030-	1		

FIG. 47-08 BRAKE TUBE & CLAMP

(8708-)

ILLUST.NO. 20F3

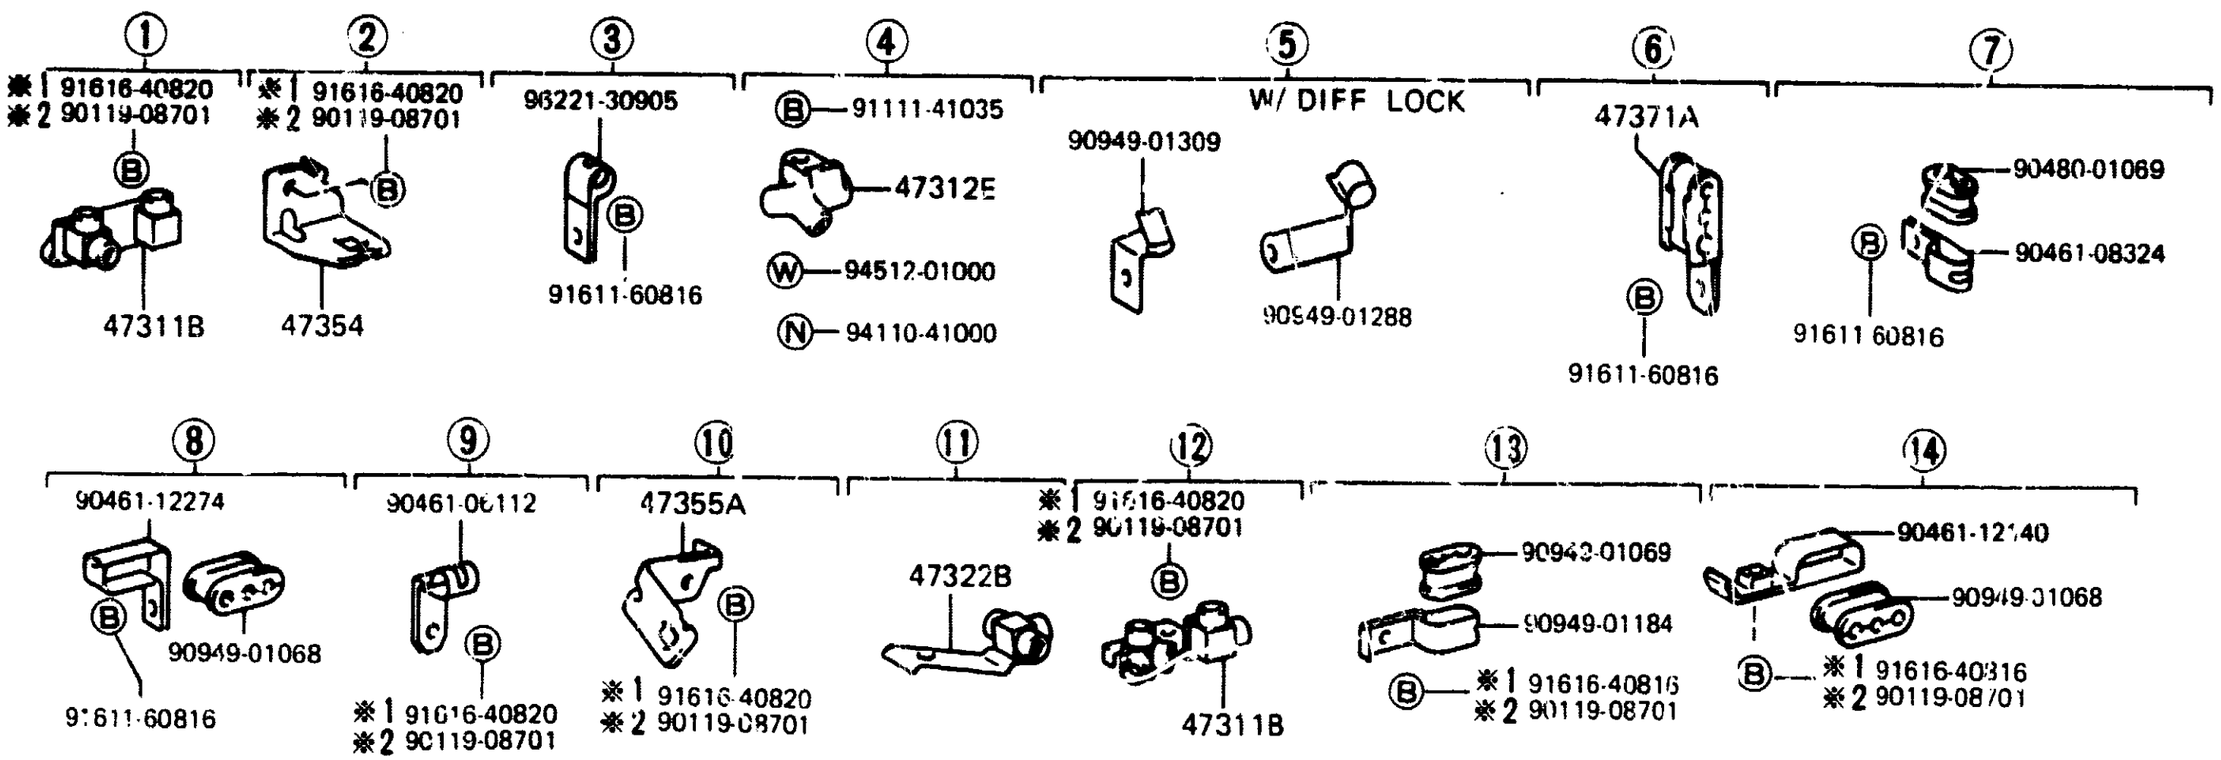

※1 (–8807)
※2 (8807–)

MC E394-3

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	48530A	BUSH (FOR REAR SHOCK ABSORBER)					
8708-9001	FJ62			90387-19057-	8		
	48530B	WASHER, REAR SHOCK ABSORBER CUSHION, NO.1					
8708-9001	FJ62			90948-03011-	2		
	48530C	WASHER, REAR SHOCK ABSORBER CUSHION, NO.2					
8708-9001	FJ62			90948-03011-	2		
	48540	ABSORBER ASSY, SHOCK REAR, LH					
8708-9001	FJ62			48541-69025-	1		
	48802	LINK SUB-ASSY, STABILIZER					
8708-9001	FJ62			48802-60020-	2		
	48812	BAR, STABILIZER, REAR					
8708-9001	FJ62			48812-60040-	1		
	48815R	BUSH, STABILIZER (FOR REAR)					
8708-9001	FJ62			48815-30050-	2		
	48823R	COVER, STABILIZER LINK (FOR REAR)					
8708-9001	FJ62			48823-27010-	2		
	48824R	BRACKET, STABILIZER (FOR REAR)					
8708-9001	FJ62			48825-60031-	2		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

CONTENTS

(PART NUMBER – LOCATION)

04044 – 16361 ---------- A14
16363 – 35676 ---------- B14
35678 – 45130 ---------- C14
45130 – 57402 ---------- D14
57405 – 67917 ---------- E14
68111 – 81520 ---------- F14
81521 – 89668 ---------- G14
89669 – 90389 ---------- H14
90389 – 9151[illegible] ---------- J14
91611 – 99[illegible]5 ---------- J14

A14

PART NUMBER	LOCATION		PART NUMBER	LOCATION		PART NUMBER	LOCATION
04044-60150-	2J7		11253-61010-	1H1		13103-61032-	1A2
04111-61070-	1E1		11292-61010-	1A4		13105-61032-	1A2
04112-61060-	1E1		11298-61040-	1A4		13107-61031-	1A2
04351-60011-	2D1	N	-61041-	1A4		-61032-	1A2
04371-10011-	2M6	N	-61042-	1A4		13201-38011-	1A2
-36030-	2K4		-61050-	1A4		13204-61020-	1A2
04412-60030-	2B5	N	-61051-	1A4		13265-35025-	1A2
04434-60012-	2E9	N	-61052-	1A4	P	13401-61021-	1A2
04443-60330-	2G8		-61060-	1A4	B	-61023-	1A2
04445-60030-	2J7	S	-61061-	1A4		13470-61030-	1B2
04446-30030-	2D7	N	-61062-	1A4		13471-61010-	1B2
-35010-	2D7		11302-61031-	1J1		13511-60060-	1C2
04455-60020-	2J7		11311-61020-	1J1		13521-61010-	1B2
04474-60010-	2J8	P	11312-61020-	1J1		13523-61010-	1C2
04476-60050-	2J8	B	-61021-	1J1		13571-61010-	1C2
04477-60010-	2B9		11328-61010-	1J1		13711-61010-	1C2
04479-30030-	2H8		11369-60011-	1J1		13715-61040-	1D2
04481-60030-	2H9	P	11400-61120-	1D1		13734-60030-	1D2
04482-60040-	2H9	B	-61121-	1D1		13741-60030-	1D2
	2L9	B	11401-69306-	1H1		-61010-	1D2
04483-60050-	2L9		11452-61010-	1I1		13751-61020-	1D2
04491-60030-	2H8		11495-61010-	1H1		13755-61020-	1D2
04493-60160-	2D8		11701-61010-01	1M1		13781-61020-	1D2
04495-60010-	2J8		-61010-02	1M1		13811-61030-	1D2
-60011-	2J8		-61010-03	1A2		13812-61030-	1D2
09114-60050-	1A1		-61010-04	1A2		13901-61020-	1D2
09115-60030-	1A1		-61010-05	1A2		13952-61012-	1D2
09116-35041-	1A1		11704-61010-	1M1		13994-61020-	1D2
09120-60100-	1A1		11705-61010-	1M1		15012-60014-	1E2
09150-60020-	1A1		11802-61010-	1C2		15100-61011-	1E2
09155-44010-	1A1		11804-61010-	1C2		15121-61011-	1E2
09183-00030-	1B1		11805-61010-	1C2		15122-61011-	1E2
-60010-	1B1		12101-61030-	1I1		15125-60013-	1E2
11011-61010-	1M1		12151-61011-	1I1		15126-60013-	1E2
11012-61010-	1M1		12157-10010-	2F5		15131-24010-	1E2
11013-61010-	1M1			2H1		15132-40010-	1E2
11071-61010-01	1M1			2H6		15133-24010-	1E2
-61010-02	1M1		12180-61010-	1G1		15301-60031-	1I1
-61010-03	1M1		12195-71020-	1G1		15403-60020-	1F2
-61010-04	1M1		12204-35040-	1L1		15600-41010-	1B2
-61010-05	1M1		12221-61010-	1L1		15609-61012-	1G2
11072-61010-01	1M1		12261-61060-	1L1		15691-60010-	1G2
-61010-02	1M1		12262-61020-	1L1		15710-61010-	1H2
-61010-03	1M1		12311-61071-	1K1		15770-61010-	1H2
-61010-04	1M1		12361-61030-	1K1		15777-61030-	1H2
-61010-05	1M1	A	-61031-	1K1		16100-69195-	1I2
11073-61010-01	1M1		12371-61040-	1K1		16110-61180-	1I2
-61010-02	1M1	A	-61041-	1K1		16117-61110-	1I2
-61010-03	1M1	P	12511-61060-	1K1		16124-61110-	1I2
-61010-04	1M1	B	-61061-	1K1		16171-61071-	1I2
-61010-05	1M1		13011-61062-	1A2		16173-61070-	1I2
11101-61080-	1F1		13013-61062-	1A2		16198-41050-	1I2
11115-61020-	1F1		13015-61062-	1A2		16210-61140-	1I2
11122-61011-	1F1		13017-61062-	1A2		16259-52010-	1I2
11123-61011-	1F1		13041-35020-0A	1A2		16261-61020-	1K2
11126-61011-	1G1		-35020-0B	1A2		16264-61010-	1K2
11127-61011-	1G1		-35020-0C	1A2		16268-61010-	1K2
11131-61010-	1G1		13101-61031-	1A2		16271-61010-	1I2
11132-61010-	1G1		-61031-01	1A2		16303-61020-	1K2
11135-60010-	1G1		-61031-02	1A2		16304-61030-	1K2
11136-60030-	1G1		-61031-03	1A2		16341-61020-	1K2
11201-61041-	1G1		-61032-01	1A2		16343-61010-	1K2
11213-61020-	1G1		-61032-02	1A2		16360-61015-	1K2
1125[illegible]-61020-	1H1		-61032-03	1A2		16361-61020-	1K2

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	33623A	SPRING, COMPRESSION					
8708-9001	FJ62			90501-07009-	1		
	33625	SLEEVE, SHIFT LEVER KNOB					
8708-9001	FJ62			33625-22020-	1		
	33631	ROD, DETENT					
8708-9001	FJ62			33631-60020-	1		
	33631A	SPRING, COMPRESSION (FOR DETENT ROD)					
8708-9001	FJ62			90501-07005-	1		
	33631D	PIN, GROOVED (FOR DETENT ROD)					
8708-9001	FJ62			90256-04001-	1		
	33711E	BUSH (FOR CONTROL SHAFT LEVER)					
8708-9001	FJ62			90369-08005-	2		
	33711F	LEVER, CONTROL SHAFT (FOR FLOOR SHIFT)					
8708-9001	FJ62			33711-60040-	1		
	33711H	GROMMET (FOR CONTROL SHAFT LEVER)					
8708-9001	FJ62			90480-17177-	2		
	33723	SWIVEL, CONNECTING ROD (FOR FLOOR SHIFT)					
8708-9001	FJ62			33723-22010-	1		
	35432B	PLATE, POSITION INDICATOR (FOR FLOOR SHIFT)					
8708-9001	FJ62			35432-60040-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35569B	ROD, TRANSMISSION CONTROL (FOR FLOOR SHIFT)					
8708-9001	FJ62			35569-60040-	1		
	35906	WIRE SUB-ASSY, INDICATOR LAMP					
8708-9001	FJ62			35906-60050-	1		
	35921	PLATE, CONTROL POSITION INDICATOR					
8708-9001	FJ62			35921-60030-	1		
	35971A	HOUSING, POSITION INDICATOR, UPPER					
8708-9001	FJ62			35971-60030-	1		
	35971C	LENS, PARKING BRAKE WARNING LAMP					
8708-9001	FJ62			55499-60010-	1		
	35971D	LENS, CONSOLE END PANEL LAMP					
8708-9001	FJ62			58936-60010-	1		
	35972	COVER, POSITION INDICATOR HOUSING					
8708-9001	FJ62			35972-60020-	1		
	35974	HOUSING, POSITION INDICATOR, LOWER					
8708-9001	FJ62			35974-60030-	1		
	35975	COVER, SLIDE (FOR POSITION INDICATOR)					
8708-9001	FJ62	NO.1		35975-60020-	1		
8708-9001	FJ62	NO.2		35975-60030-	1		
	35976	COVER, SLIDE, NO.2 (FOR POSITION INDICATOR)					
8708-9001	FJ62			35976-60020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35631F	RACE, THRUST BEARING (FOR REAR CLUTCH DRUM)					
8708-9001	FJ62			35789-36090-	1		
	35633	DISC, CLUTCH (FOR FRONT CLUTCH)					
8708-9001	FJ62			35633-36020-	6		
	35634	PLATE, FRONT CLUTCH					
8708-9001	FJ62	T=1.8		35634-36010-	6		
8708-9001	FJ62	T=2.4		35634-36020-	1		
8708-9001	FJ62	T=2.0		35634-36040-	1		
8708-9001	FJ62	T=2.2		35634-36050-	1		
	35650B	SPRING, COMPRESSION (FOR REAR CLUTCH PISTON RETURN)					
8708-9001	FJ62			90501-10108-	22		
	35650E	RING, O (FOR REAR CLUTCH PISTON OUTER)					
8708-9001	FJ62			90520-50001-	1		
	35651	DRUM, REAR CLUTCH					
8708-9001	FJ62			35651-36010-	1		
	35651A	RACE, THRUST BEARING (FOR REAR CLUTCH DRUM)					
8708-9001	FJ62			35789-36020-	1		
	35651C	BEARING, THRUST NEEDLE ROLLER (FOR REAR CLUTCH DRUM)					
8708-9001	FJ62			90374-34001-	1		
	35654	HUB, REAR CLUTCH					
8708-9001	FJ62			35654-36010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35654A	RING, HOLE SNAP (FOR REAR CLUTCH HUB)					
8708-9001	FJ62			90521-99017-	1		
	35655	SEAT, REAR CLUTCH PISTON RETURN SPRING					
8708-9001	FJ62			35615-36010-	1		
	35672	PLATE, CLUTCH CUSHION					
8708-9001	FJ62			35672-36010-	1		
	35673	DISC, REAR CLUTCH					
8708-9001	FJ62			35633-36020-	5		
	35674	PLATE, REAR CLUTCH					
8708-9001	FJ62	T=1.8		35634-36010-	5		
	35675	FLANGE, REAR CLUTCH					
8708-9001	FJ62	T=5.0		35675-36010-	1		
8708-9001	FJ62	T=5.2		35675-36020-	1		
8708-9001	FJ62	T=5.4		35675-36030-	1		
8708-9001	FJ62	T=5.6		35675-36040-	1		
	35675E	RING, HOLE SNAP (FOR REAR CLUTCH FLANGE)					
8708-9001	FJ62			90521-99017-	1		
	35701	SHAFT SUB-ASSY, INPUT					
8708-9001	FJ62			35701-60010-	1		
	35701C	RACE, THRUST BEARING (FOR INPUT SHAFT REAR)					
8708-9001	FJ62			35789-36020-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35409	SPRING SUB-ASSY, MANUAL DETENT					
8708-9001	FJ62			35409-3601C-	1		
	35415F	VALVE, PRIMARY REGULATOR					
8708-9001	FJ62			35415-36010-	1		
	35415H	SPRING, COMPRESSION (FOR PRIMARY REGULATOR VALVE)					
8708-9001	FJ62			90501-19002-	1		
	35415J	WASHER (FOR PRIMARY REGULATOR VALVE)					
8708-9001	FJ62			90201-06566-	1		
	35415P	RING, E (FOR PRIMARY REGULATOR VALVE)					
8708-9001	FJ62			90523-06004-	X		
	35416	PLUNGER, PRIMARY REGULATOR VALVE, NO.1					
8708-9001	FJ62			35416-36010-	1		
	35417A	SLEEVE, PRIMARY REGULATOR VALVE					
8708-9001	FJ62			35417-36010-	1		
	35418	VALVE, MANUAL					
8708-9001	FJ62			35418-36010-	1		
	35419	VALVE, CHECK, NO.1					
8708-9001	FJ62			35419-36010-	1		
	35419A	SPRING, COMPRESSION (FOR CHECK VALVE)					
8708-9001	FJ62			90501-10098-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35420	BODY ASSY, LOWER VALVE					
8708-9001	FJ62			35420-60030-	1		
	35420D	BALL (FOR LOWER VALVE BODY)					
8708-9001	FJ62		OD=6.35	90360-06004-	2		
8708-9001	FJ62		OD=8.73	90360-09001-	2		
	35420E	SPRING (FOR LOWER VALVE BODY)					
8708-9001	FJ62			90503-04003-	2		
	35421F	PISTON, ACCUMULATOR, NO.2					
8708-9001	FJ62			35423-36010-	1		
	35421G	SPRING, COMPRESSION (FOR ACCUMULATOR PISTON NO.2)					
8708-9001	FJ62			90501-40008-	1		
	35421H	RING (FOR ACCUMULATOR PISTON NO.2)					
8708-9001	FJ62	UPR		90301-29003-	1		
8708-9001	FJ62	LWR		90301-37004-	1		
	35422F	STOPPER, VALVE VIBRATING					
8708-9001	FJ62	SECONDARY		35422-22010-	1		
8708-9001	FJ62	PRIMARY		35422-36010-	1		
	35424C	PISTON, C-1 ACCUMULATOR					
8708-9001	FJ62			35424-36010-	1		
	35424D	SPRING, COMPRESSION (FOR C-1 ACCUMULATOR PISTON)					
8708-9001	FJ62			90501-27008-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	36111F PLUG (FOR TRANSFER CASE)						
8708-9001	FJ62	FILLER PLUG		90341-19006-	1		
8708-9001	FJ62	DRAIN PLUG		90341-18057-	1		
	36111G PIN, STRAIGHT (FOR TRANSFER CASE)						
8708-9001	FJ62			90250-10006-	2		
	36111H PLUG, BREATHER (FOR TRANSFER CASE)						
8708-9001	FJ62			90930-03075-	1		
	36111R PLUG, TIGHT (FOR TRANSFER CASE)						
8708-9001	FJ62			96411-11600-	2		
	36119 RECEIVER, TRANSFER OIL, NO.1						
8708-9001	FJ62			36119-60010-	1		
	36119B RECEIVER, TRANSFER OIL, NO.2						
8708-9001	FJ62			36119-60030-	1		
	36122 COVER, TRANSFER CASE, NO.2						
8708-9001	FJ62			36122-60040-	1		
	36122A BOLT (FOR TRANSFER CASE)COVER NO.2						
8708-9001	FJ62	*10-1.25PX20-20		91611-61020-	6		
	36124 COVER, TRANSFER POWER TAKE-OFF						
8708-9001	FJ62			36124-60020-	1		
	36128 DEFLECTOR, BREATHER OIL						
8708-9001	FJ62			36128-60021-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	36132 RETAINER, OUTPUT SHAFT BEARING, REAR NO.1						
8708-9001	FJ62			36132-60020-	1		
	36132A SEAL, OIL (FOR OUTPUT SHAFT RETAINER)						
8708-9001	FJ62			90311-48010-	1		
	36134 RETAINER, OUTPUT SHAFT BEARING, FRONT						
8708-9001	FJ62			36134-60020-	1		
	36134A SEAL, OIL (FOR OUTPUT SHAFT BEARING FRONT RETAINER)						
8708-9001	FJ62			90311-48009-	1		
	36142 GASKET, TRANSFER COVER						
8708-9001	FJ62			36142-60030-	1		
	36143 GASKET, TRANSFER CASE, FRONT						
8708-9001	FJ62			36143-60030-	1		
	36144 GASKET, TRANSFER POWER TAKE-OFF COVER						
8708-9001	FJ62			36144-60020-	1		
	36147A GASKET, TRANSFER CASE						
8708-9001	FJ62			36143-60020-	1		
	36152 GASKET, OUTPUT SHAFT BEARING RETAINER						
8708-9001	FJ62			36152-60030-	1		

* - P× -- =Outside diameter-Pitch×Bolt length-Thread length

(8708-)

ILLUST.NO. 30F3

Differential Lock

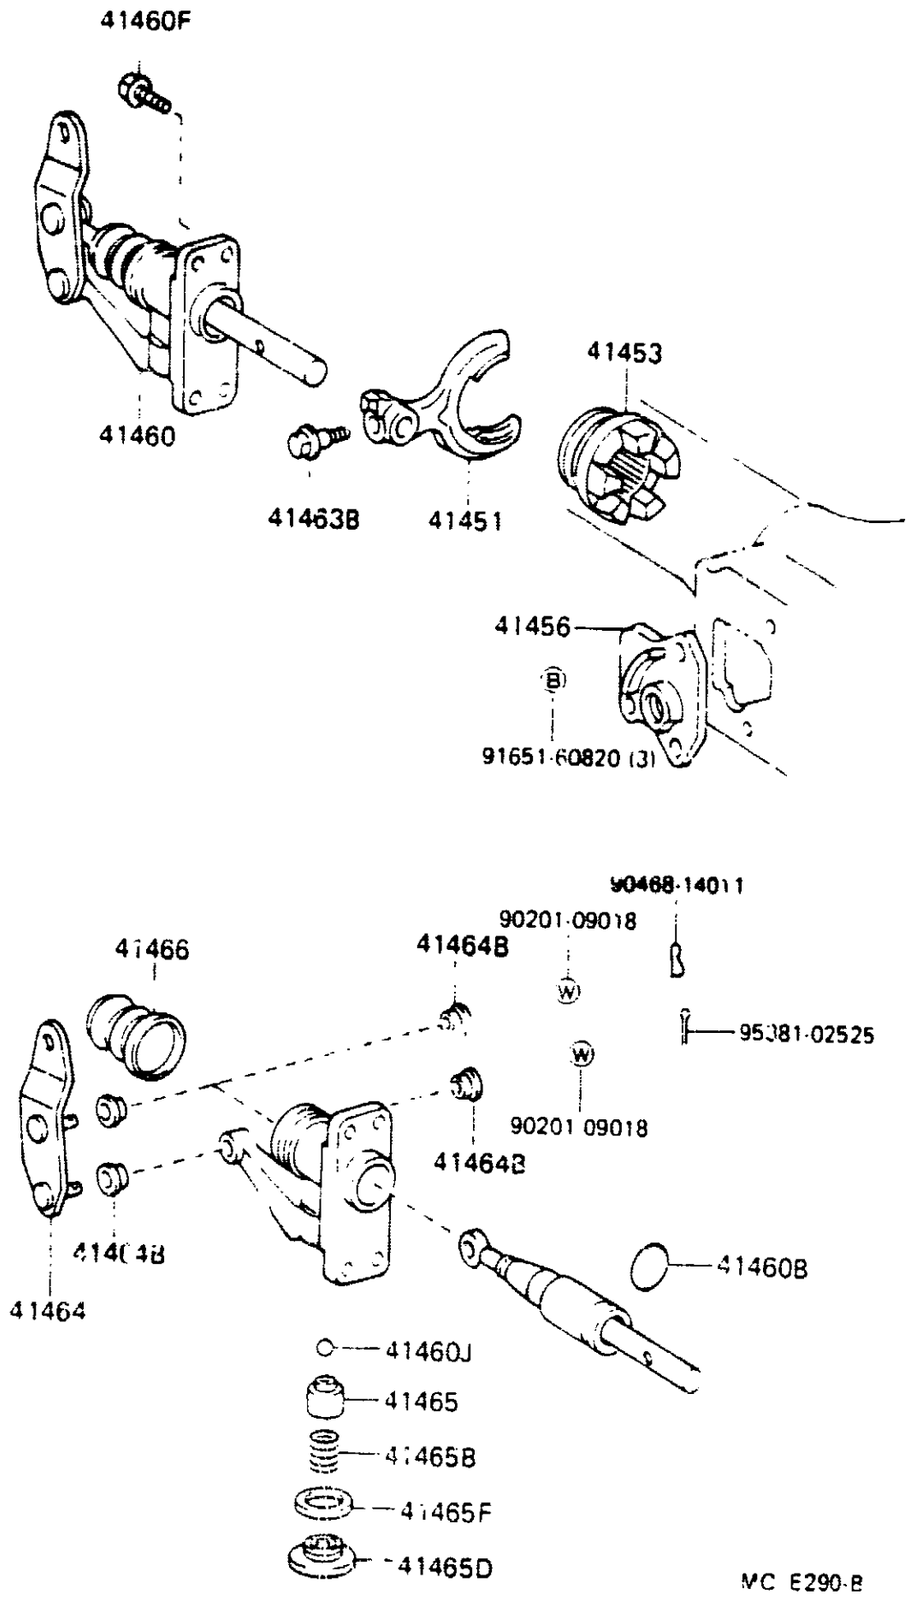

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		04412	GASKET KIT, DIFFERENTIAL CARRIER					
	8708-9001	FJ62			04412-60030-	1		
		41101	CARRIER SUB-ASSY, DIFFERENTIAL, REAR					
P	8708-8906	FJ62	W(DIFFERENTIAL LOCK)		# 41101-60080- ¬(41101-60081-) .(90116-10075-)	1 1 2		
S	8911-9001	FJ62..WGG			41101-60041-	1		
	8708-8911	FJ62			41101-60040-	1		
	8906-9001	FJ62..WGG	W(DIFFERENTIAL LOCK)		41101-60081-	1		
		41110	CARRIER ASSY, DIFFERENTIAL, REAR					
P	8708-8906	FJ62	*AXC=K084,*FGR=37:9,W(DIFFERENTIAL LOCK)		# 41110-60230- ¬(41110-60231-) .(90116-10075-)	1 1 2		
	8708-8911	FJ62	*FGR=37:9		# 41110-60110- ¬(41110-60111-) .(90919-01692-)	1 1 1		
N	8906-9001	FJ62..WGG	*FGR=37:9,W(DIFFERENTIAL LOCK)		41110-60231-	1		
N	8911-9001	FJ62..WGG	*FGR=37:9		41110-60111-	1		
		41110A	BOLT (FOR REAR DIFFERENTIAL CARRIER SET)					
P	8708-8906	FJ62	S=16&12.5,L=30.5,W(DIFFERENTIAL LOCK)		90116-10074-	6		
	8708-9001	FJ62	S=16&12.5,L=30.5		〃	8		
	8708-9001	FJ62	S=18&12.5,L=53.5		90116-10075-	2		
	8708-9001	FJ62	S=15&12.5,L=35.5		90116-10076-	10		
	8708-9001	FJ62	S=32&12.5,L=91.4		90116-10124-	2		
B	8906-9001	FJ62..WGG	S=16 & 12.5,L=30.5		90116-10074-	4		
B	8906-9001	FJ62..WGG	S=18 & 12.5,L=53.5		90116-10075-	4		

*AXC=Axle Code(Stated in TRANS/AXLE Column of Name Plate) *FGR=Final Gear Ratio

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	42531A	BUSH (FOR DIFFERENTIAL LOCK CONTROL SHAFT)					
8708-9001	FJ62	W(DIFFERENTIAL LOCK)		90386-13014-	4		
8708-9001	FJ62	W(DIFFERENTIAL LOCK)		〃	8		
	42532	SHAFT, DIFFERENTIAL LOCK CONTROL, REAR					
8708-9001	FJ62			42532-60030-	1		
	42533	BRACKET, DIFFERENTIAL LOCK CONTROL, FRONT NO.1					
8708-9001	FJ62			42533-60010-	1		
	42534	BRACKET, DIFFERENTIAL LOCK CONTROL, FRONT NO.2					
8708-9001	FJ62			42534-60030-	1		
	42535	BRACKET, DIFFERENTIAL LOCK CONTROL, REAR NO.1					
8708-9001	FJ62			42535-60010-	1		
	42537	COVER, CONTROL SHAFT DUST, NO.1					
8708-9001	FJ62	RH		42537-60010-	2		
8708-9001	FJ62	LH		42537-60020-	2		
	42537A	COVER, CONTROL SHAFT DUST, NO.2					
8708-9001	FJ62			33789-36010-	4		
	42537B	COVER, CONTROL SHAFT DUST, NO.3					
8708-9001	FJ62	W(DIFFERENTIAL LOCK)		42537-60010-	2		
	42537C	COVER, CONTROL SHAFT DUST, NO.4					
8708-9001	FJ62			33789-36010-	2		
	42538	STAY, CONTROL SHAFT BRACKET					
8708-9001	FJ62			42538-60010-	1		
	42540	CABLE ASSY, DIFFERENTIAL LOCK, FRONT					
8708-9001	FJ62			42540-60010-	1		
	42541	BRACKET, DIFFERENTIAL LOCK CABLE					
8708-9001	FJ62			42541-60010-	2		
	42550	CABLE ASSY, DIFFERENTIAL LOCK, REAR					
8708-9001	FJ62			42550-60010-	1		
	42560	LINK ASSY, DIFFERENTIAL LOCK CABLE					
8708-9001	FJ62			42560-60011-	2		
	42560A	PIN, W/HOLE (FOR DIFFERENTIAL LOCK CABLE LINK)					
8708-9001	FJ62			90240-09001-	2		
	42562	SHAFT, DIFFERENTIAL LOCK CABLE LINK					
8708-9001	FJ62			42562-60010-	2		
	42562A	BUSH (FOR DIFFERENTIAL LOCK CABLE LINK SHAFT)					
8708-9001	FJ62			90386-13014-	4		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	45636	PROTECTOR, INTERMEDIATE LINK JOINT, UPPER					
8708-9001	FJ62			45636-60090-	1		
	45637	PROTECTOR, INTERMEDIATE LINK JOINT, LOWER					
8708-9001	FJ62			45637-60060-	1		
	45804	LEVER SUB-ASSY, STEERING TILT					
8708-9001	FJ62			45804-22010-	1		
	45813	COLLAR, TILT STEERING SUPPORT, NO.1					
8708-9001	FJ62	D=17.996-18.003		45813-22010-	1		
8708-9001	FJ62	D=18.003-18.010		45813-22020-	1		
8708-9001	FJ62	D=18.010-18.017		45813-22030-	1		
8708-9001	FJ62	D=18.017-18.024		45813-22040-	1		
8708-9001	FJ62	D=17.989-17.996		45813-22050-	1		
	45814	COLLAR, TILT STEERING SUPPORT, NO.2					
8708-9001	FJ62	D=17.982-18.000		45814-22010-	1		
8708-9001	FJ62	D=18.000-18.018		45814-22020-	1		
	45815	SHIM, TILT STEERING SUPPORT					
8708-9001	FJ62	T=0.2		45815-22060-	X		
8708-9001	FJ62	T=0.5		45815-22070-	X		
8708-9001	FJ62	T=0.8		45815-22080-	X		
8708-9001	FJ62	T=1.4		45815-22090-	X		
8708-9001	FJ62	T=1.8		45815-22100-	X		


PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	45817	STOPPER, STEERING SHAFT THRUST					
8708-9001	FJ62			45817-60010-	2		
	45819	RETAINER, TILT LEVER					
8708-9001	FJ62			45819-22011-	1		
	45819A	COLLAR (FOR TILT LEVER RETAINER)					
8708-9001	FJ62			90587-08002-	1		
	45821B	REINFORCE, TILT STEERING SUPPORT, NO.1					
8708-9001	FJ62			45821-22010-	1		
	45826A	SPRING, TENSION (FOR STEERING TILT LEVER)					
8708-9001	FJ62			90507-14001-	1		
	45826B	PIN (FOR STEERING TILT LEVER)					
8708-9001	FJ62			72538-12010-	1		
	45870	TUBE ASSY, STEERING COLUMN					
8708-9001	FJ62			45870-60030-	1		
	45890A	PAWL ASSY, TILT STEERING					
8708-9001	FJ62			45890-22050	1		
	45897	BOLT, STEERING LOCK SET					
8708-9001	FJ62			45897-14010-	1		
	45898A	BOLT, RETURN SPRING SET					
8708-9001	FJ62			45898-22010-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	46420C	PIN, W/HOLE (FOR PARKING BRAKE CABLE)					
8708-9001	FJ62			90[illegible]3042-	2		
	46443	CAP, CABLE ADJUSTING					
8708-9001	FJ62			46443-12020-	1		
	46451	BRACKET, CABLE SUPPORT					
8708-9001	FJ62			46451-60030-	1		
	46458	RETAINER, CABLE					
8708-9001	FJ62			46458-30020-	1		
	46469	LEVER, CABLE GUIDE SUPPORT					
8708-9001	FJ62			46469-60020-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)

ILLUST.NO. 30F3

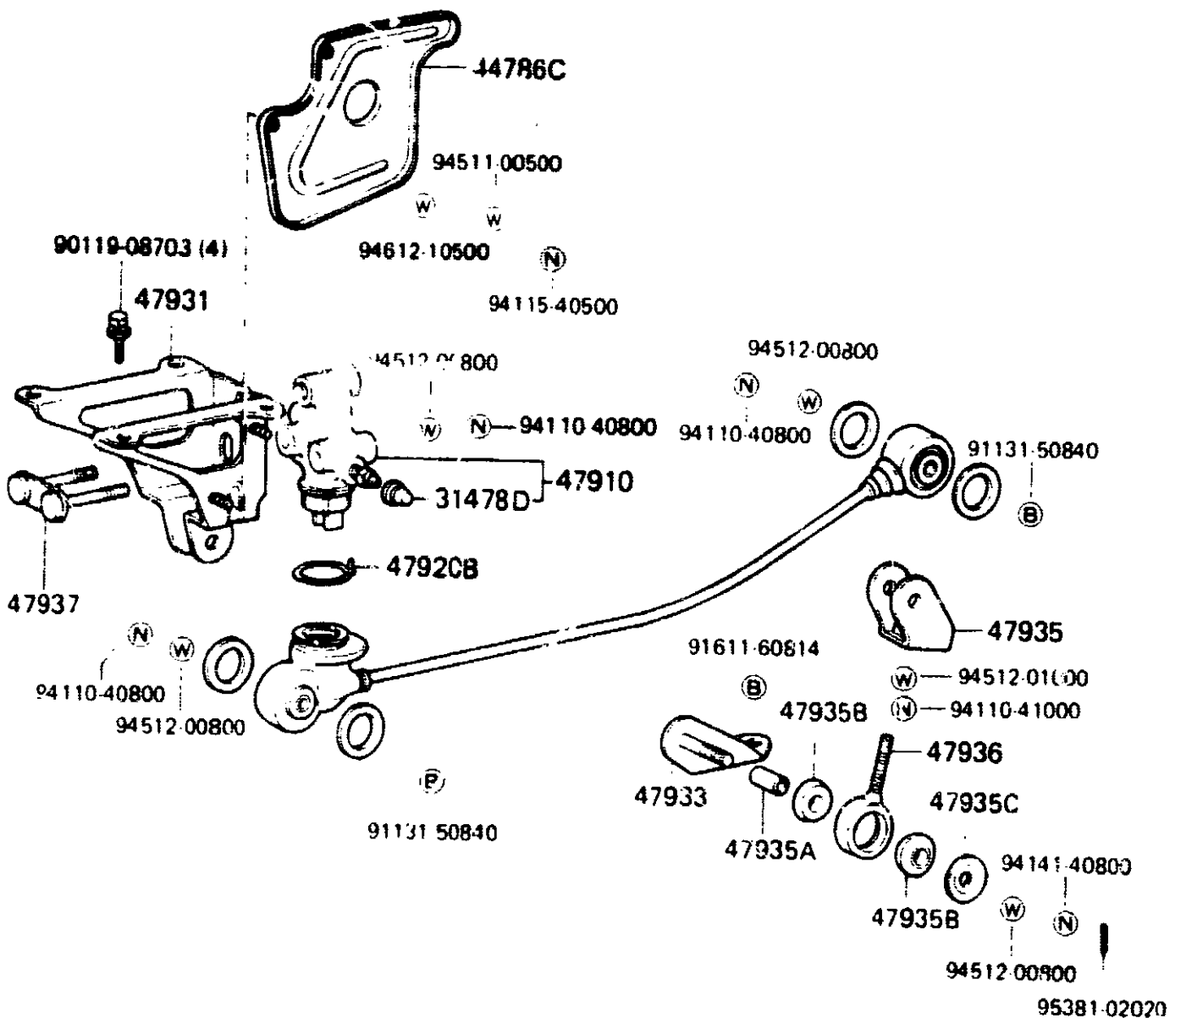

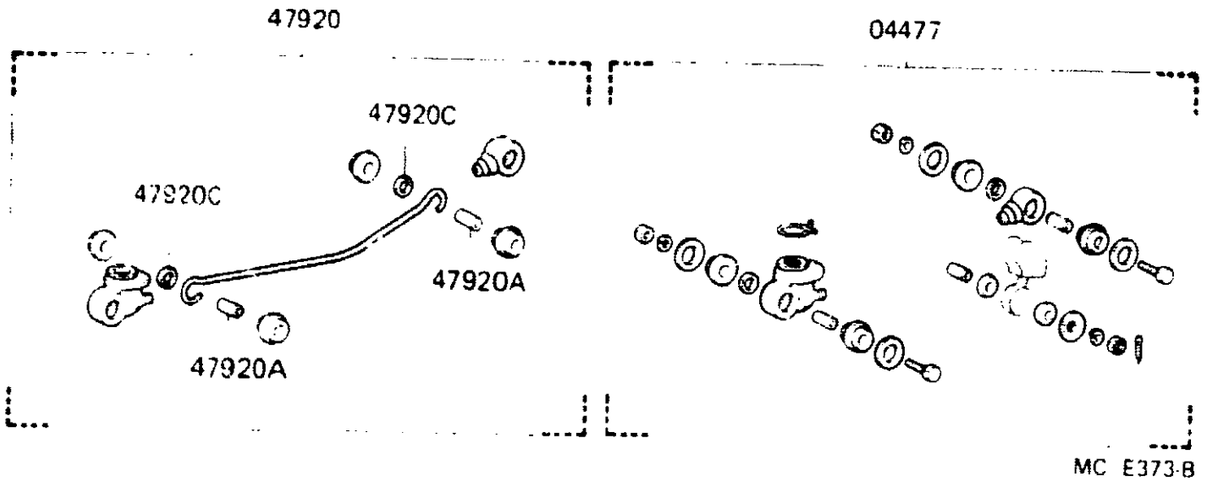

P.N.D.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	04477	BUSH & BOOT KIT, LOAD SENSING SPRING					
8708-9001	FJ62			04477-60010-	1		
	31478D	CAP, BLEEDER PLUG (FOR LSPV)					
8801-9001	FJ62			47548-60010-	1		
	44786C	INSULATOR, LOAD SENSING VALVE HEAT					
8708-9001	FJ62			44786-60040-	1		
	47311B	WAY, NO.1 (FOR FRONT BRAKE TUBE)					
8708-9001	FJ62			90413-10214-	1		
	47311G	HOSE, FLEXIBLE (FOR BRAKE TUBE)					
8708-9001	FJ62			96940-33005-	1		
	47312	TUBE, FRONT BRAKE, NO.2					
8708-9001	FJ62			47312-60610-	1		
	47312E	WAY, NO.2 (FOR FRONT BRAKE TUBE)					
8708-9001	FJ62			90413-10042-	1		
	47313	TUBE, FRONT BRAKE, NO.3					
8708-9001	FJ62			47313-60180-	1		
	47313A	HOSE, FLEXIBLE (FOR FRONT)					
8708-9001	FJ62			96940-39855-	2		
	47314	TUBE, FRONT BRAKE, NO.4					
8708-9001	FJ62			47314-60180-	1		

	PART NUMBER	LOCATION
	16363-61020-	1K2
	16331-61050-	1K2
	16384-61010-	1K2
	16400-61140	1K2
	16401-71010-	1L2
	16405-61030-	1L2
	-90A00-	1L2
	16417-24200-	1L2
	16418-24200-	1L2
	16480-90A00-	1L2
	16571-61110-	1L2
	16572-61020-	1L2
	16573-61040-	1L2
	16577-61130-	1L2
	16582-61010-	1L2
	16583-61010-	1L2
	16584-61010-	1L2
	16585-61010-	1M2
	16586-61010-	1M2
	16611-61020-	1M2
	16630-61020-	1K1
	16711-61240-	1M2
A	-61241-	1M2
	16793-61011-	1A4
	17109-61010-	1C3
	17111-61040-	1C3
	17118-61030-	1C3
	17123-61010-	1C3
	17125-61010-	1C3
	17139-61010-	1C3
	17141-61080-	1C3
	17142-61050-	1C3
	17167-61070-	1C3
	17168-61030-	1C3
	17169-61040-	1C3
	17172-61060-	1C3
	17176-61010-	1C3
	17301-61010-	1J3
	17303-61020-	1M3
	17306-61030-	1J3
	17314-61040-	1H3
	17317-61020-	1K2
	17318-61060-	1H3
	17341-61030-	1J3
	17342-61040-	1J3
	17343-61030-	1J3
	17344-61020-	1J3
	17353-61010-	1J3
	17401-61210-	1E3
	17402-61010-	1E3
	17403-61110-	1E3
	17405-61240-	1E3
	17502-61021-	1E3
	17567-61030-	1E3
	17571-61160-	1E3
	17572-61051-	1E3
	17573-61051-	1E3
	17574-61030-	1E3
	-61071-	1C3
	17610-61040-	1H3
	17692-61020-	1M3
	17700-61230-	1F3
	17705-61130-	1F3
P	17791-61023-	1A4

	PART NUMBER	LOCATION
B	17791-61070-	1A4
	17792-61120-	1A4
	17801-68020-	1F3
	17810-61010-	1M3
	17841-68010-	1F3
	17845-61011-	1F3
	17891-61090-	1F3
	17882-61070-	1F3
	17883-61020-	1G3
A	18450-61010-	1E3
	-61040-	1E3
	18495-38020-	1E3
P	19000-61350-	1C1
N	-61351-	1C1
	19100-61240-	1D4
	19101-61240-	1D4
	19102-61240-	1D4
	19114-61040-	1D4
	19115-50010-	1D4
	19127-61240-	1D4
	19195-61240-	1D4
	19242-61240-	1D4
	19519-38030-	1B4
	22202-61011-	1J4
	22210-61010-	1J4
	22216-74010-	1J4
	22233-61010-	1J4
	22250-61010-	1G3
	22270-61010-	1J4
	22271-61010-	1K4
	22275-43010-	1G3
	22278-43011-	1K4
	23091-61010-	1K4
	23206-61010-	1K4
	23207-74010-	1K4
	23209-61010-	1K4
	23217-35040-	1K4
P	-35081-	1K4
	23220-16083-	1K4
	-16190-	1K4
	23229-16010-	1K4
	23232-28010-	1K4
	23239-16010-	1K4
	23249-74050-	1K4
	23260-69025-	1K4
	23280-61010-	1K4
	23291-73010-	1L4
	23293-74010-	1L4
	23300-69025-	1L4
	23801-61030-	1L4
	23802-61040-	1L4
	23803-61010-	1L4
	23807-61010-	1L4
	25611-61050-	1M4
	25620-61110-	1M4
	25627-61010-	1M4
	25631-61040-	1M4
	25691-61020-	1A5
	25695-61010-	1M4
	25702-61010-	1M3
	25710-61030-	1J3
	25716-61020-	1J3
	25820-13020-	1M3
	25860-61010-	1M3

	PART NUMBER	LOCATION
	25870-61020-	1M4
	27060-61090-	1E4
	27212-39050-	1E4
	27310-72070-	1E4
	27312-45010-	1E4
	27330-72070-	1E4
	27351-38051-	1E4
	27359-61190-	1F4
	27362-72070-	1F4
	27371-31011-	1F4
	27372-31011-	1F4
	27410-72070-	1F4
	27411-61210-	1F4
	27412-45012-	1F4
	27441-45050-	1F4
	27700-63030-	1F4
	27790-13010-	3H9
	28011-26042-	1G4
	28100-60070-	1G4
	28110-60070-	1G4
	28120-26071-	1G4
	28130-34060-	1G4
	28140-26070-	1G4
	28150-34080-	1G4
	28160-26070-	1G4
	28165-26040-	1H4
	28228-26040-	1H4
	28229-26040-	1H4
	28253-45020-	1G4
	28254-45020-	1H4
	28800-61030-	3K8
	28897-38010-	3K8
	28898-26010-	3K8
	31478-50010-	2H3
		2K3
P	32000-60030-	2E1
B	-60031-	2E1
	-60040-	2E1
P	32101-60010-	2E1
B	-60011-	2E1
P	32116-60010-	2E1
B	-60011-	2E1
P	32117-60010-	2E1
B	-60011-	2E1
	32904-60012-	2K3
	32905-60012-	2K3
	32906-60012-	2K3
	32923-36010-	2K3
	32924-60011-	2K3
	32925-60030-	2K3
	32926-30020-	2L3
	32928-60011-	2L3
	32942-60010-	2L3
	-60030-	2L3
	32943-60010-	2L3
	33309-60041-	2A4
	-60070-	2A4
	33325-60010-	2A4
	-60021-	2A4
A	33403-69195-	2J1
	33404-30040-	2J1
	33481-60050-	2D4
	-60051-	2D4
	33485-30020-	2J1

	PART NUMBER	LOCATION
	33502-60040-	2A1
	33503-60020-	2A1
	33511-60060-	2A1
	33542-30110-01	2A1
	-30110-36	2A1
	33555-60040-	2A1
	33623-30040-56	2A1
	33625-22020-	2B1
	33631-60020-	2B1
	33711-60040-	2B1
	33723-22010-	2B1
	33789-36010-	2B6
	34101-60010-	2K1
	34421-36010-	2M2
	34601-36010-	2K1
	34602-36010-	2K1
	34613-36010-	2L1
	34710-36010-	2L1
	34713-36010-	2L1
	34731-36010-	2L1
	34732-36010-	2L1
	34737-36010-	2L1
	34738-36010-	2L1
	35000-60162-	2D1
	-60163-	2D1
	35013-60011-	2G1
	35015-60010-	2G1
	-60011-	2G1
	35017-60010-	2G1
	35019-60010-	2G1
	35035-36010-	2E1
	35068-36010-	2F2
	35073-60010-	2G2
	35103-60011-	2G1
	-60012-	2G1
P	35104-60010-	2G1
N	60011-	2G1
	35106-60041-	2H1
N	-60043-	2H1
	35111-60010-	2H1
	35112-36010-	2M2
	35113-36010-	2M2
	35114-36010-	2M2
	35115-36010-	2M2
	35116-60010-	2H1
	35117-60010-	2H1
	35118-60010-	2H1
	35136-60010-	2H1
	35138-60010-	2H1
	35143-36010-	2H1
	35144-36010-	2H1
	35146-36010-	2I2
P	35167-60011-	2H1
N	-60012-	2H1
	35168-36010-	2I1
	35182-36010-	2H1
	35211-36010-	2M2
	-36011-	2M2
	35212-36010-	2A3
	35213-36010-	2A3
	35215-36010-	2A3
	35216-36010-	2A3
	35219-60010-	2A3
	-60011-	2A3

	PART NUMBER	LOCATION
	35223-60010-	2A3
	35223-36010-	2A3
	35226-36010-	2A3
	-36011-	2A3
	35231-36010-	2A3
	35303-60010-	2A3
	35308-36010-	2F1
	35313-36010-	2F1
	35321-36010-	2F1
	-36020-	2F1
	35322-36010-	2F1
	-36020-	2F1
	35339-36010-	2A3
	35394-30011-	2I1
	35395-36010-	2I2
	35396-36010-	2A3
	35405-36010-	2A3
	35408-36010-	2A3
	35409-36010-	2B3
	35415-36010-	2B3
	35416-36010-	2B3
	35417-36010-	2B3
	35418-36010-	2B3
	35419-36010-	2B3
	35420-60030-	2B3
	35422-22010-	2B3
	-36010-	2B3
	35423-36010-	2B3
	35424-36010-	2B3
	35425-22010-	2C3
	-36010-	2C3
	35427-36010-	2F1
	35428-60020-	2C3
	35429-36010-	2C3
	35430-60090-	2C3
	35432-60030-	2C3
	-60040-	2B1
	35433-36010-	2C3
	35434-36010-	2C3
	35435-36011-	2C3
	35436-36011-	2C3
	35437-36011-	2C3
	35438-60020-	2C3
	35440-60011-	2C3
	35444-36010-	2C3
	35445-36010-	2D3
	35451-36010-	2D3
	35452-36010-	2D3
	35454-36010-	2D3
	35455-36010-	2D3
	35456-36010-	2E3
	35458-36010-	2E3
	35459-36010-	2E3
	35462-36010-	2E3
	35463-36010-	2E3
	35464-36011-	2E3
	35466-60010-	2E3
	35467-36010-	2F3
	35468-36011-	2F3
	35472-36011-	2F3
	35476-36010-	2F3
	35477-30030-	2F3
	35479-36010-	2F3
	35481-36011-	2I2

	PART NUMBER	LOCATION
	35481-36012-	2I2
	35482-60020-	2I2
	35483-60010-	2I2
	35484-60011-	2I2
	35485-60010-	2J2
	35486-36010-	2J2
	35487-36010-	2J2
	35488-60010-	2F3
	35489-36010-	2G3
	35491-36010-	2G3
	35492-36010-	2G3
	35495-36010-	2F1
	35497-36010-	2G3
	35498-36010-	2G3
	35501-36010-	2J3
	35505-36010-	2J3
	-36020-	2J3
	35519-60030-	3M6
	35520-60050-	2J3
	35556-60010-	2J3
	35557-36010-	2J3
	35560-36011-	2G3
	35561-60010-	2J3
	35569-60040-	2B1
	35572-60020-	2J3
	35589-36010-	2G3
	35595-36010-	2J3
	35599-36010-	2H3
	35602-36010-	2A2
	35606-36010-	2A2
	35608-36010-	2D2
		2K1
	35615-36010-	2A2
		2B2
	35617-36010-	2F1
	-36020-	2E2
		2M1
	35621-36010-	2D2
		2L1
	35623-36010-	2F2
	35631-36010-	2A2
	35632-36010-	2D2
		2M1
	-36020-	2F2
	35633-36010-	2D2
		2M1
	-36020-	2B2
		2M1
	-36030-	2L2
	35634-36010-	2B2
		2M1
	-36020-	2B2
	-36040-	2B2
	-36050-	2B2
	35651-36010-	2B2
	35654-36010-	2B2
	35671-36010-	2F2
	35672-36010-	2B2
	35675-36010-	2B2
B		2L1
	-36020-	2B2
	-36030-	2B2
	-36040-	2B2
	35676-36010-	2D2

LAND CRUISER Station Wagon U. S. A.
PRODUCTION FRAME NUMBER REFERENCE LIST

Applicable Model \ Production Date / Assembly Line	8701	8702	8703	8704	8705	8706	8707	8708	8709	8710	8711	8712
FJ62	TMC Honsya Plant								074039	075376	0077021	0079169	0081050

Applicable Model \ Production Date / Assembly Line	8801	8802	8803	8804	8805	8806	8807	8808	8809	8810	8811	8812
FJ62	TMC Honsya Plant	0083764	0086005	0088379	0090616	0092239	0093499	0094861	0096292	0097372	0098711	0100682	0102775

Applicable Model \ Production Date / Assembly Line	8901	8902	8903	8904	8905	8906	8907	8908	8909	8910	8911	8912
FJ62	TMC Honsya Plant	0104336	0105696	0107184	0109036	0110771	0111941	0113601	0115125	0116480	0117954	0119300	0120955

MARK & ABBREVIATION LIST

B16

(1) Abbreviations Under Heading MODELS in Text

Heading	Mark	Definition
MODELS	··	Among
	,	And
	+	And (Plus)
	−	Excluded (minus)
	#	All series

(2) Abbreviations Under Heading R/P and QTY" in Text

Heading	Mark	Definition
R/P	#	Old parts number (Old)
	✱	Modified old parts number which has been substituted by a multiple of parts and/or if substituted parts are specified by applicable models or other determining specifications refer to SUBSTITUTE SUPPLY PARTS LIST (S.S.P.L.) for detailed information. (Old)
	⌐	New main part number of set substitution (New)
	•	Part number to be attached to main part (New)
	X	Number of previously supplied but currently non-supplied parts
QTY	33	Required quantity
	X	Required quantity
	Y	More than 100 units
DESCRIPTION	✱✱✱	Number of old type parts, the supply of which will be discontinued after the lapse of a certain period
	(TRIM ●)	Trim code whose third digit is ●

(3) CHANGES TO TEXT & APPENDICES

Certain codes are used to indicate changes to the text and/or appendix.

These codes appear in the marginal area of the affected page as follows:

CODE	LOCATION	EXPLANATION
C	Text	Changes of Parts Number, Model and Production Date.
B		Data with a changed part number
A		Data with a changed application model
P		Data with changed year system (beginning end)
N	Text & Appendix	Newly available Toyota Part Number
S	Text & Appendix	Part application expanded to include other vehicle model(s)

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		35989A	PLATE, TRANSMISSION NAME					
	8708-9001	FJ62			35989-60020-	1		
		38628A	GROMET (FOR SHIFT LEVER PLATE)					
B	8708-9001	FJ62			38628-60010-	4		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	357010	RACE, THRUST BEARING (FOR INPUT SHAFT FRONT)					
8708-9001	FJ62	T=0.9		35789-36100-	1		
8708-9001	FJ62	T=1.2		35789-36110-	1		
8708-9001	FJ62	T=1.5		35789-36120-	1		
8708-9001	FJ62	T=1.8		35789-36130-	1		
8708-9001	FJ62	T=2.1		35789-36140-	1		
	35712A	RING, INPUT SHAFT OIL SEAL					
8708-9001	FJ62			35712-36010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35424E	RING, O (FOR C-1 ACCUMULATOR PISTON)					
8708-9001	FJ62	FR		90301-22003-	1		
8708-9001	FJ62	RR		90301-24002-	1		
	35425A	PISTON, C-2 ACCUMULATOR					
8708-9001	FJ62			35425-36010-	1		
	35425B	SPRING, COMPRESSION (FOR C-2 ACCUMULATOR PISTON)					
8708-9001	FJ62			90501-30014-	1		
	35425C	RING, O (FOR C-2 ACCUMULATOR PISTON)					
8708-9001	FJ62	UPR		90301-28003-	1		
8708-9001	FJ62	LWR		90301-33006-	1		
	35425D	SEAT, PRIMARY REGULATOR VALVE SLEEVE					
8708-9001	FJ62			35425-22010-	1		
	35428B	PLUG, 2-3 SHIFT TIMING VALVE					
8708-9001	FJ62			35428-60020-	1		
	35429	TUBE, LINE PRESSURE					
8708-9001	FJ62			35429-36010-	2		
	35430	BODY ASSY, REAR UPPER VALVE					
8708-9001	FJ62			35430-60090-	1		
	35430A	BALL (FOR REAR UPPER VALVE BODY)					
8708-9001	FJ62	OD=6.35		90360-06004-	7		
	35432	PLATE, VALVE BODY, NO.1					
8708-9001	FJ62			35432-60030-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35433	GASKET, VALVE BODY, NO.1					
8708-9001	FJ62			35433-36010-	1		
	35434	GASKET, VALVE BODY, NO.2					
8708-9001	FJ62			35434-36010-	1		
	35435	GASKET, VALVE BODY PLATE, NO.3					
8708-9001	FJ62			35435-36011-	1		
	35436A	GASKET, VALVE BODY PLATE, NO.4					
8708-9001	FJ62			35436-36011-	1		
	35437B	PLATE, VALVE BODY COVER					
8708-9001	FJ62			35437-36011-	1		
	35438B	SLEEVE, 2-3 SHIFT TIMING VALVE PLUG					
8708-9001	FJ62			35438-60020-	1		
	35438C	PIN, STRAIGHT (FOR 2-3 SHIFT TIMING VALVE PLUG SLEEVE)					
B 8708-9001	FJ62			90250-03051-	1		
	35440	BODY ASSY, FRONT UPPER VALVE					
8708-9001	FJ62			35440-60011-	1		
	35444	VALVE, INTERMEDIATE MODULATOR					
8708-9001	FJ62			35444-36010-	1		
	35444A	SPRING, COMPRESSION (FOR INTERMEDIATE MODULATOR VALVE)					
8708-9001	FJ62			90501-10107-	1		

(8708-)

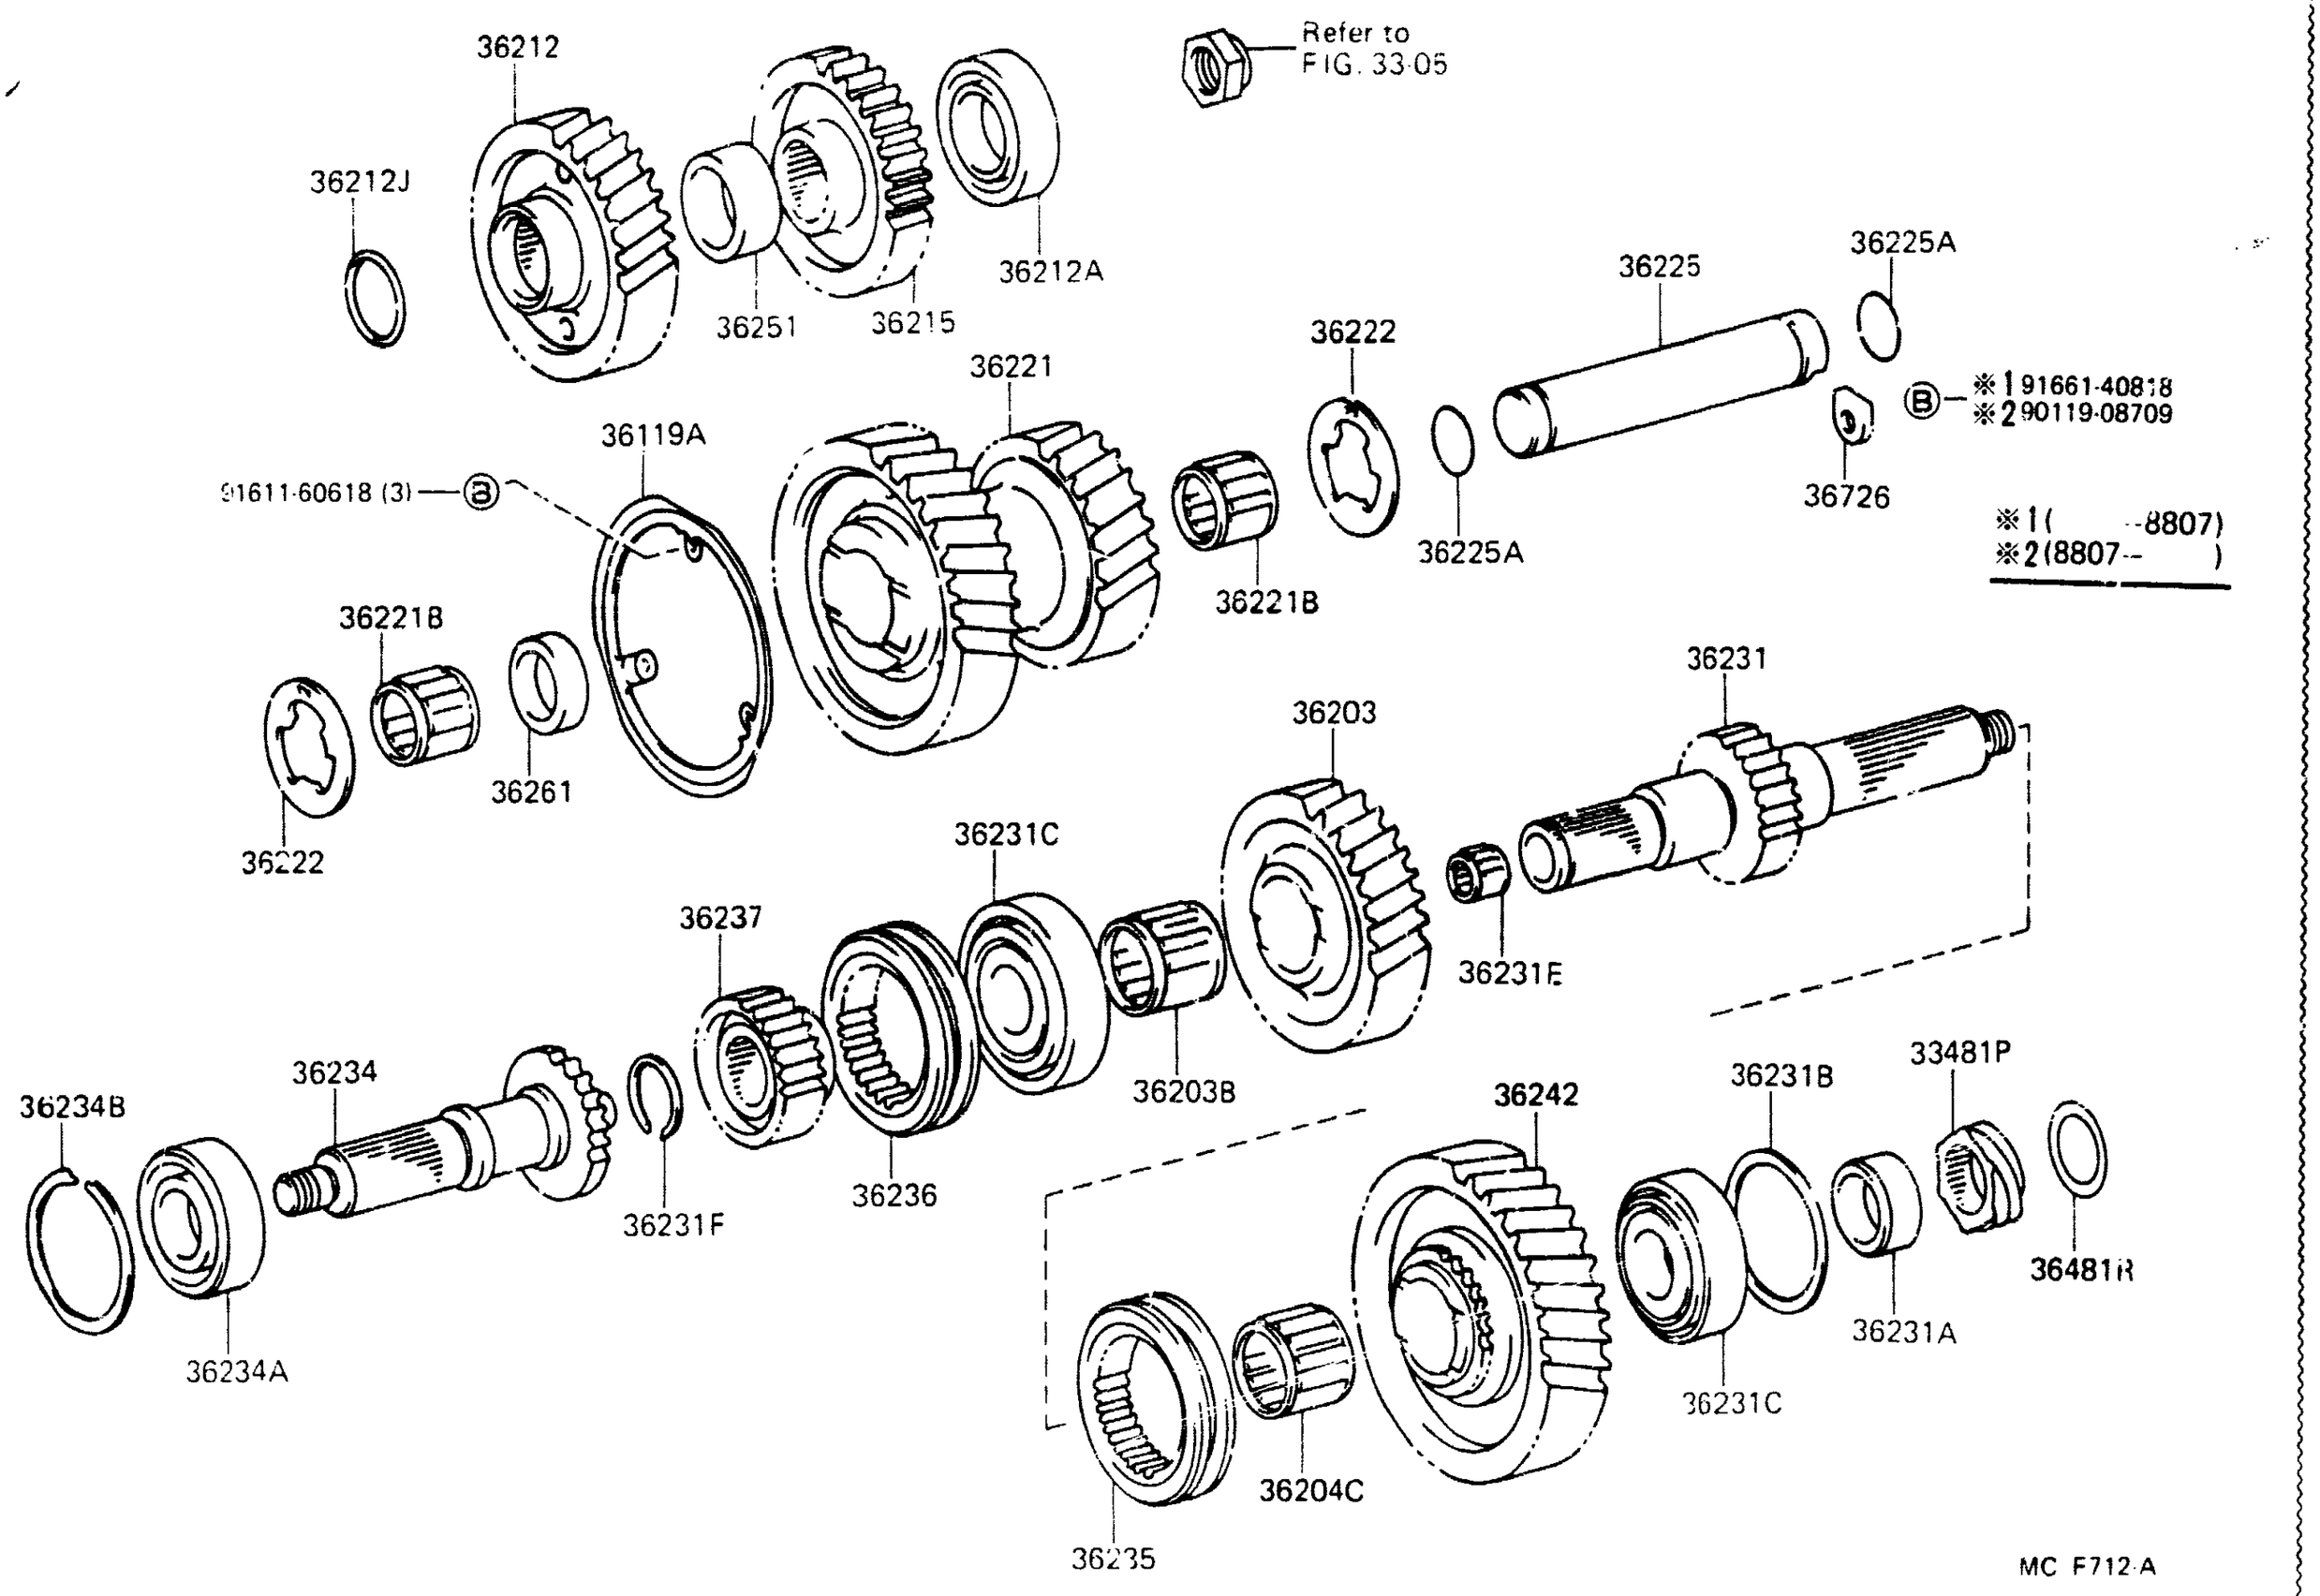

36212
Refer to FIG. 33-05
36212J
36212A
36251
36215
36225
36225A
36222
36221
36119A
91611-60618 (3)
Ⓑ
※1 91661-40818
※2 90119-08709
36726
※1(-8807)
※2(8807-)
36225A
36221B
36221B
36231
36203
36261
36222
36231C
36237
36231E
36203B
36234
36234B
36231F
36236
36242
36231B
33481P
36481R
36231A
36231C
36234A
36204C
36235
MC F712-A

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		41114 BOLT, REAR DIFFERENTIAL BEARING CAP						
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		41114-60010-	4		
	8708-9001	FJ62			90105-12053-	4		
		41201 FINAL GEAR KIT, DIFFERENTIAL, REAR						
	8708-9001	FJ62	*FGR=37:9		41201-69166-	1		
		41201A BEARING, TAPERED ROLLER (FOR REAR DRIVE PINION REAR)						
	8708-8911	FJ62			# 90366-40004-	1		
					(90366-40059-)	1		
B	8911-9001	FJ62..WGG			90366-40059-	1		
		41201B BEARING, TAPERED ROLLER (FOR REAR DRIVE PINION FRONT)						
P	8708-8911	FJ62			90366-30011-	1		
A	8911-8912	FJ62..WGV			〃	1		
A	8911-8912	FJ62..WGG	W(DIFFERENTIAL LOCK)		〃	1		
B	8911-9001	FJ62..WGG			90366-30038-	1		
		41201C SEAL, OIL (FOR REAR DIFFERENTIAL CARRIER)						
P	8708-8911	FJ62			90311-38134-	1		
B	8911-9001	FJ62..WGG			90311-38035-	1		
		41201D WASHER, PLATE (FOR REAR DIFFERENTIAL DRIVE PINION)						
	8708-9001	FJ62	T=1.05		90201-40551-	1		
	8708-9001	FJ62	T=1.10		90201-40552-	1		
	8708-9001	FJ62	T=1.15		90201-40553-	1		
	8708-9001	FJ62	T=1.20		90201-40554-	1		
	8708-9001	FJ62	T=1.25		90201-40555-	1		
	8708-9001	FJ62	T=1.30		90201-40556-	1		
	8708-9001	FJ62	T=1.35		90201-40557-	1		
	8708-9001	FJ62	T=1.40		90201-40558-	1		
	8708-9001	FJ62	T=1.45		90201-40559-	1		
	8708-9001	FJ62	T=1.50		90201-40560-	1		
	8708-9001	FJ62	T=1.55		90201-40561-	1		
		41204 FLANGE SUB-ASSY, DRIVE PINION COMPANION, REAR						
	8708-9001	FJ62			41204-60030-	1		
		41204A WASHER, PLATE (FOR DRIVE PINION)						
	8708-9001	FJ62			90201-22007-	1		
		41204B NUT (FOR DRIVE PINION)						
	8708-9001	FJ62			90179-22011-	1		
		41214 SLINGER, REAR DIFFERENTIAL DRIVE PINION OIL						
	8708-9001	FJ62			41214-26010-	1		
		41222A BOLT (FOR REAR RING GEAR SET)						
	8708-9001	FJ62			41226-35010-	12		
		41231 SPACER, REAR DIFFERENTIAL DRIVE PINION BEARING						
P	8708-8911	FJ62			41231-60020-	1		
B	8911-9001	FJ62..WGG			41231-60030-	1		
		41252 DEFLECTOR, DUST (FOR REAR DIFFERENTIAL)						
	8708-9001	FJ62			41252-35010-	1		

*FGR=Final Gear Ratio

(8708-)


ILLUST.NO. 10F3

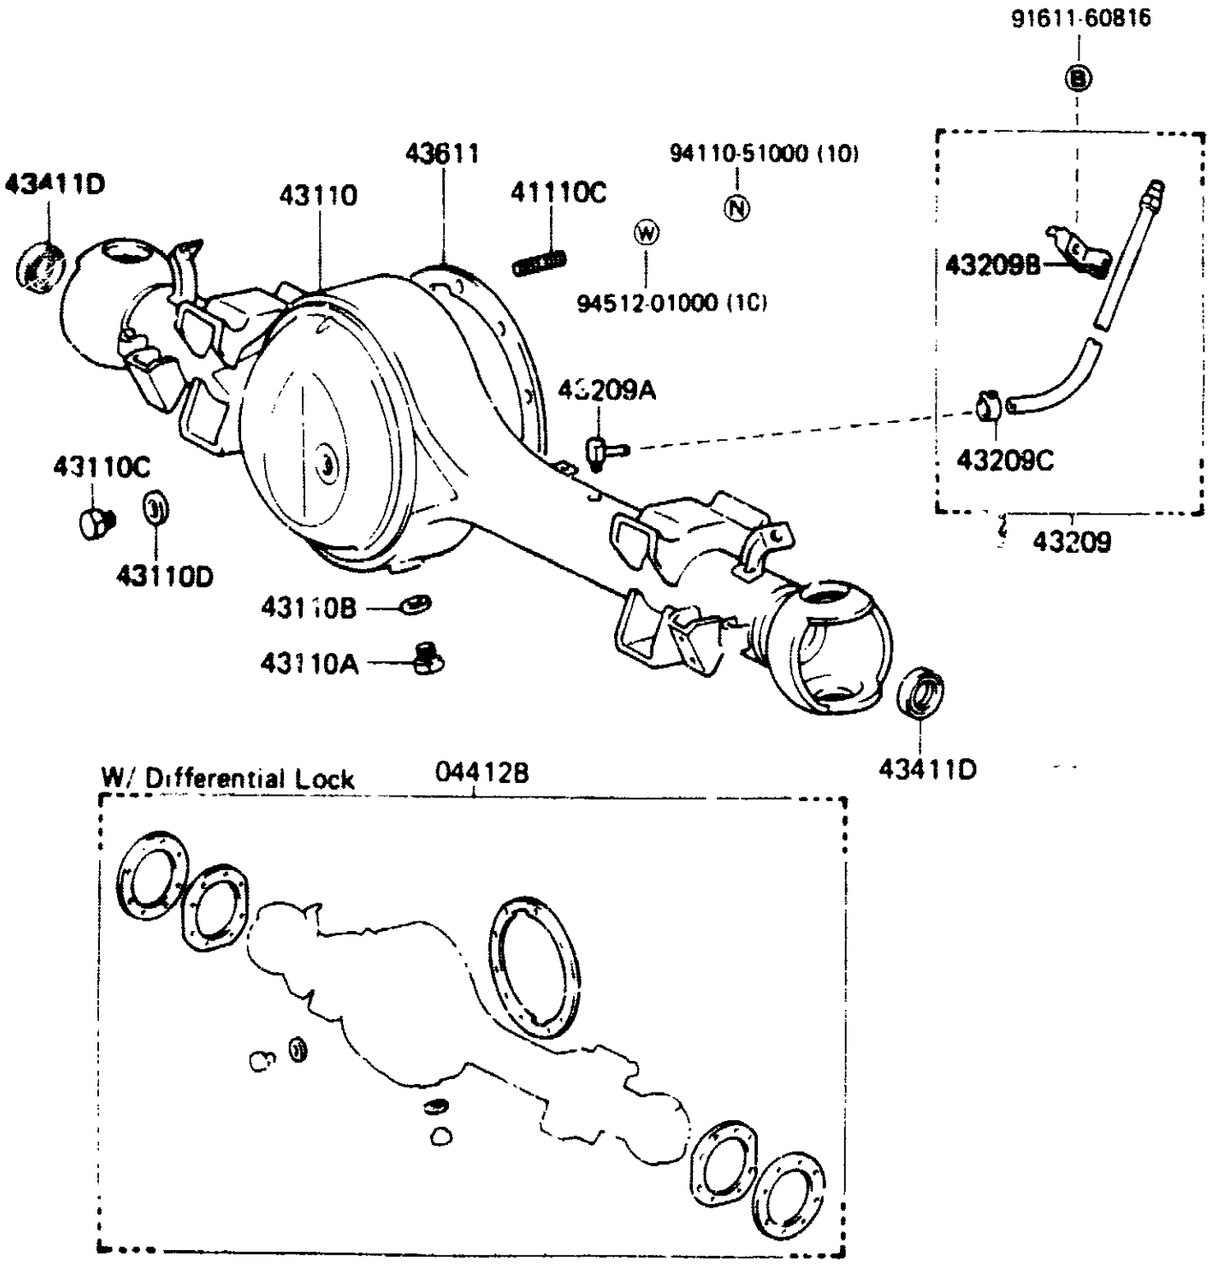

MC E295-F

(8708-)

ILLUST.NO. 20F3

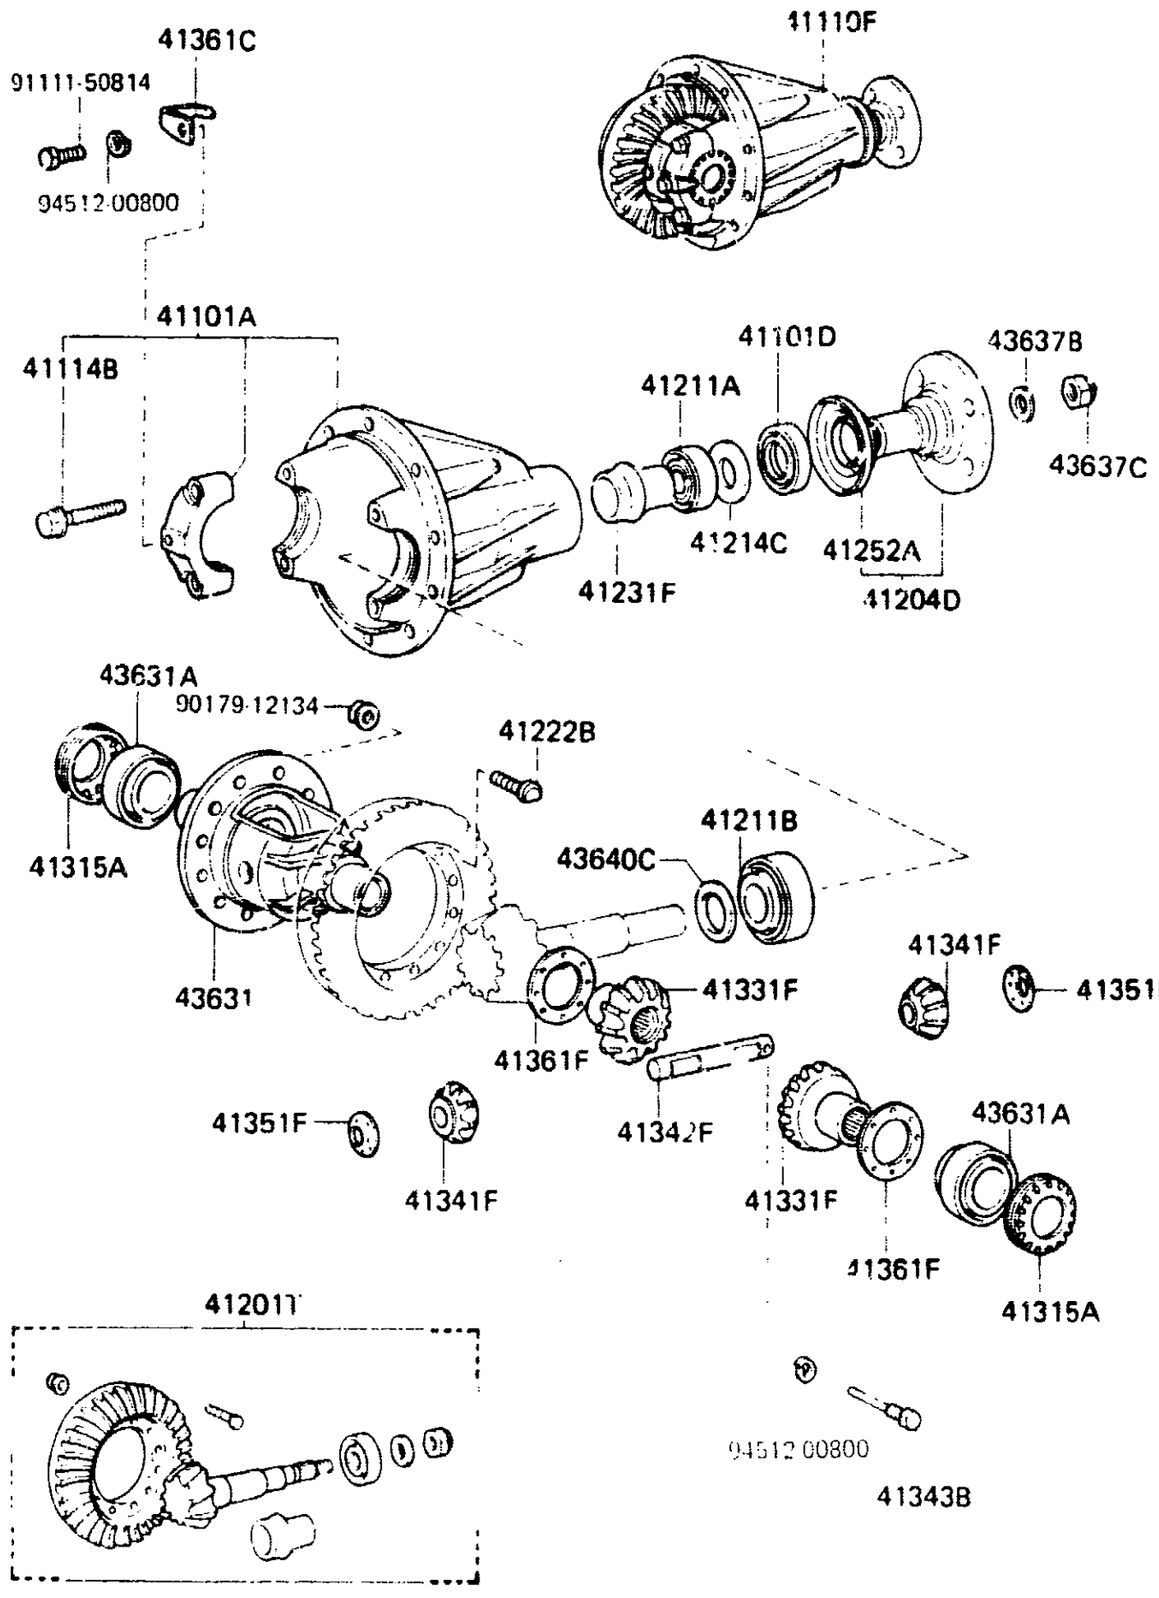

MC E296-C


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	45899A	COVER, TILT STEERING SUPPORT STOPPER					
8708-9001	FJ62			45899-22020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

FIG. 47-01 BRAKE PEDAL & BRACKET

791430M-01212

(8708-)

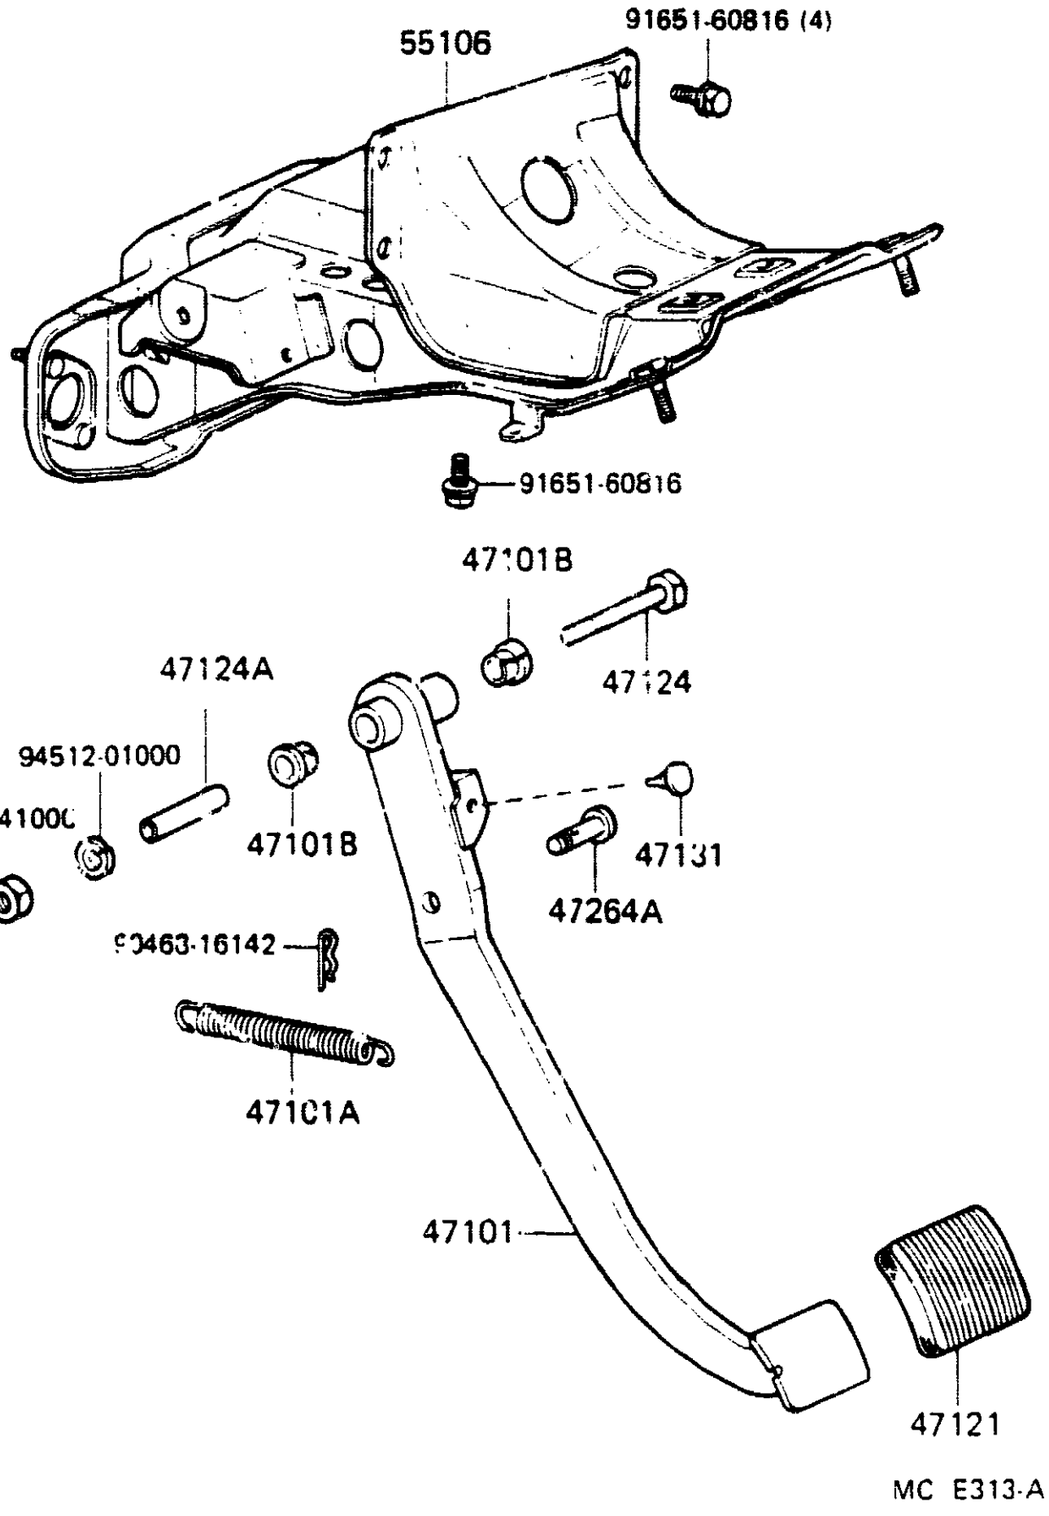

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	47101	PEDAL SUB-ASSY, BRAKE					
8708-9001	FJ62			47101-60150-	1		
	47101A	SPRING (FOR BRAKE PEDAL RETURN)					
8708-9001	FJ62			90506-12451-	1		
	47101B	BUSH (FOR BRAKE PEDAL)					
8708-9001	FJ62			90386-13192-	2		
	47121	PAD, BRAKE PEDAL					
8708-9001	FJ62			47121-30050-	1		
	47124	SHAFT, BRAKE PEDAL					
8708-9001	FJ62			91121-51070-	1		
	47124A	COLLAR (FOR BRAKE PEDAL SHAFT)					
8708-9001	FJ62			90387-10004-	1		
	47131	CUSHION (FOR STOP LAMP SWITCH)					
8708-9001	FJ62			90541-06008-	1		
	47264A	PIN (FOR PUSH ROD)					
8708-9001	FJ62			90249-10017-	1		
	55106	SUPPORT SUB-ASSY, BRAKE PEDAL					
8708-9001	FJ62			55106-90A16-	1		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		47315	TUBE, FRONT BRAKE, NO.5					
	8708-9001	FJ62			47315-60340-	1		
		47316	TUBE, FRONT BRAKE, NO.6					
	8708-9001	FJ62			47316-60310-	1		
		47316A	HOSE, FLEXIBLE (FOR REAR BRAKE TUBE)					
	8708-9001	FJ62			96940-33805-	1		
		47322	TUBE, REAR BRAKE, NO.2					
	8708-9001	FJ62			47322-60490-	1		
		47322B	WAY, NO.2 (FOR REAR BRAKE TUBE)					
	8708-9001	FJ62			90413-10106-	1		
		47323	TUBE, REAR BRAKE, NO.3					
	8708-9001	FJ62			47323-60041-	1		
		47324	TUBE, REAR BRAKE, NO.4					
	8708-9001	FJ62			47324-60021-	1		
		47325	TUBE, REAR BRAKE, NO.5					
	8708-9001	FJ62			47325-60100-	1		
		47326	TUBE, REAR BRAKE, NO.6					
	8708-9001	FJ62			47326-60110-	1		
		47341B	TUBE, WHEEL CYLINDER, FRONT RH NO.1					
	8708-9001	FJ62			47341-60031-	1		
		47343A	TUBE, WHEEL CYLINDER, FRONT LH NO.1					
	8708-9001	FJ62			47343-60021-	1		
		47354	BRACKET, FRONT FLEXIBLE HOSE					
	8708-9001	FJ62			47354-60030-	1		
		47355A	BRACKET, FLEXIBLE HOSE, NO.5					
	8708-9001	FJ62			47355-60030-	1		
		47371A	CLAMP, BRAKE TUBE, NO.1					
	8708-9001	FJ62			47371-35020-	4		
		47910	VALVE ASSY, LOAD SENSING PROPORTIONING					
	8708-9001	FJ62			47910-60060-	1		
		47920	SPRING ASSY, LOAD SENSING					
	8708-9001	FJ62			47920-60020-	1		
		47920A	COLLAR (FOR LOAD SENSING SPRING)					
B	8708-9001	FJ62			90387-08099-	2		
		47920B	CLIP (FOR LOAD SENSING VALVE BOOT)					
	8708-9001	FJ62			90467-31110-	1		
		47920C	WASHER (FOR LOAD SENSING SPRING)					
	8708-9001	FJ62			90202-10103-	2		
		47931	BRACKET, LOAD SENSING VALVE					
	8708-8807	FJ62			# 47931-60020- (47931-60021-)	1 1		002
	8807-9001	FJ62			47931-60021-	1	003	

	PART NUMBER	LOCATION
B	35676-36010-	2L1
	-36020-	2D2
	-36030-	2D2
	-36040-	2D2
	-36070-	2F2
	-36080	2F2
	-36090-	2F2
	35701-60010-	2B2
	35706-60011-	2E2
	35709-36010-	2E2
	35712-36010-	2C2
		2L1
	35713-36011-	2G2
	35719-60010-	2E2
	35720-60010-	2G2
	35735-36010-	2J2
	35737-36010-	2G2
	35738-60010-	2H2
	35743-60010-	2H2
	35748-36010-	2H2
	35760-60010-	2H2
	35761-60010-	2H2
	35762-60010-	2H2
	35785-36010-	2E2
		2M1
	35789-36010-	2M1
	-36020-	2B2
		2M1
	-36040-	2F1
	-36050-	2F1
	-36060-	2F1
	-36070-	2M1
	-36090-	2A2
		2B2
		2H2
	-36100-	2C2
	-36110-	2C2
	-36120-	2C2
	-36130-	2C2
	-36140-	2C2
	35790-36010-	2H2
	35791-36010-	2L1
	35847-36010-	2H3
	35893-36010-	2H3
	35906-60050-	2B1
	35921-60030-	2B1
	35971-60030-	2B1
	35972-60020-	2B1
	35974-60030-	2B1
	35975-60020-	2B1
	-60030-	2B1
	35976-60020-	2B1
	35989-60020-	2C1
	36103-60160-	2A4
	36110-6A790-	2M3
	36119-60010-	2D4
	-60020-	2D4
	-60030-	2B4
	36122-60040-	2B4
	36124-60020-	2B4
	36128-60021-	2B4
	36132-60020-	2B4
	36134-60020-	2B4
	36142-60030-	2B4

	PART NUMBER	LOCATION
	36143-60020-	2B4
	-60030-	2B4
	36144-60020-	2B4
	36152-60030-	2B4
	36164-60040-	2H4
	36212-60090-	2D4
	36215-60030-	2D4
	36221-60090-	2D4
	36222-60020-	2D4
P	36225-60050-	2D4
	36231-60050-	2D4
B	36234-60031-	2E4
	36235-60020-	2E4
	36237-60020-	2E4
	36241-60080-	2D4
P	36242-60130-	2E4
	36251-60030-	2E4
S	36303-60130-	2F4
S	36307-60040-	2F4
B	36308-60100-	2F4
B	36311-60041-	2F4
	36312-60040-	2F4
	36313-60070-	2G4
	36314-60040-	2G4
B	36324-60050-	2G4
B	36327-60031-	2G4
B	36337-60080-	2H4
	36338-60030-	2G4
	36343-60010-	2H4
	-60040-	2H4
	36360-60220-	2G4
B	36362-60020-	2G4
	36369-60030-	3M6
	36409-60040-	2J4
	36410-60030-	2H4
B	36416-36010-	2H4
	36422-36010-	2H4
	36482-60100-	2J4
	36486-60010-	2H4
	36720-60020-	2E4
	37110-60410-	2K4
P	37140-60200-	2K4
	37302-36020-	2L4
	-60050-	2L4
B	37305-36020-	2L4
B	-60010-	2L4
	37315-36020-	2L4
	37402-10020-	2A7
	-36080-	2L4
B	38628-60010-	2C1
S	41101-60041-	2B5
S		2E6
P	-60080-	2B5
P		2E6
	41110-60110-	2B5
		2E6
N	-60111-	2B5
N		2E6
P	-60230-	2B5
P		2E6
N	-60231-	2B5
N		2E6
	41111-60010-	2C5
		2E6

	PART NUMBER	LOCATION
	41201-69166-	2C5
		2E6
	41204-60030-	2C5
P		2E6
S	41214-26010-	2C5
S		2E6
	41226-35010-	2C5
		2E6
	41231-60020-	2C5
P		2E6
B	-60030-	2C5
B		2F6
	41252-35010-	2C5
		2F6
P	41301-60020-	2D5
P		2H6
S	-60021-	2D5
S		2H6
B	41311-60070-	2D5
B		2H6
	41315-30010-	2D5
		2F6
	41316-30010-	2D5
B		2G6
B	41331-25010-	2D5
B		2F6
	-35020-	2D5
		2F6
	-60020-	2D5
		2F6
B	41341-25010-	2E5
B		2F6
	-55012-	2D5
		2F6
B	41342-55010-	2E5
B		2F6
	-60010-	2E5
		2F6
	-60020-	2E5
		2F6
P	41343-55010-	2E5
P		2F6
	-60010-	2E5
B	-60030-	2E5
B		2G6
	41344-35010-	2E5
	41345-35010-	2E5
	41346-35010-	2E5
	41347-35010-	2E5
	41348-35010-	2E5
B	41351-25010-	2E5
B		2G6
	-35011-	2E5
		2G6
	41361-60010-	2E5
		2G6
	-60020-	2E5
		2G6
	-60030-	2E5
		2G6
	-60040-	2E5
		2G6
	41375-60010-	2E5
		2G6

	PART NUMBER	LOCATION
	41451-60010-	2E5
		2G6
P	41453-60010-	2E5
P		2G6
S	-60011-	2E5
S		2G6
	41456-60010-	2E5
		2G6
	41460-60010-	2E5
	-60012-	2G6
	-60052-	2K5
	41464-60010-	2F5
		2G6
	41465-60010-	2F5
		2G6
	41466-60010-	2F5
		2H6
	41467-60020-	2F5
	41991-60030-	2F5
	-60040-	2F5
	42109-60050-	2F5
	42110-60193-	2F5
	-60301-	2F5
	42137-55010-	2F5
	42181-36010-	2F5
		2H6
P	-60030-	2F5
	42183-35010-	2F5
	42306-60051-	2G5
P	42311-60060-	2I5
N	-60061-	2I5
	-60080-	2I5
P	42312-60050-	2I5
N	-60051-	2I5
	-60060-	2I5
	42323-60010-	2K6
	-60070-	2F9
	42325-55010-	2I5
A	42411-60011-	2I5
	42419-60011-	2J5
A	42420-60110-	2J5
	42427-60021-	2J5
	42428-60011-	2J5
	42431-60010-	2I5
	42441-30010-	2J5
	42443-55020-	2J5
	42506-60010-	2A6
	42511-60010-	2A6
	42512-60010-	2A6
	42513-60010-	2A6
	42514-60010-	2A6
	42515-60010-	2A6
	42516-60010-	2A6
	42517-60010-	2A6
	42518-60010-	2A6
	42521-60010-	2A6
	42522-60010-	2A6
	42523-60010-	2A6
	42531-60030-	2A6
	42532-60030-	2B6
	42533-60010-	2B6
	42534-60030-	2B6
	42535-60010-	2B6
	42537-60010-	2B6
	-60020-	2B6

	PART NUMBER	LOCATION
	42538-60010-	2B6
	42540-60010-	2B6
	42541-60010-	2B6
	42550-60010-	2B6
	42560-60011-	2B6
	42562-60010-	2B6
A	42601-60221-	2K5
	42603-35080-	2K5
	-60012-	2K5
	-60052-	2K5
B	42652-60060-	2L5
	43110-60144-	2H6
	-60211-	2H6
	43204-60020-	2E9
	43209-60011-	2H6
	43211-60050-	2E9
	43212-60050-	2E9
	43232-35010-	2E9
	43233-60011-	2E9
	43234-60011-	2F9
	43235-60010-	2F9
	43236-60010-	2F9
	43237-60030-	2F9
	43238-60010-	2F9
	43239-60020-	2F9
P	43401-60012-	2F9
S	-60060-	2F9
	43405-60016-	2J6
P	43411-60020-	2J6
N	-60060-	2J6
	43412-35010-	2J6
	-60080-	2J6
	43422-60020-	2J6
		2K6
	43435-60011-	2F9
	43436-60011-	2F9
	43502-60020-	2K6
	43509-60015-	2K6
	43512-60040-	2L5
	43521-60011-	2L6
	43530-69017-	2L6
	43531-60010-	2L6
	43532-60010-	2L6
	44104-22011-	2J7
	44105-30060-	2J7
	44107-60060-	2K7
	44108-60010-	2K7
	44110-60160-	2K7
	44111-60040-	2K7
	44115-30040-	2K7
	44116-30040-	2K7
	44120-60130-	2L7
	44142-22010-	2K7
	-22020-	2L7
	44302-14010-	2D7
	44304-60021-	2D7
	44305-30020-	2D7
	44306-60070-	2F7
	44308-35030-	2D7
	44311-60010-	2D7
	44312-12010-	2E7
	44313-12010-	2E7
	-12020-	2E7
	-12030-	2E7


	PART NUMBER	LOCATION
	44313-12040-	2E7
	-12050-	2E7
	-22040-	2E7
	-22050-	2E7
	-22060-	2E7
	-22070-	2E7
	-22080-	2E7
	44320-60090-	2E7
	44325-12010-	2E7
	-12020-	2E7
	-12030-	2E7
	-12040-	2E7
	-12050-	2E7
	44330-30100-	2E7
	-30110-	2E7
	-30120-	2E7
	-30130-	2E7
	-30140-	2E7
	-30150-	2E7
	44341-12010-	2F7
	44343-12040-	2F7
	44345-12010-	2F7
	-12020-	2F7
	-12030-	2F7
	-12040-	2F7
	-12050-	2F7
	44391-14010-	2F7
	44410-60170-	2G7
	44416-60061-	2G7
	44443-60050-	2G7
	44446-60020-	2G7
	44605-30350-	2G8
	44608-17090-	2G8
	44609-17090-	2G8
	44610-60530-	2G8
	44624-20810-	2G8
	44628-20810-	2G8
	44632-27290-	2G8
	44633-20811-	2G8
	44637-20810-	2G8
	44645-10080-	2G8
	44651-20810-	2G8
	44673-20810-	2G8
	44730-24020-	2G8
	44758-60030-	2G8
	44772-60050-	2G8
	44773-60030-	2G8
	44785-35020-	2G8
	44786-60040-	2B9
	45025-60020-	2M6
P	45044-69055-	2L7
N	-69056-	2L7
A	45045-69045-	2L7
S	-69046-	2L7
P	45046-69115-	2L7
N	-69116-	2L7
P	45047-69065-	2L7
N	-69066-	2L7
	45081-22020-	2M6
	45082-60010-	2M6
P	45100-60140-03	2H7
P	-60140-06	2H7
	45105-60040-	2H7
P	45130-60101-03	2H7

1. MODELS COVERED & CHARACTERISTICS

Vehicle Appearance

TOYOTA LAND CRUISER Station Wagon (Production from Aug. '87 up to Jan. '90)

Station Wagon (8709–9001)

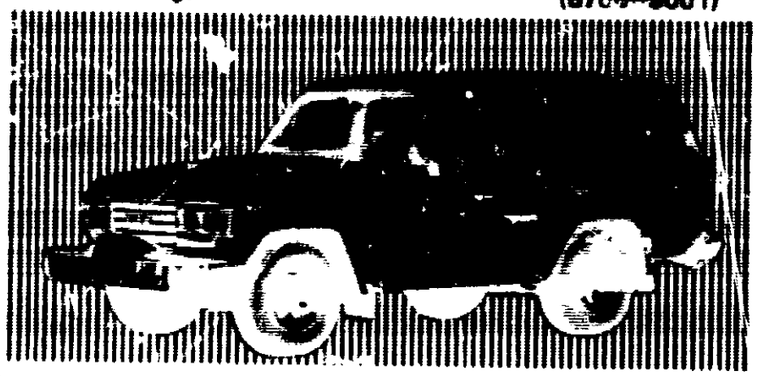



MP1965

FIG. 3-01 TRANSAXLE OR TRANSMISSION ASSY & GASKET KIT (ATM)

2D1

(8708-)
A44DF

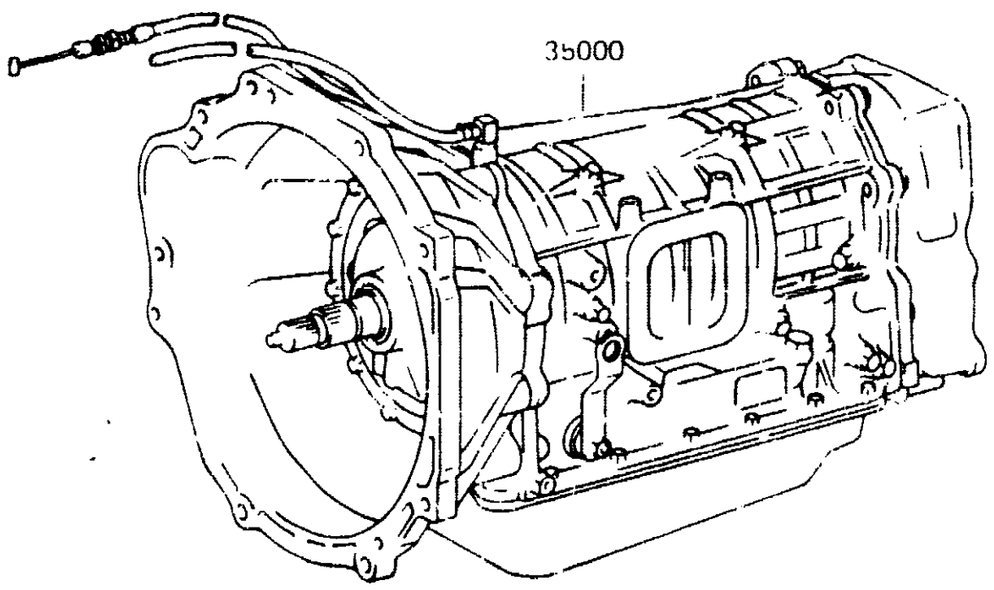


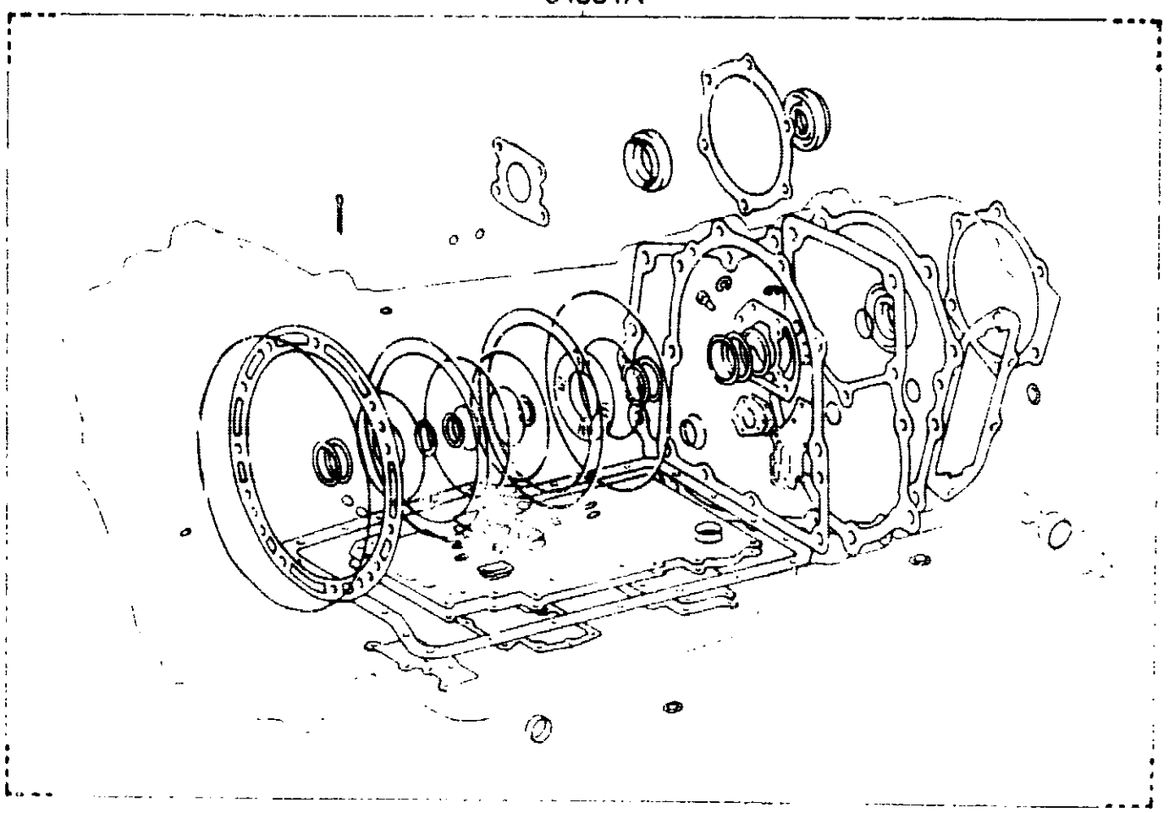


MC F089

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	04351A	GASKET KIT, TRANSAXLE OVERHAUL (ATM)					
8708-9001	FJ62			04351-60011-	1		
	35000	TRANSMISSION ASSY, AUTOMATIC					
8708-8803	FJ62			# 35000-60162- (35000-60163-)	1 1		
8803-9001	FJ62			35000-60163-	1		

(8708-)
A440F

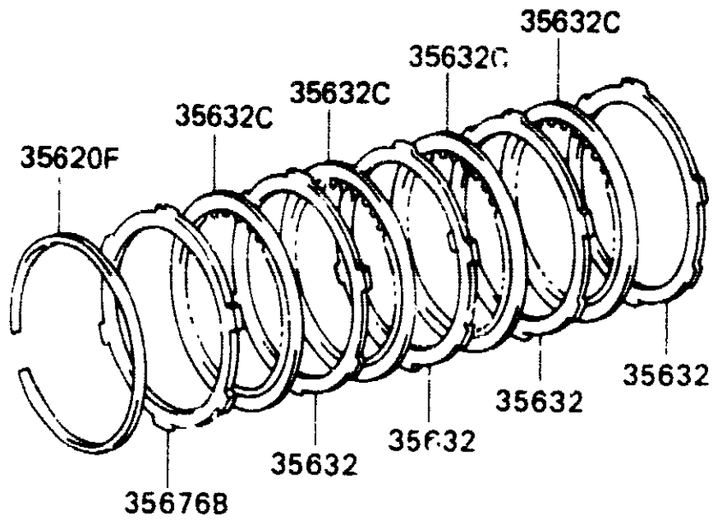

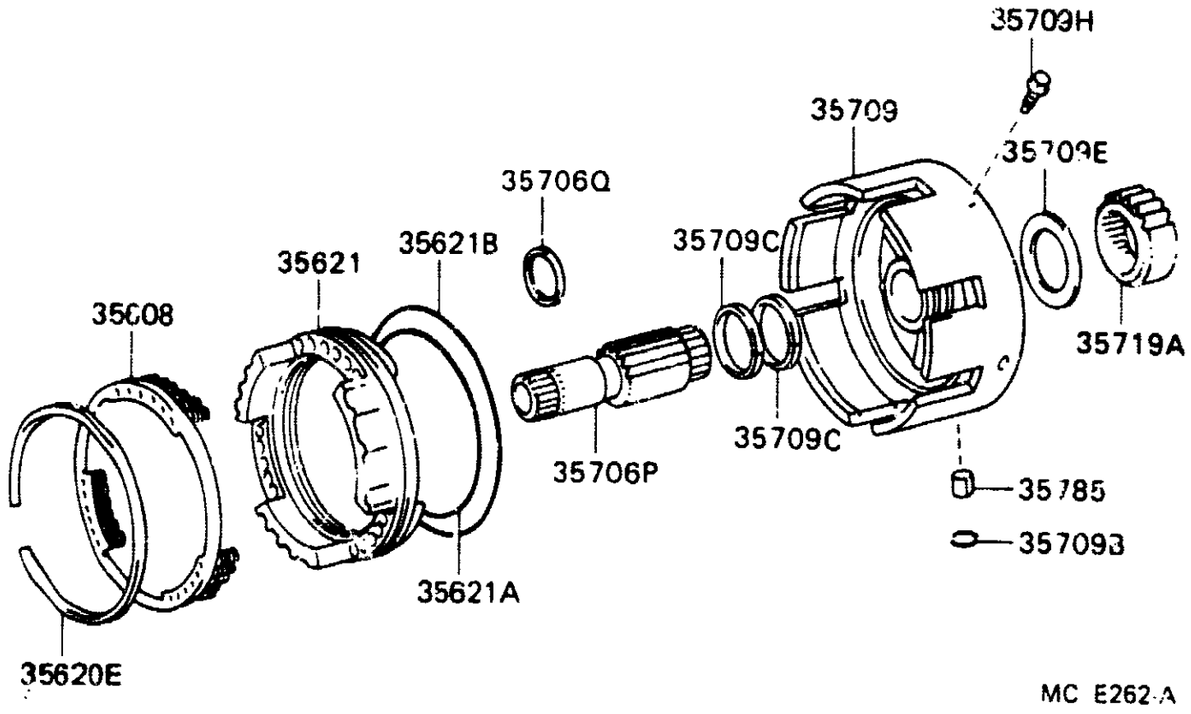

MC E262-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35608	SPRING SUB-ASSY, 2ND BRAKE PISTON RETURN					
8708-9001	FJ62			35608-36010-	1		
	35620E	RING, HOLE SNAP (FOR BRAKE PISTON RETURN SPRING)					
8708-9001	FJ62			90521-99021-	1		
	35620F	RING, HOLE SNAP (FOR BRAKE NO.1 FLANGE)					
8708-9001	FJ62			90521-99021-	1		
	35621	PISTON, BRAKE, NO.1					
8708-9001	FJ62			35621-36010-	1		
	35621A	RING, O (FOR BRAKE PISTON OUTER)					
8708-9001	FJ62			90301-99030-	1		
	35621B	RING, O (FOR BRAKE PISTON INNER)					
8708-9001	FJ62			90301-99031-	1		
	35632	PLATE, BRAKE					
8708-9001	FJ62			35632-36010-	4		
	35632C	DISC, CLUTCH (FOR BRAKE)					
8708-9001	FJ62			35633-36010-	4		
	35676B	FLANGE, BRAKE, NO.1					
8708-9001	FJ62		T=5.0	35676-36010-	1		
8708-9001	FJ62		T=5.2	35676-36020-	1		
8708-9001	FJ62		T=5.4	35676-36030-	1		
8708-9001	FJ62		T=5.6	35676-36040-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		35444B	KEY, STRAIGHT (FOR INTERMEDIATE MODULATOR VALVE)					
B	8708-9001	FJ62			90282-03006-	1		
		35444C	PLUG (FOR INTERMEDIATE MODULATOR VALVE)					
B	8708-9001	FJ62			90339-04017-	1		
		35445	VALVE, LOW MODULATOR					
	8708-9001	FJ62			35445-36010-	1		
		35445A	SPRING, COMPRESSION (FOR LOW MODULATOR VALVE)					
	8708-9001	FJ62			90501-08095-	1		
		35445F	KEY, STRAIGHT (FOR LOW MODULATOR VALVE)					
	8708-9001	FJ62			90282-03007-	1		
		35445G	PLUG (FOR LOW MODULATOR VALVE)					
	8708-9001	FJ62			90339-04009-	1		
		35451A	PIN, STRAIGHT (FOR THROTTLE VALVE SLEEVE)					
	8708-9001	FJ62			90250-03036-	2		
		35451C	SLEEVE, THROTTLE VALVE, NO.1					
	8708-9001	FJ62			35451-36010-	1		
		35452A	PLUG (FOR 2-3 SHIFT VALVE PLUG)					
	8708-9001	FJ62			90339-05008-	1		
		35452B	PIN, STRAIGHT (FOR 2-3 SHIFT VALVE PLUG)					
	8708-9001	FJ62			90250-02016-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35452F	PLUG, 2-3 SHIFT VALVE					
8708-9001	FJ62			35452-36010-	1		
	35453	VALVE, DETENT REGULATOR					
8708-9001	FJ62			35445-36010-	1		
	35453A	SPRING, COMPRESSION (FOR DETENT REGULATOR VALVE)					
8708-9001	FJ62			90501-09056-	1		
	35453B	KEY, STRAIGHT (FOR DETENT REGULATOR VALVE)					
8708-9001	FJ62			90282-03006-	1		
	35453C	PLUG (FOR DETENT REGULATOR VALVE)					
8708-9001	FJ62			90339-04015-	1		
	35454	VALVE, LOW COAST SHIFT					
8708-9001	FJ62			35454-36010-	1		
	35454A	KEY, STRAIGHT (FOR LOW COAST SHIFT VALVE)					
8708-9001	FJ62			90282-03006-	1		
	35454B	PLUG (FOR LOW COAST SHIFT VALVE)					
8708-9001	FJ62			90339-06004-	1		
	35455	PLUG, 1-2 SHIFT VALVE LOW					
8708-9001	FJ62			35455-36010-	1		
	35455A	PLUG (FOR 1-2 SHIFT VALVE LOW PLUG)					
8708-9001	FJ62			90339-06009-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	33481P GEAR, SPEEDOMETER DRIVE (FOR TRANSFER)						
8708-8709	FJ62			# 33481-60050-	1		
				(33481-60051-)	1		
8709-9001	FJ62			33481-60051-	1		
	36119A RECEIVER, TRANSFER OIL (FOR TRANSFER IDLER GEAR)						
8708-9001	FJ62			36119-60020-	1		
	36203 GEAR SUB-ASSY, TRANSFER HIGH SPEED OUTPUT						
8708-9001	FJ62			36241-60080-	1		
	36203B BEARING (FOR TRANSFER HIGH SPEED OUTPUT GEAR)						
8708-9001	FJ62			90364-40001-	1		
	36204C BEARING, NEEDLE ROLLER (FOR TRANSFER LOW GEAR)						
8708-9001	FJ62			90364-40001-	1		
	36212 GEAR, TRANSFER INPUT						
8708-9001	FJ62			36212-60090-	1		
	36212A BEARING, RADIAL BALL (FOR TRANSFER INPUT GEAR)						
8708-9001	FJ62			90363-35013-	1		
	36212J RING, O (FOR TRANSFER INPUT GEAR)						
8708-9001	FJ62			90301-34005-	1		
	36215 GEAR, POWER TAKE-OFF DRIVE						
8708-9001	FJ62			36215-60030-	1		
	36221 GEAR, TRANSFER IDLER						
8708-9001	FJ62			36221-60090-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	36221B BEARING (FOR TRANSFER IDLER GEAR)						
8708-9001	FJ62			90364-38012-	2		
	36222 WASHER, TRANSFER IDLER GEAR SIDE THRUST						
8708-9001	FJ62			36222-60020-	2		
	36225 SHAFT, TRANSFER IDLER GEAR						
8708-9001	FJ62			36225-60050-	1		
	36225A RING, O (FOR TRANSFER IDLER SHAFT)						
8708-9001	FJ62			90301-34004-	2		
	36231 SHAFT, TRANSFER OUTPUT, REAR						
8708-9001	FJ62			36231-60050-	1		
	36231A SPACER (FOR TRANSFER OUTPUT SHAFT)						
8708-9001	FJ62			90560-35008-	1		
	36231B SHIM (FOR TRANSFER OUTPUT SHAFT)						
8708-9001	FJ62	T=0.15		90564-70001-	X		
8708-9001	FJ62	T=0.40		90564-70002-	1		
8708-9001	FJ62	T=0.50		90564-70003-	1		
8708-9001	FJ62	T=0.60		90564-70004-	1		
8708-9001	FJ62	T=0.70		90564-70005-	1		
8708-9001	FJ62	T=0.80		90564-70006-	1		
8708-9001	FJ62	T=0.90		90564-70007-	1		
8708-9001	FJ62	T=1.00		90564-70008-	1		
8708-9001	FJ62	T=1.10		90564-70009-	1		
8708-9001	FJ62	T=1.20		90564-70010-	1		


	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		41301A BEARING, TAPERED ROLLER (FOR REAR DIFFERENTIAL CASE)						
P	8708-8911	FJ62			90368-45066-	2		
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		90366-60002-	2		
B	8911-9001	FJ62..WGG			90368-50024-	2		
		41301B WASHER (FOR REAR DIFFERENTIAL TAPERED ROLLER BEARING)						
	8708-9001	FJ62	T=2.67,MARK 01		90201-79001-	X		
	8708-9001	FJ62	T=2.70,MARK 02		90201-79002-	X		
	8708-9001	FJ62	T=2.73,MARK 03		90201-79003-	X		
	8708-9001	FJ62	T=2.76,MARK 04		90201-79004-	X		
	8708-9001	FJ62	T=2.79,MARK 05		90201-79005-	X		
	8708-9001	FJ62	T=2.82 MARK 06		90201-79006-	X		
	8708-9001	FJ62	T=2.85 MARK 07		90201-79007-	X		
	8708-9001	FJ62	T=2.88 MARK 08		90201-79008-	X		
	8708-9001	FJ62	T=2.91 MARK 09		90201-79009-	X		
	8708-9001	FJ62	T=2.94 MARK 10		90201-79010-	X		
	8708-9001	FJ62	T=2.97 MARK 11		90201-79011-	X		
	8708-9001	FJ62	T=3.00 MARK 12		90201-79012-	X		
	8708-9001	FJ62	T=3.03 MARK 13		90201-79013-	X		
	8708-9001	FJ62	T=3.06 MARK 14		90201-79014-	X		
	8708-9001	FJ62	T=3.09 MARK 15		90201-79015-	X		
	8708-9001	FJ62	T=3.12 MARK 16		90201-79016-	X		
	8708-9001	FJ62	T=3.15 MARK 17		90201-79017-	X		
	8708-9001	FJ62	T=3.18 MARK 18		90201-79018-	X		
	8708-9001	FJ62	T=3.21 MARK 19		90201-79019-	X		
	8708-9001	FJ62	T=3.24 MARK 20		90201-79020-	X		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		41301B WASHER (FOR REAR DIFFERENTIAL TAPERED ROLLER BEARING) CONTINUED						
	8708-9001	FJ62	T=3.27 MARK 21		90201-79021-	X		
	8708-9001	FJ62	T=3.30 MARK 22		90201-79022-	X		
	8708-9001	FJ62	T=3.33 MARK 23		90201-79023-	X		
		41302 CASE SUB-ASSY, DIFFERENTIAL						
P	8708-8912	FJ62	W(DIFFERENTIAL LOCK)		41301-60020-	1		
	8708-8911	FJ62			41311-36010-			
B	8911-9001	FJ62..WGG			41311-60070-	1		
S	8912-9001	FJ62..WGG	W(DIFFERENTIAL LOCK)		41301-60021-	1		
		41302A BOLT (FOR DIFFERENTIAL CASE)						
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		90109-10091-	10		
		41315 NUT, REAR DIFFERENTIAL BEARING ADJUSTING						
	8708-9001	FJ62			41315-30010-	2		
		41316 LOCK, REAR DIFFERENTIAL BEARING ADJUSTING NUT						
	8708-9001	FJ62			41316-30010-	1		
		41331 GEAR, REAR DIFFERENTIAL SIDE						
	8708-8808	FJ62			41331-35020-	2		
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		41331-60020-	2		
B	8808-9001	FJ62..WGG			41331-25010-	2		
		41341 PINION, REAR DIFFERENTIAL						
	8708-8808	FJ62			41341-55012-	2		
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		〃	4		

(8708-)

ILLUST.NO. 20F3

W/ Differential Lock

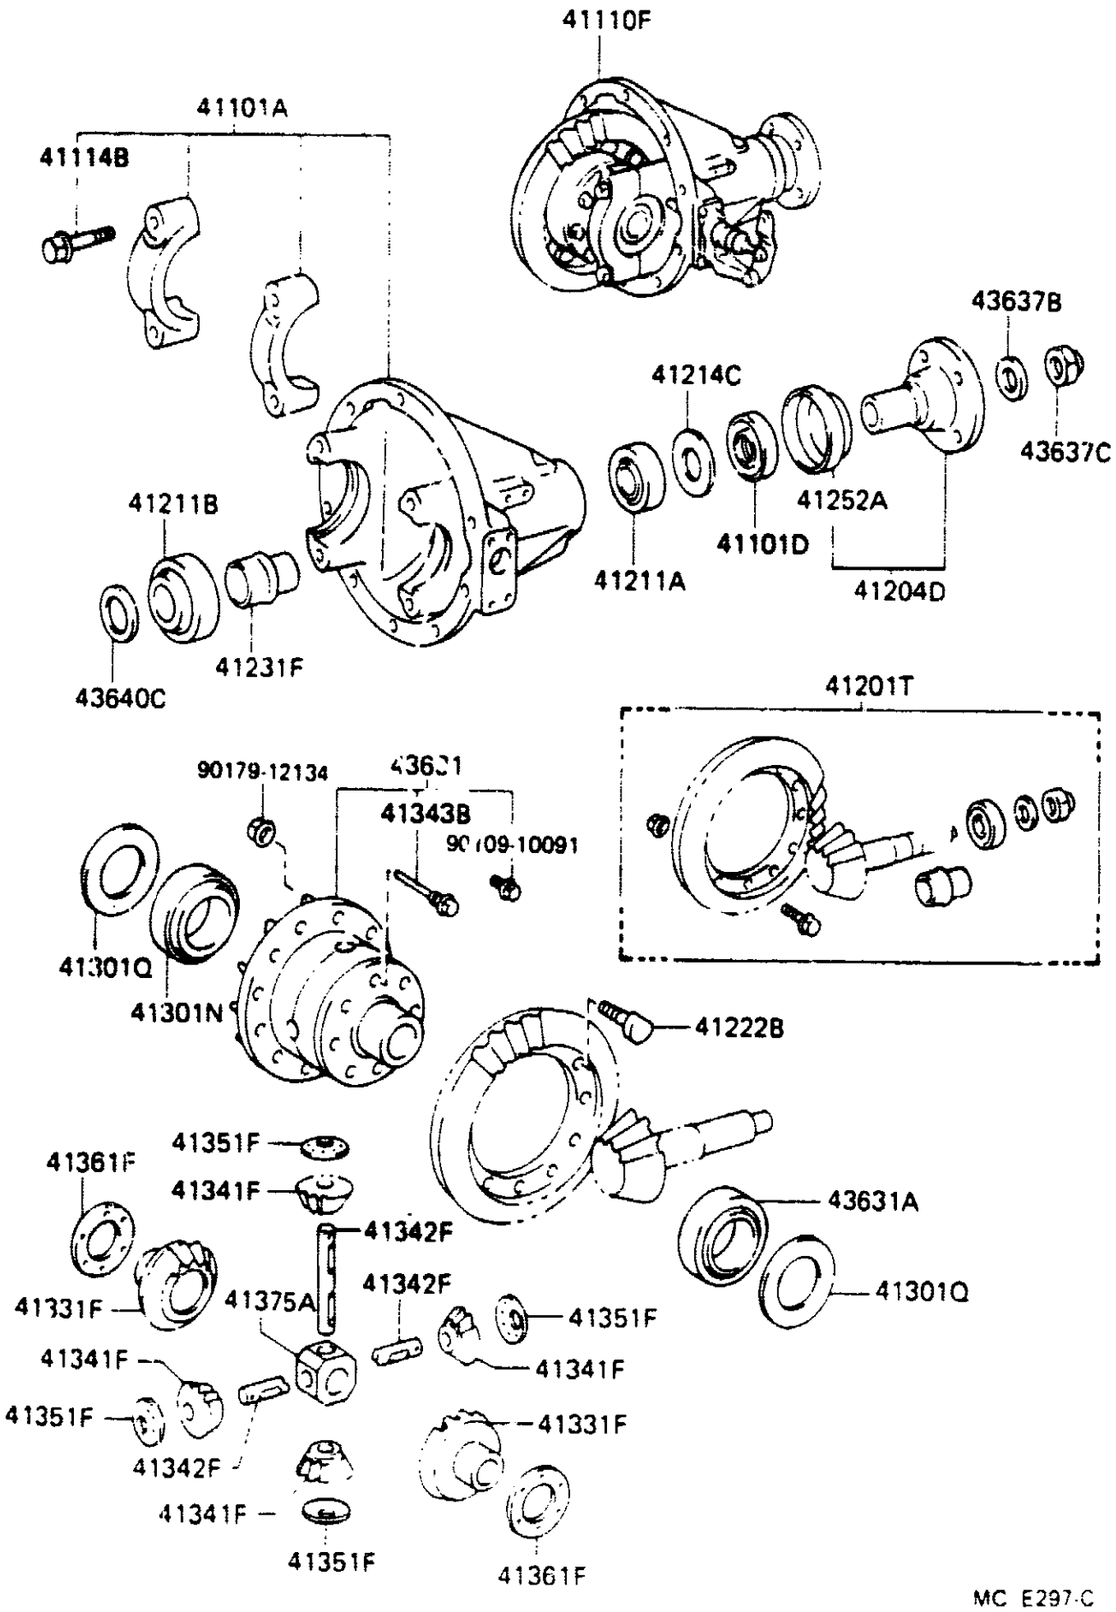


MC E297-C

(8708-)

ILLUST.NO. 30F3

W/ Differential Lock

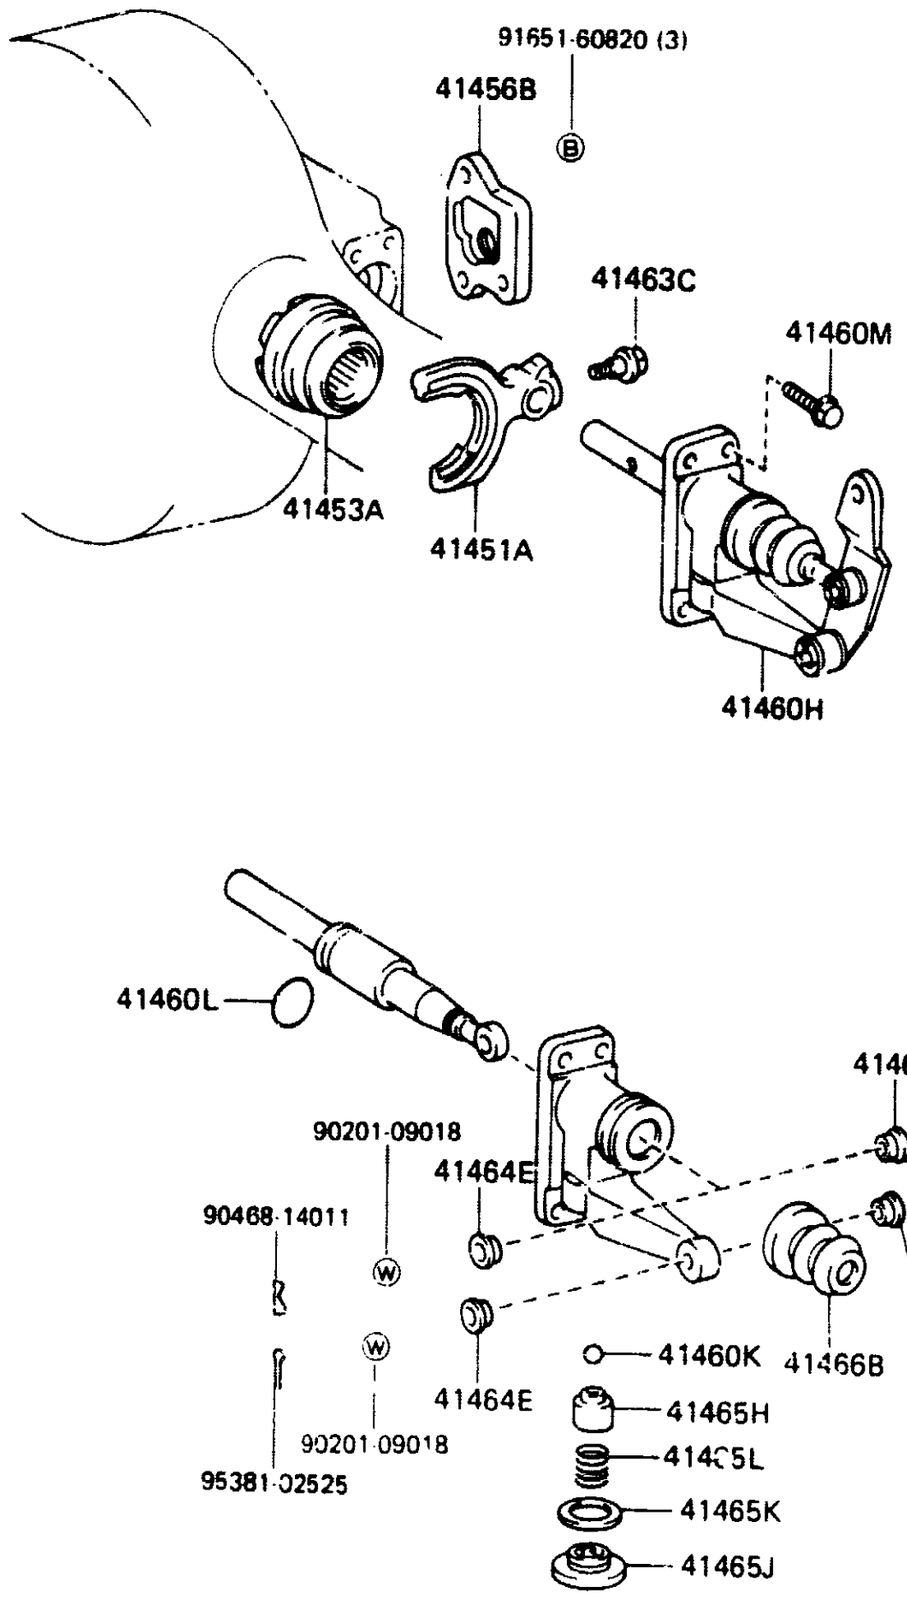


MC E298-C

FIG. 45-02 VANE PUMP & RESERVOIR (POWER STEERING PUMP)


791430M-01200

(8708-)

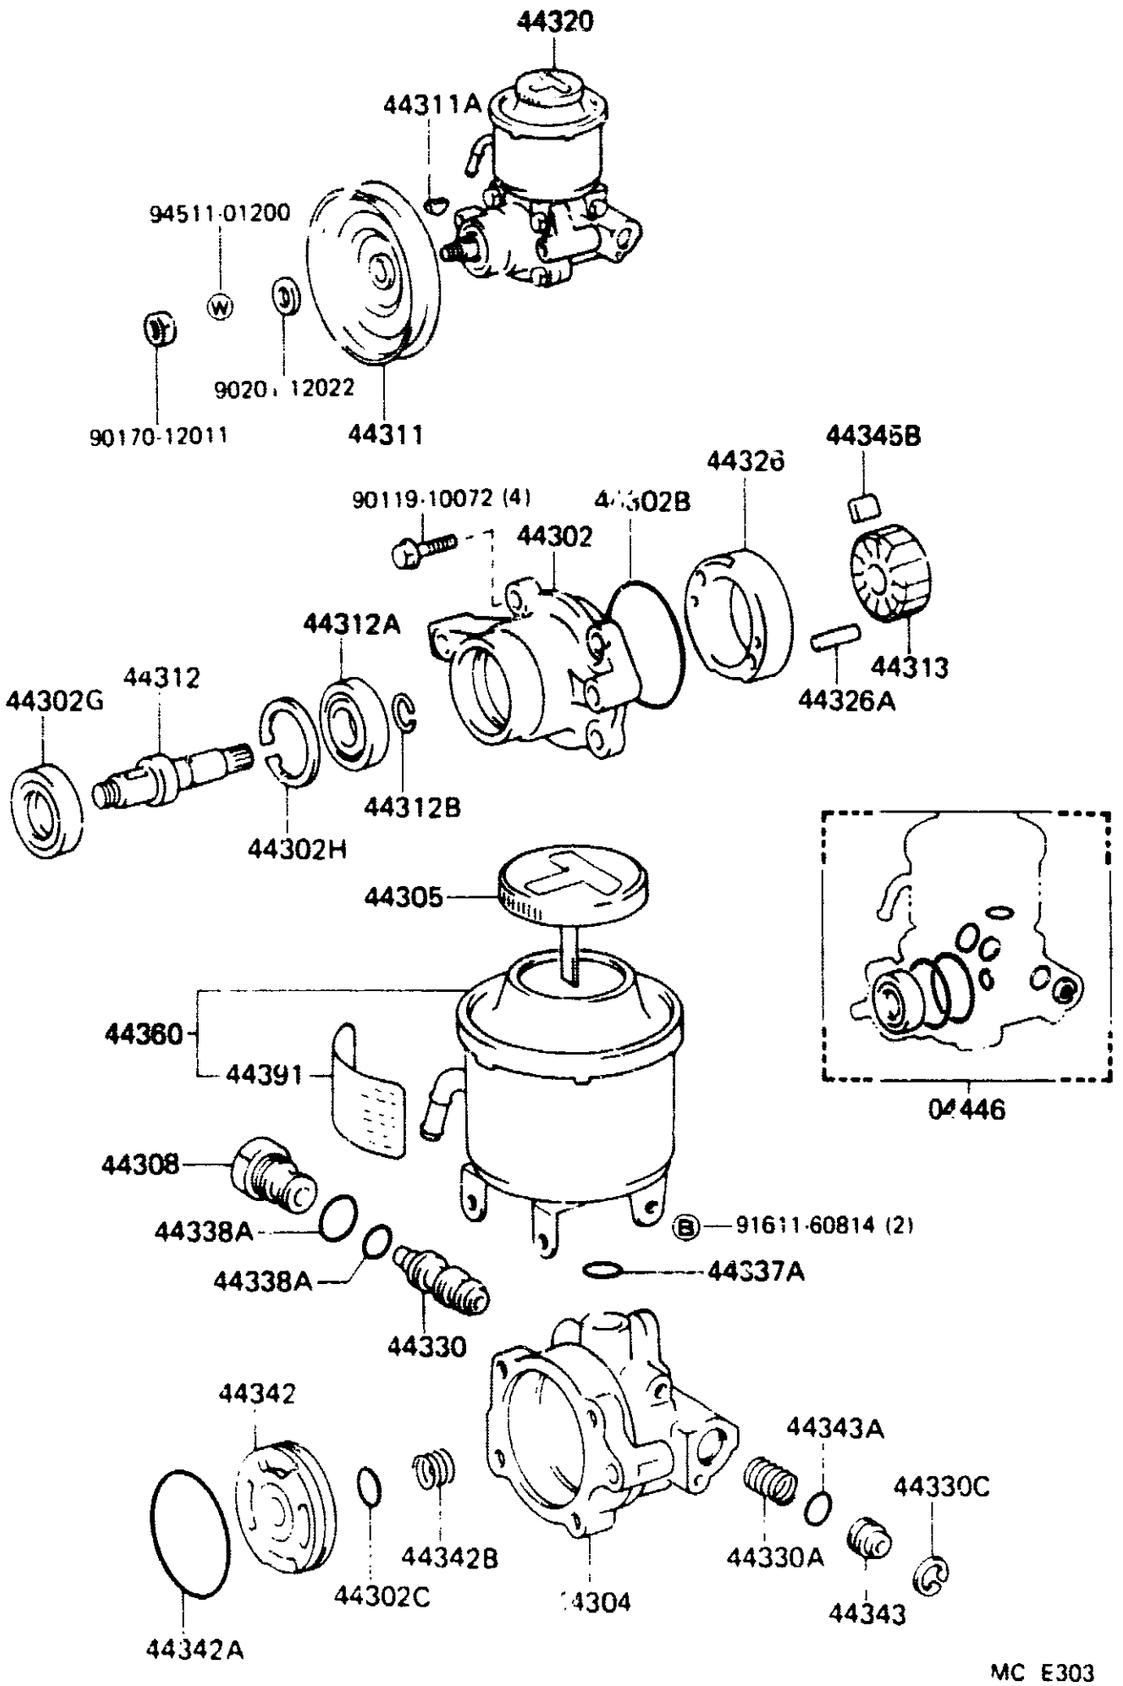

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	04446	GASKET KIT, POWER STEERING PUMP					
8708-8804	FJ62			# 04446-35010- (04446-30030-)	1 1		
8804-9001	FJ62			04446-30030-	1		
	44302	HOUSING SUB-ASSY, VANE PUMP, FRONT					
8708-9001	FJ62			44302-14010-	1		
	44302B	RING, O (FOR VANE PUMP HOUSING)					
8708-9001	FJ62			90301-60001-	1		
	44302C	RING, O (FOR PUMP HOUSING)					
8708-9001	FJ62	OD=19.6, ID=15.8		96711-19016-	1		
	44302G	SEAL, TYPE T OIL (FOR VANE PUMP HOUSING)					
8708-9001	FJ62			90311-24001-	1		
	44302H	RING, HOLE SNAP (FOR VANE PUMP HOUSING OIL SEAL)					
8708-9001	FJ62			90521-44002-	1		
	44304	HOUSING SUB-ASSY, VANE PUMP, REAR					
8708-9001	FJ62			44304-60021-	1		
	44305	CAP SUB-ASSY, VANE PUMP OIL RESERVOIR					
8708-9001	FJ62			44305-30020-	1		
	44308	UNION SUB-ASSY, PRESSURE PORT					
8708-9001	FJ62			44308-35030-	1		
	44311	PULLEY, VANE PUMP					
8708-9001	FJ62			44311-60010-	1		

(8708-)

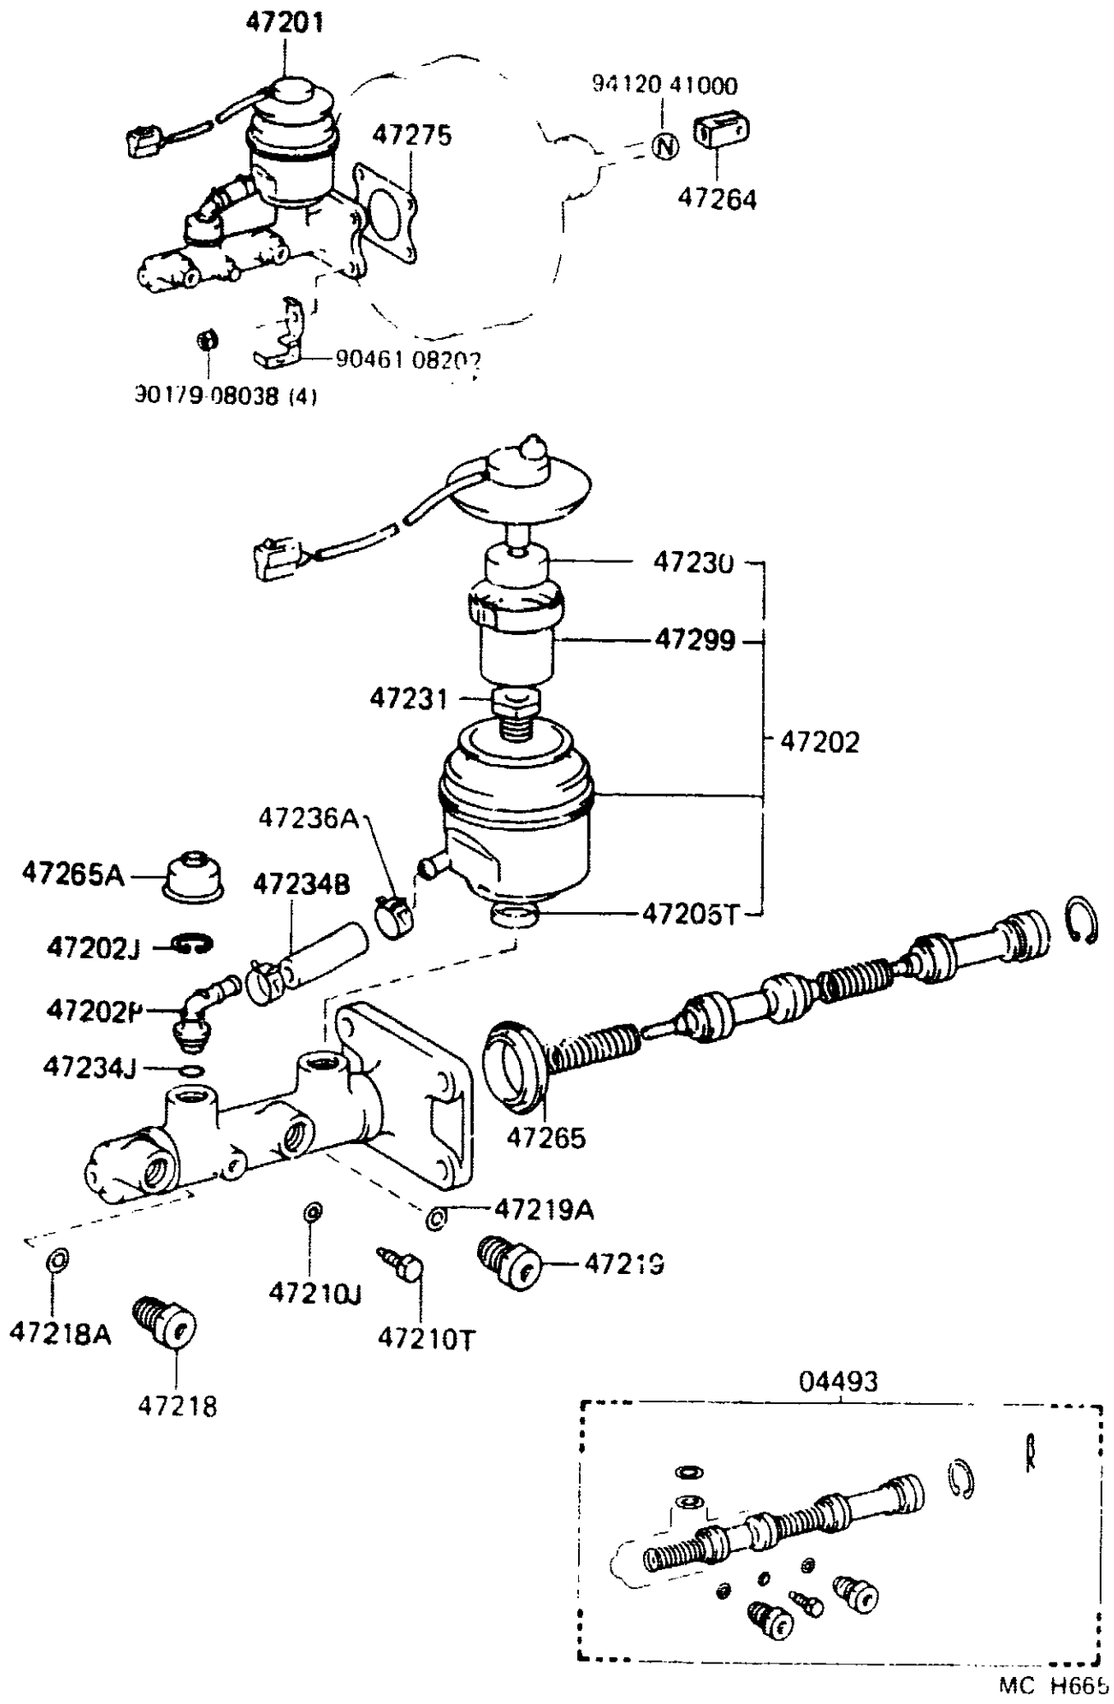

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	04493	CYLINDER KIT, BRAKE MASTER					
8708-9001	FJ62			04493-60160-	1		
	47201	CYLINDER SUB-ASSY, BRAKE MASTER					
8708-9001	FJ62			47201-60340-	1		
	47202	RESERVOIR SUB-ASSY, BRAKE MASTER CYLINDER					
8708-9001	FJ62			47202-60090	1		
	47202J	RING, SNAP (FOR BRAKE MASTER CYLINDER SIDE)					
8708-9001	FJ62			96151-02000-	1		
	47202P	UNION, RESERVOIR (FOR BRAKE MASTER CYLINDER SIDE)					
8708-9001	FJ62			90407-10004-	1		
	47205T	RING (FOR BRAKE MASTER CYLINDER RESERVOIR, NO.2)					
8708-9001	FJ62			90562-18151-	1		
	47210J	GASKET (FOR MASTER CYLINDER)					
8708-9001	FJ62			90430-06104-	1		
	47210T	BOLT (FOR BRAKE MASTER CYLINDER)					
8708-9001	FJ62			90109-06008-	1		
	47218	PLUG, MASTER CYLINDER FLUID OUTLET					
B 8708-9001	FJ62			47218-12040-	1		
	47218A	GASKET (FOR FLUID OUTLET PLUG)					
8708-9001	FJ62			90430-09253-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		47933	BRACKET, LOAD SENSING SHACKLE, NO.1					
	8708-9001	FJ62			47933-60020-	1		
		47935	SHACKLE, LOAD SENSING SPRING, NO.1					
	8708-9001	FJ62			47935-35010-	1		
		47935A	COLLAR (FOR LOAD SENSING SPRING SHACKLE)					
B	8708-9001	FJ62			90387-08099-	1		
		47935B	BUSH (FOR LOAD SENSING SPRING SHACKLE)					
	8708-9001	FJ62			90385-10064-	2		
		47935C	RETAINER (FOR LOAD SENSING SPRING SHACKLE)					
	8708-9001	FJ62			90948-02033-	1		
		47936	SHACKLE, LOAD SENSING SPRING, NO.2					
	8708-9001	FJ62			47936-35010-	1		
		47937	PLATE, LOAD SENSING VALVE SET					
	8708-9001	FJ62			47937-60010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

	PART NUMBER	LOCATION
P	45130-60101-06	2H7
	45142-12050-	2H7
	45155-12030-	2H7
	45176-20030-	2H7
	45180-60021-	2H7
	45210-22050-	2A7
	45215-22011-	2A7
	45220-60050-	2A7
	45222-60031-	2A7
	45244-60020-	2A7
	45254-60030-	2A7
	45255-60010-	2A7
	45260-60080-	2A7
	45280-60260-	2A7
	45282-22010-	2A7
P	45286-60130-03	2A7
P	-60130-16	2A7
P	45287-60090-03	2A7
P	-60090-16	2A7
	45289-22020-	2A7
	45292-60030-	2A7
B	45357-22010-	2L7
	45411-60090-	2L7
	45450-69055-	2L7
	45457-60010-	2L7
A	45458-60010-	2L7
	45460-69105-	2M7
	45466-36010-	2M7
	-55020-	2L7
	45473-35010-	2M7
	45475-35010-	2M7
	45611-60040-	2M7
	45612-60040-	2M7
	45636-60090-	2B7
	45637-60060-	2B7
	45700-69025-	2M7
	45721-60030-	2B7
	45804-22010-	2B7
	45813-22010-	2B7
	-22020-	2B7
	-22030-	2B7
	-22040-	2B7
	-22050-	2B7
	45814-22010-	2B7
	-22020-	2B7
	45615-22060-	2B7
	-22070-	2B7
	-22080-	2B7
	-22090-	2B7
	-22100-	2B7
	45817-60010-	2B7
	45819-22011-	2B7
	45821-22010-	2B7
	45870-60030-	2B7
	45890-22050-	2B7
	45897-14010-	2B7
	45898-22010-	2B7
	45899-22020-	2C7
	46210-60040-01	2A8
	-60040-16	2A8
P	-60041-01	2A8
P	-60041-06	2A8
	46217-10020-01	2A8
	-10020-56	2A8

	PART NUMBER	LOCATION
P	46243-60030-01	2A8
P	-60030-16	2A8
	46341-31010-	2A8
	46410-60101-	2A8
	46443-12020-	2B8
	46451-60030-	2B8
	46458-30020-	2B8
	46469-60020-	2B8
P	47043-60050-	2J8
B	-60090-	2J8
P	47044-60010-	2J8
B	-60040-	2J8
	47061-60011-	2K8
	47062-60011-	2K8
	47101-60150-	2C8
	47121-30050-	2C8
	47201-60340-	2D8
	47202-60090-	2D8
B	47218-12040-	2D8
B		2E8
	47231-20010-	2E8
	47234-14010-	2E8
	47264-30040-	2E8
	47265-20050-	2E8
	-20060-	2E8
	47275-22010-	2E8
	47299-14010-	2E8
	47312-60610-	2B9
	47313-60180-	2B9
	47314-60180-	2B9
	47315-60340-	2C9
	47316-60310-	2C9
	47322-60490-	2C9
	47323-60041-	2C9
	47324-60021-	2C9
	47325-60100-	2C9
	47326-60110-	2C9
	47341-60031-	2C9
	47343-60021-	2C9
	47354-60030-	2C9
	47355-60030-	2C9
	47371-35020-	2C9
	47447-60010-	2K8
	47449-30020-	2K8
	47491-20011-	2K8
	47509-60010-	2K8
	47547-20030-	2H8
	-60020-	2K8
	47548-60010-	2B9
	47550-60120-	2K8
	47611-60010-	2K8
	47612-60010-	2K8
	47616-60010-	2K8
		2L8
	47624-60010-	2L8
	47625-60010-	2L8
	47626-60010-	2L8
	47628-35020-	2L8
	47633-35020-	2L8
	47643-60010-	2L8
	47644-60010-	2L8
	47655-60010-	2L8
	47703-60031-	2H8
	47704-60031-	2H8

	PART NUMBER	LOCATION
	47730-60021-	2H8
	47731-30020-	2H8
	47732-30010-	2H8
	47744-60010-	2I8
	47750-60021-	2I8
	47786-60020-	2I8
	47787-60020-	2I8
	47910-60060-	2C9
	47920-60020-	2C9
	47931-60020-	2C9
	-60021-	2C9
	47933-60020-	2D9
	47935-35010-	2D9
	47936-35010-	2D9
	47937-60010-	2D9
	48046-60052-	2L9
	48047-60052-	2L9
	48048-60021-	2H9
	48049-60021-	2H9
	48102-60410-	2H9
	48103-60410-	2I9
	-60411-	2I9
	48110-60410-	2H9
		2I9
	-60411-	2H9
		2I9
	48111-60410-	2H9
	48112-60410-	2H9
	48114-60410-	2I9
	-60411-	2I9
	48147-60410-	2I9
	48202-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2L9
	48203-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48210-60650-	2L9
	-60651-	2L9
	-60660-	2M9
	-60661-	2M9
	48211-60650-	2L9
	-60660-	2L9
	48212-60650-	2L9
	-60660-	2L9
	48214-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2L9
	48215-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2M9
	48217-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48216-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48247-60651-	2M9

	PART NUMBER	LOCATION
	48247-60660-	2M9
	48252-26070-	2I9
		2M9
A	48253-15010-	2M9
	48304-60031-	2I9
	48306-60030-	2M9
	48371-60050-	2M9
	48372-23030-	2M9
	48401-60020-	2I9
	48412-60021-	2I9
	48413-60032-	2I9
	48414-60042-	2M9
	48415-60042-	2M9
	48416-60030-	2M9
	48475-60020-	2I9
	48511-69095-	2I9
	48512-60031-	2I9
	48531-69105-	2M9
	48541-69025-	2A10
	48802-60020-	2A10
	48811-60070-	2J9
	48812-60040-	2A10
	48815-20060-	2J9
	-30050-	2A10
	48817-30010-	2J9
	48823-27010-	2A10
		2J9
	48825-60010-	2J9
	-60031-	2A10
	51002-60432-	3A1
	51172-60010-	3C1
	51201-60080-	3A1
	51202-60151-	3A1
	51203-60102-	3A1
	51204-60052-	3A1
	51205-60010-	3A
	51209-60090-	3A1
	51217-60011-	3A1
	51218-60011-	3A1
	51321-60030-	3A1
	51322-60030-	3B1
	51421-60041-	3B1
	51422-60041-	3B1
	51441-60061-	3C1
	51495-60230-	3C1
	51701-60C51-	3B1
	51702-60020-	3B1
	51703-60020-	3B1
	51704-60010-	3B1
	51705-60062-	3B1
	-60110-	3B1
	51707-60030-	3B1
	51709-60020-	3B1
	51900-60100-	3D1
	51961-36040-	3C1
	-60040-	3C1
	51966-60010-	3C1
	52023-60011-	3E1
	52102-90A00-	3G1
	52103-90A00-	3G1
	52106-60010-	3H1
	52107-60010-	3H1
	52111-90A03-	3G1
	52141-60050-	3G1

	PART NUMBER	LOCATION
	52142-60040-	3G1
	52151-60041-	3H1
	52153-60060-	3H1
	52154-60010-	3H1
	52172-60020-	3H1
	52201-25020-	3E1
	-35021-	3E1
	52202-25020-	3E1
	-35021-	3E1
	52203-60030-	3E1
		3F1
	52207-60010-	3E1
	52208-60010-	3E1
	53111-90A06-	3I1
	-90A09-	3I1
	53131-90A09-	3I1
	-90A10-	3I1
	53132-90A09-	3I1
	-90A10-	3I1
	53202-90A04-	3A2
	53203-90A05-	3A2
	53207-90A00-	1G3
	53216-90A03-	3A2
	53217-90A03-	3A2
	-90A05-	3A2
	53292-90A00-	3A2
	53301-90A01-	3J1
	53341-90A00-	3J1
	53381-90A00-	3J1
	53382-30060-	3J1
	-90K01-	3J1
	53383-90A00-	3F2
	53410-90A01-	3L1
	53420-90A01-	3L1
	53440-90A00-	3L1
	53450-90A00-	3L1
	53451-90A00-	3L1
	53452-90351-	3L1
	53510-90A02-	3L1
	53630-90A01-	3L1
	53701-90G90-	3A2
	53702-90A70-	3A2
	53738-90A00-	3A2
	53739-90A00-	3A2
	53801-90G00-	3J1
	53802-90A72-	3J1
	53931-90A06-	3J1
	55016-90A75-	3A2
	-90A76-	3A2
	55073-90A00-	3F2
	55084-90A03-	3J11
	55085-90A01-	3J11
	55086-90A01-	3J11
	55087-90A01-	3J11
	55088-90A01-	3J11
	55089-90A03-	3J11
	55106-90A16-	2C8
	55210-90A12-	3A2
	55225-90A00-	3A2
P	55301-90A76-03	3C2
P	-90A76-05	3C2
	55315-90A00-	3C2
	55341-90A02-	3C2
	55342-90A01-	3C2

	PART NUMBER	LOCATION
	55344-90A01-	3C2
	55351-90A01-	3C2
	55357-90A00-	3C2
	55366-90A02-	3C2
	55368-90A03-	3C2
	55374-90A01-	3C2
	55401-90A05-03	3C2
	-90A05-05	3C2
	-90A07-03	3C2
	-90A07-05	3C2
	55410-90G28-	3C2
P	55412-90A10-03	3C2
P	-90A10-05	3C2
	55416-90A01-	3C2
P	55446-90A02-06	3C2
P	-90A02-13	3C2
	55458-90A00-	3C2
	55477-87001-	3C2
	55499-60010-	2B1
P	55501-90A00-06	3D2
P	-90A00-23	3D2
	55505-90A00-	3D2
	55517-14010-	3D2
P	55521-14050-01	3D2
	55538-22010-	3D2
P	55539-20020-13	3E3
P	-20020-26	3E3
	-32010-01	3D2
P	55545-90A01-03	3D2
P	-90A01-06	3D2
	55547-90A00-	3D2
	55549-90A00-	3D2
	55556-90A01-	3D2
	55561-90A00-	3D2
P	55569-90A00-06	3D2
P	-90A00-23	3D2
	55581-90A06-	3D2
	55650-90A02-	3D2
	55660-90A00-	3D2
	55670-90A02-	3D2
	55700-90G17-	3F2
	55701-90A35-	3F2
	55729-90A01-	3F2
	55780-90A01-	3F2
	55843-90A03-	3J11
	55901-90A01-	3J11
	55905-12070-	3F11
	-22050-	3J11
	-90A00-	3J11
	55907-90A00-	3J11
	55908-90A00-	3J11
	55950-90A01-	3D2
	-90A03-	3D2
	55959-14010-	3E2
P	55961-90A00-03	3E
P	-90A00-16	3E
	55970-90A00-	3E
	55980-90A00-	3E
	56111-90A02-	3F
	56121-90A01-	3G1
	-90A05-	3G2
	57104-90A03-	3A2
	57401-90A05-	3J2
	57402-90A05-	3J2

1. MODELS COVERED & CHARACTERISTICS

D15

TOYOTA LAND CRUISER Station Wagon (Production from Aug. '87 up to Jan. '90)

TOYOTA LAND CRUISER Station Wagon


Model	Engine	Production Period	Characteristic Expressions in Catalog Model Column		Model Name
FJ62LV-PNEA	3F-E	8708–8808	WGV	USA	Station Wagon
FJ62LG-PNEA	"	8708–9001	WGG	"	"
" -PNEK	"	8708–9001	"	CND	"

WGV Station Wagon
WGG Station Wagon G type

USA For United States of America
CND For Canada


ENGINE GROUP (1/2)

1C1 (11-01)

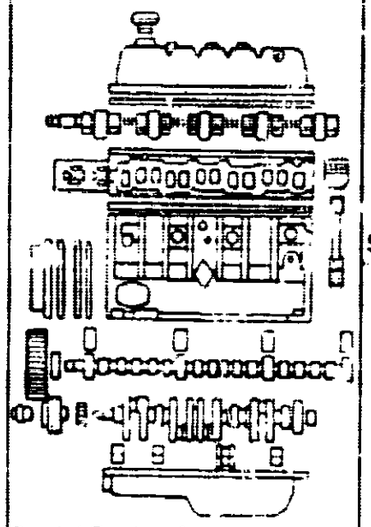


Partial Engine Assembly

1D1 (11-02)

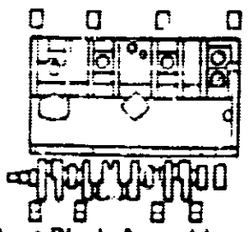


Short Block Assembly

1E1 (11-03)

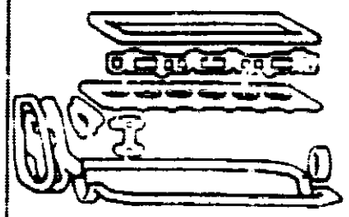


Overhaul Gasket Kit

1F1 (11-04) 1

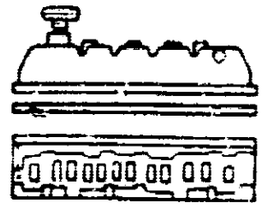


Cylinder Head

1H1 (11-05) 2

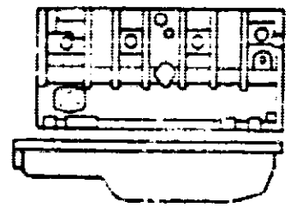

Cylinder Block

1J1 (11-06) 3

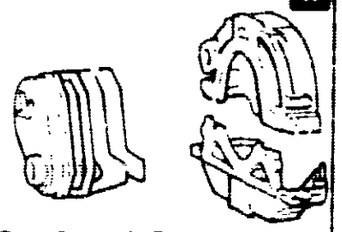



Gear Cover & End Plate

1K1 (11-07) 4




Mounting

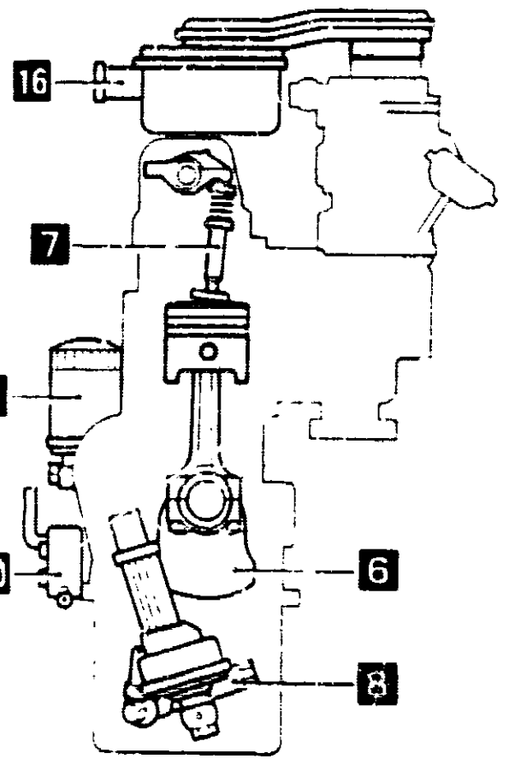

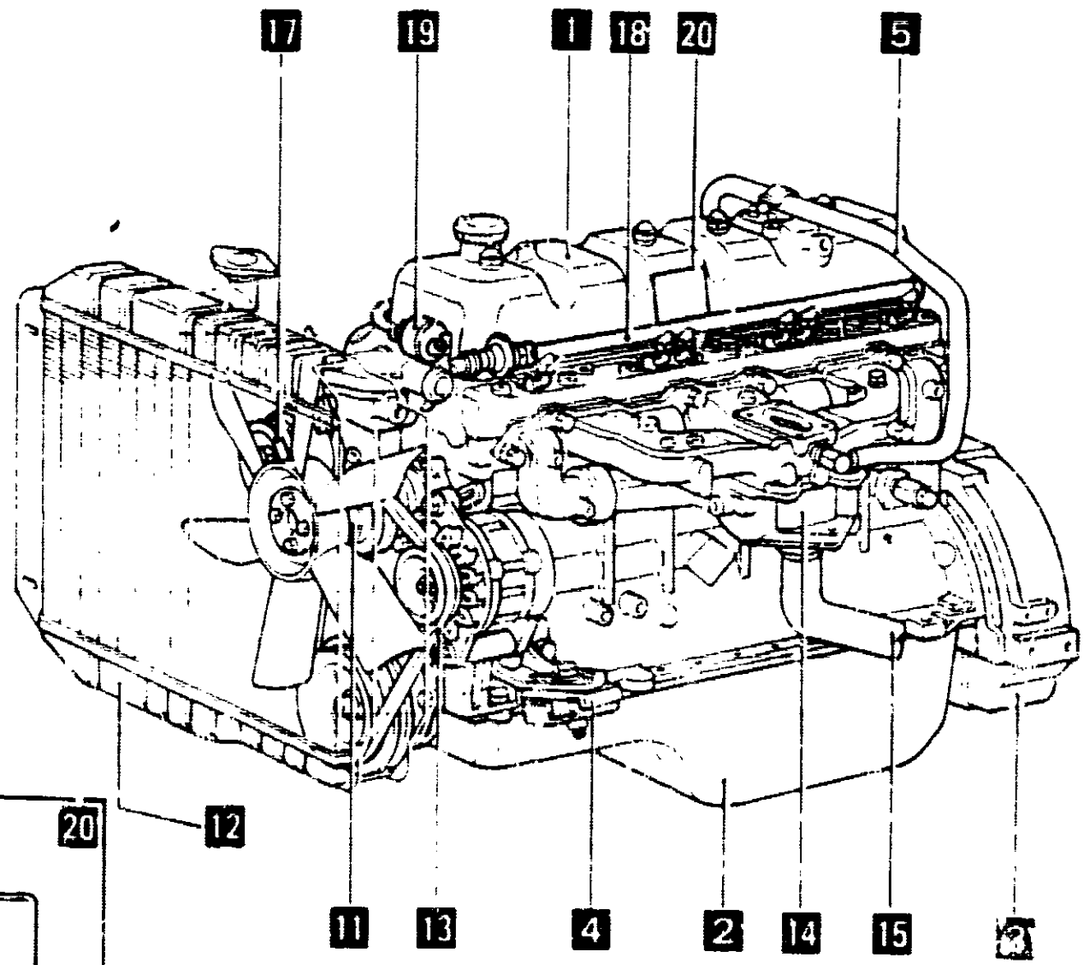


1L1 (12-01) 5

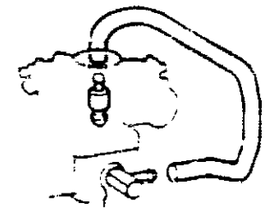


Ventilation Hose

1M1 (13-01) 6

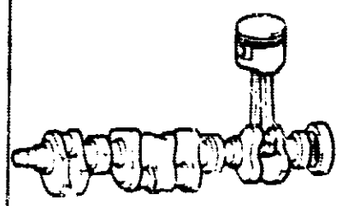


Crankshaft & Piston

1C2 (13-02) 7

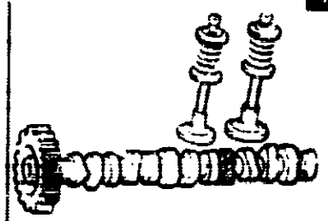


Camshaft & Valve

1E2 (15-01) 8

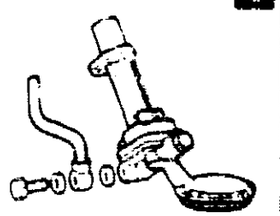


Oil Pump

1H3 (17-05) 17

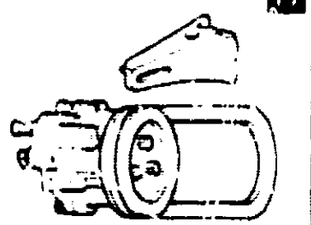


Air Pump

1I3 (17-06) 18

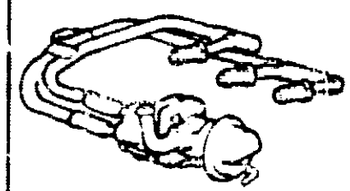


Manifold Air System

1F3 (17-03) 16

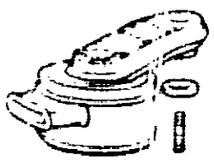


Air Cleaner

1K3 (17-08) 19

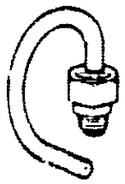


Vacuum Piping

1A4 (17-09) 20




Caution Plate

1D3 (17-02) 15

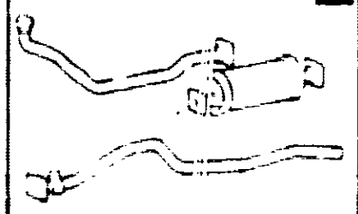

Exhaust Pipe

1B3 (17-01) 14

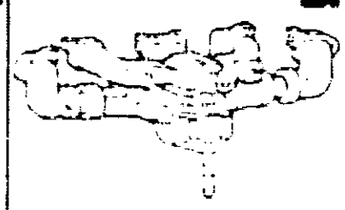


Manifold

1A3 (16-05) 13




V Belt

1J2 (16-03)

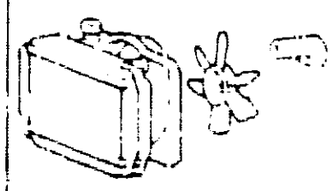

Radiator & Fan

1I2 (16-01) 11

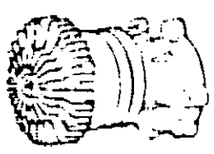


Water Pump

1H2 (15-03) 10



Oil Cooler

1G2 (15-02) 9

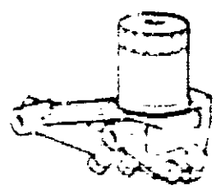

Oil Filter


MA A113


FIG. 35-02 TORQUE CONVERTER, FRONT OIL PUMP & CHAIN (ATM)

2F1

791430M-01123

(8708-)
A440F

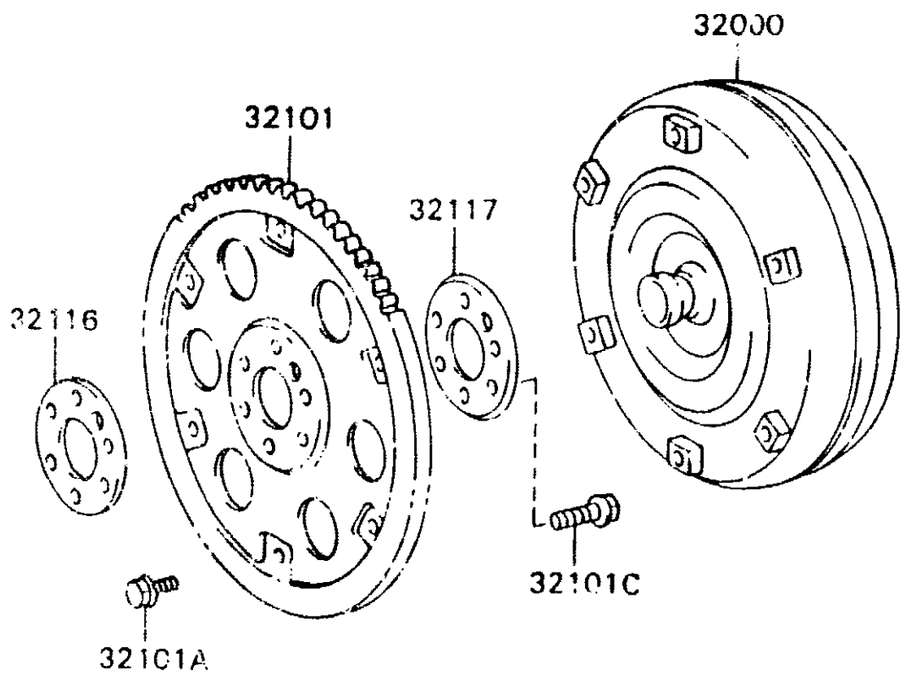

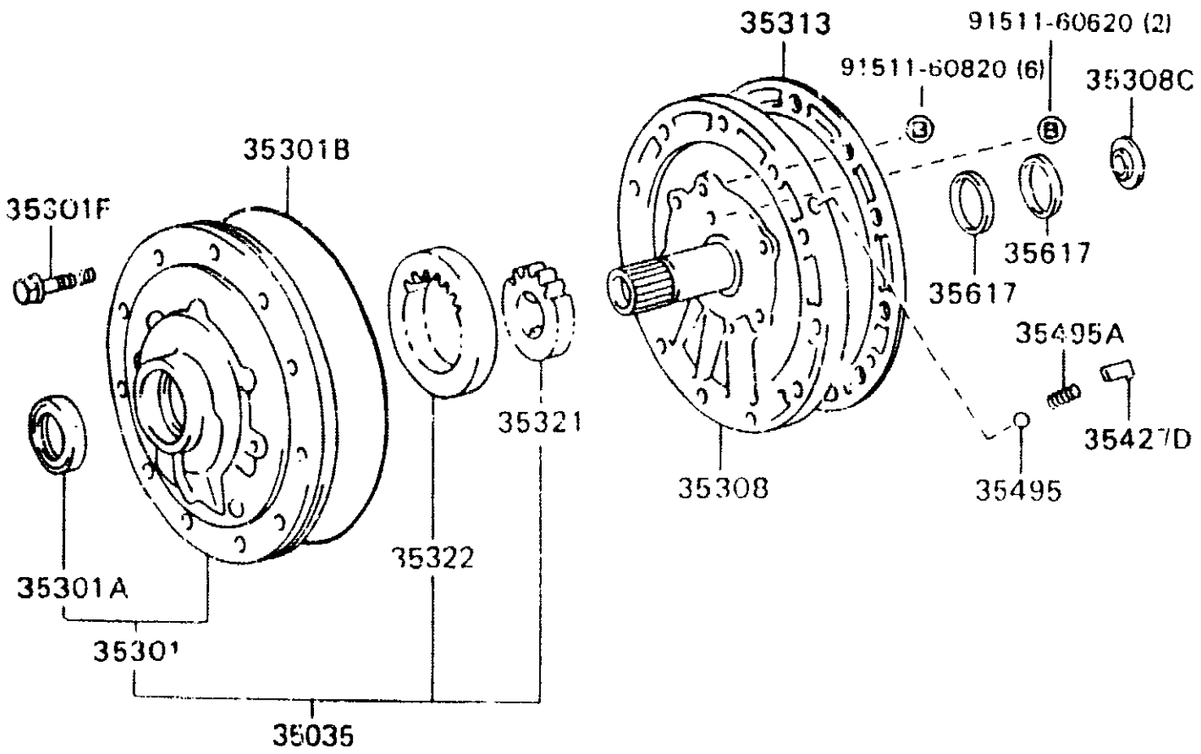

MC F791-A

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF 1
		32000	CONVERTER ASSY, TORQUE					
	8708-8809	FJ62			# 32000-60040- (32000-6003C-)	1 1		
P	8809-8910	FJ62..WGG			32000-60030-	1		
B	8910-9001	FJ62..WGG			32000-60031-	1		
		32101	GEAR SUB-ASSY, DRIVE PLATE & RING					
P	8708-8906	FJ62			32101-60010-	1		008
B	8906-9001	FJ62..WGG			32101-60011-	1	009	
		32101[illegible]	BOLT (FOR DRIVE PLATE & TORQUE CONVERTER SETTING)					
	8708-9001	FJ62	*8-1.25Px14-10, BLACK		90119-08497-	5		
	8708-9001	FJ62	*8-1.25Px14-9, OLIVE GREEN		90119-08523-	1		
		32101C	BOLT, HEXAGON (FOR DRIVE PLATE SETTING)					
P	8708-8906	FJ62			# 90105-10115- (90105-10270-)	6 6		008
B	8906-9001	FJ62..WGG			90105-11030-	6	009	
		32116	SPACER, DRIVE PLATE, FRONT					
P	8708-8906	FJ62			32116-60010-	1		008
B	8906-9001	FJ62..WGG			32116-60011-	1	009	
		32117	SPACER, DRIVE PLATE, REAR					
P	8708-8906	FJ62			32117-60010-	1		008
B	8906-9001	FJ62..WGG			32117-60011-	1	009	
		35035	BODY SUB-ASSY, FR OIL PUMP & GEAR					
	8708-9001	FJ62			35035-36010-	1		

* — P× — =Outside diameter – Pitch × Bolt length – Thread length

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35706P	GEAR SUB-ASSY, FRONT PLANETARY SUN					
8708-9001	FJ62			35706-60011-	1		
	35706Q	RING, SHAFT SNAP (FOR FRONT PLANETARY SUN GEAR)					
8708-9001	FJ62			90520-33009-	1		
	35709	SUPPORT SUB-ASSY, CENTER					
8708-9001	FJ62			35709-36010-	1		
	35709B	RING, O (FOR CENTER SUPPORT)					
8708-9001	FJ62			90301-09008-	3		
	35709C	RING, OIL SEAL (FOR CENTER SUPPORT)					
8708-9001	FJ62			35617-36020-	2		
	35709E	WASHER (FOR CENTER SUPPORT)					
8708-9001	FJ62	T=1.8		90209-52001-	1		
8708-9001	FJ62	T=2.1		90209-52002-	1		
8708-9001	FJ62	T=2.4		90209-52003-	1		
8708-9001	FJ62	T=2.7		90209-52004-	1		
	35709H	BOLT (FOR CENTER SUPPORT)					
8708-9001	FJ62	*10-1.25X20.5-13		90105-10096-	3		
	35719A	GEAR, REAR PLANETARY SUN					
8708-9001	FJ62			35719-60010-	1		
	35785	RETAINER, CENTER SUPPORT RING					
8708-9001	FJ62			35785-36010-	3		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

* - P× - =Outside diameter-Pitch×Bolt length-Thread length

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35455B	PIN, STRAIGHT (FOR 1-2 SHIFT VALVE LOW PLUG)					
8708-9001	FJ62			90250-03050-	1		
	35456	VALVE, 2-3 SHIFT					
8708-9001	FJ62			35456-36010-	1		
	35456A	SPRING, COMPRESSION (FOR 2-3 SHIFT VALVE)					
8708-9001	FJ62			90501-11041-	1		
	35456C	PLUG (FOR 2-3 SHIFT VALVE)					
8708-9001	FJ62			90339-04011-	1		
	35456E	PIN, STRAIGHT (FOR 2-3 SHIFT VALVE)					
8708-9001	FJ62			90282-03006-	1		
	35458D	VALVE, CUT BACK					
8708-9001	FJ62			35458-36010-	1		
	35458E	PLUG (FOR CUT BACK VALVE)					
B 8708-9001	FJ62			90333-04017-	1		
	35458H	KEY, STRAIGHT (FOR CUT BACK VALVE)					
8708-9001	FJ62			90282-03006-	1		
	35459A	SLEEVE, THROTTLE VALVE, NO.2					
8708-9001	FJ62			35459-36010-	1		
	35459B	SPRING (FOR THROTTLE VALVE SLEEVE)					
8708-9001	FJ62			90501-15006-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35462E	VALVE, PRIMARY THROTTLE					
8708-9001	FJ62			35462-36010-	1		
	35462F	SPRING, COMPRESSION (FOR PRIMARY THROTTLE VALVE)					
8708-9001	FJ62			90501-07049-	1		
	35462G	RING, E (FOR PRIMARY THROTTLE VALVE)					
8708-9001	FJ62			90523-06005-	X		
	35463B	VALVE, 1-2 RELAY					
8708-9001	FJ62			35463-36010-	1		
	35463D	PLUG (FOR 1-2 RELAY VALVE)					
8708-9001	FJ62			90339-04019-	1		
	35463E	SPRING, COMPRESSION (FOR 1-2 RELAY VALVE)					
8708-9001	FJ62			90501-06043-	1		
	35463F	PIN, STRAIGHT (FOR 1-2 SHIFT VALVE)					
8708-9001	FJ62			90250-03051-	1		
	35464	VALVE, 1-2 SHIFT					
8708-90[illegible]	FJ62			35464-36011-	1		
	35464A	SPRING, COMPRESSION (FOR 1-2 SHIFT VALVE)					
8708-9001	FJ62			90501-07040-	1		
	35466E	VALVE, 2ND LOCK					
8708-9001	FJ62			35466-60010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	36231B SHIM (FOR TRANSFER OUTPUT SHAFT) CONTINUED						
8708-9001	FJ62	T=1.30		90564-70011-	1		
8708-9001	FJ62	T=1.40		90564-70012-	1		
8708-9001	FJ62	T=1.50		90564-70013-	1		
	36231C BEARING, TAPER ROLLER (FOR TRANSFER OUTPUT SHAFT)						
8708-9001	FJ62	FR		90366-35011-	1		
8708-9001	FJ62	RR		90366-35054-	1		
	36231E BEARING, NEEDLE ROLLER (FOR TRANSFER OUTPUT SHAFT FRONT)						
8708-9001	FJ62			90364-17010-	1		
	36231F RING, SHAFT SNAP (FOR TRANSFER OUTPUT SHAFT)						
8708-9001	FJ62	T=2.30-2.35		90520-33107-	1		
8708-9001	FJ62	T=2.6		90520-33110-	1		
	36234 SHAFT, TRANSFER OUTPUT, FRONT						
8708-9001	FJ62			36234-60031-	1		
	36234A BEARING (FOR TRANSFER OUTPUT FRONT SHAFT)						
8708-9001	FJ62			90363-35013-	1		
	36234B RING, SNAP (FOR TRANSFER OUTPUT FRONT BEARING)						
8708-9001	FJ62	T=1.6		90521-75023-	1		
	36235 SLEEVE, TRANSFER HIGH AND LOW CLUTCH						
8708-9001	FJ62			36235-60020-	1		
	36236 SLEEVE, FRONT DRIVE CLUTCH						
8708-9001	FJ62			36235-60020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	36237 HUB, TRANSFER CLUTCH						
8708-9001	FJ62			36237-60020-	1		
	36242 GEAR, TRANSFER LOW						
8708-9001	FJ62			36242-60130-	1		
	36251 SPACER, TRANSFER INPUT SHAFT						
8708-9001	FJ62			36251-60030-	1		
	36261 SPACER, TRANSFER IDLER GEAR						
8708-9001	FJ62			90560-38003-	1		
	36481R WASHER, PLATE (FOR SPEEDMETER DRIVE GEAR)						
8708-9001	FJ62			90201-35002-	1		
	36726 PLATE, LOCK (FOR TRANSFER GEAR)						
8708-9001	FJ62			36726-60020-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		41341 PINION, REAR DIFFERENTIAL CONTINUED						
B	8808-9001	FJ62..WGG			41341-25010-	2		
		41342 SHAFT, REAR DIFFERENTIAL PINION						
B	8708-9001	FJ62			41342-55010-	1		
	8708-9001	FJ62	L=136.0,W(DIFFEREN TIAL LOCK)		41342-60010-	1		
	8708-9001	FJ62	L=60.5,W(DIFFERENT IAL LOCK)		41342-60020-	2		
		41343 PIN, DIFFERENTIAL PINION SHAFT						
P	8708-8911	FJ62			41343-55010-	1		
	8708-9001	FJ62	W(DIFFERENTIAL LOC K)		41343-60010-	2		
B	8911-9001	FJ62..WGG			41343-60030-	1		
		41344 SPACER, DIFFERENTIAL PINION SHAFT						
	8708-9001	FJ62	H=29.8		41344-35010-	1		
	8708-9001	FJ62	H=30.2		41345-35010-	1		
	8708-9001	FJ62	H=30.6		41346-35010-	1		
	8708-9001	FJ62	H=29.0		41347-35010-	1		
	8708-9001	FJ62	H=29.4		41348-35010-	1		
		41351 WASHER, REAR DIFFERENTIAL PINION THRUST						
	8708-8808	FJ62			41351-35011-	2		
	8708-9001	FJ62	W(DIFFERENTIAL LOC K)		〃	4		
B	8808-9001	FJ62..WGG			41351-25010-	2		
		41361 WASHER, REAR DIFFERENTIAL SIDE GEAR THRUST NO.1						
	8708-9001	FJ62	T=1.60		41361-60010-	2		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		41361 WASHER, REAR DIFFERENTIAL SIDE GEAR THRUST NO.1 CONTINUED						
	8708-9001	FJ62	T=1.75		41361-60020-	2		
	8708-9001	FJ62	T=1.90		41361-60030-	2		
	8708-9001	FJ62	T=2.05		41361-60040-	2		
		41375 HOLDER, PINION SHAFT						
	8708-9001	FJ62			41375-60010-	1		
		41451 FORK, REAR DIFFERENTIAL LOCK SHIFT						
	8708-9001	FJ62			41451-60010-	1		
		41453 SLEEVE, REAR DIFFERENTIAL LOCK						
P	8708-8912	FJ62			41453-60010-	1		
S	8912-9001	FJ62..WGG			41453-60011-	1		
		41456 COVER, REAR DIFFERENTIAL LOCK						
	8708-9001	FJ62			41456-60010-	1		
		41460 CYLINDER ASSY, REAR DIFFERENTIAL LOCK						
	8708-9001	FJ62			41460-60010-	1		
		41460B RING O (FOR REAR DIFFERENTIAL LOCK CYLINDER)						
	8708-9001	FJ62			96711-24023-	1		
		41460F BOLT (FOR REAR DIFFERENTIAL LOCK CYLINDER SET)						
	8708-9001	FJ62			90105-08114-	4		
		41460J BALL (FOR REAR DIFFERENTIAL LOCK CYLINDER						
	8708-9001	FJ62			90360-10003-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		41101A CARRIER SUB-ASSY, DIFFERENTIAL, FRONT						
P	8708-8906	FJ62	W(DIFFERENTIAL LOCK)		# 41101-60080- (41101-60081- (90116-10075-	1 1 2		
	8906-9001	FJ62..WGG	W(DIFFERENTIAL LOCK)		41101-60081-	1		
S	8911-9001	FJ62..WGG			41101-60041-	1		
	8708-8911	FJ62			41101-60040-	1		
		41101D SEAL, OIL (FOR FRONT DIFFERENTIAL CARRIER)						
P	8708-8911	FJ62			90311-38134-	1		
B	8911-9001	FJ62..WGG			90311-38035-	1		
		41110C BOLT, STUD (FOR FRONT DIFFERENTIAL CARRIER)						
P	8708-8906	FJ62	S=16&12.5,L=30.5,W(DIFFERENTIAL LOCK)		90116-10074-	6		
	8708-9001	FJ62	S=16&12.5,L=30.5		〃	8		
	8708-9001	FJ62	S=18&12.5,L=53.5		90116-10075-	2		
	8708-9001	FJ62	S=19.0&12.5,L=78.4		90116-10122-	2		
B	8906-9001	FJ62..WGG	S=16 & 12.5,L=30.5		90116-10074-	4		
B	8906-9001	FJ62..WGG	S=18 & 12.5,L=53.5		90116-10075-	4		
		41110F CARRIER ASSY, DIFFERENTIAL, FRONT						
P	8708-8906	FJ62	*AXC=KO84,*FGR=37:9,W(DIFFERENTIAL LOCK)		# 41110-60230- (41110-60231- (90116-10075-	1 1 2		
	8708-8911	FJ62	*FGR=37:9		# 41110-60110- (41110-60111- (90949-01692-	1 1 1		
N	8906-9001	FJ62..WGG	*FGR=37:9,W(DIFFERENTIAL LOCK)		41110-60231-	1		
N	8911-9001	FJ62..WGG	*FGR=37:9		41110-60111-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		41114B BOLT, FRONT DIFFERENTIAL BEARING CAP						
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		41114-60010-	4		
	8708-9001	FJ62			90105-12053-	4		
		41201T FINAL GEAR KIT, DIFFERENTIAL, FRONT						
	8708-9001	FJ62	*FGR=37:9		41201-69166-	1		
		41204D FLANGE SUB-ASSY, DRIVE PINION COMPANION, FRONT						
	8708-9001	FJ62			41204-60030-	1		
		41211A BEARING, TAPERED ROLLER (FOR FRONT DRIVE PINION FRONT)						
P	8708-8911	FJ62			90366-30011-	1		
A	8911-8912	FJ62..WGV			〃	1		
B	8911-9001	FJ62..WGG	W(DIFFERENTIAL LOCK)		〃	1		
					90366-30038-	1		
		41211B BEARING, TAPERED ROLLER (FOR FRONT DRIVE PINION REAR)						
	8708-8911	FJ62			# 90366-40004- (90366-40059-	1 1		
B	8911-9001	FJ62..WGG			90366-40059-	1		
		41214C SLINGER, FRONT DIFFERENTIAL DRIVE PINION OIL						
	8708-9001	FJ62			41214-26010-	1		
		41222B BOLT, HEXAGON (FOR FRONT RING GEAR SET)						
	8708-9001	FJ62			41226-35010-	12		
		41231F SPACE, FRONT DIFFERENTIAL DRIVE PINION BEARING						
P	8708-8911	FJ62			41231-60020-	1		

*AXC=Axle Code(Stated in TRANS/AXLE Column of Name Plate) *FGR=Final Gear Ratio

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	44311A KEY, VANE PUMP PULLEY						
8708-9001	FJ62			90280-05008-	1		
	44312 SHAFT, VANE PUMP						
8708-9001	FJ62			44312-12010-	1		
	44312A BEARING (FOR VANE PUMP SHAFT)						
8708-9001	FJ62			90363-17004-	1		
	44312B RING, SHAFT SNAP (FOR VANE PUMP SHAFT)						
8708-9001	FJ62			90520-15001-	1		
	44313 ROTOR, VANE PUMP						
8708-8810	FJ62	NO MARK		# 44313-12010-	1		
				(44313-22040-)	1		
8708-8810	FJ62	MARK 1		# 44313-12020-	1		
				(44313-22050-)	1		
8708-8810	FJ62	MARK 2		# 44313-12030-	1		
				(44313-22060-)	1		
8708-8810	FJ62	MARK 3		# 44313-12040-	1		
				(44313-22070-)	1		
8708-8810	FJ62	MARK 4		# 44313-12050-	1		
				(44313-22080-)	1		
8810-9001	FJ62..WGG	NO MARK		44313-22040-	1		
8810-9001	FJ62..WGG	MARK 1		44313-22050-	1		
8810-9001	FJ62..WGG	MARK 2		44313-22060-	1		
8810-9001	FJ62..WGG	MARK 3		44313-22070-	1		
8810-9001	FJ62..WGG	MARK 4		44313-22080-	1		
	44320 PUMP ASSY, VANE						
8708-9001	FJ62			44320-60090-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	44326 RING, CAM (FOR VANE PUMP)						
8708-9001	FJ62	NO MARK		44325-12010-	1		
8708-9001	FJ62	MARK 1		44325-12020-	1		
8708-9001	FJ62	MARK 2		44325-12030-	1		
8708-9001	FJ62	MARK 3		44325-12040-	1		
8708-9001	FJ62	MARK 4		44325-12050-	1		
	44326A PIN, STRAIGHT (FOR VANE PUMP CAM RING)						
8708-9001	FJ62	OD=5.0, L=25		90250-05008-	2		
	44330 VALVE ASSY, FLOW CONTROL						
8708-9001	FJ62	MARK A		44330-30100-	1		
8708-9001	FJ62	MARK B		44330-30110-	1		
8708-9001	FJ62	MARK C		44330-30120-	1		
8708-9001	FJ62	MARK D		44330-30130-	1		
8708-9001	FJ62	MARK E		44330-30140-	1		
8708-9001	FJ62	MARK F		44330-30150-	1		
	44330A SPRING, COMPRESSION (FOR FLOW CONTROL VALVE)						
8708-9001	FJ62			90501-12103-	1		
	44330C RING, SNAP (FOR FLOW CONTROL VALVE)						
8708-9001	FJ62			96151-01700-	1		
	44337A RING, O (FOR POWER STEERING SUCTION PORT)						
8708-9001	FJ62			96711-19013-	1		
	44338A RING, O (FOR PRESSURE PORT UNION)						
8708-9001	FJ62			90301-22001-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		47219	PLUG, MASTER CYLINDER FLUID OUTLET (FOR REAR SIDE)					
B	8708-9001	FJ62			47218-12040-	1		
		47219A	GASKET (FOR FLUID OUTLET PLUG REAR SIDE)					
	8708-9001	FJ62			90430-09253-	1		
		47230	CAP ASSY, BRAKE MASTER CYLINDER RESERVOIR FILLER					
	8708-9001	FJ62			84460-22010-	1		
		47231	BOLT, BRAKE MASTER CYLINDER RESERVOIR SET					
	8708-9001	FJ62			47231-20010-	1		
		47234B	TUBE, RESERVOIR, NO.1					
	8708-9001	FJ62			47234-14010-	1		
		47234J	RING, O (FOR RESERVOIR TUBE)					
	8708-9001	FJ62			90301-14001-	1		
		47236A	CLIP (FOR RESERVOIR TUBE)					
	8708-9001	FJ62			90467-16001-	2		
		47264	CLEVIS, MASTER CYLINDER PUSH ROD					
	8708-9001	FJ62			47264-30040-	1		
		47265	BOOT, MASTER CYLINDER					
	8708-9001	FJ62			47265-20050-	1		
		47265A	BOOT, MASTER CYLINDER NO.1					
	8708-9001	FJ62			47265-20060-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	47275	GASKET, BRAKE MASTER CYLINDER					
8708-9001	FJ62			47275-22010-	1		
	47299	STRAINER, BRAKE MASTER CYLINDER RESERVOIR					
8708-9001	FJ62			47299-14010-	1		


FIG. 48-02 FRONT AXLE ARM & STEERING KNUCKLE

2E9

791430M-01227

(8708-)

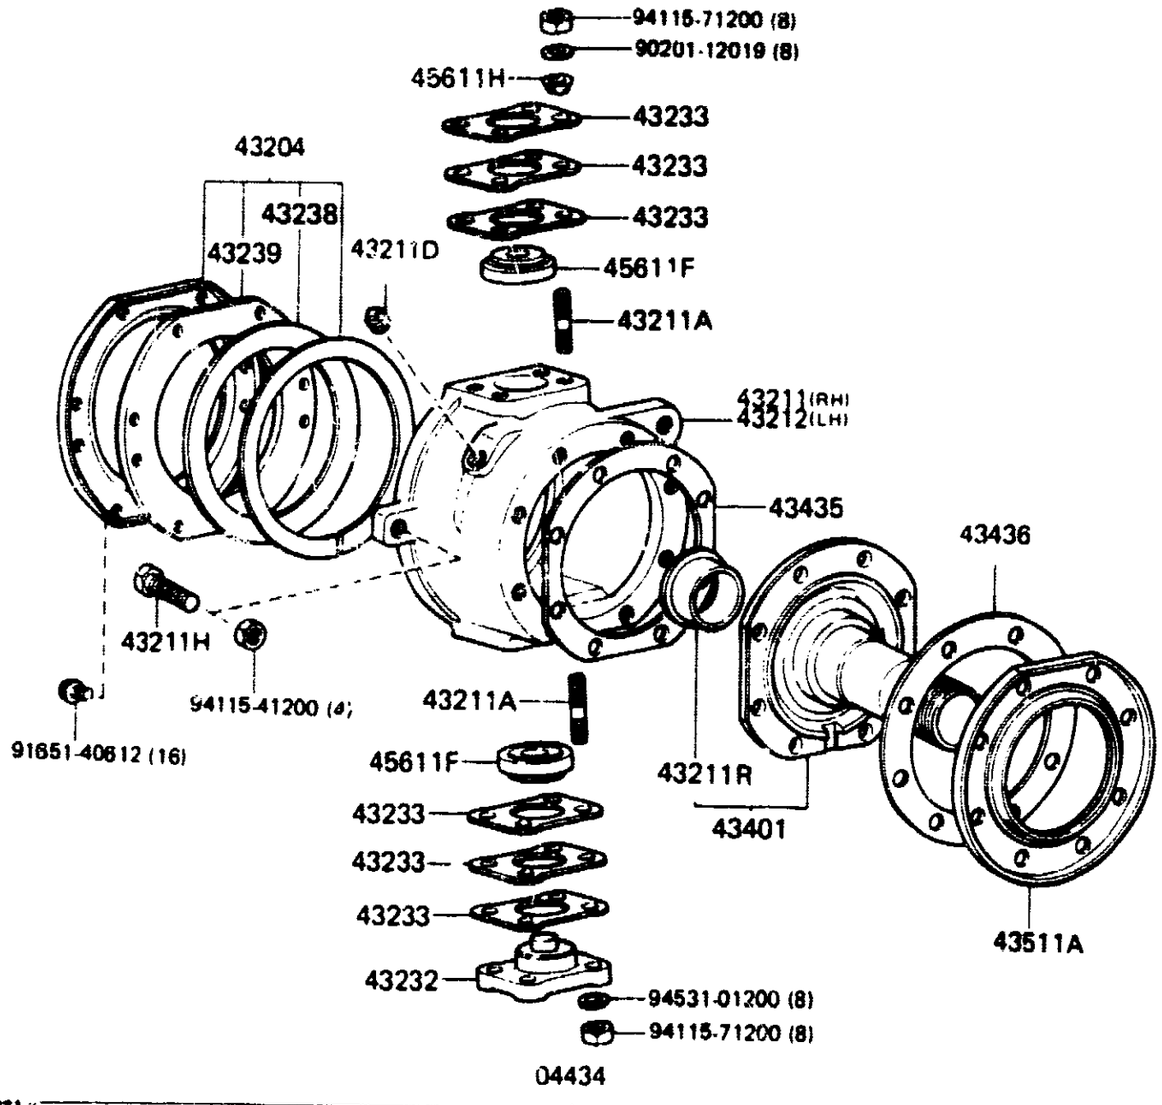

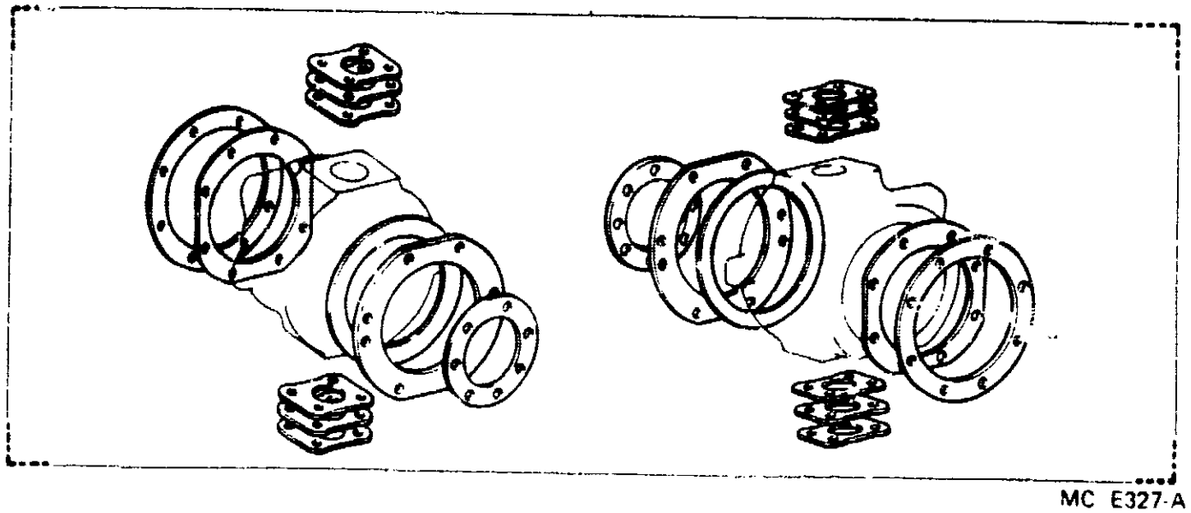







MC E327-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	04434	GASKET KIT, FRONT AXLE OVERHAUL					
8708-9001	FJ62			04434-60012-	1		
	43204	SEAL SUB-ASSY, STEERING KNUCKLE OIL					
8708-9001	FJ62			43204-60020-	2		
	43211	KNUCKLE, STEERING, RH					
8708-9001	FJ62			43211-60050-	1		
	43211A	BOLT, STUD (FOR STEERING SET)					
8708-9001	FJ62			90116-12007-	16		
	43211D	PLUG (FOR STEERING KNUCKLE)					
8708-9001	FJ62			90345-53020-	2		
	43211H	BOLT, ROUND HEXAGON					
8708-9001	FJ62			90106-12022-	4		
	43211R	BUSH (FOR STEERING KNUCKLE)					
P 8708-9001	FJ62			# 90381-33001- (90381-33002-)	2 2		
B 9001-9001	FJ62..WGG			90381-33002-	2		
	43212	KNUCKLE, STEERING, LH					
8708-9001	FJ62			43212-60050-	1		
	43232	CAP, STEERING KNUCKLE BEARING					
8708-9001	FJ62			43232-35010-	2		
	43233	SHIM, STEERING KNUCKLE ADJUST, NO.1					
8708-9001	FJ62	T=0.2		43233-60011-	X		


PART NUMBER	LOCATION
57405-90A07-	3H2
57407-90A43-	3H2
-90A46-	3H2
57417-90A03-	3J2
57425-90A02-	3J2
57426-90A04-	3J2
57427-90A00-	3J2
57468-90A01-	3J2
-90A02-	3J2
57483-90A00-	3J2
57511-90A03-	3J2
57605-90A02-	3M2
57606-90A09-	3M2
57635-90A03-	3H2
57805-90A00-	3M2
58041-90A01-	3A3
58043-90A00-	3A3
58107-90A00-	3J2
58111-90A46-	3J2
58151-90A05-	3A3
58153-90A01-	3A3
58155-90A01-	3A3
58186-90A03-	3J2
58192-90A00-	3J2
58203-90A00-	3J2
58204-90A00-	3J2
58211-90A21-	3J2
-90A24-	3J2
-90A26-	3J2
-90A28-	3J2
58231-90A00-	3A3
58247-90A00-	3J2
	3K2
58248-90A00-	3J2
58256-90B00-	3A3
58261-90A04-	3K2
58263-90A03-	3K2
58268-90A05-	3K2
58279-90AC0-	3J7
58290-90A04-	3K2
-90A05-	3K2
58303-90A00-	3M2
58304-90A00-	3M2
58305-90A08-	3M2
58306-90A12-	3M2
58307-90A00-	3M2
58308-90A03-	3M2
58311-90A19-	3M2
-90A20-	3M2
58315-90A07-	3M2
58316-90A07-	3M2
58325-90A00-	3M2
58339-90A00-	3M2
58344-90A01-	3A3
58345-90A00-	3A3
58348-90A00-	3M2
58367-90A00-	3M2
58410-90A00-	3G4
58418-90A00-	3G4
58457-90A00-	3G4
P 58510-90A85-03	3E3
P -90A85-06	3E3
P 58540-90A83-03	3B3
P -90A83-06	3B3
P 58570-90A28-03	3B3
P -90A28-06	3B3
-90A39-03	3B3
-90A39-06	3B3
58573-90A00-	3B3
58705-90A01-	3G7
58754-90A00-	3K2
58790-90A01-	3G7
58793-90A01-	3G7
P 58825-90A01-03	3E3
P -90A01-06	3E3
P 58841-90A01-03	3E3
P -90A01-06	3E3
P 58911-90A02-03	3E3
P -90A02-06	3E3
P -90A03-03	3E3
P -90A03-06	3E3
P -90A05-03	3E3
P -90A05-06	3E3
P -90A06-03	3E3
P -90A06-06	3E3
58918-90A00-	3E3
58936-60010-	2B1
P 58944-90A00-03	3E3
P -90A00-06	3E3
P -90A01-03	3E3
P -90A01-06	3E3
P 58947-90A03-03	3E3
P -90A03-06	3E3
P 58951-90A01-03	3E3
P -90A01-06	3E3
58959-16010-	3F3
58964-30030-	3F3
-90K00-	3F3
58965-12010-	3F3
-20020-	3F3
58976-20010-	3F3
58985-90A00-	3F3
58996-90A04-	3F3
58997-90A02-	3F3
61027-90A04-	3G3
61028-90A04-	3G3
61031-90A02-	3G3
61032-90A00-	3G3
61034-90A00-	3J3
61101-90A08-	3G3
61102-90A07-	3G3
61154-90C00-	3G4
61161-90A03-	3G3
61162-90A03-	3G3
61183-90A01-	3G3
61184-90A00-	3G3
61197-90A00-	3H3
P 61211-90A01-	3H3
P -90A01-06	3C4
61212-90A01-	3H3
61231-90A03-	3H3
61232-90A02-	3H3
P 62333-90A00-03	3C4
P -90A00-16	3C4
61263-90A01-	3H3
P 62411-90A01-03	3C4
61264-90A01-	3H3
P -90A01-16	3C4
61267-90A00-	3H3
P 62412-90A01-03	3C4
61268-90A00-	3H3
P -90A01-16	3C4
61330-90A04-	3H3
P 62471-90A00-18	3C4
61340-90A05-	3H3
P 62472-90A00-18	3C4
-90A07-	3H3
61341-90A00-	3H3
61342-90A00-	3H3
61345-90A00-	3H3
61346-90A00-	3H3
61401-90A06-	3H3
61402-90A06-	3H3
61503-90A00-	3H3
61504-90A00-	3H3
61511-90A01-	3I3
61512-90A01-	3I3
61607-90A04-	3I3
-90A05-	3I3
61608-90A00-	3I3
-90A01-	3I3
61611-90A03-	3I3
61612-90A03-	3I3
61631-90A03-	3I3
61632-90A03-	3I3
61645-90A00-	3I3
61646-90A00-	3I3
61705-90A30-	3I3
-90A40-	3I3
61706-90A66-	3I3
-90A67-	3I3
61709-90A02-	3I3
61711-90A01-	3I3
61712-90A01-	3I3
61733-90A02-	3I3
-90A03-	3I3
-90A05-	3I3
61743-90A02-	3I3
61745-90A01-	3I3
61746-90A01-	3J3
61791-90B01-	3J3
61793-90A00-	3J3
P 62101-90A00-03	3C4
P -90A00-16	3C4
P 62102-90A00-03	3C4
P -90A00-16	3C4
P 62163-90A00-03	3C4
P -90A00-16	3C4
P 62164-90A00-03	3C4
P -90A00-16	3C4
62311-90A00-03	3C4
-90A00-06	3C4
P -90A01-03	3C4
P -90A01-06	3C4
62312-90A00-03	3C4
-90A00-06	3C4
P -90A01-03	3C4
P -90A01-06	3C4
62313-90A00-03	3C4
-90A00-16	3C4
P 62333-90A00-03	3C4
P -90A00-16	3C4
P 62411-90A01-03	3C4
P -90A01-16	3C4
P 62412-90A01-03	3C4
P -90A01-16	3C4
P 62471-90A00-18	3C4
P 62472-90A00-18	3C4
62505-90A03-08	3D4
62506-90A03-08	3D4
62510-90A31-03	3D4
-90A31-06	3D4
P -90A34-03	3D4
P -90A34-06	3D4
P 62520-90A44-03	3D4
P -90A44-06	3D4
-90A52-03	3D4
-90A52-06	3D4
P 62539-90A01-03	3D4
P -90A01-06	3D4
P 62549-90A00-03	3D4
P -90A00-16	3D4
62613-90A07-03	3D4
-90A07-06	3D4
P -90A09-03	3D4
P -90A09-06	3D4
62614-90A00-03	3D4
-90A00-16	3D4
P -90A02-03	3D4
-90A02-06	3D4
62633-90A09-08	3D4
P -90A11-08	3D4
62634-90A09-08	3D4
P -90A11-08	3D4
P 62640-90A17-03	3D4
P -90A17-06	3D4
P 62650-90A06-03	3D4
P -90A06-06	3D4
62711-90A12-	3K3
62712-90A11-	3K3
62741-90A01-	3K3
62795-90A00-	3D7
62903-90A00-	3A4
62904-90A00-	3A4
62905-69015-	3A4
62906-69015-	3A4
62909-22010-	3A4
63105-90A00-	3L3
63111-90A00-	3L3
-90A01-	3L3
63132-90A00-	3L3
63141-90A00-	3L3
63145-90A00-	3L3
F 63310-90A11-08	3E4
63341-90A01-	3E4
63343-90A01-	3E4
63344-90A01-	3E4
63353-90A00-	3E4
63354-90A00-	3E4
63361-90A00-	3E4
	3F4
-90A01-	3E4
	3F4
-90A02-	3E4
	3F4
63362-90A00-	3F4
-90A01-	3F4
-90A02-	3F4
63363-90A00-	3F4
-90A01-	3F4
-90A02-	3F4
63371-30050-	3F4
63372-90A00-	3F4
P 63392-90A00-18	3F4
P 63396-90A00-18	3F4
P 63397-90A00-18	3F4
63435-90A00-	3L3
63436-90A00-	3L3
63437-90A00-	3L3
63438-90A00-	3M3
63439-90A00-	3M3
63441-90A00-	3M3
63442-90A00-	3M3
63443-90A00-	3M3
63444-90A00-	3M3
63445-90A00-	3M3
63447-90A00-	3M3
63448-90A00-	3M3
63449-90A00-	3M3
63457-90A00-	3M3
63458-90A00-	3M3
63459-90A00-	3M3
P 64739-90K01-03	3D4
P -90K01-06	3D4
64777-90A00-	3G7
P 64780-90A01-13	3J5
P -90A01-16	3J5
64798-90A00-	3J5
65061-90A13-	3J5
65557-90A01-	3M2
65706-90A00-	3L5
65707-90A00-	3L5
65777-90A00-	3L5
66110-90A00-	3L5
66301-90A00-	3M2
66318-90A00-	3M2
67001-90A40-	3I4
-90A44-	3I4
67002-90A47-	3I4
-90A50-	3I4
67003-90A15-	3C5
-90A17-	3C5
67004-90A15-	3C5
-90A17-	3C5
67005-90A20-	3J5
-90A27-	3J5
67111-90A15-	3I4
-90A18-	3I4
67112-90A15-	3I4
-90A18-	3I4
67113-90A05-	3C5
67114-90A05-	3C5
67118-90A02-	3I4
-90A03-	3I4
67207-90A00-	3L5
67209-90A00-	3L5
67285-90A00-	3L5
67286-90A00-	3L5
67401-90A00-	3I4
67402-90A00-	3I4
67403-90A00-	3I4
67404-90A00-	3I4
67407-90A00-	3C5
P 67408-90A00-	3C5
67481-90A00-	3I4
67482-90A00-	3I4
67610-90G04-03	3I4
-90G04-06	3I4
-90G07-03	3I4
-90G07-06	3I4
P -90G42-03	3I4
P -90G42-06	3I4
P -90G49-03	3I4
P -90G49-06	3I4
67620-90G07-03	3J4
-90G07-06	3J4
-90G14-03	3J4
-90G14-06	3J4
P -90G41-03	3J4
P -90G41-06	3J4
P -90G48-03	3J4
P -90G48-06	3J4
67630-90A25-03	3C5
-90A25-06	3C5
-90A28-03	3C5
-90A28-06	3C5
P -90A33-03	3D5
P -90A33-06	3D5
P -90A36-03	3D5
P -90A36-06	3D5
67640-90A25-03	3D5
-90A25-06	3D5
-90A28-03	3D5
-90A28-06	3D5
P -90A34-03	3D5
P -90A34-06	3D5
P -90A37-03	3D5
P -90A37-06	3D5
P 67651-90A01-03	3J4
P -90A01-06	3J4
67687-90A00-	3J5
67689-90A00-	3J5
67765-90A00-	3J5
67766-90A00-	3J5
67767-90A00-	3J5
67769-90A00-	
67771-22010-	3J4
-30060-	3D5
P 67777-22040-23	3J4
P -22040-36	3J4
P 67778-22030-23	3J4
P -22030-46	3J4
P 67805-90A01-	3D5
67813-90A00-	3J3
67814-90A00-	3J3
B 67832-90A04-	3J4
P -90A07-	3J4
67847-90A01-	3K5
67861-90A00-	3J4
67862-90A00-	3J4
67868-30040-	3D5
	3J4
67871-90A00-	3D5
67872-90A00-	3D5
67881-90A06-	3K5
67891-90A01-	3K5
P 67913-90A00-03	3B3
P -90A00-16	3B3
67917-90A00-03	3C3
-90A00-16	3C3

ILLUSTRATED INDEX

E16

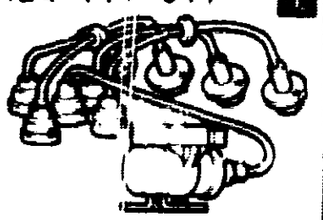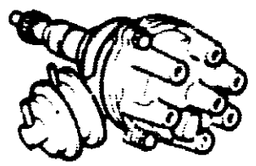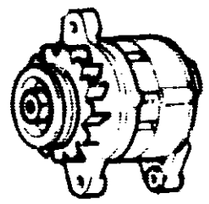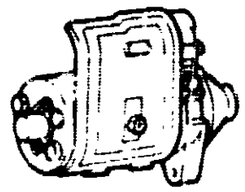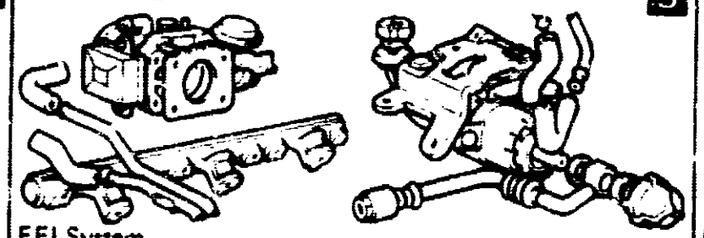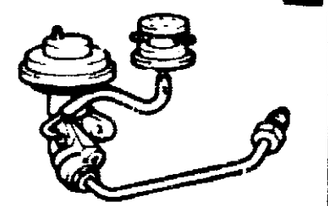1B4 (19-01) 1	1D4 (19-02) 2	1E4 (19-03) 3	1G4 (19-04) 4	1I4 (22-11) 5	1M4 (25-01) 6
					
Ignition Coil & Cord	Distributor	Alternator	Starter	EFI System	EGR System

ENGINE, FUEL GROUP (2/2)

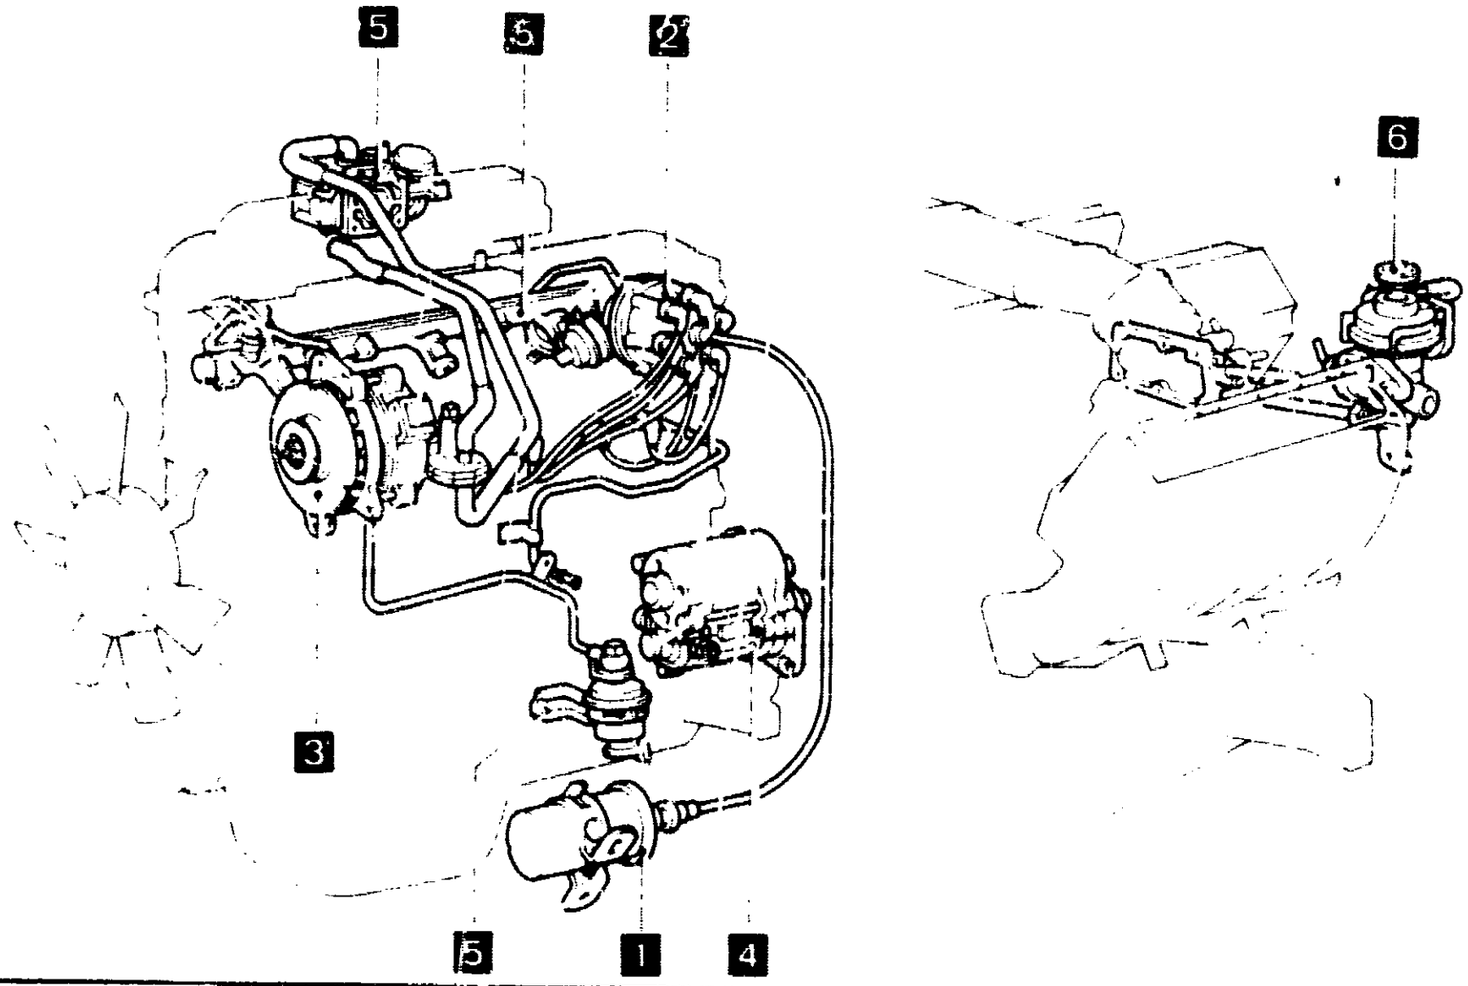

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35301A SEAL, OIL (FOR FRONT OIL PUMP)						
8708-9001	FJ62			90311-42010-	1		
	35301B RING, O (FOR FRONT OIL PUMP BODY)						
8708-9001	FJ62			90301-99029-	1		
	35301F BOLT (FOR FRONT OIL PUMP SETTING)						
8708-9001	FJ62			91511-60850-	11		
	35308 COVER SUB-ASSY, FRONT OIL PUMP						
8708-9001	FJ62			35308-36010-	1		
	35308C RACE, THRUST BEARING (FOR FRONT OIL PUMP COVER)						
8708-9001	FJ62	T=0.8		35789-36040-	1		
8708-9001	FJ62	T=1.0		35789-36050-	1		
8708-9001	FJ62	T=1.4		35789-36060-	1		
	35313 GASKET, FRONT OIL PUMP COVER						
8708-9001	FJ62			35313-36010-	1		
	35321 GEAR, FRONT OIL PUMP DRIVE						
8708-9001	FJ62	T=18.451-18.486		35321-36010-	1		
8708-9001	FJ62	T=18.435-18.450		35321-36020-	1		
	35322 GEAR, FRONT OIL PUMP DRIVEN						
8708-9001	FJ62	T=18.451-18.486		35322-36010-	1		
8708-9001	FJ62	T=18.435-18.450		35322-36020-	1		
	35427D SEAT, CHECK VALVE SPRING						
8708-9001	FJ62			35427-36010-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35495 BALL, CHECK						
8708-9001	FJ62			35495-36010-	1		
	35495A SPRING, COMPRESSION (FOR CHECK BALL)						
8708-9001	FJ62			90501-18677-	1		
	35617 RING, CLUTCH DRUM OIL SEAL						
8708-9001	FJ62			35617-36010-	2		


FIG. 35-09 BRAKE NO.3, 1ST & REVERSE BRAKE (ATM)

2F2

791430M-01137

(8708-)
A44CF

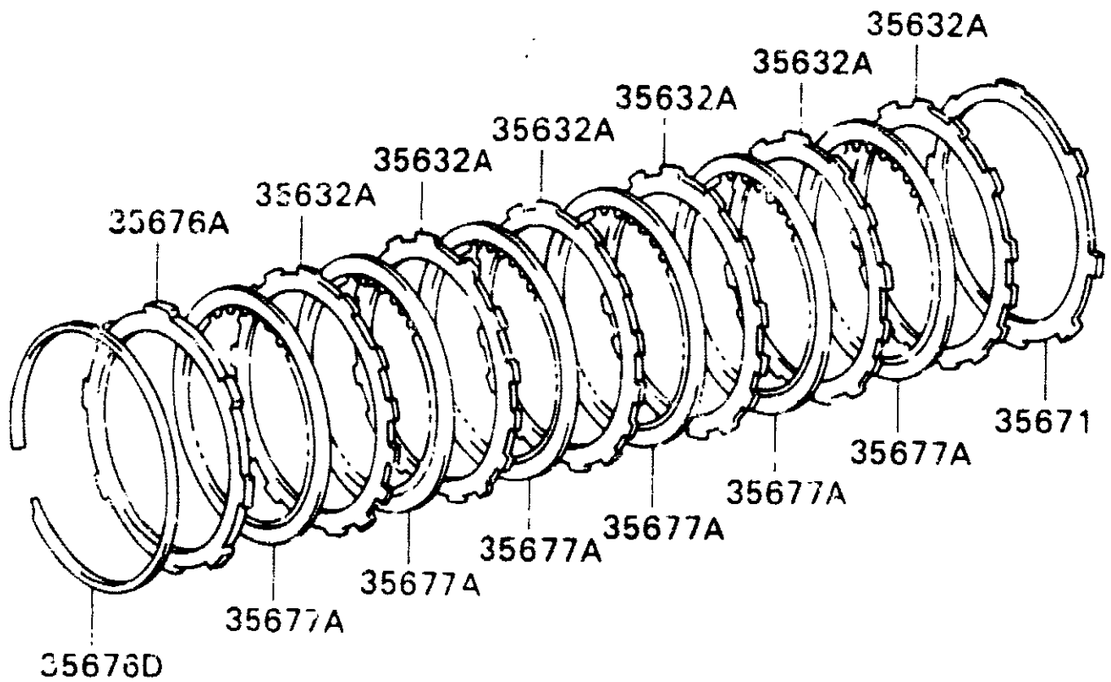

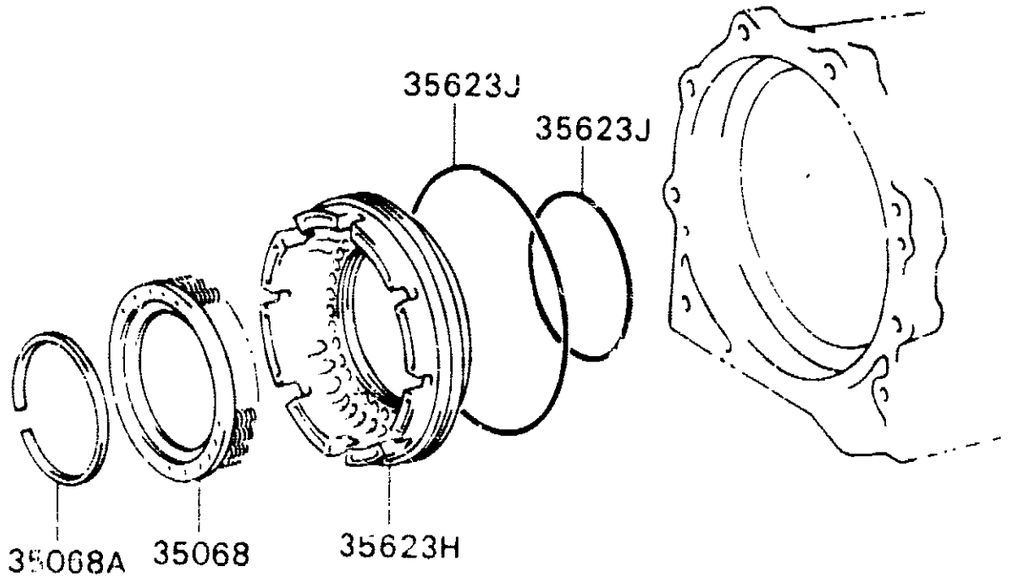

MC B717


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35068	SPRING SUB-ASSY, 1ST & REVERSE BRAKE RETURN					
8708-9001	FJ62			35068-36010-	1		
	35068A	RING, SHAFT SNAP (FOR 1ST & REVERSE BRAKE RETURN SPRING)					
8708-9001	FJ62			90520-87001-	1		
	35623H	PISTON, 1ST & REVERSE BRAKE					
8708-9001	FJ62			35623-36010-	1		
	35623J	RING, O (FOR 1ST & REVERSE BRAKE)					
8708-9001	FJ62	INNER		90301-94002-	1		
8708-9001	FJ62	OUTER		90301-99030-	1		
	35632A	PLATE, BRAKE (FOR 1ST & REVERSE BRAKE)					
8708-9001	FJ62			35632-36020-	6		
	35671	PLATE, BRAKE CUSHION					
8708-9001	FJ62			35671-36010-	1		
	35676A	FLANGE, BRAKE (FOR 1ST & REVERSE BRAKE)					
8708-9001	FJ62	T=6.65		35676-36070-	1		
8708-9001	FJ62	T=7.05		35676-36080-	1		
8708-9001	FJ62	T=7.45		35676-36090-	1		
	35676D	RING, HOLE SNAP (FOR 1ST & REVERSE BRAKE FLANGE)					
8708-9001	FJ62			90521-99021-	1		
	35677A	DISC, CLUTCH (FOR 1ST & REVERSE BRAKE)					
8708-9001	FJ62			35633-36030-	6		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35466F	SPRING, COMPRESSION (FOR 2ND LOCK VALVE)					
8708-9001	FJ62			90501-08062-	1		
	35466G	KEY, STRAIGHT (FOR 2ND LOCK VALVE)					
8708-9001	FJ62			90282-03005-	1		
	35466J	PLUG (FOR 2ND LOCK VALVE)					
8708-9001	FJ62			90339-04017-	1		
	35467B	VALVE, INTERMEDIATE COAST SHIFT					
8708-9001	FJ62			35467-36010-	1		
	35468C	VALVE, SECONDARY REGULATOR					
8708-9001	FJ62			35468-36011-	1		
	35468D	SPRING, COMPRESSION (FOR SECONDARY REGULATOR VALVE)					
8708-9001	FJ62			90501-17008-	1		
	35468E	KEY, STRAIGHT (FOR SECONDARY REGULATOR VALVE)					
8708-9001	FJ62			90282-03006-	1		
	35468F	PLUG (FOR SECONDARY REGULATOR VALVE)					
8708-9001	FJ62			90339-04010-	1		
	35472	COVER, VALVE BODY, NO.2					
8708-9001	FJ62			35472-36011-	1		
	35476A	PLUG, STRAIGHT (FOR 3RD COAST SHIFT)					
8708-9001	FJ62			90339-04012-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35476B	PIN, LOCATING (FOR 3RD COAST SHIFT)					
8708-9001	FJ62			90250-02016-	1		
	35476C	VALVE, 3RD COAST					
8708-9001	FJ62			35476-36010-	1		
	35477A	VALVE, OVERDRIVE CLUTCH EXHAUST					
8708-9001	FJ62			35477-30030-	1		
	35477B	SPRING, COMPRESSION (FOR OVERDRIVE CLUTCH EXHAUST VALVE)					
8708-9001	FJ62			90501-07042-	1		
	35477F	PLUG (FOR OVERDRIVE CLUTCH EXHAUST VALVE)					
8708-9001	FJ62			90339-04021-	1		
	35477G	KEY, STRAIGHT (FOR 3RD COAST SHIFT)					
B 8708-9001	FJ62			90282-03006-	1		
	35479B	VALVE, SECONDARY THROTTLE					
8708-9001	FJ62			35479-36010-	1		
	35479E	SPRING, COMPRESSION (FOR SECONDARY THROTTLE VALVE)					
8708-9001	FJ62			90501-07049-	1		
	35479F	RING, E (FOR SECONDARY THROTTLE VALVE)					
8708-9001	FJ62			90523-06005-	1		
	35488	VALVE, 2-3 SHIFT TIMING					
8708-9001	FJ62			35488-60010-	1		

(8708-)

ELECTRIC TYPE

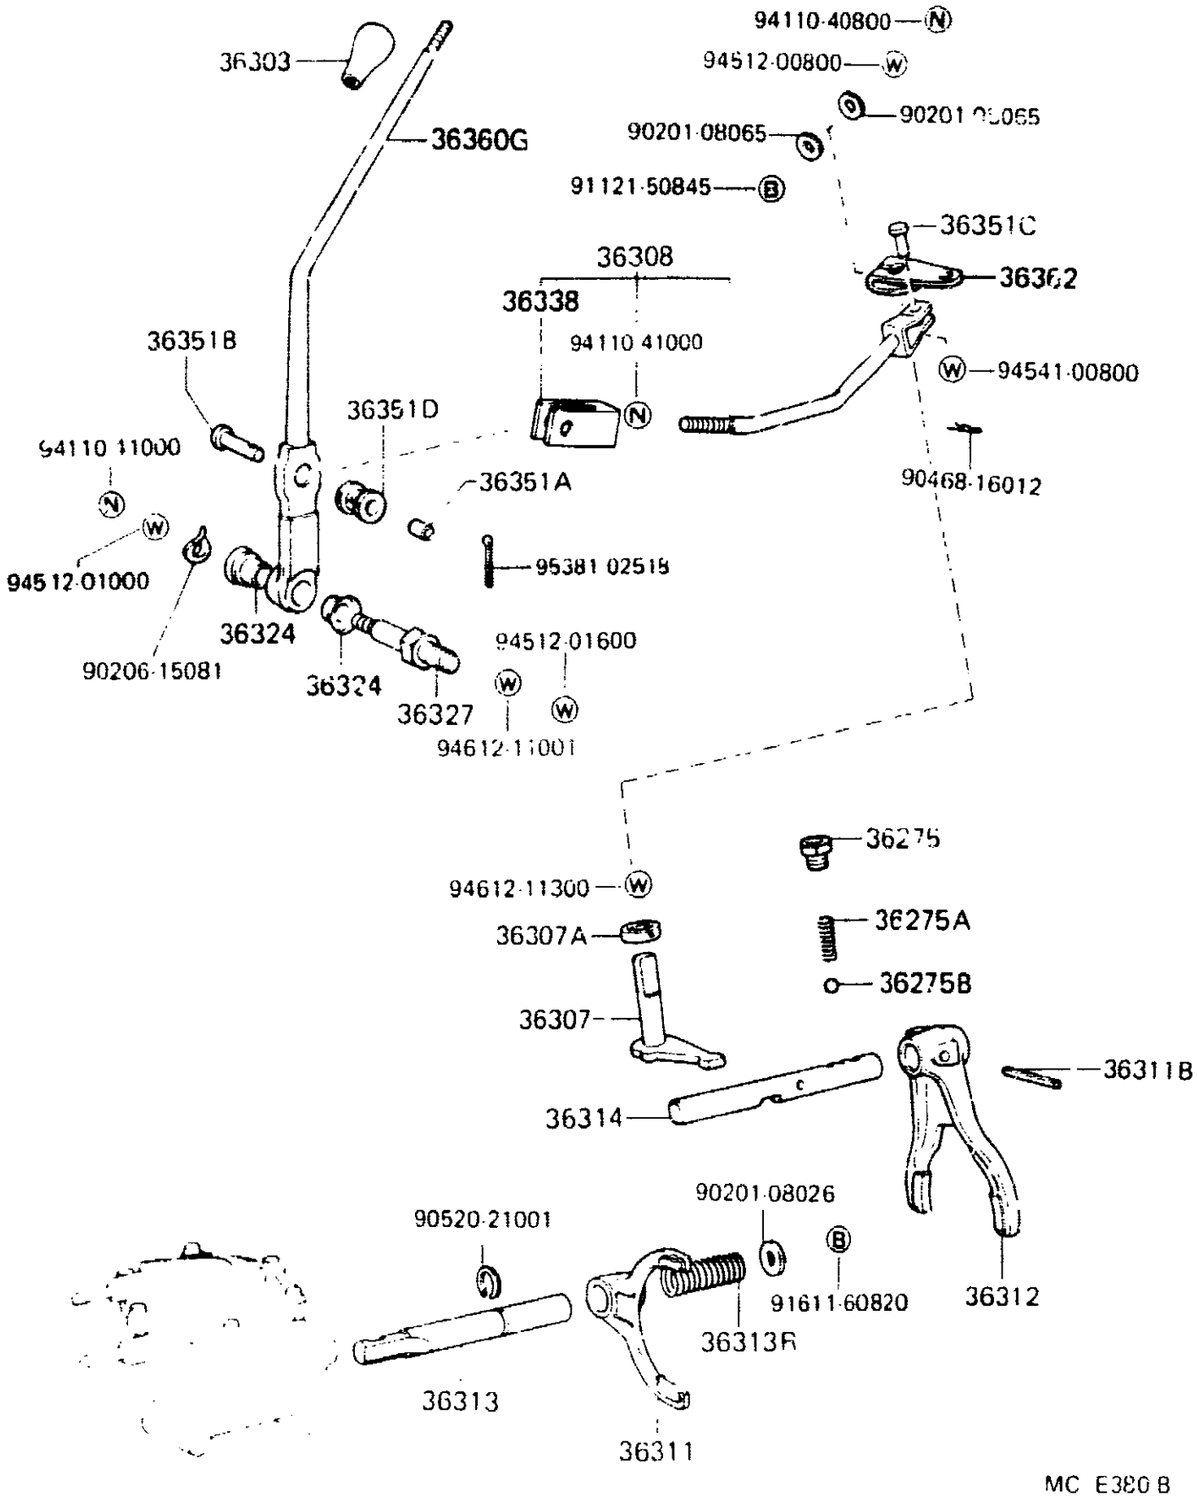

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	36275	**PLUG, SHIFT DETENT BALL SPRING**					
8708-9001	FJ62			90341-15001-	1		
	36275A	**SPRING, COMPRESSION (FOR SHIFT DETENT BALL)**					
8808-9001	FJ62..WGG			90501-16115-	1		
	36275B	**BALL, SHIFT DETENT**					
8708-9001	FJ62			90360-10003-	1		
	36303	**KNOB SUB-ASSY, SHIFT LEVER**					
8708-9001	FJ62			36303-60130-	1		
	36307	**LEVER SUB-ASSY, HIGH & LOW SHIFT INNER**					
8708-9001	FJ62			36307-60040-	1		
	36307A	**SEAL, OIL (FOR HIGH & LOW SHIFT INNER LEVER)**					
8708-9001	FJ62			90313-13001-	1		
	36308	**ROD SUB-ASSY, HIGH & LOW SHIFT**					
8708-9001	FJ62			36308-60100-	1		
	36311	**FORK, TRANSFER GEAR SHIFT, NO.1**					
8708-9001	FJ62			36311-60041-	1		
	36311B	**PIN, SLOTTED SPRING (FOR TRANSFER SHIFT FORK)**					
8708-9001	FJ62	L=25.5		90254-05016-	1		
	36312	**FORK, TRANSFER GEAR SHIFT, NO.2**					
8708-9001	FJ62			36312-60040-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	41463B BOLT (FOR REAR DIFFERENTIAL LOCK SHIFT FORK SHAFT SET)						
8708-9001	FJ62			90105-06052-	1		
	41464 LEVER, REAR DIFFERENTIAL LOCK CYLINDER						
8708-9001	FJ62			41464-60010-	1		
	41464B BUSH (FOR REAR DIFFERENTIAL LOCK CYLINDER LVER)						
8708-9001	FJ62			90386-09009-	4		
	41465 RETAINER, REAR DIFFERENTIAL LOCK SPRING						
8708-9001	FJ62			41465-60010-	1		
	41465B SPRING, COMPRESSION (FOR REAR DIFFERENTIAL LOCK RETAINER)						
8708-9001	FJ62			90501-20083-	1		
	41465D PLUG (FOR REAR DIFFERENTIAL LOCK CYLINDER)						
8708-9001	FJ62			90341-26001-	1		
	41465F GASKET (FOR REAR DIFFERENTIAL LOCK CYLINDER)						
8708-9001	FJ62			90430-26002-	1		
	41466 BOOT, REAR DIFFERENTIAL LOCK CYLINDER						
8708-9001	FJ62			41466-60010-	1		
	41467 PROTECTOR, DIFFERENTIAL LOCK CYLINDER						
8708-9001	FJ62			41467-60020-	1		
	41991 PLATE, CAUTION						
8708-9001	FJ62..CND	ENGLISH		41991-60030-	1		
8708-9001	FJ62..USA				1		
8708-9001	FJ62..CND	FRENCH		41991-60040-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	42109 COVER SUB-ASSY, REAR AXLE HOUSING						
8708-9001	FJ62			42109-60050-	1		
	42110 HOUSING ASSY, REAR AXLE						
8708-9001	FJ62			42110-60193-	1		
8708-9001	FJ62	W(DIFFERENTIAL LOCK)		42110-60301-	1		
	42110A PLUG (FOR REAR AXLE HOUSING FILLER)						
8708-9001	FJ62			90341-18006-	1		
	42110B GASKET (FOR REAR AXLE HOUSING FILLER PLUG)						
8708-9001	FJ62			12157-10010-	1		
	42110D GASKET (FOR REAR AXLE HOUSING DRAIN PLUG)						
8708-9001	FJ62			12157-10010-	1		
	42110E PLUG (FOR REAR AXLE HOUSING DRAIN)						
8708-9001	FJ62			90341-18057-	1		
	42137 COLLAR, REAR AXLE HOUSING SIDE						
8708-9001	FJ62			42137-55010-	2		
	42181 GASKET, REAR DIFFERENTIAL CARRIER						
8708-9001	FJ62			42181-36010-	1		
P 8708-9001	FJ62	W(DIFFERENTIAL LOCK)		42181-60030-	1		
	42183 GASKET, REAR AXLE HOUSING COVER						
8708-9001	FJ62			42183-35010-	1		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		41231F	SPACER, FRONT DIFFERENTIAL DRIVE PINION BEARING CONTINUED					
B	8911-9001	FJ62..WGG			41231-60030-	1		
		41252A	DEFLECTOR, DUST (FOR FRONT DIFFERENTIAL)					
	8708-9001	FJ62			41252-35010-	1		
		41301N	BEARING, TAPERED ROLLER (FOR FRONT AXLE DEFFERENTIAL)					
	8708-9001	FJ62			90366-60002-	2		
		41301Q	WASHER (FOR FRONT DIFFERENTIAL TAPERED ROLLER BEARING)					
	8708-9001	FJ62	T=2.67,MARK 01		90201-79001-	X		
	8708-9001	FJ62	T=2.70,MARK 02		90201-79002-	X		
	8708-9001	FJ62	T=2.73,MARK 03		90201-79003-	X		
	8708-9001	FJ62	T=2.76,MARK 04		90201-79004-	X		
	8708-9001	FJ62	T=2.79,MARK 05		90201-79005-	X		
	8708-9001	FJ62	T=2.82 MARK 06		90201-79006-	X		
	8708-9001	FJ62	T=2.85 MARK 07		90201-79007-	X		
	8708-9001	FJ62	T=2.88 MARK 08		90201-79008-	X		
	8708-9001	FJ62	T=2.91 MARK 09		90201-79009-	X		
	8708-9001	FJ62	T=2.94 MARK 10		90201-79010-	X		
	8708-9001	FJ62	T=2.97 MARK 11		90201-79011-	X		
	8708-9001	FJ62	T=3.00 MARK 12		90201-79012-	X		
	8708-9001	FJ62	T=3.03 MARK 13		90201-79013-	X		
	8708-9001	FJ62	T=3.06 MARK 14		90201-79014-	X		
	8708-9001	FJ62	T=3.09 MARK 15		90201-79015-	X		
	8708-9001	FJ62	T=3.12 MARK 16		90201-79016-	X		
	8708-9001	FJ62	T=3.15 MARK 17		90201-79017-	X		
	8708-9001	FJ62	T=3.18 MARK 18		90201-79018-	X		
	8708-9001	FJ62	T=3.21 MARK 19		90201-79019-	X		
	8708-9001	FJ62	T=3.24 MARK 20		90201-79020-	X		
	8708-9001	FJ62	T=3.27 MARK 21		90201-79021-	X		
	8708-9001	FJ62	T=3.30 MARK 22		90201-79022-	X		
	8708-9001	FJ62	T=3.33 MARK 23		90201-79023-	X		
		41315A	NUT, FRONT DIFFERENTIAL BEARING ADJUSTING					
	8708-9001	FJ62			41315-30010-	2		
		41331F	GEAR, FRONT DIFFERENTIAL SIDE					
	8708-8808	FJ62			41331-35020-	2		
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		41331-60020-	2		
B	8808-9001	FJ62..WGG			41331-25010-	2		
		41341F	PINION, FRONT DIFFERENTIAL					
	8708-8808	FJ62			41341-55012-	2		
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		〃	4		
B	8808-9001	FJ62..WGG			41341-25010-	2		
		41342F	SHAFT, FRONT DIFFERENTIAL PINION, NO.1					
B	8708-9001	FJ62			41342-55010-	1		
	8708-9001	FJ62	L=136.0,W(DIFFERENTIAL LOCK)		41342-60010-	1		
	8708-9001	FJ62	L=60.5,W(DIFFERENTIAL LOCK)		41342-60020-	2		
		41343B	PIN, FRONT DIFFERENTIAL PINION SHAFT					
P	8708-8911	FJ62			41343-55010-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	44342	PLATE, VANE PUMP SIDE, REAR					
8708-9001	FJ62			44341-12010-	1		
	44342A	RING, O (FOR REAR SIDE PLATE)					
8708-9001	FJ62			90301-53002-	1		
	44342B	SPRING, COMPRESSION (FOR REAR SIDE PLATE)					
8708-9001	FJ62			90501-23014-	1		
	44343	SEAT, FLOW CONTROL SPRING					
8708-9001	FJ62			44343-12040-	1		
	44343A	RING, O (FOR FLOW CONTROL SPRING SEAT)					
8708-9001	FJ62			96711-19014-	2		
	44345B	PLATE, VANE PUMP					
8708-9001	FJ62	L=14.996-14.998		44345-12010-	10		
8708-9001	FJ62	L=14.994-14.996		44345-12020-	10		
8708-9001	FJ62	L=14.992-14.994		44345-12030-	10		
8708-9001	FJ62	L=14.990-14.992		44345-12040-	10		
8708-9001	FJ62	L=14.988-14.990		44345-12050-	10		
	44360	RESERVOIR ASSY, VANE PUMP OIL					
8708-9001	FJ62			44306-60070-	1		
	44391	PLATE, POWER STEERING OIL RESERVOIR CAUTION					
8708-9001	FJ62			44391-14010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T


FIG. 47-03 BRAKE BOOSTER

(8708-)

ILLUST.NO. 10F2

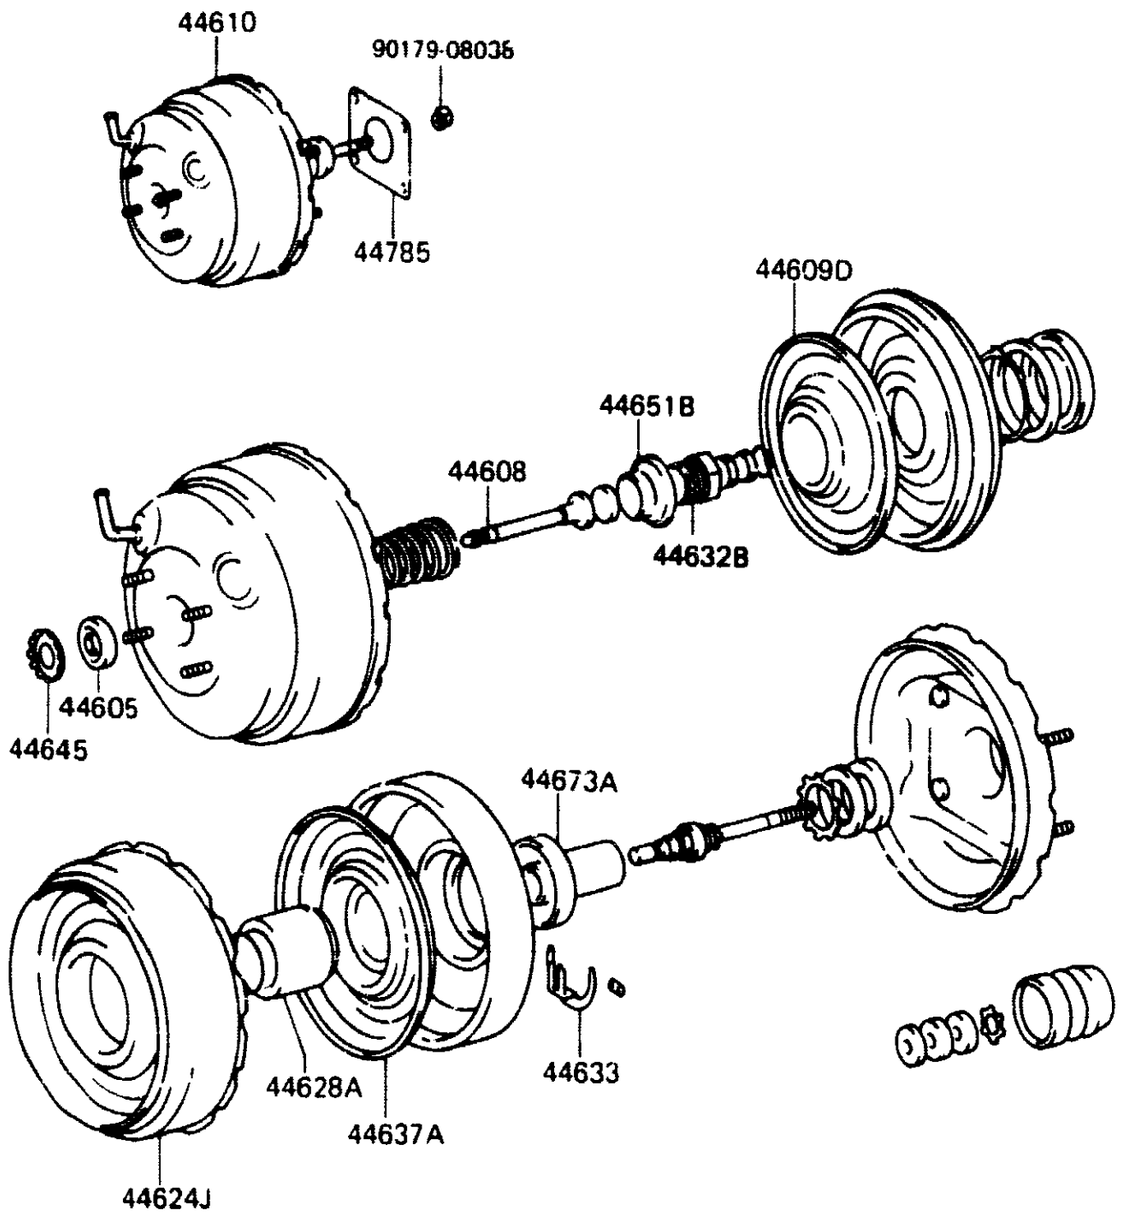


04443

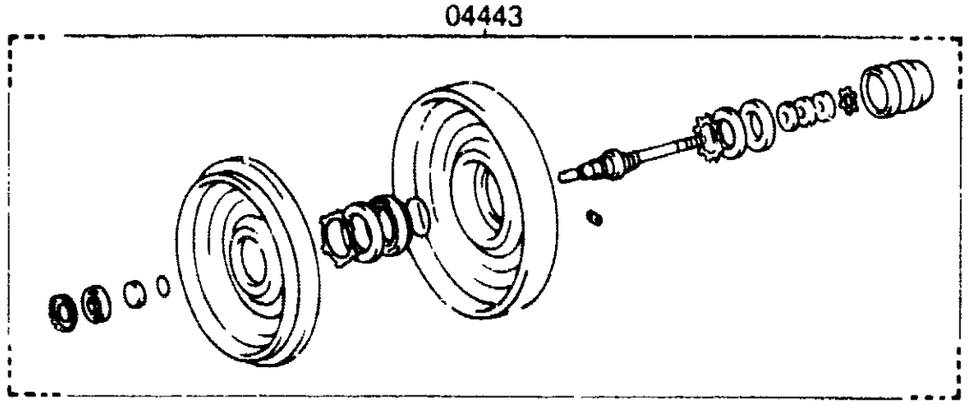

MC E391C

(8708-)

ILLUST.NO. 20F2

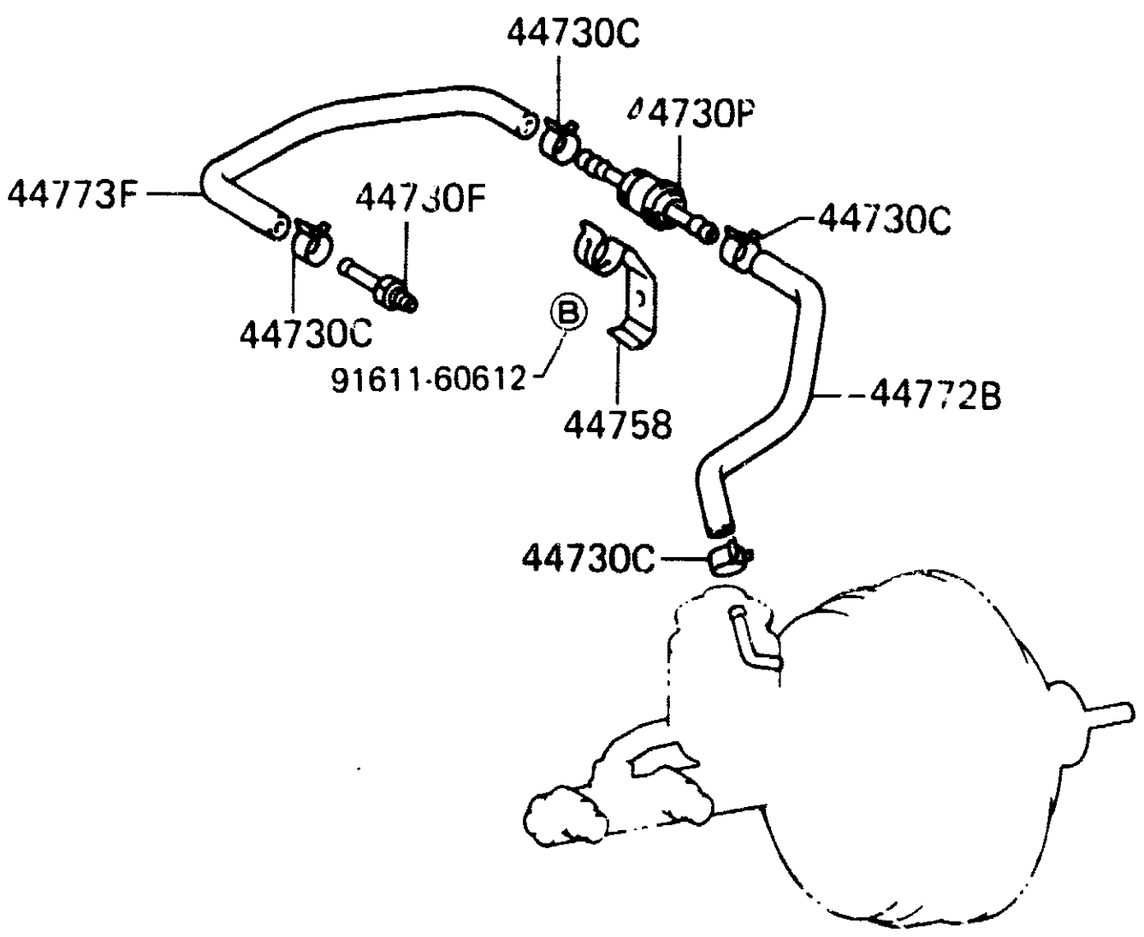

MC E392

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		43233	SHIM, STEERING KNUCKLE ADJUST, NO.1 CONTINUED					
	8708-9001	FJ62	T=0.5		43234-60011-	X		
	8708-9001	FJ62	T=1.0		43235-60010-	X		
	8708-9001	FJ62	T=0.1		43236-60010-	X		
	8708-9001	FJ62	T=0.30		43237-60030-	X		
		43238	SEAL, STEERING KNUCKLE OIL, INNER					
	8708-9001	FJ62			43238-60010-	2		
		43239	SEAL, STEERING KNUCKLE OIL, OUTER					
	8708-9001	FJ62			43239-60020-	2		
		43401	SPINDLE SUB-ASSY, STEERING KNUCKLE					
P	8708-9001	FJ62			# 43401-60012-	2		
					(43401-60060-)	2		
S	9001-9001	FJ62..WGG			43401-60060-	2		
		43435	GASKET, KNUCKLE SPINDLE					
	8708-9001	FJ62			43435-60011-	2		
		43436	GASKET, KNUCKLE SPINDLE OIL RETAINER					
	8708-9001	FJ62			43436-60011-	2		
		43511A	SEAL, DUST (FOR FRONT AXLE HUB)					
	8708-9001	FJ62			90313-93011-	2		
		45611F	BEARING (FOR STEERING KNUCKLE ARM)					
	8708-9001	FJ62			90366-17001-	4		
		45611H	DOWEL, SPLIT (FOR STEERING KNUCKLE ARM)					
	8708-9001	FJ62			42323-60020-	8		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

	PART NUMBER	LOCATION
	68111-90A01-	3J4
	68112-90A01-	3J4
	68113-90A01-	3D5
	68114-90A01-	3D5
	68123-90A01-	3D5
	68124-90A01-	3E5
	68131-90A20-	3K5
	68141-90A03-	3K4
	68142-90A01-	3E5
	68143-90A01-	3K4
	68170-90A01-	3K4
	68188-90A00-	3E5
	68189-90A00-	3E5
	68190-90A01-	3E5
	68281-90A00-	3K5
	68282-90A00-	3K5
	68291-90A01-	3K5
	68610-22010	3K4
	68617-90A01-	3E5
		3K4
	68630-90A00-	3E5
	68710-14020-	3A5
	-30080-	3H5
	68720-14020-	3A5
	-30020-	3H5
	68730-14020-	3A5
		3H5
	68740-14020-	3A5
		3H5
	68810-90A00-	3L5
	68868-90A00-	3L5
	68950-69045-	3M5
	68961-23010-	3M5
	69005-90A47-	3A6
	-90A62-	3A6
	69051-90A06-	3A6
	69052-90A06-	3A6
	69055-90A06-	3A6
	-90A11-	3A6
	69056-90A01-	3A6
	69057-90A08-	3A6
	69058-90A02-	3A6
	69205-20020-	3F5
		3L4
	69206-20020-	3F5
		3L4
	69210-90A00-	3L4
	69212-90A00-	3M5
	69220-90A00-	3L4
	69230-90A00-	3F5
	69240-90A00-	3F5
P	69260-12010-03	3A5
P		3H5
P	-12010-46	3A5
P		3H5
	69273-30020-	3F5
		3L4
P	69277-16040-23	3F5
P		3L4
P	-16040-36	3F5
P		3L4
	69285-22010-08	3A5
		3H5
	69289-90A00-	3M5

	PART NUMBER	LOCATION
	69310-90A02-	3L4
	-90A03-	3L4
	69320-90A02-	3L4
	-90A03-	3L4
	69330-90A00-	3F5
	-90A01-	3F5
	69340-90A00-	3F5
	-90A01-	3F5
	69350-90A03-	3M5
	69380-90A01-	3M5
	69390-90A00-	3M5
	69410-90B00-	3G5
		3M4
	69430-90A01-	3M5
	69450-90A00-	3M5
	69460-90A00-	3M5
	69513-14010-	3A6
	-90A00-	3B6
	69551-13020-	3B6
	-90A00-	3B6
	69552-95A00-	3B6
	69563-90A00-	3B6
	69581-14010-	3B6
	69681-20040-	3B6
	69690-90A01-	3M5
	69705-90A00-	3M5
P	69706-90A00-03	3M5
P	-90A00-06	3M5
	69711-90A00-	3M4
	69712-90A00-	3M4
	69713-90A00-	3G5
	69714-90A00-	3G5
	69722-90A00-	3M5
	69736-90K00-	3G5
		3M4
P	69741-90K00-06	3G5
P		3M4
	69747-20020-01	3M5
	69749-12010-	3G5
		3L1
		3M4
	-30020-	3M5
	69751-20040-	3E5
		3K4
	69759-30021-	3G5
		3M4
	69764-90A00-	3M5
	69767-90A00-	3M5
	69770-90A02-	3G5
	-90A03-	3G5
	69780-90A02-	3G5
	-90A03-	3G5
	69801-90A00-	3A5
	69802-90A00-	3A5
	69803-90A00-	3H5
	69804-90A00-	3H5
	69810-90A02-	3A5
	69820-90A02-	3A5
	69830-90A01-	3H5
	69840-90A01-	3H5
	69901-90A03-	3B5
	69902-90A02-	3B5
	69905-90A03-	3I5
	69906-90A03-	3I5


	PART NUMBER	LOCATION
	69971-90A01-	3B5
	69973-90A00-	3I5
	69975-90A00-	3I5
P	71071-90A35-03	3D6
P	-90A35-06	3D6
P	71072-90A18-03	3D6
P	-90A18-06	3D6
P	71073-90A44-03	3D6
P	-90A44-06	3D6
	71075-90A18-03	3D6
	-90A18-06	3D6
P	71077-90A41-03	3D6
P	-90A41-06	3D6
	71301-90A00-	3D6
	71307-90A00-	3D6
	71309-90A00-	3E6
	71354-90A00-	3E6
P	71410-90A33-03	3E6
P	-90A33-06	3E6
P	71420-90A31-03	3E6
P	-90A31-06	3E6
P	71430-90A39-03	3E6
P	-90A39-06	3E6
P	71440-90A37-03	3E6
P	-90A37-06	3E6
P	71460-90G12-03	3E6
P	-90G12-06	3E6
P	71480-90G28-03	3E6
P	-90G28-06	3E6
	71739-90A00-	3E6
P	71825-90A00-03	3E6
P	-90A00-16	3E6
P	71826-90A00-03	3E6
P	-90A00-16	3E6
P	71827-90A00-03	3E6
P	-90A00-16	3E6
P	71828-90A00-03	3E6
P	-90A00-16	3E6
P	71829-90A00-03	3E6
P	-90A00-16	3E6
P	71835-90A00-03	3F6
P	-90A00-16	3F6
P	71836-90A00-03	3F6
P	-90A00-16	3F6
P	71837-90A01-03	3F6
P	-90A01-06	3F6
	71887-90A00-	3F6
P	71910-90A01-03	3F6
P	-90A01-16	3F6
	71930-10060-33	3F6
P	-10060-36	3F6
	71931-10010-33	3F6
	-10010-36	3F6
	71955-90K00-01	3F6
	71956-30020-13	3F6
P	-30020-56	3F6
	71990-30020-13	3F6
P	-30020-56	3F6
	72110-90A04-	3F6
	72120-90A04-	3F6
	72130-90A03-	3F6
	72140-90A00-	3F6
	72145-90A00-	3F6
	72146-90A00-	3G6


	PART NUMBER	LOCATION
	72510-90A03-	3G6
	72520-90A02-	3G6
P	72525-14010-13	3G6
P	-14010-56	3G6
P	72526-14010-43	3G6
P	-14010-56	3G6
	72538-12010-	2B7
P	72551-90A00-03	3G6
P	-90A00-16	3G6
P	72552-90A00-03	3G6
P	-90A00-16	3G6
	72607-90A00-	3G6
	72630-90A17-	3G6
	-90A20-	3G6
	72640-90A17-	3G6
	-90A20-	3G6
	72645-90A00-	3G6
	72651-90A00-	3G6
P	72660-90A00-03	3G6
P	-90A00-16	3G6
	72670-90A02-	3G6
	72680-90A02-	3G6
P	72694-90A00-03	3G6
P	-90A00-16	3G6
	73003-90A00-03	3H6
	-90A00-06	3H6
	73210-90A26-03	3H6
	-90A26-06	3H6
P	-90A29-03	3H6
P	-90A29-06	3H6
	73220-90A15-03	3H6
	-90A15-06	3H6
P	-90A17-03	3H6
P	-90A17-06	3H6
P	73230-90A17-06	3H6
P	-90A17-13	3H6
P	73240-90A20-03	3H6
P	-90A20-06	3H6
	73330-90A04-13	3I6
	-90A04-16	3I6
	-90A05-13	3I6
	-90A05-16	3I6
	-90A37-03	3I6
	-90A37-06	3I6
P	-90A46-03	3I6
P	-90A46-06	3I6
P	73360-90A40-03	3I6
P	-90A40-06	3I6
P	73380-90A20-03	3I6
P	-90A20-06	3I6
	74102-90A01-	3A7
	74104-90A01-	3A7
P	74105-10010-10	3A7
	-10010-13	3A7
	74135-10030-	3A7
	74137-10030-	3A7
P	74250-90A00-03	3K6
P	-90A00-16	3K6
P	74310-90A28-08	3K6
P	-90A52-08	3K6
P	74320-90A25-08	3K6
P	-90A42-08	3K6
P	74348-12010-18	3K6
P	74372-90A00-	3C11


	PART NUMBER	LOCATION
	74404-90A00-	3L6
	74431-90A00-	3L6
	74433-90A00-	3L6
	74451-90A00-	3L6
	74559-12020-	3M6
	-20030-	3M6
	-20090-	3M6
	-60010-	3M6
	74564-60010-	3M6
	74571-28020-	3M6
	74610-10020-18	3K6
	-90K00-08	3K6
	74617-14010-18	3K6
	-16010-08	3K6
	74620-90A00-18	3K6
P	74670-90A01-03	3K6
P	-90A01-06	3K6
	75330-90A00-	3C7
	75340-90A00-	3C7
	75370-90A02-	3C7
	75415-95660-	3M5
	75430-90K00-	3C7
	75442-90A01-	3C7
	75505-90A00-	3D7
	75506-90F00-	3E7
	75531-90A00-	3D7
	75533-90A00-	3D7
	75534-90A00-	3D7
	75535-90A00-	3D7
	75541-90A00-	3D7
	75543-90A00-	3D7
	75553-90A00-	3E7
	75554-90A00-	3E7
	75575-90A00-	3E7
	75583-90A00-	3E7
	75586-90A00-	3E7
	75596-90A00-	3E7
	75631-90A01-	3M3
	75641-90A00-	3E7
	75642-90A00-	3E7
	75645-90A00-	3E7
	75646-90A00-	3E7
	75710-90A02-	3E7
	75720-90A02-	3E7
	75730-90A01-	3E7
	75740-90A01-	3E7
	75751-90A00-	3E7
	75752-90A00-	3E7
	75755-90A00-	3F
	75756-90A00-	3F7
	75761-90A00-	3F7
	75762-90A00-	3F7
	75763-90A00-	3F7
	75764-90A00-	3F7
	75765-90A00-	3F7
	75766-90A00-	3F7
	75812-90A00-	3E7
	75813-90A00-	3E7
	75850-69015-	3F7
	75867-20020-	3F7
	76003-69015-	3K1
	76004-69015-	3K1
	76607-69015-	3J3


	PART NUMBER	LOCATION
	76608-69015-	3J3
	76628-90A01-	3M2
	77001-60220-	3J7
	77030-90A01-	3J7
	77037-90K00-	3J7
	77169-14010-	1K4
	77193-60031-	3J7
	77201-60150-	3J7
	77205-60140-	3J7
	77209-60041-	3J7
	77213-60030-	3J7
	77244-60110-	3K7
	77249-60040-	3J7
	-60050-	3J7
	77250-60080-	3J7
A	-60081-	3J7
	-60090-	3J7
	77261-60080-	3J7
	77262-60030-	3J7
	77264-60030-	3K7
	77293-60030-	3K7
	77305-90A01-	3K7
	77310-12100-	3K7
	77316-12050-	3K7
	77358-12020-	3K7
	77366-12010-	3K7
	77601-60060-	3K7
	77602-60040-	3K7
	77740-60130-	3K7
	77751-60020-	3K7
	78111-95110-	3M7
	78118-90K00-	3M7
	78120-90A08-	3M7
	-90A09-	3M7
	78180-90A04-	3M7
	78184-90A01-	3M7
	-90A03-	3M7
	78410-90A03-	3M7
	-90A08-	3M7
	78471-90A00-	3M7
	81105-90A27-	3A8
	81106-90A27-	3A8
	81110-90A28-	3A8
	81111-20360-	3A8
		3B8
	81113-90B04-	3A8
	81114-22391-	3B8
	81121-14320-	3A8
	81131-28050-	3A8
	81150-90A28-	3B8
	81153-90B04-	3B8
	81154-22391-	3A8
P	81240-22070-08	3J8
P	-95A16-	3J8
P	81241-20060-	3J8
	81260-22030-	3J8
P	81270-95A07-	3H8
P	81271-13070-	3H8
P	81272-13070-	3H8
P	81274-95A00-	3H8
P	81510-90A13-	3C8
P	81511-90A13-	3C8
P	81515-90A13-	3C8
P	81520-90A13-	3C8

POWER TRAIN·CHASSIS GROUP (1/2)

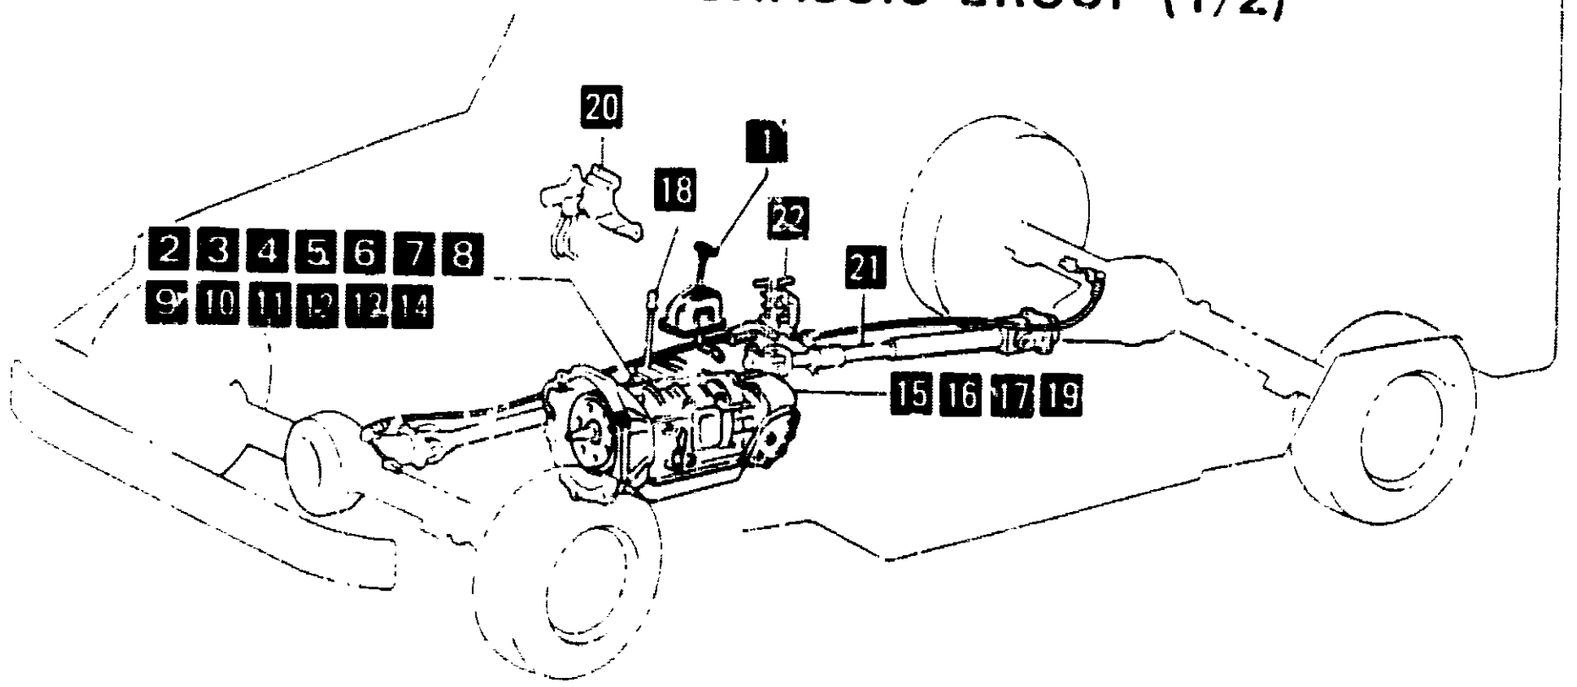

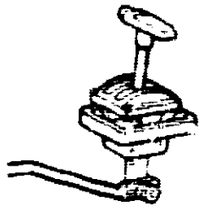2A1 (33-12) 1

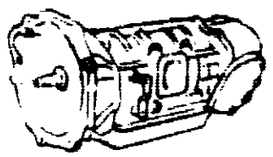Shift Lever & Retainer

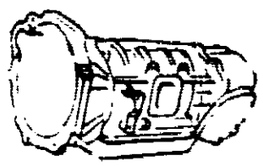2D1 (35-01) 2

Transmission Assy

2G1 (35-03) 3

Transmission Case

2J1 (35-05) 4

Speedometer Driven Gear

2E1 (35-02) 5

Torque Converter & Chain

2K1 (35-06) 6


Overdrive Gear


2A2 (35-07) 7


Multiple Disc Clutch


2D2 (35-08) 8

Planetary Sun Gear

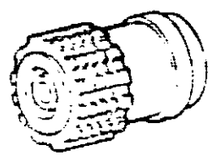2F2 (35-09) 9

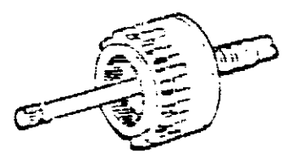Brake No. 3

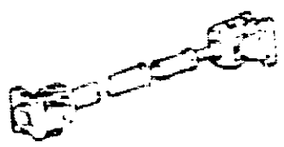
2G2 (35-10) 10

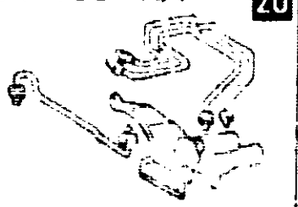Planetary Gear


2K4 (37-01) 21

Propeller Shaft

2J4 (36-16) 20

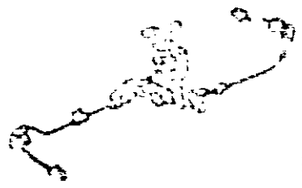Vacuum Shift Valve

2H4 (36-12) 19

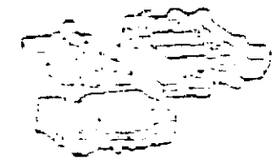
Diaphragm Cylinder


2M5 (42-01) 22

Differential Lock Control

2K2 (35-12) 12

Valve Body

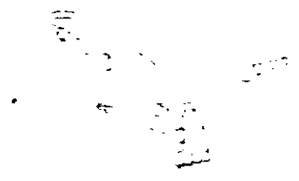2I2 (35-11) 11

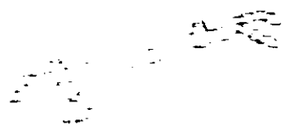Governor

2I3 (35-13) 13

Throttle Link

2F3 (35-14) 14

Oil Cooler & Tube

2M3 (36-08) 15


Transfer Assy

2A4 (36-09) 16


Transfer Case

2C4 (36-10) 17

Transfer Gear

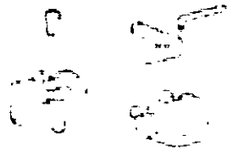
2F4 (36-11) 18

Transfer Lever

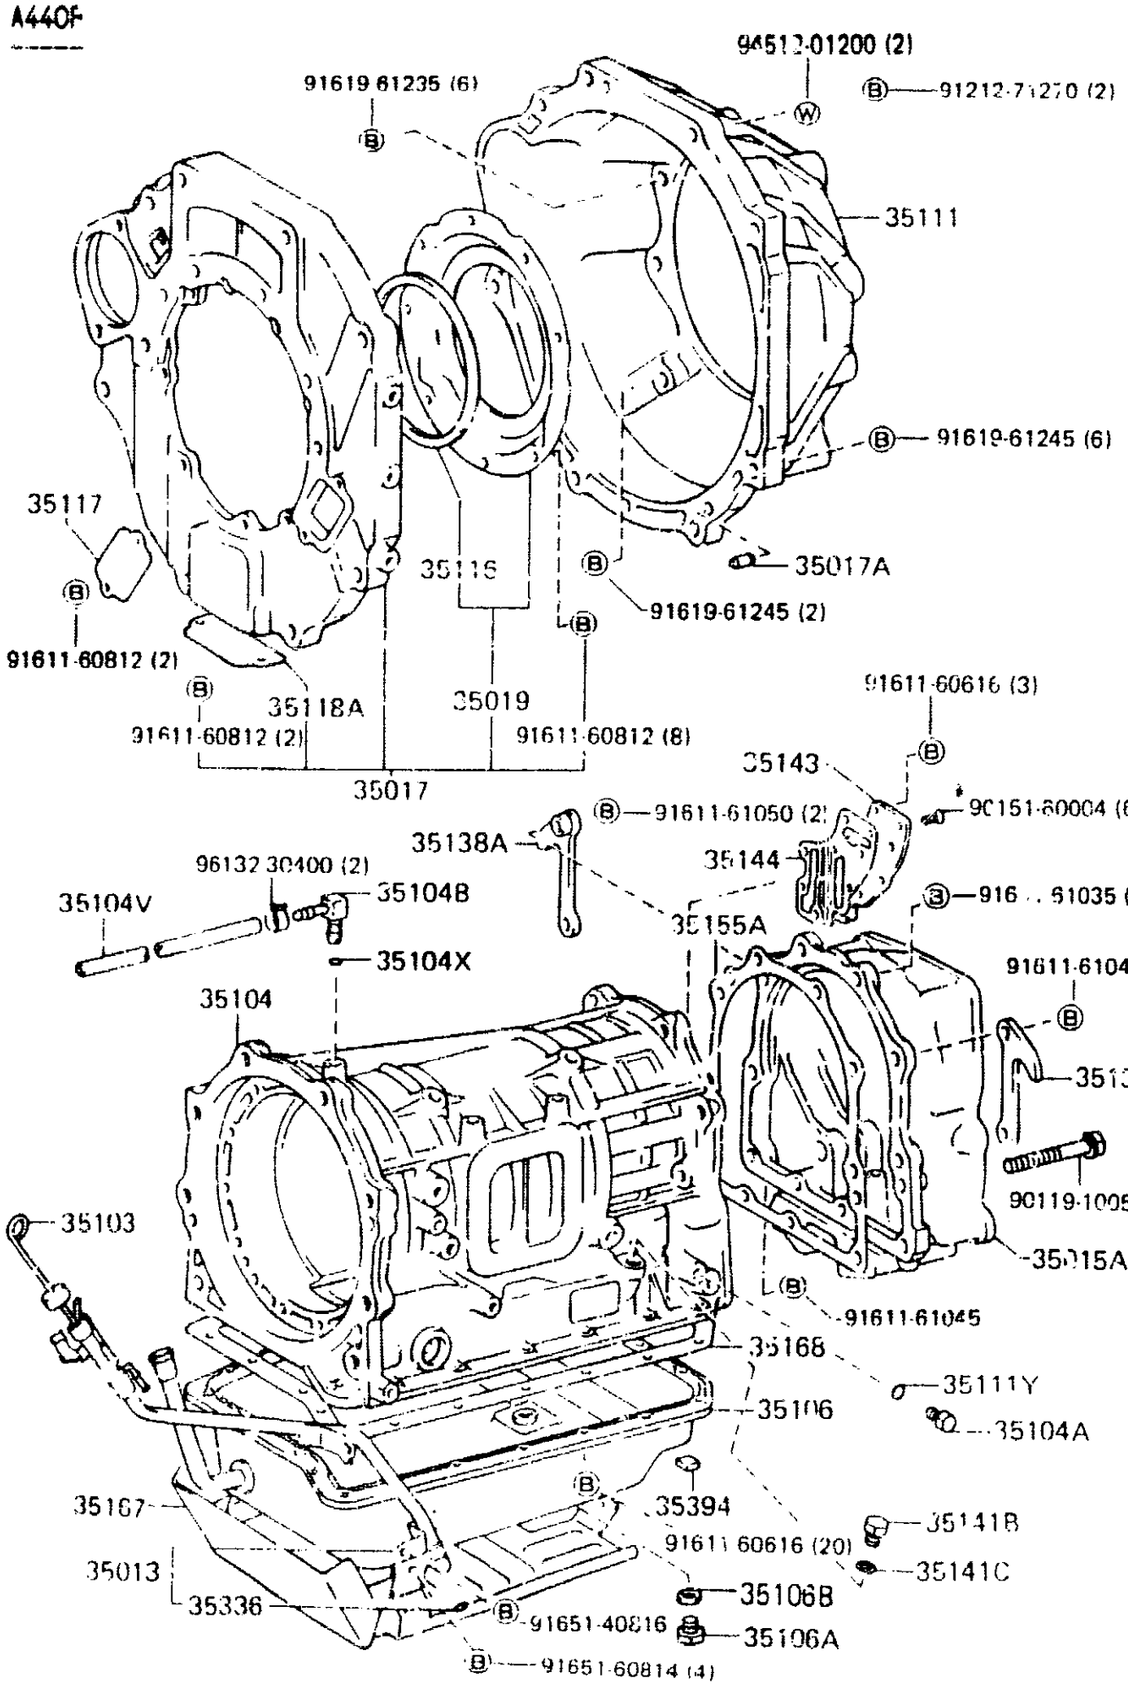
(8708-)
A440F




PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35013	TUBE SUB-ASSY, TRANSMISSION OIL FILLER					
8708-9001	FJ62			35013-60011-	1		
	35015A	ADAPTER SUB-ASSY, TRANSMISSION CASE, REAR					
8708-8712	FJ62			35015-60010-	1		
8712-9001	FJ62			35015-60011-	1		
	35017	ADAPTOR SUB-ASSY, TRANSMISSION HOUSING, FRONT					
8708-9001	FJ62			35017-60010-	1		
	35017A	PIN, STRAIGHT (FOR TRANSMISSION HOUSING ADAPTOR, FRONT)					
8708-9001	FJ62	L=22, OD=10		90250-10192-	2		
	35019	COVER SUB-ASSY, TRANSMISSION CASE DUST					
8708-9001	FJ62			35019-60010-	1		
	35103	GAGE SUB-ASSY, TRANSMISSION OIL LEVEL					
8708-8803	FJ62			35103-60011-	1		
8803-9001	FJ62			35103-60012-	1		
	35104	CASE SUB-ASSY, AUTOMATIC TRANSMISSION					
8708-8909	FJ62		P	35104-60010-	1		
8909-9001	FJ62..WGG		N	35104-60011-	1		
	35104A	PLUG, AUTOMATIC TRANSMISSION CASE					
8708-8909	FJ62		F	90341-08001-	6		
8909-9001	FJ62..WGG		B	〃	7		
	35104B	PLUG, BREATHER, NO.1 (ATM)					
8708-9001	FJ62			90930-03094-	1		

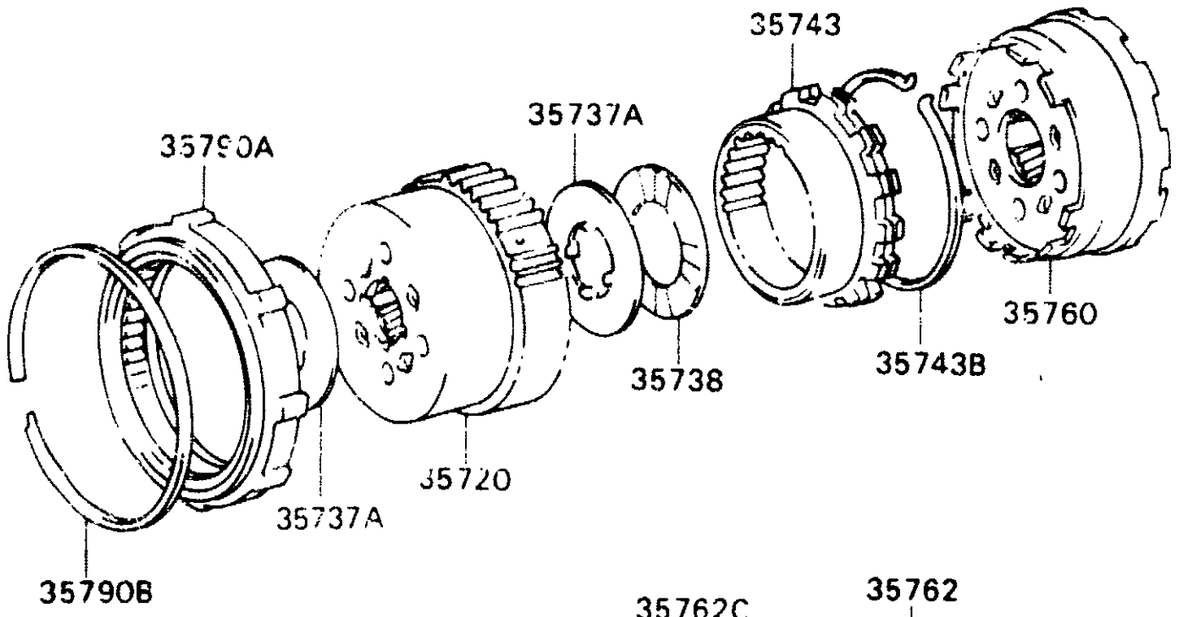(8708-)
A440F



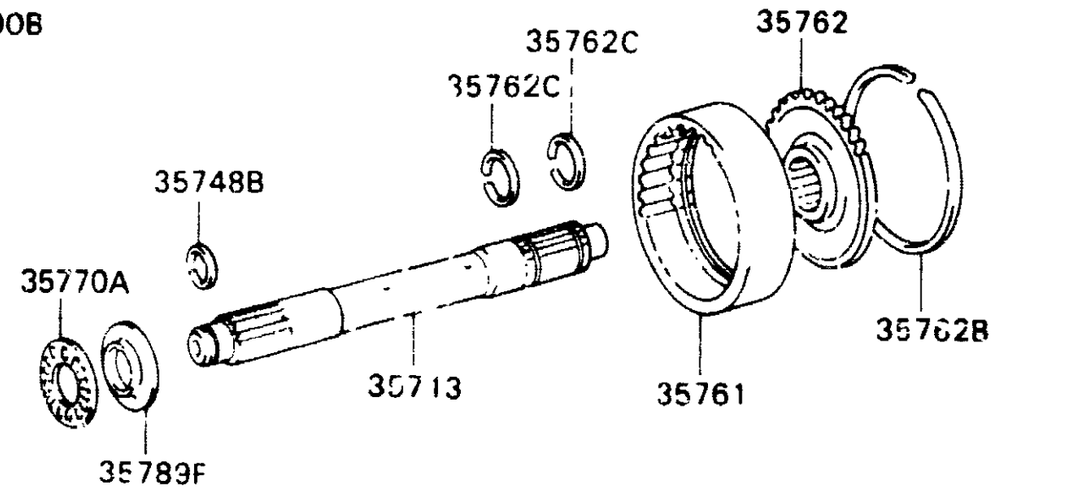

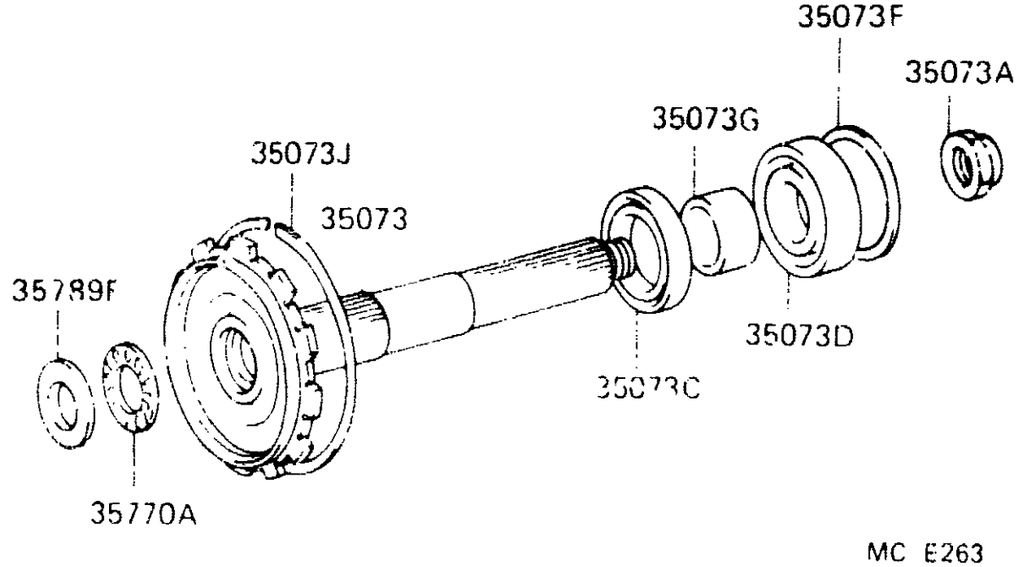

MC E263

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35073	SHAFT SUB-ASSY, OUTPUT					
8708-9001	FJ62			35073-60010-	1		
	35073A	NUT (FOR OUTPUT SHAFT)					
8708-9001	FJ62			90179-26004-	1		
	35073C	BEARING, RADIAL BALL (FOR OUTPUT SHAFT FRONT)					
8708-9001	FJ62			90363-45008-	1		
	35073D	BEARING, RADIAL BALL (FOR OUTPUT SHAFT REAR)					
8708-9001	FJ62			90363-35022-	1		
	35073F	SPACER (FOR OUTPUT SHAFT REAR BEARING)					
8708-9001	FJ62	T=2.3		90560-72001-	1		
8708-9001	FJ62	T=2.4		90560-72002-	1		
8708-9001	FJ62	T=2.5		90560-72003-	1		
	35073G	SPACER (FOR OUTPUT SHAFT					
8708-9001	FJ62			90560-35009-	1		
	35073J	RING, HOLE SNAP (FOR OUTPUT SHAFT)					
8708-9001	FJ62			90521-99042-	1		
	35713	SHAFT, INTERMEDIATE					
8708-9001	FJ62			35713-36011-	1		
	35720	GEAR ASSY, FRONT PLANETARY					
8708-9001	FJ62			35720-60010-	1		
	35737A	WASHER, PLANETARY CARRIER THRUST, NO.1					
8708-9001	FJ62			35737-36010-	2		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35488A	SPRING, COMPRESSION (FOR 2-3 SHIFT TIMING VALVE)					
8708-9001	FJ62			90501-10126-	1		
	35489	VALVE, 3-2 KICK DOWN ORIFICE CONTROL					
8708-9001	FJ62			35489-36010-	1		
	35489A	SPRING (FOR 3-2 KICK DOWN ORIFICE CONTROL VALVE)					
8708-9001	FJ62			90501-08075	1		
	35489F	KEY, STRAIGHT (FOR 3-2 KICK DOWN ORIFICE CONTROL VALVE)					
8708-9001	FJ62			90282-03007-	1		
	35489G	PLUG (FOR 3-2 KICK DOWN ORIFICE CONTROL VALVE)					
8708-9001	FJ62			90339-04017-	1		
	35491A	VALVE, ACCUMULATOR CONTROL, NO.1					
8708-9001	FJ62			35491-36010-	1		
	35491B	SPRING, COMPRESSION (FOR ACCUMULATOR CONTROL VALVE NO.1)					
8708-9001	FJ62			90501-12083-	1		
	35491C	KEY, STRAIGHT (FOR ACCUMULATOR CONTROL VALVE NO.1)					
8708-9001	FJ62			90282-03007-	1		
	35491D	PLUG (FOR ACCUMULATOR CONTROL VALVE NO.1)					
8708-9001	FJ62			90339-04016-	1		
	35492A	VALVE, MANUAL DOWN TIMING					
8708-9001	FJ62			35492-36010-	1		
	35492B	PLUG (FOR MANUAL DOWN TIMING VALVE)					
8708-9001	FJ62			90339-06008-	1		
	35492D	KEY, STRAIGHT (FOR MANUAL DOWN TIMING VALVE)					
8708-9001	FJ62			90282-03006-	1		
	35497	VALVE, 3-4 SHIFT					
8708-9001	FJ62			35497-36010-	1		
	35497A	SPRING, COMPRESSION (FOR 3-4 SHIFT VALVE)					
8708-9001	FJ62			90501-10099-	1		
	35497C	PLUG (FOR 3-4 SHIFT VALVE)					
8708-9001	FJ62			90339-05009-	1		
	35498	VALVE, 3-4 COAST SHIFT					
8708-9001	FJ62			35498-36010-	1		
	35499A	PIN, STRAIGHT (FOR 3-4 SHIFT VALVE)					
8708-9001	FJ62			90282-03006-	1		
	35560	CAM ASSY, THROTTLE VALVE					
8708-9001	FJ62			35560-36011-	1		
	35560A	SHIM (FOR THROTTLE VALVE CAM)					
8708-9001	FJ62			90564-06002-	X		
	35589	SPACER, MANUAL DITENT SPRING					
8708-9001	FJ62			35589-36010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	36313	SHAFT, TRANSFER FRONT DRIVE SHIFT					
8708-9001	FJ62			36313-60070-	1		
	36313R	SPRING, COMPRESSION (FOR TRANSFER FR DRIVE SHIFT SHAFT)					
8708-9001	FJ62			90501-29003-	1		
	36314	SHAFT, TRANSFER HIGH AND LOW SHIFT FORK					
8708-9001	FJ62			36314-60040-	1		
	36324	BUSH, TRANSFER SHIFT LEVER					
8708-9001	FJ62			36324-60050-	2		
	36327	SHAFT, TRANSFER SHIFT LEVER					
8708-9001	FJ62			36327-60031-	1		
	36338	CLEVIS, TRANSFER SHIFT ROD					
8708-9001	FJ62			36338-60030-	1		
	36351A	SPACER (FOR HIGH & LOW SHIFT ROD)					
8708-9001	FJ62			90560-10406-	1		
	36351B	PIN (FOR HIGH & LOW SHIFT ROD)					
8708-9001	FJ62			90240-10157-	1		
	36351C	PIN (FOR HIGH & LOW SHIFT ROD)					
8708-9001	FJ62			90240-08128-	1		
	36351D	GROMMET (FOR HIGH & LOW SHIFT ROD)					
8708-9001	FJ62			90480-17401-	1		
	36360G	LEVER ASSY, TRANSFER HIGH & LOW SHIFT					
8708-9001	FJ62			36360-60220-	1		
	36362	LEVER, TRANSFER HIGH AND LOW SHIFT OUTER					
8708-9001	FJ62			36362-60020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	42306	HOSE SUB-ASSY, REAR AXLE BREATHER					
8708-9001	FJ62			42306-60051-	1		
	42306A	UNION (FOR REAR AXLE BREATHER HOUSE)					
8708-9001	FJ62			90404-10018-	1		
	42306C	CLIP, HOSE (FOR REAR AXLE BREATHER HOSE)					
8708-9001	FJ62			96132-30600-	1		
	42306D	CLAMP (FOR REAR AXLE BRATHER HOSE)					
8708-9001	FJ62			90461-10558-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		41343B PIN, FRONT DIFFERENTIAL PINION SHAFT CONTINUED						
B	8911-9001	FJ62..WGG			41343-60030-	1		
		41351F WASHER, FRONT DIFFERENTIAL PINION THRUST						
	8708-8808	FJ62			41351-35011-	2		
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		〃	4		
B	8808-9001	FJ62..WGG			41351-25010-	2		
		41361C LOCK, FRONT DIFFERENTIAL BEARING ADJUSTING NUT						
B	8708-9001	FJ62			41316-30010-	1		
		41361F WASHER, FRONT DIFFERENTIAL SIDE GEAR THRUST, NO.1						
	8708-9001	FJ62	T=1.60		41361-60010-	2		
	8708-9001	FJ62	T=1.75		41361-60020-	2		
	8708-9001	FJ62	T=1.90		41361-60030-	2		
	8708-9001	FJ62	T=2.05		41361-60040-	2		
		41375A HOLDER, FRONT DIFFERENTIAL PINION SHAFT						
	8708-9001	FJ62			41375-60010-	1		
		41451A FORK, FRONT DIFFERENTIAL LOCK SHIFT						
	8708-9001	FJ62			41451-60010-	1		
		41453A SLEEVE, FRONT DIFFERENTIAL LOCK						
P	8708-8912	FJ62			41453-60010-	1		
S	8912-9001	FJ62..WGG			41453-60011-	1		
		41456B COVER, FRONT DIFFERENTIAL LOCK						
	8708-9001	FJ62			41456-60010-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	41460H CYLINDER ASSY, FRONT DIFFERENTIAL LOCK						
8708-9001	FJ62			41460-60010-	1		
	41460K BALL (FOR FRONT DIFFERENTIAL LOCK CYLINDER)						
8708-9001	FJ62			90360-10003-	1		
	41460L RING, O (FOR FRONT DIFFERENTIAL LOCK CYLINDER)						
8708-9001	FJ62			96711-24023-	1		
	41460M BOLT, (FOR FRONT DIFFERENTIAL LOCK CYLINDER SET)						
8708-9001	FJ62			90105-08114-	4		
	41463C BOLT (FOR FRONT DIFFERENTIAL LOCK SHIFT FORK SHAFT SET)						
8708-9001	FJ62			90105-06052-	1		
	41464D LEVER, FRONT DIFFERENTIAL LOCK CYLINDER						
8708-9001	FJ62			41464-60010-	1		
	41464E BUSH (FOR FRONT DIFFERENTIAL LOCK CYLINDER)						
8708-9001	FJ62			90386-09009-	4		
	41465H RETAINER, FRONT DIFFERENTIAL LOCK SPRING						
8708-9001	FJ62			41465-60010-	1		
	41465J PLUG, (FOR FRONT DIFFERENTIAL LOCK CYLINDER)						
8708-9001	FJ62			90341-26001-	1		
	41465K GASKET (FOR FRONT DIFFERENTIAL LOCK CYLINDER)						
8708-9001	FJ62			90430-26002-	1		

FIG. 45-03 POWER STEERING TUBE

2G7

791430M-01203

(o708-)

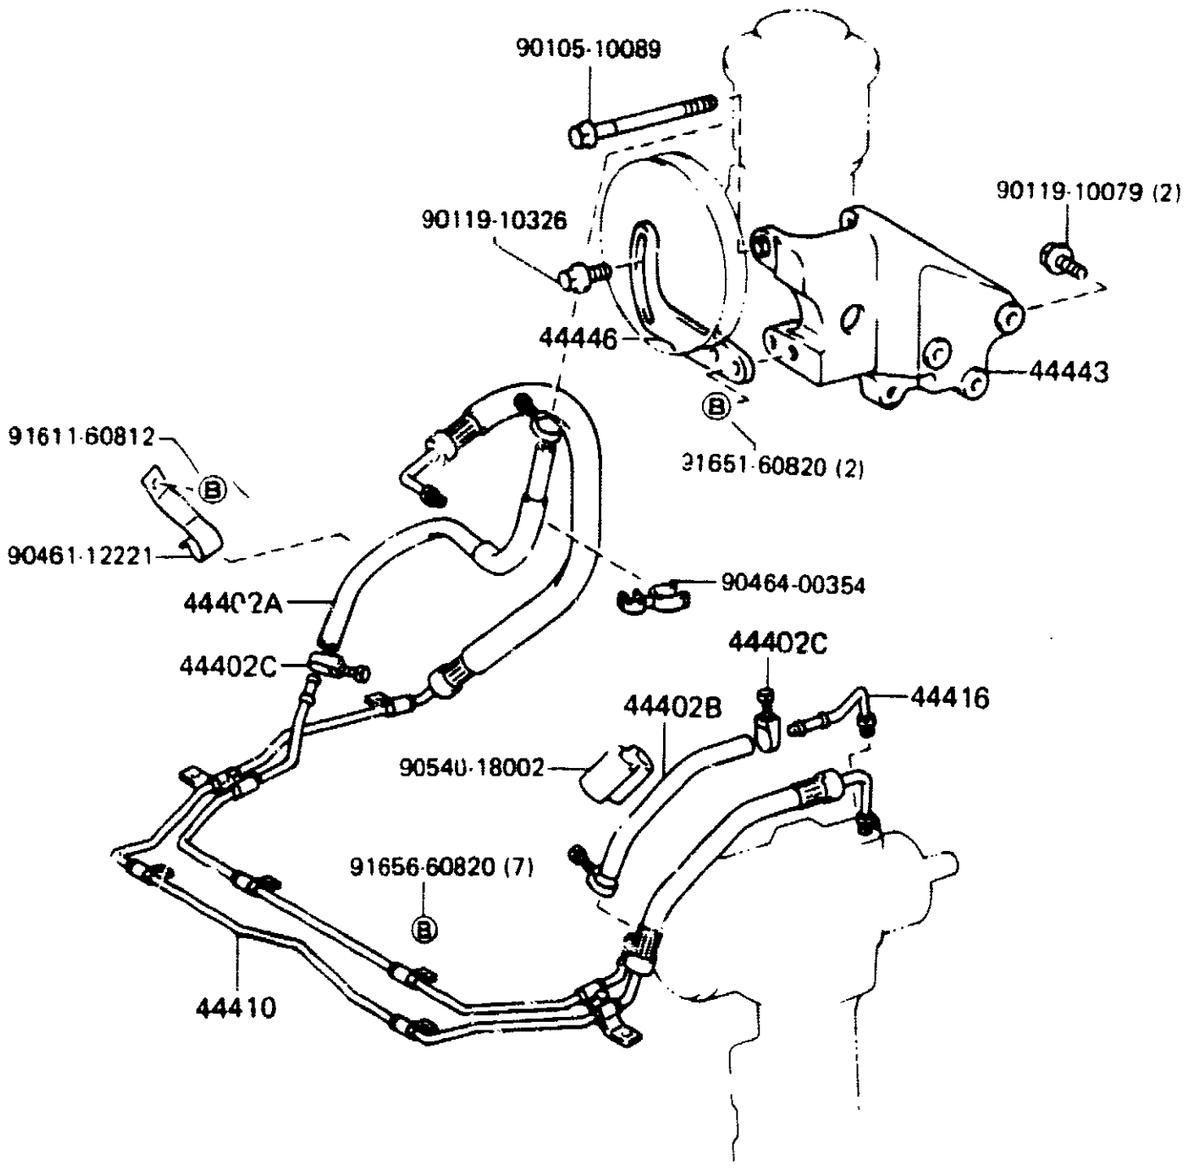

MC E389-D


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	44402A	HOSE, POWER STEERING OIL COOLER INLET					
8708-9001	FJ62			90445-18090-	1		
	44402B	HOSE, POWER STEERING OIL COOLER OUTLET					
8708-9001	FJ62			90445-18089-	1		
	44402C	CLAMP, POWER STEERING OIL COOLER INLET HOSE					
8708-9001	FJ62			90460-01001-	4		
	44410	TUBE ASSY, PRESSURE FEED					
8708-9001	FJ62			44410-60170-	1		
	44416	TUBE, RETURN (FOR STEERING GEAR OUTLET)					
8708-9001	FJ62			44416-60061-	1		
	44443	BRACKET, PUMP					
8708-9001	FJ62			44443-60050-	1		
	44446	STRUT, ADJUSTING					
8708-9001	FJ62			44446-60020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	04443	BOOSTER KIT, BRAKE					
8708-9001	FJ62			04443-60330-	1		
	44605	PLATE & SEAL SUB-ASSY, BOOSTER					
8708-9001	FJ62			44605-30350-	1		
	44608	PUSH ROD SUB-ASSY, BOOSTER					
8708-9001	FJ62			44608-17090-	1		
	44609D	PLATE & RETAINER SUB-ASSY, BOOSTER					
8708-9001	FJ62			44609-17090-	1		
	44610	BOOSTER ASSY, BRAKE					
8708-9001	FJ62			44610-60530-	1		
	44624J	PLATE, BOOSTER CENTER					
8708-9001	FJ62			44624-20810-	1		
	44628A	BODY, BOOSTER CENTER					
8708-9001	FJ62			44628-20810-	1		
	44632B	HUB, BOOSTER REACTION DISK					
8708-9001	FJ62			44632-27290-	1		
	44633	KEY, BOOSTER VALVE PLUNGER					
8708-9001	FJ62			44633-20811-	1		
	44637A	PLATE, BOOSTER DIAPHRAGM					
8708-9001	FJ62			44637-20810-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	44645	RETAINER, BOOSTER PUSH ROD SEAL					
8708-9001	FJ62			44645-10080-	1		
	44651B	NUT, BOOSTER					
8708-9001	FJ62			44651-20810-	1		
	44673A	BODY, BOOSTER VALVE					
8708-9001	FJ62			44673-20810-	1		
	44730C	CLIP (FOR VACUUM HOSE)					
8708-9001	FJ62			90467-16002-	4		
	44730F	UNION, VACUUM HOSE (FOR MANIFOLD SIDE)					
8708-9001	FJ62			90404-51319-	1		
	44730P	VALVE ASSY, VACUUM CHECK, NO.1					
8708-9001	FJ62			44730-24020-	1		
	44758	BRACKET, VACUUM CHECK VALVE					
8708-9001	FJ62			44758-60030-	1		
	44772B	HOSE, CHECK VALVE TO BRAKE BOOSTER					
8708-9001	FJ62			44772-60050-	1		
	44773F	HOSE, UNION TO CHECK VALVE					
8708-9001	FJ62			44773-60030-	1		
	44785	GASKET, BRAKE BOOSTER					
8708-9001	FJ62			44785-35020-	1		

(8708-)WGG


ILLUST.NO. 10F3

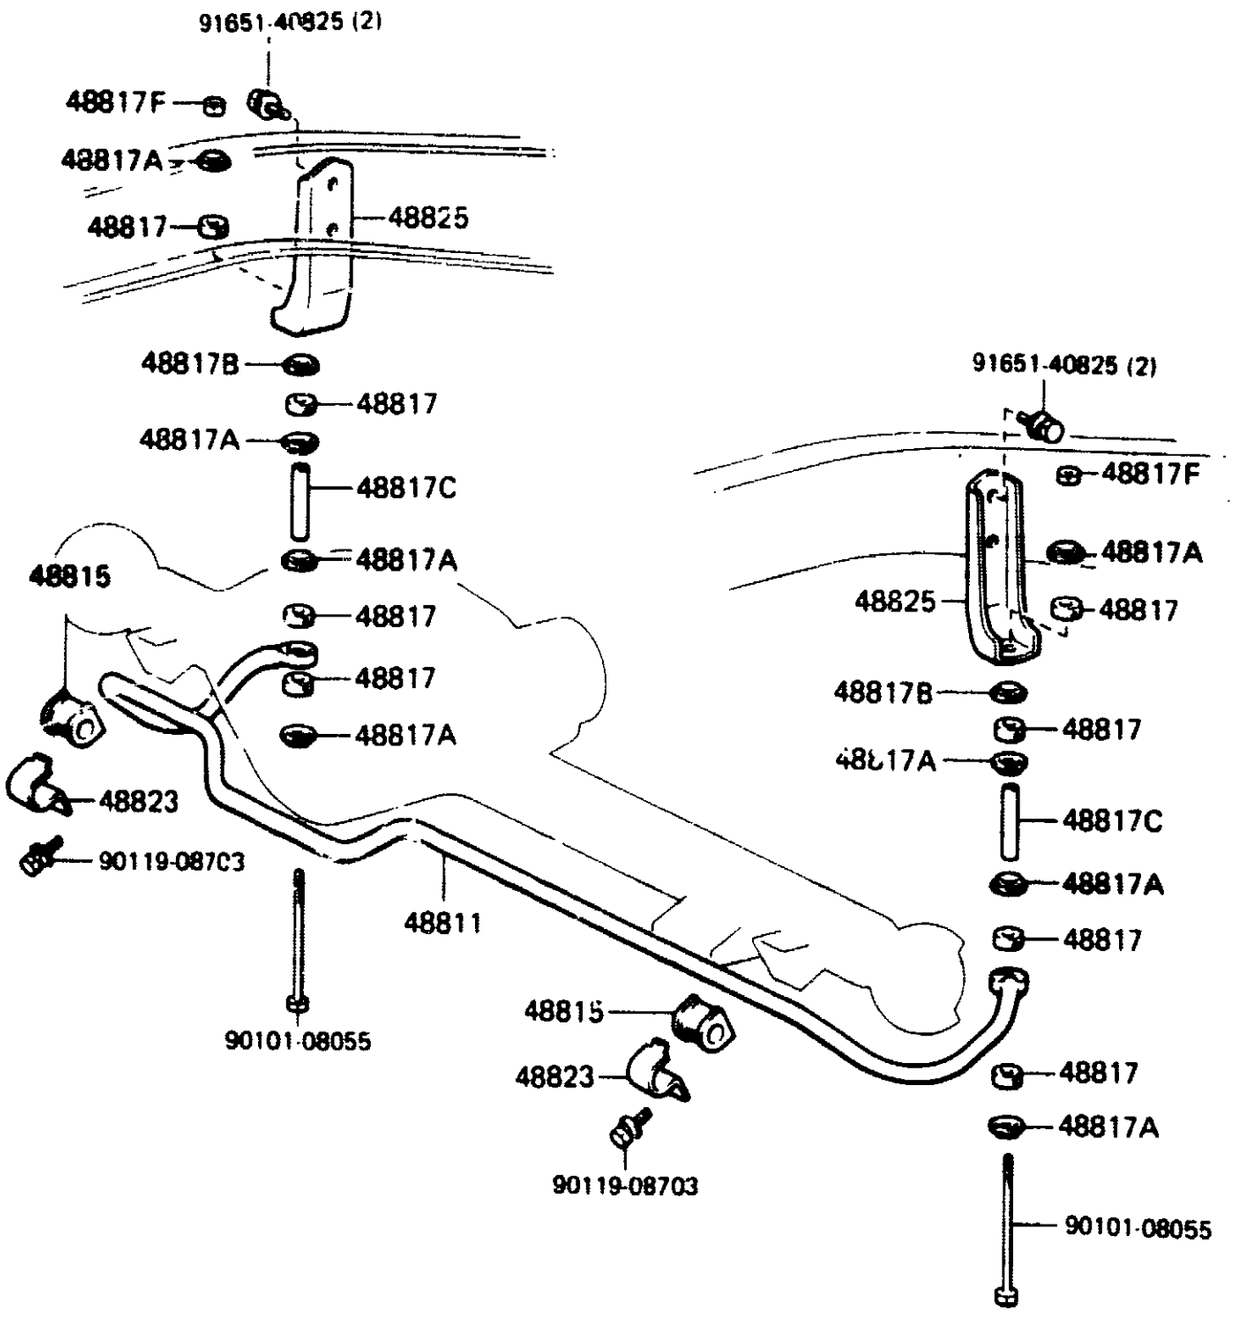

MC E328-C

(8708-)

ILLUST.NO. 20F3

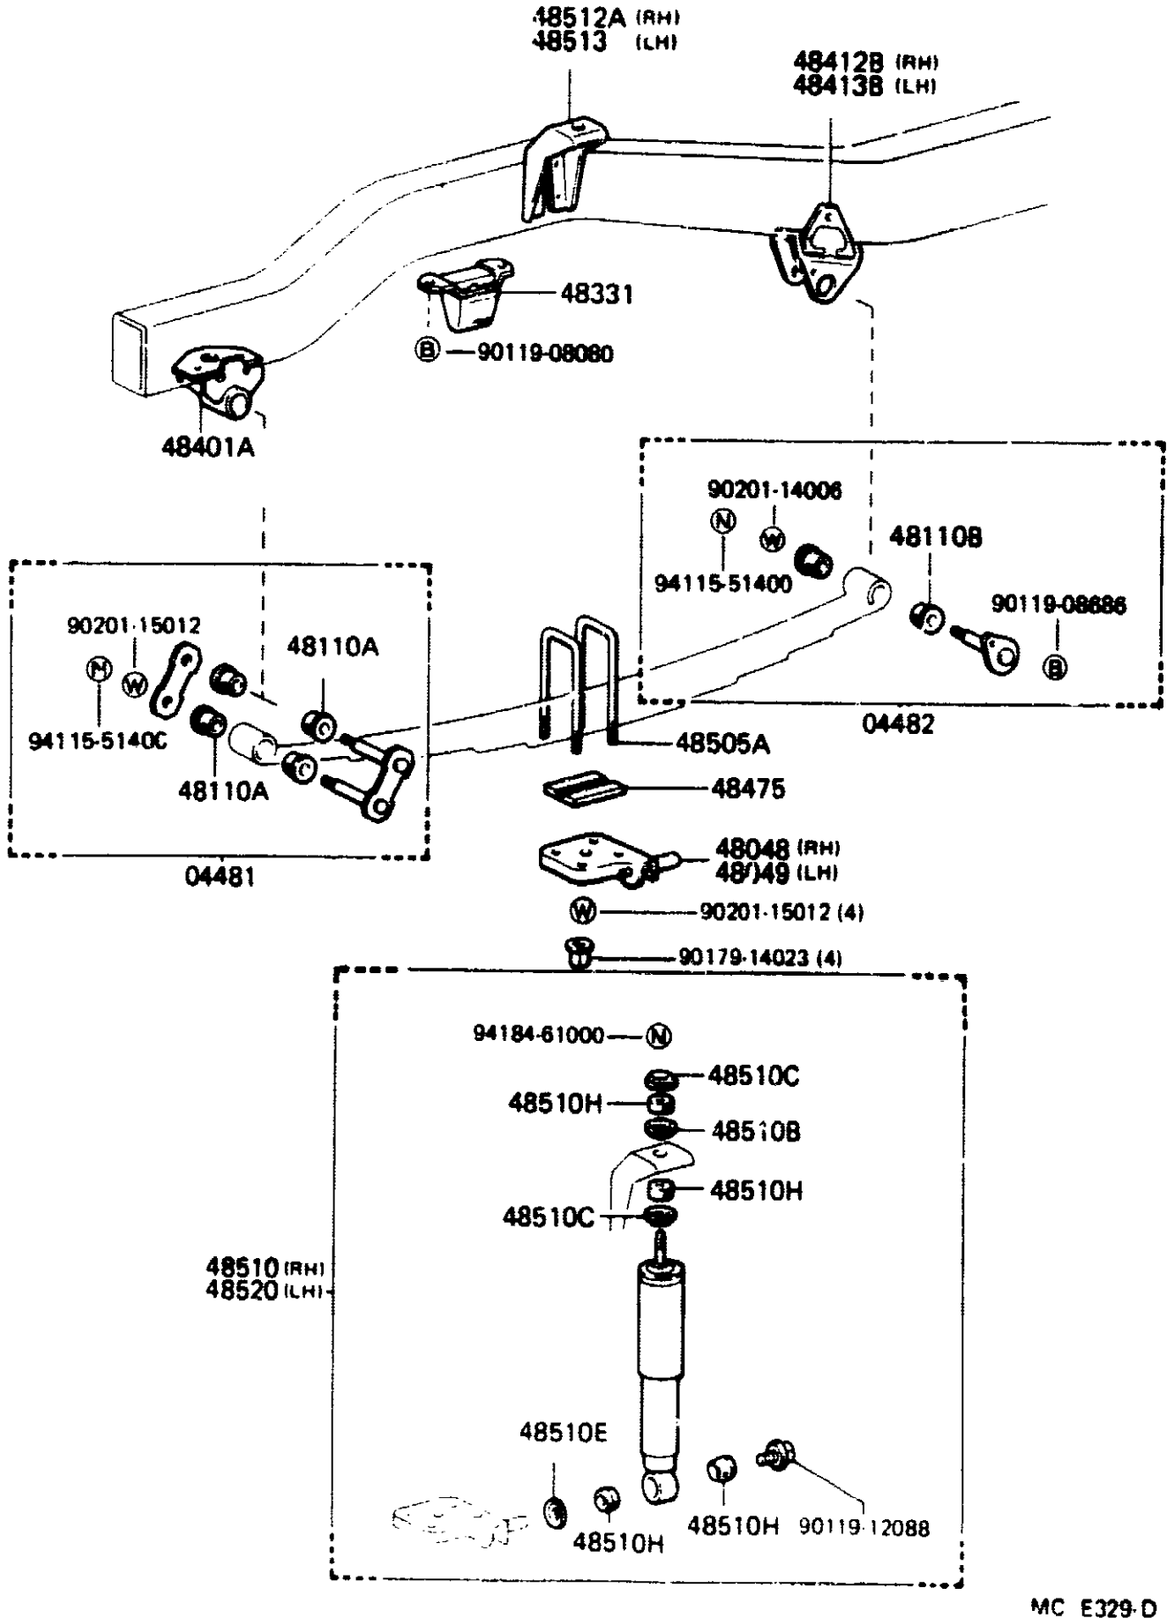

MC E329-D

	PART NUMBER	LOCATION
P	81521-90A13-	3C8
P	81550-90A11-	3F8
P	81551-90A00-	3F8
P	81552-90A00-	3F8
P	81554-90A12-	3F8
P	81557-90A00-	3F8
P		3G8
P	81558-90A00	3F8
P		3G8
P	81560-90A11-	3F8
P	81561-90A00-	3F8
P	81562-90A00-	3F8
P	81564-90A12-	3F8
P	81610-90A03-	3D8
P	81611-90A00-	3D8
P	81612-90A00-	3D8
P	81615-90A03-	3D8
P	81620-90A03-	3D8
P	81621-90A00-	3D8
P	81730-14110-	3E8
A	-90A05-	3E8
P	81731-14110-	3E8
P	81740-14110-	3E8
A	-90A05-	3E8
P	81741-14110-	3E8
P	81750-91255-	3I8
P	81751-14030-	3I8
P	81754-91255-	3I8
P	81755-20060-	3I8
	81850-90A14-	3E9
	-90A15-	3E9
	-90A25-	3E9
	-90A31-	3E9
	-90A35-	3E9
	81930-90A10-	3E9
	-90A15-	3E9
	81980-16010-	3H9
	82121-90A03-	3M8
	-90A04-	3M8
	82122-90A01-	3K8
	82124-90A01-	3M8
	82125-90A09-	3M8
B	82131-90G89-	3M8
	-90G98-	3M8
	82132-90A15-	3M8
	82141-90A20-	3M8
	-90A21-	3M8
	82151-90A05-	3A9
		3M8
	-90A08-	3M8
	-90A10-	3A9
	-90A13-	3A9
	82152-90A05-	3A9
	-90A06-	3A9
	82153-90A01-	3A9
	82154-90A03-	3A9
	82155-90A02-	3A9
	82161-90A40-	3A9
	82162-90A38-	3A9
	82163-90A21-	3A9
	82164-90A03-	3A9
	82166-90A00-	3A9
	82171-90A10-	3A9
	82173-90A00-	3A9

	PART NUMBER	LOCATION
	82181-90A00-	3A9
	82182-90A02-	3A9
	82183-90A01-	3A9
	82184-90A03-	3A9
	82185-90A05-	3A9
	82187-90A00-	3A9
	82282-90A04-	3B9
	-90A05-	3B9
	82291-90A02-	3B9
	82345-12050-	3B9
	-32020-	3B9
	82616-12010-	3H9
	82650-12020-	3H9
	-20011-	3H9
	82670-90K00-	3B9
	82683-90A20-	3H9
	-90A21-	3H9
	82821-12150-	3B9
	83101-14040-	3D9
	-20040-	3D9
	-36010-	3D9
	83110-90A46-	3D9
	-90A47-	3D9
	83132-90A04-	3D9
	83134-90A06-	3D9
	83138-90A00-	3D9
	83145-90A01-	3D9
	-90A02-	3D9
	83243-90A03-	3D9
	83244-90A02-	3D9
	83245-90A03-	3D9
	83246-90A05-	3D9
	83247-90A05-	3D9
	83270-90A10-	3D9
	-90A15-	3D9
	83320-69015-	3H9
	83361-20030-	3I9
	83420-20020-	3I9
	83520-60010-	3I9
	83710-90A06-	3D9
	-90A13-	3D9
	-90A20-	3D9
	83910-90A11-	3D9
	84112-69295-	3I9
	84118-90A00-	3I9
	84119-90A01-	3I9
	84140-35080-	3I9
	84222-60021-	3I9
	-60030-	3I9
	-60040-	3I9
	-60071-	3I9
	84230-22051-	3I9
	84231-28010-	3I9
	84242-90A00-	3I9
	84310-60700-	3I9
	84312-20011-	3I9
	84332-69055-	3I9
	84340-22072-	3I9
	84380-20010-	3I9
	84450-60150-	3I9
	84460-22010-	2E8
	84540-60020-	3I9
	84652-69345-	3I9
	84653-32020-	3J9


	PART NUMBER	LOCATION
	84722-60070-	3J9
P	84730-90A00-	3J9
N	-90A02-	3J9
	84732-90A00-	3J9
	84760-90A01-	3J9
	84790-90A09-	3J9
P	84810-90A02-03	3J9
P	-90A02-06	3J9
P	-90A03-03	3J9
P	-90A03-06	3J9
P	84820-90A08-03	3J9
P	-90A08-06	3J9
	84870-14060-	3J9
	-22040-	3J9
	-90A00-	3J9
	84956-60030-	3J9
	85010-90A00-	3C10
P	85031-30020-	3G10
	85035-90A02-	3F10
P	-90A03-	3G10
	85120-90A35-	3A10
	85160-90A07-	3A10
A	85164-90A02-	3A10
A	85165-90A01-	3A10
	85174-12320-	3C10
	85178-12320-	3C10
	-90A00-	3A10
	85190-90A02-	3A10
	-90A06-	3C10
	85192-14010-	3A10
	85195-95700-	3C10
	85210-90A01-	3A10
	85220-16270-	3A10
	-16340-	3A10
	-90A02-	3C10
	85221-30100-	3A10
	-90A02-	3C10
	85247-90A01-	3B10
P	85271-90A00-	3G10
P	-90A01-	3G10
P	-90A02-	3G10
	85276-14010-	3G10
	85310-1408 -	3D10
	-22070-	3G10
	-22080-	3F10
	85330-90A04-	3G10
	-90A07-	3D10
	-90A08-	3F10
	85332-20050-	3F10
	-90A00-	3G10
	-90A01-	3D10
	85333-20020-	3D10
	-60010-	3D10
	85336-10010-	3G10
	85338-22020-	1L2
	85341-90A05-	3D10
	-90A08-	3D10
	85348-89101-	3D10
	85349-89122-	3F10
P	85352-12010-	3G10
	85355-14481-	3F10
	-20200-	3F10
	85421-13070-	3H10
	85440-60120-	3J9

	PART NUMBER	LOCATION
	85450-90A04-	3I10
	-90A06-	3I10
	85460-90A02-	3I10
	85470-90A02-	3I10
	85480-90A02-	3I10
	85500-90A07-	3J9
	85520-14030-	3J9
	85710-90A00-	3I10
	-90A01-	3I10
	85720-90A00-	3I10
	-90A01-	3I10
	85910-14020-	3L9
	85913-30020-	3J9
	85915-60010-	3L9
	85927-60040-	3K9
	85930-90A00-	3K9
	85940-90A09-	3K9
	-90A10-	3K9
	85991-22020-	3K9
	85999-12050-	3K9
	-89101-	3K9
	86120-20680-	3K10
	-32130-	3K10
	-32211-	3K10
	-32340-	3K10
	-32370-	3K10
	-32390-	3K10
	-90A18-	3K10
	86128-17150-	3K10
B	-17190-	3K10
	-20020-	3K10
	-20040-	3K10
A	-22690-	3K10
A	-22710-	3K10
S	-28140-	3K10
S	-28160-	3K10
	-32190-	3K10
B	-32210-	3K10
	86151-90K01-	3M10
	86160-90A05-	3M10
	-90A06-	3M10
	-90K02-	3M10
	86209-90A00-	3M10
	86211-90A06-	3K10
	86212-90A03-	3K10
	86260-12180-	3K10
	-20170-	3K10
	-30250-	3K10
	86269-90K00-	3M10
	-90K01-	3M10
	86300-90A17-	3A11
	-90A25-	3A11
	86510-22120-	3B11
	86520-22120-	3B11
	86995-90A02-	3E9
	87104-90A00-	3F11
	-90K03-	3F11
	87105-14020-	3F11
	-87002-	3F11
	87107-90A04-	3F11
S	-90A06-	3F11
	87110-90A02-	3F11
	87126-16010-	3F11
	-90A01-	3F11

	PART NUMBER	LOCATION
	87130-90A01-	3F11
	87136-22030-	3F11
	-90K02-	3F11
	87150-90A14-	3F11
	87201-90A02-	3J11
	-90A04-	3J11
	87208-90A15-	3L11
	-90K06-	3L11
	87211-90A01-	3J11
	87212-90A00-	3F11
	87240-90A00-	3L11
	-90A02-	3F11
	87245-90A00-	3L11
	-90A27-	3L11
	-90A28-	3L11
	-90A29-	3L11
	-90A30-	3L11
	-90A40-	3L11
	-90A41-	3L11
	-90A50-	3L11
	-90K36-	3L11
	-90K53-	3L11
	87248-90A01-	3F11
	-90A03-	3F11
	-90A22-	3L11
	-90A24-	3L11
	-90A25-	3L11
	87286-90A01-	3J11
P	87810-90A03-	3C11
P	87828-90A00-	3C11
P	-90A01-	3C11
P	87834-14011-28	3C11
P	87910-90A18-	3C11
P	-90A19-	3C11
N	-90A20-	3C11
P	87911-90A05-	3C11
P		3D11
P	87940-90A09-	3D11
P	-90A11-	3C11
N	-90A15-	3D11
	88320-60151-	3B12
B	-60280-	3B12
	88321-14011-	3B12
B	-14021-	3B12
	88322-14011-	3B12
B	-14020-	3B12
	88330-12030-	3C12
	-12050-	3B12
B	-14010-	3C12
B	-14020-	3C12
	88341-14010-	3B12
B	-14020-	3B12
	88342-14010-	3B12
B	-14020-	3B12
	88343-14011-	3C12
B	-14020-	3C12
	88344-14011-	3C12
	-14020-	3C12
B	88356-12010-	3C12
B	88360-14030-	3C12
	-40010-	3C12
	88371-60101-	3C12
N	-60170-	3C12
P	88374-12020-	3C12

	PART NUMBER	LOCATION
P	88375-20010-	3C12
P	-30270-	3C12
P	88376-22010-	3C12
P	-22020-	3C12
	88403-12030-	3C12
B	-14011-	3C12
	88410-22080-	3C12
B	-60120-	3C12
	88411-14050-	3B12
B	-60020-	3B12
	88412-22030-	3B12
B	-28030-	3B12
	88431-60040-	3C12
	-60100-	3C12
	88440-35010-	3C12
	88460-90A14-	3M11
	88469-22010-	3M11
	88470-14010-	3M11
	88472-90A01-	3M11
	88482-90A00-	3G11
P	88501-90A07-	3G11
P	88510-60A04-	3G11
N	-90A25-	3G11
	88515-87004-	3G11
P	88539-90A00-	3G11
	88578-90A02-	3M11
P	88605-90A09-	3G11
	88610-90A07-	3G11
P	88626-90A01-	3G11
N	-90A02-	3H11
	88630-14010-	3J9
		3K9
	88645-30250-	3H11
	88648-90A00-	3H11
	88650-90A03-	3H11
	88711-90A09-	3M11
	88712-90A09-	3M11
	88716-90A27-	3H11
	-90A43-	3M11
	88721-90A07-	3M11
	-90A08-	3M11
	88723-12010-	3M11
	89412-12010-	3K9
	89422-20010-	3L9
	-30020-	3L9
	89423-60020-	3K9
	89428-14070-	3L9
	-36010-	3K9
	89437-60010-	3K9
B	89452-14050-	3L9
P	-28030-	3L9
	89462-20010-	3L9
	-20040-	3L9
	89465-69015-	3K9
A	89466-20020-	3K9
A	-30010-	3K9
	89530-60020-	3K9
	89620-14410-	3K9
	89661-60010-	3L9
	-60011-	3L9
	-60020-	3L9
	-60021-	3L9
	89667-60010-	3M9
	89668-60010-	3M9

POWER TRAIN·CHASSIS GROUP (2/2)

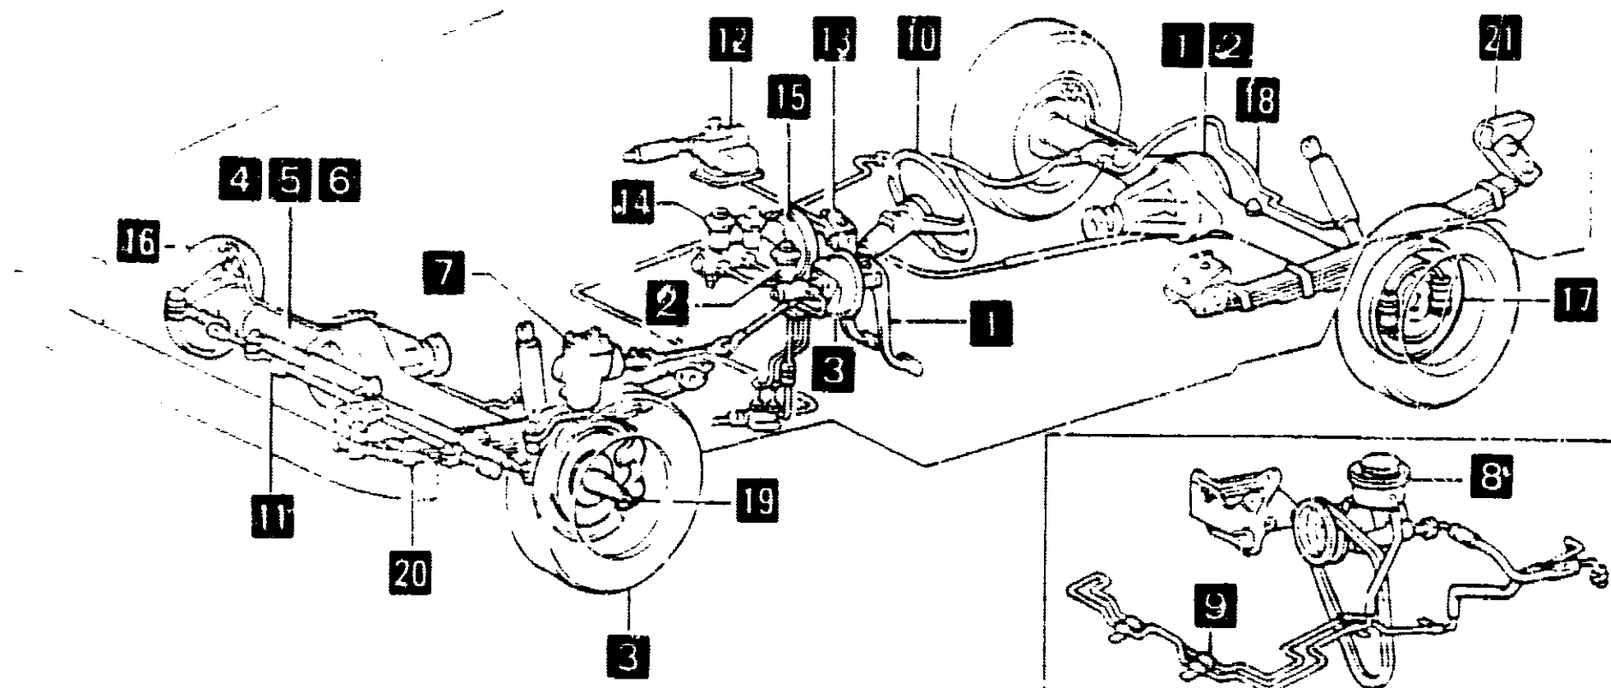

2M4 (41-01) 1

Rear Axle Housing

2H5 (41-02) 2

Rear Axle Shaft & Hub

2K5 (41-03) 3

Disc Wheel & Cap

2C6 (43-01) 4


Front Axle Housing

2C6 (43-02) 5


Drive Shaft

2K6 (43-03) 6

Front Axle Hub

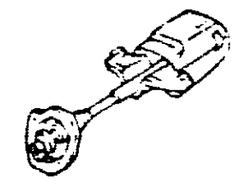
2M6 (45-01) 7

Steering Column & Shaft

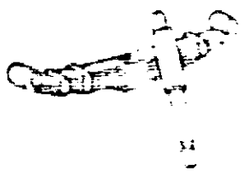
21

2K9 (48-04) 21

Rear Spring

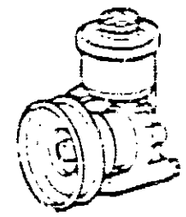2G9 (48-03) 20

Front Spring

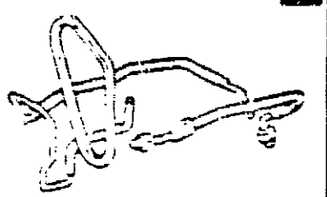2D7 (45-02) 8

Vane Pump & Reservoir

2G7 (45-03) 9

Oil Cooler & Tube

2H7 (45-04) 10


Steering Wheel

2E9 (48-02) 19

Front Axle Arm

2I7 (45-05) 11

Steering Gear & Link

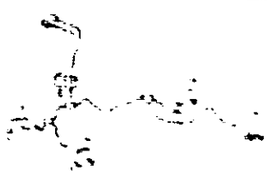2M8 (47-06) 18

Rear Disc Brake Caliper

2J8 (47-06) 17

Rear Backing Plate

2H8 (47-05) 16

Front Disc Brake Caliper

2F8 (47-03) 15


Brake Booster

2D8 (47-02) 14

Brake Master Cylinder

2C8 (47-01) 13

Brake Pedal & Bracket

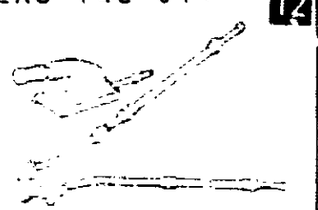2A8 (46-01) 12

Parking Brake & Cable

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		35104V	HOSE (FOR BREATHER PLUG)					
	8708-9001	FJ62			90445-11072-	1		
		35104X	RING, O (FOR BREATHER PLUG)					
	8708-9001	FJ62			90301-06005-	1		
		35106	PAN SUB-ASSY, AUTOMATIC TRANSMISSION OIL					
	8708-8803	FJ62			* 35106-60041-	1		
					(35106-60042-)	1		
	8803-8906	FJ62			35106-60042-	1		
N	8906-9001	FJ62..WGG			35106-60043-	1		
		35106A	PLUG SUB-ASSY, DRAIN (ATM)					
	8708-9001	FJ62			90341-18057-	1		
		35106B	GASKET, DRAIN PLUG (ATM)					
	8708-9001	FJ62			12151-10010-	1		
		35111	HOUSING, AUTOMATIC TRANSMISSION					
	8708-9001	FJ62			35111-60010-	1		
		35111Y	RING, O (FOR AUTOMATIC TRANSMISSION CASE)					
P	8708-8909	FJ62			90301-06196-	6		
B	8909-9001	FJ62..WGG			"	7		
		35116	SEAL, TRANSMISSION CASE DUST					
	8708-9001	FJ62			35116-60010-	1		
		35117	COVER, ADAPTOR, NO.1					
	8708-9001	FJ62			35117-60010-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		35118A	COVER, ADAPTER, NO.2					
	8708-9001	FJ62			35118-60010-	1		
		35136	HANGER, TRANSMISSION, NO.1					
	8708-9001	FJ62			35136-60010-	1		
		35133A	HANGER, TRANSMISSION, NO.2					
	8708-8712	FJ62			35133-60010-	1		
	8712-9001	FJ62			35136-60010-	1		
		35141B	PLUG (FOR AUTOMATIC TRANSMISSION CASE)					
	8708-9001	FJ62			90341-16010-	1		
		35141C	WASHER, PLATE (FOR AUTOMATIC TRANSMISSION CASE)					
	8708-9001	FJ62			90201-15013-	1		
		35143	COVER, TRANSMISSION CASE, REAR					
	8708-9001	FJ62			35143-36010-	1		
		35144	GASKET, TRANSMISSION CASE REAR COVER					
	8708-9001	FJ62			35144-36010-	1		
		35155A	GASKET, TRANSMISSION CASE ADPTOR					
	8708-9001	FJ62			35182-36010-	1		
		35167	PROTECTOR, TRANSMISSION OIL PAL					
P	8708-8906	FJ62			* 35167-60011-	1		
					(35167-60012-)	1		
N	8906-9001	FJ62..WGG			35167-60012-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35738	WASHER, PLANETARY CARRIER THRUST, NO.2					
8708-9001	FJ62			35738-60010-	1		
	35743	GEAR, FRONT PLANETARY RING					
8708-9001	FJ62			35743-60010-	1		
	35743B	RING, HOLE SNAP (FOR FRONT PLANETARY RING GEAR)					
8708-8712	FJ62			90521-99040-	1		
8712-9001	FJ62			90521-99018-	1		
	35748B	RING, INTERMEDIATE SHAFT OIL SEAL					
8708-9001	FJ62			35748-36010-	1		
	35760	GEAR ASSY, REAR PLANETARY					
8708-9001	FJ62			35760-60010-	1		
	35761	GEAR, REAR PLANETARY RING					
8708-9001	FJ62			35761-60010-	1		
	35762	FLANGE, REAR PLANETARY RING GEAR					
8708-9001	FJ62			35762-60010-	1		
	35762B	RING, HOLE SNAP (FOR REAR PLANETARY RING GEAR FLANGE)					
8708-9001	FJ62			90521-99041-	1		
	35762C	RING, SHAFT SNAP (FOR REAR PLANETARY RING GEAR)					
8708-9001	FJ62			90520-22013-	2		
	35770A	BEARING, THRUST (FOR OUTPUT SHAFT)					
8708-9001	FJ62			90374-34001-	2		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35789F	RACE, THRUST BEARING (FOR REAR PLANETARY FLANGE)					
8708-9001	FJ62			35789-36090-	2		
	35790A	CLUTCH ASSY, 1 WAY					
8708-9001	FJ62			35790-36010-	1		
	35790B	RING, HOLE SNAP (FOR 1 WAY CLUTCH)					
8708-9001	FJ62			90521-99021-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35599	COVER, MANUAL DETENT SPRING					
8708-9001	FJ62			35599-36010-	1		
	35847	TUBE, TRANSMISSION LUBE APPLY					
8708-9001	FJ62			35847-36010-	1		
	35893	GASKET, CENTER SUPPORT APPLY					
8708-9001	FJ62			35893-36010-	4		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

FIG. 36-12 DIAPHRAGM CYLINDER & TRANSFER VACUUM ACTUATOR


(8708-)

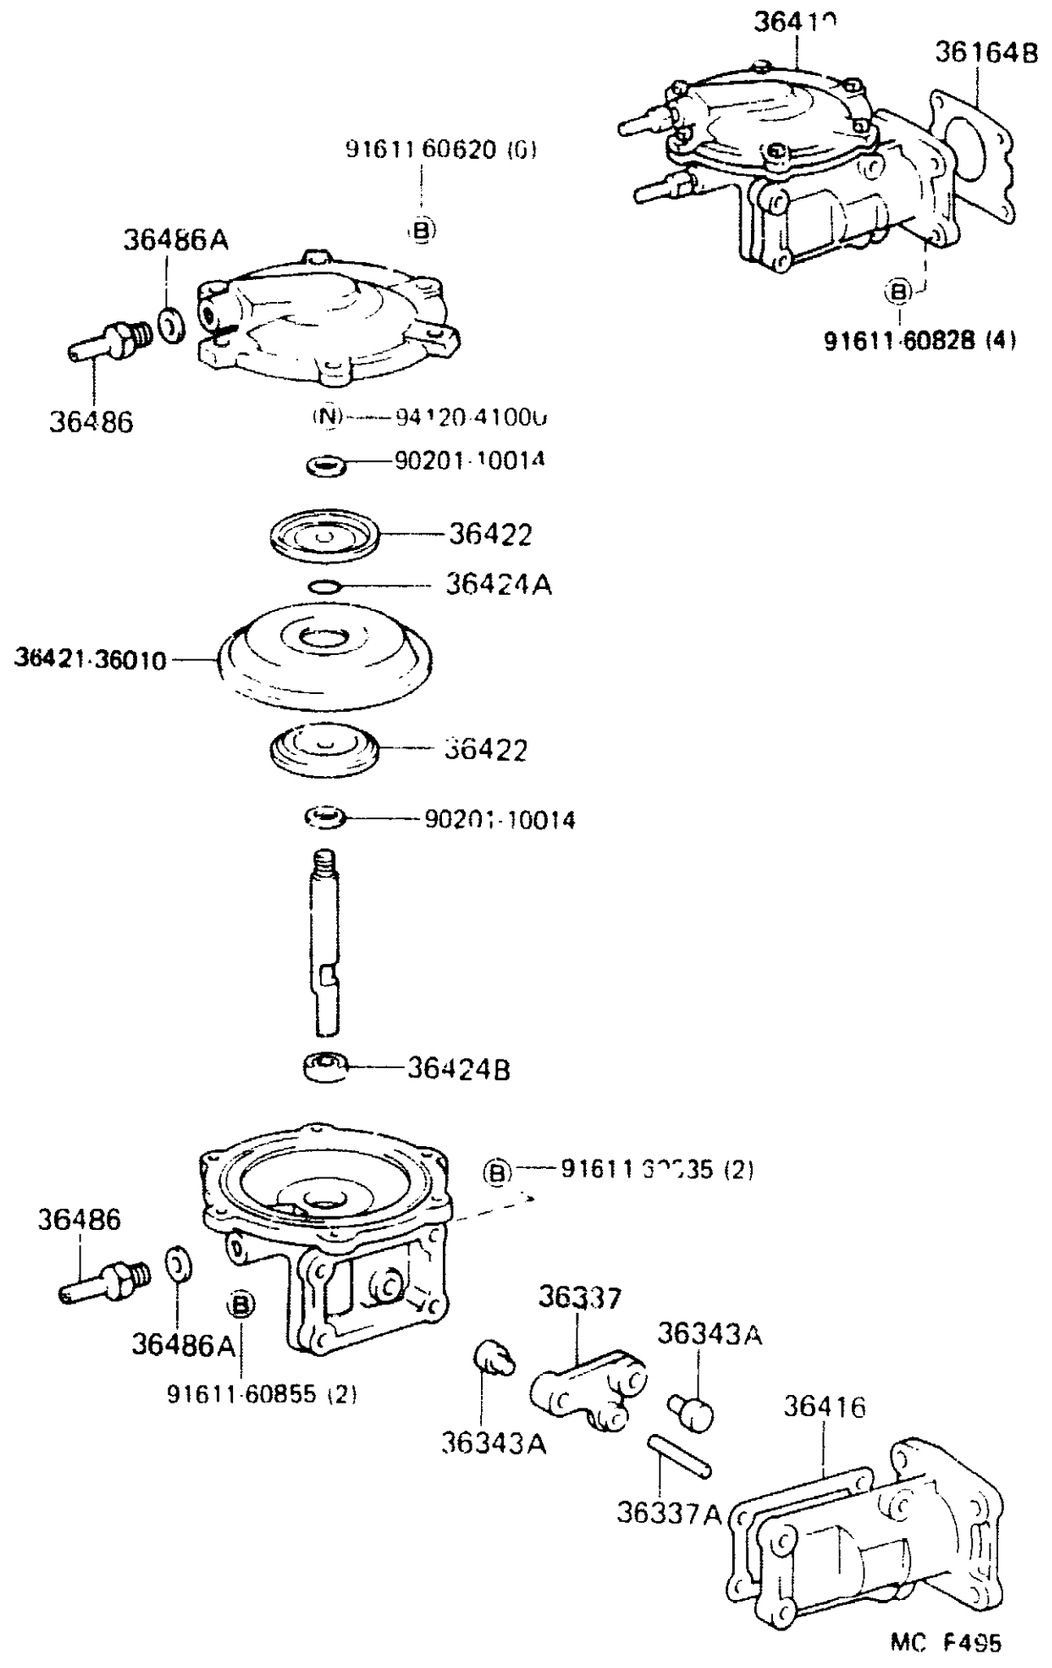

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	36164B	**GASKET, TRANSFER SHIFT SHAFT GUIDE**					
8708-9001	FJ62			36164-60040-	1		
	36337	**LEVER, FRONT DRIVE SHIFT LINK**					
8708-9001	FJ62			36337-60080-	1		
	36337A	**PIN, STRAIGHT (FOR FRONT DRIVE SHIFT LINK LEVER)**					
8708-9001	FJ62			90250-08024-	1		
	36343A	**SHOE, FR DRIVE SHIFT LINK LEVER (FOR VACUUM MAGNET TYPE)**					
8708-9001	FJ62	OD=18		36343-60010-	1		
8708-9001	FJ62	OD=12		36343-60040-	1		
	36410	**CYLINDER ASSY, DIAPHRAGM**					
8708-9001	FJ62			36410-60030-	1		
	36416	**GASKET, DIAPHRAGM CYLINDER**					
8708-9001	FJ62			36416-36010-	1		
	36422	**PLATE, TRANSFER DIAPHRAGM**					
8708-9001	FJ62			36422-36010-	2		
	36424A	**RING, O (FOR DIAPHRAGM PUSH ROD)**					
8708-9001	FJ62	OD=13.6, T=1.9		96711-19010-	1		
	36424B	**SEAL, TYPE T, OIL (FOR DIAPHRAGM PUSH ROD)**					
8708-9001	FJ62			90311-13066-	1		
	36486	**TUBE, SUCTION**					
8708-9001	FJ62			36486-60010-	2		

(8708-)


Semi Floating Axle

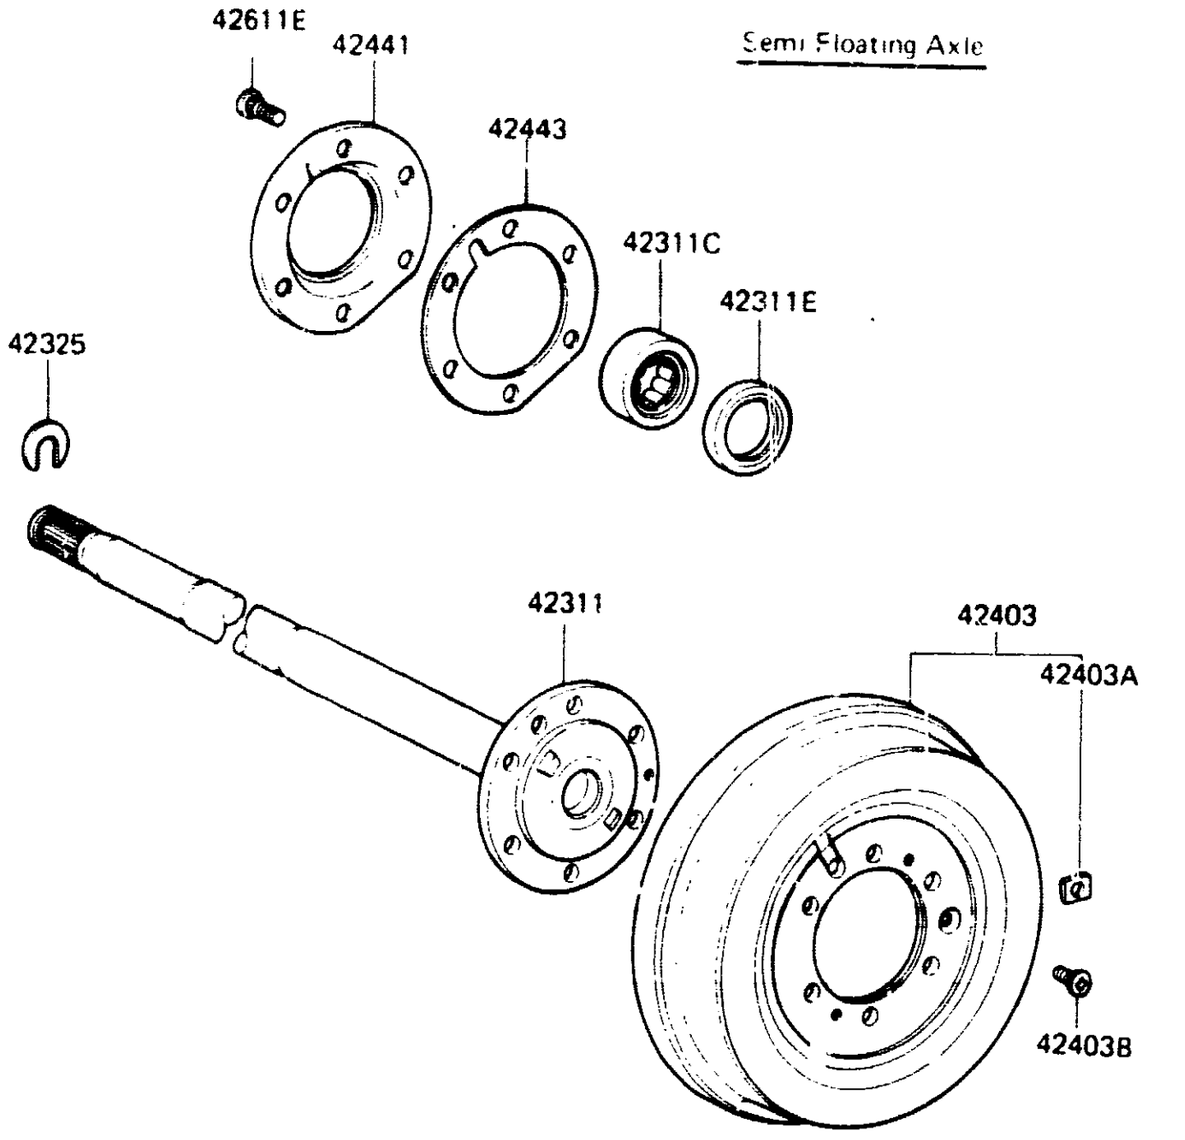

MC E291

(8708-)

Full Floating Axle

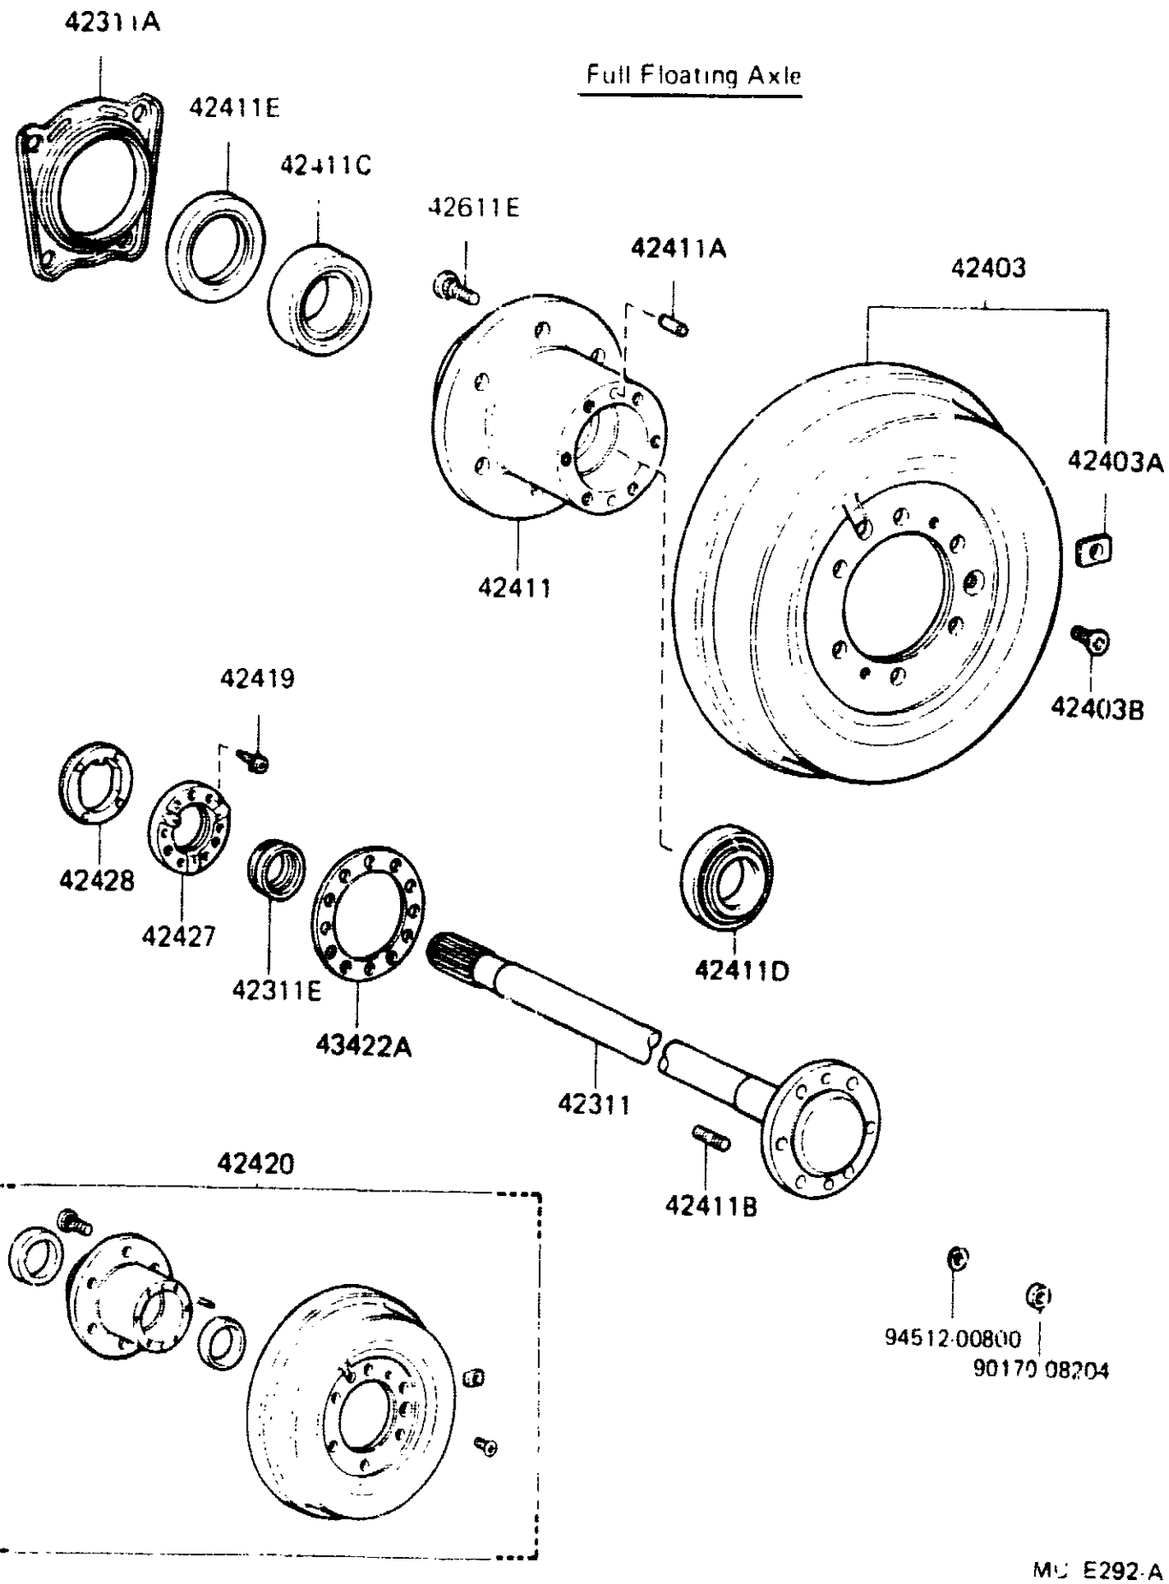


MC E292-A

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		41465L SPRING, COMPRESSION (FOR REAR DIFFERENTIAL LOCK RETAINER)						
	8708-9001	FJ62			90501-20083-	1		
		41466B BOOT, FRONT DIFFERENTIAL LOCK CYLINDER						
	8708-9001	FJ62			41466-60010-	1		
		43110 HOUSING ASSY, FRONT AXLE						
	8708-9001	FJ62			43110-60144-	1		
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		43110-60211-	1		
		43110A PLUG SUB-ASSY, DRAIN						
B	8708-9001	FJ62			90341-18057-	1		
		43110B GASKET, DRAIN						
	8708-9001	FJ62			12157-10010-	1		
		43110C PLUG (FOR FRONT AXLE HOUSING)						
B	8708-9001	FJ62			90341-18006-	1		
		43110D GASKET (FOR FRONT AXLE HOUSING PLUG)						
	8708-9001	FJ62			12157-10010-	1		
		43209 HOSE SUB-ASSY, FRONT AXLE BREATHER						
	8708-9001	FJ62			43209-60011-	1		
		43209A UNION (FOR FRONT AXLE BREATHER HOSE)						
	8708-9001	FJ62			90404-10019-	1		
		43209B CLAMP (FOR FRONT AXLE BREATHER HOSE)						
	8708-9001	FJ62			90461-10587-	1		
		43209C CLIP, HOSE (FOR FRONT AXLE BREATHER HOSE)						
	8708-9001	FJ62			96132-30600-	1		
		43411D SEAL, TYPE OIL (FOR FRONT DRIVE SHAFT)						
	8708-9001	FJ62			90311-33085-	2		
		43611 GASKET, FRONT AXLE DIFFERENTIAL CARRIER						
	8708-9001	FJ62			42181-36010-	1		
		43631 CASE, FRONT AXLE DIFFERENTIAL						
P	8708-8912	FJ62	W(DIFFERENTIAL LOCK)		41301-60020-	1		
	8708-8911	FJ62			41311-36010-	1		
B	8911-9001	FJ62..WGG			41311-60070-	1		
S	8912-9001	FJ62..WGG	W(DIFFERENTIAL LOCK)		41301-60021-	1		
		43631A BEARING, FRONT AXLE DIFFERENTIAL						
P	8708-8911	FJ62			90368-45066-	2		
B	8911-9001	FJ62..WGG			90368-50024-	2		
		43637B WASHER, PLATE (FOR FRONT AXLE DRIVE PINION)						
	8708-9001	FJ62			90201-22007-	1		
		43637C NUT, CASTLE (FOR FRONT AXLE DRIVE PINION)						
	8708-9001	FJ62			90179-22011-	1		
		43640C SPACER OR WASHER, FRONT AXLE DRIVE PINION THRUST						
	8708-9001	FJ62	T=1.05		90201-40551-	1		
	8708-9001	FJ62	T=1.10		90201-40552-	1		
	8708-9001	FJ62	T=1.15		90201-40553-	1		
	8708-9001	FJ62	T=1.20		90201-40554-	1		

FIG. 45-04 STEERING WHEEL

(8708-)

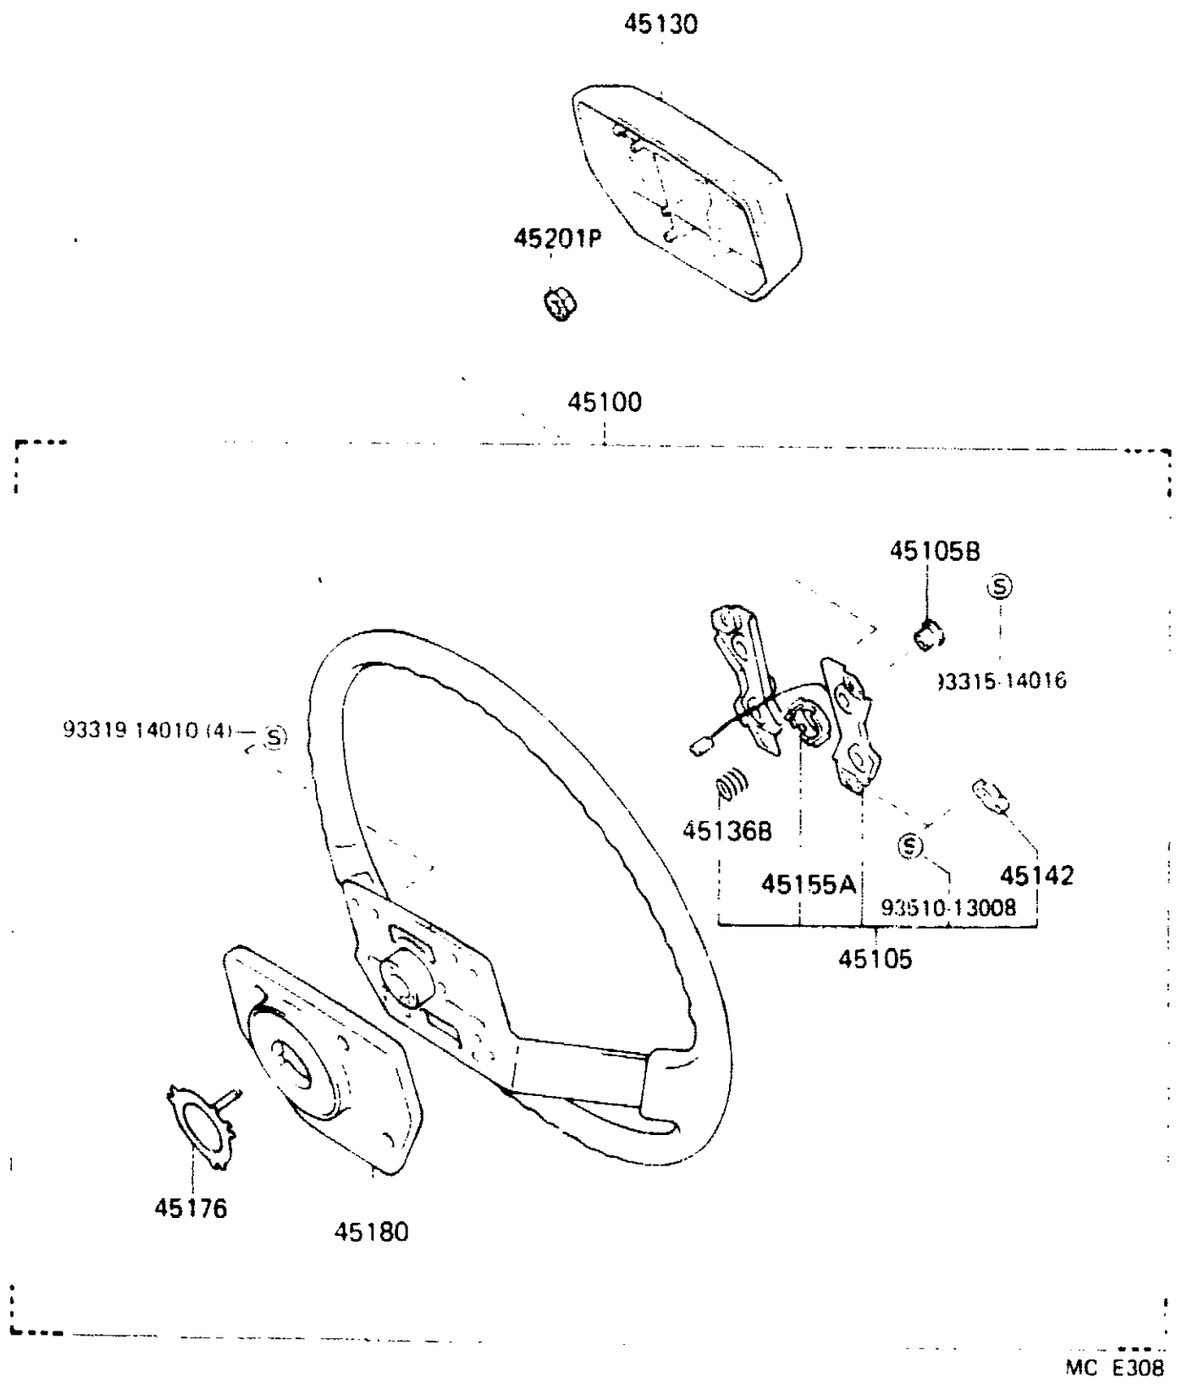


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		45100	WHEEL ASSY, STEERING					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		45100-60140-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		45100-60140-06	1		
		45105	PLATE SUB-ASSY, HORN BUTTON CONTACT, NO.1					
	8708-9001	FJ62			45105-60040-	1		
		45105B	SPACER (FOR HORN BUTTON CONTACT PLATE)					
	8708-9001	FJ62			90561-04010-	4		
		45130	BUTTON ASSY, HORN					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		45130-60101-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		45130-60101-06	1		
		45136B	SPRING, COMPRESSION (FOR HORN BUTTON CONTACT PLATE)					
	8708-9001	FJ62			90501-12099-	4		
		45142	SEAT, HORN BUTTON CONTACT, NO.1					
	8708-9001	FJ62			45142-12050-	4		
		45155A	SPACER, HORN CONTACT					
	8708-9001	FJ62			45155-12030-	4		
		45176	RING, HORN CONTACT					
	8708-9001	FJ62			45176-20030-	1		
		45180	COVER SUB-ASSY, STEERING WHEEL					
	8708-9001	FJ62			45180-60021-	1		
		45201P	NUT, STEERING WHEEL SET					
	8708-9001	FJ62			90179-12086-	1		


FIG. 47-05 FRONT DISC BRAKE CALIPER & DUST COVER


2H8


791430M-01217

(8708-)

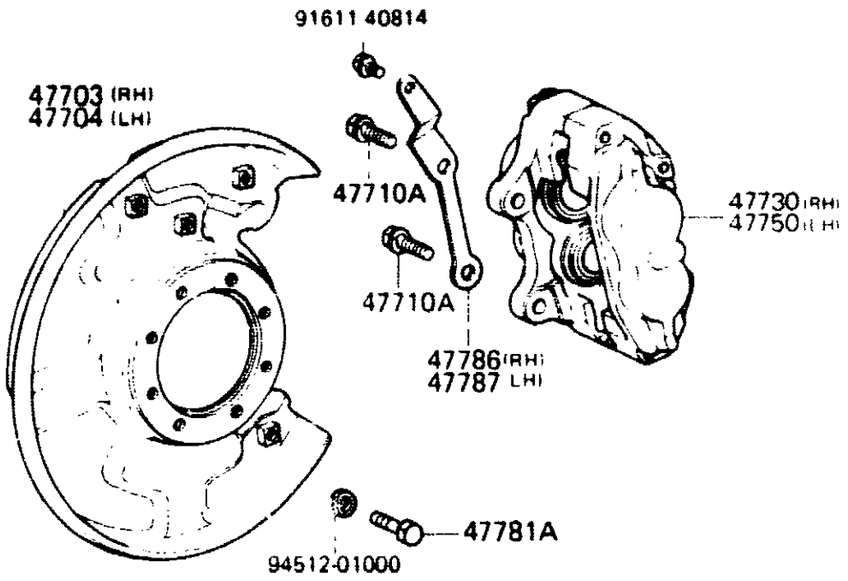

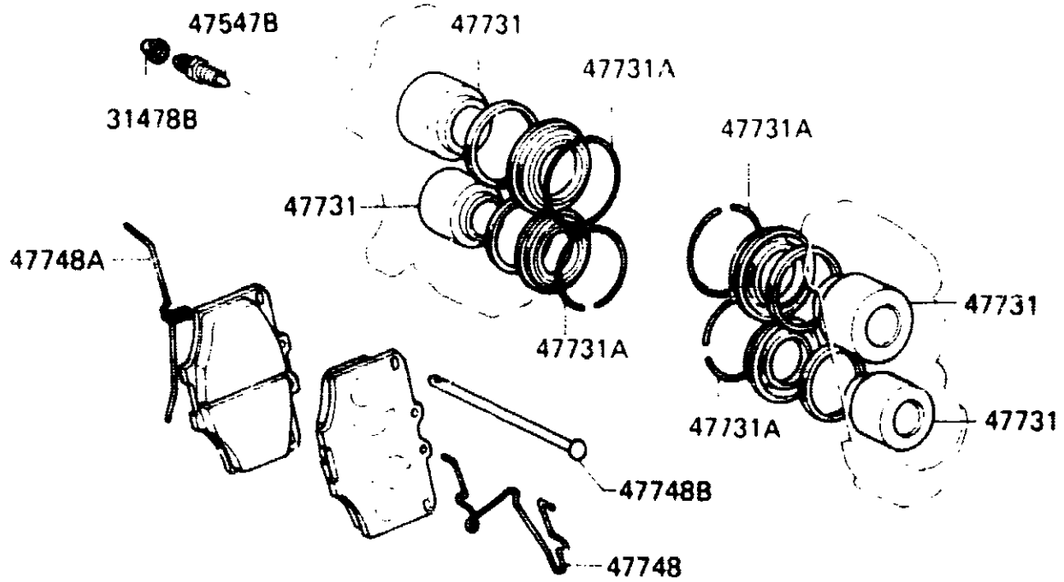

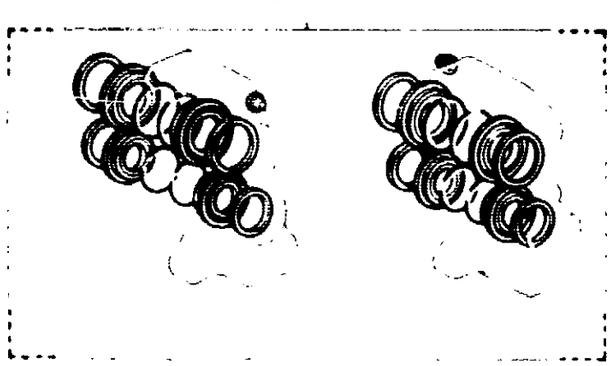

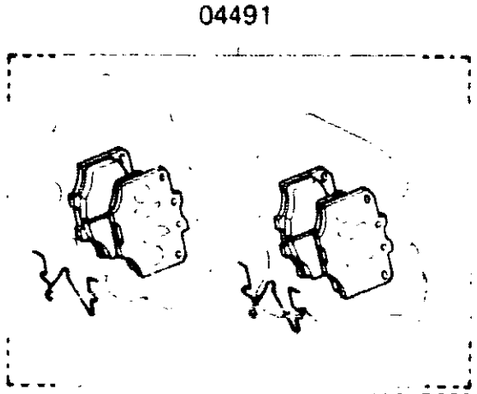


MC E322

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	04479	CYLINDER KIT, DISC BRAKE, FRONT					
8708-9001	FJ62			04479-30030-	1		
	04491	PAD KIT, DISC BRAKE, FRONT					
8708-9001	FJ62			04491-60030-	1		
	31478B	CAP, BLEEDER PLUG (FOR FRONT DISC BRAKE)					
8708-9001	FJ62			31478-30010-	2		
	47547B	PLUG, BLEEDER (FOR FRONT DISC BRAKE)					
8708-9001	FJ62			47547-20030-	2		
	47703	COVER SUB-ASSY, DISC BRAKE DUST, FRONT RH					
8708-9001	FJ62			47703-60031-	1		
	47704	COVER SUB-ASSY, DISC BRAKE DUST, FRONT LH					
8708-9001	FJ62			47704-60031-	1		
	47710A	BOLT, HEXAGON (FOR FRONT DISC BRAKE CALIPER)					
8708-9001	FJ62			90101-12060-	4		
	47730	CYLINDER ASSY, FRONT DISC BRAKE, RH					
8708-[illegible]	[illegible]2			47730-60021-	1		
	[illegible]731	PISTON, FRONT DISC BRAKE					
8708-900[illegible]	[illegible]2			OD=42.82 47731-30020-	4		
8708-9001	FJ62			OD=33.03 47732-30010-	4		
	[illegible]731A	RING, SET (FOR FRONT DISC BRAKE PISTON)					
8708-9001	FJ62			OD=33.93 90522-40043-	4		
8708-9001	FJ62			OD=42.82 90522-48044-	4		

(8708-)

ILLUST.NO. 30F3

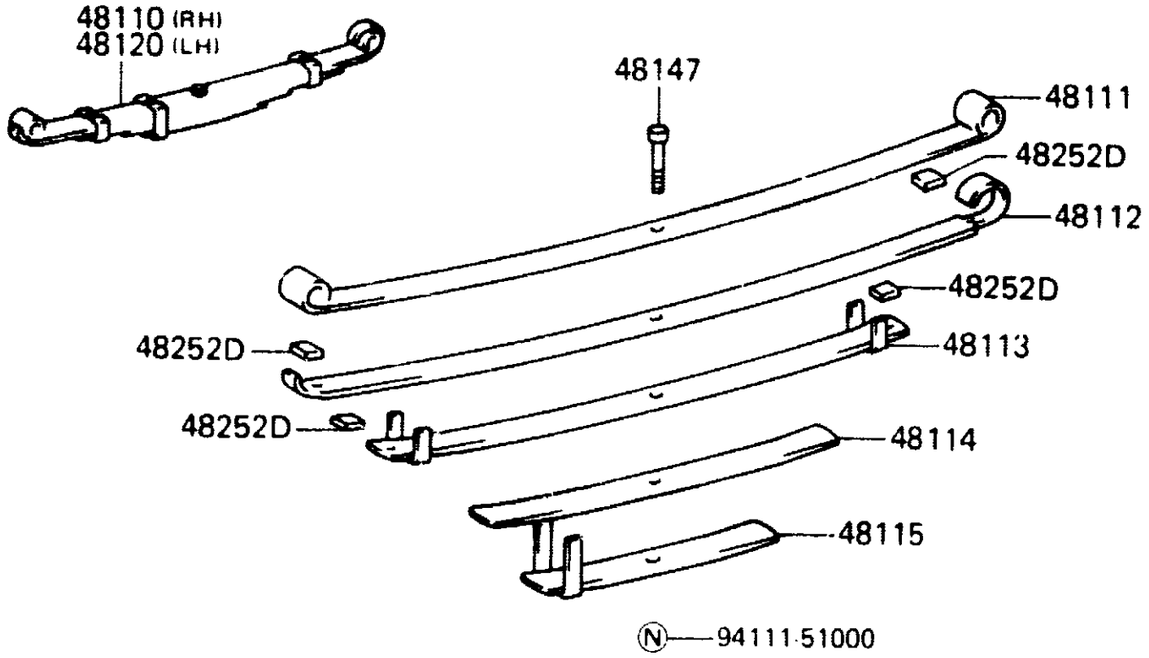

MC F459-A


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	04481	**SHACKLE KIT, FRONT SPRING**					
8708-9001	FJ62			04481-60030-	2		
	04482	**PIN KIT, FRONT SPRING**					
8708-9001	FJ62			04482-60040-	2		
	48048	**SEAT SUB-ASSY, SPRING, RH**					
8708-9001	FJ62			48048-60021-	1		
	48049	**SEAT SUB-ASSY, SPRING, LH**					
8708-9001	FJ62			48049-60021-	1		
	48110	**SPRING ASSY, FRONT, RH**					
8708-8803	FJ62			# 48110-60410-	1		
				(48110-60411-)	1		
8803-9001	FJ62			48110-60411-	1		
	48110A	**BUSH (FOR FRONT SPRING SHACKLE)**					
8708-9001	FJ62			90389-18002-	8		
	48110B	**BUSH (FOR FRONT SPRING PIN)**					
8708-9001	FJ62			90389-18002-	4		
	48111	**LEAF, FRONT SPRING, NO.1**					
8708-9001	FJ62			48111-60410-	2		
	48112	**LEAF, FRONT SPRING, NO.2**					
8708-9001	FJ62			48112-60410-	2		
	48113	**LEAF, FRONT SPRING, NO.3**					
8708-9001	FJ62			48102-60410-	2		

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
89669-60010-	3M9	90176-08014-	1G1	90201-79012-	2F6	90254-04012-	2J3	90311-24001-	2D7	[illegible]	[illegible]

ILLUSTRATED INDEX

H16

BODY GROUP (1/2)

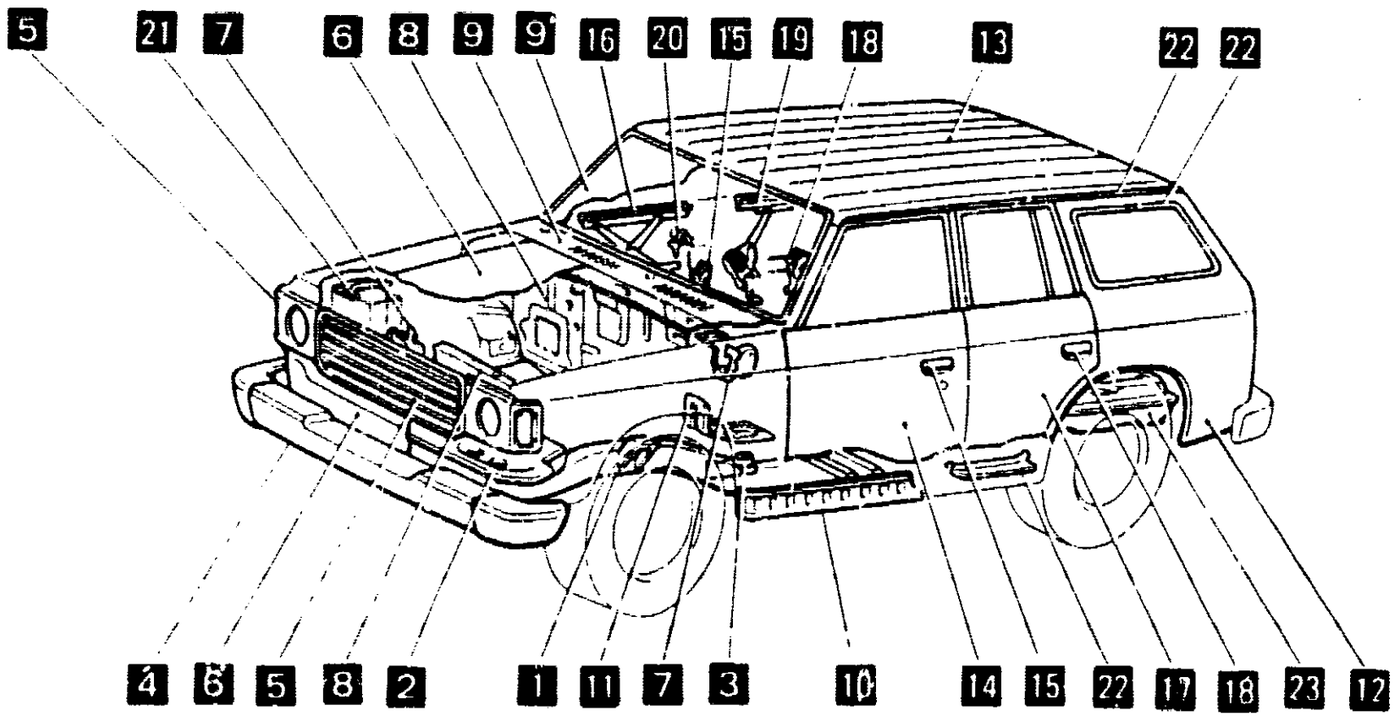

3A1 (51–51) 1
Frame

3C1 (51–52) 2
Crossmember & Under Cover

3E1 (52–51) 3
Cab & Body Mounting

3G1 (52–52) 4
Front Bumper & Stay

3J1 (53–51) 5
Radiator Grille

3J1 (53–53) 6
Hood & Front Fender

3L1 (53–54) 7
Hood Lock & Hinge

3M1 (53–55) 8
Front Fender Apron

3F2 (55–53) 9
Cowl Panel & Glass

3H2 (57–51) 10
Floor Member

3A3 (58–53) 11
Floor Insulator

3G3 (61–51) 12
Side Member

3L3 (61–53) 13
Roof Panel & Back Panel

3H4 (67–51) 14
Front Door Panel & Glass

3L4 (67–53) 15
Front Door Lock & Handle

3A5 (67–54) 16
Front Door Regulator & Hinge

3C5 (67–55) 17
Rear Door Panel & Glass

3F5 (67–56) 18
Rear Door Lock & Handle

3D1 (75–52) 22
Moulding

3H7 (77–51) 23
Fuel Tank & Tube

3H5 (67–57) 19
Rear Door Regulator & Hinge


3A6 (67–65) 20
Lock Cylinder Set

3L6 (74–54) 21
Battery Carrier

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35168	GASKET, AUTOMATIC TRANSMISSION OIL PAN					
8708-9001	FJ62			35168-36010-	1		
	35336	RING, O (FOR TRANSMISSION OIL FILLER TUBE)					
8708-9001	FJ62			90301-09170-	1		
	35394	MAGNET, OIL CLEANER (FOR TRANSMISSION)					
8708-9001	FJ62			35394-30011-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)
A440F

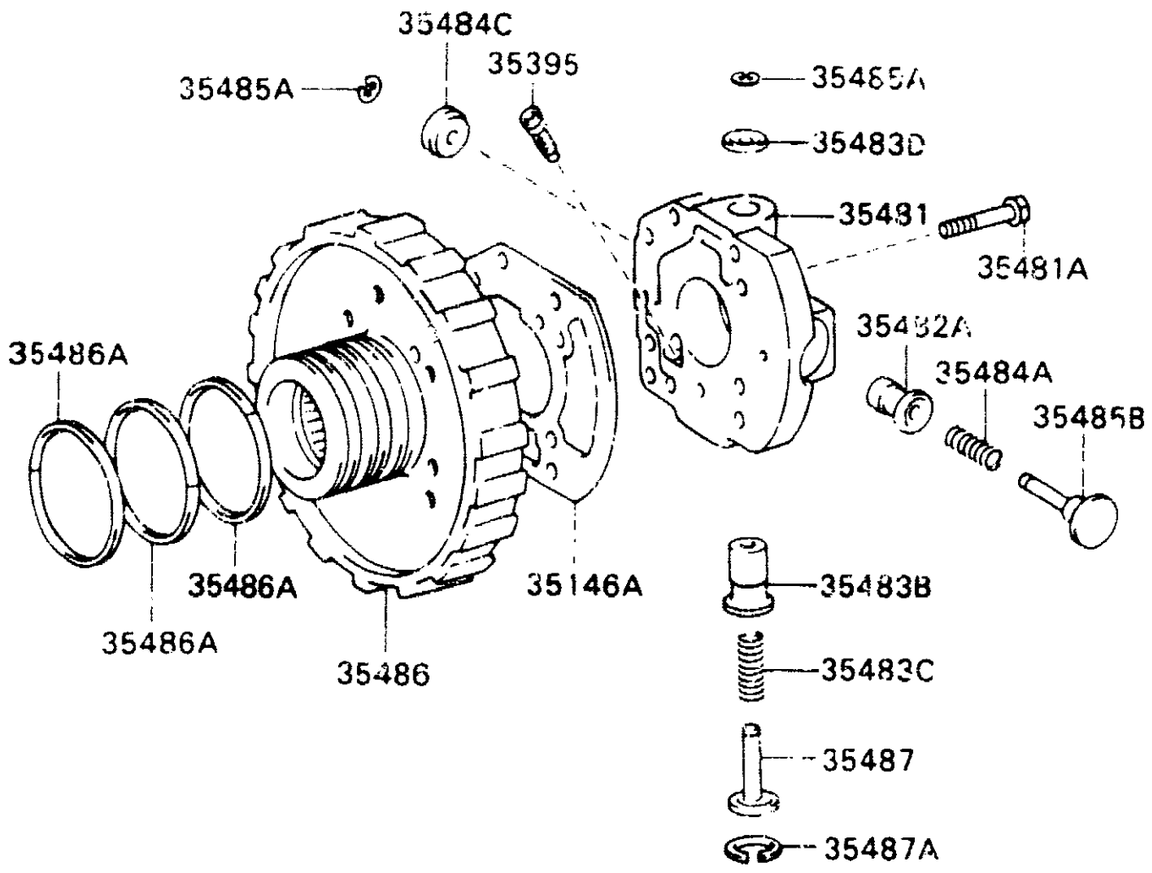


MC E264-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35146A	**GASKET, GOVERNOR BODY**					
8708-9001	FJ62			35146-36010-	1		
	35395	**STRAINER, GOVERNOR OIL**					
8708-9001	FJ62			35395-36010-	1		
	35481	**BOLT, GOVERNOR**					
8708-8709	FJ62			# 35481-36011- (35481-36012-)	1 1		
8709-9001	FJ62			35481-36012-	1		
	35481A	**BOLT (FOR GOVERNOR BODY)**					
8708-9001	FJ62			90105-06069-	8		
	35482A	**VALVE, GOVERNOR, NO.1**					
8708-9001	FJ62			35482-60020-	1		
	35483B	**VALVE, GOVERNOR, NO.2**					
8708-9001	FJ62			35483-60010-	1		
	35483C	**SPRING, COMPRESSION (FOR GOVERNOR VALVE NO.2)**					
8708-9001	FJ62			90501-12086-	1		
	35483D	**SPACER (FOR GOVERNOR VALVE NO.2)**					
8708-9001	FJ62			90561-06006-	1		
	35484A	**SPRING, COMPRESSION (FOR GOVERNOR WEIGHT)**					
8708-9001	FJ62			90501-07065-	1		
	35484C	**WEIGHT, GOVERNOR**					
8708-9001	FJ62			35434-60011-	1		

FIG. 35-13 THROTTLE LINK & VALVE LEVER (ATM)


(8708-)

ILLUST.NO. 10F2

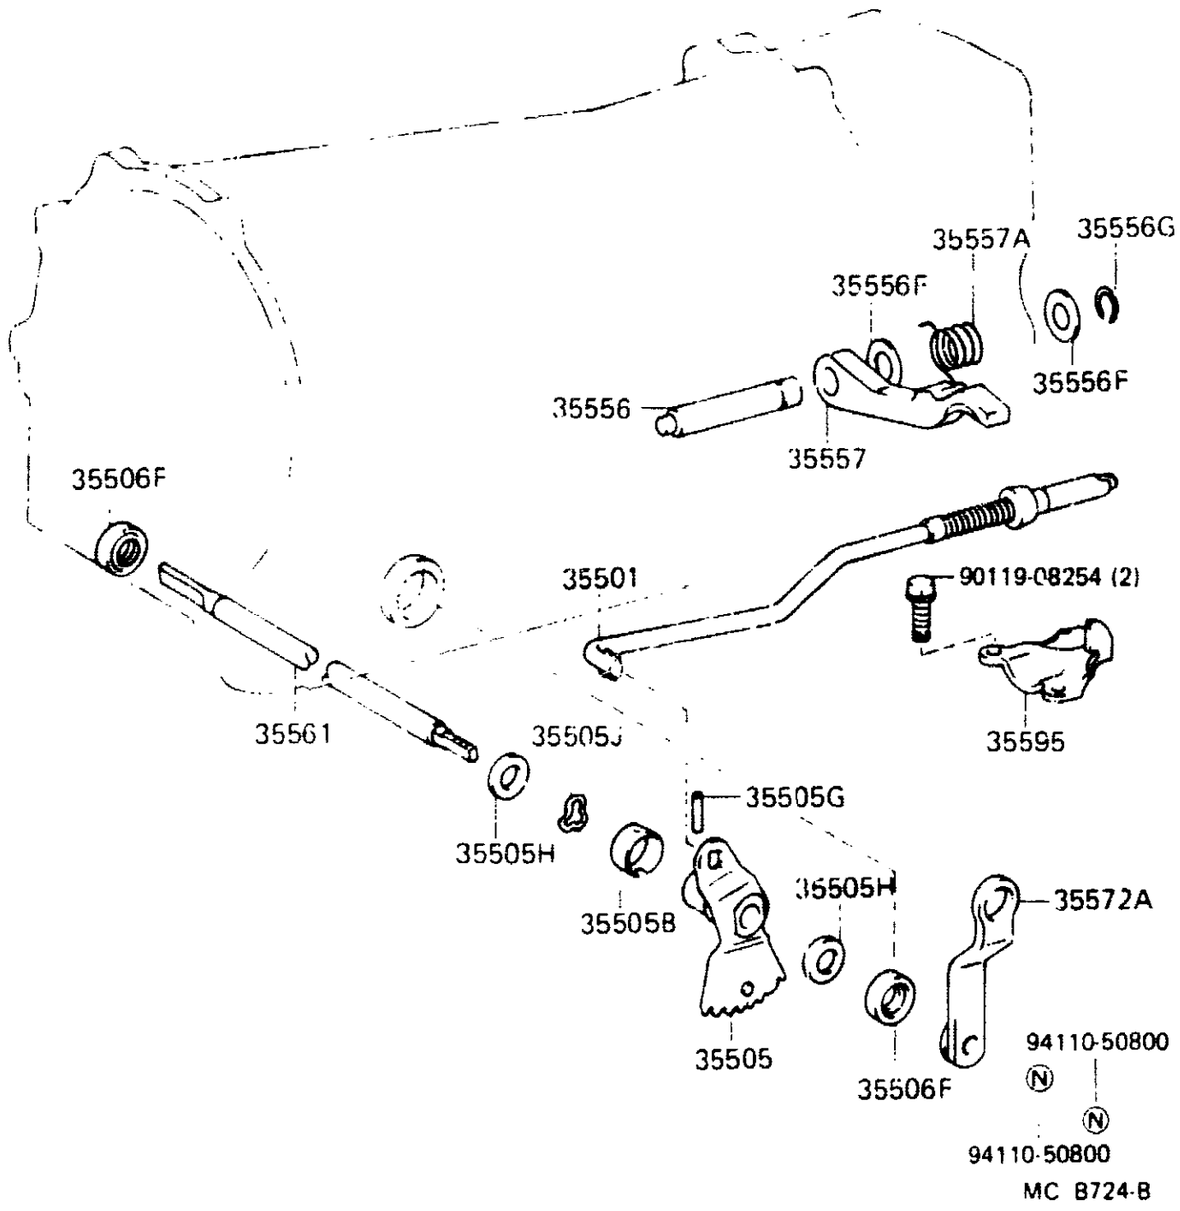

(8708-)

ILLUST.NO. 20F2

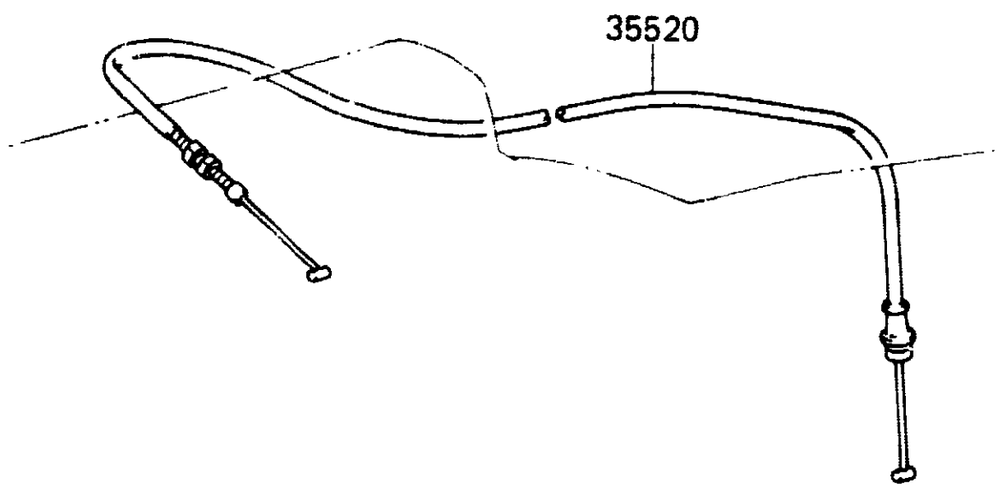

MC F730

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	36486A	GASKET (FOR SUCTION TUBE)					
8708-9001	FJ62			90430-10022-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		42311 SHAFT, REAR AXLE						
P	8708-8905	FJ62	RH		# 42311-60060- (42311-60061-)	1 1		
P	8708-8905	FJ62	LH		# 42312-60050- (42312-60051-)	1 1		
	8708-9001	FJ62	W(DIFFERENTIAL LOCK),RH		42311-60080-	1		
	8708-9001	FJ62	W(DIFFERENTIAL LOCK),LH		42312-60060-	1		
N	8905-9001	FJ62..WGG	RH		42311-60061-	1		
N	8905-9001	FJ62..WGG	LH		42312-60051-	1		
		42311A SEAL, OIL (FOR REAR AXLE SHAFT)						
	8708-9001	FJ62			90313-93001-	2		
		42311C BEARING (FOR REAR AXLE SHAFT)						
	8708-9001	FJ62			90365-47013-	2		
		42311E SEAL, OIL (FOR REAR AXLE SHAFT OUTER)						
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		90310-35001-	2		
	8708-9001	FJ62			90311-47001-	2		
		42325 LOCK, REAR AXLE SHAFT						
	8708-9001	FJ62			42325-55010-	2		
		42403 DRUM SUB-ASSY, REAR BRAKE						
	8708-9001	FJ62			42431-60020-	2		
		42403A PIECE, BALANCE (FOR REAR BRAKE DRUM)						
	8708-9001	FJ62	10G		90937-01117-	X		
	8708-9001	FJ62	20G		90937-01118-	X		


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		42403A PIECE, BALANCE (FOR REAR BRAKE DRUM) CONTINUED						
	8708-9001	FJ62	30G		90937-01119-	X		
	8708-9001	FJ62	50G		90937-01121-	X		
	8708-9001	FJ62	60G		90937-01122-	X		
S	9001-9001	FJ62..WGG	20G		90937-01408-	X		
S	9001-9001	FJ62..WGG	30G		90937-01409-	X		
S	9001-9001	FJ62..WGG	40G		90937-01410-	X		
S	9001-9001	FJ62..WGG	50G		90937-01411-	X		
S	9001-9001	FJ62..WGG	60G,W(DIFFERENTIAL LOCK)		90937-01412-	X		
S	9001-9001	FJ62..WGG	70G		90937-01413-	X		
S	9001-9001	FJ62..WGG	80G		90937-01414-	X		
S	9001-9001	FJ62..WGG	90G		90937-01415-	X		
S	9001-9001	FJ62..WGG	100G		90937-01416-	X		
S	9001-9001	FJ62..WGG	110G		90937-01417-	X		
S	9001-9001	FJ62..WGG	120G		90937-01418-	X		
S	9001-9001	FJ62..WGG	10G		90937-01419-	X		
		42403B BOLT, SET (FOR REAR BRAKE DRUM SETTING)						
	8708-9001	FJ62			90113-10003-	2		
		42411 HUB, REAR AXLE						
A	8708-9001	FJ62			42411-60011-	2		
		42411A PIN, STRAIGHT (FOR REAR AXLE HUB)						
A	8708-9001	FJ62			90250-[illegible]057-	4		
		42411B BOLT, STUD (FOR REAR AXLE HUB)						
	8708-9001	FJ62			90116-08325-	12		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	←——→						
	1 43640C 1 SPACER OR WASHER, FRONT AXLE DRIVE PINION THRUST CONTINUED						
8708-9001	FJ62	T=1.25		90201-40555-	1		
8708-9001	FJ62	T=1.30		90201-40556-	1		
8708-9001	FJ62	T=1.35		90201-40557-	1		
8708-9001	FJ62	T=1.40		90201-40558-	1		
8708-9001	FJ62	T=1.45		90201-40559-	1		
8708-9001	FJ62	T=1.50		90201-40560-	1		
8708-9001	FJ62	T=1.55		90201-40561-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)


ILLUST.NO. 10F3

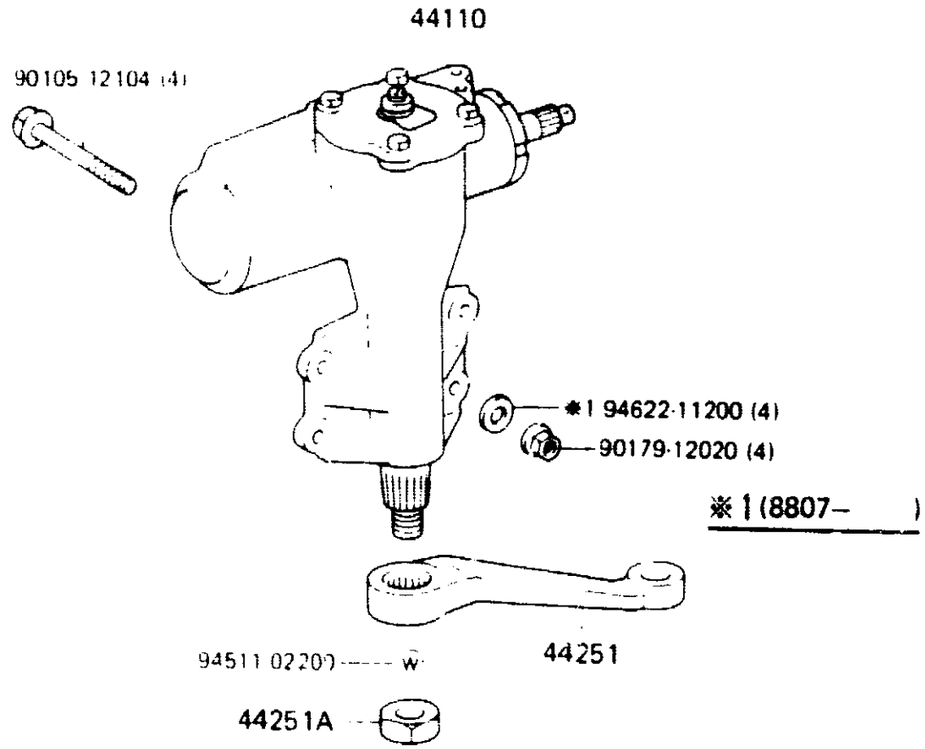


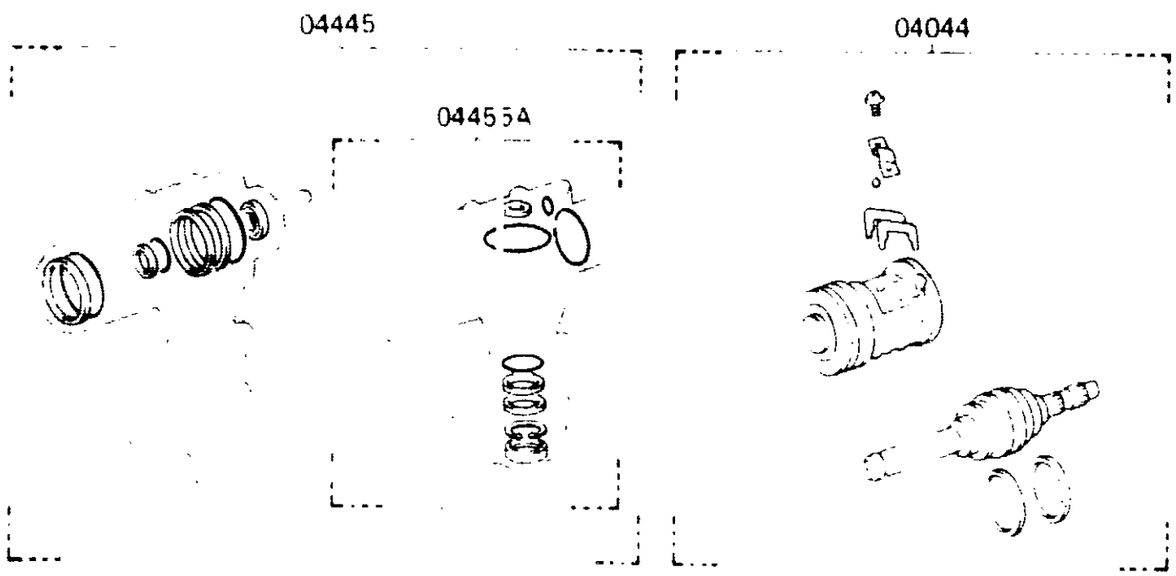

(8708-)

ILLUST.NO. 20F3

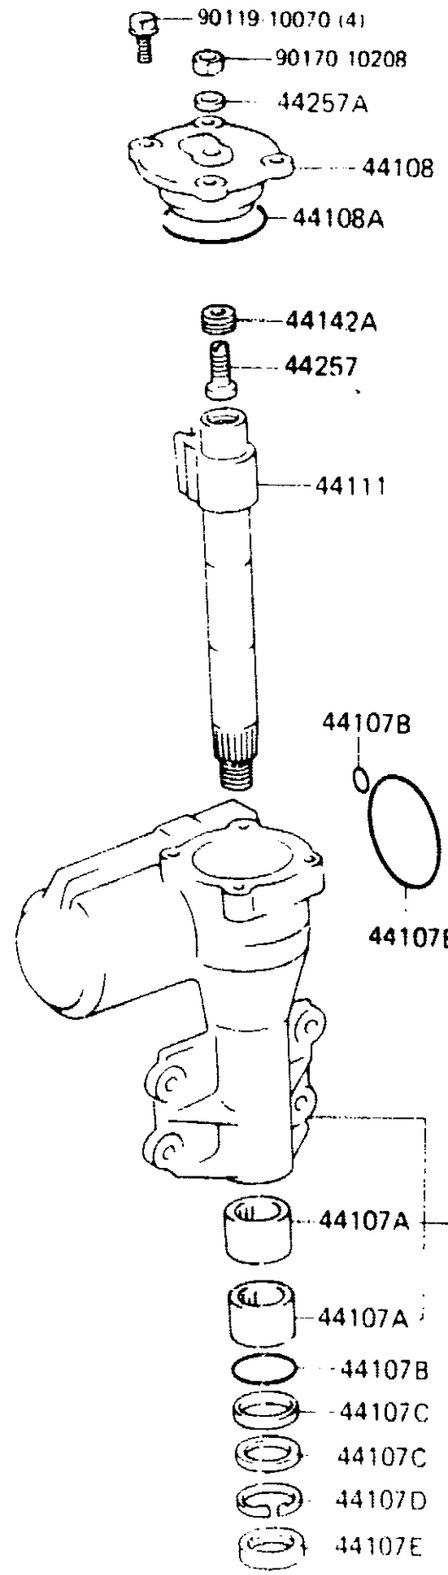

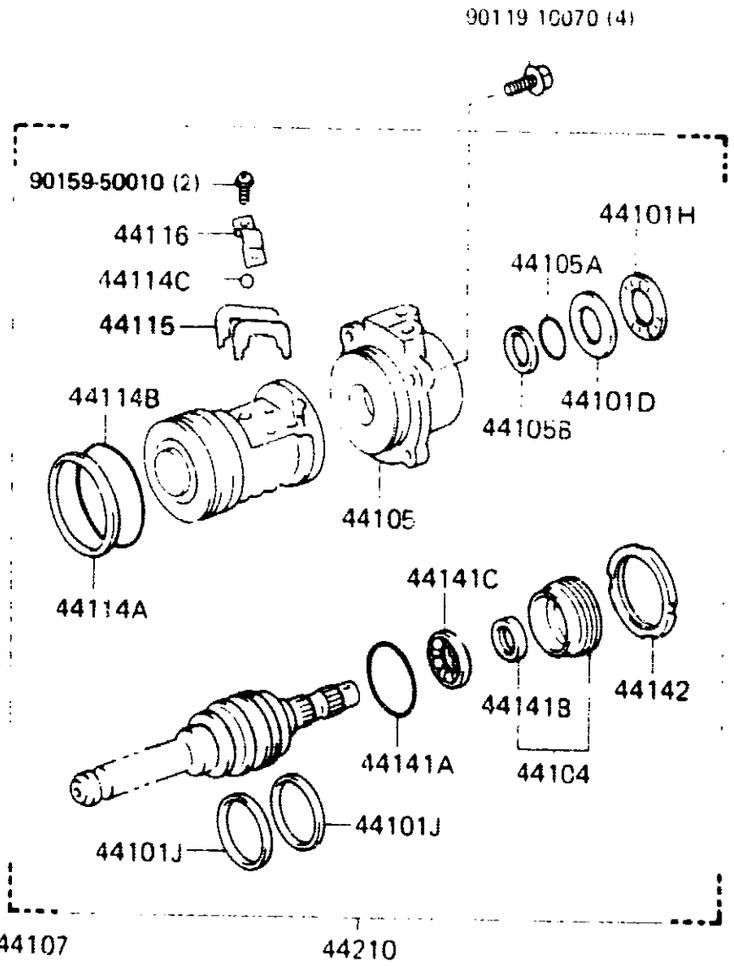

MC 358B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF C	REV. REF T
	47748	SPRING, ANTI RATTLE, NO.1 (FOR FRONT DISC BRAKE)					
8708-9001	FJ62			47748-60010-	2		
	47748A	CLIP (FOR FRONT DISC BRAKE ANTIRATTLE)					
8708-9001	FJ62			90468-12003-	2		
	47748B	PIN, W/HOLE (FOR FRONT DISC BRAKE ANTIRATTLE)					
8708-9001	FJ62			90240-06158-	4		
	47750	CYLINDER ASSY, DISC BRAKE, LH					
8708-9001	FJ62			47750-60021-	1		
	47781A	BOLT (FOR DUST COVER TO STEERING KNUCKLE AKM SETTING)					
8708-9001	FJ62			90101-10439-	16		
	47786	REINFORCEMENT, DUST COVER, RH					
8708-9001	FJ62			47786-60020-	1		
	47787	REINFORCEMENT, DUST COVER, LH					
8708-9001	FJ62			47787-60020-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	48114	LEAF, FRONT SPRING, NO.4					
8708-8803	FJ62			48114-60410-	2		
8803-9001	FJ62			48114-60411-	2		
	48115	LEAF, FRONT SPRING, NO.5					
8708-8803	FJ62			48103-60410-	2		
8803-9001	FJ62			48103-60411-	2		
	48120	SPRING ASSY, FRONT, LH					
8708-8803	FJ62			# 48110-60410- (48110-60411-)	1 1		
8803-9001	FJ62			48110-60411-	1		
	48147	BOLT, FRONT SPRING, CENTER					
8708-8803	FJ62			48147-60410-	2		
8803-9001	FJ62			48147-60223-	2		
	48252D	SILENCER					
8708-9001	FJ62			48252-26070-	8		
	48331	BUMPER, FRONT SPRING, NO.1					
8708-9001	FJ62			48304-60031-	2		
	48401A	BRACKET SUB-ASSY, SPRING, NO.1					
8708-9001	FJ62			48401-60020-	2		
	48412B	BRACKET, SPRING, NO.2, RH					
8708-9001	FJ62			48412-60021-	1		
	48413B	BRACKET, SPRING, NO.2, LH					
8708-9001	FJ62			48413-60032-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	48475	PLATE, DISTANCE (FOR FRONT)					
8708-9001	FJ62			48475-60020-	1		
	48505A	BOLT, U (FOR FRONT SPRING)					
8708-9001	FJ62	L=190		90117-14036-	X		
8708-9001	FJ62	L=200		90117-14051-	X		
	48510	ABSORBER ASSY, SHOCK, FRONT RH					
8708-9001	FJ62			48511-69095-	1		
	48510B	RETAINER, CUSHION, NO.1 (FOR FRONT SHOCK ABSORBER)					
8708-9001	FJ62			90948-02017-	2		
	48510C	RETAINER, CUSHION, NO.2 (FOR FRONT SHOCK ABSORBER)					
8708-9001	FJ62			90948-02114-	4		
	48510E	WASHER, FRONT SHOCK ABSORBER CUSHION, NO.2					
8708-9001	FJ62			90948-03011-	2		
	48510H	BUSH (FOR FRONT SHOCK ABSORBER)					
8708-9001	FJ62	LWR		90385-19003-	4		
8708-9001	FJ62	UPR		90948-01031-	4		
	48512A	BRACKET, FRONT SHOCK ABSORBER, UPPER RH					
8708-9001	FJ62			48512-60031-	1		
	48513	BRACKET, FRONT SHOCK ABSORBER, UPPER LH					
8708-9001	FJ62			48512-60031-	1		
	48520	ABSORBER ASSY, SHOCK, FRONT LH					
8708-9001	FJ62			48511-69095-	1		

PART NUMBER	LOCATION
90389-18002-	2L9
90401-08004-	1L4
-12097-	1L4
-14093-	1F2
-18083-	1H2
90402-16042-	1F2
-26002-	1M4
90404-10018-	2G5
-10019-	2H6
-14012-	1J3
-16008-	1F2
-16022-	2K3
-26003-	1M4
-51093-	2J4
-51319-	2G8
-54035-	1C3
90407-10004-	2D8
-14005-	2K3
-16006-	2K3
-16013-	2K3
90410-11005-	1F2
-18002-	1M4
90413-04005-	2J4
-10042-	2B9
-10106-	2C9
-10214-	2B9
90430-06104-	2D8
-08009-	1L4
-08011-	1L4
-09253-	2D8
	2E8
-10022-	2I4
-12005-	1L4
-12011-	1I1
-12019-	1I1
-12245-	3J7
-15261-	1F2
-18008-	2A4
-18012-	1H2
-26002-	2F5
	2G6
-43002-	1K2
90445-11072-	2H1
-12065-	1L2
-12078-	1L2
P -14072-	3G10
-16038-	1L1
-18089-	2G7
-18090-	2G7
-22015-	3J7
-22904-	3J7
-31018-	1I3 B
90446-06013-	3F10
-06292-	3F10
90447-12058-	3K7
90460-01001-	2G7
90461-10387-	2H6
-10558-	2G5
90462-12038-	2K3
90464-00105-	1C4
-00208-	1C4
90467-06161-18	3E4
-07041-03	3E3
P -07041-06	3E3
90467-08011-	3F2
	3J1
-09014-	3J1
-11085-	1L2
P -12035-03	3B3
P -12035-06	3B3
-13001-	1J4
	1K2
	1K4
-15120-	1L1
-16001-	2E8
-16002-	2G8
-18002-	1L1
-22003-	1J4
-23001-	1J3
-28003-	1I3
-31110-	2C9
-32002-	2L7
-42001-	1L2
90468-12003-	2I8
-18071-	3E6
90480-01336-	2A6
-13005-	1K4
-13012-	2A6
-15002-	3L1
-17019-	2A6
-17158-	2A8
-17177-	2B1
-17401-	2G4
-18001-	1L1
-20016-	2A6
90501-06043-	2E3
-07005-	2B1
-07009-	2B1
-07040-	2E3
-07042-	2F3
-07049-	2E3
	2F3
-07060-	2I2
-08062-	2F3
-08075-	2G3
-08095-	2D3
-09056-	2D3
-10087-	2K1
-10092-	2A2
-10094-	2A3
-10098-	2B3
-10099-	2G3
-10107-	2C3
-10108-	2B2
-10126-	2G3
-10138-	2A8
-10745-	2A8
-11024-	2A3
-11030-	2A3
-11041-	2E3
-12083-	2G3
-12086-	2I2
-12090-	2A3
-12099-	2H7
-12103-	2E7
-14087-	1D2
-15006-	2E3
- 6115-	2F4
90501-17008-	2F3
-18677-	2F1
-19002-	2B3
-20012-	2J8
-20083-	2F5
	2H6
-23014-	2F7
-27008-	2B3
-29003-	2G4
-30014-	2C3
-33004-	2M2
-40008-	2B3
-45011-	2A7
-45114-	2M7
-45342-	1C2
90502-16004-	1D2
90503-04003-	2B3
90506-12031-	2K8
-12451-	2C8
-18031-	2K8
-20033-	2L8
-23009-	2M6
-26011-	2J8
-26014-	2K8
90507-14001-	2B7
90508-29017-	3M7
-30004-	2J3
90520-01002-	3A5
	3H5
-15001-	2E7
-17042-	2M6
-22013-	2H2
-27091-	2J6
-28036-	2J6
-29024-	2L4
-29025-	2L4
-29026-	2L4
-29027-	2L4
-29051-	1C2
-31001-	2K6
-33009-	2E2
-33107-	2E4
-35110-	2E4
-50001-	2A2
	2B2
	2L1
-87001-	2F2
90521-01002-	2A7
-22011-	2A7
-22012-	2A7
-22013-	2A7
-25002-	1A2
-44002-	2D7
	2K7
-75023-	2E4
-90002-	2L1
-99017-	2B2
	2L1
-99018-	2H2
-99019-	2L1
-99021-	2D2
	2F2
	2H2
	2K1
90521-99021-	2L1
-99040-	2H2
-99041-	2H2
-99042-	2G2
-99043-	2K1
90522-32011-	2L7
-40043-	2H8
-48044-	2H8
90523-05002-	2J2
-06004-	2B3
-06005-	2E3
	2F3
90524-15008-	1D2
90541-03015-	3D2
-06008-	2C8
-08003-	3K7
90560-06009-	1F3
-10406-	2C4
-20008-	2J3 A
-35008-	2D4 A
-35009-	2G2 A
-38003-	2E4 A
-72001-	2G2 A
-72002-	2G2
-72003-	2G2
90561-04010-	2H7
-06006-	2I2
-09005-	1L2
-10004-	1K4
90562-18151-	2D8
-30002-	2J7
-31002-	2K7
-32002-	2K7
-48001-	2J7
-67002-	2K7
90564-06002-	2G3
-70001-	2D4
-70002	2D4
-70003-	2D4
-70004-	2D4
-70005-	2D4
-70006-	2D4
-70007-	2D4
-70008-	2D4
-70009-	2D4
-70010-	2D4
-70011-	2E4
-70012-	2E4
-70013-	2E4
90587-08001-	2A6
90910-01006-	1D2
-01012-	1D2
-02050-	1F1
-02057-	1H1
-04012-	3F2 S
-12079-	1M3 S
90913-02048-	1C2 S
-03009-	1D2 S
-03012-	1D2 S
-05020-	1D2 S
90915-01014-	1I1 S
90916-02141-	1A3 S
-02193-	1A3 S
-03052-	1K2 S
90916-03071-	1K2 S
90917-06004-	1E3 S
-06012-	1E3
-06023-	1E3
-06024-	1E3
-10049-	1M3
-10065-	2J4
-10076-	1J3
-11023-	1M3
90919-01064-	1B4
-02113-	1B4
-03086-	1C4
-12745-	1B4
-12746-	1B4
-12747-	1B4
-12748-	1B4
-12749-	1C4
-12750-	1C4
-12949-	1B4
-12950-	1C4
-12951-	1B4
-12952-	1B4
-12953-	1C4
-12954-	1C4
-13271-	1B4
-13328-	1B4
-21410-	1B4
90923-01349-	1L4 S
-01350-	1L4 S
-05011-	1H1 S
90925-03057-	1M3 S
90929-01189-	1M4 N
-01192-	1C4
90930-03075-	2B4
-03094-	2G1
90937-01117-	2I5
-01118-	2I5
-01119-	2I5
-01121-	2I5
-01122-	2I5
-01132-	2K4
-01147-	2K4 P
-01148-	2K4 P
-01149-	2K4 P
-01150-	2K4
-01151-	2K4
-01152-	2K4
-01184-	2K4
-01191-	2K4
-01192-	2K4
-01193-	2K4
-01194-	2K4
-01268-	2K4
-01269-	2K4
-01408-	2I5
-01409-	2I5
-01410-	2I5
-01411-	2I5
-01412-	2I5
-01413-	2I5
-01414-	2I5
-01415-	2I5 S
-01417-	2I5
90937-01418-	2I5
-01419-	2I5
90942-01047-	2K5
-02052-	2J5
-02053-	2K6
-03079-	2K5
-03080-	2K5
-03081-	2K5
-03082-	2K5
-03083-	2K5
-03084-	2K5
-03085-	2K5
-03086-	2K5
-03107-	2K5
-05009-	2L5
90945-02034-	2M6
-02038-	2M6
90948-01031-	2I9
-02015-	2J9
-02017-	2I9
-02032-	2J9
-02033-	2D9
-02114-	2I9
-03011-	2A10
	2I9
P 90950-01073-03	3E3
P -01073-06	3E3
S 90980-05022-	3K10
S -05067-	3K10
S -05106-	3K10
S -05110-	3K10
N -05127-	3K10
-07003-	3M8
-07048-	3M8
-07251-	3M8
90981-05034-	3A8
-05035-	3A8
P -11004-	3J8
-11010-	3E9
-11018-	3D9
	3J8
P -11020-	3E8
	3I8
P -12010-	3D8
90982-01414-	3K8
-02207-	3K6
-05030-	3K8
-08251-	3B9
-09002-	3H9
-09003-	3H9
-09004-	3H9
-09005-	3H9
90987-01003-	3J9
-02004-	3H9
	3K9
-02006-	3J9
-03001-	3J9
-04002-	3J9
90999-00066-	3A6
-00104-	3A6
-73072-	1A2
S -92003-	2J4
91121-51070-	2C8
91511-60850-	2F1

BODY GROUP (2/2)

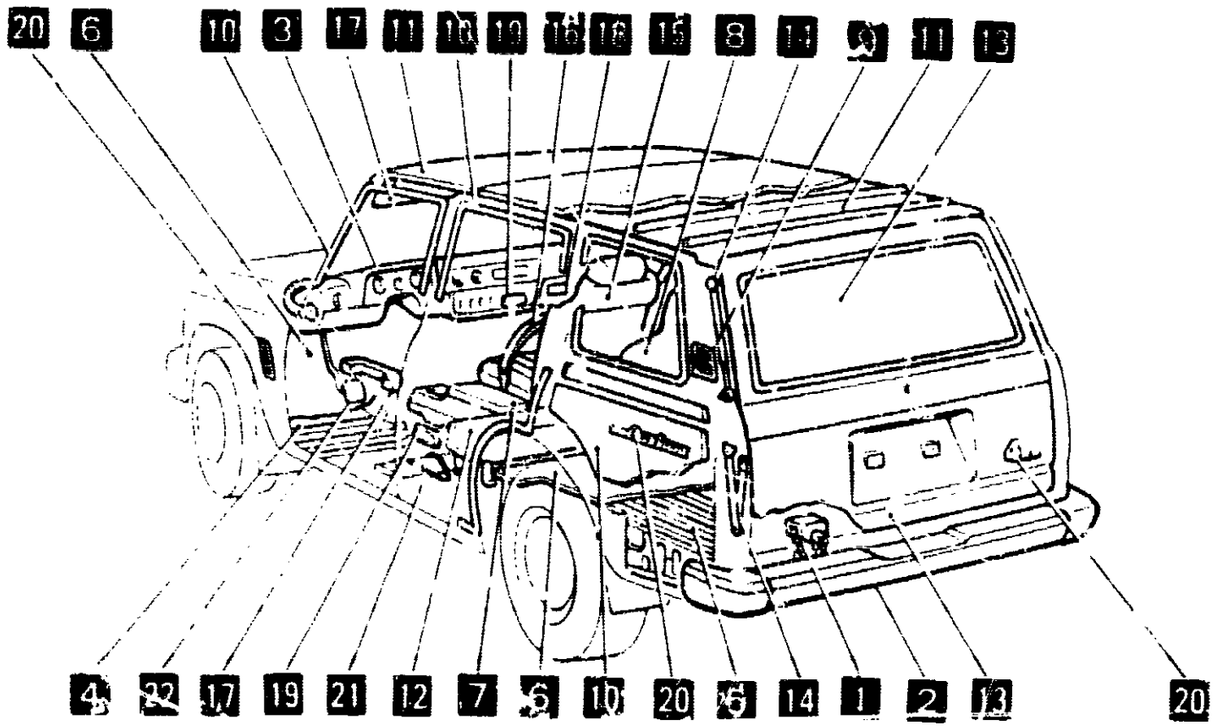

3D1 (51-53) 1




Spare Wheel Carrier

3H1 (52-53) 2




Rear Bumper & Stay

3B2 (55-51) 3



Instrument Panel

312 (58-51) 4

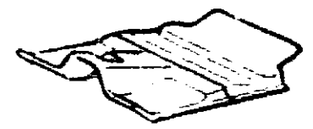


Front Floor Panel & Member

312 (58-52) 5



Rear Floor Panel & Member

3B3 (58-54) 6

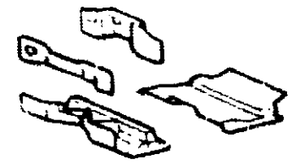


Floor Mat & Pad

3G7 (75-54) 21



Tool Box & License Bracket

3D3 (58-55) 7

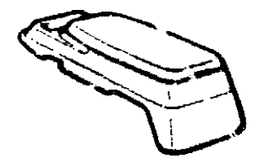

Console Box

3B7 (75-51) 20

TOYOTA

4WD

Emblem & Name Plate

3K3 (61-52) 8



Side Window

3A7 (74-56) 19




Ash Receptacle

3A4 (61-55) 9



Rear & Roof Ventilator

3M6 (74-55) 18

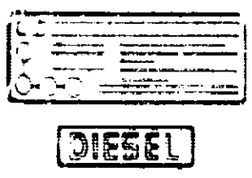

Caution Plate

3L7 (78-51) 23




Accelerator Link

3B4 (64-51) 10



Inside Trim Board

3J6 (74-51) 17

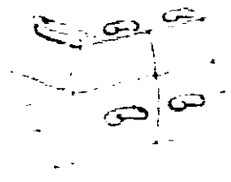


Armrest & Visor

3H6 (71-52) 16




Seat Belt

3C6 (71-51) 15

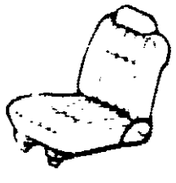

Seat & Seat Track

3L5 (67-62) 14

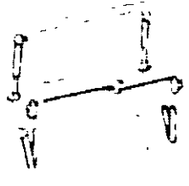


Back Door Lock & Hinge

3J5 (67-61) 13




Back Door Panel & Glass

3G4 (64-55) 12

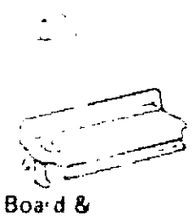

Deck Board & Deck Trim Cover


3E4 (64-52) 11

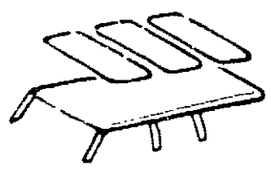


Roof Headling & Pad

MB M500


(8708-)
A440F

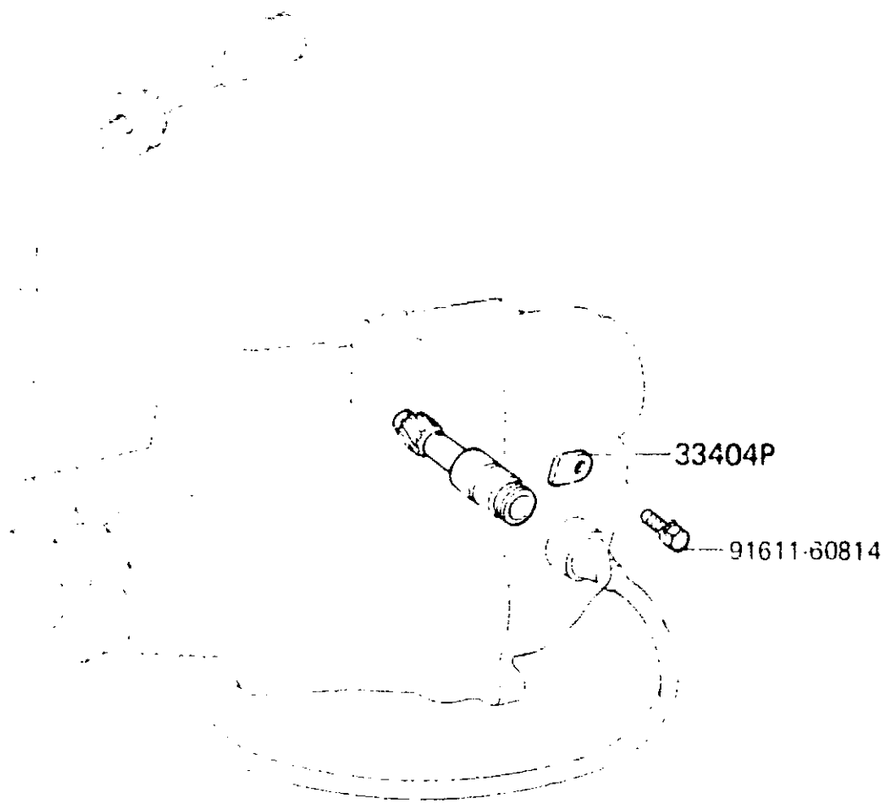

33403G

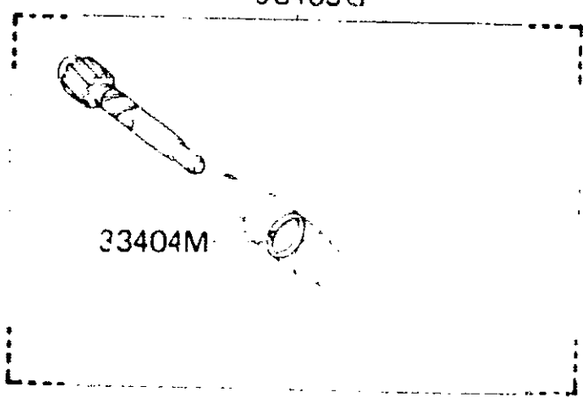

33404L

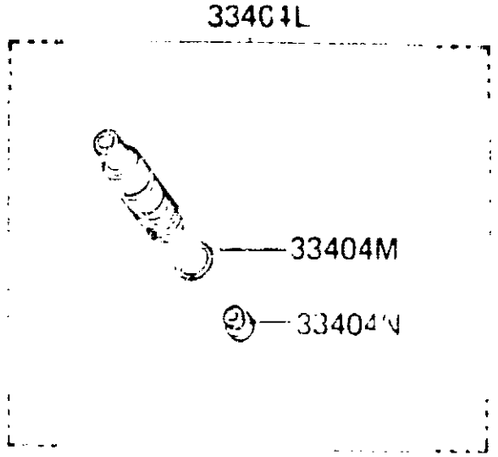

MCJ F090A


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		33403G	GEAR SUB-ASSY, SPEEDOMETER DRIVEN (ATM)					
A	8708-9001	FJ62	N=18, MARK 6:18		33403-69195-	1		
		33404L	SLEEVE SUB-ASSY, SPEEDOMETER SHAFT (FOR ATM)					
	8708-9001	FJ62			33404-30040-	1		
		33404M	RING, O (FOR ATM SPEEDOMETER SHAFT SLEEVE)					
	8708-9001	FJ62			90301-18004-	1		
		33404N	SEAL OIL (FOR ATM SPEEDOMETER SHAFT SLEEVE)					
	8708-9001	FJ62			90310-09001-	1		
		33404P	PLATE, SPEEDOMETER SLEEVE LOCK (FOR ATM)					
	8708-9001	FJ62			33485-30020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35485A	RING, E (FOR GOVERNOR VALVE SHAFT)					
8708-9001	FJ62			90523-05002-	2		
	35485B	SHAFT, GOVERNOR VALVE, NO.1					
8708-9001	FJ62			35485-60010-	1		
	35486	SUPPORT, GOVERNOR BODY					
8708-9001	FJ62			35486-36010-	1		
	35486A	RING (FOR GOVERNOR BODY SUPPORT)					
8708-9001	FJ62			35735-36010-	3		
	35487	SHAFT, GOVERNOR VALVE, NO.2					
8708-9001	FJ62			35487-36010-	1		
	35487A	RING, SNAP (FOR GOVERNOR VALVE SHAFT NO.2)					
8708-9001	FJ62			96151-02500-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		35501	ROD SUB-ASSY, PARKING LOCK					
	8708-9001	FJ62			35501-36010-	1		
		35505	LEVER SUB-ASSY, MANUAL VALVE					
	8708-8709	FJ62			35505-36010-	1		
	8709-9001	FJ62			35505-36020-	1		
		35505E	SPACER (FOR MANUAL VALVE LEVER)					
	8708-9001	FJ62			90560-20008-	1		
		35505G	PIN, SLOTTED SPRING (FOR MANUAL VALVE LEVER)					
	8708-9001	FJ62			90254-04012-	1		
		35505H	WASHER, PLATE (FOR MANUAL VALVE LEVER)					
P	8708-8909	FJ62			90201-12042-	2		
		35505J	WASHER, WAVE (FOR MANUAL VALVE LEVER)					
P	8708-8909	FJ62			90206-12001-	1		
		35506F	SEAL, OIL (FOR MANUAL VALVE LEVER SHAFT)					
	8708-9001	FJ62			90311-12002-	2		
		35520	CABLE ASSY, THROTTLE					
	8708-9001	FJ62			35520-60050-	1		
		35556	SHAFT, PARKING LOCK PAWL					
	8708-9001	FJ62			35556-60010-	1		
		35556F	WASHER, PLATE (FOR PARKING LOCK PAWL SHAFT)					
	8708-9001	FJ62			90201-16012-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	35556G	RING, SNAP (FOR PARKING LOCK PAWL SHAFT)					
8708-9001	FJ62			96150-01600-	1		
	35557	PAWL, PARKING LOCK					
8708-9001	FJ62			35557-36010-	1		
	35557A	SPRING, TORSION (FOR PARKING LOCK PAWL)					
8708-9001	FJ62			90508-30004-	1		
	35561	SHAFT, MANUAL VALVE LEVER					
8708-9001	FJ62			35561-60010-	1		
	35572A	LEVER, TRANSMISSION CONTROL SHAFT					
8708-9001	FJ62			35572-60020-	1		
	35595	BRACKET, PARKING LOCK PAWL					
8708-9001	FJ62			35595-36010-	1		

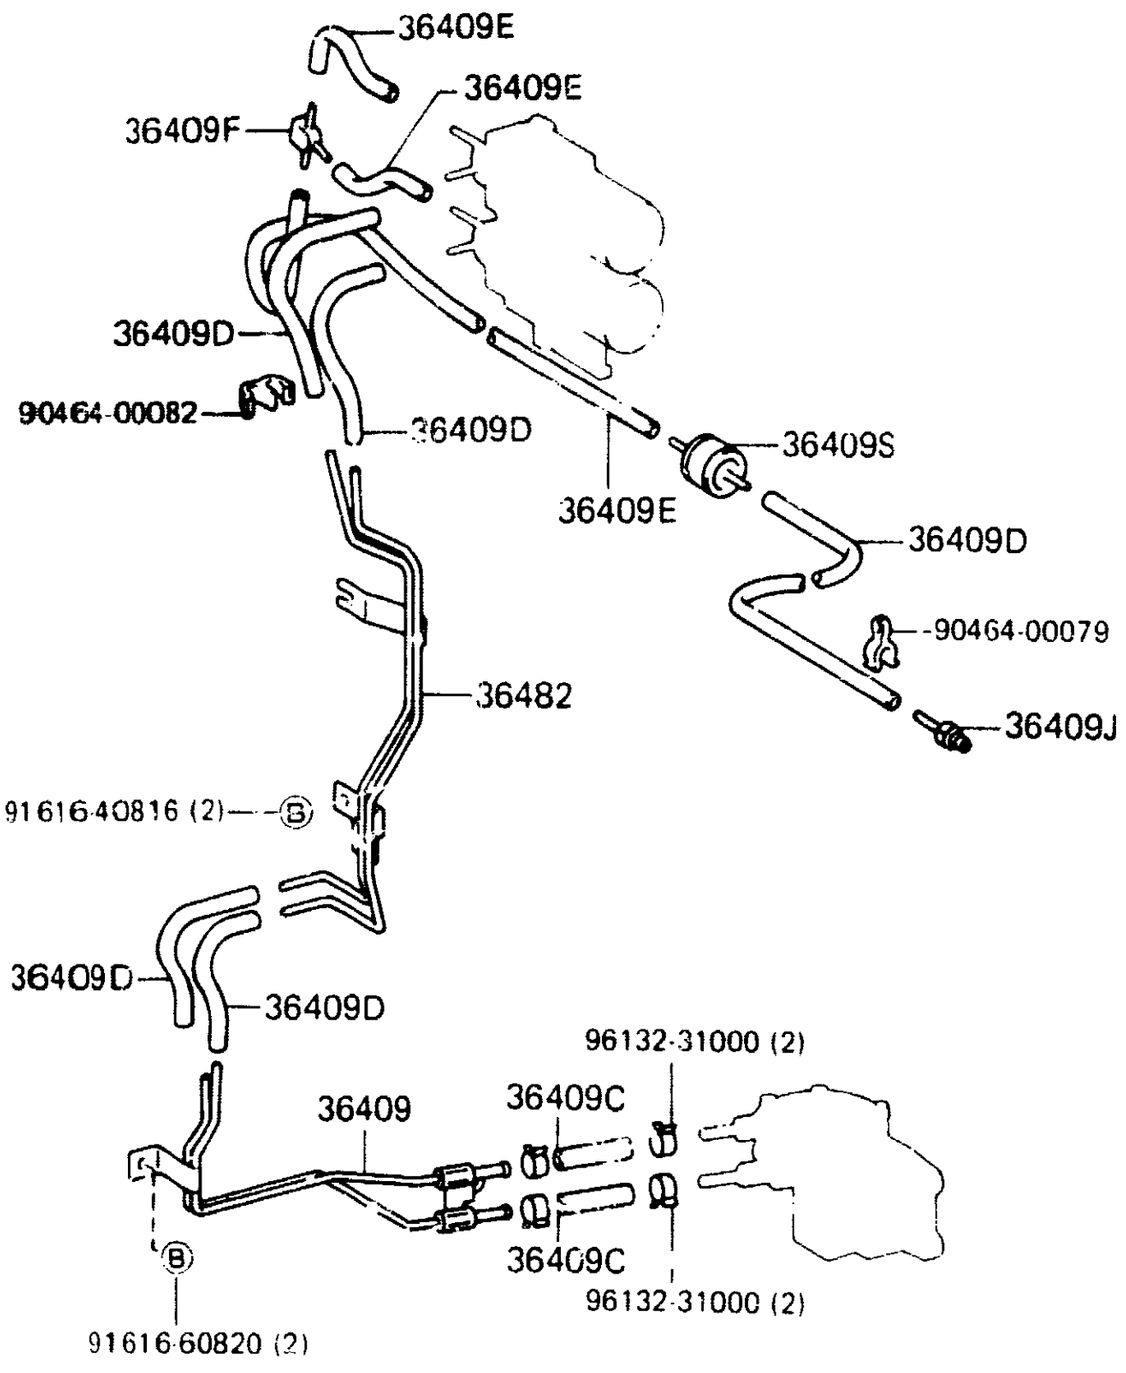


MC E381-C

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		36409 SUPPORT SUB-ASSY, VACUUM TUBE UNION						
	8708-9001	FJ62			36409-60040-	1		
		36409C HOSE, VACUUM, NO.1 (FOR FRONT DRIVE SHIFT)						
	8708-9001	FJ62	L=340		95441-09540-	2		
		36409D HOSE, VACUUM, NO.2 (FOR FRONT DRIVE SHIFT)						
S	8708-9001	FJ62	*H, L=360		90999-92003-	1		
	8708-9001	FJ62	*H, L=50		# 95411-19930- (90999-92002-)	2 1		
	8708-9001	FJ62	*H, L=170		# 95411-19930- (90999-92002-)	2 1		
		36409E HOSE, VACUUM, NO.3 (FOR FRONT DRIVE SHIFT)						
S	8708-9001	FJ62	*H, L=390		90999-92003-	1		
	8708-9001	FJ62	*H, L=200		# 95411-19930- (90999-92002-)	2 1		
		36409F WAY, 3 (FOR FRONT DRIVE SHIFT)						
	8708-9001	FJ62			90413-04005-	1		
		36409J UNION (FOR FRONT DRIVE SHIFT)						
	8708-9001	FJ62			90404-51093-	1		
		36409S VALVE, CHECK (FOR FRONT DRIVE SHIFT)						
	8708-9001	FJ62			90917-10065-	1		
		36482 TUBE, FRONT DRIVE VACUUM, NO.2						
	8708-9001	FJ62			36482-60100-	1		

*H, L = Cut hose to length as specified in remarks

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		42411C	BEARING, TAPERED ROLLER (FOR REAR AXLE INNER BEARING)					
	8708-900.	FJ62			90368-49084-	2		
		42411D	BEARING, TAPERED ROLLER (FOR REAR AXLE OUTER BEARING)					
	8708-9001	FJ62			90368-45087-	2		
		42411E	SEAL, OIL (FOR REAR AXLE HUB)					
	8708-9001	FJ62			90311-62001-	2		
		42419	SCREW, REAR AXLE BEARING LOCK NUT					
	8708-9001	FJ62			42419-60011-	4		
		42420	HUB (OR SHAFT) & BRAKE DRUM REAR AXLE, RH					
A	8708-9001	FJ62			42420-60110-	2		
		42427	NUT, REAR AXLE BEARING LOCK					
	8708-9001	FJ62			42427-60021-	2		
		42428	PLATE, REAR AXLE LOCK NUT					
	8708-9001	FJ62			42428-60011-	2		
		42441	DEFLECTOR, BRAKE DRUM OIL					
	8708-9001	FJ62			42441-30010-	1		
		42443	GASKET, BRAKE DRUM OIL DEFLECTOR					
	8708-9001	FJ62			42443-55020-	1		
		42611E	BOLT, HUB (FOR REAR AXLE)					
	8708-9001	FJ62			90942-02052-	6		
		43422A	GASKET, REAR AXLE OUTER SHAFT FLANGE					
	8708-9001	FJ62			43422-60020-	2		

(8708-)

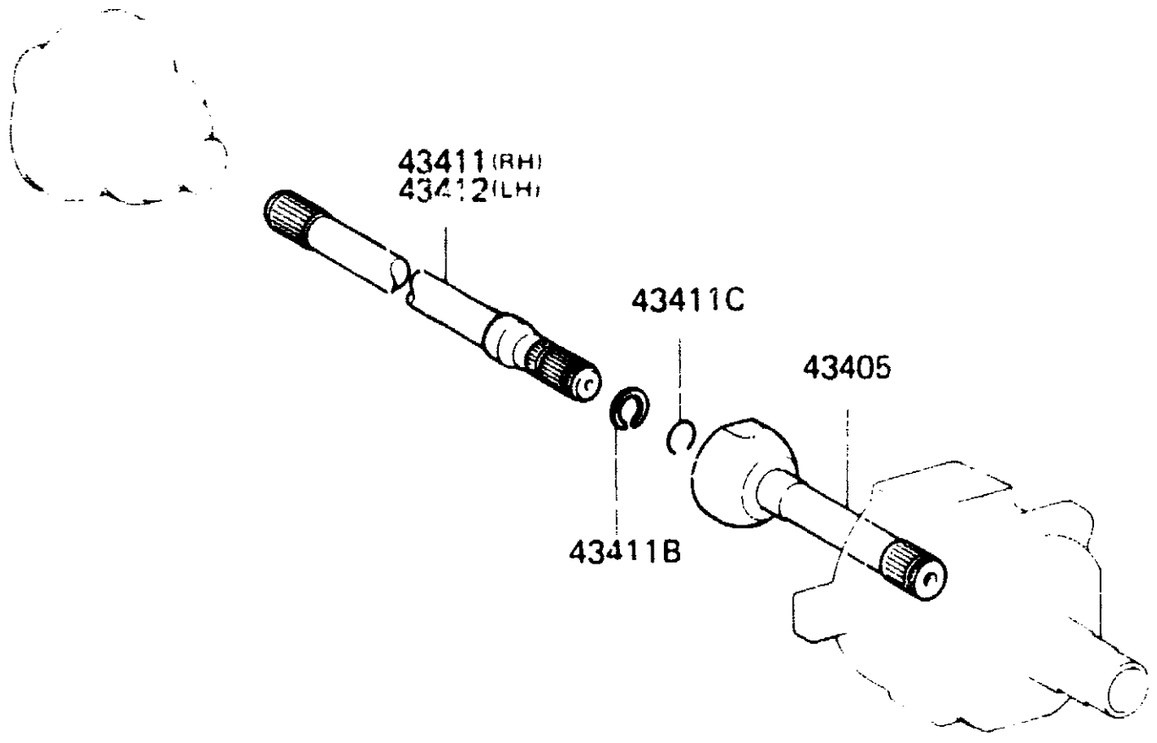


MC E299


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		43405	SHAFT SUB-ASSY, FRONT AXLE OUTER					
	8709-9001	FJ62			43405-60016-	2		
		43411	SHAFT, FRONT AXLE, INNER RH					
P	8708-8912	FJ62			43411-60020-	1		
N	8912-9001	FJ62..WGG			43411-60060-	1		
		43411B	RING, SHAFT SNAP (FOR FRONT DRIVE INNER SHAFT INNER)					
	8708-9001	FJ62			90520-28036-	2		
		43411C	RING, SHAFT SNAP (FOR FRONT DRIVE INNER SHAFT OUTER)					
	8708-9001	FJ62			90520-27091-	2		
		43412	SHAFT, FRONT AXLE, INNER LH					
	8708-9001	FJ62			43412-35010-	1		
	8708-9001	FJ62	W(DIFFERENTIAL LOCK)		43412-60050-	1		

(8708-)

ILLUST.NO. 30F3

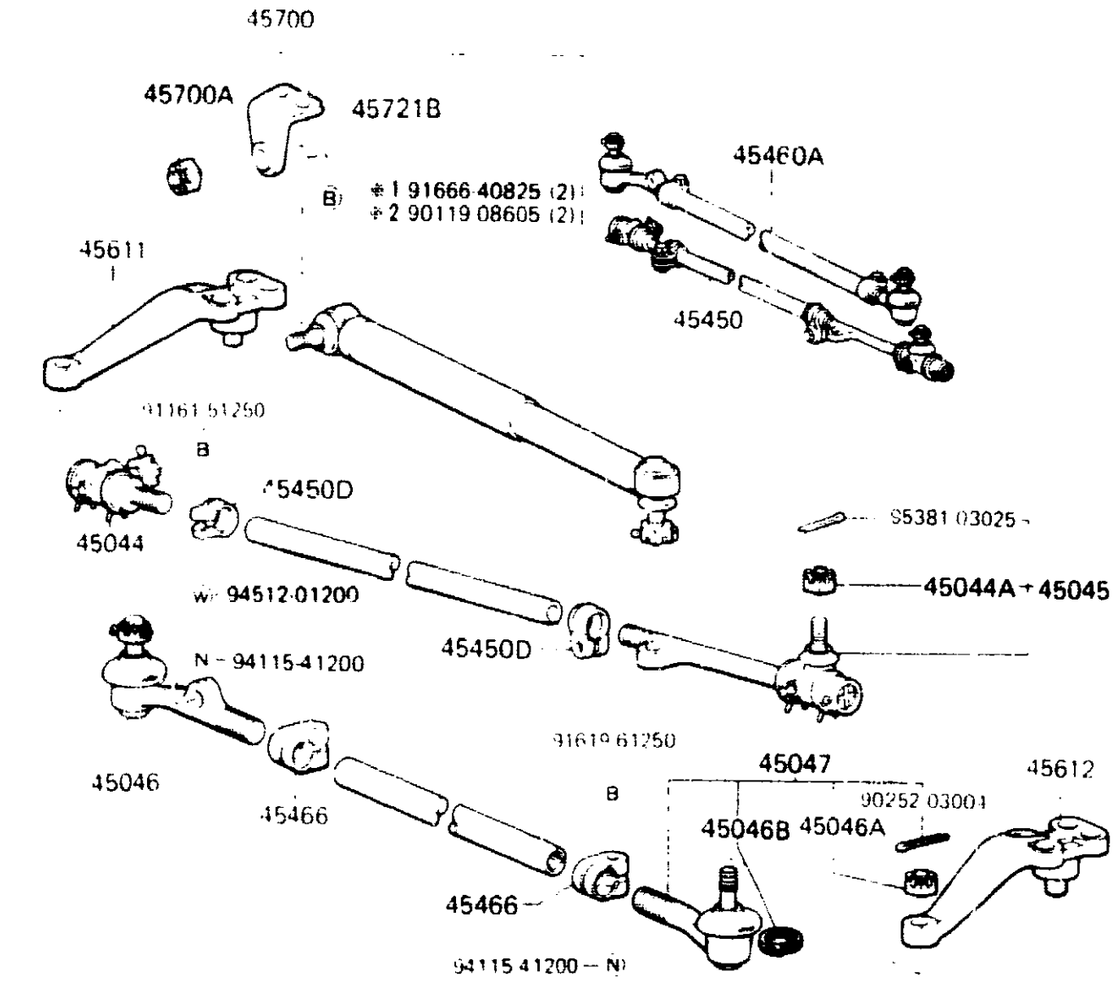


※1 (-8806)
※2 (8806-)

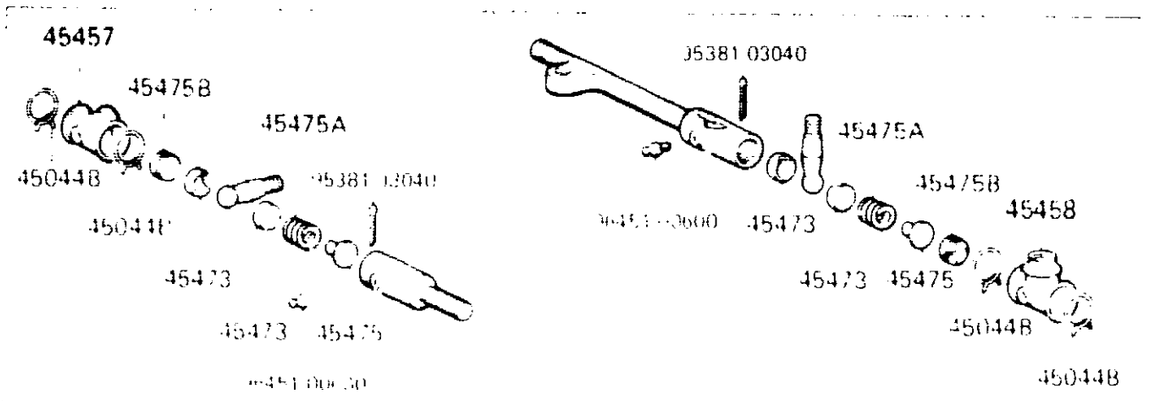

MC E390 F

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	04044	WORM KIT, POWER STEERING					
8708-9001	FJ62			04044-60150-	1		
	04445	GASKET KIT, POWER STEERING GEAR (FOR RECIRCULATING BALL)					
8708-9001	FJ62			04445-60030-	1		
	04455A	GASKET KIT, POWER STEERING CROSS SHAFT OVERHAUL					
8708-9001	FJ62			04455-60020-	1		
	44101D	WASHER, PLATE (FOR STEERING WORM)					
8708-9001	FJ62			90201-30003-	1		
	44101H	BEARING, THRUST NEEDLE ROLLER (FOR STEERING WORM)					
8708-9001	FJ62			90374-30003-	1		
	44101J	RING (FOR STEERING WORM)					
8708-9001	FJ62			90562-48001-	2		
	44104	PLUG SUB-ASSY, ADJUSTER					
8708-9001	FJ62			44104-22011-	1		
	44105	HOUSING SUB-ASSY, VALVE					
8708-9001	FJ62			44105-30060-	1		
	44105A	RING, O (FOR VALVE HOUSING)					
8708-9001	FJ62			90301-32002-	1		
	44105B	RING (FOR VALVE HOUSING)					
8708-9001	FJ62			90562-30002-			

(8708-)

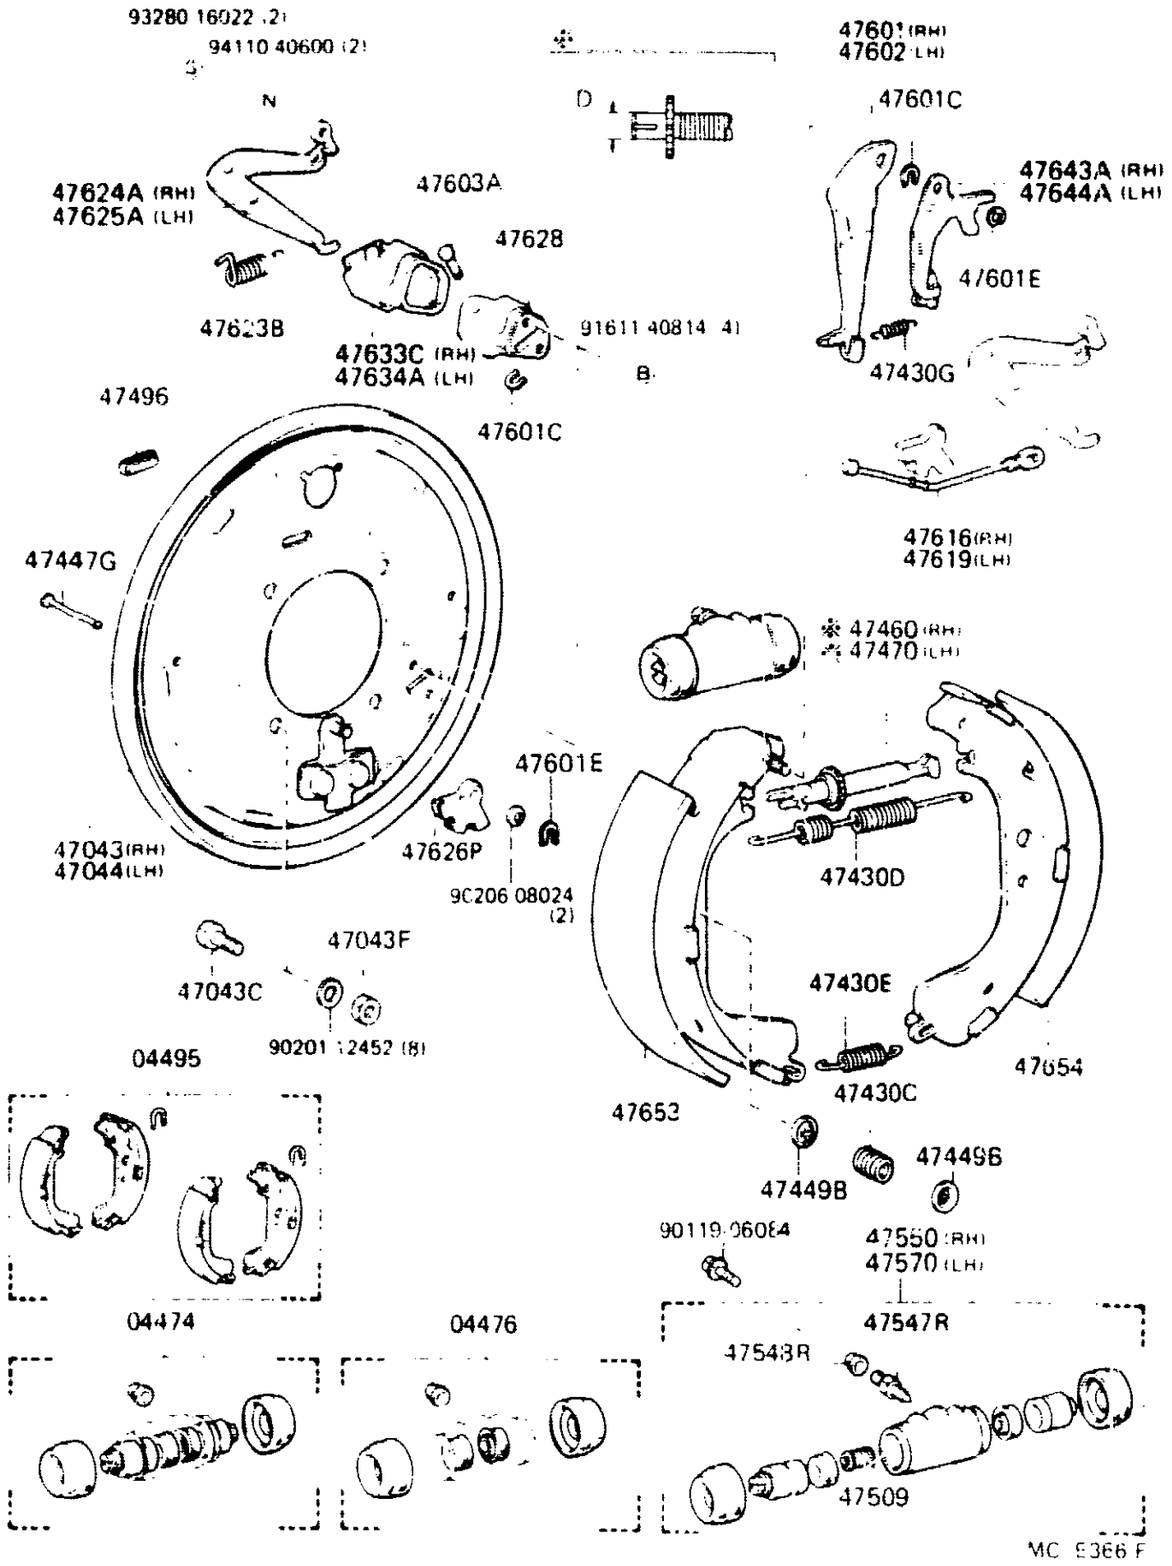

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		04474	CYLINDER KIT, REAR WHEEL					
	8708-9001	FJ62			04474-60010-	2		
		04476	CUP KIT, REAR WHEEL CYLINDER					
	8708-9001	FJ62..WGG			04476-60050-	2		
		04495	SHOE KIT, REAR BRAKE					
	8708-8809	FJ62			# 04495-60010- (04495-60011-)	1 1		
	8809-9001	FJ62..WGG			04495-60011-	1		
		47043	PLATE SUB-ASSY, BRAKE BACKING, REAR RH					
P	8708-9001	FJ62			47043-60050-	1		
B	9001-9001	FJ62..WGG			47043-60090-	1		
		47043C	BOLT (FOR BACKING PLATE TO REAR AXLE HOUSING SETTING)					
	8708-9001	FJ62	L=351.5		90101-12021-	8		
		47043F	NUT (FOR BACKING PLATE TO REAR AXLE HOUSING SETTING)					
	8708-9001	FJ62	FOR BELLCRANK		94110-40600-	2		
	8708-9001	FJ62	FOR BACKING PLATE		94115-71200-	8		
		47044	PLATE SUB-ASSY, BRAKE BACKING, REAR LH					
P	8708-9001	FJ62			47044-60010-	1		
B	9001-9001	FJ62..WGG			47044-60040-	1		
		47430C	SPRING (FOR REAR BRAKE SHOE HOLD DOWN)					
	8708-9001	FJ62			90501-20012-	2		
		47430D	SPRING, TENSION (FOR REAR BRAKE SHOE RETURN)					
	8708-9001	FJ62	RH		90506-26011-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	48811	BAR, STABILIZER, FRONT					
8708-9001	FJ62			48811-60070-	1		
	48815	BUSH, FRONT STABILIZER BAR, NO.1					
8708-9001	FJ62			48815-20060-	2		
	48817	CUSHION, FRONT STABILIZER					
8708-9001	FJ62			48817-30010-	8		
	48817A	RETAINER, CUSHION, NO.1 (FOR FRONT STABILIZER BAR)					
8708-9001	FJ62			90948-02032-	8		
	48817B	RETAINER, CUSHION, NO.2 (FOR FRONT STABILIZER BAR)					
8708-9001	FJ62			90948-02015-	2		
	48817C	COLLAR (FOR STABILIZER BAR)					
8708-9001	FJ62			90387-09006-	2		
	48817F	NUT (FOR FRONT STABILIZER BAR)					
8708-9001	FJ62			94183-60800-	2		
	48823	COVER, STABILIZER LINK (FOR FRONT)					
8708-9001	FJ62			48823-27010-	2		
	48825	BRACKET, STABILIZER, NO.2					
8708-9001	FJ62			48825-60010-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T


	PART NUMBER	LOCATION
	91611-61020-	2B4
	91651-61030-	2A4
	-61040-	2A4
	94110-40600-	2J8
	94115-71200-	2J8
	94183-60800-	2J9
	94184-61200-	2M7
	95332-10024-	5J7
	-10036-	5J7
	95333-06010-	5K7
	-06020-	5C3
	-06030-	5K7
	-06040-	5J7
	-06060-	5J7
	-06080-	5J7
	95411-19930-	4J4
	95441-09340-	4L4
	96111-10500-	4L2
	-10510-	4L2
	-10930-	4F3
		4G3
	96112-10250-	4H3
		4K2
	96132-30600-	2G5
		2H6
	96150-01600-	2J3
	96151-01700-	2E7
	-02000-	2D8
	-02500-	2J2
	96152-00300-	2M6
	96160-00500-	2K8
	-00600-	2K8
	96411-11600-	2B4
	-42500-	1F1
		1J1
	-43000-	1C3
	-45000-	1F1
		1J1
	96431-53628-	1H1
	96432-23614-	1H1
	96711-19010-	2H4
		2K7
	-19013-	2E7
	-19014-	2F7
	-19016-	2D7
	-24023-	2E5
		2G5
	-24045-	2A7
	96940-33005-	3B5
	-33805-	3C9
	-39855-	3B9
P	99132-11075-	3H8
P	-11270-	3C8
P		3F8
	-12034-	3D9
		3E9
P	-12100-	5J8
P	-21270-	3F8
	99352-11175-	1A3
	-11180-	1A3
	99555-10125-	1J4
		1K2
	99556-20095-	3L11
	-30100-	3L11
B	99556-30210-	1H2
	99911-11200-	1A1
	99913-11500-	1A1
	99914-10010-	1A1
	-11214-	1A1
	99915-10700-	1A1

ILLUSTRATED INDEX

J16


ELECTRICAL GROUP (1/2)

3A8 (81-01) 1

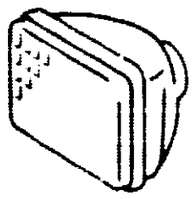


Headlamp

3C8 (81-03) 2

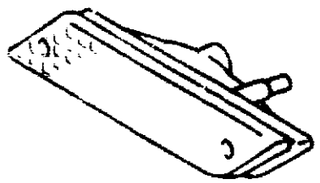


Front Turn Signal Lamp

3D8 (81-04) 3

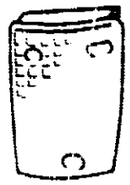


Front Clearance Lamp

3E8 (81-05) 4

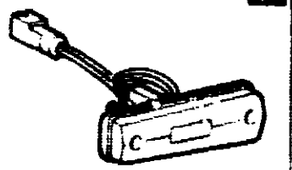


Front Marker Lamp

3F8 (81-11) 5

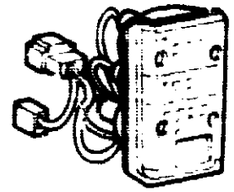


Rear Combination Lamp

3H8 (81-13) 6

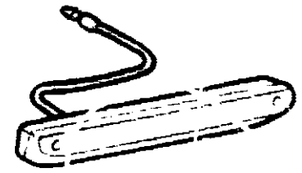


License Plate Lamp

3I8 (81-14) 7

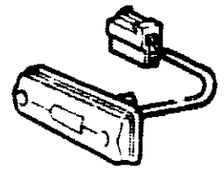

Rear Side Marker Lamp

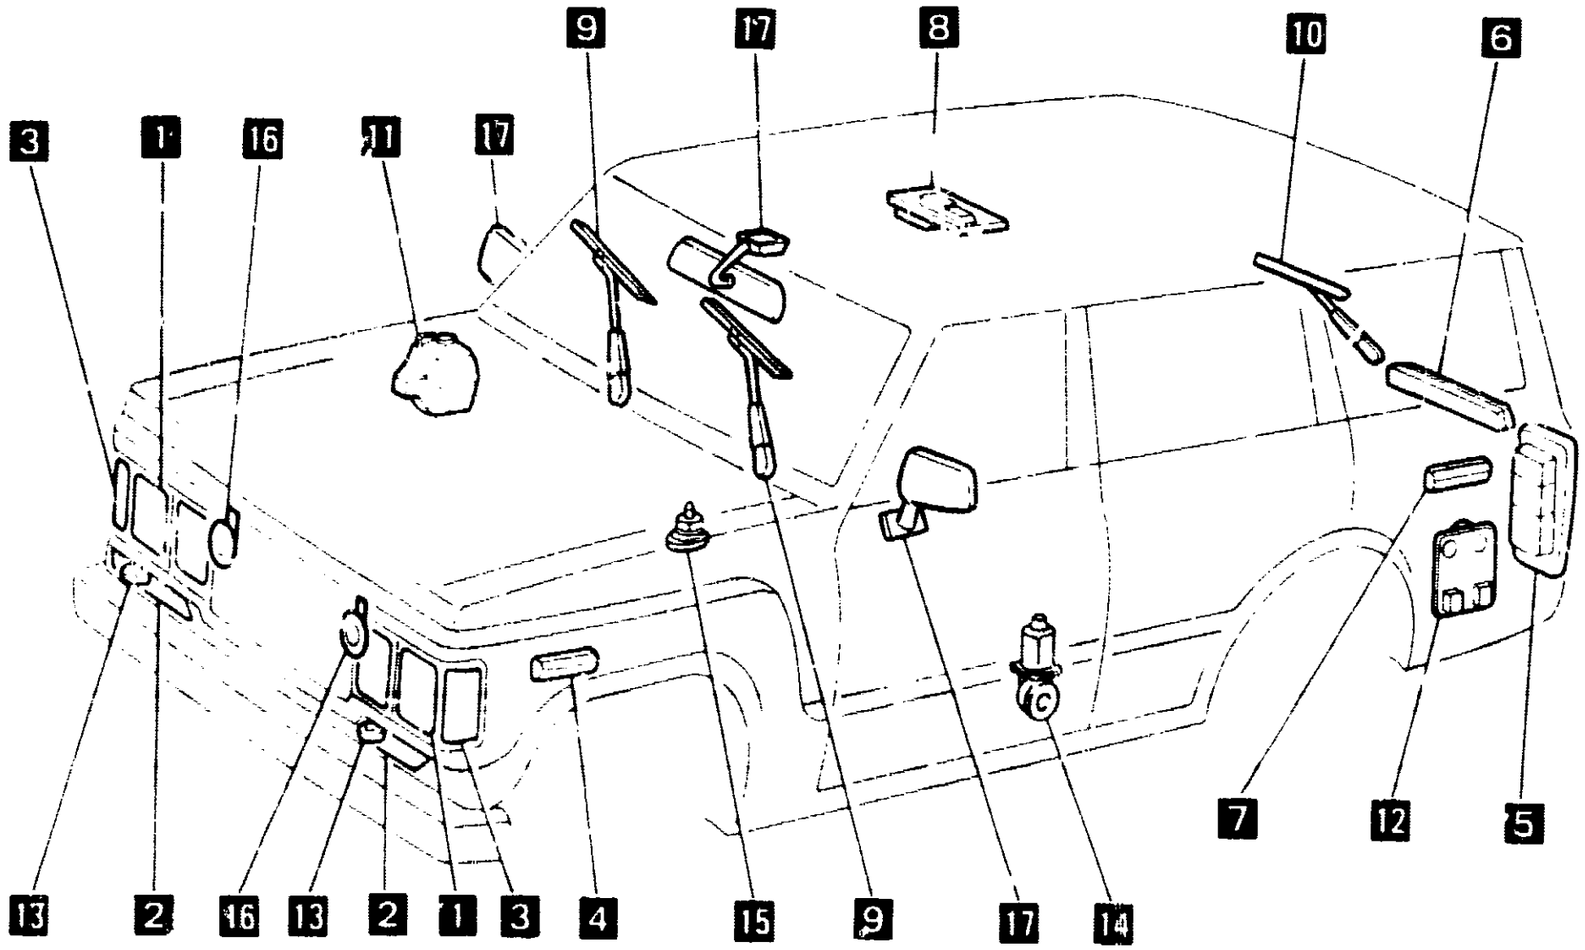


3J8 (81-21) 8




Interior Lamp

3A10 (85-01) 9

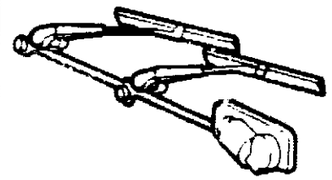


Windshield Wiper

3C10 (85-02) 10

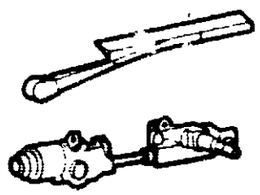


Rear Wiper

3D10 (85-03) 11

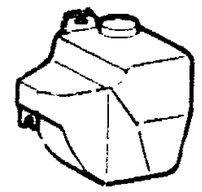

Windshield Washer

3C11 (87-01) 17

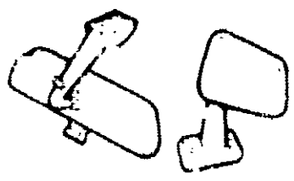


Mirror

3B11 (86-11) 16



Horn

3A11 (86-04) 15

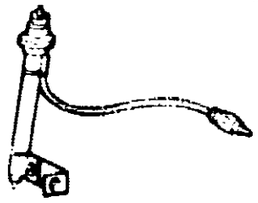


Antenna

3I10 (85-11) 14



Door Motor & Door Solenoid

3G10 (85-05) 13

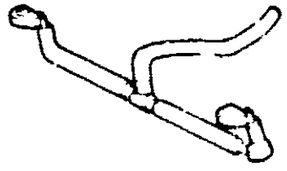

Headlamp Cleaner


3F10 (85-04) 12



Rear Washer

ME 9870

(8708-
A440F

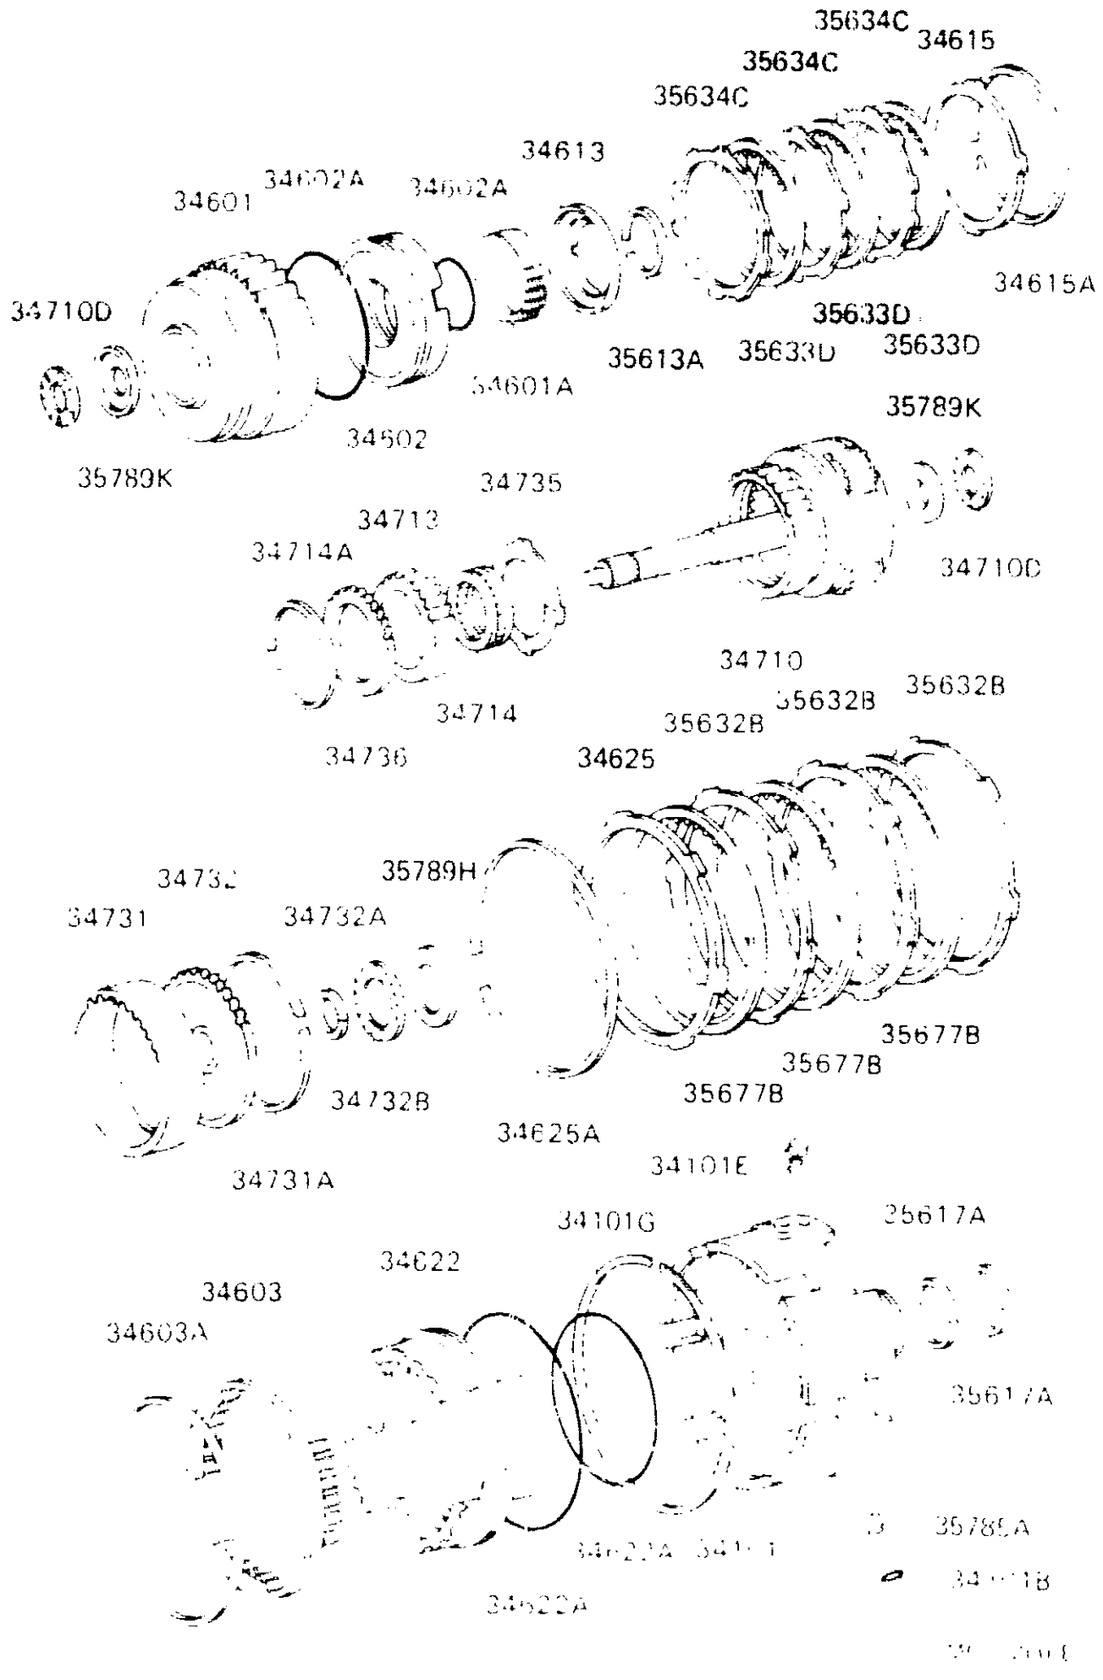


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	34101	CASE SUB-ASSY, OVERDRIVE					
8708-9001	FJ62			34101-60010-	1		
	34101B	RING, O (FOR OVERDRIVE CASE)					
8708-9001	FJ62			30301-09008-	3		
	34101E	BOLT (FOR OVERDRIVE CASE & TRANSAXLE CASE SETTING)					
8708-9001	FJ62	*10-1.25X20.5-13		90105-10096-	3		
	34101G	RING, HOLE SNAP (FOR OVERDRIVE CASE)					
8708-9001	FJ62			9052 -99043-	1		
	34601	DRUM SUB-ASSY, OVERDRIVE DIRECT CLUTCH					
8708-9001	FJ62			34601-36010-	1		
	34601A	SPRING, COMPRESSION (FOR OVERDRIVE DIRECT CLUTCH)					
8708-9001	FJ62			90501-16087-	24		
	34602	PISTON SUB-ASSY, OVERDRIVE DIRECT CLUTCH					
8708-9001	FJ62			34602-36010-	1		
	34602A	RING, O (FOR OVERDRIVE DIRECT CLUTCH PISTON)					
8708-9001	FJ62	INNER		90301-59003-	1		
8708-9001	FJ62	OUTER		90301-99027-	1		
	34603	SPRING SUB-ASSY, OVERDRIVE BRAKE RETURN					
8708-9001	FJ62			356[illegible] 56010-	1		
	34603A	RING, HOLE SNAP (FOR OVERDRIVE BRAKE RETURN SPRING)					
8708-9001	FJ62			90521-99021-	1		

* - P× - : Outside diameter Pitch : Belt width Thread length

(8708-)
A440F

ILLUST.NO. 10F5

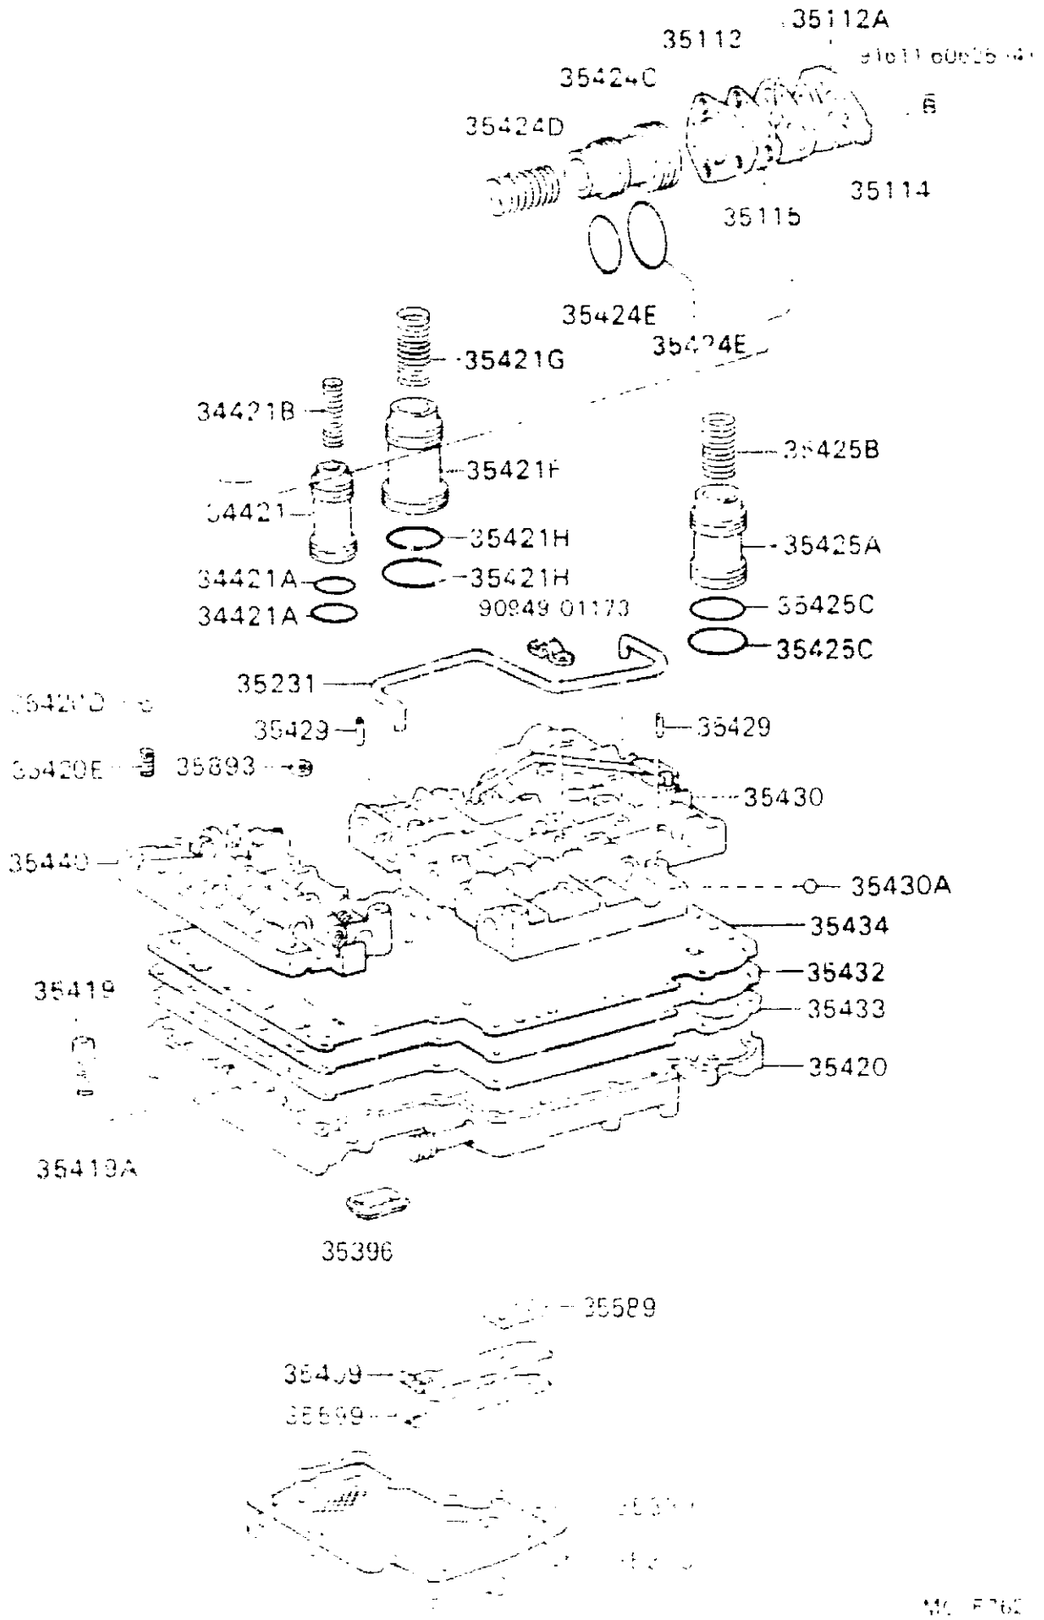


MC E265

(8708-)
A440F

ILLUST.NO. 20F5


Front Upper Valve Body

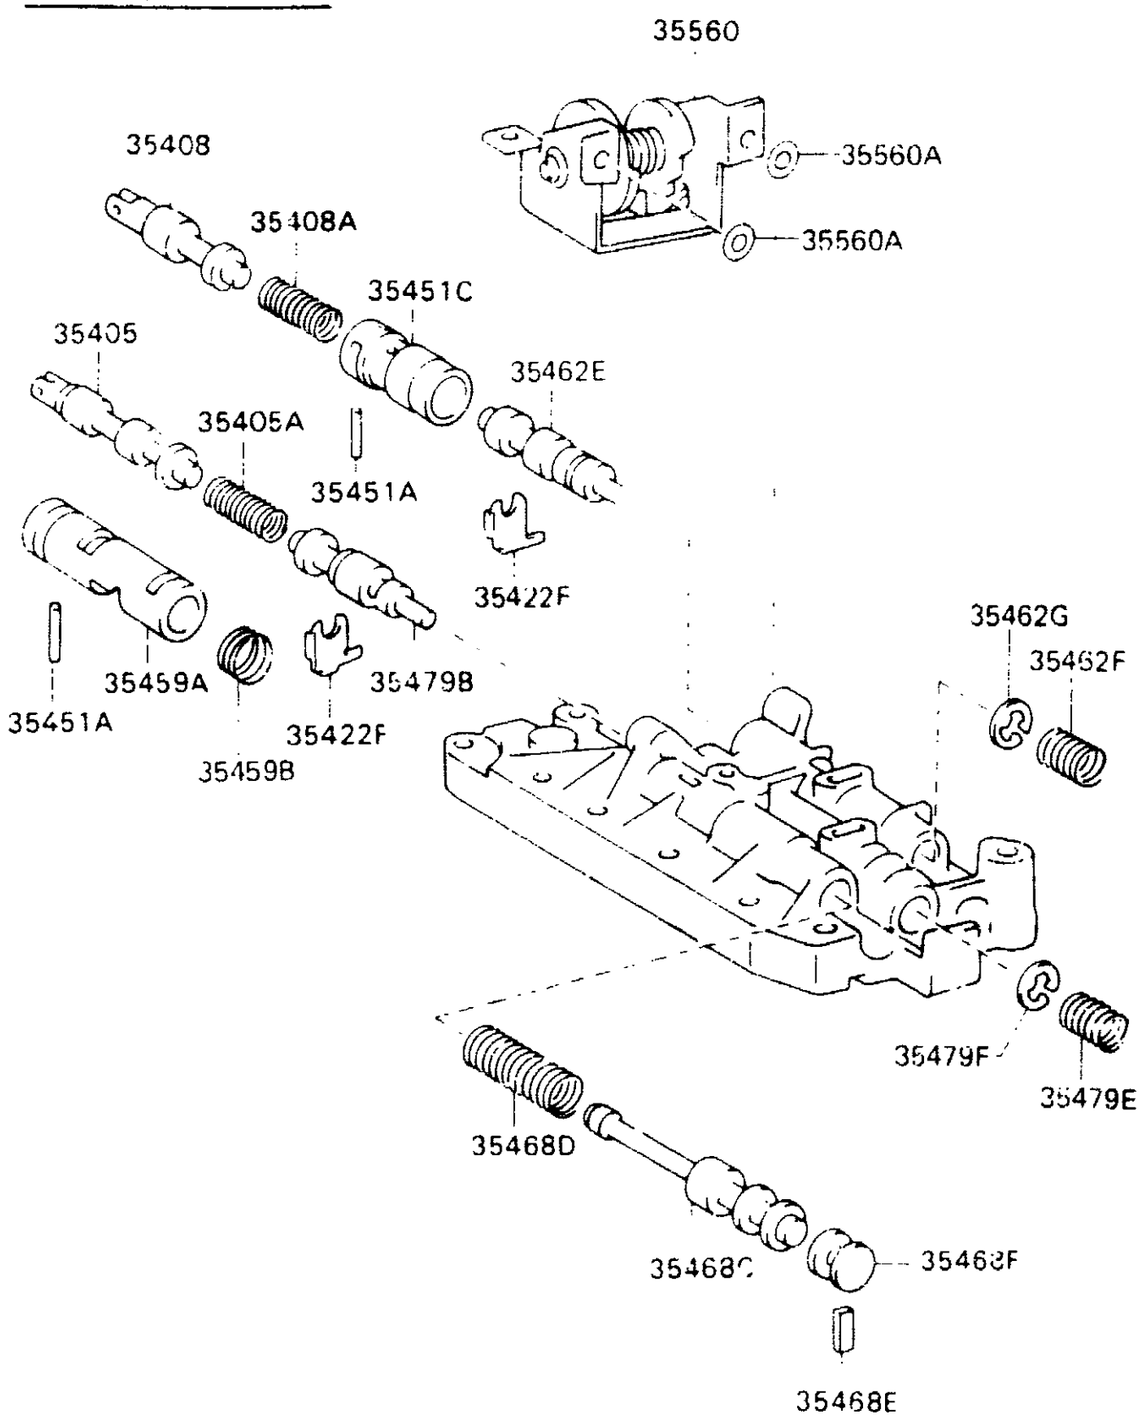

MC E265


FIG. 35-14 OIL COOLER & TUBE (ATH)

(8708-)

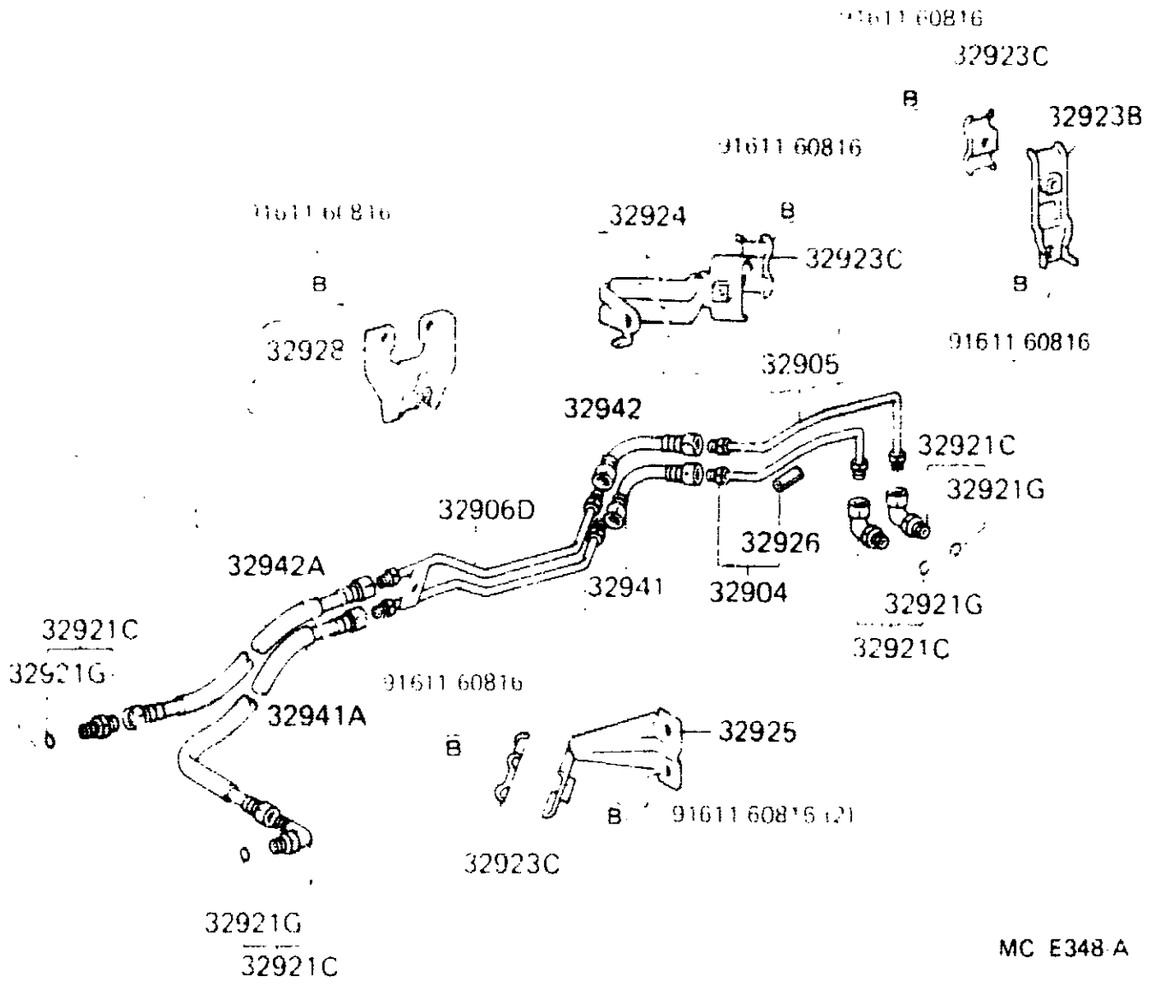


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	32904	**TUBE SUB-ASSY, OIL COOLER INLET, NO.1**					
8708-9001	FJ62			32904-60012-	1		
	32905	**TUBE SUB-ASSY, OIL COOLER OUTLET, NO.1**					
8708-9001	FJ62			32905-60012-	1		
	32906D	**TUBE SUB-ASSY, OIL COOLER, NO.2**					
8708-9001	FJ62			32906-60012-	1		
	32921C	**UNION (FOR OIL COOLER TUBE)**					
8708-8711	FJ62	RADIATOR SIDE INLET		90404-16022-	1		
8708-9001	FJ62	RADIATOR SIDE OUTLET		90407-14005-	1		
8708-9001	FJ62	TRANSMISSION SIDE		90407-16006-	2		
8711-9001	FJ62	RADIATOR SIDE INLET		90407-16013-	1		
	32921G	**RING, O (FOR OIL COOLER TUBE UNION)**					
8708-9001	FJ62			90301-11006-	2		
	32923B	**CLAMP, OIL COOLER TUBE, NO.1**					
8708-9001	FJ62			32923-36010-	1		
	32923C	**CLAMP, OIL COOLER TUBE, NO.4**					
8708-9001	FJ62			90462-12038-	3		
	32924	**CLAMP, OIL COOLER TUBE, NO.2**					
8708-9001	FJ62			32924-60011-	1		
	32925	**CLAMP, OIL COOLER TUBE, NO.3**					
8708-9001	FJ62			32925-60030-	1		


(8708-)

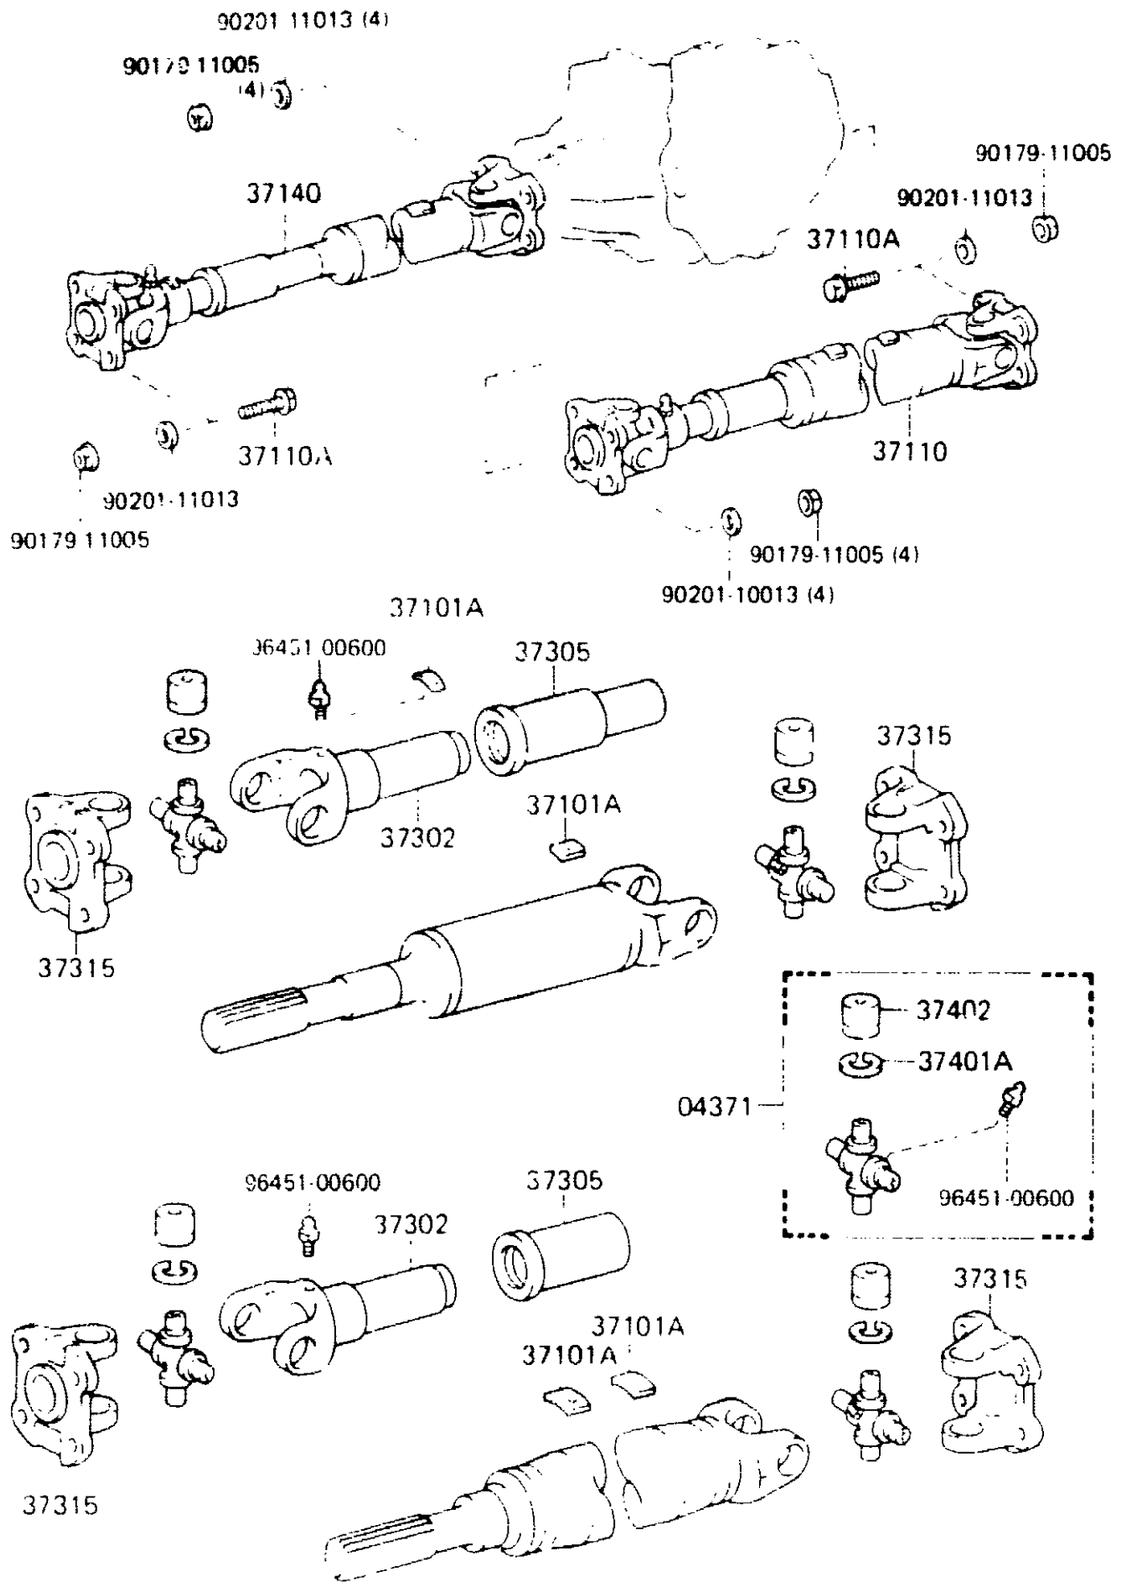



PROD. DATE	MODELS	DESCRIPTION	K/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	04371	SPIDER KIT, UNIVERSAL JOINT (FOR PROPELLER SHAFT)					
8708-9001	FJ62			04371-36030-	2		
	37101A	PIECE, BALANCE (FOR PROPELLER SHAFT)					
8708-9001	FJ62	10G		90937-01132-	X		
8708-9001	FJ62	2G		90937-01147-	X		
8708-9001	FJ62	4G		90937-01148-	X		
8708-9001	FJ62	6G		90937-01149-	X		
8708-9001	FJ62	8G		90937-01150-	X		
8708-9001	FJ62	12G		90937-01151-	X		
8708-9001	FJ62	14G		90937-01152-	X		
8708-9001	FJ62	4G, FR SLEEVE YOKE		90937-01184-	X		
8708-9001	FJ62	8G, FR SLEEVE YOKE		90937-01191-	X		
8708-9001	FJ62	12G, FR SLEEVE YOKE		90937-01192-	X		
8708-9001	FJ62	16G		90937-01193-	X		
8708-9001	FJ62	20G		90937-01194-	X		
8708-9001	FJ62	36G		90937-01268-	X		
8708-9001	FJ62	40G		90937-01269-	X		
	37110	SHAFT ASSY, PROPELLER					
8708-9001	FJ62			37110-60410-	1		
	37110A	BOLT (FOR PROPELLER SHAFT & DIFFERENTIAL SETTING)					
8708-9001	FJ62			90105-11013-	4		
	37140	SHAFT ASSY, PROPELLER, FRONT					
8708-9001	FJ62			37140-60290-	1		

(8708-)

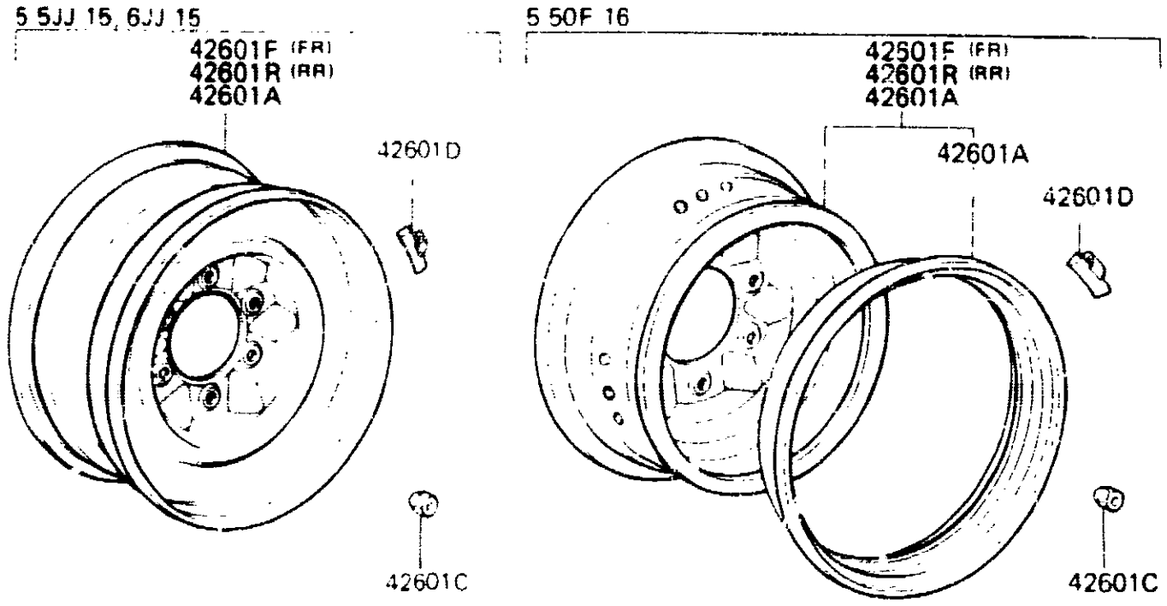

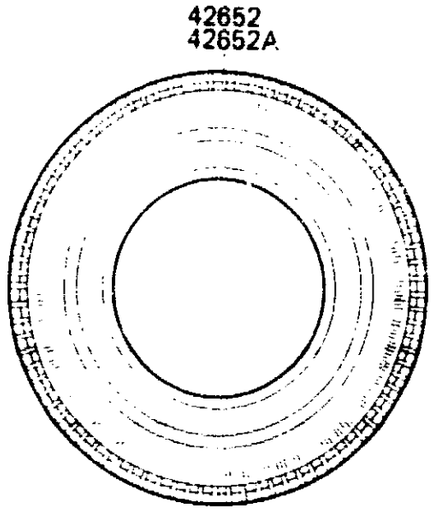



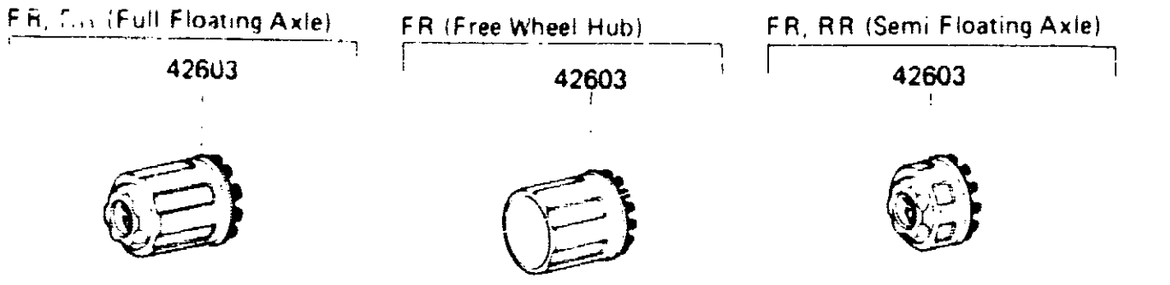


MC E383 A

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		42601A WHEEL, DISC (FOR SPARE)						
A	8708-9001	FJ62	6JJ-15, CHROM PLATED		42601-60221-	1		
		42601C NUT, HUB (FOR AXLE)						
	8708-9001	FJ62			90942-01047-	24		
		42601D WEIGHT, BALANCE (FOR DISC WHEEL)						
	8708-9001	FJ62	20G		90942-03079-	X		
	8708-9001	FJ62	30G		90942-03080-	X		
	8708-9001	FJ62	40G		90942-03081-	X		
	8708-9001	FJ62	50G		90942-03082-	X		
	8708-9001	FJ62	60G		90942-03083-	X		
	8708-9001	FJ62	70G		90942-03084-	X		
	8708-9001	FJ62	80G		90942-03085-	X		
	8708-9001	FJ62	100G		90942-03086-	X		
	8708-9001	FJ62	10G		90942-03107-	X		
		42601F WHEEL, DISC (FOR FRONT)						
	8708-9001	FJ62	6JJ-15, CHROM PLATED		42601-60221-	2		
		42601R WHEEL, DISC (FOR REAR)						
	8708-9001	FJ62	6JJ-15, CHROM PLATED		42601-60221-	2		
		42603 ORNAMENT SUB-ASSY, WHEEL HUB						
	8708-9001	FJ62	FR, w/*FWH		42603-35080-	2		
	8708-9001	FJ62	RR, *FFA		≠ 42603-60012- (42603-60013-)	2 2		
	8708-9001	FJ62	RR, *SFA		42603-60052-	2		

*FWH = Free Wheel Hub *SFA = Semi-Floating Axle *FFA = Full-Floating Axle

(8708-)

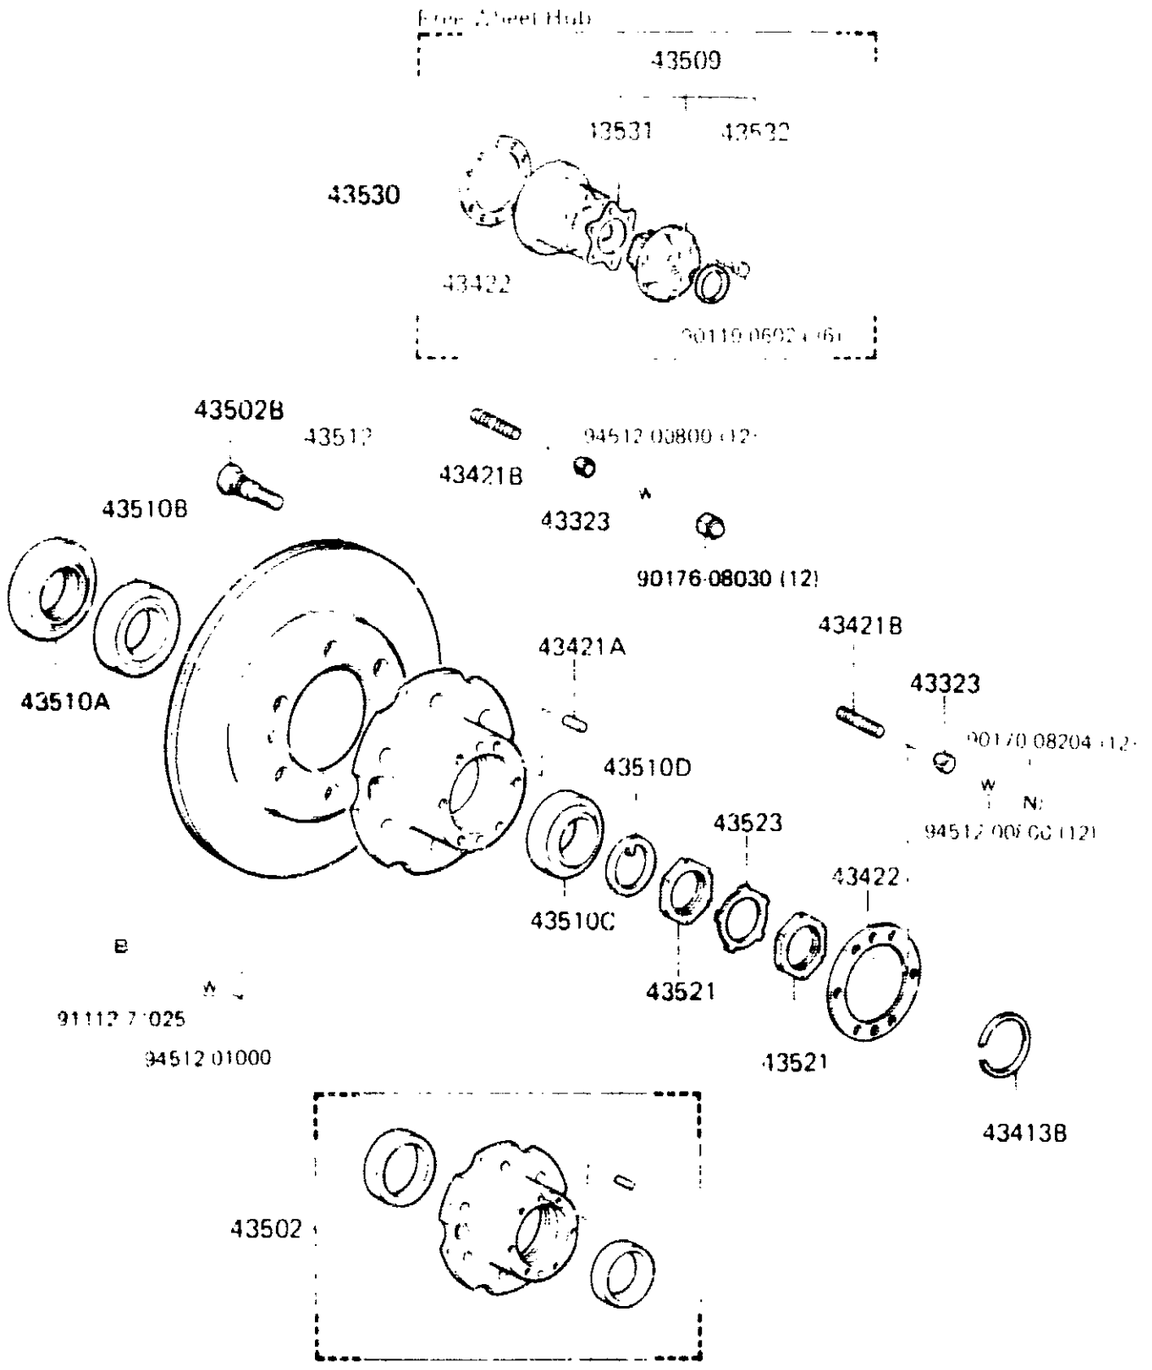

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	43323	WASHER, CONE (FOR FRONT AXLE SHAFT)					
8708-9001	FJ62			42323-60010-	12		
	43413B	RING, DRIVE SHAFT SNAP					
8708-9001	FJ62			90520-31001-	2		
	43421A	PIN, STRAIGHT (FOR OUTER SHAFT FLANGE)					
8708-9001	FJ62			90250-07057-	4		
	43421B	BOLT, STUD (FOR OUTER SHAFT FLANGE)					
8708-9001	FJ62			90116-08325-	12		
	43422	GASKET, FRONT AXLE OUTER SHAFT FLANGE					
8708-9001	FJ62			43422-60020-	2		
	43502	HUB SUB-ASSY, FRONT AXLE					
8708-9001	FJ62			43502-60020-	2		
	43502B	BOLT, HUB (FOR FRONT AXLE)					
8708-9001	FJ62			90942-02053-	12		
	43509	COVER SUB-ASSY, FREE WHEEL HUB					
8708-9001	FJ62			43509-60015-	2		
	43510A	SEAL, OIL (FOR FRONT AXLE HUB)					
8708-9001	FJ62			90311-62001-	2		
	43510B	BEARING, TAPERED ROLLER (FOR FRONT AXLE INNER BEARING)					
8708-9001	FJ62			90368-49084-	2		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	44107	HOUSING SUB-ASSY, POWER STEERING GEAR					
8708-9001	FJ62			44107-60060-	1		
	44107A	BEARING, NEEDLE ROLLER (FOR POWER STEERING GEAR HOUSING)					
8708-9001	FJ62			90364-32003-	2		
	44107B	RING, O (FOR POWER STEERING GEAR HOUSING)					
8708-9001	FJ62	OD=40.7, T=3.5		90301-33002-	1		
8708-9001	FJ62	OD=70.0, T=2.5		90301-65145-	1		
8708-9001	FJ62	OD=13.6, T=1.9		96711-19010-	1		
	44107C	RING (FOR POWER STEERING GEAR HOUSING)					
8708-9001	FJ62	OD=3[illegible].1, T=4.0		90562-31002-	1		
8708-9001	FJ62	OD=4[illegible].0, T=3.0		90562-32002-	1		
	44107D	RING, HOLE SNAP (FOR POWER STEERING GEAR HOUSING)					
8708-9001	FJ62			90521-44002-	1		
	44107E	SEAL, OIL (FOR POWER STEERING GEAR HOUSING)					
8708-9001	FJ62			90312-32002-	1		
	44108	COVER SUB-ASSY, SIDE					
8708-9001	FJ62			44108-60010-	1		
	44108A	RING, O (FOR SIDE COVER)					
8708-9001	FJ62			90301-64002-	1		
	44110	GEAR ASSY, POWER STEERING					
8708-9001	FJ62			44110-60160-			

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	44111	SHAFT, CROSS					
8708-9001	FJ62			44111-60040-	1		
	44114A	RING (FOR POWER PISTON NUT)					
8708-9001	FJ62			90562-67002-	1		
	44114B	RING, O (FOR POWER PISTON NUT)					
8708-9001	FJ62			90301-64005-	1		
	44114C	BALL (FOR POWER PISTON NUT)					
8708-9001	FJ62			90360-06021-	44		
	44115	GUIDE, BALL					
8708-9001	FJ62			44115-30040-	2		
	44116	CLAMP, BALL GUIDE					
8708-9001	FJ62			44116-30040-	1		
	44141A	RING, O (FOR ADJUSTER PLUG)					
8708-9001	FJ62			90301-51001-	1		
	44141B	SEAL, OIL (FOR ADJUSTER PLUG)					
8708-9001	FJ62			90311-19002-	1		
	44141C	BEARING (FOR ADJUSTER PLUG)					
8708-9001	FJ62			90369-22004-	1		
	44142	NUT, LOCK					
8708-9001	FJ62			44142-22010-			

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	47430D SPRING, TENSION (FOR REAR BRAKE SHOE RETURN) CONTINUED						
8708-9001	FJ62	LH		90506-26014-	1		
	47430E SPRING, TENSION (FOR REAR BRAKE SHOE RETURN)						
8708-9001	FJ62			90506-18031-	1		
	47430G SPRING, TENSION (FOR REAR BRAKE AUTOMATIC ADJUST LEVER)						
8708-9001	FJ62			90506-12031-	1		
	47447G PIN, SHOE HOLD DOWN SPRING (FOR REAR BRAKE)						
8708-9001	FJ62			47447-60010-	2		
	47449B CUP, SHOE HOLD DOWN SPRING (FOR REAR BRAKE)						
8708-9001	FJ62			47449-30020-	4		
	47460 ADJUSTER ASSY, SHOE, RH (FOR REAR BRAKE)						
8708-9001	FJ62			47061-60011-	1		
	47470 ADJUSTER ASSY, SHOE, LH (FOR REAR BRAKE)						
8708-9001	FJ62			47062-60011-	1		
	47496 PLUG, HOLE (FOR REAR BRAKE)						
8708-9001	FJ62			47491-20011-	1		
	47509 SPRING SUB-ASSY, REAR WHEEL CYLINDER PISTON						
8708-9001	FJ62			47509-60010-	2		
	47547R PLUG, BLEEDER (FOR DRUM BRAKE, REAR)						
8708-9001	FJ62			47547-60020-	2		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	47548R CAP, BLEEDER PLUG (FOR DRUM BRAKE, REAR)						
8708-9001	FJ62			31478-30010-	2		
	47550 CYLINDER ASSY, REAR WHEEL BRAKE (FOR RH, FRONT OR UPPER)						
8708-9001	FJ62			47550-60120-	2		
	47570 CYLINDER ASSY, REAR WHEEL BRAKE (FOR LH, FRONT OR UPPER)						
8708-9001	FJ62			47550-60120-	2		
	47601 LEVER SUB-ASSY, PARKING BRAKE SHOE, RH (FOR REAR BRAKE)						
8708-9001	FJ62			47611-60010-	1		
	47601C WASHER, C (FOR REAR BRAKE)						
8708-9001	FJ62	T=1.2		90213-06013-	2		
8708-9001	FJ62	T=1.6		90213-07010-	1		
	47601E RING, E (FOR REAR BRAKE)						
8708-9001	FJ62	FOR ADJUST LEVER		96160-00500-	1		
8708-9001	FJ62	FOR SEGMENTAL PULLEY		96160-00600-	2		
	47602 LEVER SUB-ASSY, PARKING BRAKE SHOE, LH (FOR REAR BRAKE)						
8708-9001	FJ62			47612-60010-	1		
	47603A PIN, W/HOLE (FOR REAR BRAKE)						
8708-9001	FJ62			90249-08068-	2		
	47616 WIRE, PARKING BRAKE, RH						
8708-9001	FJ62			47616-60010-	2		

(8708-)

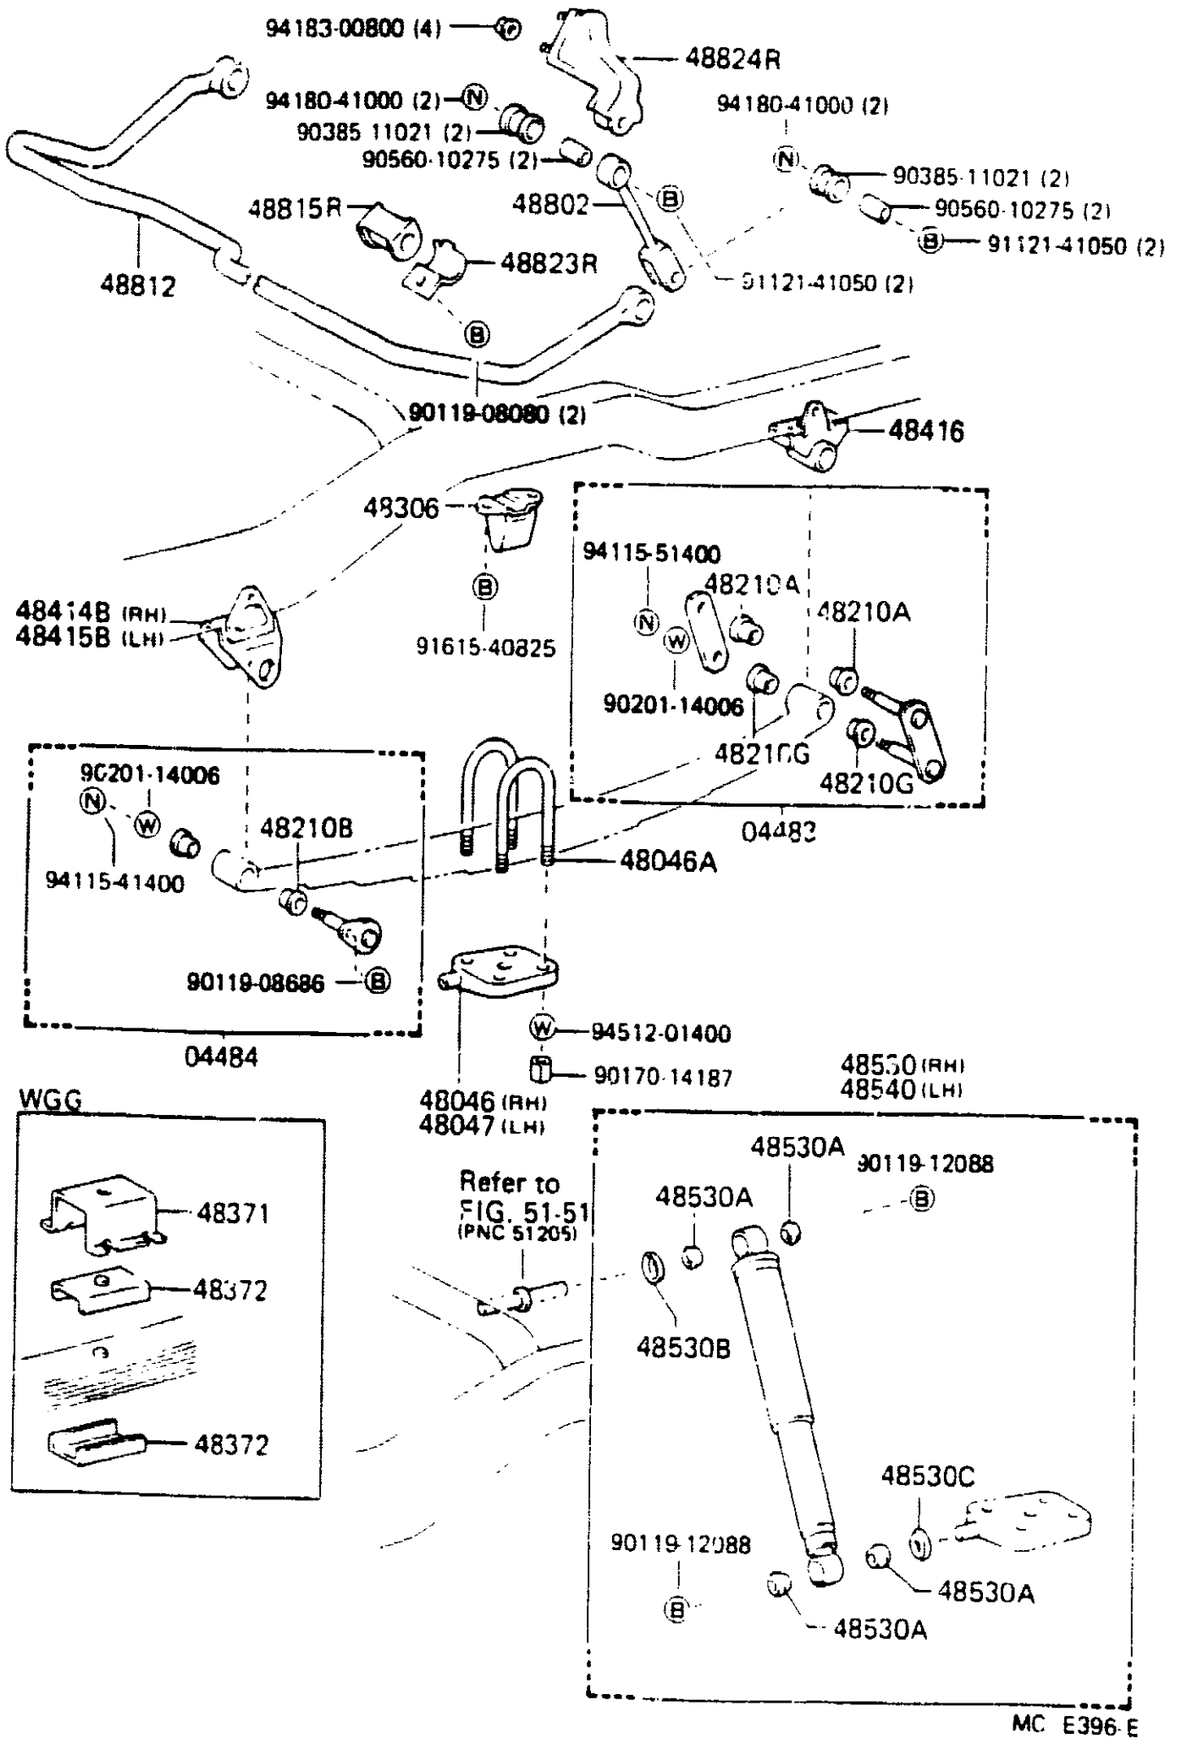

MC E396-E

(8708-)

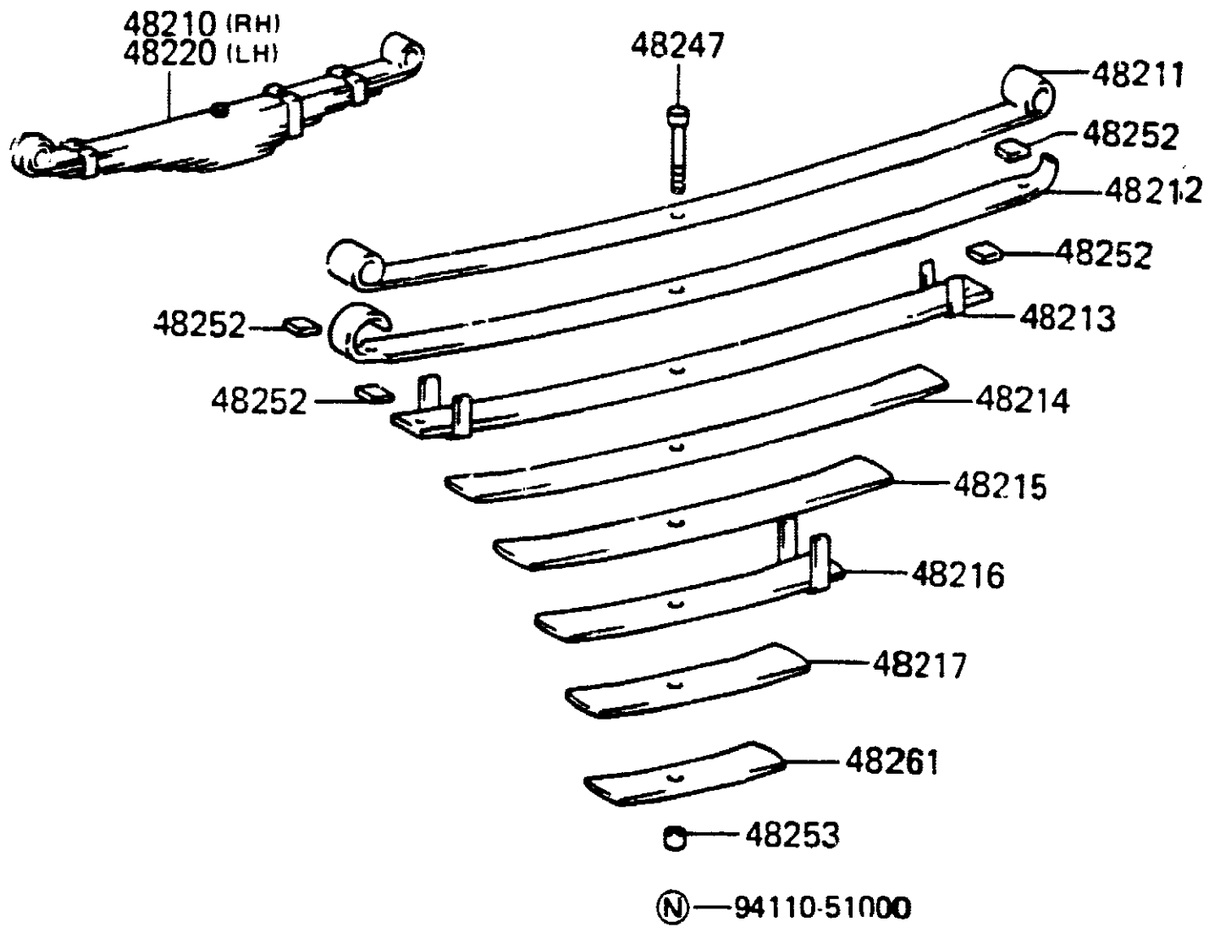

MC F457

ILLUSTRATED INDEX


K16

1 3K8 (82–01)



Battery & Cable

2 3L8 (82–02)

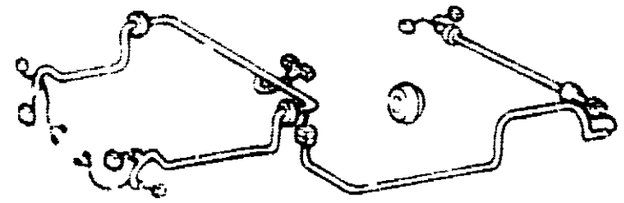


Wiring & Clamp

3 3C9 (83–01)




Meter

4 3E9 (83–02)

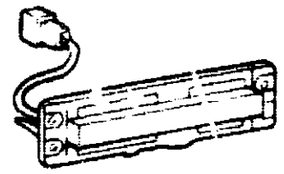


Indicator

5 3F9 (84–01)

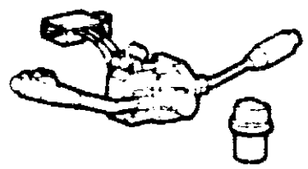


Switch & Relay

6 3L9 (84–04)

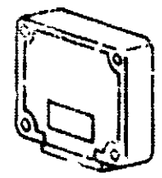


EFI

ELECTRICAL GROUP (2/2)

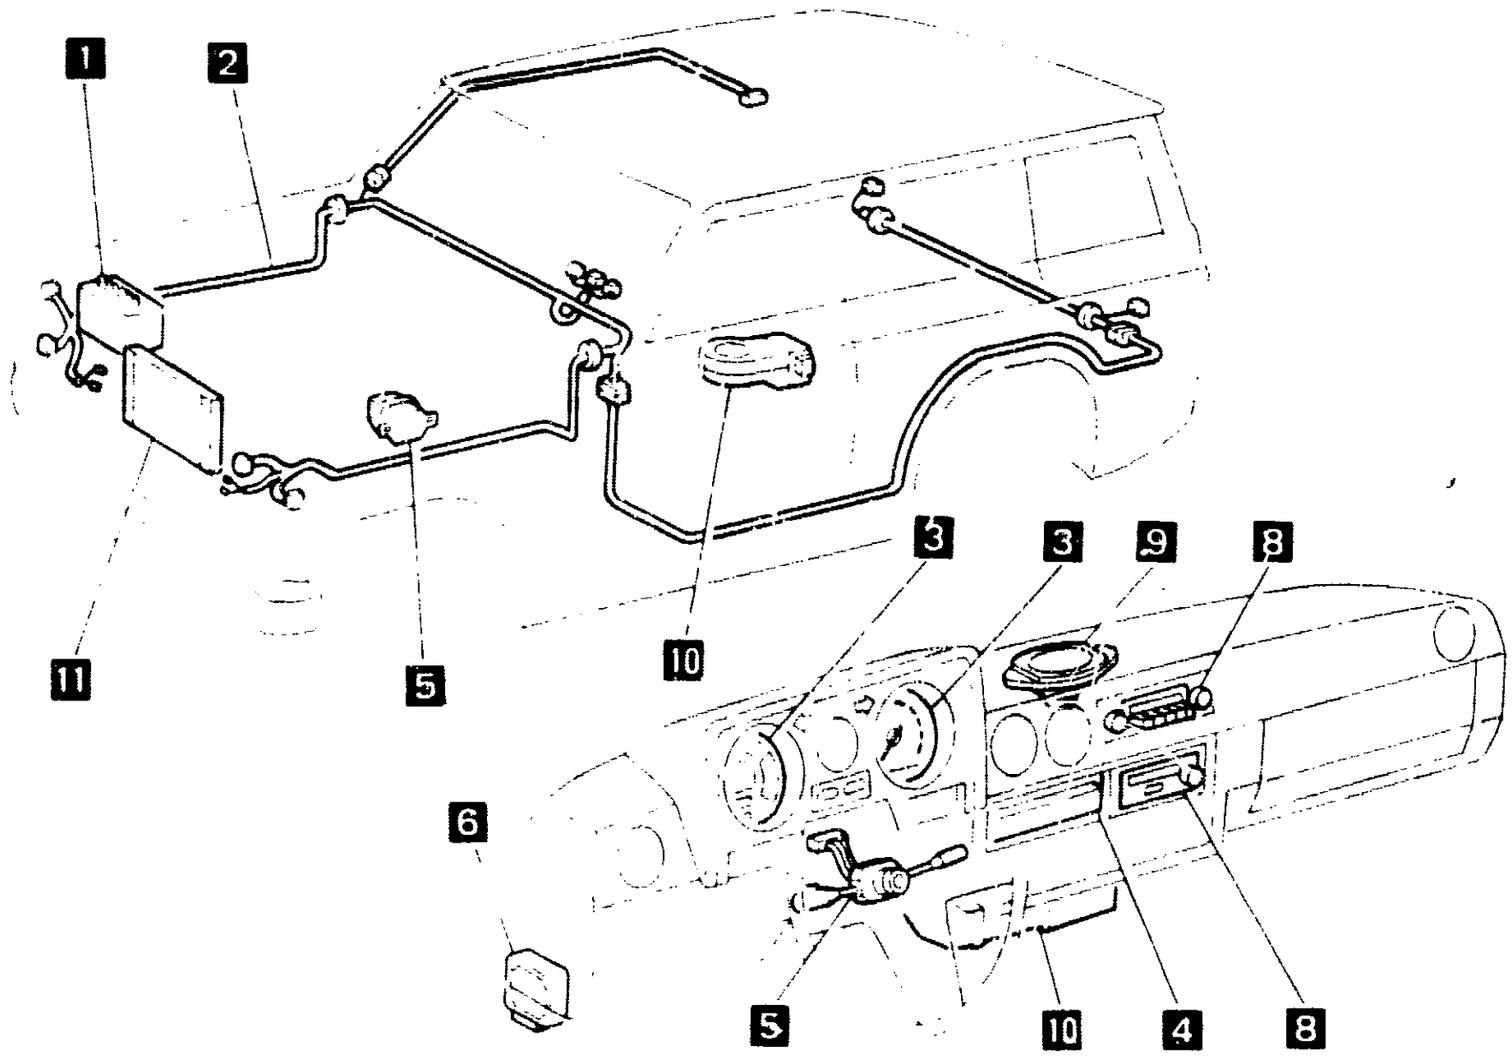

8 3J10 (86–01)

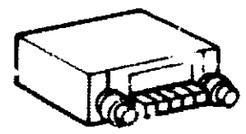

Radio & Tape Player


3L10 (86–02) **9**



Speaker


10

11 3K11 (87–16)

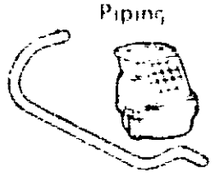


Piping

3I11 (87–15) Duct

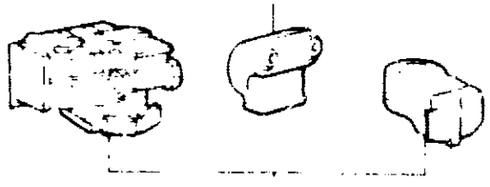

3M11 (87–18) Piping

3A12 (87–19) Compressor

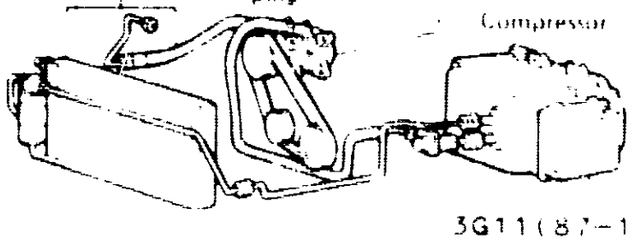

3G11 (87–14) Unit

3E11 (87–12) Duct


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		34613	SEAT, OVERDRIVE DIRECT CLUTCH RETURN SPRING					
	8708-9001	FJ62			34613-36010-			
		34615	FLANGE, OVERDRIVE CLUTCH					
B	8708-9001	FJ62	T=5.0		35675-36010-			
		34615A	RING, HOLE SNAP (FOR OVERDRIVE CLUTCH FLANGE)					
	8708-9001	FJ62			90521-99017-			
		34622	PISTON, OVERDRIVE BRAKE					
	8708-9001	FJ62			35621-36010-	1		
		34622A	RING, O (FOR OVERDRIVE BRAKE PISTON)					
	8708-9001	FJ62	OUTER		90301-99030-	1		
	8708-9001	FJ62	INNER		90301-99031-	1		
		34625	FLANGE, OVERDRIVE BRAKE, NO.1					
B	8708-9001	FJ62	T=5.0		35676-36010-	1		
		34625A	RING, HOLE SNAP (FOR OVERDRIVE BRAKE FLANGE)					
	8708-9001	FJ62			90521-99021-	1		
		34710	GEAR ASSY, OVERDRIVE PLANETARY					
	8708-9001	FJ62			34710-36010-	1		
		34710D	BEARING, THRUST NEEDLEROLLER (FOR OVERDRIVE PLANETARY GEAR)					
	8708-9001	FJ62	RR		90374-25004-			
	8708-9001	FJ62	[illegible]		90374-28007-			
		34713	RACE, 1 WAY CLUTCH OUTER (FOR OVERDRIVE)					
	8708-9001	FJ62			34713-36010-			

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		34714	CLUTCH, 1 WAY (FOR OVERDRIVE)					
	8708-9001	FJ62			35791-36010-	1		
		34714A	RING, HOLE SNAP (FOR 1 WAY CLUTCH)					
	8708-9001	FJ62			90521-90002-	1		
		34731	GEAR, OVERDRIVE PLANETARY RING					
	8708-9001	FJ62			34731-36010-	1		
		34731A	RING, HOLE SNAP (FOR OVERDRIVE PLANETARY RING GEAR)					
	8708-9001	FJ62			90521-99019-	1		
		34732	FLANGE, OVERDRIVE PLANETARY RING GEAR					
	8708-9001	FJ62			34732-36010-	1		
		34732A	RING, OIL SEAL (FOR OVERDRIVE PLANETARY RING GEAR FLANGE)					
	8708-9001	FJ62			35712-36010-	1		
		34732B	BEARING, THRUST (FOR OVERDRIVE PLANETARY RING GEAR FLANGE)					
	8708-9001	FJ62			90374-34001-	1		
		34735	WASHER, OVERDRIVE PLANETARY GEAR THRUST, NO.1					
	8708-9001	FJ62			34737-36010-	1		
		34736	WASHER, OVERDRIVE PLANETARY GEAR THRUST, NO.2					
	8708-9001	FJ62			34738-36010-	1		
		35613A	RING, SHAFT SNAP (FOR OVERDRIVE DIRECT CLUTCH)					
	8708-9001	FJ62			[illegible]			

(8708-)
A440F

ILLUST.NO. 30F5


Rear Upper Valve Body

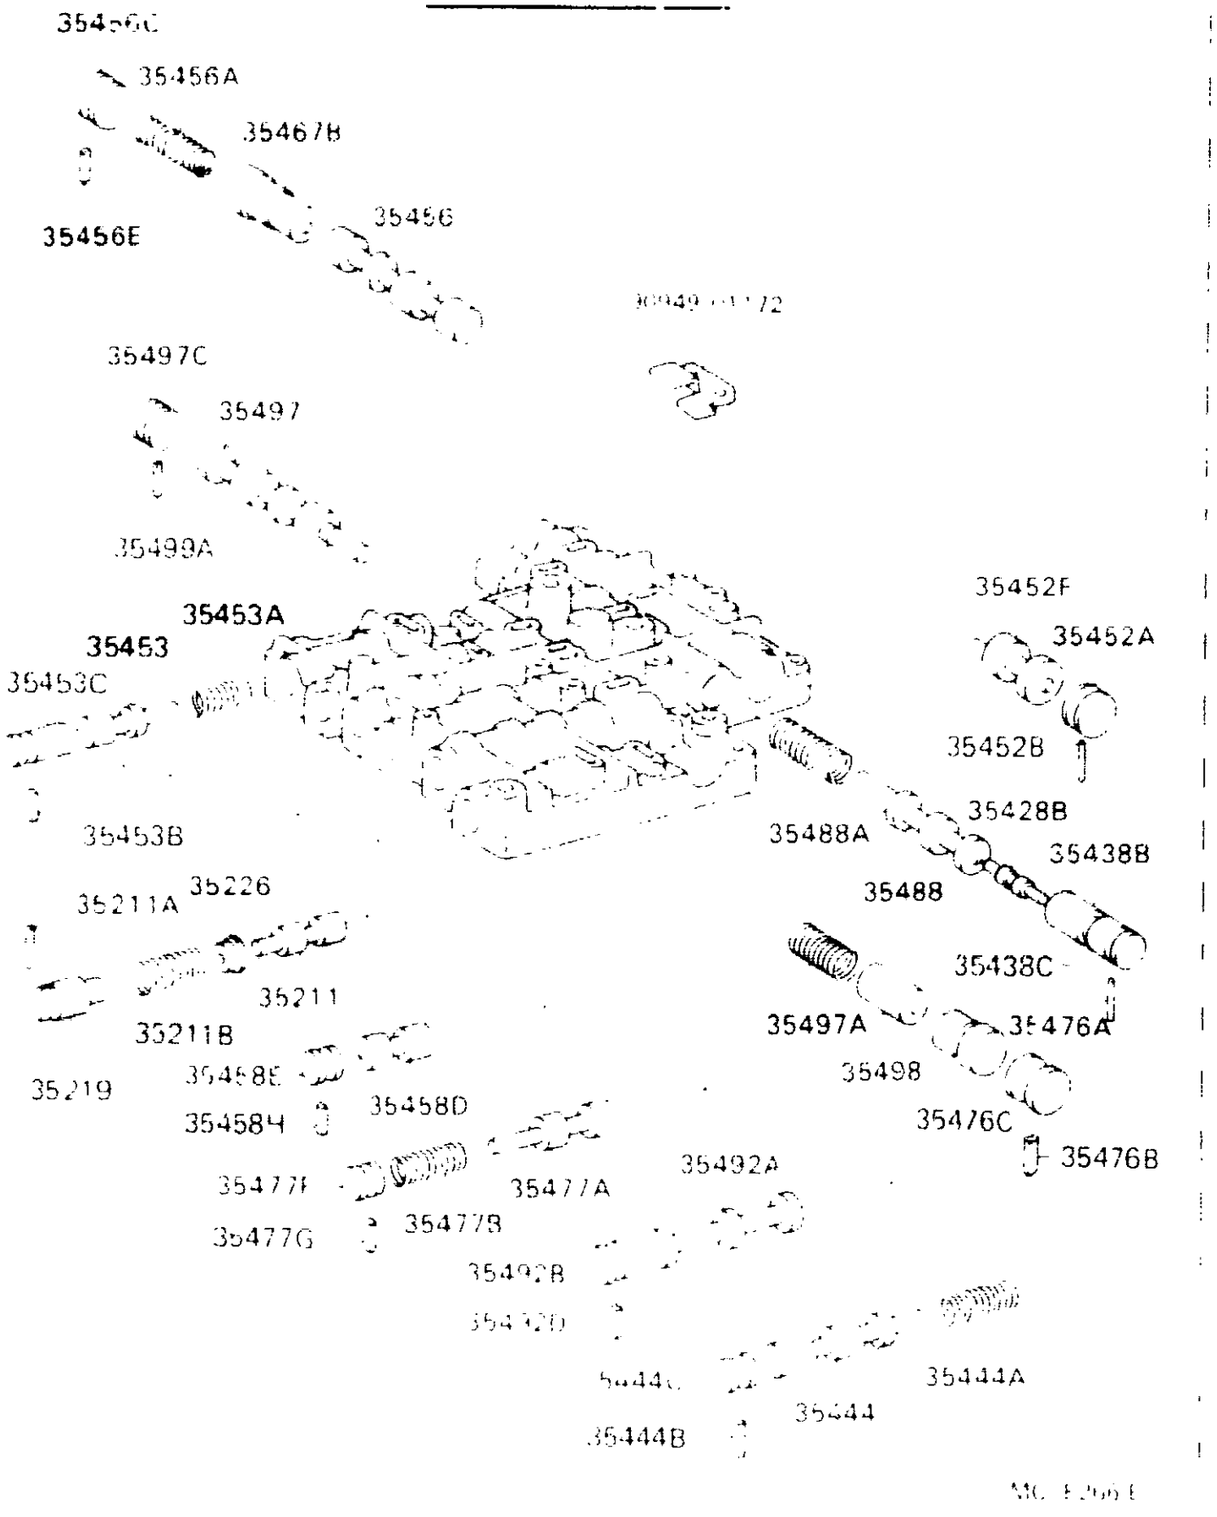

(8708-)
A440F

ILLUST.NO. 40F5

Lower Valve Body

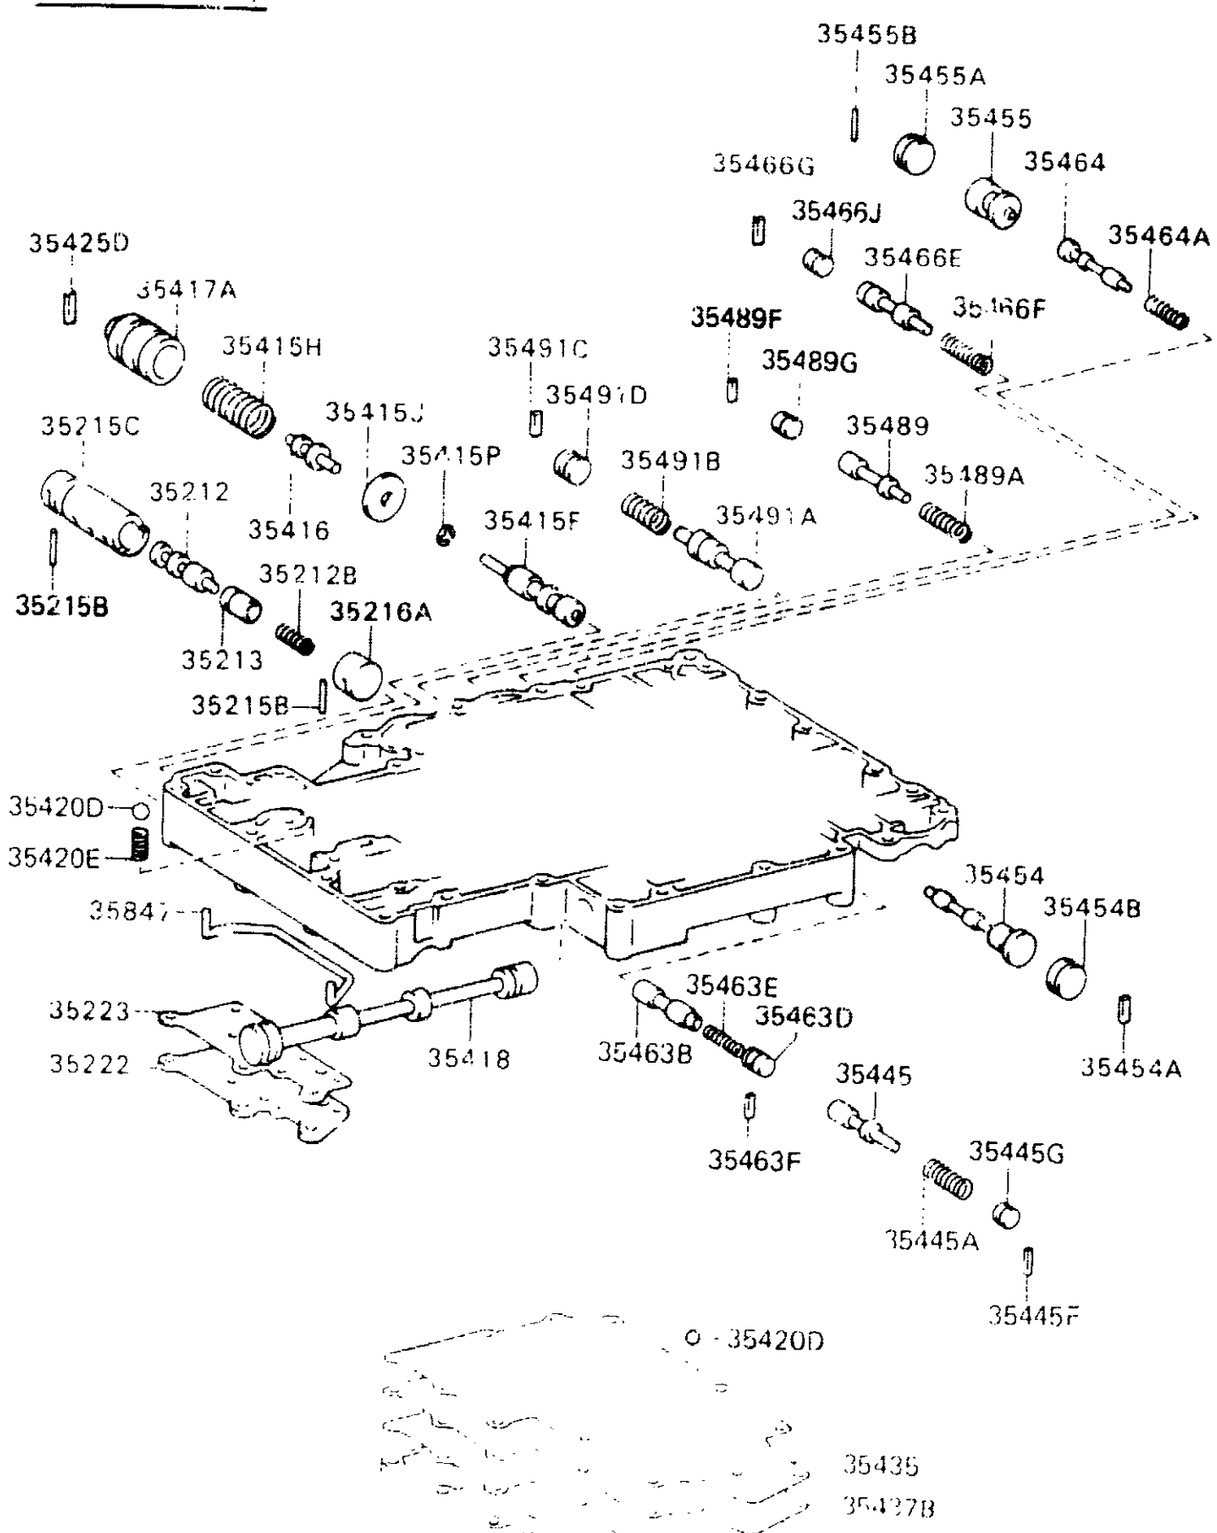

MC E267A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	32926	CUSHION, OIL COOLER TUBE					
8708-9001	FJ62			32926-30020-	6		
	32928	CLAMP, FLEXIBLE HOSE, NO.1					
8708-9001	FJ62			32928-60011-	1		
	32941	HOSE, OIL COOLER INLET, NO.1					
8708-9001	FJ62			32943-60010-	1		
	32941A	HOSE, OIL COOLER INLET, NO.2					
8708-9001	FJ62			32942-60030-	1		
	32942	HOSE, OIL COOLER OUTLET, NO.1					
8708-9001	FJ62			32943-60010-	1		
	32942A	HOSE, OIL COOLER OUTLET, NO.2					
8708-9001	FJ62			32942-60010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	37302	YOKE SUB-ASSY, UNIVERSAL JOINT SLEEVE					
8708-9001	FJ62	RR		37302-36020-	1		
8708-9001	FJ62	FR		37302-60C50-	1		
	37305	COVER SUB-ASSY, SLIDING SHAFT DUST					
8708-9001	FJ62	RR		37305-36020-	1		
8708-9001	FJ62	FR		37305-60010-	1		
	37315	YOKE, UNIVERSAL JOINT FLANGE					
8708-9001	FJ62			37315-36020-	2		
	37401A	RING, HOLE SNAP (FOR SPIDER BEARING)					
8708-9001	FJ62	T=2.00		90520-29024-	8		
8708-9001	FJ62	T=2.03		90520-29025	8		
8708-9001	FJ62	T=2.06		90520-29026-	8		
8708-9001	FJ62	T=2.09		90520-29027-	8		
	37402	BEARING SUB-ASSY, UNIVERSAL JOINT SPIDER					
8708-9001	FJ62			37402-36080-	8		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		42611G	VALVE (FOR TUBELESS TIRE)					
	8708-9001	FJ62			90942-05009-	5		
		42652	TIRE					
B	8708-9001	FJ62	P225/75R15,*(B),*(D)		42652-60060-	4		
		42652A	TIRE (FOR SPARE)					
B	8708-9001	FJ62	P225/75R15,*(B),*(D)		42652-60060-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

*(B) : Bridgestone Company Limited *(D) : Dunlop Rubber Company (Japan) Limited.

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	43510C	BEARING, TAPERED ROLLER (FOR FRONT AXLE OUTER BEARING)					
8708-9001	FJ62			90368-45087-	X		
	43510D	WASHER, CLAW (FOR STEERING KNUCKLE WASHER)					
8708-9001	FJ62			90214-42030-	2		
	43512	DISC, FRONT					
8708-9001	FJ62			43512-60040-	2		
	43521	NUT, FRONT WHEEL ADJUSTING					
8708-9001	FJ62			43521-60011-	4		
	43523	WASHER, FRONT WHEEL ADJUSTING LOCK					
8708-9001	FJ62			90215-42025-	2		
	43530	HUB ASSY, FREE WHEEL					
8708-9001	FJ62			43530-69017-	2		
	43531	GASKET, FREE WHEEL HUB					
8708-9001	FJ62			43531-60010-	2		
	43532	RING, FREE WHEEL HUB					
8708-9001	FJ62			43532-60010-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

	PROD.DATE	MODELS	DESCRIPTION	R/F	PART NUMBER	QTY.	REV.REF F	REV.REF T
		44142A	NUT, LOCK, NO.1					
	8708-9001	FJ62			44142-2[illegible]-0-	1		
		44210	VALVE ASSY, POWER STEERING CONTROL					
	8708-9001	FJ62			44120-60130-	1		
		44251	ARM, PITMAN					
	8708-9001	FJ62			45411-60090-	1		
		44251A	NUT, CASTLE (FOR PITMAN ARM)					
B	8708-9001	FJ62			90170-22058-	1		
		44257	SCREW, CROSSSHAFT ADJUSTING					
B	8708-9001	FJ62			45357-22010-	1		
		44257A	WASHER, SEAL (FOR CROSSSHAFT ADJUSTING SCREW)					
	8708-9001	FJ62			90210-10001-	1		
		45044	END SUB-ASSY, STEERING RELAY ROD, RH					
A	8708-8905	FJ62			# 45045-69045-	1		
					(45045-60H01-)	1		
S	8905-9001	FJ62..WGG			45045-69046-	1		
		45044A	NUT,CASTLE (FOR RELAY ROD)					
	8708-9001	FJ62			90171-14042-	2		
		45044B	RING, SET (FOR RELAY ROD)					
	8708-9001	FJ62			90467-32002-	4		
		45045	END SUB-ASSY, STEERING RELAY ROD,LH					
P	8708-8905	FJ62			# 45044-69055-			
					(45044-60H00-)			

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		45045	END SUB-ASSY, STEERING RELAY ROD,LH CONTINUED					
N	8905-9001	FJ62..WGG			45044-69056-	1		
		45046	END SUB-ASSY, TIE ROD, RH					
P	8708-8905	FJ62			# 45046-69115-	1		
					(45046-60H05-)	1		
N	8905-9001	FJ62..WGG			45046-69116-	1		
		45046A	NUT, CASTLE (FOR TIE ROD END)					
	8708-9001	FJ62			90171-14042-	2		
		45046B	RING, SET(FOR TIE ROD END DUST SEAL)					
	8708-9001	FJ62			90522-32011-	2		
		45047	END SUB-ASSY, TIE ROD, LH					
P	8708-8905	FJ62			# 45047-69065-	1		
					(45047-60H01-)	1		
N	8905-9001	FJ62..WGG			45047-69066-	1		
		45450	ROD ASSY, STEERING RELAY					
	8708-9001	FJ62			45 50-69055-	1		
		45450D	CLAMP, STEERING RELAY ROD END					
	8708-9001	FJ62			45466-55020-	2		
		45457	SEAL, STEERING LINK DUST, RH					
A	8708-9001	FJ62			45450-60010-	1		
		45458	SEAL, STEERING LINK DUST, LH					
	8708-	FJ62			45457-60010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	47619	WIRE, PARKING BRAKE, LH					
8708-9001	FJ62			47616-60010-	2		
	47623B	SPRING, TENSION (FOR PARKING BRAKE BELL CRANK RETURN)					
8708-9001	FJ62			90506-20033-	4		
	47624A	CRANK, PARKING BRAKE BELL, RH					
8708-9001	FJ62			47624-60010-	1		
	47625A	CRANK, PARKING BRAKE BELL, LH					
8708-9001	FJ62			47625-60010-	1		
	47626P	PULLEY, PARKING BRAKE SEGMENTAL					
8708-9001	FJ62			47626-60010-	2		
	47628	BRACKET, REAR BRAKE BELLCRANK					
8708-9001	FJ62			47628-35020-	2		
	47633C	BOOT, REAR BRAKE BELLCRANK, RH					
8708-9001	FJ62			47633-35020-	2		
	47634A	BOOT, REAR BRAKE BELLCRANK, LH					
8708-9001	FJ62			47633-35020-	2		
	47643A	LEVER, REAR BRAKE AUTOMATIC ADJUST, RH					
8708-9001	FJ62			47643-60010-	1		
	47644A	LEVER, REAR BRAKE AUTOMATIC ADJUST, LH					
8708-9001	FJ62			47644-60010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	47653	LINING, REAR BRAKE SHOE (FOR FRONT OR UPPER)					
8708-9001	FJ62..WGG			47655-60010-	2		
	47654	LINING, REAR BRAKE SHOE (FOR REAR OR LOWER)					
8708-9001	FJ62..WGG			47655-60010-	2		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	04483	SHACKLE KIT, REAR SPRING					
8708-9001	FJ62			04483-60050-	2		
	04484	PIN KIT, REAR SPRING					
8708-9001	FJ62			04482-60040-	2		
	48046	SEAT SUB-ASSY, SPRING U BOLT, RH					
8708-9001	FJ62			48046-60052-	1		
	48046A	BOLT, U (FOR REAR SPRING)					
8708-9001	FJ62	L=200		90117-14032-	X		
8708-9001	FJ62	L=205		90117-14180-	X		
	48047	SEAT SUB-ASSY, SPRING U BOLT, LH					
8708-9001	FJ62			48047-60052	1		
	48210	SPRING ASSY, REAR RH					
8708-8803	FJ62			# 48210-60650-	1		
				(48210-60651-)	1		
8803-9001	FJ62			48210-60651-	1		
	48210A	BUSH (FOR REAR SPRING SHACKLE UPPER)					
8708-9001	FJ62			90389-18002-	4		
	48210B	BUSH (FOR REAR SPRING PIN)					
8708-9001	FJ62			90389-18002-	4		
	48210G	BUSH (FOR REAR SPRING SHACKLE LOWER)					
8708-9001	FJ62			90389-18002-	4		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	48211	LEAF, REAR SPRING, NO.1					
8708-9001	FJ62	PASSENGER SEAT SIDE		48211-60650-	1		
8708-9001	FJ62	DRIVERS SEAT SIDE		48211-60660-	1		
	48212	LEAF, REAR SPRING, NO.2					
8708-9001	FJ62	PASSENGER SEAT SIDE		48212-60650-	1		
8708-9001	FJ62	DRIVERS SEAT SIDE		48212-60660-	1		
	48213	LEAF, REAR SPRING, NO.3					
8708-8803	FJ62	PASSENGER SEAT SIDE		48202-60650-	1		
8708-8803	FJ62	DRIVERS SEAT SIDE		48202-60660-	1		
8803-9001	FJ62	PASSENGER SEAT SIDE		48202-60651-	1		
8803-9001	FJ62	DRIVERS SEAT SIDE		48202-60661-	1		
	48214	LEAF, REAR SPRING, NO.4					
8708-8803	FJ62	PASSENGER SEAT SIDE		48214-60650-	1		
8708-8803	FJ62	DRIVERS SEAT SIDE		48214-60660-	1		
8803-9001	FJ62	PASSENGER SEAT SIDE		48214-60651-	1		
8803-9001	FJ62	DRIVERS SEAT SIDE		48214-60661-	1		
	48215	LEAF, REAR SPRING, NO.5					
8708-8803	FJ62	PASSENGER SEAT SIDE		48215-60650-	1		
8708-8803	FJ62	DRIVERS SEAT SIDE		48215-60660-	1		
8803-9001	FJ62	PASSENGER SEAT SIDE		48215-60651-	1		

FIGURE NUMBER INDEX

LOCATION	FIG No	SUMMARY
		TOOL GROUP
1A1	09-01	STANDARD TOOL
		ENGINE GROUP
1C1	11-01	PARTIAL ENGINE ASSEMBLY
1D1	11-02	SHORT BLOCK ASSEMBLY
1E1	11-03	ENGINE OVERHAUL GASKET KIT
1F1	11-04	CYLINDER HEAD
1H1	11-05	CYLINDER BLOCK
1J1	11-06	TIMING GEAR COVER & REAR END PLATE
1K1	11-07	MOUNTING
1L1	12-01	VENTILATION HOSE
1M1	13-01	CRANKSHAFT & PISTON
1C2	13-02	CAMSHAFT & VALVE
1E2	15-01	OIL PUMP
1G2	15-02	OIL FILTER
1H2	15-03	OIL COOLER
1I2	16-01	WATER PUMP
1J2	16-03	RADIATOR & WATER OUTLET
1A3	16-05	V BELT
1B3	17-01	MANIFOLD
1D3	17-02	EXHAUST PIPE
1F3	17-03	AIR CLEANER
1H3	17-05	AIR PUMP
1I3	17-06	MANIFOLD AIR INJECTION SYSTEM
1K3	17-08	VACUUM PIPING
1A4	17-09	CAUTION PLATE & NAME PLATE
1B4	19-01	IGNITION COIL & SPARK PLUG
1D4	19-02	DISTRIBUTOR
1E4	19-03	ALTERNATOR
1G4	19-04	STARTER
		FUEL GROUP
1I4	21-01	FUEL LINE
1M4	21-02	EVAPORATIVE EMISSION CONTROL SYSTEM

LOCATION	FIG. No.	SUMMARY
		POWER TRAIN · CHASSIS GROUP
2A1	33-12	SHIFT LEVER & RETAINER
2D1	35-01	TRANSAXLE OR TRANSMISSION ASSY & GASKET KIT (ATM)
2E1	35-02	TORQUE CONVERTER, FRONT OIL PUMP & CHAIN (ATM)
2G1	35-03	TRANSMISSION CASE & OIL PAN (ATM)
2J1	35-05	SPEEDOMETER DRIVEN GEAR (ATM)
2K1	35-06	OVERDRIVE GEAR (ATM)
2A2	35-07	BRAKE BAND & MULTIPLE DISC CLUTCH (ATM)
2D2	35-08	CENTER SUPPORT & PLANETARY SUN GEAR (ATM)
2F2	35-09	BRAKE NO. 3, 1ST & REVERSE BRAKE (ATM)
2G2	35-10	PLANETARY GEAR REVERSE PISTON & COUNTER GEAR (ATM)
2I2	35-11	REAR OIL PUMP & GOVERNOR (ATM)
2K2	35-12	VALVE BODY & OIL STRAINER (ATM)
2I3	35-13	THROTTLE LINK & VALVE LEVER (ATM)
2K3	35-14	OIL COOLER & TUBE (ATM)
2M3	36-08	TRANSFER ASSEMBLY & GASKET KIT
2A4	36-09	TRANSFER CASE & EXTENSION HOUSING
2C4	36-10	TRANSFER GEAR
2F4	36-11	TRANSFER LEVER & SHIFT ROD
2H4	36-12	DIAPHRAGM CYLINDER
2J4	36-16	TRANSFER VACUUM PIPING
2K4	37-01	PROPELLER SHAFT & UNIVERSAL JOINT
2M4	41-01	REAR AXLE HOUSING & DIFFERENTIAL
2H5	41-02	REAR AXLE SHAFT & HUB
2K5	41-03	DISK WHEEL & WHEEL CAP
2M5	42-01	DIFFERENTIAL LOCK CONTROL
2C6	43-01	FRONT AXLE HOUSING & DIFFERENTIAL
2J6	43-02	DRIVE SHAFT
2K6	43-03	FRONT AXLE HUB
2M6	44-01	STEERING COLUMN & SHAFT
2D7	45-02	VANE PUMP & RESERVOIR

LOCATION	FIG. No.	SUMMARY
2G7	45-03	OIL COOLER & TUBE
2H7	45-04	STEERING WHEEL
2I7	45-05	STEERING GEAR & LINK
2A8	46-01	PARKING BRAKE & CABLE
2C8	47-01	BRAKE PEDAL & BRACKET
2D8	47-02	BRAKE MASTER CYLINDER
2F8	47-03	BRAKE BOOSTER
2H8	47-05	FRONT DISC BRAKE CALIPER & DUST COVER
2J8	47-06	REAR BACKING PLATE & WHEEL CYLINDER
2M8	47-08	BRAKE TUBE & CLAMP
2E9	48-02	FRONT AXLE ARM & STEERING KNUCKLE
2G9	48-03	FRONT SPRING & SHOCK ABSORBER
2K9	48-04	REAR SPRING & SHOCK ABSORBER

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35617A	RING, CLUTCH DRUM OIL SEAL (FOR OVERDRIVE)					
8708-9001	FJ62			35617-36020-	2		
	35632B	PLATE, BRAKE (FOR OVERDRIVE)					
8708-9001	FJ62			35632-36010-	5		
	35633D	DISC, CLUTCH (FOR OVERDRIVE DIRECT CLUTCH)					
8708-9001	FJ62			35633-36020-	3		
	35634C	PLATE, CLUTCH (FOR OVERDRIVE DIRECT CLUTCH)					
8708-9001	FJ62	T=1.8		35634-36010-	3		
	35677B	DISC, CLUTCH (FOR OVERDRIVE BRAKE)					
8708-9001	FJ62			35633-36010-	3		
	35785A	RETAINER, OVERDRIVE CASE RING					
8708-9001	FJ62			35785-36010-	3		
	35789H	RACE, THRUST BEARING (FOR OVERDRIVE CASE)					
8708-9001	FJ62			35789-36020-	1		
	35789K	RACE, THRUST BEARING (FOR OVERDRIVE PLANETARY GEAR)					
8708-9001	FJ62	HR		35789-36010-	1		
8708-9001	FJ62	RR		35789-36070-	1		


8708-
A440F

ILLUST.NO. 50F5


Upper Valve Body




Lower Valve Body

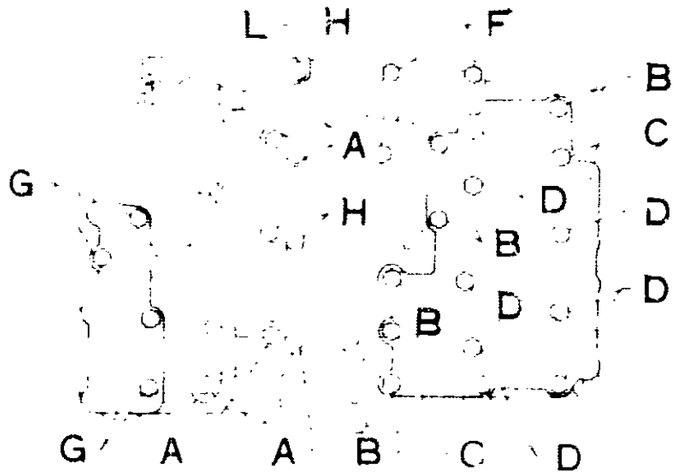

Valve Body

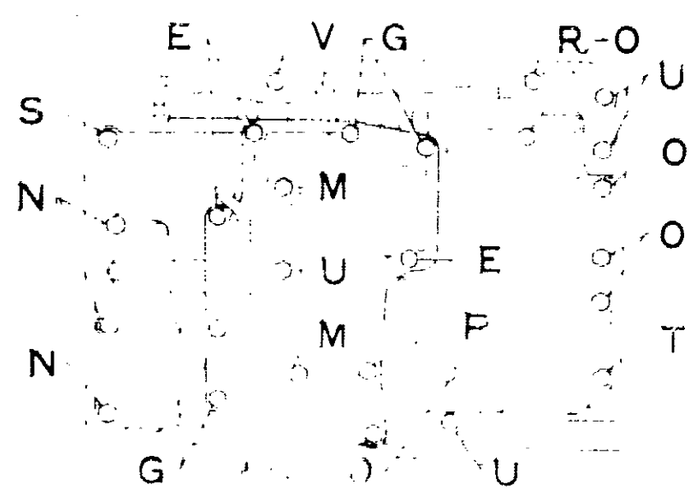



Valve Body Set Bolt

	PART NO.	L	QTY
A	90105-05002	35	4
B	90105-05007	18	5
C	90105-05015	60	2
D	90105-05013	56	8
E	90105-05017	47	3
F	90105-05018	44	2
G	90105-05023	12	12
H	90105-05025	29.5	7
I	90105-05027	29.5	1
J	90105-05028	39	1
K	90105-05029	25	1
L	90105-05030	43	1
M	90105-06025	36	2
N	90105-06058	64	3
O	90105-06060	57	5
P	90105-06061	45	3
Q	90105-06064	16	2
R	90105-06069	22	1
S	90105-06070	41	1
T	90105-06071	57	1
U	90105-06072	32	4
V	90105-06073	45	1


Valve Body Set Washer

	PART NO.	QTY
A - L	94541-00500	47

MC 8878 A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	34421	PISTON, OVERDRIVE BRAKE ACCUMULATOR					
8708-9001	FJ62			34421-36010-	1		
	34421A	RING, O (FOR OVERDRIVE BRAKE ACCUMULATOR PISTON)					
8708-9001	FJ62		UPR	90301-26003-	1		
8708-9001	FJ62		LWR	90301-29003-	1		
	34421B	SPRING (FOR OVERDRIVE BRAKE ACCUMULATOR PISTON)					
8708-9001	FJ62			90501-33004-	1		
	35112A	COVER, FRONT CLUTCH ACCUMULATOR					
8708-9001	FJ62			35112-36010-	1		
	35113	GASKET, FRONT CLUTCH ACCUMULATOR NO.2					
8708-9001	FJ62			35113-36010-	1		
	35114	GASKET, FRONT CLUTCH ACCUMLATOR, NO.1					
8708-9001	FJ62			35114-36010-	1		
	35115	PLATE, FRONT CLUTCH ACCUMULATOR					
8708-9001	FJ62			35115-36010-	1		
	35211	VALVE, LOCK UP SIGNAL					
8708-8709	FJ62			# 35211-36010- (35211-36011-)	1 1		
8709-9001	FJ62			35211-36011-	1		
	35211A	PIN, STRAIGHT (FOR LOCK UP SIGNAL VALVE)					
8708-9001	FJ62			90250-03051-	1		

(87C8-)

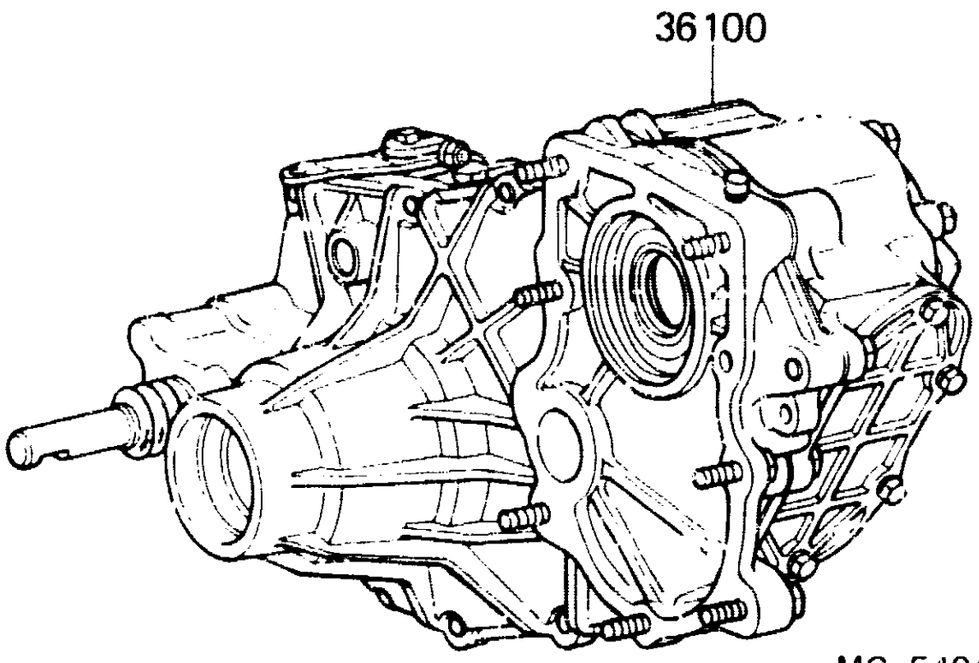


MC F494

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	36100	TRANSFER ASSY					
8708-9001	FJ62			36110-6A730-	1		

(8708-)

ILLUST.NO. 10F3

Semi Floating Axle

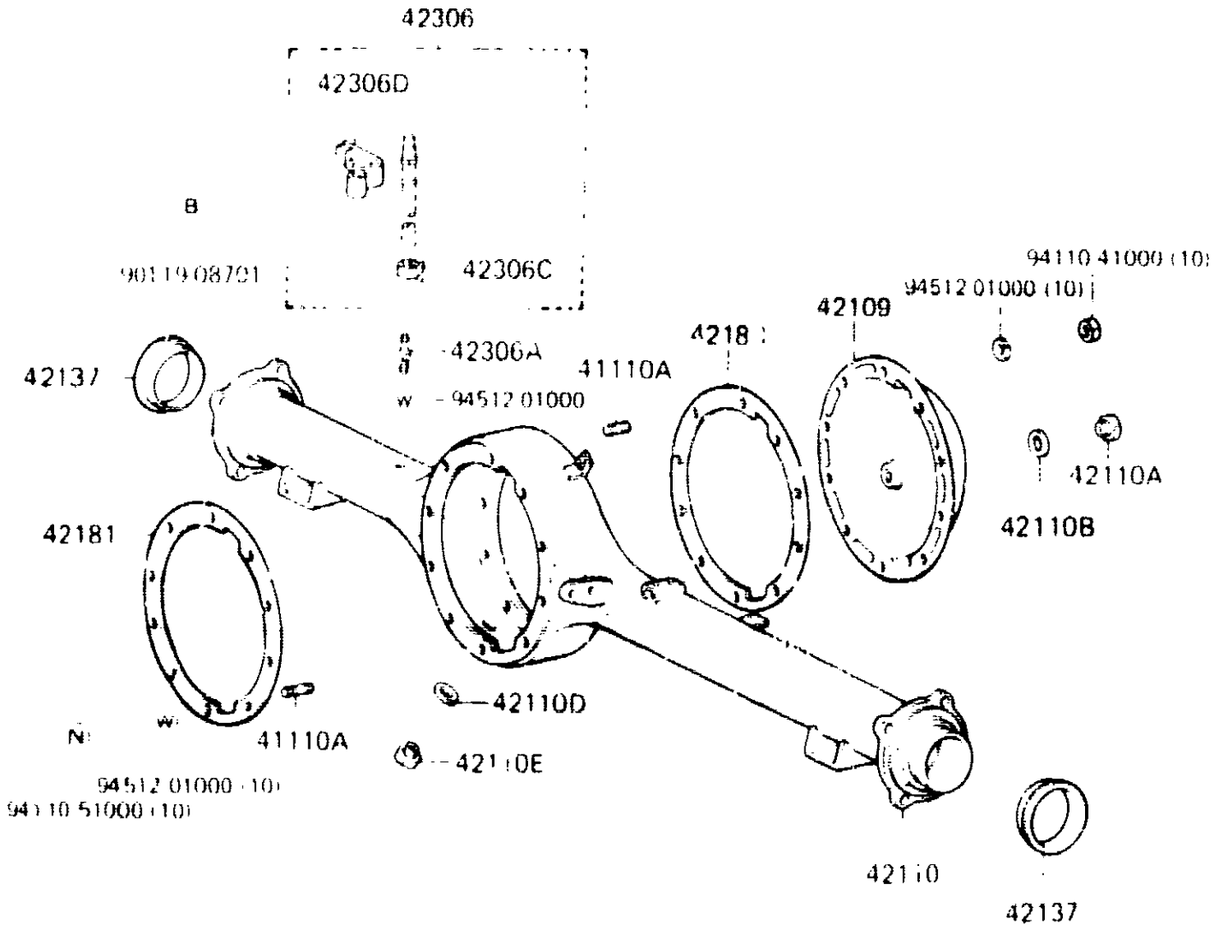


MC E286 C

(8708-)

ILLUST.NO. 10F3

Full Floating Axle

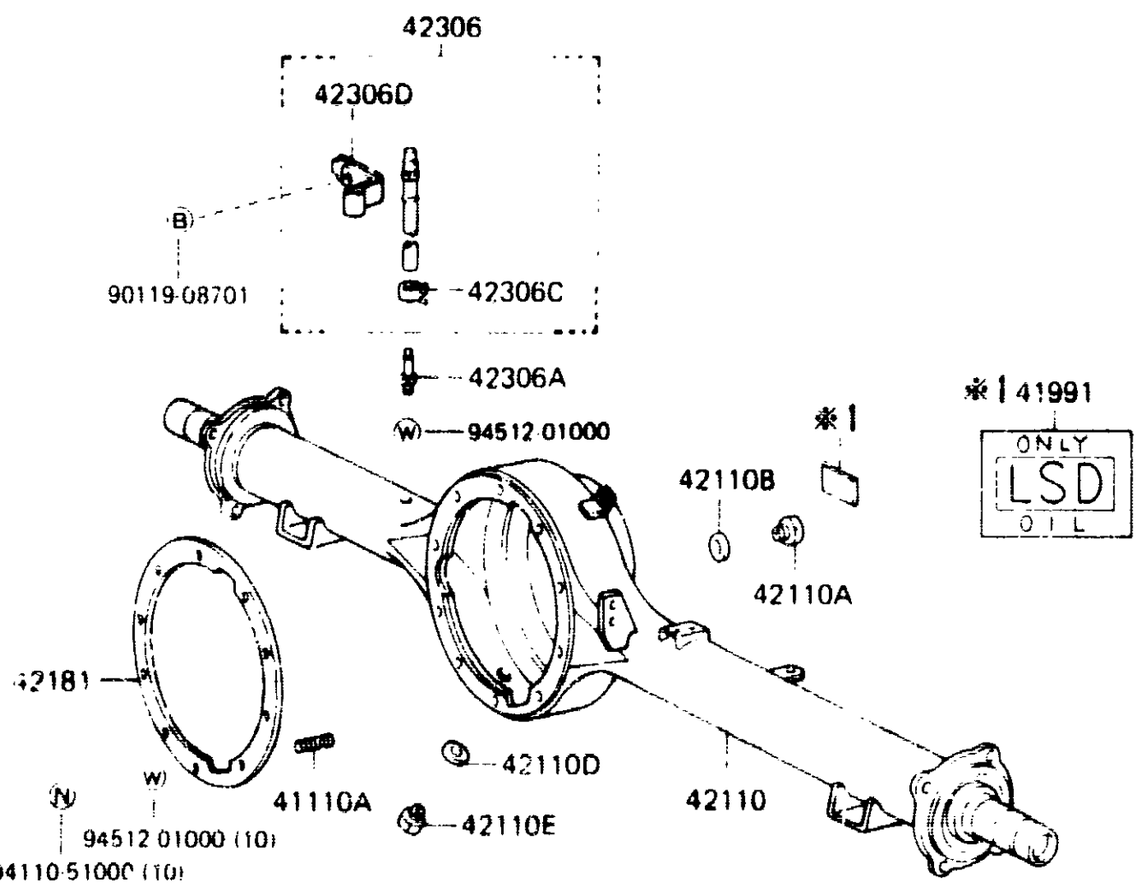

W/ Differential Lock

04412




MC E287 D

FIG. 42-01 DIFFERENTIAL LOCK CONTROL


(8708-)


ILLUST.NO. 1OF2

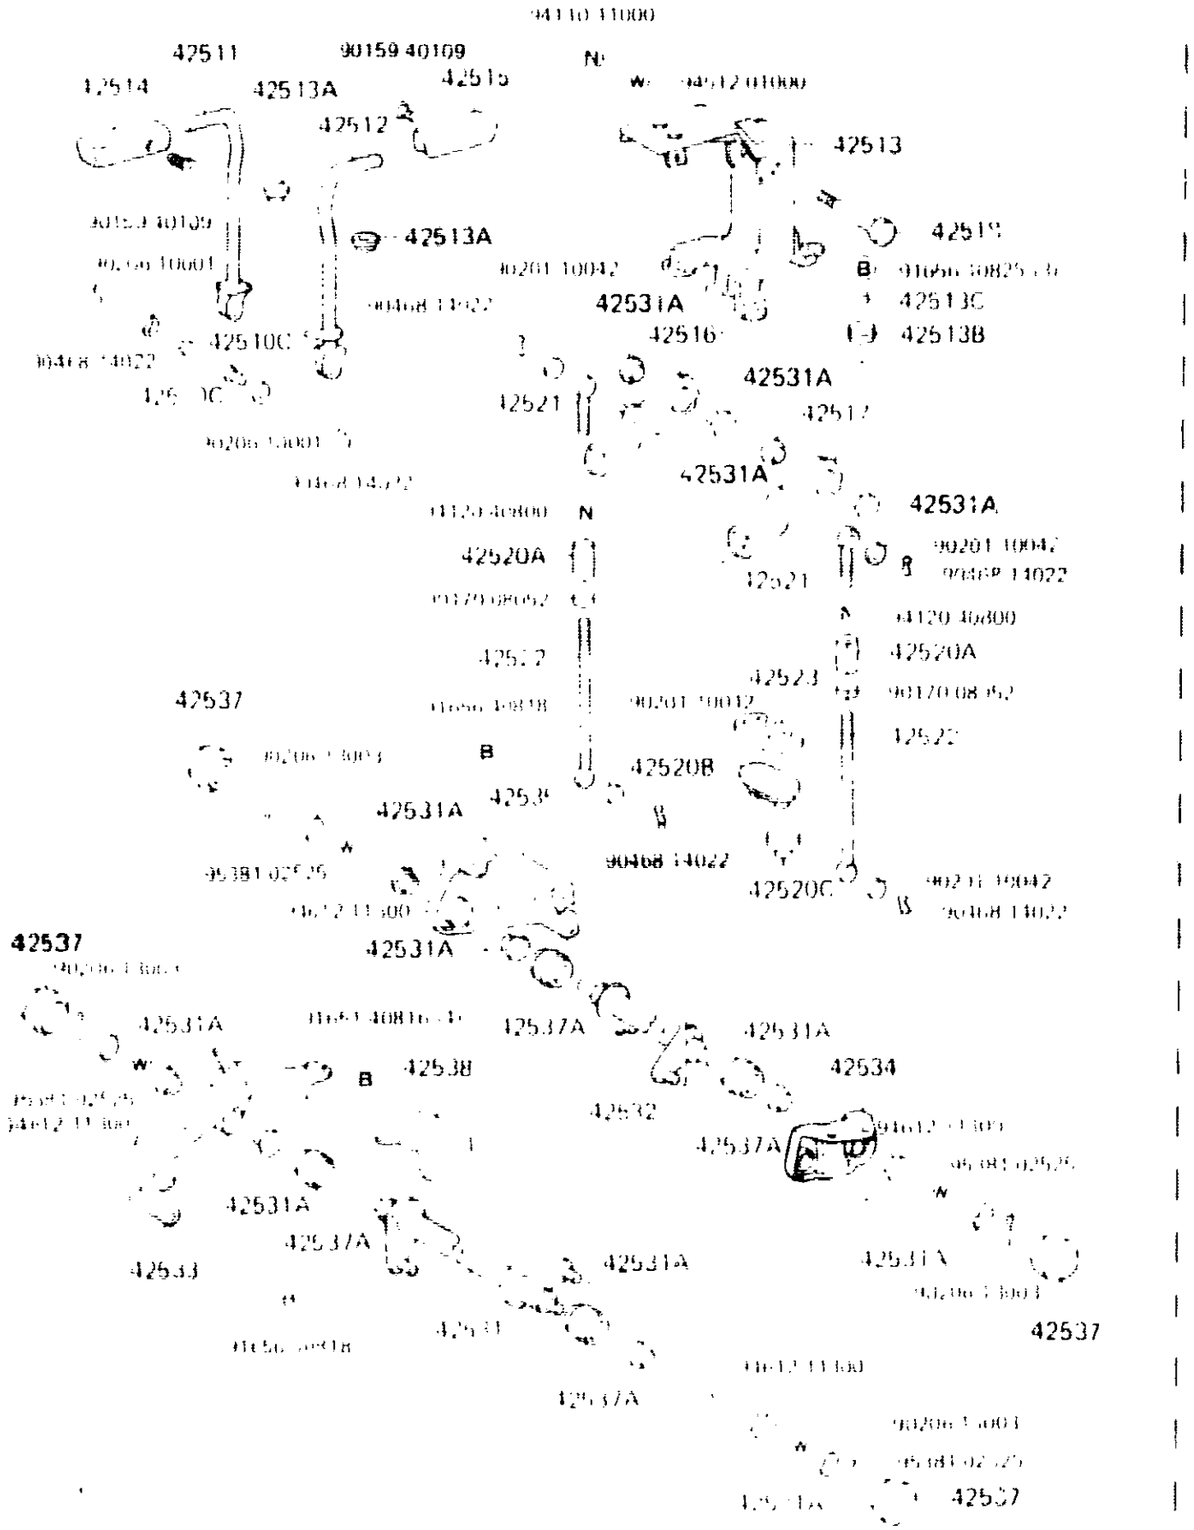


(8708-)

ILLUST.NO. 2OF2

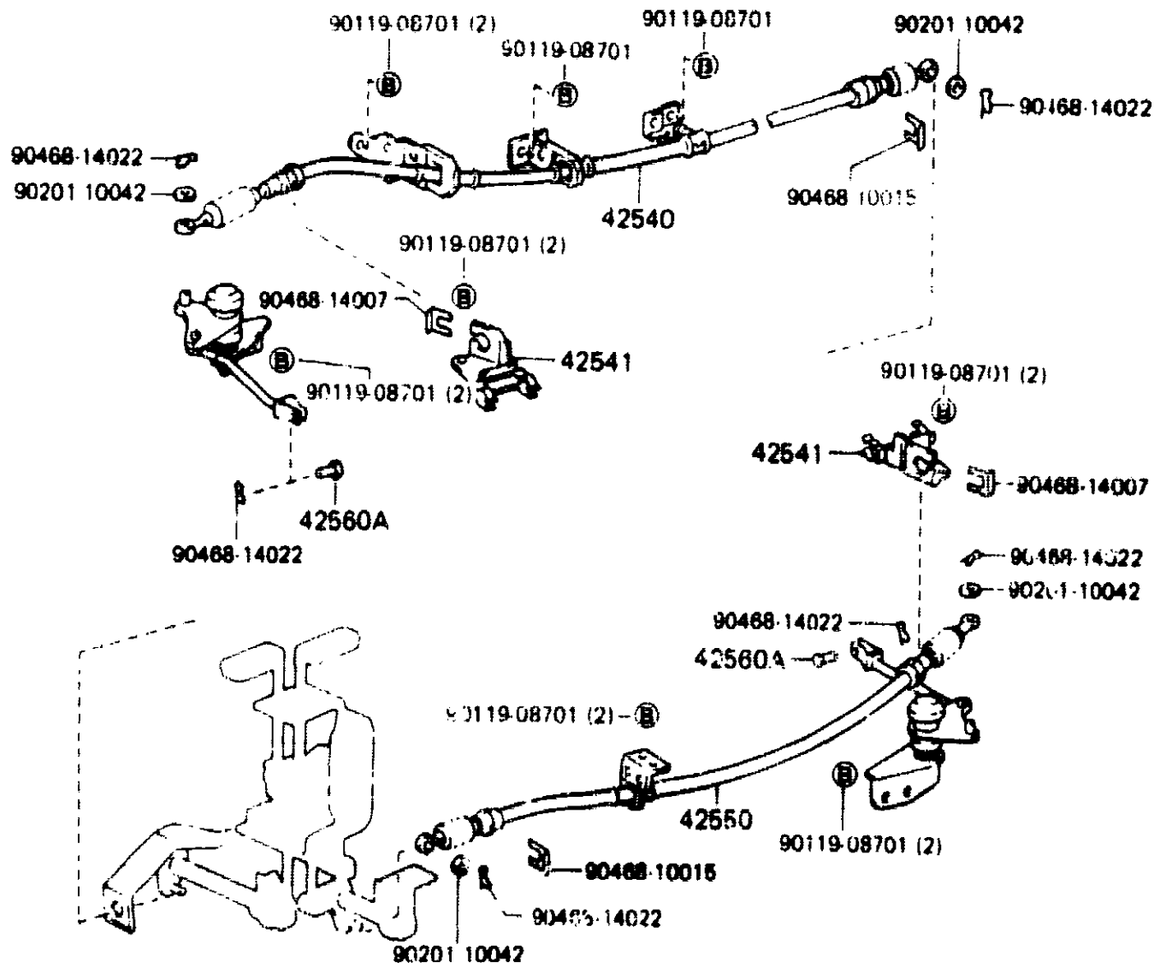

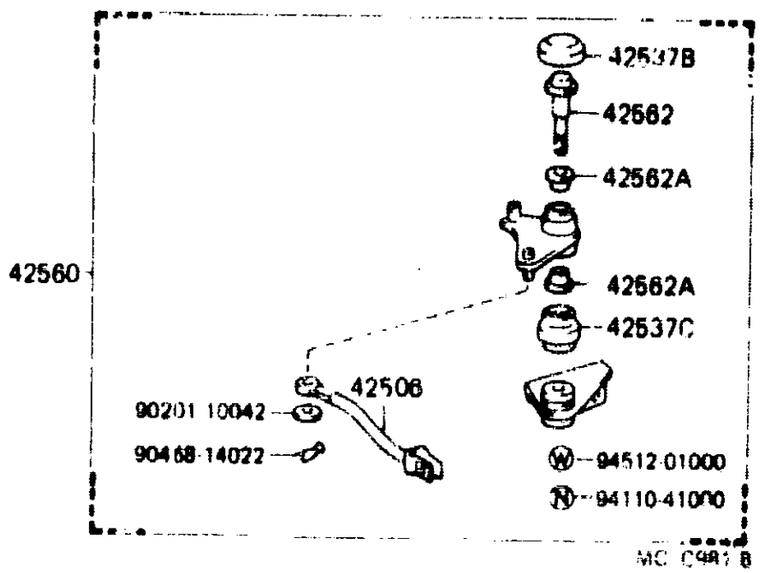

(8708-)

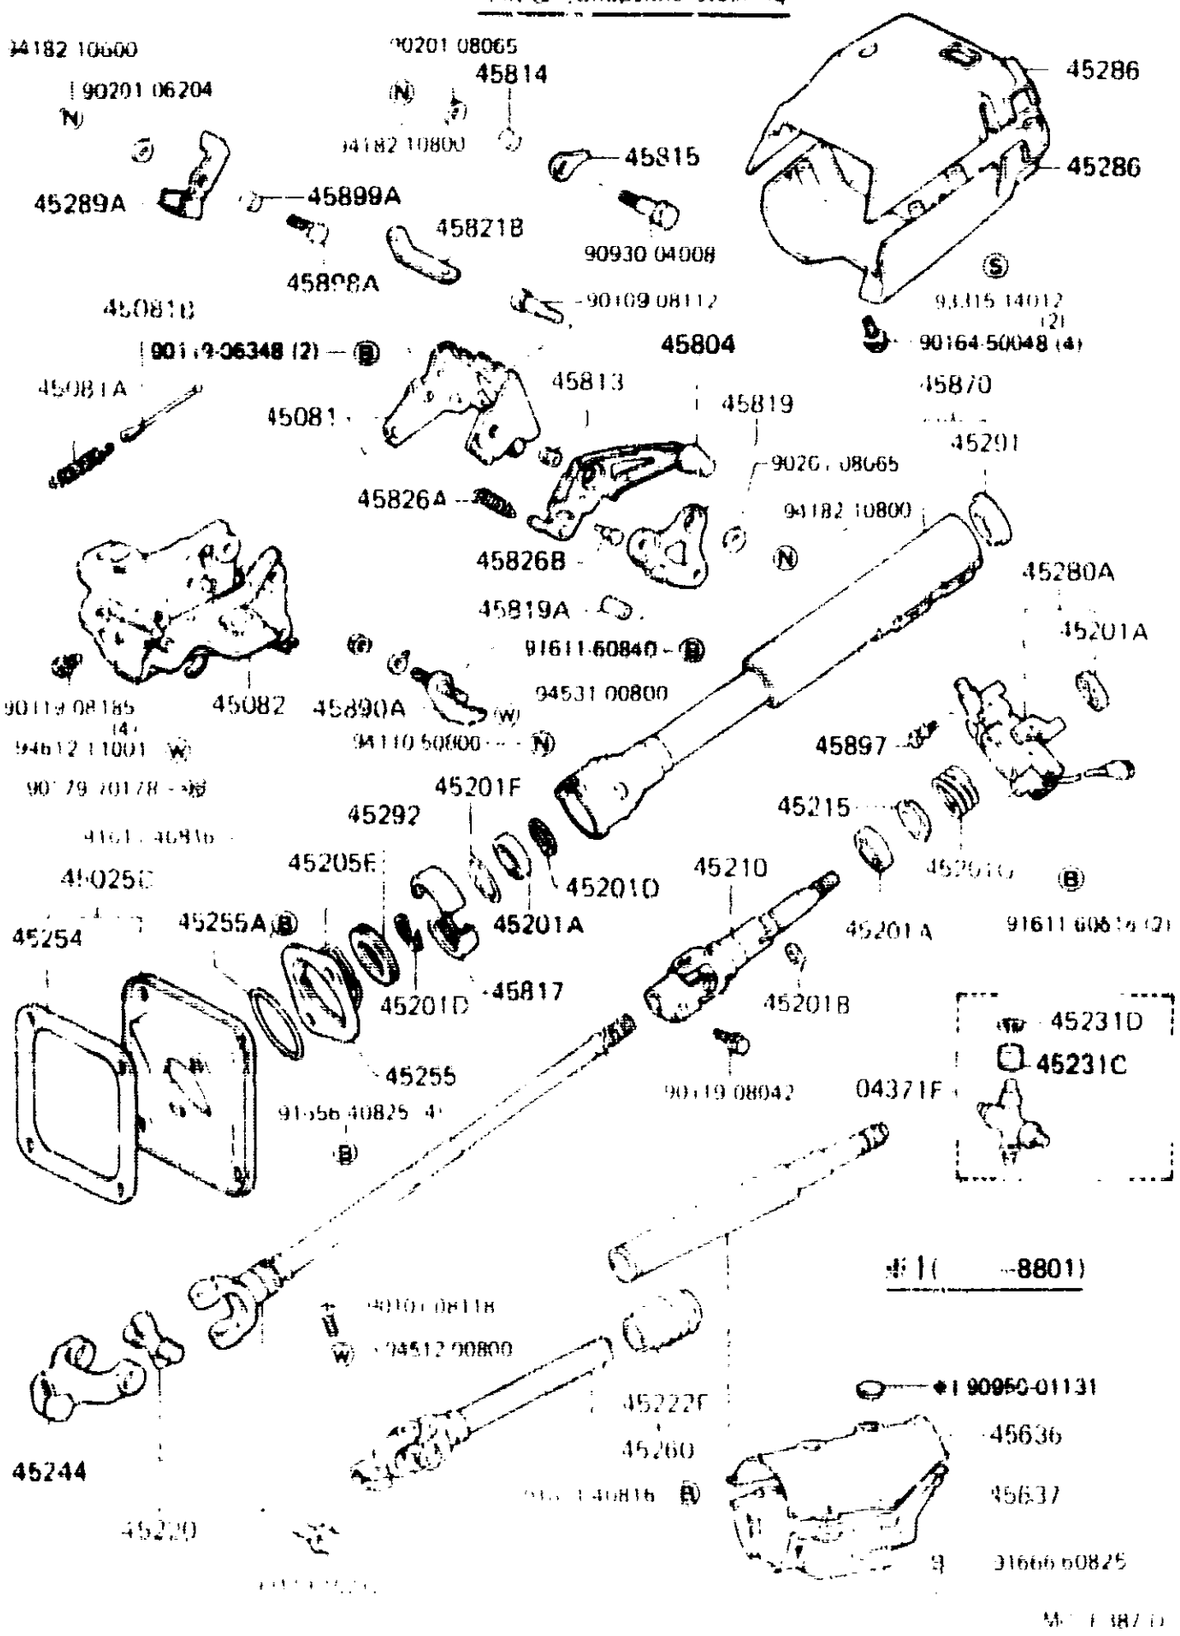

#1(-8801)

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	04371F	SPIDER KIT, UNIVERSAL JOINT (FOR STEERING MAIN SHAFT)					
8708-9001	FJ62			04371-10011-	1		
	45025D	COVER SUB-ASSY, STEERING COLUMN HOLE, NO.1					
8708-9001	FJ62			45025-60020-	1		
	45081	SUPPORT SUB-ASSY, TILT STEERING					
8708-9001	FJ62			45081-22020-	1		
	45081A	SPRING, TENSION (FOR TILT STEERING)					
8708-9001	FJ62			90506-23009-	2		
	45081B	CORD (FOR TILT STEERING)					
8708-9001	FJ62	L=107.5		90945-02034-	2		
8708-9001	FJ62	L=105.5		90945-02038-	2		
	45082	BRACKET SUB-ASSY, BREAK AWAY W/CAPSULE					
8708-9001	FJ62			45082-60010-	1		
	45201A	BEARING, RADIAL BALL (FOR STEERING MAIN SHAFT)					
8708-9001	FJ62	UPR		90363-18001-	1		
8708-9001	FJ62	CTR		90363-28001-	1		
8708-9001	FJ62	LWR		90363-30007-	1		
	45201B	RING, SHAFT SNAP (FOR STEERING MAIN SHAFT)					
8708-9001	FJ62	T=1.15-1.25		90520-17042-	1		
	45201F	RING (FOR STEERING MAIN SHAFT)					
8708-9001	FJ62			96152-00300-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	45460A	ROD ASSY, TIE					
8708-9001	FJ62			45460-69105-	1		
	45466	CLAMP, TIE ROD END					
8708-9001	FJ62			45466-36010-	2		
	45473	SEAT, BALL STUD					
8708-9001	FJ62			45473-35010-	4		
	45475	SEAT, STEERING LINK JOINT SPRING					
8708-9001	FJ62			45475-35010-	2		
	45475A	SPRING, COMPRESSION (FOR STEERING LINK JOINT)					
8708-9001	FJ62			90501-45114-	2		
	45475B	PLUG, STRAIGHT SCREW (FOR STEERING LINK JOINT)					
8708-9001	FJ62			90340-25001-	2		
	45611	ARM, STEERING KNUCKLE, RH					
8708-9001	FJ62			45611-60040-	1		
	45612	ARM, STEERING KNUCKLE, LH					
8708-9001	FJ62			45612-60040	1		
	45700	DAMPER ASSY, STEERING					
8708-9001	FJ62			45700-69025-	1		
	45700A	NUT (FOR STEERING DAMPER)					
8708-9001	FJ62			94184 61200-	2		
	45721B	BRACKET, STEERING DAMPER, NO. 3					
8708-9001	FJ62			90[illegible] 60030	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

FIG. 47-08 BRAKE TUBE & CLAMP

791430M-01222

(8708-)

ILLUST.NO. 10F3

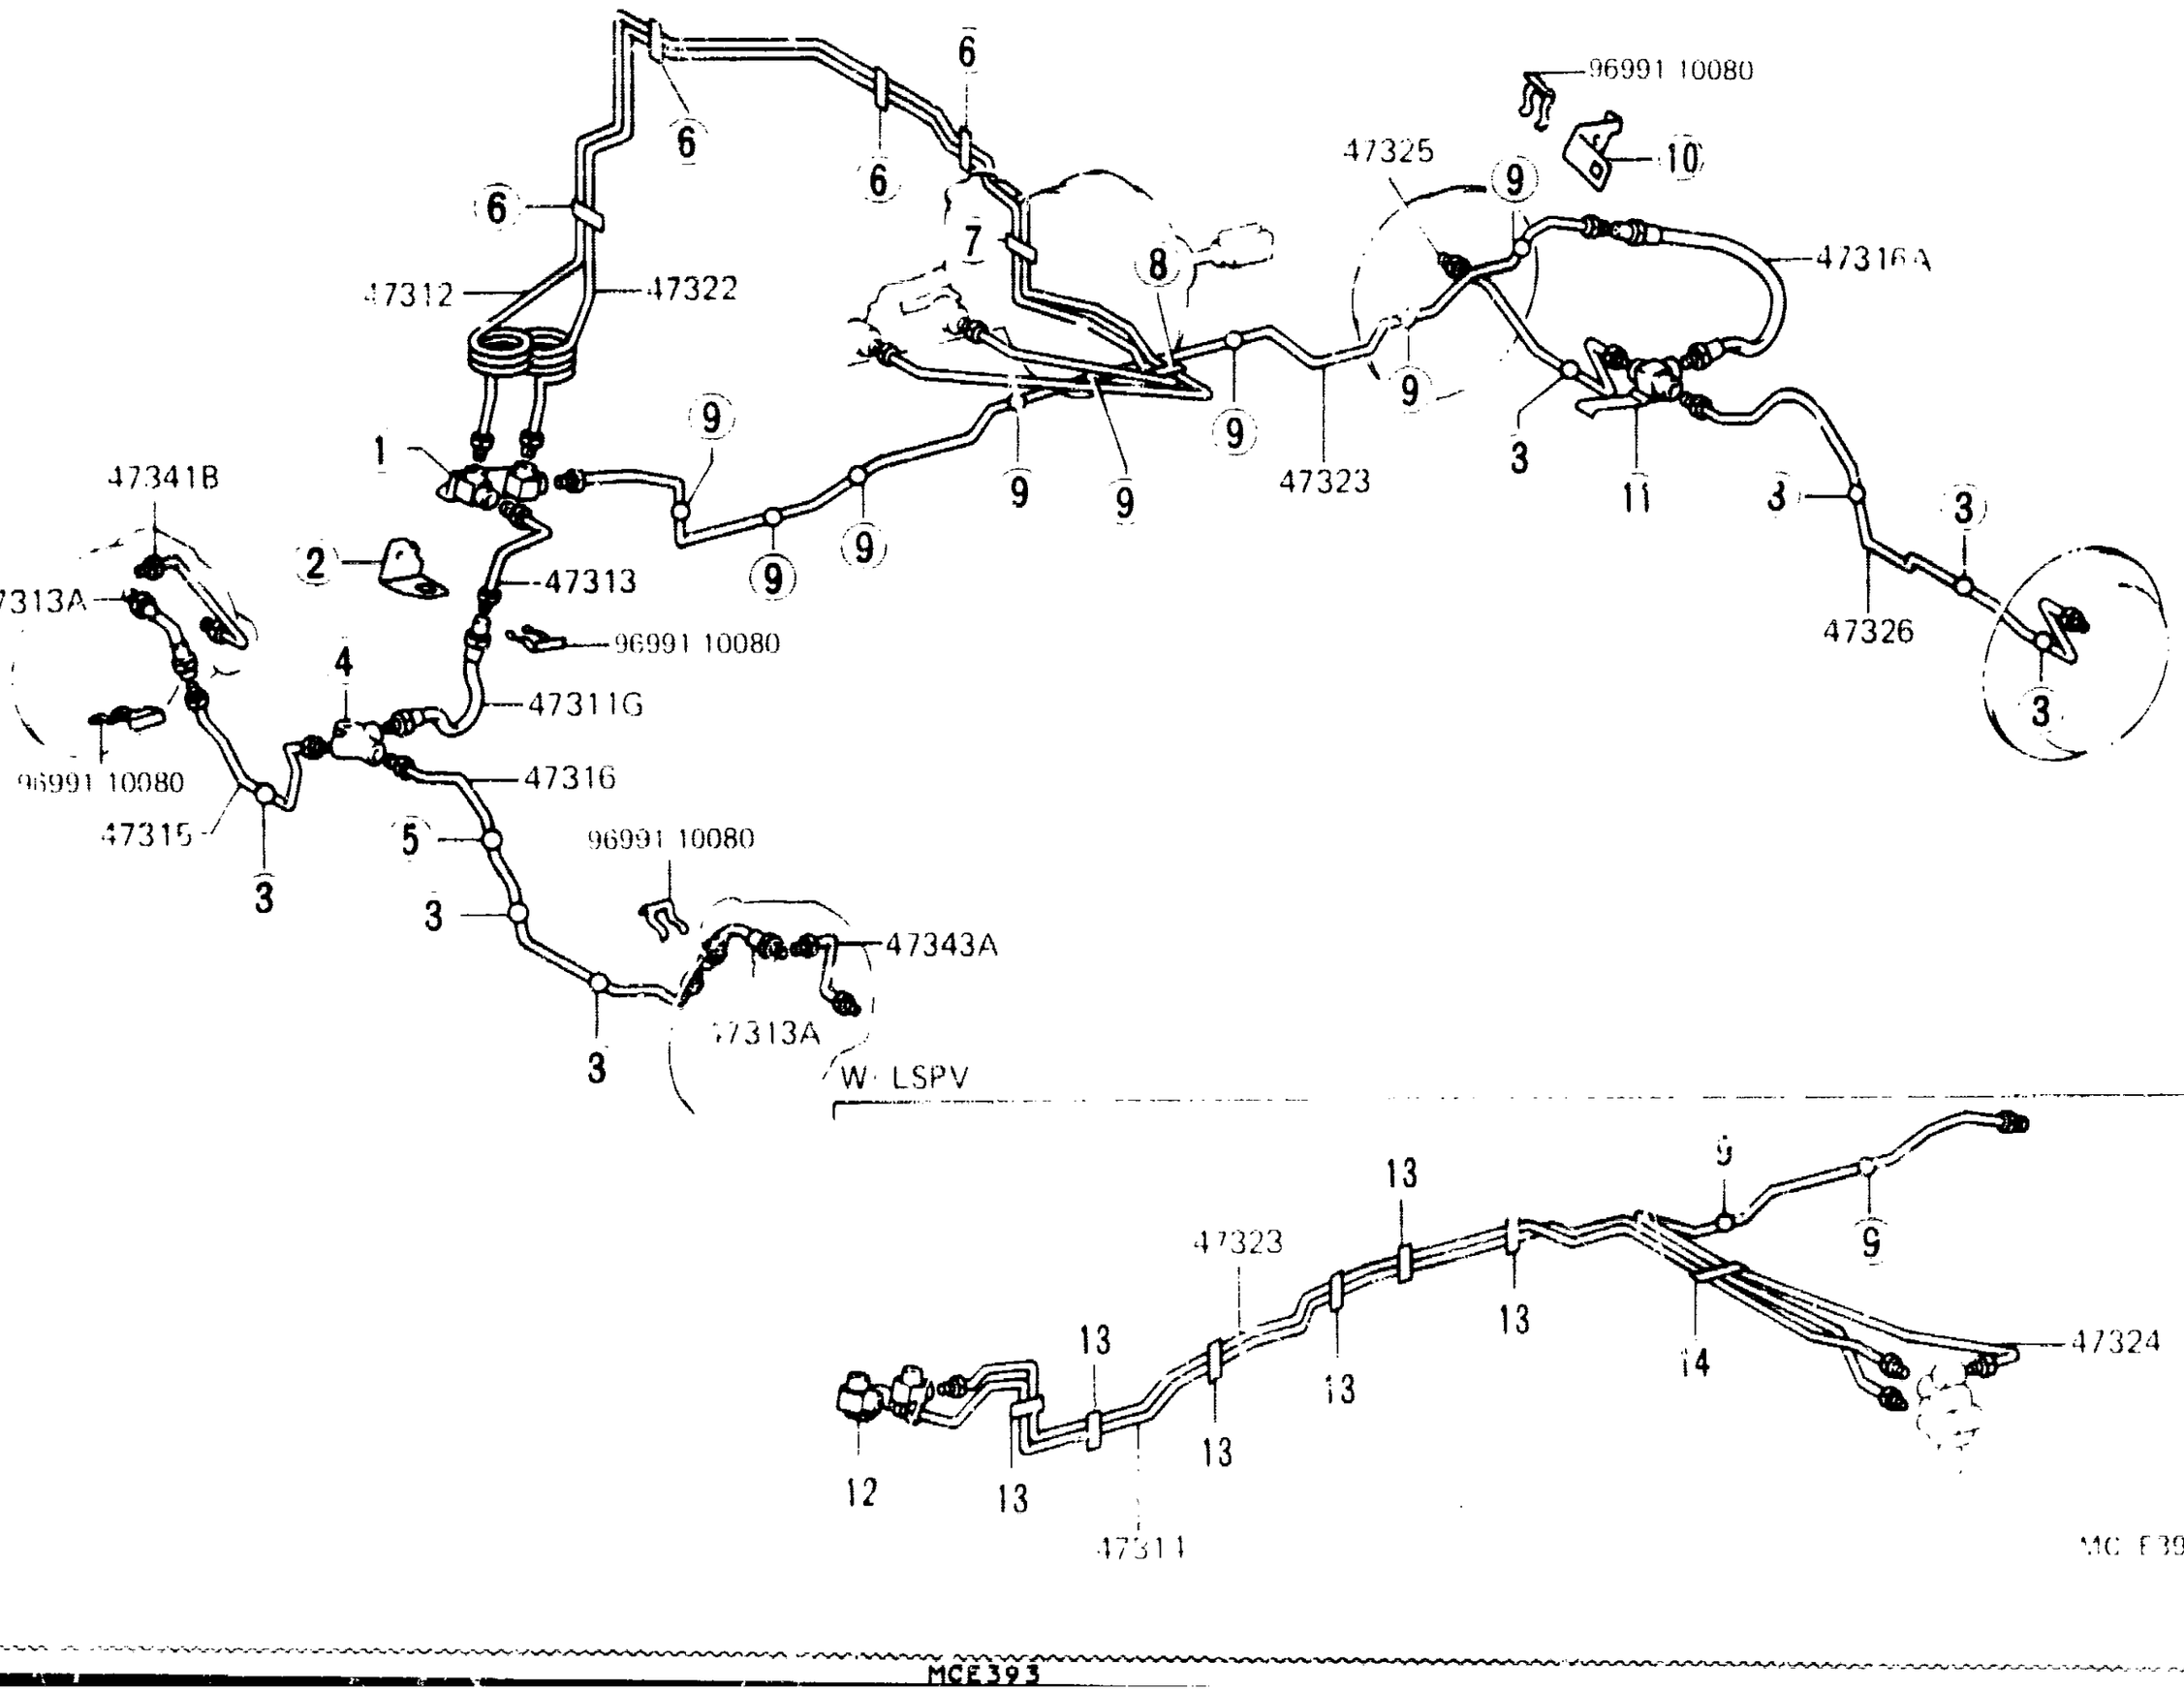

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	48215 LEAF, REAR SPRING, NO.5						
	CONTINUED						
8803-9001	FJ62	DRIVERS SEAT SIDE		48215-60661-	1		A
	48216 LEAF, REAR SPRING, NO.6						
8708-8803	FJ62	PASSENGER SEAT SIDE		48203-60650-	1		
8708-8803	FJ62	DRIVERS SEAT SIDE		48203-60660	1		
8803-9001	FJ62	PASSENGER SEAT SIDE		48203-60651-	1		
8803-9001	FJ62	DRIVERS SEAT SIDE		48203-60661-	1		
	48217 LEAF, REAR SPRING, NO.7						
8708-8803	FJ62	PASSENGER SEAT SIDE		48217-60650-	1		
8708-8803	FJ62	DRIVERS SEAT SIDE		48217-60660-	1		
8803-9001	FJ62	PASSENGER SEAT SIDE		48217-60651-	1		
8803-9001	FJ62	DRIVERS SEAT SIDE		48217-60661-	1		
	48220 SPRING ASSY, REAR LH						
8708-8803	FJ62			# 48210-60660-	1		
				(48210-60661-)	1		
8803-9001	FJ62			48210-60661-	1		
	48247 BOLT, REAR SPRING, CENTER						
8708-8803	FJ62			48247-60660-	2		
8803-9001	FJ62			48247-60651-	2		
	48252 SILENCER, REAR SPRING						
8803-9001	FJ62			48252-60070-	14		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	48253 SPEACER, REAR SPRING, NO.1						
8803-9001	FJ62			48253-15010-	2		
	48261 LEAF, REAR HELPER SPRING, NO.1						
8708-8803	FJ62	PASSENGER SEAT SIDE		48218-60650-	1		
8708-8803	FJ62	DRIVERS SEAT SIDE		48218-60660-	1		
8803-9001	FJ62	PASSENGER SEAT SIDE		48218-60651-	1		
8803-9001	FJ62	DRIVERS SEAT SIDE		48218-60661-	1		
	48306 BUMPER SUB-ASSY, REAR SPRING						
8708-9001	FJ62			48306-60030-	2		
	48371 RETAINER, REAR SPRING PAD						
8708-9001	FJ62			48371-60050-	2		
	48372 PAD, REAR SPRING						
8708-9001	FJ62			48372-23030-	4		
	48414B BRACKET, SPRING, NO.3, RH						
8708-9001	FJ62			48414-60042-	1		
	48415B BRACKET, SPRING, NO.3, LH						
8708-9001	FJ62			48415-60042-	1		
	48416 BRACKET, SPRING, NO.4						
8708-9001	FJ62			48416-60030-	2		
	48530 ABSORBER ASSY, SHOCK REAR, RH						
8708-9001	FJ62			48530-69105			


FIGURE NUMBER INDEX

M16

LOCATION	FIG No	SUMMARY
		BODY GROUP
3A1	51 - 51	FRAME
3C1	51 - 52	SUSPENSION CROSSMEMBER & UNDER COVER
3D1	51 - 53	SPARE WHEEL CARRIER
3E1	52 - 51	CAB MOUNTING & BODY MOUNTING
3G1	52 - 52	FRONT BUMPER & BUMPER STAY
3H1	52 - 53	REAR BUMPER & BUMPER STAY
3I1	53 - 51	RADIATOR GRILLE
3J1	53 - 53	HOOD & FRONT FENDER
3L1	53 - 54	HOOD LOCK & HINGE
3M1	53 - 55	FRONT FENDER APRON & DASH PANEL
3B2	55 - 51	INSTRUMENT PANEL & GLOVE COMPARTMENT
3F2	55 - 53	COWL PANEL & WINDSHIELD GLASS
3H2	57 - 51	FLOOR MEMBER
3I2	58 - 51	FRONT FLOOR PANEL & FRONT FLOOR MEMBER
3L2	58 - 52	REAR FLOOR PANEL & REAR FLOOR MEMBER
3A3	58 - 53	FLOOR INSULATOR
3B3	58 - 54	FLOOR MAT & SILENCER PAD
3D3	58 - 55	CONSOLE BOX & BRACKET
3G3	61 - 51	SIDE MEMBER
3K3	61 - 52	SIDE WINDOW
3L3	61 - 53	ROOF PANEL & BACK PANEL
3A4	61 - 55	REAR VENTILATOR & ROOF VENTILATOR
3B4	64 - 51	INSIDE TRIM BOARD
3E4	64 - 52	ROOF HEADLINING & SILENCER PAD
3G4	64 - 55	DECK BOARD & DECK TRIM COVER
3H4	67 - 51	FRONT DOOR PANEL & GLASS
3L4	67 - 53	FRONT DOOR LOCK & HANDLE
3A5	67 - 54	FRONT DOOR WINDOW REGULATOR & HINGE
3C5	67 - 55	REAR DOOR PANEL & GLASS
3F5	67 - 56	REAR DOOR LOCK & HANDLE
3H5	67 - 57	REAR DOOR WINDOW REGULATOR & HINGE
3J5	67 - 61	BACK DOOR PANEL & GLASS
3L5	67 - 62	BACK DOOR LOCK & HINGE
3A6	67 - 65	LOCK CYLINDER SET
3C6	71 - 51	SEAT & SEAT TRACK
3H6	71 - 52	SEAT BELT
3J6	74 - 51	ARMREST & VISOR
3L6	74 - 54	BATTERY CARRIER
3M6	74 - 55	CAUTION PLATE
3A7	74 - 57	ASH RECEPTACLE
3B7	75 - 51	EMBLEM & NAME PLATE
3D7	75 - 52	MOULDING
3G7	75 - 54	TOOL BOX & LICENSE PLATE BRACKET
3H7	77 - 51	FUEL TANK & TUBE
3L7	78 - 51	ACCELERATOR LINK
		ELECTRICAL GROUP
3A8	81 - 01	HEADLAMP
3C8	81 - 03	FRONT TURN SIGNAL LAMP
3D8	81 - 04	FRONT CLEARANCE LAMP
3E8	81 - 05	FRONT MARKER LAMP
3F8	81 - 11	REAR COMBINATION LAMP
3H8	81 - 13	REAR LICENSE PLATE LAMP
3I8	81 - 14	REAR SIDE MARKER LAMP
3J8	81 - 21	INTERIOR LAMP
3K8	82 - 01	BATTERY & BATTERY CABLE
3L8	82 - 02	WIRING & CLAMP
3C9	83 - 01	METER
3E9	83 - 02	INDICATOR
3F9	84 - 01	SWITCH & RELAY
3L9	84 - 04	ELECTRONIC FUEL INJECTION SYSTEM
3A10	85 - 01	WINDSHIELD WIPER
3C10	85 - 02	REAR WIPER
3D10	85 - 03	WINDSHIELD WASHER
3F10	85 - 04	REAR WASHER
3G10	85 - 05	HEADLAMP CLEANER
3I10	85 - 11	DOOR MOTOR & DOOR SOLENOID
3J10	86 - 01	RADIO & TAPE PLAYER
3L10	86 - 02	SPEAKER
3A11	86 - 04	ANTENNA
3B11	86 - 11	HORN
3C11	87 - 01	MIRROR
3E11	87 - 12	HEATING & AIR CONDITIONING - HEATER UNIT & BLOWER
3G11	87 - 14	HEATING & AIR CONDITIONING - COOLER UNIT
3I11	87 - 15	HEATING & AIR CONDITIONING CONTROL & AIR DUCT
3K11	87 - 16	HEATING & AIR CONDITIONING WATER PIPING
3M11	87 - 18	HEATING & AIR CONDITIONING - COOLER PIPING
3A12	87 - 19	HEATING & AIR CONDITIONING - COMPRESSOR

(8708-)

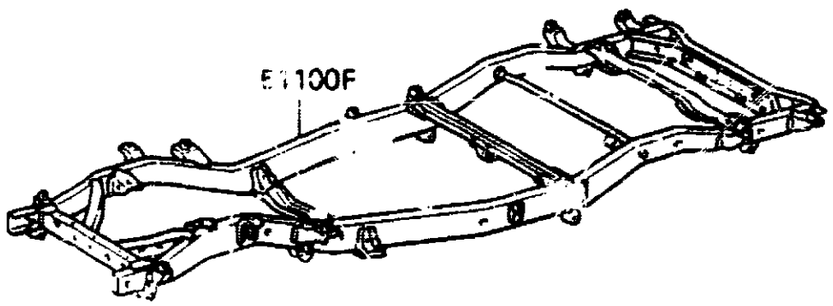

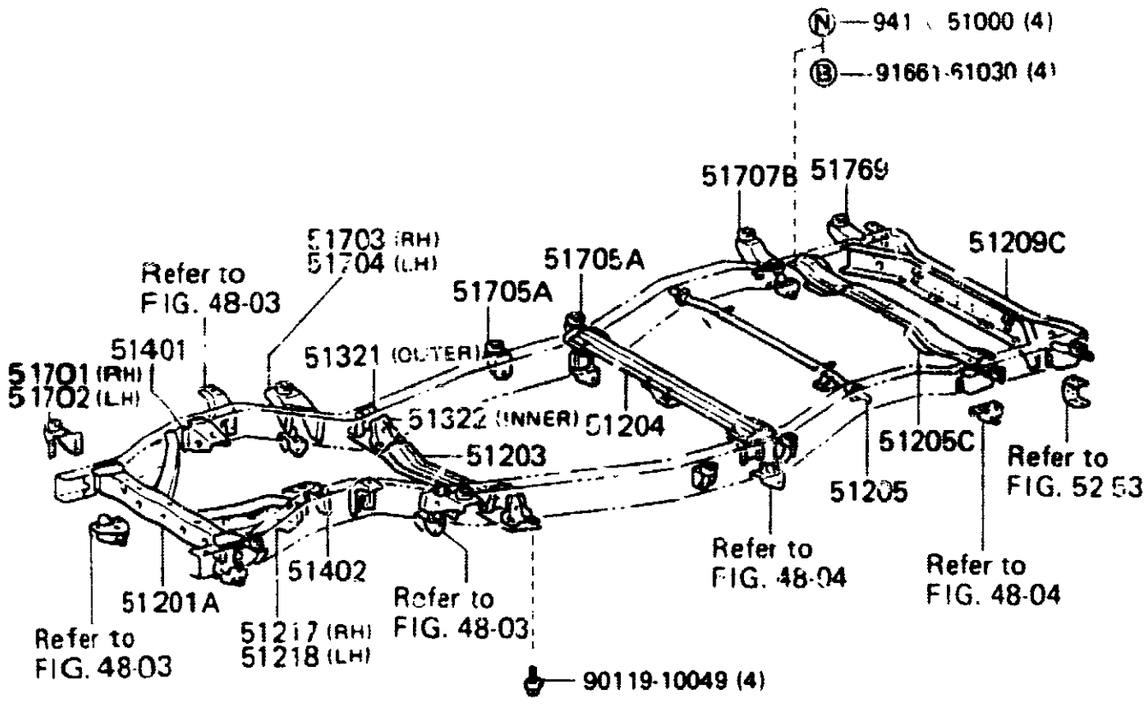


MB L858-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	KEY. REF F	KEY. REF T
	51100F	FRAME SUB-ASSY					
8708-9001	FJ62			51002-60432-	1		
	51201A	CROSSMEMBER SUB-ASSY, FRAME, FRONT					
8708-9001	FJ62			51201-60080-	1		
	51202	CROSSMEMBER SUB-ASSY, FRAME, NO.2					
8708-9001	FJ62			51202-60151-	1		
	51204	CROSSMEMBER SUB-ASSY, FRAME, NO.3					
8708-9001	FJ62			51203-60102-	1		
	51205	CROSSMEMBER SUB-ASSY, FRAME, NO.4					
8708-9001	FJ62			51204-60052-	1		
	51205C	CROSSMEMBER SUB-ASSY, FRAME, NO.5					
8708-9001	FJ62			51205-60010-	1		
	51209C	CROSSMEMBER SUB-ASSY, FRAME, REAR					
8708-9001	FJ62			51209-60090-	1		
	51217	REINFORCEMENT, FRONT CROSSMEMBER, LOWER RH					
8708-9001	FJ62			51217-60011-	1		
	51218	REINFORCEMENT, FRONT CROSSMEMBER, LOWER LH					
8708-9001	FJ62			51218-60011-	1		
	51321	GUSSET, CROSSMEMBER, NO.2 RH					
8708-9001	FJ62			51321-60030-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	53202	SUPPORT SUB-ASSY, RADIATOR, RH					
8708-9001	FJ62			53202-90A04-	1		
	53203	SUPPORT SUB-ASSY, RADIATOR, LH					
8708-8810	FJ62			53203-90A05-	1		
8810-9001	FJ62..WGG			〃	1		
	53205	SUPPORT SUB-ASSY, RADIATOR, UPPER					
8708-9001	FJ62			53216-90A03-	1		
	53217A	BRACE, HOOD LOCK SUPPORT					
8708-8801	FJ62			53217-90A03-	1		
8801-9001	FJ62			53217-90A05-	1		
	53292A	SEAL, RADIATOR SUPPORT, UPPER					
8708-9001	FJ62			53292-90A00-	1		
	53701	APRON SUB-ASSY, FRONT FENDER, RH					
8708-9001	FJ62			53701-90G90-	1		
	53702	APRON SUB-ASSY, FRONT FENDER, LH					
8708-9001	FJ62			53702-90A70-	1		
	53738D	SEAL, FRONT FENDER APRON TO FRAME, FRONT					
8708-9001	FJ62			53738-90A00-	2		
	53739C	SEAL, FRONT FENDER APRON TO FRAME, REAR					
8708-9001	FJ62			53739-90A00-	2		
	55101	PANEL SUB-ASSY, DASH					
8708-9001	FJ62			55016-90A75-	1		
	55101 CONTINUED	PANEL SUB-ASSY, DASH					
8708-9001	FJ62	W(AIR CONDITIONER)		55016-90A76-	1		
	55210	INSULATOR ASSY, DASH PANEL					
8708-9001	FJ62			55210-90A12-	1		
	55223B	INSULATOR, DASH PANEL HEAT, NO.1					
8708-9001	FJ62			55225-90A00-	1		
	57104A	MEMBER SUB-ASSY, FRONT CROSS					
8708-9001	FJ62			57104-90A03-	1		

FIG. 58-53 FLOOR INSULATOR


(8708-)

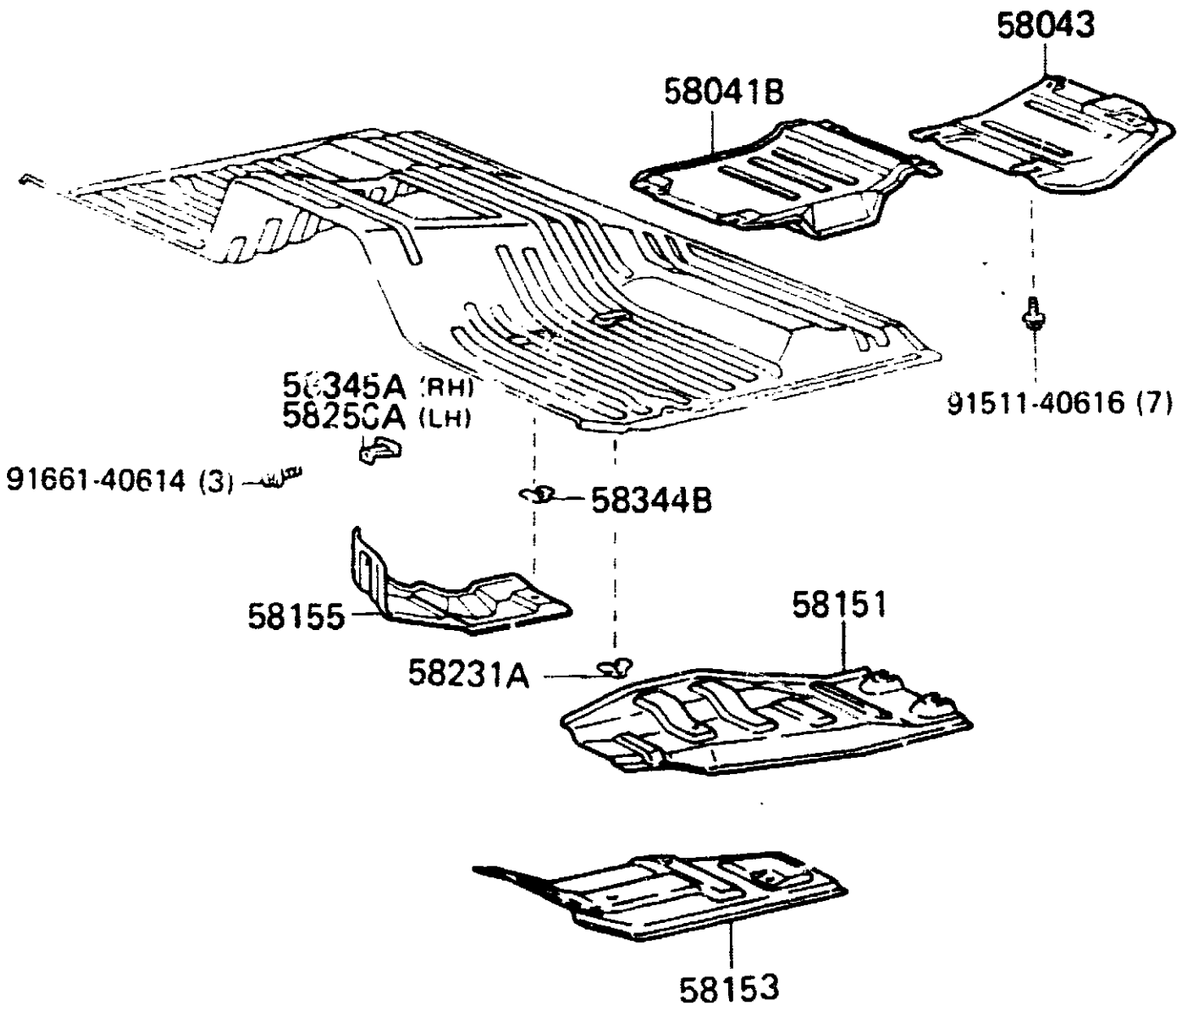


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	58041	INSULATOR SUB-ASSY, MAIN MUFF HEAT, FRONT					
8708-9001	FJ62			58041-90A01-	1		
	58043	INSULATOR SUB-ASSY, MAIN MUFF HEAT, REAR					
8708-9001	FJ62			58043-90A00-	1		
	58151	INSULATOR, FRONT FLOOR HEAT, NO.1					
8708-9001	FJ62			58151-90A05-	1		
	58153	INSULATOR, FRONT FLOOR HEAT, NO.2					
8708-9001	FJ62			58153-90A01-	1		
	58155	INSULATOR, FRONT FLOOR HEAT, NO.3					
8708-9001	FJ62			58155-90A01-	1		
	58231A	BRACKET, CENTER FLOOR HEAT INSULATOR, NO.1					
8708-9001	FJ62			58231-90A00-	1		
8708-9001	FJ62			"	2		
	58256A	BRACKET, FRONT FLOOR HARNESS					
8708-9001	FJ62			58256-90B00-	1		
	58344B	BRACKET, FUEL HOSE PROTECTOR, REAR					
8708-9001	FJ62			58344-90A01-	2		
8708-9001	FJ62				3		
	58345A	BRACKET, REAR FLOOR HEAT INSULATOR,					
8708-9001	FJ62			58345-90A00-	1		

FIG. 61-55 REAR VENTILATOR & ROOF VENTILATOR

(8708-)

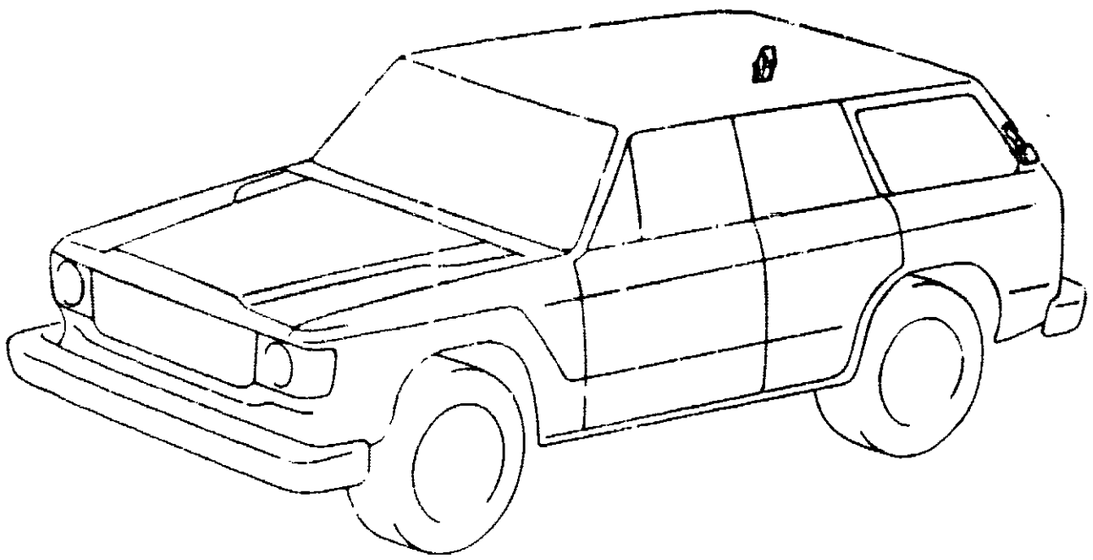

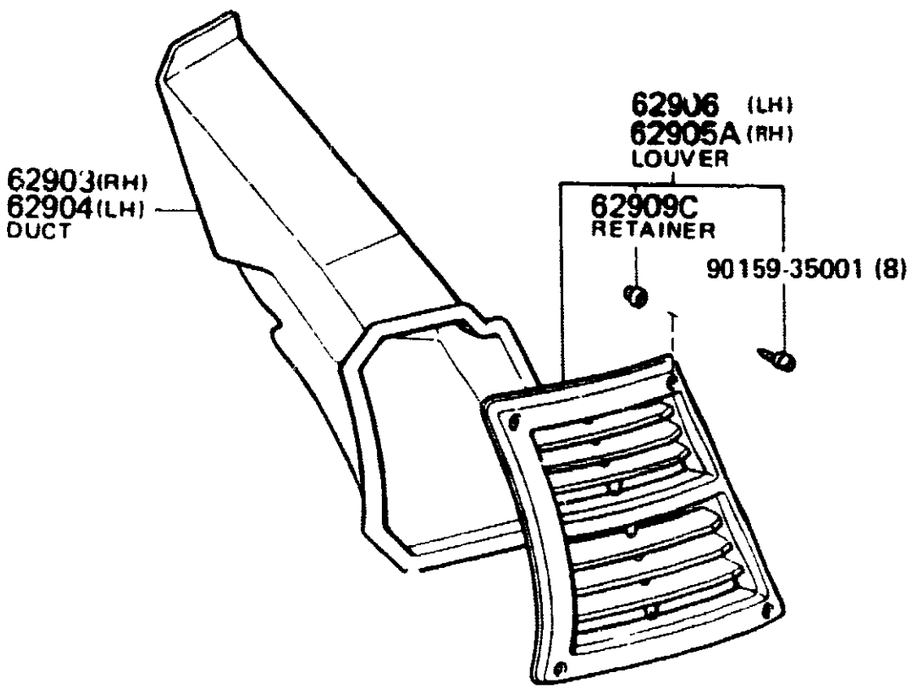


MB L942-A


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	62903	DUCT SUB-ASSY, QUARTER VENTILATOR, RH					
8708-9001	FJ62			62903-90A00-	1		
	62904	DUCT SUB-ASSY, QUARTER VENTILATOR, LH					
8708-9001	FJ62			62904-90A00-	1		
	62905A	LOUVER, QUATER VENTILATION, RH					
8708-9001	FJ62			62905-69015-	1		
	62906	LOUVER, QUATER VENTILATION, LH					
8708-9001	FJ62			62906-69015-	1		
	62909C	RETAINER SUB-ASSY, ROOF SIDE VENT LOUVER					
8708-9001	FJ62			62909-22010-	8		


FIG. 67-54 FRONT DOOR WINDOW REGULATOR & HINGE

(8708-)

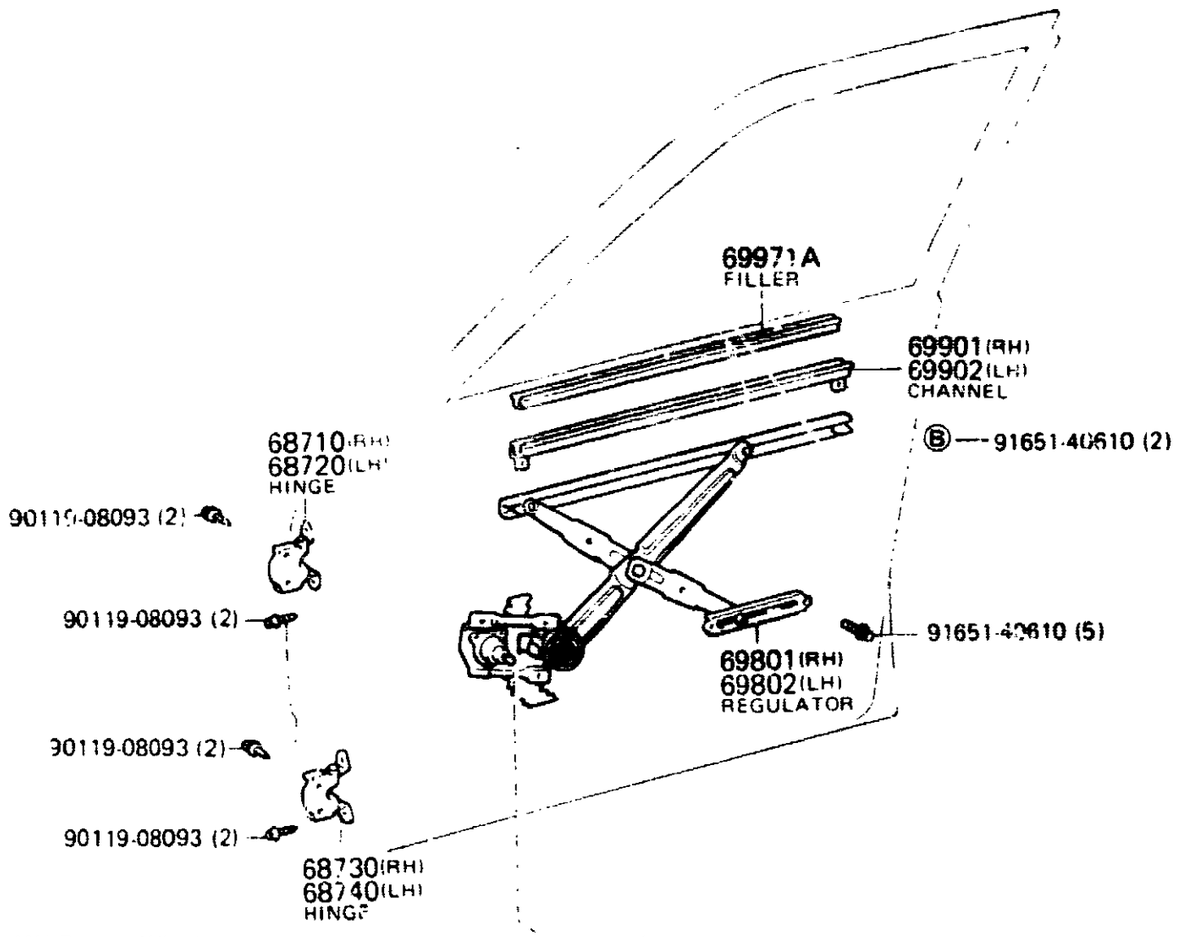

W/ Power Window

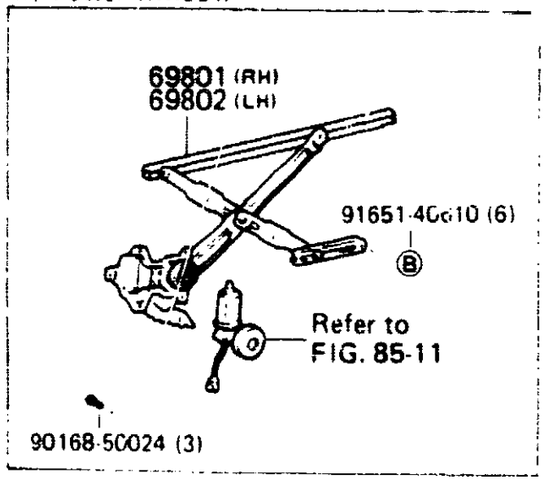

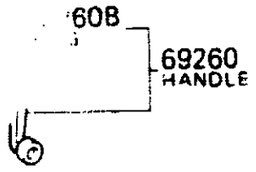


MB L951

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	68710 HINGE ASSY, FRONT DOOR, UPPER RH						
8708-9001	FJ62			68710-14020-	1		
	68720 HINGE ASSY, FRONT DOOR, UPPER LH						
8708-9001	FJ62			68720-14020-	1		
	68730 HINGE ASSY, FRONT DOOR, LOWER RH						
8708-9001	FJ62			68730-14020-	1		
	68740 HINGE ASSY, FRONT DOOR, LOWER LH						
8708-9001	FJ62			68740-14020-	1		
	69260 HANDLE ASSY, FRONT DOOR WINDOW REGULATOR						
P 8708-9001	FJ62	GRAY(TRIM1)		69260-12010-03	2		
P 8708-9001	FJ62	BROWN(TRIM4)		69260-12010-46	2		
	69260B RING, SHAFT SNAP (FOR FRONT DOOR WINDOW REGULATOR HANDLE)						
8708-9001	FJ62			90520-01002-	2		
	69272 PLATE, FRONT DOOR REGULATOR INSIDE HANDLE						
8708-9001	FJ62	NATURAL WHITE(TRIM 1,4)		69285-22010-08	2		
	69801 REGULATOR SUB-ASSY, FRONT DOOR WINDOW, RH						
8708-9001	FJ62	W(POWER WINDOW)		69801-90A00-	1		
8708-9001	FJ62			69810-90A02-	1		
	69802 REGULATOR SUB-ASSY, FRONT DOOR WINDOW, LH						
8708-9001	FJ62	W(POWER WINDOW)		69802-90A00-	1		
8708-9001	FJ62			69820-90A02-	1		


FIG. 67-65 LOCK CYLINDER SET

(8708-)

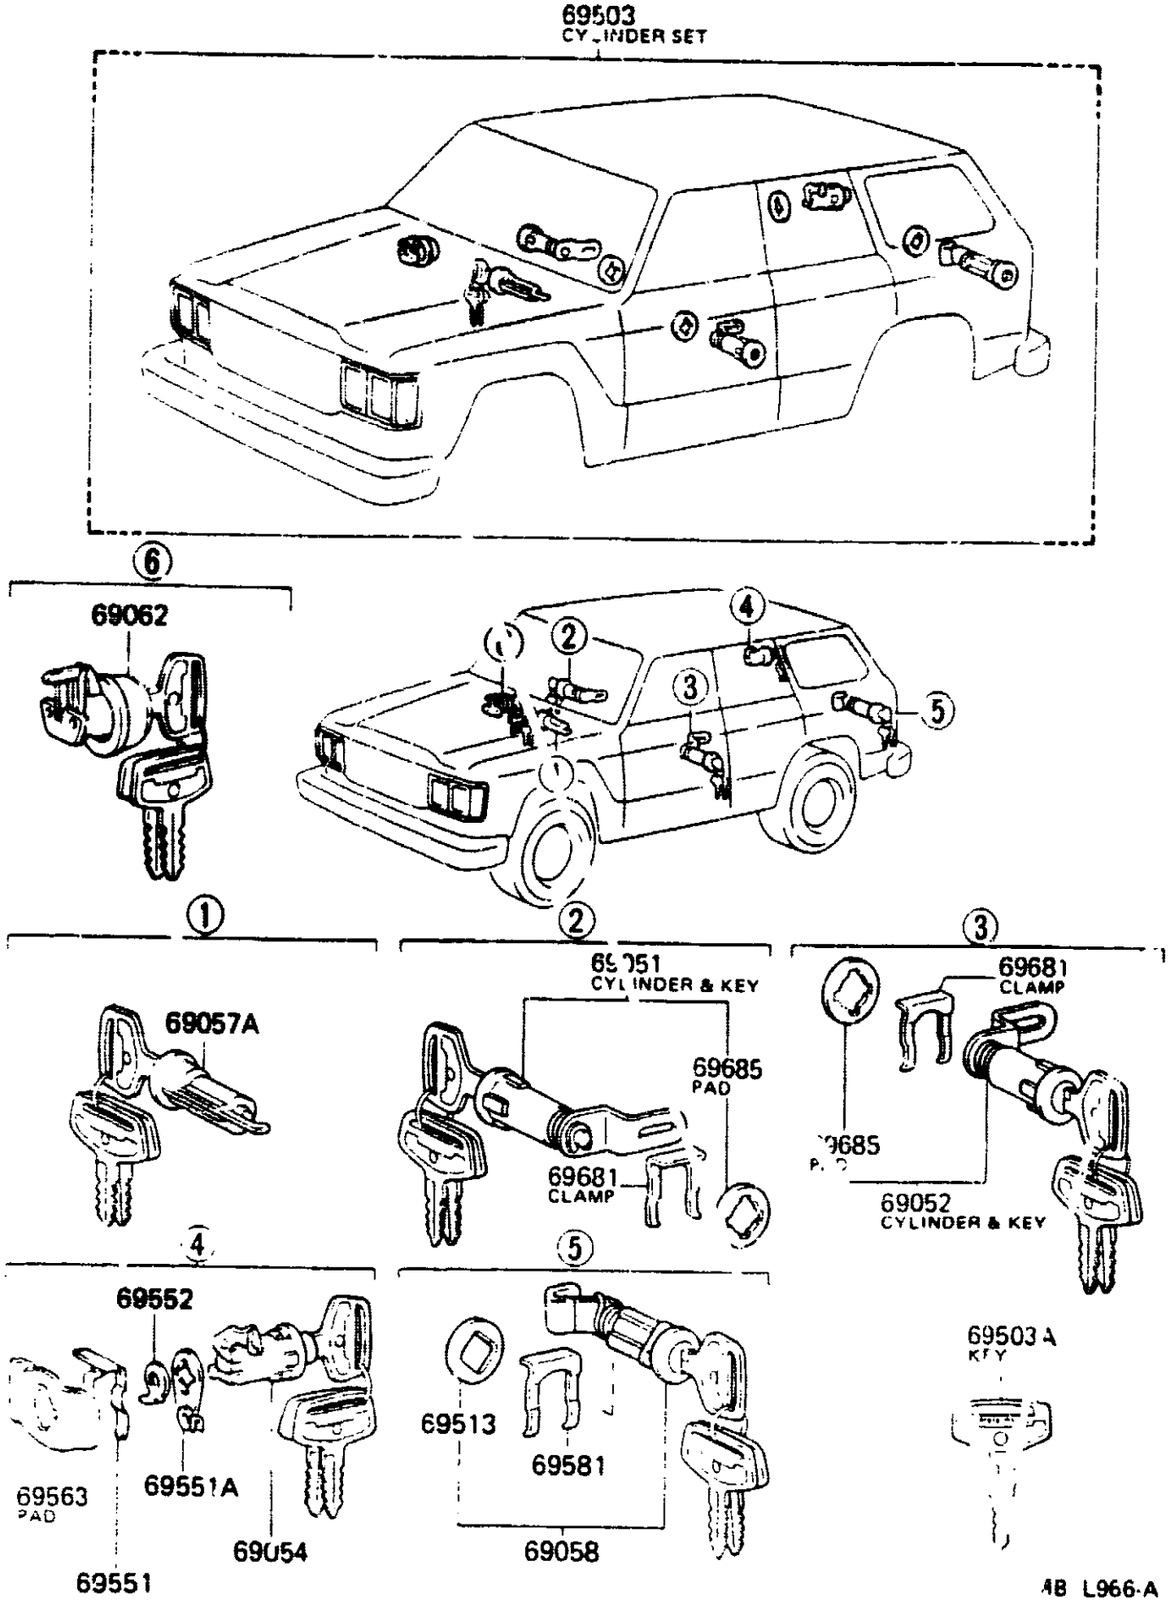



PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	69051	CYLINDER AND KEY SET, DOOR LOCK, RH					
8708-9001	FJ62			69051-90A06-	1		
	69052	CYLINDER AND KEY SET, DOOR LOCK, LH					
8708-9001	FJ62			69052-90A06-	1		
	69054	CYLINDER AND KEY SET, BACK DOOR LOCK					
8708-9001	FJ62			69055-90A06-	1		
8708-9001	FJ62	W(POWER WINDOW)		69055-90A11-	1		
	69057A	CYLINDER & KEY SET, IGNITION SWITCH LOCK					
8708-9001	FJ62			69057-90A08-	1		
	69058	CYLINDER AND KEY SET, FUEL FILLER LID					
8708-9001	FJ62			69058-90A02-	1		
	69062	CYLINDER AND KEY SET, GLOVE COMPARTMENT LOCK					
8708-9001	FJ62			69062-90A01-	1		
	69503	CYLINDER SET, LOCK					
8708-9001	FJ62	W(POWER WINDOW)		69005-90A47-	1		
8708-9001	FJ62			69005-90A62-	1		
	69503A	KEY, BLANK					
8708-9001	FJ62	MASTER KEY		90999-00066-	1		
8708-9001	FJ62	MASTER KEY(×68)		90999-00104-	1		
	69513	PAD, FUEL FILLER LID LOCK CYLINDER					
8708-9001	FJ62			69513-14010-	1		

(8708-)

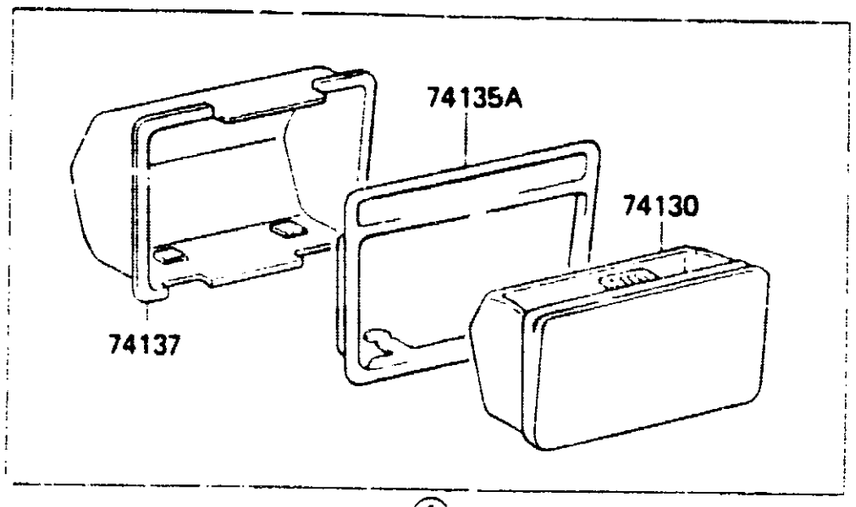

①

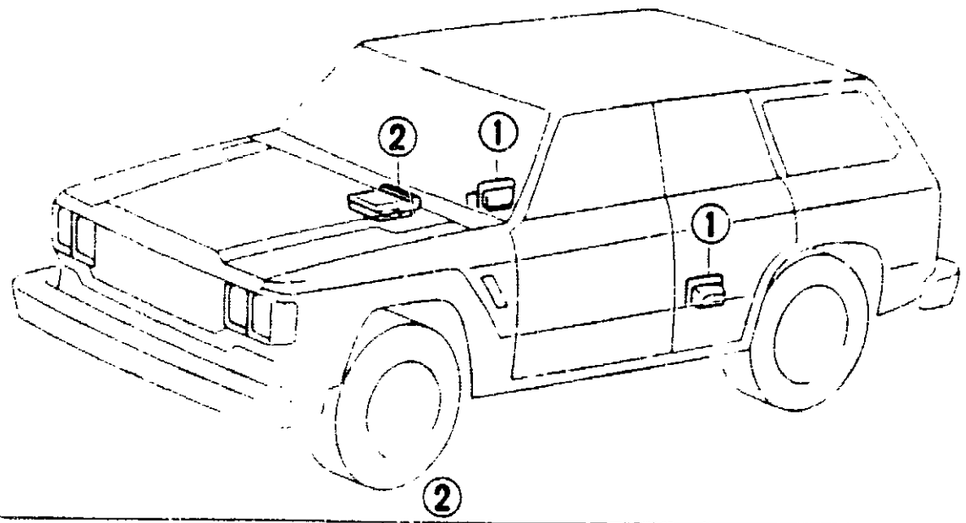

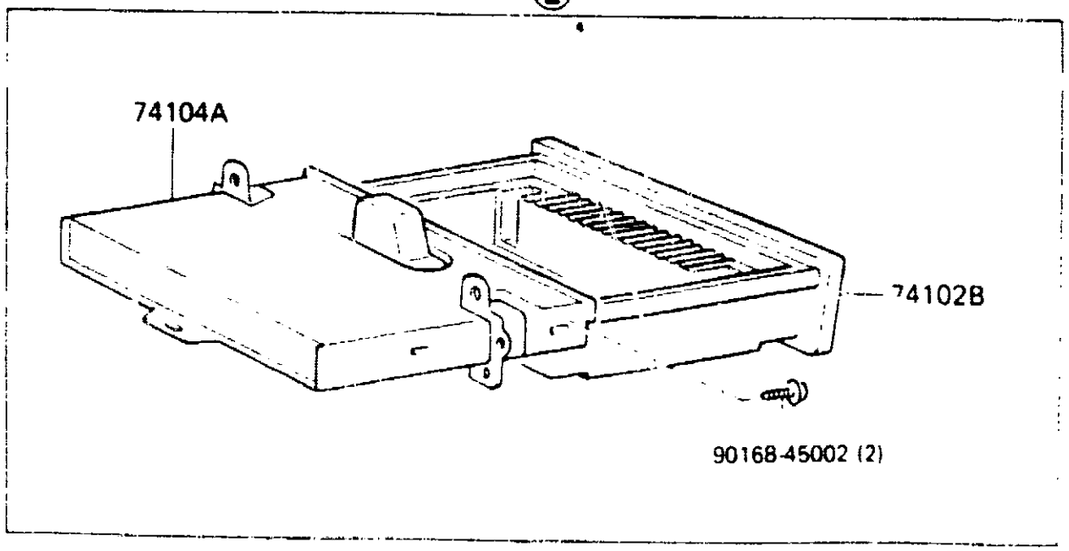


MB L972-A

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		74102B	BOX SUB-ASSY, FRONT ASH RECEPTACLE					
	8708-9001	FJ62			74102-90A01-	1		
		74104A	RETAINER SUB-ASSY, FRONT ASH RECEPTACLE					
	8708-9001	FJ62			74104-90A01-	1		
		74130	RECEPTACLE ASSY, REAR ASH					
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		74105-10010-10	2		
	8708-9001	FJ62	GRAY(TRIM1)		74105-10010-13	2		
		74135A	RETAINER, REAR ASH RECEPTACLE					
	8708-9001	FJ62			74135-10030-	2		
		74137	RETAINER, REAR ASH RECEPTACLE, INNER RH					
	8708-9001	FJ62			74137-10030-	2		

FIG. 81-01 HEADLAMP

(8708-)

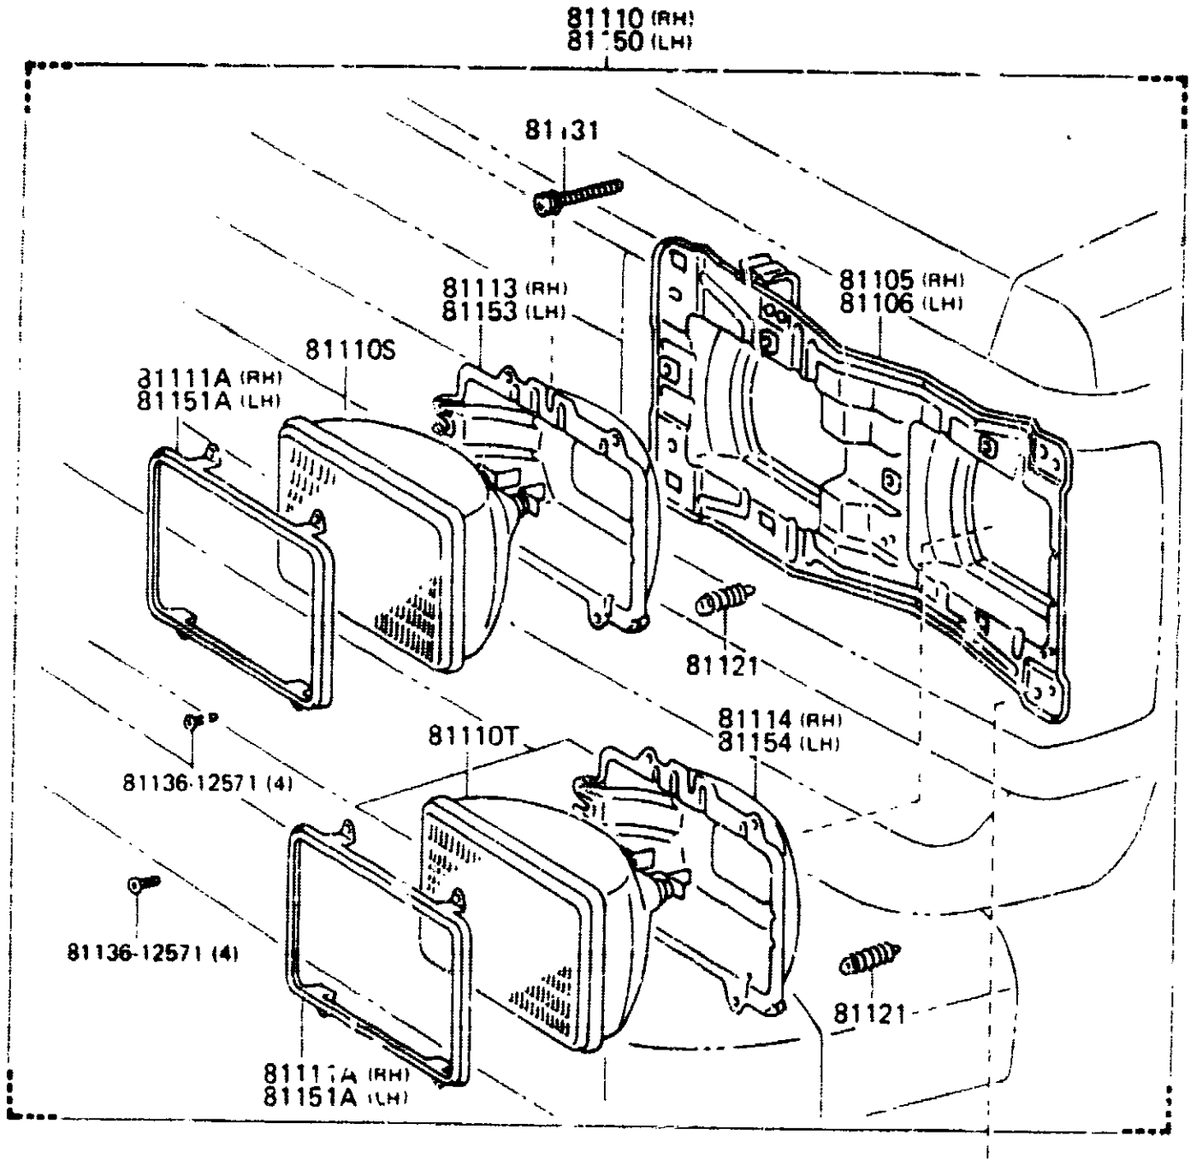

ME J474


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	81105	HOUSING SUB-ASSY, HEADLAMP, RH					
8708-9001	FJ62			81105-90A27-	1		
	81106	HOUSING SUB-ASSY, HEADLAMP, LH					
8708-9001	FJ62			81106-90A27-	1		
	81110	HEADLAMP ASSY, RH					
8708-9001	FJ62			81110-90A28-	1		
	81110S	SEALED BEAM UNIT, NO.1					
8708-9001	FJ62	12V 50W, WHITE		90981-05034-	2		
	81110T	SEALED BEAM UNIT, NO.2					
8708-9001	FJ62	12V 40/60W, WHITE		90981-05035-	2		
	81111A	RING, SEALED BEAM RETAINING, NO.1 RH					
8708-9001	FJ62			81111-20360-	2		
	81113	RING, SEALED BEAM MOUNTING, NO.1 RH					
8708-9001	FJ62			81113-90B04-	1		
	81114	RING, SEALED BEAM MOUNTING, NO.2 RH					
8708-9001	FJ62			81154-22391-	1		
	81121	SPRING, HEADLAMP TENSION					
8708-9001	FJ62			81121-14320-	4		
	81131	SCREW, HEADLAMP ADJUSTING					
8708-9001	FJ62			81131-28050-	8		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	82151 WIRE, FRONT DOOR, RH CONTINUED						
8708-9001	FJ62	W(POWER WINDOW & DOOR REMOTE CONTROL MIRROR)		82151-90A10-	1		
8708-9001	FJ62	W(DOOR REMOTE CONTROL MIRROR)		82151-90A13-	1		
	82152 WIRE, FRONT DOOR, LH						
8708-9001	FJ62			82151-90A05-	1		
8708-9001	FJ62	W(DOOR REMOTE CONTROL MIRROR)		82151-90A13-	1		
8708-9001	FJ62	W(POWER WINDOW)		82152-90A05-	1		
8708-9001	FJ62	W(POWER WINDOW & DOOR REMOTE CONTROL MIRROR)		82152-90A06-	1		
	82153 WIRE, REAR DOOR, NO.1						
8708-9001	FJ62			82153-90A01-	1		
	82154 WIRE, REAR DOOR, NO.2						
8708-9001	FJ62			82154-90A03-	1		
	82155 WIRE, CENTER PILLER, NO.1						
8708-9001	FJ62			82155-90A02-	1		
	82161 WIRE, FLOOR						
8708-9001	FJ62			82161-90A40-	1		
	82162 WIRE, FLOOR, NO.2						
8708-9001	FJ62			82162-90A38-	1		
	82163 WIRE, FLOOR, NO.3						
8708-9001	FJ62			82163-90A21-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	82164 WIRE, FRAME						
8708-9001	FJ62			82164-90A03-	1		
	82166 WIRE, CONSOLE BOX						
8708-9001	FJ62			82166-90A00-	1		
	82171 WIRE, ROOF, NO.1						
8708-9001	FJ62			82171-90A10-	1		
	82173 WIRE, ROOF, NO.3						
8708-9001	FJ62			82173-90A00-	1		
	82181 WIRE, LUGGAGE ROOM, NO.1						
8708-9001	FJ62			82181-90A00-	1		
	82182 WIRE, LUGGAGE ROOM, NO.2						
8708-9001	FJ62			82182-90A02-	1		
	82183 WIRE, LUGGAGE ROOM, NO.3						
8708-9001	FJ62			82183-90A01-	1		
	82184 WIRE, BACK DOOR, NO.1						
8708-9001	FJ62	LH		82184-90A03-	1		
	82185 WIRE, BACK DOOR, NO.2						
8708-9001	FJ62			82185-90A05-	1		
	82187 WIRE, REAR WINDOW, NO.2						
8708-9001	FJ62			82187-90A00-	1		


FIG. 85-01 WINDSHIELD WIPER

(8708-)

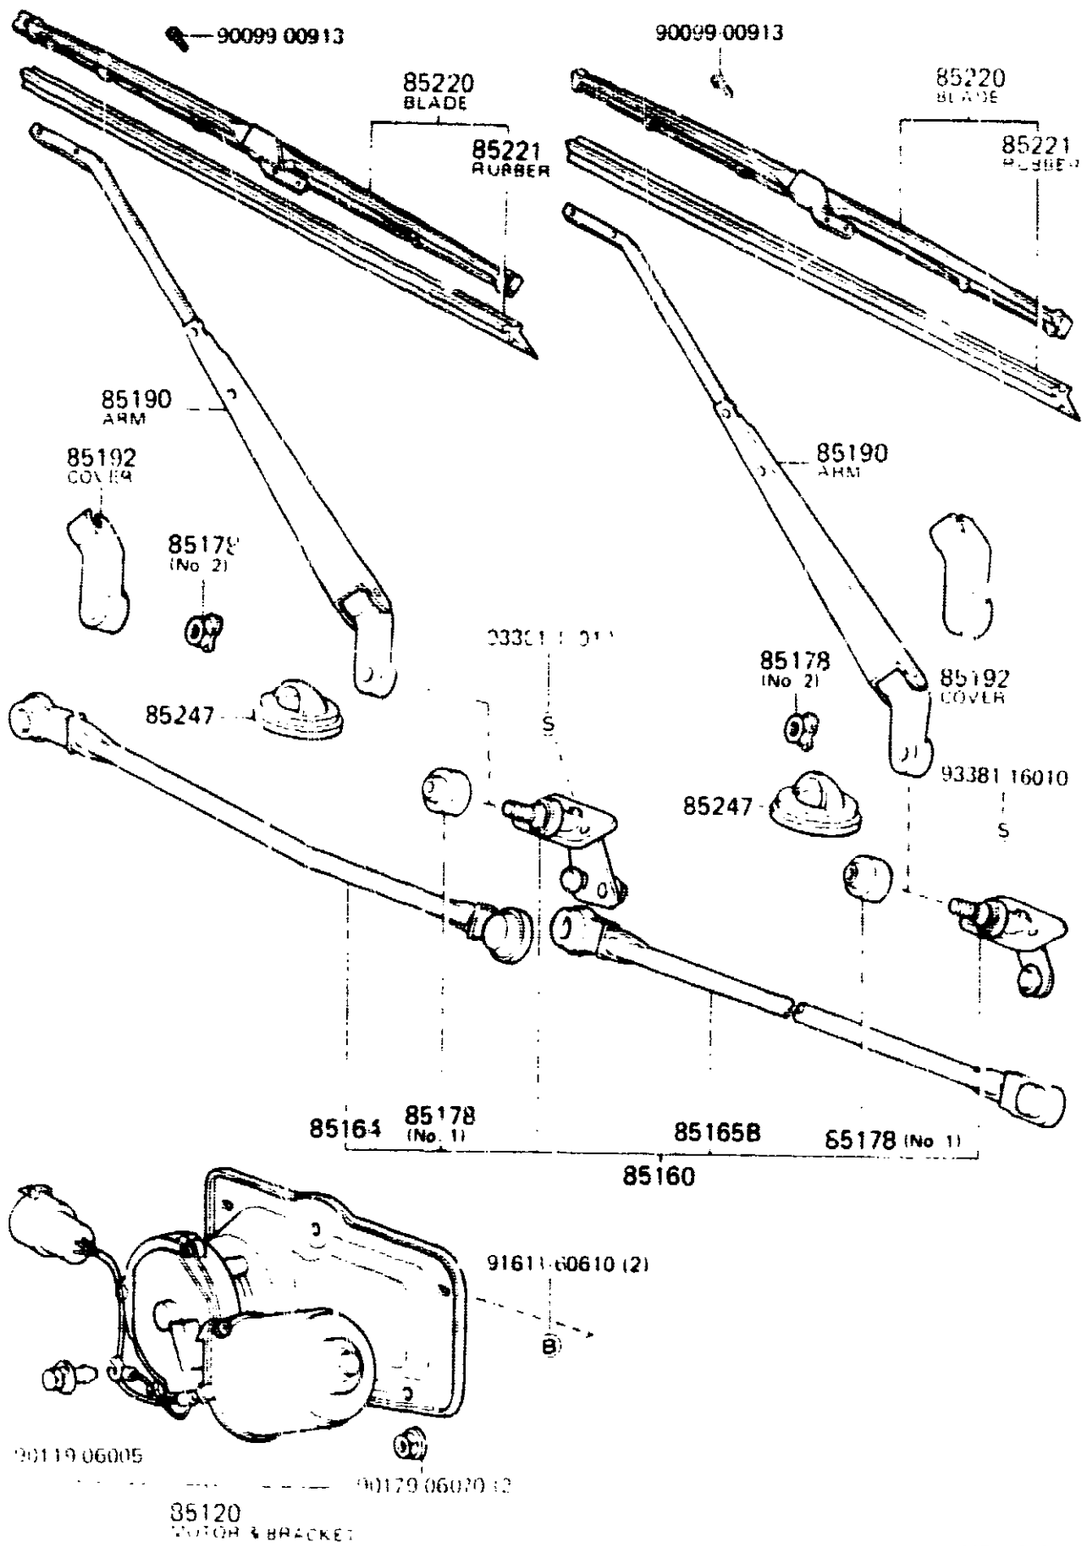

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	85120 MOTOR AND BRACKET ASSY, WINDSHIELD WIPER						
8708-9001	FJ62			85120-90A35-	1		
	85160 LINK ASSY, WINDSHIELD WIPER						
8708-9001	FJ62			85160-90A07-	1		
	85164 ROD, WINDSHIELD WIPER LINK, NO.1						
A 8708-9001	FJ62			85164-90A02-	1		
	85165B ROD, WIPER LINK, NO.2						
A 8708-9001	FJ62			85165-90A01-	1		
	85178 NUT (FOR WIPER ARM SETTING)						
8708-9001	FJ62	NO.1		85178-90A00-	2		
8708-9001	FJ62	NO.2		90179-08026-	2		
	85190 ARM ASSY, WINDSHIELD WIPER						
8708-9001	FJ62	LH		85190-90A02-	1		
8708-9001	FJ62	RH		85210-90A01-	1		
	85192 COVER, WINDSHIELD WIPER ARM						
8708-9001	FJ62			85192-14010-	2		
	85220 BLADE ASSY, WINDSHIELD WIPER						
8708-9001	FJ62	LH		85220-16270-	1		
8708-9001	FJ62	RH		85220-16340-	1		
	85221 BLADE, WINDSHIELD WIPER						
8708-9001	FJ62			85221-30100-	2		

(8708-)

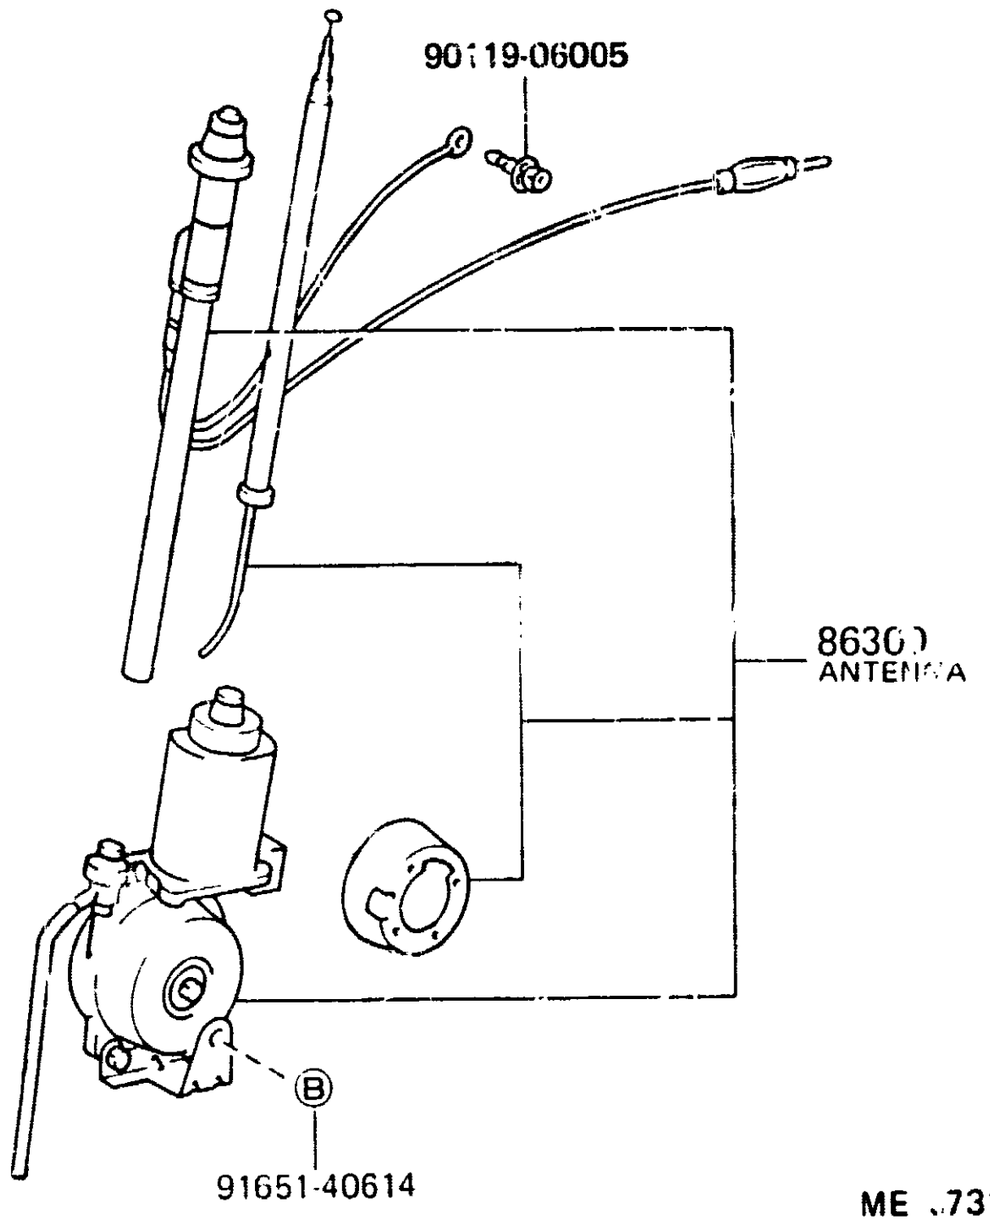



ME J731

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	86300	ANTENNA ASSY, W/HOLDER					
8708-8810	FJ62			# 86300-90A17- (86300-90A25-)	1 1		
8810-9001	FJ62..WGG			86300-90A25-	1		

(8708-8808)

ILLUST.NO.1 OF 2

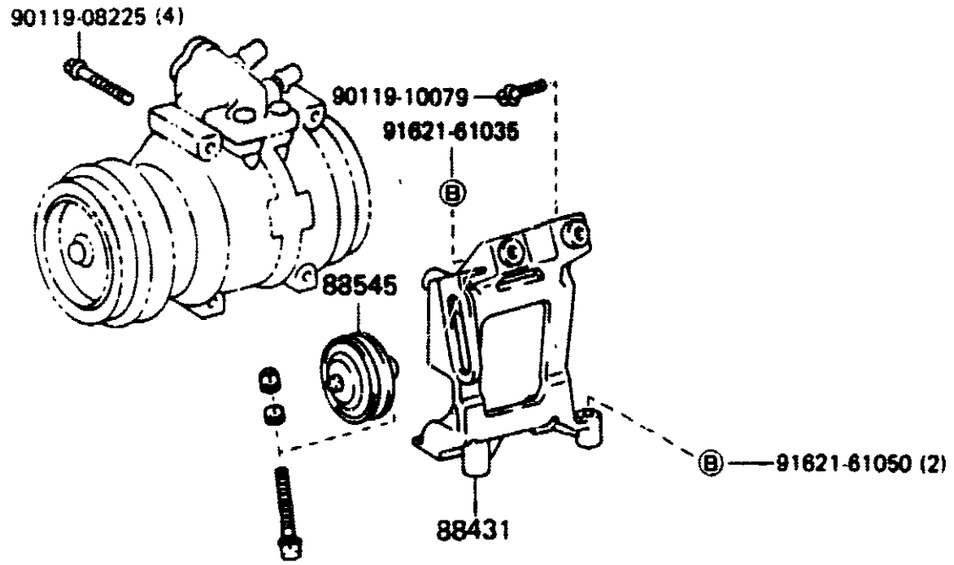


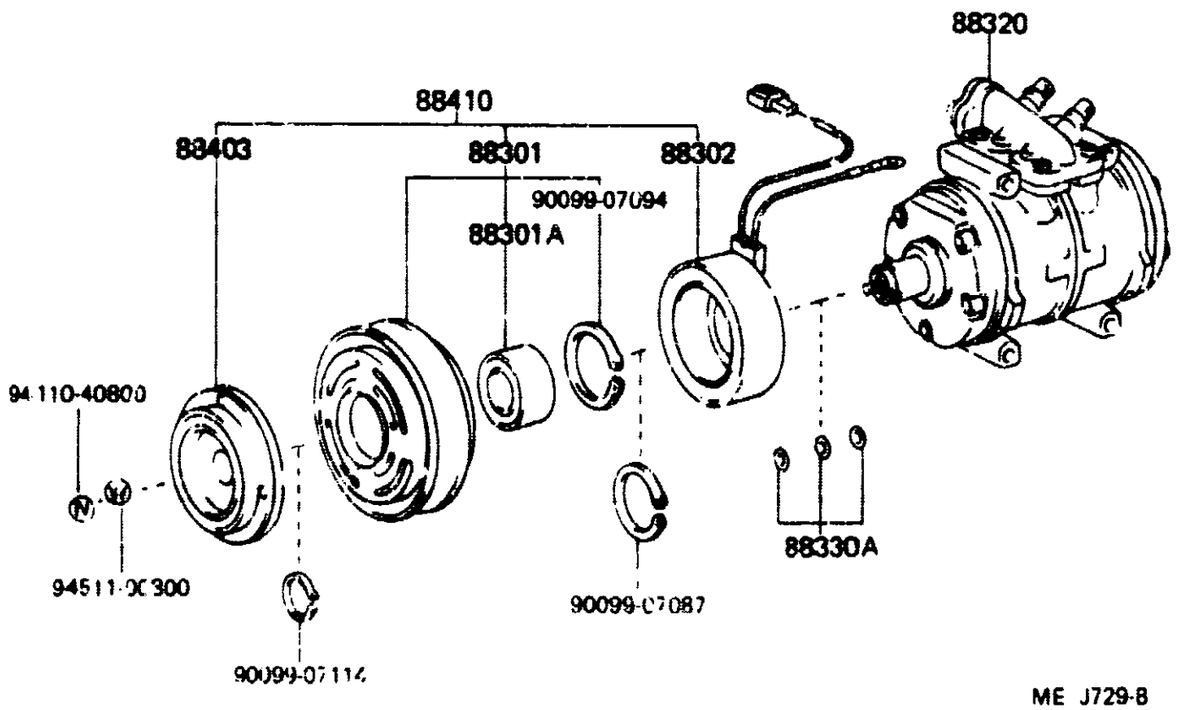


ME J729-8

(8808-)

ILLUST.NO.1 OF 2

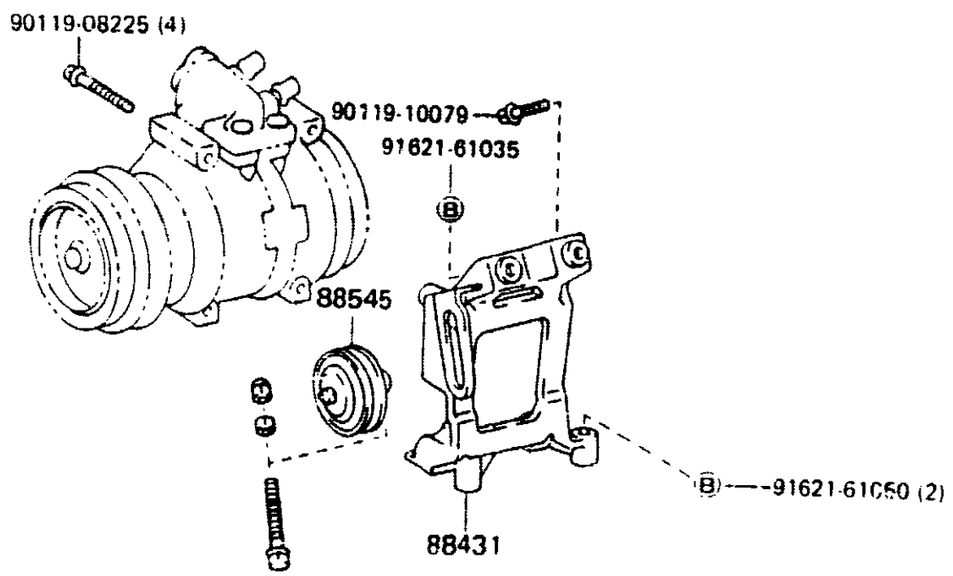

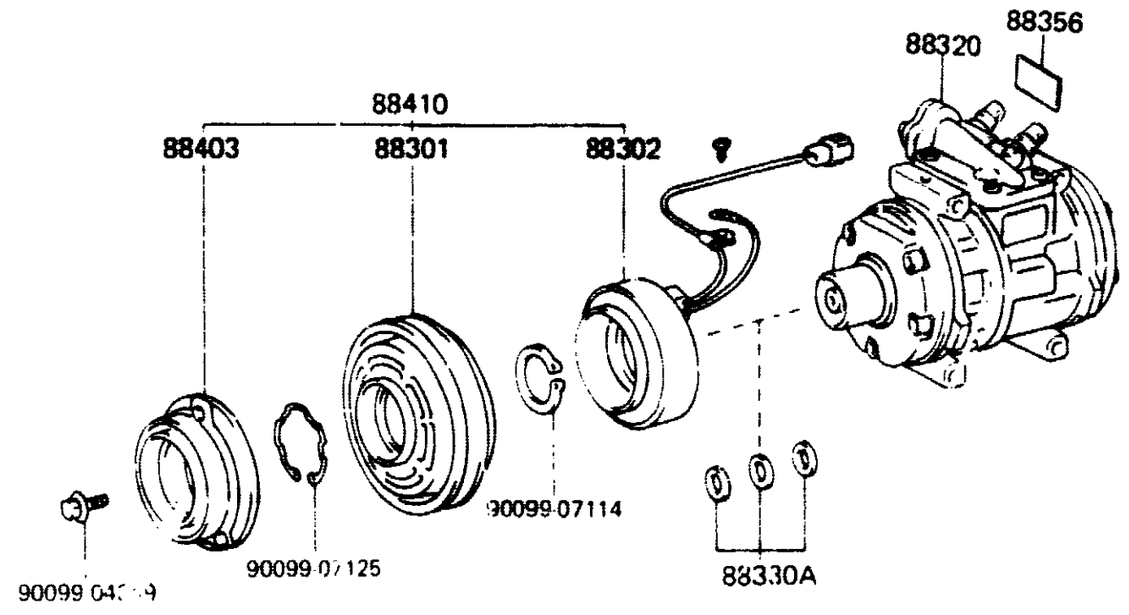

ME M631

CONTENTS

(PART NUMBER - LOCATION)

04044 - 16361 ---------- A14
16363 - 35676 ---------- B14
35676 - 45130 ---------- C14
45130 - 57402 ---------- D14
57405 - 67917 ---------- E14
68111 - 81520 ---------- F14
81521 - 89668 ---------- G14
89669 - 90389 ---------- H14
90389 - 91511 ---------- I14
91611 - 99915 ---------- J14

PART NUMBER	LOCATION		PART NUMBER	LOCATION		PART NUMBER	LOCATION
04044-60150-	2J7		11253-61010-	1H1		13103-61032-	1A2
04111-61070-	1E1		11292-61010-	1A4		13105-61032-	1A2
04112-61060-	1E1		11298-61040-	1A4		13107-61031-	1A2
04351-60011-	2D1	N	-61041-	1A4		-61032-	1A2
04371-10011-	2M6	N	-61042-	1A4		13201-38011-	1A2
-36030-	2K4		-61050-	1A4		13204-61020-	1A2
04412-60030-	2B5	N	-61051-	1A4		13265-39025-	1A2
04434-60012-	2E9	N	-61052-	1A4	P	13401-61021-	1A2
04443-60330-	2G8		-61060-	1A4		-61023-	1A2
04445-60030-	2J7	S	-61061-	1A4		13470-61030-	1B2
04446-30030-	2D7	N	-61062-	1A4		13471-61010-	1B2
-35010-	2D7		11302-61031-	1J1		13511-60060-	1C2
04455-60020-	2J7		11311-61020-	1J1		13521-61010-	1B2
04474-60010-	2J8	P	11312-61020-	1J1		13523-61010-	1C2
04476-60050-	2J8	B	-61021-	1J1		13571-61010-	1C2
04477-60010-	2B9		11328-61010-	1J1		13711-61010-	1C2
04479-30030-	2H8		11369-60011-	1J1		13715-61040-	1D2
04481-60030-	2H9	P	11400-61120-	1D1		13734-60030-	1D2
04482-60040-	2H9	B	-61121-	1D1		13741-60030-	1D2
	2L9	B	11401-69306-	1H1		-61010-	1D2
04483-60050-	2L9		11452-61010-	1I1		13751-61020-	1D2
04491-60030-	2H8		11495-61010-	1H1		13755-61020-	1D2
04493-60160-	2D8		11701-61010-01	1M1		13781-61020-	1D2
04495-60010-	2J8		-61010-02	1M1		13811-61030-	1D2
-60011-	2J8		-61010-03	1A2		13812-61030-	1D2
09114-60050-	1A1		-61010-04	1A2		13901-61020-	1D2
09115-60030-	1A1		-61010-05	1A2		13952-61012-	1D2
09116-35041-	1A1		11704-61010-	1M1		13994-61020-	1D2
09120-60100-	1A1		11705-61010-	1M1		15012-60014-	1E2
09150-60020-	1A1		11802-61010-	1C2		15100-61011-	1E2
09155-44010-	1A1		11804-61010-	1C2		15121-61011-	1E2
09183-00030-	1B1		11805-61010-	1C2		15122-61011-	1E2
-60010-	1B1		12101-61030-	1I1		15125-60013-	1E2
11011-61010-	1M1		12151-61011-	1I1		15126-60013-	1E2
11012-61010-	1M1		12157-10010-	2F5		15131-24010-	1E2
11013-61010-	1M1			2H1		15132-40010-	1E2
11071-61010-01	1M1			2H6		15133-24010-	1E2
-61010-02	1M1		12180-61010-	1G1		15301-60031-	1I1
-61010-03	1M1		12195-71020-	1G1		15403-60020-	1F2
-61010-04	1M1		12204-35040-	1L1		15600-41010-	1G2
-61010-05	1M1		12221-61010-	1L1		15609-61012-	1G2
11072-61010-01	1M1		12261-61060-	1L1		15691-60010-	1G2
-61010-02	1M1		12262-61020-	1L1		15710-61010-	1H2
-61010-03	1M1		12311-61071-	1K1		15770-61010-	1H2
-61010-04	1M1		12361-61030-	1K1		15777-61030-	1H2
-61010-05	1M1	A	-61031-	1K1		16100-69195-	1I2
11073-61010-01	1M1		12371-61040-	1K1		16110-61180-	1I2
-61010-02	1M1	A	-61041-	1K1		16117-61110-	1I2
-61010-03	1M1	P	12511-61060-	1K1		16124-61110-	1I2
-61010-04	1M1	B	-61061-	1K1		16171-61071-	1I2
-61010-05	1M1		13011-61062-	1A2		16173-61070-	1I2
11101-61080-	1F1		13013-61062-	1A2		16198-41050-	1I2
11115-61020-	1F1		13015-61062-	1A2		16210-61140-	1I2
11122-61011-	1F1		13017-61062-	1A2		16259-52010-	1I2
11123-61011-	1F1		13041-35020-0A	1A2		16261-61020-	1K2
11126-61011-	1G1		-35020-0	1A2		16264-61010-	1K2
11127-61011-	1G1		-35020-0C	1A2		16268-61010-	1K2
11131-61010-	1G1		13101-61031-	1A2		16271-61010-	1I2
11132-61010-	1G1		-61031-01	1A2		16303-61020-	1K2
11135-60010-	1G1		-61031-02	1A2		16304-61030-	1K2
11136-60030-	1G1		-61031-03	1A2		16341-61020-	1K2
11201-61041-	1G1		-61032-01	1A2		16343-61010-	1K2
11213-61020-	1G1		-61032-02	1A2		16360-61015-	1K2
11251-61020-	1H1		-61032-03	1A2		16361-61020-	1K2

REVISION REFERENCE CODE LIST

A15

791430M-00002

NOTICE

FRAME NUMBER AND VEHICLE IDENTIFICATION NUMBER


1. FRAME NUMBER MX62-123456

FRAME NUMBER IS GIVEN ON THE DASH COWL IN THE ENGINE ROOM.FUNCTION IN TOYOTA PARTS CATALOG IS LISTED IN THE REVISION REFERENCE CODE LIST TO IDENTIFY ENGINEERING CHANGE PERIOD AS BEFORE SO, IN LOCATING PARTS CATALOG, TAKE A LOOK AT FRAME NUMBER ON CORRESPONDING VEHICLE.

REV. REF. CODE	ENGINE NO. OR FRAME NO.
1	MX62-123456

2. NAME PLATE

NAME PLATE IS ATTACHED TO THE DASH COWL IN THE ENGINE ROOM. MODEL COLUMN INDICATES FULL MODEL CODE. SO, FOR MODEL INFORMATION, REFER TO THE NAME PLATE AS BEFORE.

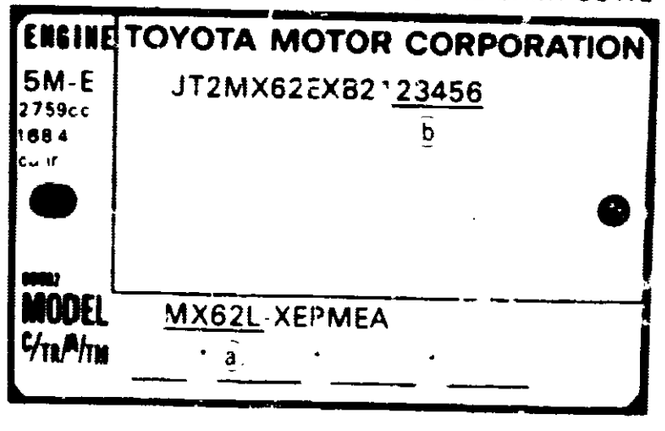

PROCEDURE TO DETERMINE FRAME NUMBER FROM NAME PLATE IS .

a + b =

MX62-123456

3. VEHICLE IDENTIFICATION NUMBER: JT2MX62EXB2123456

VEHICLE IDENTIFICATION NUMBER IS GIVEN TO VIN PLATE ON LEFT HAND OF DASH BOARD, CERTIFICATION REGULATION PLATE ON LEFT DOOR PILLAR, AND NAME PLATE.

Starting Frame Number Per Each Assembly Line.
(Production from Aug. '87 up to Jan. '9.)

Assembly Line / Applicable Model	Toyota Motor Motomachi Plant (A21 ~ A26)
FJ62–	074006 ~

LAND CRUISER

REV. REF. CODE	ENGINE NO. OR FRAME NO. OR TRANS. NO.	REV. REF. CODE	ENGINE NO. OR FRAME NO. OR TRANS. NO.	REV. REF. CODE	ENGINE NO. OR FRAME NO. OR TRANS. NO.
2	FJ62-096260				
3	FJ62-096261				

GUIDE TO CONTENTS

1. MODELS COVERED & CHARACTERISTICS ..... C 15, D 15 (included in each fiche)

2. MARK & ABBREVIATION ..... B 16 (included in each fiche)
   I 13 thru M 13 (included in the fiche No. 4 of 4)

3. INDEX

   ILLUSTRATED INDEX ..... D 16 thru K 16 (included in each fiche)

   FIGURE NUMBER INDEX ..... L 16 , M 16 (included in each fiche)

4. ILLUSTRATIONS & TEXT ..... From 1-A1 (included in each fiche)

   The contents (illustrations & text) have been divided

   into groups by function in the following sequence:

   Engine

   Fuel

   Power train · Chassis

   Body

   Electrical

5. APPENDICES

   PART NAME ⇨ LOCATION LIST ..... A 12 thru H 13 (included in the fiche No. 4 of 4)

   PART NUMBER ⇨ LOCATION LIST ..... A 14 thru J 14 (included in each fiche)

   REVISION REFERENCE CODE LIST ..... A 15 (included in each fiche)

   PRODUCTION FRAME NUMBER
   REFERENCE LIST ..... B 15 (included in each fiche)

Note : SST (Special Service Tools) are not included in this parts catalog.

For related part number information can be noted in SST List, Service Bulletin and Repair Manual.

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	51322	GUSSET, CROSSMEMBER, NO.2 LH					
8708-9001	FJ62			51322-60030-	2		
	51401	BRACKET SUB-ASSY, ENGINE FRONT MOUNTING, RH					
8708-9001	FJ62			51421-60041-	1		
	51402	BRACKET SUB-ASSY, ENGINE FRONT MOUNTING, LH					
8708-9001	FJ62			51422-60041-	1		
	51701	BRACKET SUB-ASSY, CAB MOUNTING, NO.1, RH					
8708-9001	FJ62			51701-60051-	1		
	51702	BRACKET SUB-ASSY, CAB MOUNTING, NO.1, LH					
8708-9001	FJ62			51702-60020-	1		
	51703	BRACKET SUB-ASSY, CAB MOUNTING, NO.2, RH					
8708-9001	FJ62			51703-60020-	1		
	51704	BRACKET SUB-ASSY, CAB MOUNTING, NO.2, LH					
8708-9001	FJ62			51704-60010-	1		
	5170[illegible]	BRACKET SUB-ASSY, CAB MOUNTING, NO.3					
8708-9001	FJ62	FRONT		51705-60062-	2		
8708-9001	FJ62	REAR		51705-60110-	2		
	51707B	BRACKET SUB-ASSY, CAB MOUNTING, NO.4					
8708-9001	FJ62			51707-60030-	2		
	51769	BRACKET, BODY REAR END MOUNTING					
8708-9001	FJ62			51709-60020-	2		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

FIG. 55-51 INSTRUMENT PANEL & GLOVE COMPARTMENT


3B2

791430M-01251

(8708-)

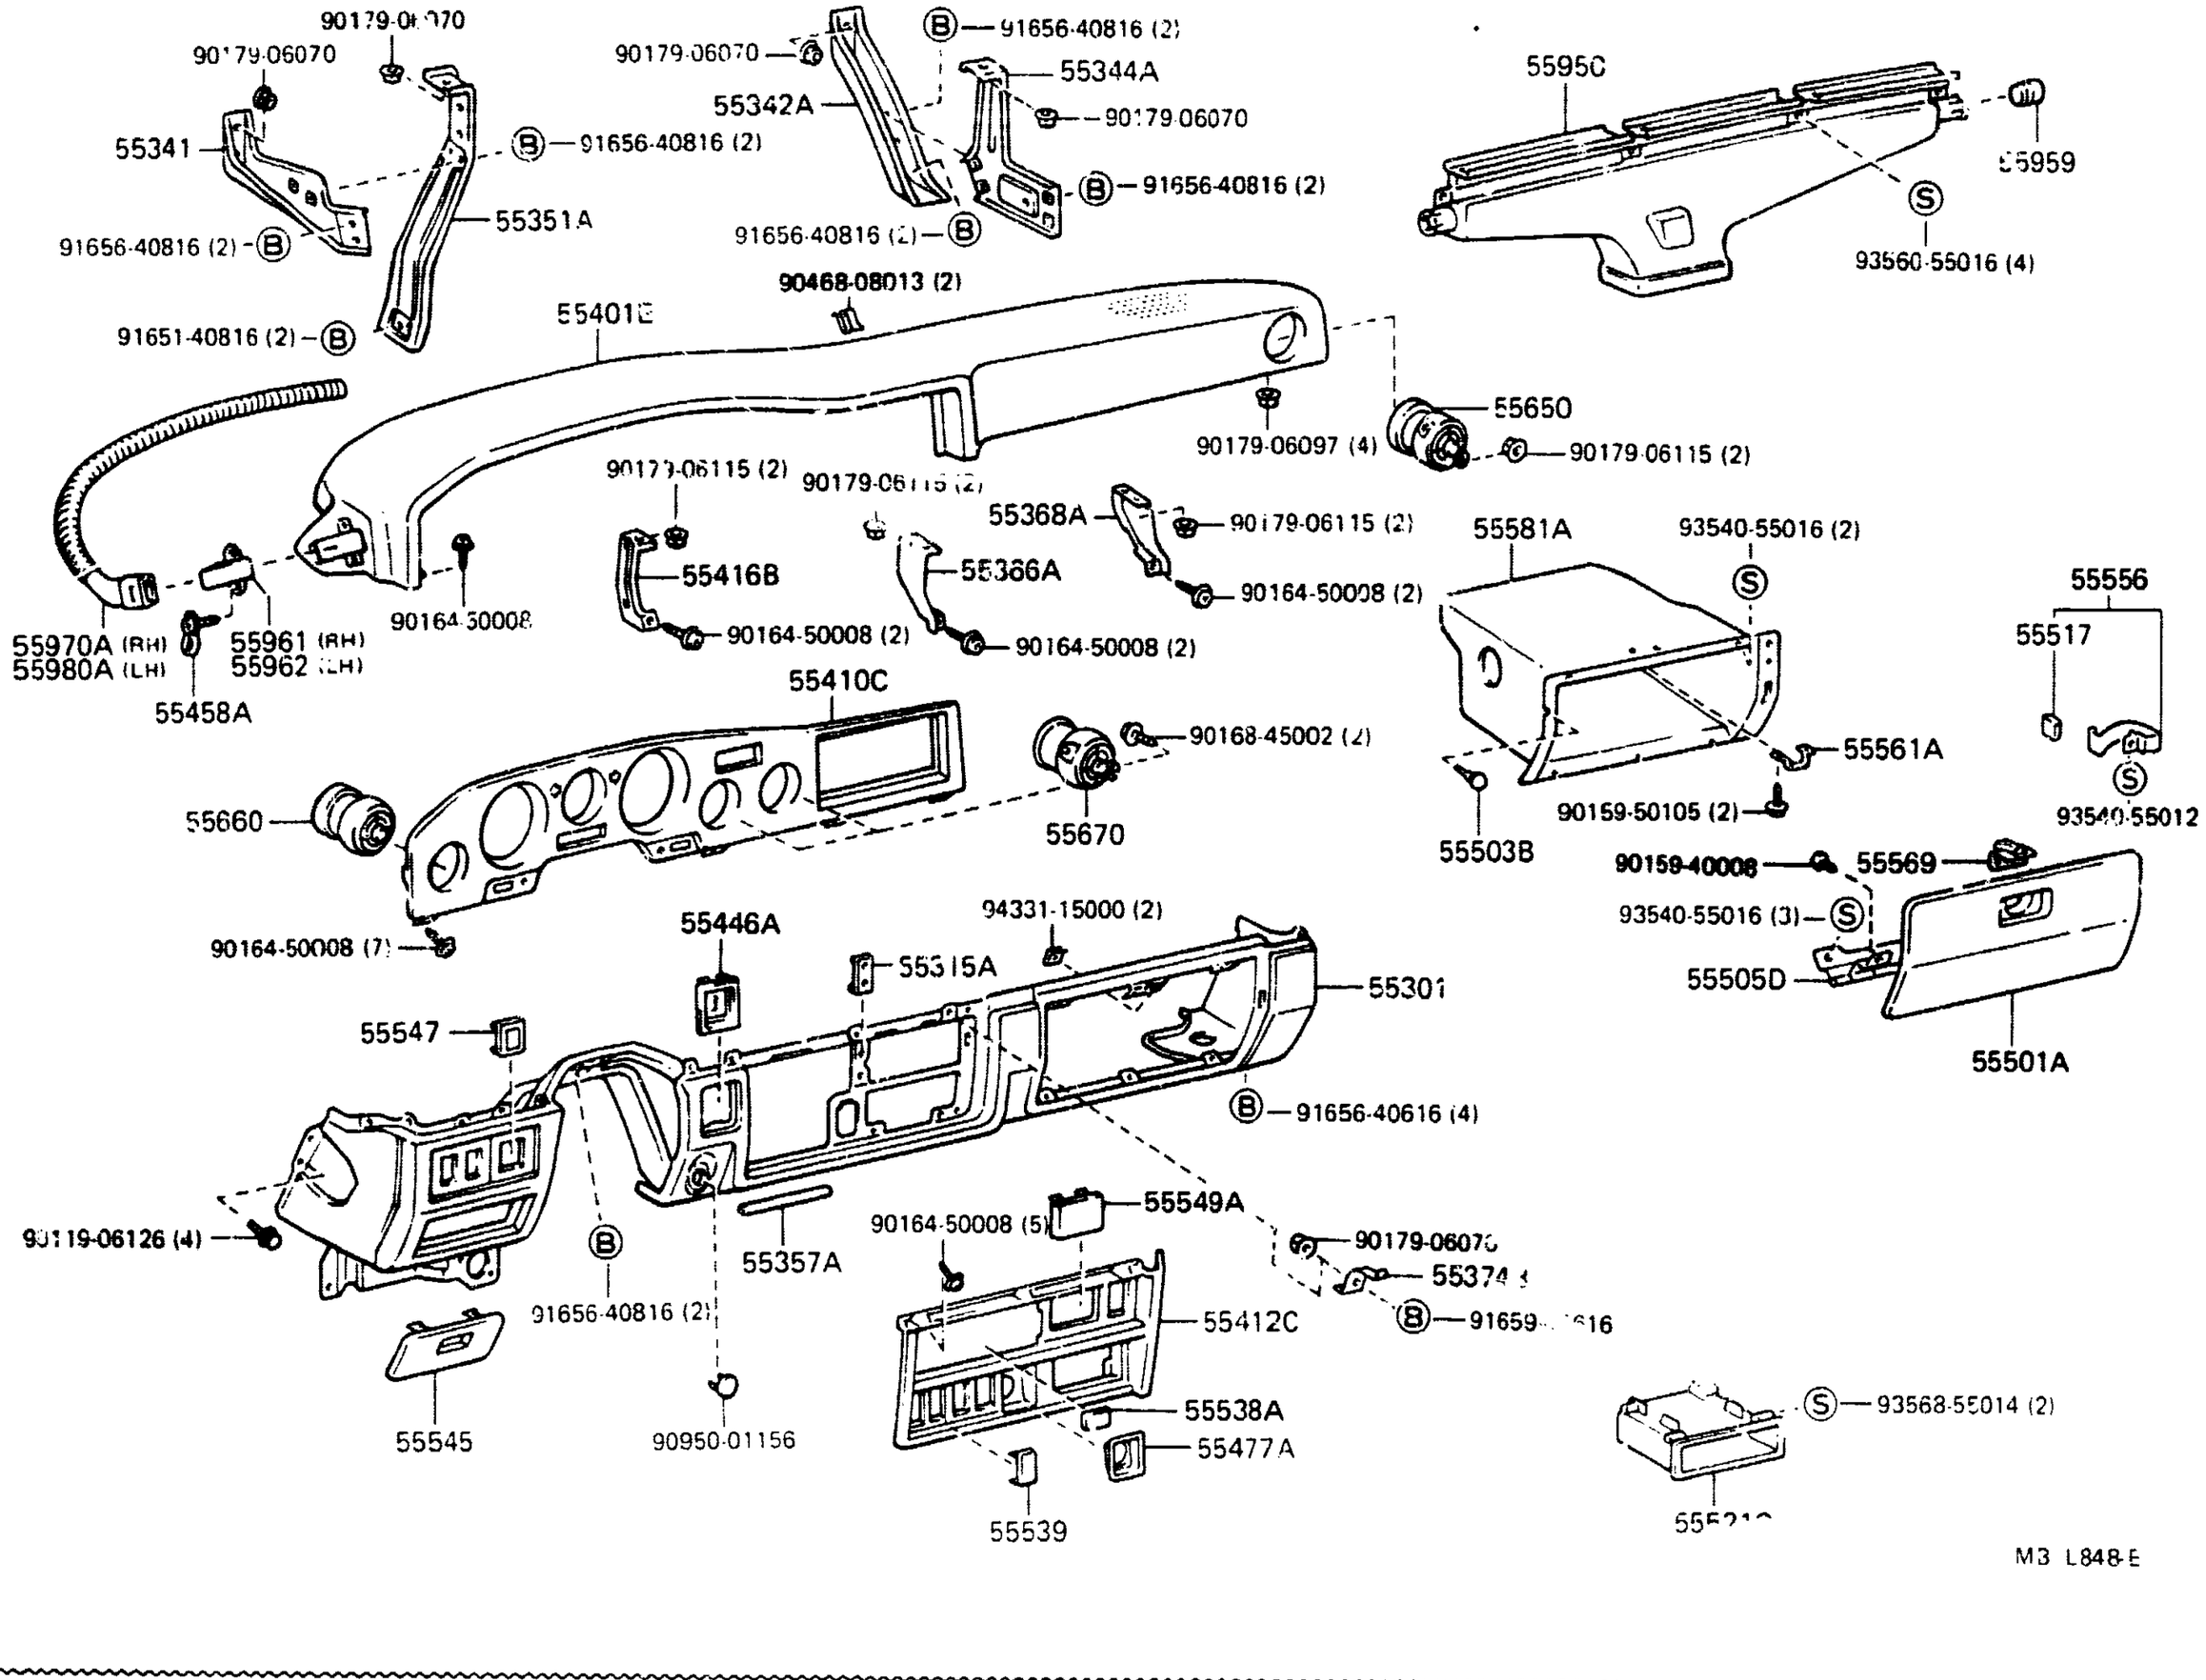

(8708-)

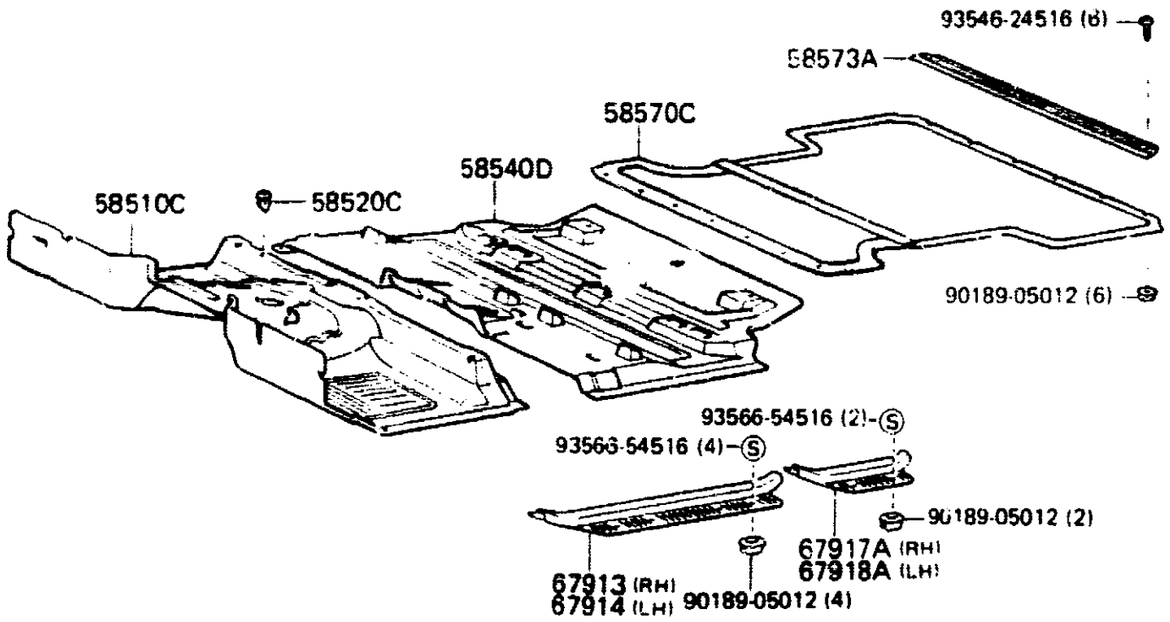


MB L913

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		| 58510C |	CARPET ASSY, FRONT FLOOR, FRONT				
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		58510-90A85-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		58510-90A85-06	1		
		| 58520C |	CLIP (FOR FRONT FLOOR CARPET)					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		90467-12035-03	2		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		90467-12035-06	2		
		| 58540D |	CARPET ASSY, FLOOR, REAR					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		58540-90A83-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		58540-90A83-06	1		
		| 58570C |	CARPET ASSY, REAR FLOOR					
	8708-8808	FJ62. WGV	SHADOW GRAY(TRIM1)		58570-90A39-03	1		002
	8708-8808	FJ62..WGV	SEPIA BROWN(TRIM4)		58570-90A39-06	1		002
P	8708-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		58570-90A28-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		58570-90A28-06	1		
		| 58573A |	PLATE, REAR FLOOR MAT SUPPORT					
	8708-9001	FJ62			58573-90A00-	1		
		| 67913 |	PLATE, FRONT DOOR SCUFF, RH					
P	8708-9001	FJ62	GRAY(TRIM1)		67913-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		67913-90A00-16	1		
		| 67914 |	PLATE, FRONT DOOR SCUFF, LH					
P	8708-9001	FJ62	GRAY(TRIM1)		67913-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		67913-90A00-16	1		

FIG. 64-51 INSIDE TRIM BOARD

(8708-)

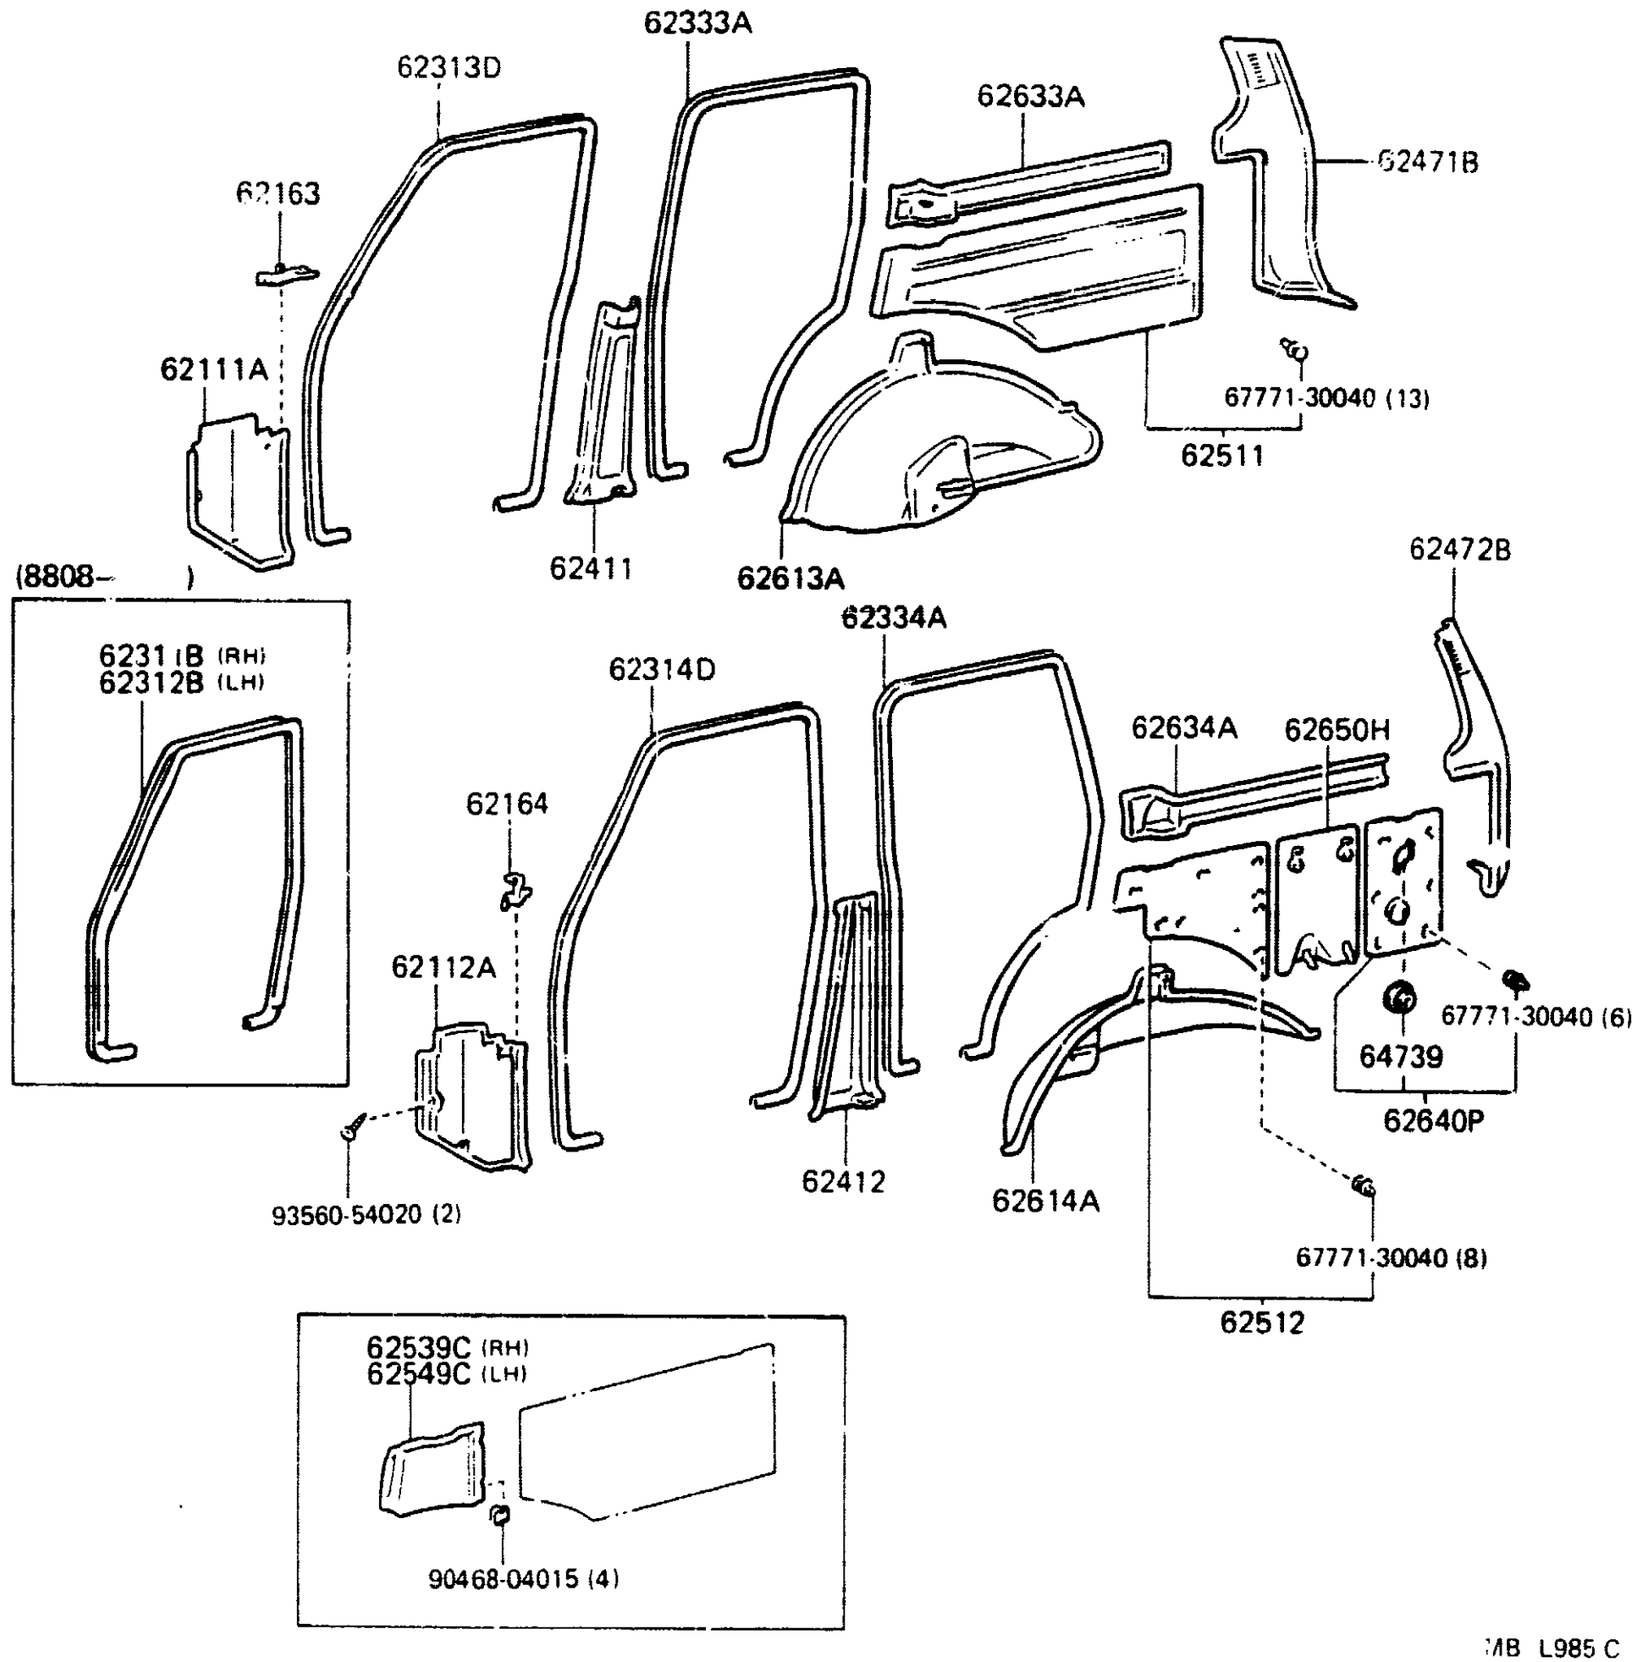

MB L985 C

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	69901	CHANNEL SUB-ASSY, FRONT DOOR GLASS, RH					
8708-9001	FJ62			69901-90A03-	1		
	69902	CHANNEL SUB-ASSY, FRONT DOOR GLASS, LH					
8708-9001	FJ62			69902-90A02-	1		
	69971A	FILLER, FRONT DOOR GLASS CHANNEL					
8708-9001	FJ62			69971-90A01-	2		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	69551	RETAINER, BACK DOOR LOCK CYLINDER					
8708-9001	FJ62			69551-13020-	1		
	69551A	LEVER, BACK DOOR KEY CYLINDER					
8708-9001	FJ62			69551-90A00-	1		
	69552	RING, BACK DOOR KEY CYLINDER LEVER					
8708-9001	FJ62			69552-95A00-	1		
	69563	PAD, BACK DOOR LOCK CYLINDER					
8708-9001	FJ62			69563-90A00-	1		
	69581	RETAINER, FUEL FILLER LID CYLINDER					
8708-9001	FJ62			69581-14010-	1		
	69681	CLAMP, DOOR LOCK CYLINDER AND SLEEVE					
8708-9001	FJ62			69681-20040-	2		
	69685	PAD, LOCK CYLINDER					
8708-9001	FJ62			69513-90A00-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T


FIG. 75-51 EMBLEM & NAME PLATE

(8708-)

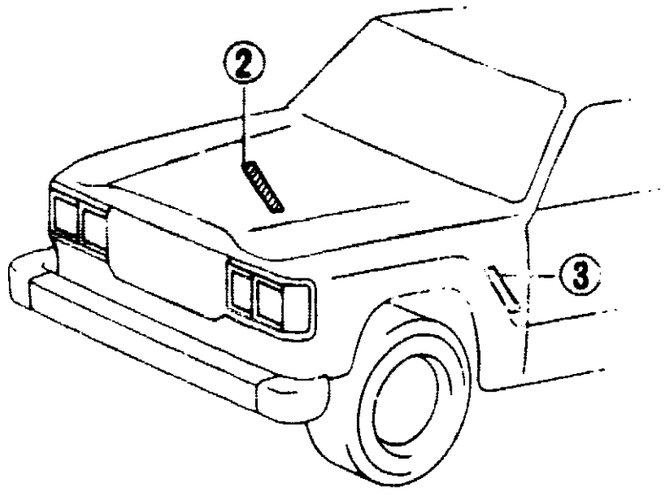


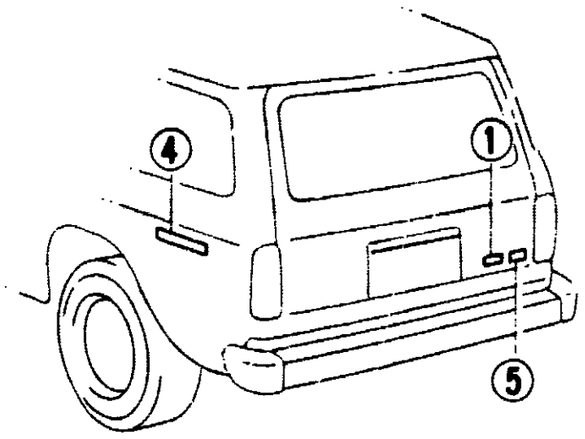


① 75442A

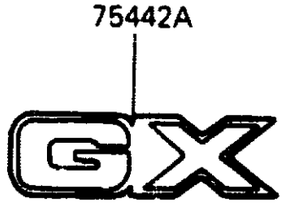

② 90162-40006, 90189-04014, 75330

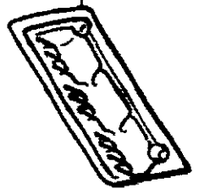

③ 90162-40006 (2), 90189-04014 (2), 75340

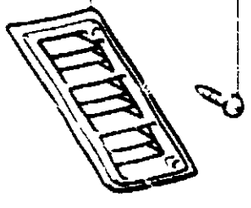

④ 75371A, 90467-07018, 90202-04010 (4)



⑤ 75430, 90467-07018 (2)



MB L976-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	81150	HEADLAMP ASSY, LH					
8708-9001	FJ62			[illegible]0-90A28-	1		
	81151A	RING, SEALED BEAM RETAINING, NO.1 LH					
8708-9001	FJ62			81111-20360-	2		
	81153	RING, SEALED BEAM MOUNTING, NO.1 LH					
8708-9001	FJ62			81153-90B04-	1		
	81154	RING, SEALED BEAM MOUNTING, NO.2 LH					
8708-9001	FJ62			81114-22391-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	82210C FUSIBLE LINK						
8708-9001	FJ62	L=110X3, L=100, NO. 2		90982-08251-	1		
	82282A WIRE, INDICATOR (FOR DIFF LOCK)						
8708-9001	FJ62	FRONT		82282-90A04-	1		
8708-9001	FJ62	REAR		82282-90A05-	1		
	82291 WIRING, TO SOLENOID						
8708-9001	FJ62			82291-90A02-	1		
	82345 DIODE						
8708-8808	FJ62	NO. 1		82345-12050-	1		002
8708-9001	FJ62	NO. 2		82345-32020-	1		
8808-9001	FJ62..WGG	NO. 1		82345-12050-	2	003	
	82670 BLOCK ASSY, JUNCTION						
8708-9001	FJ62			82670-30K00-	1		
	82821A COVER, CONNECTOR						
8708-9001	FJ62			82821-12150-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	85247	CAP, SHIELD					
8708-9001	F162			85247-90A01-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)

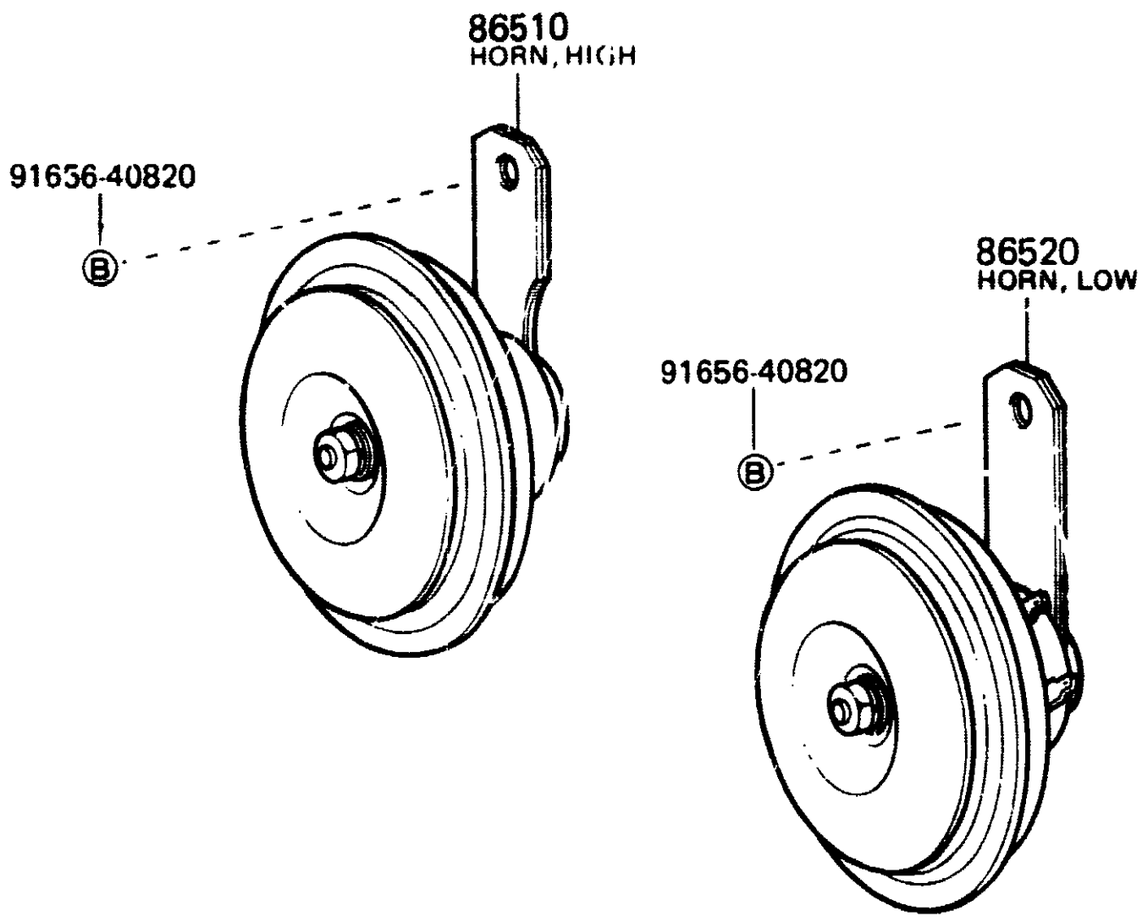


ME 9013-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	86510	HORN ASSY, HIGH PITCHED					
8708-9001	FJ62			86510-22120-	1		
	86520	HORN ASSY, LOW PITCHED					
8708-9001	FJ62			86520-22120-	1		

(8708-)

ILLUST.NO.2 OF 2

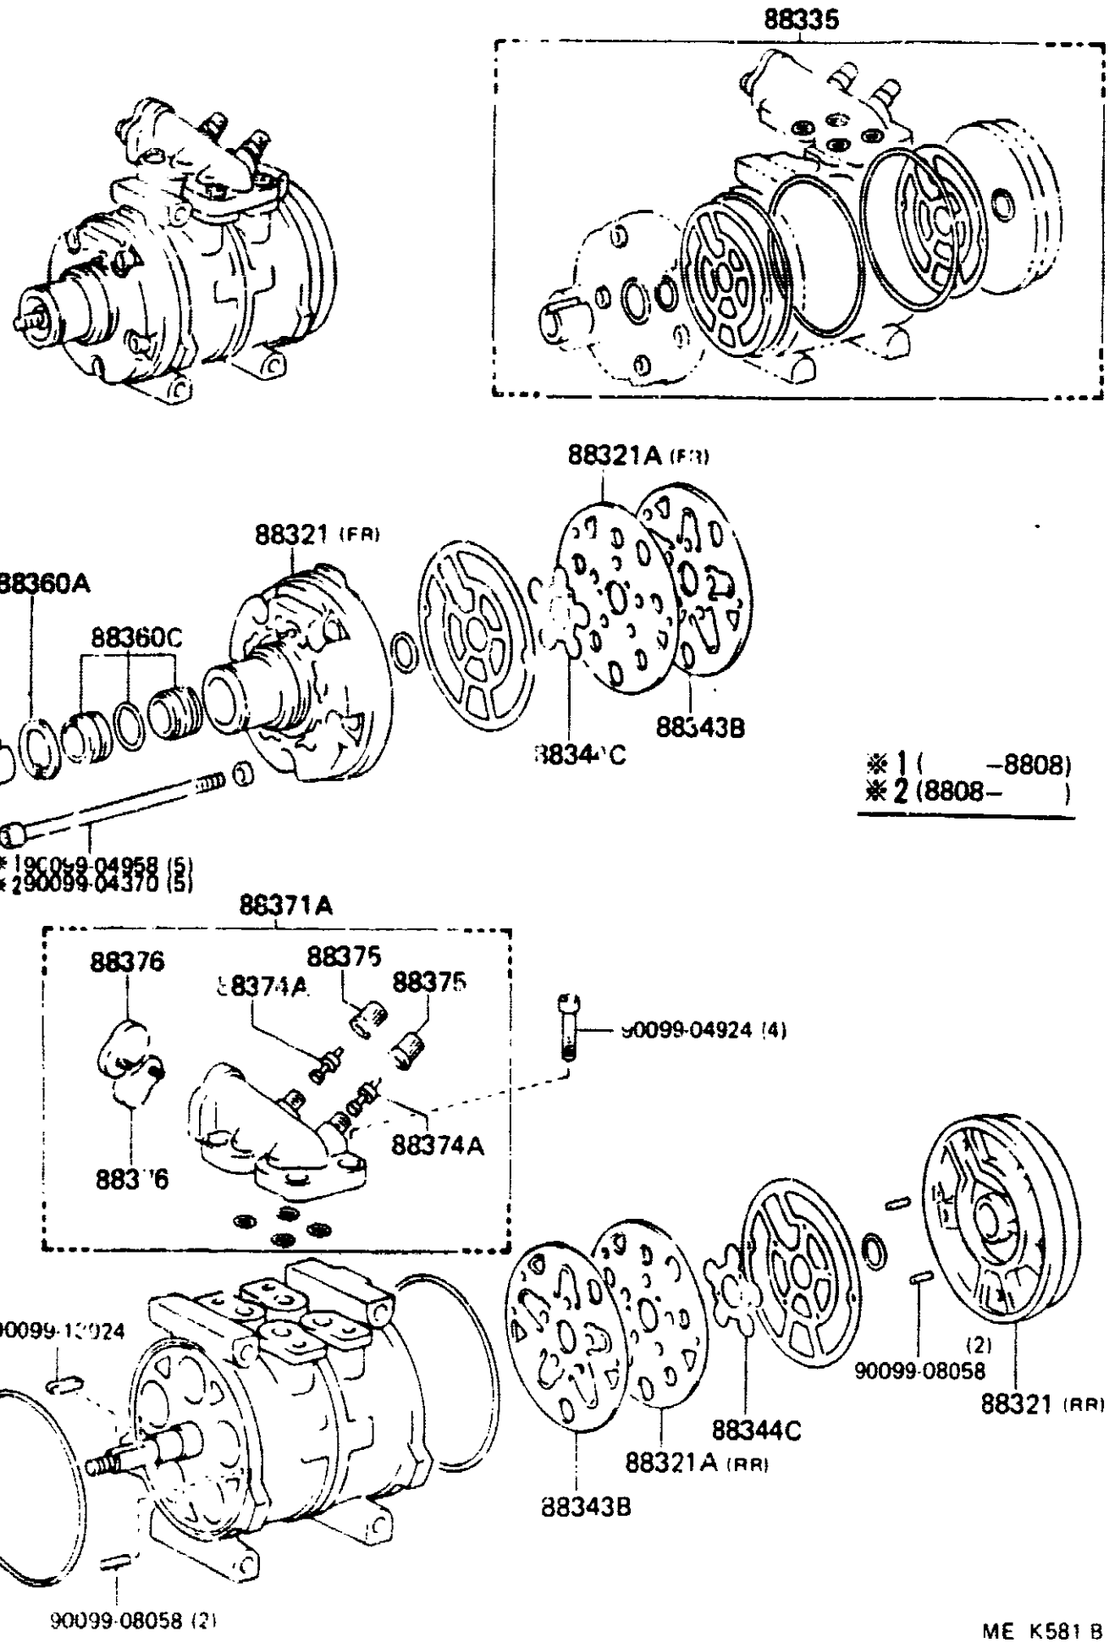

ME K581 B

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		88301	ROTOR SUB-ASSY, MAGNET CLUTCH					
	8708-8808	FJ62			88412-22030-	1		
B	8808-9001	FJ62..WGG			88412-28030-	1		
		88301A	BEARING (FOR MAGNET CLUTCH)					
	8708-8808	FJ62			90099-10133-	1		
		88302	STATOR SUB-ASSY, MAGNET CLUTCH					
	8708-8808	FJ62			88411-14050-	1		
D	8808-9001	FJ62..WGG			88411-60020-	1		
		88320	COMPRESSOR ASSY, COOLER					
	8708-8808	FJ62			88320-60151-	1		
B	8808-9001	FJ62..WGG			88320-60280-	1		
		88321	HEAD, COOLER COMPRESSOR CYLINDER					
	8708-8808	FJ62	FRONT		88321-14011-	1		
	8708-8808	FJ62	REAR		88322-14011-	1		
B	8808-9001	FJ62..WGG	FRONT		88321-14021-	1		
B	8808-9001	FJ62..WGG	REAR		88322-14020-	1		
		88321A	PLATE SUB-ASSY, VALVE					
	8708-8808	FJ62	FRONT		88341-14010-	1		
	8708-8808	FJ62	REAR		88342-14010-	1		
B	8808-9001	FJ62..WGG	FRONT		88341-14020-	1		
B	8808-9001	FJ62..WGG	REAR		88342-14020-	1		
		88330A	WASHER (FOR MAGNET CLUTCH)					
	8708-8808	FJ62			88335-12050-	1		

	PART NUMBER	LOCATION
	16363-61020-	1K2
	16381-61050-	1K2
	16384-61010-	1K2
	16400-61140-	1K2
	16401-71010-	1L2
	16405-61030-	1L2
	-90A00-	1L2
	16417-24200-	1L2
	16418-24200-	1L2
	16480-90A00-	1L2
	16571-61110-	1L2
	16572-61020-	1L2
	16573-61040-	1L2
	16577-61130-	1L2
	16582-61010-	1L2
	16583-61010-	1L2
	16584-61010-	1L2
	16585-61010-	1M2
	16586-61010-	1M2
	16611-61020-	1M2
	16630-61020-	1K1
	16711-61240-	1M2
A	-61241-	1M2
	16793-61011-	1A4
	17109-61010-	1C3
	17111-61040-	1C3
	17118-61030-	1C3
	17123-61010-	1C3
	17125-61010-	1C3
	17139-61010-	1C3
	17141-61080-	1C3
	17142-61050-	1C3
	17167-61070-	1C3
	17168-61030-	1C3
	17169-61040-	1C3
	17172-61060-	1C3
	17176-61010-	1C3
	17301-61010-	1J3
	17303-61020-	1M3
	17306-61030-	1J3
	17314-61040-	1H3
	17317-61020-	1K2
	17318-61060-	1H3
	17341-61030-	1J3
	17342-61040-	1J3
	17343-61030-	1J3
	17344-61020-	1J3
	17353-61010-	1J3
	17401-61210-	1E3
	17402-61010-	1E3
	17403-61110-	1E3
	17405-61240-	1E3
	17502-61021-	1E3
	17567-61030-	1E3
	17571-61160-	1E3
	17572-61051-	1E3
	17573-61051-	1E3
	17574-61050-	1E3
	-61071-	1E3
	17610-61040-	1H3
	17692-61020-	1M3
	17700-61230-	1F3
	17705-61130-	1F3
P	17791-61023-	1A4
B	17791-61070-	1A4
	17792-61120-	1A4
	17801-68020-	1F3
	17810-61010-	1M3
	17841-68010-	1F3
	17845-61011-	1F3
	17881-61090-	1F3
	17882-61070-	1F3
	17883-61020-	1G3
A	18450-61010-	1E3
	-61040-	1E3
	18495-38020-	1E3
P	19000-61350-	1C1
N	-61351-	1C1
	19100-61240-	1D4
	19101-61240-	1D4
	19102-61240-	1D4
	19114-61040-	1D4
	19115-50010-	1D4
	19127-61240-	1D4
	19195-61240-	1D4
	19242-61240-	1D4
	19519-38030-	1B4
	22205-61011-	1J4
	22210-61010-	1J4
	22216-74010-	1J4
	22233-61010-	1J4
	22250-61010-	1G3
	22270-61010-	1J4
	22271-61010-	1K4
	22275-43010-	1G3
	22278-43011-	1K4
	23091-61010-	K4
	23206-61010-	1K4
	23207-74010-	1K4
	23209-61010-	1K4
	23217-35040-	1K4
P	-35081-	1K4
	23220-16083-	1K4
	-16190-	1K4
	23229-16010-	1K4
	23232-28010-	1K4
	23239-16010-	1K4
	23249-74150-	1K4
	23260-69025-	1K4
	23280-61010-	1K4
	23291-73010-	1L4
	23293-74010-	1L4
	23300-69025-	1L4
	23801-61030-	1L4
	23802-61040-	1L4
	23803-61010-	1L4
	23807-61010-	1L4
	25611-61050-	1M4
	25620-61110-	1M4
	25627-61010-	1M4
	25631-61040-	1M4
	25691-61020-	1A5
	25695-61010-	1M4
	25702-61010-	1M3
	25710-61030-	1J3
	25716-61020-	1J3
	25820-13020-	1M3
	25860-61010-	1M3
	25870-61020-	1M4
	27060-61090-	1E4
	27212-39050-	1E4
	27310-72070-	1E4
	27312-45010-	1E4
	27330-72070-	1E4
	27351-38051-	1E4
	27359-61190-	1F4
	27362-72070-	1F4
	27371-31011-	1F4
	27372-31011-	1F4
	27410-72070-	1F4
	27411-61210-	1F4
	27412-45012-	1F4
	27441-45050-	1F4
	27700-63030-	1F4
	27790-13010-	3H9
	28011-26042-	1G4
	28100-60070-	1G4
	28110-60070-	1G4
	28120-26071-	1G4
	28130-34060-	1G4
	28140-26070-	1G4
	28150-34080-	1G4
	28160-26070-	1G4
	28165-26040-	1H4
	28228-26040-	1H4
	28229-26040-	1H4
	28253-45020-	1G4
	28254-45020-	1H4
	28800-61030-	3K8
	28897-38010-	3K8
	28898-26010-	3K8
	31478-30010-	2H8
		2K8
P	32000-60030-	2E1
B	-60031-	2E1
	-60040-	2E1
P	32101-60010-	2E1
B	-60011-	2E1
P	32116-60010-	2E1
B	-60011-	2E1
P	32117-60010-	2E1
B	-60011-	2E1
	32904-60012-	2K3
	32905-60012-	2K3
	32906-60012-	2K3
	32927-36010-	2K3
	32924-60011-	2K3
	32925-60030-	2K3
	32926-30020-	2L3
	32928-60011-	2L3
	32942-60010-	2L3
	-60030-	2L3
	32943-60010-	2L3
	33309-60041-	2A4
	-60070-	2A4
	33325-60010-	2A4
	-60021-	2A4
A	33403-69195-	2J1
	33404-30040-	2J1
	33481-60050-	2D4
	-60051-	2D4
	33485-30020-	2J1
	33502-60040-	2A1
	33503-60020-	2A1
	33511-60060-	2A1
	33542-30110-01	2A1
	-30110-36	2A1
	33555-60040-	2A1
	33623-30040-56	2A1
	33625-22020-	2B1
	33631-60020-	2B1
	33711-60040-	2B1
	33723-22010-	2B1
	33789-36010-	2B6
	34101-60010-	2K1
	34421-36010-	2M2
	34601-36010-	2K1
	34602-36010-	2K1
	34613-36010-	2L1
	34710-36010-	2L1
	34713-36010-	2L1
	34731-36010-	2L1
	34732-36010-	2L1
	34737-36010-	2L1
	34738-36010-	2L1
	35000-60162-	2D1
	-60163-	2D1
	35013-60011-	2G1
	35015-60010-	2G1
	-60011-	2G1
	35017-60010-	2G1
	35019-60010-	2G1
	35035-36010-	2E1
	35068-36010-	2F2
	35073-60010-	2G2
	35103-60011-	2G1
	-60012-	2G1
P	35104-60010-	2G1
N	-60011-	2G1
	35106-60041-	2H1
N	-60043-	2H1
	35111-60010-	2H1
	35112-36010-	2M2
	35113-36010-	2M2
	35114-36010-	2M2
	35115-36010-	2M2
	35116-60010-	2H1
	35117-60010-	2H1
	35118-60010-	2H1
	35136-60010-	2H1
	35138-60010-	2H1
	35143-36010-	2H1
	35144-36010-	2H1
	35146-36010-	212
P	35167-60011-	2H1
N	-60012-	2H1
	35168-36010-	211
	35182-36010-	2H1
	35211-36010-	2M2
	-36011-	2M2
	35212-36010-	2A3
	35213-36010-	2A3
	35215-36010-	2A3
	35216-36010-	2A3
	35219-60010-	2A3
	-60011-	2A3
	35222-60010-	2A3
	35223-36010-	2A3
	35226-36010-	2A3
	-36011-	2A3
	35231-36010-	2A3
	35303-60010-	2A3
	35308-36010-	2F1
	35313-36010-	2F1
	35321-36010-	2F1
	-36020-	2F1
	35322-36010-	2F1
	-36020-	2F1
	35339-36010-	2A3
	35394-30011-	211
	35395-36010-	212
	35396-36010-	2A3
	35405-36010-	2A3
	35408-36010-	2A3
	35409-36010-	2B3
	35415-36010-	2B3
	35416-36010-	2B3
	35417-36010-	2B3
	35418-36010-	2B3
	35419-36010-	2B3
	35420-60030-	2B3
	35422-22010-	2B3
	-36010-	2B3
	35423-36010-	2B3
	35424-36010-	2B3
	35425-22010-	2C3
	-36010-	2C3
	35427-36010-	2F1
	35428-60020-	2C3
	35429-36010-	2C3
	35430-60090-	2C3
	35432-60030-	2C3
	-60040-	2B1
	35433-36010-	2C3
	35434-36010-	2C3
	35435-36011-	2C3
	35436-36011-	2C3
	35437-36011-	2C3
	35438-60020-	2C3
	35440-60011-	2C3
	35444-36010-	2C3
	35445-36010-	2D3
	35451-36010-	2D3
	35452-36010-	2D3
	35454-36010-	2D3
	35455-36010-	2D3
	35456-36010-	2E3
	35458-36010-	2E3
	35459-36010-	2E3
	35462-36010-	2E3
	35463-36010-	2E3
	35464-36011-	2E3
	35466-60010-	2E3
	35467-36010-	2F3
	35468-36011-	2F3
	35472-36011-	2F3
	35476-36010-	2F3
	35477-30030-	2F3
	35479-36010-	2F3
	35481-36011-	212
	35481-36012-	212
	35482-60020-	212
	35483-60010-	212
	35484-60011-	212
	35485-60010-	2J2
	35486-36010-	2J2
	35487-36010-	2J2
	35488-60010-	2F3
	35489-36010-	2G3
	35491-36010-	2G3
	35492-36010-	2G3
	35495-36010-	2F1
	35497-36010-	2G3
	35498-36010-	2G3
	35501-36010-	2J3
	35505-36010-	2J3
	-36020-	2J3
	35519-60030-	3M6
	35520-60050-	2J3
	35556-60010-	2J3
	35557-36010-	2J3
	35560-36011-	2G3
	35561-60010-	2J3
	35569-60040-	2B1
	35572-60020-	2J3
	35589-36010-	2G3
	35595-36010-	2J3
	35599-36010-	2H3
	35602-36010-	2A2
	35606-36010-	2A2
	35608-36010-	2D2
		2K1
	35615-36010-	2A2
		2B2
	35617-36010-	2F1
	-36020-	2E2
		2M1
	35621-36010-	2D2
		2L1
	35623-36010-	2F2
	35631-36010-	2A2
	35632-36010-	2D2
		2M1
	-36020-	2F2
	35633-36010-	2D2
		2M1
	-36020-	2B2
		2M1
	-36030-	2F2
	35634-36010-	2B2
		2M1
	-36020-	2B2
	-36040-	2B2
	-36050-	2B2
	35651-36010-	2B2
	35654-36010-	2B2
	35671-36010-	2F2
	35672-36010-	2B2
	35675-36010-	2B2
B		2L1
	-36020-	2B2
	-36030-	2B2
	-36040-	2B2
	35676-36010-	2D2

B15

LAND CRUISER Station Wagon U. S. A.

PRODUCTION FRAME NUMBER REFERENCE LIST

Applicable Model \ Production Date / Assembly Line	8701	8702	8703	8704	8705	8706	8707	8708	8709	8710	8711	8712
FJ62	TMC Honsya Plant								074039	075376	0077221	0079169	0081050

Applicable Model \ Production Date / Assembly Line	8801	8802	8803	8804	8805	8806	8807	8808	8809	8810	8811	8812
FJ62	TMC Honsya Plant	0083764	0086005	0088379	0090616	0092239	0093499	0094861	0096292	0097372	0098711	0100682	0102775

Applicable Model \ Production Date / Assembly Line	8901	8902	8903	8904	8905	8906	8907	8908	8909	8910	8911	8912
FJ62	TMC Honsya Plant	01043.6	0105696	0107184	0109036	0110721	0111941	0113601	0115125	0116480	0117954	0119300	0120955

MARK & ABBREVIATION LIST

B16

(1) Abbreviations Under Heading MODELS in Text

Heading	Mark	Definition
MODELS	..	Among
	.	And
	+	And (Plus)
	—	Excluded (minus)
	#	All series

(2) Abbreviations Under Heading R/P and QTY" in Text

Heading	Mark	Definition
R/P	=	Old parts number (Old)
	✱	Modified old parts number which has been substituted by a multiple of parts and/or if substituted parts are specified by applicable models or other determining specifications, refer to SUBSTITUTE SUPPLY PARTS LIST (S.S.P.L.) for detailed information. (Old)
	┐	New main part number of set substitution (New)
	.	Part number to be attached to main part (New)
	X	Number of previously supplied but currently non-supplied parts
QTY	33	Required quantity
	X	Required quantity
	Y	More than 100 units
DESCRIPTION	✱✱✱	Number of old type parts the supply of which will be discontinued after the lapse of a certain period
	(TRIM ●)	Trim code whose third digit is ●


(3) CHANGES TO TEXT & APPENDICES


Certain codes are used to indicate changes to the text and/or appendix.
These codes appear in the marginal area of the affected page as follows:

CODE	LOCATION	EXPLANATION
C	Text	Changes of Parts Number, Model and Production Data.
B		Data with a changed part number
A		Data with a changed application model
P		Data with a changed year system (beginning-end)
N	Text & Appendix	Newly available Toyota Part Number.
S	Text & Appendix	Part application expanded to include other vehicle model(s)

FIG. 51-52 SUSPENSION CROSSMEMBER & UNDER COVER

(8708-)

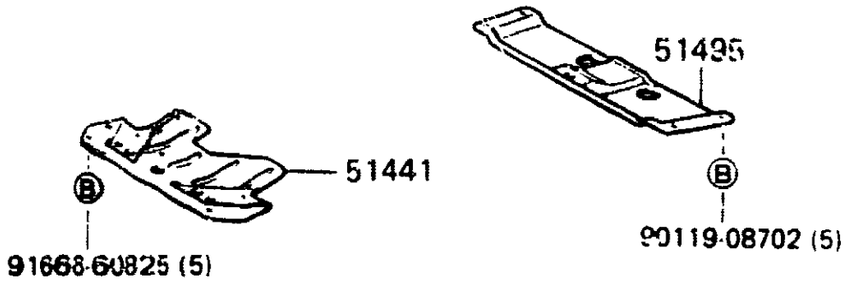

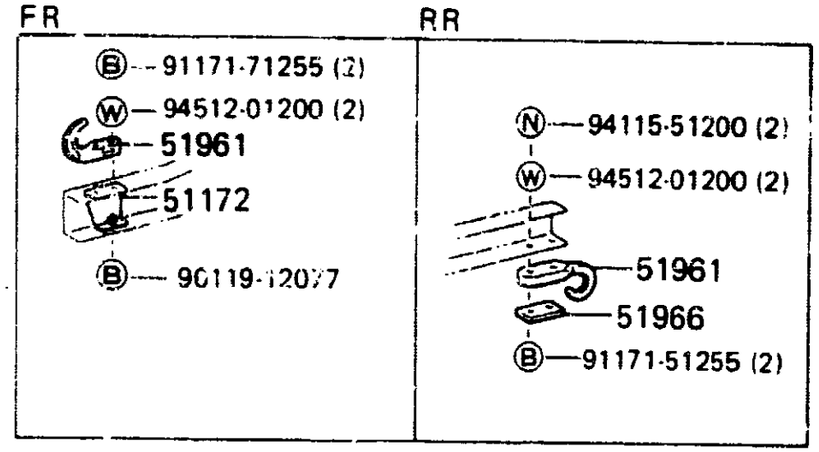

MB L852-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	51172	REINFORCEMENT, SIDE RAIL FRONT HOOK					
8708-9001	FJ62			51172-60010-	1		
	51441	COVER, ENGINE UNDER, NO.1					
8708-9001	FJ62			51441-60061-	1		
	51495	COVER, TRANSMISSION UNDER					
8708-9001	FJ62			51495-60230-	1		
	51961	HOOK, NO.1					
8708-9001	FJ62		RR	51961-36040-	1		
8708-9001	FJ62		FR	51961-60040-	1		
	51966	RETAINER, REAR HOOK					
8708-9001	FJ62			51966-60010-	1		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		55301	**PANEL SUB-ASSY, INSTRUMENT**					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		55301-90A76-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		55301-90A76-05	1		
		55315A	**SPACER, INSTRUMENT PANEL, NO.1**					
	8708-9001	FJ62			55315-90A00-	1		
		55341	**BRACE, INSTRUMENT PANEL, NO.1**					
	8708-9001	FJ62			55341-90A02-	1		
		55342A	**BRACE, INSTRUMENT PANEL TO COWL, NO.2**					
	8708-9001	FJ62			55342-90A01-	1		
		55344A	**BRACE, INSTRUMENT PANEL TO COWL, NO.3**					
	8708-9001	FJ62			55344-90A01-	1		
		55351A	**BRACE, INSTRUMENT PANEL TO FLOOR**					
	8708-9001	FJ62			55351-90A01-	1		
		55357A	**PROTECTOR, EDGE, NO.1**					
	8708-9001	FJ62			55357-90A00-	1		
		55366A	**BRACKET, RADIO MOUNTING, NO.1**					
	8708-9001	FJ62			55366-90A02-	1		
		55368A	**BRACKET, RADIO MOUNTING, NO.2**					
	8708-9001	FJ62			55368-90A03-	1		
		55374B	**BRACKET, INSTRUMENT PANEL**					
	8708-9001	FJ62			55374-90A01-	1		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		55401E	**PAD SUB-ASSY, INSTRUMENT PANEL SAFETY**					
	8708-8710	FJ62..USA	SHADOW GRAY(TRIM1)		55401-90A05-03	1		
	8708-8710	FJ62..USA	SEPIA BROWN(TRIM4)		55401-90A05-05	1		
	8708-8710	FJ62	W(SIDE DEFROSTER), SHADOW GRAY(TRIM1)		# 55401-90A07-03 (55401-90A05-03)	1 1		
	8708-8710	FJ62	W(SIDE DEFROSTER), SEPIA BROWN(TRIM4)		# 55401-90A07-05 (55401-90A05-05)	1 1		
	8710-9001	FJ62	SHADOW GRAY(TRIM1)		55401-90A05-03	1		
	8710-9001	FJ62	SEPIA BROWN(TRIM4)		55401-90A05-05	1		
		55410C	**PANEL ASSY, INSTRUMENT CLUSTER FINISH**					
	8708-9001	FJ62			55410-90G28-	1		
		55412C	**PANEL, INSTRUMENT CLUSTER FINISH, CENTER NO.1**					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		55412-90A10-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		55412-90A10-05	1		
		55416B	**BRACKET, INSTRUMENT PAD, NO.2**					
	8708-9001	FJ62			55416-90A01-	1		
		55446A	**BASE, SWITCH HOLE, NO.1**					
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		55446-90A02-06	1		
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		55446-90A02-13	1		
		55458A	**CAP, INSTRUMENT PANEL SAFETY PAD**					
	8708-9001	FJ62			55458-90A00-	2		
		55477A	**BEZEL, CIGAR LIGHTER HOLE**					
	8708-9001	FJ62			55477-87001-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	67917A	PLATE, REAR DOOR SCUFF, RH					
8708-9001	FJ62	GRAY(TRIM1)		67917-90A00-03	1		
8708-9001	FJ62	SEPIA BROWN(TRIM4)		67917-90A00-16	1		
	67918A	PLATE, REAR DOOR SCUFF, LH					
8708-9001	FJ62	GRAY(TRIM1)		67917-90A00-03	1		
8708--9001	FJ62	SEPIA BROWN(TRIM4)		67917-90A00-16	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		62111A	TRIM SUB-ASSY, COWL SIDE, RH					
P	8708-9001	FJ62	GRAY(TRIM1)		62101-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		62101-90A00-16	1		
		62112A	TRIM SUB-ASSY, COWL SIDE, LH					
P	8708-9001	FJ62	GRAY(TRIM1)		62102-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		62102-90A00-16	1		
		62163	COVER, COWL SIDE INSTRUMENT PANEL BRACKET, RH					
P	8708-9001	FJ62	GRAY(TRIM1)		62163-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		62163-90A00-16	1		
		62164	COVER, COWL SIDE INSTRUMENT PANEL BRACKET, LH					
P	8708-9001	FJ62	GRAY(TRIM1)		62164-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		62164-90A00-16	1		
		62311B	WEATHERSTRIP, FRONT DOOR OPENING TRIM, RH					
	8808-8810	FJ62..WGG	SHADOW GRAY(TRIM1)	#	62311-90A00-03	1	003	
					(62311-90A01-03)	1		
	8808-8810	FJ62..WGG	SEPIA BROWN(TRIM4)	#	62311-90A00-06	1	003	
					(62311-90A01-06)	1		
P	8810-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		62311-90A01-03	1		
P	8810-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		62311-90A01-06	1		
		62312B	WEATHERSTRIP, FRONT DOOR OPENING TRIM, LH					
	8808-8810	FJ62..WGG	SHADOW GRAY(TRIM1)	#	62312-90A00-03	1	003	
					(62312-90A01-03)	1		
	8808-8810	FJ62..WGG	SEPIA BROWN(TRIM4)	#	62312-90A00-06	1	003	
					(62312-90A01-06)	1		
P	8810-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		62312-90A01-03	1		
P	8810-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		62312-90A01-06	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		62313D	TRIM, FRONT DOOR OPENING, RH					
	8708-8808	FJ62	GRAY(TRIM1)		62313-90A00-03	1		
	8708-8808	FJ62	SEPIA BROWN(TRIM4)		62313-90A00-16	1		
		62314D	TRIM, FRONT DOOR OPENING, LH					
	8708-8808	FJ62	GRAY(TRIM1)		62313-90A00-03	1		
	8708-8808	FJ62	SEPIA BROWN(TRIM4)		62313-90A00-16	1		
		62333A	TRIM, REAR DOOR OPENING, RH					
P	8708-9001	FJ62	GRAY(TRIM1)		62333-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		62333-90A00-16	1		
		62334A	TRIM, REAR DOOR OPENING, LH					
P	8708-9001	FJ62	GRAY(TRIM1)		62333-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		62333-90A00-16	1		
		62411	GARNISH, CENTER PILLAR, RH					
P	8708-9001	FJ62	GRAY(TRIM1)		62411-90A01-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		62411-90A01-16	1		
		62412	GARNISH, CENTER PILLAR, LH					
P	8708-9001	FJ62	GRAY(TRIM1)		62412-90A01-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		62412-90A01-16	1		
		62471B	COVER, REAR PILLAR, RH					
P	8708-9001	FJ62	IVORY(TRIM1,4)		62471-90A00-18	1		
		62472B	COVER, REAR PILLAR, LH					
P	8708-9001	FJ62	IVORY(TRIM1,4)		62472-90A00-18	1		

(8708-)

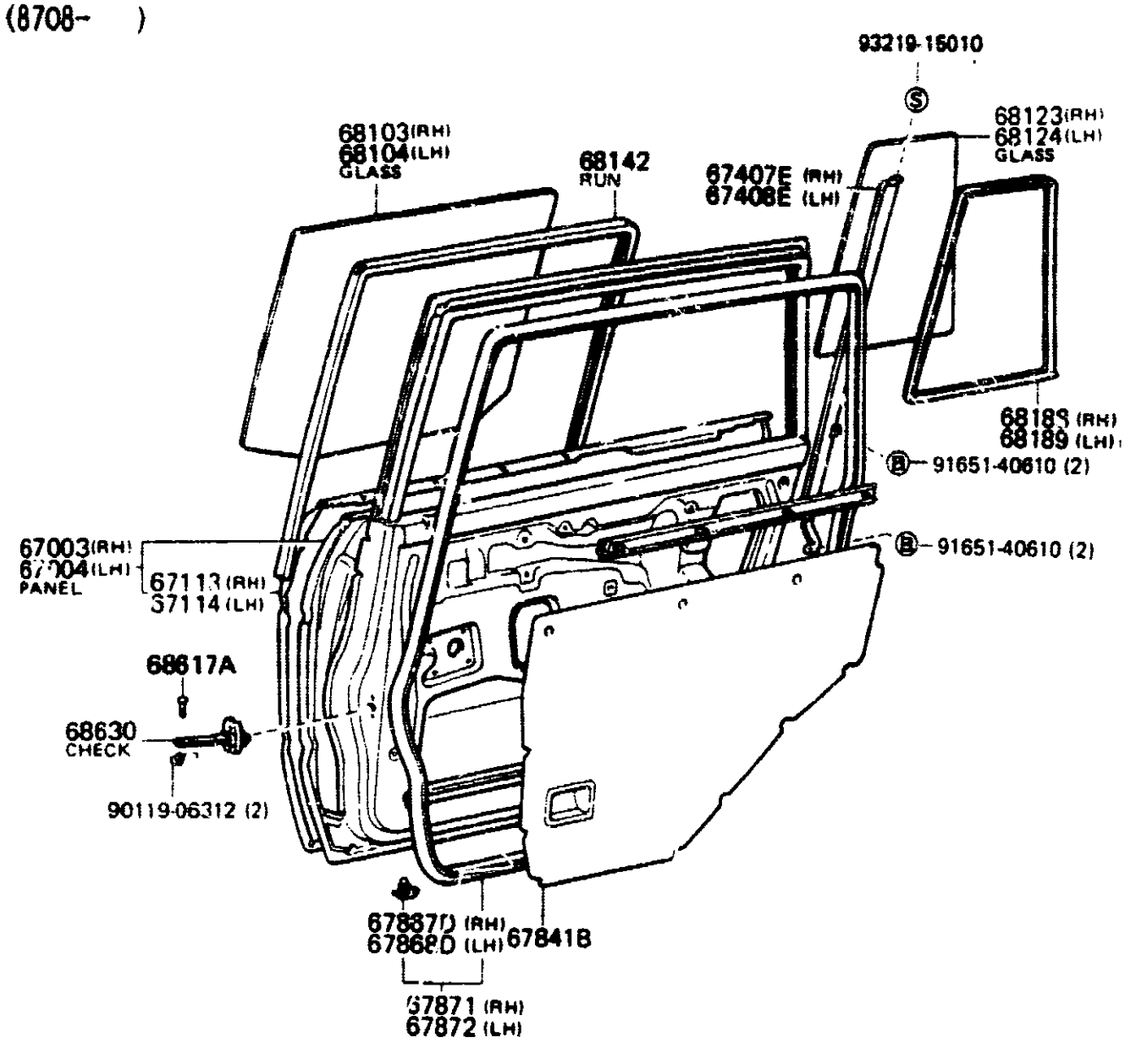

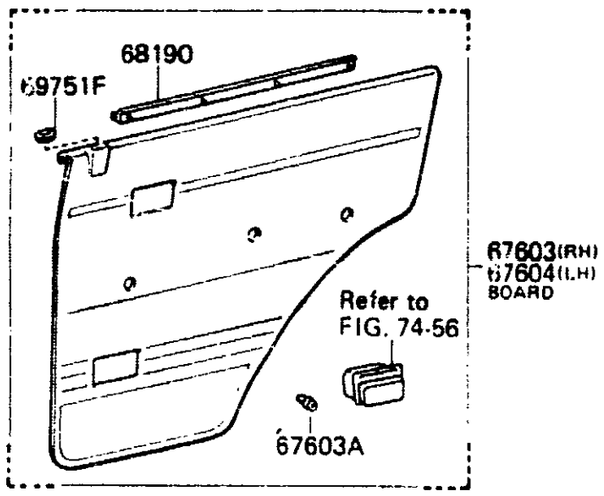


MB M007-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	67003	PANEL SUB-ASSY, REAR DOOR, RH					
8708-9001	FJ62			67003-90A15-	1		
8708-9001	FJ62	W(POWER WINDOW)		67003-90A17-	1		
	67004	PANEL SUB-ASSY, REAR DOOR, LH					
8706-9001	FJ62			67004-90A15-	1		
8708-9001	FJ62	W(POWER WINDOW)		67004-90A17-	1		
	67113	PANEL, REAR DOOR, OUTER RH					
8708-9001	FJ62			67113-90A05-	1		
	67114	PANEL, REAR DOOR, OUTER LH					
8708-9001	FJ62			67114-90A05-	1		
	67407E	BAR SUB-ASSY, REAR DOOR WINDOW DIVISION, RH					
8708-9001	FJ62			67407-90A00-	1		
	67408E	BAR SUB-ASSY, REAR DOOR WINDOW DIVISION, LH					
8708-9001	FJ62			67408-90A00-	1		
	67603	BOARD SUB-ASSY, REAR DOOR TRIM, RH					
8708-8808	FJ62..CND	W(POWER WINDOW),SHADOW GRAY(TRIM1)		67630-90A25-03	1		
8708-8808	FJ62..USA	W(POWER WINDOW),SHADOW GRAY(TRIM1)		〃	1		
8708-8808	FJ62..CND	W(POWER WINDOW),SEPIA BROWN(TRIM4)		67630-90A25-06	1		
8708-8808	FJ62..USA	W(POWER WINDOW),SEPIA BROWN(TRIM4)		〃	1		
8708-8808	FJ62	SHADOW GRAY(TRIM1)		67630-90A28-03	1		
8708-8808	FJ62	SEPIA BROWN(TRIM4)		67630-90A28-06	1		

(8708-)

ILLUST.NO. 1 OF 2

Front (Separate)

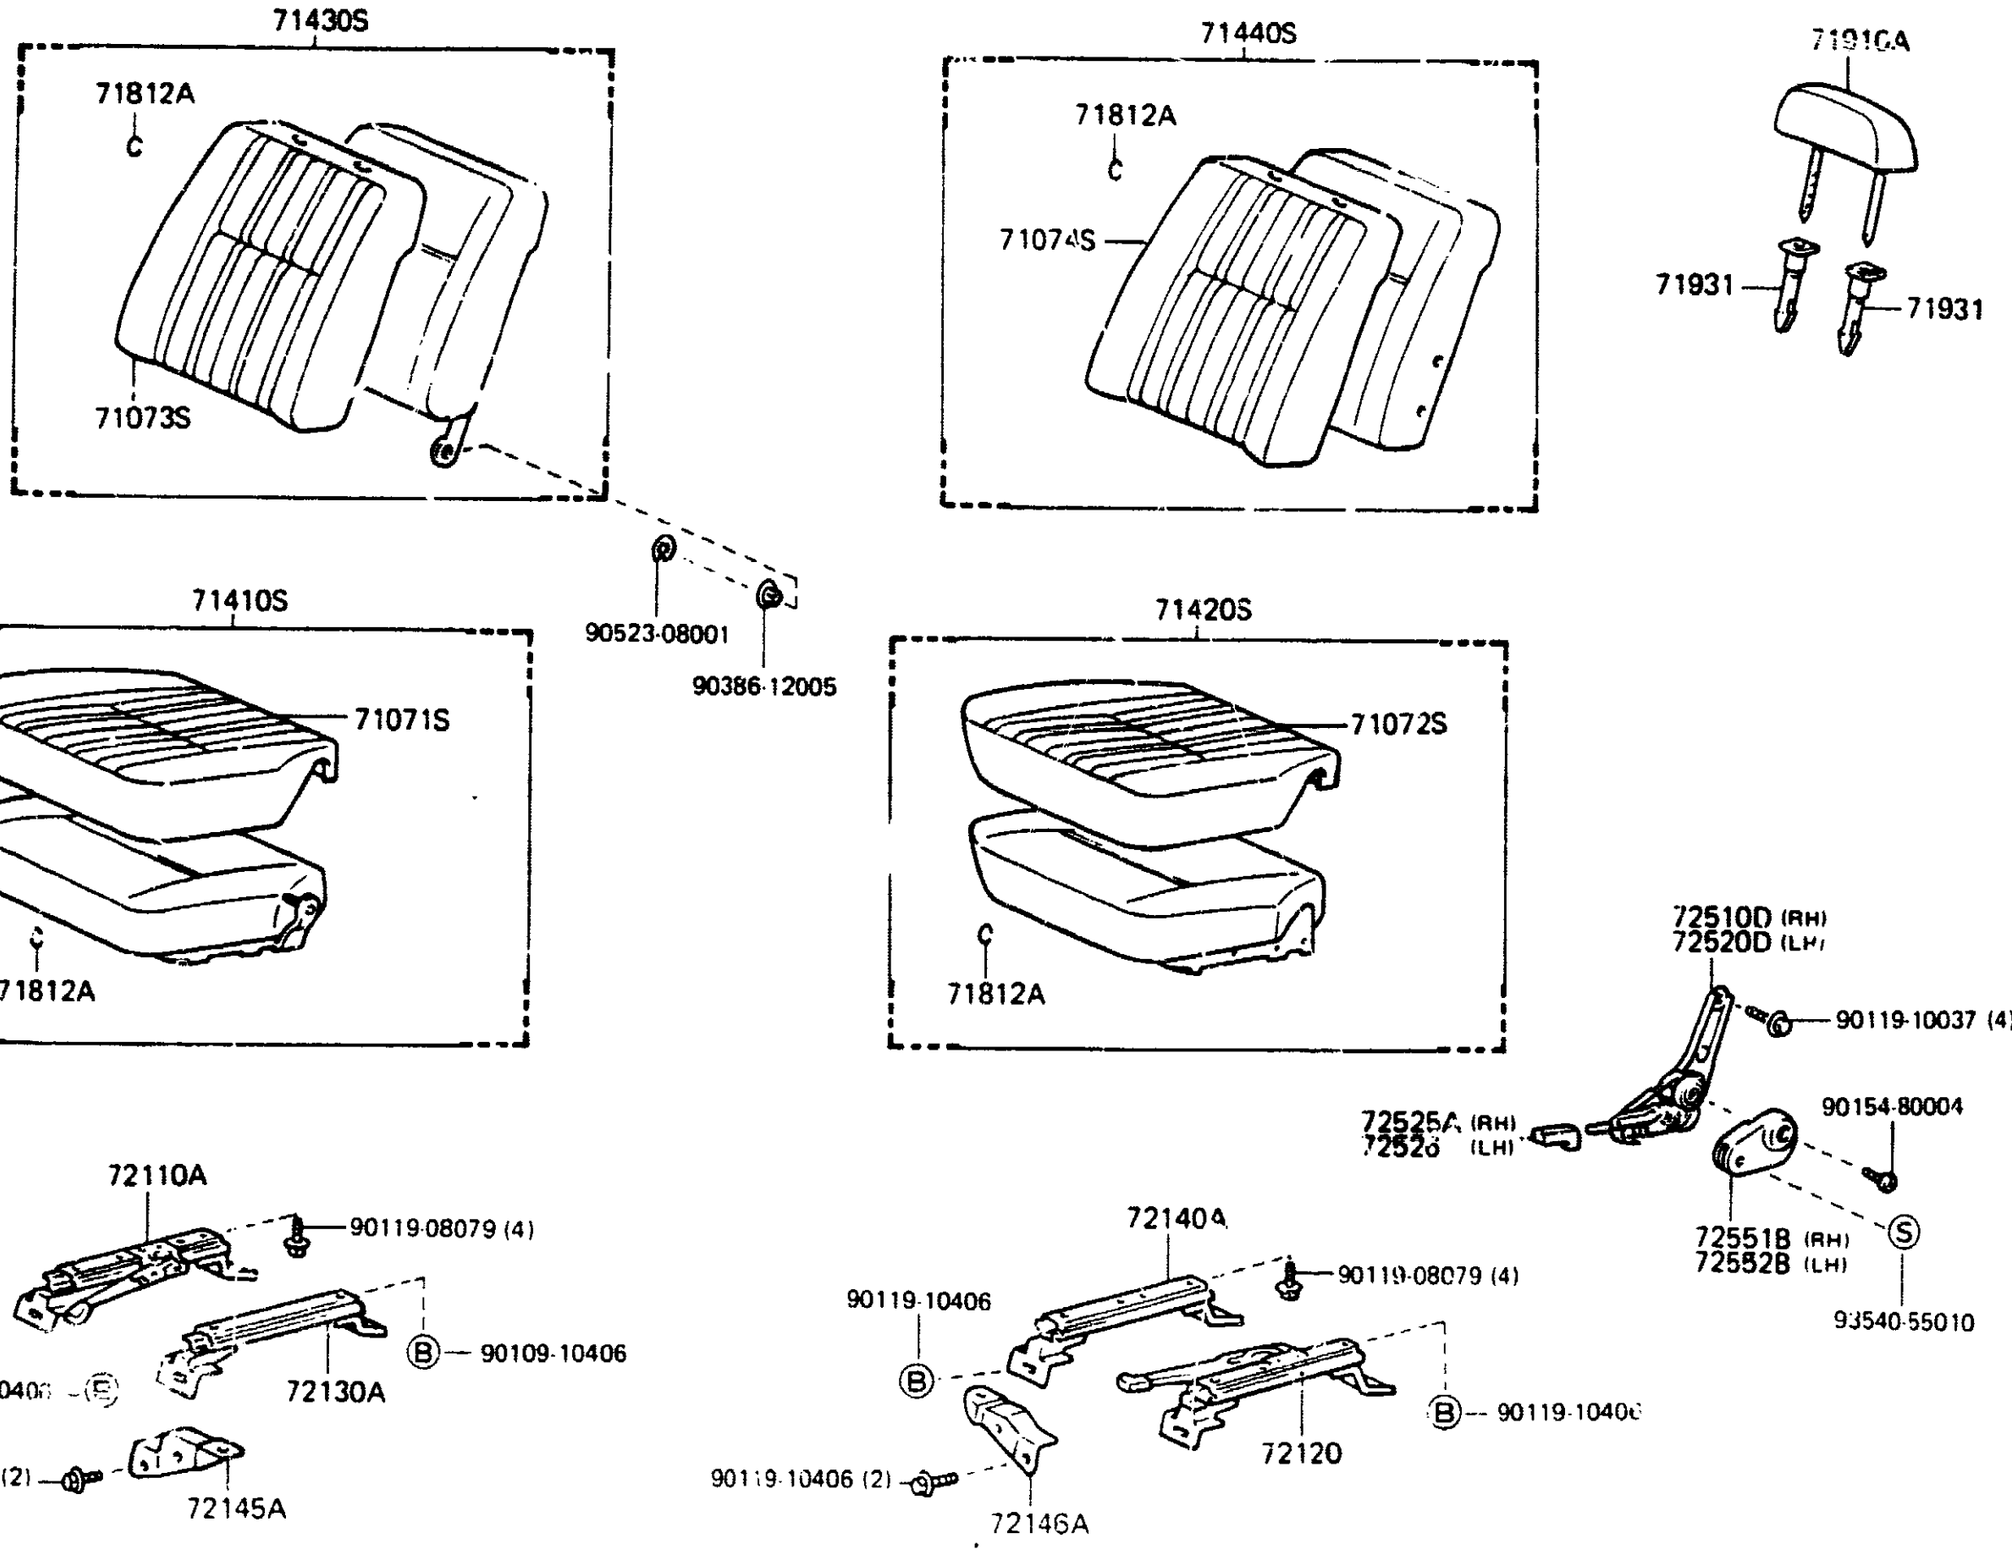


MB M028-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	75330	ONAMENT ASSY, FRONT FENDER, RH					
8708-9001	FJ62			75330-90A00-	1		
	75340	ONAMENT ASSY, FRONT FENDER, LH					
8708-9001	FJ62			75340-90A00-	1		
	75371A	EMBLEM, QUARTER PANEL					
8708-9001	FJ62	TOYOTA LANDCRUISER		75370-90A02-	2		
	75430	EMBLEM ASSY, BACK DOOR, NO.1					
8708-9001	FJ62..WGG			75430-90K00-	1		
	75442A	PLATE, BACK DOOR NAME, NO.2					
8708-9001	FJ62..WGG			75442-90A01-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

FIG. 81-013 FRONT TURN SIGNAL LAMP

(8708-)

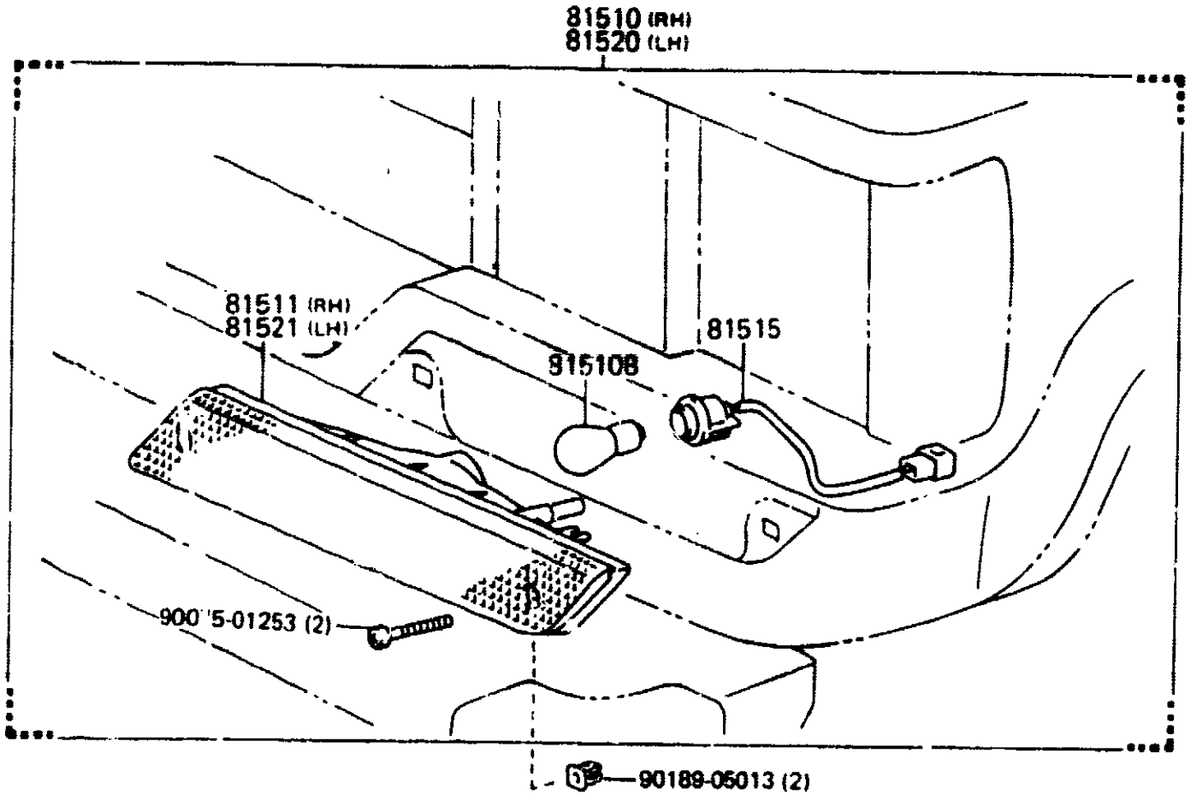


ME J475-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	81510 LAMP ASSY, FRONT TURN SIGNAL, RH						
P 8708-9001	FJ62			81510-90A13-	1		002
	81510B BULB (FOR FRONT TURN SIGNAL LAMP)						
P 8708-9001	FJ62	12V 27W		99132-11270-	2		002
	81511 LENS, FRONT TURN SIGNAL LAMP, RH						
P 8708-9001	FJ62			81511-90A13-	1		002
	81515 WIRE SUB-ASSY, FRONT TURN SIGNAL LAMP BODY						
P 8708-9001	FJ62			81515-90A13-	2		002
	81520 LAMP ASSY, FRONT TURN SIGNAL, LH						
P 8708-9001	FJ62			81520-90A13-	1		002
	81521 LENS, FRONT TURN SIGNAL LAMP, LH						
P 8708-9001	FJ62			81521-90A13-	1		002

(8708-)


ILLUST.NO.1 OF 2

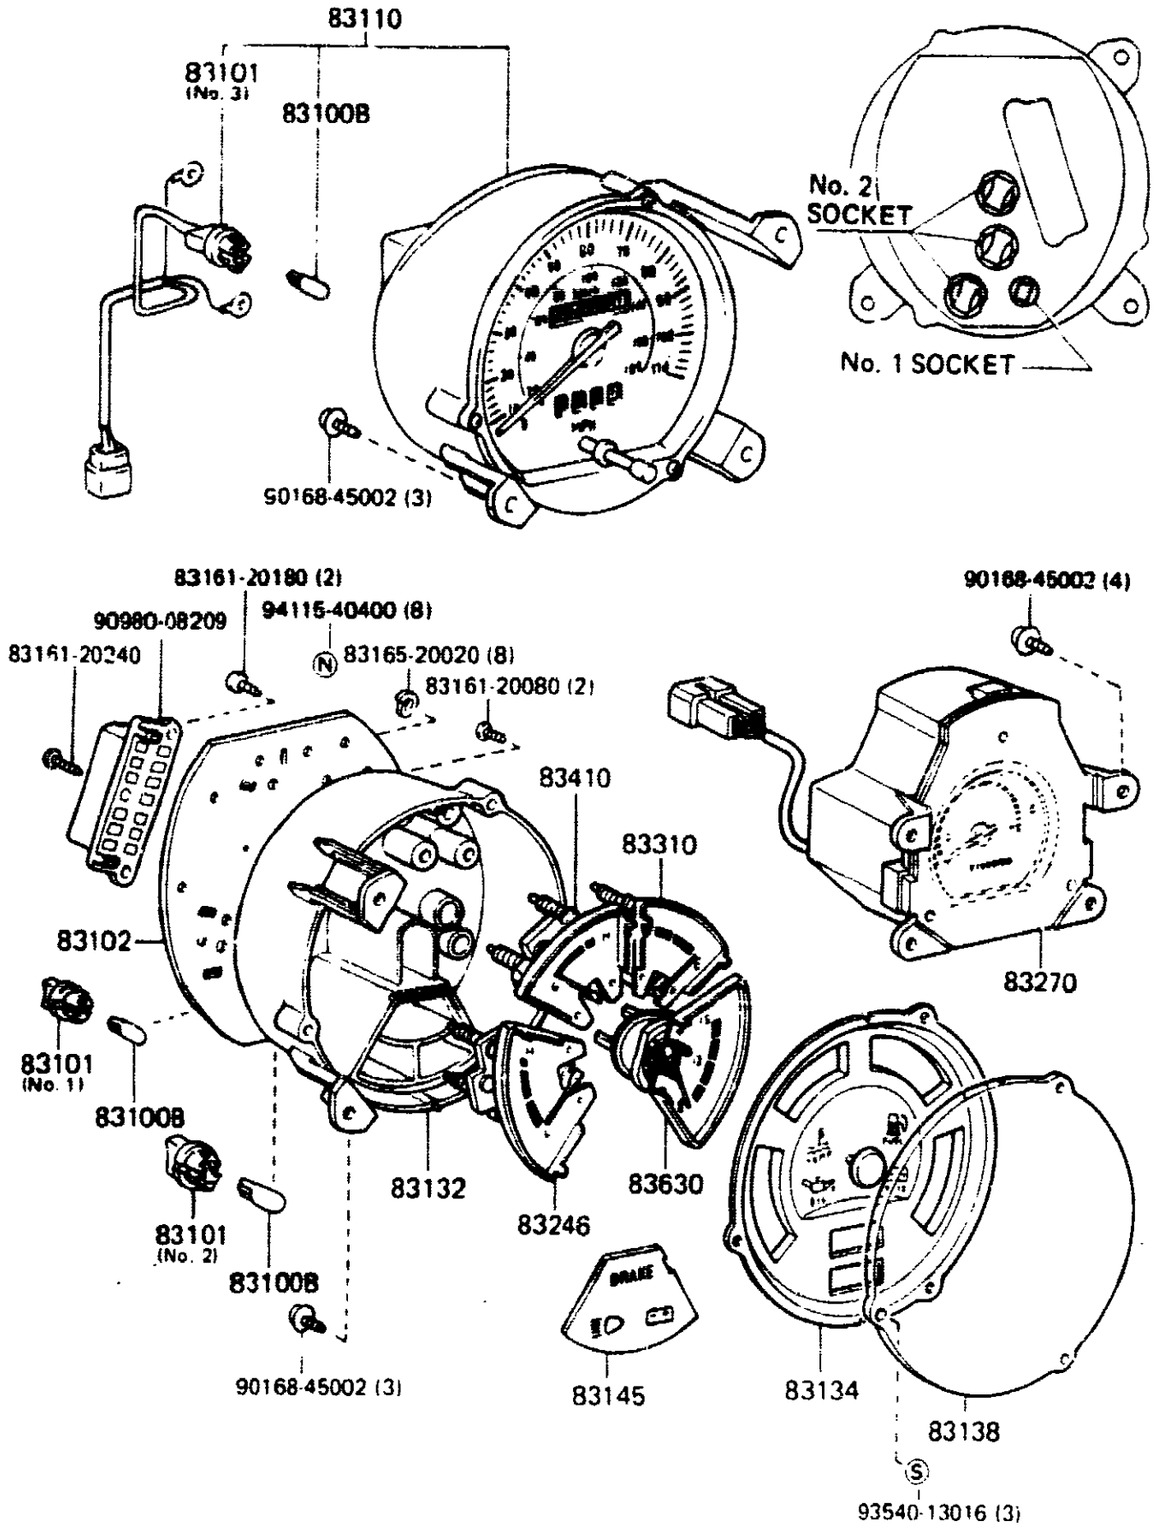


ME J613-A

(8708-)

ILLUST.NO.2 OF 2

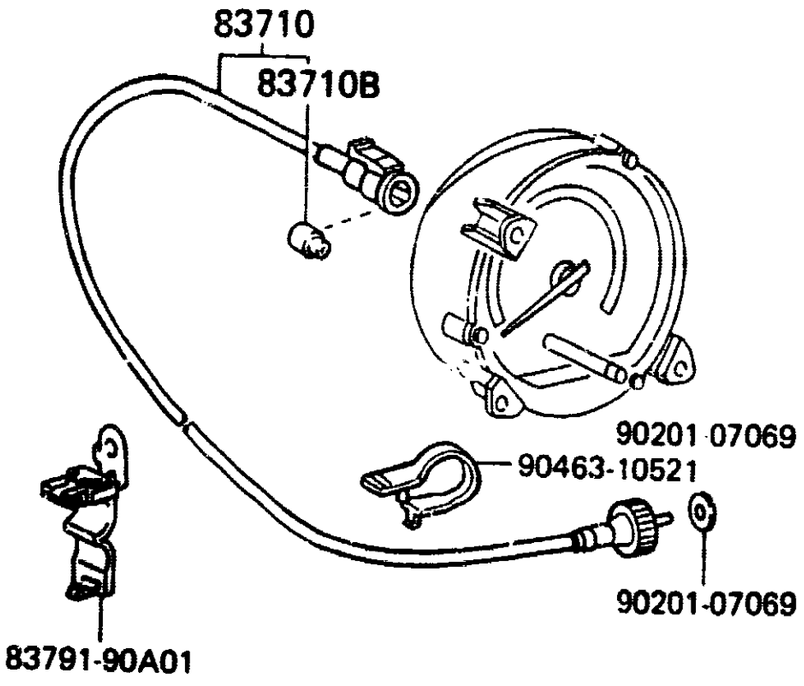


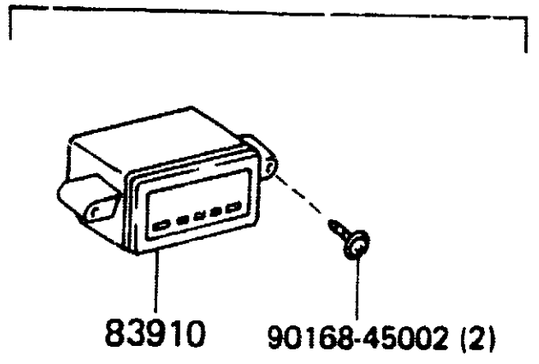

ME J614-B


FIG. 85-02 REAR WIPER


(8708-)

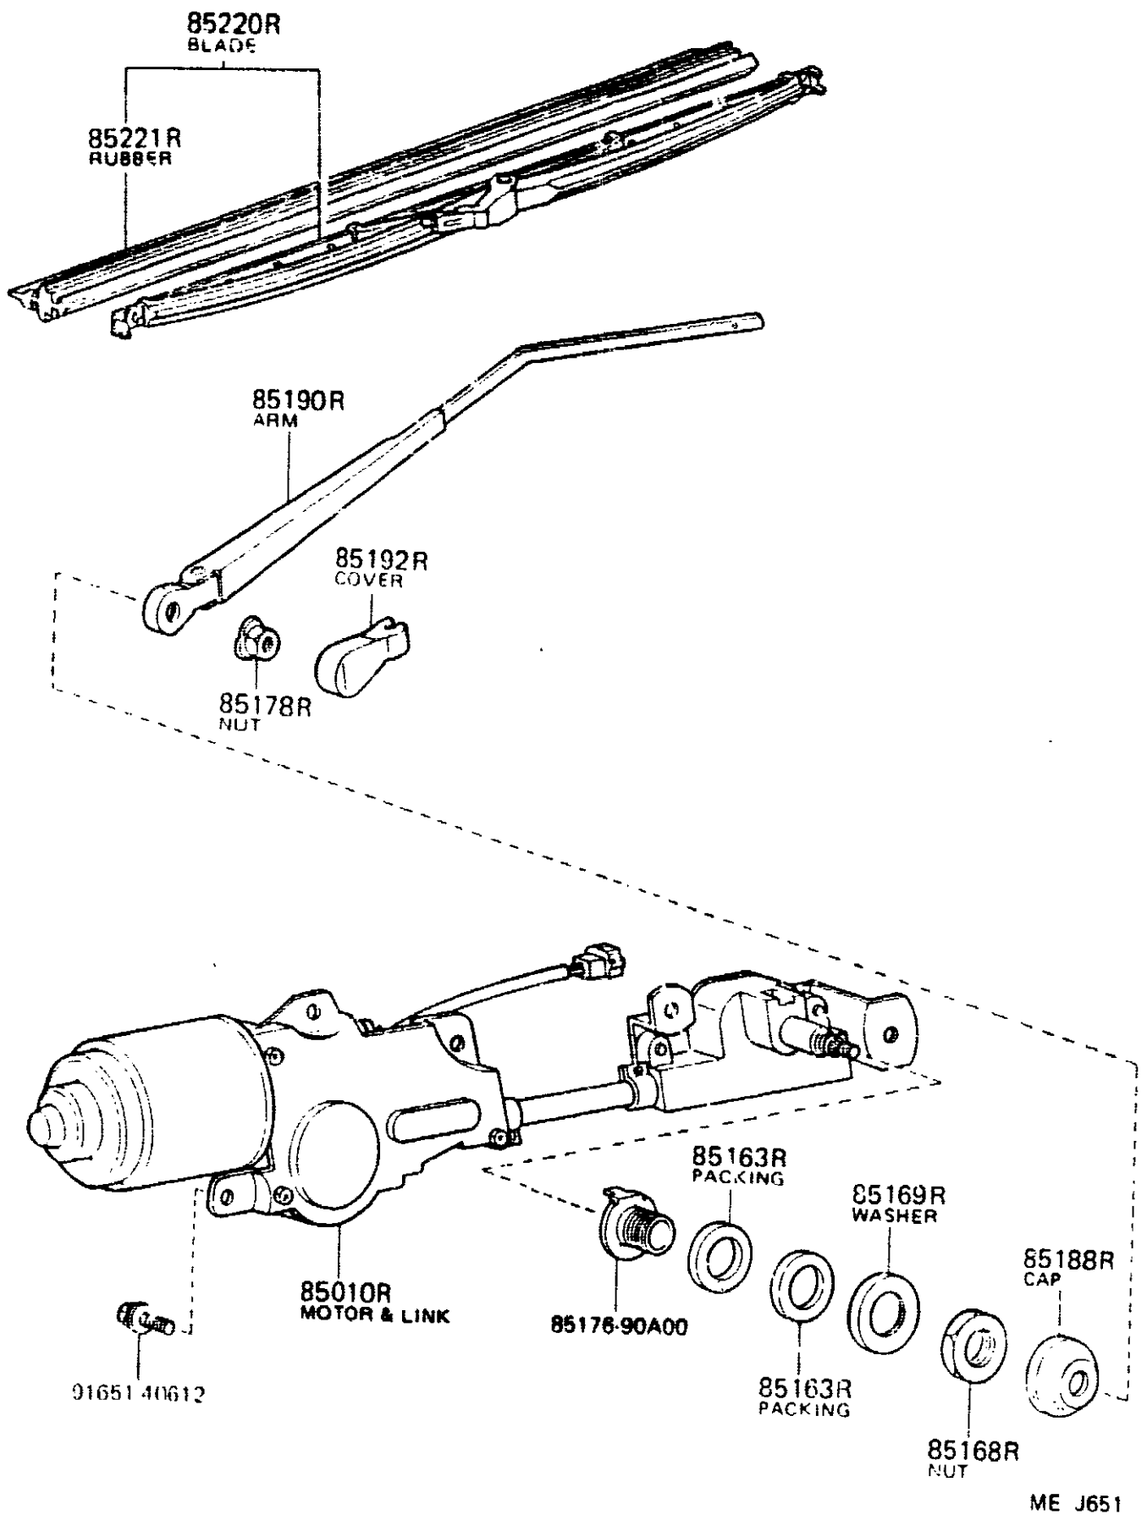

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	85010R	MOTOR AND LINK ASSY, REAR WIPER					
8708-9001	FJ62			85010-90A00-	1		
	85163R	PACKING, REAR WIPER PIVOT, NO.1					
8708-9001	FJ62			85174-12320-	2		
	85168R	NUT, REAR WIPER LINK PIVOT, NO.1					
8708-9001	FJ62			90099-05141-	1		
	85169R	WASHER, REAR WIPER LINK PIVOT, NO.1					
8708-9001	FJ62			90099-01458-	1		
	85178R	NUT (FOR REAR WIPER ARM SETTING)					
8708-9001	FJ62			90179-06158-	1		
	85188R	CAP, REAR WIPER PIVOT, NO.1					
8708-9001	FJ62			85178-12320-	1		
	85190R	ARM ASSY, REAR WIPER					
8708-9001	FJ62			85190-90A06-	1		
	85192R	COVER, REAR WIPER ARM					
8708-9001	FJ62			85195-95700-	1		
	85220R	BLADE ASSY, REAR WIPER					
8708-9001	FJ62			85220-90A02-	1		
	85221R	BLADE, REAR WIPER					
8708-9001	FJ62			85221-90A02-	1		

(8708-)

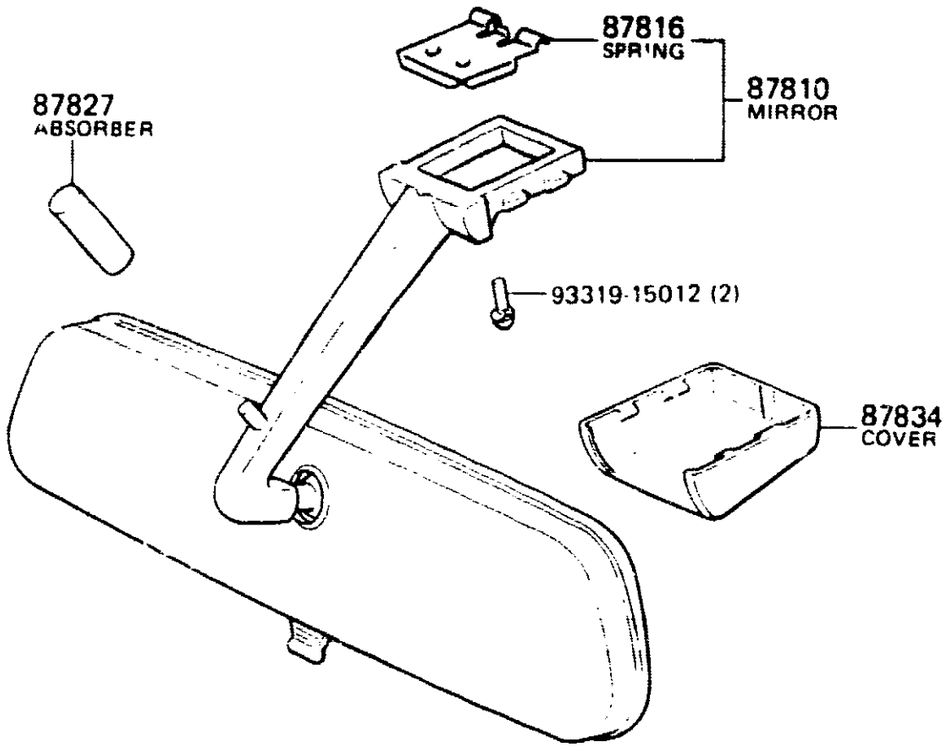

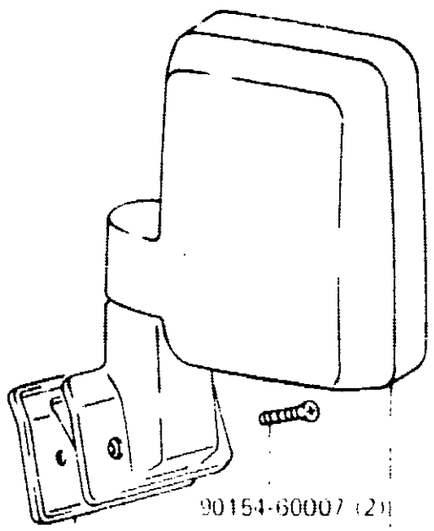

ME J676

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		87810 MIRROR ASSY, INNER REAR VIEW						
P	8708-9001	FJ62			87810-90A03-	1		002
		87816 SPRING, INNER REAR VIEW MIRROR						
P	8708-9001	FJ62			74272-90A00-	1		002
		87827 ABSORBER, INNER REAR VIEW MIRROR						
P	8708-9001	FJ62	L=40		87828-90A00-	1		002
P	8708-9001	FJ62	L=45		87828-90A01-	1		002
		87834 COVER, INNER REAR VIEW MIRROR STAY HOLDER						
P	8708-9001	FJ62	IVORY(TRIM1,4)		87834-14011-28	1		002
		87910 MIRROR ASSY, OUTER REAR VIEW, RH						
P	8708-8911	FJ62..WGG	DOOR REMOTE CONTROL MIRROR		87910-90A19-	1		002
P	8708-8911	FJ62..WGV	DOOR REMOTE CONTROL MIRROR		〃	1		
P	8708-9001	FJ62			87910-90A18-	1		002
N	8911-9001	FJ62..WGG	DOOR REMOTE CONTROL MIRROR		87910-90A20-	1		
N	8911-9001	FJ62..WGV	DOOR REMOTE CONTROL MIRROR		〃	1		
		87911 GASKET, OUTER REAR VIEW MIRROR, RH						
P	8708-9001	FJ62			87911-90A05-	1		002
		87940 MIRROR ASSY, OUTER REAR VIEW, LH						
P	8708-8911	FJ62..WGG	DOOR REMOTE CONTROL MIRROR		87940-90A11-	1		002
P	8708-8911	FJ62..WGV	DOOR REMOTE CONTROL MIRROR		〃	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		88330A	WASHER (FOR MAGNET CLUTCH) CONTINUED					
B	8806-9001	FJ62..WGG			88335-14020-	1		
		88335	GASKET KIT, OVERHAUL					
	8708-8808	FJ62			88335-12030-	1		
B	8808-9001	FJ62..WGG			88335-14010-	1		
		88343B	REED, SUCTION VALVE					
	8708-8808	FJ62			88343-14011-	2		
B	8808-9001	FJ62..WGG			88343-14020-	2		
		88344C	REED, DISCHARGE VALVE					
	8708-8808	FJ62			88344-14011-	2		
B	8808-9001	FJ62..WGG			88344-14020-	2		
		88356	LABEL, COMPRESSOR CAUTION					
B	8808-9001	FJ62..WGG			88356-12010-	1		
		88360A	RING, COMPRESSOR SEAL PLATE SNAP					
P	8708-9001	FJ62			90096-90022-	1		
		88360C	SEAL ASSY, SHAFT					
	8708-8808	FJ62			88360-40010-	1		
B	8808-9001	FJ62..WGG			88360-14030-	1		
		88371A	VALVE, SUCTION					
	8708-8808	FJ62			88371-60101-	1		
P	8808-9001	FJ62..WGG			88371-60170-	1		
		88374A	VALVE, SERVICE					
P	8708-9001	FJ62			88374-12020-	2		
		88375	CAP, COOLER COMPRESSOR SERVICE VALVE					
P	8708-9001	FJ62	DISCHARGE		88375-20010-	1		
P	8708-9001	FJ62	SUCTION		88375-30270-	1		
		88376	CAP, BLIND					
P	8708-9001	FJ62	SUCTION		88376-22010-	1		
P	8708-9001	FJ62	DISCHARGE		88376-22020-	1		
		88403	HUB SUB-ASSY, MAGNET CLUTCH					
	8708-8808	FJ62			88403-12030-	1		
B	8808-9001	FJ62..WGG			88403-16011-	1		
		88410	CLUTCH ASSY, MAGNET					
	8708-8808	FJ62			88410-22080-	1		
B	8808-9001	FJ62..WGG			88410-60120-	1		
		88431	BRACKET, COMPRESSOR MOUNTING, NO.1					
	8708-8808	FJ62			88431-60040-	1		
	8808-9001	FJ62..WGG			88431-60100-	1		
		88545	PULLEY ASSY, IDLE					
	8708-9001	FJ62			88440-35010-	1		

PART NUMBER	LOCATION
B 35676-36010-	2L1
-36020-	2D2
-36030-	2D2
-36040-	2D2
-36070-	2F2
-36080-	2F2
-36090-	2F2
35701-60010-	2B2
35706-60011-	2E2
35709-36010-	2E2
35712-36010-	2C2
	2L1
35713-36011-	2G2
35719-60010-	2E2
35720-60010-	2G2
35735-36010-	2J2
35737-36010-	2G2
35738-60010-	2H2
35743-60010-	2H2
35748-36010-	2H2
35760-60010-	2H2
35761-60010-	2H2
35762-60010-	2H2
35785-36010-	2E2
	2M1
35789-36010-	2M1
-36020-	2B2
	2M1
-36040-	2F1
-36050-	2F1
-36060-	2F1
-36070-	2M1
-36090-	2A2
	2B2
	2H2
-36100-	2C2
-36110-	2C2
-36120-	2C2
-36130-	2C2
-36140-	2C2
35790-36010-	2H2
35791-36010-	2L1
35847-36010-	2H3
35893-36010-	2H3
35906-60050-	2B1
35921-60030-	2B1
35971-60030-	2B1
35972-60020-	2B1
35974-60030-	2B1
35975-60020-	2B1
-60030-	2B1
35976-60020-	2B1
35989-60020-	2C1
36103-60160-	2A4
36110-6A790-	2M3
36119-60010-	2B4
-60020-	2D4
-60030-	2B4
36122-60040-	2B4
36124-60020-	2B4
36128-60021-	2B4
36132-60020-	2B4
36134-60020-	2B4
36142-60030-	2B4

PART NUMBER	LOCATION
36143-60020-	2B4
-60030-	2B4
36144-60020-	2B4
36152-60030-	2B4
36164-60040-	2H4
36212-60090-	2D4
36215-60030-	2D4
36221-60090-	2D4
36222-60020-	2D4
36225-60050-	2D4
36231-60050-	2D4
36234-60031-	2E4
36235-60020-	2E4
36237-60020-	2E4
36241-60080-	2D4
36242-60130-	2E4
36251-60030-	2E4
36303-60130-	2F4
36307-60040-	2F4
36308-60100-	2F4
36311-60041-	2F4
36312-60040-	2F4
36313-60070-	2G4
36314-60040-	2G4
36324-60050-	2G4
36327-60031-	2G4
36337-60080-	2H4
36338-60030-	2G4
36343-60010-	2H4
-60040-	2H4
36360-60220-	2G4
36362-60020-	2G4
36369-60030-	3M6
36409-60040-	2J4
36410-60030-	2H4
36416-36010-	2H4
36422-36010-	2H4
36482-60100-	2J4
36486-60010-	2H4
36726-60020-	2E4
37110-60410-	2K4
37140-60200-	2K4
37302-36020-	2L4
-60050-	2L4
37305-36020-	2L4
-60010-	2L4
37315-36020-	2L4
37402-10020-	2A7
-36080-	2L4
B 38628-60010-	2C1
S 41101-60041-	2B5
	2E6
P -60080-	2B5
	2E6
41110-60110-	2B5
	2E6
N -60111-	2B5
	2E6
P -60230-	2B5
	2E6
N -60231-	2B5
	2E6
41114-60010-	2C5
	2E6


PART NUMBER	LOCATION
41201-69166-	2C5
	2E6
41204-60030-	2C5
	2E6
41214-26010-	2C5
	2E6
41226-35010-	2C5
	2E6
P 41231-60020-	2C5
P	2E6
B -60030-	2C5
B	2F6
41252-35010-	2C5
	2F6
P 41301-60020-	2D5
P	2H6
S -60021-	2D5
S	2H6
B 41311-60070-	2D5
B	2H6
41315-30010-	2D5
	2F6
41316-30010-	2D5
B	2G6
B 41331-25010-	2D5
B	2F6
-35020-	2D5
-60020-	2D5
	2F6
B 41341-25010-	2E5
B	2F6
-55012-	2D5
	2F6
B 41342-55010-	2E5
B	2F6
-60010-	2E5
	2F6
-60020-	2E5
	2F6
P 41343-55010-	2E5
P	2F6
-60010-	2E5
B -60030-	2E5
B	2G6
41344-35010-	2E5
41345-35010-	2E5
41346-35010-	2E5
41347-35010-	2E5
41348-35010-	2E5
B 41351-25010-	2E5
B	2G6
-35011-	2E5
	2G6
41361-60010-	2E5
	2G6
-60020-	2E5
	2G6
-60030-	2E5
	2G6
-60040-	2E5
	2G6
41375-60010-	2E5
	2G6

PART NUMBER	LOCATION
41451-60010-	2E5
	2G6
P 41453-60010-	2E5
P	2G6
S -60011-	2E5
S	2G6
41456-60010-	2E5
	2G6
41460-60010-	2E5
	2G6
41464-60010-	2F5
	2G6
41465-60010-	2F5
	2G6
41466-60010-	2F5
	2H6
41467-60020-	2F5
41991-60030-	2F5
-60040-	2F5
42109-60050-	2F5
42110-60193-	2F5
-60301-	2F5
42137-55010-	2F5
42181-36010-	2F5
	2H6
P -60030-	2F5
42183-35010-	2F5
42306-60051-	2G5
P 42311-60060-	2I5
N -60061-	2I5
-60080-	2I5
P 42312-60050-	2I5
N -60051-	2I5
-60060-	2I5
42323-60010-	2K6
-60020-	2F9
42325-55010-	2I5
A 42411-60011-	2I5
42419-60011-	2J5
A 42420-60110-	2J5
42427-60C21-	2J5
42428-60011-	2J5
42431-60020-	2I5
42441-30010-	2J5
42443-55020-	2J5
42506-60010-	2A6
42511-60010-	2A6
42512-60010-	2A6
42513-60010-	2A6
42514-60010-	2A6
42515-60010-	2A6
42516-60010-	2A6
42517-60010-	2A6
42518-60010-	2A6
42521-60010-	2A6
42522-60010-	2A6
42523-60010-	2A6
42531-60030-	2A6
42532-60030-	2B6
42533-60010-	2B6
42534-60030-	2B6
42535-60010-	2B6
42537-60010-	2B6
-60020-	2B6

PART NUMBER	LOCATION
42538-60010-	2B6
42540-60010-	2B6
42541-60010-	2B6
42550-60010-	2B6
42560-60011-	2B6
42562-60010-	2B6
A 42601-60221-	2K5
42603-35080-	2K5
-60012-	2K5
-60052-	2K5
B 42652-60060-	2L5
43110-60144-	2H6
-60211-	2H6
43204-60020-	2E9
43209-60011-	2H6
43211-60050-	2E9
43212-60050-	2E9
43232-35010-	2E9
43233-60011-	2E9
43234-60011-	2F9
43235-60010-	2F9
43236-60010-	2F9
43237-60030-	2F9
43238-60010-	2F9
43239-60020-	2F9
P 43401-60012-	2F9
S -60060-	2F9
43405-60016-	2J6
P 43411-60020-	2J6
N -60060-	2J6
43412-35010-	2J6
-60050-	2J6
43422-60020-	2J5
	2K6
43435-60011-	2F9
43436-60011-	2F9
43502-60020-	2K6
43509-60015-	2K6
43512-60040-	2L6
43521-60011-	2L6
43530-69017-	2L6
43531-60010-	2L6
43532-60010-	2L6
44104-22011-	2J7
44105-30060-	2J7
44107-60060-	2K7
44108-60010-	2K7
44110-60160-	2K7
44111-60040-	2K7
44115-30040-	2K7
44116-30040-	2K7
44120-60130-	2L7
44142-22010-	2K7
-22020-	2L7
44302-14010-	2D7
44304-60021-	2D7
44305-30020-	2D7
44306-60070-	2F7
44308-35030-	2D7
44311-60010-	2D7
44312-12010-	2E7
44313-12010-	2E7
-12020-	2E7
-12030-	2E7

PART NUMBER	LOCATION
44313-12040-	2E7
-12050-	2E7
-22040-	2E7
-22050-	2E7
-22060-	2E7
-22070-	2E7
-22080-	2E7
44320-30090-	2E7
44325-12010-	2E7
-12020-	2E7
-12030-	2E7
-12040-	2E7
-12050-	2E7
44330-30100-	2E7
-30110-	2E7
-30120-	2E7
-30130-	2E7
-30140-	2E7
-30150-	2E7
44341-12010-	2F7
44343-12040-	2F7
44345-12010-	2F7
-12020-	2F7
-12030-	2F7
-12040-	2F7
-12050-	2F7
44391-14010-	2F7
44410-60170-	2G7
44416-60061-	2G7
44443-60050-	2G7
44446-60020-	2G7
44605-30350-	2G8
44608-17090-	2G8
44609-17090-	2G8
44610-60530-	2G8
44624-20810-	2G8
44628-20810-	2G8
44632-27290-	2G8
44633-20811-	2G8
44637-20810-	2G8
44645-10080-	2G8
44651-20810-	2G8
44673-20810-	2G8
44730-24020-	2G8
44758-60030-	2G8
44772-60050-	2G8
44773-60030-	2G8
44785-35020-	2G8
44786-60040-	2B9
45025-60020-	2M6
P 45044-69055-	2L7
N -69056-	2L7
A 45045-69045-	2L7
S -69046-	2L7
P 45046-69115-	2L7
N -69116-	2L7
P 45047-69065-	2L7
N -69066-	2L7
45081-22020-	2M6
45082-60010-	2M6
P 45100-60140-03	2H7
P -60140-06	2H7
45105-60040-	2H7
P 45130-60101-03	2H7


Station Wagon (5708–9001)

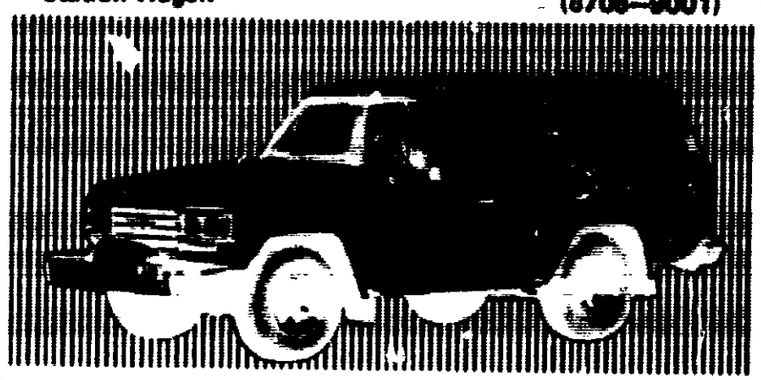

MP1966

FIG. 51-53 SPARE WHEEL CARRIER

(8708-)

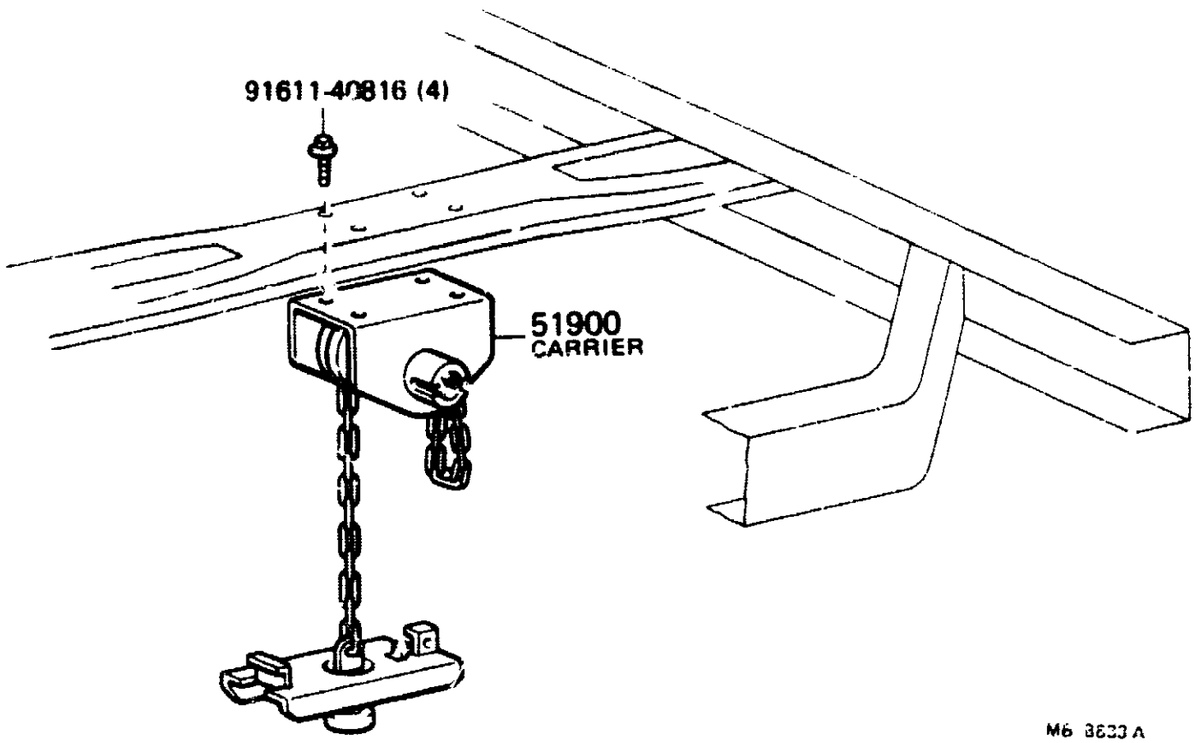


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	51900	CARRIER ASSY, SPARE WHEEL					
8708-9001	FJ62			51900-60100-	1		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		55501A	DOOR SUB-ASSY, GLOVE COMPARTMENT					
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		55501-90A00-06	1		
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		55501-90A00-23	1		
		55503B	CUSHION (FOR GLOVE COMPARTM.					
	8708-9001	FJ62			90541-03015-	2		
		55505D	HINGE SUB-ASSY, GLOVE COMPARTMENT DOOR					
	8708-9001	FJ62			55505-90A00-	1		
		55517	STOPPER, GLOVE COMPARTMENT DOOR ARM					
	8708-9001	FJ62			55517-14010-	1		
		55521C	COVER, STEREO OPENING					
P	8708-9001	FJ62	BLACK(TRIM1,4)		55521-14050-01	1		
		55538A	COVER, COOLER SWITCH HOLE					
	8708-9001	FJ62			55538-22010-	1		
		55539	COVER, SPARE SWITCH HOLE					
	8708-8712	FJ62	BLACK(TRIM1,4)		# 55539-32010-01	1	002	
					(55539-32010-11)	2		
		55545	COVER, FUSE BOX OPENING					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		55545-90A01-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		55545-90A01-06	1		
		55547	COVER, REMOTE CONTROL MIRROR HOLE					
	8708-9001	FJ62			55547-90A00	1		


	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		55549A	COVER, RR COOLER SWITCH HOLE					
	8708-9001	FJ62			55549-90A00-	1		
		55556	ARM, GLOVE COMPARTMENT DOOR CHECK					
	8708-9001	FJ62			55556-90A01-	1		
		55561A	STRIKER, GLOVE COMPARTMENT DOOR LOCK					
	8708-9001	FJ62			55561-90A00-	1		
		55569	COVER, GLOVE COMPARTMENT DOOR LOCK					
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		55569-90A00-06	1		
F	8708-9001	FJ62	SHADOW GRAY(TRIM1)		55569-90A00-23	1		
		55581A	COMPARTMENT, GLOVE					
	8708-9001	FJ62			55581-90A06-	1		
		55650	REGISTER ASSY, INSTRUMENT PANEL, NO.1					
	8708-9001	FJ62			55650-90A02-	1		
		55660	REGISTER ASSY, INSTRUMENT PANEL, NO.2					
	8708-9001	FJ62			55660-90A00-	1		
		55670	REGISTER ASSY, INSTRUMENT PANEL, NO.3					
	8708-9001	FJ62			55670-90A02-	2		
		55950	NOZZLE ASSY, DEFROSTER					
	8708-8805	FJ62			# 55950-90A01-	1		
					(55950-90A03-)	1		
	8805-9001	FJ62			55950-90A03-	1		

FIG. 58-55 CONSOLE BOX & BRACKET

(8708-)

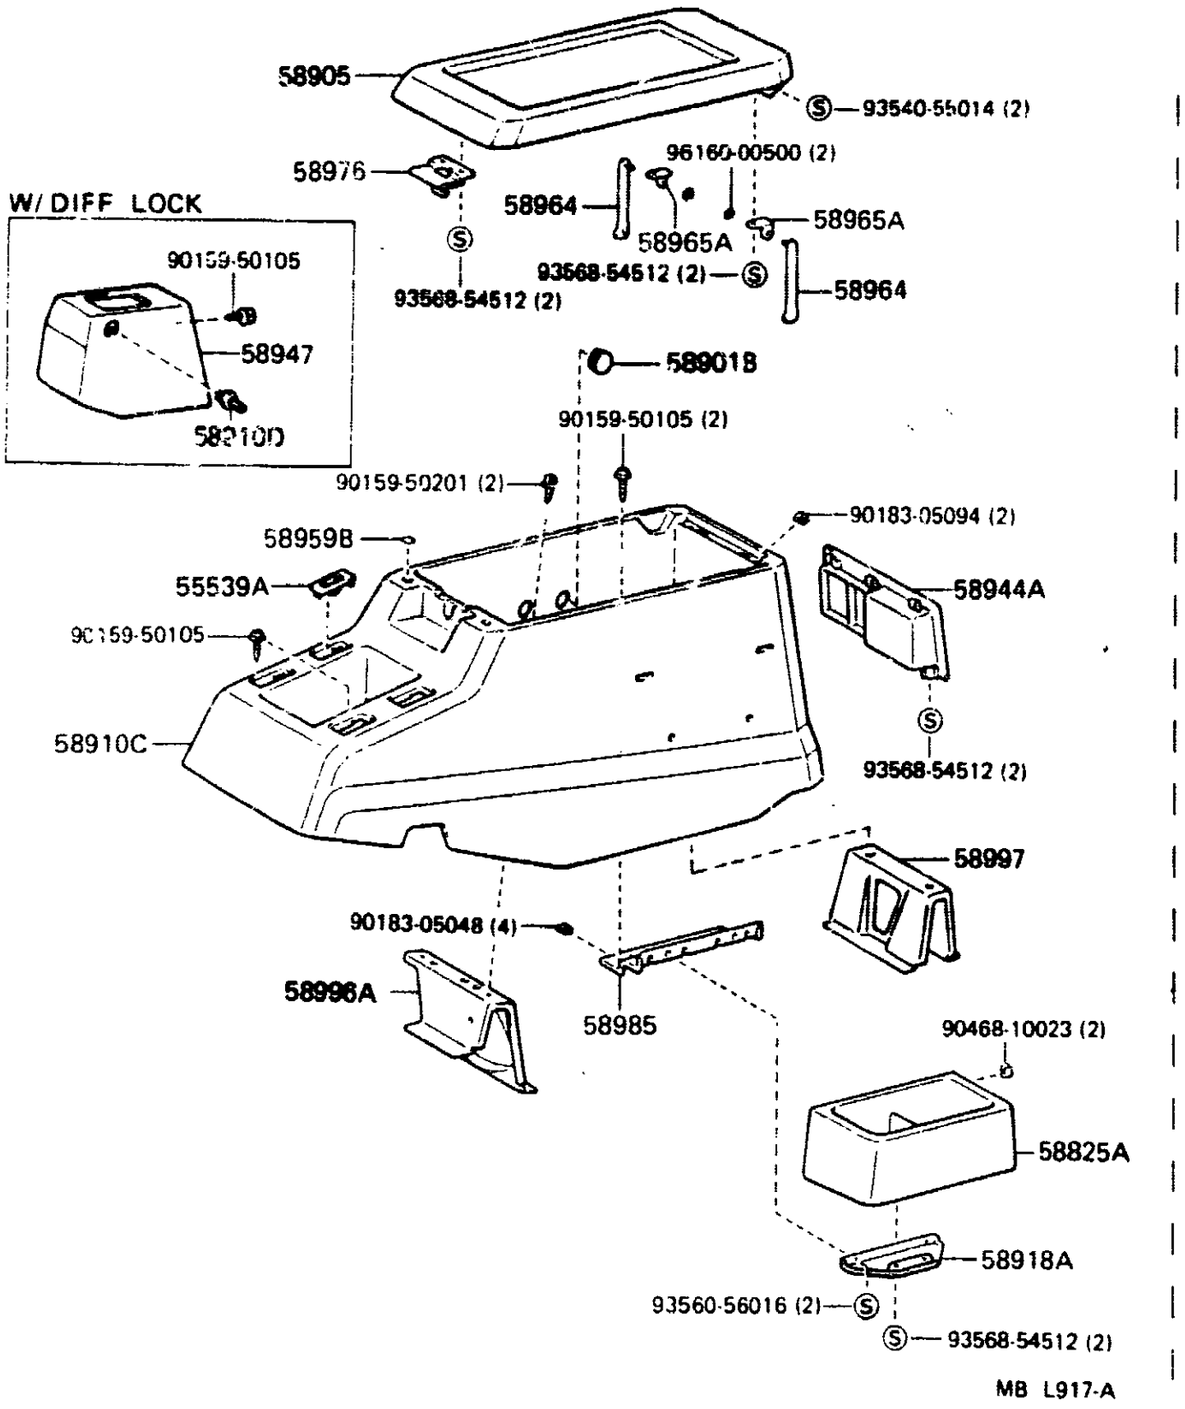

(8708-)

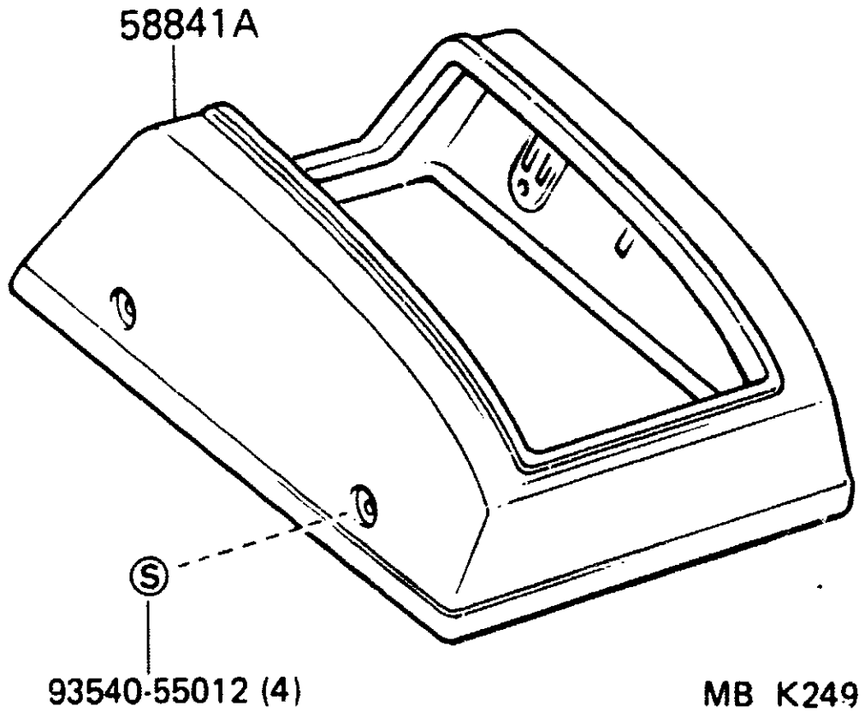

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		62511	**BOARD, QUARTER INSIDE TRIM, RH**					
	8708-8808	FJ62	SHADOW GRAY(TRIM1)		62510-90A31-03	1		002
	8708-8808	FJ62	SEPIA BROWN(TRIM4)		62510-90A31-06	1		002
P	8808-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		62510-90A34-03	1	003	
P	8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		62510-90A34-06	1	003	
		62512	**BOARD, QUARTER INSIDE TRIM, LH**					
	8708-8808	FJ62	SHADOW GRAY(TRIM1)		62520-90A52-03	1		002
	8708-8808	FJ62	SEPIA BROWN(TRIM4)		62520-90A52-06	1		002
P	3808-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		62520-90A44-03	1	003	
P	8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		62520-90A44-06	1	003	
		62539C	**COVER, QUARTER TRIM UPPER BELT HOLE, RH**					
P	8808-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		62539-90A01-03	1	003	
P	8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		62539-90A01-06	1	003	
		62549C	**COVER, QUARTER TRIM UPPER BELT HOLE, LH**					
P	8808-9001	FJ62..WGG	GRAY(TRIM1)		62549-90A00-03	1	003	
P	8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		62549-90A00-16	1	003	
		62613A	**COVER, QUARTER WHEEL HOUSE, RH**					
	8708-8808	FJ62	SHADOW GRAY(TRIM1)		62613-90A07-03	1		002
	8708-8808	FJ62	SEPIA BROWN(TRIM4)		62613-90A07-06	1		002
P	8808-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		62613-90A09-03	1	003	
P	8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		62613-90A09-06	1	003	
		62614A	**COVER, QUARTER WHEEL HOUSE, LH**					
	8708-8808	FJ62	GRAY(TRIM1)		62614-90A00-03	1		002
	8708-8808	FJ62	SEPIA BROWN(TRIM4)		62614-90A00-16	1		002

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		62614A CONTINUED	**COVER, QUARTER WHEEL HOUSE, LH**					
P	8808-9001	FJ62..WGG	GRAY(TRIM1)		62614-90A02-03	1	003	
	8808-9001	FJ62..WGG	BROWN(TRIM4)		62614-90A02-06	1	003	
		62633A	**GARNISH, QUARTER TRIM, RH**					
	8708-8808	FJ62..WGV	IVORY(TRIM1,4)		62505-90A03-08	1		002
	8708-8808	FJ62..WGG	IVORY(TRIM1,4)		62633-90A09-08	1		002
P	8808-9001	FJ62..WGG	IVORY(TRIM1,4)		62633-90A11-08	1	003	
		62634A	**GARNISH, QUARTER TRIM, LH**					
	8708-8808	FJ62..WGV	IVORY(TRIM1,4)		62506-90A03-08	1		002
	8708-8808	FJ62..WGG	IVORY(TRIM1,4)		62634-90A09-08	1		002
P	8808-9001	FJ62..WGG	IVORY(TRIM1,4)		62634-90A11-08	1	003	
		62640P	**PANEL ASSY, QUARTER TRIM, REAR LH**					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		62640-90A17-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		62640-90A17-06	1		
		62650H	**PANEL ASSY, QUARTER TRIM, CENTER**					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		62650-90A06-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		62650-90A06-06	1		
		64739	**COVER, DECK TRIM SIDE WASHER**					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		64739-90K01-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		64739-90K01-06	1		


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		67603	BOARD SUB-ASSY, REAR DOOR TRIM, RH CONTINUED					
P	8808-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		67630-90A33-03	1		
P	8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		67630-90A33-06	1		
P	8808-9001	FJ62..CND	W(POWER WINDOW),SHADOW GRAY(TRIM1)		67630-90A36-03	1		
P	8808-9001	FJ62..WGG..USA	W(POWER WINDOW),SHADOW GRAY(TRIM1)		〃	1		
P	8808-9001	FJ62..CND	W(POWER WINDOW),SEPIA BROWN(TRIM4)		67630-90A36-06	1		
P	8808-9001	FJ62..WGG..USA	W(POWER WINDOW),SEPIA BROWN(TRIM4)		〃	1		
		67603A	RETAINER (FOR REAR DOOR TRIM BOARD)					
	8708-9001	FJ62			67771-30060-	18		
		67604	BOARD SUB-ASSY, REAR DOOR TRIM, LH					
	8708-8808	FJ62..CND	W(POWER WINDOW),SHADOW GRAY(TRIM1)		67640-90A25-03	1		
	8708-8808	FJ62..USA	W(POWER WINDOW),SHADOW GRAY(TRIM1)		〃	1		
	8708-8808	FJ62..CND	W(POWER WINDOW),SEPIA BROWN(TRIM4)		67640-90A25-06	1		
	8708-8808	FJ62..USA	W(POWER WINDOW),SEPIA BROWN(TRIM4)		〃	1		
	8708-8808	FJ62	SHADOW GRAY(TRIM1)		67640-90A28-03	1		
	8708-8808	FJ62	SEPIA BROWN(TRIM4)		67640-90A28-06	1		
P	8808-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		67640-90A34-03	1		
P	8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		67640-90A34-06	1		
P	8808-9001	FJ62..CND	W(POWER WINDOW),SHADOW GRAY(TRIM1)		67640-90A37-03	1		
P	8808-9001	FJ62..WGG..USA	W(POWER WINDOW),SHADOW GRAY(TRIM1)		〃	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		67604	BOARD SUB-ASSY, REAR DOOR TRIM, LH CONTINUED					
	8808-9001	FJ62..CND	W(POWER WINDOW),SEPIA BROWN(TRIM4)		67640-90A37-06	1		
P	8808-9001	FJ62..WGG..USA	W(POWER WINDOW),SEPIA BROWN(TRIM4)		〃	1		
		67841B	COVER, REAR DOOR SERVICE HOLE					
P	8708-8908	FJ62			67805-90A01-	2		
A	8908-9001	FJ62..WGG			〃	2		
		67867D	RETAINER, REAR DOOR WEATHERSTRIP,RH					
	8708-9001	FJ62			67868-30040-	21		
		67868D	RETAINER, REAR DOOR WEATHERSTRIP,LH					
	8708-9001	FJ62			67868-30040-	21		
		67871	WEATHERSTRIP, REAR DOOR, RH					
	8708-9001	FJ62			67871-90A00-	1		
		67872	WEATHERSTRIP, REAR DOOR, LH					
	8708-9001	FJ62			67872-90A00-	1		
		68103	GLASS SUB-ASSY, REAR DOOR, RH					
	8708-9001	FJ62	*TT,T=4.0		68113-90A01-	1		
		68104	GLASS SUB-ASSY, REAR DOOR, LH					
	8708-9001	FJ62	*TT,T=4.0		68114-90A01-	1		
		68123	GLASS, REAR DOOR WINDOW, RH					
	8708-9001	FJ62	*TT,T=4.0		68123-90A01-	1		

*TT=Tinted Tempered Glass

(8708-)


ILLUST.NO. 2 OF 2

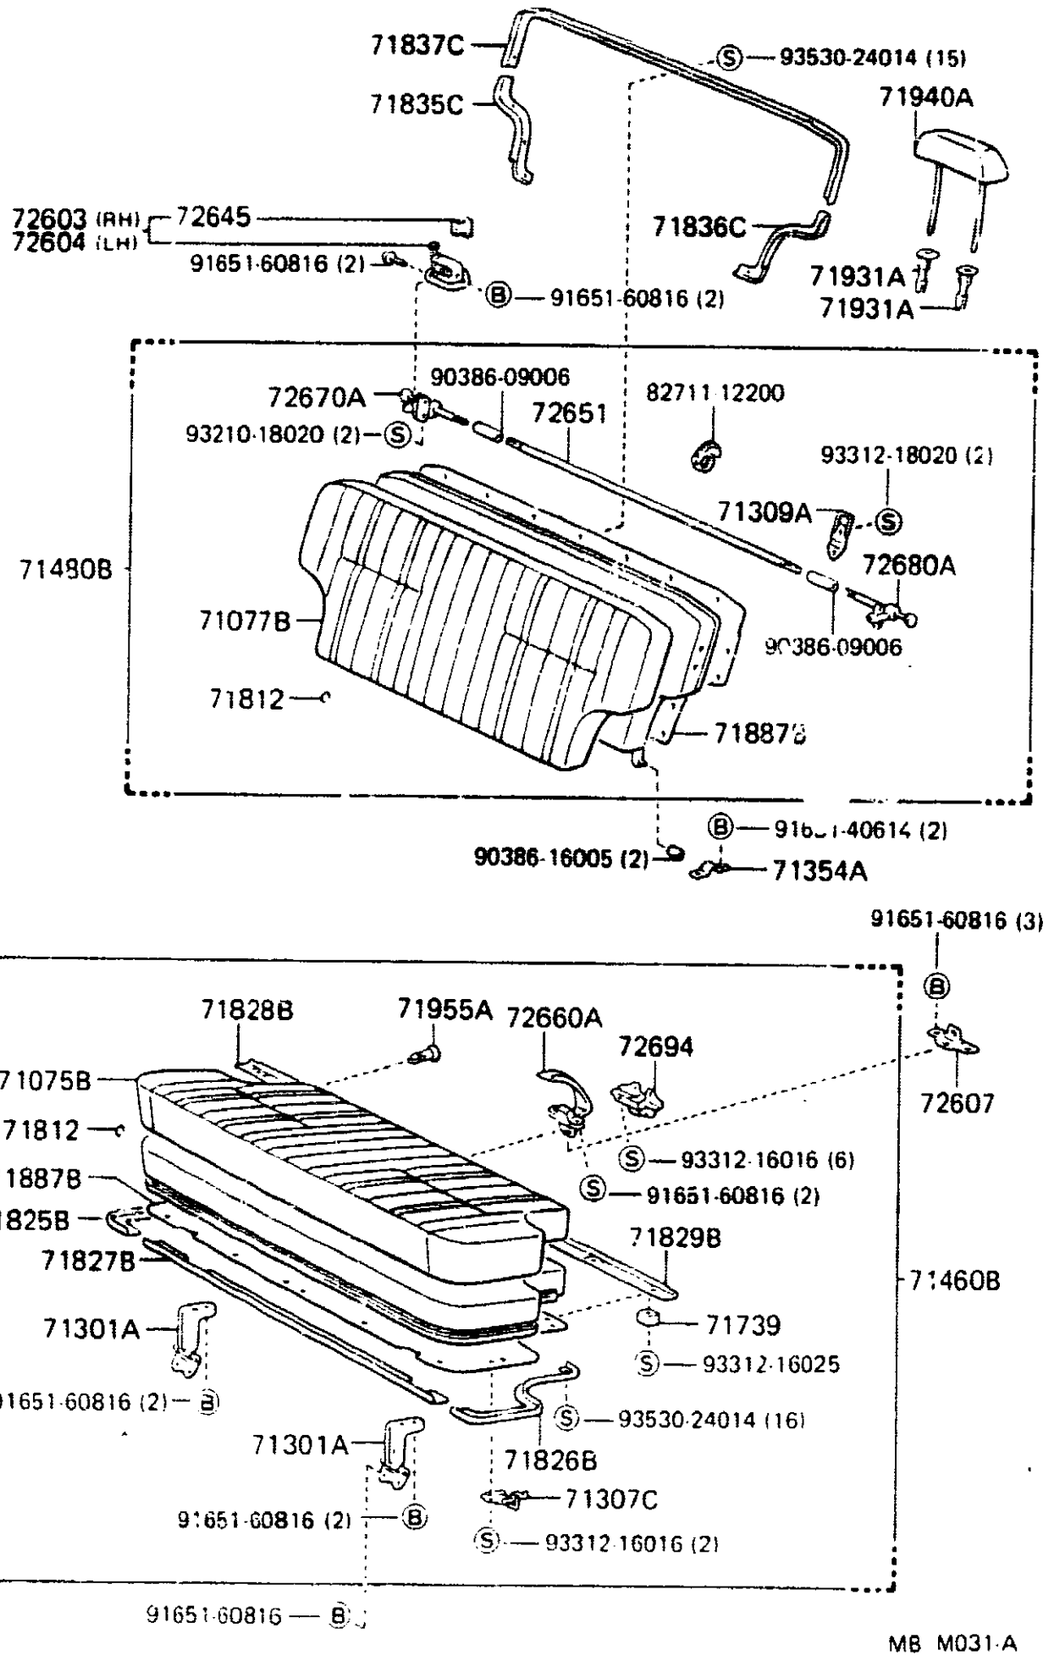


M8 M031-A

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		71071S	COVER, FRONT SEAT CUSHION, RH (FOR SEPARATE TYPE)					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		71071-90A35-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		71071-90A35-06	1		
		71072S	COVER, FRONT SEAT CUSHION, LH (FOR SEPARATE TYPE)					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		71072-90A18-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		71072-90A18-06	1		
		71073S	COVER, FRONT SEAT BACK, RH (FOR SEPARATE TYPE)					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		71073-90A44-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		71073-90A44-06	1		
		71074S	COVER, FRONT SEAT BACK, LH (FOR SEPARATE TYPE)					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		71073-90A44-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		71073-90A44-06	1		
		71075B	COVER, REAR SEAT CUSHION (FOR BENCH TYPE)					
	8708-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		71075-90A18-03	1		
	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71075-90A18-06	1		
		71077B	COVER, REAR SEAT BACK (FOR BENCH TYPE)					
P	8708-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		71077-90A41-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71077-90A41-06	1		
		71301A	HINGE SUB-ASSY, REAR SEAT CUSHION					
	8708-9001	FJ62..WGG			71301-90A00-	2		
		71307C	BRACKET SUB-ASSY, REAR SEAT CUSHION HOLDER					
	8708-9001	FJ62..WGG			71307-90A00-	2		

(8708-)

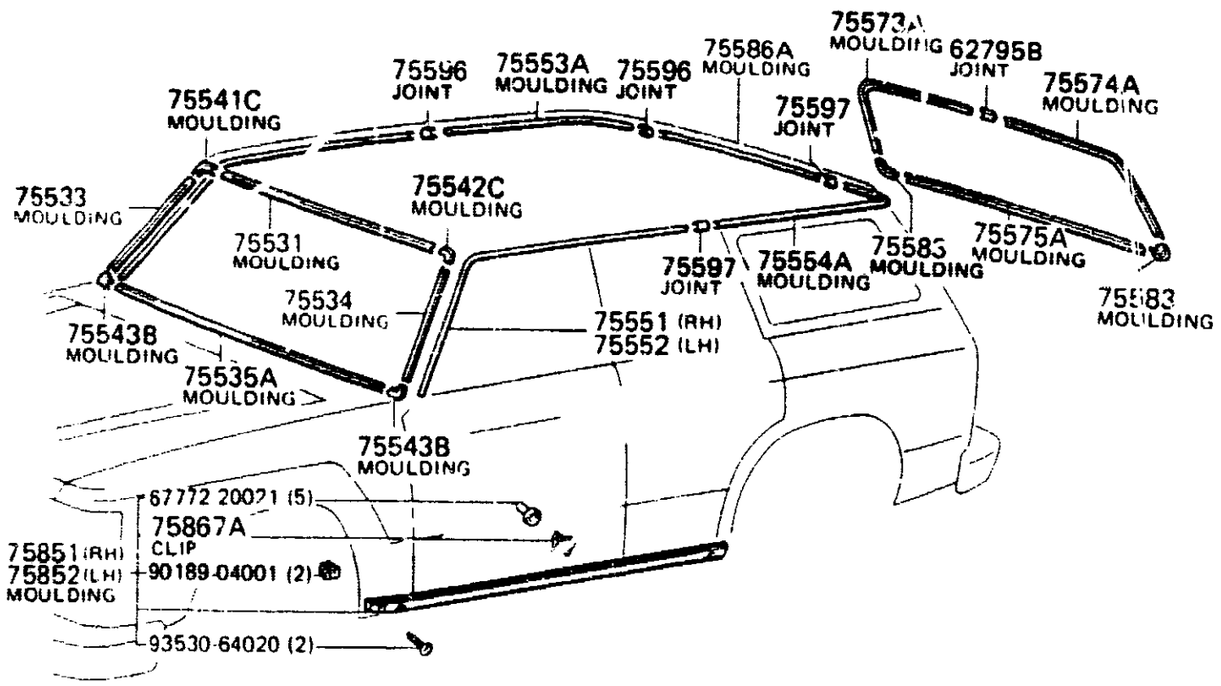

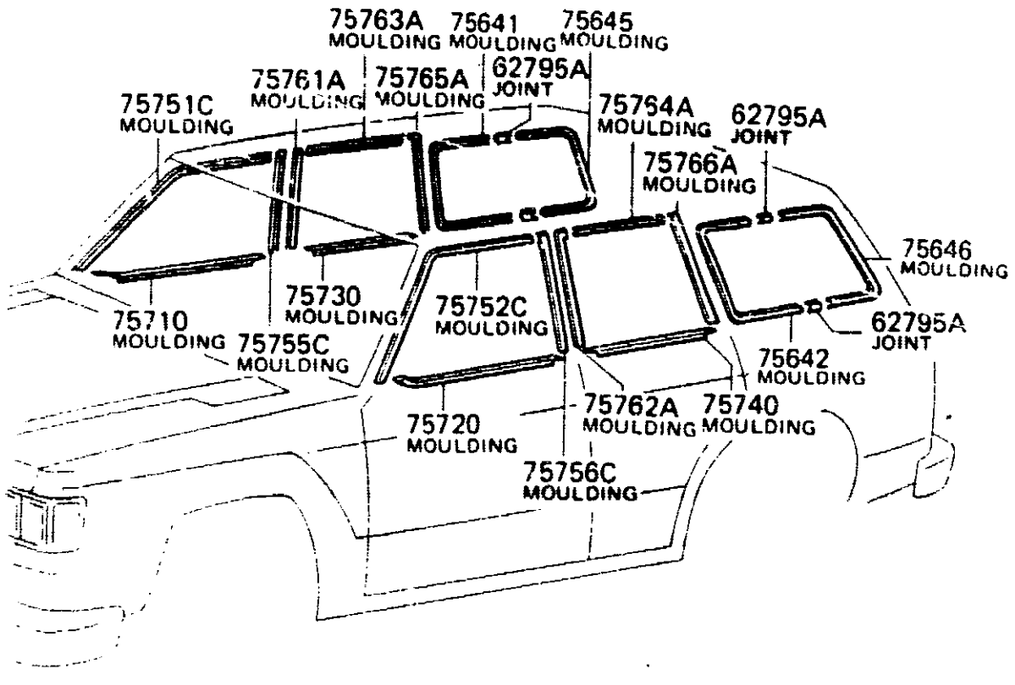


MB 3570

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F
	62795A	COVER, QUARTER WINDOW MOULDING JOINT, RH				
8708-9001	FJ62			62795-90A00-	4	
	62795B	COVER, QUARTER WINDOW MOULDING JOINT, LH				
8708-9001	FJ62			62795-90A00-	1	
	75531	MOULDING, WINDSHIELD, OUTER UPPER				
8708-9001	FJ62			75531-90A00-	1	
	75533	MOULDING, WINDSHIELD, OUTSIDE RH				
8708-9001	FJ62			75533-90A00-	1	
	75534	MOULDING, WINDSHIELD, OUTSIDE LH				
8708-9001	FJ62			75534-90A00-	1	
	75535A	MOULDING, WINDSHIELD, OUTSIDE LOWER				
8708-9001	FJ62			75535-90A00-	1	
	75541C	COVER, WINDSHIELD MOULDING JOINT, UPPER RH				
8708-9001	FJ62			75541-90A00-	1	
	75542C	COVER, WINDSHIELD MOULDING JOINT, UPPER LH				
8708-9001	FJ62			75541-90A00-	1	
	75543B	COVER, WINDSHIELD MOULDING JOINT, LOWER				
8708-9001	FJ62			75543-90A00-	2	
	75551	MOULDING, ROOF DRIP SIDE FINISH, FRONT RH				
8708-9001	FJ62			75505-90A00-	1	

FIG. 81-04 FRONT CLEARANCE LAMP

(8708-)

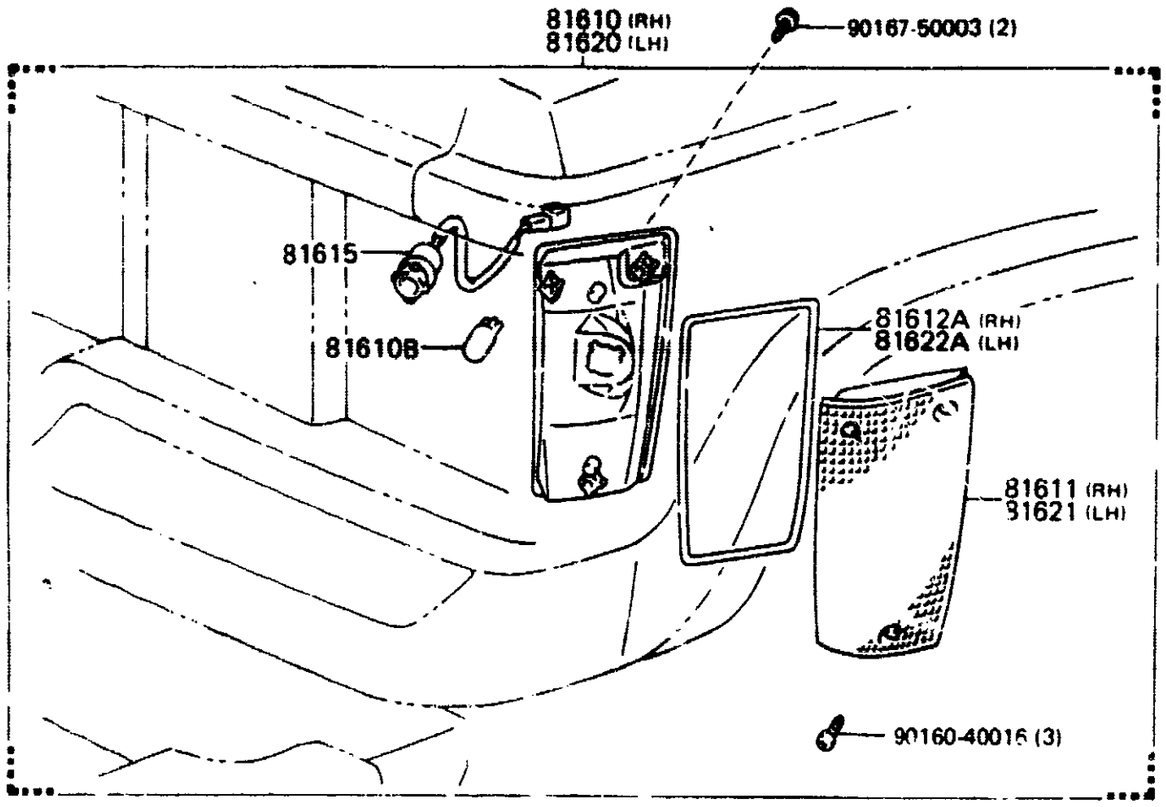


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		81610	LAMP ASSY, PARKING AND CLEARANCE, RH					
P	8708-9001	FJ62			81610-90A03-	1		002
		81610B	BULB (FOR PARKING AND CLEARANCE LAMP)					
P	8708-9001	FJ62	12V 4.9W		90981-12010-	2		002
		81611	LENS, PARKING AND CLEARANCE LAMP, RH					
P	8708-9001	FJ62			81611-90A00-	1		002
		81612A	GASKET, PARKING AND CLEARANCE LAMP LENS, RH					
P	8708-9001	FJ62			81612-90A00-	1		002
		81615	SOCKET AND WIRE, CLEARANCE LAMP					
P	8708-9001	FJ62			81615-90A03-	2		002
		81620	LAMP ASSY, PARKING AND CLEARANCE, LH					
P	8708-9001	FJ62			81620-90A03-	1		002
		81621	LENS, PARKING AND CLEARANCE LAMP, LH					
P	8708-9001	FJ62			81621-90A00-	1		002
		81622A	GASKET, PARKING AND CLEARANCE LAMP LENS, LH					
F	8708-9001	FJ62			81612-90A00-	1		002

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	83100B BULB, COMBINATION METER, NO.1						
8708-9001	FJ62	12V 1.2W OR 14V 1.4W		90981-11018-	1		
8708-9001	FJ62	12V 3.4W		99132-12034-	2		
8708-9001	FJ62	12V 3.4W		〃	3		
	83101 SOCKET SUB-ASSY, COMBINATION METER BULB						
8708-9001	FJ62	NO.1		83101-14040-	1		
8708-9001	FJ62	NO.2		83101-20040-	3		
8708-9001	FJ62	NO.3		83101-36010-	2		
	83102 PLATE SUB-ASSY, COMBINATION METER CIRCUIT, NO.1						
8708-9001	FJ62			83247-90A05-	1		
	83110 SPEEDOMETER ASSY						
8708-9001	FJ62..USA			83110-90A46-	1		
8708-9001	FJ62..CND			83110-90A47-	1		
	83132 CASE, COMBINATION METER						
8708-9001	FJ62			83132-90A04-	1		
	83134 COVER, COMBINATION METER, NO.1						
8708-9001	FJ62			83134-90A06-	1		
	83138 GLASS, SPEEDOMETER						
8708-9001	FJ62			83138-90A00-	1		
	83145 LENS, METER, NO.1						
8708-9001	FJ62..USA			83145-90A01-	1		
8708-9001	FJ62..CND			83145-90A02-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	83246 GAUGE, OIL PRESSURE RECEIVER						
8708-9001	FJ62			83246-90A05-	1		
	83270 TACHOMETER ASSY, ENGINE						
8708-9001	FJ62..CND			83270-90A10-	1		
8708-9001	FJ62..USA			83270-90A15-	1		
	83310 GAGE ASSY, FUEL RECEIVER						
8708-9001	FJ62			83243-90A03-	1		
	83410 GAGE ASSY, WATER TEMPERATURE RECEIVER						
8708-9001	FJ62			83244-90A02-	1		
	83630 VOLTMETER ASSY						
8708-9001	FJ62			83245-90A03-	1		
	83710 CABLE ASSY, SPEEDOMETER DRIVE, NO.1						
8708-8802	FJ62			# 83710-90A06- (83710-90A13-)	1 1		
8802-8807	FJ62			# 83710-90A13- (83710-90A20-)	1 1		
B 8807-9001	FJ62			83710-90A20-	1		
	83710B BUSH, SPEEDOMETER DRIVE CABLE						
8708-9001	FJ62			90389-02001-	1		
	83910 CLOCK ASSY						
8708-9001	FJ62			83910-90A11-	1		

(8708-)

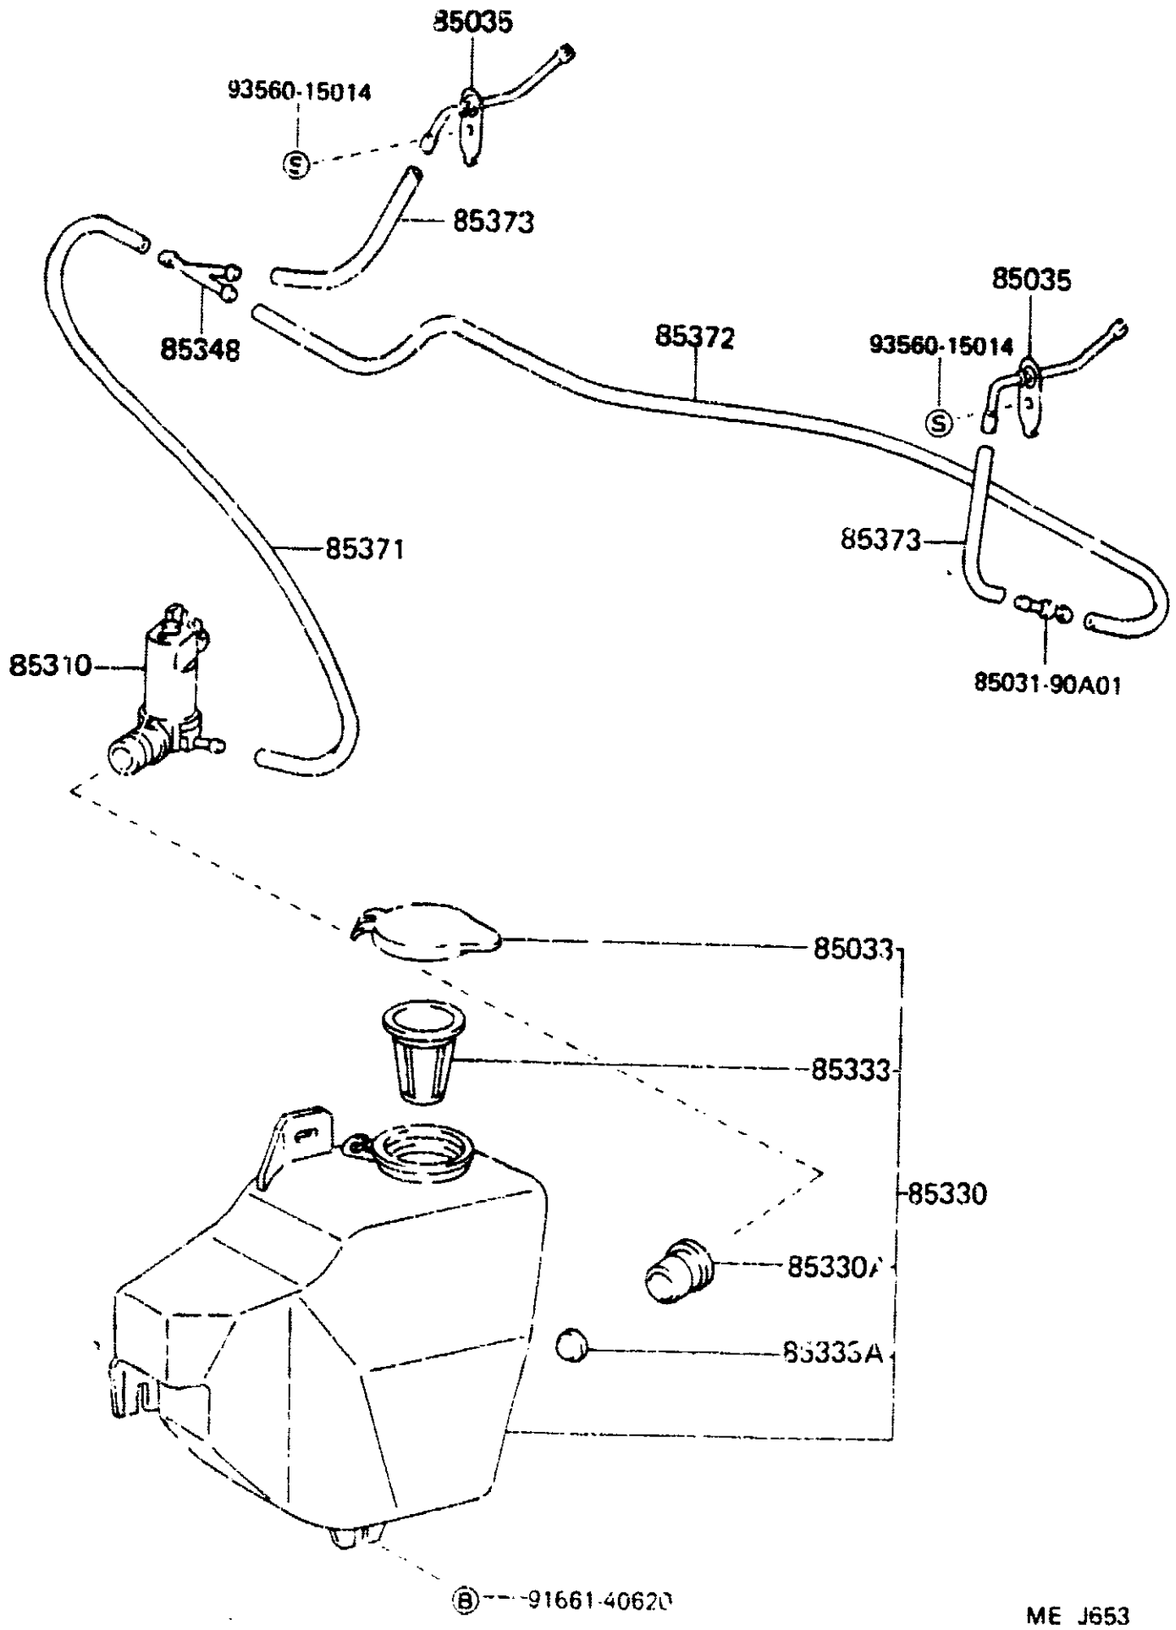

ME J653

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	85033	CAP ASSY, WINDSHIELD WASHER					
8708-9001	FJ62			85332-90A01-	1		
	85035	NOZZLE SUB-ASSY, WASHER					
8708-9001	FJ62	LH		85341-90A05-	1		
8708-9001	FJ62	RH		85341-90A08-	1		
	85310	MOTOR AND PUMP ASSY, WINDSHIELD WASHER					
8706-9001	FJ62			85310-14080-	1		
	85330	JAR ASSY, WINDSHIELD WASHER					
8708-9001	FJ62			85330-90A07-	1		
	85330A	BUSH, WINDSHIELD WASHER JAR					
8708-9001	FJ62			90099-32103-	1		
	85333	FILTER, WINDSHIELD WASHER JAR					
8708-9001	FJ62			85333-60010-	1		
	85333A	FILTER, WINDSHIELD WASHER JAR, NO.2					
8708-9001	FJ62			85333-20020-	1		
	85348	JOINT, WINDSHIELD WASHER HOSE					
8708-9001	FJ62			85348-89101-	1		
	85371	HOSE, WINDSHIELD WASHER (FROM MOTOR TO JOINT OR NOZZLE)					
8708-9001	FJ62	*H, L=620		90099-33332-	1		
	85372	HOSE, WINDSHIELD WASHER (FROM JOINT TO JOINT OR NOZZLE)					
8708-9001	FJ62	*H, L=530		90099-33332-	1		

*H.L=Cut hose to length as specified in remarks

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		87940 MIRROR ASSY, OUTER REAR VIEW, LH						
		CONTINUED						
P	8708-9001	FJ62			87940-90A09-	1		002
N	8911-9001	FJ62..WGG	DOOR REMOTE CONTROL MIRROR		87940-90A15-	1		
N	8911-9001	FJ62..WGV	DOOR REMOTE CONTROL MIRROR		〃	1		
		87941 GASKET, OUTER REAR VIEW MIRROR, LH						
P	8708-9001	FJ62			87911-90A05-	1		002

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

	PART NUMBER	LOCATION
P	45130-60101-06	2H7
	45142-12050-	2H7
	45155-12030-	2H7
	45176-20030-	2H7
	45180-60021-	2H7
	45210-22050-	2A7
	45215-22011-	2A7
	45220-60050-	2A7
	45222-60031-	2A7
	45244-60020-	2A7
	45254-60030-	2A7
	45255-60010-	2A7
	45260-60080-	2A7
	45280-60260-	2A7
	45282-22010-	2A7
P	45286-60130-03	2A7
P	-60130-16	2A7
P	45287-60090-03	2A7
P	-60090-16	2A7
	45289-22020-	2A7
	45292-60030-	2A7
B	45357-22010-	2L7
	45411-60090-	2L7
	45450-69055-	2L7
	45457-60010-	2L7
A	45458-60010-	2L7
	45460-69105-	2M7
	45466-36010-	2M7
	-55020-	2L7
	45473-35010-	2M7
	45475-35010-	2M7
	45611-60040-	2M7
	45612-60040-	2M7
	45636-60090-	2B7
	45637-60060-	2B7
	45700-69025-	2M7
	45721-60030-	2B7
	45804-22010-	2B7
	45813-22010-	2B7
	-22020-	2B7
	-22030-	2B7
	-22040-	2B7
	-22050-	2B7
	45814-22010-	2B7
	-22020-	2B7
	45815-22060-	2B7
	-22070-	2B7
	-22080-	2B7
	-22090-	2B7
	-22100-	2B7
	45817-60010-	2B7
	45819-22011-	2B7
	45821-22010-	2B7
	45870-60030-	2B7
	45890-22050-	2B7
	45897-14010-	2B7
	45898-22010-	2B7
	45899-22020-	2C7
	46210-60040-01	2A8
	-60040-16	2A8
P	-60041-01	2A8
P	-60041-06	2A8
	46217-10020-01	2A8
	-10020-56	2A8
P	46243-60030-01	2A8
P	-60030-16	2A8
	46341-31010-	2A8
	46410-60101-	2A8
	46443-12020-	2B8
	46451-60030-	2B8
	46458-30020-	2B8
	46469-60020-	2B8
P	47043-60050-	2J8
B	-60090-	2J8
P	47044-60010-	2J8
B	-60040-	2J8
	47061-60011-	2K8
	47062-60011-	2K8
	47101-60150-	2C8
	47121-30050-	2C8
	47201-60340-	2D8
	47202-60090-	2D8
B	47218-12040-	2D8
B		2E8
	47231-20010-	2E8
	47234-14010-	2E8
	47264-30040-	2E8
	47265-20050-	2E8
	-20060-	2E8
	47275-22010-	2E8
	47299-14010-	2E8
	47312-60610-	2B9
	47313-60180-	2B9
	47314-60180-	2B9
	47315-60340-	2C9
	47316-60310-	2C9
	47322-60490-	2C9
	47323-60041-	2C9
	47324-60021-	2C9
	47325-60100-	2C9
	47326-60110-	2C9
	47341-60031-	2C9
	47343-60021-	2C9
	47354-60030-	2C9
	47355-60030-	2C9
	47371-35020-	2C9
	47447-60010-	2K8
	47449-30020-	2K8
	47491-20011-	2K8
	47509-60010-	2K8
	47547-20030-	2H8
	-60020-	2K8
	47548-60010-	2B9
	47550-60120-	2K8
	47611-60010-	2K8
	47612-60010-	2K8
	47616-60010-	2K8
		2L8
	47624-60010-	2L8
	47625-60010-	2L8
	47626-60010-	2L8
	47628-35020-	2L8
	47633-35020-	2L8
	47643-60010-	2L8
	47644-60010-	2L8
	47655-60010-	2L8
	47703-60031-	2H8
	47704-60031-	2H8
	47730-60021-	2H8
	47731-30020-	2H8
	47732-30010-	2H8
	47748-60010-	2I8
	47750-60021-	2I8
	47786-60020-	2I8
	47787-60020-	2I8
	47910-60060-	2C9
	47920-60020-	2C9
	47931-60020-	2C9
	-60021-	2C9
	47933-60020-	2D9
	47935-35010-	2D9
	47936-35010-	2D9
	47937-60010-	2D9
	48046-60052-	2L9
	48047-60052-	2L9
	48048-60021-	2H9
	48049-60021-	2H9
	48102-60410-	2H9
	48103-60410-	2I9
	-60411-	2I9
	48110-60410-	2H9
		2I9
	-60411-	2H9
		2I9
	48111-60410-	2H9
	48112-60410-	2H9
	48114-60410-	2I9
	-60411-	2I9
	48147-60410-	2I9
	48202-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2L9
	48203-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48210-60650-	2L9
	-60651-	2L9
	-60660-	2M9
	-60661-	2M9
	48211-60650-	2L9
	-60660-	2L9
	48212-60650-	2L9
	-60660-	2L9
	48214-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2L9
	48215-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2M9
	48217-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48218-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48247-60651-	2M9
	48247-60660-	2M9
	48252-26070-	2I9
		2M9
A	48253-15010-	2M9
	48304-60031-	2I9
	48306-60030-	2M9
	48371-60050-	2M9
	48372-23030-	2M9
	48401-60020-	2I9
	48412-60021-	2I9
	48413-60032-	2I9
	48414-60042-	2M9
	48415-60042-	2M9
	48416-60030-	2M9
	48475-60020-	2I9
	48511-69095-	2I9
	48512-60031-	2I9
	48531-69105-	2M9
	48541-69025-	2A10
	48802-60020-	2A10
	48811-60070-	2J9
	48812-60040-	2A10
	48815-20060-	2J9
	-30050-	2A10
	48817-30010-	2J9
	48823-27010-	2A10
		2J9
	48825-60010-	2J9
	-60031-	2A10
	51002-60432-	3A1
	51172-60010-	3C1
	51201-60080-	3A1
	51202-60151-	3A1
	51203-60102-	3A1
	51204-60052-	3A1
	51205-60010-	3A1
	51209-60090-	3A1
	51217-60011-	3A1
	51218-60011-	3A1
	51321-60030-	3A1
	51322-60030-	3B1
	51421-60041-	3B1
	51422-60041-	3B1
	51441-60061-	3C1
	51495-60230-	3C1
	51701-60051-	3B1
	51702-60020-	3B1
	51703-60020-	3B1
	51704-60010-	3B1
	51705-60062-	3B1
	-60110-	3B1
	51707-60030-	3B1
	51709-60020-	3B1
	51900-60100-	3D1
	51961-36040-	3C1
	-60040-	3C1
	51966-60010-	3C1
	52023-60011-	3E1
	52102-90A00-	3G1
	52103-90A00-	3G1
	52106-60010-	3H1
	52107-60010-	3H1
	52111-90A03-	3G1
	52141-60050-	3G1
	52142-60040-	3G1
	52151-60041-	3H1
	52153-30060-	3H1
	52154-60010-	3H1
	52172-60020-	3H1
	52201-25020-	3E1
	-35021-	3E1
	52202-25020-	3E1
	-35021-	3E1
	52203-60030-	3E1
		3F1
	52207-60010-	3E1
	52208-60010-	3E1
	53111-90A06-	3I1
	-90A09-	3I1
	53131-90A09-	3I1
	-90A10-	3I1
	53132-90A09-	3I1
	-90A10-	3I1
	53202-90A04-	3A2
	53203-90A05-	3A2
	53207-90A00-	1G3
	53216-90A03-	3A2
	53217-90A03-	3A2
	-90A05-	3A2
	53292-90A00-	3A2
	53301-90A01-	3J1
	53341-90A01-	3J1
	53381-90A00-	3J1
	53382-30060-	3J1
	-90K01-	3J1
	53383-90A00-	3F2
	53410-90A01-	3L1
	53420-90A01-	3L1
	53440-90A00-	3L1
	53450-90A00-	3L1
	53451-90A00-	3L1
	53452-90351-	3L1
	53510-90A02-	3L1
	53630-90A01-	3L1
	53701-90G90-	3A2
	53702-90A70-	3A2
	53738-90A00-	3A2
	53739-90A00-	3A2
	53801-90G00-	3J1
	53802-90A72-	3J1
	53931-90A06-	3J1
	55016-90A75-	3A2
	-90A76-	3A2
	55073-90A00-	3F2
	55084-90A03-	3J11
	55085-90A01-	3J11
	55086-90A01-	3J11
	55087-90A01-	3J11
	55088-90A01-	3J11
	55089-90A03-	3J11
	55106-90A16-	2C8
	55210-90A12-	3A2
	55225-90A00-	3A2
P	55301-90A76-03	3C2
P	-90A76-05	3C2
	55315-90A00-	3C2
	55341-90A02-	3C2
	55342-90A01-	3C2
	55344-90A01-	3C2
	55351-90A01-	3C2
	55357-90A00-	3C2
	55366-90A02-	3C2
	55368-90A03-	3C2
	55374-90A01-	3C2
	55401-90A05-03	3C2
	-90A05-05	3C2
	-90A07-03	3C2
	-90A07-05	3C2
	55410-90G28-	3C2
P	55412-90A10-03	3C2
P	-90A10-05	3C2
	55416-90A01-	3C2
P	55446-90A02-06	3C2
P	-90A02-13	3C2
	55458-90A00-	3C2
	55477-87001-	3C2
	55499-60010-	2B1
P	55501-90A00-06	3D2
P	-90A00-23	3D2
	55505-90A00-	3D2
	55517-14010-	3D2
P	55521-14050-01	3D2
	55538-22010-	3D2
P	55539-20020-13	3E3
P	-20020-26	3E3
	-32010-01	3D2
P	55545-90A01-03	3D2
P	-90A01-06	3D2
	55547-90A00-	3D2
	55549-90A00-	3D2
	55556-90A01-	3D2
	55561-90A00-	3D2
P	55569-90A00-06	3D2
P	-90A00-23	3D2
	55581-90A06-	3D2
	55650-90A02-	3D2
	55660-90A00-	3D2
	55670-90A02-	3D2
	55700-90G1-	3F2
	55701-90A35-	3F2
	55729-90A01-	3F2
	55780-90A01-	3F2
	55843-90A03-	3J11
	55901-90A01-	3J11
	55905-12070-	3F11
	-22050-	3J11
	-90A00-	3J11
	55907-90A00-	3J11
	55908-90A00-	3J11
	55950-90A01-	3D2
	-90A03-	3D2
	55959-14010-	3E2
P	55961-90A00-03	3E2
P	-90A00-16	3E2
	55970-90A00-	3E2
	55980-90A00-	3E2
	56111-90A02-	3F2
	56121-90A01-	3G2
	-90A05-	3G2
	57104-90A03-	3A2
	57401-90A05-	3J2
	57402-90A05-	3J2

1. MODELS COVERED & CHARACTERISTICS

TOYOTA LAND CRUISER Station Wagon


Model	Engine	Production Period	Characteristic Expressions in Catalog Model Column		Model Name
FJ62LV-PNEA	3F-E	8708–8808	WGV	USA	Station Wagon
FJ62LG-PNEA	"	8708–9001	WGG	"	"
" -PNEK	"	8708–9001	"	CND	"

WGV Station Wagon
WGG Station Wagon G type

USA For United States of America
CND For Canada


ENGINE GROUP (1/2)

1C1 (11-01)

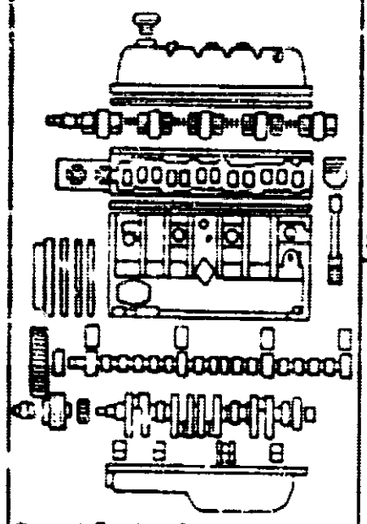


Partial Engine Assembly

1D1 (11-02)

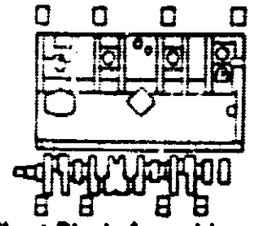


Short Block Assembly

1E1 (11-03)

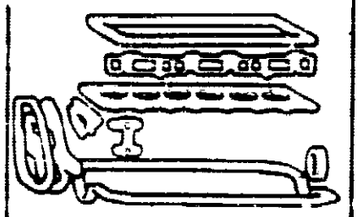


Overhaul Gasket Kit

1F1 (11-04) 1

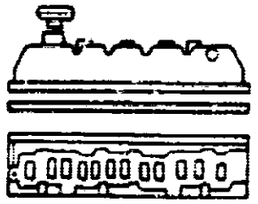


Cylinder Head

1H1 (11-05) 2

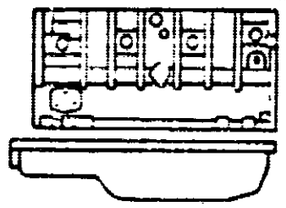

Cylinder Block

1J1 (11-06) 3

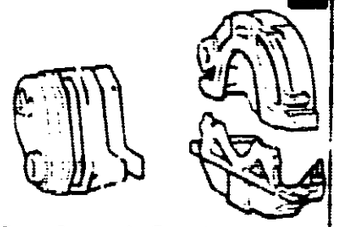


Gear Cover & End Plate

1K1 (11-07) 4




Mounting

1L1 (12-01) 5

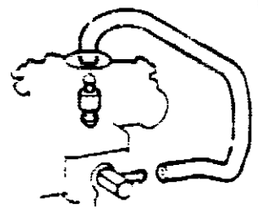


Ventilation Hose

1M1 (13-01) 6

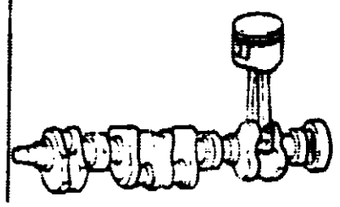


Crankshaft & Piston

1C2 (13-02) 7

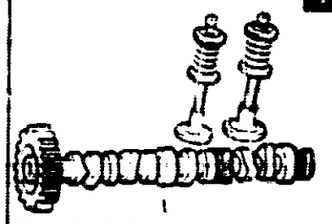


Camshaft & Valve

1E2 (15-01) 8

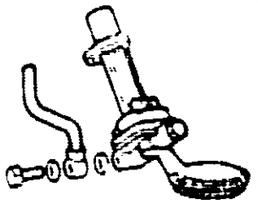


Oil Pump

1G2 (15-02) 9

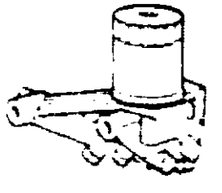


Oil Filter

1H2 (15-03) 10

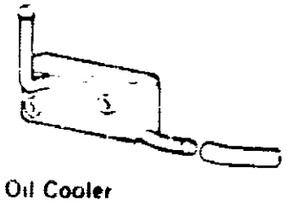


Oil Cooler

1I2 (16-01) 11

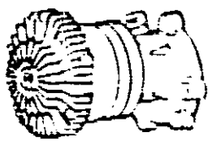

Water Pump

1J2 (16-03) 12

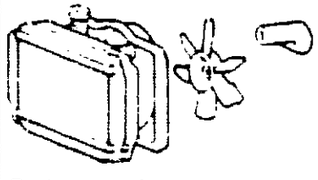

Radiator & Fan

1A3 (16-05) 13




V Belt

1B3 (17-01) 14




Manifold

1D3 (17-02) 15

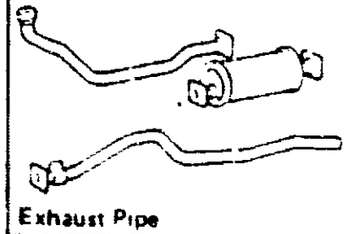


Exhaust Pipe

1F3 (17-03) 16

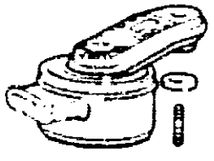

Air Cleaner

1K3 (17-08) 19

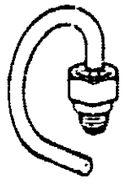


Vacuum Piping

1A4 (17-09) 20



Caution Plate

1H3 (17-05) 17

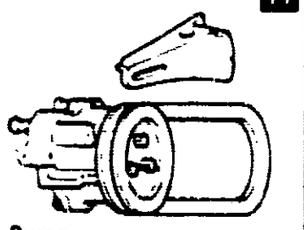



Air Pump

1I3 (17-06) 18



Manifold AI System

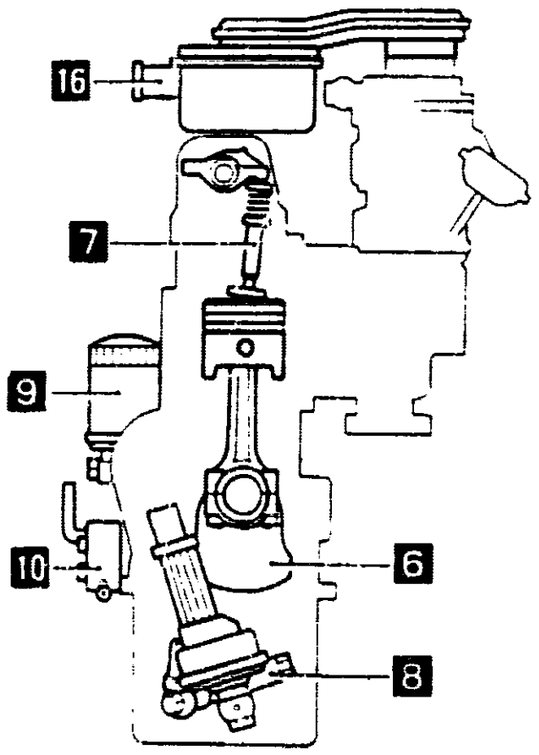

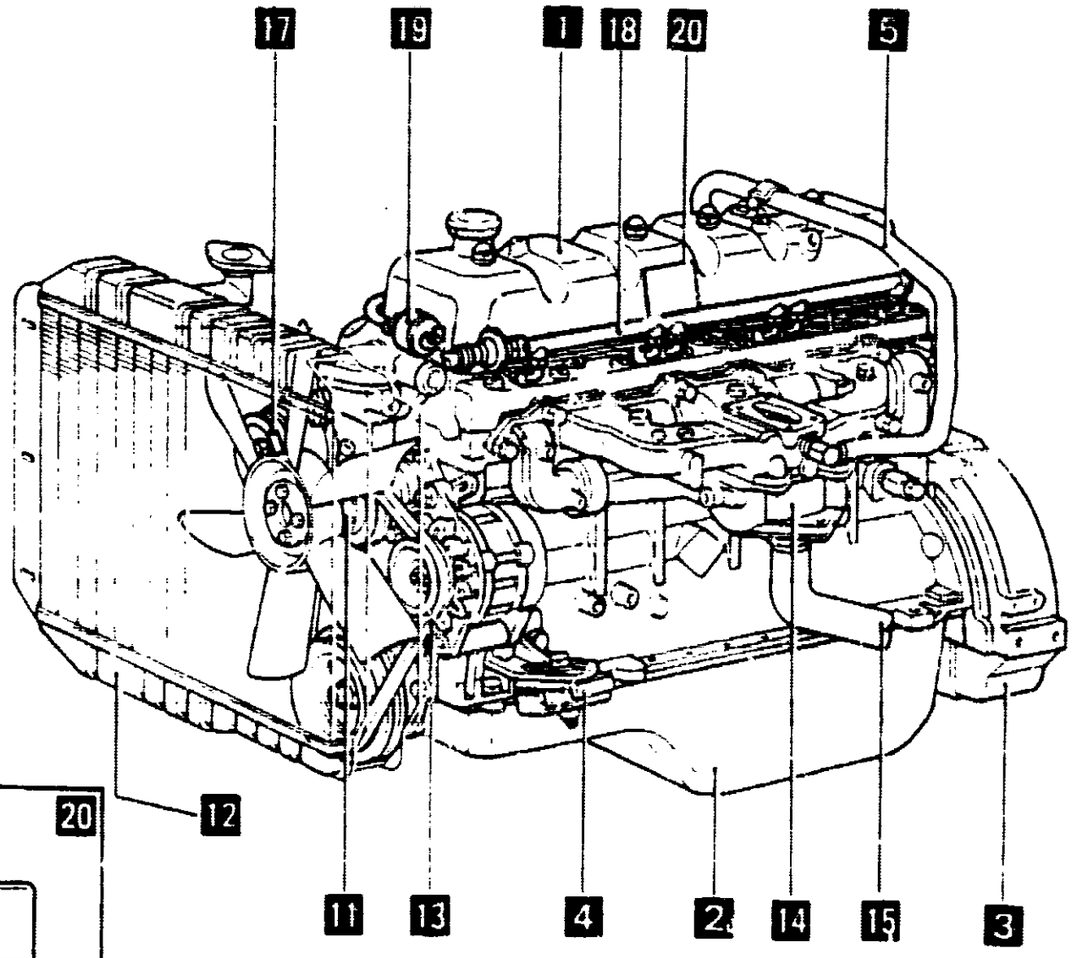


MA A113


FIG. 52-51 CAB MOUNTING & BODY MOUNTING

3E1

791430H-01241

(8708-)

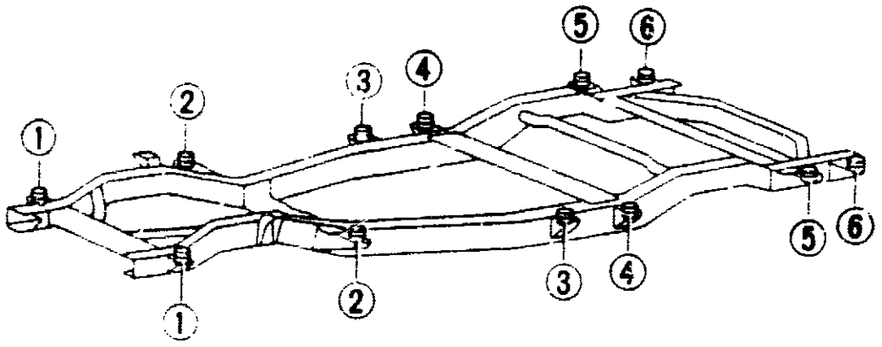

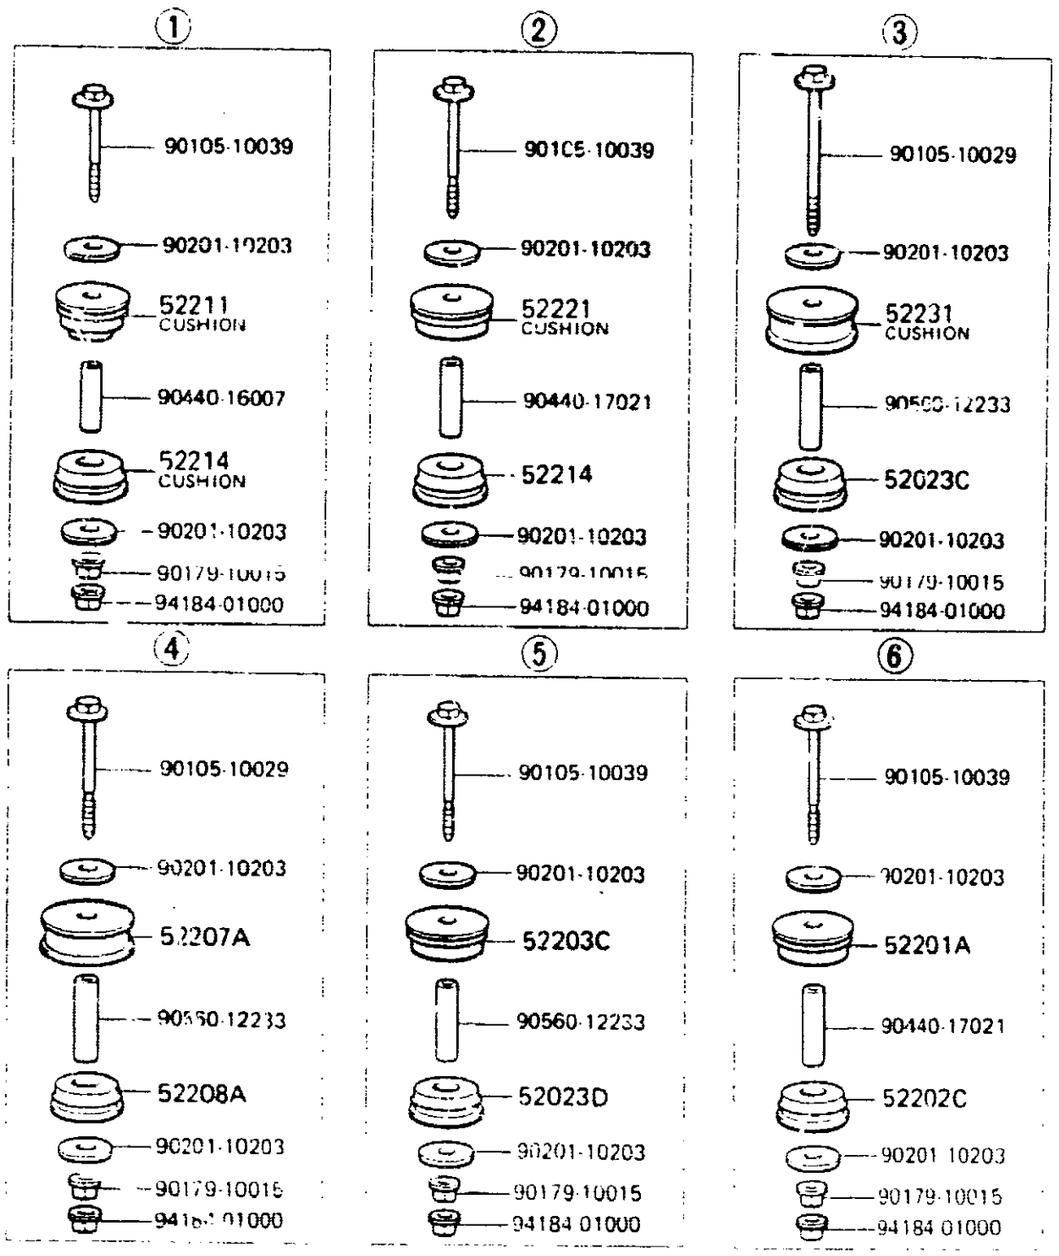

MB L860


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	52023C	CUSHION SUB-ASSY, NO.3 BODY MOUNTING LOWER					
8708-9001	FJ62			52023-60011-	2		
	52023D	CUSHION SUB-ASSY, NO.3 BODY MOUNTING, LOWER					
8708-9001	FJ62			52023-60011-	2		
	52201A	CUSHION SUB-ASSY, CAB FRONT MOUNTING					
8708-9001	FJ62			52201-25020-	2		
	52202C	CUSHION SUB-ASSY, CAB FR MOUNTING, LWR					
8708-9001	FJ62			52202-25020-	2		
	52203C	CUSHION SUB-ASSY, CAB MOUNTING, NO.2 UPPER					
8708-9001	FJ62			52203-60030-	2		
	52207A	CUSHION SUB-ASSY, CAB MOUNTING, NO.4 UPPER					
8708-9001	FJ62			52207-60010-	2		
	52208A	CUSHION SUB-ASSY, CAB MOUNTING, NO.4 LOWER					
8708-9001	FJ62			52208-60010-	2		
	52211	CUSHION, BODY MOUNT, NO.1 UPPER					
8708-9001	FJ62			52201-35021-	2		
	52214	CUSHION, BODY MOUNT, NO.1 LOWER					
8708-9001	FJ62		RR	52202-25020-	2		
8708-9001	FJ62		FR	52202-35021-	2		
	52221	CUSHION, BODY MOUNT, NO.2 UPPER					
8708-9001	FJ62			52201-25020-	2		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		55959	COVER, DEFROSTER NOZZLE OPENING, NO.1					
	8708-9001	FJ62..USA			55959-14010-	2		
		55961	NOZZLE, SIDE DEFROSTER, NO.1					
P	8708-9001	FJ62	GRAY(TRIM1)		55961-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		55961-90A00-16	1		
		55962	NOZZLE, SIDE DEFROSTER, NO.2					
P	8708-9001	FJ62	GRAY(TRIM1)		55961-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		55961-90A00-16	1		
		55970A	DUCT ASSY, SIDE DEFROSTER, RH					
	8708-9001	FJ62			55970-90A00-	1		
		55980A	DUCT ASSY, SIDE DEFROSTER, LH					
	8708-9001	FJ62			55980-90A00-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		55539A	COVER, SPARE SWITCH HOLE					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		55539-20020-13	3		
P	8708-9001	FJ62..USA	SHADOW GRAY(TRIM1)		〃	4		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		55539-20020-26	3		
P	8708-9001	FJ62..USA	SEPIA BROWN(TRIM4)		〃	4		
		58825A	POCKET, CONSOLE BOX					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		58825-90A01-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		58825-90A01-06	1		
		58841A	COVER, SHIFTING HOLE					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		58841-90A01-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		58841-90A01-06	1		
		58901B	PLUG, HOLE(FOR REAR CONSOLE BOX)					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		90950-01073-03	4		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		90950-01073-06	4		
		58905	DOOR SUB-ASSY, CONSOLE COMPARTMENT					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		58951-90A01-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		58951-90A01-06	1		
		58910C	BOX ASSY, CONSOLE, REAR					
P	8708-9001	FJ62..USA	SHADOW GRAY(TRIM1)		58911-90A02-03	1		
P	8708-9001	FJ62..USA	SEPIA BROWN(TRIM4)		58911-90A02-06	1		
P	8708-9001	FJ62	W(REAR HEATER),SHADOW GRAY(TRIM1)		58911-90A03-03	1		
P	8708-9001	FJ62	W(REAR HEATER),SEPIA BROWN(TRIM4)		58911-90A03-06	1		
		58910C	BOX ASSY, CONSOLE, REAR CONTINUED					
P	8708-9001	FJ62	W(DIFFERENTIAL LOCK),SHADOW GRAY(TRIM1)		58911-90A05-03	1		
P	8708-9001	FJ62	W(DIFFERENTIAL LOCK),SEPIA BROWN(TRIM4)		58911-90A05-06	1		
P	8708-9001	FJ62..USA	W(DEFFERENTIAL LOCK),SHADOW GRAY(TRIM1)		58911-90A06-03	1		
P	8708-9001	FJ62..USA	W(DEFFERENTIAL LOCK),SEPIA BROWN(TRIM4)		58911-90A06-06	1		
		58910D	CLIP(FOR CONSOLE BOX)					
	8708-9001	FJ62	GRAY(TRIM1)		90467-07041-03	2		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		90467-07041-06	2		
		58918A	BRACKET, BOX SUPPORT					
	8708-9001	FJ62			58918-90A00-	1		
		58944A	COVER, CONSOLE, REAR					
P	8708-9001	FJ62..USA	SHADOW GRAY(TRIM1)		58944-90A00-03	1		
P	8708-9001	FJ62..USA	SEPIA BROWN(TRIM4)		58944-90A00-06	1		
P	8708-9001	FJ62	W(REAR HEATER),SHADOW GRAY(TRIM1)		58944-90A01-03	1		
P	8708-9001	FJ62	W(REAR HEATER),SEPIA BROWN(TRIM4)		58944-90A01-06	1		
		58947	COVER, DIFFERENTIAL LOCK LEVER					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		58947-90A03-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		58947-90A03-06	1		

(8708-)

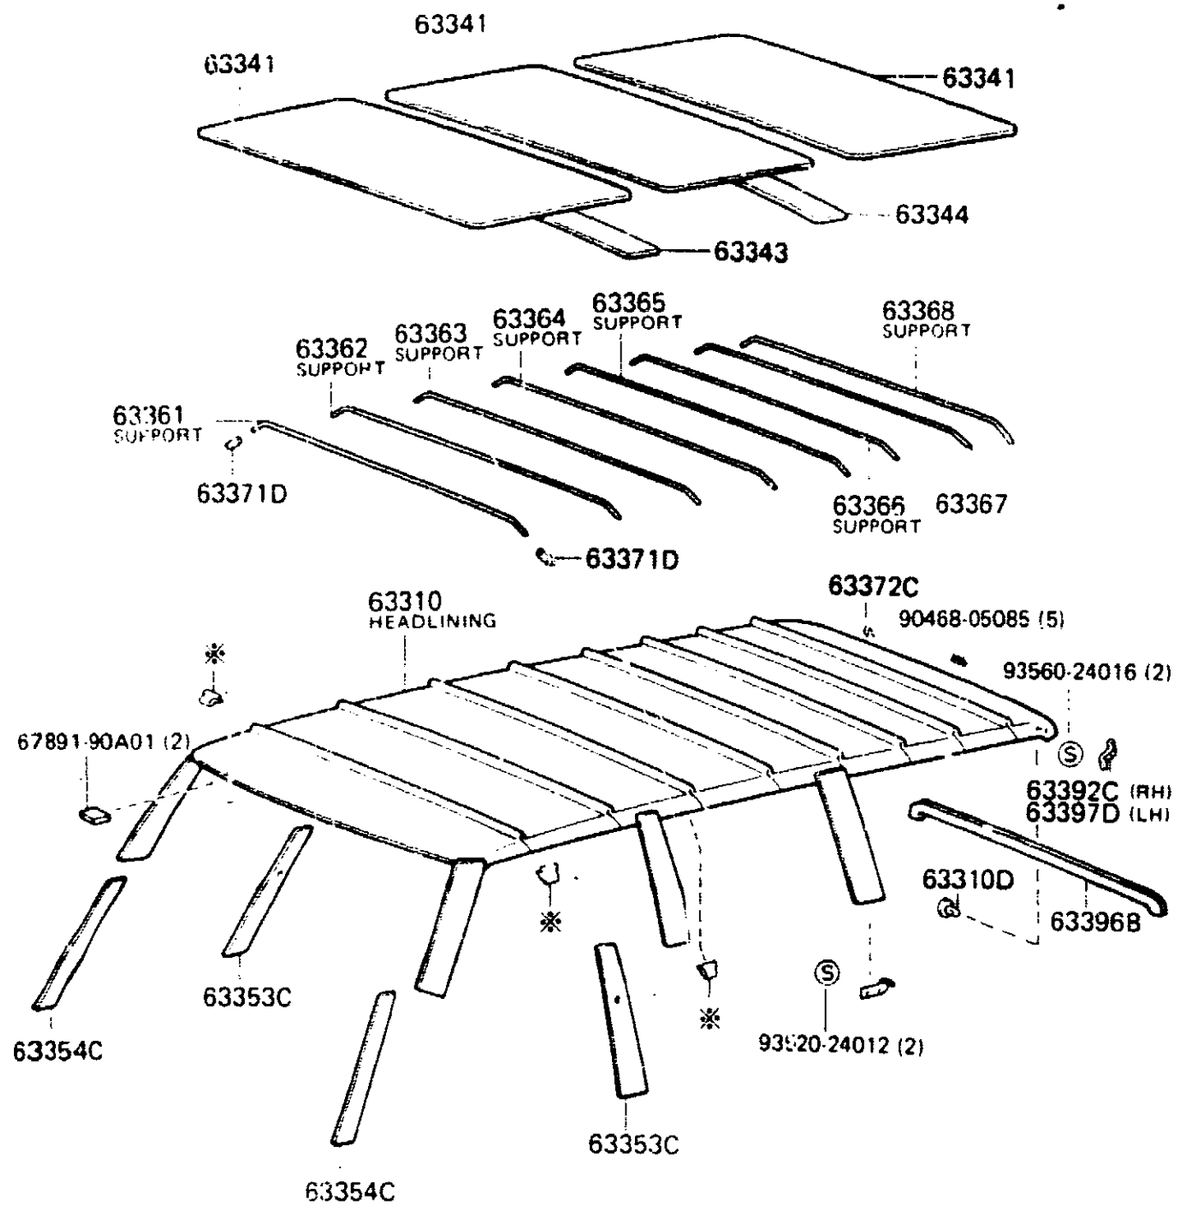

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	63310	**HEADLINING ASSY, ROOF**					
P 8708-9001	FJ62	IVORY(TRIM1,4)		63310-90A11-08	1		
	63310D	**CLIP, ROOF HEADLINING**					
8708-9001	FJ62	IVORY(TRIM1,4)		90467-06161-18	2		
	63341	**PAD, ROOF SILENCER, NO.1**					
8708-9001	FJ62			63341-90A01-	3		
	63343	**PAD, ROOF SILENCER, NO.3**					
8708-9001	FJ62			63343-90A01-	2		
	63344	**PAD, ROOF SILENCER, NO.4**					
8708-9001	FJ62			63344-90A01-	1		
	63353C	**PAD, ROOF HEADLINING, CTR**					
8708-9001	FJ62			63353-90A00-	2		
	63354C	**PAD, ROOF HEADLINING FRONT SIDE**					
8708-9001	FJ62			63354-90A00-	2		
	63361	**SUPPORT, ROOF HEADLINING, NO.1**					
8708-9001	FJ62	MARK=BLUE		63361-90A00-	1		
8708-9001	FJ62	MARK=RED		63361-90A01-	1		
8708-9001	FJ62	MARK=YELLOW		63361-90A02-	1		
	63362	**SUPPORT, ROOF HEADLINING, NO.2**					
8708-9001	FJ62	MARK=BLUE		63361-90A00-	1		
8708-9001	FJ62	MARK=RED		63361-90A01-	1		
8708-9001	FJ62	MARK=YELLOW		63361-90A02-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	68124	GLASS, REAR DOOR WINDOW, LH					
8708-9001	FJ62	*TT, T=4.0		68124-90A01-	1		
	68142	RUN, REAR DOOR GLASS					
8708-9001	FJ62			68142-90A01-	2		
	68188	WEATHERSTRIP, REAR DOOR QUARTER WINDOW, RH					
8708-9001	FJ62			68188-90A00-	1		
	68189	WEATHERSTRIP, REAR DOOR QUARTER WINDOW, LH					
8708-9001	FJ62			68189-90A00-	1		
	68190	WEATHERSTRIP ASSY, REAR DOOR GLASS, INNER					
8708-9001	FJ62			68190-90A01-	2		
	68617A	PIN, REAR DOOR CHECK					
8708-9001	FJ62			68617-90A01-	2		
	68630	CHECK ASSY, REAR DOOR					
8708-9001	FJ62			68630-90A00-	2		
	69751F	HOLDER, REAR DOOR LOCK CONTROL KNOB					
8708-9001	FJ62			69751-20040-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

*TT = Tinted Tempered Glass

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		71309A	BRACKET SUB-ASSY, REAR SEAT BACK HOLDER					
	8708-9001	FJ62..WGG			71309-90A00-	2		
		71354A	PLATE, REAR SEAT BACK SET					
	8708-9001	FJ62..WGG			71354-90A00-	2		
		71410S	CUSHION ASSY, FRONT SEAT, RH (FOR SEPARATE TYPE)					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		71410-90A33-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		71410-90A33-06	1		
		71420S	CUSHION ASSY, FRONT SEAT, LH (FOR SEPARATE TYPE)					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		71420-90A31-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		71420-90A31-06	1		
		71430S	BACK ASSY, FRONT SEAT, RH (FOR SEPARATE TYPE)					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		71430-90A39-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		71430-90A39-06	1		
		71440S	BACK ASSY, FRONT SEAT, LH (FOR SEPARATE TYPE)					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		71440-90A37-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		71440-90A37-06	1		
		71460B	CUSHION ASSY, REAR SEAT (FOR BENCH TYPE)					
P	8708-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		71460-90G12-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71460-90G12-06	1		
		71480B	BACK ASSY, REAR SEAT (FOR BENCH TYPE)					
P	8708-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		71480-90G28-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71480-90G28-06	1		


	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		71739	CUSHION, SEAT SUPPORT					
	8708-9001	FJ62..WGG			71739-90A00-	3		
		71812	CLIP (FOR FRONT SEAT CUSHION COVER)					
	8708-9001	FJ62..WGG			90468-18071-	29		
	8708-9001	FJ62..WGG			〃	41		
		71812A	RING, HOG, SMALL (FOR FRONT SEAT)					
	8708-9001	FJ62			90468-18071-	18		
	8708-9001	FJ62			〃	32		
		71825B	MOULDING, REAR SEAT CUSHION, RH					
P	8708-9001	FJ62..WGG	GRAY(TRIM1)		71825-90A00-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71825-90A00-16	1		
		71826B	MOULDING, REAR SEAT CUSHION, LH					
P	8708-9001	FJ62..WGG	GRAY(TRIM1)		71826-90A00-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71826-90A00-16	1		
		71827B	MOULDING, REAR SEAT CUSHION, FRONT					
P	8708-9001	FJ62..WGG	GRAY(TRIM1)		71827-90A00-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71827-90A00-16	1		
		71828B	MOULDING, REAR SEAT CUSHION, REAR RH					
P	8708-9001	FJ62..WGG	GRAY(TRIM1)		71828-90A00-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71828-90A00-16	1		
		71829B	MOULDING, REAR SEAT CUSHION, REAR LH					
P	8708-9001	FJ62..WGG	GRAY(TRIM1)		71829-90A00-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71829-90A00-16	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	75552	MOULDING, ROOF DRIP SIDE FINISH, FRONT LH					
8708-9001	FJ62			75506-90A00-	1		
	75553A	MOULDING, ROOF DRIP SIDE FINISH, REAR RH					
8708-9001	FJ62			75553-90A00-	1		
	75554A	MOULDING, ROOF DRIP SIDE FINISH, REAR LH					
8708-9001	FJ62			75554-90A00-	1		
	75573A	MOULDING, BACK WINDOW, OUTSIDE RH					
8708-9001	FJ62			75812-90A00-	1		
	75574A	MOULDING, BACK WINDOW, OUTSIDE LH					
8708-9001	FJ62			75813-90A00-	1		
	75575A	MOULDING, BACK WINDOW, OUTSIDE LOWER					
8708-9001	FJ62			75575-90A00-	1		
	75583	COVER, BACK WINDOW MOULDING JOINT, LOWER					
8708-9001	FJ62			75583-90A00-	2		
	75586A	MOULDING, ROOF DRIP, REAR					
8708-9001	FJ62			75586-90A00-	1		
	75596	COVER, ROOF DRIP SIDE FINISH MOULDING JOINT, RH					
8708-9001	FJ62			75596-90A00-	2		
	75597	COVER, ROOF DRIP SIDE FINISH MOULDING JOINT, LH					
8708-9001	FJ62			75596-90A00-	2		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	75641	MOULDING, QUARTER WINDOW, OUTSIDE FRONT RH					
8708-9001	FJ62			75641-90A00-	1		
	75642	MOULDING, QUARTER WINDOW, OUTSIDE FRONT LH					
8708-9001	FJ62			75642-90A00-	1		
	75645	MOULDING, QUARTER WINDOW, OUTSIDE REAR RH					
8708-9001	FJ62			75645-90A00-	1		
	75646	MOULDING, QUARTER WINDOW, OUTSIDE REAR LH					
8708-9001	FJ62			75646-90A00-	1		
	75710	MOULDING ASSY, FRONT DOOR BELT, RH					
8708-9001	FJ62			75710-90A02-	1		
	75720	MOULDING ASSY, FRONT DOOR BELT, LH					
8708-9001	FJ62			75720-90A02-	1		
	75730	MOULDING ASSY, REAR DOOR BELT, RH					
8708-9001	FJ62			75730-90A01-	1		
	75740	MOULDING ASSY, REAR DOOR BELT, LH					
8708-9001	FJ62			75740-90A01-	1		
	75751C	MOULDING, FRONT DOOR WINDOW FRAME, FRONT RH					
8708-9001	FJ62			75751-90A00-	1		
	75752C	MOULDING, FRONT DOOR WINDOW FRAME, FRONT LH					
8708-9001	FJ62			75752-90A00-	1		

FIG. 81-05 FRONT MARKER LAMP


(8708- ;

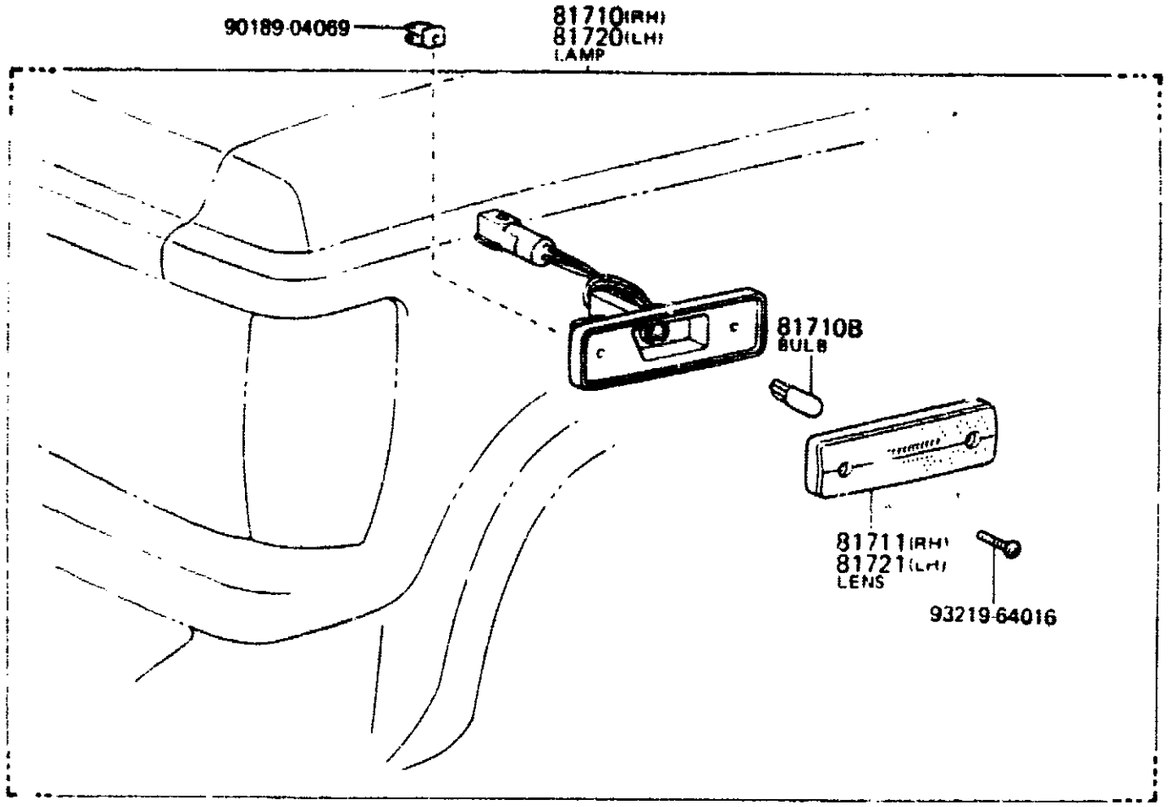


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		81710 LAMP ASSY, FRONT MARKER, RH						
P	8708-8902	FJ62			81730-14110-	1		002
A	8902-9001	FJ62..WGG			81730-90A05-	1		
		81710B BULB, FRONT MARKER LAMP						
P	8708-9001	FJ62	12V 3.8W		90981-11020-	2		002
		81711 LENS, FRONT MARKER LAMP, RH						
P	8708-9001	FJ62			81731-14110-	1		002
		81720 LAMP ASSY, FRONT MARKER, LH						
P	8708-8902	FJ62			81740-14110-	1		002
A	8902-9001	FJ62..WGG			81740-90A05-	1		
		81721 LENS, FRONT MARKER LAMP, LH						
P	8708-9001	FJ62			81741-14110-	1		002

FIG. 83-02 INDICATOR

(8708-)

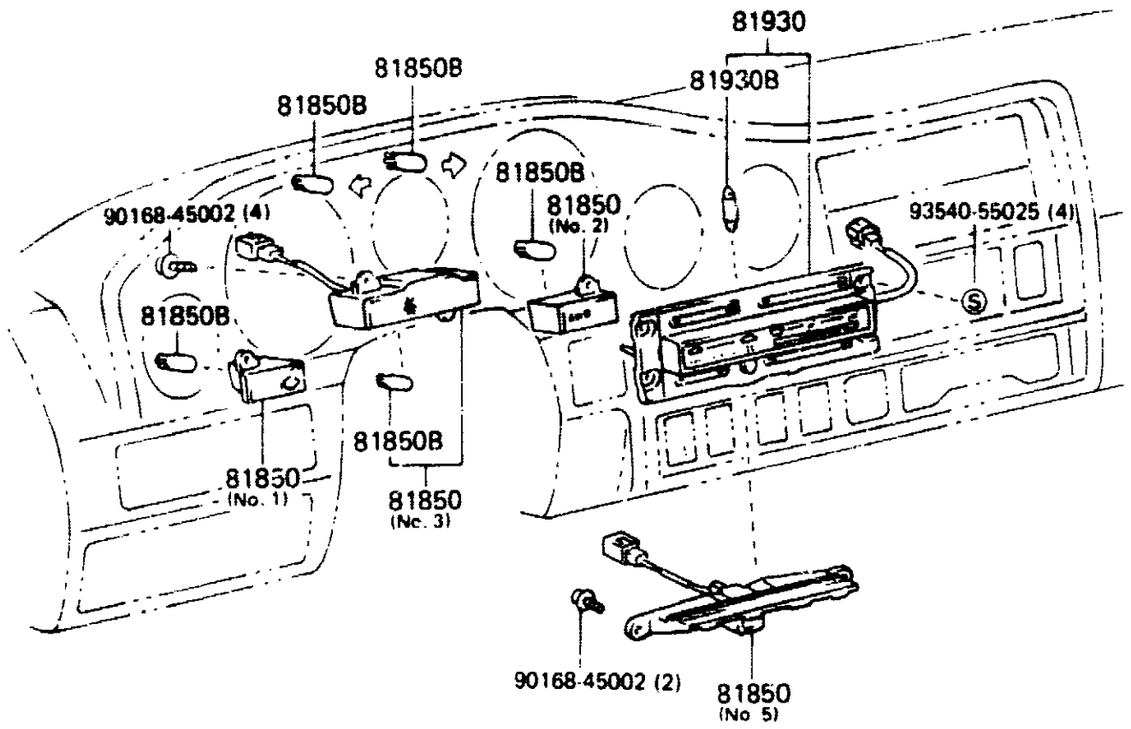

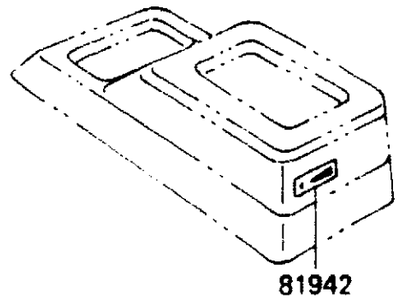


ME J618

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	81850 LAMP ASSY, INDICATOR						
8708-9001	FJ62	NO.3		81850-90A14-	1		
8708-9001	FJ62	W(DIFFERENTIAL LOCK),NO.3		81850-90A15-	1		
8708-9001	FJ62	NO.2		81850-90A25-	1		
8708-9001	FJ62	NO.5		81850-90A31-	1		
8708-9001	FJ62	NO.1		81850-90A35-	1		
	81850B BULB, INDICATOR LAMP						
8708-9001	FJ62	12V 3.4W		99132-12034-	1		
8708-9001	FJ62	12V 3.4W		〃	4		
	81930 LAMP ASSY, HEATER CONTROL INDICATOR, NO.1						
8708-9001	FJ62			81930-90A10-	1		
8708-9001	FJ62	W(AIR CONDITIONER)		81930-90A15-	1		
	81930B BULB, HEATER CONTROL INDICATOR LAMP						
8708-9001	FJ62	12V 2W		90981-11010-	1		
	81942 SHEET, HEATER CONTROL NAME						
8708-9001	FJ62			86995-90A02-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	85373	HOSE, WINDSHIELD WASHER (FROM JOINT TO NOZZLE)					
8708-9001	FJ62	*H, L=140		90099-33332-	2		


*H, L = Cut hose to length as specified in remarks

(8708-)
FRONT HEATER

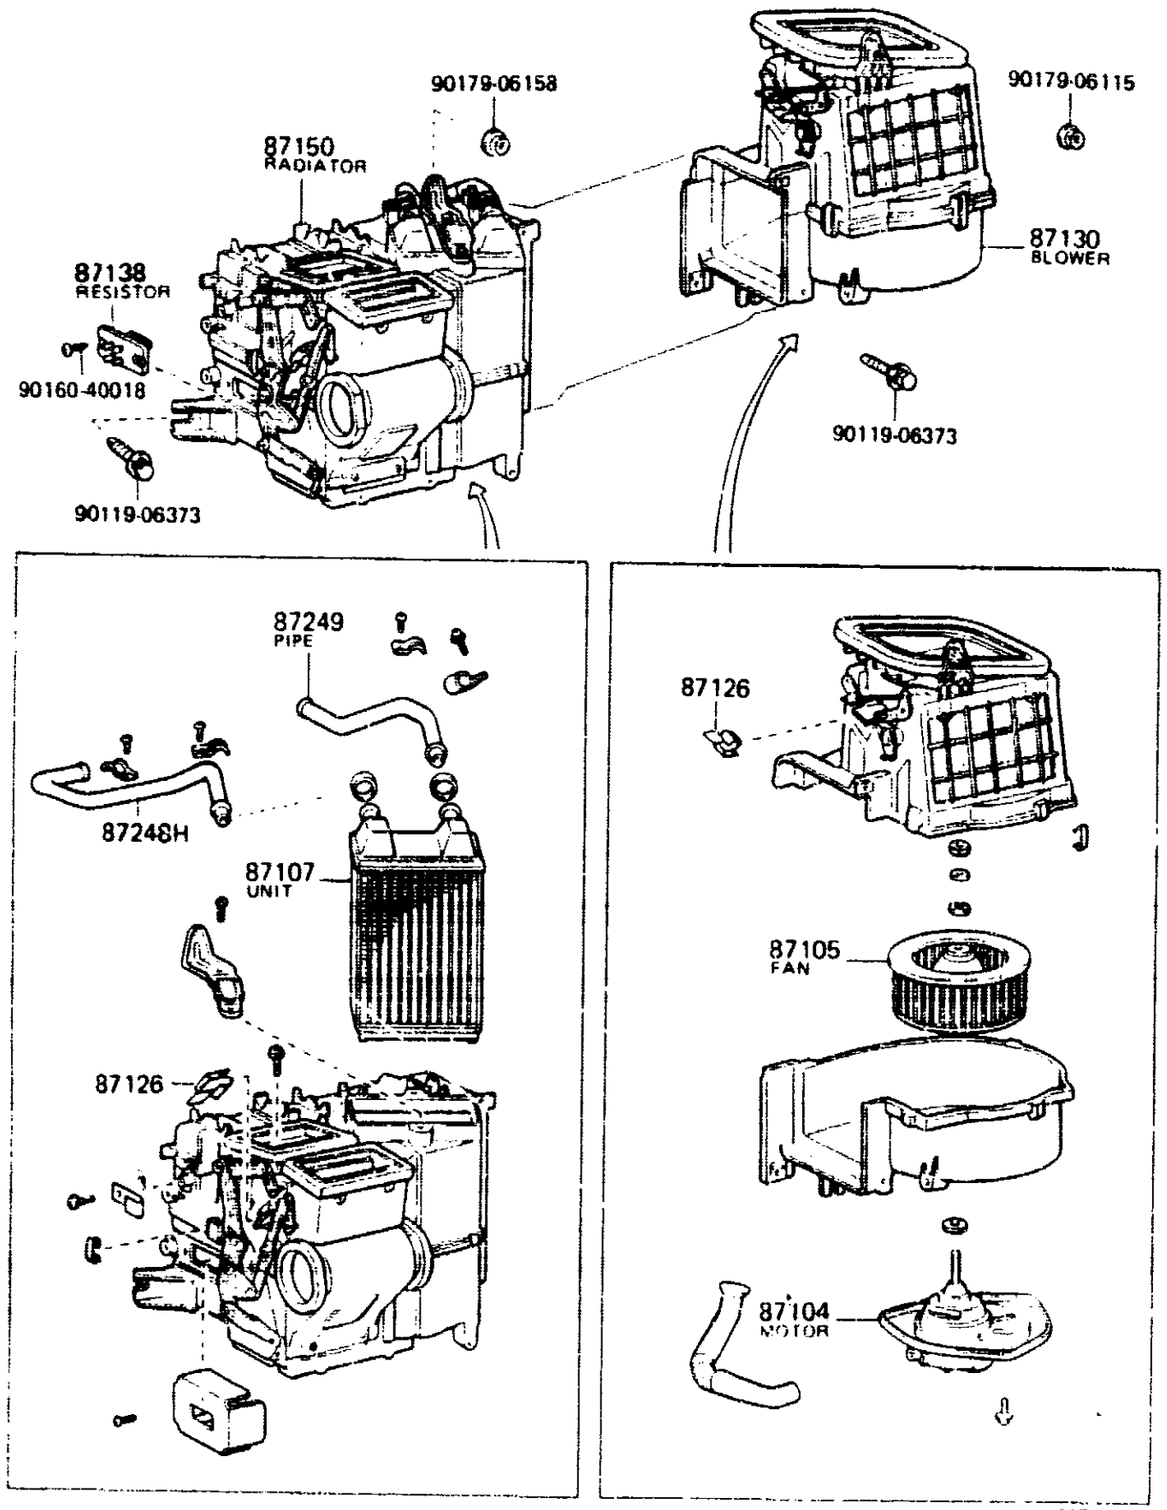

ME J682

(8708-)
REAR HEATER

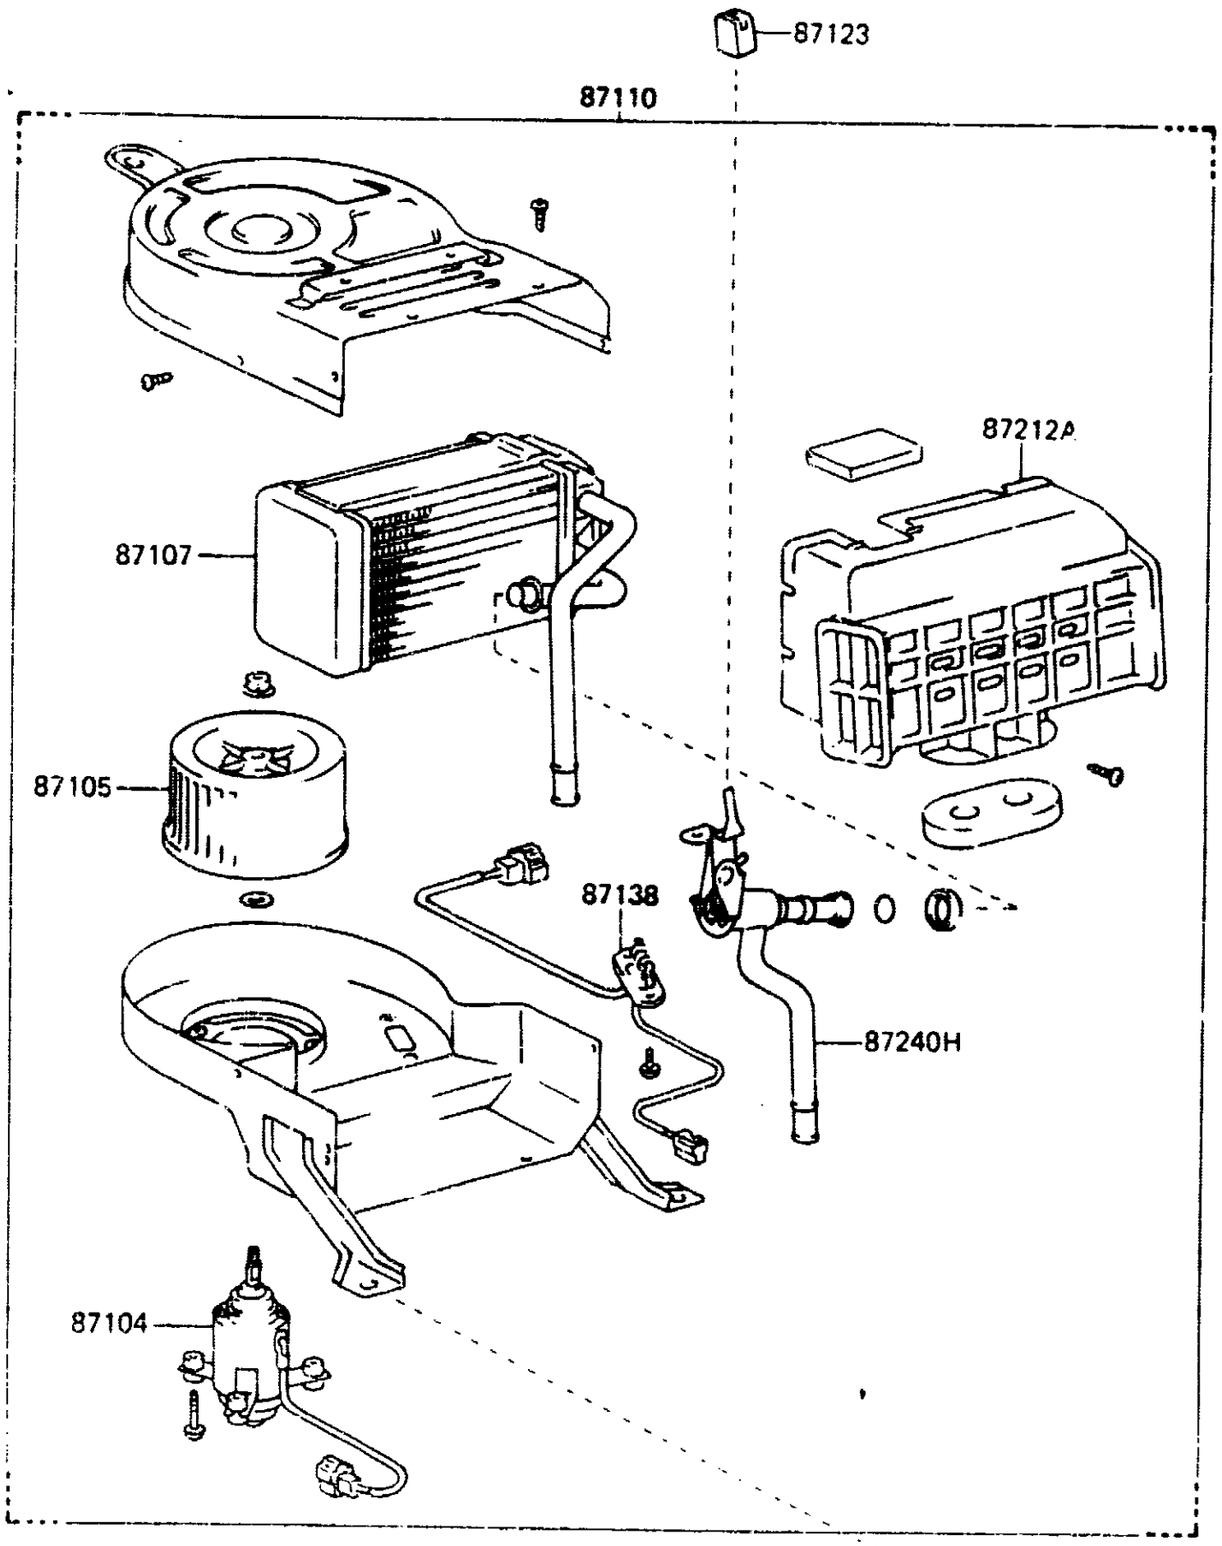







91651-40816 (3) B

ME J679


PART NUMBER	LOCATION
57405-90A07-	3H2
57407-90A43-	3H2
-90A46-	3H2
57417-90A03-	3J2
57425-90A02-	3J2
57426-90A04-	3J2
57427-90A00-	3J2
57468-90A01-	3J2
-90A02-	3J2
57483-90A00-	3J2
57511-90A03-	3J2
57605-90A02-	3M2
57606-90A09-	3M2
57635-90A03-	3H2
57805-90A00-	3M2
58041-90A01-	3A3
58043-90A00-	3A3
58107-90A00-	3J2
58111-90A46-	3J2
58151-90A05-	3A3
58153-90A01-	3A3
58155-90A01-	3A3
58188-90A03-	3J2
58192-90A00-	3J2
58203-90A00-	3J2
58204-90A00-	3J2
58211-90A21-	3J2
-90A24-	3J2
-90A26-	3J2
-90A28-	3J2
58231-90A00-	3A3
58247-90A00-	3J2
	3K2
58248-90A00-	3J2
58256-90B00-	3A3
58261-90A04-	3K2
58263-90A02-	3K2
58268-90A05-	3K2
58279-90A00-	3J7
58290-90A04-	3K2
-90A05-	3K2
58303-90A00-	3M2
58304-90A00-	3M2
58305-90A08-	3M2
58306-90A12-	3M2
58307-90A00-	3M2
58308-90A03-	3M2
58311-90A19-	3M2
-90A20-	3M2
58315-90A07-	3M2
58316-90A07-	3M2
58325-90A00-	3M2
58339-90A00-	3M2
58344-90A01-	3A3
58345-90A00-	3A3
58348-90A00-	3M2
58367-90A00-	3M2
58410-90A00-	3G4
58418-90A00-	3G4
58457-90A00-	3G4
P 58510-90A85-03	3B3
P -90A85-06	3B3
P 58540-90A83-03	3B3
P -90A83-06	3B3
P 58570-90A28-03	3B3
P -90A28-06	3B3
-90A39-03	3B3
-90A39-06	3B3
58573-90A00-	3B3
58705-90A01-	3G7
58754-90A00-	3K2
58790-90A01-	3G7
58793-90A01-	3G7
P 58825-90A01-03	3E3
P -90A01-06	3E3
P 58841-90A01-03	3E3
P -90A01-06	3E3
P 58911-90A02-03	3E3
P -90A02-06	3E3
P -90A03-03	3E3
P -90A03-06	3E3
P -90A05-03	3E3
P -90A05-06	3E3
P -90A06-03	3E3
P -90A06-06	3E3
58918-90A00-	3E3
58936-60010-	2B1
P 58944-90A09-03	3E3
P -90A00-06	3E3
P -90A01-03	3E3
P -90A01-06	3E3
P 58947-90A03-03	3E3
P -90A03-06	3E3
P 58951-90A01-03	3E3
P -90A01-06	3E3
58959-16010-	3F3
58964-30030-	3F3
-90K00-	3F3
58965-12010-	3F3
-20020-	3F3
58976-20010-	3F3
58985-90A00-	3F3
58996-90A04-	3F3
58997-90A02-	3F3
61027-90A04-	3G3
61028-90A04-	3G3
61031-90A02-	3G3
61032-90A00-	3G3
61034-90A00-	3J3
61101-90A08-	3G3
61102-90A07-	3G3
61154-90C00-	3G4
61161-90A03-	3G3
61162-90A03-	3G3
61183-90A01-	3G3
61184-90A00-	3G3
61197-90A00-	3H3
61211-90A01-	3H3
61212-90A01-	3H3
61231-90A03-	3H3
61232-90A02-	3H3
61263-90A01-	3H3
61264-90A01-	3H3
61267-90A00-	3H3
61268-90A00-	3H3
61330-90A04-	3H3
61340-90A05-	3H3
-90A07-	3H3
61341-90A00-	3H3
61342-90A00-	3H3
61345-90A00-	3H3
61346-90A00-	3H3
61401-90A06-	3H3
61402-90A06-	3H3
61503-90A00-	3H3
61504-90A00-	3H3
61511-90A01-	3I3
61512-90A01-	3I3
61607-90A04-	3I3
-90A05-	3I3
61608-90A00-	3I3
-90A01-	3I3
61611-90A03-	3I3
61612-90A03-	3I3
61631-90A03-	3I3
61632-90A03-	3I3
61645-90A00-	3I3
61646-90A00-	3I3
61705-90A30-	3I3
-90A40-	3I3
61706-90A66-	3I3
-90A67-	3I3
61709-90A02-	3I3
61711-90A01-	3I3
61712-90A01-	3I3
61733-90A02-	3I3
-90A03-	3I3
-90A05-	3I3
61743-90A02-	3I3
61745-90A01-	3J3
61746-90A01-	3J3
61791-90B01-	3J3
61793-90A00-	3J3
P 62101-90A00-03	3C4
P -90A00-16	3C4
P 62102-90A00-03	3C4
P -90A00-16	3C4
P 62163-90A00-03	3C4
P -90A00-16	3C4
P 62164-90A00-03	3C4
P -90A00-16	3C4
62311-90A00-03	3C4
-90A00-06	3C4
P -90A01-03	3C4
P -90A01-06	3C4
62312-90A00-03	3C4
-90A00-06	3C4
P -90A01-03	3C4
P -90A01-06	3C4
62313-90A00-03	3C4
-90A00-16	3C4
P 62333-90A00-03	3C4
P -90A00-16	3C4
P 62411-90A01-03	3C4
P -90A01-16	3C4
P 62412-90A01-03	3C4
P -90A01-16	3C4
P 62471-90A00-18	3C4
P 62472-90A00-18	3C4
62505-90A03-08	3D4
62506-90A03-08	3D4
62510-90A31-03	3D4
-90A31-06	3D4
P -90A34-03	3D4
P -90A34-06	3D4
P 62520-90A44-03	3D4
P -90A44-06	3D4
-90A52-03	3D4
-90A52-06	3D4
P 62539-90A01-03	3D4
P -90A01-06	3D4
P 62549-90A00-03	3D4
P -90A00-16	3D4
62613-90A07-03	3D4
-90A07-06	3D4
P -90A09-03	3D4
P -90A09-06	3D4
62614-90A00-03	3D4
-90A00-16	3D4
P -90A02-03	3D4
-90A02-06	3D4
62633-90A09-08	3D4
P -90A11-08	3D4
62634-90A09-08	3D4
P -90A11-08	3D4
P 62640-90A17-03	3D4
P -90A17-06	3D4
P 62650-90A06-03	3D4
P -90A06-06	3D4
62711-90A12-	3K3
62712-90A11-	3K3
62741-90A01-	3K3
62795-90A00-	3D7
62903-90A00-	3A4
62904-90A00-	3A4
62905-69015-	3A4
62906-69015-	3A4
62909-22010-	3A4
63105-90A00-	3L3
63111-90A00-	3L3
-90A01-	3L3
63132-90A00-	3L3
63141-90A00-	3L3
63145-90A00-	3L3
P 63310-90A11-08	3E4
63341-90A01-	3E4
63343-90A01-	3E4
63344-90A01-	3E4
63353-90A00-	3E4
63354-90A00-	3E4
63361-90A00-	3E4
	3F4
-90A01-	3E4
	3F4
-90A02-	3E4
	3F4
63362-90A00-	3F4
-90A01-	3F4
-90A02-	3F4
63363-90A00-	3F4
-90A01-	3F4
-90A02-	3F4
63371-30050-	3F4
63372-90A00-	3F4
P 63392-90A00-18	3F4
P 63396-90A00-18	3F4
P 63397-90A00-18	3F4
63435-90A00-	3L3
63436-90A00-	3L3
63437-90A00-	3L3
63438-90A00-	3M3
63439-90A00-	3M3
63441-90A00-	3M3
63442-90A00-	3M3
63443-90A00-	3M3
63444-90A00-	3M3
63445-90A00-	3M3
63447-90A00-	3M3
63448-90A00-	3M3
63449-90A00-	3M3
63457-90A00-	3M3
63458-90A00-	3M3
63459-90A00-	3M3
P 64739-90K01-03	3D4
P -90K01-06	3D4
64777-90A00-	3G7
P 64780-90A01-13	3J5
P -90A01-16	3J5
64798-90A00-	3J5
65061-90A13-	3J5
65557-90A01-	3M2
65706-90A00-	3L5
65707-90A00-	3L5
65777-90A00-	3L5
66110-90A00-	3L5
66301-90A00-	3M2
66318-90A00-	3M2
67001-90A40-	3I4
-90A44-	3I4
67002-90A47-	3I4
-90A50-	3I4
67003-90A15-	3C5
-90A17-	3C5
67004-90A15-	3C5
-90A17-	3C5
67005-90A20-	3J5
-90A27-	3J5
67111-90A15-	3I4
-90A18-	3I4
67112-90A15-	3I4
-90A18-	3I4
67113-90A05-	3C5
67114-90A05-	3C5
67118-90A02-	3I4
-90A03-	3I4
67207-90A00-	3L5
67209-90A00-	3L5
67285-90A00-	3L5
67286-90A00-	3L5
67401-90A00-	3I4
67402-90A00-	3I4
67403-90A00-	3I4
67404-90A00-	3I4
67407-90A00-	3C5
67408-90A00-	3C5
67481-90A00-	3I4
67482-90A00-	3I4
67610-90G04-03	3I4
-90G04-06	3I4
-90G07-03	3I4
-90G07-06	3I4
P -90G42-03	3I4
P -90G42-06	3I4
P -90G49-03	3I4
P -90G49-06	3I4
67620-90G07-03	3J4
-90G07-06	3J4
-90G14-03	3J4
-90G14-06	3J4
P -90G41-03	3J4
P -90G41-06	3J4
P -90G48-03	3J4
P -90G48-06	3J4
67630-90A25-03	3C5
-90A25-06	3C5
-90A28-03	3C5
-90A28-06	3C5
P -90A33-03	3D5
P -90A33-06	3D5
P -90A36-03	3D5
P -90A36-06	3D5
67640-90A25-03	3D5
-90A25-06	3D5
-90A28-03	3D5
-90A28-06	3D5
P -90A34-03	3D5
P -90A34-06	3D5
P -90A37-03	3D5
P -90A37-06	3D5
P 67651-90A01-03	3J4
P -90A01-06	3J4
67687-90A00-	3J5
67689-90A00-	3J5
67765-90A00-	3J5
67766-90A00-	3J5
67767-90A00-	3J5
67769-90A00-	3J5
67771-22010-	3J4
-30060-	3D5
P 67777-22040-23	3J4
P -22040-36	3J4
P 67778-22030-23	3J4
P -22030-46	3J4
P 67805-90A01-	3D5
67813-90A00-	3J3
67814-90A00-	3J3
P 67832-90A04-	3J4
P -90A07-	3J4
67847-90A01-	3K5
67861-90A00-	3J4
67862-90A00-	3J4
67868-30040-	3D5
	3J4
67871-90A00-	3D5
67872-90A00-	3D5
67881-90A06-	3K5
67891-90A01-	3K5
P 67913-90A00-03	3J3
P -90A00-16	3B5
67917-90A00-03	3C3
-90A00-16	3C3


ILLUSTRATED INDEX

E16

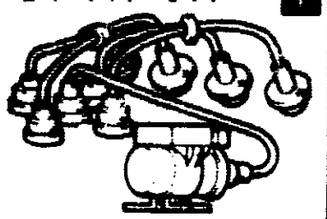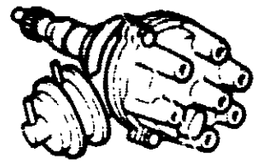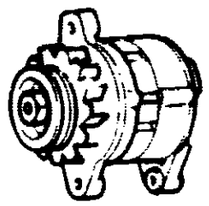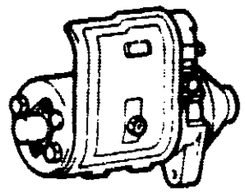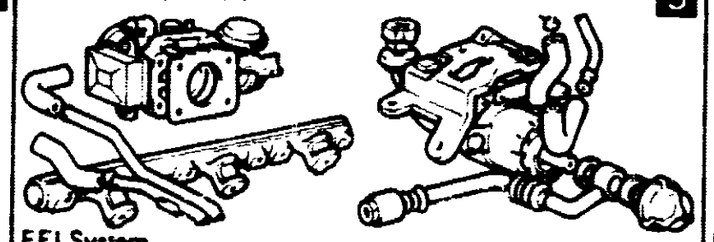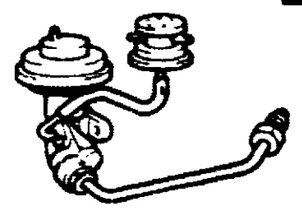1B4 (19-01) 1	1D4 (19-02) 2	1E4 (19-03) 3	1G4 (19-04) 4	1I4 (22-11) 5	1M4 (25-01) 6
					
Ignition Coil & Cord	Distributor	Alternator	Starter	EFI System	EGR System

ENGINE, FUEL GROUP (2/2)

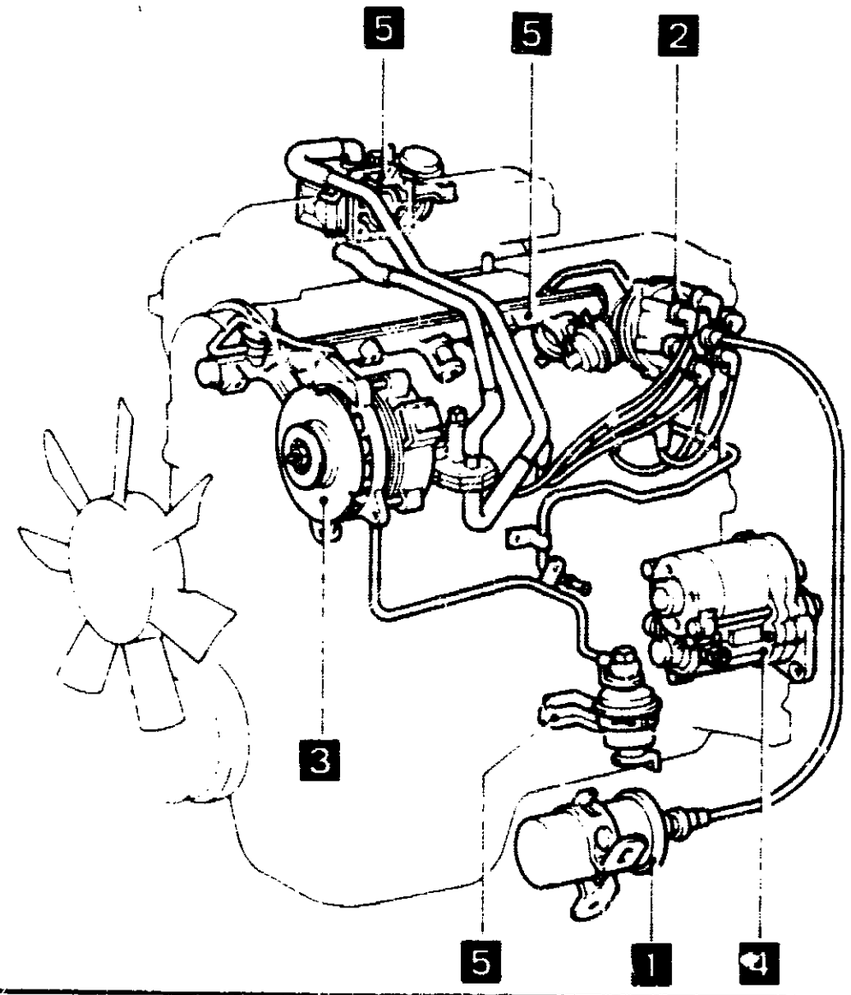

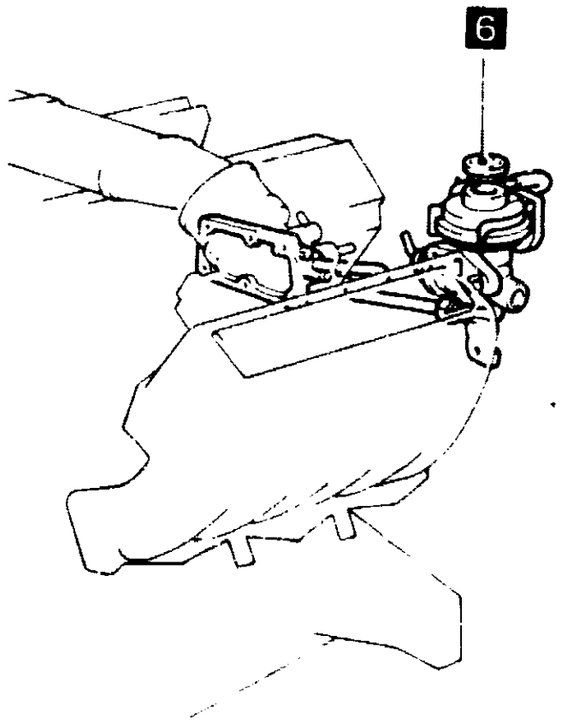

MA 8759

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	52231	CUSHION, BODY MOUNT NO.3 UPPER					
8708-9001	FJ62			52203-60030-	2		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

FIG. 55-53 COWL PANEL & WINDSHIELD GLASS

3F2

791430M-01255

(8708-)

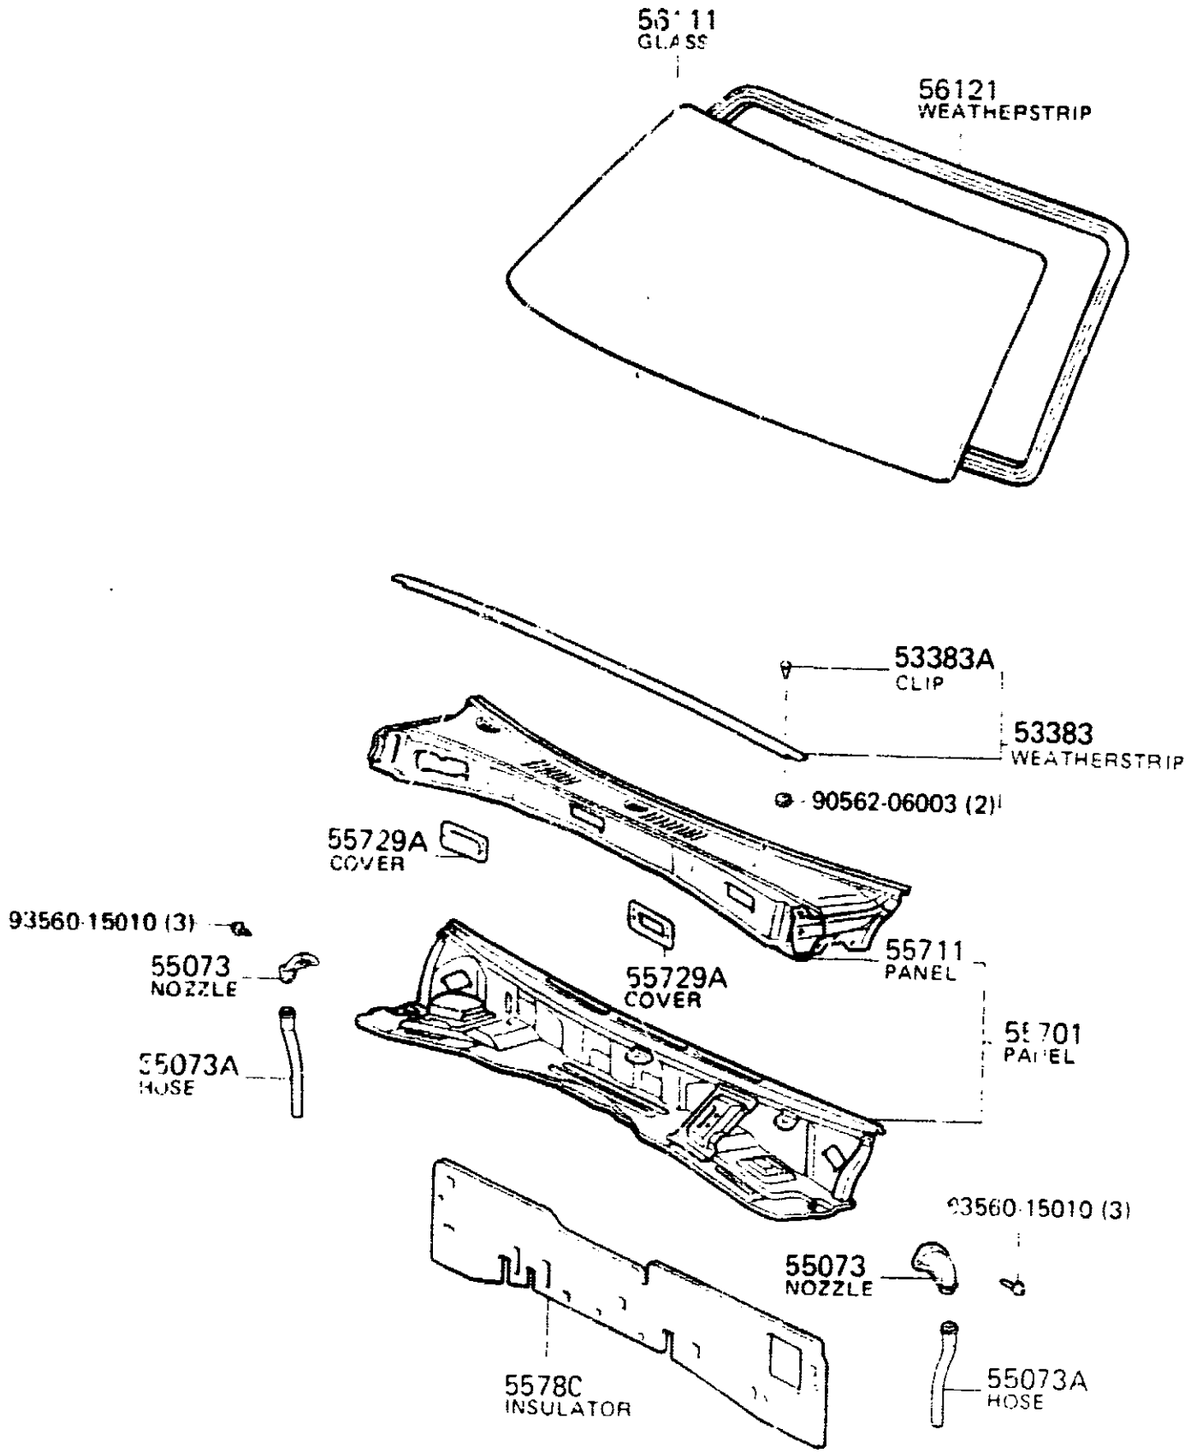

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	53383	**SEAL, HOOD TO COWL TOP**					
8708-9001	FJ62			53383-90A00-	1		
	53383A	**CLIP (FOR HOOD TO COWL TOP SEAL)**					
8708-8808	FJ62			90467-08011-	5		
8808-9001	FJ62..WGG			〃	9		
	55073	**NOZZLE SUB-ASSY, COWL PANEL WATER EXTRACT**					
8708-9001	FJ62			55073-90A00-	2		
	55073A	**HOSE (FOR EXTRACT NOZZLE)**					
8708-9001	FJ62			90910-04012-	2		
	55701	**PANEL SUB-ASSY, COWL**					
8708-8809	FJ62			55700-90G17-	1		002
8809-9001	FJ62..WGG			〃	1		
	55711	**PANEL, COWL TOP, OUTER**					
8708-8809	FJ62			55701-90A35-	1		002
8809-9001	FJ62..WGG			〃	1		
	55729A	**COVER, COWL PANEL HOLE**					
8708-9001	FJ62			55729-90A01-	2		
	55780	**INSULATOR ASSY, COWL TOP**					
8708-9001	FJ62			55780-90A01-	1		
	56111	**GLASS, WINDSHIELD**					
8708-9001	FJ62	*TL, T=5.3		56111-90A02-	1		

*TL=Tinted Laminated Glass

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	58959B	CUSHION, CONSOLE COMPARTMENT DOOR					
8708-9001	FJ62			58959-16010-	2		
	58964	STOPPER, CONSOLE COMPARTMENT DOOR, NO.1					
8708-9001	FJ62	LH		58964-30030-	1		
8708-9001	FJ62	RH		58964-90K00-	1		
	58965A	STOPPER, CONSOLE COMPARTMENT DOOR, NO.2					
8708-9001	FJ62	LH		58965-12010-	1		
8708-9001	FJ62	RH		58965-20020-	1		
	58976	STRIKER, CONSOLE COMPARTMENT DOOR LOCK					
8708-9001	FJ62			58976-20010-	1		
	58985	RETAINER, CONSOLE BOX					
8708-9001	FJ62			58985-90A00-	2		
	58996A	BRACKET, CONSOLE BOX MOUNTING, NO.2					
8708-9001	FJ62			58996-90A04-	1		
	58997	BRACKET, CONSOLE BOX MOUNTING, NO.3					
8708-9001	FJ62..USA			58997-90A02-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	63363	SUPPORT, ROOF HEADLINING, NO.3					
8708-9001	FJ62	MARK=BLUE		63361-90A00-	1		
8708-9001	FJ62	MARK=RED		63361-90A01-	1		
8708-9001	FJ62	MARK=YELLOW		63361-90A02-	1		
	63364	SUPPORT, ROOF HEADLINING, NO.4					
8708-9001	FJ62	MARK=BLUE		63361-90A00-	1		
8708-9001	FJ62	MARK=RED		63361-90A01-	1		
8708-9001	FJ62	MARK=YELLOW		63361-90A02-	1		
	63365	SUPPORT, ROOF HEADLINING, NO.5					
8708-9001	FJ62	MARK=BLUE		63361-90A00-	1		
8708-9001	FJ62	MARK=RED		63361-90A01-	1		
8708-9001	FJ62	MARK=YELLOW		63361-90A02-	1		
	63366	SUPPORT, ROOF HEADLINING, NO.6					
8708-9001	FJ62	MARK=BLUE		63362-90A00-	1		
8708-9001	FJ62	MARK=RED		63362-90A01-	1		
8708-9001	FJ62	MARK=YELLOW		63362-90A02-	1		
	63367	SUPPORT, ROOF HEADLINING, NO.7					
8708-9001	FJ62	MARK=BLUE		63362-90A00-	1		
8708-9001	FJ62	MARK=RED		63362-90A01-	1		
8708-9001	FJ62	MARK=YELLOW		63362-90A02-	1		
	63368	SUPPORT, ROOF HEADLINING, NO.8					
8708-9001	FJ62	MARK=BLUE		63363-90A00-	1		
8708-9001	FJ62	MARK=RED		63363-90A01-	1		
8708-9001	FJ62	MARK=YELLOW		63363-90A02-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	63371D	RETAINER, ROOF HEADLINING SUPPORT					
8708-9001	FJ62			63371-30050-	16		
	63372C	HOOK, ROOF HEADLINING SUPPORT					
8708-9001	FJ62			63372-90A00-	3		
	63392C	TRIM, ROOF HEADLINING, REAR RH					
P 8708-9001	FJ62	IVORY(TRIM1,4)		63392-90A00-18	1		
	63396B	TRIM, ROOF HEADLINING, REAR CENTER					
P 8708-9001	FJ62	IVORY(TRIM1,4)		63396-90A00-18	1		
	63397D	TRIM, ROOF HEADLINING, REAR LH					
P 8708-9001	FJ62	IVORY(TRIM1,4)		63397-90A00-18	1		

FIG. 67-56 REAR DOOR LOCK & HANDLE

(8708-)

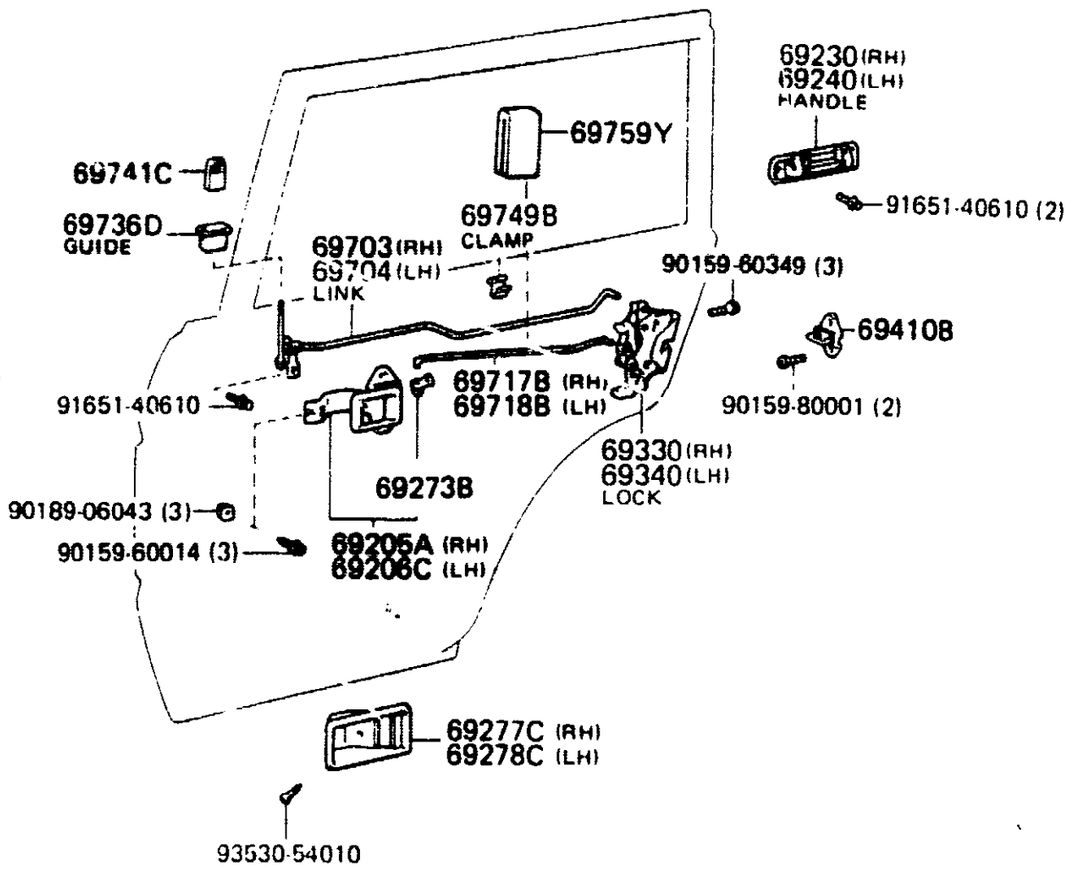

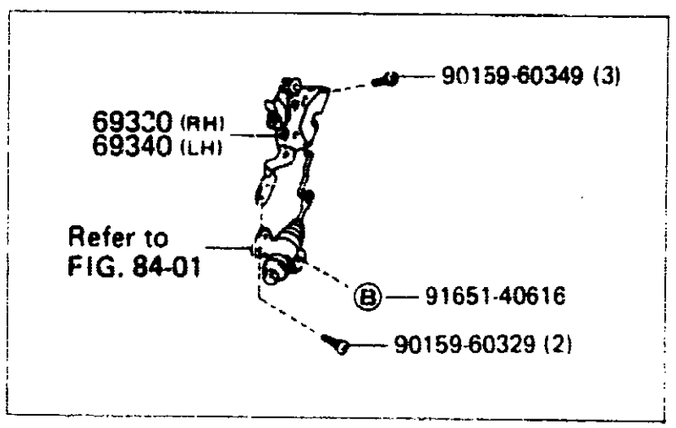

MB L953-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	69205A	HANDLE SUB-ASSY, REAR DOOR INSIDE, RH					
8708-9001	FJ62			69205-20020-	1		
	69206C	HANDLE SUB-ASSY, REAR DOOR INSIDE, LH					
8708-9001	FJ62			69206-20020-	1		
	69230	HANDLE ASSY, REAR DOOR OUTSIDE, RH					
8708-9001	FJ62			69230-90A00-	1		
	69240	HANDLE ASSY, REAR DOOR OUTSIDE, LH					
8708-9001	FJ62			69240-90A00-	1		
	69273B	SNAP, DOOR INSIDE HANDLE ROD (FOR REAR DOOR)					
8708-9001	FJ62			69273-30020-	2		
	69277C	BEZEL, REAR DOOR INSIDE HANDLE, RH					
8708-9001	FJ62	GRAY(TRIM1)	P	69277-16040-23	1		
8708-9001	FJ62	SEPIA BROWN(TRIM4)	P	69277-16040-36	1		
	69278C	BEZEL, REAR DOOR INSIDE HANDLE, LH					
8708-9001	FJ62	GRAY(TRIM1)	P	69277-16040-23	1		
8708-9001	FJ62	SEPIA BROWN(TRIM4)	P	69277-16040-36	1		
	69330	LOCK ASSY, REAR DOOR, RH					
8708-9001	FJ62			69330-90A00-	1		
8708-9001	FJ62	W(POWER WINDOW)		69330-90A01-	1		
	69340	LOCK ASSY, REAR DOOR, LH					
8708-9001	FJ62			69340-90A00-	1		
8708-9001	FJ62	W(POWER WINDOW)		69340-90A01-	1		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		71835C	MOULDING, REAR SEAT BACK, RH					
P	8708-9001	FJ62..WGG	GRAY(TRIM1)		71835-90A00-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71835-90A00-16	1		
		71836C	MOULDING, REAR SEAT BACK, LH					
P	8708-9001	FJ62..WGG	GRAY(TRIM1)		71836-90A00-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71836-90A00-16	1		
		71837C	MOULDING, REAR SEAT BACK, UPPER					
P	8708-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		71837-90A01-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71837-90A01-06	1		
		71887B	MAT, REAR SEAT CUSHION					
	8708-9001	FJ62..WGG			# 71887-90A00-	1		
					(71887-90A00-06)	1		
		71910A	HEADREST ASSY, FRONT SEAT					
P	8708-9001	FJ62	GRAY(TRIM1)		71910-90A01-03	2		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		71910-90A01-16	2		
		71931	SUPPORT, FRONT SEAT HEADREST					
	8708-9001	FJ62	W/O(LOCK),GRAY(TRIM1)		71956-30020-13	2		
P	8708-9001	FJ62	W/O(LOCK),SEPIA BROWN(TRIM4)		71956-30020-56	2		
	8708-9001	FJ62	W(LOCK),GRAY(TRIM1)		71990-30020-13	2		
P	8708-9001	FJ62	W(LOCK),SEPIA BROWN(TRIM4)		71990-30020-56	2		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		71931A	SUPPORT, REAR SEAT HEADREST					
	8708-9001	FJ62..WGG	W/LOCK,SHADOW GRAY(TRIM1)		71930-10060-33	2		
P	8708-9001	FJ62..WGG	W/LOCK,SEPIA BROWN(TRIM4)		71930-10060-36	2		
	8708-9001	FJ62..WGG	W/O(LOCK),SHADOW GRAY(TRIM1)		71931-10010-33	1		
	8708-9001	FJ62..WGG	W/O(LOCK),SEPIA BROWN(TRIM4)		71931-10010-36	1		
		71940A	HEADREST ASSY, REAR SEAT					
P	8708-9001	FJ62..WGG	GRAY(TRIM1)		71910-90A01-03	2		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		71910-90A01-16	2		
		71955A	SUPPORT, REAR SEAT HEADREST					
	8708-9001	FJ62..WGG	BLACK(TRIM1,4)		71955-90K00-01	4		
		72110A	TRACK ASSY, FRONT SEAT, OUTER RH					
	8708-9001	FJ62			72110-90A04-	1		
		72120	TRACK ASSY, FRONT SEAT, OUTER LH					
	8708-9001	FJ62			72120-90A04-	1		
		72130A	TRACK ASSY, FRONT SEAT,INNER RH					
	8708-9001	FJ62			72130-90A03-	1		
		72140A	TRACK ASSY, FRONT SEAT,INNER LH					
	8708-9001	FJ62			72140-90A00-	1		
		72145A	BRACKET, FRONT INNER SEAT TRACK, LOWER FRONT RH					
	8708-9001	FJ62			72145-90A00-	1		

FIG. 75-52

3F7


791430M-01320

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	75755C	MOULDING, FRONT DOOR WINDOW FRAME, REAR RH					
8708-9001	FJ62			75755-90A00-	1		
	75756C	MOULDING, FRONT DOOR WINDOW FRAME, REAR LH					
8708-9001	FJ62			75756-90A00-	1		
	75761A	MOULDING, REAR DOOR WINDOW FRAME, FRONT RH					
8708-9001	FJ62			75761-90A00-	1		
	75762A	MOULDING, REAR DOOR WINDOW FRAME, FRONT LH					
8708-9001	FJ62			75762-90A00-	1		
	75763A	MOULDING, REAR DOOR WINDOW FRAME, UPPER RH					
8708-9001	FJ62			75763-90A00-	1		
	75764A	MOULDING, REAR DOOR WINDOW FRAME, UPPER LH					
8708-9001	FJ62			75764-90A00-	1		
	75765A	MOULDING, REAR DOOR WINDOW FRAME, REAR RH					
8708-9001	FJ62			75765-90A00-	1		
	75766A	MOULDING, REAR DOOR WINDOW FRAME, REAR LH					
8708-9001	FJ62			75766-90A00-	1		
	75851	MOULDING, ROCKER PANEL, RH					
8708-9001	FJ62			75850-69015-	1		
	75852	MOULDING, ROCKER PANEL, LH					
8708-9001	FJ62			75860-69015-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	75867A	CLIP, ROCKER PANEL MOULDING					
8708-9001	FJ62			75867-20020-	10		

FIG. 81-11 REAR COMBINATION LAMP

(8708-)

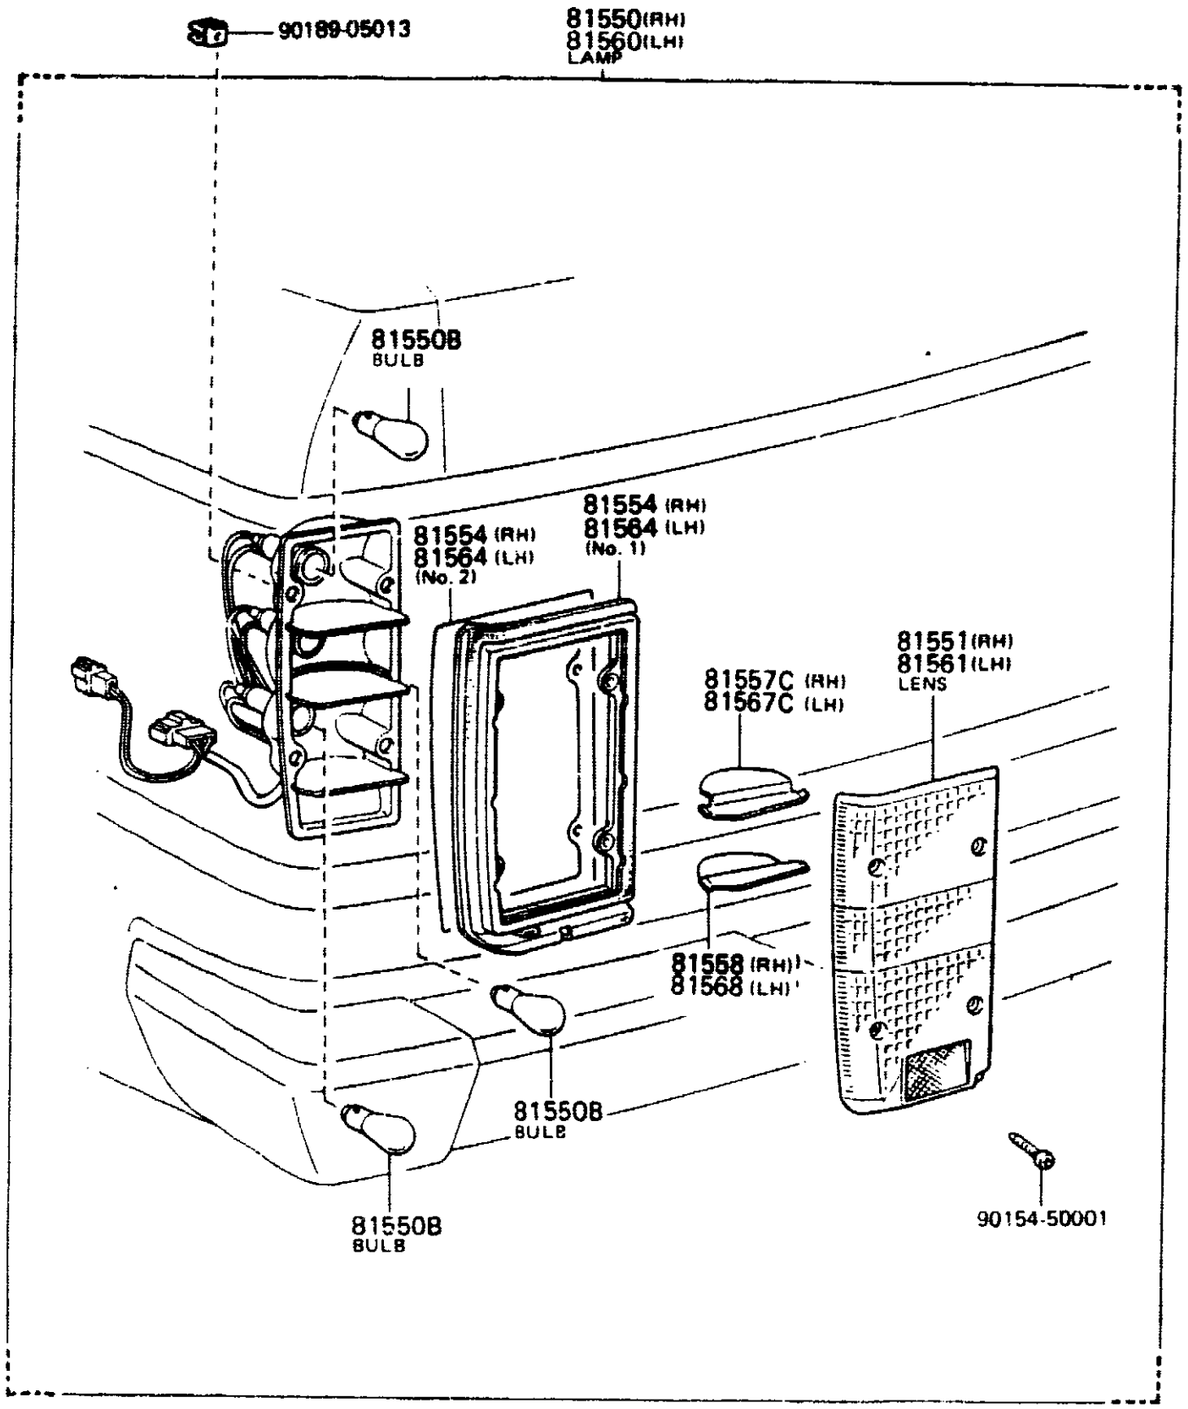


ME J477

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		81550	LAMP ASSY, REAR COMBINATION, RH					
P	8708-9001	FJ62			81550-90A11-	1		002
		81550B	BULB (FOR REAR COMBINATION LAMP)					
P	8708-9001	FJ62	12V 27W		99132-11270-	4		002
P	8708-9001	FJ62	12V 27/8W		99132-21270-	2		002
		81551	LENS, REAR COMBINATION LAMP, RH					
P	8708-9001	FJ62			81551-90A00-	1		002
		81554	GASKET, REAR COMBINATION LAMP BODY, RH					
P	8708-9001	FJ62	NO.1		81552-90A00-	1		002
P	8708-9001	FJ62	NO.2		81554-90A12-	1		002
		81557C	COVER, REAR COMBINATION LAMP, RH					
P	8708-9001	FJ62			81557-90A00-	1		002
		81558	SHADE, REAR COMBINATION LAMP, NO.1 RH					
P	8708-9001	FJ62			81558-90A00-	1		002
		81560	LAMP ASSY, REAR COMBINATION, LH					
P	8708-9001	FJ62			81560-90A11-	1		002
		81561	LENS, REAR COMBINATION LAMP, LH					
P	8708-9001	FJ62			81561-90A00-	1		002
		81564	GASKET, REAR COMBINATION LAMP BODY, LH					
P	8708-9001	FJ62	NO.1		81562-90A00-	1		002
P	8708-9001	FJ62	NO.2		81564-90A12-	1		002

(8708-)

ILLUST. NO. 1 OF 5

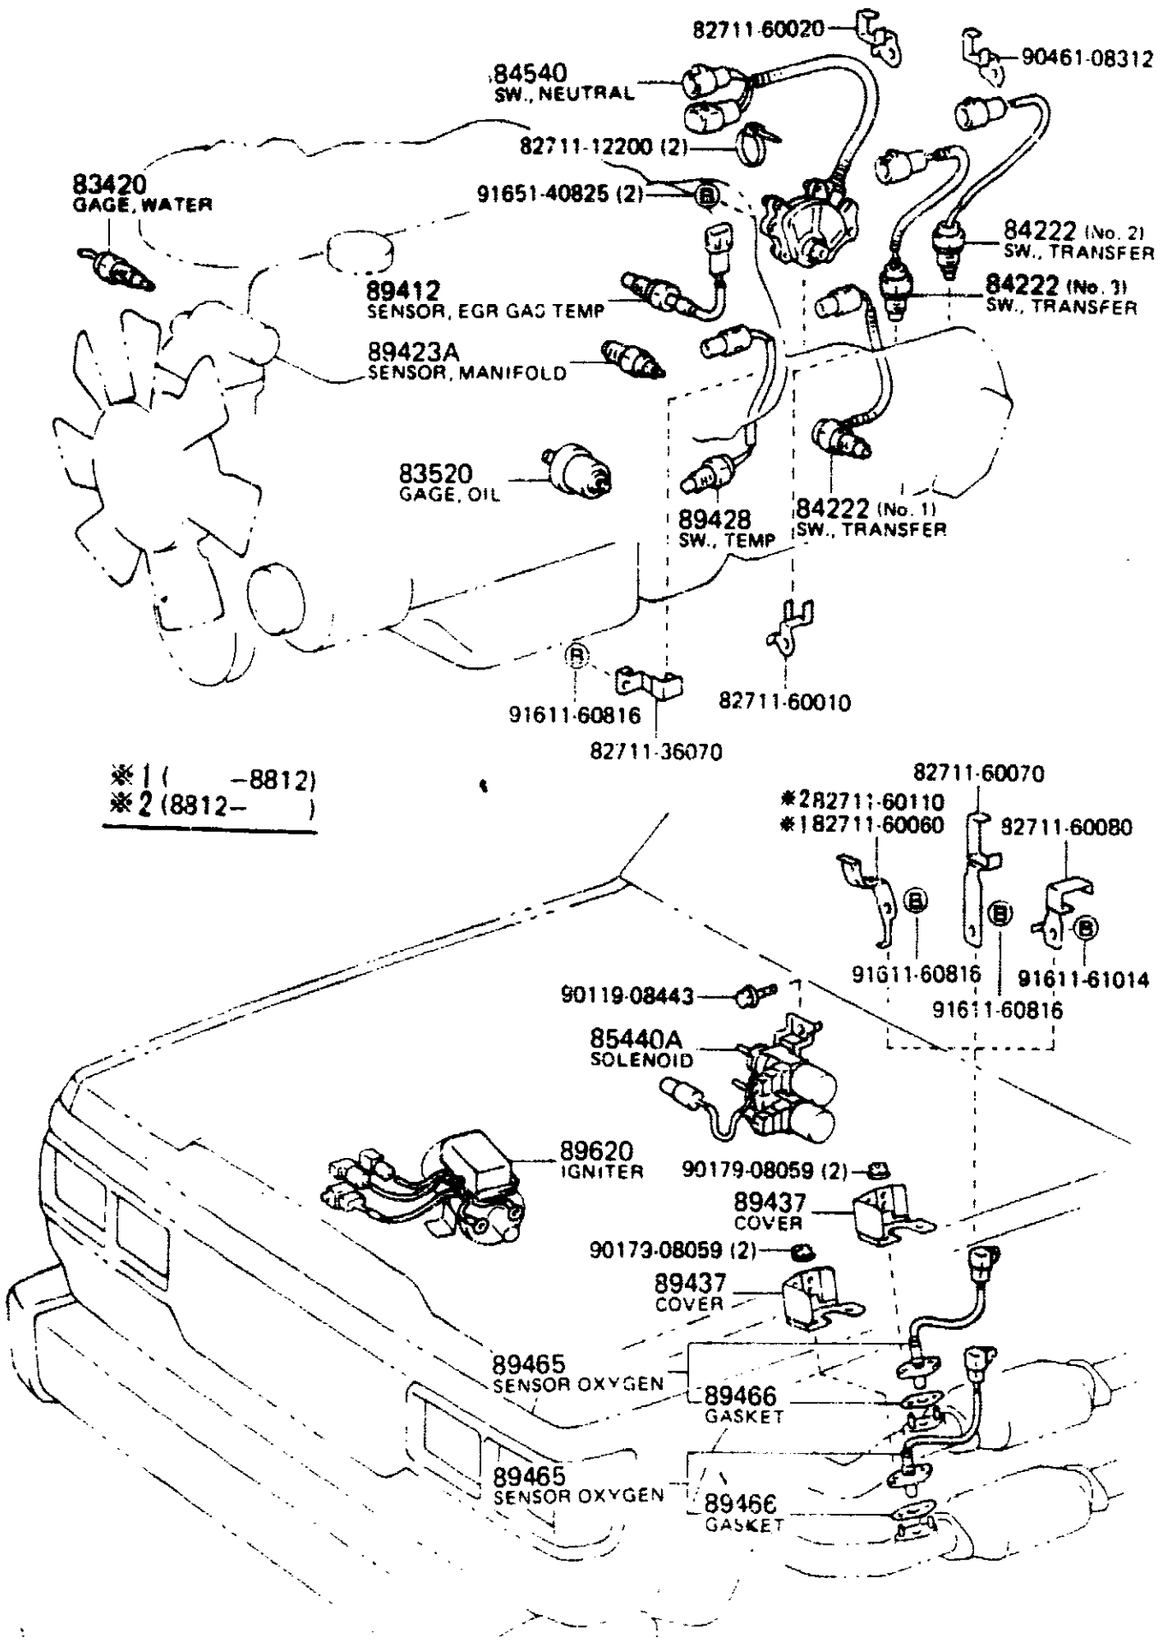


*1 (-8812)
*2 (8812-)

ME J638 D


(8708-)

ILLUST. NO. 2 OF 5

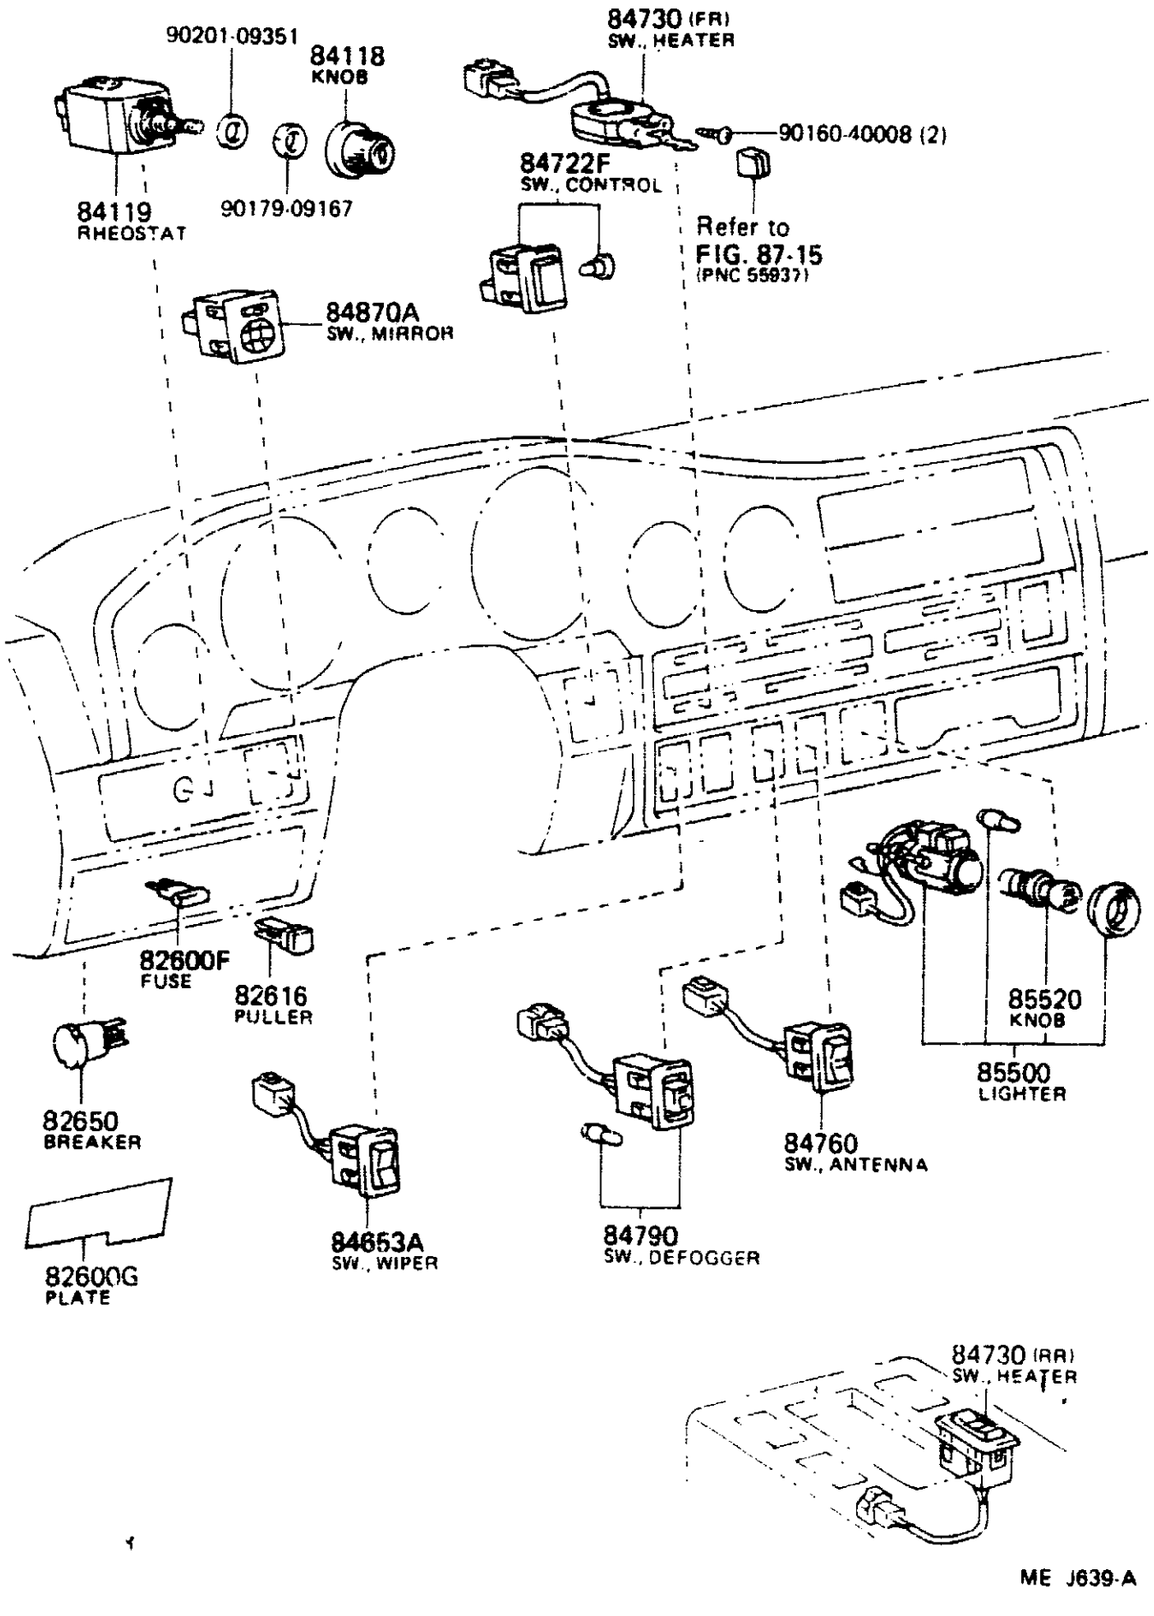

ME J639-A

(8708-)

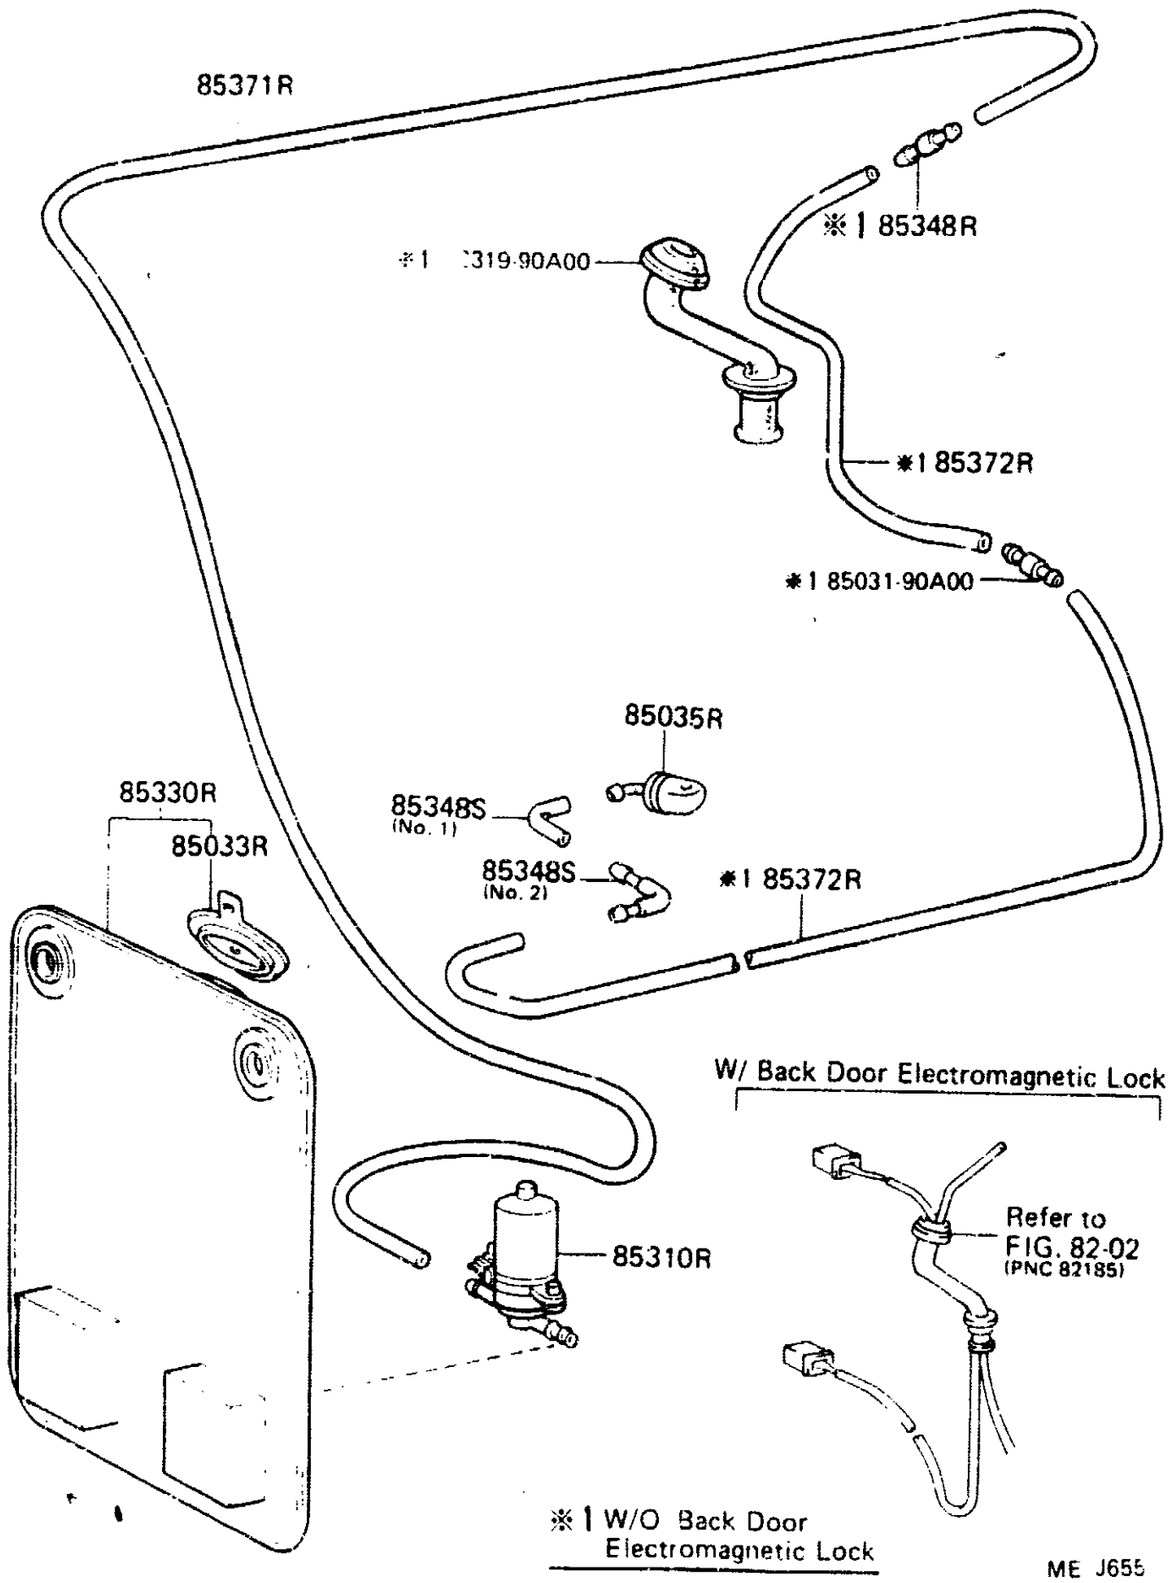

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	← 85033R →	CAP ASSY, REAR WASHER					
8708-9001	FJ62			85332-20050-	1		
	← 85035R →	NOZZLE SUB-ASSY, WASHER					
8708-9001	FJ62			85035-90A02-	1		
	← 85310R →	MOTOR ASSY, REAR WASHER					
8708-9001	FJ62			85310-22080-	1		
	← 85330R →	JAR ASSY, REAR WASHER					
8708-9001	FJ62			85330-90A08-	1		
	← 85348R →	JOINT, REAR WASHER HOSE, NO. 1					
8708-9001	FJ62			85349-89122-	1		
	← 85348S →	JOINT, REAR WASHER ELBOW					
8708-9001	FJ62	NO. 1		85355-14481-	1		
8708-9001	FJ62	NO. 2		85355-20200-	1		
	← 85371R →	HOSE, REAR WASHER (FROM MOTOR TO JOINT OR NOZZLE)					
8708-9001	FJ62	*H, L=2300		90446-06292-	1		
	← 85372R →	HOSE, REAR WASHER (FROM JOINT TO JOINT OR NOZZLE)					
8708-9001	FJ62	*H, L=950		90446-06013-	2		

*H, L=Cut hose to length as specified in remarks

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		87104 MOTOR SUB-ASSY, HEATER BLOWER						
	8708-9001	FJ62	FRONT		87104-90A00-	1		
	8708-9001	FJ62	REAR		87104-90K03-	1		
		87105 FAN SUB-ASSY, HEATER BLOWER						
	8708-9001	FJ62	FRONT		87105-14020-	1		
	8708-9001	FJ62	REAR		87105-87002-	1		
		87107 UNIT SUB-ASSY, HEATER RADIATOR						
	8708-9001	FJ62	FRONT		87107-90A04-	1		
S	8708-9001	FJ62	REAR		87107-90A06-	1		
		87110 HEATER ASSY						
	8708-9001	FJ62			87110-90A02-	1		
		87123 KNOB, HEATER						
	8708-9001	FJ62			55905-12070-	1		
		87126 CLAMP, HEATER CONTROL						
	8708-9001	FJ62	BLOWER		87126-16010-	1		
	8708-9001	FJ62	RADIATOR		87126-90A01-	2		
		87130 BLOWER ASSY, HEATER, FRONT						
	8708-9001	FJ62			87130-90A01-	1		
		87138 RESISTOR, HEATER BLOWER						
	8708-9001	FJ62	FRONT		87138-22030-	1		
	8708-9001	FJ62	REAR		87138-90K02-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	87150 RADIATOR ASSY, HEATER						
8708-9001	FJ62			87150-90A14-	1		
	87212A DUCT, AIR, REAR NO.1						
8708-9001	FJ62			87212-90A00-	1		
	87240H VALVE ASSY, WATER UNIT						
8708-9001	FJ62			87240-90A02-	1		
	87248H PIPE, HEATER WATER INLET						
8708-9001	FJ62			87248-90A01-	1		
	87249 PIPE, WATER						
8708-9001	FJ62			87248-90A03-	1		

	PART NUMBER	LOCATION
	68111-90A01-	3J4
	68112-90A01-	3J4
	68113-90A01-	3D5
	68114-90A01-	3D5
	68123-90A01-	3D5
	68124-90A01-	3E5
	68131-90A20-	3K5
	68141-90A03-	3K4
	68142-90A01-	3E5
	68143-90A01-	3K4
	68170-90A01-	3K4
	68188-90A00-	3E5
	68189-90A00-	3E5
	68190-90A01-	3E5
	68281-90A00-	3K5
	68282-90A00-	3K5
	68291-90A01-	3K5
	68610-12010-	3K4
	68617-90A01-	3E5
		3K4
	68630-90A00-	3E5
	68710-14020-	3A5
	-30080-	3H5
	68720-14020-	3A5
	-30020-	3H5
	68730-14020-	3A5
		3H5
	68740-14020-	3A5
		3H5
	68810-90A00-	3L5
	68868-90A00-	3L5
	68950-69045-	3M5
	68961-23010-	3M5
	69005-90A47-	3A6
	-90A62-	3A6
	69051-90A06-	3A6
	69052-90A06-	3A6
	69055-90A06-	3A6
	-90A11-	3A6
	69056-90A01-	3A6
	69057-90A08-	3A6
	69058-90A02-	3A6
	69205-20020-	3F5
		3L4
	69206-20020-	3F5
		3L4
	69210-90A00-	3L4
	69212-90A00-	3M5
	69220-90A00-	3L4
	69230-90A00-	3F5
	69240-90A00-	3F5
P	69260-12010-03	3A5
P		3H5
P	-12010-46	3A5
P		3H5
	69273-30020-	3F5
		3L4
P	69277-16040-23	3F5
P		3L4
P	-16040-36	3F5
P		3L4
	69285-22010-08	3A5
		3H5
	69289-90A00-	3M5

	PART NUMBER	LOCATION
	69310-90A02-	3L4
	-90A03-	3L4
	69320-90A02-	3L4
	-90A03-	3L4
	69330-90A00-	3F5
	-90A01-	3F5
	69340-90A00-	3F5
	-90A01-	3F5
	69350-90A03-	3M5
	69380-90A01-	3M5
	69390-90A00-	3M5
	69410-90B00-	3G5
		3M4
	69430-90A01-	3M5
	69450-90A00-	3M5
	69460-90A00-	3M5
	69513-14010-	3A6
	-90A00-	3B6
	69551-13020-	3B6
	-90A00-	3B6
	69552-95A00-	3B6
	69563-90A00-	3B6
	69581-14010-	3B6
	69681-20040-	3B6
	69690-90A01-	3M5
	69705-90A00-	3M5
P	69706-90A00-03	3M5
P	-90A00-06	3M5
	69711-90A00-	3M4
	69712-90A00-	3M4
	69713-90A00-	3G5
	69714-90A00-	3G5
	69722-90A00-	3M5
	69736-90K00-	3G5
		3M4
P	69741-90K00-06	3G5
P		3M4
	69747-20020-01	3M5
	69749-12010-	3G5
		3L1
		3M4
	-30020-	3M5
	69751-20040-	3E5
		3K4
	69759-30021-	3G5
		3M4
	69764-90A00-	3M5
	69767-90A00-	3M5
	69770-90A02-	3G5
	-90A03-	3G5
	69780-90A02-	3G5
	-90A03-	3G5
	69801-90A00-	3A5
	69802-90A00-	3A5
	69803-90A00-	3H5
	69804-90A00-	3H5
	69810-90A02-	3A5
	69820-90A02-	3A5
	69830-90A01-	3H5
	69840-90A01-	3H5
	69901-90A03-	3B5
	69902-90A02-	3B5
	69905-90A03-	3I5
	69906-90A03-	3I5

	PART NUMBER	LOCATION
	69971-90A01-	3B5
	69973-90A00-	3I5
	69975-90A00-	3I5
P	71071-90A35-03	3D6
P	-90A35-06	3D6
P	71072-90A18-03	3D6
P	-90A18-06	3D6
P	71073-90A44-03	3D6
P	-90A44-06	3D6
	71075-90A18-03	3D6
	-90A18-06	3D6
P	71077-90A41-03	3D6
P	-90A41-06	3D6
	71301-90A00-	3D6
	71307-90A00-	3D6
	71309-90A00-	3E6
	71354-90A00-	3E6
P	71410-90A33-03	3E6
P	-90A33-06	3E6
P	71420-90A31-03	3E6
P	-90A31-06	3E6
P	71430-90A39-03	3E6
P	-90A39-06	3E6
P	71440-90A37-03	3E6
P	-90A37-06	3E6
P	71460-90G12-03	3E6
P	-90G12-06	3E6
P	71480-90G28-03	3E6
P	-90G28-06	3E6
	71739-90A00-	3E6
P	71825-90A00-03	3E6
P	-90A00-16	3E6
P	71826-90A00-03	3E6
P	-90A00-16	3E6
P	71827-90A00-03	3E6
P	-90A00-16	3E6
P	71828-90A00-03	3E6
P	-90A00-16	3E6
P	71829-90A00-03	3E6
P	-90A00-16	3E6
P	71835-90A00-03	3F6
P	-90A00-16	3F6
P	71836-90A00-03	3F6
P	-90A00-16	3F6
P	71837-90A01-03	3F6
P	-90A01-06	3F6
	71887-90A00-	3F6
P	71910-90A01-03	3F6
P	-90A01-16	3F6
	71930-10060-33	3F6
P	-10060-36	3F6
	71931-10010-33	3F6
	-10010-36	3F6
	71955-90K00-01	3F6
	71956-30020-13	3F6
P	-30020-56	3F6
	71990-30020-13	3F6
P	-30020-56	3F6
	72110-90A04-	3F6
	72120-90A04-	3F6
	72130-90A03-	3F6
	72140-90A00-	3F6
	72145-90A00-	3F6
	72146-90A00-	3G6

	PART NUMBER	LOCATION
	72510-90A03-	3G6
	72520-90A02-	3G6
P	72525-14010-13	3G6
P	-14010-56	3G6
P	72526-14010-43	3G6
P	-14010-56	3G6
	72538-12010-	2B7
P	72551-90A00-03	3G6
P	-90A00-16	3G6
P	72552-90A00-03	3G6
P	-90A00-16	3G6
	72607-90A00-	3G6
	72630-90A17-	3G6
	-90A20-	3G6
	72640-90A17-	3G6
	-90A20-	3G6
	72645-90A00-	3G6
	72651-90A00-	3G6
P	72660-90A00-03	3G6
P	-90A00-16	3G6
	72670-90A02-	3G6
	72680-90A02-	3G6
P	72694-90A00-03	3G6
P	-90A00-16	3G6
	73003-90A00-03	3H6
	-90A00-06	3H6
	73210-90A26-03	3H6
	-90A26-06	3H6
P	-90A29-03	3H6
P	-90A29-06	3H6
	73220-90A15-03	3H6
	-90A15-06	3H6
P	-90A17-03	3H6
P	-90A17-06	3H6
P	73230-90A17-06	3H6
P	-90A17-13	3H6
P	73240-90A20-03	3H6
P	-90A20-06	3H6
	73330-90A04-13	3I6
	-90A04-16	3I6
	-90A05-13	3I6
	-90A05-16	3I6
	-90A37-03	3I6
	-90A37-06	3I6
P	-90A46-03	3I6
P	-90A46-06	3I6
P	73360-90A40-03	3I6
P	-90A40-06	3I6
P	73380-90A20-03	3I6
P	-90A20-06	3I6
	74102-90A01-	3A7
	74104-90A01-	3A7
P	74105-10010-10	3A7
	-10010-13	3A7
	74135-10030-	3A7
	74137-10030-	3A7
P	74250-90A00-03	3K6
P	-90A00-16	3K6
P	74310-90A28-08	3K6
P	-90A52-08	3K6
P	74320-90A25-08	3K6
P	-90A42-08	3K6
P	74348-12010-18	3K6
P	74372-90A00-	3C11

	PART NUMBER	LOCATION
	74404-90A00-	3L6
	74431-90A00-	3L6
	74433-90A00-	3L6
	74451-90A00-	3L6
	74559-12020-	3M6
	-20030-	3M6
	-20090-	3M6
	-60010-	3M6
	74564-60010-	3M6
	74571-28020-	3M6
	74610-10020-18	3K6
	-90K00-08	3K6
	74617-14010-18	3K6
	-16010-08	3K6
	74620-90A00-18	3K6
P	74670-90A01-03	3K6
P	-90A01-06	3K6
	75330-90A00-	3C7
	75340-90A00-	3C7
	75370-90A02-	3C7
	75415-95660-	3M5
	75430-90K00-	3C7
	75442-90A01-	3C7
	75505-90A00-	3D7
	75506-90A00-	3E7
	75531-90A00-	3D7
	75533-90A00-	3D7
	75534-90A00-	3D7
	75535-90A00-	3D7
	75541-90A00-	3D7
	75543-90A00-	3D7
	75553-90A00-	3E7
	75554-90A00-	3E7
	75575-90A00-	3E7
	75583-90A00-	3E7
	75586-90A00-	3E7
	75596-90A00-	3E7
	75631-90A01-	3M3
	75641-90A00-	3E7
	75642-90A00-	3E7
	75645-90A00-	3E7
	75646-90A00-	3E7
	75710-90A02-	3E7
	75720-90A02-	3E7
	75730-90A01-	3E7
	75740-90A01-	3E7
	75751-90A00-	3E7
	75752-90A00-	3E7
	75755-90A00-	3F7
	75756-90A00-	3F7
	75761-90A00-	3F7
	75762-90A00-	3F7
	75763-90A00-	3F7
	75764-90A00-	3F7
	75765-90A00-	3F7
	75766-90A00-	3F7
	75812-90A00-	3E7
	75813-90A00-	3E7
	75850-69015-	3F7
	75860-69015-	3F7
	75867-20020-	3F7
	76603-69015-	3K1
	76604-69015-	3K1
	76607-69015-	3J3

	PART NUMBER	LOCATION
	76608-69015-	3J3
	76628-90A01-	3M2
	77001-60220-	3J7
	77030-90A01-	3J7
	77037-90K00-	3J7
	77169-14010-	1K4
	77193-60031-	3J7
	77201-60150-	3J7
	77205-60140-	3J7
	77209-60041-	3J7
	77213-60030-	3J7
	77244-60110-	3K7
	77249-60040-	3J7
	-60050-	3J7
	77250-60080-	3J7
A	-60081-	3J7
	-60090-	3J7
	77261-60080-	3J7
	77262-60030-	3J7
	77264-60030-	3K7
	77293-60030-	3K7
	77305-90A01-	3K7
	77310-12100-	3K7
	77316-12050-	3K7
	77358-12020-	3K7
	77366-12010-	3K7
	77601-60060-	3K7
	77602-60040-	3K7
	77740-60130-	3K7
	77751-60020-	3K7
	78111-95110-	3M7
	78118-90K00-	3M7
	78120-90A08-	3M7
	-90A09-	3M7
	78180-90A24-	3M7
	78184-90A01-	3M7
	-90A03-	3M7
	78410-90A03-	3M7
	-90A08-	3M7
	78471-90A00-	3M7
	81105-90A27-	3A8
	81106-90A27-	3A8
	81110-90A28-	3A8
	81111-20360-	3A8
		3B8
	81113-90B04-	3A8
	81114-22391-	3B8
	81121-14320-	3A8
	81131-28050-	3A8
	81150-90A28-	3B8
	81153-90B04-	3B8
	81154-22391-	3A8
P	81240-22070-08	3J8
P	-95A16-	3J8
P	81241-20060-	3J8
	81260-22030-	3J8
P	81270-95A07-	3H8
P	81271-13070-	3H8
P	81272-13070-	3H8
P	81274-95A00-	3H8
P	81510-90A13-	3C8
P	81511-90A13-	3C8
P	81515-90A13-	3C8
P	81520-90A13-	3C8

ILLUSTRATED INDEX


F16

2A1 (33-12) 1




Shift Lever & Retainer

2D1 (35-01) 2

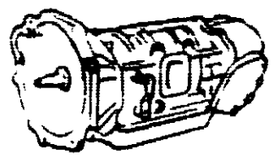

Transmission Assy

2G1 (35-03) 3

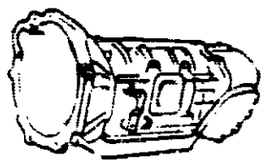


Transmission Case

2J1 (35-05) 4



Speedometer Driven Gear

2E1 (35-02) 5

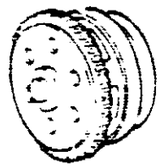

Torque Converter & Chain

2K1 (35-06) 6




Overdrive Gear

2A2 (35-07) 7




Multiple Disc Clutch

POWER TRAIN·CHASSIS GROUP (1/2)

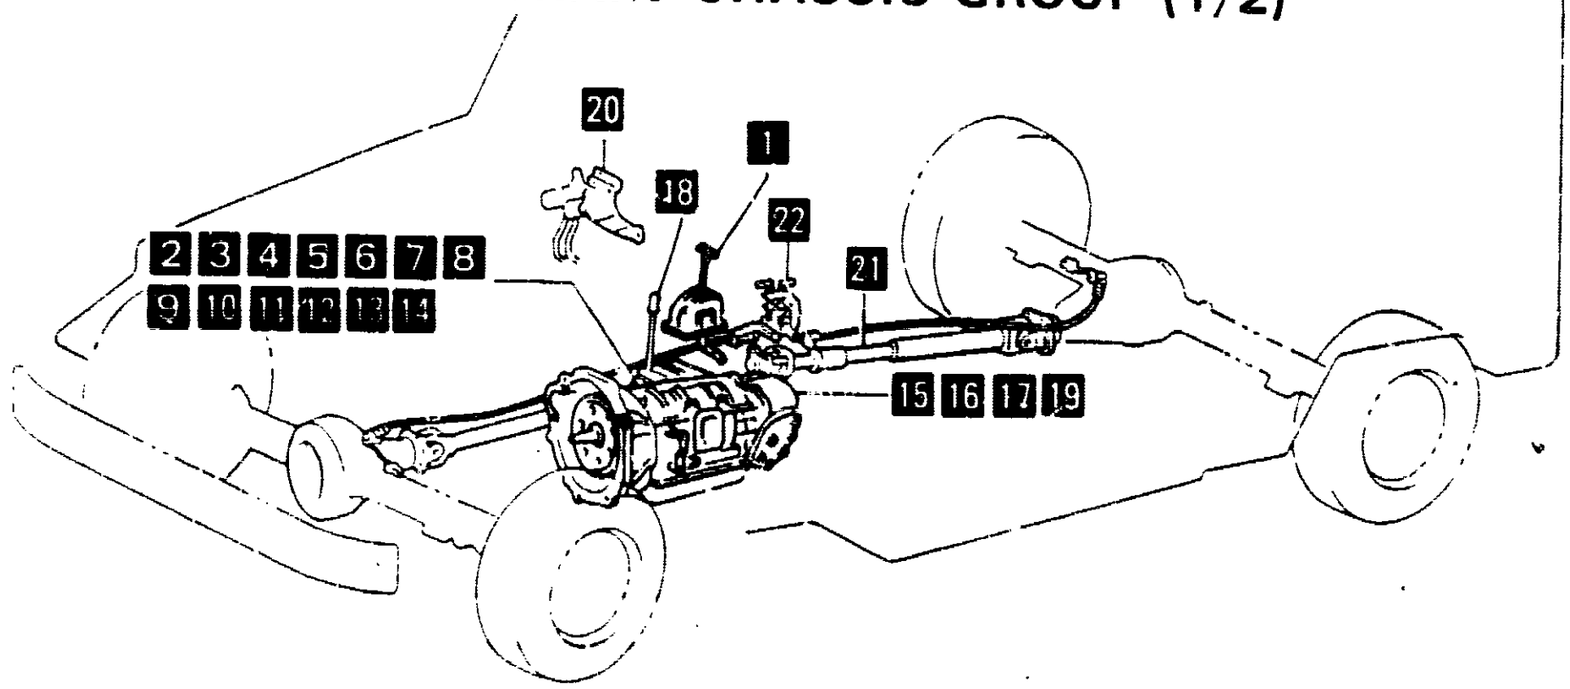


2D2 (35-08) 8

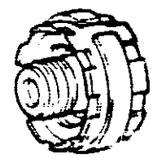


Planetary Sun Gear

2F2 (35-09) 9

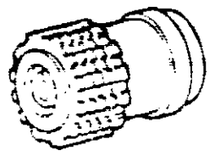


Brake No. 3

2G2 (35-10) 10

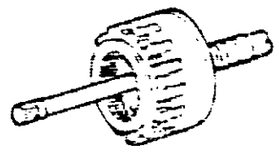


Planetary Gear

2K4 (37-01) 21

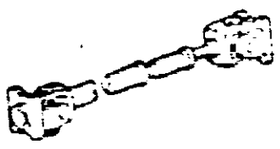


Propeller Shaft

2J4 (36-16) 20

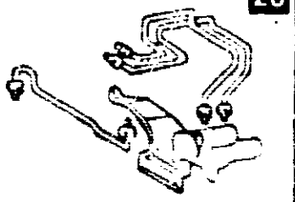

Vacuum Shift Valve

2H4 (36-12) 19

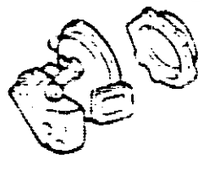

Diaphragm Cylinder

2M5 (42-01) 22




Differential Lock Control

212 (35-11) 11




Governor

2F4 (36-11) 18

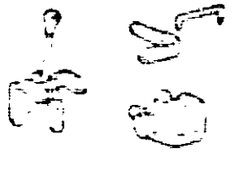


Transfer Lever

2C4 (36-10) 17

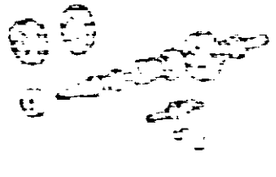

Transfer Gear

2A4 (36-09) 16

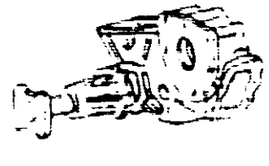


Transfer Case

2M3 (36-08) 15




Transfer Assy

2K3 (35-14) 14

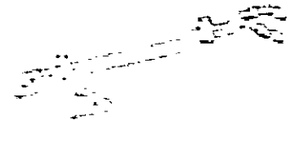


Oil Cooler & Tube

213 (35-13) 13

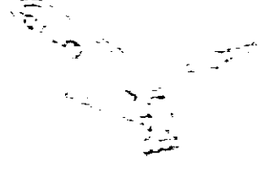

Throttle Link


2K2 (35-12) 12

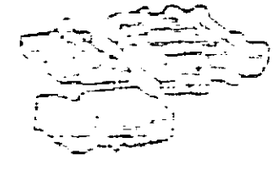

Valve Body

FIG. 52-52 FRONT BUMPER & BUMPER STAY

(8708-)

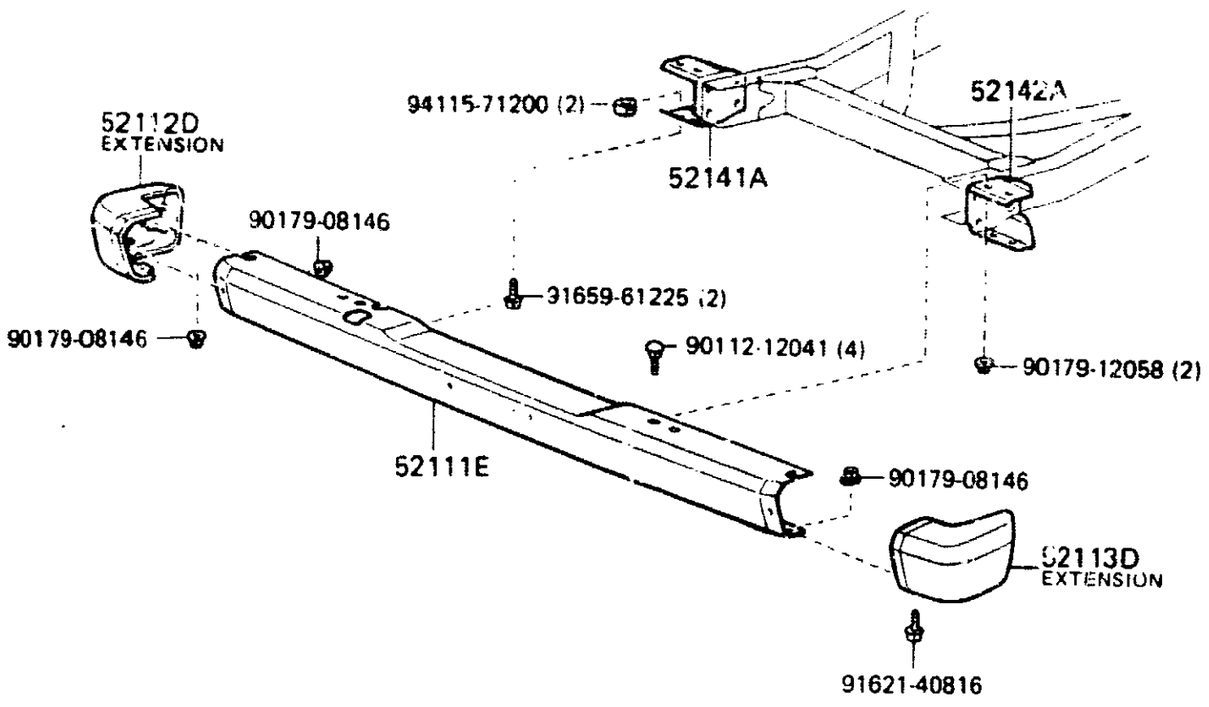


MB L863-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	52111E	BAR, FRONT BUMPER					
8708-9001	FJ62			52111-90A03-	1		
	52112D	EXTENSION, FRONT BUMPER, RH					
8708-9001	FJ62			52102-90A00-	1		
	52113D	EXTENSION, FRONT BUMPER, LH					
8708-9001	FJ62			52103-90A00-	1		
	52141A	ARM, FRONT BUMPER, UPPER RH					
8708-9001	FJ62			52141-60050-	1		
	52142A	ARM, FRONT BUMPER, UPPER LH					
8708-9001	FJ62			52142-60040-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	56121	WEATHERSTRIP, WINDSHIELD					
8708-8802	FJ62			# 56121-90A01-	1		
				(56121-90A05-)	1		
8802-9001	FJ62			56121-90A05-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)

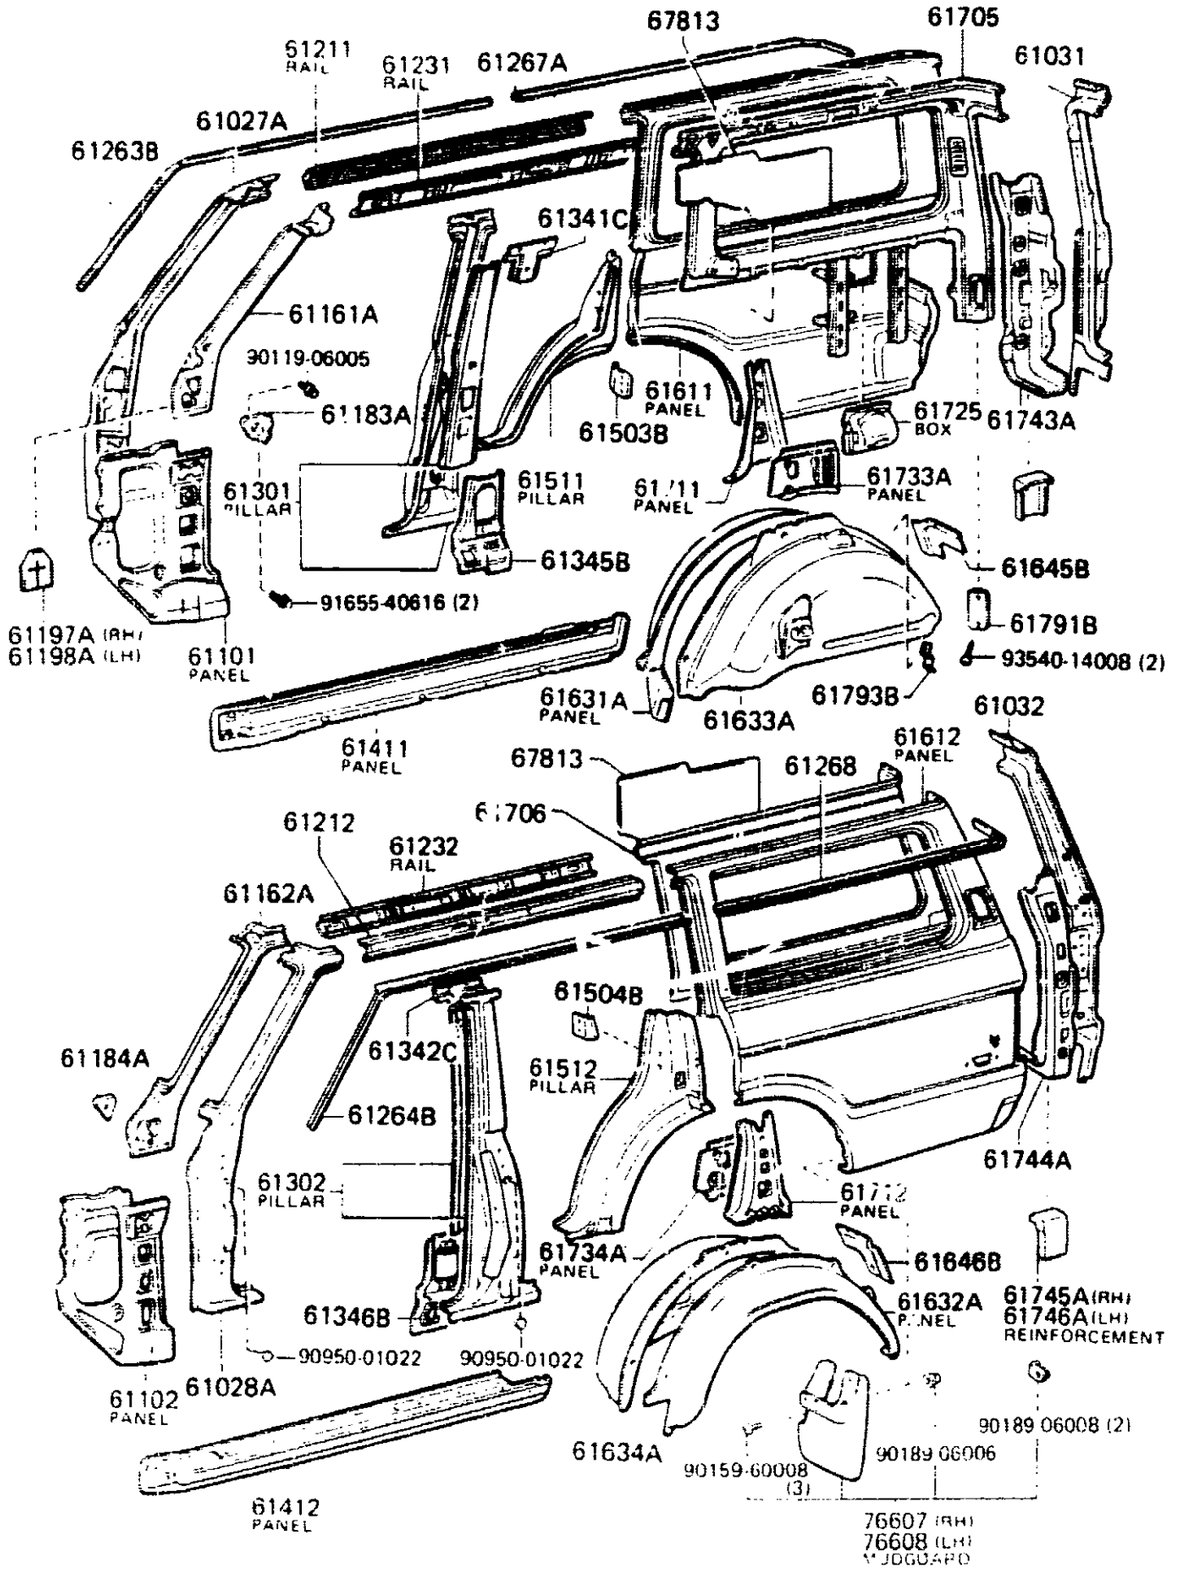


MB L924

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	61027A	PILLAR SUB-ASSY, FRONT BODY, OUTER RH					
8708-9001	FJ62			61027-90A04-	1		
	61028A	PILLAR SUB-ASSY, FRONT BODY, OUTER LH					
8708-9001	FJ62			61028-90A04-	1		
	61031	EXTENSION SUB-ASSY, QUARTER PANEL, REAR LOWER RH					
8708-9001	FJ62			61031-90A02-	1		
	61032	EXTENSION SUB-ASSY, QUARTER PANEL, REAR LOWER LH					
8708-9001	FJ62			61032-90A00-	1		
	61101	PANEL SUB-ASSY, COWL SIDE, RH					
8708-9001	FJ62			61101-90A08-	1		
	61102	PANEL SUB-ASSY, COWL SIDE, LH					
8708-9001	FJ62			61102-90A07-	1		
	61161A	PILLAR, FRONT BODY, INNER RH					
8708-8812	FJ62			61161-90AC3-	1		
8812-9001	FJ62..WGG			〃	1		
	61162A	PILLAR, FRONT BODY, INNER LH					
8708-8812	FJ62			61162-90A03-	1		
	61183A	BRACKET, INSTRUMENT PANEL SIDE, NO.2 RH					
8708-9001	FJ62			61183-90A01-	1		
	61184A	BRACKET, INSTRUMENT PANEL SIDE, NO.2 LH					
8708-9001	FJ62			61184-90A00-	1		

FIG. 64-55 DECK BOARD & DECK TRIM COVER

(8708-)

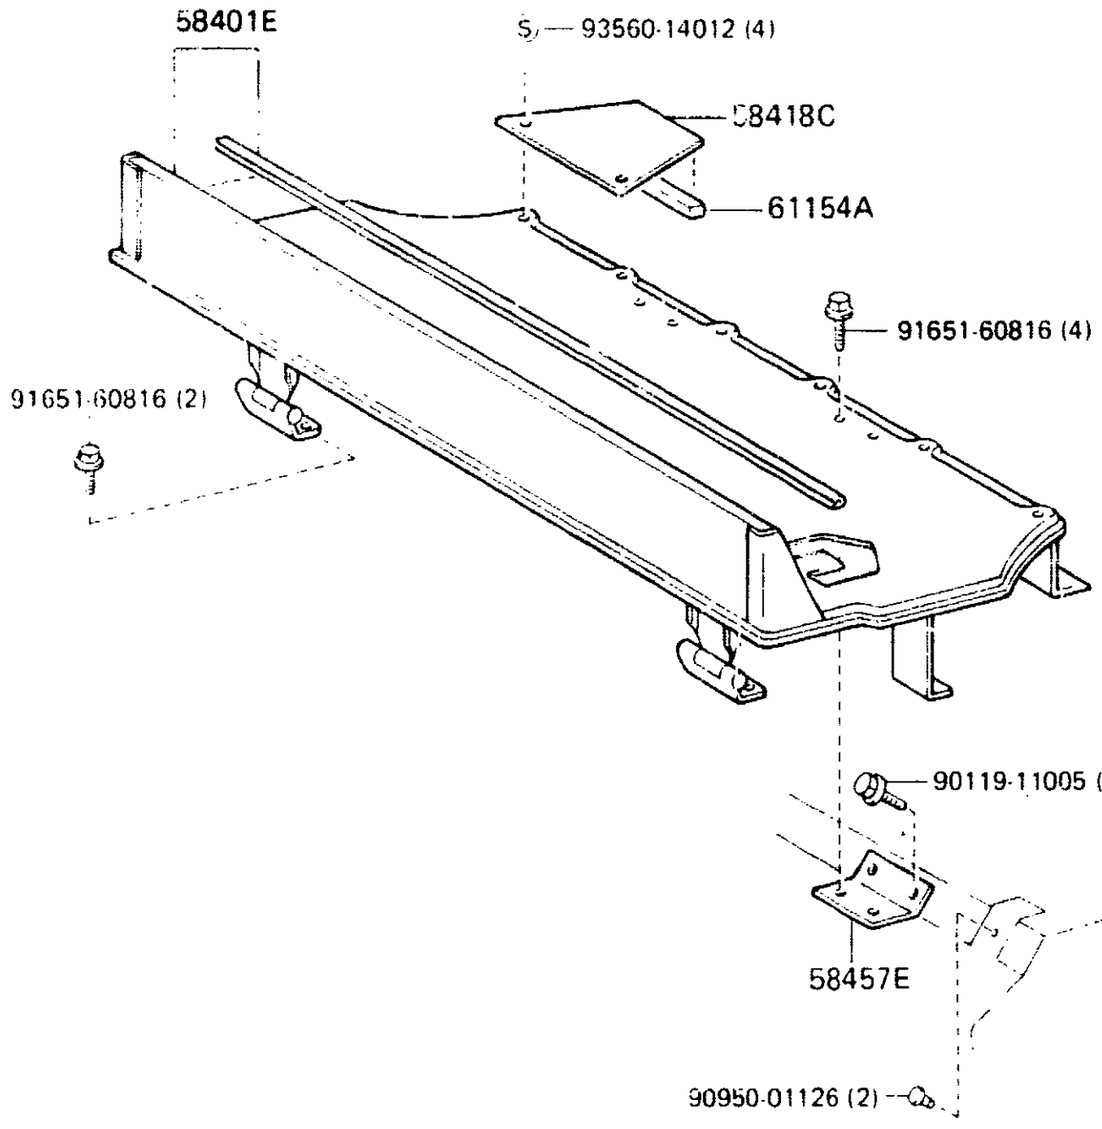

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	58401E	BOARD SUB-ASSY, DECK					
8708-8809	FJ62..WGV			58410-90A00-	1		002
	58418C	PLATE, DECK BOARD					
8708-8808	FJ62..WGV			58418-90A00-	2		002
	58457E	BRACKET, DECK BOARD, REAR					
8708-8808	FJ62..WGV			58457-90A00-	2		002
	61154A	CUSHION, SIDE PANEL STIFFENER, NO.4					
8708-8808	FJ62..WGV			61154-90C00-	2		002


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	69410B PLATE ASSY, REAR DOOR LOCK STRIKER						
8708-9001	FJ62			69410-90B00-	2		
	69703 LINK SUB-ASSY, REAR DOOR LOCKING CONTROL, RH						
8708-9001	FJ62			69770-90A02-	1		
8708-9001	FJ62	※(POWER WINDOW)		69770-90A03-	1		
	69704 LINK SUB-ASSY, REAR DOOR LOCKING CONTROL, LH						
8708-9001	FJ62			69780-90A02-	1		
8708-9001	FJ62	W(POWER WINDOW)		69780-90A03-	1		
	69717B LINK, REAR DOOR LOCK REMOTE CONTROL, RH						
8708-9001	FJ62			69713-90A00-	1		
	69718B LINK, REAR DOOR LOCK REMOTE CONTROL, LH						
8708-9001	FJ62			69714-90A00-	1		
	69736D GUIDE, REAR DOOR LOCKING LINK						
8708-9001	FJ62			69736-90K00-	2		
	69741C KNOB, REAR DOOR LOCK CONTROL						
P 8708-9001	FJ62	SEPIA BROWN(TRIM4)		69741-90K00-06	2		
	69749B CLAMP, REAR DOOR LOCK LINK						
8708-9001	FJ62			69749-12010-	2		
	69759Y SILENCER, REAR DOOR LOCK LINK						
8708-9001	FJ62			69759-30021-	2		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T


	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		72146A BRACKET, FRONT INNER SEAT TRACK, LOWER FRONT LH						
	8708-9001	FJ62			72146-90A00-	1		
		72510D ADJUSTER ASSY, RECLINING SEAT, OUTER RH						
	8708-9001	FJ62			72510-90A03-	1		
		72520D ADJUSTER ASSY, RECLINING SEAT, OUTER LH						
	8708-9001	FJ62			72520-90A02-	1		
		72525A HANDLE, RECLINING ADJUSTER RELEASE, RH						
P	8708-9001	FJ62	GRAY(TRIM1)		72525-14010-13	1		
P	8708-9001	FJ62	BROWN(TRIM4)		72525-14010-56	1		
		72526 HANDLE, RECLINING ADJUSTER RELEASE, LH						
P	8708-9001	FJ62	GRAY(TRIM1)		72526-14010-43	1		
P	8708-9001	FJ62	BROWN(TRIM4)		72526-14010-56	1		
		72551B COVER, RECLINING HINGE, RH						
P	8708-9001	FJ62	GRAY(TRIM1)		72551-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		72551-90A00-16	1		
		72552B COVER, RECLINING HINGE, LH						
P	8708-9001	FJ62	GRAY(TRIM1)		72552-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		72552-90A00-16	1		
		72603 LOCK SUB-ASSY, REAR SEAT BACK, RH						
	8708-8808	FJ62..WGV			72630-90A20-	1		002
	8708-9001	FJ62..WGG			72630-90A17-	1		


	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		72604 LOCK SUB-ASSY, REAR SEAT BACK, LH						
	8708-8808	FJ62..WGV			72640-90A20-	1		002
	8708-9001	FJ62..WGG			72640-90A17-	1		
		72607 STRIKER SUB-ASSY, REAR SEAT CUSHION LOCK						
	8708-9001	FJ62..WGG			72607-90A00-	1		
		72645 CUSHION, REAR SEAT BACK LOCK						
	8708-9001	FJ62			72645-90A00-	2		
		72651 ROD, REAR SEAT BACK LOCK						
	8708-9001	FJ62..WGG			72651-90A00-	1		
		72660A SUPPORT ASSY, REAR SEAT CUSHION						
P	8708-9001	FJ62..WGG	GRAY(TRIM1)		72660-90A00-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		72660-90A00-16	1		
		72670A STRIKER ASSY, REAR SEAT BACK LOCK, RH						
	8708-9001	FJ62..WGG			72670-90A02-	1		
		72680A STRIKER ASSY, REAR SEAT BACK LOCK, LH						
	8708-9001	FJ62..WGG			72680-90A02-	1		
		72694 COVER, REAR SEAT CUSHION LOCK						
P	8708-9001	FJ62..WGG	GRAY(TRIM1)		72694-90A00-03	1		
P	8708-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		72694-90A00-16	1		

(8708-)

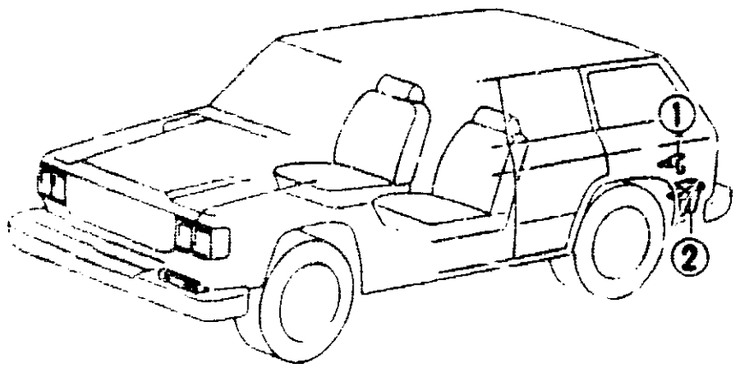

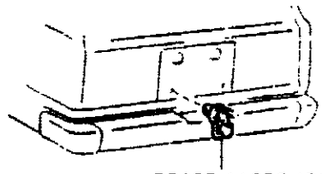

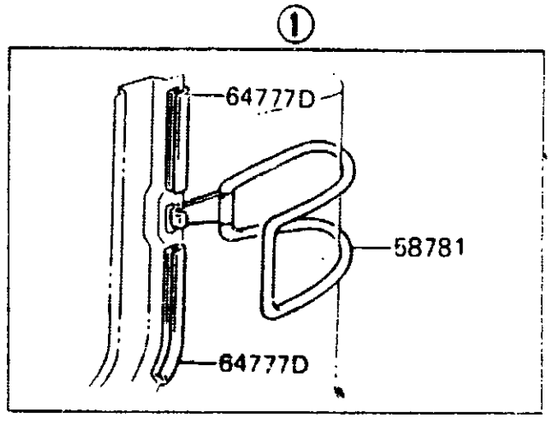

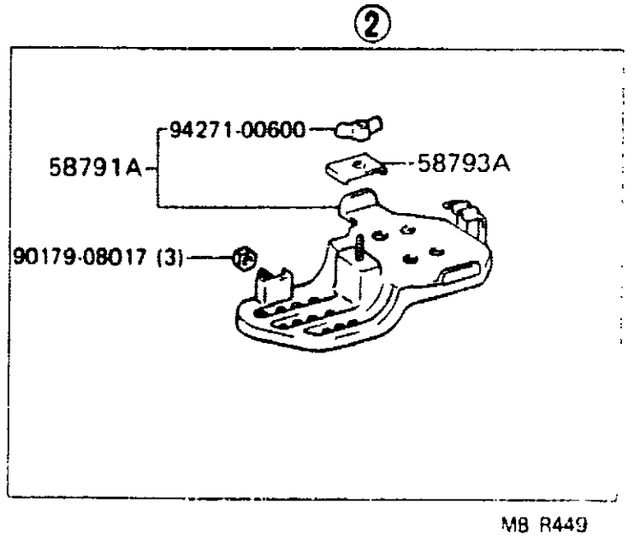

M8 R449


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	58781	BAND, TOOL BAG					
8708-9001	FJ62			58705-90A01-	1		
	58791A	CARRIER, JACK					
8708-9001	FJ62			58790-90A01-	1		
	58793A	BRACKET, JACK CARRIER					
8708-9001	FJ62			58793-90A01-	1		
	64777D	PROTECTOR, QUARTER INNER					
8708-9001	FJ62	L=110		64777-90A00-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		81567C	COVER, REAR COMBINATION LAMP, LH					
P	8708-9001	FJ62			81557-90A00-	1		002
		81568	SHADE, REAR COMBINATION LAMP, NO.1 LH					
P	8708-9001	FJ62			81558-90A00-	1		002

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)


ILLUST.NO.3 OF 5

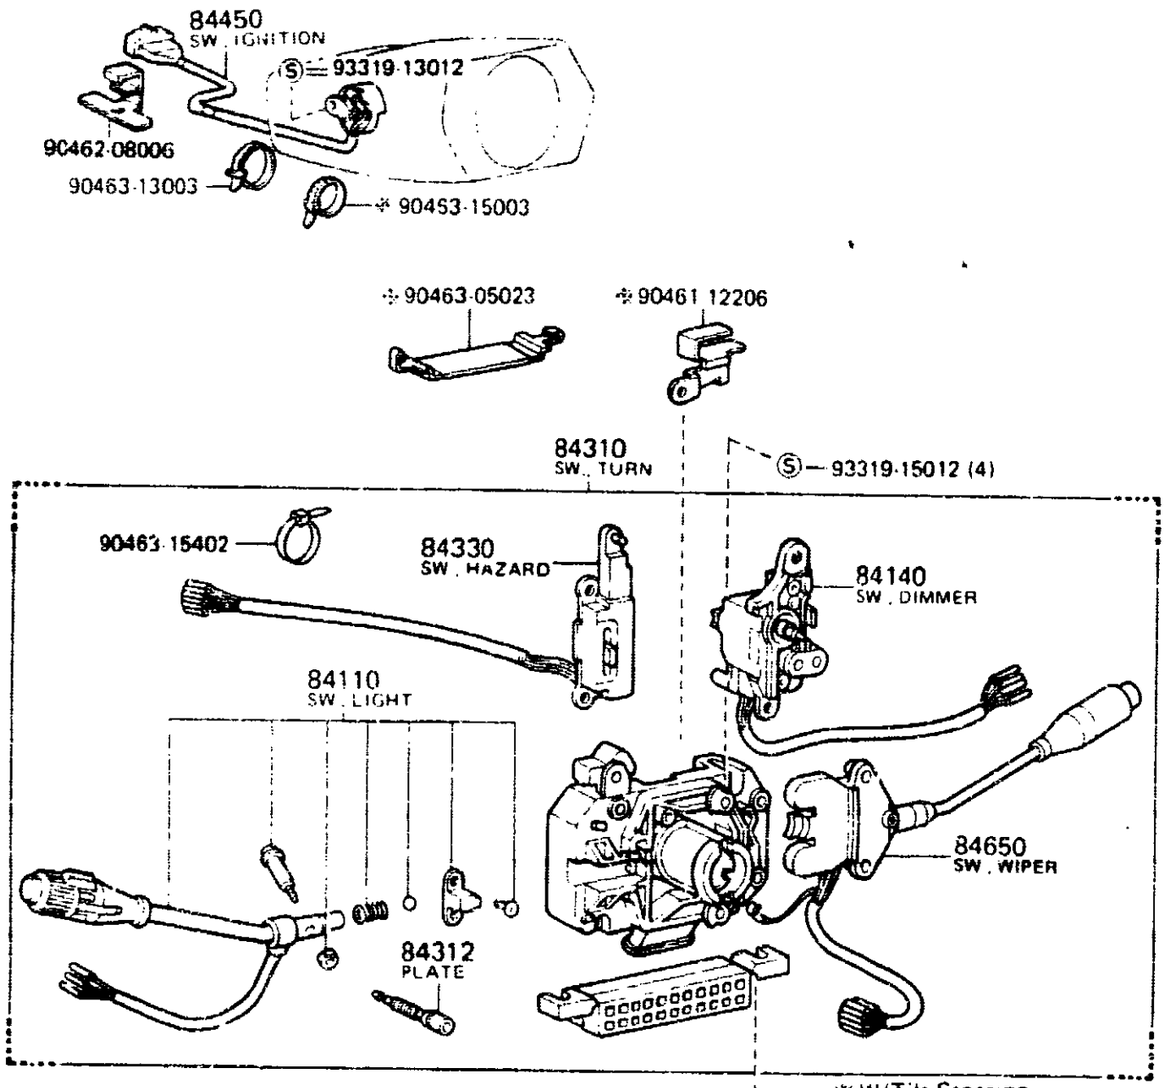

ME J640

(8708-)


ILLUST.NO.4 OF 5

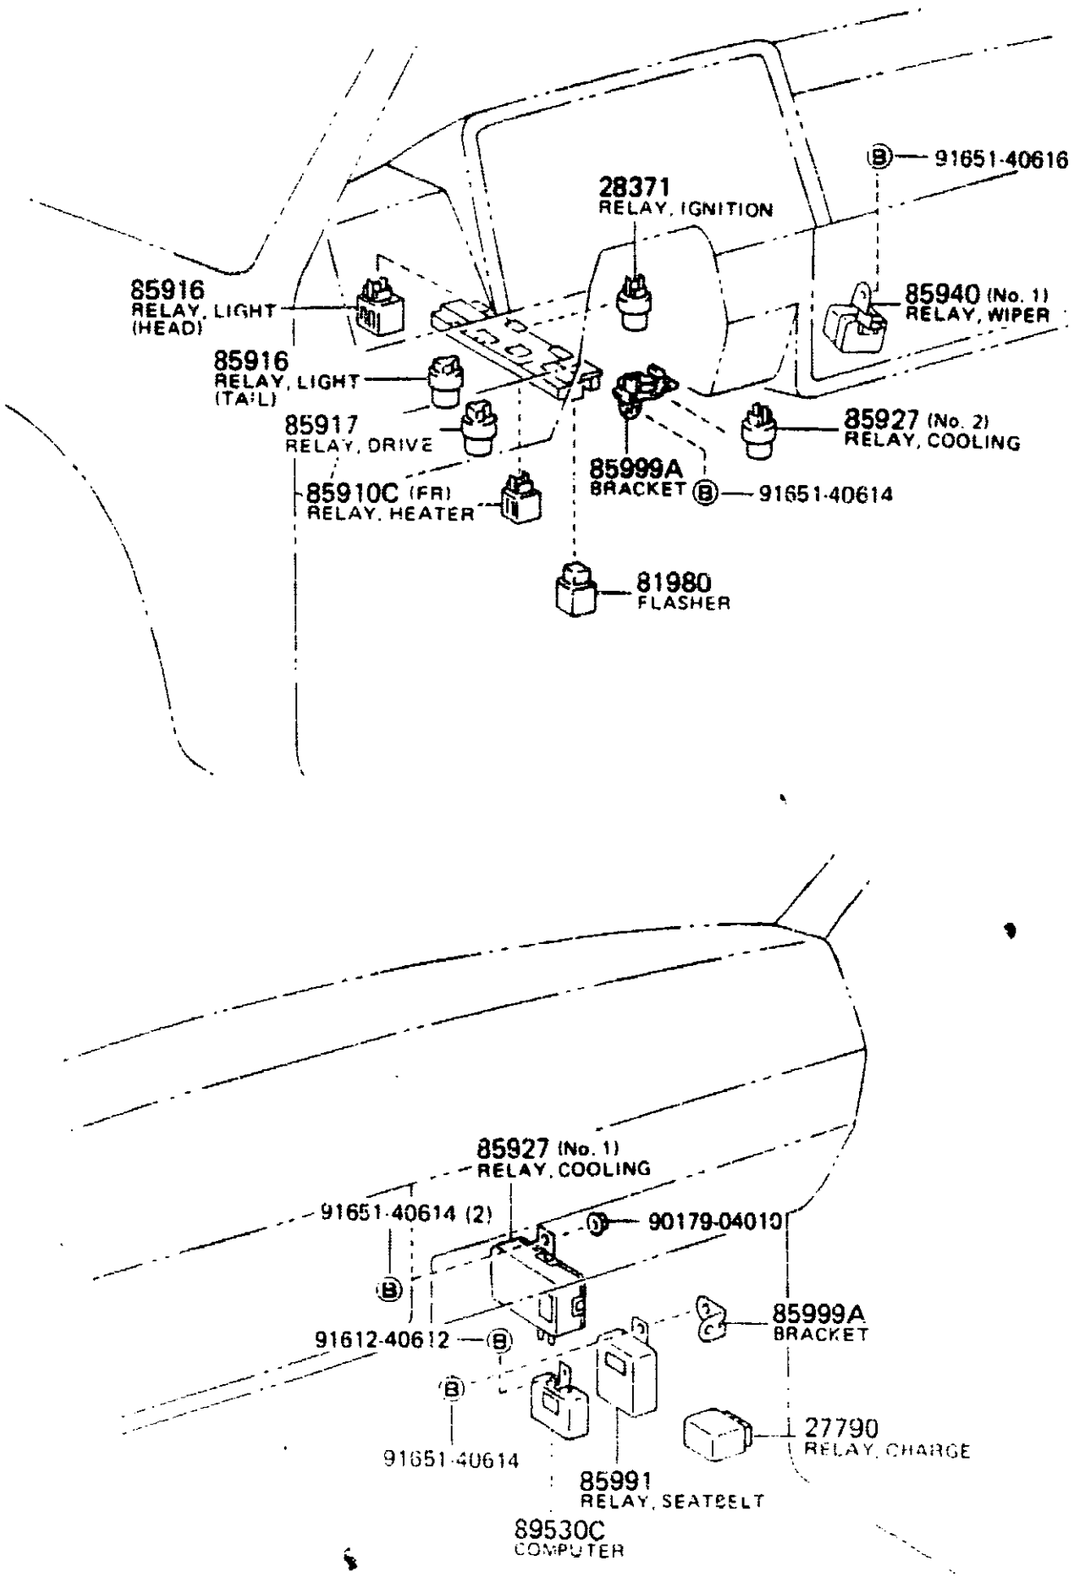

ME J641-A

FIG. 85-05 HEADLAMP CLEANER


(8708-)

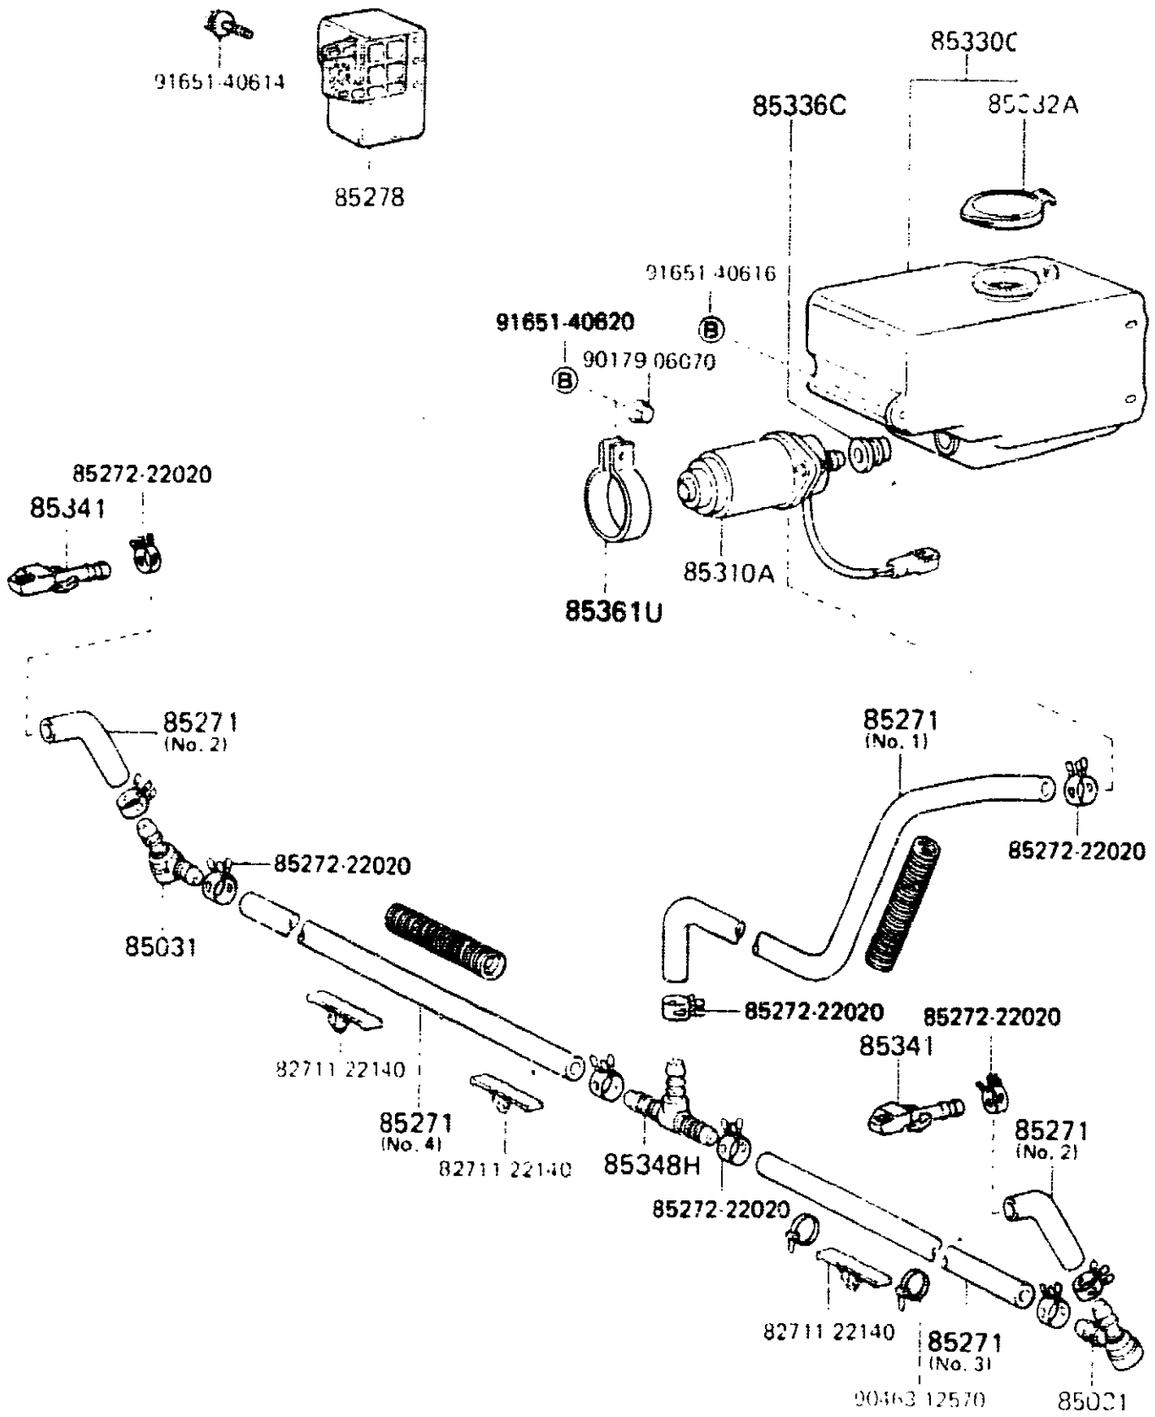

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		85031	VALVE, HEADLAMP CLEANER WASHER HOSE					
P	8708-9001	FJ62			85031-30020-	2		002
		85271	HOSE, HEADLAMP CLEANER, NO.1					
P	8708-9001	FJ62	NO.1		85271-90A00-	1		002
P	8708-9001	FJ62	NO.2		85271-90A01-	2		002
P	8708-9001	FJ62	NO.3		85271-90A02-	1		002
P	8708-9001	FJ62	*H,L=940,NO.4		90445-14072-	1		002
		85278	RELAY ASSY, HEADLAMP CLEANER CONTROL					
	8708-9001	FJ62			85276-14010-	1		
		85310A	MOTOR AND PUMP ASSY, HEADLAMP CLEANER WASHER					
	8708-9001	FJ62			85310-22070-	1		
		85330C	JAR ASSY, HEADLAMP CLEANER WASHER					
	8708-9001	FJ62			85330-90A04-	1		
		85332A	CAP, HEADLAMP CLEANER WASHER JAR					
	8708-9001	FJ62			85332-90A00-	1		
		85336C	PACKING					
	8708-9001	FJ62			85336-10010-	1		
		85341	NOZZLE, HEADLAMP CLEANER WASHER					
P	8708-9001	FJ62			85035-90A03-	2		002
		85348H	JOINT, HEADLAMP CLEANER HOSE					
P	8708-9001	FJ62			85352-12010-	1		002

*H,L=Cut hose to length as specified in remarks

FIG. 87-14 HEATING & AIR CONDITIONING - COOLER UNIT

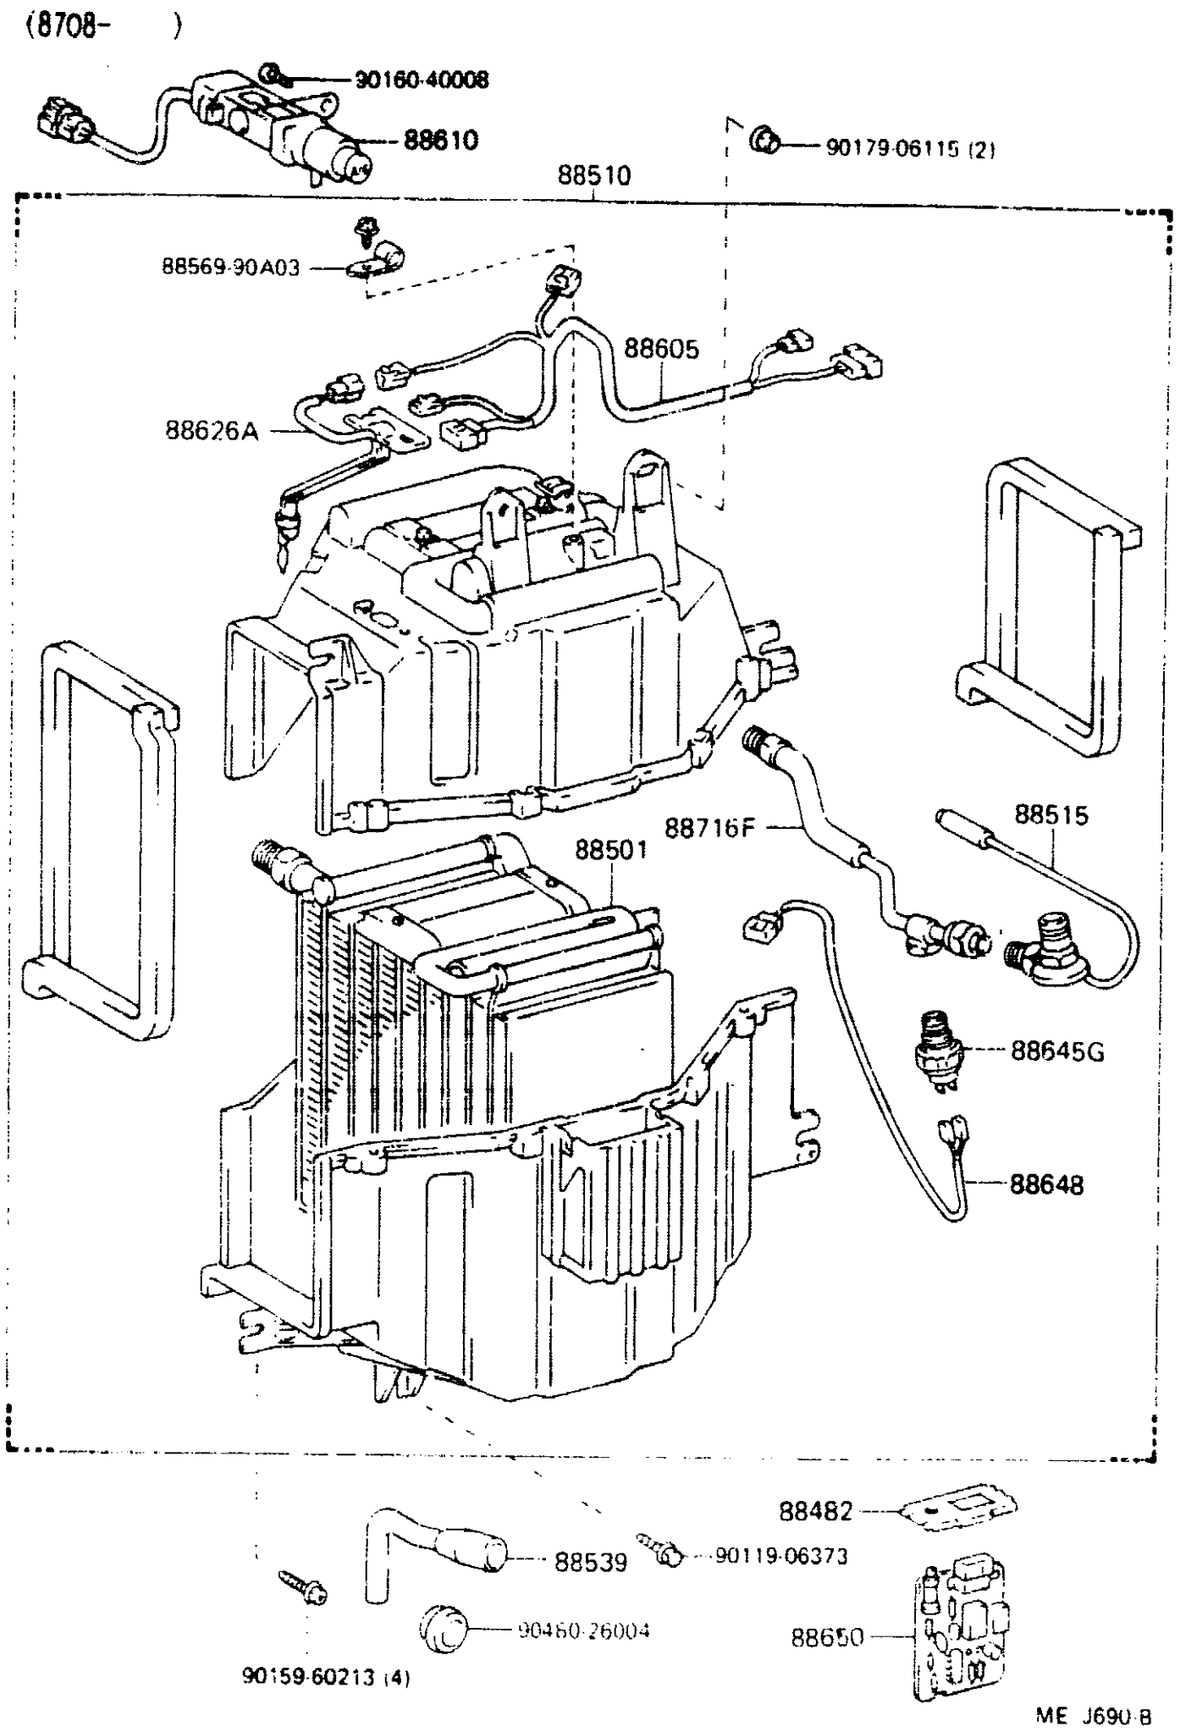

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		88482	CAP					
	8708-9001	FJ62			88482-90A00-	1		
		88501	EVAPORATOR SUB-ASSY, COOLER, NO.1					
P	8708-9001	FJ62..CND			88501-90A07-	1		
P	8708-9001	FJ62..USA			〃	1		
		88510	UNIT ASSY, COOLER					
P	8708-8909	FJ62..CND			88510-90A04-	1		
P	8708-8909	FJ62..USA			〃	1		
N	8909-9001	FJ62..CND			88510-90A25-	1		
N	8909-9001	FJ62..WGG..USA			〃	1		
		88515	VALVE, COOLER EXPANSION					
	8708-9001	FJ62..CND			88515-87004-	1		
	8708-9001	FJ62..USA			〃	1		
		88539	HOSE, COOLER UNIT DRAIN, NO.1					
P	8708-9001	FJ62..CND			88539-90A00-	1		
P	8708-9001	FJ62..USA			〃	1		
		88605	HARNESS SUB-ASSY, COOLER WIRING, NO.1					
P	8708-9001	FJ62..CND			88605-90A09-	1		
P	8708-9001	FJ62..USA			〃	1		
		88610	SWITCH ASSY, COOLER CONTROL					
	8708-9001	FJ62			88610-90A07-	1		
		88626A	HOLDER, THERMISTOR					
P	8708-8909	FJ62..CND			88626-90A01-	1		

	PART NUMBER	LOCATION
P	81521-90A13-	3C8
P	81550-90A11-	3F8
P	81551-90A00-	3F8
P	81552-90A00-	3F8
P	81554-90A12-	3F8
P	81557-90A00-	3F8
P		3G8
P	81558-90A00-	3F8
P		3G8
P	81560-90A11-	3F8
P	81561-90A00-	3F8
P	81562-90A00-	3F8
P	81564-90A12-	3F8
P	81610-90A03-	3D8
P	81611-90A00-	3D8
P	81612-90A00-	3D8
P	81615-90A03-	3D8
P	81620-90A03-	3D8
P	81621-90A00-	3D8
P	81730-14110-	3E8
A	-90A05-	3E8
P	81731-14110-	3E8
P	81740-14110-	3E8
A	-90A05-	3E8
P	81741-14110-	3E8
P	81750-91255-	3I8
P	81751-14030-	3I8
P	81754-91255-	3I8
P	81755-20060-	3I8
	81850-90A14-	3E9
	-90A15-	3E9
	-90A25-	3E9
	-90A31-	3E9
	-90A35-	3E9
	81930-90A10-	3E9
	-90A15-	3E9
	81980-16010-	3H9
	82121-90A03-	3M8
	-90A04-	3M8
	82122-90A01-	3K8
	82124-90A01-	3M8
	82125-90A09-	3M8
	82131-90G89-	3M8
	-90G98-	3M8
	82132-90A15-	3M8
	82141-90A20-	3M8
	-90A21-	3M8
	82151-90A05-	3A9
		3M8
	-90A08-	3M8
	-90A10-	3A9
	-90A13-	3A9
	82152-90A05-	3A9
	-90A06-	3A9
	82153-90A01-	3A9
	82154-90A03-	3A9
	82155-90A02-	3A9
	82161-90A40-	3A9
	82162-90A38-	3A9
	82163-90A21-	3A9
	82164-90A03-	3A9
	82166-90A00-	3A9
	82171-90A10-	3A9
	82173-90A00-	3A9

	PART NUMBER	LOCATION
	82181-90A00-	3A9
	82182-90A02-	3A9
	82183-90A01-	3A9
	82184-90A03-	3A9
	82185-90A05-	3A9
	82187-90A00-	3A9
	82282-90A04-	3B9
	-90A05-	3B9
	82291-90A02-	3B9
	82345-12050-	3B9
	-32020-	3B9
	82616-12010-	3H9
	82650-12020-	3H9
	-20011-	3H9
	82670-90K00-	3B9
	82683-90A20-	3H9
	-90A21-	3H9
	82821-12150-	3B9
	83101-14040-	3D9
	-20040-	3D9
	-36010-	3D9
	83110-90A46-	3D9
	-90A47-	3D9
	83132-90A04-	3D9
	83134-90A06-	3D9
	83138-90A00-	3D9
	83145-90A01-	3D9
	-90A02-	3D9
	83243-90A03-	3D9
	83244-90A02-	3D9
	83245-90A03-	3D9
	83246-90A05-	3D9
	83247-90A05-	3D9
	83270-90A10-	3D9
	-90A15-	3D9
	83320-69015-	3H9
	83361-20030-	3I9
	83420-20020-	3I9
	83520-60010-	3I9
	83710-90A06-	3D9
	-90A13-	3D9
B	-90A20-	3D9
	83910-90A11-	3D9
	84112-69295-	3I9
	84118-90A00-	3I9
	84119-90A01-	3I9
	84140-35080-	3I9
	84222-60021-	3I9
	-60030-	3I9
	-60040-	3I9
	-60071-	3I9
	84230-22051-	3I9
	84231-28010-	3I9
	84242-90A00-	3I9
	84310-60700-	3I9
	84312-20011-	3I9
	84332-69055-	3I9
	84340-22072-	3I9
	84380-20010-	3I9
	84450-60150-	3I9
	84460-22010-	2E8
	84540-60020-	3I9
	84652-69345-	3I9
	84653-32020-	3J9


	PART NUMBER	LOCATION
	84722-60070-	3J9
P	84730-90A00-	3J9
N	-90A02-	3J9
	84732-90A00-	3J9
	84760-90A01-	3J9
	84790-90A09-	3J9
P	84810-90A02-03	3J9
P	-90A02-06	3J9
P	-90A03-03	3J9
P	-90A03-06	3J9
P	84820-90A08-03	3J9
P	-90A08-06	3J9
	84870-14060-	3J9
	-22040-	3J9
	-90A00-	3J9
	84956-60030-	3J9
	85010-90A00-	3C10
P	85031-30020-	3G10
	85035-90A02-	3F10
P	-90A03-	3G10
	85120-90A35-	3A10
	85160-90A07-	3A10
A	85164-90A02-	3A10
A	85165-90A01-	3A10
	85174-12320-	3C10
	85178-12320-	3C10
	-90A00-	3A10
	85190-90A02-	3A10
	-90A06-	3C10
	85192-14010-	3A10
	85195-95700-	3C10
	85210-90A01-	3A10
	85220-16270-	3A10
	-16340-	3A10
	-90A02-	3C10
	85221-30100-	3A10
	-90A02-	3C10
	85247-90A01-	3B10
P	85271-90A00-	3G10
P	-90A01-	3G10
P	-90A02-	3G10
	85276-14010-	3G10
	85310-14080-	3D10
	-22070-	3G10
	-22080-	3F10
	85330-90A04-	3G10
	-90A07-	3D10
	-90A08-	3F10
	85332-20050-	3F10
	-90A00-	3G10
	-90A01-	3D10
	85333-20020-	3D10
	-60010-	3D10
	85336-10010-	3G10
	85338-22020-	1L2
	85341-90A05-	3D10
	-90A08-	3D10
	85348-89101-	3D10
	85349-89122-	3F10
P	85352-12010-	3G10
	85355-14481-	3F10
	-20200-	3F10
	85361-10070-	3H10
	85440-60120-	3J9

	PART NUMBER	LOCATION
	85450-90A04-	3I10
	-90A06-	3I10
	85460-90A02-	3I10
	85470-90A02-	3I10
	85480-90A02-	3I10
	85500-90A07-	3J9
	85520-14030-	3J9
	85710-90A00-	3I10
	-90A01-	3I10
	85720-90A00-	3I10
	-90A01-	3I10
	85910-14020-	3L9
	85913-30020-	3J9
	85915-60010-	3L9
	85927-60040-	3K9
	85930-90A00-	3K9
	85940-90A09-	3K9
	-90A10-	3K9
	85991-22020-	3K9
	85999-12050-	3K9
	-89101-	3K9
	86120-20680-	3K10
	-32130-	3K10
	-32211-	3K10
	-32340-	3K10
	-32370-	3K10
	-32390-	3K10
	-90A18-	3K10
	86128-17150-	3K10
B	-17190-	3K10
	-20020-	3K10
	-20040-	3K10
A	-22690-	3K10
A	-22710-	3K10
S	-28140-	3K10
S	-28160-	3K10
	-32190-	3K10
B	-32210-	3K10
	86151-90K01-	3M10
	86160-90A05-	3M10
	-90A06-	3M10
	-90K02-	3M10
	86209-90A00-	3M10
	86211-90A04-	3K10
	86212-90A03-	3K10
	86260-12180-	3K10
	-20170-	3K10
	-30250-	3K10
	86269-90K00-	3M10
	-90K01-	3M10
	86300-90A17-	3A11
	-90A25-	3A11
	86510-22120-	3B11
	86520-22120-	3B11
	86995-90A02-	3E9
	87104-90A00-	3F11
	-90K03-	3F11
	87105-14020-	3F11
	-87002-	3F11
	87107-90A04-	3F11
S	-90A06-	3F11
	87110-90A02-	3F11
	87126-16010-	3F11
	-90A01-	3F11

	PART NUMBER	LOCATION
	87130-90A01-	3F11
	87138-22030-	3F11
	-90K02-	3F11
	87150-90A14-	3F11
	87201-90A02-	3J11
	-90A04-	3J11
	87208-90A15-	3L11
	-90K06-	3L11
	87211-90A01-	3J11
	87212-90A00-	3F11
	87240-90A00-	3L11
	-90A02-	3F11
	87245-90A00-	3L11
	-90A27-	3L11
	-90A28-	3L11
	-90A29-	3L11
	-90A30-	3L11
	-90A40-	3L11
	-90A41-	3L11
	-90A50-	3L11
	-90K36-	3L11
	-90K53-	3L11
	87248-90A01-	3F11
	-90A03-	3F11
	-90A22-	3L11
	-90A24-	3L11
	-90A25-	3L11
	87286-90A01-	3J11
P	87810-90A03-	3C11
P	87828-90A00-	3C11
P	-90A01-	3C11
P	87834-14011-28	3C11
P	87910-90A18-	3C11
P	-90A19-	3C11
N	-90A20-	3C11
P	87911-90A05-	3C11
P		3D11
P	87940-90A09-	3D11
P	-90A11-	3C11
N	-90A15-	3D11
	88320-60151-	3B12
B	-60280-	3B12
	88321-14011-	3B12
B	-14021-	3B12
	88322-14011-	3B12
B	-14020-	3B12
	88335-12030-	3C12
	-12050-	3B12
B	-14010-	3C12
B	-14020-	3C12
	88341-14010-	3B12
B	-14020-	3B12
	88342-14010-	3B12
B	-14020-	3B12
	88343-14011-	3C12
B	-14020-	3C12
	88344-14011-	3C12
B	-14020-	3C12
B	88356-12010-	3C12
B	88360-14030-	3C12
	-40010-	3C12
	88371-60101-	3C12
N	-60170-	3C12
P	88374-12020-	3C12

	PART NUMBER	LOCATION
P	88375-20010-	3C12
P	-30270-	3C12
P	88376-22010-	3C12
P	-22020-	3C12
	88403-12030-	3C12
B	-16011-	3C12
	88410-22080-	3C12
B	-60120-	3C12
	88411-14050-	3B12
B	-60020-	3B12
	88412-22030-	3B12
B	-28030-	3B12
	88431-60040-	3C12
	-60100-	3C12
	88440-35010-	3C12
	88460-90A14-	3M11
	88469-22010-	3M11
	88470-14010-	3M11
	88472-90A01-	3M11
	88482-90A00-	3G11
P	88501-90A07-	3G11
P	88510-90A04-	3G11
N	-90A25-	3G11
	88515-87004-	3G11
P	88539-90A00-	3G11
	88578-90A02-	3M11
P	88605-90A09-	3G11
	88610-90A07-	3G11
P	88626-90A01-	3G11
N	-90A02-	3H11
	88630-14010-	3J9
		3K9
	88643-30250-	3H11
	88648-90A00-	3H11
	88650-90A03-	3H11
	88711-90A09-	3M11
	88712-90A09-	3M11
	88716-90A27-	3H11
	-90A43-	3M11
	88721-90A07-	3M11
	-90A08-	3M11
	88723-12010-	3M11
	89412-12010-	3K9
	89422-20010-	3L9
	-30020-	3L9
	89423-60020-	3K9
	89428-14070-	3L9
	-36010-	3K9
	89437-60010-	3K9
B	89452-14050-	3L9
P	-28030-	3L9
	89462-20010-	3L9
	-20040-	3L9
	89465-69015-	3K9
A	89466-20020-	3K9
A	-30010-	3K9
	89530-60020-	3K9
	89620-14410-	3K9
	89661-60010-	3L9
	-60011-	3L9
	-60020-	3L9
	-60021-	3L9
	89667-60010-	3M9
	89668-60010-	3M9

POWER TRAIN·CHASSIS GROUP (2/2)

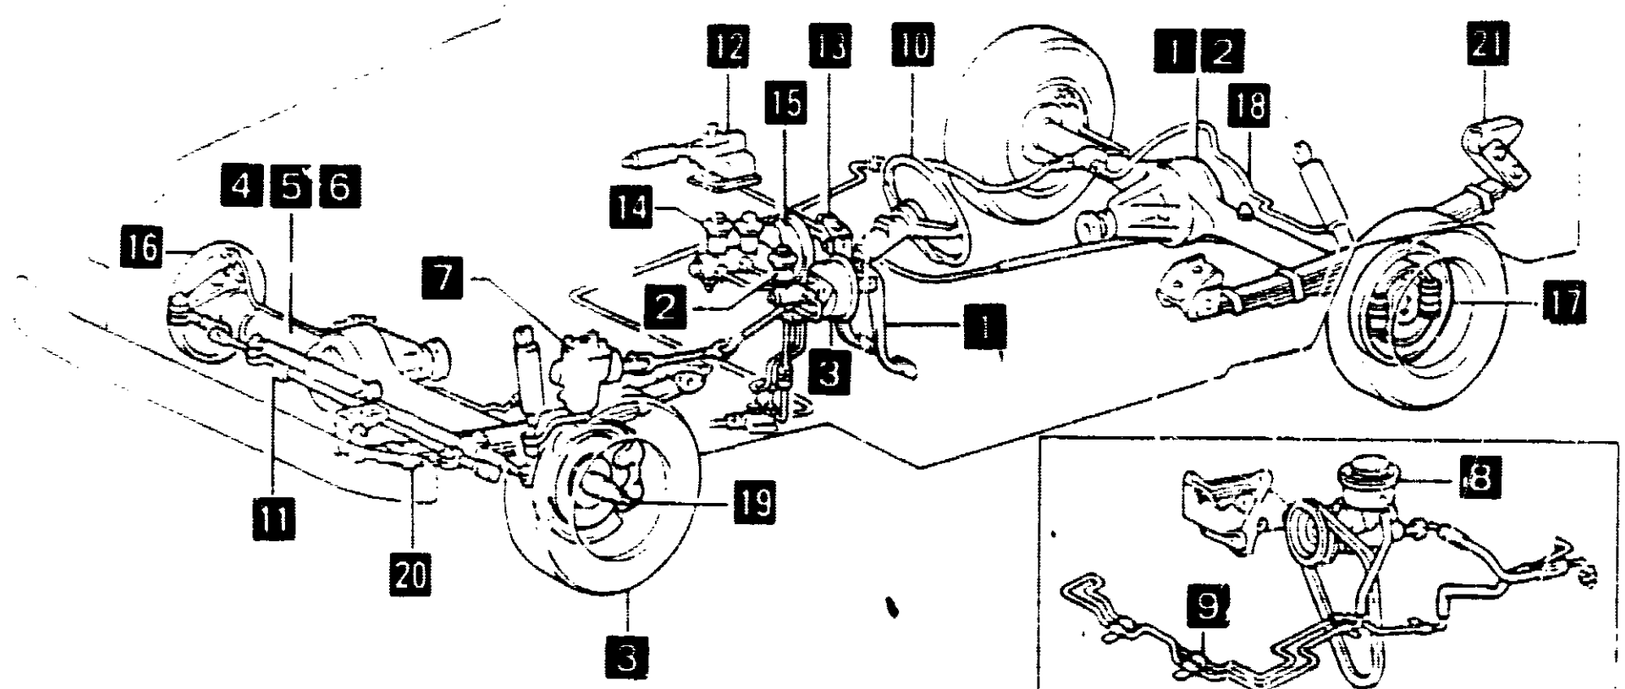


2M4 (41-01) 1



Rear Axle Housing

2H5 (41-02) 2

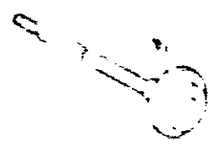


Rear Axle Shaft & Hub

2K5 (41-03) 3



Disc Wheel & Cap

2C6 (43-01) 4

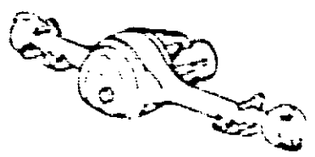

Front Axle Housing

2J6 (43-02) 5




Drive Shaft

2K6 (43-03) 6




Front Axle Hub

2M6 (45-01) 7

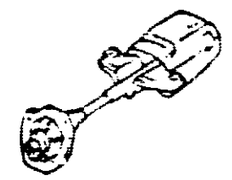


Steering Column & Shaft

2D7 (45-02) 8

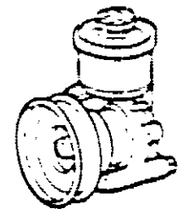

Vane Pump & Reservoir

2G7 (45-03) 9

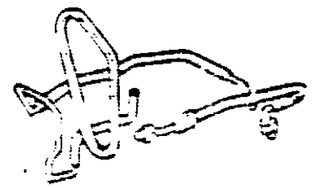

Oil Cooler & Tube

2H7 (45-04) 10



Steering Wheel

2I7 (45-05) 11




Steering Gear & Link

2A8 (46-01) 12



Parking Brake & Cable

2C8 (47-01) 13

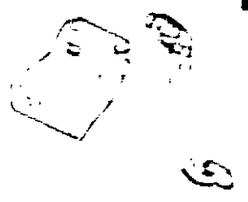

Brake Pedal & Bracket

2D8 (47-02) 14



Brake Master Cylinder

2F8 (47-03) 15



Brake Booster

2H8 (47-05) 16




Front Disc Brake Caliper

2J8 (47-06) 17



Rear Backing Plate

2M8 (47-08) 18

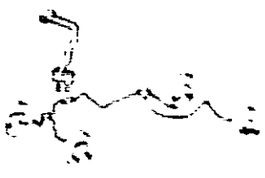


Rear Disc Brake Caliper

2E9 (48-02) 19




Front Axle Arm

2G9 (48-03) 20

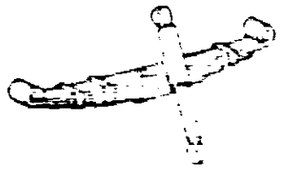

Front Spring

2K9 (48-04) 21

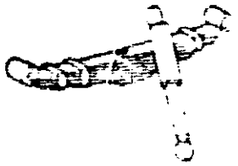


Rear Spring

MC F295

FIG. 52-53 REAR BUMPER & BUMPER STAY


(8708-)

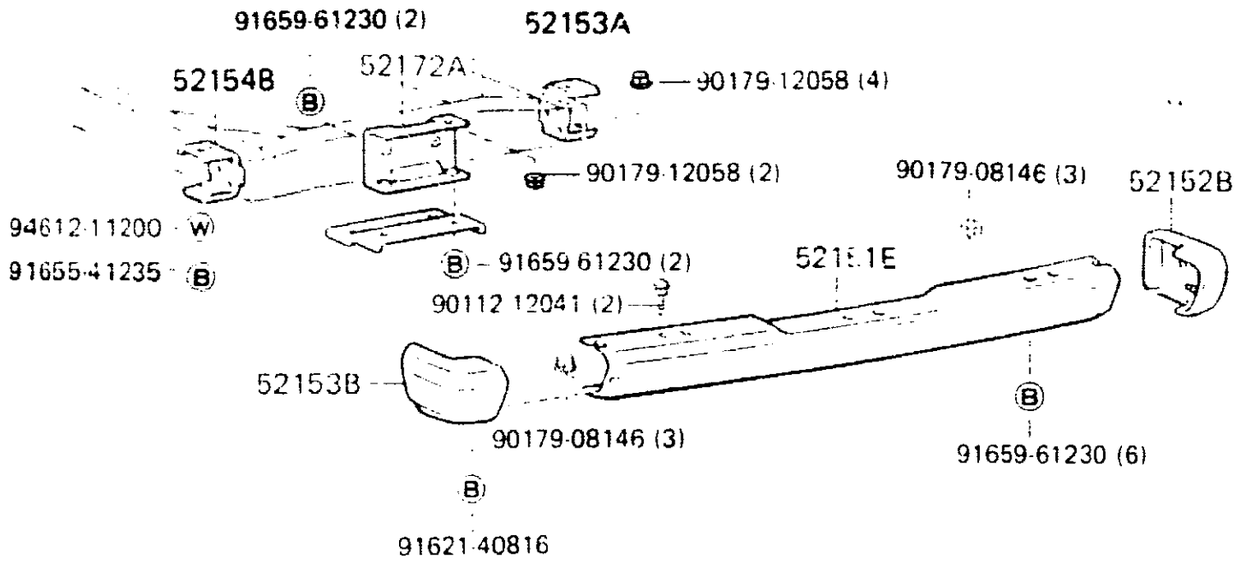

MB L867-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	52151E	BAR, REAR BUMPER					
8708-9001	FJ62			52151-60041-	1		
	52152B	EXTENSION, REAR BUMPER, RH					
8708-9001	FJ62			52106-60010-	1		
	52153A	STAY, REAR BUMPER SIDE, RH					
8708-9001	FJ62			52153-60060-	1		
	52153B	EXTENSION, REAR BUMPER, LH					
8708-9001	FJ62			52107-60010-	1		
	52154B	STAY, REAR BUMPER SIDE, LH					
8708-9001	FJ62			52154-60010-	1		
	52172A	REINFORCEMENT, REAR BUMPER BAR, CENTER					
8708-9001	FJ62			52172-60020-	1		

(8708-)

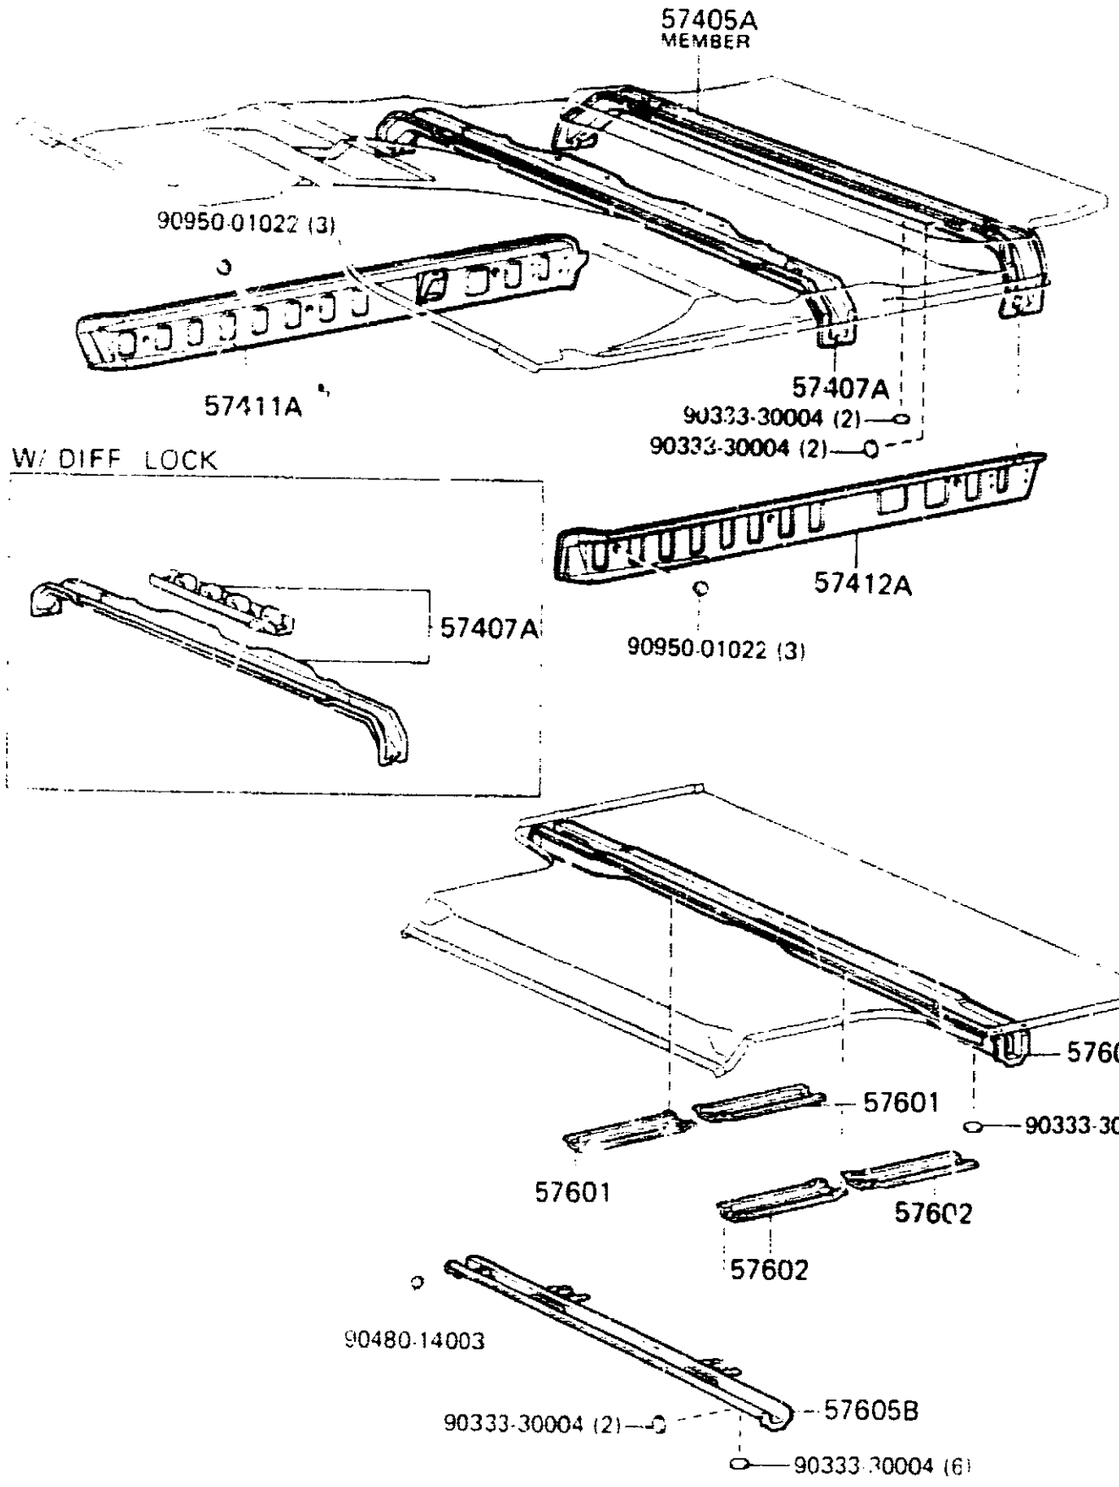

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	57405A	MEMBER SUB-ASSY, CENTER FLOOR CROSS, NO.2					
8708-9001	FJ62			57405-90A07-	1		
	57407A	MEMBER SUB-ASSY, CENTER FLOOR CROSS					
8708-9001	FJ62			57407-90A43-	1		
8708-9001	FJ62..CND	W(DIFFERENTIAL LOCK)		57407-90A46-	1		
8708-9001	FJ62..USA	W(DEFFERENTIAL LOCK)		〃	1		
	57411A	MEMBER, FLOOR SIDE, INNER RH					
8708-9001	FJ62			57401-90A05-	1		
	57412A	MEMBER, FLOOR SIDE, INNER LH					
8708-9001	FJ62			57402-90A05-	1		
	57601	MEMBER SUB-ASSY, REAR FLOOR SIDE, RH					
8708-9001	FJ62			57655-90A03-	2		
	57602	MEMBER SUB-ASSY, REAR FLOOR SIDE, LH					
8708-9001	FJ62			57635-90A03-	2		
	57605B	MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.1					
8708-9001	FJ62			57605-90A02-	1		
	57606C	MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.2					
8708-9001	FJ62			57606-90A09-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	61197A	COVER, FRONT PILLAR, RH					
8708-9001	FJ62			61197-90A00-	1		
	61198A	COVER, FRONT PILLAR, LH					
8708-9001	FJ62			61197-90A00-	1		
	61211	RAIL, ROOF SIDE, OUTER RH					
8708-9001	FJ62			61211-90A01-	1		
	61212	RAIL, ROOF SIDE, OUTER LH					
8708-9001	FJ62			61212-90A01-	1		
	61231	RAIL, ROOF SIDE, INNER RH					
8708-9001	FJ62			61231-90A03-	1		
	61232	RAIL, ROOF SIDE INNER, LH					
8708-9001	FJ62			61232-90A02-	1		
	61263B	CHANNEL, ROOF DRIP SIDE, FRONT RH					
8708-9001	FJ62			61263-90A01-	1		
	61264B	CHANNEL, ROOF DRIP SIDE, FRONT LH					
8708-9001	FJ62			61264-90A01-	1		
	61267A	CHANNEL, ROOF DRIP SIDE, REAR RH					
8708-9001	FJ62			61267-90A00-	1		
	61268	CHANNEL, ROOF DRIP SIDE, REAR LH					
8708-9001	FJ62			61268-90A00-	1		


PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	61301	PILLAR SUB-ASSY, CENTER BODY, RH					
8708-9001	FJ62			61330-90A04-	1		
	61302	PILLAR SUB-ASSY, CENTER BODY, LH					
8708-8809	FJ62			61340-90A07-	1		002
8809-9001	FJ62..WGG			61340-90A05-	1	003	
	61341C	PILLAR, CENTER BODY, INNER UPPER RH					
8708-9001	FJ62			61341-90A00-	1		
	61342C	PILLAR, CENTER BODY, INNER UPPER LH					
8708-9001	FJ62			61342-90A00-	1		
	61345B	PILLAR, CENTER BODY, INNER LOWER RH					
8708-9001	FJ62			61345-90A00-	1		
	61346B	PILLAR, CENTER BODY, INNER LOWER LH					
8708-9001	FJ62			61346-90A00-	1		
	61411	PANEL, ROCKER, OUTER RH					
8708-9001	FJ62			61401-90A06-	1		
	61412	PANEL, ROCKER, OUTER LH					
8708-9001	FJ62			61402-90A06-	1		
	61503B	REINFORCEMENT SUB-ASSY, QUARTER LOCK PILLAR, RH					
8708-9001	FJ62			61503-90A00-	1		
	61504B	REINFORCEMENT SUB-ASSY, QUARTER LOCK PILLAR, LH					
8708-9001	FJ62			61504-90A00-	1		


FIG. 67-51 FRONT DOOR PANEL & GLASS


791430M-01283

(8708-)

ILLUST. NO. 1 OF 2

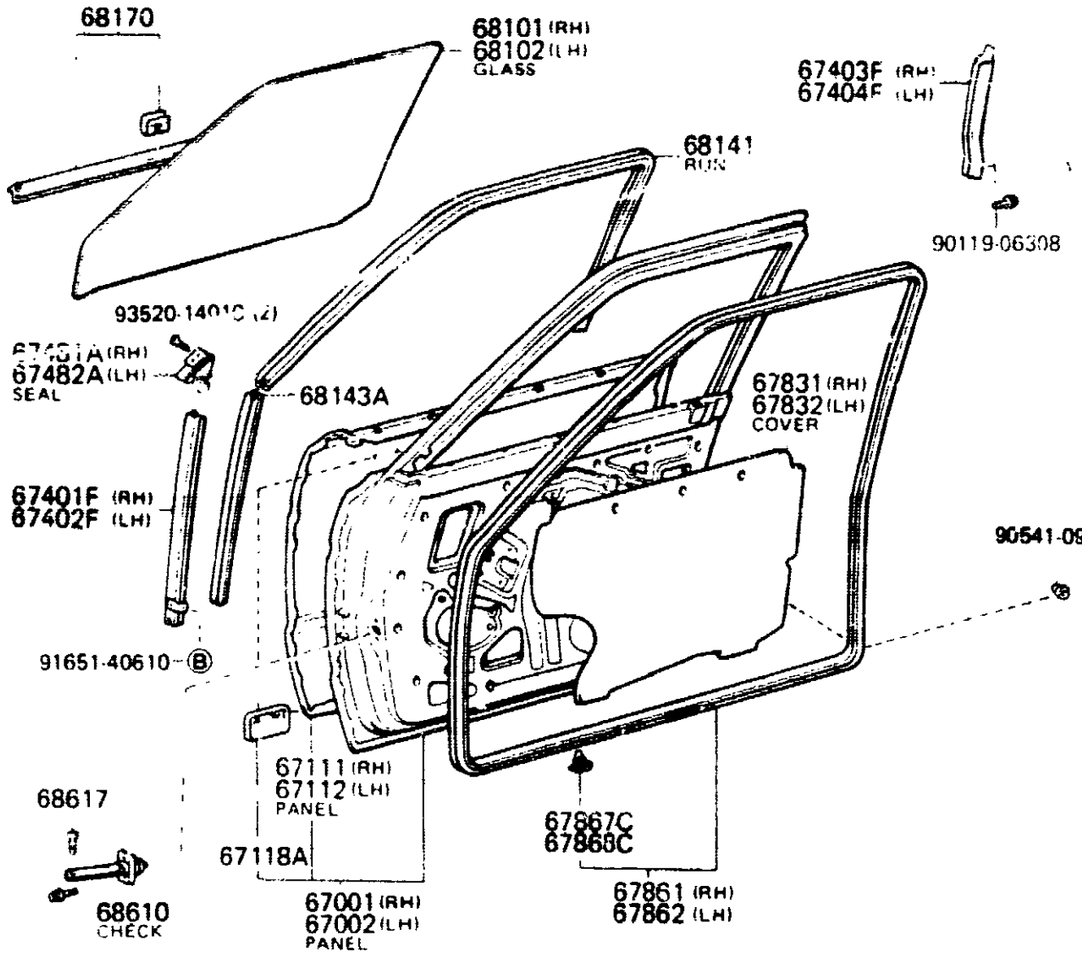

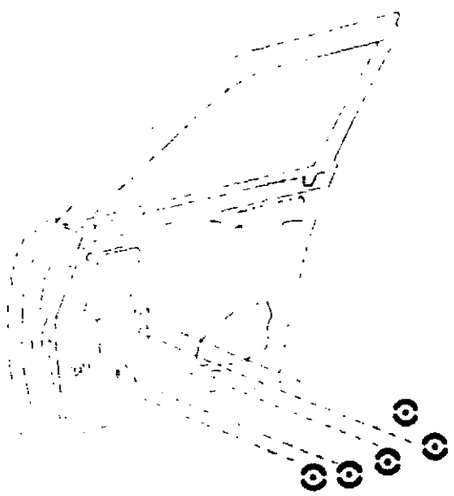


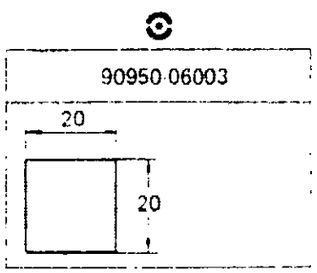

MB M003

(8708-)


ILLUST. NO. 2 OF 2

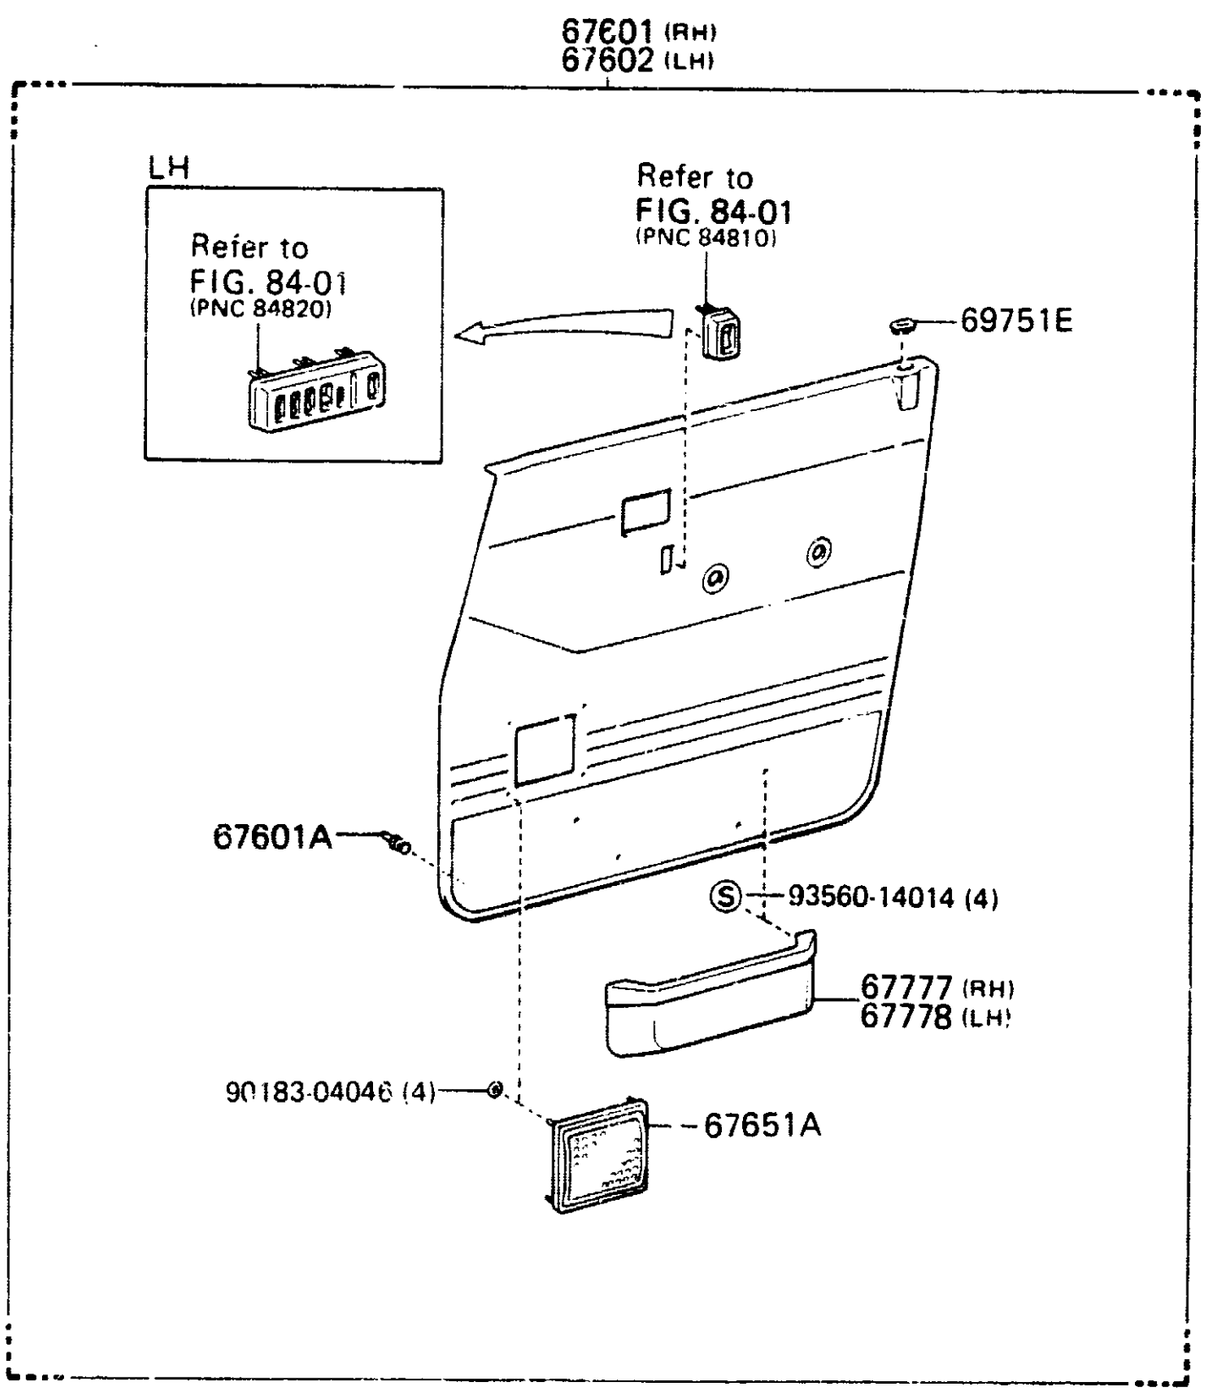


MB M004-A

FIG. 67-57 REAR DOOR WINDOW REGULATOR & HINGE

(8708-)

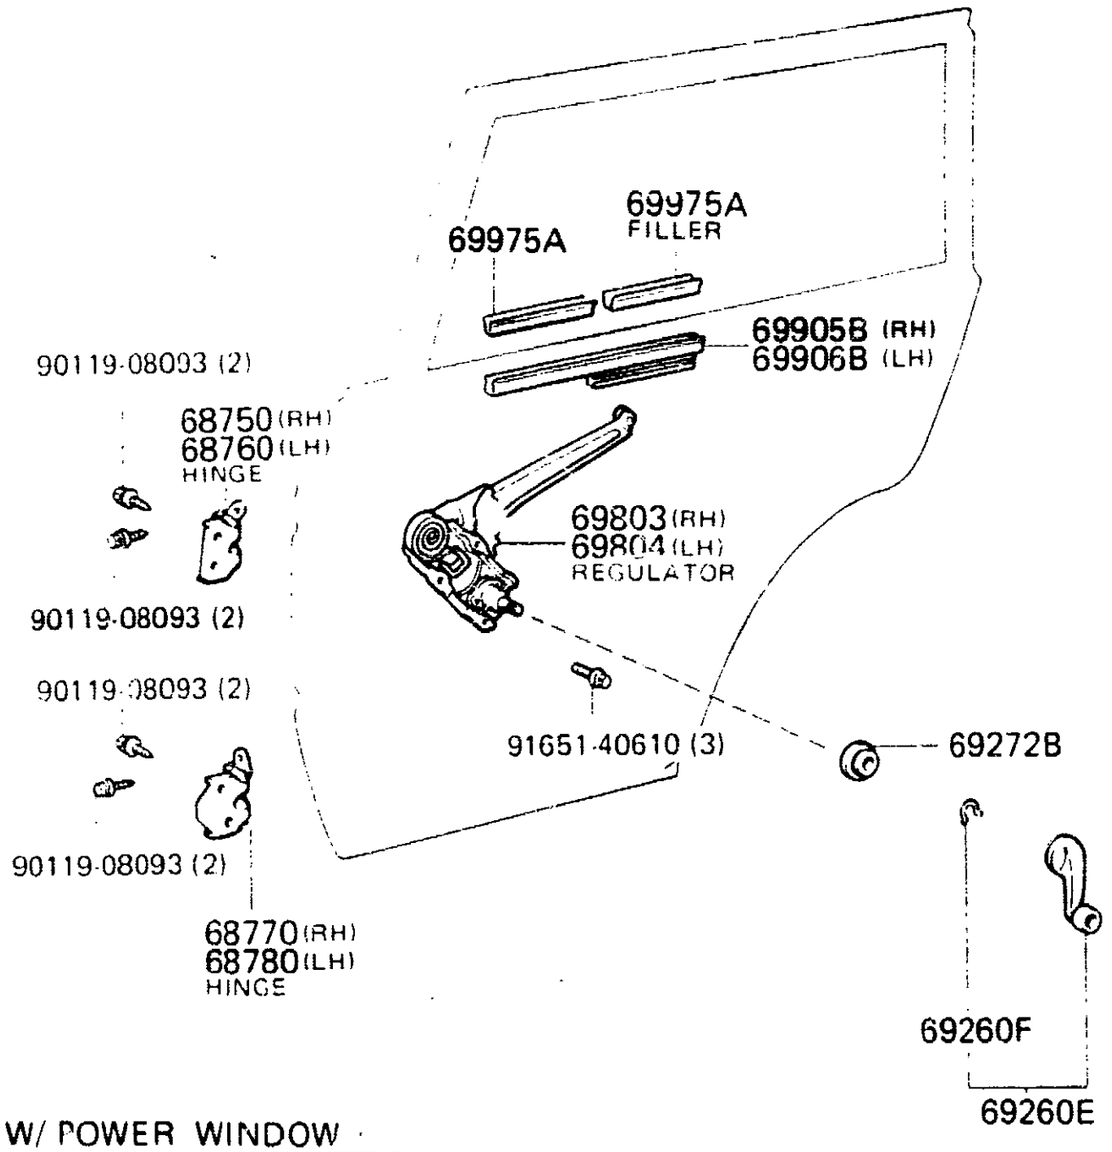


W/ POWER WINDOW

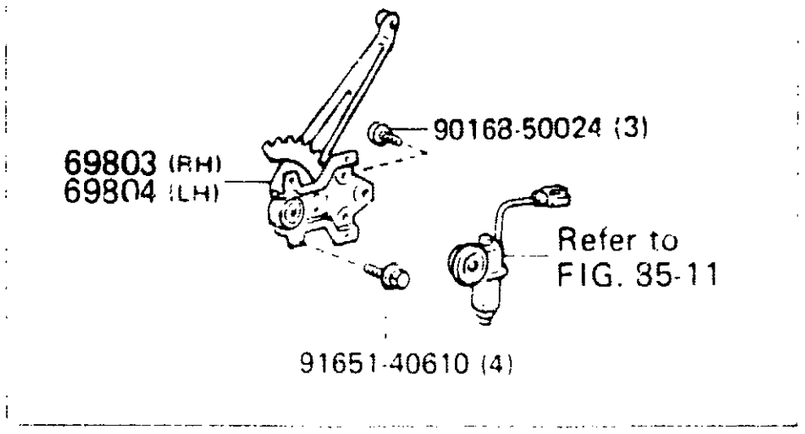


MB L955


	PROD. DATE	MODELS	DESCRIPTION		PART NUMBER	QTY.	REV. REF	
		68750	**HINGE ASSY, REAR DOOR, UPPER RH**					
	8708-9001	FJ62			68710-30080-	1		
		68760	**HINGE ASSY, REAR DOOR, UPPER LH**					
	8708-9001	FJ62			68720-30020-	1		
		68770	**HINGE ASSY, REAR DOOR, LOWER RH**					
	8708-9001	FJ62			68730-14020-	1		
		68780	**HINGE ASSY, REAR DOOR, LOWER LH**					
	8708-9001	FJ62			68740-14020-	1		
		69260E	**HANDLE ASSY, REAR DOOR WINDOW REGULATOR**					
P	8708-9001	FJ62	GRAY(TRIM1)		69260-12010-03	2		
P	8708-9001	FJ62	BROWN(TRIM4)		69260-12010-46	2		
		69260F	**RING, SHAFT SNAP(FOR REAR DOOR WINDOW REGULATOR HANDLE)**					
	8708-9001	FJ62			90520-01002-	2		
		69272B	**PLATE, REAR DOOR REGULATOR INSIDE HANDLE**					
	8708-9001	FJ62	NATURAL WHITE(TRIM 1,4)		69285-22010-08	2		
		69803	**REGULATOR SUB-ASSY, REAR DOOR WINDOW, RH**					
	8708-9001	FJ62	W(POWER WINDOW)		69803-90A00-	1		
	8708-9001	FJ62			69830-90A01-	1		
		69804	**REGULATOR SUB-ASSY, REAR DOOR WINDOW, LH**					
	8708-9001	FJ62	W(POWER WINDOW)		69804-90A00-	1		
	8708-9001	FJ62			69840-90A01-	1		


(8708-)

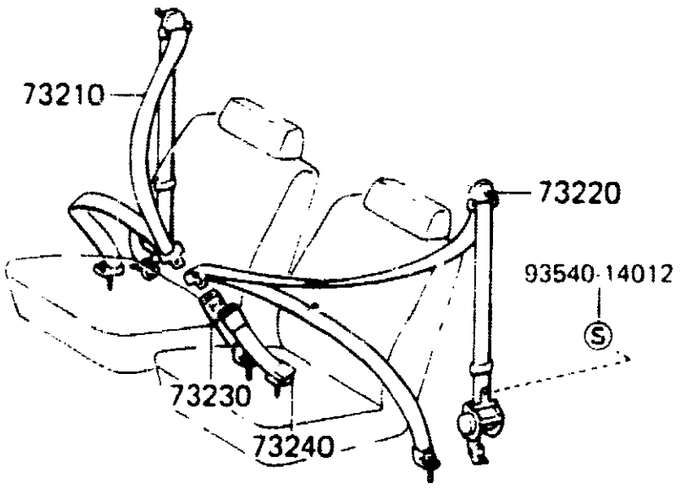

W/ ELR

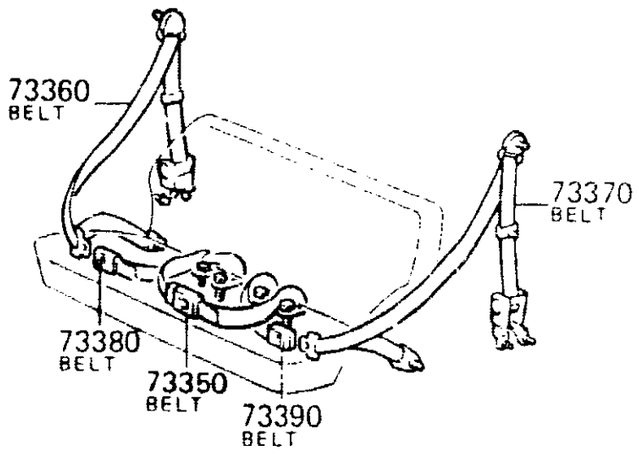

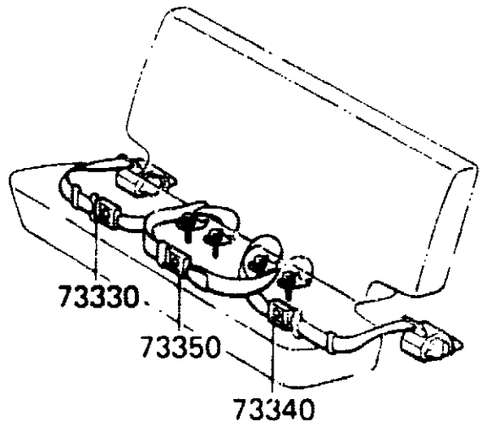

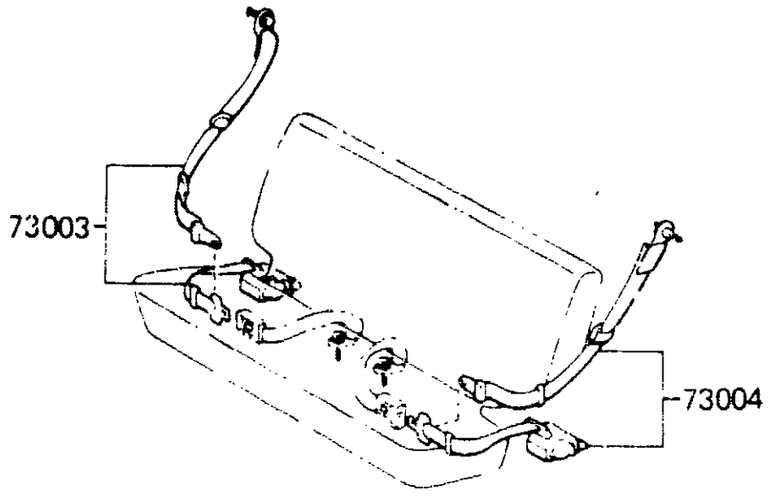


MB M013-B

	PRCD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		73003	BELT SET, REAR SEAT 3 POINT TYPE, RH					
	8708-8808	FJ62..WGG	GRAY(TRIM1)		73003-90A00-03	1		002
	8708-8808	FJ62..WGG	SEPIA BROWN(TRIM4)		73003-90A00-06	1		002
		73004	BELT SET, REAR SEAT 3 POINT TYPE, LH					
	8708-8808	FJ62..WGG	GRAY(TRIM1)		73003-90A00-03	1		002
	8708-8808	FJ62..WGG	SEPIA BROWN(TRIM4)		73003-90A00-06	1		002
		73210	BELT ASSY, FRONT SEAT OUTER, RH					
	8708-8808	FJ62	GRAY(TRIM1)		73210-90A26-03	1		002
	8708-8808	FJ62	SEPIA BROWN(TRIM4)		73210-90A26-06	1		002
P	8808-9001	FJ62..WGG	GRAY(TRIM1)		73210-90A29-03	1	003	
P	8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		73210-90A29-06	1	003	
		73220	BELT ASSY, FRONT SEAT OUTER, LH					
	8708-8808	FJ62	GRAY(TRIM1)		73220-90A15-03	1		002
	8708-8808	FJ62	SEPIA BROWN(TRIM4)		73220-90A15-06	1		002
P	8808-9001	FJ62..WGG	GRAY(TRIM1)		73220-90A17-03	1	003	
P	8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		73220-90A17-06	1	003	
		73230	BELT ASSY, FRONT SEAT INNER, RH					
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		73230-90A17-06	1		
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		73230-90A17-13	1		
		73240	BELT ASSY, FRONT SEAT INNER, LH					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		73240-90A20-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		73240-90A20-06	1		

(8708-)


ILLUST.NO. 1 OF 2

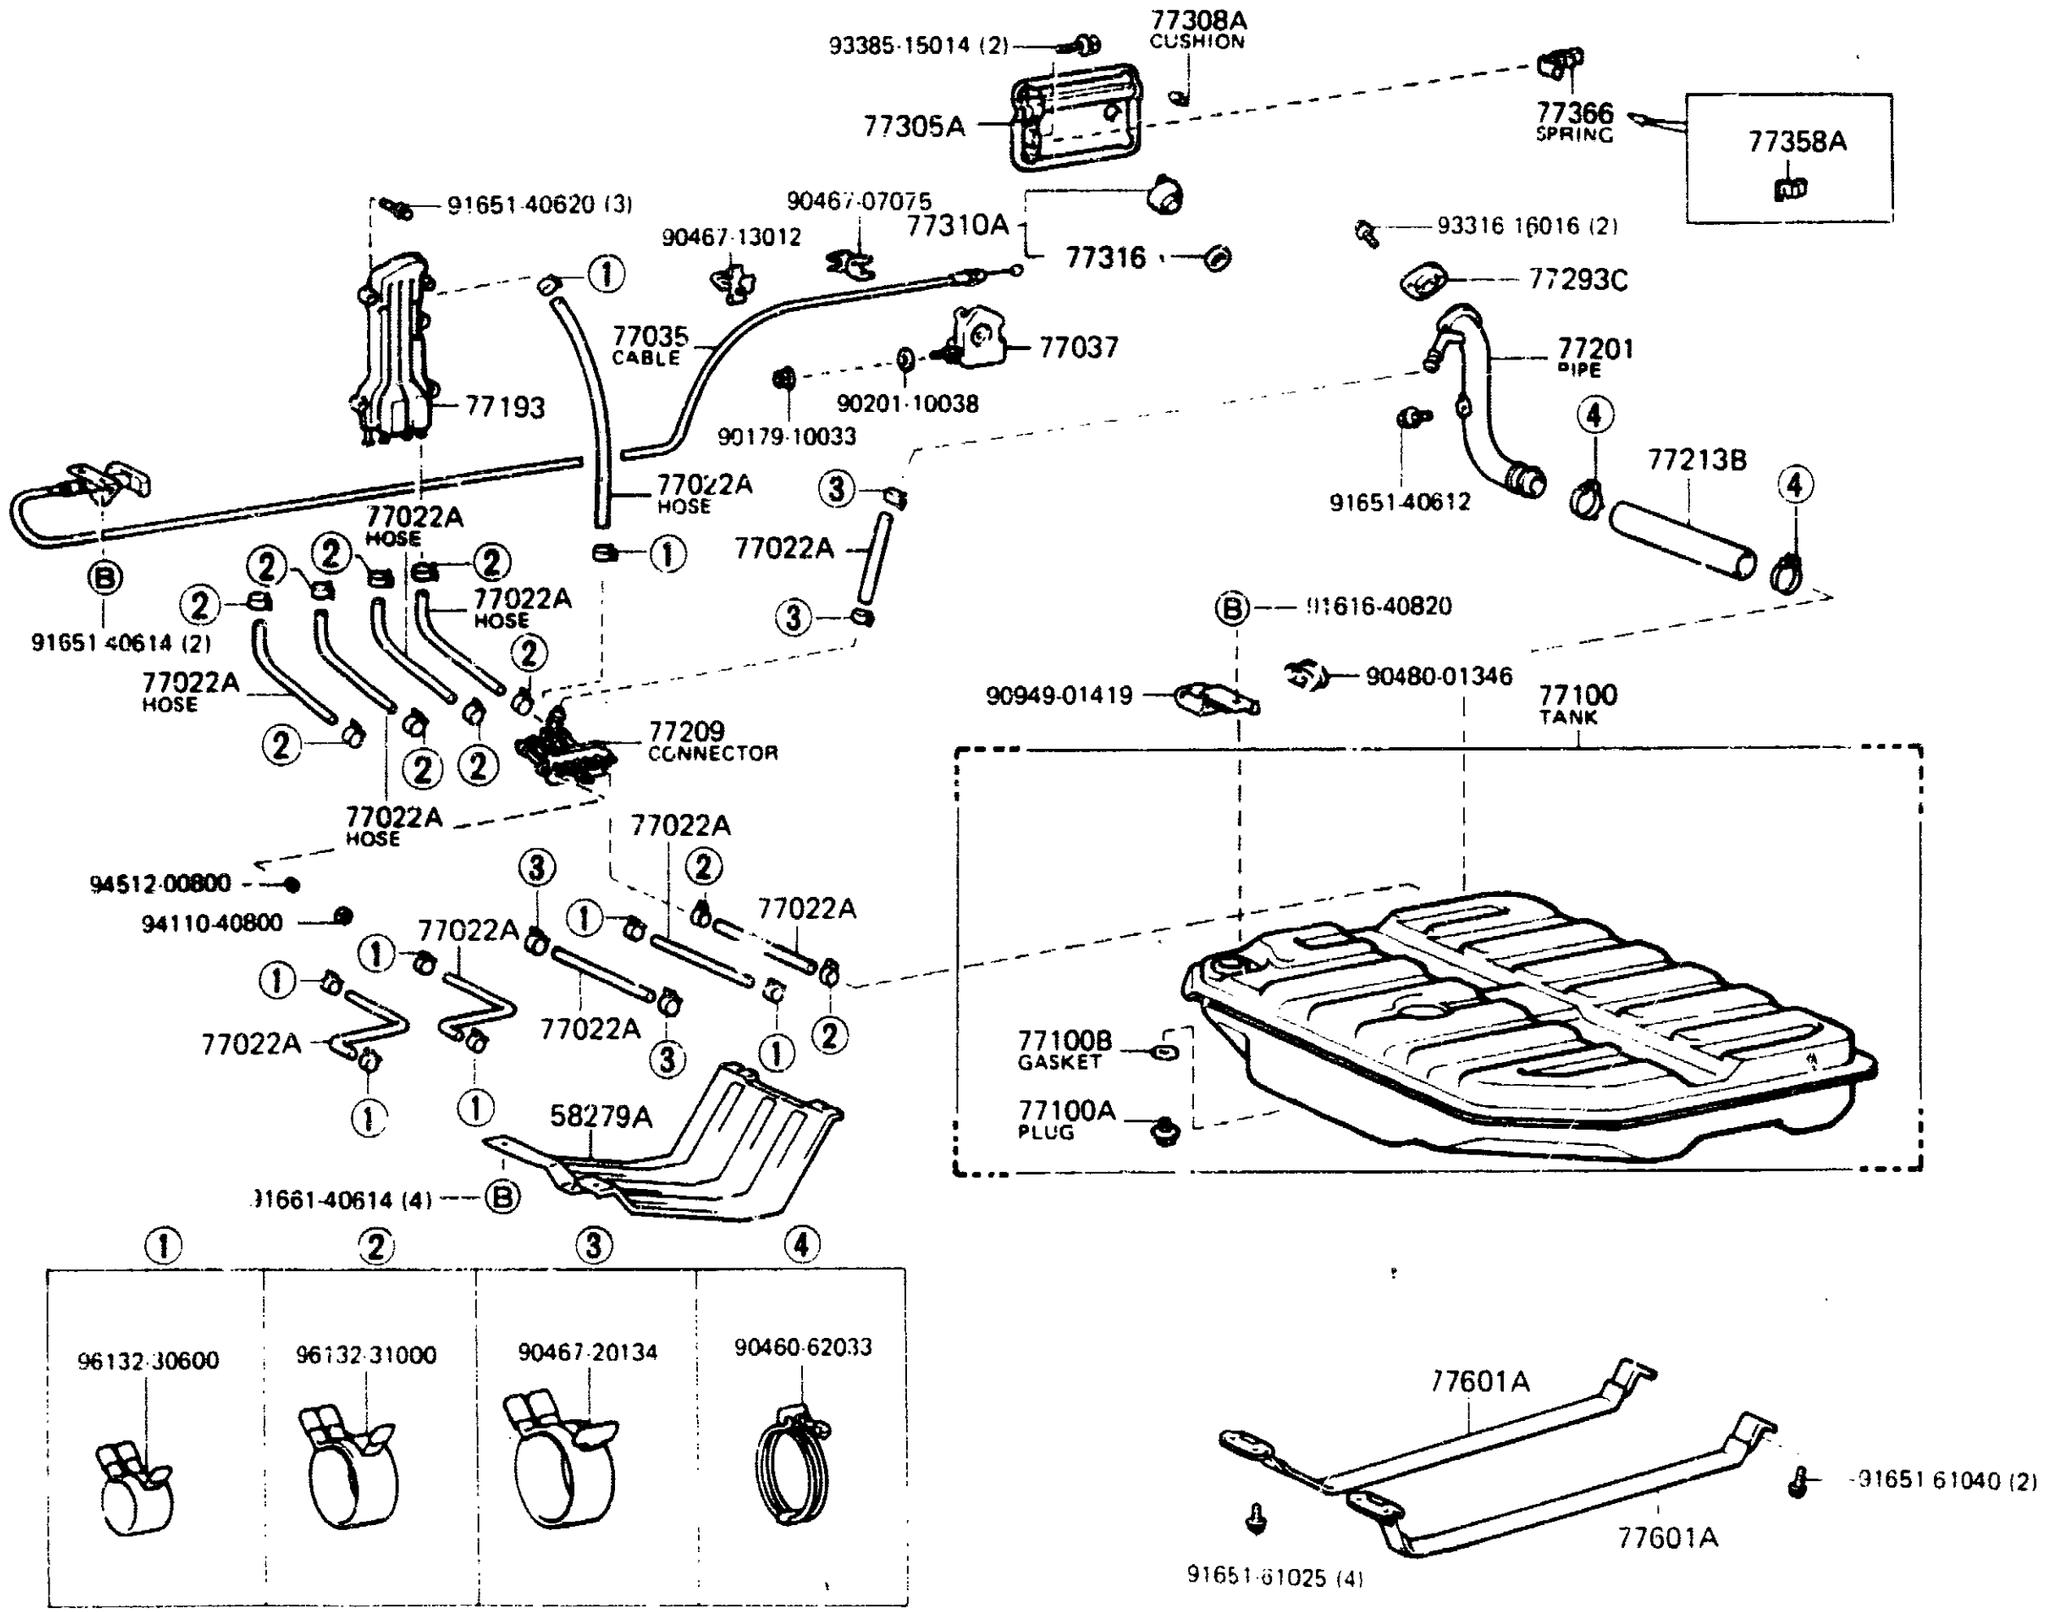

MB L816-B

FIG. 81-13 REAR LICENSE PLATE LAMP

(8708-)

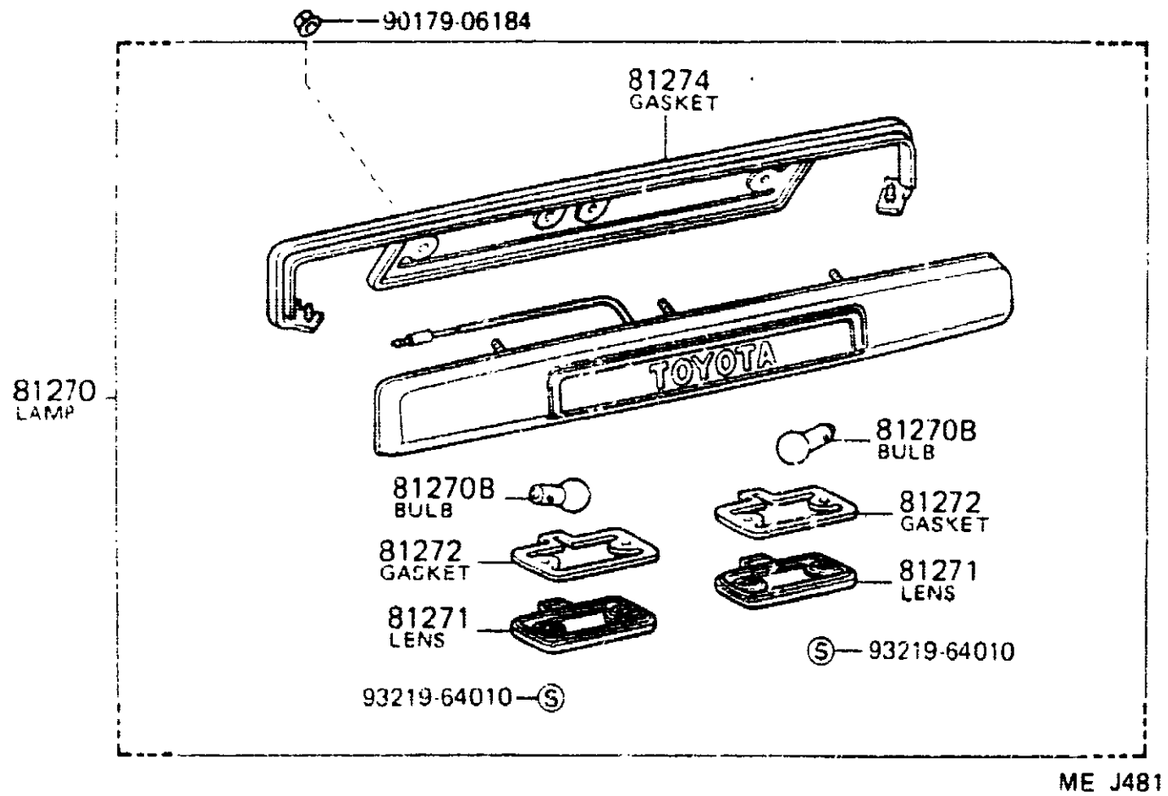


ME J481

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		81270	LAMP ASSY, LICENSE PLATE					
P	8708-9001	FJ62			81270-95A07-	1		002
		81270B	BULB (FOR LICENSE PLATE LAMP)					
P	8708-9001	FJ62	12V 7.5W		99132-11075-	2		002
		81271	LENS, LICENSE PLATE LAMP					
P	8708-9001	FJ62			81271-13070-	2		002
		81272	GASKET, LICENSE PLATE LAMP LENS					
P	8708-9001	FJ62			81272-13070-	2		002
		81274	GASKET, LICENSE PLATE LAMP BODY					
P	8708-9001	FJ62			81274-95A00-	1		002

(8708-)

ILLUST.NO.5 OF 5

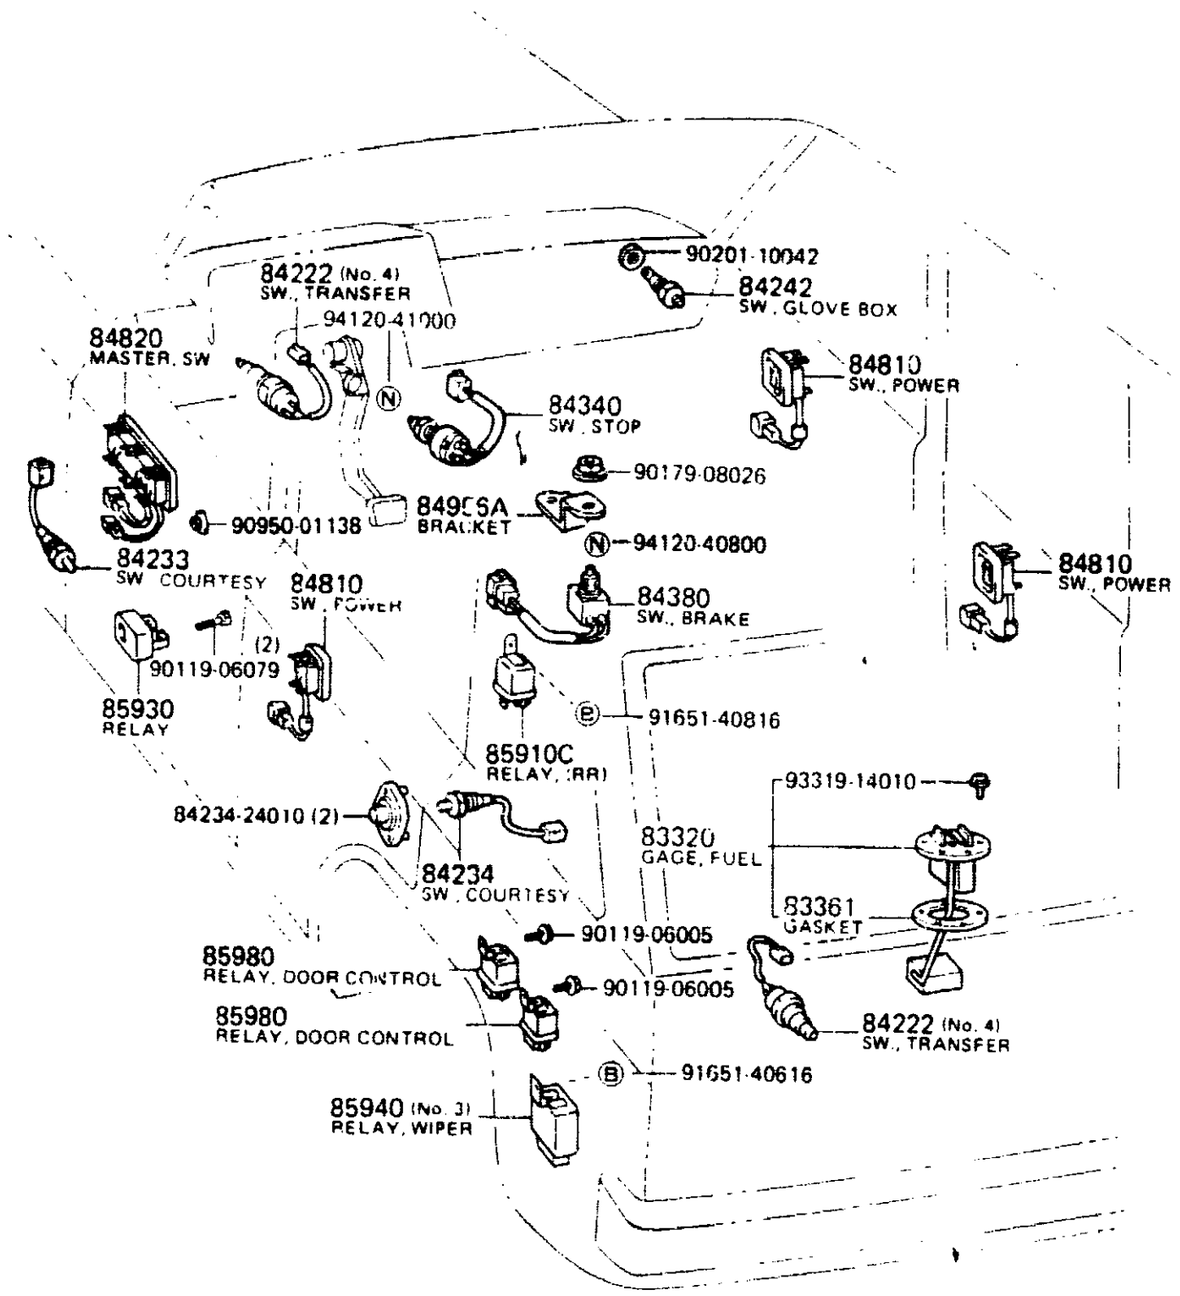

ME J642-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	27790	RELAY ASSY, CHARGE LAMP					
8708-9001	3FE..FJ62			27790-13010-	1		
	28371	RELAY, IGNITION					
8708-9001	3FE..FJ62			90987-02004-	1		
	81980	FLASHER ASSY, TURN SIGNAL					
8708-9001	FJ62			81980-16010-	1		
	82600F	FUSE, FUSE BLOCK					
8708-9001	FJ62	10A		90982-09002-	2		
8708-9001	FJ62	15A		90982-09003-	9		
8708-9001	FJ62	20A		90982-09004-	2		
8708-9001	FJ62	7.5A		90982-09005-	6		
	82600G	PLATE, CAUTION (FOR FUSE)					
8708-8808	FJ62			82683-90A20-	1		002
8808-9001	FJ62..WGG			82683-90A21-	1	003	
	82616	PULLER, FUSE					
8708-9001	FJ62			82616-12010-	1		
	82650	BREAKER ASSY, WIRING CIRCUIT, NO.1					
8708-9001	FJ62	14A		82650-12020-	1		
8708-9001	FJ62	30A		82650-20011-	2		
	83320	GAGE ASSY, FUEL SENDER					
8708-9001	FJ62			83320-69015-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	85361U	BRACKET, HEADLAMP CLEANER WASHER					
8708-9001	FJ62			85361-10070-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		88626A	HOLDER, THERMISTOR CONTINUED					
P	8708-8909	FJ62..USA			88626-90A01-	1		
N	8909-9001	FJ62..CND			88626-90A02-	1		
N	8909-9001	FJ62..WGG..USA			〃	1		
		88645G	SWITCH, PRESSURE					
	8708-9001	FJ62..CND			88645-30250-	1		
	8708-9001	FJ62..USA			〃	1		
		88648	WIRING, COOLER, NO.1					
	8708-9001	FJ62..CND			88648-90A00-	1		
	8708-9001	FJ62..USA			〃	1		
		88650	AMPLIFIER ASSY, COOLER STABILIZER					
	8708-9001	FJ62			88650-90A03-	1		
		88716F	PIPE, COOLER REFRIGERANT LIQUID, F (FOR COOLER UNIT)					
	8708-9001	FJ62..CND			88716-90A27-	1		
	8708-9001	FJ62..USA			〃	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T

	PART NUMBER	LOCATION
	89669-60010-	3M9
P	90096-90022-	3C12
	90099-01458-	3C10
	-05141-	3C10
	-07048-	1E4
	-10110-	1E4
	-10113-	1G4
	-10116-	1E4
	-10133-	3B12
	-14020-	1D4
	-17112-	1G4
	-32103-	3D10
	-33332-	3D10
		3E10
	-52065-	1E4
	90101-10439-	2I8
	-12021-	2J8
	-12060-	2H8
	90105-06052-	2F5
		2G6
	-06069-	2I2
	-08114-	2E5
		2G6
	-10096-	2E2
		2K1
P	-10115-	2E1
	-10221-	1H3
	-11013-	2K4
B	-11030-	2E1
	-12018-	3J7
	-12053-	2C5
		2E6
	-13005-	1F1
	-14033-	1H1
	90106-12022-	2E9
	90109-06008-	2D8
	-10091-	2D5
	90113-05034-	2A1
	-10003-	2I5
	90114-11124-	2A4
	90116-06022-	1H1
	-08325-	2I5
		2K6
P	-10074	2B5
P		2E6
	-10075-	2B5
		2E6
	-10076-	2B5
B	-10087-	1C3
	-10122-	2E6
	-10124-	2B5
	-12007-	2E9
	-12011-	1C3
	90117-14032-	2L9
	-14036-	2I9
	-14051-	2I9
	-14180-	2L9
	90119-08427-	2E1
	-08523-	2E1
	90170-08005-	1D2
	-10198-	1A2
B	-22058-	2L7
	90171-14042-	2L7
	90175-08008-	1F3

	PART NUMBER	LOCATION
	90176-08014-	1G1
	90179-06158-	3C10
	-08026-	3A10
	-10070-	1E3
	-12086-	2H7
	-22005-	2A4
	-22010-	1B2
	-22011-	2C5
		2H6
	-26004-	2G2
	90201-06566-	2B3
P	-12042-	2J3
	-16012-	2J3
	-16013-	2H1
	-22005-	2A4
	-22007-	2C5
		2H6
	-30003-	2J7
	-35002-	2E4
	-40551-	2C5
		2H6
	-40552-	2C5
		2H6
	-40553-	2C5
		2H6
	-40554-	2C5
		2H6
	-40555-	2C5
		2I6
	-40556-	2C5
		2I6
	-40557-	2C5
		2I6
	-40558-	2C5
		2I6
	-40559-	2C5
		2I6
	-40560-	2C5
		2I6
	-40561-	2C5
		2I6
	-79001-	2D5
		2F6
	-79002-	2D5
		2F6
	-79003-	2D5
		2F6
	-79004-	2D5
		2F6
	-79005-	2D5
		2F6
	-79006-	2D5
		2F6
	-79007-	2D5
		2F6
	-79008-	2D5
		2F6
	-79009-	2D5
		2F6
	-79010-	2D5
		2F6
	-79011-	2D5
		2F6
	-79012-	2D5

	PART NUMBER	LOCATION
	90201-79012-	2F6
	-79013-	2D5
		2F6
	-79014-	2D5
		2F6
	-79015-	2D5
		2F6
	-79016-	2D5
		2F6
	-79017-	2D5
		2F6
	-79018-	2D5
		2F6
	-79019-	2D5
		2F6
	-79020-	2D5
		2F6
	-79021-	2D5
		2F6
	-79022-	2D5
		2F6
	-79023-	2D5
		2F6
	90202-10103-	2C9
P	90206-12001-	2J3
	90209-52001-	2E2
	-52002-	2E2
	-52003-	2E2
	-52004-	2E2
	90210-10001-	2L7
	-13001-	1G1
	90213-06013-	2K8
	-07010-	2K8
	90214-42030-	2L6
	90215-42025-	2L6
	90240-06158-	2I8
	-08042-	2B8
	-08128-	2G4
	-09001-	2B6
	-10148-	2A6
	-10157-	2G4
	90241-10017-	1A2
	902 0-08068-	2K8
	-10017-	2C8
	90250-02016-	2D3
		2F3
	-03036-	2D3
	-03050-	2E3
	-03051-	2A3
B		2C3
		2E3
		2M2
	-04054-	2A3
	-05008-	2E7
A	-07057-	2I5
		2K6
	-08024-	2H4
	-08120-	1F1
	-10006-	2B4
	-10192-	1I1
		2G1
	90253-16014-	1H1
	-17003-	1I1
	-18003-	1I1


	PART NUMBER	LOCATION
	90254-04012-	2J3
	-05016-	2F4
	90256-04001-	2B1
B	90280-03009-	1E2
B		2E6
	-05003-	2E7
P	-05010-	1B2
P		1C2
	90281-07004-	1B2
	90282-03005-	2F3
B	-03006-	2D3
		2E3
		2F3
		2G3
	-03007-	2D3
		2G3
	90301-06005-	2H1
P	-06196-	2H1
	-07001-	1K4
		1L4
	-09008-	2E2
		2K1
	-09173-	2I1
	-11006-	2K3
	-14001-	2E8
	-18004-	2J1
	-19006-	1K4
	-21176-	1H2
	-22001-	2E7
	-22003-	2C3
	-24002-	2C3
	-26003-	2M2
	-28003-	2C3
	-29003-	2B3
		2M2
	-32002-	2J7
	-33002-	2K7
	-33006-	2C3
	-34004-	2D4
	-34005-	2D4
	-37004-	2B3
	-51001-	2K7
	-53002-	2F7
	-59003-	2K1
	-60001-	2D7
	-60122-	2A7
	-62004-	2A2
	-64002-	2K7
	-64005-	2K7
B		
	-65145-	2K7
	-94002-	2F2
	-99027-	2A2
		2K1
B		
	-99028-	2A2
	-99029-	2F1
	-99030-	2D2
		2F2
		2L1
	99031-	2D2
		2L1
	90310-09001-	2J1
	-35001-	2I5
	90311-12002-	2J3
	-13066-	2H4
	-19002-	2K7


	PART NUMBER	LOCATION
	90311-24001-	2D7
	-33085-	2H6
	-38035-	2C5
		2E6
	-38134-	2C5
		2E6
	-42010-	2F1
	-45008-	1J1
	-47001-	2I5
	-48009-	2B4
	-48010-	2B4
	-62001-	2J5
		2K6
	-99005-	1B2
	90312-32002-	2K7
P	90313-13001-	2F4
P		
	-93001-	2I5
	-93011-	2F9
		1L4
	90316-48003-	2A4
	90331-48010-	1C2
	90334-07009-	1F1
	90339-04009-	2D3
	-04010-	2F3
	-04011-	2E3
	-04012-	2F3
	-04014-	2A1
	-04015-	2D3
	-04016-	2G3
	-04017-	2D3
		2E3
		2F3
		2G3
	-04019-	2E3
	-04021-	2F3
	-05008-	2D3
	-05009-	2G3
	-06004-	2D3
	-06008-	2G3
	-06009-	2D3
	90340-14001-	1F1
	-25001-	2M7
P	90341-08001-	2G1
	-12012-	1I1
	-15001-	2F4
	-16010-	2H1
	-18006-	2B4
		2F5
		2H6
	-18057-	2B4
		2F5
		2H1
		2H6
	-26001-	2F5
		2G6
	90344-54003-	1I1
	90345-31025-	1C3
	-53020-	2E9
	90360-06004-	2B3
		2C3
	-06021-	2K7
	-09001-	2B3
	-10003-	2E5
		2F4
		2G6


	PART NUMBER	LOCATION
	90363-17004-	2E7
	-18001-	2M6
	-28001-	2M6
	-30007-	2M6
	-35013-	2D4
		2E4
	-35022-	2G2
	-45008-	2G2
	90364-17010-	2E4
	-32003-	2K7
	-38012-	2D4
	-40001-	2D4
	90365-47013-	2I5
	90366-17001-	2F9
P	-30011-	2C5
P		2E6
B	-30038-	2C5
B		2E6
	-35011-	2E4
	-35054-	2E4
	-40004-	2C5
		2E6
B	-40059-	2C5
B		2E6
	-60002-	2D5
		2F6
P	90368-45066-	2D5
P		2H6
	-45087-	2J5
		2L6
	-49084-	2J5
		2K6
B	-50024-	2D5
B		2H6
	90369-22004-	2K7
	90374-25004-	2L1
	-28007-	2L1
	-30003-	2J7
	-34001-	2A2
		2B2
		2H2
		2L1
P	90381-33001-	2E9
B	-33002-	2E9
	90385-10064-	2D9
	-12029-	2A8
	-16008-	2A1
	-19003-	2I9
	-19057-	2A10
	90386-08155-	3M7
	-09009-	2F5
		2G6
	-13014-	2B6
	-13192-	2C8
	90387-06065-	2A1
	-08002-	2B7
B	-08099-	2C9
B		2D9
	-09006-	2J9
	-09011-	2A6
	-10004-	2C8
	90389-02001-	3D9
	-08005-	2B1
	-16002-	2H9


ILLUSTRATED INDEX


H16

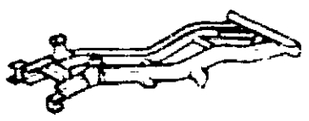
3A1 (51-51) 1

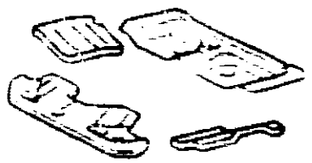Frame

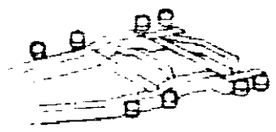
3C1 (51-52) 2

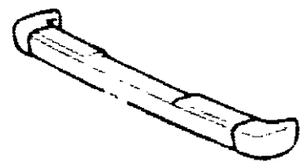Crossmember & Under Cover

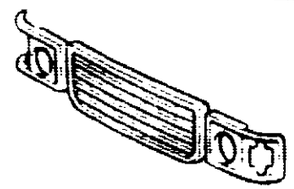
3E1 (52-51) 3

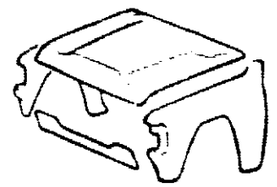Cab & Body Mounting


3G1 (52-52) 4

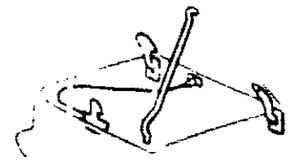Front Bumper & Stay


3I1 (53-51) 5

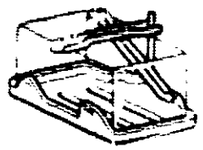Radiator Grille

3J1 (53-53) 6

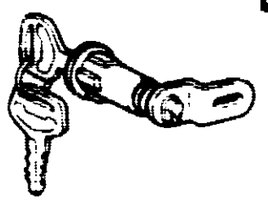Hood & Front Fender


3L1 (53-54) 7

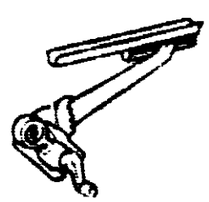Hood Lock & Hinge


3L6 (74-54) 21

Battery Carrier


3A6 (67-65) 20

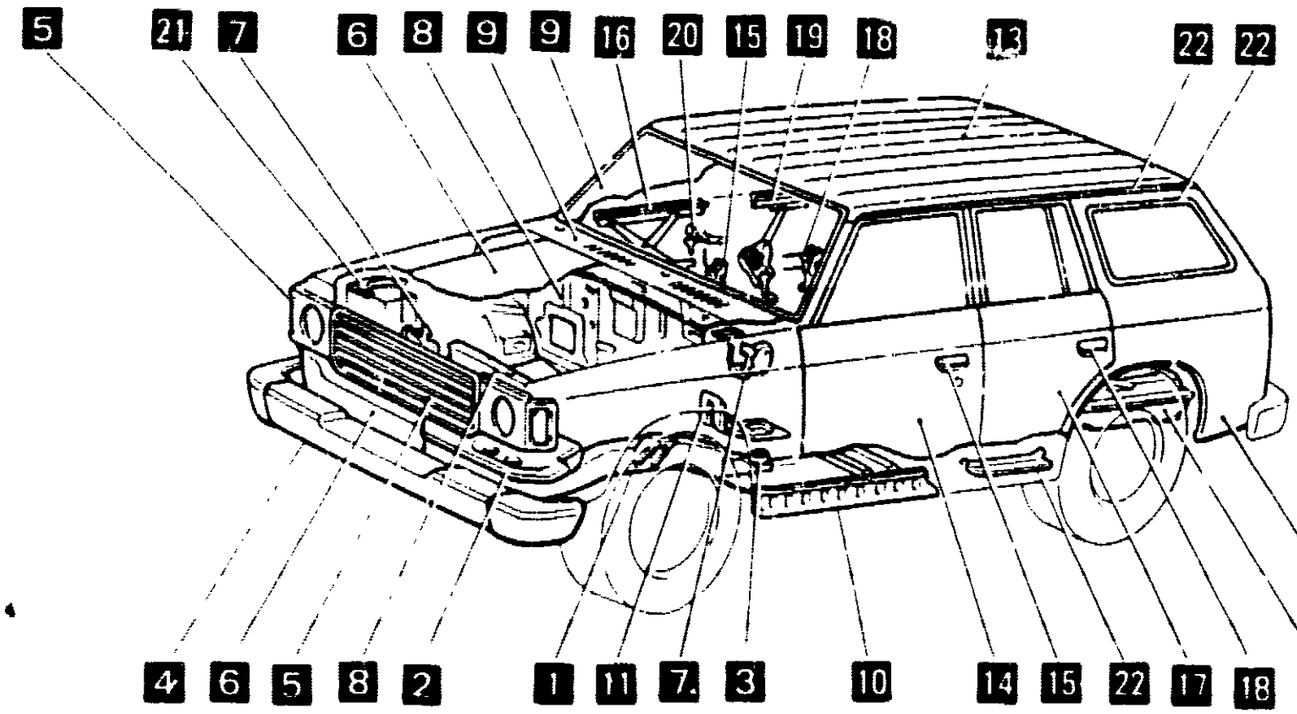Lock Cylinder Set


3H5 (67-57) 19

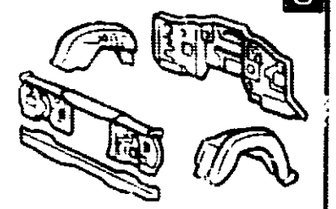Rear Door Regulator & Hinge

BODY GROUP (1/2)

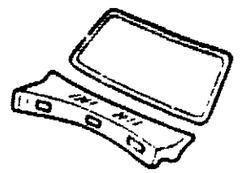


3M1 (53-55) 8

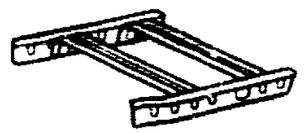Front Fender Apron

3F2 (55-53) 9

Cowl Panel & Glass

3H2 (57-51) 10

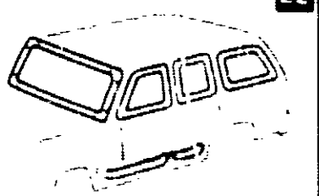Floor Member


3F5 (67-56) 18


Rear Door Lock & Handle


3D7 (75-52) 22

Moulding

3H7 (77-51) 23

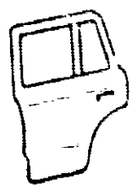Fuel Tank & Tube

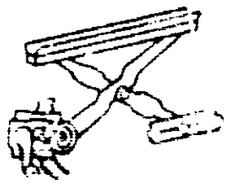3C5 (67-55) 17

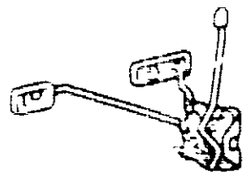Rear Door Panel & Glass

3A5 (67-54) 16

Front Door Regulator & Hinge


3L4 (67-53) 15

Front Door Lock & Handle

3H4 (67-51) 14

Front Door Panel & Glass

3L3 (61-53) 13

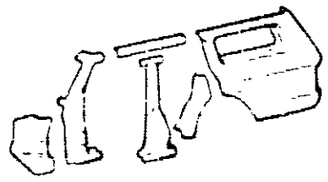Roof Panel & Back Panel

3G3 (61-51) 12

Side Member


3A3 (56-53) 11

Floor Insulator

MB 4[illegible]98

FIG. 53-51 RADIATOR GRILLE

(8708-)

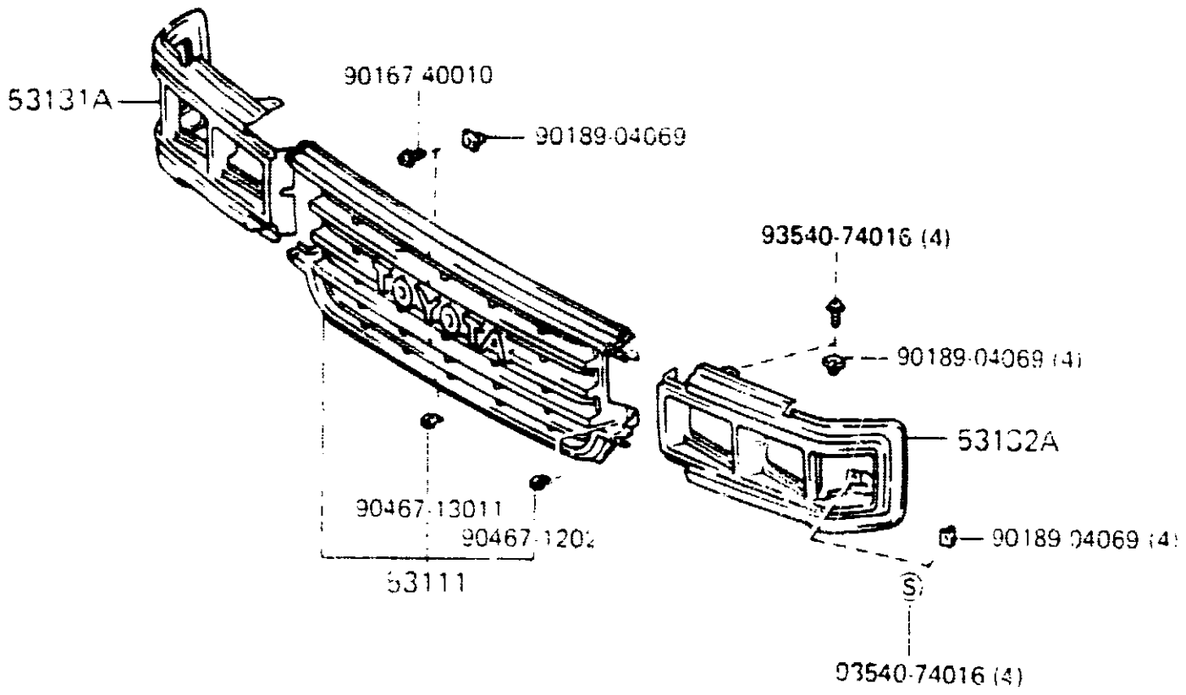


MB L871-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	53111 GRILLE, RADIATOR						
8708-8801	FJ62			53111-90A06-	1		
8801-9001	FJ62			53111-90A09-	1		
	53131A DOOR, HEADLAMP, RH						
8708-9001	FJ62			53131-90A09-	1		
8708-9001	FJ62	W(HEADLAMP CLEANER)		53131-90A10	1		
	53132A DOOR, HEADLAMP, LH						
8708-9001	FJ62			53132-90A09-	1		
8708-9001	FJ62	W(HEADLAMP CLEANER)		53132-90A10-	1		

(8708-)


ILLUST. NO. 1 OF 2

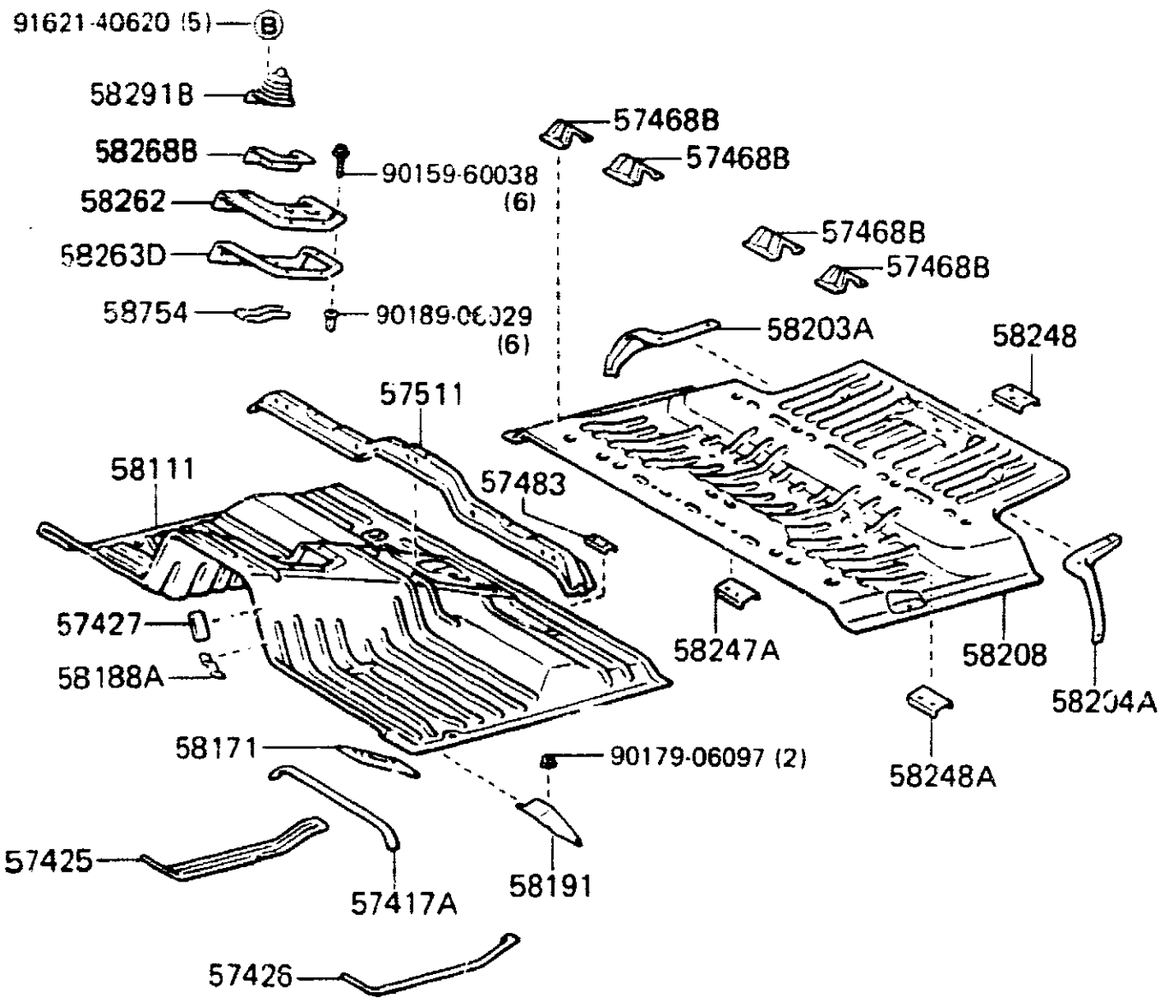

MB L901

(8708-)

ILLUST. NO. 2 OF 2

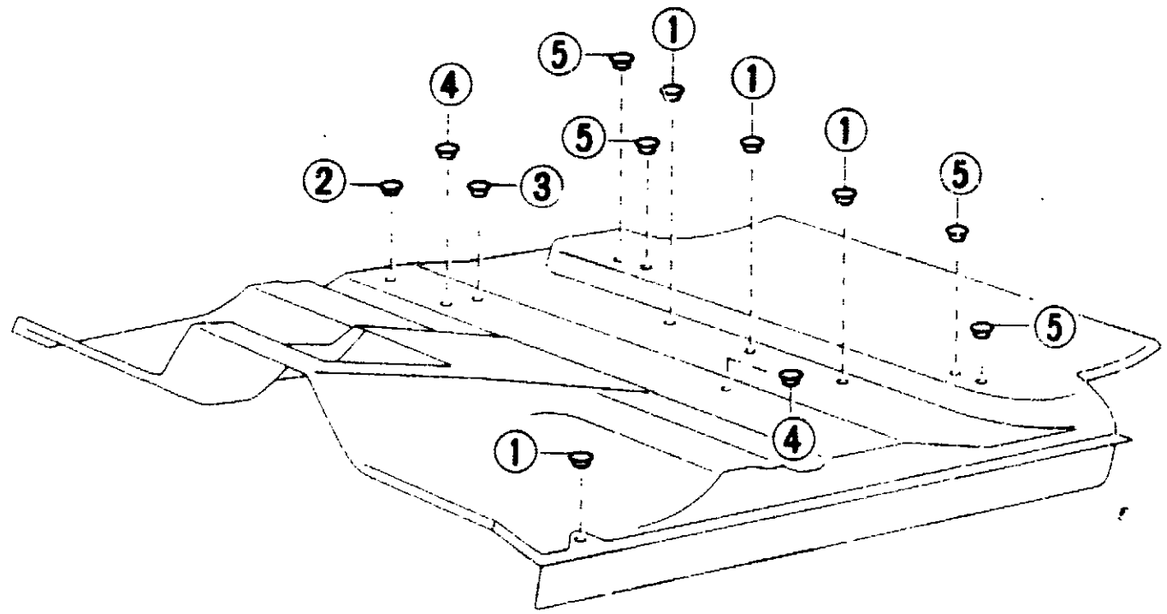

①	②	③	④
90950-01450	90950-01011	90950-01006	90950-01004

⑤
90950-01110

MB C464-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	61511	PILLAR, QUARTER LOCK, RH					
8708-9001	FJ62			61511-90A01-	1		
	61512	PILLAR, QUARTER LOCK, LH					
8708-9001	FJ62			61512-90A01-	1		
	61611	PANEL, QUARTER, RH					
8708-9001	FJ62			61611-90A03-	1		
	61612	PANEL, QUARTER, LH					
8708-9001	FJ62			61612-90A03-	1		
	61631A	PANEL, QUARTER WHEEL HOUSE, OUTER RH					
8708-9001	FJ62			61631-90A03-	1		
	61632A	PANEL, QUARTER WHEEL HOUSE, OUTER LH					
8708-9001	FJ62			61632-90A03-	1		
	61633A	PANEL, QUARTER WHEEL HOUSE, INNER RH					
8708-8808	FJ62			61607-90A05-	1		002
8808-9001	FJ62..WGG			61607-90A04-	1	003	
	61634A	PANEL, QUARTER WHEEL HOUSE, INNER LH					
8708-8808	FJ62			61608-90A01-	1		002
8808-9001	FJ62..WGG			61608-90A00-	1	003	
	61645B	GUSSET, QUARTER WHEEL HOUSE, REAR RH					
8708-9001	FJ62			61645-90A00-	1		
	61646B	GUSSET, QUARTER WHEEL HOUSE, REAR LH					
8708-9001	FJ62			61646-90A00-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	61705	PANEL SUB-ASSY, ROOF SIDE, INNER RH					
8708-9001	FJ62..CND	W(ROOF CARRIER)		61705-90A30-	1		
8708-9001	FJ62			61705-90A40-	1		
	61706	PANEL SUB-ASSY, ROOF SIDE, INNER LH					
8708-9001	FJ62..CND	W(ROOF CARRIER)		61706-90A66-	1		
8708-9001	FJ62			61706-90A67-	1		
	61711	PANEL, ROOF SIDE, OUTER RH					
8708-9001	FJ62			61711-90A01-	1		
	61712	PANEL, ROOF SIDE, OUTER LH					
8708-9001	FJ62			61712-90A01-	1		
	61725	BOX, FUEL INLET					
8708-9001	FJ62			61709-90A02-	1		
	61733A	PANEL, ROOF SIDE, INNER FRONT RH					
8708-8712	FJ62			# 61733-90A02- (61733-90A05-)	1 1		
[illegible]-8808	FJ62			61733-90A05-	1		002
8808-9001	FJ62..WGG			61733-90A03-	1	003	
	61734A	PANEL, ROOF SIDE, INNER FRONT LH					
8708-8712	FJ62			# 61734-90A03- (61734-90A05-)	1 1		
8712-8808	FJ62			61734-90A05-	1		002
8808-9001	FJ62..WGG			61734-90A01-	1	003	
	61743A	REINFORCEMENT, BACK DOOR OPENING SIDE, RH					
8708-9001	FJ62			61743-90A02-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	67001 PANEL SUB-ASSY, FRONT DOOR, RH						
8708-9001	FJ62	W(REMOCON MIRROR)		67001-90A40-	1		
8708-9001	FJ62			67001-90A44-	1		
	67002 PANEL SUB-ASSY, FRONT DOOR, LH						
8708-9001	FJ62			67002-90A47-	1		
8708-9001	FJ62	W(REMOCON MIRROR)		67002-90A50-	1		
	67111 PANEL, FRONT DOOR, OUTER RH						
8708-9001	FJ62			67111-90A15-	1		
8708-9001	FJ62	W(REMOCON MIRROR)		67111-90A18-	1		
	67112 PANEL, FRONT DOOR, OUTER LH						
8708-9001	FJ62			67112-90A15-	1		
8708-9001	FJ62	W(REMOCON MIRROR)		67112-90A18-	1		
	67118A RETAINER, OUTER REAR VIEW MIRROR						
8708-9001	FJ62			67118-90A02-	2		
8708-9001	FJ62	W(REMOCON MIRROR)		67118-90A03-	2		
	67401F FRAME SUB-ASSY, FRONT DOOR, FRONT LOWER RH						
8708-9001	FJ62			67401-90A00-	1		
	67402F FRAME SUB-ASSY, FRONT DOOR, FRONT LOWER LH						
8708-9001	FJ62			67402-90A00-	1		
	67403F FRAME SUB-ASSY, FRONT DOOR, REAR LOWER RH						
8708-9001	FJ62			67403-90A00-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	67404F FRAME SUB-ASSY, FRONT DOOR, REAR LOWER LH						
8708-9001	FJ62			67404-90A00-	1		
	67481A SEAL, FRONT DOOR FRONT LOWER FRAME, RH						
8708-9001	FJ62			67481-90A00-	1		
	67482A SEAL, FRONT DOOR FRONT LOWER FRAME, LH						
8708-9001	FJ62			67482-90A00-	1		
	67601 BOARD SUB-ASSY, FRONT DOOR TRIM, RH						
8708-8808	FJ62	SHADOW GRAY(TRIM1)		67610-90G04-03	1		
8708-8808	FJ62	SEPIA BROWN(TRIM4)		67610-90G04-06	1		
8708-8808	FJ62..CND	W(POWER WINDOW),SHADOW GRAY(TRIM1)		67610-90G07-03	1		
8708-8808	FJ62..USA	W(POWER WINDOW),SHADOW GRAY(TRIM1)		〃	1		
8708-8808	FJ62..CND	W(POWER WINDOW),SEPIA BROWN(TRIM4)		67610-90G07-06	1		
8708-8808	FJ62..USA	W(POWER WINDOW),SEPIA BROWN(TRIM4)		〃	1		
	8808-9001 FJ62..WGG	SHADOW GRAY(TRIM1)	P	67610-90G42-03	1		
	8808-9001 FJ62..WGG	SEPIA BROWN(TRIM4)	P	67610-90G42-06	1		
	8808-9001 FJ62..CND	W(POWER WINDOW),SHADOW GRAY(TRIM1)	P	67610-90G49-03	1		
	8808-9001 FJ62..WGG..USA	W(POWER WINDOW),SHADOW GRAY(TRIM1)	P	〃	1		
	8808-9001 FJ62..CND	W(POWER WINDOW),SEPIA BROWN(TRIM4)	P	67610-90G49-06	1		
	8808-9001 FJ62..WGG..USA	W(POWER WINDOW),SEPIA BROWN(TRIM4)	P	〃	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	69905B CHANNEL SUB-ASSY, REAR DOOR GLASS, RH						
8708-9001	FJ62			69905-90A03-	1		
	69906B CHANNEL SUB-ASSY, REAR DOOR GLASS, LH						
8708-9001	FJ62			69906-90A03-	1		
	69975A FILLER, REAR DOOR GLASS CHANNEL						
8708-9001	FJ62	FRONT		69973-90A00-	2		
8708-9001	FJ62	REAR		69975-90A00-	2		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

PROD.DATE	MODELS	DESCRIPTION	P/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	73330 BELT ASSY, REAR SEAT LAP TYPE, RH						
8708-8711	FJ62..WGG	SHADOW GRAY(TRIM1)	#	73330-90A05-13 (73330-90A37-03)	1 1		002
8706-8711	FJ62..WGG	SEPIA BROWN(TRIM4)	#	73330-90A05-16 (73330-90A37-06)	1 1		002
8708-8711	FJ62..WGG	GRAY(TRIM1)		73330-90A37-03	1		002
8708-8711	FJ62..WGG	SEPIA BRWN(TRIM4)		73330-90A37-06	1		002
8711-8808	FJ62..WGG	GRAY(TRIM1)		73330-90A37-03	1		002
8711-8808	FJ62..WGG	SEPIA BRWN(TRIM4)		73330-90A37-06	1		002
	73340 BELT ASSY, REAR SEAT LAP TYPE, LH						
8708-8711	FJ62..WGG	SHADOW GRAY(TRIM1)	#	73330-90A05-13 (73330-90A37-03)	1 1		002
8708-8711	FJ62..WGG	SEPIA BROWN(TRIM4)	#	73330-90A05-16 (73330-90A37-06)	1 1		002
8708-8711	FJ62..WGG	GRAY(TRIM1)		73330-90A37-03	1		002
8708-8711	FJ62..WGG	SEPIA BRWN(TRIM4)		73330-90A37-06	1		002
8711-8808	FJ62..WGG	GRAY(TRIM1)		73330-90A37-03	1		002
8711-8808	FJ62..WGG	SEPIA BRWN(TRIM4)		73330-90A37-06	1		002
	73350 BELT ASSY, REAR SEAT LAP TYPE, CENTER						
8708-8808	FJ62..WGG	SHADOW GRAY(TRIM1)		73330-90A04-13	1		002
8706-8808	FJ62..WGG	SEPIA BROWN(TRIM4)		73330-90A04-16	1		002
P 8808-9001	FJ62..WGG	GRAY(TRIM1)		73330-90A46-03	1	003	
P 8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		73330-90A46-06	1	003	
	73360 BELT ASSY, REAR SEAT 3 POINT TYPE, OUTER, RH						
P 8808-9001	FJ62..WGG	GRAY(TRIM1)		73360-90A40-03	1	003	
P 8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		73360-90A40-06	1	003	

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	73370 BELT ASSY, REAR SEAT 3 POINT TYPE, OUTER, LH						
P 8808-9001	FJ62..WGG	GRAY(TRIM1)		73360-90A40-03	1	003	
P 8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		73360-90A40-06	1	003	
	73380 BELT ASSY, REAR SEAT 3 POINT TYPE, INNER, RH						
P 8808-9001	FJ62..WGG	GRAY(TRIM1)		73380-90A20-03	1	003	
P 8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		73380-90A20-06	1	003	
	73390 BELT ASSY, REAR SEAT 3 POINT TYPE, INNER, LH						
P 8808-9001	FJ62..WGG	GRAY(TRIM1)		73380-90A20-03	1	003	
P 8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		73380-90A20-06	1	003	

(8708-)

ILLUST.NO. 2 OF 2

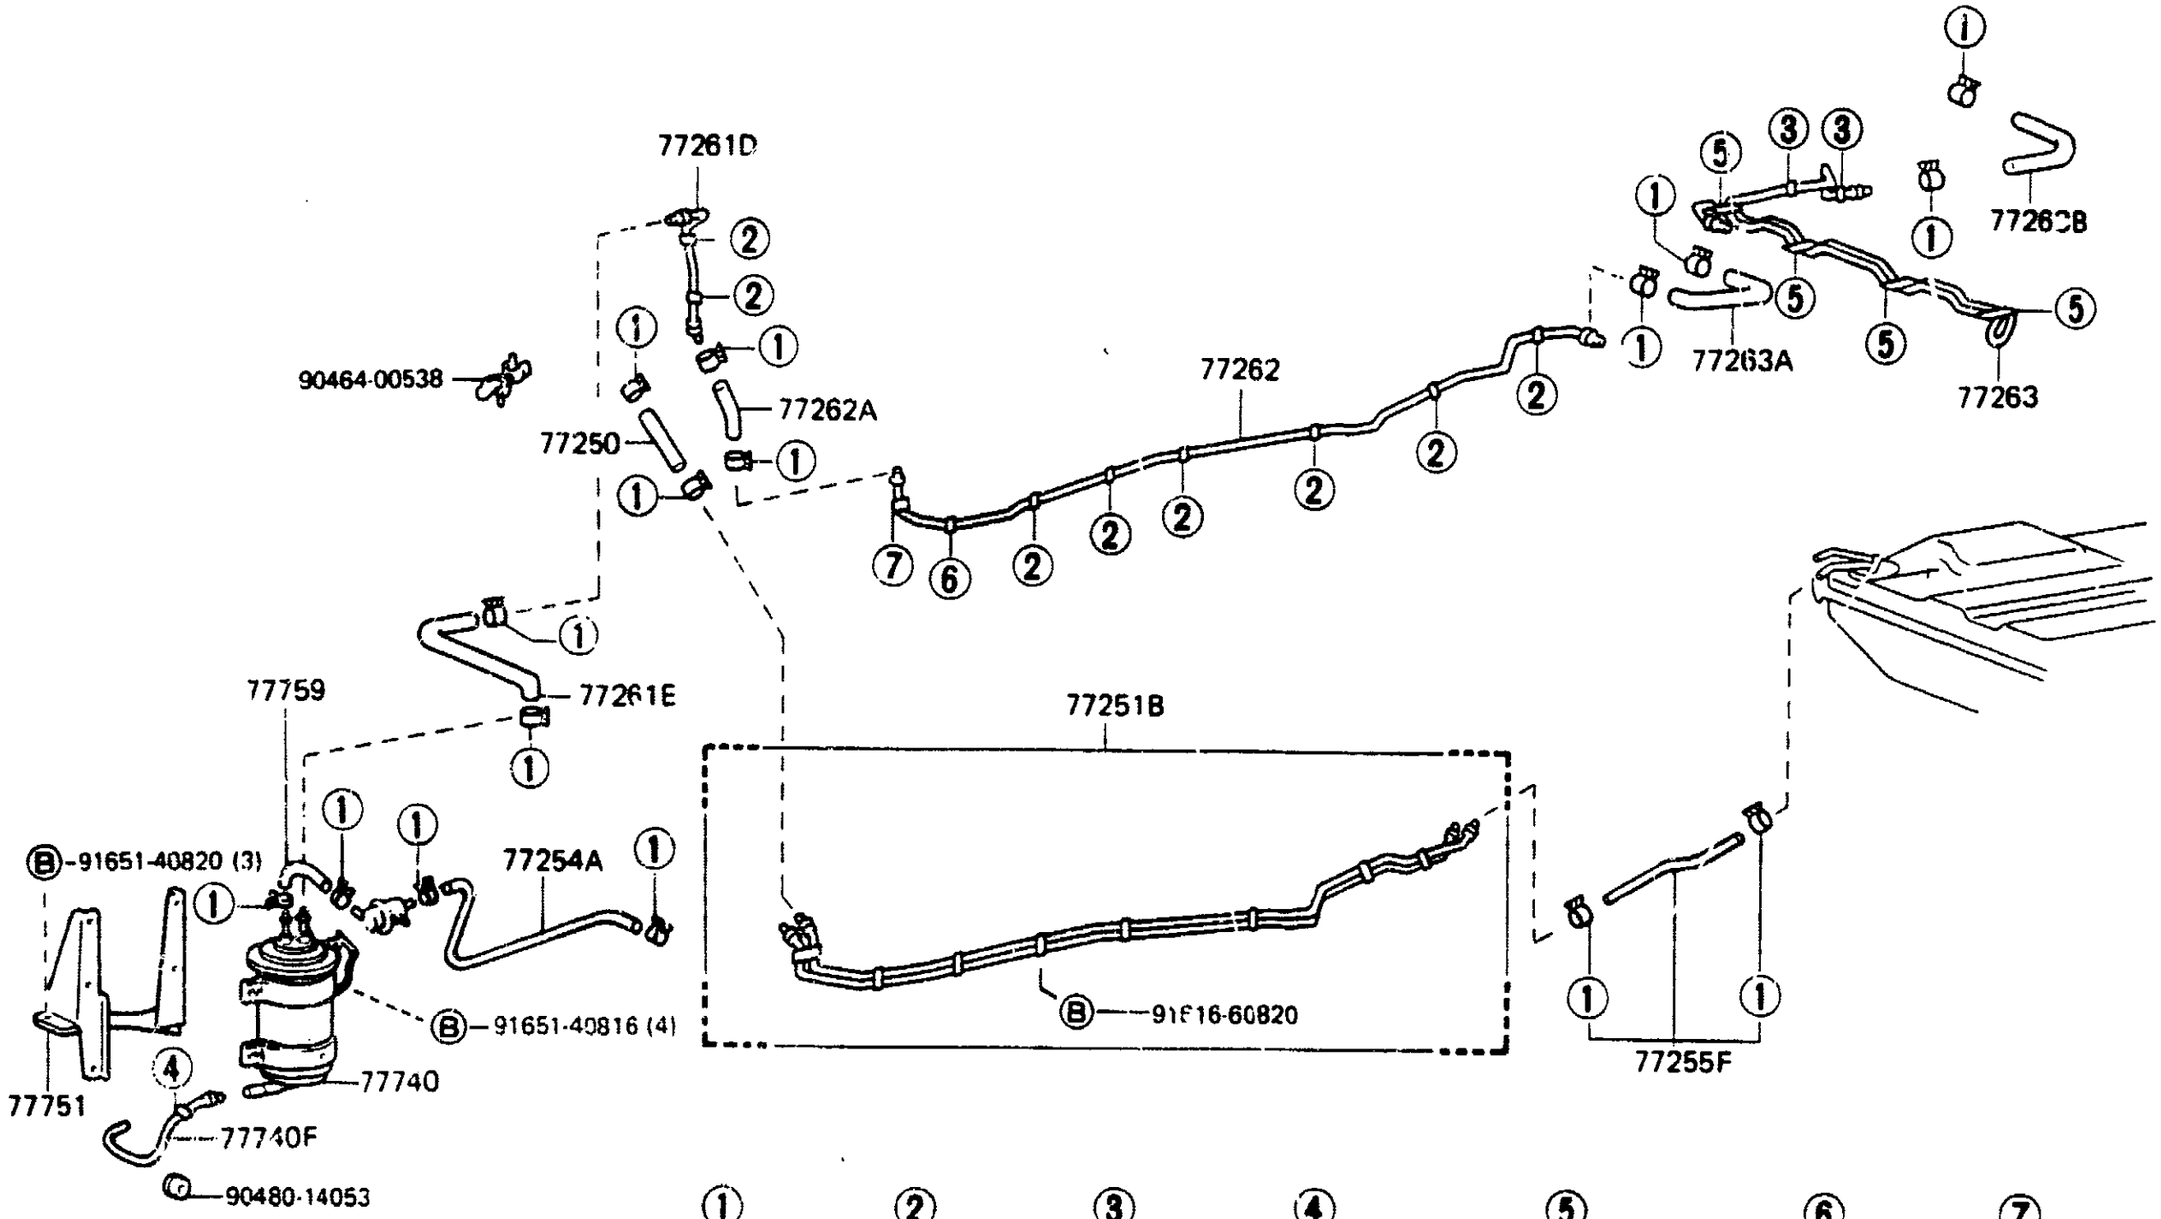


①	②	③	④	⑤	⑥	⑦
96132-30600	90461-06156 B 90119-08701	90461-06156 B 91651-40814	91611-60816 B 90461-Cau77	90461-08324 90480-01107 B 91651-40814	90461-06174	90461-06203

MB L829-C

FIG. 81-14 REAR SIDE MARKER LAMP

(8708-)

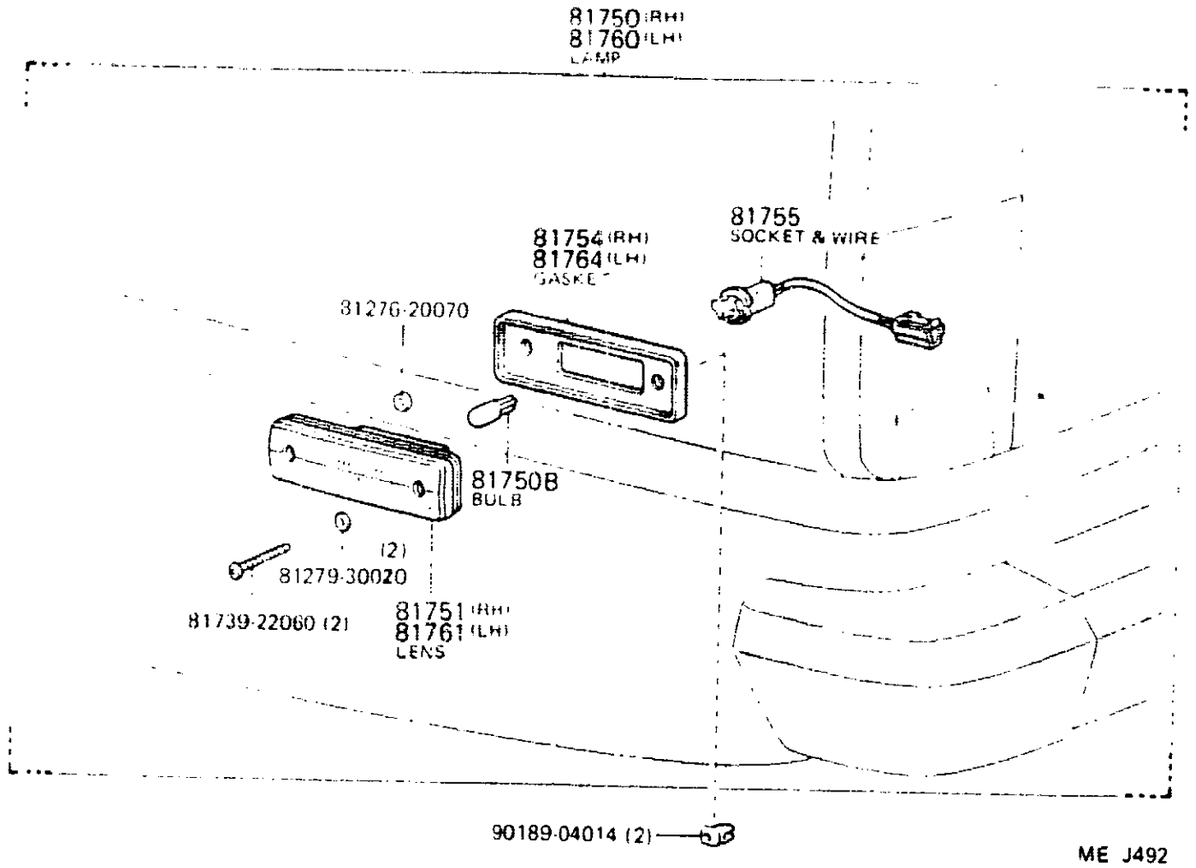


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		81750	LAMP ASSY, REAR SIDE MARKER, RH					
P	8708-9001	FJ62			81750-91255-	1		002
		81750B	BULB, REAR SIDE MARKER LAMP					
P	8708-9001	FJ62	12V 3.8W		90981-11020-	2		002
		81751	LENS, REAR SIDE MARKER LAMP, RH					
P	8708-9001	FJ62			81751-14030-	1		002
		81754	GASKET, REAR SIDE MARKER LAMP BODY, RH					
P	8708-9001	FJ62			81754-91255-	1		002
		81755	SOCKET AND WIRE SUB-ASSY, REAR SIDE MARKER LAMP					
P	8708-9001	FJ62			81755-20060-	2		002
		81760	LAMP ASSY, REAR SIDE MARKER, LH					
P	8708-9001	FJ62			81750-91255-	1		002
		81761	LENS, REAR SIDE MARKER LAMP, LH					
P	8708-9001	FJ62			81751-14030-	1		002
		81764	GASKET, REAR SIDE MARKER LAMP BODY, LH					
P	8708-9001	FJ62			81754-91255-	1		002

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	83361	GASKET, FUEL SENDER GAGE					
8708-9001	FJ62			83361-20030-	1		
	83420	GAGE ASSY, WATER TEMPERATURE SENDER					
8708-9001	FJ62			83420 20020-	1		
	83520	GAGE ASSY, OIL PRESSURE SENDER					
8708-9001	FJ62			83520-60010-	1		
	84110	SWITCH ASSY, LIGHT CONTROL, NO.1					
8708-9001	FJ62			84112-69295-	1		
	84118	KNOB, LIGHT CONTROL RHEOSTAT					
8708-9001	FJ62			84118-90A00-	1		
	84119	RHEOSTAT, LIGHT CONTROL					
8708-9001	FJ62			84119-90A01-	1		
	84140	SWITCH ASSY, HEADLAMP DIMMER					
8710-9001	FJ62			84140-35080-	1		
	84222	SWITCH, TRANSFER INDICATOR, NO.1					
8708-9001	FJ62	NO.1		84222-60021-	1		
8708-9001	FJ62	NO.2		84222-60030-	1		
8708-9001	FJ62	NO.3		84222-60040-	1		
8708-9001	FJ62	NO.4		84222-60071-	2		
	84233	SWITCH ASSY, COURTESY LAMP (FOR FRONT DOOR)					
8708-8806	FJ62			84230-22051-	2		
8806-9001	FJ62			84231-28010-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	84234	SWITCH ASSY, COURTESY LAMP (FOR REAR DOOR)					
8708-8806	FJ62			84230-22051-	2		
8806-9001	FJ62			84231-28010-	2		
	84242	SWITCH, GLOVE BOX LAMP					
8708-9001	FJ62			84242-90A00-	1		
	84310	SWITCH ASSY, TURN SIGNAL					
8708-9001	FJ62			84310-60700-	1		
	84312	PLATE, HORN CONTACT					
8708-9001	FJ62			84312-20011-	1		
	84330	SWITCH ASSY, HAZARD WARNING SIGNAL					
8708-9001	FJ62			84332-69055-	1		
	84340	SWITCH ASSY, STOP LAMP					
8708-9001	FJ62			84340-22072-	1		
	84380	SWITCH ASSY, BRAKE WARNING TEST					
8708-9001	FJ62			84380-20010-	1		
	84450	SWITCH ASSY, IGNITION OR STARTER					
8708-9001	FJ62			84450-60150-	1		
	84540	SWITCH ASSY, NEUTRAL START					
8708-9001	FJ62			84540-60020-	1		
	84650	SWITCH ASSY, WINDSHIELD WIPER					
8708-9001	FJ62			84652-69345-	1		

FIG. 85-11 DOOR MOTOR & DOOR SOLENOID

(8708-)

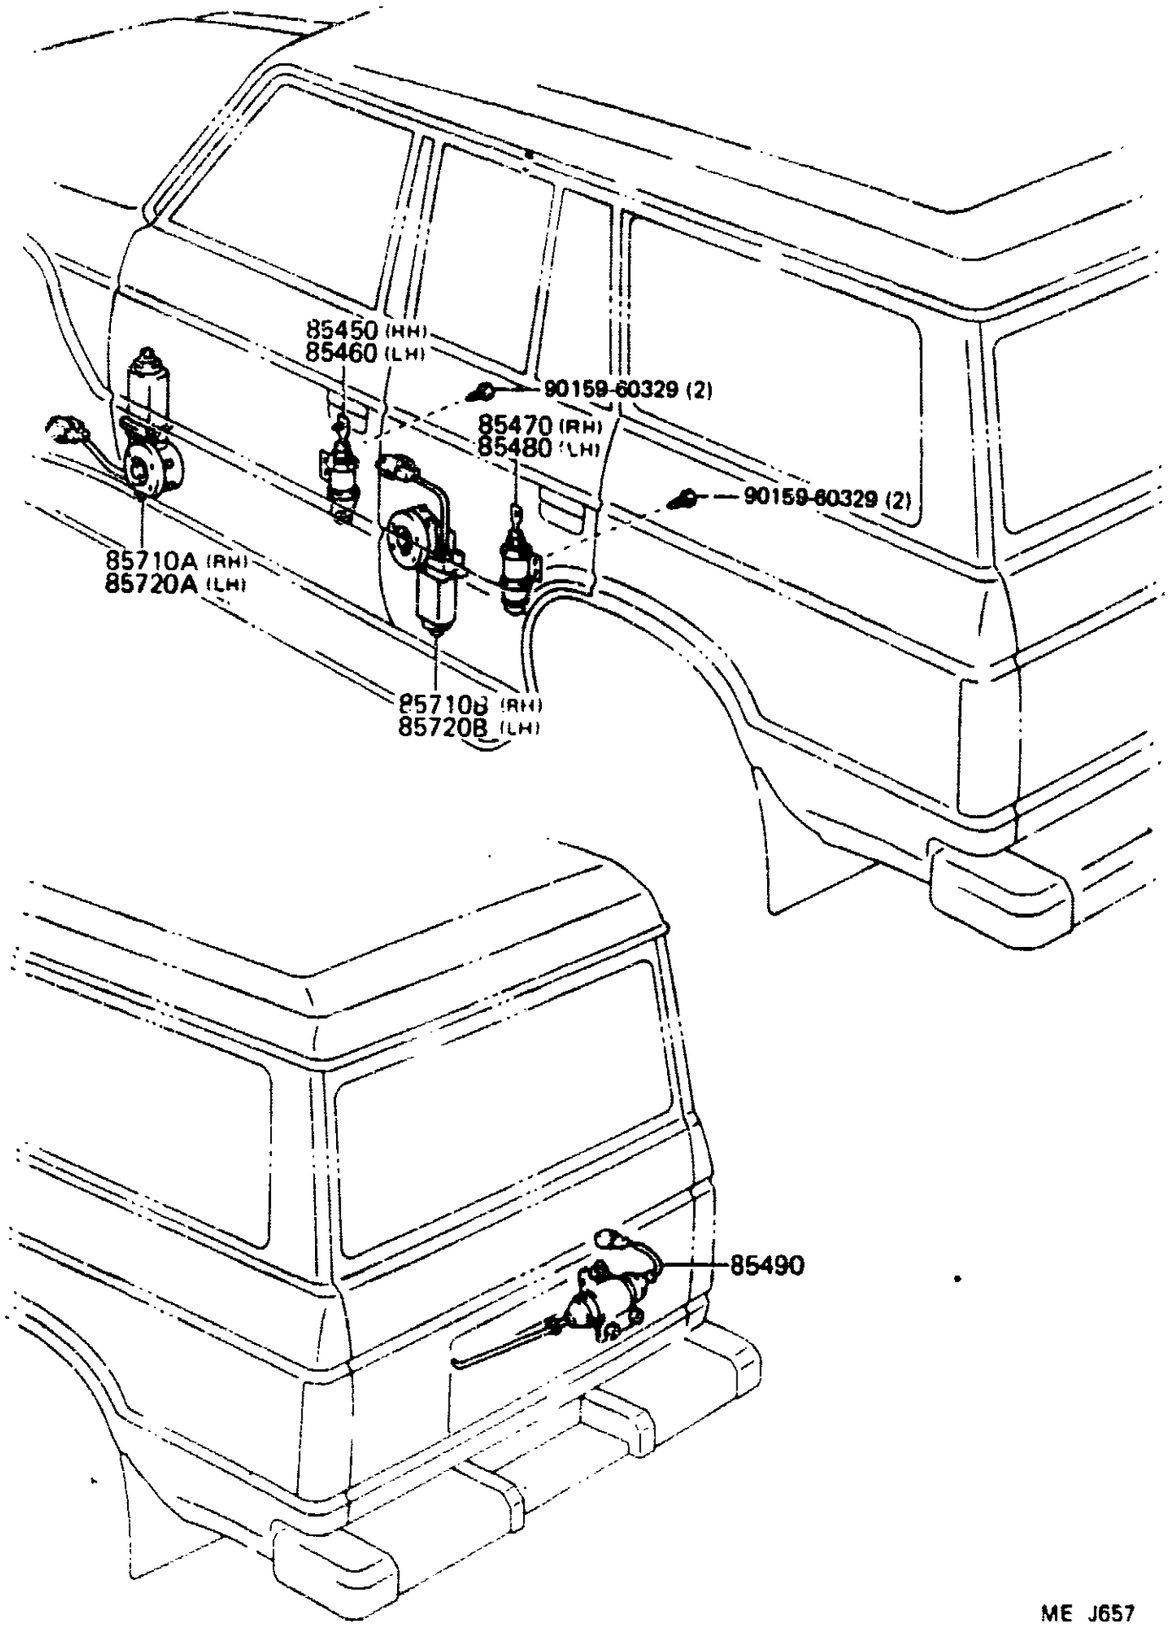


ME J657

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	85450	SOLENOID ASSY, DOOR CONTROL, FRONT RH					
8708-9001	FJ62			85450-90A04-	1		
	85460	SOLENOID ASSY, DOOR CONTROL, FRONT LH					
8708-9001	FJ62			85460-90A02-	1		
	85470	SOLENOID ASSY, DOOR CONTROL, REAR RH					
8708-9001	FJ62			85470-90A02-	1		
	85480	SOLENOID ASSY, DOOR CONTROL, REAR LH					
8708-9001	FJ62			85480-90A02-	1		
	85490	SOLENOID ASSY, DOOR CONTROL BACK					
8708-9001	FJ62			85450-90A06-	1		
	85710A	MOTOR ASSY, POWER WINDOW REGULATOR, FRONT RH					
8708-9001	FJ62			85710-90A00-	1		
	85710B	MOTOR ASSY, POWER WINDOW REGULATOR, REAR RH					
8708-9001	FJ62			85710-90A01-	1		
	85720A	MOTOR ASSY, POWER WINDOW REGULATOR, FRONT LH					
8708-9001	FJ62			85720-90A00-	1		
	85720B	MOTOR ASSY, POWER WINDOW REGULATOR, REAR LH					
8708-9001	FJ62			85720-90A01-	1		

(8708-)


ILLUST. NO. 1 OF 2

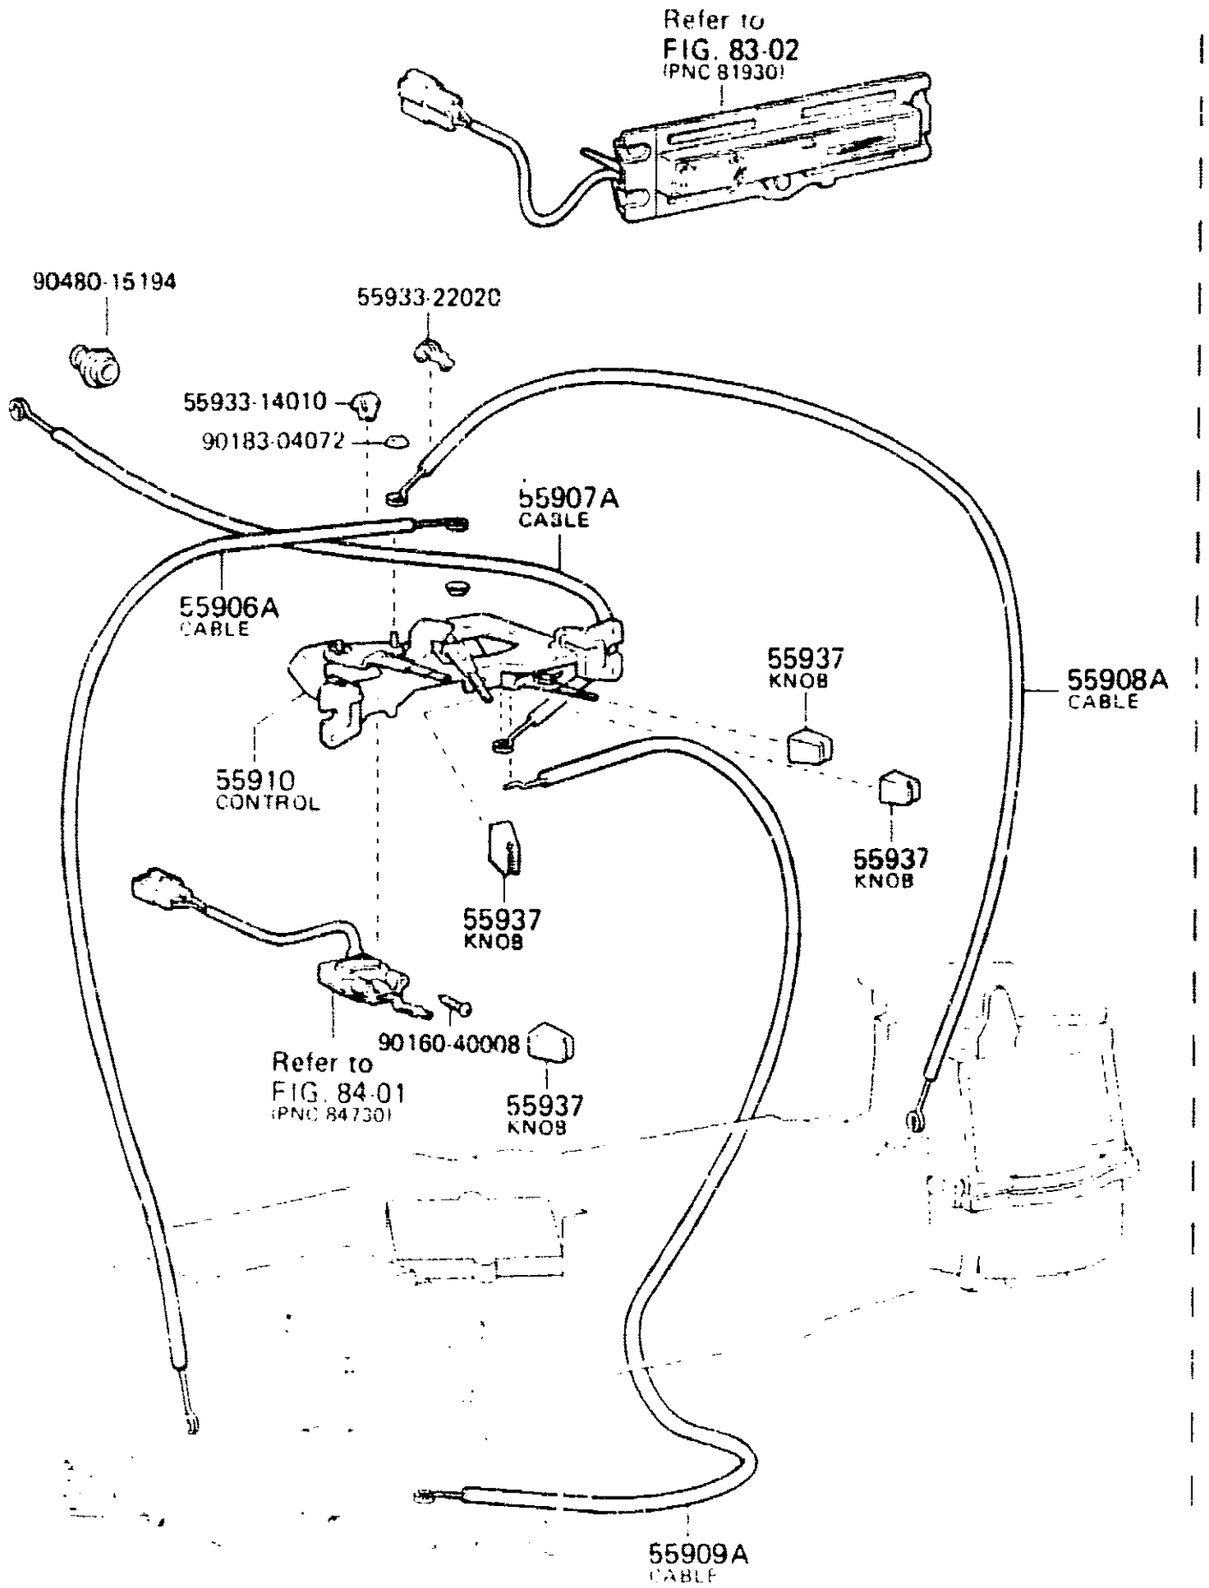

ME J697

(8708-)


ILLUST. NO. 2 OF 2

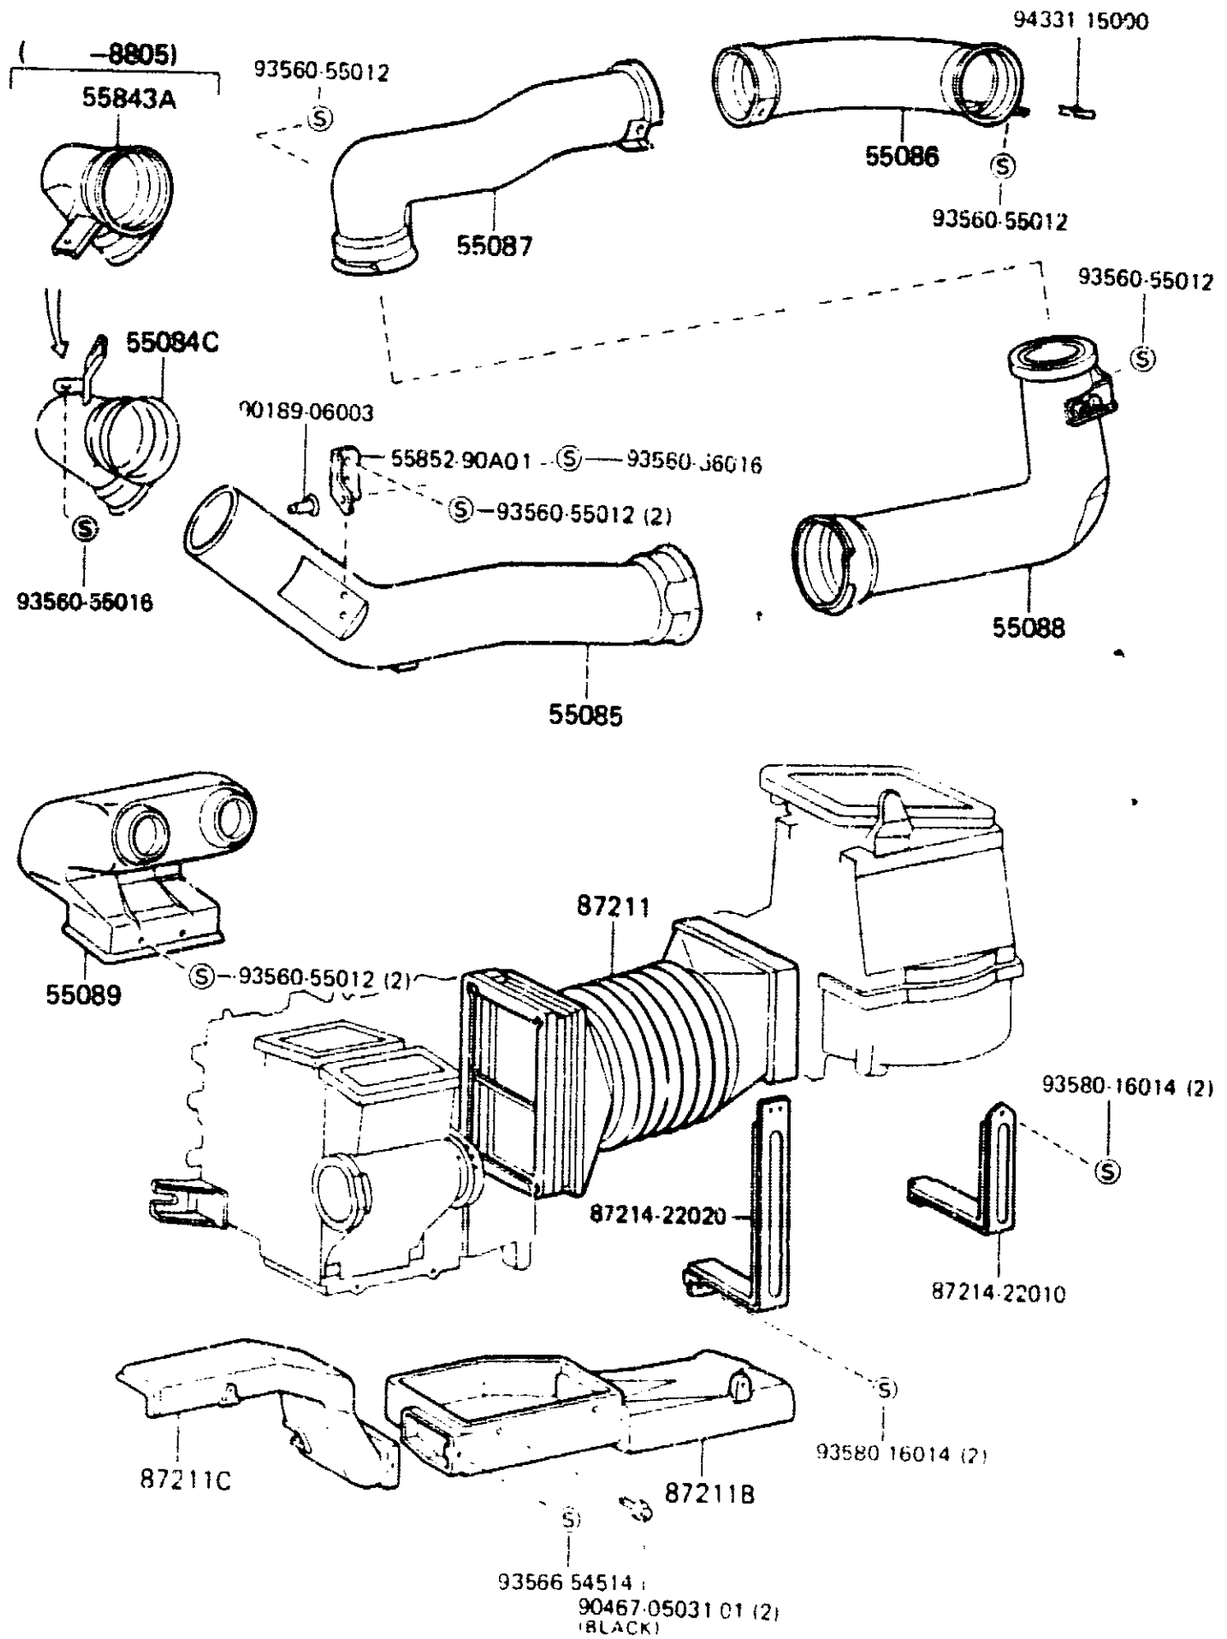

ME J698-C

	PART NUMBER	LOCATION
	90389-18002-	2L9
	90401-08004-	1L4
	-12097-	1L4
	-14093-	1F2
	-18083-	1H2
	90402-16042-	1F2
	-26002-	1M4
	90404-10018-	2G5
	-10019-	2H6
	-14012-	1J3
	-16008-	1F2
	-16022-	2K3
	-26003-	1M4
	-51093-	2J4
	-51319-	2G8
	-54035-	1C3
	90407-10004-	2D8
	-14005-	2K3
	-16006-	2K3
	-16013-	2K3
	90410-11005-	1F2
	-18002-	1M4
	90413-04005-	2J4
	-10042-	2B9
	-10106-	2C9
	-10214-	2B9
	90430-06104-	2D8
	-08009-	1L4
	-08011-	1L4
	-09253-	2D8
		2E8
	-10022-	2I4
	-12005-	1L4
	-12011-	1I1
	-12019-	1I1
	-12245-	3J7
	-15261-	1F2
	-18008-	2A4
	-18012-	1H2
	-26002-	2F5
		2G6
	-43002-	1K2
	90445-11072-	2H1
	-12065-	1L2
	-12078-	1L2
P	-14072-	3G10
	-16038-	1L1
	-18089-	2G7
	-18090-	2G7
	-22015-	3J7
	-22904-	3J7
	-31018-	1I3
	90446-06013-	3F10
	-06292-	3F10
	90447-12058-	3K7
	90460-01001-	2G7
	90461-10387-	2H6
	-10558-	2G5
	90462-12038-	2K3
	90464-00105-	1C4
	-00208-	1C4
	90467-06161-18	3E4
	-07041-03	3E3
P	-07041-06	3E3
	90467-08011-	3F2
		3J1
	-09014-	3J1
	-11085-	1L2
P	-12035-03	3B3
P	-12035-06	3B3
	-13001-	1J4
		1K2
		1K4
	-15120-	1L1
	-16001-	2E8
	-16002-	2G8
	-18002-	1L1
	-22003-	1J4
	-23001-	1J3
	-28003-	1I3
	-31110-	2C9
	-32002-	2L7
	-42001-	1L2
	90468-12003-	2I8
	-13071-	3E6
	90480-01336-	2A6
	-13005-	1K4
	-13012-	2A6
	-15002-	3L1
	-17019-	2A6
	-17158-	2A8
	-17177-	2B1
	-17401-	2G4
	-18001-	1L1
	-20016-	2A6
	90501-06043-	2E3
	-07005-	2B1
	-07009-	2B1
	-07040-	2E3
	-07042-	2F3
	-07049-	2E3
		2F3
	-07065-	2I2
	-08062-	2F3
	-08075-	2G3
	-08095-	2D3
	-09056-	2D3
	-10087-	2K1
	-10092-	2A2
	-10094-	2A3
	-10098-	2B3
	-10099-	2G3
	-10107-	2C3
	-10108-	2B2
	-10126-	2G3
B	-10138-	2A8
	-10745-	2A8
	-11024-	2A3
	-11030-	2A3
	-11041-	2E3
	-12083-	2G3
	-12086-	2I2
	-12090-	2A3
	-12099-	2H7
	-12103-	2E7
	-14087-	1D2
	-15006-	2E3
	-16115-	2F4
	90501-17008-	2F3
	-18677-	2F1
	-19002-	2B3
	-20012-	2J8
	-20083-	2F5
		2H6
	-23014-	2F7
	-27008-	2B3
	-29003-	2G4
	-30014-	2C3
	-33004-	2M2
	-40008-	2B3
	-45011-	2A7
	-45114-	2M7
	-45342-	1C2
	90502-16004-	1D2
	90503-04003-	2B3
	90506-12031-	2K8
	-12451-	2C8
	-18031-	2K8
	-20033-	2L8
	-23009-	2M6
	-26011-	2J8
	-26014-	2K8
	90507-14001-	2B7
	90508-29017-	3M7
	-30004-	2J3
	90520-01002-	3A5
		3H5
	-15001-	2E7
	-17042-	2M6
	-22013-	2H2
	-27091-	2J6
	-28036-	2J6
	-29024-	2L4
	-29025-	2L4
	-29026-	2L4
	-29027-	2L4
	-29051-	1C2
	-31001-	2K6
	-33009-	2E2
	-33107-	2E4
	-33110-	2E4
	-50001-	2A2
		2B2
		2L1
	-87001-	2F2
	90521-01002-	2A7
	-22011-	2A7
	-22012-	2A7
	-22013-	2A7
	-25002-	1A2
	-44002-	2D7
		2K7
	-75023-	2E4
	-90002-	2L1
	-99017-	2B2
		2L1
	-99018-	2H2
	-99019-	2L1
	-99021-	2D2
		2F2
		2H2
		2K1
	90521-99021-	2L1
	-99040-	2H2
	-99041-	2H2
	-99042-	2G2
	-99043-	2K1
	90522-32011-	2L7
	-40043-	2H8
	-48044-	2H8
	90523-05002-	2J2
	-06004-	2B3
	-06005-	2E3
		2F3
	90524-15008-	1D2
	90541-03015-	3D2
	-06008-	2C8
	-08003-	3K7
	90560-06009-	1F3
	-10406-	2G4
A	-20008-	2J3
A	-35008-	2D4
A	-35009-	2G2
A	-38003-	2E4
A	-72001-	2G2
	-72002-	2G2
	-72003-	2G2
	90561-04010-	2H7
	-06006-	2I2
	-09005-	1L2
	-10004-	1K4
	90562-18151-	2D8
	-30002-	2J7
	-31002-	2K7
	-32002-	2K7
	-48001-	2J7
	-67002-	2K7
	90564-06002-	2G3
	-70001-	2D4
	-70002-	2D4
	-70003-	2D4
	-70004-	2D4
	-70005-	2D4
	-70006-	2D4
	-70007-	2D4
	-70008-	2D4
	-70009-	2D4
	-70010-	2D4
	-70011-	2E4
	-70012-	2E4
	-70013-	2E4
	90587-08001-	2A6
	90910-01006-	1D2
	-01012-	1D2
	-02050-	1F1
	-02057-	1H1
	-04012-	3F2
	-12079-	1M3
	90913-02048-	1C2
	-03005-	1D2
	-03012-	1D2
	-05020-	1D2
	90915-01014-	1I1
	90916-02141-	1A3
	-02193-	1A3
	-03052-	1K2
	90916-03071-	1K2
	90917-06004-	1E3
	-06012-	1E3
	-06023-	1E3
	-06024-	1E3
	-10049-	1M3
	-10065-	2J4
	-10076-	1J3
	-11023-	1M3
	90919-01064-	1B4
	-02113-	1B4
	-03086-	1C4
	-12745-	1B4
	-12746-	1B4
	-12747-	1B4
	-12748-	1B4
	-12749-	1C4
	-12750-	1C4
	-12949-	1B4
	-12950-	1C4
	-12951-	1B4
	-12952-	1B4
	-12953-	1C4
	-12954-	1C4
	-13271-	1B4
	-13328-	1B4
	-21410-	1B4
	90923-01349-	1L4
	-01350-	1L4
	-05011-	1H1
	90925-03057-	1M3
	90929-01189-	1M4
	-01192-	1C4
	90930-03075-	2B4
	-03094-	2G1
	90937-01117-	2I5
	-01118-	2I5
	-01119-	2I5
	-01121-	2I5
	-01122-	2I5
	-01132-	2K4
	-01147-	2K4
	-01148-	2K4
	-01149-	2K4
	-01150-	2K4
	-01151-	2K4
	-01152-	2K4
	-01184-	2K4
	-01191-	2K4
	-01192-	2K4
	-01193-	2K4
	-01194-	2K4
	-01268-	2K4
	-01269-	2K4
	-01408-	2I5
	-01409-	2I5
	-01410-	2I5
	-01411-	2I5
	-01412-	2I5
	-01413-	2I5
	-01414-	2I5
	-01415-	2I5
	-01416-	2I5
	-01417-	2I5
S	90937-01418-	2I5
S	-01419-	2I5
	90942-01047-	2K5
	-02052-	2J5
	-02053-	2K6
	-03079-	2K5
	-03080-	2K5
	-03081-	2K5
	-03082-	2K5
	-03083-	2K5
	-03084-	2K5
	-03085-	2K5
	-03086-	2K5
	-03107-	2K5
	-05009-	2L5
	90945-02034-	2M6
	-02038-	2M6
	90948-01031-	2I9
	-02015-	2J9
	-02017-	2I9
	-02032-	2J9
	-02033-	2D9
	-02114-	2I9
	-03011-	2A10
		2I9
P	90950-01073-03	3E3
P	-01073-06	3E3
S	90980-05022-	3K10
S	-05067-	3K10
S	-05106-	3K10
S	-05110-	3K10
N	-05127-	3K10
	-07003-	3M8
	-07048-	3M8
	-07251-	3M8
	90981-05034-	3A8
	-05035-	3A8
P	-11004-	3J8
	-11010-	3E9
	-11018-	3D9
		3J8
P	-11020-	3E8
P		3I8
P	-12010-	3D8
	90982-01414-	3K8
	-02207-	3K8
	-05030-	3K8
	-08251-	3B9
	-09002-	3H9
	-09003-	3H9
	-09004-	3H9
	-09005-	3H9
	90987-01003-	3J9
	-02004-	3H9
		3K9
	-02006-	3J9
	-03001-	3J9
	-04002-	3J9
	90999-00066-	3A6
	-00104-	3A6
	-73072-	1A2
S	-92003-	2J4
	91121-51070-	2C8
	91511-60850-	2H1

BODY GROUP (2/2)

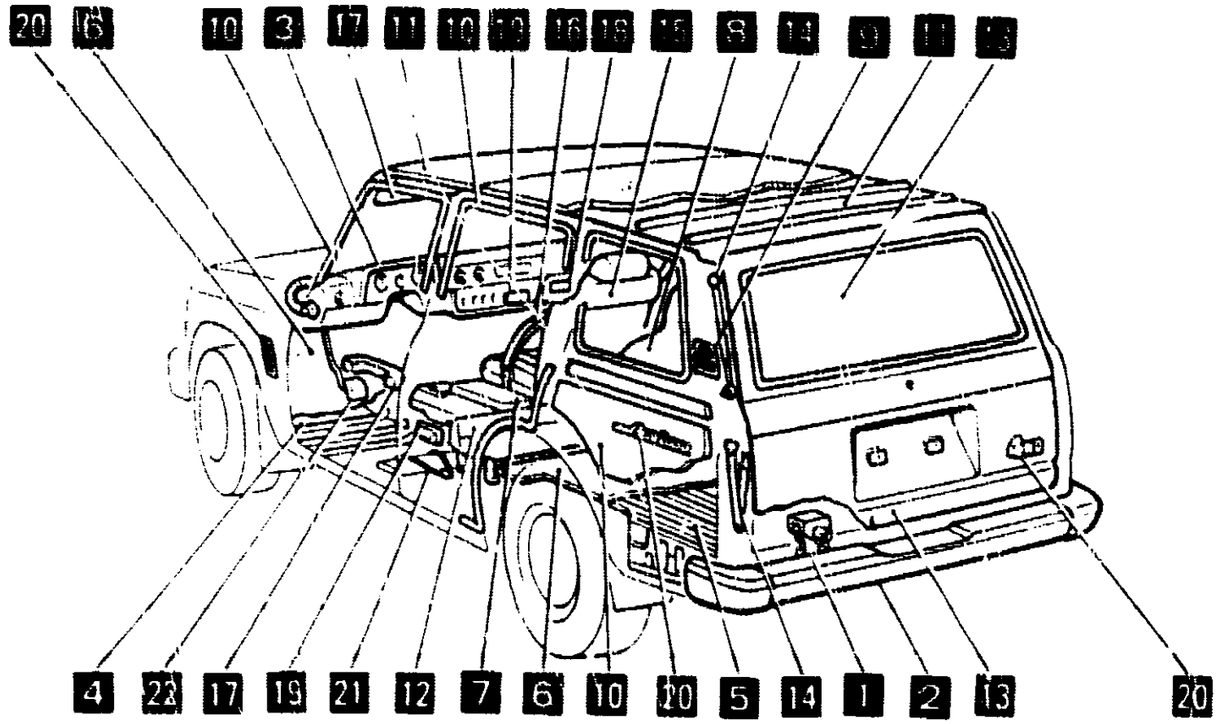


3D1 (51-53) 1

Spare Wheel Carrier

3H1 (52-53) 2

Rear Bumper & Stay


3B2 (55-51) 3

Instrument Panel


3I2 (58-51) 4

Front Floor Panel & Member

3L2 (58-52) 5

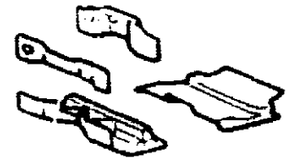Rear Floor Panel & Member

3B3 (58-54) 6

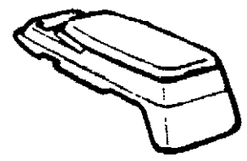Floor Mat & Pad

3D3 (58-55) 7

Console Box

3K3 (61-52) 8


Side Window

3A4 (61-55) 9

Rear & Roof Ventilator


3B4 (64-51) 10


Inside Trim Board

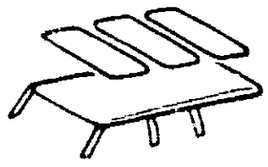3E4 (64-52) 11

Roof Headling & Pad

3G4 (64-55) 12

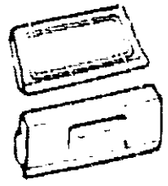
Deck Board & Deck Trim Cover

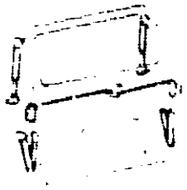
3J5 (67-61) 13

Back Door Panel & Glass


3L5 (67-62) 14

Back Door Lock & Hinge

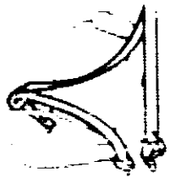3C6 (71-51) 15

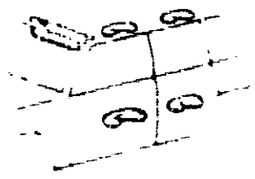Seat & Seat Track

3H6 (71-52) 16

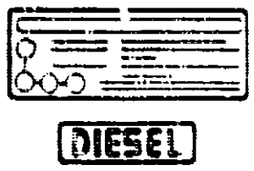Seat Belt

3J6 (74-51) 17

Armrest & Visor

3M6 (74-55) 18


Caution Plate

3L7 (78-51) 23

Accelerator Link

3G7 (75-54) 21

Tool Box & License Bracket


3B7 (75-51) 20



Emblem & Name Plate

3A7 (74-56) 19

Ash Receptacle

(8708-)

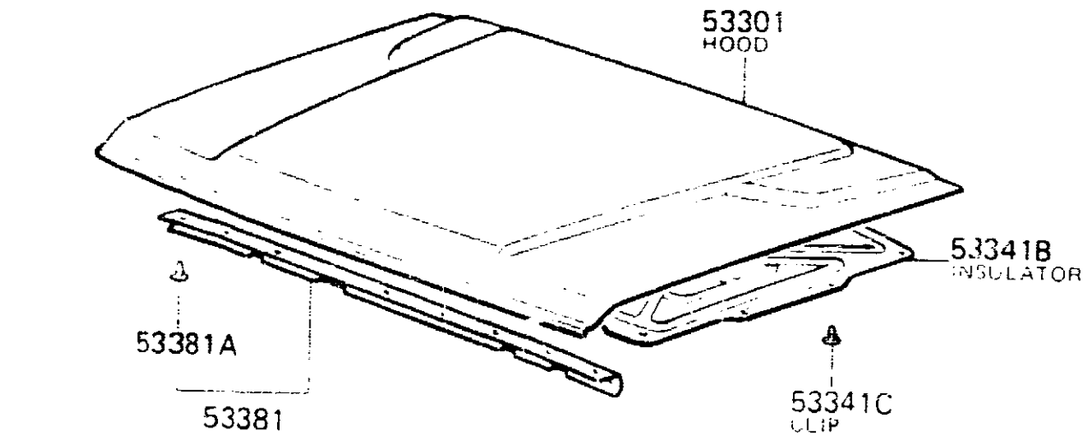

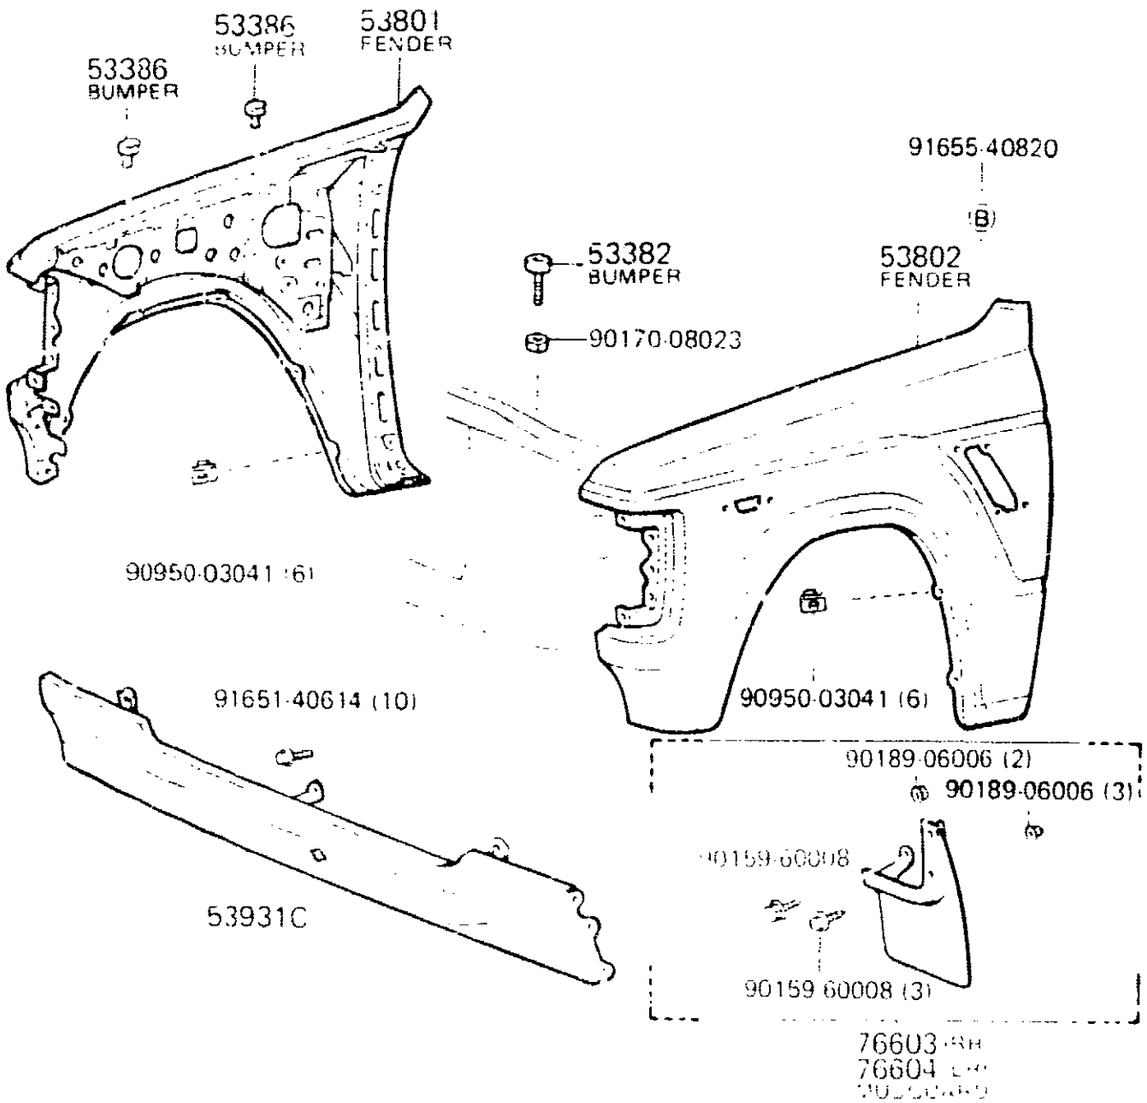

M3 L879 A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	53301	HOOD SUB-ASSY					
8708-9001	FJ62			53301-90A01-	1		
	53341B	INSULATOR, HOOD					
8708-9001	FJ62			53341-90A00-	1		
	53341C	CLIP (FOR HOOD INSULATOR)					
8708-9001	FJ62			90467-09014-	17		
	53381	SEAL, HOOD TO RADIATOR SUPPORT					
8708-9001	FJ62			53381-90A00-	1		
	53381A	CLIP (FOR HOOD TO RADIATOR SUPPORT SEAL)					
8708-9001	FJ62			90467-08011-	9		
	53382	BUMPER, HOOD, FRONT					
8806-9001	FJ62			53382-90K01-	2		
	53386	BUMPER, HOOD, REAR					
8708-9001	FJ62			53382-30060-	4		
	53801	FENDER SUB-ASSY, FRONT, RH					
8708-9001	FJ62			53801-90G00-	1		
	53802	FENDER SUB-ASSY, FRONT, LH					
8708-9001	FJ62			53802-90A72-	1		
	53931C	PANEL, FRONT END					
8708-9001	FJ62			53931-90A06-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	57417A	REINFORCEMENT, FRONT FLOOR UNDER					
8708-9001	FJ62			57417-90A03-	1		
	57425	REINFORCEMENT, FRONT FLOOR, NO.2 RH					
8708-9001	FJ62			57425-90A02-	1		
	57426	REINFORCEMENT, FRONT FLOOR, NO.2 LH					
8708-9001	FJ62			57426-90A04-	1		
	57427	REINFORCEMENT, FRONT FLOOR TO BRACE					
8708-9001	FJ62			57427-90A00-	1		
	57468B	BRACKET, FRONT SEAT, REAR					
8708-9001	FJ62	OUTER		57468-90A01-	2		
8708-9001	FJ62	INNER		57468-90A02-	2		
	57483	RETAINER, DIFFERENTIAL LOCK LEVER SUPPORT					
8708-9001	FJ62			57483-90A00-	2		
8708-9001	FJ62..USA	W(FRONT HEATER & DIFFERENTIAL LOCK)		〃	1		
	57511	REINFORCEMENT, FRONT FLOOR, CENTER					
8708-9001	FJ62			57511-90A03-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	58111	PAN, FRONT FLOOR					
8708-9001	FJ62			58111-90A46-	1		
	58171	REINFORCEMENT, PARKING BRAKE BASE					
8708-9001	FJ62			58107-90A00-	1		
	58188A	BRACKET, ACCELERATOR PEDAL STOPPER					
8708-9001	FJ62			58188-90A03-	1		
	58191	FOOTREST, FRONT FLOOR					
8708-9001	FJ62			58192-90A00-	1		
	58203A	REINFORCEMENT SUB-ASSY, CENTER FLOOR PANEL, RH					
8708-9001	FJ62			58203-90A00-	1		
	58204A	REINFORCEMENT SUB-ASSY, CENTER FLOOR PANEL, LH					
8708-9001	FJ62			58204-90A00-	1		
	58208	PAN, CENTER FLOOR					
8708-9001	FJ62..USA	W(FRONT HEATER)		58211-90A21-	1		
8708-9001	FJ62..USA	W(FRONT HEATER & DIFFERENTIAL LOCK)		58211-90A24-	1		
8708-9001	FJ62			58211-90A26-	1		
8708-9001	FJ62	W(DIFFERENTIAL LOCK)		58211-90A28-	1		
	58247A	REINFORCEMENT, REAR SEAT CUSHION HINGE, RH					
8708-9001	FJ62			58247-90A00-	1		
	58248	REINFORCEMENT, REAR SEAT CUSHION LOCK					
8708-9001	FJ62			58248-90A00-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	61744A	REINFORCEMENT, BACK DOOR OPENING SIDE, LH					
8708-9001	FJ62			61034-90A00-	1		
	61745A	REINFORCEMENT, BACK DOOR OPENING, LOWER RH					
8708-9001	FJ62			61745-90A01-	1		
	61746A	REINFORCEMENT, BACK DOOR OPENING, LOWER LH					
8708-9001	FJ62			61746-90A01-	1		
	61791B	COVER, ROOF SIDE INNER SERVICE HOLE					
8708-9001	FJ62			61791-90B01-	2		
	61793B	BRACKET, COOLER CONDENSER, NO.1					
8708-9001	FJ62			61793-90A00-	1		
	67813	PAD, QUARTER PANEL SILENCER					
8708-9001	FJ62		RH	67813-90A00-	1		
8708-9001	FJ62		LH	67814-90A00-	1		
	76607	MUDGUARD SUB-ASSY, QUARTER PANEL, REAR RH					
8708-9001	FJ62			76607-69015-	1		
	76608	MUDGUARD SUB-ASSY, QUARTER PANEL, REAR LH					
8708-9001	FJ62			76608-69015-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T


	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		67601A	RETAINER (FOR FRONT DOOR TRIM BOARD)					
	8708-9001	FJ62			67771-22010-	22		
		67602	BOARD SUB-ASSY, FRONT DOOR TRIM, LH					
	8708-8808	FJ62	SHADOW GRAY(TRIM1)		67620-90G07-03	1		
	8708-8808	FJ62	SEPIA BROWN(TRIM4)		67620-90G07-06	1		
	8708-8808	FJ62..CND	W(POWER WINDOW),SHADOW GRAY(TRIM1)		67620-90G14-03	1		
	8708-8808	FJ62..USA	W(POWER WINDOW),SHADOW GRAY(TRIM1)		〃	1		
	8708-8808	FJ62..CND	W(POWER WINDOW),SEPIA BROWN(TRIM4)		67620-90G14-06	1		
	8708-8808	FJ62..USA	W(POWER WINDOW),SEPIA BROWN(TRIM4)		〃	1		
P	8808-9001	FJ62..WGG	SHADOW GRAY(TRIM1)		67620-90G41-03	1		
P	8808-9001	FJ62..WGG	SEPIA BROWN(TRIM4)		67620-90G41-06	1		
P	8808-9001	FJ62..CND	W(POWER WINDOW),SHADOW GRAY(TRIM1)		67620-90G48-03	1		
P	8808-9001	FJ62..WGG..USA	W(POWER WINDOW),SHADOW GRAY(TRIM1)		〃	1		
P	8808-9001	FJ62..CND	W(POWER WINDOW),SEPIA BROWN(TRIM4)		67620-90G48-06	1		
P	8808-9001	FJ62..WGG..USA	W(POWER WINDOW),SEPIA BROWN(TRIM4)		〃	1		
		67651A	GRILLE, SPEAKER DOOR					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		67651-90A01-03	2		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		67651-90A01-06	2		
		67777	POCKET, FRONT DOOR TRIM, RH					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		67777-22040-23	1		
P	8708-9001	FJ62	BROWN(TRIM4)		67777-22040-36	1		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		67778	POCKET, FRONT DOOR TRIM, LH					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		67778-22030-23	1		
P	8708-9001	FJ62	BROWN(TRIM4)		67778-22030-46	1		
		67831	COVER, FRONT DOOR SERVICE HOLE, RH					
P	8708-8908	FJ62			67832-90A07-	1		
B	8908-9001	FJ62..WGG			67832-90A04-	1		
		67832	COVER, FRONT DOOR SERVICE HOLE, LH					
P	8708-8908	FJ62			67832-90A07-	1		
B	8908-9001	FJ62..WGG			67832-90A04-	1		
		67861	WEATHERSTRIP, FRONT DOOR, RH					
	8708-9001	FJ62			67861-90A00-	1		
		67862	WEATHERSTRIP, FRONT DOOR, LH					
	8708-9001	FJ62			67862-90A00-	1		
		67867C	RETAINER, FRONT DOOR WEATHERSTRIP, RH					
	8708-9001	FJ62			67868-30040-	22		
		67868C	RETAINER, FRONT DOOR WEATHERSTRIP, LH					
	8708-9001	FJ62			67868-30040-	22		
		68101	GLASS SUB-ASSY, FRONT DOOR, RH					
	8708-9001	FJ62	*TT, T=4.0		68111-90A01-	1		
		68102	GLASS SUB-ASSY, FRONT DOOR, LH					
	8708-9001	FJ62	*TT, T=4.0		68112-90A01-	1		

*TT - Tinted Tempered Glass

FIG. 67-61 BACK DOOR PANEL & GLASS

(8708-)

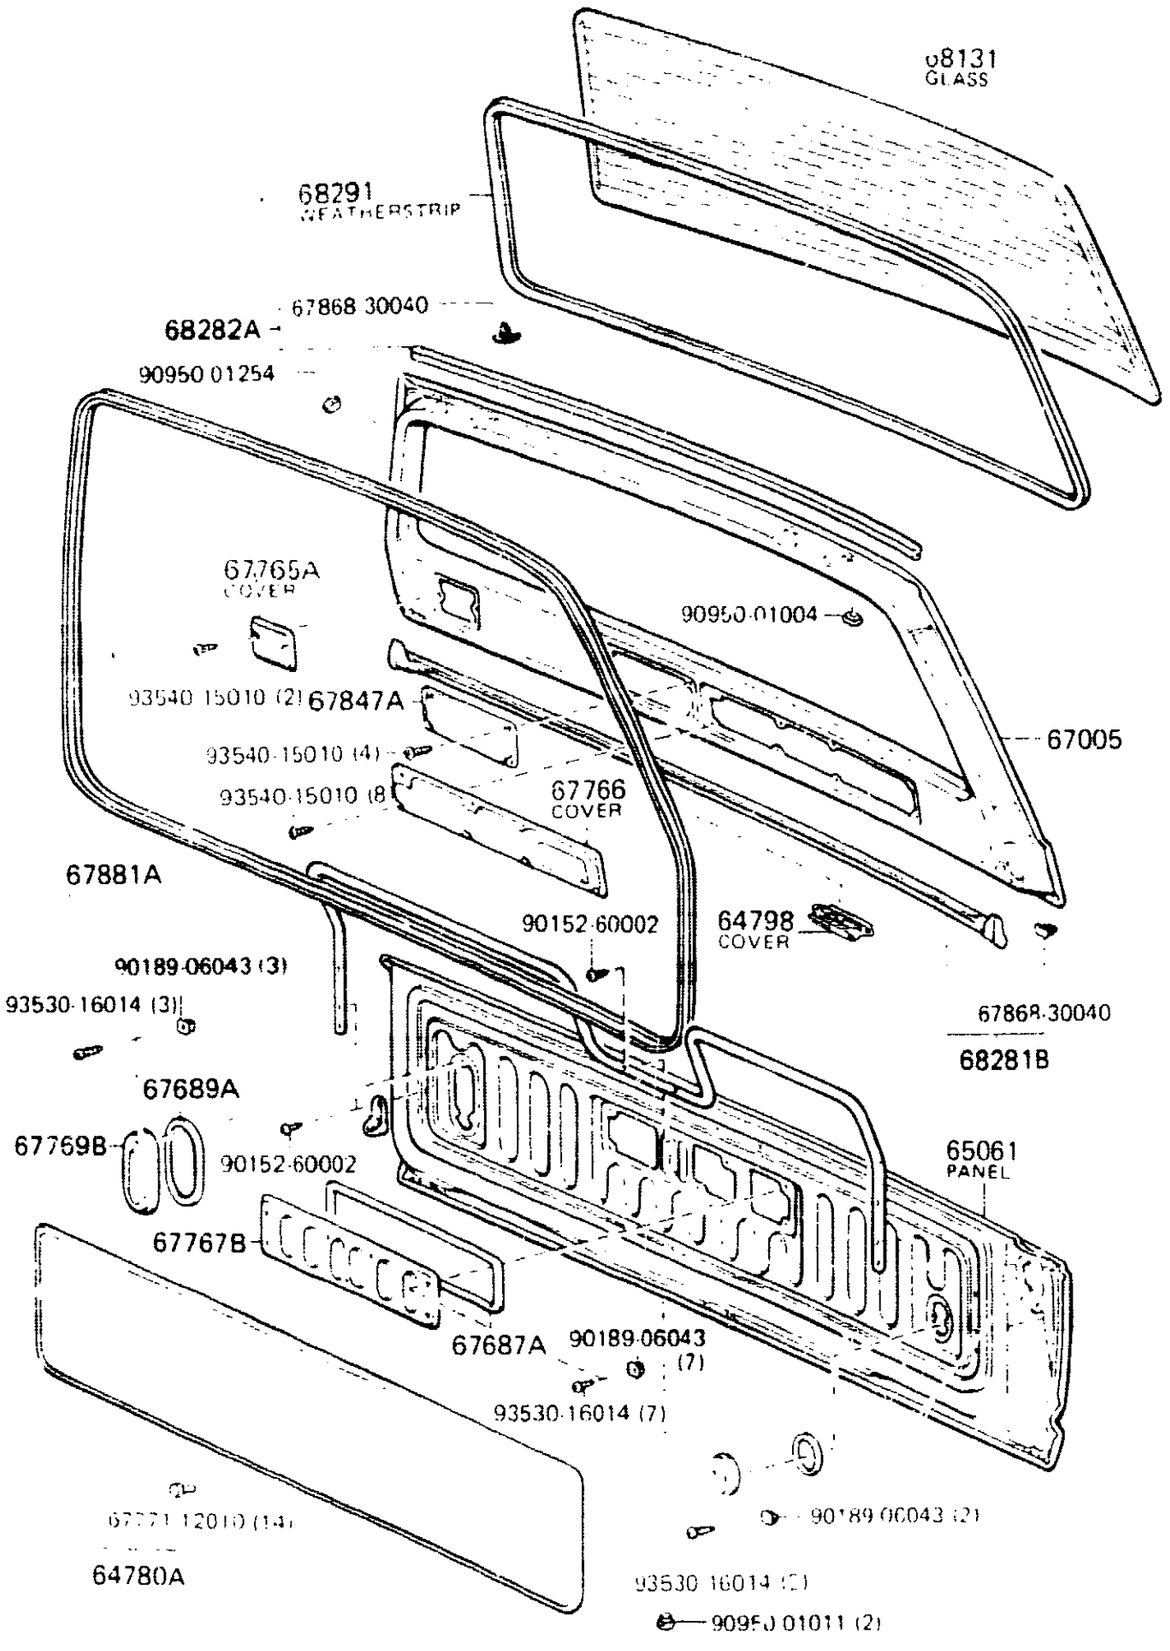


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	64780A	PANEL ASSY, BACK DOOR TRIM					
P 8708-9001	FJ62	SHADOW GRAY(TRIM1)		64780-90A01-13	1		
P 8708-9001	FJ62	SEPIA BROWN(TRIM4)		64780-90A01-16	1		
	64798	COVER, BACK DOOR LOCK					
8708-9001	FJ62			64798-90A00-	1		
	65061	PANEL SUB-ASSY, TAIL GATE					
8708-9001	FJ62			65061-90A13-	1		
	67005	PANEL SUB-ASSY, BACK DOOR					
8708-9001	FJ62			67005-90A20-	1		
8708-9001	FJ62	W(POWER WINDOW)		67005-90A27-	1		
	67687A	PACKING, BACK DOOR SERVICE HOLE, NO.3					
8708-9001	FJ62			67687-90A00-	1		
	67689A	PACKING, BACK DOOR SERVICE HOLE, NO.5					
8708-9001	FJ62			67689-90A00-	1		
	67765A	COVER, BACK DOOR SERVICE HOLE, NO.1					
8708-9001	FJ62			67765-90A00-	1		
	67766	COVER, BACK DOOR SERVICE HOLE, NO.2					
8708-9001	FJ62			67766-90A00-	1		
	67767B	COVER, BACK DOOR SERVICE HOLE, NO.3					
8708-9001	FJ62			67767-90A00-	1		
	67769B	COVER, BACK DOOR SERVICE HOLE, NO.5					
8708-9001	FJ62			67769-90A00-	1		


FIG. 74-51 ARMREST & VISOR


3J6


791430M-01311


(8708-)

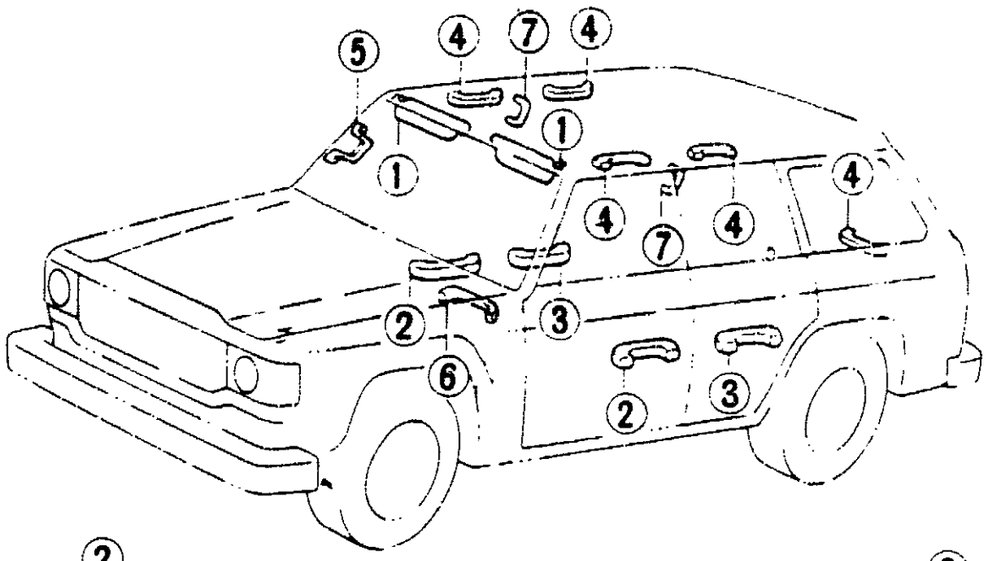


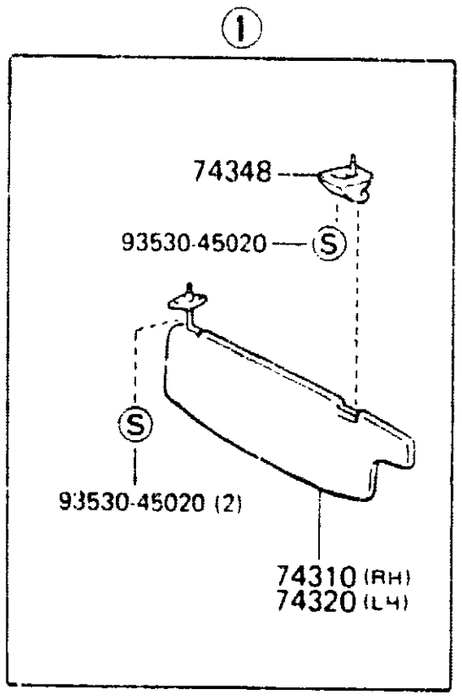


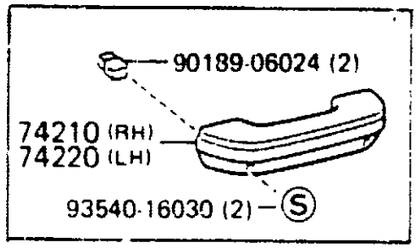


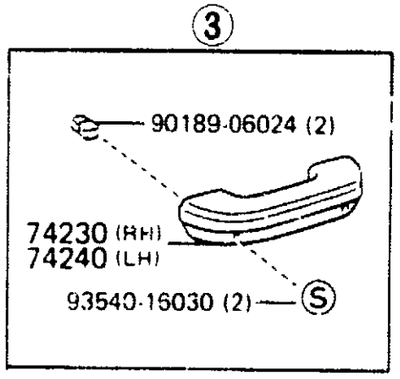

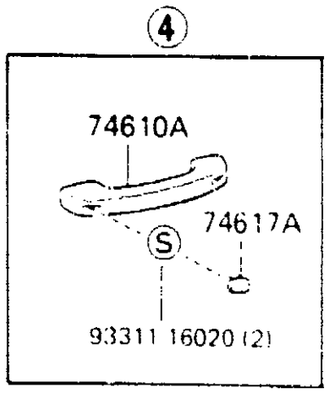

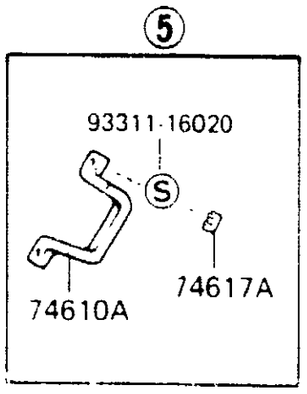

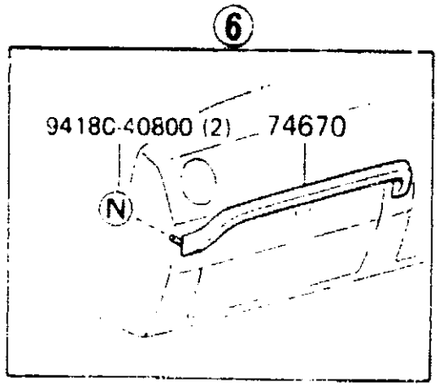

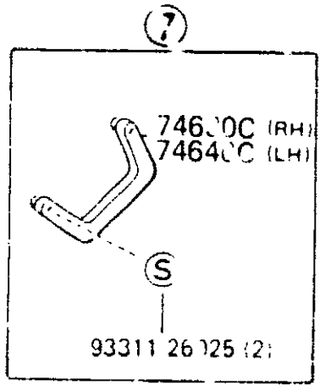


MB 1017 A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	58279A	PROTECTOR, FUEL HOSE					
8708-9001	FJ62			58279-90A00-	1		
	77022A	HOSE, FUEL (FOR FUEL EVAPORATIVE SEPARATOR)					
8708-9001	FJ62	250X312X92		77249-60040-	1		
8708-9001	FJ62	265X285X70		77249-60050-	1		
8708-9001	FJ62	L=150		90445-22015-	1		
8708-9001	FJ62	L=300		90445-22904-	1		
8708-9001	FJ62	*H, L=240		95332-10024-	4		
8708-9001	FJ62	L=360		95332-10036-	1		
8708-9001	FJ62	*H, L=340		95333-06040-	1		
8708-9001	FJ62	*H, L=480		95333-06060-	1		
	77035	CABLE SUB-ASSY, FUEL LID LOCK CONTROL					
8708-9001	FJ62			77030-90A01-	1		
	77037	LOCK SUB-ASSY, FUEL FILLER OPENING LID					
8708-9001	FJ62			77037-90K00-	1		
	77100	TANK ASSY, FUEL					
8708-9001	FJ62			77001-60220-	1		
	77100A	PLUG (FOR FUEL TANK)					
8708-9001	FJ62			90105-12018-	1		
	77100B	GASKET (FOR FUEL TANK)					
8708-9001	FJ62			90430-12245-	1		
	77193	VALVE, FUEL LIQUID VAPOR SEPARATOR					
8708-9001	FJ62			77193-60031-	1		
	77201	PIPE SUB-ASSY, FUEL TANK INLET					
8708-9001	FJ62			77201-60150-	1		
	77209	CONNECTOR SUB-ASSY, FUEL TUBE					
8708-9001	FJ62			77209-60041-	1		
	77213B	HOSE, FUEL TANK TO FILLER PIPE					
8708-9001	FJ62			77213-60050-	1		
	77250	HOSE ASSY, FUEL RETURN					
8708-8806	FJ62			# 77250-60080- -(77250-60081-) .(90464-00516-)	1 1 1		
8808-9001	FJ62..WGG		A	77250-60081-	1		
	77251B	TUBE, FUEL MAIN					
8708-9001	FJ62			77205-60140-	1		
	77254A	HOSE, FUEL, NO.1 (FOR EMISSION TUBE, NO.1)					
8708-9001	FJ62	*H, L=700		95333-06080-	1		
	77255F	HOSE, FUEL, NO.2 (FOR FUEL RETURN TUBE)					
8708-9001	FJ62			77250-60090-	1		
	77261D	TUBE, FUEL TANK TO CANISTER					
8708-9001	FJ62			77262-60030-	1		
	77261E	HOSE, FUEL, NO.1 (FOR FUEL TANK TO CANISTER TUBE)					
8708-9001	FJ62	*H, L=360		95333-06040-	1		
	77262	TUBE, FUEL EMISSION, NO.2					
8708-9001	FJ62			77261-60080-	1		

*H, L = Cut hose to length as specified in remarks

(8708-)

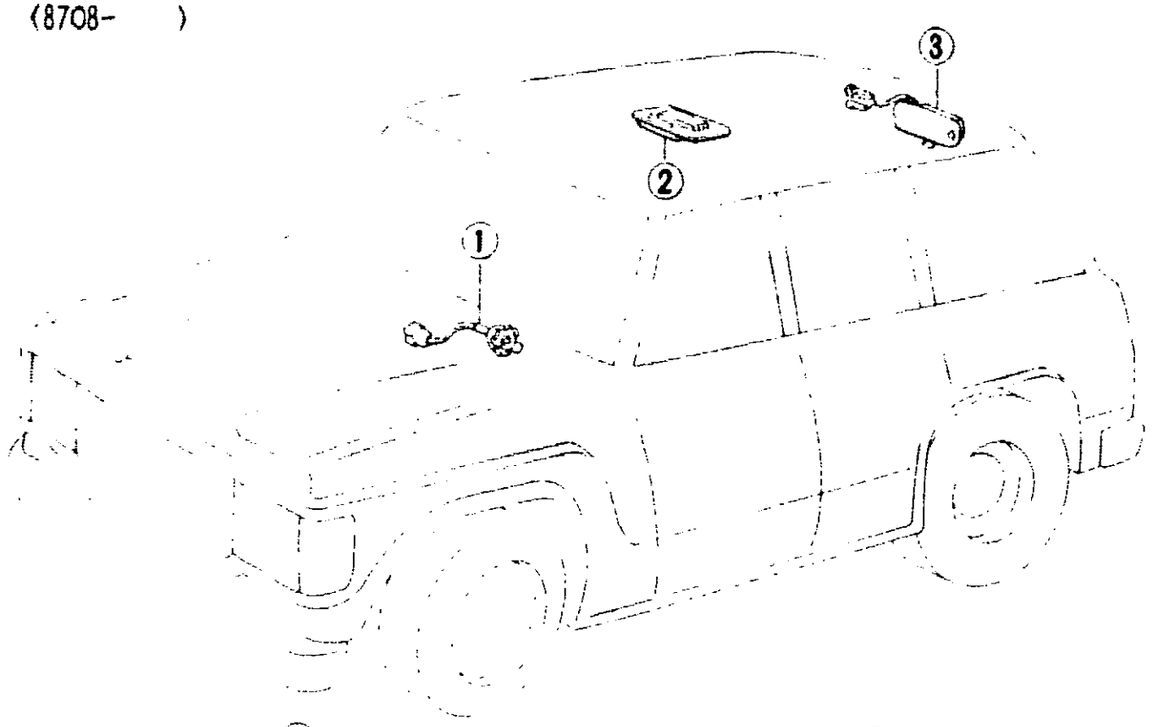


ME J490

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		81240 LAMP ASSY, ROOM, NO.1						
P	8708-9001	FJ62	IVORY(TRIM1,4),FRONT		81240-22070-08	1		002
P	8708-9001	FJ62	REAR		81240-95A16-	1		002
		81240B BULB, ROOM LAMP, NO.1						
P	8708-9001	FJ62	12V 10W,REAR		90981-11004-	1		002
P	8708-9001	FJ62	12V 10W,FRONT		99132-12100-	1		002
		81241 LENS, ROOM LAMP, NO.1						
P	8708-9001	FJ62			81241-20060-	1		002
		81260 LAMP ASSY, GLOVE BOX						
	8708-8808	FJ62			81260-22030-	1		002
	8808-9001	FJ62..CND			〃	1		
	8808-9001	FJ62..WGV			〃	1		
		81260B BULB (FOR GLOVE BOX)						
	8708-8808	FJ62	12V 1.2W OR 14V 1.4W		90981-11018-	1		002
	8808-9001	FJ62..CND	12V 1.2W OR 14V 1.4W		〃	1		
	8808-9001	FJ62..WGV	12V 1.2W OR 14V 1.4W		〃	1		

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		84653A	SWITCH, REAR WIPER					
	8708-9001	FJ62			84653-32020-	1		
		84722F	SWITCH, TRANSMISSION CONTROL					
	8708-9001	FJ62			84722-60070-	1		
		84730	SWITCH ASSY, HEATER BLOWER					
P	8708-8909	FJ62	FRONT		84730-90A00-	1		
	8708-9001	FJ62	REAR		84732-90A00-	1		
N	8909-9001	FJ62..WGG	FRONT		84730-90A02-	1		
		84760	SWITCH ASSY, ANTENNA					
	8708-9001	FJ62			84760-90A01-	1		
		84790	SWITCH ASSY, REAR WINDOW DEFOGGER					
	8708-9001	FJ62			84790-90A09-	1		
		84810	SWITCH ASSY, POWER WINDOW REGULATOR					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1),FRONT		84810-90A02-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4),FRONT		84810-90A02-06	1		
P	8708-9001	FJ62	SHADOW GRAY(TRIM1),REAR		84810-90A03-03	2		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4),REAR		84810-90A03-06	2		
		84820	MASTER SWITCH ASSY, POWER WINDOW REGULATOR					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		84820-90A08-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		84820-90A08-06	1		


PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	84870A	SWITCH ASSY, OUTER MIRROR					
8708-8804	FJ62			84870-14060-	1		
8804-8807	FJ62			84870-22040-	1		
8807-9001	FJ62			84870-90A00-	1		
	84956A	BRACKET, HAND BRAKE SIGNAL SWITCH					
8708-9001	FJ62			84956-60030-	1		
	85440A	SOLENOID ASSY, FOUR WHEEL DRIVE CONTROL					
8708-9001	FJ62			85440-60120-	1		
	85500	LIGHTER ASSY, CIGARETTE					
8708-9001	FJ62			85500-90A07-	1		
	85520	KNOB AND ELEMENT ASSY, CIGARETTE LIGHTER					
8708-9001	FJ62			85520-14030-	1		
	85910C	RELAY ASSY (FOR HEATER BLOWER MOTOR)					
8708-8803	FJ62	FRONT		85913-30020-	1		
8708-9001	FJ62	REAR		88630-14010-	1		
8803-9001	FJ62	FRONT		90987-04002-	1		
	85916	RELAY, LIGHT CONTROL					
8708-9001	FJ62	TAIL		90987-01003-	1		
8708-9001	FJ62	HEAD		90987-02006-	1		
	85917	RELAY, FRONT DRIVE					
8708-9001	FJ62			90987-03001-	1		

(8708-)

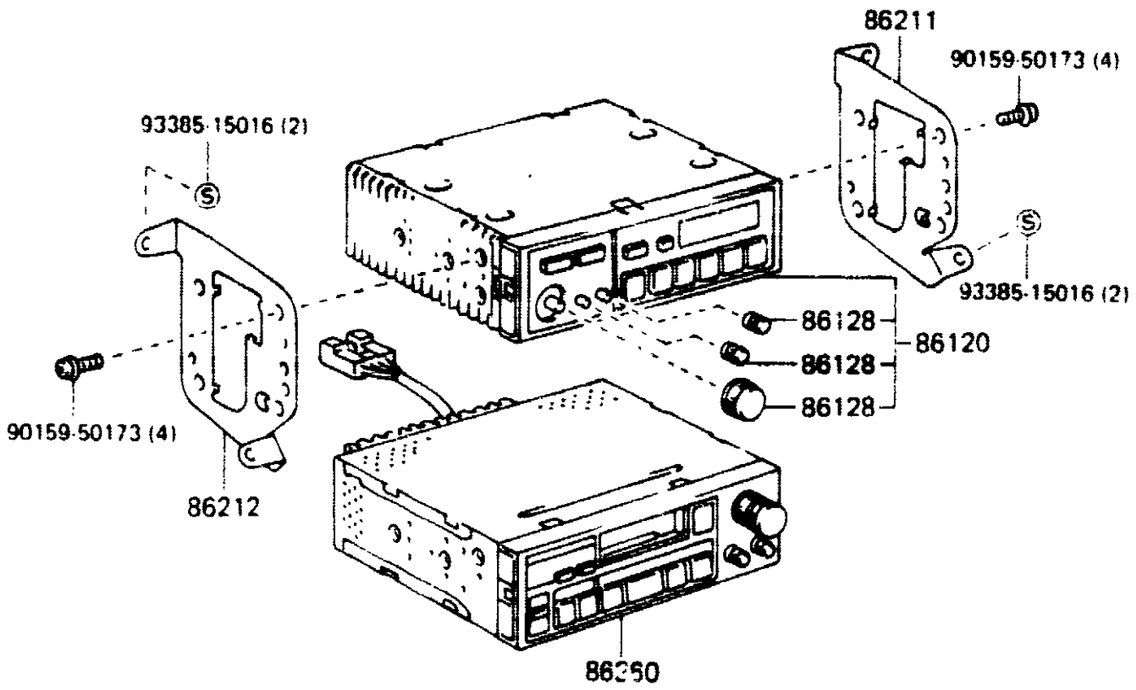


Noise Filter 86011C


Wiper

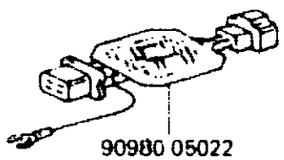

Stop Switch

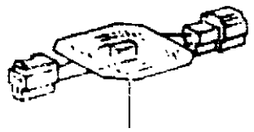

Oil Pressure

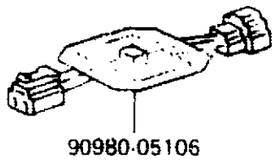

Voltage Regulator




Heater




ME J663 A

(8708- W/CASSET)

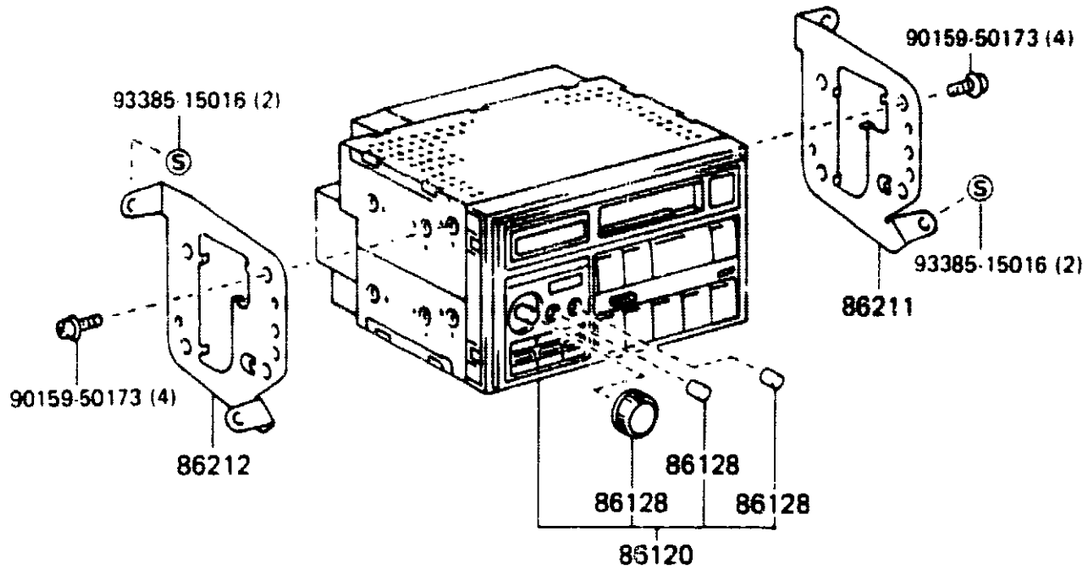


Noise Filter 86011C


Wiper

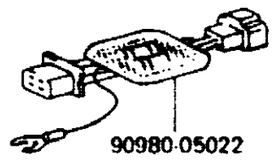


Stop Switch

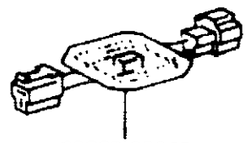

Oil Pressure

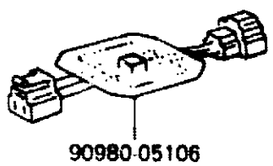

Voltage Regulator

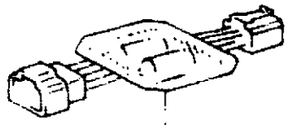

Heater




ME J664-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	55084C	DUCT SUB-ASSY, HEATER TO REGISTER, NO.1					
8805-9001	FJ62			55084-90A03-	1		
	55085	DUCT SUB-ASSY, HEATER TO REGISTER, NO.2					
8708-9001	FJ62			55085-90A01-	1		
	55086	DUCT SUB-ASSY, HEATER TO REGISTER, NO.3					
8708-9001	FJ62			55086-90A01-	1		
	55087	DUCT SUB-ASSY, HEATER TO REGISTER, NO.4					
8708-9001	FJ62			55087-90A01-	1		
	55088	DUCT SUB-ASSY, HEATER TO REGISTER, NO.5					
8708-9001	FJ62			55088-90A01-	1		
	55089	DUCT SUB-ASSY, HEATER TO REGISTER, NO.6					
8708-9001	FJ62			55089-90A03-	1		
	55843A	DUCT, HEATER TO REGISTER, NO.1					
8708-8805	FJ62			# 55843-90A03-	1		
				(55084-90A03-)	1		
	55906A	CABLE SUB-ASSY, DEFROSTER DAMPER CONTROL					
8708-9001	FJ62			55905-90A00-	1		
	55907A	CABLE SUB-ASSY, WATER VALVE CONTROL					
8708-9001	FJ62			87286-90A01-	1		
	55908A	CABLE SUB-ASSY, AIR INLET DAMPER CONTROL					
8708-9001	FJ62			55908-90A00-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	55909A	CABLE SUB-ASSY, AIRMIX DAMPER CONTROL					
8708-9001	FJ62			55907-90A00-	1		
	55910	CONTROL ASSY, HEATER OR BOOST VENTILATOR					
8708-9001	FJ62			55901-90A01-	1		
	55937	KNOB, HEATER CONTROL LEVER					
8708-9001	FJ62			55905-22050-	4		
	87211	DUCT, AIR, NO.1					
8708-9001	FJ62			87211-90A01-	1		
	87211B	DUCT, AIR, NO.3					
8708-9001	FJ62			87201-90A04-	1		
	87211C	DUCT, AIR, NO.4					
8708-9001	FJ62			87201-90A02-	1		

	PART NUMBER	LOCATION
	91611-61020-	2B4
	91651-61030-	2A4
	-61040-	2A4
	94110-40600-	2J8
	94115-71200-	2J8
	94183-60800-	2J9
	94184-61200-	2J7
	95332-10024-	3J7
	-10036-	3J7
	95333-06010-	3K7
	-06020-	1C3
	-06030-	3K7
	-06040-	3J7
	-06060-	3J7
	-06080-	3J7
	95411-19930-	2J4
	95441-09340-	2J4
	96111-10500-	1L2
	-10510-	1L2
	-10930-	1F3
		1G3
	96112-10250-	1H2
		1K2
	96132-30600-	2G5
		2H6
	96150-01600-	2J3
	96151-01700-	2E7
	-02000-	2D8
	-02500-	2J2
	96152-00300-	2M6
	96160-00500-	2K8
	-00600-	2K8
	96411-11600-	2B4
	-42500-	1F1
		1I1
	-43000-	1C3
	-45000-	1F1
		1I1
	96431-53828-	1H1
	96432-23814-	1H1
	96711-19010-	2H4
		2K7
	-19013-	2E7
	-19014-	2F7
	-19016-	2D7
	-24023-	2E5
		2G6
	-24045-	2A7
	96940-33005-	2B9
	-33805-	2C9
	-39855-	2B9
P	99132-11075-	3H8
P	-11270-	3C8
P		3F8
	-12034-	3D9
		3E9
P	-12100-	3J8
P	-21270-	3F8
	99332-11175-	1A3
	-11180-	1A3
	99555-10125-	1J4
		1K2
	99556-20095-	3L11
	-30100-	3L11
B	99556-30210-	1H2
	99911-11200-	1A1
	99913-11500-	1A1
	99914-10810-	1A1
	-11214-	1A1
	99915-10700-	1A1

ELECTRICAL GROUP (1/2)

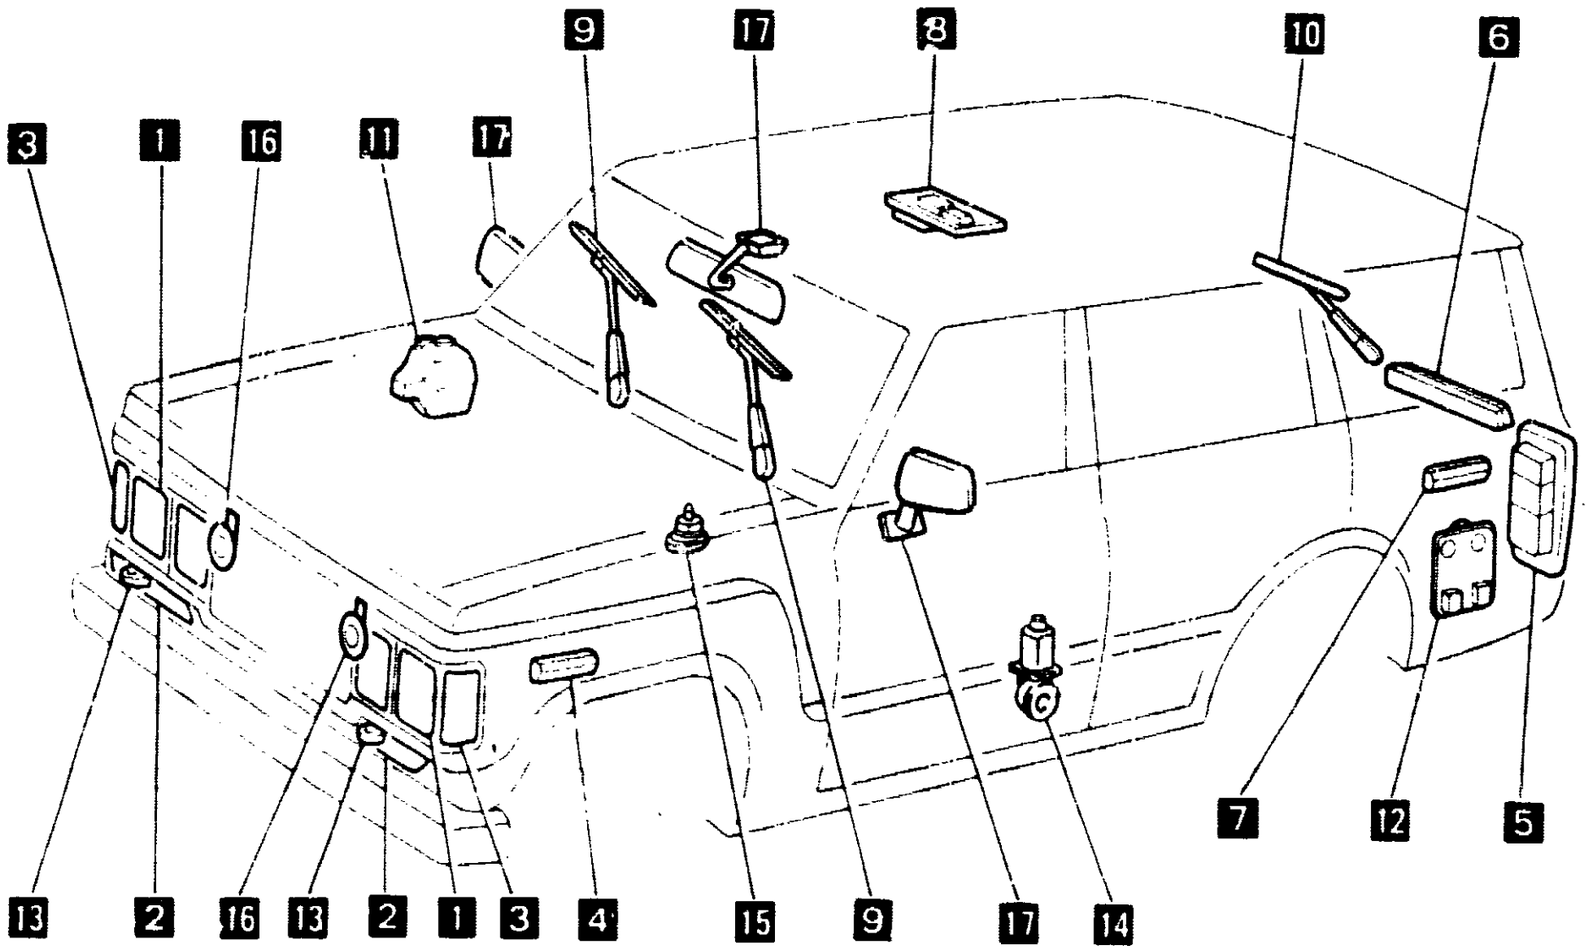


3A8 (81-01) 1

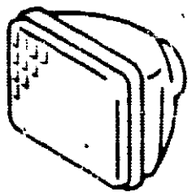

Headlamp

3C8 (81-03) 2

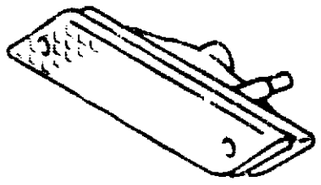


Front Turn Signal Lamp

3D8 (81-04) 3




Front Clearance Lamp

3E8 (81-05) 4

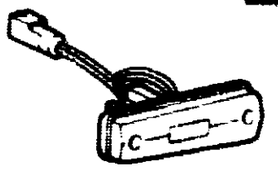


Front Marker Lamp

3F8 (81-1*) 5

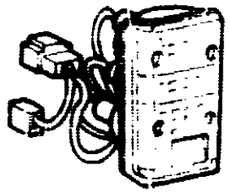


Rear Combination Lamp

3H8 (81-*3) 6

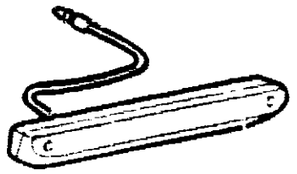

License Plate Lamp

3I8 (81-14) 7

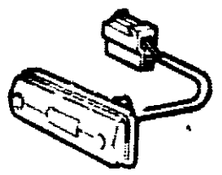


Rear Side Marker Lamp

3J8 (81-21) 8




Interior Lamp

3A10 (85-01) 9

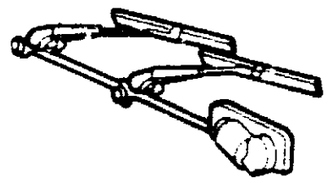


Windshield Wiper

3C10 (85-02) 10

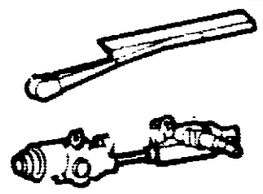


Rear Wiper

3D10 (85-03) 11

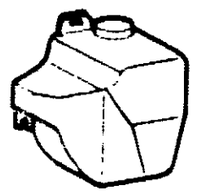

Windshield Washer

3C11 (87-01) 17

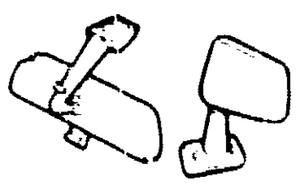


Mirror

3B11 (86-11) 16



Horn

3A11 (86-04) 15

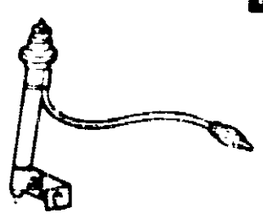


Antenna

3I10 (85-11) 14



Door Motor & Door Solenoid

3G10 (85-05) 13

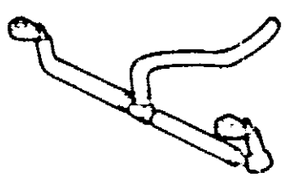

Headlamp Cleaner

3F10 (85-04) 12



Rear Washer

ME 9870

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	76603	MUDGUARD SUB-ASSY, FRONT FENDER, RH					
8708-9001	FJ62			76603-69015-	1		
	76604	MUDGUARD SUB-ASSY, FRONT FENDER, LH					
8708-9001	FJ62			76604-69015-	1		


PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	58248A	REINFORCEMENT, REAR SEAT CUSHION HINGE, LH					
8708-9001	FJ62			58247-90A00-	1		
	58262	COVER, TRANSMISSION					
8708-9001	FJ62			58261-90A04-	1		
	58263D	PACKING, TRANSMISSION COVER					
8708-9001	FJ62			58263-90A02-	1		
	58268B	SEAL, TRANSFER LEVER BOOT					
8708-9001	FJ62			58268-90A05-	1		
	58291B	BOOT, TRANSFER SHIFT LEVER					
8708-8901	FJ62			# 58290-90A04-	1		
				(58290-90A05-)	1		
8901-9001	FJ62..WGG			58290-90A05-	1		
	58754	PLATE, ENGINE SERVICE COVER CATCH					
8708-9001	FJ62			58754-90A00-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

FIG. 61-52 SIDE WINDOW

(8708-)

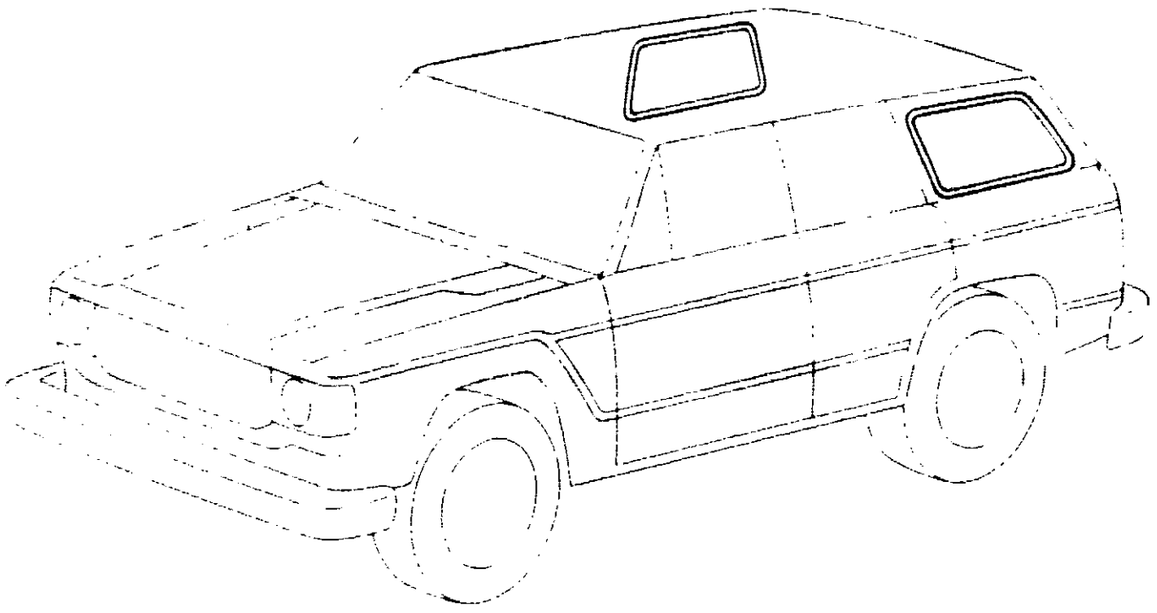

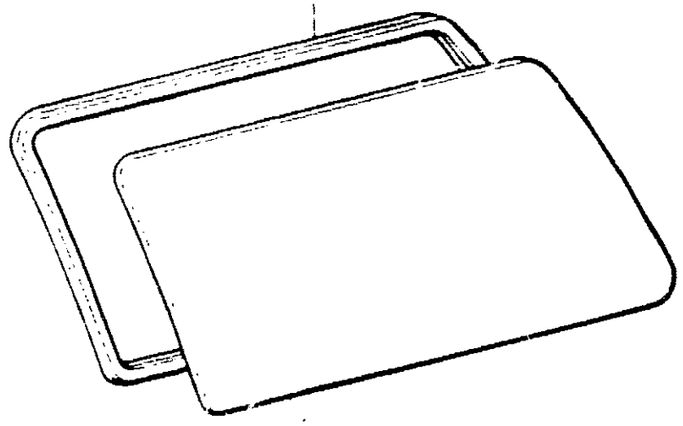

MB L928

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	62711	GLASS, QUARTER WINDOW, RH					
8708-9001	FJ62	*TT, T=3.5		62711-90A12-	1		
	62712	GLASS, QUARTER WINDOW, LH					
8708-9001	FJ62	*TT, T=3.5		62712-90A11-	1		
	62741	WEATHERSTRIP, QUARTER WINDOW, RH					
8708-9001	FJ62			62741-90A01-	1		
	62742	WEATHERSTRIP, QUARTER WINDOW, LH					
8708-9001	FJ62			62741-90A01-	1		

*TT = Tinted Tempered Glass

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	68141	RUN, FRONT DOOR GLASS					
8708-9001	FJ62			68141-90A03-	2		
	68143A	RUN, FRONT DOOR GLASS, NO.2					
8708-9001	FJ62			68143-90A01-	2		
	68170	WEATHERSTRIP ASSY, FRONT DOOR GLASS, INNER					
8708-9001	FJ62			68170-90A01-	2		
	68610	CHECK ASSY, FRONT DOOR					
8708-9001	FJ62			68610-22010-	2		
	68617	PIN, FRONT DOOR CHECK					
8708-9001	FJ62			68617-90A01-	2		
	69751E	HOLDER, FRONT DOOR LOCK CONTROL KNOB					
8708-9001	FJ62			69751-20040-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	67847A	COVER, BACK DOOR SERVICE HOLE					
8708-9001	FJ62			67847-90A01-	1		
	67881A	WEATHERSTRIP, BACK DOOR					
8708-9001	FJ62			67881-90A06-	1		
	68131	GLASS, BACK DOOR					
8708-9001	FJ62	*EHTT, T=3.5		68131-90A20-	1		
	68281B	WEATHERSTRIP, LIFT GATE					
8708-9001	FJ62			68281-90A00-	1		
	68282A	WEATHERSTRIP, LIFT GATE, UPPER					
8708-9001	FJ62			68282-90A00-	1		
	68291	WEATHERSTRIP, BACK DOOR GLASS					
8708-9001	FJ62			68291-90A01-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T


*EHTT - Electrical Heated Tinted Tempered Glass

	PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
		74210	**ARMREST ASSY, FRONT, RH**					
P	8708-9001	FJ62	GRAY(TRIM1)		74250-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		74250-90A00-16	1		
		74220	**ARMREST ASSY, FRONT, LH**					
P	8708-9001	FJ62	GRAY(TRIM1)		74250-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		74250-90A00-16	1		
		74230	**ARMREST ASSY, REAR, RH**					
P	8708-9001	FJ62	GRAY(TRIM1)		74250-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		74250-90A00-16	1		
		74240	**ARMREST ASSY, REAR, LH**					
P	8708-9001	FJ62	GRAY(TRIM1)		74250-90A00-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		74250-90A00-16	1		
		74310	**VISOR ASSY, RH**					
P	8708-9001	FJ62..CND	IVORY(TRIM1,4)		74310-90A28-08	1		
P	8708-9001	FJ62..USA	IVORY(TRIM1,4)		74310-90A52-08	1		
		74320	**VISOR ASSY, LH**					
P	8708-9001	FJ62..CND	IVORY(TRIM1,4)		74320-90A25-08	1		
P	8708-9001	FJ62..USA	IVORY(TRIM1,4)		74320-90A42-08	1		
		74348	**HOLDER, VISOR**					
P	8708-9001	FJ62	IVORY(TRIM1,4)		74348-12010-18	2		
		74610A	**GRIP SUB-ASSY, ASSIST**					
	8708-9001	FJ62	IVORY(TRIM1,4),ROOF SIDE &BACK DOOR		74610-10020-18	4		
		74610A CONTINUED	**GRIP SUB-ASSY, ASSIST**					
	8708-9001	FJ62	IVORY(TRIM1,4),FR PILLAR		74610-90K00-08	1		
		74617A	**PLUG, ASSIST GRIP**					
	8708-9001	FJ62	IVORY(TRIM1,4),ROOF SIDE &BACK DOOR		74617-14010-18	8		
	8708-9001	FJ62	IVORY(TRIM1,4),FR PILLAR		74617-16010-09	2		
		74630C	**GRIP ASSY, DOOR ASSIST, RH**					
	8708-9001	FJ62	IVORY(TRIM1,4)		74620-90A00-18	1		
		74640C	**GRIP ASSY, DOOR ASSIST, LH**					
	8708-9001	FJ62	IVORY(TRIM1,4)		74620-90A00-18	1		
		74670	**GRIP ASSY, INSTRUMENT ASSIST**					
P	8708-9001	FJ62	SHADOW GRAY(TRIM1)		74670-90A01-03	1		
P	8708-9001	FJ62	SEPIA BROWN(TRIM4)		74670-90A01-06	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	77262A	HOSE, FUEL, NO.1(FOR FUEL TANK TO CANISTER CENTER TUBE)					
8708-9001	FJ62			90447-12058-	1		
	77263	TUBE, FUEL TANK TO CANISTER, NO.3					
8708-9001	FJ62			77244-60110-	1		
	77263A	HOSE, FUEL, NO.1 (FOR FUEL TANK TO CANISTER NO.3 TUBE)					
8708-9001	FJ62	L=300		95333-06030-	1		
	77263B	HOSE, FUEL, NO.2 (FOR FUEL TANK TO CANISTER NO.3 TUBE)					
8708-9001	FJ62	L=300		95333-06030-	1		
	77293C	PACKING, FUEL TANK OUTER FILLER PIPE					
8708-9001	FJ62			77293-60030-	1		
	77305A	LID SUB-ASSY, FUEL FILLER OPENING					
8708-9001	FJ62			77305-90A01-	1		
	77308A	CUSHION (FOR FUEL INLET BOX COVER)					
8708-9001	FJ62			90541-08003-	2		
	77310A	CAP ASSY, FUEL TANK					
8708-9001	FJ62			77310-12100-	1		
	77316	GASKET, FUEL TANK CAP					
8708-9001	FJ62			77316-12050-	1		
	77358A	STOPPER, FUEL FILLER OPENING LID					
8708-9001	FJ62			77358-12020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	77366	SPRING, FUEL FILLER OPENING LID HINGE					
8708-9001	FJ62			77366-12010-	1		
	77601A	BAND SUB-ASSY, FUEL TANK, NO.1					
8708-9001	FJ62	RH		77601-60060-	1		
8708-9001	FJ62	LH		77602-60040-	1		
	77740	CANISTER ASSY, CHARCOAL					
8708-9001	FJ62			77740-60130-	1		
	77740F	TUBE, FUEL, NO.1 (FOR CHARCOAL CANISTER)					
8708-9001	FJ62			77264-60030-	1		
	77751	BRACKET, CHARCOAL CANISTER BASE					
8708-9001	FJ62			77751-60020-	1		
	77759	HOSE, CHARCOAL CANISTER					
8708-9001	FJ62	RH, L=80		95333-06010-	1		

(8708-)

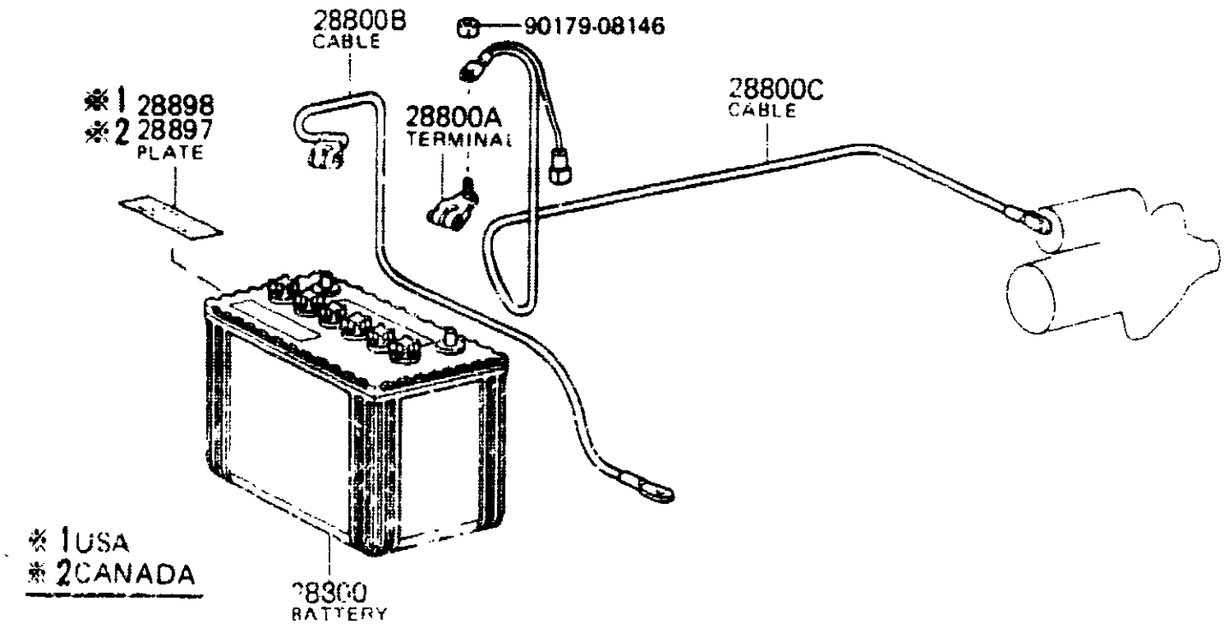

ME J593-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	28800 BATTERY						
8708-9001	3FE..FJ62	75D31R-1F		28800-61030-	1		
	28800A TERMINAL, BATTERY POSITIVE						
8708-9001	3FE..FJ62			90982-05030-	1		
	28800B CABLE, BATTERY TO GROUND						
8708-9001	3FE..FJ62			90982-02207-	1		
	28800C CABLE, BATTERY TO STARTER (FOR BATTERY TO MAIN SWITCH)						
8708-8806	3FE..FJ62			90982-01414-	1		002
8806-8808	3FE..FJ62..WGV			〃	1		002
8806-9001	3FE..FJ62..WGG			82122-90A01-	1		
	28897 PLATE, BATTERY CAUTION						
8708-9001	3FE..FJ62..CND			28897-38010-	2		
	28898 PLATE, BATTERY						
8708-9001	3FE..FJ62..USA			28898-26010-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		85927	RELAY, COOLING FAN					
	8708-9001	FJ62	NO.1		85927-60040-	1		
	8708-9001	FJ62	NO.2		90987-02004-	1		
		85930	RELAY ASSY, POWER WINDOW					
	8708-9001	FJ62			85930-90A00-	1		
		85940	RELAY ASSY, WINDSHIELD WIPER					
	8708-9001	FJ62	NO.1		85940-90A09-	1		
	8708-9001	FJ62	NO.3		85940-90A10-	1		
		85980	RELAY ASSY, DOOR CONTROL					
	8708-9001	FJ62			88630-14010-	2		
		85991	RELAY, SEAT BELT WARNING					
	8708-9001	FJ62			85991-22020-	1		
		85999A	BRACKET, RELAY, NO.2					
	8708-9001	FJ62	COOLING FAN RELAY		85399-12050-	1		
	8708-9001	FJ62	CHAGE LAMP RELAY		85995-89101-	1		
		89412	SENSOR, E.G.R GAS TEMPERATURE					
	6708-9001	FJ62..USA	CARIFORNIA SPEC		89412-12010-	1		
		89423A	SENSOR, MANIFOLD TEMPERATURE					
	8708-9001	FJ62			89423-60020-	1		
		89428	SWITCH, TEMPERATURE DETECT, NO.2					
	8708-9001	FJ62			89428-36010-	1		


	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		89437	COVER, SENSOR					
	8708-9001	FJ62			89437-60010-	2		
		89465	SENSOR, OXYGEN					
	8708-9001	FJ62			89465-69015-	2		
		89466	GASKET, OXYGEN SENSOR					
A	8708-8810	FJ62			# 89466-30010- (89466-20020-)	2 2		
A	8810-9001	FJ62..WCG			89466-20020-	2		
A	8810-9001	FJ62..WGV			# 89466-30010- (89466-20020-)	2 2		
		89530C	COMPUTER ASSY, TRANSMISSION CONTROL					
	8708-9001	FJ62			89530-60020-	1		
		89620	IGNITER ASSY					
	8708-9001	FJ62			89620-14410-	1		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		86011C FILTER, NOISE						
S	8708-9001	FJ62	WIPER		90980-05022-	1		
S	8708-9001	FJ62	STOP SWITCH		90980-05067-	1		
S	8708-9001	FJ62	OIL PRESSURE		90980-05106-	1		
S	8708-9001	FJ62	VOLTAGE REGULATOR		90980-05110-	1		
N	8708-9001	FJ62	HEATER		90980-05127-	1		
		86120 RECEIVER ASSY, RADIO						
	8708-8808	FJ62..USA	AM/FM MPX ETR 1DIN GEN		86120-20680-	1		002
	8708-8808	FJ62	AM/FM MPX ETR CASSETTE 2DIN		86120-32130-	1		002
	8708-8808	FJ62	AM/FM MPX ETR 1DIN		86120-32211-	1		002
	8708-8808	FJ62	AM/FM MPX ETR CASSETTE A.F. 2DIN		86120-90A18-	1		002
	8808-9001	FJ62..WGG	AM/FM MPX ETR 1DIN		86120-32340-	1		003
	8808-9001	FJ62..WGG	AM/FM MPX ETR CASSETTE 2DIN		86120-32370-	1		003
	8808-9001	FJ62..WGG..USA	AM/FM MPX ETR 1DIN GEN		86120-32390-	1		003
		86128 KNOB RADIO RECEIVER						
	8708-8808	FJ62..USA	PWR/VOL(RADIO P/NO.86120-20680)		86128-20020-	1		
	8708-8808	FJ62..USA	FADER,BAL,TREB,BASS(RADIO P/NO.86120-20680)		86123-20040-	4		
A	8708-8808	FJ62	PWR/VOL(RADIO P/NO.86120-32130,86120-90A18)		86128-22690-	1		002
A	8708-8808	FJ62	TREB FADE,BASS/BAL (RADIO P/NO.86120-32130,86120-90A18)		86128-22710-	2		002

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
		86128 KNOB RADIO RECEIVER CONTINUED						
	8708-8808	FJ62	PWR/VOL(RADIO P/NO.86120-32211)		86128-32190-	1		
B	8708-8808	FJ62	TREB/FADE,BASS/BAL (RADIO P/NO.86120-32211)		86128-32210-	2		
	8808-9001	FJ62..WGG	POW/VOL(RADIO P/NO.86120-32340,86120-32370)		86128-17150-	1		
B	8808-9001	FJ62..WGG	TREB/FADE,BASS/BAL (RADIO P/NO.86120-32340,86120-32370)		86128-17190-	2		
S	8808-	FJ62..WGG..USA	PWR/VOL(RADIO P/NO.86120-32390)		86128-28140-	1		
S	8808-	FJ62..WGG..USA	TREB/FADE,BASS/BAL (RADIO P/NO.86120-32390)		86128-28160-	2		
		86211 BRACKET, RADIO, NO.1						
	8708-9001	FJ62			86211-90A06-	1		
		86212 BRACKET, RADIO, NO.2						
	8708-9001	FJ62			86212-90A03-	1		
		86260 TAPE PLAYER ASSY						
	8708-8808	FJ62..USA	AM/FM ETR RADIO & W(4SP)		86260-30250-	1		002
	8708-9001	FJ62			86260-20170-	1		
	8808-9001	FJ62..WGG..USA	AM/FM ETR RADIO & W(4SP)		86260-12180-	1	003	

(8708-)


W/O Rear Heater
90339-13009

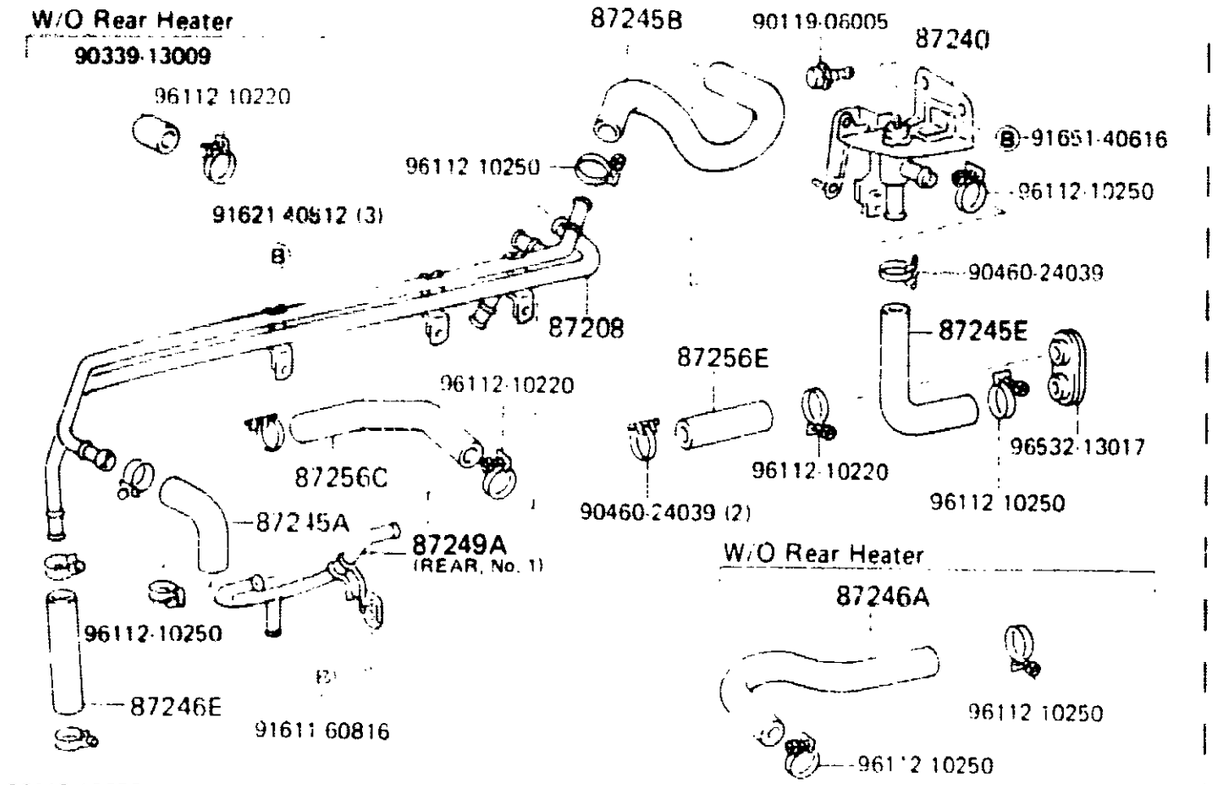

W/O Rear Heater

ME J699-D

(8708-)
REAR WATER PIPING

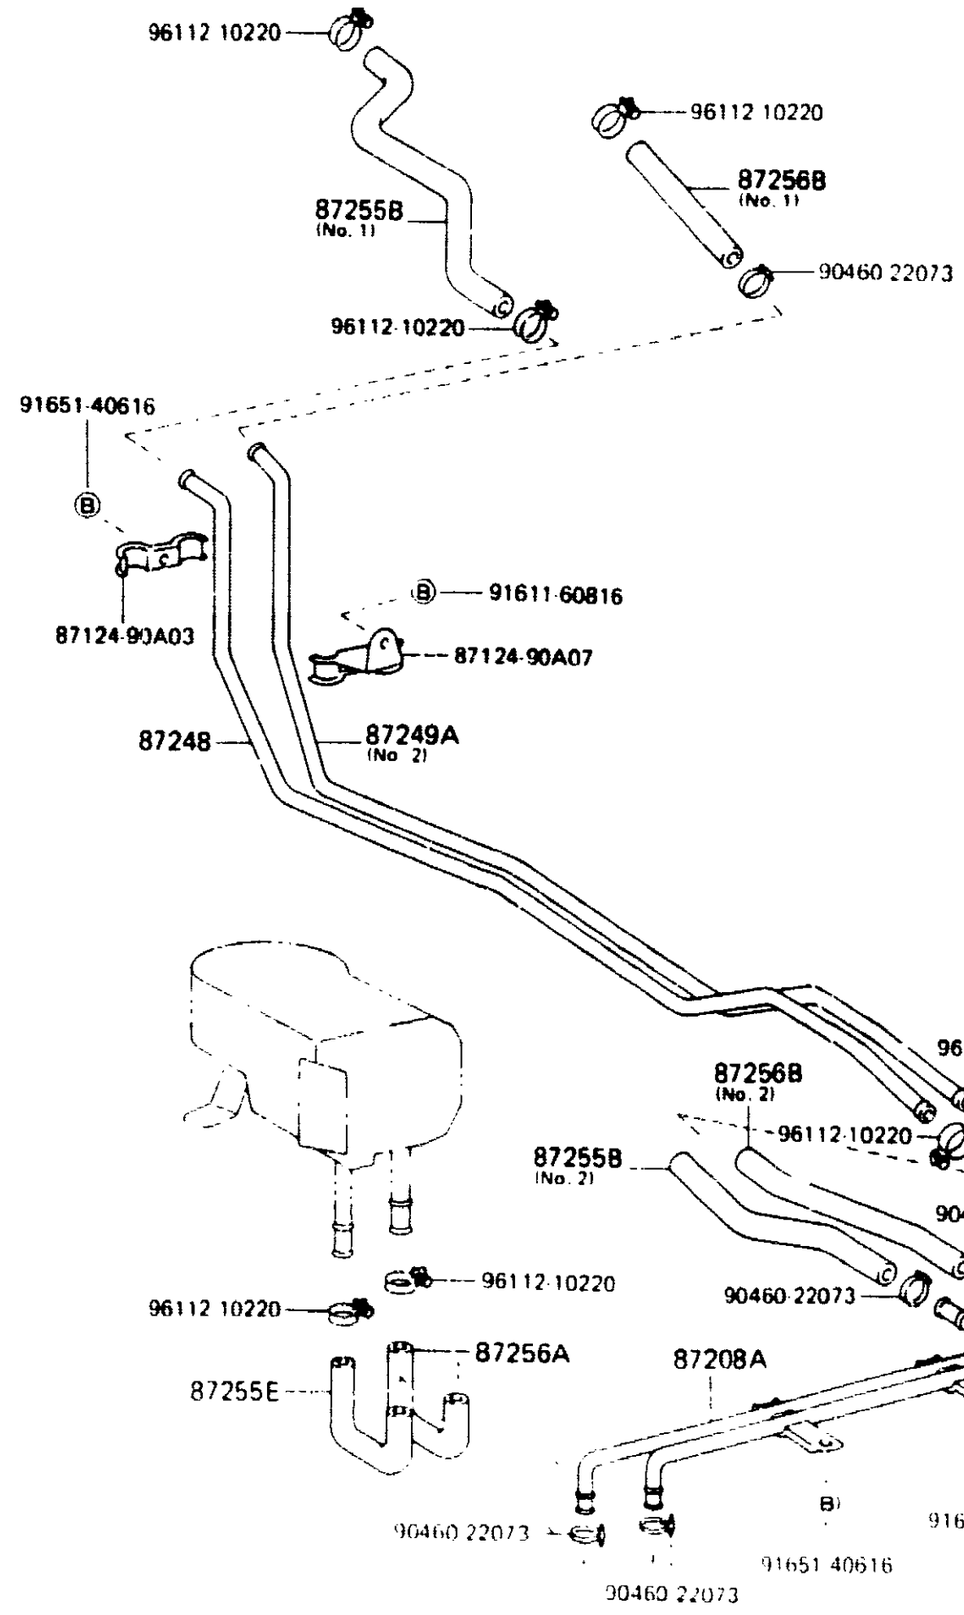


ME J702 C

ILLUSTRATED INDEX


K16

1 3K8 (82-01)

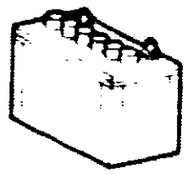


Battery & Cable

2 3L8 (82-02)

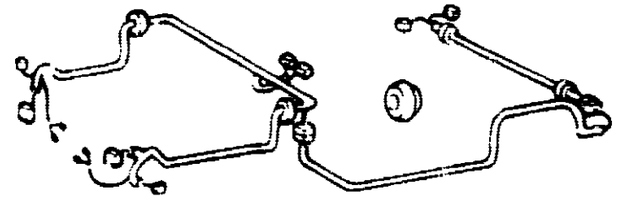


Wiring & Clamp

3 3C9 (83-01)

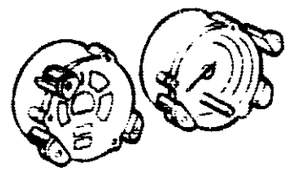


Meter

4 3E9 (83-02)

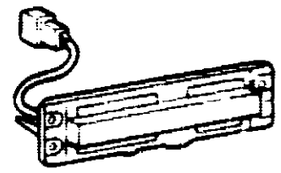


Indicator

5 3F9 (84-01)

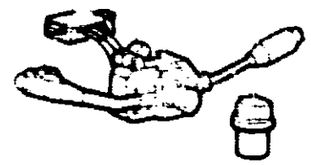


Switch & Relay

6 3L9 (84-04)

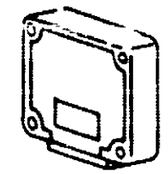


EFI

ELECTRICAL GROUP (2/2)

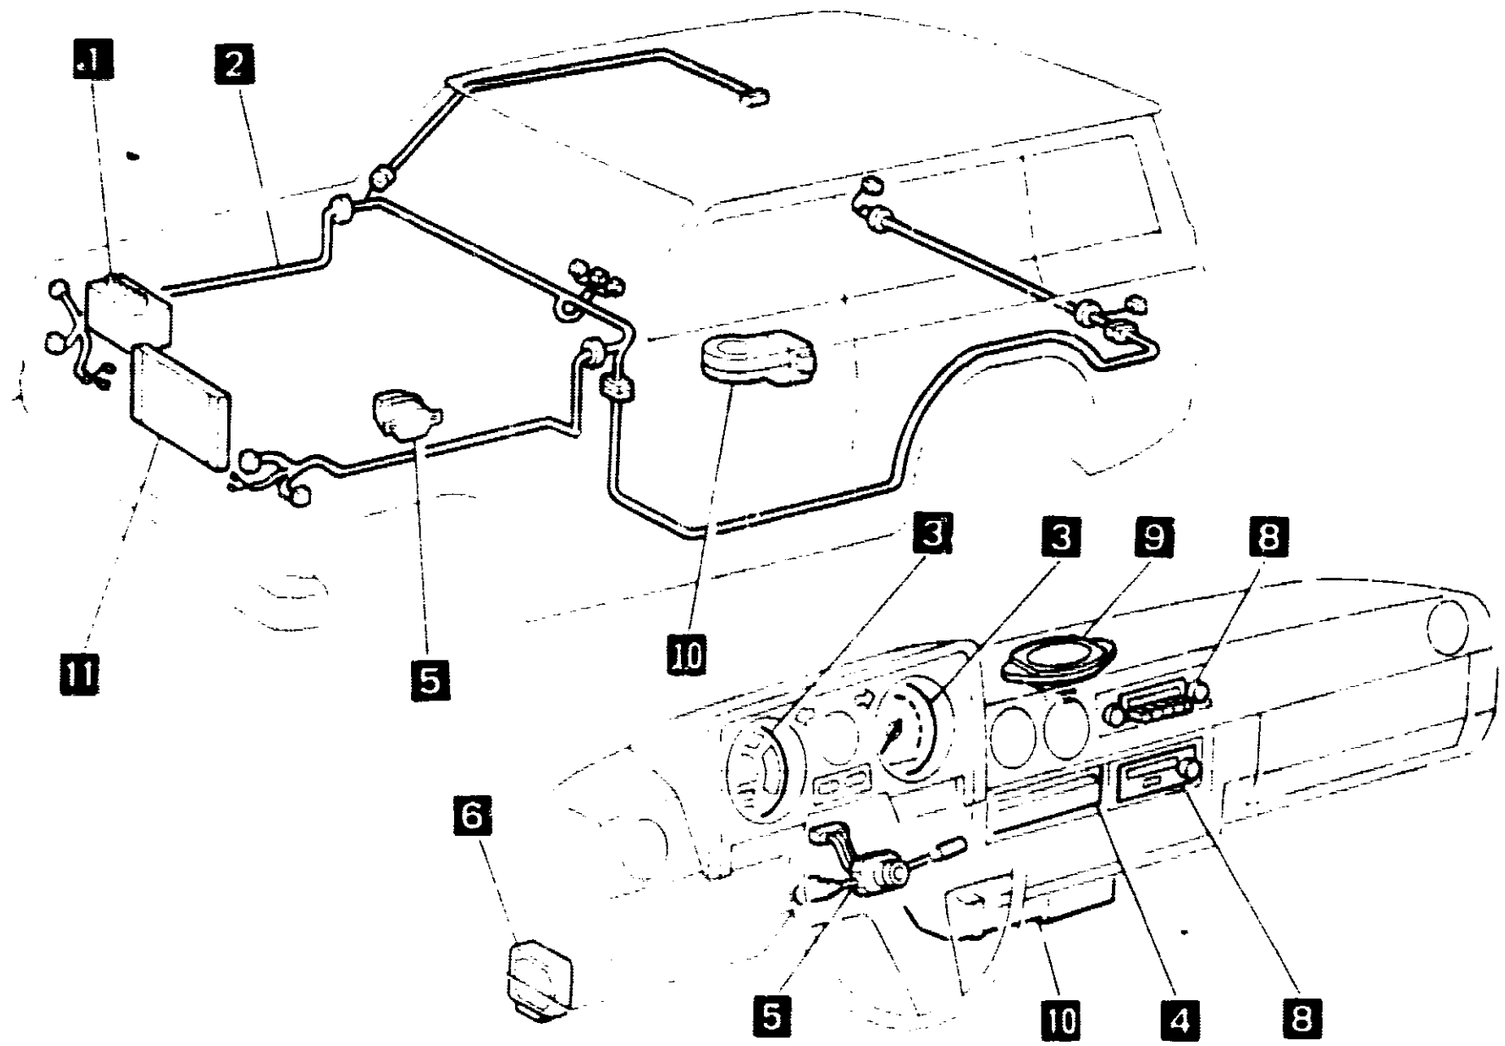


8 3J10 (86-01)

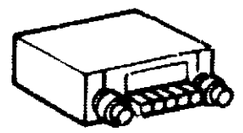

Radio & Tape Player


3L10 (86-02) **9**

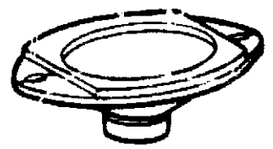

Speaker


3M11 (87-18) Piping

3A12 (87-19) Compressor

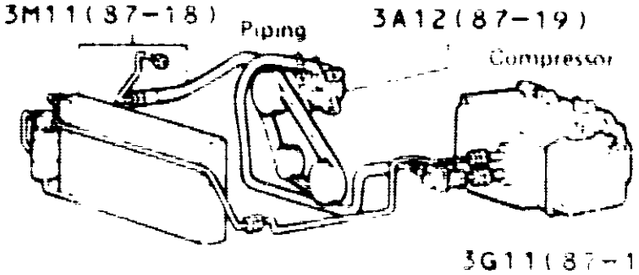


3G11 (87-14) Unit

11 3K11 (87-16) Piping

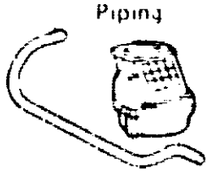

3J11 (87-15) Duct

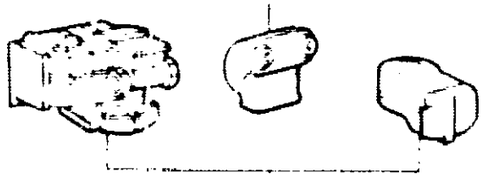


3L11 (87-12) Unit

10

ME 987

FIG. 53-54 HOOD LOCK & HINGE

(8708-)

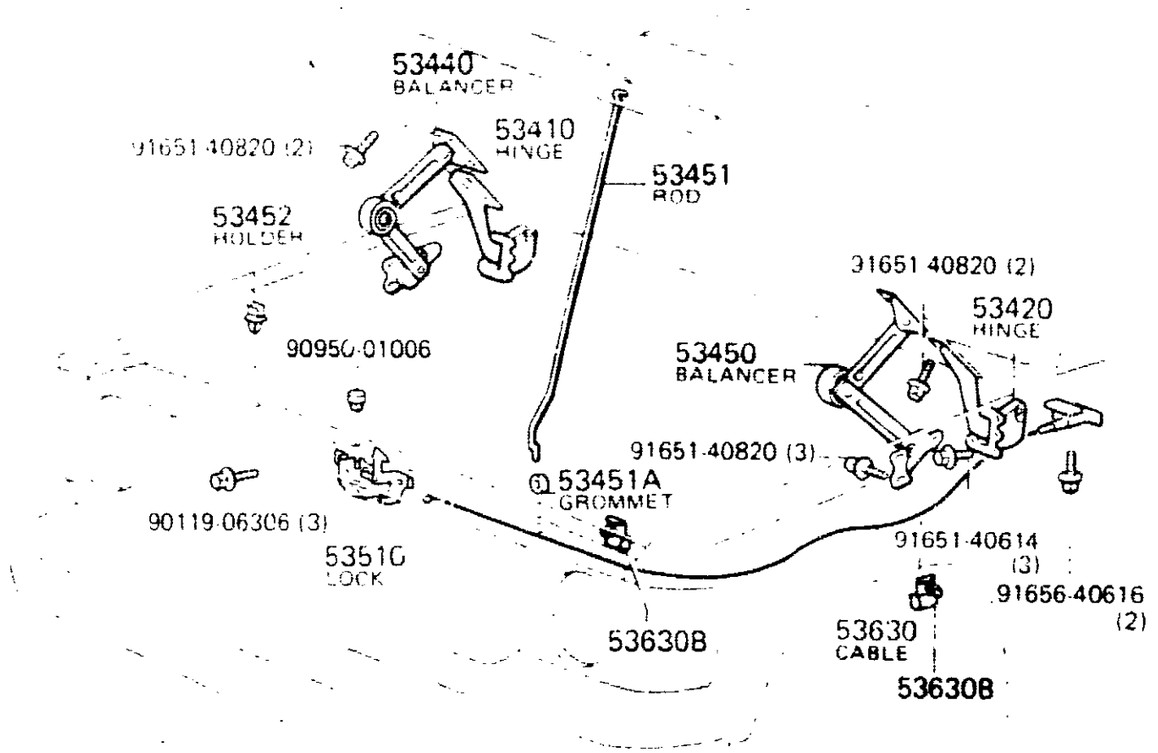


M8 L996

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	53410	**HINGE ASSY, HOOD, RH**					
8708-9001	FJ62			53410-90A01-	1		
	53420	**HINGE ASSY, HOOD, LH**					
8708-9001	FJ62			53420-90A01-	1		
	53440	**BALANCER ASSY, HOOD, RH**					
8708-9001	FJ62			53440-90A00-	1		
	53450	**BALANCER ASSY, HOOD, LH**					
8708-9001	FJ62			53450-90A00-	1		
	53451	**ROD, HOOD SUPPORT**					
8708-9001	FJ62			53451-90A00-	1		
	53451A	**GROMMET (FOR HOOD SUPPORT ROD)**					
8708-9001	FJ62			90480-15002-	1		
	53452	**HOLDER, HOOD STAY**					
8708-9001	FJ62			53452-90351-	1		
	53510	**LOCK ASSY, HOOD**					
8708-9001	FJ62			53510-90A02-	1		
	53630	**CABLE ASSY, HOOD LOCK CONTROL**					
8708-9001	FJ62			53630-90A01-	1		
	53630	**CLAMP (FOR HOOD LOCK CONTROL CABLE)**					
8708-9001	FJ62			69743-12000	2		

(8708-)


ILLUST. NO. 1 OF 2

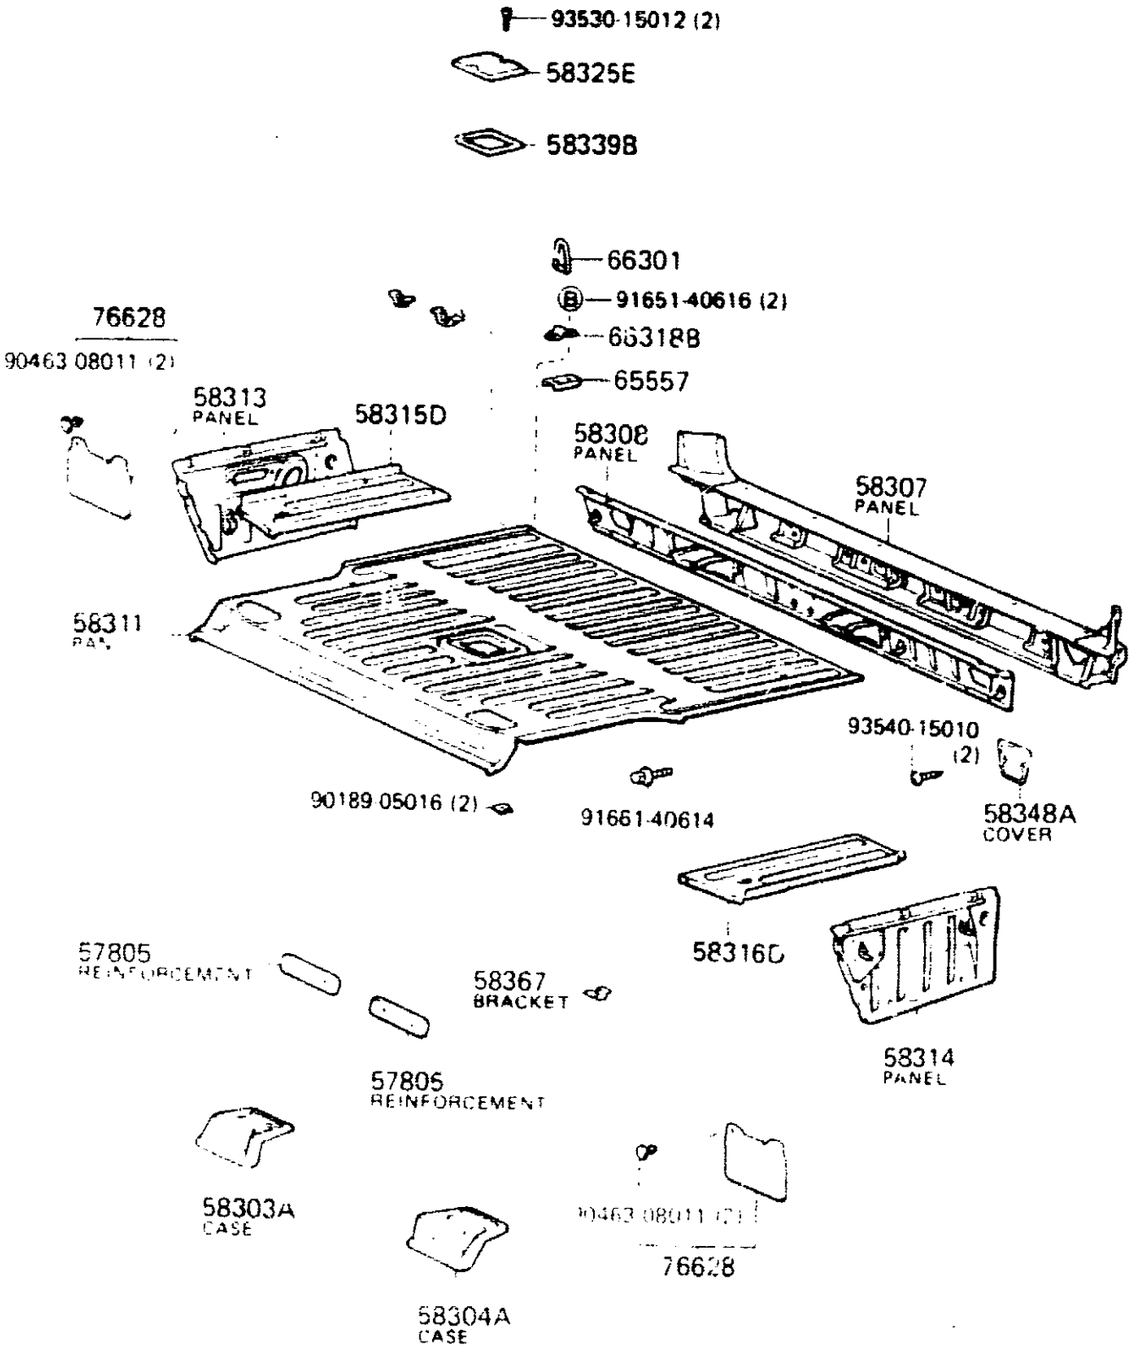

MB L907A

(8708-)

ILLUST. NO. 2 OF 2

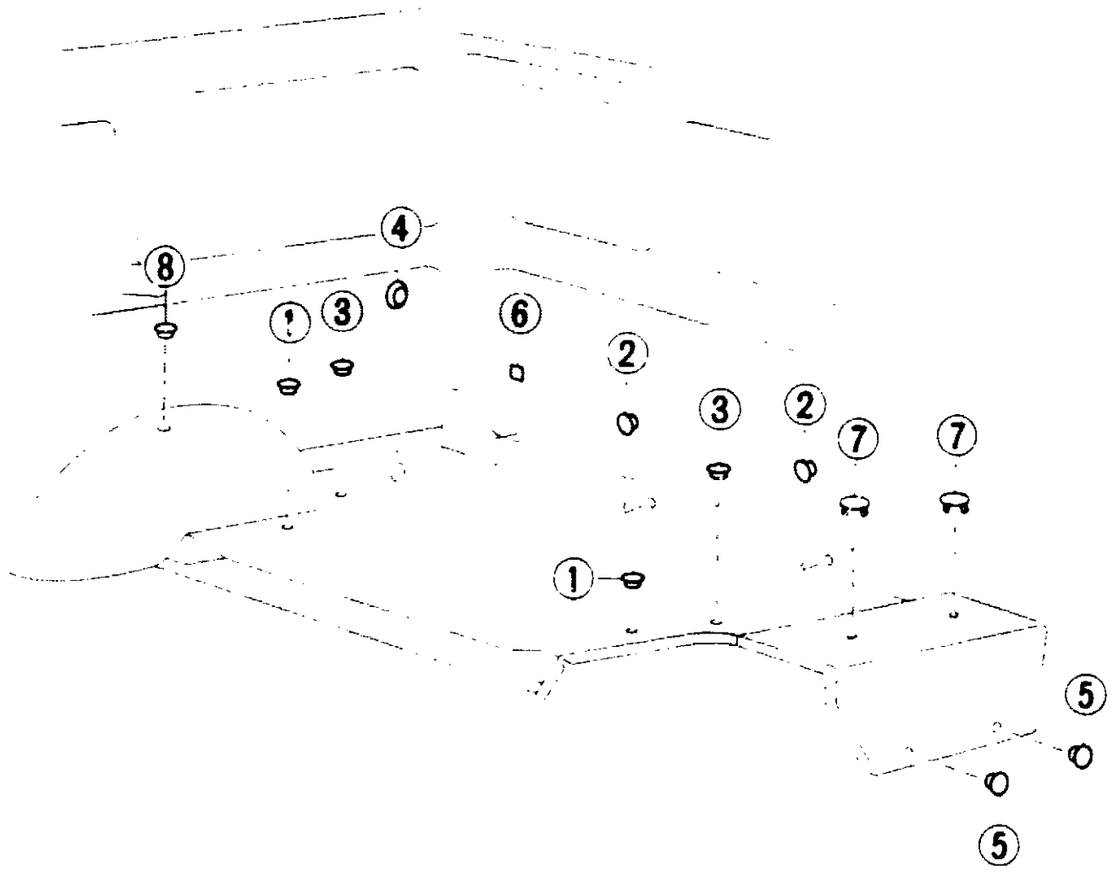


①	②	③	④
90950-01006	90950-01004	90950-01022	90480-92002
⑤	⑥	⑦	⑧
90950-01056	90950-06003	90950-01447	90950-01027

MB C465 C

(8708-)

W/ Carrier

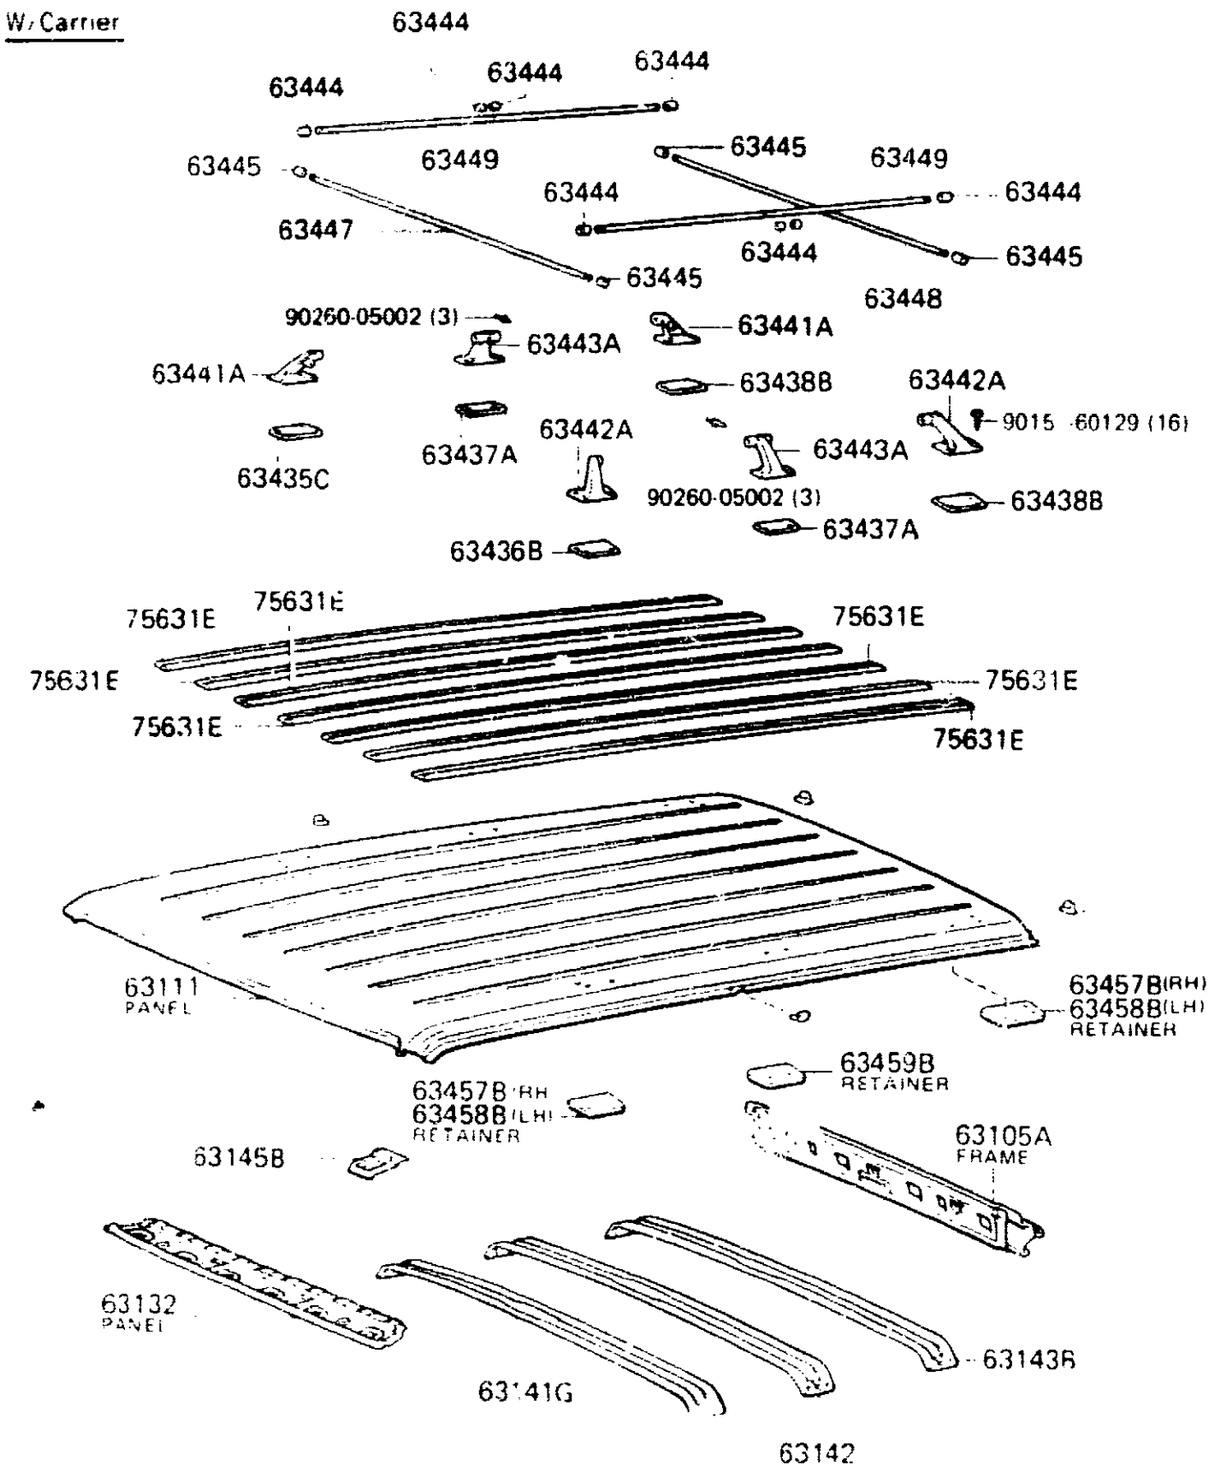



MB L941 A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	63105A	**FRAME SUB-ASSY, BACK DOOR OPENING**					
8708-9001	FJ62			63105-90A00-	1		
	63111	**PANEL, ROOF**					
8708-9001	FJ62			63111-90A00-	1		
8708-9001	FJ62..CND	W(ROOF CARRIER)		63111-90A01-	1		
	63132	**PANEL, WINDSHIELD HEADER, INNER**					
8708-9001	FJ62			63132-90A00-	1		
	63141G	**REINFORCEMENT, ROOF PANEL, NO.1**					
8708-9001	FJ62			63141-90A00-	1		
	63142	**REINFORCEMENT, ROOF PANEL, NO.2**					
8708-9001	FJ62			63141-90A00-	1		
	63143B	**REINFORCEMENT, ROOF PANEL, NO.3**					
8708-9001	FJ62..CND			63141-90A00-	1		
	63145B	**REINFORCEMENT, WINDSHIELD HEADER PANEL**					
8708-9001	FJ62			63145-90A00-	1		
	63435C	**SEAL, ROOF CARRIER, NO.1 RH**					
8708-9001	FJ62..CND			63435-90A00-	1		
	63436B	**SEAL, ROOF CARRIER, NO.1 LH**					
8708-9001	FJ62..CND			63436-90A00-	1		
	63437A	**SEAL, ROOF CARRIER, NO.2**					
8708-9001	FJ62..CND			63437-90A00-	2		

FIG. 67-53 FRONT DOOR LOCK & HANDLE

(8708-)

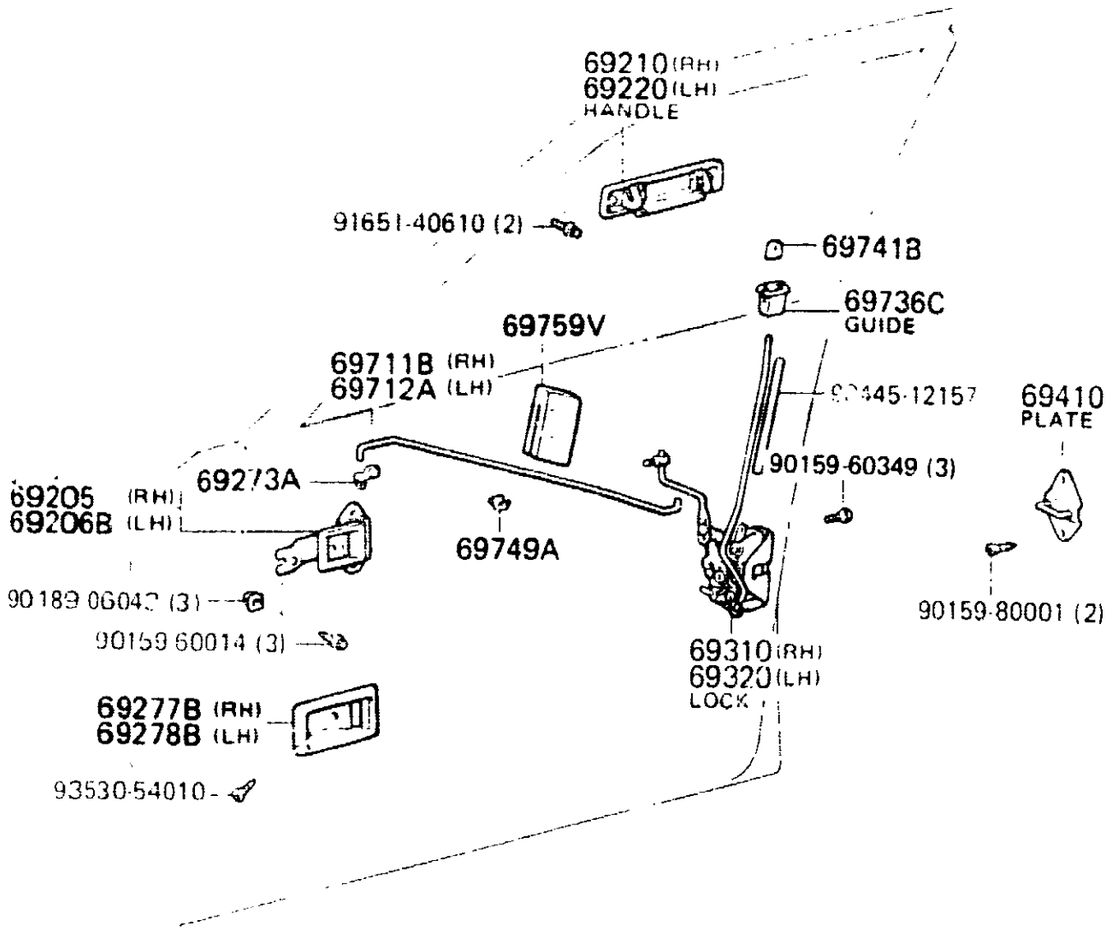

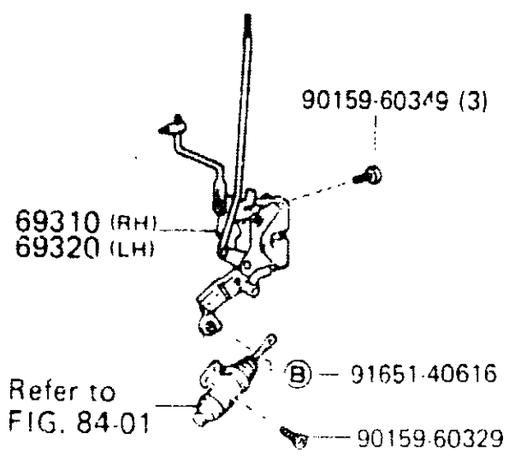


MB L948 B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	69205	**HANDLE SUB-ASSY, FRONT DOOR INSIDE, RH**					
8708-9001	FJ62			69205-20020-	1		
	69206B	**HANDLE SUB-ASSY, FRONT DOOR INSIDE, LH**					
8708-9001	FJ62			69206-20020-	1		
	63210	**HANDLE ASSY, FRONT DOOR, OUTSIDE RH**					
8708-9001	FJ62			69210-90A00-	1		
	69220	**HANDLE ASSY, FRONT DOOR, OUTSIDE LH**					
8708-9001	FJ62			69220-90A00-	1		
	69273A	**SNAP, DOOR INSIDE HANDLE ROD (FOR FRONT DOOR)**					
8708-9001	FJ62			69273-30020-	2		
	69277B	**BEZEL, FRONT DOOR INSIDE HANDLE, RH**					
8708-9001	FJ62	GRAY(TRIM1)	P	69277-16040-23	1		
8708-9001	FJ62	SEPIA BROWN(TRIM4)	P	69277-16040-36	1		
	69278B	**BEZEL, FRONT DOOR INSIDE HANDLE, LH**					
8708-9001	FJ62	GRAY(TRIM1)	P	69277-16040-23	1		
8708-9001	FJ62	SEPIA BROWN(TRIM4)	P	69277-16040-36	1		
	69310	**LOCK ASSY, FRONT DOOR, RH**					
8708-9001	FJ62			69310-90A02-	1		
8708-9001	FJ62	W(POWER WINDOW)		69310-90A03-	1		
	69320	**LOCK ASSY, FRONT DOOR, LH**					
8708-9001	FJ62			69320-90A02-	1		
8708-9001	FJ62	W(POWER WINDOW)		69320-90A03-	1		

FIG. 67-62 BACK DOOR LOCK & HINGE


(8708-)

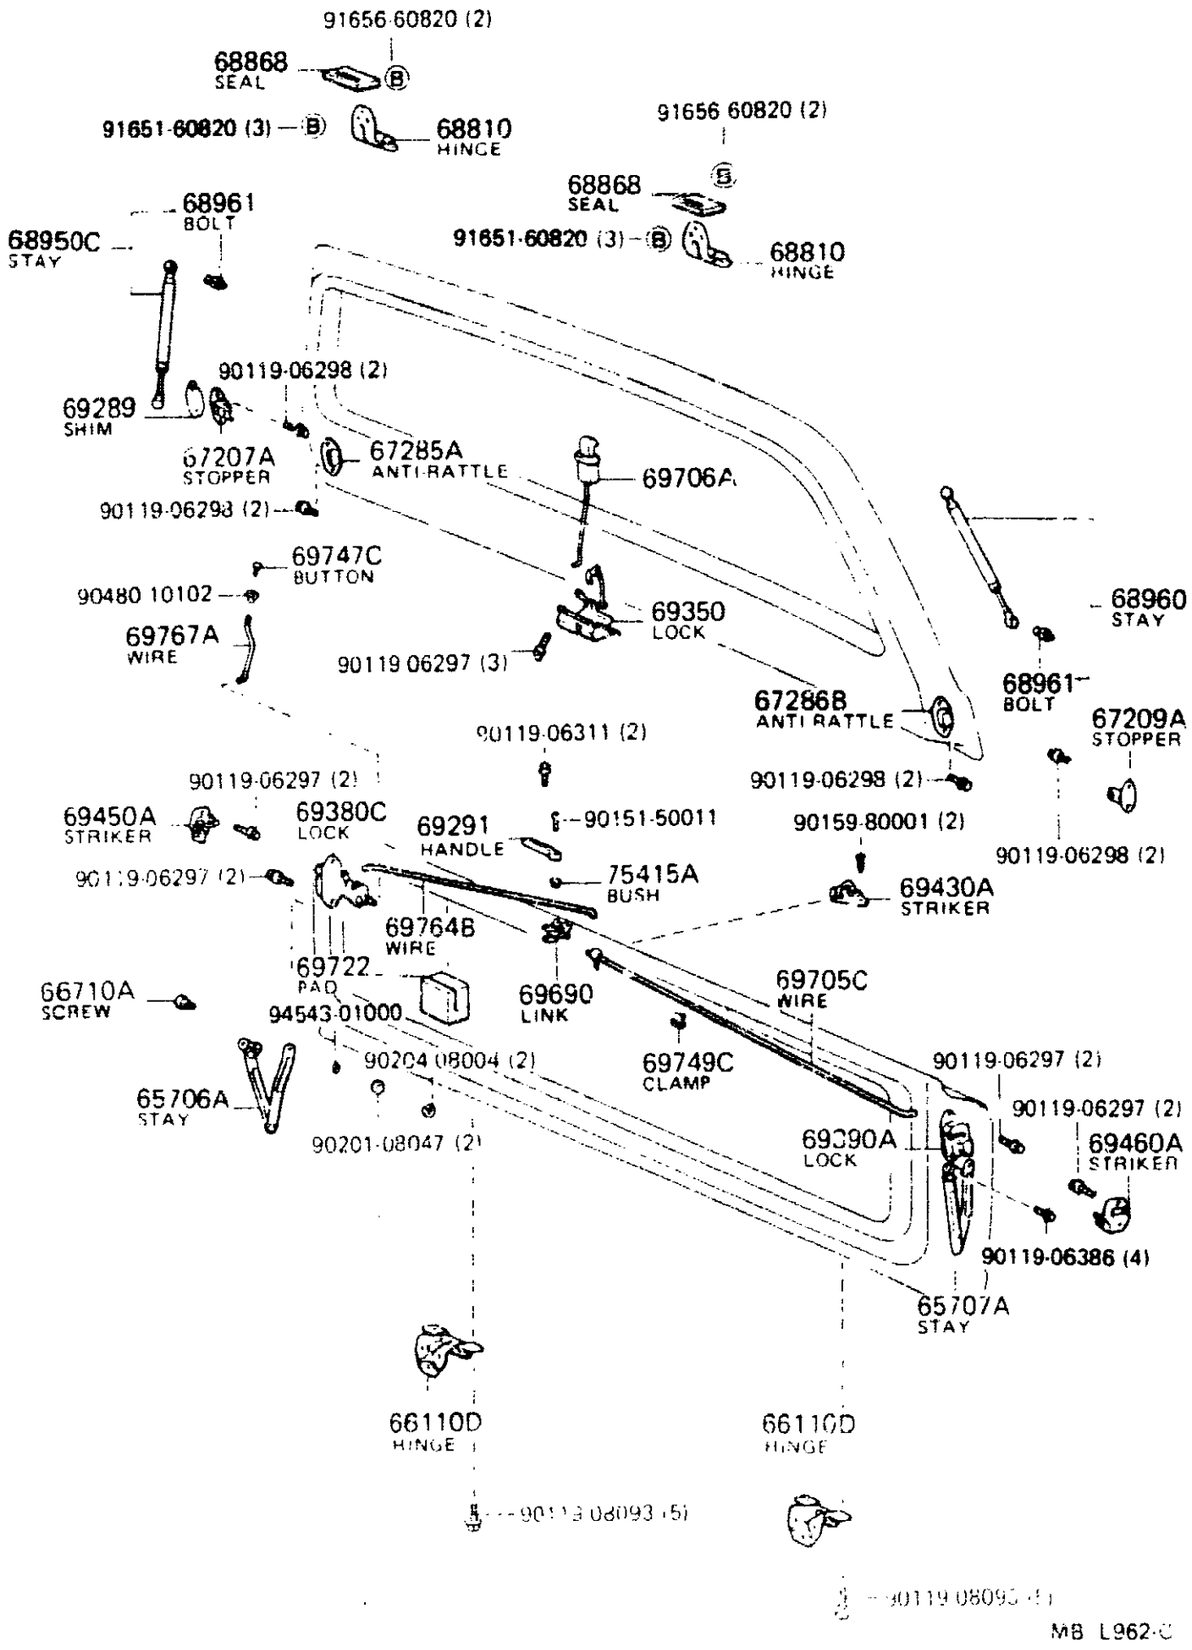

MB L962-C

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	65706A	**STAY SUB-ASSY, TAIL GATE, RH**					
8708-9001	FJ62			65706-90A00-	1		
	65707A	**STAY SUB-ASSY, TAIL GATE, LH**					
8708-9001	FJ62			65707-90A00-	1		
	66110D	**HINGE ASSY, TAIL GATE**					
8708-9001	FJ62			66110-90A00-	2		
	66710A	**SCREW, TAIL GATE ASSY**					
8708-9001	FJ62			65777-90A00-	2		
	67207A	**STOPPER SUB-ASSY, BACK DOOR, RH**					
8708-9001	FJ62			67207-90A00-	1		
	67209A	**STOPPER SUB-ASSY, BACK DOOR, LH**					
8708-9001	FJ62			67209-90A00-	1		
	67285A	**ANTI-RATTLE, BACK DOOR, RH**					
8708-9001	FJ62			67285-90A00-	1		
	67286B	**ANTI-RATTLE, BACK DOOR, LH**					
8708-9001	FJ62			67286-90A00-	1		
	68810	**HINGE ASSY, BACK DOOR, UPPER**					
8708-9001	FJ62			68810-90A00-	2		
	68868	**SEAL, BACK DOOR HINGE**					
8708-9001	FJ62			68868-90A00-	2		

(8708-)

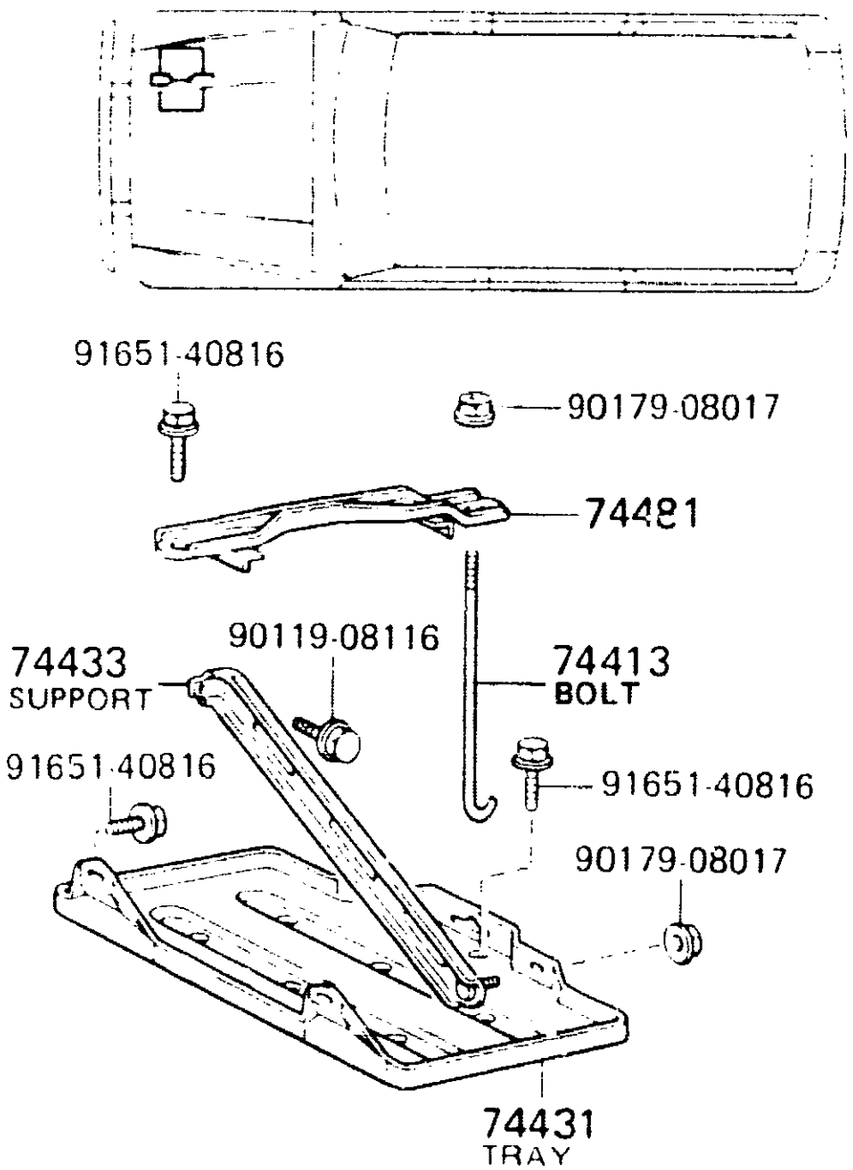


MB M068

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. F
	74413	BOLT, BATTERY CLAMP				
8708-9001	FJ62			74451-90A00-	1	
	74431	TRAY, BATTERY				
8708-9001	FJ62			74431-90A00-	1	
	74433	SUPPORT, BATTERY TRAY, RH				
8708-9001	FJ62			74433-90A00-	1	
	74481	CLAMP, BATTERY HOLD DOWN				
8708-9001	FJ62			74404-90A00-	1	


FIG. 78-51 ACCELERATOR LINK

(8708-)

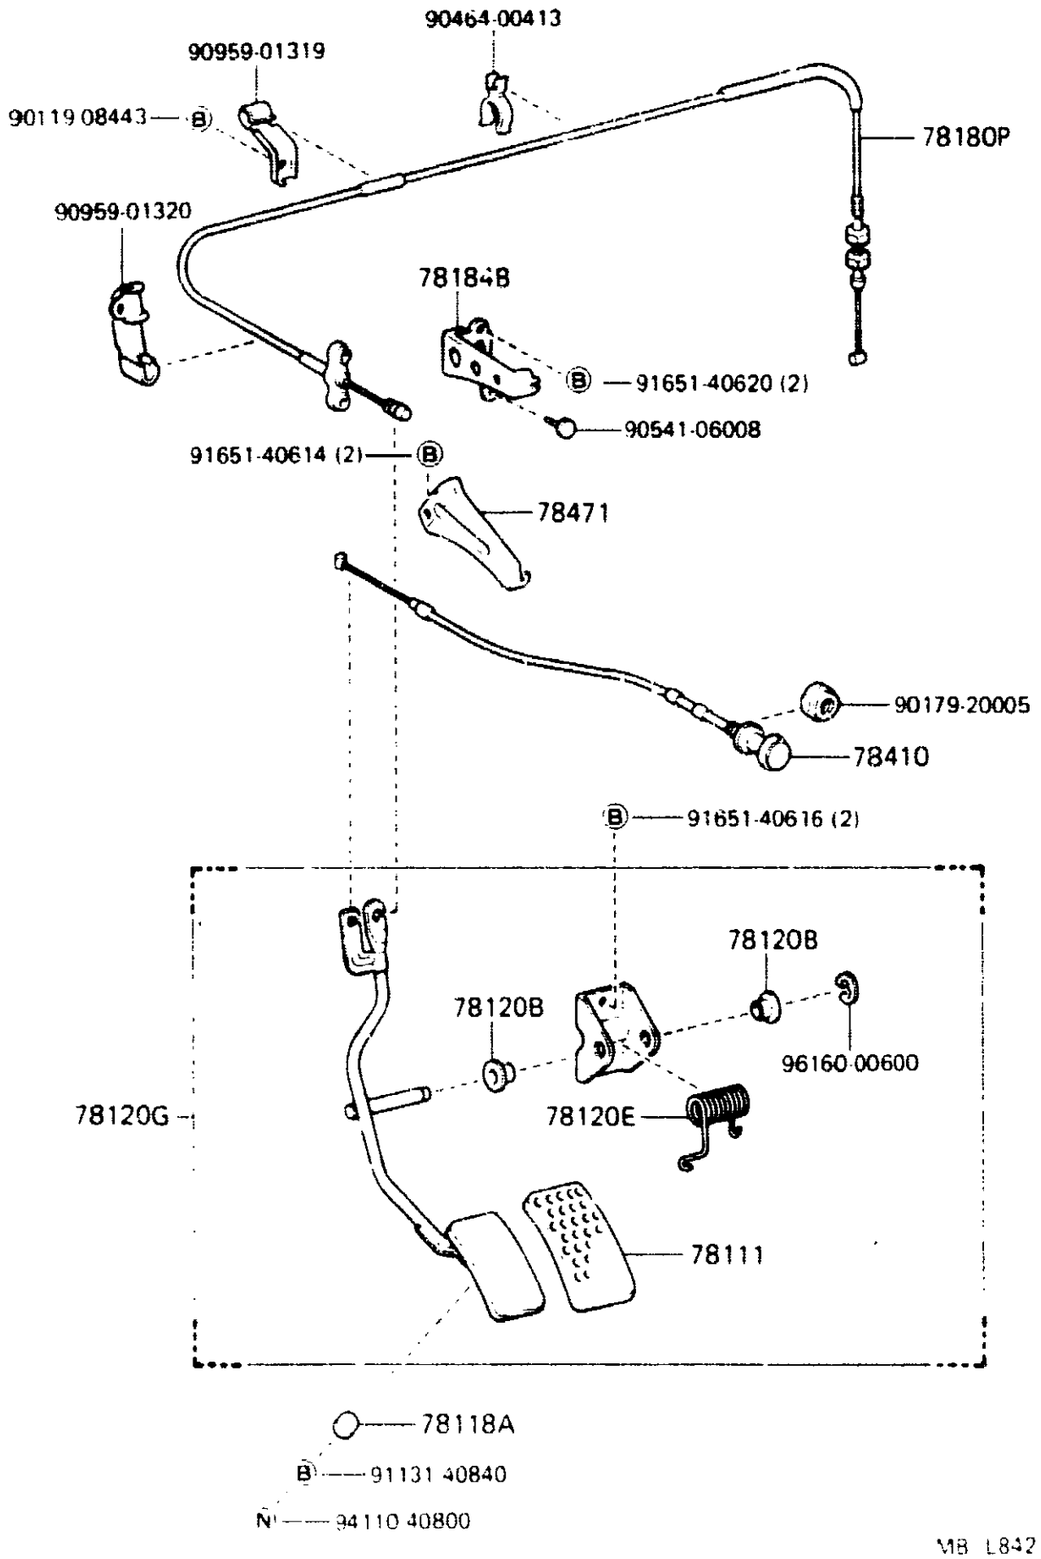

MB L842


(8808-)FJ62

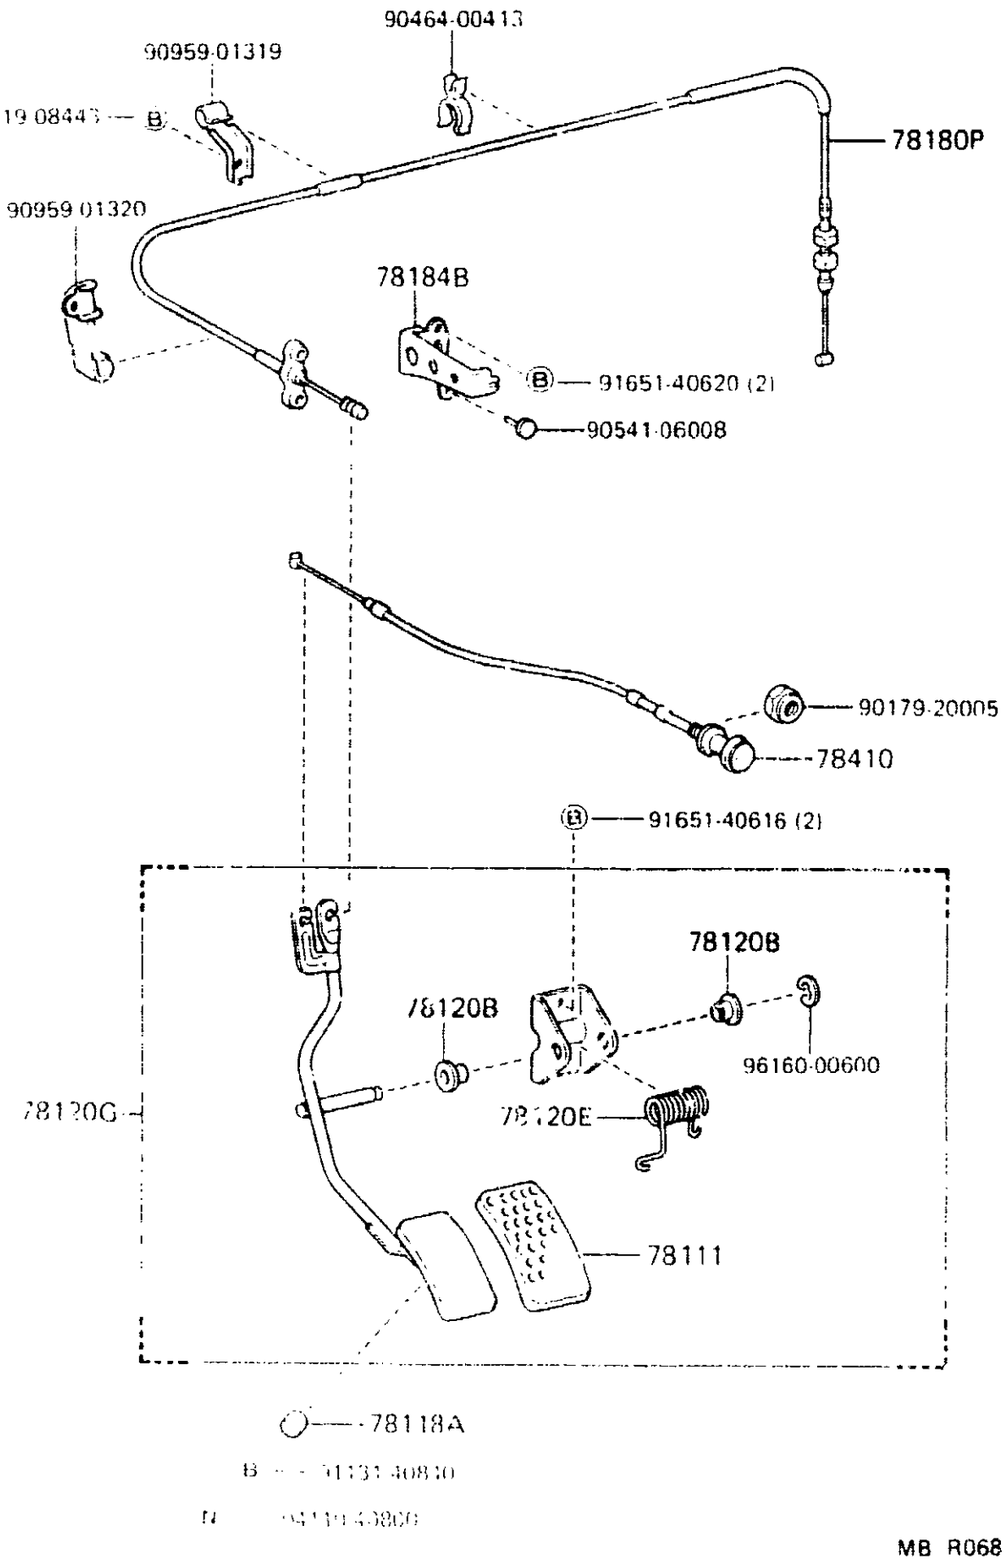


MB R068

(8708-)


ILLUST.NO.1 OF 3

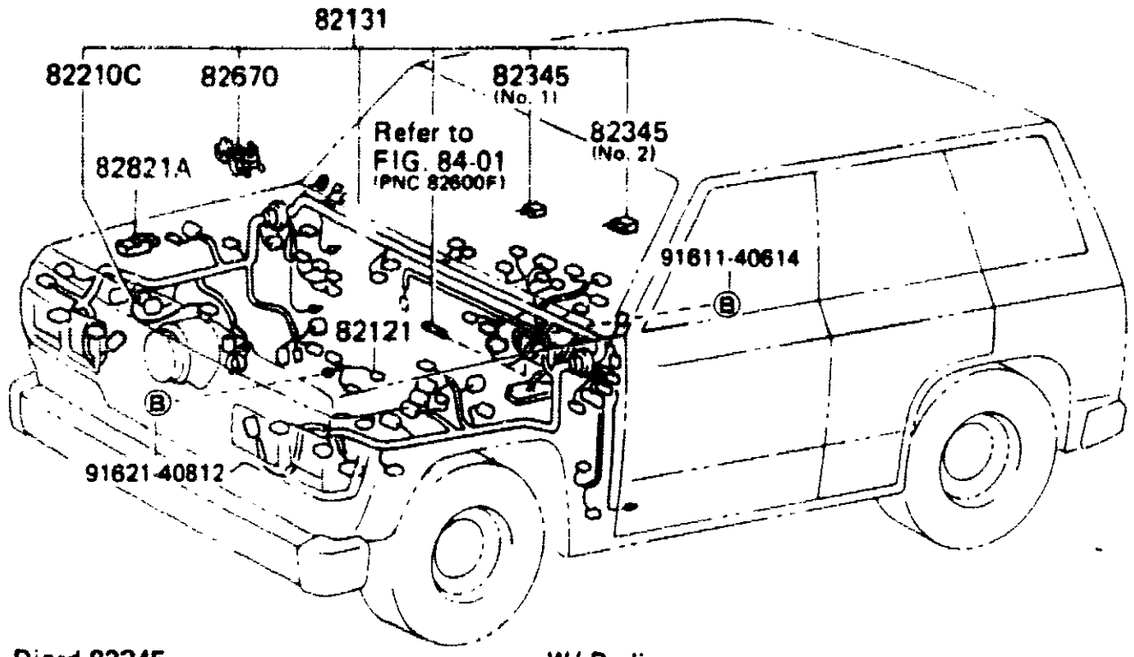


Diord 82345

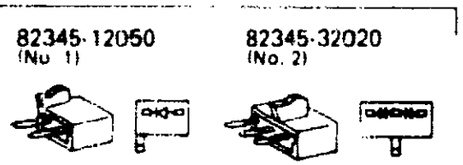


W/ Radio

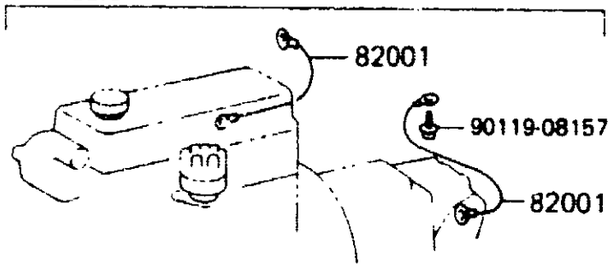


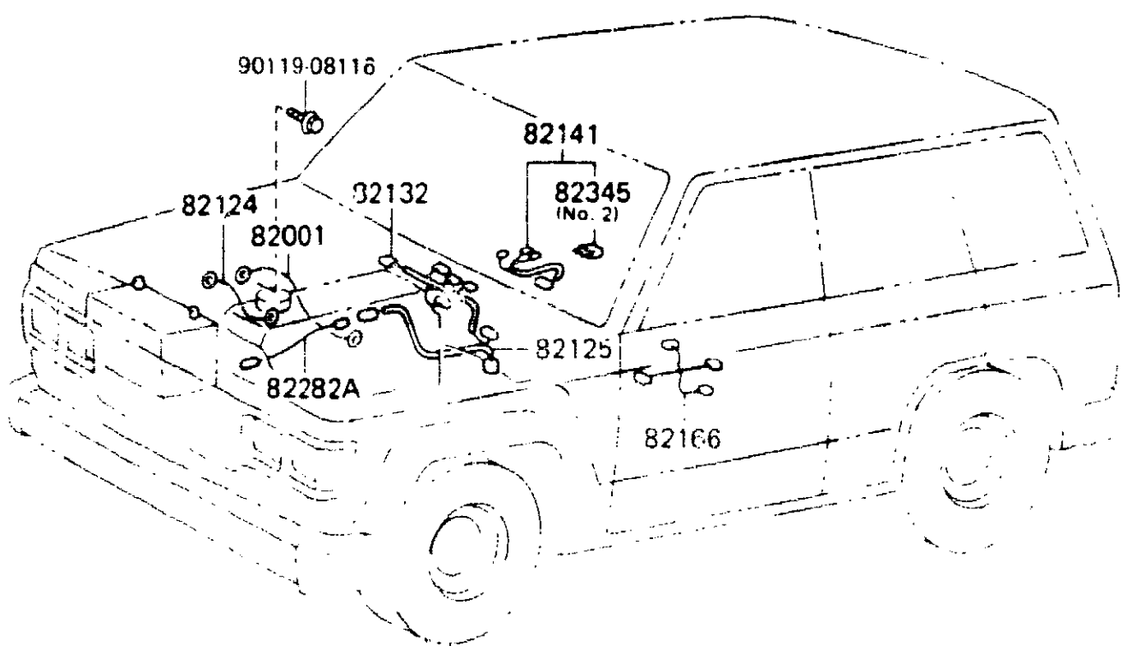

(8708-)

ILLUST.NO.2 OF 3

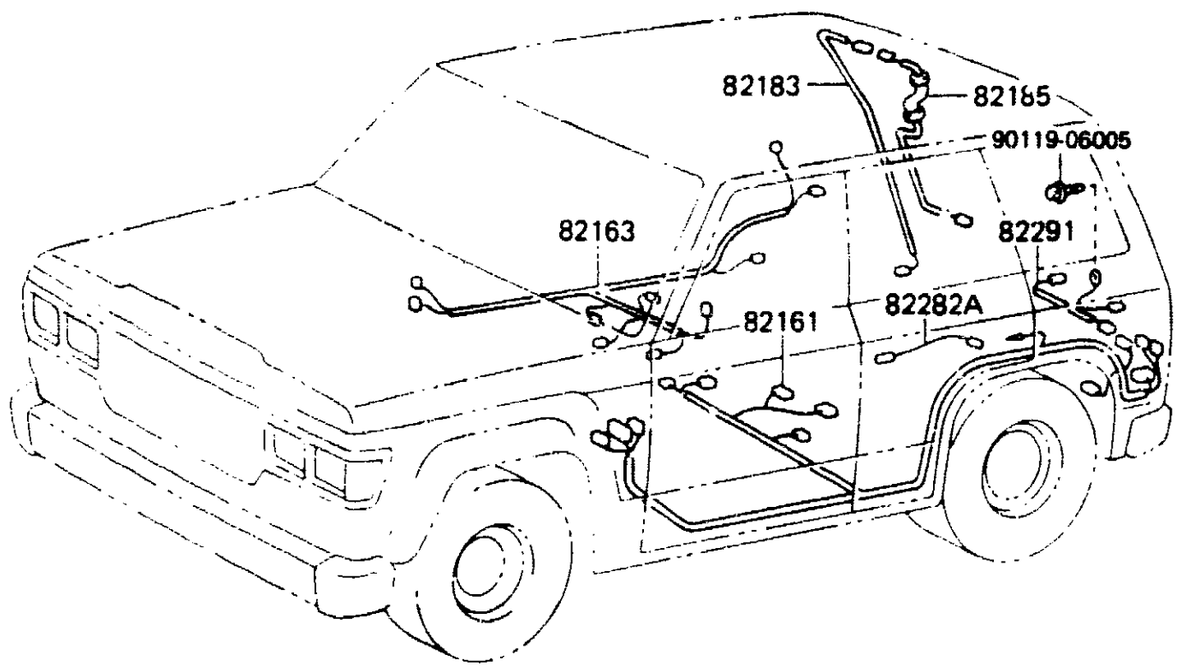


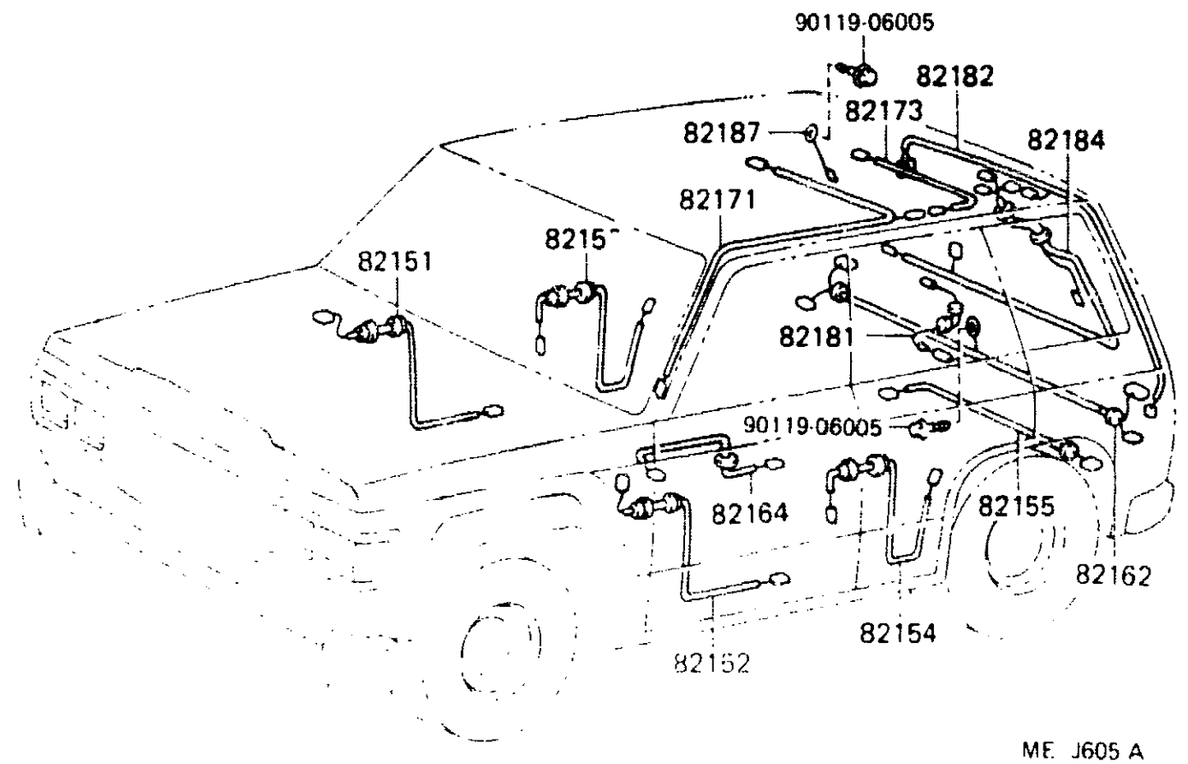

ME J605 A

ME J604-A


(8708-)

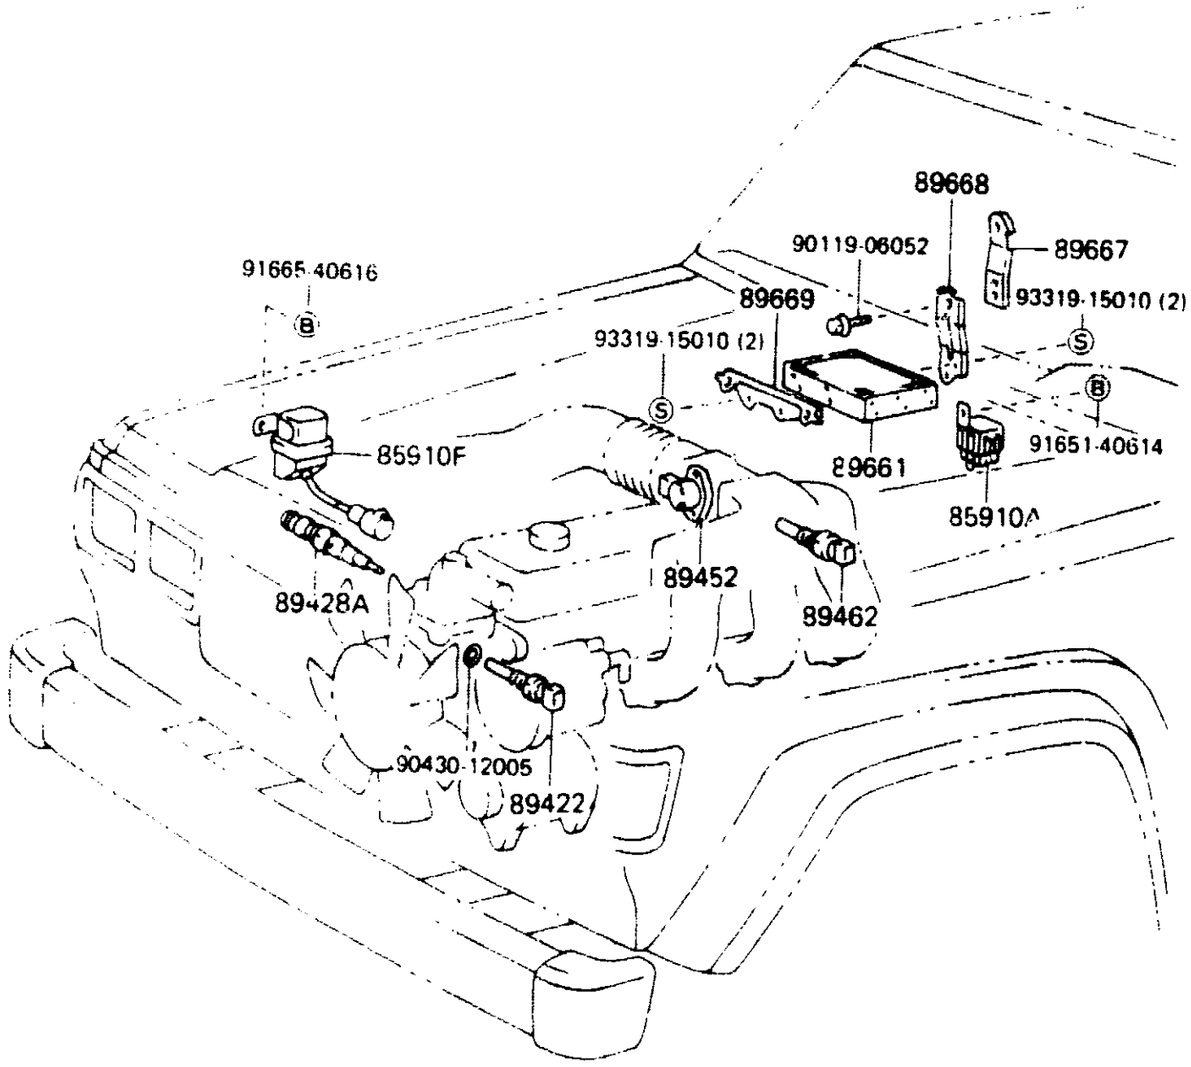

ME J643-A


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	85910A	RELAY ASSY, CIRCUIT OPENING (FOR E.F.I.)					
8708-9001	FJ62			85910-14020-	1		
	85910F	RELAY, COMPUTER (FOR EFI)					
8708-9001	FJ62			85915-60010-	1		
	89422	SENSOR, WATER TEMPERATURE (FOR E.F.I.)					
8708-8808	FJ62			89422-30020-	1		002
8808-9001	FJ62..WGG			89422-20010-	1	003	
	89428A	SWITCH, WATER TEMPERATURE (FOR E.F.I)					
8708-9001	FJ62			89428-14070-	1		
	89452	SENSOR, THROTTLE POSITION (FOR E.F.I.)					
8708-8903	FJ62		P	# 89452-28030- (89452-20050-)	1 1		
8903-9001	FJ62..WGG		B	89452-14050-	1		
	89462	SWITCH, START INJECTOR TIME					
8708-8808	FJ62			89462-20010-	1		002
8808-9001	FJ62..WGG			89462-20040-	1	003	
	89661	COMPUTER, ENGINE CONTROL					
8708-8802	FJ62..USA	CALIFORNIA SPEC		# 89661-60010- (89661-60011-)	1 1		
8708-8802	FJ62			# 89661-60020- (89661-60021-)	1 1		
8802-9001	FJ62..USA	CALIFORNIA SPEC		89661-60011-	1		
8802-9001	FJ62			89661-60021-	1		

(8708-)
FRONT SPEAKER

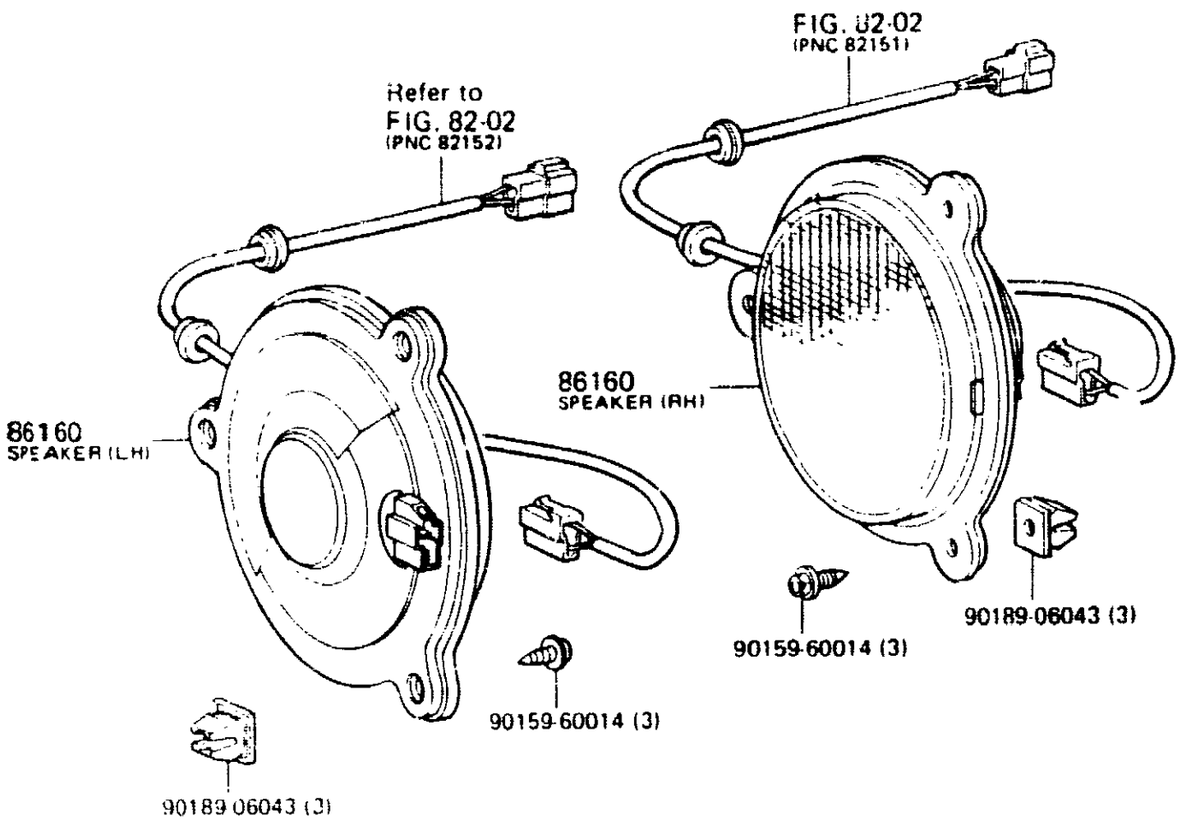

ME J668

(8708-)
REAR SPEAKER

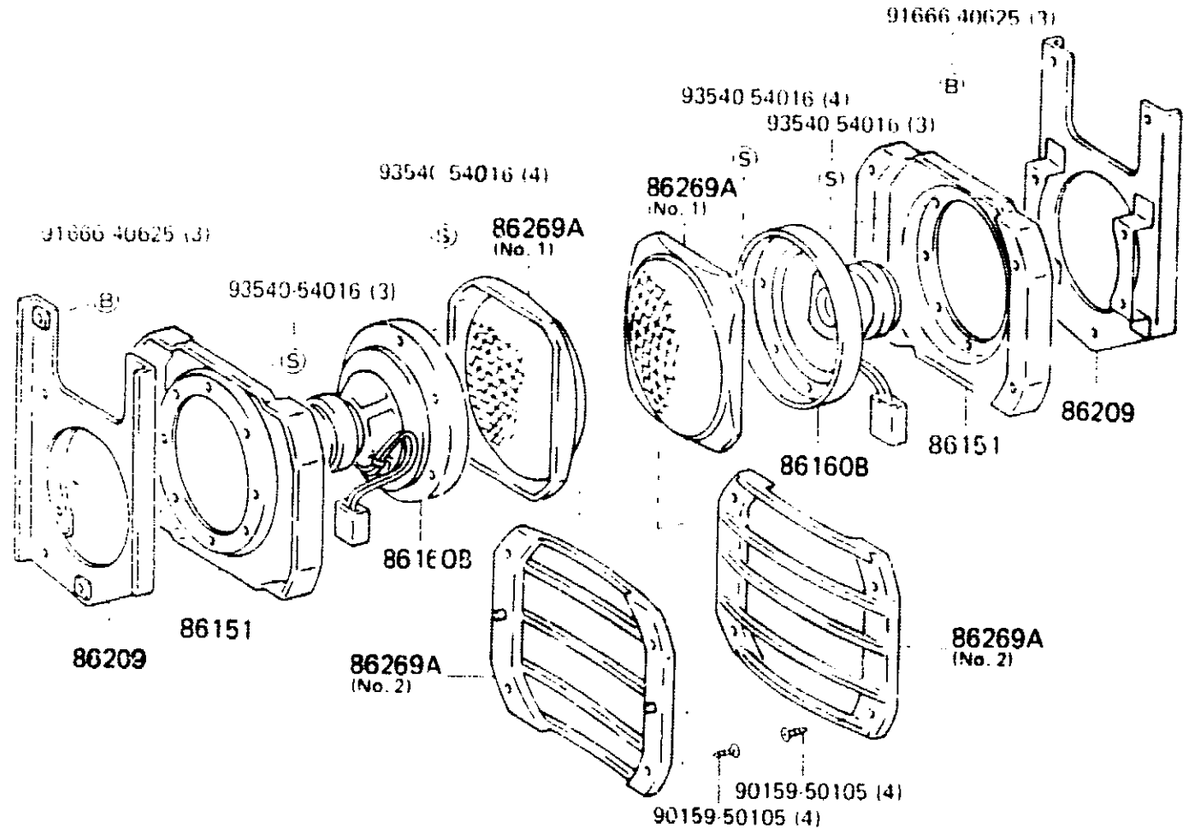

ME J669

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	87208	PIPE SUB-ASSY, HEATER WATER					
8708-9001	FJ62			87208-90K06-	1		
	87208A	PIPE SUB-ASSY, HEATER WATER, A					
8708-9001	FJ62			87208-90A15-	1		
	87240	VALVE ASSY, HEATER WATER					
8708-9001	FJ62			87240-90A00-	1		
	87245A	HOSE, HEATER WATER INLET, A (FROM ENGINE)					
8708-9001	FJ62			87245-90K53-	1		
	87245B	HOSE, HEATER WATER INLET, B					
8708-9001	FJ62			87245-90A27-	1		
	87245E	HOSE, HEATER WATER INLET, E (TO HEATER UNIT)					
8708-9001	FJ62			87245-90A0C-	1		
	87246A	HOSE, HEATER WATER OUTLET, A(FROM HEATER UNIT)					
8708-9001	FJ62..USA			87245-90A28-	1		
	87246E	HOSE, HEATER WATER OUTLET, E (TO ENGINE)					
8708-9001	FJ62			87245-90K36-	1		
	87248	PIPE SUB-ASSY, WATER					
8708-9001	FJ62			87248-90A22-	1		
	87249A	PIPE, HEATER WATER OUTLET, A					
8708-9001	FJ62	REAR NO.2		87248-90A24-	1		
8708-9001	FJ62	REAR NO.1		87248-90A25-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	87255B	HOSE, REAR HEATER WATER INLET, B					
8708-9001	FJ62	NO.1		87245-90A29-	1		
8708-9001	FJ62	NO.2		87245-90A40-	1		
	87255E	HOSE, REAR HEATER WATER INLET, E (TO HEATER UNIT)					
8708-9001	FJ62			87245-90A50-	1		
	87256A	HOSE, REAR HEATER WATER OUTLET, A (FROM HEATER UNIT)					
8708-9001	FJ62			87245-90A50-	1		
	87256B	HOSE, REAR HEATER WATER OUTLET, B					
8708-9001	FJ62	NO.2		87245-90A41-	1		
8708-9001	FJ62	L=95, NO.1		99556-20095-	1		
	87256C	HOSE, REAR HEATER WATER OUTLET, C					
8708-9001	FJ62			87245-90A30-	1		
	87256E	HOSE, REAR HEATER WATER OUTLET, E (TO ENGINE)					
8708-9001	FJ62	*H, L=60		99556-30100-	1		

*H, L = Cut hose to length as specified in remarks

FIGURE NUMBER INDEX

LOCATION	FIG. No	SUMMARY
		TOOL GROUP
1A1	09	STANDARD TOOL
		ENGINE GROUP
1C1	11	PARTIAL ENGINE ASSEMBLY
1D1	11 02	SHORT BLOCK ASSEMBLY
1E1	11 03	ENGINE OVERHAUL GASKET KIT
1F1	11 04	CYLINDER HEAD
1H1	11 05	CYLINDER BLOCK
1J1	11 06	TIMING GEAR COVER & REAR END PLATE
1K1	11 07	MOUNTING
1L1	12 01	VENTILATION HOSE
1M1	13 01	CRANKSHAFT & PISTON
1C2	14 02	CAMSHAFT & VALVE
1E2	15 01	OIL PUMP
1G2	15 02	OIL FILTER
1H2	15-03	OIL COOLER
1I2	16	WATER PUMP
1J2	16 03	RADIATOR & WATER OUTLET
1A3	16 05	V BELT
1B3	17 01	MANIFOLD
1D3	17 02	EXHAUST PIPE
1F3	17 03	AIR CLEANER
1H3	17-05	AIR PUMP
1I3	17 06	MANIFOLD AIR INJECTION SYSTEM
1K3	17 08	VACUUM PIPING
1A4	17 09	CAUTION PLATE & NAME PLATE
1B4	19 01	IGNITION COIL & SPARK PLUG
1D4	19 02	DISTRIBUTOR
1E4	19 03	ALTERNATOR
1G4	19 04	STARTER
		FUEL GROUP
1I4	22	FUEL INJECTION SYSTEM
1M4	25	EXHAUST ASSEMBLY & GASKET KIT


LOCATION	FIG. No.	SUMMARY
		POWER TRAIN · CHASSIS GROUP
2A1	33-12	SHIFT LEVER & RETAINER
2D1	35 01	TRANSAXLE OR TRANSMISSION ASSY & GASKET KIT (ATM)
2E1	35 02	TORQUE CONVERTER FRONT OIL PUMP & CHAIN (ATM)
2G1	35 03	TRANSMISSION CASE & OIL PAN (ATM)
2J1	35-05	SPEEDOMETER DRIVEN GEAR (ATM)
2K1	35-06	OVERDRIVE GEAR (ATM)
2A2	35-07	BRAKE BAND & MULTIPLE DISC CLUTCH (ATM)
2D2	35 08	CENTER SUPPORT & PLANETARY SUN GEAR (ATM)
2F2	35 09	BRAKE NO 3 1ST & REVERSE BRAKE (ATM)
2G2	35 10	PLANETARY GEAR REVERSE PISTON & COUNTER GEAR (ATM)
2I2	35 11	REAR OIL PUMP & GOVERNOR (ATM)
2K2	35 12	VALVE BODY & OIL STRAINER (ATM)
2I3	35-13	THROTTLE LINK & VALVE LEVER (ATM)
2K3	35 14	OIL COOLER & TUBE (ATM)
2M3	36 08	TRANSFER ASSEMBLY & GASKET KIT
2A4	36-09	TRANSFER CASE & EXTENSION HOUSING
2C4	36 10	TRANSFER GEAR
2F4	36 11	TRANSFER LEVER & SHIFT ROD
2H4	36-12	DIAPHRAGM CYLINDER
2J4	36 16	TRANSFER VACUUM PIPING
2K4	37 01	PROPELLER SHAFT & UNIVERSAL JOINT
2M4	41 01	REAR AXLE HOUSING & DIFFERENTIAL
2H5	41 02	REAR AXLE SHAFT & HUB
2K5	41 03	DISK WHEEL & WHEEL CAP
2M5	42 01	DIFFERENTIAL LOCK CONTROL
2C6	43	FRONT AXLE HOUSING & DIFFERENTIAL
2J6	43	FRONT AXLE SHAFT
2K6	43	FRONT AXLE HUB
2M6	43	FRONT AXLE KNUCKLE & SPINDLE
2D7	45	STEERING PUMP & RESERVOIR

LOCATION	FIG. No.	SUMMARY
2G7	45-03	OIL COOLER & TUBE
2H7	45-04	STEERING WHEEL
2I7	45-05	STEERING GEAR & LINK
2A8	46-01	PARKING BRAKE & CABLE
2C8	47 01	BRAKE PEDAL & BRACKET
2D8	47-02	BRAKE MASTER CYLINDER
2F8	47 03	BRAKE BOOSTER
2H8	47-05	FRONT DISC BRAKE CALIPER & DUST COVER
2J8	47-06	REAR BACKING PLATE & WHEEL CYLINDER
2M8	47-08	BRAKE TUBE & CLAMP
2E9	48-02	FRONT AXLE ARM & STEERING KNUCKLE
2G9	48-03	FRONT SPRING & SHOCK ABSORBER
2K9	48-04	REAR SPRING & SHOCK ABSORBER

FIG. 53-55 FRONT FENDER APRON & DASH PANEL

(8708-)


ILLUST.NO. 1 OF 2

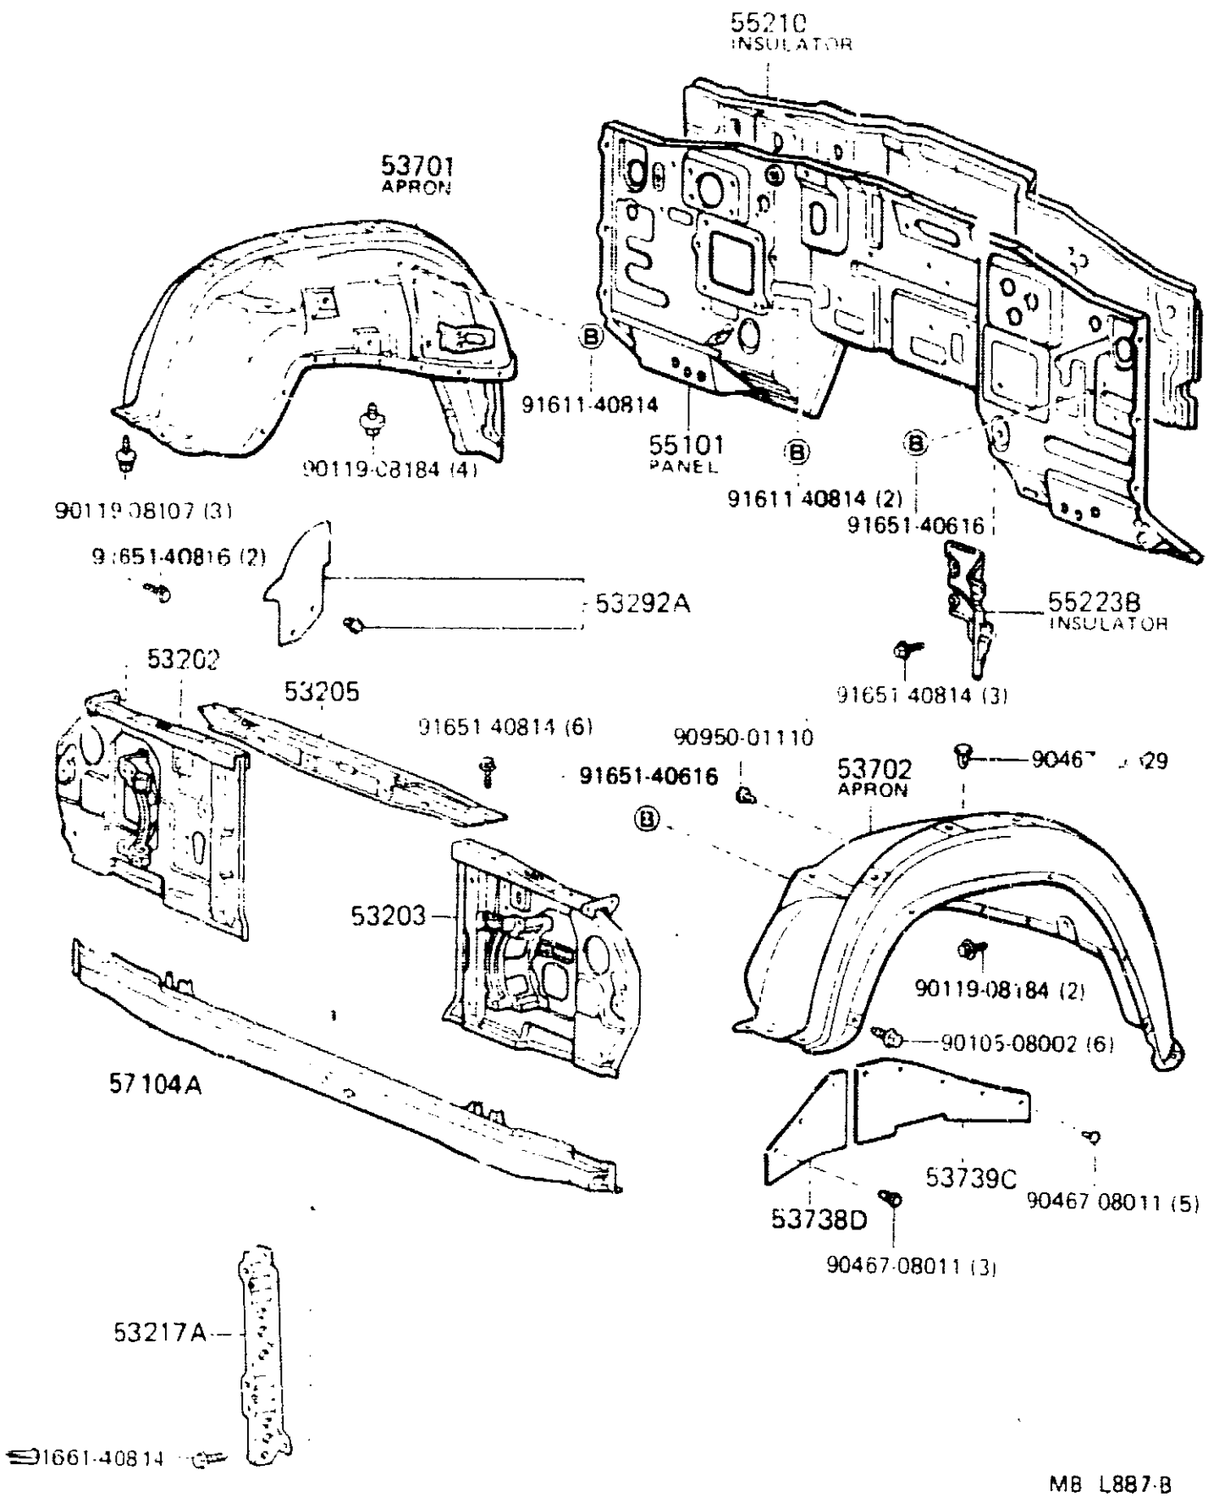

MB L887-B

(8708-)

ILLUST NO. 2 OF 2

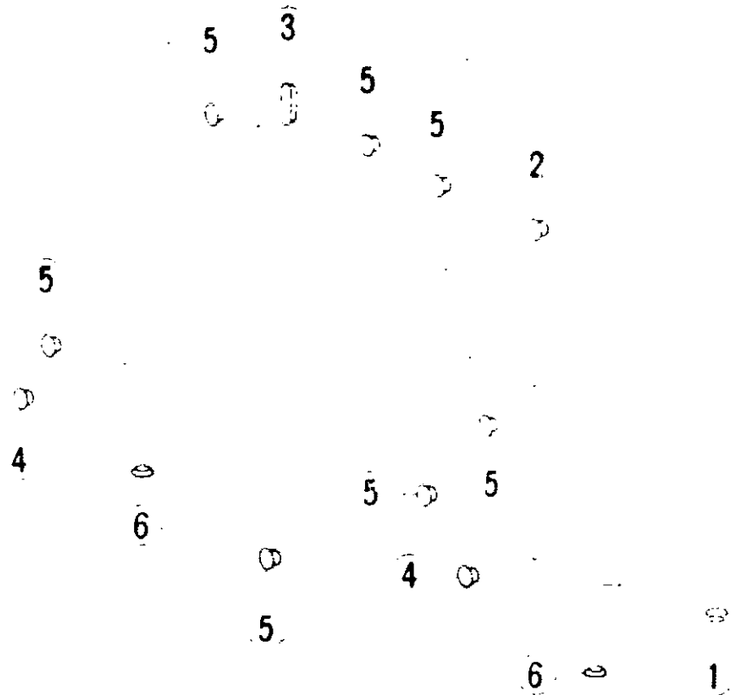

1	2	3
90950 01205	90950-01449	90950 01056	90950-01003
4	5	6
90950 01257	90950 01006	90 01506

MB M506-A

FIG. 58-52

3M2

79143OM-01262

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	57805	REINFORCEMENT SUB-ASSY, BELT ANCHOR					
8708-9001	FJ62			57805-90A00-	2		
	58303A	CASE SUB-ASSY, REAR FLOOR PAN RETRACTOR, RH					
8708-8808	FJ62			58303-90A00-	1		002
	58304A	CASE SUB-ASSY, REAR FLOOR PAN RETRACTOR, LH					
8708-8808	FJ62			58304-90A00-	1		002
	58307	PANEL SUB-ASSY, BODY LOWER BACK					
8708-9001	FJ62			58307-90A00-	1		
	58308	PANEL SUB-ASSY, BODY LOWER BACK, INNER					
8708-9001	FJ62			58308-90A03-	1		
	58311	PAN, REAR FLOOR					
8708-8808	FJ62			58311-90A20-	1		002
8808-9001	FJ62..WGG			58311-90A19-	1	003	
	58313	PANEL, REAR FLOOR SIDE, RH					
8708-9001	FJ62			58305-90A08-	1		
	58314	PANEL, REAR FLOOR SIDE, LH					
8708-9001	FJ62			58306-90A12-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	58315D	EXTENSION, REAR FLOOR PAN, RH					
8708-9001	FJ62			58315-90A07-	1		
	58316D	EXTENSION, REAR FLOOR PAN, LH					
8708-9001	FJ62			58316-90A07-	1		
	58325E	COVER, REAR FLOOR SERVICE HOLE					
8708-9001	FJ62			58325-90A00-	1		
	58339B	PACKING, REAR FLOOR SERVICE HOLE					
8708-9001	FJ62			58339-90A00-	1		
	58348A	COVER, REAR BODY MOUNTING SERVICE HOLE					
8708-9001	FJ62			58348-90A00-	2		
	58367	BRACKET, FUEL TUBE CLAMP					
8708-9001	FJ62			58367-90A00-	1		
	65557	RETAINER, ROPE HOOK					
8708-9001	FJ62			65557-90A01-	4		
	66301	HOOK SUB-ASSY, ROPE					
8708-9001	FJ62			66301-90A00-	4		
	66318B	BAND, ROPE HOOK					
8708-9001	FJ62			66318-90A00-	4		
	76628	MUDGUARD, QUARTER PANEL, REAR					
8708-9001	FJ62			76628-90A01-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	63438B	SEAL, ROOF CARRIER, NO.3 RH					
8708-9001	FJ62..CND	RH		63438-90A0C-			
8708-9001	FJ62..CND	LH		63439-90A00-			
	63441A	SUPPORT, ROOF CARRIER, NO.1 RH					
8708-9001	FJ62..CND			63441-90A00-	2		
	63442A	SUPPORT, ROOF CARRIER, NO.1 LH					
8708-9001	FJ62..CND			63442-90A00-	2		
	63443A	SUPPORT, ROOF CARRIER, NO.2					
8708-9001	FJ62..CND			63443-90A00-	2		
	63444	PROTECTOR, ROOF CARRIER, NO.1					
8708-9001	FJ62..CND			63444-90A00-	8		
	63445	PROTECTOR, ROOF CARRIER, NO.2					
8708-9001	FJ62..CND			63445-90A00-	4		
	63447	BAR, ROOF CARRIER, FRONT					
8708-9001	FJ62..CND			63447-90A00-	1		
	63448	BAR, ROOF CARRIER, REAR					
8708-9001	FJ62..CND			63448-90A00-	1		
	63449	BAR, ROOF CARRIER SIDE					
8708-9001	FJ62..CND			63449-90A00-	2		
	63457B	RETAINER, ROOF CARRIER, NO.1 RH					
8708-9001	FJ62..CND			63457-90A00-	2		
	63458B	RETAINER, ROOF CARRIER, NO.1 LH					
8708-9001	FJ62..CND			63458-90A00-	2		
	63459B	RETAINER, ROOF CARRIER, NO.2					
8708-9001	FJ62..CND			63459-90A00-	2		
	75631E	MOULDING, ROOF CARRIER					
8708-9001	FJ62..CND			75631-90A01-	7		

	PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
			69410 PLATE ASSY, FRONT DOOR LOCK STRIKER					
	8708-9001	FJ62			69410-90B00-	2		
			69711B LINK, FRONT DOOR LOCK REMOTE CONTROL, RH					
	8708-9001	FJ62			69711-90A00-	1		
			69712A LINK, FRONT DOOR LOCK REMOTE CONTROL, LH					
	8708-9001	FJ62			69712-90A00-	1		
			69736C GUIDE, FRONT DOOR LOCKING LINK					
	8708-9001	FJ62			69736-90K00-	2		
			63741B KNOB, FRONT DOOR LOCK CONTROL					
P	8708-9001	FJ62	SEPIA BROWN (TRIM4)		69741-90K00-06	2		
			69749A CLAMP, FRONT DOOR LOCK LINK					
	8708-9001	FJ62			69749-12010-	2		
			69759V SILENCER, FRONT DOOR LOCK LINK					
	8708-9001	FJ62			69759-30021-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	68950C	STAY ASSY, BACK DOOR, RH					
8708-9001	FJ62			68950-69045-	1		
	68960	STAY ASSY, BACK DOOR, LH					
8708-9001	FJ62			68950-69045-	1		
	68961	BOLT, BACK DOOR STAY					
8708-900	FJ62			68961-23010-	4		
	69289	SHIM, BACK DOOR STOPPER					
8708-9001	FJ62			69289-90AC0-	X		
	69291	HANDLE ASSY, BACK DOOR INSIDE					
8708-9001	FJ62			69212-90A00-	1		
	69350	LOCK ASSY, BACK DOOR					
8708-9001	FJ62			69350-90A03-	1		
	69380C	LOCK ASSY, BACK DOOR, LOWER					
8708-9001	FJ62			69380-90A01-	1		
	69390A	LOCK ASSY, TAIL GATE, LOWER LH					
8708-900	FJ62			69390-90A00-	1		
	69430A	STRIKER ASSY, BACK DOOR LOWER LOCK					
8708-9001	FJ62			69430-90A01-	1		
	69450A	STRIKER ASSY, TAIL GATE, LOWER RH					
8708-9001	FJ62			69450-90A00-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	69460A	STRIKER ASSY, TAIL GATE, LOWER LH					
8708-9001	FJ62			69460-90A00-	1		
	69690	CONTROL ASSY, BACK DOOR REMOTE					
8708-9001	FJ62			69690-90A01-	1		
	69705C	LINK SUB-ASSY, BACK DOOR LOCK CONTROL					
8708-9001	FJ62			69705-90A00-	1		
	69706A	ROD, SUB-ASSY, BACK DOOR LOCK REMOTE CONTROL					
8708-9001	FJ62	SHADOW GRAY(TRIM1)	P	69706-90A00-03	1		
8708-9001	FJ62	SEPIA BROWN(TRIM4)	P	69706-90A00-06	1		
	69722	PAD, BACK DOOR LOCK CONTROL					
8708-9001	FJ62			69722-90A00-	1		
	69747C	BUTTON, DOOR LOCKING (FOR BACK DOOR)					
8708-9001	FJ62	BLACK(TRIM1,4)		69747-20020-01	1		
	69749C	CLAMP, TAIL GATE LOCK LINK					
8708-9001	FJ62			69749-30020-	1		
	69764B	LINK, BACK DOOR LOCK CONTROL, RH					
8708-9001	FJ62			69764-90A00-	1		
	69767A	LINK, BACK DOOR LOCK CONTROL, LH NO.3					
8708-9001	FJ62			69767-90A00-	1		
	75415A	BUSH, BACK DOOR LOWER INSIDE HANDLE					
8708-9001	FJ62			75415-95660-	1		

(8708-)

TYPE A

74559A




TYPE B

74559A



TYPE C


74559A

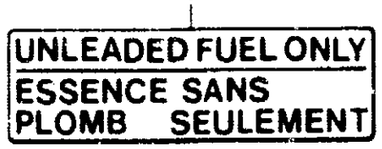


74559B




36369

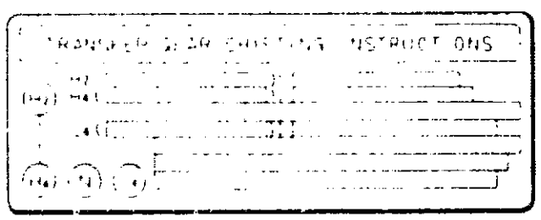

35519

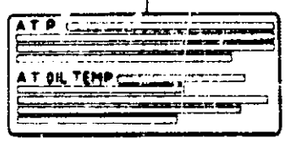

74564

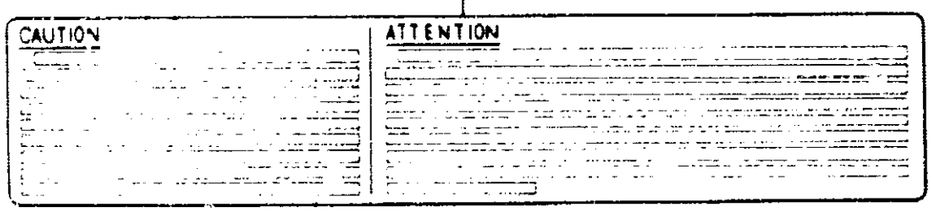

74571A



M8 L971 R


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	35519	PLATE, AUTOMATIC TRANSMISSION CAUTION					
8708-9001	FJ62			35519-60030-	1		
	36369	LABEL, TRANSFER INFORMATION					
8708-9001	FJ62			36369-60030-	1		
	74559A	PLATE, FUEL CAUTION					
8708-9001	FJ62..CND	TYPE C		74559-12020-	1		
8708-9001	FJ62..USA	TYPE B		74559-20030-	1		
8708-9001	FJ62..USA	TYPE A		74559-20090-	1		
	74559B	LABEL, FUEL INFORMATION					
8708-9001	FJ62			74559-60010-	1		
	74564	PLATE, OFFROAD VEHICLE CAUTION					
8708-9001	FJ62..CND			74564-60010-	1		
	74571A	FILM, LABEL COVER					
8809-9001	FJ62..WGG			74571-28020-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	78111	PEDAL, ACCELERATOR					
8708-9001	FJ62			78111-95110-	1		
	78118A	STOPPER, ACCELERATOR PEDAL					
8708-9001	FJ62			78118-90K00-	1		
	78120B	BUSH (FOR ACCELERATOR LINK ROD)					
8708-9001	FJ62			90386-08155-	2		
	78120E	SPRING, TENSION (FOR ACCELERATOR LINK ROD)					
6708-9001	FJ62			90508-29017-	1		
	78120G	ROD ASSY, ACCELERATOR PEDAL					
8708-8801	FJ62			78120-90A08-	1		
8801-9001	FJ62			78120-90A09-	1		
	78180P	CABLE ASSY, ACCELERATOR CONTROL					
8708-9001	FJ62			78180-90A24-	1		
	78184B	BRACKET, ACCELERATOR CONTROL CABLE					
8708-8801	FJ62			78184-90A0.-	1		
8801-9001	FJ62			78184-90A03-	1		
	78410	CABLE ASSY, THROTTLE CONTROL					
8708-8801	FJ62			78410-90A03-	1		
8801 9001	FJ62			78410-90A08-	1		
	78471	BRACKET, THROTTLE CONTROL CABLE					
8708-8808	FJ62			78471-90A00-	1		002

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)
CLAMP & GROMMET

ILLUST.NO.3 OF 3

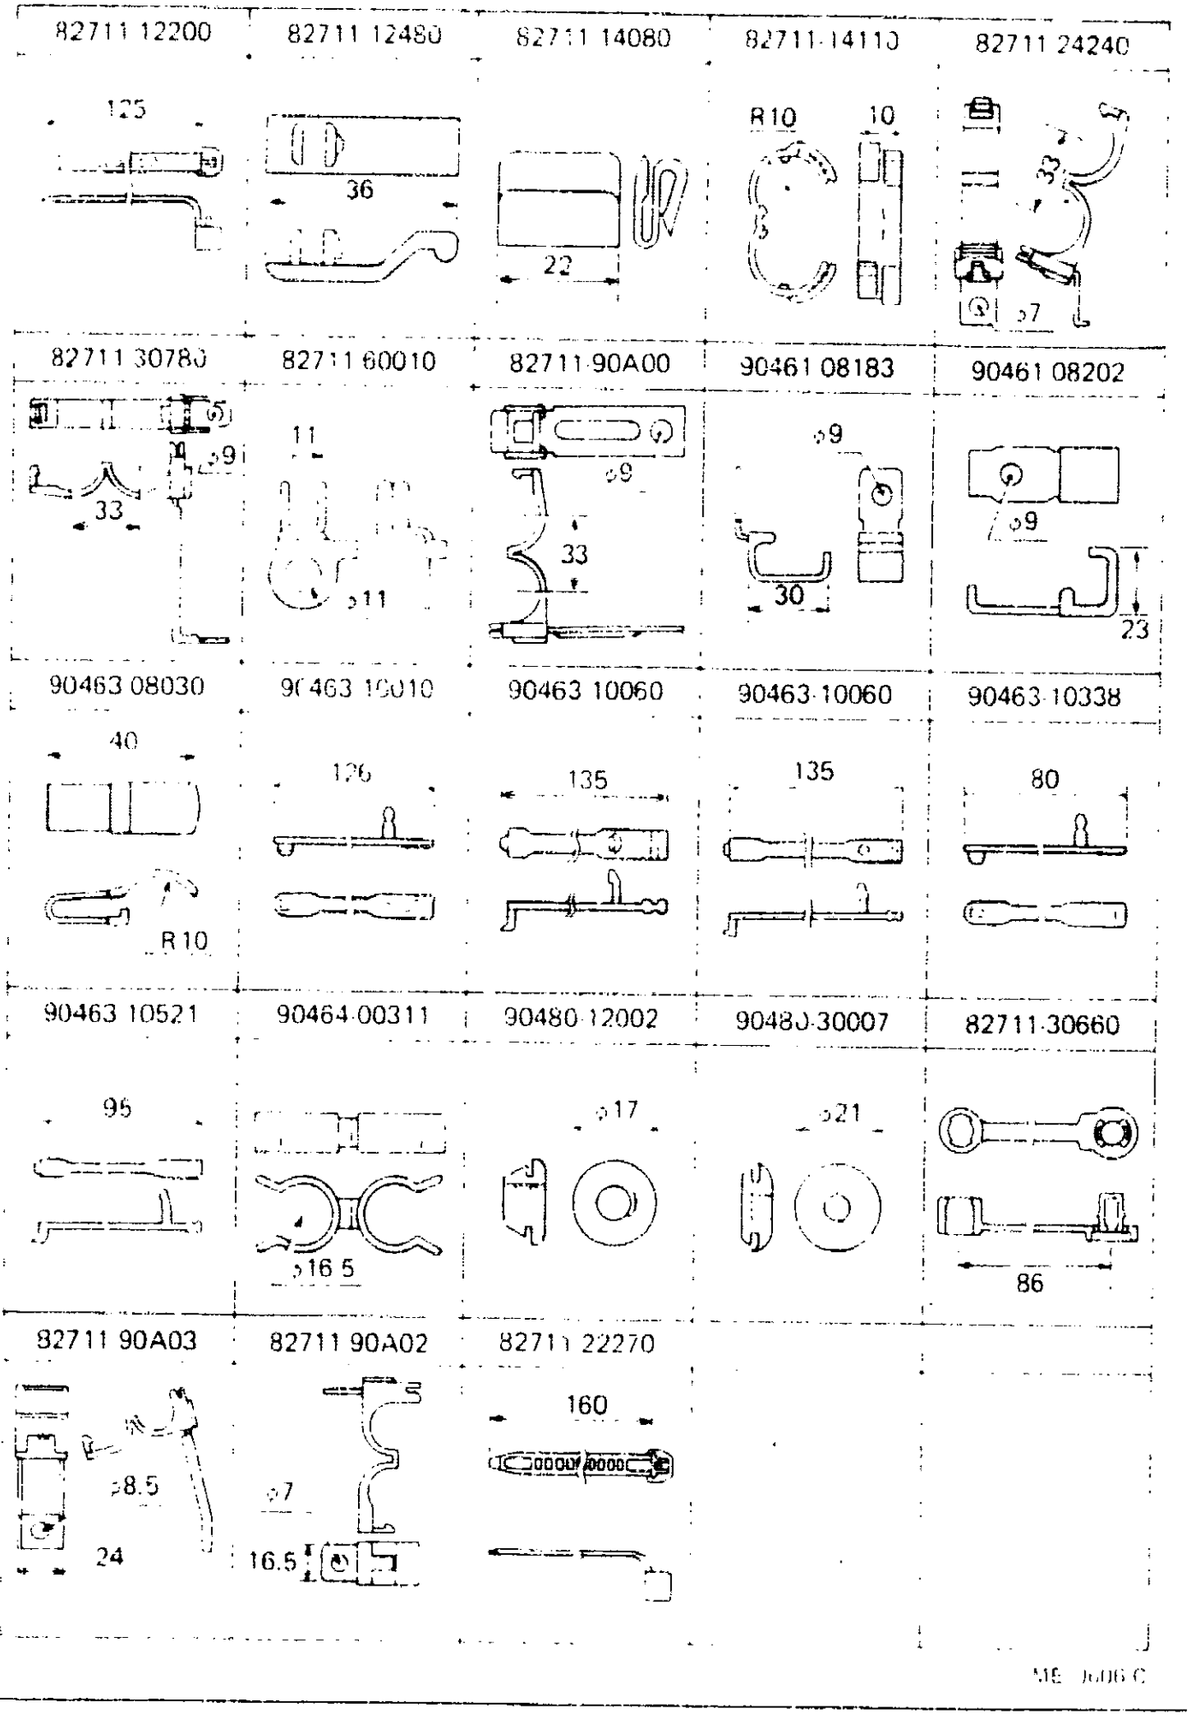

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV.REF F	REV.REF T
	82001	CABLE, BOND, NO.1					
8708-9001	FJ62	FRAME-ENGINE		90980-07003-	1		
8708-9001	FJ62	MISSION-BODY		90980-07048-	1		
8708-9001	FJ62	ENGINE-HEATER VALVE		90980-07251-	1		
	82121	WIRE, ENGINE					
8708-8808	FJ62			82121-90A03-	1		002
8808-9001	FJ62..WGG			82121-90A04-	1	003	
	82124	WIRE, ENGINE, NO.4					
8708-9001	FJ62			82124-90A01-	1		
	82125	WIRE, TRANSMISSION					
8708-9001	FJ62			82125-90A09-	1		
	82131	WIRE, COWL					
8708-8808	FJ62			82131-90G89-	1		002
8808-9001	FJ62..WGG			82131-90G98-	1	003	
	82132	WIRE, COWL, NO.2					
8708-9001	FJ62			82132-90A15-	1		
	82141	WIRE, INSTRUMENT PANEL					
8708-9001	FJ62			82141-90A20-	1		
8708-9001	FJ62	W(DIFFERENTIAL LOCK)		82141-90A21-	1		
	82151	WIRE, FRONT DOOR, RH					
8708-9001	FJ62			82151-90A05-	1		
8708-9001	FJ62	W(POWER WINDOW)		82151-90A08-	1		


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	89667	BRACKET, ENGINE CONTROL COMPUTER					
8708-9001	FJ62			89667-60010-	1		
	89668	BRACKET, ENGINE CONTROL COMPUTER, NO.2					
8708-9001	FJ62			89668-60010-	1		
	89669	BRACKET, ENGINE CONTROL COMPUTER, NO.3					
8708-9001	FJ62			89669-60010-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	86151	BOX, SPEAKER					
8708-9001	FJ62			86151-90K01-	2		
	86160	SPEAKER ASSY, FRONT NO.1					
8708-9001	FJ62	RH		86160-90A05-	1		
8708-9001	FJ62	LH		86160-90A06-	1		
	86160B	SPEAKER ASSY, REAR					
8708-9001	FJ62			86160-90K02-	2		
	86209	BRACKET SUB-ASSY, SPEAKER					
8708-9001	FJ62			86209-90A00-	2		
	86269A	GRILLE. SPEAKER					
8708-9001	FJ62	NO.1		86269-90K00-	2		
8708-9001	FJ62	NO.2		86269-90K01-	2		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T

(8708-)

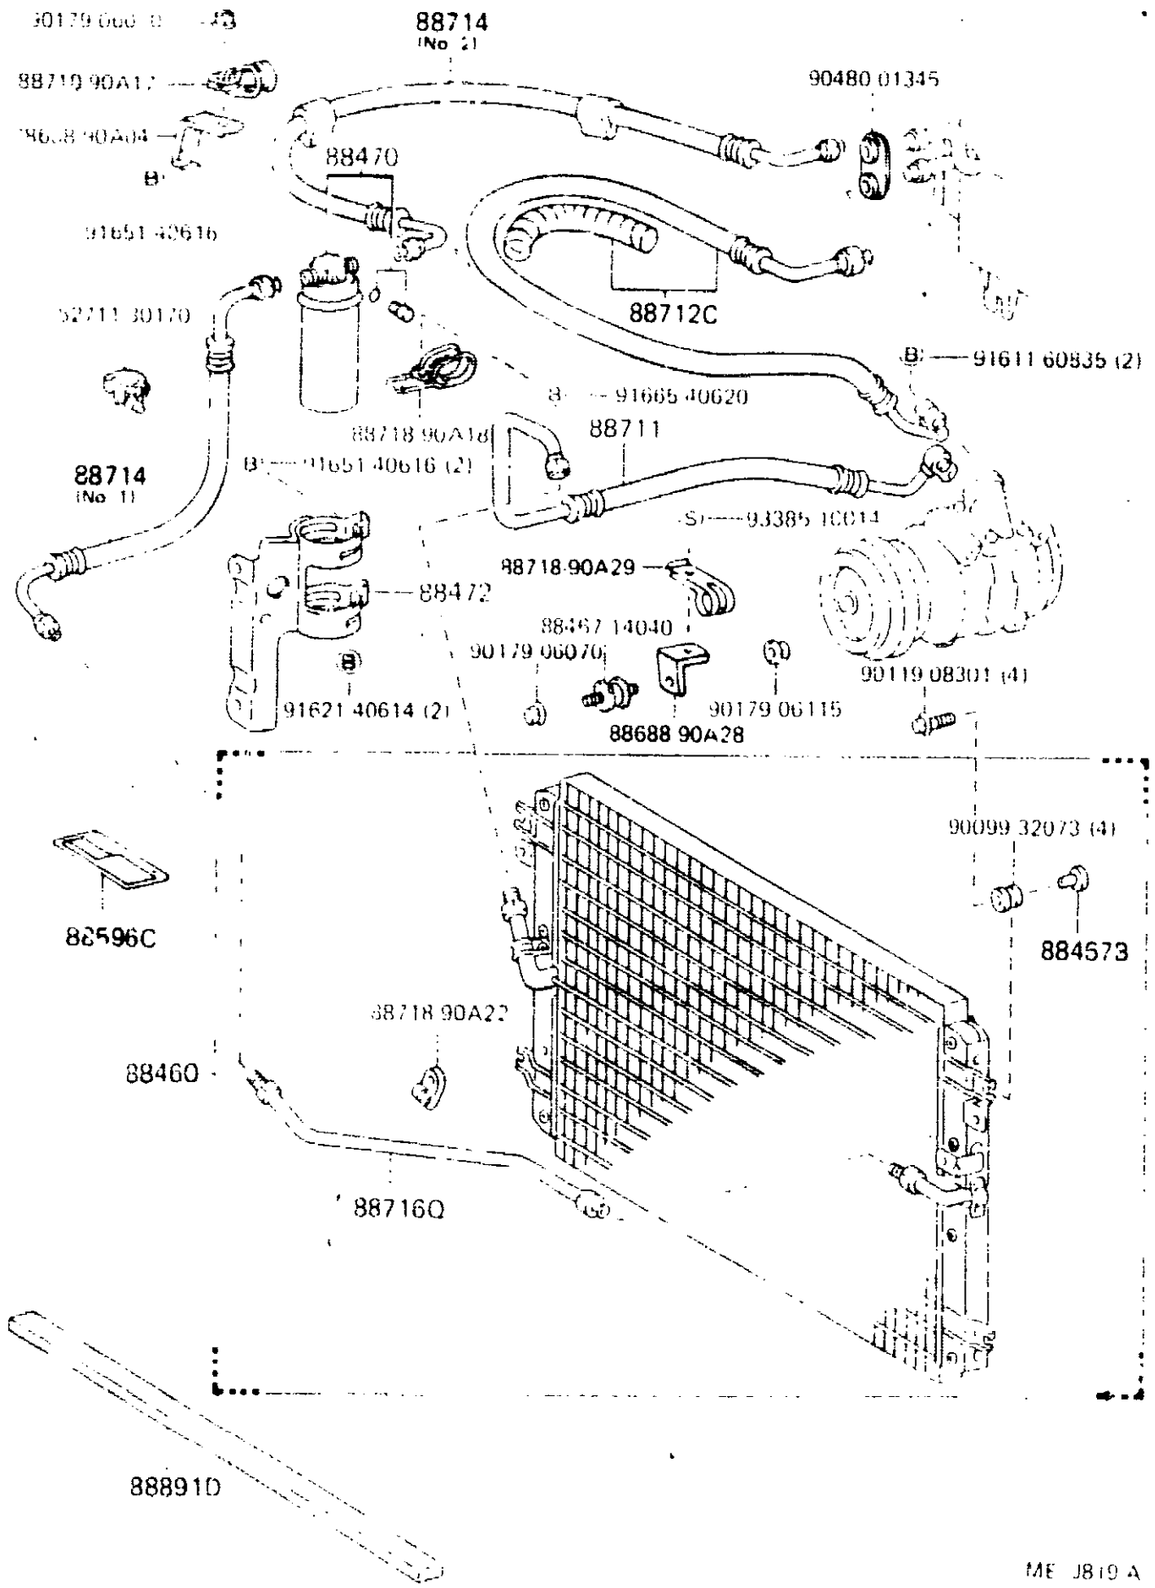

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY.	REV. REF F	REV. REF T
	88460	**CONDENSER ASSY, COOLER**					
8708-9001	FJ62			88460-90A14-	1		
	884673	**INSULATOR, COOLER CONDENSER MOUNTING**					
8708-9001	FJ62			88469-22010-	4		
	88470	**RECEIVER AND DRYER ASSY, COOLER**					
8708-9001	FJ62			88470-14010-	1		
	88472	**BRACKET, RECEIVER TANK, NO.1**					
8708-9001	FJ62			88472-90A01-	1		
	88596C	**PLATE, CAUTION, NO.2**					
8708-9001	FJ62			88723-12010-	1		
	88711	**HOSE, COOLER REFRIGERANT DISCHARGE, NO.1**					
8708-9001	FJ62			88711-90A09-	1		
	88712C	**HOSE, SUCTION**					
8708-9001	FJ62			88712-90A09-	1		
	88714	**HOSE, COOLER REFRIGERANT RIQUID, NO.1**					
8708-9001	FJ62	NO.1		88721-90A07-	1		
8708-9001	FJ62	NO.2		88721-90A08-	1		
	88716Q	**PIPE, COOLER REFRIGERANT LIQUID, Q**					
8708-9001	FJ62			88716-90A43-	1		
	888910	**PACKING**					
8708-9001	FJ62			88578-90A02-	1		

FIGURE NUMBER INDEX

M16

LOCATION	FIG. No	SUMMARY
		BODY GROUP
3A1	51 - 51	FRAME
3C1	51 - 52	SUSPENSION CROSSMEMBER & UNDER COVER
3D1	51 - 53	SPARE WHEEL CARRIER
3E1	52 - 51	CAB MOUNTING & BODY MOUNTING
3G1	52 - 52	FRONT BUMPER & BUMPER STAY
3H1	52 - 53	REAR BUMPER & BUMPER STAY
3I1	53 - 51	RADIATOR GRILLE
3J1	53 - 53	HOOD & FRONT FENDER
3L1	53 - 54	HOOD LOCK & HINGE
3M1	53 - 55	FRONT FENDER APRON & DASH PANEL
3B2	55 - 51	INSTRUMENT PANEL & GLOVE COMPARTMENT
3F2	56 - 53	COWL PANEL & WINDSHIELD GLASS
3H2	57 - 51	FLOOR MEMBER
3I2	58 - 51	FRONT FLOOR PANEL & FRONT FLOOR MEMBER
3L2	58 - 52	REAR FLOOR PANEL & REAR FLOOR MEMBER
3A3	58 - 53	FLOOR INSULATOR
3B3	58 - 54	FLOOR MAT & SILENCER PAD
3D3	58 - 55	CONSOLE BOX & BRACKET
3G3	61 - 51	SIDE MEMBER
3K3	61 - 52	SIDE WINDOW
3L3	61 - 53	ROOF PANEL & BACK PANEL
3A4	61 - 55	REAR VENTILATOR & ROOF VENTILATOR
3B4	64 - 51	INSIDE TRIM BOARD
3E4	64 - 52	ROOF HEADLINING & SILENCER PAD
3G4	64 - 55	DECK BOARD & DECK TRIM COVER
3H4	67 - 51	FRONT DOOR PANEL & GLASS
3L4	67 - 53	FRONT DOOR LOCK & HANDLE
3A5	67 - 54	FRONT DOOR WINDOW REGULATOR & HINGE
3C5	67 - 55	REAR DOOR PANEL & GLASS
3F5	67 - 56	REAR DOOR LOCK & HANDLE
3H5	67 - 57	REAR DOOR WINDOW REGULATOR & HINGE
3J5	67 - 61	BACK DOOR PANEL & GLASS
3L5	67 - 62	BACK DOOR LOCK & HINGE
3A6	67 - 65	DOOR CYLINDER SET
3C6	71 - 51	SEAT & SEAT TRACK
3H6	71 - 52	SEAT BELT
3J6	74 - 51	ARMREST & VISOR
3L6	74 - 54	BATTERY CARRIER
3M6	74 - 55	CAUTION PLATE
3A7	74 - 56	ASH RECEPTACLE
3B7	75 - 51	EMBLEM & NAME PLATE
3D7	75 - 52	MOULDING
3G7	75 - 54	TOOL BOX & LICENSE PLATE BRACKET
3H7	77 - 51	FUEL TANK & TUBE
3L7	78 - 51	ACCELERATOR LINK
		ELECTRICAL GROUP
3A8	81 - 01	HEADLAMP
3C8	81 - 03	FRONT TURN SIGNAL LAMP
3D8	81 - 04	FRONT CLEARANCE LAMP
3E8	81 - 05	FRONT MARKER LAMP
3F8	81 - 11	REAR COMBINATION LAMP
3H8	81 - 13	REAR LICENSE PLATE LAMP
3I8	81 - 14	REAR SIDE MARKER LAMP
3J8	81 - 21	INTERIOR LAMP
3K8	82 - 01	BATTERY & BATTERY CABLE
3L8	82 - 02	WIRING & CLAMP
3C9	83 - 01	METER
3E9	83 - 02	INDICATOR
3F9	84 - 01	SWITCH & RELAY
3L9	84 - 04	ELECTRONIC FUEL INJECTION SYSTEM
3A10	85 - 01	WINDSHIELD WIPER
3C10	85 - 02	REAR WIPER
3D10	85 - 03	WINDSHIELD WASHER
3F10	85 - 04	REAR WASHER
3G10	85 - 05	HEADLAMP CLEANER
3I10	85 - 11	DOOR MOTOR & DOOR SOLENOID
3J10	86 - 01	RADIO & TAPE PLAYER
3L10	86 - 02	SPEAKER
3A11	86 - 04	ANTENNA
3B11	86 - 11	HORN
3C11	87 - 01	MIRROR
3E1	87 - 12	HEATING & AIR CONDITIONING HEATER UNIT & BLOWER
3G11	87 - 14	HEATING & AIR CONDITIONING COOLER UNIT
3I11	87 - 15	HEATING & AIR CONDITIONING CONTROL & AIR DUCT
3K11	87 - 16	HEATING & AIR CONDITIONING WATER PIPING
3M11	87 - 18	HEATING & AIR CONDITIONING – COOLER PIPING
3A12	87 - 19	HEATING & AIR CONDITIONING COMPRESSOR

CONTENTS
(PART NAME – LOCATION)

A12

ABSORBER	– BEARING	A12
BEARING	– BOLT	B12
BOLT	– BULB	C12
BULB	– CLAMP	D12
CLAMP	– COVER	E12
COVER	– DISC	F12
DISC	– GASKET	G12
GASKET	– GROMMET	H12
GROMMET	– HOSE	I12
HOSE	– LENS	J12
LENS	– MOULDING	K12
MOULDING	– PEDAL	L12
PIECE	– PLATE	M12
PLATE	– RADIATOR	A13
RAIL	– RING	B13
RING	– SEAL	C13
SEAL	– SLEEVE	D13
SLEEVE	– STATOR	E13
STATOR	– TUBE	F13
TUBE	– WEATHERSTRIP	G13
WEATHERSTRIP	– YOKE	H13

PART NAME	LOCATION
ABSORBER ASSY, SHOCK REAR, LH	2A10
ABSORBER ASSY, SHOCK REAR, RH	2M9
ABSORBER ASSY, SHOCK, FRONT LH	2I9
ABSORBER ASSY, SHOCK, FRONT RH	2I9
ABSORBER, INNER REAR VIEW MIRROR	3C11
ADAPTER SUB-ASSY, TRANSMISSION CASE, REAR	2G1
ADAPTOR SUB-ASSY, TRANSMISSION HOUSING, FRONT	2G1
ADJUSTER ASSY, RECLINING SEAT, OUTER LH	3G6
ADJUSTER ASSY, RECLINING SEAT, OUTER RH	3G6
ADJUSTER ASSY, SHOE, LH (FOR REAR BRAKE)	2K8
ADJUSTER ASSY, SHOE, RH (FOR REAR BRAKE)	2K8
ALTERNATOR ASSY	1E4
AMPLIFIER ASSY, COOLER STABILIZER	3H11
ANTENNA ASSY, W/HOLDER	3A11
ANTI-RATTLE, BACK DOOR, LH	3L5
ANTI-RATTLE, BACK DOOR, RH	3L5
APRON SUB-ASSY, FRONT FENDER, LH	3A2
APRON SUB-ASSY, FRONT FENDER, RH	3A2
ARM ASSY, REAR WIPER	3C10
ARM ASSY, WINDSHIELD WIPER	3A10
ARM SUB-ASSY, VALVE ROCKER, NO.1	1D2
ARM SUB-ASSY, VALVE ROCKER, NO.2	1D2
ARM, FRONT BUMPER, UPPER LH	3G1
ARM, FRONT BUMPER, UPPER RH	3G1
ARM, GLOVE COMPARTMENT DOOR CHECK	3D2
ARM, PITMAN	2L7
ARM, STEERING KNUCKLE, LH	2M7
ARM, STEERING KNUCKLE, RH	2M7
ARMATURE ASSY, STARTER	1G4
ARMREST ASSY, FRONT, LH	3K6
ARMREST ASSY, FRONT, RH	3K6
ARMREST ASSY, REAR, LH	3K6
ARMREST ASSY, REAR, RH	3K6
BACK ASSY, FRONT SEAT, LH (FOR SEPARATE TYPE)	3E6
BACK ASSY, FRONT SEAT, RH (FOR SEPARATE TYPE)	3E6
BACK ASSY, REAR SEAT (FOR BENCH TYPE)	3E6
BAG, TOOL	1A1
BALANCER ASSY, HOOD, LH	3L1
BALANCER ASSY, HOOD, RH	3L1
BALL (FOR FRONT DIFFERENTIAL LOCK CYLINDER)	2G6
BALL (FOR LOWER VALVE BODY)	2B3
BALL (FOR POWER PISTON NUT)	2K7
BALL (FOR REAR DIFFERENTIAL LOCK CYLINDER	2E5
BALL (FOR REAR UPPER VALVE BODY)	2C3
BALL, CHECK	2F1
BALL, SHIFT DETENT	2F4
BAND SUB-ASSY, FUEL TANK, NO.1	3K7
BAND, IGNITION COIL, NO.1	1C4
BAND, ROPE HOOK	3M2
BAND, TOOL BAG	3G7
BAR SUB-ASSY, REAR DOOR WINDOW DIVISION, LH	3C5
BAR SUB-ASSY, REAR DOOR WINDOW DIVISION, RH	3C5
BAR, AIR PUMP ADJUSTING NO.2	1H3
BAR, FAN BELT ADJUSTING	1K2
BAR, FAN BELT ADJUSTING, NO.2	1K2
BAR, FRONT BUMPER	3G1
BAR, REAR	3H1
BAR, ROOF CARRIER SIDE	3M3
BAR, ROOF CARRIER, FRONT	3M3
BAR, ROOF CARRIER, REAR	3M3
BAR, STABILIZER, FRONT	2J9
BAR, STABILIZER, REAR	2A10
BASE, SWITCH HOLE, NO.1	3C2
BATTERY	3K8
BEARING (FOR ADJUSTER PLUG)	2K7

PART NAME	LOCATION
PLATE, FUEL CAUTION	3M6
PLATE, HORN CONTACT	3I9
PLATE, LOAD SENSING VALVE SET	2D9
PLATE, LOCK (FOR TRANSFER GEAR)	2E4
PLATE, LOCK UP RELAY VALVE BODY	2A3
PLATE, OFFROAD VEHICLE CAUTION	3M6
PLATE, POSITION INDICATOR (FOR FLOOR SHIFT)	2B1
PLATE, POWER STEERING OIL RESERVOIR CAUTION	2F7
PLATE, REAR AXLE LOCK NUT	2J5
PLATE, REAR CLUTCH	2B2
PLATE, REAR DOOR REGULATOR INSIDE HANDLE	3H5
PLATE, REAR DOOR SCUFF, LH	3C3
PLATE, REAR DOOR SCUFF, RH	3C3
PLATE, REAR FLOOR MAT SUPPORT	3B3
PLATE, REAR SEAT BACK SET	3E6
PLATE, RETAINER	1E4
PLATE, SPEEDOMETER SLEEVE LOCK (FOR ATM)	2J1
PLATE, STEERING COLUMN HOLE COVER	2A7
PLATE, TRANSFER DIAPHRAGM	2H4
PLATE, TRANSMISSION NAME	2C1
PLATE, VALVE BODY COVER	2C3
PLATE, VALVE BODY, NO.1	2C3
PLATE, VANE PUMP	2F7
PLATE, VANE PUMP SIDE, REAR	2F7
PLATE, WATER PUMP	1I2
PLATE,FAN CAUTION	1A4
PLIERS	1A1
PLUG	1C3
PLUG (FOR ACCUMULATOR CONTROL VALVE NO.1)	2G3
PLUG (FOR AUTOMATIC TRANSMISSION CASE)	2H1
PLUG (FOR CUT BACK VALVE)	2E3
PLUG (FOR DETENT REGULATOR VALVE)	2D3
PLUG (FOR FRONT AXLE HOUSING)	2H6
PLUG (FOR FUEL TANK)	3J7
PLUG (FOR INTERMEDIATE MODULATOR VALVE)	2D3
PLUG (FOR LOW COAST SHIFT VALVE)	2D3
PLUG (FOR LOW MODULATOR VALVE)	2D3
PLUG (FOR MANUAL DOWN TIMING VALVE)	2G3
PLUG (FOR OIL PAN DRAIN)	1I1
PLUG (FOR OVERDRIVE CLUTCH EXHAUST VALVE)	2F3
PLUG (FOR REAR AXLE HOUSING DRAIN)	2F5
PLUG (FOR REAR AXLE HOUSING FILLER)	2F5
PLUG (FOR REAR DIFFERENTIAL LOCK CYLINDER)	2F5
PLUG (FOR SECONDARY REGULATOR VALVE)	2F3
PLUG (FOR STEERING KNUCKLE)	2L9
PLUG (FOR TRANSFER CASE)	2B4
PLUG (FOR 1-2 RELAY VALVE)	2E3
PLUG (FOR 1-2 SHIFT VALVE LOW PLUG)	2D3
PLUG (FOR 2-3 SHIFT VALVE PLUG)	2D3
PLUG (FOR 2-3 SHIFT VALVE)	2E3
PLUG (FOR 2ND LOCK VALVE)	2F3
PLUG (FOR 3-2 KICK DOWN ORIFICE CONTROL VALVE)	2G3
PLUG (FOR 3-4 SHIFT VALVE)	2G3
PLUG SUB-ASSY, ADJUSTER	2J7
PLUG SUB-ASSY, DRAIN	2H6
PLUG SUB-ASSY, DRAIN (ATM)	2H1
PLUG SUB-ASSY, PRIMARY DOWN SHIFT	2A3
PLUG SUB-ASSY, SECONDARY DOWN SHIFT	2A3
PLUG, (FOR FRONT DIFFERENTIAL LOCK CYLINDER)	2G6
PLUG, ASSIST GRIP	3K6
PLUG, AUTOMATIC TRANSMISSION CASE	2G1
PLUG, BLEEDER (FOR DRUM BRAKE, REAR)	2K8
PLUG, BLEEDER (FOR FRONT DISC BRAKE)	2H8
PLUG, BREATHER (FOR TRANSFER CASE)	2B4
PLUG, BREATHER, NO.1 (ATM)	2G1

PART NAME	LOCATION
PLUG, EXPANSION (FOR CAMSHAFT)	1C2
PLUG, HOLE (FOR REAR BRAKE)	2K8
PLUG, HOLE(FOR REAR CONSOLE BOX)	3E3
PLUG, LOCK UP SIGNAL VALVE	2A3
PLUG, MASTER CYLINDER FLUID OUTLET	2D8
PLUG, MASTER CYLINDER FLUID OUTLET (FOR REAR SIDE)	2E8
PLUG, NO.2	1C3
PLUG, OIL PUMP RELIEF VALVE	1E2
PLUG, RADIATOR DRAIN COCK	1L2
PLUG, SHIFT DETENT BALL SPRING	2F4
PLUG, SPARK	1B4
PLUG, STRAIGHT (FOR 3RD COAST SHIFT)	2F3
PLUG, STRAIGHT SCREW (FOR STEERING LINK JOINT)	2M7
PLUG, STRAIGHT, NO.1	1F1
PLUG, TIGHT (FOR TRANSFER CASE)	2B4
PLUG, TIGHT, NO.1	1F1
PLUG, TIGHT, NO.1 (FOR CYLINDER BLOCK)	1I1
PLUG, TIGHT, NO.2	1F1
PLUG, TIGHT, NO.2 (FOR CYLINDER BLOCK)	1I1
PLUG, TIGHT, NO.3	1F1
PLUG, TIGHT, NO.3 (FOR CYLINDER BLOCK)	1I1
PLUG, WATER DRAIN COCK (FOR CYLINDER BLOCK)	1H1
PLUG, 1-2 SHIFT VALVE LOW	2D3
PLUG, 2-3 SHIFT TIMING VALVE	2C3
PLUG, 2-3 SHIFT VALVE	2D3
PLUNGER, PRIMARY REGULATOR VALVE, NO.1	2B3
POCKET, CONSOLE BOX	3E3
POCKET, FRONT DOOR TRIM, LH	3J4
POCKET, FRONT DOOR TRIM, RH	3J4
PROTECTOR, DIFFERENTIAL LOCK CYLINDER	2F5
PROTECTOR, EDGE, NO.1	3C2
PROTECTOR, FUEL HOSE	3J7
PROTECTOR, INTERMEDIATE LINK JOINT, LOWER	2B7
PROTECTOR, INTERMEDIATE LINK JOINT, UPPER	2B7
PROTECTOR, QUARTER INNER	3G7
PROTECTOR, ROOF CARRIER, NO.1	3M3
PROTECTOR, ROOF CARRIER, NO.2	3M3
PROTECTOR, TRANSMISSION OIL PAL	2H1
PULLER, FUSE	3H9
PULLEY ASSY, IDLE	3C12
PULLEY ASSY, IDLER	1K1
PULLEY, ALTERNATOR	1F4
PULLEY, CRANKSHAFT	1B2
PULLEY, CRANKSHAFT, NO.2	1B2
PULLEY, FAN	1I2
PULLEY, PARKING BRAKE SEGMENTAL	2L8
PULLEY, VANE PUMP	2D7
PUMP ASSY, AIR	1H3
PUMP ASSY, FUEL	1K4
PUMP ASSY, OIL	1E2
PUMP ASSY, VANE	2E7
PUMP ASSY, WATER	1I2
PUMP ASSY, WATER, W/O COUPLING	1I2
PUSH ROD SUB-ASSY, BOOSTER	2G8
RACE, THRUST BEARING (FOR FRONT CLUTCH HUB FRONT)	2A2
RACE, THRUST BEARING (FOR FRONT OIL PUMP COVER)	2F1
RACE, THRUST BEARING (FOR INPUT SHAFT FRONT)	2C2
RACE, THRUST BEARING (FOR INPUT SHAFT REAR)	2B2
RACE, THRUST BEARING (FOR OVERDRIVE CASE)	2M1
RACE, THRUST BEARING (FOR OVERDRIVE PLANETARY GEAR)	2M1
RACE, THRUST BEARING (FOR REAR CLUTCH DRUM)	2B2
RACE, THRUST BEARING (FOR REAR PLANETARY FLANGE)	2H2
RACE, 1 WAY CLUTCH OUTER (FOR OVERDRIVE)	2L1
RADIATOR ASSY	1K2
RADIATOR ASSY, HEATER	3F11

CONTENTS
(PART NUMBER – LOCATION)

04044 – 16361 ———— A14
16363 – 35676 ———— B14
35676 – 45130 ———— C14
45130 – 57402 ———— D14
57405 – 67917 ———— E14
68111 – 81520 ———— F14
81521 – 89668 ———— G14
89669 – 90389 ———— H14
90389 – 91511 ———— I14
91611 – 99915 ———— J14

PART NUMBER	LOCATION		PART NUMBER	LOCATION		PART NUMBER	LOCATION
04044-60150-	2J7		11253-61010-	1H1		13103-61032-	1A2
04111-61070-	1E1		11292-61010-	1A4		13105-61032-	1A2
04112-61060-	1E1		11298-61040-	1A4		13107-61031-	1A2
04351-60011-	2D1	N	-61041-	1A4		-61032-	1A2
04371-10011-	2M6	N	-61042-	1A4		13201-38011-	1A2
-36030-	2K4		-61050-	1A4		13204-61020-	1A2
04412-60030-	2B5	N	-61051-	1A4		13265-39025-	1A2
04434-60012-	2E9	N	-61052-	1A4	P	13401-61021-	1A2
04443-60330-	2G8		-61060-	1A4	B	-61023-	1A2
04445-60030-	2J7	S	-61061-	1A4		13470-61030-	1B2
04446-30030-	2D7	N	-61062-	1A4		13471-61010-	1B2
-38010-	2D7		11302-61031-	1J1		13511-60060-	1C2
04455-60020-	2J7		11311-61020-	1J1		13521-61010-	1B2
04474-60010-	2J8	P	11312-61020-	1J1		13523-61010-	1C2
04476-60050-	2J8	B	-61021-	1J1		13571-61010-	1C2
04477-60010-	2B9		11328-61010-	1J1		13711-61010-	1C2
04479-30030-	2H8		11369-60011-	1J1		13715-61040-	1D2
04481-60030-	2H9	P	11400-61120-	1D1		13734-60030-	1D2
04482-60040-	2H9	B	-61121-	1D1		13741-60030-	1D2
	2L9	B	11401-69306-	1H1		-61010-	1D2
04483-60050-	2L9		11452-61010-	1I1		13751-61020-	1D2
04491-60030-	2H8		11495-61010-	1H1		13755-61020-	1D2
04493-60160-	2D8		11701-61010-01	1M1		13781-61020-	1D2
04495-60010-	2J8		-61010-02	1M1		13811-61030-	1D2
-60011-	2J8		-61010-03	1A2		13812-61030-	1D2
09114-60030-	1A1		-61010-04	1A2		13901-61020-	1D2
09115-60030-	1A1		-61010-05	1A2		13952-61012-	1D2
09116-35041-	1A1		11704-61010-	1M1		13994-61020-	1D2
09120-60100-	1A1		11705-61010-	1M1		15012-60014-	1E2
09150-60020-	1A1		11802-61010-	1C2		15100-61011-	1E2
09155-44010-	1A1		11804-61010-	1C2		15121-61011-	1E2
09183-00030-	1B1		11805-61010-	1C2		15122-61011-	1E2
-60010-	1B1		12101-61030-	1I1		15125-60013-	1E2
11011-61010-	1M1		12151-61011-	1I1		15126-60013-	1E2
11012-61010-	1M1		12157-10010-	2F5		15131-24010-	1E2
11013-61010-	1M1			2H1		15132-40010-	1E2
11071-61010-01	1M1			2H6		15133-24010-	1E2
-61010-02	1M1		12180-61010-	1G1		15301-60031-	1I1
-61010-03	1M1		12195-71020-	1G1		15403-60020-	1F2
-61010-04	1M1		12204-35040-	1L1		15600-41010-	1G2
-61010-05	1M1		12221-61010-	1L1		15609-61012-	1G2
11072-61010-01	1M1		12261-61060-	1L1		15691-60010-	1G2
-61010-02	1M1		12262-61020-	1L1		15710-61010-	1H2
-61010-03	1M1		12311-61071-	1K1		15770-61010-	1H2
-61010-04	1M1		12361-61030-	1K1		15777-61030-	1H2
-61010-05	1M1	A	-61031-	1K1		16100-69195-	1I2
11073-61010-01	1M1		12371-61040-	1K1		16110-61180-	1I2
-61010-02	1M1	A	-61041-	1K1		16117-61110-	1I2
-61010-03	1M1	P	12511-61060-	1K1		16124-61110-	1I2
-61010-04	1M1	B	-61061-	1K1		16171-61071-	1I2
-61010-05	1M1		13011-61062-	1A2		16173-61070-	1I2
11101-61080-	1F1		13013-61062-	1A2		16198-41050-	1I2
11115-61020-	1F1		13015-61062-	1A2		16210-61140-	1I2
11122-61011-	1F1		13017-61062-	1A2		16259-52010-	1I2
11123-61011-	1F1		13041-35020-0A	1A2		16261-61020-	1K2
11126-61011-	1G1		-35020-0B	1A2		16264-61010-	1K2
11127-61011-	1G1		-35020-0C	1A2		16268-61010-	1K2
11131-61010-	1G1		13101-61031-	1A2		16271-61010-	1I2
11132-61010-	1G1		-61031-01	1A2		16303-61020-	1K2
11135-60010-	1G1		-61031-02	1A2		16304-61030-	1K2
11136-60030-	1G1		-61031-03	1A2		16341-61020-	1K2
11201-61041-	1G1		-61032-01	1A2		16343-61010-	1K2
11213-61020-	1G1		-61032-02	1A2		16360-61015-	1K2
11251-61020-	1H1		-61032-03	1A2		16361-61020-	1K2

REVISION REFERENCE CODE LIST

A15

NOTICE

FRAME NUMBER AND VEHICLE IDENTIFICATION NUMBER

1. FRAME NUMBER MX62-123456

FRAME NUMBER IS GIVEN ON THE DASH COWL IN THE ENGINE ROOM. FUNCTION IN TOYOTA PARTS CATALOG IS LISTED IN THE REVISION REFERENCE CODE LIST TO IDENTIFY ENGINEERING CHANGE PERIOD AS BEFORE. SO, IN LOCATING PARTS CATALOG, TAKE A LOOK AT FRAME NUMBER ON CORRESPONDING VEHICLE.

REV. REF. CODE	ENGINE NO. OR FRAME NO.
1	MX62-123456


2. NAME PLATE

NAME PLATE IS ATTACHED TO THE DASH COWL IN THE ENGINE ROOM. MODEL COLUMN INDICATES FULL MODEL CODE. SO, FOR MODEL INFORMATION, REFER TO THE NAME PLATE AS BFFORE.

PROCEDURE TO DETERMINE FRAME NUMBER FROM NAME PLATE IS :

ⓐ + ⓑ =

MX62-123456

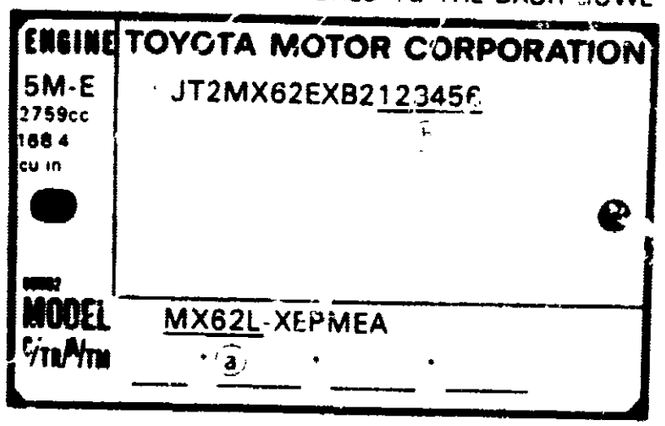

3. VEHICLE IDENTIFICATION NUMBER JT2MX62EXB2123456

VEHICLE IDENTIFICATION NUMBER IS GIVEN TO VIN PLATE ON LEFT HAND OF DASH BOARD. CERTIFICATION REGULATION PLATE ON LEFT DOOR PILLAR, AND NAME PLATE.

Starting Frame Number Per Each Assembly Line
(Production from Aug. '87 up to Jan. '90)

Assembly Line / Applicable Model	Toyota Motor Motomachi Plant (A21 ~ A26)
FJ62–	074006 ~

REV. REF. CODE	ENGINE NO. OR FRAME NO. OR TRANS. NO.	REV. REF. CODE	ENGINE NO. OR FRAME NO. OR TRANS. NO.	REV. REF. CODE	ENGINE NO. OR FRAME NO. OR TRANS. NO.
2	FJ62-096260				
3	FJ62-096261				

A16

GUIDE TO CONTENTS

1. MODELS COVERED & CHARACTERISTICS ..... C 15 · D 15 (included in each fiche)

2. MARK & ABBREVIATION ..... B 16 (included in each fiche)
   I 13 thru M 13 (included in the fiche No. 4 of 4)

3. INDEX

   ILLUSTRATED INDEX ..... D 10 thru K 16 (included in each fiche)

   FIGURE NUMBER INDEX ..... L 16 , M 16 (included in each fiche)

4. ILLUSTRATIONS & TEXT ..... From 1-A1 (included in each fiche)

   The contents (illustrations & text) have been divided

   into groups by function in the following sequence:

   Engine

   Fuel

   Power train · Chassis

   Body

   Electrical

5. APPENDICES

   PART NAME ⇨ LOCATION LIST ..... A 12 thru H 13 (included in the fiche No. 4 of 4)

   PART NUMBER ⇨ LOCATION LIST ..... A 14 thru J 14 (included in each fiche)

   REVISION REFERENCE CODE LIST ..... A 15 (included in each fiche)

   PRODUCTION FRAME NUMBER REFERENCE LIST ..... B 15 (included in each fiche)

Note : SST (Special Service Tools) are not included in this parts catalog.

For related part number information can be noted in SST List, Service Bulletin and Repair Manual.

PART NAME	LOCATION
BEARING (FOR ALTERNATOR DRIVE END FRAME)	1E4
BEARING (FOR ALTERNATOR ROTOR)	1E4
BEARING (FOR MAGNET CLUTCH)	3B12
BEARING (FOR REAR AXLE SHAFT)	2I5
BEARING (FOR STEERING KNUCKLE ARM)	2F9
BEARING (FOR TRANSFER HIGH SPEED OUTPUT GEAR)	2D4
BEARING (FOR TRANSFER IDLER GEAR)	2D4
BEARING (FOR TRANSFER OUTPUT FRONT SHAFT)	2E4
BEARING (FOR VANE PUMP SHAFT)	2E7
BEARING SET, CAMSHAFT	1C2
BEARING SET, CONNECTING ROD	1A2
BEARING SET, CRANKSHAFT	1M1
BEARING SUB-ASSY, UNIVERSAL JOINT SPIDER	2L4
BEARING, CONNECTING ROD	1A2
BEARING, CRANKSHAFT	1M1
BEARING, FRONT AXLE DIFFERENTIAL	2H6
BEARING, NEEDLE ROLLER (FOR POWER STEERING GEAR HOUSING)	2K7
BEARING, NEEDLE ROLLER (FOR TRANSFER LOW GEAR)	2D4
BEARING, NEEDLE ROLLER (FOR TRANSFER OUTPUT SHAFT FRONT)	2E4
BEARING, RADIAL BALL (FOR OUTPUT SHAFT FRONT)	2G2
BEARING, RADIAL BALL (FOR OUTPUT SHAFT REAR)	2G2
BEARING, RADIAL BALL (FOR STEERING MAIN SHAFT)	2M6
BEARING, RADIAL BALL (FOR TRANSFER INPUT GEAR)	2D4
BEARING, STARTER ARMATURE	1G4
BEARING, TAPER ROLLER (FOR TRANSFER OUTPUT SHAFT)	2E4
BEARING, TAPERED ROLLER (FOR FRONT AXLE DEFFERENTIAL)	2F6
BEARING, TAPERED ROLLER (FOR FRONT AXLE INNER BEARING)	2K6
BEARING, TAPERED ROLLER (FOR FRONT AXLE OUTER BEARING)	2L6
BEARING, TAPERED ROLLER (FOR FRONT DRIVE PINION FRONT)	2E6
BEARING, TAPERED ROLLER (FOR FRONT DRIVE PINION REAR)	2E6
BEARING, TAPERED ROLLER (FOR REAR AXLE INNER BEARING)	2J5
BEARING, TAPERED ROLLER (FOR REAR AXLE OUTER BEARING)	2J5
BEARING, TAPERED ROLLER (FOR REAR DIFFERENTIAL CASE)	2D5
BEARING, TAPERED ROLLER (FOR REAR DRIVE PINION FRONT)	2C5
BEARING, TAPERED ROLLER (FOR REAR DRIVE PINION REAR)	2C5
BEARING, THRUST (FOR FRONT CLUTCH HUB)	2A2
BEARING, THRUST (FOR OUTPUT SHAFT)	2H2
BEARING, THRUST NEEDLE ROLLER (FOR REAR CLUTCH DRUM)	2B2
BEARING, THRUST NEEDLE ROLLER (FOR STEERING WORM)	2J7
BEARING, THRUST(FOR OVERDRIVE PLANETARY RING GEAR FLANGE)	2L1
BEARING, UNIVERSAL JOINT SPIDER (FOR STEERING MAIN SHAFT)	2A7
BEARING,THRUST NEEDLEROLLER(FOR OVERDRIVE PLANETARY GEAR)	2L1
BELT ASSY, FRONT SEAT INNER, LH	3H6
BELT ASSY, FRONT SEAT INNER, RH	3H6
BELT ASSY, FRONT SEAT OUTER, LH	3H6
BELT ASSY, FRONT SEAT OUTER, RH	3H6
BELT ASSY, REAR SEAT LAP TYPE, CENTER	3I6
BELT ASSY, REAR SEAT LAP TYPE, LH	3I6
BELT ASSY, REAR SEAT LAP TYPE, RH	3I6
BELT ASSY, REAR SEAT 3 POINT TYPE, INNER, LH	3I6
BELT ASSY, REAR SEAT 3 POINT TYPE, INNER, RH	3I6
BELT ASSY, REAR SEAT 3 POINT TYPE, OUTER, LH	3I6
BELT ASSY, REAR SEAT 3 POINT TYPE, OUTER, RH	3I6
BELT SET, REAR SEAT 3 POINT TYPE, LH	3H6
BELT SET, REAR SEAT 3 POINT TYPE, RH	3H6
BELT, V (FOR AIR PUMP)	1A3
BELT, V (FOR COOLER COMPRESSOR TO CRANKSHAFT PULLEY)	1A3
BELT, V (FOR FAN AND ALTERNATOR)	1A3
BEZEL, CIGAR LIGHTER HOLE	3C2
BEZEL, FRONT DOOR INSIDE HANDLE, LH	3L4
BEZEL FRONT DOOR INSIDE HANDLE, RH	3L4
BEZEL, REAR DOOR INSIDE HANDLE, LH	3F5
BEZEL, REAR DOOR INSIDE HANDLE, RH	3F5
BLADE ASSY, REAR WIPER	3C10
BLADE ASSY, WINDSHIELD WIPER	3A10

PART NAME	LOCATION
BLADE, REAR WIPER	3C10
BLADE, WINDSHIELD WIPER	3A10
BLOCK ASSY, JUNCTION	3B9
BLOCK ASSY, SHORT	1D1
BLOCK SUB-ASSY, CYLINDER	1H1
BLOWER ASSY, HEATER, FRONT	3F11
BOARD SUB-ASSY, DECK	3Q4
BOARD SUB-ASSY, FRONT DOOR TRIM, LH	3J4
BOARD SUB-ASSY, FRONT DOOR TRIM, RH	3I4
BOARD SUB-ASSY, REAR DOOR TRIM, LH	3D5
BOARD SUB-ASSY, REAR DOOR TRIM, RH	3C5
BOARD, QUARTER INSIDE TRIM, LH	3D4
BOARD, QUARTER INSIDE TRIM, RH	3D4
BODY ASSY, FRONT UPPER VALVE	2C3
BODY ASSY, LOWER VALVE	2B3
BODY ASSY, REAR UPPER VALVE	2C3
BODY ASSY, THROTTLE	1J4
BODY SUB-ASSY, FR OIL PUMP & GEAR	2E1
BODY, BOOSTER CENTER	2G8
BODY, BOOSTER VALVE	2G8
BODY, GOVERNOR	2I2
BOLT (FOR BACKING PLATE TO REAR AXLE HOUSING SETTING)	2J8
BOLT (FOR BRAKE MASTER CYLINDER)	2D8
BOLT (FOR CENTER SUPPORT)	2E2
BOLT (FOR CRANKSHAFT BEARING CAP SET)	1H1
BOLT (FOR CYLINDER HEAD SET)	1F1
BOLT (FOR DIFFERENTIAL CASE)	2D5
BOLT (FOR DRIVE PLATE & TORQUE CONVERTER SETTING)	2E1
BOLT (FOR DUST COVER TO STEERING KNUCKLE ARM SETTING)	2I8
BOLT (FOR FRONT DIFFERENTIAL LOCK SHIFT FORK SHAFT SET)	2G6
BOLT (FOR FRONT OIL PUMP SETTING)	2F1
BOLT (FOR GOVERNOR BODY)	2I2
BOLT (FOR OVERDRIVE CASE & TRANSAXLE CASE SETTING)	2K1
BOLT (FOR PROPELLER SHAFT & DIFFERENTIAL SETTING)	2K4
BOLT (FOR REAR DIFFERENTIAL CARRIER SET)	2B5
BOLT (FOR REAR DIFFERENTIAL LOCK CYLINDER SET)	2E5
BOLT (FOR REAR DIFFERENTIAL LOCK SHIFT FORK SHAFT SET)	2F5
BOLT (FOR REAR RING GEAR SET)	2C5
BOLT (FOR ROCKER SUPPORT SET)	1D2
BOLT (FOR TRANSFER CASE)	2A4
BOLT (FOR TRANSFER CASE)COVER NO.2	2B4
BOLT (FOR TRANSFER OUTPUT SHAFT COMPANION FLANGE)	2A4
BOLT OR PIN (FOR SHIFT LEVER KNOB SETTING)	2A1
BOLT, (FOR FRONT DIFFERENTIAL LOCK CYLINDER SET)	2G6
BOLT, BACK DOOR STAY	3M5
BOLT, BATTERY CLAMP	3L6
BOLT, BRAKE MASTER CYLINDER RESERVOIR SET	2E8
BOLT, CONNECTING ROD	1A2
BOLT, FRONT DIFFERENTIAL BEARING CAP	2E6
BOLT, FRONT SPRING, CENTER	2I9
BOLT, HEXAGON (FOR AIR PUMP BRACKET SETTING)	1H3
BOLT, HEXAGON (FOR DRIVE PLATE SETTING)	2E1
BOLT, HEXAGON (FOR FRONT DISC BRAKE CALIPER)	2H8
BOLT, HEXAGON (FOR FRONT RING GEAR SET)	2E6
BOLT, HUB (FOR FRONT AXLE)	2K6
BOLT, HUB (FOR REAR AXLE)	2J5
BOLT, REAR DIFFERENTIAL BEARING CAP	2C5
BOLT, REAR SPRING, CENTER	2M9
BOLT, RETURN SPRING SET	2B7
BOLT, ROUND HEXAGON	2E9
BOLT, SET (FOR REAR BRAKE DRUM SETTING)	2I5
BOLT, STEERING LOCK SET	2B7
BOLT, STUD (FOR FRONT DIFFERENTIAL CARRIER)	2E6
BOLT, STUD (FOR MANIFOLD TO CYLINDER HEAD)	1C3
BOLT, STUD (FOR MANIFOLD TO EXHAUST PIPE)	1C3

PART NAME	LOCATION
RAIL, ROOF SIDE INNER, LH	3H3
RAIL, ROOF SIDE, INNER RH	3H3
RAIL, ROOF SIDE, OUTER LH	3H3
RAIL, ROOF SIDE, OUTER RH	3H3
RECEIVER AND DRYER ASSY, COOLER	3M11
RECEIVER ASSY, RADIO	3K10
RECEIVER, TRANSFER OIL (FOR TRANSFER IDLER GEAR)	2D4
RECEIVER, TRANSFER OIL, NO.1	2B4
RECEIVER, TRANSFER OIL, NO.2	2B4
RECEPTACLE ASSY, REAR ASH	3A7
RECTIFIER ASSY, W/BRUSH	1F4
REED, DISCHARGE VALVE	3C12
REED, SUCTION VALVE	3C12
REGISTER ASSY, INSTRUMENT PANEL, NO.1	3D2
REGISTER ASSY, INSTRUMENT PANEL, NO.2	3D2
REGISTER ASSY, INSTRUMENT PANEL, NO.3	3D2
REGULATOR ASSY, FUEL PRESSURE	1K4
REGULATOR ASSY, GENERATOR	1F4
REGULATOR SUB-ASSY, FRONT DOOR WINDOW, LH	3A5
REGULATOR SUB-ASSY, FRONT DOOR WINDOW, RH	3A5
REGULATOR SUB-ASSY, REAR DOOR WINDOW, LH	3H5
REGULATOR SUB-ASSY, REAR DOOR WINDOW, RH	3H5
REINFORCE, TILT STEERING SUPPORT, NO.1	2B7
REINFORCEMENT SUB-ASSY, BELT ANCHOR	3M2
REINFORCEMENT SUB-ASSY, CENTER FLOOR PANEL, LH	3J2
REINFORCEMENT SUB-ASSY, CENTER FLOOR PANEL, RH	3J2
REINFORCEMENT SUB-ASSY, QUARTER LOCK PILLAR, LH	3H3
REINFORCEMENT SUB-ASSY, QUARTER LOCK PILLAR, RH	3H3
REINFORCEMENT, BACK DOOR OPENING SIDE, LH	3J3
REINFORCEMENT, BACK DOOR OPENING SIDE, RH	3I3
REINFORCEMENT, BACK DOOR OPENING, LOWER LH	3J3
REINFORCEMENT, BACK DOOR OPENING, LOWER RH	3J3
REINFORCEMENT, DUST COVER, LH	2I8
REINFORCEMENT, DUST COVER, RH	2I8
REINFORCEMENT, FRONT CROSSMEMBER, LOWER LH	3A1
REINFORCEMENT, FRONT CROSSMEMBER, LOWER RH	3A1
REINFORCEMENT, FRONT FLOOR TO BRACE	3J2
REINFORCEMENT, FRONT FLOOR UNDER	3J2
REINFORCEMENT, FRONT FLOOR, CENTER	3J2
REINFORCEMENT, FRONT FLOOR, NO.2 LH	3J2
REINFORCEMENT, FRONT FLOOR, NO.2 RH	3J2
REINFORCEMENT, PARKING BRAKE BASE	3J2
REINFORCEMENT, REAR BUMPER BAR, CENTER	3H1
REINFORCEMENT, REAR SEAT CUSHION HINGE, LH	3K2
REINFORCEMENT, REAR SEAT CUSHION HINGE, RH	3J2
REINFORCEMENT, REAR SEAT CUSHION LOCK	3J2
REINFORCEMENT, ROOF PANEL, NO.1	3L3
REINFORCEMENT, ROOF PANEL, NO.2	3L3
REINFORCEMENT, ROOF PANEL, NO.3	3L3
REINFORCEMENT, SIDE RAIL FRONT HOOK	3C1
REINFORCEMENT, WINDSHIELD HEADER PANEL	3L3
RELAY ASSY (FOR HEATER BLOWER MOTOR)	3J9
RELAY ASSY, CHARGE LAMP	3H9
RELAY ASSY, CIRCUIT OPENING (FOR E.F.I.)	3L9
RELAY ASSY, DOOR CONTROL	3K9
RELAY ASSY, HEADLAMP CLEANER CONTROL	3G10
RELAY ASSY, POWER WINDOW	3K9
RELAY ASSY, WINDSHIELD WIPER	3K9
RELAY, COMPUTER (FOR EFI)	3L9
RELAY, COOLING FAN	3K9
RELAY, FRONT DRIVE	3J9
RELAY, IGNITION	3H9
RELAY, LIGHT CONTROL	3J9
RELAY, SEAT BELT WARNING	3K9
REPLACER, WHEEL CAP	1B1

PART NAME	LOCATION
RESERVOIR ASSY, VANE PUMP OIL	2F7
RESERVOIR SUB-ASSY, BRAKE MASTER CYLINDER	2D8
RESISTOR, HEATER BLOWER	3F11
RETAINER	1H4
RETAINER (FOR FRONT DOOR TRIM BOARD)	3J4
RETAINER (FOR LOAD SENSING SPRING SHACKLE)	2D9
RETAINER (FOR REAR DOOR TRIM BOARD)	3D5
RETAINER SUB-ASSY, FRONT ASH RECEPTACLE	3A7
RETAINER SUB-ASSY, ROOF SIDE VENT LOUVER	3A4
RETAINER, BACK DOOR LOCK CYLINDER	3B6
RETAINER, BOOSTER PUSH ROD SEAL	2G8
RETAINER, CABLE	2B8
RETAINER, CENTER SUPPORT RING	2E2
RETAINER, CONSOLE BOX	3F3
RETAINER, CUSHION, NO.1 (FOR FRONT SHOCK ABSORBER)	2I9
RETAINER, CUSHION, NO.1 (FOR FRONT STABILIZER BAR)	2J9
RETAINER, CUSHION, NO.2 (FOR FRONT SHOCK ABSORBER)	2I9
RETAINER, CUSHION, NO.2 (FOR FRONT STABILIZER BAR)	2J9
RETAINER, DIFFERENTIAL LOCK LEVER SUPPORT	3J2
RETAINER, EXHAUST PIPE, NO.2	1E3
RETAINER, FRONT DIFFERENTIAL LOCK SPRING	2G6
RETAINER, FRONT DOOR WEATHERSTRIP, LH	3J4
RETAINER, FRONT DOOR WEATHERSTRIP, RH	3J4
RETAINER, FUEL FILLER LID CYLINDER	3B6
RETAINER, OUTER REAR VIEW MIRROR	3I4
RETAINER, OUTPUT SHAFT BEARING, FRONT	2B4
RETAINER, OUTPUT SHAFT BEARING, REAR NO.1	2B4
RETAINER, OVERDRIVE CASE RING	2M1
RETAINER, REAR ASH RECEPTACLE	3A7
RETAINER, REAR ASH RECEPTACLE, INNER RH	3A7
RETAINER, REAR DIFFERENTIAL LOCK SPRING	2F5
RETAINER, REAR DOOR WEATHERSTRIP,LH	3D5
RETAINER, REAR DOOR WEATHERSTRIP,RH	3D5
RETAINER, REAR HOOK	3C1
RETAINER, REAR SPRING PAD	2M9
RETAINER, ROOF CARRIER, NO.1 LH	3M3
RETAINER, ROOF CARRIER, NO.1 RH	3M3
RETAINER, ROOF CARRIER, NO.2	3M3
RETAINER, ROOF HEADLINING SUPPORT	3F4
RETAINER, ROPE HOOK	3M2
RETAINER, TILT LEVER	2B7
RETAINER, VALVE SPRING	1D2
RHEOSTAT, LIGHT CONTROL	3I9
RING (FOR ACCUMULATOR PISTON NO.2)	2B3
RING (FOR BRAKE MASTER CYLINDER RESERVOIR, NO.2)	2D8
RING (FOR GOVERNOR BODY SUPPORT)	2J2
RING (FOR POWER PISTON NUT)	2K7
RING (FOR POWER STEERING GEAR HOUSING)	2K7
RING (FOR STEERING MAIN SHAFT)	2M6
RING (FOR STEERING WORM)	2J7
RING (FOR VALVE HOUSING)	2J7
RING O (FOR REAR DIFFERENTIAL LOCK CYLINDER)	2E5
RING SET, PISTON	1A2
RING, BACK DOOR KEY CYLINDER LEVER	3B6
RING, CAM (FOR VANE PUMP)	2E7
RING, CLUTCH DRUM OIL SEAL	2F1
RING, CLUTCH DRUM OIL SEAL (FOR OVERDRIVE)	2M1
RING, COMPRESSOR SEAL PLATE SNAP	3C12
RING, DISTRIBUTOR HOUSING O	1D4
RING, DRIVE SHAFT SNAP	2K6
RING, E (FOR GOVERNOR VALVE SHAFT)	2J2
RING, E (FOR PRIMARY REGULATOR VALVE)	2B3
RING, E (FOR PRIMARY THROTTLE VALVE)	2E3
RING, E (FOR REAR BRAKE)	2K8
RING, E (FOR SECONDARY THROTTLE VALVE)	2F3

	PART NUMBER	LOCATION
	16363-61020-	1K2
	16381-61050-	1K2
	16384-61010-	1K2
	16400-61140-	1K2
	16401-71010-	1L2
	16405-61030-	1L2
	-90A00-	1L2
	16417-24200-	1L2
	16418-24200-	1L2
	16480-90A00-	1L2
	16571-61110-	1L2
	16572-61020-	1L2
	16575-61040-	1L2
	16577-61130-	1L2
	16582-61010-	1L2
	16583-61010-	1L2
	16584-61010-	1L2
	16585-61010-	1M2
	16586-61010-	1M2
	16611-61020-	1M2
	16630-61020-	1K1
	16711-61240-	1M2
A	-61241-	1M2
	16793-61011-	1A4
	17109-61010-	1C3
	17111-61040-	1C3
	17118-61030-	1C3
	17123-61010-	1C3
	17125-61010-	1C3
	17139-61010-	1C3
	17141-61080-	1C3
	17142-61050-	1C3
	17167-61070-	1C3
	17168-61030-	1C3
	17169-61040-	1C3
	17172-61060-	1C3
	17176-61010-	1C3
	17301-61010-	1I3
	17303-61020-	1M3
	17306-61030-	1J3
	17314-61040-	1H3
	17317-61020-	1K2
	17318-61060-	1H3
	17341-61030-	1I3
	17342-61040-	1I3
	17343-61030-	1I3
	17344-61020-	1I3
	17353-61010-	1J3
	17401-61210-	1E3
	17402-61010-	1E3
	17403-61110-	1E3
	17405-61240-	1E3
	17502-61021-	1E3
	17567-61030-	1E3
	17571-61160-	1E3
	17572-61051-	1E3
	17573-61051-	1E3
	17574-61050-	1E3
	-61071-	1E3
	17610-61040-	1H3
	17692-61020-	1M3
	17700-61230	1F3
	17705-61130-	1F3
P	17791-61023-	1A4
B	17791-61070-	1A4
	17792-61120-	1A4
	17801-68020-	1F3
	17810-61010-	1M3
	17841-68010-	1F3
	17845-61011-	1F3
	17881-61090-	1F3
	17882-61070-	1F3
	17883-61020-	1G3
A	18450-61010-	1E3
	-61040-	1E3
	18495-38020-	1E3
P	19000-61350-	1C1
N	-61351-	1C1
	19100-61240-	1D4
	19101-61240-	1D4
	19102-61240-	1D4
	19114-61040-	1D4
	19115-60010-	1D4
	19127-61240-	1D4
	19195-61240-	1D4
	19242-61240-	1D4
	19519-38030-	1B4
	22202-61011-	1J4
	22210-61010-	1J4
	22216-74010-	1J4
	22233-61010-	1J4
	22250-61010-	1G3
	22270-61010-	1J4
	22271-61010-	1K4
	22275-43010-	1G3
	22278-43011-	1K4
	23091-61010-	1K4
	23206-61010-	1K4
	23207-74010-	1K4
	23209-61010-	1K4
	23217-35040-	1K4
P	-35081-	1K4
	23220-16083-	1K4
	-16190-	1K4
	23229-16010-	1K4
	23232-28010-	1K4
	23239-16010-	1K4
	23249-74150-	1K4
	23260-69025-	1K4
	23280-61010-	1K4
	23291-73010-	1L4
	23293-74010-	1L4
	23300-69025-	1L4
	23801-61030-	1L4
	23802-61040-	1L4
	23803-61010-	1L4
	23807-61010-	1L4
	25611-61050-	1M4
	25620-61110-	1M4
	25627-61010-	1M4
	25631-61040-	1M4
	25691-61020-	1A5
	25695-61010-	1M4
	25702-61010-	1M3
	25710-61030-	1J3
	25716-61020-	1J3
	25820-13020-	1M3
	25860-61010-	1M3
	25870-61020-	1M4
	27060-61090-	1E4
	27212-39050-	1E4
	27310-72070-	1E4
	27312-45010-	1E4
	27330-72070-	1E4
	27351-38051-	1E4
	27359-61190-	1F4
	27362-72070-	1F4
	27371-31011-	1F4
	27372-31011-	1F4
	27410-72070-	1F4
	27411-61210-	1F4
	27412-45012-	1F4
	27441-45050-	1F4
	27700-63030-	1F4
	27790-13010-	3H9
	28011-26042-	1G4
	28100-60070-	1G4
	28110-60070-	1G4
	28120-26071-	1G4
	28130-34060-	1G4
	28140-26070-	1G4
	28150-34080-	1G4
	28160-26070-	1G4
	28165-26040-	1H4
	28228-26040-	1H4
	28229-26040-	1H4
	28253-45020-	1G4
	28254-45020-	1H4
	28800-61030-	3K8
	28897-38010-	3K8
	28898-26010-	3K8
	31478-30010-	2H8
		2K8
P	32000-60030-	2C1
B	-60031-	2E1
	-60040-	2E1
P	32101-60010-	2E1
B	-60011-	2E1
P	32116-60010-	2E1
B	-60011-	2E1
P	32117-60010-	2E1
B	-60011-	2E1
	32904-60012-	2K3
	32905-60012-	2K3
	32906-60012-	2K3
	32923-36010-	2K3
	32924-60011-	2K3
	32925-60030-	2K3
	32926-30020-	2L3
	32928-60011-	2L3
	32942-60010-	2L3
	-60030-	2L3
	32943-60010-	2L3
	33309-60041-	2A4
	-60070-	2A4
	33325-60010-	2A4
	-60021-	2A4
A	33403-69195-	2J1
	33404-30040-	2J1
	33481-60050-	2D4
	-60051-	2D4
	33485-30020-	2J1
	33502-60040-	2A1
	33503-60020-	2A1
	33511-60060-	2A1
	33542-30110-01	2A1
	-30110-36	2A1
	33555-60040-	2A1
	33623-30040-56	2A1
	33625-22020-	2B1
	33631-60020-	2B1
	33711-60040-	2B1
	33723-22010-	2B1
	33789-36010-	2B6
	34101-60010-	2K1
	34421-36010-	2M2
	34601-36010-	2K1
	34602-36010-	2K1
	34613-36010-	2L1
	34710-36010-	2L1
	34713-36010-	2L1
	34731-36010-	2L1
	34732-36010-	2L1
	34737-36010-	2L1
	34738-36010-	2L1
	35000-60162-	2D1
	-60163-	2D1
	35013-60011-	2G1
	35015-60010-	2G1
	-60011-	2G1
	35017-60010-	2G1
	35019-60010-	2G1
	35035-36010-	2E1
	35068-36010-	2F2
	35073-60010-	2G2
	35103-60011-	2G1
	-60012-	2G1
P	35104-60010-	2G1
N	-60011-	2G1
	35106-60041-	2H1
N	-60043-	2H1
	35111-60010-	2H1
	35112-36010-	2M2
	35113-36010-	2M2
	35114-36010-	2M2
	35115-36010-	2M2
	35116-60010-	2H1
	35117-60010-	2H1
	35118-60010-	2H1
	35136-60010-	2H1
	35138-60010-	2H1
	35143-36010-	2H1
	35144-36010-	2H1
	35146-36010-	2I2
P	35167-60011-	2H1
N	-60012-	2H1
	35168-36010-	2I1
	35182-36010-	2H1
	35211-36010-	2M2
	-36011-	2M2
	35212-36010-	2A3
	35213-36010-	2A3
	35215-36010-	2A3
	35216-36010-	2A3
	35219-60010-	2A3
	-60011-	2A3
	35222-60010-	2A3
	35223-36010-	2A3
	35226-36010-	2A3
	-36011-	2A3
	35231-36010-	2A3
	35303-60010-	2A3
	35308-36010-	2F1
	35313-36010-	2F1
	35321-36010-	2F1
	-36020-	2F1
	35322-36010-	2F1
	-36020-	2F1
	35339-36010-	2A3
	35394-36011-	2I1
	35395-36010-	2I2
	35396-36010-	2A3
	35405-36010-	2A3
	35408-36010-	2A3
	35409-36010-	2B3
	35415-36010-	2B3
	35416-36010-	2B3
	35417-36010-	2B3
	35418-36010-	2B3
	35419-36010-	2B3
	35420-60030-	2B3
	35422-22010-	2B3
	-36010-	2B3
	35423-36010-	2B3
	35424-36010-	2B3
	35425-22010-	2C3
	-36010-	2C3
	35427-36010-	2F1
	35428-60020-	2C3
	35429-36010-	2C3
	35430-60090-	2C3
	35432-60030-	2C3
	-60040-	2B1
	35433-36010-	2C3
	35434-36010-	2C3
	35435-36011-	2C3
	35436-36011-	2C3
	35437-36011-	2C3
	35438-60020-	2C3
	35440-60011-	2C3
	35444-36010-	2C3
	35445-36010-	2D3
	35451-36010-	2D3
	35452-36010-	2D3
	35454-36010-	2D3
	35455-36010-	2D3
	35456-36010-	2E3
	35458-36010-	2E3
	35459-36010-	2E3
	35462-36010-	2E3
	35463-36010-	2E3
	35464-36011-	2E3
	35466-60010-	2E3
	35467-36010-	2F3
	35468-36011-	2F3
	35472-36011-	2F3
	35476-36010-	2F3
	35477-30030-	2F3
	35479-36010-	2F3
	35481-36011-	2I2
	35481-36012-	2I2
	35482-60020-	2I2
	35483-60010-	2I2
	35484-60011-	2I2
	35485-60010-	2J2
	35486-36010-	2J2
	35487-36010-	2J2
	35488-60010-	2F3
	35489-36010-	2G3
	35491-36010-	2G3
	35492-36010-	2G3
	35495-36010-	2F1
	35497-36010-	2G3
	35498-36010-	2G3
	35501-36010-	2J3
	35505-36010-	2J3
	-36020-	2J3
	35519-60030-	3M6
	35520-60050-	2J3
	35556-60010-	2J3
	35557-36010-	2J3
	35560-36011-	2G3
	35561-60010-	2J3
	35569-60040-	2B1
	35572-60020-	2J3
	35589-36010-	2G3
	35595-36010-	2J3
	35599-36010-	2H3
	35602-36011-	2A2
	35606-36010-	2A2
	35608-36010-	2D2
		2K1
	35615-36010-	2A2
		2B1
	35617-36010-	2B1
	-36020-	2C1
		2M1
	35621-36010-	2D2
		2L1
	35623-36010-	2F2
	35631-36010-	2A2
	35632-36010-	2D2
		2M1
	-36020-	2F2
	35633-36010-	2D2
		2M1
	-36020-	2B2
		2M1
	-36030-	2F2
	35634-36010-	2B2
		2M1
	-36020-	2B2
	-36040-	2B2
	-36050-	2B2
	35651-36010-	2B2
	35654-36010-	2B2
	35671-36010-	2F2
	35672-36010-	2B2
	35675-36010-	2B2
B		2L1
	-36020-	2B2
	-36030-	2B2
	-36040-	2B2
	35676-36010-	2D2

B15

LAND CRUISER Station Wagon U. S. A.

PRODUCTION FRAME NUMBER REFERENCE LIST

Applicable Model / Production Date / Assembly Line	8701	8702	8703	8704	8705	8706	8707	8708	8709	8710	8711	8712
FJ62 — TMC Honsya Plant								074039	075376	0077221	0079169	0081050

Applicable Model / Production Date / Assembly Line	8801	8802	8803	8804	8805	8806	8807	8808	8809	8810	8811	8812
FJ62 — TMC Honsya Plant	0083764	0086005	0088379	0090616	0092239	0093499	0094861	0096292	0097372	0098711	0100682	0102775

Applicable Model / Production Date / Assembly Line	8901	8902	8903	8904	8905	8906	8907	8908	8909	8910	8911	8912
FJ62 — TMC Honsya Plant	0104336	0105696	0107184	0109036	0110721	0111941	0113601	0115125	0116480	0117954	0119300	0120955

MARK & ABBREVIATION LIST

B16

(1) Abbreviations Under Heading MODELS in Text

Heading	Mark	Definition
MODELS	··	Among
	,	And
	+	And (Plus)
	—	Excluded (minus)
	#	All series

(2) Abbreviations Under Heading R/P and QTY" in Text

Heading	Mark	Definition
R/P	≠	Old parts number (Old)
	✱	Modified old parts number which has been substituted by a multiple of parts and/or if substituted parts are specified by applicable models or other determining specifications, refer to SUBSTITUTE SUPPLY PARTS LIST (S.S.P.L.) for detailed information. (Old)
	⌐	New main part number of set substitution (New)
	•	Part number to be attached to main part (New)
	X	Number of previously supplied but currently non-supplied parts
QTY	33	Required quantity
	X	Required quantity
	Y	More than 100 units
DESCRIPTION	✱?.✱	Number of old type parts, the supply of which will be discontinued after the lapse of a certain period
	(TRIM ●)	Trim code whose third digit is ●

(3) CHANGES TO TEXT & APPENDICES

Certain codes are used to indicate changes to the text and/or appendix.
These codes appear in the marginal area of the affected page as follows:

CODE	LOCATION	EXPLANATION
C	Text	Changes of Parts Number, Model and Production Date.
B		Data with a changed part number
A		Data with a changed application model
P		Data with a changed year system (beginning end)
N	Text & Appendix	Newly available Toyota Part Number.
S	Text & Appendix	Part application expanded to include other vehicle model(s).

PART NAME	LOCATION
BOLT, STUD (FOR OUTER SHAFT FLANGE)	2K6
BOLT, STUD (FOR REAR AXLE HUB)	2I5
BOLT, STUD (FOR ROCKER SUPPORT)	1D2
BOLT, STUD (FOR STEERING SET)	2E9
BOLT, STUD (FOR VALVE PUSH ROD COVER)	1H1
BOLT, STUD (FOR WATER PUMP COUPLING)	1I2
BOLT, U (FOR FRONT SPRING)	2I9
BOLT, U (FOR REAR SPRING)	2L9
BOLT, UNION	1L4
BOLT, UNION (FOR FUEL FILTER)	1L4
BOLT, UNION (FOR OIL COOLER)	1H2
BOLT, UNION (FOR OIL PUMP OUTLET PIPE)	1F2
BOOSTER ASSY, BRAKE	2G8
BOOSTER KIT, BRAKE	2G8
BOOT, FRONT DIFFERENTIAL LOCK CYLINDER	2H6
BOOT, MASTER CYLINDER	2E8
BOOT, MASTER CYLINDER NO.1	2E8
BOOT, REAR BRAKE BELLCRANK, LH	2L8
BOOT, REAR BRAKE BELLCRANK, RH	2L8
BOOT, REAR DIFFERENTIAL LOCK CYLINDER	2F5
BOOT, SHIFT LEVER	2A1
BOOT, TRANSFER SHIFT LEVER	3K2
BOX ASSY, CONSOLE, REAR	3E3
BOX SUB-ASSY, FRONT ASH RECEPTACLE	3A7
BOX, FUEL INLET	3I3
BOX, SPEAKER	3M10
BRACE, HOOD LOCK SUPPORT	3A2
BRACE, INSTRUMENT PANEL TO COWL, NO.2	3C2
BRACE, INSTRUMENT PANEL TO COWL, NO.3	3C2
BRACE, INSTRUMENT PANEL TO FLOOR	3C2
BRACE, INSTRUMENT PANEL, NO.1	3C2
BRACKET ASSY, STEERING COLUMN, UPPER	2A7
BRACKET SUB-ASSY, BREAK AWAY W/CAPSULE	2M6
BRACKET SUB-ASSY, CAB MOUNTING, NO.1, LH	3B1
BRACKET SUB-ASSY, CAB MOUNTING, NO.1, RH	3B1
BRACKET SUB-ASSY, CAB MOUNTING, NO.2, LH	3B1
BRACKET SUB-ASSY, CAB MOUNTING, NO.2, RH	3B1
BRACKET SUB-ASSY, CAB MOUNTING, NO.3	3B1
BRACKET SUB-ASSY, CAB MOUNTING, NO.4	3B1
BRACKET SUB-ASSY, CATALYTIC CONVERTER, FRONT	1I3
BRACKET SUB-ASSY, ENGINE FRONT MOUNTING, LH	3E1
BRACKET SUB-ASSY, ENGINE FRONT MOUNTING, RH	3B1
BRACKET SUB-ASSY, OIL FILTER	1G2
BRACKET SUB-ASSY, REAR SEAT BACK HOLDER	3E4
BRACKET SUB-ASSY, REAR SEAT CUSHION HOLDER	3D6
BRACKET SUB-ASSY, SPEAKER	3M10
BRACKET SUB-ASSY, SPRING, NO.1	2I9
BRACKET, ACCELERATOR CONTROL CABLE	3M7
BRACKET, ACCELERATOR PEDAL STOPPER	3J2
BRACKET, AIR PUMP	1H3
BRACKET, AIR SWITCHING VALVE	1J3
BRACKET, ALTERNATOR, NO.1	1K1
BRACKET, BODY REAR END MOUNTING	3B1
BRACKET, BOX SUPPORT	3E3
BRACKET, CABLE SUPPORT	2B8
BRACKET, CATALYTIC CONVERTOR SUPPORT	1E3
BRACKET, CENTER FLOOR HEAT INSULATOR, NO.1	3A3
BRACKET, CHARCOAL CANISTER BASE	3K7
BRACKET, COMPRESSOR MOUNTING, NO.1	3C12
BRACKET, CONSOLE BOX MOUNTING, NO.2	3F3
BRACKET, CONSOLE BOX MOUNTING, NO.3	3F3
BRACKET, COOLER CONDENSER, NO.1	3J3
BRACKET, DECK BOARD, REAR	3G4
BRACKET, DIFFERENTIAL LOCK	2A6
BRACKET, DIFFERENTIAL LOCK CABLE	2B6

PART NAME	LOCATION
BRACKET, DIFFERENTIAL LOCK CONTROL, FRONT NO.1	2B6
BRACKET, DIFFERENTIAL LOCK CONTROL, FRONT NO.2	2B6
BRACKET, DIFFERENTIAL LOCK CONTROL, REAR NO.1	2B6
BRACKET, EGR VACUUM MODULATOR	1A5
BRACKET, ENGINE CONTROL COMPUTER	3M9
BRACKET, ENGINE CONTROL COMPUTER, NO.2	3M9
BRACKET, ENGINE CONTROL COMPUTER, NO.3	3M9
BRACKET, ENGINE MOUNTING, FRONT NO.1 RH	1K1
BRACKET, EXHAUST PIPE NO.1 SUPPORT	1E3
BRACKET, EXHAUST PIPE SUPPORT, NO.2	1E3
BRACKET, FAN BELT ADJUSTING BAR	1K2
BRACKET, FLEXIBLE HOSE, NO.5	2C9
BRACKET, FRONT FLEXIBLE HOSE	2C9
BRACKET, FRONT FLOOR HARNESS	3A3
BRACKET, FRONT INNER SEAT TRACK, LOWER FRONT LH	3G6
BRACKET, FRONT INNER SEAT TRACK, LOWER FRONT RH	3F6
BRACKET, FRONT SEAT, REAR	3J2
BRACKET, FRONT SHOCK ABSORBER, UPPER LH	2I9
BRACKET, FRONT SHOCK ABSORBER, UPPER RH	2I9
BRACKET, FUEL HOSE PROTECTOR, REAR	3A3
BRACKET, FUEL PUMP	1K4
BRACKET, FUEL TUBE CLAMP	3M2
BRACKET, HAND BRAKE SIGNAL SWITCH	3J9
BRACKET, HEADLAMP CLEANER WASHER	3H10
BRACKET, INSTRUMENT PAD, NO.2	3C2
BRACKET, INSTRUMENT PANEL	3C2
BRACKET, INSTRUMENT PANEL SIDE, NO.2 LH	3G3
BRACKET, INSTRUMENT PANEL SIDE, NO.2 RH	3G3
BRACKET, JACK CARRIER	3G7
BRACKET, LOAD SENSING SHACKLE, NO.1	2D9
BRACKET, LOAD SENSING VALVE	2C9
BRACKET, PARKING LOCK PAWL	2J3
BRACKET, PUMP	2G7
BRACKET, RADIATOR RESERVE TANK	1M2
BRACKET, RADIATOR, NO.1	1L2
BRACKET, RADIATOR, NO.2	1L2
BRACKET, RADIATOR, NO.3	1M2
BRACKET, RADIATOR, NO.4	1M2
BRACKET, RADIO MOUNTING, NO.1	3C2
BRACKET, RADIO MOUNTING, NO.2	3C2
BRACKET, RADIO, NO.1	3K10
BRACKET, RADIO, NO.2	3K10
BRACKET, REAR BRAKE BELLCRANK	2L8
BRACKET, REAR FLOOR HEAT INSULATOR, NO.1	3A3
BRACKET, RECEIVER TANK, NO.1	3M11
BRACKET, RELAY, NO.2	3K9
BRACKET, SPRING, NO.2, LH	2I9
BRACKET, SPRING, NO.2, RH	2I9
BRACKET, SPRING, NO.3, LH	2M9
BRACKET, SPRING, NO.3, RH	2M9
BRACKET, SPRING, NO.4	2M9
BRACKET, STABILIZER (FOR REAR)	2A10
BRACKET, STABILIZER, NO.2	2J9
BRACKET, STEERING DAMPER	2B7
BRACKET, TAIL PIPE (FOR FRONT)	1E3
BRACKET, TAIL PIPE (FOR REAR)	1E3
BRACKET, THROTTLE CONTROL CABLE	3M7
BRACKET, VACUUM CHECK VALVE	2G8
BRACKET, VACUUM CONTROL VALVE, NO.2	1M3
BREAKER ASSY, WIRING CIRCUIT, NO.1	3H9
BRUSH, ALTERNATOR	1F4
BULB (FOR FRONT TURN SIGNAL LAMP)	3C8
BULB (FOR GLOVE BOX)	3J3
BULB (FOR LICENSE PLATE LAMP)	3H8
BULB (FOR PARKING AND CLEARANCE LAMP)	3D8

PART NAME	LOCATION
RING, FREE WHEEL HUB	2L6
RING, HOG, SMALL (FOR FRONT SEAT)	3E6
RING, HOLE SNAP (FOR BRAKE NO.1 FLANGE)	2D2
RING, HOLE SNAP (FOR BRAKE PISTON RETURN SPRING)	2D2
RING, HOLE SNAP (FOR FRONT PLANETARY RING GEAR)	2H2
RING, HOLE SNAP (FOR OUTPUT SHAFT)	2G2
RING, HOLE SNAP (FOR OVERDRIVE BRAKE FLANGE)	2L1
RING, HOLE SNAP (FOR OVERDRIVE BRAKE RETURN SPRING)	2K1
RING, HOLE SNAP (FOR OVERDRIVE CASE)	2K1
RING, HOLE SNAP (FOR OVERDRIVE CLUTCH FLANGE)	2L1
RING, HOLE SNAP (FOR OVERDRIVE PLANETARY RING GEAR)	2L1
RING, HOLE SNAP (FOR PISTON PIN)	1A2
RING, HOLE SNAP (FOR POWER STEERING GEAR HOUSING)	2K7
RING, HOLE SNAP (FOR REAR CLUTCH FLANGE)	2B2
RING, HOLE SNAP (FOR REAR CLUTCH HUB)	2B2
RING, HOLE SNAP (FOR REAR PLANETARY RING GEAR FLANGE)	2H2
RING, HOLE SNAP (FOR SPIDER BEARING)	2L4
RING, HOLE SNAP (FOR STEERING MAIN SHAFT)	2A7
RING, HOLE SNAP (FOR VANE PUMP HOUSING OIL SEAL)	2D7
RING, HOLE SNAP (FOR 1 WAY CLUTCH)	2H2
RING, HOLE SNAP (FOR 1ST & REVERSE BRAKE FLANGE)	2L1
RING, HORN CONTACT	2F2
RING, INPUT SHAFT OIL SEAL	2H7
RING, INTERMEDIATE SHAFT OIL SEAL	2C2
RING, O	2H2
RING, O (FOR ADJUSTER PLUG)	1H2
RING, O (FOR AUTOMATIC TRANSMISSION CASE)	2K7
RING, O (FOR BRAKE PISTON INNER)	2H1
RING, O (FOR BRAKE PISTON OUTER)	2D2
RING, O (FOR BREATHER PLUG)	2D2
RING, O (FOR C-1 ACCUMULATOR PISTON)	2H1
RING, O (FOR C-2 ACCUMULATOR PISTON)	2C3
RING, O (FOR CENTER SUPPORT)	2C3
RING, O (FOR DIAPHRAGM PUSH ROD)	2E2
RING, O (FOR FLOW CONTROL SPRING SEAT)	2H4
RING, O (FOR FRONT CLUTCH PISTON)	2F7
RING, O (FOR FRONT OIL PUMP BODY)	2A2
RING, O (FOR FUEL INJECTOR)	2F1
RING, O (FOR FUEL PRESSURE REGULATOR)	1K4
RING, O (FOR OIL COOLER TUBE UNION)	1L4
RING, O (FOR OVERDRIVE BRAKE ACCUMULATOR PISTON)	2K3
RING, O (FOR OVERDRIVE BRAKE PISTON)	2M2
RING, O (FOR OVERDRIVE CASE)	2L1
RING, O (FOR OVERDRIVE DIRECT CLUTCH PISTON)	2K1
RING, O (FOR POWER PISTON NUT)	2K1
RING, O (FOR POWER STEERING GEAR HOUSING)	2K7
RING, O (FOR POWER STEERING SUCTION PORT)	2K7
RING, O (FOR PRESSURE PORT UNION)	2E7
RING, O (FOR PUMP HOUSING)	2E7
RING, O (FOR REAR CLUTCH PISTON OUTER)	2D7
RING, O (FOR REAR CLUTCH PISTON)	2B2
RING, O (FOR REAR SIDE PLATE)	2B2
RING, O (FOR RESERVOIR TUBE)	2A2
RING, O (FOR SIDE COVER)	2F7
RING, O (FOR STEERING MAIN SHAFT)	2E8
RING, O (FOR TRANSFER IDLER SHAFT)	2K7
RING, O (FOR TRANSFER INPUT GEAR)	2A7
RING, O (FOR TRANSMISSION OIL FILLER TUBE)	2D4
RING, O (FOR VALVE HOUSING)	2D4
RING, O (FOR VANE PUMP HOUSING)	2I1
RING, O (FOR 1ST & REVERSE BRAKE)	2J7
RING, OIL SEAL (FOR CENTER SUPPORT)	2D7
RING, OIL SEAL (FOR OVERDRIVE PLANETARY RING GEAR FLANGE)	2F2
RING, SEALED BEAM MOUNTING, NO.1 LH	2E2
RING, SEALED BEAM MOUNTING, NO.1 RH	2L1
RING, SEALED BEAM MOUNTING, NO.2 LH	3B8
RING, SEALED BEAM MOUNTING, NO.2 RH	3A8
RING, SEALED BEAM RETAINING, NO.1 LH	3B8
RING, SEALED BEAM RETAINING, NO.1 RH	3A8
RING, SET (FOR FRONT DISC BRAKE PISTON)	2H8
RING, SET (FOR RELAY ROD)	2L7
RING, SET(FOR TIE ROD END DUST SEAL)	2L7
RING, SHAFT SNAP (FOR FRONT CLUTCH PISTON RETURN SPRING)	A2
RING, SHAFT SNAP (FOR FRONT DOOR WINDOW REGULATOR HANDLE)	3A5
RING, SHAFT SNAP (FOR FRONT DRIVE INNER SHAFT INNER)	2J6
RING, SHAFT SNAP (FOR FRONT DRIVE INNER SHAFT OUTER)	2J6
RING, SHAFT SNAP (FOR FRONT PLANETARY SUN GEAR)	2E2
RING, SHAFT SNAP (FOR OVERDRIVE DIRECT CLUTCH)	2L1
RING, SHAFT SNAP (FOR REAR PLANETARY RING GEAR)	2H2
RING, SHAFT SNAP (FOR STEERING MAIN SHAFT)	2M6
RING, SHAFT SNAP (FOR TRANSFER OUTPUT SHAFT)	2E4
RING, SHAFT SNAP (FOR VANE PUMP SHAFT)	2E7
RING, SHAFT SNAP (FOR 1ST & REVERSE BRAKE RETURN SPRING)	2F2
RING, SHAFT SNAP(FOR REAR DOOR WINDOW REGULATOR HANDLE)	3H5
RING, SNAP	1E4
RING, SNAP (FOR BRAKE MASTER CYLINDER SIDE)	2D8
RING, SNAP (FOR FLOW CONTROL VALVE)	2E7
RING, SNAP (FOR GOVERNOR VALVE SHAFT NO.2)	2J2
RING, SNAP (FOR PARKING LOCK PAWL SHAFT)	2J3
RING, SNAP (FOR STEERING COLUMN TUBE)	2A7
RING, SNAP (FOR TRANSFER OUTPUT FRONT BEARING)	2E4
RING, SNAP CAMSHAFT (FOR TIMING GEAR)	1C2
RING, SPACE	1E4
RING, O (FOR ANT SPEEDOMETER SHAFT SLEEVE)	2J1
RING, O (FOR FRONT DIFFERENTIAL LOCK CYLINDER)	2G6
ROD ASSY, ACCELERATOR PEDAL	3M7
ROD ASSY, STEERING RELAY	2L7
ROD ASSY, TIE	2M7
ROD SUB-ASSY, CONNECTING	1A2
ROD SUB-ASSY, DIFFERENTIAL LOCK CABLE LINK	2A6
ROD SUB-ASSY, HIGH & LOW SHIFT	2F4
ROD SUB-ASSY, JACK HANDLE	1A1
ROD SUB-ASSY, PARKING LOCK	2J3
ROD, DETENT	2B1
ROD, DIFFERENTIAL LOCK, NO.1	2A6
ROD, DIFFERENTIAL LOCK, NO.2	2A6
ROD, HOOD SUPPORT	3L1
ROD, REAR SEAT BACK LOCK	3G6
ROD, SUB-ASSY, BACK DOOR LOCK REMOTE CONTROL	3M5
ROD, TRANSMISSION CONTROL (FOR FLOOR SHIFT)	2B1
ROD, VALVE PUSH	1D2
ROD, WINDSHIELD WIPER LINK, NO.1	3A10
ROD, WIPER LINK, NO.2	3A10
ROLLER, STARTER CLUTCH	1H4
ROTOR ASSY, ALTERNATOR	1E4
ROTOR SUB-ASSY, DISTRIBUTOR	1D4
ROTOR SUB-ASSY, MAGNET CLUTCH	3B12
ROTOR, VANE PUMP	2E7
RUBBER, CUSHION (FOR FUEL PUMP)	1K4
RUN, FRONT DOOR GLASS	3K4
RUN, FRONT DOOR GLASS, NO.2	3K4
RUN, REAR DOOR GLASS	3E5
SCREW, CROSSSHAFT ADJUSTING	2L7
SCREW, DASH POT ADJUSTING	1J4
SCREW, HEADLAMP ADJUSTING	3A8
SCREW, REAR AXLE BEARING LOCK NUT	2J5
SCREW, TAIL GATE ASSY	3L5
SCREW, VALVE ADJUSTING	1D2
SEAL ASSY, SHAFT	3C12

	PART NUMBER	LOCATION
B	35676-36010-	2L1
	-36020-	2D2
	-36030-	2D2
	-36040-	2D2
	-36070-	2F2
	-36080-	2F2
	-36090-	2F2
	35701-60010-	2B2
	35706-60011-	2E2
	35709-36010-	2E2
	35712-36010-	2C2
		2L1
	35713-36011-	2G2
	35719-60010-	2E2
	35720-60010-	2G2
	35735-36010-	2J2
	35737-36010-	2G2
	35738-60010-	2H2
	35743-60010-	2H2
	35748-36010-	2H2
	35760-60010-	2H2
	35761-60010-	2H2
	35762-60010-	2H2
	35785-36010-	2E2
		2M1
	35789-36010-	2M1
	-36020-	2B2
		2M1
	-36040-	2F1
	-36050-	2F1
	-36060-	2F1
	-36070-	2M1
	-36090-	2A2
		2B2
		2H2
	-36100-	2C2
	-36110-	2C2
	-36120-	2C2
	-36130-	2C2
	-36140-	2C2
	35790-36010-	2H2
	35791-36010-	2L1
	35847-36010-	2H3
	35893-36010-	2H3
	35906-60050-	2B1
	35921-60030-	2B1
	35971-60030-	2B1
	35972-60020-	2B1
	35974-60030-	2B1
	35975-60020-	2B1
	-60030-	2B1
	35976-60020-	2B1
	35989-60020-	2C1
	36103-60160-	2A4
	36110-6A790-	2M3
	36119-60010-	2B4
	-60020-	2D4
	-60030-	2B4
	36122-60040-	2B4
	36124-60020-	2B4
	36128-60021-	2B4
	36132-60020-	2B4
	36134-60020-	2B4
	36142-60030-	2B4

	PART NUMBER	LOCATION
	36143-60020-	2B4
	-60030-	2B4
	36144-60020-	2B4
	36152-60030-	2B4
	36164-60040-	2H4
	36212-60090-	2D4
	36215-60030-	2D4
	36221-60090-	2D4
	36222-60020-	2D4
P	36225-60050-	2D4
	36231-60050-	2D4
B	36234-60031-	2E4
B	36235-60020-	2E4
	36237-60020-	2E4
	36241-60080-	2D4
P	36242-60130-	2E4
P		
	36251-60030-	2E4
S	36303-60130-	2F4
S	36307-60040-	2F4
B	36308-60100-	2F4
B	36311-60041-	2F4
	36312-60040-	2F4
	36313-60070-	2G4
	36314-60040-	2G4
B	36324-60050-	2G4
B	36327-60031-	2G4
B	36337-60080-	2H4
	36338-60030-	2G4
	36343-60010-	2H4
	-60040-	2H4
	36360-60220-	2G4
B	36362-60020-	2G4
B		
	36369-60030-	3M6
	36409-60040-	2J4
	36410-60030-	2H4
B	36416-36010-	2H4
B	36422-36010-	2H4
	36482-60100-	2J4
	36486-60010-	2H4
	36726-60020-	2E4
	37110-60410-	2K4
P	37140-60200-	2K4
P	37302-36020-	2L4
	-60050-	2L4
B	37305-36020-	2L4
B	-60010-	2L4
	37315-36020-	2L4
	37402-10020-	2A7
	-36080-	2L4
B	38628-60010-	2C1
S	41101-60041-	2B5
S		2E6
P	-60080-	2B5
P		2E6
	41110-60110-	2B5
		2E6
N	-60111-	2B5
N		2E6
P	-60230-	2B5
P		2E6
N	-60231-	2B5
N		2E6
	41114-60010-	2C5
		2E6


	PART NUMBER	LOCATION
	41201-69166-	2C5
		2E6
	41204-60030-	2C5
		2E6
	41214-26010-	2C5
		2E6
	41226-35010-	2C5
		2E6
P	41231-60020-	2C5
P		2E6
B	-60030-	2C5
B		2F6
	41252-35010-	2C5
		2F6
P	41301-60020-	2D5
P		2H6
S	-60021-	2D5
S		2H6
B	41311-60070-	2D5
B		2H6
	41315-30010-	2D5
		2F6
	41316-30010-	2D5
B		2G6
B	41331-25010-	2D5
B		2F6
	-35020-	2D5
		2F6
	-60020-	2D5
		2F6
B	41341-25010-	2E5
B		2F6
	-55012-	2D5
		2F6
B	41342-55010-	2E5
B		2F6
	-60010-	2E5
		2F6
	-60020-	2E5
		2F6
P	41343-55010-	2E5
P		2F6
	-60010-	2E5
B	-60030-	2E5
B		2G6
	41344-35010-	2E5
	41345-35010-	2E5
	41346-35010-	2E5
	41347-35010-	2E5
	41348-35010-	2E5
B	41351-25010-	2E5
B		2G6
	-35011-	2E5
		2G6
	41361-60010-	2E5
		2G6
	-60020-	2E5
		2G6
	-60030-	2E5
		2G6
	-60040-	2E5
		2G6
	41375-60010-	2E5
		2G6

	PART NUMBER	LOCATION
	41451-60010-	2E5
		2G6
P	41453-60010-	2E5
P		2G6
S	-60011-	2E5
S		2G6
	41456-60010-	2E5
		2G6
	41460-60010-	2E5
		2G6
	41464-60010-	2F5
		2J6
	41465-60010-	2F5
		2G6
	41466-60010-	2F5
		2H6
	41467-60020-	2F5
	41991-60030-	2F5
	-60040-	2F5
	42109-60050-	2F5
	42110-60193-	2F5
	-60201-	2F5
	42137-55010-	2F5
	42181-36010-	2F5
		2H6
P	-60030-	2F5
P	42183-35010-	2F5
S	-60060-	2F9
	42306-60051-	2G5
P	42311-60060-	2I5
P		2J6
N	-60061-	2I5
N	-60080-	2I5
		2J6
P	42312-60050-	2I5
	-60050-	2J6
N	-60051-	2I5
N	-60060-	2I5
		2K6
	42323-60010-	2K6
	-60020-	2F9
	42325-55010-	2I5
A	42411-60011-	2I5
	42419-60011-	2J5
A	42420-60110-	2J5
	42427-60021-	2J5
	42428-60011-	2J5
	42431-60020-	2I5
	42441-30010-	2J5
	42443-55020-	2J5
	42506-60010-	2A6
	42511-60010-	2A6
	42512-60010-	2A6
	42513-60010-	2A6
	42514-60010-	2A6
	42515-60010-	2A6
	42516-60010-	2A6
	42517-60010-	2A6
	42518-60010-	2A6
	42521-60010-	2A6
	42522-60010-	2A6
	42523-60010-	2A6
	42531-60030-	2A6
	42532-60030-	2B6
	42533-60010-	2B6
	42534-60030-	2B6
	42535-60010-	2B6
	42537-60010-	2B6
	-60020-	2B6

	PART NUMBER	LOCATION
	42538-60010-	2B6
	42540-60010-	2B6
	42541-60010-	2B6
	42550-60010-	2B6
	42560-60011-	2B6
	42562-60010-	2B6
A	42601-60221-	2K5
	42603-35080-	2K5
	-60012-	2K5
	-60052-	2K5
B	42652-60060-	2L5
	43110-60144-	2H6
	-60211-	2H6
	43204-60020-	2E9
	43209-60011-	2H6
	43211-60050-	2E9
	43212-60050-	2E9
	43232-35010-	2E9
	43233-60011-	2E9
	43234-60011-	2F9
	43235-60010-	2F9
	43236-60010-	2F9
	43237-60030-	2F9
	43238-60010-	2F9
	43239-60020-	2F9
P	43401-60012-	2F9
S	-60060-	2F9
	43405-60016-	2J6
P	43411-60020-	2J6
N	-60060-	2J6
	43412-35010-	2J6
	-60050-	2J6
	43422-60020-	2J5
		2K6
	43435-60011-	2F9
	43436-60011-	2F9
	43502-60020-	2K6
	43509-60015-	2K6
	43512-60040-	2L6
	43521-60011-	2L6
	43530-69017-	2L6
	43531-60010-	2L6
	43532-60010-	2L5
	44104-22011-	2J7
	44105-30060-	2J7
	44107-60060-	2K7
	44108-60010-	2K7
	44110-60160-	2K7
	44111-60040-	2K7
	44115-30040-	2K7
	44116-30040-	2K7
	44120-60130-	2L7
	44142-22010-	2K7
	-22020-	2L7
	44302-14010-	2D7
	44304-60021-	2D7
	44305-30020-	2D7
	44306-60070-	2F7
	44308-35030-	2D7
	44311-60010-	2D7
	44312-12010-	2E7
	44313-12010-	2E7
	-12020-	2E7
	-12030-	2E7

	PART NUMBER	LOCATION
	44313-12040-	2E7
	-12050-	2E7
	-22040-	2E7
	-22050-	2E7
	-22060-	2E7
	-22070-	2E7
	-22080-	2E7
	44320-60090-	2E7
	44325-12010-	2E7
	-12020-	2E7
	-12030-	2E7
	-12040-	2E7
	-12050-	2E7
	44330-30100-	2E7
	-30110-	2E7
	-30120-	2E7
	-30130-	2E7
	-30140-	2E7
	-30150-	2E7
	44341-12010-	2F7
	44343-12040-	2F7
	44345-12010-	2F7
	-12020-	2F7
	-12030-	2F7
	-12040-	2F7
	-12050-	2F7
	44391-14010-	2F7
	44410-60170-	2G7
	44416-60061-	2G7
	44443-60050-	2G7
	44446-60020-	2G7
	44605-30350-	2G8
	44608-17090-	2G8
	44609-17090-	2G8
	44610-60530-	2G8
	44624-20810-	2G8
	44628-20810-	2G8
	44632-27290-	2G8
	44633-20811-	2G8
	44637-20810-	2G8
	44645-10080-	2G8
	44651-20810-	2G8
	44673-20810-	2G8
	44730-24020-	2G8
	44758-60030-	2G8
	44772-60050-	2G8
	44773-60030-	2G8
	44785-35020-	2G9
	44786-60040-	2B9
	45025-60020-	2M6
P	45044-69055-	2L7
N	-69056-	2L7
A	45045-69045-	2L7
S	-69046-	2L7
P	45046-69115-	2L7
N	-69116-	2L7
P	45047-69065-	2L7
N	-69066-	2L7
	45081-22020-	2M6
	45082-60010-	2M6
P	45100-60140-03	2H7
P	-60140-06	2H7
	45105-60040-	2H7
P	45130-60101-03	2H7

Station Wagon (5709–5991)

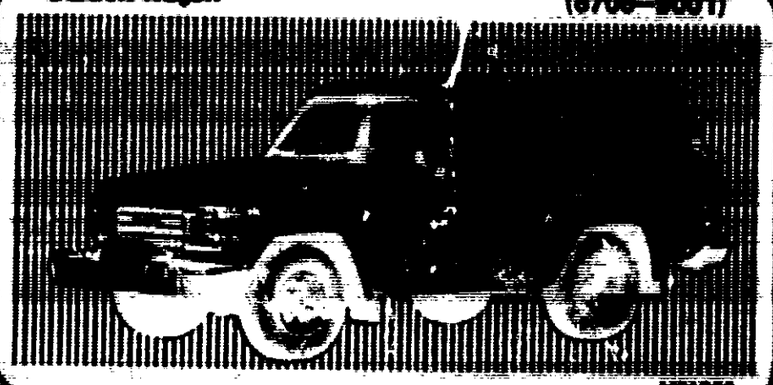

MP1555

PART NAME	LOCATION
BULB (FOR REAR COMBINATION LAMP)	3F8
BULB, COMBINATION METER, NO.1	3D9
BULB, FRONT MARKER LAMP	3E8
BULB, HEATER CONTROL INDICATOR LAMP	3E9
BULB, INDICATOR LAMP	3E9
BULB, REAR SIDE MARKER LAMP	3I8
BULB, ROOM LAMP, NO.1	3J8
BUMPER SUB-ASSY, REAR SPRING	2M9
BUMPER, FRONT SPRING, NO.1	2I9
BUMPER, HOOD, FRONT	3J1
BUMPER, HOOD, REAR	3J1
BUSH (FOR ACCELERATOR LINK ROD)	3M7
BUSH (FOR ALTERNATOR RECTIFIER END FRAME)	1E4
BUSH (FOR BRAKE PEDAL)	2C8
BUSH (FOR CONNECTING ROD SMALL END)	1A2
BUSH (FOR CONTROL SHAFT LEVER)	2B1
BUSH (FOR CONTROL SHAFT)	2A1
BUSH (FOR DIFFERENTIAL LOCK CABLE LINK SHAFT)	2B6
BUSH (FOR DIFFERENTIAL LOCK CONTROL SHAFT)	2B6
BUSH (FOR FRONT DIFFERENTIAL LOCK CYLINDER)	2J6
BUSH (FOR FRONT SHOCK ABSORBER)	2I9
BUSH (FOR FRONT SPRING PIN)	2H9
BUSH (FOR FRONT SPRING SHACKLE)	2H9
BUSH (FOR LOAD SENSING SPRING SHACKLE)	2D9
BUSH (FOR PARKING BRAKE EQUALIZER)	2A8
BUSH (FOR REAR DIFFERENTIAL LOCK CYLINDER LVER)	2F5
BUSH (FOR REAR SHOCK ABSORBER)	2A10
BUSH (FOR REAR SPRING PIN)	2L9
BUSH (FOR REAR SPRING SHACKLE LOWER)	2L9
BUSH (FOR REAR SPRING SHACKLE UPPER)	2L9
BUSH (FOR STEERING KNUCKLE)	2E9
BUSH & BOOT KIT, LOAD SENSING SPRING	2B9
BUSH, BACK DOOR LOWER INSIDE HANDLE	3M5
BUSH, FRONT STABILIZER BAR, NO.1	2J9
BUSH, SPEEDOMETER DRIVE CABLE	3D9
BUSH, STABILIZER (FOR REAR)	2A10
BUSH, TRANSFER SHIFT LEVER	2G4
BUSH, VALVE GUIDE EXHAUST	1G1
BUSH, VALVE GUIDE INTAKE	1F1
BUSH, WINDSHIELD WASHER JAR	3D10
BUTTON ASSY, HORN	2H7
BUTTON, DOOR LOCKING (FOR BACK DOOR)	3M5
BUTTON, SHIFT LEVER KNOB	2A1
CABLE ASSY, ACCELERATOR CONTROL	3M7
CABLE ASSY, DIFFERENTIAL LOCK, FRONT	2B6
CABLE ASSY, DIFFERENTIAL LOCK, REAR	2B6
CABLE ASSY, HOOD LOCK CONTROL	3L1
CABLE ASSY, PARKING BRAKE, NO.1	2A8
CABLE ASSY, SPEEDOMETER DRIVE, NO.1	3D9
CABLE ASSY, THROTTLE	2J3
CABLE ASSY, THROTTLE CONTROL	3M7
CABLE SUB-ASSY, AIR INLET DAMPER CONTROL	3J11
CABLE SUB-ASSY, AIRMIX DAMPER CONTROL	3J11
CABLE SUB-ASSY, DEFROSTER DAMPER CONTROL	3J11
CABLE SUB-ASSY, FUEL LID LOCK CONTROL	3J7
CABLE SUB-ASSY, WATER VALVE CONTROL	3J11
CABLE, BATTERY TO GROUND	3K8
CABLE, BATTERY TO STARTER (FOR BATTERY TO MAIN SWITCH)	3K8
CABLE, BOND, NO.1	3M8
CAM ASSY, THROTTLE VALVE	2G3
CAMSHAFT	1C2
CANISTER ASSY, CHARCOAL	3K7
CAP	3G11
CAP (FOR FLOOR SHIFT POSITION INDICATOR LAMP)	2A1
CAP ASSY, BRAKE MASTER CYLINDER RESERVOIR FILLER	2E8

PART NAME	LOCATION
CAP ASSY, FUEL TANK	3K7
CAP ASSY, REAR WASHER	3F10
CAP ASSY, WINDSHIELD WASHER	3D10
CAP SUB-ASSY, AIR CLEANER	1F3
CAP SUB-ASSY, DISTRIBUTOR	1D4
CAP SUB-ASSY, OIL FILLER	1G1
CAP SUB-ASSY, RADIATOR	1L2
CAP SUB-ASSY, RESERVE TANK	1L2
CAP SUB-ASSY, VANE PUMP OIL RESERVOIR	2D7
CAP, BLEEDER PLUG (FOR DRUM BRAKE, REAR)	2K8
CAP, BLEEDER PLUG (FOR FRONT DISC BRAKE)	2H8
CAP, BLEEDER PLUG (FOR LSPV)	2B9
CAP, BLIND	3C12
CAP, CABLE ADJUSTING	2B8
CAP, COOLER COMPRESSOR SERVICE VALVE	3C12
CAP, HEADLAMP CLEANER WASHER JAR	3G10
CAP, INSTRUMENT PANEL SAFETY PAD	3C2
CAP, REAR WIPER PIVOT, NO.1	3C10
CAP, SHIELD	3B10
CAP, STEERING KNUCKLE BEARING	2E9
CARPET ASSY, FLOOR, REAR	3B3
CARPET ASSY, FRONT FLOOR, FRONT	3B3
CARPET ASSY, REAR FLOOR	3B3
CARRIER ASSY, DIFFERENTIAL, FRONT	2E6
CARRIER ASSY, DIFFERENTIAL, REAR	2B5
CARRIER ASSY, SPARE WHEEL	3D1
CARRIER SUB-ASSY, DIFFERENTIAL, FRONT	2E6
CARRIER SUB-ASSY, DIFFERENTIAL, REAR	2B5
CARRIER, JACK	3G7
CASE SUB-ASSY, AUTOMATIC TRANSMISSION	2G1
CASE SUB-ASSY, DIFFERENTIAL	2D5
CASE SUB-ASSY, OVERDRIVE	2K1
CASE SUB-ASSY, REAR FLOOR PAN RETRACTOR, LH	3M2
CASE SUB-ASSY, REAR FLOOR PAN RETRACTOR, RH	3M2
CASE SUB-ASSY, TRANSFER	2A4
CASE, COMBINATION METER	3D9
CASE, EXHAUST MANIFOLD, NO.2	1C3
CASE, FRONT AXLE DIFFERENTIAL	2H6
CHANNEL SUB-ASSY, FRONT DOOR GLASS, LH	3B5
CHANNEL SUB-ASSY, FRONT DOOR GLASS, RH	3B5
CHANNEL SUB-ASSY, REAR DOOR GLASS, LH	3I5
CHANNEL SUB-ASSY, REAR DOOR GLASS, RH	3I5
CHANNEL, ROOF DRIP SIDE, FRONT LH	3H3
CHANNEL, ROOF DRIP SIDE, FRONT RH	3H3
CHANNEL, ROOF DRIP SIDE, REAR LH	3H3
CHANNEL, ROOF DRIP SIDE, REAR RH	3H3
CHECK ASSY, FRONT DOOR	3K4
CHECK ASSY, REAR DOOR	3E5
CLAMP (FOR AIR CLEANER HOSE, NO.1)	1F3
CLAMP (FOR AIR CLEANER HOSE, NO.2)	1G3
CLAMP (FOR EGR PIPE)	1M4
CLAMP (FOR FRONT AXLE BREATHER HOSE)	2H6
CLAMP (FOR HOOD LOCK CONTROL CABLE)	3L1
CLAMP (FOR REAR AXLE BRATHER HOSE)	2G5
CLAMP OR CLIP (FOR RADIATOR RESERVE TANK HOSE)	1L2
CLAMP OR CLIP (FOR WATER BY-PASS HOSE, NO.2)	1K2
CLAMP OR CLIP, HOSE (FOR OIL COOLER HOSE)	1H2
CLAMP OR CLIP, HOSE (FOR RADIATOR INLET)	1L2
CLAMP OR CLIP, HOSE (FOR RADIATOR OUTLET, NO.1)	1L2
CLAMP OR CLIP, HOSE (FOR RADIATOR OUTLET, NO.2)	1L2
CLAMP OR CLIP, HOSE (FOR WATER BY-PASS HOSE)	1K2
CLAMP OR CLIP, HOSE (FOR WATER BY-PASS HOSE, NO.1)	1J4
CLAMP OR CLIP, HOSE (FOR WATER BY-PASS HOSE, NO.2)	1J4
CLAMP OR CLIP, HOSE (FOR WATER BY-PASS PIPE)	1K2
CLAMP OR CLIP, NO.1 (FOR AIR INJECTION SYSTEM HOSE, NO.1)	1I3

PART NAME	LOCATION
SEAL OIL (FOR ATM SPEEDOMETER SHAFT SLEEVE)	2J1
SEAL OR RING, O (FOR VALVE STEM OIL)	1C2
SEAL SUB-ASSY, STEERING KNUCKLE OIL	2E9
SEAL, BACK DOOR	3K5
SEAL, BACK DOOR HINGE	3L5
SEAL, DUST (FOR FRONT AXLE HUB)	2F9
SEAL, FRONT DOOR FRONT LOWER FRAME, LH	3I4
SEAL, FRONT DOOR FRONT LOWER FRAME, RH	3I4
SEAL, FRONT FENDER APRON TO FRAME, FRONT	3A2
SEAL, FRONT FENDER APRON TO FRAME, REAR	3A2
SEAL, HOOD TO COWL TOP	3F2
SEAL, HOOD TO RADIATOR SUPPORT	3J1
SEAL, MAIN SHAFT LOWER DUST	2A7
SEAL, OIL (FOR ADJUSTER PLUG)	2K7
SEAL, OIL (FOR CRANKSHAFT)	1B2
SEAL, OIL (FOR FRONT AXLE HUB)	2K6
SEAL, OIL (FOR FRONT DIFFERENTIAL CARRIER)	2E6
SEAL, OIL (FOR FRONT OIL PUMP)	2F1
SEAL, OIL (FOR HIGH & LOW SHIFT INNER LEVER)	2F4
SEAL, OIL (FOR MANUAL VALVE LEVER SHAFT)	2J3
SEAL, OIL (FOR OUTPUT SHAFT BEARING FRONT RETAINER)	2B4
SEAL, OIL (FOR OUTPUT SHAFT RETAINER)	2B4
SEAL, OIL (FOR POWER STEERING GEAR HOUSING)	2K7
SEAL, OIL (FOR REAR AXLE HUB)	2J5
SEAL, OIL (FOR REAR AXLE SHAFT OUTER)	2I5
SEAL, OIL (FOR REAR AXLE SHAFT)	2I5
SEAL, OIL (FOR REAR DIFFERENTIAL CARRIER)	2C5
SEAL, OIL (FOR TIMING GEAR COVER)	1J1
SEAL, OIL (FOR TRANSFER CASE)	2A4
SEAL, RADIATOR SUPPORT, UPPER	3A2
SEAL, ROOF CARRIER, NO.1 LH	3L3
SEAL, ROOF CARRIER, NO.1 RH	3L3
SEAL, ROOF CARRIER, NO.2	3L3
SEAL, ROOF CARRIER, NO.3 RH	3M3
SEAL, STEERING KNUCKLE OIL, INNER	2F9
SEAL, STEERING KNUCKLE OIL, OUTER	2F9
SEAL, STEERING LINK DUST, LH	2L7
SEAL, STEERING LINK DUST, RH	2L7
SEAL, TRANSFER LEVER BOOT	3K2
SEAL, TRANSMISSION CASE DUST	2H1
SEAL, TYPE T OIL (FOR FRONT DRIVE SHAFT)	2H6
SEAL, TYPE T OIL (FOR VANE PUMP HOUSING)	2D7
SEAL, TYPE T, OIL (FOR DIAPHRAGM PUSH ROD)	2H4
SEAL,MAIN SHAFT UPPER DUST	2A7
SEALED BEAM UNIT, NO.1	3A8
SEALED BEAM UNIT, NO.2	3A8
SEAT SUB-ASSY, SPRING U BOLT, LH	2L9
SEAT SUB-ASSY, SPRING U BOLT, RH	2L9
SEAT SUB-ASSY, SPRING, LH	2H9
SEAT SUB-ASSY, SPRING, RH	2H9
SEAT, BALL STUD	2M7
SEAT, CHECK VALVE SPRING	2F1
SEAT, FLOW CONTROL SPRING	2F7
SEAT, FRONT CLUTCH PISTON RETURN SPRING	2A2
SEAT, HORN BUTTON CONTACT, NO.1	2H7
SEAT, LOCK UP SIGNAL VALVE SPRING	2A3
SEAT, OVERDRIVE DIRECT CLUTCH RETURN SPRING	2L1
SEAT, PRIMARY REGULATOR VALVE SLEEVE	2C3
SEAT, REAR CLUTCH PISTON RETURN SPRING	2B2
SEAT, STEERING LINK JOINT SPRING	2M7
SEAT, VALVE EXHAUST	1G1
SEAT, VALVE INTAKE	1G1
SEAT, VALVE SPRING	1D2
SEAT, WATER PUMP PULLEY	1I2
SENSOR, E.G.R GAS TEMPERATURE	3K9
SENSOR, MANIFOLD TEMPERATURE	3K9
SENSOR, OXYGEN	3K9
SENSOR, THROTTLE POSITION (FOR E.F.I.)	3L9
SENSOR, WATER TEMPERATURE (FOR E.F.I.)	3L9
SHACKLE KIT, FRONT SPRING	2H9
SHACKLE KIT, REAR SPRING	2L9
SHACKLE, LOAD SENSING SPRING, NO.1	2D9
SHACKLE, LOAD SENSING SPRING, NO.2	2D9
SHADE, REAR COMBINATION LAMP, NO.1 LH	3G8
SHADE, REAR COMBINATION LAMP, NO.1 RH	3F8
SHAFT ASSY, PROPELLER	2K4
SHAFT ASSY, PROPELLER, FRONT	2K4
SHAFT ASSY, STEERING INTERMEDIATE	2A7
SHAFT ASSY, STEERING INTERMEDIATE, NO.2	2A7
SHAFT ASSY, STEERING MAIN	2A7
SHAFT SUB-ASSY, FRONT AXLE OUTER	2J6
SHAFT SUB-ASSY, INPUT	2B2
SHAFT SUB-ASSY, OUTPUT	2G2
SHAFT SUB-ASSY, VALVE ROCKER, NO.1	1D2
SHAFT, BRAKE PEDAL	2C8
SHAFT, CONTROL (FOR FLOOR SHIFT)	2A1
SHAFT, CROSS	2K7
SHAFT, DIFFERENTIAL LOCK CABLE LINK	2B6
SHAFT, DIFFERENTIAL LOCK CONTROL, FRONT	2A6
SHAFT, DIFFERENTIAL LOCK CONTROL, REAR	2B6
SHAFT, DIFFERENTIAL LOCK LINK	2A6
SHAFT, FRONT AXLE, INNER LH	2J6
SHAFT, FRONT AXLE, INNER RH	2J6
SHAFT, FRONT DIFFERENTIAL PINION, NO.1	2F6
SHAFT, GOVERNOR VALVE, NO.1	2J2
SHAFT, GOVERNOR VALVE, NO.2	2J2
SHAFT, INTERMEDIATE	2G2
SHAFT, MANUAL VALVE LEVER	2J3
SHAFT, OIL PUMP	1E2
SHAFT, OIL PUMP DRIVEN	1E2
SHAFT, PARKING LOCK PAWL	2J3
SHAFT, REAR AXLE	2I5
SHAFT, REAR DIFFERENTIAL PINION	2E5
SHAFT, TRANSFER FRONT DRIVE SHIFT	2G4
SHAFT, TRANSFER HIGH AND LOW SHIFT FORK	2G4
SHAFT, TRANSFER IDLER GEAR	2D4
SHAFT, TRANSFER OUTPUT, FRONT	2E4
SHAFT, TRANSFER OUTPUT, REAR	2D4
SHAFT, TRANSFER SHIFT LEVER	2G4
SHAFT, VANE PUMP	2E7
SHEET, HEATER CONTROL NAME	3E9
SHIELD, STEERING COLUMN HOLE	2A7
SHIM (FOR THROTTLE VALVE CAM)	2G3
SHIM (FOR TRANSFER OUTPUT SHAFT)	2D4
SHIM, BACK DOOR STOPPER	3M5
SHIM, STEERING KNUCKLE ADJUST, NO.1	2E9
SHIM, TILT STEERING SUPPORT	2B7
SHOE KIT, REAR BRAKE	2J8
SHOE, FR DRIVE SHIFT LINK LEVER (FOR VACUUM MAGNET TYPE)	2H4
SHROUD SUB-ASSY, FAN	1M2
SILENCER	2I9
SILENCER SUB-ASSY, AIR SUCTION	1I3
SILENCER, FRONT DOOR LOCK LINK	3M4
SILENCER, REAR DOOR LOCK LINK	3G5
SILENCER, REAR SPRING	2M9
SLEEVE SUB-ASSY, SPEEDOMETER SHAFT (FOR ATM)	2J1
SLEEVE, BALL (FOR OIL PUMP OUTLET PIPE)	1F2
SLEEVE, BALL, EGR PIPE, NO.1	1M4
SLEEVE, FRONT DIFFERENTIAL LOCK	2G6
SLEEVE, FRONT DRIVE CLUTCH	2E4

	PART NUMBER	LOCATION
P	45130-60101-06	2H7
	45142-12050-	2H7
	45155-12030-	2H7
	45176-20030-	2H7
	45180-60021-	2H7
	45210-22050-	2A7
	45215-22011-	2A7
	45220-60050-	2A7
	45222-60031-	2A7
	45244-60020-	2A7
	45254-60030-	2A7
	45255-60010-	2A7
	45260-60060-	2A7
	45280-60260-	2A7
	45282-22010-	2A7
P	45286-60130-03	2A7
P	-60130-16	2A7
P	45287-60090-03	2A7
P	-60090-16	2A7
	45289-22020-	2A7
	45292-60030-	2A7
B	45357-22010-	2L7
	45411-60090-	2L7
	45450-69055-	2L7
	45457-60010-	2L7
A	45458-60010-	2L7
	45460-69105-	2M7
	45466-36010-	2M7
	-55020-	2L7
	45473-35010-	2M7
	45475-35010-	2M7
	45611-60040-	2M7
	45612-60040-	2M7
	45636-60090-	2B7
	45637-60060-	2B7
	45700-69025-	2M7
	45721-60030-	2B7
	45804-22010-	2B7
	45813-22010-	2B7
	-22020-	2B7
	-22030-	2B7
	-22040-	2B7
	-22050-	2B7
	45814-22010-	2B7
	-22020-	2B7
	45815-22060-	2B7
	-22070-	2B7
	-22080-	2B7
	-22090-	2B7
	-22100-	2B7
	45817-60010-	2B7
	45819-22011-	2B7
	45821-22010-	2B7
	45870-60030-	2B7
	45890-22050-	2B7
	45897-14010-	2B7
	45898-22010-	2B7
	45899-22020-	2C7
	46210-60040-01	2A8
	-60040-16	2A8
P	-60041-01	2A8
P	-60041-06	2A8
	46217-10020-01	2A8
	-10020-56	2A8
P	46243-60030-01	2A8
P	-60030-16	2A8
	46341-31010-	2A8
	46410-60101-	2A8
	46443-12020-	2B8
	46451-60030-	2B8
	46458-30020-	2B8
	46469-60020-	2B8
P	47043-60050-	2J8
B	-60090-	2J8
P	47044-60010-	2J8
B	-60040-	2J8
	47061-60011-	2K8
	47062-60011-	2K8
	47101-60150-	2C8
	47121-30050-	2C8
	47201-60340-	2D8
	47202-60090-	2D8
B	47218-12040-	2D8
B		2E8
	47231-20010-	2E8
	47234-14010-	2E8
	-60411-	2I9
	47264-30040-	2E8
	47265-20050-	2E8
		2I9
	-20060-	2E8
	47275-22010-	2E8
		2I9
	47299-14010-	2E8
	47312-60610-	2B9
	47313-60180-	2B9
	47314-60180-	2B9
	47315-60340-	2C9
	47316-60310-	2C9
	47322-60490-	2C9
	47323-60041-	2C9
	47324-60021-	2C9
	47325-60100-	2C9
	47326-60110-	2C9
	47341-60071-	2C9
	47343-60021-	2C9
	47354-60030-	2C9
	47355-60030-	2C9
	47371-35020-	2C9
	47447-60010-	2K8
	47449-30020-	2K8
	47491-20011-	2K8
	47509-60010-	2K8
	47547-20030-	2H8
	-60020-	2K8
	47546-60010-	2B9
	47550-60120-	2K8
	47611-60010-	2K8
	47612-60010-	2K8
	47616-60010-	2K8
		2L8
	47624-60010-	2L8
	47625-60010-	2L8
	47626-60010-	2L8
	47628-35020-	2L8
	47633-35020-	2L8
	47643-60010-	2L8
	47644-60010-	2L8
	47655-60010-	2L8
	47703-60031-	2H8
	47704-60031-	2H8
	47730-60021-	2H8
	47731-30020-	2H8
	47732-30010-	2H8
	47748-60010-	2I8
	47750-60021-	2I8
	47786-60020-	2I8
	47787-60020-	2I8
	47910-60060-	2C9
	47920-60020-	2C9
	47931-60020-	2C9
	-60021-	2C9
	47933-60020-	2D9
	47935-35010-	2D9
	47936-35010-	2D9
	47937-60010-	2D9
	48046-60052-	2L9
	48047-60052-	2L9
	48048-60021-	2H9
	48049-60021-	2H9
	48102-60410-	2H9
	48103-60410-	2I9
	-60411-	2I9
	48110-60410-	2H9
	-60411-	2H9
		2I9
	48111-60410-	2H9
	48112-60410-	2H9
	48114-60410-	2I9
	-60411-	2I9
	48147-60410-	2I9
	48202-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2L9
	48203-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48210-60650-	2L9
	-60651-	2L9
	-60660-	2M9
	-60661-	2M9
	48211-60650-	2L9
	-60660-	2L9
	48212-60650-	2L9
	-60660-	2L9
	48214-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2L9
	48215-60650-	2L9
	-60651-	2L9
	-60660-	2L9
	-60661-	2M9
	48217-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48218-60650-	2M9
	-60651-	2M9
	-60660-	2M9
	-60661-	2M9
	48247-60651-	2M9
	48247-60660-	2M9
	48252-26070-	2I9
		2M9
A	48253-15010-	2M9
	48304-60031-	2I9
	48306-60030-	2M9
	48371-60050-	2M9
	48372-23030-	2M9
	48401-60020-	2I9
	48412-60021-	2I9
	48413-60032-	2I9
	48414-60042-	2M9
	48415-60042-	2M9
	48416-60030-	2M9
	48475-60020-	2I9
	48511-69095-	2I9
	48512-60031-	2I9
	48531-69105-	2M9
	48541-69025-	2A10
	48802-60020-	2A10
	48811-60070-	2J9
	48812-60040-	2A10
	48815-20060-	2J9
	-30050-	2A10
	48817-30010-	2J9
	48823-27010-	2A10
		2J9
	48825-60010-	2J9
	-60031-	2A10
	51002-60432-	3A1
	51172-60010-	3C1
	51201-60080-	3A1
	51202-60151-	3A1
	51203-60102-	3A1
	51204-60052-	3A1
	51205-60010-	3A1
	51209-60090-	3A1
	51217-60011-	3A1
	51218-60011-	3A1
	51321-60030-	3A1
	51322-60030-	3B1
	51421-60041-	3B1
	51422-60041-	3B1
	51441-60061-	3C1
	51495-60230-	3C1
	51701-60051-	3B1
	51702-60020-	3B1
	51703-60020-	3B1
	51704-60010-	3B1
	51709-60062-	3B1
	-60110-	3B1
	51707-60030-	3B1
	51709-60020-	3B1
	51900-60100-	3D1
	51961-36040-	3C1
	-60040-	3C1
	51966-60010-	3C1
	52023-60011-	3E1
	52102-90A00-	3G1
	52103-90A00-	3G1
	52106-60010-	3H1
	52107-60010-	3H1
	52111-90A03-	3G1
	52141-60050-	3G1
	52142-60040-	3G1
	52151-60041-	3H1
	52153-60060-	3H1
	52154-60010-	3H1
	52172-60020-	3H1
	52201-25020-	3E1
	-35021-	3E1
	52202-25020-	3E1
	-35021-	3E1
	52203-60030-	3E1
		3F1
	52207-60010-	3E1
	52208-60010-	3E1
	53111-90A06-	3I1
	-90A09-	3I1
	53131-90A09-	3I1
	-90A10-	3I1
	53132-90A09-	3I1
	-90A10-	3I1
	53202-90A04-	3A2
	53203-90A05-	3A2
	53207-90A00-	1G3
	53216-90A03-	3A2
	53217-90A03-	3A2
	-90A05-	3A2
	53292-90A00-	3A2
	53301-90A01-	3J1
	53341-90A00-	3J1
	53381-90A00-	3J1
	53382-30060-	3J1
	-90K01-	3J1
	53383-90A00-	3F2
	53410-90A01-	3L1
	53420-90A01-	3L1
	53440-90A00-	3L1
	53450-90A00-	3L1
	53451-90A00-	3L1
	53452-90351-	3L1
	53510-90A02-	3L1
	53630-90A01-	3L1
	53701-90G90-	3A2
	53702-90A70-	3A2
	53738-90A00-	3A2
	53739-90A00-	3A2
	53801-90G00-	3J1
	53802-90A72-	3J1
	53931-90A06-	3J1
	53016-90A75-	3A2
	-90A76-	3A2
	55073-90A00-	3F2
	55084-90A03-	3J11
	55085-90A01-	3J11
	55086-90A01-	3J11
	55087-90A01-	3J11
	55088-90A01-	3J11
	55089-90A03-	3J11
	55106-90A16-	2C8
	55210-90A12-	3A2
	55225-90A00-	3A2
P	55301-90A76-03	3C2
P	-90A76-05	3C2
	55315-90A00-	3C2
	55341-90A02-	3C2
	55342-90A01-	3C2
	55344-90A01-	3C2
	55351-90A01-	3C2
	55357-90A00-	3C2
	55366-90A02-	3C2
	55368-90A03-	3C2
	55374-90A01-	3C2
	55401-90A05-03	3C2
	-90A05-05	3C2
	-90A07-03	3C2
	-90A07-05	3C2
	55410-90G28-	3C2
P	55412-90A10-03	3C2
P	-90A10-05	3C2
	55416-90A01-	3C2
P	55446-90A02-06	3C2
P	-90A02-13	3C2
	55458-90A00-	3C2
	55477-87001-	3C2
	55499-60010-	2B1
P	55501-90A00-06	3D2
P	-90A00-23	3D2
	55505-90A00-	3D2
	55517-14010-	3D2
P	55521-14050-01	3D2
	55538-22010-	3D2
P	55539-20020-13	3E3
P	-20020-26	3E3
	-32010-01	3D2
P	55545-90A01-03	3D2
P	-90A01-06	3D2
	55547-90A00-	3D2
	55549-90A00-	3D2
	55556-90A01-	3D2
	55561-90A00-	3D2
P	55569-90A00-06	3D2
P	-90A00-23	3D2
	55581-90A06-	3D2
	55650-90A02-	3D2
	55660-90A00-	3D2
	55670-90A02-	3D2
	55700-90G17-	3F2
	55701-90A35-	3F2
	55729-90A01-	3F2
	55780-90A01-	3F2
	55843-90A03-	3J11
	55901-90A01-	3J11
	55905-12070-	3F11
	-22050-	3J11
	-90A00-	3J11
	55907-90A00-	3J11
	55908-90A00-	3J11
	55950-90A01-	3D2
	-90A03-	3D2
	55959-14010-	3E2
P	55961-90A00-03	3E2
P	-90A00-16	3E2
	55970-90A00-	3E2
	55980-90A00-	3E2
	56111-90A02-	3F2
	56121-90A01-	3G2
	-90A05-	3G2
	57104-90A03-	3A2
	57401-90A05-	3J2
	57402-90A05-	3J2

1. MODELS COVERED & CHARACTERISTICS

TOYOTA LAND CRUISER Station Wagon


Model	Engine	Production Period	Characteristic Expressions in Catalog Model Column		Model Name
FJ62LV-PNEA	3F-E	8708–9008	WGV	USA	Station Wagon
FJ62LG-PNEA	"	8708–9001	WGG	"	"
" -PNEK	"	8708–9001	"	CND	"

WGV Station Wagon
WGG Station Wagon G type

USA For United States of America
CND For Canada


ENGINE GROUP (1/2)

1C1 (11-01)

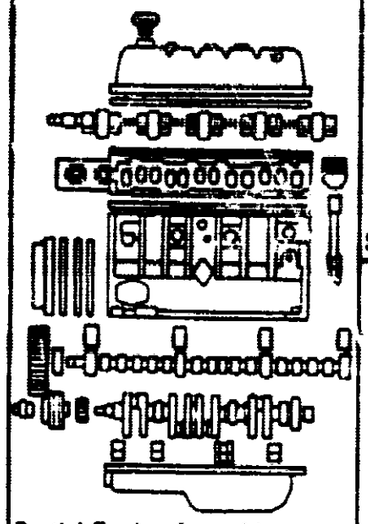

Partial Engine Assembly

1D1 (11-02)

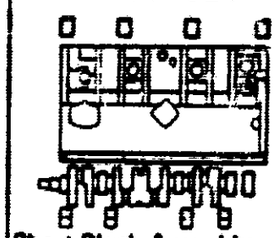


Short Block Assembly

1E1 (11-03)




Overhaul Gasket Kit

1F1 (11-04) 1

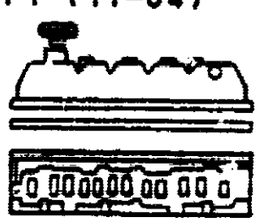


Cylinder Head

1H1 (11-05) 4

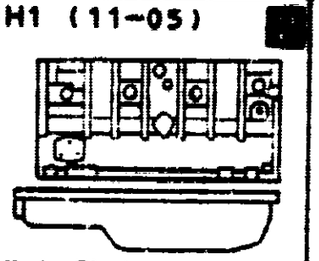


Cylinder Block

1J1 (11-06) 2

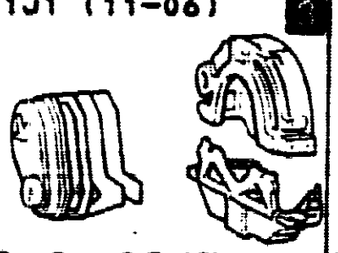


Gear Cover & End Plate

1K1 (11-07) 13

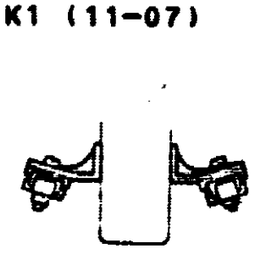


Mounting

1L1 (12-01) 5

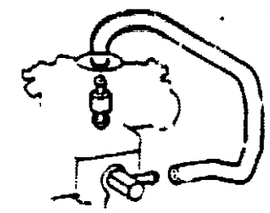


Ventilation Hose

1M1 (13-01) 6

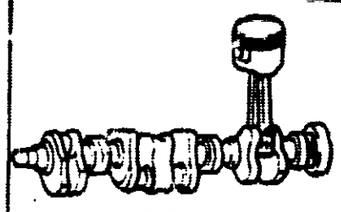


Crankshaft & Piston

1C2 (13-02) 7

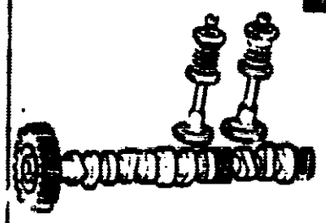


Camshaft & Valve

1E2 (15-01) 8

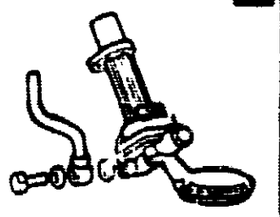


Oil Pump

1G2 (15-02) 9

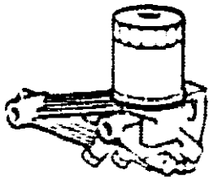


Oil Filter

1H2 (15-03) 10

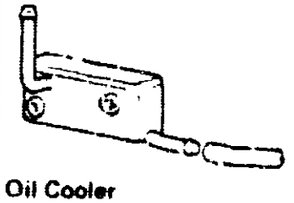


Oil Cooler

1I2 (16-01) 11

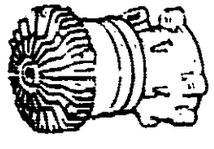


Water Pump

1J2 (16-03) 12

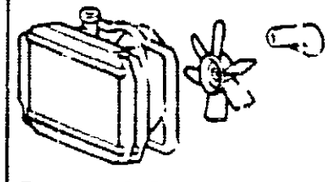


Radiator & Fan

1A3 (16-05) 13

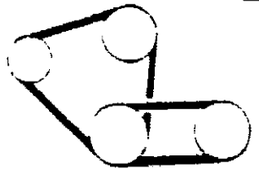


V-Belt

1B3 (17-01) 14

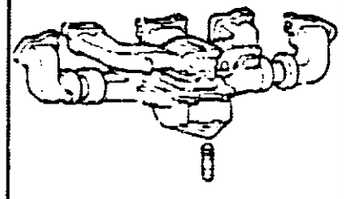


Manifold

1D3 (17-02) 15

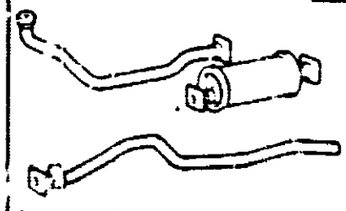

Exhaust Pipe

1F3 (17-03) 16

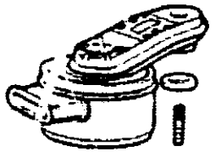

Air Cleaner

1K3 (17-08) 19




Vacuum Piping

1A4 (17-09) 20




Caution Plat

1H3 (17-05) 17

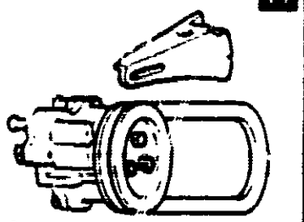



Air Pump

1I3 (17-06) 18

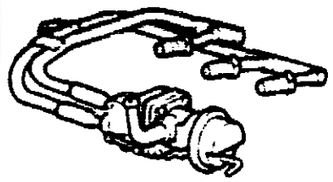

Manifold AI System

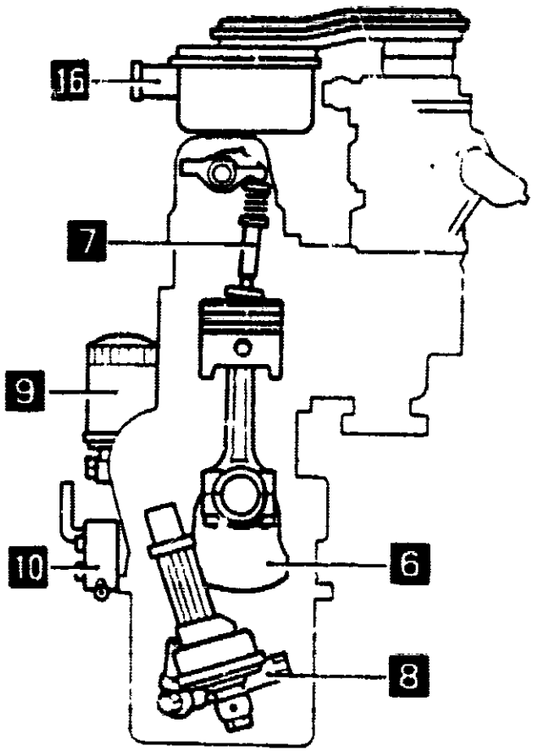

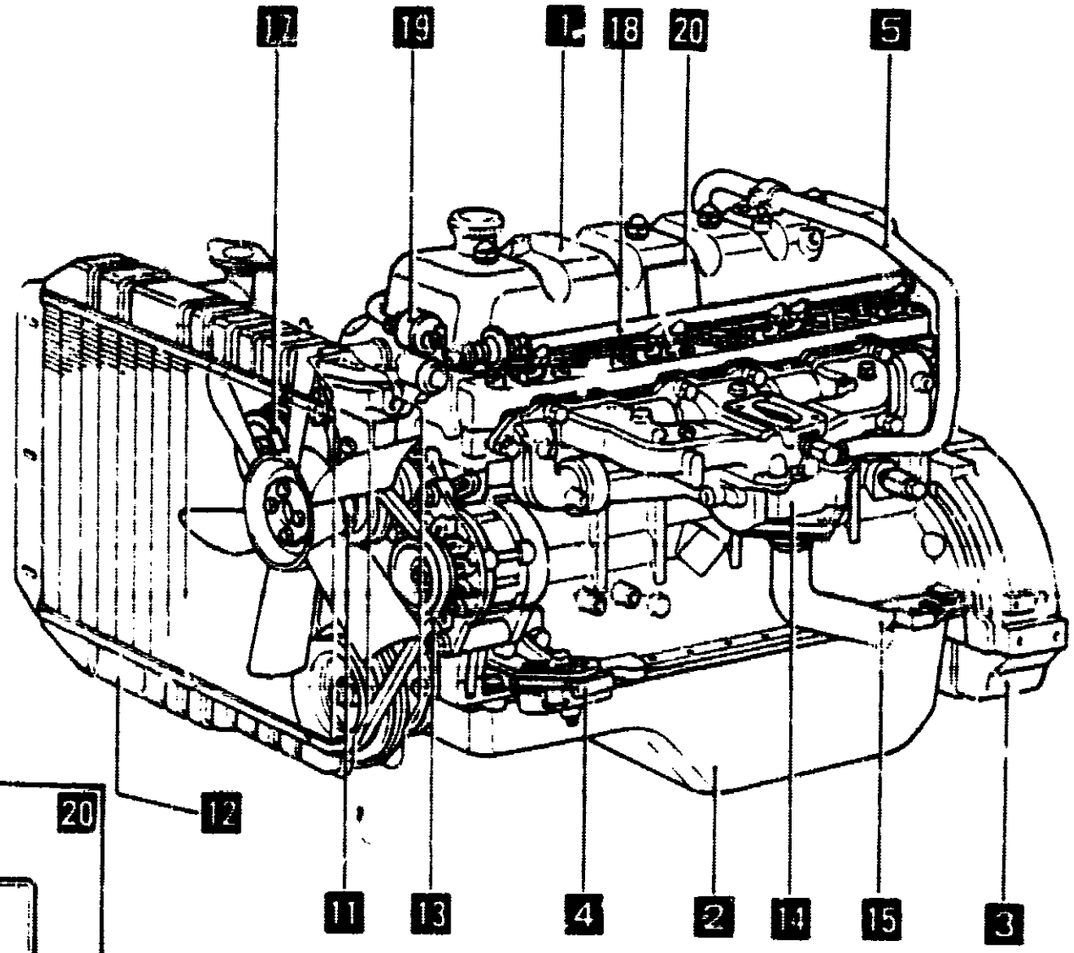

MA A113







PART NAME	LOCATION
CLAMP OR CLIP, NO.2 (FOR AIR INJECTION SYSTEM HOSE, NO.2)	1I3
CLAMP OR CLIP, NO.3 (FOR AIR INJECTION SYSTEM HOSE, NO.3)	1I3
CLAMP OR CLIP, NO.4 (FOR AIR INJECTION SYSTEM HOSE, NO.4)	1J3
CLAMP, BALL GUIDE	2K7
CLAMP, BATTERY HOLD DOWN	3L6
CLAMP, BRAKE TUBE, NO.1	2C9
CLAMP, CORD	1D4
CLAMP, DOOR LOCK CYLINDER AND SLEEVE	3B6
CLAMP, FLEXIBLE HOSE, NO.1	2L3
CLAMP, FRONT DOOR LOCK LINK	3M4
CLAMP, HEATER CONTROL	3F11
CLAMP, OIL COOLER TUBE, NO.1	2K3
CLAMP, OIL COOLER TUBE, NO.2	2K3
CLAMP, OIL COOLER TUBE, NO.3	2K3
CLAMP, OIL COOLER TUBE, NO.4	2K3
CLAMP, POWER STEERING OIL COOLER INLET HOSE	2G7
CLAMP, REAR DOOR LOCK LINK	3G5
CLAMP, RESISTIVE CORD, NO.1	1C4
CLAMP, RESISTIVE CORD, NO.2	1C4
CLAMP, RESISTIVE CORD, NO.4	1C4
CLAMP, STEERING RELAY ROD END	2L7
CLAMP, TAIL GATE LOCK LINK	3M5
CLAMP, TIE ROD END	2M7
CLEANER ASSY, AIR	1F3
CLEVIS, MASTER CYLINDER PUSH ROD	2E8
CLEVIS, TRANSFER SHIFT ROD	2G4
CLIP (FOR AIR HOSE)	1J4
CLIP (FOR AIR SUCTION SILENCER HOSE)	1I3
CLIP (FOR FRONT DISC BRAKE ANTIRATTLE)	2I8
CLIP (FOR FRONT FLOOR CARPET)	3B3
CLIP (FOR FRONT SEAT CUSHION COVER)	3E6
CLIP (FOR FUEL PUMP FILTER)	1K4
CLIP (FOR FUEL PUMP HOSE)	1K4
CLIP (FOR HOOD INSULATOR)	3J1
CLIP (FOR HOOD TO COWL TOP SEAL)	3F2
CLIP (FOR HOOD TO RADIATOR SUPPORT SEAL)	3J1
CLIP (FOR LOAD SENSING VALVE BOOT)	2C9
CLIP (FOR RESERVOIR TUBE)	2E8
CLIP (FOR VACUUM HOSE)	2G8
CLIP (FOR VENTILATION HOSE NO.2)	1L1
CLIP (FOR VENTILATION HOSE)	1L1
CLIP(FOR CONSOLE BOX)	3E3
CLIP, HOSE (FOR FRONT AXLE BREATHER HOSE)	2H6
CLIP, HOSE (FOR REAR AXLE BREATHER HOSE)	2G5
CLIP, ROCKER PANEL MOULDING	3F7
CLIP, ROOF HEADLINING	3E4
CLOCK ASSY	3D9
CLUTCH ASSY, MAGNET	3C12
CLUTCH ASSY, 1 WAY	2H2
CLUTCH SUB-ASSY, STARTER	1G4
CLUTCH, 1 WAY (FOR OVERDRIVE)	2L1
COCK SUB-ASSY, WATER DRAIN (FOR CYLINDER BLOCK)	1H1
COIL ASSY, IGNITION	1B4
COLLAR (FOR BRAKE PEDAL SHAFT)	2C3
COLLAR (FOR FLOOR SHIFT SETTING)	2A1
COLLAR (FOR LOAD SENSING SPRING SHACKLE)	2D9
COLLAR (FOR LOAD SENSING SPRING)	2C9
COLLAR (FOR STABILIZER BAR)	2J9
COLLAR (FOR TILT LEVER RETAINER)	2B7
COLLAR, MAIN SHAFT BEARING THRUST	2A7
COLLAR, REAR AXLE HOUSING SIDE	2F5
COLLAR, SPACE (FOR ALTERNATOR DRIVE END FRAME)	1F4
COLLAR, TILT STEERING SUPPORT, NO.1	2B7
COLLAR, TILT STEERING SUPPORT, NO.2	2B7
COLLER (FOR DIFFERENTIAL LOCK BRACKET)	2A6

PART NAME	LOCATION
COMPARTMENT, GLOVE	3D2
COMPRESSOR ASSY, COOLER	3B12
COMPUTER ASSY, TRANSMISSION CONTROL	3K9
COMPUTER, ENGINE CONTROL	3L9
CONDENSER ASSY, COOLER	3M11
CONDENSER, ALTERNATOR	1E4
CONNECTOR SUB-ASSY, FUEL TUBE	3J7
CONTROL ASSY, BACK DOOR REMOTE	3M5
CONTROL ASSY, HEATER OR BOOST VENTILATOR	3J11
CONVERTER ASSY, TORQUE	2E1
CONVERTER ASSY, W/CATALYST	1E3
COOLER ASSY, OIL	1H2
CORD (FOR TILT STEERING)	2M6
CORD SET, COIL AND SPARK, W/RESISTIVE	1B4
CORD, COIL RESISTIVE	1B4
CORD, SPARK PLUG RESISTIVE, NO.1	1B4
CORD, SPARK PLUG RESISTIVE, NO.2	1B4
CORD, SPARK PLUG RESISTIVE, NO.3	1B4
CORD, SPARK PLUG RESISTIVE, NO.4	1B4
CORD, SPARK PLUG RESISTIVE, NO.5	1C4
CORD, SPARK PLUG RESISTIVE, NO.6	1C4
COUPLING ASSY, FLUID	1I2
COVER SUB-ASSY, CYLINDER HEAD	1G1
COVER SUB-ASSY, DISC BRAKE DUST, FRONT LH	2H8
COVER SUB-ASSY, DISC BRAKE DUST, FRONT RH	2H8
COVER SUB-ASSY, FREE WHEEL HUB	2K6
COVER SUB-ASSY, FRONT OIL PUMP	2F1
COVER SUB-ASSY, OIL PUMP	1E2
COVER SUB-ASSY, REAR AXLE HOUSING	2F5
COVER SUB-ASSY, SIDE	2K7
COVER SUB-ASSY, SLIDING SHAFT DUST	2L4
COVER SUB-ASSY, STEERING COLUMN HOLE, NO.1	2M6
COVER SUB-ASSY, STEERING WHEEL	2H7
COVER SUB-ASSY, TIMING CHAIN OR BELT	1J1
COVER SUB-ASSY, TRANSMISSION CASE DUST	2G1
COVER, ADAPTER, NO.2	2H1
COVER, ADAPTOR, NO.1	2H1
COVER, BACK DOOR LOCK	3J5
COVER, BACK DOOR SERVICE HOLE	3K5
COVER, BACK DOOR SERVICE HOLE, NO.1	3J5
COVER, BACK DOOR SERVICE HOLE, NO.2	3J5
COVER, BACK DOOR SERVICE HOLE, NO.3	3J5
COVER, BACK DOOR SERVICE HOLE, NO.5	3J5
COVER, BACK WINDOW MOULDING JOINT, LOWER	3E7
COVER, COMBINATION METER, NO.1	3D9
COVER, CONNECTOR	3B9
COVER, CONSOLE, REAR	3E3
COVER, CONTROL SHAFT DUST, NO.1	2B6
COVER, CONTROL SHAFT DUST, NO.2	2B6
COVER, CONTROL SHAFT DUST, NO.3	2B6
COVER, CONTROL SHAFT DUST, NO.4	2B6
COVER, COOLER SWITCH HOLE	3D2
COVER, COWL PANEL HOLE	3F2
COVER, COWL SIDE INSTRUMENT PANEL BRACKET, LH	3C4
COVER, COWL SIDE INSTRUMENT PANEL BRACKET, RH	3C4
COVER, CYLINDER BLOCK SIDE, NO.2	1H1
COVER, DECK TRIM SIDE WASHER	3D4
COVER, DEFROSTER NOZZLE OPENING, NO.1	3E2
COVER, DIFFERENTIAL LOCK GROMMET	2A6
COVER, DIFFERENTIAL LOCK LEVER	3E3
COVER, DUST	2A7
COVER, ENGINE UNDER, NO.1	3C1
COVER, FLYWHEEL HOUSING FRONT	1J1
COVER, FRONT CLUTCH ACCUMULATOR	2M2
COVER, FRONT DIFFERENTIAL LOCK	2G6


PART NAME	LOCATION
SLEEVE, LOCK UP RELAY VALVE, NO.1	2A3
SLEEVE, LOCK UP RELAY VALVE, NO.2	2A3
SLEEVE, PRIMARY REGULATOR VALVE	2B3
SLEEVE, REAR DIFFERENTIAL LOCK	2E5
SLEEVE, SHIFT LEVER KNOB	2B1
SLEEVE, THROTTLE VALVE, NO.1	2D3
SLEEVE, THROTTLE VALVE, NO.2	2E3
SLEEVE, TRANSFER HIGH AND LOW CLUTCH	2E4
SLEEVE, 2-3 SHIFT TIMING VALVE PLUG	2C3
SLINGER, FRONT DIFFERENTIAL DRIVE PINION OIL	2E6
SLINGER, REAR DIFFERENTIAL DRIVE PINION OIL	2C5
SNAP, DOOR INSIDE HANDLE ROD (FOR FRONT DOOR)	3L4
SNAP, DOOR INSIDE HANDLE ROD (FOR REAR DOOR)	3F5
SOCKET AND WIRE SUB-ASSY, REAR SIDE MARKER LAMP	3I8
SOCKET AND WIRE, CLEARANCE LAMP	3D8
SOCKET SUB-ASSY, COMBINATION METER BULB	3D9
SOLENOID ASSY, DOOR CONTROL BACK	3I10
SOLENOID ASSY, DOOR CONTROL, FRONT LH	3I10
SOLENOID ASSY, DOOR CONTROL, FRONT RH	3I10
SOLENOID ASSY, DOOR CONTROL, REAR LH	3I10
SOLENOID ASSY, DOOR CONTROL, REAR RH	3I10
SOLENOID ASSY, FOUR WHEEL DRIVE CONTROL	3J9
SPACER (FOR AIR CLEANER)	1F3
SPACER (FOR FUEL INJECTOR)	1K4
SPACER (FOR GOVERNOR VALVE NO.2)	2I2
SPACER (FOR HIGH & LOW SHIFT ROD)	2G4
SPACER (FOR HORN BUTTON CONTACT PLATE)	2H7
SPACER (FOR MANUAL VALVE LEVER)	2J3
SPACER (FOR OUTPUT SHAFT	2G2
SPACER (FOR OUTPUT SHAFT REAR BEARING)	2G2
SPACER (FOR TRANSFER OUTPUT SHAFT)	2D4
SPACER OR WASHER, FRONT AXLE DRIVE PINION THRUST	2H6
SPACER, DIFFERENTIAL PINION SHAFT	2E5
SPACER, DRIVE PLATE, FRONT	2E1
SPACER, DRIVE PLATE, REAR	2E1
SPACER, FRONT DIFFERENTIAL DRIVE PINION BEARING	2E6
SPACER, HORN CONTACT	2H7
SPACER, INSTRUMENT PANEL, NO.1	3C2
SPACER, MANUAL DETENT SPRING	2G3
SPACER, RADIATOR MOUNTING INSULATOR	1L2
SPACER, REAR DIFFERENTIAL DRIVE PINION BEARING	2C5
SPACER, TRANSFER IDLER GEAR	2E4
SPACER, TRANSFER INPUT SHAFT	2E4
SPANNER	1A1
SPEAKER, REAR SPRING, NO.1	2M9
SPEAKER ASSY, FRONT NO.1	3M10
SPEAKER ASSY, REAR	3M10
SPEEDOMETER ASSY	3D9
SPIDER KIT, UNIVERSAL JOINT (FOR PROPELLER SHAFT)	2K4
SPIDER KIT, UNIVERSAL JOINT (FOR STEERING MAIN SHAFT)	2M6
SPINDLE SUB-ASSY, STEERING KNUCKLE	2F9
SPRING (FOR BRAKE PEDAL RETURN)	2C8
SPRING (FOR LOWER VALVE BODY)	2B3
SPRING (FOR OVERDRIVE BRAKE ACCUMULATOR PISTON)	2M2
SPRING (FOR REAR BRAKE SHOE HOLD DOWN)	2J8
SPRING (FOR THROTTLE VALVE SLEEVE)	2E3
SPRING (FOR 3-2 KICK DOWN ORIFICE CONTROL VALVE)	2G3
SPRING ASSY, FRONT, LH	2I9
SPRING ASSY, FRONT, RH	2H9
SPRING ASSY, LOAD SENSING	2C9
SPRING ASSY, REAR LH	2M9
SPRING ASSY, REAR RH	2L9
SPRING SUB-ASSY, MANUAL DETENT	2B3
SPRING SUB-ASSY, OVERDRIVE BRAKE RETURN	2K1
SPRING SUB-ASSY, REAR WHEEL CYLINDER PISTON	2K8


PART NAME	LOCATION
SPRING SUB-ASSY, 1ST & REVERSE BRAKE RETURN	2F2
SPRING SUB-ASSY, 2ND BRAKE PISTON RETURN	2D2
SPRING, ALTERNATOR BRUSH	1F4
SPRING, ANTI RATTLE NO.1 (FOR FRONT DISC BRAKE)	2I8
SPRING, COMPRESSION	2B1
SPRING, COMPRESSION (FOR ACCUMULATOR CONTROL VALVE NO.1)	2G3
SPRING, COMPRESSION (FOR ACCUMULATOR PISTON NO.2)	2B3
SPRING, COMPRESSION (FOR C-1 ACCUMULATOR PISTON)	2B3
SPRING, COMPRESSION (FOR C-2 ACCUMULATOR PISTON)	2C3
SPRING, COMPRESSION (FOR CHECK BALL)	2F1
SPRING, COMPRESSION (FOR CHECK VALVE)	2B3
SPRING, COMPRESSION (FOR DETENT REGULATOR VALVE)	2D3
SPRING COMPRESSION (FOR DETENT ROD)	2B1
SPRING, COMPRESSION (FOR FLOW CONTROL VALVE)	2E7
SPRING, COMPRESSION (FOR FRONT CLUTCH PISTON RETURN)	2A2
SPRING, COMPRESSION (FOR GOVERNOR VALVE NO.2)	2I2
SPRING, COMPRESSION (FOR GOVERNOR WEIGHT)	2I2
SPRING, COMPRESSION (FOR HORN BUTTON CONTACT PLATE)	2H7
SPRING, COMPRESSION (FOR INNER)	1C2
SPRING, COMPRESSION (FOR INTERMEDIATE MODULATOR VALVE)	2C3
SPRING, COMPRESSION (FOR LOCK UP RELAY VALVE)	2A3
SPRING, COMPRESSION (FOR LOCK UP SIGNAL VALVE)	2A3
SPRING, COMPRESSION (FOR LOW MODULATOR VALVE)	2D3
SPRING, COMPRESSION (FOR OVERDRIVE CLUTCH EXHAUST VALVE)	2F3
SPRING, COMPRESSION (FOR OVERDRIVE DIRECT CLUTCH)	2K1
SPRING, COMPRESSION (FOR PARKING BRAKE PAWL ROD)	2A8
SPRING, COMPRESSION (FOR PRIMARY DOWN SHIFT PLUG)	2A3
SPRING, COMPRESSION (FOR PRIMARY REGULATOR VALVE)	2B3
SPRING, COMPRESSION (FOR PRIMARY THROTTLE VALVE)	2E3
SPRING, COMPRESSION (FOR REAR CLUTCH PISTON RETURN)	2B2
SPRING, COMPRESSION (FOR REAR DIFFERENTIAL LOCK RETAINER)	2F5 2H6
SPRING, COMPRESSION (FOR REAR SIDE PLATE)	2F7
SPRING, COMPRESSION (FOR ROCKER ARM)	1D2
SPRING, COMPRESSION (FOR SECONDARY DOWN SHIFT PLUG)	2A3
SPRING, COMPRESSION (FOR SECONDARY REGULATOR VALVE)	2F3
SPRING, COMPRESSION (FOR SECONDARY THROTTLE VALVE)	2F3
SPRING, COMPRESSION (FOR SHIFT DETENT BALL)	2F4
SPRING, COMPRESSION (FOR STEERING LINK JOINT)	2M7
SPRING, COMPRESSION (FOR STEERING MAIN SHAFT)	2A7
SPRING, COMPRESSION (FOR TRANSFER FR DRIVE SHIFT SHAFT)	2G4
SPRING, COMPRESSION (FOR 1-2 RELAY VALVE)	2E3
SPRING, COMPRESSION (FOR 1-2 SHIFT VALVE)	2E3
SPRING, COMPRESSION (FOR 2-3 SHIFT TIMING VALVE)	2G3
SPRING, COMPRESSION (FOR 2-3 SHIFT VALVE)	2E3
SPRING, COMPRESSION (FOR 2ND LOCK VALVE)	2F3
SPRING, COMPRESSION (FOR 3-4 SHIFT VALVE)	2G3
SPRING, CONICAL (FOR VALVE ROCKER SHAFT)	1D2
SPRING, FUEL FILLER OPENING LID HINGE	3K7
SPRING, HEADLAMP TENSION	3A8
SPRING, INNER REAR VIEW MIRROR	3C11
SPRING, OIL PUMP RELIEF VALVE	1E2
SPRING, RETAINER (FOR VALVE ROCKER SHAFT)	1D2
SPRING, STARTER BRUSH	1G4
SPRING, STARTER MAGNET SWITCH RETURN	1H4
SPRING, TENSION (FOR ACCELERATOR LINK ROD)	3M7
SPRING, TENSION (FOR PARKING BRAKE BELL CRANK RETURN)	2L8
SPRING, TENSION (FOR REAR BRAKE AUTOMATIC ADJUST LEVER)	2K8
SPRING, TENSION (FOR REAR BRAKE SHOE RETURN)	2J8 2K8
SPRING, TENSION (FOR STEERING TILT LEVER)	2B7
SPRING, TENSION (FOR TILT STEERING)	2M6
SPRING, TORSION (FOR PARKING LOCK PAWL)	2J3
STARTER ASSY	1G4
STATOR ASSY, ALTERNATOR	1F4

PART NUMBER	LOCATION
57405-90A07-	3H2
57407-90A43-	3H2
-90A46-	3H2
57417-90A03-	3J2
57425-90A02-	3J2
57426-90A04-	3J2
57427-90A00-	3J2
57468-90A01-	3J2
-90A02-	3J2
57483-90A00-	3J2
57511-90A03-	3J2
57605-90A02-	3M2
57606-90A09-	3M2
57635-90A03-	3H2
57805-90A00-	3M2
58041-9CA01-	3A3
58043-90A00-	3A3
58107-90A00-	3J2
58111-90A46-	3J2
58151-90A05-	3A3
58153-90A01-	3A3
58155-90A01-	3A3
58188-90A03-	3J2
58192-90A00-	3J2
58203-90A00-	3J2
58204-90A00-	3J2
58211-90A21-	3J2
-90A24-	3J2
-90A26-	3J2
-90A28-	3J2
58231-90A00-	3A3
58247-90A00-	3J2
	3K2
58248-90A00-	3J2
58256-90B00-	3A3
58261-90A04-	3K2
58263-90A02-	3K2
58268-90A05-	3K2
58279-90A00-	3J7
58290-90A04-	3K2
-90A05-	3K2
58303-90A03-	3M2
58304-90A00-	3M2
58305-90A08-	3M2
58306-90A12-	3M2
58307-90A00-	3M2
58308-90A03-	3M2
58311-90A19-	3M2
-90A20-	3M2
58315-90A07-	3M2
58316-90A07-	3M2
58325-90A00-	3M2
58339-90A00-	3M2
58344-90A01-	3A3
58345-90A00-	3A3
58348-90A00-	3M2
58367-90A00-	3M2
58410-90A00-	3G4
58418-90A00-	3G4
58457-90A00-	3G4
P 58510-90A85-03	3B3
P -90A85-06	3B3
P 58540-90A83-03	3B3
P -90A83-06	3B3
P 58570-90A28-03	3B3
P -90A28-06	3B3
-90A39-03	3B3
-90A39-06	3B3
58573-90A00-	3B3
58705-90A01-	3G7
58714-90A00-	3K2
58790-90A01-	3G7
58793-90A01-	3G7
P 58825-90A01-03	3E3
P -90A01-06	3E3
P 58841-90A01-03	3E3
P -90A01-06	3E3
P 58911-90A02-03	3E3
P -90A02-06	3E3
P -90A03-03	3E3
P -90A03-06	3E3
P -90A05-03	3E3
P -90A05-06	3E3
P -90A06-03	3E3
P -90A06-06	3E3
58918-90A00-	3E3
58936-60010-	2B1
P 58944-90A00-03	3E3
P -90A00-06	3E3
P -90A01-03	3E3
P -90A01-06	3E3
P 58947-90A03-03	3E3
P -90A03-06	3E3
P 58951-90A01-03	3E3
P -90A01-06	3E3
58959-16010-	3F3
58964-30030-	3F3
-90K00-	3F3
58965-12010-	3F3
-20020-	3F3
58976-20010-	3F3
58985-90A00-	3F3
58996-90A04-	3F3
58997-90A02-	3F3
61027-90A04-	3G3
61028-90A04-	3G3
61031-90A02-	3G3
61032-90A00-	3G3
61034-90A00-	3J3
61101-90A08-	3G3
61102-90A07-	3G3
61154-90C00-	3G4
61161-9CA03-	3G3
61162-90A03-	3G3
61183-90A01-	3G3
61184-90A00-	3G3
61197-90A00-	3H3
61211-90A01-	3H3
61212-90A01-	3H3
61231-90A03-	3H3
61232-90A02-	3H3
61263-90A01-	3H3
61264-90A01-	3H3
61267-90A00-	3H3
61268-90A00-	3H3
61330-90A04-	3H3
61340-90A05-	3H3
-90A07-	3H3
61341-90A00-	3H3
61342-90A00-	3H3
61345-90A00-	3H3
61346-90A00-	3H3
61401-90A06-	3H3
61402-90A06-	3H3
61503-90A00-	3H3
61504-90A00-	3H3
61511-90A01-	3J3
61512-90A01-	3J3
61607-90A04-	3J3
-90A05-	3J3
61608-90A00-	3J3
-90A01-	3J3
61611-90A03-	3J3
61612-90A03-	3J3
61631-90A03-	3J3
61632-90A03-	3J3
61645-90A00-	3J3
61646-90A00-	3J3
61705-90A30-	3J3
-90A00-	3J3
61706-90A66-	3J3
-90A67-	3J3
61709-90A02-	3J3
61711-90A01-	3J3
61712-90A01-	3J3
61733-90A02-	3J3
-90A03-	3J3
-90A05-	3J3
61734-90A01-	3J3
-90A03-	3J3
-90A05-	3J3
61743-90A02-	3J3
61745-90A01-	3J3
61746-90A01-	3J3
61791-90B01-	3J3
61793-90A00-	3J3
P 62101-90A00-03	3C4
P -90A00-16	3C4
P 62102-90A00-03	3C4
P -90A00-16	3C4
P 62163-90A00-03	3C4
P -90A00-16	3C4
P 62164-90A00-03	3C4
P -90A00-16	3C4
62311-90A00-03	3C4
-90A00-06	3C4
P -90A01-03	3C4
P -90A01-06	3C4
62312-90A00-03	3C4
-90A00-06	3C4
P -90A01-03	3C4
P -90A01-06	3C4
62313-90A00-03	3C4
-90A00-16	3C4
P 62333-90A00-03	3C4
P -90A00-16	3C4
P 62411-90A01-03	3C4
P -90A01-16	3C4
P 62412-90A01-03	3C4
P -90A01-16	3C4
P 62471-90A00-18	3C4
P 62472-90A00-18	3C4
62505-90A03-08	3D4
62506-90A03-08	3D4
62510-90A31-03	3D4
-90A31-06	3D4
P -90A34-03	3D4
P -90A34-06	3D4
P 62520-90A44-03	3D4
P -90A44-06	3D4
-90A52-03	3D4
-90A52-06	3D4
P 62539-90A01-03	3D4
P -90A01-06	3D4
P 62549-90A00-03	3D4
P -90A00-16	3D4
62613-90A07-03	3D4
-90A07-06	3D4
P -90A09-03	3D4
P -90A09-06	3D4
62614-90A00-03	3D4
-90A00-16	3D4
P -90A02-03	3D4
-90A02-06	3D4
62633-90A09-08	3D4
P -90A11-08	3D4
62634-90A09-08	3D4
P -90A11-08	3D4
P 62640-90A17-03	3D4
P -90A17-06	3D4
P 62650-90A06-03	3D4
P -90A06-06	3D4
62711-90A12-	3K3
62712-90A11-	3K3
62741-90A01-	3K3
62795-90A00-	3D7
62903-90A00-	3A4
62904-90A00-	3A4
62905-69015-	3A4
62906-69015-	3A4
62909-22010-	3A4
63105-90A00-	3L3
63111-90A00-	3L3
-90A01-	3L3
63132-90A00-	3L3
63141-90A00-	3L3
63145-90A00-	3L3
P 63310-90A11-08	3E4
63341-90A01-	3E4
63343-90A01-	3E4
63344-90A01-	3E4
63353-90A00-	3E4
63354-90A00-	3E4
63361-90A00-	3E4
	3F4
-90A01-	3E4
	3F4
-90A02-	3E4
	3F4
63362-90A00-	3F4
-90A01-	3F4
-90A02-	3F4
63363-90A00-	3F4
-90A01-	3F4
-90A02-	3F4
63371-30050-	3F4
63372-90A00-	3F4
P 63392-90A00-18	3F4
P 63396-90A00-18	3F4
P 63397-90A00-18	3F4
63435-90A00-	3L3
63436-90A00-	3L3
63437-90A00-	3L3
63438-90A00-	3M3
63439-90A00-	3M3
634 1-90A00-	3M3
63442-90A00-	3M3
63443-90A00-	3M3
63444-90A00-	3M3
63445-90A00-	3M3
63447-90A00-	3M3
63448-90A00-	3M3
63449-90A00-	3M3
63457-90A00-	3M3
63458-90A00-	3M3
63459-90A00-	3M3
P 64739-90K01-03	3D4
P -90K01-06	3D4
64777-90A00-	3G7
P 64780-90A01-13	3J5
P -90A01-16	3J5
64798-90A00-	3J5
65061-90A13-	3J5
65557-90A01-	3M2
65706-90A00-	3L5
65707-90A00-	3L5
65777-90A00-	3L5
66110-90A00-	3L5
66301-90A00-	3M2
66318-90A00-	3M2
67001-90A40-	3H4
-90A44-	3H4
67002-90A47-	3H4
-90A50-	3H4
67003-90A15-	3C5
67004-90A15-	3C5
-90A17-	3C5
67005-90A20-	3J5
-90A27-	3J5
67111-90A15-	3H4
-90A18-	3H4
67112-90A15-	3H4
-90A18-	3H4
67113-90A05-	3C5
67114-90A05-	3C5
67118-90A02-	3H4
-90A03-	3H4
67207-90A00-	3L5
67209-90A00-	3L5
67285-90A00-	3L5
67286-90A00-	3L5
67401-90A00-	3H4
67402-90A00-	3H4
67403-90A00-	3H4
67404-90A00-	3H4
67407-90A00-	3C5
67408-90A00-	3C5
67481-90A00-	3H4
67482-90A00-	3H4
67610-90G04-03	3H4
-90G04-06	3H4
-90G07-03	3H4
-90G07-06	3H4
P -90G42-03	3H4
P -90G42-06	3H4
P -90G49-03	3H4
P -90G49-06	3H4
67620-90G07-03	3J4
-90G07-06	3J4
-90G14-03	3J4
-90G14-06	3J4
P -90G41-03	3J4
P -90G41-06	3J4
P -90G48-03	3J4
P -90G48-06	3J4
67630-90A25-03	3C5
-90A25-06	3C5
-90A28-03	3C5
-90A28-06	3C5
P -90A33-03	3D5
P -90A33-06	3D5
P -90A36-03	3D5
P -90A36-06	3D5
67640-90A25-03	3D5
-90A25-06	3D5
-90A28-03	3D5
-90A28-06	3D5
P -90A34-03	3D5
P -90A34-06	3D5
P -90A37-03	3D5
P -90A37-06	3D5
P 67651-90A01-03	3J4
P -90A01-06	3J4
67687-90A00-	3J5
67689-90A00-	3J5
67765-90A00-	3J5
67766-90A00-	3J5
67767-90A00-	3J5
67769-90A00-	3J5
67771-22010-	3J4
-30060-	3D5
P 67777-22040-23	3J4
P -22040-36	3J4
P 67778-22030-23	3J4
P -22030-46	3J4
P 67805-90A01-	3D5
67813-90A00-	3J3
67814-90A30-	3J3
B 67832-90A04-	3J4
P -90A07-	3J4
67847-90A01-	3K5
67861-90A00-	3J4
67862-90A00-	3J4
67868-30040-	3D5
	3J4
67871-90A00-	3D5
67872-90A00-	3D5
67881-90A06-	3K5
67891-90A01-	3K5
P 67913-90A00-03	3B3
P -90A00-16	3B3
67917-90A00-03	3C3
-90A00-16	3C3

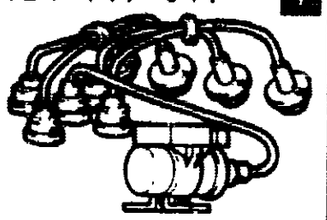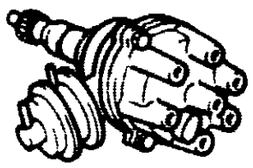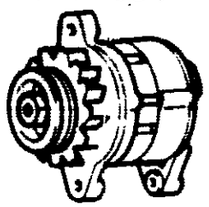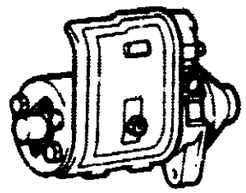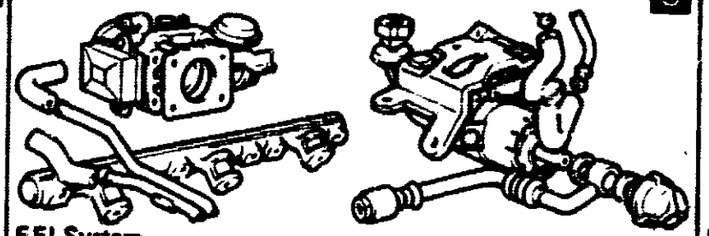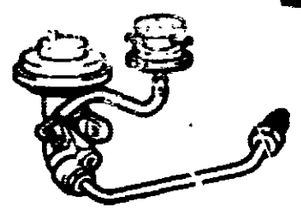1B4 (19-01) 1	1D4 (19-02) 2	1E4 (19-03) 3	1G4 (19-04) 4	1I4 (22-11) 5	1M4 (25-01) 6
 Ignition Coil & Cord	 Distributor	 Alternator	 Starter	 EFI System	 EGR System

ENGINE, FUEL GROUP (2/2)

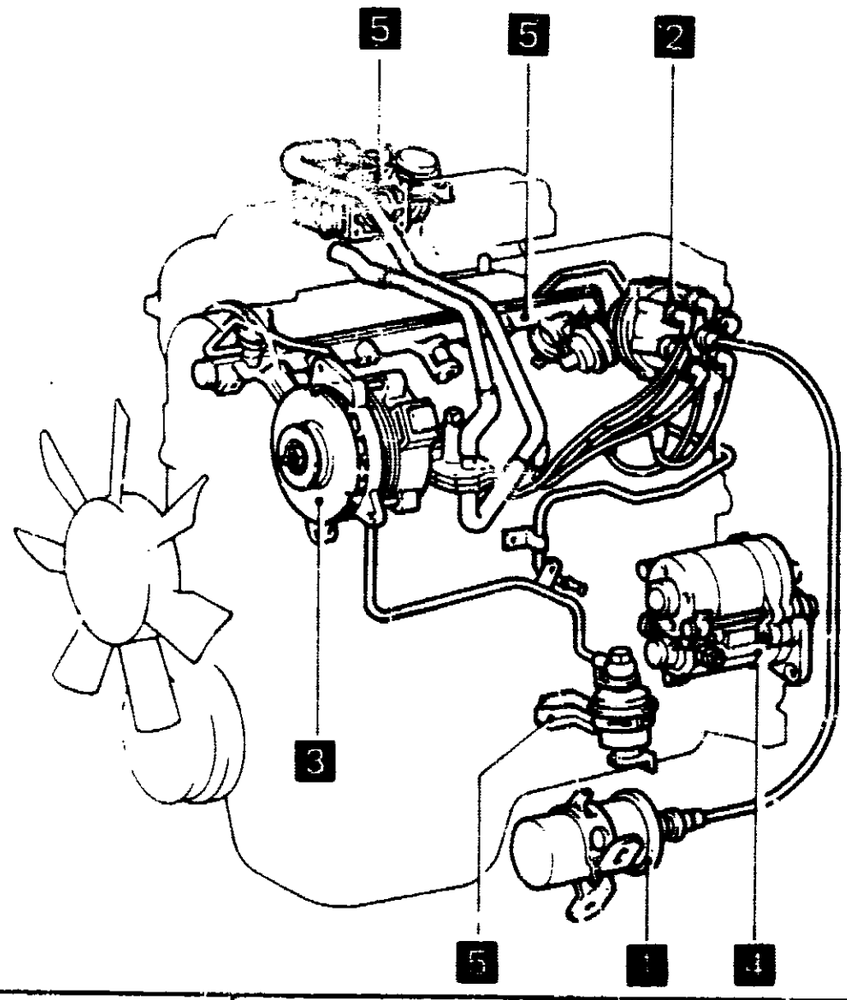

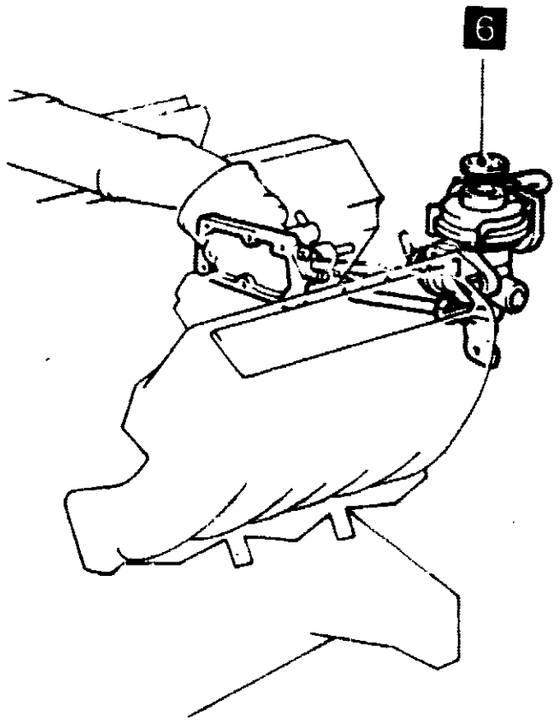

MA 3759

PART NAME	LOCATION
COVER, FRONT DOOR SERVICE HOLE, LH	3J4
COVER, FRONT DOOR SERVICE HOLE, RH	3J4
COVER, FRONT PILLAR, LH	3H3
COVER, FRONT PILLAR, RH	3H3
COVER, FRONT SEAT BACK, LH (FOR SEPARATE TYPE)	3D6
COVER, FRONT SEAT BACK, RH (FOR SEPARATE TYPE)	3D6
COVER, FRONT SEAT CUSHION, LH (FOR SEPARATE TYPE)	3D6
COVER, FRONT SEAT CUSHION, RH (FOR SEPARATE TYPE)	3D6
COVER, FUSE BOX OPENING	3D2
COVER, GLOVE COMPARTMENT DOOR LOCK	3D2
COVER, IGNITION COIL	1B4
COVER, INNER REAR VIEW MIRROR STAY HOLDER	3C11
COVER, MANUAL DETENT SPRING	2H3
COVER, PARKING BRAKE LEVER	2A8
COVER, POSITION INDICATOR HOUSING	2B1
COVER, QUARTER TRIM UPPER BELT HOLE, LH	3D4
COVER, QUARTER TRIM UPPER BELT HOLE, RH	3D4
COVER, QUARTER WHEEL HOUSE, LH	3D4
COVER, QUARTER WHEEL HOUSE, RH	3D4
COVER, QUARTER WINDOW MOULDING JOINT, LH	3D7
COVER, QUARTER WINDOW MOULDING JOINT, RH	3D7
COVER, REAR BODY MOUNTING SERVICE HOLE	3M2
COVER, REAR COMBINATION LAMP, LH	3G8
COVER, REAR COMBINATION LAMP, RH	3F8
COVER, REAR DIFFERENTIAL LOCK	2E5
COVER, REAR DOOR SERVICE HOLE	3D5
COVER, REAR FLOOR SERVICE HOLE	3M2
COVER, REAR PILLAR, LH	3C4
COVER, REAR PILLAR, RH	3C4
COVER, REAR SEAT BACK (FOR BENCH TYPE)	3D6
COVER, REAR SEAT CUSHION (FOR BENCH TYPE)	3D6
COVER, REAR SEAT CUSHION LOCK	3G6
COVER, REAR WIPER ARM	3C10
COVER, RECLINING HINGE, LH	3G6
COVER, RECLINING HINGE, RH	3G6
COVER, REMOTE CONTROL MIRROR HOLE	3D2
COVER, ROOF DRIP SIDE FINISH MOULDING JOINT, LH	3E7
COVER, ROOF DRIP SIDE FINISH MOULDING JOINT, RH	3E7
COVER, ROOF SIDE INNER SERVICE HOLE	3J3
COVER, RR COOLER SWITCH HOLE	3D2
COVER, SENSOR	3K9
COVER, SHIFTING HOLE	3E3
COVER, SLIDE (FOR POSITION INDICATOR)	2B1
COVER, SLIDE, NO.2 (FOR POSITION INDICATOR)	2B1
COVER, SPARE SWITCH HOLE	3D2
COVER, STABILIZER LINK (FOR FRONT)	3E3
COVER, STABILIZER LINK (FOR REAR)	2J9
COVER, STEERING COLUMN	2A10
COVER, STEREO OPENING	2A7
COVER, SURGE TANK	3D2
COVER, TILT STEERING SUPPORT STOPPER	1C3
COVER, TRANSFER CASE, NO.2	2C7
COVER, TRANSFER POWER TAKE-OFF	2B4
COVER, TRANSMISSION	2B4
COVER, TRANSMISSION CASE, REAR	3K2
COVER, TRANSMISSION UNDER	2H1
COVER, VALVE BODY, NO.2	3C1
COVER, VALVE PUSH ROD	2F3
COVER, WATER PROOF (FOR DISTRIBUTOR)	1H1
COVER, WINDSHIELD MOULDING JOINT, LOWER	1D4
COVER, WINDSHIELD MOULDING JOINT, UPPER LH	3D7
COVER, WINDSHIELD MOULDING JOINT, UPPER RH	3D7
COVER, WINDSHIELD WIPER ARM	3D7
CRANK, PARKING BRAKE BELL, LH	3A10
CRANK, PARKING BRAKE BELL, RH	2L8
CRANKSHAFT	2L8
CROSSMEMBER SUB-ASSY, FRAME, FRONT	1A2
CROSSMEMBER SUB-ASSY, FRAME, NO.2	3A1
CROSSMEMBER SUB-ASSY, FRAME, NO.3	3A1
CROSSMEMBER SUB-ASSY, FRAME, NO.4	3A1
CROSSMEMBER SUB-ASSY, FRAME, NO.5	3A1
CROSSMEMBER SUB-ASSY, FRAME, REAR	3A1
CUP KIT, REAR WHEEL CYLINDER	2J8
CUP, SHOE HOLD DOWN SPRING (FOR REAR BRAKE)	2K8
CUSHION (FOR FUEL INLET BOX COVER)	3K7
CUSHION (FOR GLOVE COMPARTMENT)	3D2
CUSHION (FOR STOP LAMP SWITCH)	2C8
CUSHION ASSY, FRONT SEAT, LH (FOR SEPARATE TYPE)	3E6
CUSHION ASSY, FRONT SEAT, RH (FOR SEPARATE TYPE)	3E6
CUSHION ASSY, REAR SEAT (FOR BENCH TYPE)	3E6
CUSHION SUB-ASSY, CAB FR MOUNTING, LWR	3E1
CUSHION SUB-ASSY, CAB FRONT MOUNTING	3E1
CUSHION SUB-ASSY, CAB MOUNTING, NO.2 UPPER	3E1
CUSHION SUB-ASSY, CAB MOUNTING, NO.4 LOWER	3E1
CUSHION SUB-ASSY, CAB MOUNTING, NO.4 UPPER	3E1
CUSHION SUB-ASSY, NO.3 BODY MOUNTING LOWER	3E1
CUSHION SUB-ASSY, NO.3 BODY MOUNTING, LOWER	3E1
CUSHION, BODY MOUNT NO.3 UPPER	3F1
CUSHION, BODY MOUNT, NO.1 LOWER	3E1
CUSHION, BODY MOUNT, NO.1 UPPER	3E1
CUSHION, BODY MOUNT, NO.2 UPPER	3E1
CUSHION, CONSOLE COMPARTMENT DOOR	3F3
CUSHION, EXHAUST PIPE SUPPORT	1E3
CUSHION, FRONT STABILIZER	2J9
CUSHION, OIL COOLER TUBE	2L3
CUSHION, REAR SEAT BACK LOCK	3G6
CUSHION, SEAT SUPPORT	3E6
CUSHION, SIDE PANEL STIFFENER, NO.4	3G4
CUSHION, TAIL PIPE (FOR CENTER)	1E3
CUSHION, TAIL PIPE (FOR FRONT)	1E3
CUSHION, TAIL PIPE (FOR REAR)	1E3
CYLINDER & KEY SET, IGNITION SWITCH LOCK	3A6
CYLINDER AND KEY SET, BACK DOOR LOCK	3A6
CYLINDER AND KEY SET, DOOR LOCK, LH	3A6
CYLINDER AND KEY SET, DOOR LOCK, RH	3A6
CYLINDER AND KEY SET, FUEL FILLER LID	3A6
CYLINDER AND KEY SET, GLOVE COMPARTMENT LOCK	3A6
CYLINDER ASSY, DIAPHRAGM	2H4
CYLINDER ASSY, DISC BRAKE, LH	2I8
CYLINDER ASSY, FRONT DIFFERENTIAL LOCK	2G6
CYLINDER ASSY, FRONT DISC BRAKE, RH	2H8
CYLINDER ASSY, REAR DIFFERENTIAL LOCK	2E5
CYLINDER ASSY, REAR WHEEL BRAKE (FOR LH, FRONT OR UPPER)	2K8
CYLINDER ASSY, REAR WHEEL BRAKE (FOR RH, FRONT OR UPPER)	2K8
CYLINDER KIT, BRAKE MASTER	2D8
CYLINDER KIT, DISC BRAKE, FRONT	2H8
CYLINDER KIT, REAR WHEEL	2J8
CYLINDER SET, LOCK	3A6
CYLINDER SUB-ASSY, BRAKE MASTER	2D8
DAMPER ASSY, FUEL PRESSURE PULSATION	1K4
DAMPER ASSY, STEERING	2M7
DASHPOT SUB-ASSY	1J4
DEFLECTOR, BRAKE DRUM OIL	2J5
DEFLECTOR, BREATHER OIL	2B4
DEFLECTOR, DUST	2A4
DEFLECTOR, DUST (FOR FRONT DIFFERENTIAL)	2F6
DEFLECTOR, DUST (FOR REAR DIFFERENTIAL)	2C5
DIODE	3B9
DISC, CLUTCH (FOR BRAKE)	2D2

PART NAME	LOCATION
STATOR SUB-ASSY, MAGNET CLUTCH	3B12
STAY ASSY, BACK DOOR, LH	3M5
STAY ASSY, BACK DOOR, RH	3M5
STAY SUB-ASSY, TAIL GATE, LH	3L5
STAY SUB-ASSY, TAIL GATE, RH	3L5
STAY, CONTROL SHAFT BRACKET	2B6
STAY, EGR PIPE, NO.1	1H4
STAY, MANIFOLD	1C3
STAY, MANIFOLD, NO.2	1C3
STAY, REAR BUMPER SIDE, LH	3H1
STAY, REAR BUMPER SIDE, RH	3H1
STAY, SURGE TANK, NO.1	1C3
STOPPER SUB-ASSY, BACK DOOR, LH	3L5
STOPPER SUB-ASSY, BACK DOOR, RH	3L5
STOPPER, ACCELERATOR PEDAL	3M7
STOPPER, CONSOLE COMPARTMENT DOOR, NO.1	3F3
STOPPER, CONSOLE COMPARTMENT DOOR, NO.2	3F3
STOPPER, FUEL FILLER OPENING LID	3K7
STOPPER, GLOVE COMPARTMENT DOOR ARM	3D2
STOPPER, STEERING SHAFT THRUST	2B7
STOPPER, VALVE VIBRATING	2B3
STRAINER SUB-ASSY, OIL	2A3
STRAINER, BRAKE MASTER CYLINDER RESERVOIR	2E8
STRAINER, GOVERNOR OIL	2I2
STRAINER, THROTTLE OIL	2A3
STRIKER ASSY, BACK DOOR LOWER LOCK	3M5
STRIKER ASSY, REAR SEAT BACK LOCK, LH	3G6
STRIKER ASSY, REAR SEAT BACK LOCK, RH	3G6
STRIKER ASSY, TAIL GATE, LOWER LH	3M5
STRIKER ASSY, TAIL GATE, LOWER RH	3M5
STRIKER SUB-ASSY, REAR SEAT CUSHION LOCK	3G6
STRIKER, CONSOLE COMPARTMENT DOOR LOCK	3F3
STRIKER, GLOVE COMPARTMENT DOOR LOCK	3D3
STRUT, ADJUSTING	2G7
SUPPORT ASSY, REAR SEAT CUSHION	3G6
SUPPORT SUB-ASSY, BRAKE PEDAL	2C8
SUPPORT SUB-ASSY, CENTER	2E2
SUPPORT SUB-ASSY, RADIATOR, LH	3A2
SUPPORT SUB-ASSY, RADIATOR, RH	3A2
SUPPORT SUB-ASSY, RADIATOR, UPPER	3A2
SUPPORT SUB-ASSY, TILT STEERING	2M6
SUPPORT SUB-ASSY, VACUUM TUBE UNION	2J4
SUPPORT, AIR INJECTION MANIFOLD	1J3
SUPPORT, BATTERY TRAY, RH	3L6
SUPPORT, FRONT SEAT HEADREST	3F6
SUPPORT, GOVERNOR BODY	2J2
SUPPORT, REAR SEAT HEADREST	3F6
SUPPORT, ROOF CARRIER, NO.1 LH	3M3
SUPPORT, ROOF CARRIER, NO.1 RH	3M3
SUPPORT, ROOF CARRIER, NO.2	3M3
SUPPORT, ROOF HEADLINING, NO.1	3E4
SUPPORT, ROOF HEADLINING, NO.2	3E4
SUPPORT, ROOF HEADLINING, NO.3	3F4
SUPPORT, ROOF HEADLINING, NO.4	3F4
SUPPORT, ROOF HEADLINING, NO.5	3F4
SUPPORT, ROOF HEADLINING, NO.6	3F4
SUPPORT, ROOF HEADLINING, NO.7	3F4
SUPPORT, ROOF HEADLINING, NO.8	3F4
SUPPORT, STEERING COLUMN COVER	2A7
SUPPORT, VALVE ROCKER, NO.1	1D2
SUPPORT, VALVE ROCKER, NO.2	1D2
SWITCH ASSY, ANTENNA	3J9
SWITCH ASSY, BRAKE WARNING TEST	3I9
SWITCH ASSY, COOLER CONTROL	3G11
SWITCH ASSY, COURTESY LAMP (FOR FRONT DOOR)	3I9

PART NAME	LOCATION
SWITCH ASSY, COURTESY LAMP (FOR REAR DOOR)	3I9
SWITCH ASSY, HAZARD WARNING SIGNAL	3I9
SWITCH ASSY, HEADLAMP DIMMER	3I9
SWITCH ASSY, HEATER BLOWER	3J9
SWITCH ASSY, IGNITION OR STARTER	3I9
SWITCH ASSY, LIGHT CONTROL, NO.1	3I9
SWITCH ASSY, NEUTRAL START	3I9
SWITCH ASSY, OUTER MIRROR	3J9
SWITCH ASSY, POWER WINDOW REGULATOR	3J9
SWITCH ASSY, REAR WINDOW DEFOGGER	3J9
SWITCH ASSY, STOP LAMP	3I9
SWITCH ASSY, TURN SIGNAL	3I9
SWITCH ASSY, WINDSHIELD WIPER	3I9
SWITCH ASSY,MAGNETIC	1G4
SWITCH, GLOVE BOX LAMP	3I9
SWITCH, PRESSURE	3H11
SWITCH, REAR WIPER	3J9
SWITCH, START INJECTOR TIME	3L9
SWITCH, TEMPERATURE DETECT, NO.2	3K9
SWITCH, TRANSFER INDICATOR, NO.1	3I9
SWITCH, TRANSMISSION CONTROL	3J9
SWITCH, WATER TEMPERATURE (FOR E.F.I.)	3L9
SWIVEL, CONNECTING ROD (FOR FLOOR SHIFT)	2B1
TACHOMETER ASSY, ENGINE	3D9
TANK ASSY, FUEL	3J7
TANK ASSY, RADIATOR RESERVE	1L2
TANK, INTAKE AIR SURGE	1C3
TAPE PLAYER ASSY	3K10
TERMINAL, BATTERY POSITIVE	3K8
THERMOSTAT	1K2
TIRE	2L5
TIRE (FOR SPARE)	2L5
TRACK ASSY, FRONT SEAT, OUTER LH	3F6
TRACK ASSY, FRONT SEAT, OUTER RH	3F6
TRACK ASSY, FRONT SEAT, INNER LH	3F6
TRACK ASSY, FRONT SEAT, INNER RH	3F6
TRANSFER ASSY	2M3
TRANSMISSION ASSY, AUTOMATIC	2D1
TRAY, BATTERY	3L6
TRIM SUB-ASSY, COWL SIDE, LH	3C4
TRIM SUB-ASSY, COWL SIDE, RH	3C4
TRIM, FRONT DOOR OPENING, LH	3C4
TRIM, FRONT DOOR OPENING, RH	3C4
TRIM, REAR DOOR OPENING, LH	3C4
TRIM, REAR DOOR OPENING, RH	3C4
TRIM, ROOF HEADLINING,REAR CENTER	3F4
TRIM, ROOF HEADLINING,REAR LH	3F4
TRIM, ROOF HEADLINING,REAR RH	3F4
TUBE ASSY, PRESSURE FEED	2G7
TUBE ASSY, STEERING COLUMN	2B7
TUBE SUB-ASSY, FUEL PUMP	1K4
TUBE SUB-ASSY, OIL COOLER INLET, NO.1	2K3
TUBE SUB-ASSY, OIL COOLER OUTLET, NO.1	2K3
TUBE SUB-ASSY, OIL COOLER, NO.2	2K3
TUBE SUB-ASSY, TRANSMISSION OIL FILLER	2G1
TUBE, FRONT BRAKE, NO.2	2B9
TUBE, FRONT BRAKE, NO.3	2B9
TUBE, FRONT BRAKE, NO.4	2B9
TUBE, FRONT BRAKE, NO.5	2C9
TUBE, FRONT BRAKE, NO.6	2C9
TUBE, FRONT DRIVE VACUUM, NO.2	2J4
TUBE, FUEL EMISSION, NO.2	3J7
TUBE, FUEL MAIN	3J7
TUBE, FUEL TANK TO CANISTER	3J7
TUBE, FUEL TANK TO CANISTER, NO.3	3K7

PART NUMBER	LOCATION
68111-90A01-	3J4
68112-90A01-	3J4
68113-90A01-	3D5
68114-90A01-	3D5
68123-90A01-	3D5
68124-90A01-	3E5
68131-90A20-	3K5
68141-90A03-	3K4
68142-90A01-	3E5
68143-90A01-	3K4
68170-90A01-	3K4
68188-90A00-	3E5
68189-90A00-	3E5
68190-90A01-	3E5
68281-90A00-	3K5
68782-90A00-	3K5
68291-90A01-	3K5
68610-22010-	3K4
68617-90A01-	3E5
	3K4
68630-90A00-	3E5
68710-14020-	3A5
-30080-	3H5
68720-14020-	3A5
-30020-	3H5
68730-14020-	3A5
	3H5
68740-14020-	3A5
	3H5
68810-90A00-	3L5
68868-90A00-	3L5
68950-69045-	3M5
68961-23010-	3M5
69005-90A47-	3A6
-90A62-	3A6
69051-90A06-	3A6
69052-90A06-	3A6
69055-90A06-	3A6
-90A11-	3A6
69056-90A01-	3A6
69057-90A08-	3A6
69058-90A02-	3A6
69205-20020-	3F5
	3L4
69206-20020-	3F5
	3L4
69210-90A00-	3L4
69212-90A00-	3M5
69220-90A00-	3L4
69230-90A00-	3F5
69240-90A00-	3F5
P 69260-12010-03	3A5
P	3H5
P -12010-46	3A5
P	3H5
69273-30020-	3F5
	3L4
P 69277-16040-23	3F5
P	3L4
P -16040-36	3F5
P	3L4
69285-22010-08	3A5
	3H5
69289-90A00-	3M5

PART NUMBER	LOCATION
69310-90A02-	3L4
-90A03-	3L4
69320-90A02-	3L4
-90A03-	3L4
69330-90A00-	3F5
-90A01-	3F5
69340-90A00-	3F5
-90A01-	3F5
69350-90A03-	3M5
69380-90A01-	3M5
69390-90A00-	3M5
69410-90B00-	3G5
	3M4
69430-90A01-	3M5
69450-90A00-	3M5
69460-90A00-	3M5
69513-14010-	3A6
-90A00-	3B6
69551-13020-	3B6
-90A00-	3B6
69552-95A00-	3B6
69563-90A00-	3B6
69581-14010-	3B6
69681-20040-	3B6
69690-90A01-	3M5
69705-90A00-	3M5
P 69706-90A00-03	3M5
P -90A00-06	3M5
69711-90A00-	3M4
69712-90A00-	3M4
69713-90A00-	3G5
69714-90A00-	3G5
69722-90A00-	3M3
69736-90K00-	3G5
	3M4
P 69741-90K00-06	3G5
P	3M4
69747-20020-01	3M5
69749-12010-	3G5
	3L1
	3M4
-30020-	3M5
69751-20040-	3E5
	3K4
69759-30021-	3G5
	3M4
69764-90A00-	3M5
69767-90A00-	3M5
69770-90A02-	3G5
-90A03-	3G5
69780-90A02-	3G5
-90A03-	3G5
69801-90A00-	3A5
69802-90A00-	3A5
69803-90A00-	3H5
69804-90A00-	3H5
69810-90A02-	3A5
69820-90A02-	3A5
69830-90A01-	3H5
69840-90A01-	3H5
69901-90A03-	3B5
69902-90A02-	3B5
69905-90A03-	3I5
69906-90A03-	3I5


PART NUMBER	LOCATION
69971-90A01-	3B5
69973-90A00-	3I5
69975-90A00-	3I5
P 71071-90A35-03	3D6
P -90A35-06	3D6
P 71072-90A18-03	3D6
P -90A18-06	3D6
P 71073-90A44-03	3D6
P -90A44-06	3D6
71075-90A18-03	3D6
-90A18-06	3D6
P 71077-90A41-03	3D6
P -90A41-06	3D6
71301-90A00-	3D6
71307-90A00-	3D6
71309-90A00-	3E6
71354-90A00-	3E6
P 71410-90A33-03	3E6
P -90A33-06	3E6
P 71420-90A31-03	3E6
P -90A31-06	3E6
P 71430-90A39-03	3E6
P -90A39-06	3E6
P 71440-90A37-03	3E6
P -90A37-06	3E6
P 71460-90G12-03	3E6
P -90G12-06	3E6
P 71480-90G28-03	3E6
P -90G28-06	3E6
71739-90A00-	3E6
P 71825-90A00-03	3E6
P -90A00-16	3E6
P 71826-90A00-03	3E6
P -90A00-16	3E6
P 71827-90A00-03	3E6
P -90A00-16	3E6
P 71828-90A00-03	3E6
P -90A00-16	3E6
P 71829-90A00-03	3E6
P -90A00-16	3E6
P 71835-90A00-03	3F6
P -90A00-16	3F6
P 71836-90A00-03	3F6
P -90A00-16	3F6
P 71837-90A01-03	3F6
P -90A01-06	3F6
71887-90A00-	3F6
P 71910-90A01-03	3F6
P -90A01-16	3F6
71930-10060-33	3F6
P -10060-36	3F6
71931-10010-33	3F6
-10010-36	3F6
71935-90K00-01	3F6
71956-30020-13	3F6
P -30020-56	3F6
71990-30020-13	3F6
P -30020-56	3F6
72110-90A04-	3F6
72120-90A04-	3F6
72130-90A03-	3F6
72140-90A00-	3F6
72145-90A00-	3F6
72146-90A00-	3G6


PART NUMBER	LOCATION
72510-90A03-	3G6
72520-90A02-	3G6
P 72525-14010-13	3G6
P -14010-56	3G6
P 72526-14010-43	3G6
P -14010-56	3G6
72538-12010-	2B7
P 72551-90A00-03	3G6
P -90A00-16	3G6
P 72552-90A00-03	3G6
P -90A00-16	3G6
72607-90A00-	3G6
72630-90A17-	3G6
-90A20-	3G6
72640-90A17-	3G6
-90A20-	3G6
72645-90A00-	3G6
72651-90A00-	3G6
P 72660-90A00-03	3G6
P -90A00-16	3G6
72670-90A02-	3G6
72680-90A02-	3G6
P 72694-90A00-03	3G6
P -90A00-16	3G6
73003-90A00-03	3H6
-90A00-06	3H6
73210-90A26-03	3H6
-90A26-06	3H6
P -90A29-03	3H6
P -90A29-06	3H6
73220-90A15-03	3H6
-90A15-06	3H6
P -90A17-03	3H6
P -90A17-06	3H6
P 73230-90A17-06	3H6
P -90A17-13	3H6
P 73240-90A20-03	3H6
P -90A20-06	3H6
73330-90A04-13	3I5
-90A04-16	3I6
-90A05-13	3I6
-90A05-16	3I6
-90A37-03	3I6
-90A37-06	3I6
P -90A46-03	3I6
P -90A46-06	3I6
P 73360-90A40-03	3I6
P -90A40-06	3I6
P 73380-90A20-03	3I6
P -90A20-06	3I6
74102-90A01-	3A7
74104-90A01-	3A7
P 74105-10010-10	3A7
-10010-13	3A7
74135-10030-	3A7
74137-10030-	3A7
P 74250-90A00-03	3K6
P -90A00-16	3K6
P 74310-90A28-08	3K6
P -90A52-08	3K6
P 74320-90A25-08	3K6
P -90A42-08	3K6
P 74348-12010-18	3K6
P 74372-90A00-	3C11


PART NUMBER	LOCATION
74404-90A00-	3L6
74431-90A00-	3L6
74433-90A00-	3L6
74451-90A00-	3L6
74559-12020-	3M6
-20030-	3M6
-20090-	3M6
-60010-	3M6
74564-60010-	3M6
74571-28020-	3M6
74610-10020-18	3K6
-90K00-08	3K6
74617-14010-18	3K6
-16010-08	3K6
74620-90A00-18	3K6
P 74670-90A01-03	3K6
P -90A01-06	3K6
75330-90A00-	3C7
75340-90A00-	3C7
75370-90A02-	3C7
75415-95660-	3M5
75430-90K00-	3C7
75442-90A01-	3C7
75505-90A00-	3D7
75506-90A00-	3E7
75531-90A00-	3D7
75533-90A00-	3D7
75534-90A00-	3D7
75535-90A00-	3D7
75541-90A00-	3D7
75543-90A00-	3D7
75553-90A00-	3E7
75554-90A00-	3E7
75579-90A00-	3E7
75583-90A00-	3E7
75586-90A00-	3E7
75596-90A00-	3E7
75631-90A01-	3M5
75641-90A00-	3E7
75642-90A00-	3E7
75645-90A00-	3E7
75646-90A00-	3E7
75710-90A02-	3E7
75720-90A02-	3E7
75730-90A01-	3E7
75740-90A01-	3E7
75751-90A00-	3E7
75752-90A00-	3E7
75755-90A00-	3F7
75756-90A00-	3F7
75761-90A00-	3F7
75762-90A00-	3F7
75763-90A00-	3F7
75764-90A00-	3F7
75765-90A00-	3F7
75766-90A00-	3F7
75812-90A00-	3E7
75813-90A00-	3E7
75850-69015-	3F7
75860-69015-	3F7
75867-20020-	3F7
76603-69015-	3K1
76604-69015-	3K1
76607-69015-	3J3

PART NUMBER	LOCATION
76608-69015-	3J3
76628-90A01-	3M2
77001-60220-	3J7
77030-90A01-	3J7
77037-90K00-	3J7
77169-14010-	1K4
77193-60031-	3J7
77201-60150-	3J7
77205-60140-	3J7
77209-60041-	3J7
77213-60030-	3J7
77244-60110-	3K7
77249-60040-	3J7
-60050-	3J7
77250-60080-	3J7
A -60081-	3J7
-60090-	3J7
77261-60080-	3J7
77262-60030-	3J7
77264-60030-	3K7
77293-60030-	3K7
77303-90A01-	3K7
77310-12100-	3K7
77316-12050-	3K7
77358-12020-	3K7
77366-12010-	3K7
77601-60060-	3K7
77602-60040-	3K7
77740-60130-	3K7
77751-60020-	3K7
78111-95110-	3M7
78118-90K00-	3M7
78120-90A08-	3M7
-90A09-	3M7
78180-90A24-	3M7
78184-90A01-	3M7
-90A03-	3M7
78410-90A03-	3M7
-90A08-	3M7
78471-90A00-	3M7
81105-90A27-	3A8
81106-90A27-	3A8
81110-90A28-	3A8
81111-20360-	3A8
	3B8
81113-90B04-	3A8
81114-22391-	3B8
81121-14320-	3A8
81131-28050-	3A8
81150-90A28-	3B8
81153-90B04-	3B8
81154-22391-	3A8
P 81240-22070-08	3J8
P -95A16-	3J8
P 81241-20060-	3J8
81260-22030-	3J8
P 81270-95A07-	3H8
P 81271-13070-	3H8
P 81272-13070-	3H8
P 81274-95A00-	3H8
P 81510-90A13-	3C8
P 81511-90A13-	3C8
P 81515-90A13-	3C8
P 81520-90A13-	3C8

POWER TRAIN·CHASSIS GROUP (1/2)

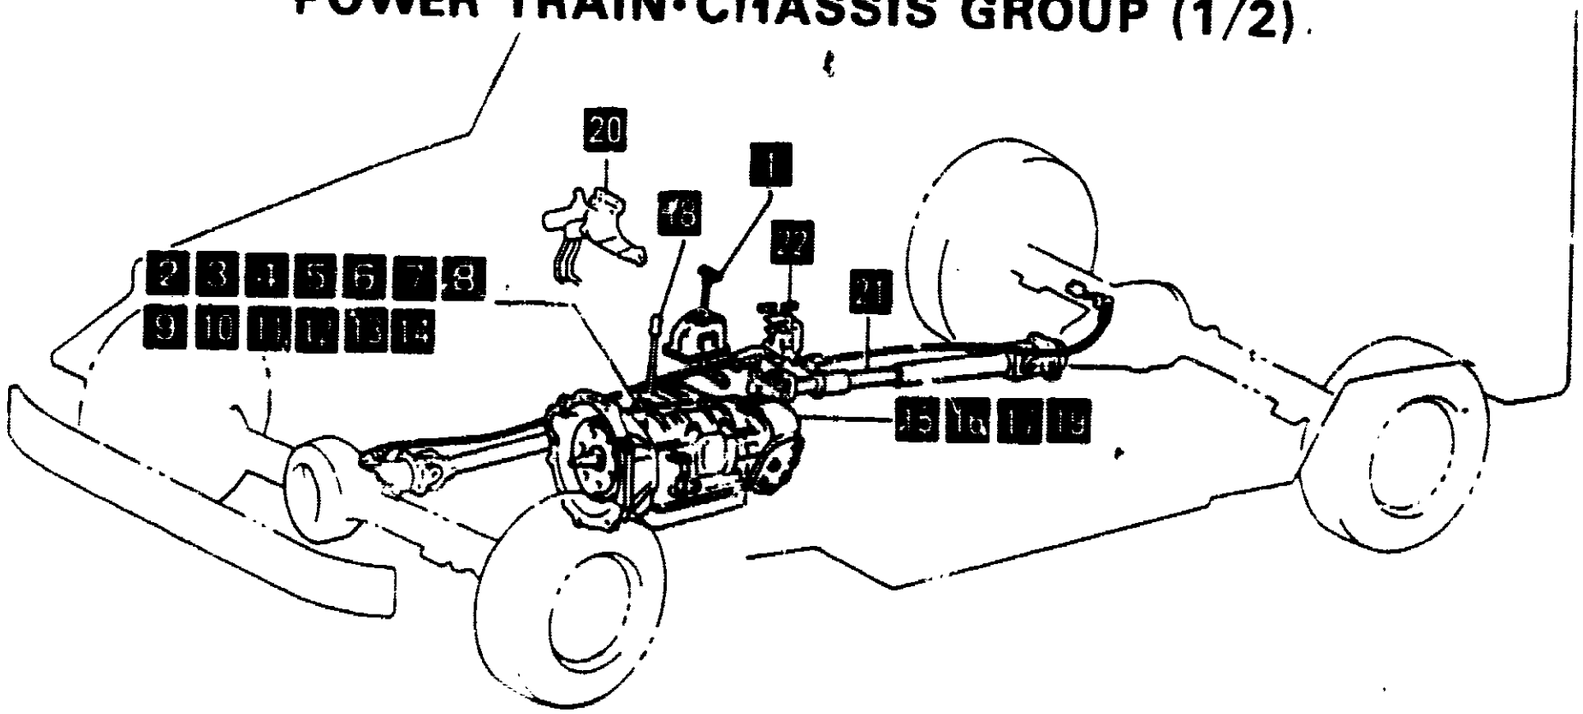

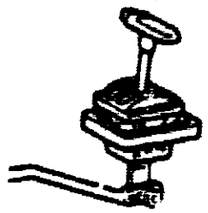2A1 (33-12) 1

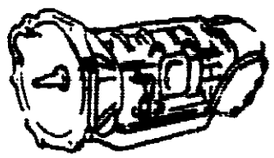Shift Lever & Retainer


2D1 (35-01) 2

Transmission Assy


2G1 (35-03) 3


Transmission Case

2J1 (35-05) 4

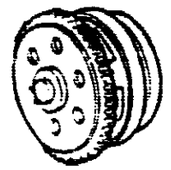Speedometer Driven Gear


2E1 (35-02) 5

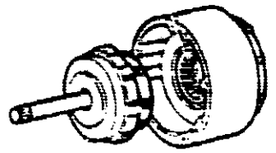Torque Converter & Chain

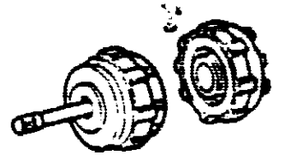
2K1 (35-06) 6

Overdrive Gear


2A2 (35-07) 7

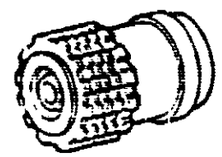Multiple Disc Clutch

2D2 (35-08) 8

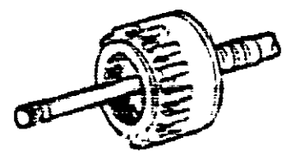Planetary Sun Gear

2F2 (35-09) 9

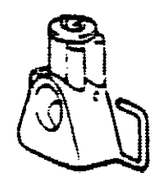Brake No. 3

2G2 (35-10) 10

Planetary Gear


212 (35-11) 11

Governor


2K2 (35-12) 12

Valve Body

213 (35-13) 13

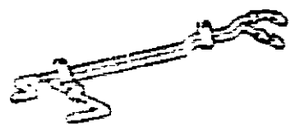Throttle Link

2K3 (35-14) 14

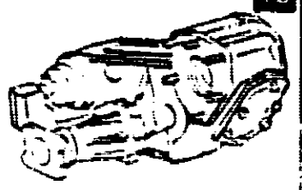Oil Cooler & Tube


2M3 (36-08) 15

Transfer Assy

2A4 (36-09) 16

Transfer Case

2C4 (36-10) 17

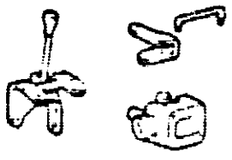Transfer Gear


2F4 (36-11) 18

Transfer Lever


2H4 (36-12) 19

Diaphragm Cylinder

2M5 (42-J1) 22

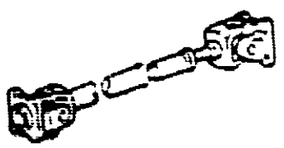Differential Lock Control

2K4 (37-01) 21

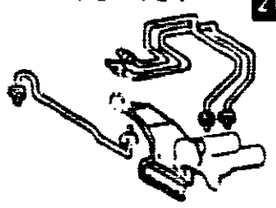Propeller Shaft

2J4 (36-16) 20

Vacuum Shift Valve

MC F294

PART NAME	LOCATION
DISC, CLUTCH (FOR FRONT CLUTCH)	2B2
DISC, CLUTCH (FOR OVERDRIVE BRAKE)	2M1
DISC, CLUTCH (FOR OVERDRIVE DIRECT CLUTCH)	2M1
DISC, CLUTCH (FOR 1ST & REVERSE BRAKE)	2F2
DISC, FRONT	2L6
DISC, REAR CLUTCH	2B2
DISTRIBUTOR ASSY	1D4
DOOR SUB-ASSY, CONSOLE COMPARTMENT	3E3
DOOR SUB-ASSY, GLOVE COMPARTMENT	3D2
DOOR, HEADLAMP, LH	3I1
DOOR, HEADLAMP, RH	3I1
DOWEL, SPLIT (FOR STEERING KNUCKLE ARM)	2F9
DRIVER, SCREW	1A1
DRUM SUB-ASSY, OVERDRIVE DIRECT CLUTCH	2K1
DRUM SUB-ASSY, REAR BRAKE	2I5
DRUM, REAR CLUTCH	2B2
DUCT ASSY, SIDE DEFROSTER, LH	3E2
DUCT ASSY, SIDE DEFROSTER, RH	3E2
DUCT SUB-ASSY, COOL AIR INTAKE	1G3
DUCT SUB-ASSY, HEATER TO REGISTER, NO.1	3J11
DUCT SUB-ASSY, HEATER TO REGISTER, NO.2	3J11
DUCT SUB-ASSY, HEATER TO REGISTER, NO.3	3J11
DUCT SUB-ASSY, HEATER TO REGISTER, NO.4	3J11
DUCT SUB-ASSY, HEATER TO REGISTER, NO.5	3J11
DUCT SUB-ASSY, HEATER TO REGISTER, NO.6	3J11
DUCT SUB-ASSY, QUARTER VENTILATOR, LH	3A4
DUCT SUB-ASSY, QUARTER VENTILATOR, RH	3A4
DUCT, AIR, NO.1	3J11
DUCT, AIR, NO.3	3J11
DUCT, AIR, NO.4	3J11
DUCT, AIR, REAR NO.1	3F11
DUCT, HEATER TO REGISTER, NO.1	3J11
ELEMENT SUB-ASSY, AIR CLEANER FILTER	1F3
EMBLEM ASSY, BACK DOOR, NO.1	3C7
EMBLEM, QUARTER PANEL	3C7
END SUB-ASSY, STEERING RELAY ROD, RH	2L7
END SUB-ASSY, STEERING RELAY ROD,LH	2L7
END SUB-ASSY, TIE ROD, LH	2L7
END SUB-ASSY, TIE ROD, RH	2L7
ENGINE ASSY, PARTIAL	1C1
EQUALIZER SUB-ASSY, PARKING BRAKE	2A8
EVAPORATOR SUB-ASSY, COOLER, NO.1	3G11
EXTENSION SUB-ASSY, JACK HANDLE	1A1
EXTENSION SUB-ASSY, QUARTER PANEL, REAR LOWER LH	3G3
EXTENSION SUB-ASSY, QUARTER PANEL, REAR LOWER RH	3G3
EXTENSION, FRONT BUMPER, LH	3G1
EXTENSION, FRONT BUMPER, RH	3G1
EXTENSION, REAR BUMPER, LH	3H1
EXTENSION, REAR BUMPER, RH	3H1
EXTENSION, REAR FLOOR PAN, LH	3M2
EXTENSION, REAR FLOOR PAN, RH	3M2
FAN	1K2
FAN SUB-ASSY, HEATER BLOWER	3F11
FAN, ALTERNATOR	1F4
FAN, NO.2	1K2
FENDER SUB-ASSY, FRONT, LH	3J1
FENDER SUB-ASSY, FRONT, RH	3J1
FILLER, FRONT DOOR GLASS CHANNEL	3B5
FILLER, REAR DOOR GLASS CHANNEL	3I5
FILM, LABEL COVER	3M6
FILTER ASSY, AIR	1M3
FILTER SUB-ASSY, OIL	1G2
FILTER, FUEL (FOR EFI)	1L4
FILTER, GAS, NO.1	1M3
FILTER, NOISE	3K10
FILTER, WINDSHIELD WASHER JAR	3D10
FILTER, WINDSHIELD WASHER JAR, NO.2	3D10
FILTER,FUEL PUMP	1K4
FINAL GEAR KIT, DIFFERENTIAL, FRONT	2E6
FINAL GEAR KIT, DIFFERENTIAL, REAR	2C5
FLANGE SUB-ASSY, DRIVE PINION COMPANION, FRONT	2E6
FLANGE SUB-ASSY, DRIVE PINION COMPANION, REAR	2C5
FLANGE SUB-ASSY, OUTPUT SHAFT COMPANION	2A4
FLANGE SUB-ASSY, TRANSFER OUTPUT SHAFT COMPANION	2A4
FLANGE, BRAKE (FOR 1ST & REVERSE BRAKE)	2F2
FLANGE, BRAKE, NO.1	2D2
FLANGE, OVEPDRIVE BRAKE, NO.1	2L1
FLANGE, OVERDRIVE CLUTCH	2L1
FLANGE, OVERDRIVE PLANETARY RING GEAR	2L1
FLANGE, REAR CLUTCH	2B2
FLANGE, REAR PLANETARY RING GEAR	2H2
FLASHER ASSY, TURN SIGNAL	3H9
FOOTREST, FRONT FLOOR	3J2
FORK, FRONT DIFFERENTIAL LOCK SHIFT	2G6
FORK, REAR DIFFERENTIAL LOCK SHIFT	2E5
FORK, TRANSFER GEAR SHIFT, NO.1	2F4
FORK, TRANSFER GEAR SHIFT, NO.2	2F4
FRAME ASSY, DRIVE END, ALTERNATOR	1E4
FRAME ASSY, STARTER COMMUTATOR END	1G4
FRAME SUB-ASSY	3A1
FRAME SUB-ASSY, BACK DOOR OPENING	3L3
FRAME SUB-ASSY, FRONT DOOR, FRONT LOWER LH	3I4
FRAME SUB-ASSY, FRONT DOOR, FRONT LOWER RH	3I4
FRAME SUB-ASSY, FRONT DOOR, REAR LOWER LH	3I4
FRAME SUB-ASSY, FRONT DOOR, REAR LOWER RH	3I4
FRAME, RECTIFIER END	1F4
FUSE, FUSE BLOCK	3H9
FUSIBLE LINK	3B9
GAGE ASSY, FUEL RECEIVER	3D9
GAGE ASSY, FUEL SENDER	3H9
GAGE ASSY, OIL PRESSURE SENDER	3I9
GAGE ASSY, WATER TEMPERATURE RECEIVER	3D9
GAGE ASSY, WATER TEMPERATURE SENDER	3I9
GAGE SUB-ASSY, OIL LEVEL	1I1
GAGE SUB-ASSY, TRANSMISSION OIL LEVEL	2G1
GARNISH, CENTER PILLAR, LH	3C4
GARNISH, CENTER PILLAR, RH	3C4
GARNISH, QUARTER TRIM, LH	3D4
GARNISH, QUARTER TRIM, RH	3D4
GASKET	1H2
GASKET (FOR FLUID OUTLET PLUG REAR SIDE)	1L4
GASKET (FOR FLUID OUTLET PLUG)	2E8
GASKET (FOR FRONT AXLE HOUSING PLUG)	2D8
GASKET (FOR FRONT DIFFERENTIAL LOCK CYLINDER)	2H6
GASKET (FOR FUEL FILTER)	2G6
GASKET (FOR FUEL TANK)	1L4
GASKET (FOR MASTER CYLINDER)	3J7
GASKET (FOR OIL FILLER CAP)	2D8
GASKET (FOR OIL PAN DRAIN PLUG)	1G1
GASKET (FOR OIL PUMP OUTLET PIPE)	1I1
GASKET (FOR PULSATION DAMPER HOSE)	1F2
GASKET (FOR REAR AXLE HOUSING DRAIN PLUG)	1K4
GASKET (FOR REAR AXLE HOUSING FILLER PLUG)	2F5
GASKET (FOR REAR DIFFERENTIAL LOCK CYLINDER)	2F5
GASKET (FOR SUCTION TUBE)	2F5
GASKET (FOR TRANSFER CASE)	2I4
GASKET KIT, DIFFERENTIAL CARRIER	2A4
GASKET KIT, ENGINE OVERHAUL	2B5
GASKET KIT, ENGINE VALVE GRIND	1E1
	1E1

PART NAME	LOCATION
TUBE, FUEL, NO.1 (FOR CHARCOAL CANISTER)	3K7
TUBE, LINE PRESSURE	2C3
TUBE, LOCK UP SIGNAL VALVE APPLY	2A3
TUBE, REAR BRAKE, NO.2	2C9
TUBE, REAR BRAKE, NO.3	2C9
TUBE, REAR BRAKE, NO.4	2C9
TUBE, REAR BRAKE, NO.5	2C9
TUBE, REAR BRAKE, NO.6	2C9
TUBE, RESERVOIR, NO.1	2E8
TUBE, RETURN (FOR STEERING GEAR OUTLET)	2G7
TUBE, SUCTION	2H4
TUBE, TRANSMISSION LUBE APPLY	2H3
TUBE, VENTILATION NO.1	1L1
TUBE, WHEEL CYLINDER, FRONT LH NO.1	2C9
TUBE, WHEEL CYLINDER, FRONT RH NO.1	2C9
TURN BUCKLE (FOR DIFFERENTIAL LOCK ROD)	2A6
UNION (FOR AIR HOSE)	1C3
UNION (FOR EGR PIPE, NO.1)	1M4
UNION (FOR FRONT AXLE BREATHER HOSE)	2H6
UNION (FOR FRONT DRIVE SHIFT)	2J4
UNION (FOR OIL COOLER TUBE)	2K3
UNION (FOR OIL PUMP OUTLET PIPE)	1F2
UNION (FOR REAR AXLE BREATHER HOUSE)	2G5
UNION SUB-ASSY, PRESSURE PORT	2D7
UNION, AIR INJECTION	1J3
UNION, RESERVOIR (FOR BRAKE MASTER CYLINDER SIDE)	2D8
UNION, VACUUM HOSE (FOR MANIFOLD SIDE)	2G8
UNIT ASSY, COOLER	3G11
UNIT SUB-ASSY, HEATER RADIATOR	3F11
VALVE (FOR TUBELESS TIRE)	2L5
VALVE ASSY, AIR SWITCHING	1J3
VALVE ASSY, BIMETAL	1M3
VALVE ASSY, EGR	1M4
VALVE ASSY, FLOW CONTROL	2E7
VALVE ASSY, HEATER WATER	3L11
VALVE ASSY, IDLE SPEED CONTROL	1J4
VALVE ASSY, LOAD SENSING PROPORTIONING	2C9
VALVE ASSY, POWER STEERING CONTROL	2L7
VALVE ASSY, VACUUM CHECK, NO.1	2G8
VALVE ASSY, VACUUM SWITCHING	1M3
VALVE ASSY, WATER UNIT	3F11
VALVE SET, EMISSION CONTROL, NO.2	1M3
VALVE SUB-ASSY, VENTILATION	1L1
VALVE, ACCUMULATOR CONTROL, NO.1	2G3
VALVE, CHECK (FOR AIR INJECTION SYSTEM)	1J3
VALVE, CHECK (FOR FRONT DRIVE SHIFT)	2J4
VALVE, CHECK, NO.1	1M3
VALVE, COOLER EXPANSION	3G11
VALVE, CUT BACK	2E3
VALVE, DETENT REGULATOR	2D3
VALVE, EXHAUST	1D2
VALVE, FUEL LIQUID VAPOR SEPARATOR	3J7
VALVE, GOVERNOR, NO.1	2I2
VALVE, GOVERNOR, NO.2	2I2
VALVE, HEADLAMP CLEANER WASHER HOSE	3G10
VALVE, INTAKE	1C2
VALVE, INTERMEDIATE COAST SHIFT	2F3
VALVE, INTERMEDIATE MODULATOR	2C3
VALVE, LOCK UP RELAY	2A3
VALVE, LOCK UP RELAY CONTROL	2A3
VALVE, LOCK UP SIGNAL	2M2
VALVE, LOW COAST SHIFT	2D3
VALVE, LOW MODULATOR	2D3
VALVE, MANUAL	2B3
VALVE, MANUAL DOWN TIMING	2G3
VALVE, OIL PUMP RELIEF	1E2
VALVE, OVERDRIVE CLUTCH EXHAUST	2F3
VALVE, PRIMARY REGULATOR	2B3
VALVE, PRIMARY THROTTLE	2E3
VALVE, SECONDARY REGULATOR	2F3
VALVE, SECONDARY THROTTLE	2F3
VALVE, SERVICE	3C12
VALVE, SUCTION	3C12
VALVE, VACUUM CONTROL, NO.1	1M3
VALVE, 1-2 RELAY	2E3
VALVE, 1-2 SHIFT	2E3
VALVE, 2-3 SHIFT	2E3
VALVE, 2-3 SHIFT TIMING	2F3
VALVE, 2ND LOCK	2E3
VALVE, 3-2 KICK DOWN ORIFICE CONTROL	2G3
VALVE, 3-4 COAST SHIFT	2G3
VALVE, 3-4 SHIFT	2G3
VALVE, 3RD COAST	2F3
VISOR ASSY, LH	3K6
VISOR ASSY, RH	3K6
VOLTMETER ASSY	3D9
WASHER (FOR CENTER SUPPORT)	2E2
WASHER (FOR FRONT DIFFERENTIAL TAPERED ROLLER BEARING)	2F6
WASHER (FOR LOAD SENSING SPRING)	2C9
WASHER (FOR MAGNET CLUTCH)	3B12
WASHER (FOR PRIMARY REGULATOR VALVE)	2B3
WASHER (FOR REAR DIFFERENTIAL TAPERED ROLLER BEARING)	2D5
WASHER SET, CRANKSHAFT THRUST	1M1
WASHER, C (FOR REAR BRAKE)	2K8
WASHER, CLAW (FOR STEERING KNUCKLE WASHER)	2L6
WASHER, CONE (FOR FRONT AXLE SHAFT)	2K6
WASHER, FRONT DIFFERENTIAL PINION THRUST	2G6
WASHER, FRONT DIFFERENTIAL SIDE GEAR THRUST, NO.1	2G6
WASHER, FRONT SHOCK ABSORBER CUSHION, NO.2	2I9
WASHER, FRONT WHEEL ADJUSTING LOCK	2L6
WASHER, OVERDRIVE PLANETARY GEAR THRUST, NO.1	2L1
WASHER, OVERDRIVE PLANETARY GEAR THRUST, NO.2	2L1
WASHER, PLANETARY CARRIER THRUST, NO.1	2G2
WASHER, PLANETARY CARRIER THRUST, NO.2	2H2
WASHER, PLATE (FOR AUTOMATIC TRANSMISSION CASE)	2H1
WASHER, PLATE (FOR DRIVE PINION)	2C5
WASHER, PLATE (FOR FRONT AXLE DRIVE PINION)	2H6
WASHER, PLATE (FOR MANUAL VALVE LEVER)	2J3
WASHER, PLATE (FOR PARKING LOCK PAWL SHAFT)	2J3
WASHER, PLATE (FOR REAR DIFFERENTIAL DRIVE PINION)	2C5
WASHER, PLATE (FOR SPEEDMETER DRIVE GEAR)	2E4
WASHER, PLATE (FOR STEERING WORM)	2J7
WASHER, PLATE (FOR TRANSFER OUTPUT SHAFT)	2A4
WASHER, REAR DIFFERENTIAL PINION THRUST	2E5
WASHER, REAR DIFFERENTIAL SIDE GEAR THRUST NO.1	2E5
WASHER, REAR SHOCK ABSORBER CUSHION, NO.1	2A10
WASHER, REAR SHOCK ABSORBER CUSHION, NO.2	2A10
WASHER, REAR WIPER LINK PIVOT, NO.1	3C10
WASHER, SEAL (FOR CROSSSHAFT ADJUSTING SCREW)	2L7
WASHER, SEAL (FOR CYLINDER HEAD COVER)	1G1
WASHER, TRANSFER IDLER GEAR SIDE THRUST	2D4
WASHER, WAVE (FOR MANUAL VALVE LEVER)	2J3
WAY, NO.1 (FOR FRONT BRAKE TUBE)	2B9
WAY, NO.2 (FOR FRONT BRAKE TUBE)	2R9
WAY, NO.2 (FOR REAR BRAKE TUBE)	2C9
WAY, 3 (FOR FRONT DRIVE SHIFT)	2J4
WEATHERSTRIP ASSY, FRONT DOOR GLASS, INNER	3K4
WEATHERSTRIP ASSY, REAR DOOR GLASS, INNER	3E5
WEATHERSTRIP, BACK DOOR	3K5

	PART NUMBER	LOCATION
P	81321-90A13-	3C8
P	81550-90A11-	3F8
P	81551-90A00-	3F8
P	81553-90A00-	3F8
P	81554-90A12-	3F8
P	81557-90A00-	3F8
P		3G8
P	81558-90A00-	3F8
P		3G8
P	81560-90A11-	3F8
P	81561-90A00-	3F8
P	81562-90A00-	3F8
P	81564-90A12-	3F8
P	81610-90A03-	3D8
P	81611-90A00-	3D8
P	81612-90A00-	3D8
P	81615-90A03-	3D8
P	81620-90A03-	3D8
P	81621-90A00-	3D8
P	81730-14110-	3E8
A	-90A05-	3E8
P	81731-14110-	3E8
P	81740-14110-	3E8
A	-90A05-	3E8
P	81741-14110-	3E8
P	81750-91255-	3I8
P	81751-14030-	3I8
P	81754-91255-	3I8
P	81755-20060-	3I8
	81850-90A14-	3E9
	-90A15-	3E9
	-90A25-	3E9
	-90A31-	3E9
	-90A35-	3E9
	81930-90A10-	3E9
	-90A15-	3E9
	81980-16010-	3H9
	82121-90A03-	3M8
	-90A04-	3M8
	82122-90A01-	3K8
	82124-90A01-	3M8
	82125-90A00-	3M8
	82131-90G89-	3M8
	-90G98-	3M8
	82132-90A15-	3M8
	82141-90A20-	3M8
	-90A21-	3M8
	82151-90A05-	3A9
		3M8
	-90A08-	3M8
	-90A10-	3A9
	-90A13-	3A9
	82152-90A05-	3A9
	-90A06-	3A9
	82153-90A01-	3A9
	82154-90A03-	3A9
	82155-90A02-	3A9
	82161-90A40-	3A9
	82162-90A38-	3A9
	82163-90A21-	3A9
	82164-90A03-	3A9
	82166-90A00-	3A9
	82171-90A10-	3A9
	82173-90A00-	3A9

	PART NUMBER	LOCATION
	82181-90A00-	3A9
	82182-90A02-	3A9
	82183-90A01-	3A9
	82184-90A03-	3A9
	82185-90A05-	3A9
	82187-90A00-	3A9
	82282-90A04-	3B9
	-90A05-	3B9
	82291-90A02-	3B9
	82345-12050-	3B9
	-32020-	3B9
	82616-12010-	3H9
	82650-12020-	3H9
	-20011-	3H9
	82670-90K00-	3B9
	82683-90A20-	3H9
	-90A21-	3H9
	82821-12150-	3B9
	83101-14040-	3D9
	-20640-	3D9
	-36010-	3D9
	83110-90A46-	3D9
	-90A47-	3D9
	83132-90A04-	3D9
	83134-90A06-	3D9
	83138-90A00-	3D9
	83145-90A01-	3D9
	-90A02-	3D9
	83243-90A03-	3D9
	83244-90A02-	3D9
	83245-90A03-	3D9
	83246-90A05-	3D9
	83247-90A05-	3D9
	83270-90A10-	3D9
	-90A15-	3D9
	83320-69015-	3H9
	83361-20030-	3I9
	83420-20020-	3I9
	83520-60010-	3I9
	83710-90A06-	3D9
	-90A13-	3D9
B	-90A20-	3D9
	83910-90A11-	3D9
	84112-69295-	3I9
	84118-90A00-	3I9
	84119-90A01-	3I9
	84140-35080-	3I9
	84222-60021-	3I9
	-60030-	3I9
	-60040-	3I9
	-60071-	3I9
	84230-22051-	3I9
	84231-28010-	3I9
	84242-90A00-	3I9
	84310-60700-	3I9
	84312-20011-	3I9
	84332-69055-	3I9
	84340-22072-	3I9
	84380-20010-	3I9
	84450-60150-	3I9
	84460-22010-	2E8
	84540-60020-	3I9
	84652-69345-	3I9
	84653-32020-	3J9

	PART NUMBER	LOCATION
	84722-60070-	3J9
P	84730-90A00-	3J9
N	-90A02-	3J9
	84732-90A00-	3J9
	84760-90A01-	3J9
	84790-90A09-	3J9
P	84810-90A02-03	3J9
P	-90A02-06	3J9
P	-90A03-03	3J9
P	-90A03-06	3J9
P	84820-90A08-03	3J9
P	-90A08-06	3J9
	84870-14060-	3J9
	-22040-	3J9
	-90A00-	3J9
	84956-60030-	3J9
	85010-90A00-	3C10
P	85031-30020-	3Q10
	85035-90A02-	3F10
P	-90A03-	3Q10
	85120-90A35-	3A10
	85160-90A07-	3A10
A	85164-90A02-	3A10
A	85165-90A01-	3A10
	85174-12320-	3C10
	85178-12320-	3C10
	-90A00-	3A10
	85190-90A02-	3A10
	-90A06-	3C10
	85192-14010-	3A10
	85195-95700-	3C10
	85210-90A01-	3A10
	85220-16270-	3A10
	-16340-	3A10
	-90A02-	3C10
	85221-30100-	3A10
	-90A02-	3C10
	85247-90A01-	3B10
P	85271-90A00-	3Q10
P	-90A01-	3Q10
P	-90A02-	3Q10
	85276-14010-	3Q10
	85310-14080-	3D10
	-22070-	3Q10
	-22080-	3F10
	85330-90A04-	3Q10
	-90A07-	3D10
	-90A08-	3F10
	85332-20050-	3F10
	-90A00-	3Q10
	-90A01-	3D10
	85333-20020-	3D10
	-60010-	3D10
	85336-10010-	3Q10
	85338-22020-	L2
	85341-90A05-	3D10
	-90A08-	3D10
	85348-89101-	3D10
	85349-89122-	3F10
P	85352-12010-	3Q10
	85355-14481-	3F10
	-20200-	3F10
	85361-10070-	3H10
	85440-60120-	3J9

	PART NUMBER	LOCATION
	85450-90A04-	3I10
	-90A06-	3I10
	85460-90A02-	3I10
	85470-90A02-	3I10
	85480-90A02-	3I10
	85500-90A07-	3J9
	85520-14030-	3J9
	85710-90A00-	3I10
	-90A01-	3I10
	85720-90A00-	3I10
	-90A01-	3I10
	85910-14020-	3L9
	85913-30020-	3J9
	85915-60010-	3L9
	85927-60040-	3K9
	85930-90A00-	3K9
	85940-90A09-	3K9
	-90A10-	3K9
	85991-22020-	3K9
	85999-12050-	3K9
	-89101-	3K9
	86120-20680-	3K10
	-32130-	3K10
	-32211-	3K10
	-32340-	3K10
	-32370-	3K10
	-32390-	3K10
	-90A18-	3K10
	86128-17150-	3K10
B	-17190-	3K10
	-20020-	3K10
	-20040-	3K10
A	-22690-	3K10
A	-22710-	3K10
S	-28140-	3K10
S	-28160-	3K10
	-32190-	3K10
B	-32210-	3K10
	86151-90K01-	3M10
	86160-90A05-	3M10
	-90A06-	3M10
	-90K02-	3M10
	86209-90A00-	3M10
	86211-90A06-	3K10
	86212-90A03-	3K10
	86260-12180-	3K10
	-20170-	3K10
	-30250-	3K10
	86269-90K00-	3M10
	-90K01-	3M10
	86300-90A17-	3A11
	-90A25-	3A11
	86510-22120-	3B11
	86520-22120-	3B11
	86995-90A02-	3E9
	87104-90A00-	3F11
	-90K03-	3F11
	87105-14020-	3F11
	-87002-	3F11
	87107-90A04-	3F11
S	-90A06-	3F11
	87110-90A02-	3F11
	87126-16010-	3F11
	-90A01-	3F11

	PART NUMBER	LOCATION
	87130-90A01-	3F11
	87138-22030-	3F11
	-90K02-	3F11
	87150-90A14-	3F11
	87201-90A02-	3J11
	-90A04-	3J11
	87208-90A15-	3L11
	-90K06-	3L11
	87211-90A01-	3J11
	87212-90A00-	3F11
	87240-90A00-	3L11
	-90A02-	3F11
	87245-90A00-	3L11
	-90A27-	3L11
	-90A28-	3L11
	-90A29-	3L11
	-90A30-	3L11
	-90A40-	3L11
	-90A41-	3L11
	-90A50-	3L11
	-90K36-	3L11
	-90K53-	3L11
	87248-90A01-	3F11
	-90A03-	3F11
	-90A22-	3L11
	-90A24-	3L11
	-90A25-	3L11
	87286-90A01-	3J11
P	87810-90A03-	3C11
P	87828-90A00-	3C11
P	-90A01-	3C11
P	87834-14011-28	3C11
P	87910-90A18-	3C11
P	-90A19-	3C11
N	-90A20-	3C11
P	87911-90A05-	3C11
P		3D11
P	87940-90A09-	3D11
P	-90A11-	3C11
N	-90A15-	3D11
	88320-60151-	3B12
B	-60280-	3B12
	88321-14011-	3B12
B	-14021-	3B12
	88322-14011-	3B12
B	-14020-	3B12
	88335-12030-	3C12
	-12050-	3B12
B	-14010-	3C12
B	-14020-	3C12
	88341-14010-	3B12
B	-14020-	3B12
	88342-14010-	3B12
B	-14020-	3B12
	88343-14011-	3C12
B	-14020-	3C12
	88344-14011-	3C12
B	-14020-	3C12
B	88356-12010-	3C12
B	88360-14030-	3C12
	-40010-	3C12
	88371-60101-	3C12
N	-60170-	3C12
P	88374-12020-	3C12


	PART NUMBER	LOCATION
P	88375-20010-	3C12
P	-30270-	3C12
P	88376-22010-	3C12
P	-22020-	3C12
	88403-12030-	3C12
B	-16011-	3C12
	88410-22080-	3C12
B	-60120-	3C12
	88411-14050-	3B12
B	-60020-	3B12
	88412-22030-	3B12
B	-28030-	3B12
	88431-60040-	3C12
	-60100-	3C12
	88440-25010-	3C12
	88460-90A14-	3M11
	88469-22010-	3M11
	88470-14010-	3M11
	88472-90A01-	3M11
	88482-90A00-	3G11
P	88501-90A07-	3G11
P	88510-90A04-	3G11
N	-90A25-	3G11
	88515-87004-	3G11
P	88539-90A00-	3G11
	88578-90A02-	3M11
P	88605-90A09-	3G11
	88610-90A07-	3G11
P	88626-90A01-	3G11
N	-90A02-	3H11
	88630-14010-	3J9
		3K9
	88645-30250-	3H11
	88648-90A00-	3M11
	88650-90A03-	3M11
	88711-90A09-	3M11
	88712-90A09-	3M11
	88716-90A27-	3H11
	-90A43-	3M11
	88721-90A07-	3M11
	-90A08-	3M11
	88723-12010-	3M11
	89412-12010-	3K9
	89422-20010-	3L9
	-30020-	3L9
	89423-60020-	3K9
	89428-14070-	3L9
	-36010-	3K9
	89437-60010-	3K9
B	89452-14050-	3L9
P	-28030-	3L9
	89462-20010-	3L9
	-20040-	3L9
	89465-69015-	3K9
A	89466-20020-	3K9
A	-30010-	3K9
	89530-60020-	3K9
	89620-14410-	3K9
	89661-60010-	3L9
	-60011-	3L9
	-60020-	3L9
	-60021-	3L9
	89667-60010-	3M9
	89668-60010-	3M9

2M4 (41-01) 1



Rear Axle Housing

2H5 (41-02) 2

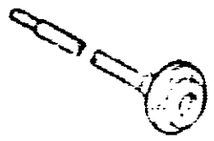


Rear Axle Shaft & Hub

2K5 (41-03) 3




Disc Wheel & Cap

2C6 (43-01) 4

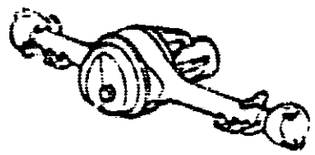


Front Axle Housing

2J6 (43-02) 5

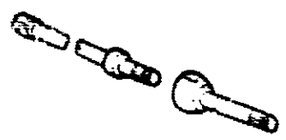


Drive Shaft

2K6 (43-03) 6

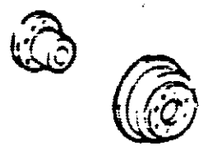

Front Axle Hub


2M6 (45-01) 7

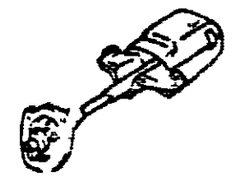


Steering Column & Shaft

21

POWER TRAIN·CHASSIS GROUP (2/2)

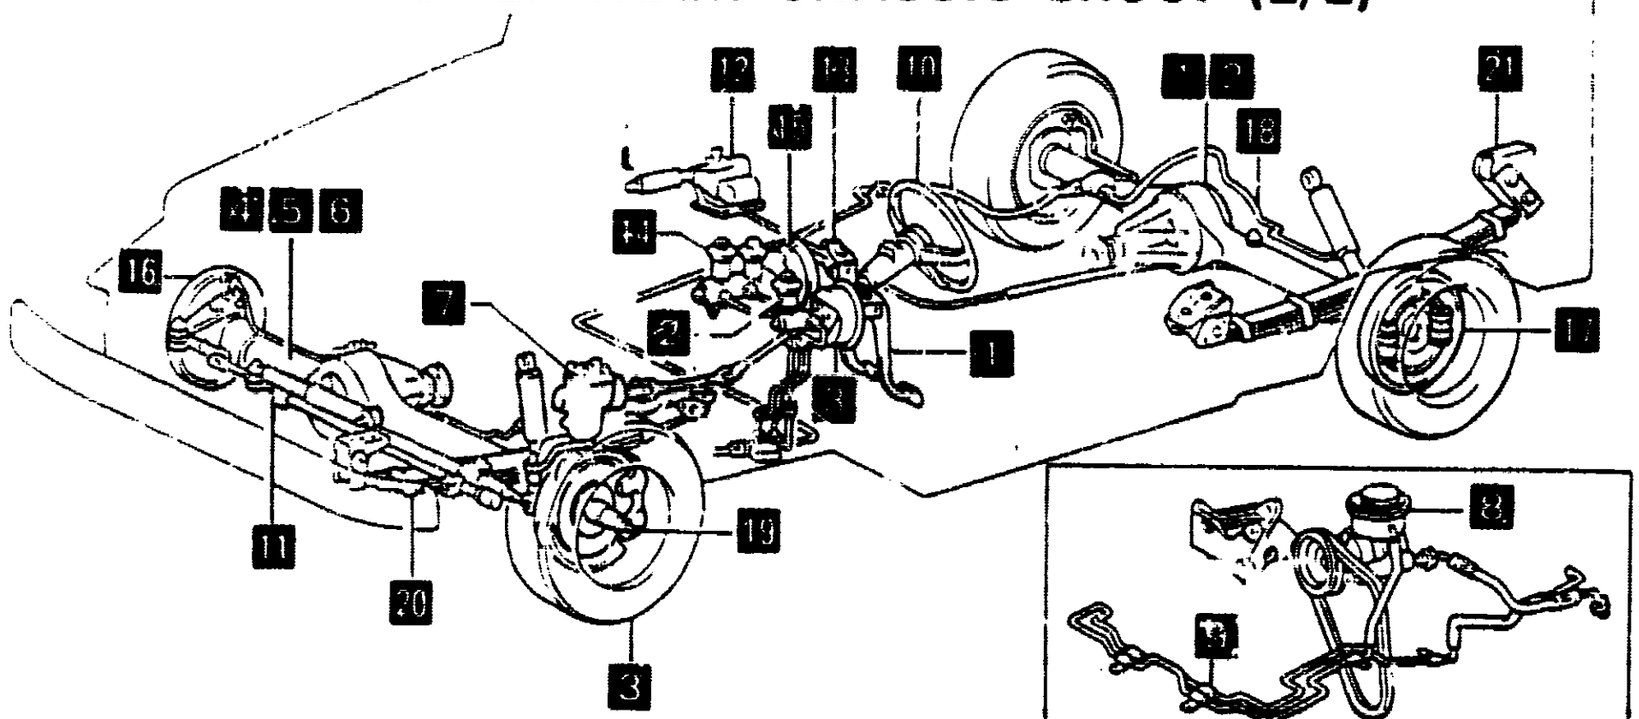


2D7 (45-02) 8

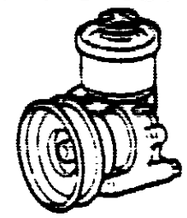

Vane Pump & Reservoir

2G7 (45-03) 9

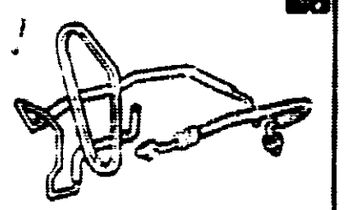


Oil Cooler & Tube

2H7 (45-04) 10




Steering Wheel

2K9 (48-04) 21

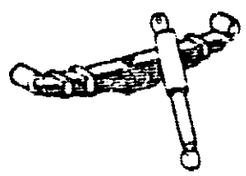

Rear Spring

2J9 (48-03) 20

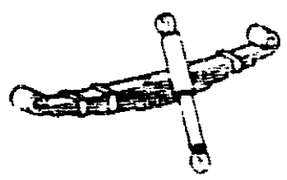


Front Spring

2E9 (48-02) 19



Front Axle Arm

2I7 (45-05) 11

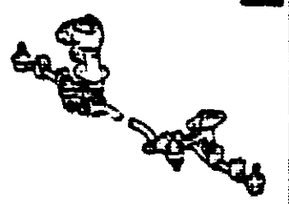

Steering Gear & Link

2M8 (47-08) 18



Rear Disc Brake Caliper

2J8 (47-06) 17



Rear Backing Plate

2H8 (47-05) 16




Front Disc Brake Caliper

2F8 (47-03) 15




Brake Booster

2D8 (47-02) 14

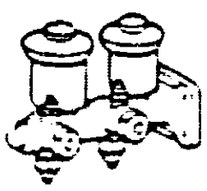

Brake Master Cylinder

2C8 (47-01) 13

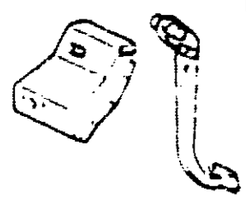

Brake Pedal & Bracket

2A8 (46-01) 12



Parking Brake & Cable

MC F295

PART NAME	LOCATION
GASKET KIT, FRONT AXLE OVERHAUL	2E9
GASKET KIT, OVERHAUL	3C12
GASKET KIT, POWER STEERING CROSS SHAFT OVERHAUL	2J7
GASKET KIT, POWER STEERING GEAR (FOR RECIRCULATING BALL)	2J7
GASKET KIT, POWER STEERING PUMP	2D7
GASKET KIT, TRANSAXLE OVERHAUL (ATM)	2D1
GASKET, AIR CLEANER CAP	1F3
GASKET, AIR FLOW METER	1G3
GASKET, AIR SURGE TANK TO INTAKE MANIFOLD	1C3
GASKET, AUTOMATIC TRANSMISSION OIL PAN	2I1
GASKET, BRAKE BOOSTER	2G8
GASKET, BRAKE DRUM OIL DEFLECTOR	2J5
GASKET, BRAKE MASTER CYLINDER	2E8
GASKET, CENTER SUPPORT APPLY	2H3
GASKET, COLD START INJECTOR	1L4
GASKET, CYLINDER BLOCK SIDE COVER, NO.2	1H1
GASKET, CYLINDER HEAD	1F1
GASKET, CYLINDER HEAD COVER	1G1
GASKET, DIAPHRAGM CYLINDER	2H4
GASKET, DRAIN	2H6
GASKET, DRAIN PLUG (ATM)	2H1
GASKET, EGR VALVE	1M4
GASKET, EXHAUST PIPE	1E3
GASKET, FAN	1I2
GASKET, FILTER ELEMENT	1F3
GASKET, FREE WHEEL HUB	2L6
GASKET, FRONT AXLE DIFFERENTIAL CARRIER	2H6
GASKET, FRONT AXLE OUTER SHAFT FLANGE	2K6
GASKET, FRONT CLUTCH ACCUMLATOR, NO.1	2M2
GASKET, FRONT CLUTCH ACCUMLATOR, NO.2	2M2
GASKET, FRONT END PLATE	1J1
GASKET, FRONT OIL PUMP COVER	2F1
GASKET, FUEL PUMP BRACKET	1K4
GASKET, FUEL SENDER GAGE	3I9
GASKET, FUEL TANK CAP	3K7
GASKET, GOVERNOR BODY	2I2
GASKET, IDLE SPEED CONTROL VALVE	1K4
GASKET, KNUCKLE SPINDLE	2F9
GASKET, KNUCKLE SPINDLE OIL RETAINER	2F9
GASKET, LICENSE PLATE LAMP BODY	3H8
GASKET, LICENSE PLATE LAMP LENS	3H8
GASKET, LOCK UP RELAY VALVE BODY	2A3
GASKET, MANIFOLD TO CYLINDER HEAD	1C3
GASKET, OIL FILTER	1G2
GASKET, OIL PAN	1I1
GASKET, OIL STRAINER	2A3
GASKET, OUTER REAR VIEW MIRROR, LH	3D11
GASKET, OUTER REAR VIEW MIRROR, RH	3C11
GASKET, OUTPUT SHAFT BEARING RETAINER	2B4
GASKET, OXYGEN SENSOR	3K9
GASKET, PARKING AND CLEARANCE LAMP LENS, LH	3D8
GASKET, PARKING AND CLEARANCE LAMP LENS, RH	3D8
GASKET, REAR AXLE HOUSING COVER	2F5
GASKET, REAR AXLE OUTER SHAFT FLANGE	2J5
GASKET, REAR COMBINATION LAMP BODY, LH	3F8
GASKET, REAR COMBINATION LAMP BODY, RH	3F8
GASKET, REAR DIFFERENTIAL CARRIER	2F5
GASKET, REAR SIDE MARKER LAMP BODY, LH	3I8
GASKET, REAR SIDE MARKER LAMP BODY, RH	3I8
GASKET, THERMOSTAT	1K2
GASKET, THROTTLE BODY	1K4
GASKET, TIMING GEAR (OR CHAIN) COVER	1J1
GASKET, TRANSFER CASE	2B4
GASKET, TRANSFER CASE, FRONT	2B4
GASKET, TRANSFER COVER	2B4

PART NAME	LOCATION
GASKET, TRANSFER POWER TAKE-OFF COVER	2B4
GASKET, TRANSFER SHIFT SHAFT GUIDE	2H4
GASKET, TRANSMISSION CASE ADPTOR	2H1
GASKET, TRANSMISSION CASE REAR COVER	2H1
GASKET, VALVE BODY PLATE, NO.3	2C3
GASKET, VALVE BODY PLATE, NO.4	2C3
GASKET, VALVE BODY, NO.1	2C3
GASKET, VALVE BODY, NO.2	2C3
GASKET, VALVE PUSH ROD COVER	1H1
GASKET, WATER OUTLET	1K2
GASKET, WATER OUTLET HOUSING	1K2
GASKET, WATER PUMP	1I2
GASKET, WATER PUMP COVER	1I2
GAUGE, OIL PRESSURE RECEIVER	3D9
GEAR ASSY, FRONT PLANETARY	2G2
GEAR ASSY, OVERDRIVE PLANETARY	2L1
GEAR ASSY, POWER STEERING	2K7
GEAR ASSY, REAR PLANETARY	2H2
GEAR OR SPROCKET, CAMSHAFT TIMING	1C2
GEAR OR SPROCKET, CRANKSHAFT TIMING	1B2
GEAR SUB-ASSY, DRIVE PLATE & RING	2E1
GEAR SUB-ASSY, FRONT PLANETARY SUN	2E2
GEAR SUB-ASSY, SPEEDOMETER DRIVEN (ATM)	2J1
GEAR SUB-ASSY, TRANSFER HIGH SPEED OUTPUT	2D4
GEAR, FRONT DIFFERENTIAL SIDE	2F6
GEAR, FRONT OIL PUMP DRIVE	2F1
GEAR, FRONT OIL PUMP DRIVEN	2F1
GEAR, FRONT PLANETARY RING	2H2
GEAR, OIL PUMP DRIVE	1E2
GEAR, OIL PUMP DRIVEN	1E2
GEAR, OVERDRIVE PLANETARY RING	2L1
GEAR, POWER TAKE-OFF DRIVE	2D4
GEAR, REAR DIFFERENTIAL SIDE	2D5
GEAR, REAR PLANETARY RING	2H2
GEAR, REAR PLANETARY SUN	2E2
GEAR, SPEEDOMETER DRIVE (FOR TRANSFER)	2D4
GEAR, SPIRAL, DISTRIBUTOR	1D4
GEAR, STARTER IDLE	1H4
GEAR, TRANSFER IDLER	2D4
GEAR, TRANSFER INPUT	2D4
GEAR, TRANSFER LOW	2E4
GLASS SUB-ASSY, FRONT DOOR, LH	3J4
GLASS SUB-ASSY, FRONT DOOR, RH	3J4
GLASS SUB-ASSY, REAR DOOR, LH	3D5
GLASS SUB-ASSY, REAR DOOR, RH	3D5
GLASS, BACK DOOR	3K5
GLASS, QUARTER WINDOW, LH	3K3
GLASS, QUARTER WINDOW, RH	3K3
GLASS, REAR DOOR WINDOW, LH	3E5
GLASS, REAR DOOR WINDOW, RH	3D5
GLASS, SPEEDOMETER	3D9
GLASS, WINDSHIELD	3F2
GRILLE, RADIATOR	3I1
GRILLE, SPEAKER	3M10
GRILLE, SPEAKER DOOR	3J4
GRIP ASSY, DOOR ASSIST, LH	3K6
GRIP ASSY, DOOR ASSIST, RH	3K6
GRIP ASSY, INSTRUMENT ASSIST	3K6
GRIP SUB-ASSY, ASSIST	3K6
GROMET (FOR SHIFT LEVER PLATE)	2C1
GROMMET (FOR CONTROL SHAFT LEVER)	2B1
GROMMET (FOR DIFFERENTIAL LOCK BRACKET)	2A6
GROMMET (FOR DIFFERENTIAL LOCK LEVER)	2A6
GROMMET (FOR DIFFERENTIAL LOCK ROD)	2A6
GROMMET (FOR FUEL INJECTOR)	1K4

PART NAME	LOCATION
WEATHERSTRIP, BACK DOOR GLASS	3K5
WEATHERSTRIP, FRONT DOOR OPENING TRIM, LH	3C4
WEATHERSTRIP, FRONT DOOR OPENING TRIM, RH	3C4
WEATHERSTRIP, FRONT DOOR, LH	3J4
WEATHERSTRIP, FRONT DOOR, RH	3J4
WEATHERSTRIP, LIFT GATE	3K5
WEATHERSTRIP, LIFT GATE, UPPER	3K5
WEATHERSTRIP, QUARTER WINDOW, LH	3K3
WEATHERSTRIP, QUARTER WINDOW, RH	3K3
WEATHERSTRIP, REAR DOOR QUARTER WINDOW, LH	3E5
WEATHERSTRIP, REAR DOOR QUARTER WINDOW, RH	3E5
WEATHERSTRIP, REAR DOOR, LH	3D5
WEATHERSTRIP, REAR DOOR, RH	3D5
WEATHERSTRIP, WINDSHIELD	3G2
WEIGHT, BALANCE (FOR DISC WHEEL)	2K5
WEIGHT, GOVERNOR	212
WHEEL ASSY, STEERING	2H7
WHEEL, DISC (FOR FRONT)	2K5
WHEEL, DISC (FOR REAR)	2K5
WHEEL, DISC (FOR SPARE)	2K5
WIRE SUB-ASSY, FRONT TURN SIGNAL LAMP BODY	3C8
WIRE SUB-ASSY, INDICATOR LAMP	2B1
WIRE, BACK DOOR, NO.1	3A9
WIRE, BACK DOOR, NO.2	3A9
WIRE, CENTER PILLER, NO.1	3A9
WIRE, CONSOLE BOX	3A9
WIRE, COWL	3M8
WIRE, COWL, NO.2	3M8
WIRE, ENGINE	3M8
WIRE, ENGINE, NO.4	3M8
WIRE, FLOOR	3A9
WIRE, FLOOR, NO.2	3A9
WIRE, FLOOR, NO.3	3A9
WIRE, FRAME	3A9
WIRE, FRONT DOOR, LH	3A9
WIRE, FRONT DOOR, RH	3M8
WIRE, INDICATOR (FOR DIFF LOCK)	3B9
WIRE, INSTRUMENT PANEL	3M8
WIRE, LUGGAGE ROOM, NO.1	3A9
WIRE, LUGGAGE ROOM, NO.2	3A9
WIRE, LUGGAGE ROOM, NO.3	3A9
WIRE, PARKING BRAKE, LH	2L8
WIRE, PARKING BRAKE, RH	2K8
WIRE, REAR DOOR, NO.1	3A9
WIRE, REAR DOOR, NO.2	3A9
WIRE, REAR WINDOW, NO.2	3A9
WIRE, ROOF, NO.1	3A9
WIRE, ROOF, NO.3	3A9
WIRE, TRANSMISSION	3M8
WIRING, COOLER, NO.1	3H11
WIRING, TO SOLENOID	3B9
WORM KIT, POWER STEERING	2J7
WRENCH, HUB NUT BOX	1A1
WRENCH, MONKEY	1A1
WRENCH, SPARK PLUG	1A1
WRENCH, WHEEL CAP	1B1
YOKE ASSY, STARTER	1G4
YOKE SUB-ASSY, UNIVERSAL JOINT SLEEVE	2L4
YOKE, STEERING WORM	2A7
YOKE, UNIVERSAL JOINT FLANGE	2L4

PART NAME	LOCATION

	PART NUMBER	LOCATION
	89669-60010-	3M9
P	90096-90022-	3C12
	90099-01458-	3C10
	-05141-	3C10
	-07048-	1E4
	-10110-	1E4
	-10113-	1G4
	-10116-	1E4
	-10133-	3B12
	-14020-	1D4
	-17112-	1G4
	-32103-	3D10
	-33332-	3D10
		3E10
	-52065-	1E4
	90101-10439-	2I8
	-12021-	2J8
	-12060-	2H8
	90105-06052-	2F5
		2G6
	-06069-	2I2
	-08114-	2E5
		2G6
	-10096-	2E2
		2K1
P	-10115-	2E1
	-10221-	1H3
	-11013-	2K4
B	-11030-	2E1
	-12018-	3J7
	-12053-	2C5
		2E6
	-13005-	1F1
	-14033-	1H1
	90106-12022-	2E9
	90109-06008-	2D8
	-10091-	2D5
	90113-03034-	2A1
	-10003-	2I5
	90114-11124-	2A6
	90116-06022-	1H1
	-08325-	2I5
		2K6
P	-10074-	2B5
P		2E6
	-10075-	2B5
		2E6
	-10076-	2B5
B	-10087-	1C3
	-10122-	2E6
	-10124-	2B5
	-12007-	2E9
	-12011-	1C3
	90117-14032-	2L9
	-14036-	2I9
	-14051-	2I9
	-14180-	2L9
	90119-08497-	2E1
	-08523-	2E1
	90170-08005-	1D2
	-10198-	1A2
B	-22058-	2L7
	90171-14042-	2L7
	90175-08008-	1F3

	PART NUMBER	LOCATION
	90176-08014-	1G1
	90179-96158-	3C10
	-08026-	3A10
	-10070-	1E3
	-12086-	2H7
	-22005-	2A4
	-22010-	1B2
	-22011-	2C5
		2H6
	-26004-	2G2
	90201-00566-	2B3
P	-12042-	2J3
	-16012-	2J3
	-16013-	2H1
	-22005-	2A4
	-22007-	2C5
		2H6
	-30003-	2J7
	-35002-	2E4
	-40551-	2C5
		2H6
	-40552-	2C5
		2H6
	-40553-	2C5
		2H6
	-40554-	2C5
		2H6
	-40555-	2C5
		2I6
	-40556-	2C5
		2I6
	-40557-	2C5
		2I6
	-40558-	2C5
		2I6
	-40559-	2C5
		2I6
	-40560-	2C5
		2I6
	-40561-	2C5
		2I6
	-79001-	2D5
		2F6
	-79002-	2D5
		2F6
	-79003-	2D5
		2F6
	-79004-	2D5
		2F6
	-79005-	2D5
		2F6
	-79006-	2D5
		2F6
	-79007-	2D5
		2F6
	-79008-	2D5
		2F6
	-79009-	2D5
		2F6
	-79010-	2D5
		2F6
	-79011-	2D5
		2F6
	-79012-	2D5

	PART NUMBER	LOCATION
	90201-79012-	2F6
	-79013-	2D5
		2F6
	-79014-	2D5
		2F6
	-79015-	2D5
		2F6
	-79016-	2D5
		2F6
	-79017	2D5
		2F6
	-79018-	2D5
		2F6
	-79019-	2D5
		2F6
	-79020-	2D5
		2F6
	-79021-	2D5
		2F6
	-79022-	2D5
		2F6
	-79023-	2D5
		2F6
	90202-10103-	2C9
P	90206-12001-	2J3
	90209-52001-	2E2
	-52002-	2E2
	-52003-	2E2
	-52004-	2E2
	90210-10001-	2L7
	-13001-	1G1
	90213-06013-	2K8
	-07010-	2K8
	90214-42030-	2L6
	90215-42025-	2L6
	90240-06158-	2I8
	-08042-	2B8
	-08128-	2G4
	-09001-	2B6
	-10148-	2A6
	-10157-	2G4
	90241-10017-	1A2
	90249-08068-	2K8
	-10017-	2C8
	90250-02016-	2D3
		2F3
	-03036-	2D3
	-03050-	2E3
		2E3
	-03051-	2A3
B		2C3
		2E3
		2M2
	-04054-	2A3
	-05008-	2E7
A	-07057-	2I5
		2K6
	-08024-	2H4
	-08120-	1F1
	-10006-	2B4
	-10192-	1I1
		2G1
	90253-16014-	1H1
	-17003-	1I1
	-18003-	1I1


	PART NUMBER	LOCATION
	90254-04012-	2J3
	-05016-	2F4
	90256-04001-	2B1
B	90280-03009-	1E2
B	-05008-	2E7
P	-05010-	1B2
P		1C2
	90281-07004-	1B2
	90282-03005-	2F3
B	-03006-	2D3
		2E3
		2F3
		2G3
	-03007-	2D3
		2G3
	90301-06005-	2H1
P	-06196-	2H1
	-07001-	1K4
		1L4
	-09008-	2E2
		2K1
	-09170-	2I1
	-11006-	2K3
	-14001-	2E8
	-18004-	2J1
	-19006-	1K4
	-21176-	1H2
	-22001-	2E7
	-22003-	2C3
	-24002-	2C3
	-26003-	2M2
	-28003-	2C3
	-29003-	2B3
		2M2
	-32002-	2J7
	-33002-	2K7
	-33006-	2C5
	-34004-	2D4
	-34005-	2D4
	-37004-	2B3
	-51001-	2K7
	-53002-	2F7
	-59003-	2K1
	-60001-	2D7
	-60122-	2A7
	-62004-	2A2
	-64002-	2K7
	-64005-	2K7
	-65145-	2K7
	-94002-	2F2
	-99027-	2A2
		2K1
	-99028-	2A2
	-99029-	2F1
	-99050-	2D2
		2F2
		2L1
	-99631-	2D2
		2L1
	90310-09001-	2J1
	-35001-	2I5
	90311-12002-	2J3
	-13066-	2H4
	-19002-	2K7


	PART NUMBER	LOCATION
	90311-24001-	2D7
	-33085-	2H6
B	-38035-	2C5
		2E6
P	-38134-	2C5
		2E6
	-42010-	2F1
	-45008-	1J1
	-47001-	2I5
	-48009-	2B4
	-48010-	2B4
	-62001-	2J5
		2K6
	-99005-	1B2
	90312-32002-	2K7
P	90313-13001-	2F4
P		2E6
	-93001-	2I5
B	-93011-	2F9
B		2E6
	90316-48003-	2A4
	90331-48010-	1C2
	90334-07009-	1F1
	90339-04009-	2D3
	-04010-	2F3
B	-04011-	2E3
B		2E6
	-04012-	2F3
	-04014-	2A1
	-04015-	2D3
P	-04016-	2G3
P	-04017-	2D3
		2E3
		2F3
		2G3
	-04019-	2E3
B	-04021-	2F3
B	-05008-	2D3
	-05009-	2G3
	-06004-	2D3
	-06008-	2G3
	-06009-	2D3
	90340-14001-	1F1
	-25001-	2M7
P	90341-08001-	2G1
	-12012-	1I1
	-15001-	2F4
	-16010-	2H1
	-18006-	2B4
		2F5
B		2H6
	-18057-	2B4
		2F5
		2H1
		2H6
	-26001-	2F5
		2G6
	90344-54003-	1I1
	90345-51025-	1C3
	-53020-	2E9
	90360-06004-	2B3
		2C3
	-06021-	2K7
	-09001-	2B3
	-10003-	2E5
		2F4
		2G6


	PART NUMBER	LOCATION
	90363-17004-	2E7
	-18001-	2M6
	-28001-	2M6
	-30007-	2M6
	-35013-	2D4
		2E4
	-35022-	2G2
	-45008-	2G2
	90364-17010-	2E4
	-32003-	2K7
	-38012-	2D4
	-40001-	2D4
	90365-47013-	2I5
	90366-17001-	2F9
P	-30011-	2C5
P		2E6
B	-30038-	2C5
B		2E6
	-35011-	2E4
	-35054-	2E4
	-40004-	2C5
		2E6
B	-40059-	2C5
B		2E6
	-60002-	2D5
		2F6
P	90368-45066-	2D5
P		2H6
	-45087-	2J5
		2L6
	-49084-	2J5
		2K6
B	-50024-	2D5
B		2H6
	90369-22004-	2K7
	90374-25004-	2L1
	-28007-	2L1
	-30003-	2J7
	-34001-	2A2
		2B2
		2H2
		2L1
P	90381-33001-	2E9
B	-33002-	2E9
	90385-10064-	2D9
	-12029-	2A8
	-16008-	2A1
	-19003-	2I9
	-19057-	2A10
	90386-08155-	3M7
	-09009-	2F5
		2G6
	-13014-	2B6
	-13192-	2C8
	90387-06065-	2A1
	-08002-	2B7
B	-08099-	2C9
B		2D9
	-09006-	2J9
	-09011-	2A6
	-10004-	2C8
	90389-02001-	3D9
	-08005-	2B1
	-18002-	2H9


3A1 (51-51) 1


Frame

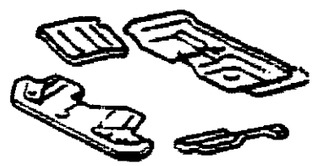
3C1 (51-52) 2

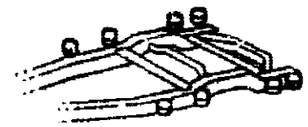Crossmember & Under Cover

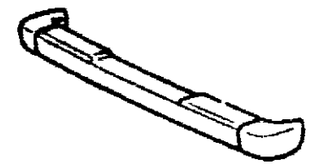3E1 (52-51) 3

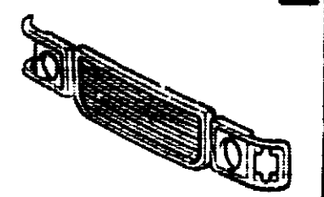Cab & Body Mounting

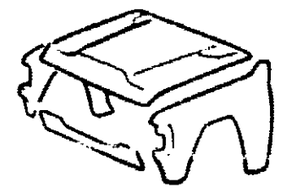
3G1 (52-52) 4

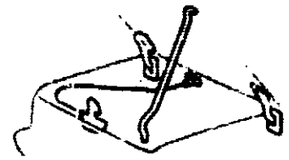Front Bumper & Stay


3J1 (53-51) 5

Radiator Grille

3J1 (53-53) 6

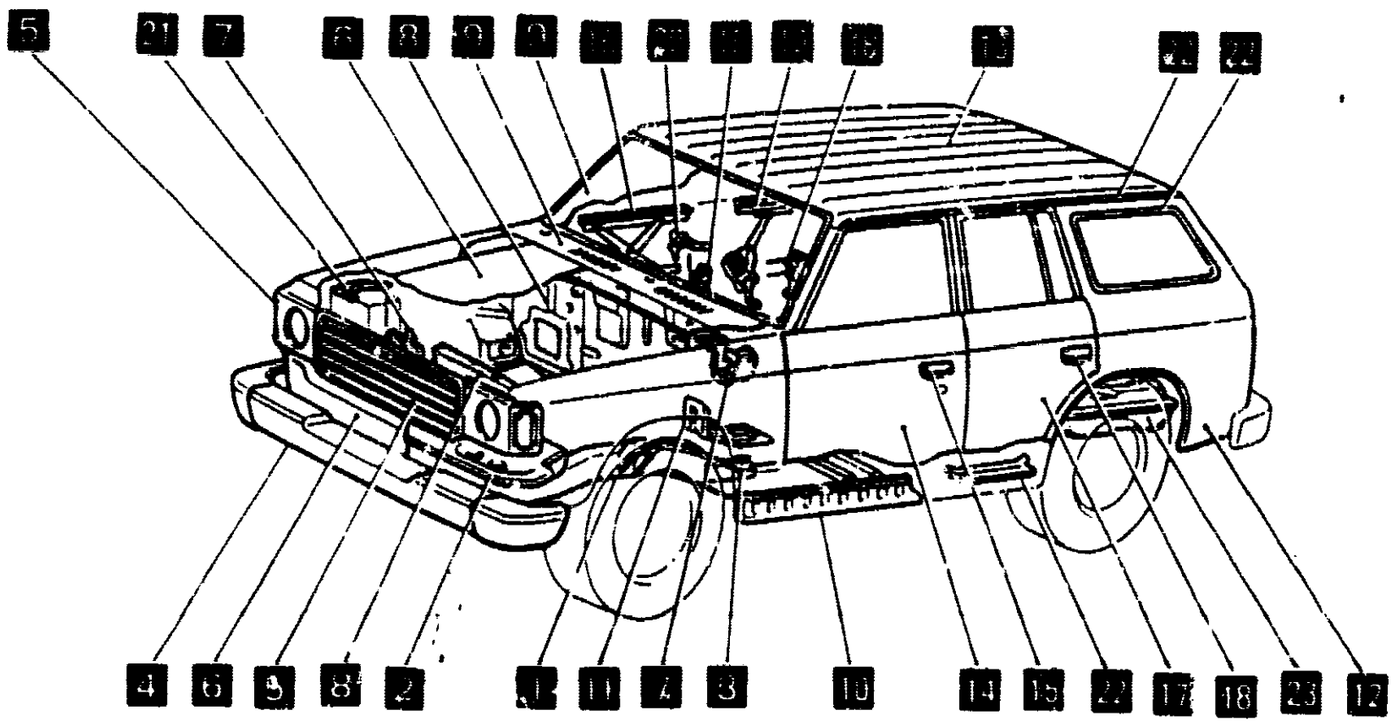Hood & Front Fender

3L1 (53-54) 7

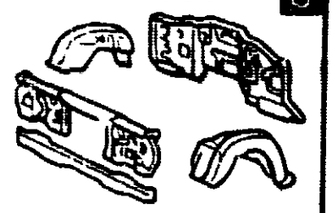Hood Lock & Hinge


BODY GROUP (1/2)



3M1 (53-55) 8

Front Fender Apron


3F2 (55-53) 9

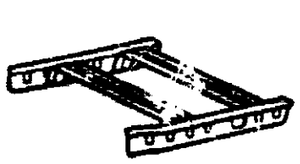Cowl Panel & Glass

3H2 (57-51) 10

Floor Member

3A3 (58-53) 11

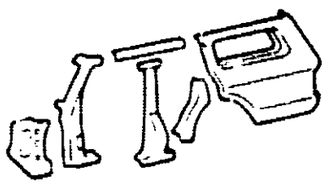Floor Insulator


3G3 (61-51) 12

Side Member


3L3 (61-53) 13

Roof Panel & Back Panel

3H4 (67-51) 14

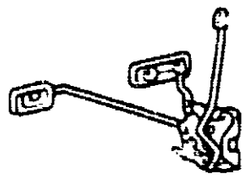Front Door Panel & Glass

3L4 (67-53) 15

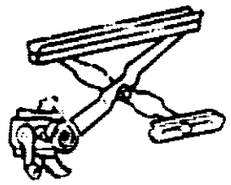Front Door Lock & Handle


3A5 (67-54) 16

Front Door Regulator & Hinge


3C5 (67-55) 17


Rear Door Panel & Glass


3F5 (67-56) 18

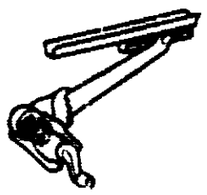
Rear Door Lock & Handle

3H5 (67-57) 19

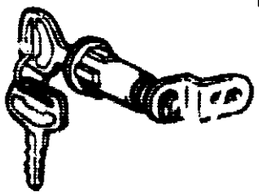Rear Door Regulator & Hinge

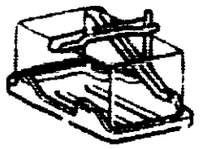3A6 (67-65) 20

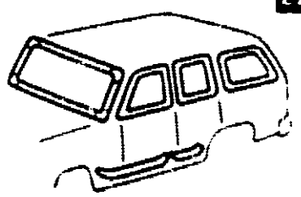Lock Cylinder Set

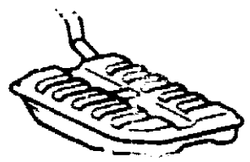3L6 (74-54) 21

Battery Carrier

3D7 (75-52) 22

Moulding

3H7 (77-51) 23

Fuel Tank & Tube

PART NAME	LOCATION
GROMMET (FOR HIGH & LOW SHIFT ROD)	2G4
GROMMET (FOR HOOD SUPPORT ROD)	3L1
GROMMET (FOR PARKING BRAKE FRONT CABLE)	2A8
GROMMET (FOR VENTILATION SYSTEM)	1L1
GROMMET OR RING, O (FOR STEERING COLUMN CLAMP)	2A7
GUIDE, BALL	2K7
GUIDE, FRONT DOOR LOCKING LINK	3M4
GUIDE, OIL LEVEL GAGE	1I1
GUIDE, REAR DOOR LOCKING LINK	3G5
GUSSET, CROSSMEMBER, NO.2 LH	3B1
GUSSET, CROSSMEMBER, NO.2 RH	3A1
GUSSET, QUARTER WHEEL HOUSE, REAR LH	3I3
GUSSET, QUARTER WHEEL HOUSE, REAR RH	3I3
HANDLE ASSY, BACK DOOR INSIDE	3M5
HANDLE ASSY, FRONT DOOR WINDOW REGULATOR	3A5
HANDLE ASSY, FRONT DOOR, OUTSIDE LH	3L4
HANDLE ASSY, FRONT DOOR, OUTSIDE RH	3L4
HANDLE ASSY, REAR DOOR OUTSIDE, LH	3F5
HANDLE ASSY, REAR DOOR OUTSIDE, RH	3F5
HANDLE ASSY, REAR DOOR WINDOW REGULATOR	3H5
HANDLE SUB-ASSY, FRONT DOOR INSIDE, LH	3L4
HANDLE SUB-ASSY, FRONT DOOR INSIDE, RH	3L4
HANDLE SUB-ASSY, REAR DOOR INSIDE, LH	3F5
HANDLE SUB-ASSY, REAR DOOR INSIDE, RH	3F5
HANDLE, RECLINING ADJUSTER RELEASE, LH	3G6
HANDLE, RECLINING ADJUSTER RELEASE, RH	3G6
HANGER, TRANSMISSION,NO.1	2H1
HANGER, TRANSMISSION,NO.2	2H1
HARNESS SUB-ASSY, COOLER WIRING, NO.1	3G11
HEAD SUB-ASSY, CYLINDER	1F1
HEAD, COOLER COMPRESSOR CYLINDER	3B12
HEADLAMP ASSY, LH	3B8
HEADLAMP ASSY, RH	3A8
HEADLINING ASSY, ROOF	3E4
HEADREST ASSY, FRONT SEAT	3F6
HEADREST ASSY, REAR SEAT	3F6
HEATER ASSY	3F11
HINGE ASSY, BACK DOOR, UPPER	3L5
HINGE ASSY, FRONT DOOR, LOWER LH	3A5
HINGE ASSY, FRONT DOOR, LOWER RH	3A5
HINGE ASSY, FRONT DOOR, UPPER LH	3A5
HINGE ASSY, FRONT DOOR, UPPER RH	3L1
HINGE ASSY, HOOD, LH	3L1
HINGE ASSY, HOOD, RH	3H5
HINGE ASSY, REAR DOOR, LOWER LH	3H5
HINGE ASSY, REAR DOOR, LOWER RH	3H5
HINGE ASSY, REAR DOOR, UPPER LH	3H5
HINGE ASSY, REAR DOOR, UPPER RH	3L5
HINGE ASSY, TAIL GATE	3D2
HINGE SUB-ASSY, GLOVE COMPARTMENT DOOR	3D6
HINGE SUB-ASSY, REAR SEAT CUSHION	1G4
HOLDER ASSY, STARTER BRUSH	2G6
HOLDER, FRONT DIFFERENTIAL PINION SHAFT	3K4
HOLDER, FRONT DOOR LOCK CONTROL KNOB	3L1
HOLDER, HOOD STAY	2E5
HOLDER, PINION SHAFT	3E5
HOLDER, REAR DOOR LOCK CONTROL KNOB	3G11
HOLDER, THERMISTOR	3K6
HOLDER, VISOR	[illegible]
HOOD SUB-ASSY	3M2
HOOK SUB-ASSY, ROPE	3C1
HOOK, NO.1	3F4
HOOK, ROOF HEADLINING SUPPORT	3B11
HORN ASSY, HIGH PITCHED	3B11
HORN ASSY, LOW PITCHED	

PART NAME	LOCATION
HOSE (FOR AIR SUCTION SILENCER)	1I3
HOSE (FOR BREATHER PLUG)	2H1
HOSE (FOR EGR VACUUM MODULATOR)	1M4
HOSE (FOR EXTRACT NOZZLE)	3F2
HOSE (FOR PIPE TO UNION)	1C3
HOSE (FOR WATER BY-PASS PIPE)	1K2
HOSE ASSY, FUEL RETURN	3J7
HOSE OR PIPE (FOR RADIATOR RESERVE TANK)	1L2
HOSE SUB-ASSY, FRONT AXLE BREATHER	2H6
HOSE SUB-ASSY, REAR AXLE BREATHER	2G5
HOSE, AIR CLEANER, NO.1	1F3
HOSE, AIR CLEANER, NO.2	1F3
HOSE, AIR CLEANER, NO.3	1G3
HOSE, AIR, NO.1 (FOR IDLE SPEED CONTROL VALVE)	1J4
HOSE, BREATHER	1L2
HOSE, CHARCOAL CANISTER	3K7
HOSE, CHECK VALVE TO BRAKE BOOSTER	2G8
HOSE, COOLER REFRIGERANT DISCHARGE, NO.1	3M11
HOSE, COOLER REFRIGERANT RIQUID, NO.1	3M11
HOSE, COOLER UNIT DRAIN, NO.1	3G11
HOSE, FLEXIBLE (FOR BRAKE TUBE)	2B9
HOSE, FLEXIBLE (FOR FRONT)	2B9
HOSE, FLEXIBLE (FOR REAR BRAKE TUBE)	2C9
HOSE, FUEL	1L4
HOSE, FUEL (FOR FUEL EVAPORATIVE SEPARATOR)	3J7
HOSE, FUEL (FOR FUEL FILTER INLET)	1L4
HOSE, FUEL PUMP	1K4
HOSE, FUEL TANK TO FILLER PIPE	3J7
HOSE, FUEL, NO.1 (FOR EMISSION TUBE, NO.1)	3J7
HOSE, FUEL, NO.1 (FOR FUEL TANK TO CANISTER NO.3 TUBE)	3K7
HOSE, FUEL, NO.1 (FOR FUEL TANK TO CANISTER TUBE)	3J7
HOSE, FUEL, NO.1(FOR FUEL TANK TO CANISTER CENTER TUBE)	3K7
HOSE, FUEL, NO.2 (FOR FUEL RETURN TUBE)	3J7
HOSE, FUEL, NO.2 (FOR FUEL TANK TO CANISTER NO.3 TUBE)	3K7
HOSE, HEADLAMP CLEANER, NO.1	3G10
HOSE, HEATER WATER INLET, A (FROM ENGINE)	3L11
HOSE, HEATER WATER INLET, B	3L11
HOSE, HEATER WATER INLET, E (TO HEATER UNIT)	3L11
HOSE, HEATER WATER OUTLET, A(FROM HEATER UNIT)	3L11
HOSE, HEATER WATER OUTLET, E (TO ENGINE)	3L11
HOSE, NO.1 (FOR AIR INJECTION SYSTEM)	1I3
HOSE, NO.2 (FOR AIR INJECTION SYSTEM)	1I3
HOSE, NO.3 (FOR AIR INJECTION SYSTEM)	1I3
HOSE, NO.4 (FOR AIR INJECTION SYSTEM)	1I3
HOSE, OIL COOLER	1H2
HOSE, OIL COOLER INLET, NO.1	2L3
HOSE, OIL COOLER INLET, NO.2	2L3
HOSE, OIL COOLER OUTLET, NO.1	2L3
HOSE, OIL COOLER OUTLET, NO.2	2L3
HOSE, POWER STEERING OIL COOLER INLET	2G7
HOSE, POWER STEERING OIL COOLER OUTLET	2G7
HOSE, RADIATOR, INLET	1L2
HOSE, RADIATOR, OUTLET	1L2
HOSE, REAR HEATER WATER INLET, B	3L11
HOSE, REAR HEATER WATER INLET, E (TO HEATER UNIT)	3L11
HOSE, REAR HEATER WATER OUTLET, A (FROM HEATER UNIT)	3L11
HOSE, REAR HEATER WATER OUTLET, B	3L11
HOSE, REAR HEATER WATER OUTLET, C	3L11
HOSE, REAR HEATER WATER OUTLET, E (TO ENGINE)	3L11
HOSE, REAR WASHER (FROM JOINT TO JOINT OR NOZZLE)	3F10
HOSE, REAR WASHER (FROM MOTOR TO JOINT OR NOZZLE)	3F10
HOSE, SUCTION	3M11
HOSE, UNION TO CHECK VALVE	2G8
HOSE, VACUUM, NO.1 (FOR FRONT DRIVE SHIFT)	2J4
HOSE, VACUUM, NO.2 (FOR FRONT DRIVE SHIFT)	2J4

MARK & ABBREVIATION LIST

MARK.ABBREVIATION	DEFINITION
A	AMPERES
ABV	AIR BY-PASS VALVE
ACCUMULATOR	ACCUMULATOR
ACV	AIR CONTROL VALVE
ADJUSTABLE SEAT	ADJUSTABLE SEAT
ADJUSTER	ADJUSTER
AERODYNAMIC PACKAGE	AERODYNAMIC PACKAGE
AI	AIR INJECTION
AIR CLEANER	AIR CLEANER
AIR CONDITIONER	AIR CONDITIONER
AIR MIX	AIR MIX
AIR PUMP	AIR PUMP
AIR-CON =AIC	AIR CONDITIONER
AISAN	MANUFACTURER
AISIN	MANUFACTURER
ALTERNATOR	ALTERNATOR
ALTITUDE	ALTITUDE
ALUMI	ALMINUM
AM/FM	AM/FM
AM/SW	AM/SW
AMBER-RED-CLEAR	AMBER-RED-CLEAR
ANGLE	ANGLE
ANTI BOTTOMING	ANTI BOTTOMING
ARAI	MANUFACTURER
ARAKAWA	MANUFACTURER
ARCH	ARCH
AREA	AREA
ARMREST	ARMREST
ASV	AIR SWITCHING VALVE
ATM	AUTOMATIC TRANSMISSION
AUSTRIA	AUSTRIA
AUXILIARY	AUXILIARY
AXC	AXLE CODE (STATED IN TRANS/AXLE OF NAME PLATE)
AXLE	AXLE
BACK	BACK
BATTERY	BATTERY
BEIGE	BEIGE
BELGIUM	BELGIUM
BELT	BELT
BENCH SEAT	BENCH SEAT
BIG	BIG
BLACK	BLACK
BLADE	BLADE

MARK.ABBREVIATION	DEFINITION
BLUE	BLUE
BLUE MICA	BLUE MICA
BLUISH GRAY	BLUISH GRAY
BODY	BODY
BOOSTER	BOOSTER
BRIDGESTONE	MANUFACTURER
BRK	BRAKE
BROWN	BROWN
BSTR	BOOSTER
BUMPER	BUMPER
BV	BOOST VENTILATOR
BVSV	BIMETAL VACUUM SWITCHING VALVE
CARPET	CARPET
CARRIER	CARRIER
CARTRIDGE	CARTRIDGE
CAST IRON BODY	CAST IRON BODY
CHARGE	CHARGE
CHASSIS	CHASSIS
CHINA	CHINA
CHROME PLATED	CHROME PLATED
CITIZEN	MANUFACTURER
CKD	COMPLETE KNOCK DOWN
CLEANER	CLEANER
CLOCK	CLOCK
CM	CENTIMETERS
COLD	COLD
COLLAPS(BLE STEERING	COLLAPSIBLE STEERING
CONNECTOR	CONNECTOR
CONSOLE	CONSOLE
COOLER	COOLER
CR-PLATED	CHROME PLATED
CTR	CENTER
CW	COIL WINDING
D GRAY	DARK GRAY
D. BLUE	DARK BLUE
D=	DIAMETER (MM)
DEF	DEFOGGER
DEFROSTER	DEFROSTER
DENMARK	DENMARK
DENSO	MANUFACTURER
DIFF	DIFFERENTIAL
DIFFERENTIAL	DIFFERENTIAL
DIRECT	DIRECT
DISC BRAKE	DISC BRAKE

PART NUMBER	LOCATION
90389-18002-	2L9
90401-08004-	1L4
-12097-	1L4
-14093-	1F2
-18083-	1H2
90402-16042-	1F2
-26002-	1M4
90404-10018-	2G5
-10019-	2H6
-14012-	1J3
-16008-	1F2
-16022-	2K3
-26003-	1M4
-51093-	2J4
-51319-	2G8
-54035-	1C3
90407-10004-	2D8
-14005-	2K3
-16006-	2K3
-16013-	2K3
90410-11005-	1F2
-18002-	1M4
90413-04005-	2J4
-10042-	2B9
-10106-	2C9
-10214-	2B9
90430-06104-	2D8
-08009-	1L4
-08011-	1L4
-09253-	2D8
	2E8
-10022-	2I4
-12005-	1L4
-12011-	1I1
-12019-	1I1
-12245-	3J7
-15261-	1F2
-18008-	2A4
-18012-	1H2
-26302-	2F5
	2G6
-43002-	1K2
90445-11072-	2H1
-12065-	1L2
-12078-	1L2
P -14072-	3G10
-16038-	1L1
-18089-	2G7
-18090-	2G7
-22015-	3J7
-22004-	3J7
-31018-	1I3
90446-06013-	3F10
-06292-	3F10
90447-12058-	3K7
90460-01001-	2G7
90461-10387-	2H6
-10558-	2G5
90462-12038-	2K3
90464-00105-	1C4
-00208-	1C4
90467-06161-18	3E4
-07041-03	3E3
P -07041-06	3E3

PART NUMBER	LOCATION
90467-08011-	3F2
	3J1
-09014-	3J1
-11085-	1L2
P -12035-03	3B3
P -12035-06	3B3
-13001-	1J4
	1K2
	1K4
-15120-	1L1
-16001-	2E8
-16002-	2G8
-18002-	1L1
-22003-	1J4
-23001-	1J3
-28003-	1I3
-31110-	2C9
-32002-	2L7
-42001-	1L2
90468-12003-	2I8
-18071-	3E6
90480-01336-	2A6
-13005-	1K4
-13012-	2A6
-15002-	3L1
-17019-	2A6
-17158-	2A8
-17177-	2B1
-17401-	2G4
-18001-	1L1
-20016-	2A6
90501-06043-	2E3
-07005-	2B1
-07009-	2B1
-07040-	2E3
-07042-	2F3
-07049-	2E3
	2F3
-07065-	2I2
-08062-	2F3
-08075-	2G3
-08095-	2D3
-09056-	2D3
-10087-	2K1
-10092-	2A2
-10094-	2A3
-10098-	2B3
-10099-	2G3
-10107-	2C3
-10108-	2B2
-10126-	2G3
B -10138-	2A8
-10745-	2A8
-11024-	2A3
-11030-	2A3
-11041-	2E3
-12083-	2G3
-12086-	2I2
-12090-	2A3
-12099-	2H7
-12103-	2E7
-14087-	1D2
-15006-	2E3
-16115-	2F4


PART NUMBER	LOCATION
90501-17008-	2F5
-18677-	2F1
-19002-	2B3
-20012-	2J8
-20083-	2F5
	2H6
-23014-	2F7
-27008-	2B3
-29003-	2G4
-30014-	2C3
-33004-	2M2
-40008-	2B3
-45011-	2A7
-45114-	2M7
-45342-	1C2
90502-16004-	1D2
90503-04003-	2B3
90506-12031-	2K8
-12451-	2C8
-18031-	2K8
-20033-	2L8
-23009-	2M6
-26011-	2J8
-26014-	2K8
90507-14001-	2B7
90508-29017-	3M7
-30004-	2J3
90520-01002-	3A5
	3H5
-15001-	2E7
-17042-	2M6
-22013-	2H2
-27091-	2J6
-28036-	2J6
-29024-	2L4
-29025-	2L4
-29026-	2L4
-29027-	2L4
-29051-	1C2
-31001-	2K6
-33009-	2E2
-33107-	2E4
-33110-	2E4
-50001-	2A2
	2B2
	2L1
-87001-	2F2
90521-01002-	2A7
-22011-	2A7
-22012-	2A7
-22013-	2A7
-25002-	1A2
-44002-	2D7
	2K7
-75023-	2E4
-90002-	2L1
-99017-	2B2
	2L1
-99018-	2H2
-99019-	2L1
-99021-	2D2
	2F2
	2H2
	2K1

PART NUMBER	LOCATION
90521-99021-	2L1
-99040-	2H2
-99041-	2H2
-99042-	2G2
-99043-	2K1
90522-32011-	2L7
-40043-	2H8
-48044-	2H8
90523-05002-	2J2
-06004-	2B3
-06005-	2E3
	2F3
90524-15008-	1D2
90541-03015-	3D2
-06008-	2C8
-08003-	3K7
90560-06009-	1F3
-10406-	2G4
-20008-	2J3
A -32949-	1B4
A -35008-	2D4
A -35009-	2G2
A -38003-	2E4
A -72001-	2G2
-72002-	2G2
-72003-	2G2
90561-04010-	2H7
-06006-	2I2
-09005-	1L2
-10004-	1K4
90562-18151-	2D8
-30002-	2J7
-31002-	2K7
-32002-	2K7
-48001-	2J7
-67002-	2K7
90564-06002-	2G3
-70001-	2D4
-70002-	2D4
-70003-	2D4
-70004-	2D4
-70005-	2D4
-70006-	2D4
-70007-	2D4
-70008-	2D4
-70009-	2D4
-70010-	2D4
-70011-	2E4
-70012-	2E4
-70013-	2E4
90587-08001-	2A6
90910-01006-	1D2
-01012-	1D2
-02050-	1F1
-02057-	1H1
-04012-	3F2
-12079-	1M3
90913-02048-	1C2
-03005-	1D2
-03012-	1D2
-05020-	1D2
90915-01014-	1I1
90916-02141-	1A3
-02193-	1A3
-03052-	1K2

PART NUMBER	LOCATION
90916-03071-	1K2
90917-06004-	1E3
-06012-	1E3
-06023-	1E3
-06024-	1E3
-10049-	1M3
-10065-	2J4
-10076-	1J3
-11023-	1M3
90919-01064-	1B4
-02113-	1B4
-03086-	1C4
-12745-	1B4
-12746-	1B4
-12747-	1B4
-12748-	1B4
-12749-	1C4
-12750-	1C4
-12949-	1B4
-12950-	1C4
-12951-	1B4
-12952-	1B4
-12953-	1C4
-12954-	1C4
-13271-	1B4
-13328-	1B4
-21410-	1B4
90923-01349-	1L4
-01350-	1L4
-05011-	1H1
90925-03057-	1M3
90929-01189-	1M4
-01192-	1C4
90930-03075-	2B4
-03094-	2G1
90937-01117-	2I5
-01118-	2I5
-01119-	2I5
-01121-	2I5
-01122-	2I5
-01132-	2K4
-01147-	2K4
-01148-	2K4
-01149-	2K4
-01150-	2K4
-01151-	2K4
-01152-	2K4
-01184-	2K4
-01191-	2K4
-01192-	2K4
-01193-	2K4
-01194-	2K4
-01268-	2K4
-01269-	2K4
-01408-	2I5
-01409-	2I5
-01410-	2I5
-01411-	2I5
-01412-	2I5
-01413-	2I5
-01414-	2I5
-01415-	2I5
-01416-	2I5
-01417-	2I5

PART NUMBER	LOCATION
S 90937-01418-	2I5
S -01419-	2I5
90942-01047-	2K5
-02052-	2J5
-02053-	2K6
-03079-	2K5
-03080-	2K5
-03081-	2K5
-03082-	2K5
-03083-	2K5
-03084-	2K5
-03085-	2K5
-03086-	2K5
-03107-	2K5
-05009-	2L5
90945-02034-	2M6
-02038-	2M6
90948-01031-	2I9
-02015-	2J9
-02017-	2I9
-02032-	2J9
-02033-	2D9
-02114-	2I9
-03011-	2A10
	2I9
P 90950-01073-03	3E3
P -01073-06	3E3
S 90980-05022-	3K10
S -05067-	3K10
S -05106-	3K10
S -05110-	3K10
N -05127-	3K10
-07003-	3M8
-07048-	3M8
-07251-	3M8
90981-05034-	3A8
-05035-	3A8
P -11004-	3J8
-11010-	3E9
-11018-	3D9
	3J8
P -11020-	3E8
P	3I8
P -12010-	3D8
90982-01414-	3K8
-02207-	3K8
-05030-	3K8
-08251-	3B9
-09002-	3H9
-09003-	3H9
-09004-	3H9
-09005-	3H9
90987-01003-	3J9
-02004-	3H9
	3K9
-02006-	3J9
-03001-	3J9
-04002-	3J9
90999-00066-	3A6
-00104-	3A6
-73072-	1A2
S -92003-	2J4
91121-51070-	2C8
91511-60850-	2F1

BODY GROUP (2/2)

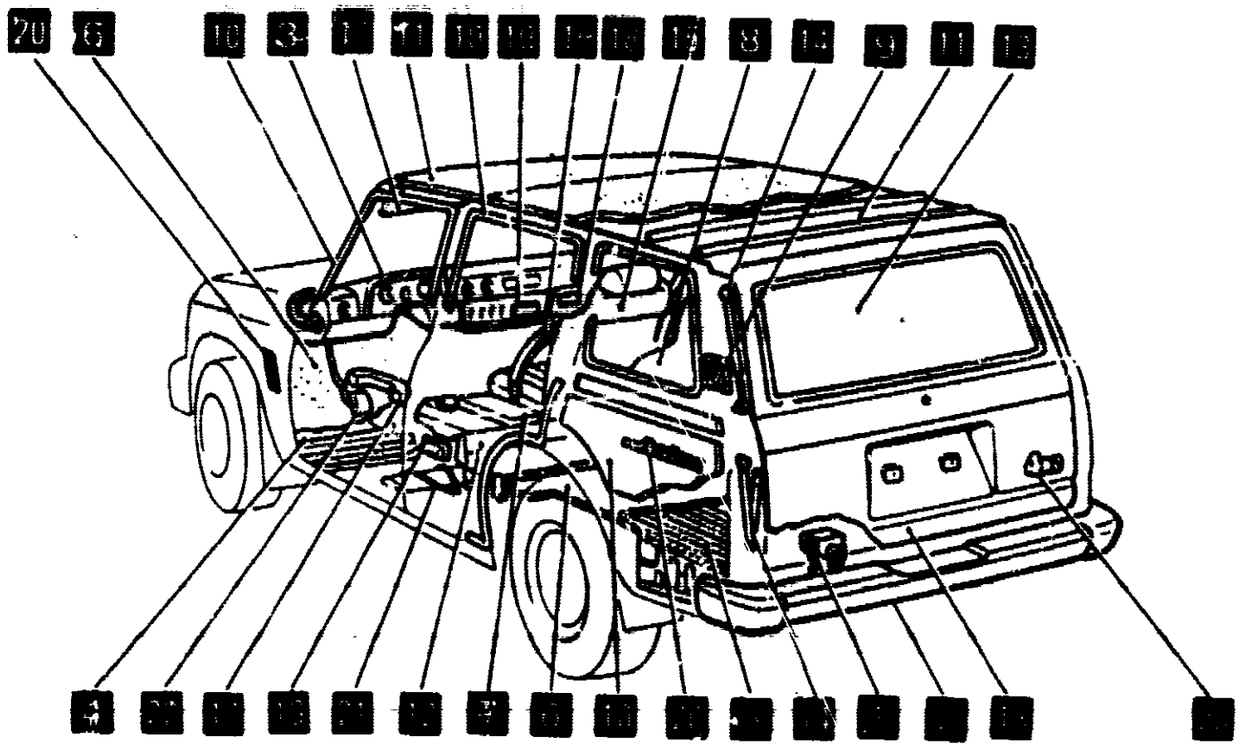

3D1 (51-53) 1


Spare Wheel Carrier

3H1 (52-53) 2

Rear Bumper & Stay

3B2 (55-51) 3

Instrument Panel

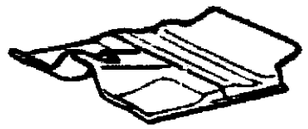312 (58-51) 4

Front Floor Panel & Mamber

3L2 (58-52) 5

Rear Floor Panel & Member

3B3 (58-54) 6

Floor Mat & Pad


3G7 (75-54) 7

Tool Box & License Bracket

3B7 (75-51) 20
TOYOTA
4WD
Emblem & Name Plate


3A7 (74-56) 10

Ash Receptacle

3M6 (74-55) 18

DIESEL
Caution Plate

3L7 (78-51) 23

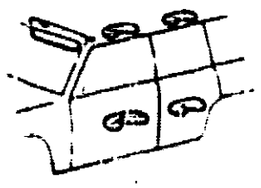Accelerator Link


3J6 (74-51) 17

Armrest & Visor

3H6 (71-52) 16

Seat Belt


3C6 (71-51) 15

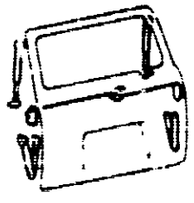
Seat & Seat Track

3L5 (67-62) 14

Back Door Lock & Hinge

3J5 (67-61) 13

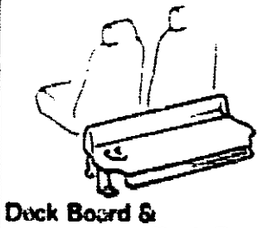Back Door Panel & Glass

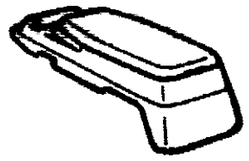3G4 (64-55) 12

Deck Board & Deck Trim Cover

3D3 (58-55) 9

Console Box

3K3 (61-52) 8


Side Window

3A4 (61-55) 21

Rear & Roof Ventilator

3B4 (64-51) 22

Inside Trim Board

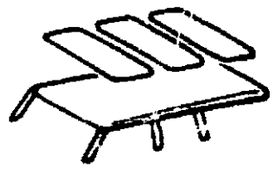3E4 (64-52) 11

Roof Headling & Pad

MB M500

PART NAME	LOCATION
HOSE, VACUUM, NO.3 (FOR FRONT DRIVE SHIFT)	2J4
HOSE, VENTILATION, NO.2	1L1
HOSE, VENTILATION, NO.3	1L1
HOSE, VENTILATION, NO.4	1L1
HOSE, WATER BY-PASS	1K2
HOSE, WATER BY-PASS, NO.1	1J4
HOSE, WATER BY-PASS, NO.2	1J4
	1K2
HOSE, WINDSHIELD WASHER (FROM JOINT TO JOINT OR NOZZLE)	3D10
HOSE, WINDSHIELD WASHER (FROM JOINT TO NOZZLE)	3E10
HOSE, WINDSHIELD WASHER (FROM MOTOR TO JOINT OR NOZZLE)	3D10
HOUSING ASSY, FRONT AXLE	2H6
HOUSING ASSY, REAR AXLE	2F5
HOUSING ASSY, STARTER DRIVE	1G4
HOUSING SUB-ASSY, HEADLAMP, LH	3A8
HOUSING SUB-ASSY, HEADLAMP, RH	3A8
HOUSING SUB-ASSY, POWER STEERING GEAR	2K7
HOUSING SUB-ASSY, VALVE	2J7
HOUSING SUB-ASSY, VANE PUMP, FRONT	2D7
HOUSING SUB-ASSY, VANE PUMP, REAR	2D7
HOUSING, AUTOMATIC TRANSMISSION	2H1
HOUSING, POSITION INDICATOR, LOWER	2B1
HOUSING, POSITION INDICATOR, UPPER	2B1
HOUSING, WATER OUTLET	1K2
HUB (OR SHAFT) & BRAKE DRUM REAR AXLE, RH	2J5
HUB ASSY, FREE WHEEL	2L6
HUB SUB-ASSY, FRONT AXLE	2K6
HUB SUB-ASSY, MAGNET CLUTCH	3C12
HUB, BOOSTER REACTION DISK	2G8
HUB, FRONT CLUTCH	2A2
HUB, REAR AXLE	2I5
HUB, REAR CLUTCH	2B2
HUB, TRANSFER CLUTCH	2E4
IGNITER ASSY	3K9
INJECTOR ASSY, COLD START FUEL	1K4
INJECTOR ASSY, FUEL	1K4
INSULATOR ASSY, COWL TOP	3F2
INSULATOR ASSY, DASH PANEL	3A2
INSULATOR SUB-ASSY, MAIN MUFF HEAT, FRONT	3A3
INSULATOR SUB-ASSY, MAIN MUFF HEAT, REAR	3A3
INSULATOR, COOLER CONDENSER MOUNTING	3M11
INSULATOR, DASH PANEL HEAT, NO.1	3A2
INSULATOR, ENGINE MOUNTING, FRONT	1K1
INSULATOR, ENGINE MOUNTING, REAR NO.1	1K1
INSULATOR, EXHAUST MANIFOLD HEAT, NO.1	1C3
INSULATOR, EXHAUST MANIFOLD HEAT, NO.2	1C3
INSULATOR, EXHAUST MANIFOLD HEAT, NO.3	1C3
INSULATOR, FRONT FLOOR HEAT, NO.1	3A3
INSULATOR, FRONT FLOOR HEAT, NO.2	3A3
INSULATOR, FRONT FLOOR HEAT, NO.3	3A3
INSULATOR, HOOD	3J1
INSULATOR, INJECTOR VIBRATION	1L4
INSULATOR, LOAD SENSING VALVE HEAT	2B9
INSULATOR, RADIATOR MOUNTING	1L2
JAR ASSY, HEADLAMP CLEANER WASHER	3G10
JAR ASSY, REAR WASHER	3F10
JAR ASSY, WINDSHIELD WASHER	3D10
JOINT, HEADLAMP CLEANER HOSE	3G10
JOINT, REAR WASHER ELBOW	3F10
JOINT, REAR WASHER HOSE, NO.1	3F10
JOINT, WINDSHIELD WASHER HOSE	3D10
KEY (FOR CRANKSHAFT TIMING GEAR)	1B2
KEY, BLANK	3A6
KEY, BOOSTER VALVE PLUNGER	2G8
KEY, CRANKSHAFT (FOR CRANKSHAFT PULLEY SET)	1B2

PART NAME	LOCATION
KEY, OIL PUMP DRIVE SHAFT	1E2
KEY, STRAIGHT (FOR ACCUMULATOR CONTROL VALVE NO.1)	2G3
KEY, STRAIGHT (FOR CUT BACK VALVE)	2E3
KEY, STRAIGHT (FOR DETENT REGULATOR VALVE)	2D3
KEY, STRAIGHT (FOR INTERMEDIATE MODULATOR VALVE)	2D3
KEY, STRAIGHT (FOR LOW COAST SHIFT VALVE)	2D3
KEY, STRAIGHT (FOR LOW MODULATOR VALVE)	2D3
KEY, STRAIGHT (FOR MANUAL DOWN TIMING VALVE)	2G3
KEY, STRAIGHT (FOR SECONDARY REGULATOR VALVE)	2F3
KEY, STRAIGHT (FOR 2ND LOCK VALVE)	2F3
KEY, STRAIGHT (FOR 3-2 KICK DOWN ORIFICE CONTROL VALVE)	2G3
KEY, STRAIGHT (FOR 3RD COAST SHIFT)	2F3
KEY, VANE PUMP PULLEY	2E7
KEY, WOODRUFF (FOR TIMING GEAR)	1C2
KNOB AND ELEMENT ASSY, CIGARETTE LIGHTER	3J9
KNOB RADIO RECEIVER	3K10
KNOB SUB-ASSY, SHIFT LEVER	2F4
KNOB SUB-ASSY, SHIFT LEVER (FOR FLOOR SHIFT)	2A1
KNOB, DIFFERENTIAL LOCK, FRONT	2A6
KNOB, DIFFERENTIAL LOCK, REAR	2A6
KNOB, FRONT DOOR LOCK CONTROL	3M4
KNOB, HEATER	3F11
KNOB, HEATER CONTROL LEVER	3J11
KNOB, LIGHT CONTROL RHEOSTAT	3I9
KNOB, PARKING BRAKE RELEASE ROD	2A8
KNOB, REAR DOOR LOCK CONTROL	3G5
KNUCKLE, STEERING, LH	2E9
KNUCKLE, STEERING, RH	2E9
LABEL, COMPRESSOR CAUTION	3C12
LABEL, FUEL INFORMATION	3M6
LABEL, TRANSFER INFORMATION	3M6
LAMP ASSY, FRONT MARKER, LH	3E8
LAMP ASSY, FRONT MARKER, RH	3E8
LAMP ASSY, FRONT TURN SIGNAL, LH	3C8
LAMP ASSY, FRONT TURN SIGNAL, RH	3C8
LAMP ASSY, GLOVE BOX	3J8
LAMP ASSY, HEATER CONTROL INDICATOR, NO.1	3G9
LAMP ASSY, INDICATOR	3E9
LAMP ASSY, LICENSE PLATE	3H8
LAMP ASSY, PARKING AND CLEARANCE, LH	3D8
LAMP ASSY, PARKING AND CLEARANCE, RH	3D8
LAMP ASSY, REAR COMBINATION, LH	3F8
LAMP ASSY, REAR COMBINATION, RH	3F8
LAMP ASSY, REAR SIDE MARKER, LH	3I8
LAMP ASSY, REAR SIDE MARKER, RH	3I8
LAMP ASSY, ROOM, NO.1	3J8
LEAF, FRONT SPRING, NO.1	2H9
LEAF, FRONT SPRING, NO.2	2H9
LEAF, FRONT SPRING, NO.3	2H9
LEAF, FRONT SPRING, NO.4	2I9
LEAF, FRONT SPRING, NO.5	2I9
LEAF, REAR HELPER SPRING, NO.1	2M9
LEAF, REAR SPRING, NO.1	2L9
LEAF, REAR SPRING, NO.2	2L9
LEAF, REAR SPRING, NO.3	2L9
LEAF, REAR SPRING, NO.4	2L9
LEAF, REAR SPRING, NO.5	2L9
LEAF, REAR SPRING, NO.6	2M9
LEAF, REAR SPRING, NO.7	2M9
LENS, CONSOLE END PANEL LAMP	2B1
LENS, FRONT MARKER LAMP, LH	3E8
LENS, FRONT MARKER LAMP, RH	3E8
LENS, FRONT TURN SIGNAL LAMP, LH	3C8
LENS, FRONT TURN SIGNAL LAMP, RH	3C8
LENS, LICENSE PLATE LAMP	3H8

MARK & ABBREVIATION LIST

J13

MARK.ABBREVIATION	DEFINITION
DISCHARGE	DISCHARGE
DOOR LOCK	DOOR LOCK
DOUBLE	DOUBLE
DRAIN	DRAIN
DRUM BRAKE	DRUM BRAKE
DSC	DESCRIPTION
DSPV	DECELERATION SENSING PROPORTIONING VALVE
DUCT	DUCT
DUNLOP	MANUFACTUER
ECE	ECONOMIC COMMISSION FOR EUROPE
EFI	ELECTRONIC FUEL INJECTION SYSTEM
EGR	EXHAUST GAS RECIRCULATION SYSTEM
EGR-VM	EGR VACUUM MODULATOR
EHT	ELECTRICAL HEATED TEMPERED
EHTT	ELECTRICAL HEATED, TINTED, TEMPERED
EL	ELECTROMAGNETIC LOCK
ELECTRIC	ELECTRIC
ELECTRICAL	ELECTRICAL
ELR	EMERGENCY LOCKING RETRACTOR
ENGINE	ENGINE
ENGLAND	ENGLAND
ETR	ELECTRONIC TUNING RADIO
EXCL/	EXCLUDE...
EXHAUST	EXHAUST
FB	FABRIC
FEED PUMP	FEED PUMP
FILTER	FILTER
FIN PICH	FIN PICH
FINLAND	FINLAND
FIXED	FIXED
FLO	FUEL LID
FOGLAMP	FOGLAMP
FOLDING SEAT	FOLDING SEAT
FR	FRONT
FRANCE	FRANCE
FREE WHEELHUB	FREE WHEELHUB
FRG	FINAL GEAR RATIO
FROM	FROM
FRS	FOLDING REAR SEAT
FUEL	FUEL
FUEL FLOATING	FUEL FLOATING
FUEL TANK	FUEL TANK
FUJI-THOMSON	MANUFACTURER


MARK.ABBREVIATION	DEFINITION
FULL CAP	FULL CAP
FULL CONCEALED WIPER	FULL CONCEALED WIPER
FURUKAWA	MANUFACTURER
G	GRAMS
GLASS	GLASS
GOLD	GOLD
GRAY	GRAY
GREEN	GREEN
GREI	GREI
GREIGE	GREIGE
GS	MANUFACTURER
H.L.	CUT HOSE TO LENGTH AS SPECIFIED IN REMARKS
H=	HEIGHT
HAC	HIGH ALTITUDE COMPENSATOR
HALF CAP	HALF CAP
HALOGEN	HALOGEN
HAZARD	HAZARD
HEATER	HEATER
HEAVY	HEAVY
HEXAGON	HEXAGON
HIGH	HIGH
HIGH-OCTANE	HIGH-OCTANE
HONG KONG	HONG KONG
ID=	INSIDE DIAMETER (MM)
IGNITION COIL	IGNITION COIL
IKI	MANUFACTURER
ILLUMINATED	ILLUMINATED
IM-FB	IMITATION FABRIC
IN	INCHES
INDONESIA	INDONESIA
INJECTION PUMP	INJECTION PUMP
INLET	INLET
INNER	INNER
INSIDE	INSIDE
INSULATOR	INSULATOR
INTAKE	INTAKE
ISO	INTERNATIONAL ORGANIZATION FOR STANDARDIZATION
IVORY	IVORY
JECO	MANUFACTURER
JKC	MANUFACTURER
K-FB	KNIT FABRIC
K-TY	KNIT TAPE YARN

	PART NUMBER	LOCATION
	91611-61020-	2B4
	91651-61030-	2A4
	-61040-	2A4
	94110-40600-	2J8
	94115-71200-	2J8
	94183-60800-	2J9
	94184-61200-	2M7
	95332-10024-	3J7
	-10036-	3J7
	95333-06010-	3K7
	-06020-	1C3
	-06030-	3K7
	-06040-	3J7
	-06060-	3J7
	-06080-	3J7
	95411-19930-	2J4
	95441-09340-	2J4
	96111-10500-	1L2
	-10510-	1L2
	-10930-	1F3
		1G3
	96112-10250-	1H2
		1K2
	96132-30600-	2G5
		2H6
	96150-01600-	2J3
	96151-01700-	2E7
	-02000-	2D8
	-02500-	2J8
	96152-00300-	2M6
	96160-00500-	2K8
	-00600-	2K8
	96411-11600-	2B4
	-42500-	1F1
		1I1
	-43000-	1C3
	-45000-	1F1
		1I1
	96431-53828-	1H1
	96432-23814-	1H1
	96711-19010-	2H4
		2K7
	-19013-	2E7
	-19014-	2F7
	-19016-	2D7
	-24023-	2E5
		2G6
	-24045-	2A7
	96940-33005-	2B9
	-33805-	2C9
	-39855-	2B9
P	99132-11075-	3H8
P	-11270-	3C8
P		3F8
	-12034-	3D9
		3E9
P	-12100-	3J8
P	-21270-	3F8
	99332-11175-	1A3
	-11180-	1A3
	99555-10125-	1J4
		1K2
	99556-20095-	3L11
	-30100-	3L11
B	99556-30210-	1H2
	99911-11200-	1A1
	99913-11500-	1A1
	99914-10810-	1A1
	-11214-	1A1
	99915-10700-	1A1


ILLUSTRATED INDEX

J16

ELECTRICAL GROUP (1/2)

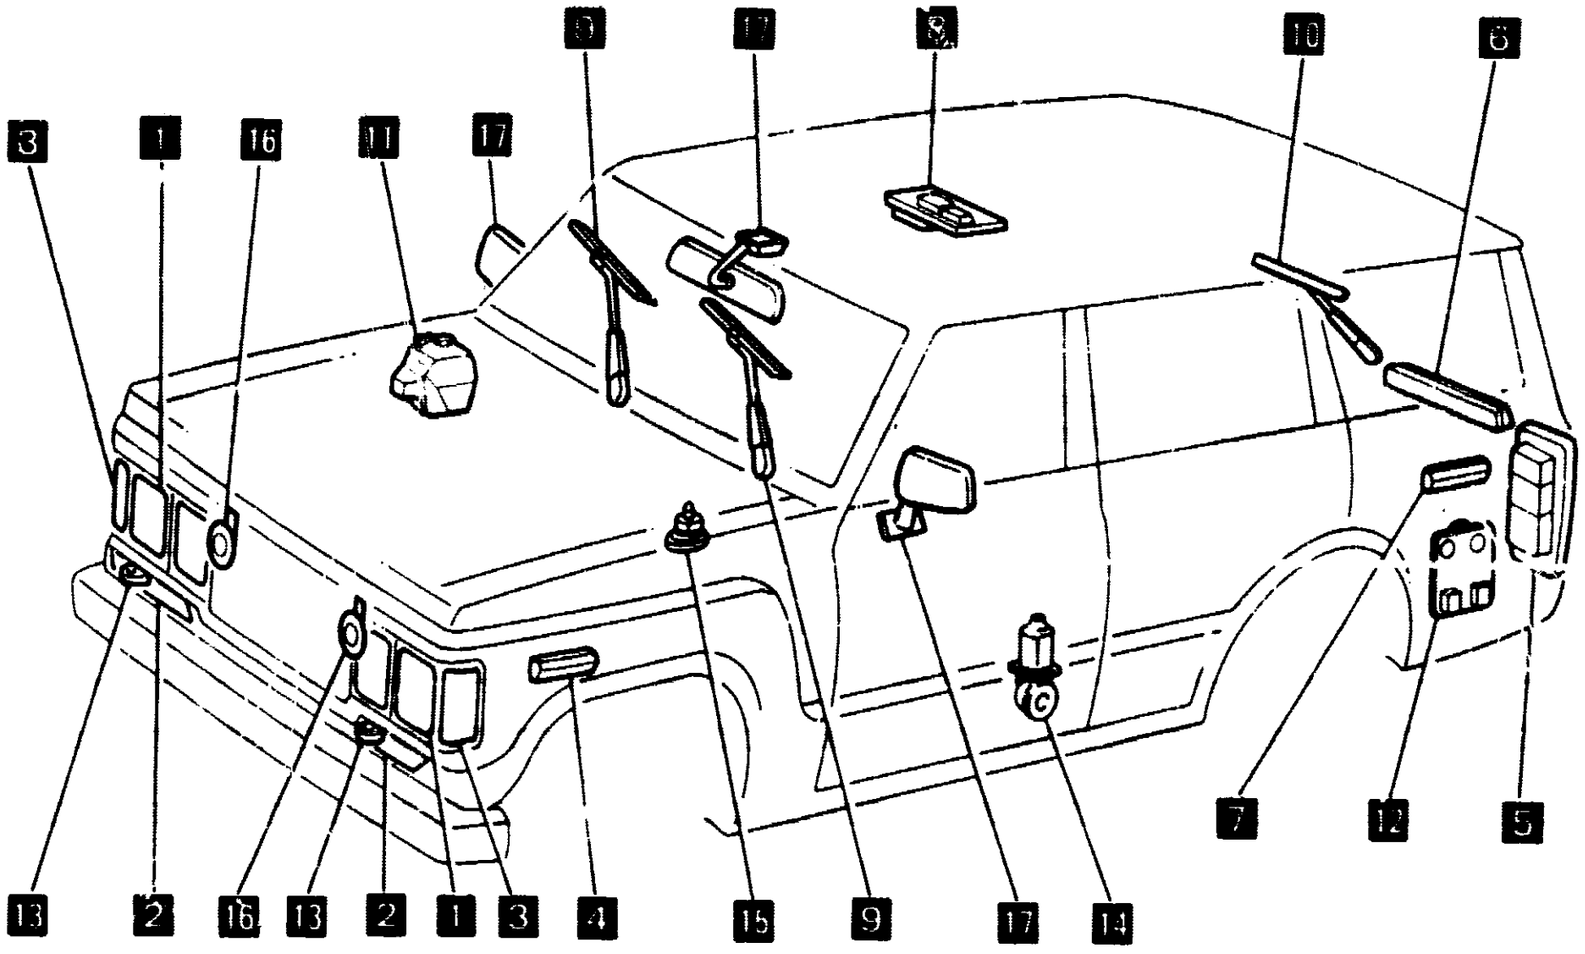


3A8 (81–01) 1

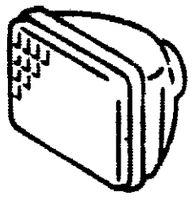


Headlamp

3C8 (81–03) 2

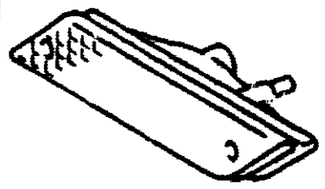


Front Turn Signal Lamp

3D8 (81–04) 3

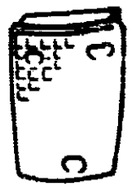


Front Clearance Lamp

3E8 (81–05) 4

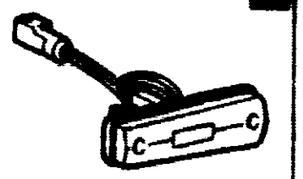

Front Marker Lamp

3F8 (81–11) 5

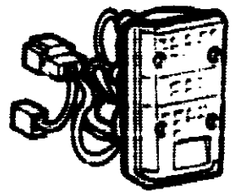


Rear Combination Lamp

3H8 (81–13) 6



License Plate Lamp

3I8 (81–14) 7

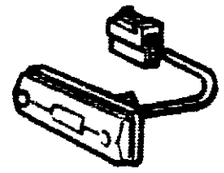


Rear Side Marker Lamp

3J6 (81–21) 8




Interior Lamp

3A10 (85–01) 9

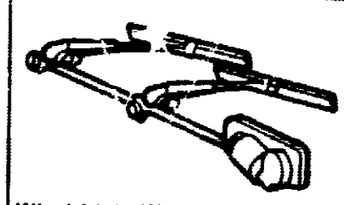


Windshield Wiper

3C10 (85–02) 10

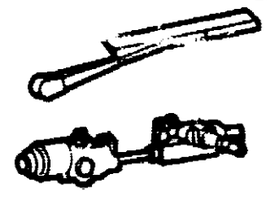


Rear Wiper

3D10 (85–03) 11

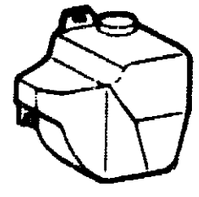

Windshield Washer

3C11 (97–01) 17

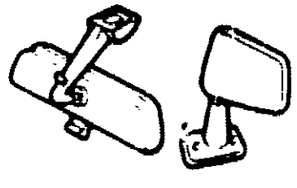


Mirror

3B11 (86–11) 16




Horn

3A11 (86–04) 15

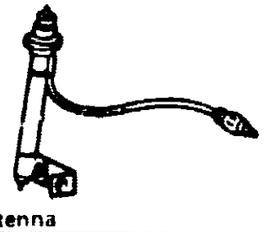


Antenna

3I10 (85–11) 14



Door Motor & Door Solenoid

3G10 (85–05) 13

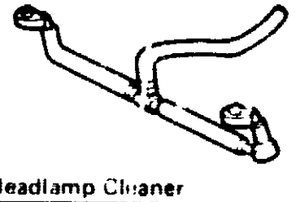

Headlamp Cleaner

3F10 (85–04) 12



Rear Washer

ME 9870

PART NAME	LOCATION
LENS, METER, NO.1	3D9
LENS, PARKING AND CLEARANCE LAMP, LH	3D8
LENS, PARKING AND CLEARANCE LAMP, RH	3D8
LENS, PARKING BRAKE WARNING LAMP	2B1
LENS, REAR COMBINATION LAMP, LH	3F8
LENS, REAR COMBINATION LAMP, RH	3F8
LENS, REAR SIDE MARKER LAMP, LH	3I8
LENS, REAR SIDE MARKER LAMP, RH	3I8
LENS, ROOM LAMP, NO.1	3J8
LEVER ASSY, PARKING BRAKE	2A8
LEVER ASSY, TRANSFER HIGH & LOW SHIFT	2G4
LEVER SUB-ASSY, HIGH & LOW SHIFT INNER	2F4
LEVER SUB-ASSY, MANUAL VALVE	2J3
LEVER SUB-ASSY, PARKING BRAKE SHOE, LH (FOR REAR BRAKE)	2K8
LEVER SUB-ASSY, PARKING BRAKE SHOE, RH (FOR REAR BRAKE)	2K8
LEVER SUB-ASSY, SHIFT (FOR FLOOR SHIFT)	2A1
LEVER SUB-ASSY, STEERING TILT	2B7
LEVER, BACK DOOR KEY CYLINDER	3B6
LEVER, CABLE GUIDE SUPPORT	2B8
LEVER, CONTROL SHAFT (FOR FLOOR SHIFT)	2B1
LEVER, DIFFERENTIAL LOCK, FRONT	2A6
LEVER, DIFFERENTIAL LOCK, REAR	2A6
LEVER, FRONT DIFFERENTIAL LOCK CYLINDER	2G6
LEVER, FRONT DRIVE SHIFT LINK	2H4
LEVER, JACK HANDLE	1A1
LEVER, REAR BRAKE AUTOMATIC ADJUST, LH	2L8
LEVER, REAR BRAKE AUTOMATIC ADJUST, RH	2L8
LEVER, REAR DIFFERENTIAL LOCK CYLINDER	2F5
LEVER, TRANSFER HIGH AND LOW SHIFT OUTER	2G4
LEVER, TRANSMISSION CONTROL SHAFT	2J3
LID SUB-ASSY, FUEL FILLER OPENING	3K7
LIFTER, VALVE	1D2
LIGHTER ASSY, CIGARETTE	3J9
LINING, REAR BRAKE SHOE (FOR FRONT OR UPPER)	2L8
LINING, REAR BRAKE SHOE (FOR REAR OR LOWER)	2L8
LINK ASSY, DIFFERENTIAL LOCK CABLE	2B6
LINK ASSY, WINDSHIELD WIPER	3A10
LINK SUB-ASSY, BACK DOOR LOCK CONTROL	3M5
LINK SUB-ASSY, REAR DOOR LOCKING CONTROL, LH	3G5
LINK SUB-ASSY, REAR DOOR LOCKING CONTROL, RH	3G5
LINK SUB-ASSY, STABILIZER	2A10
LINK, BACK DOOR LOCK CONTROL, LH NO.3	3M5
LINK, BACK DOOR LOCK CONTROL, RH	3M5
LINK, DIFFERENTIAL LOCK, FRONT	2A6
LINK, DIFFERENTIAL LOCK, REAR	2A6
LINK, FRONT DOOR LOCK REMOTE CONTROL, LH	3M4
LINK, FRONT DOOR LOCK REMOTE CONTROL, RH	3M4
LINK, REAR DOOR LOCK REMOTE CONTROL, LH	3G5
LINK, REAR DOOR LOCK REMOTE CONTROL, RH	3G5
LOCK ASSY, BACK DOOR	3M5
LOCK ASSY, BACK DOOR, LOWER	3M5
LOCK ASSY, FRONT DOOR, LH	3L4
LOCK ASSY, FRONT DOOR, RH	3L4
LOCK ASSY, HOOD	3L1
LOCK ASSY, REAR DOOR, LH	3F5
LOCK ASSY, REAR DOOR, RH	3F5
LOCK ASSY, TAIL GATE, LOWER LH	3M5
LOCK SUB-ASSY, FUEL FILLER OPENING LID	3J7
LOCK SUB-ASSY, REAR SEAT BACK, LH	3G6
LOCK SUB-ASSY, REAR SEAT BACK, RH	3G6
LOCK, FRONT DIFFERENTIAL BEARING ADJUSTING NUT	2G6
LOCK, REAR AXLE SHAFT	2I5
LOCK, REAR DIFFERENTIAL BEARING ADJUSTING NUT	2D5
LOCK, VALVE SPRING RETAINER	1D2
LOUVER, QUATER VENTILATION, LH	3A4

PART NAME	LOCATION
LOUVER, QUATER VENTILATION, RH	3A4
MAGNET, OIL CLEANER (FOR TRANSMISSION)	2I1
MANIFOLD, AIR INJECTION	1J3
MANIFOLD, EXHAUST	1C3
MANIFOLD, INTAKE	1C3
MASTER SWITCH ASSY, POWER WINDOW REGULATOR	3J9
MAT, REAR SEAT CUSHION	3F6
MEMBER SUB-ASSY, CENTER FLOOR CROSS	3H2
MEMBER SUB-ASSY, CENTER FLOOR CROSS, NO.2	3H2
MEMBER SUB-ASSY, FRONT CROSS	3A2
MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.1	3M2
MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.2	3M2
MEMBER SUB-ASSY, REAR FLOOR SIDE, LH	3H2
MEMBER SUB-ASSY, REAR FLOOR SIDE, RH	3H2
MEMBER, FLOOR SIDE, INNER LH	3J2
MEMBER, FLOOR SIDE, INNER RH	3J2
METER ASSY, INTAKE AIR FLOW	1G3
MIRROR ASSY, INNER REAR VIEW	3C11
MIRROR ASSY, OUTER REAR VIEW, LH	3C11
MIRROR ASSY, OUTER REAR VIEW, RH	3C11
MODULATOR ASSY, EGR VACUUM	1M4
MOTOR AND BRACKET ASSY, WINDSHIELD WIPER	3A10
MOTOR AND LINK ASSY, REAR WIPER	3C10
MOTOR AND PUMP ASSY, HEADLAMP CLEANER WASHER	3G10
MOTOR AND PUMP ASSY, WINDSHIELD WASHER	3D10
MOTOR ASSY, POWER WINDOW REGULATOR, FRONT LH	3I10
MOTOR ASSY, POWER WINDOW REGULATOR, FRONT RH	3I10
MOTOR ASSY, POWER WINDOW REGULATOR, REAR LH	3I10
MOTOR ASSY, POWER WINDOW REGULATOR, REAR RH	3I10
MOTOR ASSY, REAR WASHER	3F10
MOTOR SUB-ASSY, HEATER BLOWER	3F11
MOTOR, COOLING FAN	1K2
MOULDING ASSY, FRONT DOOR BELT, LH	3E7
MOULDING ASSY, FRONT DOOR BELT, RH	3E7
MOULDING ASSY, REAR DOOR BELT, LH	3E7
MOULDING ASSY, REAR DOOR BELT, RH	3E7
MOULDING, BACK WINDOW, OUTSIDE LH	3E7
MOULDING, BACK WINDOW, OUTSIDE LOWER	3E7
MOULDING, BACK WINDOW, OUTSIDE RH	3E7
MOULDING, FRONT DOOR WINDOW FRAME, FRONT LH	3E7
MOULDING, FRONT DOOR WINDOW FRAME, FRONT RH	3E7
MOULDING, FRONT DOOR WINDOW FRAME, REAR LH	3F7
MOULDING, FRONT DOOR WINDOW FRAME, REAR RH	3F7
MOULDING, QUARTER WINDOW, OUTSIDE FRONT LH	3E7
MOULDING, QUARTER WINDOW, OUTSIDE FRONT RH	3E7
MOULDING, QUARTER WINDOW, OUTSIDE REAR LH	3E7
MOULDING, QUARTER WINDOW, OUTSIDE REAR RH	3E7
MOULDING, REAR DOOR WINDOW FRAME, FRONT LH	3F7
MOULDING, REAR DOOR WINDOW FRAME, FRONT RH	3F7
MOULDING, REAR DOOR WINDOW FRAME, REAR LH	3F7
MOULDING, REAR DOOR WINDOW FRAME, REAR RH	3F7
MOULDING, REAR DOOR WINDOW FRAME, UPPER LH	3F7
MOULDING, REAR DOOR WINDOW FRAME, UPPER RH	3F7
MOULDING, REAR SEAT BACK, LH	3F6
MOULDING, REAR SEAT BACK, RH	3F6
MOULDING, REAR SEAT BACK, UPPER	3F6
MOULDING, REAR SEAT CUSHION, FRONT	3E6
MOULDING, REAR SEAT CUSHION, LH	3E6
MOULDING, REAR SEAT CUSHION, REAR LH	3E6
MOULDING, REAR SEAT CUSHION, REAR RH	3E6
MOULDING, REAR SEAT CUSHION, RH	3E6
MOULDING, ROCKER PANEL, LH	3F7
MOULDING, ROCKER PANEL, RH	3F7
MOULDING, ROOF CARRIER	3M3
MOULDING, ROOF DRIP SIDE FINISH, FRONT LH	3E7

MARK & ABBREVIATION LIST

K13


MARK.ABBREVIATION	DEFINITION
KAYABA	MANUFACTURER
KCAL	KILO CALORIE
KG	KILOGRAMS
KG/CM2	KILOGRAMS PER CENTIMETER SQUARE
KM	KILOMETERS
KOBE	MANUFACTURER
KOITO	MANUFACTURER
KOKI	MANUFACTURER
KOYO	MANUFACTURER
KUZEH	MANUFACTURER
KW	KILOWATS
L GRAY	LIGHT GRAY
L-	LIGHT
L=	LENGTH (MM)
LAM	LAMINATED
LEF	LEAF TYPE REAR SUSPENSION
LH	LEFT-HAND
LHD	LEFT-HAND DRIVE
LIGHT	LIGHT
LITTLE	LITTLE
LOCATION	LOCATION
LOCK	LOCK
LOW-OCTANE	LOW-OCTANE
LSD	LIMITED SLIP DIFFERENTIAL
LWR	LOWER
M	METERS
M.	METALLIC
M/C	MASTER CYLINDER
MAGNET	MAGNET
MAIN	MAIN
MALAYSIA	MALAYSIA
MANUAL	MANUAL
MARK	MARK
MAROON	MAROON
MARUKO	MANUFACTURER
MARUYASU	MANUFACTURER
MASTER KEY	MASTER KEY
MATSUSHITA	MANUFACTURER
MECHANICAL	MECHANICAL
MEDIUM	MEDIUM
MEMORY ADJUST	MEMORY ADJUST
METER	METER
MIDDLE EAST C UNTRY	MIDDLE EAST COUNTRY
MILE	MILE

MARK.ABBREVIATION	DEFINITION
MIRROR	MIRROR
MIST WIPER	MIST WIPER
MITSUBOSHI	MANUFACTURER
MM	MILLIMETERS
MODELS	MODELS
MOULDING	MOULDING
MTM	MANUAL TRANSMISSION
MURAKAMI	MANUFACTURER
N=	NUMBER OF TEETH
NACHI	MANUFACTURER
NETHERLANDS	NETHERLANDS
NEW ZEALAND	NEW ZEALAND
NICHIASU	MANUFACTURER
NICHIGASU	MANUFACTURER
NITTAN	MANUFACTURER
NO.	NUMBER
NOK	MANUFACTURER
NORWAY	NORWAY
NORWAY	NORWAY
NSK	MANUFACTURER
O/S	OVERSIZE
OD=	OUTSIDE DIAMETER (MM)
OIL BATH	OIL BATH
OIL PRESSURE S/W	OIL PRESSURE SWITCH
OK MONITOR	OK MONITOR
OMAN	OMAN
ONE	ONE
OPENER	OPENER
OR	OR
ORANGE	ORANGE
ORNAMENT	ORNAMENT
OUTER	OUTER
OUTLET	OUTLET
OUTSIDE	OUTSIDE
OVERDRIVE	OVERDRIVE
OVERSIZE	OVERSIZE
P & B	PROPORTIONING & BY-PASS VALVE
P=	PITCH
PACIFIC	PACIFIC
PAPER ELEMENT	PAPER ELEMENT
PART NUMBER	PART NUMBER
PASSENGER	PASSENGER
PCV	POSITIVE CRANKCASE VENTILATION SYSTEM

ILLUSTRATED INDEX


K16

3K8 (82-01) 1

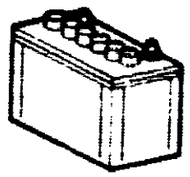


Battery & Cable

3L8 (82-02) 2

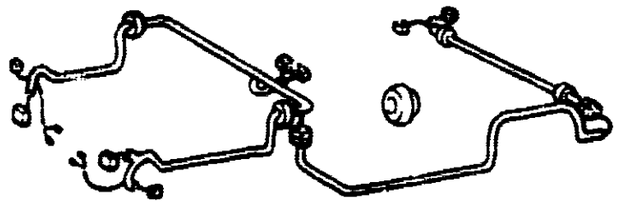


Wiring & Clamp

3C9 (83-01) 3

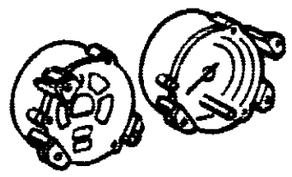


Meter

3E9 (83-02) 4

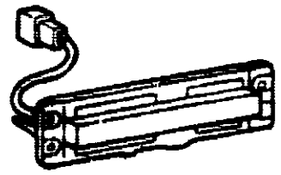


Indicator

3F9 (84-01) 5

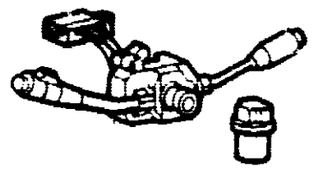


Switch & Relay

3L9 (84-04) 6

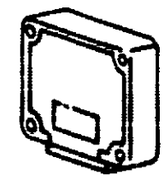


EFI

ELECTRICAL GROUP (2/2)

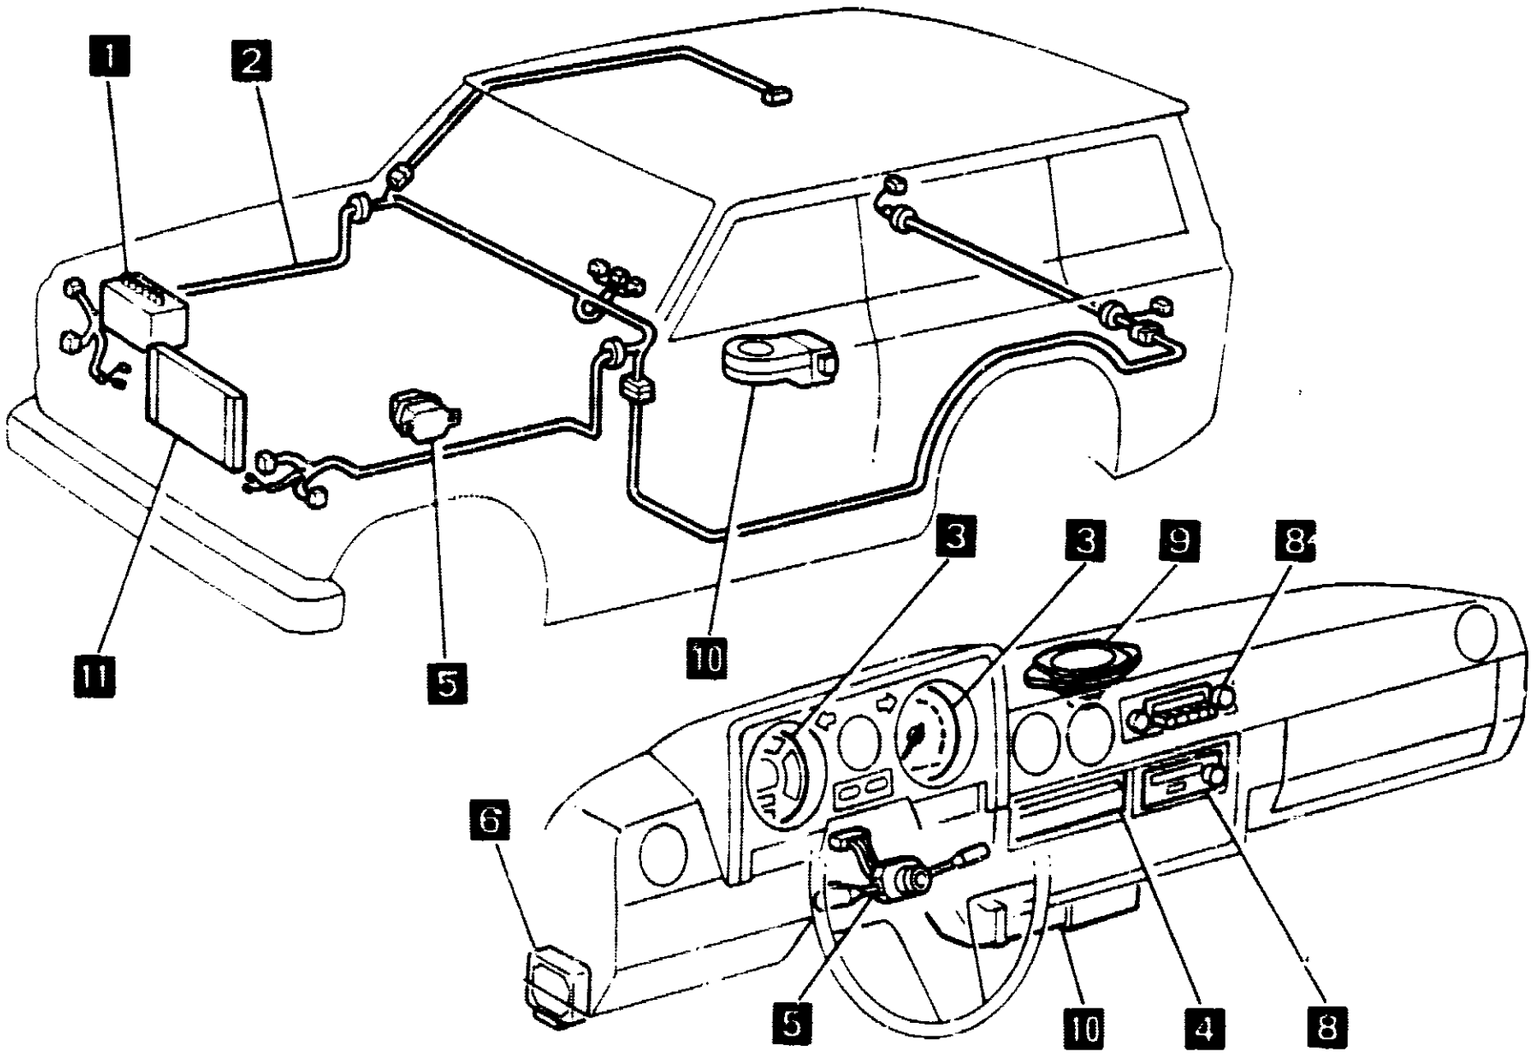


3J10(86-01) 8

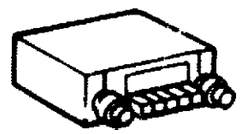

Radio & Tape Player


3L10(86-02) 9

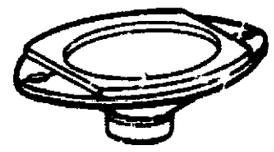

Speaker

3M11(87-18) Piping

3A12(87-19) Compressor

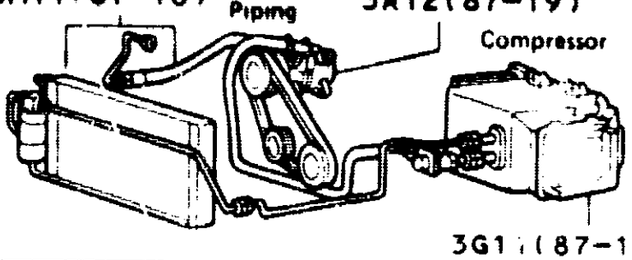


3G1 (87-14) Unit

11

3K11(87-16) Piping

3I11(87-15) Duct

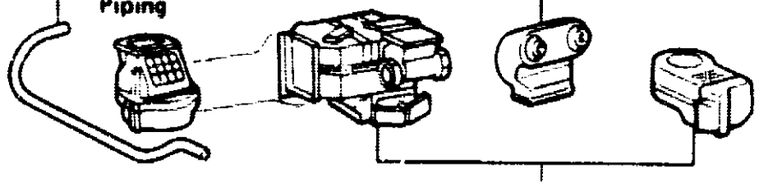

3E11(87-12) Unit

10

ME 9871

PART NAME	LOCATION
MOULDING, ROOF DRIP SIDE FINISH, FRONT RH	3D7
MOULDING, ROOF DRIP SIDE FINISH, REAR LH	3E7
MOULDING, ROOF DRIP SIDE FINISH, REAR RH	3E7
MOULDING, ROOF DRIP, REAR	3E7
MOULDING, WINDSHIELD, OUTER UPPER	3D7
MOULDING, WINDSHIELD, OUTSIDE LH	3D7
MOULDING, WINDSHIELD, OUTSIDE LOWER	3D7
MOULDING, WINDSHIELD, OUTSIDE RH	3D7
MUDGUARD SUB-ASSY, FRONT FENDER, LH	3K1
MUDGUARD SUB-ASSY, FRONT FENDER, RH	3K1
MUDGUARD SUB-ASSY, QUARTER PANEL, REAR LH	3J3
MUDGUARD SUB-ASSY, QUARTER PANEL, REAR RH	3J3
MUDGUARD, QUARTER PANEL, REAR	3M2
NOZZLE ASSY, DEFROSTER	3D2
NOZZLE SUB-ASSY, COWL PANEL WATER EXTRACT	3F2
NOZZLE SUB-ASSY, WASHER	3D10
NOZZLE SUB-ASSY, WASHER	3F10
NOZZLE, HEADLAMP CLEANER WASHER	3G10
NOZZLE, OIL	111
NOZZLE, SIDE DEFROSTER, NO.1	3E2
NOZZLE, SIDE DEFROSTER, NO.2	3E2
NUT (FOR BACKING PLATE TO REAR AXLE HOUSING SETTING)	2J8
NUT (FOR CRANKSHAFT PULLEY)	1B2
NUT (FOR DRIVE PINION)	2C5
NUT (FOR FRONT STABILIZER BAR)	2J9
NUT (FOR OUTPUT SHAFT)	2Q2
NUT (FOR REAR WIPER ARM SETTING)	3C10
NUT (FOR STEERING DAMPER)	2M7
NUT (FOR TRANSFER OUTPUT SHAFT)	2A4
NUT (FOR WIPER ARM SETTING)	3A10
NUT, BOOSTER	2G8
NUT, CAP (FOR CYLINDER HEAD COVER)	1G1
NUT, CASTLE (FOR FRONT AXLE DRIVE PINION)	2H6
NUT, CASTLE (FOR PITMAN ARM)	2L7
NUT, CASTLE (FOR TIE ROD END)	2L7
NUT, EXHAUST PIPE SET STUD BOLT	1E3
NUT, FRONT DIFFERENTIAL BEARING ADJUSTING	2F6
NUT, FRONT WHEEL ADJUSTING	2L6
NUT, HEXAGON (FOR CONNECTING ROD BOLT)	1A2
NUT, HEXAGON (FOR VALVE ADJUSTING)	1D2
NUT, HUB (FOR AXLE)	2K5
NUT, LOCK	2K7
NUT, LOCK, NO.1	2L7
NUT, REAR AXLE BEARING LOCK	2J5
NUT, REAR DIFFERENTIAL BEARING ADJUSTING	2D5
NUT, REAR WIPER LINK PIVOT, NO.1	3C10
NUT, STEERING WHEEL SET	2H7
NUT, UNION (FOR OIL PUMP OUTLET PIPE)	1F2
NUT, UNION, EGR PIPE, NO.1	1M4
NUT, WING (FOR AIR CLEANER)	1F3
NUT,CASTLE (FOR RELAY ROD)	2L7
ONAMENT ASSY, FRONT FENDER, LH	3C7
ONAMENT ASSY, FRONT FENDER, RH	3C7
ORNAMENT SUB-ASSY, WHEEL HUB	2K5
OUTLET, WATER	1K2
PACKING	3G10
PACKING (FOR RADIATOR DRAIN COCK)	3M11
PACKING, BACK DOOR SERVICE HOLE, NO.3	1L2
PACKING, BACK DOOR SERVICE HOLE, NO.5	3J5
PACKING, DUST PROOF	3J5
PACKING, FUEL TANK OUTER FILLER PIPE	1D4
PACKING, REAR FLOOR SERVICE HOLE	3K7
PACKING, REAR WIPER PIVOT, NO.1	3M2
PACKING, TRANSMISSION COVER	3C10
PACKING, TRANSMISSION COVER	3K2

PART NAME	LOCATION
PAD KIT, DISC BRAKE, FRONT	2H8
PAD SUB-ASSY, INSTRUMENT PANEL SAFETY	3C2
PAD, BACK DOOR LOCK CONTROL	3M5
PAD, BACK DOOR LOCK CYLINDER	3B6
PAD, BRAKE PEDAL	2C8
PAD, FUEL FILLER LID LOCK CYLINDER	3A6
PAD, LOCK CYLINDER	3B6
PAD, QUARTER PANEL SILENCER	3J3
PAD, REAR SPRING	2M9
PAD, ROOF HEADLINING FRONT SIDE	3E4
PAD, ROOF HEADLINING, CTR	3E4
PAD, ROOF SILENCER, NO.1	3E4
PAD, ROOF SILENCER, NO.3	3E4
PAD, ROOF SILENCER, NO.4	3E4
PAN SUB-ASSY, AUTOMATIC TRANSMISSION OIL	2H1
PAN SUB-ASSY, OIL	111
PAN, CENTER FLOOR	3J2
PAN, FRONT FLOOR	3J2
PAN, REAR FLOOR	3M2
PANEL ASSY, BACK DOOR TRIM	3J5
PANEL ASSY, INSTRUMENT CLUSTER FINISH	3C2
PANEL ASSY, QUARTER TRIM, CENTER	3D4
PANEL ASSY, QUARTER TRIM, REAR LH	3D4
PANEL SUB-ASSY, BACK DOOR	3J5
PANEL SUB-ASSY, BODY LOWER BACK	3M2
PANEL SUB-ASSY, BODY LOWER BACK, INNER	3N2
PANEL SUB-ASSY, COWL	3F2
PANEL SUB-ASSY, COWL SIDE, LH	3G3
PANEL SUB-ASSY, COWL SIDE, RH	3G3
PANEL SUB-ASSY, DASH	3A2
PANEL SUB-ASSY, FRONT DOOR, LH	314
PANEL SUB-ASSY, FRONT DOOR, RH	314
PANEL SUB-ASSY, INSTRUMENT	3C2
PANEL SUB-ASSY, REAR DOOR, LH	3C5
PANEL SUB-ASSY, REAR DOOR, RH	3C5
PANEL SUB-ASSY, ROOF SIDE, INNER LH	313
PANEL SUB-ASSY, ROOF SIDE, INNER RH	313
PANEL SUB-ASSY, TAIL GATE	3J5
PANEL, COWL TOP, OUTER	3F2
PANEL, FRONT DOOR, OUTER LH	314
PANEL, FRONT DOOR, OUTER RH	314
PANEL, FRONT END	3J1
PANEL, INSTRUMENT CLUSTER FINISH, CENTER NO.1	3C2
PANEL, QUARTER WHEEL HOUSE, INNER LH	313
PANEL, QUARTER WHEEL HOUSE, INNER RH	313
PANEL, QUARTER WHEEL HOUSE, OUTER LH	313
PANEL, QUARTER WHEEL HOUSE, OUTER RH	313
PANEL, QUARTER, LH	313
PANEL, QUARTER, RH	313
PANEL, REAR DOOR, OUTER LH	3C5
PANEL, REAR DOOR, OUTER RH	3C5
PANEL, REAR FLOOR SIDE, LH	3M2
PANEL, REAR FLOOR SIDE, RH	3M2
PANEL, ROCKER, OUTER LH	3H3
PANEL, ROCKER, OUTER RH	3H3
PANEL, ROOF	3L3
PANEL, ROOF SIDE, INNER FRONT LH	313
PANEL, ROOF SIDE, INNER FRONT RH	313
PANEL, ROOF SIDE, OUTER LH	313
PANEL, ROOF SIDE, OUTER RH	313
PANEL, WINDSHIELD HEADER, INNER	3L3
PAWL ASSY, TILT STEERING	2B7
PAWL, PARKING LOCK	2J3
PEDAL SUB-ASSY, BRAKE	2C8
PEDAL, ACCELERATOR	3M7

MARK & ABBREVIATION LIST

L13

MARK.ABBREVIATION	DEFINITION
PF	PERFORATED FOAM COATED VINYL LEATHERETTE
PIONEER	MANUFACTURER
PITCH	PITCH
PNC	PART NAME CODE
POINT	POINT
POWER STEERING	POWER STEERING
POWER TRAIN	POWER TRAIN
POWER WINDOW	POWER WINDOW
PROD. DATE	PRODUCTION DATE
PS	POWER STEERING
PTO	POWER TAKE OFF
PV	PROPORTIONING VALVE
QTY	QUANTITY
R	RATIO
R/P	REPLACEMENT PART
RADIATOR	RADIATOR
RADIO	RADIO
REAR WINDOW	REAR WINDOW
RECLINING SEAT	RECLINING SEAT
RED	RED
RED MICA	RED MICA
REGULATOR	REGULATOR
RELAY	RELAY
REMOTE CONTROL	REMOTE CONTROL
REP	REPAIR
REV.REF.CODE	REVISION REFERENCE CODE
REVERSE	REVERSE
RH	RIGHT-HAND
RHD	RIGHT-HAND DRIVE
RR	REAR
RW	REAR WIPER
RWD	REAR WINDOW DEFOGGER
S=	SCREW LENGTH (MM)
SAUDI ARABIA	SAUDI ARABIA
SEALED BEAM	SEALED BEAM
SEAT BELT	SEAT BELT
SEAT HEATER	SEAT HEATER
SEAT TRACK	SEAT TRACK
SEMI CONCEALED WIPER	SEMI CONCEALED WIPER
SEPARATE SEAT	SEPARATE SEAT
SERT	SOLAR-ENERGY REFLECTING TEMPERED GLASS
SHADOW GRAY	SHADOW GRAY
SHINKOBE	MANUFACTURER

MARK.ABBREVIATION	DEFINITION
SILVER	SILVER
SINGLE	SINGLE
SINGLE	SINGLE
SLEEVE YOKE	SLEEVE YOKE
SLIDE TYPE	SLIDE TYPE
SLIDING SEAT	SLIDING SEAT
SMALL	SMALL
SMG	SPEEDOMETER GEAR
SOCKET	SOCKET
SOUTH AFRICA	SOUTH AFRICA
SP	SEPARATE SEAT
SP-BN	SPLIT BENCH SEAT
SPARE	SPARE
SPEAKER	SPEAKER
SPEC	SPECIFICATION
SPOKE	SPOKE
STAINLESS	STAINLESS
STANLEY	MANUFACTURER
STD	STANDARD TYPE
STEEL	STEEL
STEP	STEP
STEREO	STEREO
STRG	STEERING
SUMITOMO	MANUFACTURER
SUNROOF	SUNROOF
SUPER RED	SUPER RED
SUSPENSION	SUSPENSION
SW	SWITCH
SWEDEN	SWEDEN
SWITZERLAND	SWITZERLAND
T/L	TUBELESS
T=	THICKNESS (MM)
TAC	TACHOMETER
TAIL	TAIL
TAKATA	MANUFACTURER
TANAKA	MANUFACTURER
TANDEM	TANDEM
TAPE PLAYER	TAPE PLAYER
TEM	TEMPERED
TEN	MANUFACTURER
TERMINAL	TERMINAL
THROTTLE	THROTTLE
TILT	TILT
TINTED LAMINATED	TINTED LAMINATED

FIGURE NUMBER INDEX

L16

LOCATION	FIG. No.	SUMMARY
		TOOL GROUP
1A1	09-01	STANDARD TOOL
		ENGINE GROUP
1C1	11-01	PARTIAL ENGINE ASSEMBLY
1D1	11-02	SHORT BLOCK ASSEMBLY
1E1	11-03	ENGINE OVERHAUL GASKET KIT
1F1	11-04	CYLINDER HEAD
1H1	11-05	CYLINDER BLOCK
1J1	11-06	TIMING GEAR COVER & REAR END PLATE
1K1	11-07	MOUNTING
1L1	12-01	VENTILATION HOSE
1M1	13-01	CRANKSHAFT & PISTON
1C2	13-02	CAMSHAFT & VALVE
1E2	15-01	OIL PUMP
1G2	15-02	OIL FILTER
1H2	15-03	OIL COOLER
1I2	16-01	WATER PUMP
1J2	16-03	RADIATOR & WATER OUTLET
1A3	16-05	V BELT
1B3	17-01	MANIFOLD
1D3	17-02	EXHAUST PIPE
1F3	17-03	AIR CLEANER
1H3	17-05	AIR PUMP
1I3	17-06	MANIFOLD AIR INJECTION SYSTEM
1K3	17-08	VACUUM PIPING
1A4	17-09	CAUTION PLATE & NAME PLATE
1B4	19-01	IGNITION COIL & SPARK PLUG
1D4	19-02	DISTRIBUTOR
1E4	19-03	ALTERNATOR
1G4	19-04	STARTER
		FUEL GROUP
1I4	22-11	FUEL INJECTION SYSTEM
1M4	25-01	EXHAUST GAS RECIRCULATION SYSTEM

LOCATION	FIG. No.	SUMMARY
		POWER TRAIN · CHASSIS GROUP
2A1	33-12	SHIFT LEVER & RETAINER
2D1	35-01	TRANSAXLE OR TRANSMISSION ASSY & GASKET KIT (ATM)
2E1	35-02	TORQUE CONVERTER, FRONT OIL PUMP & CHAIN (ATM)
2G1	35-03	TRANSMISSION CASE & OIL PAN (ATM)
2J1	35-05	SPEEDOMETER DRIVEN GEAR (ATM)
2K1	35-06	OVERDRIVE CEAR (ATM)
2A2	35-07	BRAKE BAND & MULTIPLE DISC CLUTCH (ATM)
2D2	35-08	CENTER SUPPORT & PLANETARY SUN GEAR (ATM)
2F2	35-09	BRAKE NO. 3, 1ST & REVERSE BRAKE (ATM)
2G2	35-10	PLANETARY GEAR, REVERSE PISTON & COUNTER GEAR (ATM)
2I2	35-11	REAR OIL PUMP & GOVERNOR (ATM)
2K2	35-12	VALVE BODY & OIL STRAINER (ATM)
2I3	35-13	THROTTLE LINK & VALVE LEVER (ATM)
2K3	35-14	OIL COOLER & TUBE (ATM)
2M3	36-08	TRANSFER ASSEMBLY & GASKET KIT
2A4	36-09	TRANSFER CASE & EXTENSION HOUSING
2C4	36-10	TRANSFER GEAR
2F4	36-11	TRANSFER LEVER & SHIFT ROD
2H4	36-12	DIAPHRAGM CYLINDER
2J4	36-16	TRANSFER VACUUM PIPING
2K4	37-01	PROPELLER SHAFT & UNIVERSAL JOINT
2M4	41-01	REAR AXLE HOUSING & DIFFERENTIAL
2H5	41-02	REAR AXLE SHAFT & HUB
2K5	41-03	DISK WHEEL & WHEEL CAP
2M5	42-01	DIFFERENTIAL LOCK CONTROL
2C6	43-01	FRONT AXLE HOUSING & DIFFERENTIAL
2J6	43-02	DRIVE SHAFT
2K6	43-03	FRONT AXLE HUB
2M6	45-01	STEERING COLUMN & SHAFT
2D7	45-02	VANE PUMP & RESERVOIR

LOCATION	FIG. No.	SUMMARY
2G7	45-03	OIL COOLER & TUBE
2H7	45-04	STEERING WHEEL
2I7	45-05	STEERING GEAR & LINK
2A8	46-01	PARKING BRAKE & CABLE
2C8	47-01	BRAKE PEDAL & BRACKET
2D8	47-02	BRAKE MASTER CYLINDER
2F8	47-03	BRAKE BOOSTER
2H8	47-05	FRONT DISC BRAKE CALIPER & DUST COVER
2J8	47-06	REAR BACKING PLATE & WHEEL CYLINDER
2M8	47-08	BRAKE TUBE & CLAMP
2E9	48-02	FRONT AXLE ARM & STEERING KNUCKLE
2G9	48-03	FRONT SPRING & SHOCK ABSORBER
2K9	48-04	REAR SPRING & SHOCK ABSORBER

PART NAME	LOCATION
PIECE, BALANCE (FOR PROPELLER SHAFT)	2K4
PIECE, BALANCE (FOR REAR BRAKE DRUM)	2I5
PIECE, DISTRIBUTOR CAP CENTER	1D4
PILLAR SUB-ASSY, CENTER BODY, LH	3H3
PILLAR SUB-ASSY, CENTER BODY, RH	3H3
PILLAR SUB-ASSY, FRONT BODY, OUTER LH	3G3
PILLAR SUB-ASSY, FRONT BODY, OUTER RH	3G3
PILLAR, CENTER BODY, INNER LOWER LH	3H3
PILLAR, CENTER BODY, INNER LOWER RH	3H3
PILLAR, CENTER BODY, INNER UPPER LH	3H3
PILLAR, CENTER BODY, INNER UPPER RH	3H3
PILLAR, FRONT BODY, INNER LH	3G3
PILLAR, FRONT BODY, INNER RH	3G3
PILLAR, QUARTER LOCK, LH	3I3
PILLAR, QUARTER LOCK, RH	3I3
PIN (FOR HIGH & LOW SHIFT ROD)	2G4
PIN (FOR PUSH ROD)	2C8
PIN (FOR STEERING TILT LEVER)	2B7
PIN KIT, FRONT SPRING	2H9
PIN KIT, REAR SPRING	2L9
PIN, DIFFERENTIAL PINION SHAFT	2E5
PIN, FRONT DIFFERENTIAL PINION SHAFT	2F6
PIN, FRONT DOOR CHECK	3K4
PIN, GROOVED (FOR DETENT ROD)	2B1
PIN, LOCATING (FOR 3RD COAST SHIFT)	2F3
PIN, REAR DOOR CHECK	3E5
PIN, RING (FOR CRANKSHAFT BEARING CAP SET)	1H1
PIN, SHOE HOLD DOWN SPRING (FOR REAR BRAKE)	2K8
PIN, SLOTTED SPRING (FOR MANUAL VALVE LEVER)	2J3
PIN, SLOTTED SPRING (FOR TRANSFER SHIFT FORK)	2F4
PIN, STRAIGHT (FOR CLUTCH HOUSING SET)	1I1
PIN, STRAIGHT (FOR CRANKSHAFT)	1A2
PIN, STRAIGHT (FOR CYLINDER HEAD SET)	1I1
PIN, STRAIGHT (FOR FRONT DRIVE SHIFT LINK LEVER)	2H4
PIN, STRAIGHT (FOR LOCK UP RELAY VALVE SLEEVE)	2A3
PIN, STRAIGHT (FOR LOCK UP SIGNAL VALVE)	2M2
PIN, STRAIGHT (FOR OUTER SHAFT FLANGE)	2K6
PIN, STRAIGHT (FOR REAR AXLE HUB)	2I5
PIN, STRAIGHT (FOR THROTTLE VALVE SLEEVE)	2D3
PIN, STRAIGHT (FOR TRANSFER CASE)	2B4
PIN, STRAIGHT (FOR TRANSMISSION HOUSING ADAPTOR, FRONT)	2G1
PIN, STRAIGHT (FOR VANE PUMP CAM RING)	2E7
PIN, STRAIGHT (FOR 1-2 SHIFT VALVE LOW PLUG)	2E3
PIN, STRAIGHT (FOR 1-2 SHIFT VALVE)	2E3
PIN, STRAIGHT (FOR 2-3 SHIFT TIMING VALVE PLUG SLEEVE)	2C3
PIN, STRAIGHT (FOR 2-3 SHIFT VALVE PLUG)	2D3
PIN, STRAIGHT (FOR 2-3 SHIFT VALVE)	2E3
PIN, STRAIGHT (FOR 3-4 SHIFT VALVE)	2G3
PIN, STRAIGHT, NO.1	1F1
PIN, W/HOLE (FOR DIFFERENTIAL LOCK CABLE LINK)	2B6
PIN, W/HOLE (FOR DIFFERENTIAL LOCK LEVER)	2A6
PIN, W/HOLE (FOR FRONT DISC BRAKE ANTIRATTLE)	2I8
PIN, W/HOLE (FOR PARKING BRAKE CABLE)	2B8
PIN, W/HOLE (FOR REAR BRAKE)	2K8
PINION, FRONT DIFFERENTIAL	2F6
PINION, REAR DIFFERENTIAL	2D5
PIPE ASSY, EXHAUST, CENTER	1E3
PIPE ASSY, EXHAUST, FRONT	1E3
PIPE ASSY, TAIL	1E3
PIPE SUB-ASSY, AIR, NO.1	1M3
PIPE SUB-ASSY, EGR, NO.1	1M4
PIPE SUB-ASSY, FUEL DELIVERY	1L4
PIPE SUB-ASSY, FUEL TANK INLET	3J7
PIPE SUB-ASSY, FUEL, NO.1	1L4
PIPE SUB-ASSY, FUEL, NO.2	1L4

PART NAME	LOCATION
PIPE SUB-ASSY, FUEL, NO.3	1L4
PIPE SUB-ASSY, HEATER WATER	3L11
PIPE SUB-ASSY, HEATER WATER, A	3L11
PIPE SUB-ASSY, WATER	3L11
PIPE, COOLER REFRIGERANT LIQUID, F (FOR COOLER UNIT)	3H11
PIPE, COOLER REFRIGERANT LIQUID, Q	3M11
PIPE, HEATER WATER INLET	3F11
PIPE, HEATER WATER OUTLET, A	3L11
PIPE, OIL COOLER	1H2
PIPE, OIL PUMP OUTLET	1F2
PIPE, RADIATOR	1L2
PIPE, WATER	3F11
PIPE, WATER BY-PASS, NO.1	1K2
PISTON SUB-ASSY, FRONT CLUTCH	2A2
PISTON SUB-ASSY, OVERDRIVE DIRECT CLUTCH	2K1
PISTON SUB-ASSY, REAR CLUTCH	2A2
PISTON SUB-ASSY, W/PIN	1A2
PISTON, ACCUMULATOR, NO.2	2B3
PISTON, BRAKE, NO.1	2D2
PISTON, C-1 ACCUMULATOR	2B3
PISTON, C-2 ACCUMULATOR	2C3
PISTON, FRONT DISC BRAKE	2H8
PISTON, OVERDRIVE BRAKE	2L1
PISTON, OVERDRIVE BRAKE ACCUMULATOR	2M2
PISTON, 1ST & REVERSE BRAKE	2F2
PLATE & RETAINER SUB-ASSY, BOOSTER	2G8
PLATE & SEAL SUB-ASSY, BOOSTER	2G8
PLATE ASSY, FRONT DOOR LOCK STRIKER	3M4
PLATE ASSY, REAR DOOR LOCK STRIKER	3G5
PLATE SUB-ASSY, BRAKE BACKING, REAR LH	2J8
PLATE SUB-ASSY, BRAKE BACKING, REAR RH	2J8
PLATE SUB-ASSY, COMBINATION METER CIRCUIT, NO.1	3D9
PLATE SUB-ASSY, HORN BUTTON CONTACT, NO.1	2H7
PLATE SUB-ASSY, SHIFT LEVER	2A1
PLATE SUB-ASSY, VALVE	3B12
PLATE, AIR CLEANER CAUTION (FOR ENGINE MODEL)	1A4
PLATE, AUTOMATIC TRANSMISSION CAUTION	3M6
PLATE, BACK DOOR NAME, NO.2	3C7
PLATE, BATTERY	3K8
PLATE, BATTERY CAUTION	3K8
PLATE, BOOSTER CENTER	2G8
PLATE, BOOSTER DIAPHRAGM	2G8
PLATE, BRAKE	2D2
PLATE, BRAKE (FOR OVERDRIVE)	2M1
PLATE, BRAKE (FOR 1ST & REVERSE BRAKE)	2F2
PLATE, BRAKE CUSHION	2F2
PLATE, CAMSHAFT THRUST	1C2
PLATE, CAUTION	2F5
PLATE, CAUTION (FOR FUSE)	3H9
PLATE, CAUTION, NO.2	3M11
PLATE, CLUTCH (FOR OVERDRIVE DIRECT CLUTCH)	2M1
PLATE, CLUTCH CUSHION	2B2
PLATE, CONTROL POSITION INDICATOR	2B1
PLATE, DECK BOARD	3G4
PLATE, DISTANCE (FOR FRONT)	2I9
PLATE, EMISSION CONTROL INFORMATION	1A4
PLATE, ENGINE NAME, NO.2	1A4
PLATE, ENGINE SERVICE COVER CATCH	3K2
PLATE, ENGINE VACUUM HOSE INFORMATION	1A7
PLATE, FRONT CLUTCH	2B2
PLATE, FRONT CLUTCH ACCUMULATOR	2M2
PLATE, FRONT DOOR REGULATOR INSIDE HANDLE	3A5
PLATE, FRONT DOOR SCUFF, LH	3B3
PLATE, FRONT DOOR SCUFF, RH	3B3
PLATE, FRONT END	1J1

MARK & ABBREVIATION LIST

M13

MARK.ABBREVIATION	DEFINITION
TINTED TEMPERED	TINTED TEMPERED
TL	TINTED LAMINATED
TMC	TOYOTA MOTOR CORPORATION
TOKAI RIKA	MANUFACTURER
TOKIKO	MANUFACTURER
TOOL	TOOL
TOSHIBA	MANUFACTURER
TOUGO	MANUFACTURER
TOYO	MANUFACTURER
TOYODA GOSEI	MANUFACTURER
TOYODA KOUKI	MANUFACTURER
TRIM	TRIM
TT	TINTED TEMPERED
TURBO	TURBO
TVSV	THERMOSTATIC VACUUM SWITCHING VALVE
TVTV	THERMOSTATIC VACUUM TRANSMITTING VALVE
TWIN	TWIN
TYPE	TYPE
TZT	TINTED ZONE TEMPERED
U/S	UNDERSIZE
UNITED KINGDOM	UNITED KINGDOM
UP TO	UP TO
UPR	UPPER
URETHANE	URETHANE
V=	VOLTS
VACUUM	VACUUM
VCV	VACUUM CONTROL VALVE
VENEZUELA	VENEZUELA
VENTILATION	VENTILATION
VERTICAL	VERTICAL
VICTORIA	VICTORIA
VL	VINYL LEATHERETTE
VSV	VACUUM SWITCHING VALVE
VTV	VACUUM TRANSMITTING VALVE
W(.....)	WITH .....
W/...	WITH ...
W/C	WHEEL CYLINDER
W/O ...	WITHOUT ...
W/O(.....)	WITHOUT .....
W/T	WITH TUBE
W=	WATTS
WALK-IN	WALK-IN
WARNING	WARNING
WATER OUTLET	WATER OUTLET

MARK.ABBREVIATION	DEFINITION
WAX	WAX TYPE (OPENING TEMPERATURE - FULLY OPEN TEMPERATURE)
WD	WIRE DIAMETER
WEST GERMANY	WEST GERMANY
WHITE	WHITE
WINDOW	WINDOW
WINE	WINE
WIPER	WIPER
WSW	WHITE SIDE WALL TIRE
YAZAKI	MANUFACTURER
YELLOW	YELLOW
YOKOHAMA	MANUFACTURER
YUASA	MANUFACTURER
ZT	ZONE TEMPERED
1ST	FIRST
2ND	SECOND
2WD	2-WHEL DRIVE
3RD	THIRD
4TH	FOURTH
4WD	4-WHELL DRIVE
5TH	FIFTH

FIGURE NUMBER INDEX

M16

LOCATION	FIG. No.	SUMMARY
		BODY GROUP
3A1	51–51	FRAME
3C1	51–52	SUSPENSION CROSSMEMBER & UNDER COVER
3D1	51–53	SPARE WHEEL CARRIER
3E1	52–51	CAB MOUNTING & BODY MOUNTING
3G1	52–52	FRONT BUMPER & BUMPER STAY
3H1	52–53	REAR BUMPER & BUMPER STAY
3I1	53–51	RADIATOR GRILLE
3J1	53–53	HOOD & FRONT FENDER
3L1	53–54	HOOD LOCK & HINGE
3M1	53–55	FRONT FENDER APRON & DASH PANEL
3B2	55–51	INSTRUMENT PANEL & GLOVE COMPARTMENT
3F2	55–53	COWL PANEL & WINDSHIELD GLASS
3H2	57–51	FLOOR MEMBER
3I2	58–51	FRONT FLOOR PANEL & FRONT FLOOR MEMBER
3L2	58–52	REAR FLOOR PANEL & REAR FLOOR MEMBER
3A3	58–53	FLOOR INSULATOR
3B3	58–54	FLOOR MAT & SILENCER PAD
3D3	58–55	CONSOLE BOX & BRACKET
3G3	61–51	SIDE MEMBER
3K3	61–52	SIDE WINDOW
3L3	61–53	ROOF PANEL & BACK PANEL
3A4	61–55	REAR VENTILATOR & ROOF VENTILATOR
3B4	64–51	INSIDE TRIM BOARD
3E4	64–52	ROOF HEADLINING & SILENCER PAD
3G4	64–55	DECK BOARD & DECK TRIM COVER
3H4	67–51	FRONT DOOR PANEL & GLASS
3L4	67–53	FRONT DOOR LOCK & HANDLE
3A5	67–54	FRONT DOOR WINDOW REGULATOR & HINGE
3C5	67–55	REAR DOOR PANEL & GLASS
3F5	67–56	REAR DOOR LOCK & HANDLE
3H5	67–57	REAR DOOR WINDOW REGULATOR & HINGE
3J5	67–61	BACK DOOR PANEL & GLASS
3L5	67–62	BACK DOOR LOCK & HINGE
3A6	67–65	LOCK CYLINDER SET
3C6	71–51	SEAT & SEAT TRACK
3H6	71–52	SEAT BELT
3J6	74–51	ARMREST & VISOR
3L6	74–54	BATTERY CARRIER
3M6	74–55	CAUTION PLATE
3A7	74–56	ASH RECEPTACLE
3B7	75–51	EMBLEM & NAME PLATE
3D7	75–52	MOULDING
3G7	75–54	TOOL BOX & LICENSE PLATE BRACKET
3H7	77–51	FUEL TANK & TUBE
3L7	78–51	ACCELERATOR LINK
		ELECTRICAL GROUP
3A8	81–01	HEADLAMP
3C8	81–03	FRONT TURN SIGNAL LAMP
3D8	81–04	FRONT CLEARANCE LAMP
3E8	81–05	FRONT MARKER LAMP
3F8	81–11	REAR COMBINATION LAMP
3H8	81–13	REAR LICENSE PLATE LAMP
3I8	81–14	REAR SIDE MARKER LAMP
3J8	81–21	INTERIOR LAMP
3K8	82–01	BATTERY & BATTERY CABLE
3L8	82–02	WIRING & CLAMP
3C9	83–01	METER
3E9	83–02	INDICATOR
3F9	84–01	SWITCH & RELAY
3L9	84–01	ELECTRONIC FUEL INJECTION SYSTEM
3A10	85–01	WINDSHIELD WIPER
3C10	85–02	REAR WIPER
3D10	85–03	WINDSHIELD WASHER
3F10	85–04	REAR WASHER
3G10	85–05	HEADLAMP CLEANER
3I10	85–11	DOOR MOTOR & DOOR SOLENOID
3J10	86–01	RADIO & TAPE PLAYER
3L10	86–02	SPEAKER
3A11	86–04	ANTENNA
3B11	86–11	HORN
3C11	87–01	MIRROR
3E11	87–12	HEATING & AIR CONDITIONING – HEATER UNIT & BLOWER
3G11	87–14	HEATING & AIR CONDITIONING – COOLER UNIT
3I11	87–15	HEATING & AIR CONDITIONING – CONTROL & AIR DUCT
3K11	87–16	HEATING & AIR CONDITIONING – WATER PIPING
3M11	87–18	HEATING & AIR CONDITIONING – COOLER PIPING
3A12	87–19	HEATING & AIR CONDITIONING – COMPRESSOR